

DTC	Description	Check Trans Light
U2105	Can Bus Error ECM	Yes
U2104	Can Bus Rest Counter Overrun	Yes
U1301	Serial Data Communication Link High (Class2)	No
U1300	Serial Data Communication Link Low (Class2)	No
U1096	Class 2 IPC Controller State of Health Failure	No*
U1064	Class 2 TBC Controller State of Health Failure	No*
U1041	Class 2 ABS Controller State of Health Failure	No*
U1016	Class 2 Powertrain Controller State of Health Failure	No*
U1000	Serial Data Communication Link Malfunction (Class2)	No*
P1892	Throttle Position Sensor Pulse Width Modulation (PWM) Signal High Input	No
P1891	Throttle Position Sensor Pulse Width Modulation (PWM) Signal Low Input	No
P1875	4WD Low Switch Circuit	Yes
P1860	Torque Converter Clutch PWM Solenoid Circuit --Electrical	Yes
P1835	Kickdown Circuit	Yes
P1779	Engine Torque Delivered To ECM	Yes
P1760	TCM Supply Voltage	No
P1727	Shift Controlled E Clutch Engaged	No
P1726	Shift Solenoid D Controlled Clutch Engaged	No
P1724	Solenoid B Controlled Clutch Engaged	Yes
P1723	Solenoid A Controlled Clutch Engaged	Yes
P1721	Solenoid B Controlled Clutch Not Engaged	Yes
P1720	Solenoid A Controlled Clutch Not Engaged	Yes
P1718	Incorrect Neutral Gear Ratio	No
P1716	Transmission Pressure Switch Reverse Circuit High	no
P1714	Transmission Pressure Switch Reverse Circuit Stuck On	Yes
P1713	Transmission Pressure Switch Reverse Circuit	Yes

P1712	Transmission Pressure Switch Solenoid E Circuit High	Yes
P1711	Transmission Pressure Switch Solenoid E Circuit Stuck Closed	Yes
P1710	Transmission Pressure Switch Solenoid E Circuit Stuck Open	Yes
P1709	Transmission Pressure Switch Solenoid E Circuit	Yes
P1688	Unmanaged Engine Torque Delivered to TCM	Yes
P0848	Transmission Pressure Switch Solenoid D Circuit	Yes
P0847	Transmission Pressure Switch Solenoid D Circuit	Yes
P0846	Transmission Pressure Switch Solenoid D Circuit	Yes
P0845	Transmission Pressure Switch Solenoid D Circuit	Yes
P0843	Transmission Pressure Switch Solenoid C Circuit High	Yes
P0842	Transmission Pressure Switch Solenoid C Circuit Stuck Closed	Yes
P0841	Transmission Pressure Switch Solenoid C Circuit Stuck Open	Yes
P0840	Transmission Pressure Switch Solenoid C Circuit	Yes
P0778	Pressure Control Solenoid B Electrical	Yes
P0773	Shift Solenoid E Electrical	Yes
P0768	Shift Solenoid D Electrical	Yes
P0763	Shift Solenoid C Electrical	Yes
P0748	Pressure Control Solenoid A Electrical	Yes
P0742	Torque Converter Clutch System Stuck On	Yes
P0741	Torque Converter Clutch System Stuck Off	Yes
P0736	Incorrect Reverse Ratio	Yes
P0735	Incorrect 5th Gear Ratio	Yes
P0734	Incorrect 4th Gear Ratio	Yes
P0733	Incorrect 3rd Gear Ratio	Yes
P0732	Incorrect 2nd Gear Ratio	Yes
P0731	Incorrect 1st Gear Ratio	Yes
P0727	Engine Speed Sensor Circuit No Signal	Yes
P0726	Engine Speed Input Circuit Performance	Yes
P0722	Output Speed Sensor Circuit No Signal	Yes
P0721	Output Speed Sensor Circuit Performance	Yes
P0717	Turbine Speed Sensor Circuit No Signal	Yes
P0716	Turbine Speed Sensor Circuit Performance	Yes
P0713	Transmission Fluid Temperature Sensor Circuit Low Input (Low Temperature)	Yes
P0712	Transmission Fluid Temperature Sensor Circuit Low Input (High Temperature)	Yes
P0711	Transmission Fluid Temperature Sensor Circuit Performance	Yes

P0710	Transmission Fluid Temperature Sensor Malfunction	No
P0708	Transmission Range Sensor Circuit High Input	Yes
P0706	Transmission Range Sensor Circuit Performance	Yes
P0705	Transmission Range Sensor Circuit (PRNDL Input)	No
P0703	Brake Switch Circuit	No
P0701	Transmission Control System Performance	No
P0606	Controller Internal Performance	Yes
P0602	TCM Not Programmed	Yes
P0563	System Voltage High	Yes
P0562	System Voltage Low	Yes
P0218	Transmission Fluid Over Temperature	No
P0123	Pedal Position Sensor Circuit High Voltage	No
P0122	Pedal Position Sensor Circuit Low Voltage	No
P0121	Pedal Position Sensor Performance Problem	No