

T3571

**S/N 362811001
& above**


T3571L

**S/N 362911001
& above**



Bobcat®

SERVICE MANUAL

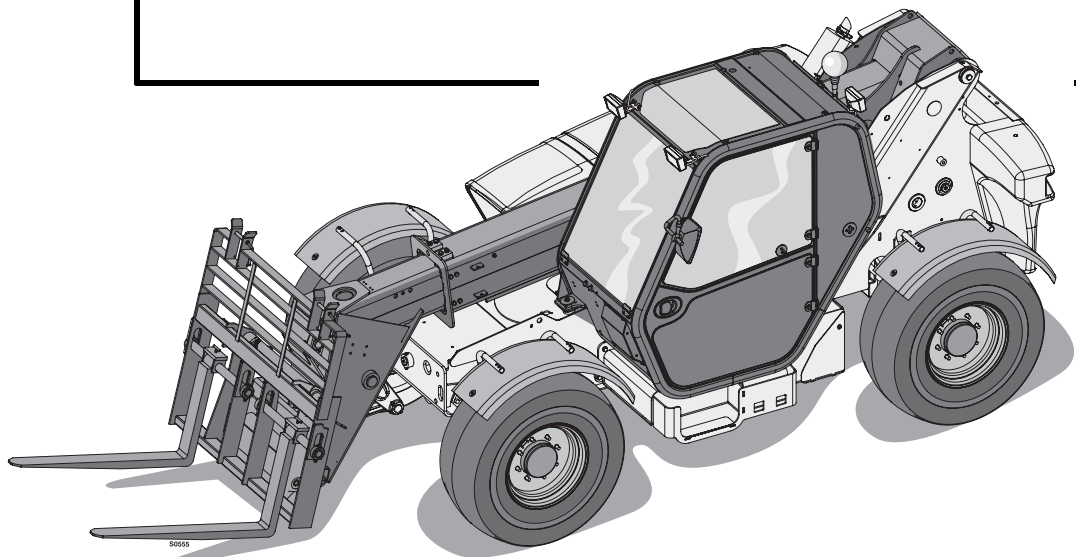



Bobcat®

MAINTENANCE SAFETY




WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903

CORRECT

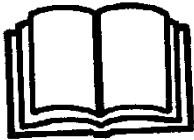


B-10731a

- ⚠ Never service the Bobcat Telescopic Handler without instructions.



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.


CORRECT

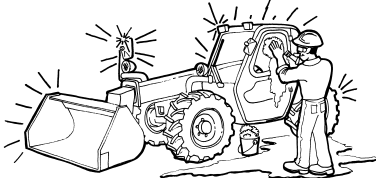

B-16082

- ⚠ Cleaning and maintenance are required daily.


WRONG

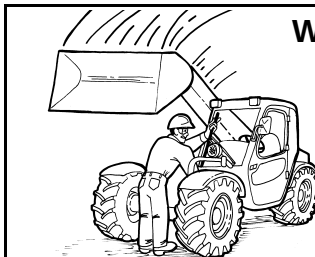

B-16080

- ⚠ Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause boom to drop. Do not go under boom when raised unless supported by an approved boom stop. Replace if damaged.


WRONG

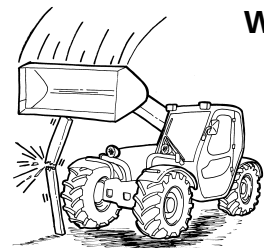

B-16079

- ⚠ Never work on Telescopic Handler with boom up unless boom is held by an approved boom stop. Replace if damaged.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.


WRONG

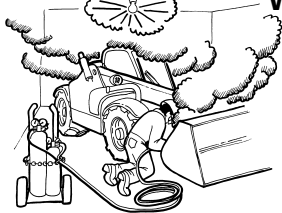

B-16081

- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- ⚠ Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

WRONG

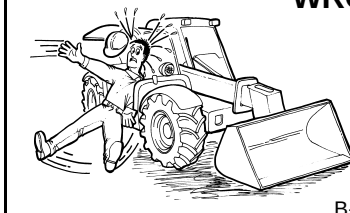

B-16078

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.

WRONG



B-6589

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use **genuine Bobcat replacement parts**.

MSW12-0805



Bobcat®

ALPHABETICAL INDEX

ACCUMULATOR.....	20-210	EVAPORATOR/BLOWER UNIT	80-150
AIR CLEANER	70-40	EXPANSION VALVE	80-160
AIR CLEANER SERVICE	10-60	EXTENSION CYLINDER	20-40
AIR CONDITIONING SERVICE	80-90		
AIR CONDITIONING SYSTEM FLOW	80-10	FAN MOTOR	20-140
ALTERNATOR.....	60-30	FENDER	50-120
OPTIONAL APPROVED BOOM STOP	10-150	FLOW CONTROL VALVE	20-172
AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) .	40-20	FLYWHEEL AND HOUSING.....	70-90
AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above).....	40-22	FRAME LEVELING CYLINDER	20-100
AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (Cont'd) .	40-21	FRONT AXLE WITHOUT FRAME LEVELING (For S/N 362811001 - 362812000)	40-30
AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above).....	40-23	FRONT AXLE WITH FRAME LEVELING (For S/N 362911001 - 362912000)	40-31
AXLE PIVOT FRAME (Only For S/N 362811001 - 362812000, S/N 362911001 - 362912000).....	40-32	FRONT AXLE (For S/N 362812001 and Above, S/N 362912001 and Above).....	40-33
AXLE TOE-IN (For S/N 362811001 - 362812000, S/N 362911001 - 362912000)	40-40	FRONT WIPER MOTOR	60-110
AXLE TOE-IN (For S/N 362812001 and Above, S/N 362912001 and Above).....	40-41	FUEL SYSTEM	10-80
AXLES (FRONT AND REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000).....	10-110	FUEL TANK.....	50-80
AXLES (FRONT AND REAR) (For S/N 362812001 and Above, S/N 362912001 and Above).....	10-111		
		GEAR PUMP.....	20-130
BASIC TROUBLESHOOTING	80-50	GENERAL AIR CONDITIONING SERVICE GUIDELINES	80-60
BATTERY	60-20		
BOOM ASSEMBLY	50-30	HEATER ASSEMBLY	80-170
BRAKE LIGHT SWITCH	60-100	HYDRAULIC CONNECTION SPECIFICATIONSSPEC-50	
BRAKE VALVE.....	20-120	HYDRAULIC CONTROL VALVE.....	20-170
BUCKET POSITIONING CYLINDER.....	20-30	HYDRAULIC/HYDROSTATIC FLUID SPECIFICATIONS SPEC-60	
		HYDRAULIC/HYDROSTATIC SYSTEM	10-100
COMPONENTS	80-20	HYDRAULIC RESERVOIR	20-150
COMPRESSOR	80-110	HYDRAULIC SYSTEM INFORMATION.....	20-10
CONDENSER	80-120	HYDROSTATIC DRIVE MOTOR.....	30-30
CONVERSIONS.....	SPEC-70	HYDROSTATIC PUMP.....	30-40
		HYDROSTATIC SYSTEM INFORMATION	30-10
DASH COVER/STEERING COLUMN COVER.....	50-130		
DRIVE BOX (For S/N 362811001 - 362812000, S/N 362911001 - 362912000)	20-70		
DRIVE BOX (For S/N 362812001 and Above, S/N 362912001 and Above).....	20-71		
DRIVESHAFT	40-01		
ELECTRICAL SYSTEM INFORMATION	60-10		
ENGINE AND ENGINE MOUNTS	70-60		
ENGINE COMPONENTS AND TESTING	70-70		
ENGINE COOLING SYSTEM	10-70		
ENGINE COVER.....	10-160		
ENGINE COVER.....	50-70		
ENGINE/HYDROSTAT ASSEMBLY.....	70-80		
ENGINE LUBRICATION SYSTEM.....	10-90		
ENGINE SPECIFICATIONS.....	SPEC-20		
ENGINE SPEED CONTROL.....	70-20		
ENGINE TIMING.....	70-71		

ALPHABETICAL INDEX (CONT'D)

INCHING SWITCH	60-150	SAFETY	80-30
INNER BOOM.....	50-40	SERVICE BRAKE (For S/N 362811001 - 362812000, S/ N 362911001 - 362912000).....	40-80
INSTRUMENT PANEL.....	60-80	SERVICE BRAKE (For S/N 362812001 and Above, S/N 362912001 and Above)	40-81
JOYSTICK	20-180	SERVICE SCHEDULE	10-50
JOYSTICK PANEL.....	50-140	STARTER	60-40
LIFT CYLINDER	20-20	STEERING ANGLE ADJUSTMENT (For S/N 362811001 - 362812000, S/N 362911001 - 362912000)	40-60
LIFTING AND BLOCKING THE Telescopic Handler ...	10-10	STEERING ANGLE ADJUSTMENT (For S/N 362812001 and Above, S/N 362912001 and Above).....	40-61
LIGHTS.....	60-60	STEERING CYLINDER (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000)	20-60
LUBRICATION (For S/N 362812001 and Above, S/N 362912001 and Above)	10-121	STEERING CYLINDER (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above).....	20-61
LUBRICATION (For S/N 362811001 - 362812000, S/N 362911001 - 362912000).....	10-120	STEERING CYLINDER (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000)	20-62
LONGITUDINAL STABILITY INDICATOR CALIBRATION.....	60-180	STEERING CYLINDER (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above).....	20-63
MACHINE TORQUE SPECIFICATIONS	SPEC-30	STEERING MODE VALVE BLOCK.....	20-110
MAIN RELIEF VALVE	20-80	STEERING VALVE	20-160
MUFFLER.....	70-30	SWITCH PANEL.....	60-90
OIL COOLER.....	30-20	SYSTEM CHARGING AND RECLAMATION.....	80-100
OIL COOLER/RADIATOR.....	70-50	SYSTEM TROUBLESHOOTING CHART	80-70
OPERATOR CAB.....	10-20	TEMPERATURE/PRESSURE.....	80-80
OPERATOR CAB.....	50-10	TIRE MAINTENANCE	10-130
OPERATOR SEAT	50-20	TILT CYLINDER	20-50
PARKING BRAKE.....	20-190	TOP WIPER MOTOR.....	60-120
PARKING BRAKE (For S/N 362811001 - 362812000, S/ N 362911001 - 362912000)	40-50	TORQUE SPECIFICATIONS FOR BOLTS	SPEC-40
PARKING BRAKE (For S/N 362812001 and Above, S/N 362912001 and Above).....	40-51	Optional TOW VALVE.....	20-220
PEDAL ASSEMBLY	60-140	TOWING THE Telescopic Handler	10-40
PIVOT LINK	50-120	TRANSPORTING THE Telescopic Handler	10-30
PORT RELIEF VALVES.....	20-171	TRAVEL/SIGNAL LEVER.....	60-70
PILOT PRESSURE LOCK OUT VALVE	20-200	AXLES TROUBLESHOOTING.....	40-10
PRESSURE SWITCH.....	80-140	ENGINE TROUBLESHOOTING	70-10
QUICK TACH	50-90	Telescopic Handler SPECIFICATIONS	SPEC-10
QUICK TACH CYLINDER.....	20-90	WEAR PADS (FRONT)	50-50
REAR AXLE (For S/N 362811001 - 362812000, S/N 362911001 - 362912000).....	40-90	WEAR PADS (REAR).....	50-60
REAR AXLE (For S/N 362812001 and Above, S/N 362912001 and Above).....	40-91		
REAR WEIGHTS	50-100		
REAR WIPER MOTOR.....	60-130		
RECEIVER/DRIER	80-130		
RECONDITIONING THE ENGINE	70-100		
REGULAR MAINTENANCE	80-40		

CONTENTS

FOREWORD	II
SAFETY INSTRUCTIONS	V
SERIAL NUMBER LOCATIONS.....	VII
DELIVERY REPORT	VII
IDENTIFICATION OF THE TELESCOPIC HANDLER.....	VIII
SAFETY AND MAINTENANCE	10-01
HYDRAULIC SYSTEM.....	20-01
HYDROSTATIC SYSTEM.....	30-01
DRIVE SYSTEM.....	40-01
MAIN FRAME.....	50-01
ELECTRICAL SYSTEM AND ANALYSIS.....	60-01
ENGINE SERVICE.....	70-01
HEATING, VENTILATION, AIR CONDITIONING	80-01
SPECIFICATIONS	SPEC-01

**SAFETY &
MAINTENANCE**

**HYDRAULIC
SYSTEM**

**HYDROSTATIC
SYSTEM**

**DRIVE
SYSTEM**

MAIN FRAME

**ELECTRICAL
SYSTEM &
ANALYSIS**

**ENGINE
SERVICE**

HVAC

SPECIFICATIO

FOREWORD


This manual is for the Bobcat Telescopic Handler mechanic. It provides necessary servicing and adjustment procedures for the Bobcat Telescopic Handler and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.

A general inspection of the following items must be made after the Telescopic Handler has had service or repair:

1. Check that ROPS/FOPS (including right side window) is in good condition and is not modified.




9. Enclosure door latches must open and close freely.

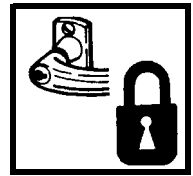


2. Check that ROPS mounting hardware is tightened and is Bobcat approved.




10. Attachment locking pins must function correctly and be in good condition.

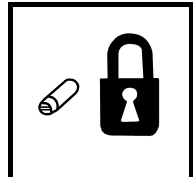


3. The seat belt must be correctly installed, functional and in good condition.

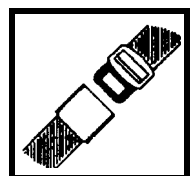


11. Safety treads must be in good condition.

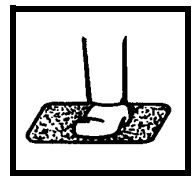

4. Check boom support device, replace if damaged.

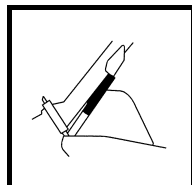


12. Check for correct function of indicator lamps and gauges.

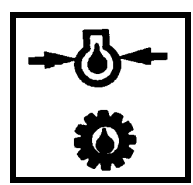


5. Machine signs must be legible and in the correct location.




13. Check hydraulic fluid level, engine oil level and fuel supply.

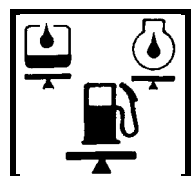

6. Check tires for wear and pressure. Use only approved tires.

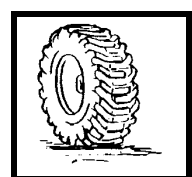

14. Inspect for fuel, oil or hydraulic fluid leaks.

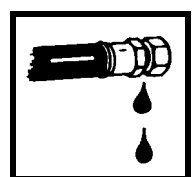


7. Check for correct function of the work lights.




15. Lubricate the Telescopic Handler.




8. The parking brake must function correctly.

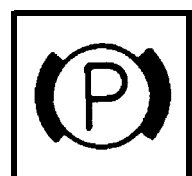


16. Check the condition of the battery and cables.

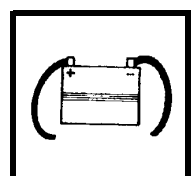


17. Inspect the air cleaner for damage or leaks. Check the condition of the element.

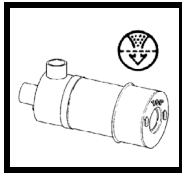

20. Operate the Telescopic Handler and check all functions.

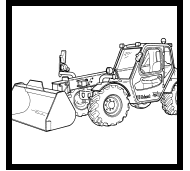


18. Check the electrical charging system.

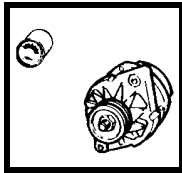

21. Check for any field modification not completed.



19. Inspect for loose or broken parts or connections.

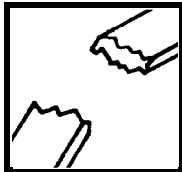

22. Recommend to the owner that all necessary corrections be made before the machine is returned to service.





Bobcat®

SAFETY INSTRUCTIONS

Before Operation

Carefully follow the operating and maintenance instructions in this manual.

The Bobcat Telescopic Handler is highly maneuverable and compact. It is rugged and useful under a wide variety of conditions. This presents an operator with hazards associated with off highway, rough terrain applications, common with Bobcat Telescopic Handler usage.

The Bobcat Telescopic Handler has an internal combustion engine with resultant heat and exhaust. All exhaust gasses can kill or cause illness so use the Telescopic Handler with adequate ventilation.

The dealer explains the capabilities and restrictions of the Bobcat Telescopic Handler and attachment for each application. The dealer demonstrates the safe operation according to Bobcat instructional materials, which are also available to operators. The dealer can also identify unsafe modifications or use of unapproved attachments. The attachments and buckets are designed for a Rated Load Capacity. They are designed for secure fastening to the Bobcat Telescopic Handler. The user must check with the dealer, or Bobcat literature, to determine safe loads of materials of specified densities for the machine - attachment combination.

The following publications and training materials provide information on the safe use and maintenance of the Bobcat machine and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine and attachment is in safe operating condition.
- The Operation & Maintenance Manual delivered with the machine or attachment gives operating information as well as routine maintenance and service procedures. It is a part of the machine and can be stored in a container provided on the machine. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat dealer.
- Machine signs (decals) instruct on the safe operation and care of your Bobcat machine or attachment. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat dealer.
- Load Capacity Charts for each attachment are provided in the operator area. These charts indicate the Rated Load Capacity for each attachment at specified boom heights and extensions. Replacement or additional charts for new attachments are available from your Bobcat dealer.

- An Operator's Handbook is fastened to the operator cab of the Telescopic Handler. It's brief instructions are convenient to the operator. The Handbook is available from your dealer in an English edition or one of many other languages. See your Bobcat dealer for more information on translated versions.
- The AEM Safety Manual delivered with the machine gives general safety information.
- The "Safety Training for Operators of the Bobcat Telescopic Handler" course is available through your Bobcat dealer. This course is intended to provide rules and practices of correct operation of the Bobcat Telescopic Handler. The course is available in English and Spanish versions.
- See the PUBLICATIONS AND TRAINING RESOURCES Page in this manual or your Bobcat dealer for Service and Parts Manuals, printed materials, videos, or training courses available. Also check the Bobcat web sites **www.training.bobcat.com** or **www.bobcat.com**

The dealer and owner/operator review the recommended uses of the product when delivered. If the owner/operator will be using the machine for a different application(s) he or she must ask the dealer for recommendations on the new use.

SAFETY INSTRUCTIONS (CONT'D)

Safe Operation Is The Operator's Responsibility



Safety Alert Symbol

This symbol with a warning statement means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.



WARNING

Operator must have instructions before running the machine. Untrained operators can cause injury or death.

W-2001-1285

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284



WARNING

Warnings on the machine and in the manuals are for your safety. Failure to obey warnings can cause injury or death.

W-2044-1285

The Bobcat Telescopic Handler and attachment must be in good operating condition before use.

Check all of the items on the Bobcat Service Schedule Decal under the 8-10 hour column or as shown in the Operation & Maintenance Manual.

Safe Operation Needs A Qualified Operator

For an operator to be qualified, he or she must not use drugs or alcoholic drinks which impair alertness or coordination while working. An operator who is taking prescription drugs must get medical advice to determine if he or she can safely operate a machine.

A Qualified Operator Must Do The Following:

Understand the Written Instructions, Rules and Regulations

- The written instructions from Bobcat Company include the Delivery Report, Operation & Maintenance Manual, Operator's Handbook, Safety Manual and machine signs (decals).
- Check the rules and regulations at your location. The rules may include an employer's work safety requirements. Regulations may apply to local driving requirements or use of a Slow Moving Vehicle (SMV) emblem. Regulations may identify a hazard such as a utility line.

Have Training with Actual Operation

- OSHA Rule 29 CFR 1910.178 (I) requires employers to train employees operating Rough Terrain Forklifts.
- Operator training must consist of a demonstration and verbal instruction. This training is given by your Bobcat dealer before the product is delivered.
- The new operator must start in an area without bystanders or structures and use all the controls until he or she can operate the machine and attachment safely under all conditions of the work area. Always fasten seat belt before operating.
- Operator Training Courses are available from your Bobcat dealer in English and Spanish. They provide information for safe and efficient equipment operation. Safety videos are also available.

Know the Work Conditions

- Know the weight of the materials being handled. Avoid exceeding the Rated Load Capacity of the machine (as indicated on the Load Capacity Charts). Material which is very dense will be heavier than the same volume of less dense material. Reduce the size of load if handling dense material.
- The operator must know any prohibited uses or work areas, for example, he or she needs to know about excessive slopes.
- Know the location of any underground lines. Call local utilities for more information on this.
- Wear tight fitting clothing. Always wear safety glasses when doing maintenance or service. Safety glasses, hearing protection or Front Window Guard are required for some work. See your Bobcat dealer about Bobcat Safety Equipment.

SERIAL NUMBER LOCATIONS

Always use the serial number of the Telescopic Handler when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

Telescopic Handler Serial Number


Figure 1



The front, on the right side of the chassis [Figure 1].

Engine Serial Number

Figure 2

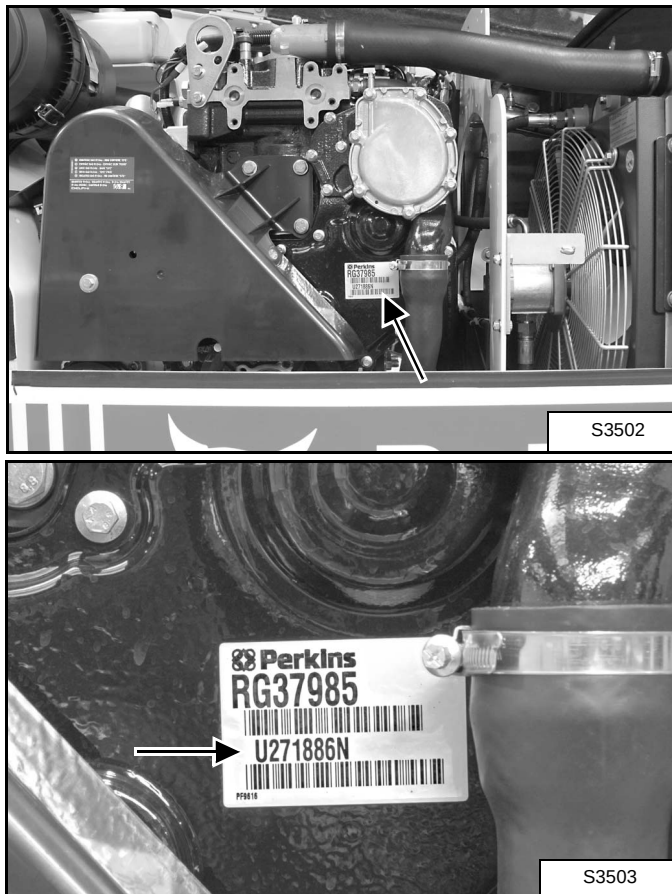

The engine serial number can be found on the cylinder block [Figure 2] in front of you when opening the engine cover. Always use the full number when ordering replacement parts.

Other Serial Numbers

Some components may also have serial numbers. Always use these serial numbers when requesting parts.

Delivery Report

The Delivery Report must be filled out by the dealer and signed by the owner or operator when the Telescopic Handler is delivered. An explanation of the form must be given to the owner. Make sure it is filled out completely [Figure 3].


Figure 3

Identification of the telescopic handler

Reference	Designation
1	Telescopic boom
2	Boom
3	Fuel tank
4	Mirror
5	Operator Cab
6	Battery compartment
7	Boom stop (opt.)
8	Engine exhaust
9	Lights
10	Working lights
11	Engine cover
12	Rotating beacon
13	Pallet forks

For the T3571 and T3571L telescopic handlers [Figure 4].

Figure 4

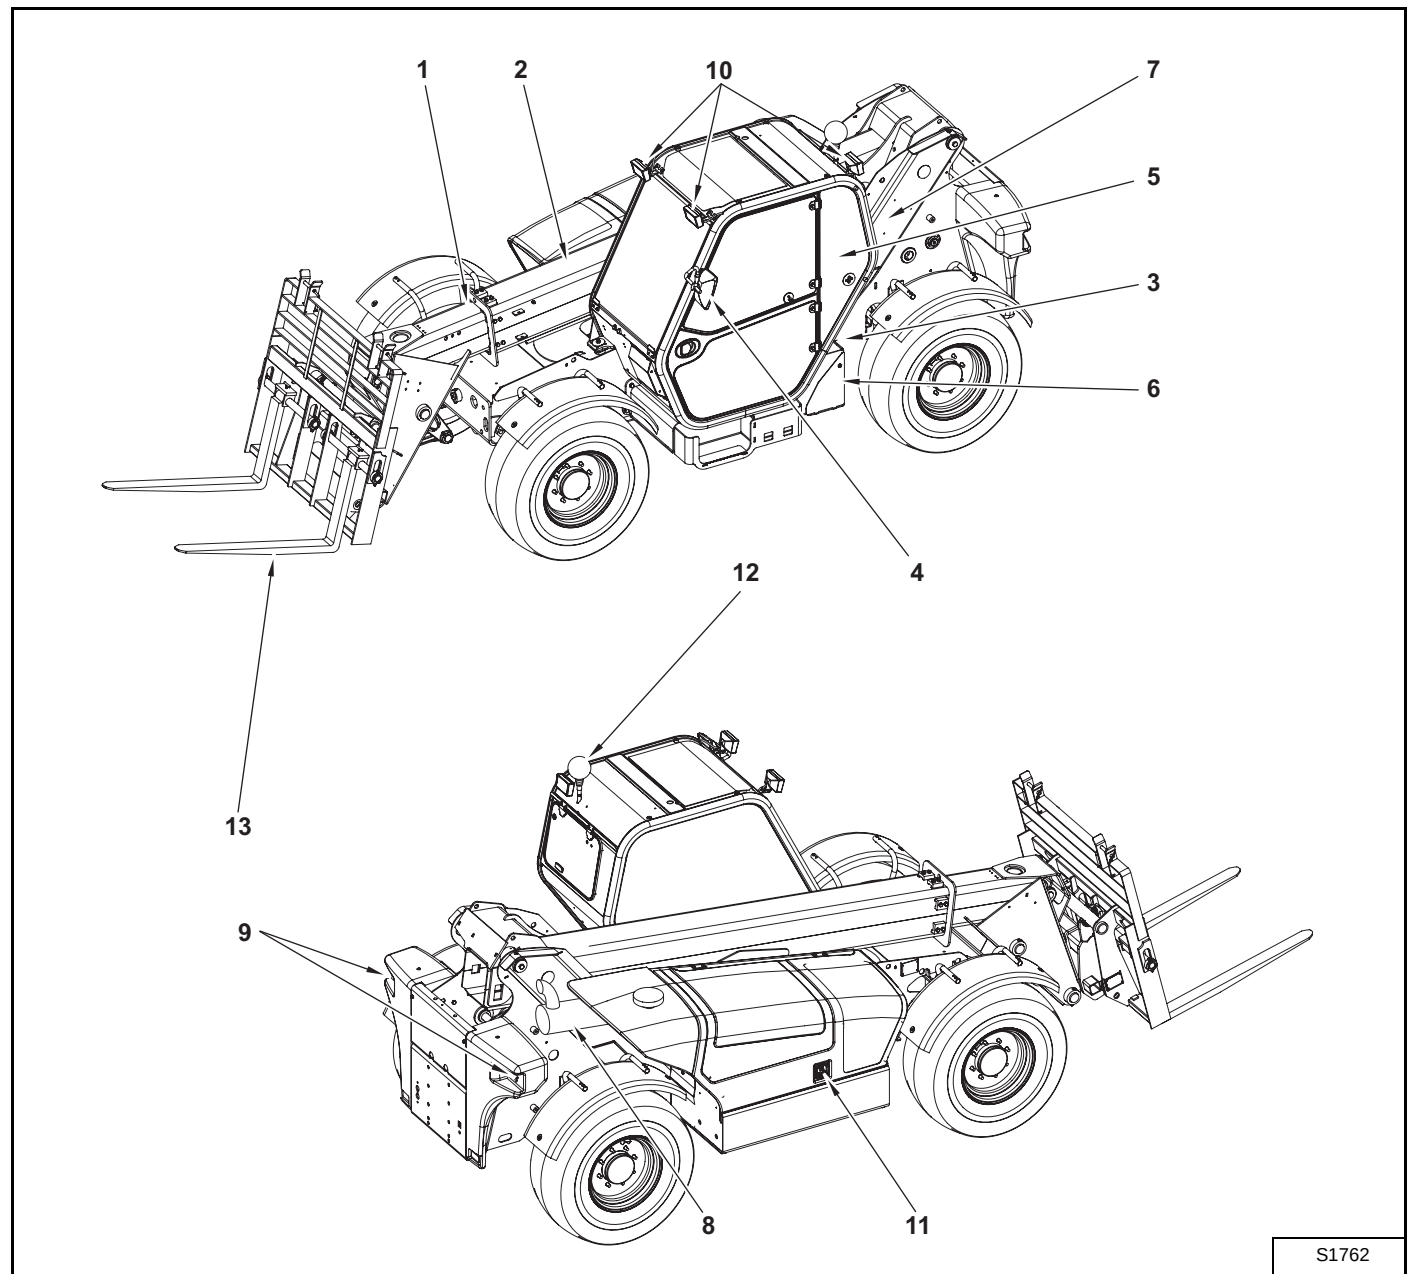

S1762

SAFETY AND MAINTENANCE

AIR CLEANER SERVICE	10-60-1
Replacing Filter Element	10-60-1
OPTIONAL APPROVED BOOM STOP	10-150-1
Installing The Approved Boom Stop	10-150-1
Removing The Approved Boom Stop	10-150-1
AXLES (FRONT AND REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000)	10-110-1
Checking Oil Level (Front Differential)	10-110-2
Checking Oil Level (Planetary Carrier)	10-110-1
Checking Oil Level (Rear Differential)	10-110-2
Draining Oil (Front Differential)	10-110-2
Draining Oil (Planetary Carrier)	10-110-1
Draining Oil (Rear Differential)	10-110-2
AXLES (FRONT AND REAR) (For S/N 362812001 and Above, S/N 362912001 and Above)	10-111-1
Checking Oil Level (Front Differential)	10-111-2
Checking Oil Level (Planetary Carrier)	10-111-1
Checking Oil Level (Rear Differential)	10-111-2
Draining Oil (Front Differential)	10-111-3
Draining Oil (Planetary Carrier)	10-111-1
Draining Oil (Rear Differential)	10-111-2
ENGINE COOLING SYSTEM	10-70-1
Checking The Coolant Level	10-70-1
Cleaning The Cooling System	10-70-1
Replacing The Coolant	10-70-2
ENGINE COVER	10-160-1
Opening And Closing The Engine Cover	10-160-1
ENGINE LUBRICATION SYSTEM	10-90-1
Checking Engine Oil	10-90-1
Oil Chart	10-90-1
Replacing Oil And Filter	10-90-2
FUEL SYSTEM	10-80-1
Filling The Fuel Tank	10-80-1
Fuel Filter	10-80-1
Fuel Specifications	10-80-1

Continued On Next Page

SAFETY AND MAINTENANCE (CONT'D)

HYDRAULIC/HYDROSTATIC SYSTEM	10-100-1
Checking And Adding Fluid	10-100-1
Replacing Hydraulic Fluid	10-100-3
LIFTING AND BLOCKING THE TELESCOPIC HANDLER	10-10-1
Procedure	10-10-1
LUBRICATION (For S/N 362811001 - 362812000, S/N 362911001 - 362912000).....	10-120-1
Procedure	10-120-1
LUBRICATION (For S/N 362812001 and Above, S/N 362912001 and Above).....	10-121-1
Procedure	10-121-1
OPERATOR CAB	10-20-1
Cab Door	10-20-2
Cab Door Window	10-20-2
Emergency Exit	10-20-1
SERVICE SCHEDULE	10-50-1
TIRE MAINTENANCE.....	10-130-1
Tire Mounting	10-130-1
Tire Rotation	10-130-1
Wheel Nuts	10-130-1
TOWING THE Telescopic Handler	10-40-1
Preparing for towing	10-40-1
Disengaging the hydrostatic transmission.....	10-40-1
Releasing the handbrake (For S/N 362811001 - 362812000, S/N 362911001 - 368012000):	10-40-2
Releasing the handbrake (For S/N 362812001 and Above, S/N 362912001 and Above):	10-40-2
Towing the Telescopic Handler	10-40-3
TRANSPORTING THE Telescopic Handler	10-30-1
Procedure	10-30-1

LIFTING AND BLOCKING THE TELESCOPIC HANDLER

Procedure


Always park the machine on a level surface.

! WARNING

Put jackstands under the front and rear axle before running the engine for service. Failure to use jackstands can allow the machine to fall or move and cause injury or death.


W-2461-0303

Figure 10-10-1

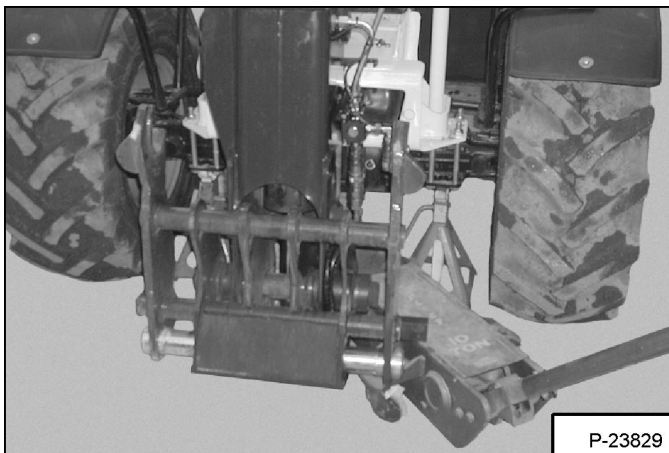

STOP the engine. Put the floor jack under the center of the front axle. Lift the Telescopic Handler and install jackstands [Figure 10-10-1].

Figure 10-10-2

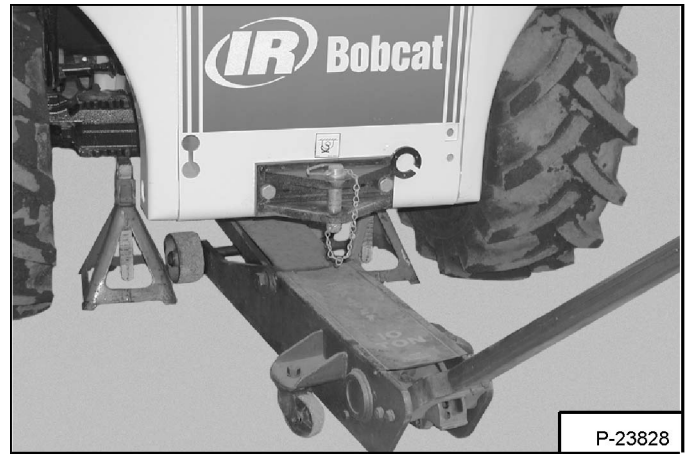


Put the floor jack under the center of the rear axle. Lift the Telescopic Handler and install jackstands [Figure 10-10-2].



Bobcat®

OPERATOR CAB

Figure 10-20-1

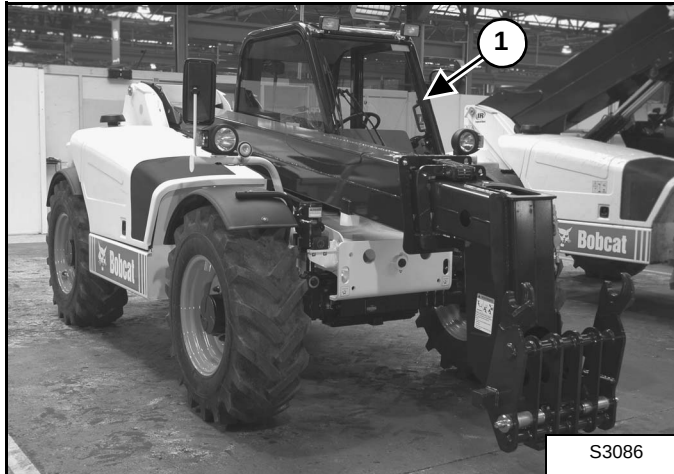

The Telescopic Handler has an operator cab (ROPS and FOPS) (Item 1) [Figure 10-20-1] to protect the operator from rollover and falling objects. Check with your dealer if the operator cab has been damaged. Never operate without right window. The seat belt must be worn for roll over protection.

ROPS/FOPS - Roll Over Protective Structure per SAE J1040 and ISO 3471, and Falling Object Protective Structure per SAE J1043 and ISO 3449 (FOPS Level II).



WARNING

Never modify operator cab by welding, grinding, drilling holes or adding attachments unless instructed to do so by Bobcat. Do not operate without right window. Changes to the cab can cause loss of operator protection from rollover and falling objects, and result in serious injury or death.

W-2396-1202

Emergency Exit

Figure 10-20-2



Turn the handle (Inset) [Figure 10-20-2] and push the rear window open. (Models with enclosed cab only.) Exit through the rear window opening [Figure 10-20-2].

OPERATOR CAB (CONT'D)

Cab Door

Figure 10-20-3


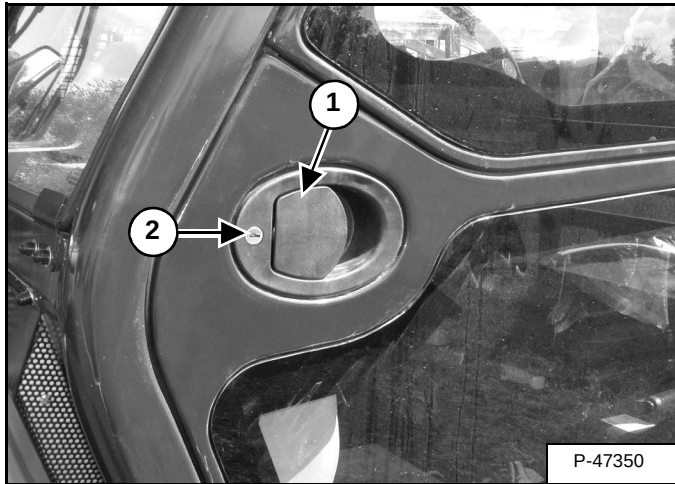


Figure 10-20-4

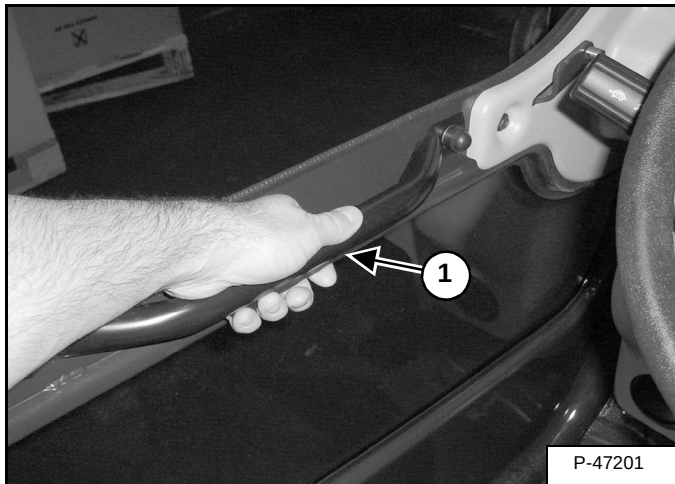


The cab door can be opened from the outside of the cab using the latch (Item 1) [Figure 10-20-3] and open from the inside of the cab when you squeeze the latch (Item 1) [Figure 10-20-4] (as shown).

The cab door can be locked (Item 2) [Figure 10-20-3] with the start key.


Cab Door Window

Figure 10-20-5

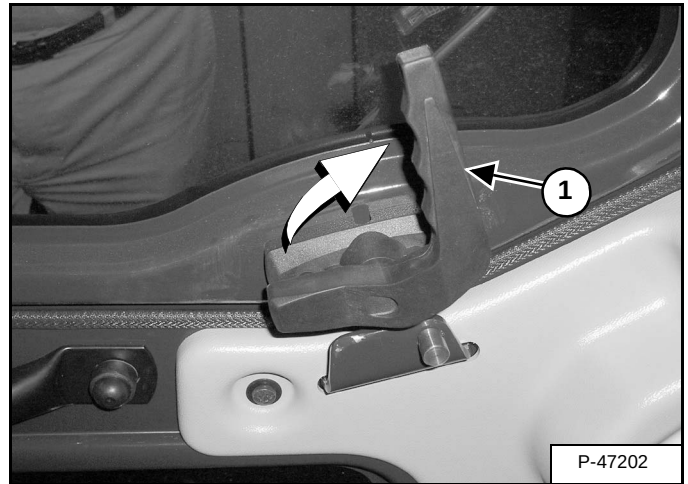

Turn the handle (Item 1) [Figure 10-20-5] (as shown). Push open the window fully until it latches against the cab.

Figure 10-20-6

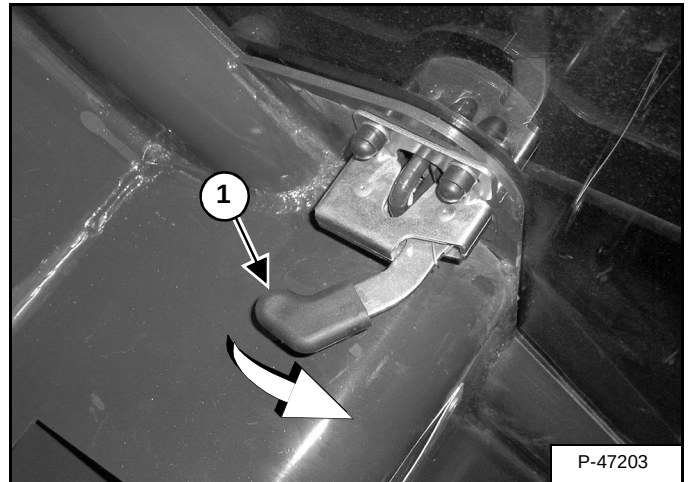


Pull the lever (Item 1) [Figure 10-20-6] inside the cab to disengage the latch and close the window.

TRANSPORTING THE Telescopic Handler

Procedure

Always drive the Telescopic Handler backwards (heavy end up) onto the transport vehicle.

Figure 10-30-1

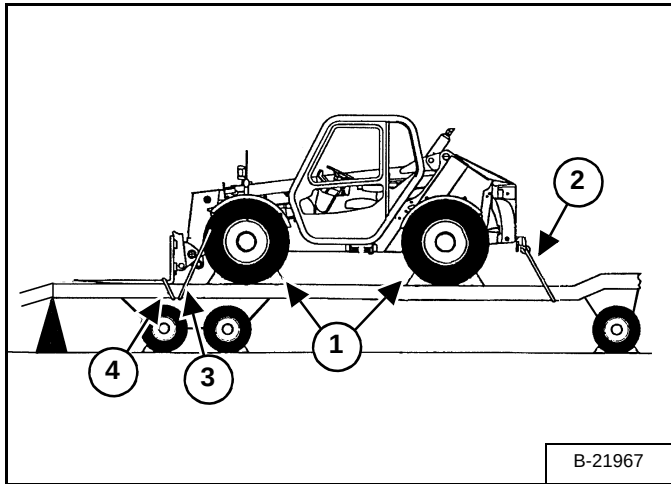

The rear of the trailer must be blocked or supported [Figure 10-30-1] when loading or unloading the Telescopic Handler to prevent the front end of the trailer from raising up.

Be sure the transport and towing vehicles are of adequate size and capacity. (See "Telescopic Handler SPECIFICATIONS" on page SPEC-10-1 for weight of the Telescopic Handler).

Fasten the Telescopic Handler to the transport vehicle to prevent it from moving during sudden stops or when going up or down slopes.

- Block the wheels (Item 1) [Figure 10-30-1].
- Fasten the machine frame to the transport vehicle (Items 2 & 3) [Figure 10-30-1].
- Attach the forks or bucket attachment to the transport vehicle (Item 4) [Figure 10-30-1].

WARNING

Adequately designed ramps of sufficient strength are needed to support the weight of the machine when loading onto a transport vehicle. Wood ramps can break and cause personal injury.

W-2058-0494



Bobcat®

TOWING THE TELESCOPIC HANDLER

Preparing for towing

The Telescopic Handler can be towed a short distance such as removing it from mud or loading onto a transport vehicle.

The machine must be prepared before towing.


WARNING

- Before towing, the machine must be immobilised using chocks in front of the wheels or any other means independent of the machine. Do not apply the handbrake.
- After this operation, the handbrake will not work and it will no longer be possible to lock the machine with the hydrostatic transmission.

Disengaging the hydrostatic transmission

It is impossible for oil to circulate in a hydrostatic transmission in a closed circuit when the machine is not running, this operation involves making oil circulation possible:


Figure 10-40-2

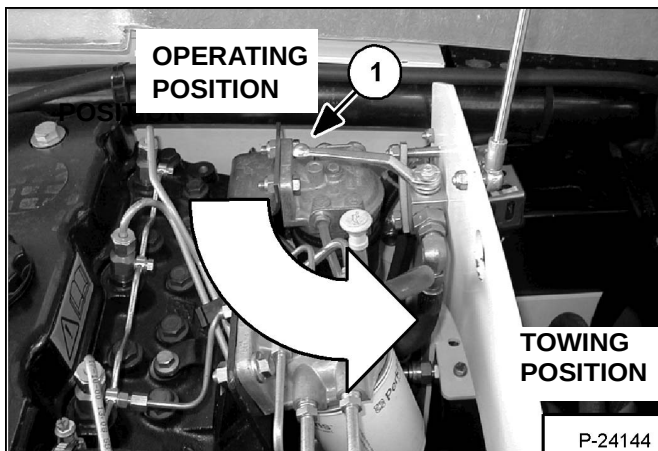

If the optional tow valve is installed, simply raise the engine cover and turn the valve counterclockwise 90° (Item 1) [Figure 10-40-2] to TOWING POSITION.

Follow the below procedure if the optional tow valve is not installed:

Figure 10-40-3

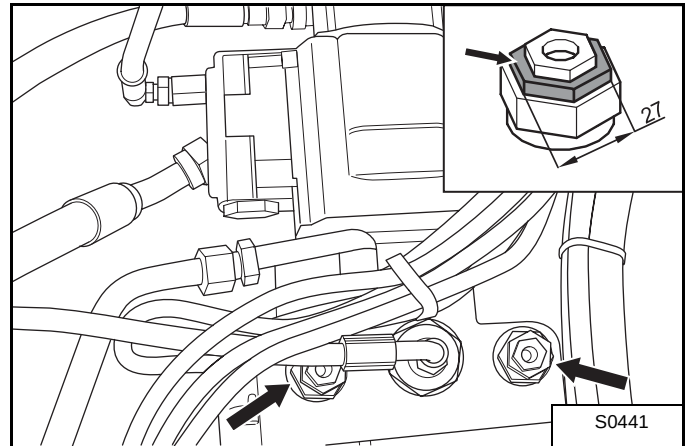

- Locate the two identical multi-function valves on the hydrostatic transmission pump [Figure 10-40-3]. Each valve has three 6-sided nuts of different sizes.
- Unscrew the middle screw of each valve 2.5 turns. This action will bypass the oil flow from the hydrostatic transmission.

TOWING THE TELESCOPIC HANDLER (CONT'D)

Releasing the handbrake (For S/N 362811001 - 362812000, S/N 362911001 - 368012000):

As the machine's handbrake is tightened by lack of pressure, this operation involves releasing the brake mechanically:

- There are three screws at each end of the central part of the front axle, equally distributed 120° from each other. These screws are driven into a counterbore. [Figure 10-40-4] shows the 3 screws of one of the two sides of the front axle.
[Figure 10-40-5] shows the position of the screw around the shaft.

Figure 10-40-4


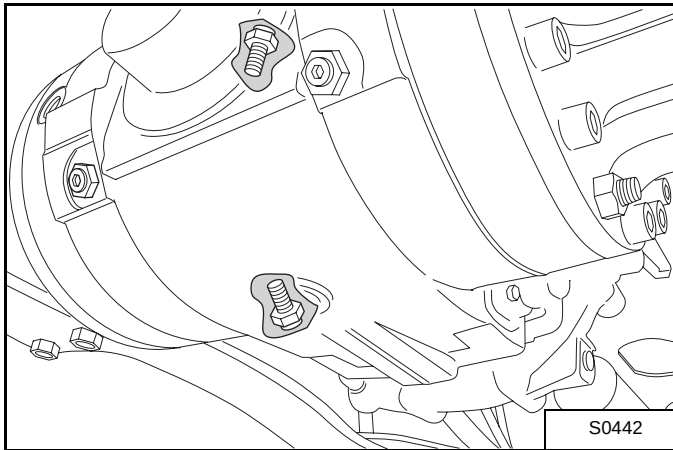


Figure 10-40-5

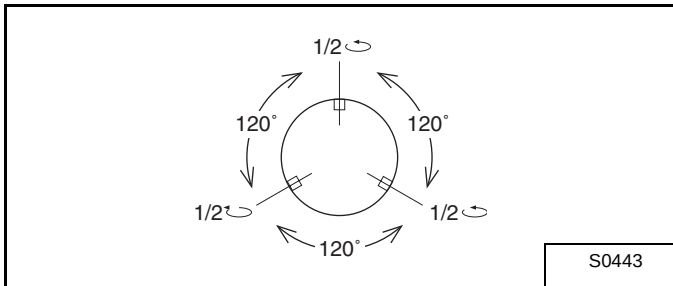

- The work will first be carried out on the three screws on one side then on the next three.
- Gradually screw (quarter turn by quarter turn) each of the three screws alternatively until they bite (2 - 2.5 turns)

The brakes are now released for towing the vehicle.

Releasing the handbrake (For S/N 362812001 and Above, S/N 362912001 and Above):

As the machine's brakes are tightened by lack of hydraulic pressure (= handbraked position), this operation involves releasing the brakes mechanically. Only the front axle has brakes.

The following procedure describes how to untighten the brakes.

- Release the handbrake. This will open the hydraulic circuit. It is not possible to manually release the brakes when the hydraulic circuit is closed.
- At each end of the central part of the front axle are two screws (see [Figure 10-40-6]). When screwed in, these screws will remove the spring pressure that block the brake disks.
[Figure 10-40-7] shows the function of such a screw inside the axle.
The work will first be carried out on the two screws on one side of the front axle then on the other side:
 - Loosen the locking nuts of the screws and create some clearance for the screws.
 - Gradually screw (quarter turn by quarter turn) each of the two screws alternatively until they bite.
 - Repeat the above steps on the other side of the front axle.

Figure 10-40-6


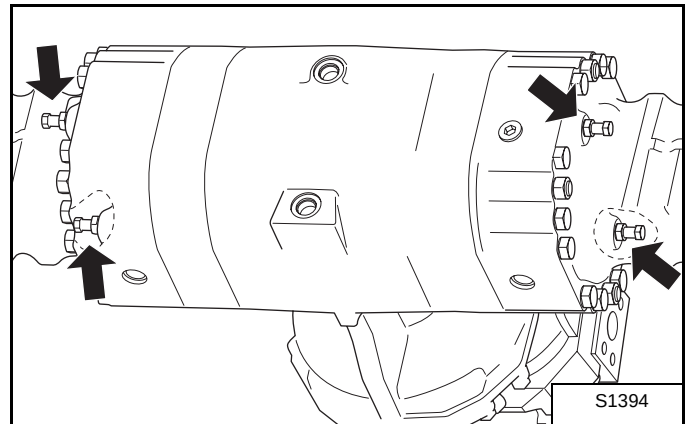


Figure 10-40-7

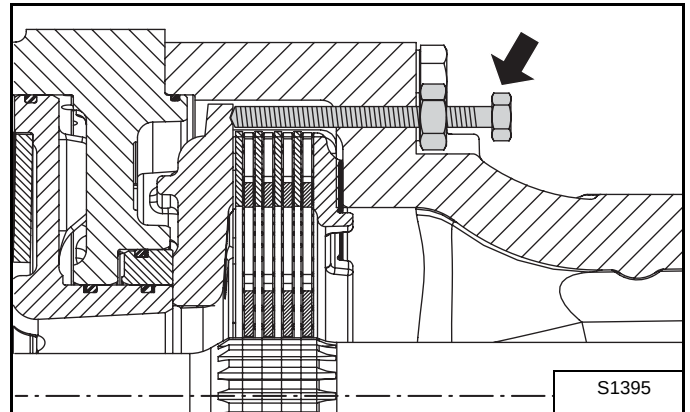

The brakes are now released for towing the vehicle.

TOWING THE TELESCOPIC HANDLER (CONT'D)

Towing the Telescopic Handler

IMPORTANT

The vehicle will not be able to brake until the screws are returned to their original position.

Tow the Telescopic Handler at slow speed.

After towing:

- Re-engage the hydrostatic transmission by reversing the procedure "Disengaging the hydrostatic transmission" on page 10-40-1.
- Re-activate the brakes by reversing the procedure:
 - for earlier models: "Releasing the handbrake (For S/N 362811001 - 362812000, S/N 362911001 - 368012000):" on page 10-40-2
 - for later models: "Releasing the handbrake (For S/N 362812001 and Above, S/N 362912001 and Above):" on page 10-40-2.



Bobcat®

SERVICE SCHEDULE

Maintenance work must be done at regular intervals. Failure to do so will result in excessive wear and early failures. The service schedule is a guide for correct maintenance of the Bobcat Telescopic Handler.



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0199

Operation	Hours					
	10	50	200	500	800 (4)	1000 (5)
Diesel engine						
Cleaning the air filter's main cartridge (6)						
Replacing the air filter's main cartridge (6)						
Replacing the air filter's safety cartridge (6)						
Checking the cooling fluid level						
Checking the cooling fluid						
Checking the radiators are clean						
Checking the engine oil level						
Draining and changing oil and filter of the engine						
Replacing the lubricating oil filter cartridge						
Checking the state and tension of the alternator belt (2)						
Replacing the fuel filter cartridge						
Hydraulic system						
Checking the hydraulic oil level						
Draining and changing the hydraulic oil						
Replacing the hydraulic filter cartridge						
Replacing the hydraulic oil tank vent valve						
Checking the tightness of hydraulic lines and connections						
Mechanical transmission						
Checking the condition of tyres						
Checking the tyre pressure						
Checking the tightness of wheel nuts (1)						
Checking the vent valves on the two axles are clean						
Lubricating the rear axle rolling element bearings						
Lubricating the axle steering pivots						
Checking the oil level in the front axle central casing			monthly			
Checking the oil level in the reducer box			monthly			
Checking the oil level in the rear axle central casing			monthly			
Checking the oil level on both axles' gear reducers						
Draining and changing the oil in the front axle central casing (3)						
Draining and changing the oil in the reducer box (3)						
Draining and changing the oil on the rear axle central casing (3)						
Draining and changing the oil on two axles gear reducers (3)						
Structure						
Cleaning dust out of the cab filter						
Replacing the cab filter						
Lubricating the hinge pins						
Lubricating the boom's guide rail shoes						
Checking the tightness of screws and bolts						
Checking wear on the boom's guide rail shoes						
Checking wear on flanges and hinge pins						
Electrical system						
Checking the battery fluid level						
Checking the condition of fuses, diodes and relays						
Checking the working order of controls, lighting and signalling						
Checking the working order of indicator lights, indicators and controls						
Checking the condition of electric connections						

- (1) Check wheel nut torque every 8 hours for the first 24 hours.
 (2) First maintenance after 50 hours then according to the table.
 (3) Replace the first time after 100 hrs, then according to the table.

- (4) Or every 12 months.
 (5) Or every 12 months.
 (6) Frequency may vary in certain dusty environments.




Bobcat®

AIR CLEANER SERVICE

Replacing Filter Element

Figure 10-60-1

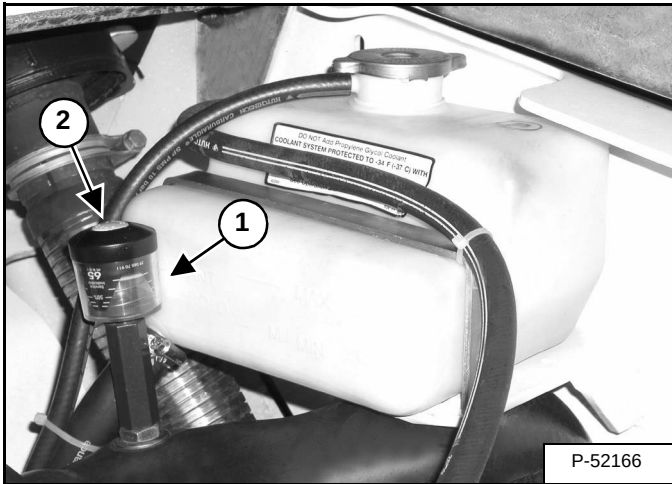


Replace the large (outer) filter element only when the red ring shows in the window of the condition indicator (Item 1) [Figure 10-60-1].

NOTE: Before replacing the filter element, push the button on the condition indicator (Item 2) [Figure 10-60-1]. Start the engine. If the red ring does not show, do not replace the filter element.

Replace the inner filter every third time the outer filter is replaced or when the red ring still shows in the indicator window after the outer filter has been replaced.


Figure 10-60-2

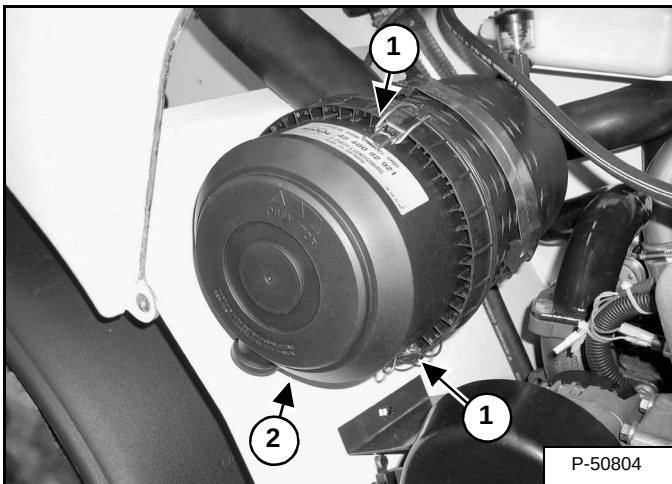

Loosen the filter housing clamps (Item 1) [Figure 10-60-2].

Release the fastener and remove the cover (Item 2) [Figure 10-60-2].

Figure 10-60-3

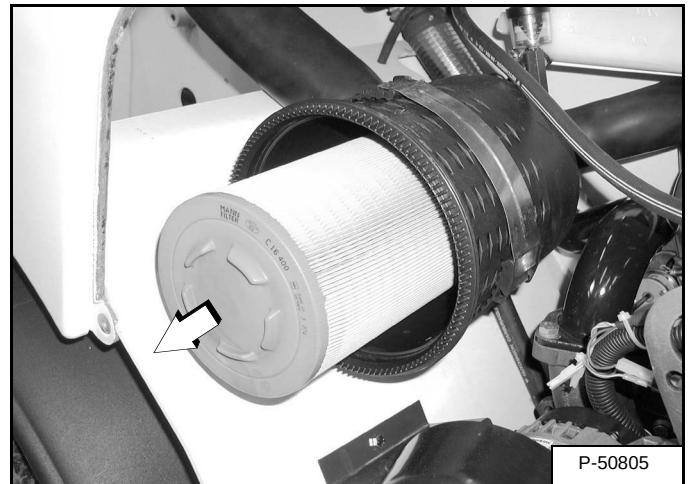

Pull the element straight out [Figure 10-60-3].

NOTE: Make sure all sealing surfaces are free of dirt and debris.

Install a new outer element.

Install the dust cover and fasten [Figure 10-60-3].

Connect the filter housing clamps.

AIR CLEANER SERVICE (CONT'D)


Replacing Filter Element (Cont'd)

Inner Filter

Remove the outer element.

NOTE: Make sure all sealing surfaces are free of dirt and debris.

Figure 10-60-4

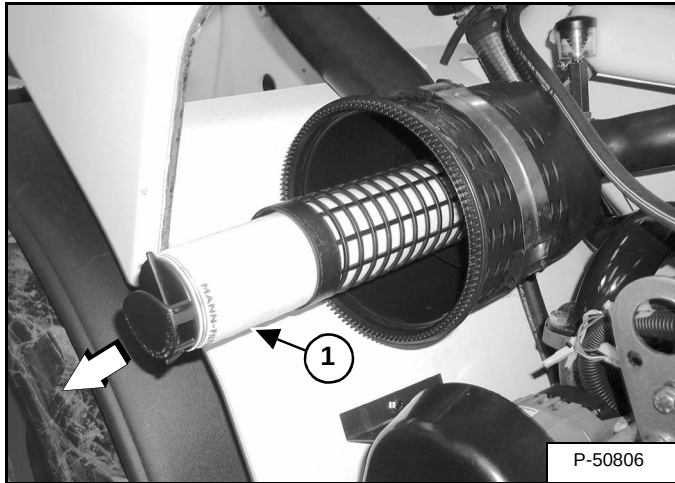

Remove the inner filter (Item 1) [Figure 10-60-4] and install a new element.

Install the outer element.

Install the dust cover and fasten [Figure 10-60-4].

Connect the filter housing clamp (Item 1) [Figure 10-60-4].

ENGINE COOLING SYSTEM

Check the cooling system every day to prevent overheating, loss of performance or engine damage.

WARNING

Wear safety glasses to prevent eye injury when any of the following conditions exist:

- When fluids are under pressure.
- Flying debris or loose material is present.
- Engine is running.
- Tools are being used.

W-2019-1285


Cleaning The Cooling System

Figure 10-70-1



Open the engine cover (Item 1) [Figure 10-70-1].

Figure 10-70-2

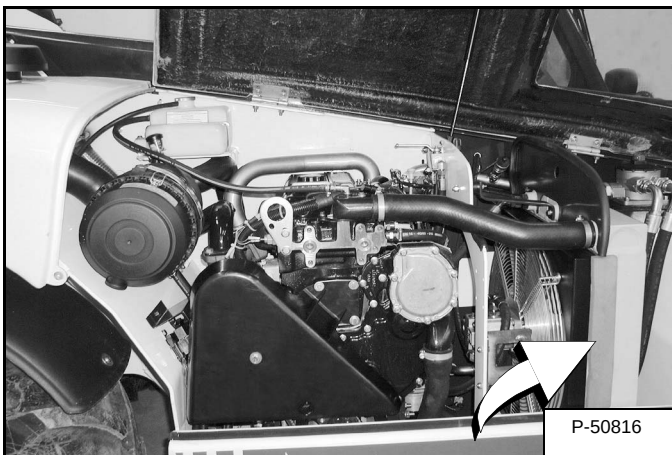


Use low air pressure or water pressure to clean the radiator and oil cooler [Figure 10-70-2].

Checking The Coolant Level

Open the engine cover.

Check the coolant level in the coolant reservoir.

Figure 10-70-3

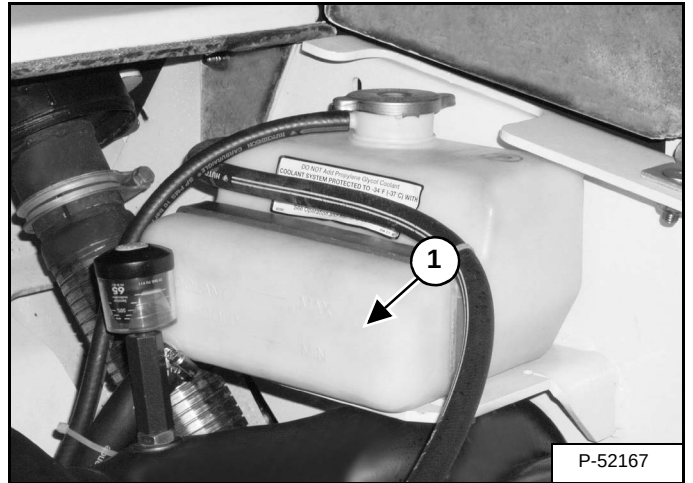

The coolant level must be between the MIN and MAX marks (Item 1) [Figure 10-70-3] on the coolant reservoir when the engine is cold.

Close the engine cover.

IMPORTANT

AVOID ENGINE DAMAGE

Always use the correct ratio of water to antifreeze.

Too much antifreeze reduces cooling system efficiency and may cause serious premature engine damage.

Too little antifreeze reduces the additives which protect the internal engine components; reduces the boiling point and freeze protection of the system.

Always add a premixed solution. Adding full strength concentrated coolant can cause serious premature engine damage.

I-2124-0497

ENGINE COOLING SYSTEM (CONT'D)

Replacing The Coolant

! WARNING


AVOID BURNS

Do not remove radiator cap when the engine is hot. You can be seriously burned.

W-2070-1203

Open the engine cover.

Figure 10-70-4

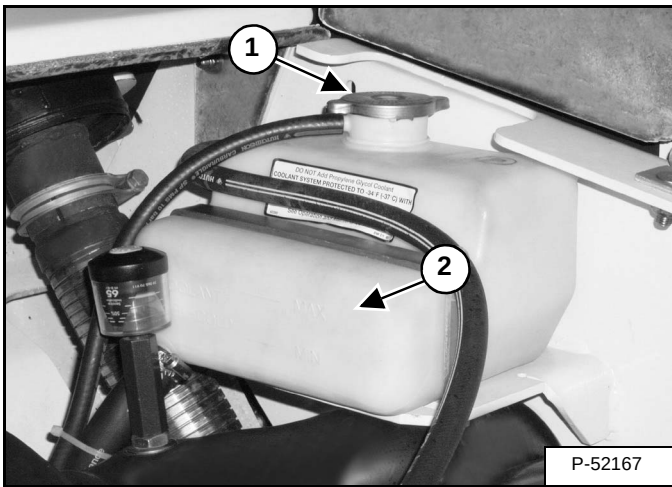

Remove the cap (Item 1) [Figure 10-70-4] from the coolant reservoir.

Remove the fan shield.

IMPORTANT

AVOID ENGINE DAMAGE


Always use the correct ratio of water to anti freeze. Too much antifreeze reduces cooling system efficiency and may cause serious premature engine damage.

Too little antifreeze reduces the additives which protect the internal engine components; reduces the boiling point and freeze protection of the system.

Always add a premixed solution. Adding full strength concentrated coolant can cause serious premature engine damage.

I-2124-0497

Figure 10-70-5

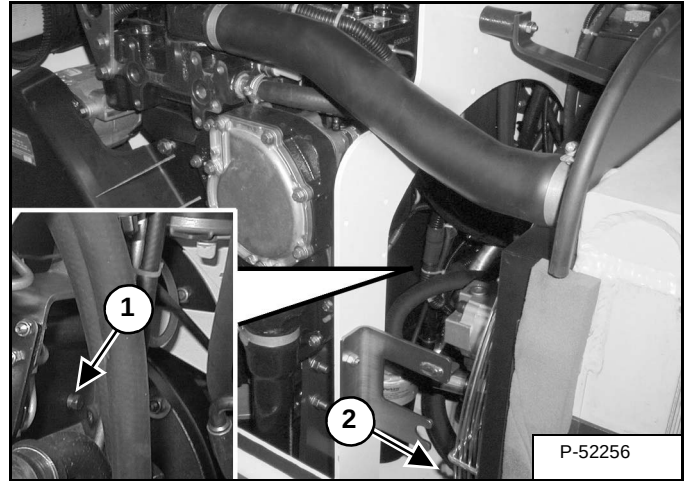

Remove the engine block drain plug (Item 1) [Figure 10-70-5].

Open the drain valve (Item 2) [Figure 10-70-5] and drain all of the coolant into a container. Dispose of used coolant in an environmentally safe manner.

Close the drain valve.

Mix the coolant in a separate container.

NOTE: The Telescopic Handler is factory filled with ethylene glycol coolant.

Add premixed coolant, 50% water and 50% ethylene glycol to the reservoir if the coolant level is low.

One gallon (3,8 L) of ethylene glycol mixed with one gallon (3,8 L) of water is the correct mixture of coolant to provide a -34° F (-37° C) freeze protection.

Use a refractometer to check the condition of ethylene glycol in your cooling system.

Fill the radiator with the premixed coolant. Install the radiator cap.

Add coolant to the reservoir. The coolant level must be between the MIN and MAX marks (Item 2) [Figure 10-70-4] on the coolant reservoir.

Run the engine until it is at operating temperature.

Stop the engine.

Check the coolant level (cold) in the reservoir when cool.

Add coolant as needed.

FUEL SYSTEM

Fuel Specifications

Use only clean, high quality diesel fuel, Grade No. 2 or Grade No. 1.

The following is one suggested blending guideline which should prevent fuel gelling problems in cold temperatures:

TEMP. F° (C°)	NO. 2	NO. 1
+15° (9°)	100%	0%
Down to -20° (-29°)	50%	50%
Below -20° (-29°)	0%	100%

See your fuel supplier for local recommendations.


Filling The Fuel Tank

! WARNING

Stop and cool the engine before adding fuel. **NO SMOKING!** Failure to obey warnings can cause an explosion or fire.

W-2063-0887

Figure 10-80-1

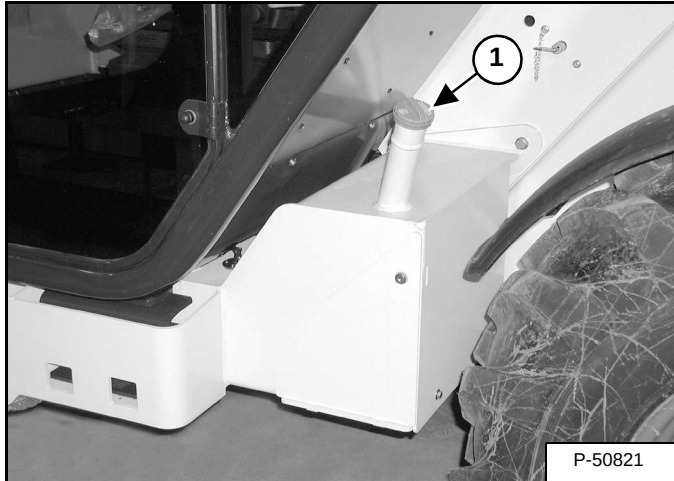

Remove the fuel fill cap (Item 1) [Figure 10-80-1].


Use a clean, approved safety container to add fuel of the correct specifications. Add fuel only in an area that has free movement of air and no open flames or sparks. **NO SMOKING!**

Install and tighten the fuel fill cap [Figure 10-80-1].

Fuel Filter

See "SERVICE SCHEDULE" on page 10-50-1 for the service interval when to clean the sediment bowl.

Figure 10-80-2

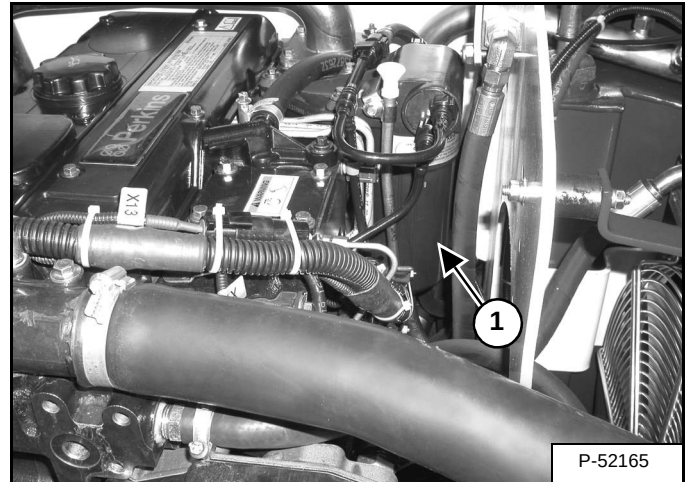

See "SERVICE SCHEDULE" on page 10-50-1 for the service interval when to replace the fuel filter.

Remove the filter element (Item 1) [Figure 10-80-2].

Clean the area around the filter housing.

Put oil on the seal of the new filter element.

Install the fuel filter, and hand tighten.

! WARNING

Always clean up spilled fuel or oil. Keep heat, flames, sparks or lighted tobacco away from fuel and oil. Failure to use care around combustibles can cause explosion or fire which can result in injury or death.

W-2103-1285




Bobcat®

ENGINE LUBRICATION SYSTEM

Checking Engine Oil

Check the engine oil level every day before starting the engine for the work shift.

Figure 10-90-1

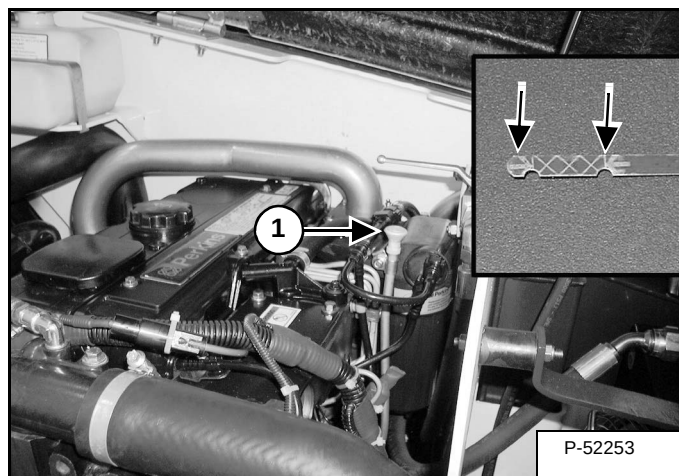


Open the engine cover and remove the dipstick (Item 1) **[Figure 10-90-1]**.

Keep the oil level between the marks on the dipstick (Inset) **[Figure 10-90-1]**.

Use a good quality motor oil that meets API Service Classification of CD or better. (See *Oil Chart* , **[Figure 10-90-2].**)

Oil Chart

Figure 10-90-2

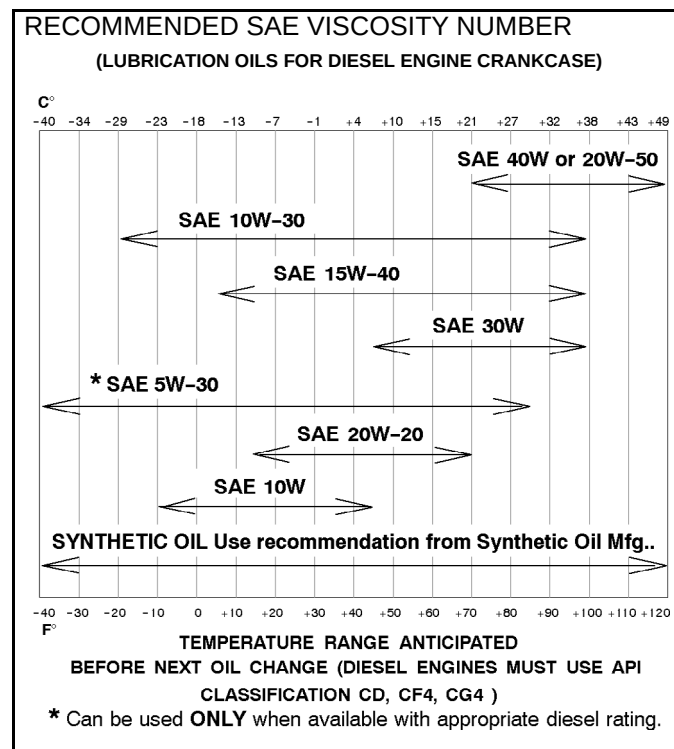


ENGINE LUBRICATION SYSTEM (CONT'D)

Replacing Oil And Filter

See "SERVICE SCHEDULE" on page 10-50-1 for the service interval for replacing the engine oil and filter.

Run the engine until it is at operating temperature. Stop the engine.

Figure 10-90-3

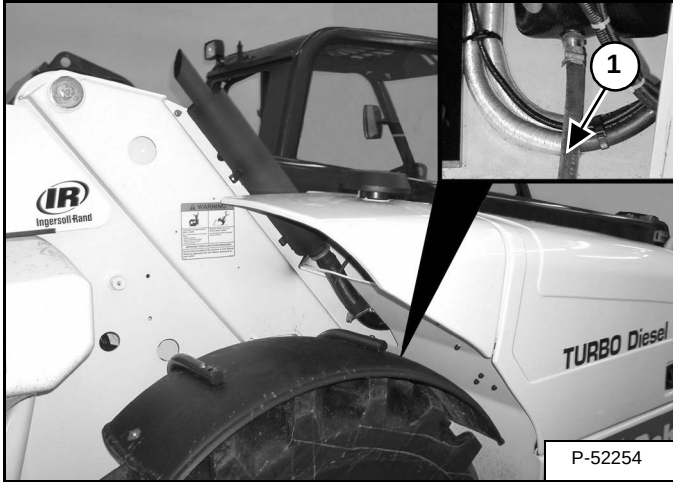

Remove the access panel at the rear of the engine compartment. Route the hose (Item 1) [Figure 10-90-3] out through the access hole. Remove the cap.

Drain the oil into a container and recycle or dispose of used oil in an environmentally safe manner.


Install cap and put the drain hose into the engine compartment, install the access cover.

WARNING

Always clean up spilled fuel or oil. Keep heat, flames, sparks or lighted tobacco away from fuel and oil. Failure to use care around combustibles can cause explosion or fire which can result in injury or death.

W-2103-1285

Figure 10-90-4

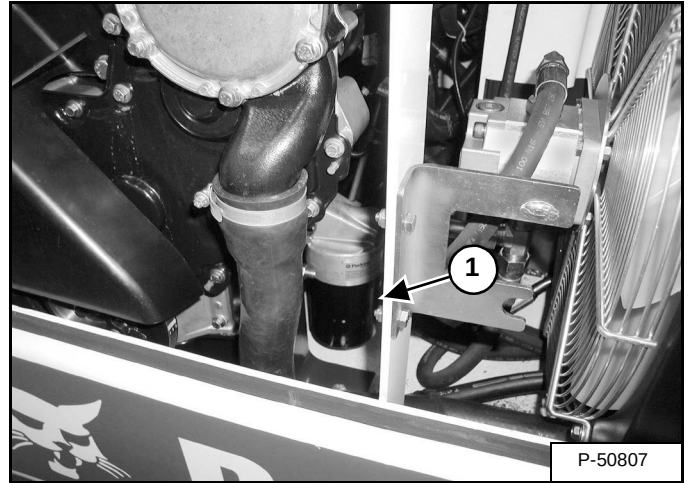


Open the engine cover.

Remove the oil filter (Item 1) [Figure 10-90-4].

Clean the filter housing surface.

Put clean oil on the new oil filter gasket. Install the filter and hand tighten.

Figure 10-90-5

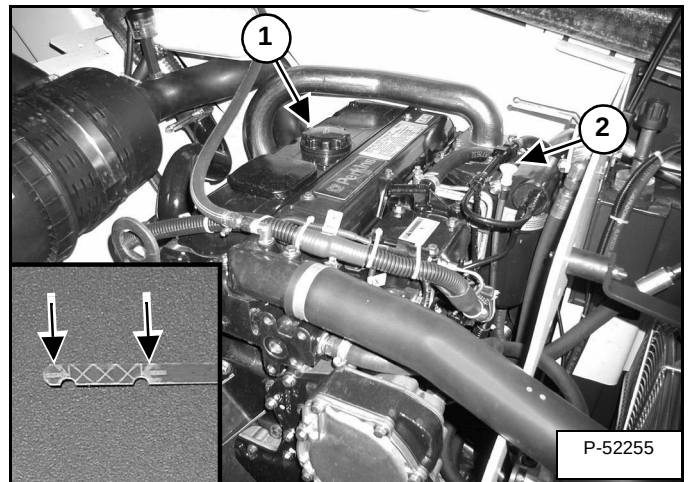

Remove the filler cap (Item 1) [Figure 10-90-5].

Put oil in the engine. (See "Capacities" on page SPEC-10-3). (See *Oil Chart*, page 10-90-1)

Install fill cap, start the engine and let it run for several minutes.

Stop the engine, and check for leaks at the oil filter.

Remove the dipstick (Item 2) [Figure 10-90-5] and check the oil level. Add oil as needed if it is not at the top mark [Figure 10-90-5] on the dipstick.

HYDRAULIC/HYDROSTATIC SYSTEM

Checking And Adding Fluid


Use only recommended fluid in the hydraulic system. (See "HYDRAULIC/HYDROSTATIC FLUID SPECIFICATIONS" on page SPEC-60-1)

Stop the machine on a level surface. Lower the boom all the way.

Stop the engine.

Early Models


Figure 10-100-1

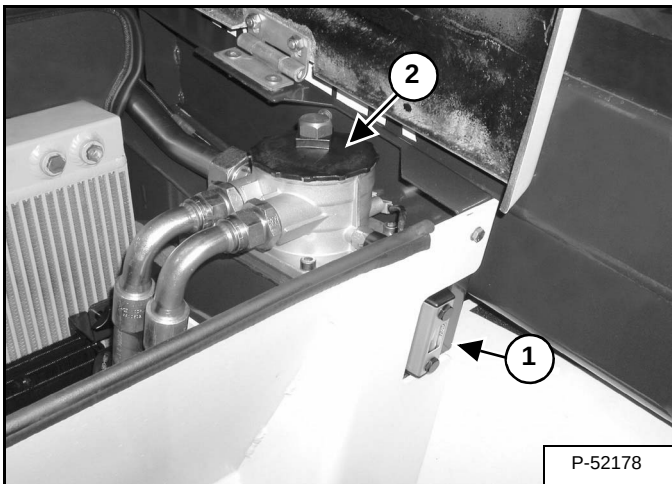

Check the fluid level at the sight gauge (Item 1) [Figure 10-100-1].

Remove the fill cap (Item 2) [Figure 10-100-1].


Figure 10-100-2

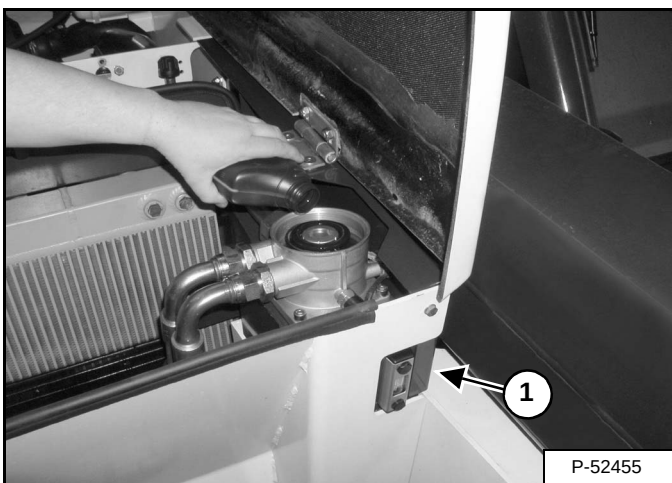

When adding oil, slowly pour the oil through the filter as needed, until visible in the sight gauge (Item 1) [Figure 10-100-2].

Later Models

Figure 10-100-3

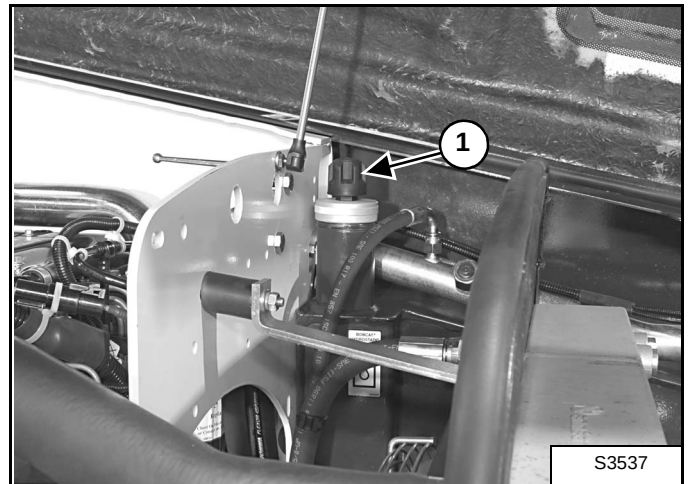

Check the fluid level at the sight gauge (Item 1) [Figure 10-100-1].

Remove the fill / breather cap (Item 1) [Figure 10-100-3] and add hydraulic fluid.


HYDRAULIC/HYDROSTATIC SYSTEM (CONT'D)

Replacing Hydraulic/Hydrostatic Filter

See "SERVICE SCHEDULE" on page 10-50-1 for the correct service intervals.

Open the engine cover and remove the fill cap (Item 2) [Figure 10-100-1].

Figure 10-100-4

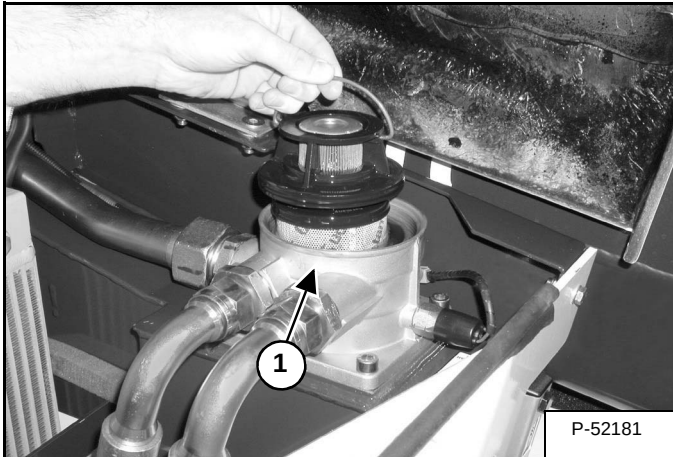

Remove the filter element (Item 1) [Figure 10-100-4].

Clean the surface of the filter housing where the seal contacts the housing.

Put clean oil on the seal of the new filter element.

Install and hand tighten the filter element.

WARNING

Diesel fuel or hydraulic fluid under pressure can penetrate skin or eyes, causing serious injury or death. Fluid leaks under pressure may not be visible. Use a piece of cardboard or wood to find leaks. Do not use your bare hand. Wear safety goggles. If fluid enters skin or eyes, get immediate medical attention from a physician familiar with this injury.

W-2072-0496

WARNING


Always clean up spilled fuel or oil. Keep heat, flames, sparks or lighted tobacco away from fuel and oil. Failure to use care around combustibles can cause explosion or fire which can result in injury or death.

W-2103-1285

HYDRAULIC/HYDROSTATIC SYSTEM (CONT'D)


Replacing Hydraulic Fluid

Figure 10-100-5

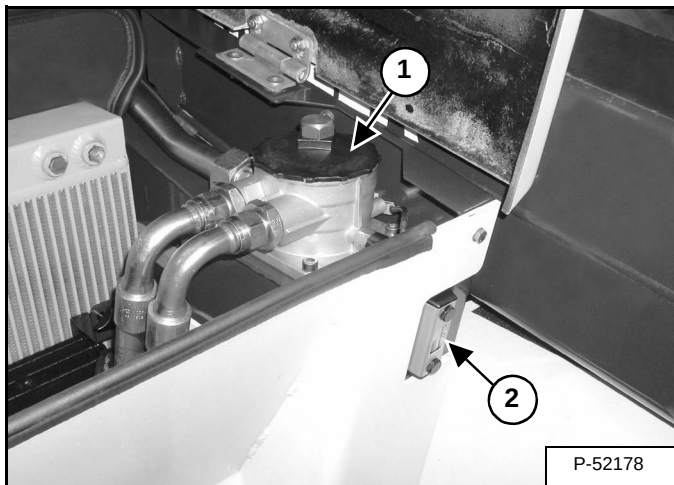

Remove the fill cap (Item 1) **[Figure 10-100-5]**.

Figure 10-100-6

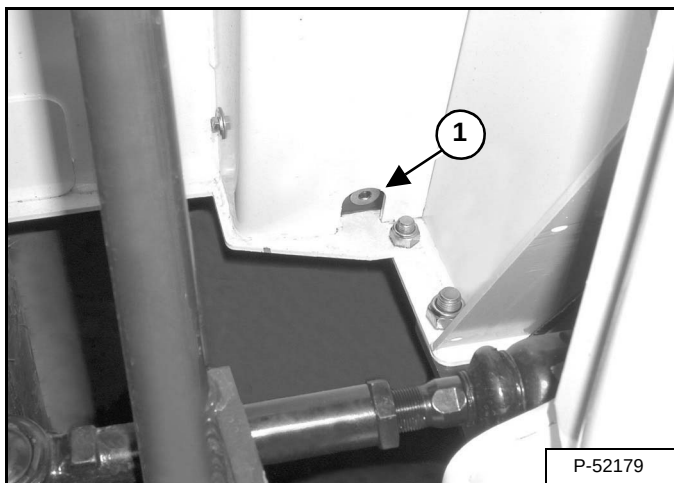

Remove the reservoir drain plug (Item 1) **[Figure 10-100-6]** behind the right front wheel and drain the fluid into a container. Recycle or dispose of the fluid in an environmentally safe manner. Reinstall the drain plug and tighten.

Add fluid until it is at the center of the sight gauge (Item 2) **[Figure 10-100-5]**.

Install the fill cap.




Bobcat®

AXLES (FRONT AND REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000)

Checking Oil Level (Planetary Carrier)

Figure 10-110-1

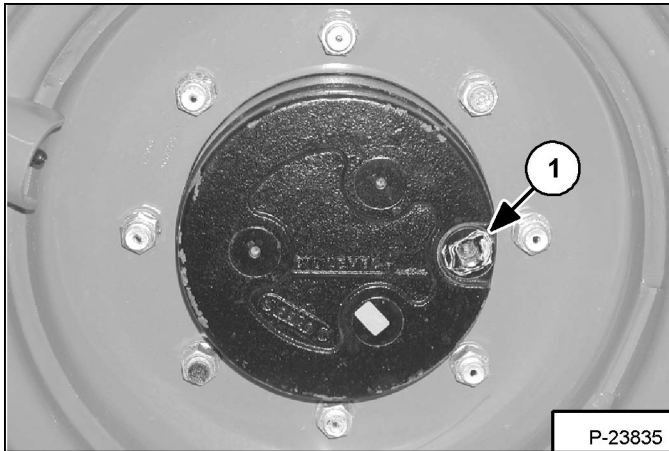

Put the machine on a level surface with the plug (Item 1) **[Figure 10-110-1]** positioned as shown.

Remove the plug (Item 1) **[Figure 10-110-1]**. The oil level should be at the bottom edge of the plug hole.

Add gear lube through the hole if the oil level is below the hole. (See "Capacities" on page SPEC-10-3 for capacity and type.)


Install and tighten the plug.

Repeat the procedure for the other side.

Draining Oil (Planetary Carrier)

See "SERVICE SCHEDULE" on page 10-50-1 for the correct service interval.

Figure 10-110-2

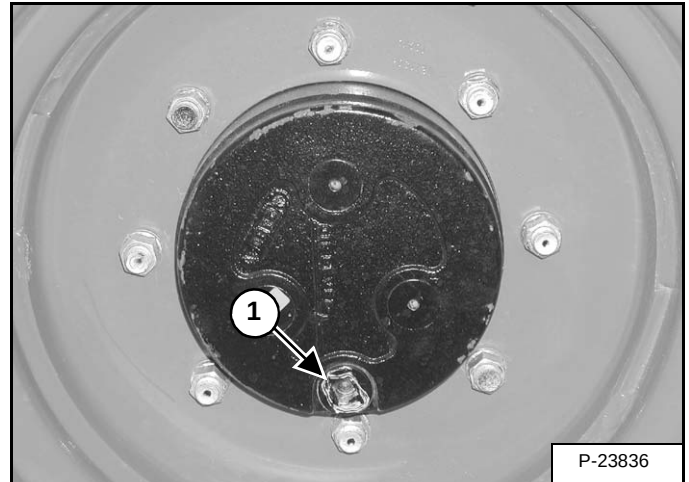

Put the machine on a level surface with the plug (Item 1) **[Figure 10-110-2]** positioned as shown.

Remove the plug (Item 1) **[Figure 10-110-2]** and drain into a container. Recycle or dispose of the used lubricant in an environmentally safe manner.

Reposition the plug hole and add gear lube until the lube level is at the bottom edge of the plug hole (Item 1) **[Figure 10-110-1]**. (See "Capacities" on page SPEC-10-3 for capacity and type.)


Install and tighten the plug.

Repeat the procedure for the other side.

AXLES (FRONT AND REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Checking Oil Level (Rear Differential)

Figure 10-110-3

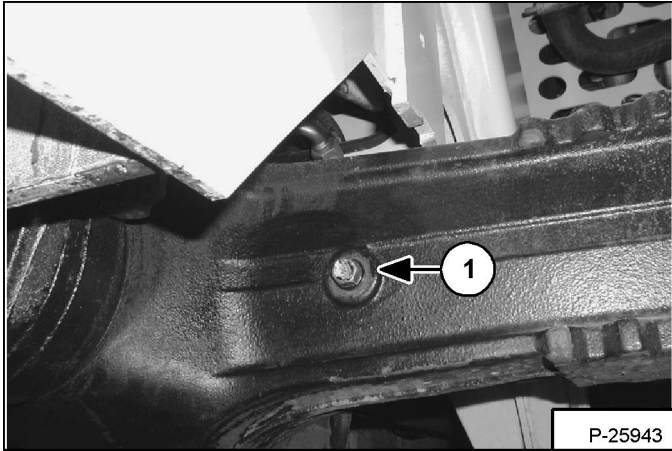

With the machine on a level surface, remove the plug (Item 1) [Figure 10-110-3]. The oil level should be at the bottom edge of the plug hole.


Add oil through the hole if the oil level is below the hole. (See "Capacities" on page SPEC-10-3 for capacity and type.)

Install and tighten the plug.

Draining Oil (Rear Differential)

See "SERVICE SCHEDULE" on page 10-50-1 for the correct service interval.


Figure 10-110-4

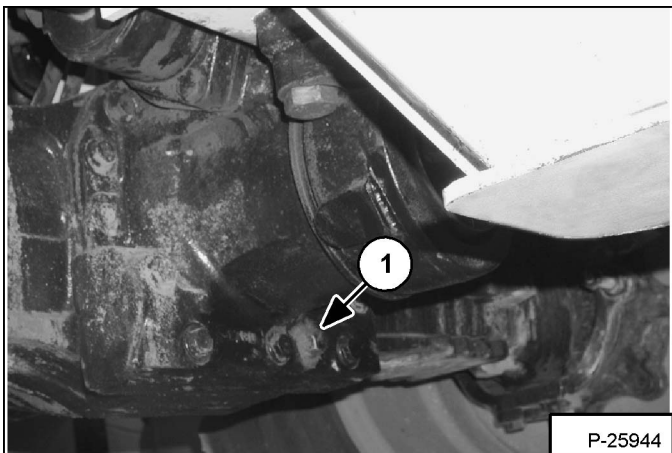

With the machine on a level surface remove the plug (Item 1) [Figure 10-110-4] and drain into a container. Recycle or dispose of the used lubricant in an environmentally safe manner.

Checking Oil Level (Front Differential)

Figure 10-110-5

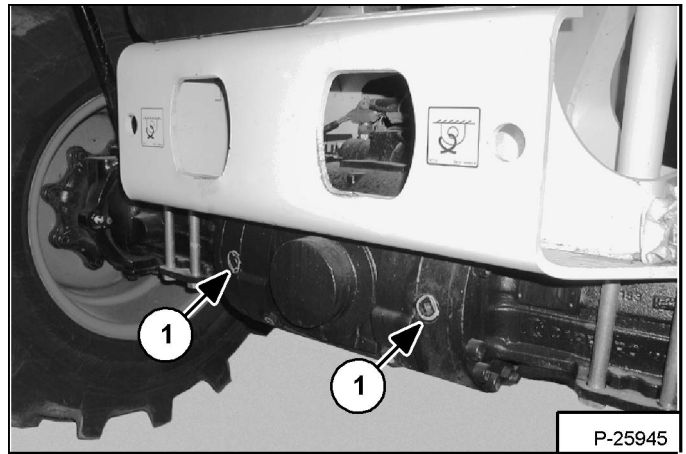

Put the machine on a level surface with the plugs (Item 1) [Figure 10-110-5] positioned as shown.

Remove the plugs (Item 1) [Figure 10-110-5]. The oil level should be at the bottom edge of the plug hole.


Add oil through the hole if the oil level is below the hole. (See "Capacities" on page SPEC-10-3 for capacity and type.)

Install and tighten the plug.

Draining Oil (Front Differential)

See "SERVICE SCHEDULE" on page 10-50-1 for the correct service interval.

Figure 10-110-6

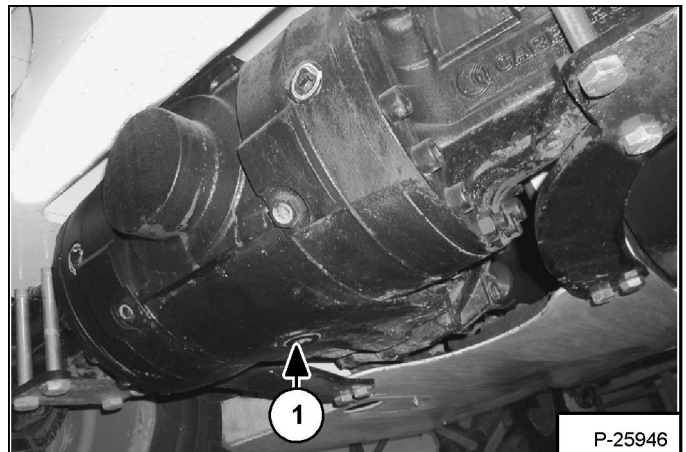


With the machine on a level surface, remove the plug (Item 1) [Figure 10-110-6] and drain into a container. Recycle or dispose of the used lubricant in an environmentally safe manner.

AXLES (FRONT AND REAR) (For S/N 362812001 and Above, S/N 362912001 and Above)

Checking Oil Level (Planetary Carrier)

Figure 10-10-111-1

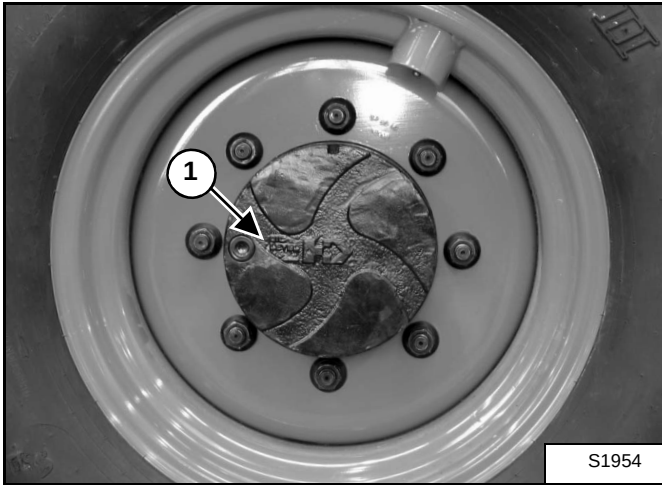

Put the machine on a level surface with the plug (item 1) **Figure 10-10-111-1** positioned as shown.

Remove the plug (item 1) **Figure 10-10-111-1**. The oil level should be at the bottom edge of the plug hole.

Add gear lube through the hole if the oil level is below the hole. (See "Capacities" on page SPEC-10-3 for capacity and type.)


Install and tighten the plug.

Repeat the procedure for the other side.

Draining Oil (Planetary Carrier)

See "SERVICE SCHEDULE" on page 10-50-1 for the correct service interval.

Figure 10-10-111-2

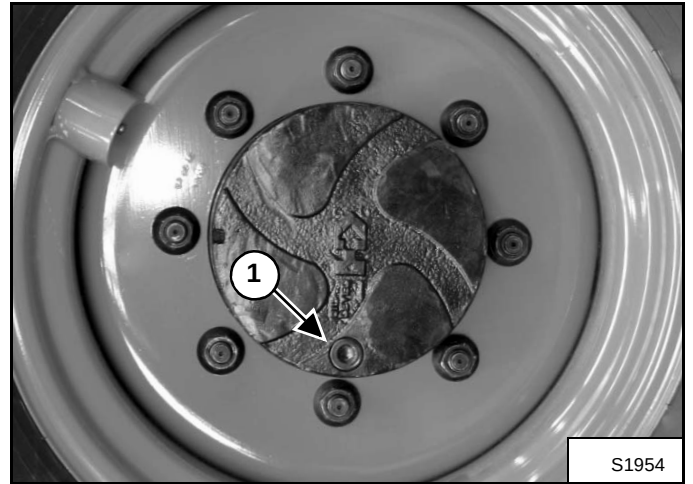

Put the machine on a level surface with the plug (item 1) **Figure 10-10-111-2** positioned as shown.

Remove the plug (item 1) **Figure 10-10-111-2** and drain into a container. Recycle or dispose of the used lubricant in an environmentally safe manner.

Reposition the plug hole and add gear lube until the lube level is at the bottom edge of the plug hole (item 1) **Figure 10-10-111-1**. (See "Capacities" on page SPEC-10-3 for capacity and type.)


Install and tighten the plug.

Repeat the procedure for the other side **Figure 10-10-111-7**.

AXLES (FRONT AND REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Checking Oil Level (Rear Differential)

Figure 10-10-111-3

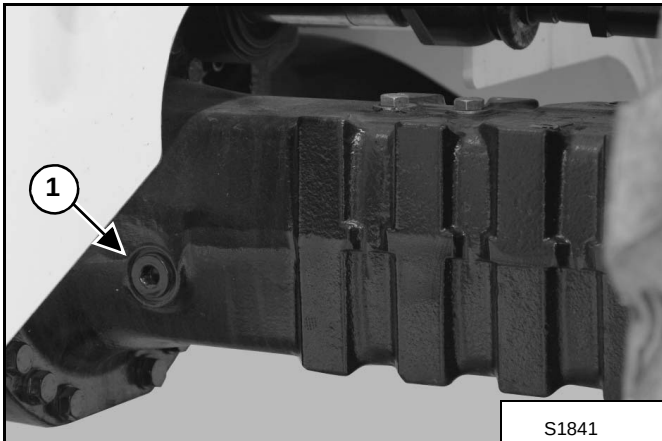


With the machine on a level surface, remove the plug (item 1) **Figure 10-10-111-3**. The oil level should be at the bottom edge of the plug hole. Add oil through the hole if the oil level is below the hole. (See "Capacities" on page SPEC-10-3 for capacity and type.) Install and tighten the plug.

Draining Oil (Rear Differential)

See "SERVICE SCHEDULE" on page 10-50-1 for the correct service interval.

Figure 10-10-111-4

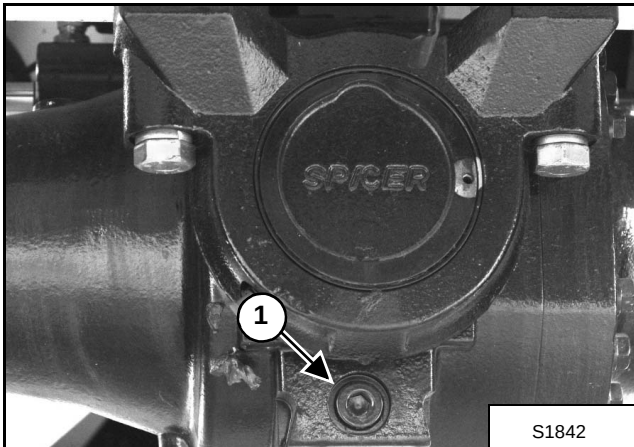

With the machine on a level surface remove the plug (item 1) **Figure 10-10-111-4** and drain into a container. Recycle or dispose of the used lubricant in an environmentally safe manner. Add oil through the hole till the oil level is at the bottom edge of the plug hole.

Checking Oil Level (Front Differential)

Figure 10-10-111-5


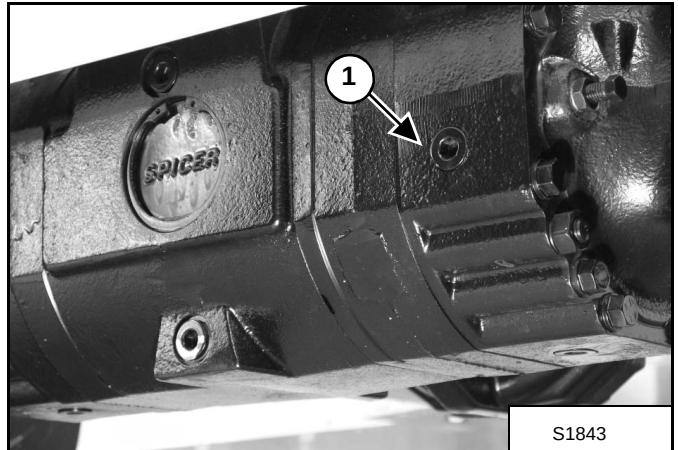


Figure 10-10-111-6

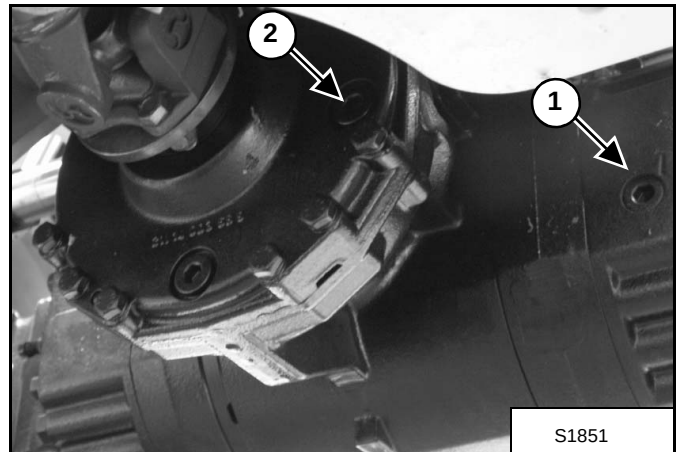

Remove the plugs (item 1) **Figure 10-10-111-5** and (item 1 & 2) **Figure 10-10-111-6**. The oil level should be at the bottom edge of the plug hole.

Add oil through the hole if the oil level is below the hole. (See "Capacities" on page SPEC-10-3 for capacity and type.)

Install and tighten the plug.

AXLES (FRONT AND REAR) (For S/N 3628 12001 and above, S/N 3629 12001 and above) (CONT'D)

Draining Oil (Front Differential)

See "SERVICE SCHEDULE" on page 10-50-1 for the correct service interval.

Figure 10-10-111-7


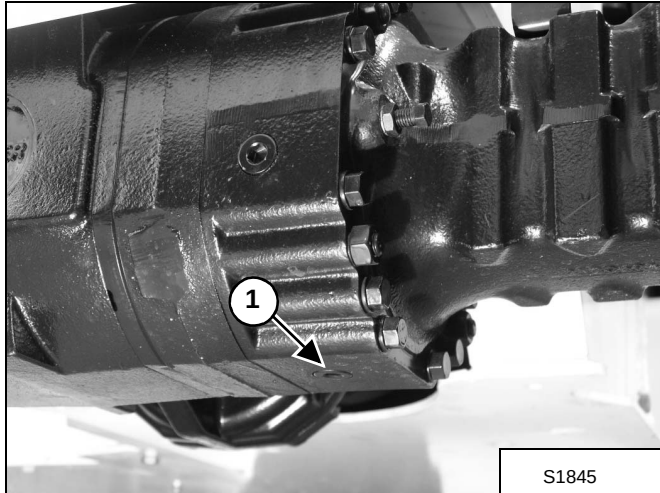


Figure 10-10-111-8

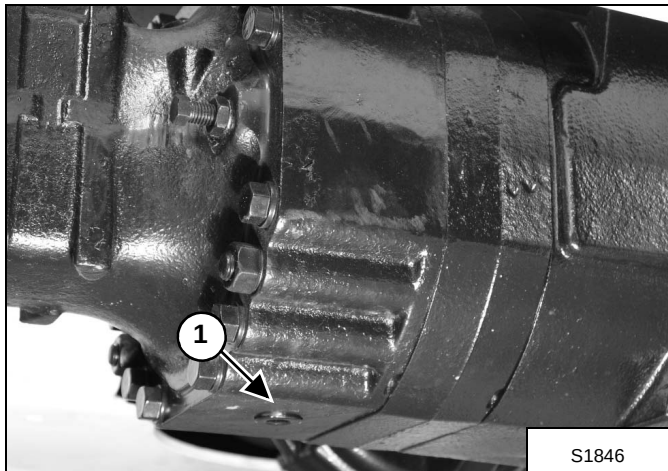

With the machine on a level surface, remove the plug (item 1) **Figure 10-10-111-7** and **Figure 10-10-111-8** and drain into a container. Recycle or dispose of the used lubricant in an environmentally safe manner.

Figure 10-10-111-9

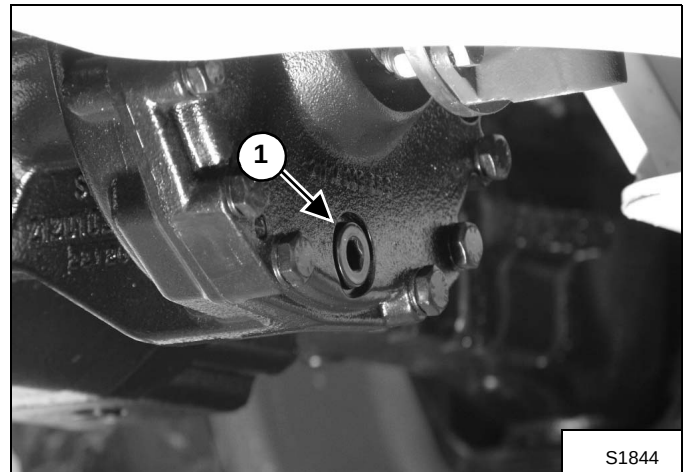


Figure 10-10-111-10



With the machine on a level surface, remove the plug (item 1) **Figure 10-10-111-9** and **Figure 10-10-111-9** and drain into a container. Recycle or dispose of the used lubricant in an environmentally safe manner.



Bobcat®

LUBRICATION (For S/N 362811001 - 362812000, S/N 362911001 - 362912000)

Procedure


Lubricate as specified (See "SERVICE SCHEDULE" on page 10-50-1) for the best performance of the machine.

Record the operating hours each time you lubricate so that it is performed at the correct interval.

Always use a good quality lithium based multi-purpose grease. Apply lubricant until extra grease shows.


Lubricate the following locations on the Telescopic Handler:

Figure 10-120-1

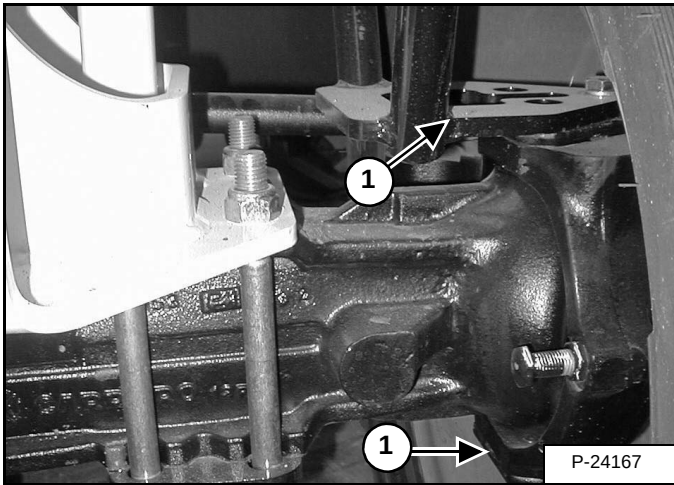


1. Axle Pivots - Top and bottom (Item 1) [Figure 10-120-1] all four wheels.

Figure 10-120-2

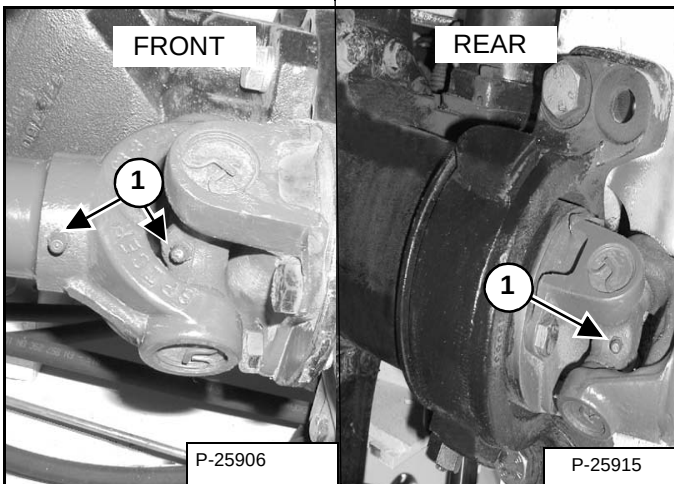


2. Universal Joints - Front and Rear (Item 1) [Figure 10-120-2].

Figure 10-120-3

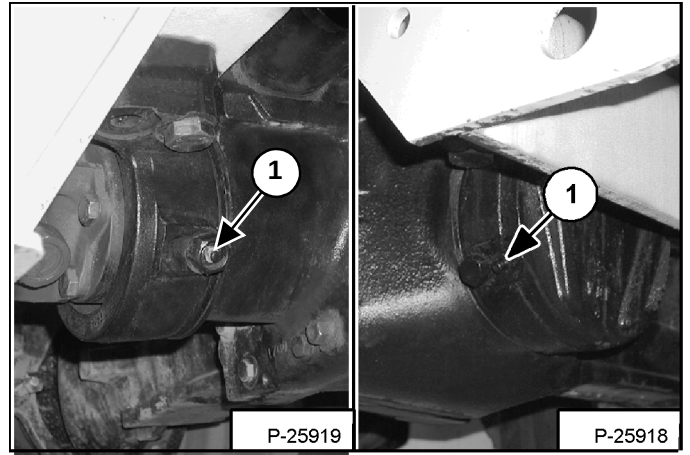

3. Axle Oscillation - Rear Axle (Item 1) [Figure 10-120-3].

Figure 10-120-4

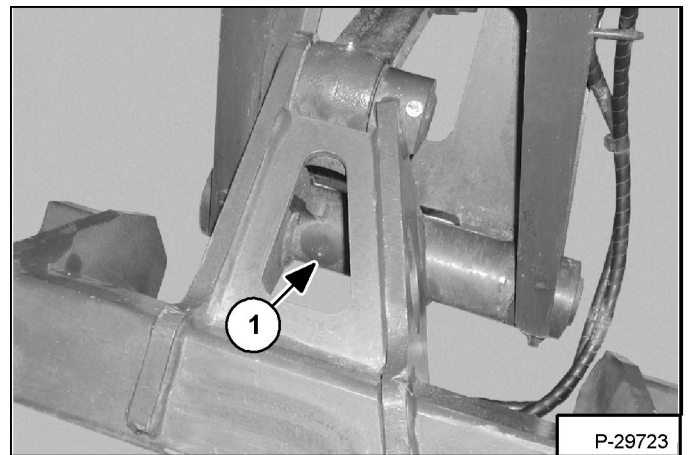


4. Attachment Frame Pivot (Item 1) [Figure 10-120-4].

LUBRICATION (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Procedure (Cont'd)

Figure 10-120-5

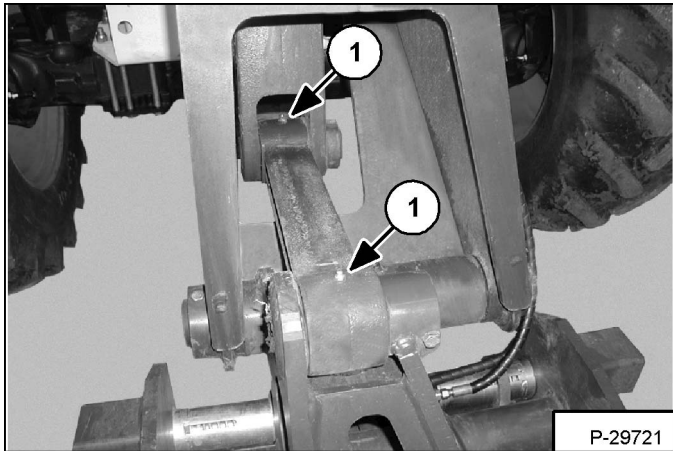


5. Lower Pivot Link (Item 1) [Figure 10-120-5].

Figure 10-120-6

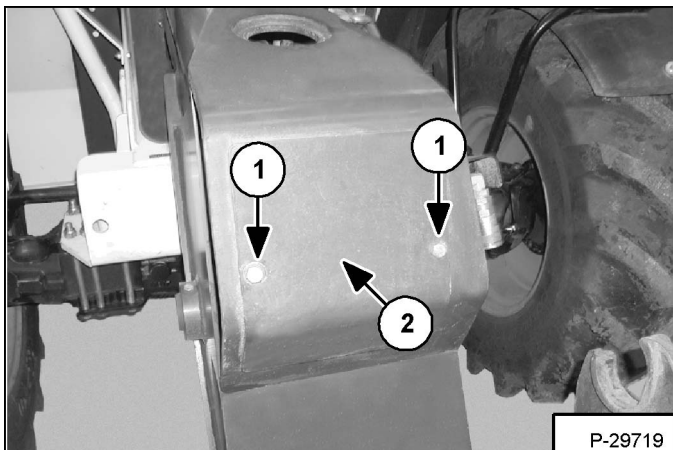


6. Remove the two cover bolts (Item 1) and cover (Item 2) [Figure 10-120-6].

Figure 10-120-7

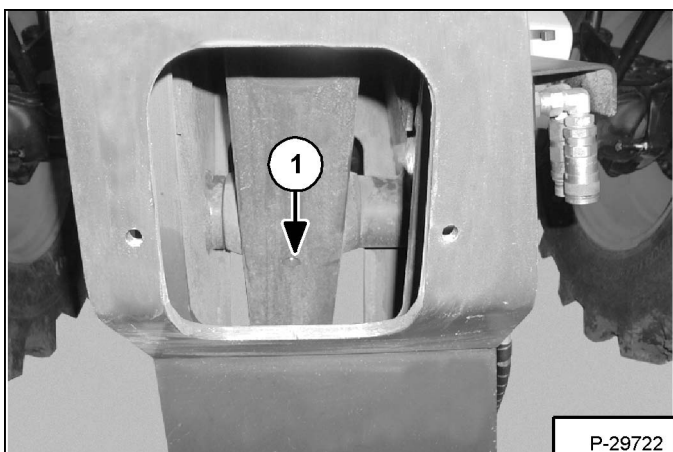

7. Main Pivot Link (Item 1) [Figure 10-120-7].

Figure 10-120-8

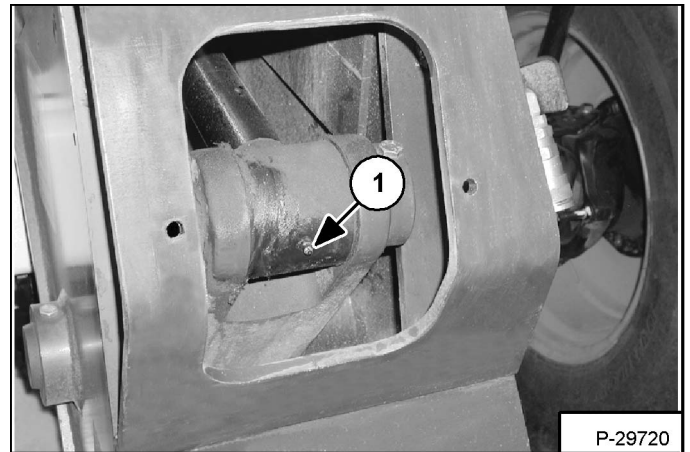


8. Extension Cylinder Rod End (Item 1) [Figure 10-120-8].

LUBRICATION (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Procedure (Cont'd)


Figure 10-120-9

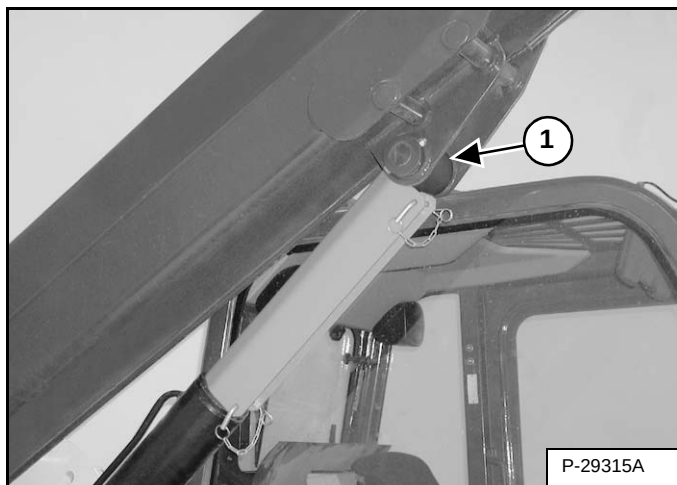

NOTE: Raise the boom and install the boom stop (See “Installing The Approved Boom Stop” on page 10-150-1) before lubricating the boom cylinder.

9. Lift Cylinder Rod End (Item 1) [Figure 10-120-9].


Figure 10-120-10

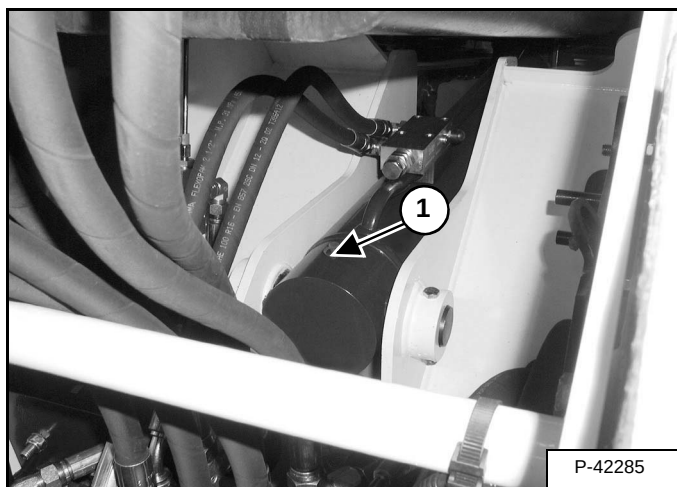

10. Lift Cylinder Base End (Item 1) [Figure 10-120-10].

NOTE: The rear cover must be removed.


Figure 10-120-11

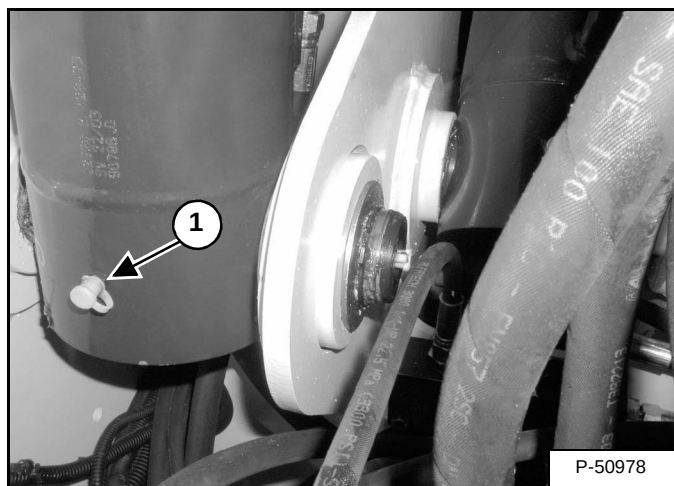

11. Base End Slave Cylinder (Item 1) [Figure 10-120-11].

NOTE: The rear cover must be removed.

Figure 10-120-12

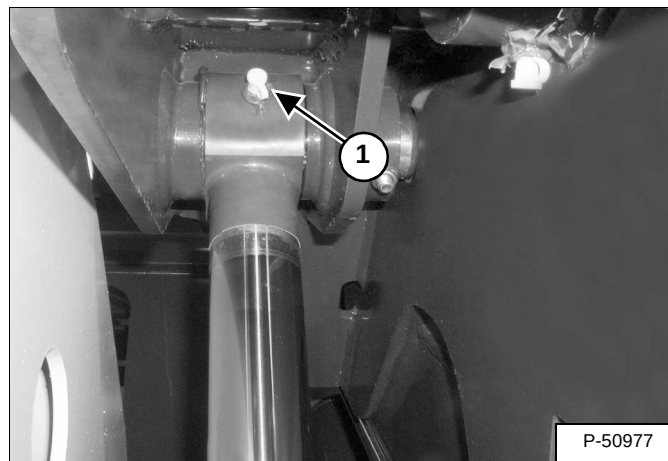


12. Slave Cylinder Pivot Bracket (Item 1) [Figure 10-120-12].

NOTE: The rear cover must be removed.

LUBRICATION (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Procedure (Cont'd)

Figure 10-120-13

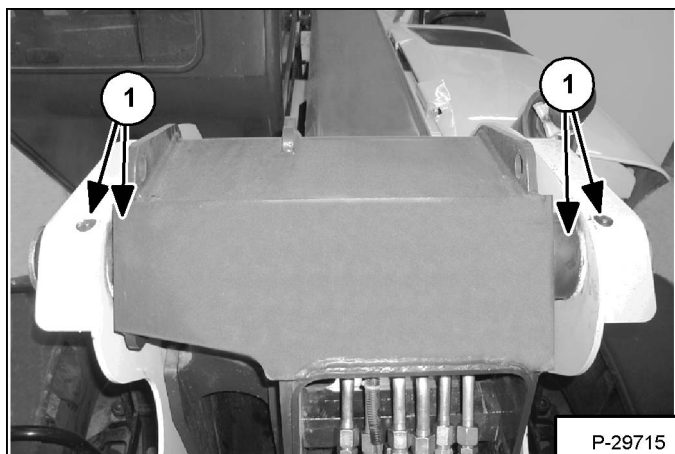


13. Boom Pivot (Item 1) [Figure 10-120-13] (Four Places).

Figure 10-120-14




14. Boom Slide [Figure 10-120-14] (Four Places).

Figure 10-120-15

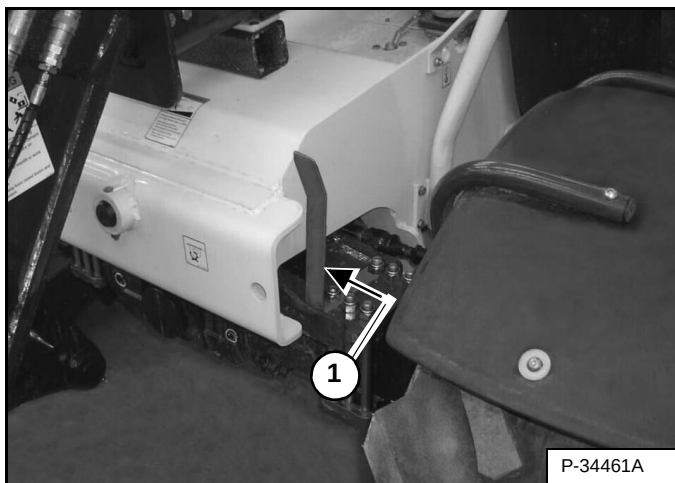

15. Axle Oscillation - Front Axle (Item 1) [Figure 10-120-15] (With Frame Leveling Only)

Figure 10-120-16

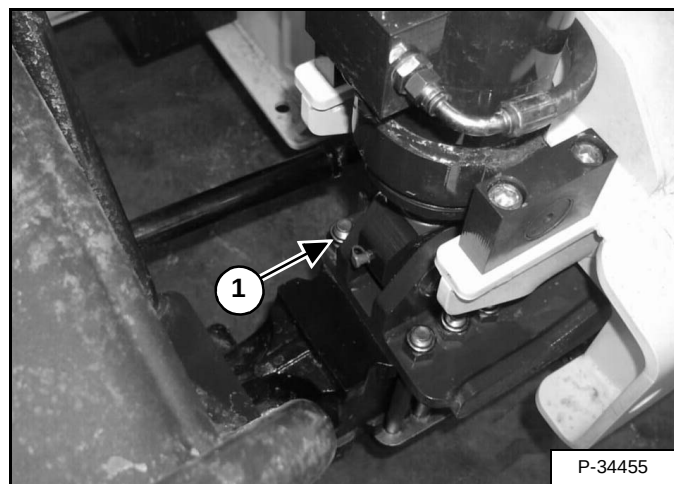


16. Axle Oscillation - Front Axle (Item 1) [Figure 10-120-16] (With Frame Leveling Only)

LUBRICATION (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Procedure (Cont'd)

Figure 10-120-17

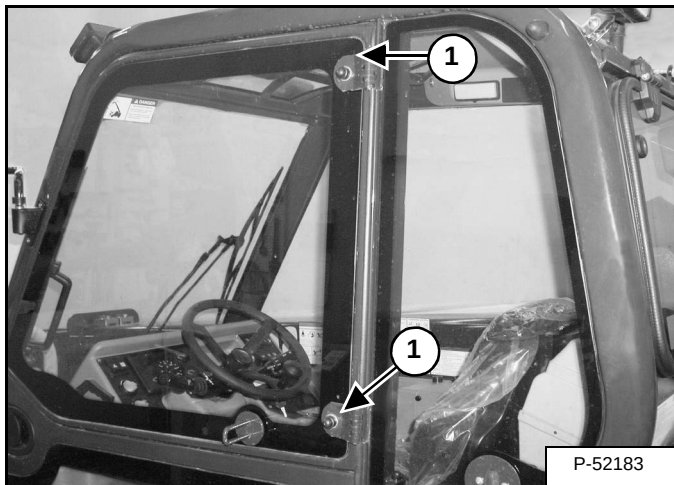

17. Cab door hinges (upper) (Item 1) [Figure 10-120-17]

Figure 10-120-18

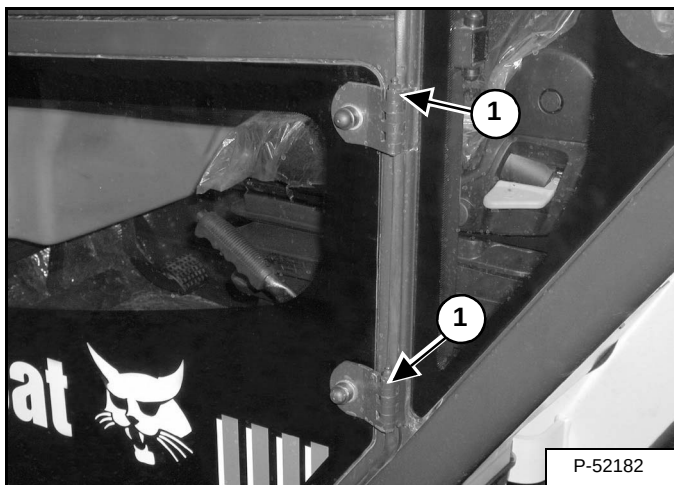

18. Cab door hinges (lower) (Item 1) [Figure 10-120-18]



Bobcat®

LUBRICATION (For S/N 362812001 and Above, S/N 362912001 and Above)

Procedure


Lubricate as specified (See "SERVICE SCHEDULE" on page 10-50-1) for the best performance of the machine.

Record the operating hours each time you lubricate so that it is performed at the correct interval.

Always use a good quality lithium based multi-purpose grease. Apply lubricant until extra grease shows.


Lubricate the following locations on the Telescopic Handler:

Figure 10-121-1

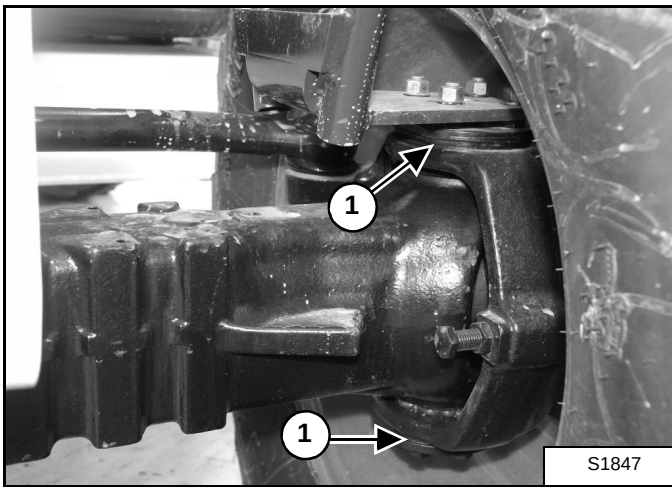


1. Axle Pivots - Top and bottom (Item 1) [Figure 10-121-1] all four wheels.

Figure 10-121-2

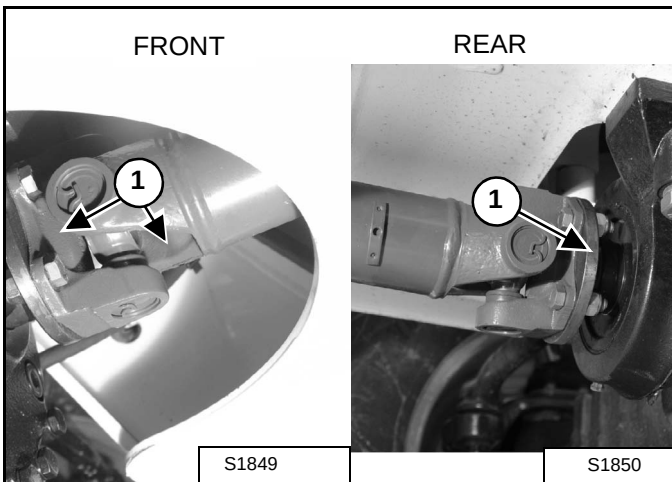


2. Universal Joints - Front and Rear (Item 1) [Figure 10-121-2] (earlier models only).

Figure 10-121-3

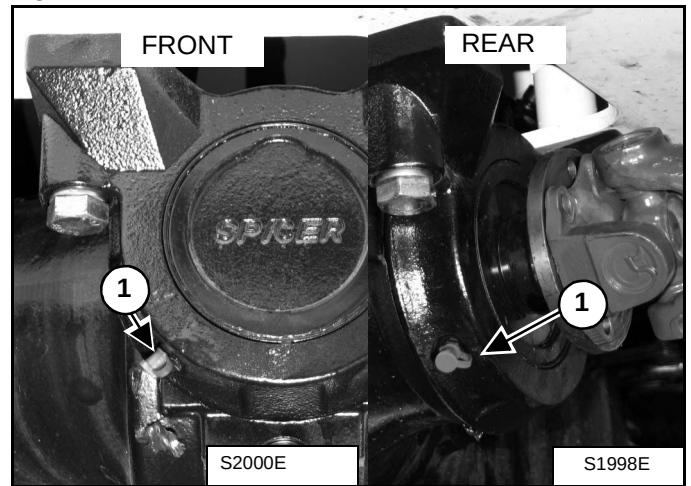

3. Axle Oscillation - Rear Axle (Item 1) [Figure 10-121-3].

Figure 10-121-4

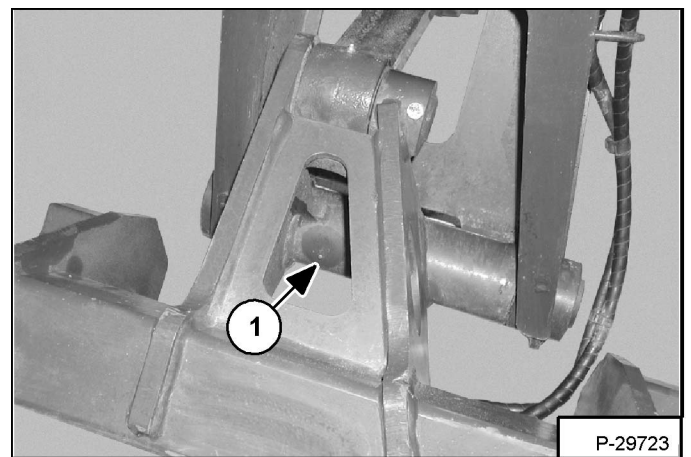


4. Attachment Frame Pivot (Item 1) [Figure 10-121-4].

LUBRICATION (CONT'D) (For S/N 362812001 and Above, S/N 362912001 and Above)


Procedure (Cont'd)

Figure 10-121-5

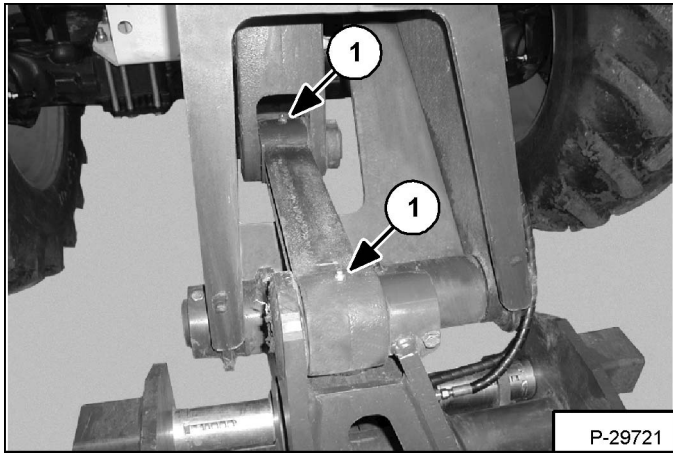


5. Lower Pivot Link (Item 1) [Figure 10-121-5].

Figure 10-121-6

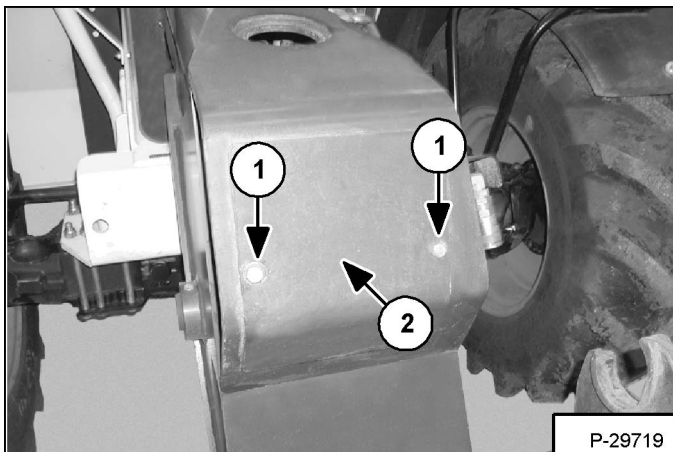


6. Remove the two cover bolts (Item 1) and cover (item 2) [Figure 10-121-6].

Figure 10-121-7

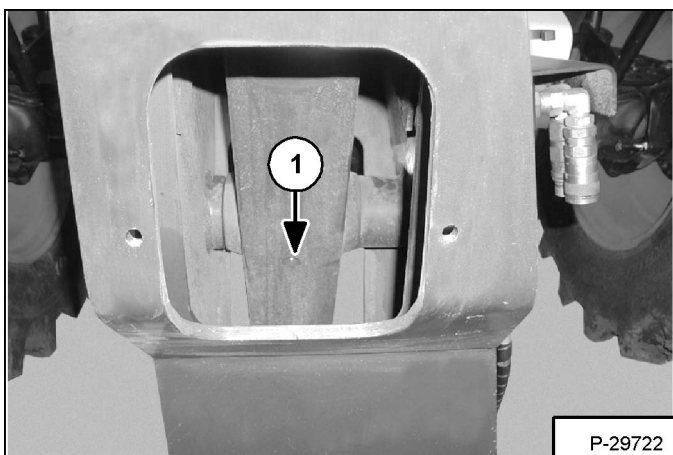

7. Main Pivot Link (Item 1) [Figure 10-121-7].

Figure 10-121-8

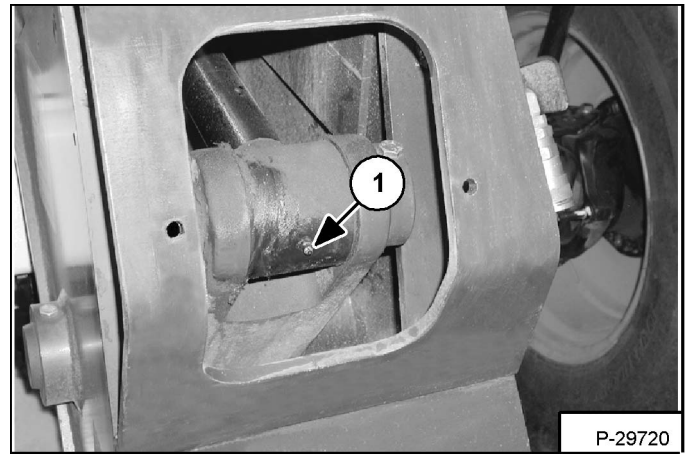


8. Extension Cylinder Rod End (Item 1) [Figure 10-121-8].

LUBRICATION (CONT'D) (For S/N 362812001 and Above, S/N 362912001 and Above)

Procedure (Cont'd)


Figure 10-121-9

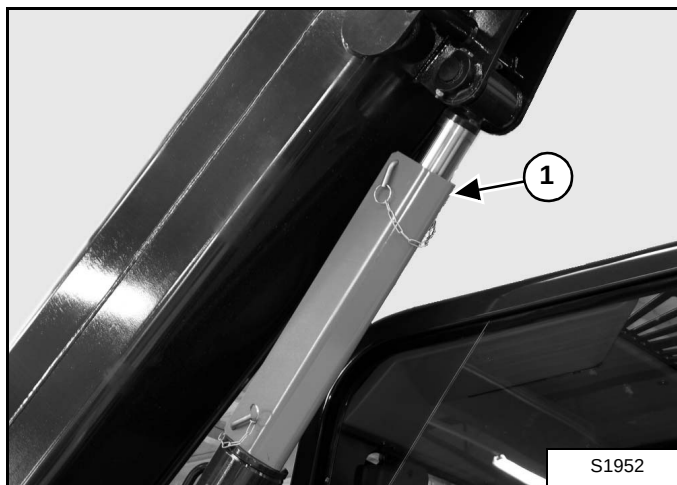

NOTE: Raise the boom and install the boom stop (See “Installing The Approved Boom Stop” on page 10-150-1) before lubricating the boom cylinder.

9. Lift Cylinder Rod End (Item 1) [Figure 10-121-9].


Figure 10-121-10

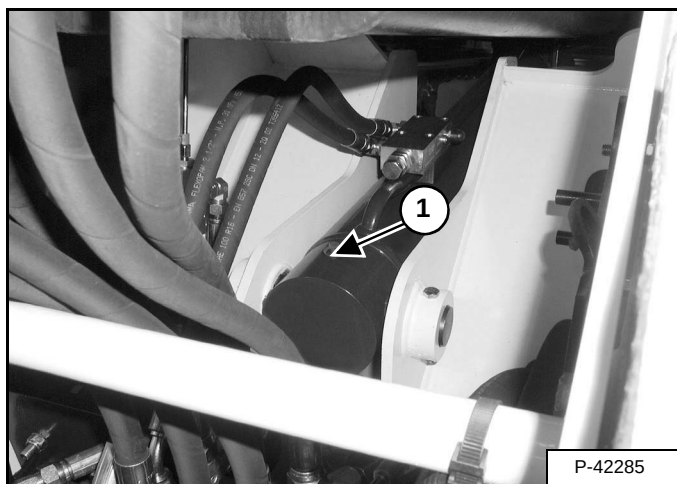

10. Lift Cylinder Base End (Item 1) [Figure 10-121-10].

NOTE: The rear cover must be removed.


Figure 10-121-11

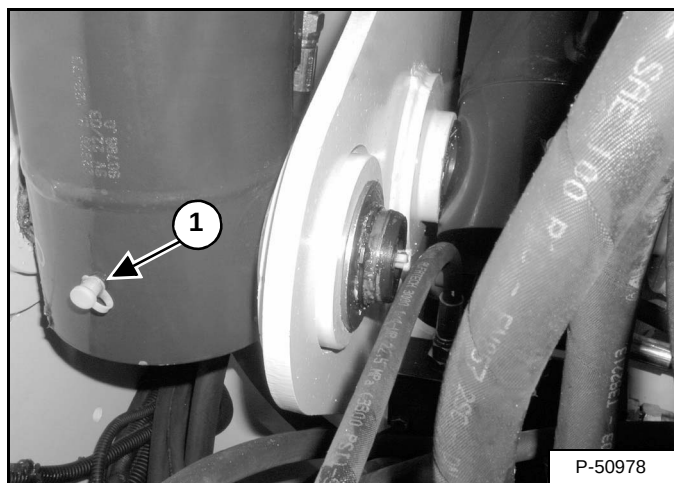

11. Base End Slave Cylinder (Item 1) [Figure 10-121-11].

NOTE: The rear cover must be removed.

Figure 10-120-1

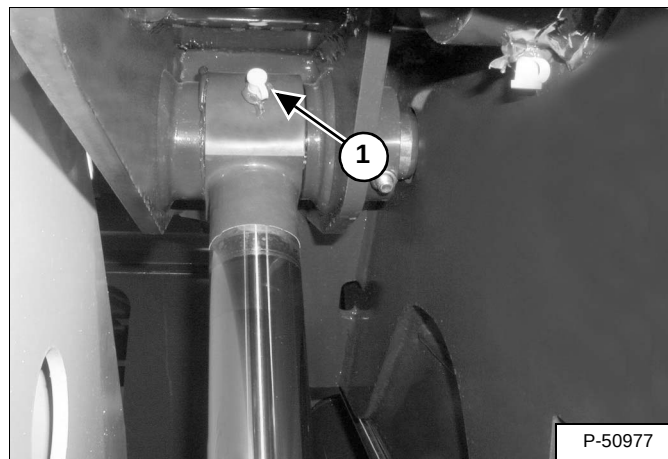


12. Slave Cylinder Pivot Bracket (Item 1) [Figure 10-120-1].

NOTE: The rear cover must be removed.

LUBRICATION (CONT'D) (For S/N 362812001 and Above, S/N 362912001 and Above)

Procedure (Cont'd)

Figure 10-121-1

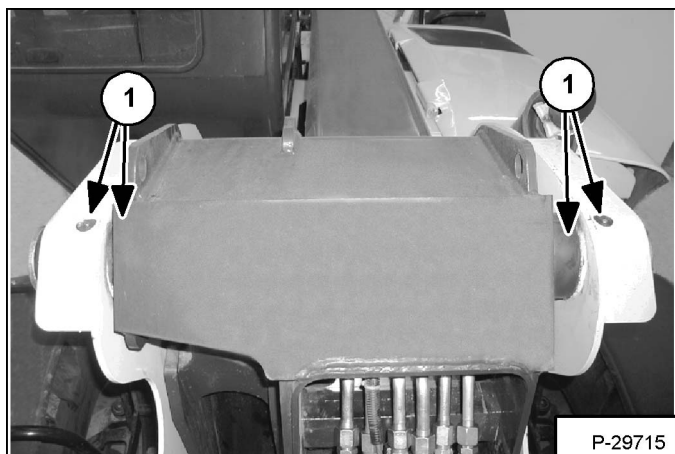


13. Boom Pivot (Item 1) [Figure 10-121-1] (Four Places).

Figure 10-121-2



14. Boom Slide [Figure 10-121-2] (Four Places).


Figure 10-121-3

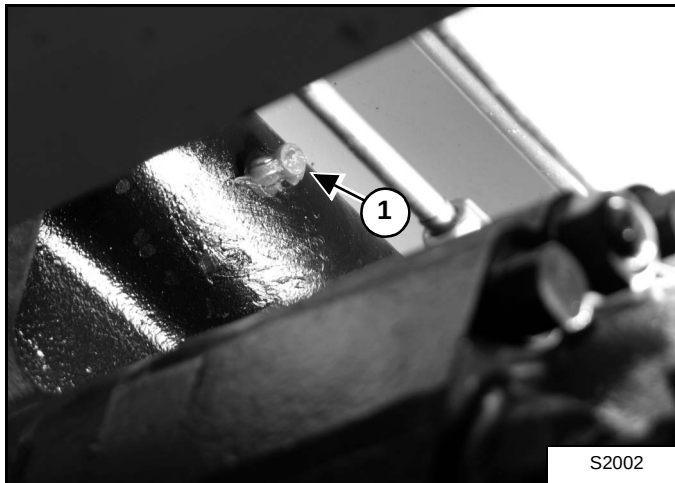

15. Axle Oscillation - Front Axle (Item 1) [Figure 10-121-

3] (With Frame Leveling Only)

Figure 10-121-4

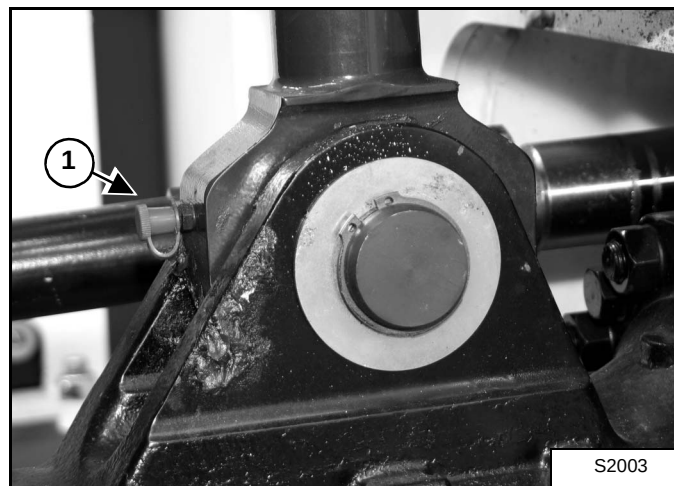


16. Axle Oscillation - Front Axle (Item 1) [Figure 10-121-4] (With Frame Leveling Only)

LUBRICATION (CONT'D) (For S/N 362812001 and Above, S/N 362912001 and Above)


Procedure (Cont'd)

Figure 10-121-5

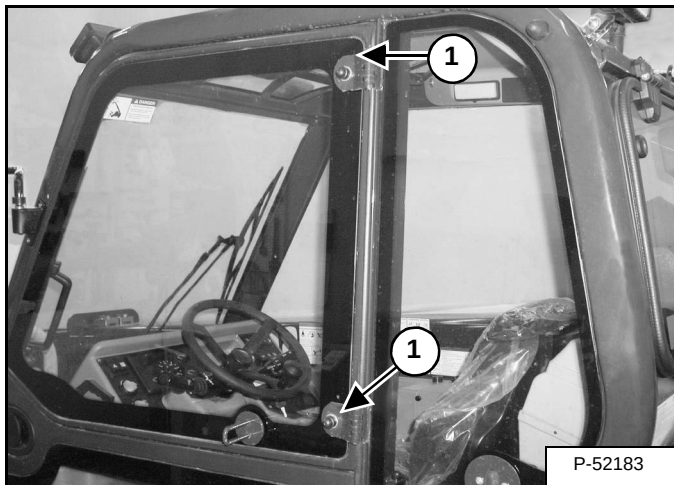


17. Cab Door Hinges (item 1) [Figure 10-121-5] (Upper).

Figure 10-121-6

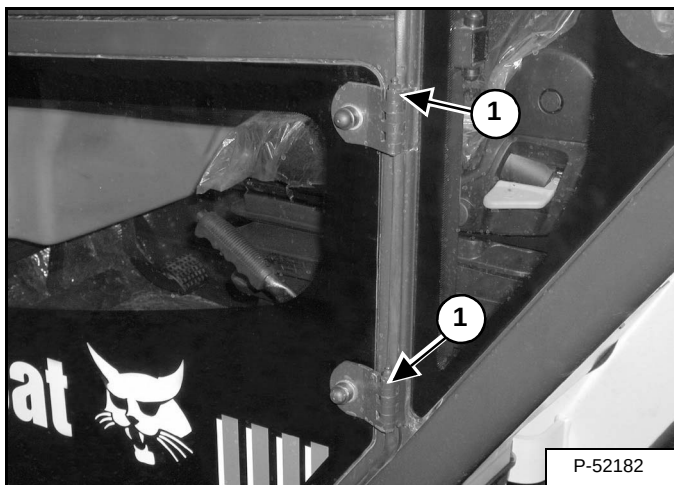

18. Cab Door Hinges (item 1) [Figure 10-121-6] (Lower).

Figure 10-121-7

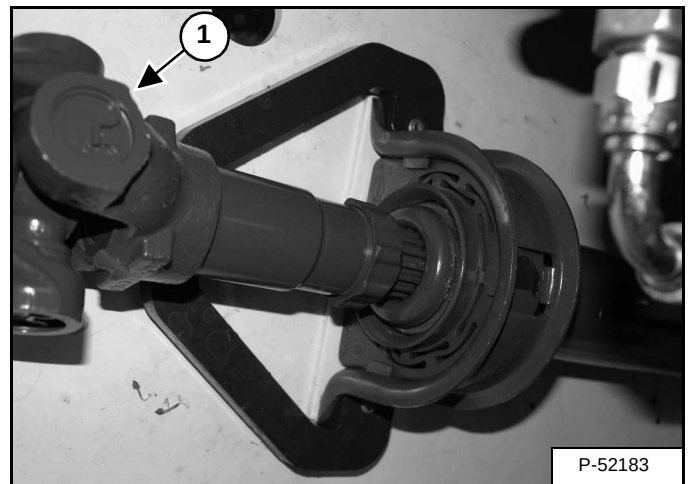

19. Universal joint (Item 1) [Figure 10-121-7]




Bobcat®

TIRE MAINTENANCE

Wheel Nuts

(For S/N 362811001 - 362812000, S/N 362911001 - 362912000):

Figure 10-130-1

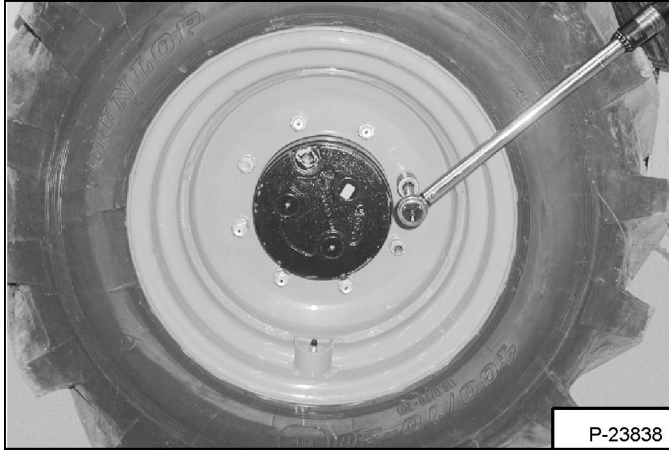

See "SERVICE SCHEDULE" on page 10-50-1 for the service interval to check the wheel nuts. The correct torque is 221 ft.-lbs. (300 Nm) torque [Figure 10-130-1].

For S/N 362812001 and Above, S/N 362912001 and Above:

Figure 10-130-2



See "SERVICE SCHEDULE" on page 10-50-1 for the service interval to check the wheel nuts. The correct torque is 221 ft.-lbs. (300 Nm) torque [Figure 10-130-2].

Tire Rotation

Check the tires regularly for wear, damage and pressure. (See "Tires" on page SPEC-10-3 for the correct tire pressure.)

Rear tires usually wear faster than front tires. To keep the wear even, move the front tires to the rear and rear tires to the front.

It is important to keep the same size tires on each side of the loader. If different sizes are used, each tire will be turning at a different rate and cause excessive wear. The tread bars of all the tires must face the same direction.

Recommended tire pressure must be maintained to avoid excessive tire wear and loss of stability and handling capability. Check for the correct pressure before operating the loader.

Tire Mounting

! WARNING

Do not inflate tires above specified pressure. Failure to use correct tire mounting procedure can cause an explosion which can result in injury or death.

W-2078-1285

Tires are to be repaired only by an authorized person using the correct procedures and type of equipment.

Tires and rims must always be checked for correct size before mounting. Check rim and tire bead for damage. The rim flange must be cleaned and free of rust. The tire bead and rim flange must be lubricated with a rubber lubricant before mounting the tire.

Avoid excessive pressure which can rupture the tire and cause serious injury or death.

During inflation of the tire, check the tire pressure frequently to avoid over inflation.



Bobcat®

SPARK ARRESTOR MUFFLER

Cleaning

See "SERVICE SCHEDULE" on page 10-50-1 for the service interval for cleaning the spark arrestor muffler.

Do not operate the machine with a defective exhaust system.

Stop the engine.

Figure 10-140-3



Remove the plug (Item 1) [Figure 10-140-3] from the bottom of the muffler.

WARNING

When the engine is running during service, the Travel Direction Lever must be in neutral and the parking brake engaged. Failure to do so can cause injury or death.

W-2397-0301

Start the engine and run for about 10 seconds while a second person, wearing safety glasses, holds a piece of wood over the outlet of the muffler.

This will force contaminants out through the clean out hole.

Stop the engine.

Install and tighten the plug.

IMPORTANT

This loader is factory equipped with a U.S.A.. Forestry Service approved spark arrestor muffler. It is necessary to do maintenance on this spark arrestor muffler to keep it in working condition. The spark arrestor muffler must be serviced by dumping the spark chamber every 100 hours of operation.

If this machine is operated on flammable forest, brush or grass covered land, it must be equipped with a spark arrestor attached to the exhaust system and maintained in working order. Failure to do so will be in violation of California State Law, Section 4442 PRC. Make reference to local laws and regulations for spark arrestor requirements.

I-2022-0595



Bobcat®


OPTIONAL APPROVED BOOM STOP

If the boom is raised for service or maintenance, use the following procedure to install and remove the boom stop.

Installing The Approved Boom Stop

- Put the Telescopic Handler on a flat, solid and level surface.
- With the operator in the seat, seat belt fastened, Travel Direction Control in neutral and the parking brake engaged, start the engine and raise the boom. Stop the engine.

Figure 10-150-1

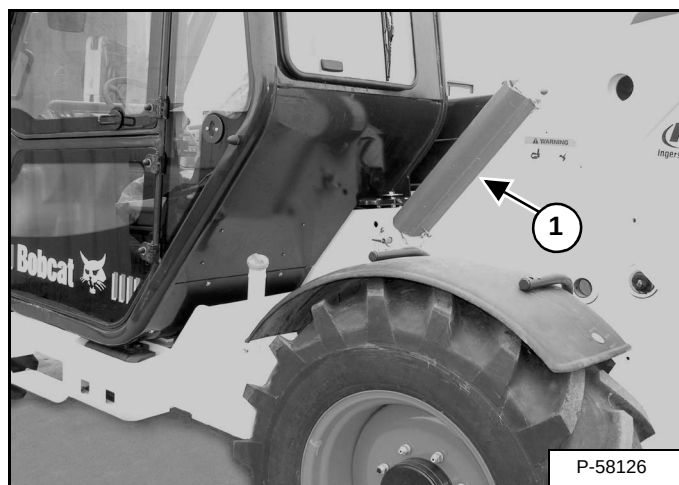

- Have a second person remove the boom stop (Item 1) [Figure 10-150-1] from the storage position.

Figure 10-150-2



- Install the boom stop over the rod of the boom cylinder [Figure 10-150-2].
- Install the pins and secure the fasteners [Figure 10-150-2].
- Start the engine and lower the boom slowly [Figure 10-150-2] so that the boom stop is held securely.

Removing The Approved Boom Stop

- Start the engine and raise the boom. Stop the engine.
- Remove the fasteners, pins and boom stop.
- Put the boom stop in the storage position and secure with pins and fasteners.
- Start the engine and lower the boom



Bobcat®

ENGINE COVER

WARNING


AVOID INJURY OR DEATH

Never service or adjust the machine when the engine is running unless instructed to do so in the manual.

W-2012-0497

Opening And Closing The Engine Cover

Figure 10-160-1

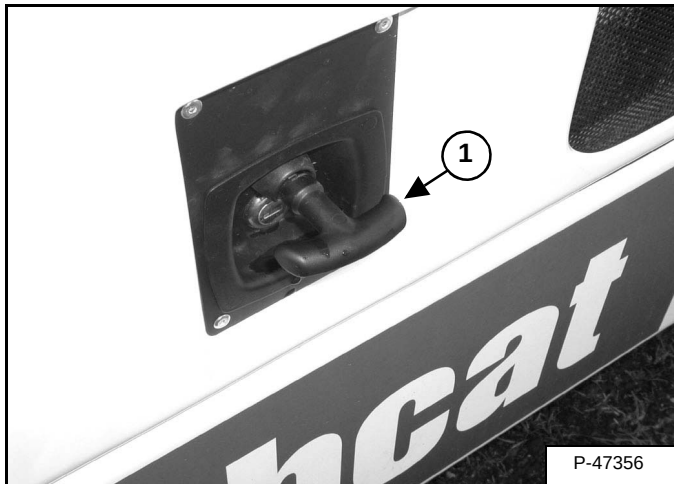

Pull up on the latch handle (Item 1) [Figure 10-160-1] and rotate counterclockwise to release latch.



Bobcat®

HYDRAULIC SYSTEM

ACCUMULATOR	20-210-1
Removal And Installation	20-210-1
BRAKE VALVE	20-120-1
Disassembly And Assembly	20-120-2
Removal And Installation	20-120-1
BUCKET POSITIONING CYLINDER	20-30-1
Assembly	20-30-9
Disassembly	20-30-5
Parts Identification	20-30-4
Removal And Installation	20-30-1
DRIVE BOX (For S/N 362811001 - 362812000, S/N 362911001 - 362912000)	20-70-1
Assembly	20-70-8
Disassembly	20-70-2
Inspection	20-70-77
Parts Identification	20-70-1
DRIVE BOX (For S/N 362812001 and Above, S/N 362912001 and Above)	20-71-1
Assembly	20-71-6
Disassembly	20-71-2
Parts Identification	20-71-1
EXTENSION CYLINDER	20-40-1
Assembly	20-40-18
Cylinder Group Removal And Installation	20-40-1
Disassembly	20-40-14
Extension Cylinder Removal And Installation	20-40-5
Parts Identification	20-40-13
Tubeline Tray Assembly	20-40-9
Tubeline Tray Disassembly	20-40-7
Upper Tubeline Installation	20-40-3
Upper Tubeline Removal	20-40-3
FAN MOTOR	20-140-1
Disassembly And Assembly (1 speed version)	20-140-6
Parts Identification	20-140-5
Removal And Installation	20-140-1
FLOW CONTROL VALVE	20-172-1
Removal And Installation	20-172-1

HYDRAULIC SYSTEM

Continued On Next Page

HYDRAULIC SYSTEM (CONT'D)

FRAME LEVELING CYLINDER	20-100-1
Assembly	20-100-10
Disassembly	20-100-5
Parts Identification	20-100-4
Removal And Installation (For S/N 362811001 - 362812000, S/N 362911001 - 362912000)	20-100-1
Removal And Installation (For S/N 362812001 and Above, S/N 362912001 and Above)	20-100-2
GEAR PUMP	20-130-1
Disassembly And Assembly	20-130-5
Parts Identification	20-130-4
Removal And Installation	20-130-1
HYDRAULIC CONTROL VALVE (CONT'D)	20-170-11
Auxiliary/Frame Leveling Valve Section Disassembly And Assembly	20-170-40
Disassembly And Assembly	20-170-16
End Housing Disassembly And Assembly	20-170-17
Inlet-Outlet Valve Section Disassembly And Assembly	20-170-50
Lifting Valve Section Disassembly And Assembly	20-170-18
Parts Identification	20-170-15
Removal And Installation	20-170-11
Telescoping Valve Section Disassembly And Assembly	20-170-28
Tilting Valve Section Disassembly And Assembly	20-170-23
HYDRAULIC RESERVOIR	20-150-1
Removal And Installation	20-150-1
HYDRAULIC SYSTEM INFORMATION	20-10-1
Tightening Procedures	20-10-5
Troubleshooting Chart	20-10-4
JOYSTICK	20-180-1
Removal And Installation	20-180-1
LIFT CYLINDER	20-20-1
Assembly	20-20-11
Disassembly	20-20-6
Parts Identification	20-20-5
Removal And Installation	20-20-1
MAIN RELIEF VALVE	20-80-1
MAIN RELIEF VALVE (CONT'D)	20-80-3
Testing And Adjustment	20-80-1

Continued On Next Page

HYDRAULIC SYSTEM (CONT'D)

PARKING BRAKE.	20-190-1
Parking Brake Valve Disassembly And Assembly.	20-190-2
Parking Brake Valve Removal And Installation	20-190-1
PORT RELIEF VALVES	20-171-1
Adjustment Procedure.	20-171-1
PILOT PRESSURE LOCK OUT VALVE.	20-200-1
Disassembly And Assembly	20-200-3
Removal And Installation.	20-200-2
Testing.	20-200-1
QUICK TACH CYLINDER.	20-90-1
Assembly.	20-90-7
Disassembly	20-90-4
Parts Identification.	20-90-3
Removal And Installation.	20-90-1
STEERING CYLINDER (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000)	20-60-1
Assembly.	20-60-7
Disassembly	20-60-4
Parts Identification.	20-60-3
Removal And Installation.	20-60-1
STEERING CYLINDER (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above)	20-61-1
Assembling the Steering Cylinder	20-61-7
Disassembling the Steering Cylinder.	20-61-5
Removing the Steering Cylinder	20-61-1
Installing the Steering Cylinder	20-61-3
STEERING CYLINDER (REAR) (FOR S/N 362811001 - 362812000, S/N 362911001 - 362912000)	20-62-1
Assembly.	20-62-7
Disassembly	20-62-4
Parts Identification.	20-62-3
Removal And Installation.	20-62-1

Continued On Next Page

HYDRAULIC SYSTEM (CONT'D)

STEERING CYLINDER (REAR) (FOR S/N 362812001 AND ABOVE, S/N 362912001 AND ABOVE)	20-63-1
Assembling the Steering Cylinder	20-63-7
Disassembling the Steering Cylinder	20-63-5
Removing the Steering Cylinder	20-63-1
Installing the Steering Cylinder	20-63-3
 STEERING MODE VALVE BLOCK	 20-110-1
Assembly	20-110-6
Disassembly	20-110-4
Parts Identification	20-110-3
Removal And Installation	20-110-1
Solenoid Testing	20-110-6
 STEERING VALVE	 20-160-1
Assembly	20-160-9
Disassembly	20-160-3
Inspection	20-160-9
Parts Identification	20-160-2
Removal And Installation	20-160-1
 TILT CYLINDER	 20-50-1
Assembly	20-50-7
Disassembly	20-50-3
Parts Identification	20-50-2
Removal And Installation	20-50-1
 OPTIONAL TOW VALVE	 20-220-1
Disassembly And Assembly	20-220-2
Removal And Installation	20-220-1

GLOSSARY OF HYDRAULIC/HYDROSTATIC SYMBOLS

SYMBOL DESCRIPTION

SYMBOL DESCRIPTION

FLOW LINES and CONNECTIONS

BASIC and MISCELLANEOUS SYMBOLS

 WORKING CIRCUITS - Continuous, Solid Line - Working (Main) Line, Return Line (line conducting fluid from working devices to the reservoir) and Feed Line (main line conductor)

 
 RESTRICTION - Line with Fixed Restriction - Affected by Viscosity (property of resistance to flowing fluid)

 PILOT PRESSURE - Dashed Line - Pilot Line (line which conducts control fluid)

 VARIABLE ADJUSTMENT RESTRICTION - Regulated or Variable Restriction


 DRAIN CIRCUITS - Dotted Line - Drain Line (drain or bleed line - line conducting fluid from a component housing to the reservoir)


 TEMPERATURE CONTROL - (indication of temperature)

 COMPONENTS - Long Chain Line - Enclosure outline for several components assembled in one unit

 TEMPERATURE INDICATOR - (temperature measurement - thermometer)

 
 FILTER (strainer or screen) - For fluid conditioning

  MECHANICAL CONNECTIONS - Double Line (Shaft, Lever, Piston Rod)


 VENTED AND FILTERED RESERVOIR (reservoir open to atmosphere)

 OIL COOLER (heat exchanger) - The arrows in the diamond indicate the extraction of heat (heat dissipation)

 
 CONNECTED JUNCTION OF OIL LINES (Flow Line Connection)

 PRESSURE SENSOR - Varies electric signal with pressure

  OIL LINES CROSSING (NOT Connected)

 DIFFERENTIAL PRESSURE SWITCH - Switch activates when pressure difference reaches specified level

  COUPLER - Quick-Acting Coupling (uncoupled, closed by non-return valve)

 PRESSURE SWITCH - Switch activates when pressure reaches specified level

 MUFFLER (silencer) - Reduces noise

mc-2340

HYDRAULIC SYSTEM INFORMATION (CONT'D)

GLOSSARY OF HYDRAULIC/HYDROSTATIC SYMBOLS

SYMBOL DESCRIPTION

CYLINDER: Equipment to convert hydraulic energy into linear energy and in which the fluid pressure operates alternately in both directions (forward and backward strokes)



DOUBLE ACTING HYDRAULIC CYLINDER, UNEQUAL DISPLACEMENT - With single piston rod



DOUBLE ACTING HYDRAULIC CYLINDER, UNEQUAL DISPLACEMENT and CUSHION ON ONE END - With single piston rod

PUMP: To convert mechanical energy into hydraulic energy



FIXED CAPACITY DISPLACEMENT HYDRAULIC PUMP - With one direction of flow



VARIABLE CAPACITY DISPLACEMENT BIDIRECTIONAL HYDRAULIC PUMP - With two directions of flow (bidirectional)

MOTOR: To convert hydraulic energy into rotary mechanical energy



FIXED CAPACITY DISPLACEMENT BIDIRECTIONAL HYDRAULIC MOTOR - With two directions of flow (bidirectional)

SYMBOL DESCRIPTION

CONTROL MECHANISMS



CONTROL VALVE WITH DETENT (Holds Valve in Position) - device for maintaining a given position (mechanical)



CONTROL VALVE ACTIVATED BY A PULL BUTTON (manual)



CONTROL VALVE ACTIVATED BY A PUSH-PULL BUTTON (manual)



CONTROL VALVE ACTIVATED BY A LEVER (manual)



CONTROL VALVE ACTIVATED BY A PEDAL (manual)



CONTROL VALVE WITH SPRING RETURN (mechanical)



CONTROL VALVE ACTIVATED BY AN ELECTRIC SOLENOID (electrical)



CONTROL VALVE ACTIVATED BY PILOT PRESSURE (indirect control, pilot actuated by application of pressure)

 
mc-2340

HYDRAULIC SYSTEM INFORMATION (CONT'D)


GLOSSARY OF HYDRAULIC/HYDROSTATIC SYMBOLS

SYMBOL DESCRIPTION


NON-RETURN VALVE, SHUTTLE VALVE: Valve which allows free flow in one direction only



 
NON-RETURN VALVE (Check Valve) - Used as Replenishing Valve, Load Check Valve or Anticavitation Valve - Opens if the Inlet pressure is higher than the Outlet pressure. Often contains internal spring which has NO significant pressure value



 
SPRING LOADED VALVE (Bypass Valve) - Opens if the Inlet pressure is greater than the Outlet pressure plus the spring pressure



 
PILOT CONTROLLED NON-RETURN VALVE - It is possible to open the valve by pilot pressure



 SHUTTLE VALVE - The Inlet port connected to the higher pressure is automatically connected to the Outlet port while the other Inlet port is closed



RELIEF VALVE - When the Inlet pressure overcomes the opposing force of the spring, the valve opens permitting flow from the Outlet port.

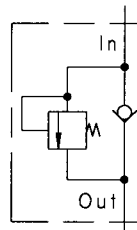

RELIEF/REPLENISHING VALVE or RELIEF/ANTICAVITATION VALVE - When the Inlet pressure overcomes the opposing force of the spring, the valve opens permitting flow from the Outlet port - Allows free flow in the opposite direction

DUAL PRESSURE RELIEF VALVE - When the inlet pressure overcomes the opposing force of the spring, the valve opens permitting flow from the Outlet port. Pilot pressure provides a second pressure value.

DIRECTIONAL CONTROL VALVE: Valve providing for the opening (fully or restricted) or the closing of one or more flow paths (represented by several squares)



 
TWO PORTS and CLOSED FLOW PATHS



SOLENOID ACTIVATED DIRECTIONAL CONTROL VALVE (Two Position) - controlled by an electric solenoid (with return spring)



PILOT ACTIVATED DIRECTIONAL CONTROL VALVE (Two Position) - controlled by pressure (with return spring)



ONE WAY RESTRICTOR VALVE (Non-Return Valve with Restriction) - Unit allowing free flow in one direction but restricted flow in the other direction



TOW VALVE - Normally in closed position

mc-2340

HYDRAULIC SYSTEM INFORMATION (CONT'D)**Troubleshooting Chart**

The following troubleshooting chart is provided for assistance in locating and correcting problems which are most common. Many of the recommended procedures must be done by authorized Bobcat Service Personnel only.

**WARNING**

Check for correct function after adjustments, repairs or service. Failure to make correct repairs or adjustments can cause injury or death.

W-2004-1285

PROBLEM	CAUSE
The hydraulic system will not operate.	1, 2, 3, 6
The hydraulic oil temperature warning light comes ON when hydraulics are operating.	1, 2
Slow hydraulic system action.	1, 2, 4, 8
Hydraulic action is not smooth.	1, 3, 4, 5
Boom goes up slowly at full engine RPM.	1, 2, 4, 5, 6, 7
The boom comes down with the lever in neutral position.	7, 8, 9

KEY TO CORRECT THE CAUSE

1. The fluid level is not correct..
2. The hydraulic pump has damage.
3. Relief valve is not at the correct pressure.
4. Suction leak on the inlet side of the hydraulic pump.
5. Fluid is cold. Wrong viscosity fluid. (See "Capacities" on page SPEC-10-3 for type of fluids.)
6. Using the machine for more than its rated capacity.
7. Internal leak in the lift cylinder.
8. External leak from the cylinder(s).
9. Damaged lift spool.

HYDRAULIC SYSTEM INFORMATION (CONT'D)

Tightening Procedures

IMPORTANT

When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.

I-2003-0888

To tighten the hydraulic fittings, tubelines etc. See "HYDRAULIC CONNECTION SPECIFICATIONS" on page SPEC-50-1, for the correct procedure and torque.

WARNING

Hydraulic fluid escaping under pressure can have sufficient force to enter a person's body by penetrating the skin. This can cause serious injury and possible death if proper medical treatment by a physician familiar with this injury is not received immediately.

W-2145-0290



Bobcat®

LIFT CYLINDER


Removal And Installation

Figure 20-20-1




Lower the boom onto adequate stands or blocks as shown [Figure 20-20-1].

Figure 20-20-2

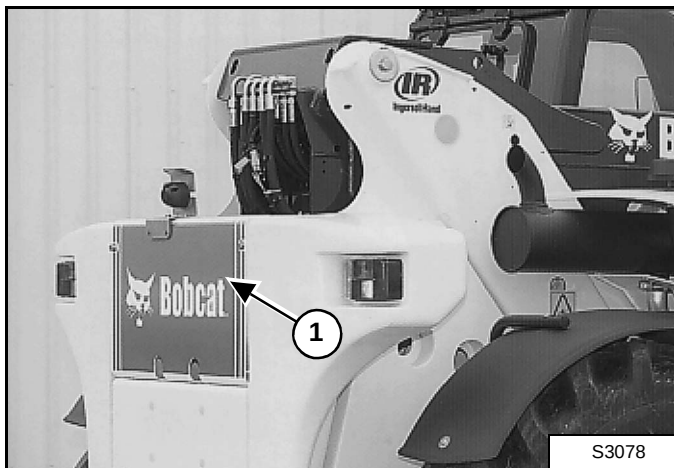


Remove the rear cover (Item 1) [Figure 20-20-2] from the machine.

Figure 20-20-3

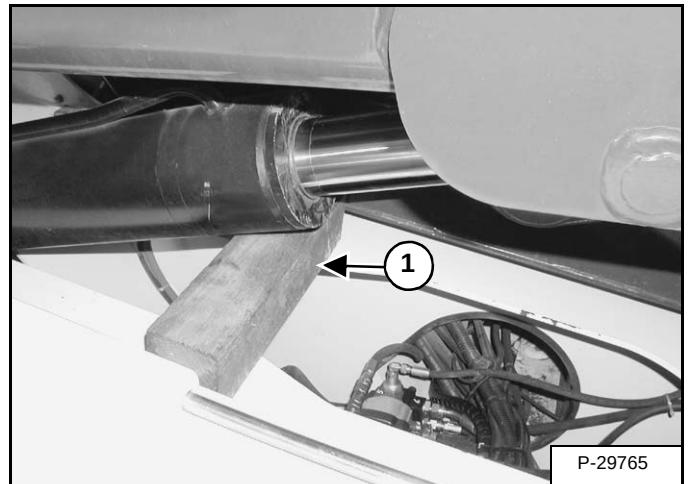

Place a wood block (Item 1) [Figure 20-20-3] under the lift cylinder.

Figure 20-20-4

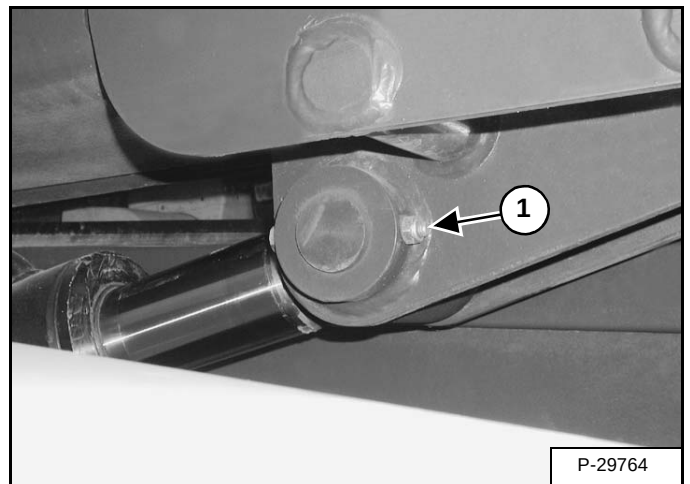


Remove the pivot pin retainer bolt (Item 1) [Figure 20-20-4] from the rod end.

LIFT CYLINDER (CONT'D)

Removal And Installation (Cont'd)


Figure 20-20-5

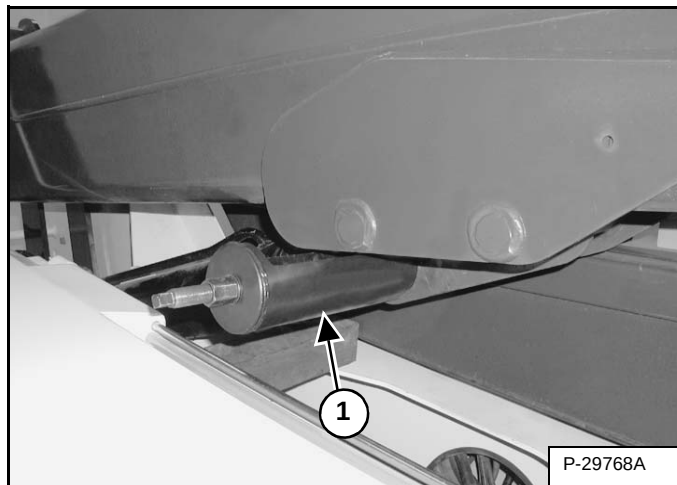

Remove the upper pivot pin using a pin removal tool (Item 1) [Figure 20-20-5].


NOTE: If a nut must be welded onto the pin for removal the following three steps must be performed.

Figure 20-20-6

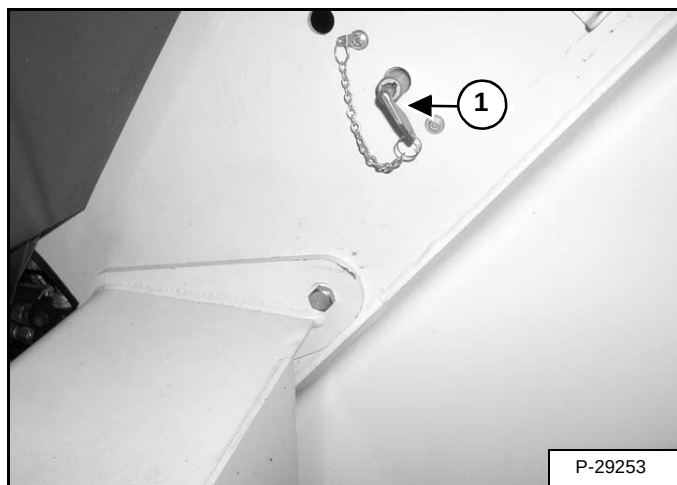


1. Rotate the battery disconnect switch (Item 1) [Figure 20-20-6] to the right to disconnect the power supply from the battery.

Figure 20-20-7

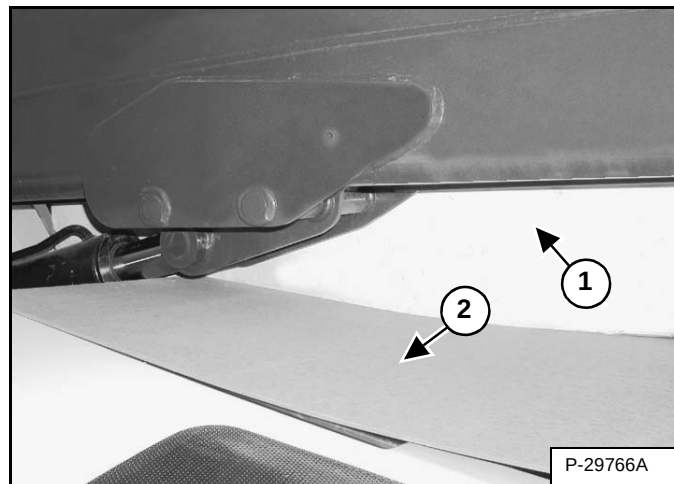

2. The side window (Item 1) and frame opening (Item 2) [Figure 20-20-7] must be protected from sparks.

Figure 20-20-8

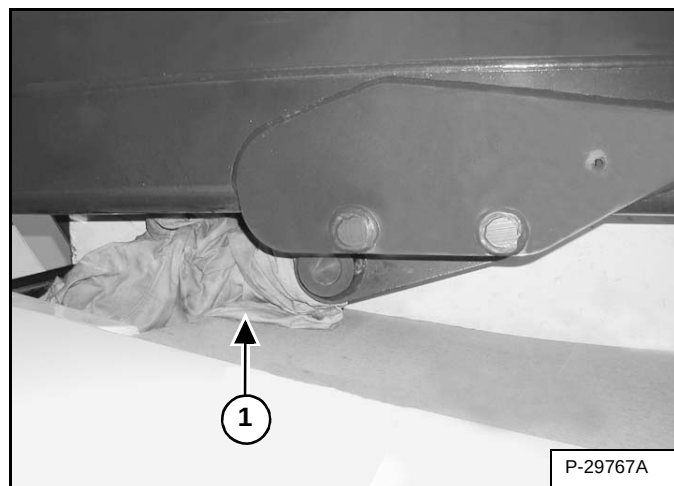


3. The cylinder rod must be wrapped with a damp welding blanket (Item 1) [Figure 20-20-8] to prevent damage.

LIFT CYLINDER (CONT'D)


Removal And Installation (Cont'd)

Figure 20-20-9

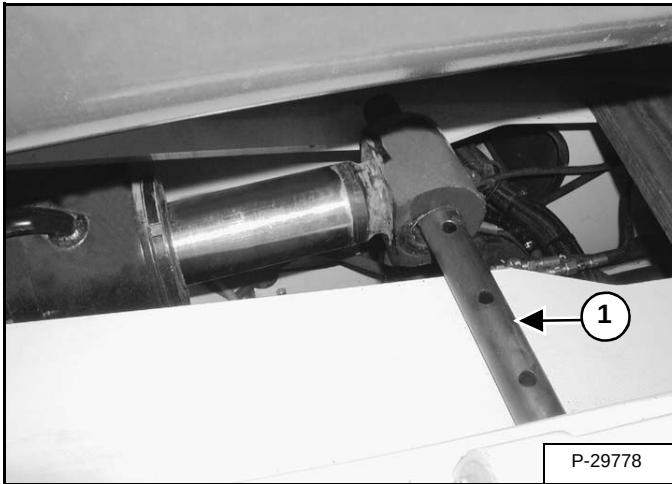

After the upper pivot pin has been removed, the rod end of the cylinder should be lowered onto the center frame with a pipe (Item 1) [Figure 20-20-9] positioned as shown.

Figure 20-20-10

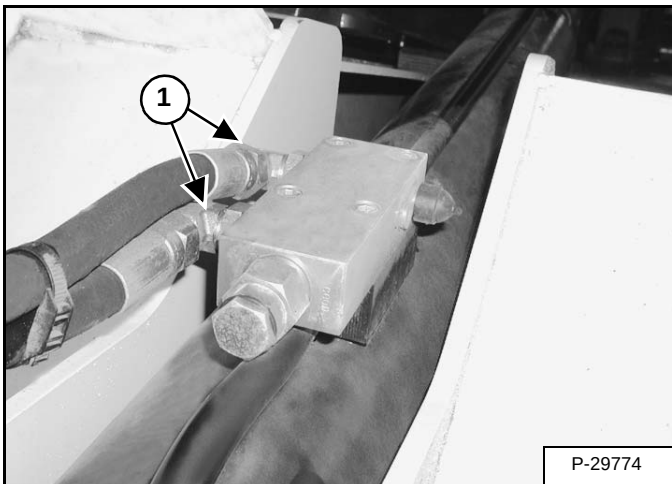

Remove the two hoses (Item 1) [Figure 20-20-10] from the lift lock on the lift cylinder.


NOTE: Mark all hoses for correct installation.

IMPORTANT

When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.


I-2003-0888

Figure 20-20-11

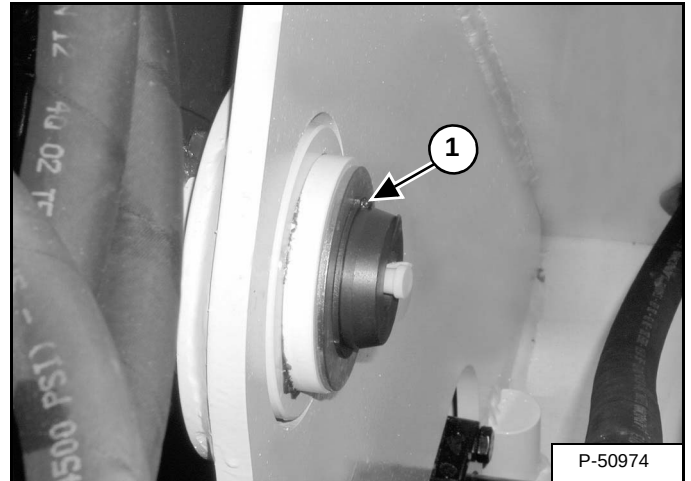

Remove the base end pivot pin snap ring (Item 1) [Figure 20-20-11].

Figure 20-20-12

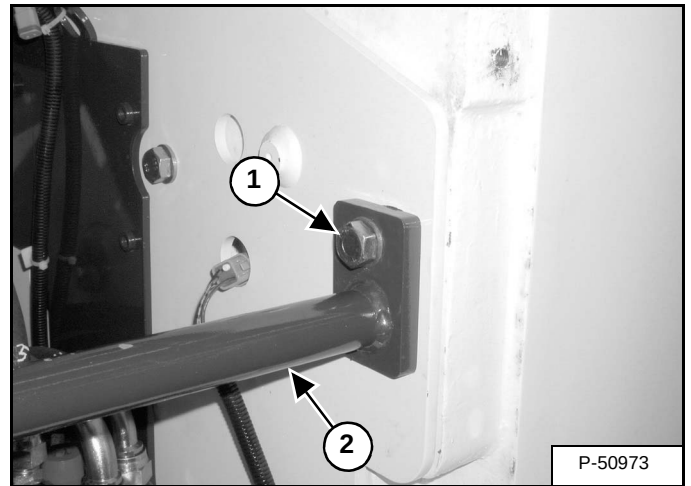


Remove the bolt (Item 1) (both sides) and remove the cross brace (Item 2) [Figure 20-20-12].

Installation: Tighten the bolt to 255 ft.-lbs. (345 Nm) torque.

LIFT CYLINDER (CONT'D)


Removal And Installation (Cont'd)

Figure 20-20-13

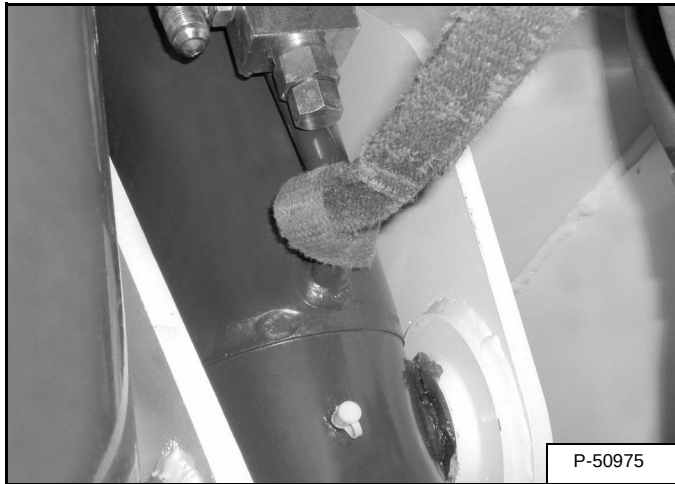

Lift and support the base end of the cylinder [Figure 20-20-13].

Figure 20-20-14

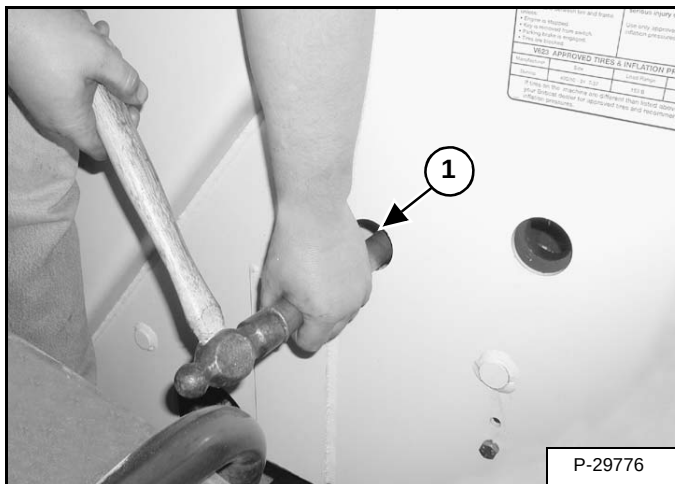

Remove the base end pivot pin (Item 1) [Figure 20-20-14].

Figure 20-20-15




Lift and remove the cylinder [Figure 20-20-15].

LIFT CYLINDER (CONT'D)

Parts Identification

1. Housing
2. Bushing
3. Spacer
4. Grease Fitting
5. Wiper
6. Wear Ring
7. Seal
8. O-ring
9. Rod
10. Head
11. Piston
12. Lock Washer
13. Nut

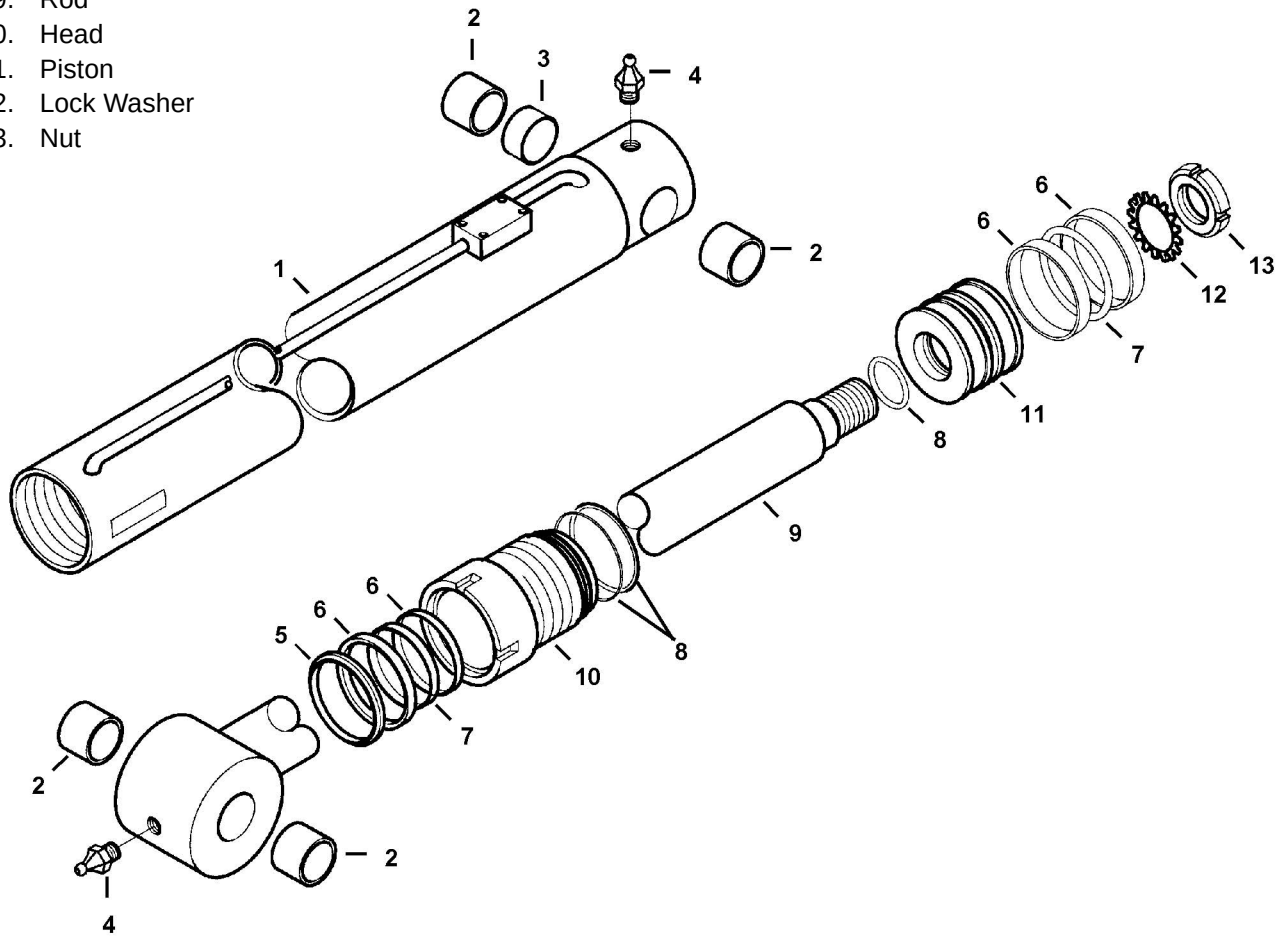


B-19851

LIFT CYLINDER (CONT'D)

Disassembly

Figure 20-20-16

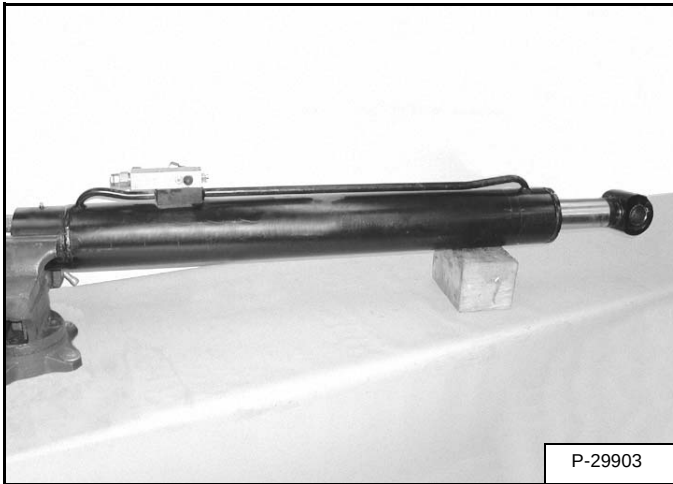


Use the following tools to disassemble the cylinders:

MEL1354-Spanner Wrench
MEL1076-Cylinder Wrench


Put the cylinder in a vise [Figure 20-20-16].

Figure 20-20-17

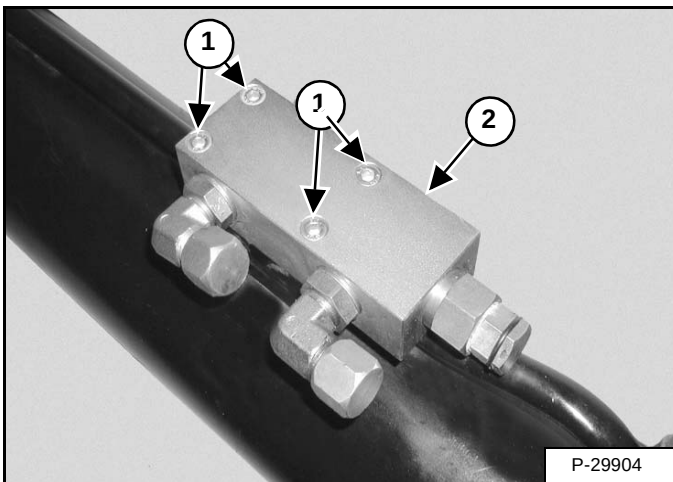


Remove the four bolts (Item 1) and remove the lift lock (Item 2) [Figure 20-20-17].

Figure 20-20-18

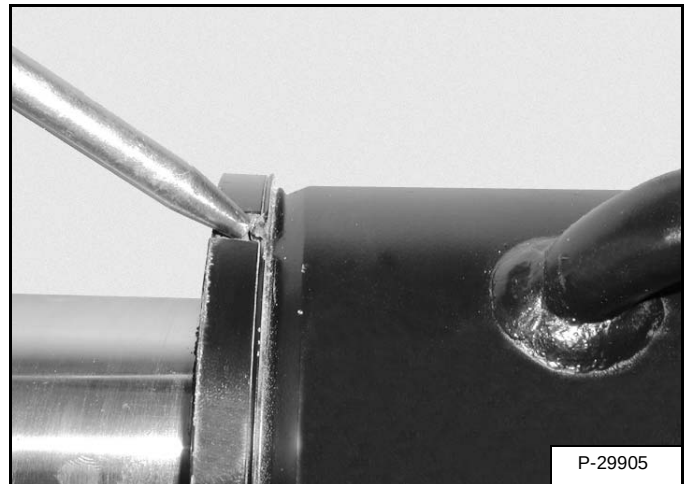

Carefully peen the lock ring from the head gland [Figure 20-20-18].

Figure 20-20-19

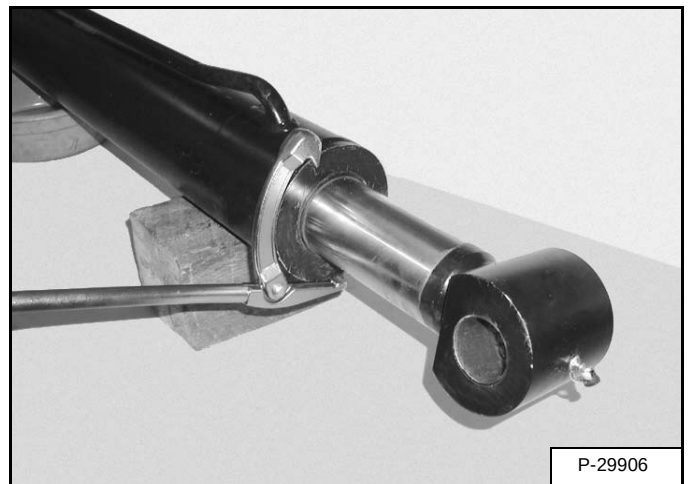


Use a spanner wrench to loosen the head gland [Figure 20-20-19].

LIFT CYLINDER (CONT'D)


Disassembly (Cont'd)

Figure 20-20-20

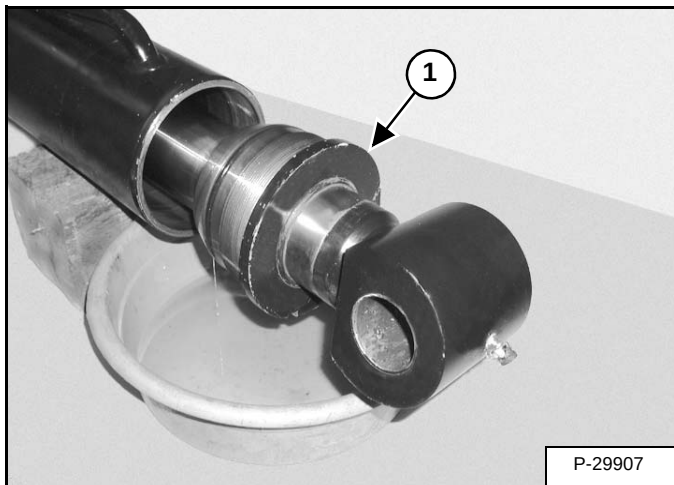


Remove the rod assembly (Item 1) [Figure 20-20-20] from the housing.

Figure 20-20-21

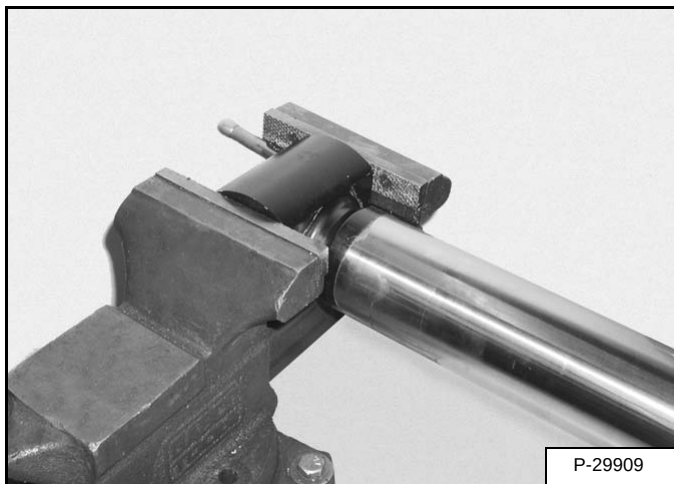


Put the rod end of the cylinder in a vise [Figure 20-20-21].

Figure 20-20-22

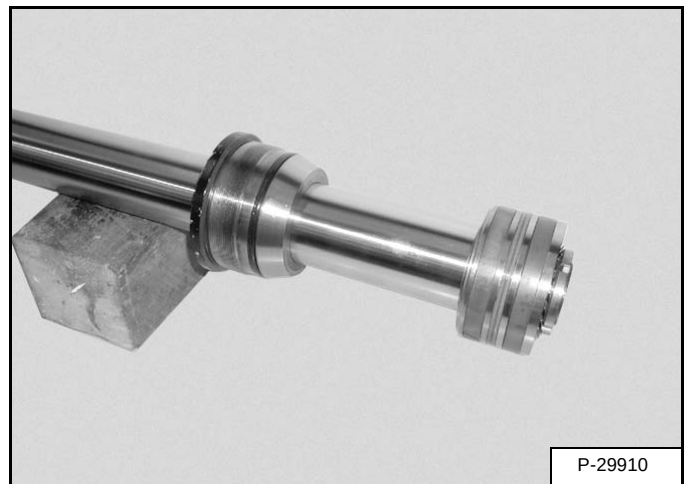

Support the cylinder rod on a wood block [Figure 20-20-22].

Figure 20-20-23

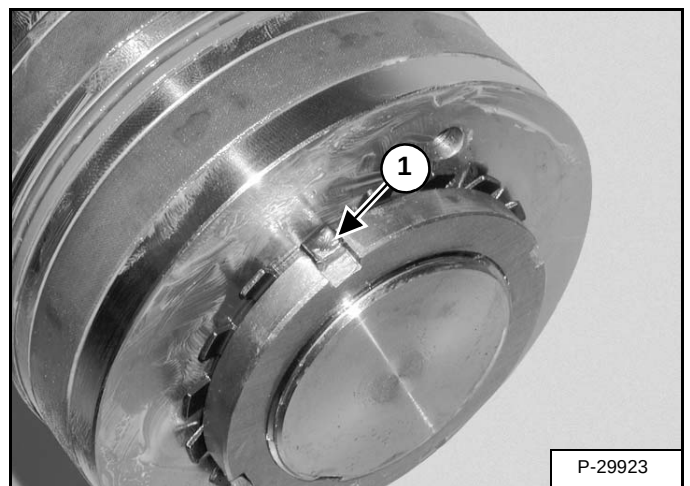

Carefully peen the lock ring tab (Item 1) [Figure 20-20-23] up and out of the lock nut groove.

LIFT CYLINDER (CONT'D)


Disassembly (Cont'd)

Figure 20-20-24




Remove the lock nut from the cylinder rod [Figure 20-20-24] using a cylinder wrench.

Figure 20-20-25

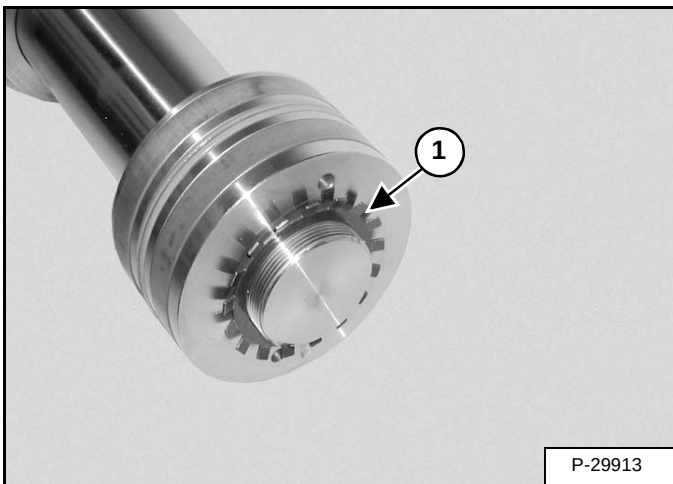


Remove the lock ring (Item 1) [Figure 20-20-25].

Figure 20-20-26

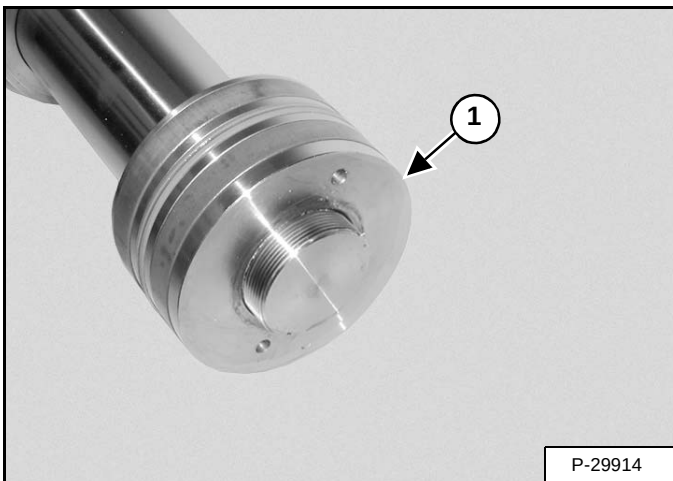

Remove the piston (Item 1) [Figure 20-20-26] from the rod.

Figure 20-20-27

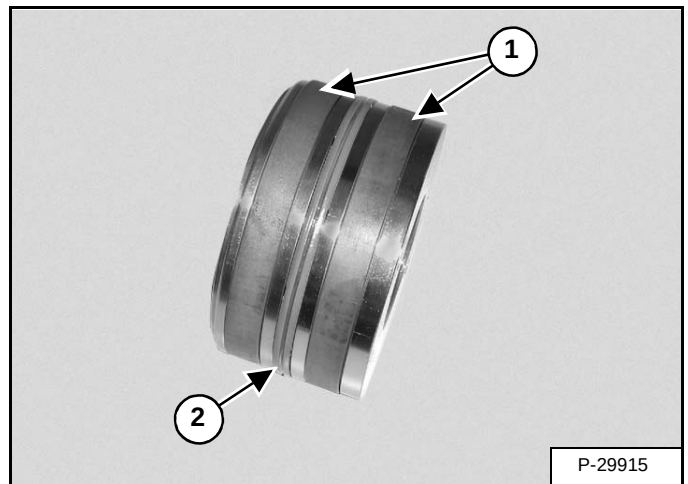


Remove the two wear rings (Item 1) and seal (Item 2) [Figure 20-20-27] from the piston.

LIFT CYLINDER (CONT'D)


Disassembly (Cont'd)

Figure 20-20-28

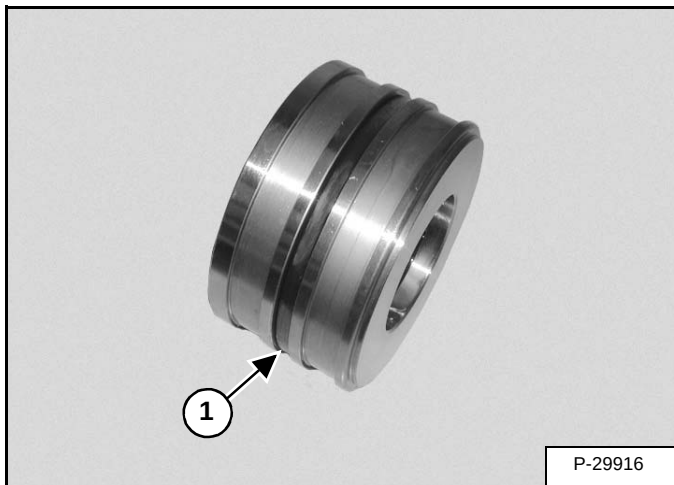


Remove the expander O-ring (Item 1) [Figure 20-20-28].

Figure 20-20-29

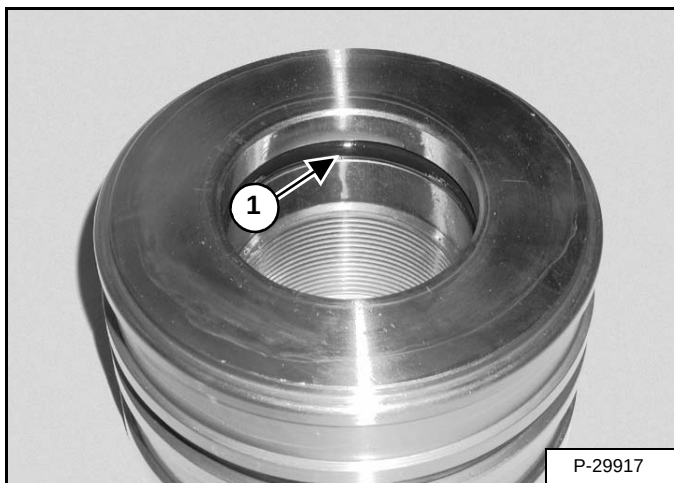


Remove the O-ring (Item 1) [Figure 20-20-29] from the piston.

Figure 20-20-30

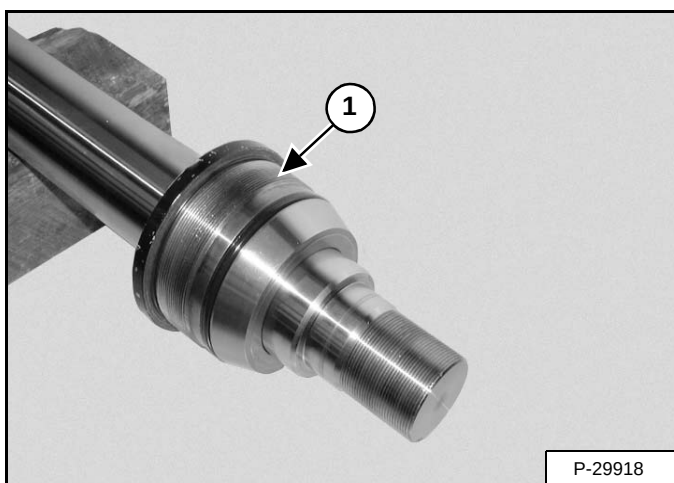

Remove the head gland (Item 1) [Figure 20-20-30] from the rod.

Figure 20-20-31

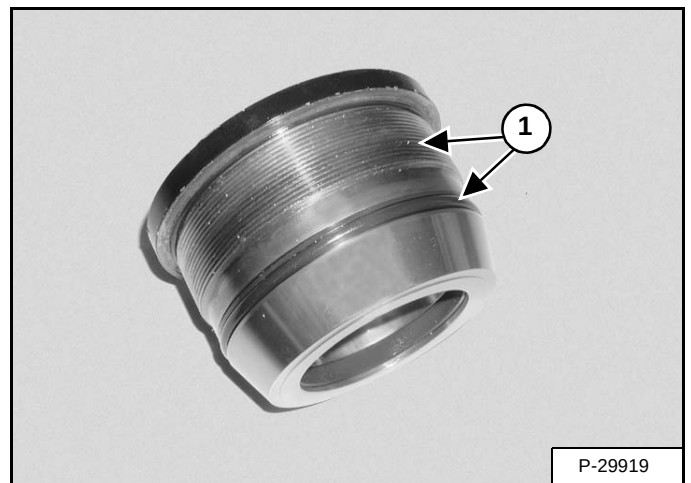


Remove the two O-rings (Item 1) [Figure 20-20-31] from the head gland.

LIFT CYLINDER (CONT'D)

Disassembly (Cont'd)

Figure 20-20-32

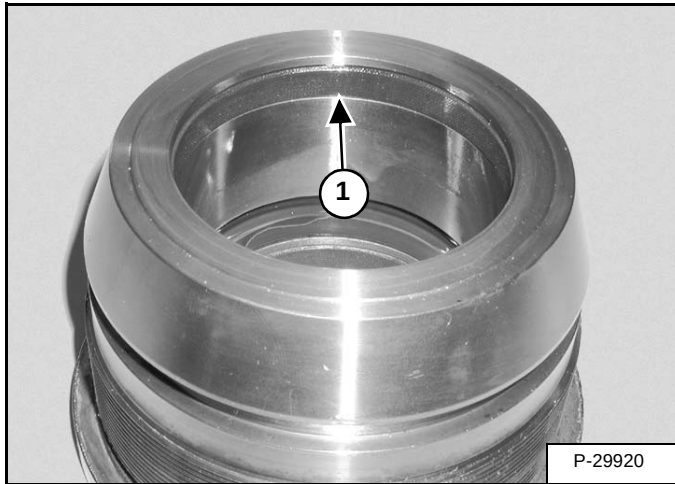

Remove the wear ring (Item 1) [Figure 20-20-32].

Figure 20-20-33



Remove seal (Item 1) wear ring (Item 2) and wiper (Item 3) [Figure 20-20-32] from the head gland.

LIFT CYLINDER (CONT'D)

Assembly

Use the following tools to assemble the cylinders:


MEL1354-Spanner Wrench
MEL1076-Cylinder Wrench
MEL1033-Rod Seal Installation Tool

Wash the cylinder parts in solvent and dry with compressed air.

Inspect the cylinder parts for nicks, scratches or other damage. Replace any damaged parts.


Lubricate all O-rings and seals with hydraulic oil during installation. Always use new O-rings and seals.

Figure 20-20-34

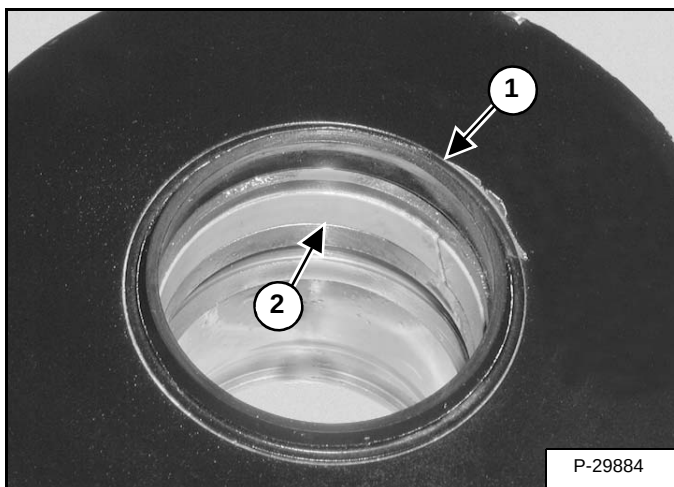


Install the wiper (Item 1) and wear ring (Item 2) [Figure 20-20-34] in the head gland.

Figure 20-20-35

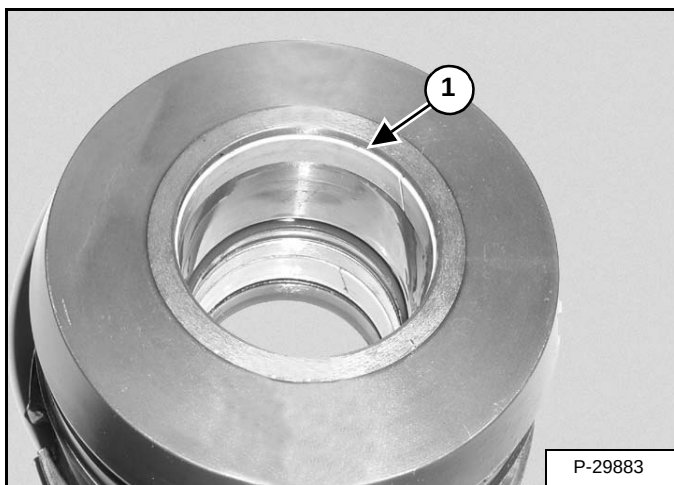

Install the wear ring (Item 1) [Figure 20-20-35].


Figure 20-20-36

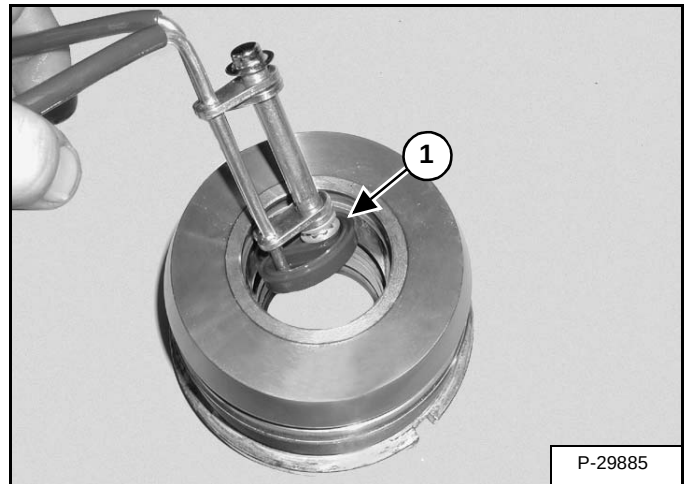

Install the center seal (Item 1) [Figure 20-20-36].

NOTE: The groove in the seal must point away from the wiper seal (Item 1) [Figure 20-20-34].

Figure 20-20-37

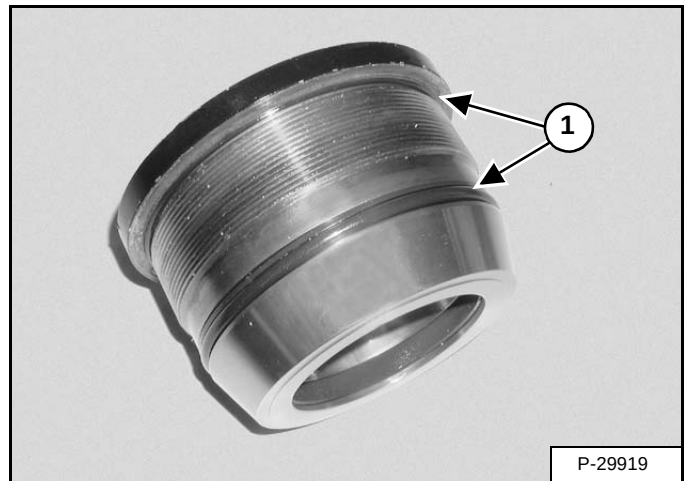


Install the two O-rings (Item 1) [Figure 20-20-37].

LIFT CYLINDER (CONT'D)


Assembly (Cont'd)

Figure 20-20-38

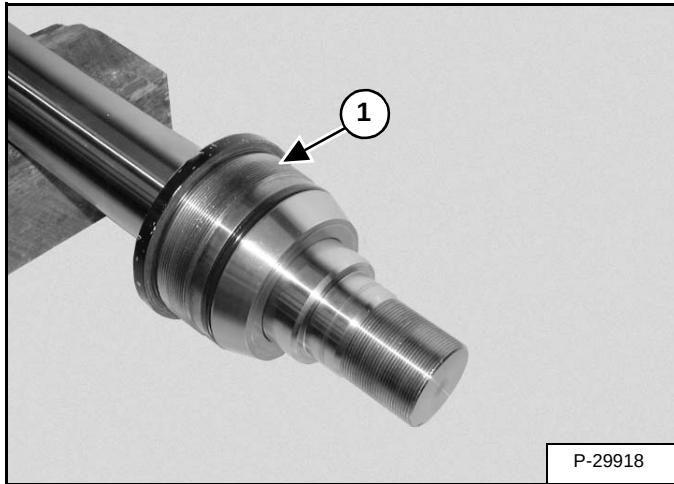


Install the head gland (Item 1) [Figure 20-20-38] onto the rod.

Figure 20-20-39

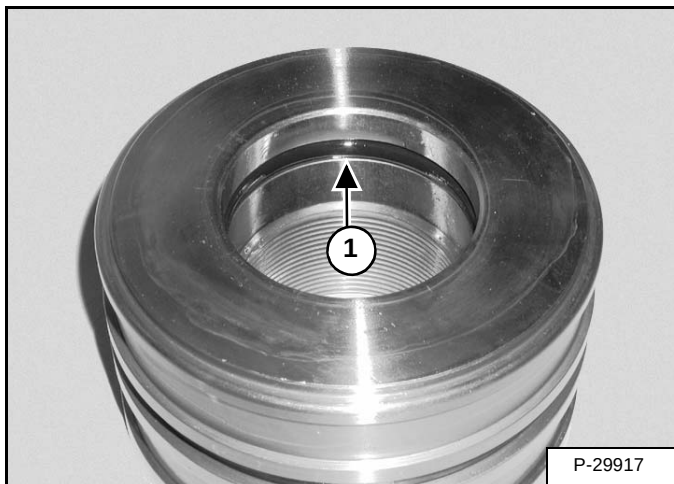


Install the O-ring (Item 1) [Figure 20-20-38] in the piston.

Figure 20-20-40

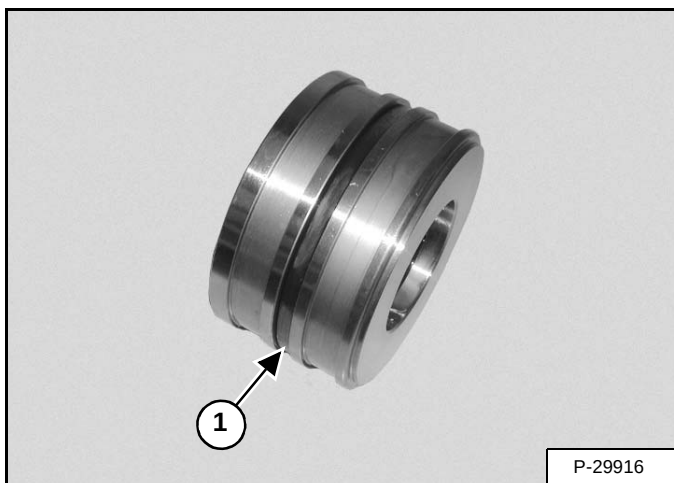

Install the expander O-ring (Item 1) [Figure 20-20-40] on the piston.

Figure 20-20-41

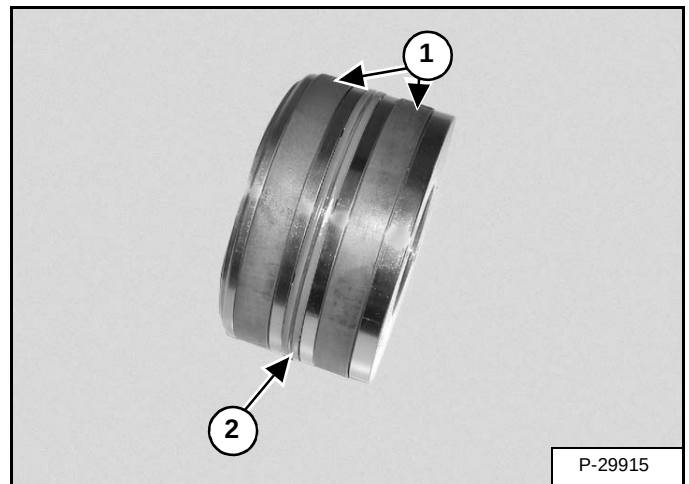


Install the two wear rings (Item 1) and seal (Item 2) [Figure 20-20-41] onto the piston.

LIFT CYLINDER (CONT'D)


Assembly (Cont'd)

Figure 20-20-42

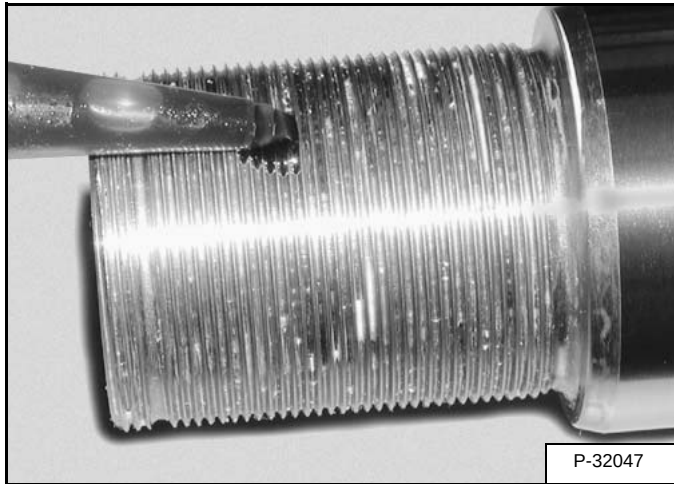


Clean off any old residue, and apply LOCTITE 242 or equivalent to the threads on the rod [Figure 20-20-42].

Figure 20-20-43

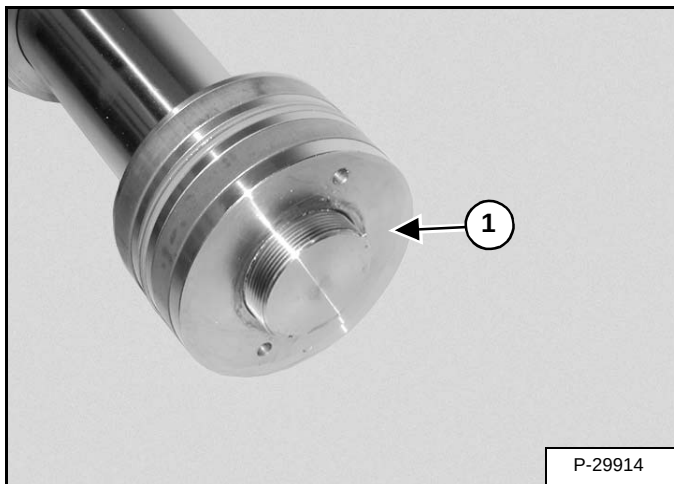


Install the piston (Item 1) [Figure 20-20-43] on the rod.

Figure 20-20-44

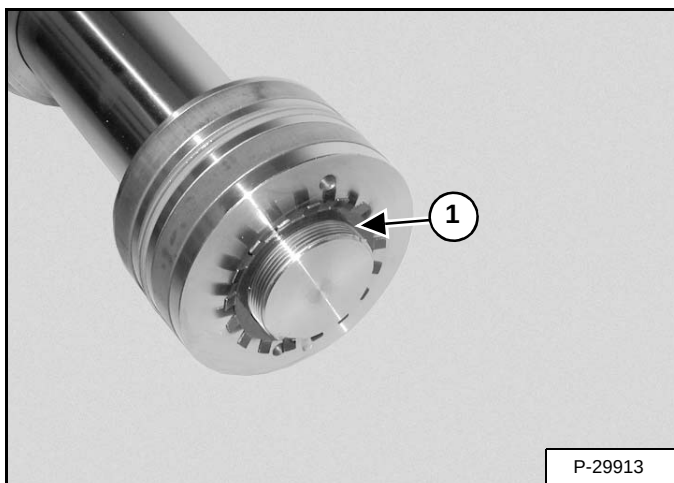

Install the lock ring (Item 1) [Figure 20-20-44].

Figure 20-20-45

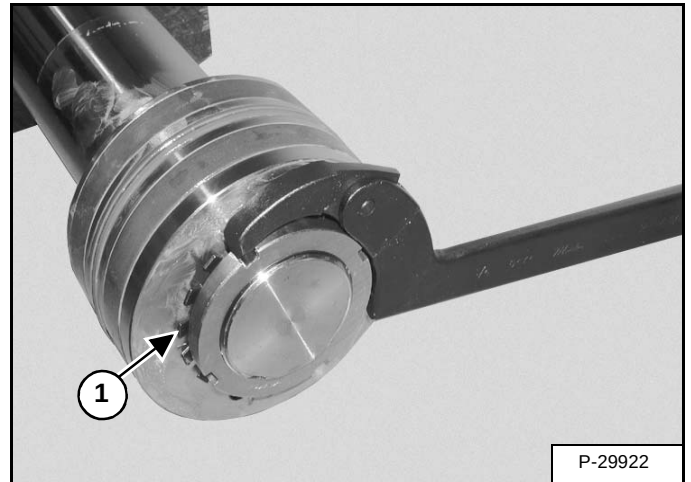


Use the cylinder wrench to install the lock nut (Item 1) [Figure 20-20-45] and tighten.

LIFT CYLINDER (CONT'D)


Assembly (Cont'd)

Figure 20-20-46

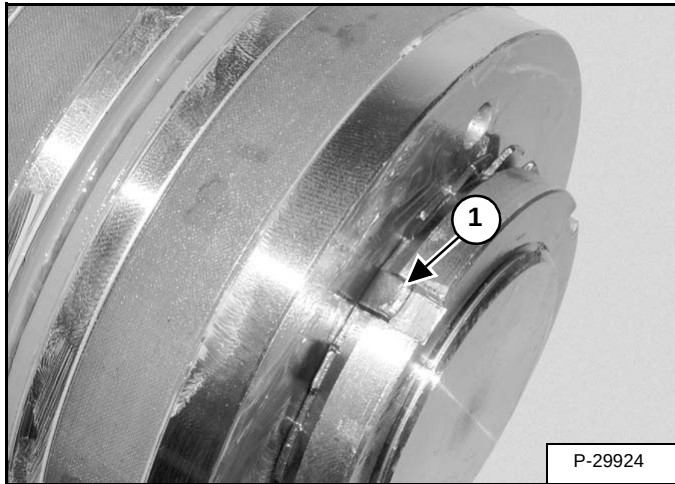


Peen the lock ring tab (Item 1) [Figure 20-20-46] into the groove in the lock nut.

Figure 20-20-47

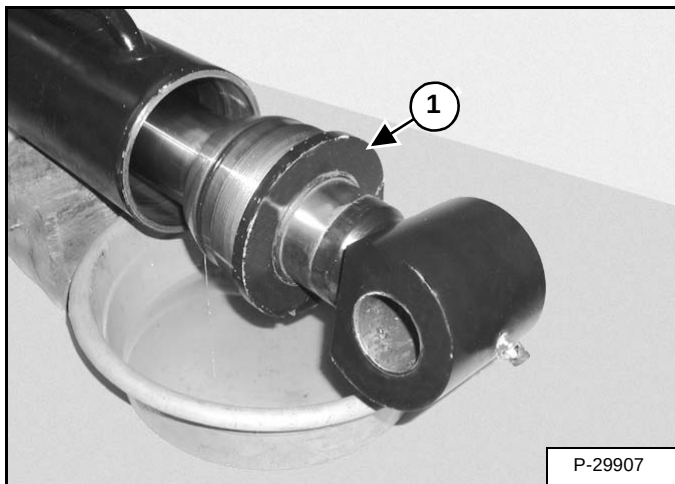


Install the rod assembly (Item 1) [Figure 20-20-47] into the housing.

Figure 20-20-48

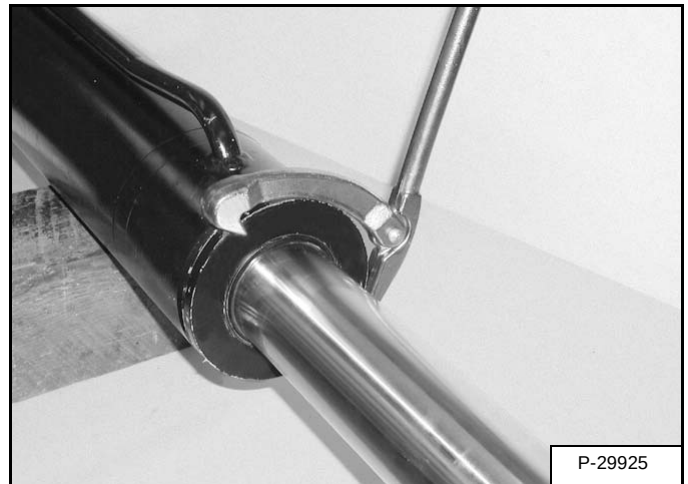

Use the spanner wrench to tighten the head gland [Figure 20-20-48].

Figure 20-20-49

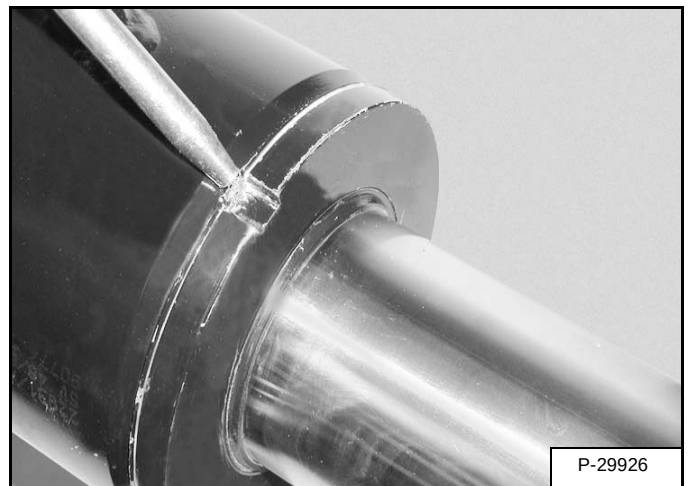


Peen the lock ring into the groove in the head gland [Figure 20-20-49].

LIFT CYLINDER (CONT'D)

Assembly (Cont'd)

Figure 20-20-50

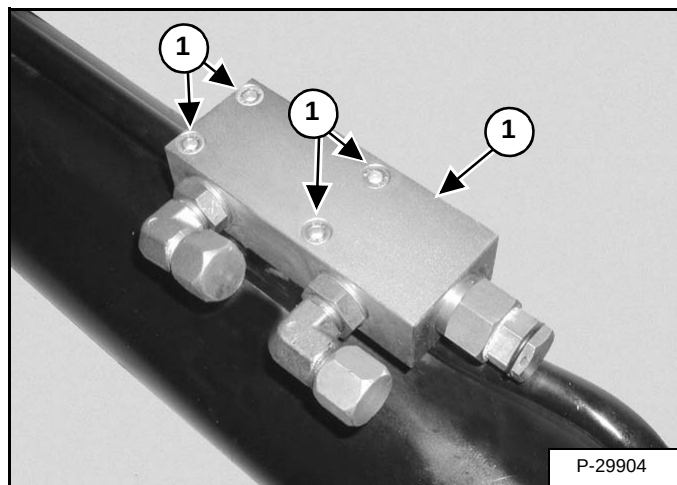

Install the lift lock (Item 1) onto the cylinder and tighten the four bolts (Item 2) [Figure 20-20-50].




Bobcat®

BUCKET POSITIONING CYLINDER


Removal And Installation

Figure 20-30-1

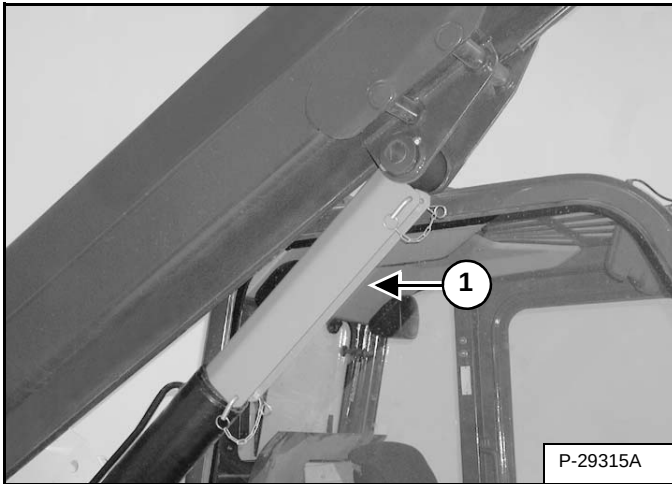


Raise the boom and install the boom stop (Item 1) [Figure 20-30-1].

Figure 20-30-2

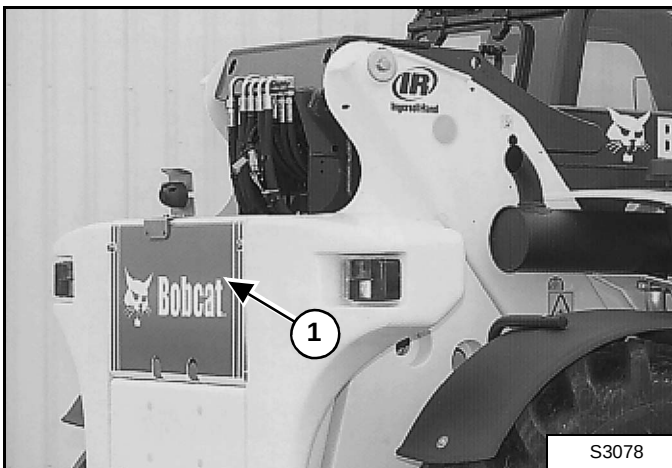

Remove the rear cover (Item 1) [Figure 20-30-2] from the machine.

Figure 20-30-3

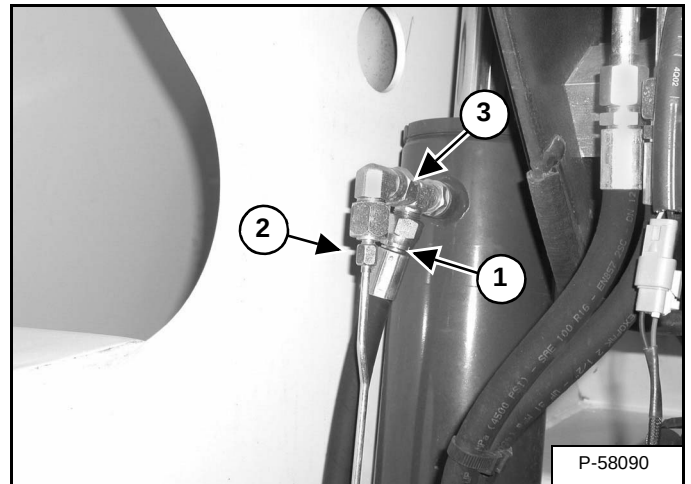

Remove the upper hose (Item 1), tubeline (Item 2) and fitting (Item 3) [Figure 20-30-3] from the cylinder.


NOTE: Mark all hoses for correct installation.

IMPORTANT

When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.

I-2003-0888

Figure 20-30-4

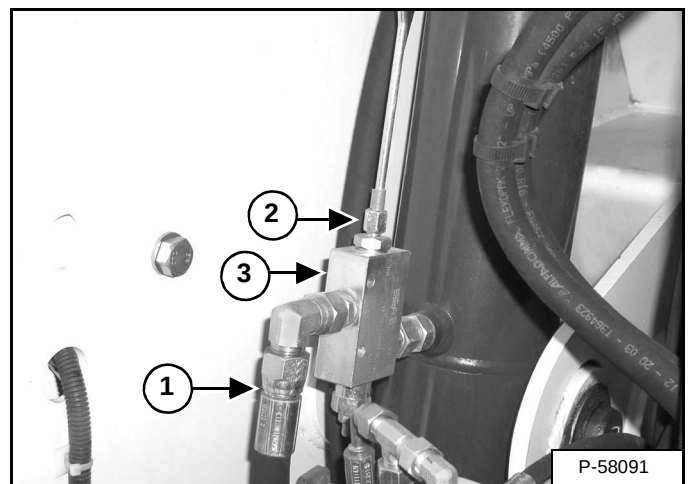


Remove the lower hose (Item 1), tubeline (Item 2) and load lock (Item 3) [Figure 20-30-4] from the cylinder.

BUCKET POSITIONING CYLINDER (CONT'D)


Removal And Installation (Cont'd)

Figure 20-30-5

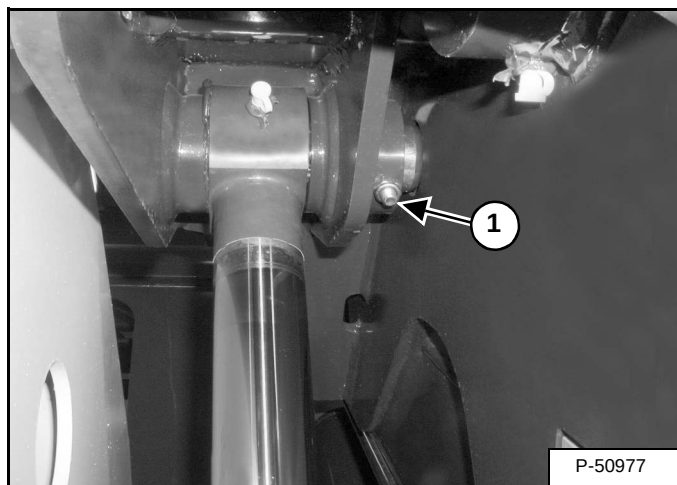

Remove the nut (Item 1) [Figure 20-30-5] from the upper retainer bolt.

Figure 20-30-6

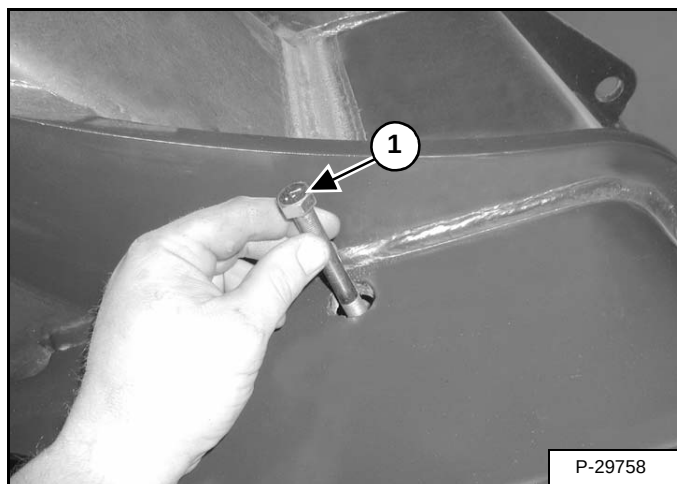

Remove the upper retainer bolt (Item 1) [Figure 20-30-6] from the top pivot pin.


Figure 20-30-7



Remove the upper pivot pin using a pin removal tool [Figure 20-30-7].

NOTE: Secure the top of the cylinder from falling forward and causing damage to the cylinder rod when the pivot pin is removed.

Figure 20-30-8

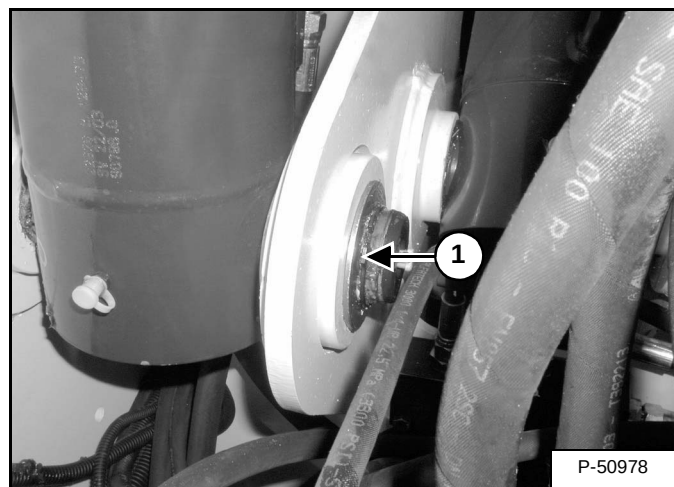


Remove the lower pivot pin snap ring (Item 1) [Figure 20-30-8].

BUCKET POSITIONING CYLINDER (CONT'D)

Removal And Installation (Cont'd)

Figure 20-30-9

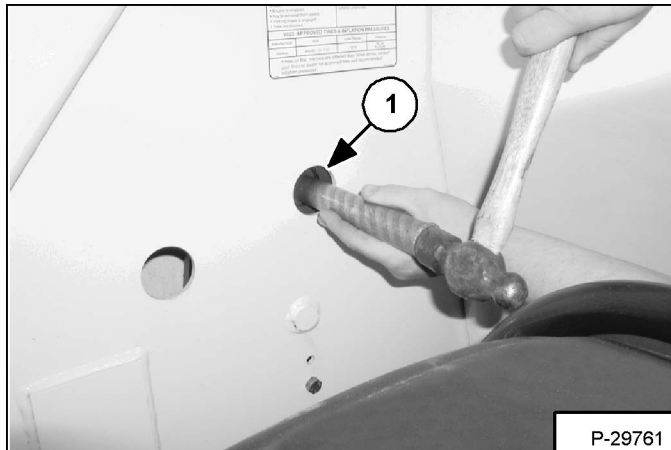

Remove the lower pivot pin (Item 1) [Figure 20-30-9].

Figure 20-30-10




Have an assistant tilt the cylinder forward while removing the cylinder out the back [Figure 20-30-10].

BUCKET POSITIONING CYLINDER (CONT'D)

Parts Identification

1. Bushing
2. Housing
3. Wear Ring
4. Seal
5. O-ring
6. Set Screw
7. Piston
8. Rod
9. Head Gland
10. Wiper
11. Grease Fitting

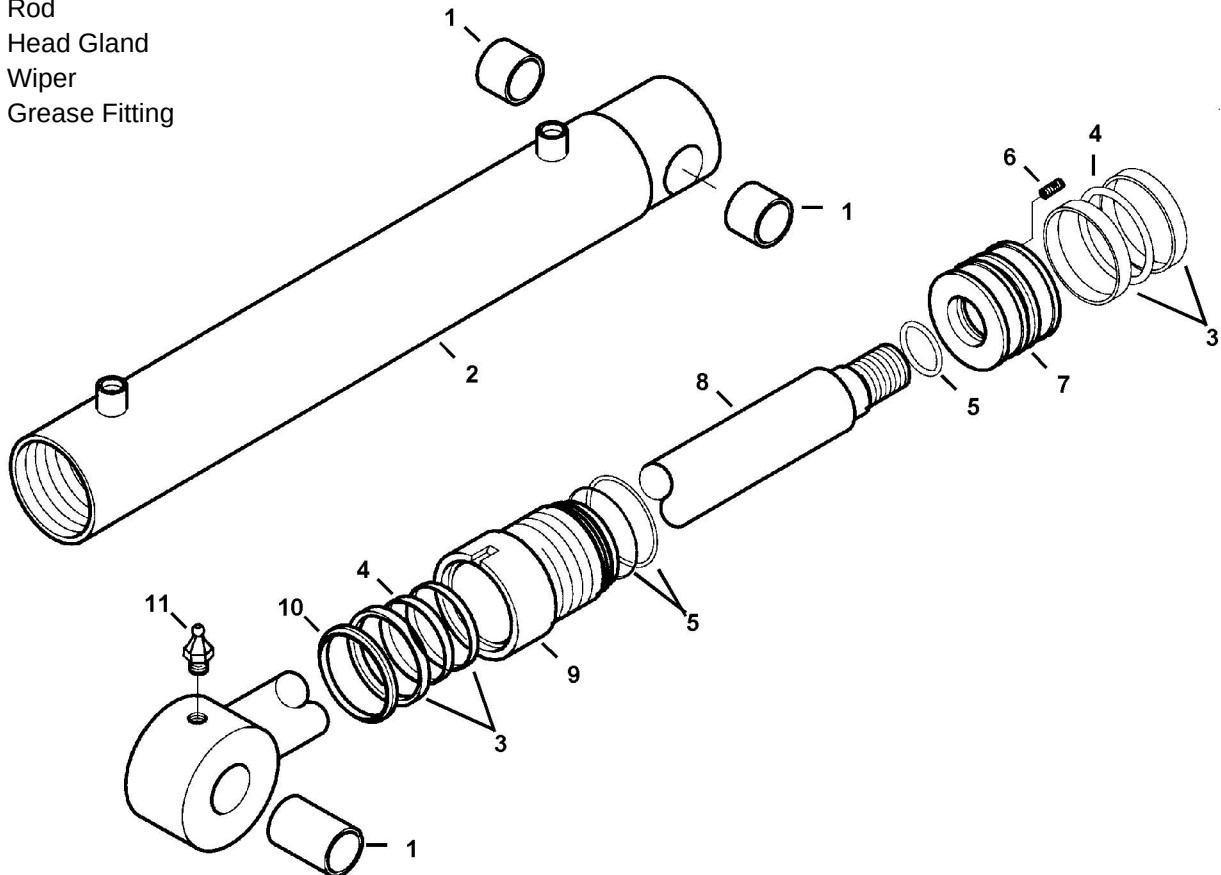

B-19852


BUCKET POSITIONING CYLINDER (CONT'D)

Disassembly

Use the following tools to disassemble the cylinder:


MEL1354-Spanner Wrench

Figure 20-30-11

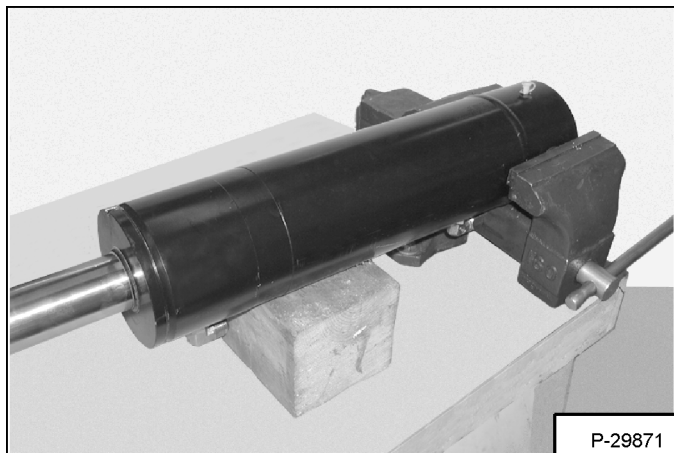


Put the cylinder in a vise [Figure 20-30-11].

Figure 20-30-12

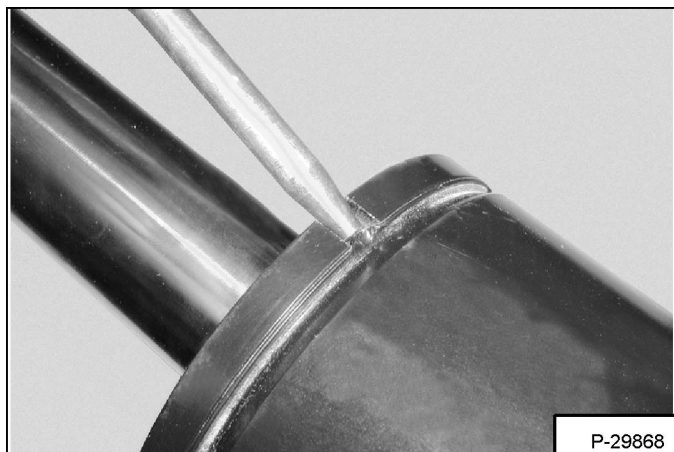


Carefully peen the lock ring from the head gland [Figure 20-30-12].

Figure 20-30-13

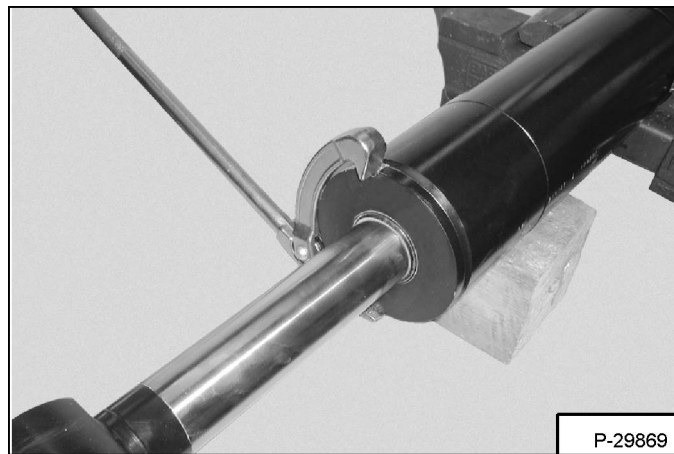

Use a spanner wrench to remove the head gland [Figure 20-30-13].

Figure 20-30-14

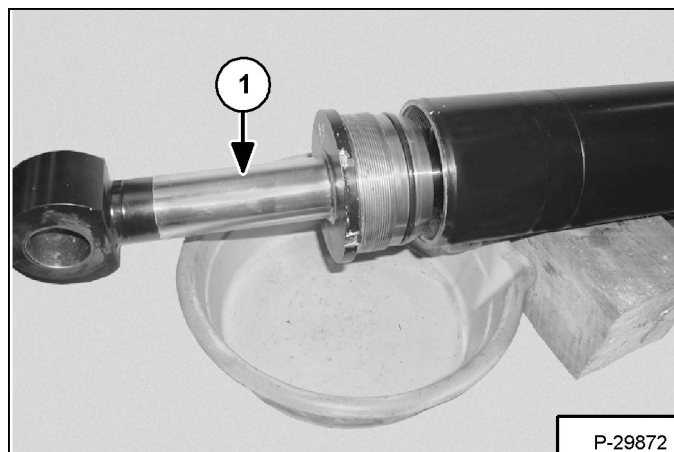


Remove the rod assembly (Item 1) [Figure 20-30-14] from the housing.

BUCKET POSITIONING CYLINDER (CONT'D)


Disassembly (Cont'd)

Figure 20-30-15

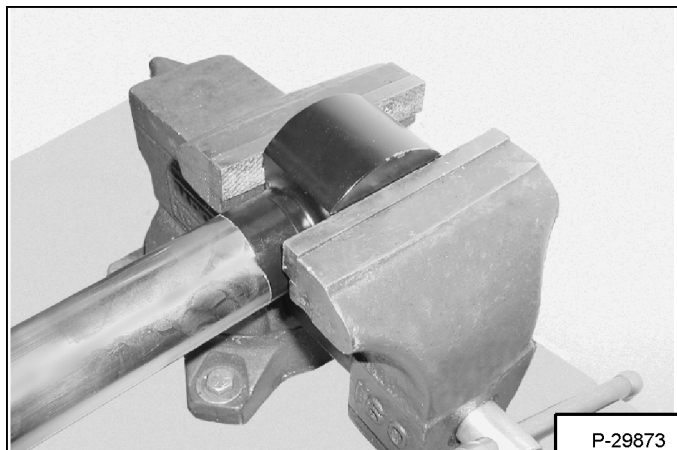


Put the rod end of the cylinder in a vise [Figure 20-30-15].

Figure 20-30-16

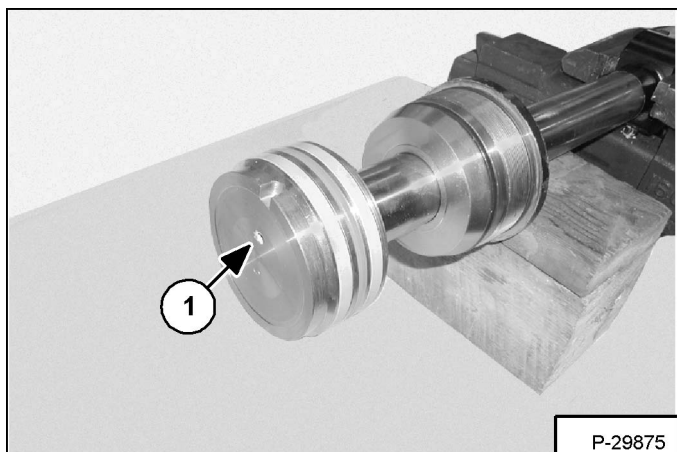


Support the cylinder rod on a wood block and remove the set screw (Item 1) [Figure 20-30-16] from the piston.

Figure 20-30-17

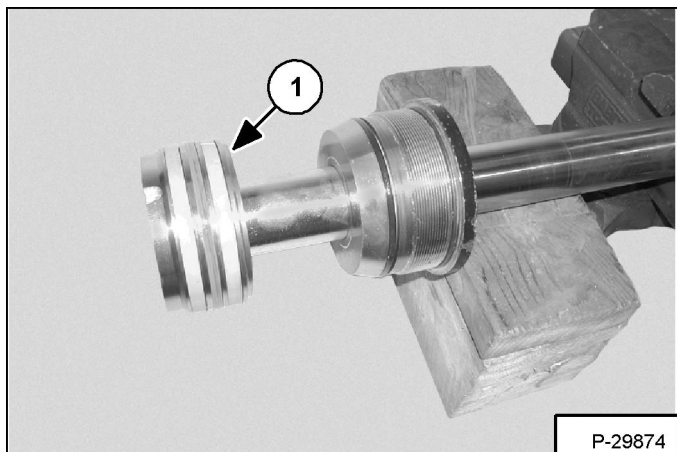

Remove the piston assembly (Item 1) [Figure 20-30-17] from the rod.

Figure 20-30-18

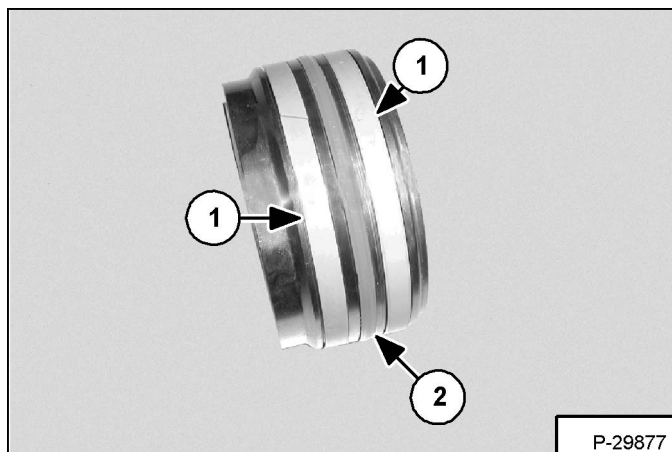


Remove the two wear rings (Item 1) and seal (Item 2) [Figure 20-30-18] from the piston.

BUCKET POSITIONING CYLINDER (CONT'D)


Disassembly (Cont'd)

Figure 20-30-19

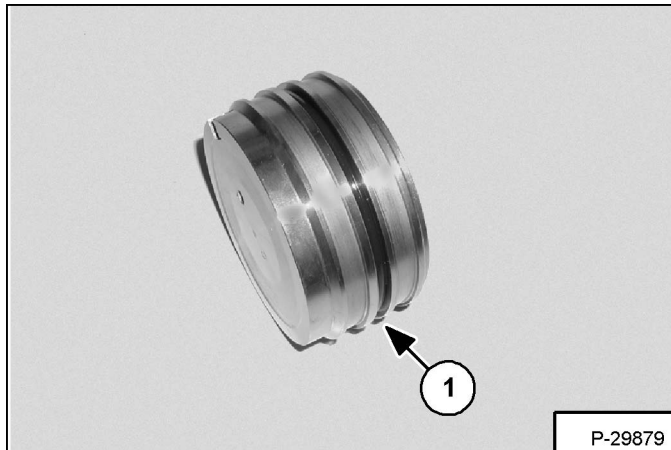


Remove the expander O-ring (Item 1) [Figure 20-30-19].

Figure 20-30-20

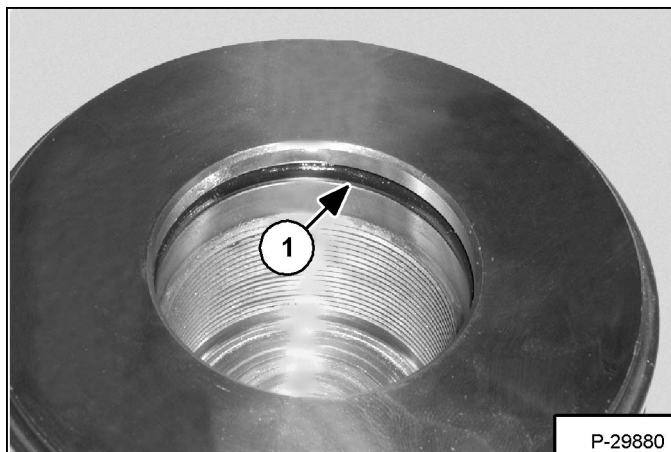


Remove the O-ring (Item 1) [Figure 20-30-20] from the piston.

Figure 20-30-21

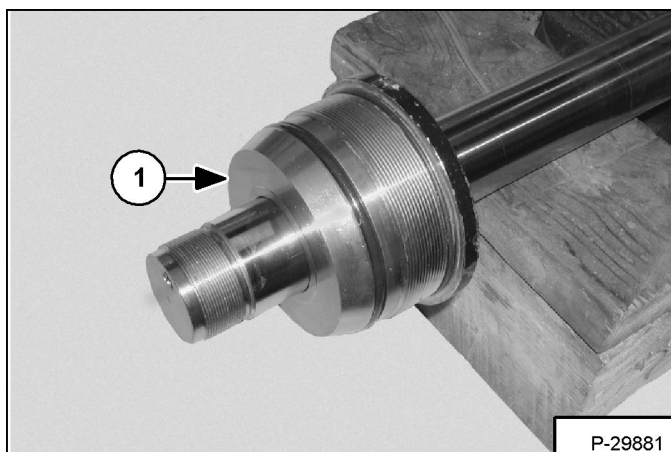

Remove the head gland (Item 1) [Figure 20-30-21] from the rod.

Figure 20-30-22

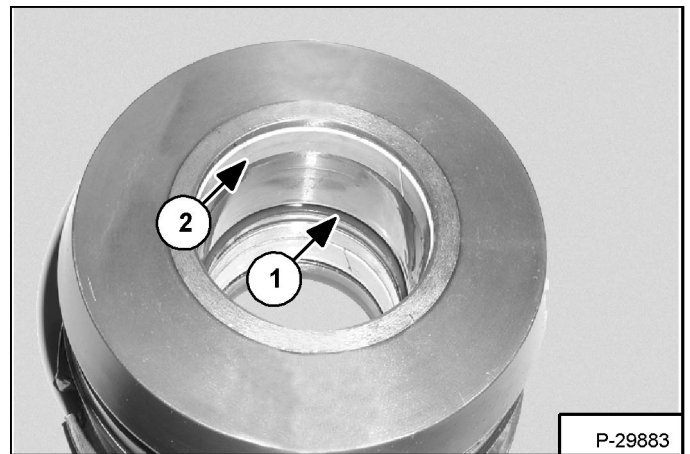


Remove the center seal (Item 1) and outer wear ring (Item 2) [Figure 20-30-22].

BUCKET POSITIONING CYLINDER (CONT'D)


Disassembly (Cont'd)

Figure 20-30-23

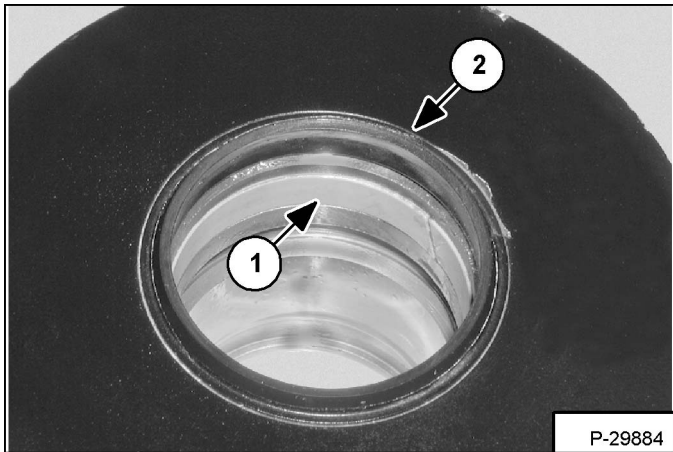


Remove the outer wear ring (Item 1) and wiper (Item 2) [Figure 20-30-23].

Figure 20-30-24

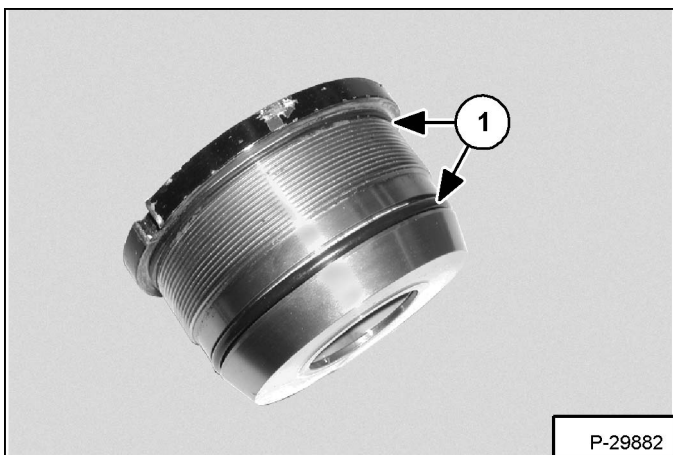

Remove the two O-rings (Item 1) [Figure 20-30-24].

Figure 20-30-25

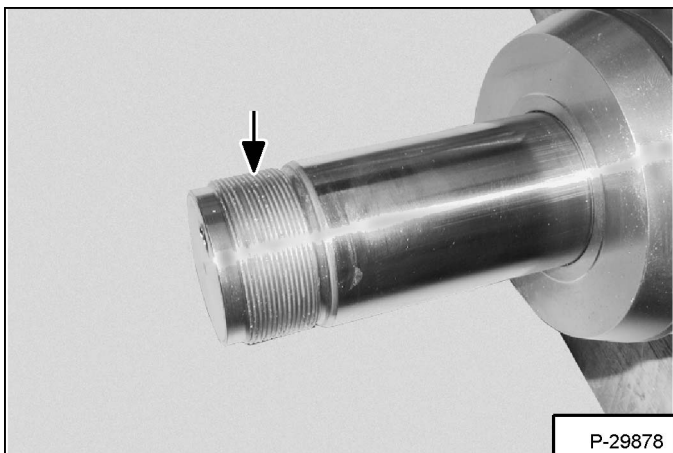

Remove any residue from the threads on the cylinder rod [Figure 20-30-25].

BUCKET POSITIONING CYLINDER (CONT'D)

Assembly

Use the following tools to assemble the cylinder:

MEL1354-Spanner Wrench

MEL1033-Rod Seal Installation Tool


Wash the cylinder parts in solvent and dry with compressed air.

Inspect the cylinder parts for nicks, scratches or other damage. Replace any damaged parts.

Lubricate all O-rings and seals with hydraulic oil during installation.


Always use new O-rings and seals.

Figure 20-30-26

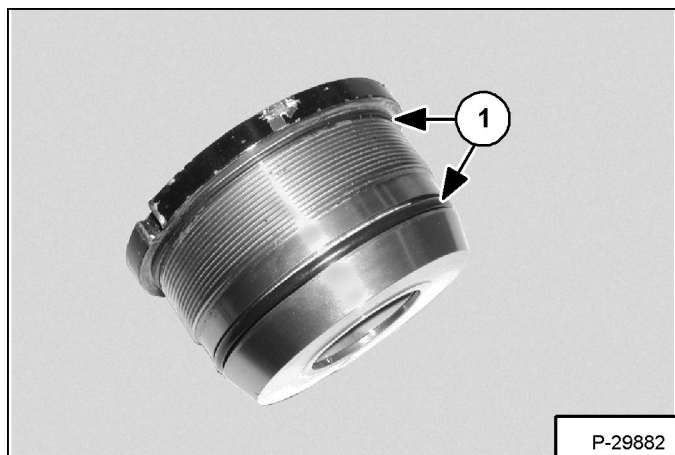


Install the two O-rings (Item 1) [Figure 20-30-26] onto the head gland.

Figure 20-30-27

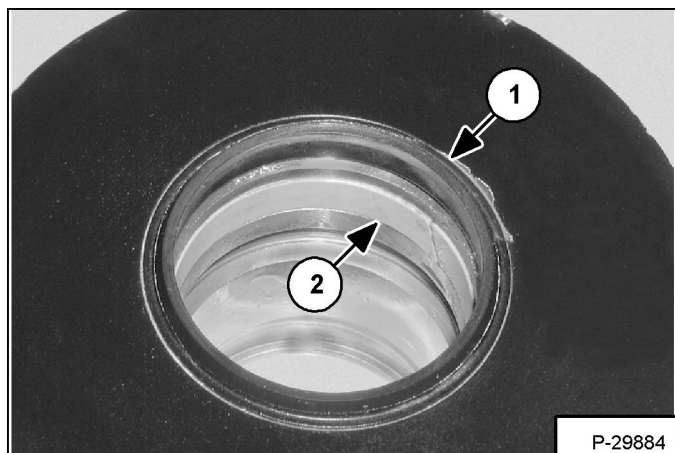

Install the wiper (Item 1) and wear ring (Item 2) [Figure 20-30-27].

Figure 20-30-28

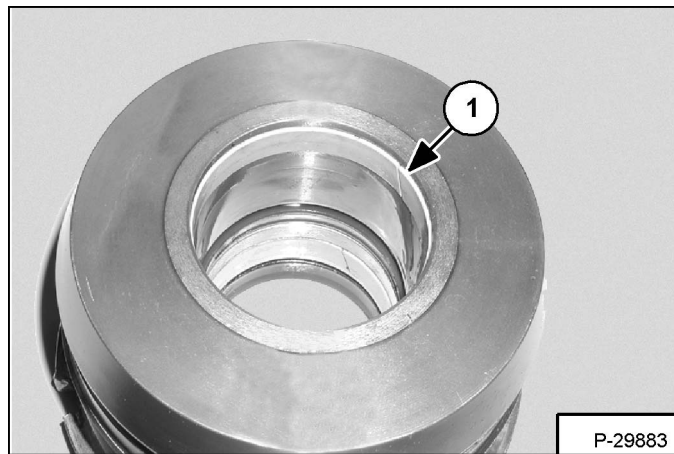

Install the wear ring (Item 1) [Figure 20-30-28].

Figure 20-30-29




Install the center seal (Item 1) [Figure 20-30-29].

NOTE: The groove in the seal must point away from the wiper seal (Item 1) [Figure 20-30-27].

BUCKET POSITIONING CYLINDER (CONT'D)


Assembly (Cont'd)

Figure 20-30-30

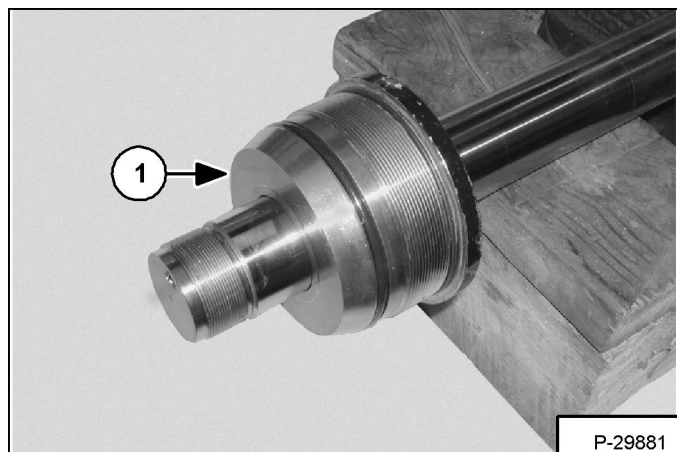


Install the head gland (Item 1) [Figure 20-30-30] onto the rod.

Figure 20-30-31

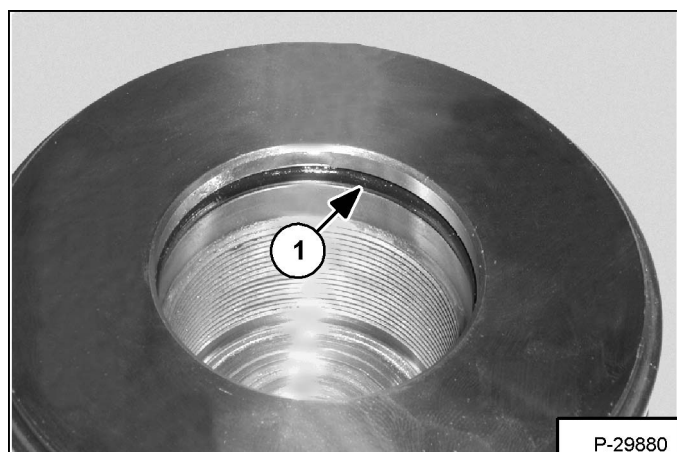


Install the O-ring (Item 1) [Figure 20-30-31] in the piston.

Figure 20-30-32

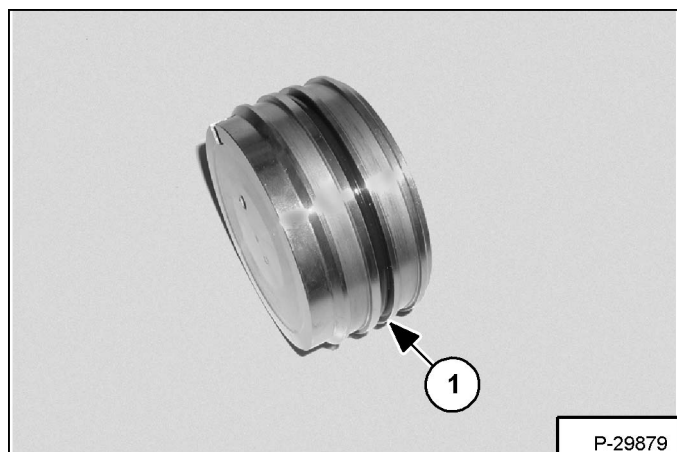

Install the expander O-ring (Item 1) [Figure 20-30-32] onto the piston.

Figure 20-30-33

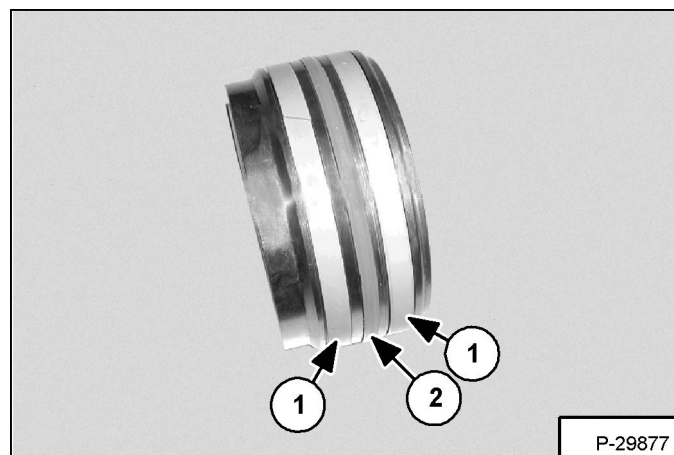


Install the two wear rings (Item 1) and seal (Item 2) [Figure 20-30-33].

BUCKET POSITIONING CYLINDER (CONT'D)


Assembly (Cont'd)

Figure 20-30-34

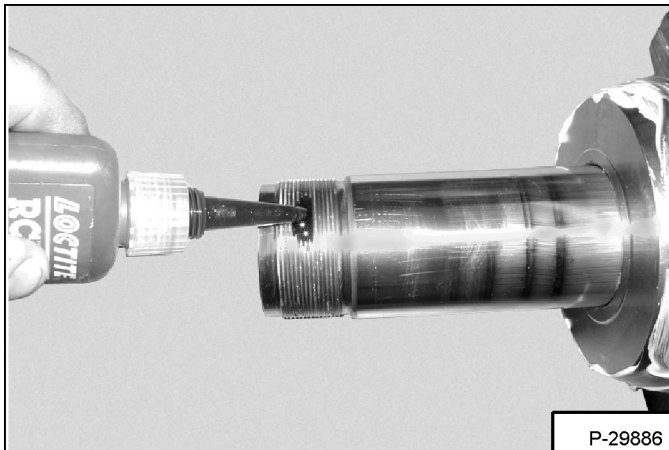


Apply LOCTITE 242 or equivalent to the threads on the rod [Figure 20-30-34].

Figure 20-30-35

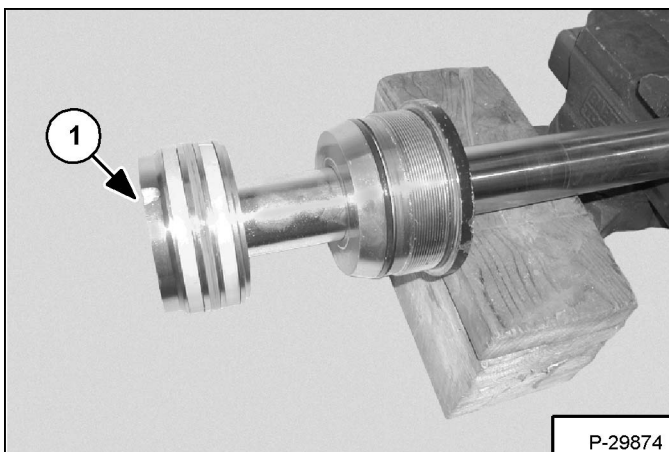


Install the piston (Item 1) [Figure 20-30-35] onto the rod.

Figure 20-30-36

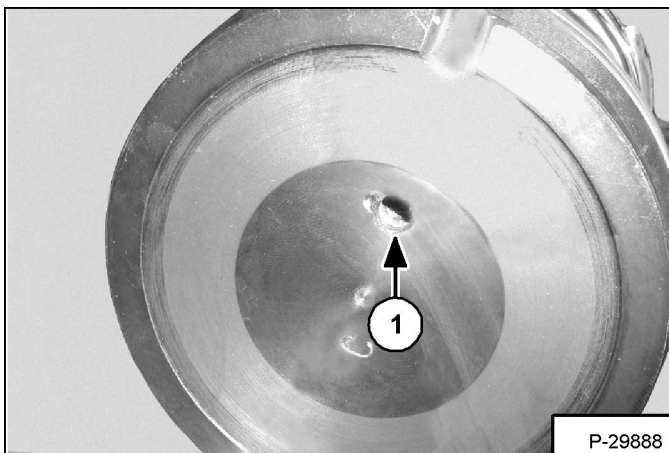

Align the hole (Item 1) [Figure 20-30-36] in the piston with the hole in the end of the cylinder rod.

Figure 20-30-37

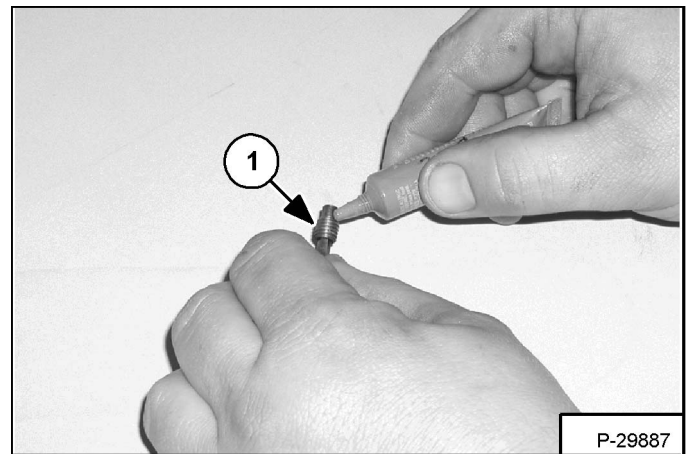


Apply LOCTITE 242 or equivalent to the set screw (Item 1) [Figure 20-30-37].

BUCKET POSITIONING CYLINDER (CONT'D)


Assembly (Cont'd)

Figure 20-30-38

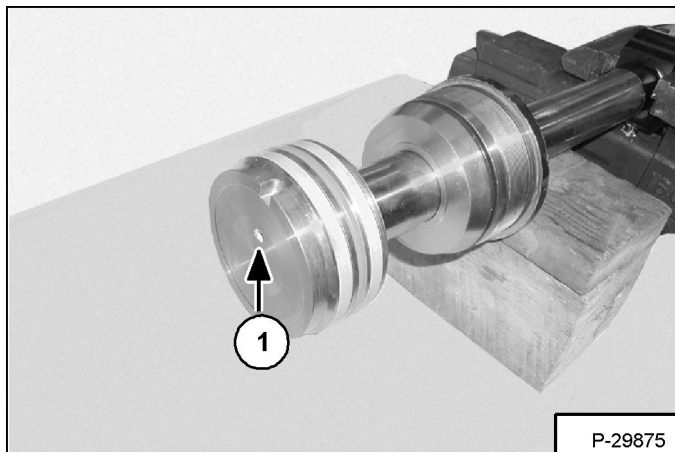


Install the set screw (Item 1) [Figure 20-30-38] into the piston and tighten.

Figure 20-30-39

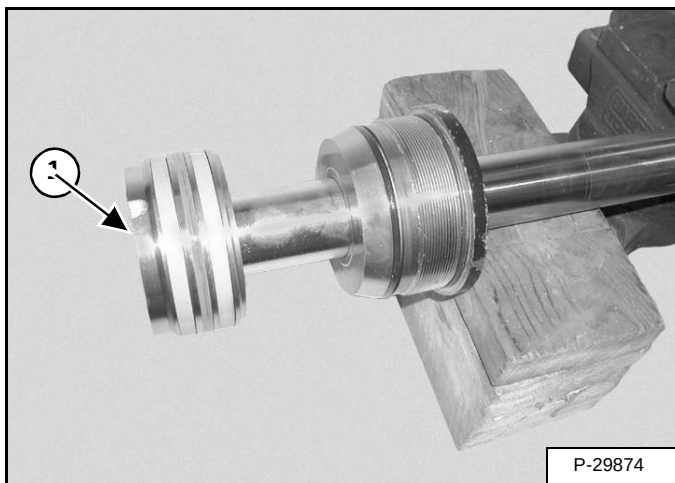


Install the rod assembly (Item 1) [Figure 20-30-39] into the housing.

Figure 20-30-40

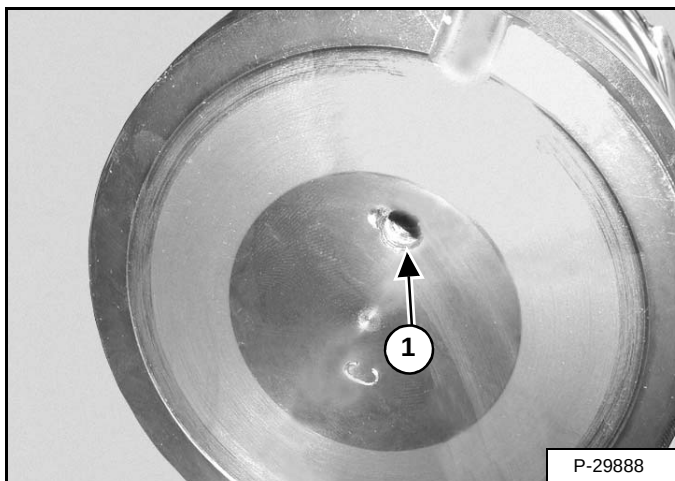

Use the spanner wrench to tighten the head gland [Figure 20-30-40].

Figure 20-30-41

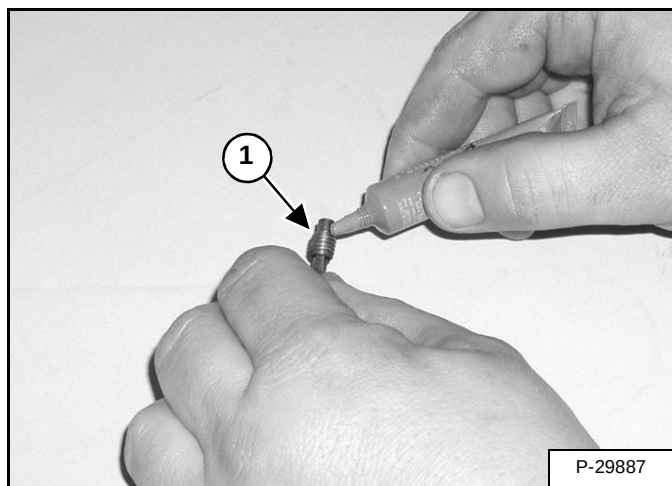

Carefully peen the lock ring over and into the nut [Figure 20-30-41].

EXTENSION CYLINDER


Cylinder Group Removal And Installation

Remove the inner boom. (See "Removal" on page 50-40-1.)

Remove the tilt cylinder. (See "Removal And Installation" on page 20-50-1.)


NOTE: The tilt cylinder may be removed from the machine either before or after the inner boom is removed.

Figure 20-40-1

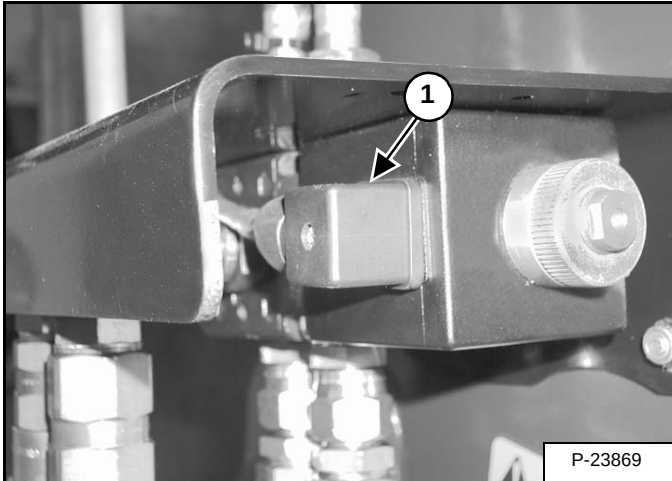

Remove the electrical connector (Item 1) [Figure 20-40-1] from the auxiliary valve (If Equipped).


Figure 20-40-2

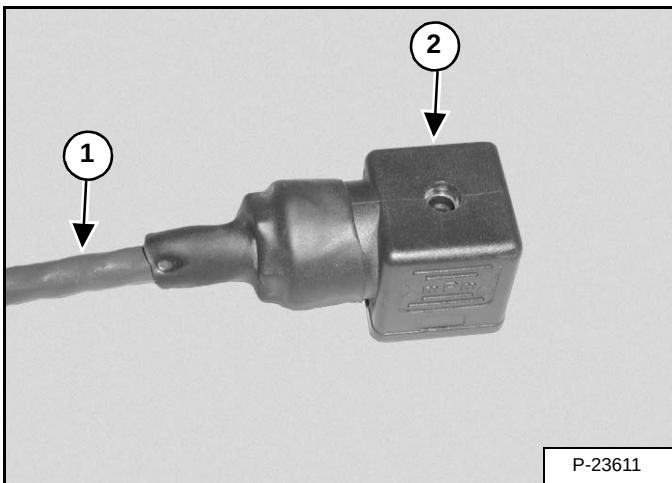

Remove the harness (Item 1) from the connector (Item 2) [Figure 20-40-2].


NOTE: Mark the harness connector for correct installation.

Figure 20-40-3

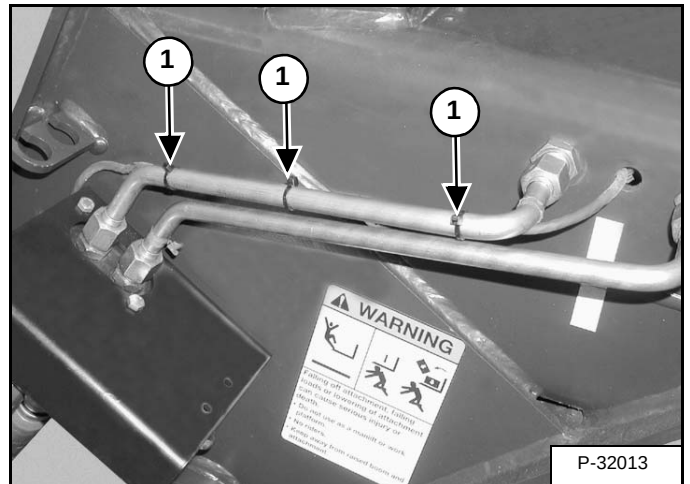

Remove any tie straps (Item 1) [Figure 20-40-3] (If Equipped).

Figure 20-40-4

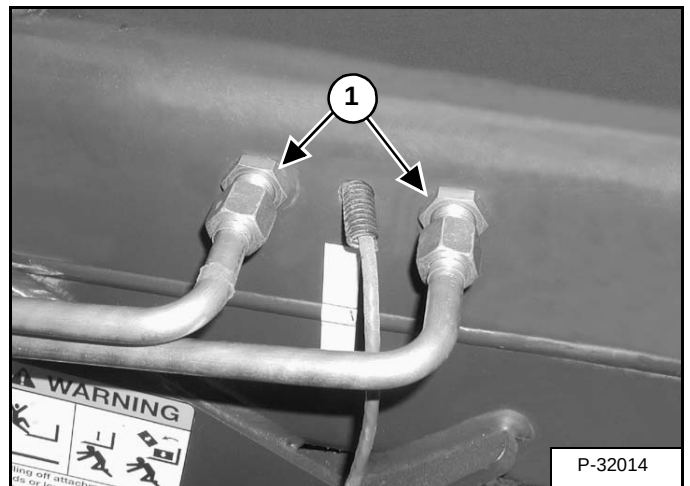


Remove the two tubelines (Item 1) [Figure 20-40-4] from the bulkhead fittings.

EXTENSION CYLINDER (CONT'D)


Cylinder Group Removal And Installation (Cont'd)

Figure 20-40-5

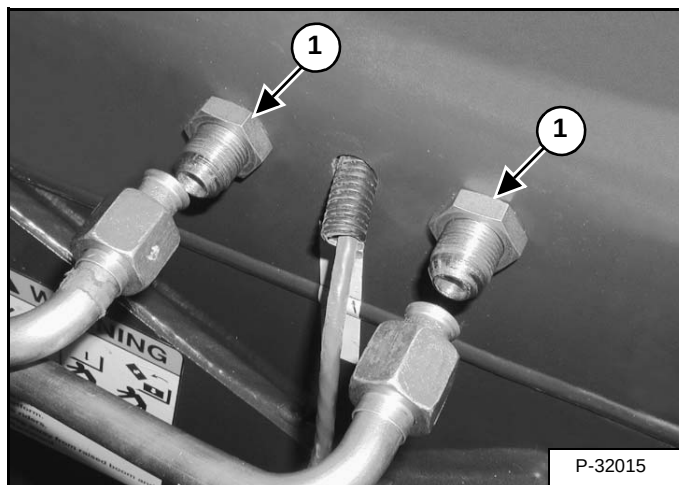

Remove the two nuts (Item 1) [Figure 20-40-5] from the bulkhead fittings.


Figure 20-40-6

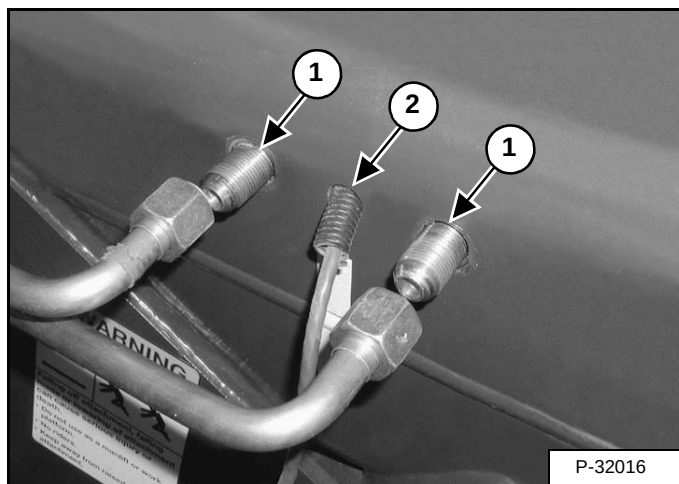

Pull the two bulkhead fittings (Item 1) and electrical harness (Item 2) [Figure 20-40-6] into the boom.

NOTE: Install caps and plugs after the bulkhead fittings are pulled into the boom.


Figure 20-40-7

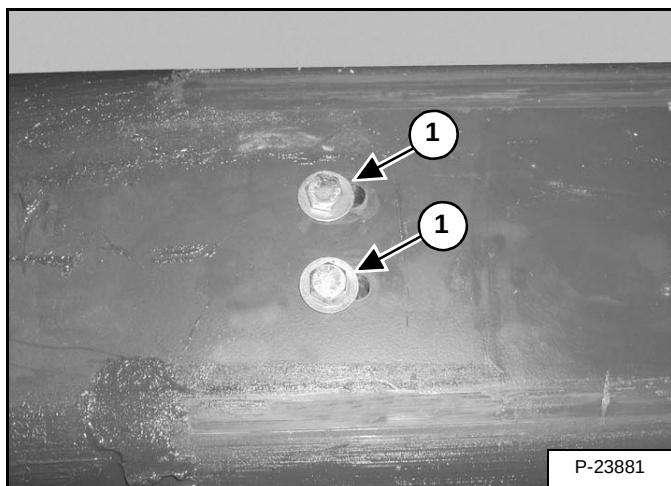

Remove the two bolts (Item 1) [Figure 20-40-7] from the top of the boom.

Installation: Tighten the bolts to 18 ft.-lbs. (24 Nm) torque.

Figure 20-40-8

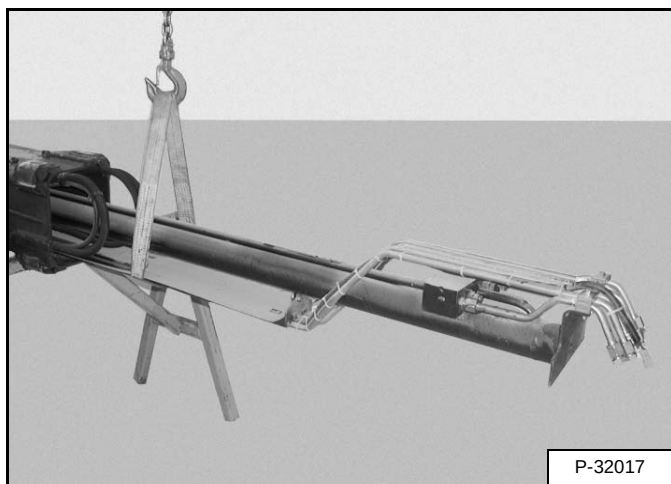


Remove the extension cylinder assembly from the boom [Figure 20-40-8].

EXTENSION CYLINDER (CONT'D)


Upper Tubeline Removal

Figure 20-40-9

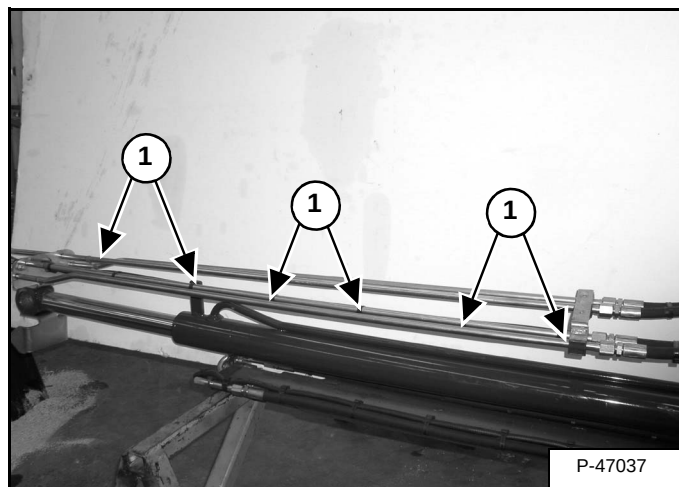


Remove all tie straps (Item 1) [Figure 20-40-9] securing the electrical harness to the tubelines.

Figure 20-40-10

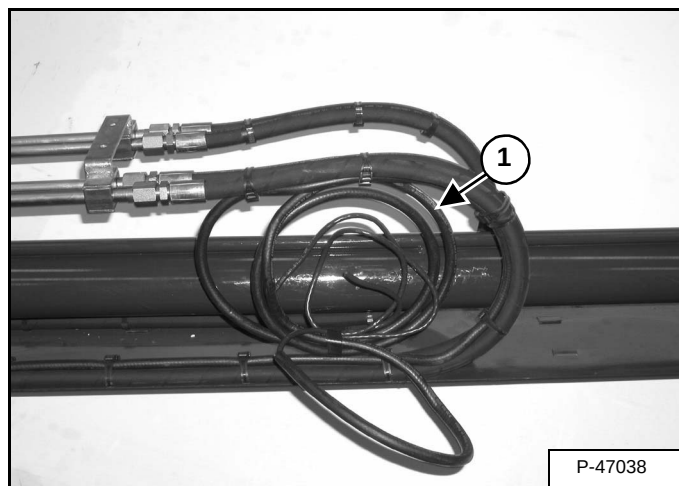

Roll up the electrical harness (Item 1) [Figure 20-40-10] and temporarily tie to the existing hoses.


Figure 20-40-11

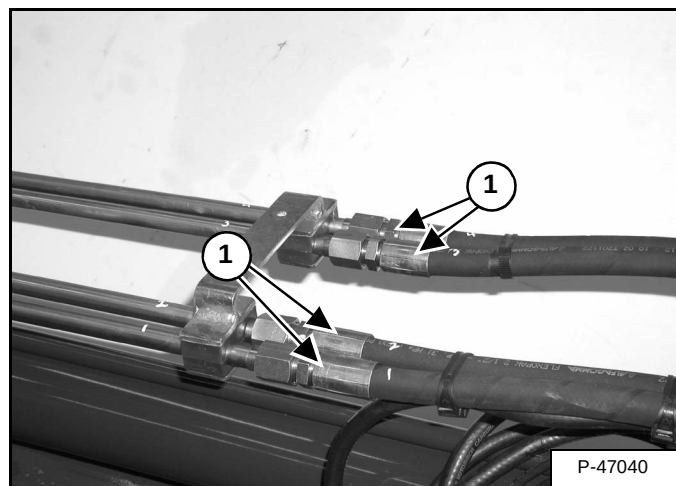

Remove the four hoses (Item 1) [Figure 20-40-11] from the tubelines.

NOTE: Mark the hoses for correct installation.

Figure 20-40-12

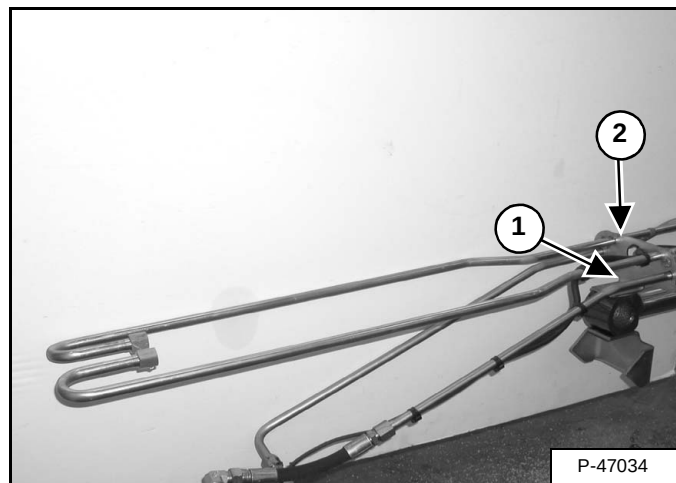

Remove the bolt (Item 1) from the tubeline clamp bracket (Item 2) [Figure 20-40-12].

Lift and remove the tubeline assembly from the extension cylinder.


Upper Tubeline Installation

Set the tubeline assembly onto the extension cylinder and install the bolt (Item 1) and tighten to secure the tubeline clamp bracket (Item 2) [Figure 20-40-12] to the rod end of the cylinder.

EXTENSION CYLINDER (CONT'D)


Upper Tubeline Installation (Cont'd)

Figure 20-40-13

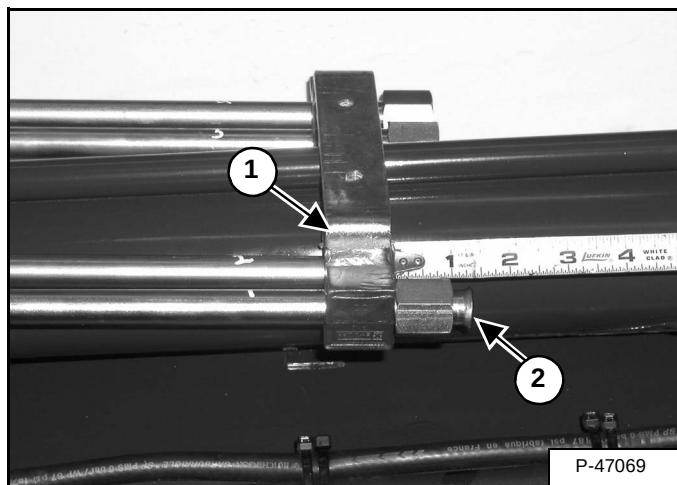


Measure the distance from the tubeline clamp (Item 1) to the tubeline flare (Item 2) [Figure 20-40-13] the correct measurement must be 1.25 inches (31.75 mm) for all four tubelines.

Figure 20-40-14

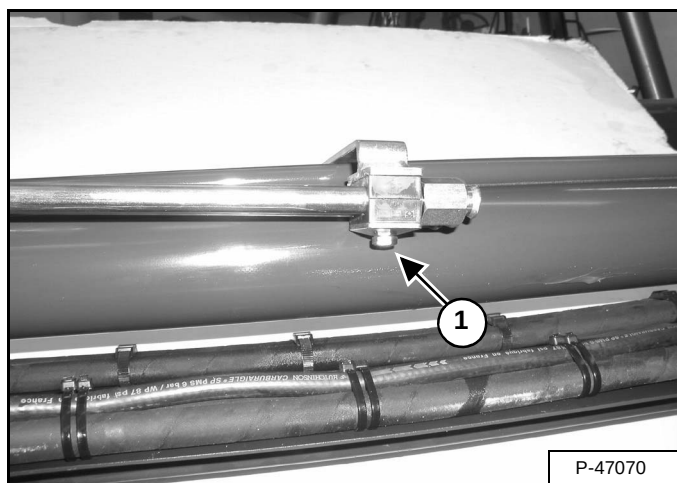


To move and adjust the tubeline clamps loosen the bolt (Item 1) [Figure 20-40-14]. (Both sides)

Figure 20-40-15

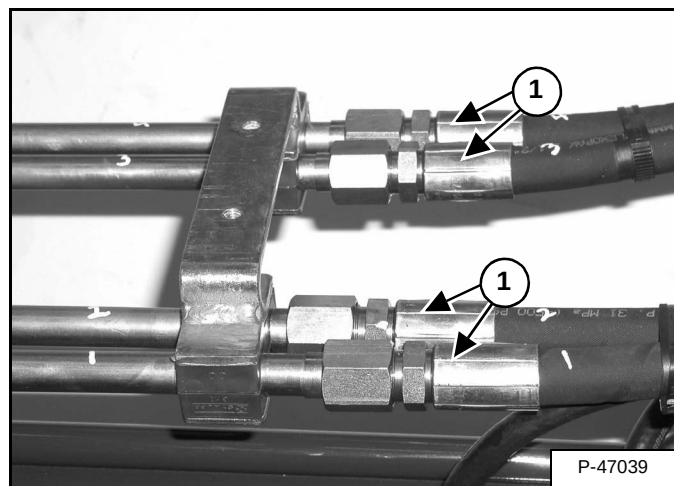

Install the four hoses (Item 1) [Figure 20-40-15] to the tubelines.

Figure 20-40-16

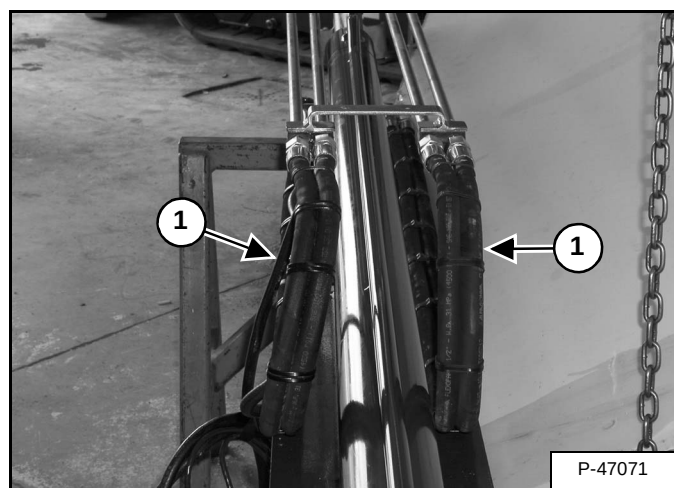


Make sure the hoses (Item 1) [Figure 20-40-16] lean in towards the cylinder after hoses are tight.

EXTENSION CYLINDER (CONT'D)


Upper Tubeline Installation (Cont'd)

Figure 20-40-17

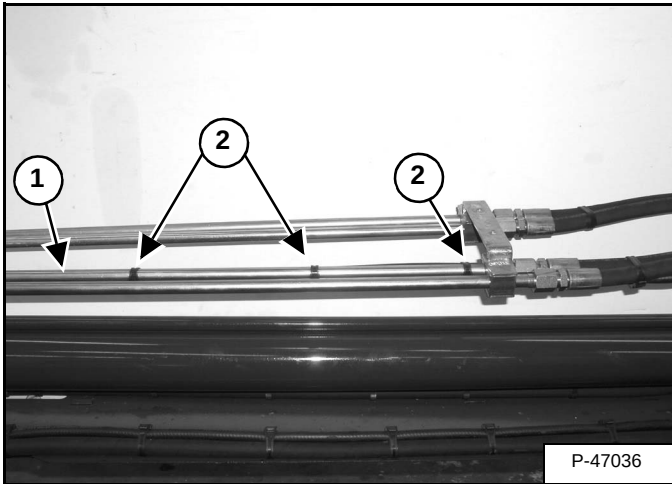

Secure the electrical harness (Item 1) to the inner tubeline (Item 1) using tie straps (Item 2) [Figure 20-40-17] approximately every 6-8 inches (152-203 mm).


Figure 20-40-18

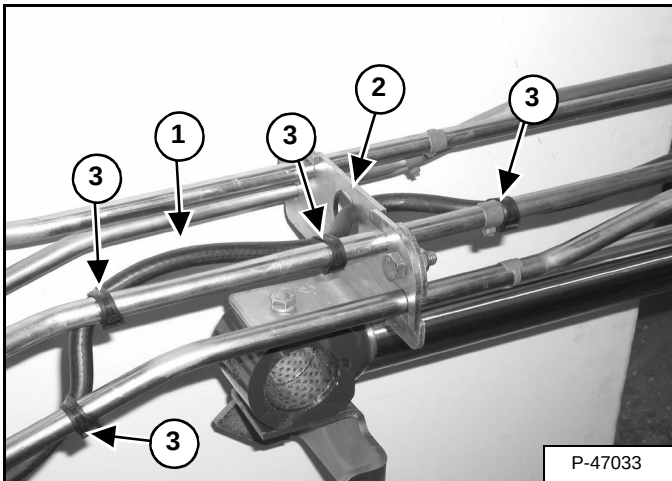

Route the electrical harness (Item 1) through the hole (Item 2) in the tubeline bracket and secure as shown using tie straps (Item 3) [Figure 20-40-18].


Extension Cylinder Removal And Installation

Figure 20-40-19

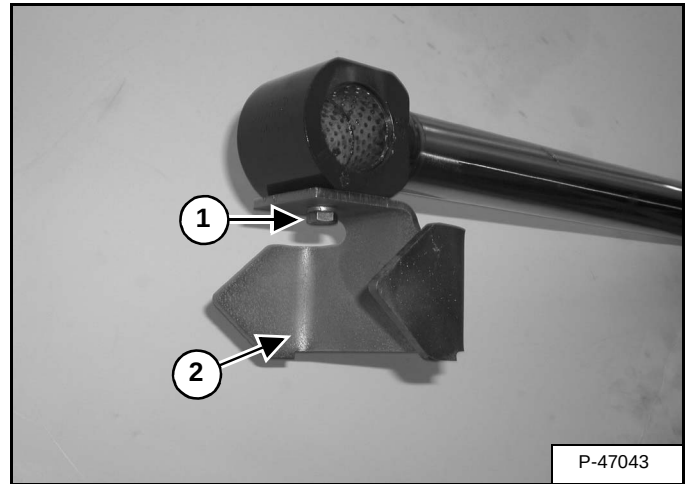

Remove the bolt and washer (Item 1) and remove the bracket (Item 2) [Figure 20-40-19] from the bottom side of the rod end of the cylinder.

Figure 20-40-20

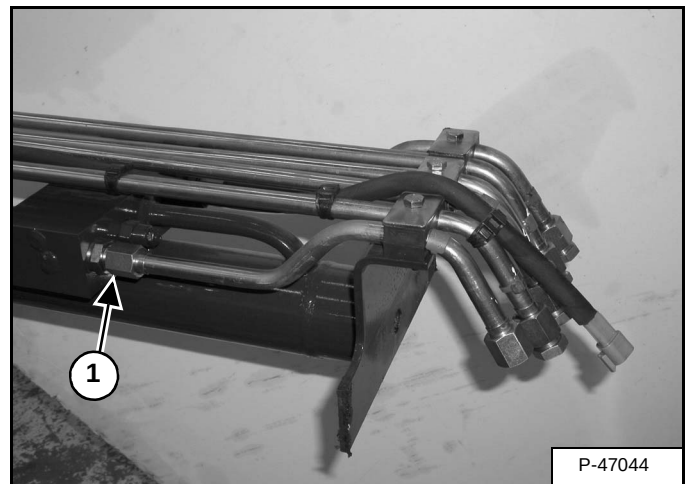


Disconnect the tubeline (Item 1) [Figure 20-40-20] from the cylinder. (Both sides)

EXTENSION CYLINDER (CONT'D)

Extension Cylinder Removal And Installation (Cont'd)

Figure 20-40-21

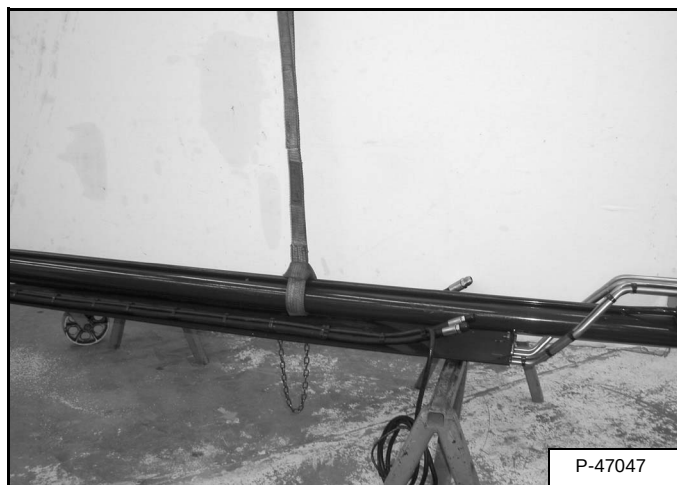

Install a hoist to lift and support the cylinder [Figure 20-40-21].

Figure 20-40-22



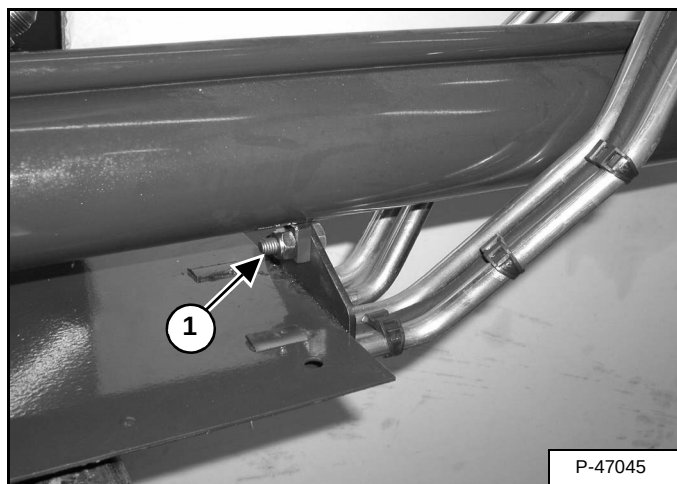


Figure 20-40-23

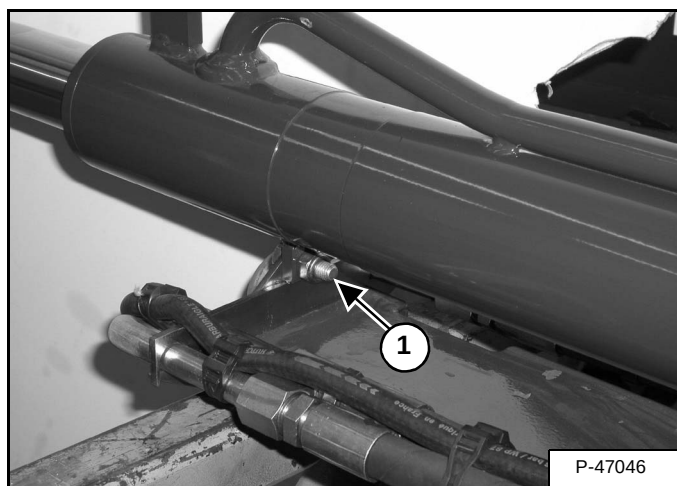

Remove the bolt and nut (Item 1) [Figure 20-40-22] and [Figure 20-40-23] from the base end and rod end of the cylinder.

Figure 20-40-24

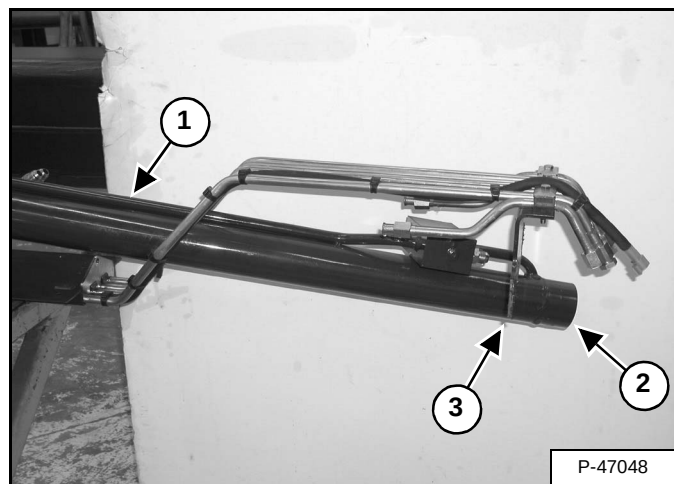


Raise the cylinder (Item 1) slightly until the base end (Item 2) drops away from the bracket (Item 3) [Figure 20-40-24].

EXTENSION CYLINDER (CONT'D)

Extension Cylinder Removal And Installation (Cont'd)

Figure 20-40-25

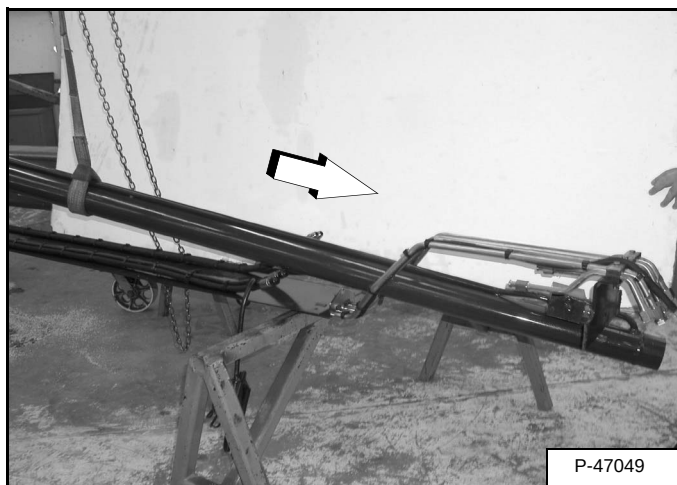


Slide the extension cylinder through the tubelines [Figure 20-40-25] and remove the cylinder.

NOTE: It may be necessary to reposition the lifting strap.


Tubeline Tray Disassembly

Figure 20-40-26

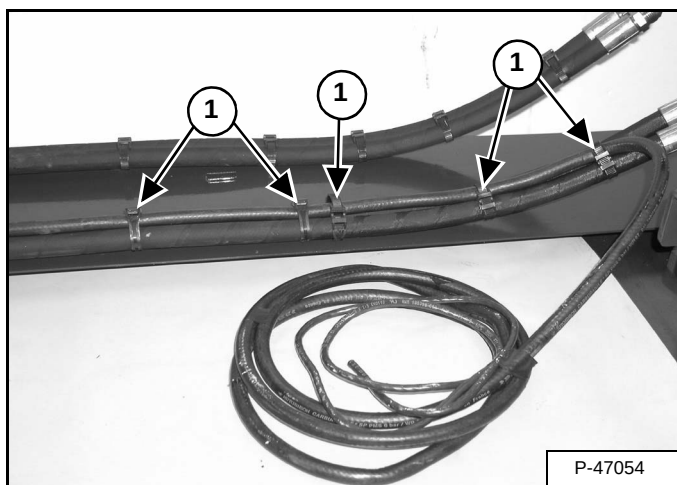


Remove all tie straps (Item 1) [Figure 20-40-26] securing the electrical harness to the hoses.

Figure 20-40-27

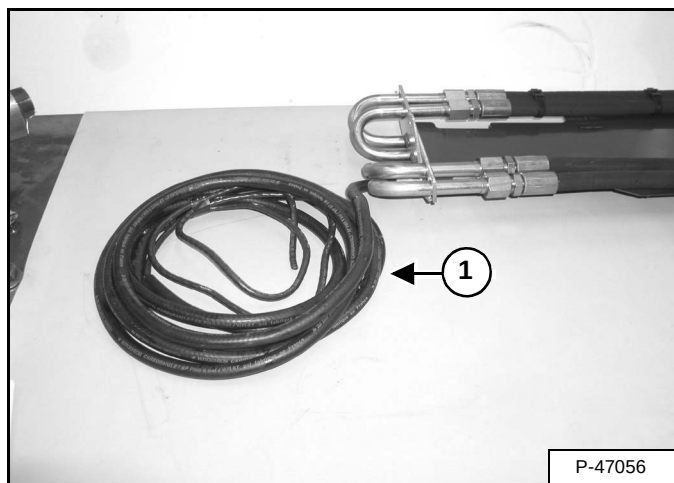

Temporarily roll up the electrical harness (Item 1) [Figure 20-40-27].

Figure 20-40-28

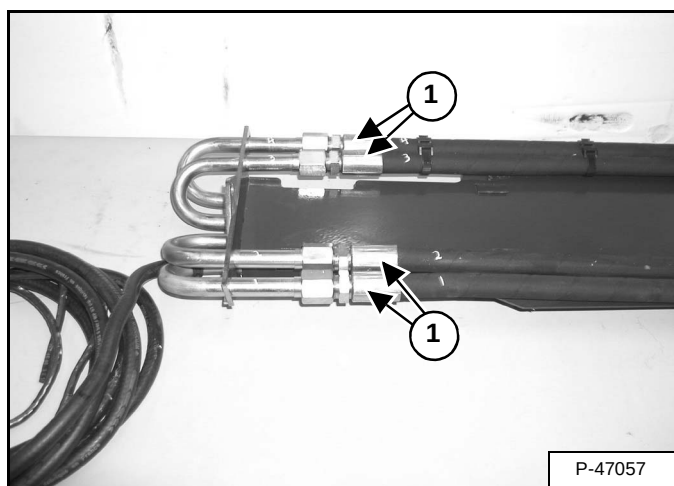


Remove the four hoses (Item 1) [Figure 20-40-28] from the tubelines.

NOTE: Mark the hoses for correct assembly.

EXTENSION CYLINDER (CONT'D)


Tubeline Tray Disassembly (Cont'd)

Figure 20-40-29

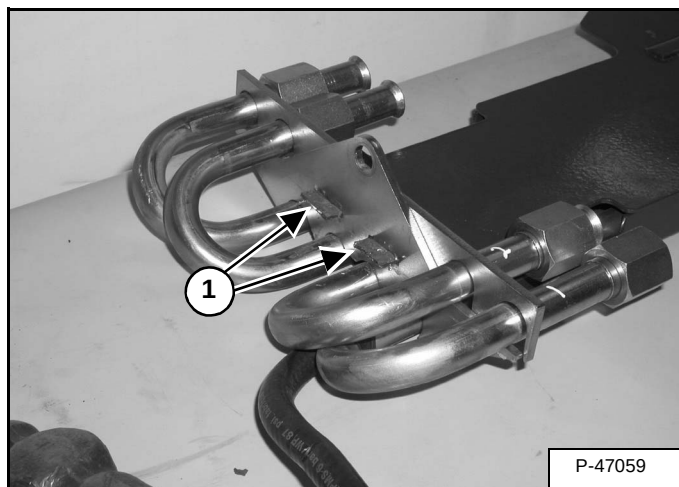


Straighten the two tabs (Item 1) [Figure 20-40-29] as shown. (Both ends)

Figure 20-40-30

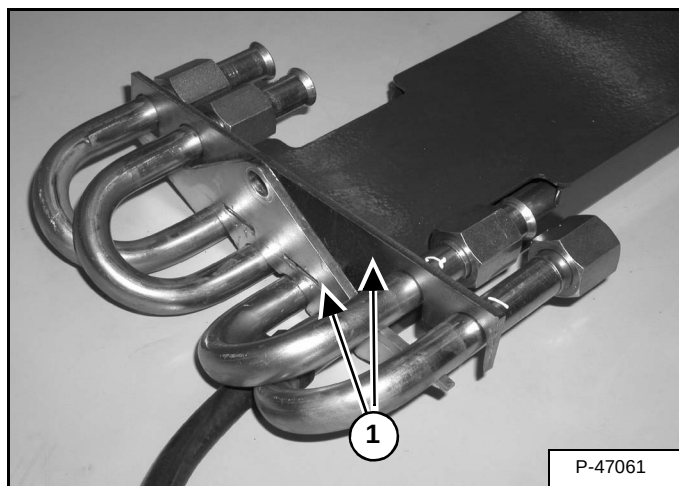


Slide both clamp brackets (Item 1) [Figure 20-40-30] from the tabs.

Figure 20-40-31

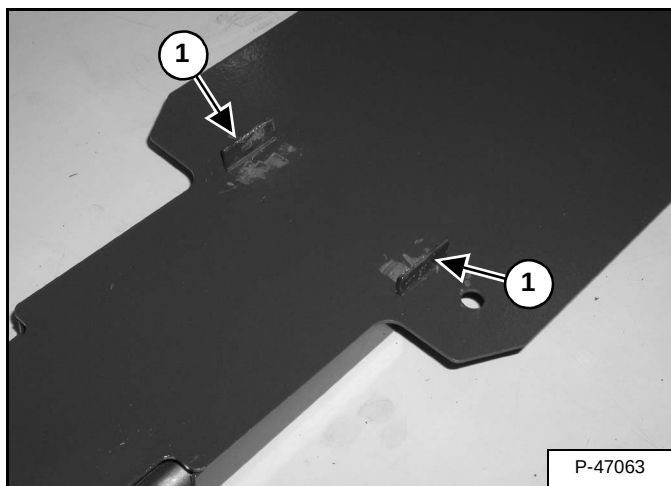

Bend the eight tabs (Item 1) [Figure 20-40-31] up as shown.

Figure 20-40-32

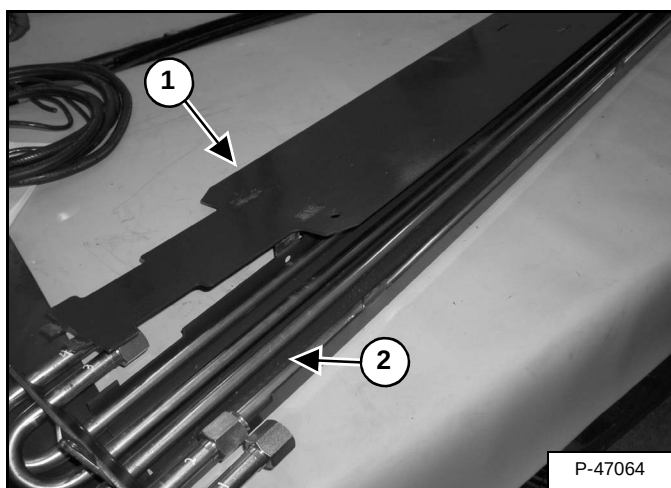

Remove the cover (Item 1) from the tubeline tray assembly (Item 2) [Figure 20-40-32].

EXTENSION CYLINDER (CONT'D)

Tubeline Tray Disassembly (Cont'd)

Figure 20-40-33



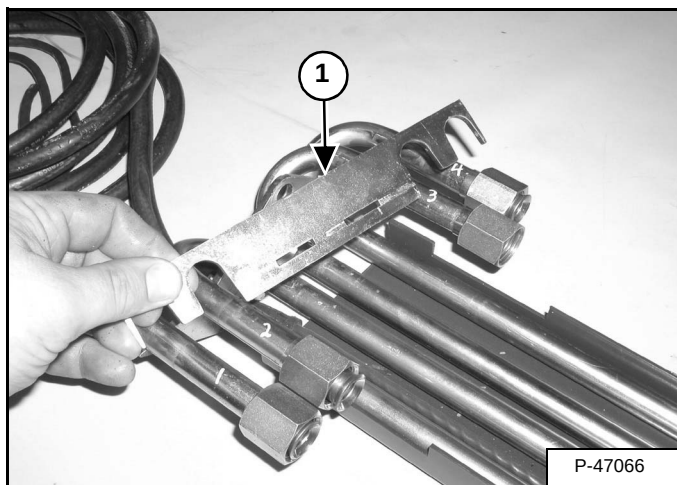


Figure 20-40-34

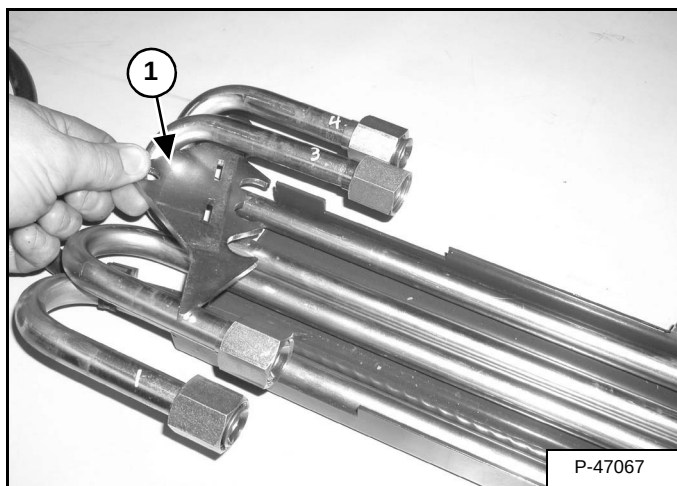

For tubeline replacement, remove the two tubeline clamp brackets (Item 1) [Figure 20-40-33] and [Figure 20-40-34].

Figure 20-40-35

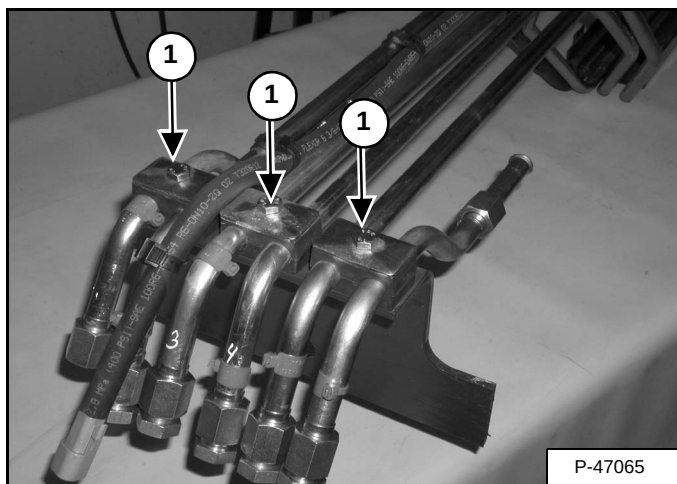


Remove the tubeline clamp mounting bolts (Item 1) [Figure 20-40-35] and clamps.

Remove the tubelines.

Tubeline Tray Assembly

Figure 20-40-36

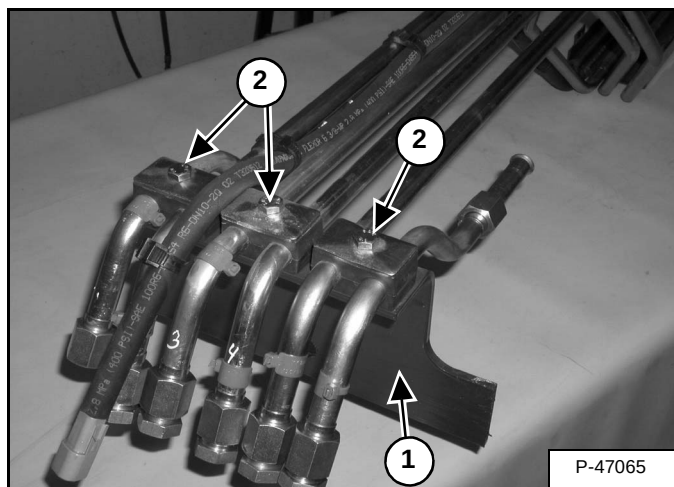


Install the tubelines into tray, and install the bracket (Item 1) onto the tubelines using the clamps and bolts (Item 2) [Figure 20-40-36].

EXTENSION CYLINDER (CONT'D)


Tubeline Tray Assembly (Cont'd)

Figure 20-40-37

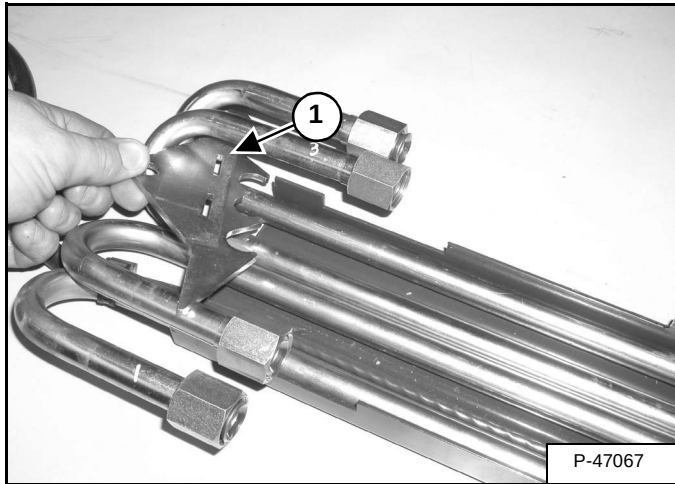


Install the outer tubeline clamp (Item 1) [Figure 20-40-37] on the tubelines.

Figure 20-40-38

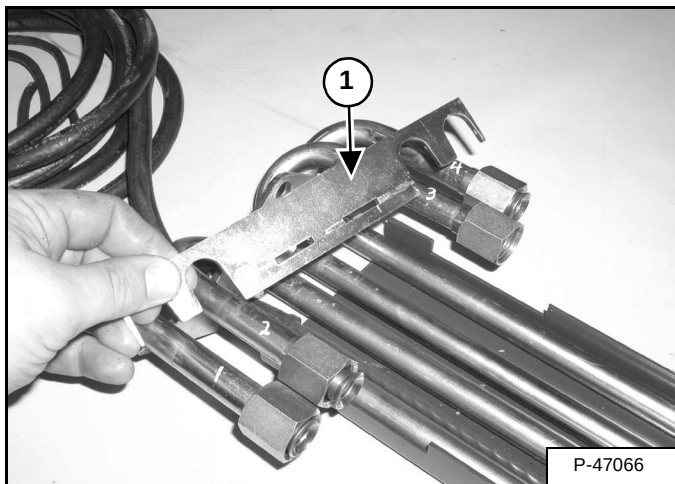


Install the inner tubeline clamp (Item 1) [Figure 20-40-38] over the tubelines.

Figure 20-40-39

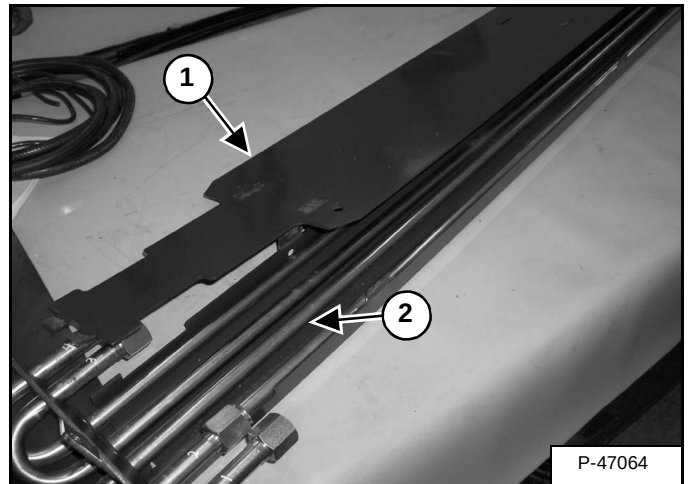

Install the tubeline tray cover (Item 1) onto the tubeline tray assembly (Item 2) [Figure 20-40-39].

Figure 20-40-40

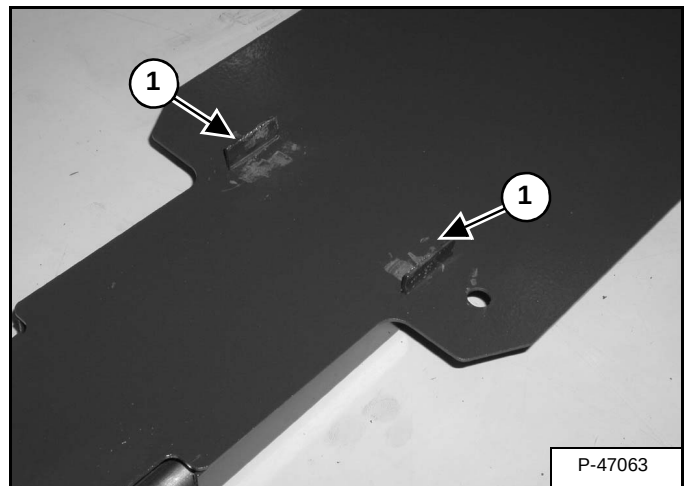


Using a hammer, bend the eight tabs (Item 1) [Figure 20-40-40] over.

EXTENSION CYLINDER (CONT'D)


Tubeline Tray Assembly (Cont'd)

Figure 20-40-41

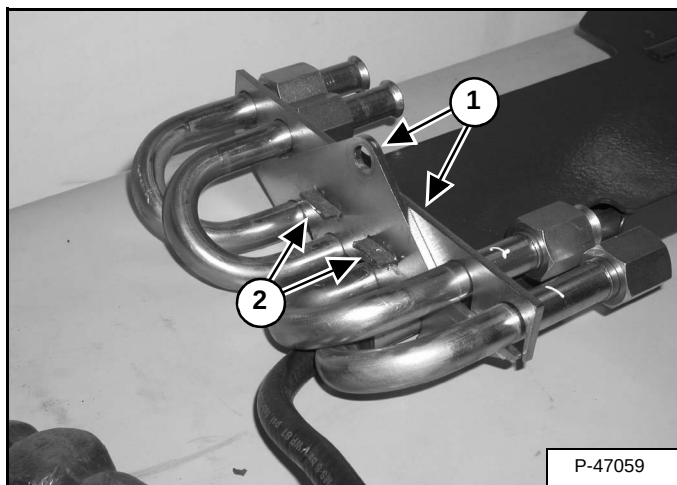


Slide the two tubeline clamp brackets (Item 1) over the two tabs (Item 2) [Figure 20-40-41].

Figure 20-40-42

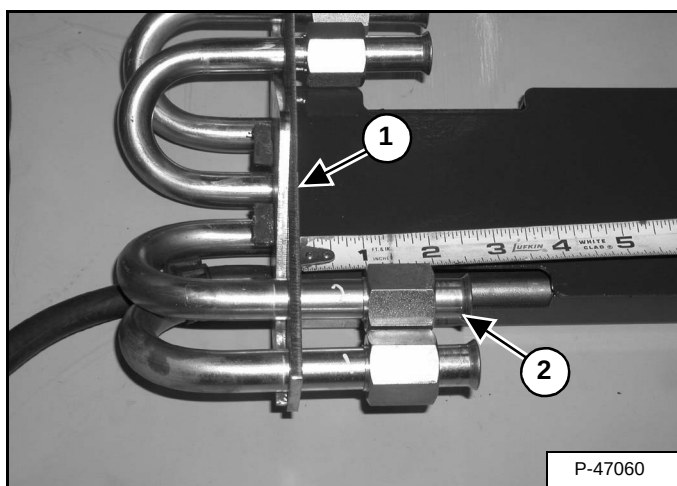


Measure the distance from the tubeline clamp bracket (Item 1) to the tubeline flare (Item 2) [Figure 20-40-42]. The correct measurement must be 2.50 inches (64 mm) for all four tubelines.

Figure 20-40-43

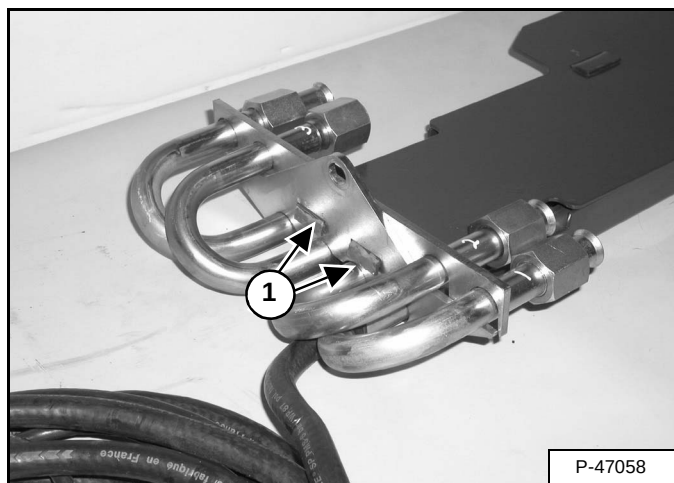

Using a hammer, bend the two tabs (Item 1) [Figure 20-40-43] over. (Both ends)

Figure 20-40-44

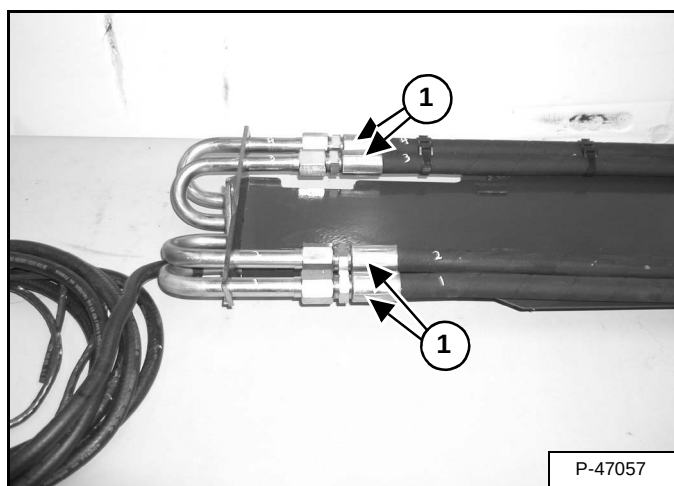


Install the four hoses (Item 1) [Figure 20-40-44] onto the tubelines.

EXTENSION CYLINDER (CONT'D)

Tubeline Tray Assembly (Cont'd)

Figure 20-40-45

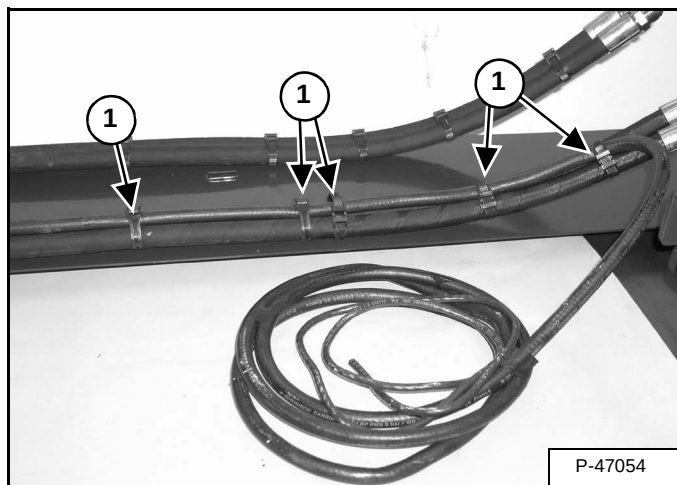


Install new tie straps (Item 1) [Figure 20-40-45] approximately every 6-8 inches (152-203 mm) to secure the electrical harness to the hose.

EXTENSION CYLINDER (CONT'D)

Parts Identification

1. Housing
2. Cartridge
3. Bushing
4. Wiper Seal
5. Wear Ring
6. Seal
7. Head Gland
8. O-ring
9. Rod
10. Piston
11. Lock Ring
12. Nut

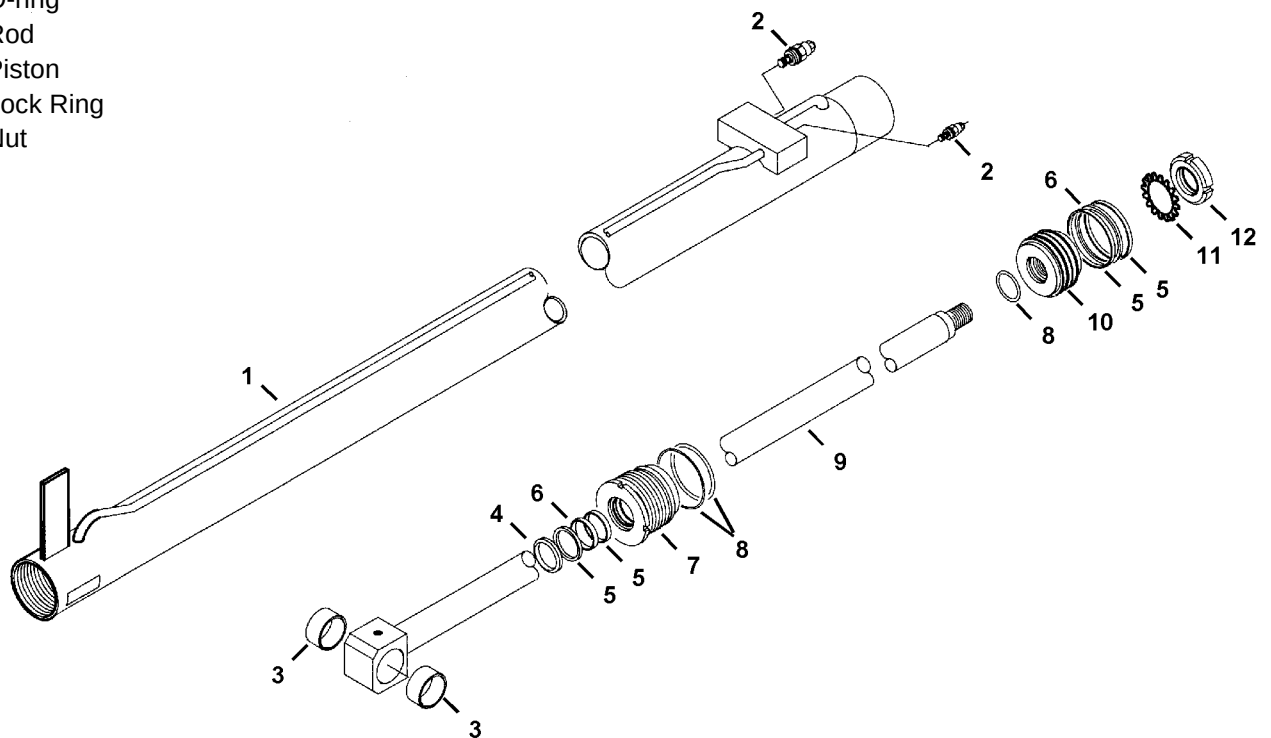

B-19853

EXTENSION CYLINDER (CONT'D)

Disassembly


Use the following tool to disassemble the cylinder:

MEL1354-Spanner Wrench

MEL1075-Adjustable Gland Nut Wrench


MEL1076-Cylinder Wrench

Figure 20-40-46

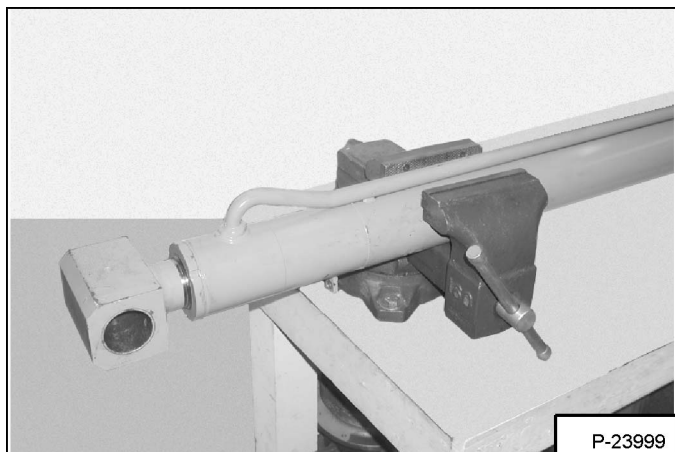


Put the cylinder in a vise [Figure 20-40-46].

Figure 20-40-47

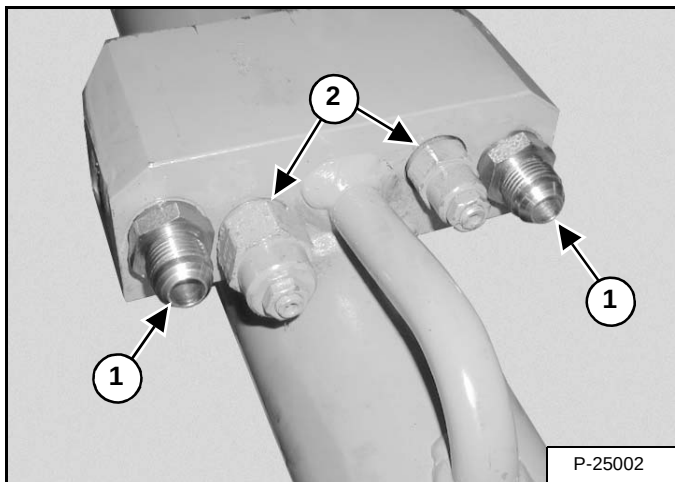


Remove the two fittings (Item 1) and relief cartridges (Item 2) [Figure 20-40-47].

Figure 20-40-48

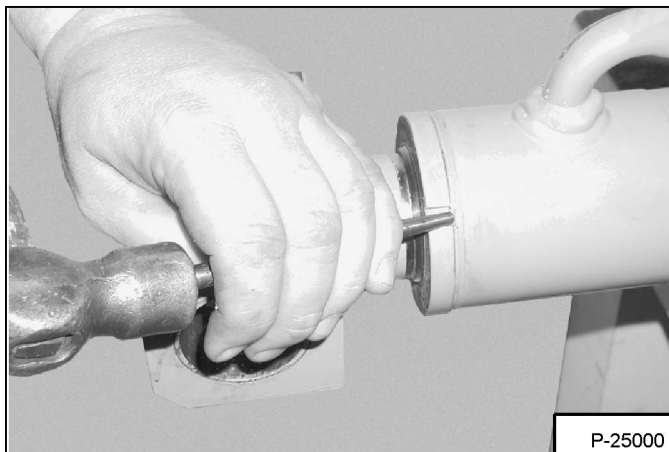

Carefully peel the lock ring from the groove in the head gland [Figure 20-40-48].

Figure 20-40-49

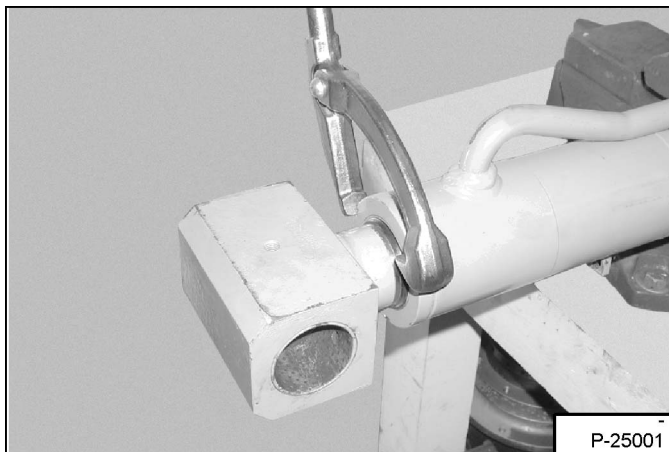


Use the spanner wrench to loosen the head gland [Figure 20-40-49].

EXTENSION CYLINDER (CONT'D)


Disassembly (Cont'd)

Figure 20-40-50

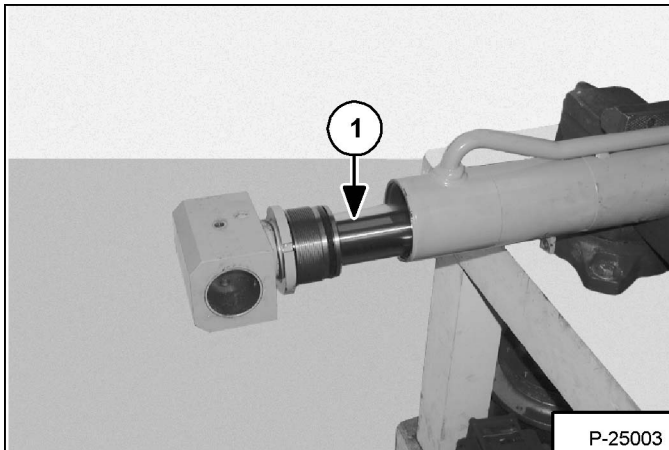


Remove the rod assembly (Item 1) [Figure 20-40-50] from the housing.

Figure 20-40-51

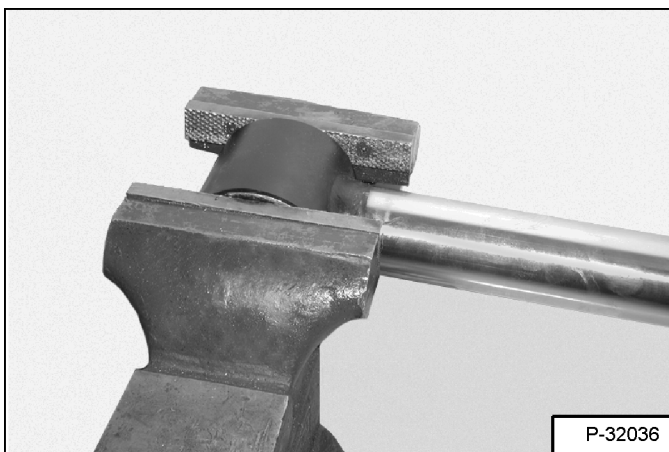


Put the rod end of the cylinder in a vise [Figure 20-40-51].

Figure 20-40-52

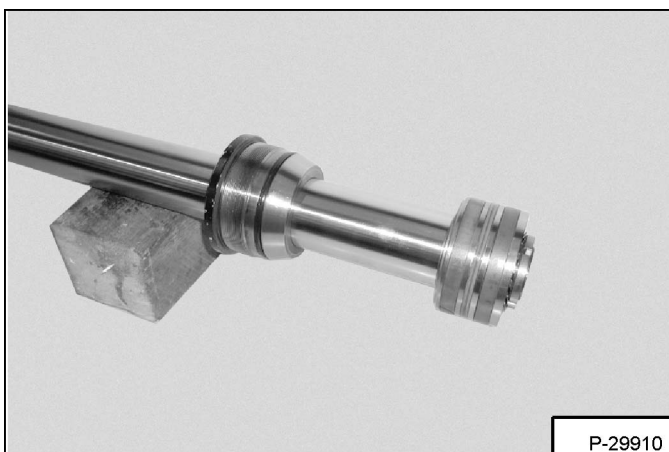

Support the cylinder rod on a wood block [Figure 20-40-52].

Figure 20-40-53

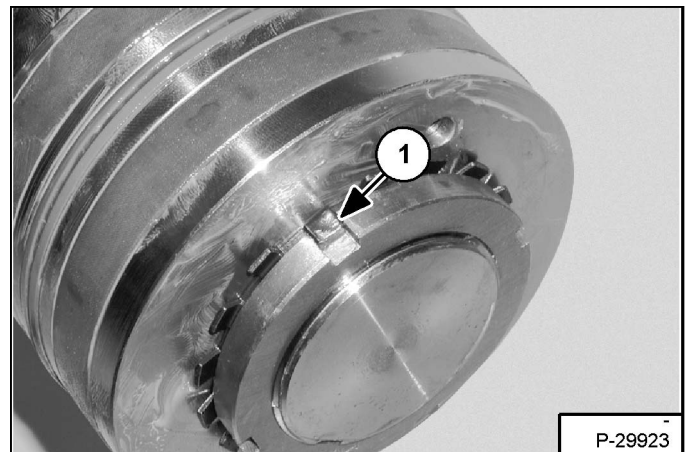


Carefully peen the lock ring tab (Item 1) [Figure 20-40-53] up and out of the lock nut groove.

EXTENSION CYLINDER (CONT'D)


Disassembly (Cont'd)

Figure 20-40-54

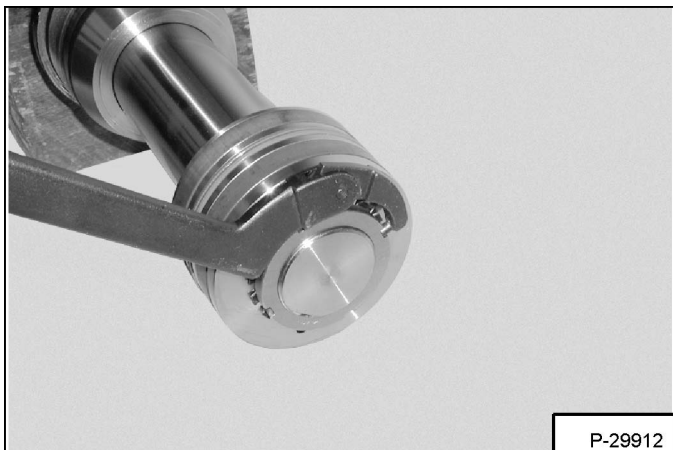


Use the cylinder wrench to remove the lock nut from the cylinder rod [Figure 20-40-54].

Figure 20-40-55

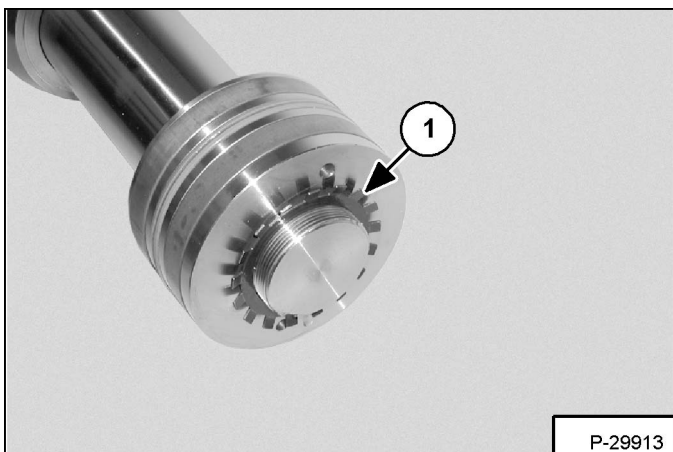


Remove the lock ring (Item 1) [Figure 20-40-55].

Figure 20-40-56

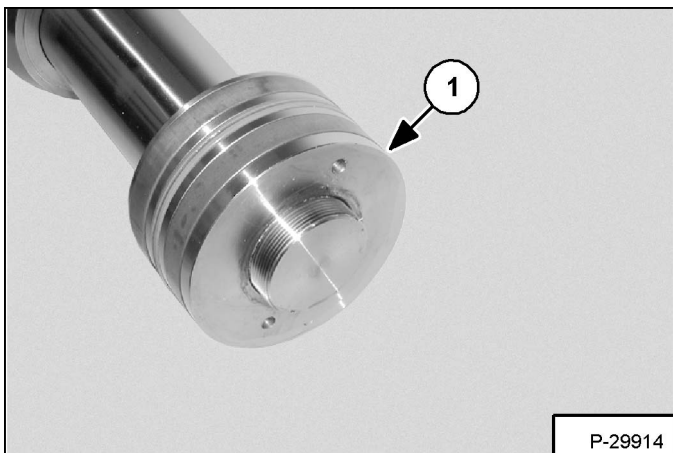

Use the adjustable gland nut wrench to remove the piston (Item 1) [Figure 20-40-56] from the rod.

Figure 20-40-57

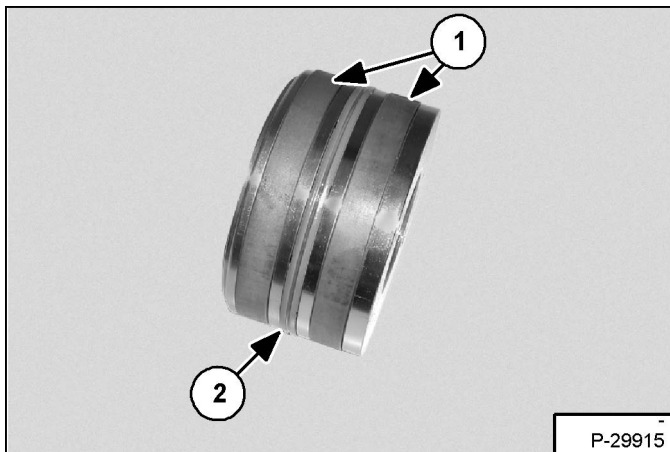


Remove the two wear rings (Item 1) and seal (Item 2) [Figure 20-40-57] from the piston.

EXTENSION CYLINDER (CONT'D)


Disassembly (Cont'd)

Figure 20-40-58

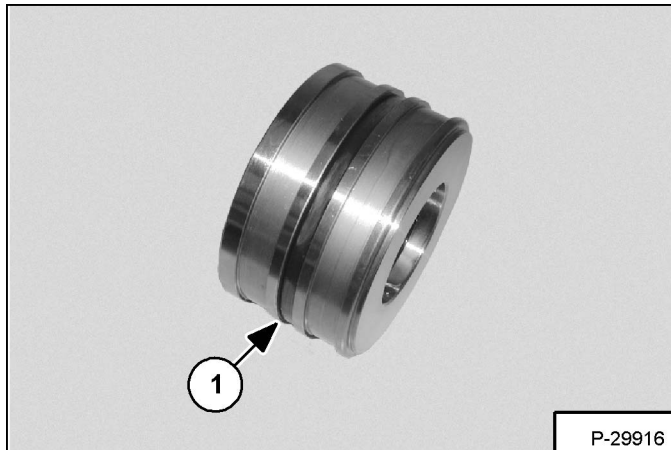


Remove the expander O-ring (Item 1) [Figure 20-40-58].

Figure 20-40-59

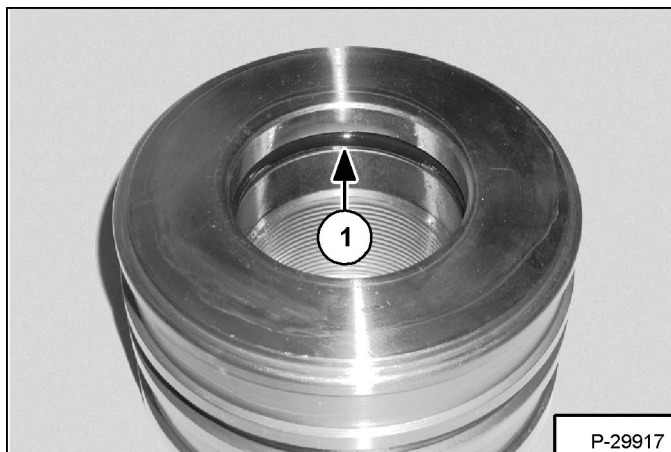


Remove the O-ring (Item 1) [Figure 20-40-59] from the piston.

Figure 20-40-60

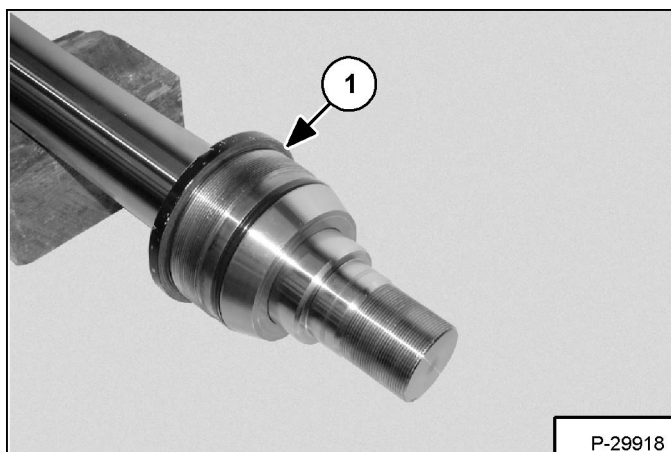

Remove the head gland (Item 1) [Figure 20-40-60] from the rod.

Figure 20-40-61

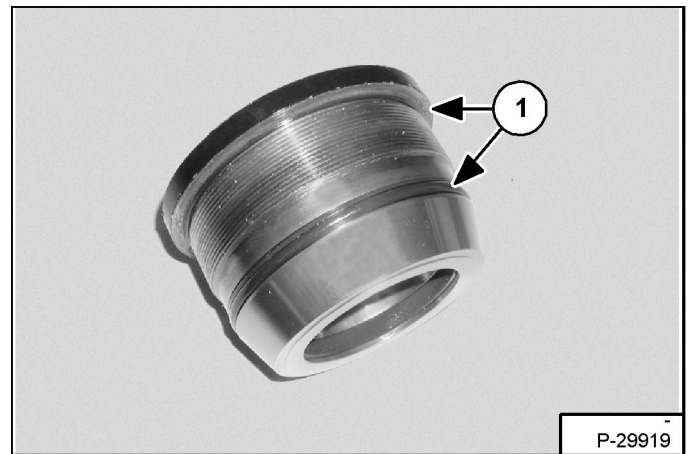


Remove the two O-rings (Item 1) [Figure 20-40-61] from the head gland.

EXTENSION CYLINDER (CONT'D)


Disassembly (Cont'd)

Figure 20-40-62

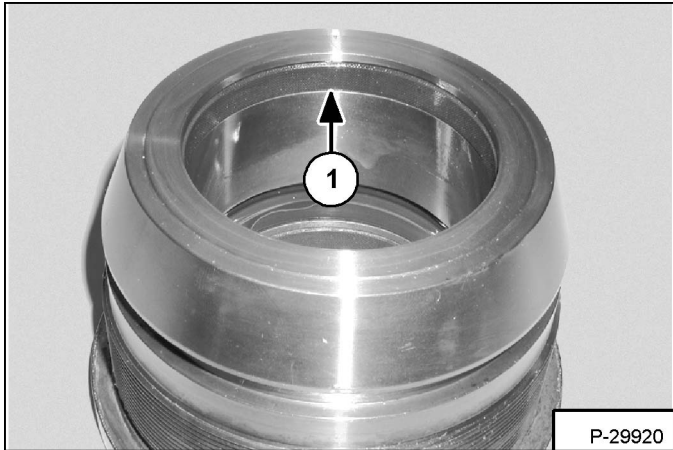

Remove the wear ring (Item 1) [Figure 20-40-62].

Figure 20-40-63

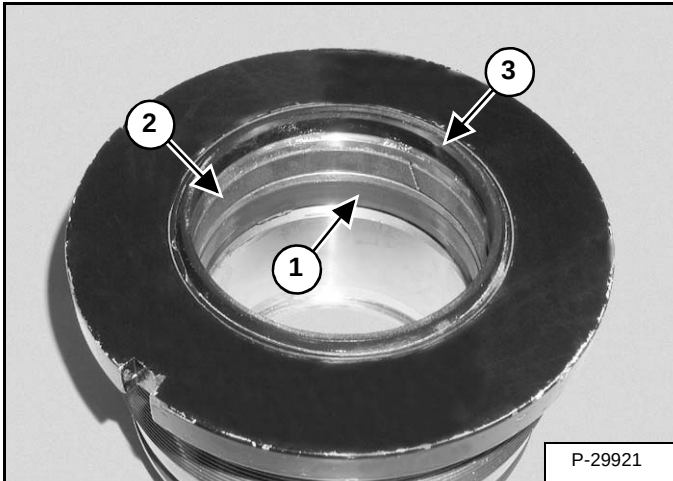

Remove seal (Item 1) wear ring (Item 2) and wiper (Item 3) [Figure 20-40-63] from the head gland.

Assembly

Use the following tools to assemble the cylinder:


MEL1354-Spanner Wrench
MEL1076-Cylinder Wrench
MEL1033-Rod Seal Installation Tool
MEL-1075-Adjustable Gland Nut Wrench

Wash the cylinder parts in solvent and dry with compressed air.

Inspect the cylinder parts for nicks, scratches or other damage. Replace any damaged parts.


Lubricate all O-rings and seals with hydraulic oil during installation. Always use new O-rings and seals.

Figure 20-40-64

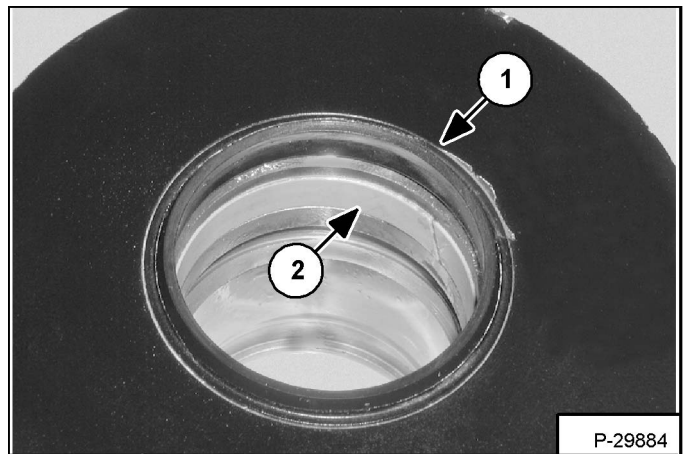

Install the wiper (Item 1) and wear ring (Item 2) [Figure 20-40-64] in the head gland.

Figure 20-40-65

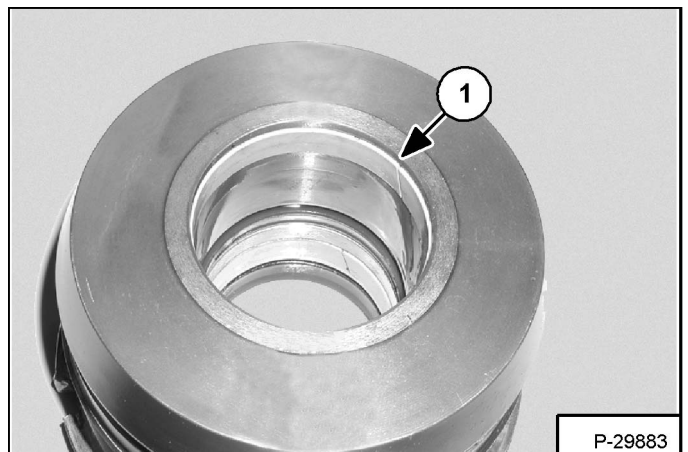

Install the wear ring (Item 1) [Figure 20-40-65].

EXTENSION CYLINDER (CONT'D)

Assembly (Cont'd)


Figure 20-40-66



Install the center seal (Item 1) [Figure 20-40-66] using the seal installation tool.


NOTE: The groove in the seal must point away from the wiper seal (Item 1) [Figure 20-40-64].

Figure 20-40-67

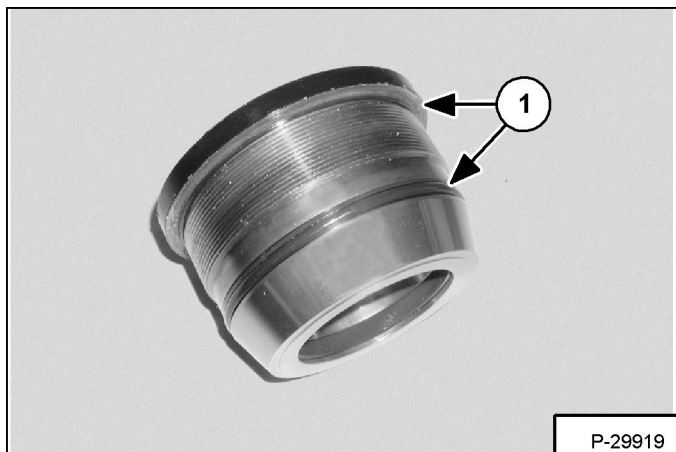


Install the two O-rings (Item 1) [Figure 20-40-67].

Figure 20-40-68

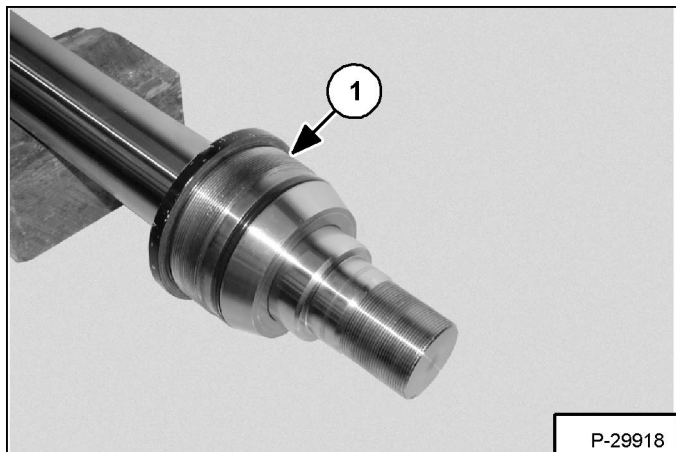

Install the head gland (Item 1) [Figure 20-40-68] onto the rod.

Figure 20-40-69

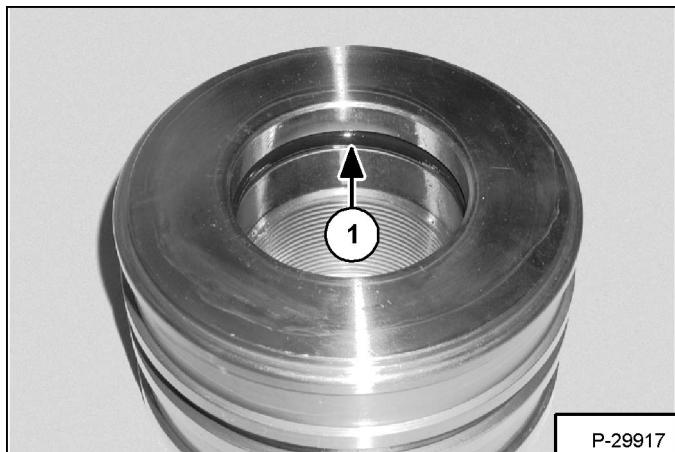


Install the O-ring (Item 1) [Figure 20-40-69] in the piston.

EXTENSION CYLINDER (CONT'D)


Assembly (Cont'd)

Figure 20-40-70

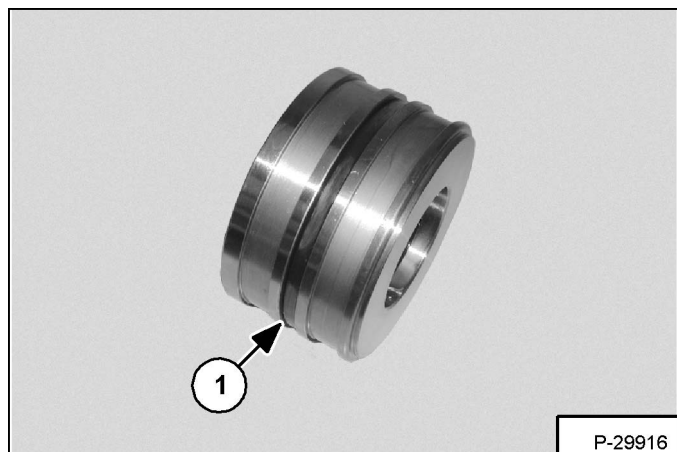


Install the expander O-ring (Item 1) [Figure 20-40-70] on the piston.

Figure 20-40-71

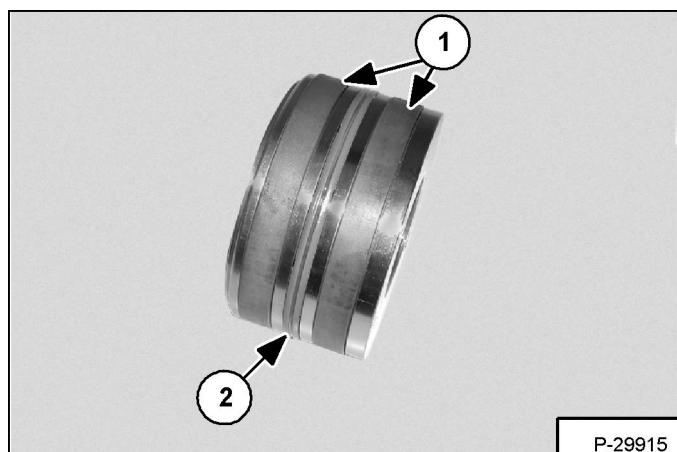


Install the two wear rings (Item 1) and seal (Item 2) [Figure 20-40-71] onto the piston.

Figure 20-40-72

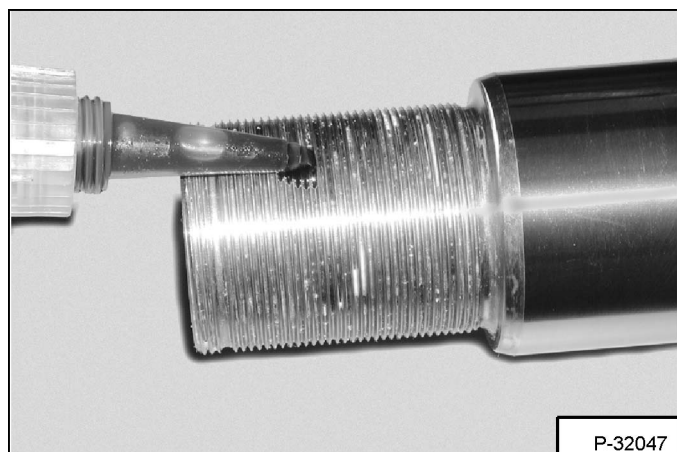

Clean off any old residue, and apply LOCTITE 242 or equivalent to the threads on the rod [Figure 20-40-72].

Figure 20-40-73

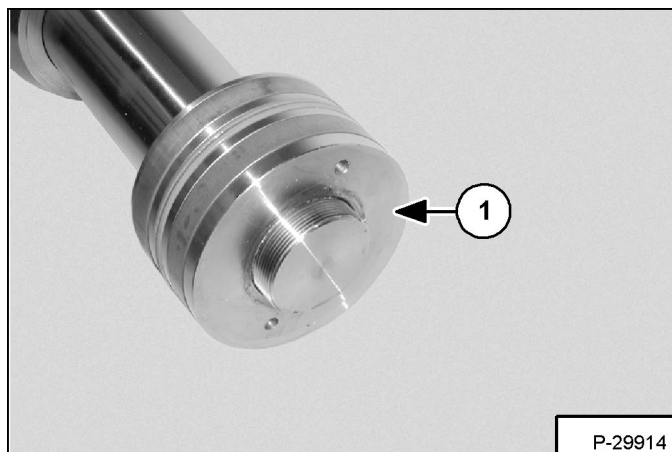


Install the piston (Item 1) [Figure 20-40-73] on the rod and tighten.

EXTENSION CYLINDER (CONT'D)


Assembly (Cont'd)

Figure 20-40-74

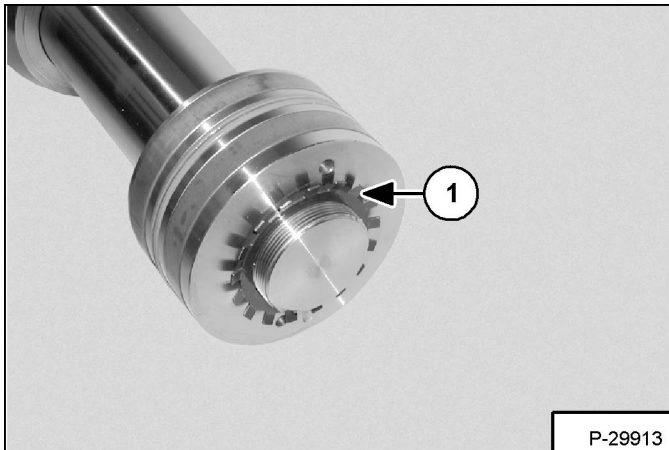


Install the lock ring (Item 1) [Figure 20-40-74].

Figure 20-40-75

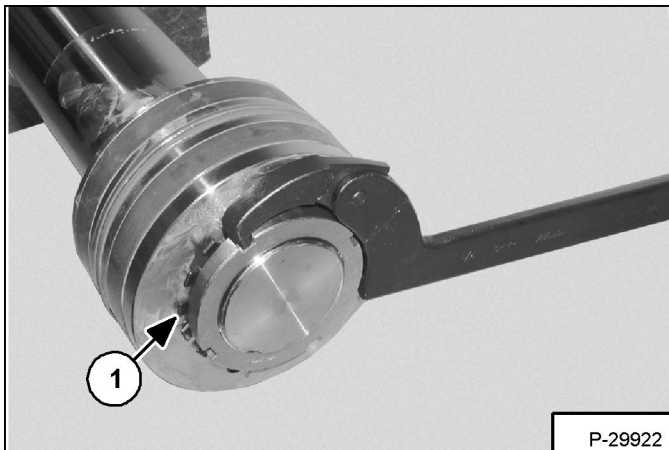


Use the cylinder wrench to install the lock nut (Item 1) [Figure 20-40-75] and tighten.

Figure 20-40-76

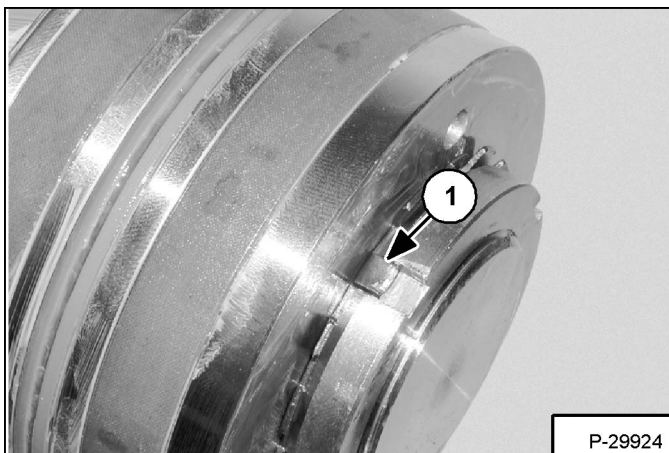

Peen the lock ring tab (Item 1) [Figure 20-40-76] into the groove in the lock nut.

Figure 20-40-77

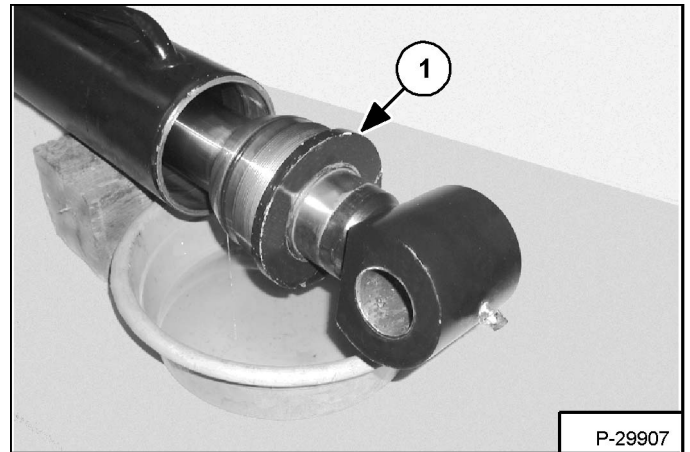


Install the rod assembly (Item 1) [Figure 20-40-77] into the housing.

EXTENSION CYLINDER (CONT'D)

Assembly (Cont'd)


Install the two fittings (Item 1) and two relief cartridges (Item 2) [Figure 20-40-80].

Figure 20-40-78

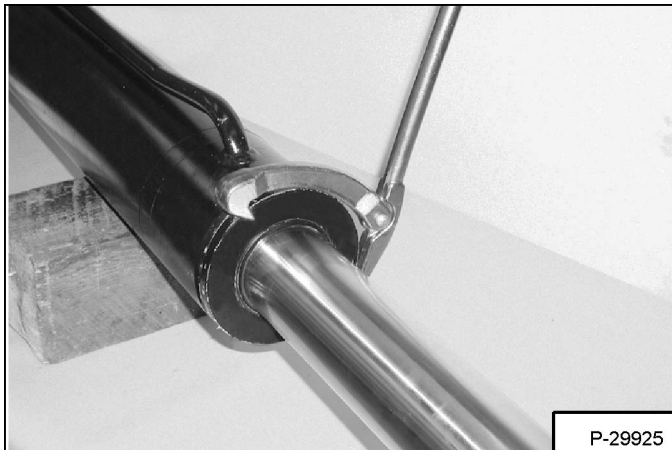


Use the spanner wrench to tighten the head gland [Figure 20-40-78].

Figure 20-40-79

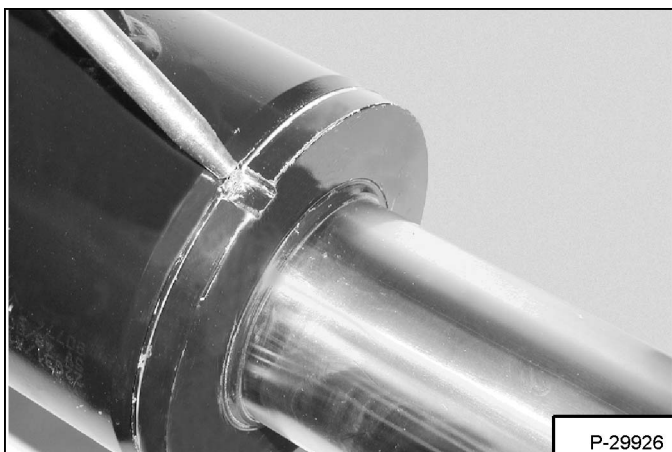

Peen the lock ring into the groove in the head gland [Figure 20-40-79].


Figure 20-40-80

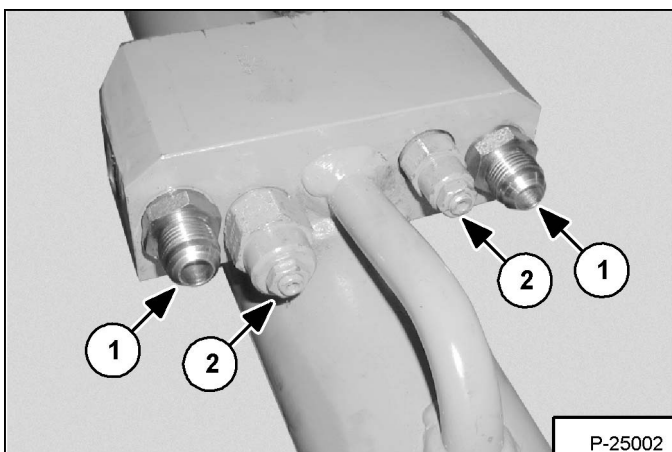

TILT CYLINDER

Removal And Installation


Figure 20-50-1

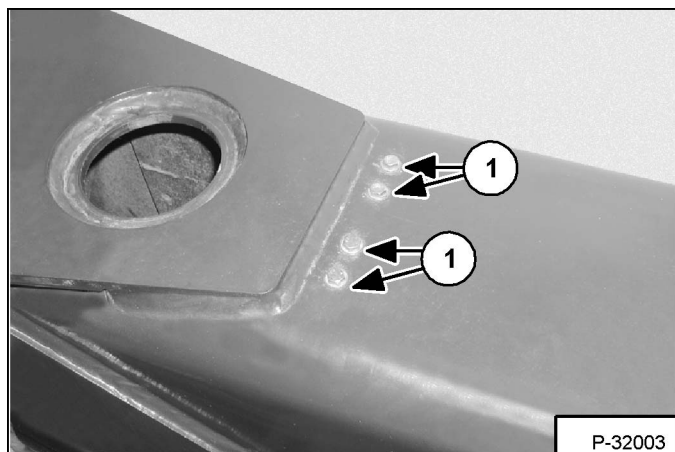

Remove the four bolts [Figure 20-50-1]. Extend the inner boom out approximately 36 inches (914 mm) .

Remove the Pivot Link. (See "Removal And Installation" on page 50-120-1)


Figure 20-50-2

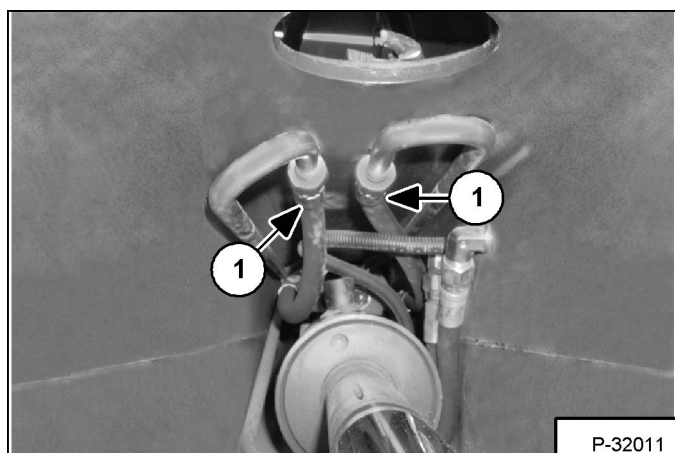

Remove the two hoses (Item 1) [Figure 20-50-2] from the tubelines.

NOTE: Mark the hoses for correct installation.


Figure 20-50-3

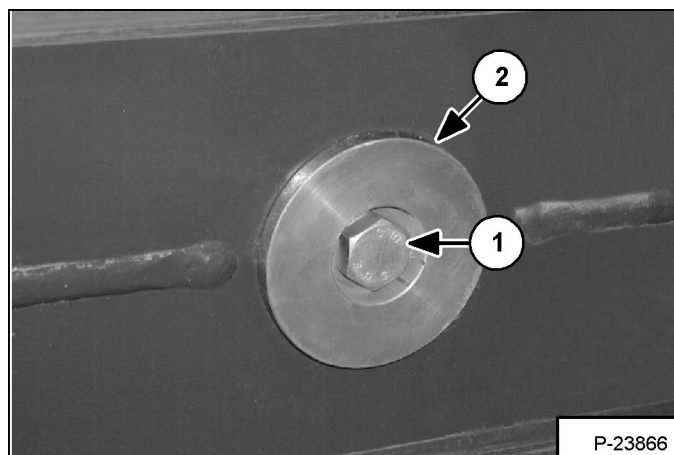

Remove the bolt (Item 1) and bushing (Item 2) [Figure 20-50-3] from each side of the boom.

Installation: Tighten the bolt to 188-210 ft.-lbs. (255-285 Nm) torque.

Figure 20-50-4

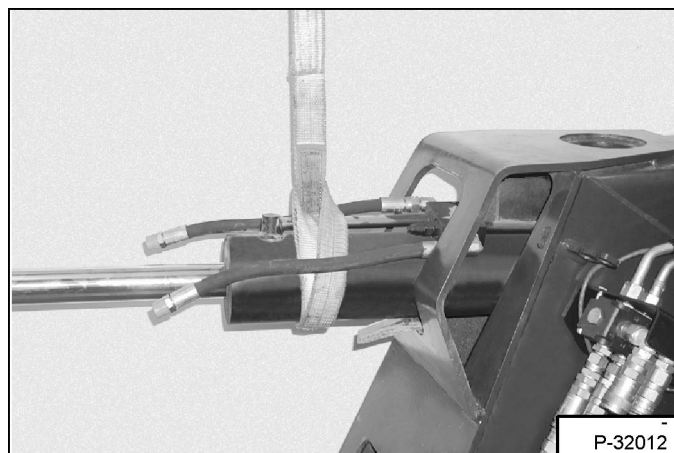


Remove the tilt cylinder from the end of the boom as shown [Figure 20-50-4].

TILT CYLINDER (CONT'D)

Parts Identification

1. Housing
2. Bushing
3. Cartridge
4. Grease Fitting
5. Rod
6. Wiper
7. Wear Ring
8. Seal
9. Head Gland
10. O-ring
11. Piston
12. Set Screw

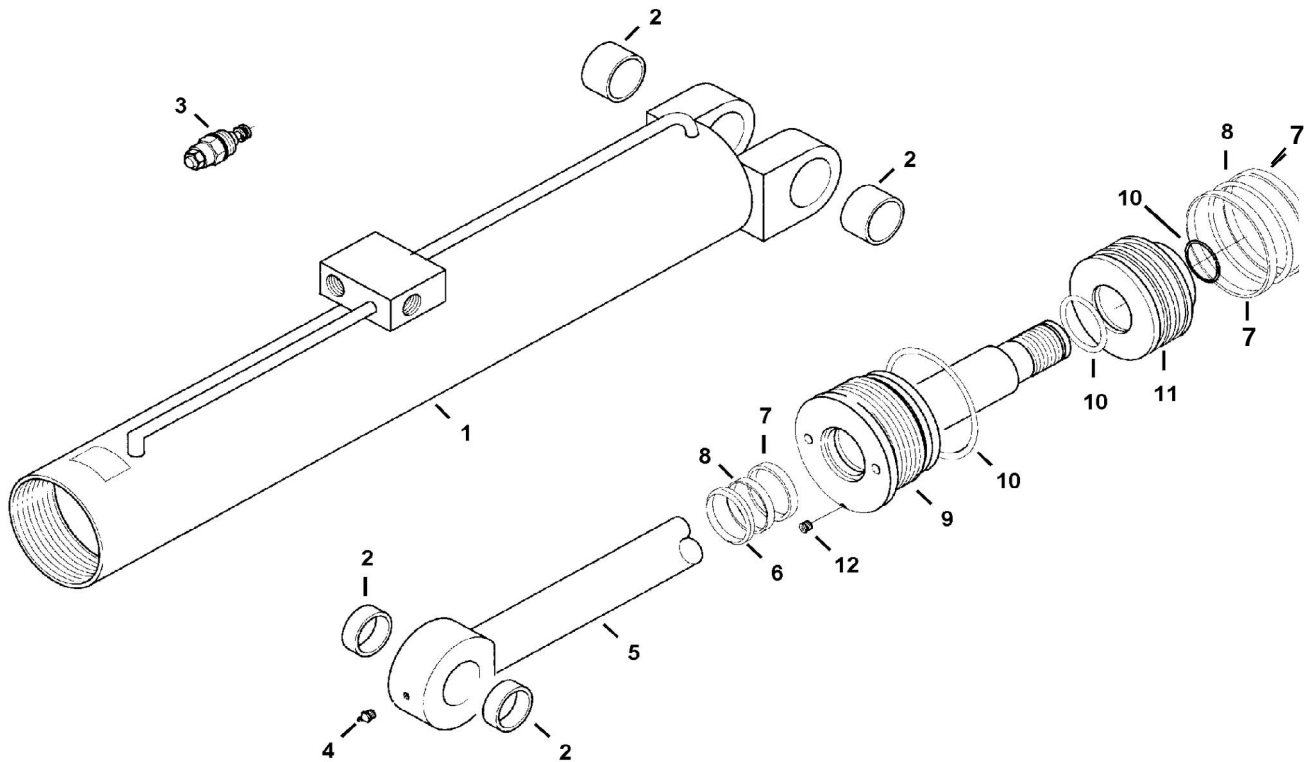

B-19854


TILT CYLINDER (CONT'D)

Disassembly

Use the following tools to disassemble the cylinder:


MEL1075-Adjustable Gland Wrench

Figure 20-50-5

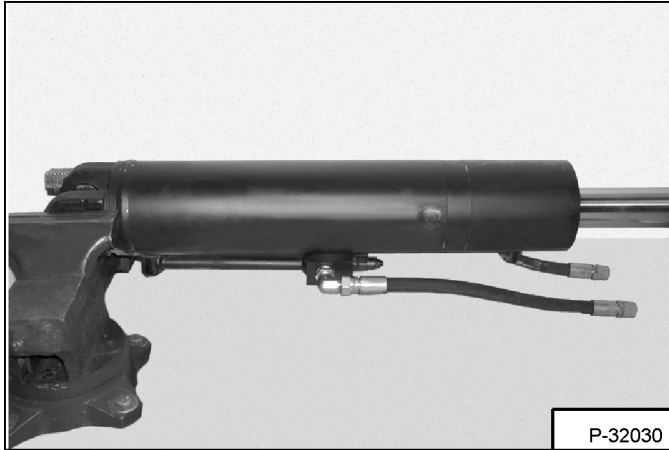


Put the cylinder in a vise [Figure 20-50-5].

Figure 20-50-6

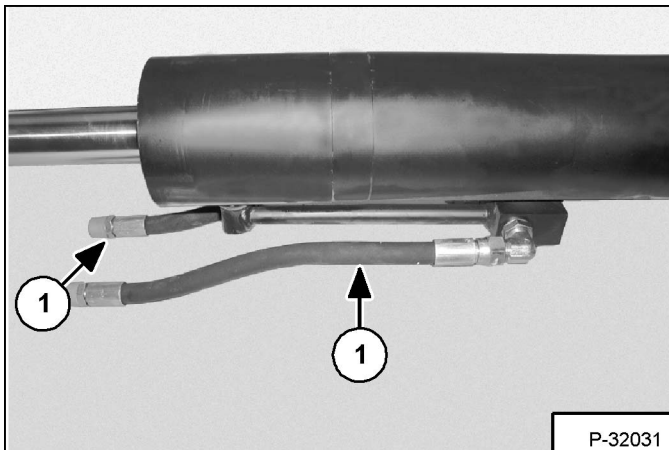


Remove the two hoses (Item 1) [Figure 20-50-6] from the cylinder.

Figure 20-50-7

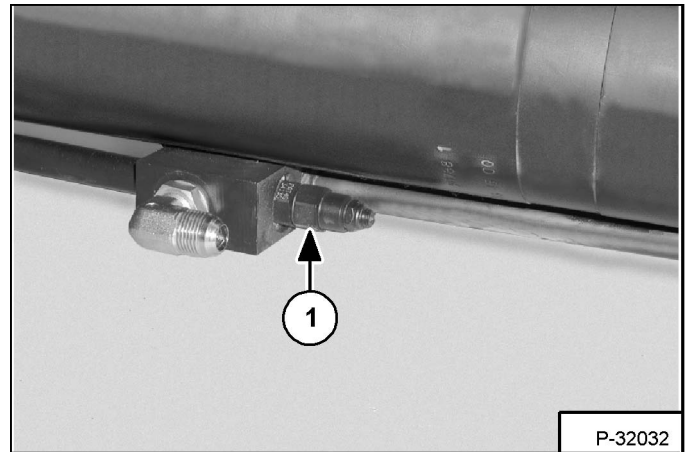

Remove the relief cartridge (Item 1) [Figure 20-50-7].

Figure 20-50-8

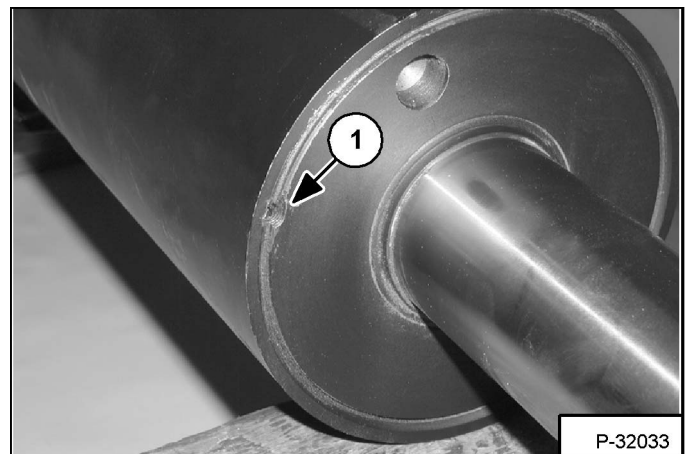


Remove the set screw (Item 1) [Figure 20-50-8].

TILT CYLINDER (CONT'D)


Disassembly (Cont'd)

Figure 20-50-9

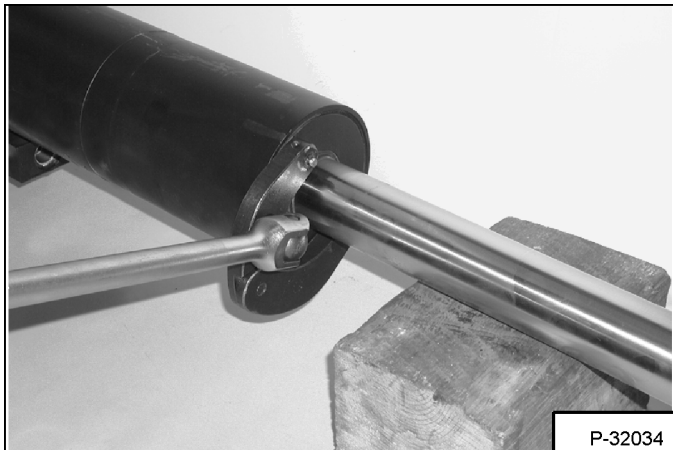


Use the adjustable gland wrench to loosen the head gland [Figure 20-50-9].

Figure 20-50-10

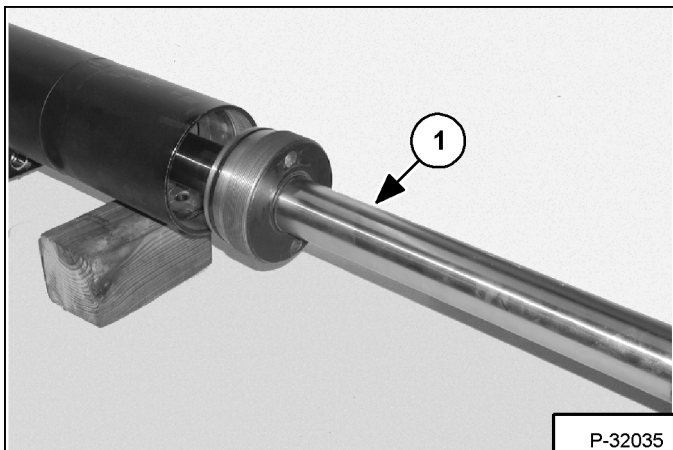


Remove the rod assembly (Item 1) [Figure 20-50-10].

Figure 20-50-11

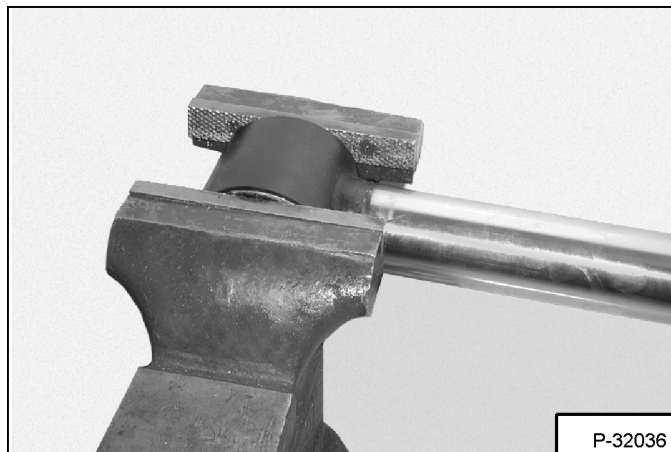

Put the rod end of the cylinder in a vise [Figure 20-50-11].

Figure 20-50-12

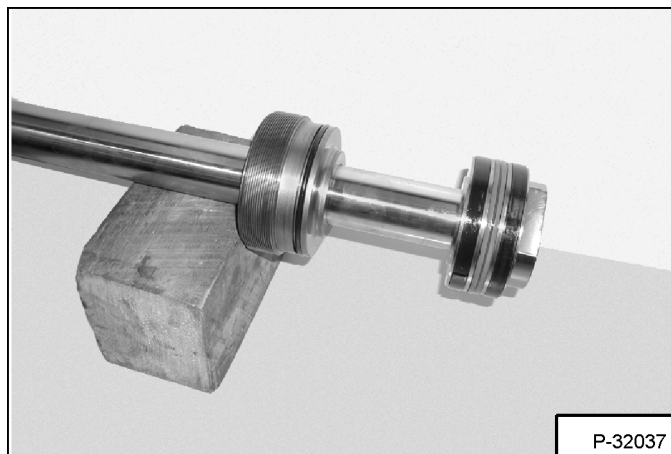


Support the cylinder rod on a wood block [Figure 20-50-12].

TILT CYLINDER (CONT'D)


Disassembly (Cont'd)

Figure 20-50-13

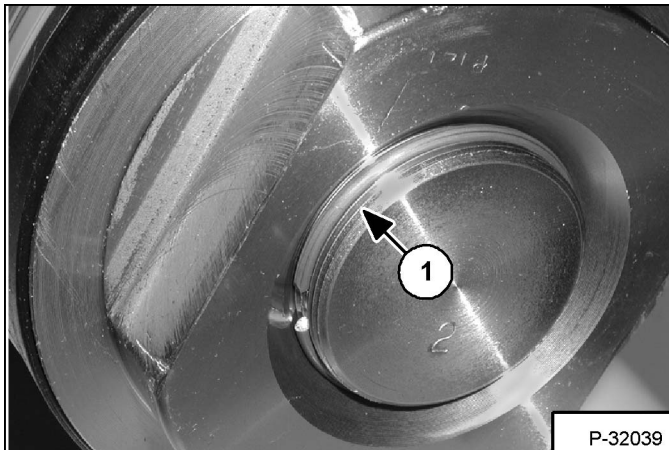


Remove the lock ring (Item 1) [Figure 20-50-13].

Figure 20-50-14

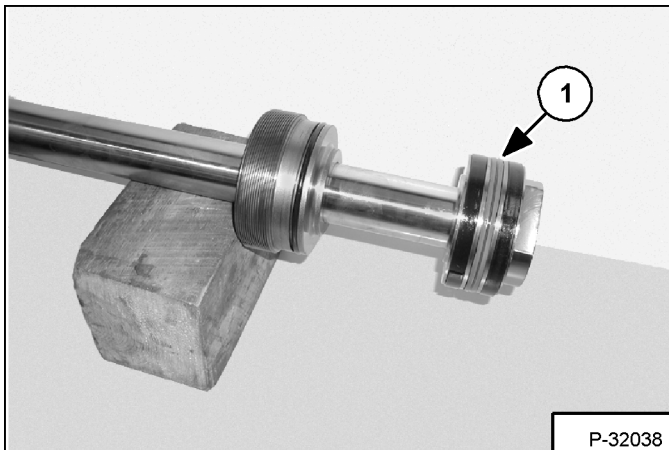


Remove the piston (Item 1) [Figure 20-50-14] from the rod.

Figure 20-50-15

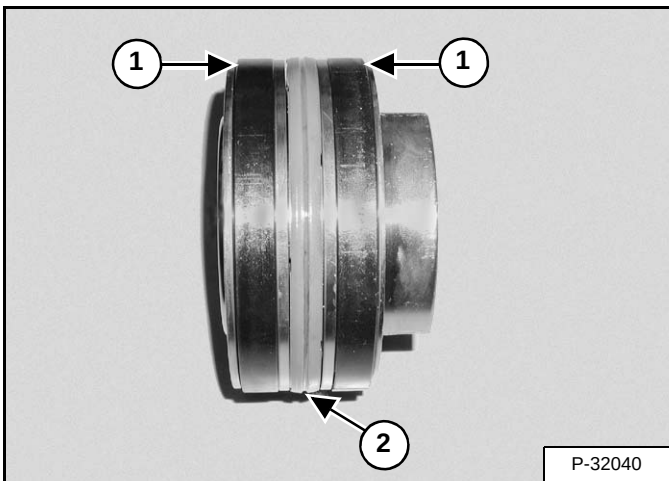

Remove the two wear rings (Item 1) and seal (Item 2) [Figure 20-50-15] from the piston.

Figure 20-50-16

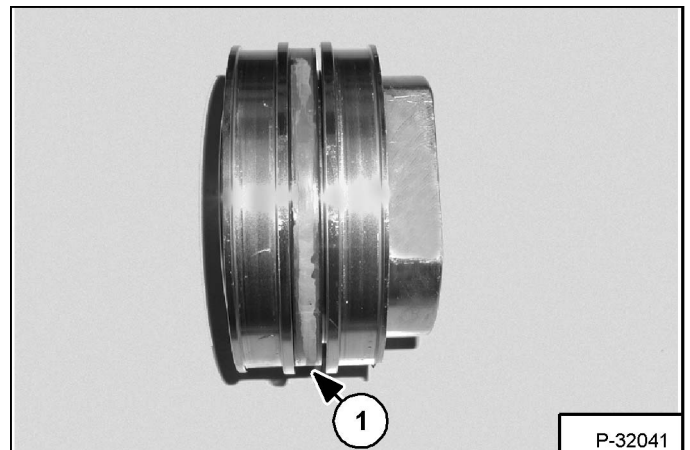


Remove the expander O-ring (Item 1) [Figure 20-50-16].

TILT CYLINDER (CONT'D)


Disassembly (Cont'd)

Figure 20-50-17

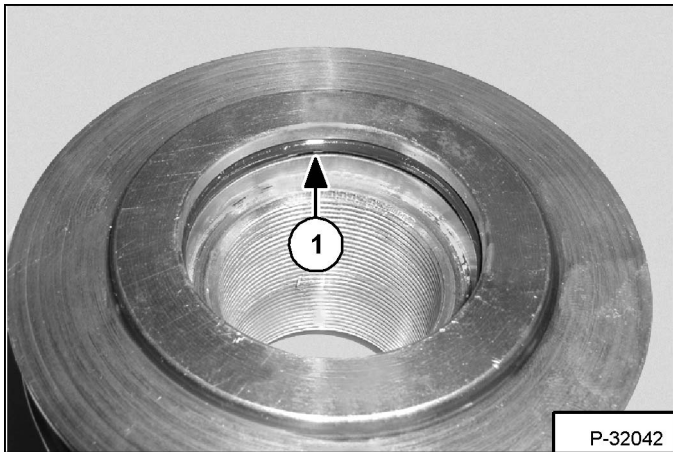


Remove the O-ring (Item 1) [Figure 20-50-17] from the inside of the piston.

Figure 20-50-18

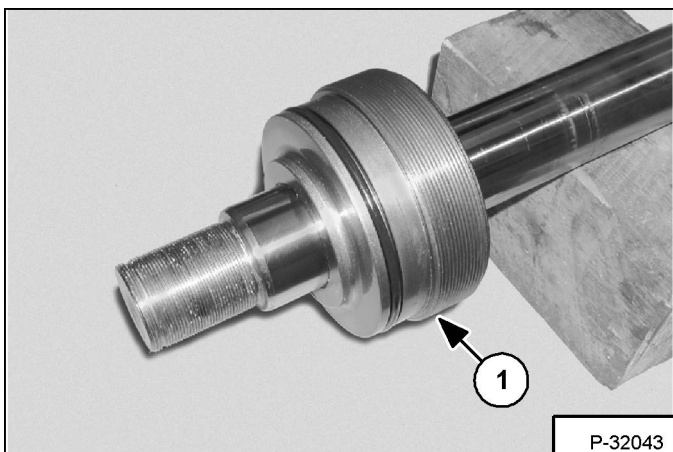


Remove the head gland (Item 1) [Figure 20-50-18] from the rod.

Figure 20-50-19

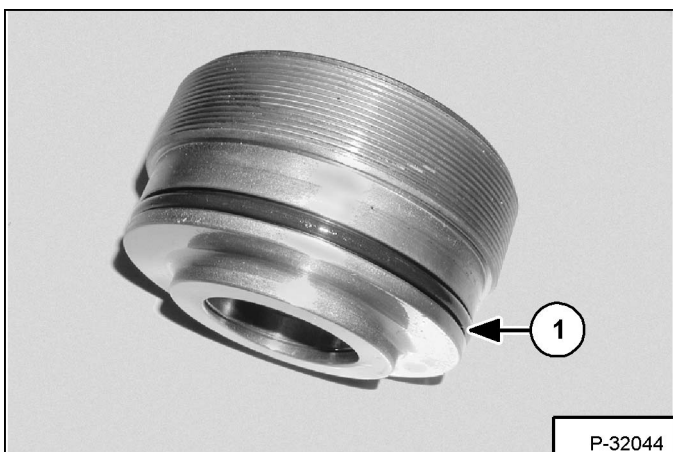

Remove the O-ring (Item 1) [Figure 20-50-19] from the head.

Figure 20-50-20

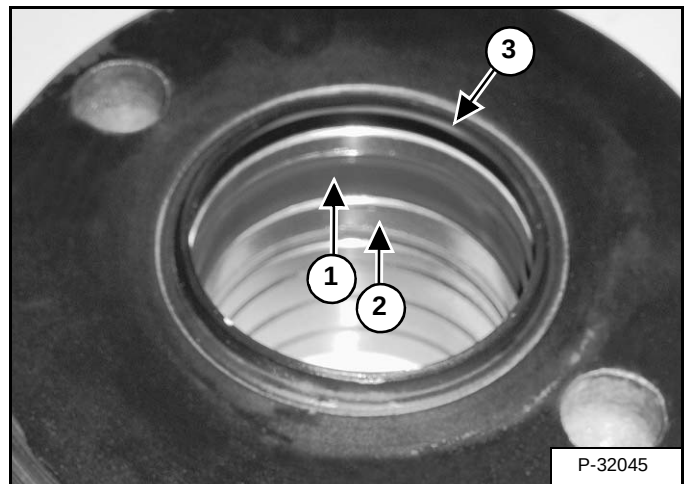

Remove the seal (Item 1) wear ring (Item 2) and wiper (Item 3) [Figure 20-50-20].

TILT CYLINDER (CONT'D)

Assembly


Use the following tools to assemble the cylinder:
MEL1075-Adjustable Gland Nut Wrench

Wash the cylinder parts in solvent and dry with compressed air.

Inspect the cylinder parts for damage. Replace any damaged parts.

Lubricate all O-rings and seals with hydraulic oil during installation. Always use new O-rings and seals.

Figure 20-50-21

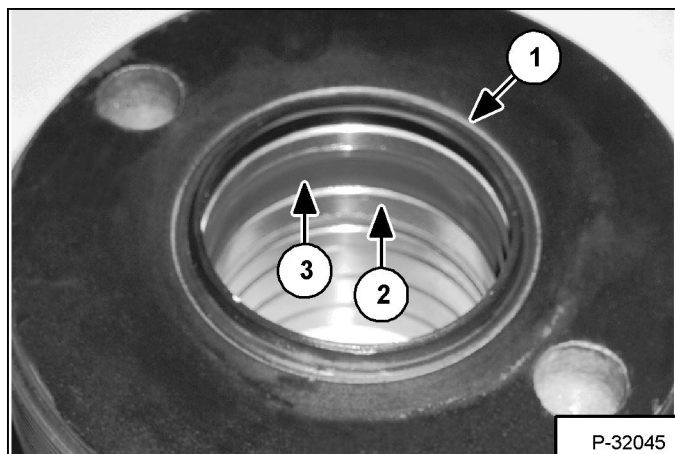

Install the wiper (Item 1) wear ring (Item 2) and seal (Item 3) [Figure 20-50-21].


NOTE: The groove in the seal must point away from the wiper seal (Item 1) [Figure 20-50-21].

Figure 20-50-22




Install the O-ring (Item 1) [Figure 20-50-22] on to the head.

Figure 20-50-23

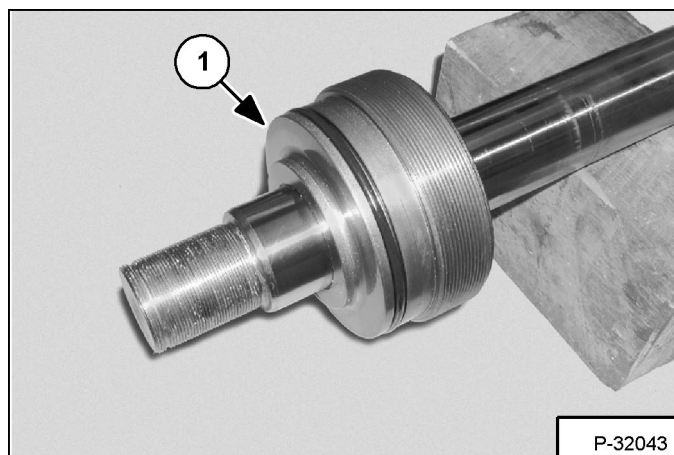

Install the head gland (Item 1) [Figure 20-50-22] onto the rod.

Figure 20-50-24

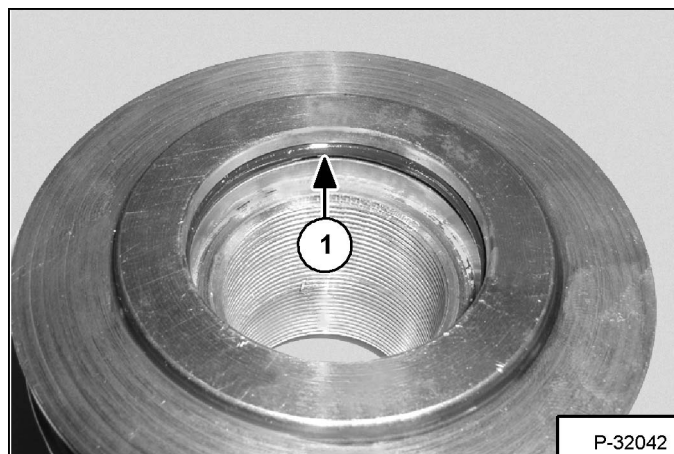


Install the O-ring (Item 1) [Figure 20-50-24] on the inside of the piston.

TILT CYLINDER (CONT'D)


Assembly (Cont'd)

Figure 20-50-25

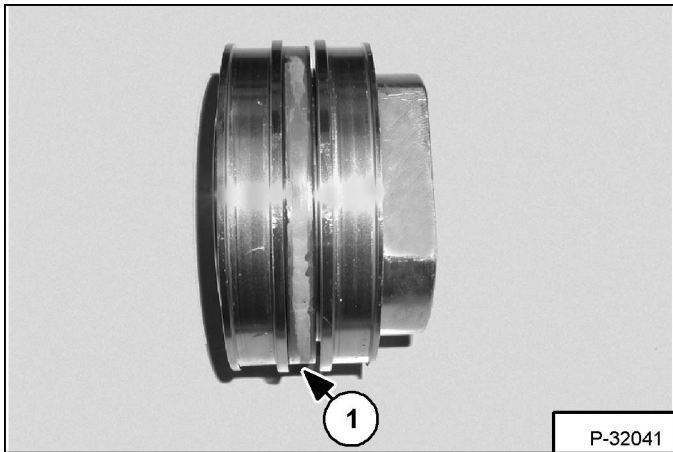


Install the expander O-ring (Item 1) [Figure 20-50-25] onto the piston.

Figure 20-50-26

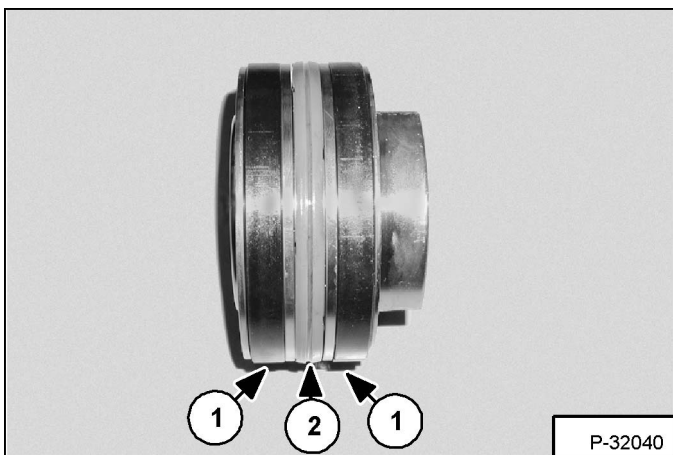


Install the two wear rings (Item 1) and seal (Item 2) [Figure 20-50-26].

Figure 20-50-27

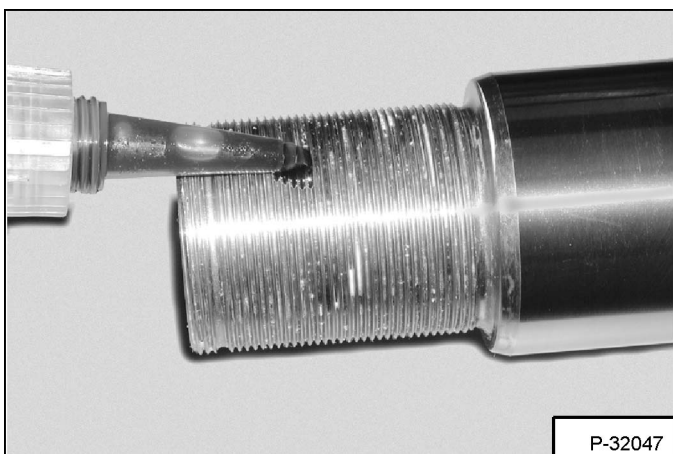

Clean off any old residue, and apply LOCTITE 242 or equivalent to the threads on the rod [Figure 20-50-27].

Figure 20-50-28

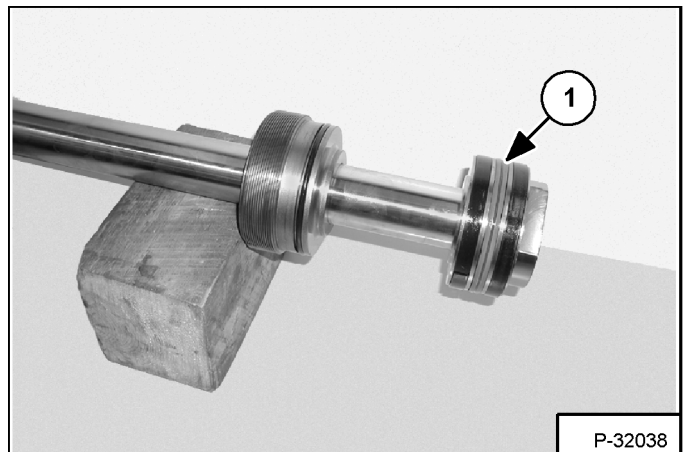


Install the piston (Item 1) [Figure 20-50-28] onto the rod and tighten.

TILT CYLINDER (CONT'D)


Assembly (Cont'd)

Figure 20-50-29

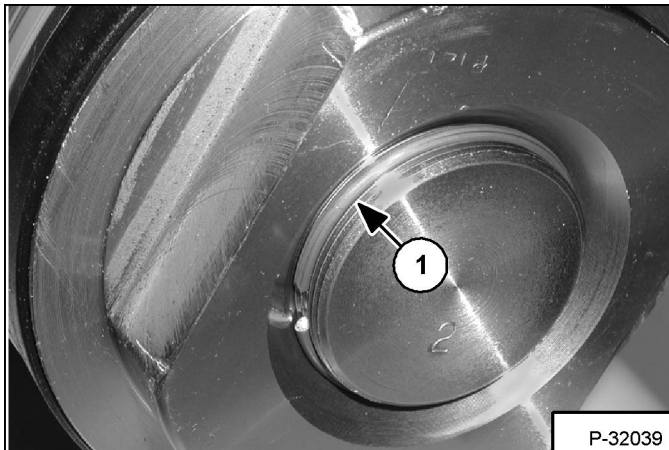


Install the lock ring (Item 1) [Figure 20-50-29].

Figure 20-50-30

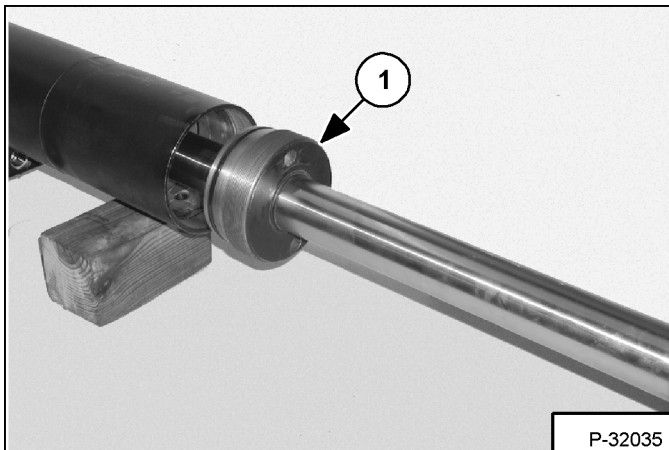


Install the piston/rod assembly (Item 1) [Figure 20-50-30] into the housing.

Figure 20-50-31

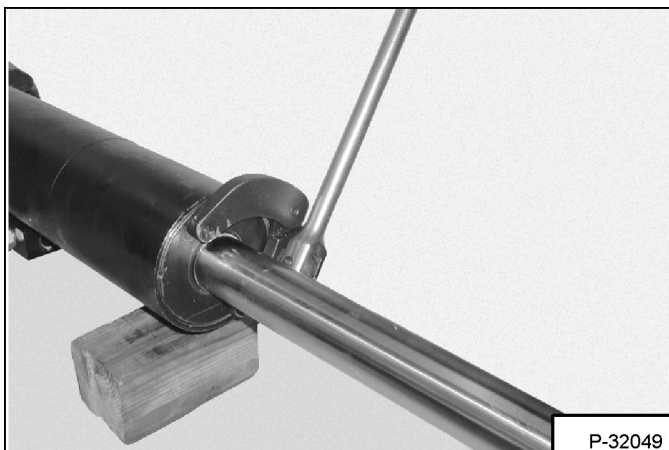

Use the adjustable gland wrench to tighten the head gland [Figure 20-50-31].

Figure 20-50-32

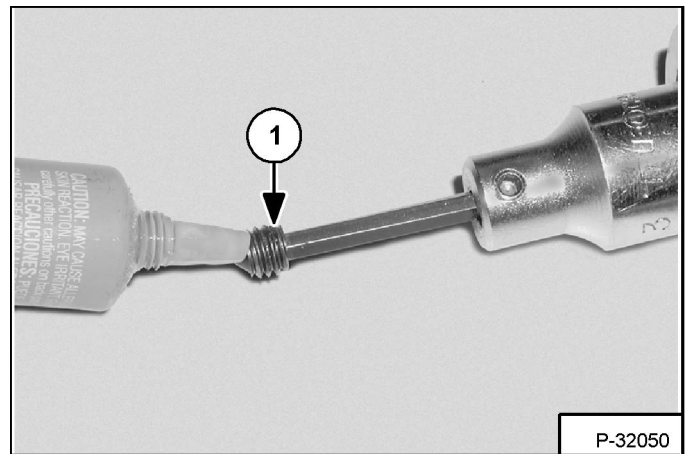


Apply LOCTITE 242 or equivalent to the set screw (Item 1) [Figure 20-50-32].

TILT CYLINDER (CONT'D)


Assembly (Cont'd)

Figure 20-50-33

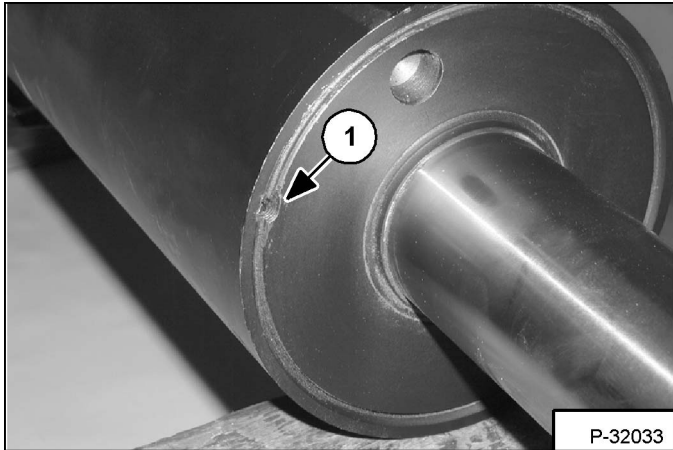


Install the set screw (Item 1) [Figure 20-50-33] and tighten.

Figure 20-50-34

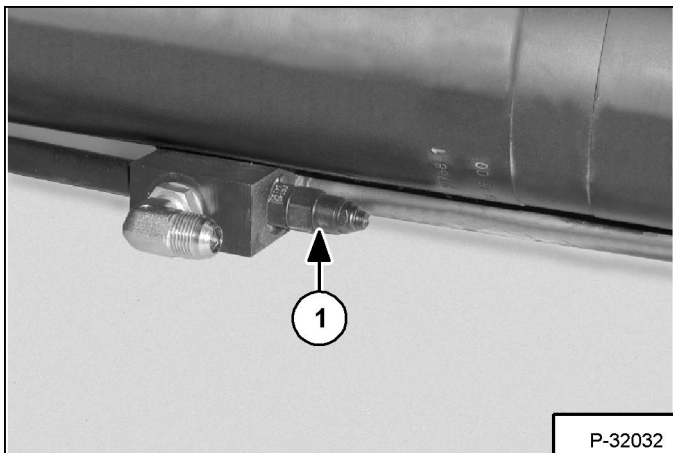

Install the relief cartridge (Item 1) [Figure 20-50-34].

Figure 20-50-35

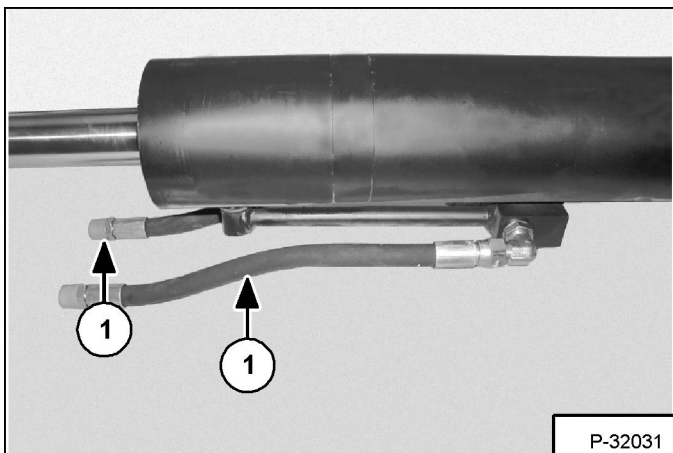


Install the two hoses (Item 1) [Figure 20-50-35].

STEERING CYLINDER (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000)

Removal And Installation

Remove the front axle. (See "Removal" on page 40-31-1 for machine with Frame Leveling) or (See "Removal" on page 40-30-1 for machine without Frame Leveling)


Figure 20-60-1

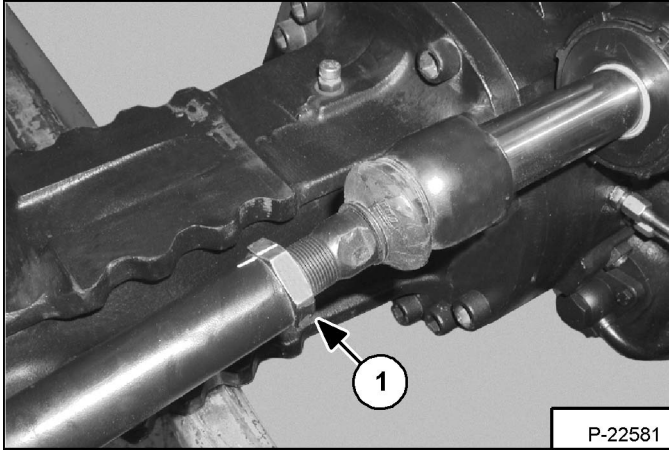

Loosen the tie rod jam nut (Item 1) [Figure 20-60-1], mark the location of the nut for ease of assembly.

Installation: Tighten the jam nut to 185 ft.-lbs. (250 Nm) torque.


Figure 20-60-2

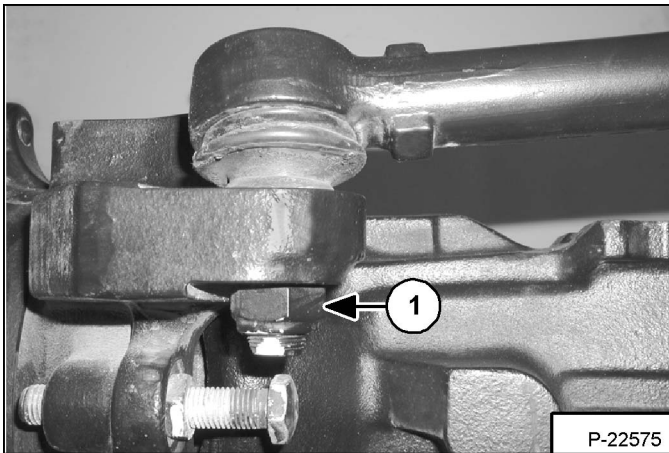

Loosen and remove the tie rod nut (Item 1) [Figure 20-60-2].


Installation: Tighten the nut to 160 ft.-lbs. (220 Nm) torque.

Figure 20-60-3

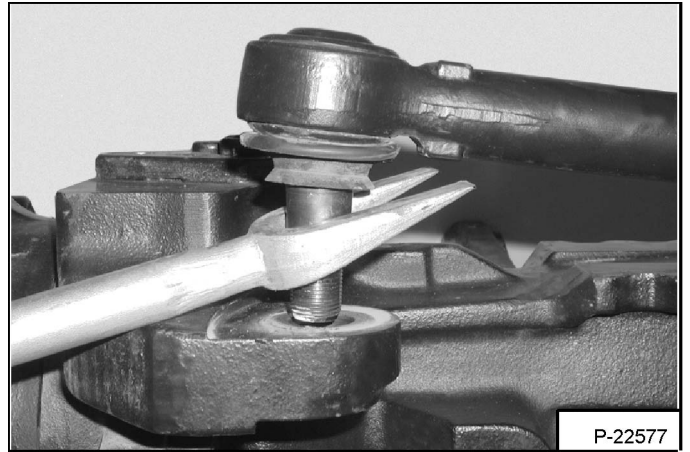

Remove the tie rod end from the axle [Figure 20-60-3].

Figure 20-60-4

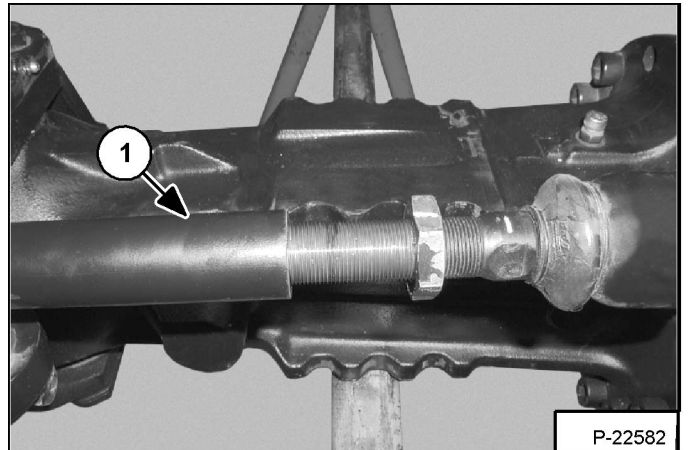


Remove the tie rod ends (Item 1) [Figure 20-60-4] from the steering cylinder.

STEERING CYLINDER (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Removal And Installation (Cont'd)

Figure 20-60-5

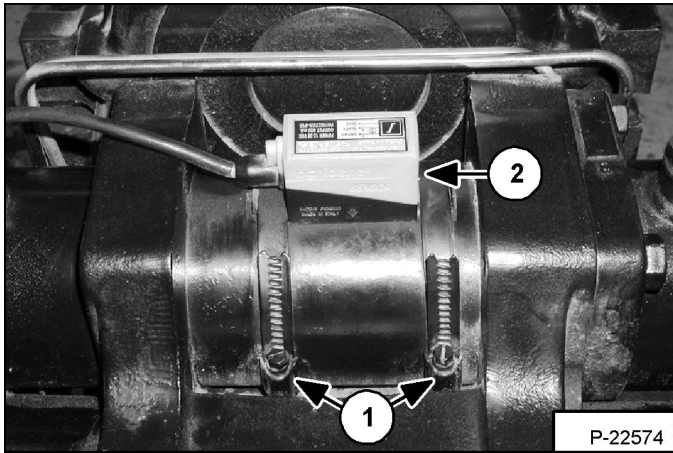


Remove both clamps (Item 1) and remove the centering sensor (Item 2) [Figure 20-60-5] from the cylinder.

Figure 20-60-6

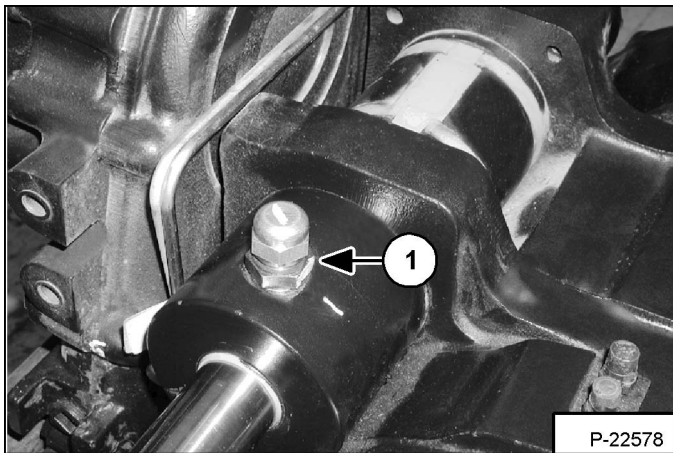

Remove the fitting (Item 1) [Figure 20-60-6] from the cylinder.


Figure 20-60-7

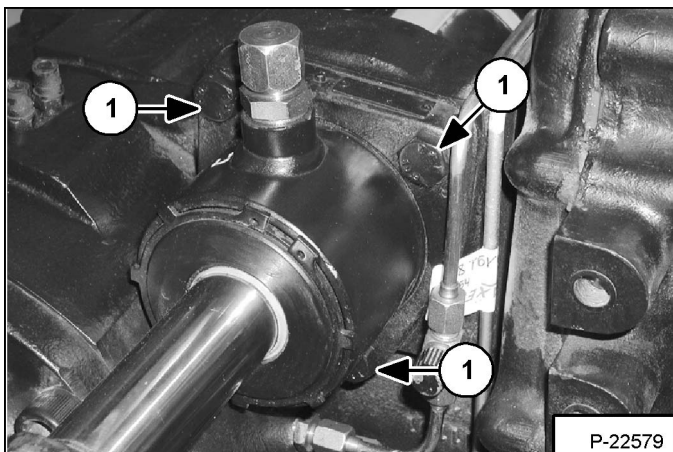

Remove the three bolts (Item 1) [Figure 20-60-7] from the cylinder retainer plate.

Assembly: Apply Loctite 270 to the three bolts and tighten to 88 ft.-lbs. (120 Nm) torque.

Figure 20-60-8

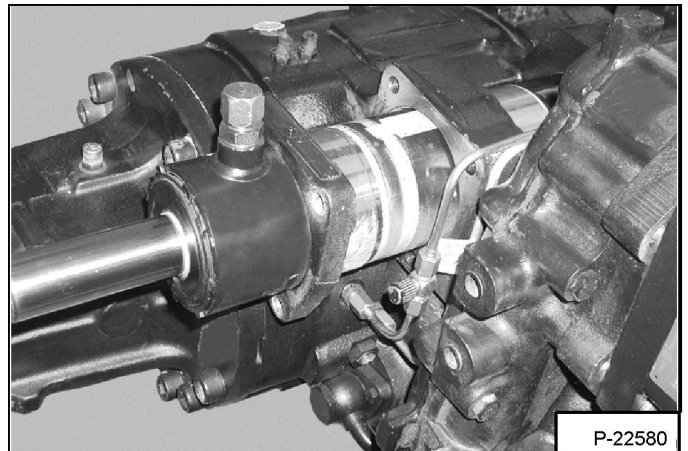


Remove the cylinder from the axle [Figure 20-60-8].

STEERING CYLINDER (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Parts Identification

1. Swivel End
2. Wiper
3. Backup Washer
4. Seal
5. Housing
6. Rod
7. O-Ring
8. Magnetic Sensor
9. Wear Ring
10. Spacer
11. Head Gland
12. Split Ring
13. Snap Ring

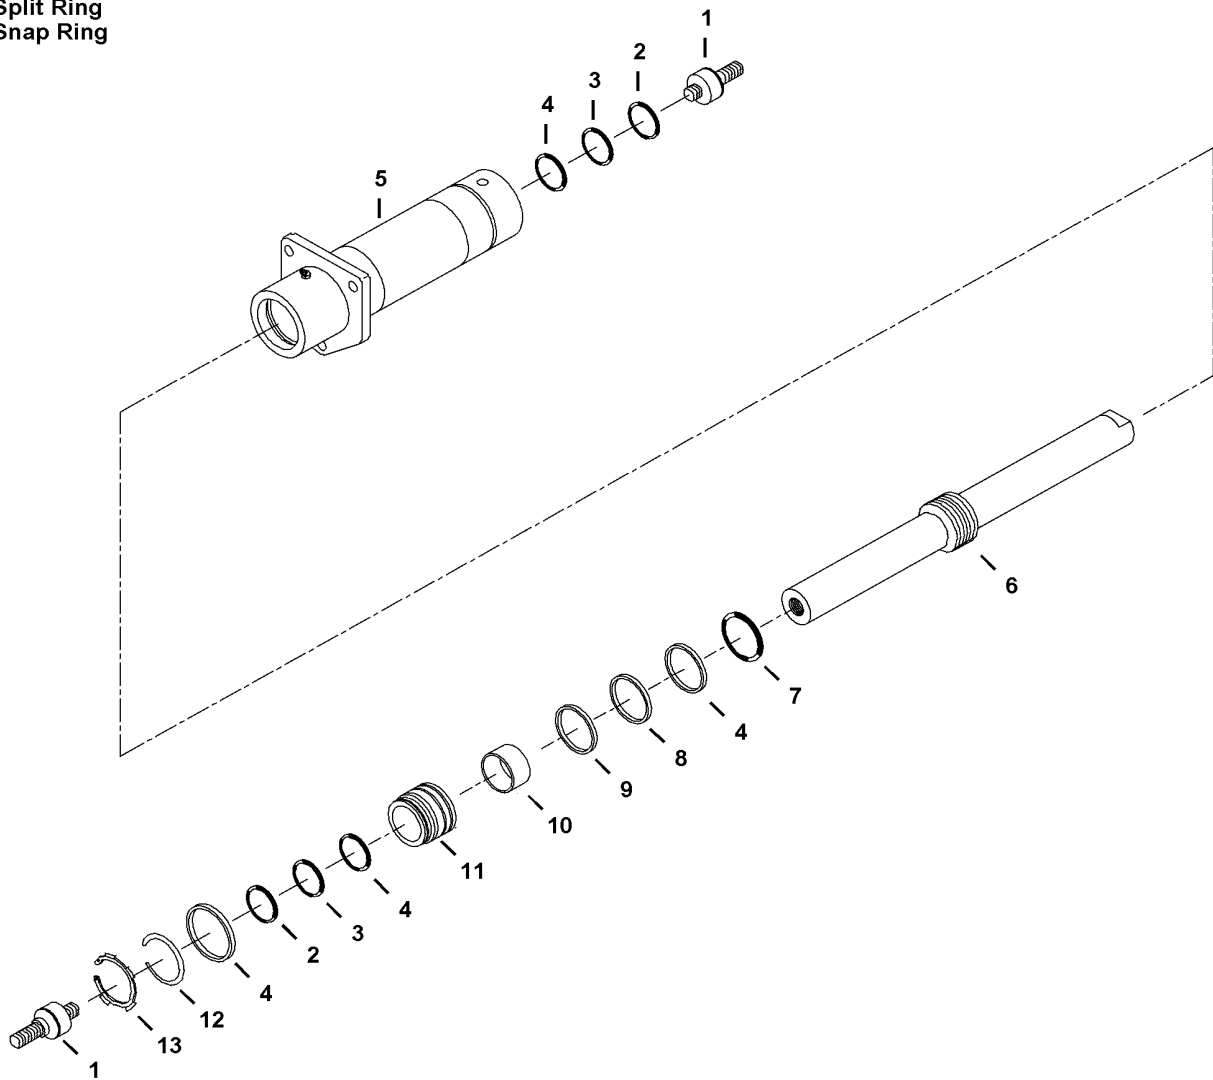


MS-01116

STEERING CYLINDER (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Disassembly

Figure 20-60-9

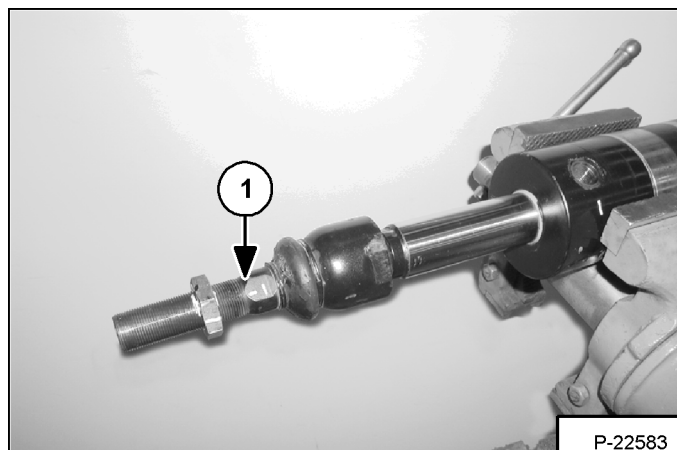

Put the cylinder in a vise and remove the tie rod swivel ends (Item 1) [Figure 20-60-9] from the rod.


Figure 20-60-10

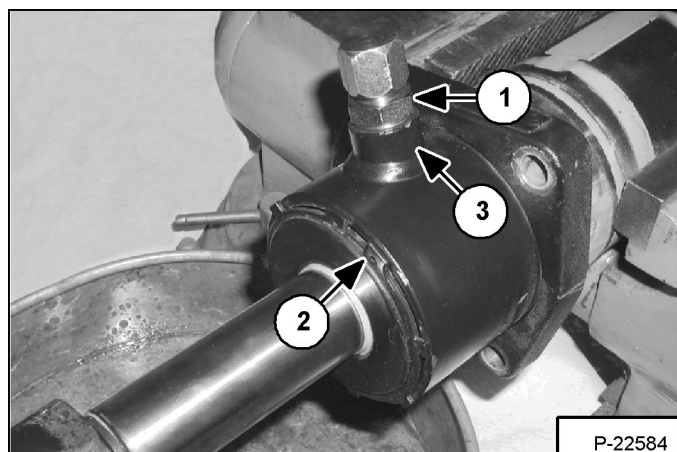

Place a drain pan under the cylinder, remove the fitting (Item 1) and snap ring (Item 2) [Figure 20-60-10] from the cylinder.

NOTE: Rotate the cylinder in the vise so the fitting port (Item 3) [Figure 20-60-10] is positioned down to allow the oil to drain into the pan.

Figure 20-60-11

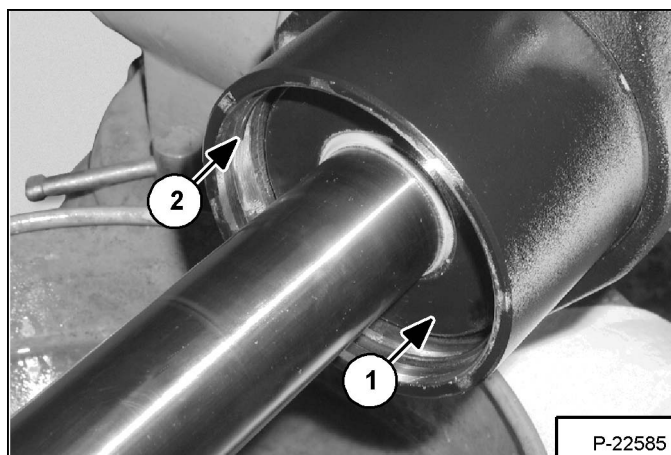

Drive the head gland (Item 1) inwards. Remove the internal snap ring (Item 2) [Figure 20-60-11].

Figure 20-60-12




Remove the rod assembly from the housing [Figure 20-60-12].

STEERING CYLINDER (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Disassembly (Cont'd)

Figure 20-60-13

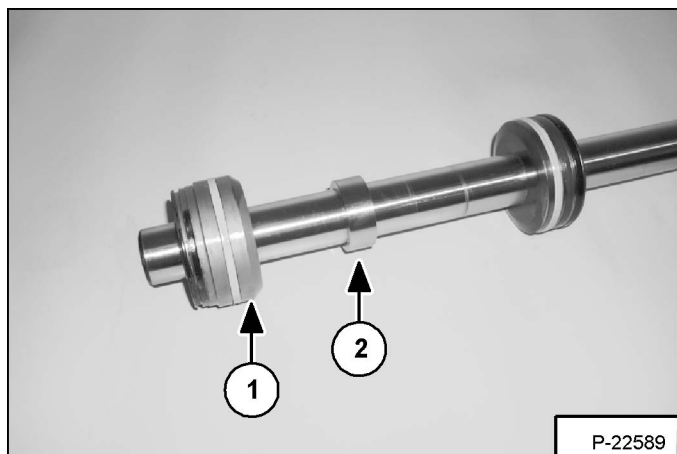


Remove the head assembly (Item 1) and spacer (Item 2) [Figure 20-60-13] from the rod.

Figure 20-60-14

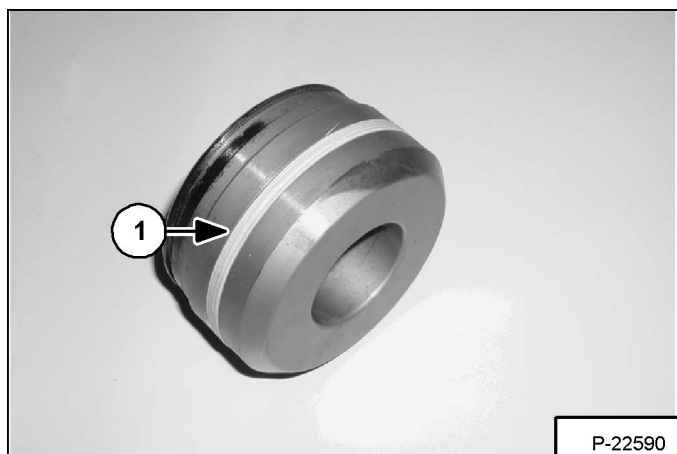


Remove the outer seal (Item 1) [Figure 20-60-14] from the head.

Figure 20-60-15

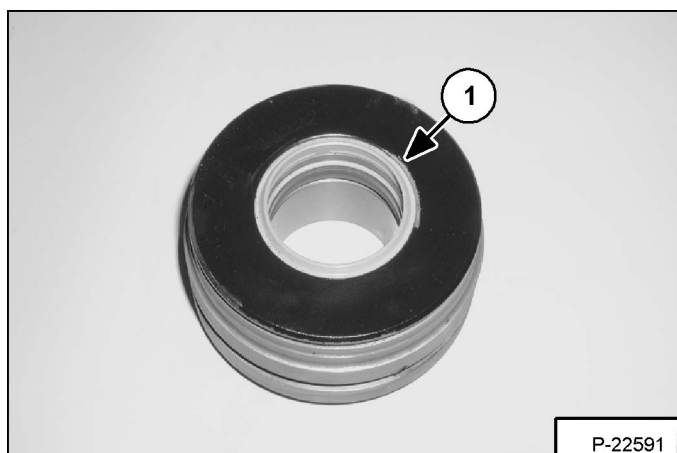

Remove the wiper seal (Item 1) [Figure 20-60-15].

Figure 20-60-16

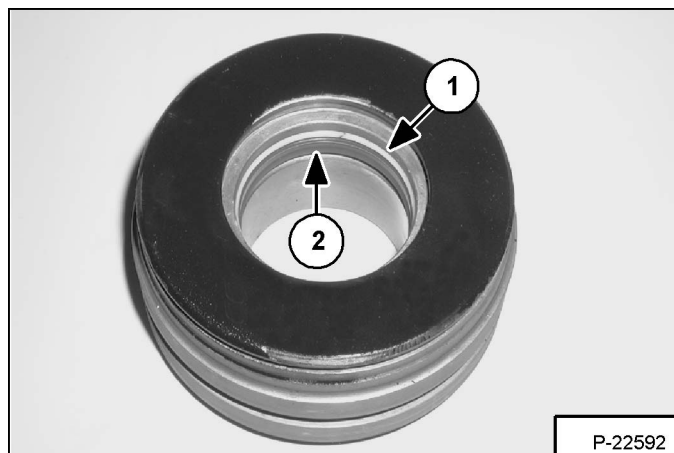


Remove the backup ring (Item 1) and rod seal (Item 2) [Figure 20-60-16] from the head gland.

STEERING CYLINDER (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Disassembly (Cont'd)

Figure 20-60-17

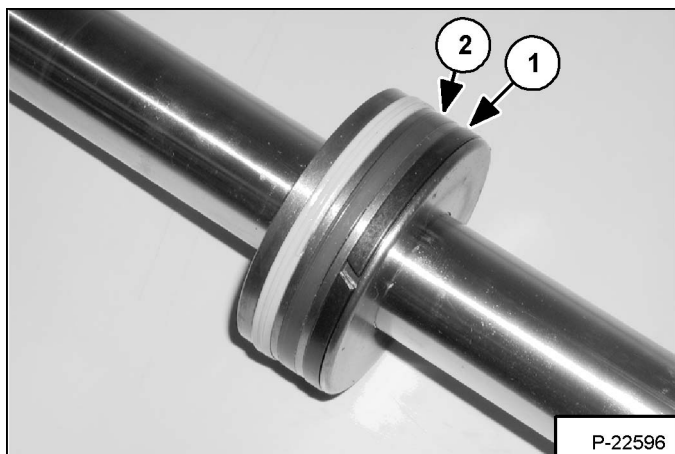


Remove the wear ring (Item 1) and magnetic sensor ring (Item 2) **[Figure 20-60-17]** from the piston.

Figure 20-60-18

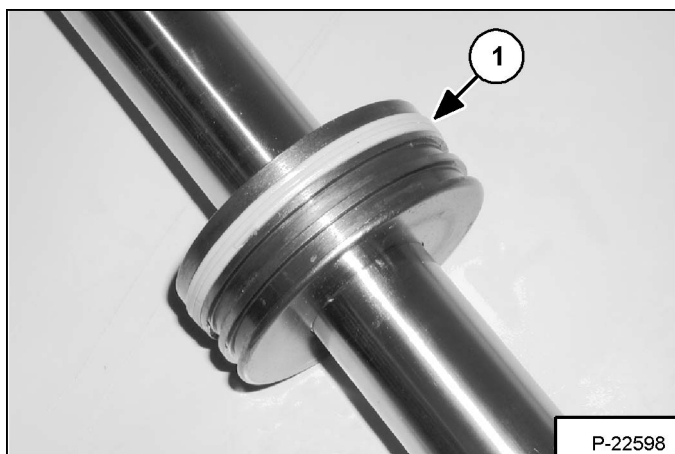


Remove the seal (Item 1) **[Figure 20-60-18]**.

Figure 20-60-19

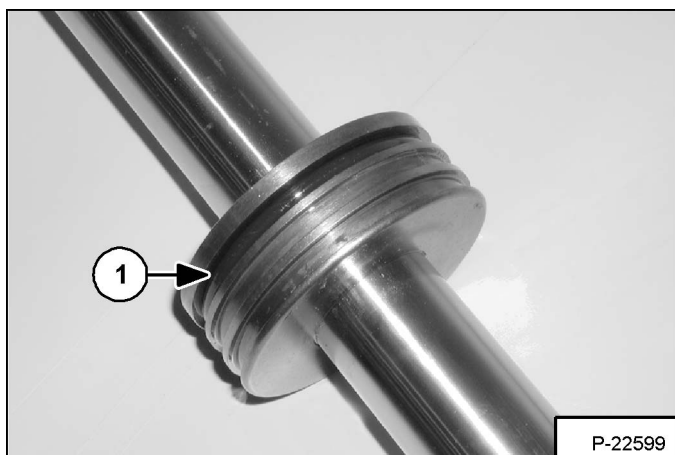

Remove the expander O-ring (Item 1) **[Figure 20-60-19]**.

Figure 20-60-20

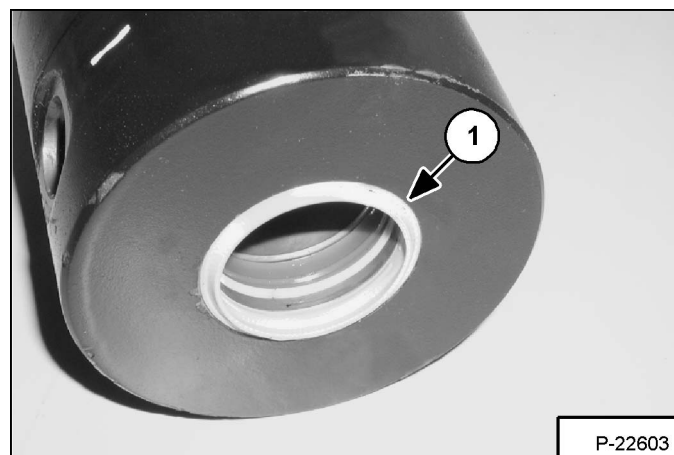


Remove the wiper seal (Item 1) **[Figure 20-60-20]** from the housing.

STEERING CYLINDER (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000)(CONT'D)

Disassembly (Cont'd)

Figure 20-60-21

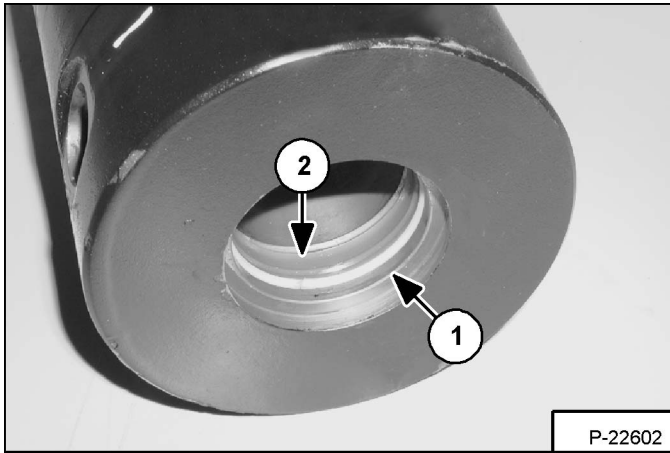

Remove the backup ring (Item 1) and rod seal (Item 2) [Figure 20-60-21] from the housing.

Assembly

Use the following tools to assembly the cylinder:

MEL1396-Seal Installation Tool

MEL1033-Rod Seal Installation Tool

Wash the cylinder parts in solvent and dry with compressed air.

Figure 20-60-22


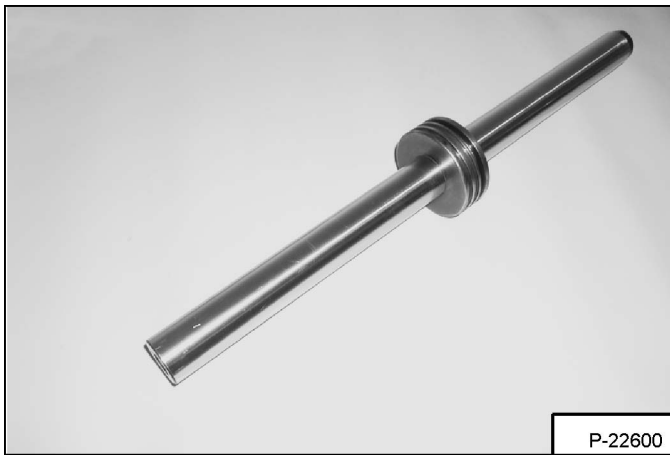


Figure 20-60-23

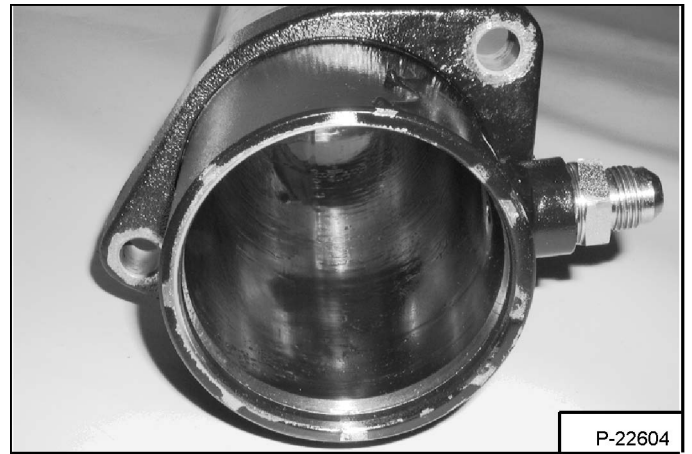


Inspect the cylinder parts for nicks, scratches or other damage. Replace any damaged parts [Figure 20-60-22] & [Figure 20-60-23].

Lubricate all O-rings and seals with hydraulic oil during installation.

Always use new O-rings and seals.

Figure 20-60-24

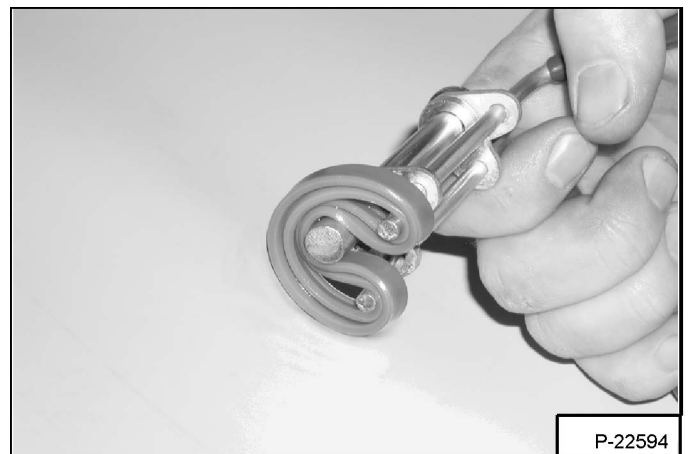

Install the rod seal on the rod seal installation tool [Figure 20-60-24].


NOTE: During installation the O-ring side of the seal must be toward the inside of the cylinder.

Rotate the handles to collapse the rod seal [Figure 20-60-24].

STEERING CYLINDER (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Assembly (Cont'd)

Figure 20-60-25

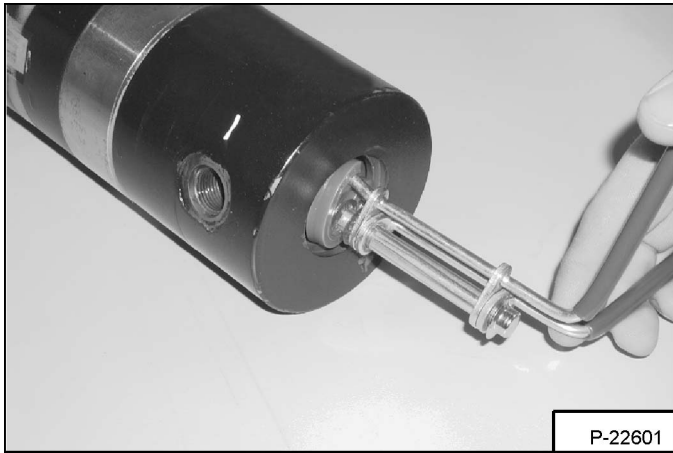


Install the rod seal in the housing [Figure 20-60-25].

Figure 20-60-26

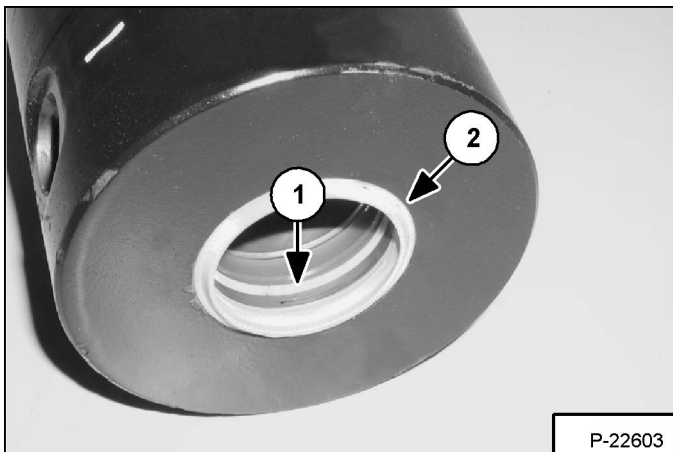

Install the backup ring (Item 1) and wiper seal (Item 2) [Figure 20-60-26] into the housing.


Figure 20-60-27

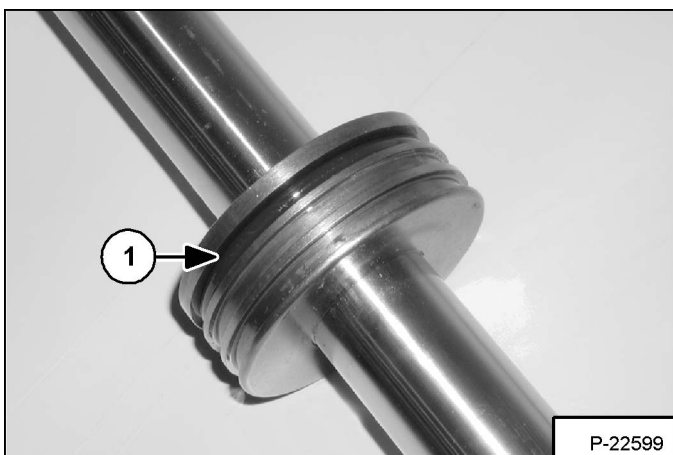

Install the expander O-ring (Item 1) [Figure 20-60-27] onto the piston.

NOTE: The expander O-ring (Item 1) [Figure 20-60-27] is installed in the piston groove closest to the machined end of the cylinder rod.

Figure 20-60-28

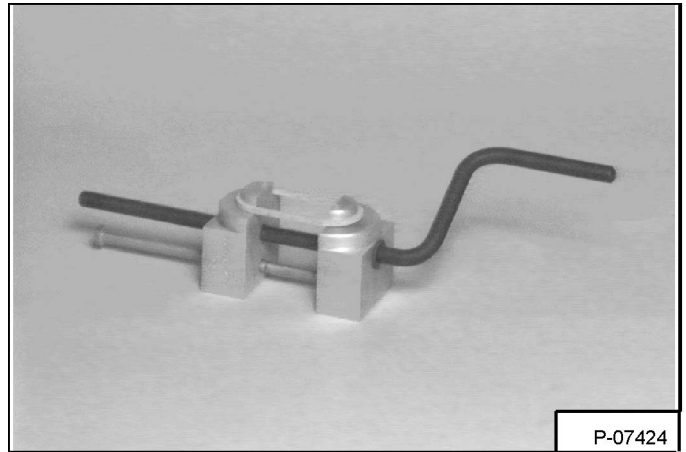


Install a new seal on the tool and slowly stretch it until it fits the piston [Figure 20-60-28].

Allow the seal to stretch for 30 seconds before installing it on the piston.

STEERING CYLINDER (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Assembly (Cont'd)

Figure 20-60-29

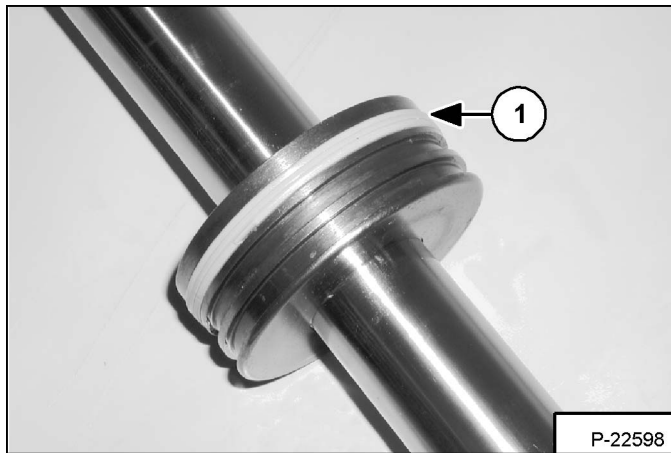


Install the seal (Item 1) [Figure 20-60-29] onto the piston, over the expander O-ring.

Figure 20-60-30

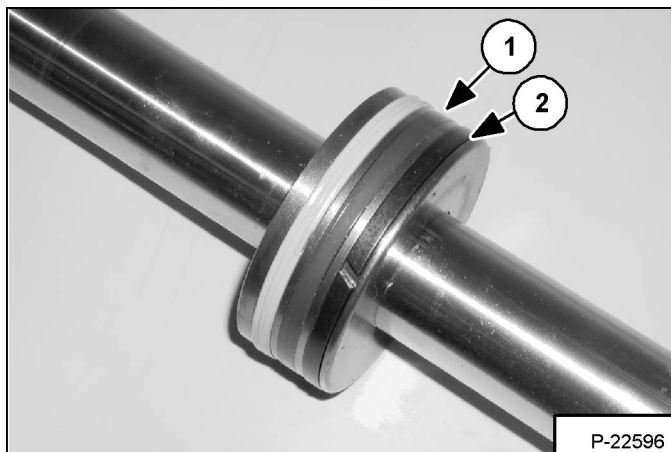


Install the magnetic sensor ring (Item 1) and wear ring (Item 2) [Figure 20-60-30].

Figure 20-60-31

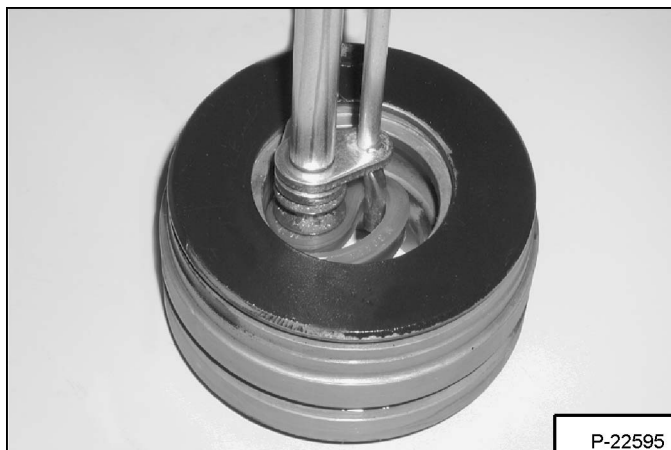

Install a new seal into the head gland [Figure 20-60-31].

Figure 20-60-32

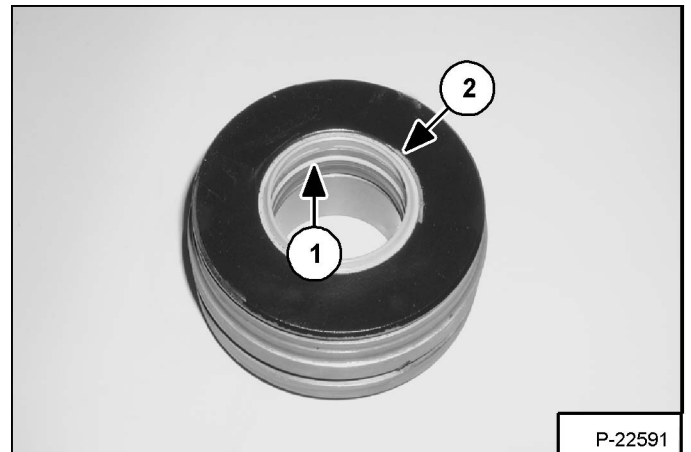


Install a new backup ring (Item 1) and wiper seal (Item 2) [Figure 20-60-32] into the head gland.

STEERING CYLINDER (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Assembly (Cont'd)

Figure 20-60-33

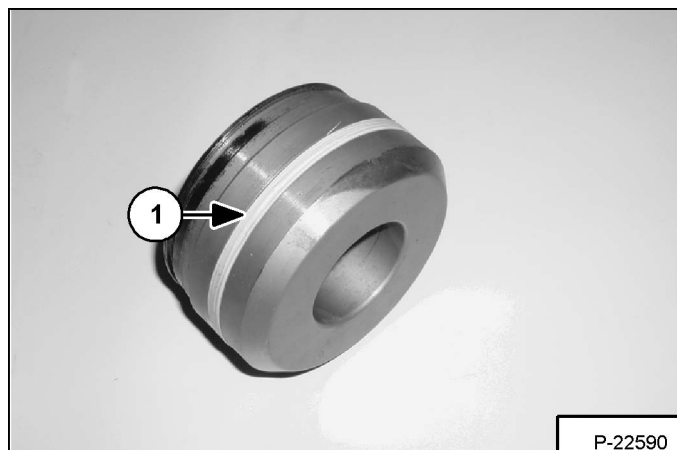


Install a new outer seal (Item 1) [Figure 20-60-33] onto the head gland.

Figure 20-60-34

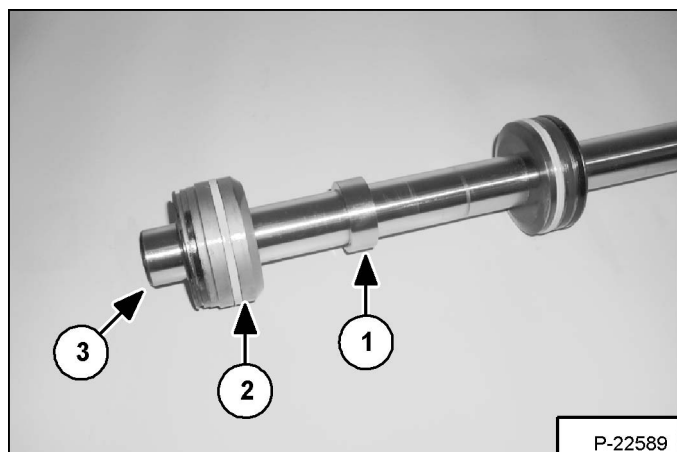


Install the spacer (Item 1) and head (Item 2) onto the machined end (Item 3) [Figure 20-60-34] of the cylinder rod.

Figure 20-60-35

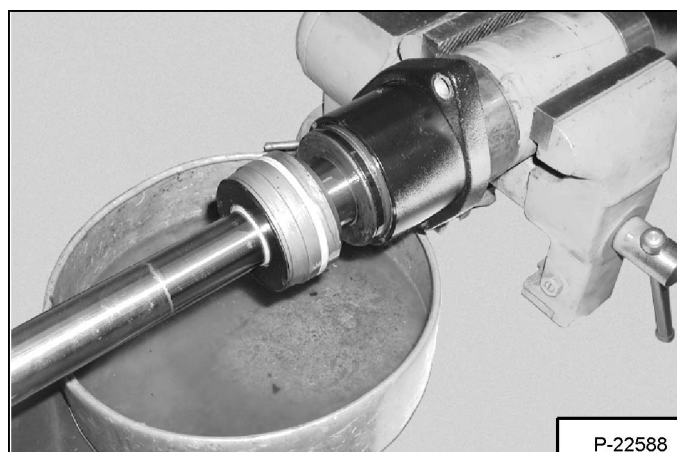

Lubricate the piston and seal and install into the housing [Figure 20-60-35].

Figure 20-60-36

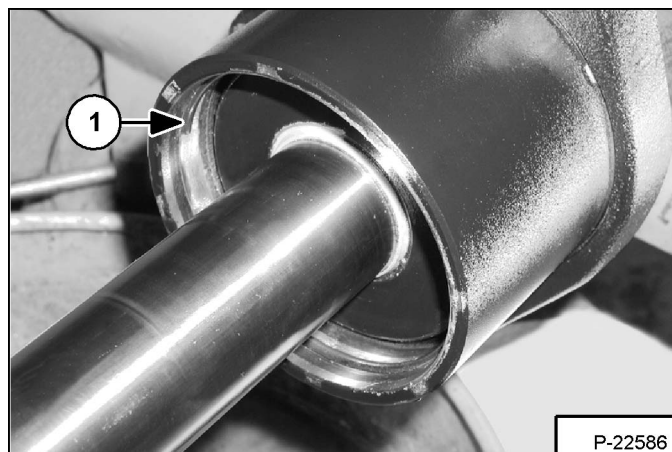


Lubricate and install the head gland into the housing and install the internal snap ring (Item 1) [Figure 20-60-36].

STEERING CYLINDER (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Assembly (Cont'd)


Figure 20-60-37

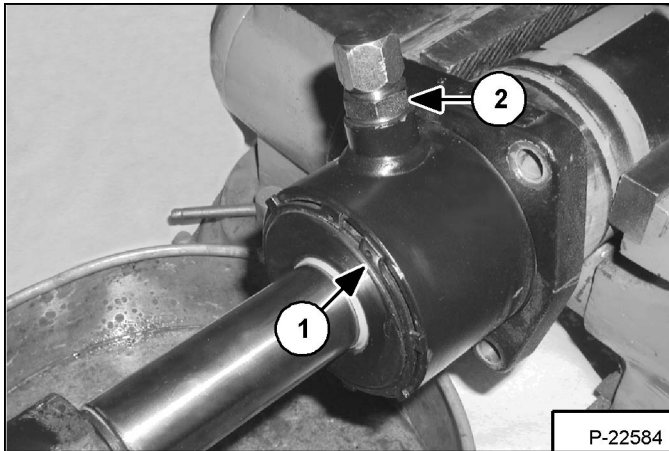

Pull the cylinder rod out until you are able to install the snap ring (Item 1) **[Figure 20-60-37]** onto the groove in the head gland.

Install the fitting (Item 2) **[Figure 20-60-37]**.

Figure 20-60-38

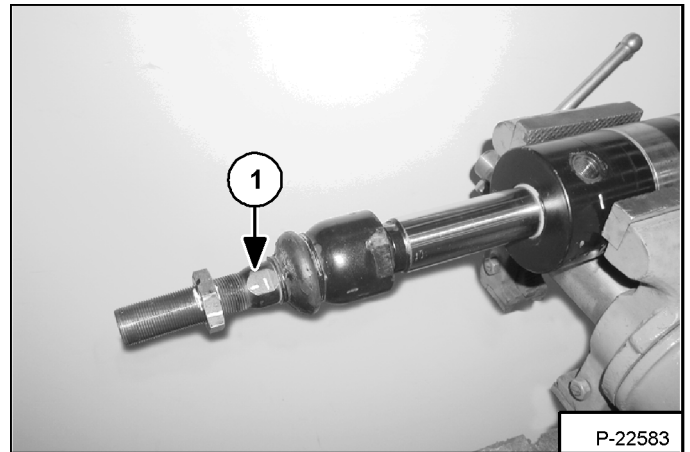

Install the tie rod swivel ends (Item 1) **[Figure 20-60-38]** onto the cylinder rod. Tighten to 300 ft.-lbs. (406 Nm) torque.




Bobcat®

STEERING CYLINDER (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above)


Removing the Steering Cylinder

Figure 20-61-1

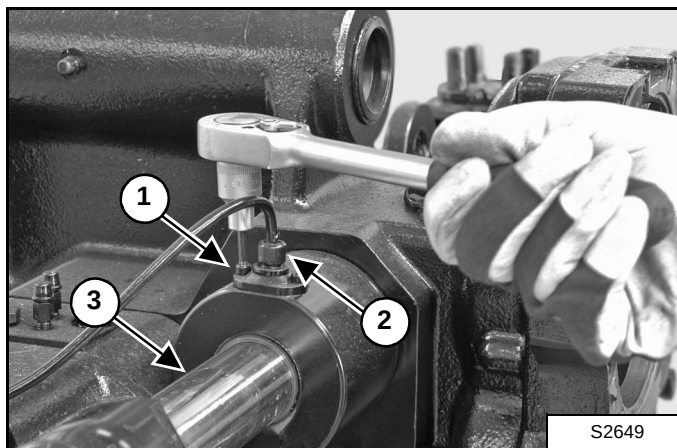


Remove the two bolts (Item 1) and remove the centering sensor (Item 2) from the front steering cylinder (Item 3) [Figure 20-61-1].

Figure 20-61-2

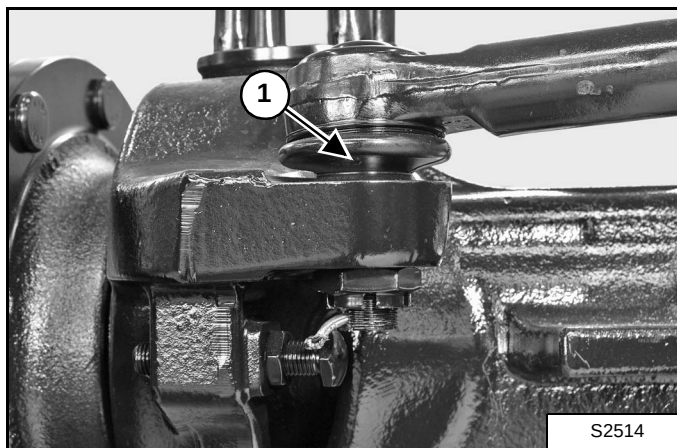


Remove the cotter pin (Item 1) [Figure 20-61-2].

Figure 20-61-3

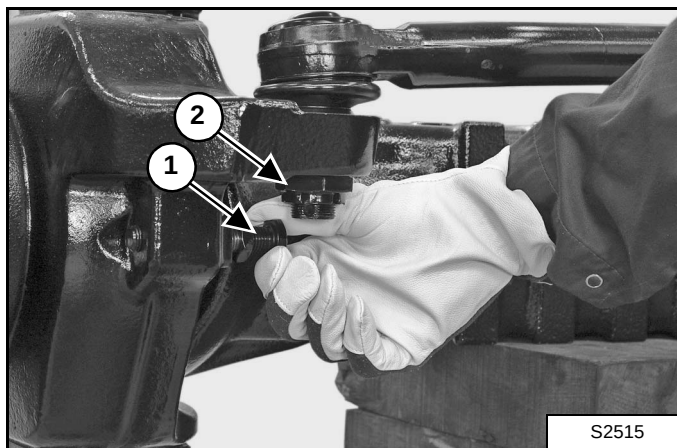

Remove the bolt (Item 1) for access for removing the nut (Item 2) [Figure 20-61-3].

Figure 20-61-4

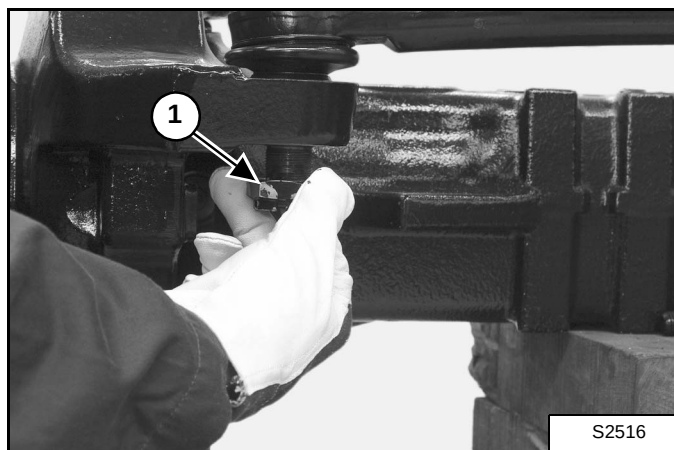


Remove the nut (Item 1) [Figure 20-61-4].

STEERING CYLINDER (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Removing the Steering Cylinder (Cont'd)

Figure 20-61-5

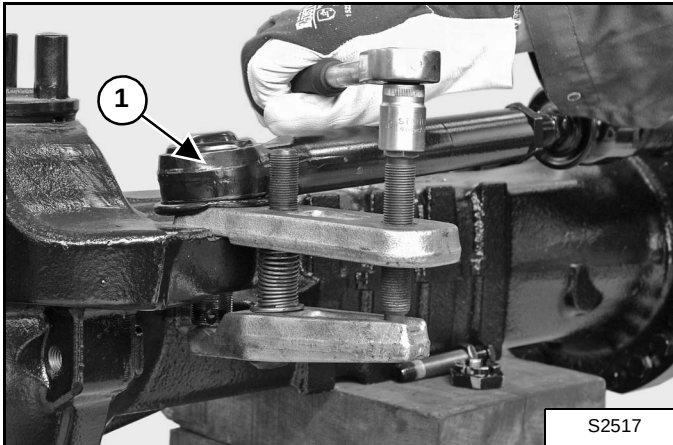


Remove the tie rod end (Item 1) [Figure 20-61-5] by means of a puller.

Figure 20-61-6

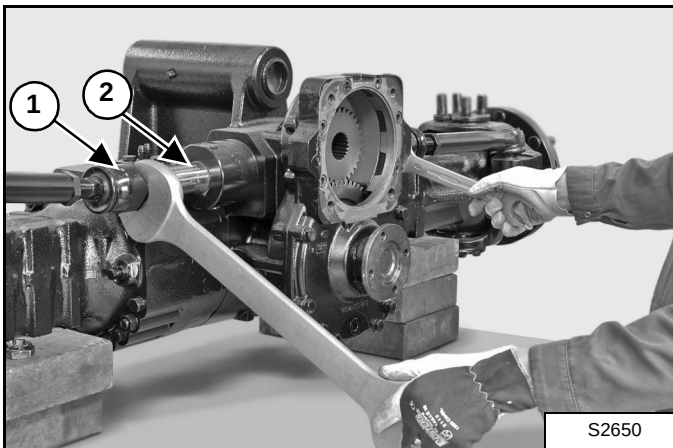


Disconnect the left and right steering bars (Item 1) from the piston (Item 2) [Figure 20-61-6].

Figure 20-61-7

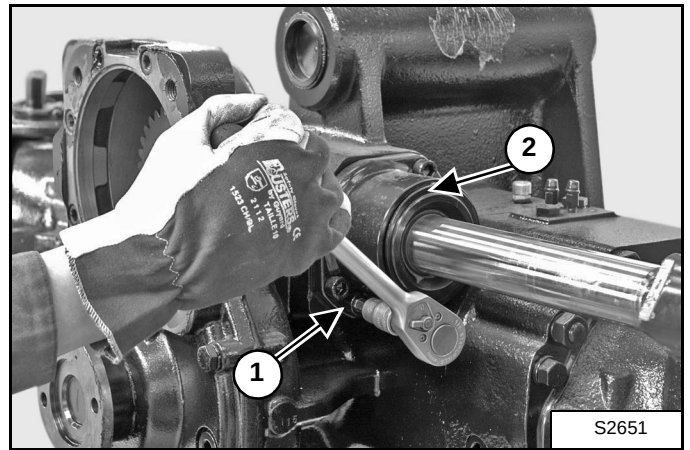

Remove the securing screws (Item 1) from the steering cylinder (Item 2) [Figure 20-61-7].

Figure 20-61-8

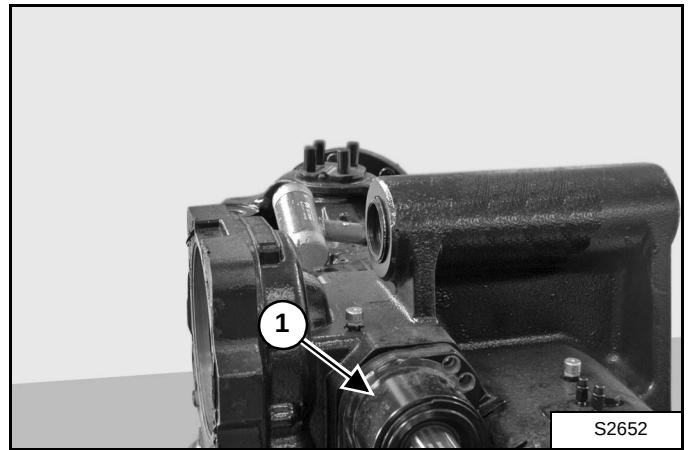


Extract the cylinder (Item 1) [Figure 20-61-8] using a plastic hammer.

NOTE: For cylinder disassembly, refer to "HOW TO DISASSEMBLE THE STEERING CYLINDER".

STEERING CYLINDER (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Installing the Steering Cylinder

Figure 20-61-9

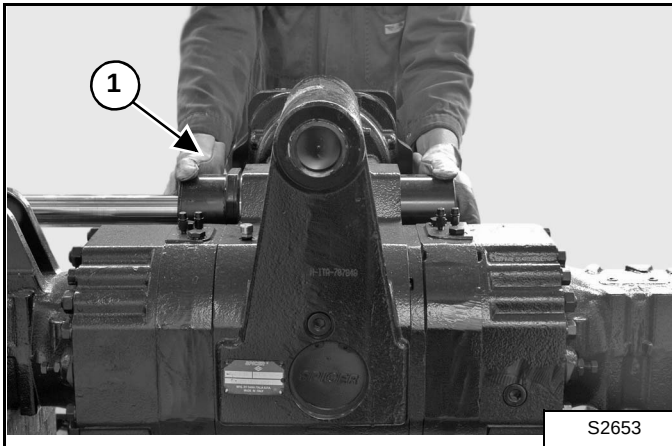

Lubricate the seats of the seals and fit the steering cylinder (Item 1) [Figure 20-61-9] into its seat.


Figure 20-61-10

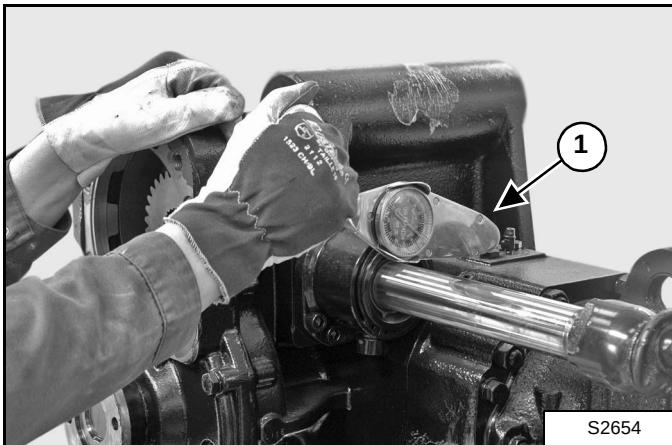

Tighten the screws (Item 1) [Figure 20-61-10].

Torque wrench setting: 116 - 128 Nm.


Figure 20-61-11

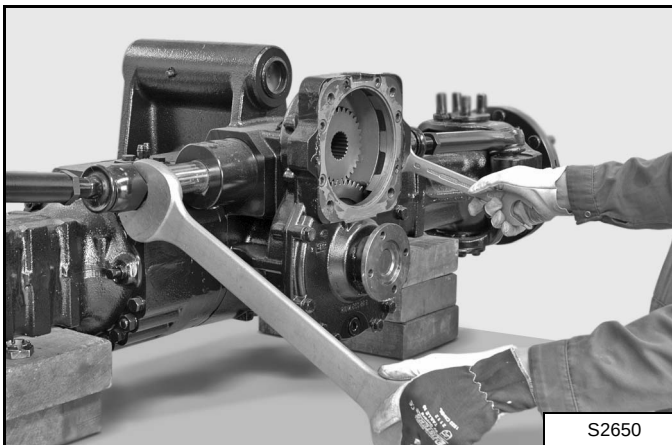

Apply Loctite 242 to the thread and connect the steering bars by screwing the terminals onto the piston stem, apply a torque of 240 - 270 Nm.

NOTE: It is required that the rim of the articulation is riveted onto the surfaces of the piston stem.

Figure 20-61-12

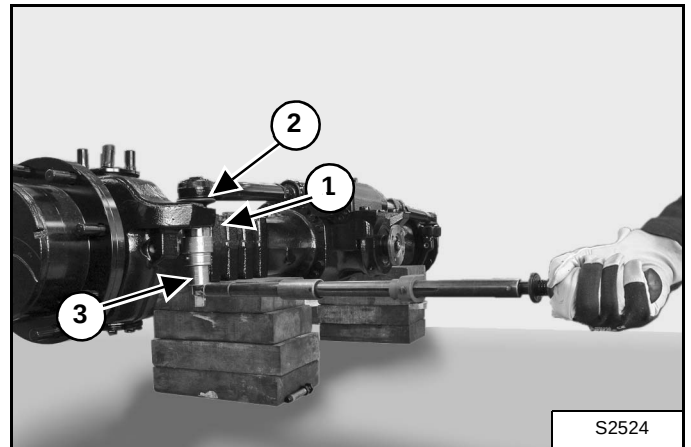

Insert the pins (Item 1) in the steering case (Item 2) [Figure 20-61-12] and lock into position using a torque wrench setting of 260 - 290 Nm.


Find the position of the notching in relation to the hole of the cotter pins and tighten the nut (Item 3) [Figure 20-61-12] further.

NOTE: Check that the rubber guards [Figure 20-61-12] are intact.

STEERING CYLINDER (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Installing the Steering Cylinder (Cont'd)


Figure 20-61-13

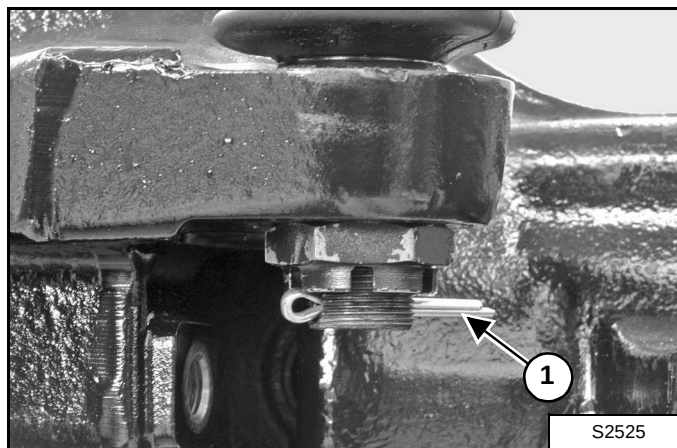

Insert the cotter pins (Item 1) [Figure 20-61-13] and bend the safety stems.

NOTE: Use new cotter pins.

Figure 20-61-14

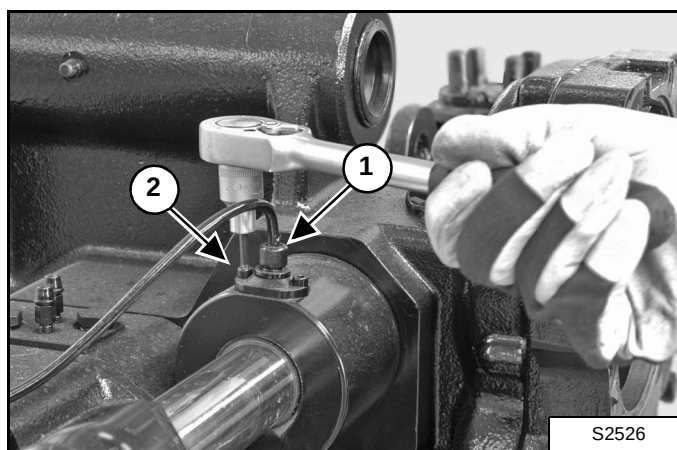


Install the centering sensor (Item 1) for checking piston centering - if applicable - and tighten the screws (Item 2) [Figure 20-61-14].

Torque wrench setting: 5 - 6 Nm.

STEERING CYLINDER (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Disassembling the Steering Cylinder

Figure 20-61-15

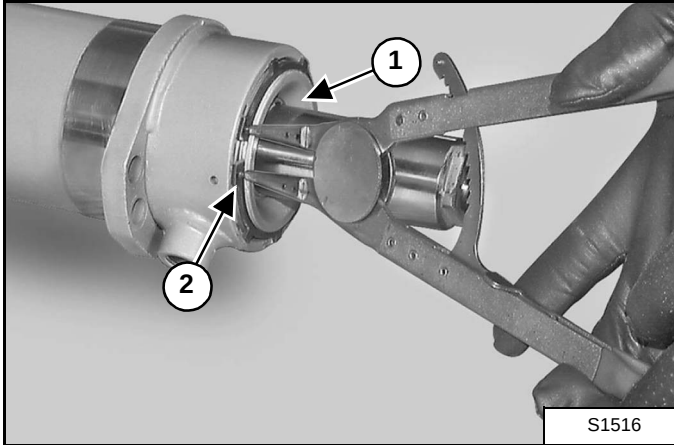

Remove the snap ring (Item 1) from the cylinder head (Item 2) [Figure 20-61-15],


Figure 20-61-16

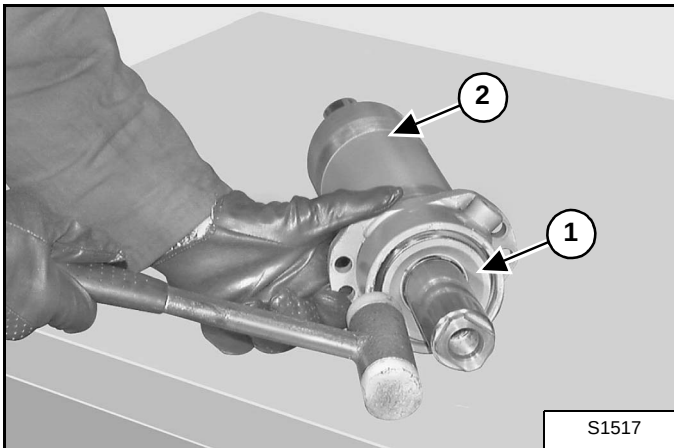

With the help of a plastic hammer, push the head (Item 1) inside the cylinder (Item 2) [Figure 20-61-16],


NOTE: The head should line up with the edge of the cylinder.

Figure 20-61-17

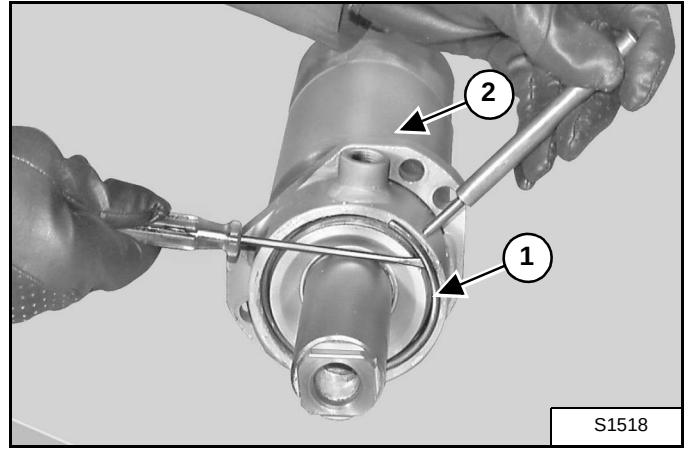

With the help of a drift, apply pressure to the stop ring (Item 1) that is placed inside the cylinder (Item 2) [Figure 20-61-17] and extract the ring using a screwdriver.

Figure 20-61-18

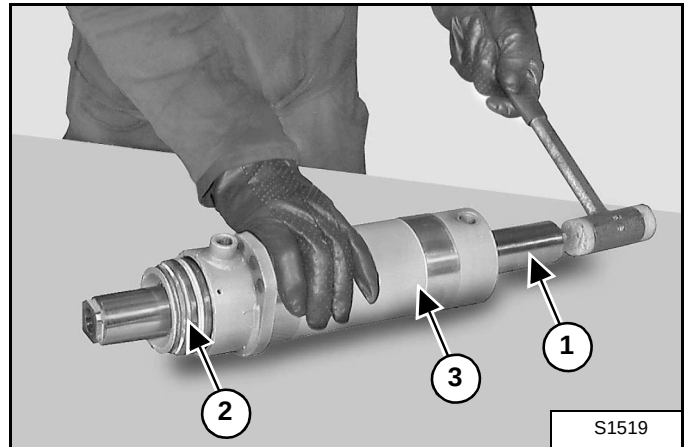


Hammer the piston (Item 1) on the rear of the head (Item 2) [Figure 20-61-18] using a plastic hammer.

Continue hammering until the head (Item 2) is ejected from the cylinder (Item 3) [Figure 20-61-18].

STEERING CYLINDER (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Disassembling the Steering Cylinder (Cont'd)

Figure 20-61-19

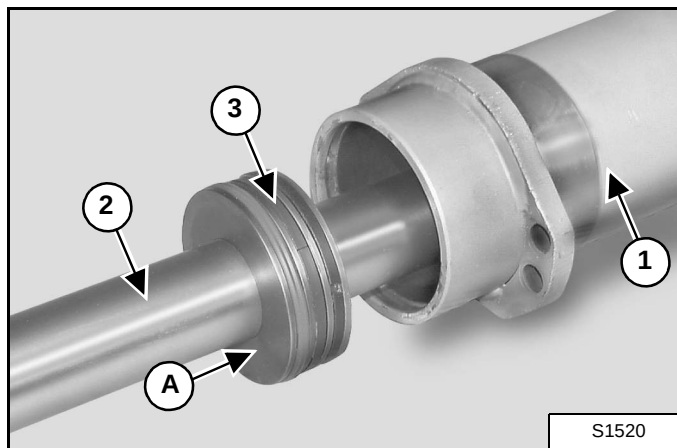

Disassemble the cylinder unit (Item 1) by extracting first the head (Item 2) then the piston (Item 3) [Figure 20-61-19].

NOTE: Note down the assembly side of the piston (Item 3) [Figure 20-61-19]. The bevelled part "A" of the piston is oriented towards the head (Item 2) [Figure 20-61-19].


Remove all seals, anti-extrusion rings and scraper rings from head, cylinder and piston.

NOTE: 1) All seals must be replaced every time the unit is disassembled.
2) Particular attention must be paid not to damage the seats of both seals and piston slide.

STEERING CYLINDER (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Assembling the Steering Cylinder


Figure 20-61-20

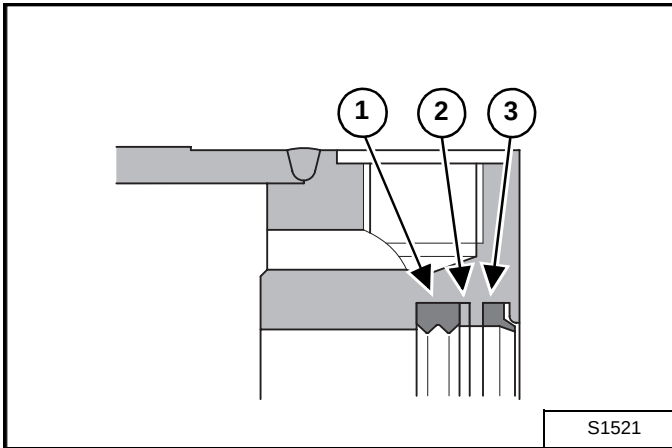

After applying grease, install the sealing ring (Item 1) on the shaft, the anti-extrusion ring (Item 2) and the scraper ring (Item 3) [Figure 20-61-20] inside the cylinder (Item 3) [Figure 20-61-18].

NOTE: Thoroughly check that positioning of the anti-extrusion ring (Item 2) [Figure 20-61-20] is correct.


Figure 20-61-21

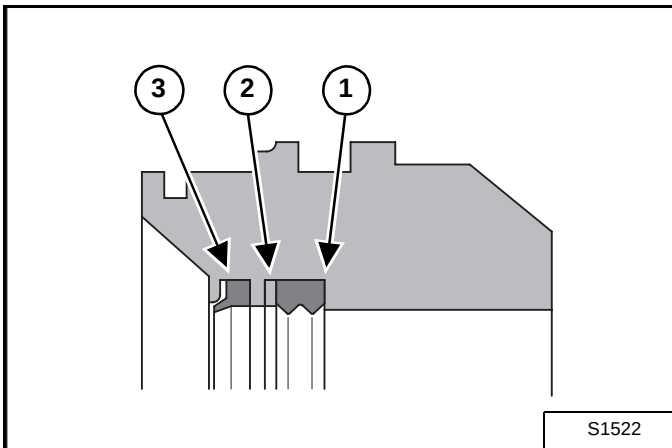

After applying grease, install the sealing ring (Item 1) on the shaft, the anti-extrusion ring (Item 2) and the scraper ring (Item 3) [Figure 20-61-21] in the head (Item 2) [Figure 20-61-19].

NOTE: Thoroughly check that positioning of the anti-extrusion ring (Item 2) [Figure 20-61-21] is correct.


Figure 20-61-22

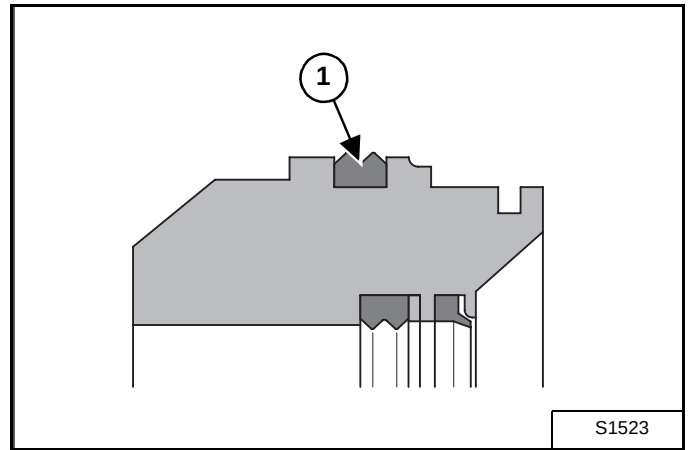

Fit the seal (Item 1) [Figure 20-61-22] onto the outside of the head (Item 2) [Figure 20-61-19].

NOTE: In order to facilitate assembly, apply grease to the outer surface of the piston. Do not roll the seal (Item 1) [Figure 20-61-22]

Figure 20-61-23

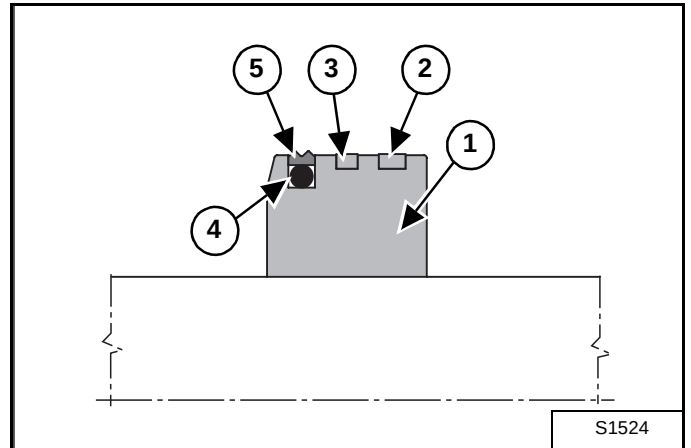


Prepare the piston (Item 1) by fitting it with the guide ring (Item 2), the magnetic ring (Item 3), the O-ring (Item 4) and the seal (Item 5) [Figure 20-61-23].

NOTE: In order to facilitate assembly, apply grease.

STEERING CYLINDER (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Assembling the Steering Cylinder


Figure 20-61-24

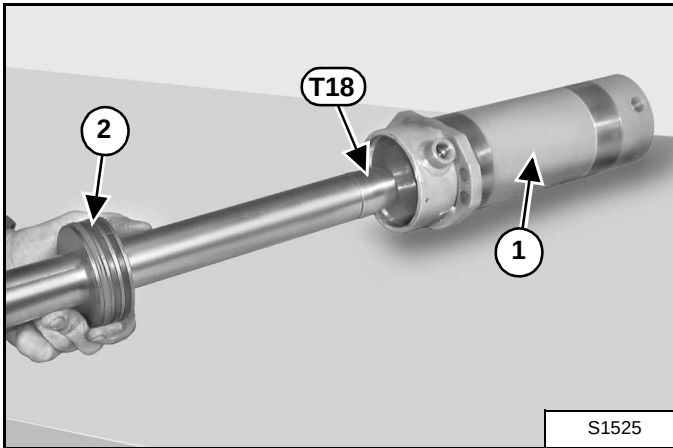

Apply tool **T18** to the shaft on the opposite side of the head (Item 2) and centre it on the cylinder (Item 1) so that it fits into the piston (Item 2) [Figure 20-61-24].


NOTE: Apply a little grease to seals and cylinder.

Figure 20-61-25

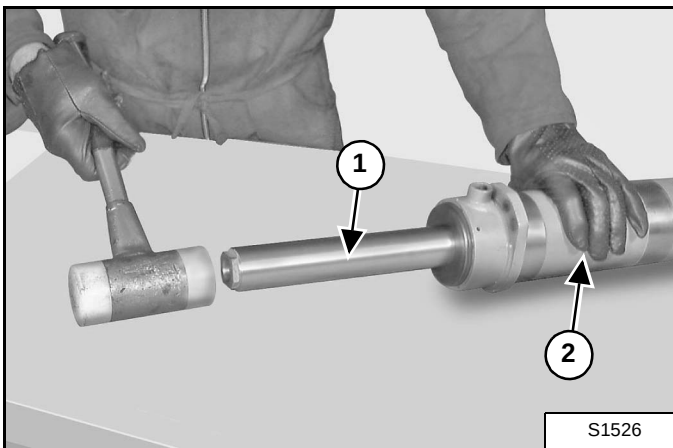


Push the piston (Item 1) into the cylinder (Item 2) [Figure 20-61-25] for 100 MM. using a plastic hammer.

Figure 20-61-26

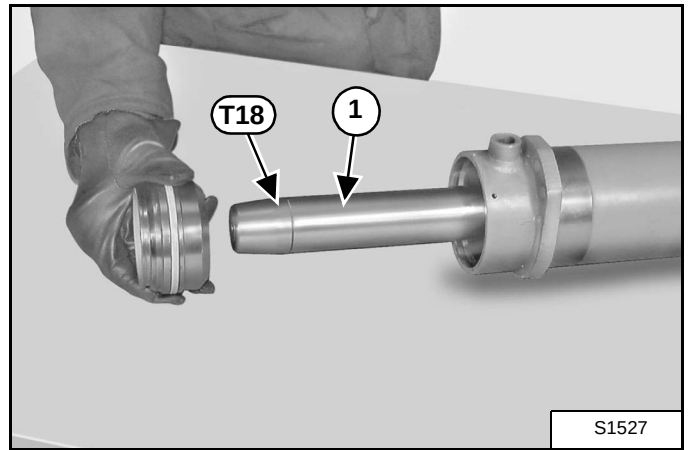

Remove tool **T18** and apply it to the opposite side of the piston (Item 1) [Figure 20-61-26]

Figure 20-61-27

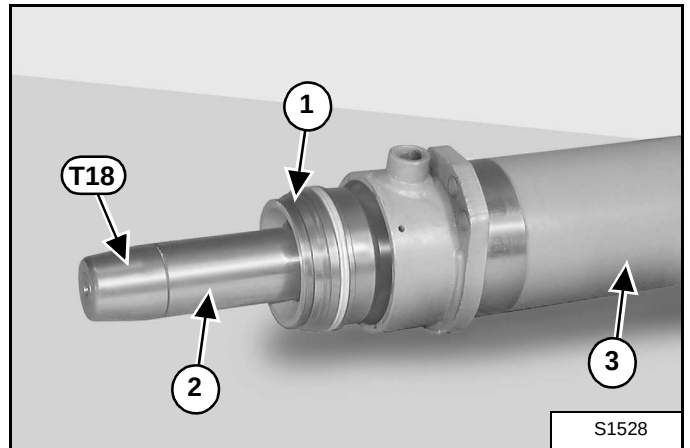


Apply grease to the head (Item 1) [Figure 20-61-27] seals, fit the head onto the piston and push it onto the cylinder (Item 3) [Figure 20-61-27].

STEERING CYLINDER (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Fit the snap ring (Item 1) on the head (Item 2) [Figure 20-61-30].


Assembling the Steering Cylinder

Figure 20-61-28

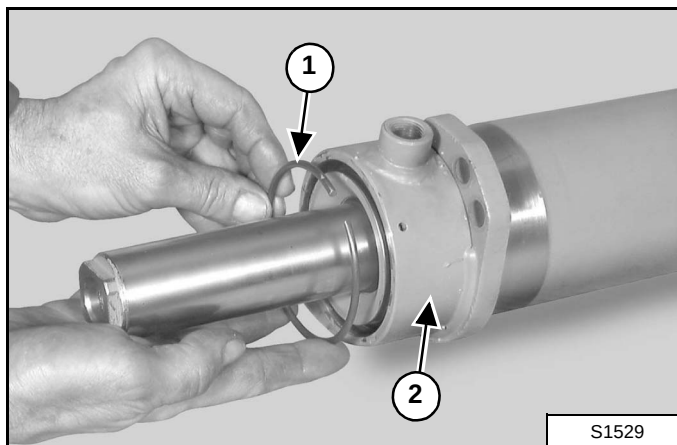


Insert the stop ring (Item 1) ensuring that it fits into the seat of the cylinder (Item 2) [Figure 20-61-28].

Figure 20-61-29

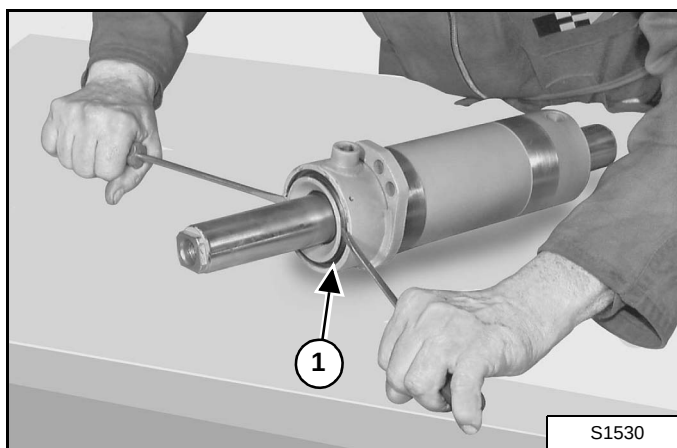

Apply pressure to the head using two screwdrivers or levers until the head is fastened onto the stop ring (Item 1) [Figure 20-61-29].

Figure 20-61-30

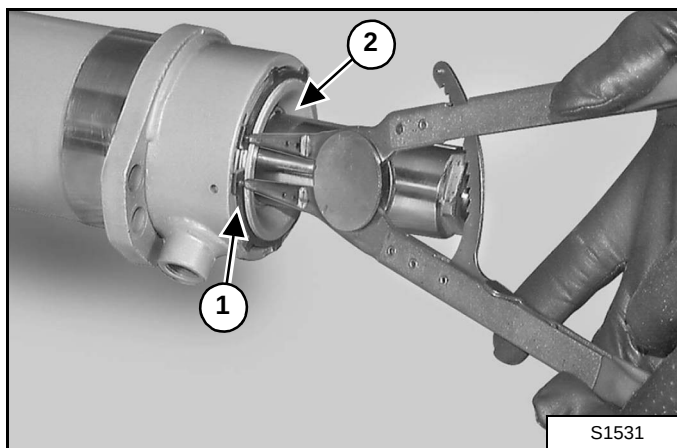



Bobcat®


STEERING CYLINDER (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000)

Removal And Installation

Remove the rear axle. (See "Removal And Installation" on page 20-62-1.)

Place the axle on suitable stands.


Figure 20-62-1

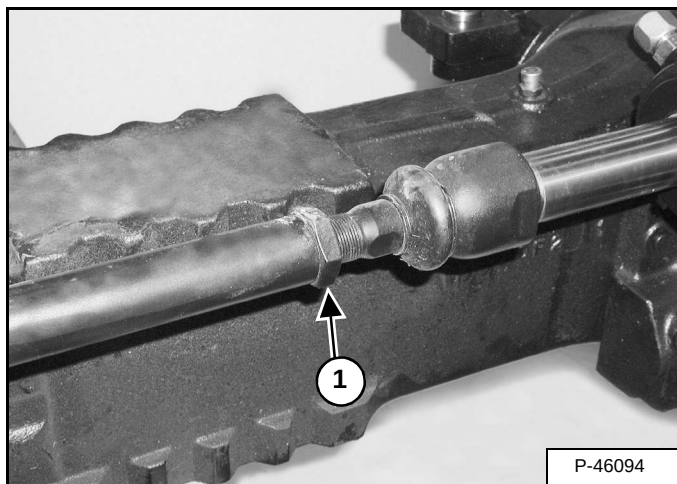

Loosen the tie rod jam nut (Item 1) [Figure 20-62-1], mark the location of the nut for ease of installation. (Both sides)

Installation: Tighten the jam nut to 185 ft.-lbs. (250 Nm) torque.


Figure 20-62-2

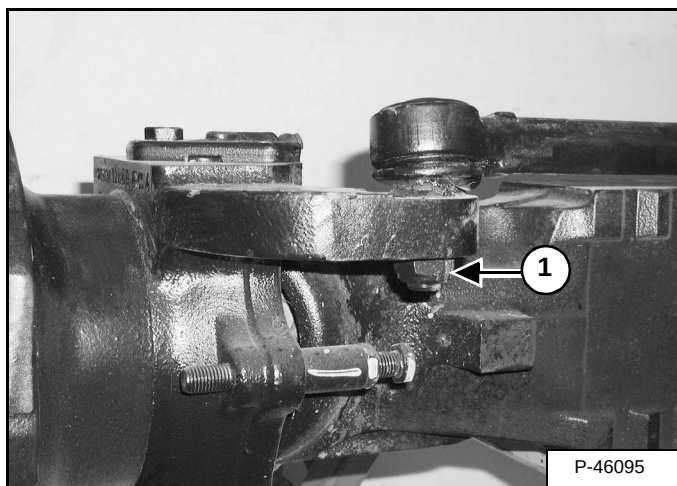

Loosen and remove the tie rod nut (Item 1) [Figure 20-62-2]. (Both sides)


Installation: Tighten the nut to 160 ft.-lbs. (220 Nm) torque.

Figure 20-62-3

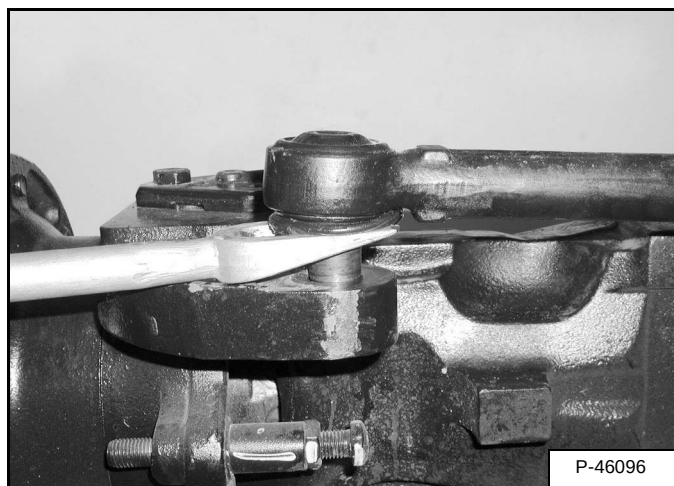

Remove the tie rod end from the axle [Figure 20-62-3]. (Both sides)

Figure 20-62-4

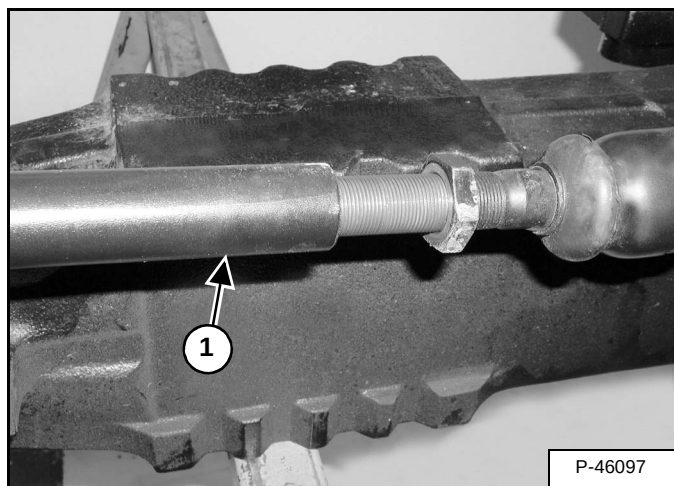


Remove the tie rod ends (Item 1) [Figure 20-62-4] from the steering cylinder. (Both sides)

STEERING CYLINDER (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Removal And Installation (Cont'd)

Figure 20-62-5

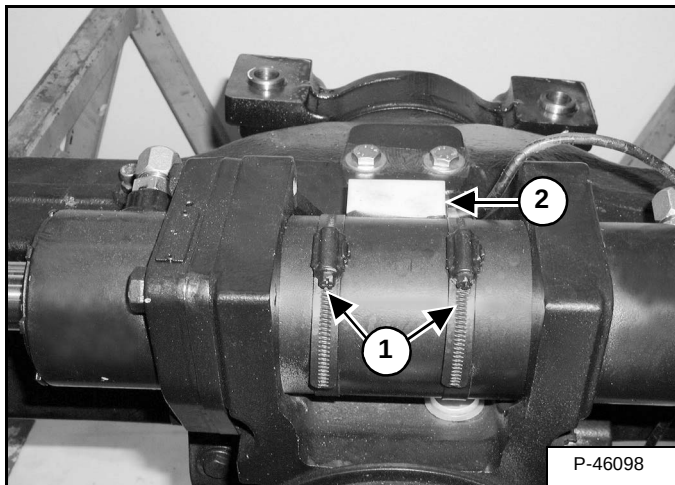


Remove both clamps (Item 1) and remove the centering sensor (Item 2) [Figure 20-62-5] from the cylinder.

Figure 20-62-6

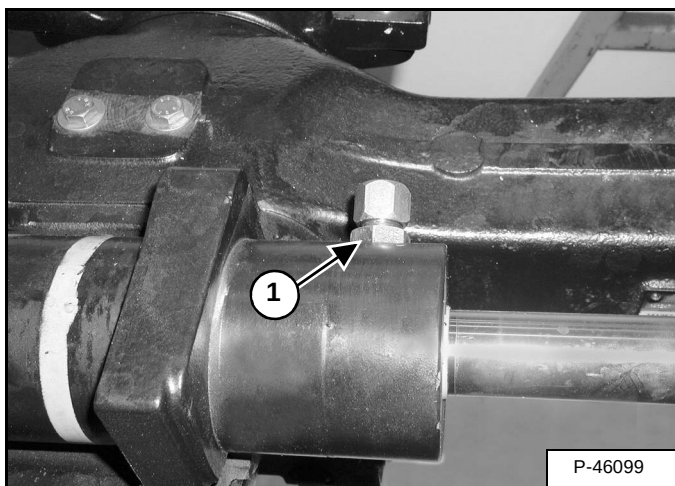

Remove the fitting (Item 1) [Figure 20-62-6] from the cylinder.


Figure 20-62-7

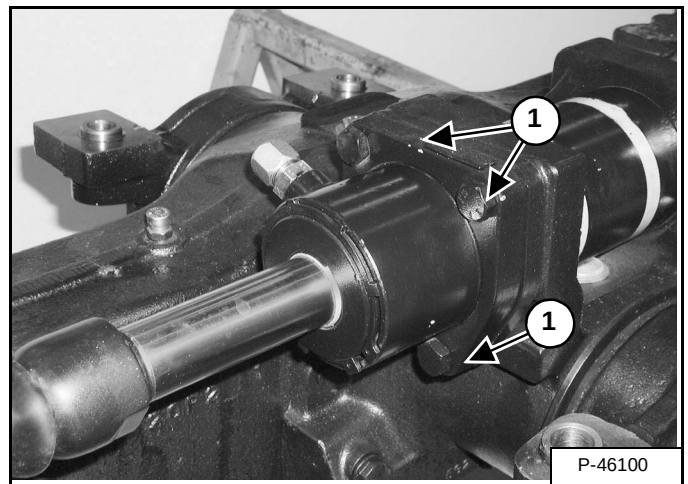

Remove the three bolts (Item 1) [Figure 20-62-7] from the cylinder retainer plate.

Assembly: Apply Loctite 270 to the three bolts and tighten to 88 ft.-lbs. (120 Nm) torque.

Figure 20-62-8

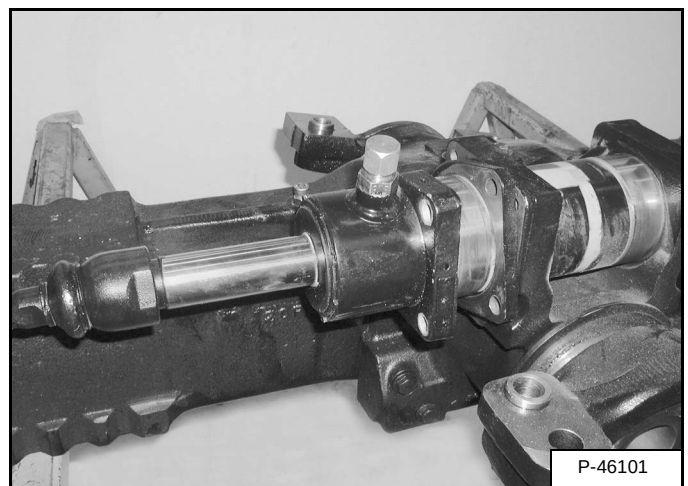


Remove the cylinder from the axle [Figure 20-62-8].

STEERING CYLINDER (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Parts Identification

1. Swivel End
2. Wiper
3. Backup Washer
4. Seal
5. Housing
6. Rod
7. O-Ring
8. Magnetic Sensor
9. Wear Ring
10. Spacer
11. Head Gland
12. Split Ring
13. Snap Ring

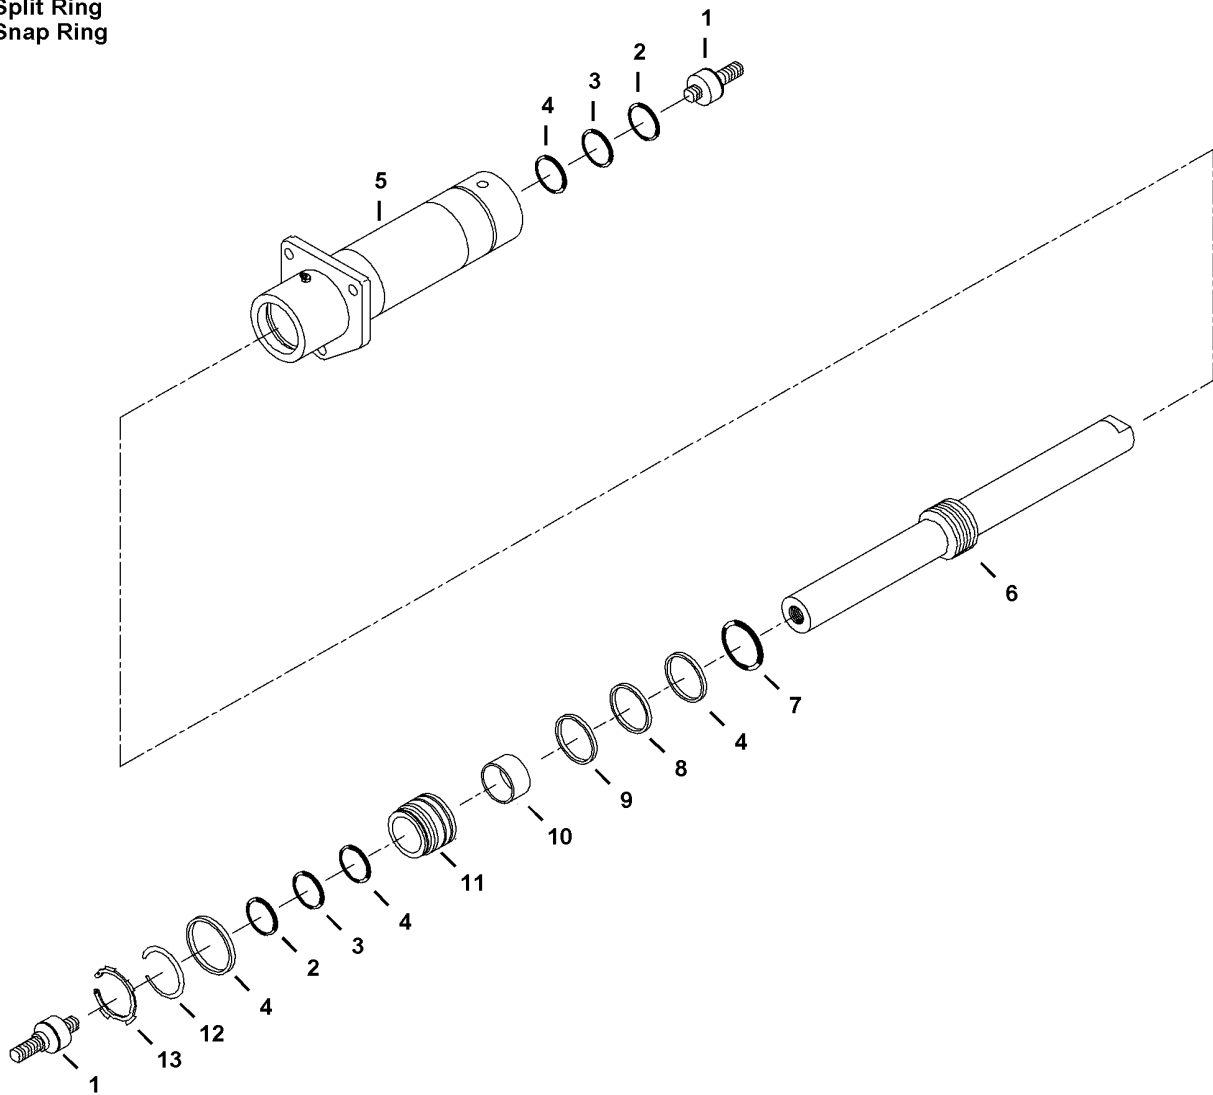


MS-01116

STEERING CYLINDER (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Disassembly

Figure 20-62-9

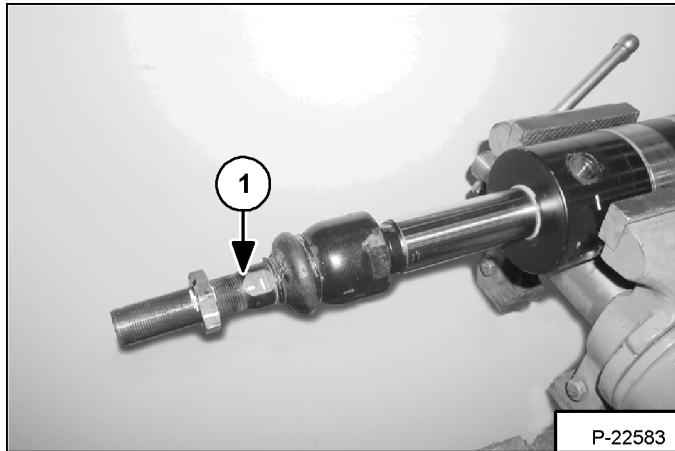

Put the cylinder in a vise and remove the tie rod swivel ends (Item 1) [Figure 20-62-9] from the rod.


Figure 20-62-10

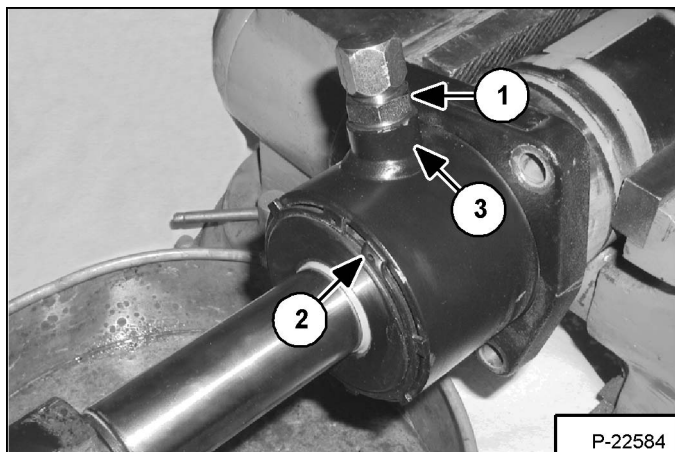

Place a drain pan under the cylinder, remove the fitting (Item 1) and snap ring (Item 2) [Figure 20-62-10] from the cylinder.


NOTE: Rotate the cylinder in the vise so the fitting port (Item 3) [Figure 20-62-10] is positioned down to allow the oil to drain into the pan.

Figure 20-62-11

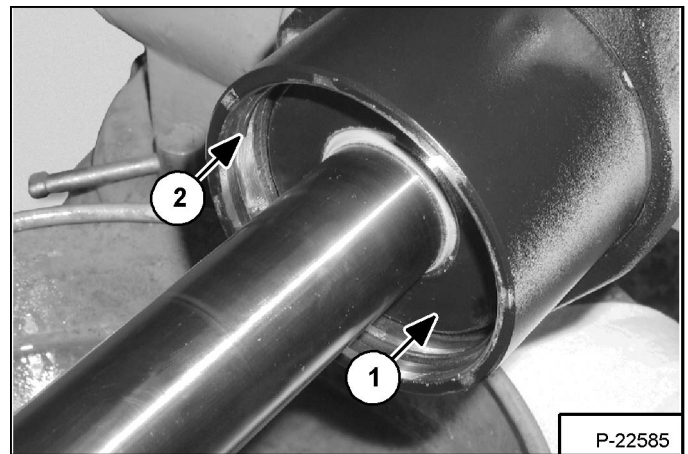

Drive the head gland (Item 1) inwards. Remove the internal snap ring (Item 2) [Figure 20-62-11].

Figure 20-62-12

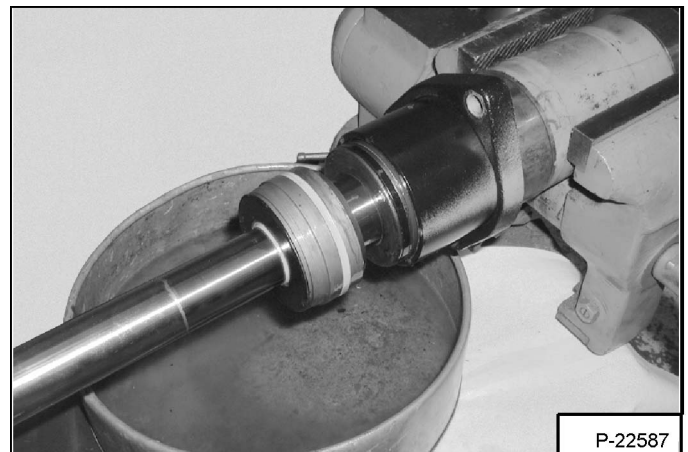


Remove the rod assembly from the housing [Figure 20-62-12].

STEERING CYLINDER (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Disassembly (Cont'd)

Figure 20-62-13

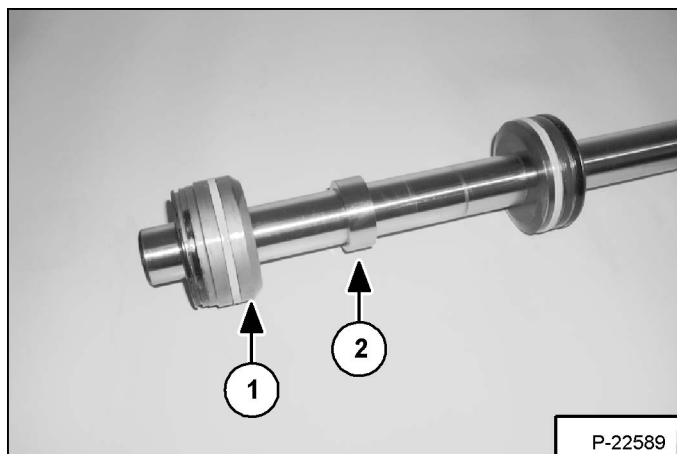


Remove the head assembly (Item 1) and spacer (Item 2) [Figure 20-62-13] from the rod.

Figure 20-62-14

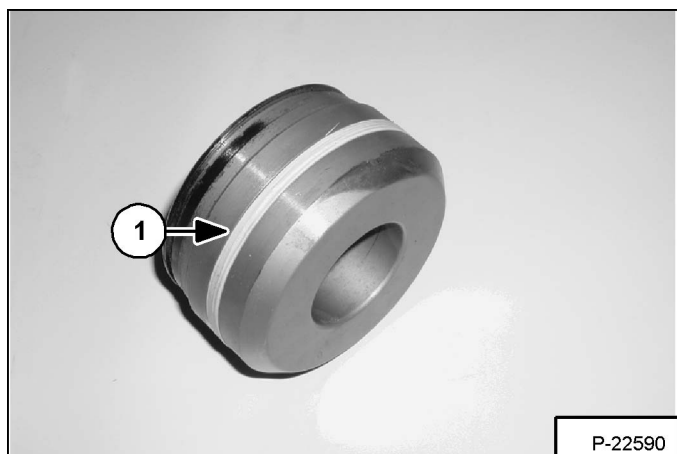


Remove the outer seal (Item 1) [Figure 20-62-14] from the head.

Figure 20-62-15

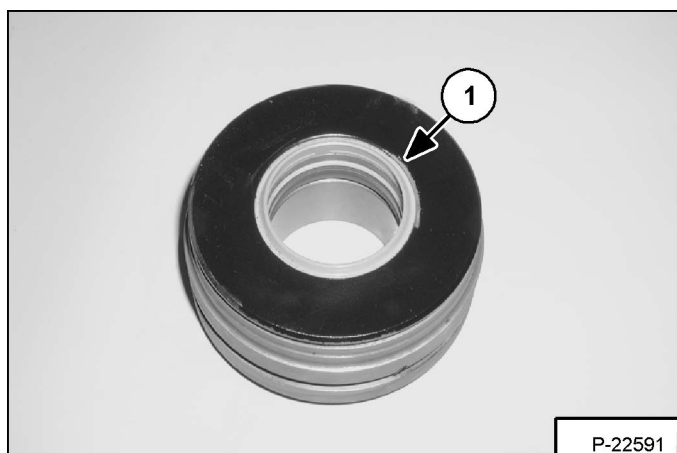

Remove the wiper seal (Item 1) [Figure 20-62-15].

Figure 20-62-16

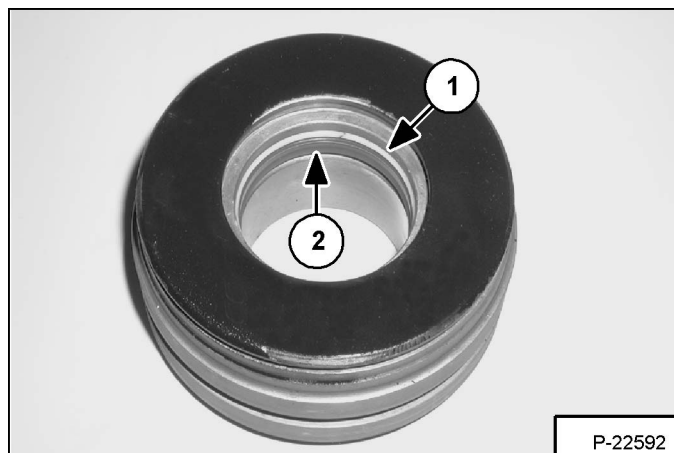


Remove the backup ring (Item 1) and rod seal (Item 2) [Figure 20-62-16] from the head gland.

STEERING CYLINDER (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Disassembly (Cont'd)

Figure 20-62-17

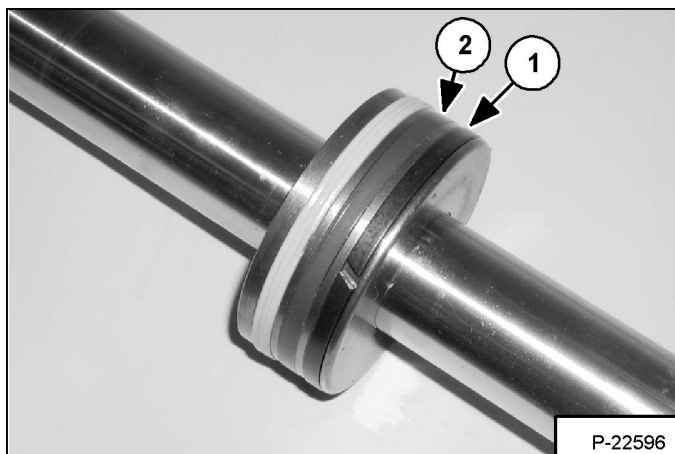


Remove the wear ring (Item 1) and magnetic sensor ring (Item 2) [Figure 20-62-17] from the piston.

Figure 20-62-18

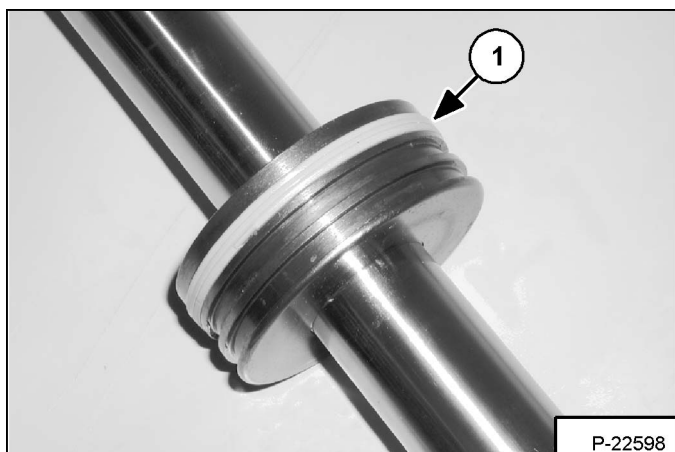


Remove the seal (Item 1) [Figure 20-62-18].

Figure 20-62-19

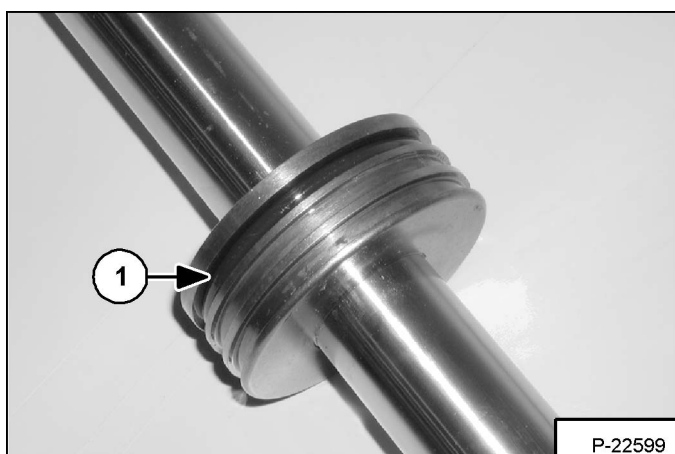

Remove the expander O-ring (Item 1) [Figure 20-62-19].

Figure 20-62-20

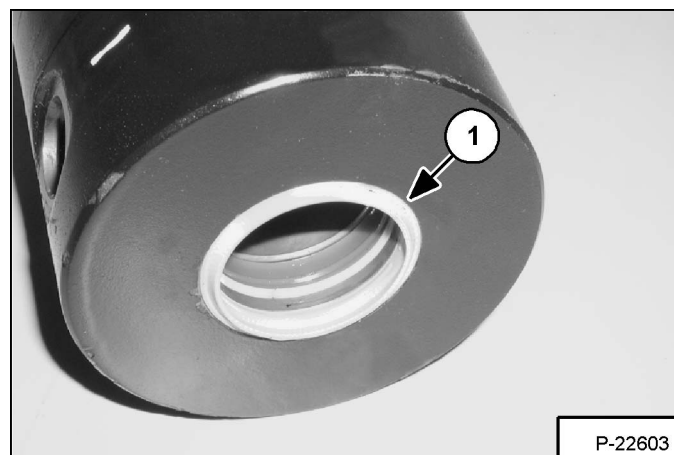


Remove the wiper seal (Item 1) [Figure 20-62-20] from the housing.

STEERING CYLINDER (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Disassembly (Cont'd)

Figure 20-62-21

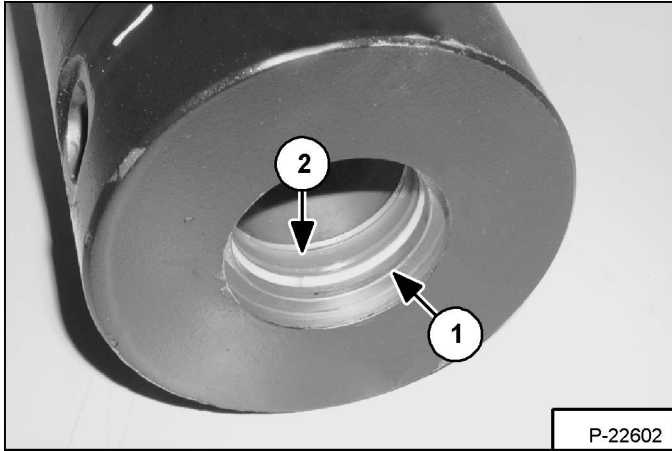

Remove the backup ring (Item 1) and rod seal (Item 2) [Figure 20-62-21] from the housing.

Assembly

Use the following tools to assembly the cylinder:

MEL1396-Seal Installation Tool

MEL1033-Rod Seal Installation Tool

Wash the cylinder parts in solvent and dry with compressed air.

Figure 20-62-22

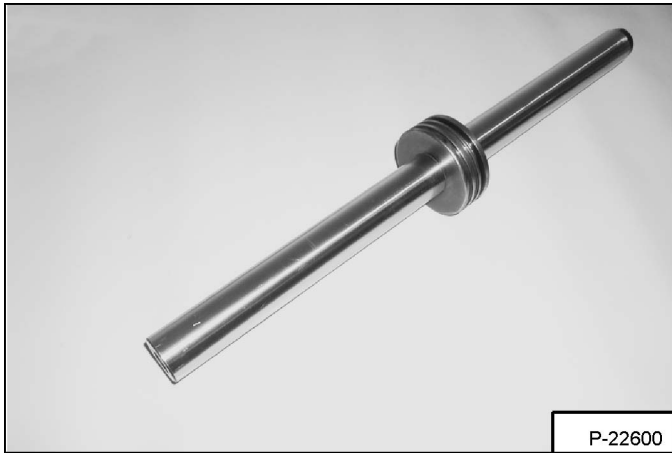


Figure 20-62-23




Inspect the cylinder parts for nicks, scratches or other damage. Replace any damaged parts [Figure 20-62-22] & [Figure 20-62-23].

Lubricate all O-rings and seals with hydraulic oil during installation.

Always use new O-rings and seals.

Figure 20-62-24

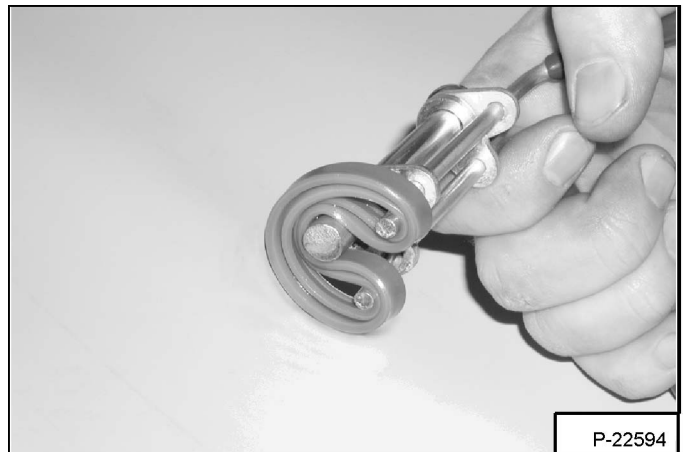

Install the rod seal on the rod seal installation tool [Figure 20-62-24].


NOTE: During installation the O-ring side of the seal must be toward the inside of the cylinder.

Rotate the handles to collapse the rod seal [Figure 20-62-24].

STEERING CYLINDER (REAR) (For S/N 3628 12000 and below, S/N 3629 12000 and below) (CONT'D)


Assembly (Cont'd)

Figure 20-62-25

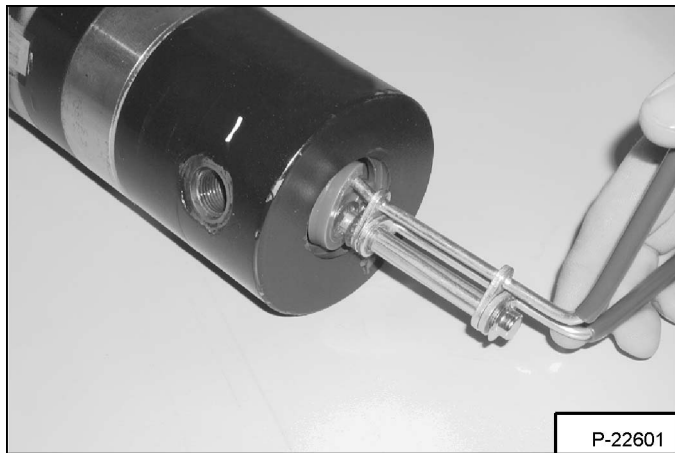


Install the rod seal in the housing [Figure 20-62-25].

Figure 20-62-26

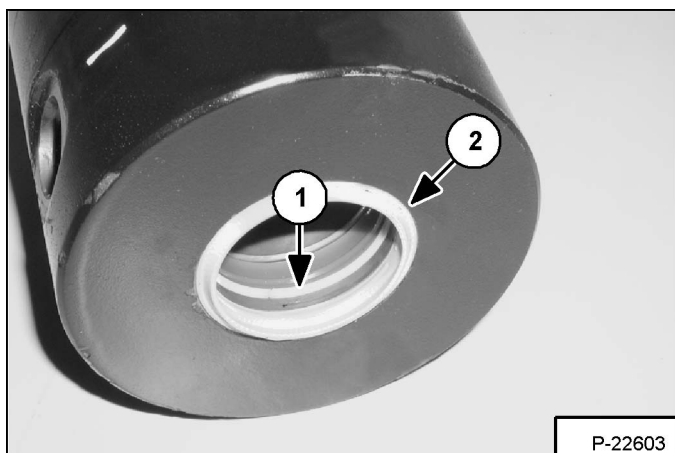

Install the backup ring (Item 1) and wiper seal (Item 2) [Figure 20-62-26] into the housing.


Figure 20-62-27

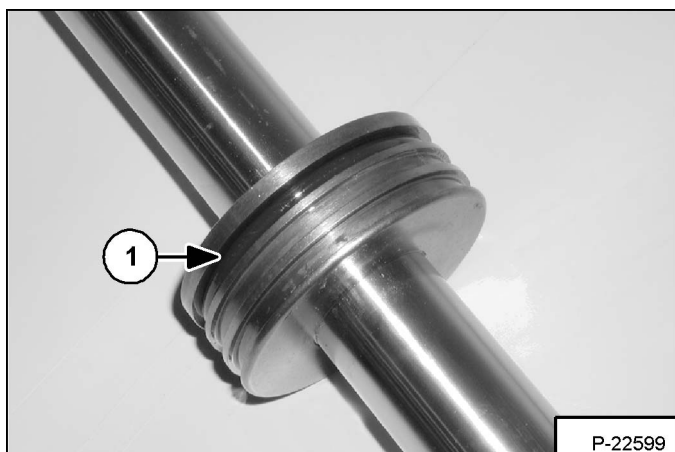

Install the expander O-ring (Item 1) [Figure 20-62-27] onto the piston.

NOTE: The expander O-ring (Item 1) [Figure 20-62-27] is installed in the piston groove closest to the machined end of the cylinder rod.

Figure 20-62-28

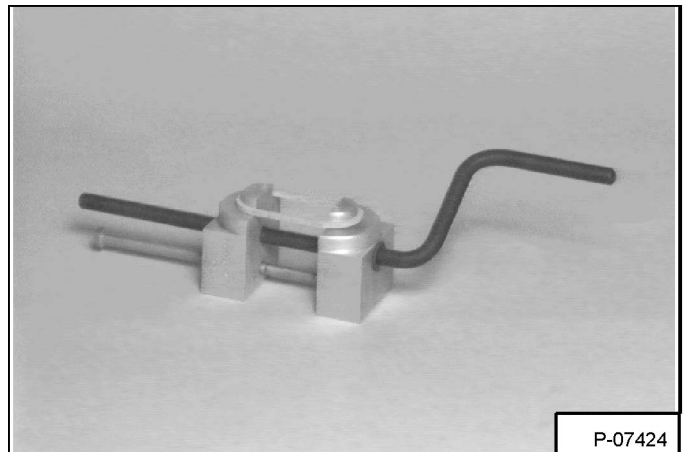


Install a new seal on the tool and slowly stretch it until it fits the piston [Figure 20-62-28].

Allow the seal to stretch for 30 seconds before installing it on the piston.

STEERING CYLINDER (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Assembly (Cont'd)

Figure 20-62-29

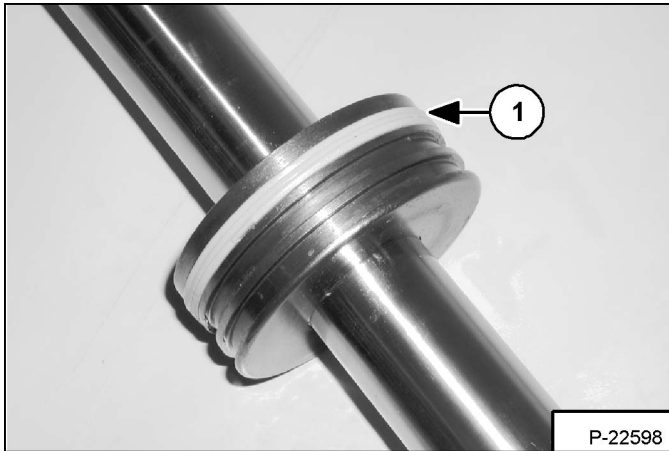


Install the seal (Item 1) [Figure 20-62-29] onto the piston, over the expander O-ring.

Figure 20-62-30

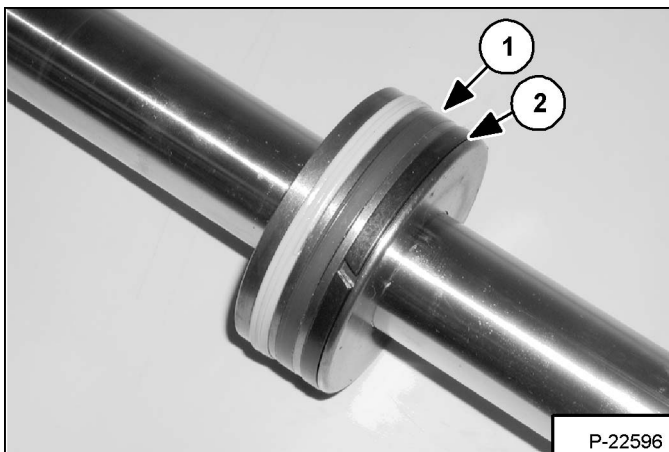


Install the magnetic sensor ring (Item 1) and wear ring (Item 2) [Figure 20-62-30].

Figure 20-62-31

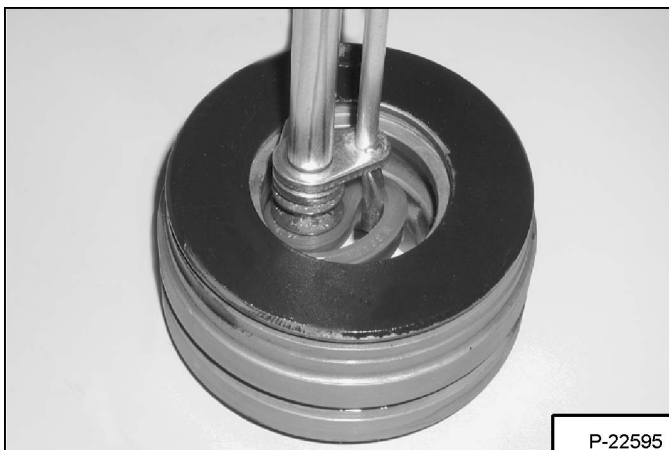

Install a new seal into the head gland [Figure 20-62-31].

Figure 20-62-32

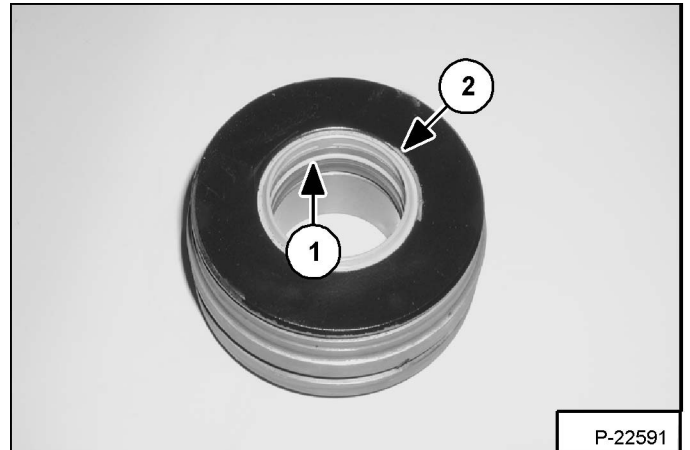


Install a new backup ring (Item 1) and wiper seal (Item 2) [Figure 20-62-32] into the head gland.

STEERING CYLINDER (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Assembly (Cont'd)

Figure 20-62-33

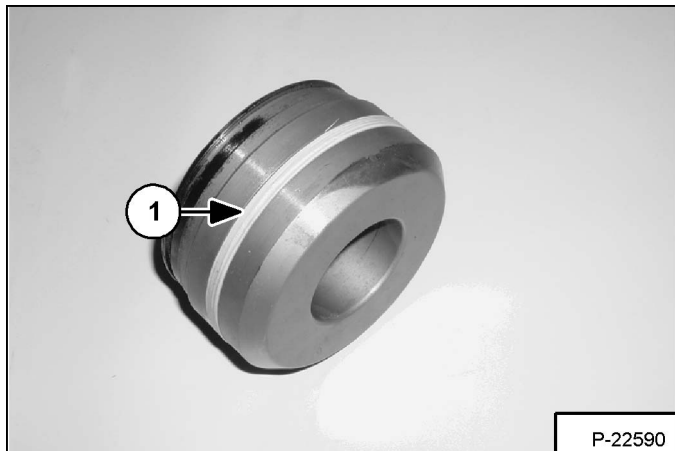


Install a new outer seal (Item 1) [Figure 20-62-33] onto the head gland.

Figure 20-62-34

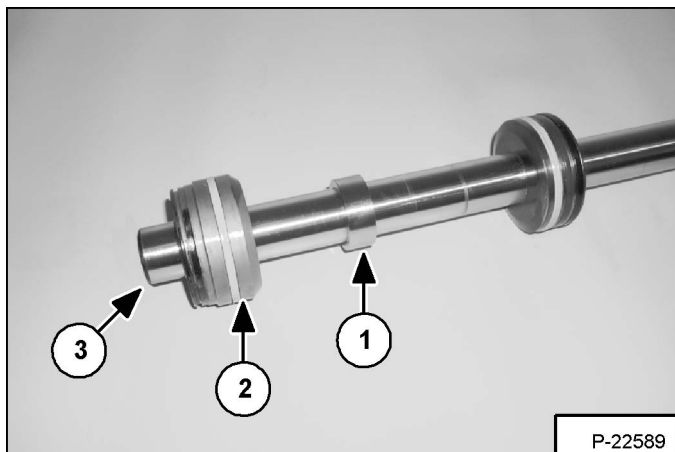


Install the spacer (Item 1) and head (Item 2) onto the machined end (Item 3) [Figure 20-62-34] of the cylinder rod.

Figure 20-62-35

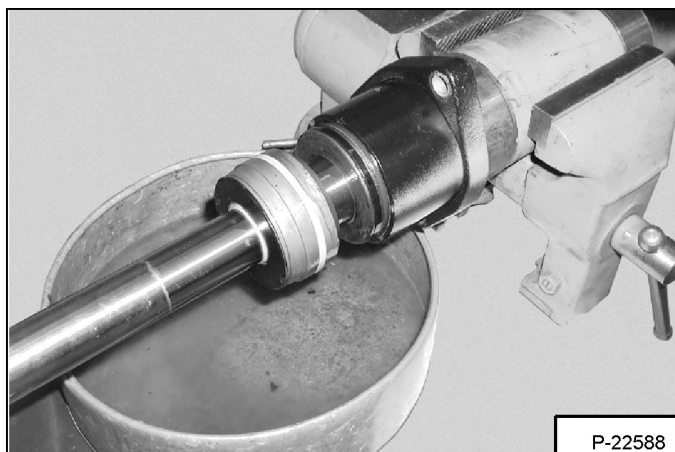

Lubricate the piston and seal and install into the housing [Figure 20-62-35].

Figure 20-62-36

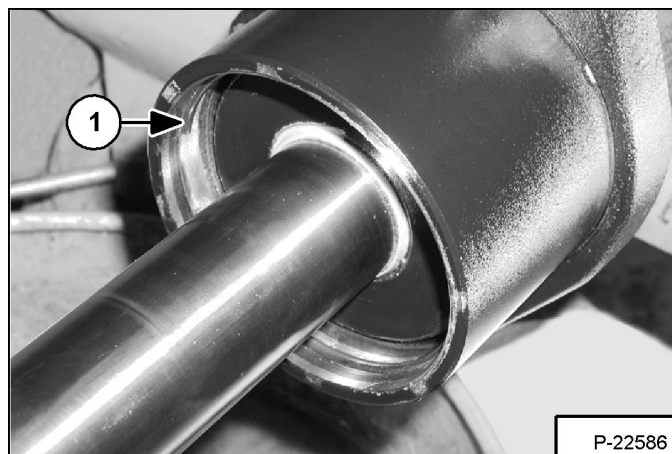


Lubricate and install the head gland into the housing and install the internal snap ring (Item 1) [Figure 20-62-36].

STEERING CYLINDER (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Assembly (Cont'd)


Figure 20-62-37

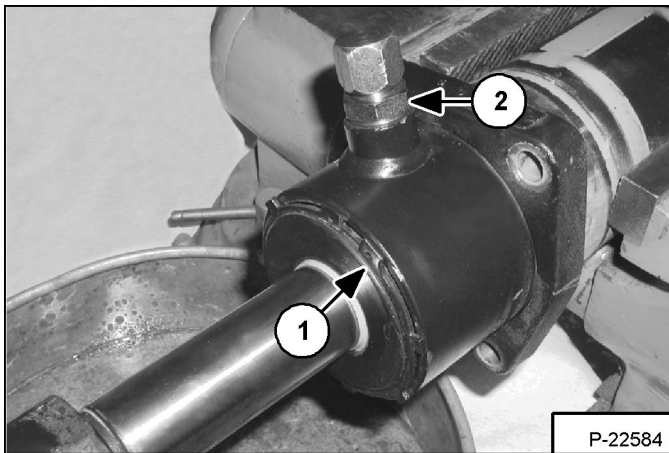

Pull the cylinder rod out until you are able to install the snap ring (Item 1) [Figure 20-62-37] onto the groove in the head gland.

Install the fitting (Item 2) [Figure 20-62-37].

Figure 20-62-38

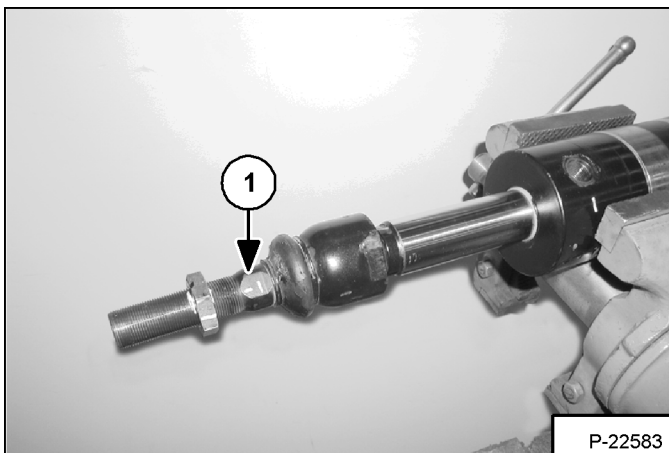

Install the tie rod swivel ends (Item 1) [Figure 20-62-38] onto the cylinder rod. Tighten to 300 ft.-lbs. (406 Nm) torque.




Bobcat®

STEERING CYLINDER (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above)


Removing the Steering Cylinder

Figure 20-63-1

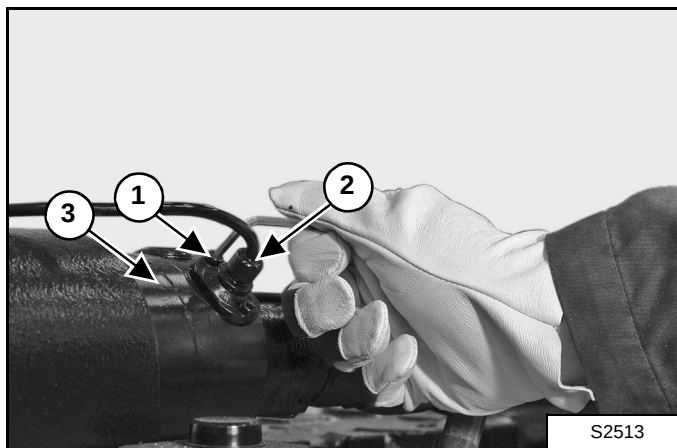


Remove the two bolts (Item 1) and remove the centering sensor (Item 2) from the steering cylinder (Item 3) [Figure 20-63-1].

Figure 20-63-2

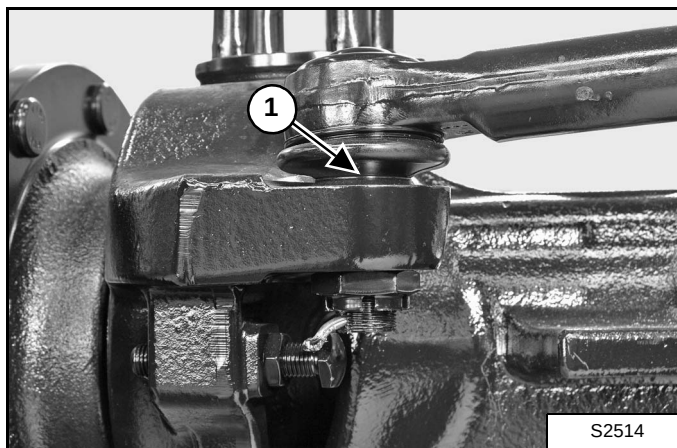


Remove the cotter pin (Item 1) [Figure 20-63-2].

Figure 20-63-3

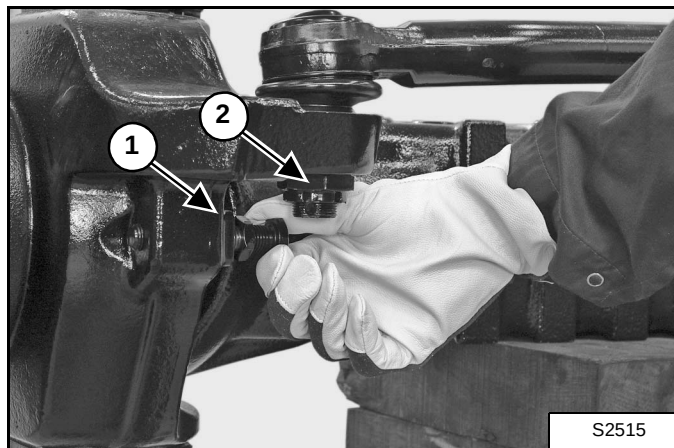

Remove the bolt (Item 1) for access for removing the nut (Item 2) [Figure 20-63-3].

Figure 20-63-4

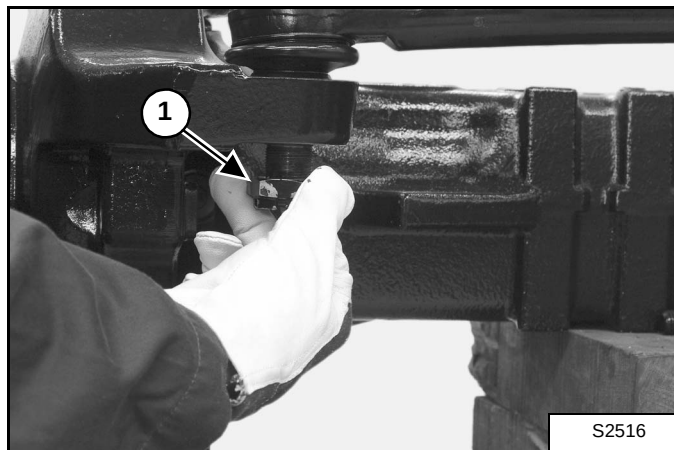


Remove the nut (Item 1) [Figure 20-63-4].

STEERING CYLINDER (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Removing the Steering Cylinder (Cont'd)

Figure 20-63-5

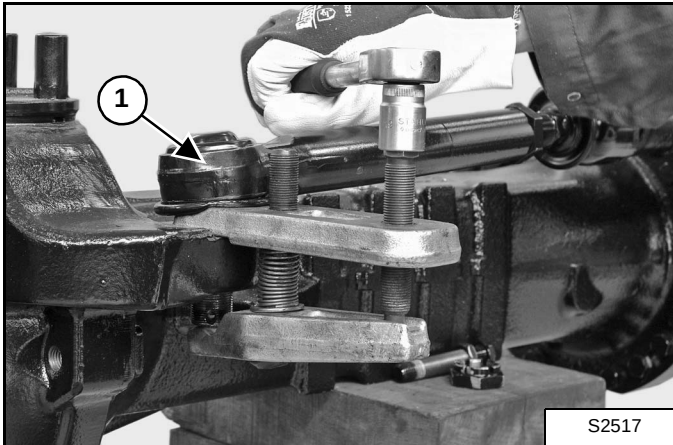


Remove the tie rod end (Item 1) [Figure 20-63-5] by means of a puller.

Figure 20-63-6

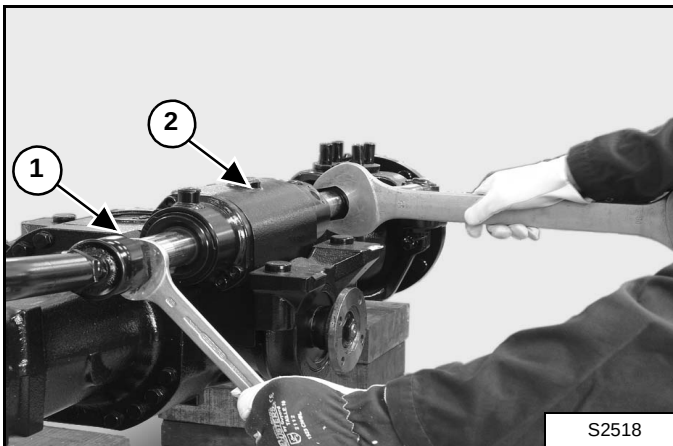


Disconnect the left and right steering bars (Item 1) from the piston (Item 2) [Figure 20-63-6].

Figure 20-63-7

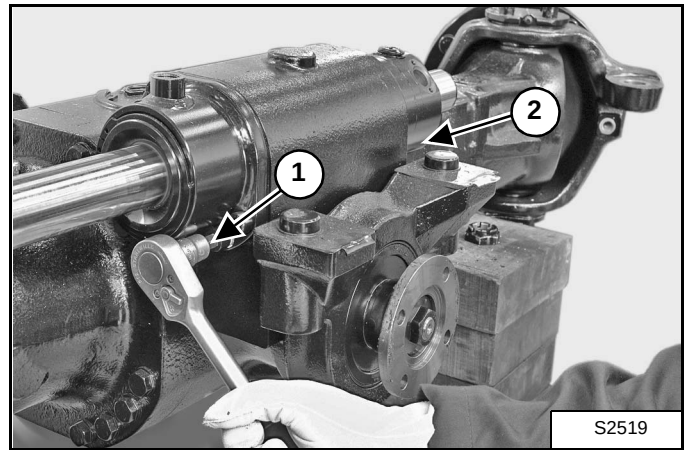

Remove the securing screws (Item 1) from the steering cylinder (Item 2) [Figure 20-63-7].

Figure 20-63-8

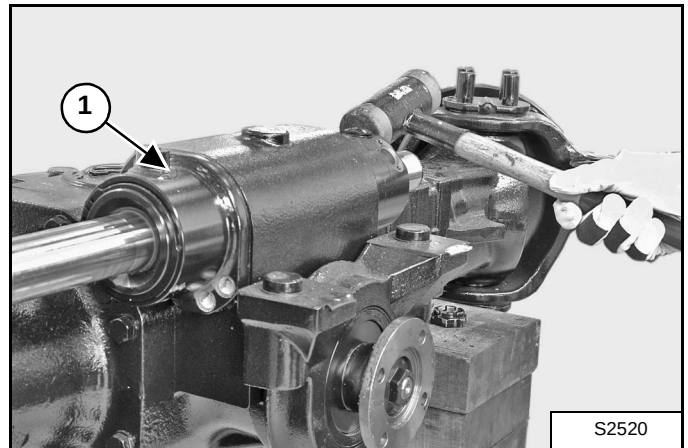


Extract the cylinder (Item 1) [Figure 20-63-8] using a plastic hammer.

NOTE: For cylinder disassembly, refer to "HOW TO DISASSEMBLE THE STEERING CYLINDER".

STEERING CYLINDER (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Installing the Steering Cylinder

Figure 20-63-9

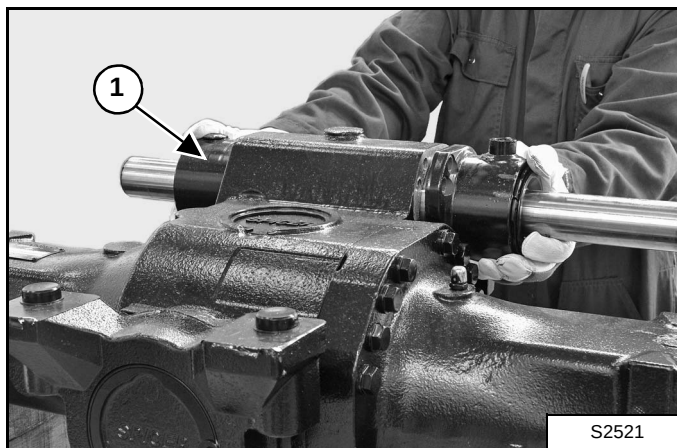

Lubricate the seats of the seals and fit the steering cylinder (Item 1) [Figure 20-63-9] into its seat.


Figure 20-63-10

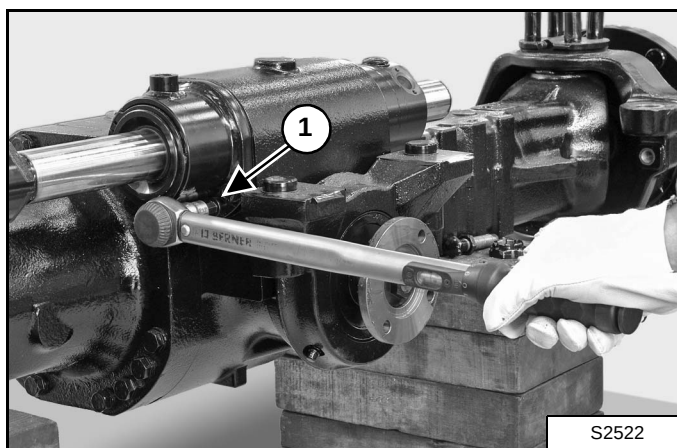

Tighten the screws (Item 1) [Figure 20-63-10].


Torque wrench setting: 85 - 95 ft.-lb. (116 - 128 Nm).

Figure 20-63-11

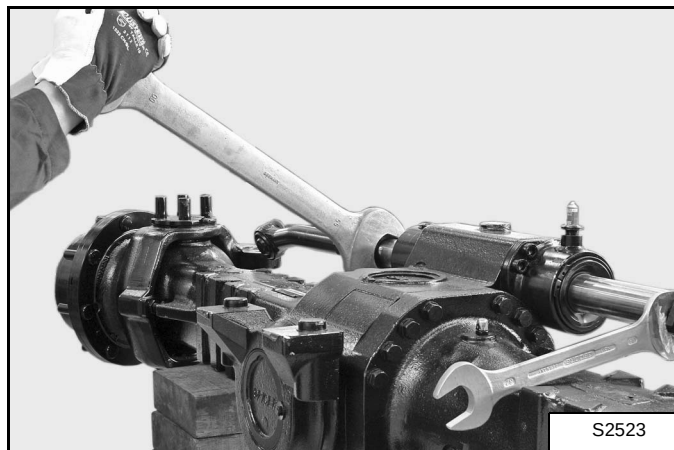

Apply Loctite 242 to the thread and connect the steering bars by screwing the terminals onto the piston stem, apply a torque of 170 - 200 ft.-lb. (240 - 270 Nm).

Figure 20-63-12

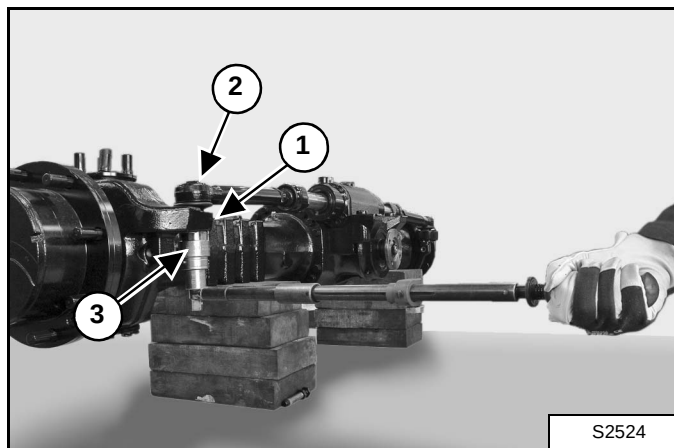

Insert the pins (Item 1) [Figure 20-63-12] in the steering case (Item 2) [Figure 20-63-12] and lock into position using a torque wrench setting of 192 - 214 ft.-lb. (260 - 290 Nm).


Find the position of the notching in relation to the hole of the cotter pins and tighten the nut (Item 3) [Figure 20-63-12] further.

NOTE: Check that the rubber guards [Figure 20-63-12] are intact.

STEERING CYLINDER (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Installing the Steering Cylinder (Cont'd)


Figure 20-63-13

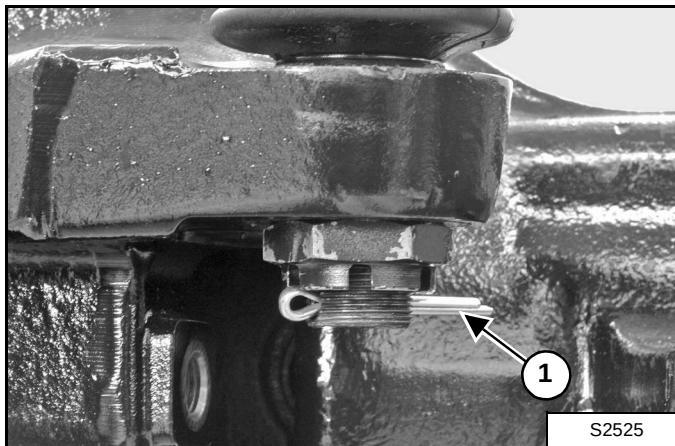

Insert the cotter pins (Item 1) [Figure 20-63-13] and bend the ends.

NOTE: Use new cotter pins.

Figure 20-63-14

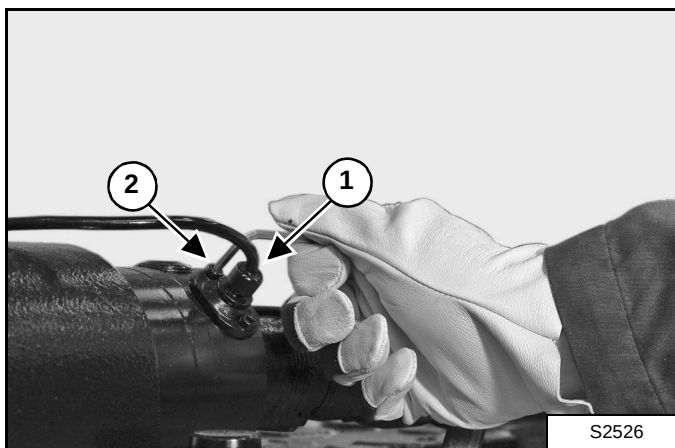

Install the centering sensor (Item 1) for checking piston centering and tighten the screws (Item 2) [Figure 20-63-14].


Torque wrench setting: 3.7 - 4.4 ft.-lb. (5 - 6 Nm).

After the axle has been reinstalled on the machine, perform the axle toe-in procedure (See "AXLE TOE-IN (For S/N 367812001 and Above, S/N 368012001 and Above, S/N 368112001 and Above)" on page 40-41-1)

STEERING CYLINDER (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Disassembling the Steering Cylinder

Figure 20-63-15

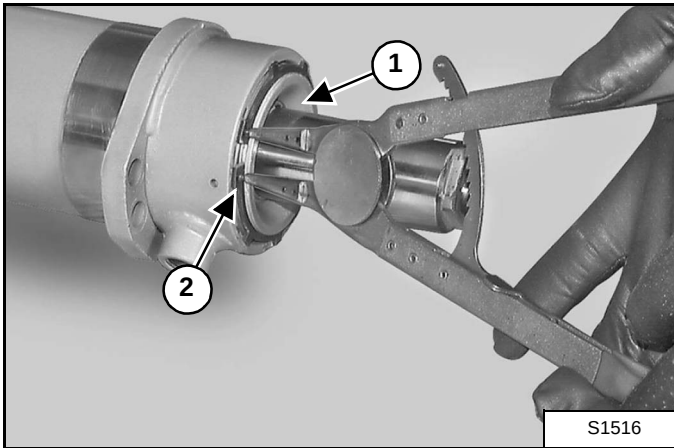

Remove the snap ring (Item 1) from the cylinder head (Item 2) [Figure 20-63-15],


Figure 20-63-16

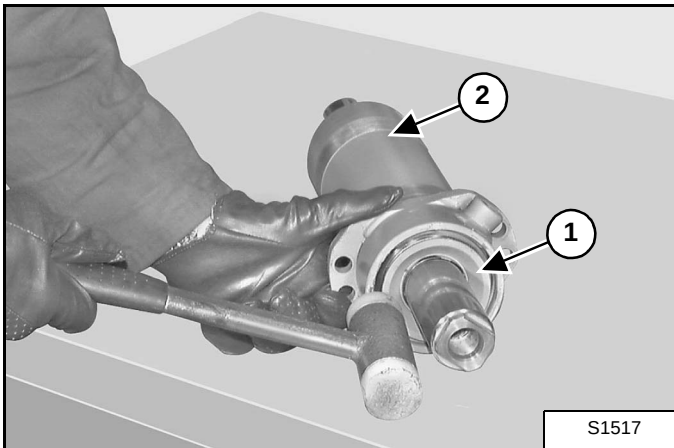

With the help of a plastic hammer, push the head (Item 1) inside the cylinder (Item 2) [Figure 20-63-16],


NOTE: The head should line up with the edge of the cylinder.

Figure 20-63-17

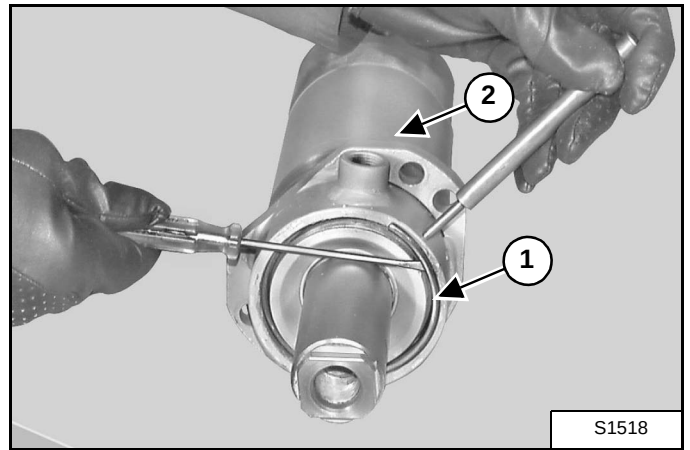

With the help of a drift, apply pressure to the stop ring (Item 1) that is placed inside the cylinder (Item 2) [Figure 20-63-17] and extract the ring using a screwdriver.

Figure 20-63-18

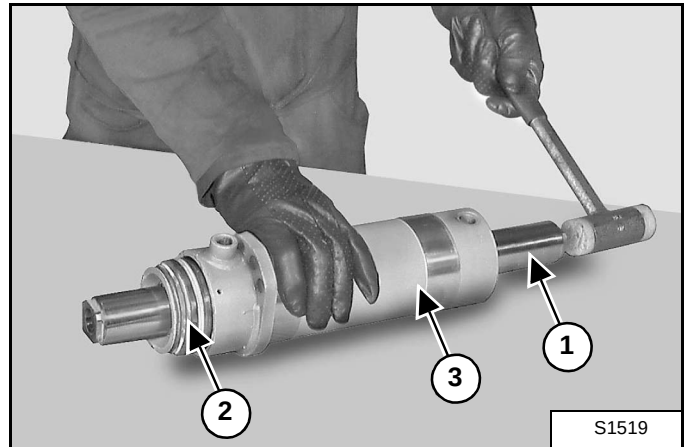


Hammer the piston (Item 1) on the rear of the head (Item 2) [Figure 20-63-18] using a plastic hammer.

Continue hammering until the head (Item 2) is ejected from the cylinder (Item 3) [Figure 20-63-18].

STEERING CYLINDER (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Disassembling the Steering Cylinder (Cont'd)

Figure 20-63-19

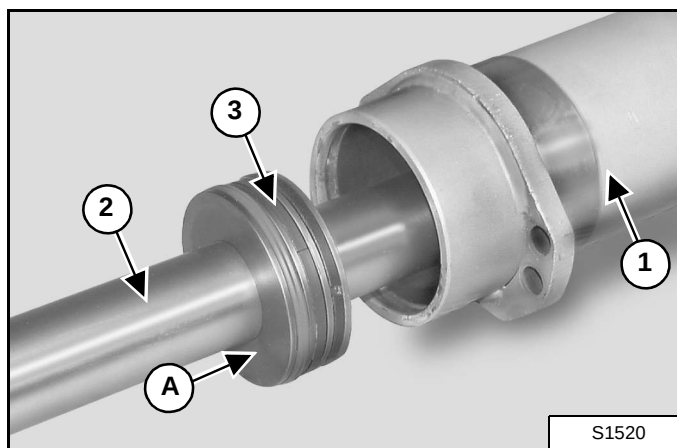

Disassemble the cylinder unit (Item 1) by extracting first the head (Item 2) then the piston (Item 3) [Figure 20-63-19].

NOTE: Note down the assembly side of the piston (Item 3) [Figure 20-63-19]. The bevelled part "A" of the piston is oriented towards the head (Item 2) [Figure 20-63-19].


Remove all seals, anti-extrusion rings and scraper rings from head, cylinder and piston.

NOTE: 1) All seals must be replaced every time the unit is disassembled.
2) Particular attention must be paid not to damage the seats of both seals and piston slide.

STEERING CYLINDER (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Assembling the Steering Cylinder


Figure 20-63-20

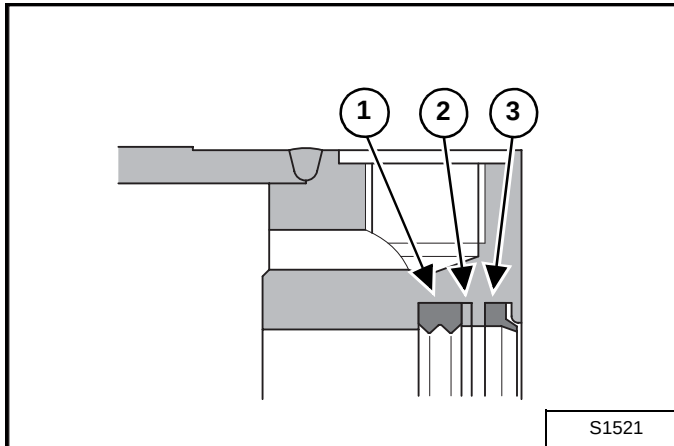

After applying grease, install the sealing ring (Item 1) on the shaft, the anti-extrusion ring (Item 2) and the scraper ring (Item 3) [Figure 20-63-20] inside the cylinder (Item 3) [Figure 20-63-18].

NOTE: Thoroughly check that positioning of the anti-extrusion ring (Item 2) [Figure 20-63-20] is correct.


Figure 20-63-21

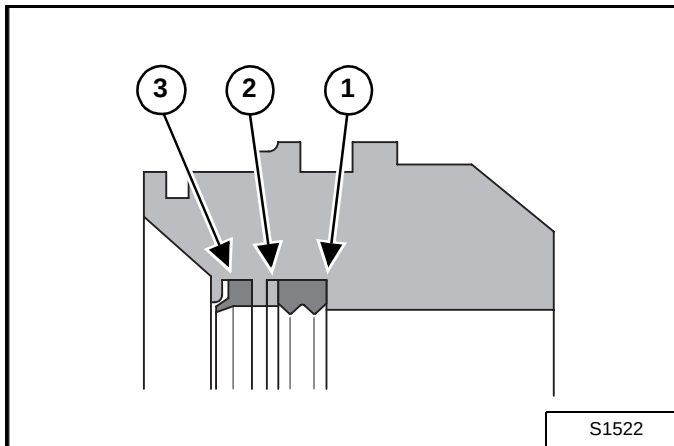

After applying grease, install the sealing ring (Item 1) on the shaft, the anti-extrusion ring (Item 2) and the scraper ring (Item 3) [Figure 20-63-21] in the head (Item 2) [Figure 20-63-19].

NOTE: Thoroughly check that positioning of the anti-extrusion ring (Item 2) [Figure 20-63-21] is correct.


Figure 20-63-22

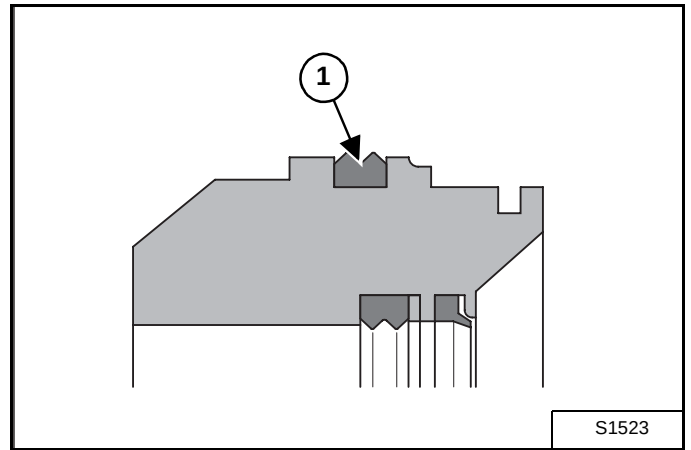

Fit the seal (Item 1) [Figure 20-63-22] onto the outside of the head (Item 2) [Figure 20-63-19].

NOTE: In order to facilitate assembly, apply grease to the outer surface of the piston. Do not roll the seal (Item 1) [Figure 20-63-22]

Figure 20-63-23

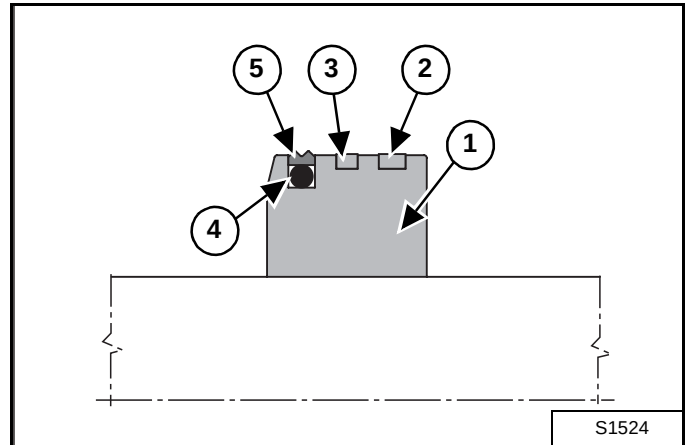


Prepare the piston (Item 1) by fitting it with the guide ring (Item 2), the magnetic ring (Item 3), the O-ring (Item 4) and the seal (Item 5) [Figure 20-63-23].

NOTE: In order to facilitate assembly, apply grease.

STEERING CYLINDER (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Assembling the Steering Cylinder (Cont'd)


Figure 20-63-24

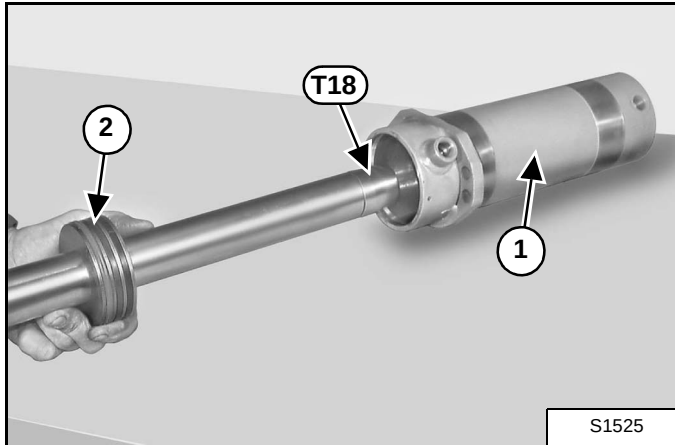

Apply tool **T18** to the shaft on the opposite side of the head (Item 2) and centre it on the cylinder (Item 1) so that it fits into the piston (Item 2) [Figure 20-63-24].


NOTE: Apply a little grease to seals and cylinder.

Figure 20-63-25

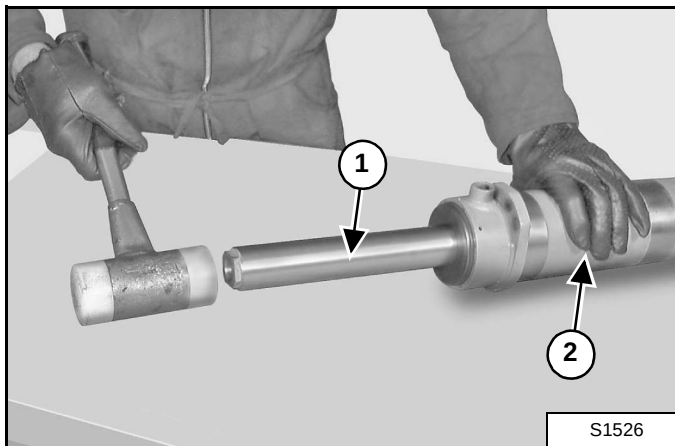


Push the piston (Item 1) into the cylinder (Item 2) [Figure 20-63-25] for 100 MM. using a plastic hammer.

Figure 20-63-26

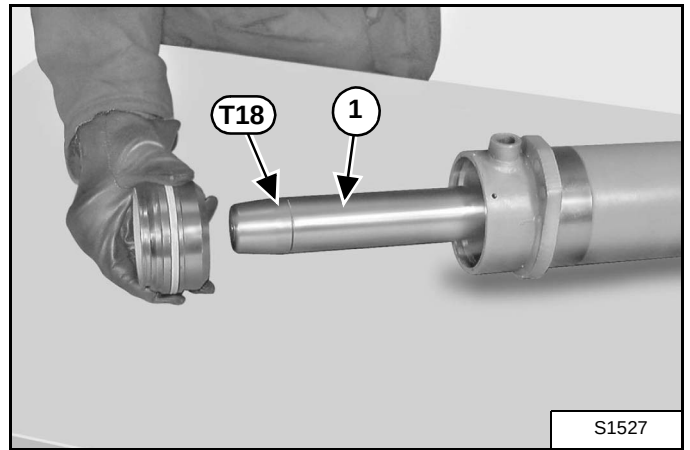

Remove tool **T18** and apply it to the opposite side of the piston (Item 1) [Figure 20-63-26]

Figure 20-63-27

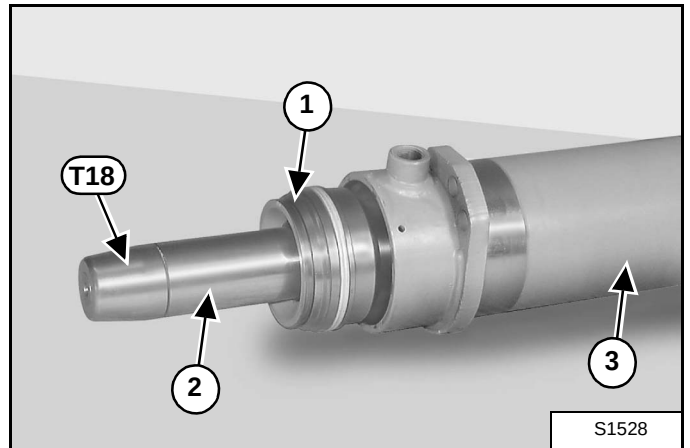


Apply grease to the head (Item 1) [Figure 20-63-27] seals, fit the head onto the piston and push it onto the cylinder (Item 3) [Figure 20-63-27].

STEERING CYLINDER (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Assembling the Steering Cylinder (Cont'd)

Figure 20-63-28

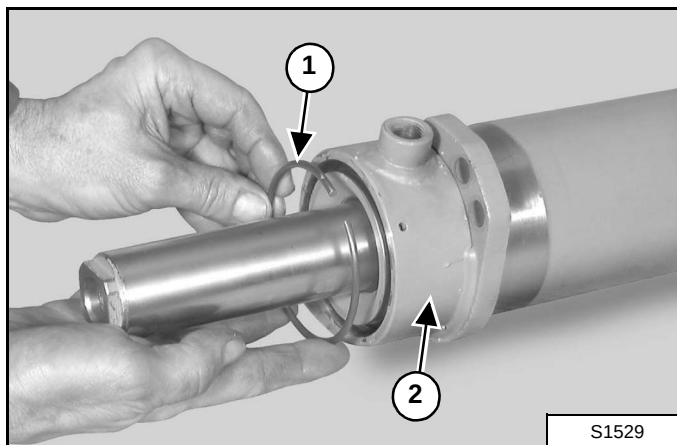


Insert the stop ring (Item 1) ensuring that it fits into the seat of the cylinder (Item 2) [Figure 20-63-28].

Figure 20-63-29

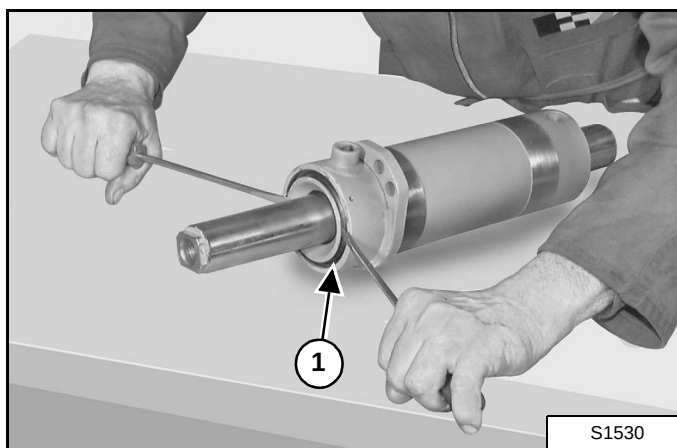

Apply pressure to the head using two screwdrivers or levers until the head is fastened onto the stop ring (Item 1) [Figure 20-63-28].

Figure 20-63-30

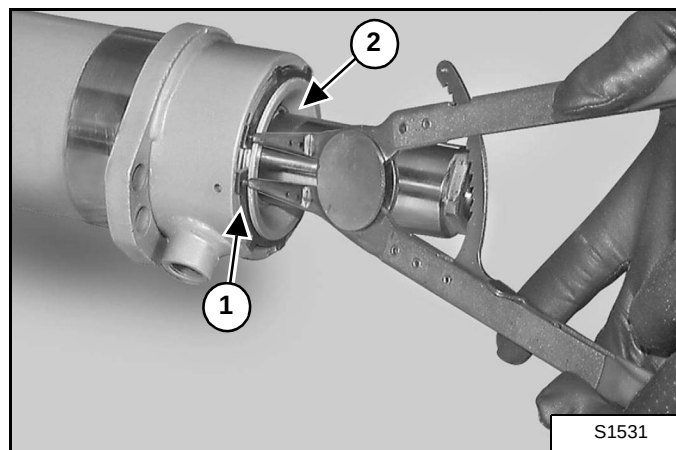

Fit the snap ring (Item 1) on the head (Item 2) [Figure 20-63-30].

NOTE: Make sure that the snap ring (Item 1) [Figure 20-63-30] is securely fastened in its seat. If necessary, force it into its seat using a drift and a hammer.




Bobcat®

DRIVE BOX (For S/N 362811001 - 362812000, S/N 362911001 - 362912000)

Parts Identification

1. O-Ring
2. Bolt
3. Mounting Flange
4. Washer
5. Tubeline
6. Plug
7. Housing
8. Breather
9. Bearing
10. Gear
11. Plug
12. Shaft
13. Seal
14. Snap Ring
15. Dowel

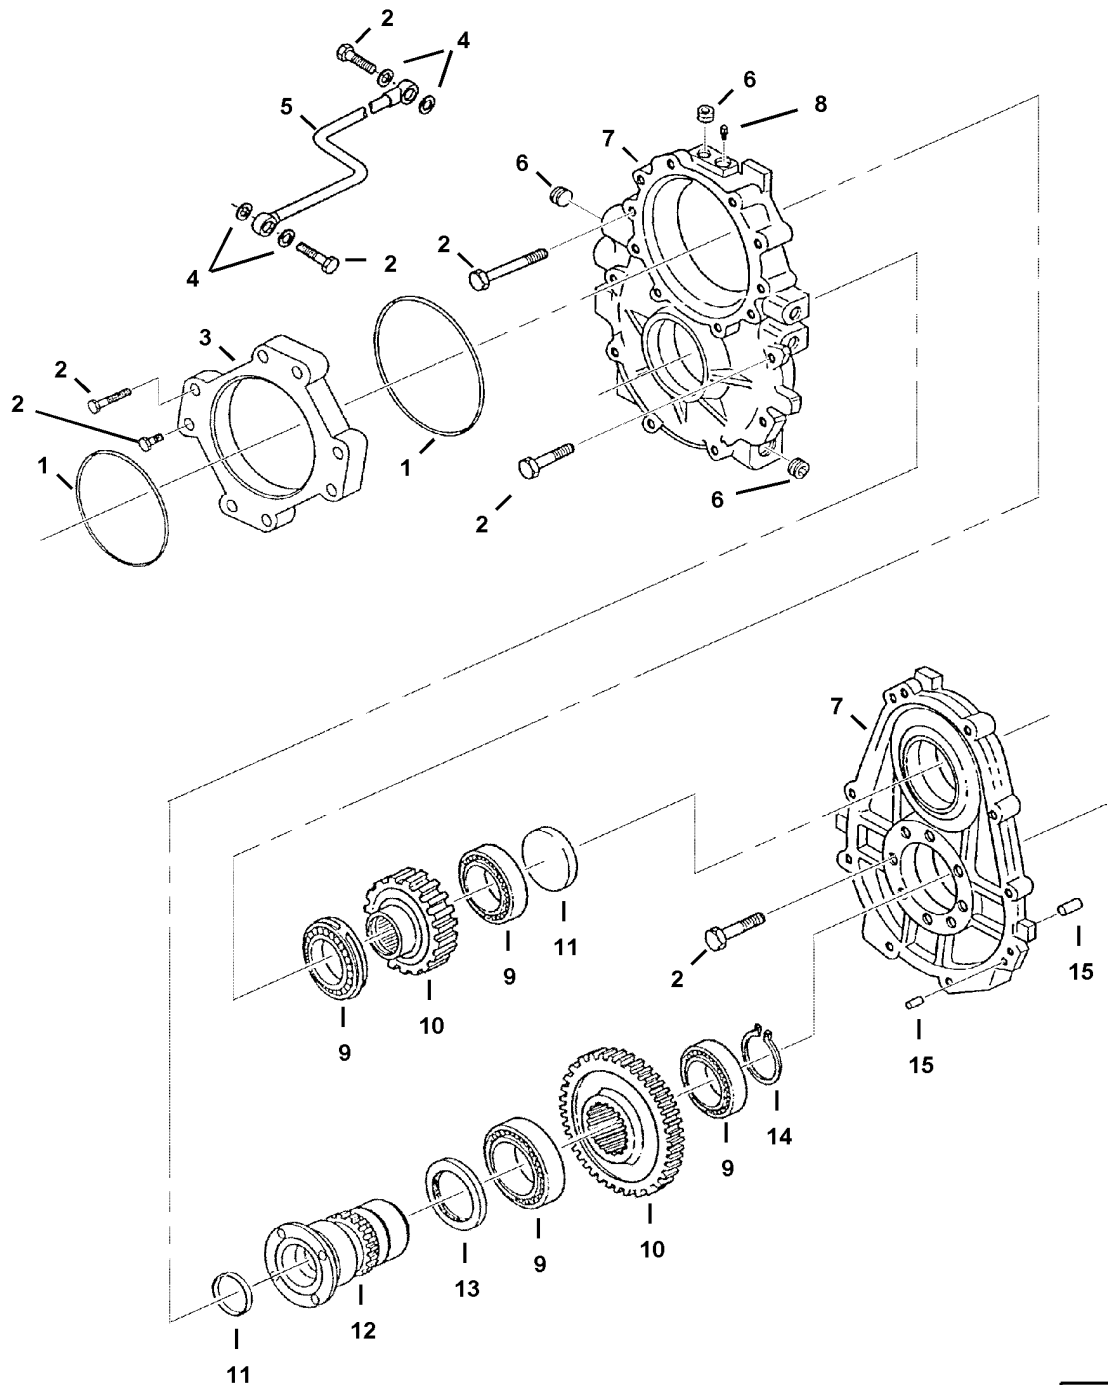

B-15972


DRIVE BOX (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Disassembly

Remove the front axle. (See "Removal" on page 40-31-1 for machine with Frame Leveling) or (See "Removal" on page 40-30-1 for machine without Frame Leveling)


Remove the drive motor. (See "Removal And Installation" on page 30-30-1.)

Figure 20-70-1

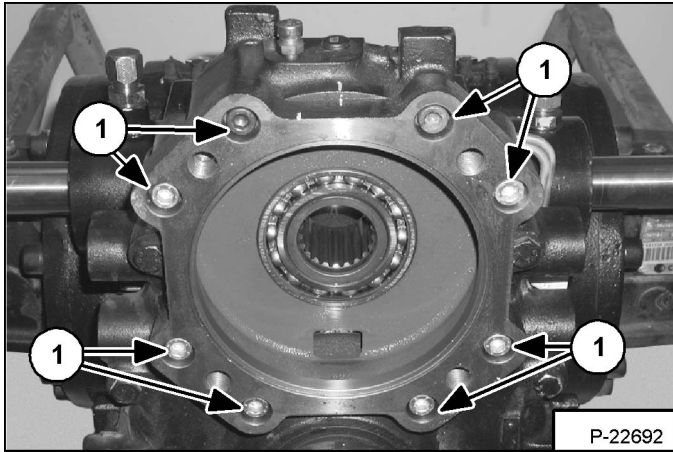


Mark the mounting flange and housing for correct assembly. Remove the eight mounting bolts (Item 1) [Figure 20-70-1]. Remove the mounting flange.

Figure 20-70-2

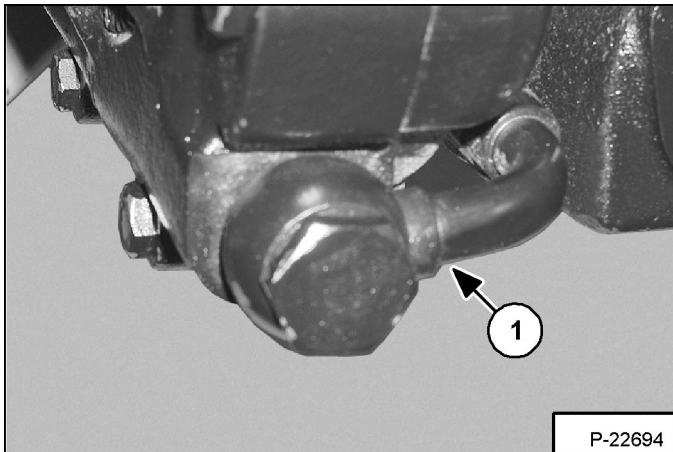


Place a drain pan under the drive box and remove the hose (Item 1) [Figure 20-70-2].

Figure 20-70-3

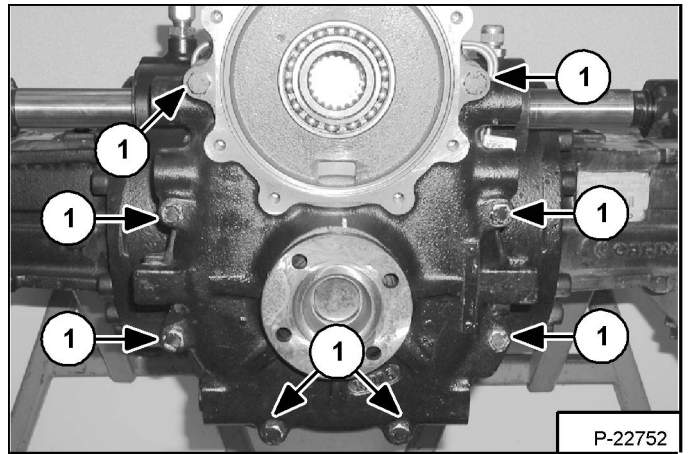

Remove the eight cover mounting bolts (Item 1) [Figure 20-70-3].

Figure 20-70-4

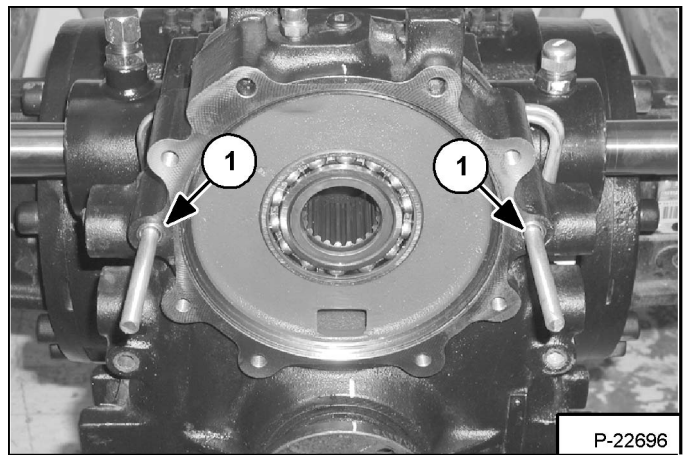


Install two guide bolts (Item 1) [Figure 20-70-4] to support the housing cover when removing it from the dowels.

DRIVE BOX (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Disassembly (Cont'd)


Figure 20-70-5

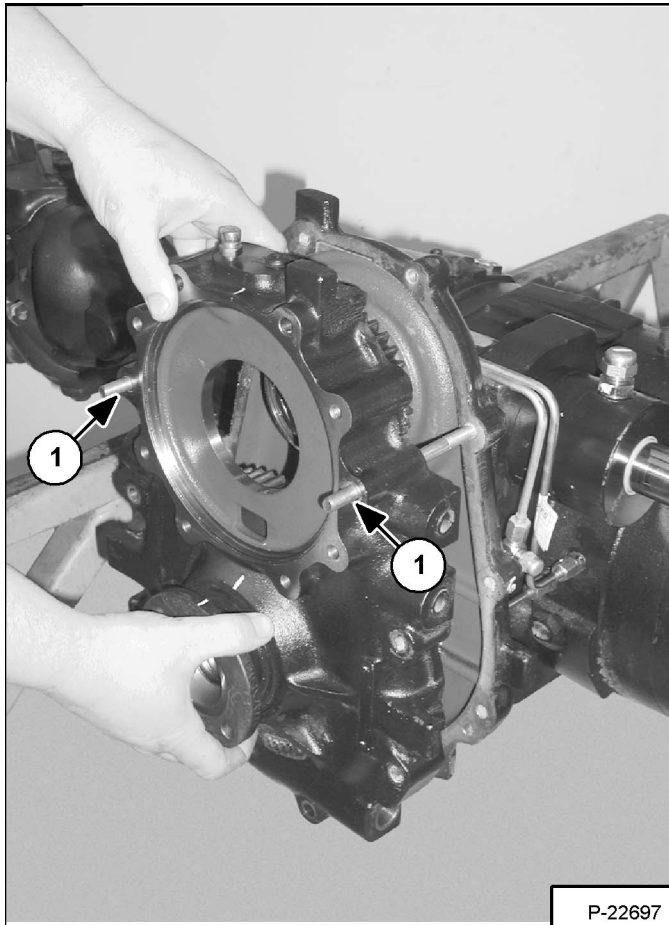

Remove the cover from the rear housing [Figure 20-70-5].


Remove the two guide bolts (Item 1) [Figure 20-70-5].

Figure 20-70-6

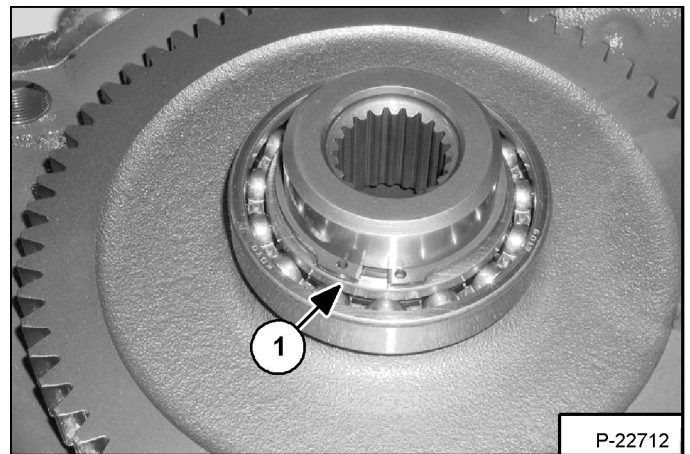

With the cover supported on a work surface, remove the snap ring (Item 1) [Figure 20-70-6].

Figure 20-70-7

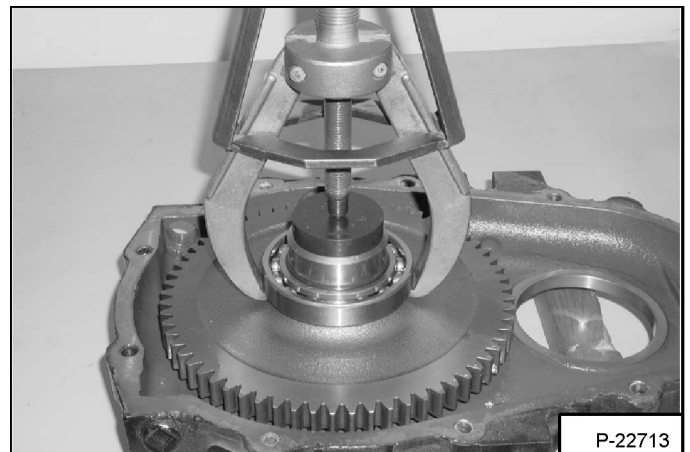


Remove the bearing from the shaft [Figure 20-70-7].

DRIVE BOX (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Disassembly (Cont'd)

Figure 20-70-8

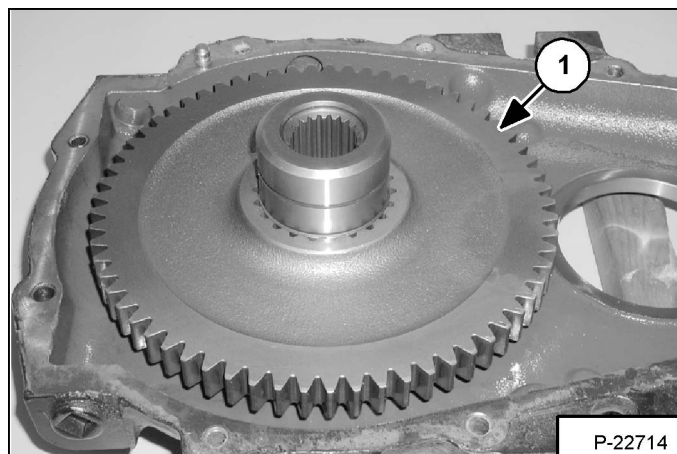


Remove the gear (Item 1) [Figure 20-70-8] from the shaft.

Figure 20-70-9

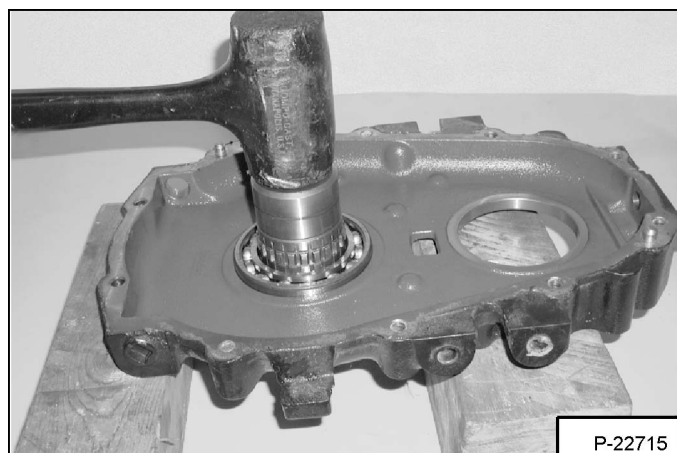


Remove the shaft from the bearing and housing [Figure 20-70-9].

Figure 20-70-10

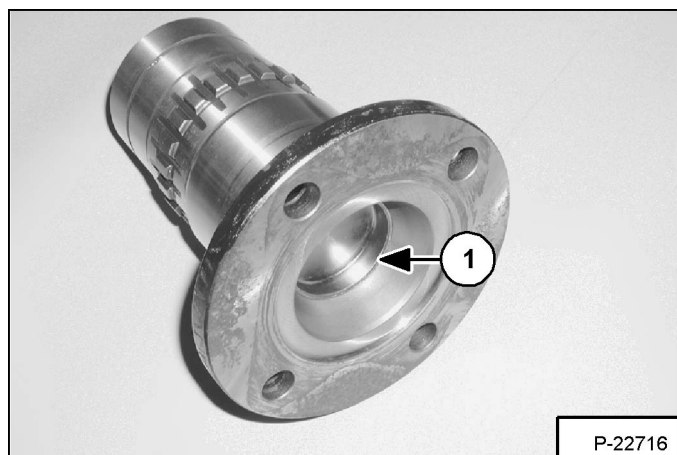

Remove the plug (Item 1) [Figure 20-70-10] from the shaft.

Figure 20-70-11

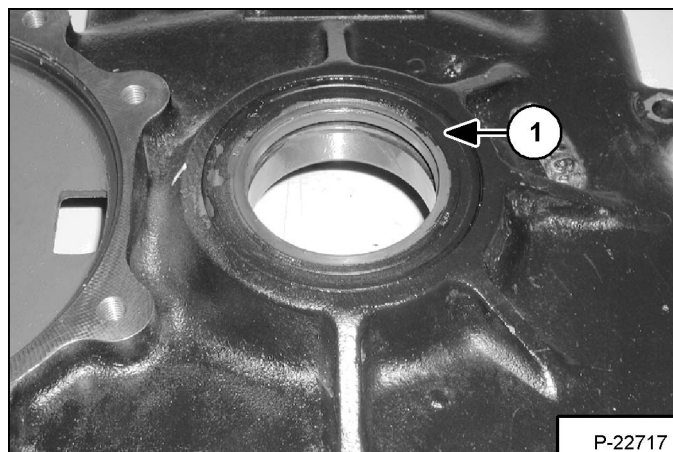


Remove the shaft seal (Item 1) [Figure 20-70-11] from the housing.

DRIVE BOX (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Install two guide bolts (Item 1) **[Figure 20-70-14]** and remove the six remaining mounting bolts.


Disassembly (Cont'd)

Figure 20-70-12

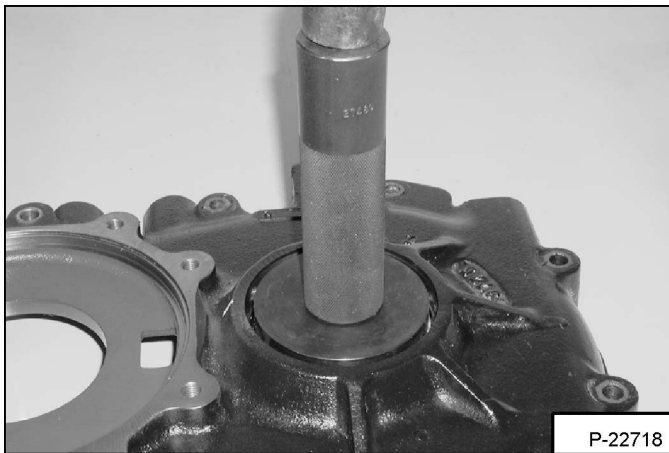


Remove the bearing from the housing **[Figure 20-70-12]**.

Figure 20-70-13

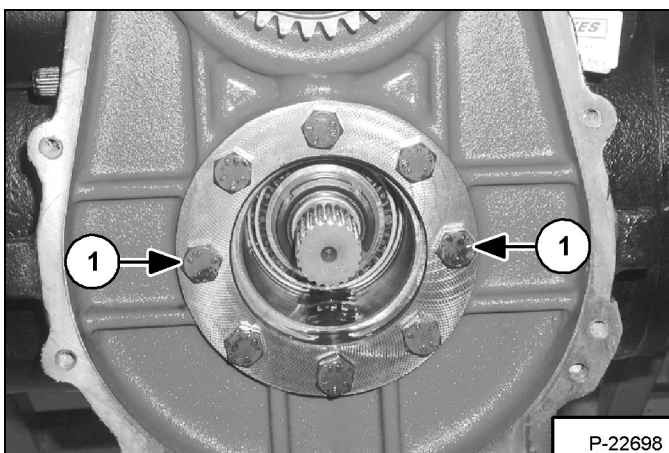

Remove two of the rear housing mounting bolts (Item 1) **[Figure 20-70-13]**.


Figure 20-70-14

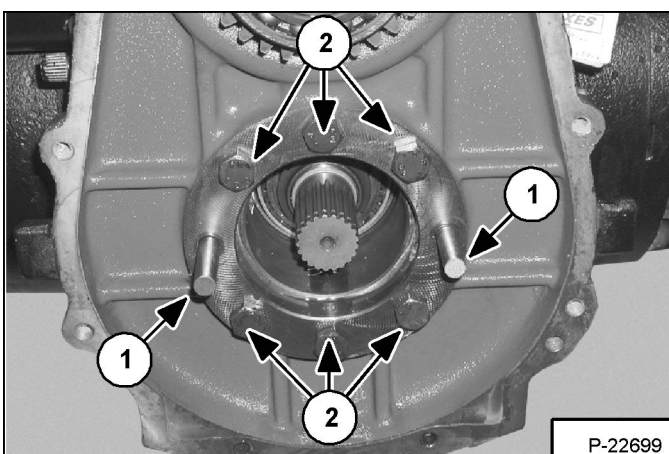

DRIVE BOX (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Disassembly (Cont'd)


Figure 20-70-15

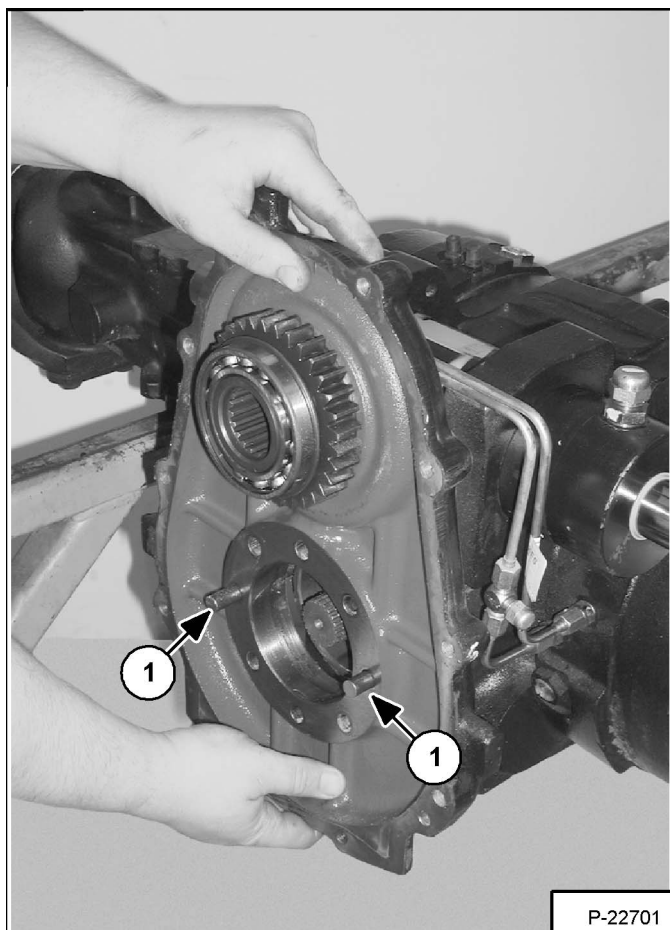

Remove the rear cover from the axle housing [Figure 20-70-15].


Remove the two guide bolts (Item 1) [Figure 20-70-15].

Figure 20-70-16

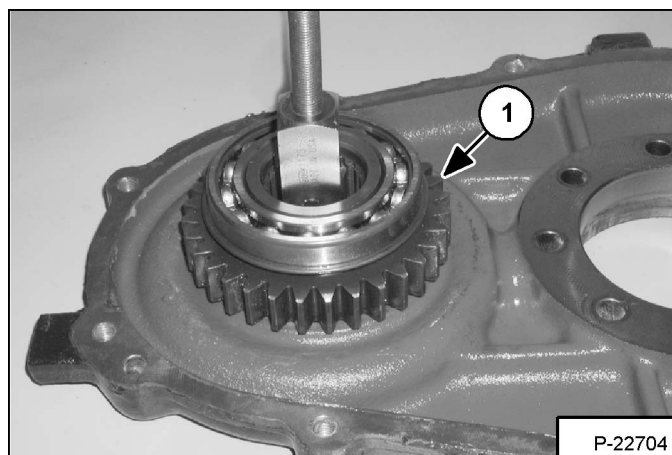

With the cover supported on a work surface, remove the gear/bearing assembly (Item 1) [Figure 20-70-16].

Figure 20-70-17

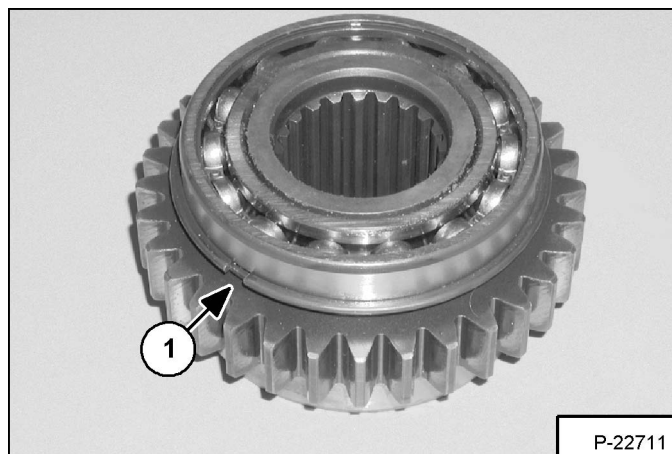


Remove the snap ring (Item 1) [Figure 20-70-17] from the bearing.

DRIVE BOX (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Disassembly (Cont'd)

Figure 20-70-18

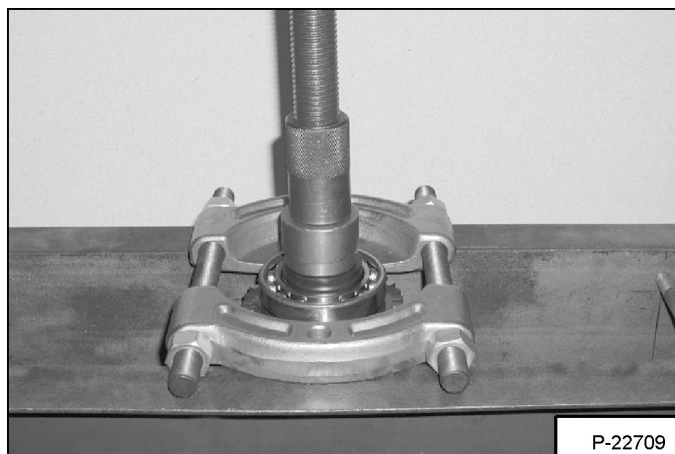

Using a press, remove both bearings from the gear [Figure 20-70-18].


Figure 20-70-19

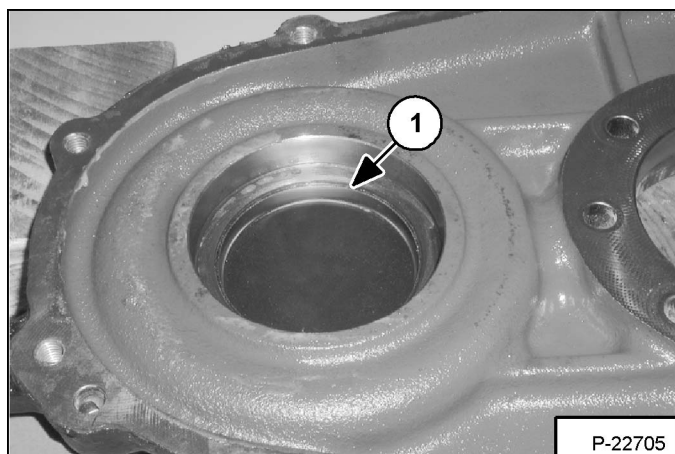

Remove the plug (Item 1) [Figure 20-70-19] from the rear housing.

Inspection

Figure 20-70-20

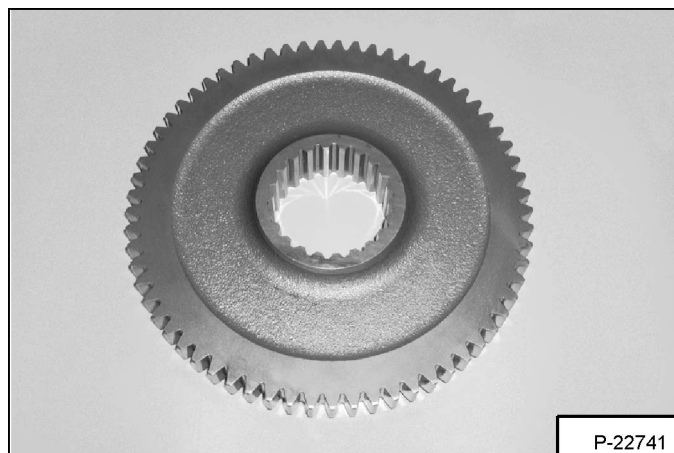

Inspect the gears for cracked or damaged teeth. Replace any damaged parts [Figure 20-70-20].

Figure 20-70-21



Inspect the splines on the shaft for wear or damaged. Replace if worn or damaged [Figure 20-70-21].

DRIVE BOX (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Assembly

IMPORTANT

When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.

I-2003-0888

Figure 20-70-24

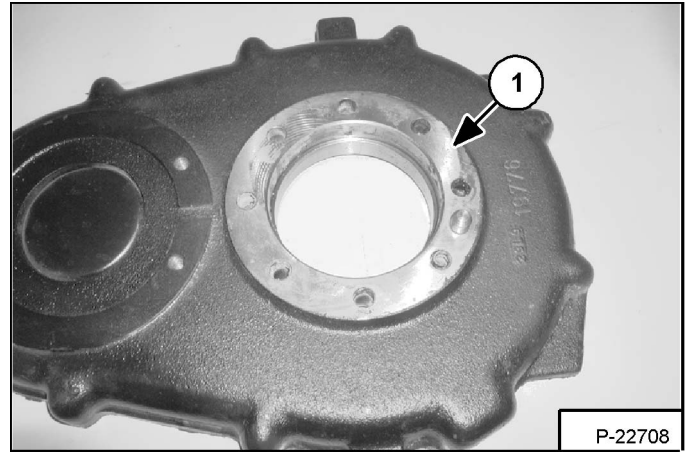


Figure 20-70-22

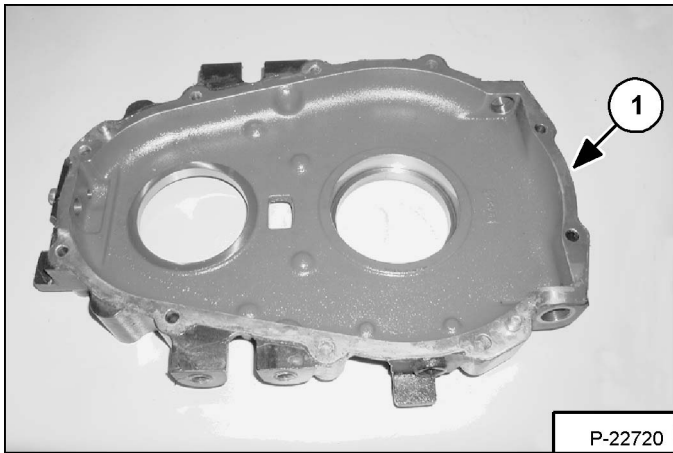


Figure 20-70-25


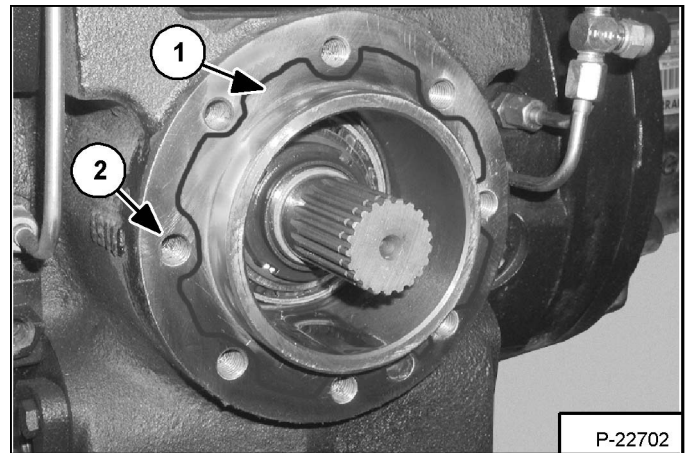


Figure 20-70-23

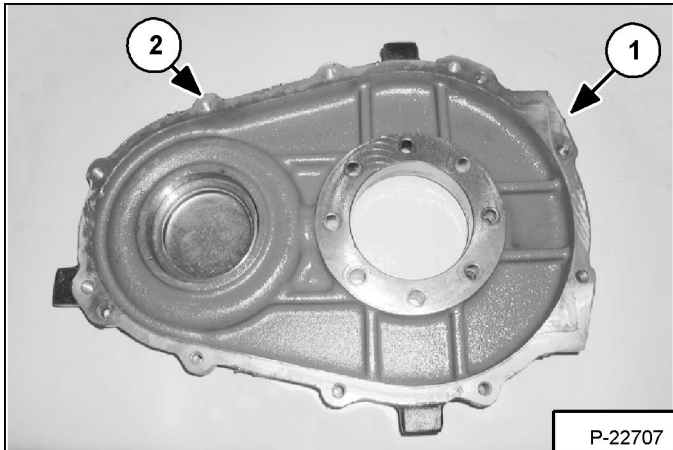

Clean all sealant residue from the mounting surfaces (Item 1) [Figure 20-70-24] & [Figure 20-70-25].

Clean all LOCTITE residue from the mounting flange bolt holes (Item 2) [Figure 20-70-25].

Clean all LOCTITE from the mounting bolts.


Prior to assembly

Clean all sealant residue from the mating surfaces (Item 1) [Figure 20-70-22] & [Figure 20-70-23] on both housings. Clean all LOCTITE residue from mounting plate bolt holes (Item 2) [Figure 20-70-23].

DRIVE BOX (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Assembly (Cont'd)

Figure 20-70-26

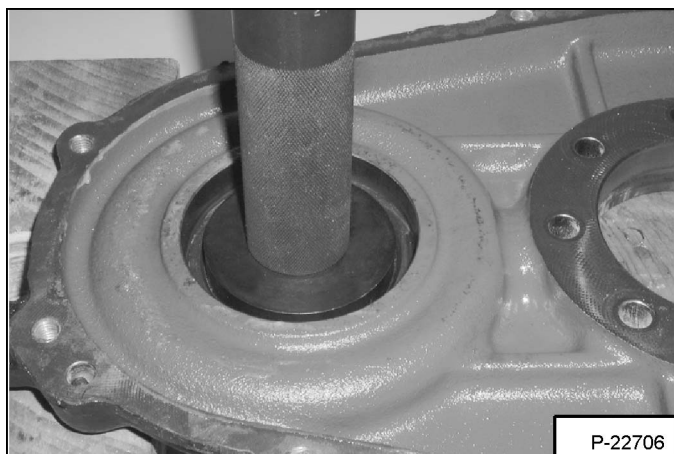


Install the plug into the rear housing [Figure 20-70-26].

Figure 20-70-27

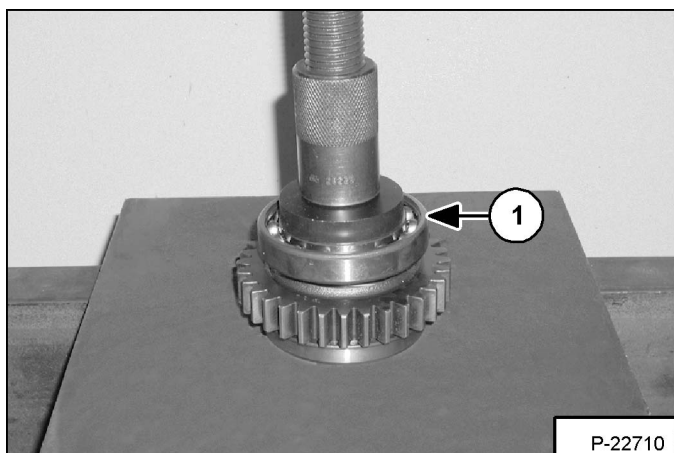

Install both bearings (Item 1) [Figure 20-70-27] onto the gear.

Figure 20-70-28

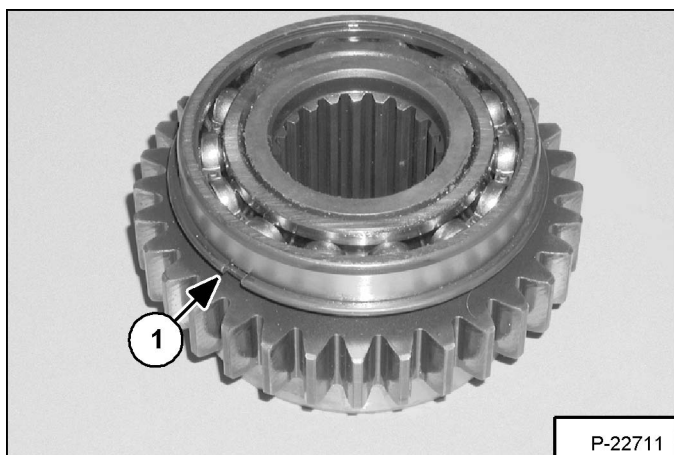

Install the snap ring (Item 1) [Figure 20-70-28] in the groove in the bearing.

Figure 20-70-29




Apply a small amount of LOCTITE 609 or equivalent into the bearing seat in the rear housing [Figure 20-70-29].

DRIVE BOX (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Assembly (Cont'd)

Figure 20-70-30

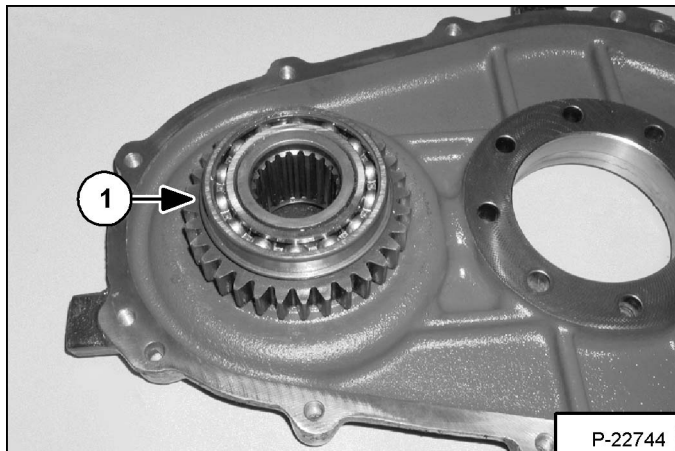


Install the gear/bearing assembly (Item 1) [Figure 20-70-30] into the rear housing.

Figure 20-70-31

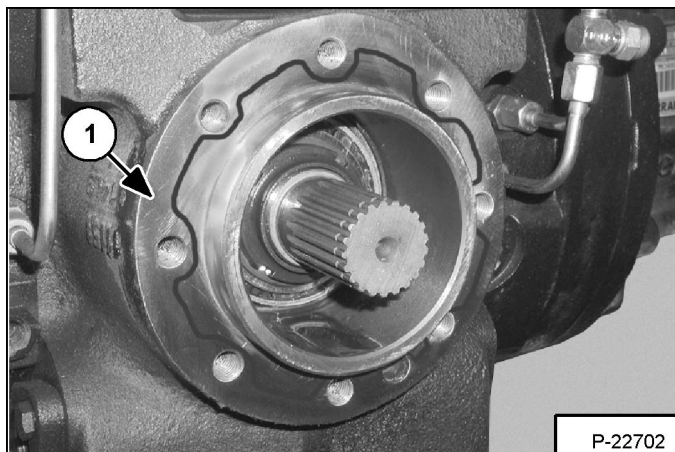

Apply a 3 mm bead of LOCTITE 510 gasket eliminator (or equivalent) to the axle mounting flange (Item 1) [Figure 20-70-31] in the pattern shown.

Figure 20-70-32

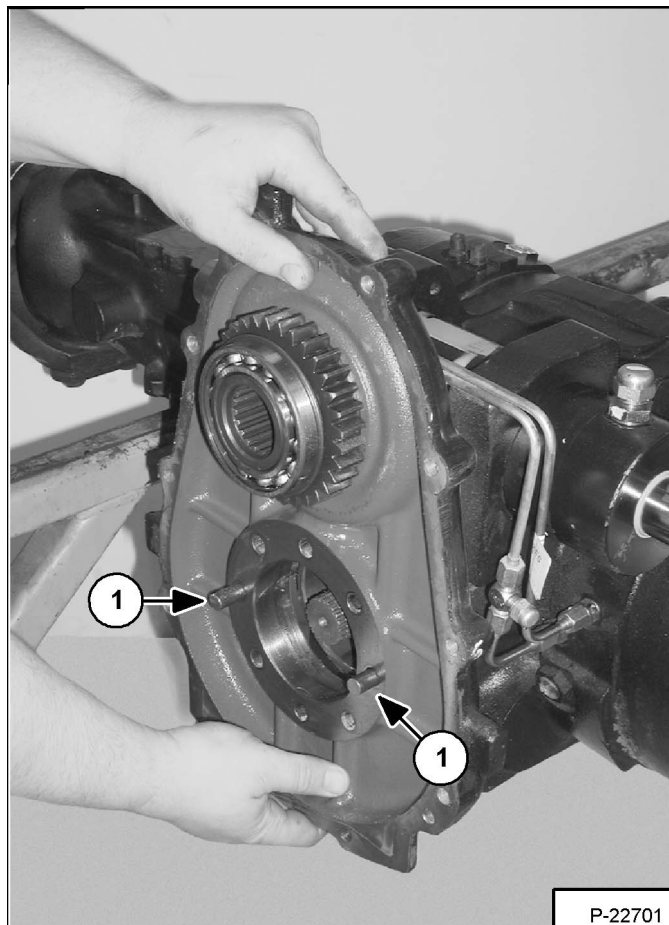


Install the two guide bolts (Item 1) [Figure 20-70-32] into the axle mounting flange.

Install the rear cover onto the axle mounting flange [Figure 20-70-32].

DRIVE BOX (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Assembly (Cont'd)


Figure 20-70-33

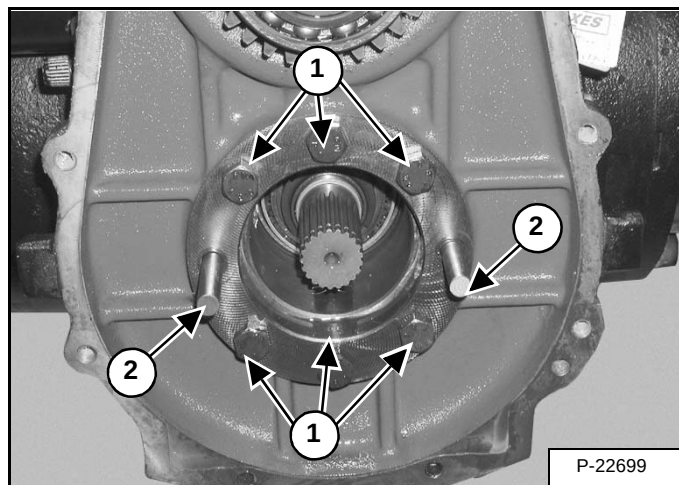

Apply LOCTITE 270 (or equivalent) to the six mounting bolts (Item 1) [Figure 20-70-33] and install. Tighten to 88 ft.-lbs. (120 Nm) torque.


Remove the two guide bolts (Item 2) [Figure 20-70-33].

Figure 20-70-34

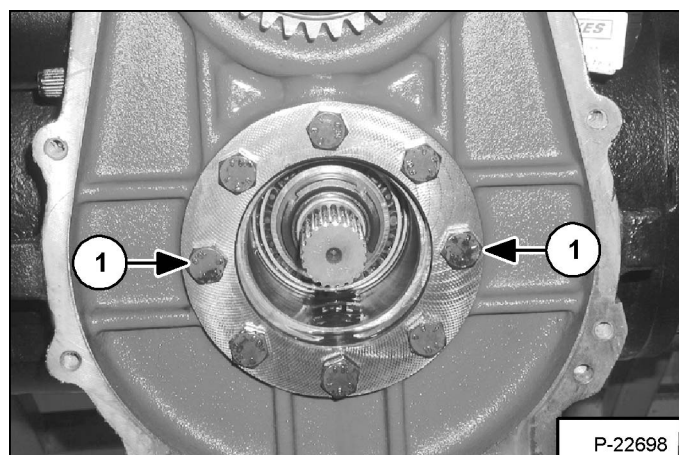


Apply LOCTITE 270 (or equivalent) to the two remaining mounting bolts (Item 1) [Figure 20-70-34]. Install and tighten the bolts to 88 ft.-lbs. (120 Nm) torque.

Figure 20-70-35

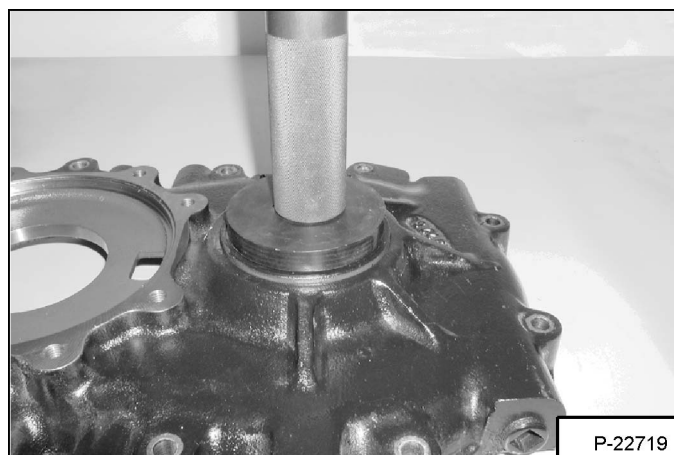

Install the seal (Item 1) [Figure 20-70-35] into the housing.

Figure 20-70-36

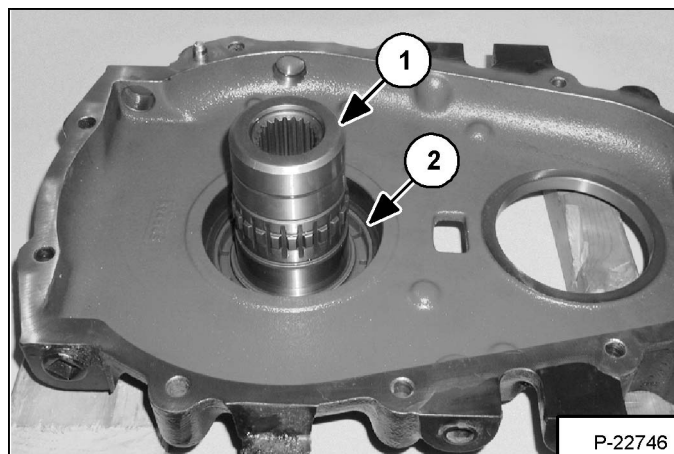


Install the shaft (Item 1) through the seal (Item 2) [Figure 20-70-36] and support the housing with blocks.

DRIVE BOX (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Assembly (Cont'd)

Figure 20-70-37

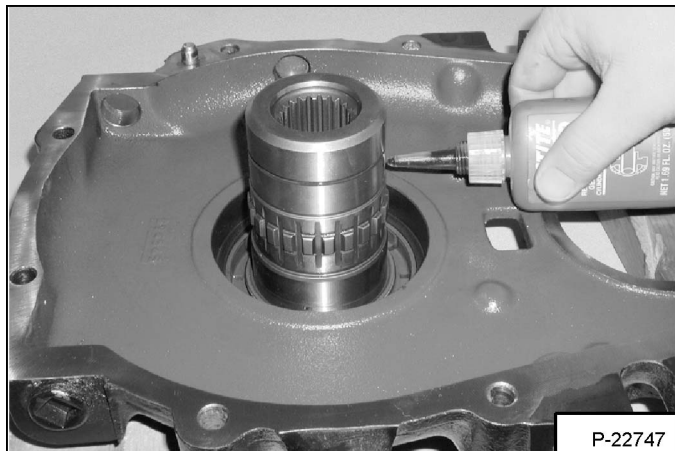


Apply a small amount of LOCTITE 609 (or equivalent) into the bearing seat [Figure 20-70-37].

Figure 20-70-38

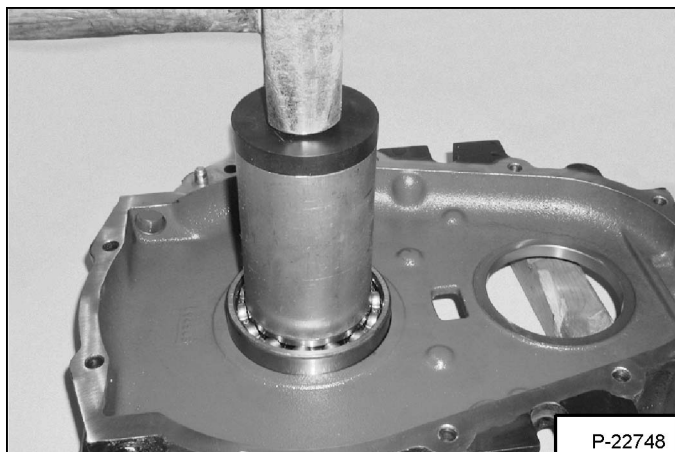


Install the bearing onto the shaft until it is fully seated in the housing [Figure 20-70-38].

Figure 20-70-39

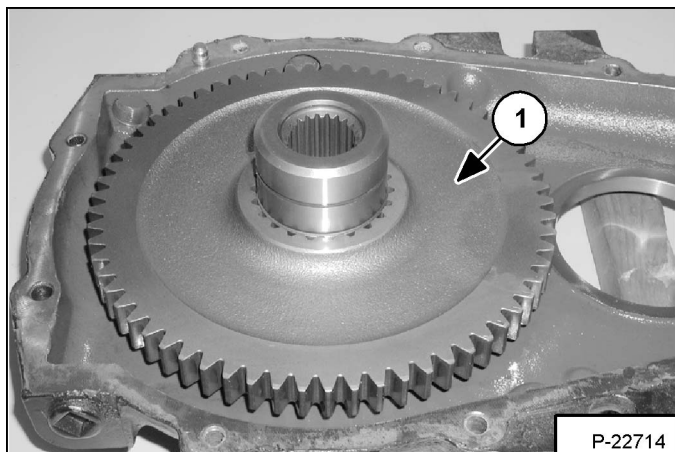

Install the gear (Item 1) [Figure 20-70-39] onto the shaft.

Figure 20-70-40

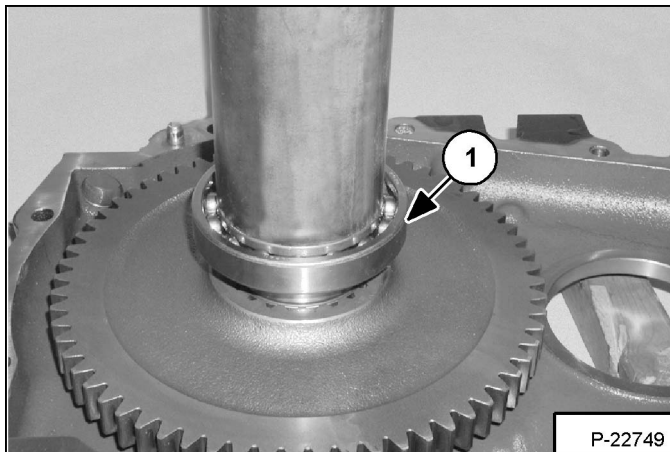


Install the bearing (Item 1) [Figure 20-70-40] onto the shaft.

DRIVE BOX (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Assembly (Cont'd)

Figure 20-70-41

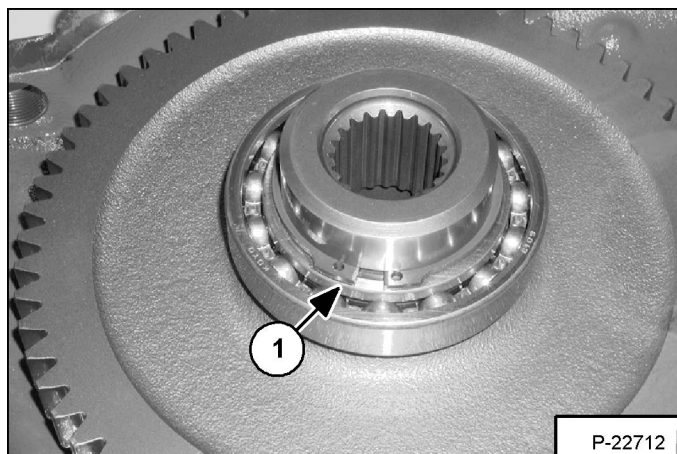


Install the snap ring (Item 1) [Figure 20-70-41] onto the shaft.

Figure 20-70-42

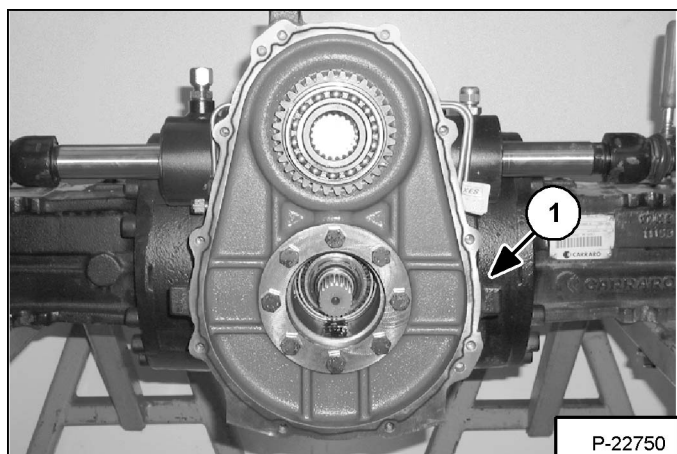

Apply a 3 mm bead of LOCTITE 510 Gasket Eliminator (or equivalent) to the rear housing surface (Item 1) [Figure 20-70-42] in the pattern shown.

Figure 20-70-43

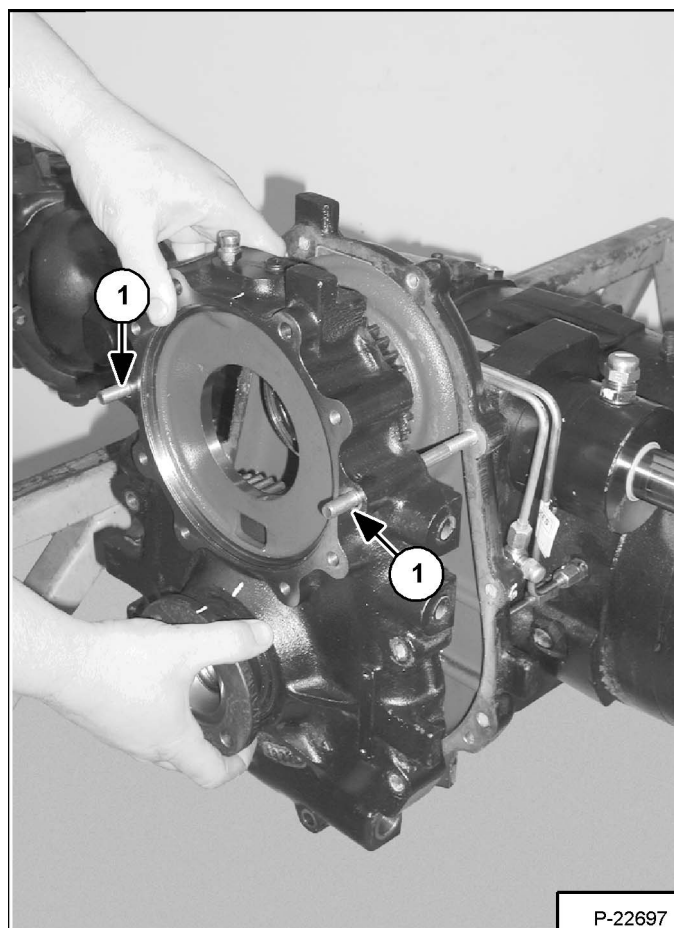

Install two guide bolts (Item 1) [Figure 20-70-43].


Install the cover [Figure 20-70-43].

NOTE: The splines and gears must be aligned to fully install the cover onto the dowels.

DRIVE BOX (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Assembly (Cont'd)

Figure 20-70-44

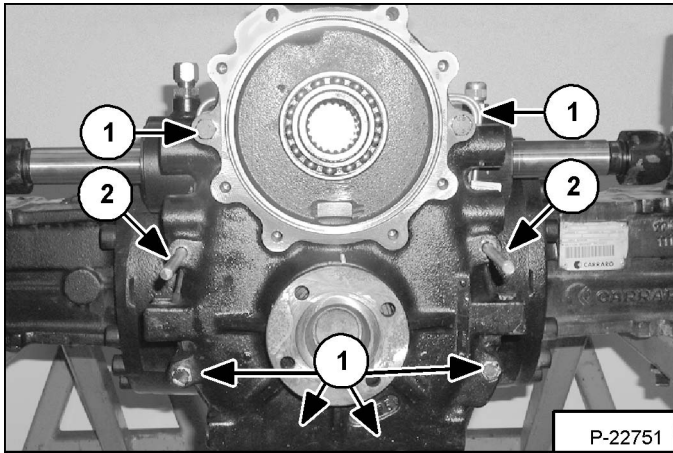


Install six cover bolts (Item 1) and remove the guide bolts (Item 2) [Figure 20-70-44].

Figure 20-70-45

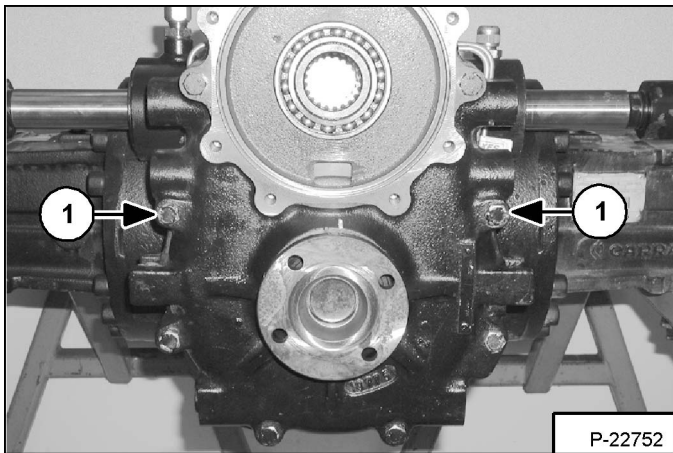


Install the two remaining cover bolts (Item 1) [Figure 20-70-45]. Tighten all bolts to 44 ft.-lbs. (60 Nm) torque.

Figure 20-70-46

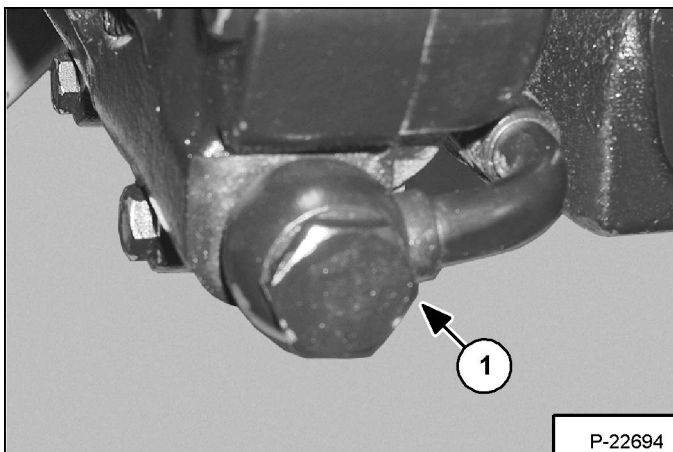

Reconnect the hose (Item 1) [Figure 20-70-46] and tighten.

Figure 20-70-47

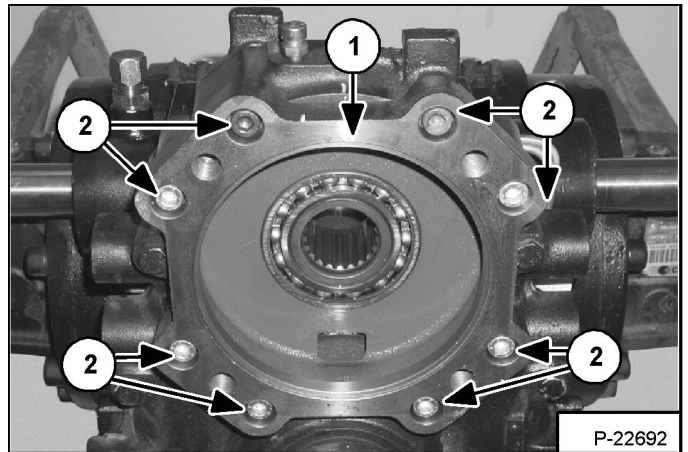


Install the mounting flange (Item 1) and tighten the eight mounting bolts (Item 2) [Figure 20-70-47] to 44 ft.-lbs. (60 Nm) torque

DRIVE BOX (For S/N 362812001 and Above, S/N 362912001 and Above)

Parts Identification

Figure 20-71-1

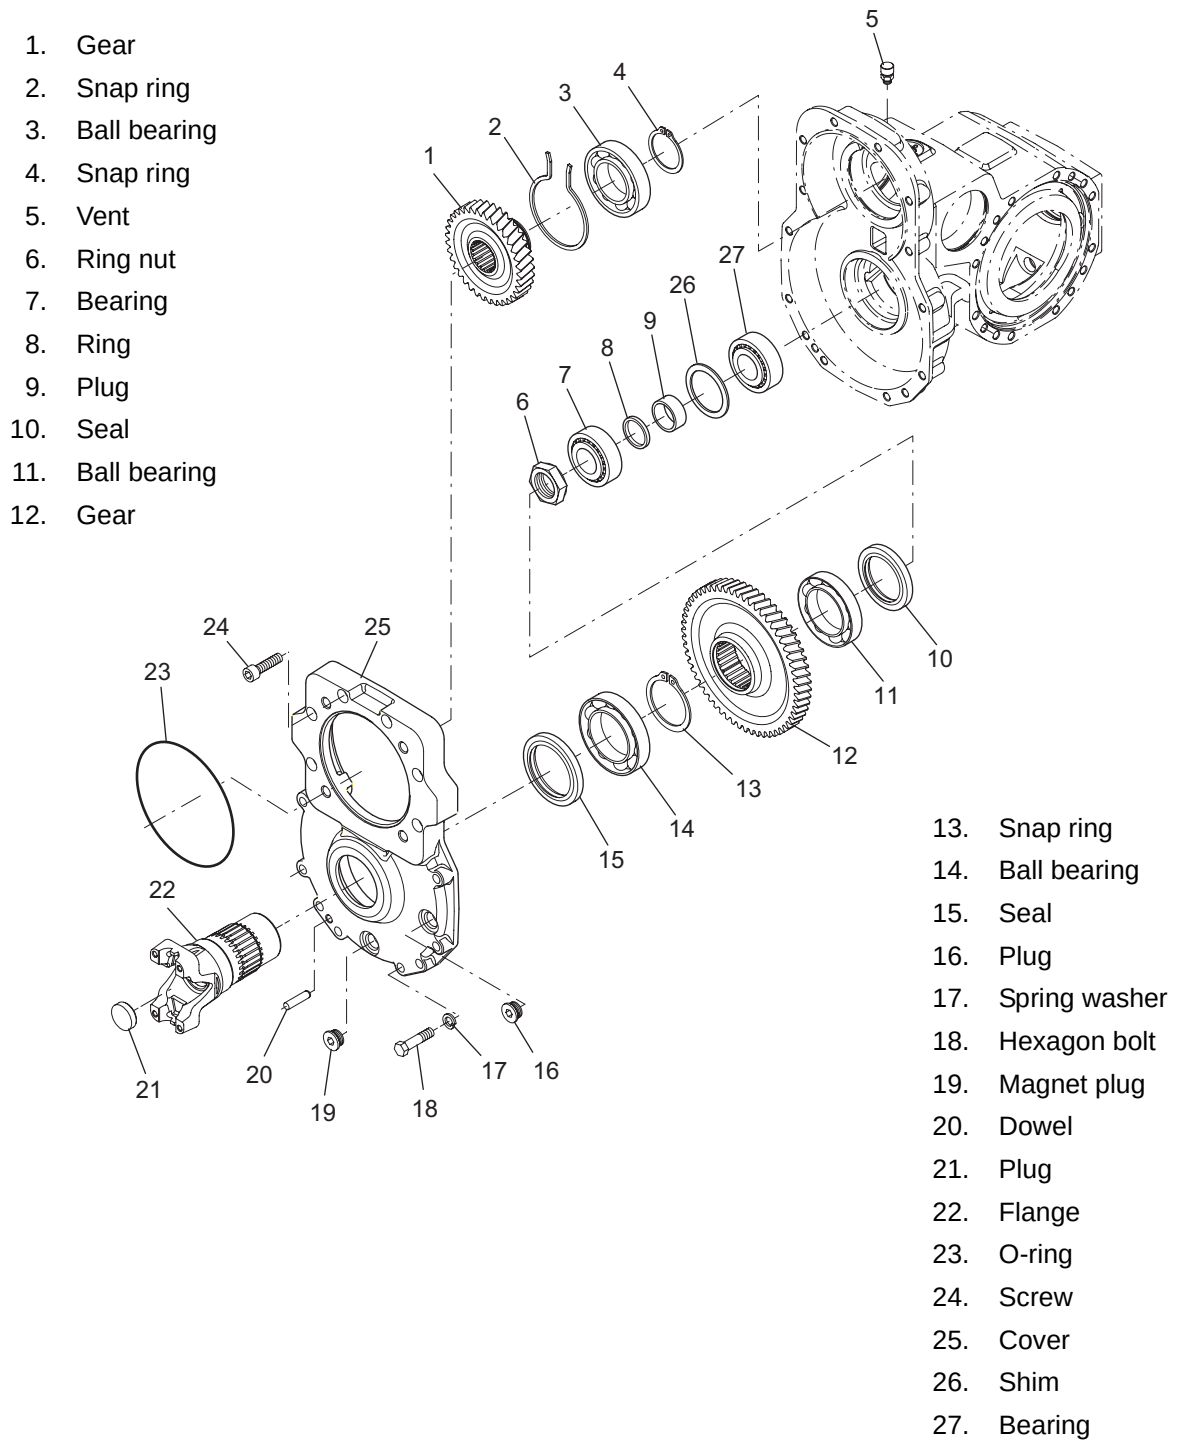

S2500


DRIVE BOX (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Disassembly

Remove the front axle. (See "Removal" on page 40-33-1)


Remove the drive motor. (See "Removal And Installation" on page 30-30-1.)

Figure 20-71-2

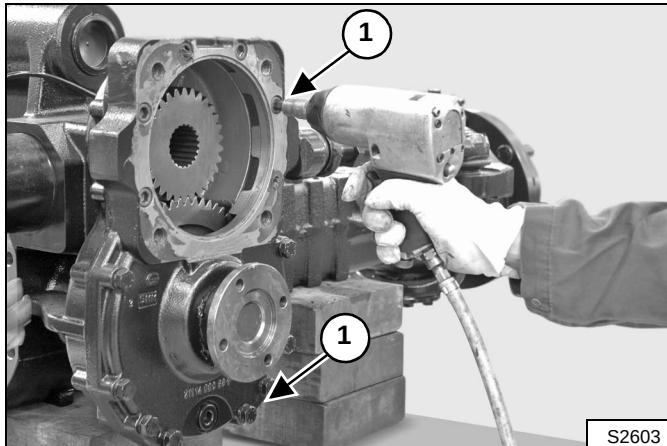


Loosen the securing bolts (Item 1) [Figure 20-71-2] only so that later when you pry the drive side flange cover loose, it does not fall.

Figure 20-71-3

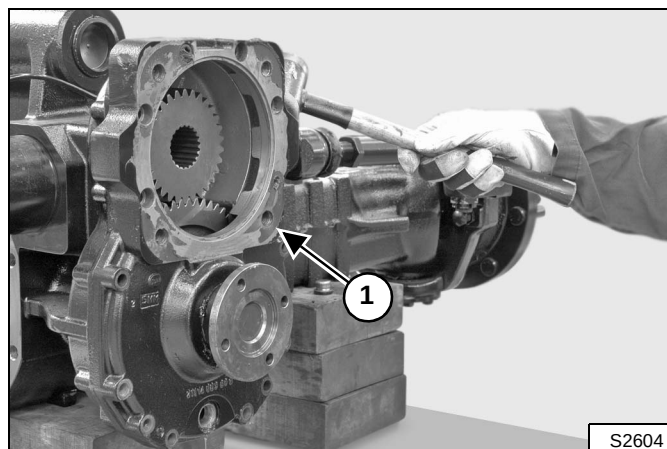

Loosen the drive side flange cover (Item 1) [Figure 20-71-3] using a plastic hammer.


Figure 20-71-4

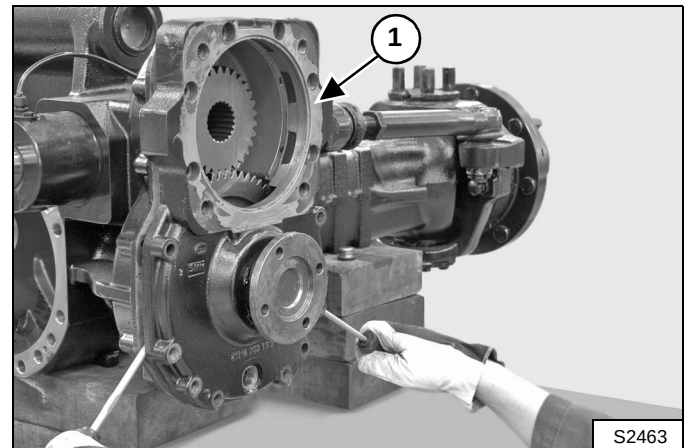

Take off the drive side flange cover (Item 1) [Figure 20-71-4] by alternatively forcing a screwdriver into the appropriate slots.

NOTE: Look out not to damage the surfaces.

Figure 20-71-5

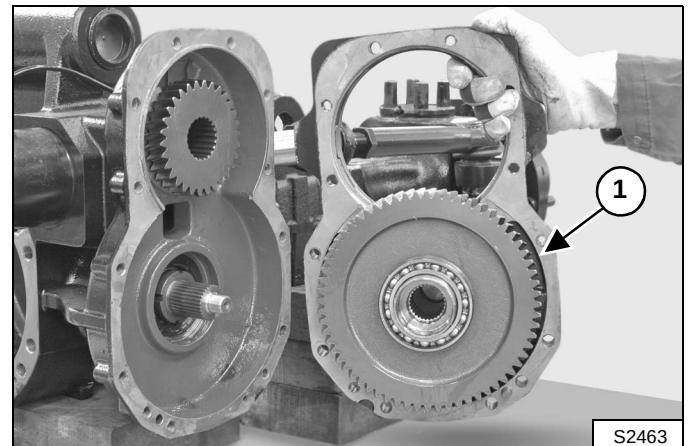


Remove the securing bolts and lift off the cover (Item 1) [Figure 20-71-5].

DRIVE BOX (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Disassembly (Cont'd)

Figure 20-71-6

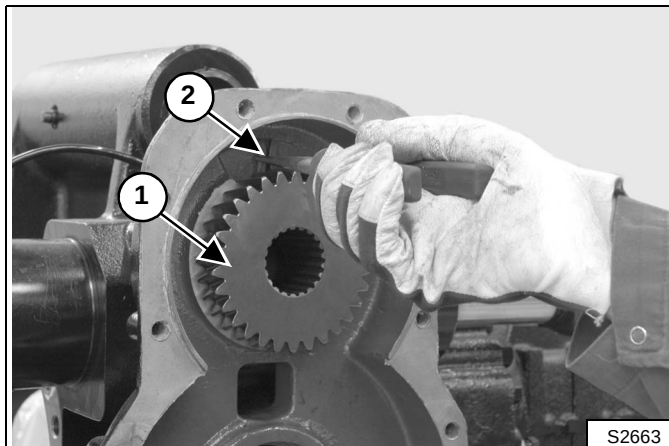


To remove the drive side shaft (Item 1), hook off the snap ring (Item 2) [Figure 20-71-6].

Figure 20-71-7

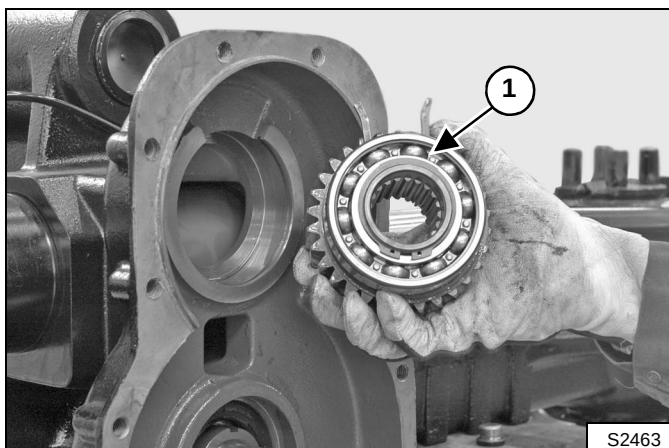


Using two levers, remove the drive side shaft (Item 1) [Figure 20-71-7].

Figure 20-71-8

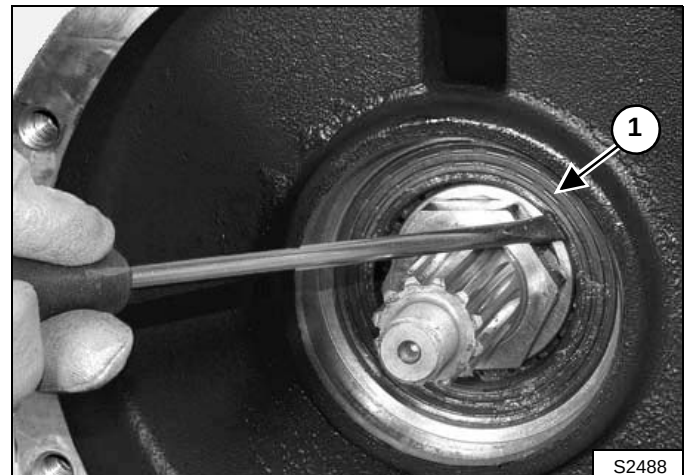

Using two levers, remove the flange sealing ring (Item 1) [Figure 20-71-8].

Figure 20-71-9

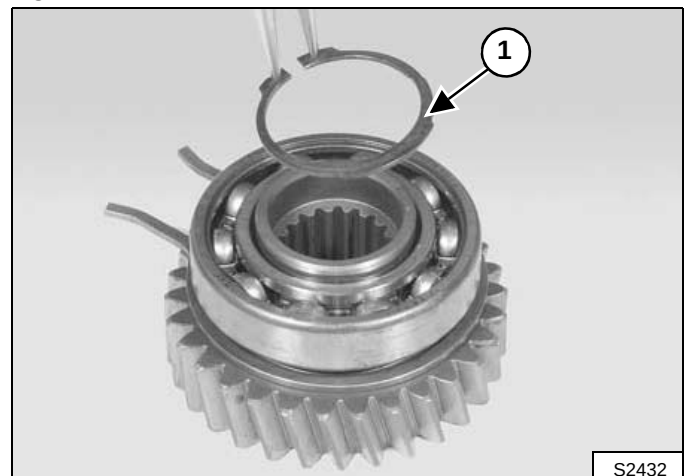


Remove the snap ring (Item 1) [Figure 20-71-9].

DRIVE BOX (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Disassembly (Cont'd)

Figure 20-71-10

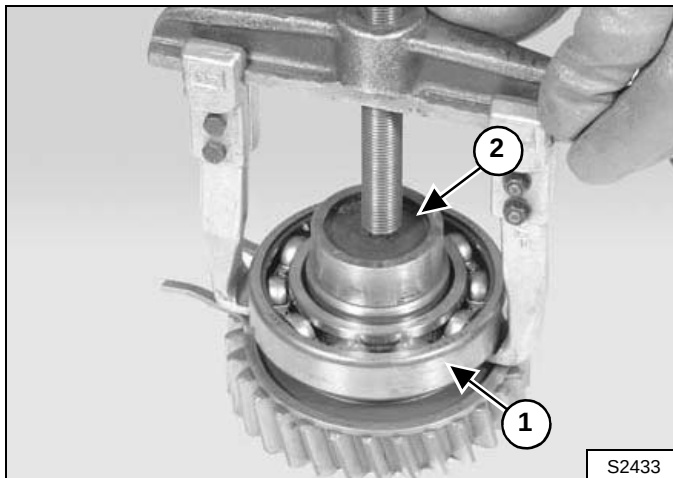


With a puller, remove the bearing (Item 1) from the input shaft (Item 2) [Figure 20-71-10].

Figure 20-71-11

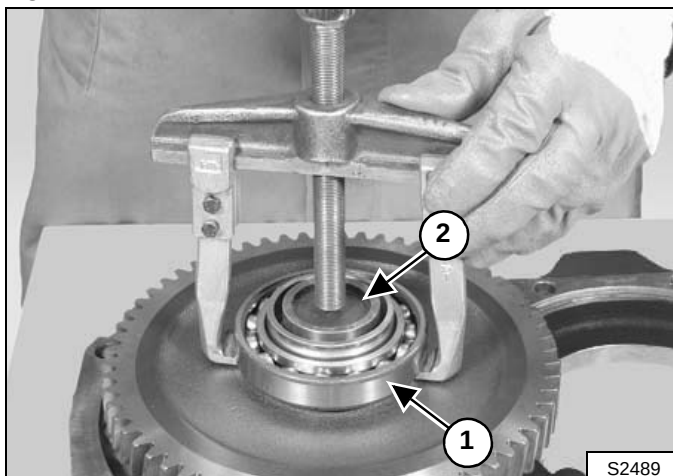

With a puller, remove the bearing (Item 1) from the flange shaft (Item 2) [Figure 20-71-11].

Figure 20-71-12

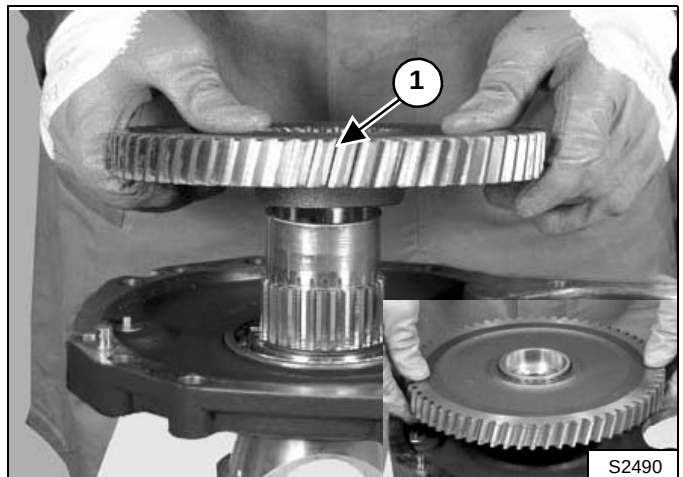


Remove the secondary gear wheel (Item 1) [Figure 20-71-12] using two levers.

DRIVE BOX (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Disassembly (Cont'd)

Figure 20-71-13

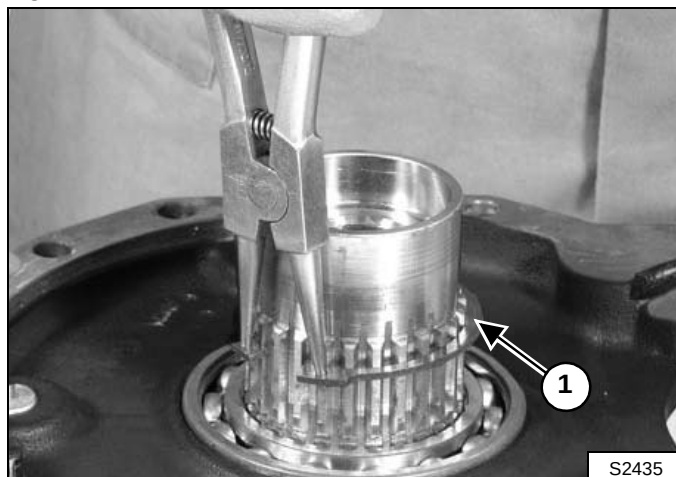


Remove the snap ring (Item 1) [Figure 20-71-13].

Figure 20-71-14

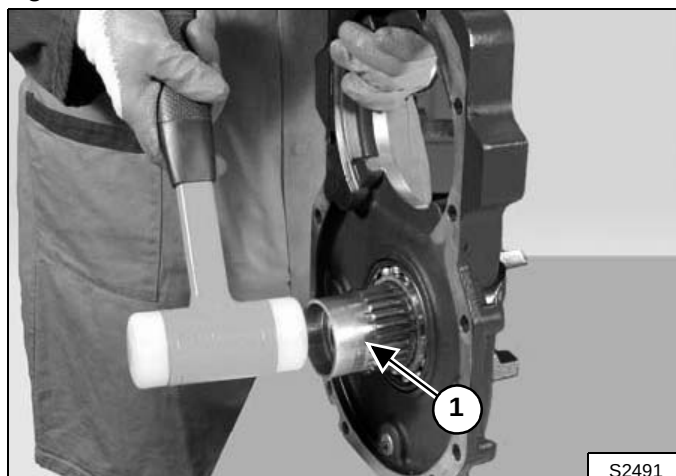


Remove the flange (Item 1) [Figure 20-71-14] by means of a plastic hammer.

Figure 20-71-15

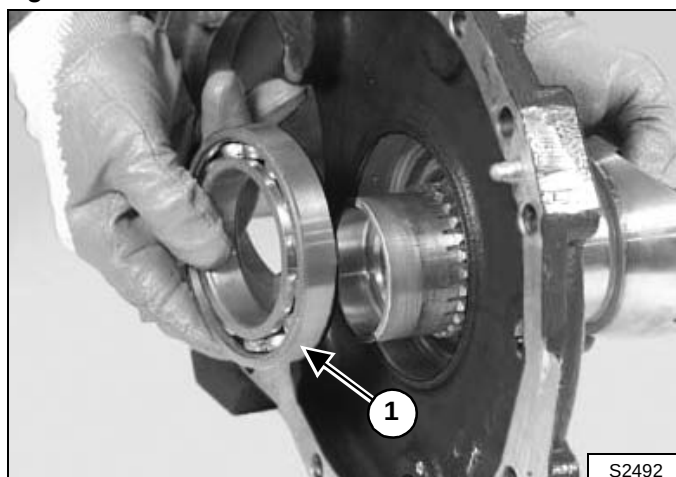

Remove the internal bearing (Item 1) [Figure 20-71-15].

Figure 20-71-16

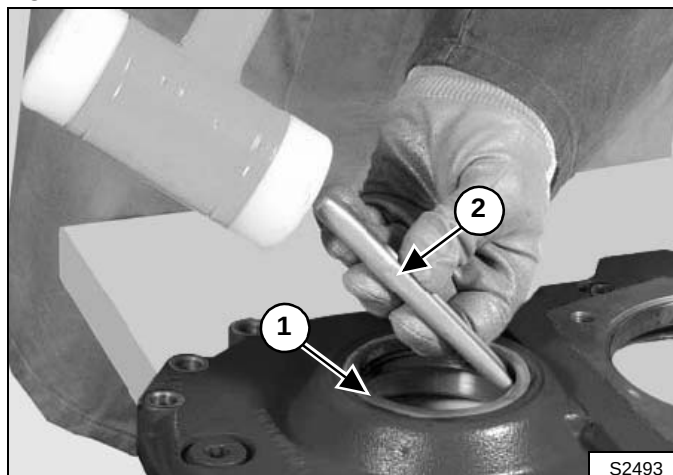


Pull out the cup of the sealing ring (Item 1) by using drift (Item 2) [Figure 20-71-16].

DRIVE BOX (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Assembly


Figure 20-71-17

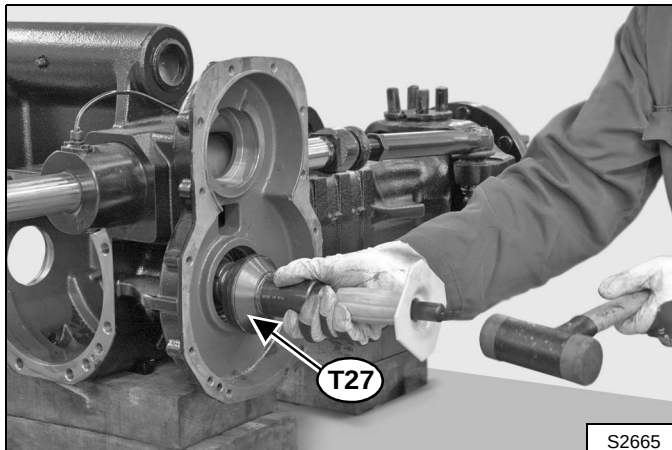

Insert the sealing ring using tool T27.

NOTE: Bring the sealing ring just to the end stop, apply grease to the sealing lips.


Figure 20-71-18

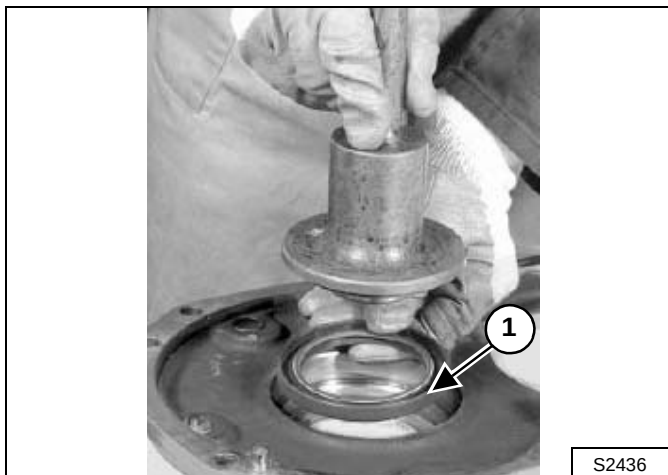

Insert the sealing ring (Item 1) [Figure 20-71-18] with a normal tool.

NOTE: Bring the sealing ring just to the end stop, apply grease to the sealing lips.


Figure 20-71-19

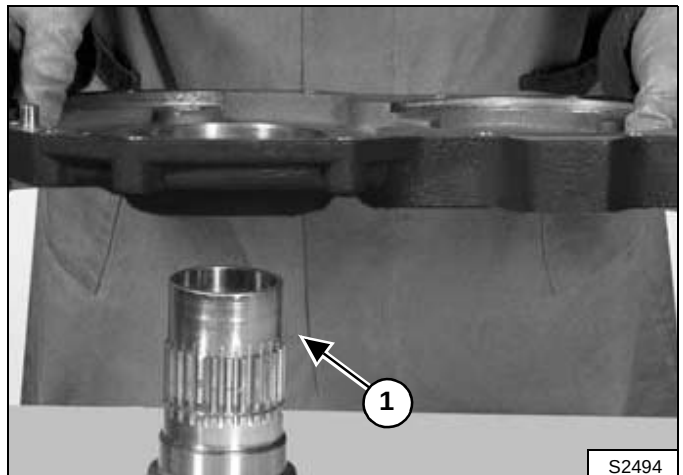

Fit the flange (Item 1) [Figure 20-71-19] and fasten it.

For keying the flange (Item 1) [Figure 20-71-19], use a plastic hammer if necessary.

Figure 20-71-20

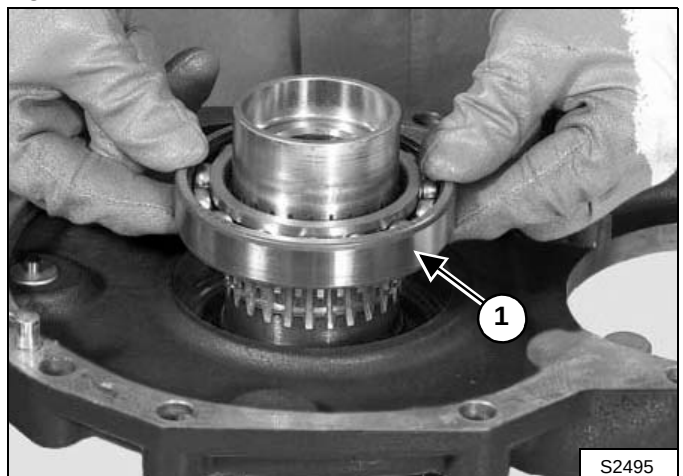


Insert the bearing (Item 1) [Figure 20-71-20].

DRIVE BOX (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Assembly (Cont'd)

Figure 20-71-21

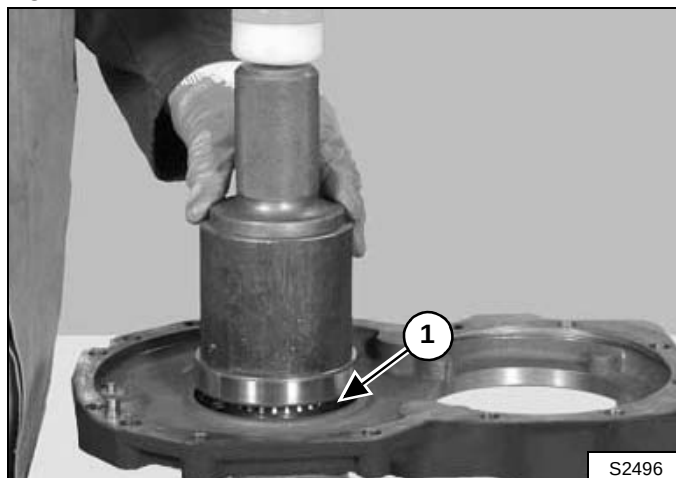


Using a normal tool insert the bearing (Item 1) [Figure 20-71-21] and snap ring.

Figure 20-71-22




Install the secondary gear wheel (Item 1) [Figure 20-71-22] with a plastic hammer.

Figure 20-71-23

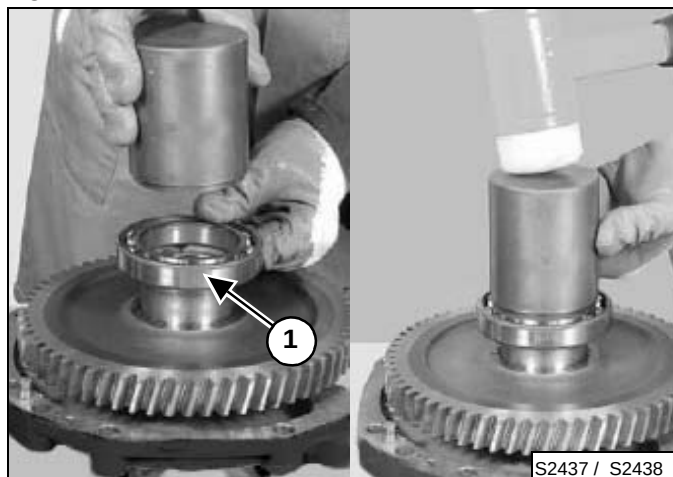

Using a normal tool insert the bearing (Item 1) [Figure 20-71-23].

Figure 20-71-24

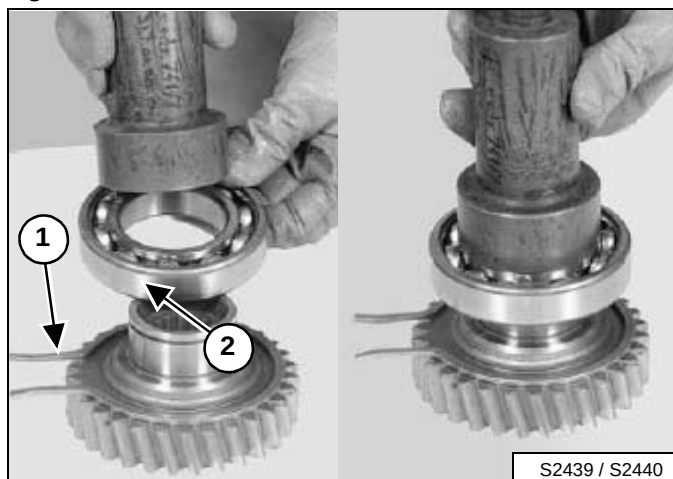


Insert the snap ring (Item 1) and using a normal tool insert the bearing (Item 2) [Figure 20-71-24].

DRIVE BOX (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Assembly (Cont'd)

Figure 20-71-25

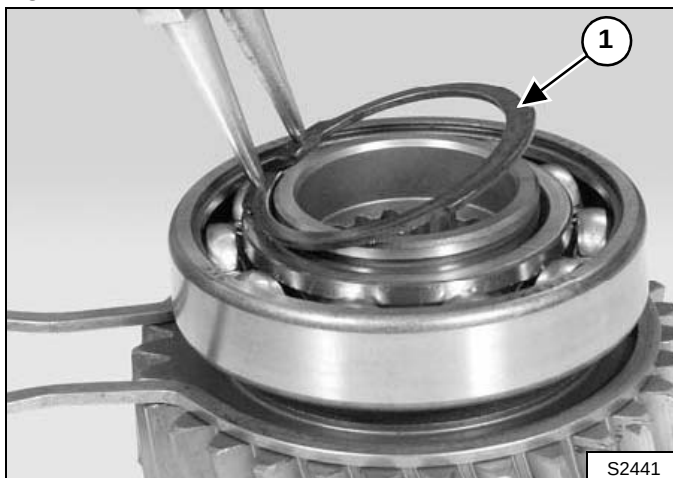


Fix the bearing with the snap ring (Item 1) [Figure 20-71-25].

Figure 20-71-26

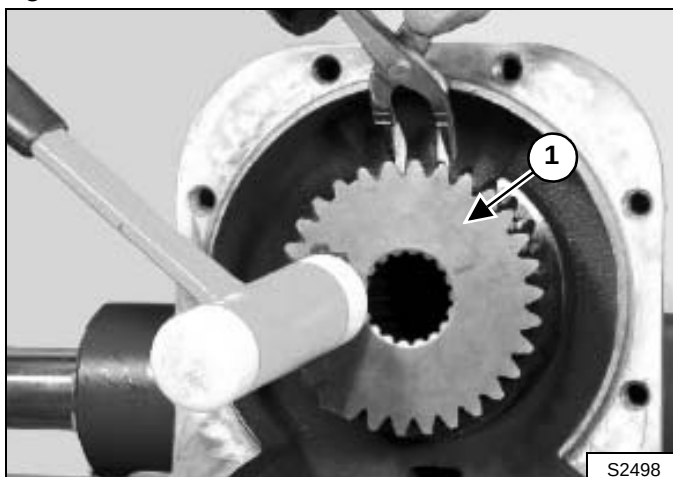


Hold the drive side shaft (Item 1) [Figure 20-71-26] using a plier and install the drive side shaft with a plastic hammer.

Figure 20-71-27

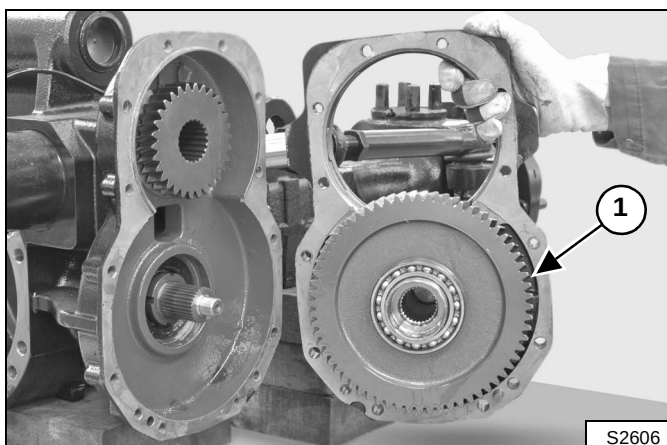

Install drive side flange cover (Item 1) [Figure 20-71-27], apply LOCTITE 510 to the short screws.

Figure 20-71-28

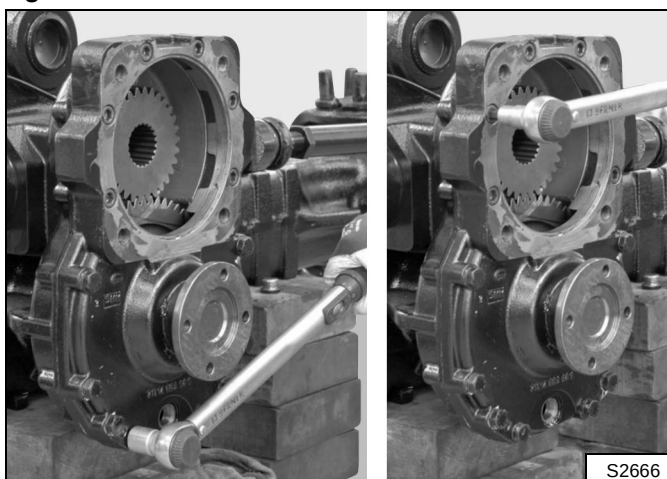

Tighten screws with a torque wrench setting of 60 - 66 ft.-lb. (80-90 Nm).

SPECIAL TOOLS

TOOL	IMAGE	DESCRIPTION	BOBCAT PN
T27		Pinion tail seal	6912202




Bobcat®

MAIN RELIEF VALVE


Testing And Adjustment

Figure 20-20-1

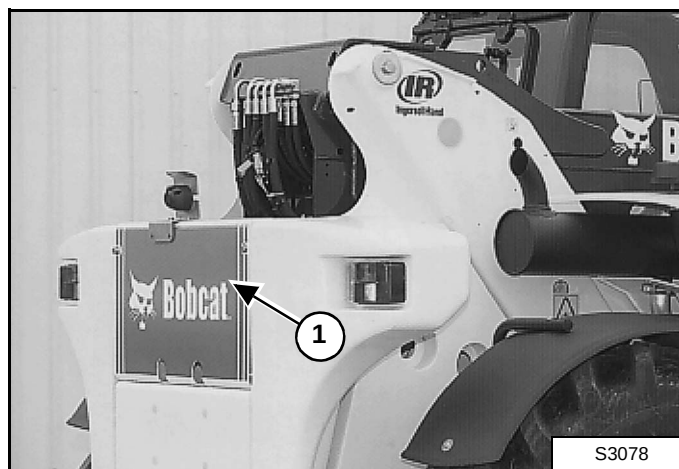

Remove the rear cover (Item 1) [Figure 20-20-1] from the machine.

Figure 20-80-2

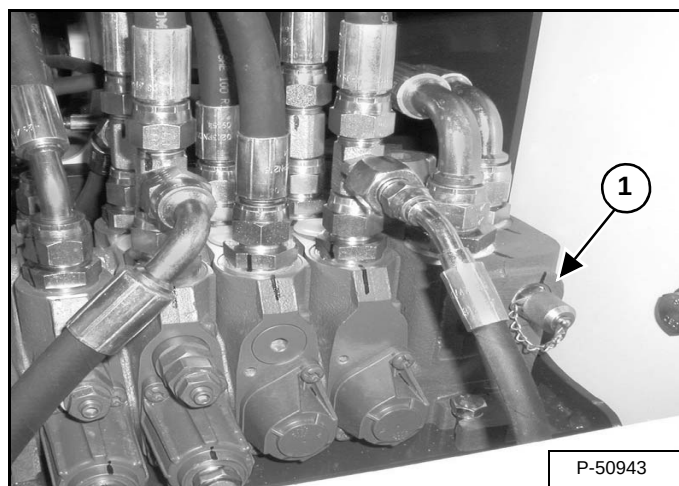

Fit a pressure gauge on the minimess connector situated on the right side of the control valve (inlet section), (Item 1) [Figure 20-80-2].

Figure 20-80-3



Warm the fluid of the hydraulic system to 140° F (60° C) by raising and lowering the boom several times.

Start the engine, lower the restraint bar (if equipped) and run the engine speed to 2450 RPM. Raise the boom until the lift cylinder is at the end of its stroke. Record the pressure at the gauge.

The main relief valve should open at 3844 PSI (265 Bar) maximum.


If adjustment is needed, see next page.

MAIN RELIEF VALVE (CONT'D)

Testing And Adjustment (Cont'd)


Remove the rear cover.

Figure 20-80-4

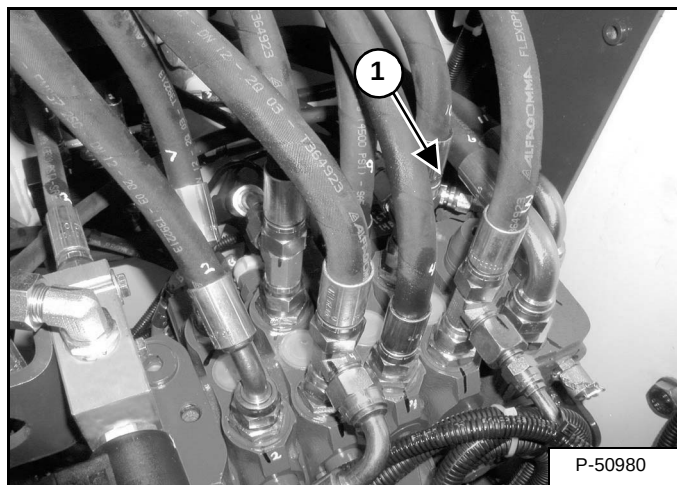

Locate the main relief valve on the front right side of the control valve [Figure 20-80-4].

Figure 20-80-5

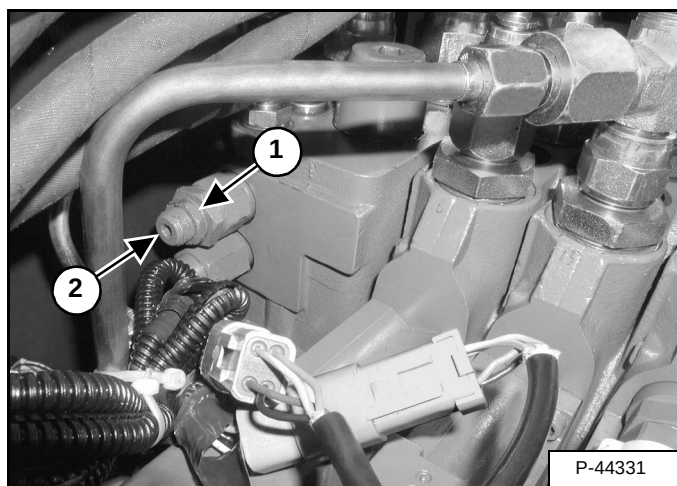

Loosen the lock nut (Item 1) and turn the adjustment screw (Item 2) [Figure 20-80-5] clockwise to increase the pressure or counterclockwise to decrease the pressure.

NOTE: A 1/4 of a turn = 632 psi (25 Bar).

Retest the main relief valve after adjustment.

MAIN RELIEF VALVE (CONT'D)

Testing And Adjustment (Cont'd)


IMPORTANT

When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.

I-2003-0888

Remove the rear cover.

Figure 20-80-6

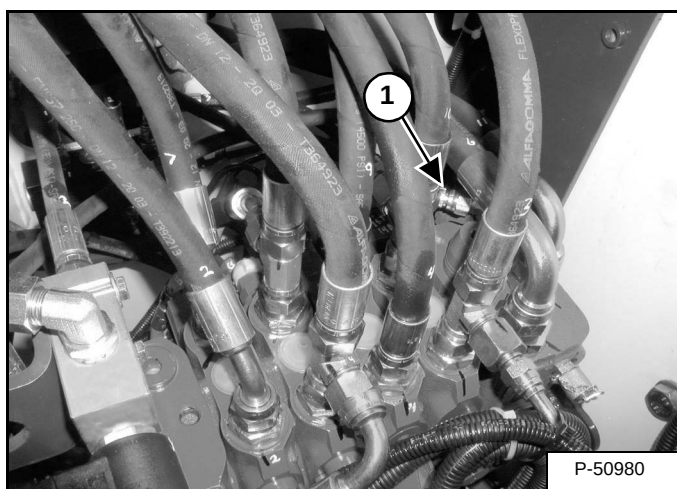

Locate the main relief valve on the front right side of the control valve.

Clean the area around the control valve.

Remove the main relief valve (Item 1) [Figure 20-80-6].

Installation: Tighten the main relief valve to 33 ft.-lbs. (45 Nm) torque.




Bobcat®

QUICK TACH CYLINDER


Removal And Installation

Figure 20-90-1

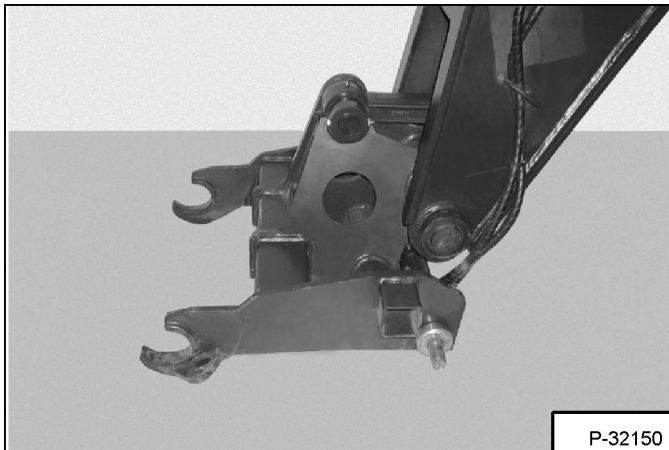

Rotate the quick tach forward and place on the floor [Figure 20-90-1].


Figure 20-90-2

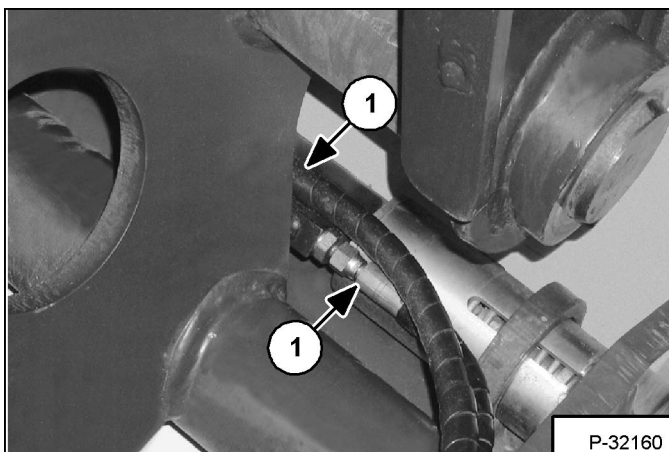

Remove the two hoses (Item 1) [Figure 20-90-2] from the cylinder.


NOTE: Mark the hoses for correct installation.

Figure 20-90-3

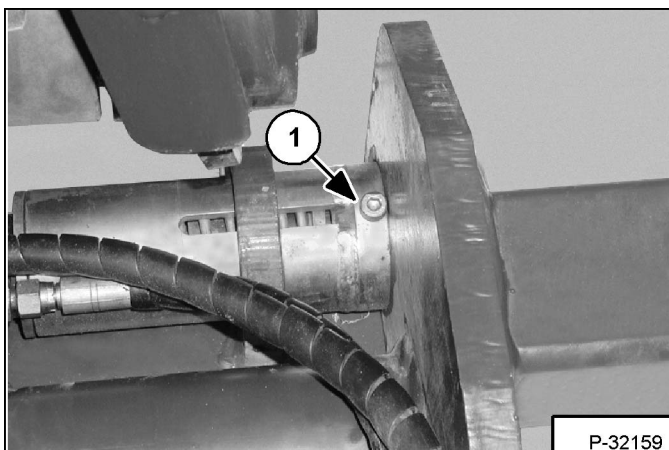

Remove the bolt (Item 1) [Figure 20-90-3] from each side of the cylinder.

Figure 20-90-4

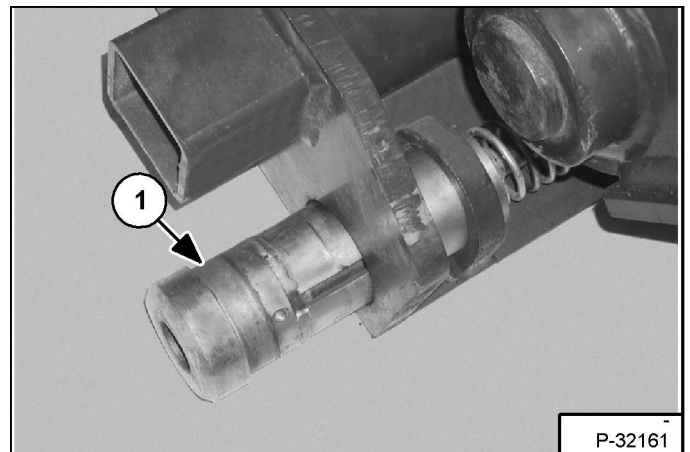


Remove the end bushing (Item 1) [Figure 20-90-4].

QUICK TACH CYLINDER (CONT'D)


Removal And Installation (Cont'd)

Figure 20-90-5

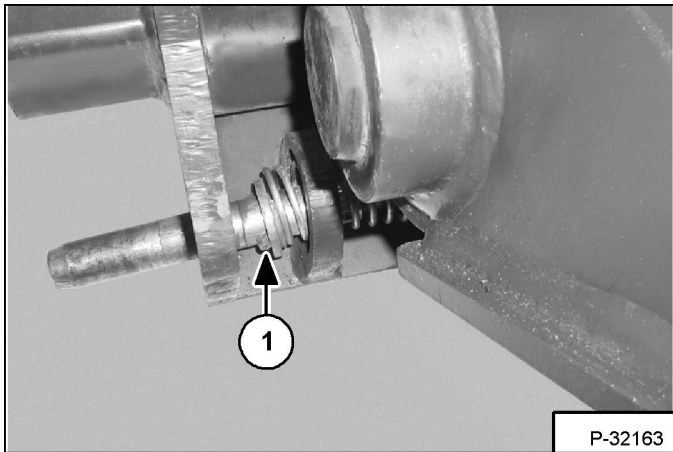


Remove the roll pin (Item 1) [Figure 20-90-5].

Figure 20-90-6

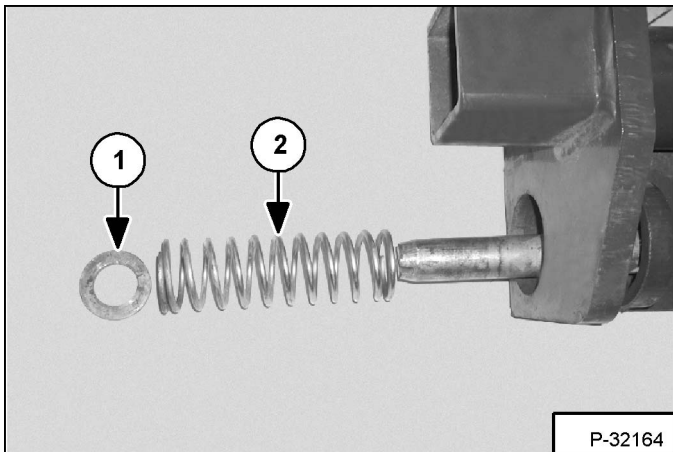


Remove the washer (Item 1) and spring (Item 2) [Figure 20-90-6] from the cylinder rod extension.

Figure 20-90-7

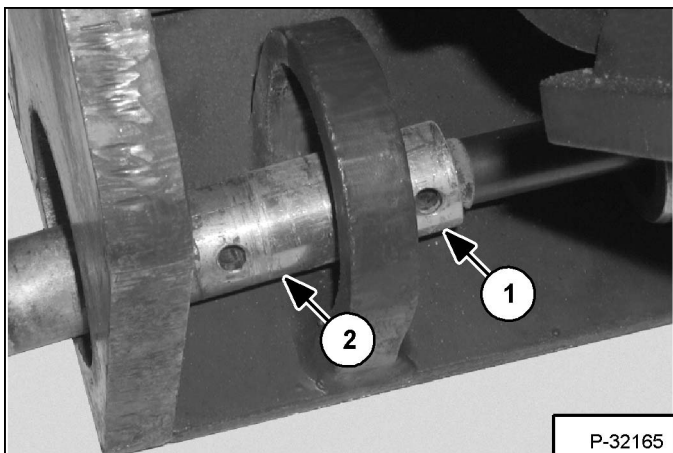

Remove the roll pin (Item 1) and remove the extension rod (Item 2) [Figure 20-90-7] from the cylinder rod.

Figure 20-90-8

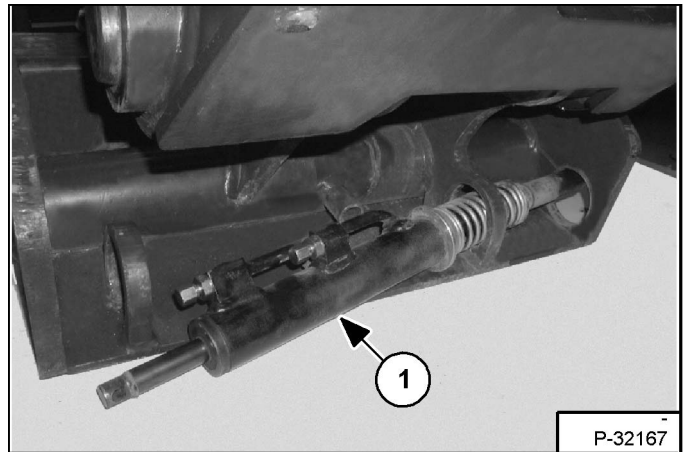


Remove the cylinder (Item 1) [Figure 20-90-8].

QUICK TACH CYLINDER (CONT'D)

Parts Identification

1. Housing
2. Extension
3. Wiper
4. Seal
5. O-ring
6. Head Gland
7. Rod
8. Piston
9. Wear Ring

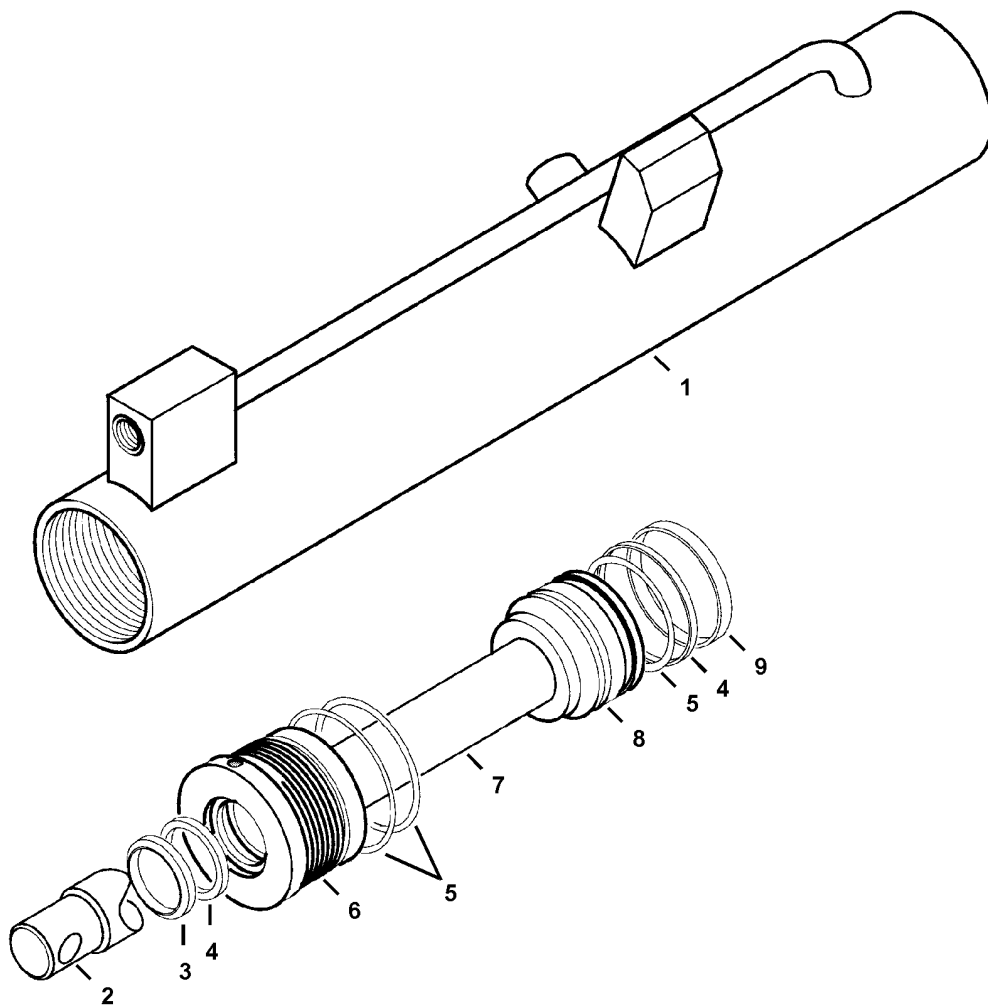

B-16159

QUICK TACH CYLINDER (CONT'D)

Disassembly

Use the following tools to disassemble the cylinder:


MEL1076-Cylinder Wrench

Figure 20-90-9




Place the cylinder in a vise [Figure 20-90-9].

Figure 20-90-10

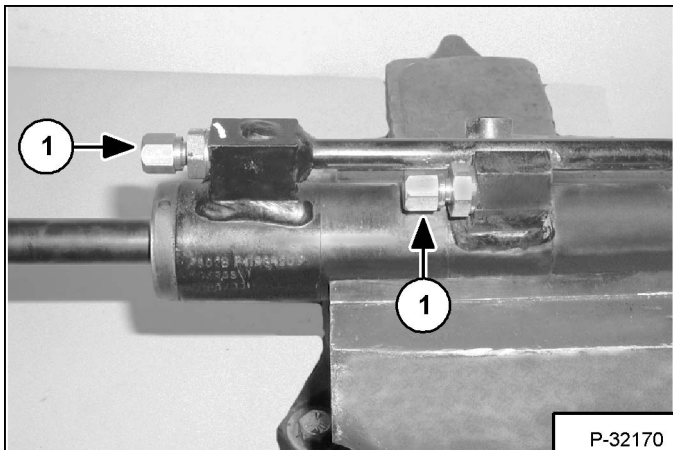


Remove the two fittings (Item 1) [Figure 20-90-10].

Figure 20-90-11

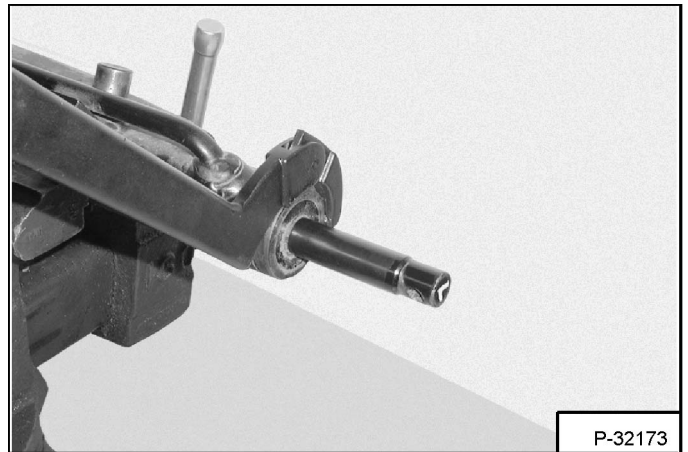

Use the cylinder wrench to loosen the head gland [Figure 20-90-11].

Figure 20-90-12

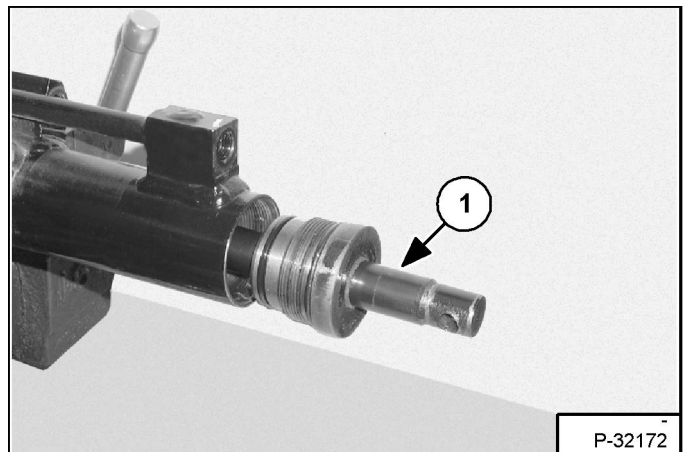


Remove the rod assembly (Item 1) [Figure 20-90-12] from the housing.

QUICK TACH CYLINDER (CONT'D)


Disassembly (Cont'd)

Figure 20-90-13

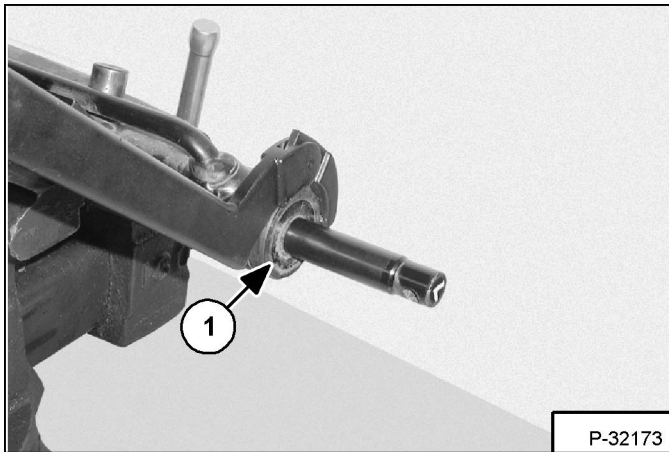


Use the cylinder wrench to loosen the second head gland (Item 1) [Figure 20-90-13] on the opposite side.

Figure 20-90-14

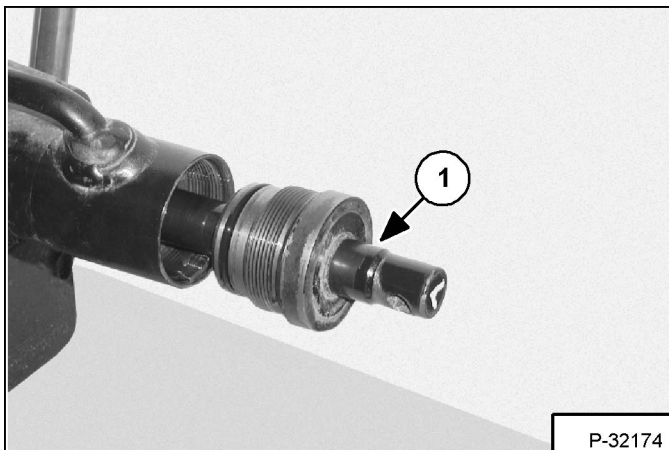


Remove the rod assembly (Item 1) [Figure 20-90-14] from the housing. (Both Sides)

Figure 20-90-15

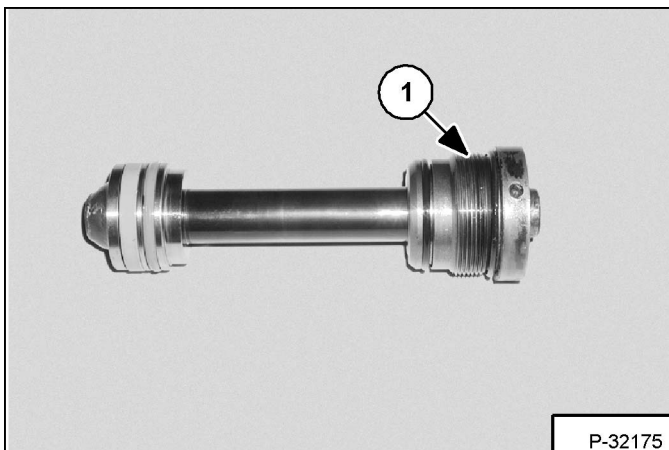

Remove the head (Item 1) [Figure 20-90-15] from each rod.

Figure 20-90-16

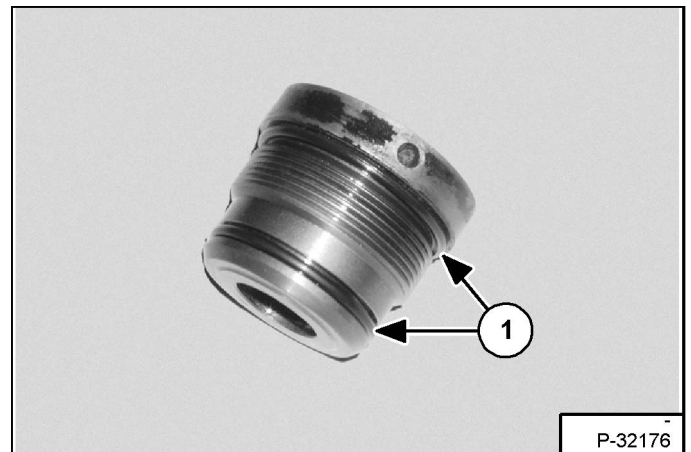


Remove the O-rings (Item 1) [Figure 20-90-16] from each head gland.

QUICK TACH CYLINDER (CONT'D)

Disassembly (Cont'd)


Remove the expander O-ring (Item 1) [Figure 20-90-19] from each piston.

Figure 20-90-17

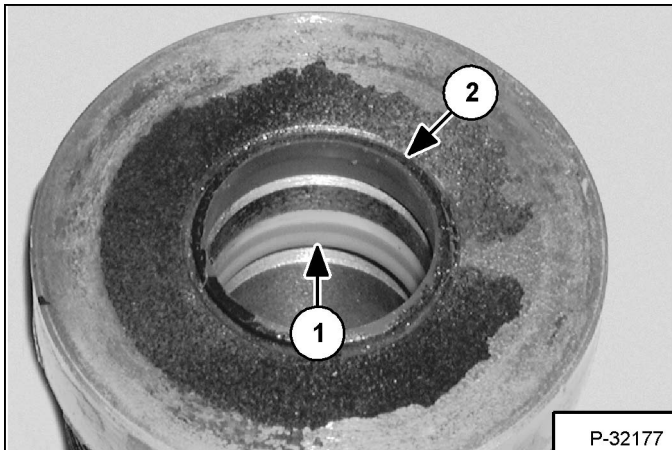


Remove the seal (Item 1) and wiper (Item 2) [Figure 20-90-17] from each head gland.

Figure 20-90-18

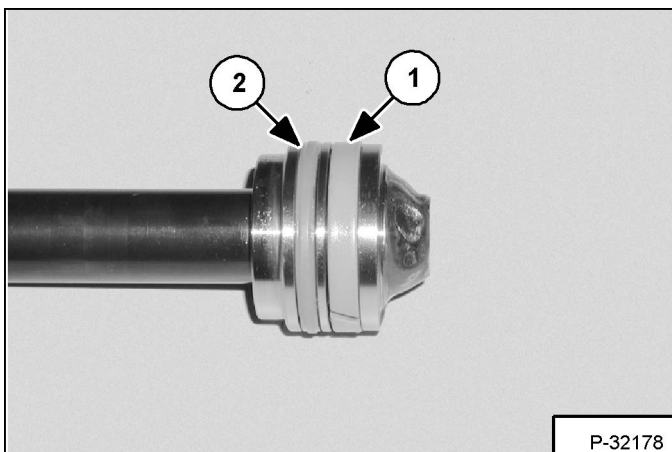

Remove the wear ring (Item 1) and seal (Item 2) [Figure 20-90-18] from each piston.

Figure 20-90-19

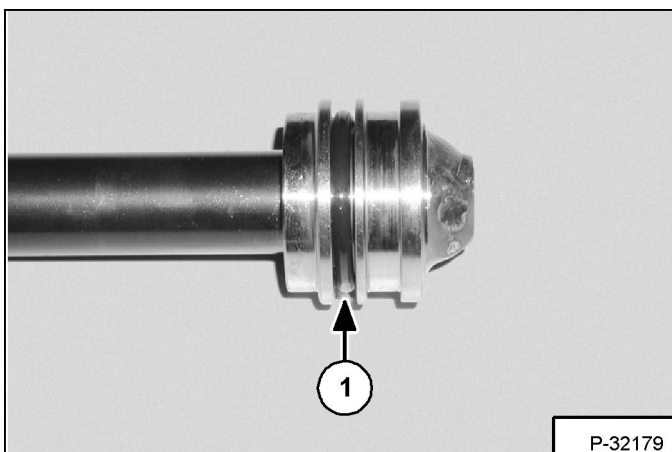

QUICK TACH CYLINDER (CONT'D)

Assembly

Use the following tools to assemble the cylinder:

MEL1076-Cylinder Wrench


Wash the cylinder parts in solvent and dry with compressed air.

Inspect the cylinder parts for nicks, scratches or other damage. Replace any damaged parts.

Lubricate all O-rings and seals with hydraulic oil during installation.


Always use new O-rings and seals.

Figure 20-90-20

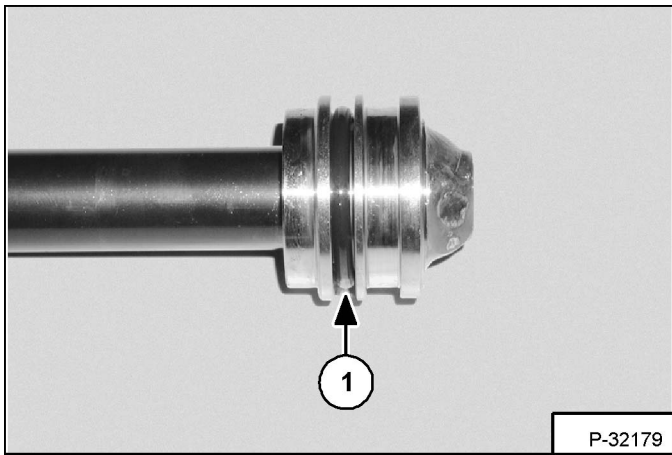


Install a new expander O-ring (Item 1) [Figure 20-90-20] on each piston.

Figure 20-90-21

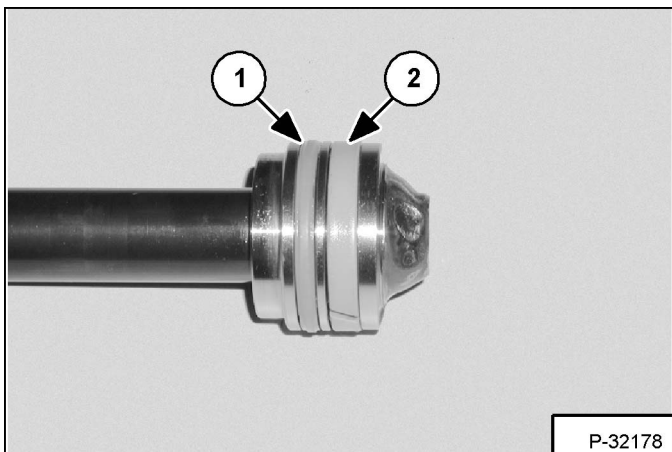

Install a new seal (Item 1) and wear ring (Item 2) [Figure 20-90-21] on each piston.


Figure 20-90-22

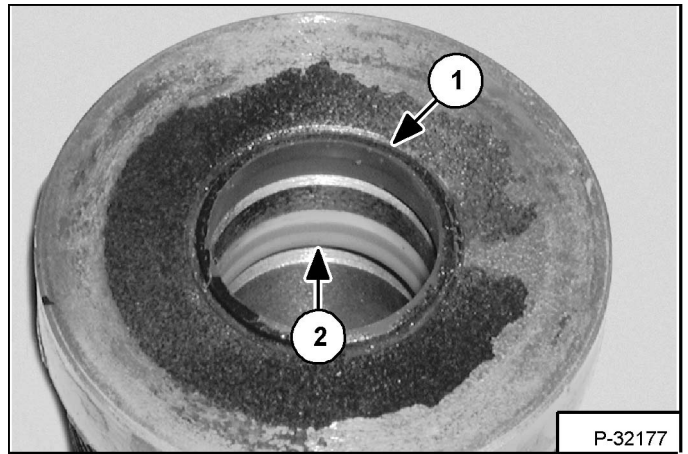

Install the wiper (Item 1) and seal (Item 2) [Figure 20-90-22] in each head gland.

NOTE: The groove in the seal must point away from the wiper seal (Item 1) [Figure 20-90-22].

Figure 20-90-23

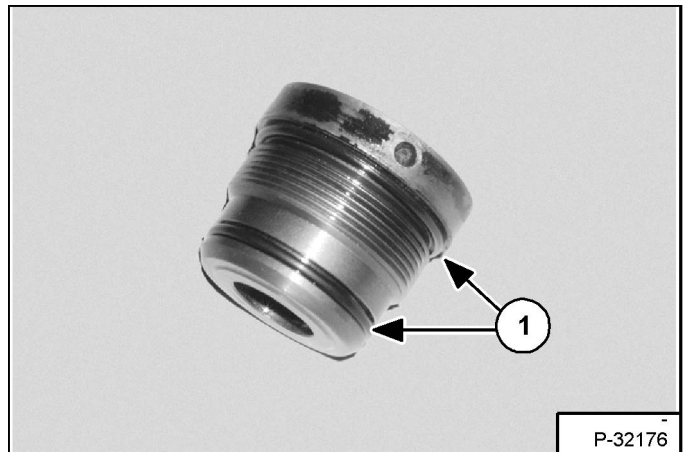


Install the two O-rings (Item 1) [Figure 20-90-23] on each head gland.

QUICK TACH CYLINDER (CONT'D)

Assembly (Cont'd)


Use the cylinder wrench to tighten both head glands [Figure 20-90-26].

Figure 20-90-24

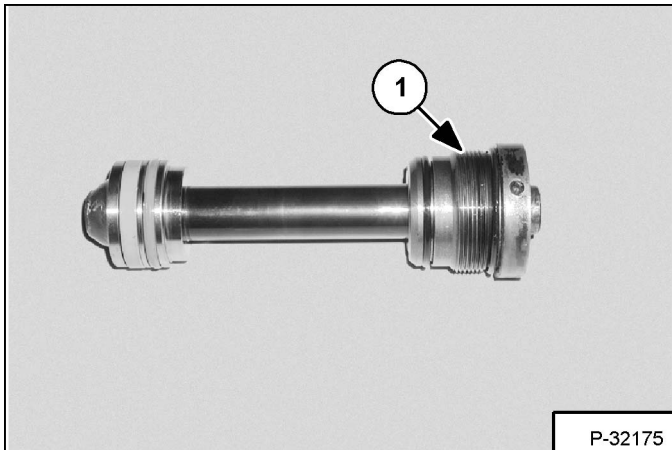


Install each head gland (Item 1) [Figure 20-90-24] onto the rod.

Figure 20-90-25

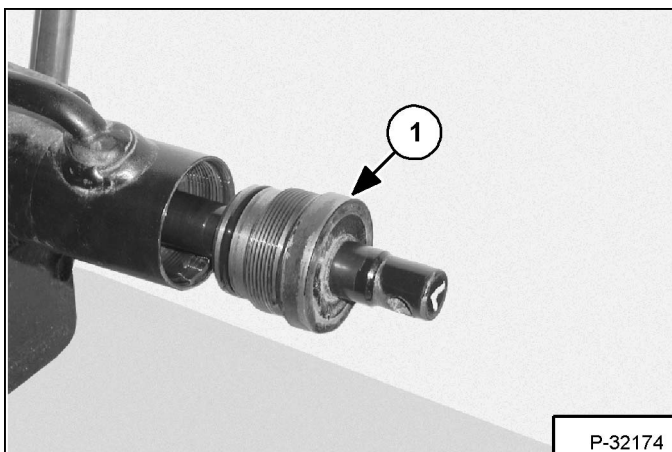

Install each rod assembly (Item 1) [Figure 20-90-25] into the housing.


Figure 20-90-26

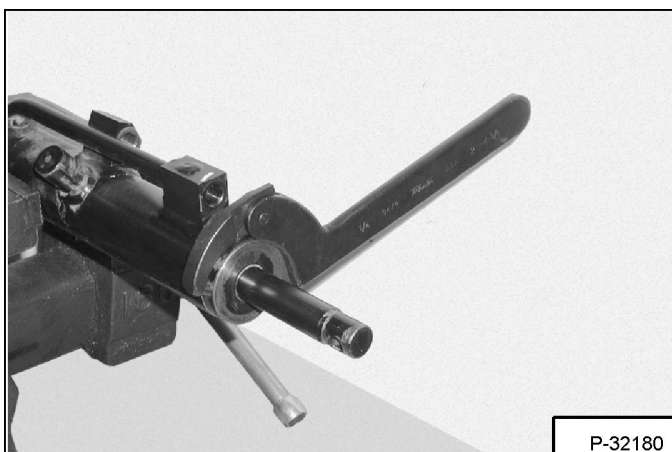

FRAME LEVELING CYLINDER

Removal And Installation (For S/N 362811001 - 362812000, S/N 362911001 - 362912000)

Figure 20-100-1

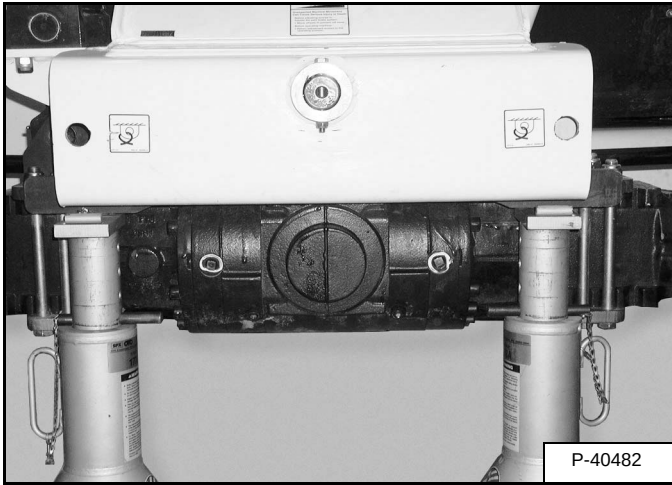

Install jack stands under the frame to prevent the frame from tilting during cylinder removal [Figure 20-100-1].

Relieve hydraulic pressure.

WARNING

Hydraulic fluid escaping under pressure can have sufficient force to enter a person's body by penetrating the skin. This can cause serious injury and possible death if proper medical treatment by a physician familiar with this injury is not received immediately.

W-2145-0290


IMPORTANT

When making repairs on hydraulic system, clean the work area before disassemble and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.

I-2056-0793

NOTE: Mark all hoses for correct installation.


Figure 20-100-2

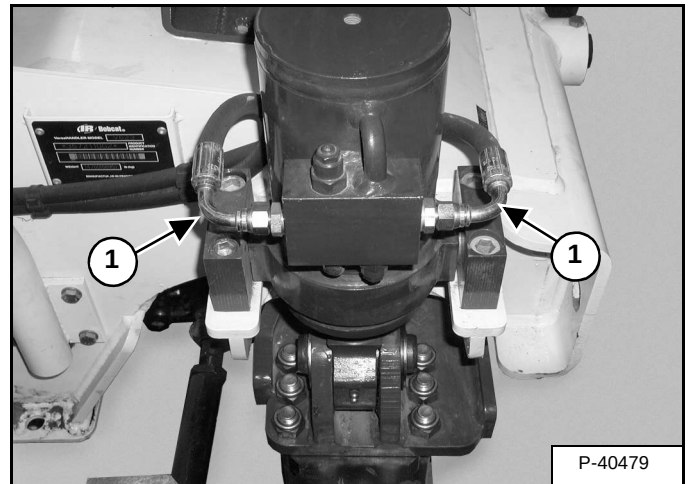

Remove the two hoses (item 1) [Figure 20-100-2].

Install caps and plugs.

Figure 20-100-3

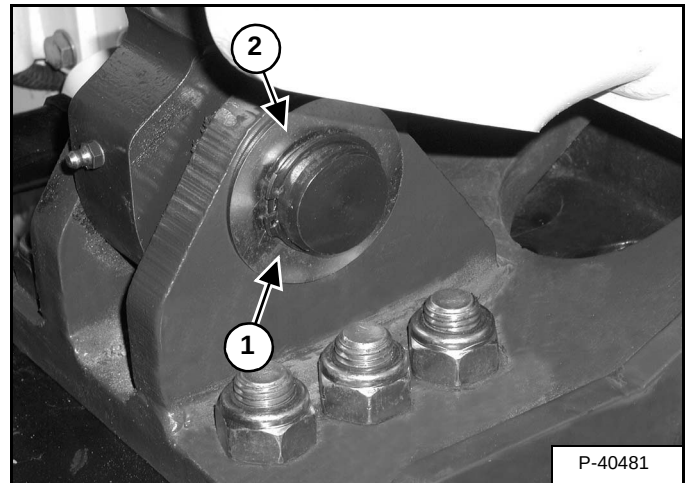


Remove the snap ring (item 1) and washer (item 2) [Figure 20-100-3].

FRAME LEVELING CYLINDER (CONT'D)


Removal And Installation (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (Cont'd)

Figure 20-100-4

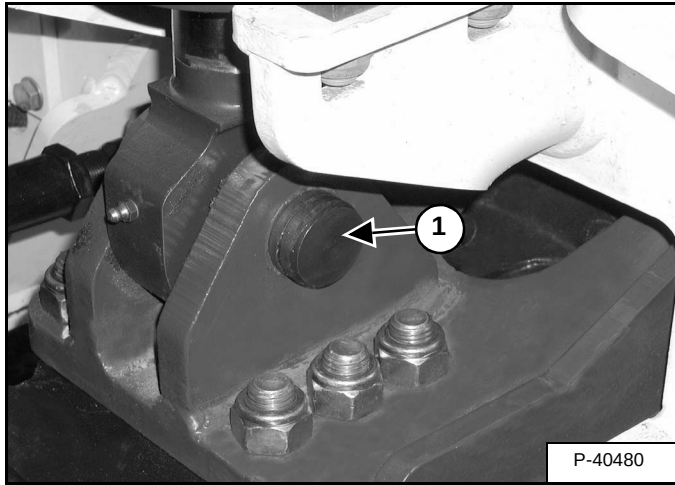

Remove the pivot pin (item 1) [Figure 20-100-4].

Figure 20-100-5

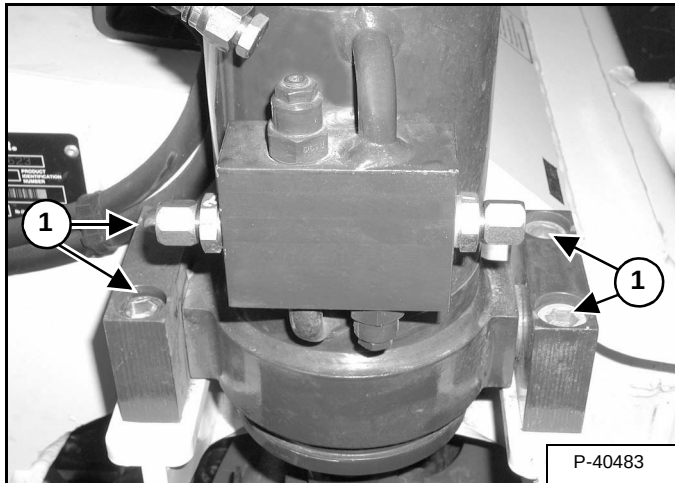


Remove the four mounting bolts (item 1) [Figure 20-100-5].

Remove the frame leveling cylinder.

Removal And Installation (For S/N 362812001 and Above, S/N 362912001 and Above)

Figure 20-100-1

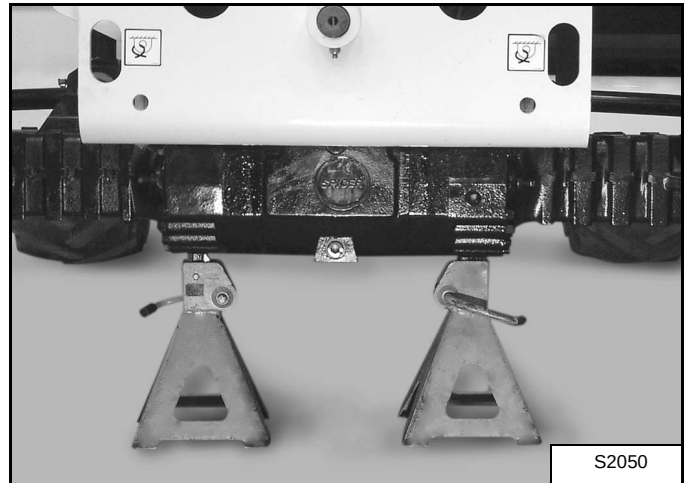

Install jack stands under the frame to prevent the frame from tilting during cylinder removal [Figure 20-100-1].

Relieve hydraulic pressure.

! WARNING

Hydraulic fluid escaping under pressure can have sufficient force to enter a person's body by penetrating the skin. This can cause serious injury and possible death if proper medical treatment by a physician familiar with this injury is not received immediately.

W-2145-0290

IMPORTANT

When making repairs on hydraulic system, clean the work area before disassemble and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.


I-2056-0793

NOTE: Mark all hoses for correct installation.

FRAME LEVELING CYLINDER (CONT'D)

Removal And Installation (For S/N 362812001 and Above, S/N 362912001 and Above) (Cont'd)


Figure 20-100-2

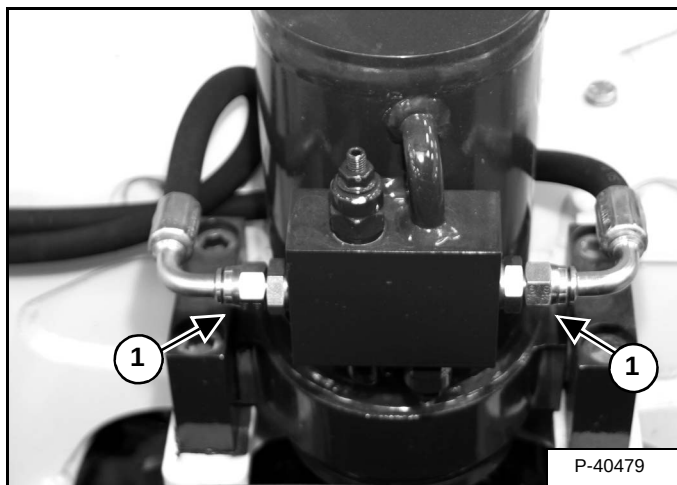

Remove the two hoses (item 1) [Figure 20-100-2].


Install caps and plugs.

Figure 20-100-3

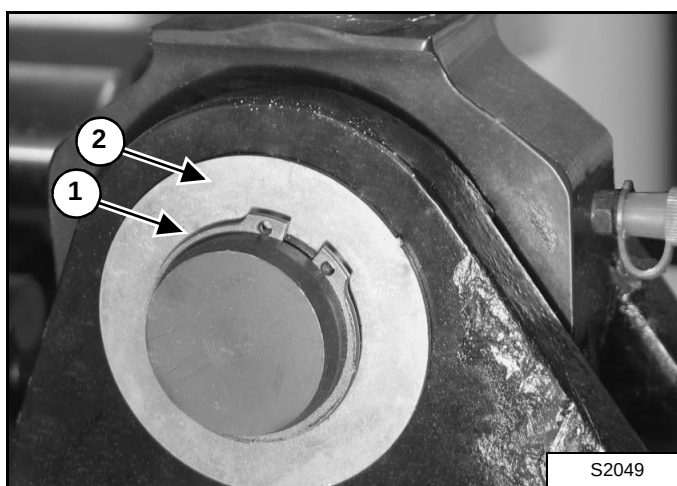


Remove the snap ring (item 1) and washer (item 2) [Figure 20-100-3].

Removal

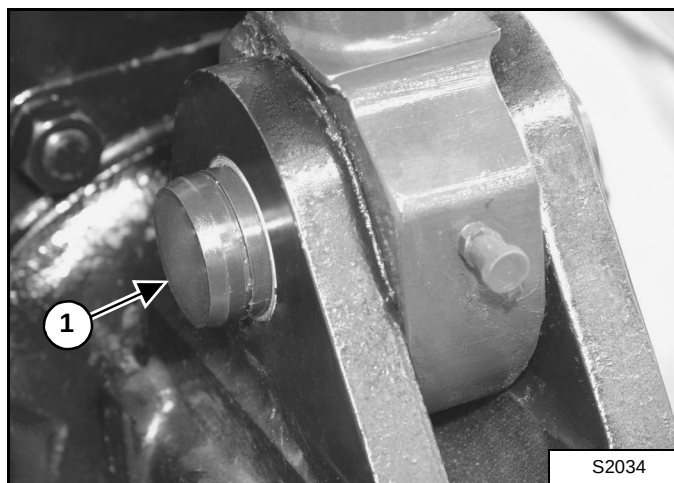

Remove the snap ring and washer. Remove the pivot pin (item 1) [Figure 20-100-4].

Figure 20-100-4

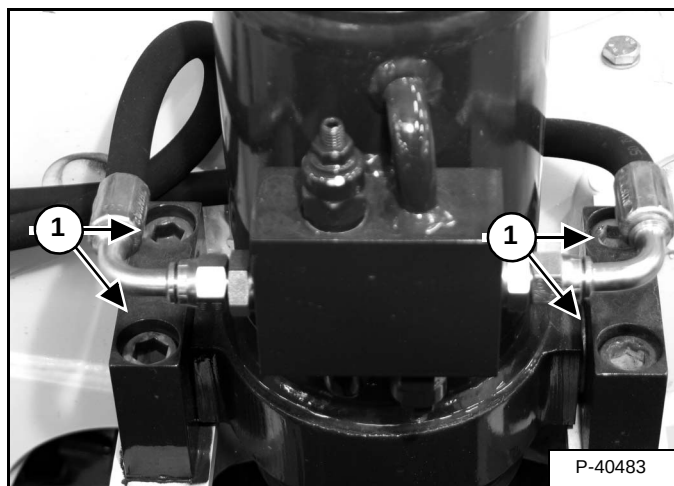


Remove the four mounting bolts (item 1) [Figure 20-100-5].

Remove the frame leveling cylinder.

FRAME LEVELING CYLINDER (CONT'D)

Parts Identification

1. Relief Cartridge
2. Housing
3. Wear Ring
4. Seal
5. Set Screw
6. Piston
7. O-ring
8. Sleeve
9. Head Gland
10. Wiper
11. Bushing
12. Rod
13. Grease Fitting

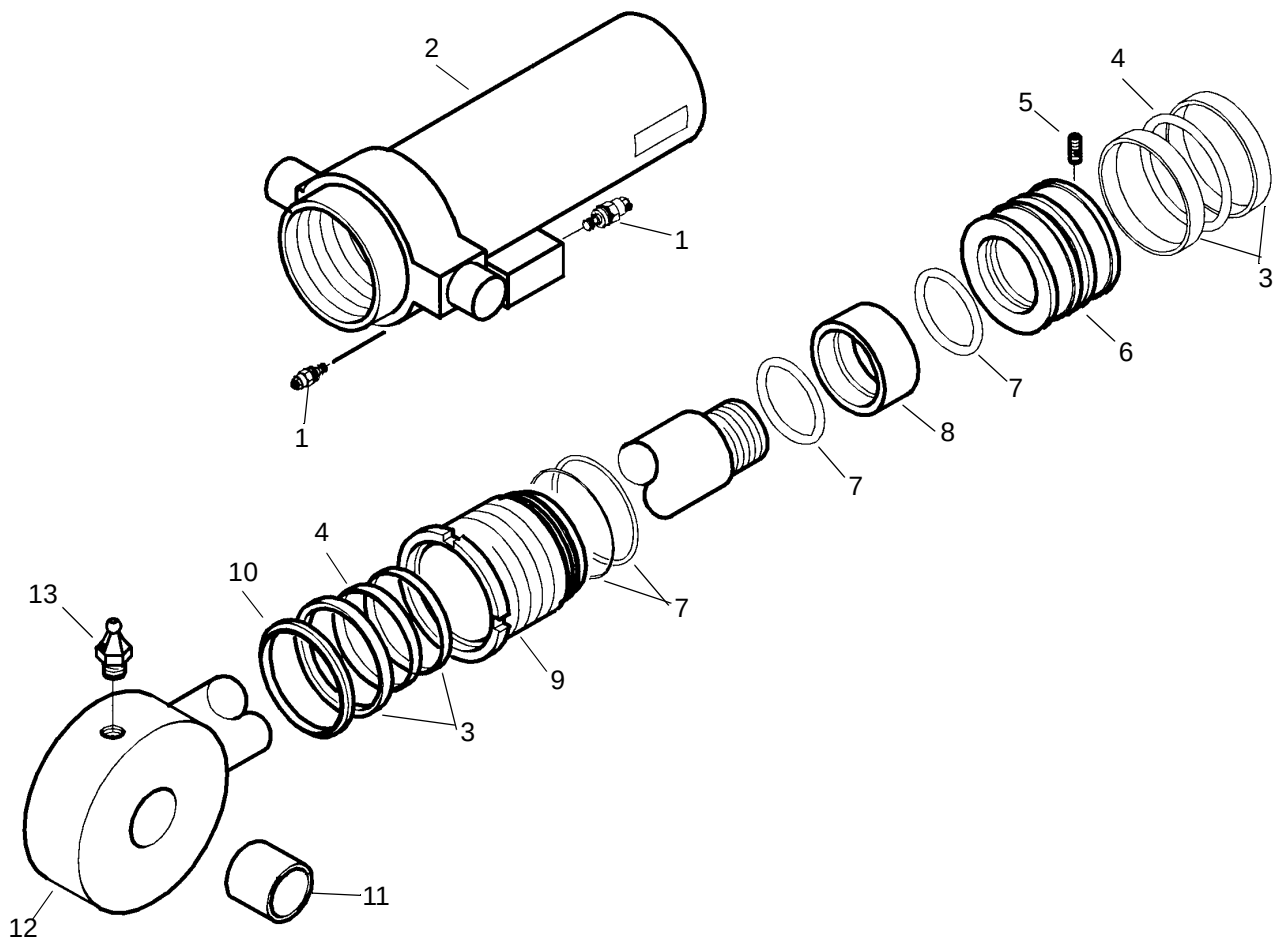

b-19814


FRAME LEVELING CYLINDER (CONT'D)

Disassembly

Use the following tools to disassemble the cylinder:


MEL1353 - Cylinder Gland Nut Wrench

Figure 20-100-5

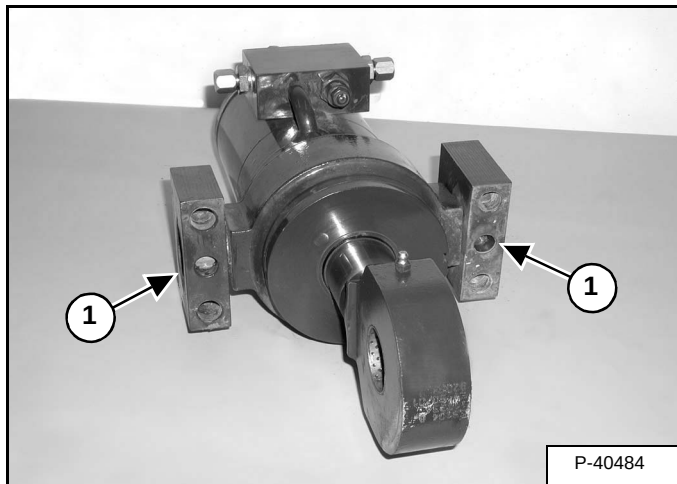


Remove the mounting blocks (item 1) [Figure 20-100-5].

Figure 20-100-6

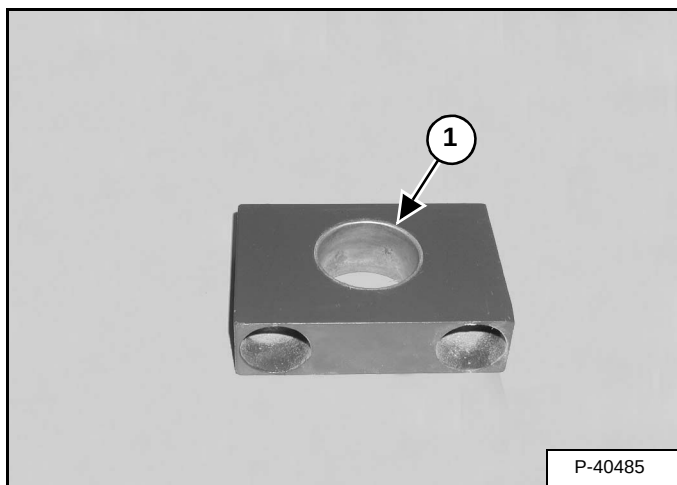


Remove the bushing (item 1) [Figure 20-100-6] from both mounting blocks.

Figure 20-100-7

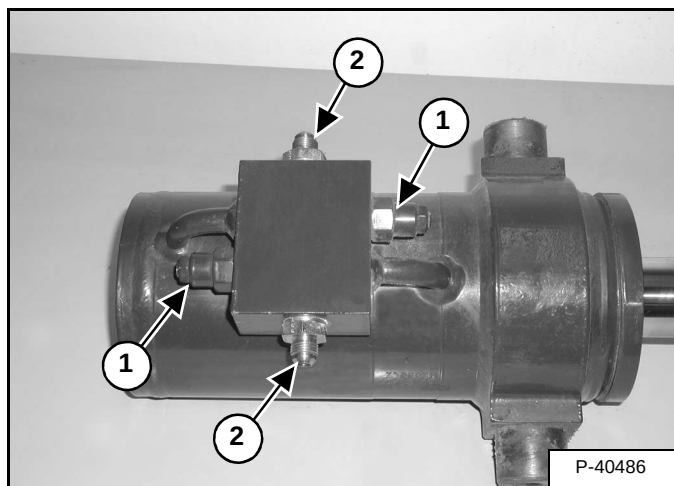

Remove the two relief cartridges (item 1) and two fittings (item 2) [Figure 20-100-7].

Figure 20-100-8

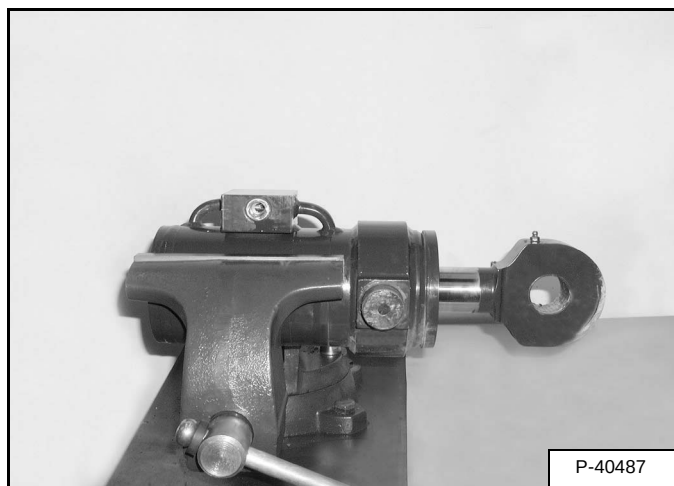


Put the cylinder in a vise [Figure 20-100-8].

FRAME LEVELING CYLINDER (CONT'D)


Disassembly (Cont'd)

Figure 20-100-9

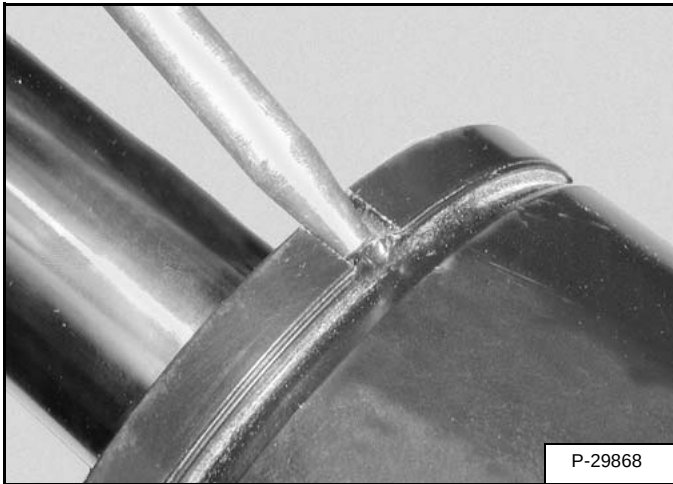


Carefully peen the lock ring from the head gland [Figure 20-100-9].

Figure 20-100-10

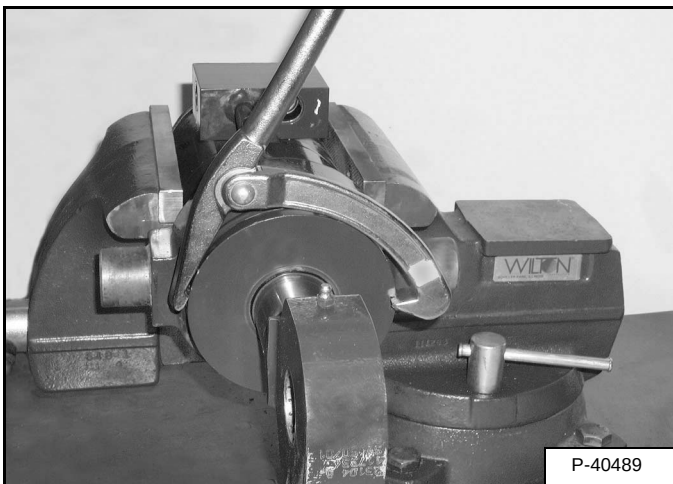


Remove the head gland [Figure 20-100-10].

Figure 20-100-11

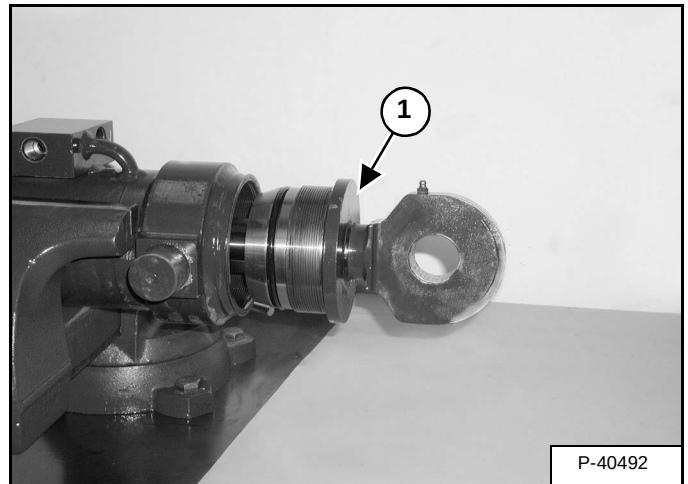

Remove the rod assembly (item 1) [Figure 20-100-11] from the housing.

Figure 20-100-12

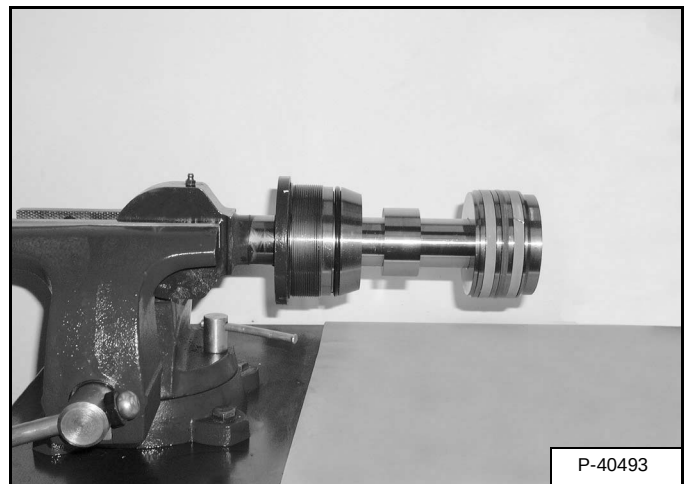


Put the rod end of the cylinder in a vise [Figure 20-100-12].

FRAME LEVELING CYLINDER (CONT'D)

Disassembly (Cont'd)


Figure 20-100-13

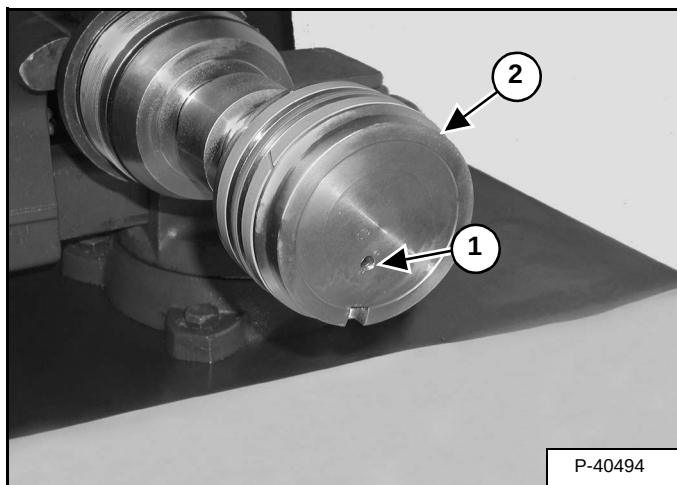

Remove the set screw (item 1) [Figure 20-100-13] from the piston.


Remove the piston assembly (item 2) [Figure 20-100-13] from the rod.

Figure 20-100-14

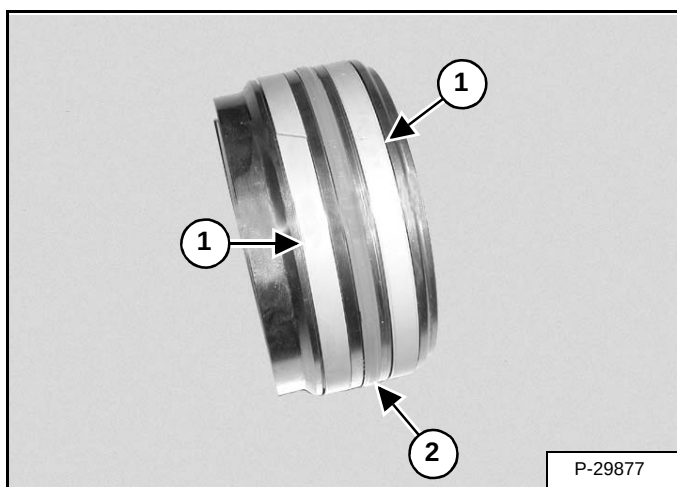


Remove the two wear rings (item 1) and seal (item 2) [Figure 20-100-14] from the piston.

Figure 20-100-15

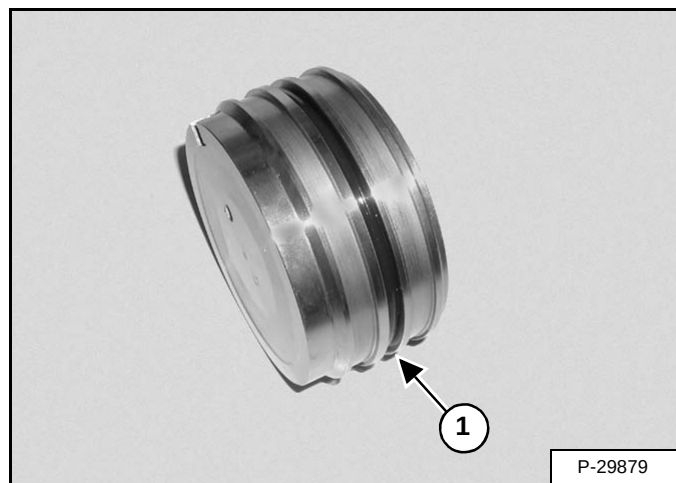

Remove the expander O-ring (item 1) [Figure 20-100-15].

Figure 20-100-16

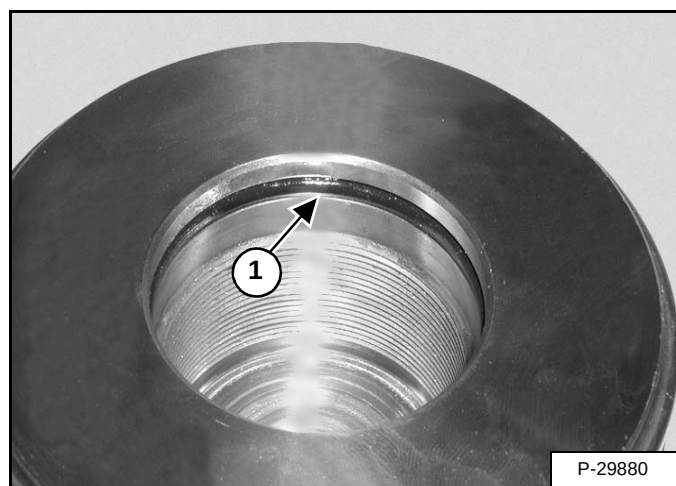


Remove the O-ring (item 1) [Figure 20-100-16] from the piston.

FRAME LEVELING CYLINDER (CONT'D)


Disassembly (Cont'd)

Figure 20-100-17

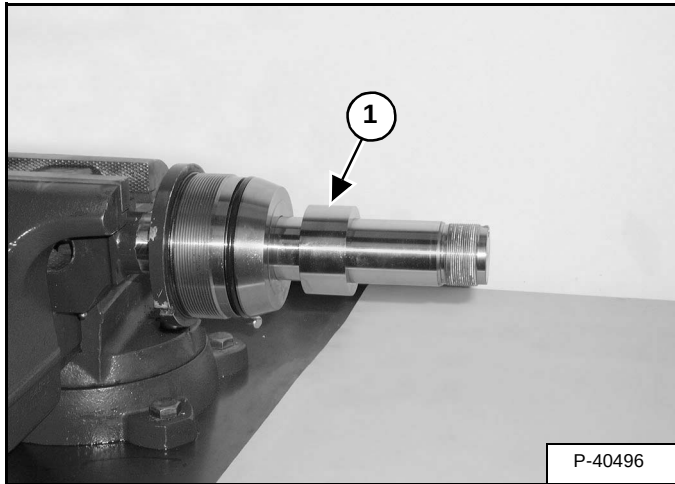


Remove the sleeve (item 1) [Figure 20-100-17] from the rod.

Figure 20-100-18

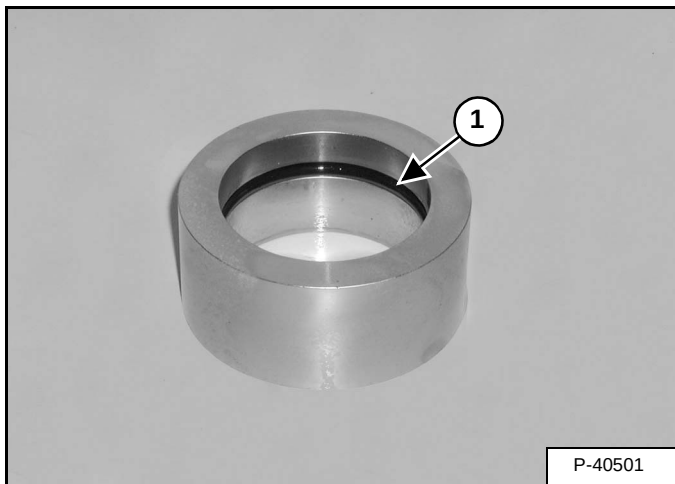


Remove the O-ring (item 1) [Figure 20-100-18] from the sleeve.

Figure 20-100-19

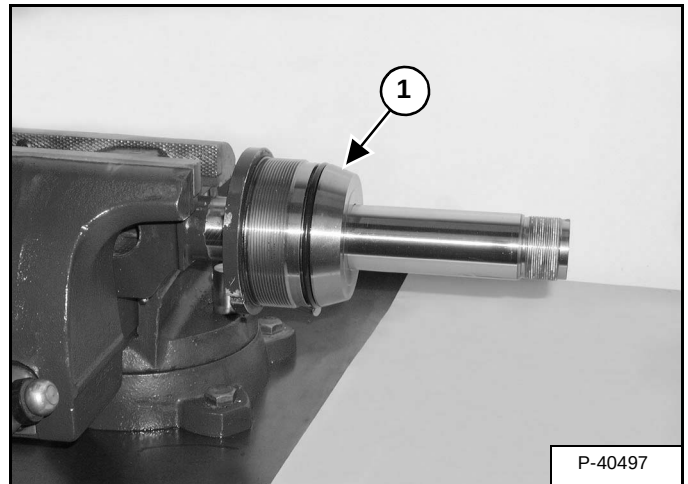

Remove the head gland (item 1) [Figure 20-100-19] from the rod.

Figure 20-100-20

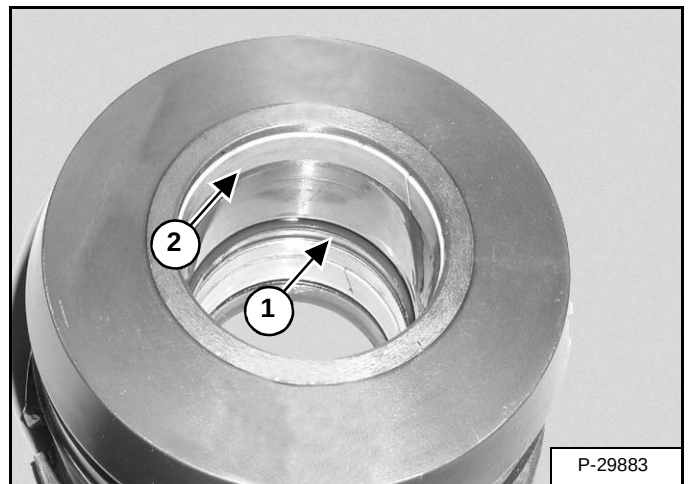


Remove the center seal (item 1) and outer wear ring (item 2) [Figure 20-100-21] from the head gland.

FRAME LEVELING CYLINDER (CONT'D)


Disassembly (Cont'd)

Figure 20-100-21

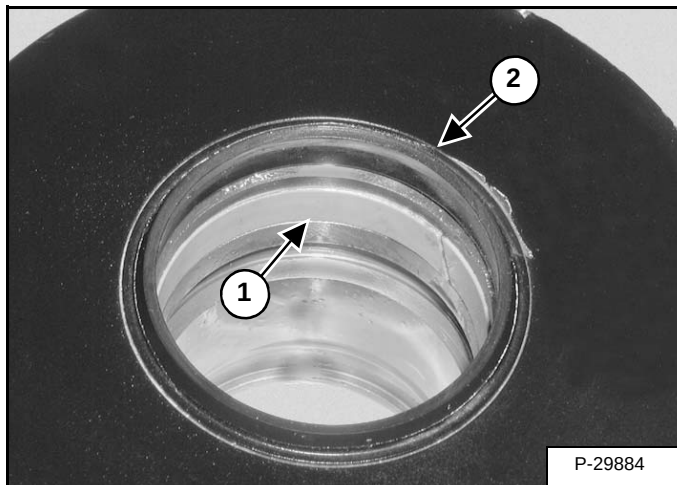

Remove the outer wear ring (item 1) and wiper (item 2) [Figure 20-100-21]


Figure 20-100-22

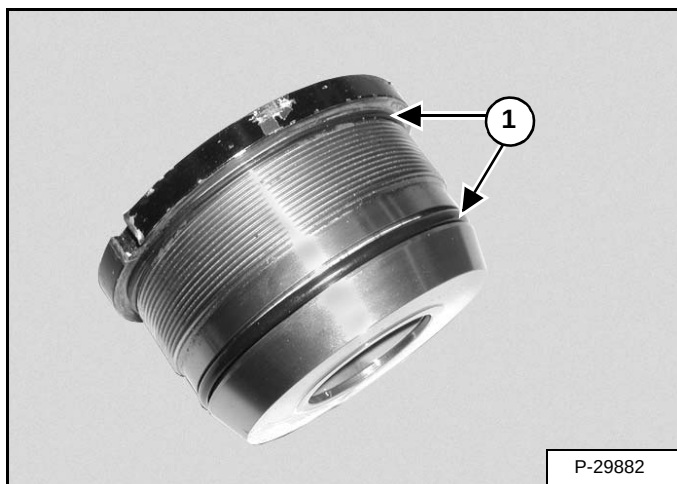

Remove the two O-rings (item 1) [Figure 20-100-22].

Remove the rod from the vise.

Figure 20-100-23

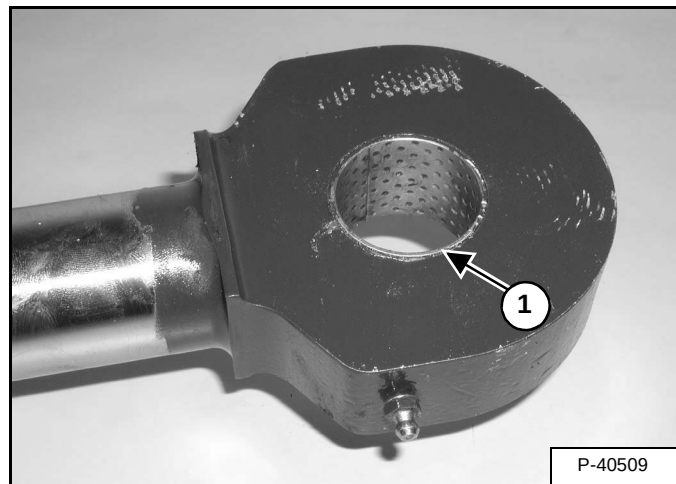

Remove the bushing (item 1) [Figure 20-100-23] from the rod end.

FRAME LEVELING CYLINDER (CONT'D)

Assembly

Use the following tools to assemble the cylinder:


MEL1353 - Cylinder Gland Nut Wrench

Wash the cylinder parts in solvent and dry with compressed air.

Inspect the cylinder parts for nicks, scratches or other damage. Replace any damaged parts.


Always use new O-rings and seals. Lubricate all O-rings and seals with hydraulic oil during installation.

Figure 20-100-24

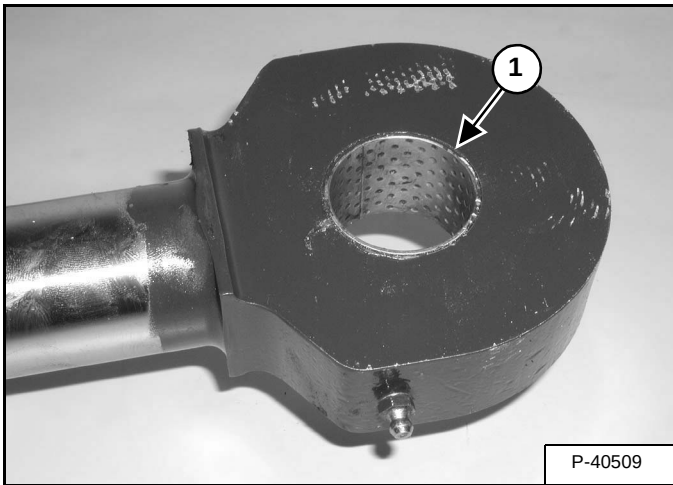


Install the bushing (item 1) [Figure 20-100-24] in the rod end.

Figure 20-100-25

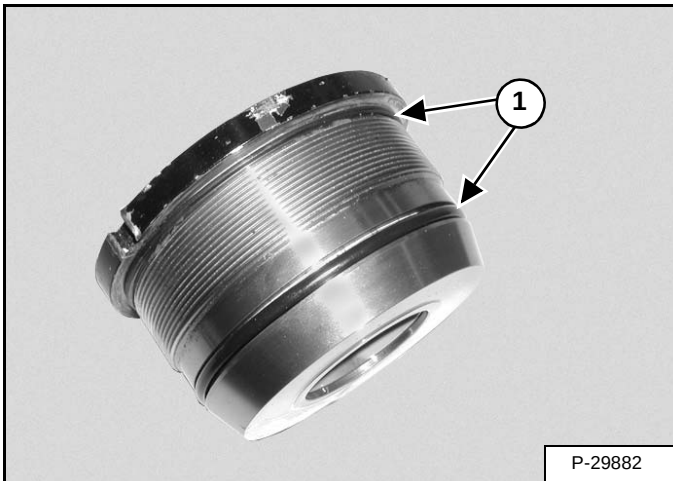


Install the two O-rings (item 1) [Figure 20-100-25] onto the head gland.

Figure 20-100-26

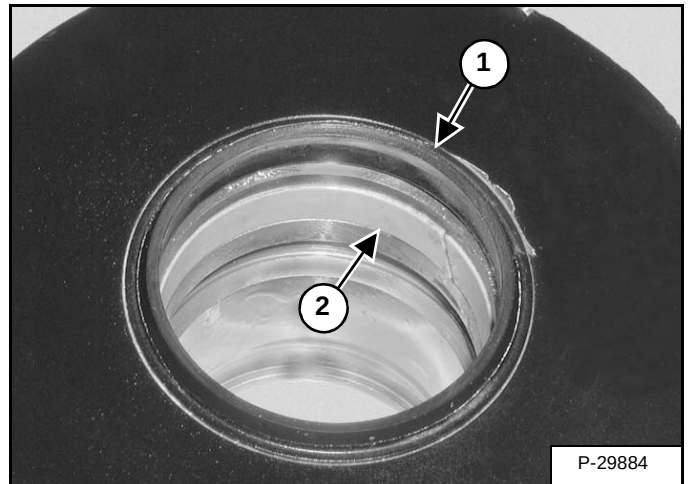

Install the wiper (item 1) and wear ring (item 2) [Figure 20-100-26].

Figure 20-100-27

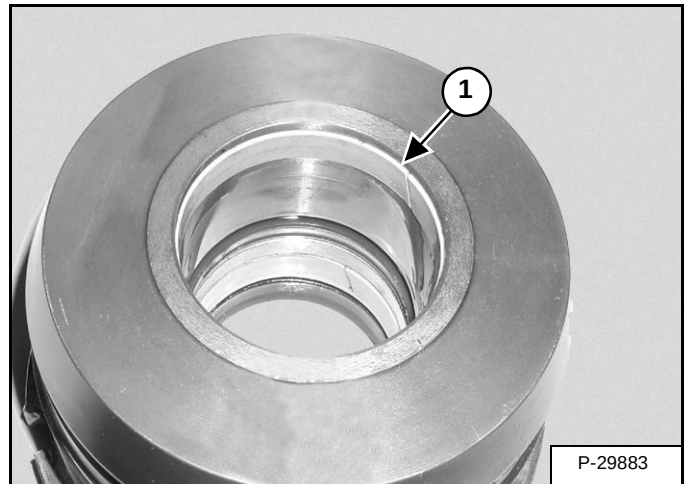


Install the wear ring (item 1) [Figure 20-100-27].

FRAME LEVELING CYLINDER (CONT'D)

Assembly (Cont'd)


Figure 20-100-28

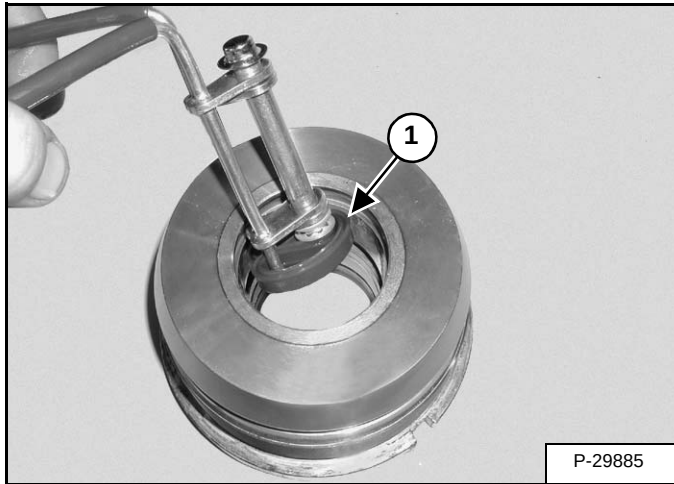

Install the center seal (item 1) [Figure 20-100-28].

NOTE: The groove in the seal must point away from the wiper seal (item 1) [Figure 20-100-28].


Figure 20-100-29

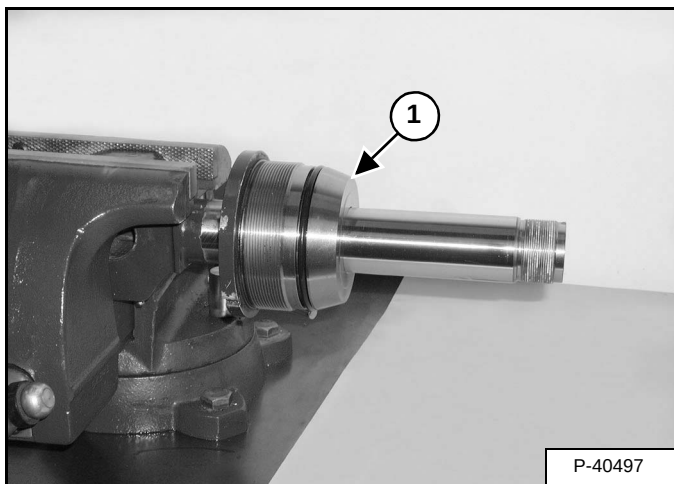

Put the rod end in a vise. Use care not to damage the rod.


Install the head gland (item 1) [Figure 20-100-29] onto the rod.

Figure 20-100-30

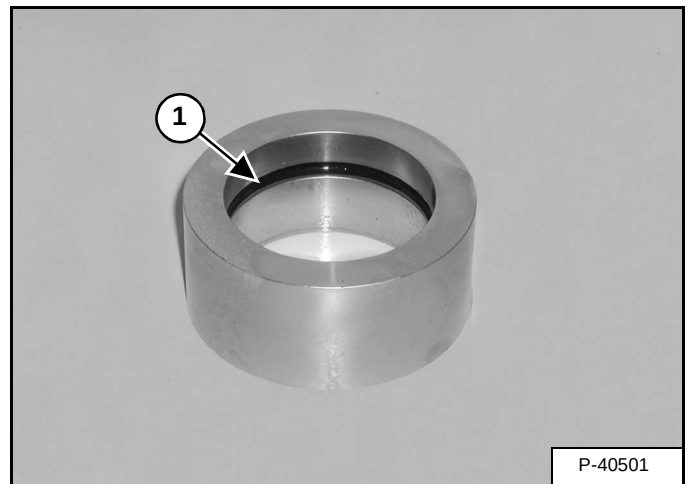

Install the O-ring (item 1) [Figure 20-100-30] in the sleeve.

Figure 20-100-31

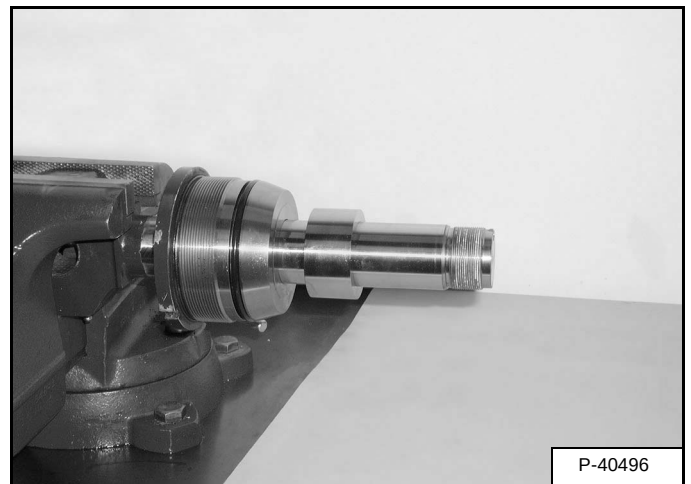


Install the sleeve (item 1) [Figure 20-100-31] on the rod.

FRAME LEVELING CYLINDER (CONT'D)


Assembly (Cont'd)

Figure 20-100-32

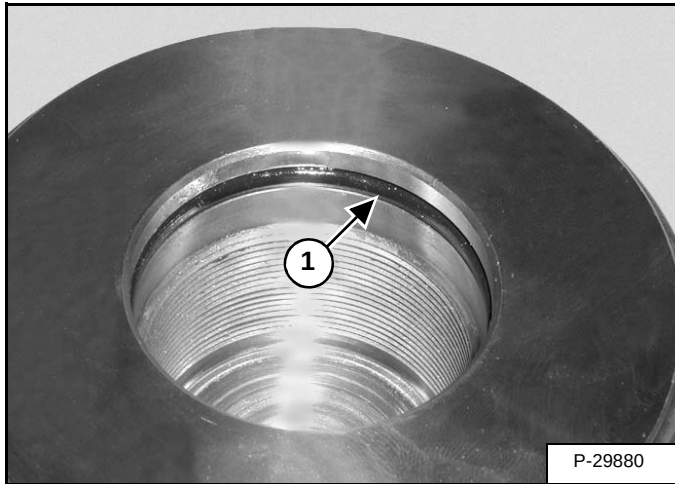


Install the O-ring (item 1) [Figure 20-100-32] in the piston.

Figure 20-100-33

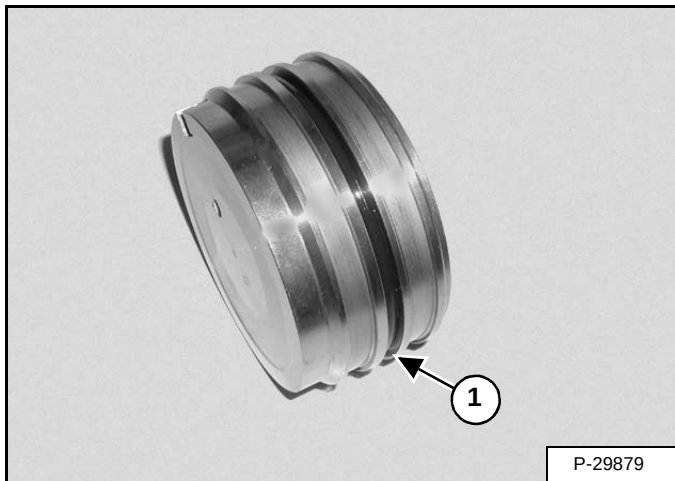

Install the expander O-ring (item 1) [Figure 20-100-33] onto the piston.

Figure 20-100-34

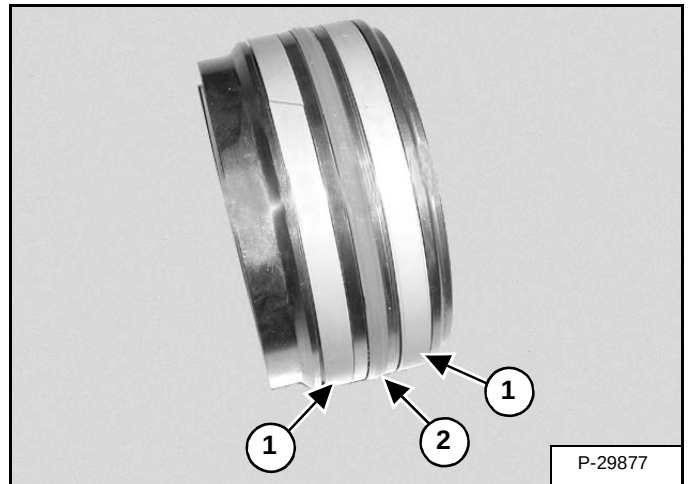

Install the two wear rings (item 1) and seal (item 2) [Figure 20-100-34].

Figure 20-100-35




Clean the threads and apply LOCTITE 242 or equivalent to the threads on the rod [Figure 20-100-35].

FRAME LEVELING CYLINDER (CONT'D)


Assembly (Cont'd)

Figure 20-100-36

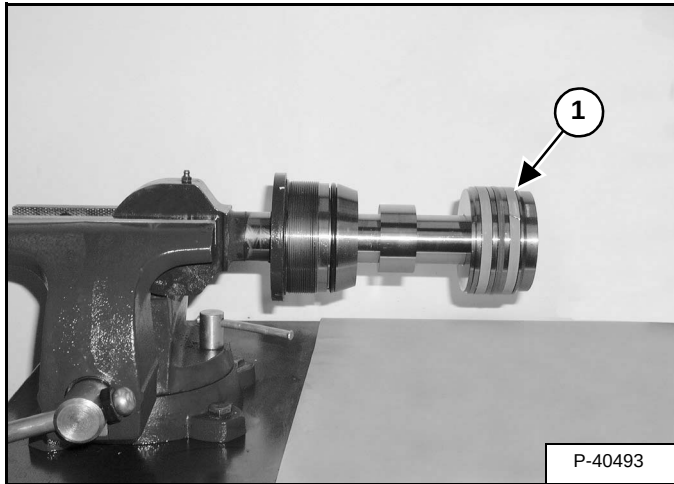


Install the piston (item 1) [Figure 20-100-36] on the rod.

Figure 20-100-37

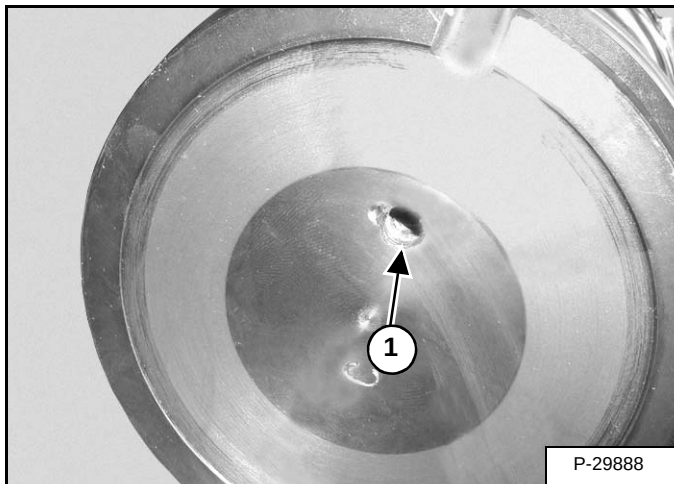


Align the hole (item 1) [Figure 20-100-37] in the piston with the hole in the end of the cylinder rod.

Figure 20-100-38

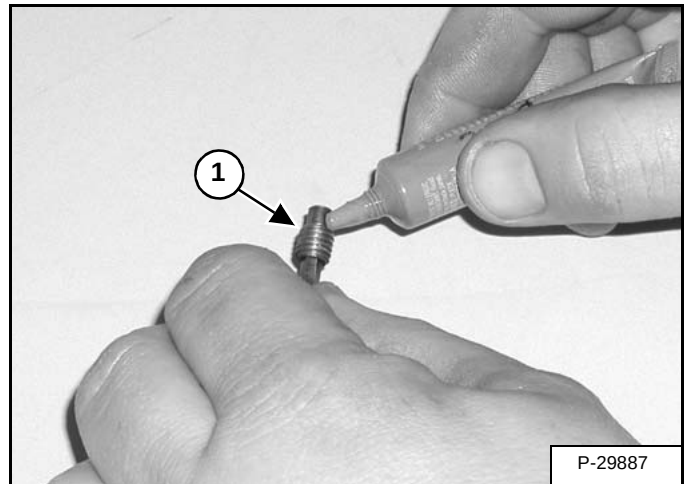

Apply LOCTITE 242 or equivalent to the set screw (item 1) [Figure 20-100-38].

Figure 20-100-39

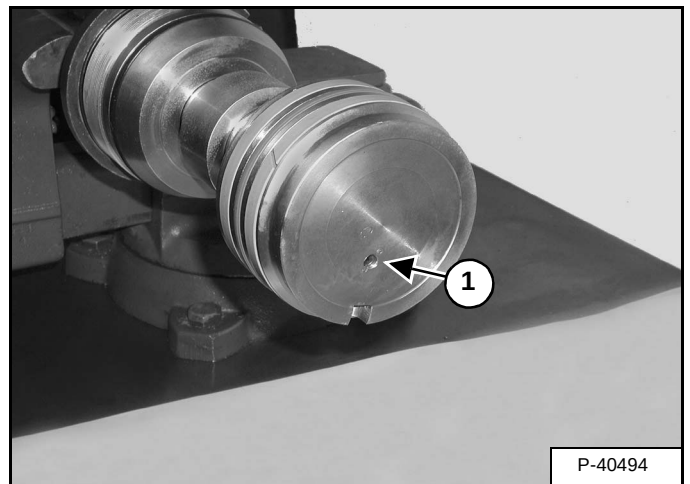


Install the set screw (item 1) [Figure 20-100-39] into the piston and tighten.

FRAME LEVELING CYLINDER (CONT'D)

Assembly (Cont'd)


Figure 20-100-40

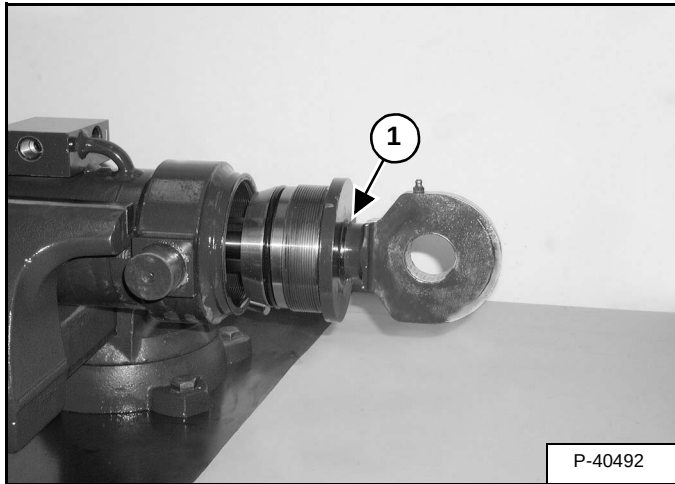

Put the housing in a vise. Use care not to damage the housing.


Install the rod assembly (item 1) [Figure 20-100-40] into the housing.

Figure 20-100-41

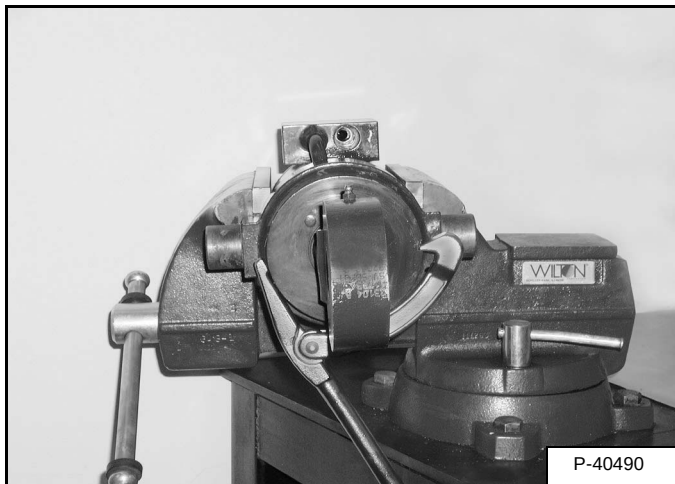

Tighten the head gland [Figure 20-100-41].


Figure 20-100-42

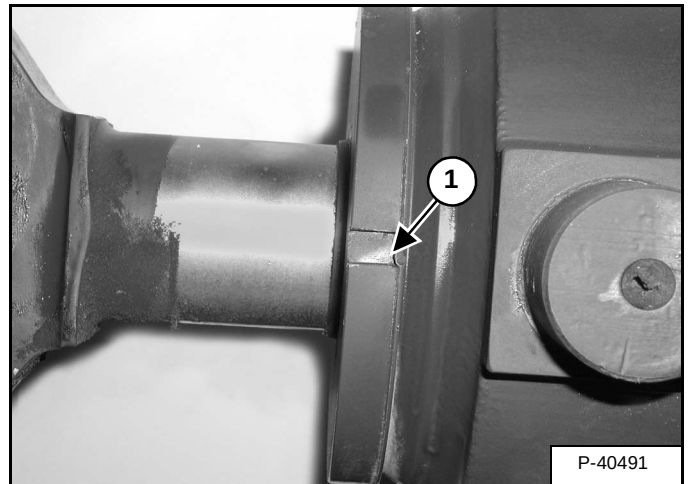

Carefully peen the lock ring over and into the nut [Figure 20-100-42].

Remove the cylinder from the vise.

Figure 20-100-43

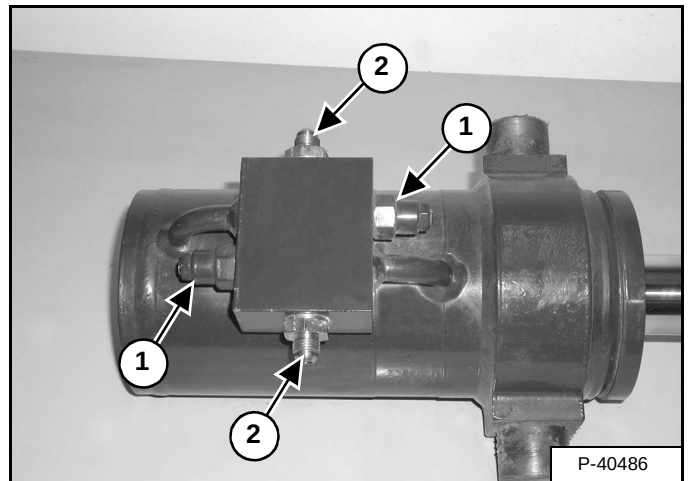


Install the two relief valve cartridges (item 1) and two fittings (item 2) [Figure 20-100-43].

FRAME LEVELING CYLINDER (CONT'D)


Assembly (Cont'd)

Figure 20-100-44

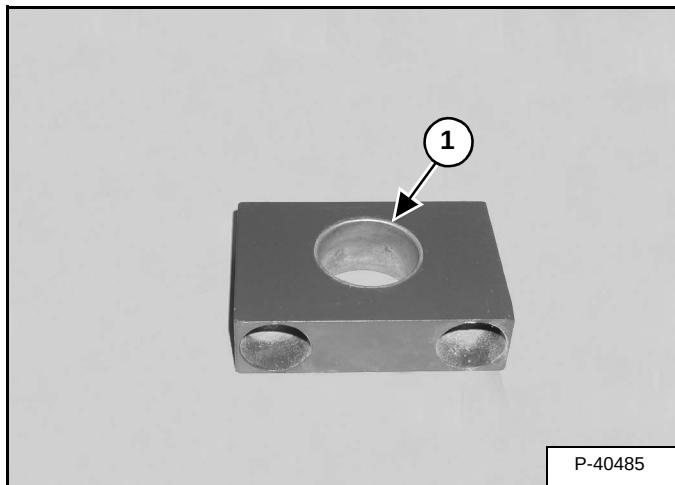

Install the bushing (item 1) [Figure 20-100-44] on both mounting blocks.

Figure 20-100-45

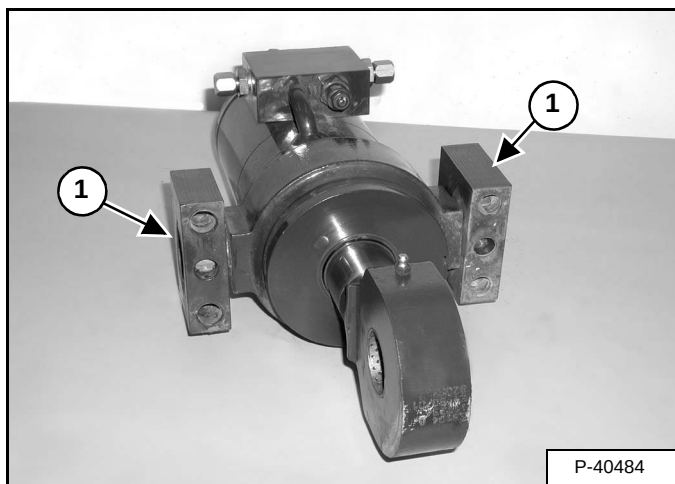

Install the two mounting blocks (item 1) [Figure 20-100-45].



Bobcat®

STEERING MODE VALVE BLOCK


Removal And Installation

! WARNING

Hydraulic fluid escaping under pressure can have sufficient force to enter a person's body by penetrating the skin. This can cause serious injury and possible death if proper medical treatment by a physician familiar with this injury is not received immediately.

W-2145-0290

Figure 20-110-1

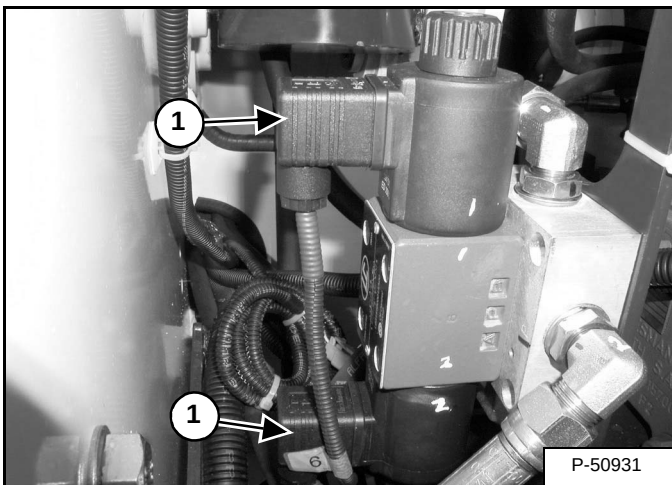


Relieve hydraulic pressure.

Remove the retainer screw (Item 1) [Figure 20-110-1] from the two solenoids.

Remove the wire connectors from the two solenoids.

NOTE: Mark the location of the wire connectors for correct installation.

Figure 20-110-2

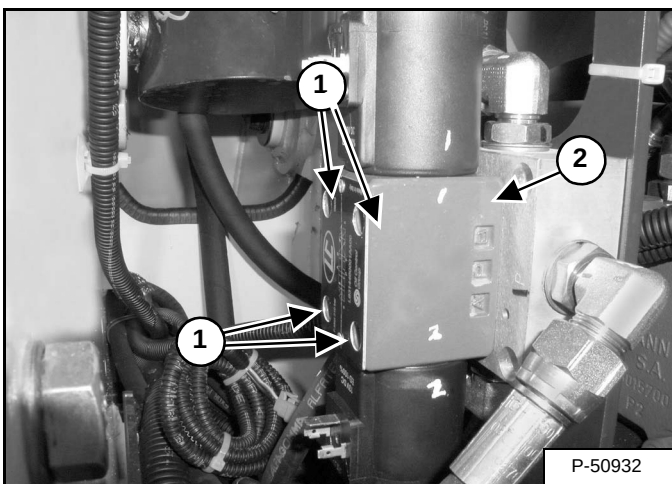

Remove the four mounting bolts (Item 1) [Figure 20-110-2].

NOTE: Mark the location of the valve on the block.

Remove the valve (Item 2) [Figure 20-110-2] from the block.

IMPORTANT


When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.

I-2003-0888

STEERING MODE VALVE BLOCK (CONT'D)

Removal And Installation (Cont'd)


Figure 20-110-3

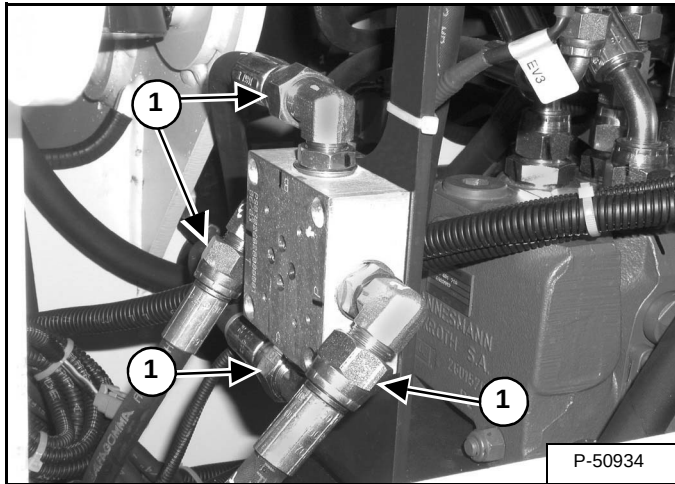

Remove the four hoses (Item 1) [Figure 20-110-3].

NOTE: Mark the location of the hoses.

Figure 20-110-4

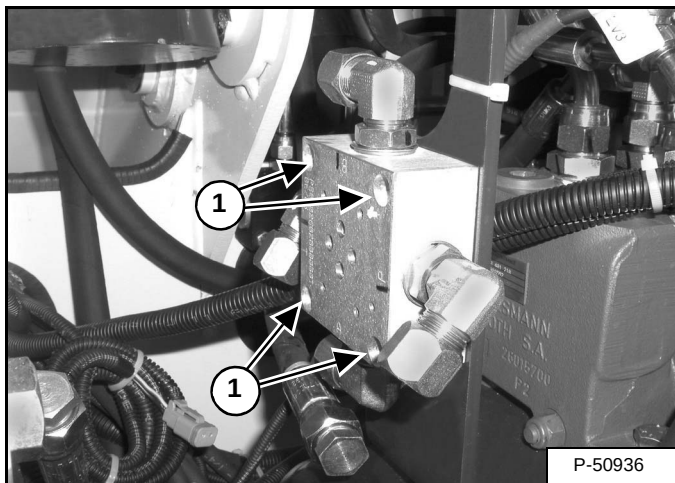


Remove the four mounting bolts (Item 1) [Figure 20-110-4] and remove the block.

STEERING MODE VALVE BLOCK (CONT'D)

Parts Identification

1. Nut
2. O-Ring
3. Solenoid
4. Shaft
5. Pin
6. Spring
7. Retainer
8. Spool
9. Housing
10. Bolt
11. Washer
12. Elbow
13. Adapter
14. Housing

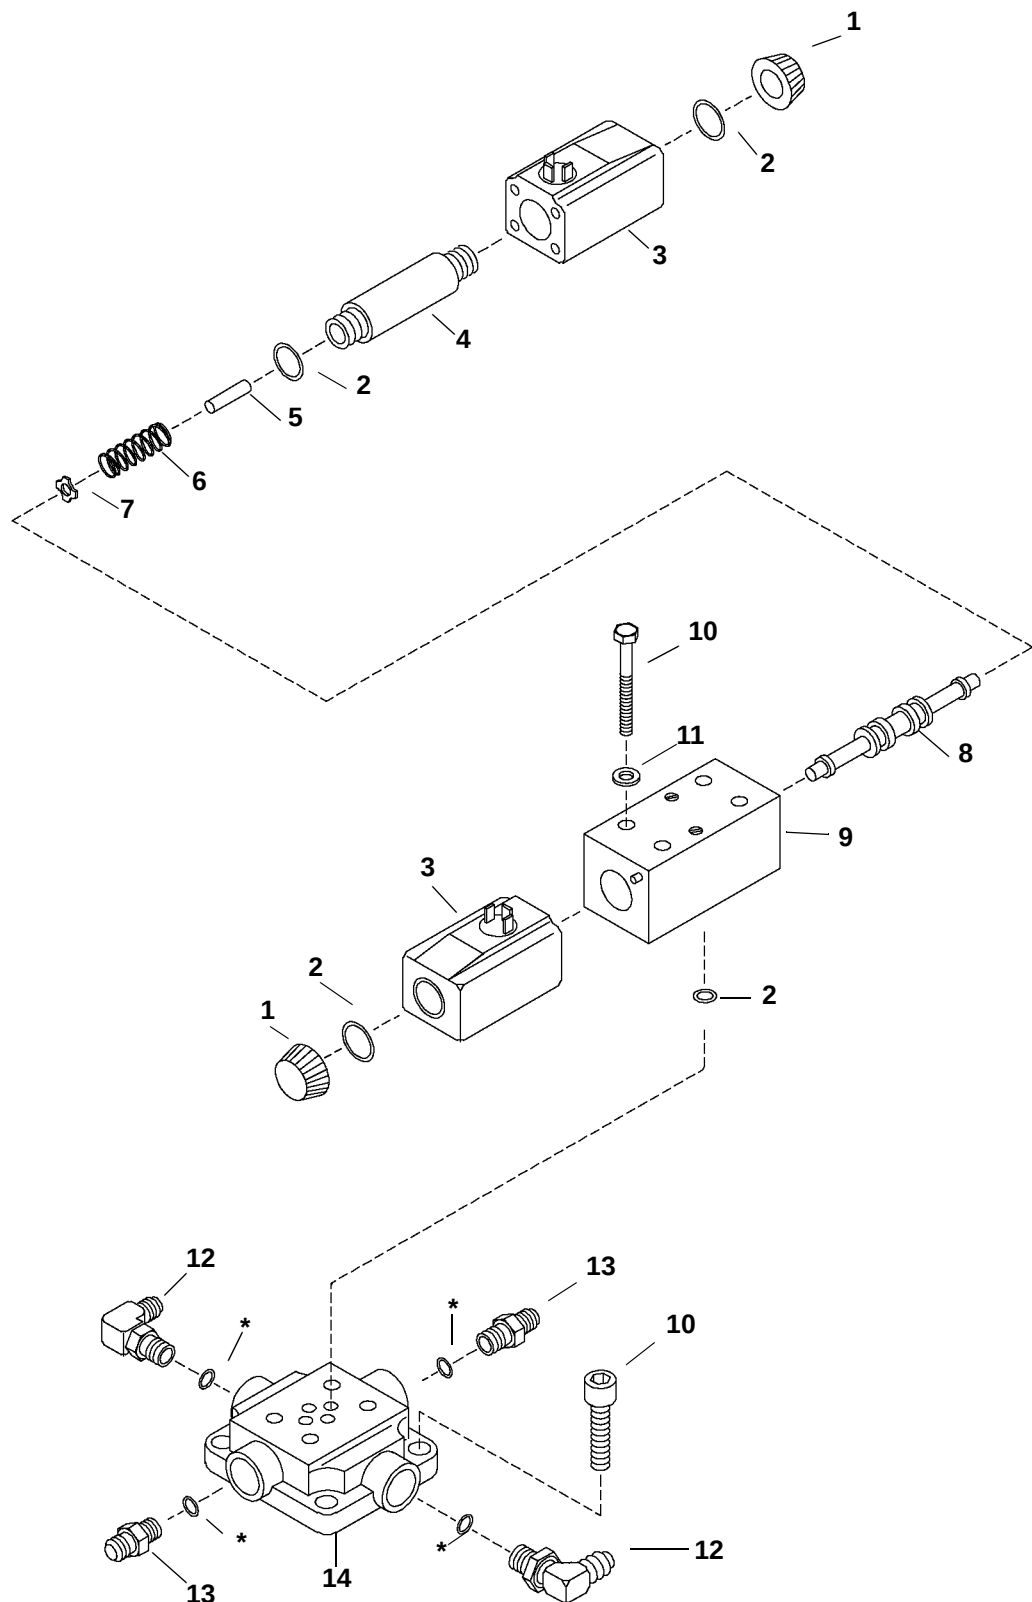

* Supplied with fitting.


MS1152

STEERING MODE VALVE BLOCK (CONT'D)

Disassembly


Mark the location of the solenoids to the housing for correct assembly.

Figure 20-110-5

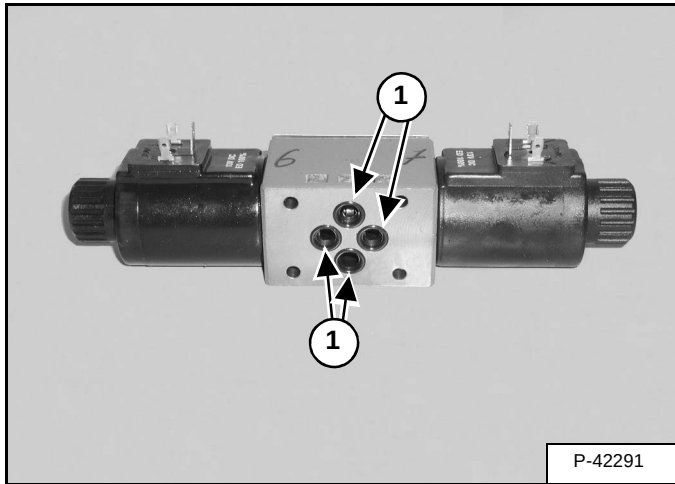

Remove the four O-rings (Item 1) [Figure 20-110-5] from the housing.

Figure 20-110-6

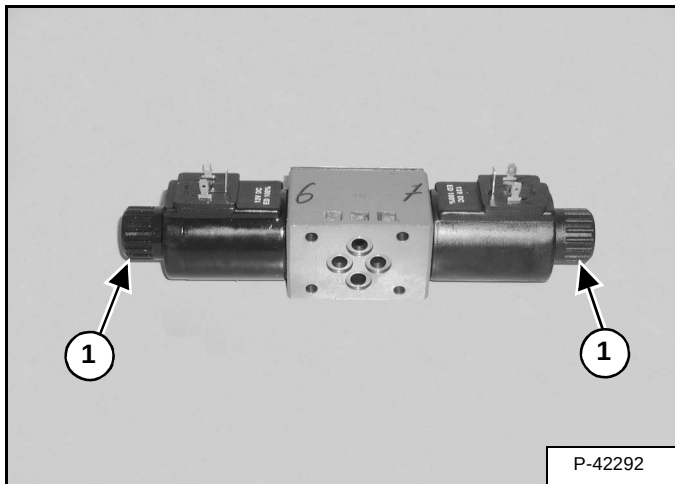

Remove the nut (Item 1) [Figure 20-110-6] from each solenoid.


NOTE: Mark the location of the solenoids.

IMPORTANT

When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.


I-2003-0888

Figure 20-110-7

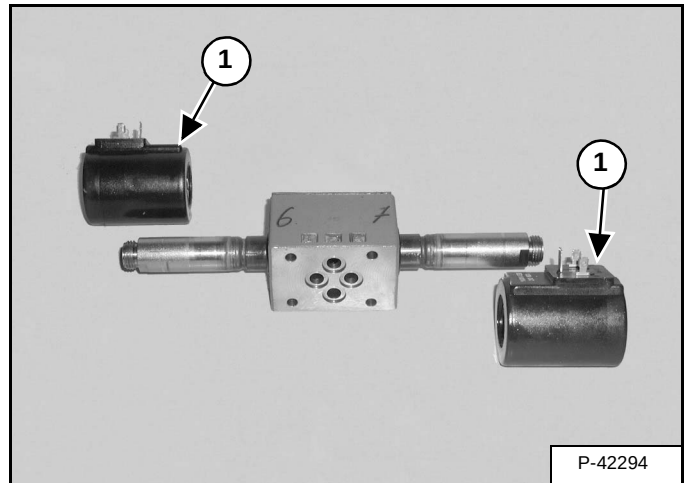

Remove the solenoids (Item 1) [Figure 20-110-7] from the solenoid shafts.

Figure 20-110-8

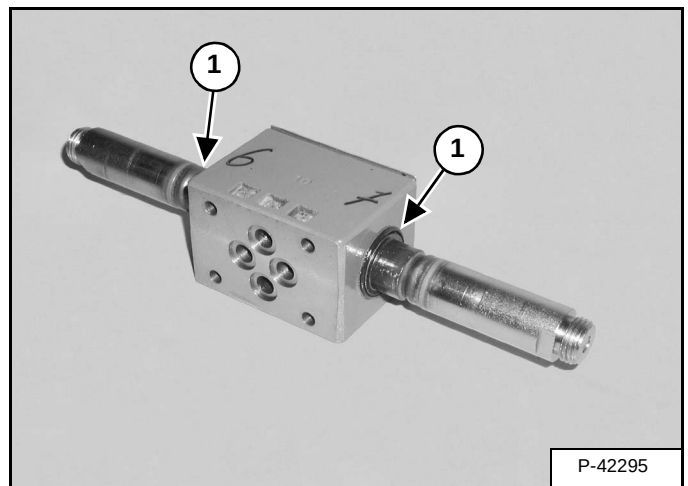


Remove the O-ring (Item 1) [Figure 20-110-8] from both shafts.

STEERING MODE VALVE BLOCK (CONT'D)


Disassembly (Cont'd)

Figure 20-110-9

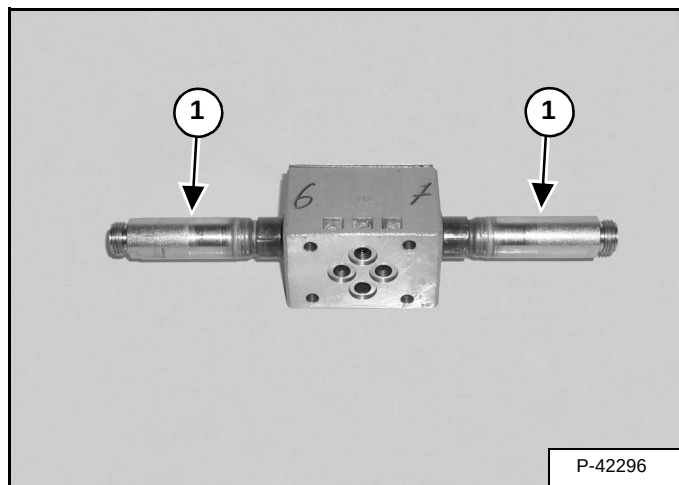


Loosen the shafts (Item 1) [Figure 20-110-9].

Figure 20-110-10

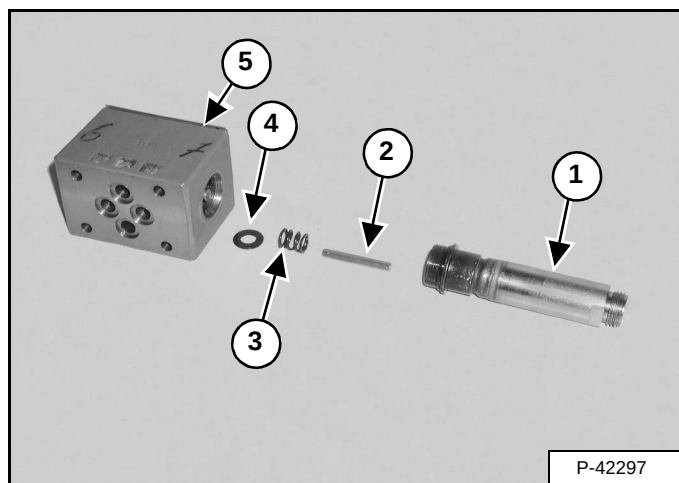


Remove the shaft (Item 1), pin (Item 2), spring (Item 3) and spring retainer (Item 4) from the housing (Item 5) [Figure 20-110-10]. (Both Sides)

Figure 20-110-11

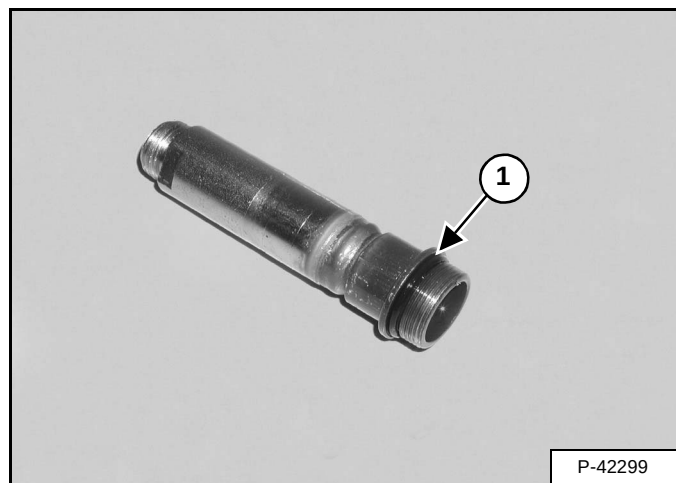

Remove the O-ring (Item 1) [Figure 20-110-11] from each shaft.

Figure 20-110-12

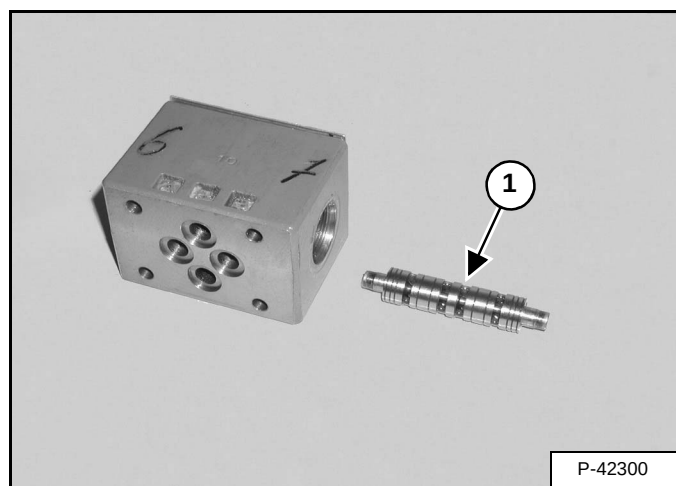

Carefully remove the spool (Item 1) [Figure 20-110-12] from the housing.

STEERING MODE VALVE BLOCK (CONT'D)

Solenoid Testing

Figure 20-110-13



Use a circuit tester, touch one probe to the prong and the other probe to the other prong [Figure 20-110-13], there must be continuity. If there is no continuity, replace the solenoid.

Assembly


Clean all components with solvent and dry with compressed air.

Check all components for wear or damage. Replace any worn or damaged components.

Always use new O-rings.


Lightly oil all parts.

Figure 20-110-14

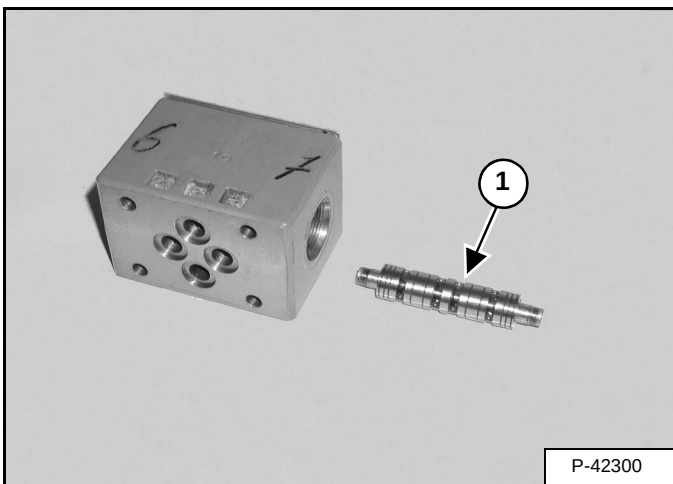


Carefully install the spool (Item 1) [Figure 20-110-14].

Figure 20-110-15

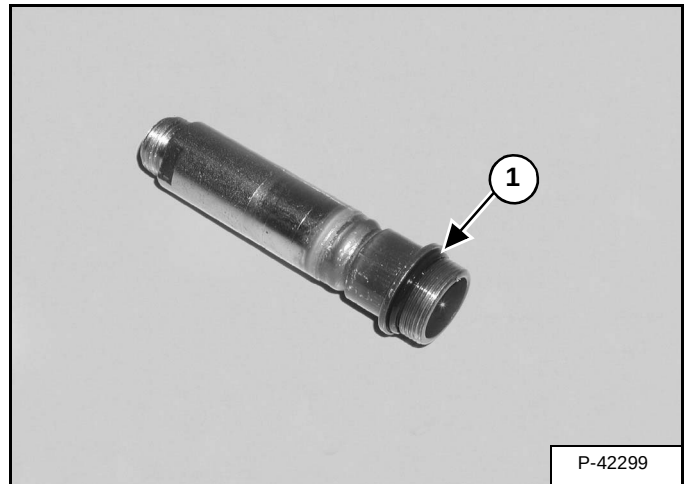

Install a new O-ring (Item 1) [Figure 20-110-15] on each shaft.

Figure 20-110-16

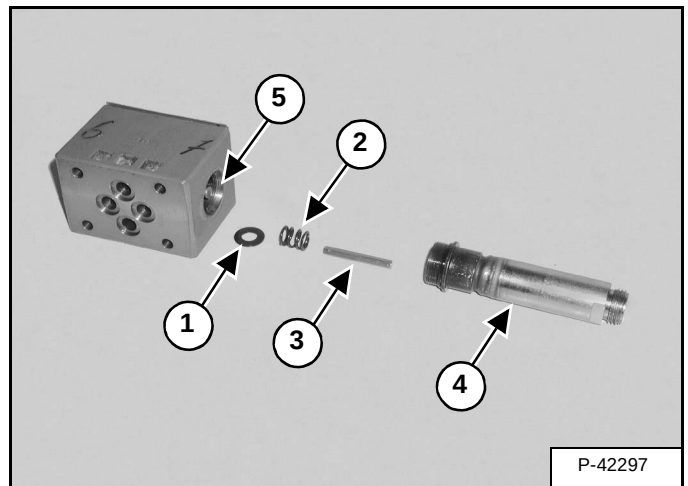


Install the spring retainer (Item 1), spring (Item 2), pin (Item 3) and shaft (Item 4) in the housing (Item 5) [Figure 20-110-16]. (Both Sides)

STEERING MODE VALVE BLOCK (CONT'D)


Assembly (Cont'd)

Figure 20-110-17

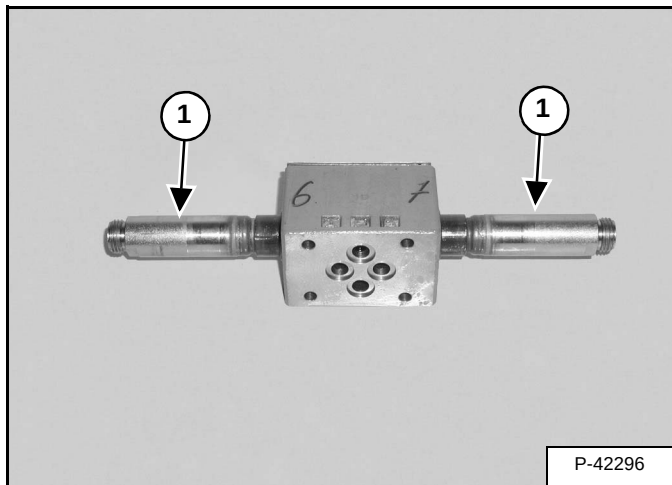


Tighten each shaft (Item 1) [Figure 20-110-17].

Figure 20-110-18

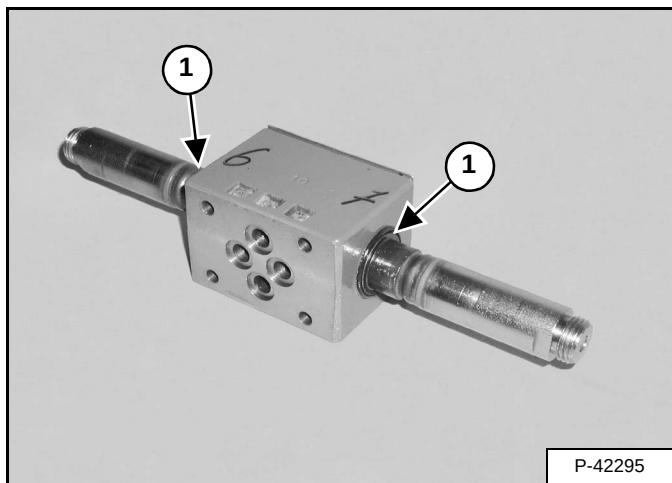


Install an O-ring (Item 1) [Figure 20-110-18] on each shaft.

Figure 20-110-19

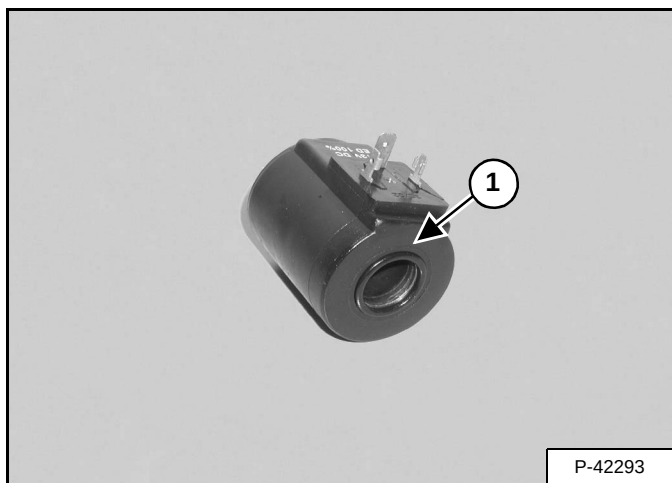

Install the O-ring (Item 1) [Figure 20-110-19] on the two solenoids.

Figure 20-110-20

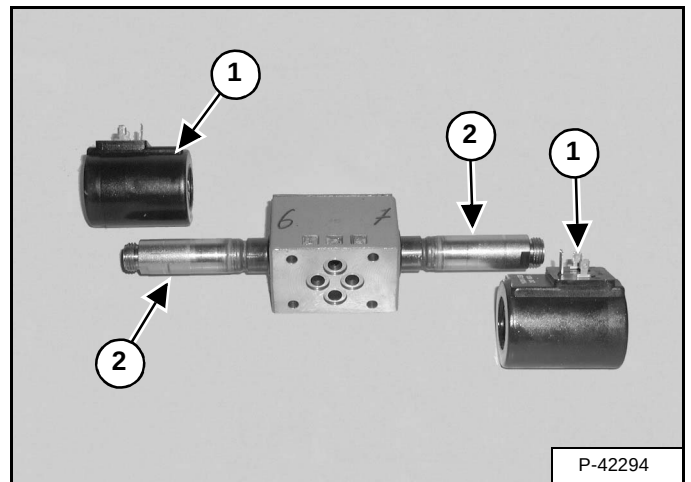


Install the solenoids (Item 1) on the shafts (Item 2) [Figure 20-110-20].

STEERING MODE VALVE BLOCK (CONT'D)

Assembly (Cont'd)


Figure 20-110-21

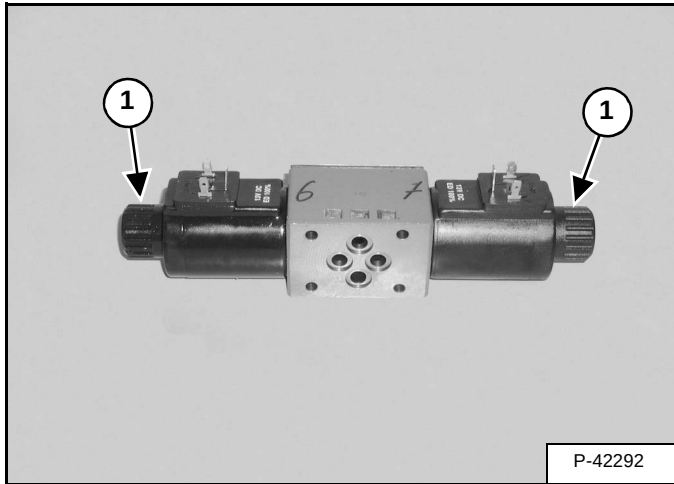

Install the nuts (Item 1) [Figure 20-110-21] on each shaft and hand tighten.

NOTE: Do not overtighten the nuts.

Figure 20-110-22

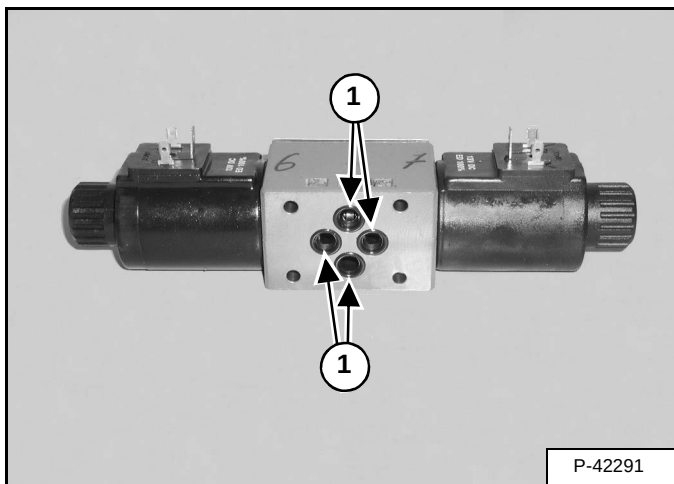


Install the four O-rings (Item 1) [Figure 20-110-22] on the housing.

BRAKE VALVE

Removal And Installation


Figure 20-120-1

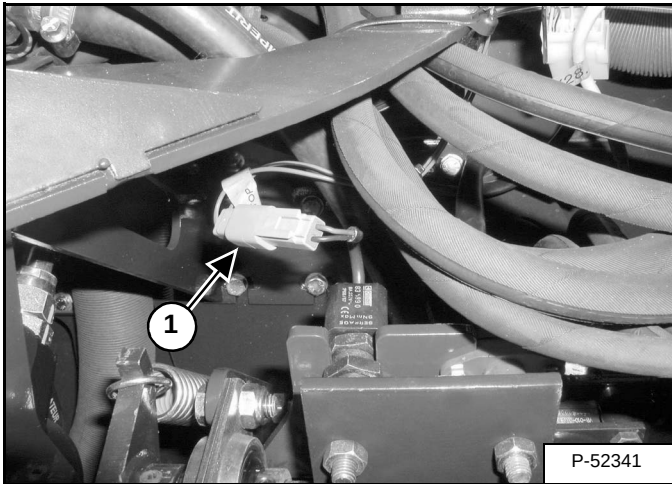

Remove the dash cover/column cover. (See "Removal And Installation" on page 50-130-1.)


Unplug the connector (Item 1) [Figure 20-120-1] from the brake light switch.

Figure 20-120-2

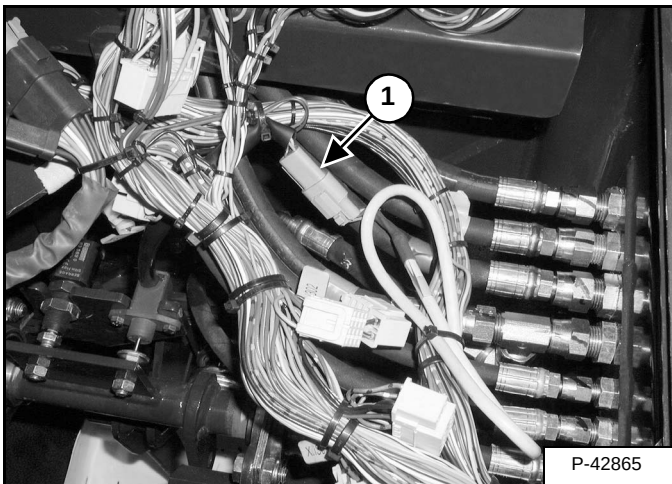


Unplug the connector (Item 1) [Figure 20-120-2] from the inching switch.

Figure 20-120-3

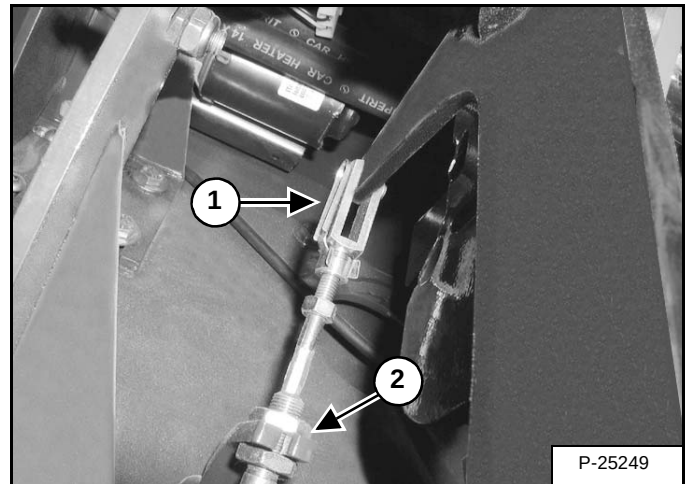

Remove the accelerator cable (Item 1) from the pedal and mounting bracket (Item 2) [Figure 20-120-3].

Figure 20-120-4

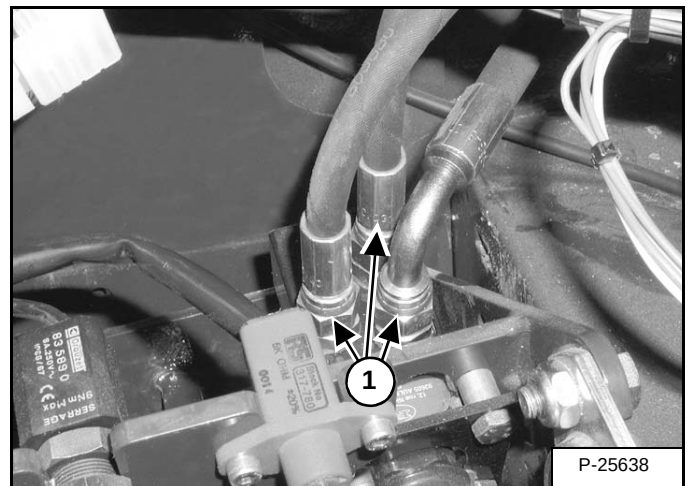

Remove the three hoses (Item 1) [Figure 20-120-4] from the brake valve.

NOTE: Mark hoses for correct installation.

IMPORTANT


When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.

I-2003-0888

BRAKE VALVE (CONT'D)

Removal and Installation (Cont'd)

Figure 20-120-5

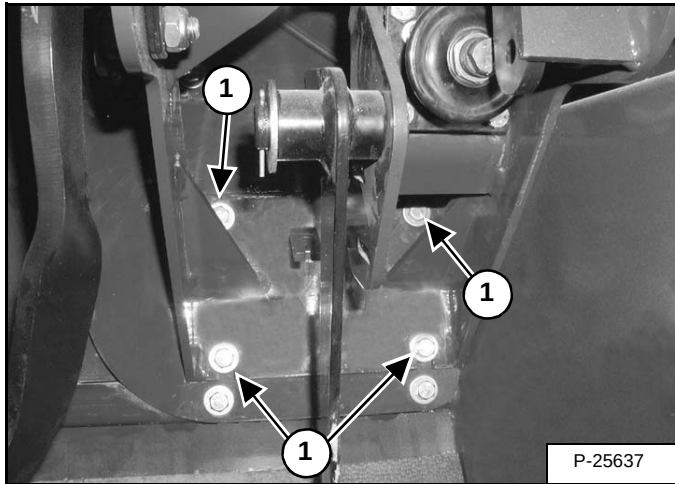


Remove the mounting bolts (Item 1) [Figure 20-120-5].

Remove the pedal assembly.


Disassembly And Assembly

Figure 20-120-6

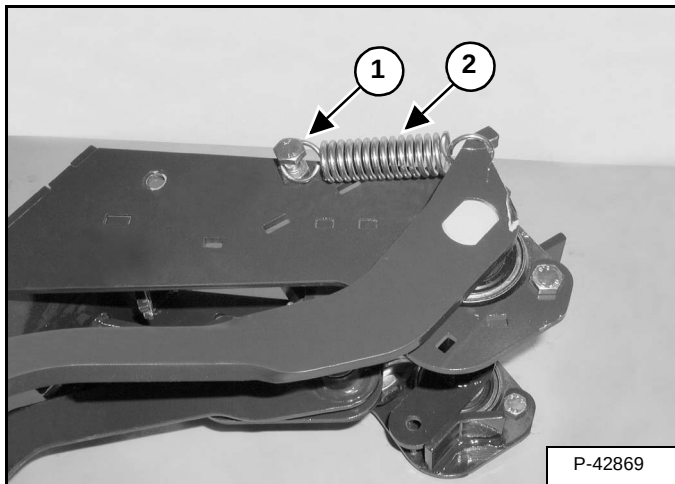


Remove the bolt (Item 1) and spring (Item 2) [Figure 20-120-6].

Figure 20-120-7

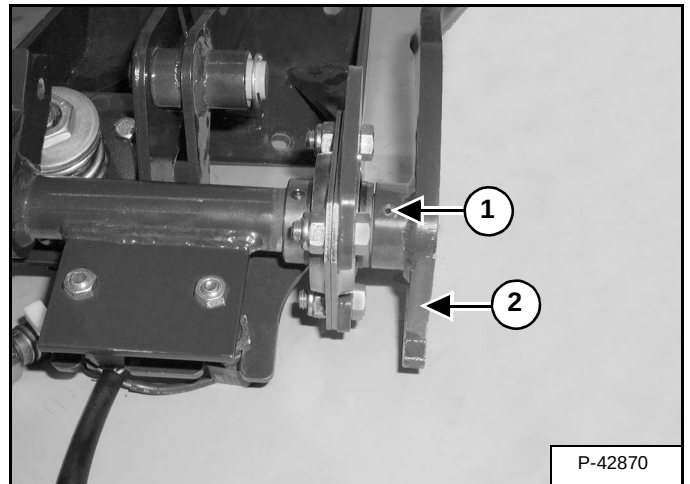

Remove the roll pin (Item 1) and pedal (Item 2) [Figure 20-120-7].

Figure 20-120-8

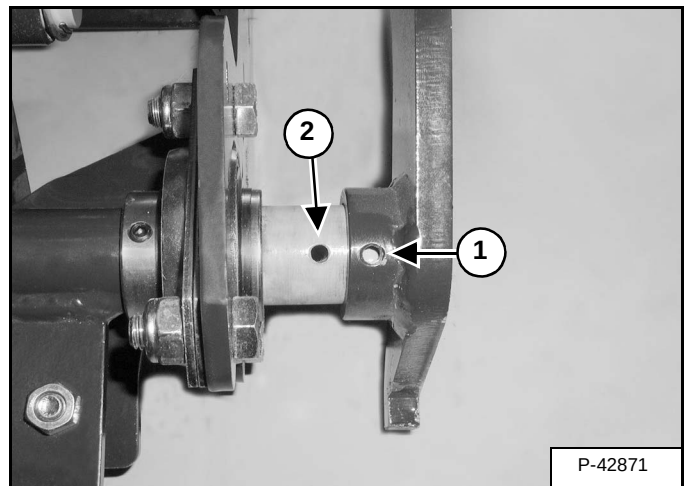


Assembly: Align the hole (Item 1) in the pedal with the hole (Item 2) [Figure 20-120-8] in the shaft.

BRAKE VALVE (CONT'D)


Disassembly And Assembly (Cont'd)

Figure 20-120-9

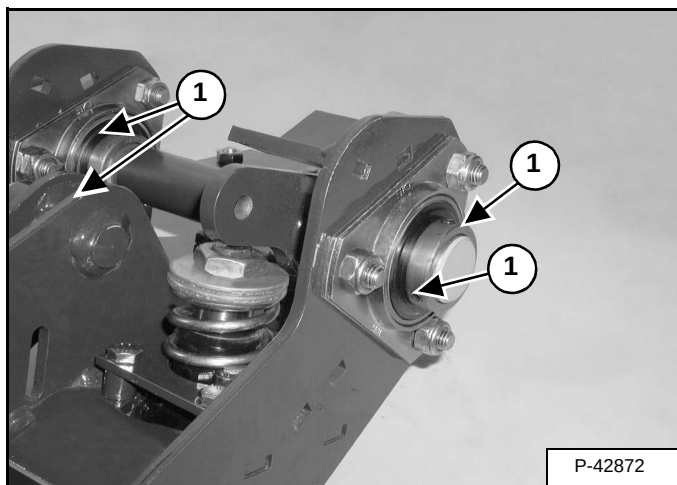


Loosen the two set screws (Item 1) [Figure 20-120-9] on the two bearings.

Figure 20-120-10

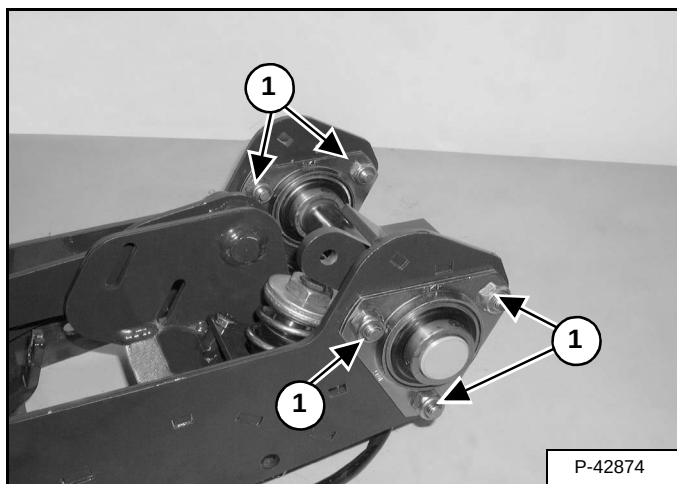


Remove the three bolts (Item 1) [Figure 20-120-10] from both bearing flanges.

Figure 20-120-11

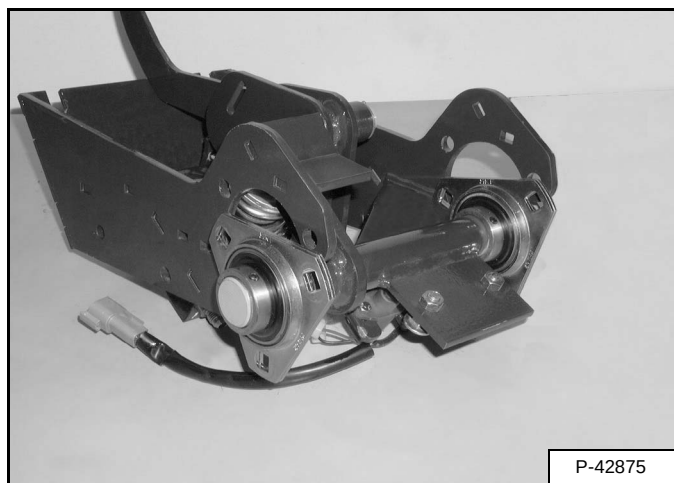

Remove the shaft and bearing assembly [Figure 20-120-11].

Figure 20-120-12

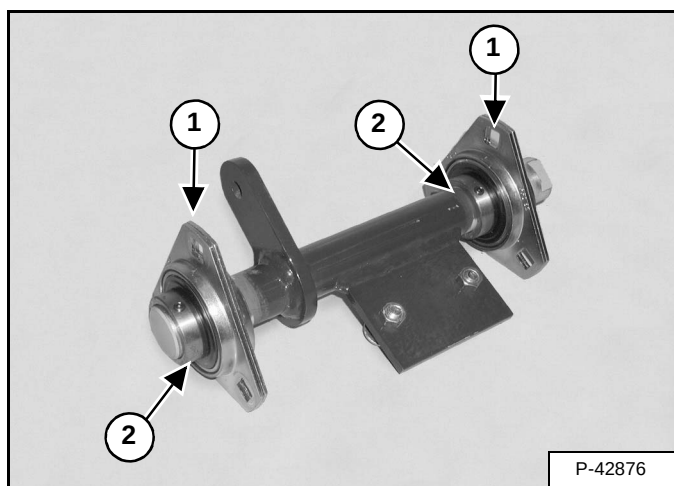


Remove the flanges (Item 1) and bearings (Item 2) [Figure 20-120-12].

BRAKE VALVE (CONT'D)


Disassembly And Assembly (Cont'd)

Figure 20-120-13

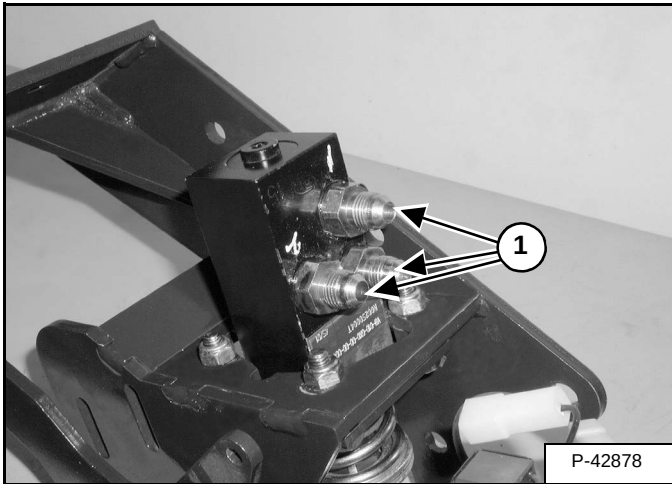


Remove the three fittings (Item 1) [Figure 20-120-13] from the brake valve.

Figure 20-120-14

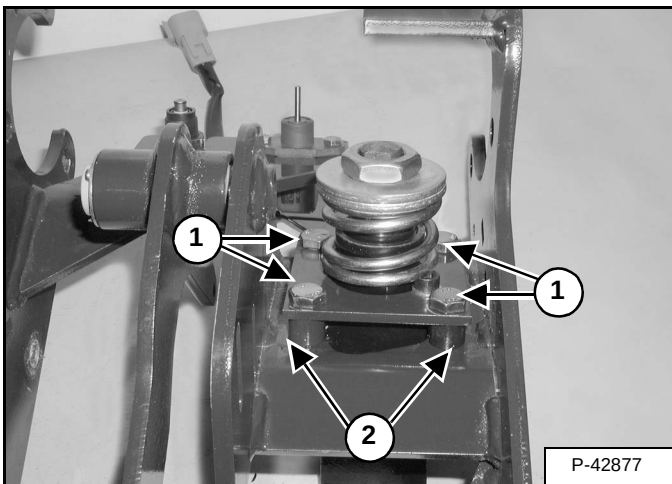

Remove the four bolts (Item 1) spacers (Item 2) [Figure 20-120-14] and nuts from the brake valve.

Figure 20-120-15

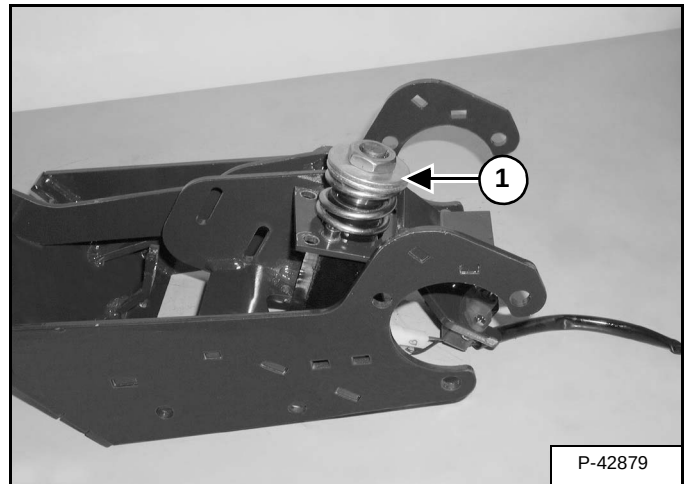

Remove the brake valve (Item 1) [Figure 20-120-15]

GEAR PUMP

Removal And Installation

Raise the boom and install the boom stop. (See "Installing The Approved Boom Stop" on page 10-150-1)

Stop the engine.

Relieve the hydraulic pressure. Drain the hydraulic reservoir. (See "Replacing Hydraulic Fluid" on page 10-100-3.)

! WARNING

Hydraulic fluid escaping under pressure can have sufficient force to enter a person's body by penetrating the skin. This can cause serious injury and possible death if proper medical treatment by a physician familiar with this injury is not received immediately.


W-2145-0290

IMPORTANT

When making repairs on hydraulic system, clean the work area before disassemble and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.


I-2056-0793

Figure 20-130-1

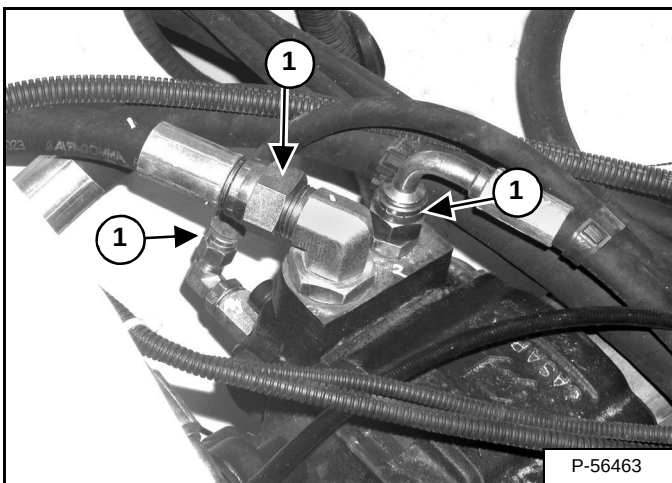


Remove the three hoses (Item 1) [Figure 20-130-1] from the backside of the pump.

Figure 20-130-2

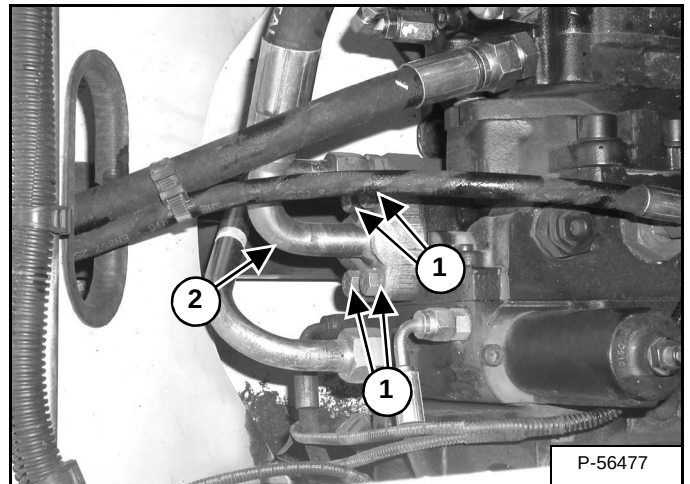

Remove the four bolts (Item 1) and remove the hose (Item 2) [Figure 20-130-2] from the hydrostatic pump.

Figure 20-130-3

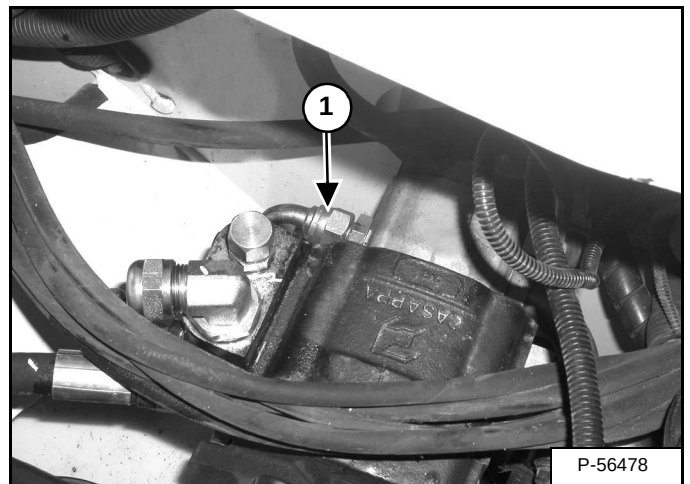


Remove the hose (Item 1) [Figure 20-130-3] from the backside of the gear pump.

GEAR PUMP (CONT'D)


Removal And Installation (Cont'd)

Figure 20-130-4

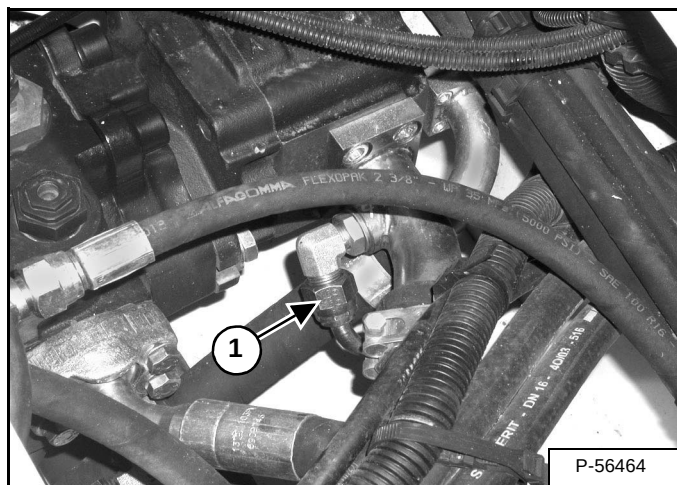


Remove the hose (Item 1) [Figure 20-130-4].

Figure 20-130-5

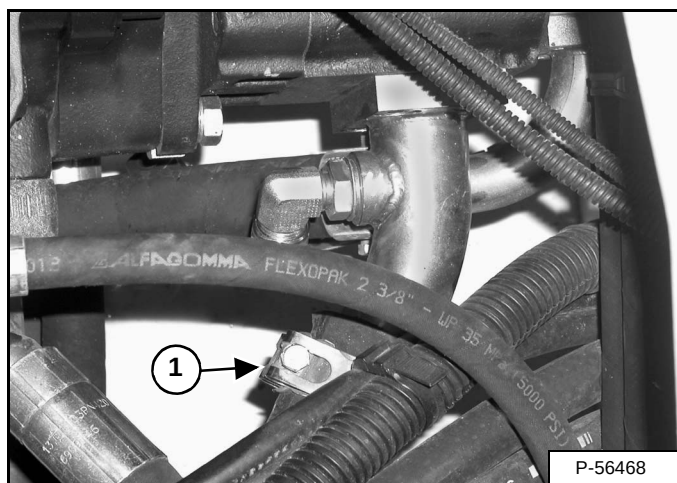


Loosen the hose clamp (Item 1) [Figure 20-130-5] and remove the hose.

Figure 20-130-6

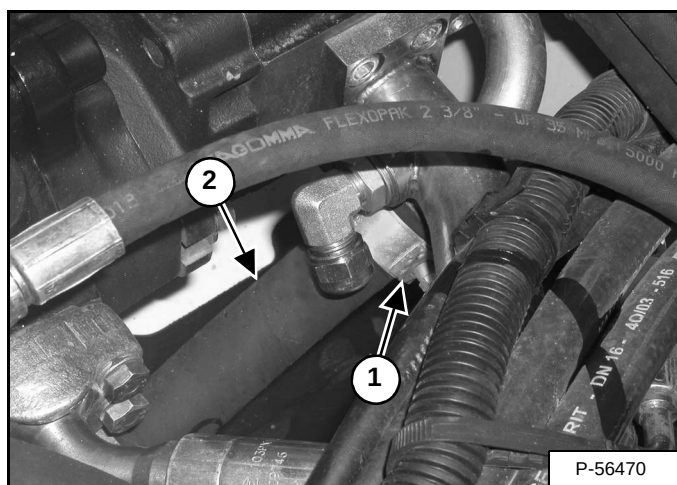

Loosen the hose clamp (Item 1) and remove the hose (Item 2) [Figure 20-130-6].

Figure 20-130-7

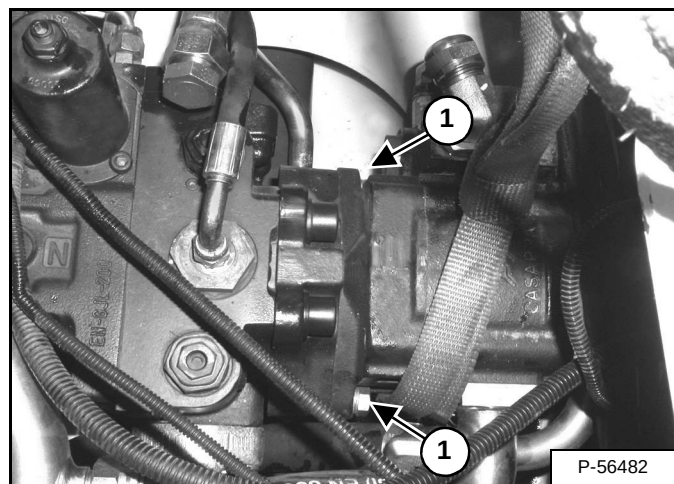

Install a chain hoist and lifting strap to lift and support the gear pump [Figure 20-130-7].

Remove the two mounting bolts (Item 1) [Figure 20-130-7] from the gear pump.

Installation: Tighten the mounting bolts to 52-59 ft.-lbs. (50-80 Nm) torque.

GEAR PUMP (CONT'D)

Removal And Installation (Cont'd)

Figure 20-130-8




Remove the gear pump [Figure 20-130-8].

NOTE: It may be necessary to reposition any hose or wires.

GEAR PUMP (CONT'D)

Parts Identification

1. Fitting
2. O-ring
3. Spring
4. Spring Seat
5. Spool
6. Screen
7. Orifice Spool
8. Bolt
9. Housing
10. Plug
11. Bolt
12. Washer
13. Cover
14. Seal Ring
15. Housing
16. Backup Ring
17. Seal Ring
18. Holder
19. Gear
20. Drive Shaft
21. Mount Plate
22. Thrust Plate
23. Mount Plate
24. Seal
25. Snap ring

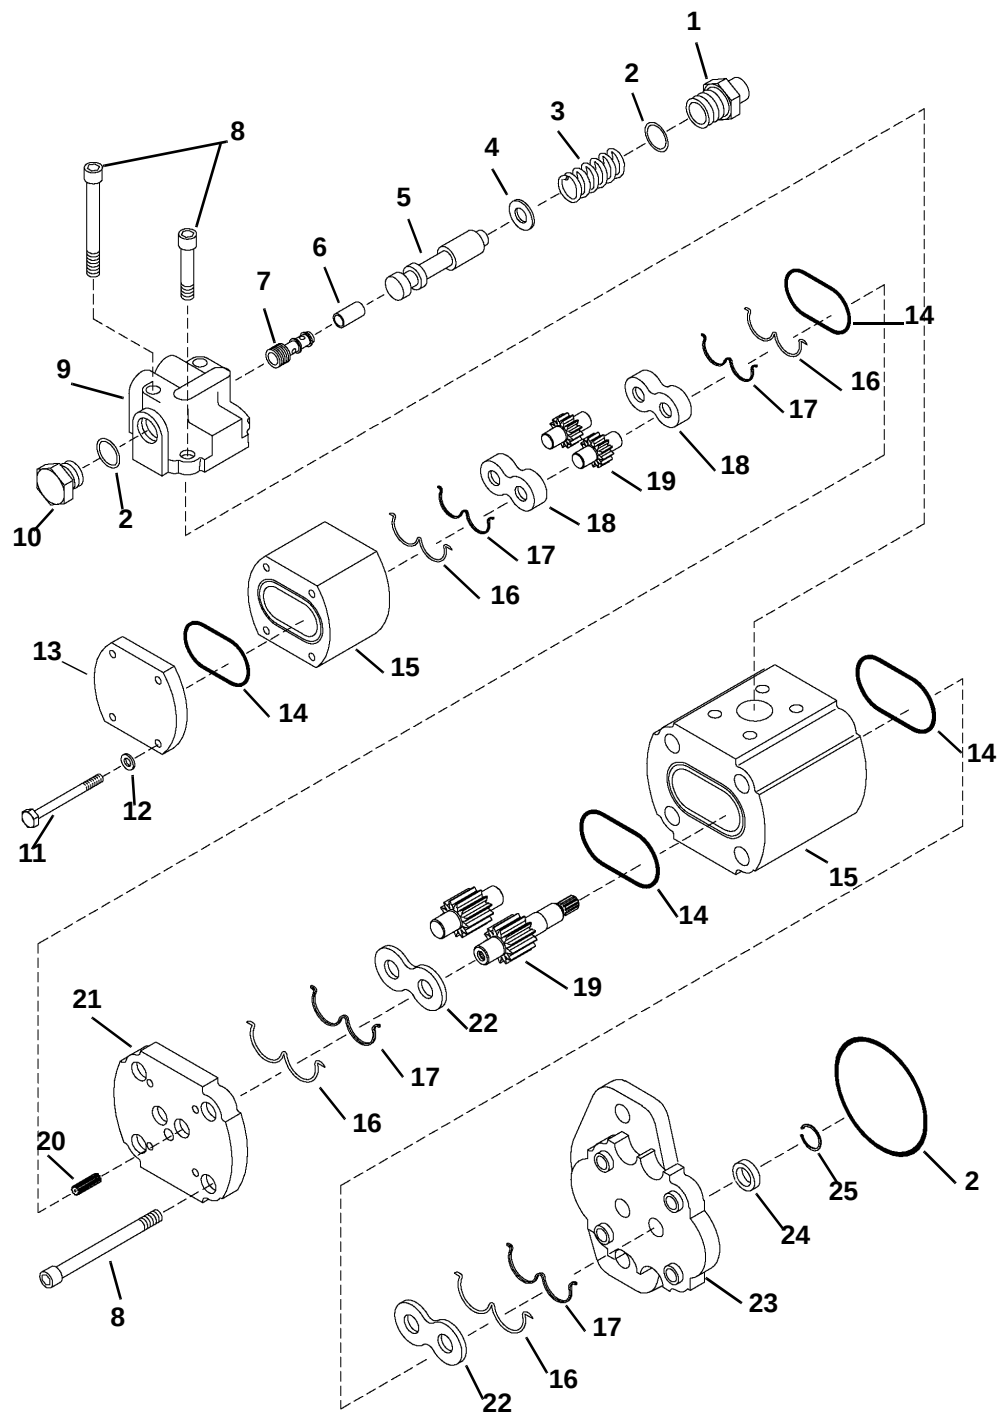

MS1423

GEAR PUMP (CONT'D)


Disassembly And Assembly

IMPORTANT

When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.


I-2003-0888

Figure 20-130-9

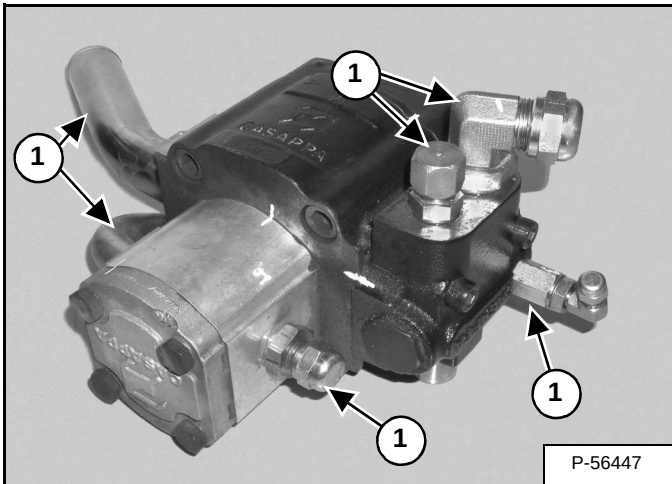

Mark the pump housing for correct assembly and remove the fittings (Item 1) [Figure 20-130-9].


Figure 20-130-10

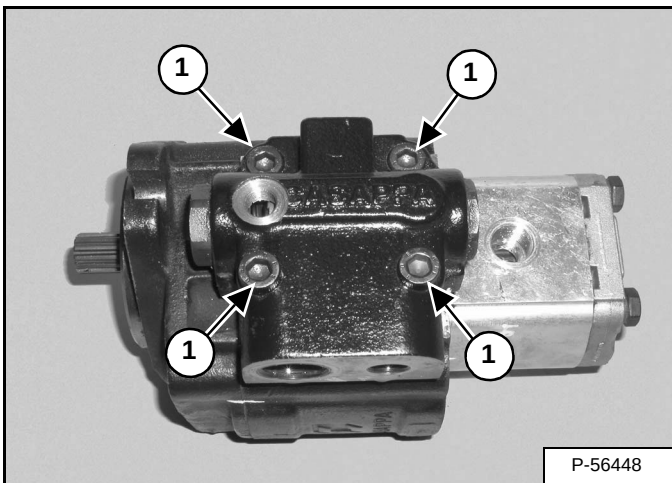

Remove the four bolts (Item 1) [Figure 20-130-10].


Assembly: Tighten the bolts to 25 ft.-lbs. (33 Nm) torque.

Figure 20-130-11

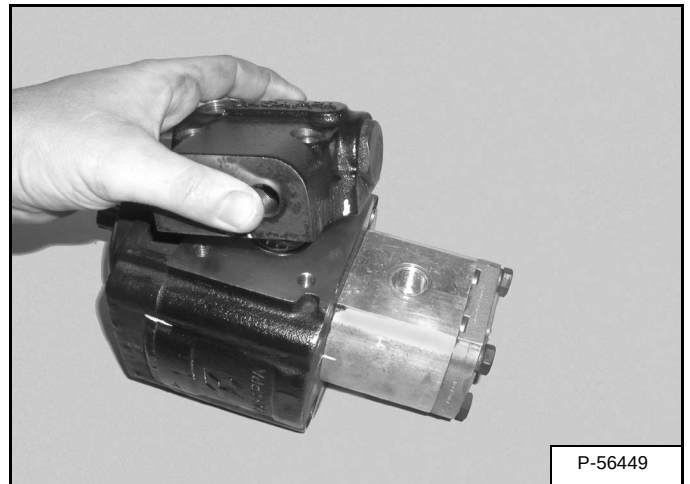

Remove the flow divider from the housing [Figure 20-130-11].

Figure 20-130-12

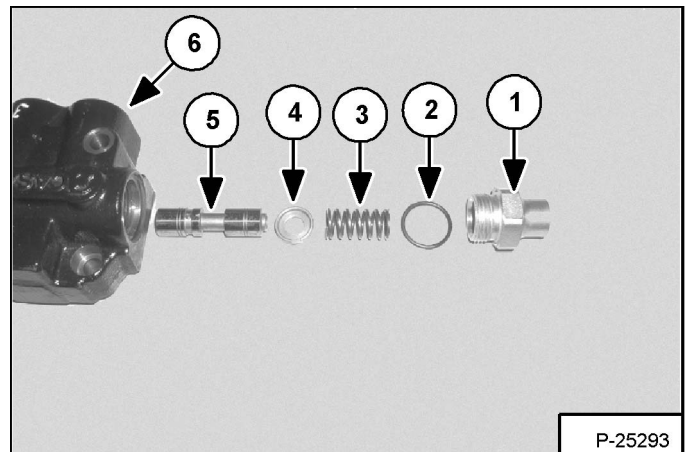


Remove the fitting (Item 1), O-ring (Item 2), spring (Item 3), spring seat (Item 4) and spool (Item 5) from the housing (Item 6) [Figure 20-130-12].

NOTE: Always use new O-rings.

GEAR PUMP (CONT'D)

Disassembly And Assembly (Cont'd)

Figure 20-130-13

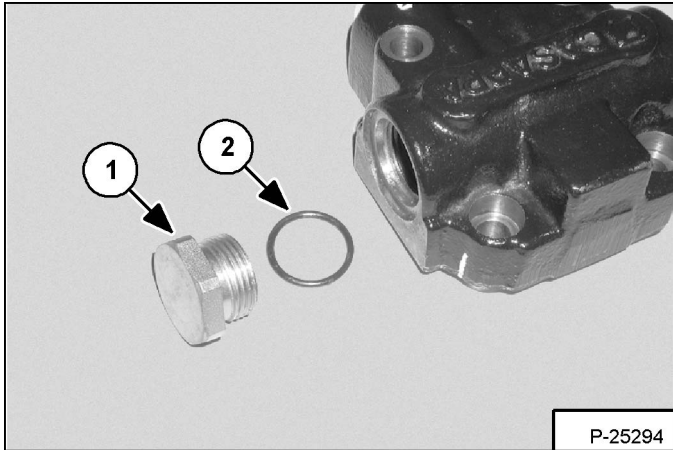

Remove the plug (Item 1) and O-ring (Item 2) [Figure 20-130-13] from the housing.

Figure 20-130-14


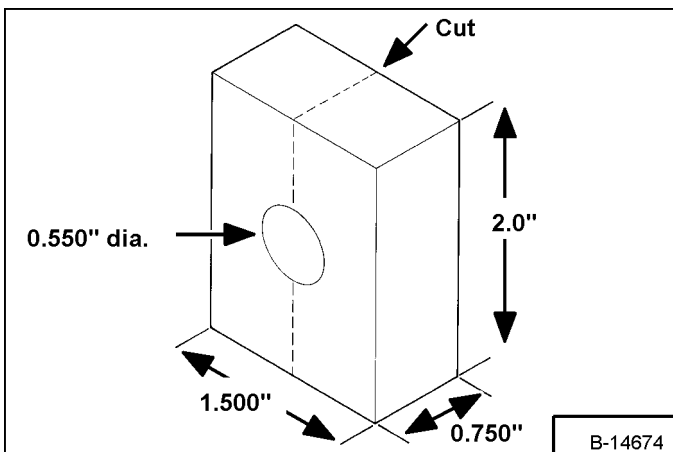


Figure 20-130-15

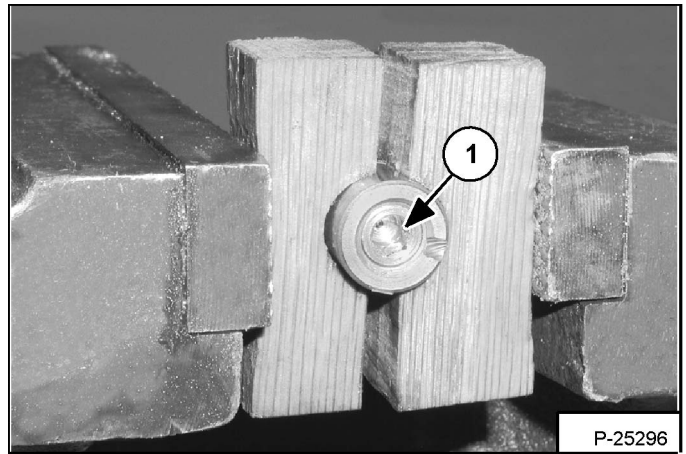


To remove the orifice assembly (Item 1) [Figure 20-130-15] from the spool, a holding fixture will have to be made from a 0.750 inch thick x 1.500 inches wide x 2.0 inches long (19 mm) thick x 38 mm wide x 50 mm long) piece of hardwood. Drill a 0.550 inch (14 mm) hole in the center of the hardwood block. Cut the block lengthwise [Figure 20-130-14].

Place both halves of the hardwood block around the spool. Clamp the blocks in a vise [Figure 20-130-15].

NOTE: Do not use anything other than hardwood blocks to grip the spool, or the spool will be damaged.

Figure 20-130-16

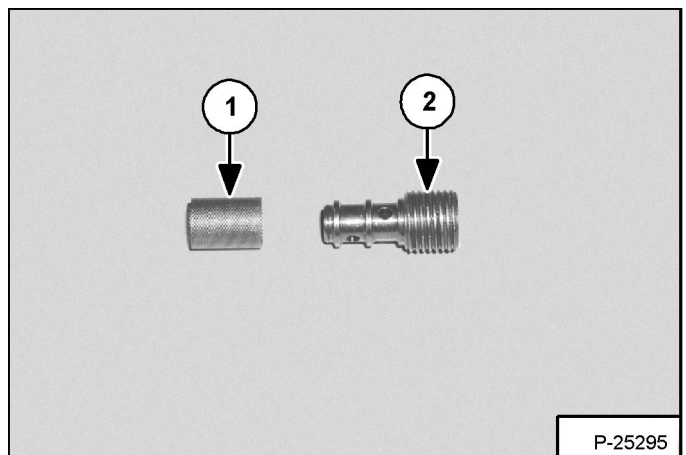


Remove the screen (Item 1) from the orifice (Item 2) [Figure 20-130-16] and clean.

GEAR PUMP (CONT'D)


Disassembly And Assembly (Cont'd)

Figure 20-130-17

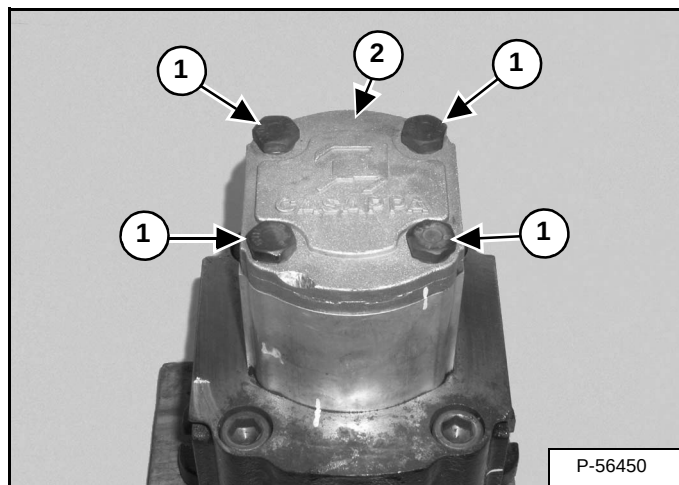


Remove the four bolts (Item 1) and cover (Item 2) [Figure 20-130-17].

Figure 20-130-18

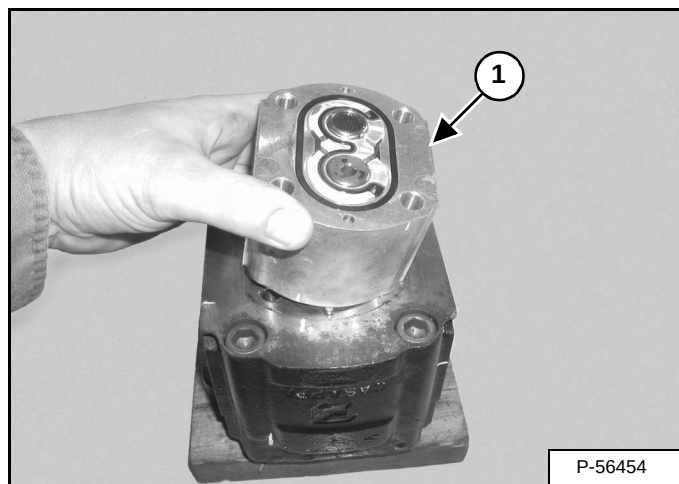

Remove the housing/gear assembly (Item 1) [Figure 20-130-18] from the main housing.


Figure 20-130-19

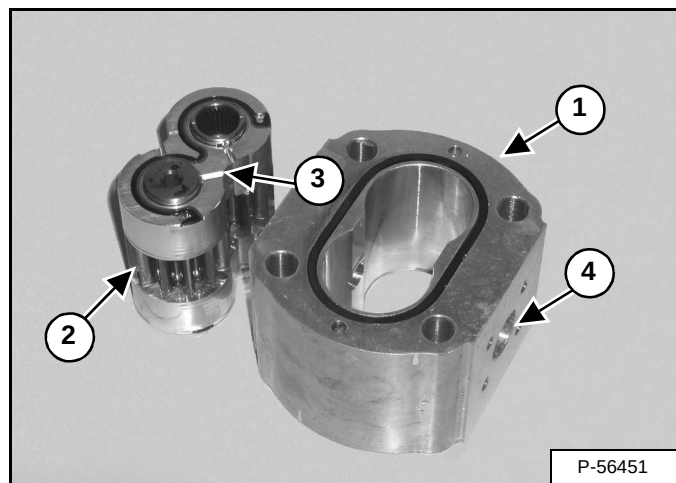

Remove the housing (Item 1) from the gear assembly (Item 2) [Figure 20-130-19].

Assembly: The position of the small opening (Item 3) on the gear holders will point towards the large port (Item 4) [Figure 20-130-19] on the housing.

Figure 20-130-20

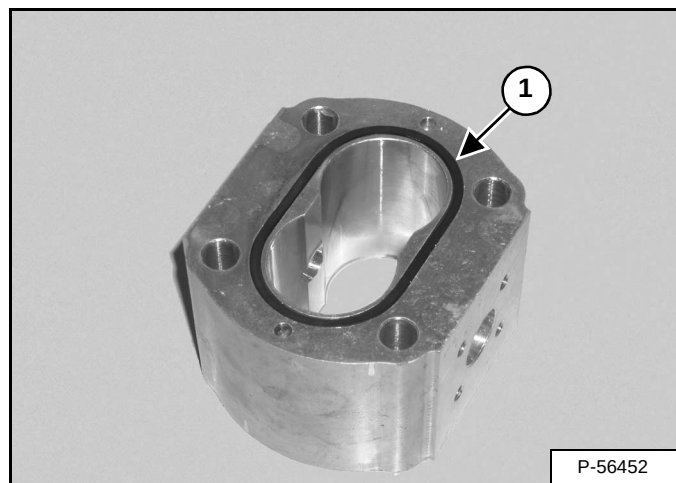


Remove both O-rings (Item 1) [Figure 20-130-20] from the housing.

GEAR PUMP (CONT'D)

Disassembly And Assembly (Cont'd)


Figure 20-130-21

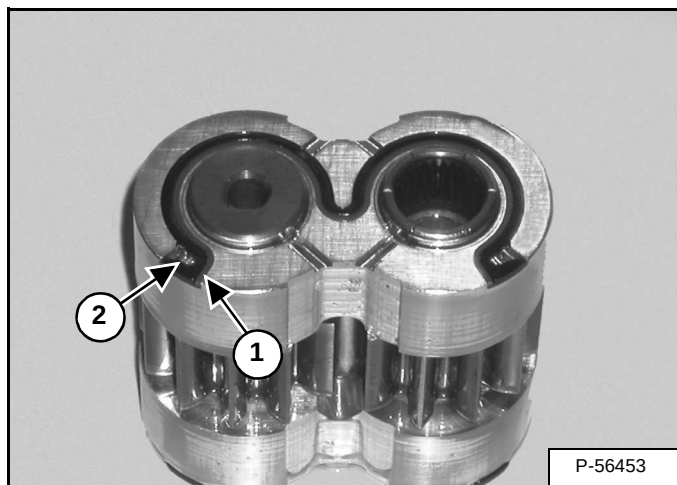

Remove the backup ring (Item 1) and seal ring (Item 2) [Figure 20-130-21] from the gear holder.


Assembly: The seal ring (Item 2) [Figure 20-130-21] is installed onto the gear holder first followed by the backup ring.

Figure 20-130-22

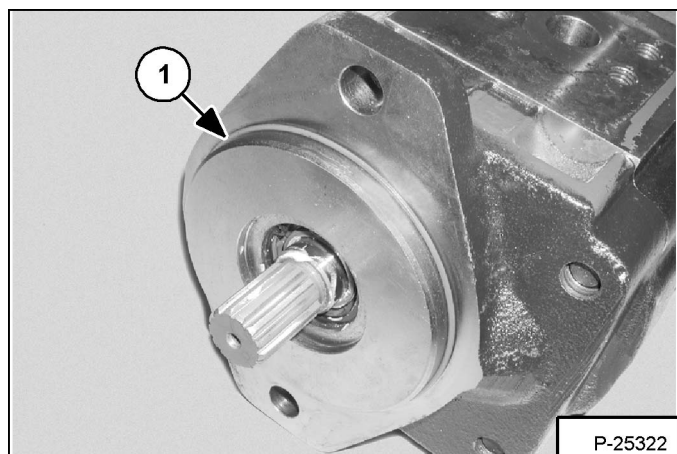

Remove and discard the O-ring (Item 1) [Figure 20-130-22] from the flange.


Figure 20-130-23

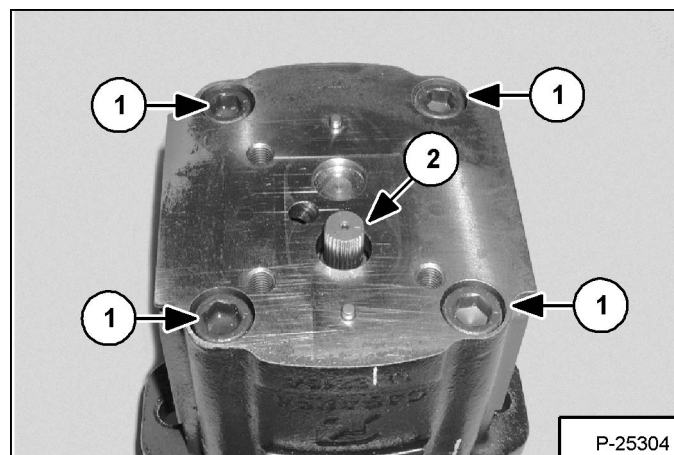

Remove the four bolts (Item 1) and drive shaft (Item 2) [Figure 20-130-23].

Assembly: Tighten the bolts to 25 ft.-lbs. (33 Nm) torque.

Figure 20-130-24

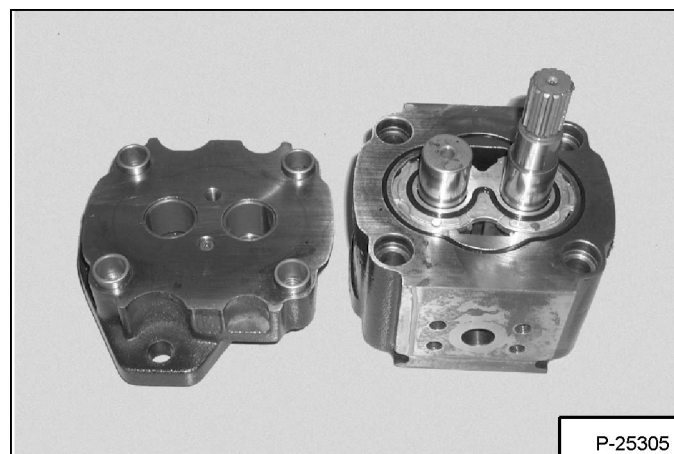


Turn the housing over and remove the mount plate [Figure 20-130-24].

GEAR PUMP (CONT'D)


Disassembly And Assembly (Cont'd)

Figure 20-130-25

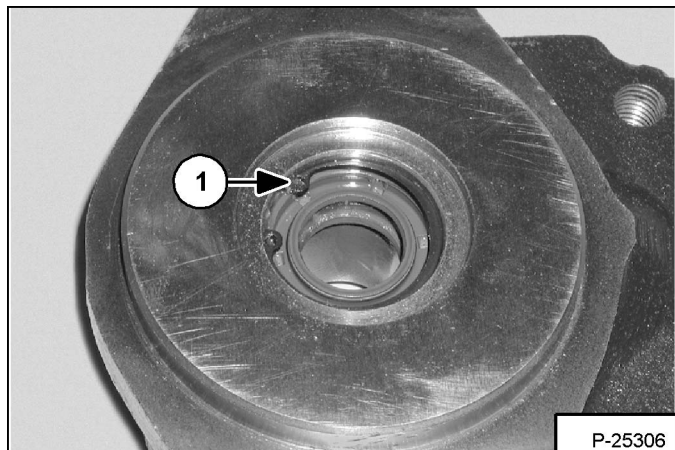


Remove the snap ring (Item 1) [Figure 20-130-25].

Figure 20-130-26

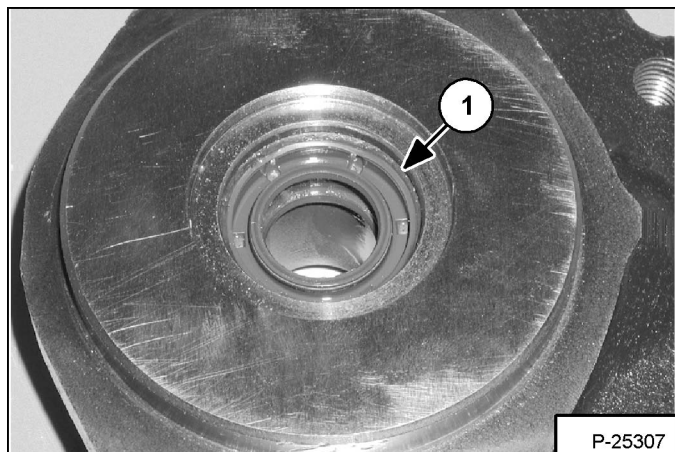

Remove the shaft seal (Item 1) [Figure 20-130-26].


Figure 20-130-27

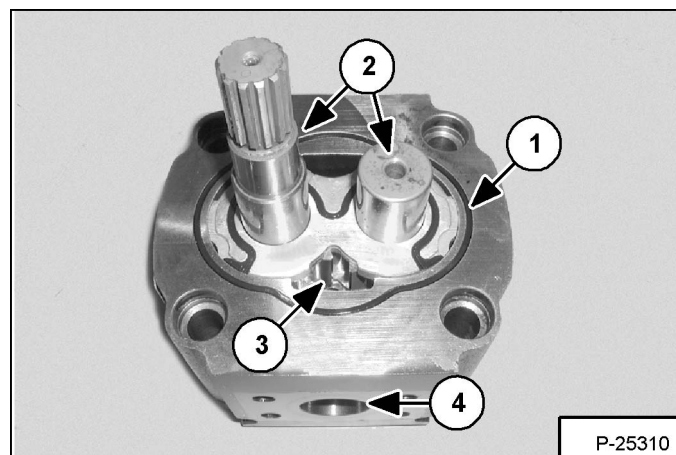

Remove the O-ring (Item 1) and gear assembly (Item 2) [Figure 20-130-27] from the housing.

Assembly: The position of the V portion (Item 3) on the thrust plate must point towards the larger port (Item 4) [Figure 20-130-27] on the housing.

Figure 20-130-28

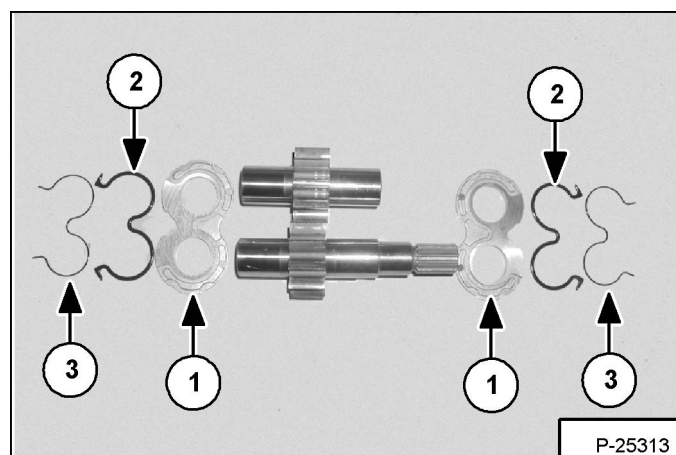

Remove the two thrust plates (Item 1), seal ring (Item 2) and backup ring (Item 3) [Figure 20-130-28] from the gears.

Assembly: The seal ring (Item 2) will be installed on the thrust plate (Item 1) first followed by the backup ring (Item 3) [Figure 20-130-28].



Bobcat®

FAN MOTOR

Removal And Installation


IMPORTANT

When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.

I-2003-0888


Drain the radiator. (See "Replacing The Coolant" on page 10-70-2.)

Figure 20-140-1

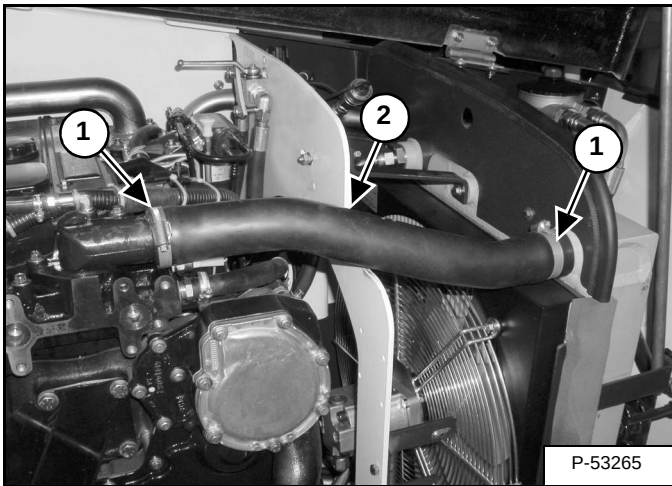


Loosen the two hose clamps (Item 1) and remove the radiator hose (Item 2) [Figure 20-140-1].

Figure 20-140-2

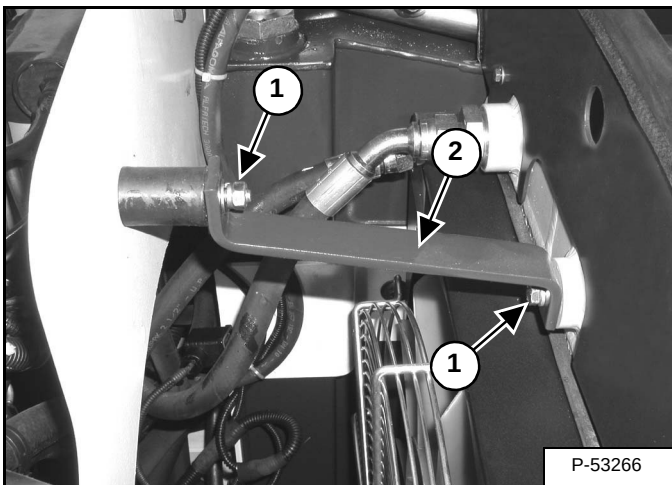


Remove the two mounting bolts (Item 1) and remove the radiator support (Item 2) [Figure 20-140-2].

Figure 20-140-3

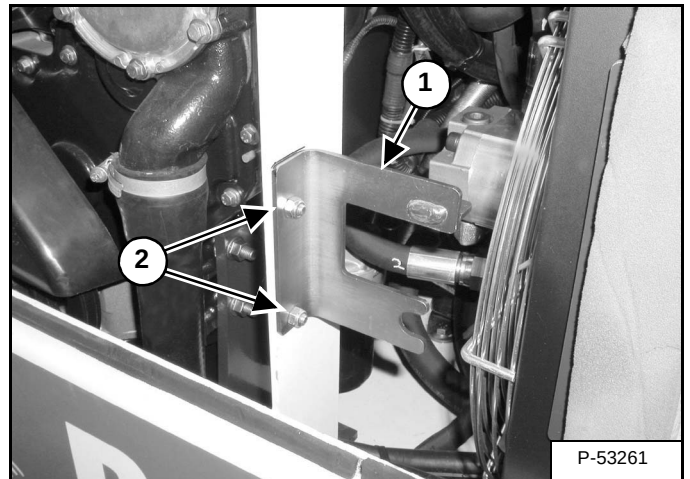

Mark the location of the hood latch (Item 1). Remove the two mounting bolts (Item 2) [Figure 20-140-3]. Remove the hood latch.

Figure 20-140-4

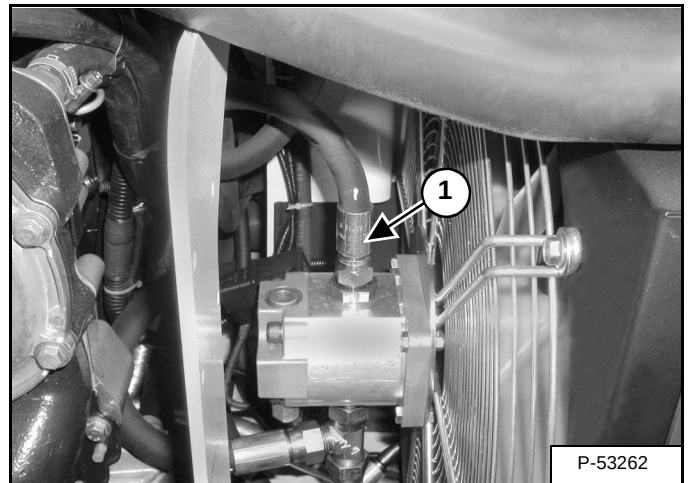


Remove the top hose (Item 1) [Figure 20-140-4] from the fan motor.

FAN MOTOR (CONT'D)


Removal And Installation (Cont'd)

Figure 20-140-5

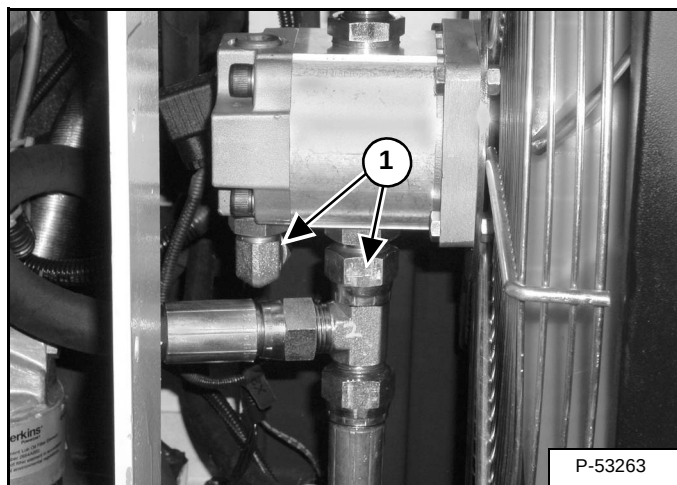


Remove the three hoses (Item 1) [Figure 20-140-5] from the bottom of the fan motor.

Figure 20-140-6

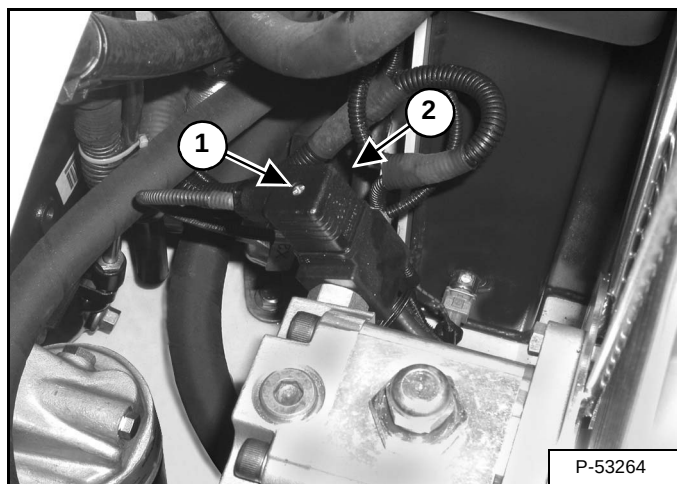


Loosen the screw (Item 1) and unplug the connector (Item 2) [Figure 20-140-6] (only for 2 speed fan motor).

Figure 20-140-7

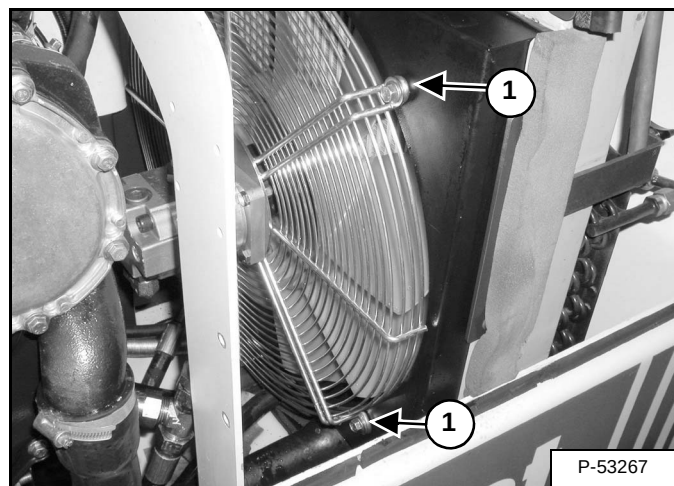

Remove the two bolts (Item 1) [Figure 20-140-7] (both sides) from the fan guard.

Figure 20-140-8

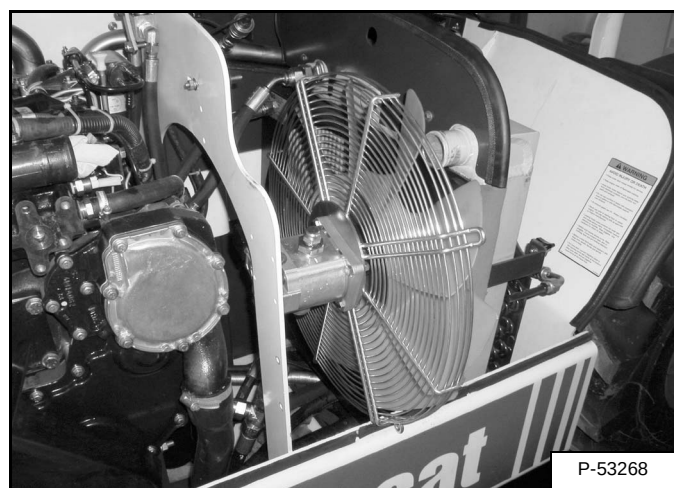


Tilt the cooler forward and carefully remove the fan assembly [Figure 20-140-8].

FAN MOTOR (CONT'D)

Removal And Installation (Cont'd)


Figure 20-140-9

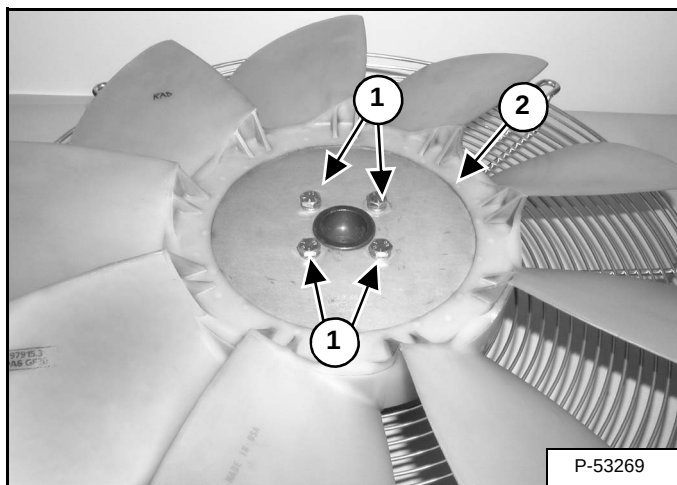

Remove the four bolts (Item 1) and remove the blade assembly (Item 2) [Figure 20-140-9] from the fan motor.


NOTE: Mark the direction of the fan for correct assembly.

Figure 20-140-10

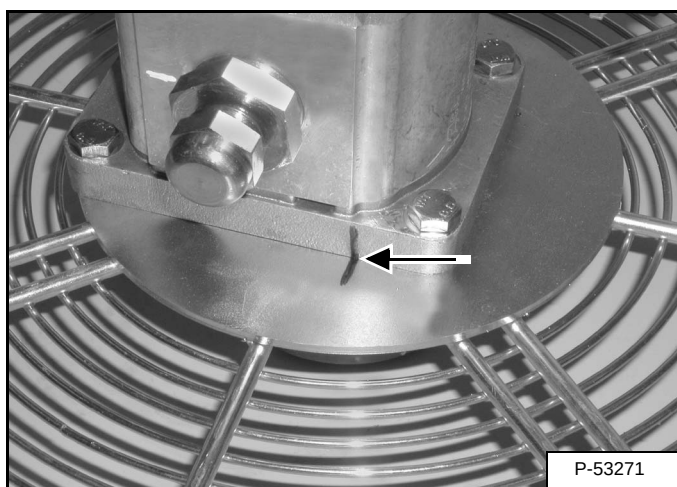


Mark the location of the fan motor to the fan guard for correct assembly [Figure 20-140-10].

Figure 20-140-11

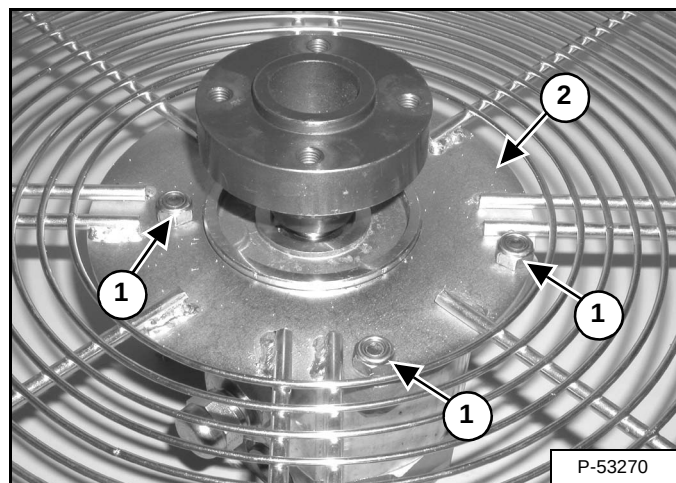

Remove the four fan guard mount bolts (Item 1) and remove the fan guard (Item 2) [Figure 20-140-11].

Figure 20-140-12

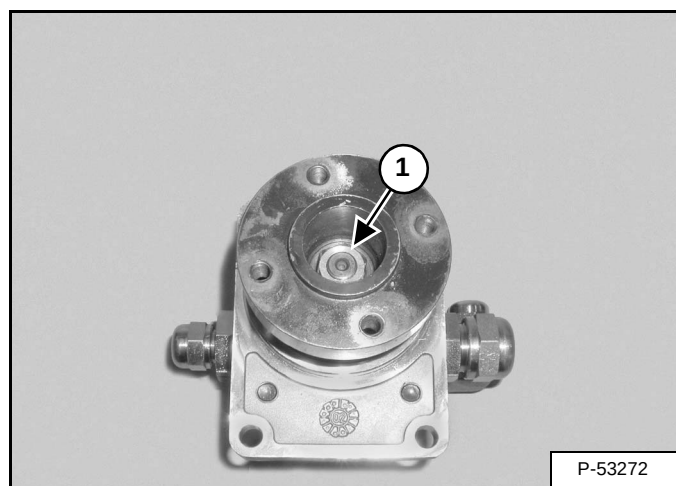


Remove the nut and lock washer (Item 1) [Figure 20-140-12].

FAN MOTOR (CONT'D)

Removal And Installation (Cont'd)

Figure 20-140-13

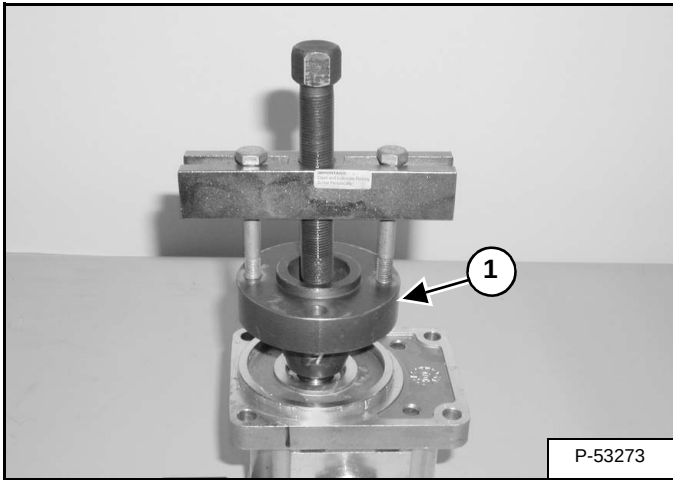


Remove the fan blade mounting flange (Item 1) **[Figure 20-140-13]** from the fan motor.


FAN MOTOR (CONT'D)

Parts Identification

1 SPEED VERSION:

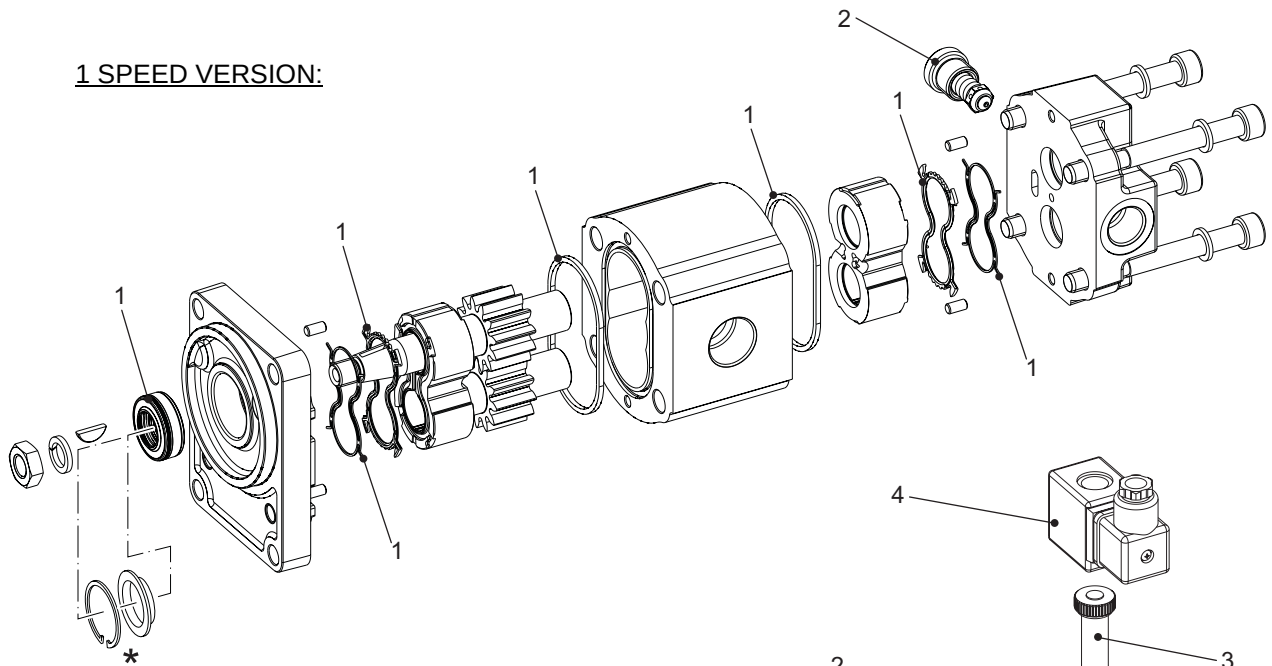

2 SPEED VERSION:

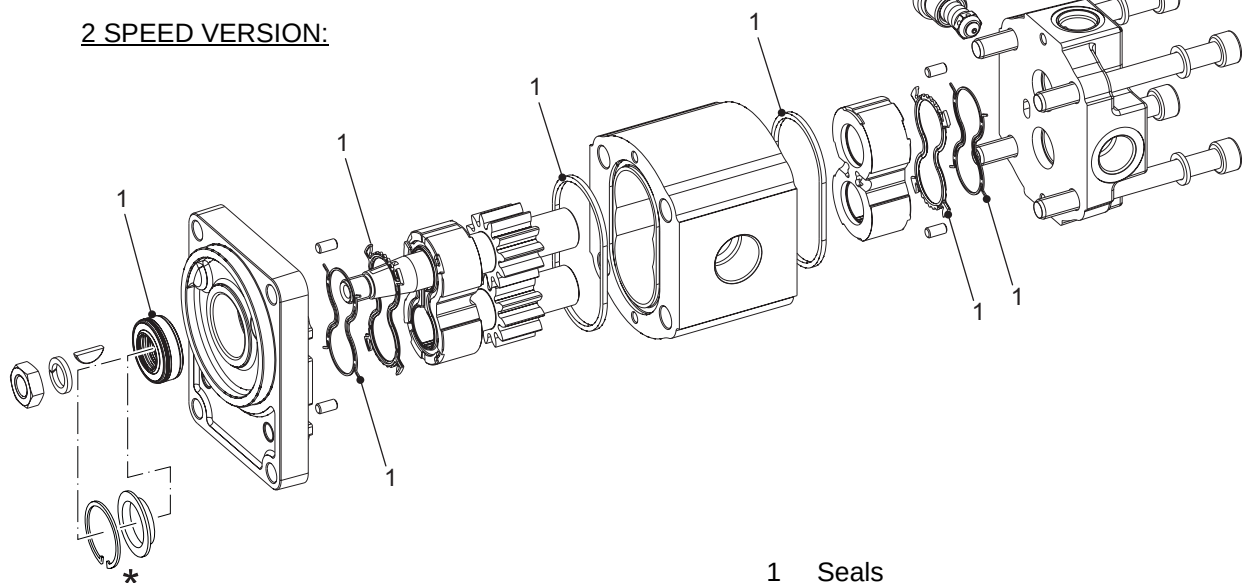

* Older models

- 1 Seals
- 2 Valve
- 3 Valve (2 speed version only)
- 4 Coil (2 speed version only)

S2754

FAN MOTOR (CONT'D)

Disassembly And Assembly (1 speed version)


IMPORTANT

When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.

I-2003-0888


Mark the housing for correct assembly.

Figure 20-140-14

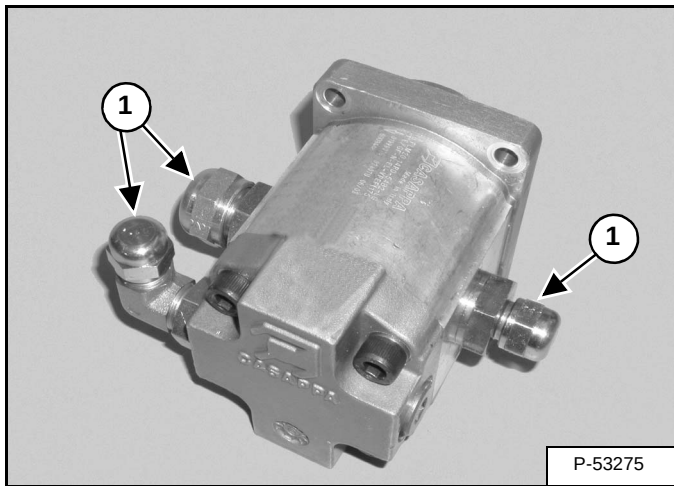


Remove the three fittings (Item 1) [Figure 20-140-14].

Figure 20-140-15

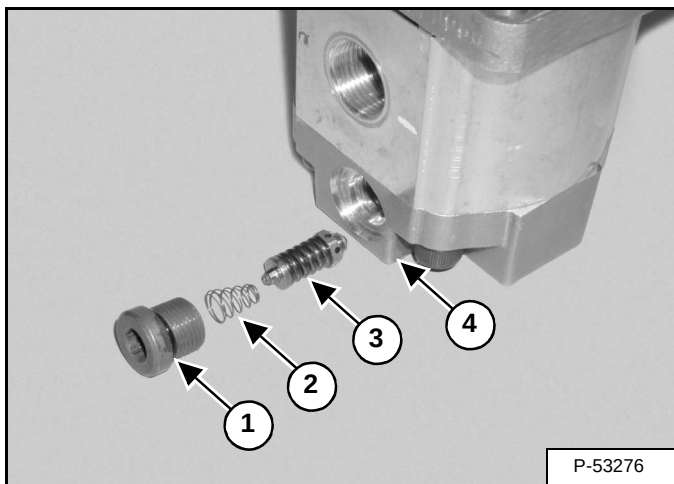

Remove the plug (Item 1), spring (Item 2) and check valve (Item 3) from the housing (Item 4) [Figure 20-140-15].

Figure 20-140-16

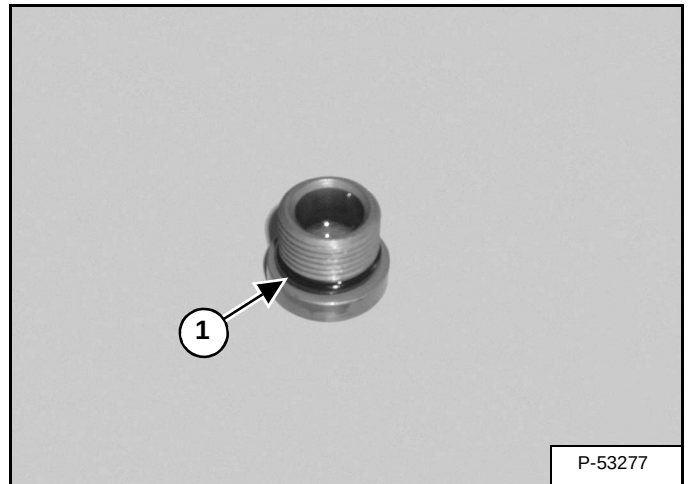


Remove the O-ring (Item 1) [Figure 20-140-16] from the plug. Replace as needed.

FAN MOTOR (CONT'D)

Disassembly And Assembly (1 speed version) (Cont'd)


Figure 20-140-17

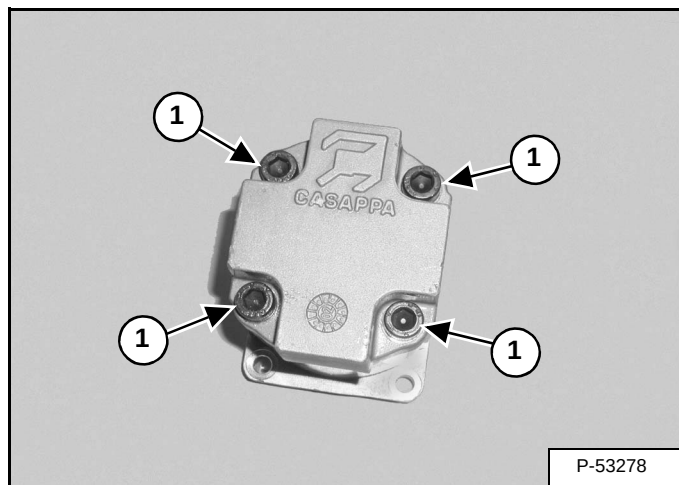

Remove the four bolts (Item 1) [Figure 20-140-17] from the end.


Assembly: Tighten bolts to 32-35 ft.-lbs. (43-47 Nm) torque.

Figure 20-140-18

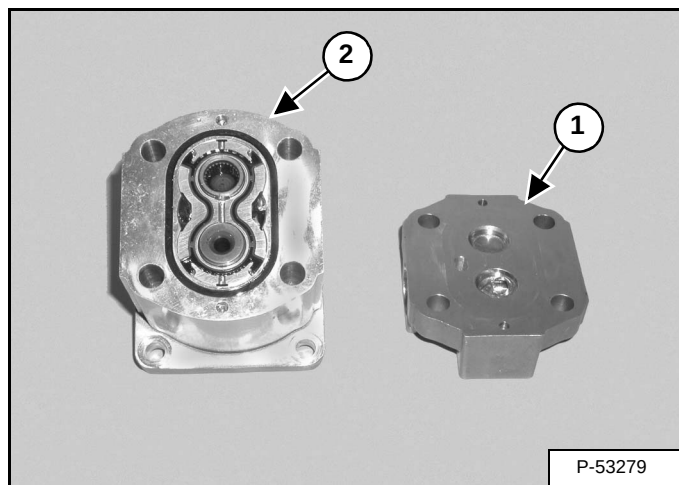


Remove the end cover (Item 1) from the main housing (Item 2) [Figure 20-140-18].

Figure 20-140-19

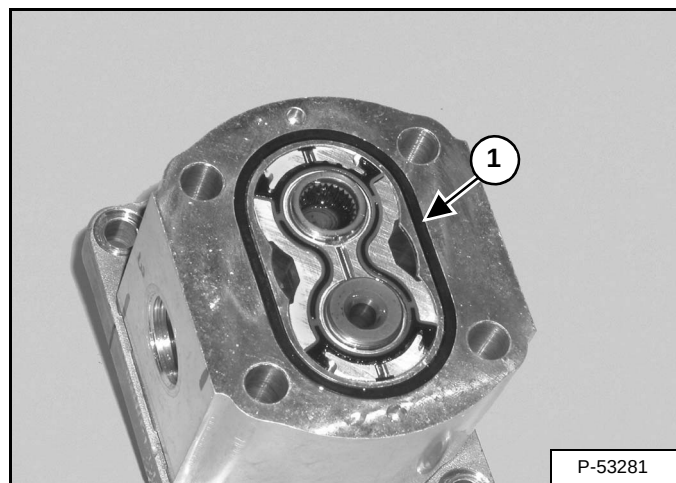

Remove the quad ring (Item 1) [Figure 20-140-19] from the housing.

Figure 20-140-20

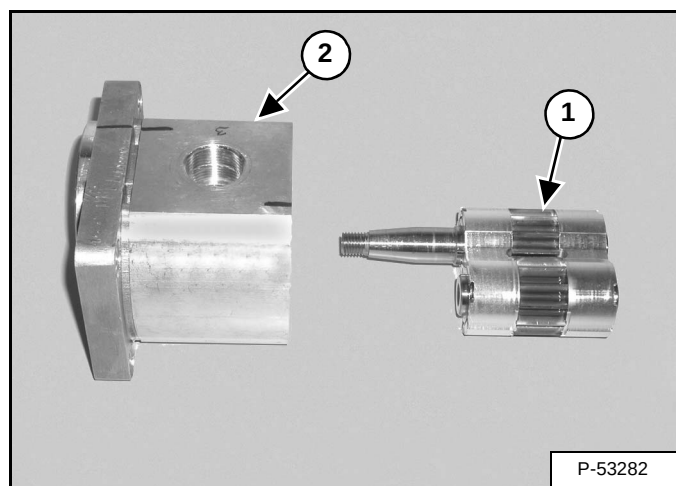


Remove the gear assembly (Item 1) from the housing (Item 2) [Figure 20-140-20].

FAN MOTOR (CONT'D)


Disassembly And Assembly (1 speed version) (Cont'd)

Figure 20-140-21

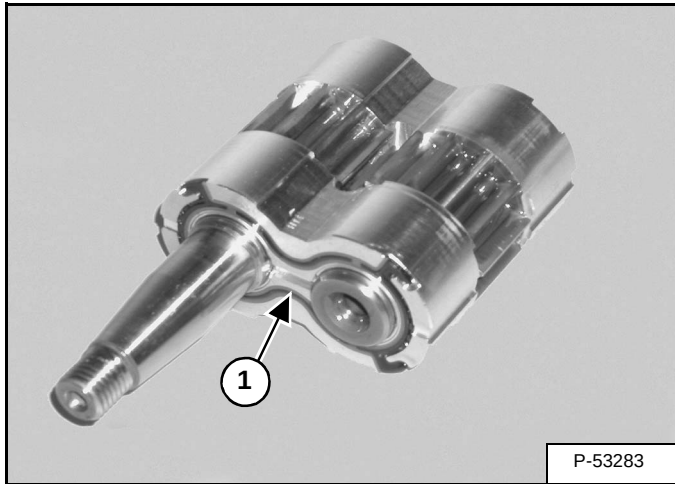

Remove the backup ring/seal (Item 1) [Figure 20-140-21] from the gear holder.


Figure 20-140-22

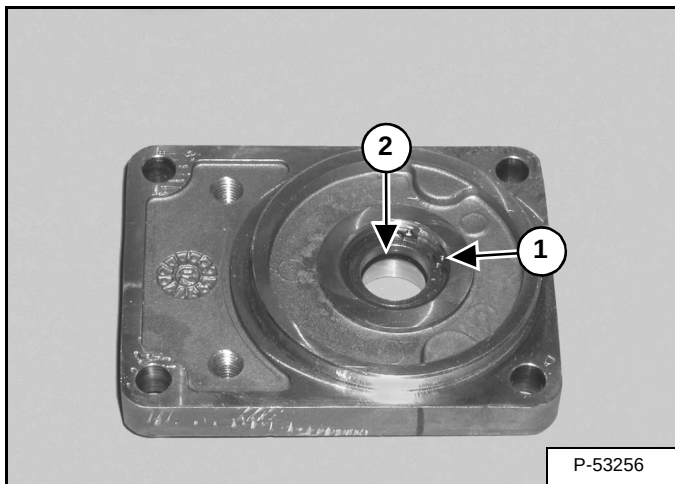

Remove the snap ring (Item 1) (Older Models Only) and remove the seal (Item 2) [Figure 20-140-22].

Assembly: The open part of the seal goes into the housing first.

Figure 20-140-23

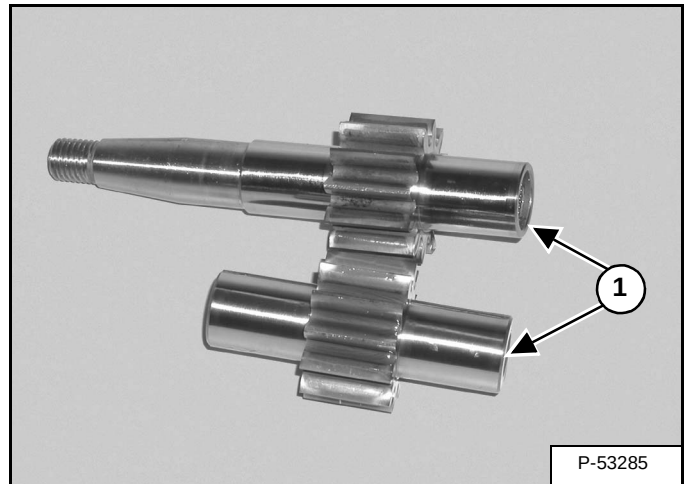

Inspect the gears (Item 1) [Figure 20-140-23] for damage or wear

FAN MOTOR (CONT'D)


Disassembly And Assembly (2 speed version)

IMPORTANT

When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.

I-2003-0888


Figure 20-140-24

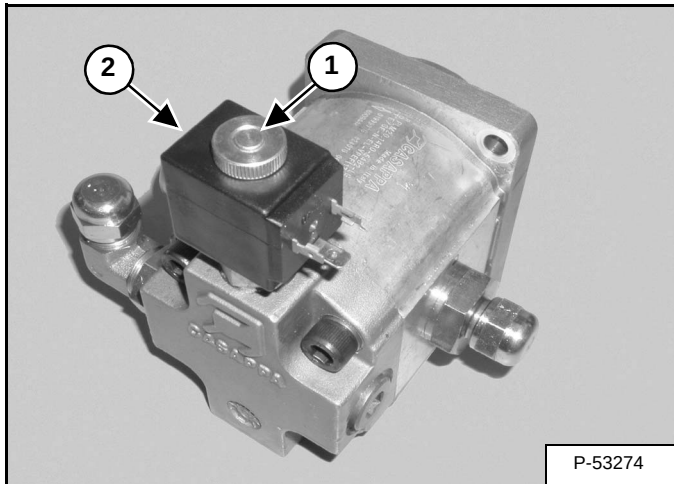

Remove the nut (Item 1) and solenoid (Item 2) [Figure 20-140-24].


Mark the housing for correct assembly.

Figure 20-140-25

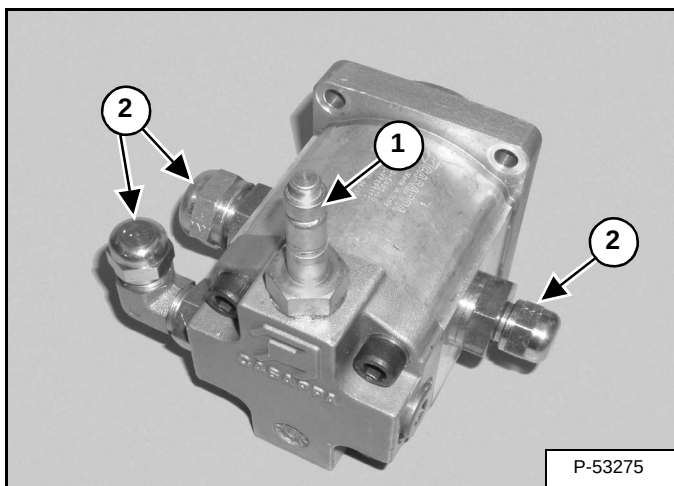


Remove the solenoid (Item 1) and three fittings (Item 2) [Figure 20-140-14].

Figure 20-140-26

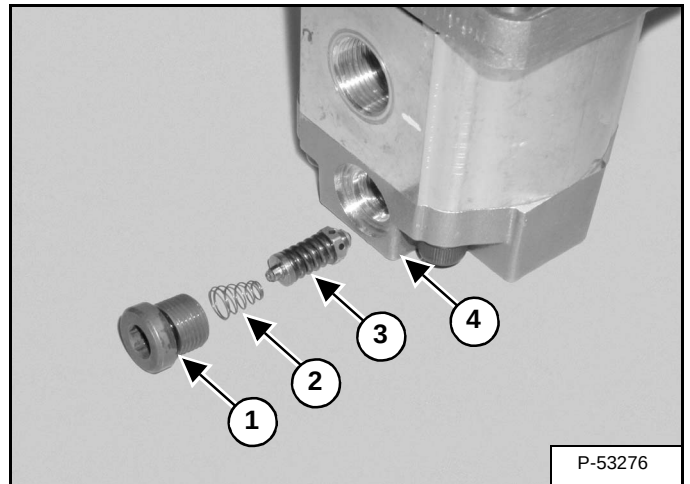

Remove the plug (Item 1), spring (Item 2) and check valve (Item 3) from the housing (Item 4) [Figure 20-140-15].

Figure 20-140-27

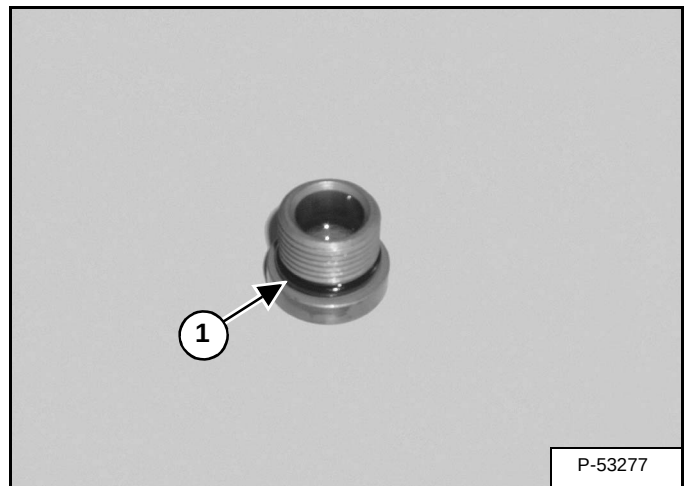


Remove the O-ring (Item 1) [Figure 20-140-16] from the plug. Replace as needed.

FAN MOTOR (CONT'D)

Disassembly And Assembly (2 speed version) (Cont'd)


Figure 20-140-28

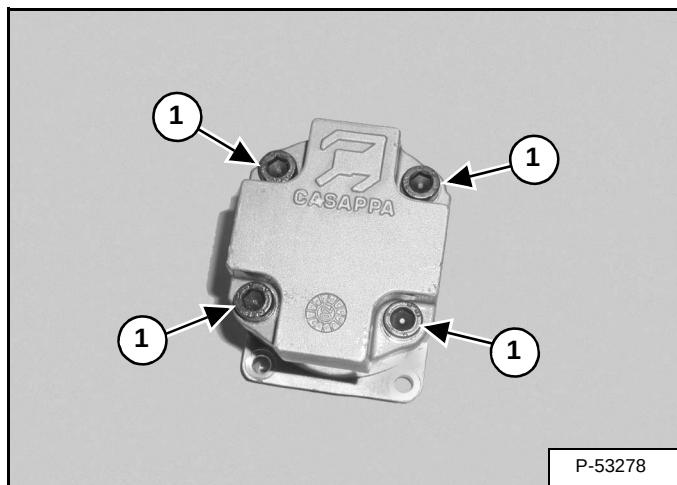

Remove the four bolts (Item 1) [Figure 20-140-17] from the end.


Assembly: Tighten bolts to 32-35 ft.-lbs. (43-47 Nm) torque.

Figure 20-140-29

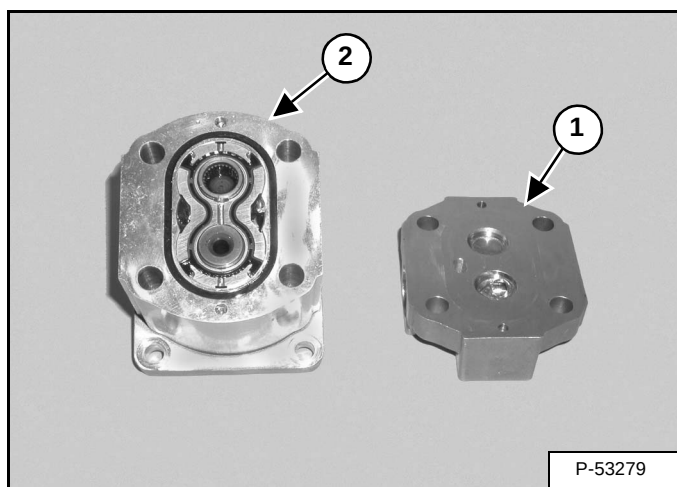


Remove the end cover (Item 1) from the main housing (Item 2) [Figure 20-140-18].

Figure 20-140-30

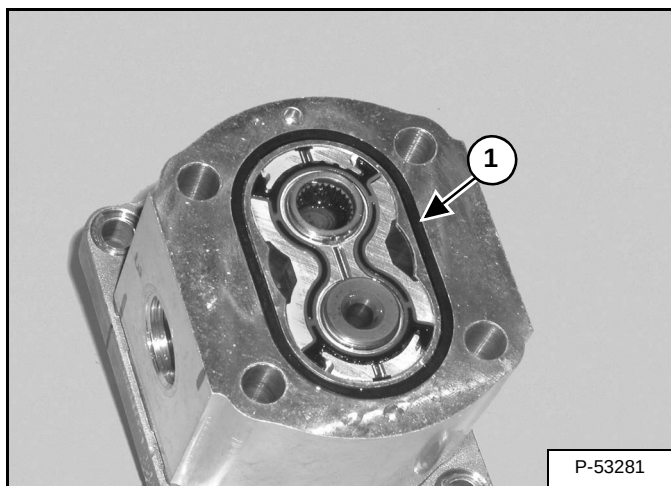

Remove the quad ring (Item 1) [Figure 20-140-19] from the housing.

Figure 20-140-31

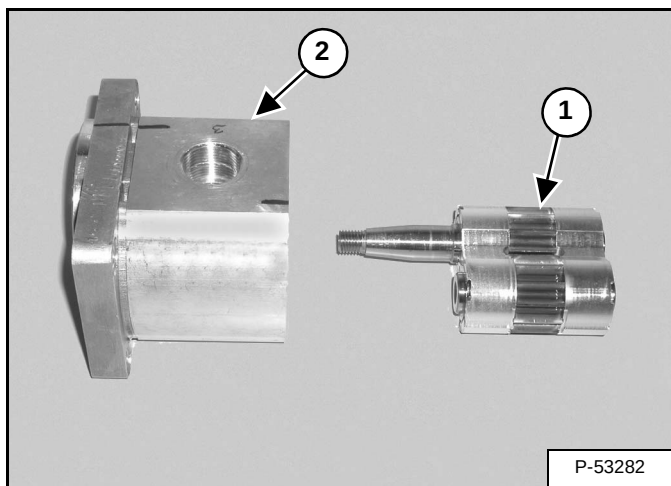


Remove the gear assembly (Item 1) from the housing (Item 2) [Figure 20-140-20].

FAN MOTOR (CONT'D)


Disassembly And Assembly (2 speed version) (Cont'd)

Figure 20-140-32

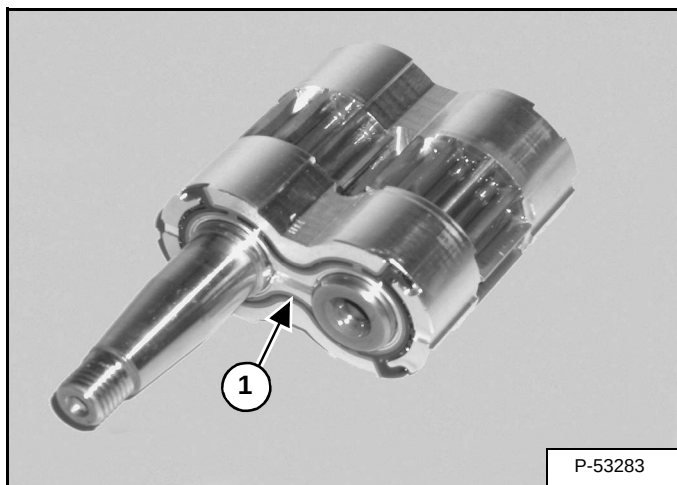

Remove the backup ring/seal (Item 1) [Figure 20-140-21] from the gear holder.


Figure 20-140-33

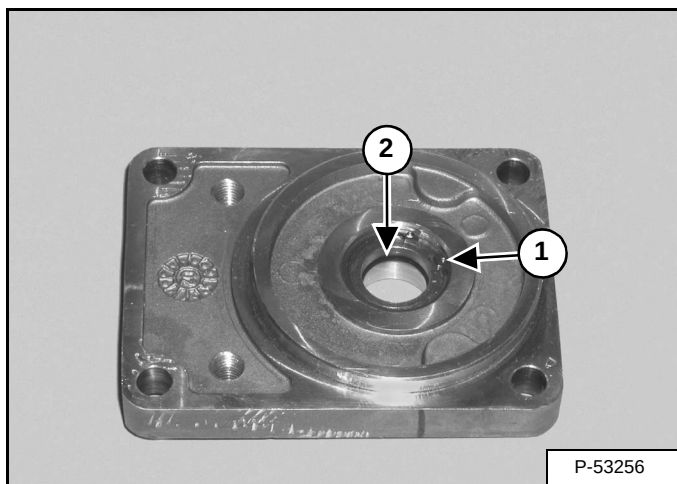

Remove the snap ring (Item 1) (Older Models Only) and remove the seal (Item 2) [Figure 20-140-22].

Assembly: The open part of the seal goes into the housing first.

Figure 20-140-34

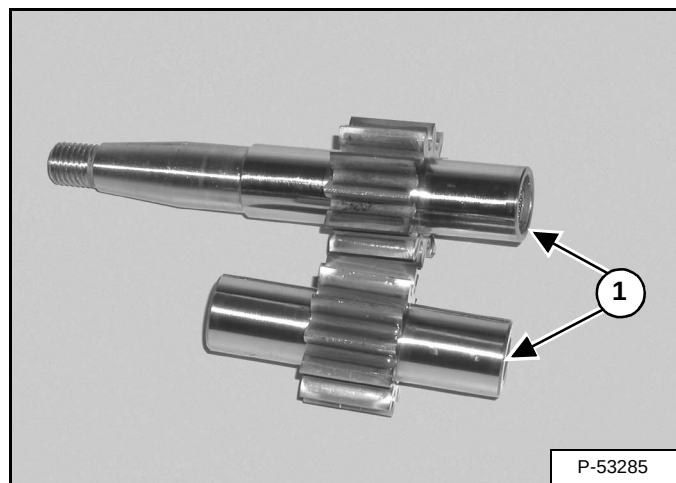


Inspect the gears (Item 1) [Figure 20-140-23] for damage or wear

HYDRAULIC RESERVOIR

Removal And Installation


Remove the engine/hydrostat assembly. (See "Removal And Installation" on page 70-80-1.)

Figure 20-150-1

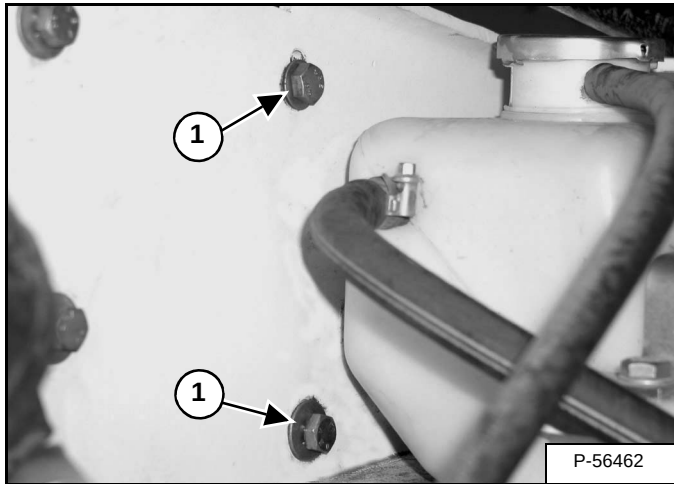


Remove the two bolts (Item 1) [Figure 20-150-1] behind the radiator overflow tank.

Figure 20-150-2

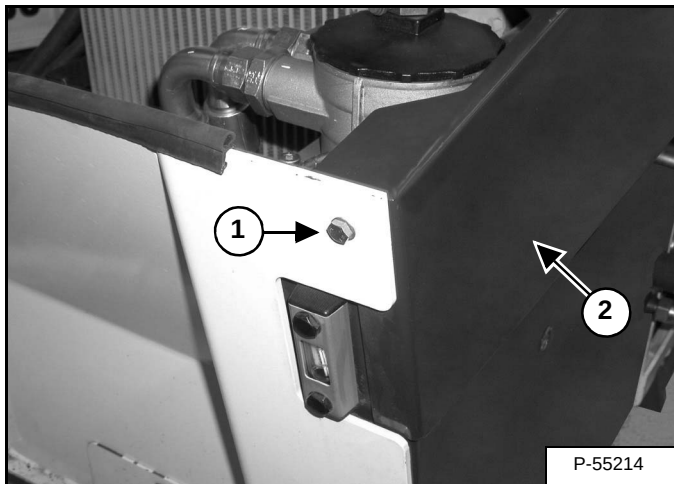

Remove the bolt (Item 1) and shield (Item 2) [Figure 20-150-2].


Figure 20-150-3

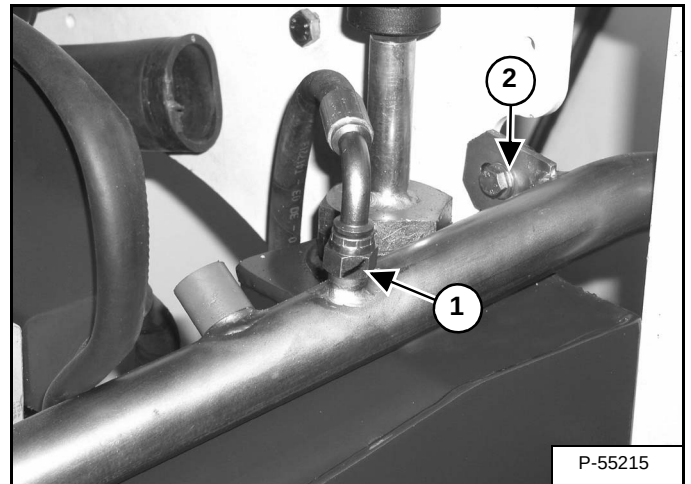

Remove the hose (Item 1) [Figure 20-150-3] from the tubeline.

Remove the mounting bolt (Item 2) [Figure 20-150-3].

Figure 20-150-4

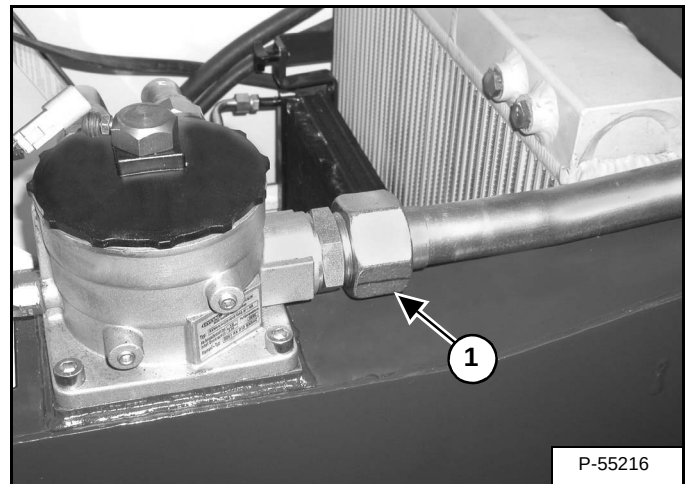


Loosen the nut (Item 1) [Figure 20-150-4] on the tubeline.

Remove the tubeline.

HYDRAULIC RESERVOIR (CONT'D)


Removal And Installation (Cont'd)

Figure 20-150-5

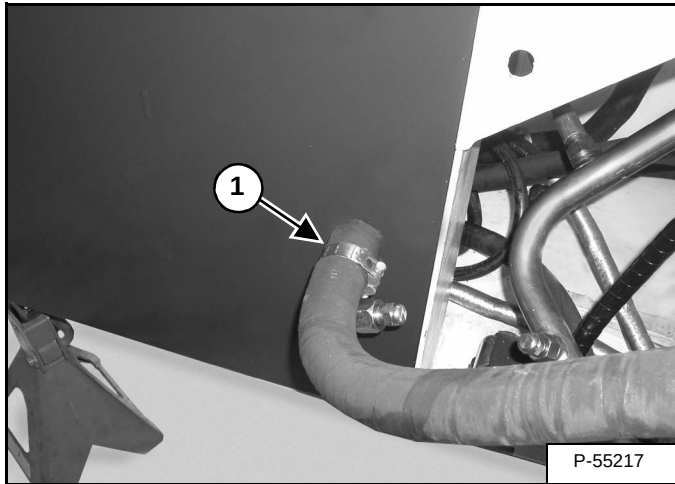

Remove the hose (Item 1) [Figure 20-150-5] from the tank.

Figure 20-150-6

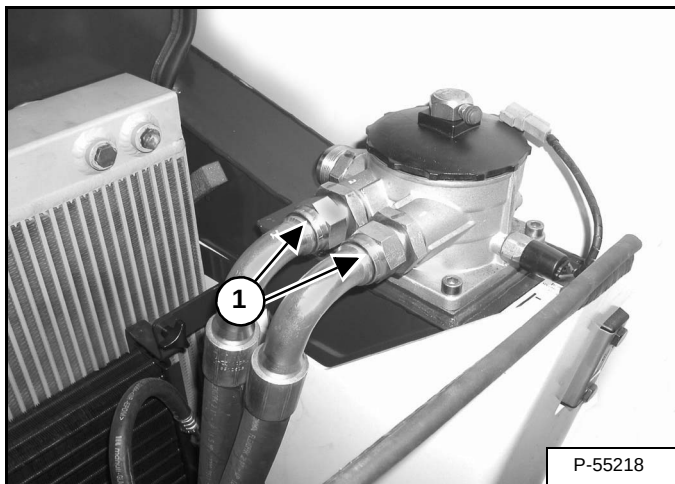

Remove the two hoses (Item 1) [Figure 20-150-6] from the filter.

Figure 20-150-7


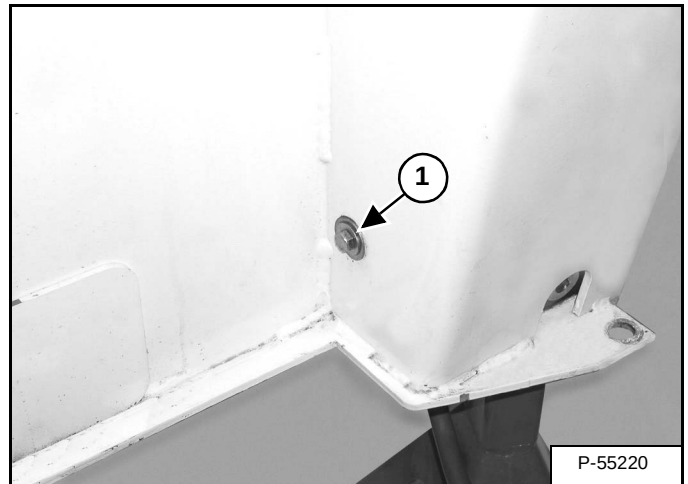


Figure 20-150-8

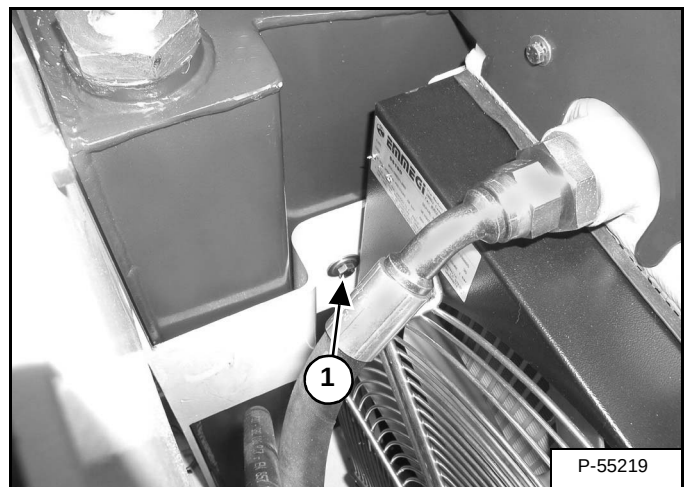

Remove the two tank mounting bolts (Item 1) [Figure 20-150-7] and [Figure 20-150-8].


Remove the hydraulic reservoir.

STEERING VALVE

Removal And Installation

Remove the dash cover/column cover. (See "Removal And Installation" on page 50-130-1.)

Figure 20-160-1

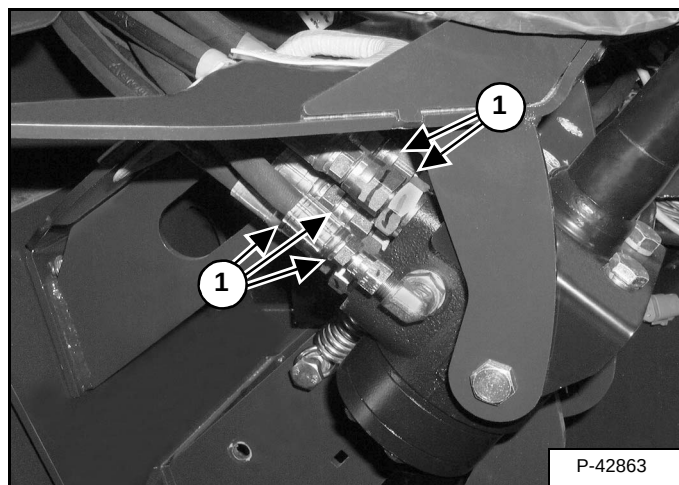

Remove the five hoses (Item 1) [Figure 20-160-1] from the steering valve.


NOTE: Mark hoses for correct installation.

IMPORTANT

When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.

I-2003-0888

Figure 20-160-2

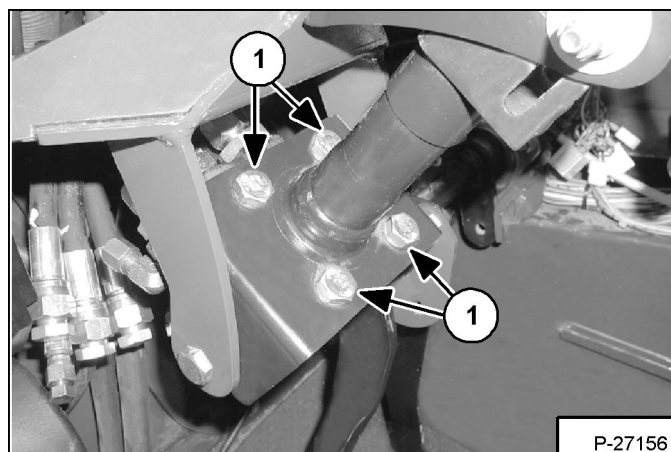


Remove the four bolts (Item 1) [Figure 20-160-2] and remove the steering valve.

STEERING VALVE (CONT'D)

Parts Identification

1. Bolt
2. End Cap
3. Spacer Gear
4. O-ring
5. Geroler Assembly
6. Drive Shaft
7. Valve Plate
8. Spool
9. Sleeve
10. Springs
11. Drive Pin
12. Pin
13. Check Ball
14. Housing
15. Thrust Washer
16. Thrust Bearing
17. Quad Ring
18. Seal Housing
19. Seal
20. Retainer Ring
21. Ball Seat
22. Poppet
23. Spring
24. Plug

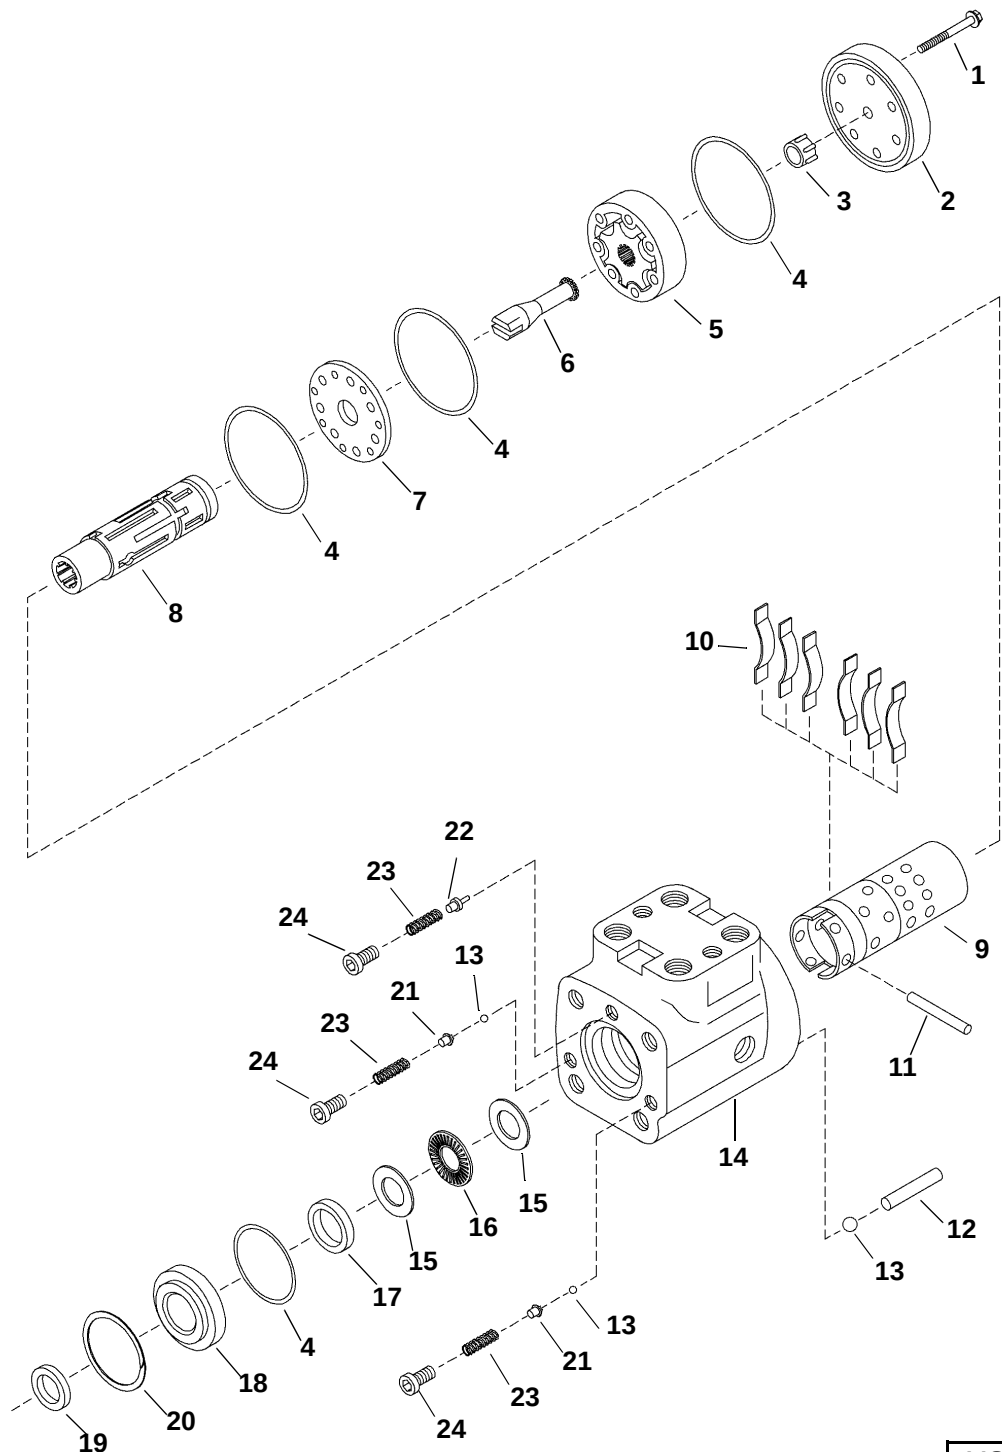

MS1226

STEERING VALVE (CONT'D)


Disassembly

IMPORTANT

When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.


I-2003-0888

Figure 20-160-3

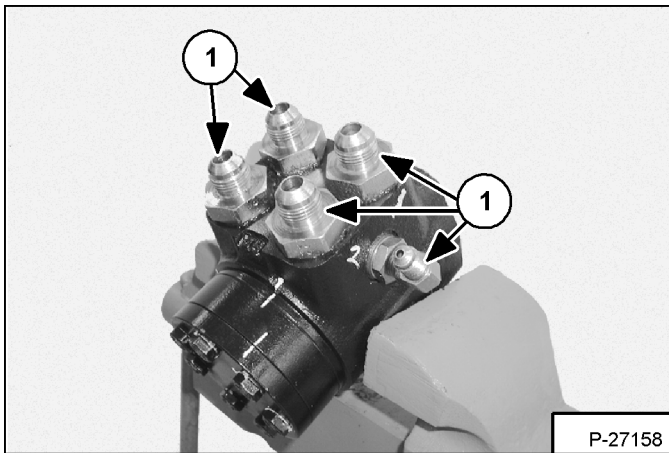


Remove the fittings (Item 1) from the steering valve [Figure 20-160-3].

Figure 20-160-4

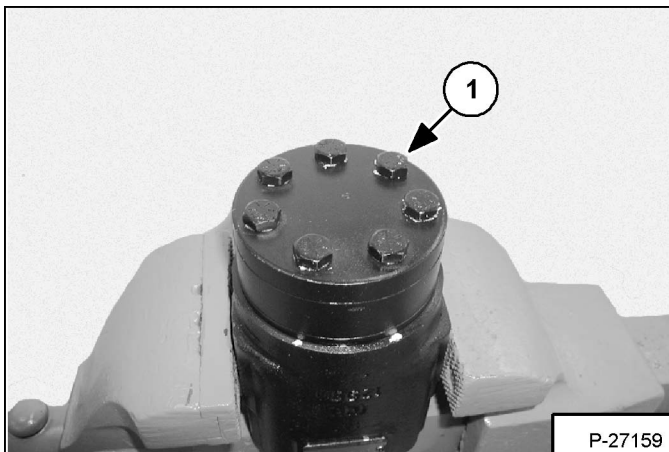


Remove the seven end cap bolts (Item 1) [Figure 20-160-4].

Figure 20-160-5

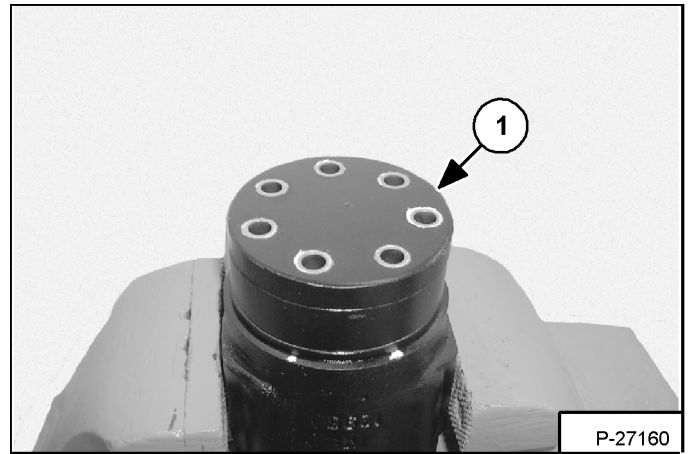

Remove the end cap (Item 1) [Figure 20-160-5].

Figure 20-160-6

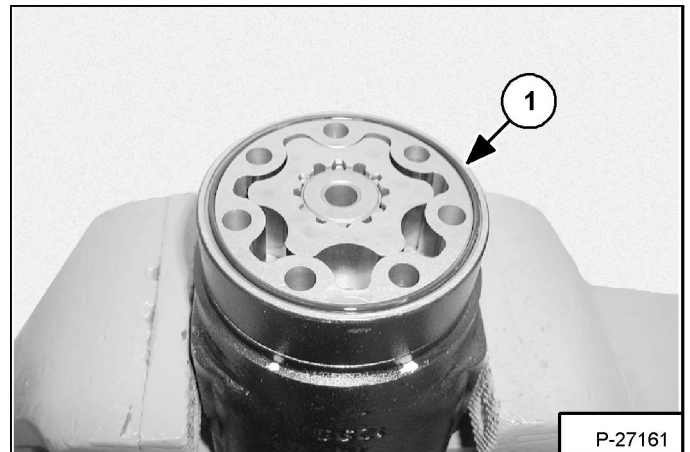

Remove and discard the O-ring (Item 1) [Figure 20-160-6].

Figure 20-160-7


1. Housing
2. Thrust Plate
3. Spacers
4. O-Ring
5. End Cap
6. Nut
7. Mounting Plate
8. Gear Holder
9. Gear

Remove the spacer gear (Item 1) [Figure 20-160-7].

STEERING VALVE (CONT'D)


Disassembly (Cont'd)

Figure 20-160-8

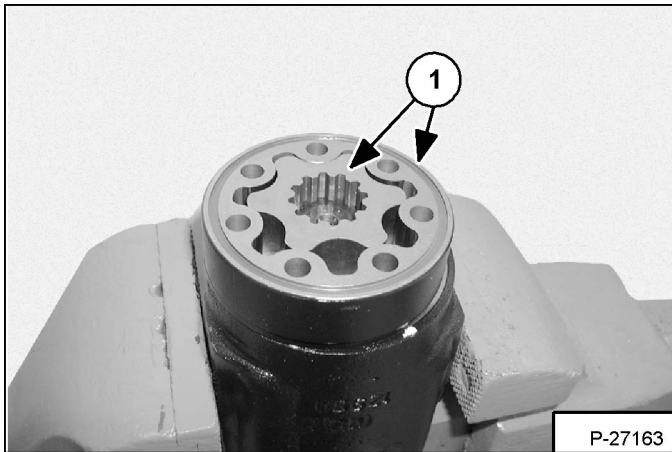


Remove the geroler assembly (Item 1) [Figure 20-160-8].

Figure 20-160-9

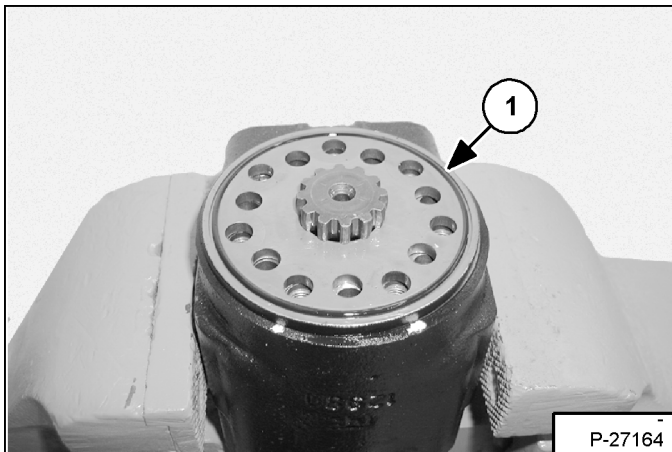


Remove the O-ring (Item 1) [Figure 20-160-9] from the valve plate.

Figure 20-160-10

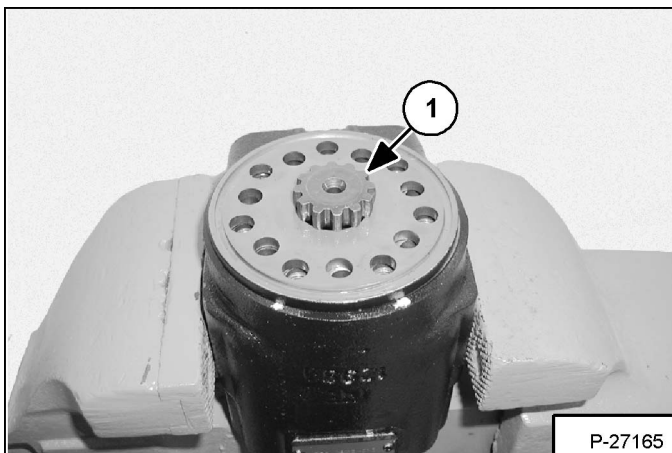

Remove the drive shaft (Item 1) [Figure 20-160-10].

Figure 20-160-11

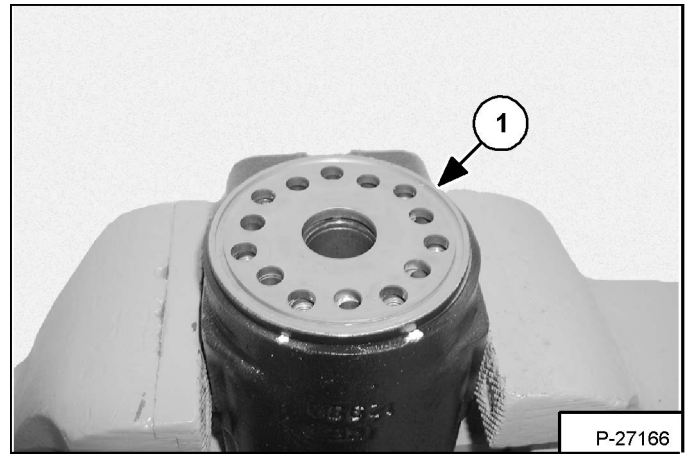


Remove the valve plate (Item 1) [Figure 20-160-11].

STEERING VALVE (CONT'D)


Disassembly (Cont'd)

Figure 20-160-12

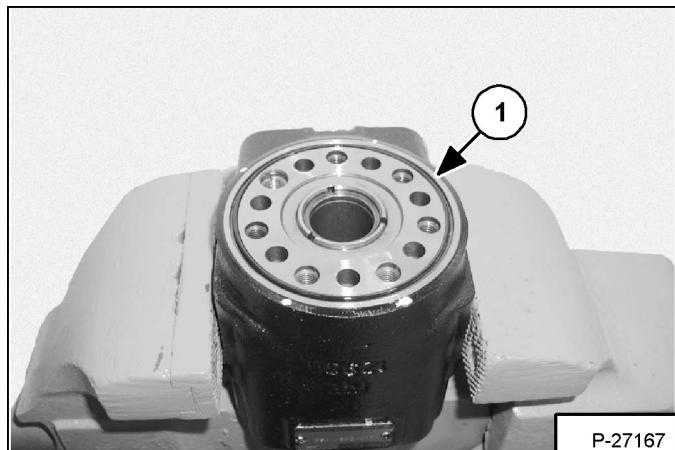


Remove the O-ring (Item 1) [Figure 20-160-12] from the housing.

Figure 20-160-13

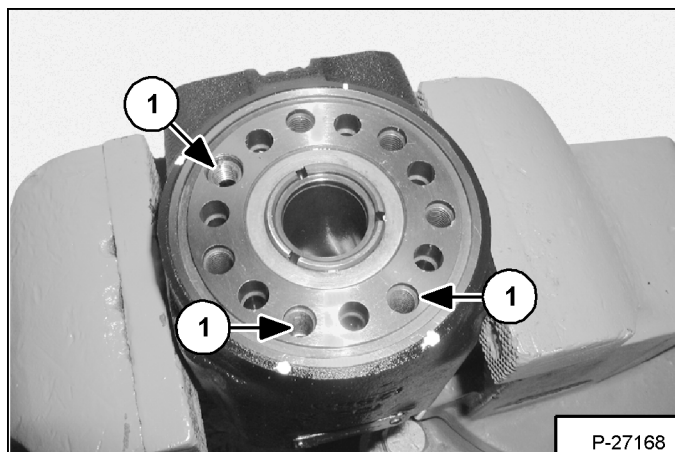

Mark the location of the three ports (Item 1) [Figure 20-160-13] for correct assembly.


Figure 20-160-14

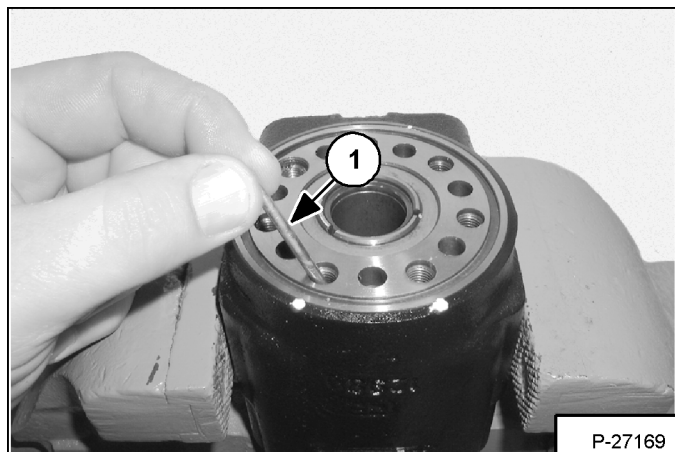

Remove the three pins (Item 1) [Figure 20-160-14] from each port.

NOTE: Record the location of each pin for correct assembly.

Figure 20-160-15

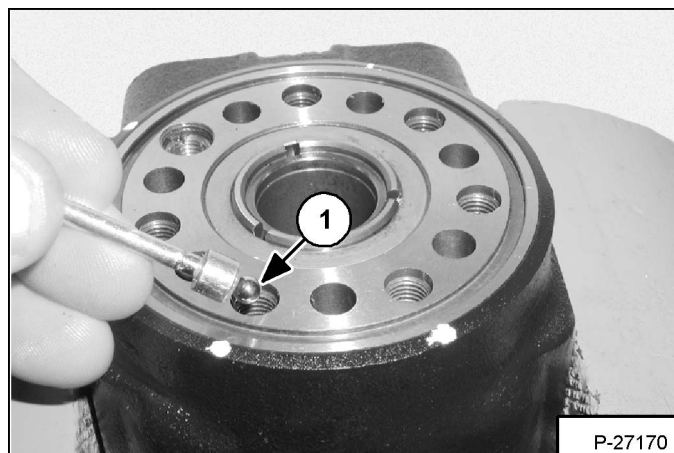


Remove the three check balls (Item 1) [Figure 20-160-15] from each port.

NOTE: Record the location of each check ball for correct assembly.

STEERING VALVE (CONT'D)


Disassembly (Cont'd)

Figure 20-160-16

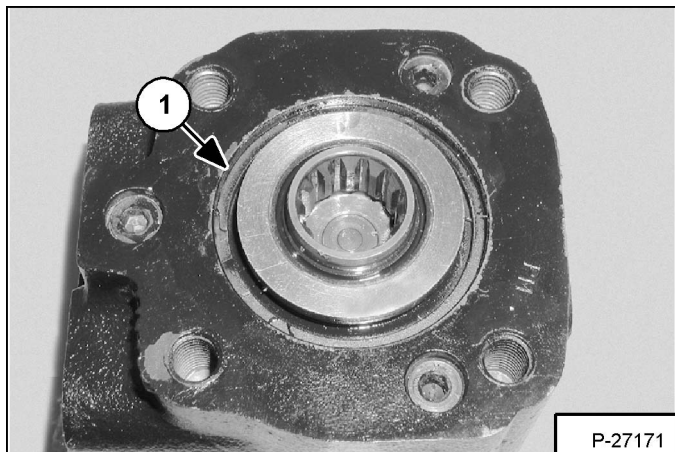


Remove the seal retainer ring (Item 1) [Figure 20-160-16].

Figure 20-160-17

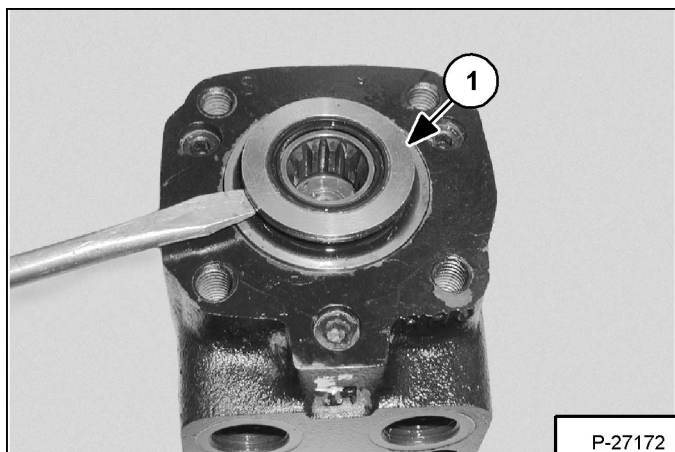


Remove the seal housing (Item 1) [Figure 20-160-17] by prying upward.

Figure 20-160-18

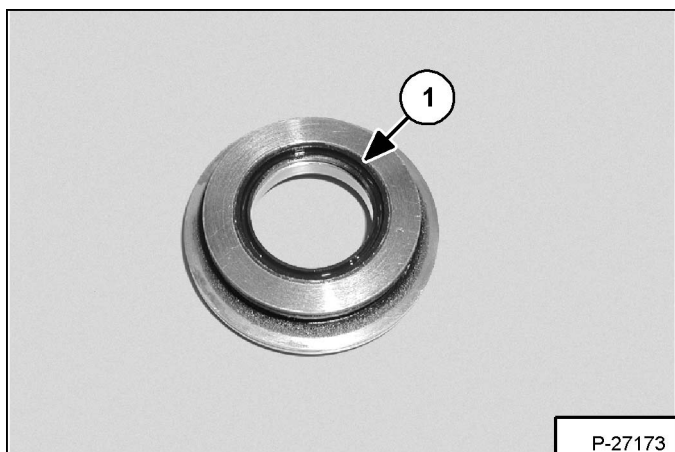

Remove and discard the seal (Item 1) [Figure 20-160-18].

Figure 20-160-19

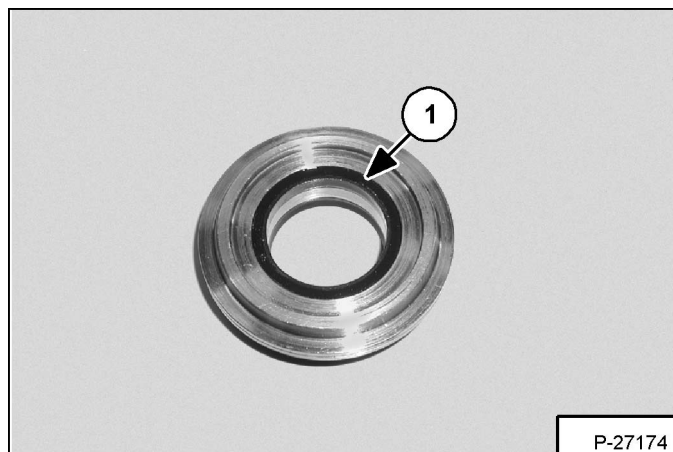


Remove and discard the quad ring seal (Item 1) [Figure 20-160-19].

STEERING VALVE (CONT'D)


Disassembly (Cont'd)

Figure 20-160-20

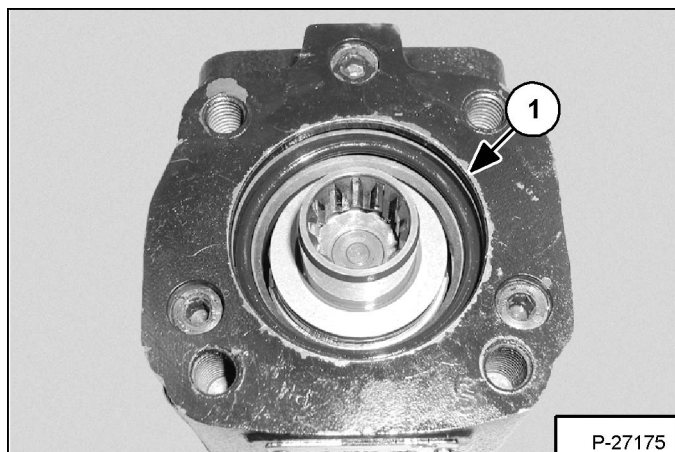


Remove and discard the O-ring (Item 1) [Figure 20-160-20] from the housing.

Figure 20-160-21

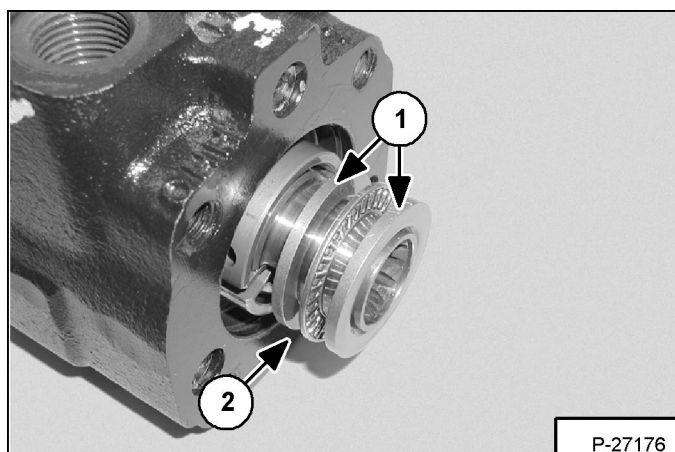

Remove the two thrust washers (Item 1) and thrust bearing (Item 2) [Figure 20-160-21] from the spool.


Figure 20-160-22

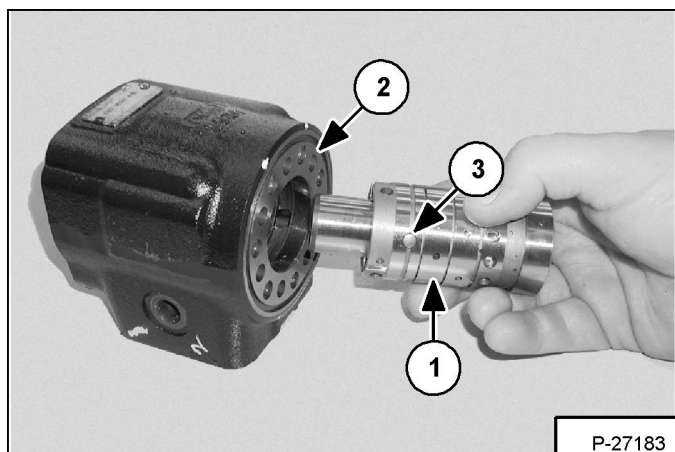

Remove the control spool/sleeve assembly (Item 1) from the metering end of the housing (Item 2) [Figure 20-160-22].

NOTE: When removing the spool, keep the drive pin (Item 3) [Figure 20-160-22] horizontal. If the pin becomes vertical, it may drop from the spool and get caught in an oil passage inside the housing.

Figure 20-160-23

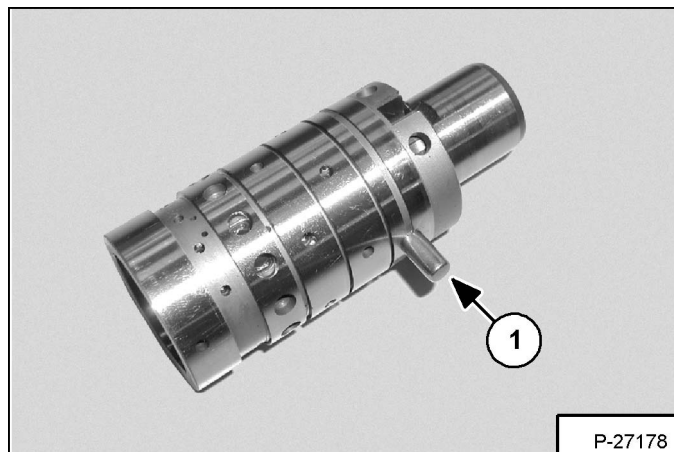


Remove the drive pin (Item 1) [Figure 20-160-23].

STEERING VALVE (CONT'D)

Disassembly (Cont'd)


Figure 20-160-24

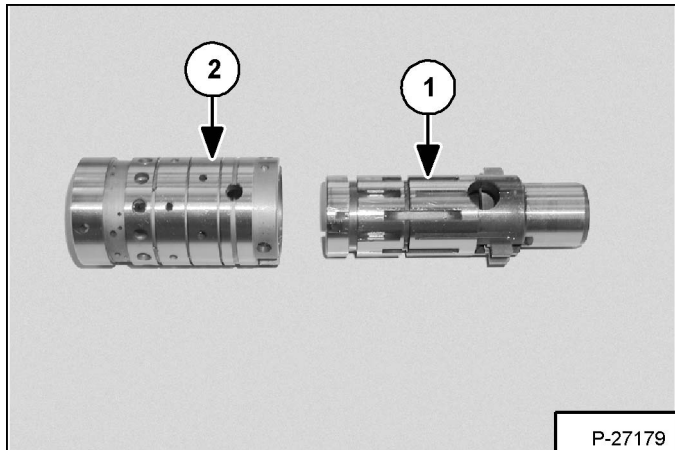

Remove the spool (Item 1) from the sleeve (Item 2) [Figure 20-160-24].

NOTE: If the spool and sleeve will not slide or rotate within each other freely or in the housing, they must be replaced.


Figure 20-160-25

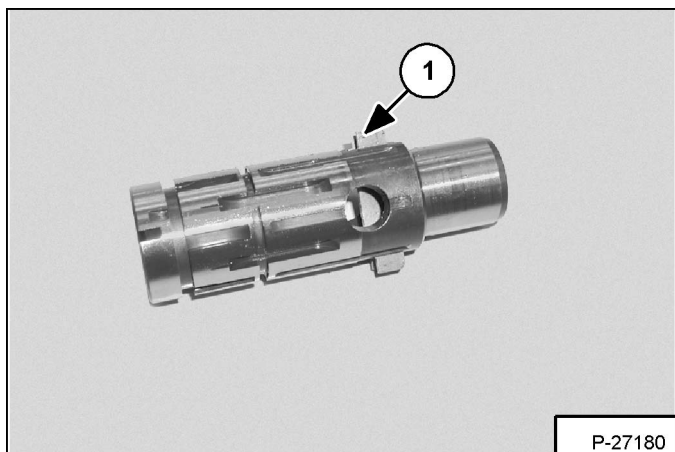

Remove the springs (Item 1) [Figure 20-160-25] from the spool.

NOTE: There are six springs positioned three per side and back to back.


Figure 20-160-26

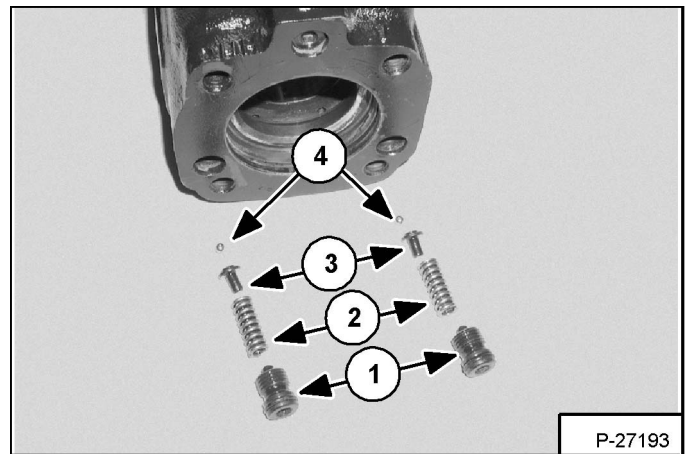

Remove the two check valve plugs (Item 1), springs (Item 2), ball seat (Item 3) and check ball (Item 4) [Figure 20-160-26] from the housing.

NOTE: Record the location of each check ball assembly for correct assembly.

Figure 20-160-27

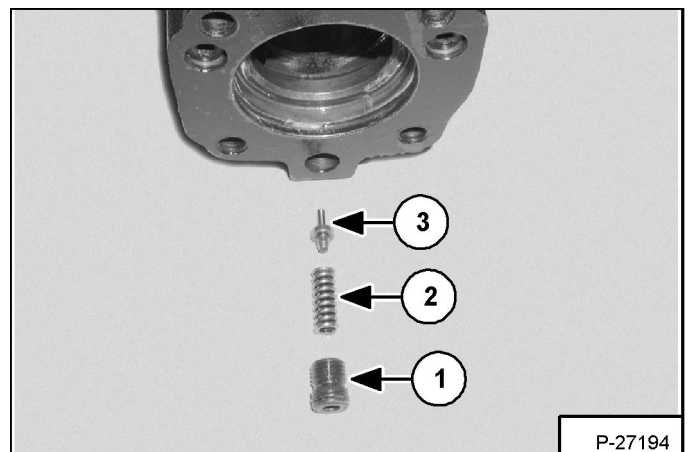


Remove the check valve plug (Item 1), spring (Item 2) and poppet (Item 3) [Figure 20-160-27] from the housing.

NOTE: Record the location of the port for correct assembly.

STEERING VALVE (CONT'D)


Inspection

Figure 20-160-28

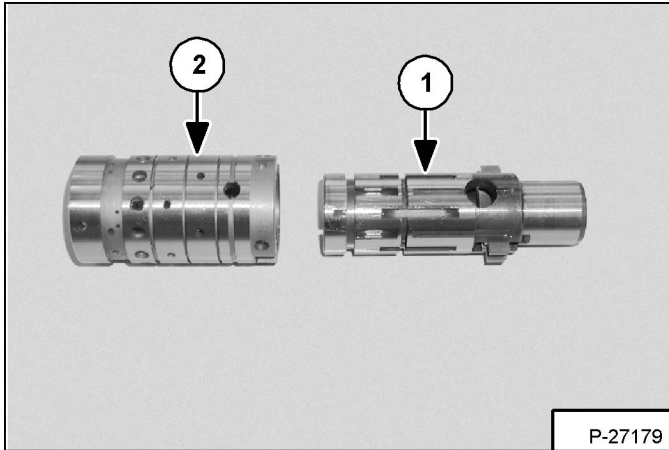

Inspect the spool (Item 1) and sleeve (Item 2) [Figure 20-160-28] for any damage or wear. Replace as needed.

Figure 20-160-29

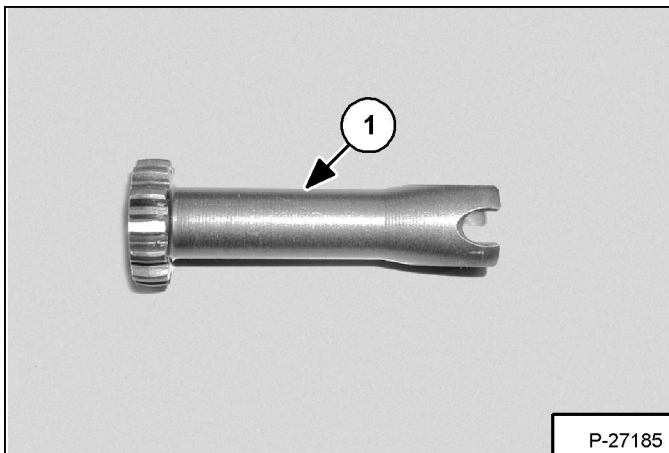

Inspect the drive shaft (Item 1) [Figure 20-160-29] for damage or wear.

Assembly


IMPORTANT

When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.

I-2003-0888


Prior to assembly, clean and lightly oil all parts.

Figure 20-160-30

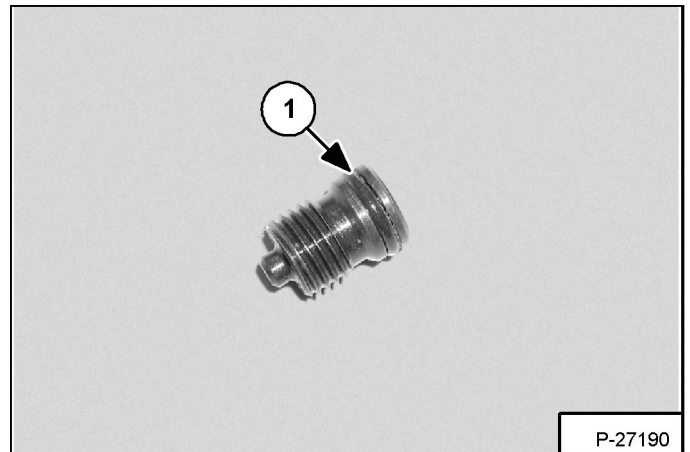

Install a new O-ring (Item 1) [Figure 20-160-30] on the three check valve plugs.

Figure 20-160-31

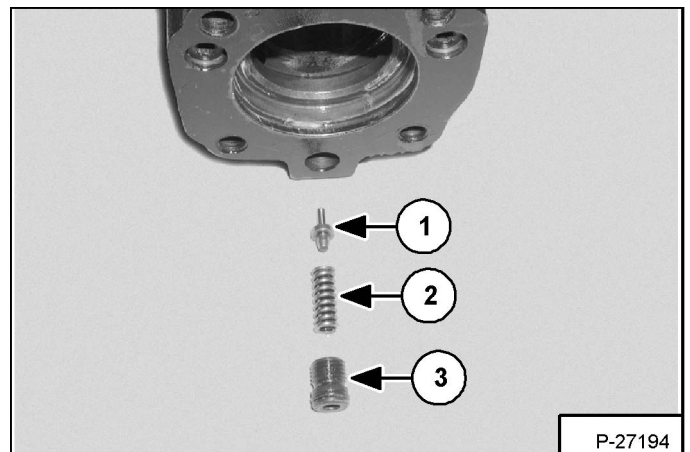


Install the poppet (Item 1), spring (Item 2) and plug (Item 3) [Figure 20-160-31] into the correct port marked earlier.

STEERING VALVE (CONT'D)

Assembly (Cont'd)


Figure 20-160-32

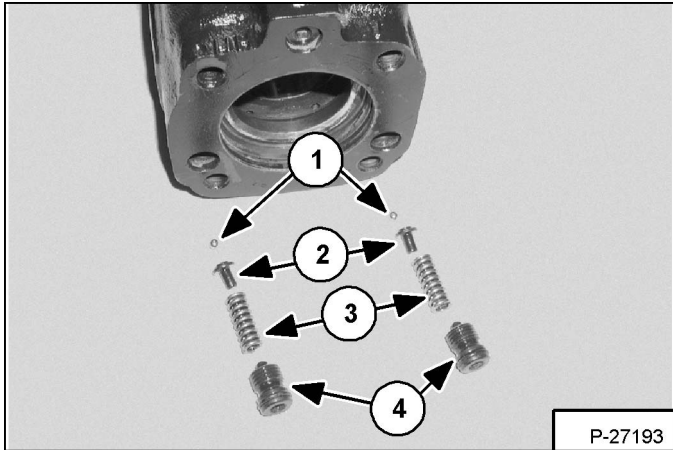

Install the check ball (Item 1), ball seat (Item 2), spring (Item 3) and plug (Item 4) [Figure 20-160-32] into the correct port marked earlier.

Turn each of the port plugs (Item 3) [Figure 20-160-31] and (Item 4) [Figure 20-160-32] in the housing until they are tight, then back each of them out 1-1/2 turns.


Figure 20-160-33

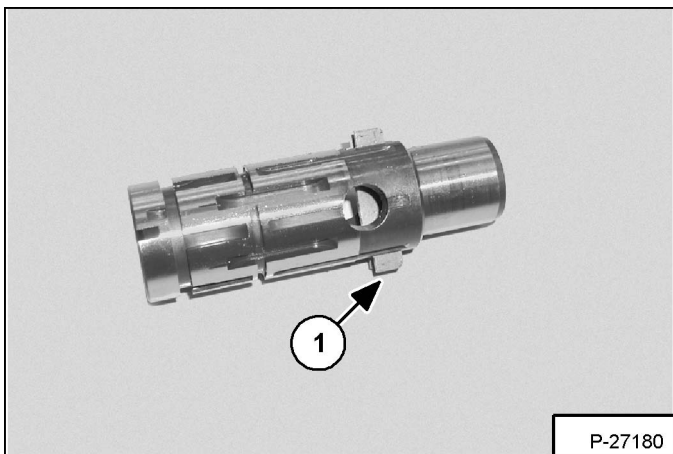

Install the springs (Item 1) [Figure 20-160-33] into the spool.

NOTE: There are six springs and should be positioned three per side and back to back.


Figure 20-160-34

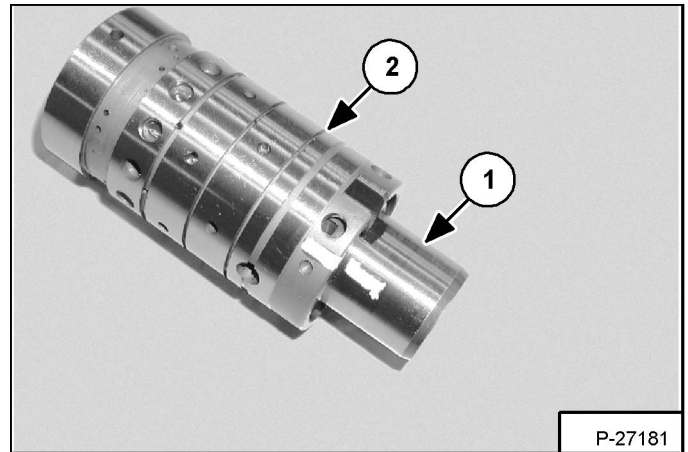

Install the spool (Item 1) into the sleeve (Item 2) [Figure 20-160-34].

NOTE: The spool should turn freely inside the sleeve.

Figure 20-160-35

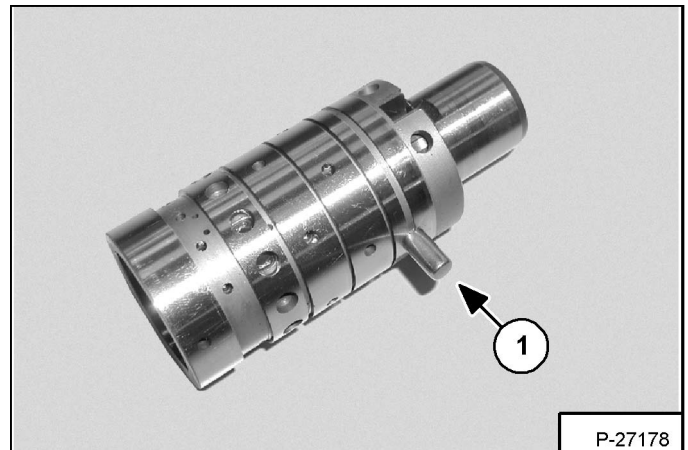


Install the drive pin (Item 1) [Figure 20-160-35].

STEERING VALVE (CONT'D)

Assembly (Cont'd)


Figure 20-160-36

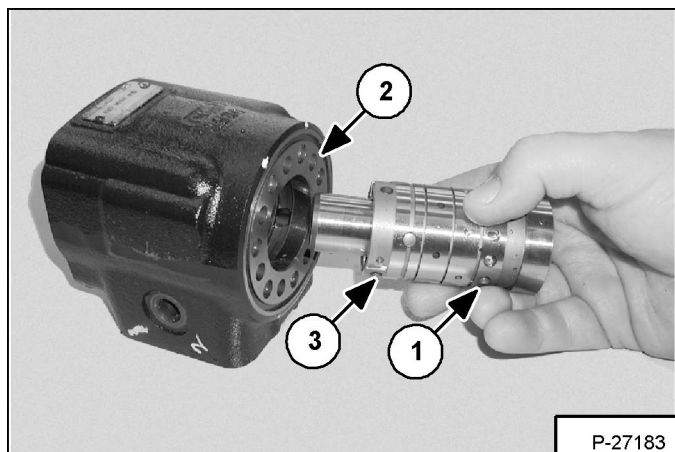

Install the control spool/sleeve assembly (Item 1) into the metering end of the housing (Item 2) [Figure 20-160-36].


NOTE: When installing the spool assembly keep the drive pin (Item 3) [Figure 20-160-36] horizontal. If the pin becomes vertical it may drop from the spool and get caught in an oil passage inside the housing.

Figure 20-160-37

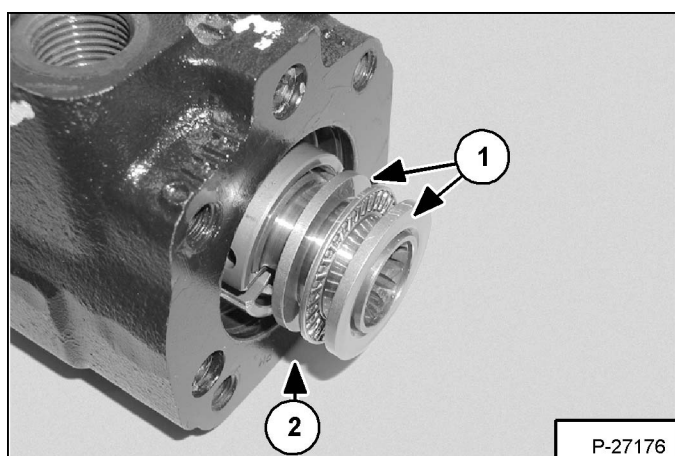


Install the two thrust washers (Item 1) and thrust bearing (Item 2) [Figure 20-160-37] on the spool.

Figure 20-160-38

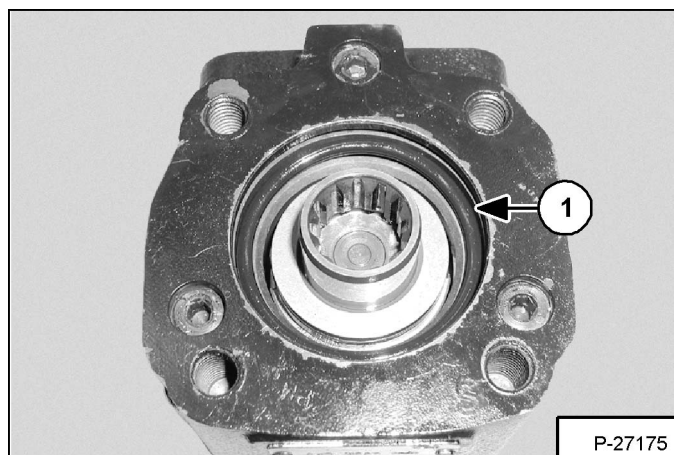


Install a new O-ring (Item 1) [Figure 20-160-38] into the housing.

Figure 20-160-39

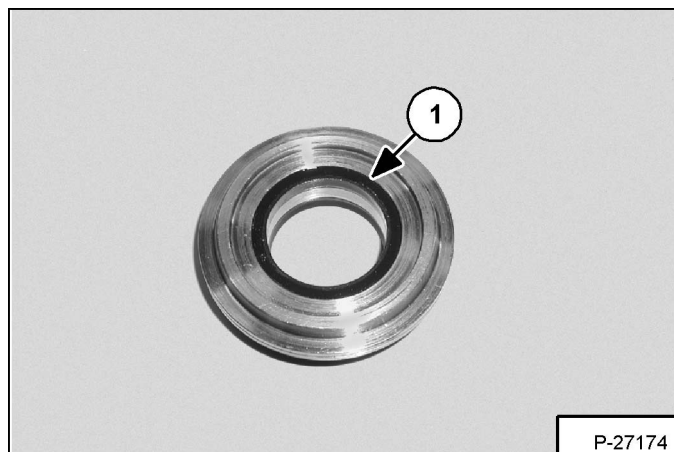

Install a new quad ring seal (Item 1) [Figure 20-160-39].

Figure 20-160-40

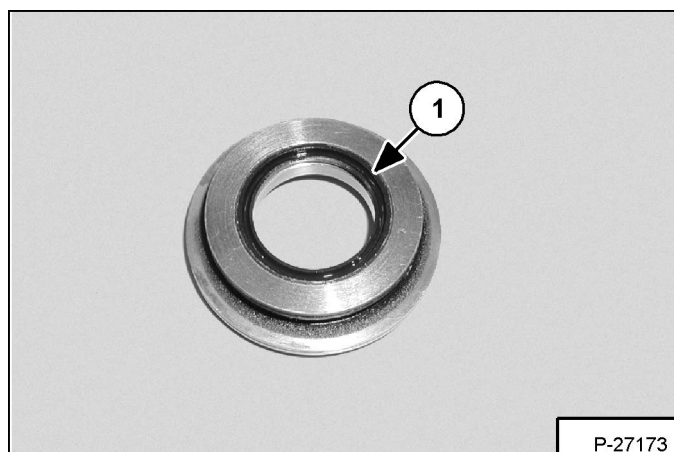


Install a new seal (Item 1) [Figure 20-160-40].

STEERING VALVE (CONT'D)


Assembly (Cont'd)

Figure 20-160-41

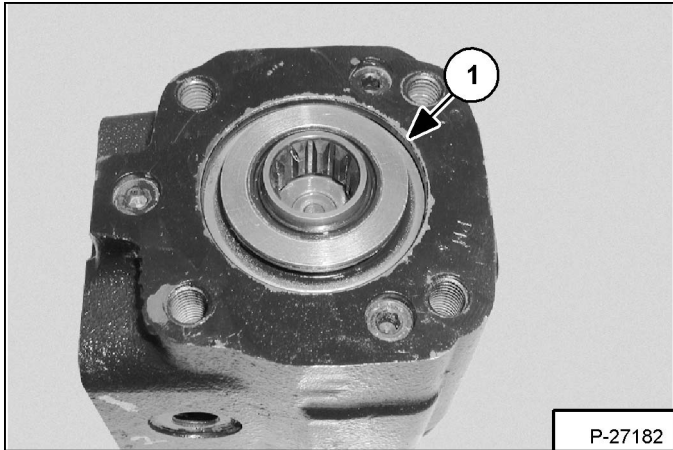


Install the seal housing (Item 1) [Figure 20-160-41].

Figure 20-160-42

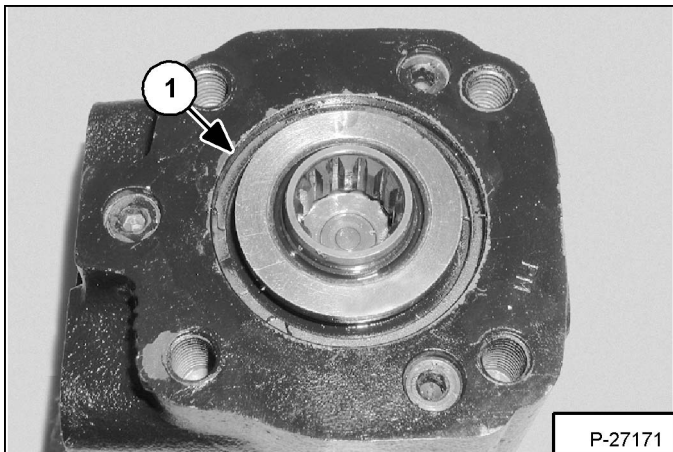


Install the seal retainer ring (Item 1) [Figure 20-160-42].

Figure 20-160-43

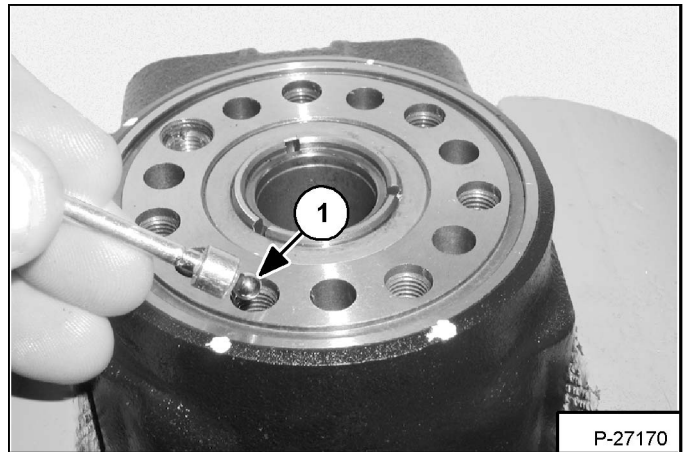

Install the three check balls (Item 1) [Figure 20-160-43] in their proper port (marked earlier).

Figure 20-160-44

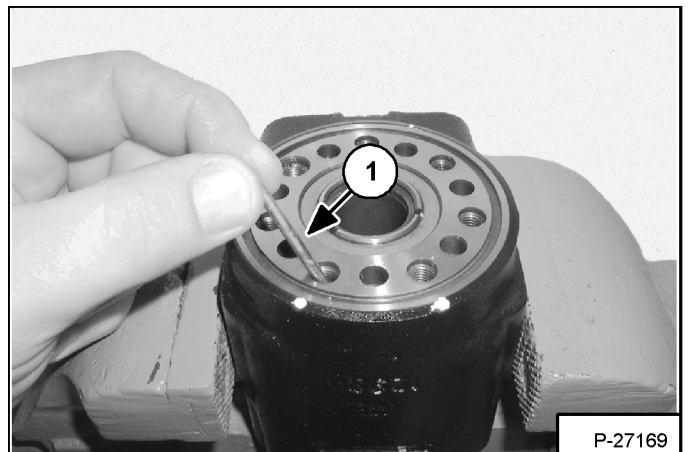


Install the three pins (Item 1) [Figure 20-160-44] in their proper port (marked earlier).

STEERING VALVE (CONT'D)


Assembly (Cont'd)

Figure 20-160-45

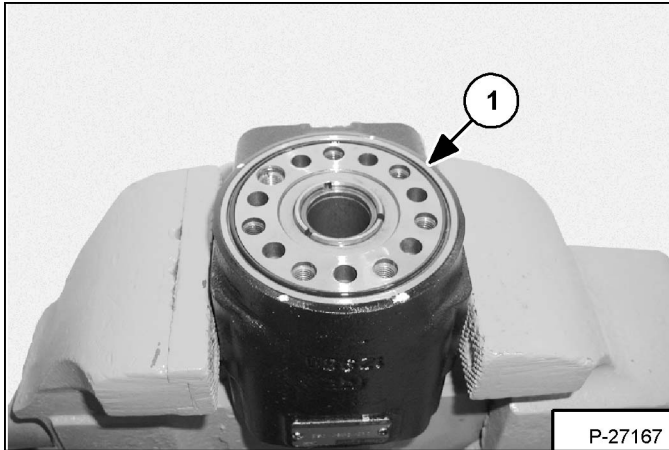


Install a new O-ring (Item 1) [Figure 20-160-45] into the housing groove.

Figure 20-160-46

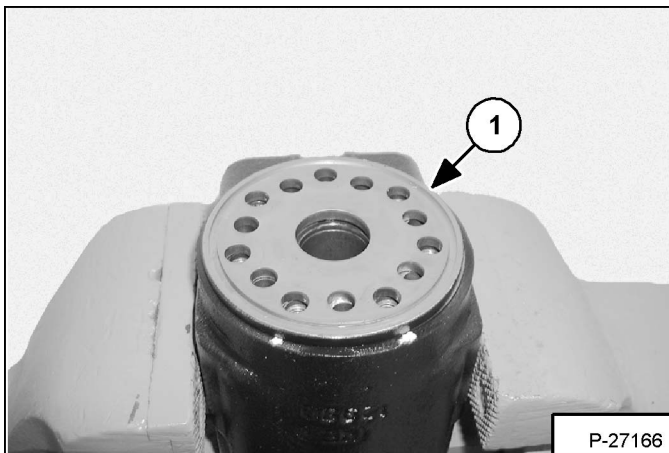

Align and install the 14 hole valve plate (Item 1) [Figure 20-160-46] on the housing.


Figure 20-160-47

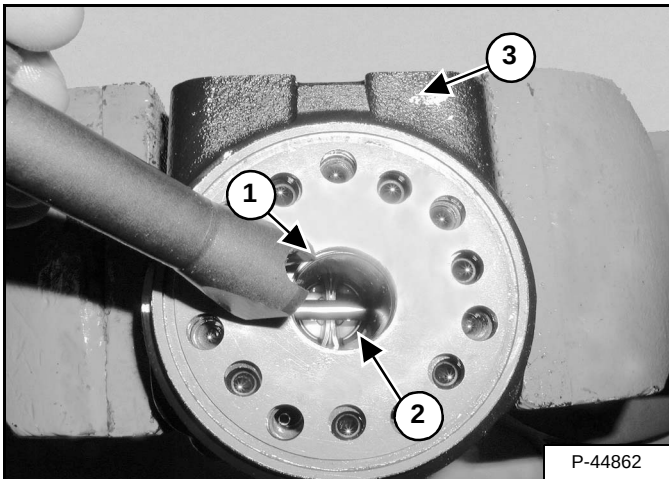

Align the groove (Item 1) in the drive shaft with the drive pin (Item 2) [Figure 20-160-47] and install the drive shaft. Be sure the drive shaft is engaged with the pin.

NOTE: The pin (Item 2) must be parallel with the port face of the housing (Item 3) [Figure 20-160-47].

Figure 20-160-48

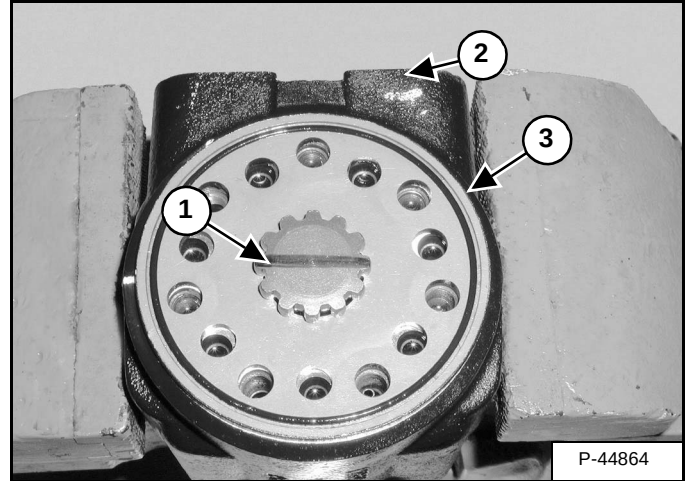


To assure proper geroler alignment, mark the top of the drive shaft (Item 1) (as shown) parallel to the port face (Item 2) [Figure 20-160-48].

Install a new O-ring (Item 3) [Figure 20-160-48] into the valve plate groove.

STEERING VALVE (CONT'D)

Assembly (Cont'd)


Figure 20-160-49

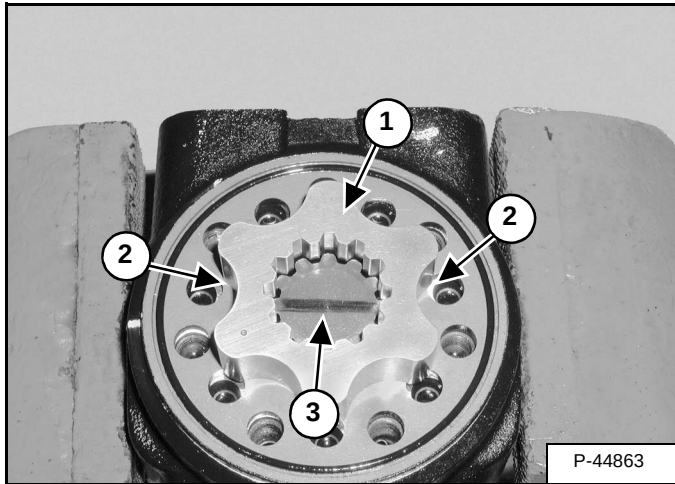

Install the geroler star (Item 1) [Figure 20-160-49] onto the valve plate and drive shaft.


NOTE: Align the two valleys (Item 2) of the star with the mark on the drive gear (Item 3) [Figure 20-160-49].

Figure 20-160-50

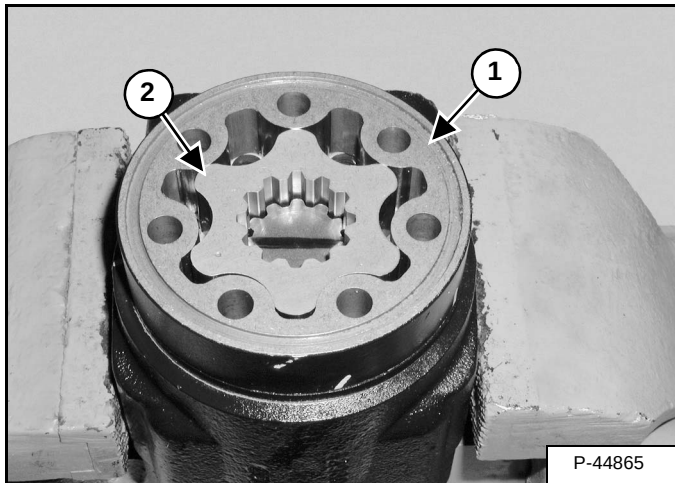


Install the outer gear (Item 1) onto the star (Item 2) [Figure 20-160-50] and align the bolt holes without disengaging the drive shaft.

Figure 20-160-51

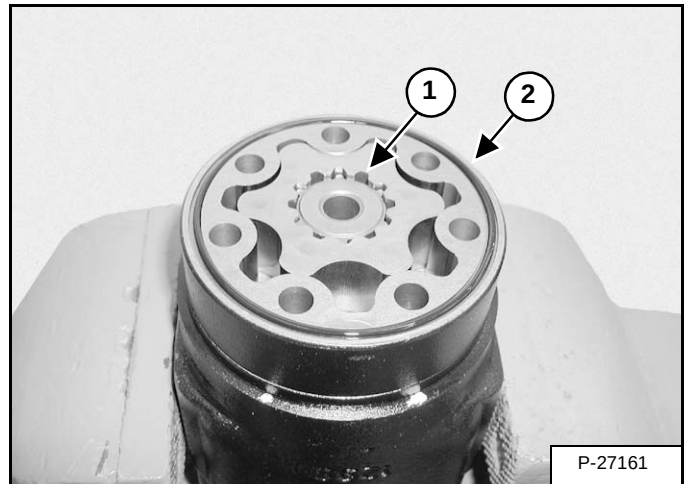

Install the spacer gear (Item 1) and a new O-ring (Item 2) [Figure 20-160-51] into the geroler plate groove.

Figure 20-160-52

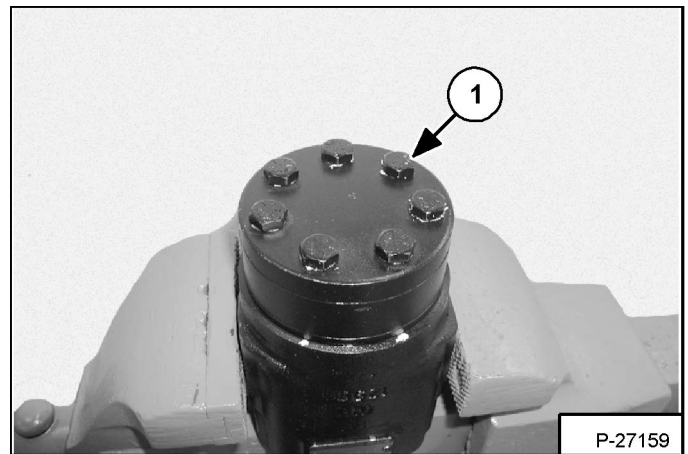


Install the end cap using the seven bolts (Item 1) [Figure 20-160-52]. Tighten to 8-13 ft.-lbs. (11-18 Nm) torque in a criss cross pattern.

STEERING VALVE (CONT'D)

Assembly (Cont'd)

Figure 20-160-53

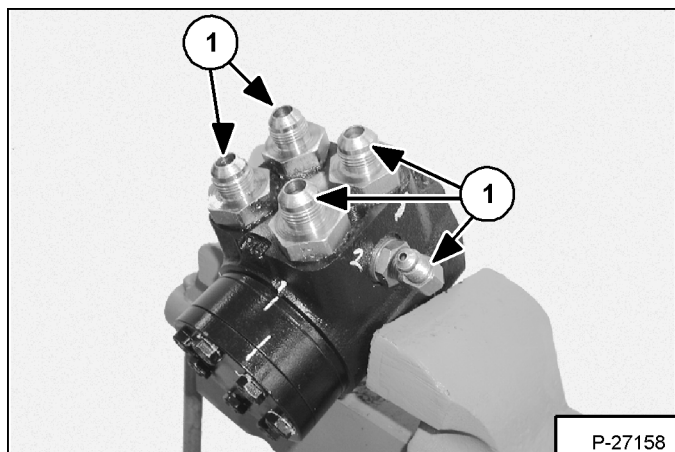

Install the fittings (Item 1) [Figure 20-160-53] as shown.



Bobcat®

HYDRAULIC CONTROL VALVE

Troubleshooting Chart (Controllers)

The following troubleshooting chart is provided for assistance in locating and correcting problems which are most common. Many of the recommended procedures must be done by authorized Bobcat Service Personnel



WARNING

Check for correct function after adjustments, repairs or service. Failure to make correct repairs or adjustments can cause injury or death.

W-2004-1285

PROBLEM	CAUSE	CORRECTION
None of the controllers work	Insufficient power supply	Check battery voltage
	Insufficient pilot pressure	Check pilot pressure
	Plugged controller filter	Clean filter
Only one controller works	No actuation signal	Check signal voltage
	Unsuitable actuation signal	Check signal voltage
	Insufficient actuation power supply	Check signal voltage
All controllers not working or jerky	Plugged controller filter	Clean filter
One controller not working or jerky	Faulty actuation signal	Check signal
	Friction or jamming of the plunger	Replace controller
One controller not working or jerky in one direction	Contamination of the proportional valve in the controller	Replace controller
Controller creeps	Neutral position incorrect	Adjust neutral adjustment
Oil leakage between control valve and controller	Faulty seals	Replace seal
Oil leakage between controllers	Faulty controller couplers	Replace controller couplers

HYDRAULIC CONTROL VALVE (CONT'D)

Telescoping Valve Section Troubleshooting

The tool listed will be needed to do the following procedure:

MEL 1609 Test harness

Record the serial number of the machine, control valve and control module.

The following procedure must be done with the control valve in the machine. The control valve is removed for photo clarity.

With the engine OFF, the key switch in the run position, move the joystick handle to relieve any hydraulic pressure.


Remove the rear cover from machine.

Figure 170-10-1



The hydraulic control function switch (Item 1) **[Figure 170-10-1]** must be ON (light is on) for all testing procedures.

Figure 20-170-2

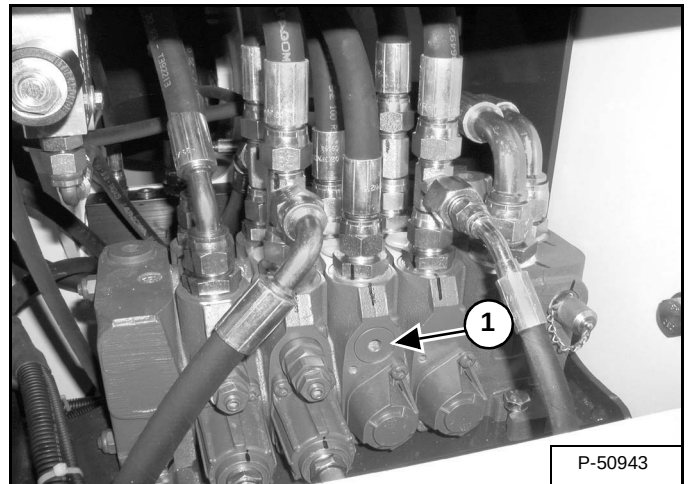


1. Locate the telescoping valve section (Item 1) **[Figure 20-170-2]** on the control valve.

HYDRAULIC CONTROL VALVE (CONT'D)

Telescoping Valve Section Troubleshooting (Cont'd)

Figure 20-170-3

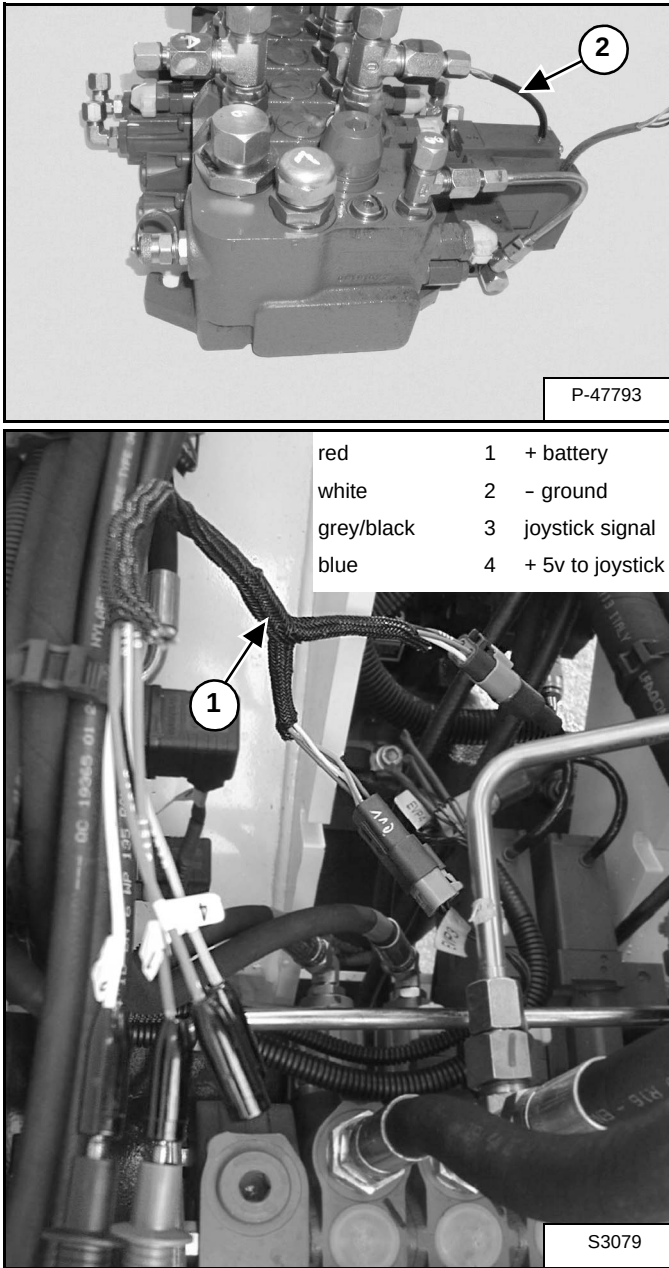


2. A test harness (Item 1) [Figure 20-170-3] (MEL 1609: p/n 6679457) must be installed in between the male and female connector (Item 2) [Figure 20-170-3] of the telescoping valve section.
3. Connect the groundlead (-) of the multimeter to plug 2 (white) of the testharness.
4. With the engine OFF, the key in the run position, check that the battery voltage is at least 12 volts or higher by checking the voltage between plug 2 (white) and plug 1 (red) of the test harness.

5. With the engine OFF, the key in the run position, check that the regulated voltage on the controller connector is 5 volts by checking the voltage between plug 2 (white) and plug 4 (blue) of the test harness.

If 5 volts is not seen, replace the controller.

Figure 20-170-4

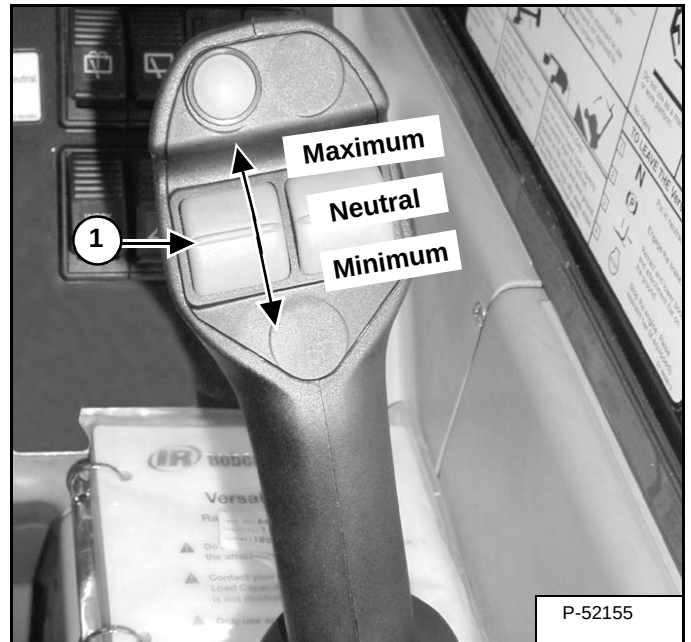

6. With the telescopic function switch (Item 1) [Figure 20-170-4] in the minimum (back) position check that the voltage between plug 2 (white) and plug 3 (grey/black) of the test harness is 0.9 volts.

If the voltage drops below 0.9 volts the controller will interpret this as a failure.

7. With the telescopic function switch (Item 1) [Figure 20-170-4] in the neutral (middle) position check that the voltage between plug 2 (white) and plug 3 (grey/black) of the test harness is 2.5 volts.
8. With the telescopic function switch (Item 1) [Figure 20-170-4] in the maximum (forward) position check that the voltage between plug 2 (white) and plug 3 (grey/black) of the test harness is 4.1 volts.

If one of the three voltage readings in Steps 6, 7 and 8 is not correct, replace the joystick handle. (See "Removal And Installation" on page 20-180-1.)

If all voltage readings in Steps 6, 7 and 8 are correct go to step 9.


HYDRAULIC CONTROL VALVE (CONT'D)

Telescoping Valve Section Troubleshooting (Cont'd)

Checking Pilot Pressure

Raise the boom and install the boom stop. (See "Installing The Approved Boom Stop" on page 10-150-1.)

Figure 20-170-5

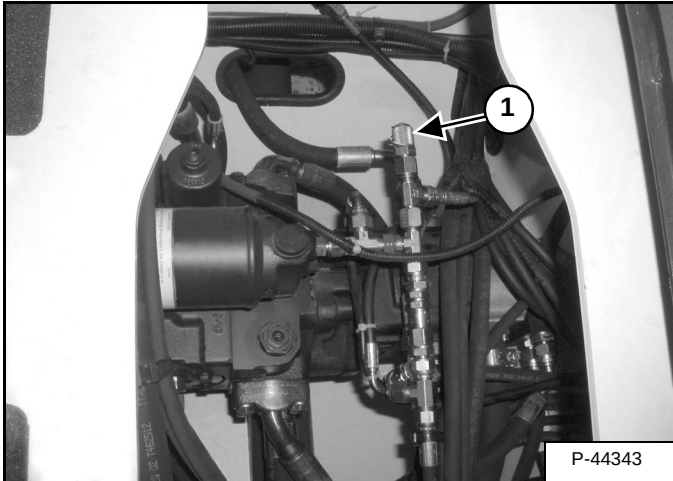

9. Locate the test fitting (Item 1) [Figure 20-170-5] and remove the cap.


Figure 20-170-6



10. Install a 1000 PSI (70 bar) gauge on the test fitting [Figure 20-170-6].
11. Start the engine, lower the restraint bar (if equipped) and run the engine at 2200 RPM. Record the pressure. The pressure at the gauge should be 508 PSI (35 bar) maximum.
12. Remove the gauge.


Checking Drain Pressure

Figure 20-170-7

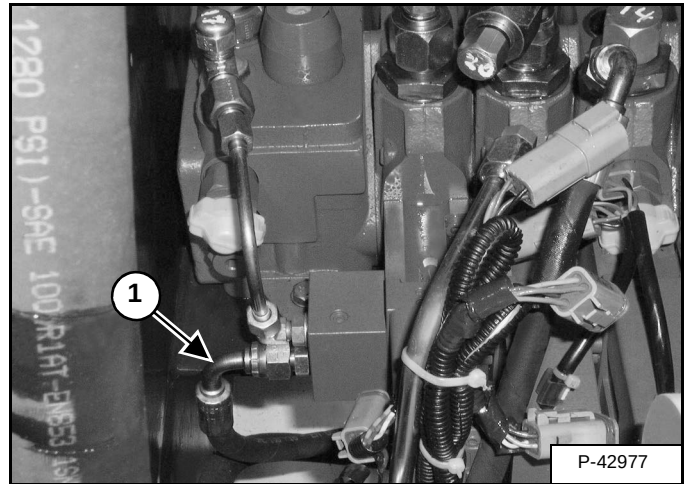

13. Remove the hose (Item 1) [Figure 20-170-7] from the control valve, and install a tee fitting.

Figure 20-170-8

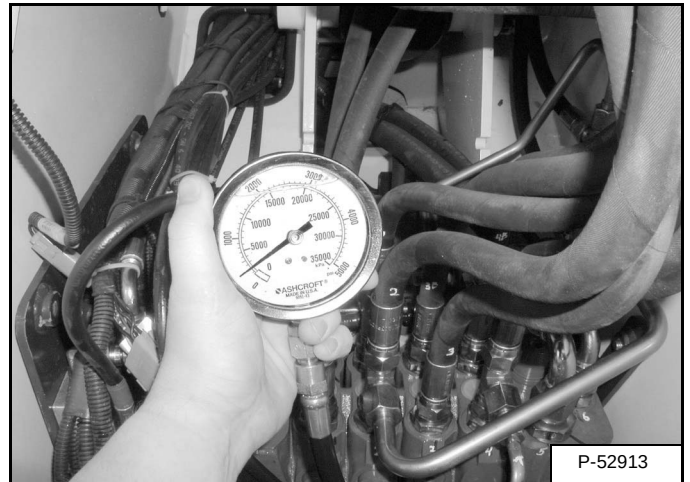


14. Install a 500 PSI (35 bar) gauge on the tee fitting [Figure 20-170-8].
15. Start the engine, lower the restraint bar (if equipped) and run the engine at 2200 RPM. Record the pressure. The pressure at the gauge should be 22 PSI (1,5 bar) maximum.
16. Remove the gauge.

HYDRAULIC CONTROL VALVE (CONT'D)


Telescoping Valve Section Troubleshooting (Cont'd)

Figure 20-170-9

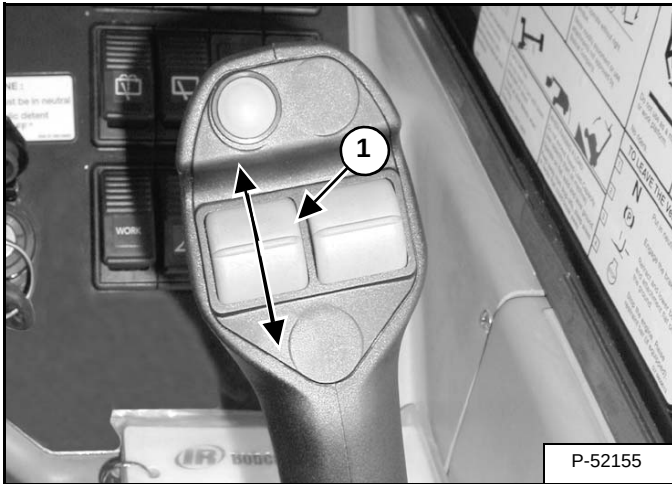


17. With adequate room in front of the machine, start the engine, lower the restraint bar (if equipped) and run the engine at 2200 RPM. Move the telescopic control switch (Item 1) [Figure 20-170-9] forward and back to see if this function works. Stop the engine.

Figure 20-170-10

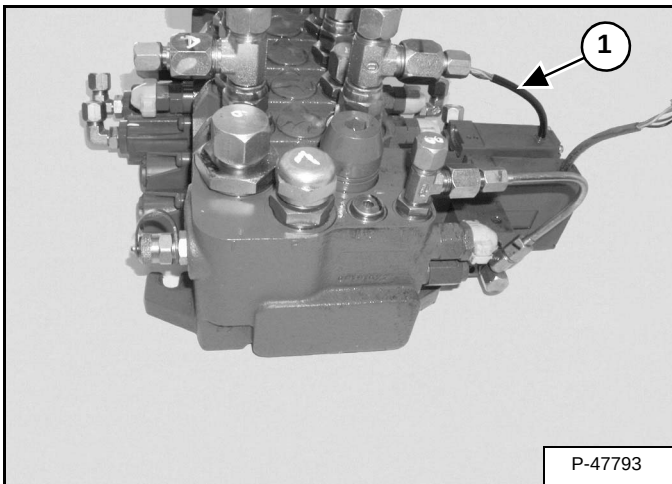

18. If the telescopic function does not work, with the engine running unplug the controller connector (Item 1) [Figure 20-170-10] and plug it back in.


Figure 20-170-11

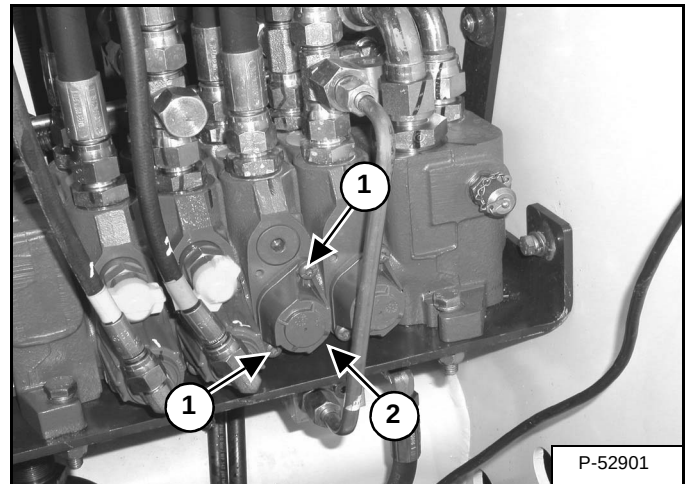

19. If the telescopic function does not work, remove the two screws (Item 1) and remove the cover (Item 2) [Figure 20-170-11].

20. Start the engine, lower the restraint bar (if equipped) and run the engine at 2200 RPM.

Figure 20-170-12

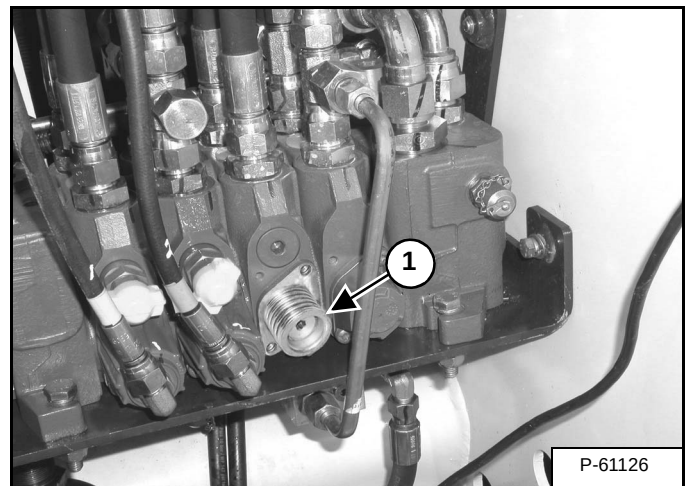

21. Manually push and pull the spool (Item 1) [Figure 20-170-12] to test the movement of the telescopic function in both directions.

NOTE: If by manually operating the spool, and the telescopic function is working the controller must be replaced.

HYDRAULIC CONTROL VALVE (CONT'D)


Auxiliary Valve Section Troubleshooting

Record the serial number of the machine, control valve and control module.

The following procedure must be done with the control valve in the machine. The control valve is removed for photo clarity.


With the engine OFF, the key switch in the run position, move the joystick handle to relieve any hydraulic pressure.

Figure 20-170-13

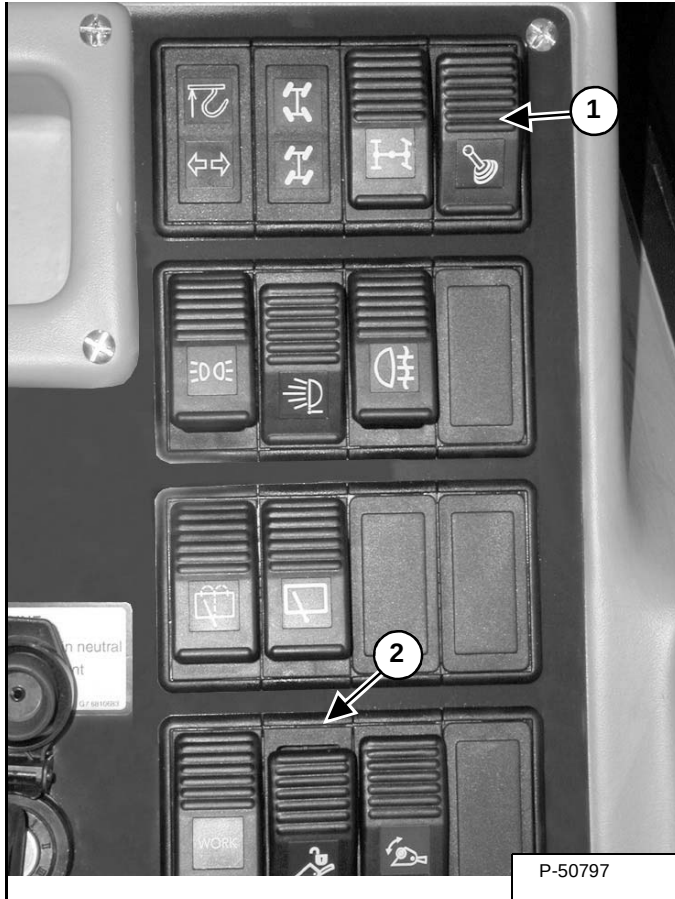

The hydraulic control function switch (Item 1) must be ON (light is on) and the front auxiliary hydraulics ON/OFF switch (Item 2) [Figure 20-170-13] must be ON (top position).

Figure 20-170-14


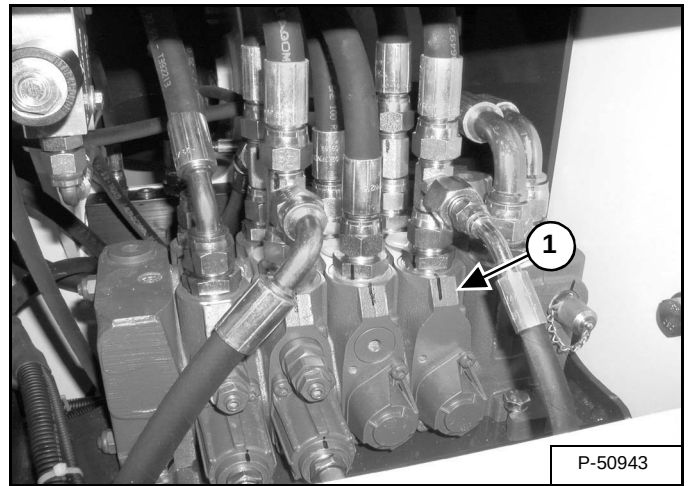


1. Locate the auxiliary valve section (Item 1) [Figure 20-170-14] on the control valve.

HYDRAULIC CONTROL VALVE (CONT'D)

Auxiliary Valve Section Troubleshooting (Cont'd)

Figure 20-170-15

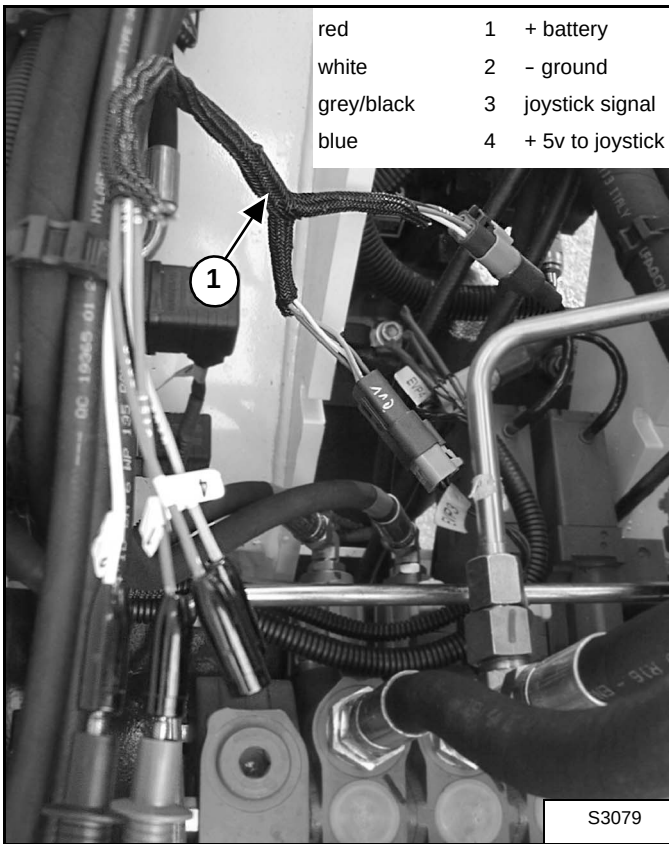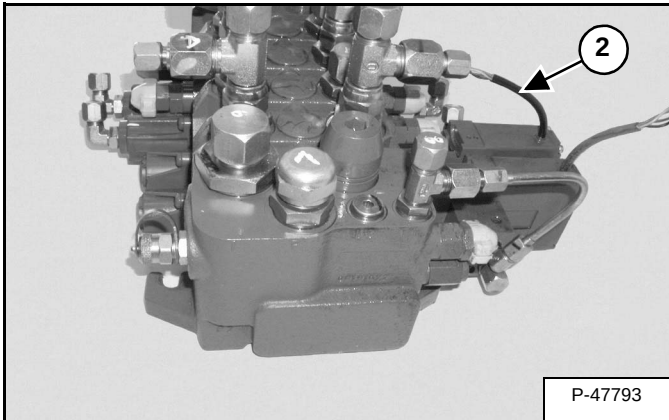


2. A test harness (Item 1) [Figure 20-170-3] (MEL 1609: p/n 6679457) must be installed in between the male and female connector (Item 2) [Figure 20-170-3] of the telescoping valve section.
3. Connect the groundlead (-) of the multimeter to plug 2 (white) of the testharness.
4. With the engine OFF, the key in the run position, check that the battery voltage is at least 12 volts or higher by checking the voltage between plug 2 (white) and plug 1 (red) of the test harness.

5. With the engine OFF, the key in the run position, check that the regulated voltage on the controller connector is 5 volts by checking the voltage between plug 2 (white) and plug 4 (blue) of the test harness.

If 5 volts is not seen, replace the controller.

Figure 20-170-16

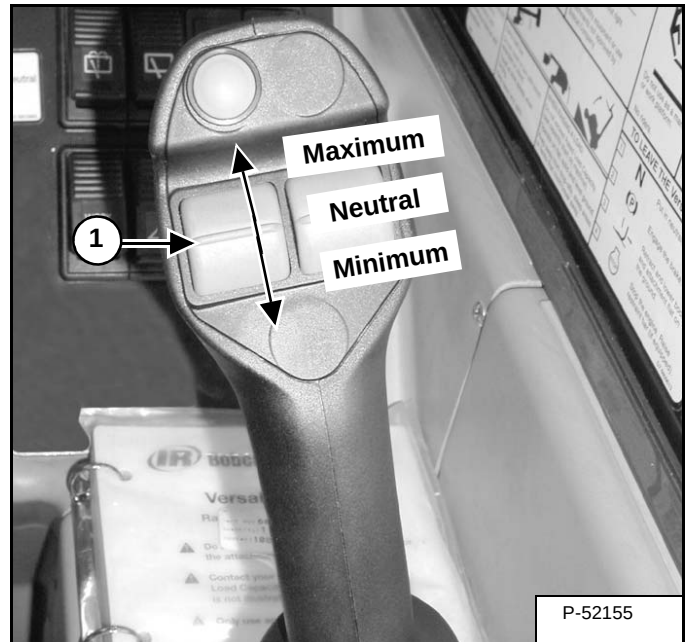

6. With the auxiliary function switch (Item 1) [Figure 20-170-4] in the minimum (back) position check that the voltage between plug 2 (white) and plug 3 (grey/black) of the test harness is 0.9 volts.

If the voltage drops below 0.9 volts the controller will interpret this as a failure.

7. With the auxiliary function switch (Item 1) [Figure 20-170-4] in the neutral (middle) position check that the voltage between plug 2 (white) and plug 3 (grey/black) of the test harness is 2.5 volts.
8. With the auxiliary function switch (Item 1) [Figure 20-170-4] in the maximum (forward) position check that the voltage between plug 2 (white) and plug 3 (grey/black) of the test harness is 4.1 volts.

If one of the three voltage readings in Steps 6, 7 and 8 is not correct, replace the joystick handle. (See "Removal And Installation" on page 20-180-1.)

If all voltage readings in Steps 6, 7 and 8 are correct go to step 9.


HYDRAULIC CONTROL VALVE (CONT'D)

Auxiliary Valve Section Troubleshooting (Cont'd)

Checking Pilot Pressure

Raise the boom and install the boom stop. (See "Installing The Approved Boom Stop" on page 10-150-1.)

Figure 20-170-17

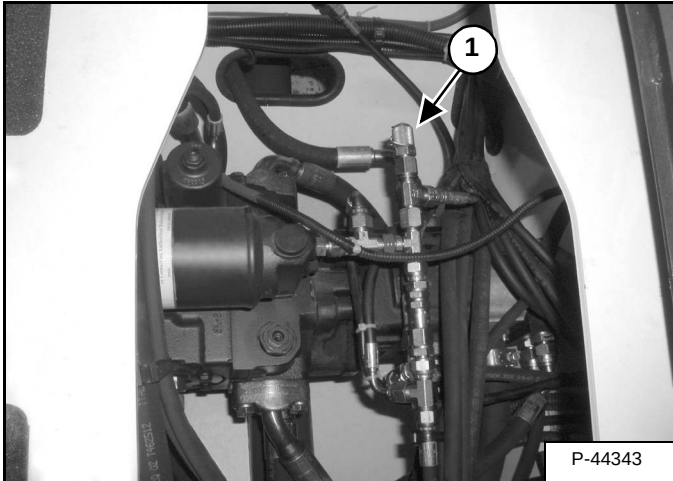

9. Locate the test fitting (Item 1) [Figure 20-170-17] and remove the cap.


Figure 20-170-18



10. Install a 1000 PSI (70 bar) gauge on the test fitting [Figure 20-170-18].
11. Start the engine, lower the restraint bar (if equipped) and run the engine at 2200 RPM. Record the pressure. The pressure at the gauge should be 508 PSI (35 bar) maximum.
12. Remove the gauge.


Checking Drain Pressure

Figure 20-170-19

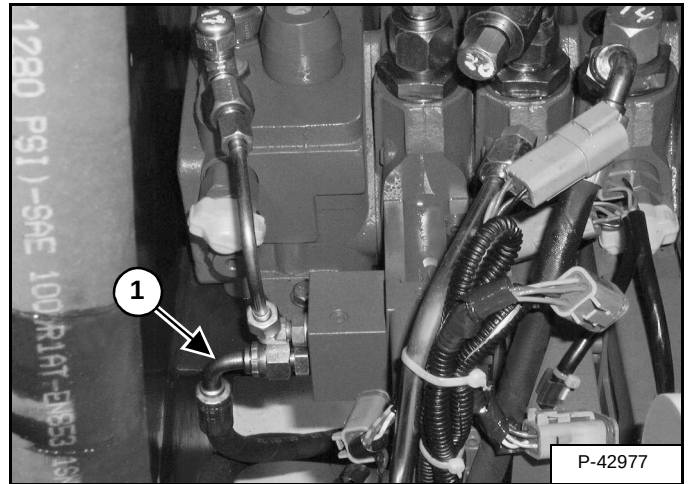

13. Remove the hose (Item 1) [Figure 20-170-19] from the control valve, and install a tee fitting.

Figure 20-170-20

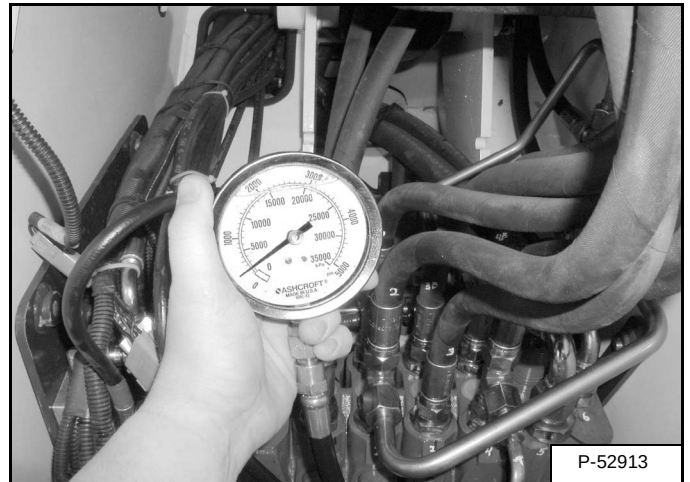


14. Install a 500 PSI (35 bar) gauge on the tee fitting [Figure 20-170-20].
15. Start the engine, lower the restraint bar (if equipped) and run the engine at 2200 RPM. Record the pressure. The pressure at the gauge should be 22 PSI (1,5 bar) maximum.
16. Remove the gauge.

HYDRAULIC CONTROL VALVE (CONT'D)


Auxiliary Valve Section Troubleshooting (Cont'd)

Figure 20-170-21

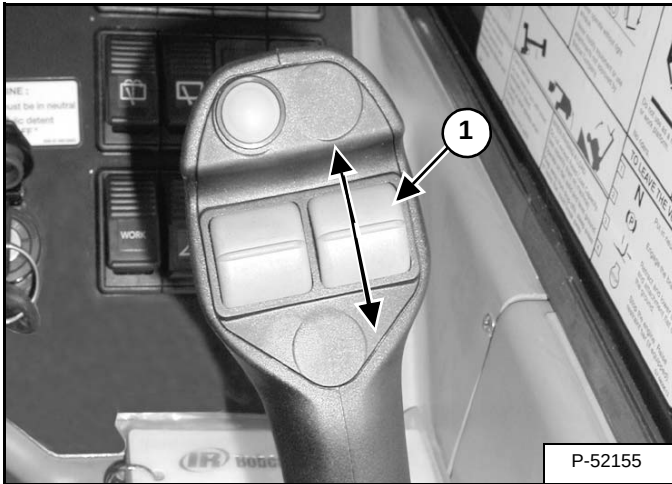


17. With adequate room in front of the machine, start the engine, lower the restraint bar (if equipped) and run the engine at 2200 RPM. Move the auxiliary control switch (Item 1) [Figure 20-170-21] forward and back to see if this function works. Stop the engine.

Figure 20-170-22

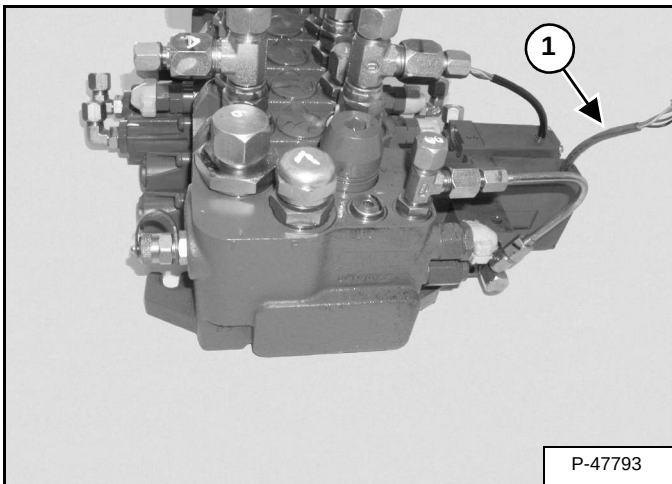


18. If the auxiliary function does not work, with the engine running unplug the controller connector (Item 1) [Figure 20-170-22] and plug it back in.

Figure 20-170-23

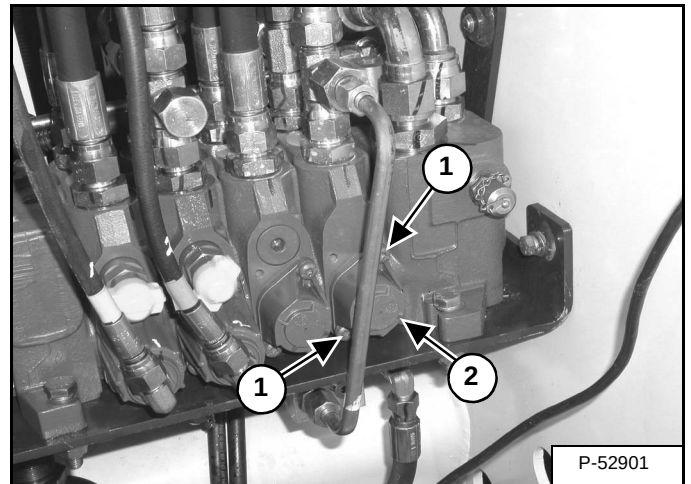

19. If the auxiliary function does not work, remove the two screws (Item 1) and remove the cover (Item 2) [Figure 20-170-23].
20. Start the engine, lower the restraint bar (if equipped) and run the engine at 2200 RPM.

Figure 20-170-24

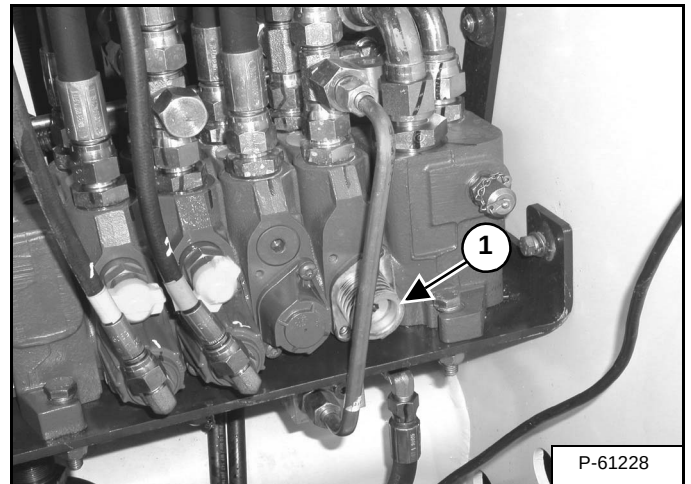

21. Manually push and pull the spool (Item 1) [Figure 20-170-24] to test the movement of the auxiliary function in both directions.

NOTE: If by manually operating the spool, and the auxiliary function is working the controller must be replaced.

HYDRAULIC CONTROL VALVE (CONT'D)**Troubleshooting Chart (Control Valve)**

The following troubleshooting chart is provided for assistance in locating and correcting problems which are most common. Many of the recommended procedures must be done by authorized Bobcat Service Personnel

**WARNING**

Check for correct function after adjustments, repairs or service. Failure to make correct repairs or adjustments can cause injury or death.

W-2004-1285

PROBLEM	CAUSE	CORRECTION
Lack of strength at all actuators	Load sense relief cartridge defective	Replace relief cartridge
	Load sense relief cartridge out of adjustment	Make necessary adjustments
Lack of force on one actuator only	Secondary relief valve out of adjustment	Reset to original pressure
	Secondary relief valve blocked open	Replace relief valve
Lack of load hold	Load check valve failure	Replace load check valve
	Excessive clearance between housing and spool	Replace housing and spool
Simultaneous movement of controls	Blockage of individual compensator orifice	Remove and clean orifice
	Individual pressure compensator blocked	Replace housing and compensator
	Load sense line leakage	Replace load sense regulator
Engine remains under load after spools are returned to neutral	Flow regulator blocked	Replace flow regulator
	Flow regulator filter clogged	Replace filter
Detent malfunction	Controller defective	Replace controller
Spool return difficult	Tie rod bolts too tight	Re-torque tie rod bolts
Spool leaking oil	Defective spool seal	Replace spool seal
Oil leakage between valve section	Defective seals	Replace seals

HYDRAULIC CONTROL VALVE (CONT'D)

Removal And Installation

Relieve hydraulic pressure. Drain the hydraulic reservoir. (See "Replacing Hydraulic Fluid" on page 10-100-3.)

WARNING

Hydraulic fluid escaping under pressure can have sufficient force to enter a person's body by penetrating the skin. This can cause serious injury and possible death if proper medical treatment by a physician familiar with this injury is not received immediately.


W-2145-0290

IMPORTANT

When making repairs on hydraulic system, clean the work area before disassemble and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.


I-2056-0793

Figure 20-170-25

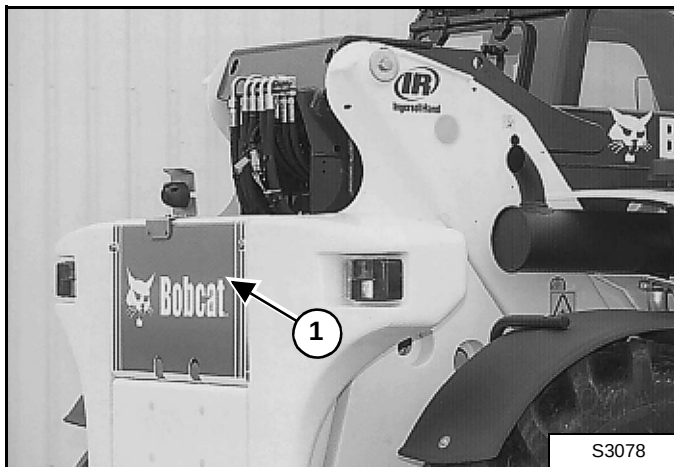


Remove the rear cover (Item 1) [Figure 20-170-25].

Figure 20-170-26

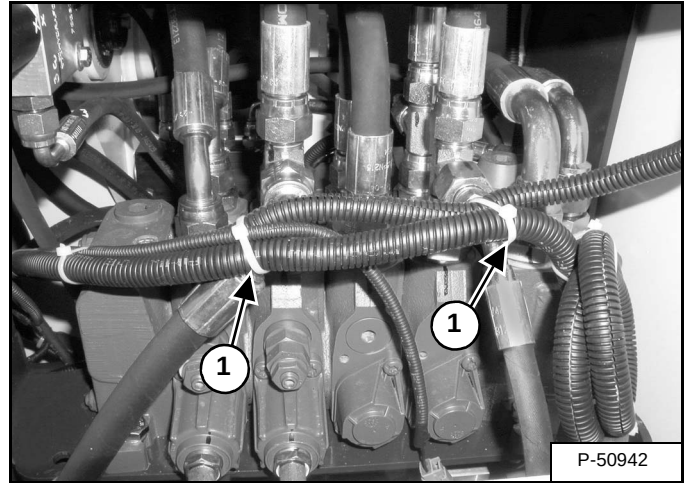

Remove the two tie straps (Item 1) [Figure 20-170-26] and reposition the harness.

Figure 20-170-27

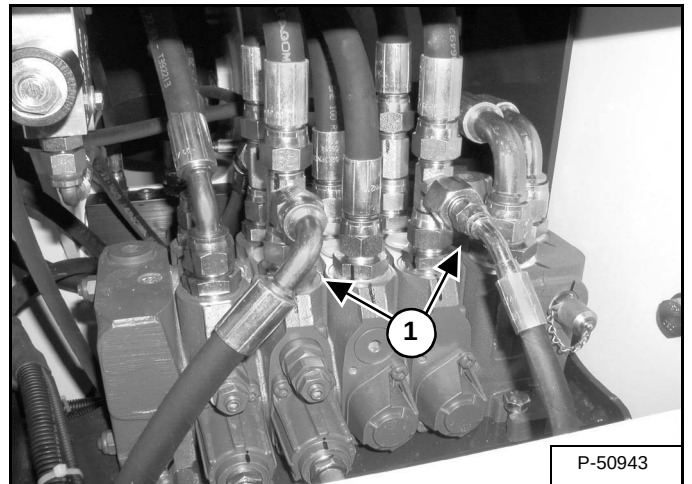


Remove the two hoses (Item 1) [Figure 20-170-27].

NOTE: Mark all hoses and tubelines for correct installation.

HYDRAULIC CONTROL VALVE (CONT'D)


Removal And Installation (Cont'd)

Figure 20-170-28

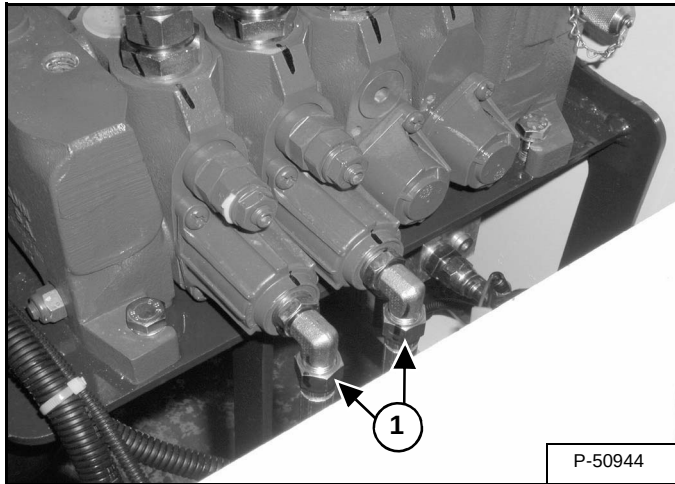


Remove the two hoses (Item 1) [Figure 20-170-28].

Figure 20-170-29

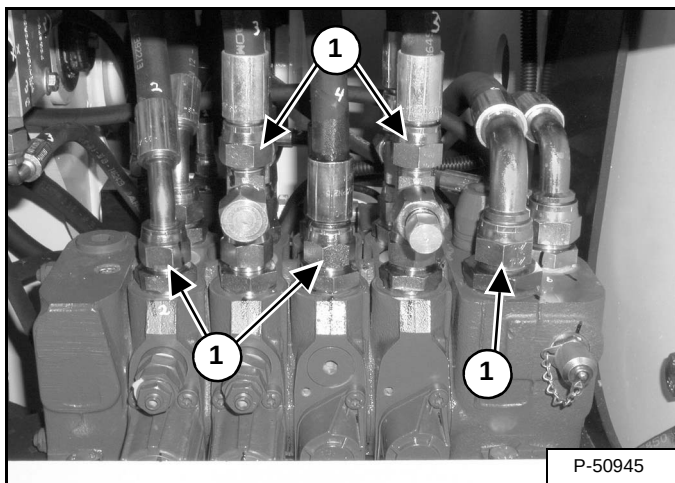


Remove the five hoses (Item 1) [Figure 20-170-29] from the control valve.

Figure 20-170-30

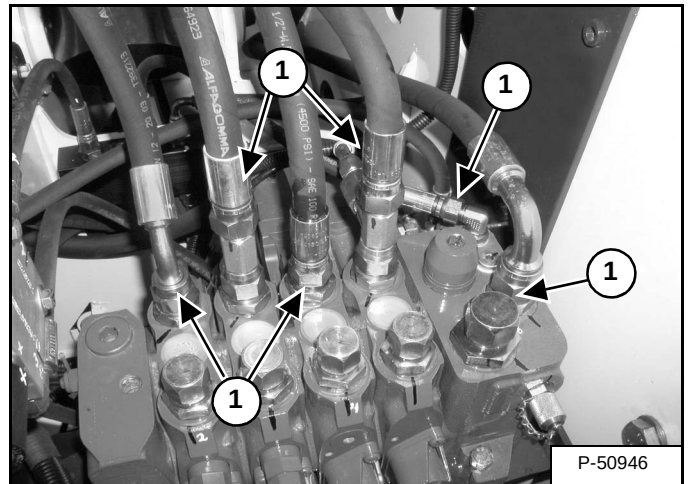

Remove the six hoses (Item 1) [Figure 20-170-30] from the control valve.

Figure 20-170-31

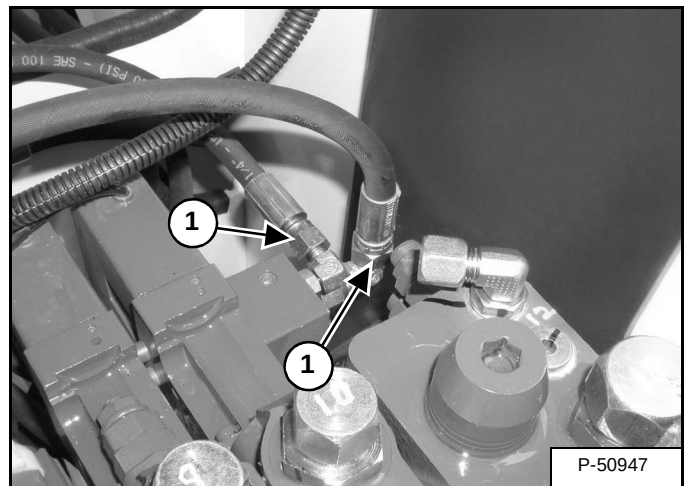


Remove the two hoses (Item 1) [Figure 20-170-31] from the control valve.

HYDRAULIC CONTROL VALVE (CONT'D)

Removal And Installation (Cont'd)


Figure 20-170-32

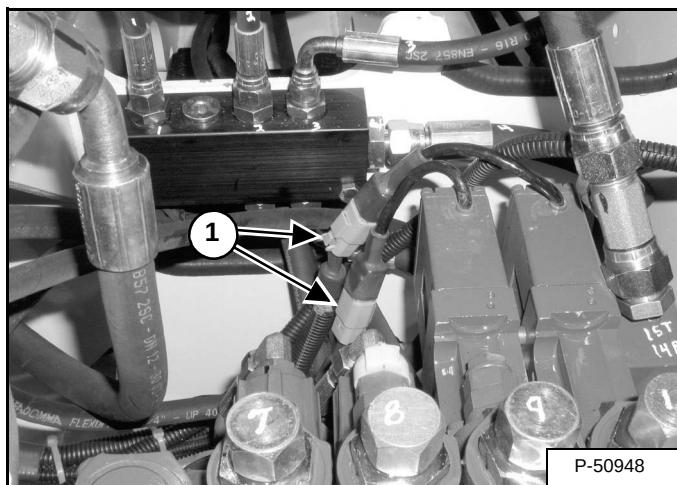

Unplug the two wire connectors (Item 1) [Figure 20-170-32] from the main wire harness.


NOTE: Mark the location of the connectors for correct installation.

Figure 20-170-33

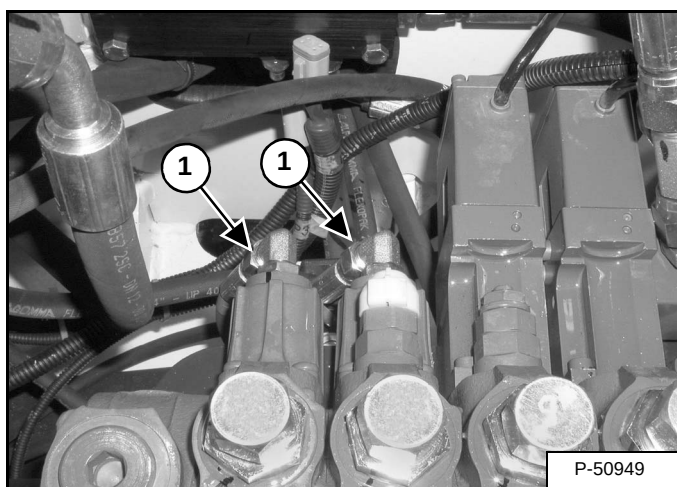


Remove the two hoses (Item 1) [Figure 20-170-33].

Figure 20-170-34

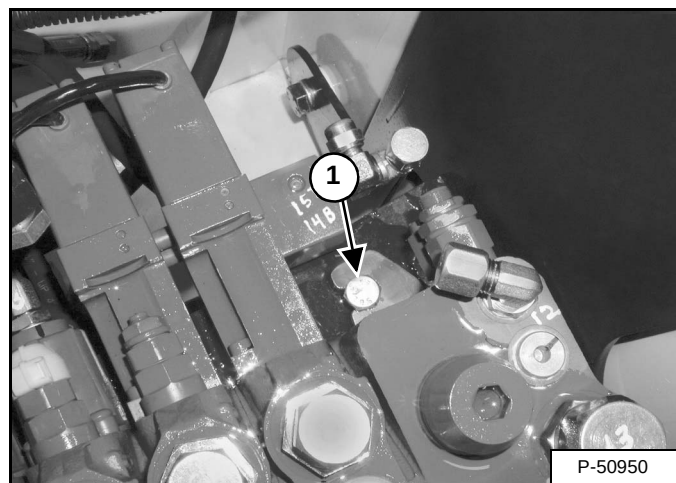

Remove the mounting bolt (Item 1) [Figure 20-170-34] from the front of the control valve.

Figure 20-170-35

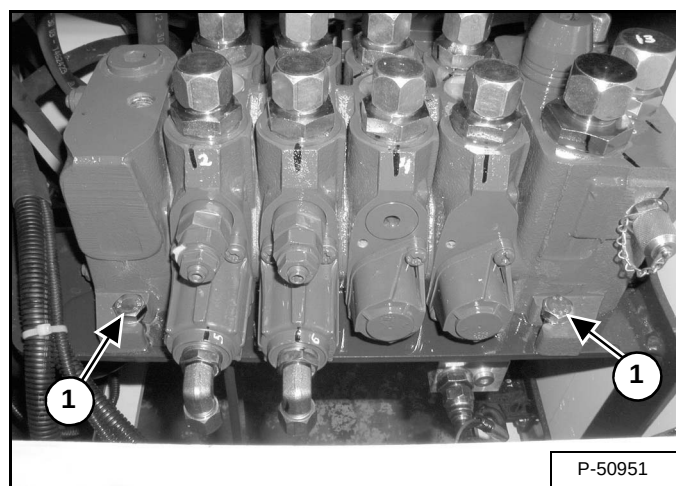


Remove the two mounting bolts (Item 1) [Figure 20-170-35] from the control valve.

Installation: Tighten the mounting bolts to 18-19 ft.-bs. (24-26 Nm) torque.

HYDRAULIC CONTROL VALVE (CONT'D)

Removal And Installation (Cont'd)

Figure 20-170-36

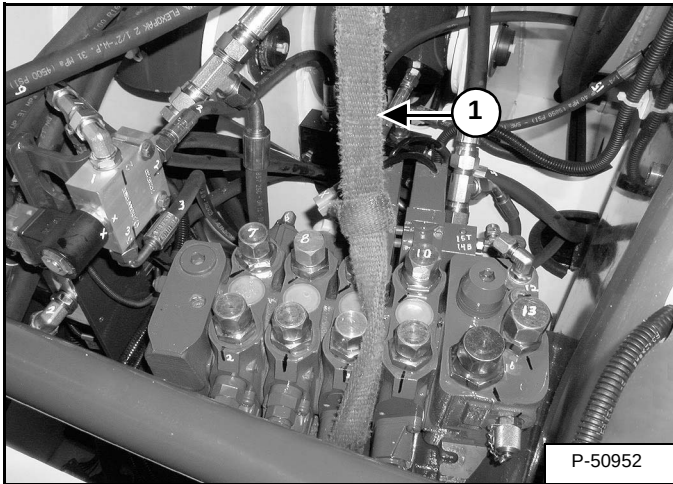

Install a hoist and lifting strap (Item 1) [Figure 20-170-36] on the control valve.


Remove the hydraulic control valve.

Use care not to damage the tubelines or fittings.

HYDRAULIC CONTROL VALVE (CONT'D)

Parts Identification

1. End Housing
2. Lifting Valve Section
3. Tilting Valve Section
4. Telescoping Valve Section
5. Auxiliary Valve Section
6. Inlet-Outlet Valve Section

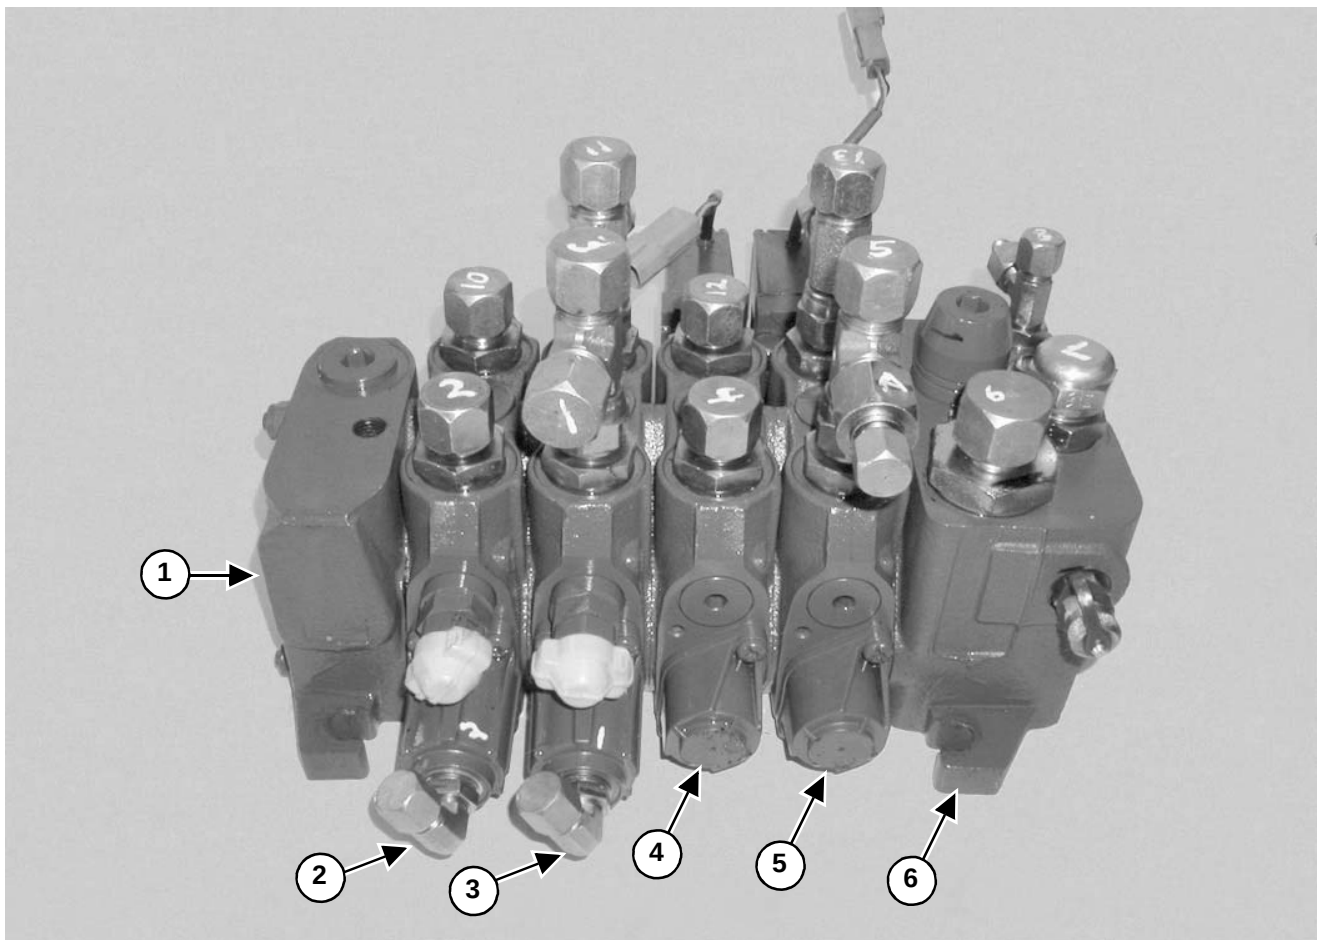

P-47794

HYDRAULIC CONTROL VALVE (CONT'D)


Disassembly And Assembly

IMPORTANT

When making repairs on hydraulic system, clean the work area before disassemble and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.


I-2056-0793

Figure 20-170-37

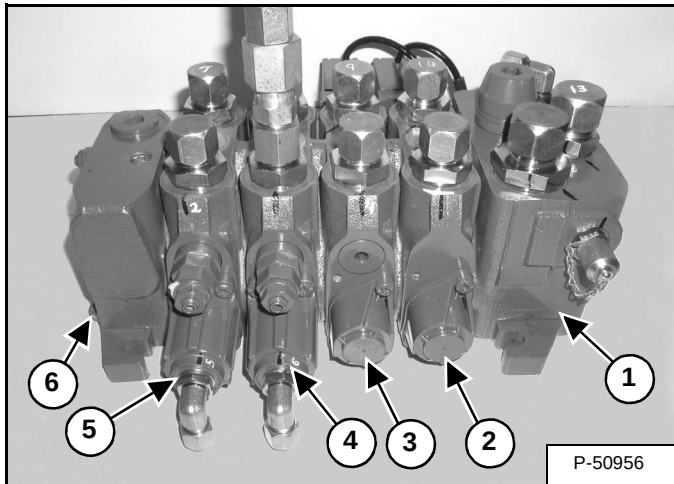


Mark the valve sections for ease of assembly Inlet/Outlet Valve Section (Item 1), Auxiliary/Frame Leveling Valve Section (Item 2), Telescoping Valve Section (Item 3), Tilting Valve Section (Item 4), Lifting Valve Section (Item 5) and End Housing Valve Section (Item 6) [Figure 20-170-37].

Figure 20-170-38

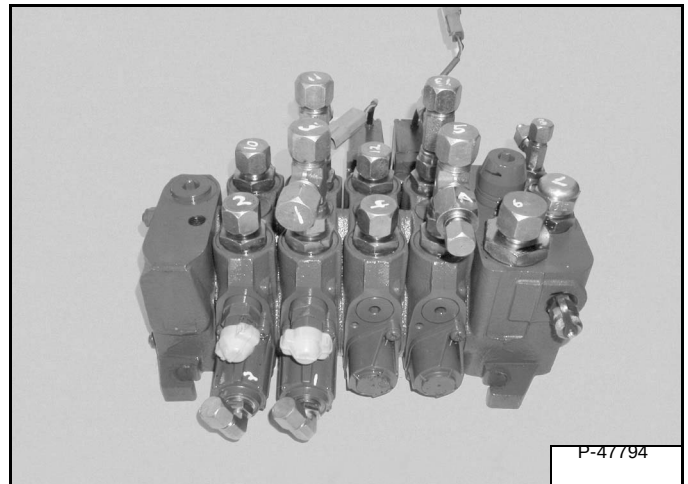

Remove all hydraulic fittings. Mark the valve sections for proper assembly [Figure 20-170-38].

Figure 20-170-39

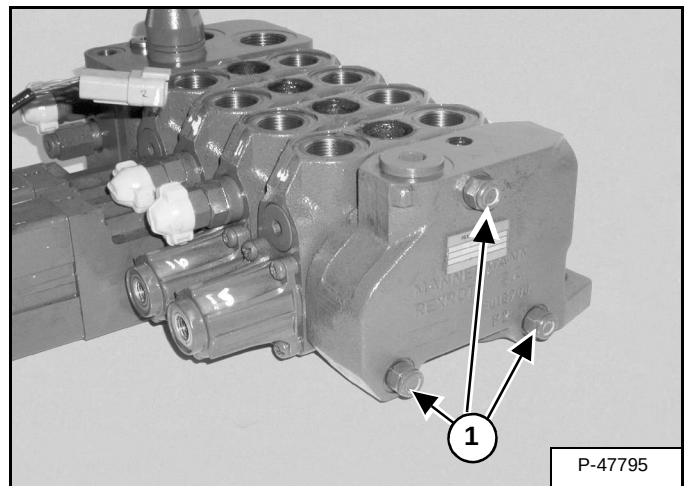

Remove the three nuts (Item 1) [Figure 20-170-39] from the tie rod bolts.


Assembly: Tighten the nuts to 26 ft.-lbs. (35 Nm) torque.

HYDRAULIC CONTROL VALVE (CONT'D)

End Housing Disassembly And Assembly


Remove the O-ring (Item 1) [Figure 20-170-42] from the plug..

Figure 20-170-40

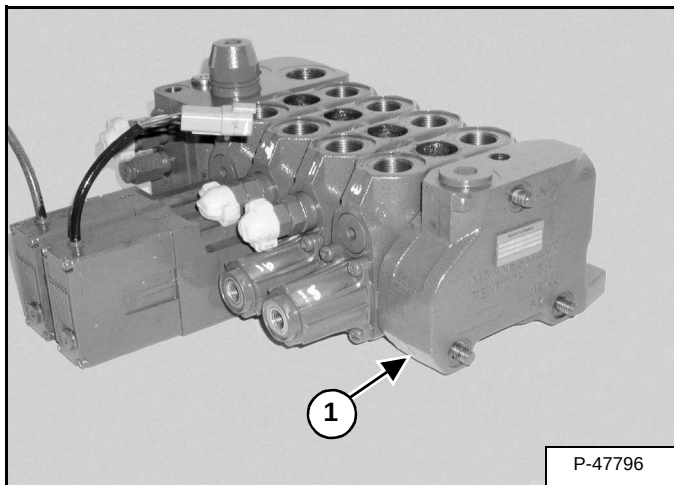


Remove the end housing (Item 1) [Figure 20-170-40].

Figure 20-170-41

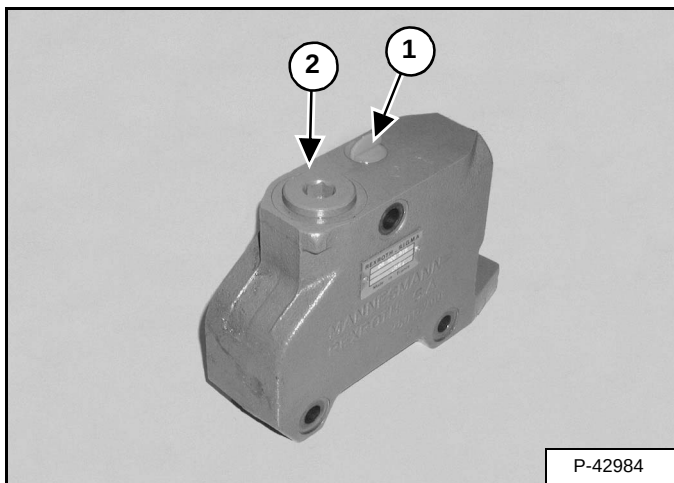

Remove the dust cap (Item 1) and plug (Item 2) [Figure 20-170-41] from the end housing.


Figure 20-170-42

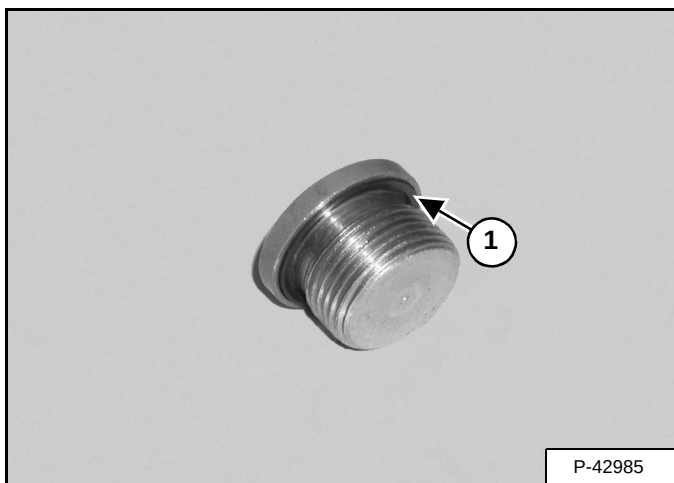

HYDRAULIC CONTROL VALVE (CONT'D)


Lifting Valve Section Disassembly And Assembly

Figure 20-170-43

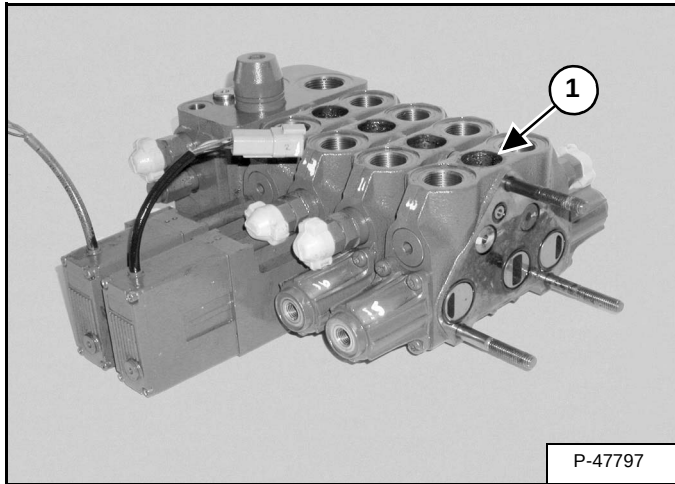


Remove the lifting valve section (Item 1) [Figure 20-170-43].

Figure 20-170-44

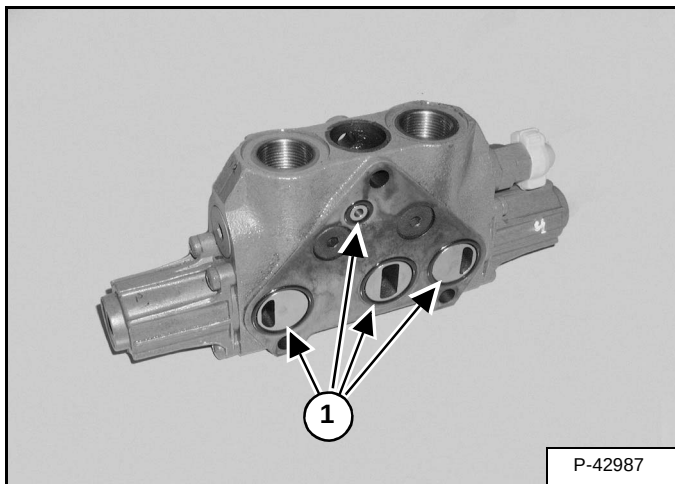


Remove the four O-rings (Item 1) [Figure 20-170-44] from the valve section.

Figure 20-170-45

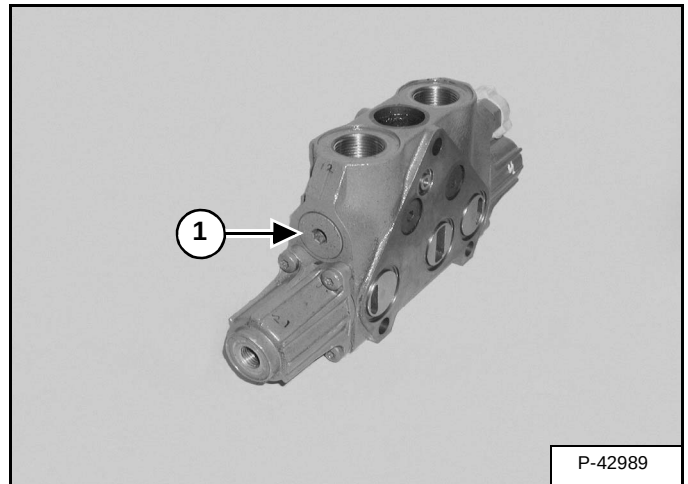

Remove the plug (Item 1) [Figure 20-170-45] from the valve section.

Figure 20-170-46

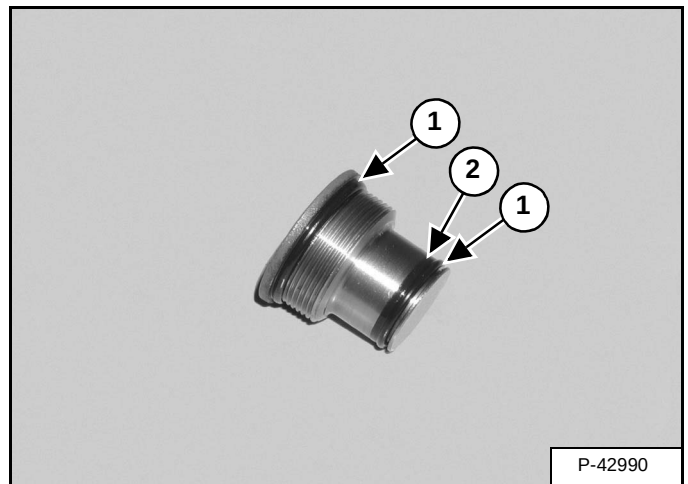


Remove the two O-rings (Item 1) and backup ring (Item 2) [Figure 20-170-46] from the plug.

HYDRAULIC CONTROL VALVE (CONT'D)

Lifting Valve Section Disassembly And Assembly (Cont'd)


Figure 20-170-47

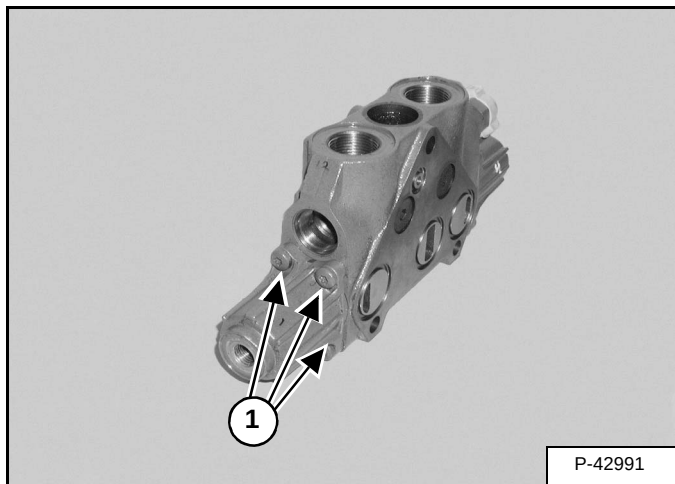

Loosen the four screws (Item 1) [Figure 20-170-47].


Assembly: Tighten the screws to 7 ft.-lbs. (10 Nm) torque.

Figure 20-170-48

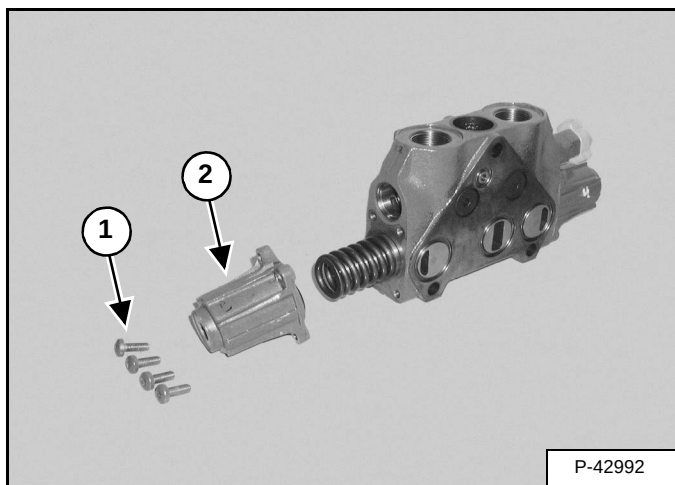


Remove the four screws (Item 1) and cover (Item 2) [Figure 20-170-48].

Figure 20-170-49

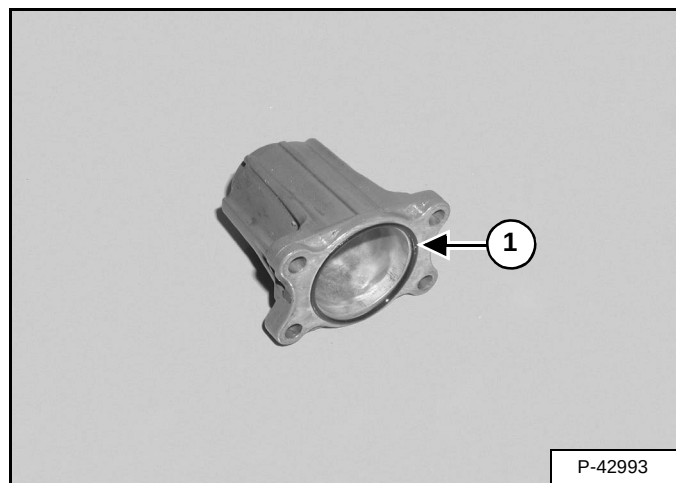

Remove the O-ring (Item 1) [Figure 20-170-49] from the cover.

Figure 20-170-50

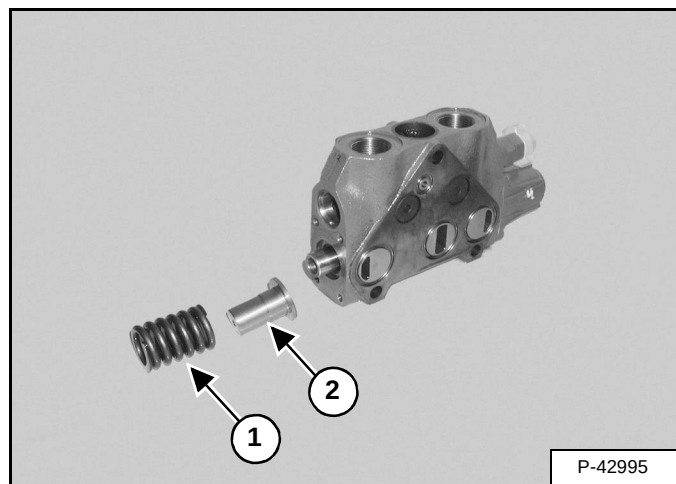


Remove the spring (Item 1) and spring retainer (Item 2) [Figure 20-170-50] from the spool.

HYDRAULIC CONTROL VALVE (CONT'D)

Lifting Valve Section Disassembly And Assembly (Cont'd)


Figure 20-170-51

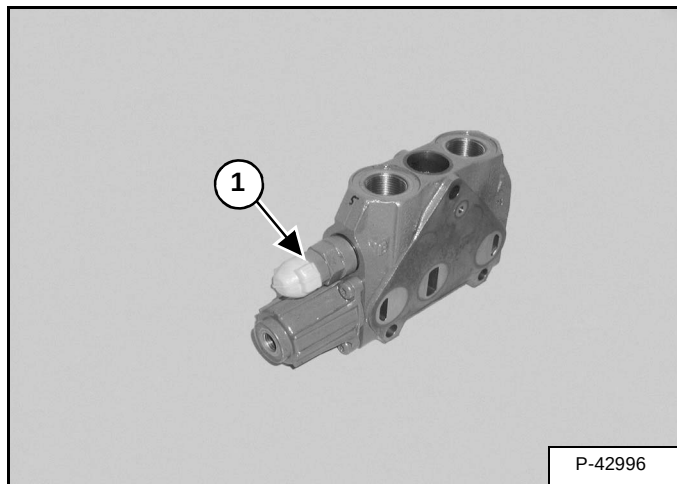

Remove the relief valve (Item 1) [Figure 20-170-51] from the valve section.


Assembly: Tighten the relief valve to 33 ft.-lbs. (45 Nm) torque.

Figure 20-170-52

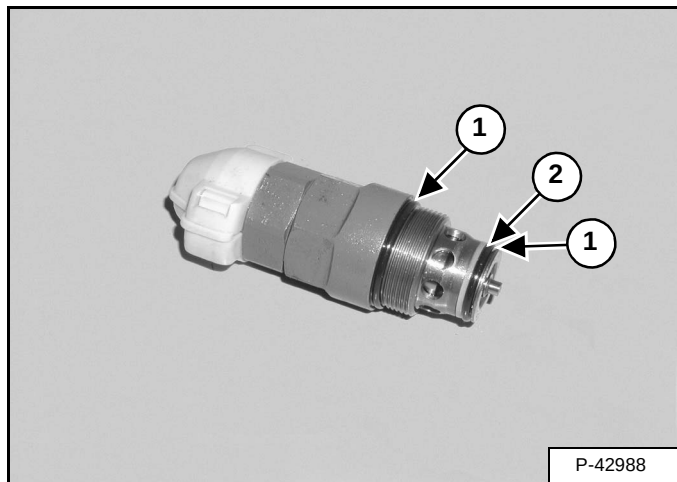

Remove the two O-rings (Item 1) and backup ring (Item 2) [Figure 20-170-52] from the relief valve.


Figure 20-170-53

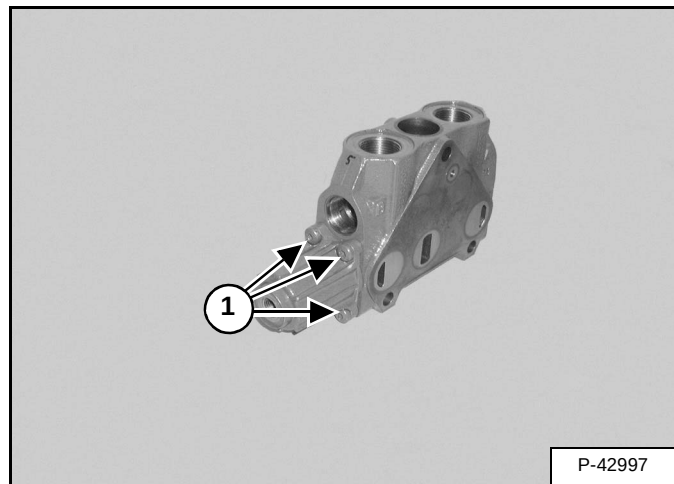

Loosen the four screws (Item 1) [Figure 20-170-53].

Assembly: Tighten the screws to 7 ft.-lbs. (10 Nm) torque.

Figure 20-170-54

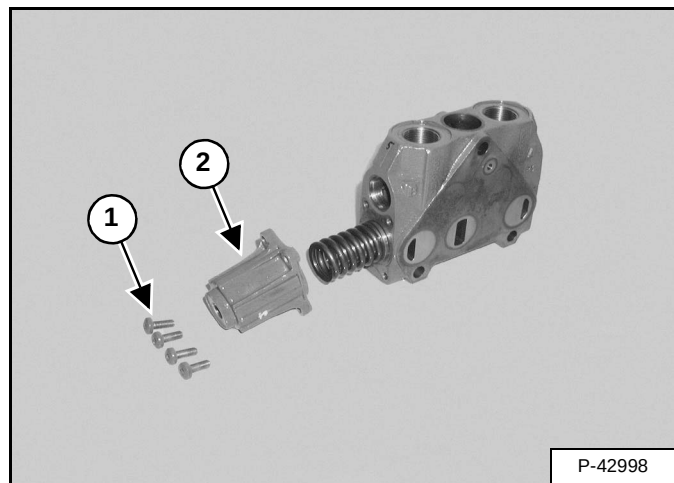


Remove the four screws (Item 1) and cover (Item 2) [Figure 20-170-54] from the valve section.

HYDRAULIC CONTROL VALVE (CONT'D)


Lifting Valve Section Disassembly And Assembly (Cont'd)

Figure 20-170-55

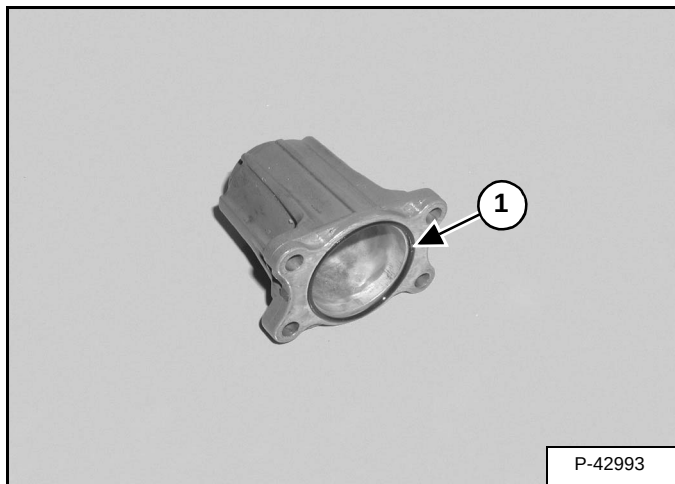


Remove the O-ring (item 1) [Figure 20-170-55] from the cover.

Figure 20-170-56

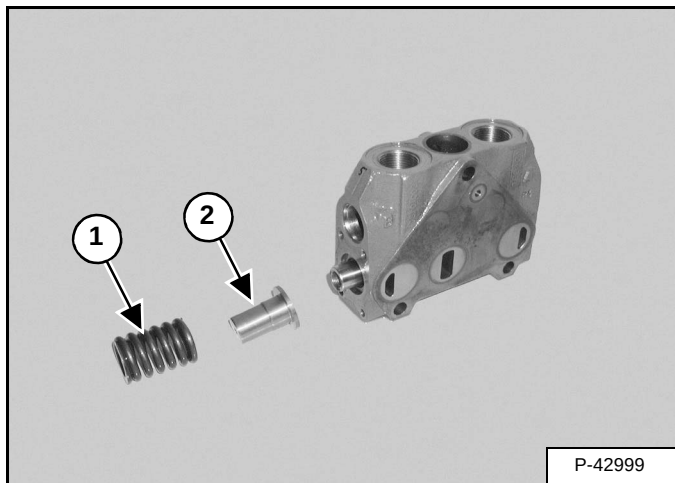


Remove the spring (Item 1) and spring retainer (Item 2) [Figure 20-170-56] from the spool.

Figure 20-170-57

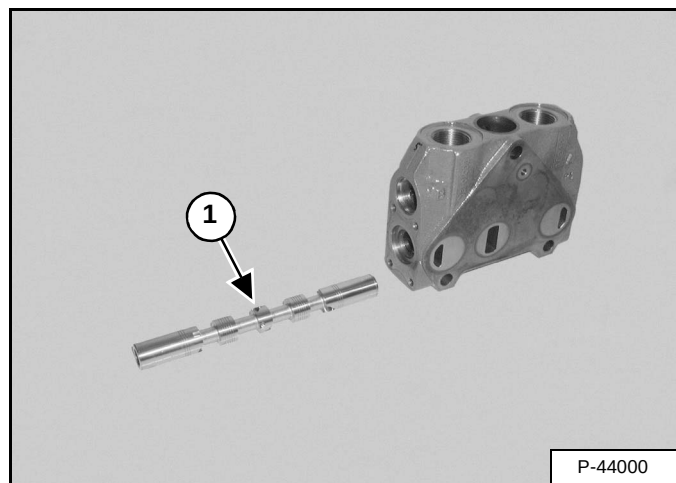

Remove the spool (Item 1) [Figure 20-170-57] from the valve section.

Figure 20-170-58

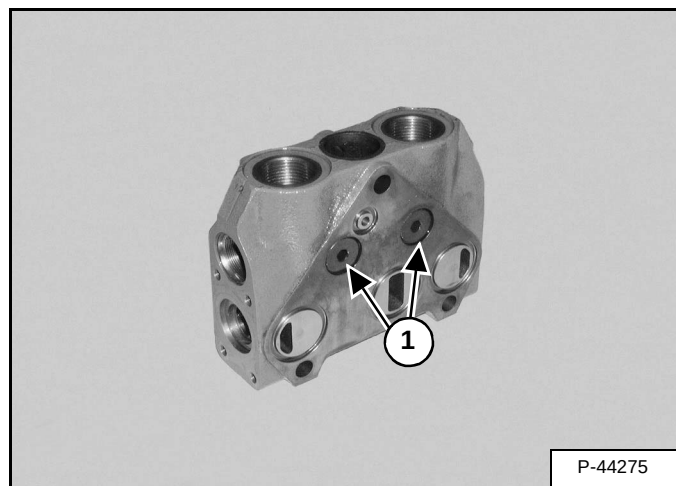


Remove the two plugs (Item 1) [Figure 20-170-58] from the valve section.

Assembly: Tighten the plugs to 20-24 ft.-lbs. (27-33 Nm) torque.

HYDRAULIC CONTROL VALVE (CONT'D)


Lifting Valve Section Disassembly And Assembly (Cont'd)

Figure 20-170-59

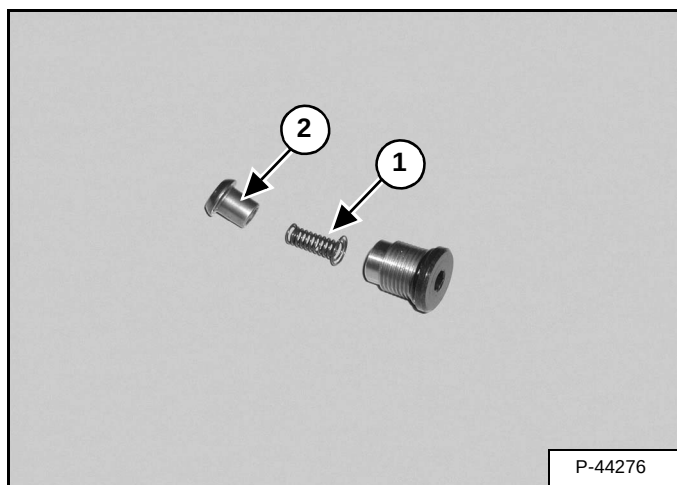


Remove the spring (Item 1) and poppet (Item 2) [Figure 20-170-59] from the plugs.

Figure 20-170-60

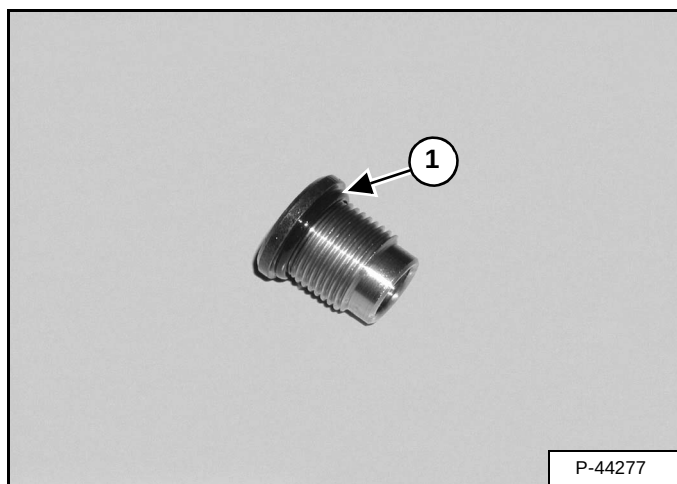

Remove the O-ring (Item 1) [Figure 20-170-60] from the plugs.


Figure 20-170-61

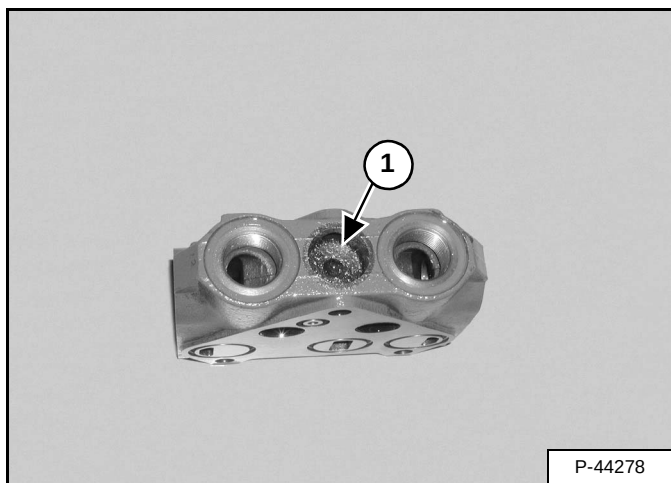

Loosen the plug (Item 1) [Figure 20-170-61].

Assembly: Tighten the plug to 40-49 ft.-lbs. (54-66 Nm) torque.

Figure 20-170-62

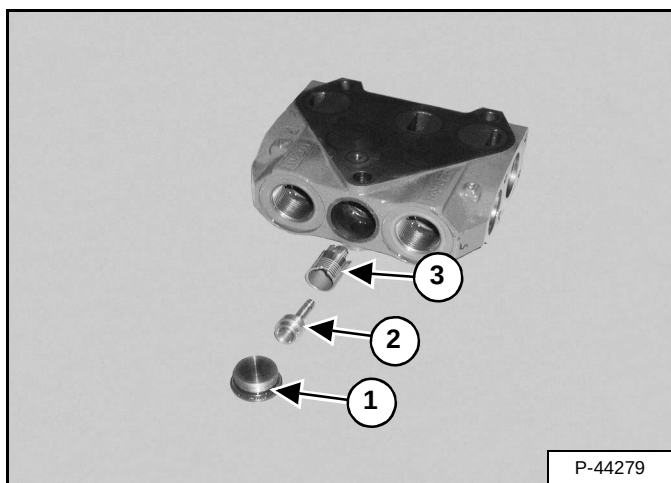


Remove the individual pressure compensator plug (Item 1) poppet (Item 2) and guide (Item 3) [Figure 20-170-62] from the valve section.

HYDRAULIC CONTROL VALVE (CONT'D)

Lifting Valve Section Disassembly And Assembly (Cont'd)


Figure 20-170-63

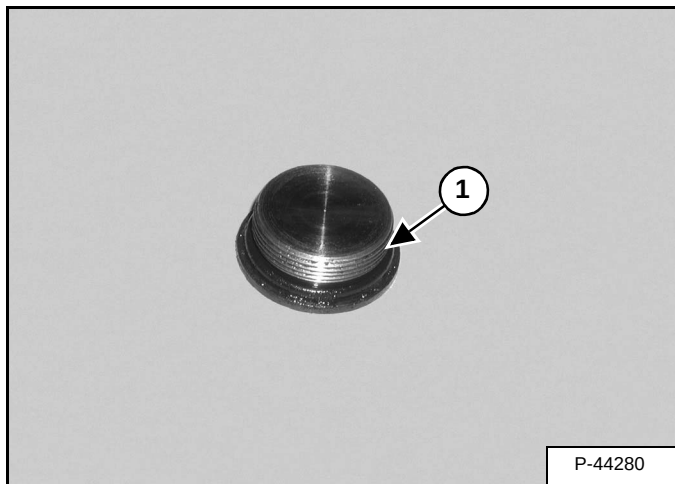

Remove the O-ring (Item 1) [Figure 20-170-63] from the plug.


Tilting Valve Section Disassembly And Assembly

Figure 20-170-64

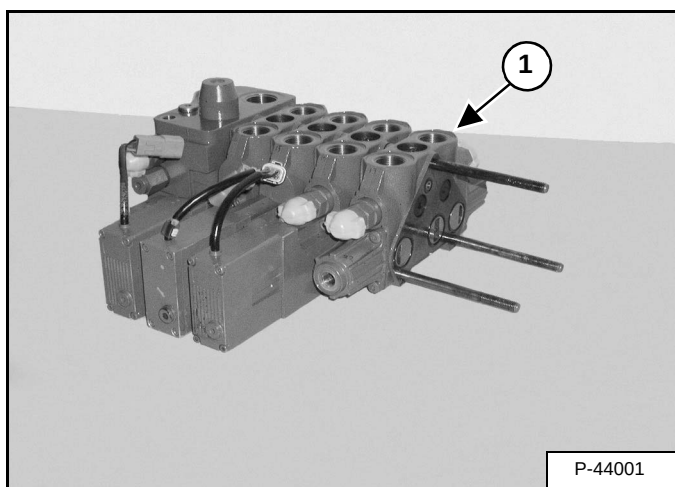


Remove the tilting valve section (Item 1) [Figure 20-170-64]

Figure 20-170-65

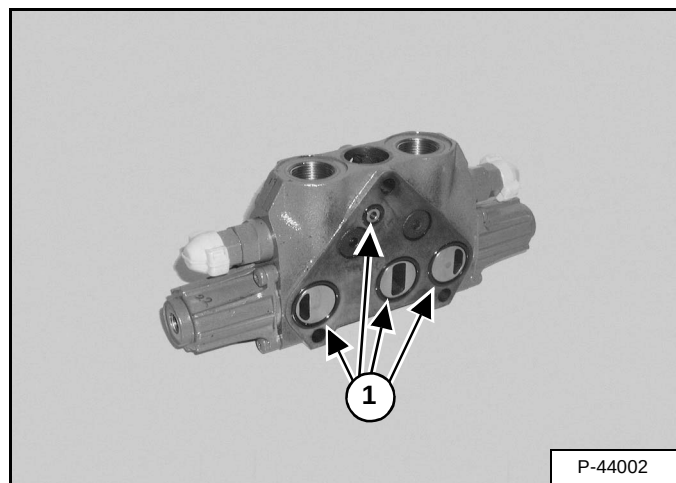

Remove the four O-rings (Item 1) [Figure 20-170-65] from the valve section.

Figure 20-170-66

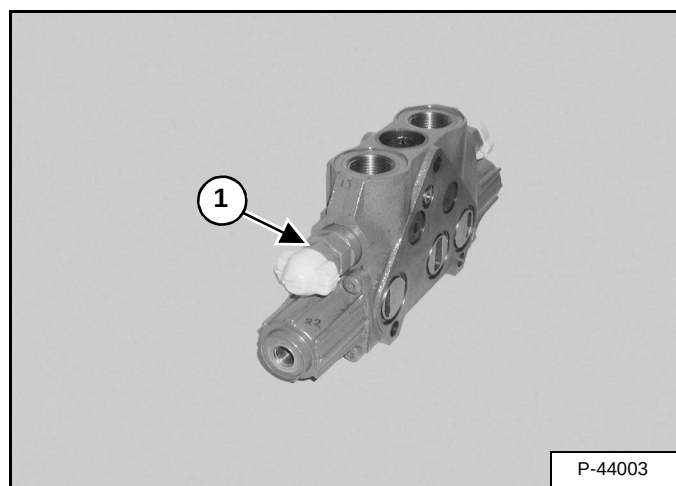


Remove the relief valve (Item 1) [Figure 20-170-66] from the valve section,

Assembly: Tighten the relief valve to 33 ft.-lbs. (45 Nm) torque.

HYDRAULIC CONTROL VALVE (CONT'D)


Tilting Valve Section Disassembly And Assembly (Cont'd)

Figure 20-170-67

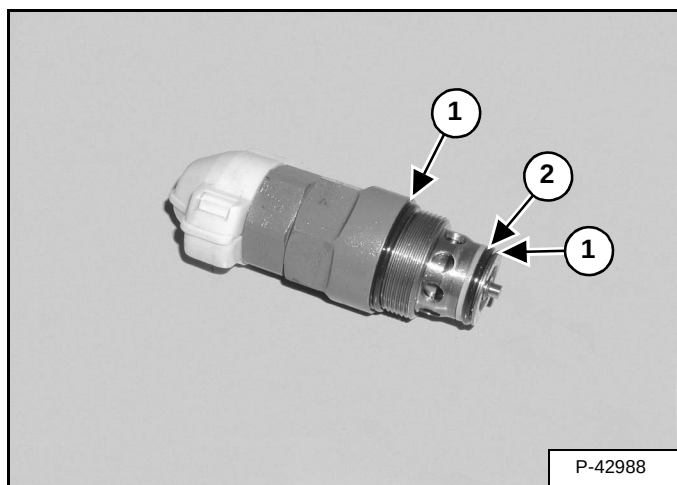

Remove the two O-rings (Item 1) and backup ring (Item 2) [Figure 20-170-67] from the relief valve.


Figure 20-170-68

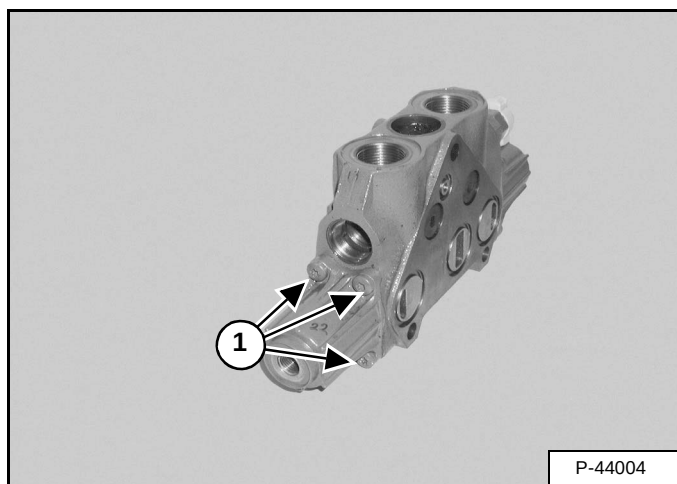

Loosen the four screws (Item 1) [Figure 20-170-68] on the cover.


Assembly: Tighten the screws to 7 ft.-lbs. (10 Nm) torque.

Figure 20-170-69

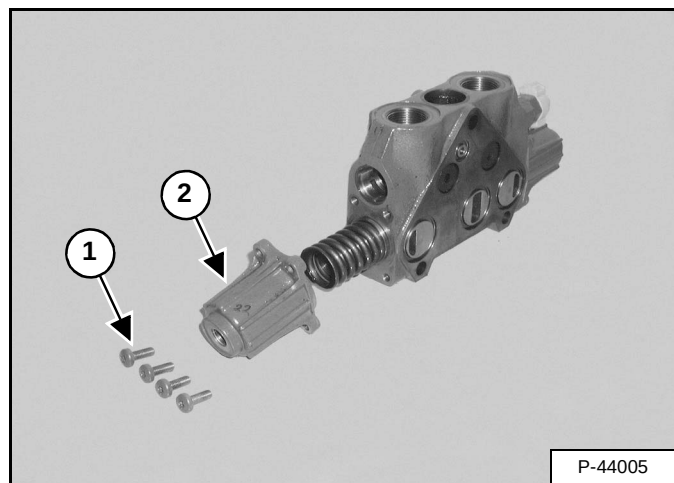

Remove the four screws (Item 1) and cover (Item 2) [Figure 20-170-69] from the valve section.

Figure 20-170-70

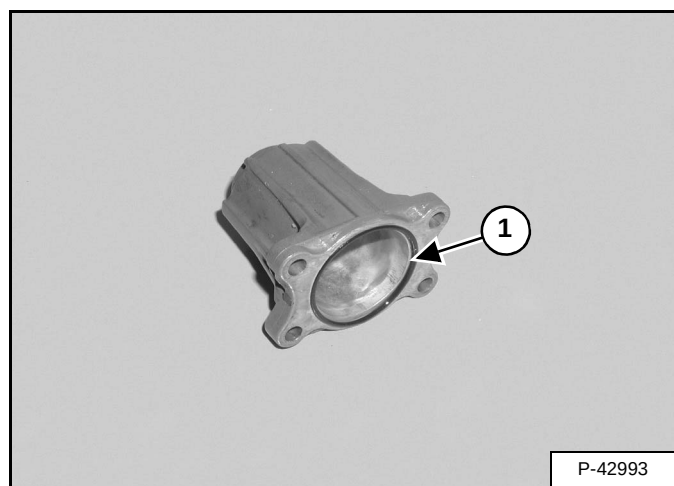


Remove the O-ring (Item 1) [Figure 20-170-70] from the cover.

HYDRAULIC CONTROL VALVE (CONT'D)


Tilting Valve Section Disassembly And Assembly (Cont'd)

Figure 20-170-71

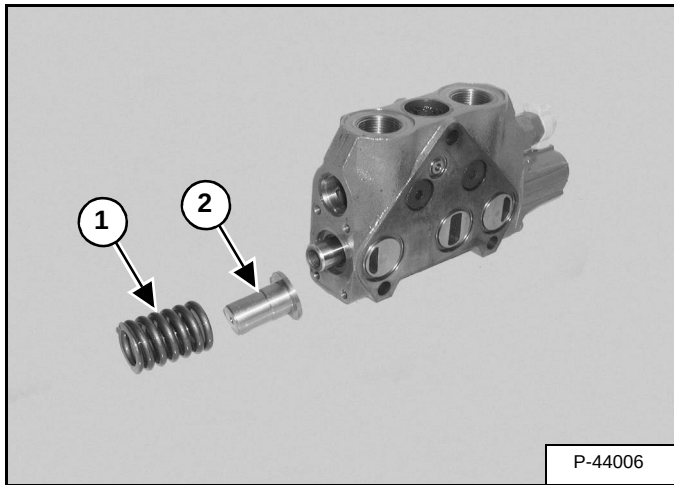

Remove the spring (Item 1) and spring retainer (Item 2) [Figure 20-170-71] from the spool.


Figure 20-170-72

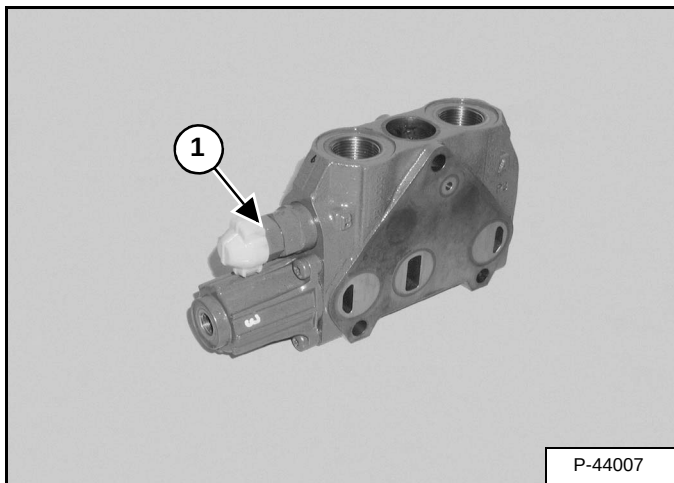

Remove the relief valve (Item 1) [Figure 20-170-72] from the valve section.


Assembly: Tighten the relief valve to 33 ft.-lbs. (45 Nm) torque.

Figure 20-170-73

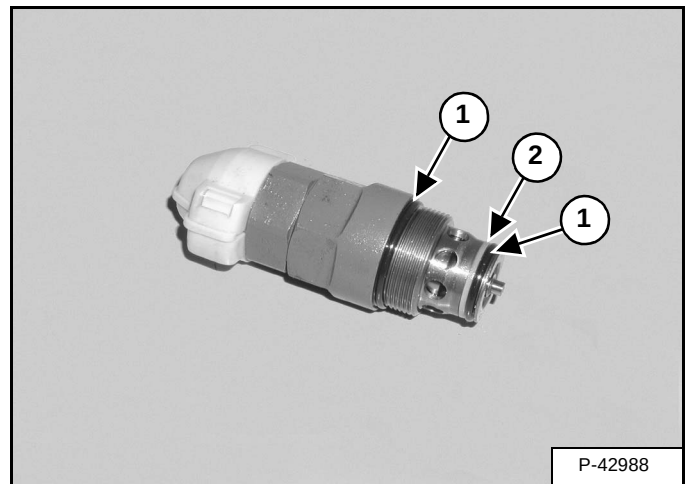

Remove the two O-rings (Item 1) and backup ring (Item 2) [Figure 20-170-73] from the relief valve.

Figure 20-170-74

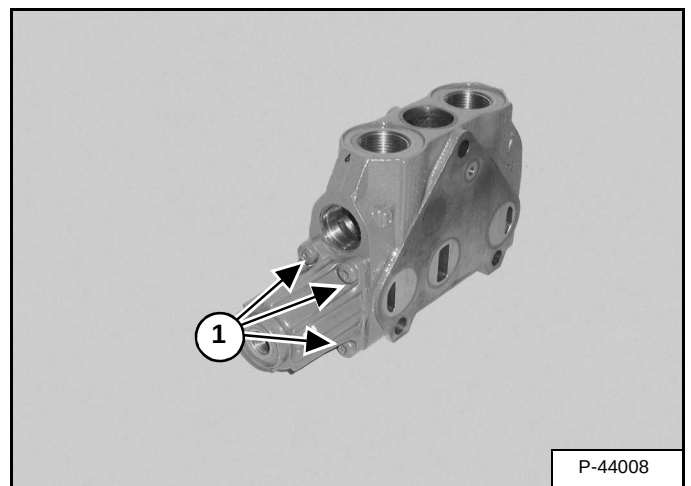


Loosen the four screws (Item 1) [Figure 20-170-74] on the cover.

Assembly: Tighten the screws to 7 ft.-lbs. (10 Nm) torque.

HYDRAULIC CONTROL VALVE (CONT'D)


Tilting Valve Section Disassembly And Assembly (Cont'd)

Figure 20-170-75

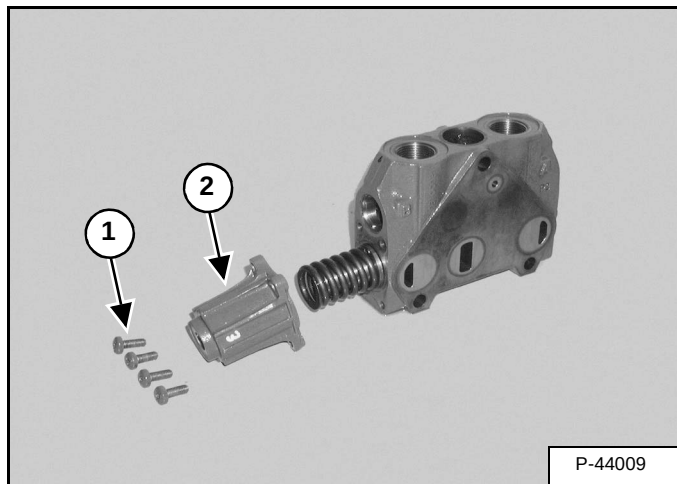


Remove the four screws (Item 1) and cover (Item 2) [Figure 20-170-75] from the valve section.

Figure 20-170-76

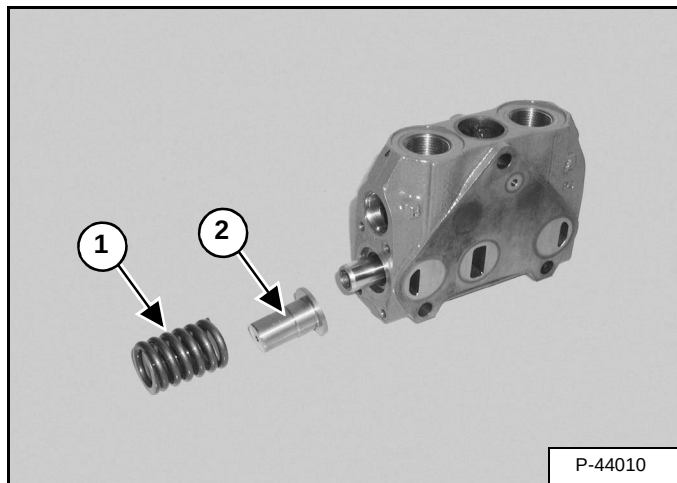


Remove the spring (Item 1) and spring retainer (Item 2) [Figure 20-170-76] from the spool.

Figure 20-170-77

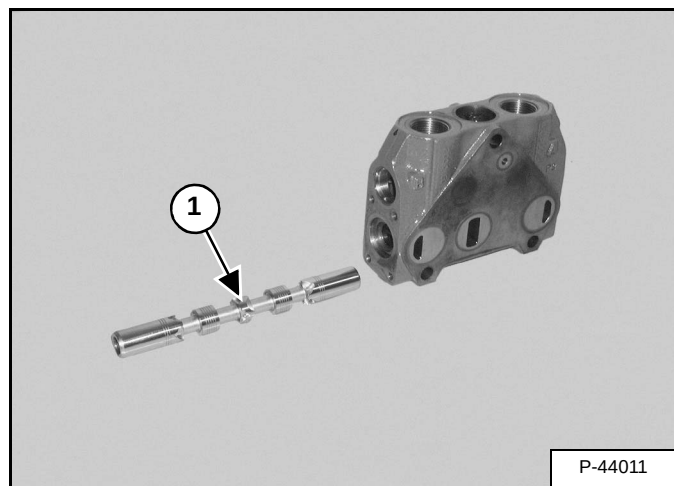

Remove the spool (Item 1) [Figure 20-170-77] from the valve section.

Figure 20-170-78

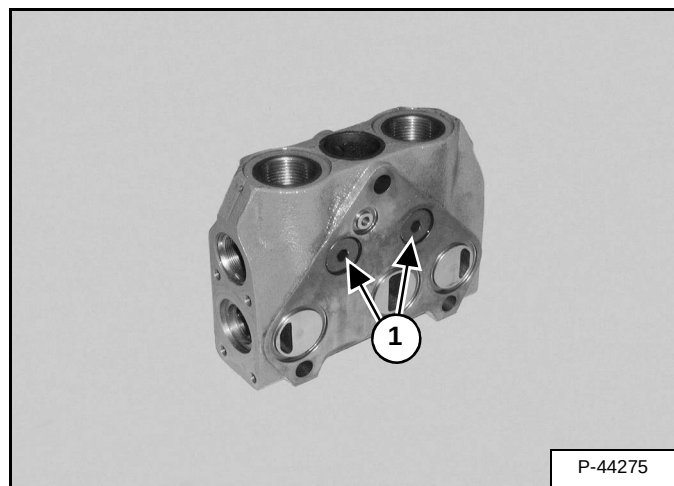


Remove the two plugs (Item 1) [Figure 20-170-78] from the valve section.

Assembly: Tighten the plugs to 20-24 ft.-lbs. (27-33 Nm) torque.

HYDRAULIC CONTROL VALVE (CONT'D)


Tilting Valve Section Disassembly And Assembly (Cont'd)

Figure 20-170-79

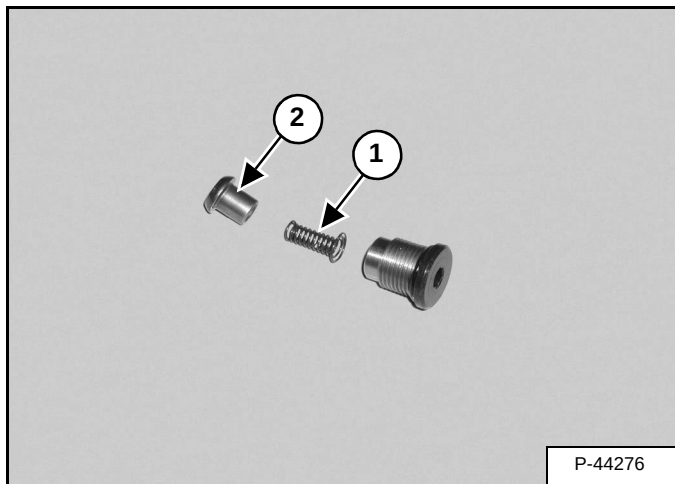


Remove the spring (Item 1) and poppet (Item 2) [Figure 20-170-79] from the plugs.

Figure 20-170-80

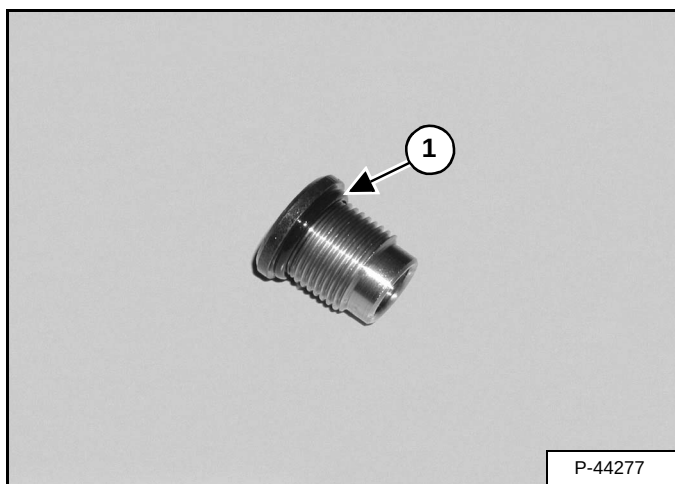

Remove the O-ring (Item 1) [Figure 20-170-80] from the plugs.


Figure 20-170-81

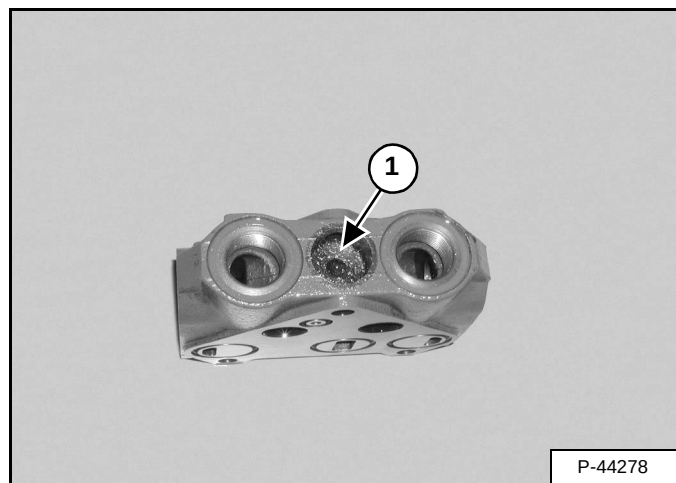

Loosen the plug (Item 1) [Figure 20-170-81].

Assembly: Tighten the plug to 40-49 ft.-lbs. (54-66 Nm) torque.

Figure 20-170-82

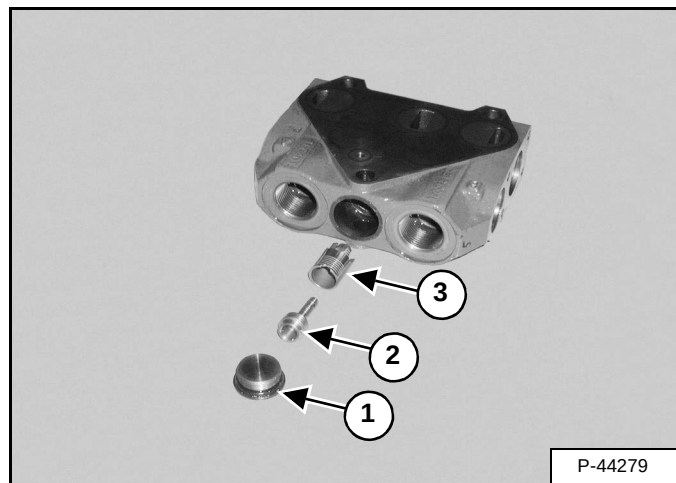


Remove the individual pressure compensator plug (Item 1) poppet (Item 2) and guide (Item 3) [Figure 20-170-82] from the valve section.

HYDRAULIC CONTROL VALVE (CONT'D)

Tilting Valve Section Disassembly And Assembly (Cont'd)


Figure 20-170-83

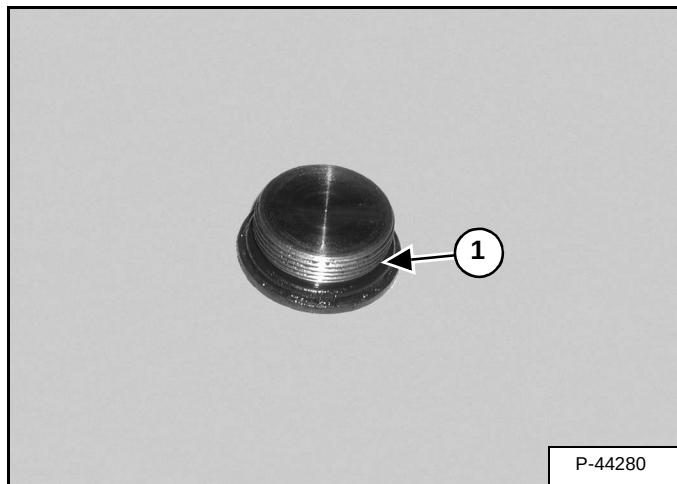

Remove the O-ring (Item 1) [Figure 20-170-83] from the plug.


Telescoping Valve Section Disassembly And Assembly

Figure 20-170-84

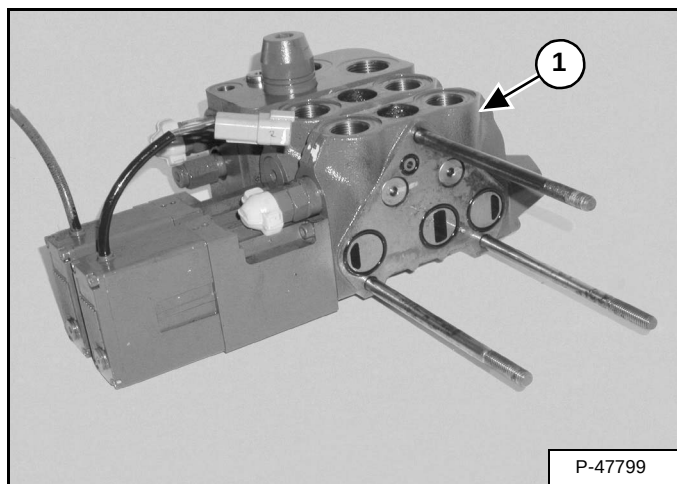


Remove the telescoping valve section (Item 1) [Figure 20-170-84].

Figure 20-170-85

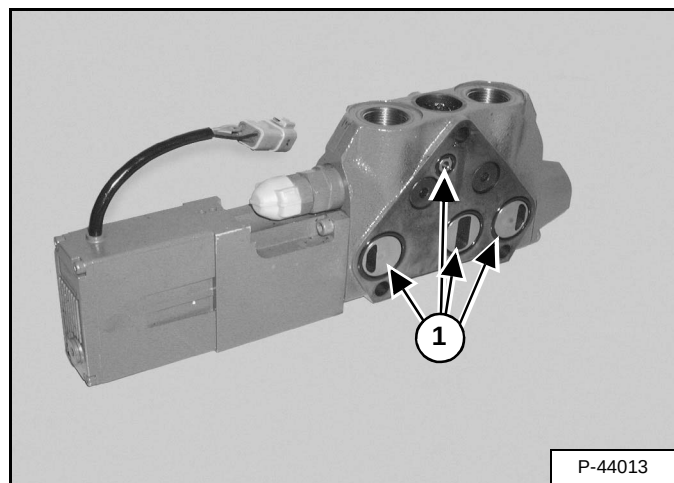

Remove the four O-rings (Item 1) [Figure 20-170-85] from the valve section.

Figure 20-170-86

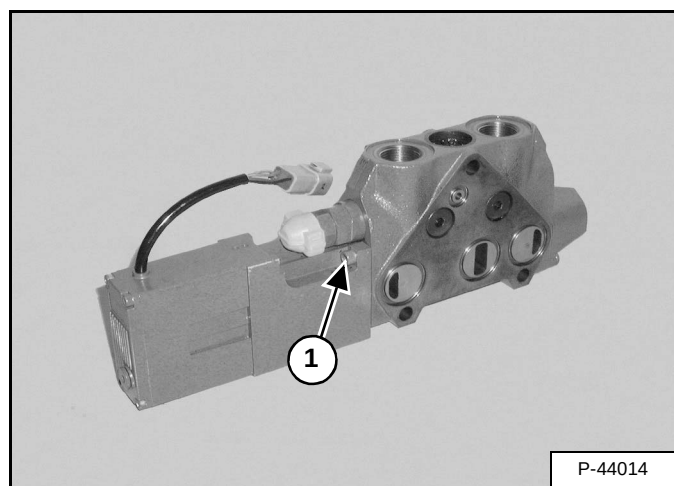


Remove the two screws (Item 1) [Figure 20-170-86] from the controller assembly.

Assembly: Tighten the screws to 10-12 ft.-lbs. (14-16 Nm) torque.

HYDRAULIC CONTROL VALVE (CONT'D)


Telescoping Valve Section Disassembly And Assembly (Cont'd)

Figure 20-170-87

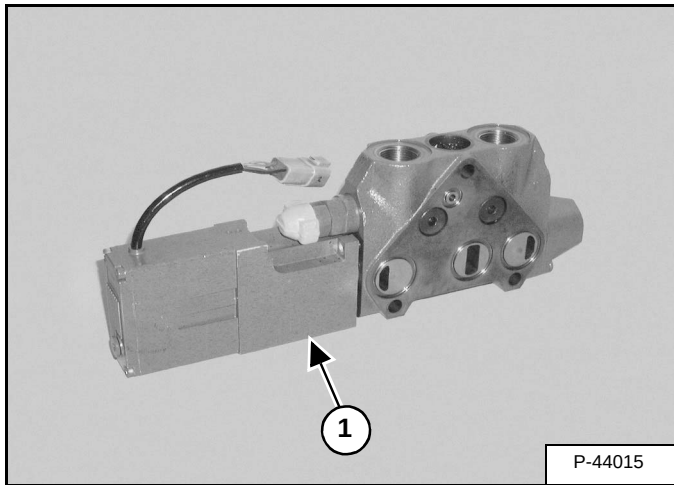


Remove the controller assembly (Item 1) [Figure 20-170-87] from the valve section.

Figure 20-170-88

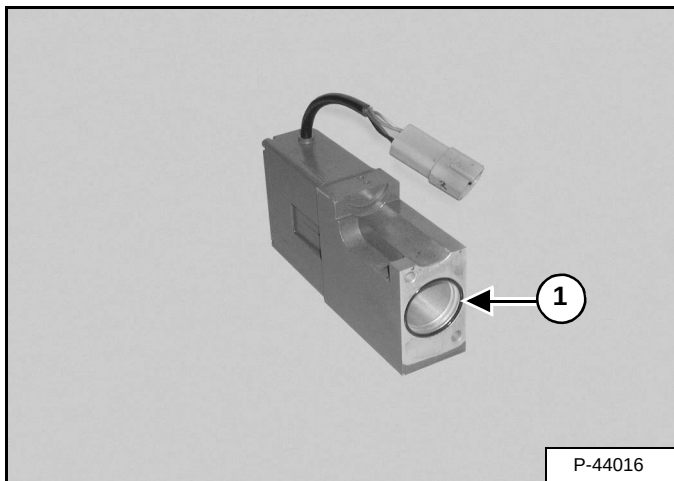


Remove the O-ring (Item 1) [Figure 20-170-88] from the controller assembly.

Figure 20-170-89

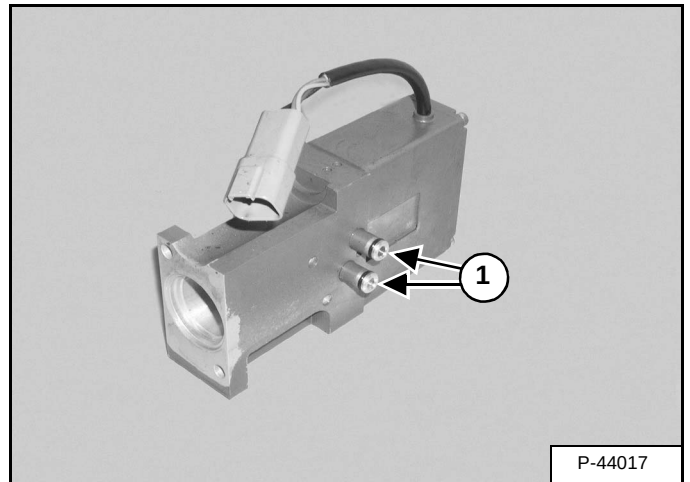

Remove the two couplers (Item 1) [Figure 20-170-89] from the controller assembly.

Figure 20-170-90

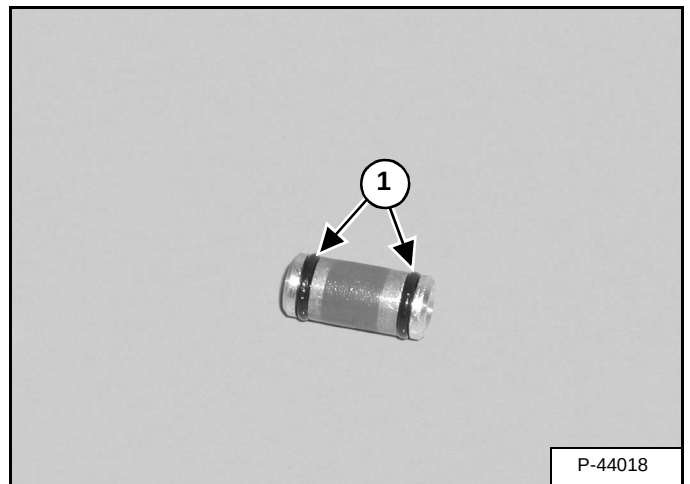


Remove the two O-rings (Item 1) [Figure 20-170-90] from the couplers.

HYDRAULIC CONTROL VALVE (CONT'D)

Telescoping Valve Section Disassembly And Assembly (Cont'd)


Figure 20-170-91

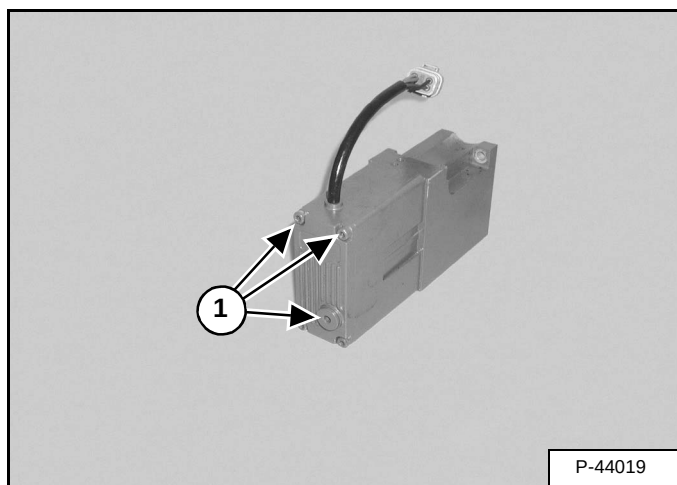

Loosen the four screws (Item 1) [Figure 20-170-91] on the controller assembly.


Assembly: Tighten the screws to 2-3 ft.-lbs. (3-3,5 Nm) torque.

Figure 20-170-92

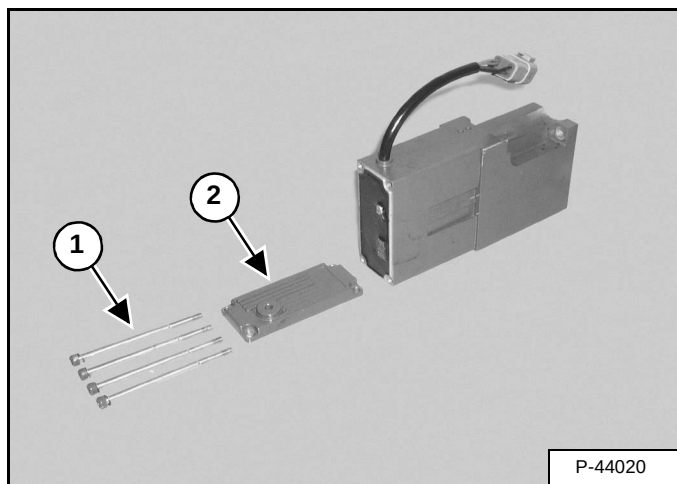


Remove the four screws (Item 1) and cover (Item 2) [Figure 20-170-92] from the controller assembly.

Figure 20-170-93

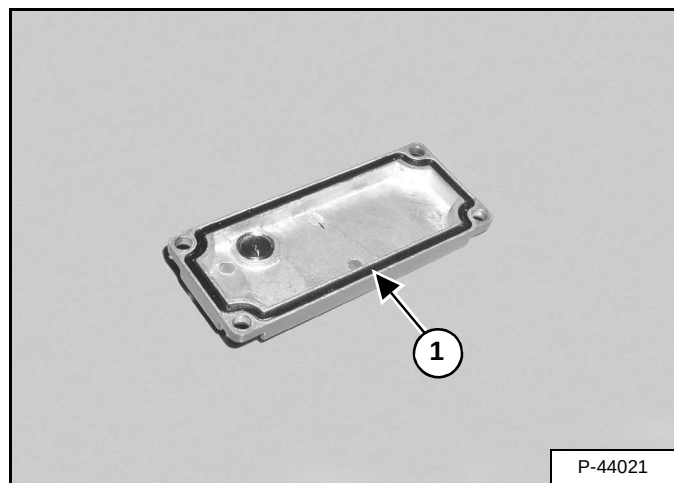

Remove the seal (Item 1) [Figure 20-170-93] from the cover.

Figure 20-170-94

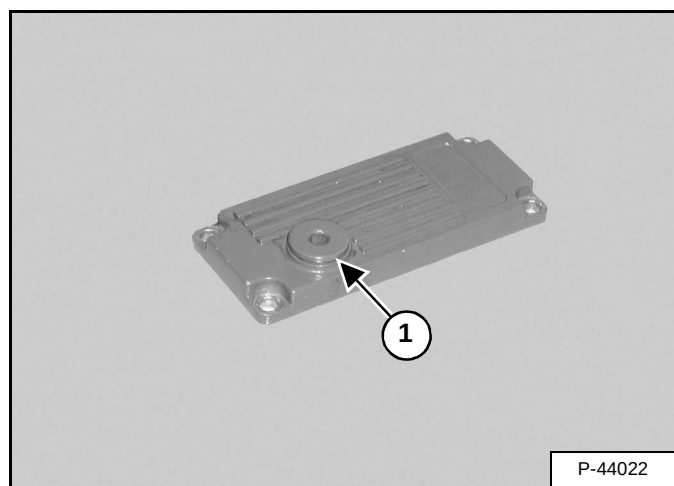


Remove the plug (Item 1) [Figure 20-170-94] from the cover.

HYDRAULIC CONTROL VALVE (CONT'D)


Telescoping Valve Section Disassembly And Assembly (Cont'd)

Figure 20-170-95

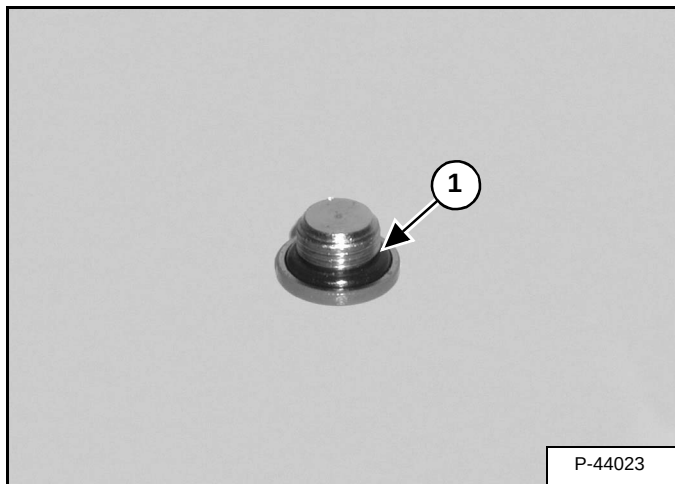


Remove the O-ring (Item 1) [Figure 20-170-95] from the plug.

Figure 20-170-96

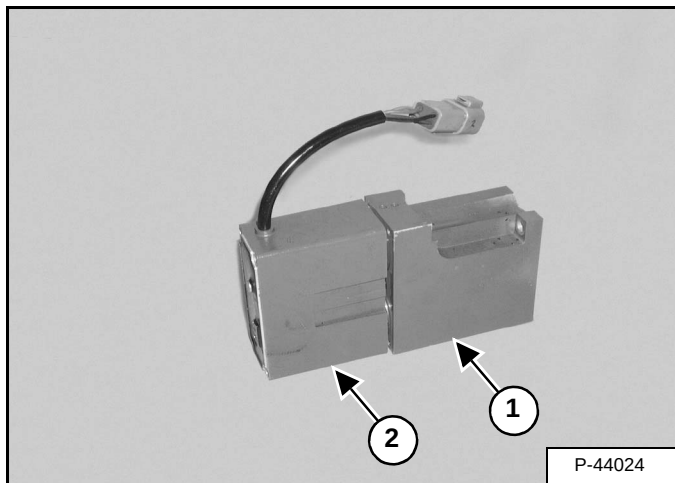

Remove the port block (Item 1) from the controller (Item 2) [Figure 20-170-96].


Figure 20-170-97

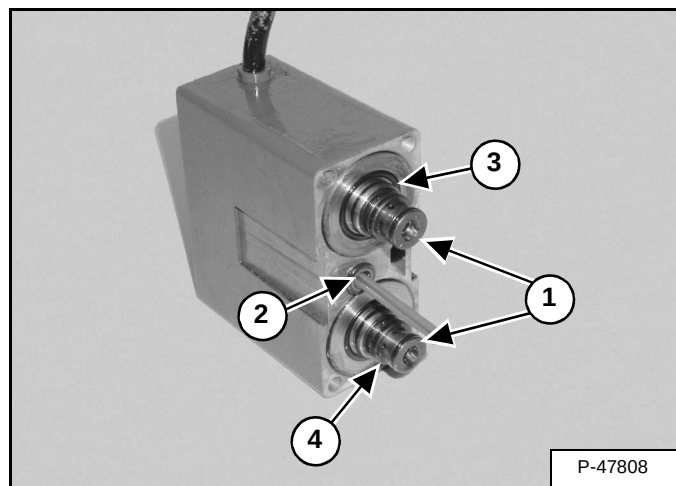

Remove the two valve cartridges (Item 1) and plunger (Item 2) [Figure 20-170-97] from the controller.

NOTE: The upper valve cartridge (Item 3) is for extending the boom and the lower valve cartridge (Item 4) [Figure 20-170-97] is for retracting the boom.

Figure 20-170-98

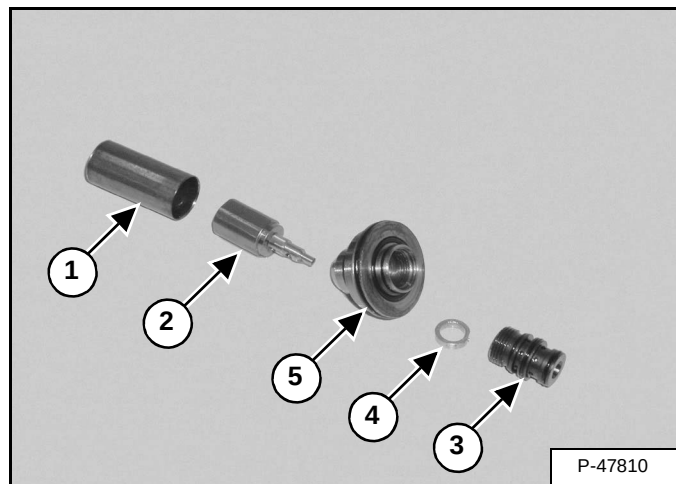


Remove the cover (Item 1), poppet (Item 2), spool (Item 3) and spacer (Item 4) from the valve (Item 5) [Figure 20-170-98].

HYDRAULIC CONTROL VALVE (CONT'D)

Telescoping Valve Section Disassembly And Assembly (Cont'd)


Figure 20-170-99

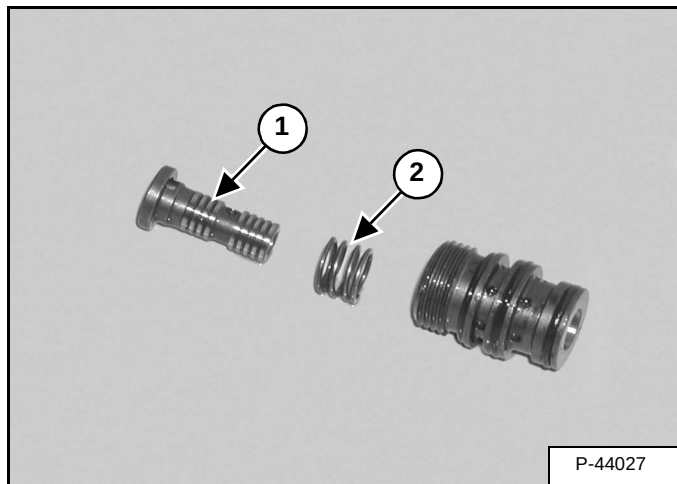

Remove the spool (Item 1) and spring (Item 2) [Figure 20-170-99] from the port valve.


Assembly: The port valve, spool and spring must be thoroughly cleaned before assembly.

Figure 20-170-100

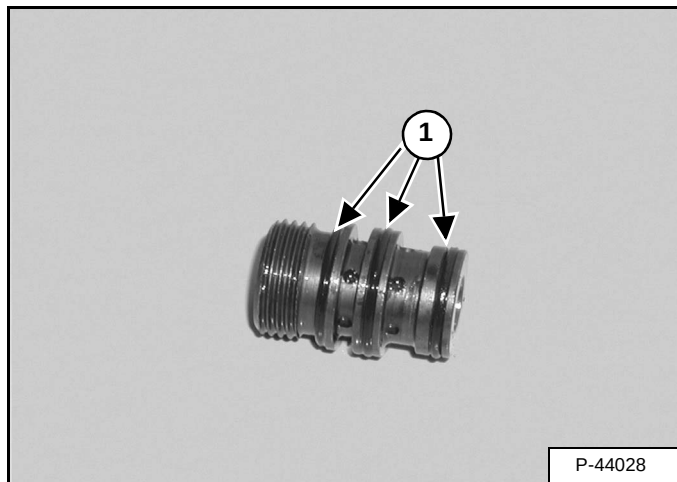


Remove the three O-rings (Item 1) [Figure 20-170-100] from the port valve.

Figure 20-170-101

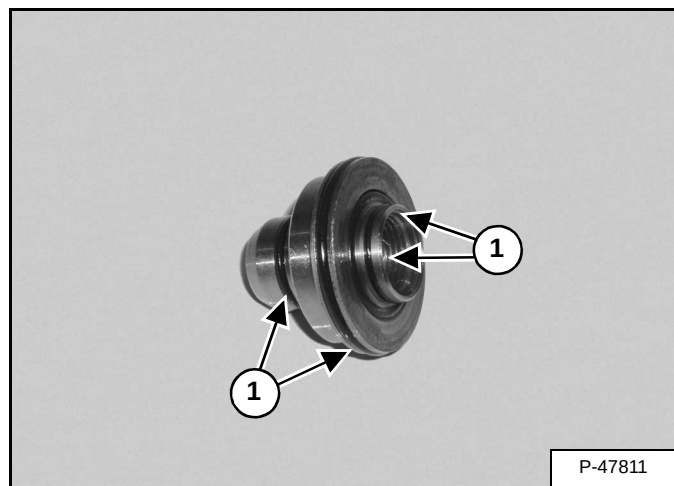

Remove the four O-rings (Item 1) [Figure 20-170-101] from the valve.

Figure 20-170-102

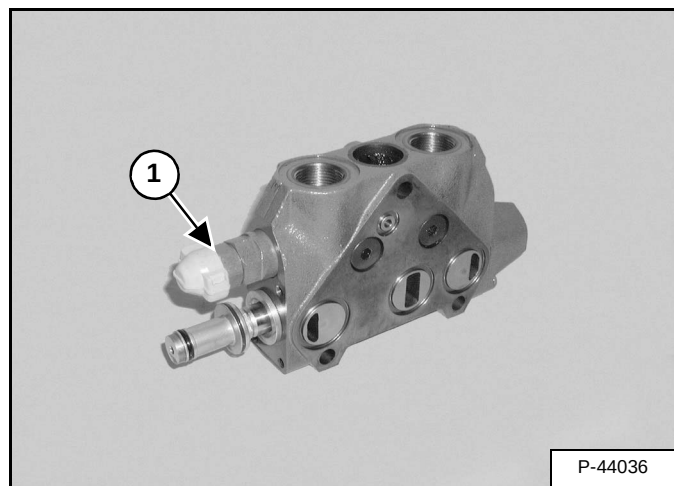


Remove the relief valve (Item 1) [Figure 20-170-102] from the valve section.

Assembly: Tighten the valve to 33 ft.-lbs. (45 Nm) torque.

HYDRAULIC CONTROL VALVE (CONT'D)


Telescoping Valve Section Disassembly And Assembly (Cont'd)

Figure 20-170-103

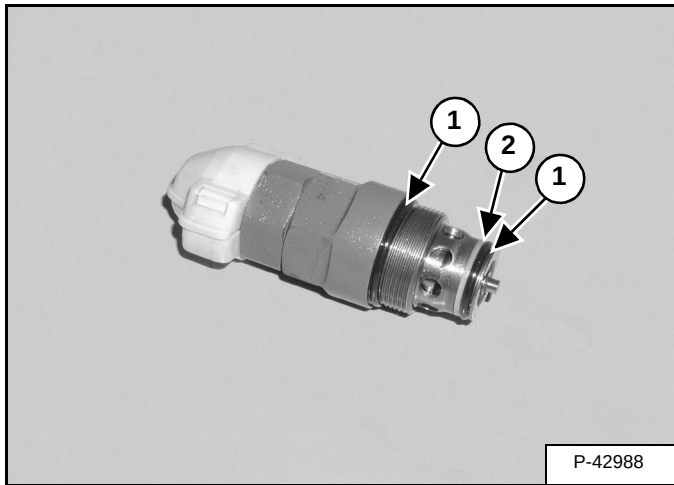

Remove the two O-rings (Item 1) and backup ring (Item 2) [Figure 20-170-103] from the relief valve.


Figure 20-170-104

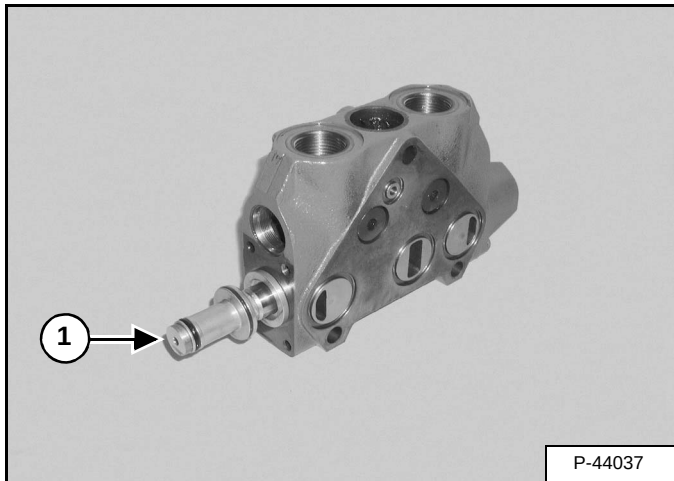

Loosen the screw (Item 1) [Figure 20-170-104] on the piston.


Assembly: Tighten the screw to 7 ft.-lbs. (10 Nm) torque.

Figure 20-170-105

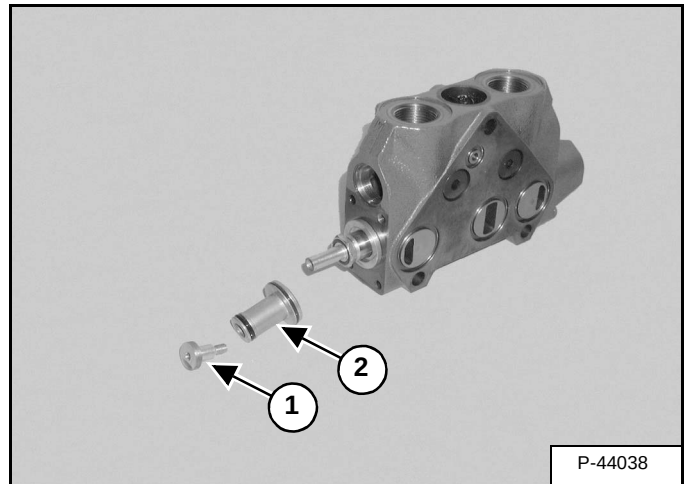

Remove the screw (Item 1) and piston (Item 2) [Figure 20-170-105] from the adapter.

Figure 20-170-106

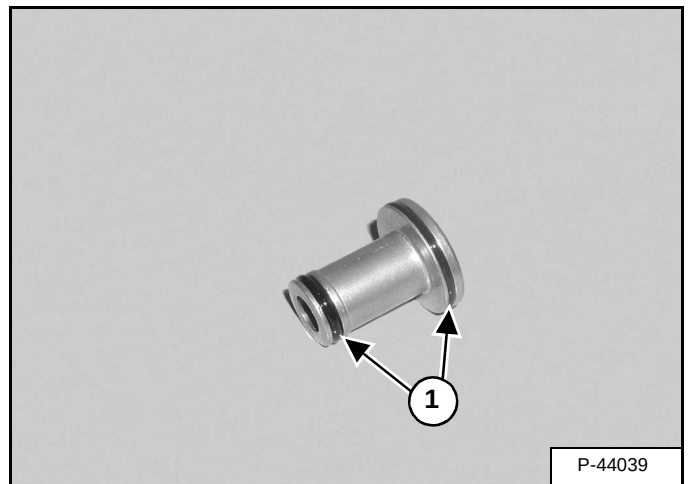


Remove the two O-rings (Item 1) [Figure 20-170-106] from the piston.

HYDRAULIC CONTROL VALVE (CONT'D)


Telescoping Valve Section Disassembly And Assembly (Cont'd)

Figure 20-170-107

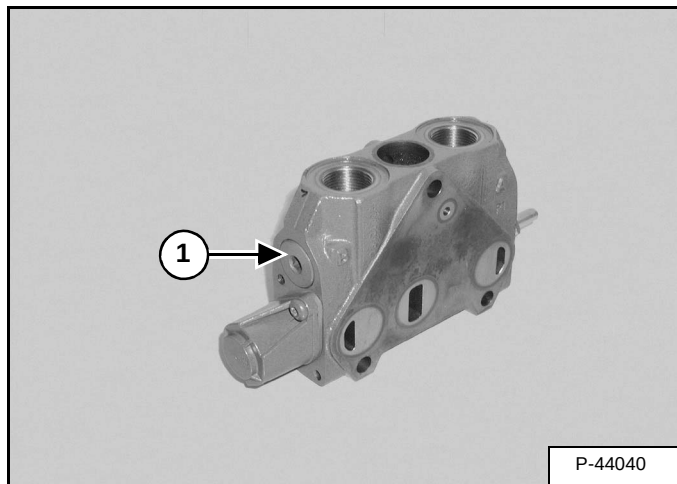


Remove the plug (Item 1) [Figure 20-170-107] from the valve section.

Figure 20-170-108

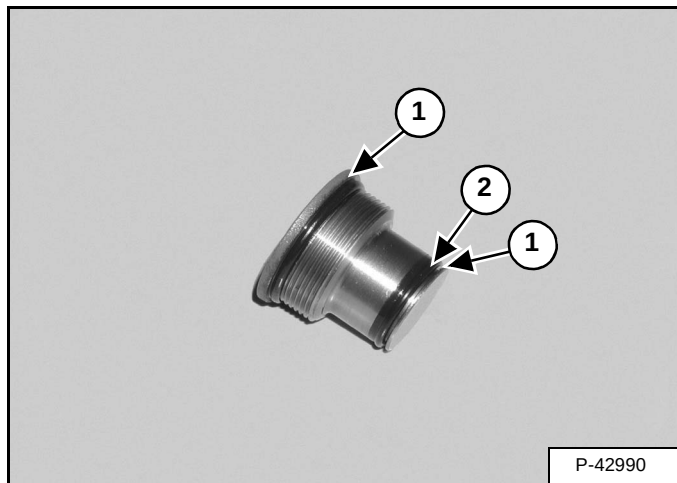

Remove the two O-rings (Item 1) and backup ring (Item 2) [Figure 20-170-108] from the plug.


Figure 20-170-109

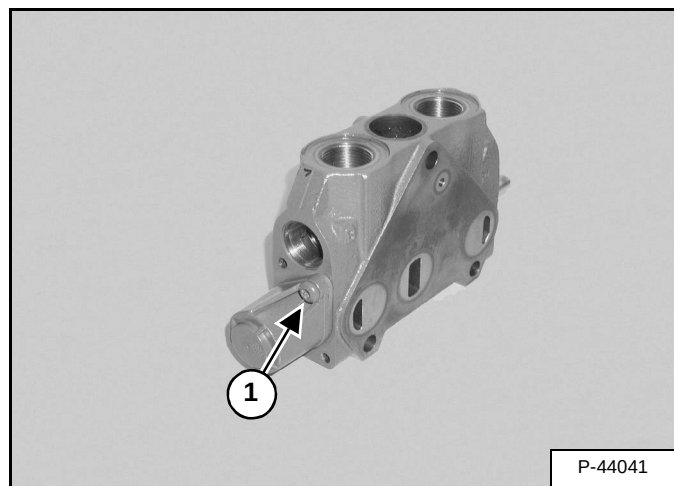

Loosen the two screws (item 1) [Figure 20-170-109] on the cover.

Assembly: Tighten the screws to 7 ft.-lbs. (10 Nm) torque.

Figure 20-170-110

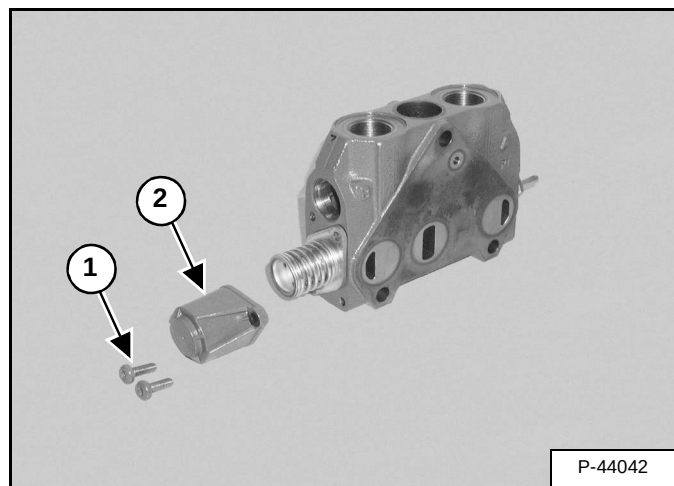


Remove the two screws (Item 1) and cover (Item 2) [Figure 20-170-110] from the valve section.

HYDRAULIC CONTROL VALVE (CONT'D)


Telescoping Valve Section Disassembly And Assembly (Cont'd)

Figure 20-170-111

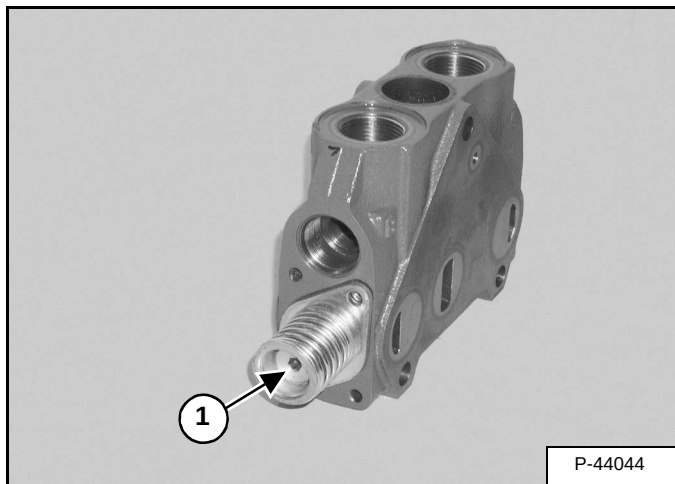

Install a hex wrench in the screw (Item 1) [Figure 20-170-111] on the end of the spool.


Figure 20-170-112

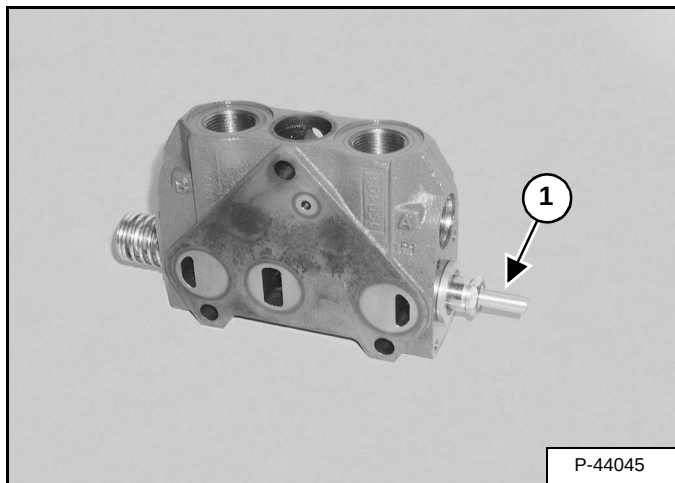

Loosen the adapter (Item 1) [Figure 20-170-112].


Assembly: Tighten the adapter to 7-8 ft.-lbs. (9-11 Nm) torque.

Figure 20-170-113

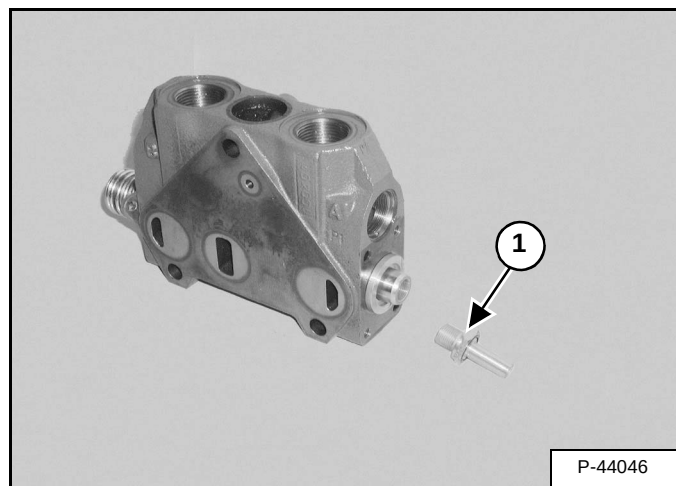

Remove the adapter (Item 1) [Figure 20-170-113] from the spool.

Figure 20-170-114

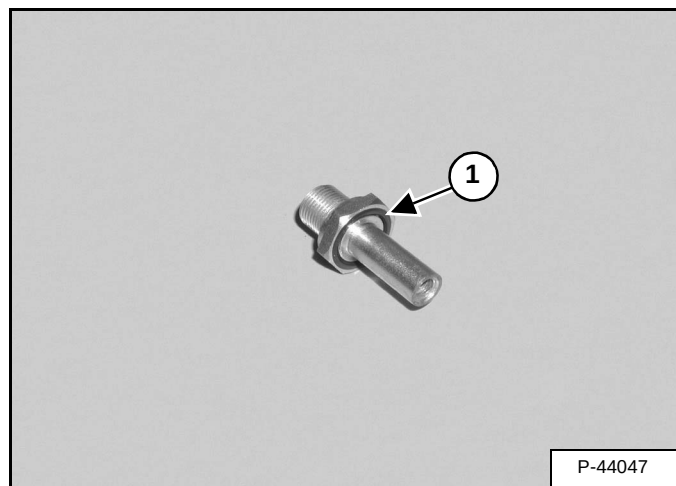


Remove the O-ring (Item 1) [Figure 20-170-114] from the adapter.

HYDRAULIC CONTROL VALVE (CONT'D)


Telescoping Valve Section Disassembly And Assembly (Cont'd)

Figure 20-170-115

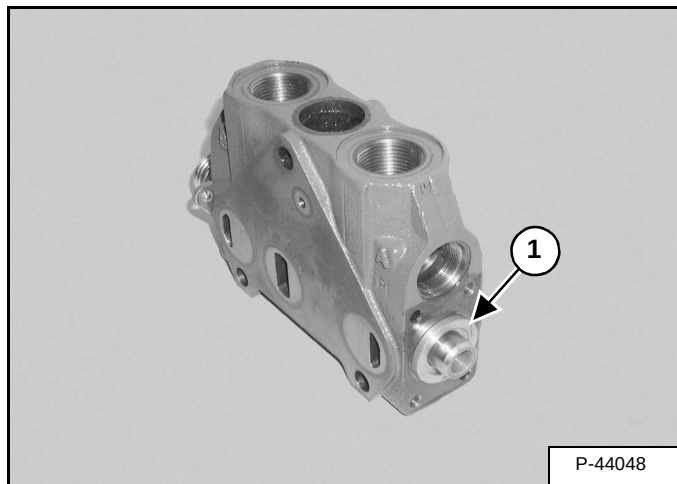


Remove the washer (Item 1) [Figure 20-170-115] from the valve section.

Figure 20-170-116

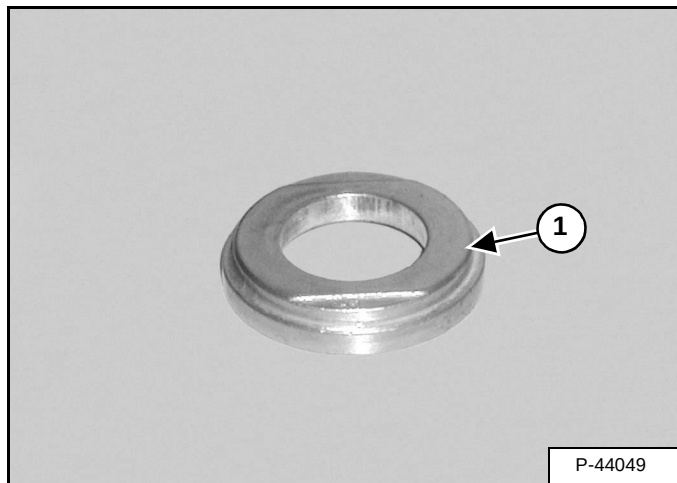

Assembly: Install the countersunk side of the washer (Item 1) [Figure 20-170-116] into the valve section.


Figure 20-170-117

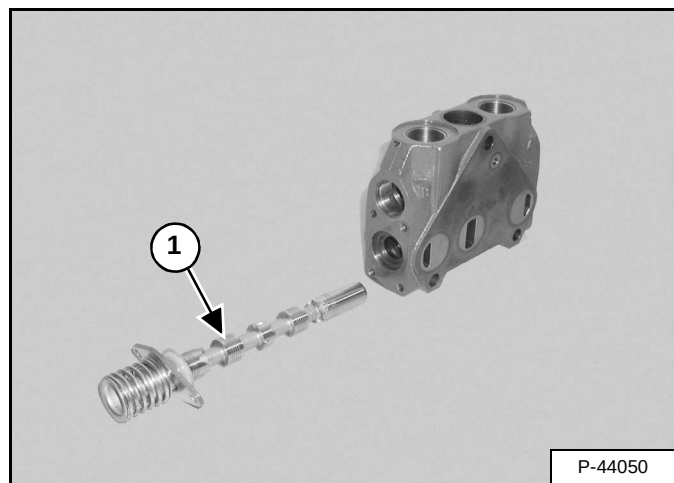

Remove the spool (Item 1) [Figure 20-170-117] from the valve section.

NOTE: When the spool is removed, use care not to scratch the spool surface and do not interchange spools and valve blocks.

Figure 20-170-118

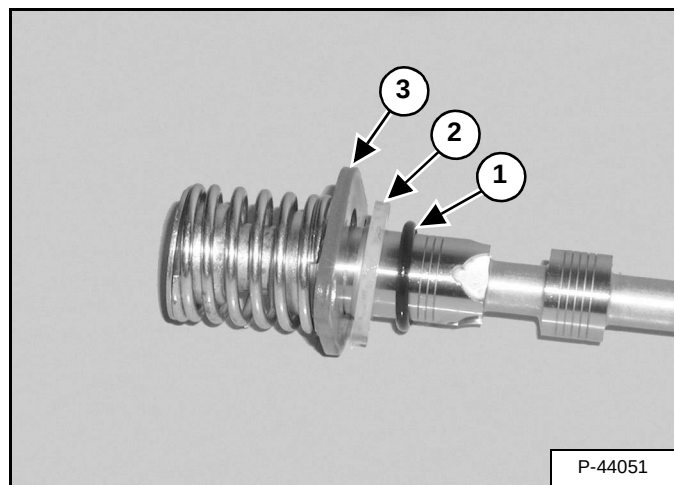


Remove the O-ring (Item 1) seal (Item 2) and retainer (Item 3) [Figure 20-170-118] from the spool.

HYDRAULIC CONTROL VALVE (CONT'D)


Telescoping Valve Section Disassembly And Assembly (Cont'd)

Figure 20-170-119

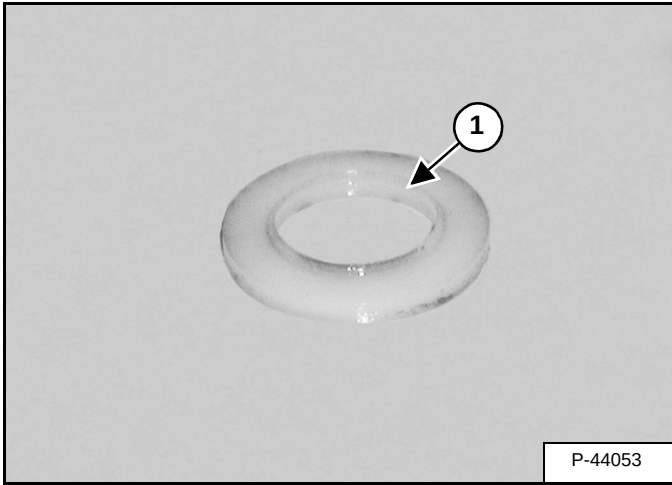


Assembly: The lip on the seal (Item 1) [Figure 20-170-119] fits inside the retainer (Item 3) [Figure 20-170-118].

Figure 20-170-120

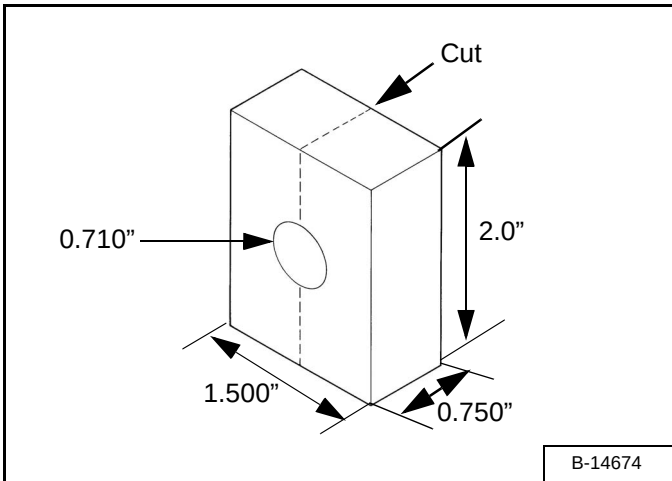

To remove the spring assembly from the spool a holding fixture will have to be made from a .750 inch thick x 1.500 inch wide x 2.0 inch long (19 mm thick x 38 mm wide x 51 mm long) piece of hardwood. Drill a 0.710 inch (18 mm) hole in the center of the hardwood block. Cut the block lengthwise [Figure 20-170-120].

Figure 20-170-121

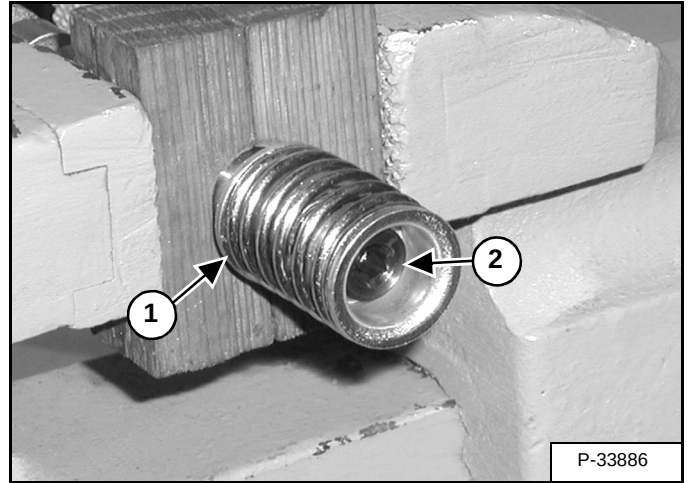


Using the wood blocks clamp the spool (Item 1) [Figure 20-170-121] in a vise.

NOTE: Do not use anything other than hardwood blocks to grip the spool, or the spool will be damaged.

Loosen the screw (Item 2) [Figure 20-170-121].

Assembly: Tighten the screw to 7 ft.-lbs. (10 Nm) torque.

Figure 20-170-122

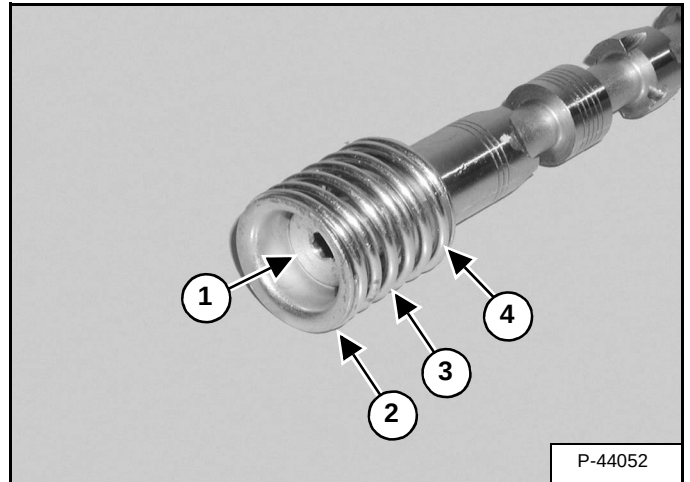


Remove the screw (Item 1), spring retainer (Item 2), spring (Item 3) and spring retainer (Item 4) [Figure 20-170-122] from the spool.

HYDRAULIC CONTROL VALVE (CONT'D)

Telescoping Valve Section Disassembly And Assembly (Cont'd)


Figure 20-170-123

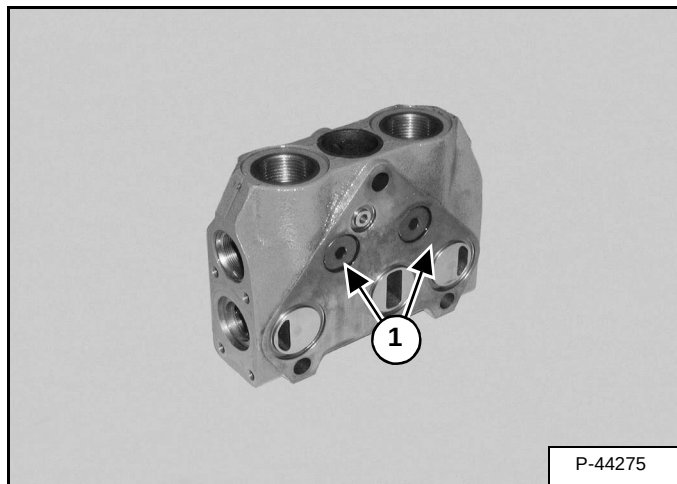

Remove the two plugs (Item 1) [Figure 20-170-123] from the valve section;


Assembly: Tighten the plugs to 20-24 ft.-lbs. (27-33 Nm) torque.

Figure 20-170-124

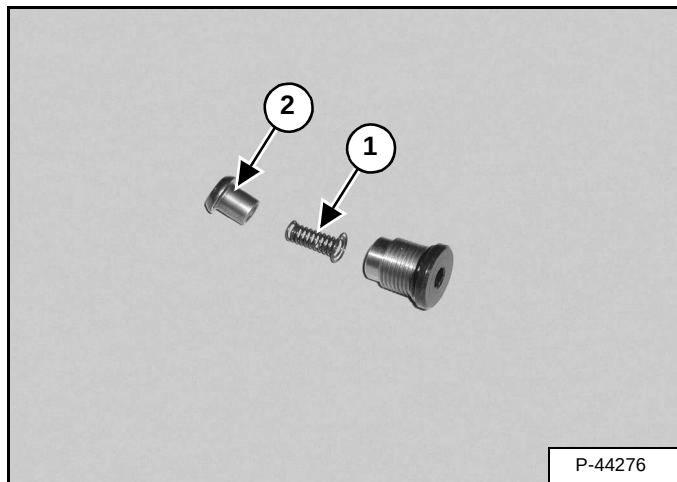


Remove the spring (Item 1) and poppet (Item 2) [Figure 20-170-124] from the plugs.

Figure 20-170-125

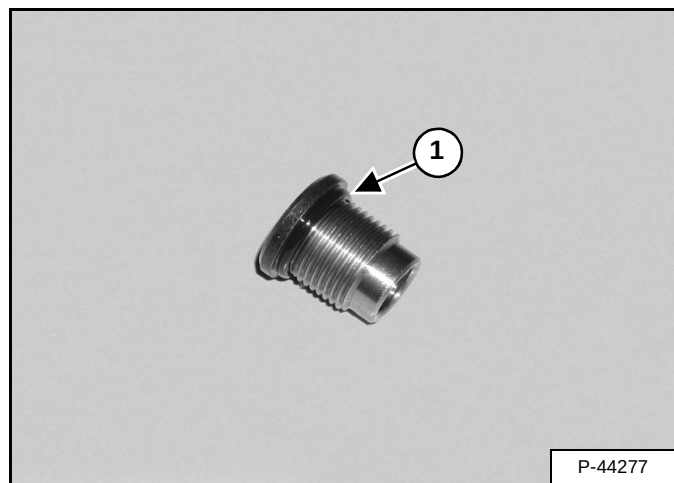

Remove the O-ring (Item 1) [Figure 20-170-125] from the plugs.

Figure 20-170-126

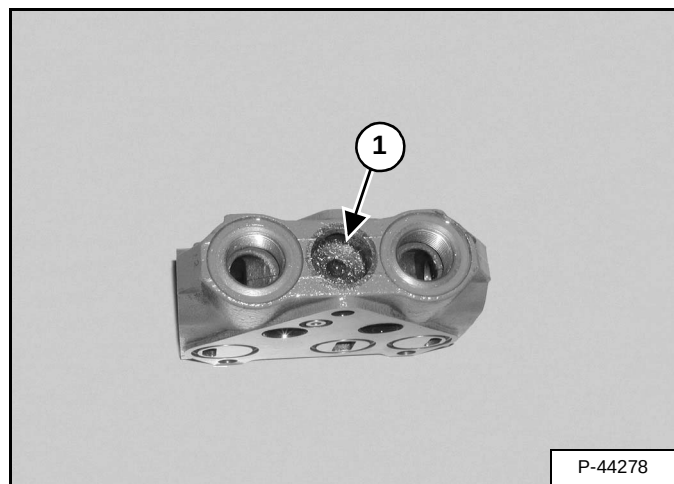


Loosen the plug (Item 1) [Figure 20-170-126].

Assembly: Tighten the plug to 40-49 ft.-lbs. (54-66 Nm) torque.

HYDRAULIC CONTROL VALVE (CONT'D)


Telescoping Valve Section Disassembly And Assembly (Cont'd)

Figure 20-170-127

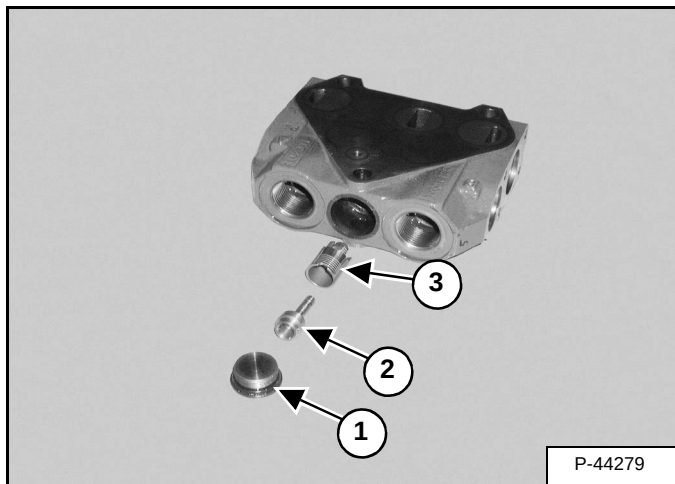

Remove the individual pressure compensator plug (Item 1) poppet (Item 2) and guide (Item 3) **[Figure 20-170-127]** from the valve section.

Figure 20-170-128

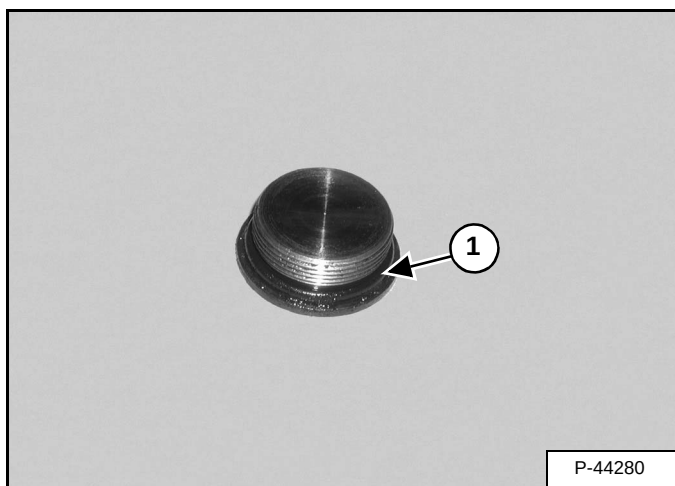


Remove the O-ring (Item 1) **[Figure 20-170-128]** from the plug.

HYDRAULIC CONTROL VALVE (CONT'D)


Auxiliary/Frame Leveling Valve Section Disassembly And Assembly

Figure 20-170-129

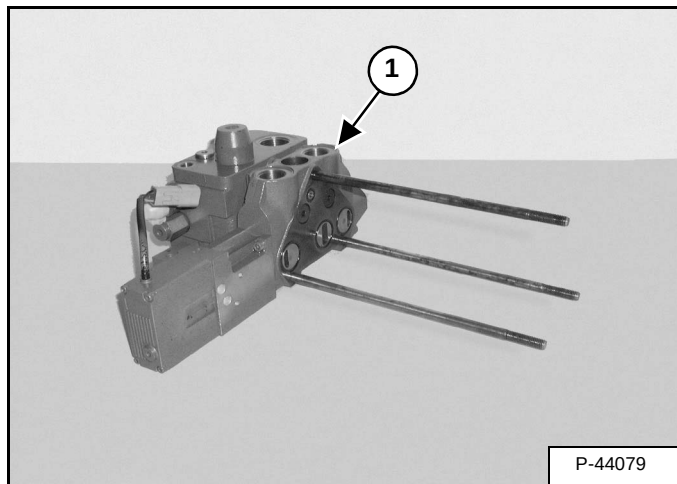


Remove the frame leveling valve section (Item 1) [Figure 20-170-129].

Figure 20-170-130

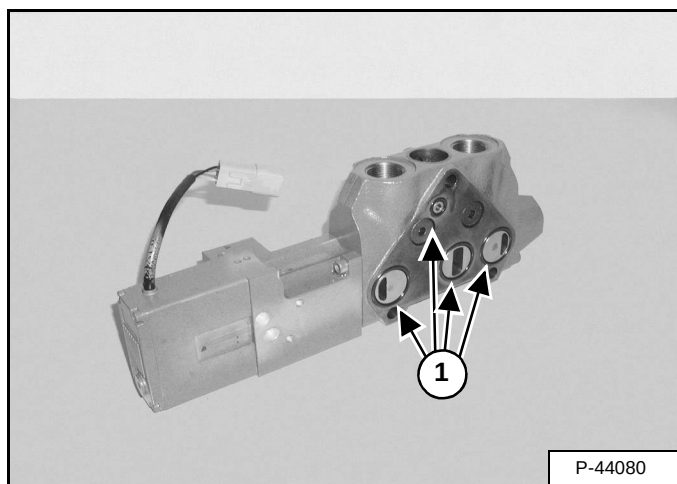

Remove the four O-rings (Item 1) [Figure 20-170-130] from the valve section.


Figure 20-170-131

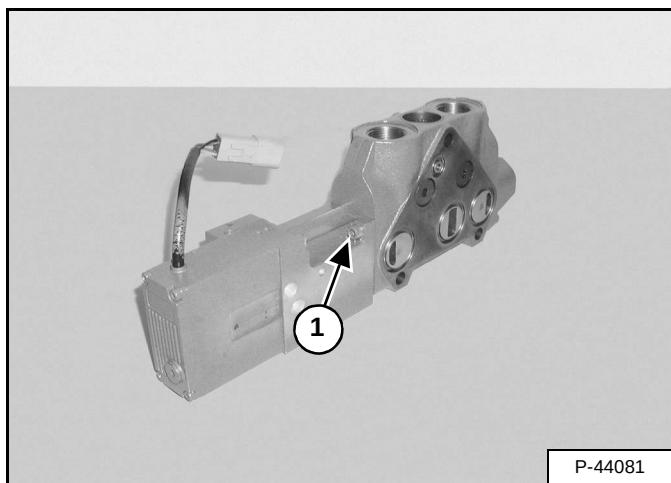

Remove the two screws (Item 1) [Figure 20-170-131] from the controller assembly.

Assembly: Tighten the screws to 10-12 ft.-lbs. (14-16 Nm) torque.

Figure 20-170-132

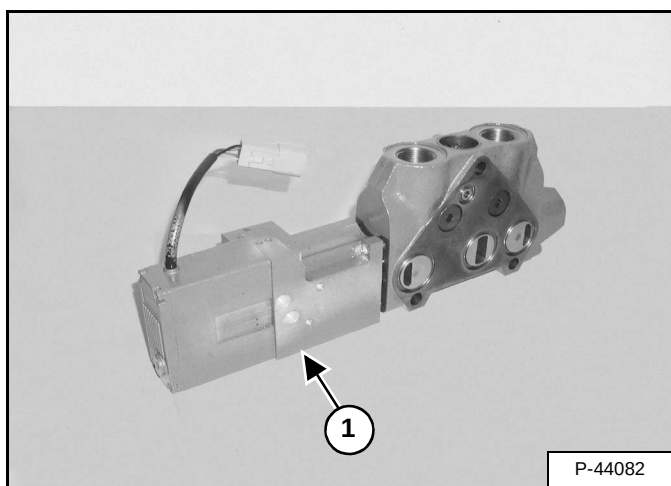


Remove the controller assembly (Item 1) [Figure 20-170-132] from the valve section.

HYDRAULIC CONTROL VALVE (CONT'D)


Auxiliary/Frame Leveling Valve Section Disassembly And Assembly (Cont'd)

Figure 20-170-133

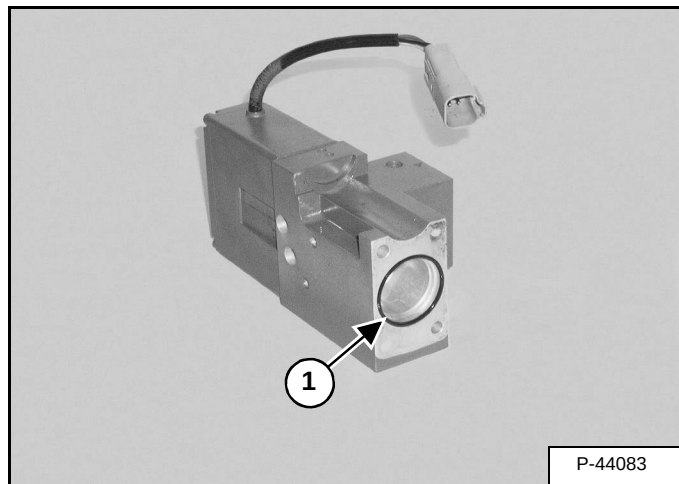

Remove the O-ring (Item 1) [Figure 20-170-133] from the controller assembly.


Figure 20-170-134

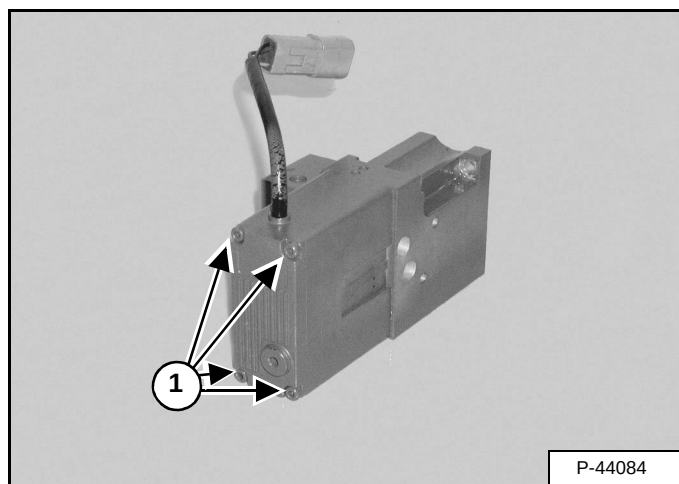

Loosen the four screws (Item 1) [Figure 20-170-134].


Assembly: Tighten the screws to 2-3 ft.-lbs. (3-3,5 Nm) torque.

Figure 20-170-135

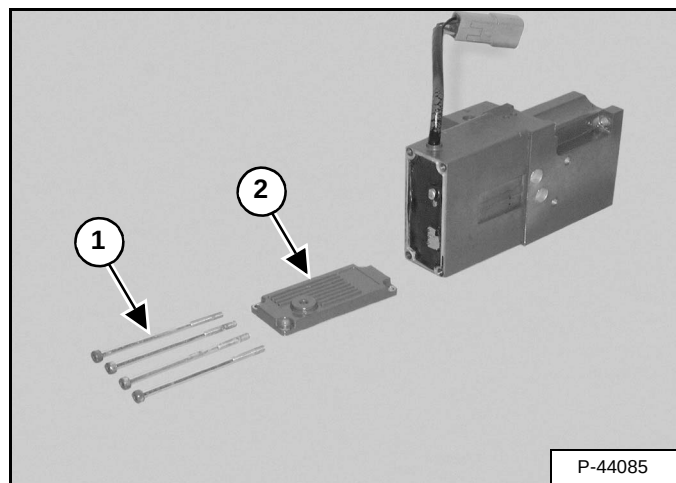

Remove the four screws (Item 1) and cover (Item 2) [Figure 20-170-135] from the controller assembly.

Figure 20-170-136

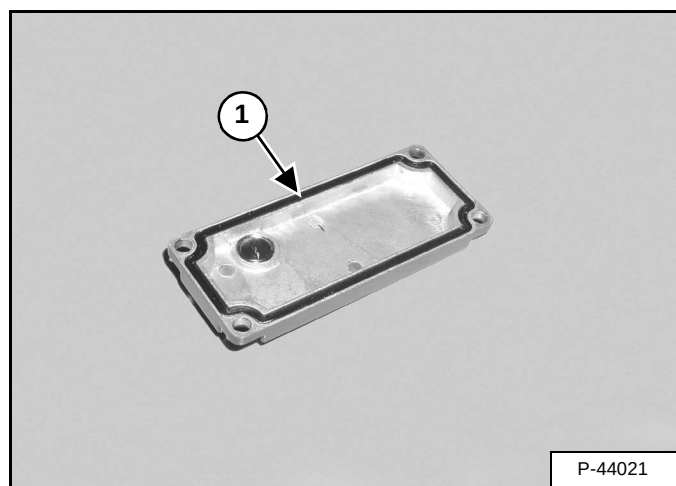


Remove the seal (Item 1) [Figure 20-170-136] from the cover.

HYDRAULIC CONTROL VALVE (CONT'D)


Auxiliary/Frame Leveling Valve Section Disassembly And Assembly (Cont'd)

Figure 20-170-137

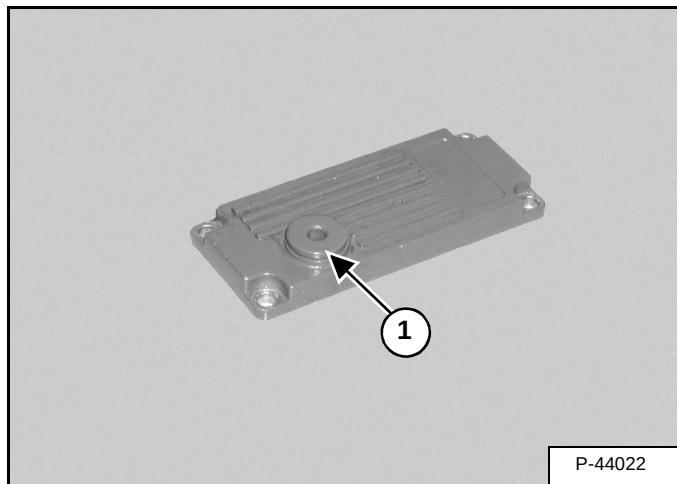


Remove the plug (Item 1) [Figure 20-170-137] from the cover.

Figure 20-170-138

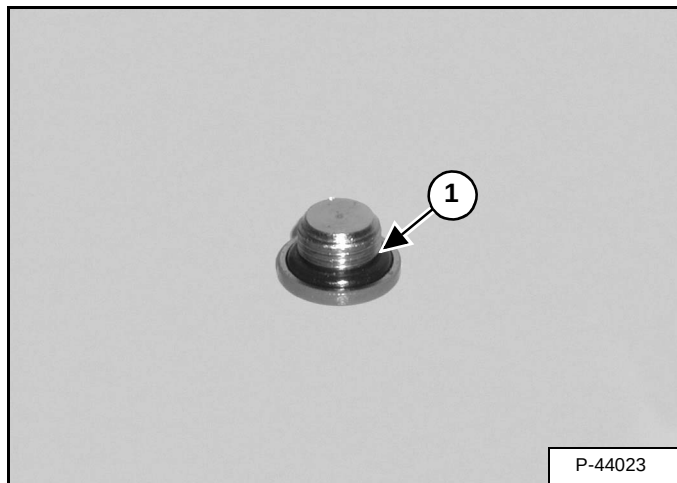


Remove the O-ring (Item 1) [Figure 20-170-138] from the plug.

Figure 20-170-139

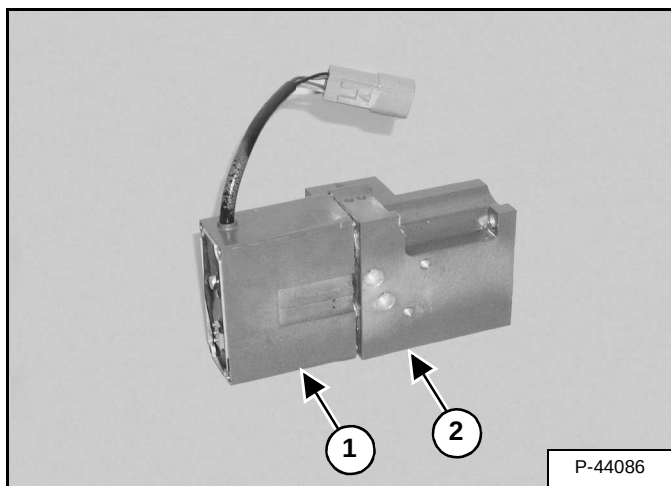

Remove the controller (Item 1) from the port block (Item 2) [Figure 20-170-139].

Figure 20-170-140

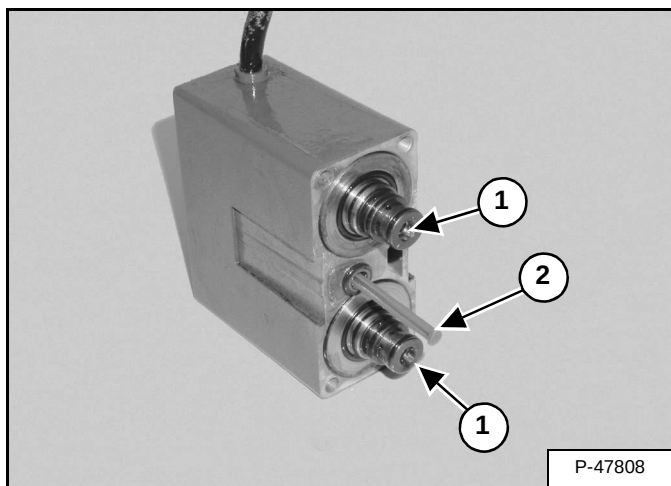


Remove the two valve cartridges (Item 1) and plunger (Item 2) [Figure 20-170-140] from the controller.

HYDRAULIC CONTROL VALVE (CONT'D)


Auxiliary/Frame Leveling Valve Section Disassembly And Assembly (Cont'd)

Figure 20-170-141

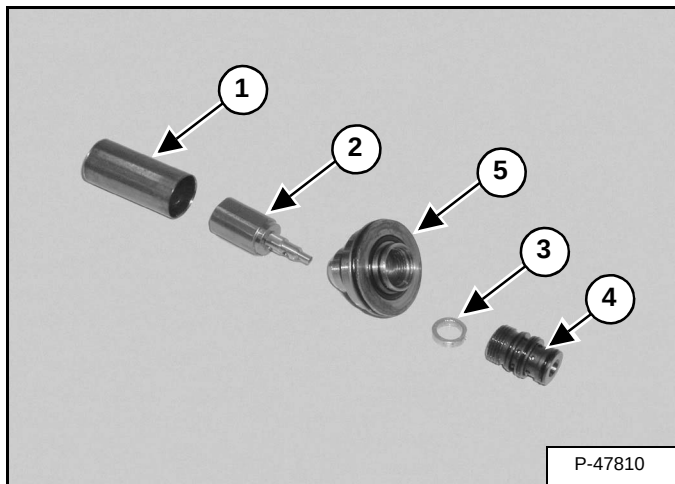

Remove the cover (Item 1), poppet (Item 2), spool (Item 3) and spacer (Item 4) from the valves (Item 5) [Figure 20-170-141].


Figure 20-170-142

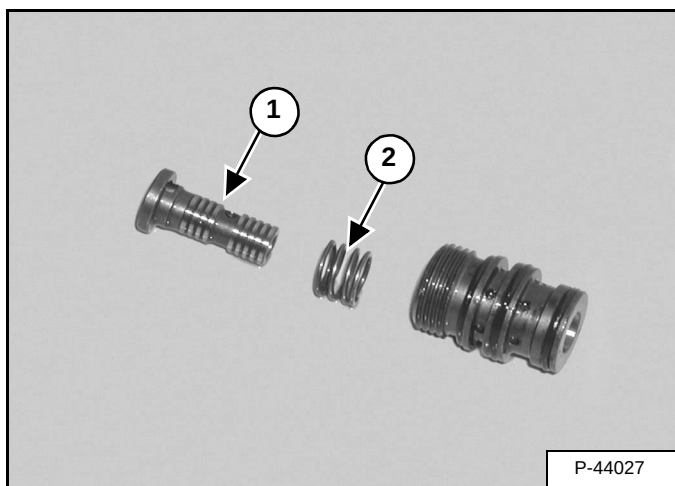

Remove the spool (Item 1) and spring (Item 2) [Figure 20-170-142] from the port valve.


Assembly: The port valve, spool and spring must be thoroughly cleaned before assembly.

Figure 20-170-143

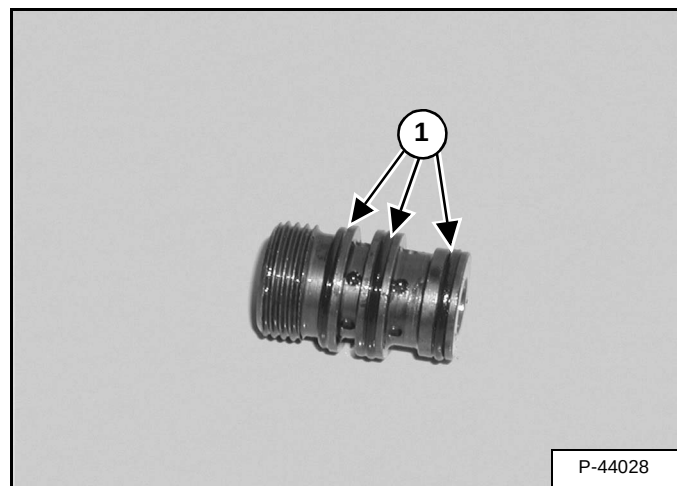

Remove the three O-rings (Item 1) [Figure 20-170-143] from the port valve.

Figure 20-170-144

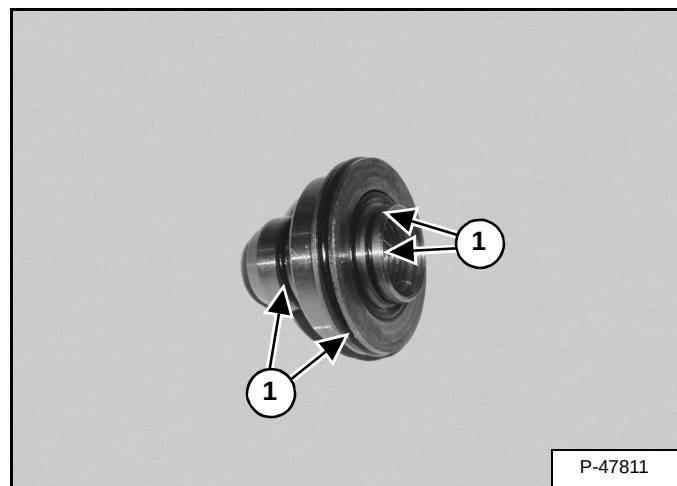


Remove the four O-rings (Item 1) [Figure 20-170-144] from the valve.

HYDRAULIC CONTROL VALVE (CONT'D)

Auxiliary/Frame Leveling Valve Section Disassembly And Assembly (Cont'd)

Figure 20-170-145

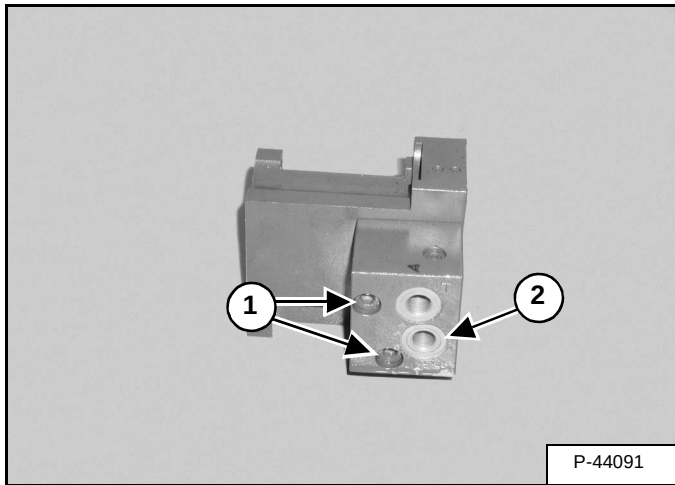

Loosen the two screws (Item 1) [Figure 20-170-145] on the connecting flange.


Assembly: Tighten the screws to 7-8 ft.-lbs. (9-11 Nm) torque.

Controller Filter Removal And Installation

Remove the filter (Item 2) [Figure 20-170-145] from the port.


NOTE: The valve assembly does not have to be removed for this procedure.

Figure 20-170-146

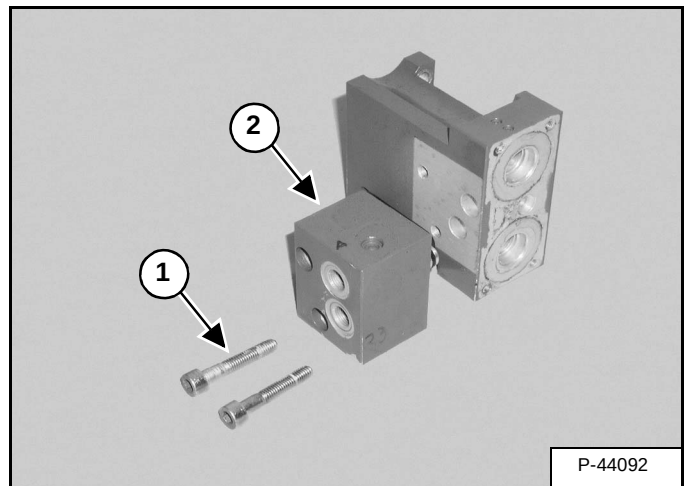

Remove the two screws (Item 1) and connecting flange (Item 2) [Figure 20-170-146].

Figure 20-170-147

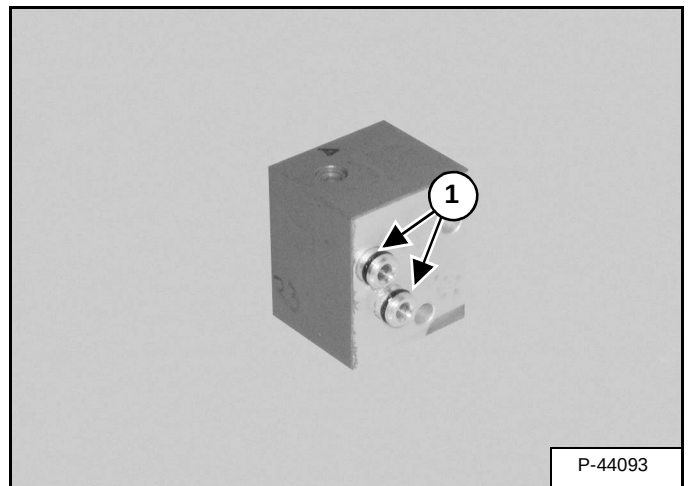


Remove the two O-rings (Item 1) [Figure 20-170-147] from the connecting flange.

HYDRAULIC CONTROL VALVE (CONT'D)

Auxiliary/Frame Leveling Valve Section Disassembly And Assembly (Cont'd)


Figure 20-170-148

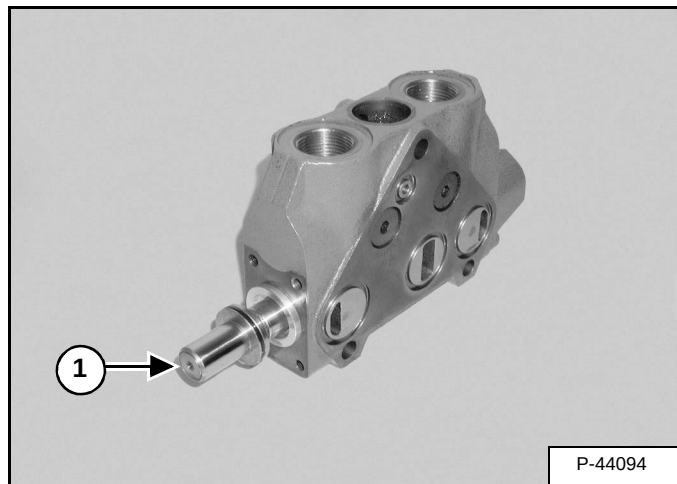

Loosen the screw (Item 1) [Figure 20-170-148] on the piston.


Assembly: Tighten the screw to 7 ft.-lbs. (10 Nm) torque.

Figure 20-170-149

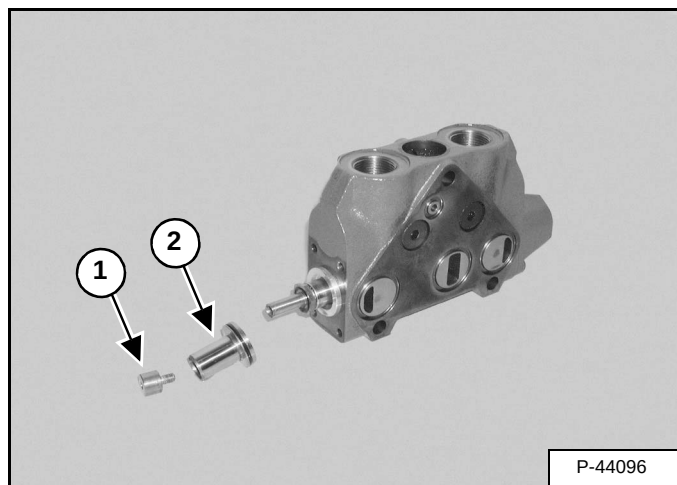

Remove the screw (Item 1) and piston (Item 2) [Figure 20-170-149] from the adapter.


Figure 20-170-150

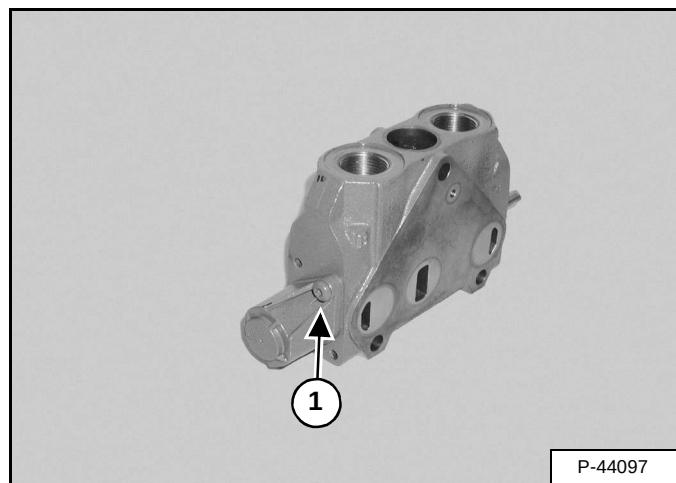

Loosen the two screws (Item 1) [Figure 20-170-150] on the cover.

Assembly: Tighten the screws to 7 ft.-lbs. (10 Nm) torque.

Figure 20-170-151

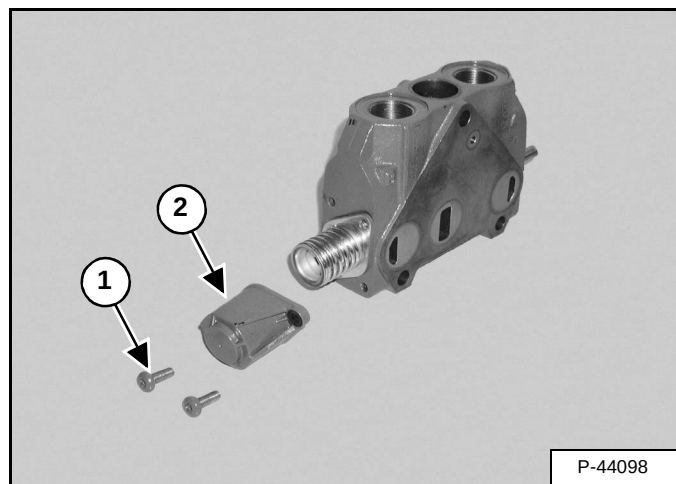


Remove the two screws (Item 1) and cover (Item 2) [Figure 20-170-151] from the valve section.

HYDRAULIC CONTROL VALVE (CONT'D)


Auxiliary/Frame Leveling Valve Section Disassembly And Assembly (Cont'd)

Figure 20-170-152

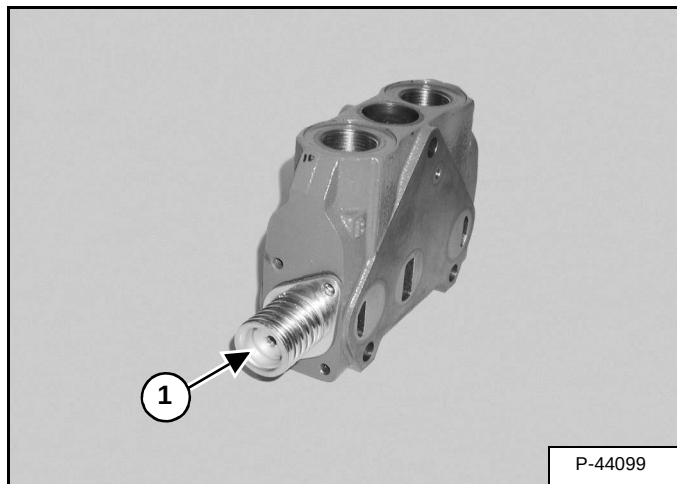

Install a hex wrench in the screw (Item 1) [Figure 20-170-152].


Figure 20-170-153

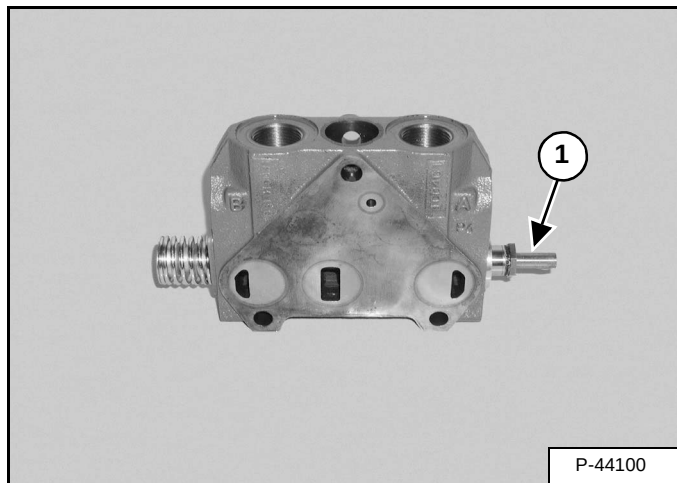

Loosen the adapter (Item 1) [Figure 20-170-153].


Assembly: Tighten the adapter to 7-8 ft.-lbs. (9-11 Nm) torque.

Figure 20-170-154

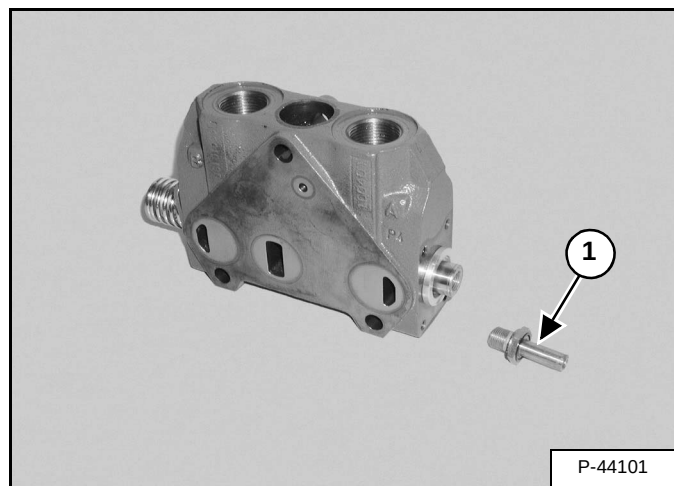

Remove the adapter (Item 1) [Figure 20-170-154] from the spool.

Figure 20-170-155

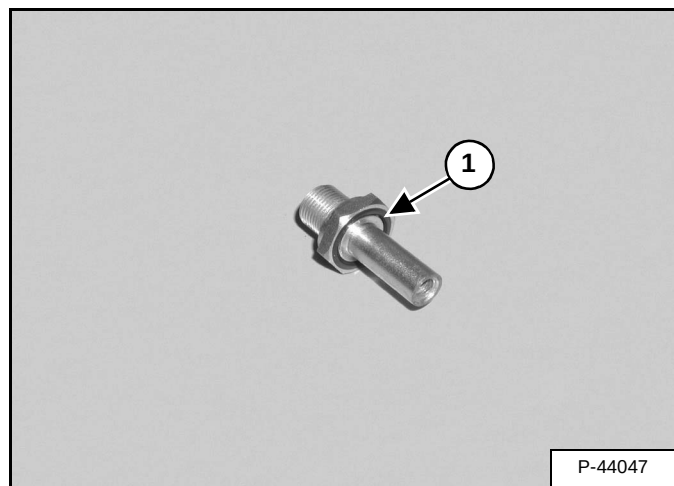


Remove the O-ring (Item 1) [Figure 20-170-155] from the adapter.

HYDRAULIC CONTROL VALVE (CONT'D)


Auxiliary/Frame Leveling Valve Section Disassembly And Assembly (Cont'd)

Figure 20-170-156

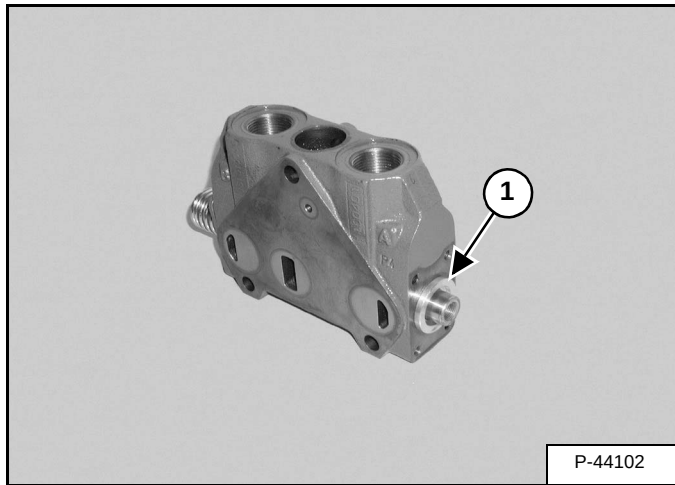


Remove the washer (Item 1) [Figure 20-170-156] from the valve section.

Figure 20-170-157

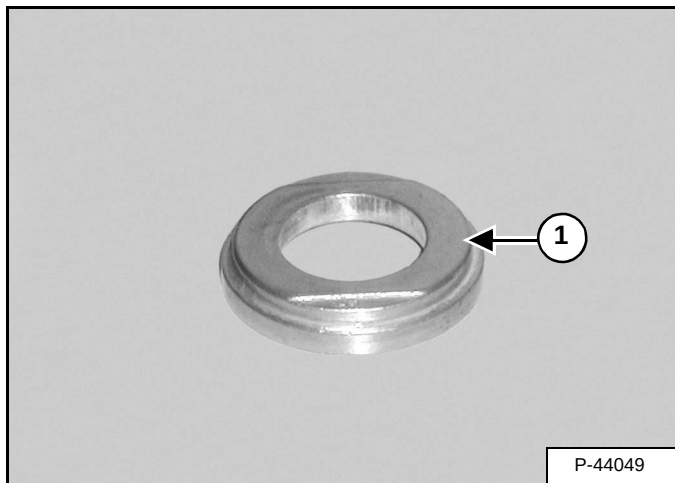

Assembly: Install the countersunk side of the washer (Item 1) [Figure 20-170-157] into the valve section.


Figure 20-170-158

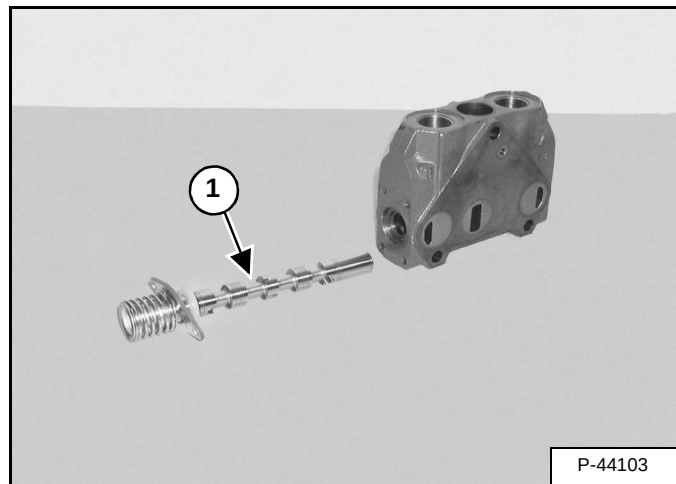

Remove the spool (Item 1) [Figure 20-170-158] from the valve section.

NOTE: When the spool is removed, use care not to scratch the spool surface and do not interchange spools and valve blocks.

Figure 20-170-159

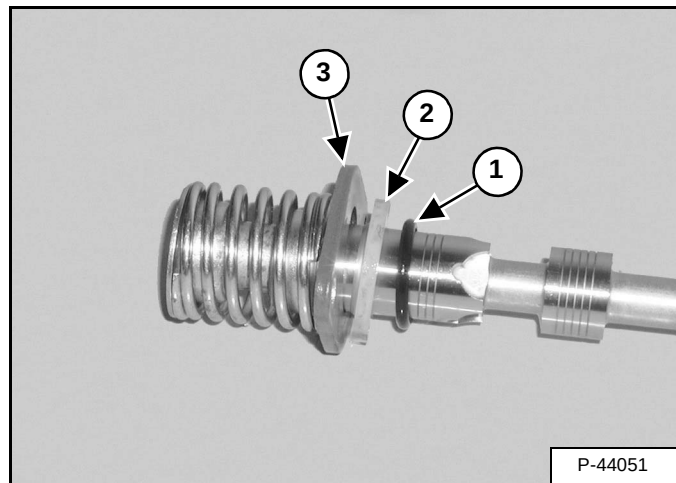


Remove the O-ring (Item 1), seal (Item 2) and retainer (Item 3) [Figure 20-170-159] from the spool.

HYDRAULIC CONTROL VALVE (CONT'D)


Auxiliary/Frame Leveling Valve Section Disassembly And Assembly (Cont'd)

Figure 20-170-160

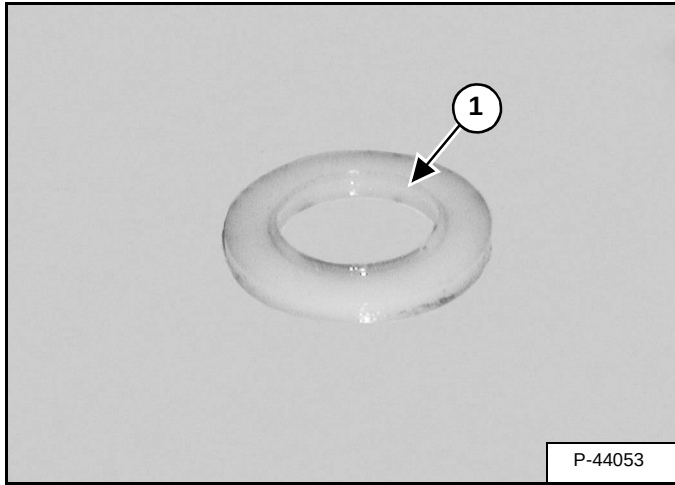


Assembly: The lip on the seal (Item 1) [Figure 20-170-160] fits inside the retainer.

Figure 20-170-161

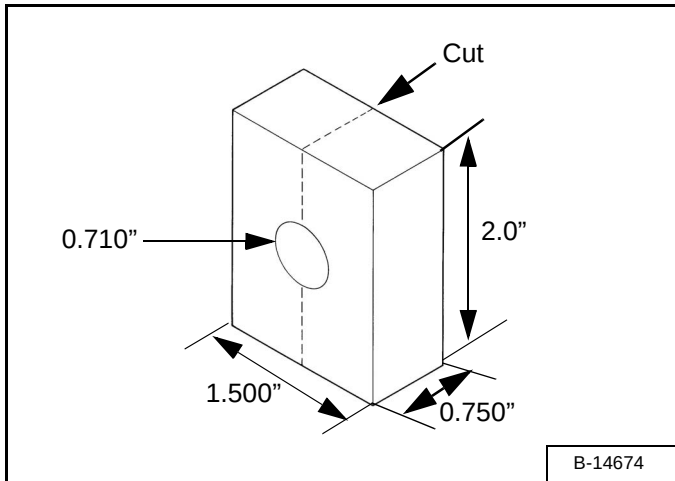

To remove the spring assembly from the spool a holding fixture will have to be made from a .750 inch thick x 1.500 inch wide x 2.0 inch long (19 mm thick x 38 mm wide x 51 mm long) piece of hardwood. Drill a 0.710 inch (18 mm) hole in the center of the hardwood block. Cut the block lengthwise [Figure 20-170-161].

Figure 20-170-162

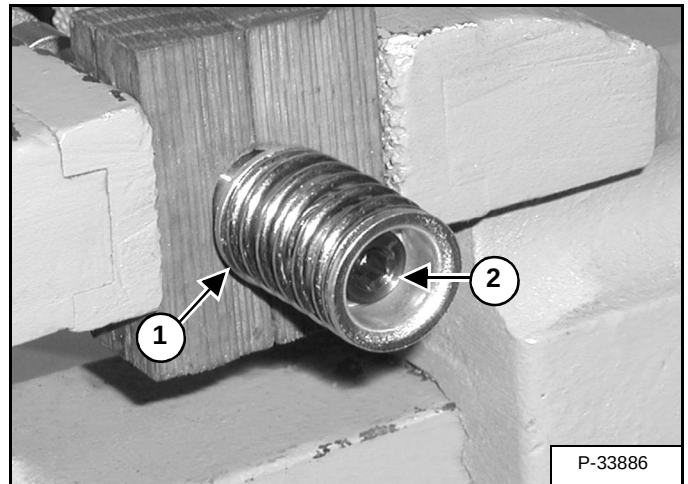


Using the wood blocks clamp the spool (Item 1) [Figure 20-170-162] in a vise.

NOTE: Do not use anything other than hardwood blocks to grip the spool, or the spool will be damaged.

Loosen the screw (Item 2) [Figure 20-170-162].

Assembly: Tighten the screw to 7 ft.-lbs. (10 Nm) torque.

Figure 20-170-163

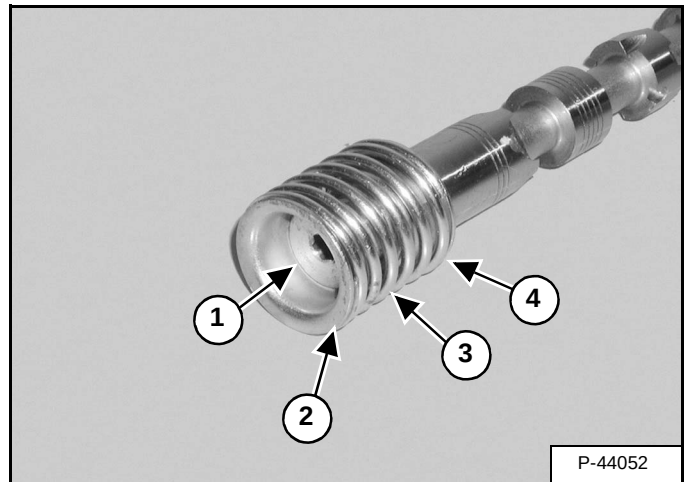


Remove the screw (Item 1), spring retainer (Item 2), spring (Item 3) and spring retainer (Item 4) [Figure 20-170-163] from the spool.

HYDRAULIC CONTROL VALVE (CONT'D)

Auxiliary/Frame Leveling Valve Section Disassembly And Assembly (Cont'd)


Figure 20-170-164

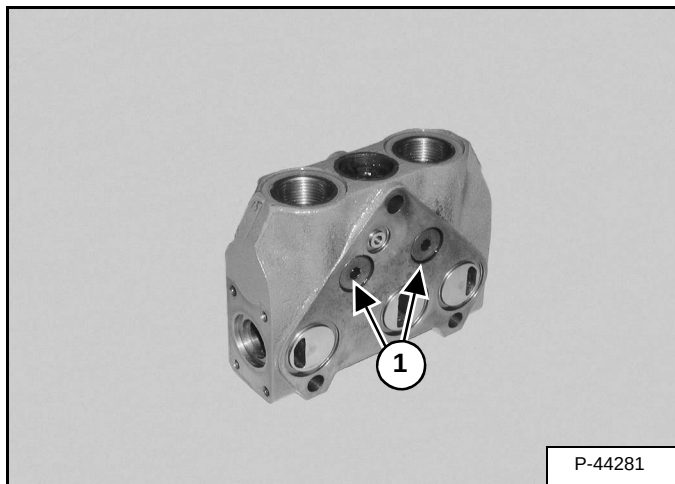

Remove the two plugs (Item 1) [Figure 20-170-164] from the valve section.


Assembly: Tighten the plugs to 20-24 ft.-lbs. (27-33 Nm) torque.

Figure 20-170-165

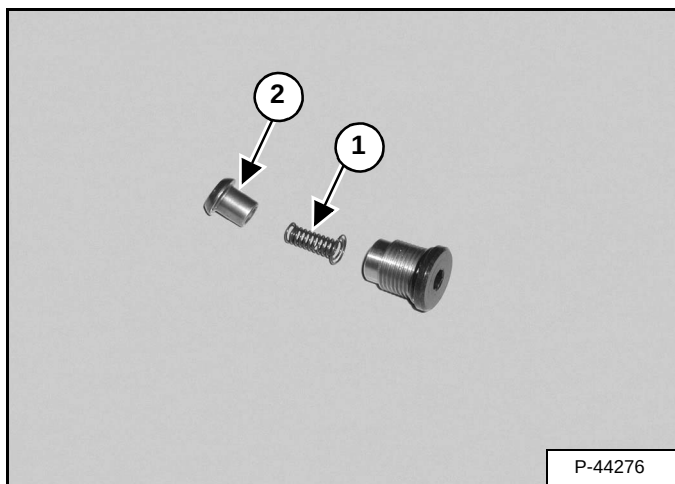


Remove the spring (Item 1) and poppet (Item 2) [Figure 20-170-165] from the plugs.

Figure 20-170-166

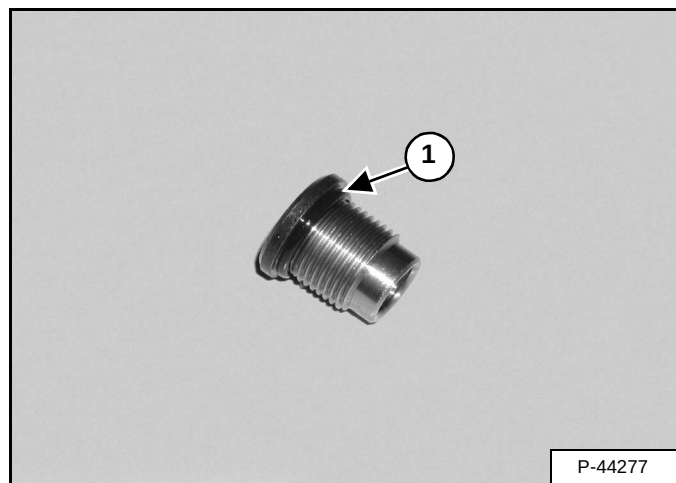

Remove the O-ring (Item 1) [Figure 20-170-166] from the plugs.

Figure 20-170-167

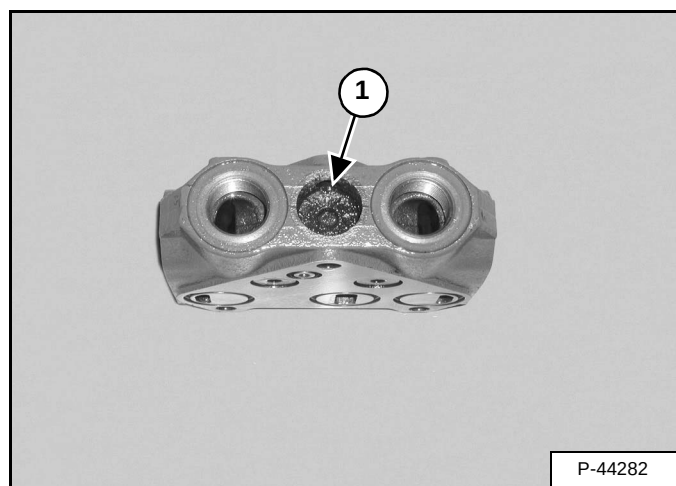


Loosen the plug (Item 1) [Figure 20-170-167].

Assembly: Tighten the plug to 40-49 ft.-lbs. (54-66 Nm) torque.

HYDRAULIC CONTROL VALVE (CONT'D)


Auxiliary/Frame Leveling Valve Section Disassembly And Assembly (Cont'd)

Figure 20-170-168

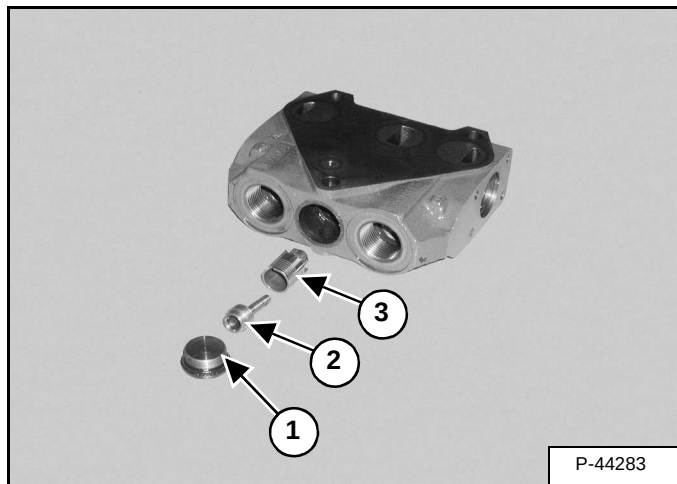

Remove the individual pressure compensator plug (Item 1), poppet (Item 2) and guide (Item 3) [Figure 20-170-168] from the valve section.


Figure 20-170-169

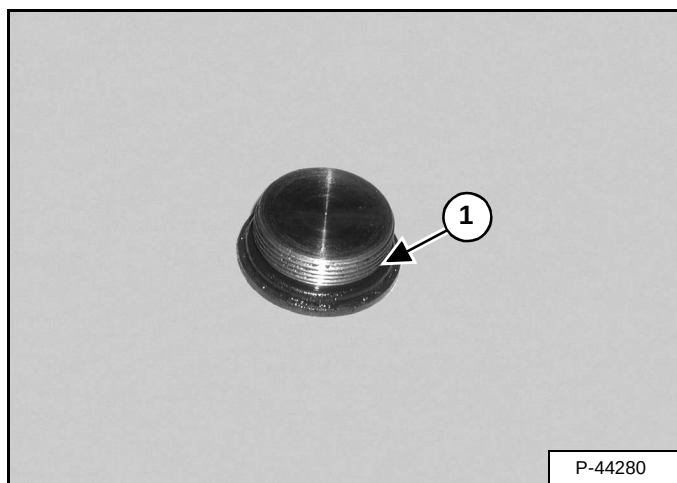

Remove the O-ring (Item 1) [Figure 20-170-169] from the plug.


Inlet-Outlet Valve Section Disassembly And Assembly

Figure 20-170-170

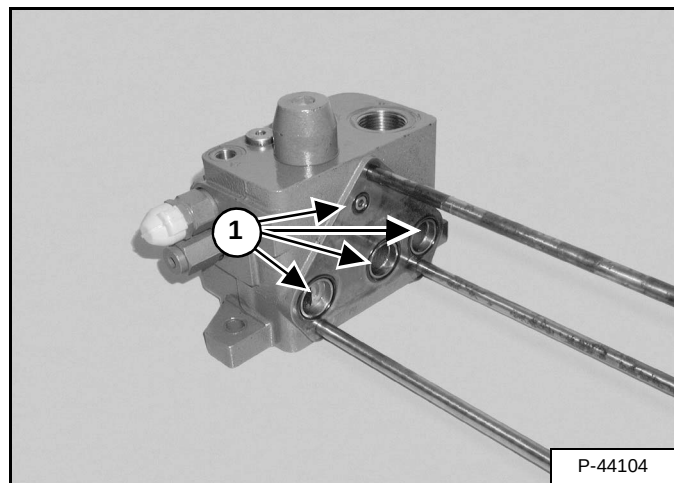

Remove the four O-rings (Item 1) [Figure 20-170-170] from the valve section.

Figure 20-170-171

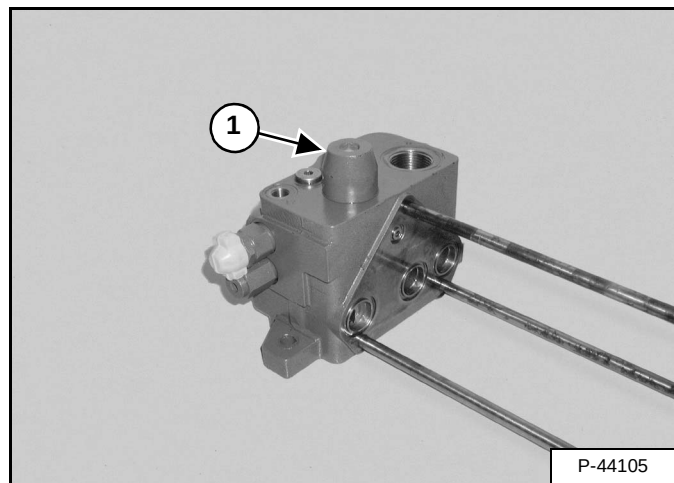


Remove the flushing valve plug (Item 1) [Figure 20-170-171] from the valve section.

Assembly: Tighten the plug to 74 ft.-lbs. (100 Nm) torque.

HYDRAULIC CONTROL VALVE (CONT'D)


Inlet/Outlet Valve Section Disassembly And Assembly (Cont'd)

Figure 20-170-172

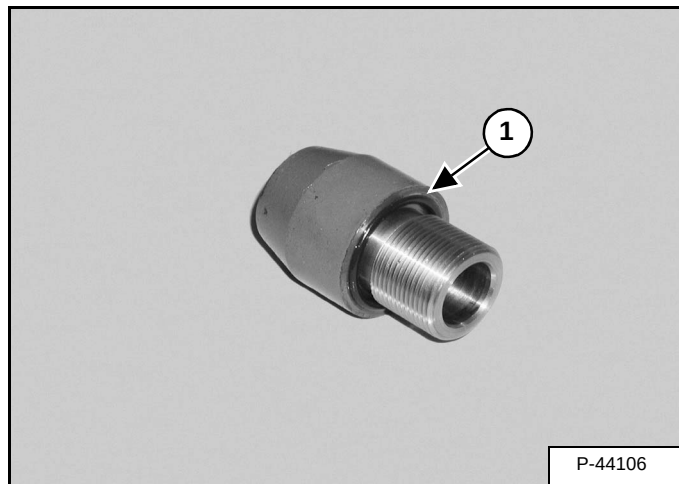


Remove the O-ring (Item 1) [Figure 20-170-172] from the plug.

Figure 20-170-173

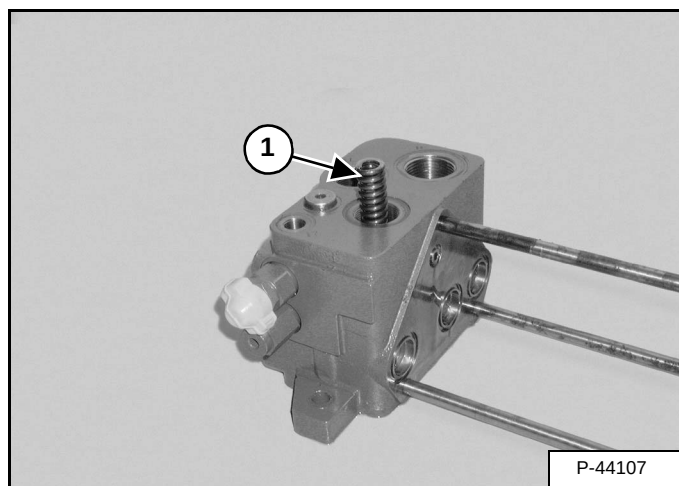

Remove the spring, shims and piston (Item 1) [Figure 20-170-173] from the valve section.


Figure 20-170-174

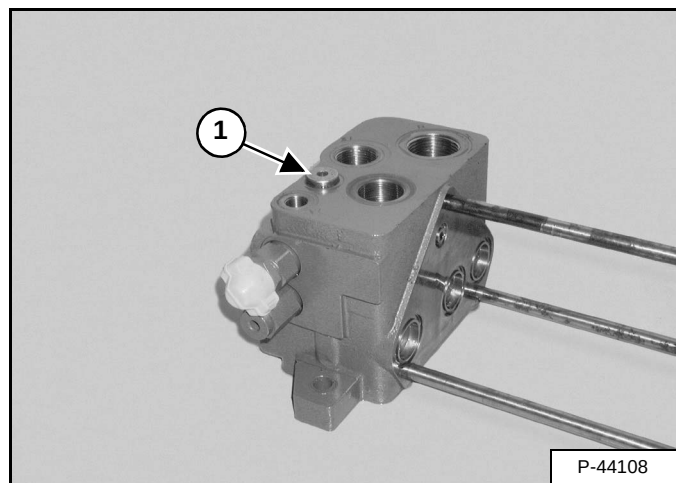

Remove the plug (Item 1) [Figure 20-170-174] from the valve section.

Assembly: Tighten the plug to 15 ft.-lbs. (20 Nm) torque.

Figure 20-170-175

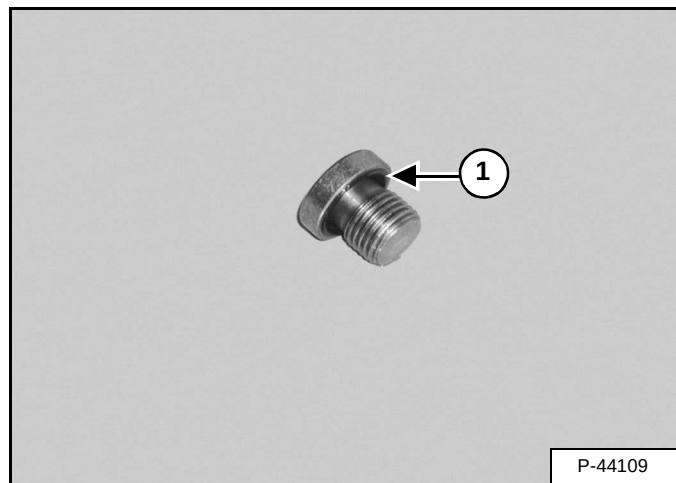


Remove the O-ring (Item 1) [Figure 20-170-175] from the plug.

HYDRAULIC CONTROL VALVE (CONT'D)

Inlet/Outlet Valve Section Disassembly And Assembly (Cont'd)


Figure 20-170-176

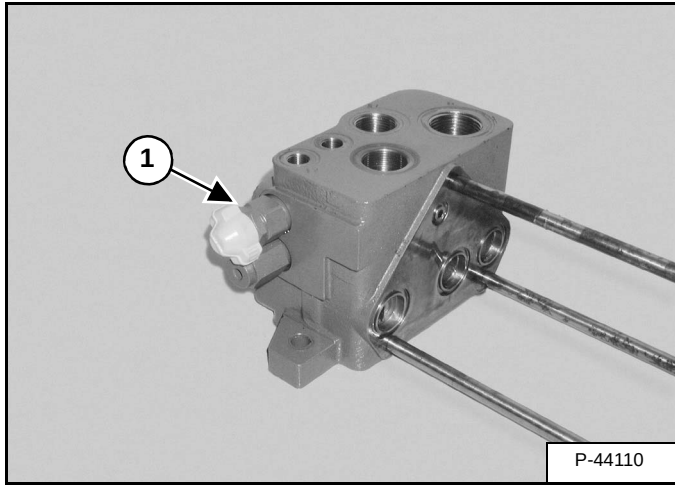

Remove the relief valve (Item 1) [Figure 20-170-176] from the valve section.


Assembly: Tighten the relief valve to 33 ft.-lbs. (45 Nm) torque.

Figure 20-170-177

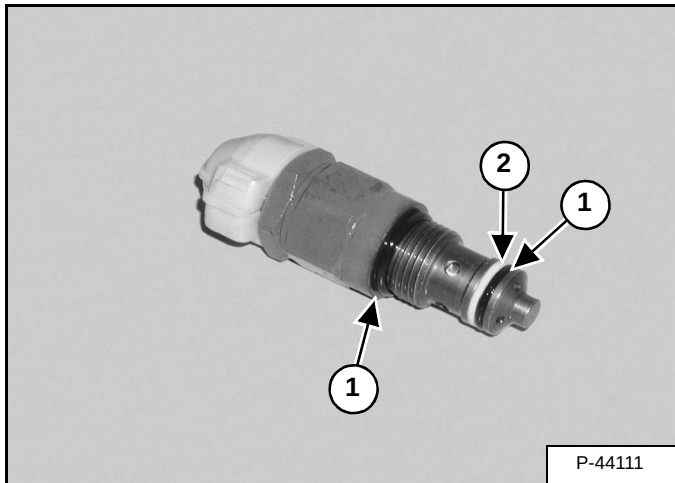

Remove the two O-rings (Item 1) and backup ring (Item 2) [Figure 20-170-177] from the relief valve.


Figure 20-170-178

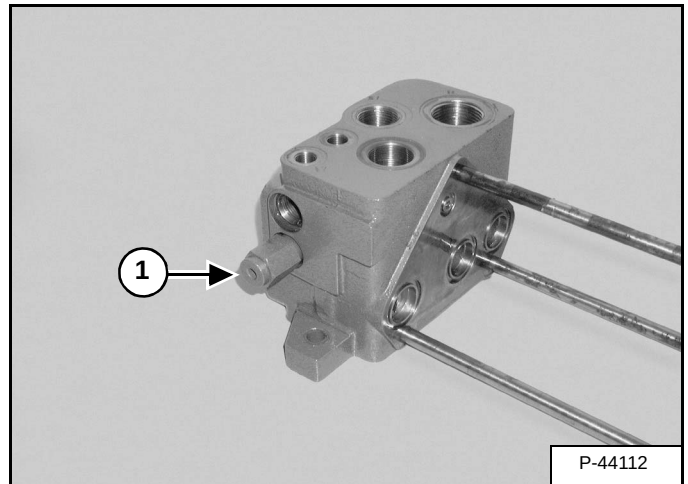

Remove the flow regulator valve (Item 1) [Figure 20-170-178] from the valve section.

Assembly: Tighten the flow regulator valve to 15 ft.-lbs. (20 Nm) torque.

Figure 20-170-179

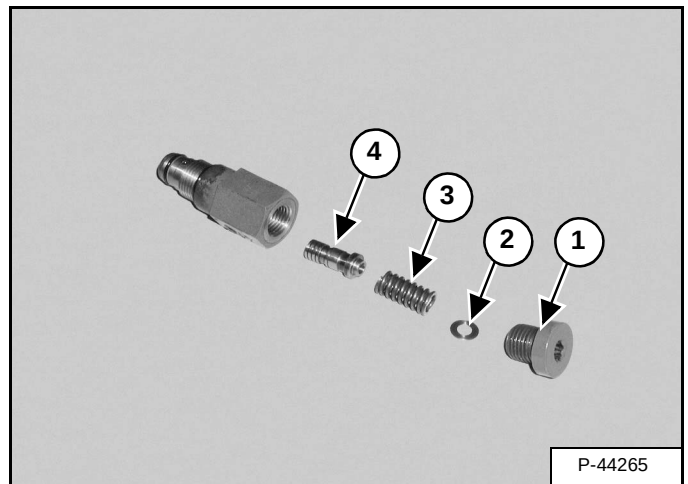


Remove the plug (Item 1), shim (Item 2), spring (Item 3) and spool (Item 4) [Figure 20-170-179] from the valve.

HYDRAULIC CONTROL VALVE (CONT'D)


Inlet/Outlet Valve Section Disassembly And Assembly (Cont'd)

Figure 20-170-180

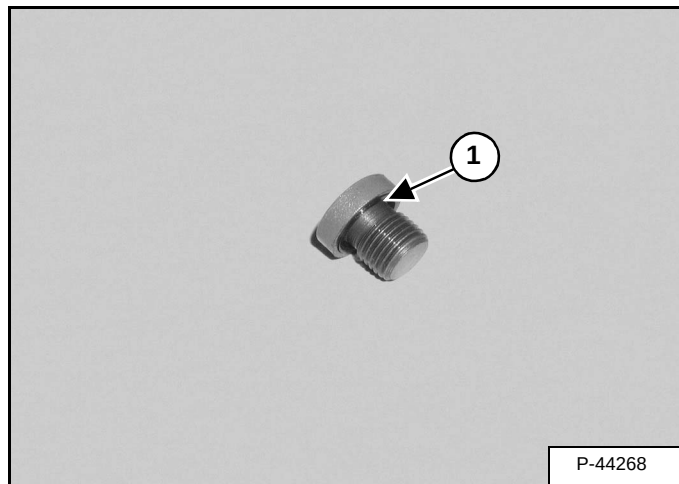


Remove the O-ring (Item 1) [Figure 20-170-180] from the plug.

Figure 20-170-181

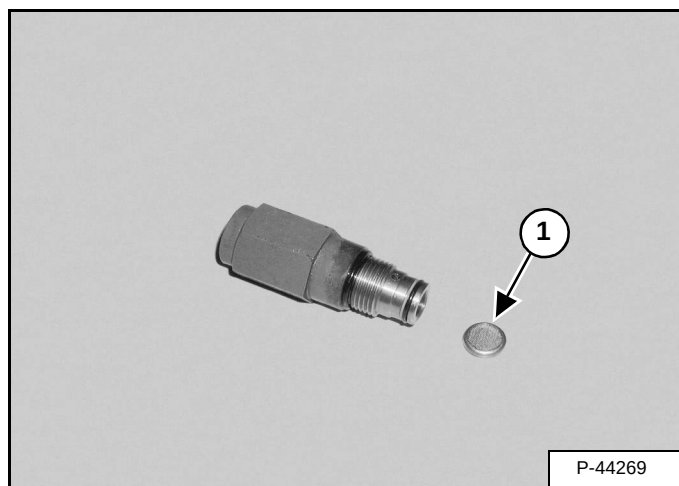


Remove the screen (Item 1) [Figure 20-170-181] from the valve.

Figure 20-170-182

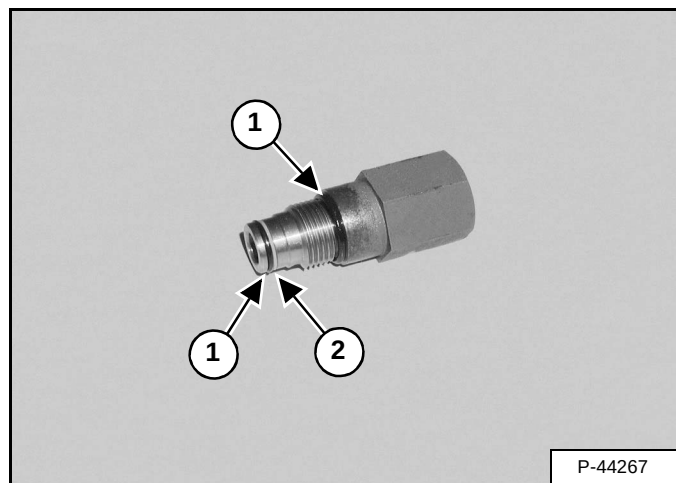

Remove the two O-rings (Item 1) and backup ring (Item 2) [Figure 20-170-182] from the flow regulator valve.

Figure 20-170-183

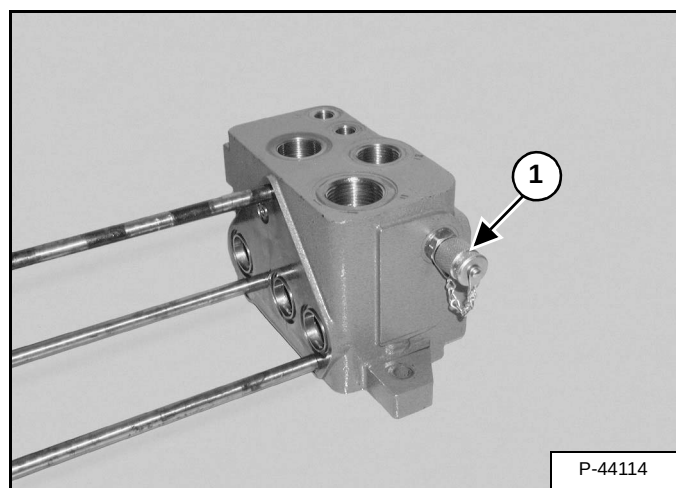


Remove the test fitting (Item 1) [Figure 20-170-183] from the valve section.

HYDRAULIC CONTROL VALVE (CONT'D)


Inlet/Outlet Valve Section Disassembly And Assembly (Cont'd)

Figure 20-170-184

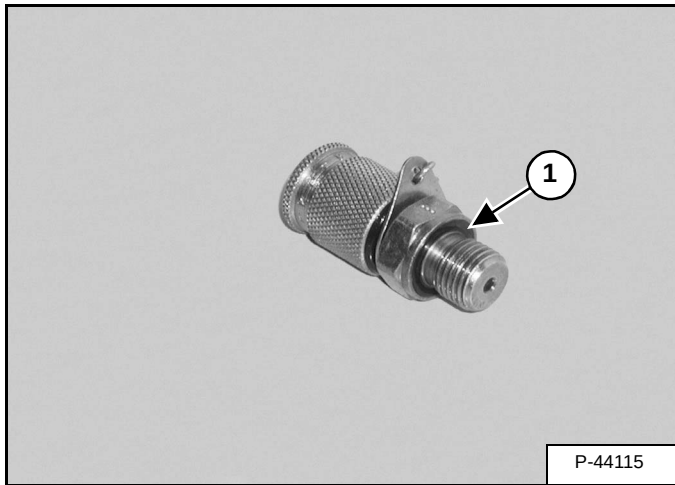


Remove the O-ring (Item 1) [Figure 20-170-184] from the test fitting.

Figure 20-170-185

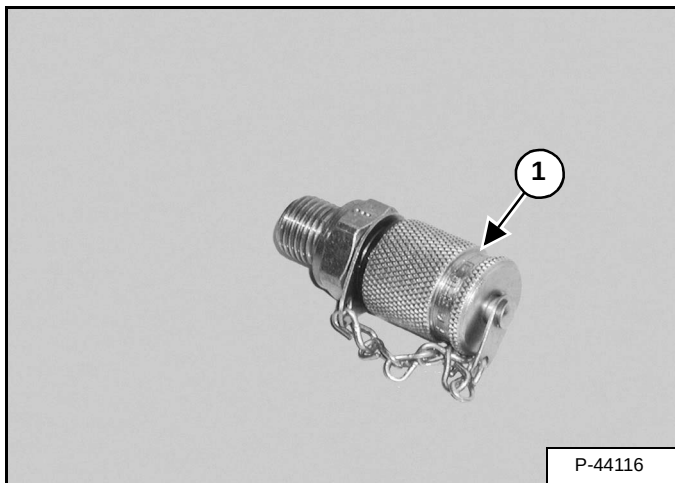

Remove the cap (Item 1) [Figure 20-170-185] from the test fitting.

Figure 20-170-186

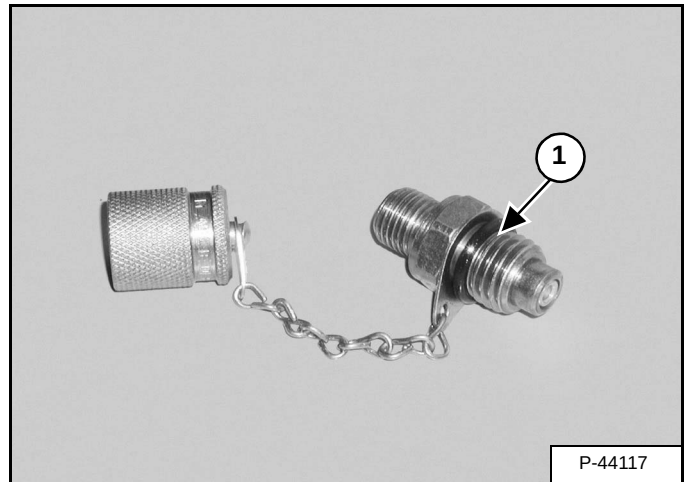

Remove the O-ring (Item 1) [Figure 20-170-186] from the test fitting.

PORT RELIEF VALVES

Adjustment Procedure

IMPORTANT


When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.

I-2003-0888

A portable hydraulic hand pump will be used to test the work port relief valves. The hand pump must have clean hydraulic fluid that is compatible with the Bobcat hydraulic fluid.

NOTE: The valve is shown removed from the machine for photo clarity.


Figure 20-171-1

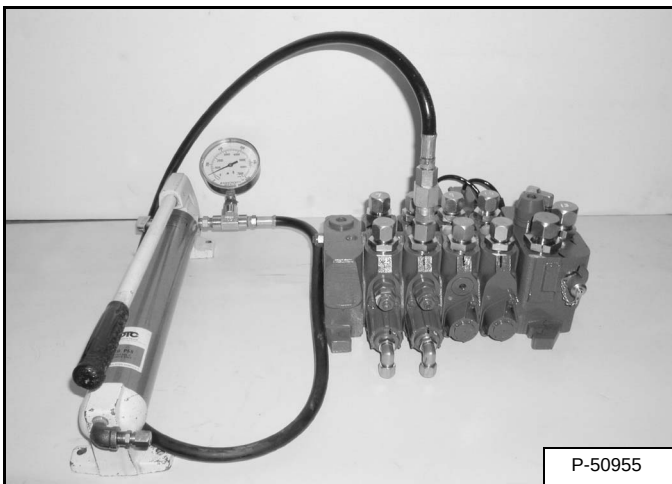

Install the hand pump, hose and a pressure gauge (minimum of 5000 PSI) into the valve section work port in which the port relief valve is located **[Figure 20-171-1]**. Pressurize this section with the hand pump until the port relief valve opens and record the pressure reading.

If the port relief pressure setting needs to be adjusted, release the hand pump pressure valve.

Figure 20-171-2

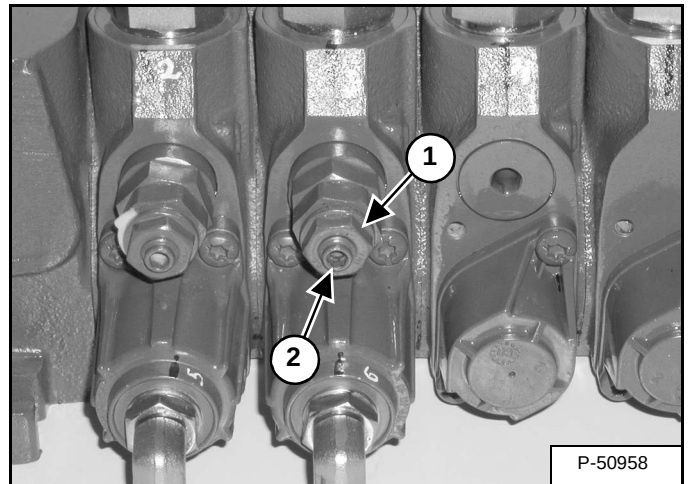

Loosen the lock nut (Item 1) **[Figure 20-171-2]**

Turn the adjusting screw (Item 2) **[Figure 20-171-2]** clockwise to increase the pressure and counterclockwise to reduce the pressure.

NOTE: One-quarter turn is approximately 400 PSI (27,58 Bar). When the correct pressure setting is obtained, tighten the locknut while holding the adjustment screw from turning.

Adjust the port relief valve until the correct setting is obtained.




Bobcat®

FLOW CONTROL VALVE


Removal And Installation

Figure 20-172-1

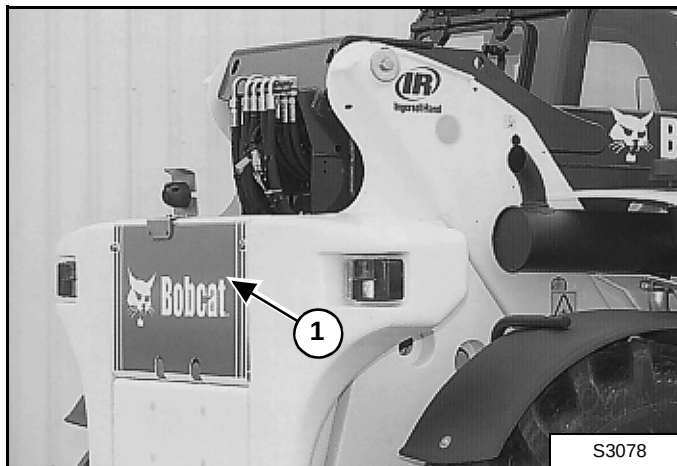

Remove the rear cover (Item 1) [Figure 20-172-1].


Figure 20-172-2

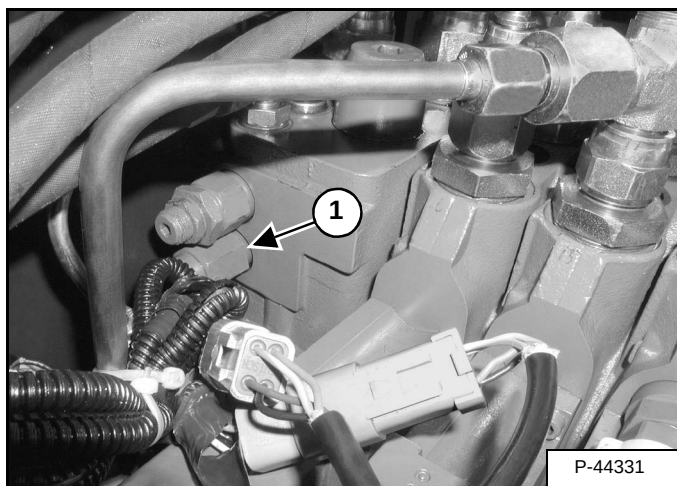

Remove the flow control valve (Item 1) [Figure 20-172-2] from the right front of the hydraulic control valve.

Installation: Tighten the flow control valve to 15 ft.-lbs. (20 Nm) torque..

Figure 20-172-3

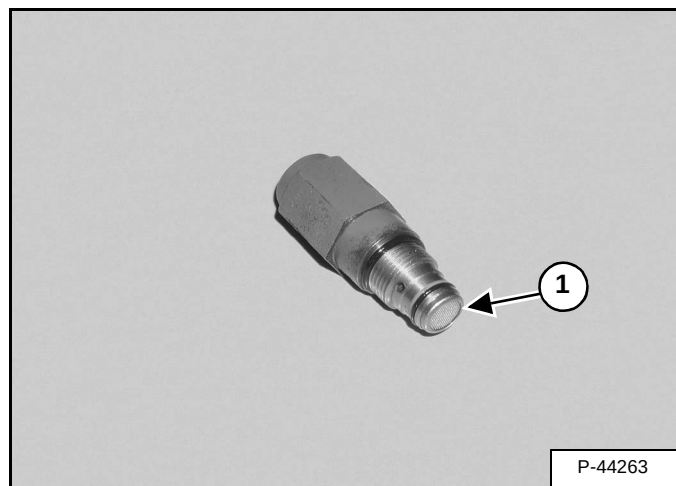

Remove and clean the filter (Item 1) [Figure 20-172-3].

NOTE: Check the filter for any damage. Replace the filter if required.



Bobcat®


JOYSTICK

Removal And Installation

Remove the dash cover/steering column cover. (See "Removal And Installation" on page 50-130-1.)


Remove the joystick panel. (See "Removal And Installation" on page 50-140-1.)

Figure 20-180-1

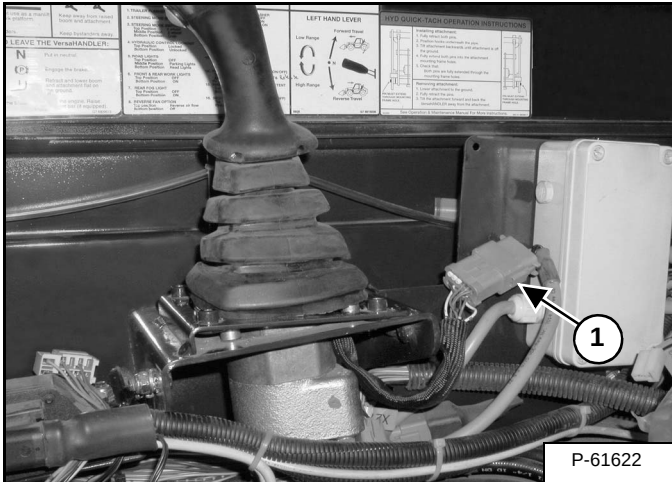


Unplug the electrical connector (Item 1) [Figure 20-180-1].

Figure 20-180-2

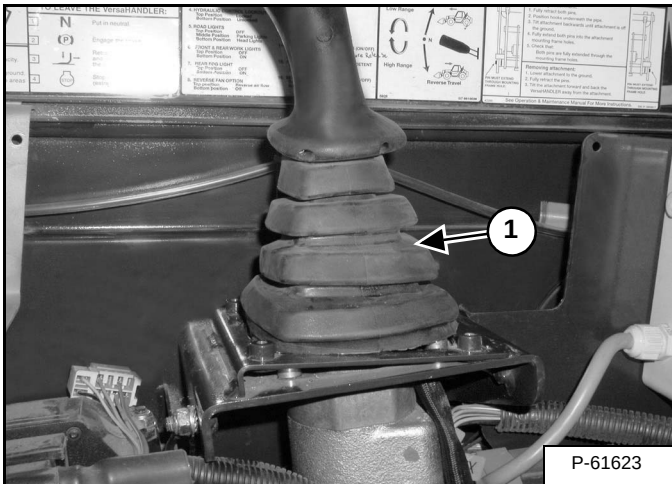

Raise the dust boot (Item 1) [Figure 20-180-2].

Figure 20-180-3

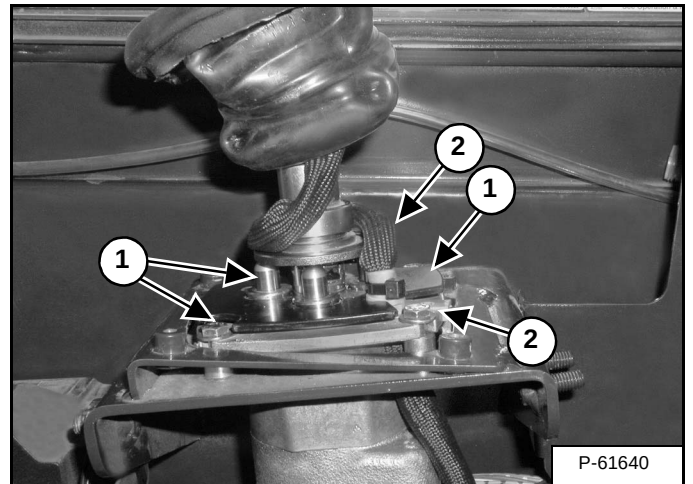

Remove the four mounting bolts and spacers (Item 1) [Figure 20-180-3].

Installation: The joystick harness (Item 2) [Figure 20-180-3] must be positioned around the swivel joint as shown.

WARNING

Hydraulic fluid escaping under pressure can have sufficient force to enter a person's body by penetrating the skin. This can cause serious injury and possible death if proper medical treatment by a physician familiar with this injury is not received immediately.

W-2145-0290

JOYSTICK (CONT'D)


Removal And Installation (Cont'd)

IMPORTANT

When making repairs on hydraulic system, clean the work area before disassemble and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.

I-2056-0793


Figure 20-180-4

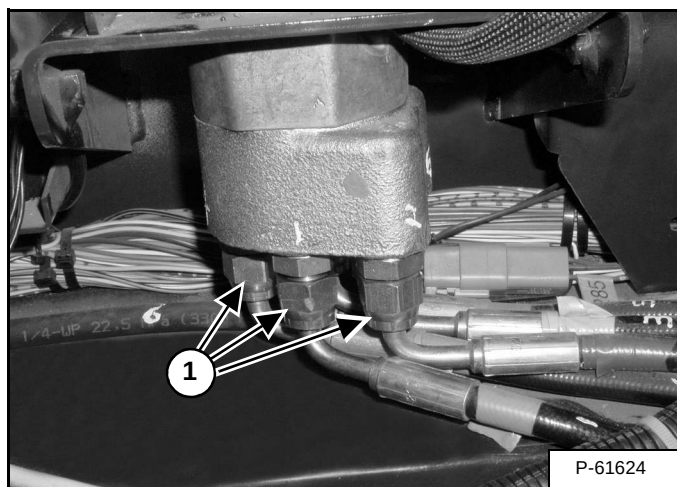

Remove the six hoses (Item 1) [Figure 20-180-4] from the joystick.

Mark the hoses for correct assembly.


Figure 20-180-5

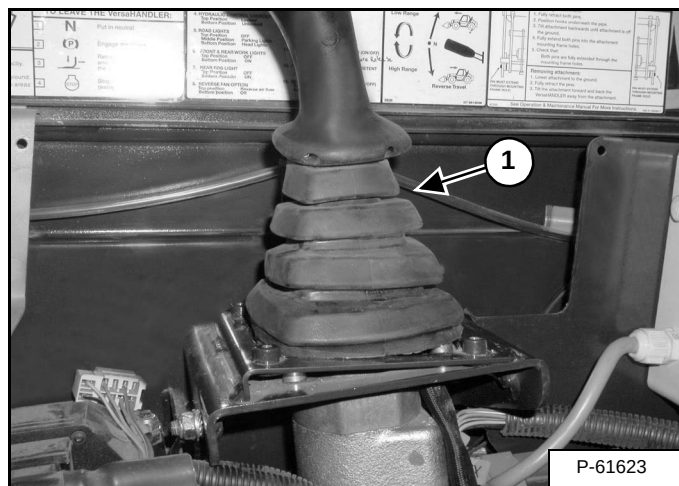

Remove the joystick assembly (Item 1) [Figure 20-180-5].

Parts Identification

- 1 Joystick
- 2 Lever Assy
- 3 Bellow
- 4 Plate
- 5 Set of push rods

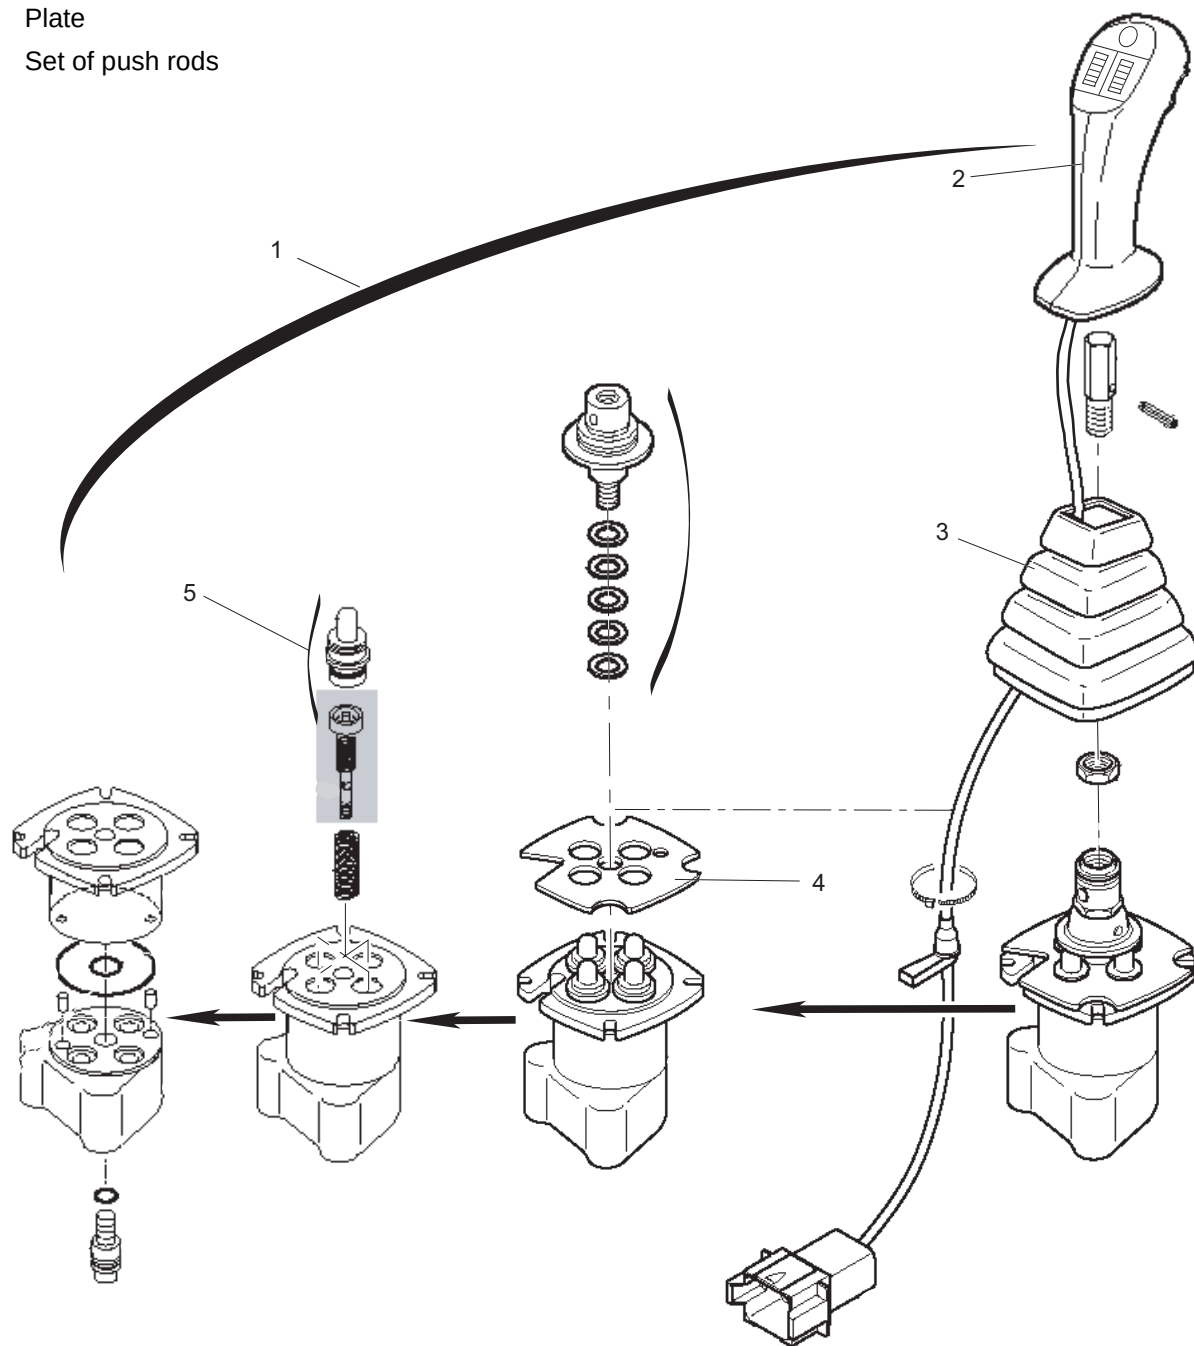


S2755

PARKING BRAKE


Parking Brake Valve Removal And Installation

Figure 20-190-6

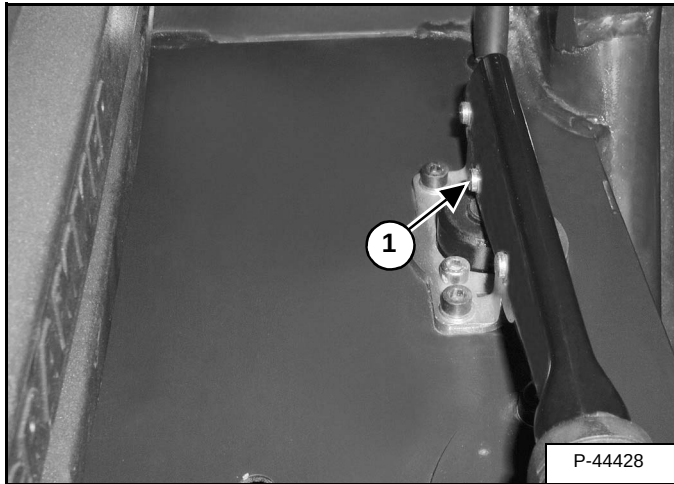

Remove the pin retainer (Item 1) [Figure 20-190-6].

Figure 20-190-7

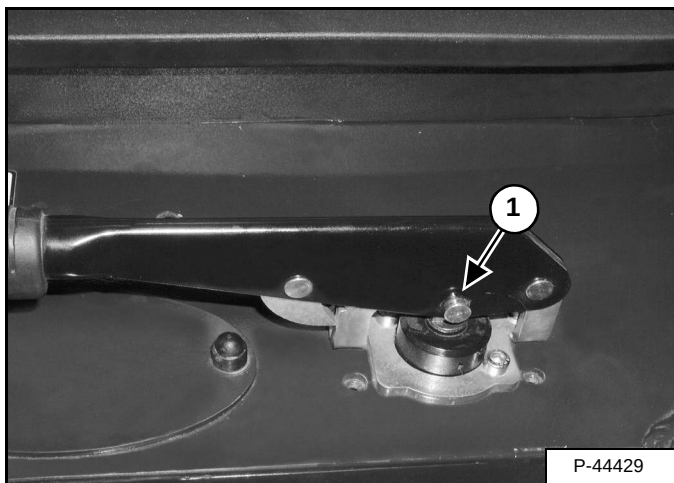

Remove the pin (Item 1) [Figure 20-190-7] from the lever.

Figure 20-190-8


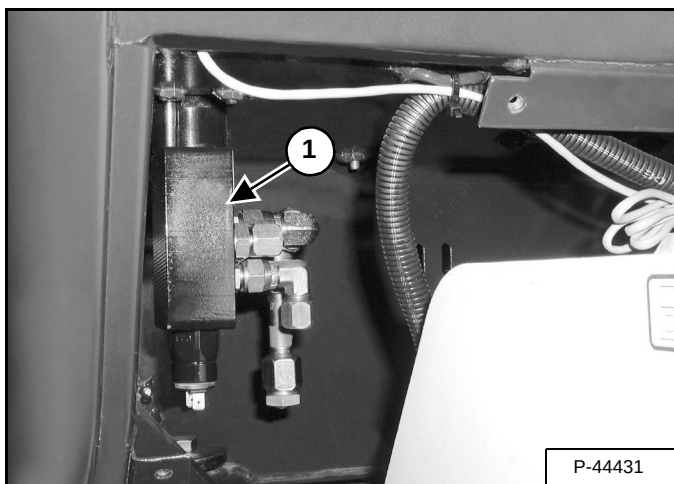


Figure 20-190-9

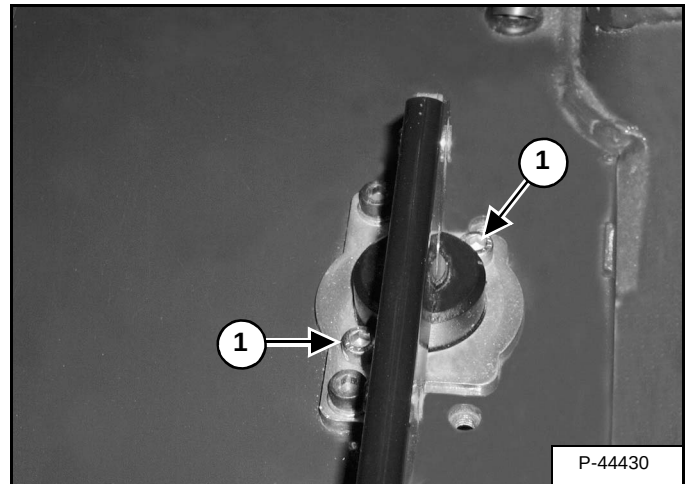


Support the brake valve (Item 1) [Figure 20-190-8] and remove the two screws (Item 1) [Figure 20-190-9].

Remove the parking brake valve.

PARKING BRAKE (CONT'D)


Parking Brake Valve Disassembly And Assembly

Figure 20-190-10

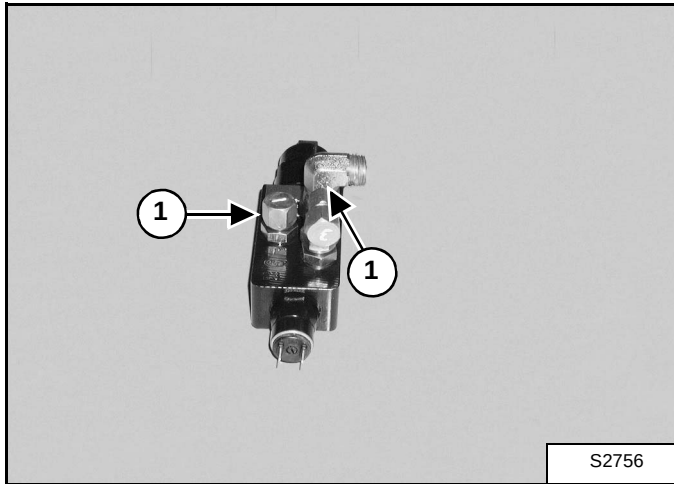

Remove the fittings (Item 1) [Figure 20-190-10].


Figure 20-190-11

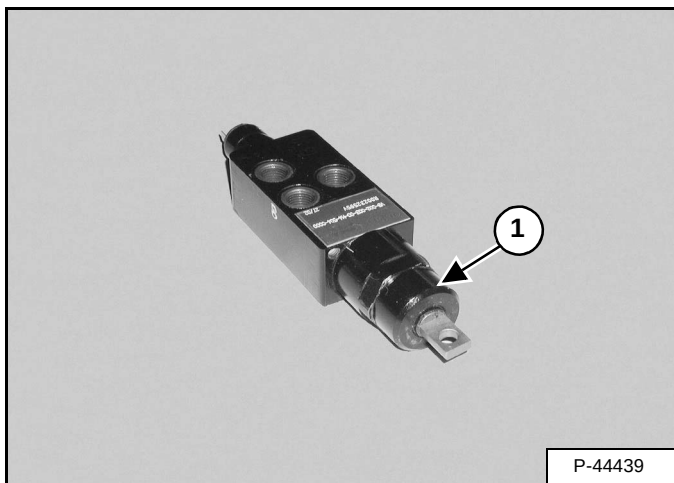

Loosen the collar (Item 1) [Figure 20-190-11].


NOTE: Use care removing the collar. The collar is under spring pressure.

Figure 20-190-12

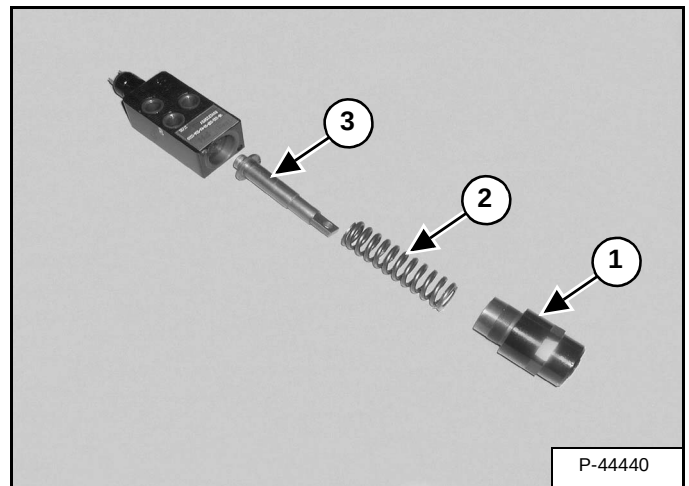


Remove the collar (Item 1), spring (Item 2) and shaft (Item 3) [Figure 20-190-12] from the housing.

Figure 20-190-13

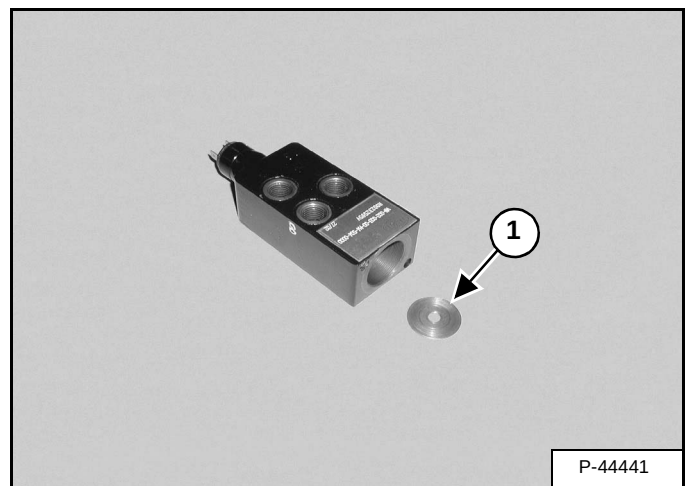

Remove the washer (Item 1) [Figure 20-190-13] from the housing.

Figure 20-190-14

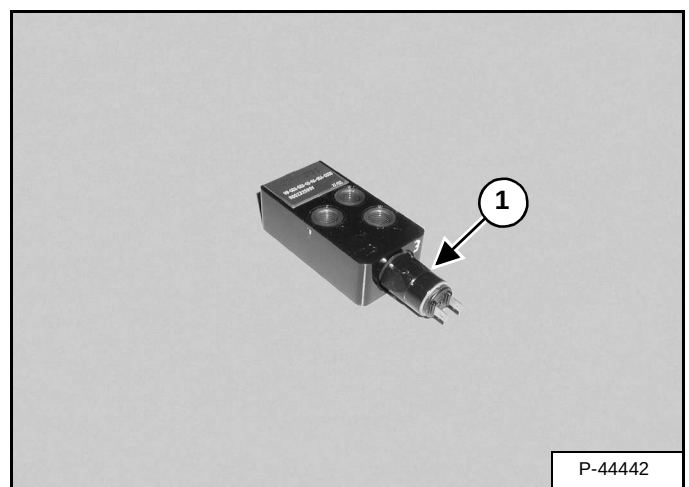


Remove the electrical connector (Item 1) [Figure 20-190-14] from the housing.

PILOT PRESSURE LOCK OUT VALVE

Testing


Raise the boom and install the boom stop. (See "Installing The Approved Boom Stop" on page 10-150-1.)

Figure 20-200-1

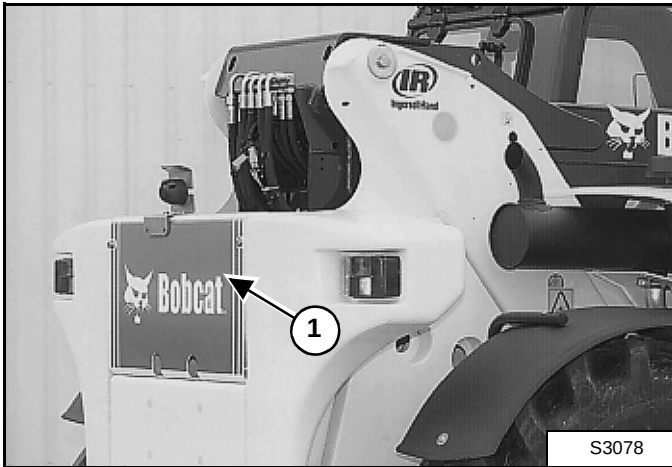

Remove the rear cover (Item 1) [Figure 20-200-1].

Figure 20-200-2

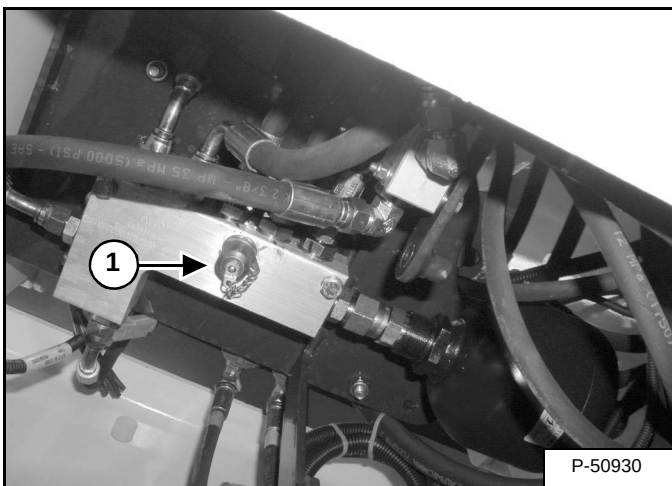

Locate the test fitting (Item 1) [Figure 20-200-2] below the control valve and remove the cap.

Figure 20-200-3



Install a 1000 psi (70 Bar) gauge on the test fitting [Figure 20-200-3].

Start the engine and run engine at 2200 rpm.

Record the pressure. The pressure at the gauge should be 392 Psi (27 Bar) at min. rpm to 493 Psi (34 Bar) at max. rpm.


The pilot pressure lock out valve is not adjustable. If the pressure is incorrect, replace the pilot pressure lock out valve. (See Page 20-200-2.)

PILOT PRESSURE LOCK OUT VALVE (CONT'D)

Removal And Installation

Relieve hydraulic pressure. Drain the hydraulic reservoir.
(See "Replacing Hydraulic Fluid" on page 10-100-3.)


Figure 20-200-4

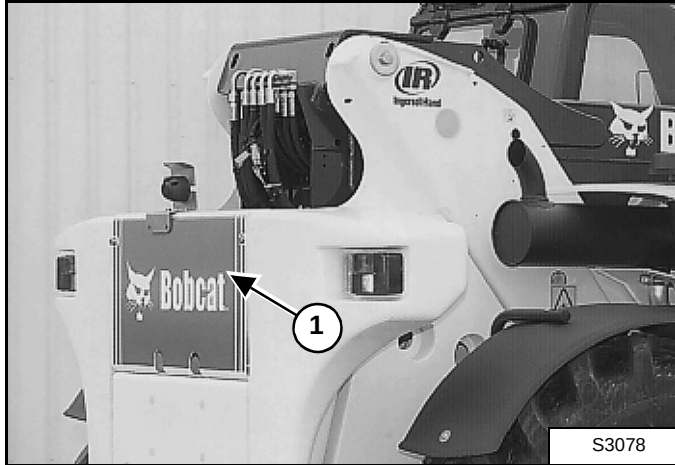

Remove the rear cover (Item 1) [Figure 20-200-4].

Mark the hoses and electrical connectors for correct installation.

Figure 20-200-5

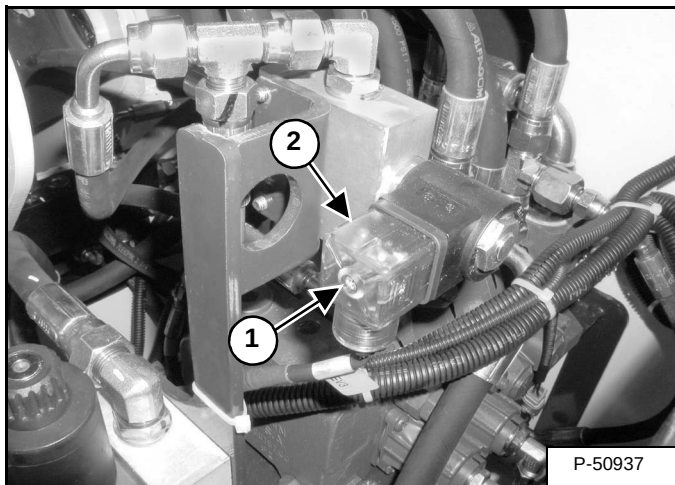

Remove the screw (Item 1) and unplug the electrical connector (Item 2) [Figure 20-200-5].

WARNING

Hydraulic fluid escaping under pressure can have sufficient force to enter a person's body by penetrating the skin. This can cause serious injury and possible death if proper medical treatment by a physician familiar with this injury is not received immediately.


W-2145-0290

IMPORTANT

When making repairs on hydraulic system, clean the work area before disassemble and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.

I-2056-0793

Figure 20-200-6

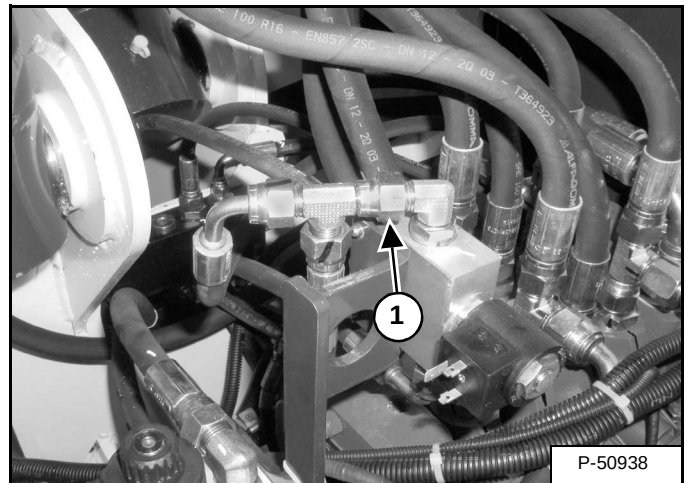


Remove the top hose (Item 1) [Figure 20-200-6].

PILOT PRESSURE LOCK OUT VALVE (CONT'D)


Removal And Installation (Cont'd)

Figure 20-200-7

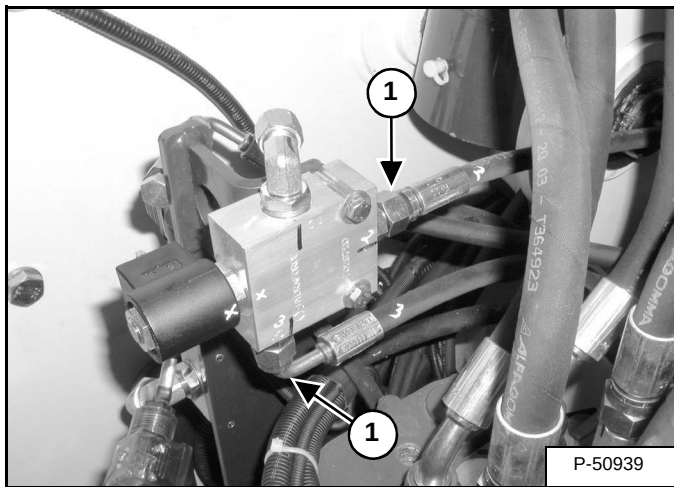

Remove the two hoses (Item 1) [Figure 20-200-7].


Figure 20-200-8

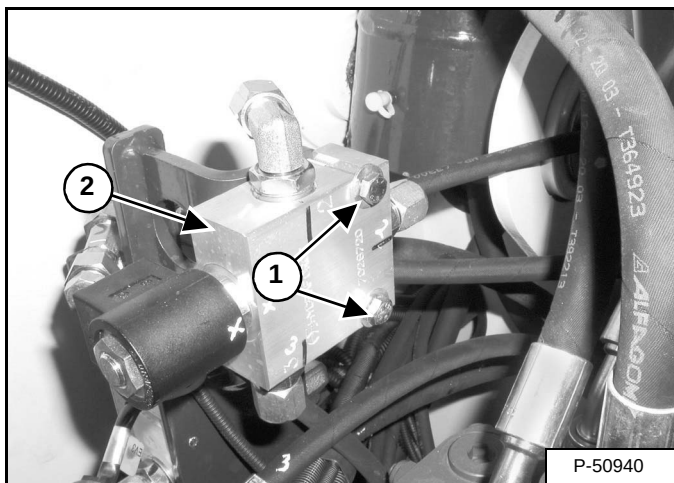

Remove the two mounting bolts (Item 1) and remove the pilot pressure lock out valve (Item 2) [Figure 20-200-8].


Disassembly And Assembly

Figure 20-200-9

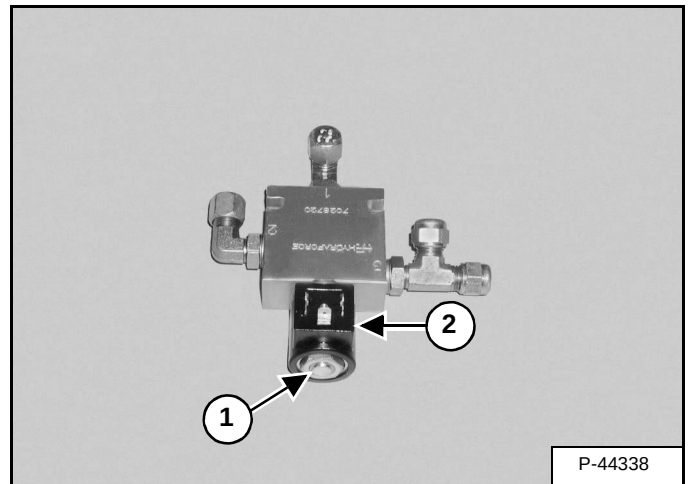

Remove the nut (Item 1) and coil (Item 2) [Figure 20-200-9] from the spool.

Figure 20-200-10

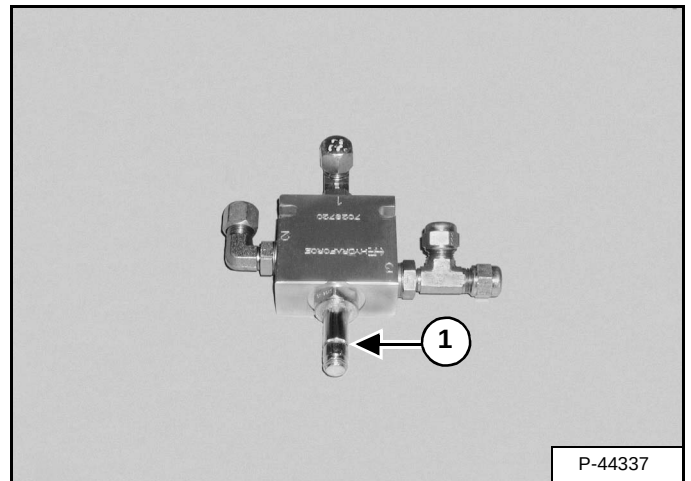


Remove the spool (Item 1) [Figure 20-200-10].

PILOT PRESSURE LOCK OUT VALVE (CONT'D)


Disassembly And Assembly (Cont'd)

Figure 20-200-11

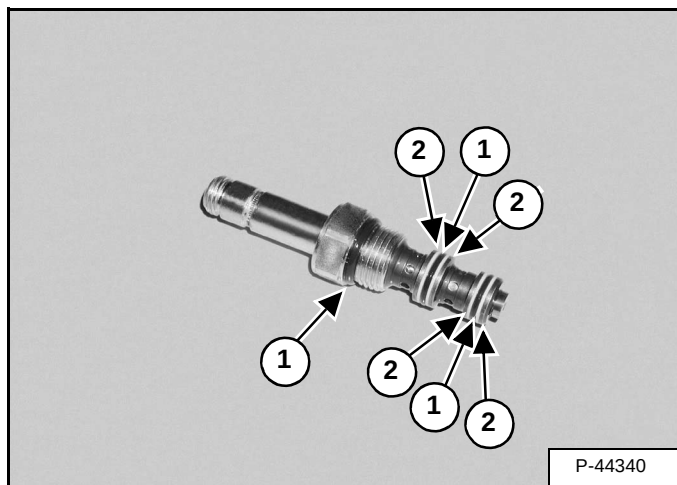

Remove the three O-rings (Item 1) and four backup rings (Item 2) [Figure 20-200-11] from the spool.

Figure 20-200-12

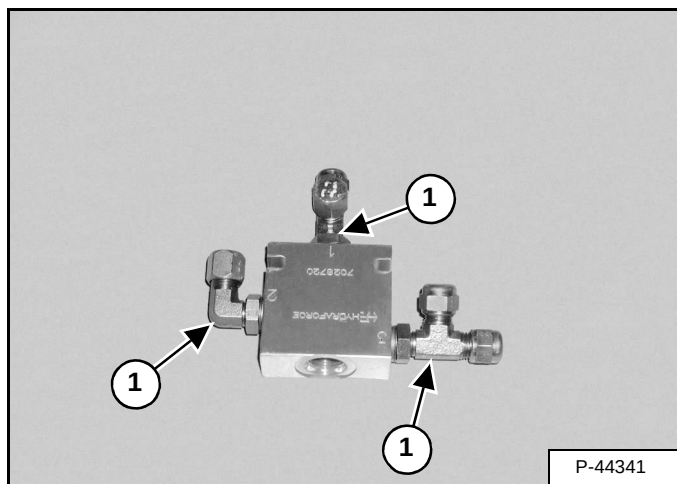

Remove the fittings (Item 1) [Figure 20-200-12].

Wash the valve in clean solvent and dry with compressed air. Check the components for wear or damage. Replace any worn or damaged components. Always use new O-rings and backup rings.

Apply clean hydraulic fluid to the components during assembly.

ACCUMULATOR

Removal And Installation

The accumulator is located below the control valve, and can be seen through an access hole on the bottom of the machine.

! WARNING

Hydraulic fluid escaping under pressure can have sufficient force to enter a person's body by penetrating the skin. This can cause serious injury and possible death if proper medical treatment by a physician familiar with this injury is not received immediately.


W-2145-0290

IMPORTANT

When making repairs on hydraulic system, clean the work area before disassemble and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.


I-2056-0793

Figure 20-210-1

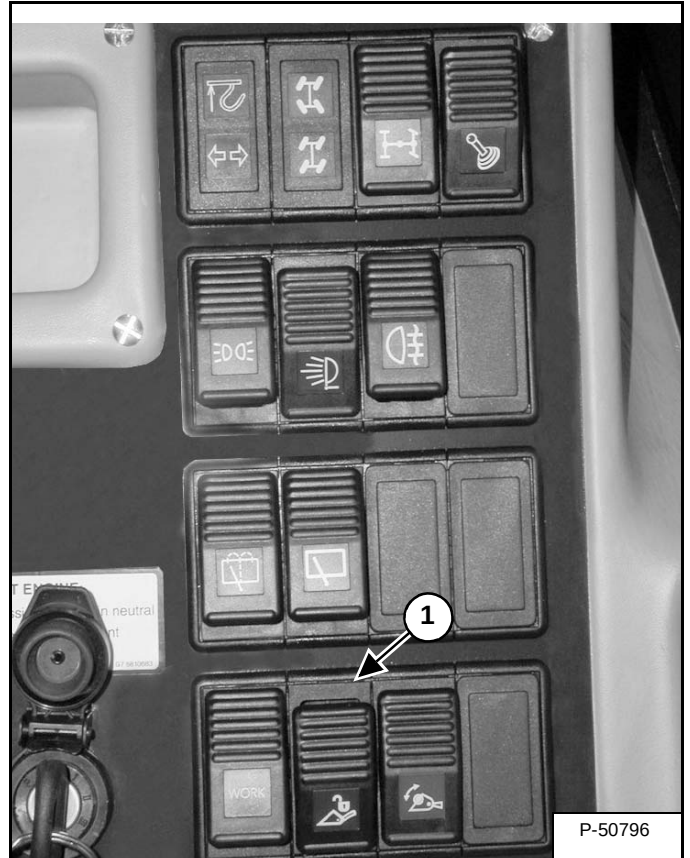

With the engine off, relieve the hydraulic pressure by pressing the bottom of the button (Item 1) [Figure 20-210-1].

Figure 20-210-2

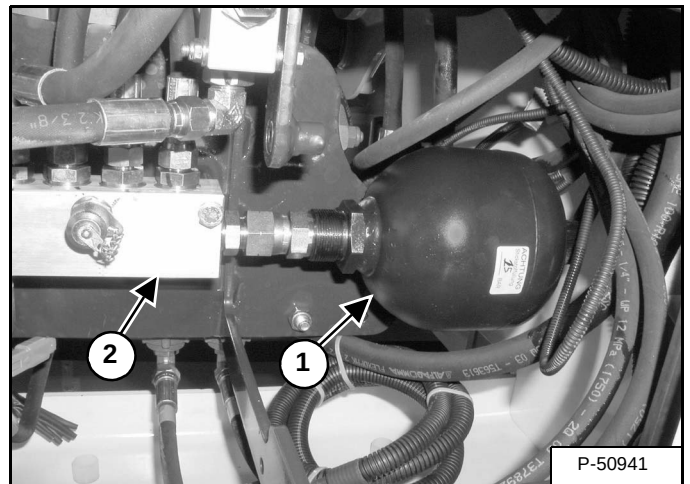

Remove the accumulator (Item 1) from the manifold (Item 2) [Figure 20-210-2].




Bobcat®

OPTIONAL TOW VALVE

Removal And Installation

Open the engine cover.

Figure 20-220-1

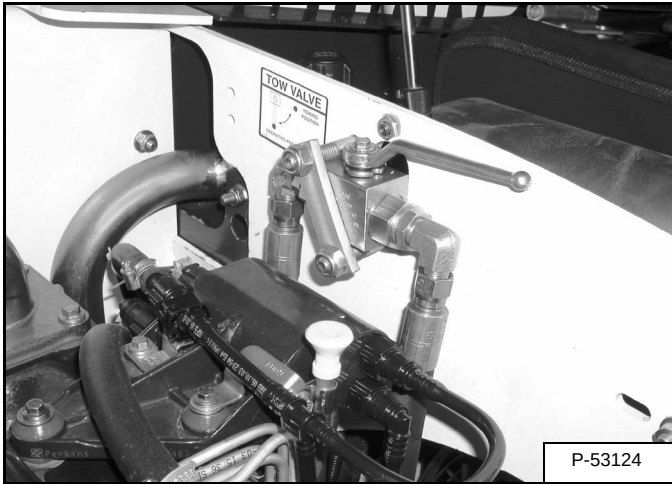

Position the tow valve to towing position to relieve hydraulic pressure [Figure 20-220-1].

! WARNING

Hydraulic fluid escaping under pressure can have sufficient force to enter a person's body by penetrating the skin. This can cause serious injury and possible death if proper medical treatment by a physician familiar with this injury is not received immediately.


W-2145-0290

IMPORTANT

When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.


I-2003-0888

Figure 20-220-2

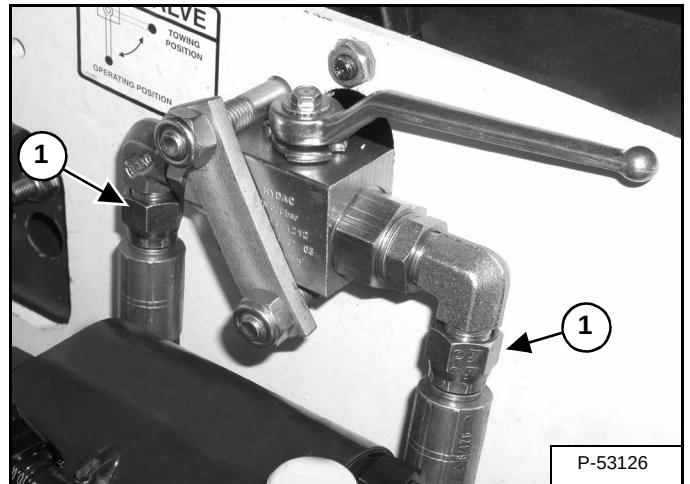

Mark the hoses for correct installation. Remove the two hoses (Item 1) [Figure 20-220-2].

Figure 20-220-3

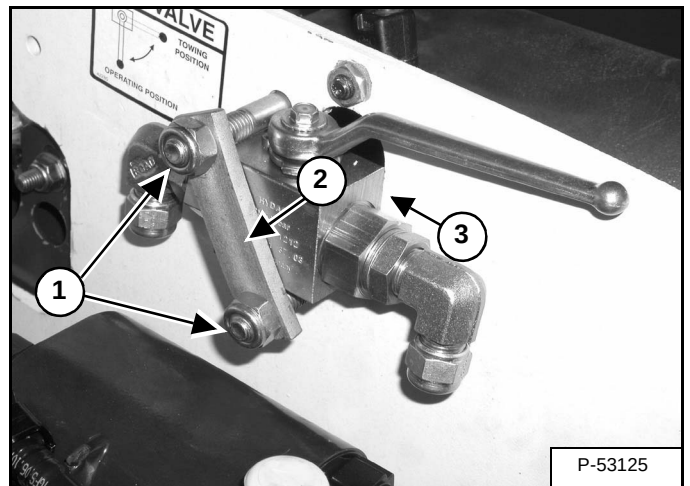

Remove the two bolts, nuts (Item 1) and strap (Item 2). Remove the tow valve (Item 3) [Figure 20-220-3].


TOW VALVE (CONT'D)

Disassembly And Assembly

Clean the outside of the tow valve before disassembly.


Mark the outside of the tow valve for ease of assembly.

Figure 20-220-4

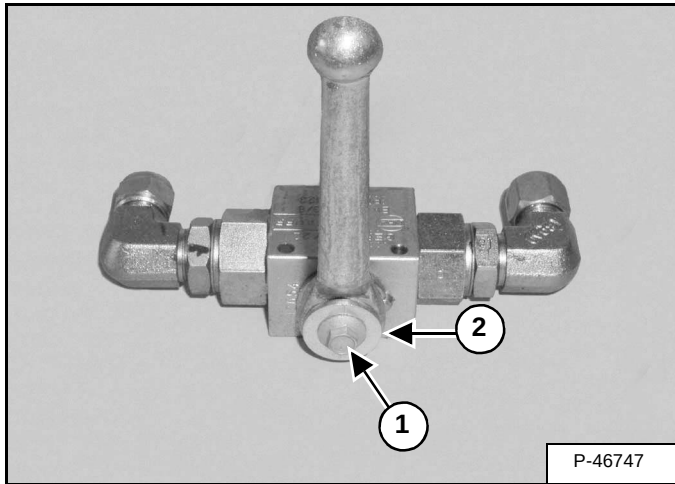


Remove the screw (Item 1) and washer (Item 2) [Figure 20-220-4].

Figure 20-220-5

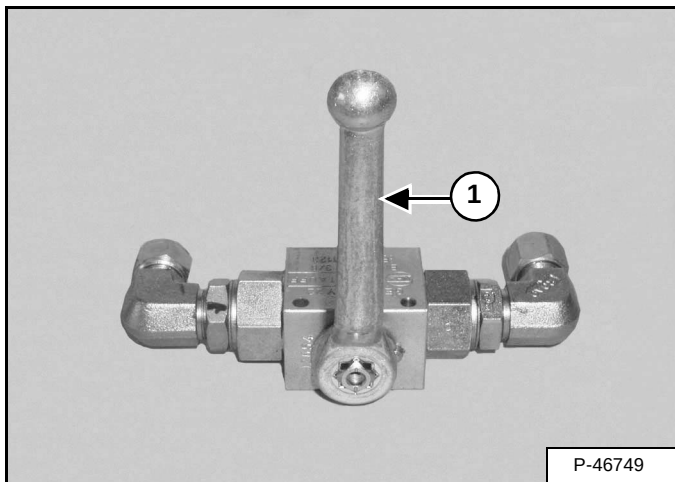

Remove the handle (Item 1) [Figure 20-220-5].


Figure 20-220-6

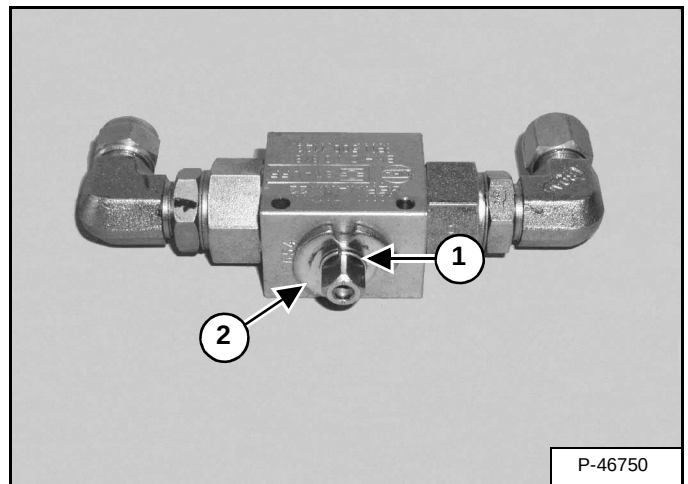

Remove the retainer (Item 1) and stop plate (Item 2) [Figure 20-220-6].

NOTE: Record the position of the stop plate for proper assembly.

Figure 20-220-7

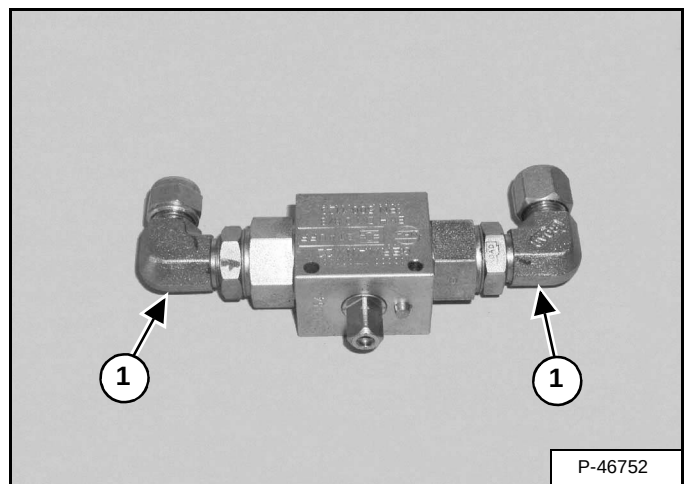


Remove the two fittings (Item 1) [Figure 20-220-7].

TOW VALVE (CONT'D)

Disassembly And Assembly (Cont'd)


Remove the O-ring (Item 1) [Figure 20-220-10] from the adapters.

Figure 20-220-8

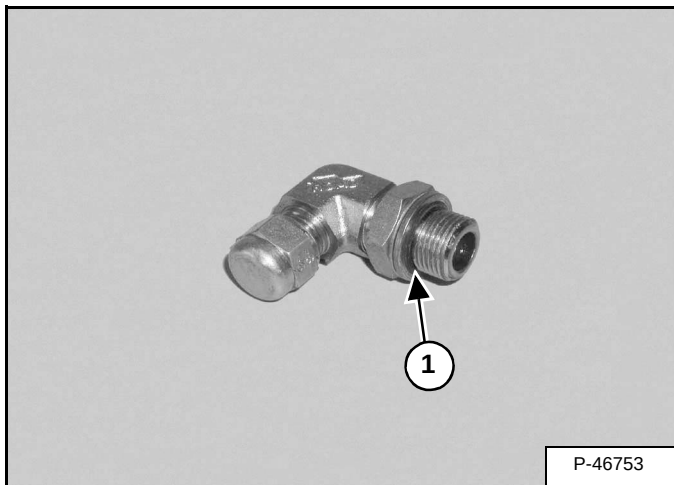


Remove the O-ring (Item 1) [Figure 20-220-8] from the fittings.

Figure 20-220-9

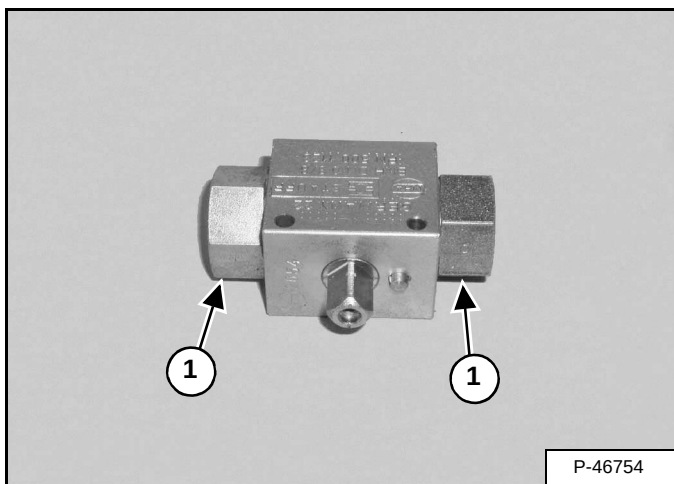

Remove the two adapters (Item 1) [Figure 20-220-9].

Figure 20-220-10

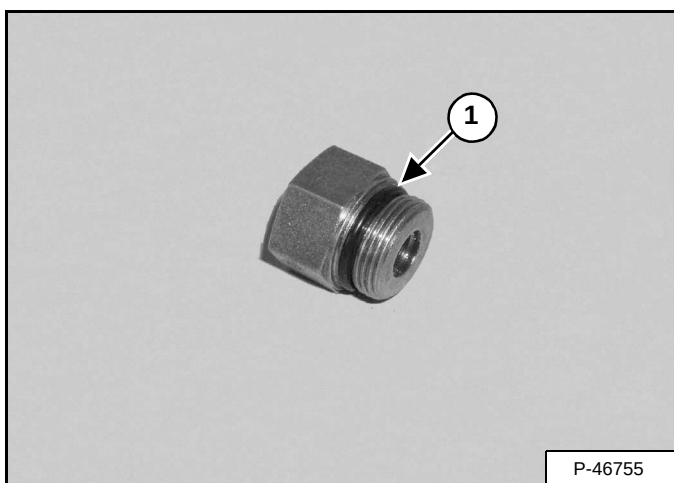

TOW VALVE (CONT'D)

Disassembly And Assembly (Cont'd)

Figure 20-220-11


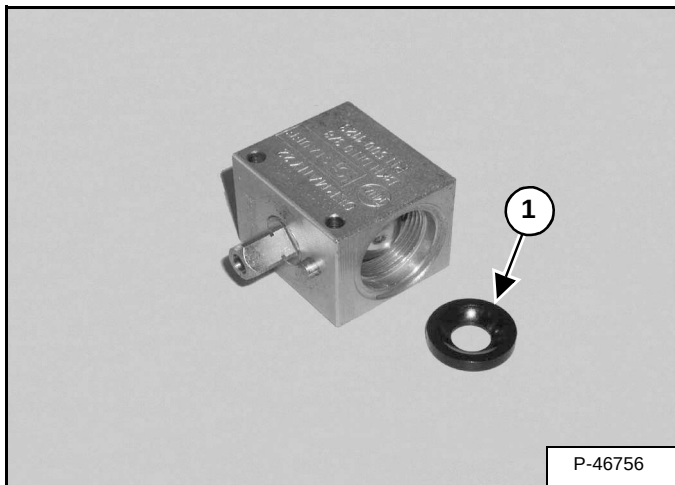


Figure 20-220-12

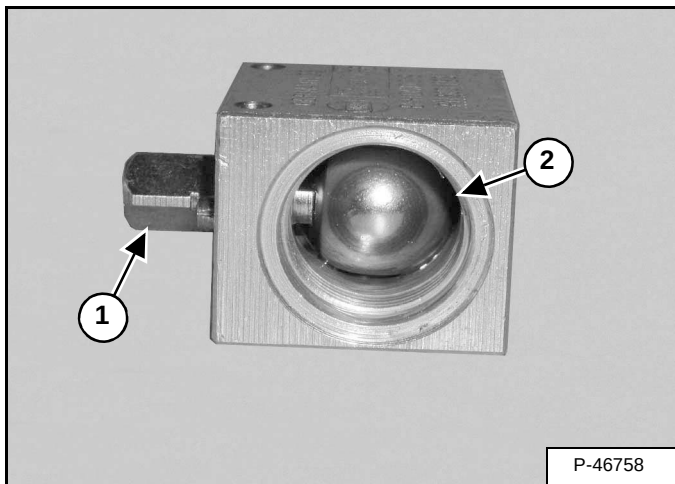

Remove the seal (Item 1) [Figure 20-220-11] from the valve. (Both sides)

Assembly: The concave side of the seal (Item 1) [Figure 20-220-11] fits over the ball (Item 2) [Figure 20-220-12].

Turn the shaft (Item 1) until the shaft and ball (Item 2) [Figure 20-220-12] are in the position shown. Remove the ball.

Assembly: Record the position of the shaft and ball for proper assembly.

Figure 20-220-13


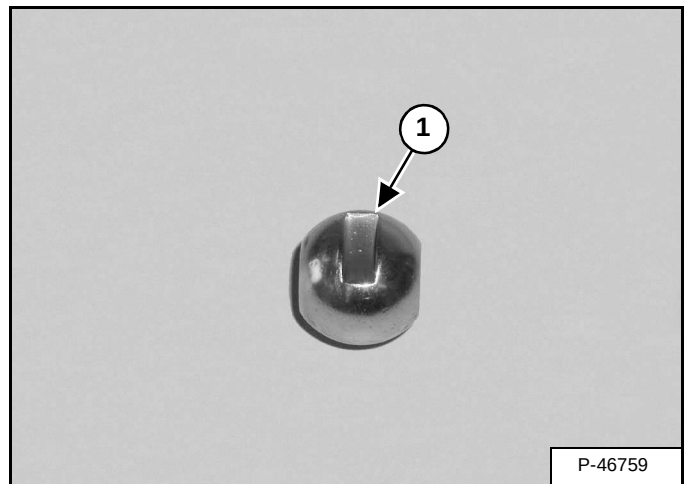


Figure 20-220-14

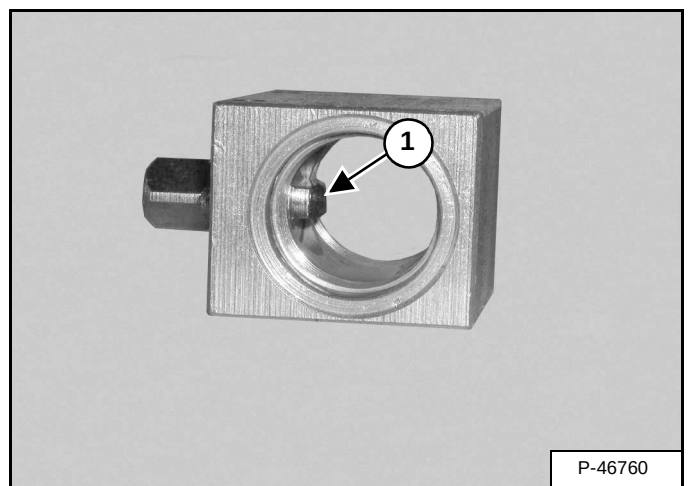


Assembly: Align the slot (Item 1) [Figure 20-220-13] with the notch (Item 1) [Figure 20-220-14] in the shaft.

TOW VALVE (CONT'D)


Disassembly And Assembly (Cont'd)

Figure 20-220-15

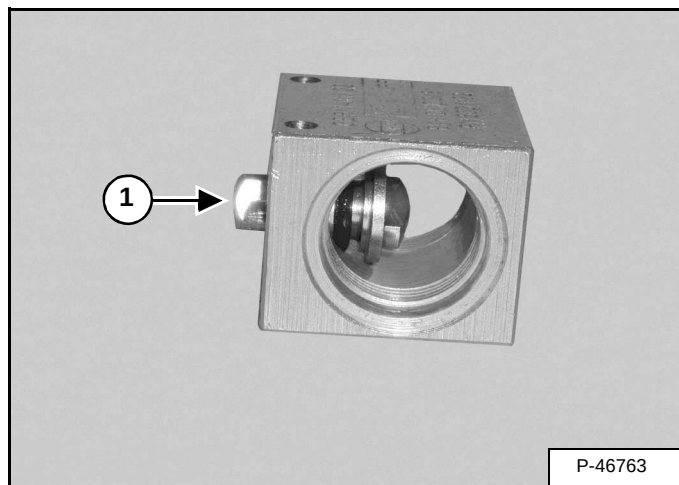


Remove the shaft (Item 1) [Figure 20-220-15] by pressing the shaft into the housing.

Figure 20-220-16

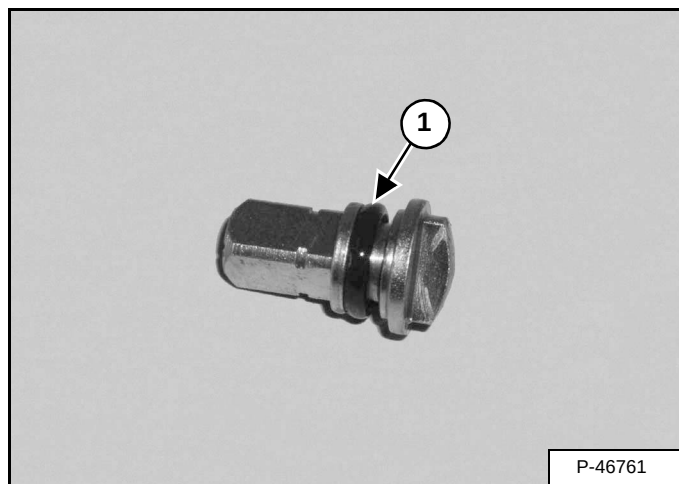

Remove the O-ring (Item 1) [Figure 20-220-16] from the shaft.

Figure 20-220-17

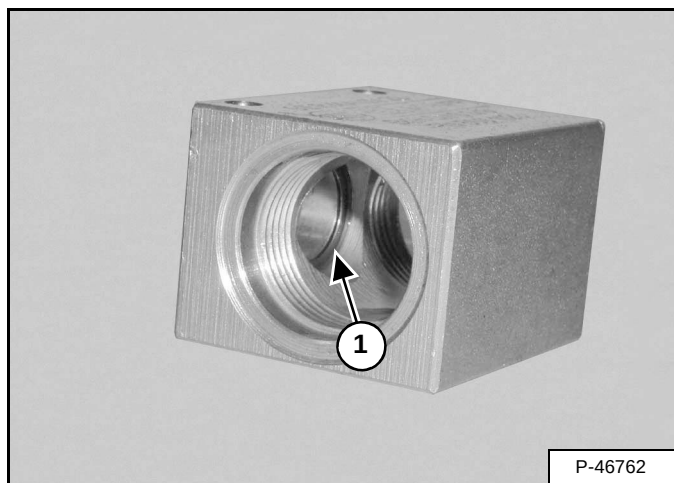

Remove the seal (Item 1) [Figure 20-220-17] from the housing.

Clean all parts in solvent and dry with compressed air.

Inspect all parts for wear or damage. Replace any worn or damaged parts.

Always install new seals and O-rings. Lubricate all seals and O-rings with clean hydraulic fluid before installation.



Bobcat®

HYDROSTATIC SYSTEM

HYDROSTATIC DRIVE MOTOR	30-30-1
Assembly	30-30-22
Disassembly	30-30-5
Inspection	30-30-20
Parts Identification	30-30-2
Removal And Installation	30-30-1
HYDROSTATIC PUMP	30-40-1
Assembly	30-40-25
CHARGE PRESSURE CHECKING PROCEDURE	30-40-40
CHARGE PRESSURE ADJUSTING PROCEDURE	30-40-40
Disassembly	30-40-9
Inspection	30-40-21
Parts Identification	30-40-4
Removal And Installation	30-40-1
HYDROSTATIC SYSTEM INFORMATION	30-10-1
Replenishing Valve Function	30-10-2
Troubleshooting Chart	30-10-1
OIL COOLER	30-20-1
Description	30-20-1

HYDROSTATIC SYSTEM



Bobcat®

HYDROSTATIC SYSTEM INFORMATION

Troubleshooting Chart

The following troubleshooting chart is provided for assistance in locating and correcting problems which are most common. Many of the recommended procedures must be done by authorized Bobcat Service Personnel only.



WARNING

Check for correct function after adjustments, repairs or service. Failure to make correct repairs or adjustments can cause injury or death.

W-2004-1285


PROBLEM	CAUSE
The Telescopic Handler does not move	1, 2
The Telescopic Handler does not move in a straight line.	3, 4
The hydrostatic system is overheating.	5, 6, 7, 8
Warning light comes ON.	5, 8, 9, 10, 11

KEY TO CORRECT THE CAUSE
1. The hydrostatic pump has damage.
2. The hydrostatic motor has damage.
3. The tires do not have the correct tire pressure.
4. The tires are not the same size.
5. The hydrostatic fluid is not at the correct level.
6. The oil cooler has a restriction.
7. The temperature sending switch is not operating correctly.
8. The Telescopic Handler is not being operated at the correct RPM.
9. The sender is defective.
10. Pump is defective or worn hydrostatics
11. Hydraulic filter is plugged.

HYDROSTATIC SYSTEM INFORMATION (CONT'D)

Replenishing Valve Function

Figure 30-10-1

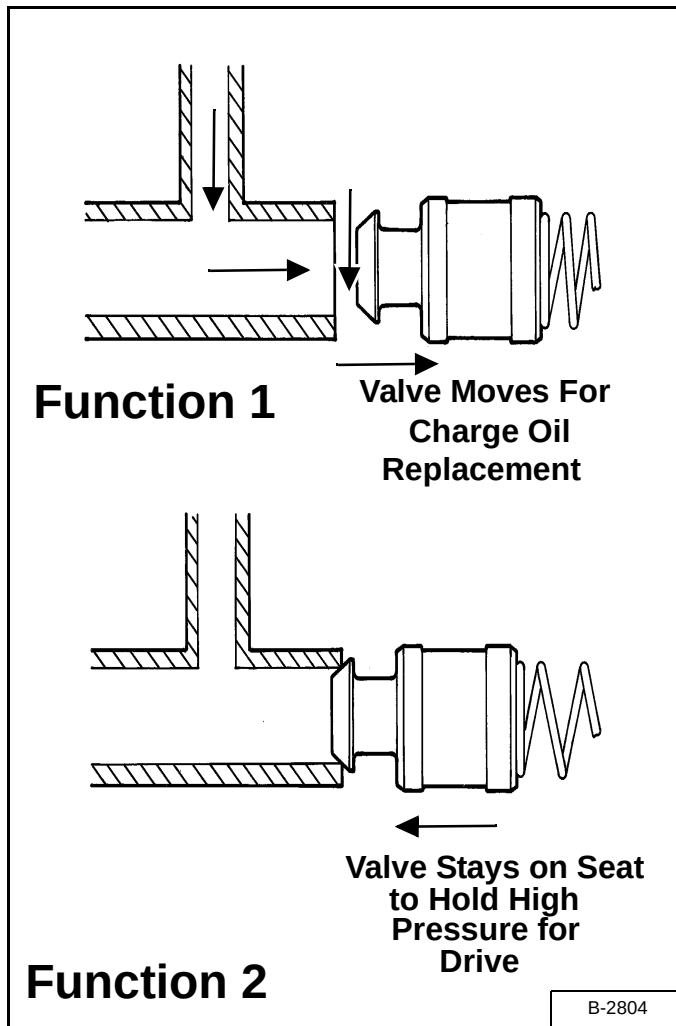

IMPORTANT

When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.

I-2003-0888

The functions of the replenishing valves are:

1. To give replacement fluid to the low pressure side of the hydrostatic circuit. Replacement fluid is needed because of normal internal leakage and the controlled flow to the oil cooler for cooling; Function 1 [Figure 30-10-1].
2. To keep high pressure fluid out of the low pressure side of the hydrostatic circuitry; Function 2 [Figure 30-10-1].

OIL COOLER

Description

The oil cooler is a combined radiator/oil cooler. See "Removal And Installation" on page 70-50-1 for Radiator/Oil Cooler Removal And Installation.



Bobcat®


HYDROSTATIC DRIVE MOTOR

Removal And Installation

Remove the front axle (For S/N 362911001 - 362912000: See "Removal" on page 40-31-1) (For S/N 362811001 - 362812000: See "Removal" on page 40-30-1)

Remove the front axle (For S/N 362812001 and Above, S/N 362912001 and Above: See "Removal" on page 40-33-1)

Figure 30-30-1

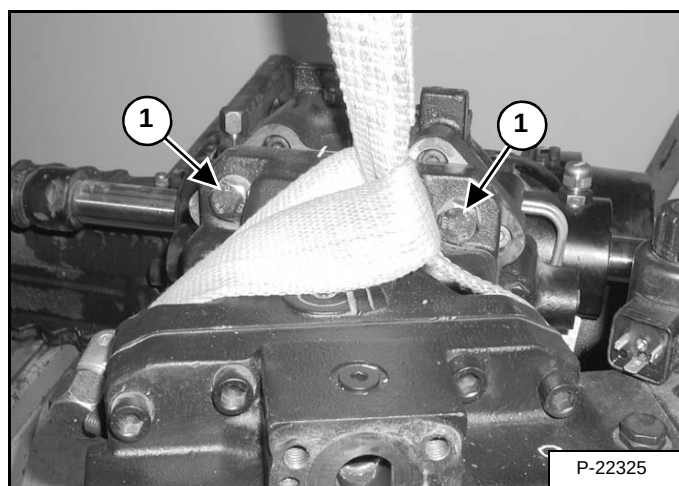

Install a chain hoist and lifting strap to lift and support the drive motor [Figure 30-30-1].

Remove the four mounting bolts (Item 1) [Figure 30-30-1] from the drive motor.


Installation: Tighten the mounting bolts to 140-155 ft.-lbs. (190-210 Nm) torque.

Remove the hydrostatic drive motor from the axle housing.

HYDROSTATIC DRIVE MOTOR (CONT'D)

Parts Identification

1. Bolt
2. End Cap
3. Plug
4. O-ring
5. Seal
6. Servo Piston
7. Feed Back Lug
8. Nut
9. Adjuster
10. Rod
11. Set Screw
12. Spring seat
13. Spring
14. Spool
15. Orifice
16. Housing
17. Solenoid

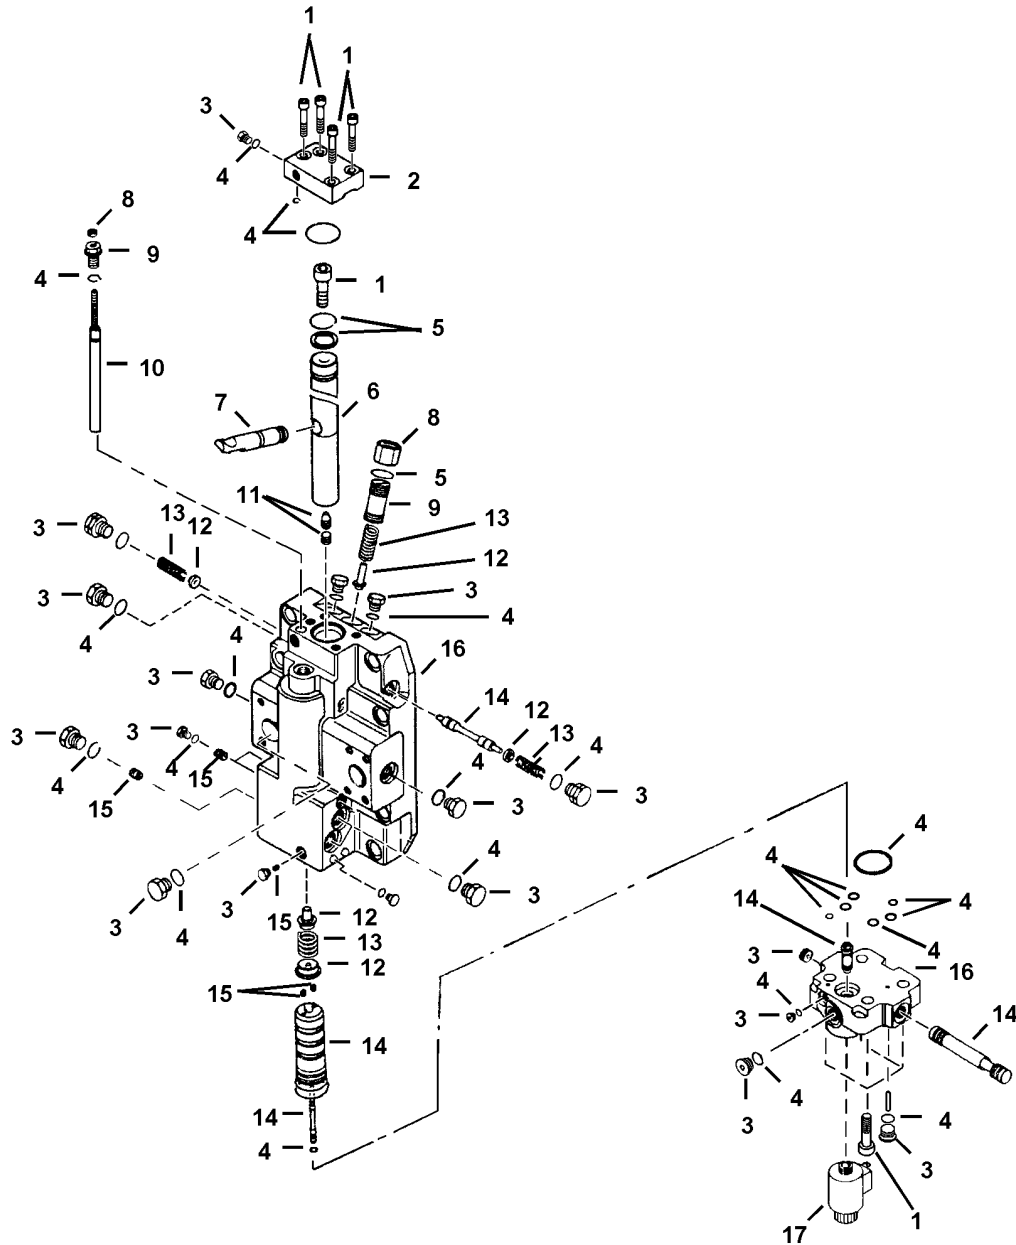


B-18528

HYDROSTATIC DRIVE MOTOR (CONT'D)

Parts Identification (Cont'd)


1. Valve Segment
2. Plate
3. Pins
4. Bearing
5. Cylinder
6. Pin
7. Synchronizing Shaft
8. Rollers
9. Bolt
10. Nut
11. Cap
12. Plug
13. O-Ring
14. Ring
15. Piston
16. Spring Seat
17. Spring
18. Shaft
19. Bearing
20. Spacer
21. Nut
22. O-Ring
23. Seal
24. Housing

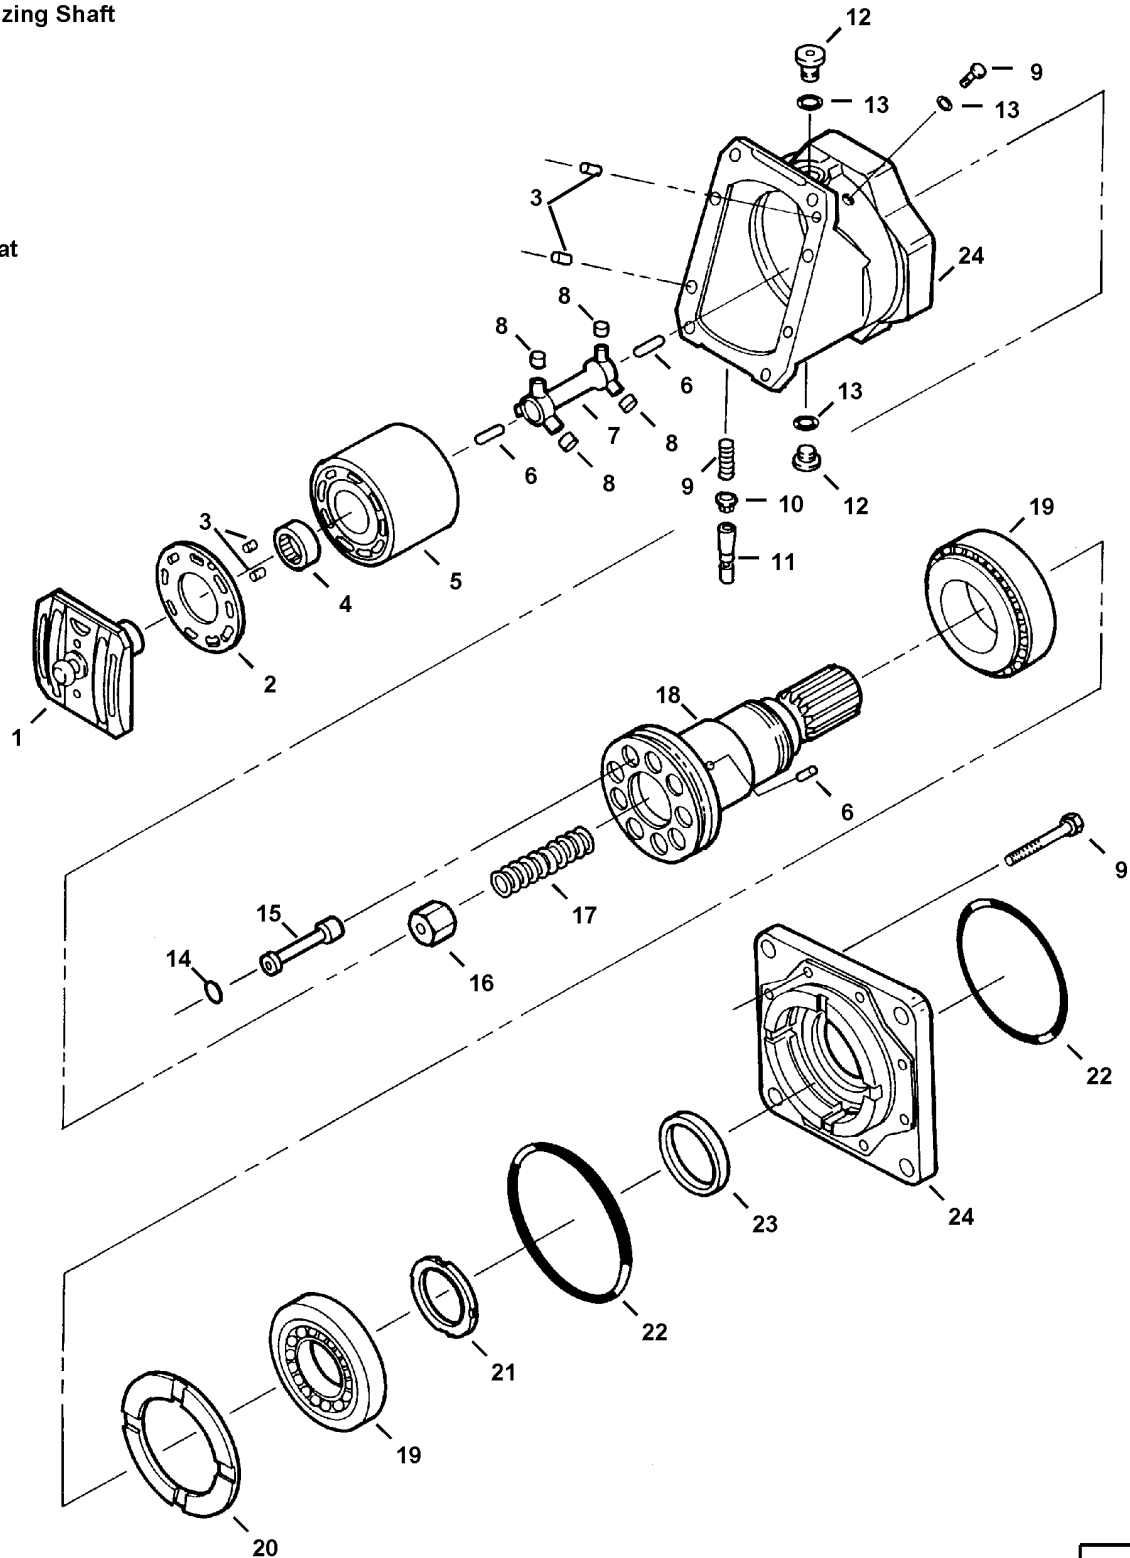

B-15937

HYDROSTATIC DRIVE MOTOR (CONT'D)

Parts Identification (Cont'd)

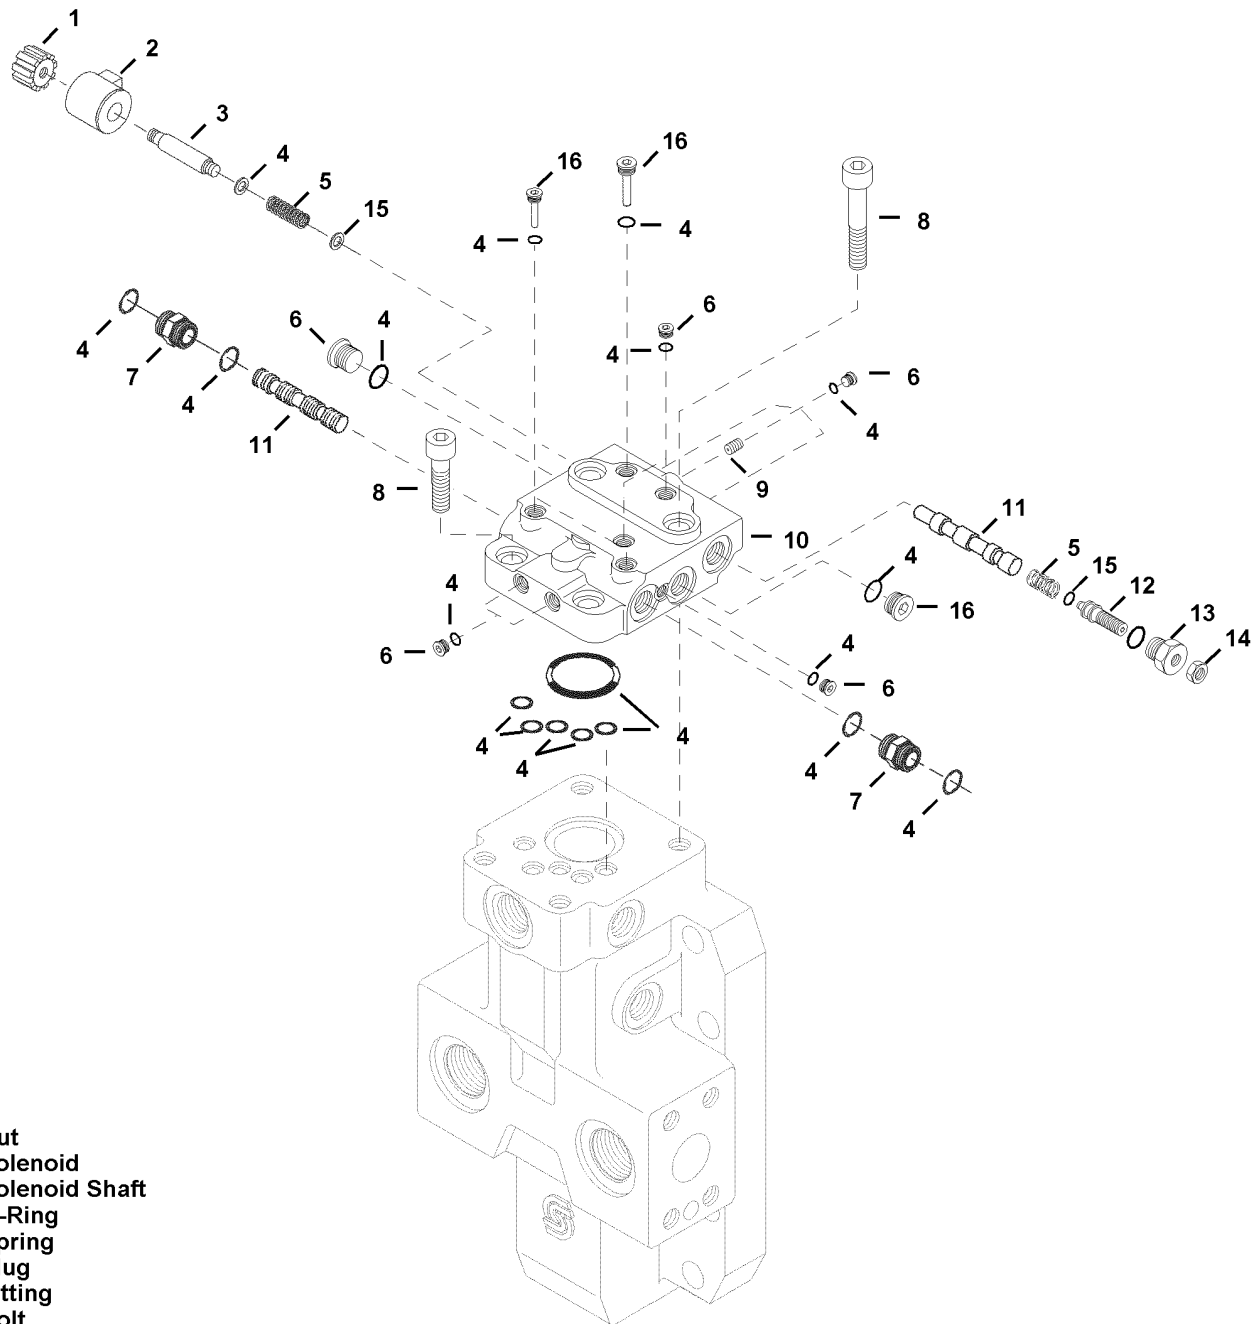

1. Nut
2. Solenoid
3. Solenoid Shaft
4. O-Ring
5. Spring
6. Plug
7. Fitting
8. Bolt
9. Orifice
10. Housing
11. Spool
12. Adjustment Spool
13. End Nut
14. Nut
15. Spring Seat
16. Limiter

B-15939

HYDROSTATIC DRIVE MOTOR (CONT'D)


Disassembly

IMPORTANT

When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.


I-2003-0888

Figure 30-30-2

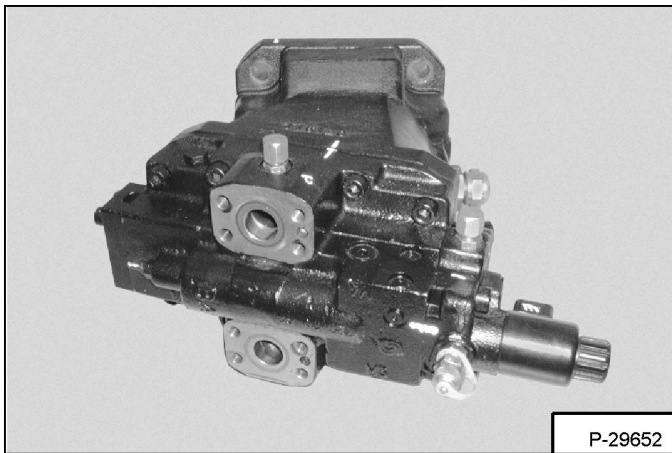


Place the hydrostatic drive motor on a work surface, mark the sections for correct assembly [Figure 30-30-2].

Figure 30-30-3

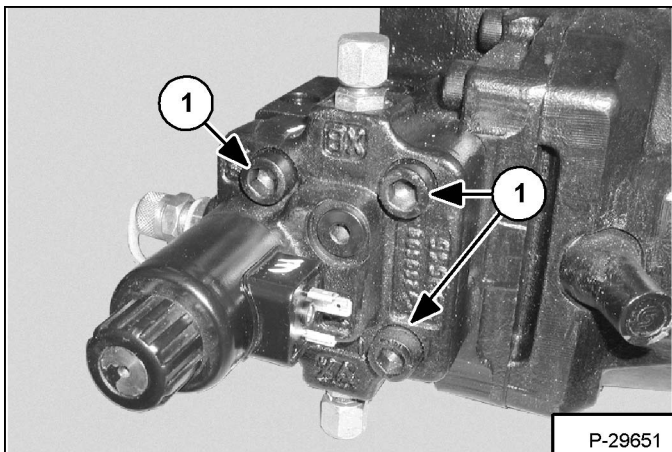


Remove the four bolts (Item 1) [Figure 30-30-3] and remove the solenoid housing.

Figure 30-30-4

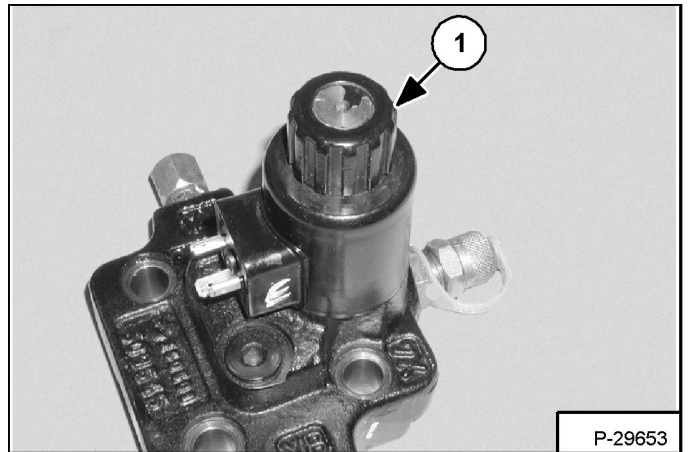

Remove the solenoid nut (Item 1) [Figure 30-30-4].

Figure 30-30-5

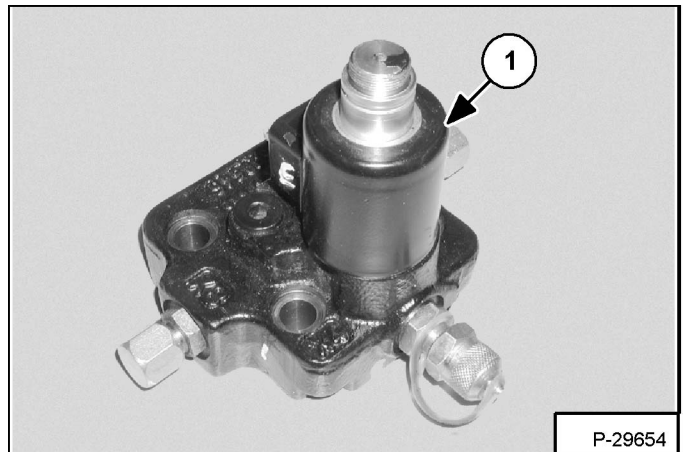


Remove the solenoid (Item 1) [Figure 30-30-5] from the shaft.

HYDROSTATIC DRIVE MOTOR (CONT'D)


Disassembly (Cont'd)

Figure 30-30-6

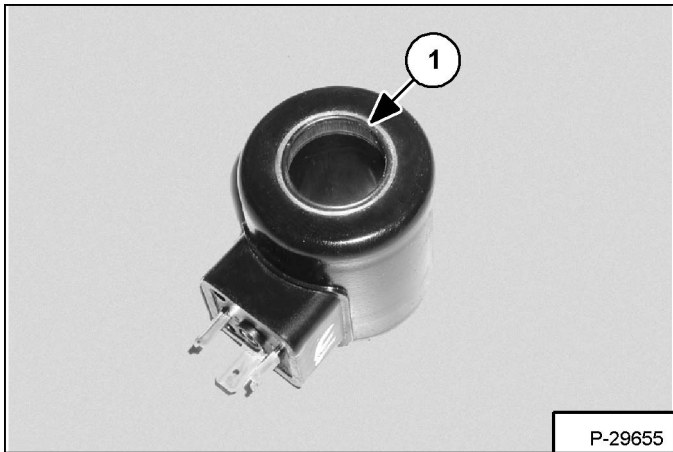


Remove and discard the O-ring (Item 1) [Figure 30-30-6] from the solenoid.

Figure 30-30-7

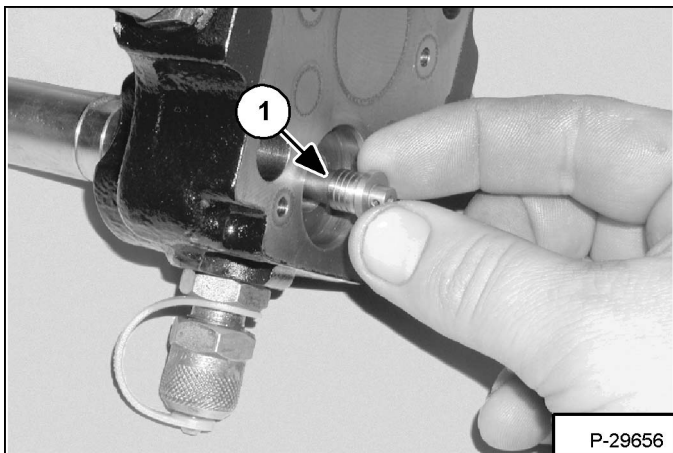


Remove the spool (Item 1) [Figure 30-30-7] from the housing.

Figure 30-30-8

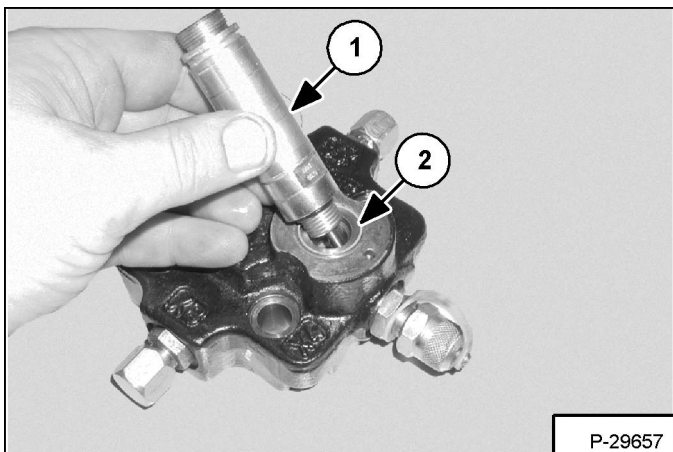

Remove the solenoid shaft (Item 1) and O-ring (Item 2) [Figure 30-30-8] from the housing.

Figure 30-30-9

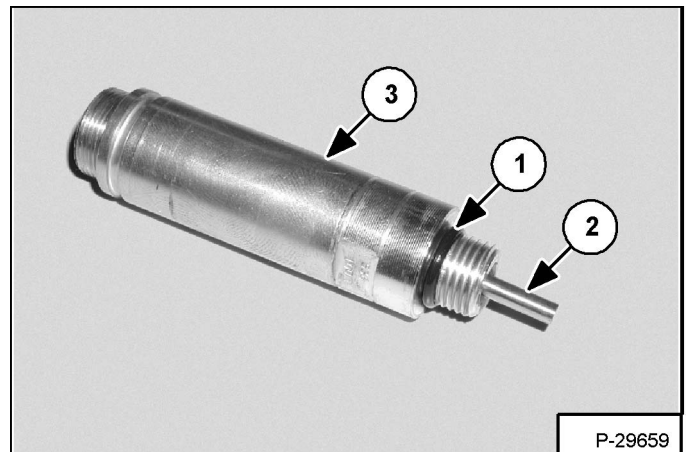


Remove the O-ring (Item 1) and pin (Item 2) from the solenoid shaft (Item 3) [Figure 30-30-9].

HYDROSTATIC DRIVE MOTOR (CONT'D)


Disassembly (Cont'd)

Figure 30-30-10

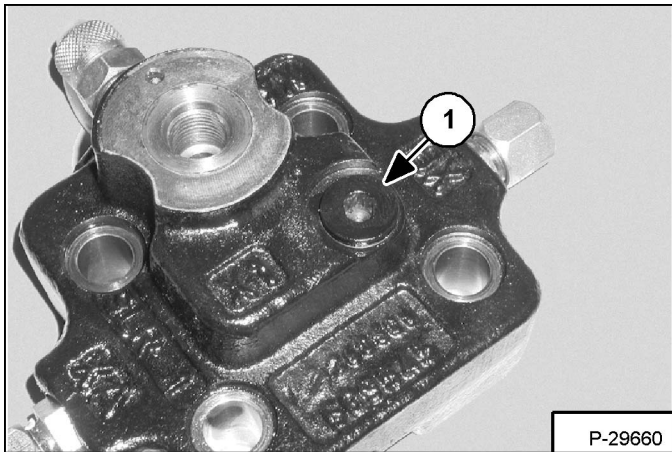


Remove the plug (Item 1) [Figure 30-30-10] from the housing.

Figure 30-30-11

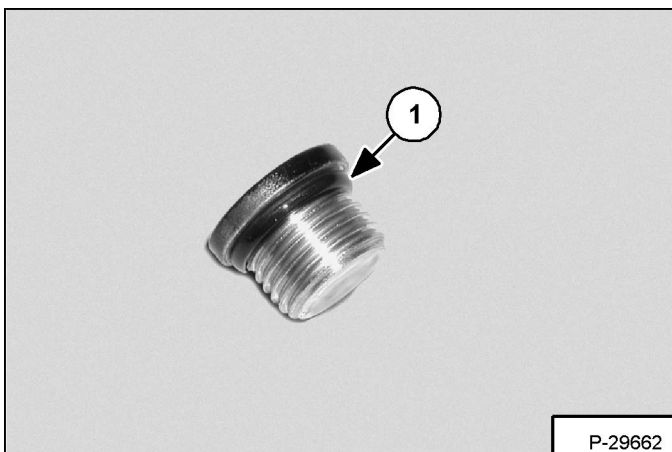


Remove and discard the O-ring (Item 1) [Figure 30-30-11] from the plug.

Figure 30-30-12

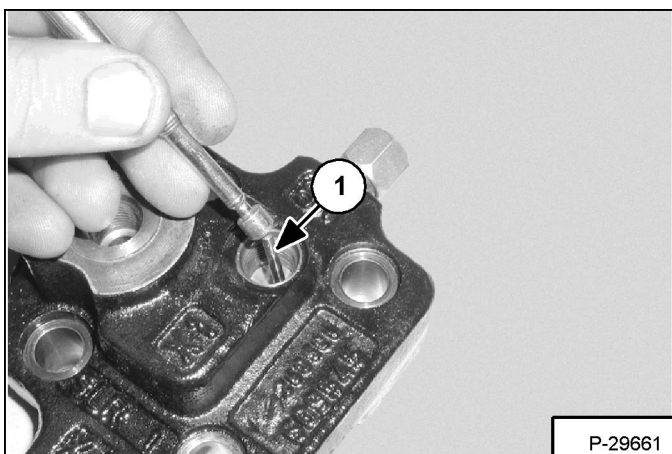

Remove the pin (Item 1) [Figure 30-30-12] from the housing.

Figure 30-30-13

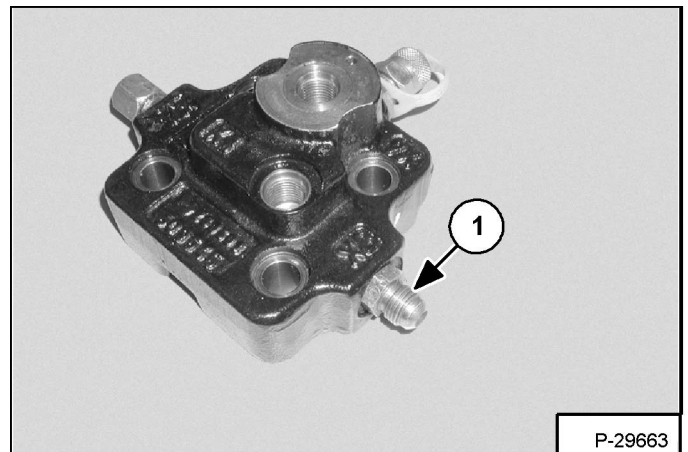


Remove the fitting (Item 1) [Figure 30-30-13].

HYDROSTATIC DRIVE MOTOR (CONT'D)


Disassembly (Cont'd)

Figure 30-30-14

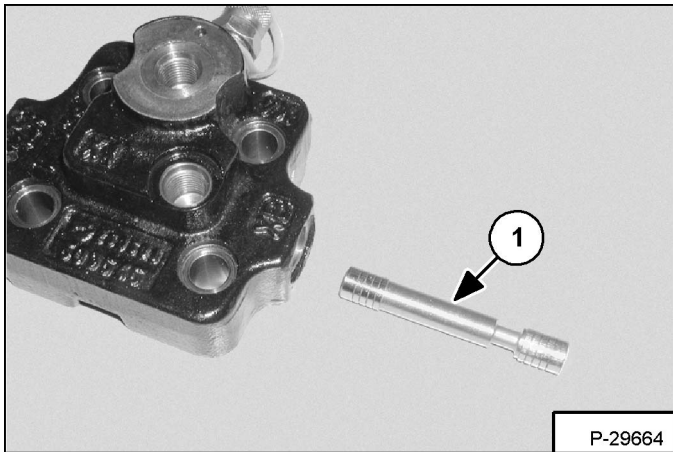


Remove the spool (Item 1) [Figure 30-30-14] from the housing.

Figure 30-30-15

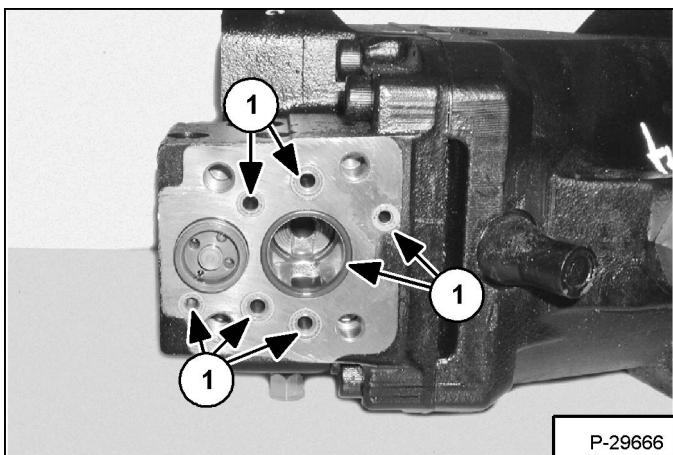


Remove and discard the seven O-rings (Item 1) [Figure 30-30-15] from the housing.

Figure 30-30-16

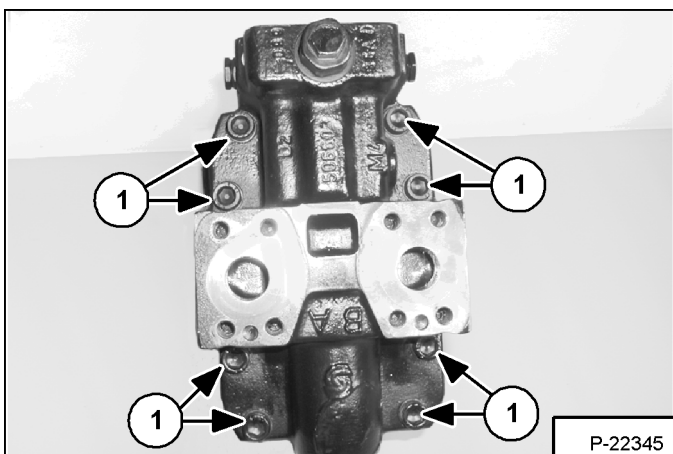

Remove the eight bolts (Item 1) [Figure 30-30-16] from the end cap.

Figure 30-30-17

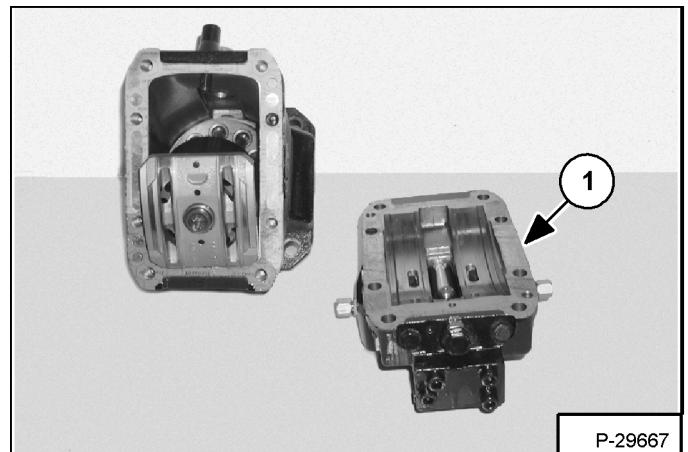


Lift and remove the end cap (Item 1) [Figure 30-30-17] from the housing.

HYDROSTATIC DRIVE MOTOR (CONT'D)


Disassembly (Cont'd)

Figure 30-30-18

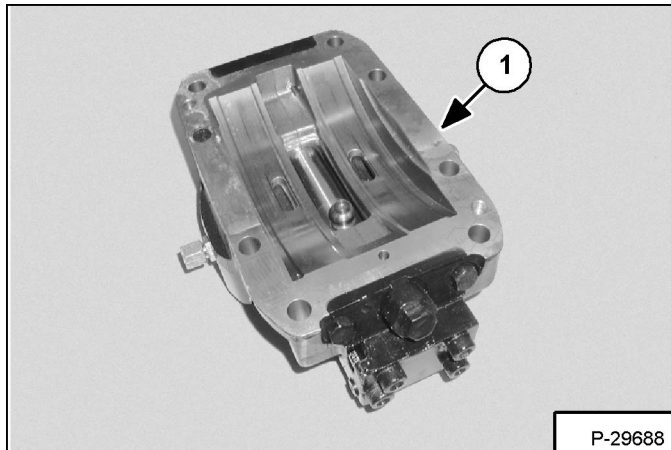


Remove the gasket (Item 1) [Figure 30-30-18] from the end cap.

Figure 30-30-19

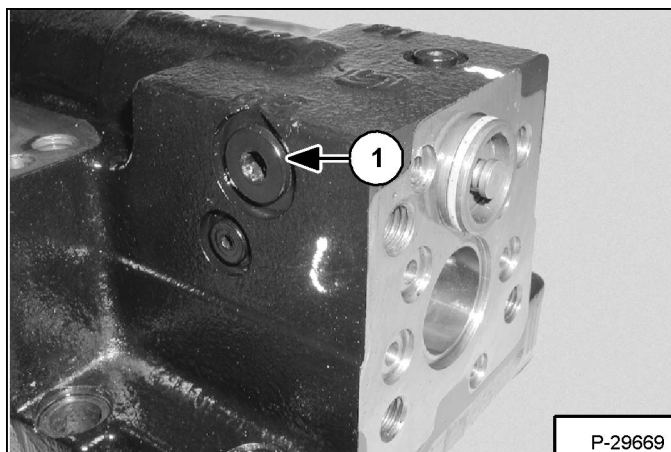

Remove the plug (Item 1) [Figure 30-30-19].


Figure 30-30-20

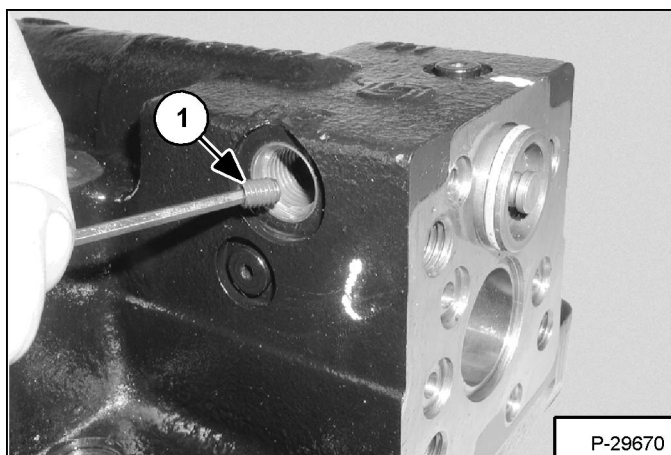

Remove the orifice (Item 1) [Figure 30-30-20].

NOTE: Mark the orifice location for correct assembly.

Figure 30-30-21

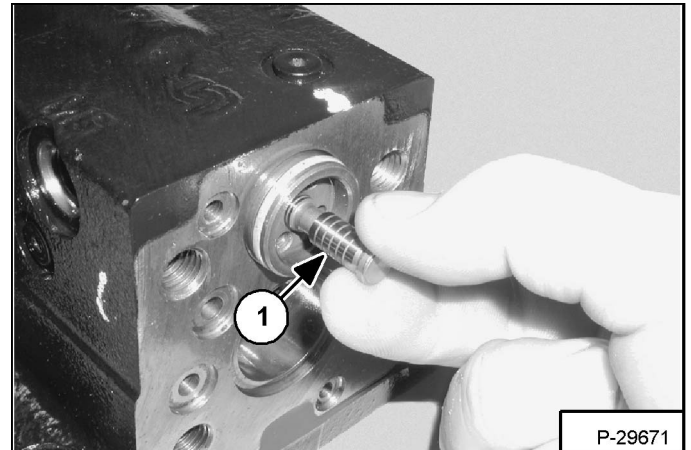


Remove the spool (Item 1) [Figure 30-30-21].

HYDROSTATIC DRIVE MOTOR (CONT'D)


Disassembly (Cont'd)

Figure 30-30-22

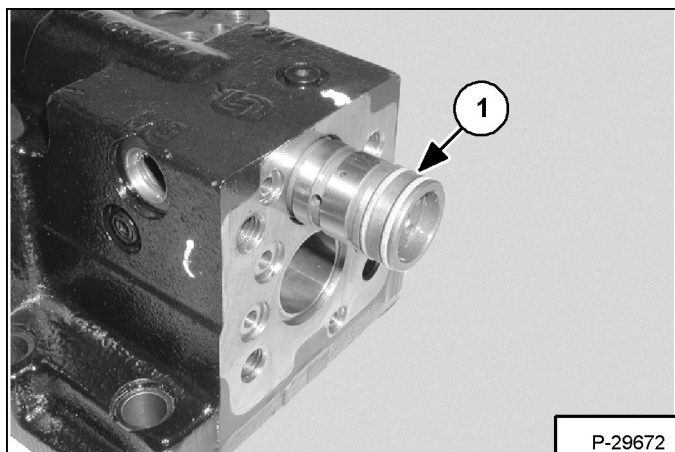


Remove the servo control spool (Item 1) [Figure 30-30-22] from the housing.

Figure 30-30-23

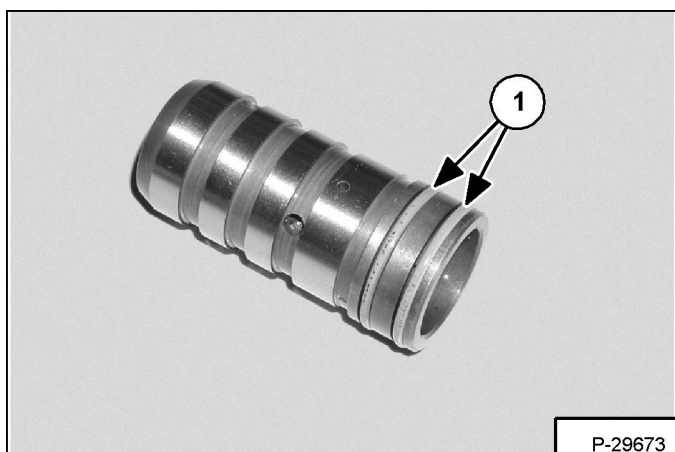

Remove the two O-rings (Item 1) [Figure 30-30-23] from the servo control spool.


Figure 30-30-24

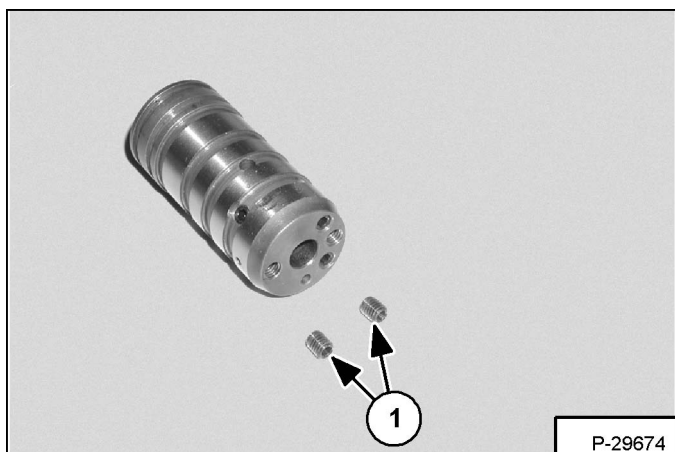

Remove the two orifices (Item 1) [Figure 30-30-24] from the spool.

NOTE: Mark the orifice location for correct assembly.

Figure 30-30-25

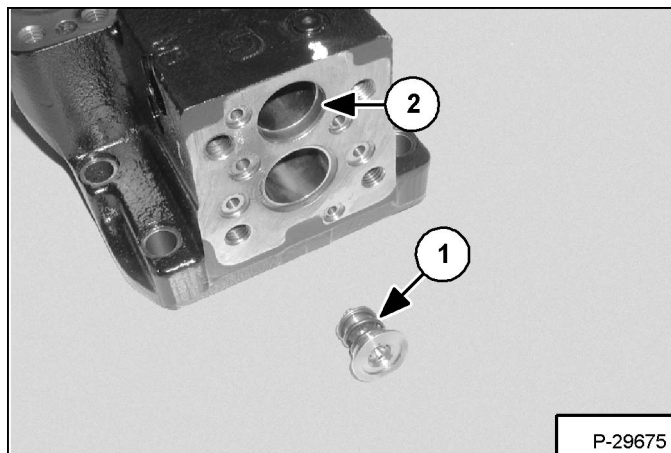


Remove the two spring seats and spring (Item 1) from the servo pool hole (Item 2) [Figure 30-30-25].

HYDROSTATIC DRIVE MOTOR (CONT'D)

Disassembly (Cont'd)


Figure 30-30-26

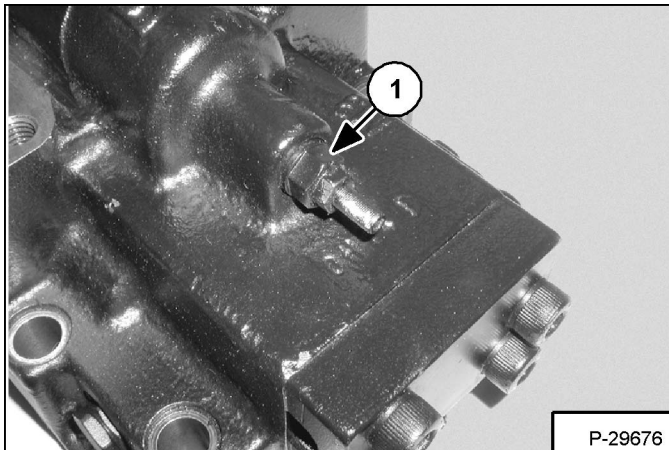

Loosen the large nut (Item 1) [Figure 30-30-26] on the adjustment screw.


NOTE: Do not change the adjustment.

Figure 30-30-27

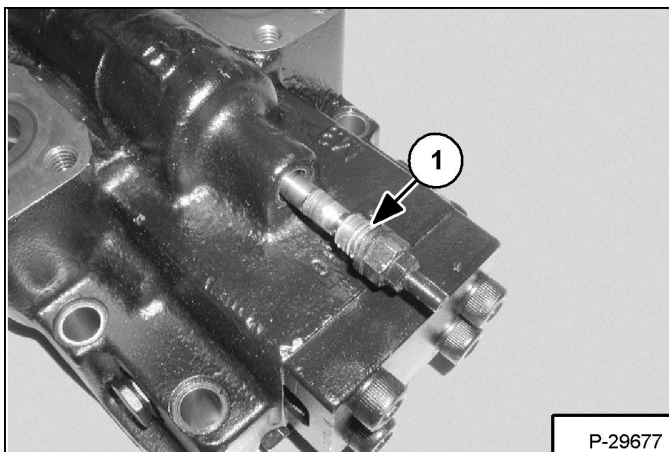


Remove the adjustment screw (Item 1) [Figure 30-30-27] from the housing.

Figure 30-30-28

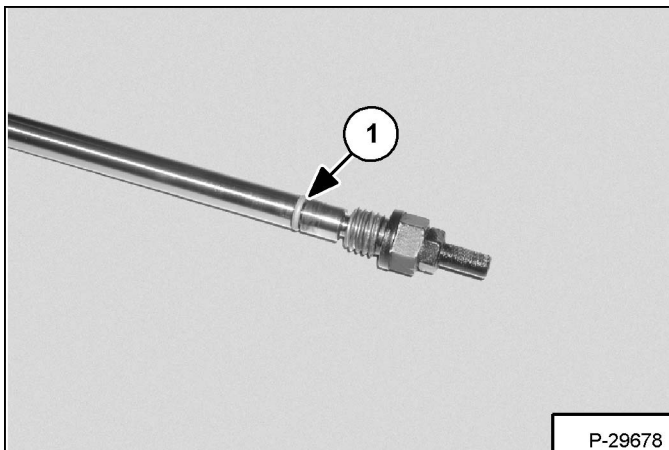

Remove and discard the O-ring (Item 1) [Figure 30-30-28].

Figure 30-30-29

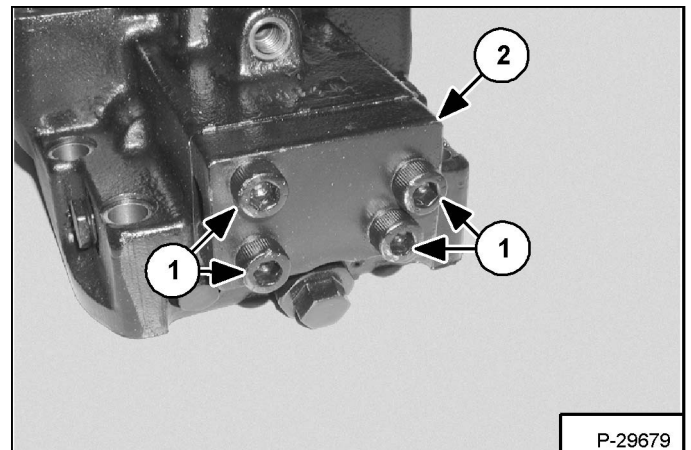


Remove the four bolts (Item 1) and remove the end cap (Item 2) [Figure 30-30-29].

HYDROSTATIC DRIVE MOTOR (CONT'D)


Disassembly (Cont'd)

Figure 30-30-30

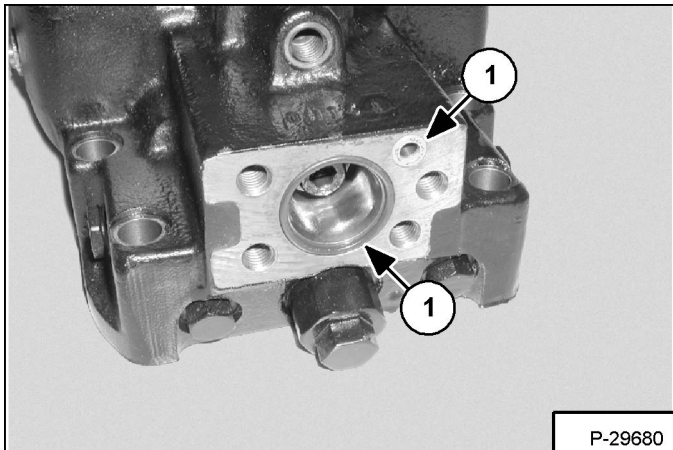


Remove the two O-rings (Item 1) [Figure 30-30-30].

Figure 30-30-31

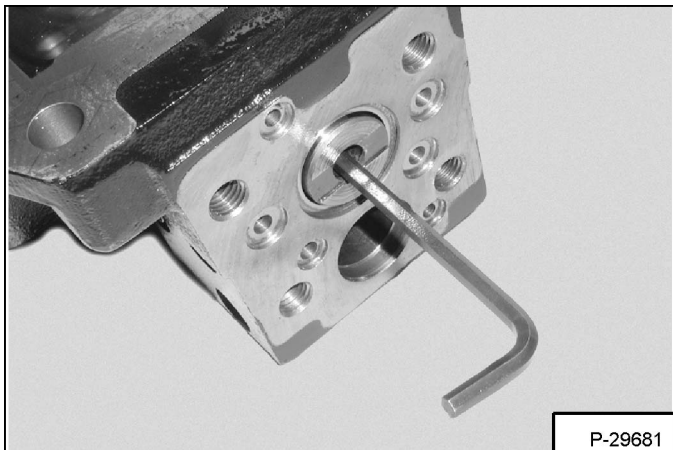


Remove the outer set screw from the servo piston [Figure 30-30-31].

Figure 30-30-32

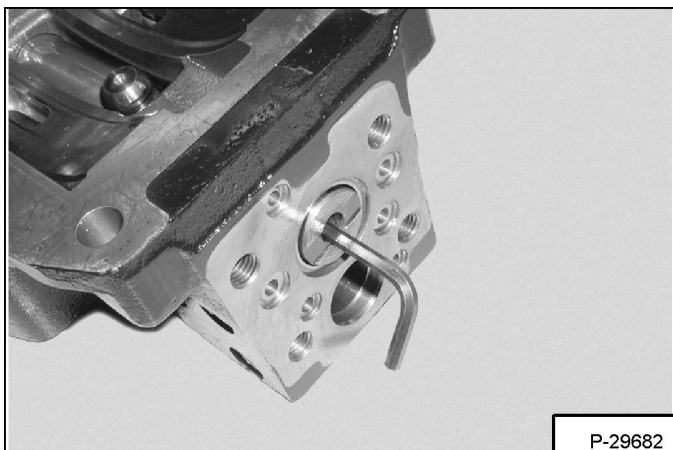

Remove the inner set screw from the servo piston [Figure 30-30-32].

Figure 30-30-33

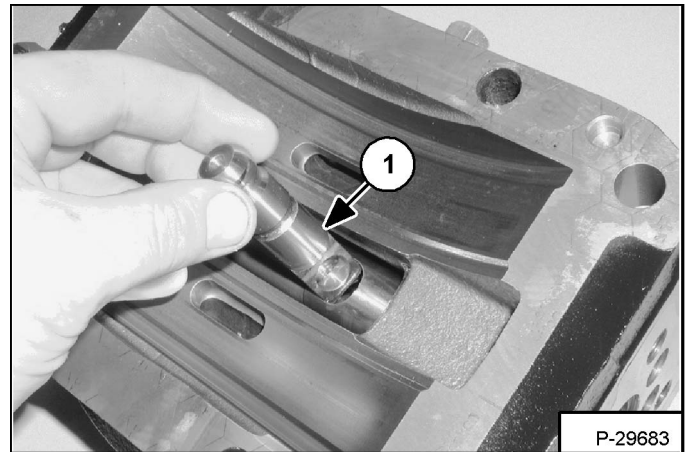


Remove the feedback lug (Item 1) [Figure 30-30-33] from the servo piston.

HYDROSTATIC DRIVE MOTOR (CONT'D)


Disassembly (Cont'd)

Figure 30-30-34

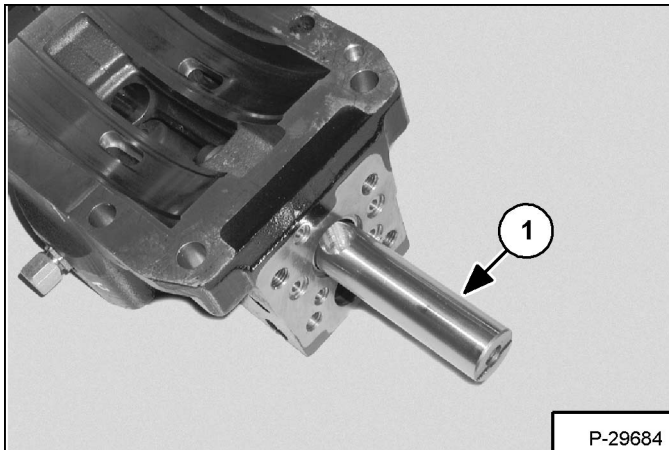


Remove the servo piston (Item 1) [Figure 30-30-34].

Figure 30-30-35

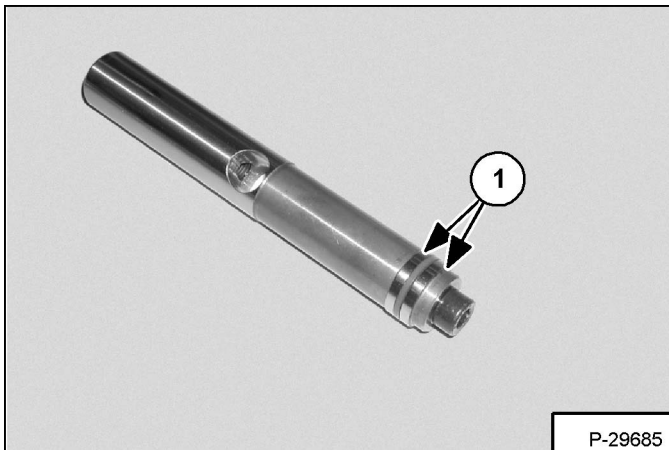


Remove the two seals (Item 1) [Figure 30-30-35] from the servo piston.

Figure 30-30-36

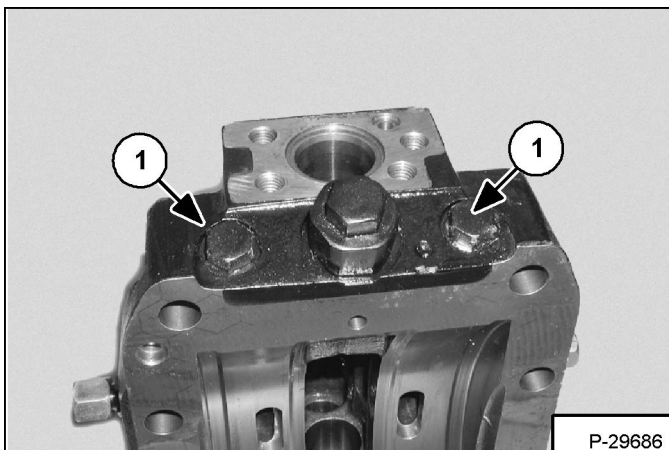

Remove the two plugs (Item 1) [Figure 30-30-36] from the housing.

Figure 30-30-37

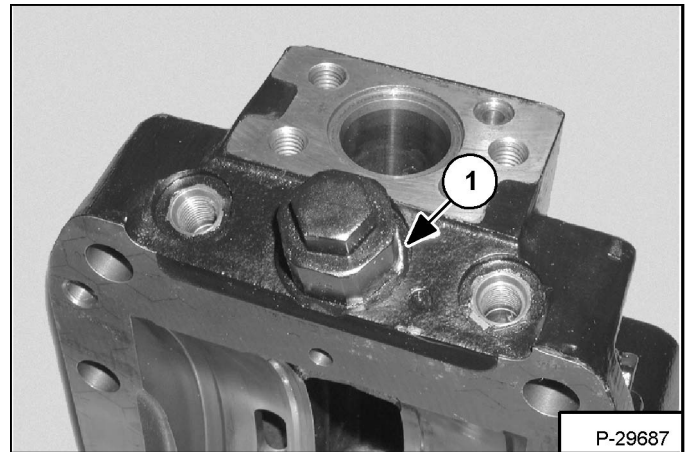


Remove the relief valve (Item 1) [Figure 30-30-37] from the housing by loosening the larger nut.

HYDROSTATIC DRIVE MOTOR (CONT'D)


Disassembly (Cont'd)

Figure 30-30-38

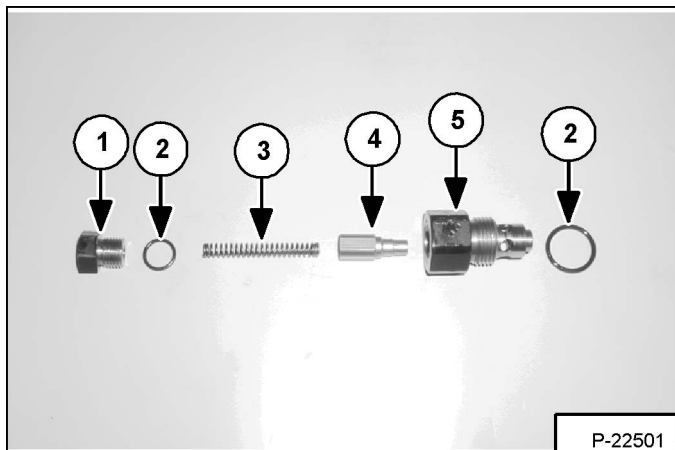


Remove the plug (Item 1), O-rings (Item 2), spring (Item 3) and poppet (Item 4) from the relief valve housing (Item 5) [Figure 30-30-38].

Figure 30-30-39

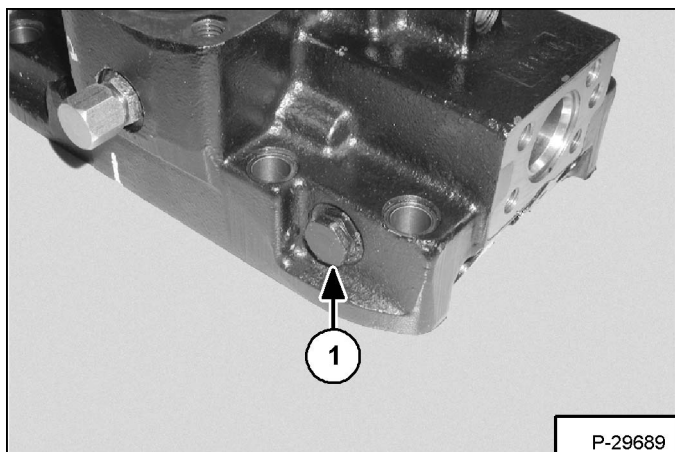


Loosen the plug (Item 1) [Figure 30-30-39].

Figure 30-30-40

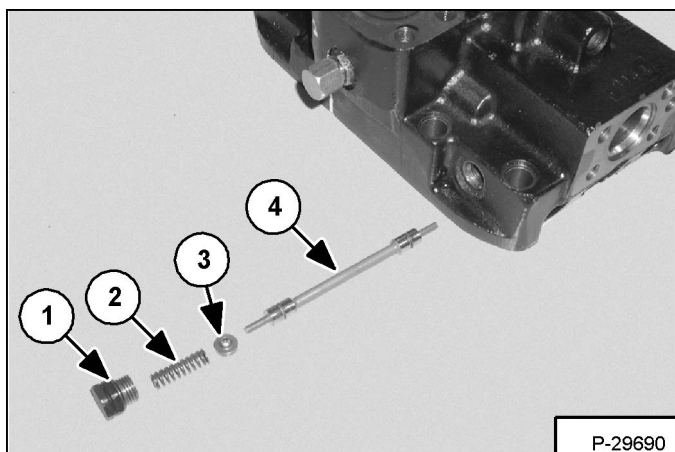

Remove the plug (Item 1), spring (Item 2), spring seat (Item 3) and spool (Item 4) [Figure 30-30-40] from the housing.

Figure 30-30-41

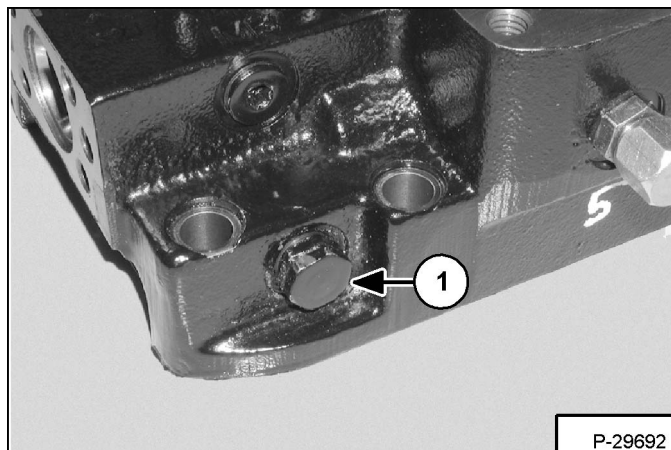


Loosen the plug (Item 1) [Figure 30-30-41].

HYDROSTATIC DRIVE MOTOR (CONT'D)


Disassembly (Cont'd)

Figure 30-30-42

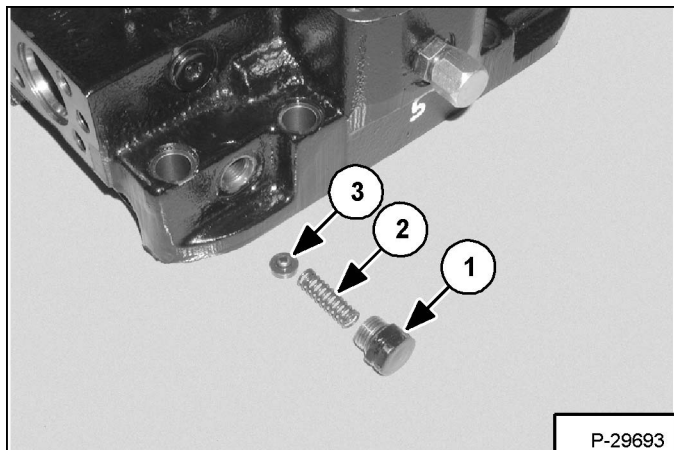


Remove the plug (Item 1), spring (Item 2) and spring seat (Item 3) [Figure 30-30-42] from the housing.

Figure 30-30-43

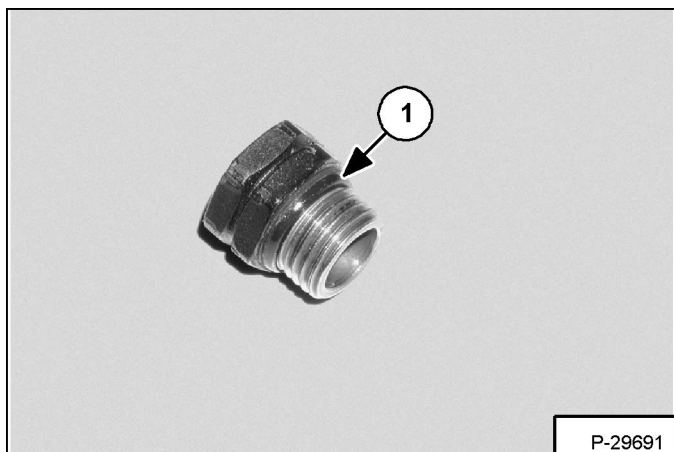


Remove and discard the O-ring (Item 1) [Figure 30-30-43] from the plug.

Figure 30-30-44

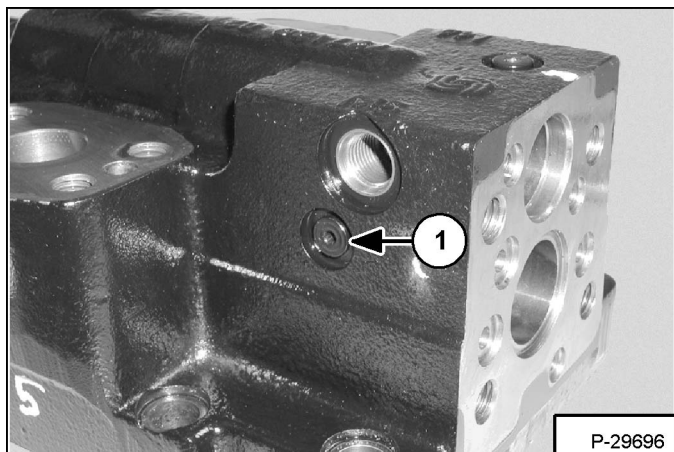

Remove the plug (Item 1) [Figure 30-30-44].

Figure 30-30-45

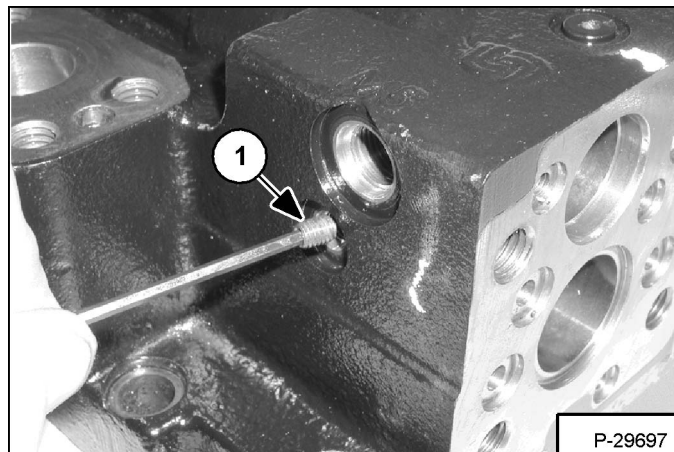


Remove the orifice (Item 1) [Figure 30-30-45].

NOTE: Mark the location of the orifice for correct assembly.

HYDROSTATIC DRIVE MOTOR (CONT'D)


Disassembly (Cont'd)

Figure 30-30-46

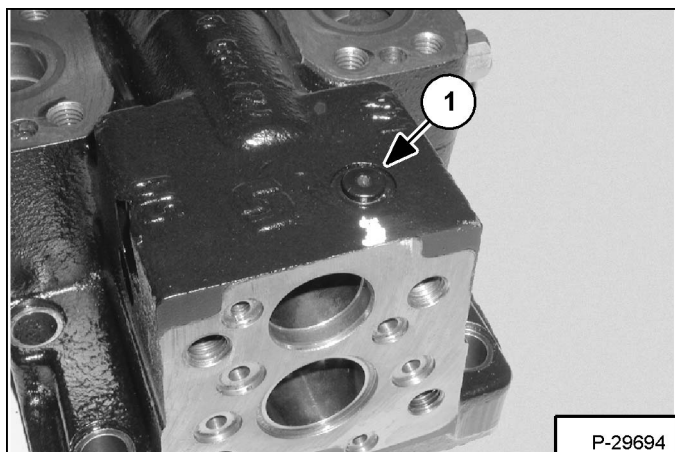

Remove the plug (Item 1) [Figure 30-30-46].


Figure 30-30-47

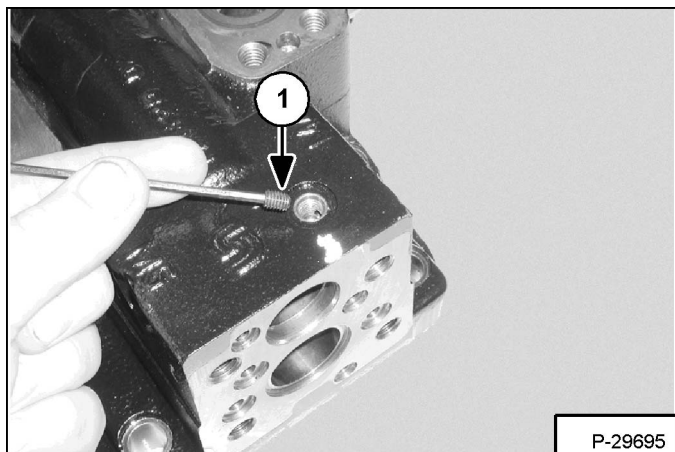

Remove the orifice (Item 1) [Figure 30-30-47].


NOTE: Mark the location of the orifice for correct assembly.

Figure 30-30-48

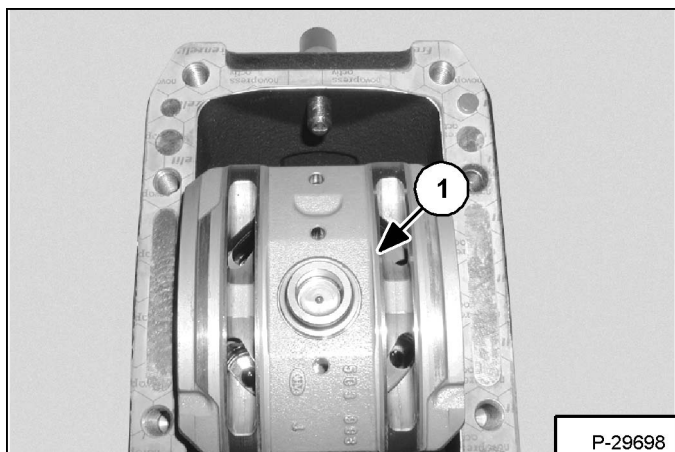

Remove the valve segment (Item 1) [Figure 30-30-48] from the cylinder.

Figure 30-30-49

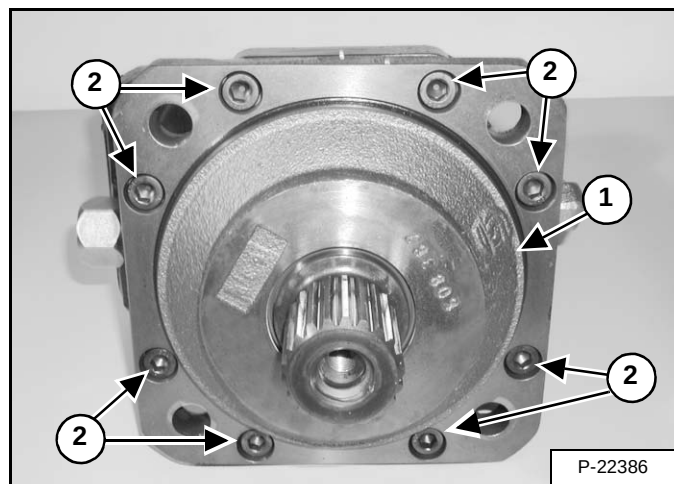


Remove and discard the O-ring (Item 1). Remove the eight mounting bolts (Item 2) [Figure 30-30-49] from the mounting plate.

HYDROSTATIC DRIVE MOTOR (CONT'D)


Disassembly (Cont'd)

Figure 30-30-50

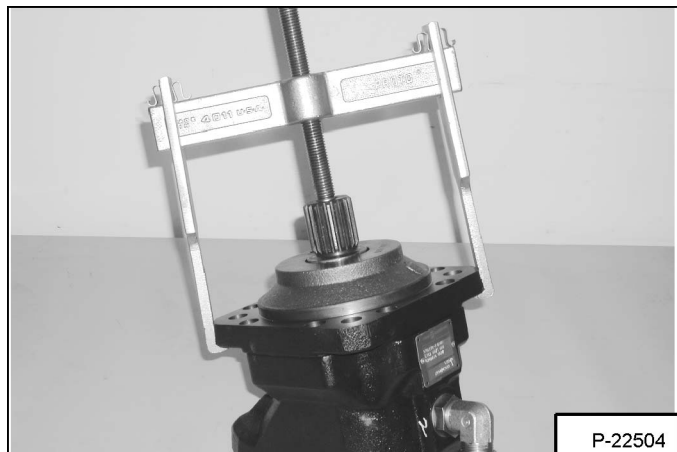


Remove the mounting plate [Figure 30-30-50] using a suitable puller.

Figure 30-30-51

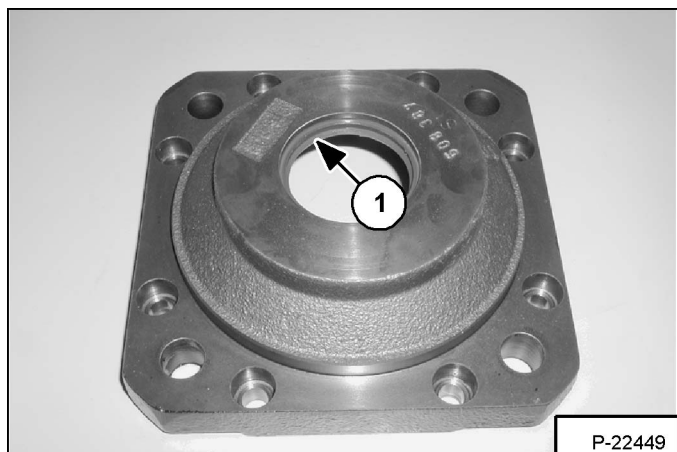

Remove and discard the seal (Item 1) [Figure 30-30-51] from the mounting plate.


Figure 30-30-52

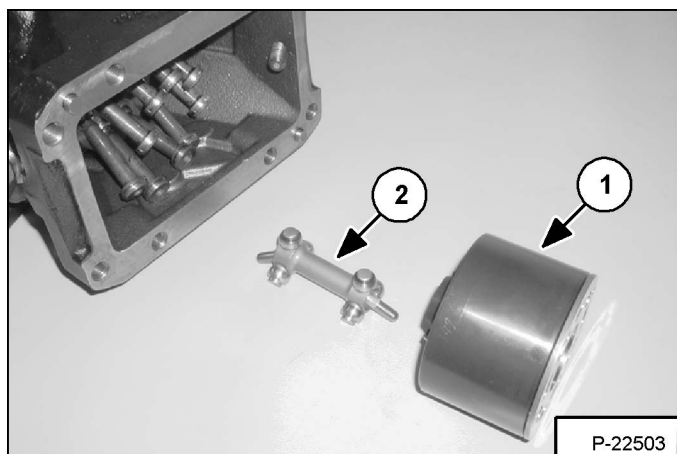

Remove the cylinder block (Item 1) and synchronizing shaft assembly (Item 2) [Figure 30-30-52] from the housing.

NOTE: It is not important that the pistons are installed in their original position.

Figure 30-30-53

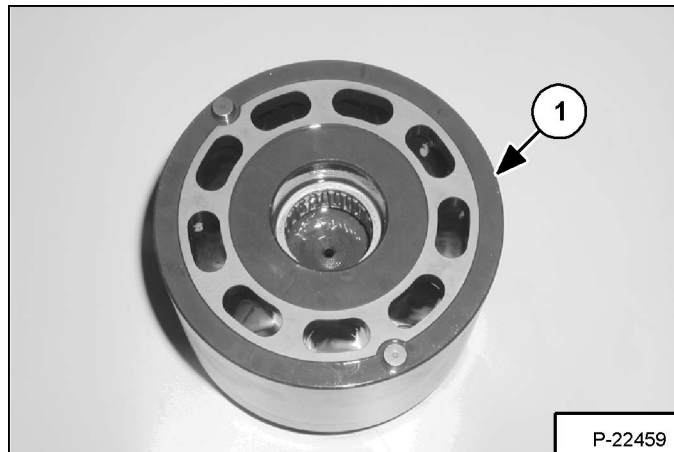


Remove the bearing plate (Item 1) [Figure 30-30-53] from the cylinder block.

HYDROSTATIC DRIVE MOTOR (CONT'D)

Disassembly (Cont'd)


Figure 30-30-54

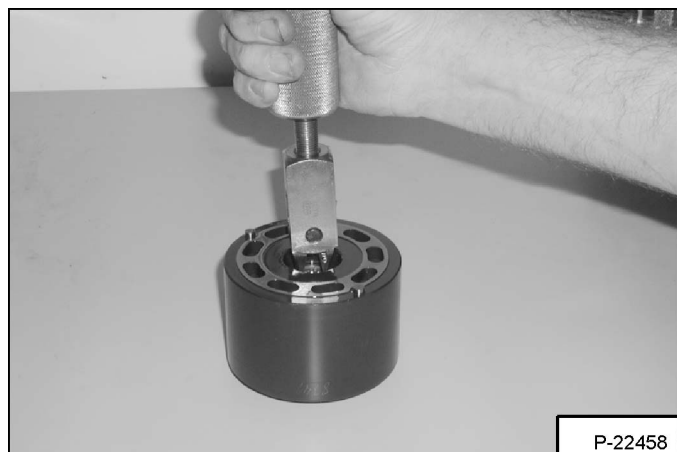

Remove the bearing from the cylinder block [Figure 30-30-54].


DO NOT damage the bearing plate surface of the cylinder block.

Figure 30-30-55

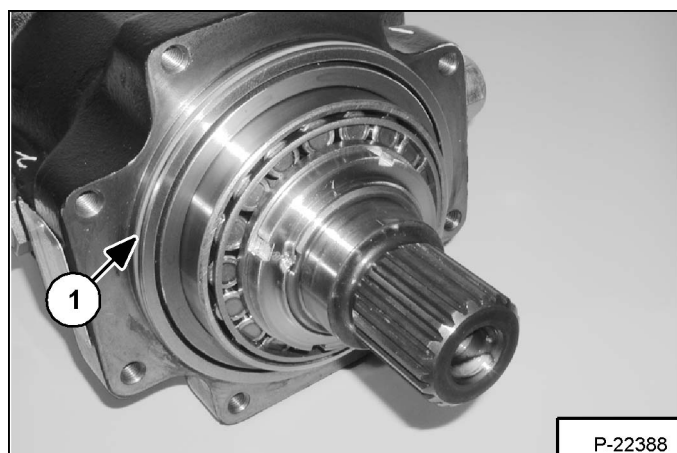

Remove the O-ring (Item 1) [Figure 30-30-55] from the housing.


Figure 30-30-56

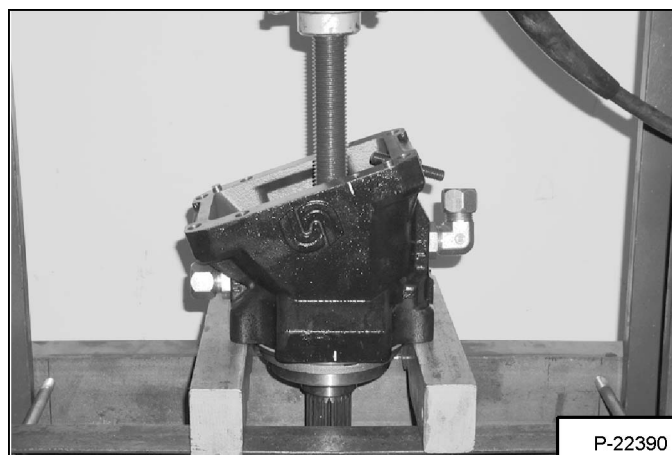

Press the piston/shaft assembly from the housing [Figure 30-30-56].

DO NOT damage the pistons.

Figure 30-30-57

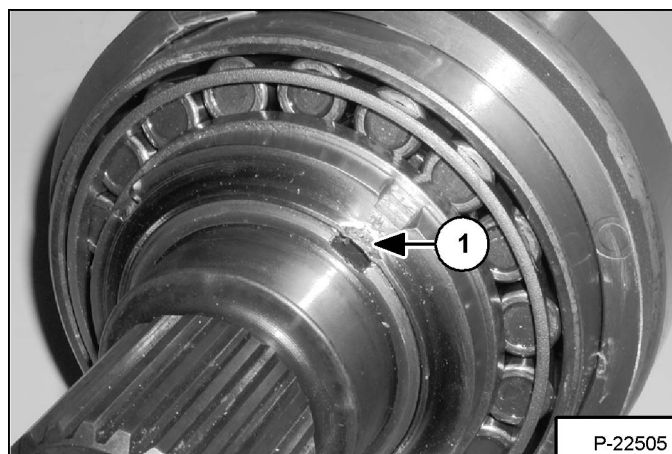


Pry up the peened notch (Item 1) [Figure 30-30-57] in the ring nut.

HYDROSTATIC DRIVE MOTOR (CONT'D)


Disassembly (Cont'd)

Figure 30-30-58

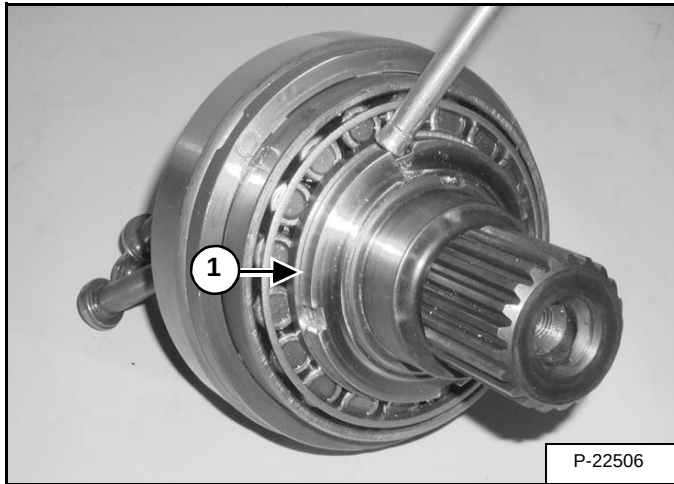


Remove the ring nut (Item 1) [Figure 30-30-58] from the shaft.

Figure 30-30-59

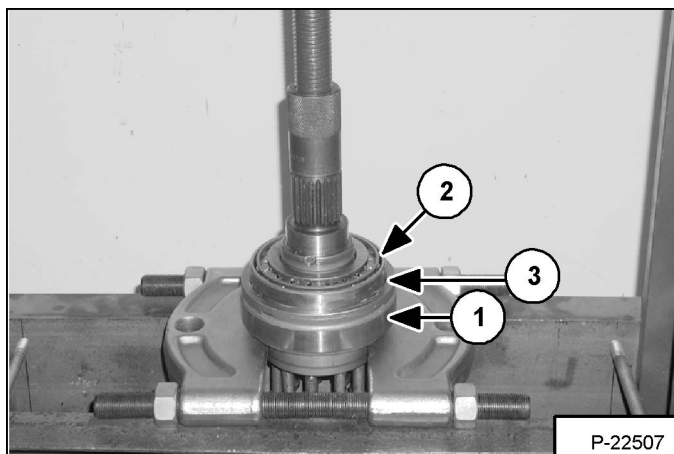


Remove the large bearing and race (Item 1), small bearing and race (Item 2) and spacer (Item 3) [Figure 30-30-59] from the shaft.

Figure 30-30-60

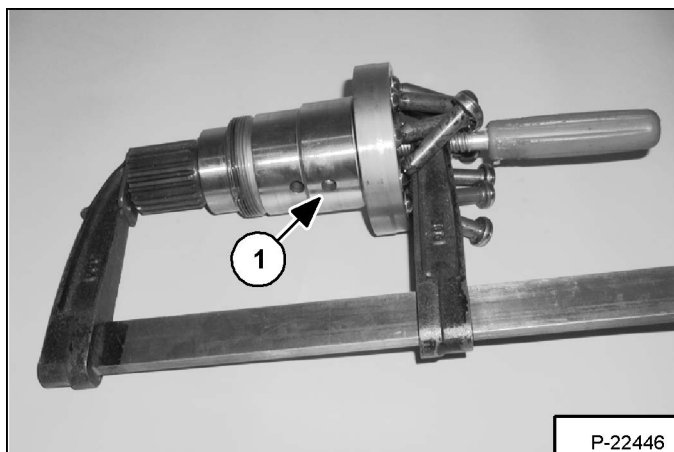

Using a clamp, compress the spring seat and spring, and drive the pin (Item 1) [Figure 30-30-60] inwards. Release the clamp.

Figure 30-30-61

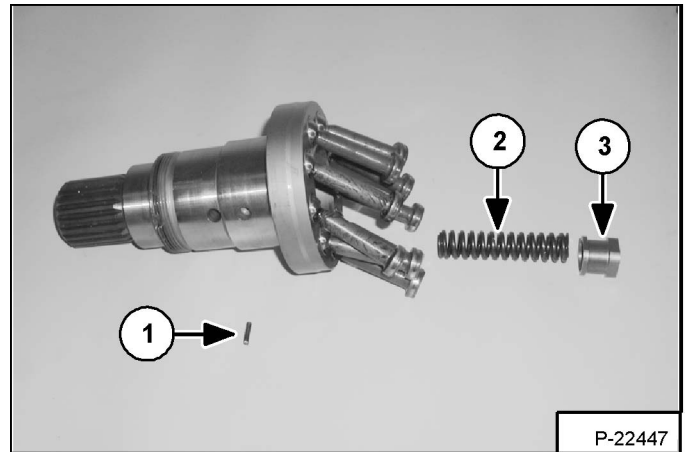


Remove the pin (Item 1), spring (Item 2) and spring seat (Item 3) [Figure 30-30-61] from the shaft assembly.

HYDROSTATIC DRIVE MOTOR (CONT'D)

Disassembly (Cont'd)

Figure 30-30-62

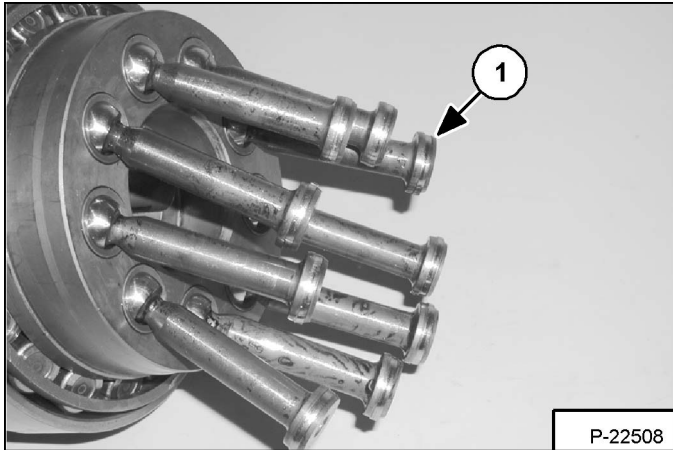


Remove the piston rings (Item 1) [Figure 30-30-62] from the pistons.

NOTE: If any portion of the shaft assembly, bearings or races must be replaced, the complete shaft/bearing assembly must be ordered. The only serviceable part is the piston rings (Item 1) [Figure 30-30-62].

Inspection


Clean all parts in solvent and use air pressure to dry them. DO NOT use cloth or paper as small pieces of material can get into the system and cause damage.

Figure 30-30-63

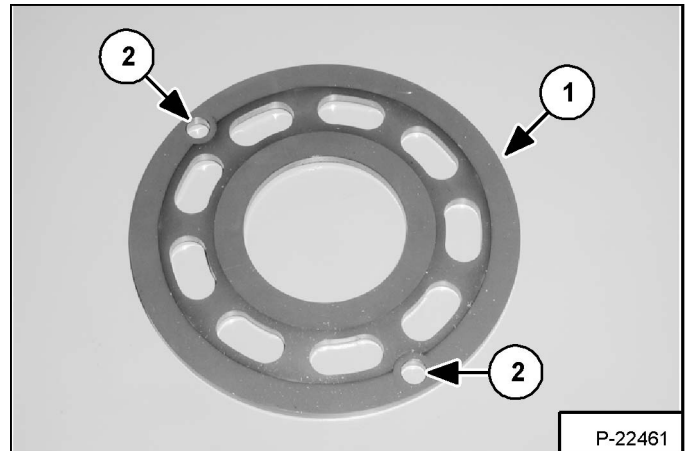

Inspect the running (bronze) surface of the bearing plate (Item 1) and locating pin holes (Item 2) [Figure 30-30-63] for wear. Replace if damaged or worn.

Figure 30-30-64

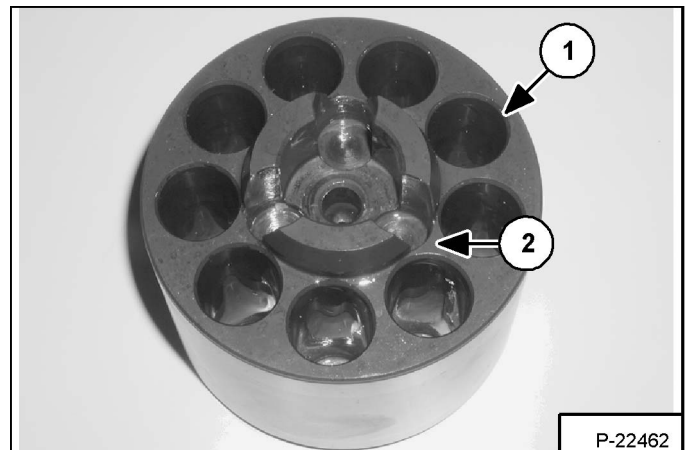


Inspect the cylinder block assembly for wear or damage. The piston bores (Item 1) must be smooth. The races for the synchronizing shaft rollers (Item 2) [Figure 30-30-64] must not be worn.

If there is any defect in the cylinder block or pistons, the complete rotating group must be replaced.

HYDROSTATIC DRIVE MOTOR (CONT'D)


Inspection (Cont'd)

Figure 30-30-65

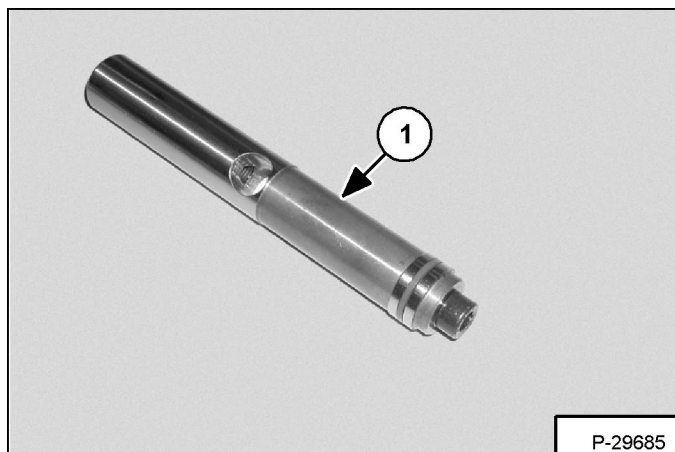


Inspect the piston (Item 1) [Figure 30-30-65] for wear or damage.

Figure 30-30-66

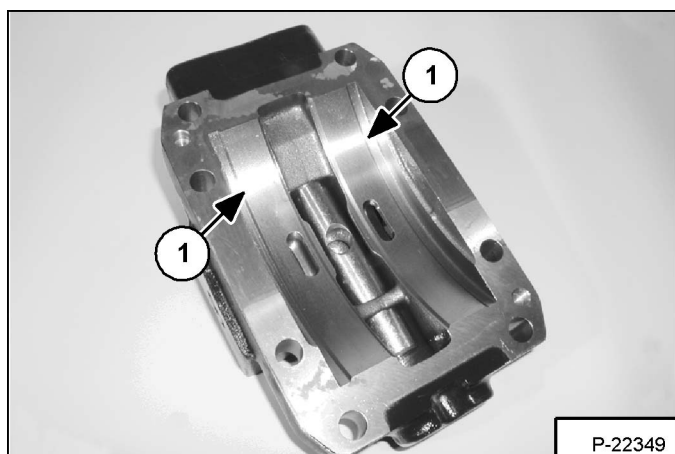

Inspect the swash plate running surface (Item 1) [Figure 30-30-66] in the end cap for wear or damage.

Figure 30-30-67

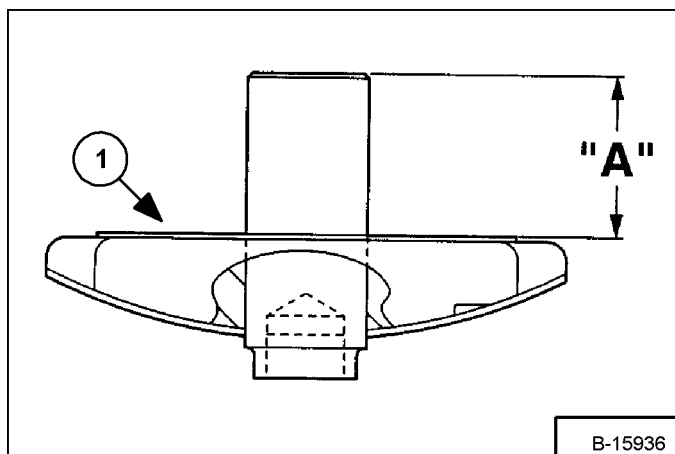

Inspect the valve segment for damage or wear on the sealing surface (Item 1) [Figure 30-30-67].

Check that the spindle is located correctly in the valve segment by measuring distance "A" [Figure 30-30-67]. If this dimension is not within 1.36 to 1.37 inch (34.5 to 34.7 mm) the assembly must be replaced.

HYDROSTATIC DRIVE MOTOR (CONT'D)

Assembly


IMPORTANT

When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.

I-2003-0888


Clean and lightly oil all parts prior to assembly.

Figure 30-30-68

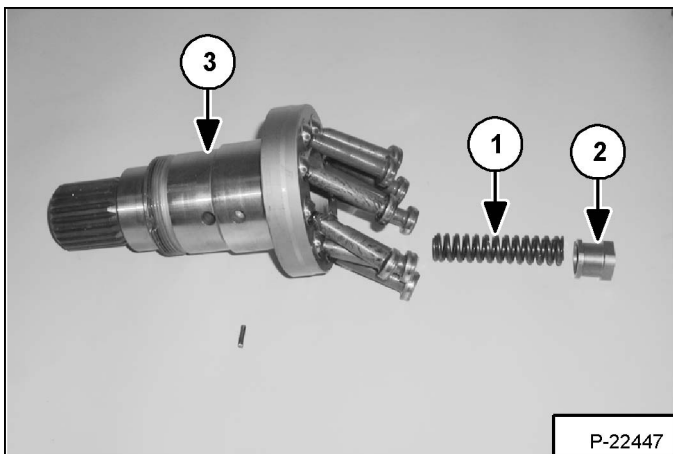


Install the spring (Item 1) and spring seat (Item 2) into the shaft assembly (Item 3) [Figure 30-30-68].

Figure 30-30-69

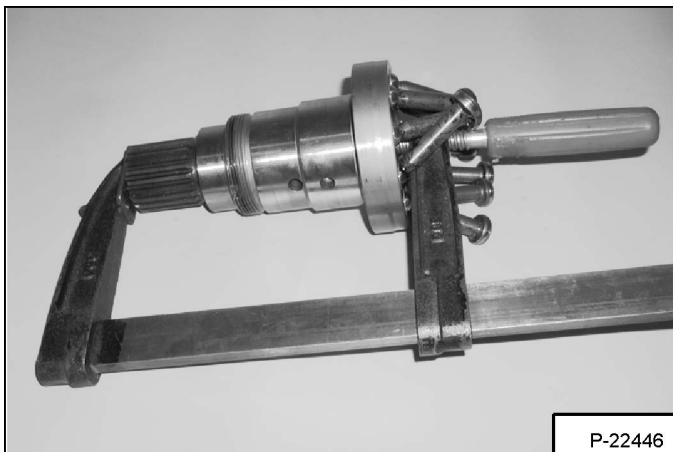

Using a clamp, compress the spring and spring seat [Figure 30-30-69].


Figure 30-30-70

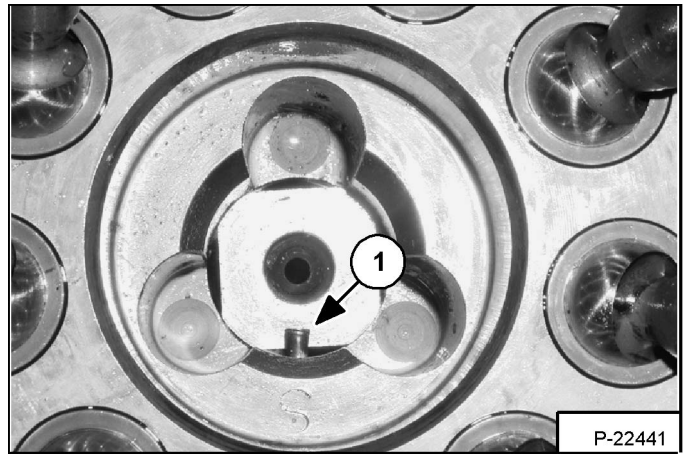

Install the pin (Item 1) [Figure 30-30-70] as shown.

NOTE: Clamp is removed for photo clarity.

Figure 30-30-71

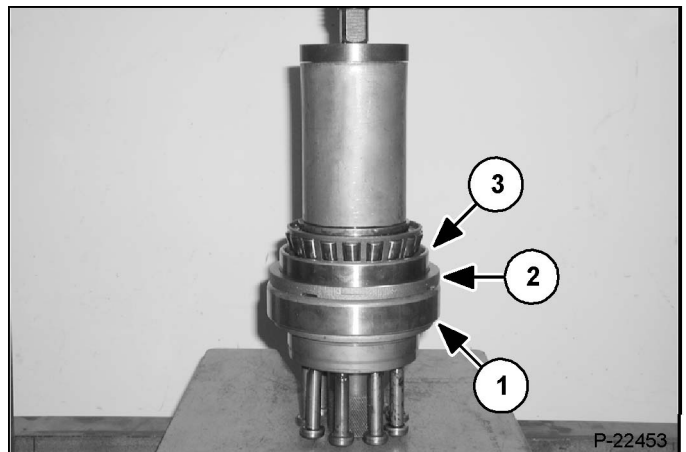


Support the shaft assembly in a press without causing damage to the pistons, install the large bearing and race (Item 1), spacer (Item 2) and small bearing and race (Item 3) [Figure 30-30-71] into the shaft assembly.

NOTE: Be sure not to over press the bearings, they should be able to roll freely.

HYDROSTATIC DRIVE MOTOR (CONT'D)

Assembly (Cont'd)


Figure 30-30-72

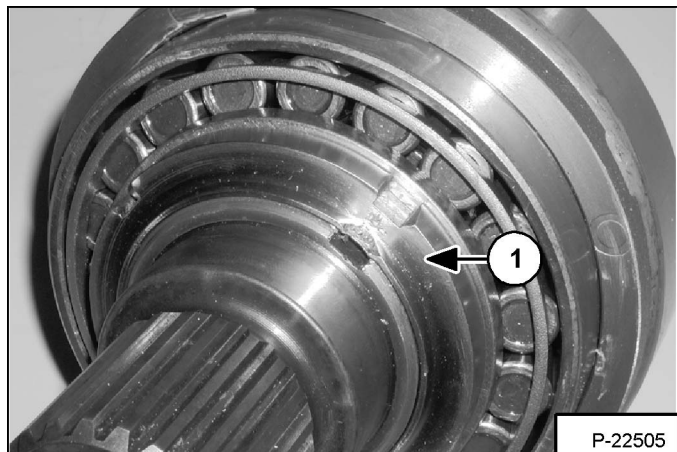

Install the ring nut (Item 1) [Figure 30-30-72] onto the shaft.


NOTE: Do not over tighten the ring nut and that there is no noticeable looseness in the bearing.

Figure 30-30-73

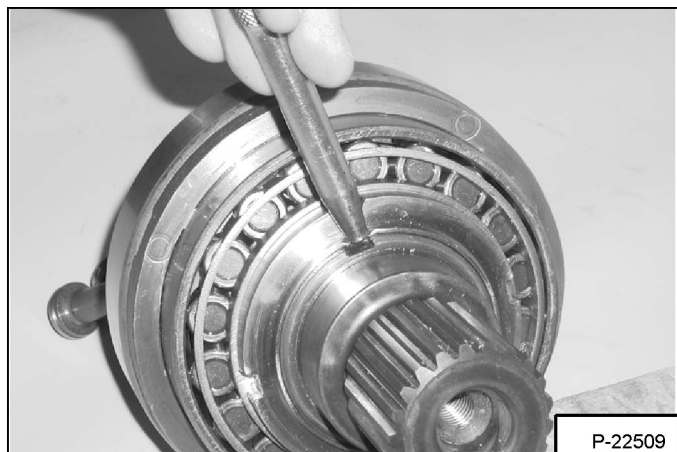

Using a punch seat the ring nut into the groove in the shaft. [Figure 30-30-73].


Figure 30-30-74

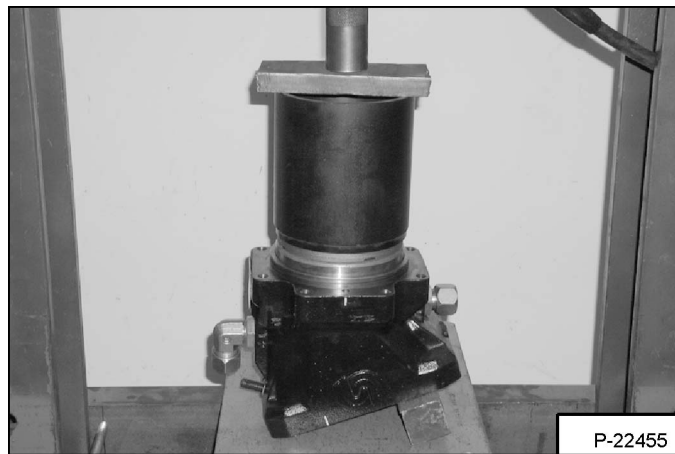

Press the piston/shaft assembly into the housing [Figure 30-30-74].

DO NOT DAMAGE THE PISTONS.

Figure 30-30-75

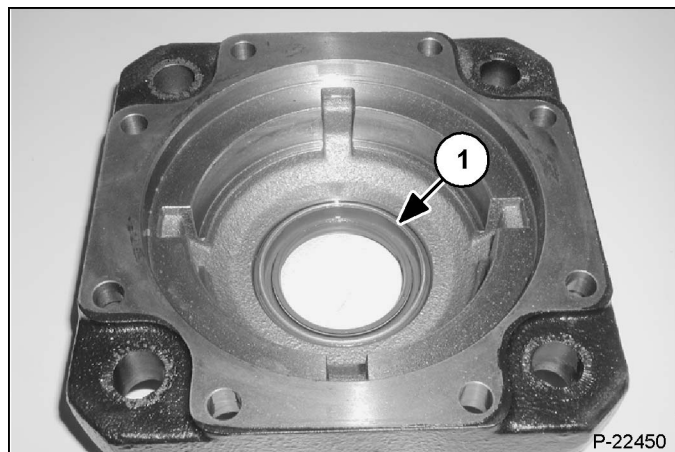


Install a new seal (Item 1) [Figure 30-30-75] into the mounting plate until it is fully seated.

HYDROSTATIC DRIVE MOTOR (CONT'D)


Assembly (Cont'd)

Figure 30-30-76

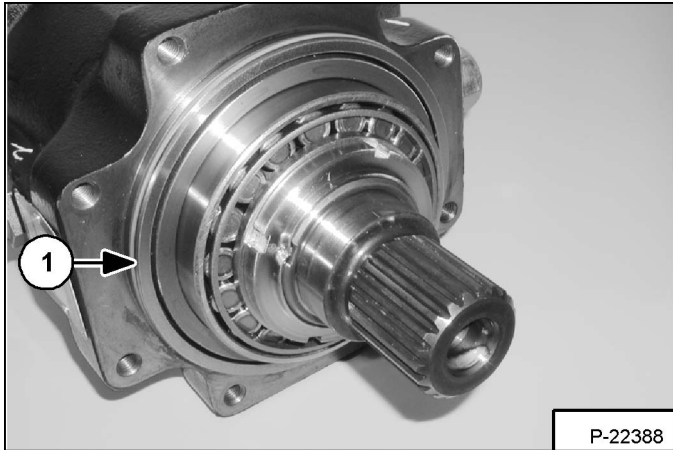


Install a new O-ring (Item 1) [Figure 30-30-76] onto the housing.

Figure 30-30-77

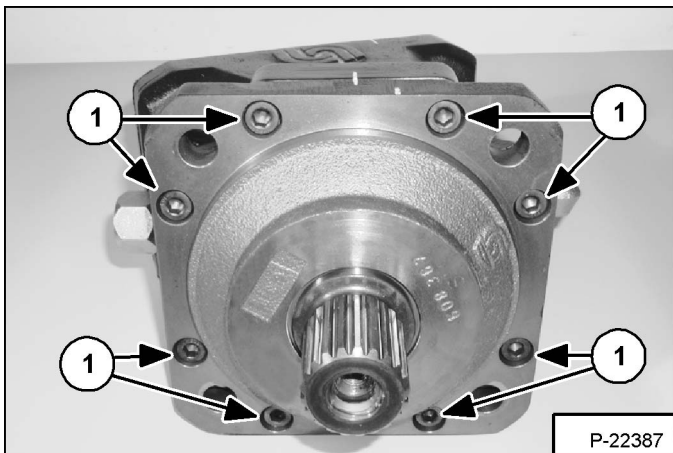


Install the mounting plate onto the housing, install the eight mounting bolts (Item 1) [Figure 30-30-77] and tighten to 46 ft.-lbs. (63 Nm) torque.

Figure 30-30-78

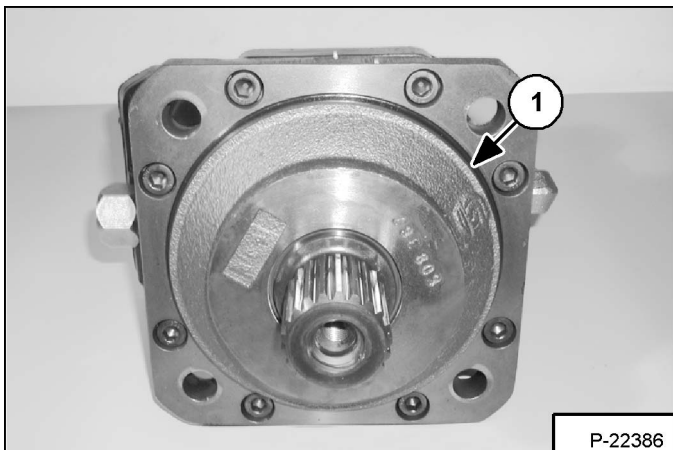

Install a new O-ring (Item 1) [Figure 30-30-78] onto the mounting plate.

Figure 30-30-79

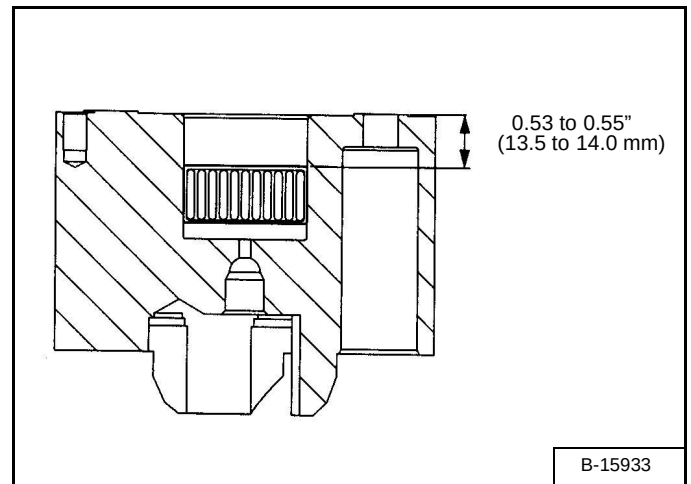

Press a new bearing into the cylinder block until it is located 0.53 to 0.55 inch (13.5 to 14.0 mm) below the bearing plate surface [Figure 30-30-79].

HYDROSTATIC DRIVE MOTOR (CONT'D)

Assembly (Cont'd)

Figure 30-30-80


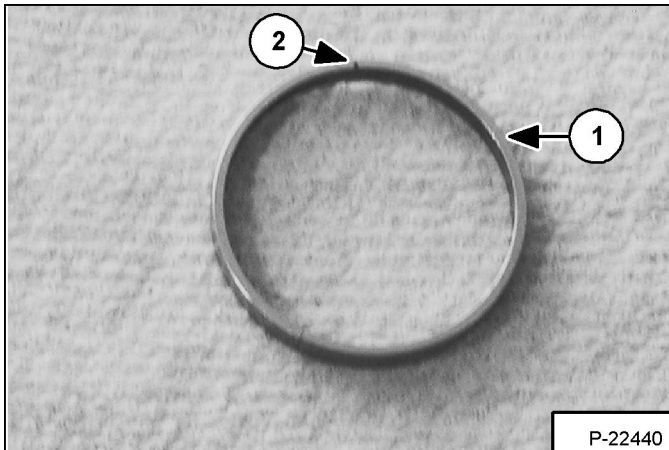


Figure 30-30-81

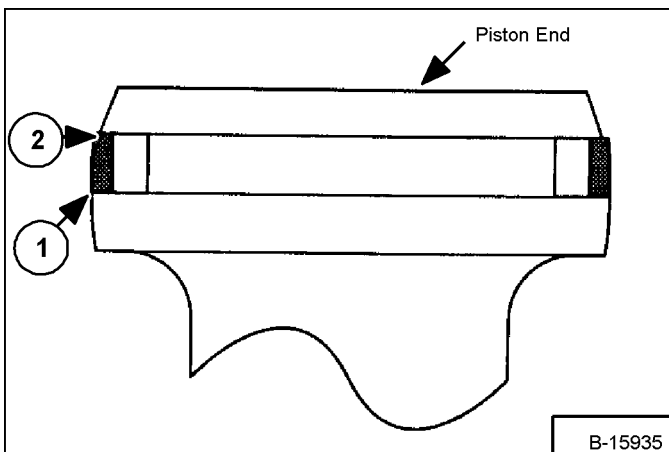


Install new piston rings (Item 1) [Figure 30-30-80] onto the pistons, make sure the spherical surface (Item 1) [Figure 30-30-81] conforms to the shape of the piston.

An identification mark (Item 2) [Figure 30-30-80] & [Figure 30-30-81] is on the "outer" side of the piston ring.


The ends of the piston rings must NOT overlap each other.

Figure 30-30-82

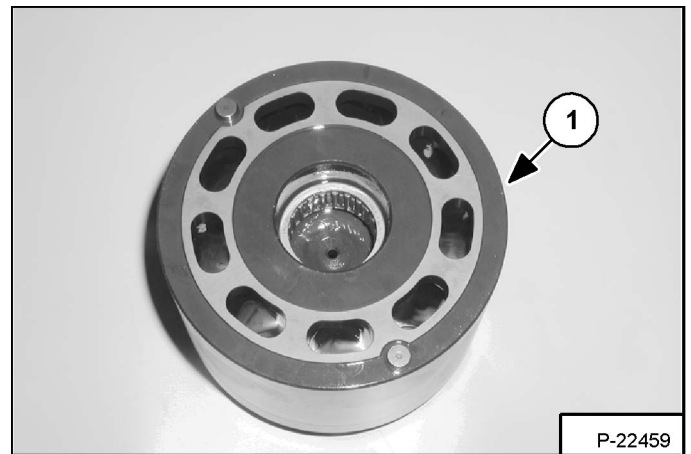

Install the bearing plate (Item 1) [Figure 30-30-82] with the bronze surface facing up onto the cylinder block.

Figure 30-30-83

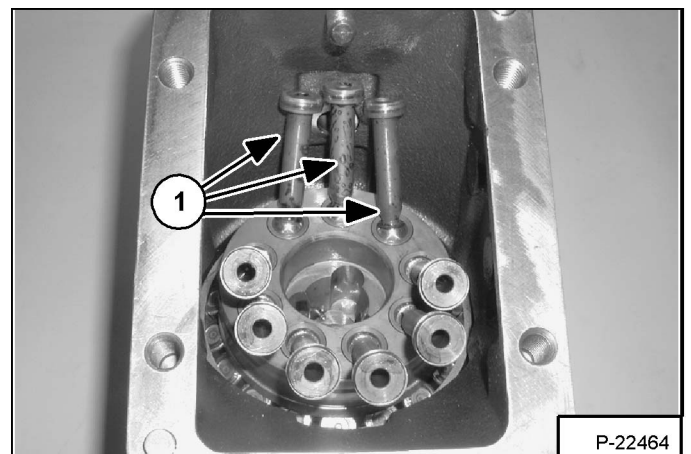


Position the housing on end, tip the three pistons (Item 1) [Figure 30-30-83] closest to the minimum angle stop out toward the housing.

HYDROSTATIC DRIVE MOTOR (CONT'D)


Assembly (Cont'd)

Figure 30-30-84

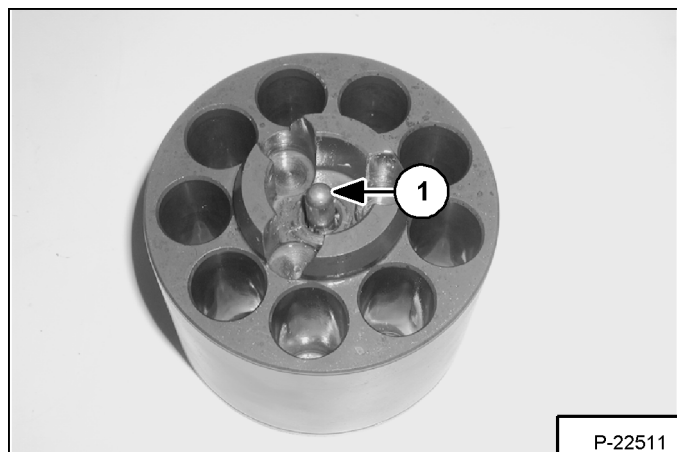


Install the synchronizing shaft support pin (Item 1) [Figure 30-30-84] into the cylinder block and retain with grease.

Figure 30-30-85

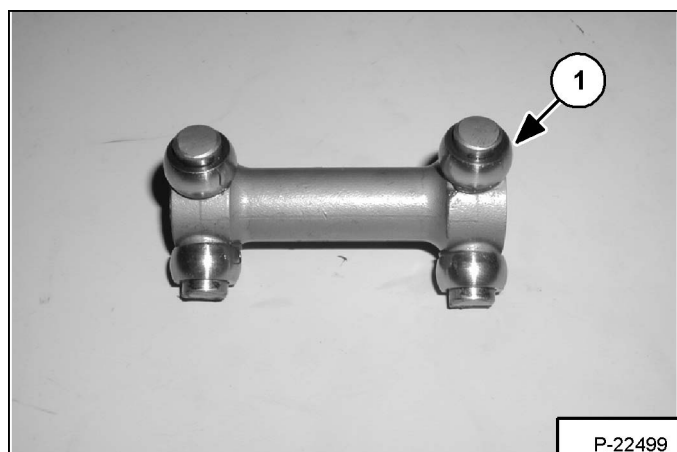


Install the six synchronizing shaft rollers (Item 1) [Figure 30-30-85] onto the synchronizing shaft and retain with grease.

Figure 30-30-86

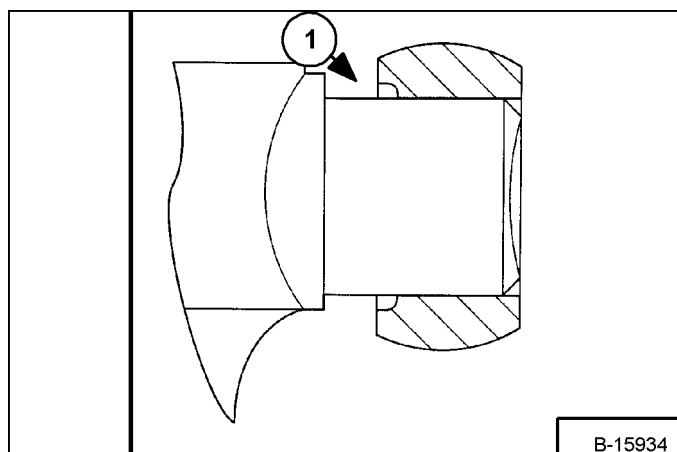

NOTE: The recess (Item 1) [Figure 30-30-86] on each roller **MUST** face the synchronizing shaft.

Figure 30-30-87

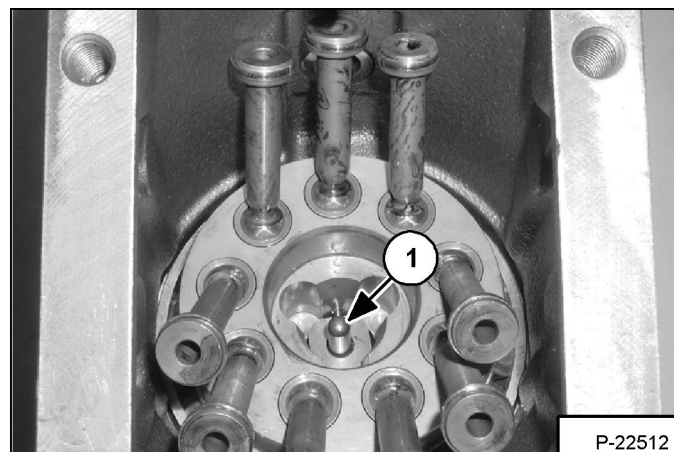


Install the synchronizing shaft support pin (Item 1) [Figure 30-30-87] into the motor shaft assembly and retain with grease.

HYDROSTATIC DRIVE MOTOR (CONT'D)

Assembly (Cont'd)


Figure 30-30-88

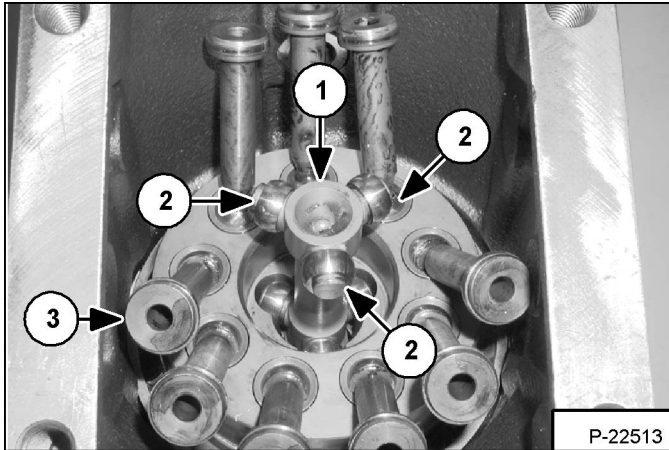

Install the synchronizing shaft and rollers (Item 1) [Figure 30-30-88] into the motor shaft races. When properly installed the synchronizing shaft should move freely in all directions.

NOTE: The motor shaft end of the synchronizing shaft is smaller than the cylinder end.

Figure 30-30-89

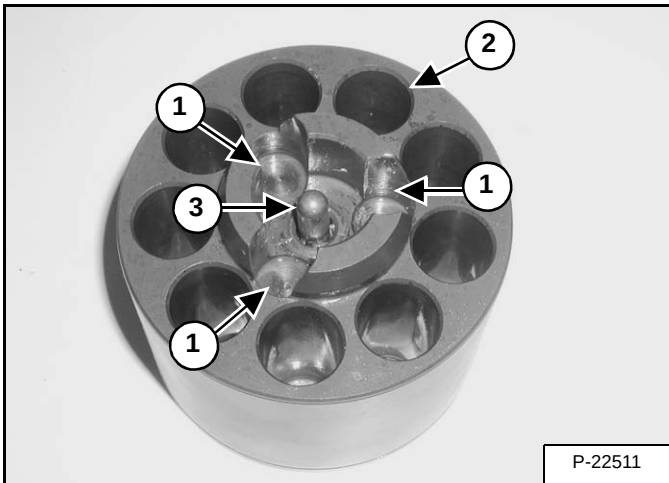


When installing the cylinder block, the races (Item 1) in the cylinder block must be positioned so the synchronizing shaft rollers (Item 2) and pistons (Item 3) and their bores (Item 2) [Figure 30-30-89] are aligned.

Install the six pistons (Item 3) [Figure 30-30-89] into the cylinder bores, tilt the block so the synchronizing shaft rollers enter their races in the block and the support pin (Item 3) [Figure 30-30-89] enter the recess.

Lift the cylinder block slightly and guide the three remaining pistons in position.

Figure 30-30-90

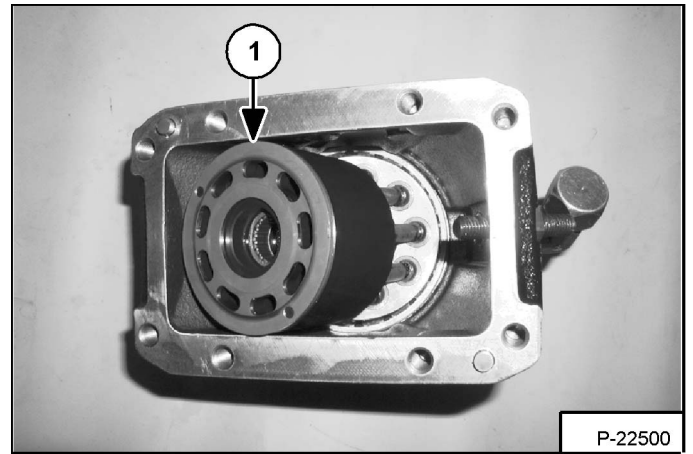


If the cylinder block (Item 1) [Figure 30-30-90] is properly installed, there should be very little rotational free-play between the block and the motor shaft.

NOTE: A brass rod may be used to guide the pistons into their bores.

Lubricate the pistons and cylinder block bores with hydraulic oil.

Figure 30-30-91

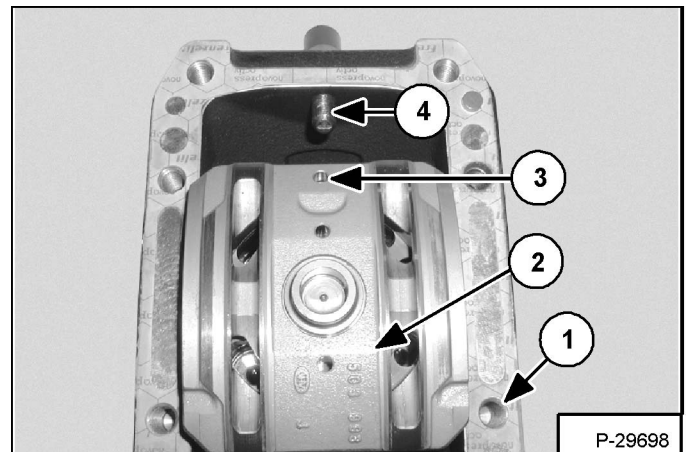

Install a new gasket (Item 1) [Figure 30-30-91] onto the housing.


Install the valve segment (Item 2) [Figure 30-30-91] onto the cylinder block and retain with heavy grease.

NOTE: The hole (Item 3) in the valve segment should be next to the minimum displacement adjustment screw (Item 4) [Figure 30-30-91].

HYDROSTATIC DRIVE MOTOR (CONT'D)


Assembly (Cont'd)

Figure 30-30-92

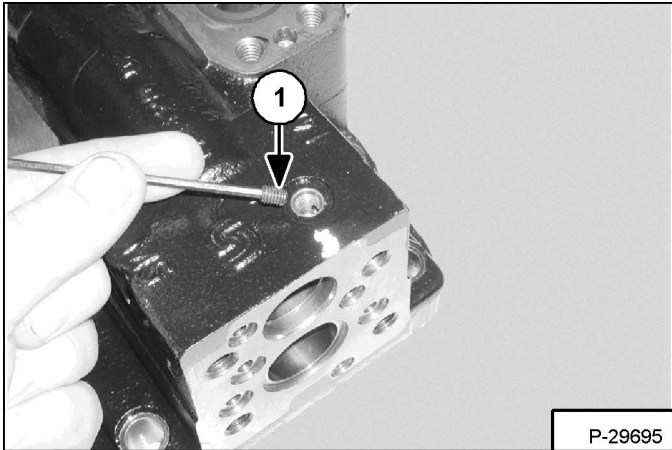


Install the orifice (Item 1) [Figure 30-30-92] and tighten to 4 ft.-lbs. (5 Nm) torque.

Figure 30-30-93

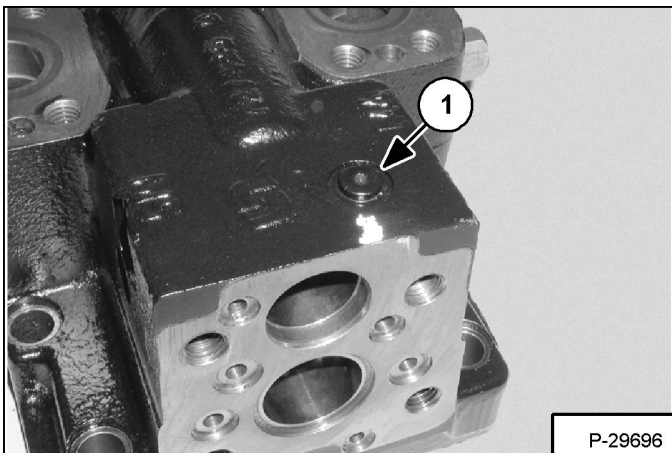


Install the plug (Item 1) [Figure 30-30-93] and tighten to 4 ft.-lbs. (5 Nm) torque.

Figure 30-30-94

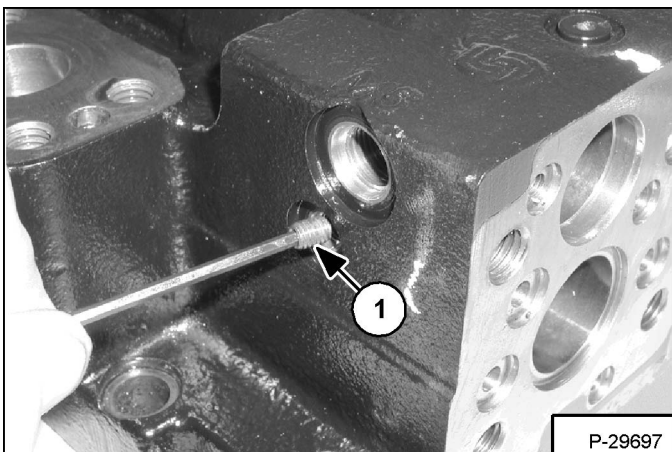

Install the orifice (Item 1) [Figure 30-30-94] and tighten to 4 ft.-lbs. (5 Nm) torque.

Figure 30-30-95

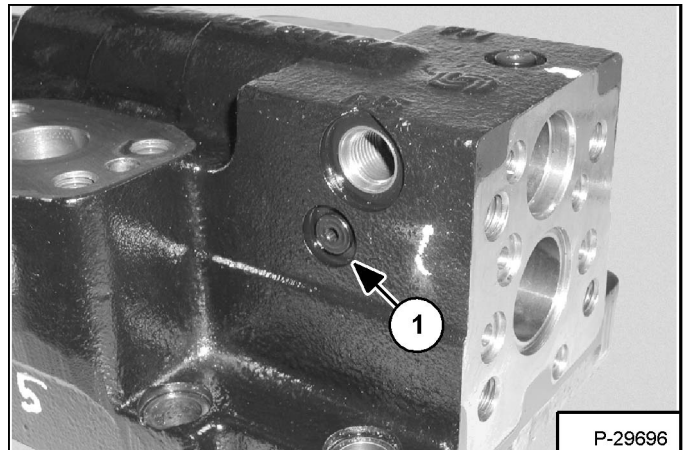


Install the plug (Item 1) [Figure 30-30-95] and tighten to 4 ft.-lbs. (5 Nm) torque.

HYDROSTATIC DRIVE MOTOR (CONT'D)


Assembly (Cont'd)

Figure 30-30-96

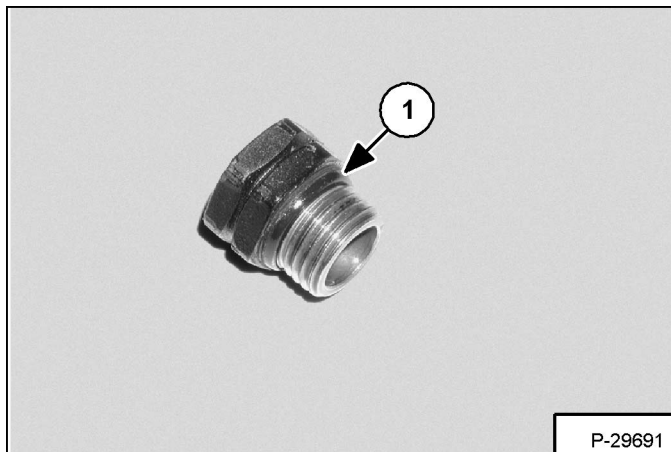


Install a new O-ring (Item 1) [Figure 30-30-96] on the plug.

Figure 30-30-97

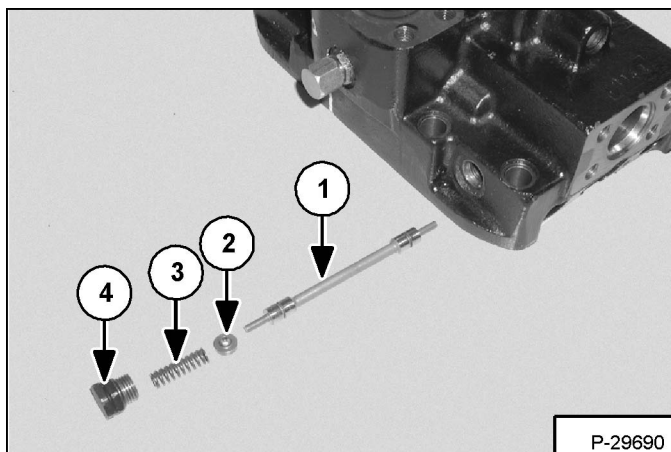


Install the spool (Item 1), spring seat (Item 2), spring (Item 3) and plug (Item 4) [Figure 30-30-97] into the housing and tighten to 30 ft.-lbs. (41 Nm) torque.

Figure 30-30-98

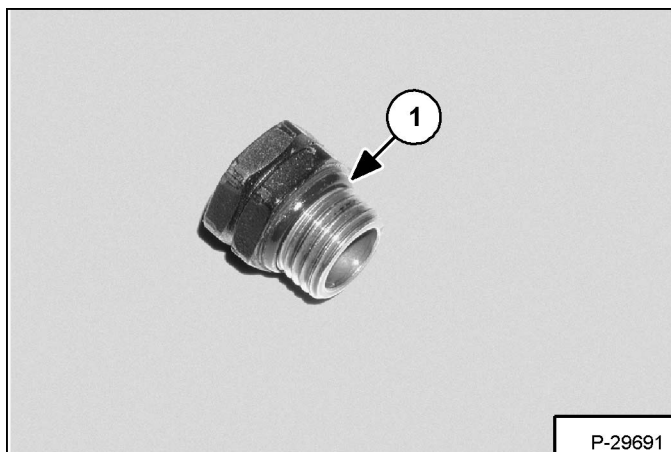

Install a new O-ring (Item 1) [Figure 30-30-98] on the plug.

Figure 30-30-99

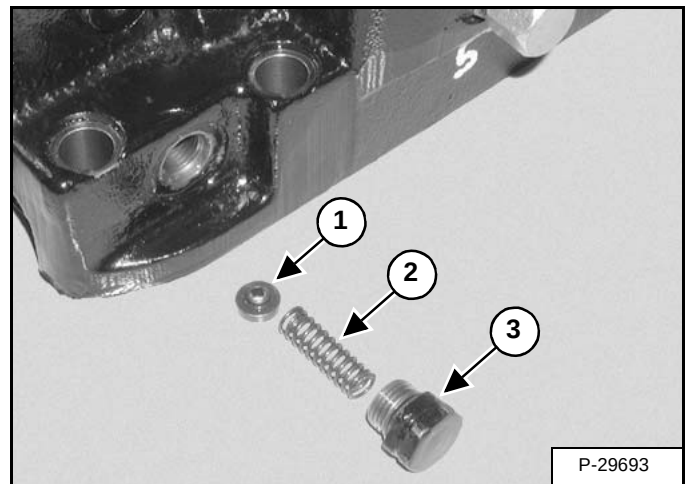


Install the spring seat (Item 1), spring (Item 2) and plug (Item 3) [Figure 30-30-99] into the housing and tighten to 30 ft.-lbs. (41 Nm) torque.

HYDROSTATIC DRIVE MOTOR (CONT'D)


Assembly (Cont'd)

Figure 30-30-100

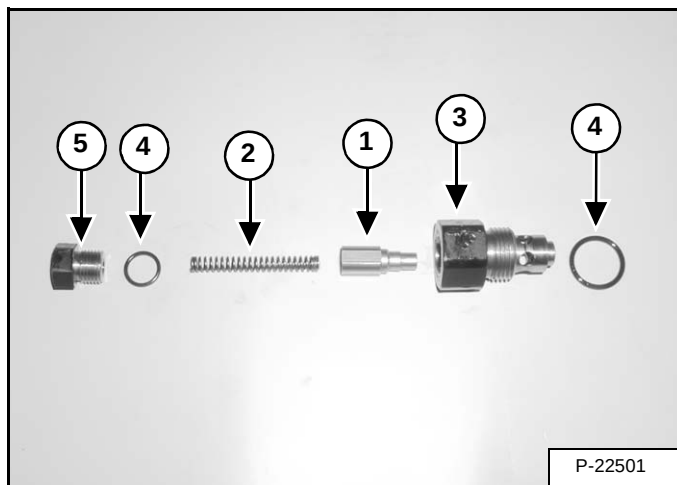


Assemble the poppet (Item 1) and spring (Item 2) into the relief valve housing (Item 3) using new O-rings (Item 4) and plug (Item 5) [Figure 30-30-100].

Figure 30-30-101

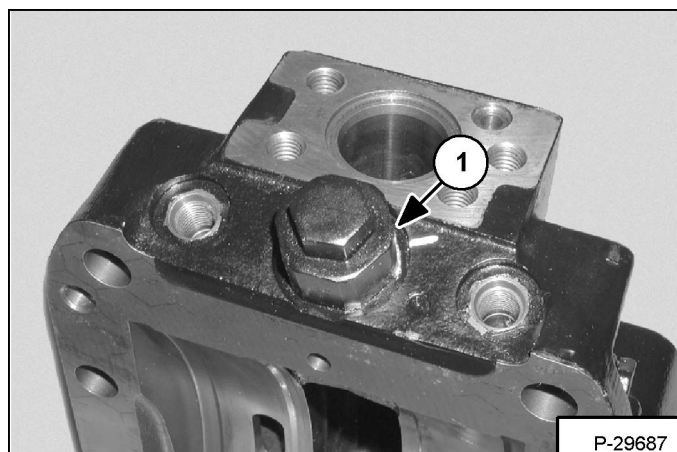


Install the relief valve (Item 1) [Figure 30-30-101] into the housing and tighten to 38 ft.-lbs. (52 Nm) torque.

Figure 30-30-102

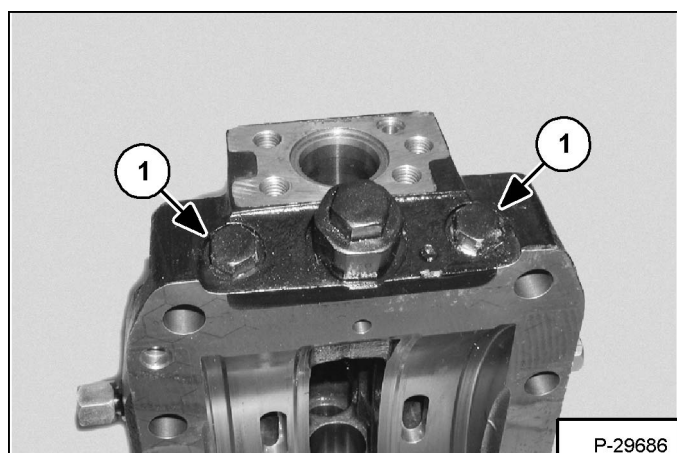

Install the two plugs (Item 1) [Figure 30-30-102] and tighten to 30 ft.-lbs. (41 Nm) torque.

Figure 30-30-103

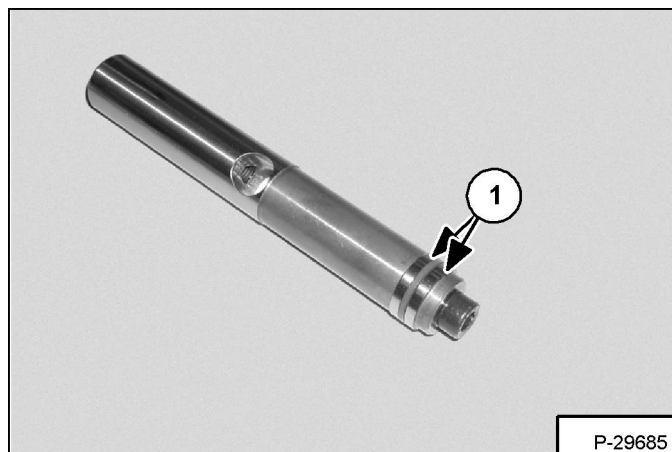


Install the two seals (Item 1) [Figure 30-30-103] onto the servo piston.

HYDROSTATIC DRIVE MOTOR (CONT'D)


Assembly (Cont'd)

Figure 30-30-104

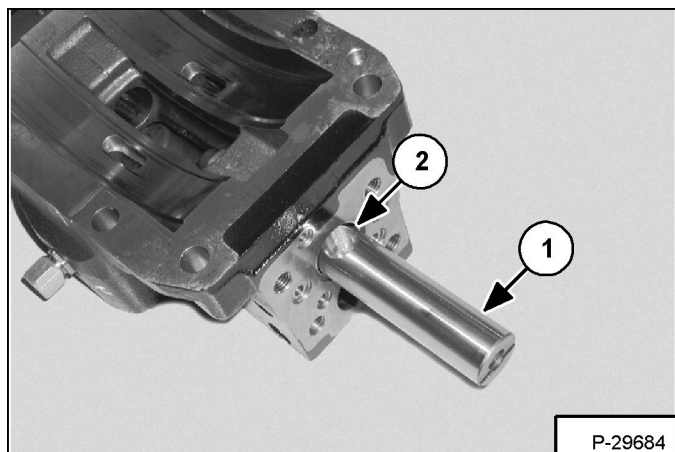

Install the servo piston (Item 1) into the housing, make sure the hole (Item 2) [Figure 30-30-104] is in the position shown when the piston is fully installed.


Figure 30-30-105

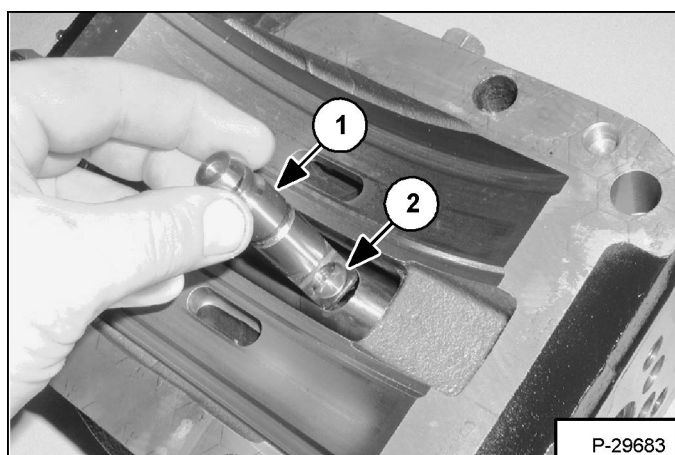

Install the feed back lug (Item 1) [Figure 30-30-105] into the servo piston.

NOTE: The position of the flat side of the feed back lug (Item 2) [Figure 30-30-105].


Figure 30-30-106

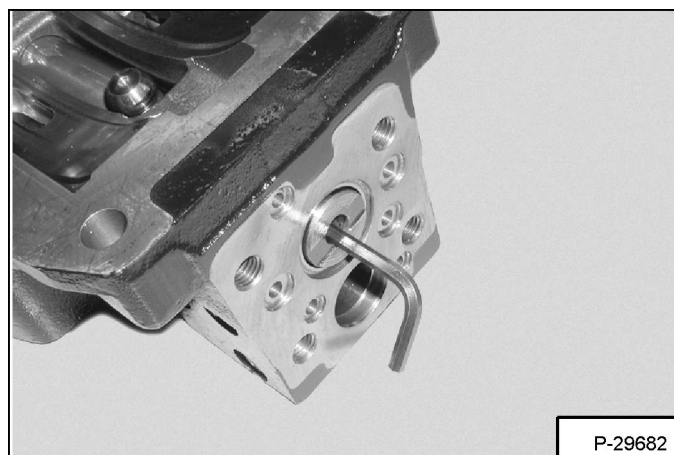

While holding the feedback lug, install the pointed set screw into the groove in the feedback lug [Figure 30-30-106].

Do not tighten at this time.

Figure 30-30-107

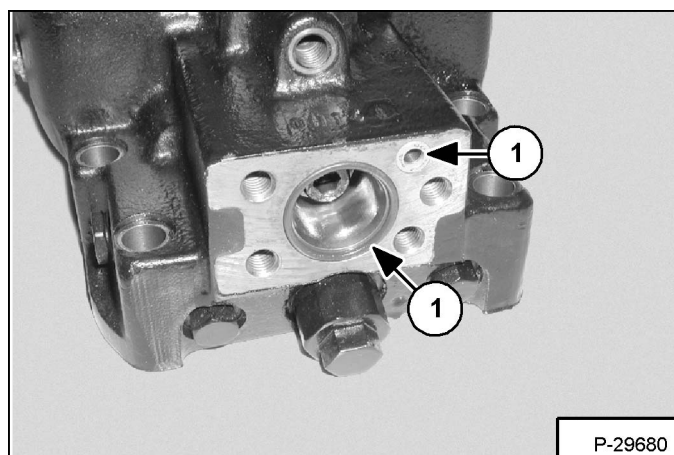


Install the two O-rings (Item 1) [Figure 30-30-107].

HYDROSTATIC DRIVE MOTOR (CONT'D)


Assembly (Cont'd)

Figure 30-30-108

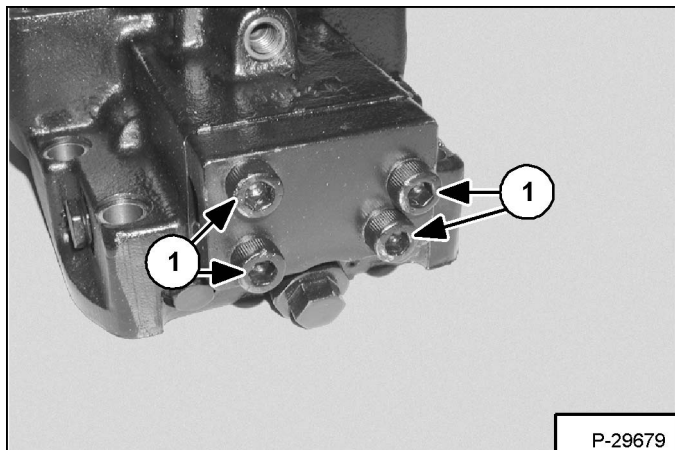


Install the end cap and tighten the four bolts (Item 1) [Figure 30-30-108] to 58 ft.-lbs. (78 Nm) torque.

Figure 30-30-109

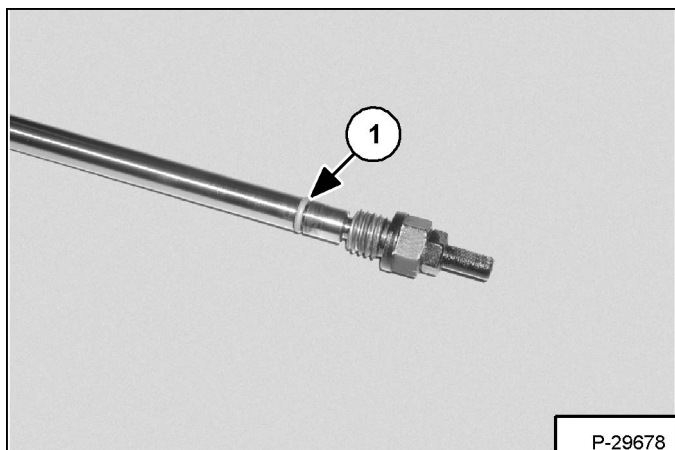


Install a new O-ring (Item 1) [Figure 30-30-109] onto the adjustment rod.

Figure 30-30-110

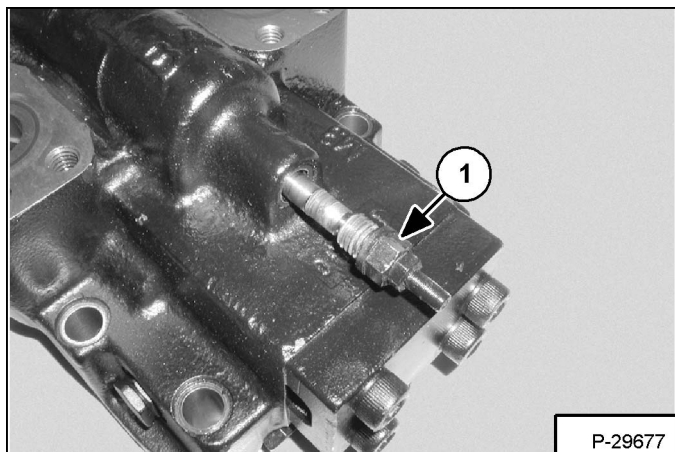

Install the adjustment rod (Item 1) [Figure 30-30-110] into the housing and through the feed back lug. Tighten the large nut to 15 ft.-lbs. (20 Nm) torque.

Figure 30-30-111

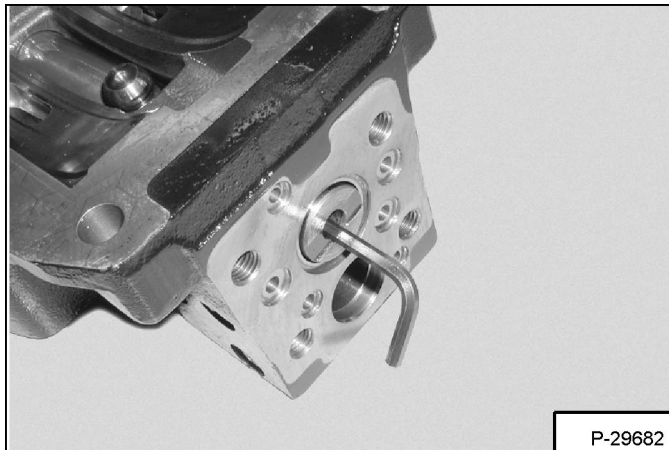


Tighten the pointed set screw at this time [Figure 30-30-111].

HYDROSTATIC DRIVE MOTOR (CONT'D)


Assembly (Cont'd)

Figure 30-30-112

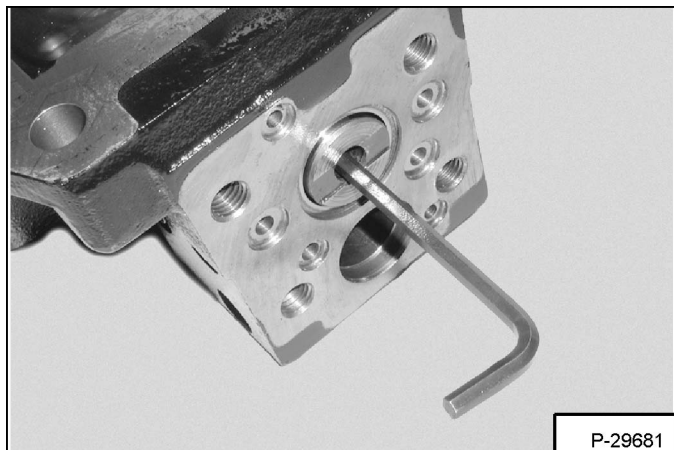

Install the second set screw and tighten [Figure 30-30-112].


Figure 30-30-113

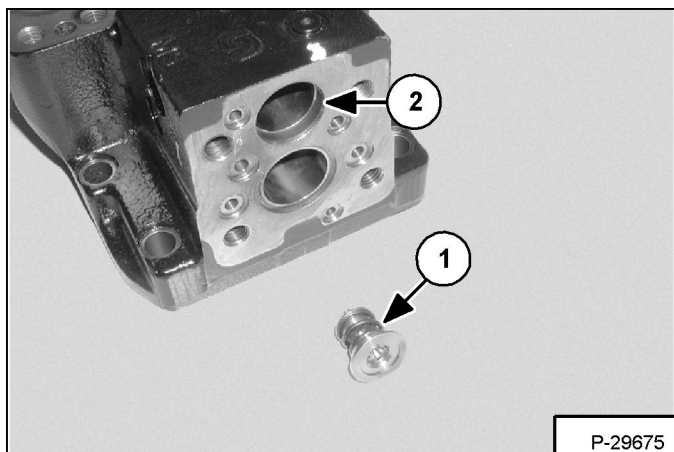

Install the two spring seats and spring (Item 1) into the servo piston hole (Item 2) [Figure 30-30-113].


NOTE: Apply assembly lube to help hold into correct position.

Figure 30-30-114

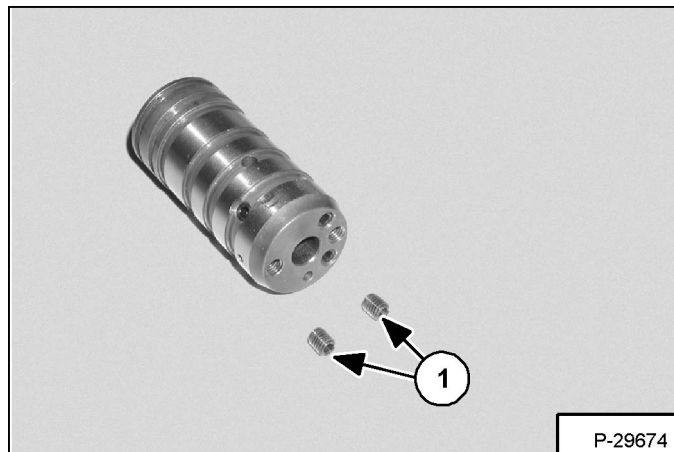

Install the two orifices (Item 1) [Figure 30-30-114] into the spool and tighten to 18 in.-lbs. (2 Nm) torque.

Figure 30-30-115

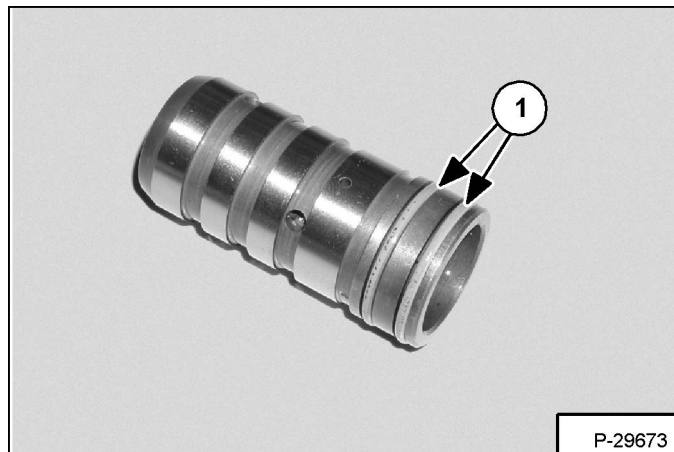


Install the two O-rings (Item 1) [Figure 30-30-115] onto the spool.

HYDROSTATIC DRIVE MOTOR (CONT'D)


Assembly (Cont'd)

Figure 30-30-116

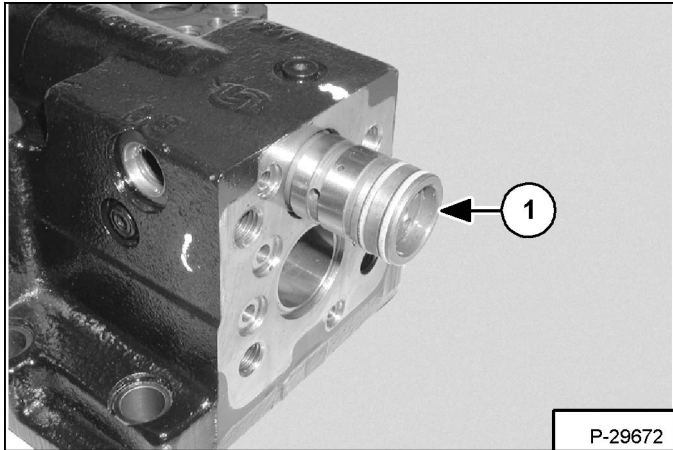


Install the servo control spool (Item 1) [Figure 30-30-116] into the housing.

Figure 30-30-117

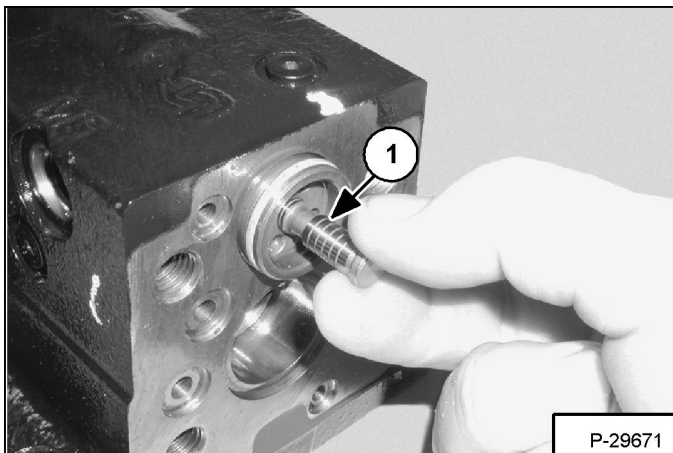


Install the inner spool (Item 1) [Figure 30-30-117].

Figure 30-30-118

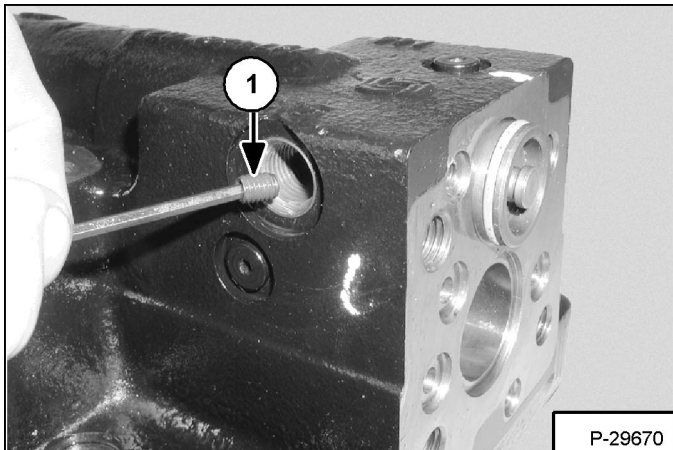

Install the orifice (Item 1) [Figure 30-30-118] into the housing and tighten to 4 ft.-lbs. (5 Nm) torque.

Figure 30-30-119

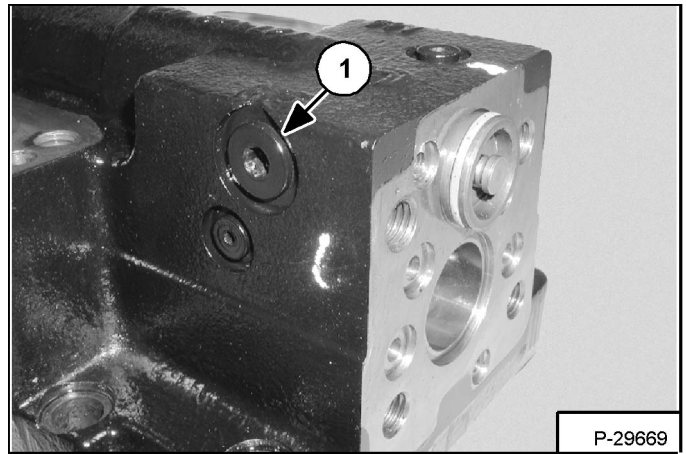


Install the plug (Item 1) [Figure 30-30-119] and tighten to 4 ft.-lbs. (5 Nm) torque.

HYDROSTATIC DRIVE MOTOR (CONT'D)


Assembly (Cont'd)

Figure 30-30-120

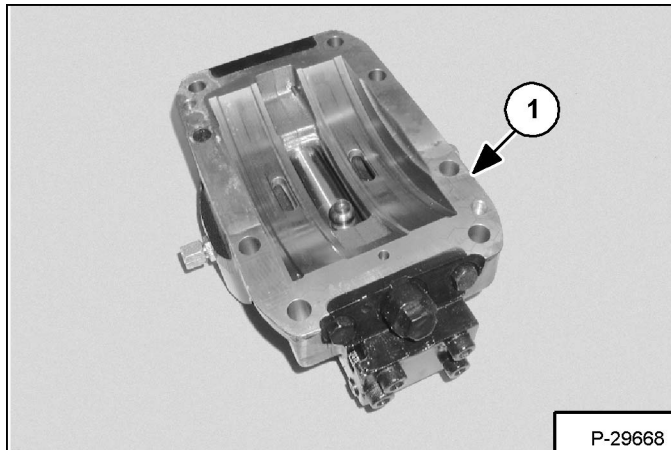


Install a new gasket (Item 1) [Figure 30-30-120] onto the end cap.

Figure 30-30-121

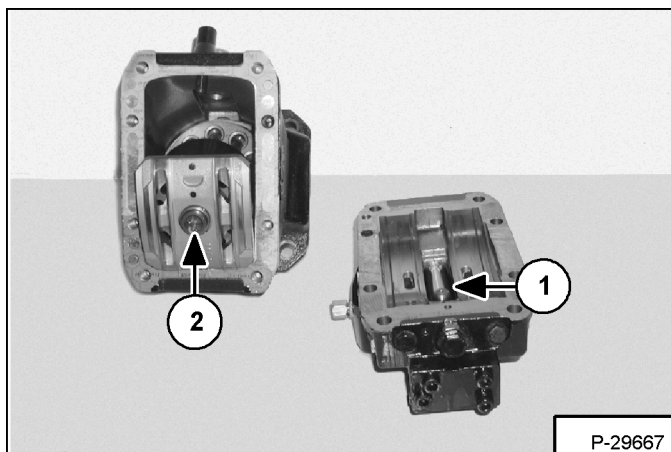


Align the feed back lug (Item 1) and the valve segment (Item 2) [Figure 30-30-121].

Figure 30-30-122

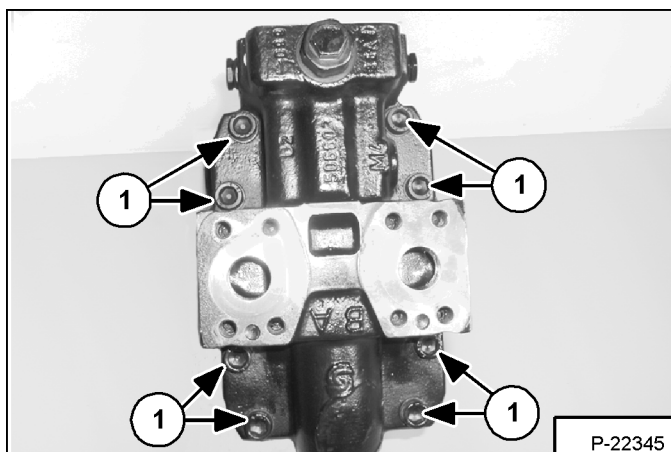

Install the end cap housing and tighten the eight bolts (Item 1) [Figure 30-30-122] to 85 ft.-lbs. (115 Nm) torque.

Figure 30-30-123

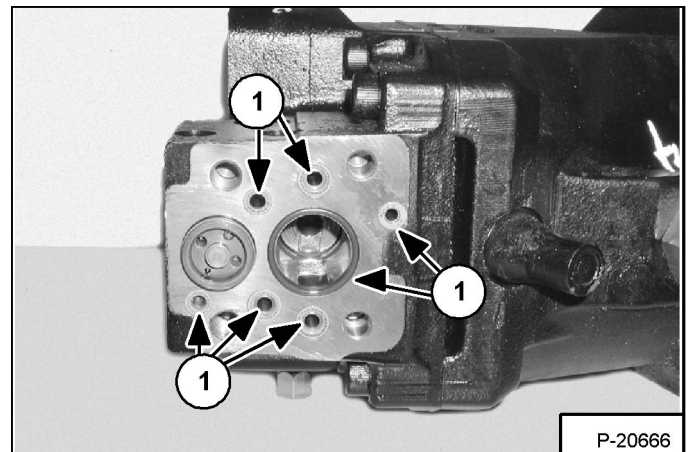


Install the seven O-rings (Item 1) [Figure 30-30-123].

HYDROSTATIC DRIVE MOTOR (CONT'D)

Assembly (Cont'd)


Figure 30-30-124

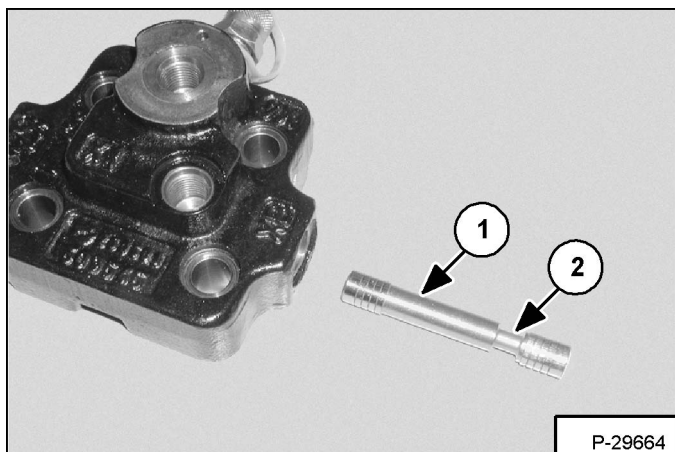

Install the spool (Item 1) [Figure 30-30-124] into the housing.


NOTE: The position of the groove (Item 2) [Figure 30-30-124].

Figure 30-30-125

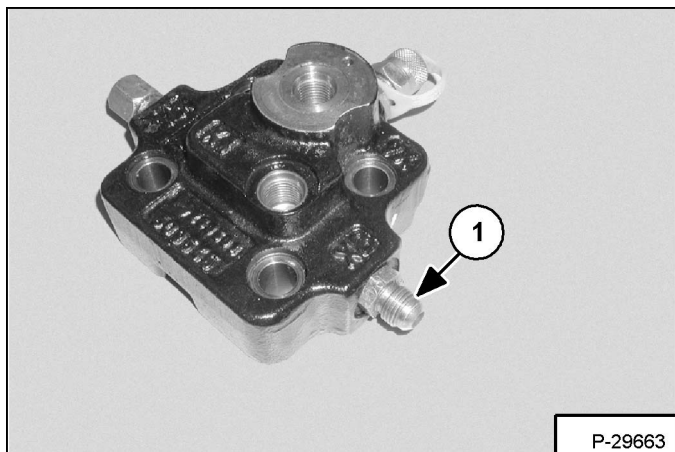


Install the fitting (Item 1) [Figure 30-30-125].

Figure 30-30-126

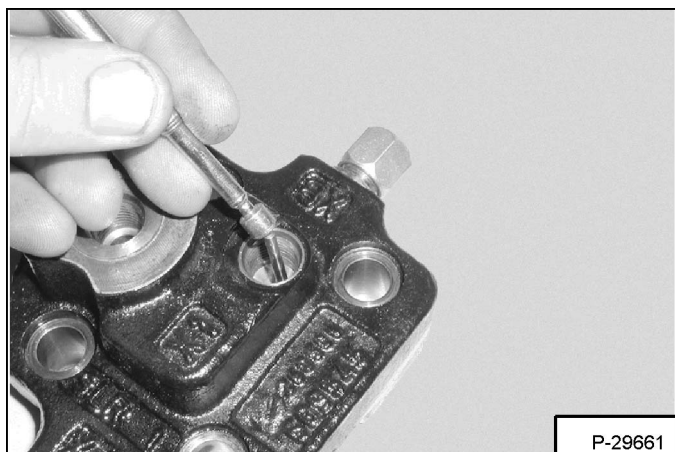

Install the pin into the housing as shown [Figure 30-30-126].

Figure 30-30-127

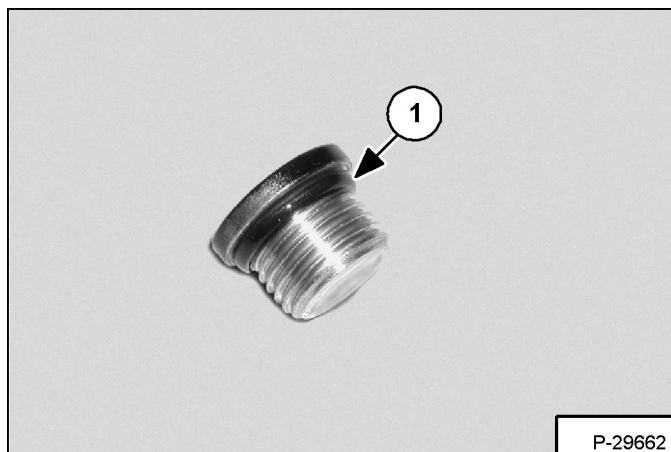


Install a new O-ring (Item 1) [Figure 30-30-127] on the plug.

HYDROSTATIC DRIVE MOTOR (CONT'D)


Assembly (Cont'd)

Figure 30-30-128

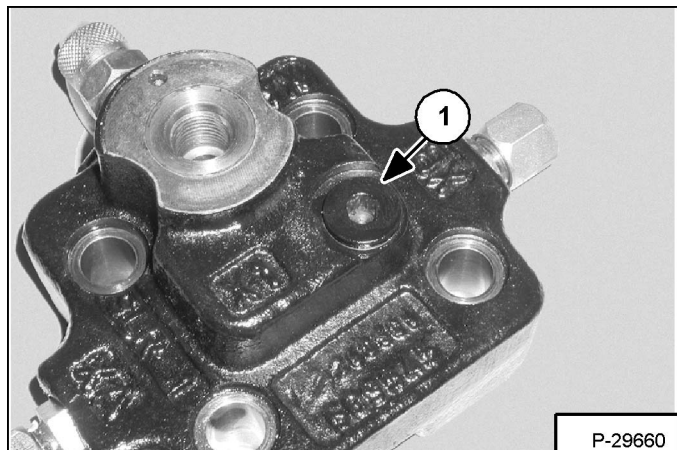

Install the plug (Item 1) [Figure 30-30-128] and tighten to 4 ft.-lbs. (5 Nm) torque.


Figure 30-30-129

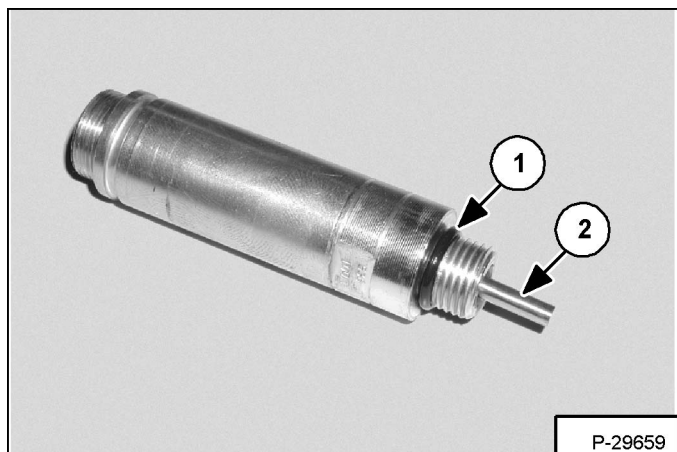

Install a new O-ring (Item 1) [Figure 30-30-129] onto the solenoid shaft.


Lightly lubricate the pin (Item 2) [Figure 30-30-129] and install into the solenoid shaft.

Figure 30-30-130

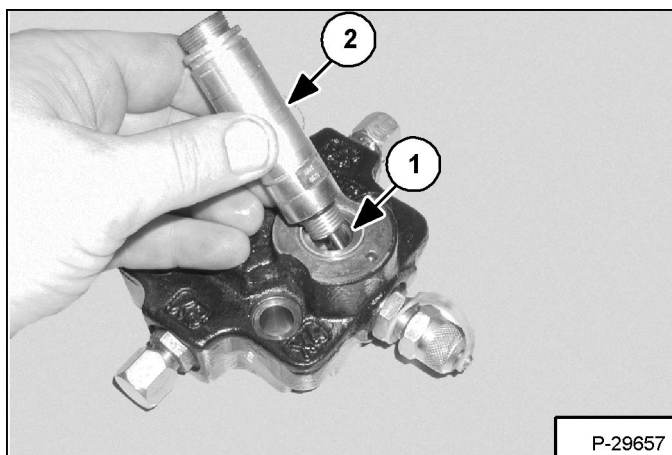

Install a new O-ring (Item 1) and solenoid shaft assembly (Item 2) [Figure 30-30-130] into the housing.

Figure 30-30-131

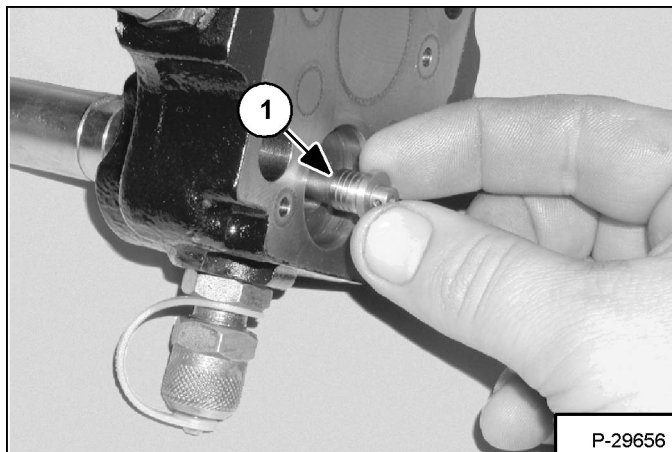


Install the spool (Item 1) [Figure 30-30-131] into the housing.

HYDROSTATIC DRIVE MOTOR (CONT'D)


Assembly (Cont'd)

Figure 30-30-132

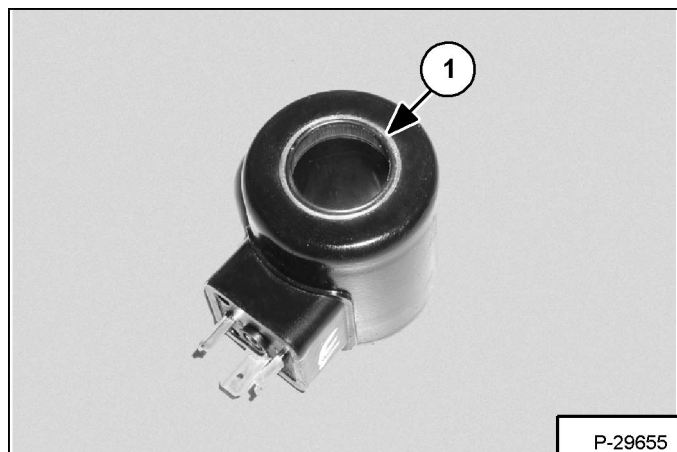


Install a new O-ring (Item 1) [Figure 30-30-132] on the solenoid.

Figure 30-30-133

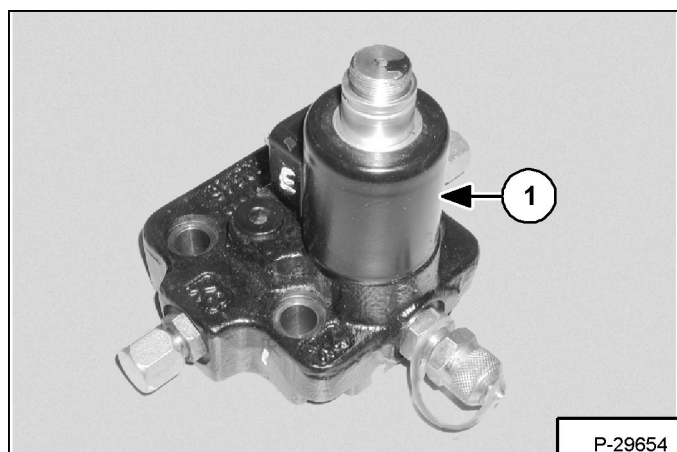


Install the solenoid (Item 1) [Figure 30-30-133].

Figure 30-30-134

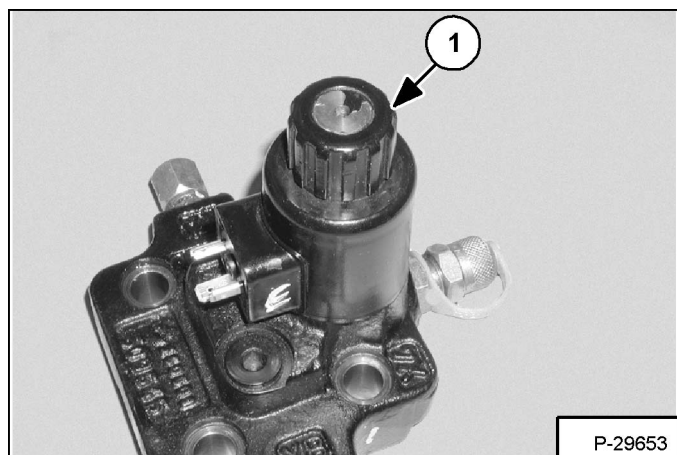

Install the solenoid nut (Item 1) [Figure 30-30-134] and hand tighten.

Figure 30-30-135

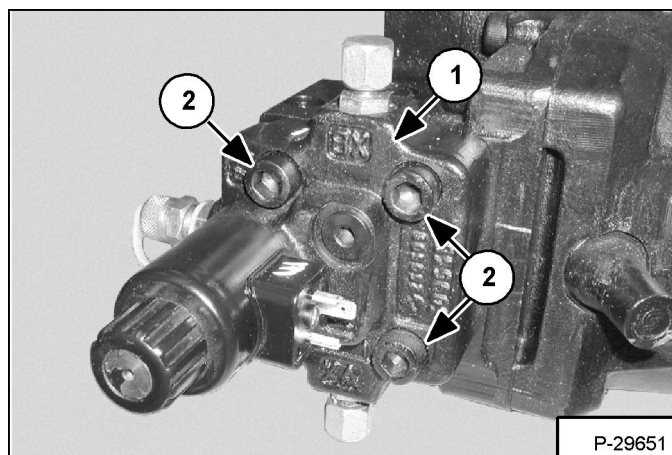

Install the solenoid housing assembly (Item 1). Tighten the bolts (Item 2) [Figure 30-30-135] to 58 ft.-lbs. (78 Nm) torque.

HYDROSTATIC PUMP

Removal And Installation


Remove the gear pump. (See "Removal And Installation" on page 20-130-1.)

IMPORTANT

When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.

I-2003-0888


Figure 30-40-1

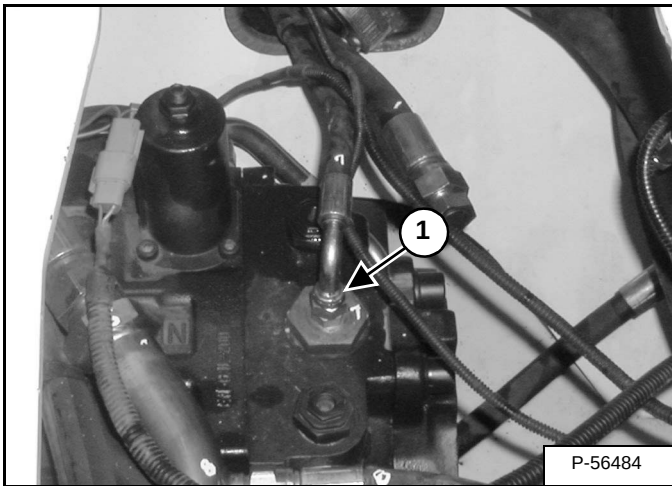

Remove the hose (Item 1) [Figure 30-40-1] from the top of the hydrostatic pump.


NOTE: Mark all hoses for correct installation.

Figure 30-40-2

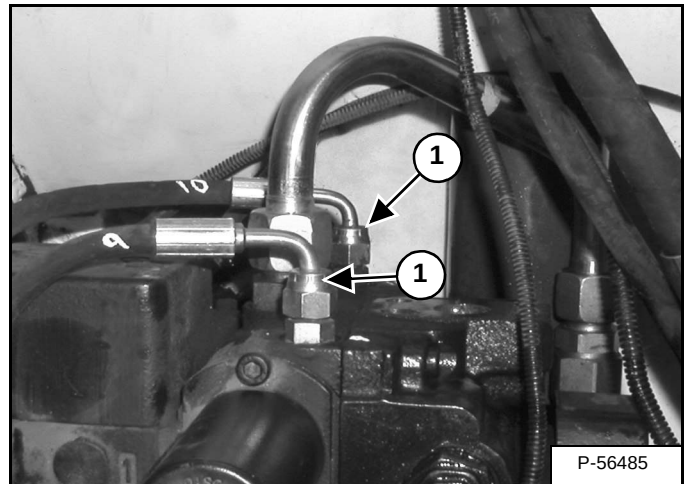

Remove the two hoses (Item 1) [Figure 30-40-2].

Figure 30-40-3

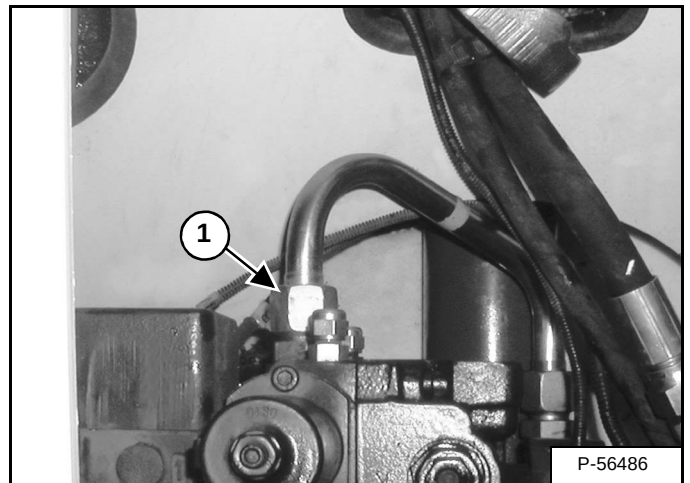


Remove the tubeline (Item 1) [Figure 30-40-3].

HYDROSTATIC PUMP (CONT'D)


Removal And Installation (Cont'd)

Figure 30-40-4

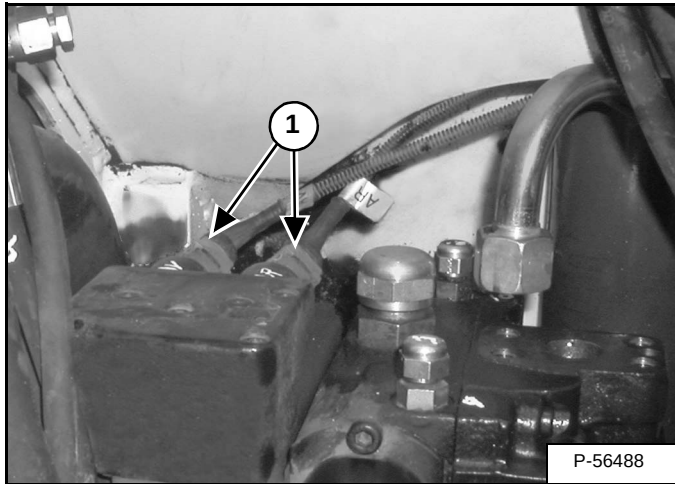


Remove the two wires (Item 1) [Figure 30-40-4] from the solenoids.

Figure 30-40-5

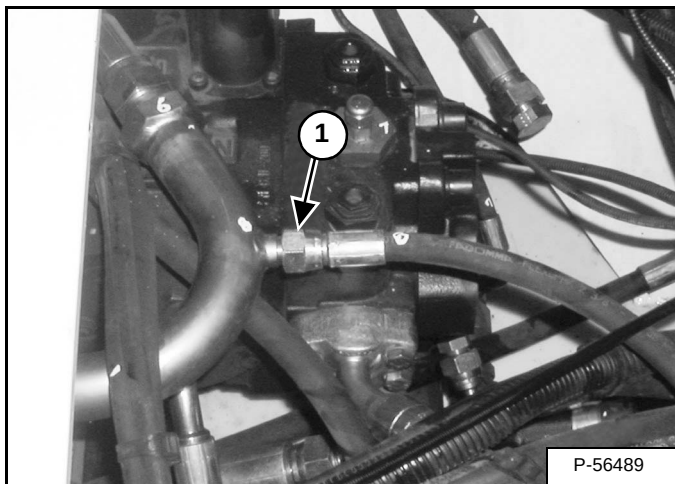


Remove the hose (Item 1) [Figure 30-40-5] from the tubeline.

Figure 30-40-6

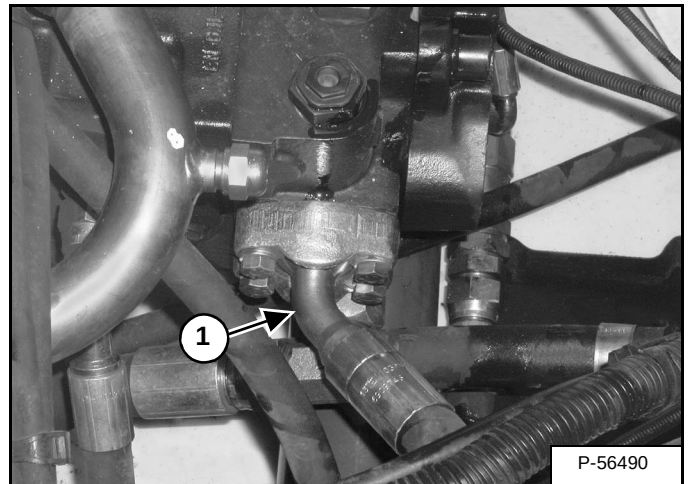

Remove the four bolt flange hose (Item 1) [Figure 30-40-6] from the front of the pump.

Figure 30-40-7

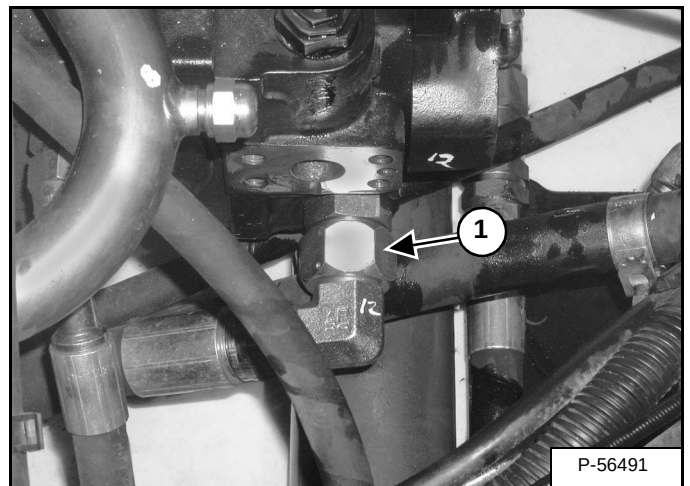


Remove the hose (Item 1) [Figure 30-40-7].

HYDROSTATIC PUMP (CONT'D)


Removal And Installation (Cont'd)

Figure 30-40-8

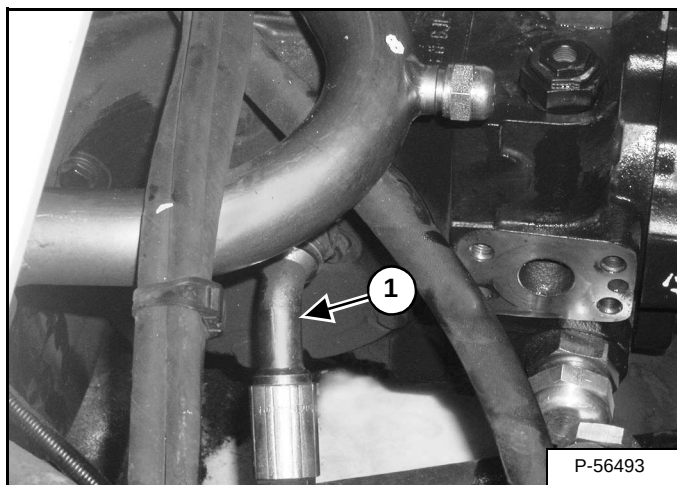

Remove the hose (Item 1) [Figure 30-40-8].


Figure 30-40-9

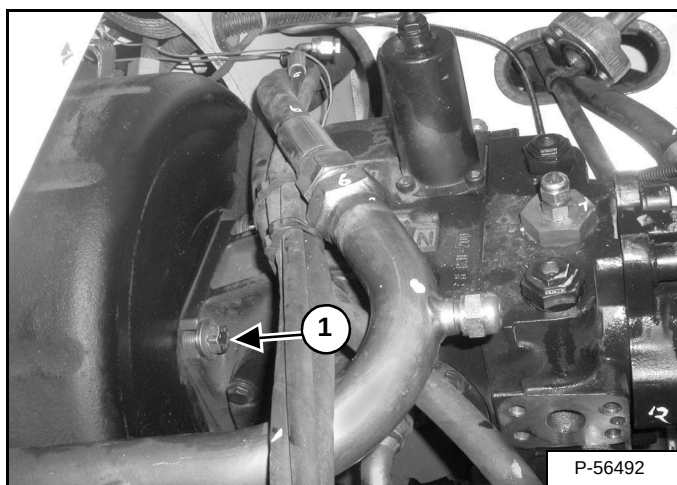

Install a chain hoist and lifting strap to lift and support the pump.

Remove the four mounting bolts (Item 1) [Figure 30-40-9].

Figure 30-40-10

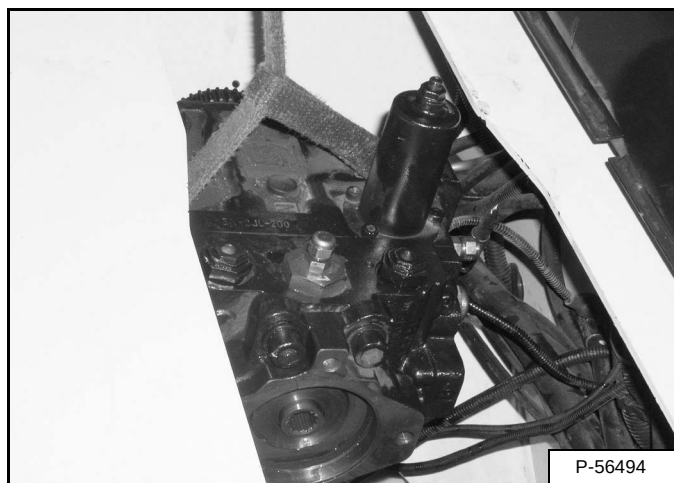


Lift and remove the hydrostatic pump [Figure 30-40-10].

NOTE: It may be necessary to remove fittings from the pump for complete removal.

HYDROSTATIC PUMP (CONT'D)

Parts Identification

1. Multi-Function Valve Assembly
2. O-Ring
3. Plug
4. Plug
5. Nut
6. Charge Relief
7. O-Ring
8. Spring
9. Poppet
10. Plug
11. Control Filter Screen
12. Bolt
13. Lip Seal
14. Cover
15. O-Ring
16. Retainer Plate

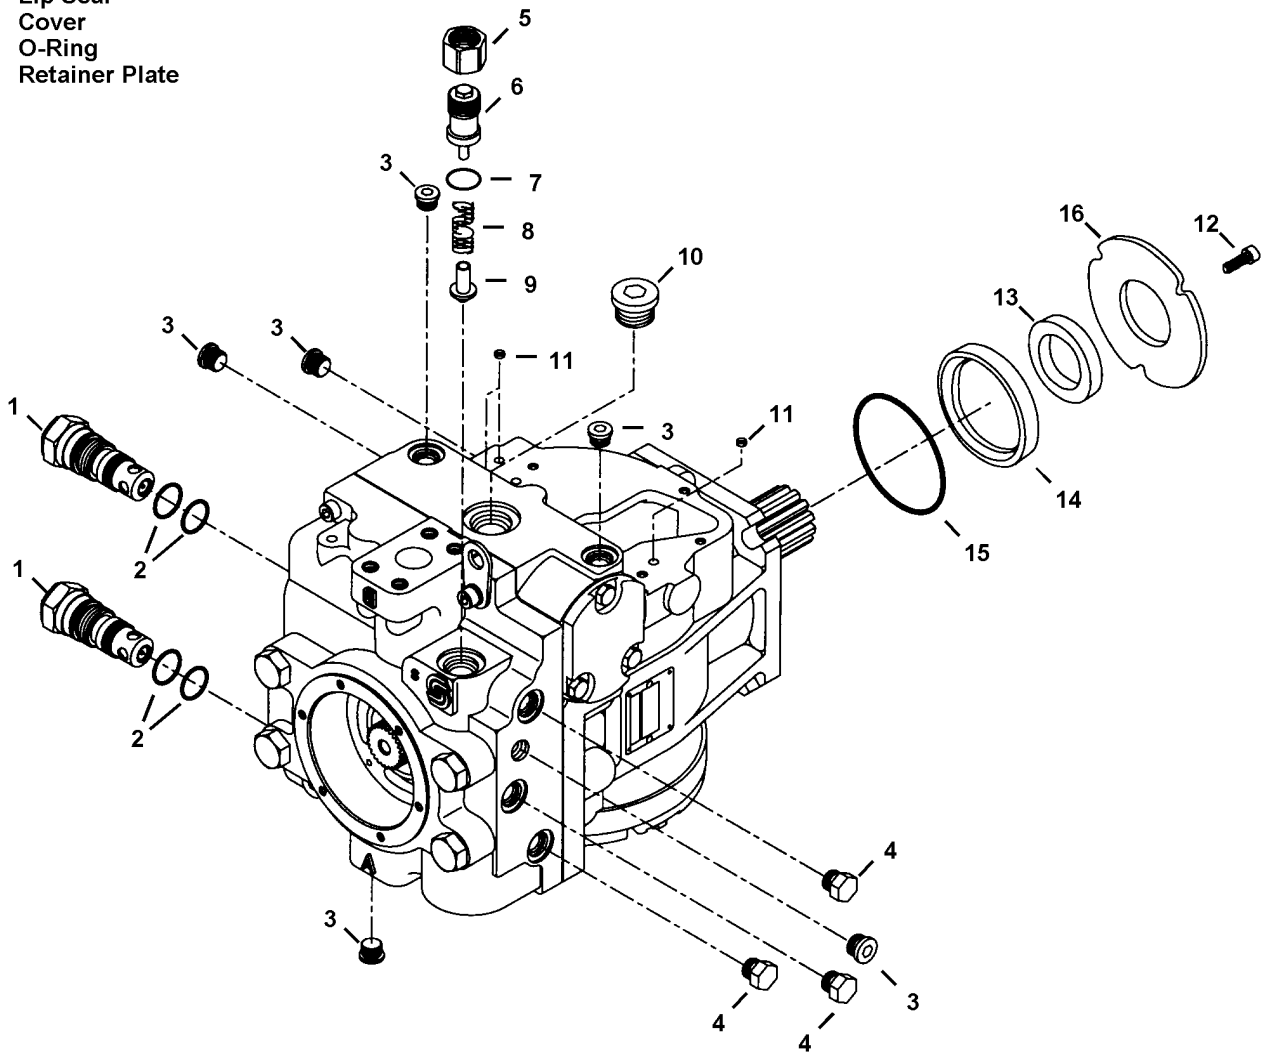


B-15899

HYDROSTATIC PUMP (CONT'D)

Parts Identification (Cont'd)


1. Bolt
2. Bolt
3. Bolt
4. Solenoid
5. Gasket
6. Plug

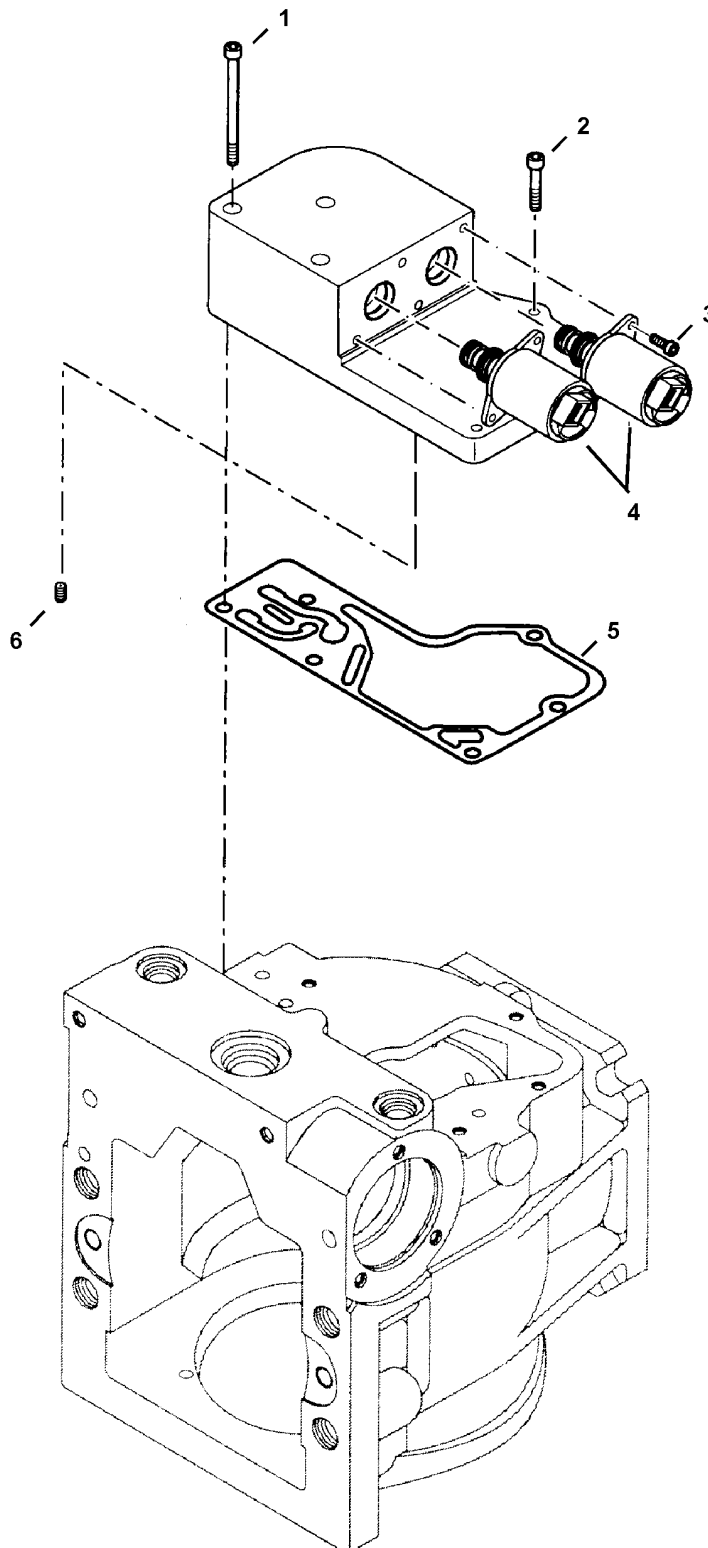

B-15900

CUSTOMER PACKING LIST

Parts Identification (Cont'd)

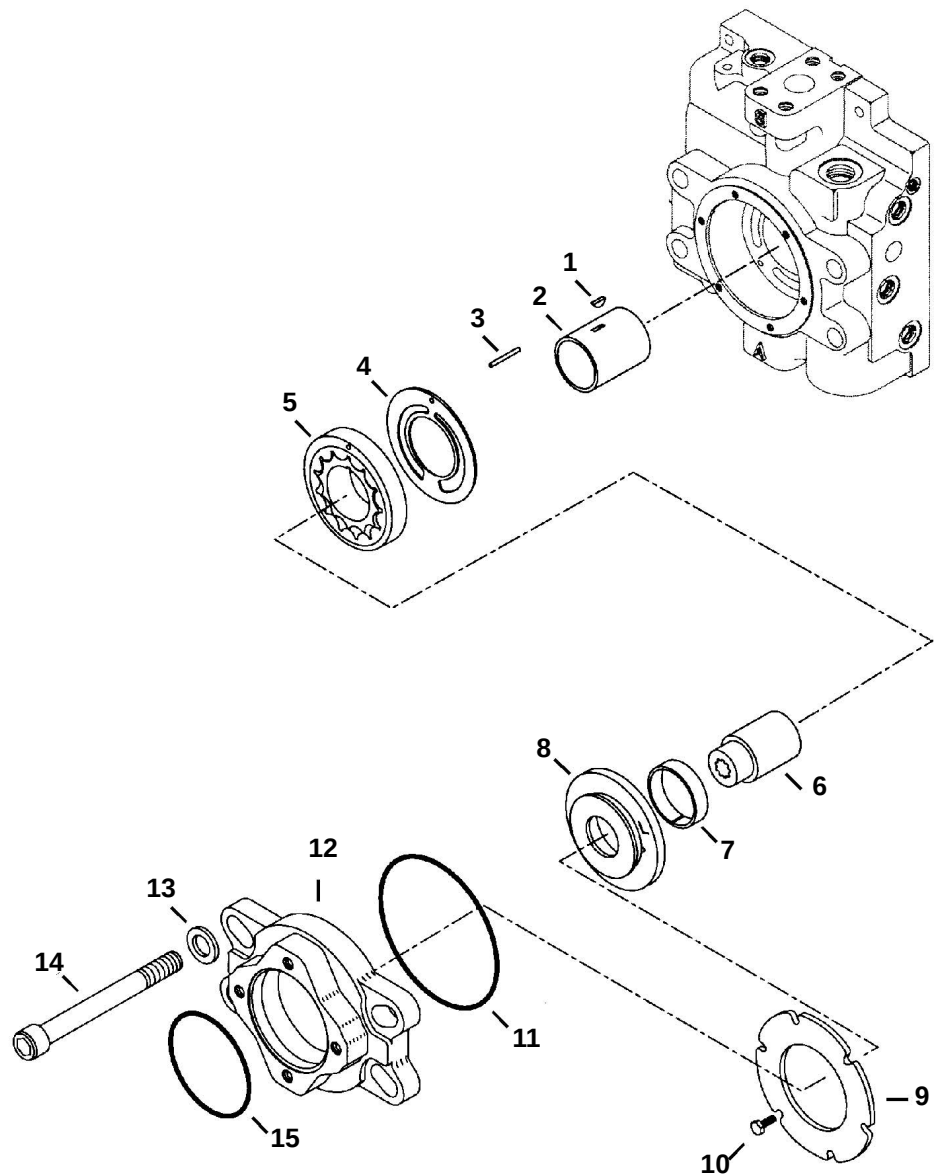


1. Key
2. Charge Pump Shaft
3. Pin
4. Wear Plate
5. Gears
6. Coupling
7. Seal
8. Charge Pump Cover
9. Retaining Plate
10. Bolt
11. O-Ring
12. Flange Adapter
13. Washer
14. Bolt
15. O-Ring

B-23195

HYDROSTATIC PUMP (CONT'D)

Parts Identification (Cont'd)


1. Valve Plate
2. Retaining Ring
3. Spring Retainer
4. Spring
5. Spring Seat
6. Cylinder
7. Bolt
8. Slipper Guide Bearing
9. Spacer
10. Slipper Guide
11. Piston
12. Bolt
13. Bolt
14. Block
15. Spring
16. Servo Arm
17. Pin
18. Washer
19. Swash Plate Guide
20. Pin
21. Housing
22. Swash Plate
23. Bearing Assembly
24. Pin
25. Housing

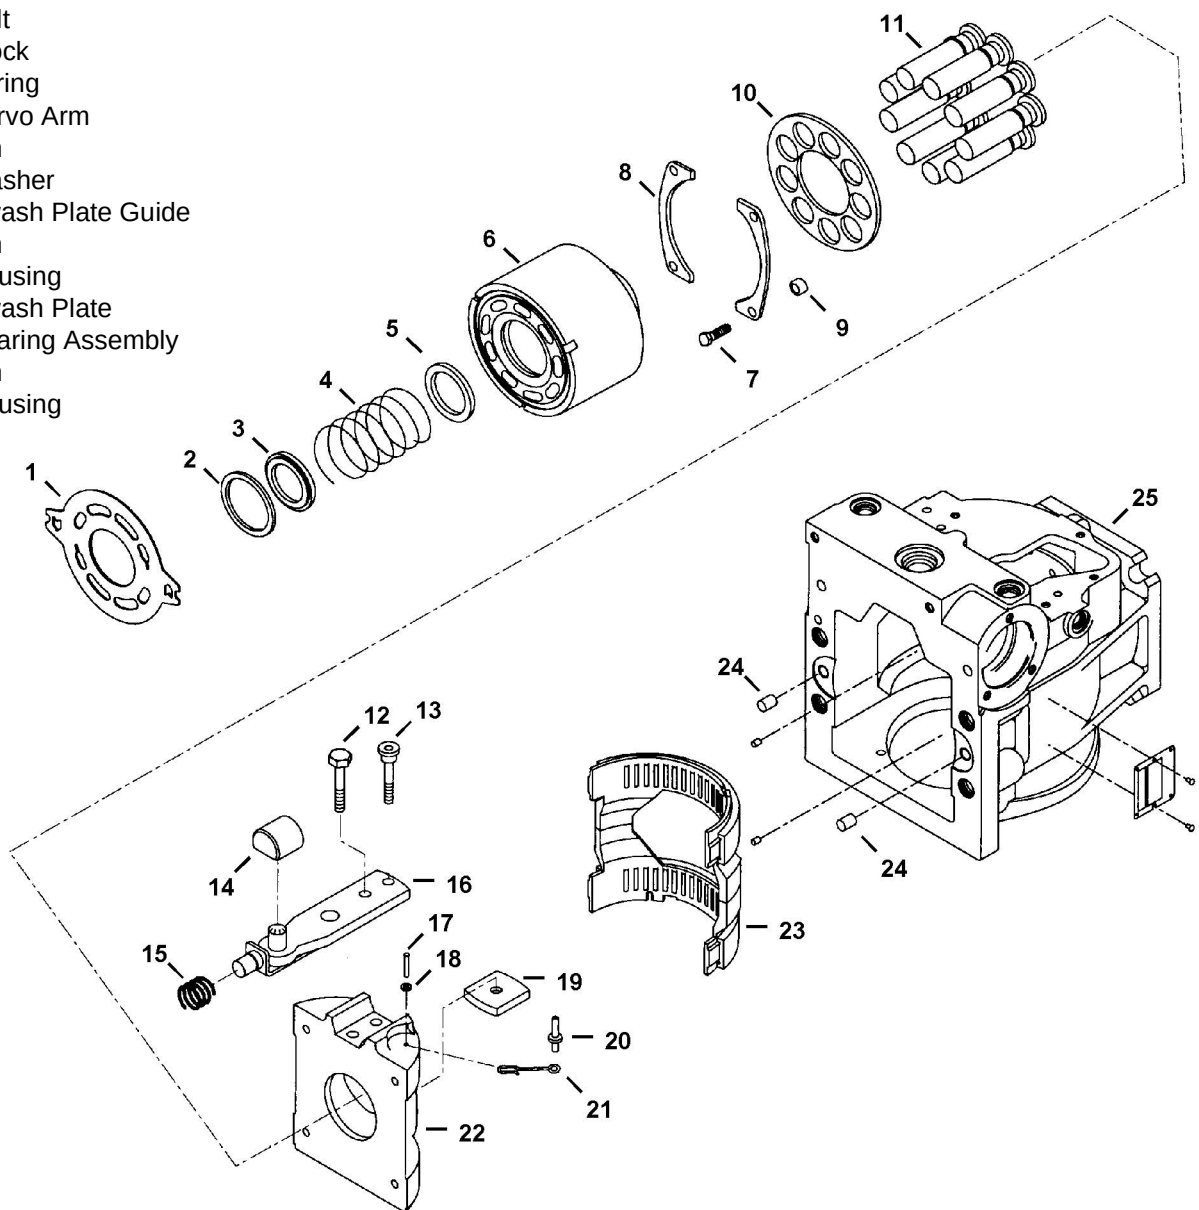

B-19856

HYDROSTATIC PUMP (CONT'D)

Parts Identification (Cont'd)

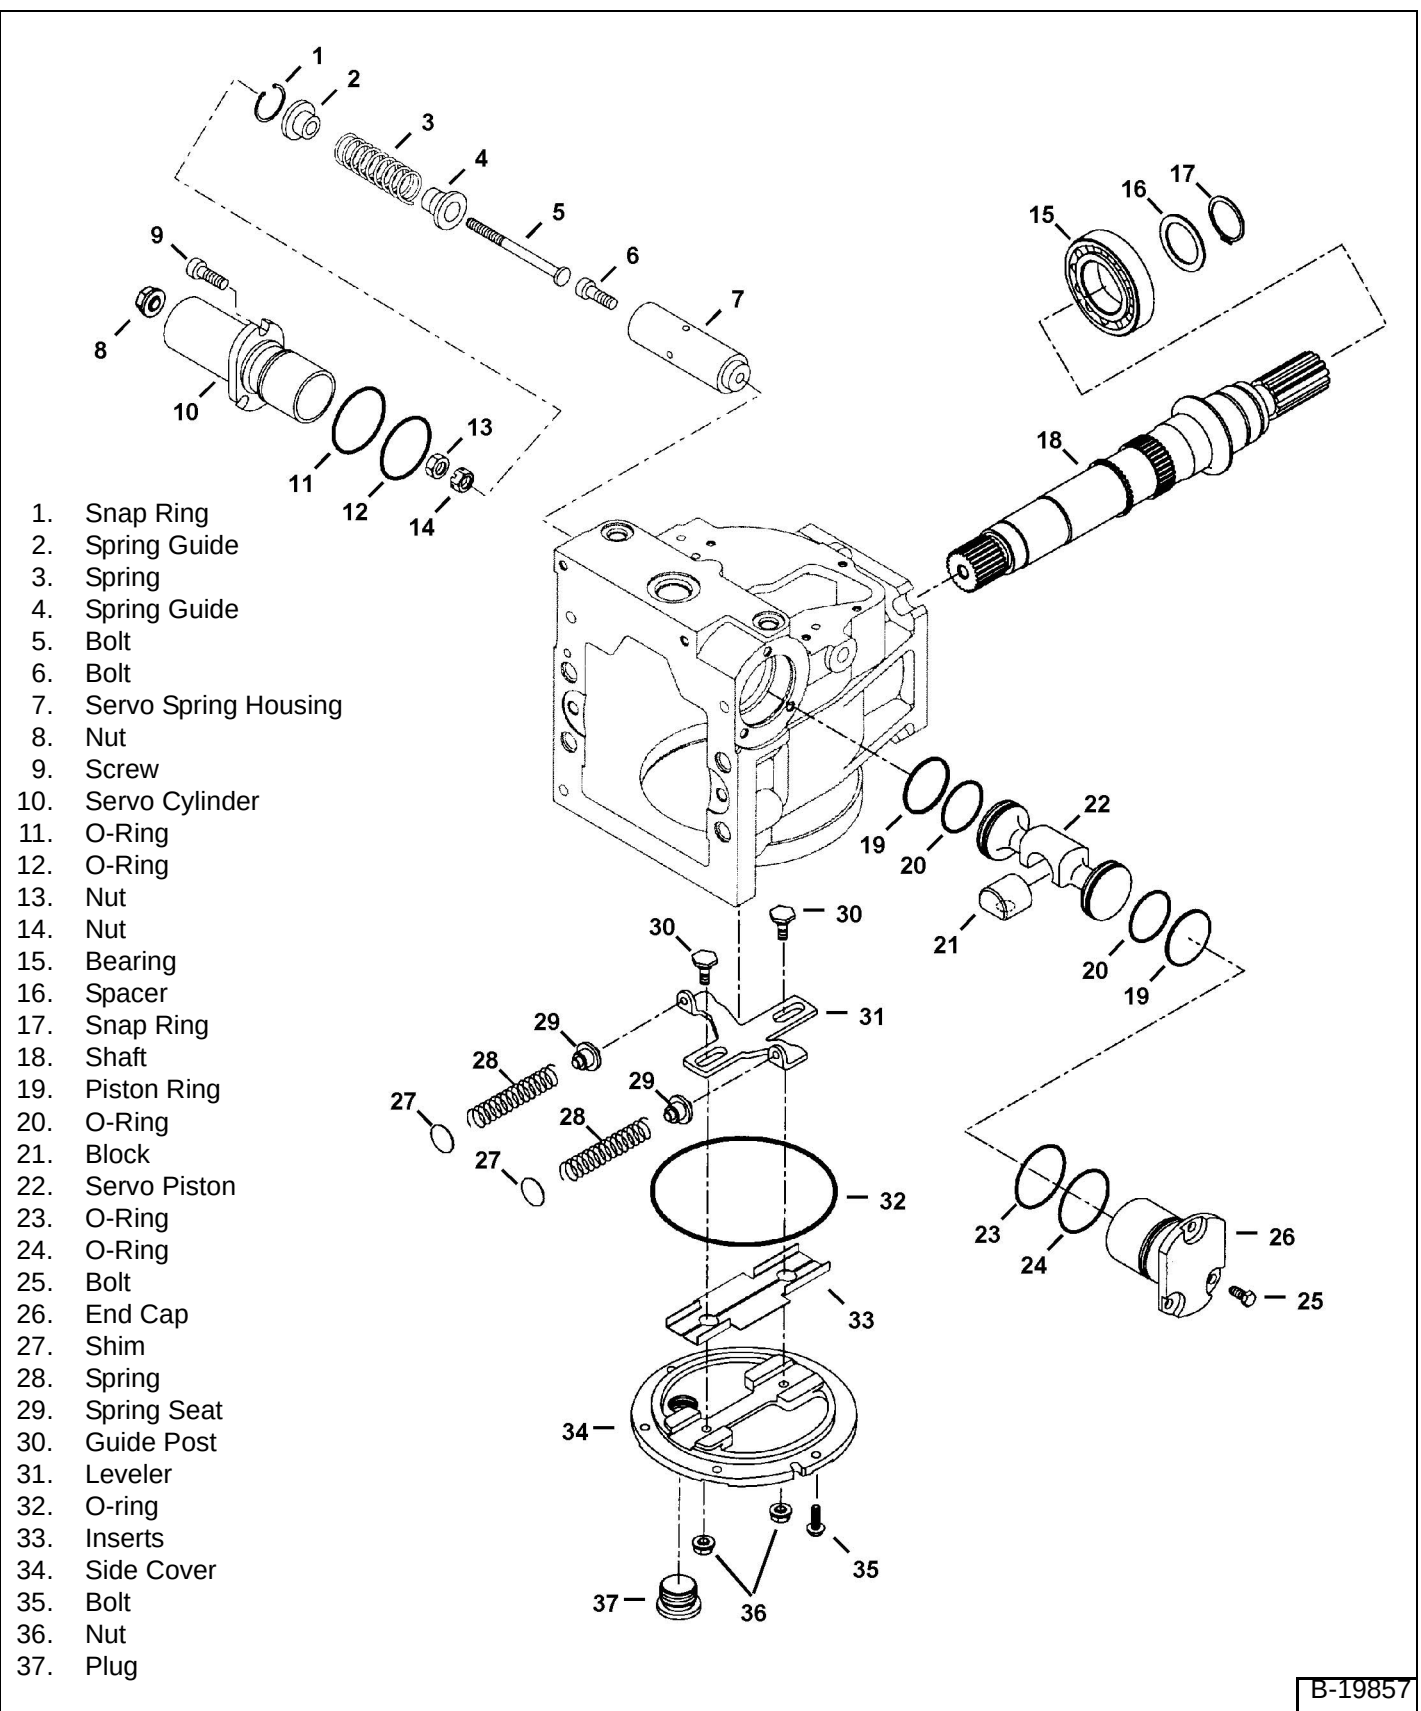

B-19857

HYDROSTATIC PUMP (CONT'D)


Disassembly

IMPORTANT

When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.


I-2003-0888

Figure 30-40-11

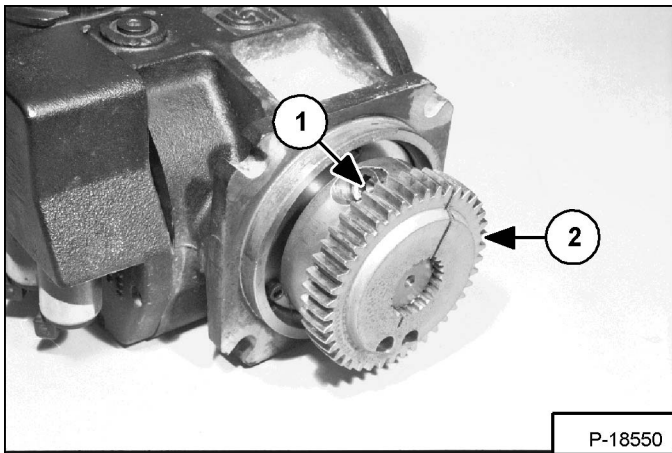

Remove the retainer bolt (Item 1). Remove the coupler gear (Item 2) [Figure 30-40-11] from the shaft.


Figure 30-40-12

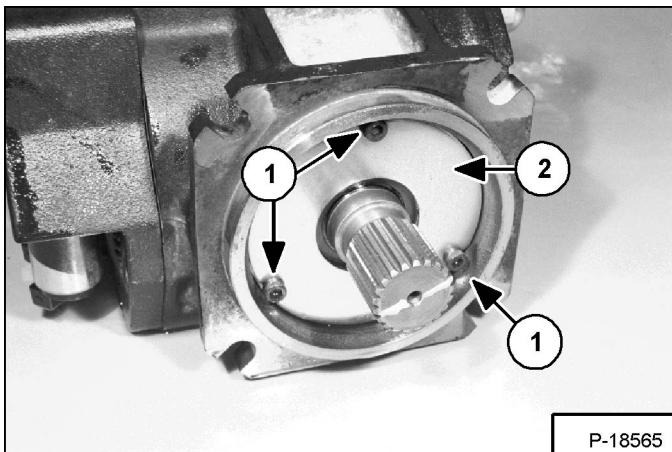

Remove the three screws (Item 1) [Figure 30-40-12].

Remove the retainer plate (Item 2) [Figure 30-40-12] from the pump housing.


Figure 30-40-13

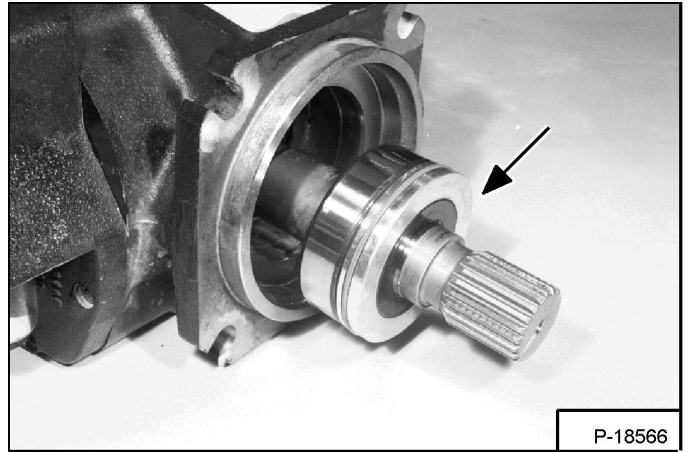

Remove the shaft and bearing assembly from the housing [Figure 30-40-13].

NOTE: If the shaft or bearing assembly become stuck in the housing, lightly tap on the shaft.

Figure 30-40-14

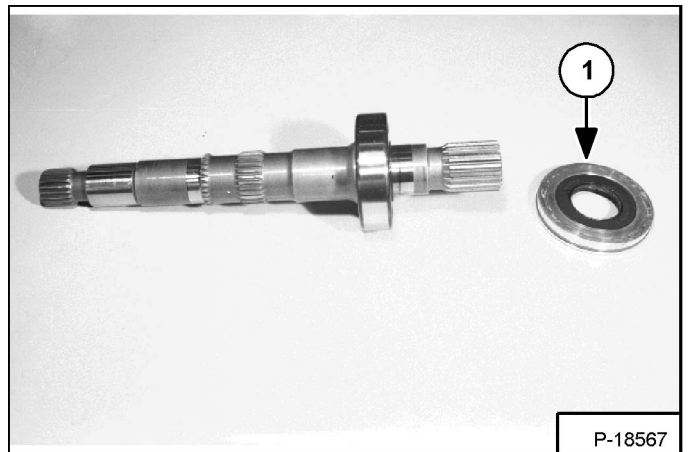


Remove the shaft seal (Item 1) [Figure 30-40-14] from the shaft.

HYDROSTATIC PUMP (CONT'D)


Disassembly (Cont'd)

Figure 30-40-15

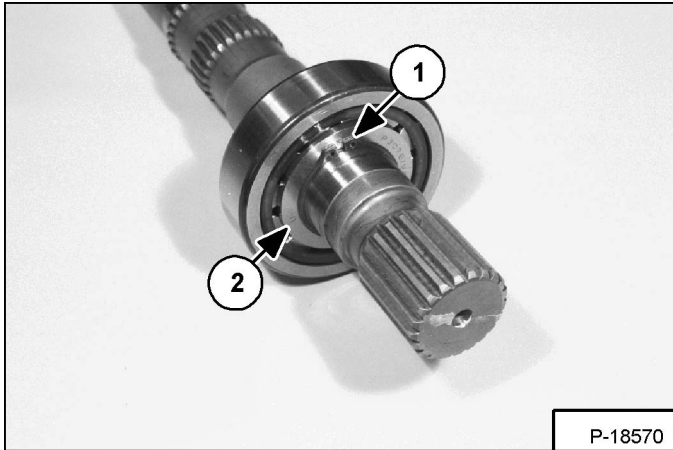

Remove the snap ring (Item 1) and spacer washer (Item 2) [Figure 30-40-15] from the shaft.

Figure 30-40-16

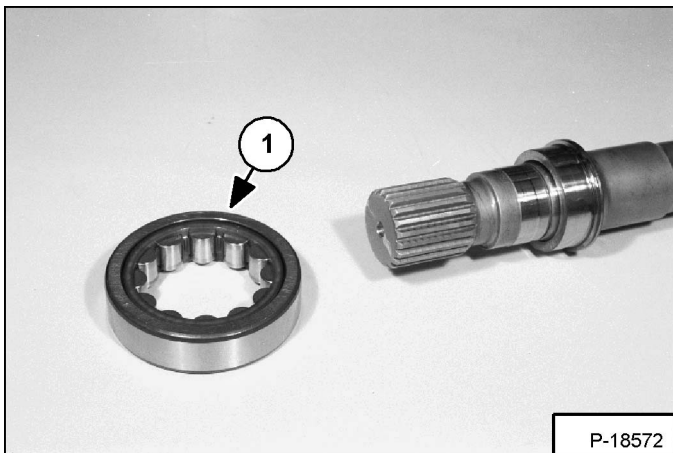


Remove the bearing (Item 1) [Figure 30-40-16] from the shaft.

Place the pump on the work surface with the charge pump up.

Mark the pump housings for correct assembly.


Before removing the relief valve mark the plug, lock nut and housing for approximate assembly adjustment.

Figure 30-40-17

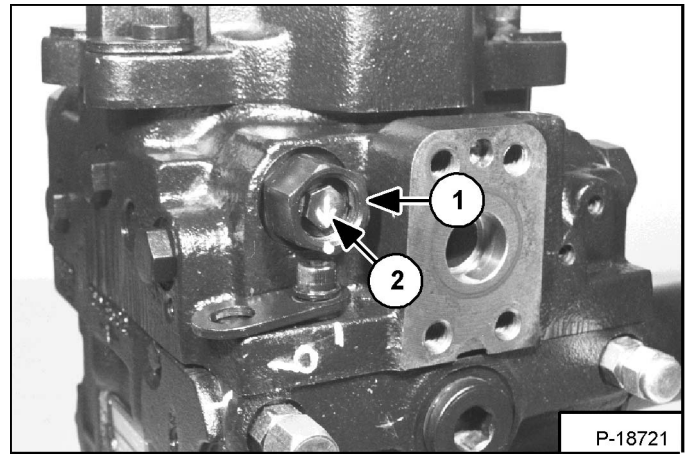

Remove the relief valve lock nut (Item 1) and the plug (Item 2) [Figure 30-40-17].

Figure 30-40-18

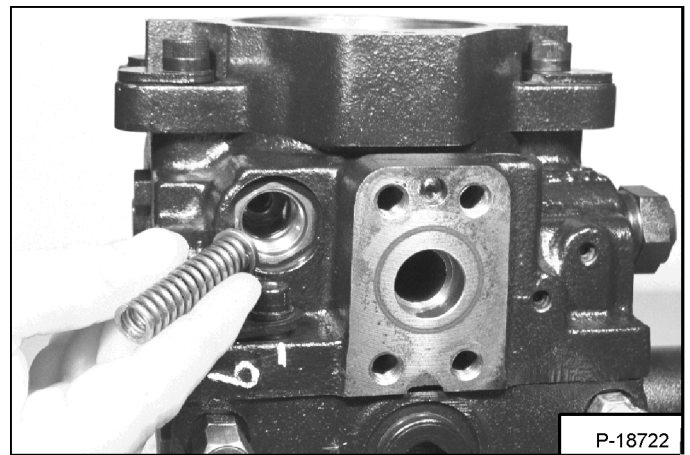


Remove the spring and relief poppet from the charge pump housing [Figure 30-40-18].

HYDROSTATIC PUMP (CONT'D)

Disassembly (Cont'd)


Figure 30-40-19

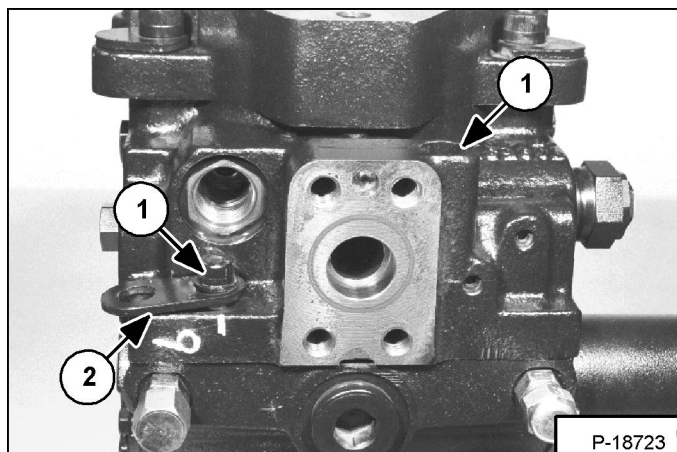

Remove the two mounting bolts (Item 1) [Figure 30-40-19].

NOTE: Remove the lifting bracket (Item 2) [Figure 30-40-19] from the pump.


Figure 30-40-20

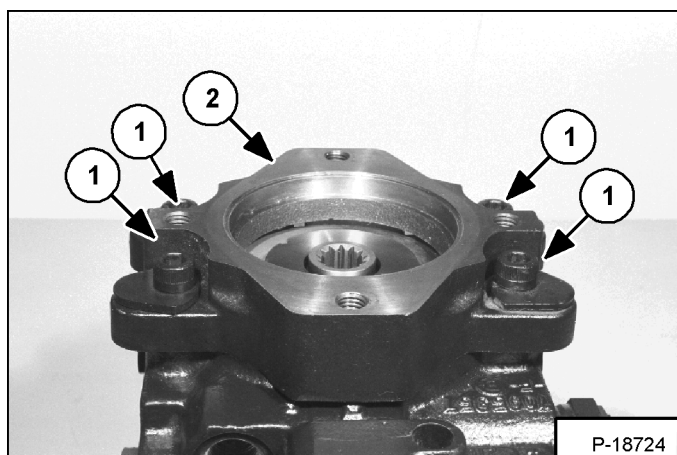

Remove the four mounting bolts (Item 1) [Figure 30-40-20] from the flange adapter.


Remove the flange adapter (Item 2) [Figure 30-40-20].

Figure 30-40-21

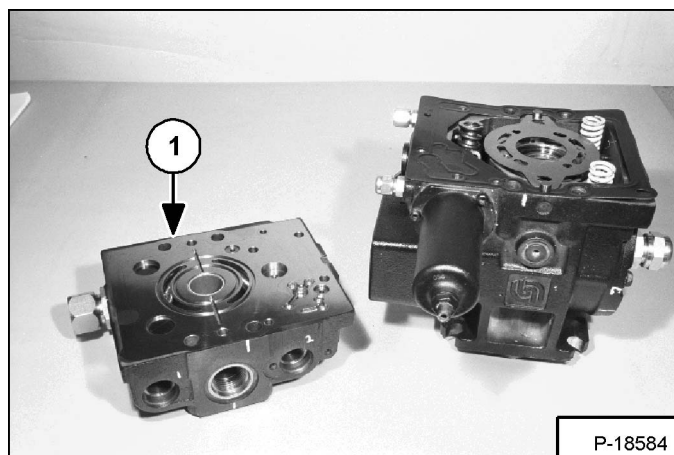

Lift and remove the charge pump (Item 1) [Figure 30-40-21] from the pump housing.

Figure 30-40-22

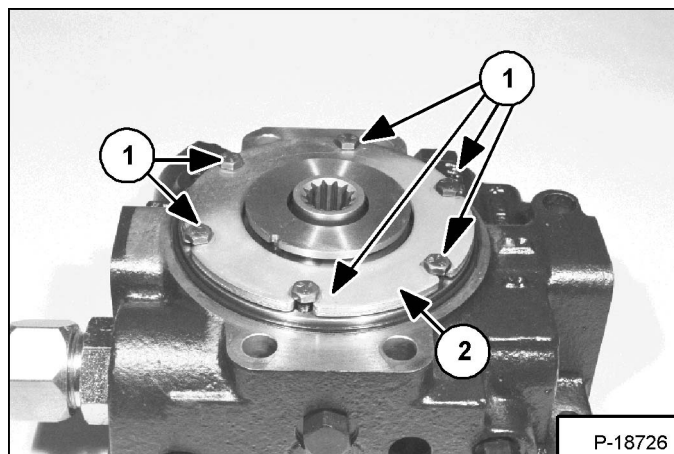


Remove the six bolts (Item 1) and remove the retaining plate (Item 2) [Figure 30-40-22] from the charge pump.

HYDROSTATIC PUMP (CONT'D)


Disassembly (Cont'd)

Figure 30-40-23

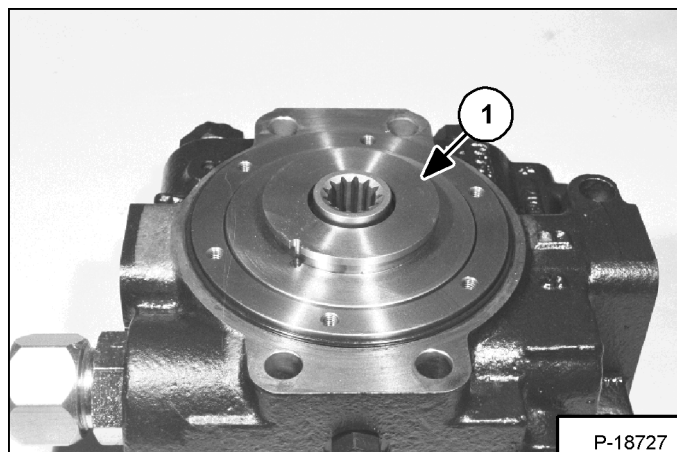


Remove the charge pump cover (Item 1) [Figure 30-40-23].

Figure 30-40-24

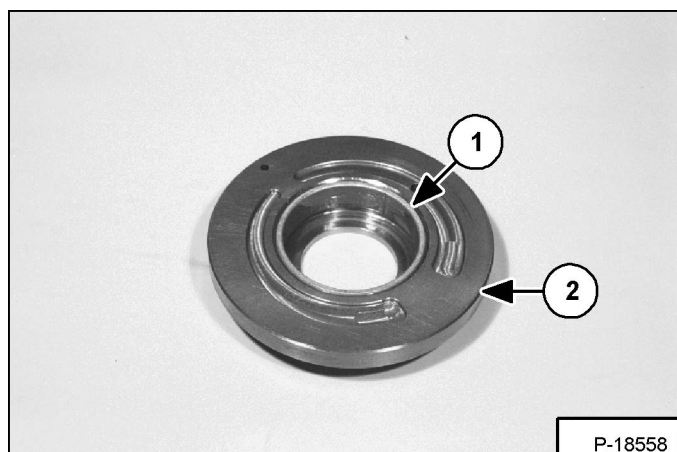


Only if wear marks are present, remove the bushing (Item 1) from the charge pump cover (Item 2) [Figure 30-40-24].

Figure 30-40-25

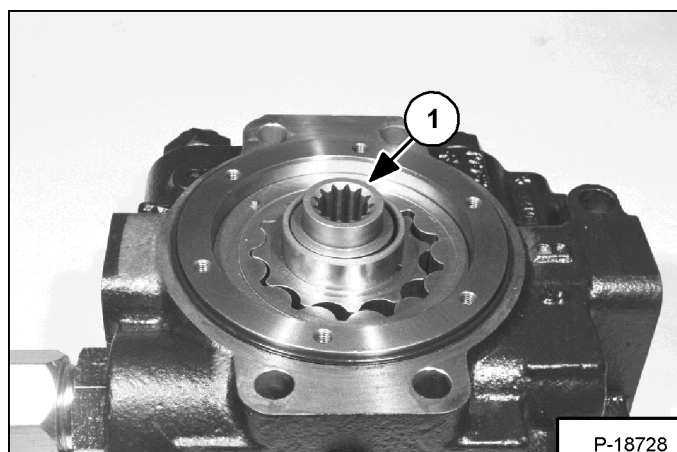

Remove the coupler (Item 1) [Figure 30-40-25].

Figure 30-40-26

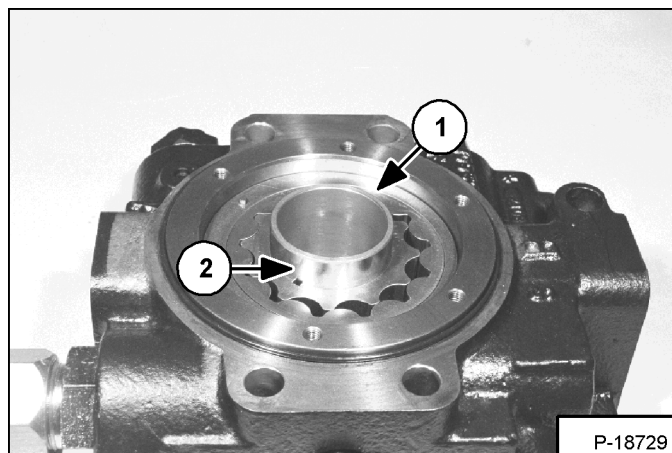


Remove the charge pump shaft (Item 1) and key (Item 2) [Figure 30-40-26] from the pump.

HYDROSTATIC PUMP (CONT'D)


Disassembly (Cont'd)

Figure 30-40-27

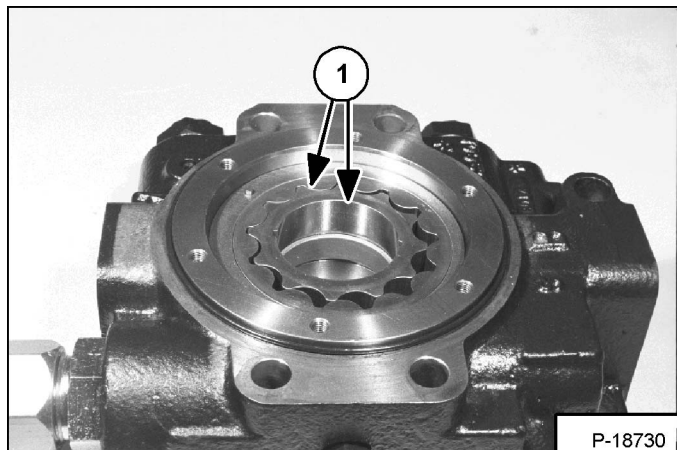

Remove the charge pump gears (Item 1) [Figure 30-40-27].


Figure 30-40-28

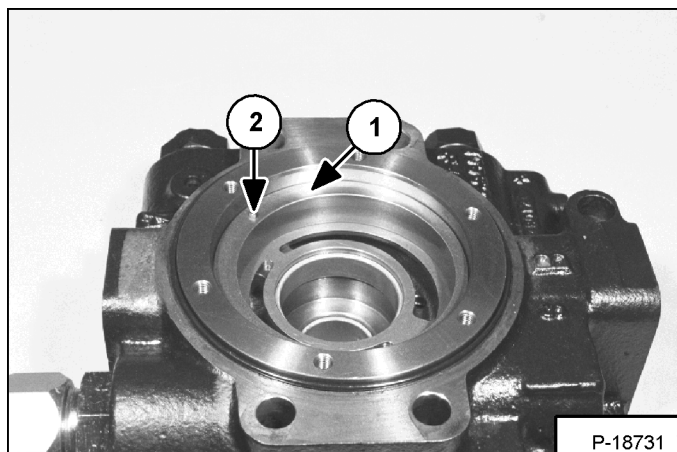

Remove the eccentric ring (Item 1) and alignment pin (Item 2) [Figure 30-40-28] from the pump.

Note the position of the alignment pin.


Figure 30-40-29

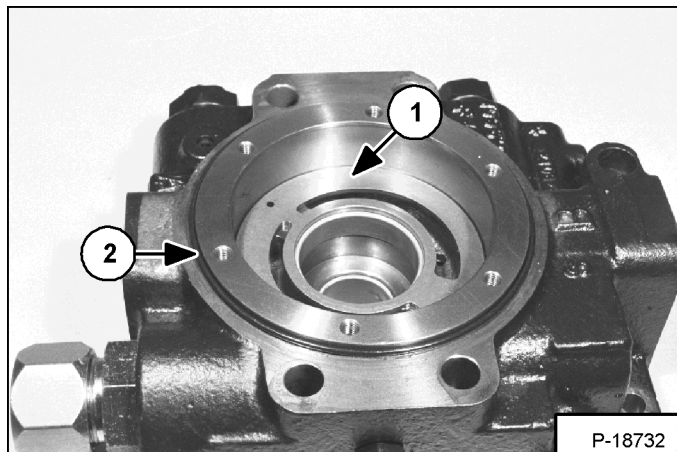

Remove the charge pump wear plate (Item 1) [Figure 30-40-29].

Remove the O-ring (Item 2) [Figure 30-40-29].

Figure 30-40-30

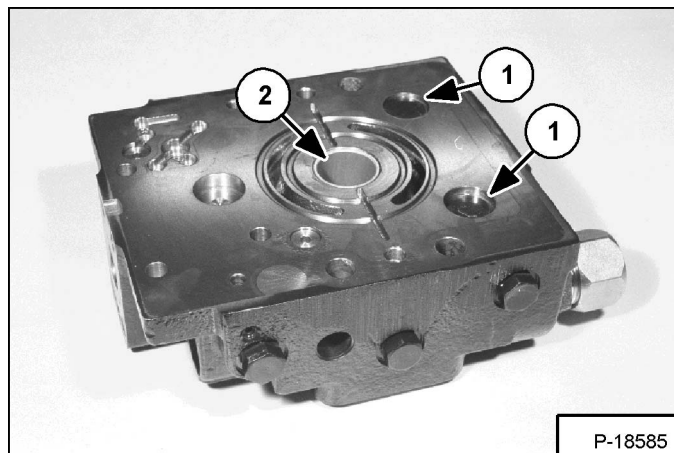


Remove the swash plate leveler spring shims (Item 1) [Figure 30-40-30] from the spring pockets.

Inspect the journal bearing (Item 2) [Figure 30-40-30]. Replace as needed.

HYDROSTATIC PUMP (CONT'D)

Disassembly (Cont'd)


Figure 30-40-31

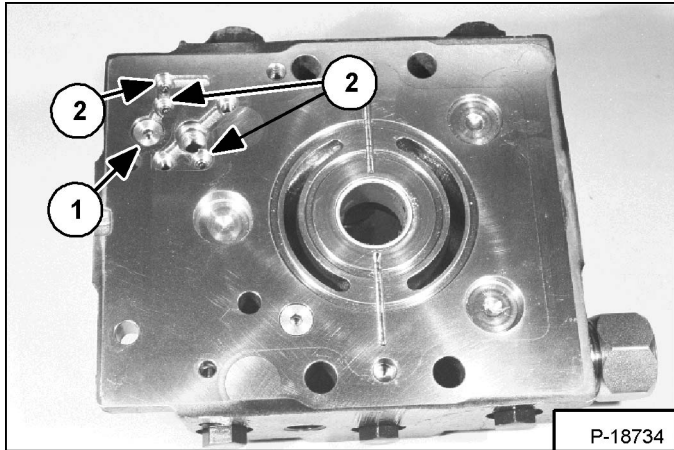

For proper operation, if the plugs (Item 1) & (Item 2) [Figure 30-40-31] are removed from the housing they must be returned to their original position.


Installation: Tighten the servo relief valve plug (Item 1) to 9 ft.-lbs. (12 Nm) torque. Tighten the rotation pipe plugs (Item 2) [Figure 30-40-31] to 4 ft.-lbs. (5.4 Nm) torque.

Figure 30-40-32

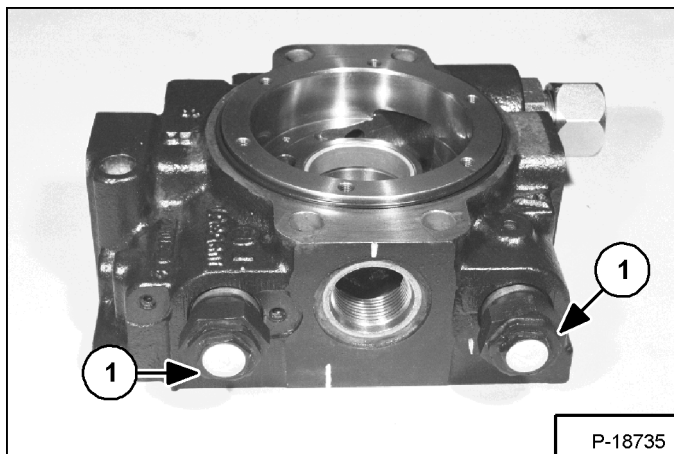


Remove the multi-function valve assemblies (Item 1) [Figure 30-40-32] from the housing.

Figure 30-40-33

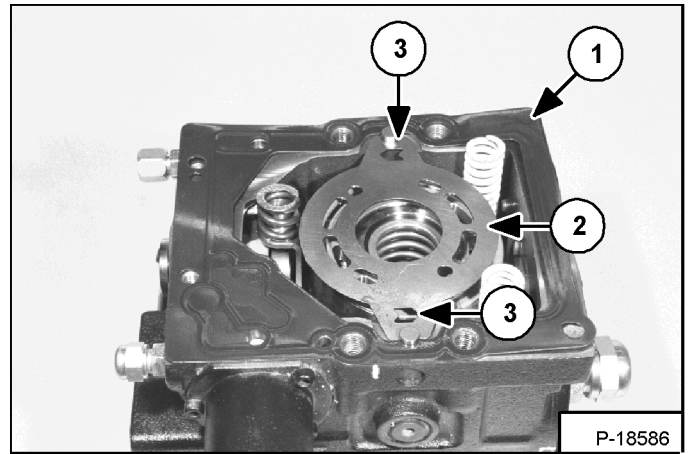

Remove the gasket (Item 1) and the valve plate (Item 2) from the housing. Note the direction of the arrows (Item 3) [Figure 30-40-33] on the valve plate for proper assembly.

Figure 30-40-34

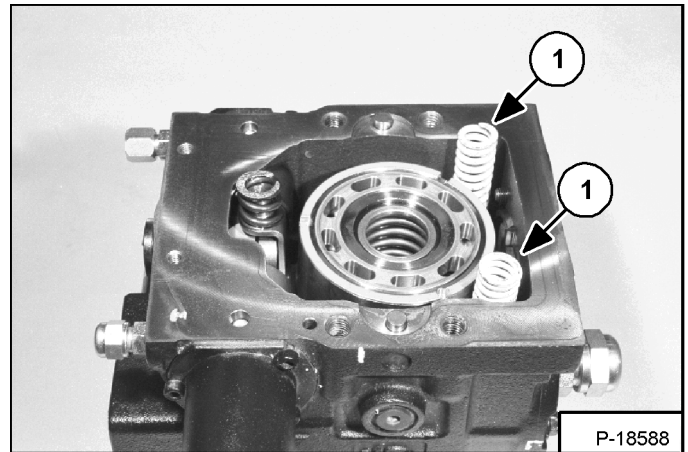


Remove the two leveler springs (Item 1) [Figure 30-40-34].

HYDROSTATIC PUMP (CONT'D)


Disassembly (Cont'd)

Figure 30-40-35

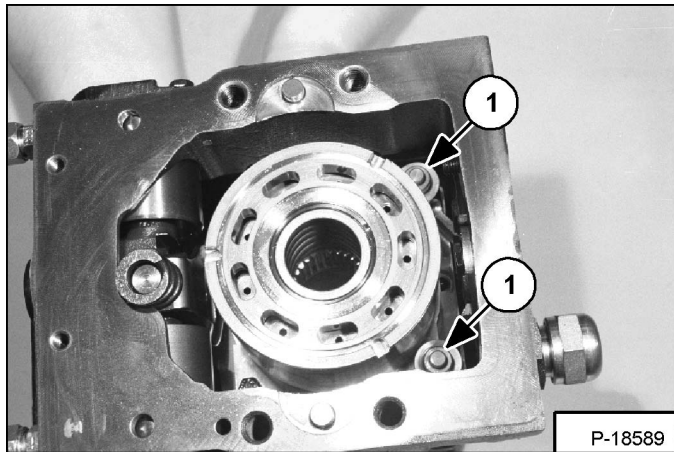

Remove both spring seats (Item 1) [Figure 30-40-35] from the swash plate leveler.


Figure 30-40-36

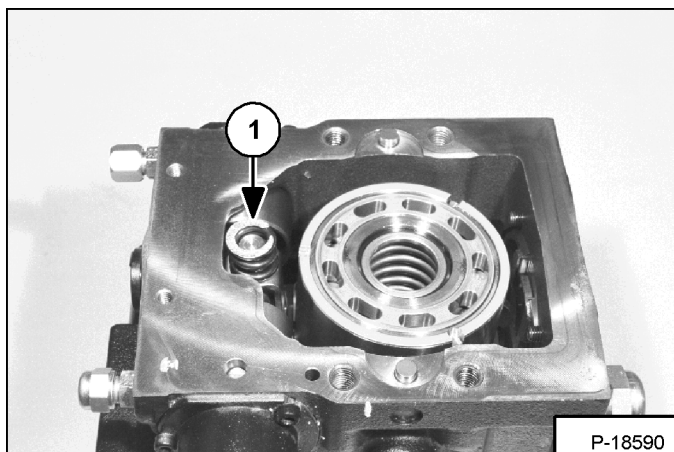

Remove the swash plate hold down spring (Item 1) [Figure 30-40-36].


Mark the position of the side cover.

Figure 30-40-37

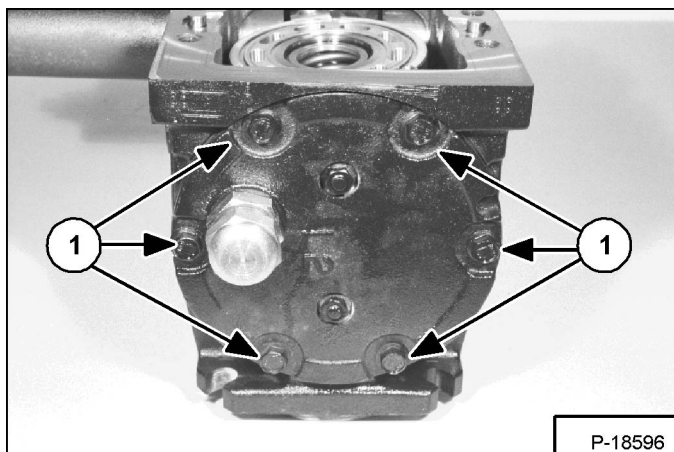

Remove the six bolts (Item 1) [Figure 30-40-37] from the side cover.

Figure 30-40-38

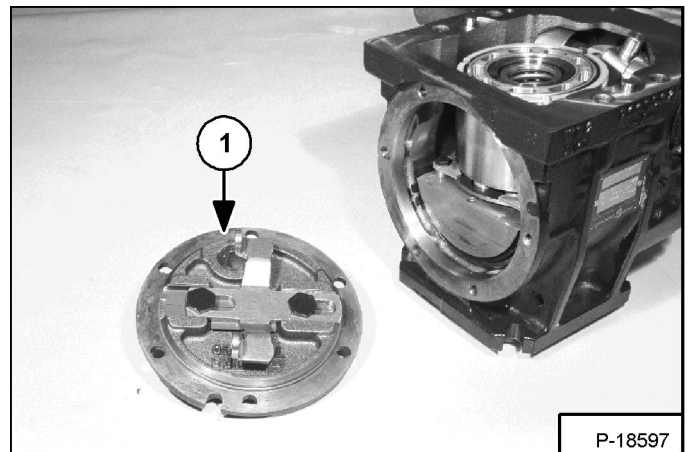


Remove the side cover/swash plate leveler assembly from the housing [Figure 30-40-38].

HYDROSTATIC PUMP (CONT'D)


Disassembly (Cont'd)

Figure 30-40-39

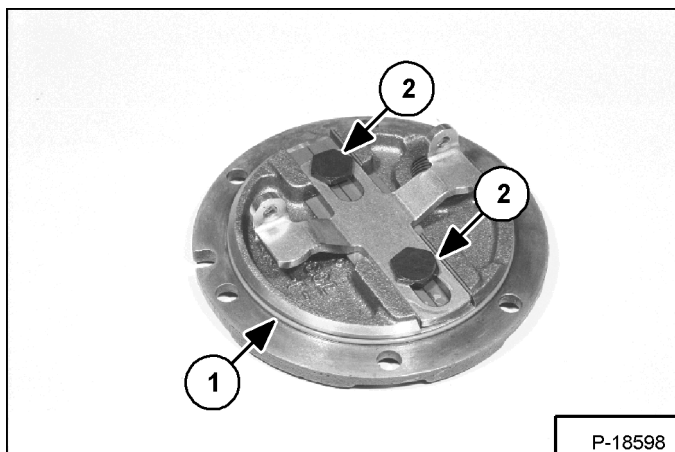

Remove and discard the O-ring (Item 1). Loosen and remove both guide posts (Item 2) [Figure 30-40-39].

Figure 30-40-40

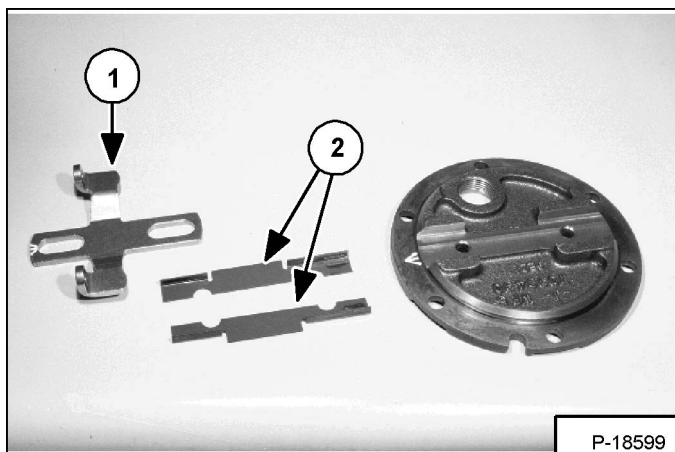


Remove the leveler (Item 1) and slide inserts (Item 2) [Figure 30-40-40] from the side cover.

Inspect the slide inserts for wear or damage.


Replace if needed.

Figure 30-40-41

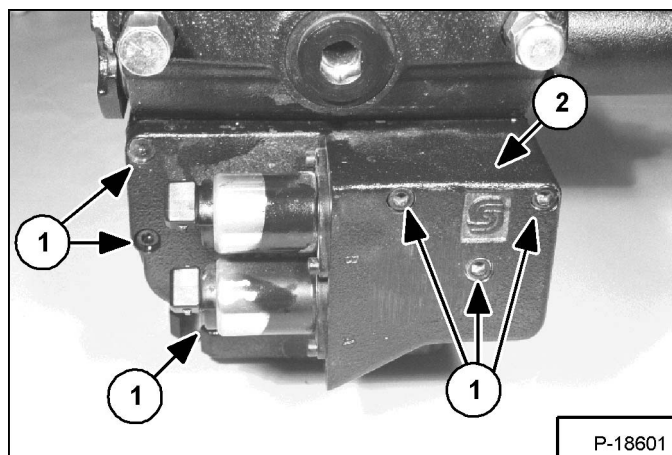

Remove the six solenoid manifold mounting screws (Item 1). Remove the manifold (Item 2) [Figure 30-40-41].

Figure 30-40-42

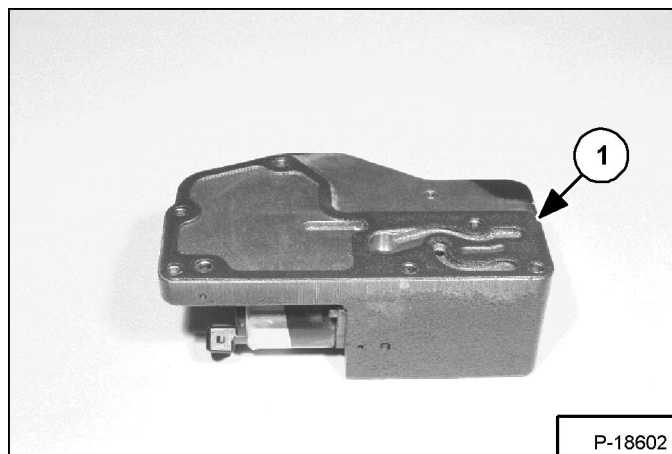


Remove the gasket (Item 1) [Figure 30-40-42] from the manifold.

HYDROSTATIC PUMP (CONT'D)


Disassembly (Cont'd)

Figure 30-40-43

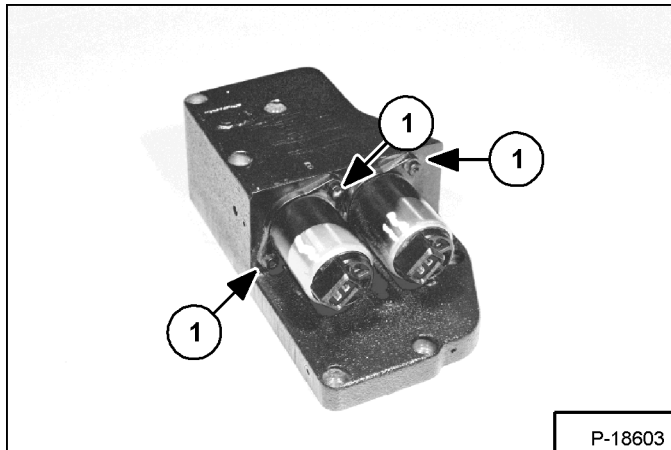


Remove the four solenoid mounting screws (Item 1) [Figure 30-40-43].

Figure 30-40-44

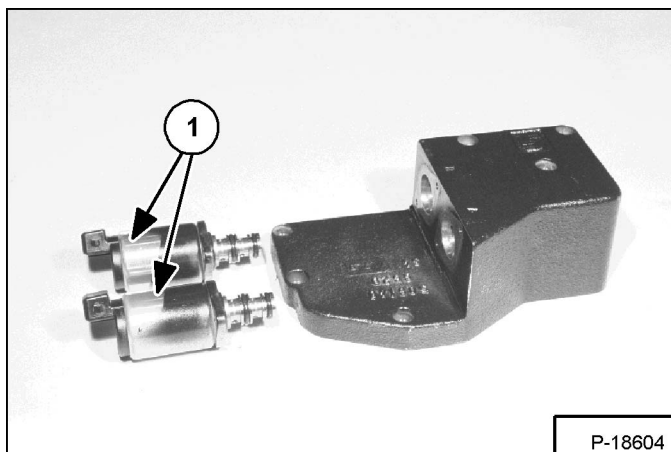


Remove the solenoids (Item 1) [Figure 30-40-44] from the manifold.

Figure 30-40-45

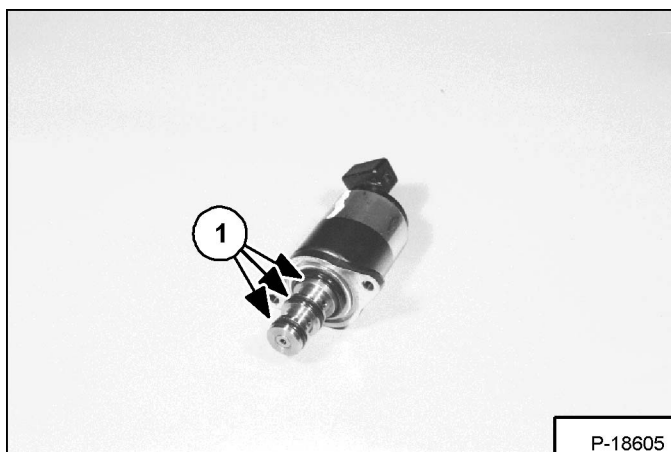

Remove and discard the three O-rings (Item 1) [Figure 30-40-45] from the solenoid.

Figure 30-40-46

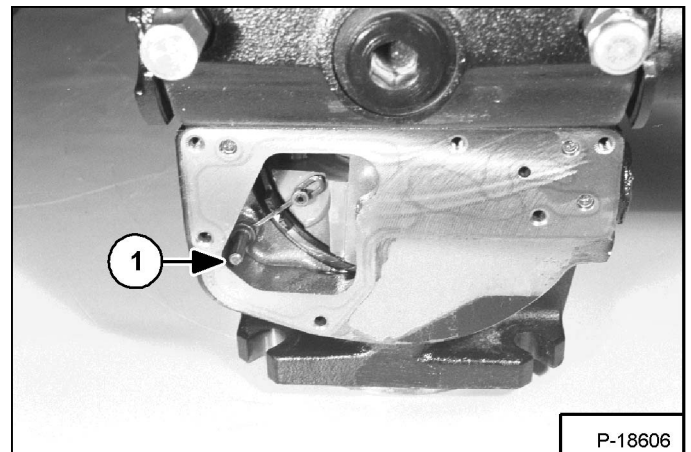


Remove the anchor pin (Item 1) [Figure 30-40-46].

HYDROSTATIC PUMP (CONT'D)


Disassembly (Cont'd)

Figure 30-40-47

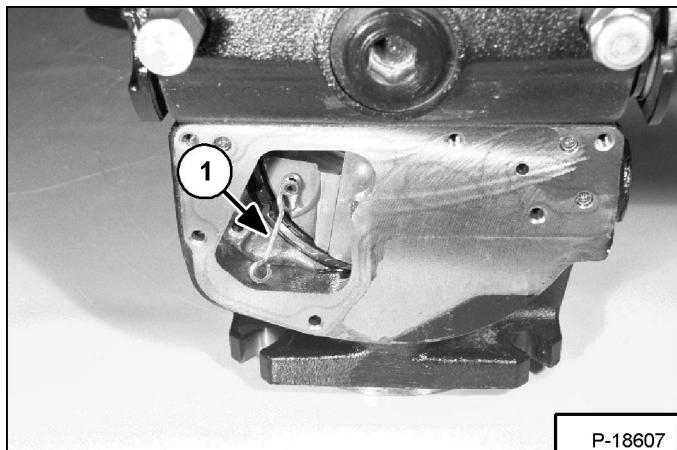


Remove the cage locator link (Item 1) [Figure 30-40-47] from the swash plate.

Figure 30-40-48

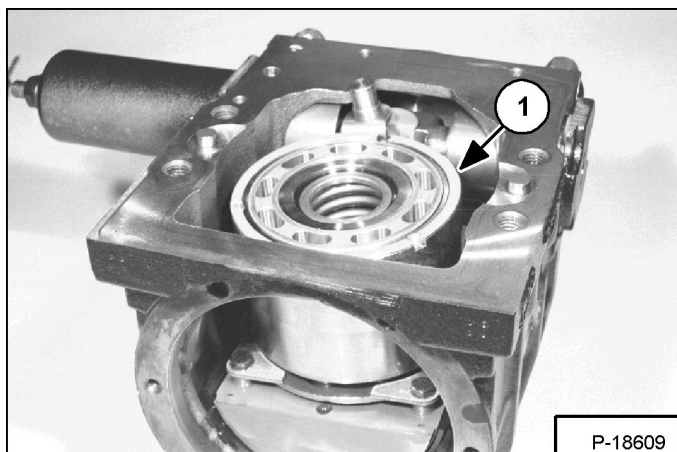


Remove the cylinder block (Item 1) [Figure 30-40-48] through the housing end opening. The swash plate and piston assembly will remain in the housing.

Figure 30-40-49

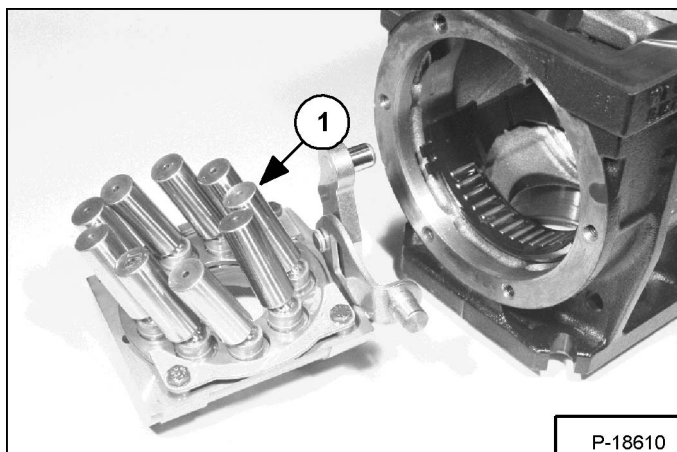

Remove the swash plate/piston assembly (Item 1) [Figure 30-40-49] from the pump housing.

Figure 30-40-50

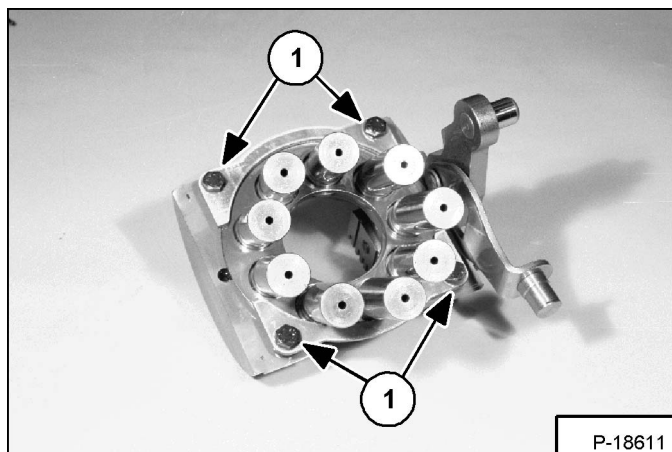


Remove the four slipper guide bearing retainer bolts (Item 1) [Figure 30-40-50].

HYDROSTATIC PUMP (CONT'D)


Disassembly (Cont'd)

Figure 30-40-51

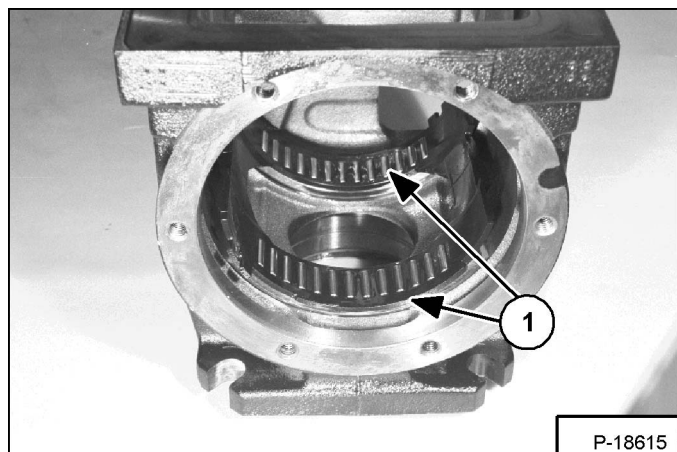


Remove the swash plate bearings (Item 1) [Figure 30-40-51] from the housing.

Figure 30-40-52

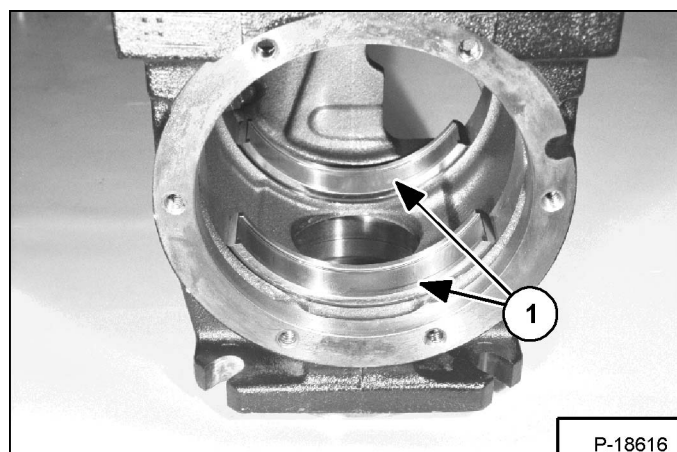

Remove the swash plate bearing races (Item 1) [Figure 30-40-52] from the housing.


Figure 30-40-53

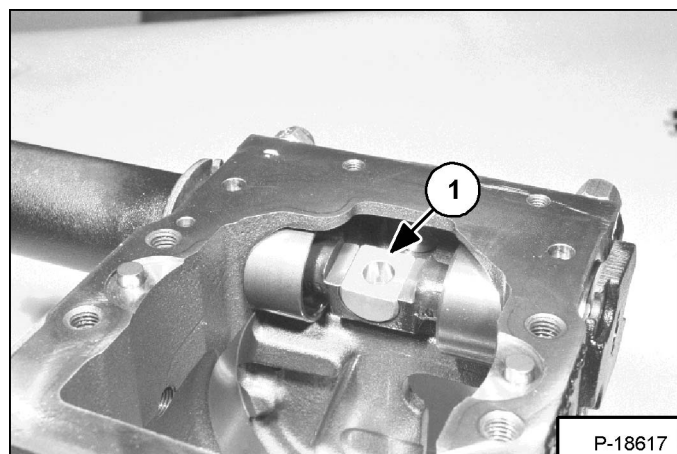

Remove the bronze slider block (Item 1) [Figure 30-40-53] from the servo piston.

Mark the position of the servo end covers.

Figure 30-40-54

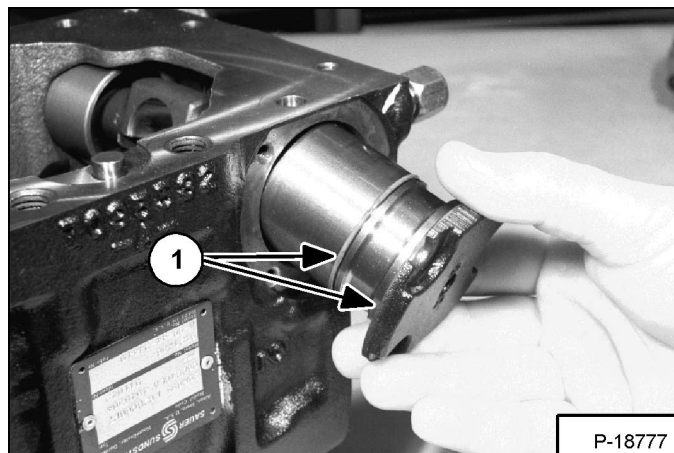


Remove the three bolts and remove the servo end cover. Remove and discard both O-rings (Item 1) [Figure 30-40-54].

HYDROSTATIC PUMP (CONT'D)


Disassembly (Cont'd)

Figure 30-40-55

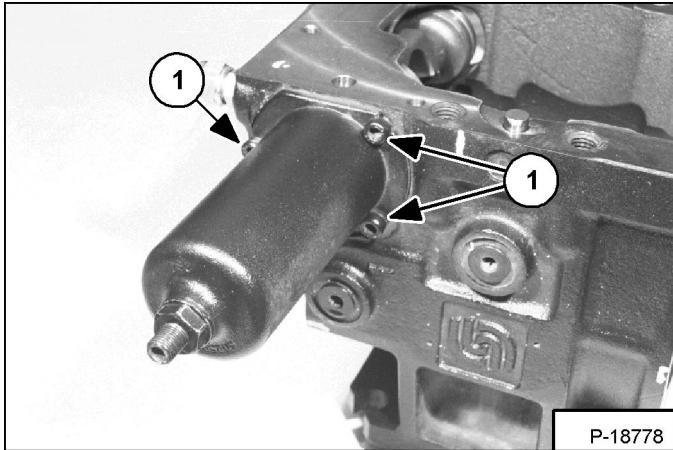


Remove the three screws (Item 1) [Figure 30-40-55] and remove the servo adjustment cover.

Figure 30-40-56

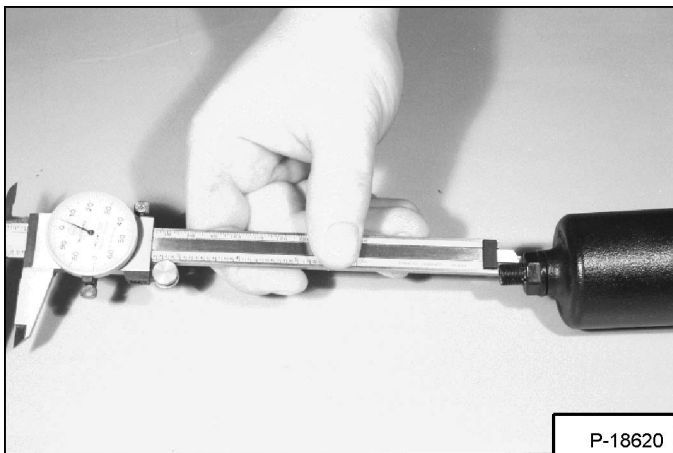

Measure and record the adjustment setting for approximate installation adjustment [Figure 30-40-56].

Figure 30-40-57

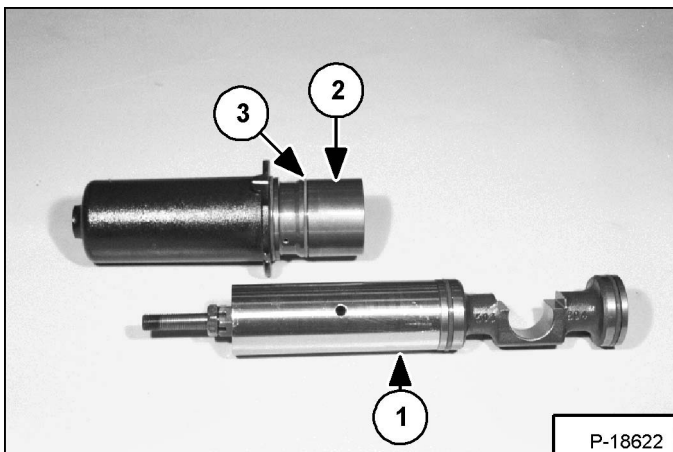

Remove the servo piston (Item 1) from the housing (Item 2) [Figure 30-40-57].


Remove and discard the O-ring (Item 3) [Figure 30-40-57].

HYDROSTATIC PUMP (CONT'D)

Inspection


Clean all parts in solvent and use air pressure to dry them. DO NOT use cloth or paper as small pieces of material can get into the system and cause damage.

Figure 30-40-58

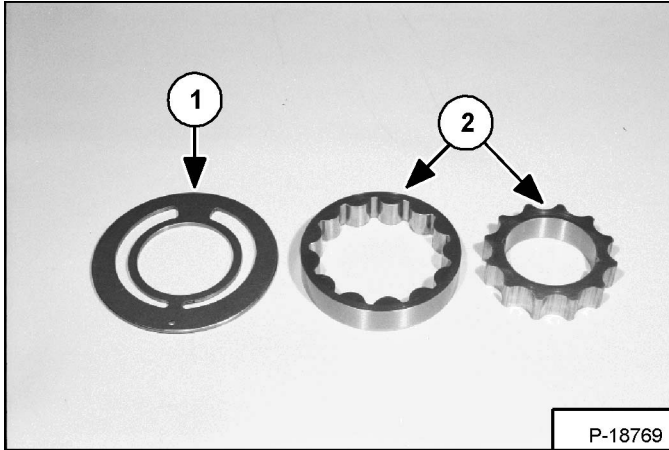


Check the wear plate (Item 1) and charge pump gears (Item 2) [Figure 30-40-58] for damage or wear.

Figure 30-40-59

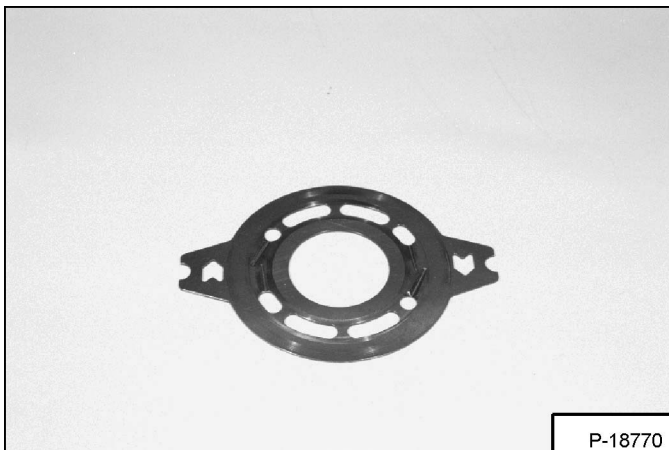

Check the valve plate [Figure 30-40-59], the surface must be smooth and free of scratches. If scratches can be felt with a finger nail, replace the part.


Figure 30-40-60

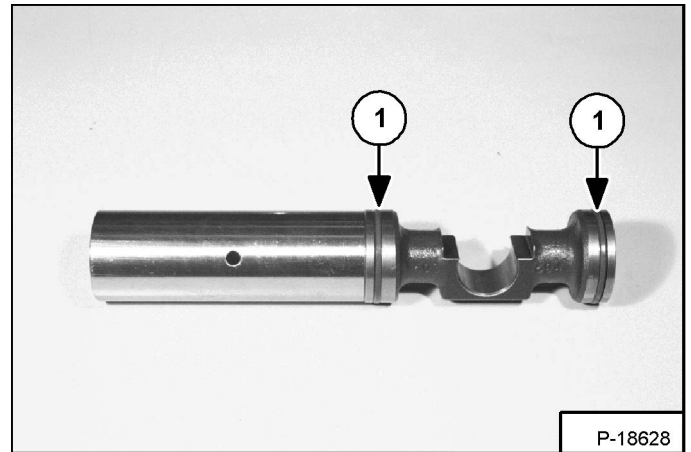

Inspect the servo piston and seal rings (Item 1) [Figure 30-40-60] for wear. If worn, remove the seal rings and expander O-rings from the piston.

Install new expander O-rings into the grooves in the servo piston. Carefully install the piston seal rings over the expander rings. Do not overstretch the piston seal rings.

Figure 30-40-61

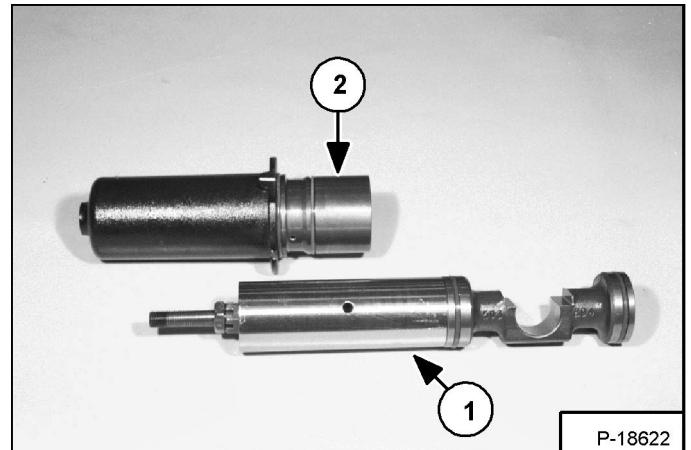


Lubricate the seal rings and carefully slide the servo piston (Item 1) into the cylinder (Item 2) [Figure 30-40-61]. Allow the assembly to set for 5 minutes to allow the seal rings to return to their original size.

HYDROSTATIC PUMP (CONT'D)


Inspection (Cont'd)

Figure 30-40-62

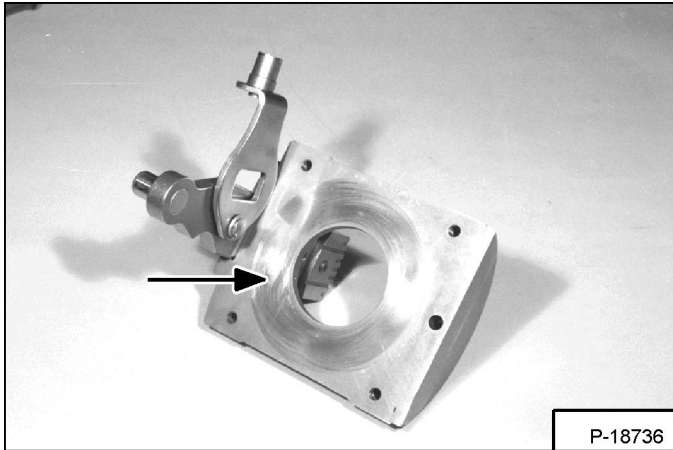

Check the swash plate assembly surface, it must be smooth and free of scratches [Figure 30-40-62].


Figure 30-40-63

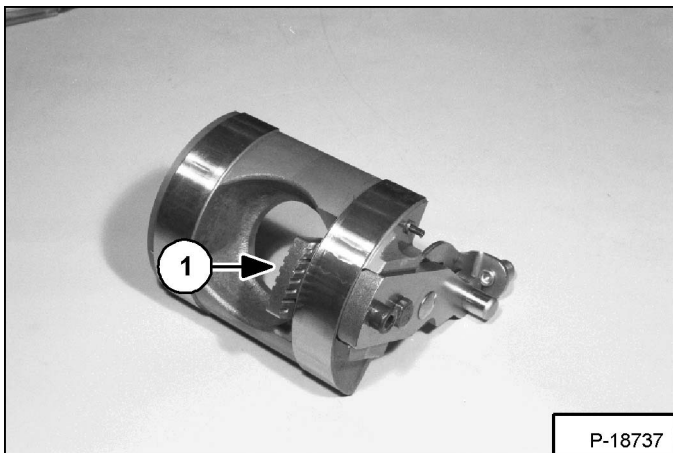

Inspect the swash plate guide (Item 1) [Figure 30-40-63] for wear. Replace as needed.

Installation: Tighten the bolt to 24 ft.-lbs. (32 Nm) torque.

Figure 30-40-64

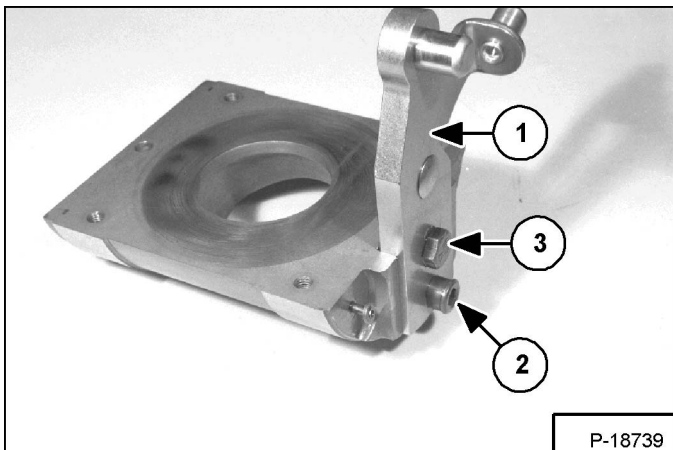


Servo arm (Item 1) [Figure 30-40-64] alignment is critical for proper pump operation. For this reason, removal of the servo arm from the swash plate is not recommended.

If the servo arm must be removed from the swash plate. Remove the swash plate guide bolt (Item 2) and the servo arm mounting bolt (Item 3) [Figure 30-40-64].

Installation: The servo arm (Item 1) [Figure 30-40-64] must be carefully aligned with the slot and threaded holes in the swash plate while installing, and must be pressed completely into the swash plate slot.

Tighten the swash plate guide bolt and servo arm bolt to 24 ft.-lbs. (32 Nm) torque.

Figure 30-40-65

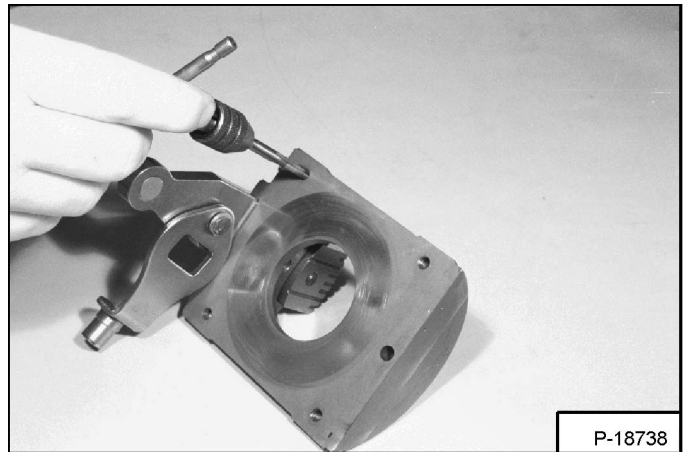

The threaded holes [Figure 30-40-65] in the swash plate must be cleaned prior to assembly.

HYDROSTATIC PUMP (CONT'D)

Inspection (Cont'd)

Figure 30-40-66



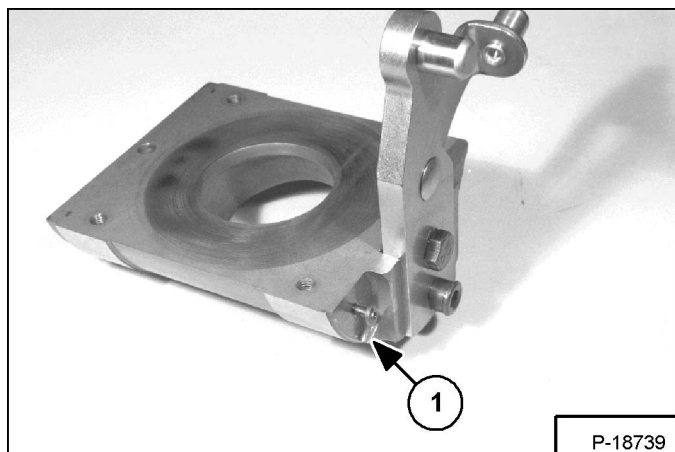


Figure 30-40-69

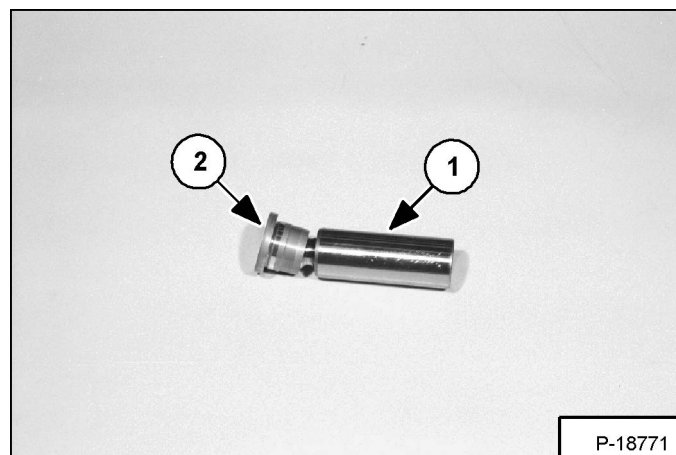

Check each piston (Item 1) and piston shoe (Item 2) [Figure 30-40-69] for wear or scratches.

Figure 30-40-67

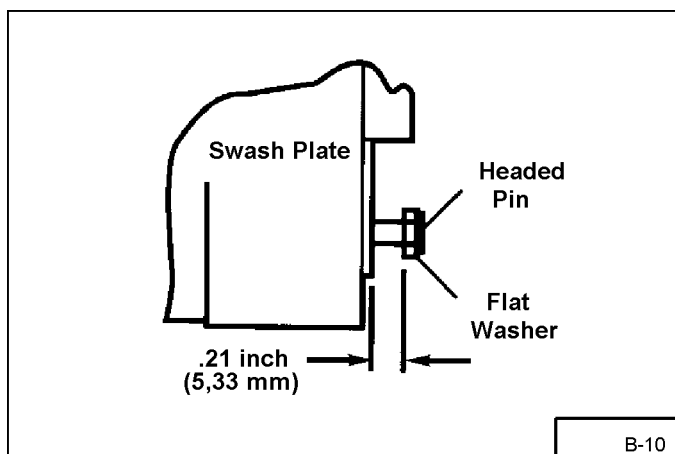

If the headed roll pin and flat washer (Item 1) [Figure 30-40-66] must be installed in the swash plate, the distance between the washer and the side of the swash plate must be .21 inch (5,33 mm) [Figure 30-40-67].

Figure 30-40-68




Check the swash plate bearings [Figure 30-40-68] for wear and damage. Replace as needed.

HYDROSTATIC PUMP (CONT'D)

Inspection (Cont'd)


Figure 30-40-70

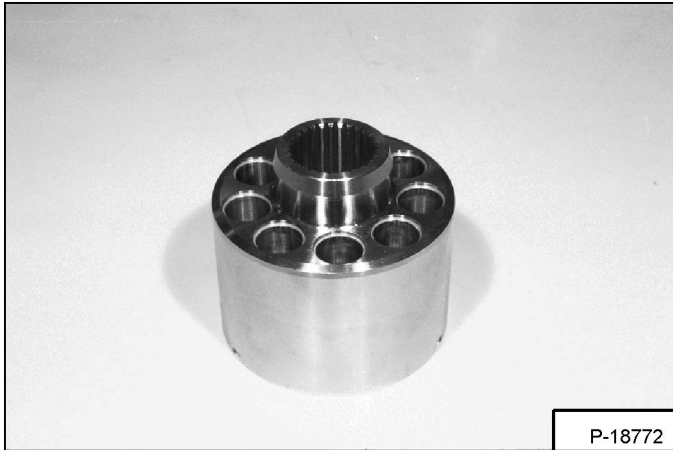

Check the cylinder block bores for wear or scratches [Figure 30-40-70].

If there is any defect in the cylinder block or pistons, the complete rotating group must be replaced.


Figure 30-40-71

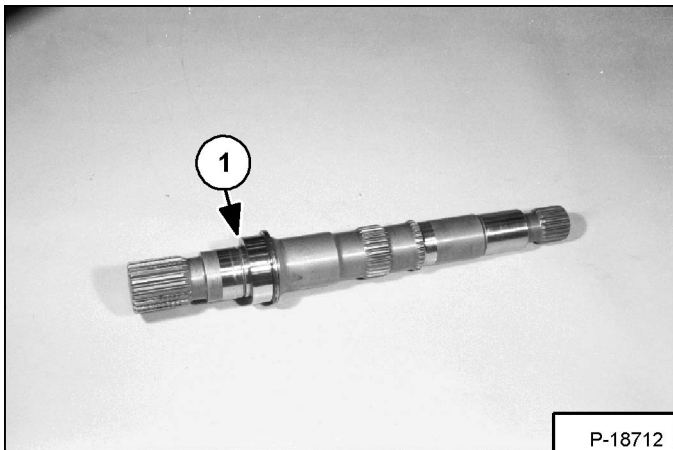

Check the shaft for wear or damage in the spline and bearing areas [Figure 30-40-71].

Check the bearing for correct operation. Remove the race (Item 1) [Figure 30-40-71] from the shaft only if it is necessary to replace the bearing.

Figure 30-40-72

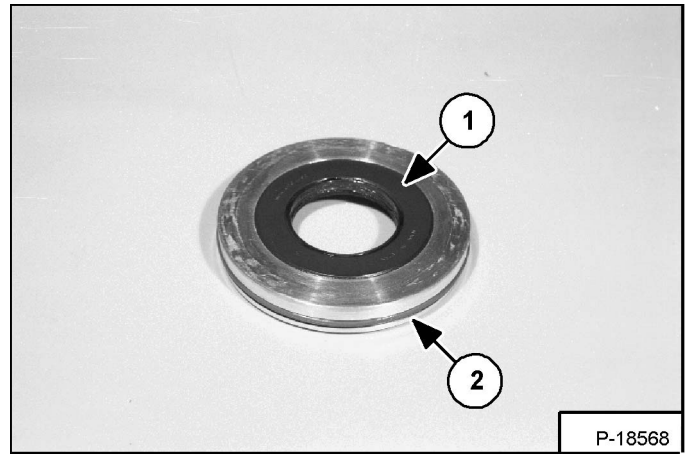

Inspect the shaft seal (Item 1) [Figure 30-40-72]. Replace if needed.

Remove and discard the O-ring (Item 2) [Figure 30-40-72].

Figure 30-40-73



Inspect the multi-function valve cartridge for damage to parts or O-rings.

Replace O-rings as needed [Figure 30-40-73].

HYDROSTATIC PUMP (CONT'D)

Assembly

IMPORTANT

When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.

I-2003-0888


Clean and lightly oil all parts prior to assembly.

Figure 30-40-74




Put the piston assemblies into the slipper guide [Figure 30-40-74].

Figure 30-40-75

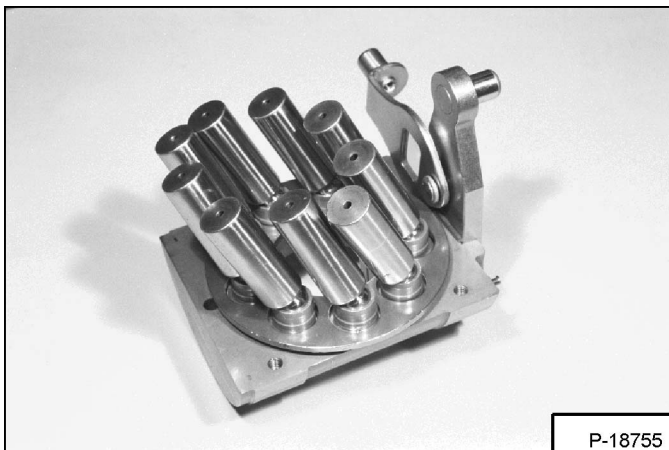

Lubricate the slipper running surface on the swash plate, center the piston and guide on the swash plate [Figure 30-40-75].

Figure 30-40-76

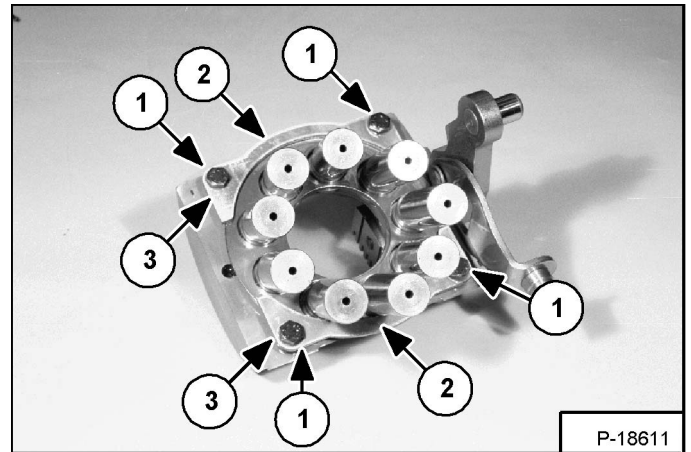


Apply LOCTITE #242 to four NEW retainer bolts (Item 1). Install the slipper guide bearings (Item 2) and spacers (Item 3) and bolts (Item 1) [Figure 30-40-76].

Tighten the four bolts to 10 ft.-lbs. (13,5 Nm) torque.

NOTE: Always use NEW retainer bolts with proper locking compound.

NOTE: The slipper guides and piston slippers must slide freely on the swash plate.

Figure 30-40-77

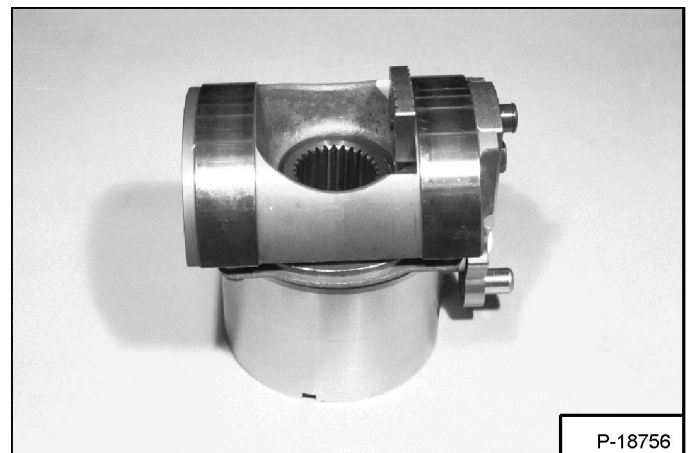


Lubricate the pistons and cylinder block bores. Install the assembled swash plate and pistons into the cylinder block [Figure 30-40-77].

NOTE: The pistons and bores are not selectively fitted.

HYDROSTATIC PUMP (CONT'D)


Assembly (Cont'd)

Figure 30-40-78

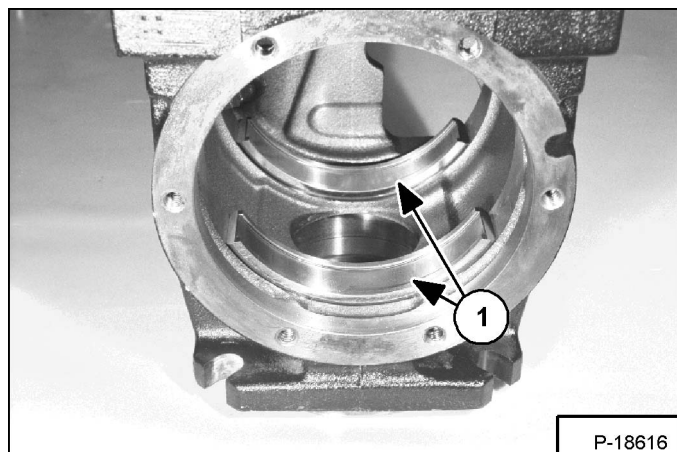


Install the swash plate bearing races (Item 1) [Figure 30-40-78] into the housing. Note the locating pins are offset in the housing to assure proper assembly.

Figure 30-40-79

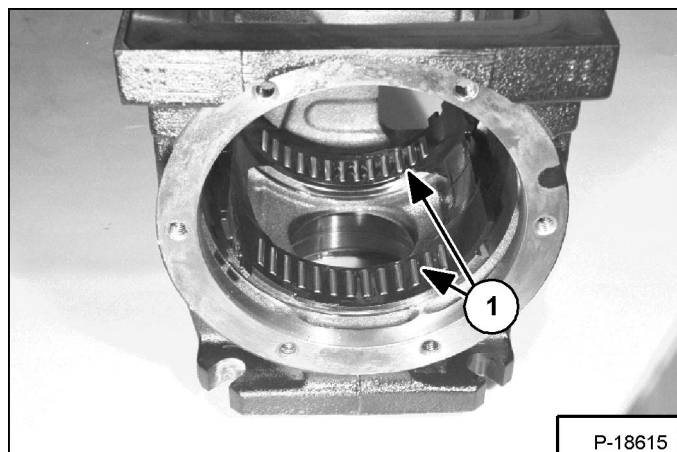


Assemble and lubricate the bearing cage (Item 1) [Figure 30-40-79], and install it on the bearing races.

Figure 30-40-80

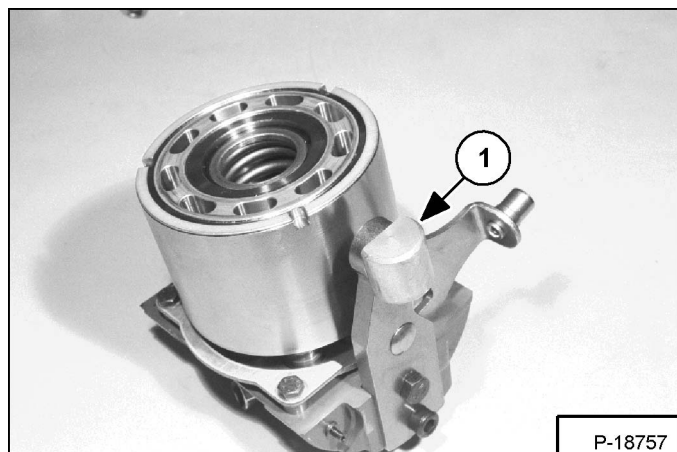

Install the bronze slider block (Item 1) [Figure 30-40-80] on the swash plate servo arm.

Figure 30-40-81

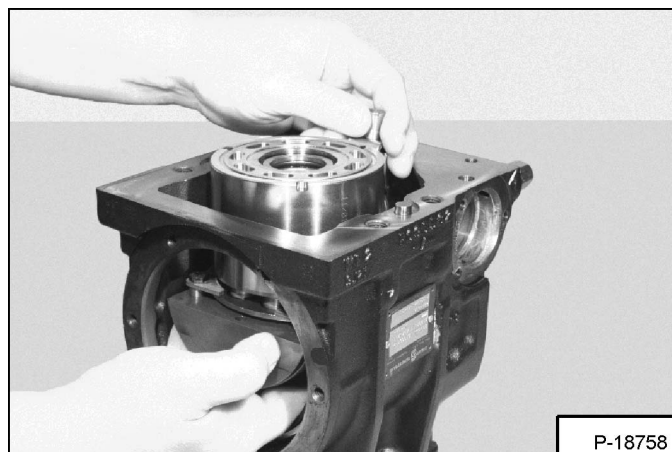


Carefully lower the cylinder block and swash plate assembly into the housing [Figure 30-40-81].

HYDROSTATIC PUMP (CONT'D)


Assembly (Cont'd)

Figure 30-40-82

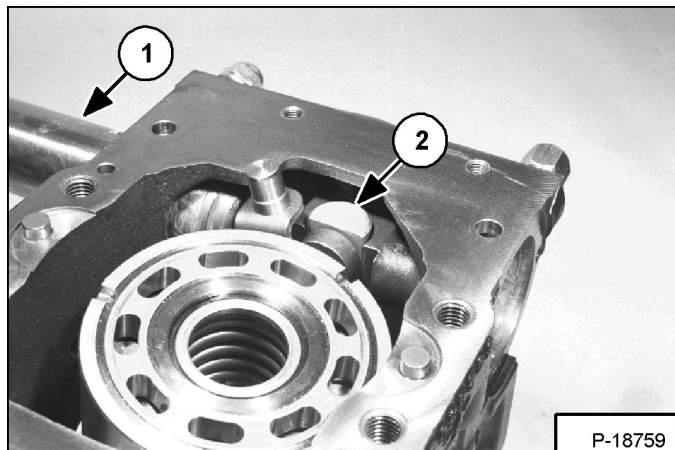


Holding the cylinder block and swash plate assembly approximately 1/2" (12 mm) above the bearings. Position the servo piston (Item 1) on the bronze slider block (Item 2) [Figure 30-40-82]. Take care not to wedge the block, the parts should slide freely.

Figure 30-40-83

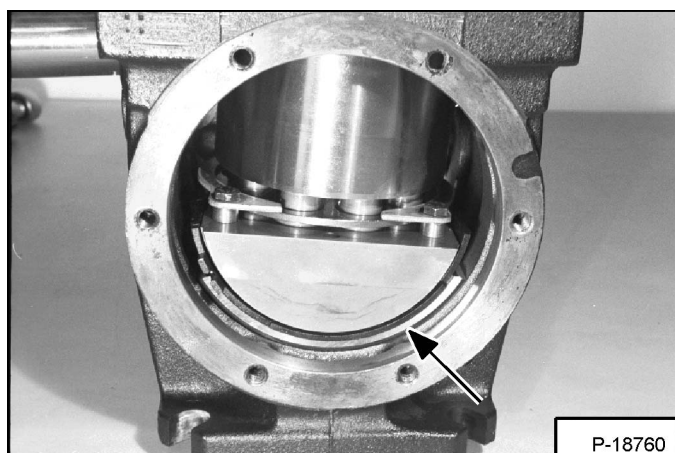

Lower the cylinder block and swash plate assembly until the swash plate is properly located on the bearings [Figure 30-40-83].

Figure 30-40-84

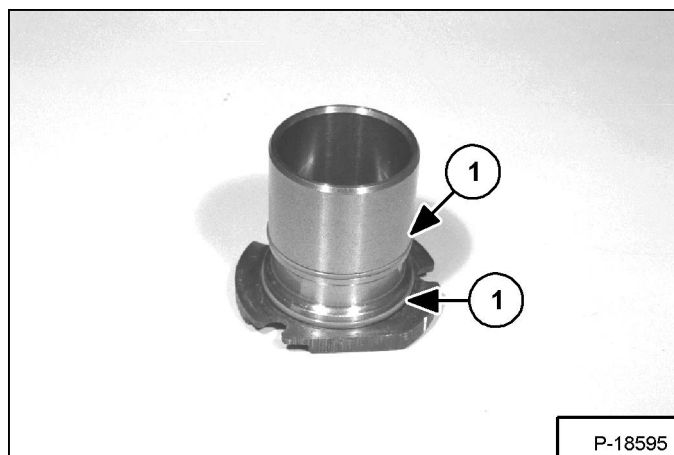

Install new O-rings (Item 1) [Figure 30-40-84] on the servo end cap.

Lightly lubricate the O-rings and the inner surface of the end cap.

Figure 30-40-85




Hold the servo piston in position and install the servo end cap [Figure 30-40-85].

HYDROSTATIC PUMP (CONT'D)

Assembly (Cont'd)


Figure 30-40-86

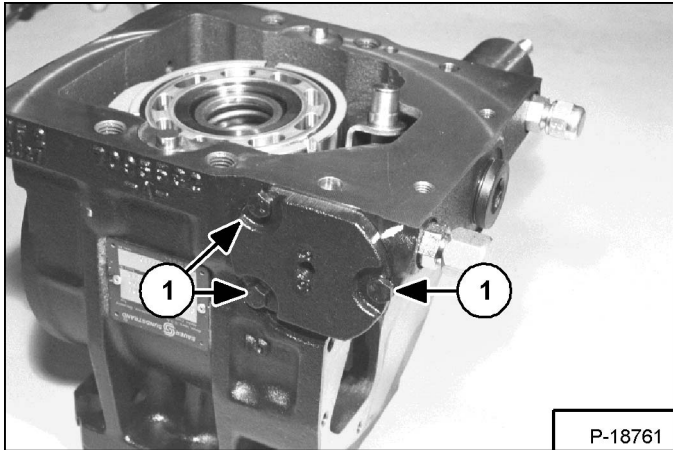

Install the three end cap mounting bolts (Item 1) [Figure 30-40-86]. Tighten to 10 ft.-lbs. (13,5 Nm) torque.

Lightly lubricate the O-rings and inner surface of the adjustment cover.


Figure 30-40-87

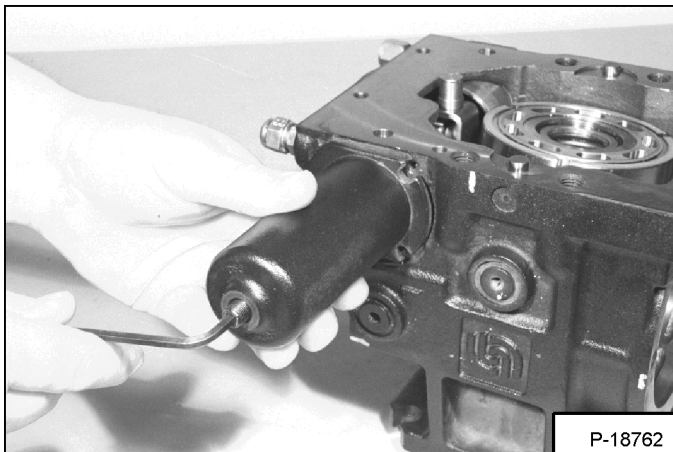

Install the servo adjustment cover over the servo piston until the piston adjustment screw touches the cover. Using a hex wrench, turn the adjustment screw counterclockwise while holding the cover until it is in position [Figure 30-40-87].


NOTE: Do not install the bolts at this time.

Figure 30-40-88

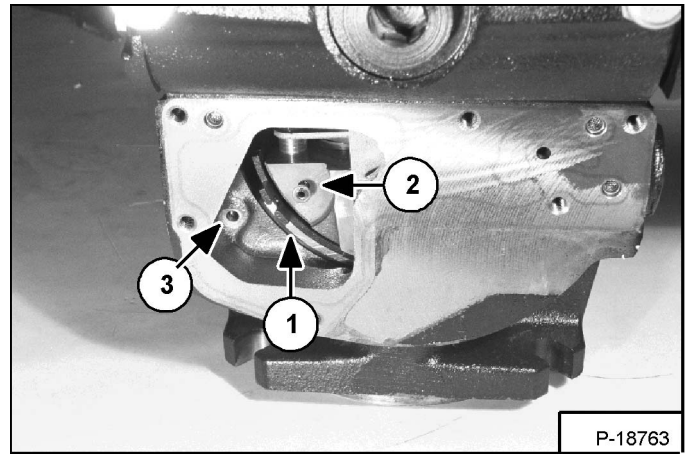

Align the slot in the swash plate bearing cage (Item 1) with the pin (Item 2) in the swash plate and the pin hole (Item 3) [Figure 30-40-88] in the housing.

Figure 30-40-89

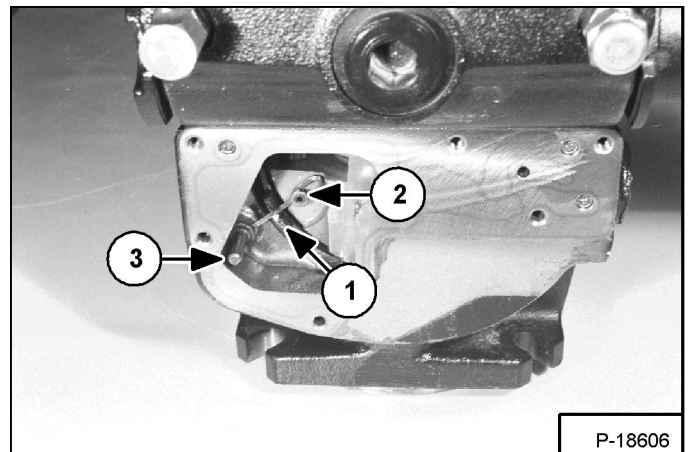


Hook the cage locator link (Item 1) over the pin (Item 2) [Figure 30-40-89] between the swash plate and washer. Rotate the link into the slot in the bearing cage.

Install the anchor pin (Item 3) [Figure 30-40-89] through the locator link and into the housing.

HYDROSTATIC PUMP (CONT'D)


Assembly (Cont'd)

Figure 30-40-90

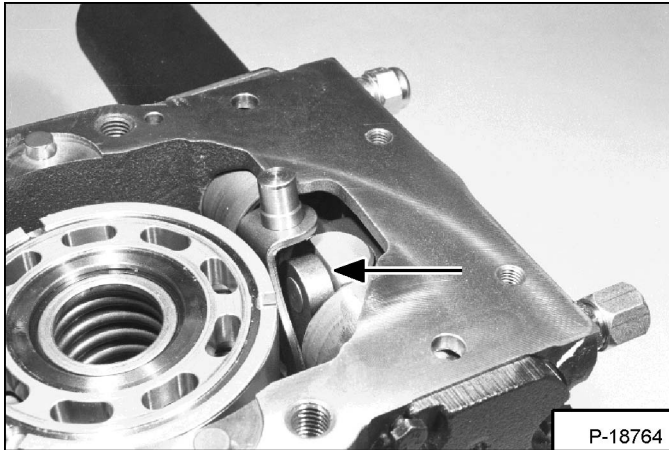


Push the swashplate assembly toward the servo piston until the swash plate guide contacts the bearing races. Check for clearance between the servo arm and the slider block [Figure 30-40-90]. If no clearance is present, recheck the assembly of the bearing cage and races.

Figure 30-40-91

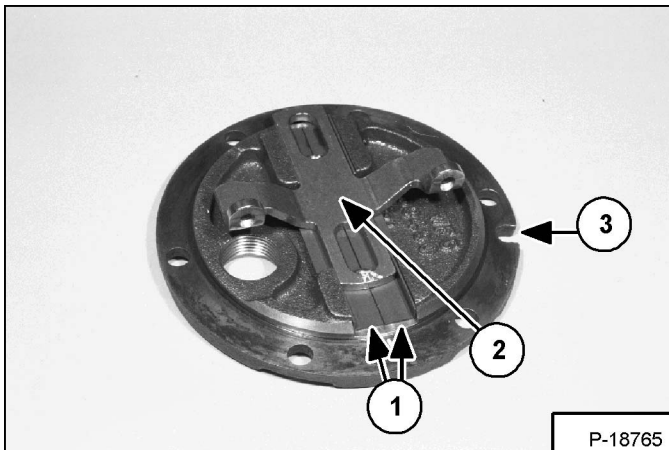

Position the two side cover inserts (Item 1) and swashplate leveler (Item 2) on the side cover. Note the orientation of the leveler and the notch (Item 3) [Figure 30-40-91] in the cover.


Figure 30-40-92

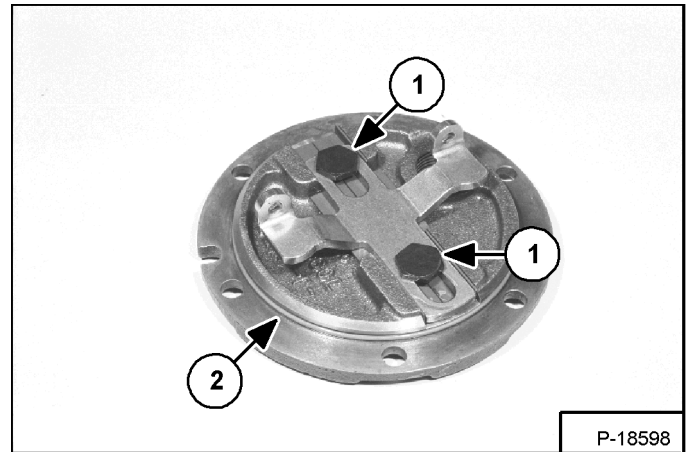

Install the two guide post bolts (Item 1) [Figure 30-40-92] through the leveler and inserts. Install the sealing nuts and tighten to 17 ft.-lbs. (23 Nm) torque.

Install a new O-ring (Item 2) [Figure 30-40-92] on the cover.

Figure 30-40-93

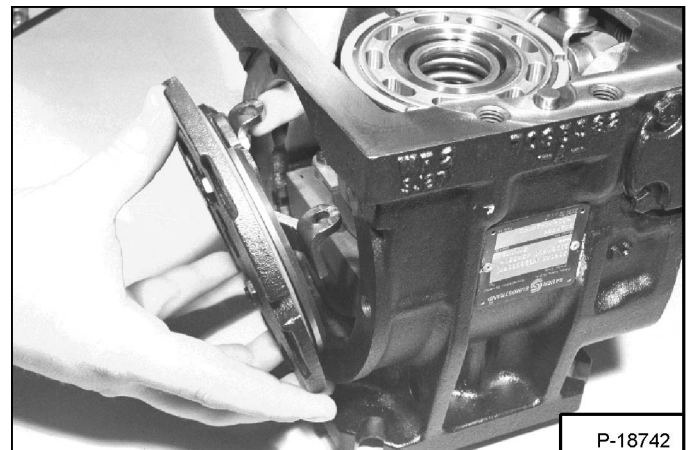


Lift the swash plate leveler and install the side cover [Figure 30-40-93].

HYDROSTATIC PUMP (CONT'D)

Assembly (Cont'd)

Figure 30-40-94

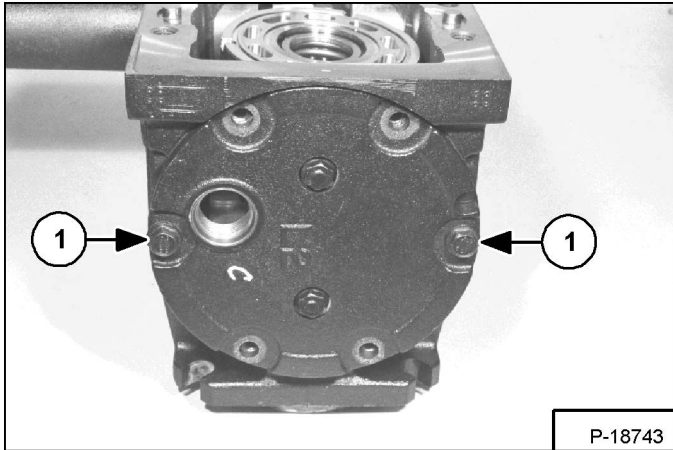


Install the two side cover bolts (Item 1) [Figure 30-40-94] finger tight.

Apply a force of 5 - 10 ft.-lbs. (22 - 44 Nm) to the swash plate leveler to make sure both lever arms contact the swash plate.


Make sure the swash plate assembly is seated correctly on the bearings.

Figure 30-40-95

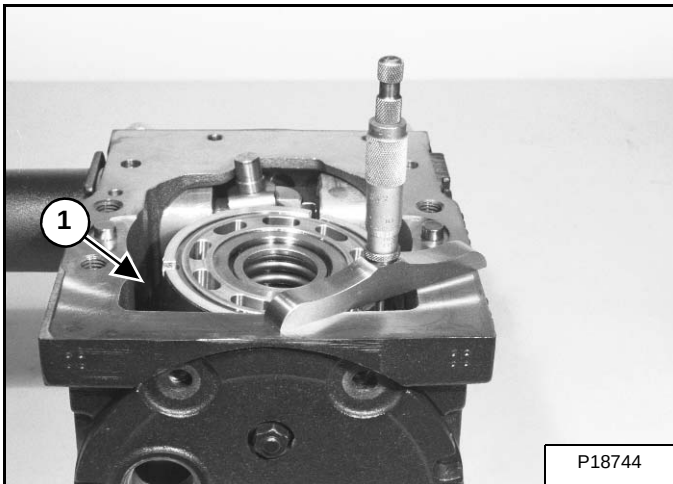


Use a depth micrometer to measure the distance from the end cap to the swash plate surface. Take a second measurement at a point 90° (Item 1) [Figure 30-40-95] from the first point of measurement. These measurements must not vary more than .001 inches (.025 mm).

Figure 30-40-96

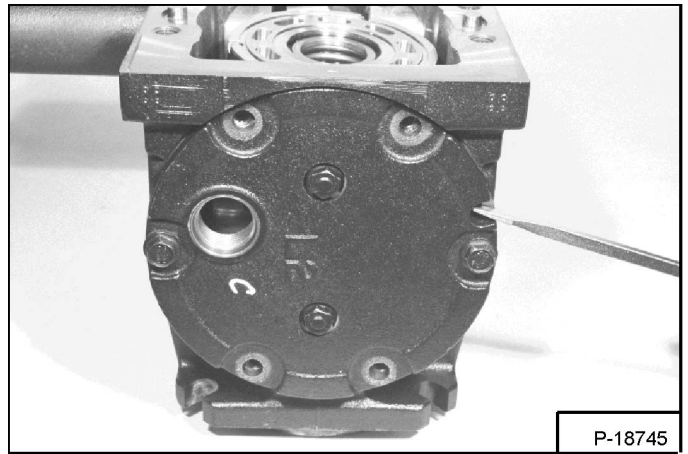

Rotate the side cover [Figure 30-40-96] (which will also rotate the leveler and swash plate) until the zero angle position is established, as determined by a second depth measurement.

Figure 30-40-97

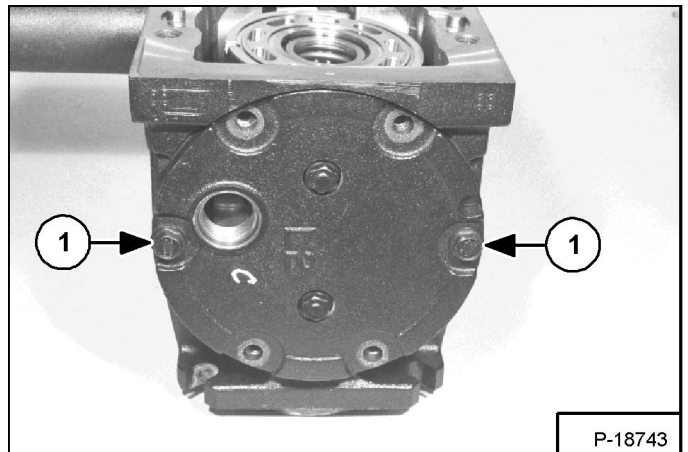


After the zero angle position has been established, tighten the two side cover bolts (Item 1) [Figure 30-40-97].

HYDROSTATIC PUMP (CONT'D)

Assembly (Cont'd)


Figure 30-40-98

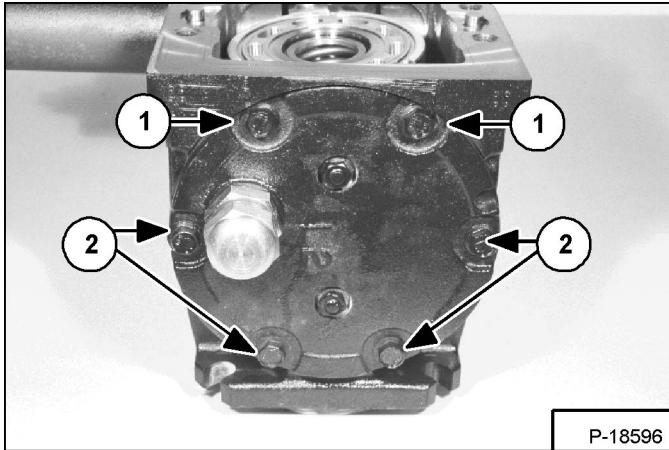

Install the four remaining side cover bolts, apply LOCTITE #242 to the threads of the "thru" bolts (Item 1) [Figure 30-40-98].


First tighten the four side cover bolts (Item 2) to 24 ft.-lbs. (32,5 Nm) torque. Tighten the two remaining side cover bolts (Item 1) [Figure 30-40-98] to 18.5 ft.-lbs. (25 Nm) torque.

Figure 30-40-99

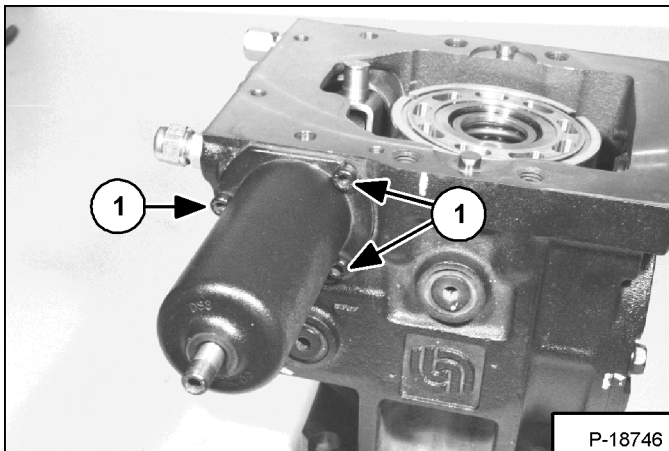


Install the three servo adjustment cover mounting screws (Item 1) [Figure 30-40-99]. Tighten to 10 ft.-lbs. (13,5 Nm) torque.

Figure 30-40-100

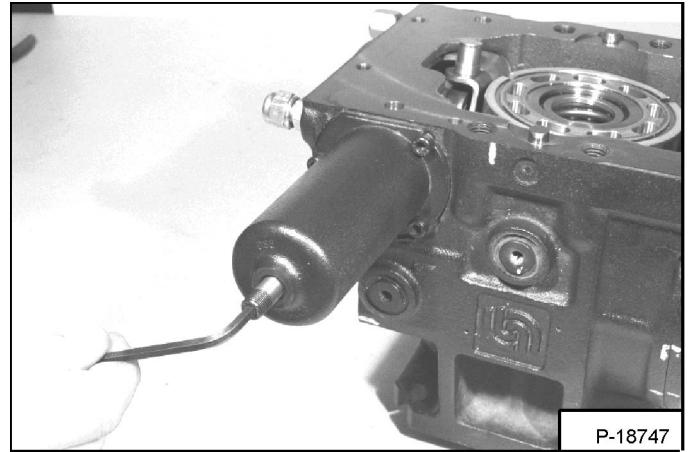

Turn the adjustment screw on the servo, which will rotate the swash plate assembly until a zero angle position is established [Figure 30-40-100].

Figure 30-40-101

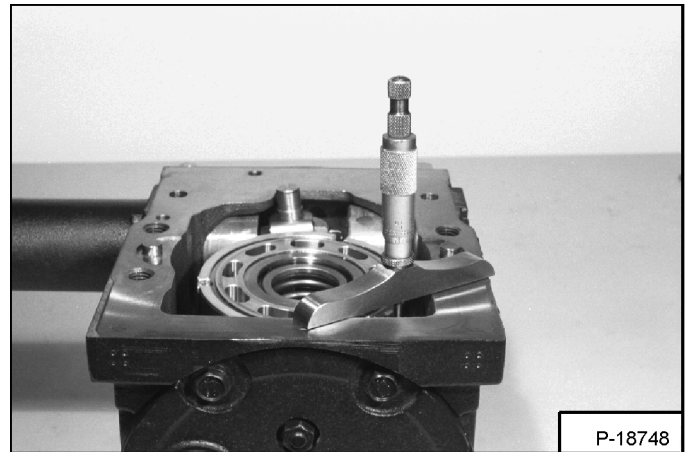


Use a depth micrometer to measure the distance from the end cap to the swash plate surface [Figure 30-40-101]. Take a second measurement at a point 180° from the first point of measurement. These measurements must not vary more than .001 inch (.025 mm).

HYDROSTATIC PUMP (CONT'D)


Assembly (Cont'd)

Figure 30-40-102

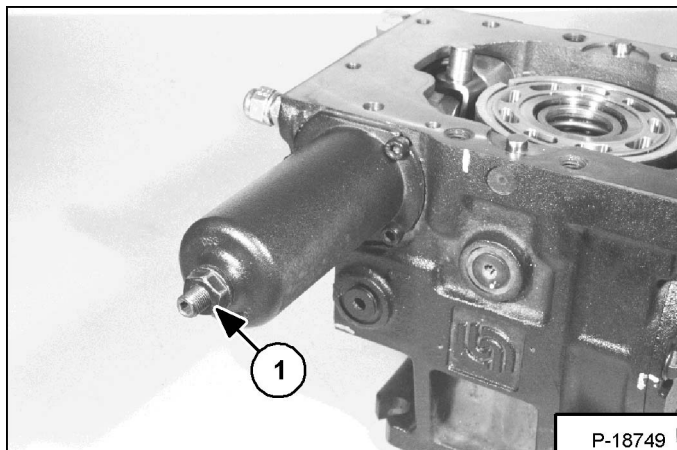


Without turning the servo adjustment screw, install the sealed nut (Item 1) [Figure 30-40-102] and tighten.

Figure 30-40-103

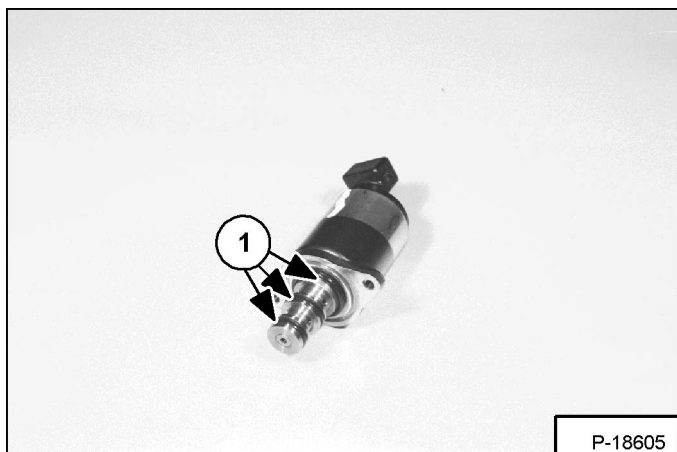


Install new O-rings (Item 1) [Figure 30-40-103] on the solenoid spool.

Figure 30-40-104

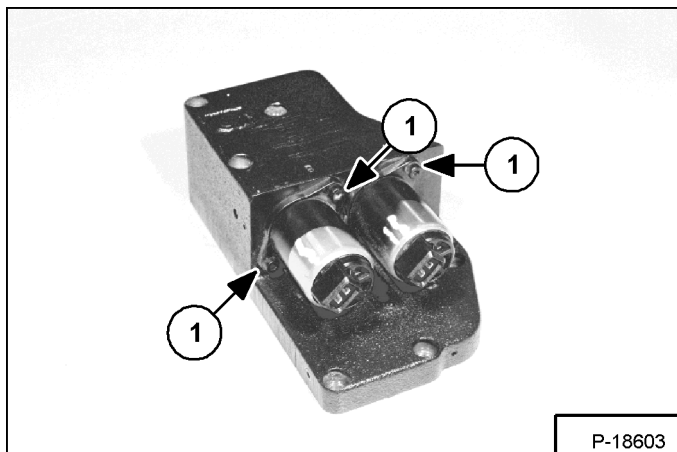

Lightly lubricate both solenoid spools and install into the manifold housing and retain with the four screws (Item 1) [Figure 30-40-104].

Figure 30-40-105

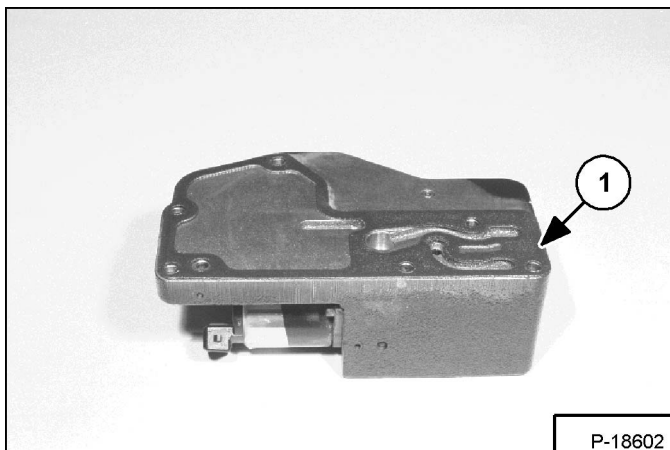


Apply assembly lube on the gasket (Item 1) [Figure 30-40-105] and install on the manifold housing.

HYDROSTATIC PUMP (CONT'D)


Assembly (Cont'd)

Figure 30-40-106

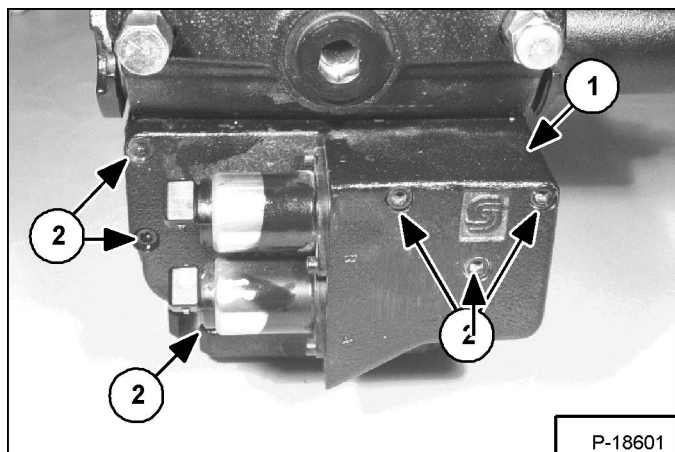


Install the manifold assembly (Item 1) on the pump with the six screws (Item 2) [Figure 30-40-106].

Figure 30-40-107

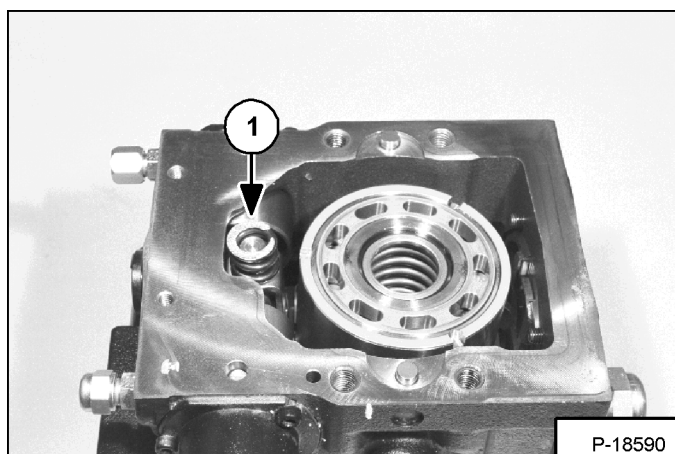


Install the spring (Item 1) [Figure 30-40-107] on the servo arm link.

Figure 30-40-108

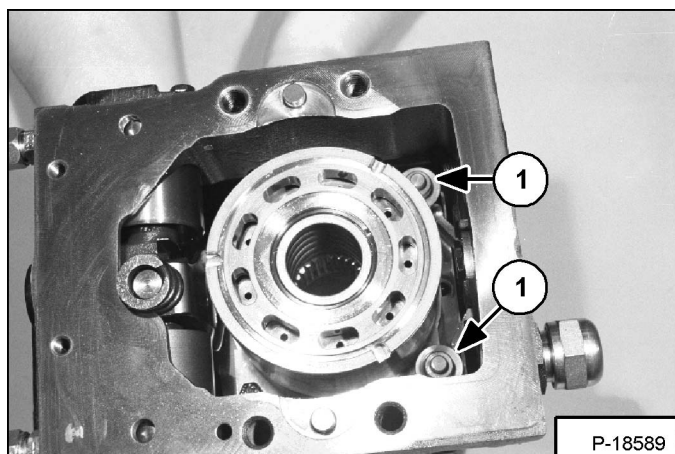

Install the spring seats (Item 1) [Figure 30-40-108] on the leveler arms.

Figure 30-40-109

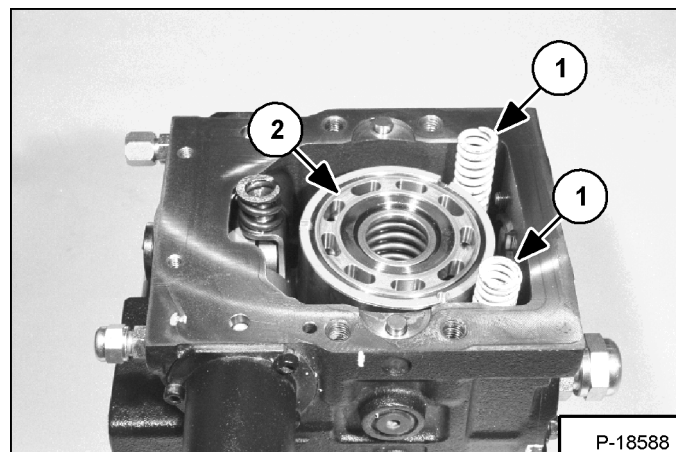


Install both springs (Item 1) [Figure 30-40-109] on the leveler spring seats.

Lubricate the running surface of the cylinder (Item 2) [Figure 30-40-109].

HYDROSTATIC PUMP (CONT'D)

Assembly (Cont'd)


Figure 30-40-110

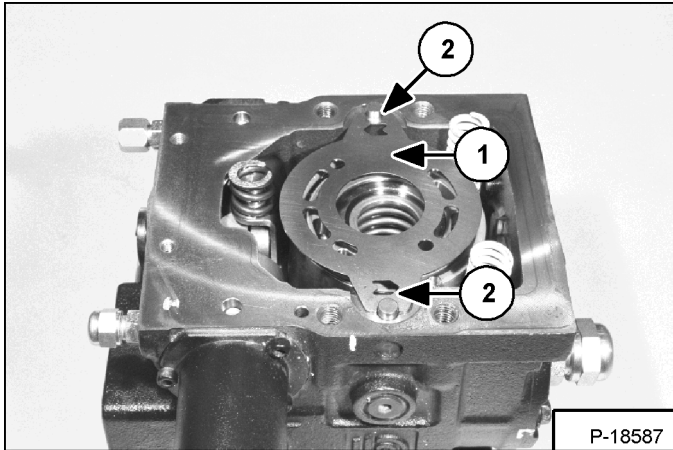

Install the valve plate (Item 1) [Figure 30-40-110] on the alignment pins.


NOTE: Ensure the direction of the arrow cut outs (Item 2) [Figure 30-40-110] in the valve plate are positioned as shown.

Figure 30-40-111

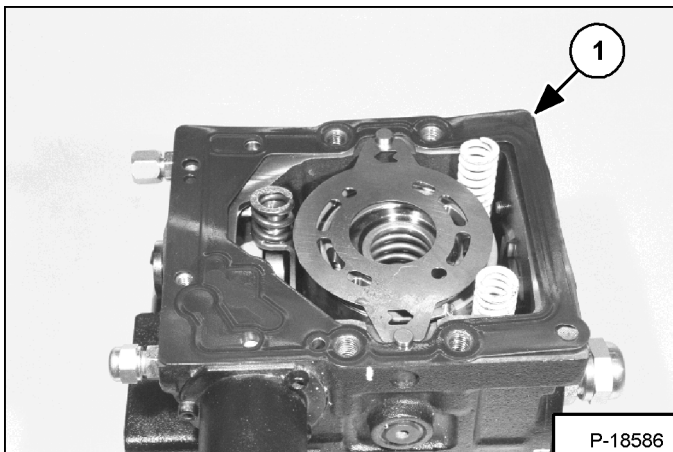

Install a new gasket (Item 1) [Figure 30-40-111] on the housing.


Figure 30-40-112

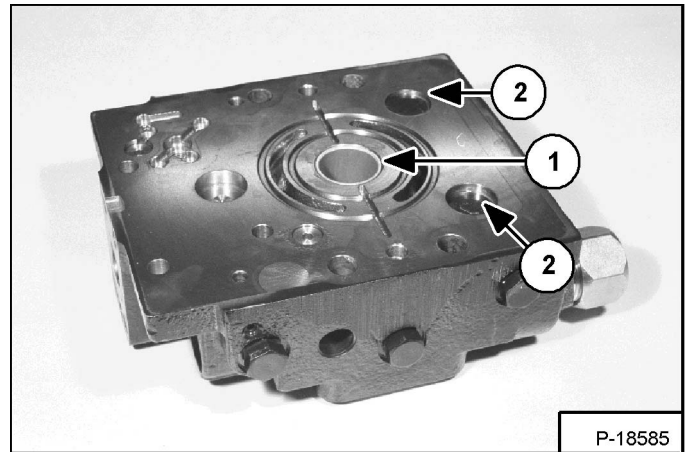

Lubricate the end cap journal bearing (Item 1). Install the hardened shims (Item 2) [Figure 30-40-112] in the charge pump pockets for the swash plate leveler springs. Retain the shims with assembly lube.

Turn the charge pump housing over.

Figure 30-40-113

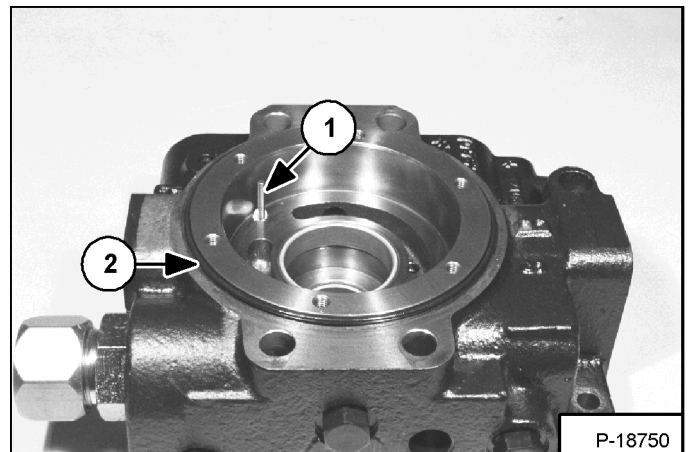


Lightly lubricate the alignment pin (Item 1) [Figure 30-40-113] and install into the charge pump housing, in the position marked at time of disassembly. This will properly align the wear plate and eccentric ring.

Install a new O-ring (Item 2) [Figure 30-40-113].

HYDROSTATIC PUMP (CONT'D)


Assembly (Cont'd)

Figure 30-40-114

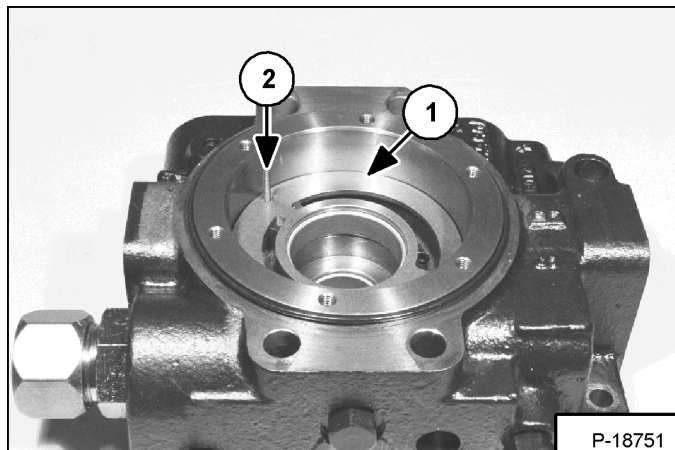


Lubricate both sides of the wear plate (Item 1) and install in the charge pump. Align the wear plate with the alignment pin (Item 2) [Figure 30-40-114].

Figure 30-40-115

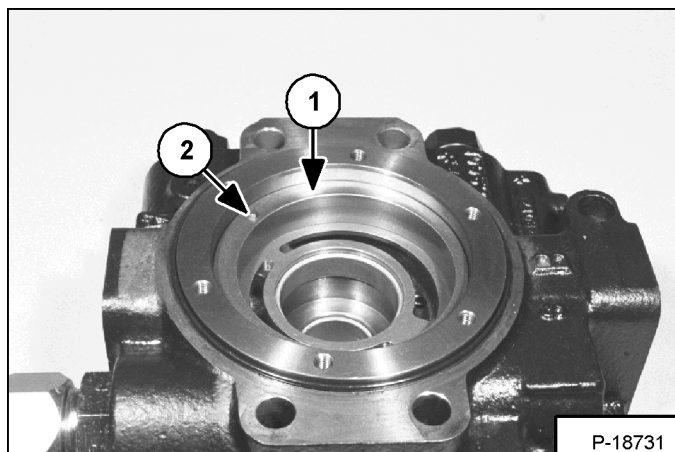


Install the eccentric ring (Item 1) in the charge pump and align with the alignment pin (Item 2) [Figure 30-40-115].

Figure 30-40-116

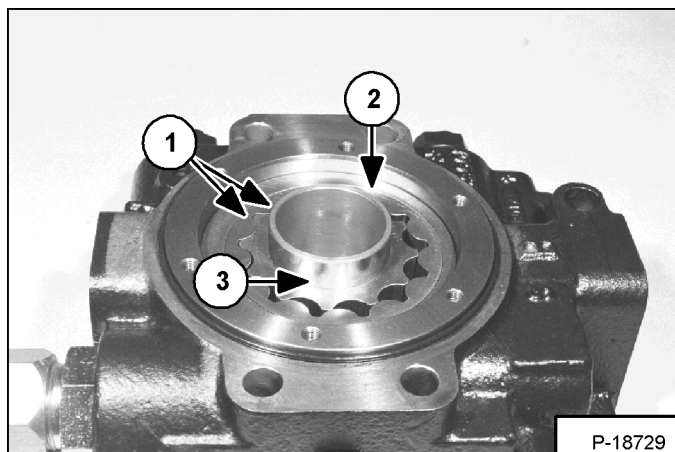

Apply assembly lube and install the charge pump gears (Item 1), charge pump shaft (Item 2) and key (Item 3) [Figure 30-40-116] into the pump.

Figure 30-40-117

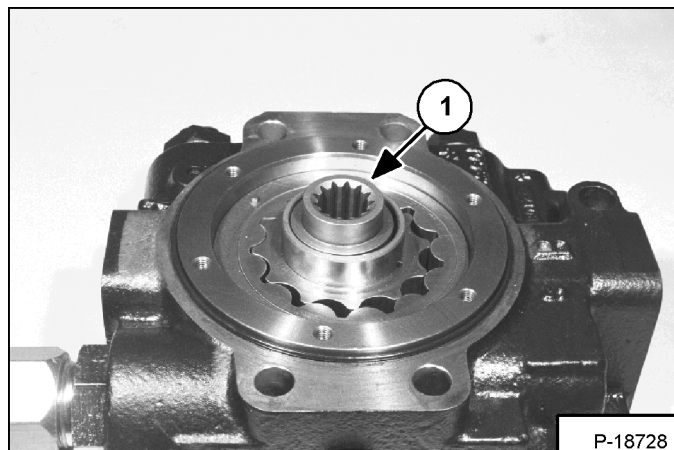


Install the coupler (Item 1) [Figure 30-40-117].

HYDROSTATIC PUMP (CONT'D)

Assembly (Cont'd)


Figure 30-40-118

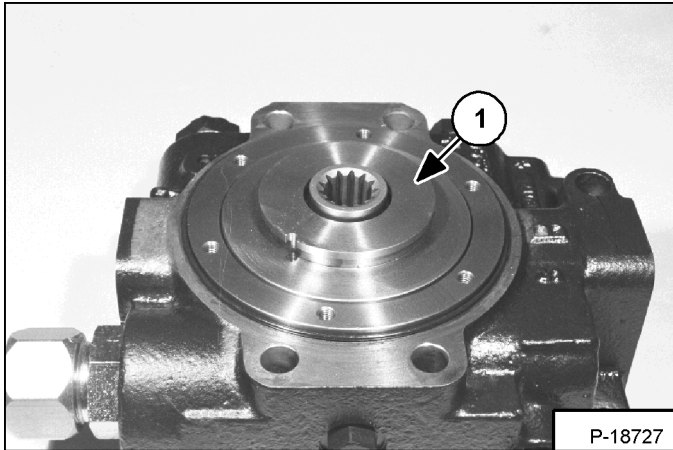

Install the charge pump cover (Item 1) [Figure 30-40-118].


Rotate until pin hole in cover aligns with the pin.

Figure 30-40-119

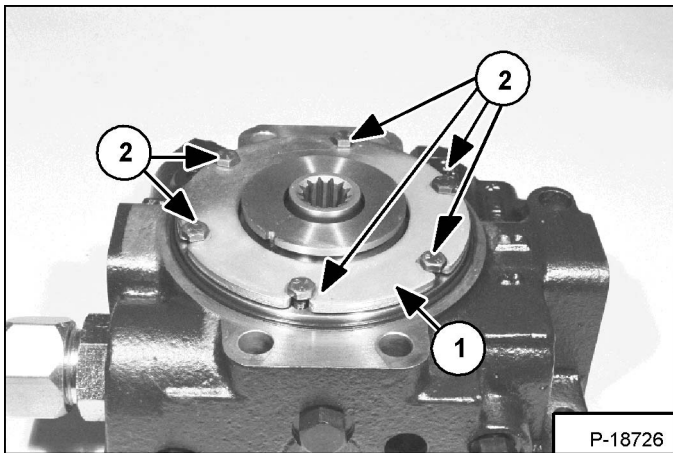

Install the retaining plate cover (Item 1) and six bolts (Item 2) [Figure 30-40-119]. Tighten the bolts to 10 ft.-lbs. (13,5 Nm) torque.


Figure 30-40-120

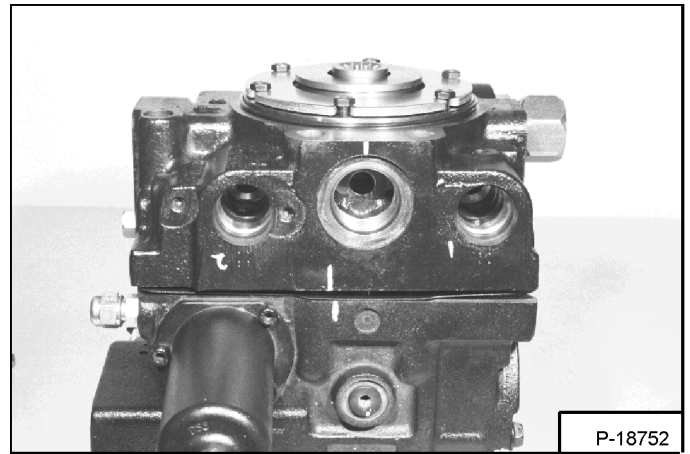

Lower the charge pump onto the pump housing while positioning the three springs in their pockets [Figure 30-40-120].

When properly installed, the charge pump will engage the alignment pins, but the springs will hold the charge pump housing 1/8 to 1/4 (3 to 8 mm) away from the pump housing.

Figure 30-40-121

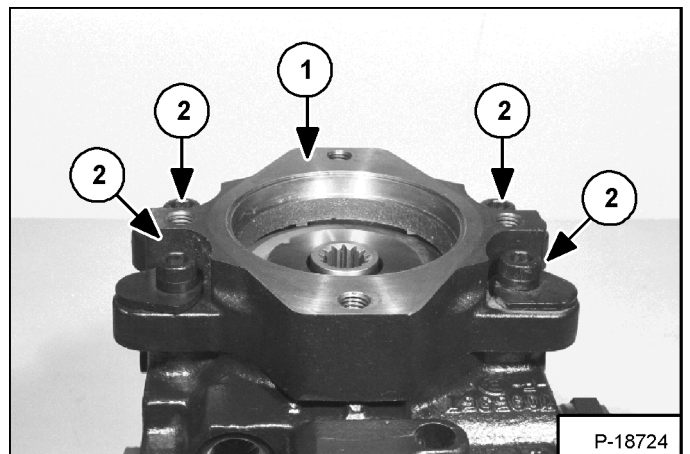


Install the flange adapter (Item 1) and four bolts (Item 2) [Figure 30-40-121]. Tighten the bolts to 90 ft.-lbs. (122 Nm) torque.

HYDROSTATIC PUMP (CONT'D)

Assembly (Cont'd)


Figure 30-40-122

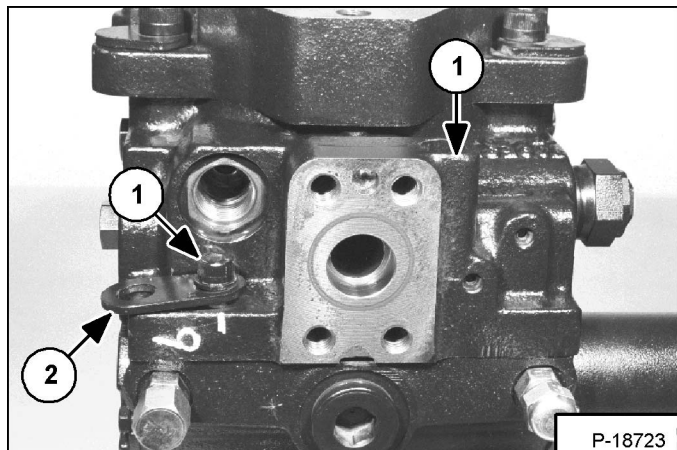

Install the two mounting bolts (Item 1) [Figure 30-40-122] and tighten to 28 ft.-lbs. (38 Nm) torque.


NOTE: Install the lifting bracket (Item 2) [Figure 30-40-122].

Figure 30-40-123

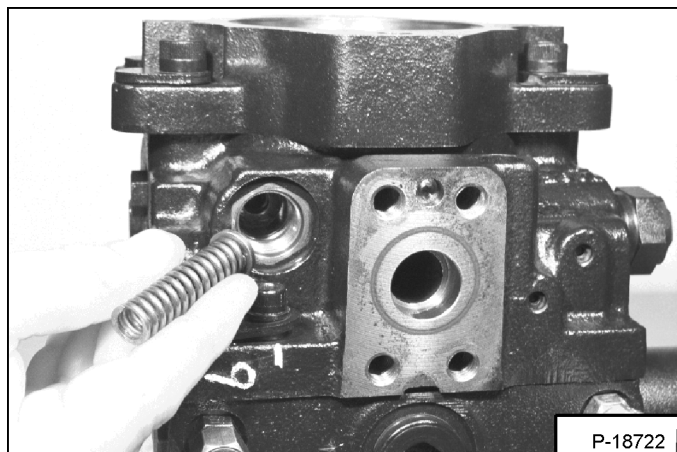


Install the spring and relief poppet into the charge pump [Figure 30-40-123].

Figure 30-40-124

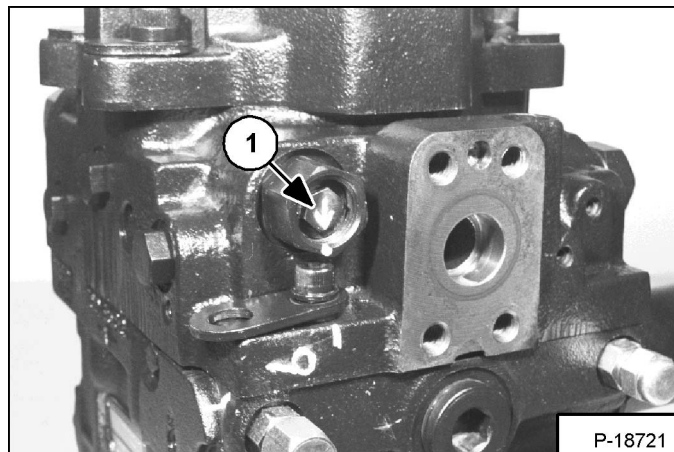

Install the plug with lock nut (Item 1) [Figure 30-40-124], align the marks made at disassembly. Tighten the lock nut to 38 ft.-lbs. (52 Nm) torque.

Figure 30-40-125

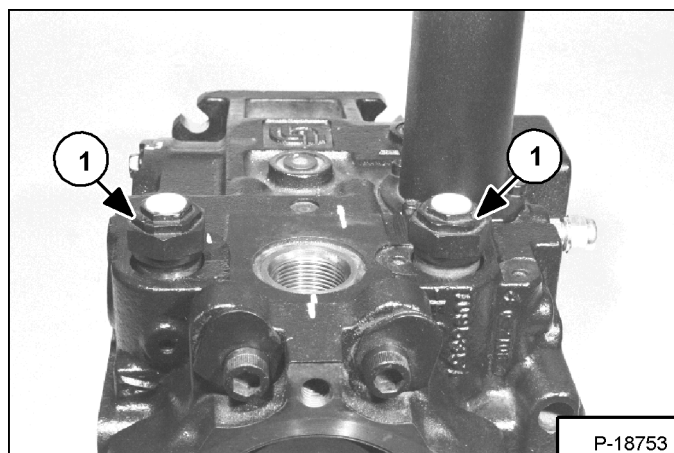


Lightly lubricate and install both multi-function valve assemblies (Item 1) [Figure 30-40-125] in the charge pump. Tighten to 66 ft.-lbs. (89 Nm) torque.

HYDROSTATIC PUMP (CONT'D)

Assembly (Cont'd)


Figure 30-40-126

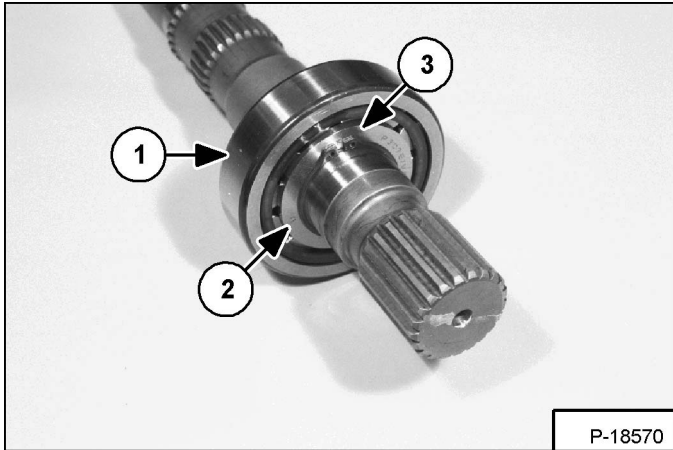

Install the bearing (Item 1), the spacer washer (Item 2) and the snap ring (Item 3) [Figure 30-40-126] on the drive shaft.


Position the pump on the charge pump end.

Figure 30-40-127

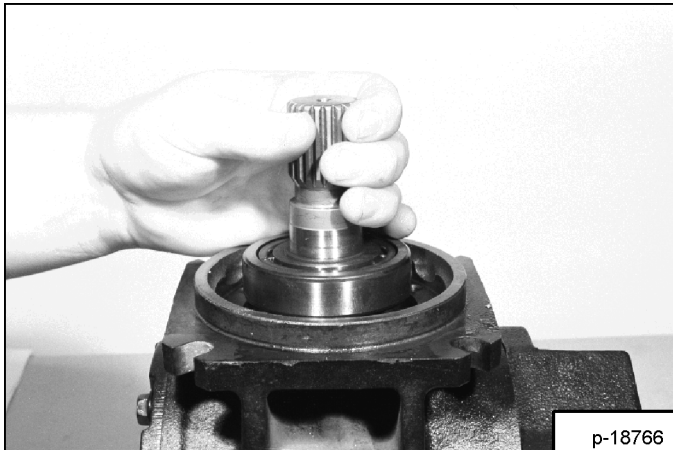

Install the shaft and bearing assembly, aligning the shaft spline with the cylinder block spline. Continue to lower the shaft and align with the charge pump journal bearing and charge pump coupler [Figure 30-40-127].


Figure 30-40-128

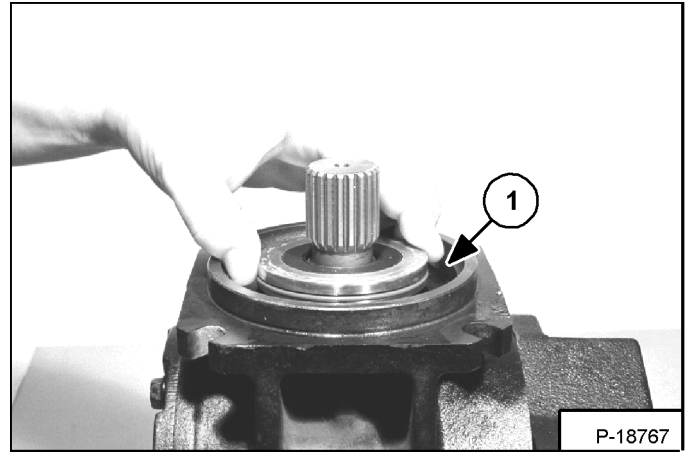

Install a new O-ring (Item 1) [Figure 30-40-128].

Lubricate the seal with assembly lube and install the seal assembly on the drive shaft and in the housing [Figure 30-40-127].

Figure 30-40-129

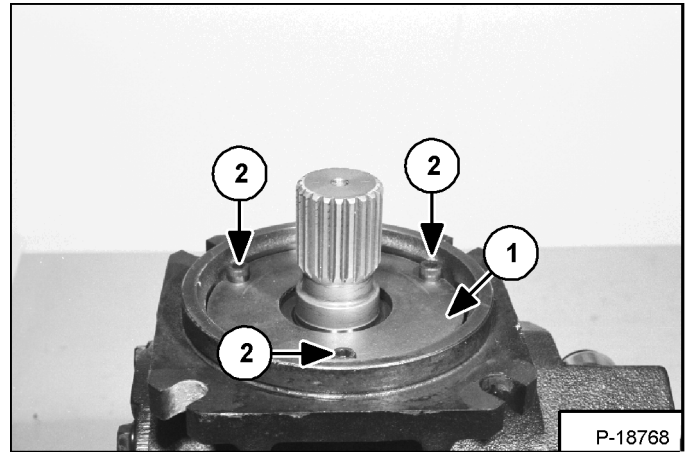


Install the retainer plate (Item 1) and three screws (Item 2) [Figure 30-40-129]. Tighten the screws in a sequenced pattern to 12 ft.-lbs. (16 Nm) torque.

HYDROSTATIC PUMP (CONT'D)


Assembly (Cont'd)

Figure 30-40-130

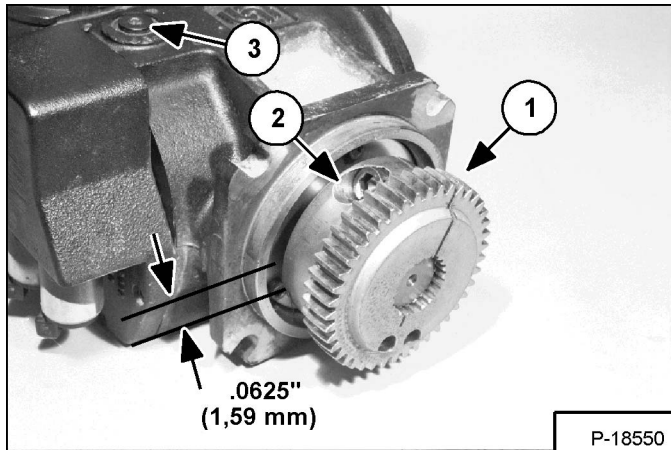

Install the coupler gear (Item 1) on the shaft and install the bolt (Item 2) [Figure 30-40-130].

Figure 30-40-131

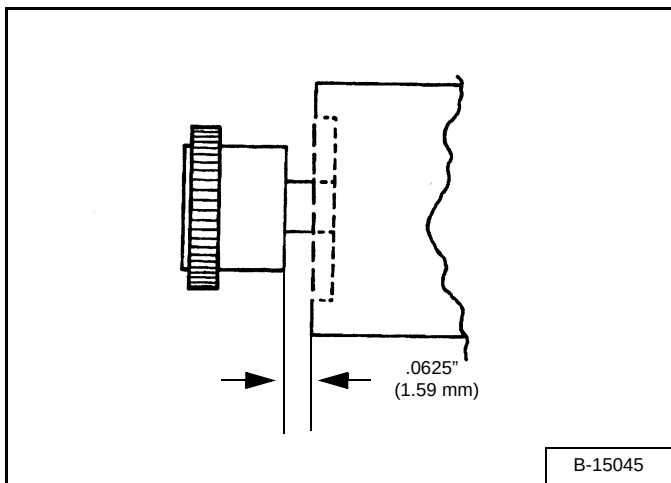

NOTE: When installing the coupler, maintain a 0.337 inch (8,56 mm) gap from the pump mount flange to the coupler [Figure 30-40-130] & [Figure 30-40-131].

Remove the case plug (Item 3) [Figure 30-40-130] and fill with clean hydraulic fluid prior to start up.

Rotate the pump shaft with a torque wrench to assure correct assembly. The torque required to turn the shaft (after "break away") should be within:

Minimum	Maximum
4 ft.-lbs. (5,4 Nm)	9 ft.-lbs. (12,2 Nm)

HYDROSTATIC PUMP (CONT'D)



Charge pressure checking procedure

Heat the hydraulic oil to 60°C by driving the machine and/or performing boom lifting and telescoping operations. Measure temperature in the oil tank or at the hydraulic pump entry.

Check the maximum engine speed: the value should be 2450 rpm $\pm$ 50.

If necessary, adjust the stop screw of the engine speed control cable, which is situated on the injection pump. Also check the speed control pedal stop.

Figure 30-40-132

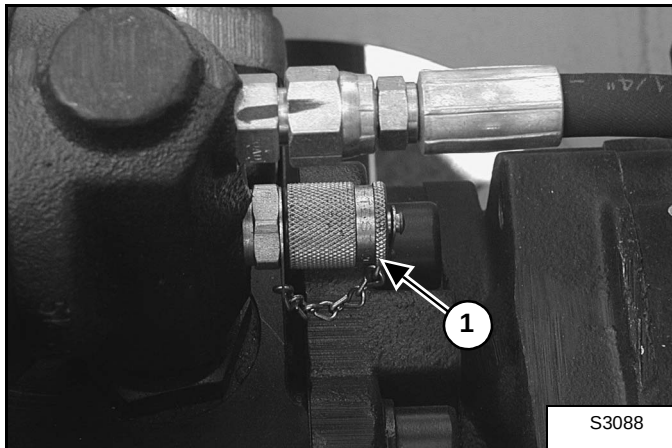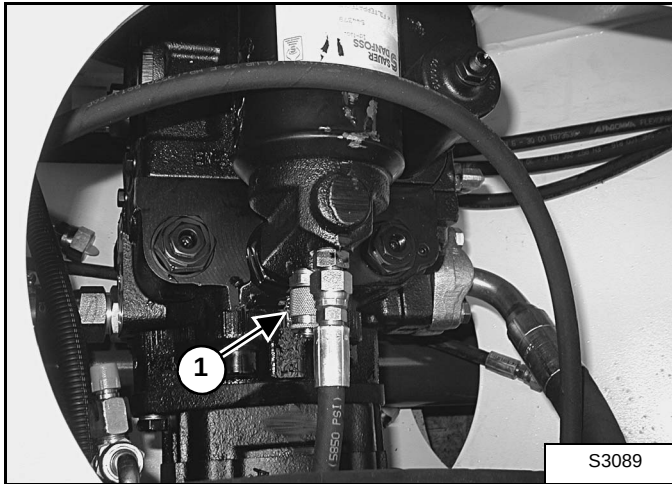

Remove the test fitting (Item 1) [Figure 30-40-132] situated on the hydraulic oil filter body and connect a pressure gauge (0-60 Bar).

If needed, use an adapter 9/16 to connect the gauge.


With the travel direction lever in neutral position, start the engine and go to maximum engine speed.

Pressure should stabilize on 435 Psi $\pm$ 30 (30 Bar $\pm$ 2).

If adjustment is needed, follow the procedure as described below.

Charge pressure adjusting procedure

Figure 30-40-133

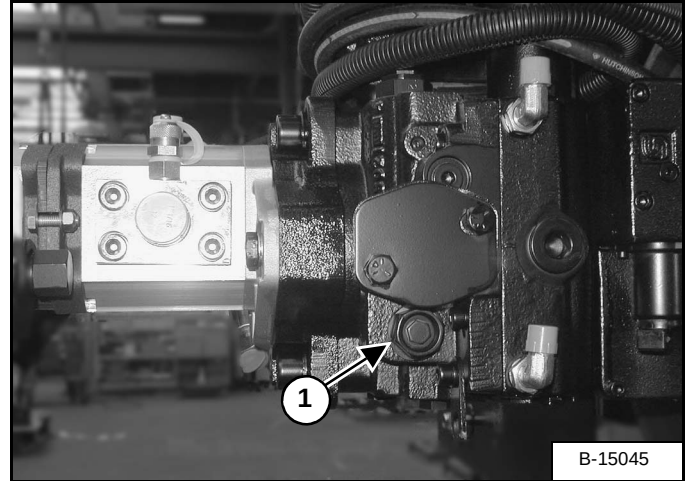

The charge pressure can be adjusted with the charge pressure relieve valve (Item 1) [Figure 30-40-133], situated on the right side of the hydrostatic pump.

NOTE: Difference in charge pressure between min. engine speed and max. engine speed should not be under 101 Psi (7 Bar) without exceeding 145 Psi (10 Bar). Charge pressure at min. engine speed should at least be 261 Psi (18 Bar).

Loosen the counterbolt on the charge pressure relieve valve (Item 1) [Figure 30-40-133].

Use a 9/16 key to adjust the valve. Then perform the above procedure "Charge pressure checking procedure". Re-adjust if needed, until the right value has been reached.

NOTE: A low charge pressure value may result from a leak, so adjustment of the charge pressure relieve valve will then have no effect.

DRIVE SYSTEM

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000)	40-20-1
Axle Housing/Drive Axle Assembly	40-20-52
Axle Housing/Drive Axle Disassembly	40-20-13
Axle Housing/Drive Axle Parts Identification	40-20-12
Brake Group Assembly	40-20-42
Brake Group Disassembly	40-20-18
Brake Group Inspection	40-20-24
Brake Group Parts Identification	40-20-18
Differential Assembly	40-20-39
Differential Disassembly	40-20-25
Differential Inspection	40-20-28
Differential Parts Identification	40-20-25
General Information	40-20-1
Pinion Group Assembly	40-20-33
Pinion Group Disassembly	40-20-30
Pinion Group Inspection	40-20-32
Pinion Group Parts Identification	40-20-29
Planetary Carrier Assembly	40-20-62
Planetary Carrier Disassembly	40-20-2
Planetary Carrier Inspection	40-20-4
Planetary Carrier Parts Identification	40-20-1
Steering Knuckle Assembly	40-20-57
Steering Knuckle Disassembly	40-20-10
Steering Knuckle Parts Identification	40-20-9
Wheel Hub Assembly	40-20-60
Wheel Hub Disassembly	40-20-6
Wheel Hub Inspection	40-20-9
Wheel Hub Parts Identification	40-20-5

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above)	40-22-1
General Information	40-22-1
Planetary carrier Assembly	40-22-53
Planetary Carrier Disassembly	40-22-2
Planetary Carrier Parts Identification	40-22-1
Steering Knuckle and Drive Axle Parts Identification	40-22-7
Steering Knuckle Assembly	40-22-50
Steering Knuckle Disassembly	40-22-8
Bevel pinion Parts Identification	40-22-23
Bevel Pinion Assembly	40-22-27
Bevel Pinion Disassembly	40-22-24

Continued On Next Page

DRIVE SYSTEM

DRIVE SYSTEM (CONT'D)

Brake system Identification	40-22-12
Brake System Assembly	40-22-41
Brake System Disassembly	40-22-13
Differential Parts Identification	40-22-17
Differential assembly	40-22-36
Differential Disassembly	40-22-18
Drive Axle Disassembly	40-22-10
Drive Axle Assembly	40-22-48

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (Cont'd).	40-21-1
Axle Housing/Drive Axle Assembly	40-21-46
Axle Housing/Drive Axle Disassembly	40-21-13
Axle Housing/Drive Axle Parts Identification	40-21-12
Differential Assembly	40-21-35
Differential Disassembly	40-21-16
Differential Inspection	40-21-23
Differential Parts Identification	40-21-16
General Information	40-21-1
Pinion Group Assembly	40-21-29
Pinion Group Disassembly	40-21-25
Pinion Group Inspection	40-21-28
Pinion Group Parts Identification	40-21-24
Planetary Carrier Assembly	40-21-54
Planetary Carrier Disassembly	40-21-2
Planetary Carrier Inspection	40-21-4
Planetary Carrier Parts Identification	40-21-1

AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above).	40-23-1
Bevel pinion Assembly	40-23-18
Bevel pinion Disassembly	40-23-15
Differential assembly	40-23-26
Differential and Bevel Pinion Parts Identification	40-23-10
Differential Disassembly	40-23-11
General Information	40-23-1
Steering Knuckle Assembly	40-23-31
Steering Knuckle Disassembly	40-23-8
Steering Knuckle and Drive Axle Parts Identification	40-23-7
Planetary Carrier Assembly	40-23-34
Planetary Carrier Parts Identification	40-23-1

Continued On Next Page

DRIVE SYSTEM (CONT'D)

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (Cont'd)	40-21-1
Steering Knuckle Assembly	40-21-49
Steering Knuckle Disassembly	40-21-10
Steering Knuckle Parts Identification	40-21-9
Wheel Hub Assembly	40-21-52
Wheel Hub Disassembly	40-21-6
Wheel Hub Inspection	40-21-9
Wheel Hub Parts Identification	40-21-5
 AXLE PIVOT FRAME (Only For S/N 362811001 - 362812000, S/N 362911001 - 362912000)	40-32-1
Bushing Removal And Installation	40-32-2
Removal And Installation	40-32-1
 AXLE TOE-IN (For S/N 362812001 and Above, S/N 362912001 and Above)	40-41-1
Adjustment	40-41-1
 AXLE TOE-IN (For S/N 362811001 - 362812000, S/N 362911001 - 362912000)	40-40-1
Adjustment	40-40-1
 DRIVESHAFT	40-70-1
Removal And Installation	40-70-1
 FRONT AXLE (For S/N 362812001 and Above, S/N 362912001 and Above)	40-33-1
Installation	40-33-8
Removal	40-33-1
 FRONT AXLE WITHOUT FRAME LEVELING (For S/N 362811001 - 362812000)	40-30-1
Installation	40-30-7
Removal	40-30-1
 FRONT AXLE WITH FRAME LEVELING (For S/N 362911001 - 362912000)	40-31-1
Installation	40-31-6
Removal	40-31-1
 PARKING BRAKE (For S/N 362812001 and Above, S/N 362912001 and Above)	40-51-1
Preparing for towing	40-51-1
Disengaging the hydrostatic transmission	40-51-1
Releasing the parking brake	40-51-2
Towing the Telescopic Handler	40-51-2

Continued On Next Page

DRIVE SYSTEM (CONT'D)

PARKING BRAKE (For S/N 362811001 - 362812000, S/N 362911001 - 362912000).....	40-50-1
Preparing for towing	40-50-1
Disengaging the hydrostatic transmission	40-50-1
Releasing the parking brake	40-50-2
Towing the Telescopic Handler	40-50-2
 REAR AXLE (For S/N 362812001 and Above, S/N 362912001 and Above).....	40-91-1
Installation	40-91-4
Removal	40-91-1
 REAR AXLE (For S/N 362811001 - 362812000, S/N 362911001 - 362912000).....	40-90-1
Installation	40-90-4
Removal	40-90-1
 SERVICE BRAKE (For S/N 362812001 and Above, S/N 362912001 and Above).....	40-81-1
Bleeding The Brake Circuit	40-81-1
Description.....	40-81-1
 SERVICE BRAKE (For S/N 362811001 - 362812000, S/N 362911001 - 362912000).....	40-80-1
Bleeding The Brake Circuit	40-80-1
Description.....	40-80-1
 STEERING ANGLE ADJUSTMENT (For S/N 362812001 and Above, S/N 362912001 and Above).....	40-61-1
Adjustment.....	40-61-1
 STEERING ANGLE ADJUSTMENT (For S/N 362811001 - 362812000, S/N 362911001 - 362912000)	40-60-1
Adjustment.....	40-60-1
 TROUBLESHOOTING	40-10-1
Chart	40-10-1

TROUBLESHOOTING

Chart

The following Troubleshooting Chart is provided for assistance in locating and correcting problems which are most common. Many of the recommended procedures must be done by authorized Bobcat Service Personnel only.

PROBLEM	CAUSE
Pinion or Ring gear tooth broken	1, 2, 3, 4, 5, 6
Pinion teeth pitted	5, 11
Axle housing bent	12, 13
Worn or pitted bearings	3, 5, 6, 8, 11, 14
Oil leakage	6, 9, 10, 14, 15
Excessive wear on input shaft splines	3, 16, 17, 19
Pinion teeth fatigue	7, 12, 17, 19
Side gear spline worn	17, 19
Thrust washer surface worn	5, 6, 7
Inner diameter of tapered roller bearing worn	5, 6, 18, 19
Bent or broken half shaft	19
Half shaft broken at wheel side	20, 21

KEY TO CORRECT THE CAUSE
1. Excessive gear load
2. Incorrect gear adjustment (excessive play)
3. Pinion nut loose
4. Incorrect gear adjustment (insufficient play)
5. Insufficient lubrication
6. Contaminated oil
7. Incorrect lubrication
8. Worn bearings
9. Operation at high temperature
10. Low oil level
11. Excessive use
12. Overloaded
13. Accident
14. Normal Wear
15. Lip seal damaged
16. Pinion axle play
17. Continuous overload
18. Excessive pinion axle play
19. Vehicle intensively operated or overloaded
20. Wheel loose
21. Beam housing bent



Bobcat®

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000)

General Information

For photo clarity, the following axle procedures are done with the complete axle assembly removed from the machine, although the planetary carrier, wheel hub, steering knuckle and drive axle procedures may be done with the axle assembly installed in the machine. For complete axle repair, the following must be done.


- Front Axle removal. (See "FRONT AXLE WITH FRAME LEVELING (For S/N 362911001 - 362912000)" on page 40-31-1.) or (See "FRONT AXLE WITHOUT FRAME LEVELING (For S/N

362811001 - 362812000)" on page 40-30-1)

- Drive motor removal. (See "Removal And Installation" on page 30-30-1)
- Drive box removal. (See "Disassembly" on page 20-70-2)
- Front steering cylinder removal. (See "Removal And Installation" on page 20-60-1.)
- Frame leveling cylinder removal (if equipped). (See "Removal And Installation (For S/N 362811001 - 362812000, S/N 362911001 - 362912000)" on page 20-100-1.)

Planetary Carrier Parts Identification

1. Plug
2. Bolt
3. Planetary Carrier
4. Thrust Pin
5. Shaft
6. Needle Bearings
7. Gear
8. Thrust Washer
9. Snap Ring

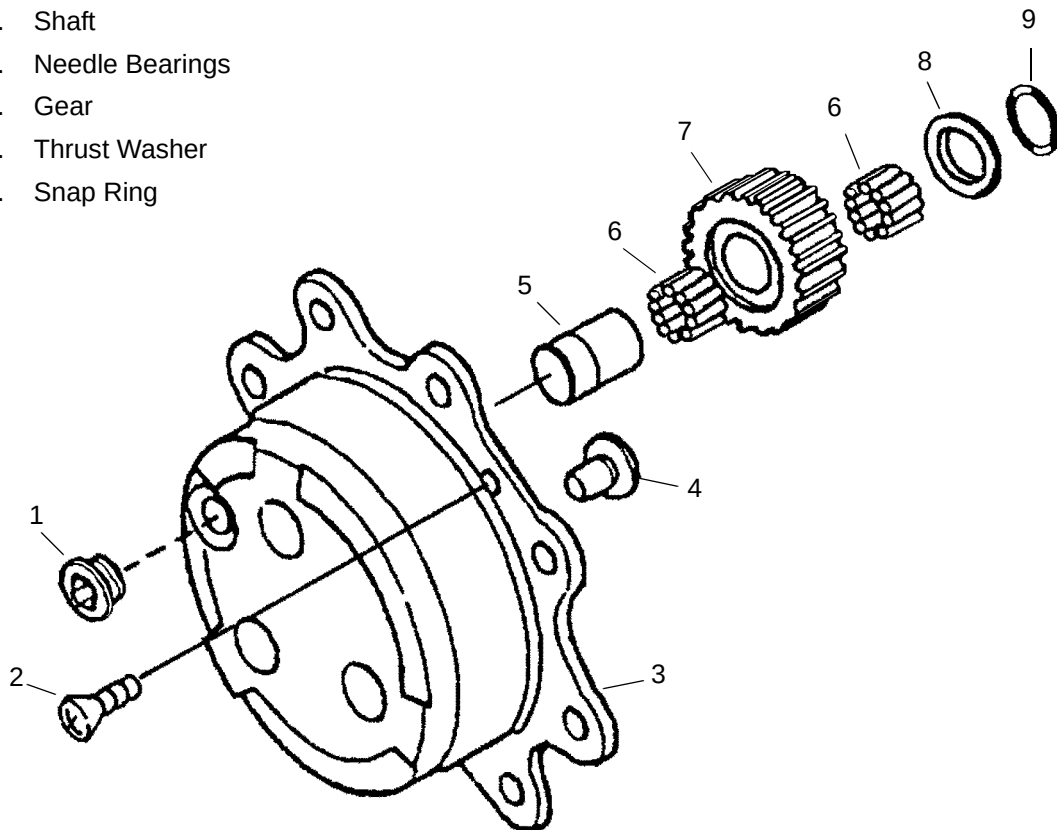

b-19863

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Planetary Carrier Disassembly

IMPORTANT

When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.


I-2003-0888

Figure 40-20-1

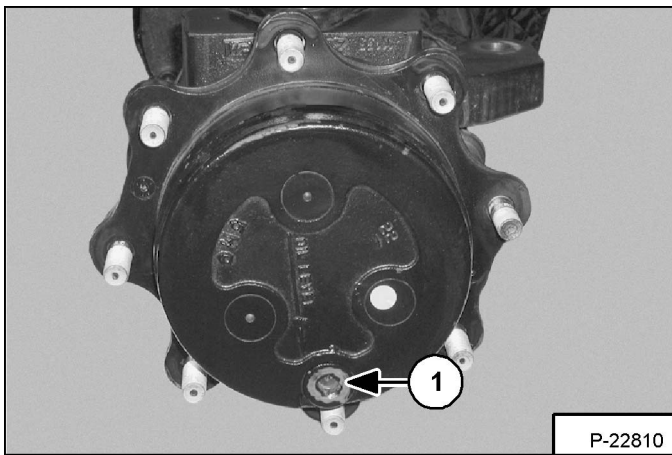


With the drain plug (Item 1) [Figure 40-20-1] in the position shown, place a drain pan under the hub, remove the plug and drain the oil from the planetary carrier. Dispose of the oil in an environmentally safe manner.

Figure 40-20-2

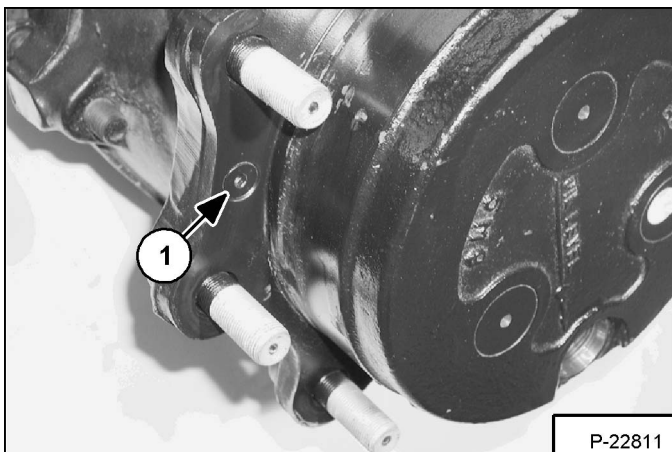


Remove the two screws (Item 1) [Figure 40-20-2] from the planetary carrier.

Figure 40-20-3

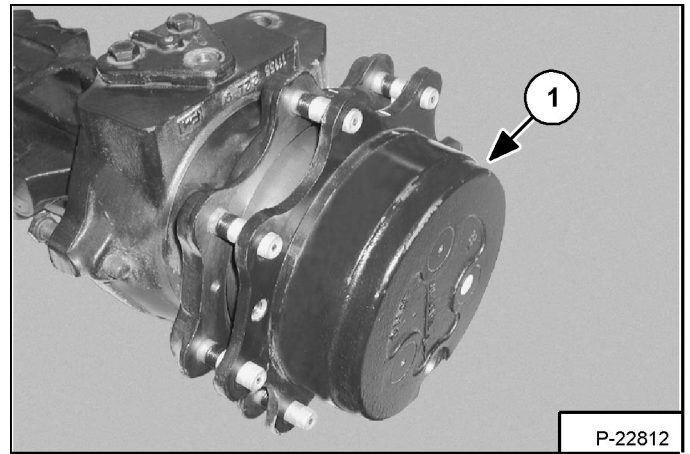

Remove the planetary carrier (Item 1) [Figure 40-20-3] from the axle.

Figure 40-20-4

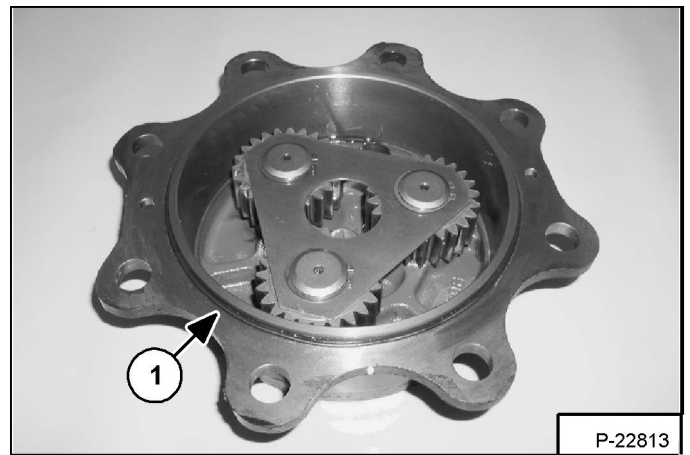


Remove and discard the O-ring (Item 1) [Figure 40-20-4] from the planetary carrier.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Planetary Carrier Disassembly (Cont'd)

Figure 40-20-5

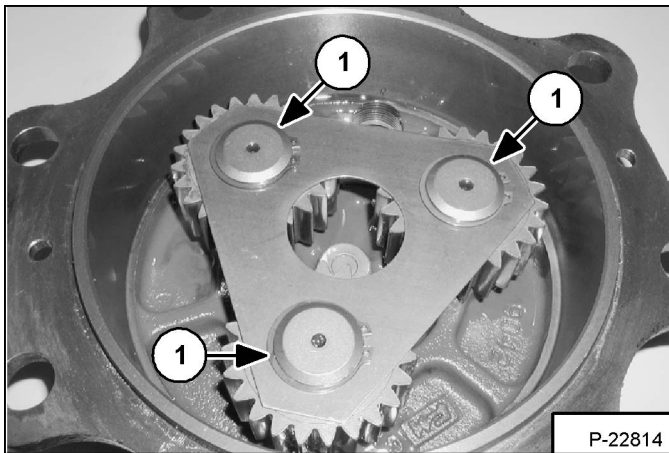


Remove the three snap rings (Item 1) [Figure 40-20-5].

Figure 40-20-6

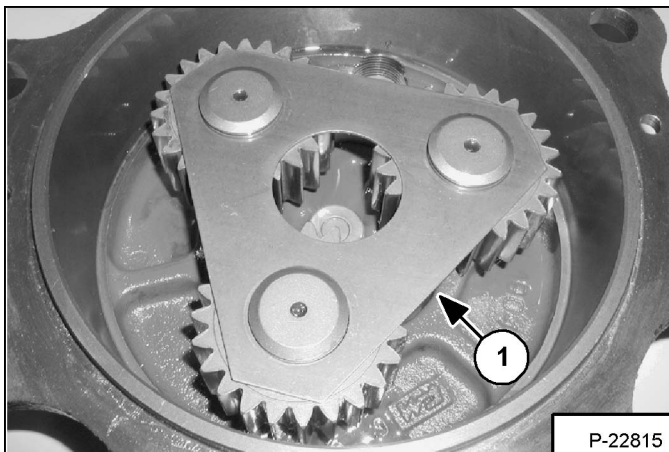

Remove the thrust plate (Item 1) [Figure 40-20-6].


Figure 40-20-7

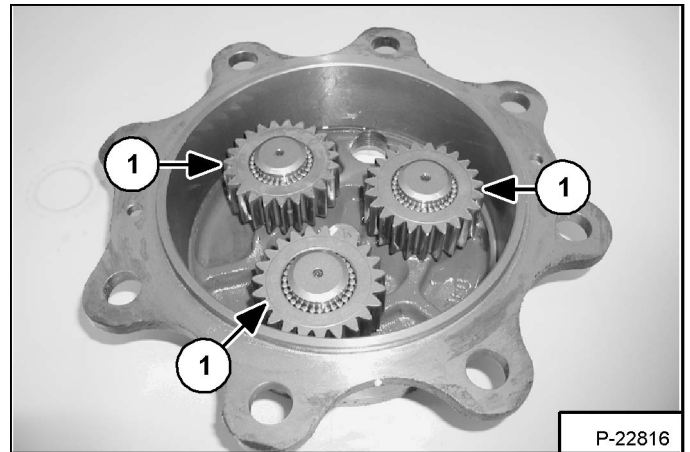

Remove the three gears (Item 1) [Figure 40-20-7] with needle bearings from each gear shaft.

NOTE: Mark the gear location for correct assembly.

Figure 40-20-8

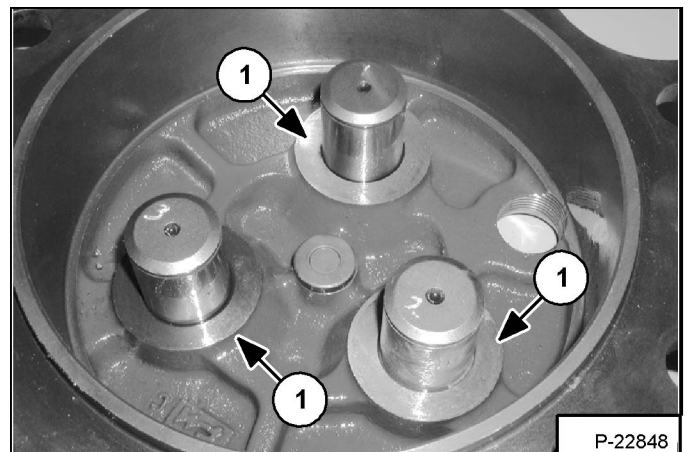


Remove the thrust washers (Item 1) [Figure 40-20-8] from each shaft.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Planetary Carrier Inspection


Figure 40-20-9

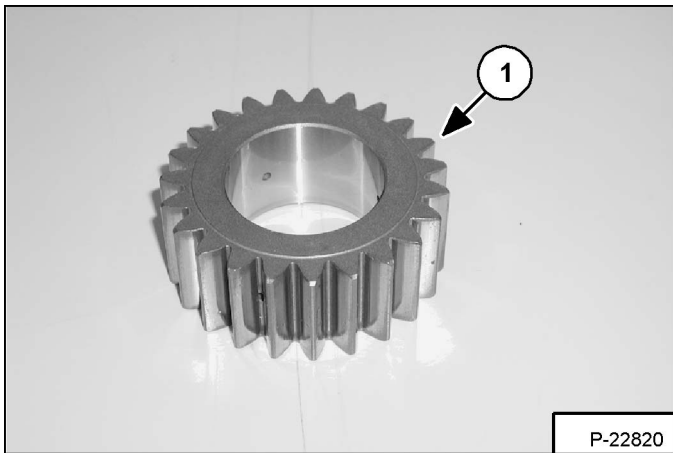

Inspect the planetary gears (Item 1) [Figure 40-20-9] for worn or cracked teeth.

If any of the planetary gears are damaged, replace all the planetary gears and drive axle end of the drive axle assembly. One damaged gear can cause a microscopic fatigue crack in mating teeth and cause premature failure after servicing.

Figure 40-20-10

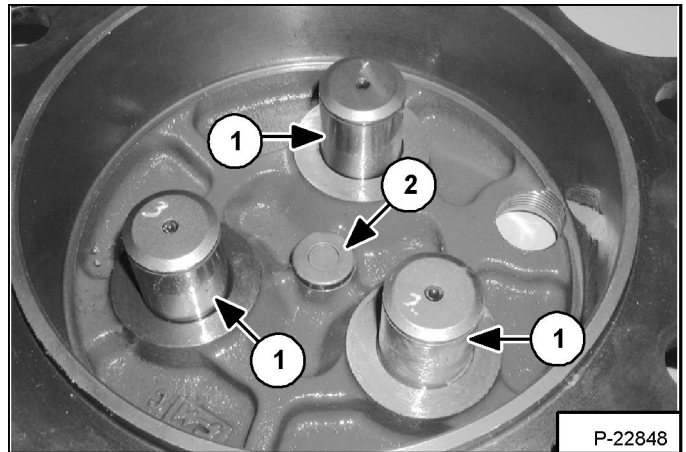


If any of the bearing shafts (Item 1) [Figure 40-20-10] are damaged, replace all bearing shafts.

If the thrust pin (Item 2) [Figure 40-20-10] is worn, replace the entire planetary carrier.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Wheel Hub Parts Identification

1. Ring Gear
2. Snap Ring
3. Thrust Washer
4. Spacer
5. Bushing
6. Bolt
7. Gear
8. Retainer Ring
9. O-Ring
10. Bearing (outer)
11. Hub
12. Bearing (inner)
13. Seal

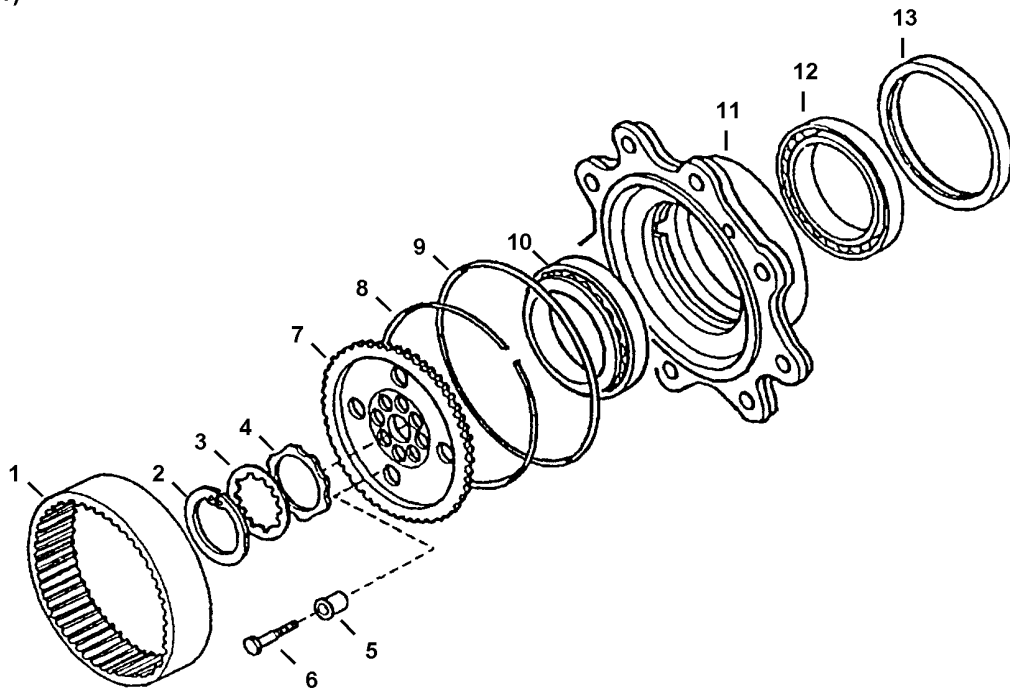


B-16011

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Wheel Hub Disassembly

Figure 40-20-11

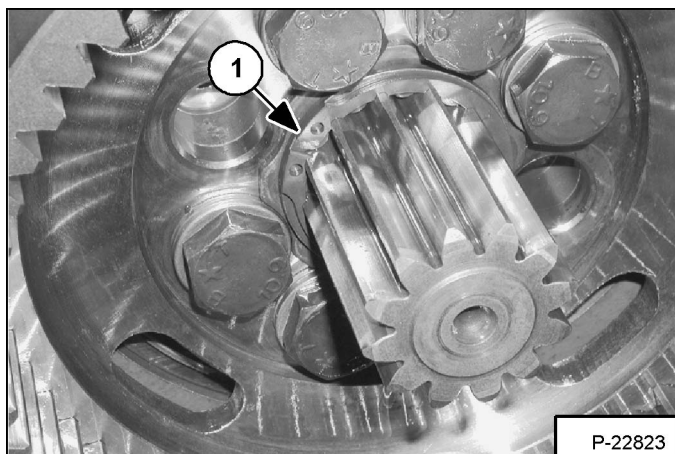


Remove the snap ring (Item 1) [Figure 40-20-11].

Figure 40-20-12

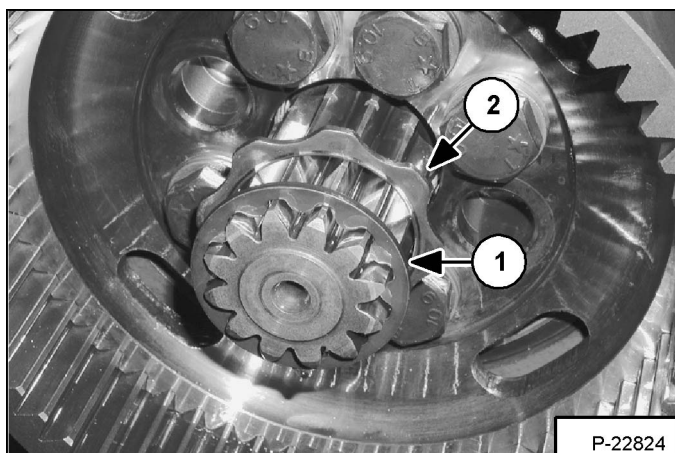


Remove the thrust washer (Item 1) and spacer (Item 2) [Figure 40-20-12].

Figure 40-20-13

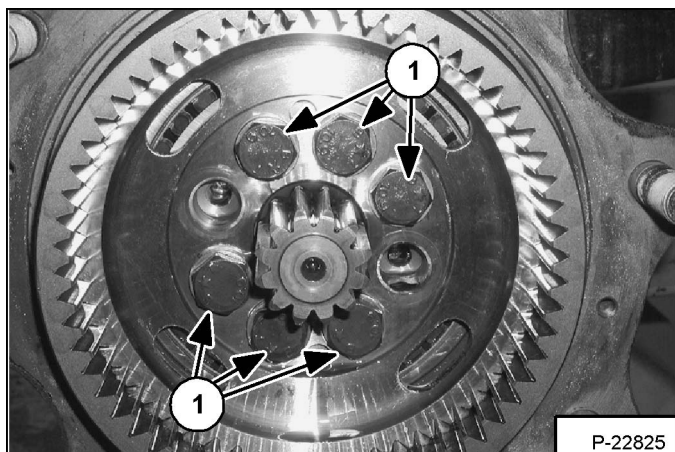

Remove the six ring gear mounting bolts (Item 1) [Figure 40-20-13].

Figure 40-20-14

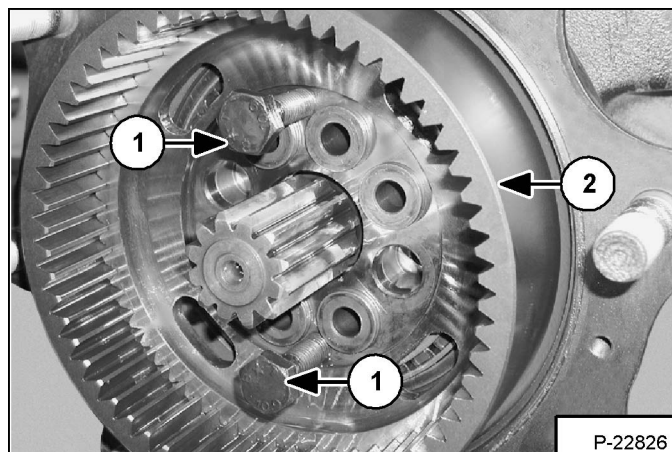


Install two bolts (Item 1) into the ring gear as shown, and tighten equally pushing the ring gear assembly (Item 2) [Figure 40-20-14] from the shaft.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Wheel Hub Disassembly (Cont'd)

Figure 40-20-15

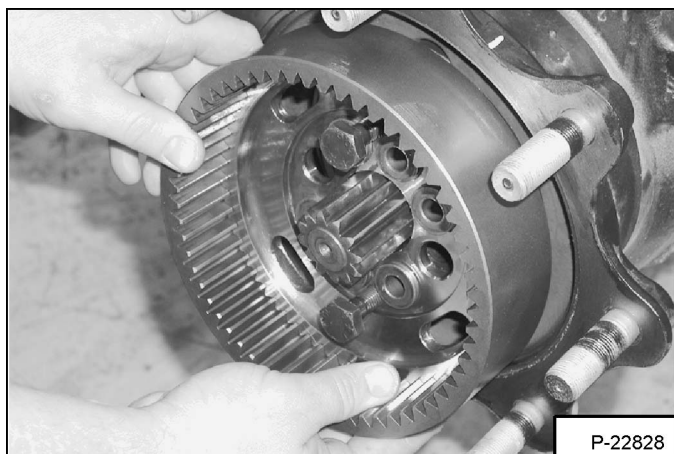

Remove the ring gear assembly [Figure 40-20-15].


Figure 40-20-16

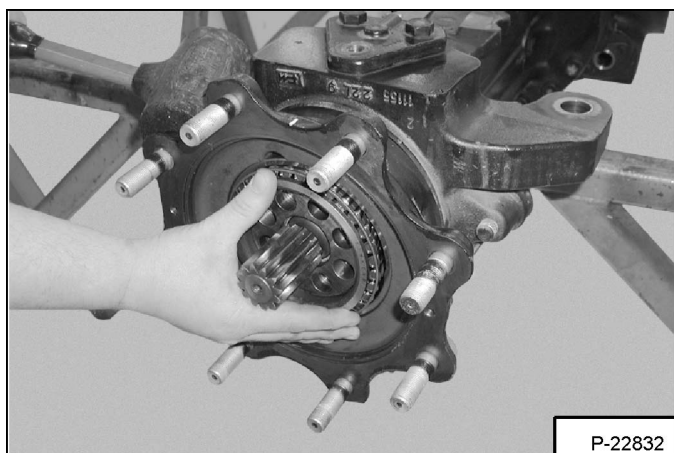

Remove the outer bearing and hub assembly from the axle [Figure 40-20-16].

NOTE: Use care while removing, as assembly may remove easy.

Figure 40-20-17

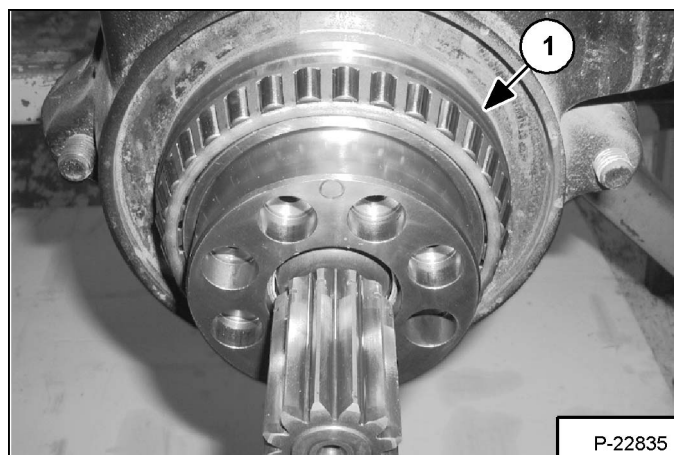

Remove the inner bearing (Item 1) [Figure 40-20-17] from the swivel housing.

Figure 40-20-18




Remove the retainer ring (Item 1) [Figure 40-20-18] from the ring gear assembly.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Wheel Hub Disassembly (Cont'd)

Figure 40-20-19

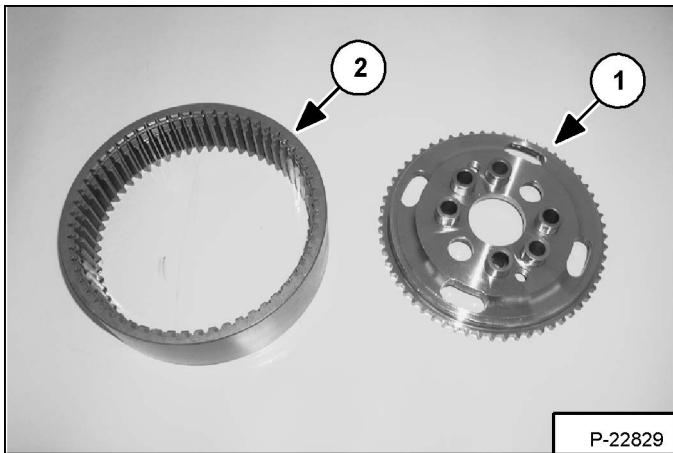


Remove the gear (Item 1) from the ring gear (Item 2) [Figure 40-20-19].

Figure 40-20-20

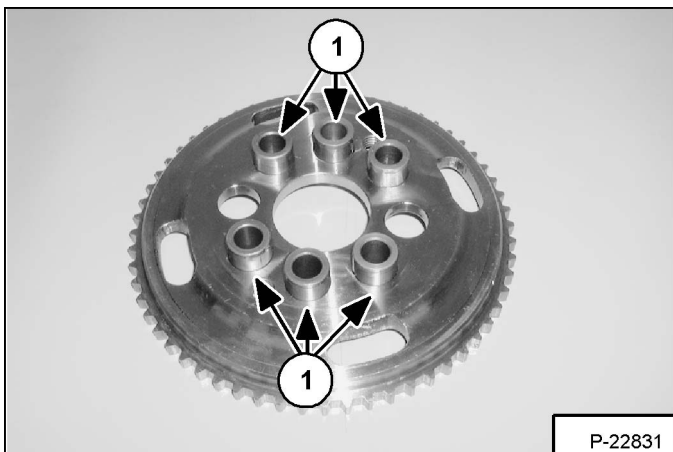


Remove the six bushings (Item 1) [Figure 40-20-20] from the gear if damaged or worn.

Figure 40-20-21

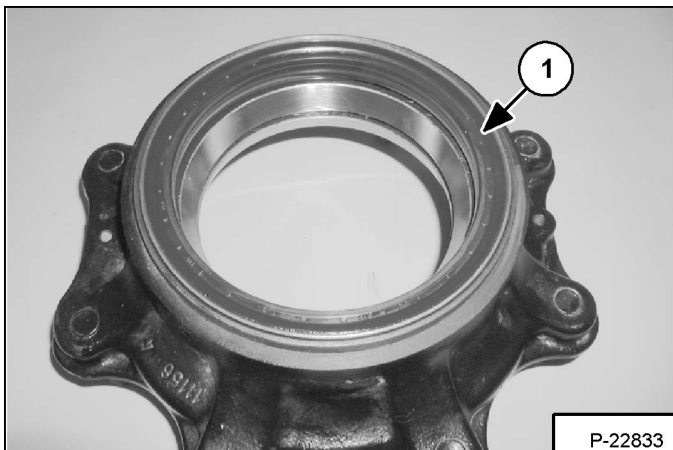

Remove the seal (Item 1) [Figure 40-20-21] from the hub.

Figure 40-20-22

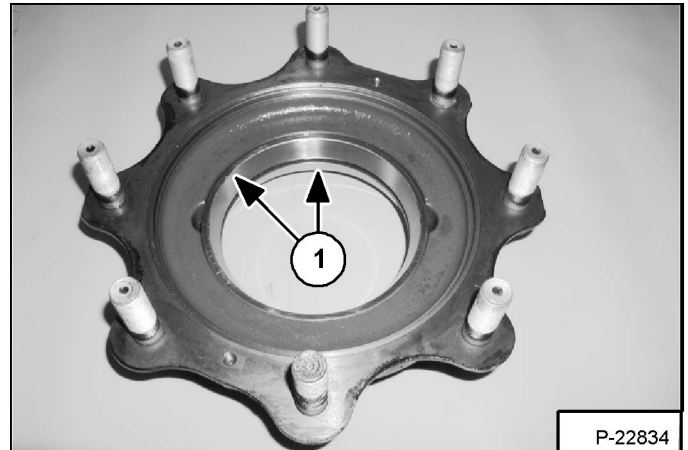


Using a brass drift remove both bearing races (Item 1) [Figure 40-20-22] from the hub.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Wheel Hub Inspection

Figure 40-20-23

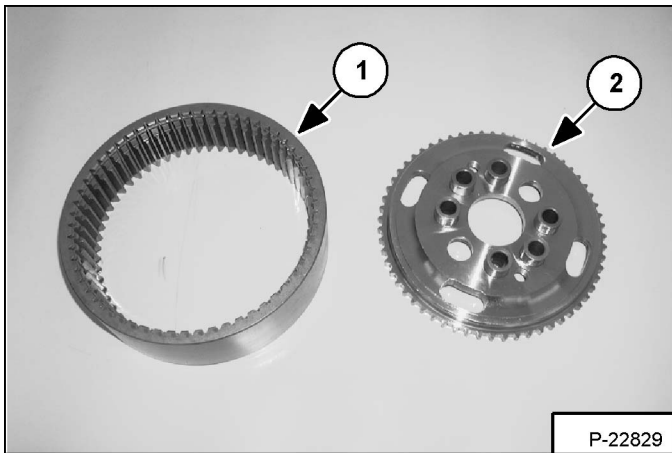


Inspect the ring gear (Item 1) and inner gear (Item 2) [Figure 40-20-23] for broken or damaged teeth.

If the ring gear or innergear are damaged, replace both parts.

Steering Knuckle Parts Identification

1. Bolt
2. Grease Fitting
3. Knuckle Housing
4. King Pin (upper)
5. King Pin (lower)
6. Bushing
7. Washer
8. Spacer Washer
9. Housing
10. Vent

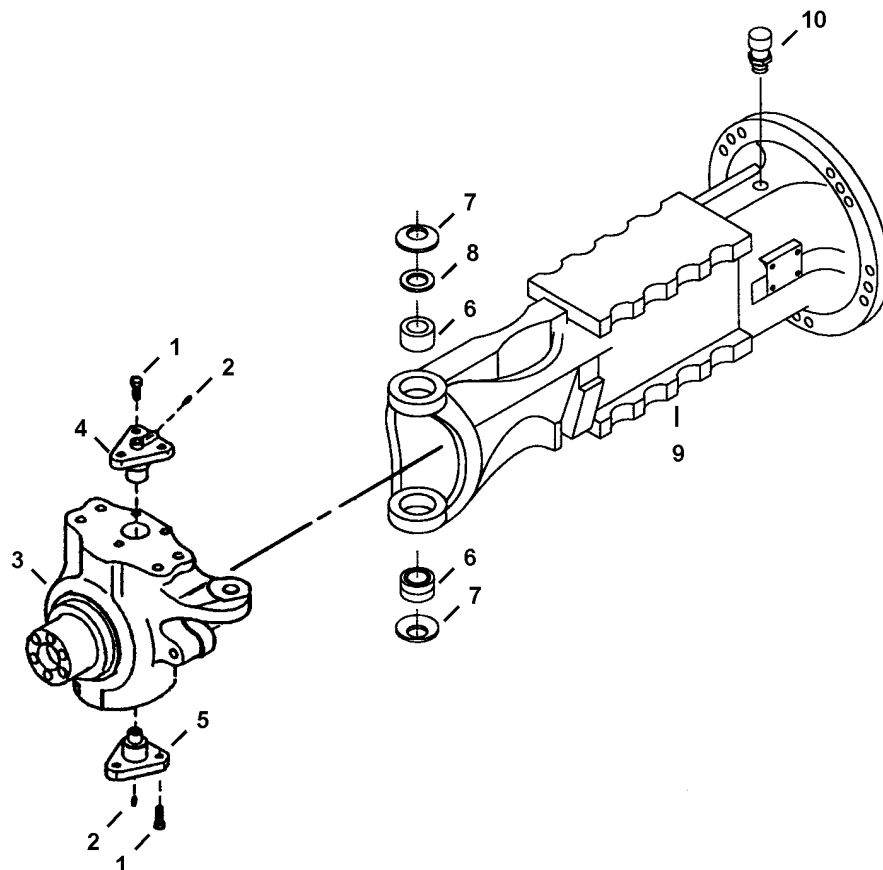


B-16010

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Steering Knuckle Disassembly

Figure 40-20-24

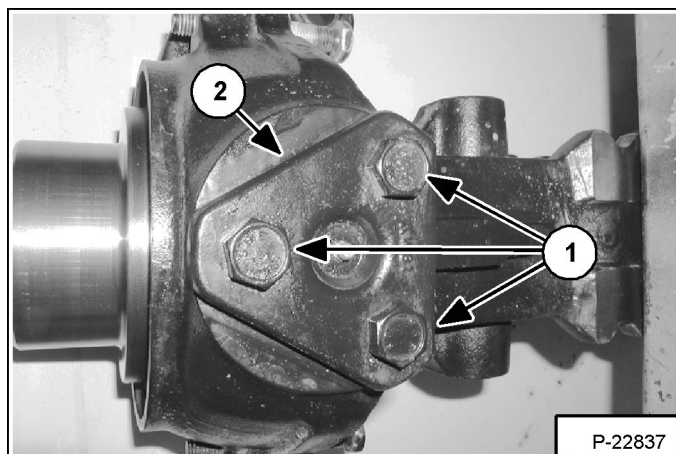


Remove the three bolts (Item 1) and king pin (Item 2) [Figure 40-20-24] from the bottom of the knuckle.

Figure 40-20-25

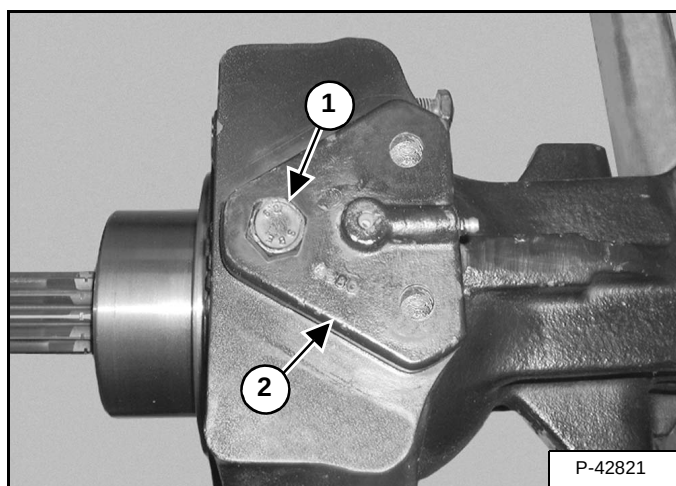


Remove the bolt (Item 1) and king pin (Item 2) [Figure 40-20-25] from the top of the knuckle.

Figure 40-20-26

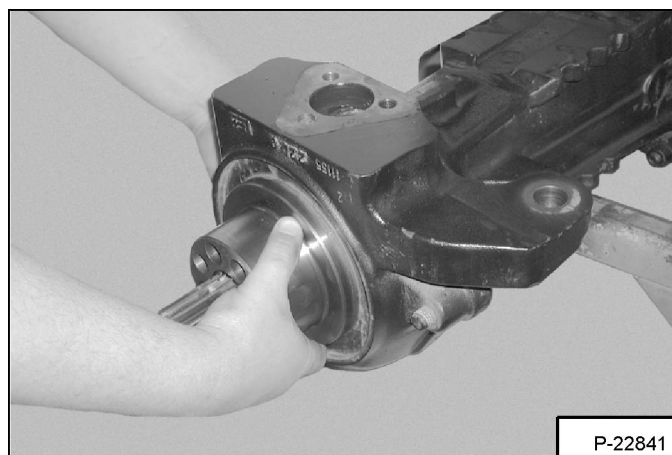

Lift and remove the knuckle assembly from the axle [Figure 40-20-26].

Figure 40-20-27

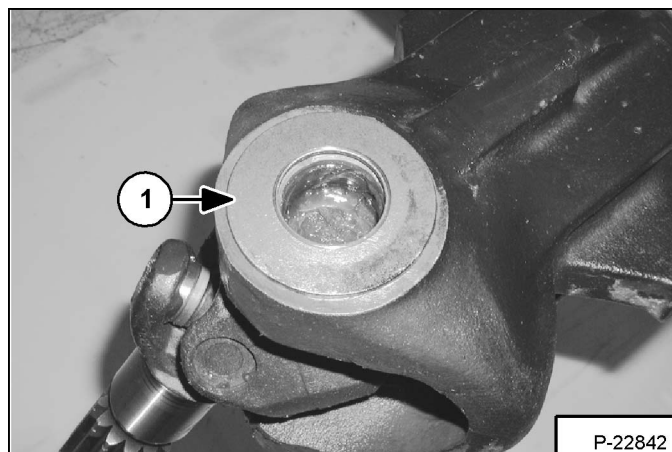


Remove the Belleville washers (Item 1) [Figure 40-20-27] from the top and bottom of the axle.

NOTE: The bottom Belleville washer is smaller than the top Belleville washer.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Steering Knuckle Disassembly (Cont'd)

Figure 40-20-28

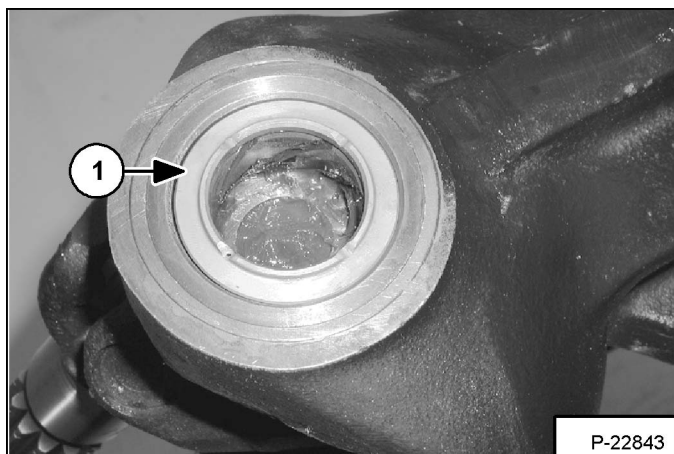

Remove the spacer washer (Item 1) [Figure 40-20-28] from the top of the axle.

Figure 40-20-29



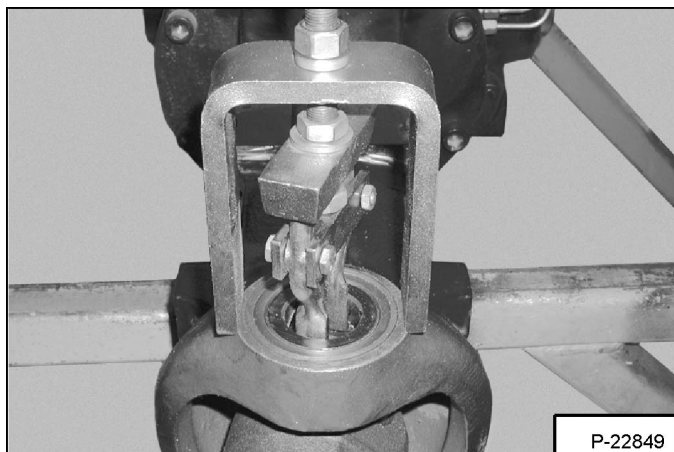


Figure 40-20-30

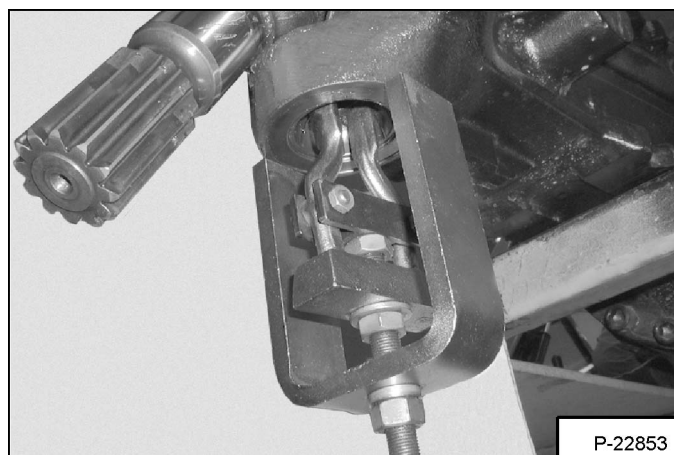

Using a puller, remove the top and bottom bushings from the axle [Figure 40-20-29] & [Figure 40-20-30].

Figure 40-20-31

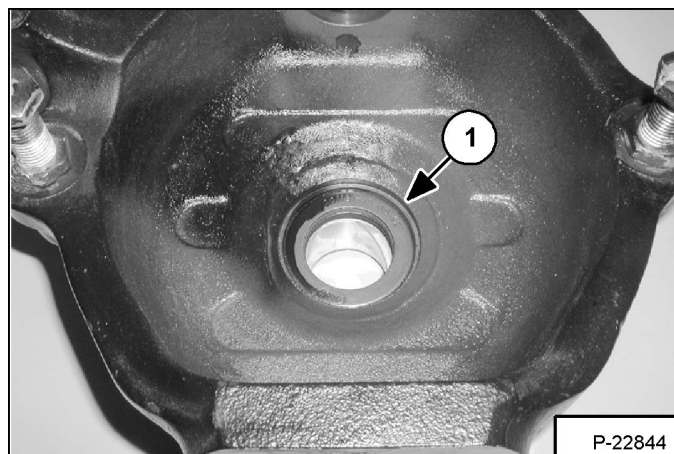


Remove the seal (Item 1) [Figure 40-20-31] from the knuckle assembly.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Steering Knuckle Disassembly (Cont'd)

Figure 40-20-32

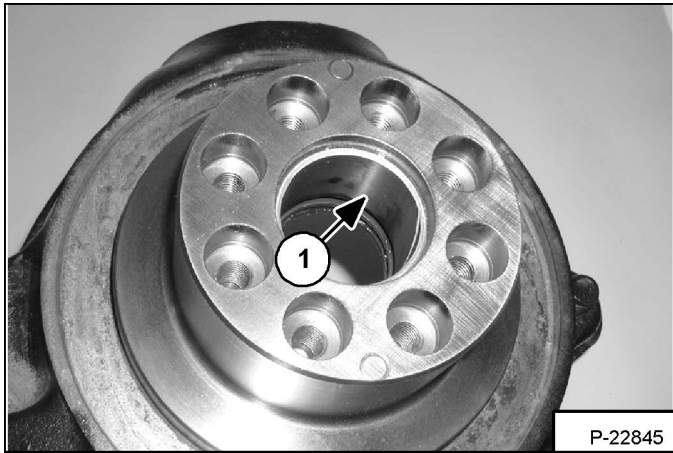

Remove the bushing (Item 1) [Figure 40-20-32] from the knuckle assembly.

Axle Housing/Drive Axle Parts Identification

1. Drive Shaft (outer)
2. Bearing
3. Snap Ring
4. Yoke
5. Drive Shaft (inner)
6. Seal
7. Bushing
8. Axle Housing


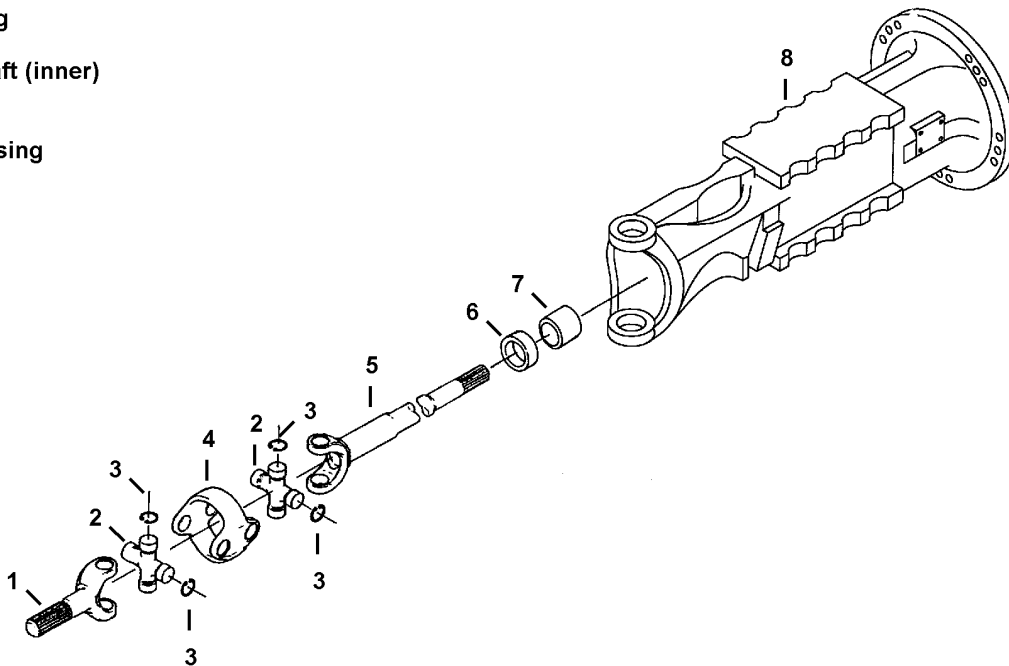


Figure 40-20-33

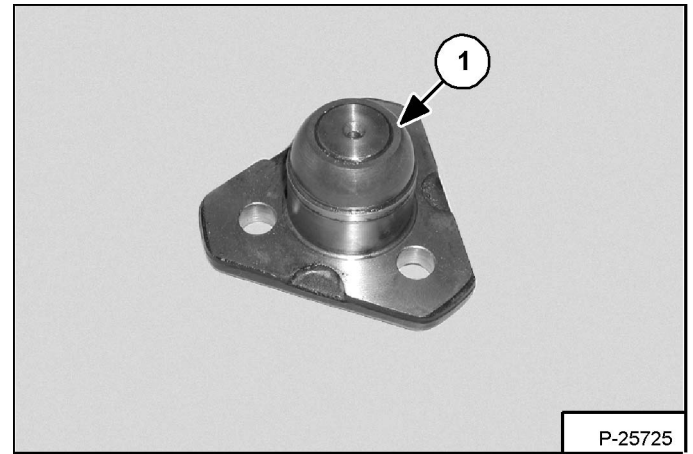


Remove the ball type bearing (Item 1) [Figure 40-20-33] from the lower king pin.

NOTE: Removal procedure will destroy the ball bearing.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Axle Housing/Drive Axle Disassembly

Figure 40-20-34

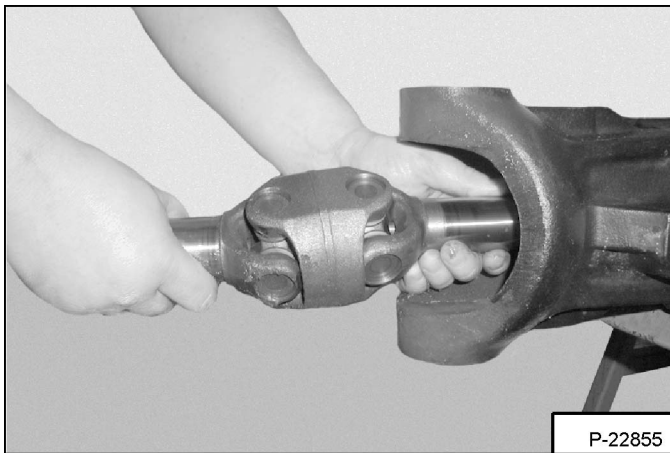


Remove the drive axle from the axle housing [Figure 40-20-34].

Figure 40-20-35

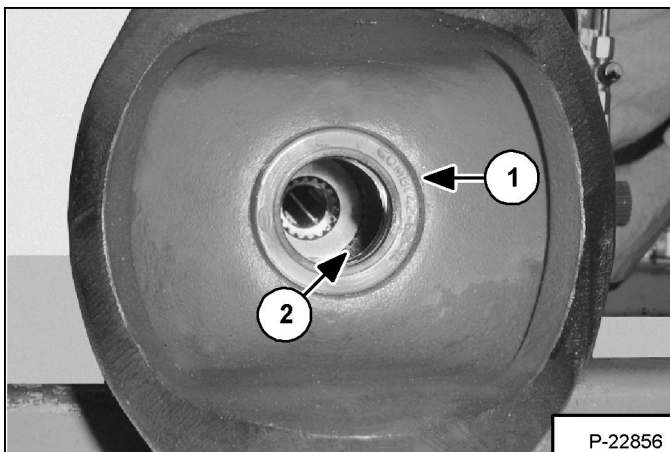


Remove the seal (Item 1) and bushing (Item 2) [Figure 40-20-35] from the axle end housing.

Figure 40-20-36

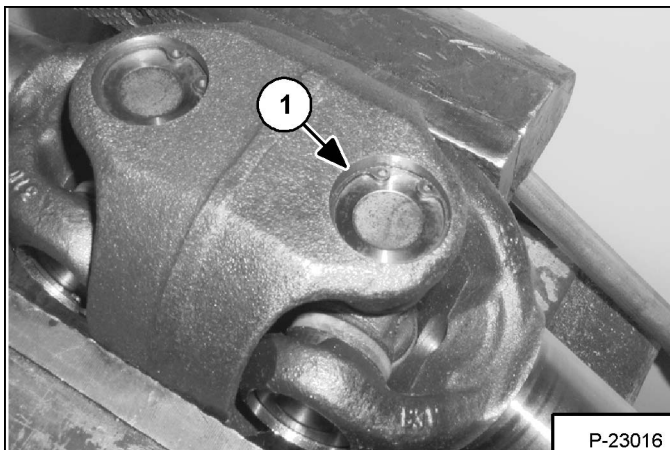

Remove the two snap rings (Item 1) [Figure 40-20-36] across from each other.

Figure 40-20-37

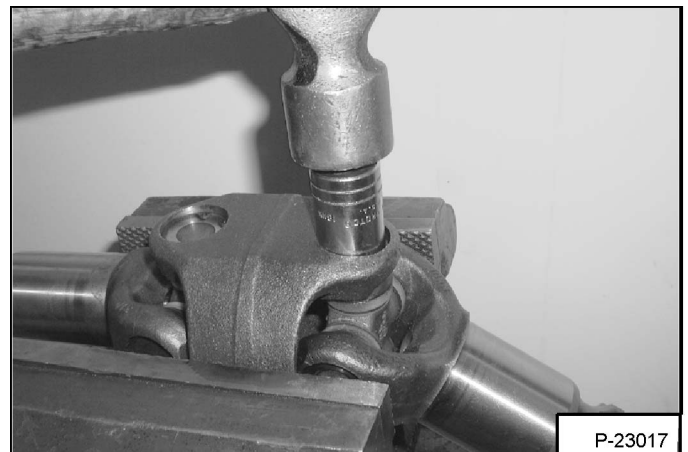


Drive the upper bearing cup down to push the opposite bearing cup partially through the yoke [Figure 40-20-37].

NOTE: The bottom bearing cup will not be completely removed.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Axle Housing/Drive Axle Disassembly (Cont'd)

Figure 40-20-38

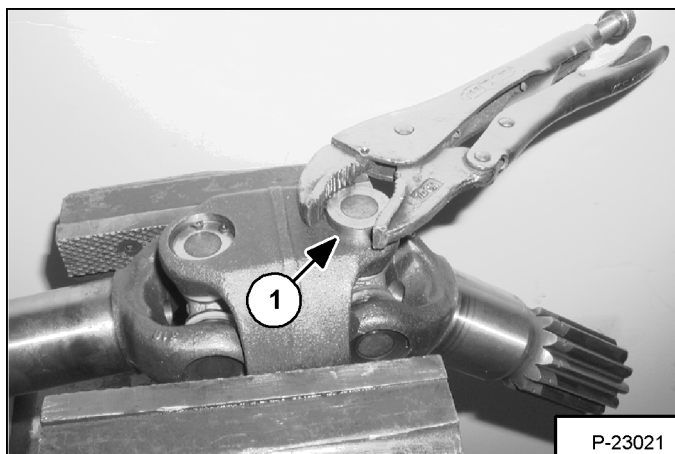

Turn the shaft over and remove the bearing cup (Item 1) [Figure 40-20-38].


Figure 40-20-39

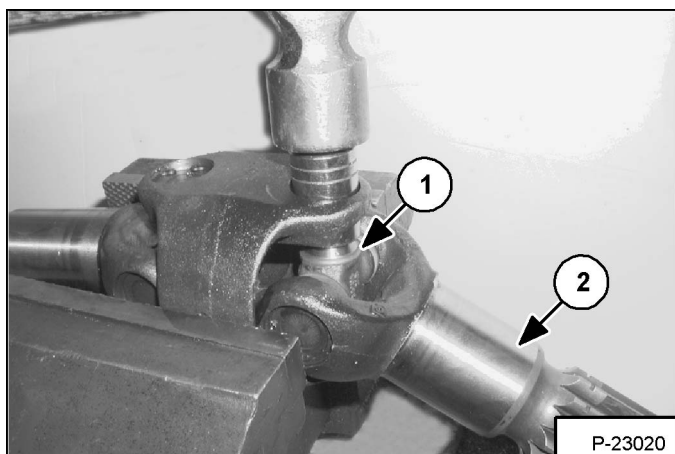

Drive the cross (Item 1) [Figure 40-20-39] down to push the opposite bearing cup through the yoke.


NOTE: Drive shaft end (Item 2) [Figure 40-20-39] may fall out of the yoke.

Figure 40-20-40

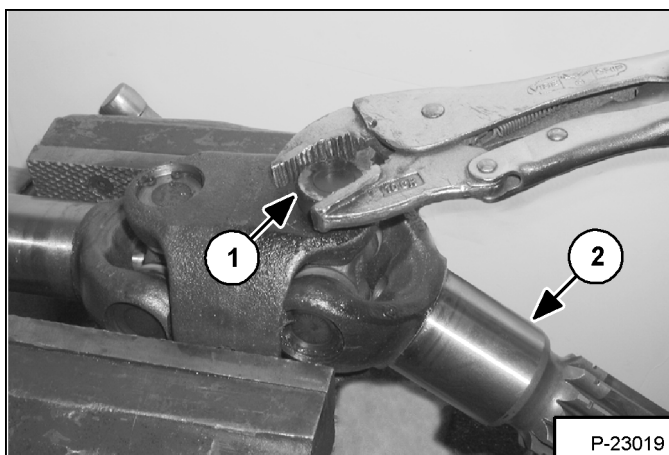

Turn the shaft over and remove the bearing cup (Item 1). Remove the drive shaft (Item 2) [Figure 40-20-40] from the yoke.

Figure 40-20-41

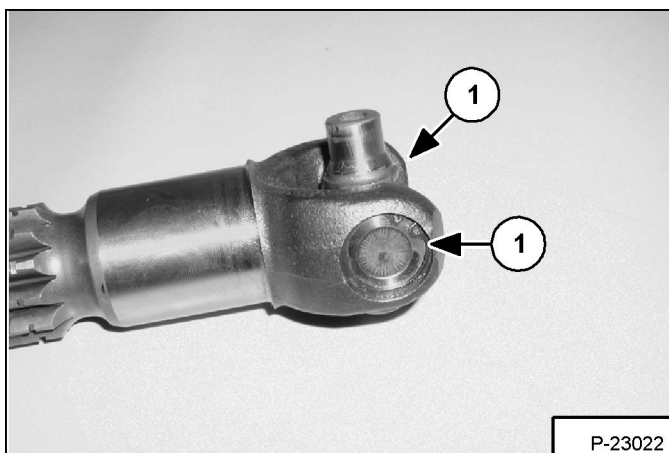


Remove the two snap rings (Item 1) [Figure 40-20-41] from the yoke.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Axle Housing/Drive Axle Disassembly (Cont'd)

Figure 40-20-42

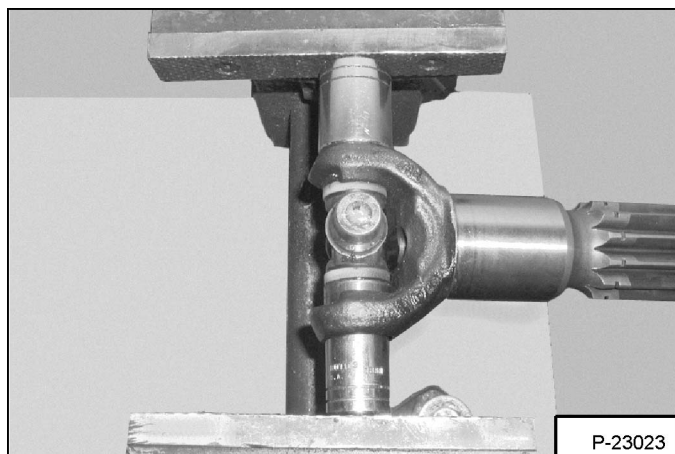


Using two different size sockets and a vice, press one bearing cup into the yoke while pushing the opposite bearing cup through the yoke [Figure 40-20-42].

Figure 40-20-43

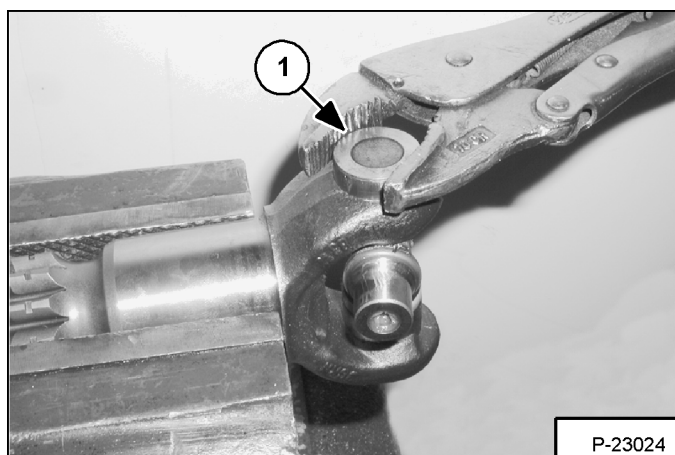


Remove the bearing cup (Item 1) [Figure 40-20-43].

Figure 40-20-44

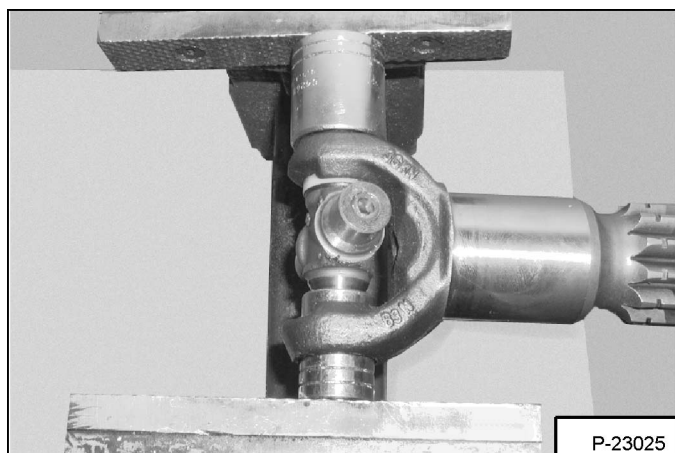

Press the second bearing cup through the yoke [Figure 40-20-44].

Figure 40-20-45

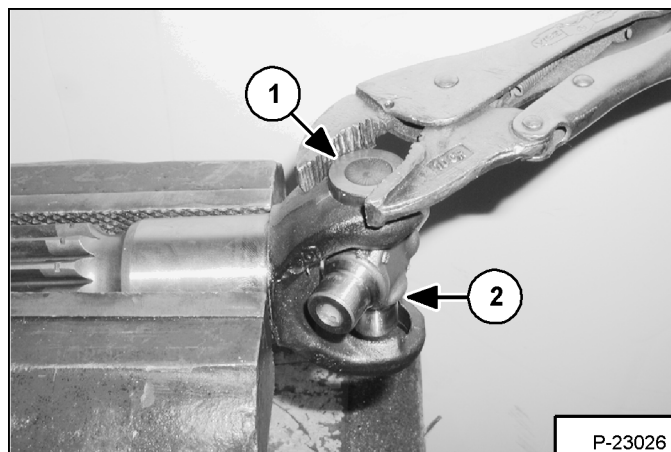


Remove the bearing cup (Item 1) and cross (Item 2) [Figure 40-20-45] from the yoke.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Axle Housing/Drive Axle Disassembly (Cont'd)

Figure 40-20-46

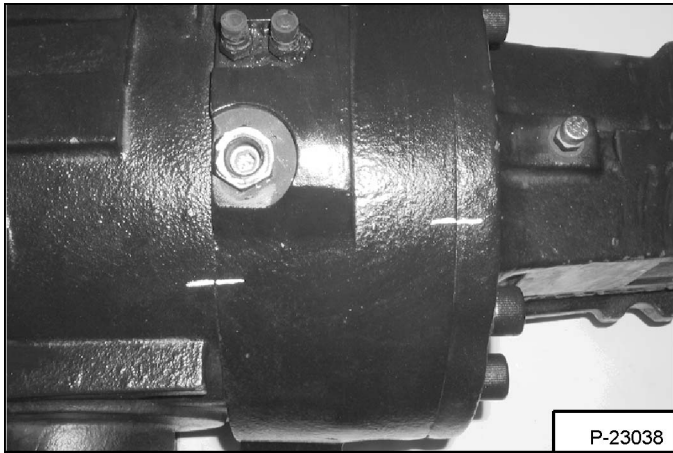


With the axle supported on a secure work surface or floor mark the axle housing to the center housing for correct assembly [Figure 40-20-46].

Figure 40-20-47

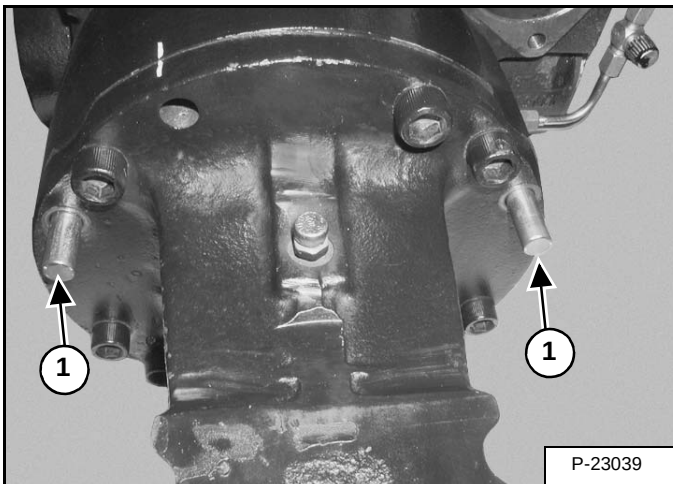


Remove the two axle housing mounting bolts and install two alignment studs (Item 1) [Figure 40-20-47].

Figure 40-20-48

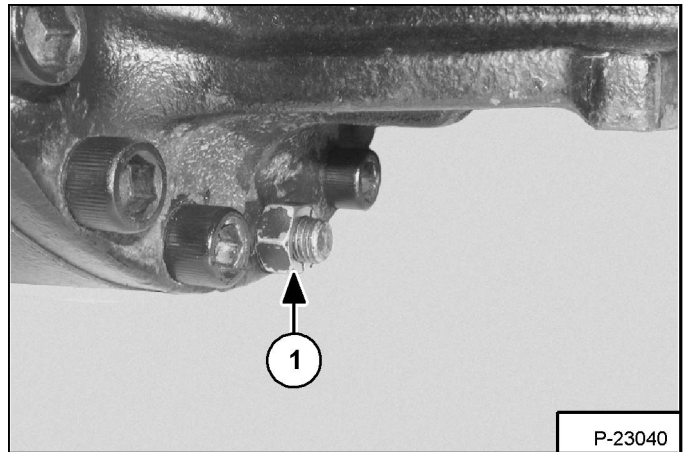

Remove the nut (Item 1) [Figure 40-20-48] from the bottom of the housing.

Figure 40-20-49

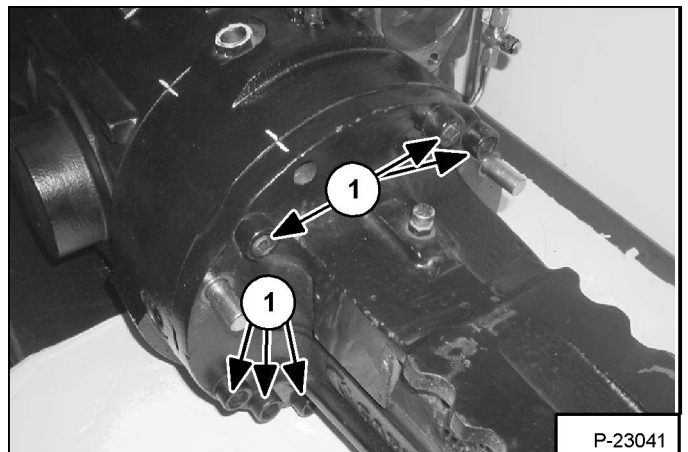


Remove the remaining mounting bolts (Item 1) [Figure 40-20-49].

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Axle Housing/Drive Axle Disassembly (Cont'd)


Figure 40-20-50

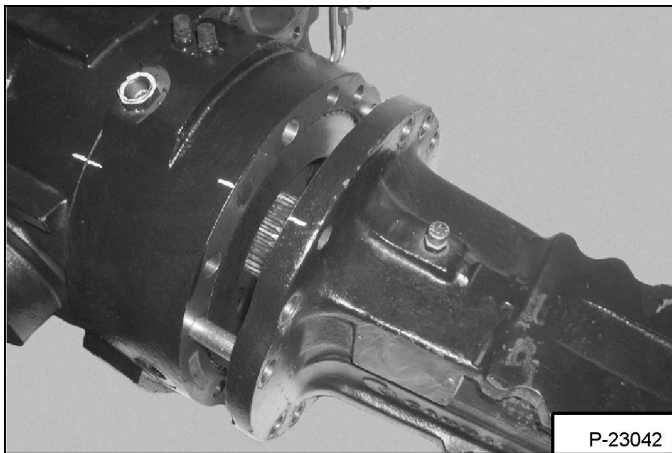

Separate the axle housing from the brake housing [Figure 40-20-50].

Remove the axle housing.


Figure 40-20-51

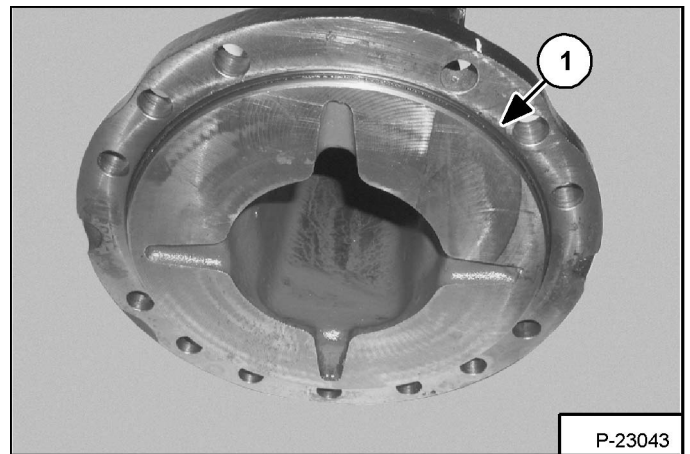

Remove the O-ring (Item 1) [Figure 40-20-51] from the axle housing.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Brake Group Parts Identification

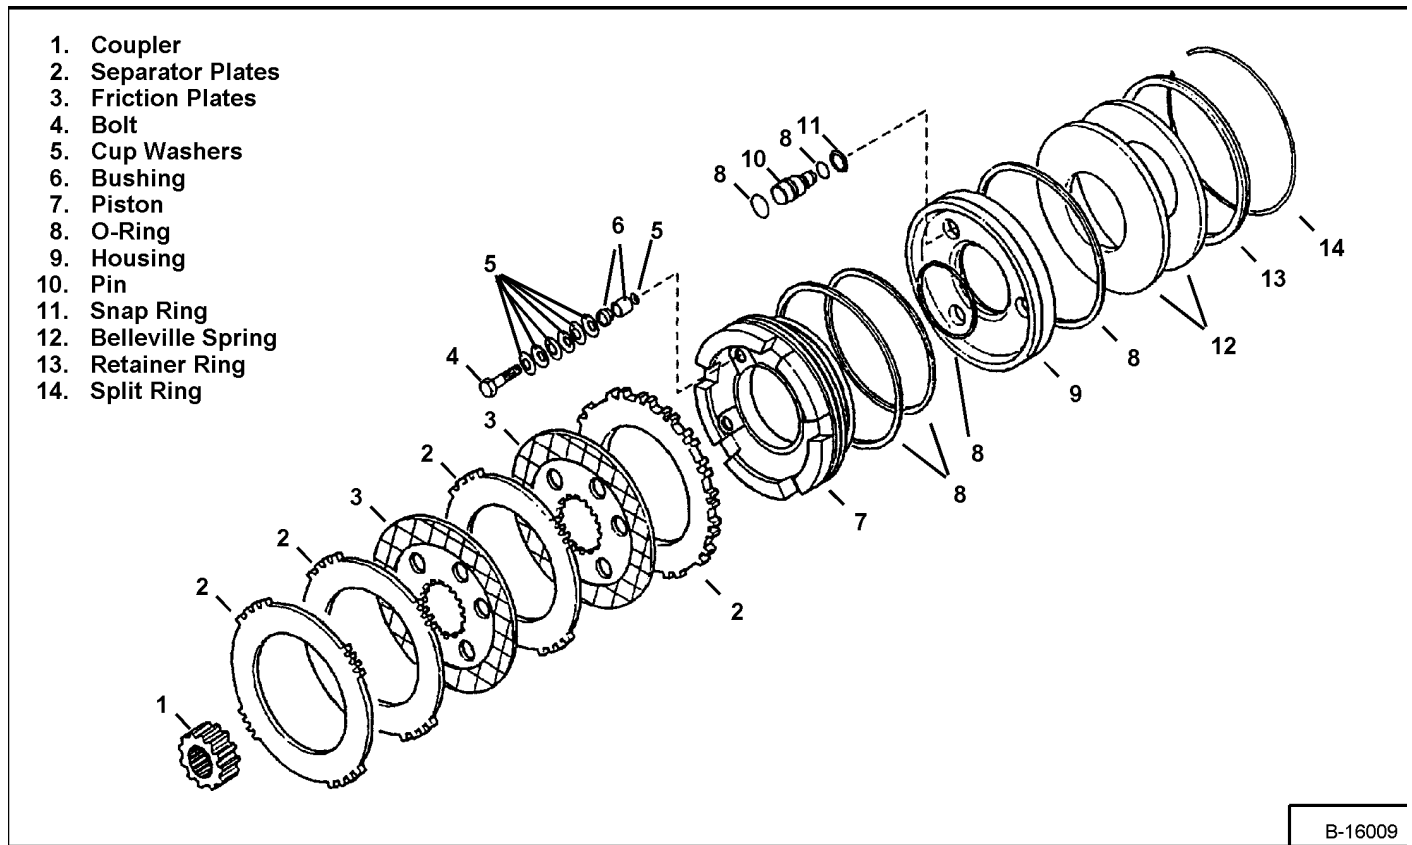


B-16009

Brake Group Disassembly


Figure 40-20-53

Figure 40-20-52

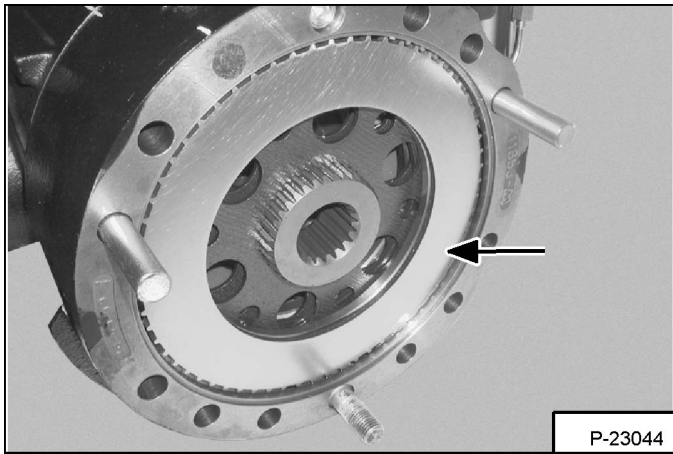

Remove the brake separator plates, friction plates and coupler from the brake housing [Figure 40-20-52].

NOTE: For friction plate replacement do not remove the brake housing.

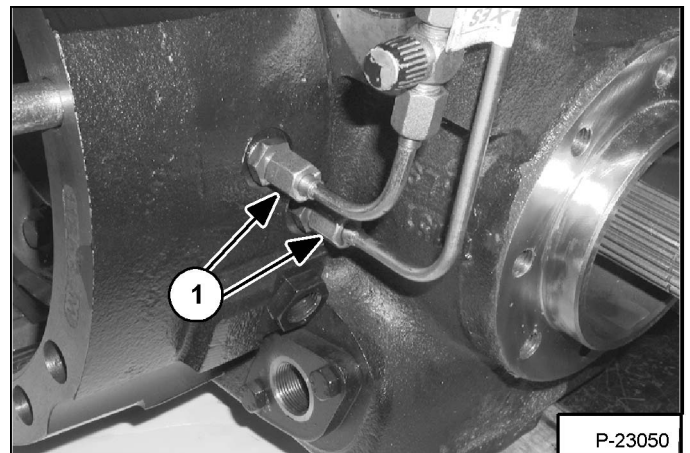


Remove the tube lines (Item 1) [Figure 40-20-53].

NOTE: Mark the tube lines for correct assembly.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Brake Group Disassembly (Cont'd)

Figure 40-20-54

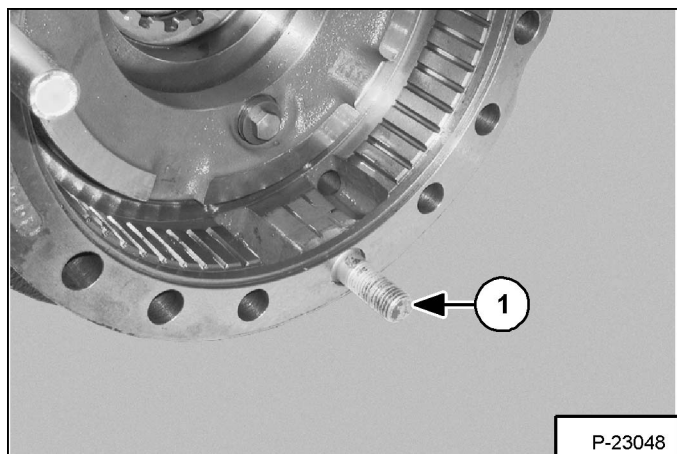


Remove the stud bolt (Item 1) [Figure 40-20-54] from the housing.

Figure 40-20-55

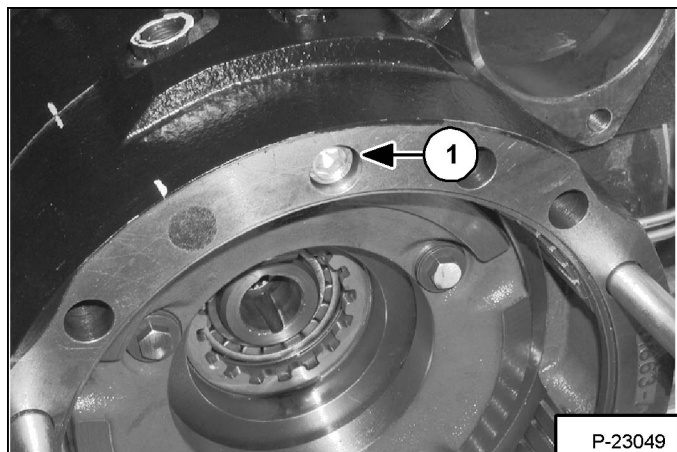


Remove the upper mounting bolt (Item 1) [Figure 40-20-55] from the housing.

Figure 40-20-56

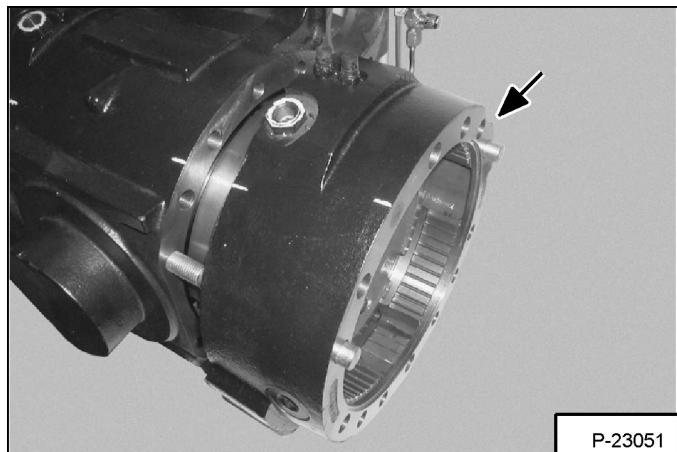

Separate and remove the brake housing from the center housing [Figure 40-20-56].

Figure 40-20-57

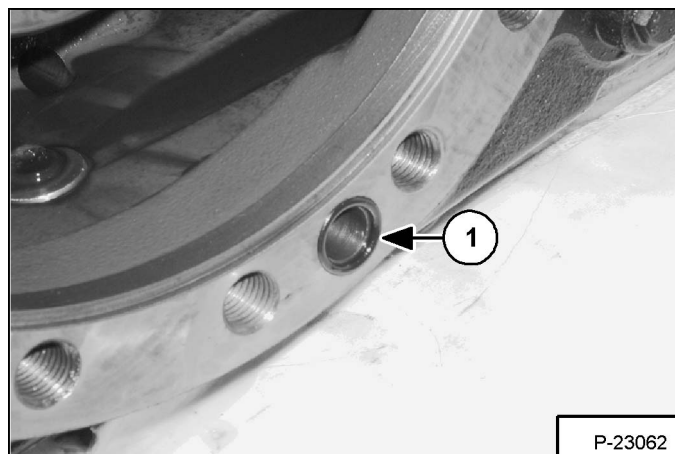


Remove and discard the O-ring (Item 1) [Figure 40-20-57] from the center housing.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Brake Group Disassembly (Cont'd)


Figure 40-20-58

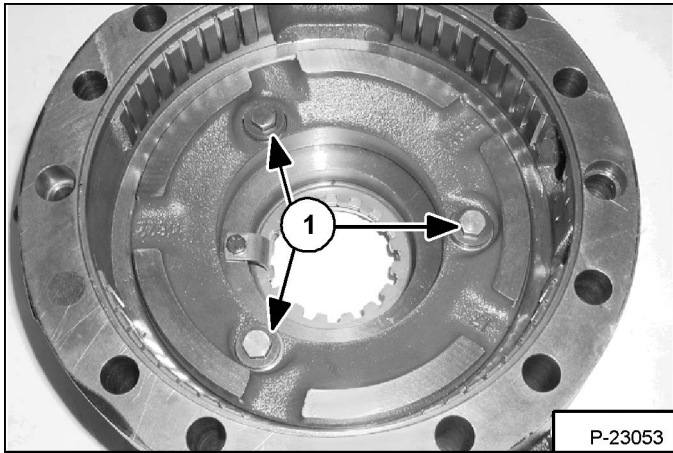

Remove the three bolts (Item 1) [Figure 40-20-58] from the brake housing.


NOTE: There are six bevel washers nested in opposing direction on each bolt.

Figure 40-20-59

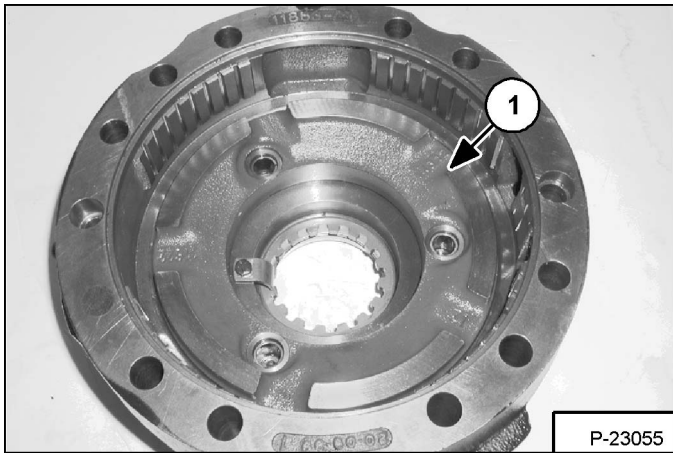


Remove the piston (Item 1) [Figure 40-20-59] from the brake housing.

Figure 40-20-60

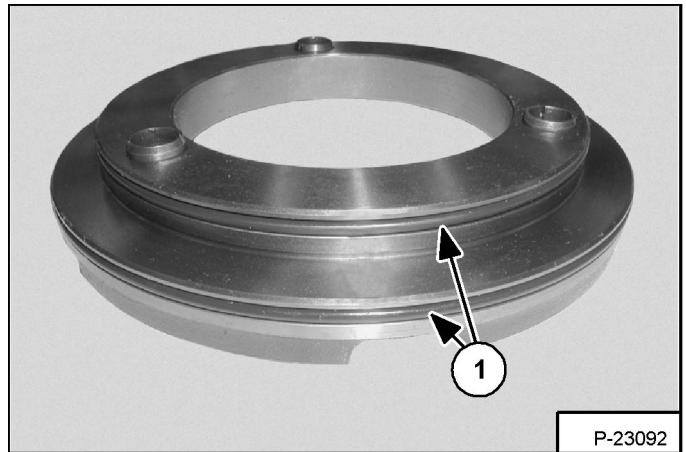

Remove and discard the two O-rings (Item 1) [Figure 40-20-60] from the piston.

Figure 40-20-61

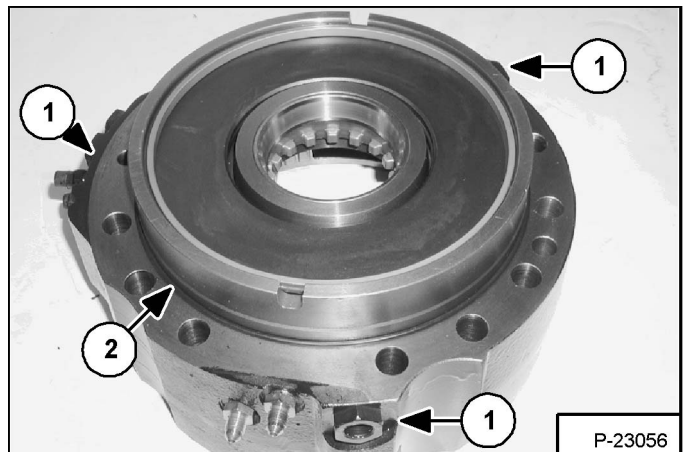


Turn the three brake adjusting screws (Item 1) [Figure 40-20-61] out (counterclockwise) equally.

Remove and discard the O-ring (Item 2) [Figure 40-20-61].

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Brake Group Disassembly (Cont'd)

Figure 40-20-62

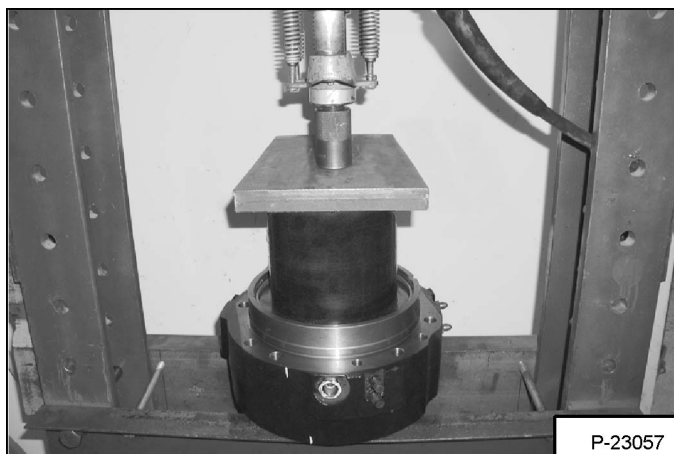

Using a 6-1/2 inch O.D. tube and suitable press, apply enough downward pressure on the Belleville springs allowing the split ring retainer ring to drop down [Figure 40-20-62].


Figure 40-20-63

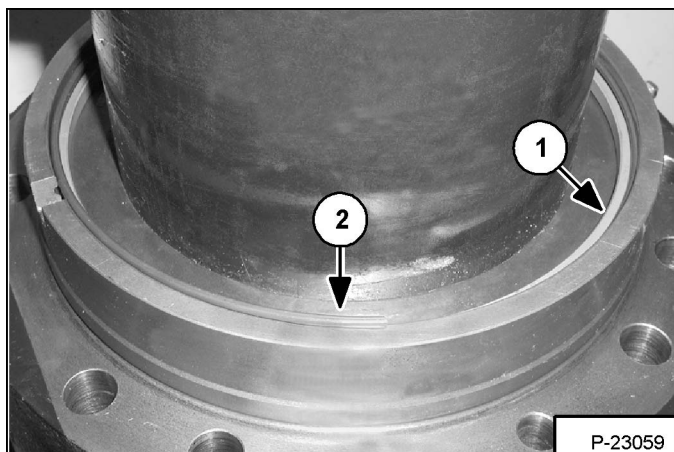

With the split ring retainer ring (Item 1) in the down position, remove the split ring (Item 2) [Figure 40-20-63].


Carefully release the pressure and remove the brake housing from the press.

Figure 40-20-64

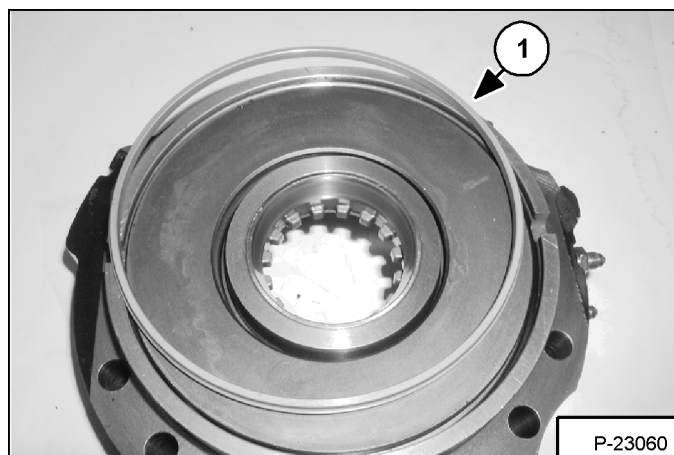

Remove the split ring retainer (Item 1) [Figure 40-20-64].

Figure 40-20-65

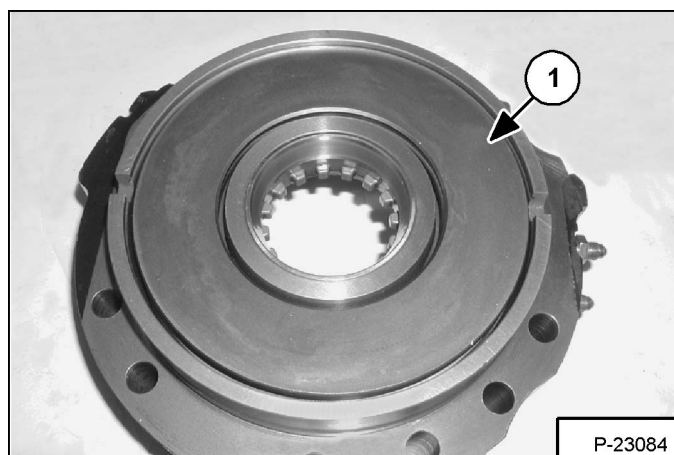


Remove the two Belleville springs (Item 1) [Figure 40-20-65].

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Brake Group Disassembly (Cont'd)

Figure 40-20-66

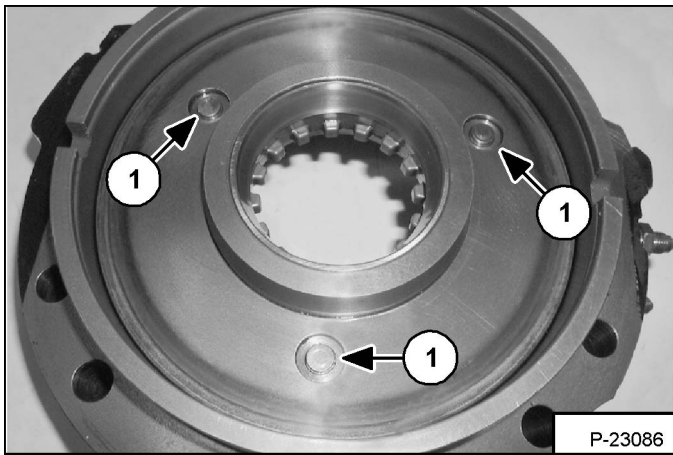


Remove the three snap rings (Item 1) [Figure 40-20-66] from the pins.

Figure 40-20-67

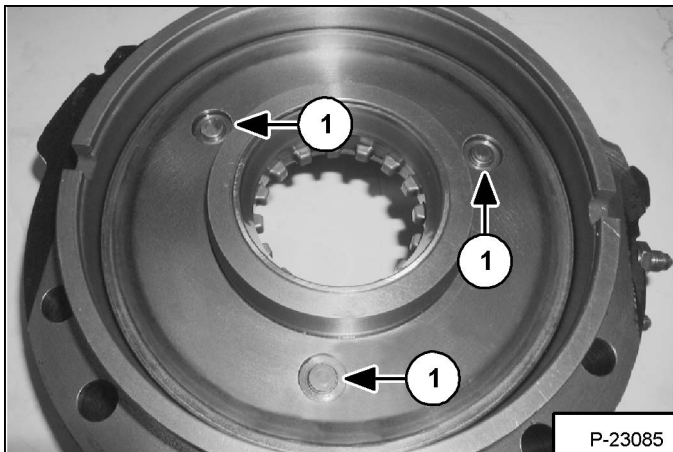


Push the three pins (Item 1) [Figure 40-20-67] from the brake plate.

Figure 40-20-68

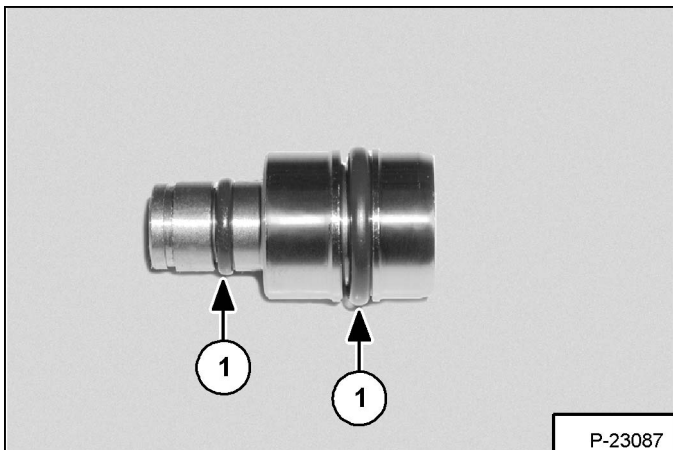

Remove and discard the two O-rings (Item 1) [Figure 40-20-68] from the pins.

Figure 40-20-69

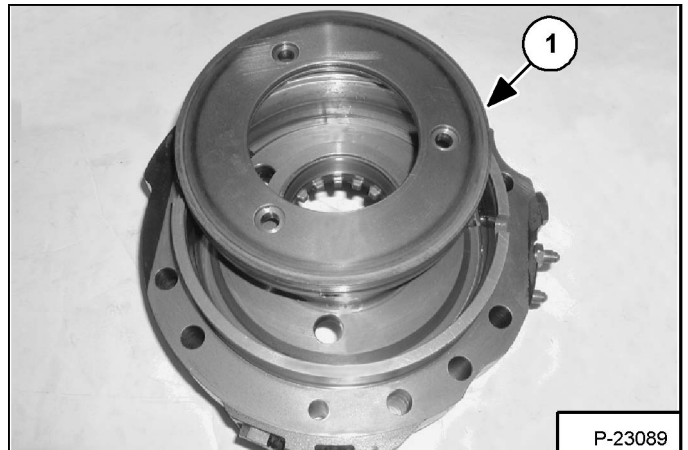


Remove the brake plate (Item 1) [Figure 40-20-69] from the brake housing.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Brake Group Disassembly (Cont'd)

Figure 40-20-70

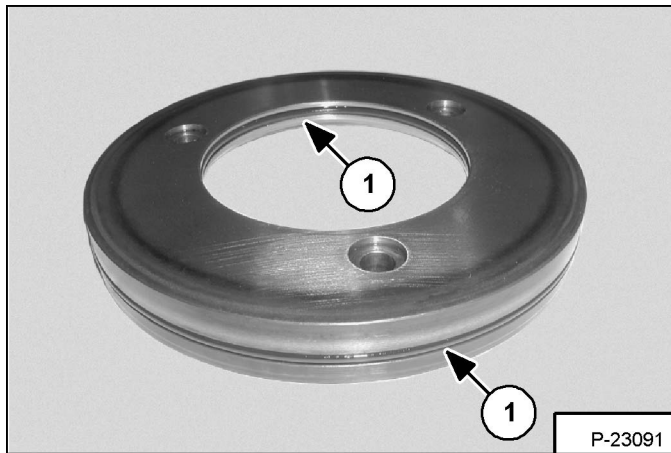


Remove the two O-rings (Item 1) [Figure 40-20-70] from the brake plate.

Figure 40-20-71

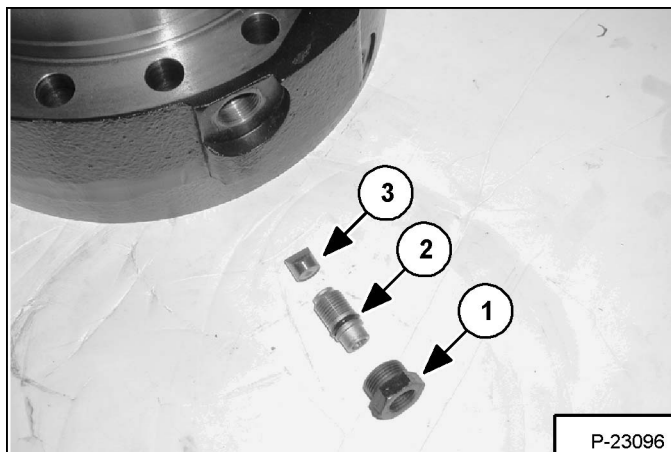


Remove the jam nut (Item 1) adjusting screw (Item 2) and wedge (Item 3) [Figure 40-20-71] from the brake housing.

Figure 40-20-72

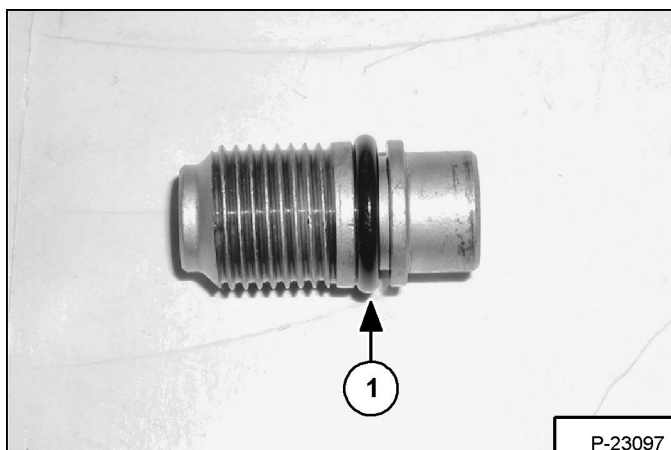

Remove and discard the O-ring (Item 1) [Figure 40-20-72] from the adjusting screw.

Figure 40-20-73

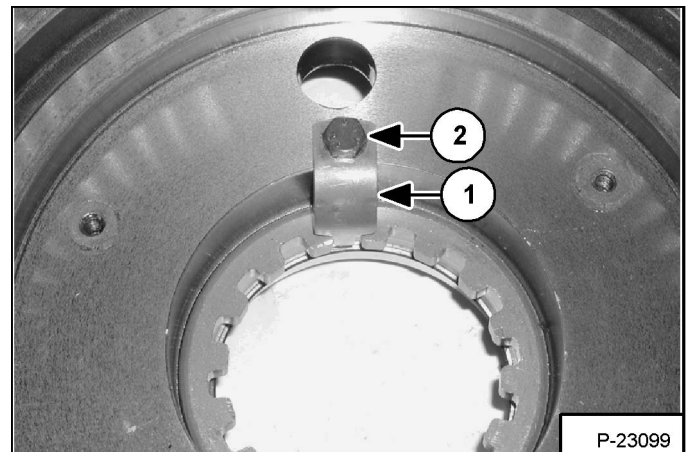


Turn the brake housing over and remove the lock nut retainer (Item 1) and bolt (Item 2) [Figure 40-20-73].

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Brake Group Disassembly (Cont'd)

Figure 40-20-74

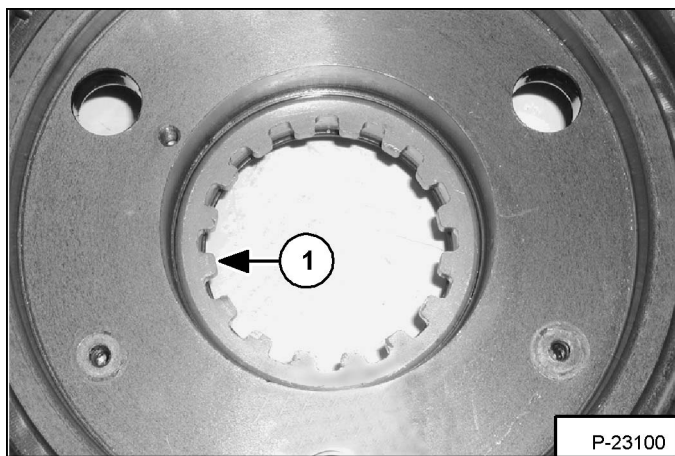

Remove the internal nut (Item 1) [Figure 40-20-74] from the brake housing by rotating counterclockwise using special tool CA119030.


Figure 40-20-75

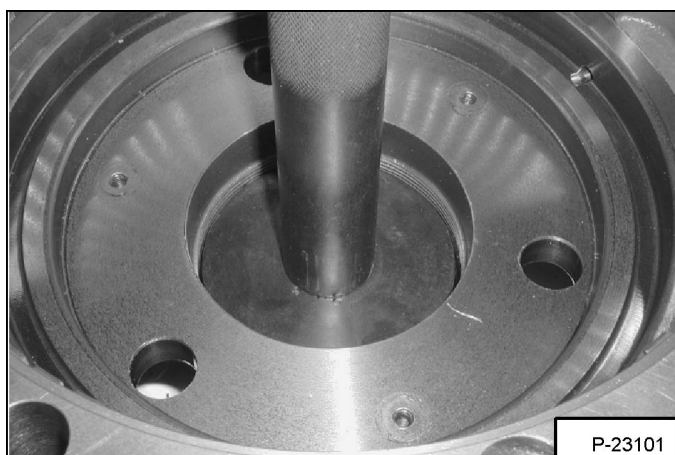

Remove the race by gently tapping out of the brake housing [Figure 40-20-75].

Brake Group Inspection

Figure 40-20-76

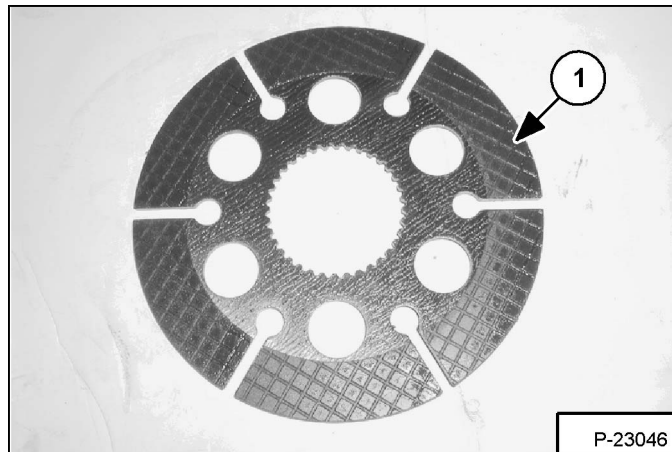

Inspect the friction plates (Item 1) [Figure 40-20-76] for wear. Replace all friction plates at the same time.

Figure 40-20-77




Inspect the internal and external splines on the coupler for damage or wear [Figure 40-20-77].

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Differential Parts Identification


1. Bearing
2. Housing
3. Friction Disk
4. Spacer
5. Washer
6. Gear
7. Gear (Pinion)
8. Spindle
9. Ring Gear
10. Bolt

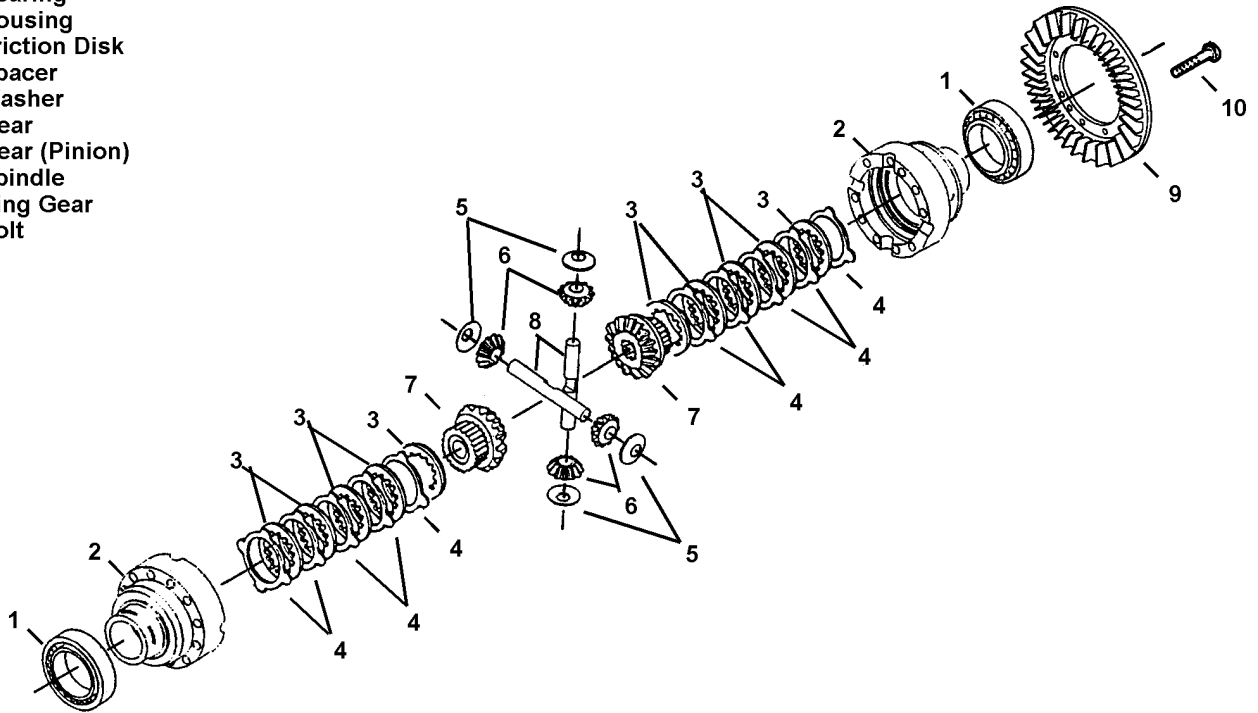

B-16008


Differential Disassembly

Figure 40-20-78

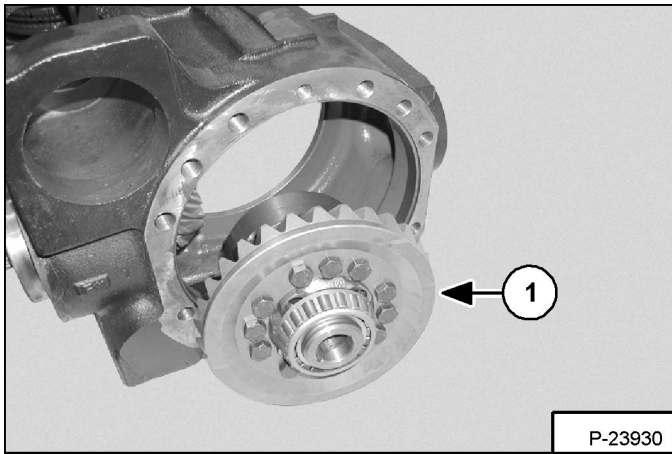

Remove the differential assembly (Item 1) [Figure 40-20-78] from the axle housing.

Figure 40-20-79

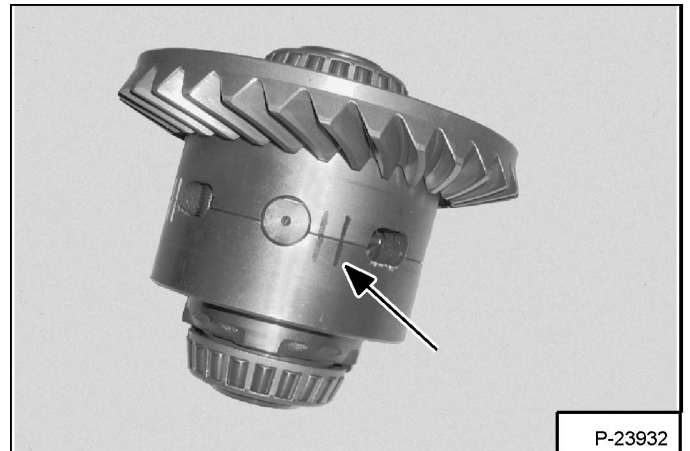


Mark the housing for correct assembly [Figure 40-20-79].

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Differential Disassembly (Cont'd)

Figure 40-20-80

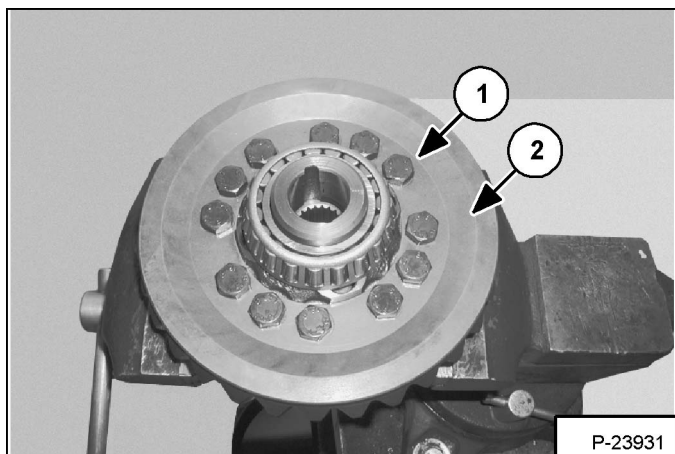


Support the differential assembly in a vise. Remove the twelve bolts (Item 1) and ring gear (Item 2) [Figure 40-20-80].

Figure 40-20-81

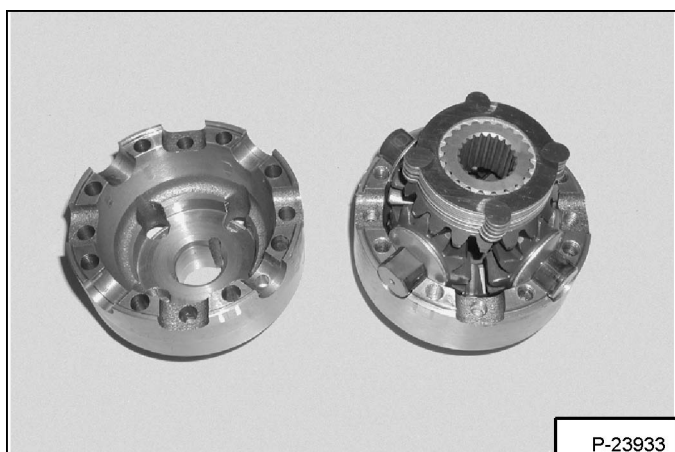


Separate the housings [Figure 40-20-81].

Figure 40-20-82

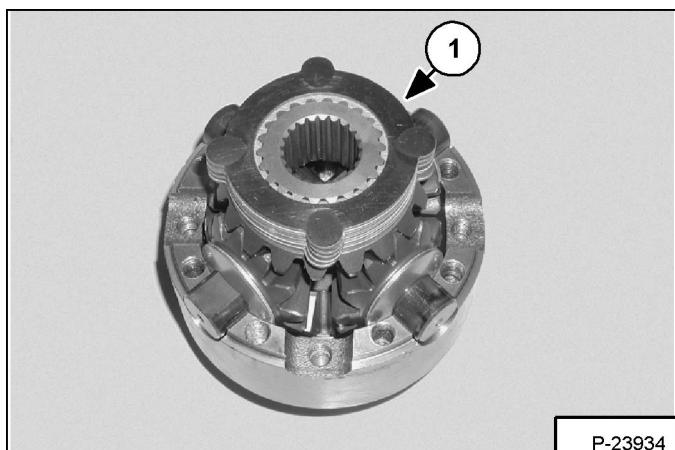

Remove the discs and spacers (Item 1) [Figure 40-20-82] from the pinion gear.

Figure 40-20-83

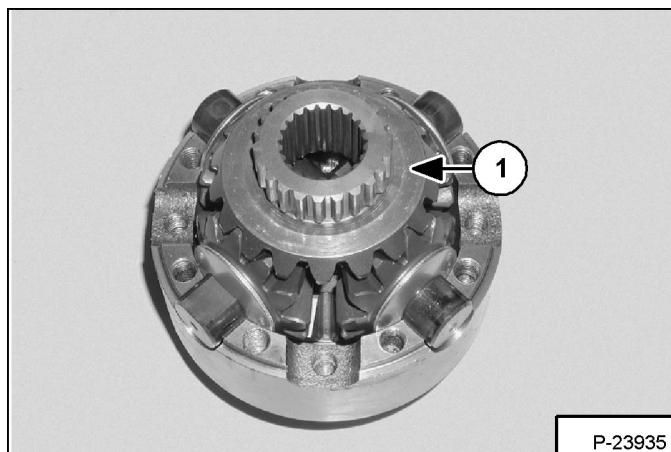


Remove the pinion gear (Item 1) [Figure 40-20-83].

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Remove the gear (Item 1) and cup washer (Item 2) from the spindle (Item 3) [Figure 40-20-86].


Differential Disassembly (Cont'd)

Figure 40-20-84

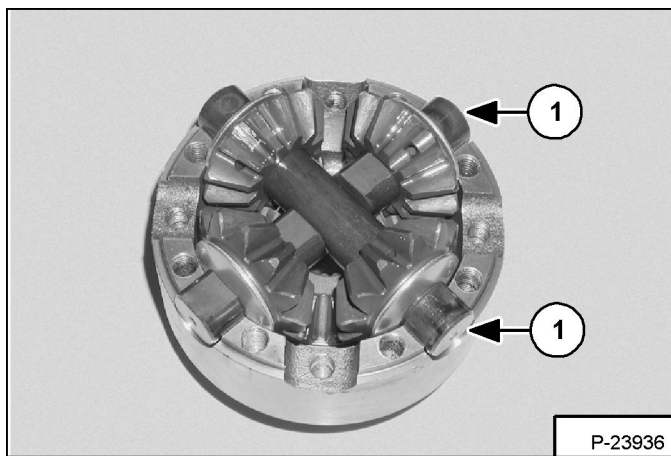


Remove the spindle/gear assemblies (Item 1) [Figure 40-20-84].

Figure 40-20-85

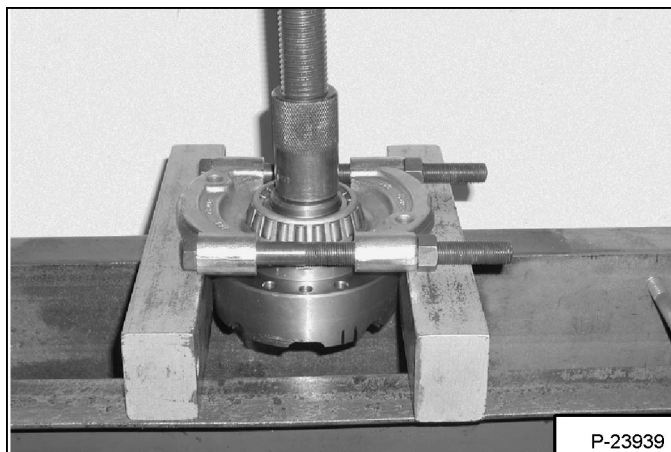

Remove the bearing from the housing [Figure 40-20-85].

Figure 40-20-86

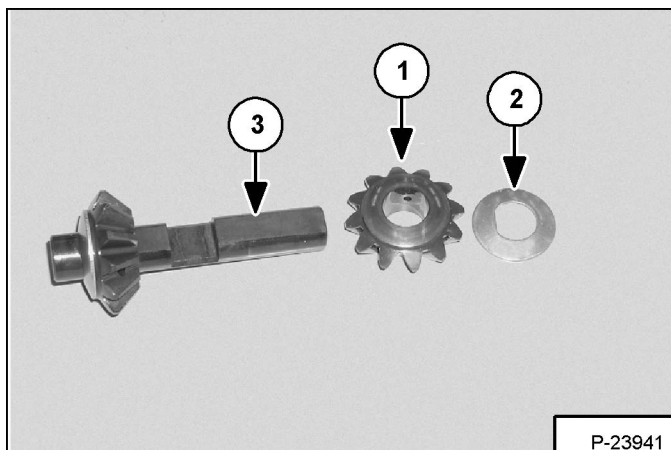

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Inspect the cup washers (Item 1) **[Figure 40-20-89]** for damage or wear. Replace as needed.

Differential Inspection

Figure 40-20-87


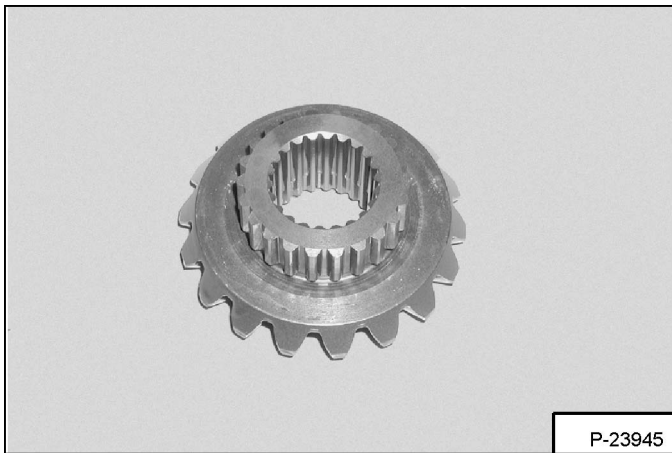



Figure 40-20-88

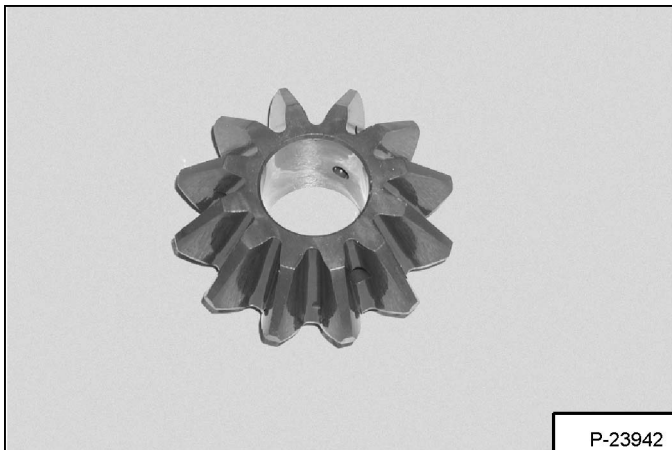

Inspect the pinion gear **[Figure 40-20-87]** & **[Figure 40-20-88]** for broken or damaged teeth.

If either gear is damaged, replace both gears.


Figure 40-20-89

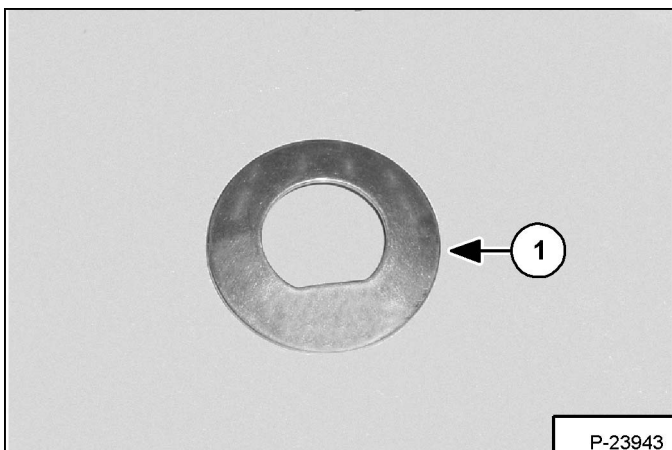

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Pinion Group Parts Identification

1. Housing
2. Pinion Shaft
3. Shim
4. Inner Bearing/Race
5. Washer
6. Spacer
7. Outer Bearing/Race
8. Lock Washer
9. Nut

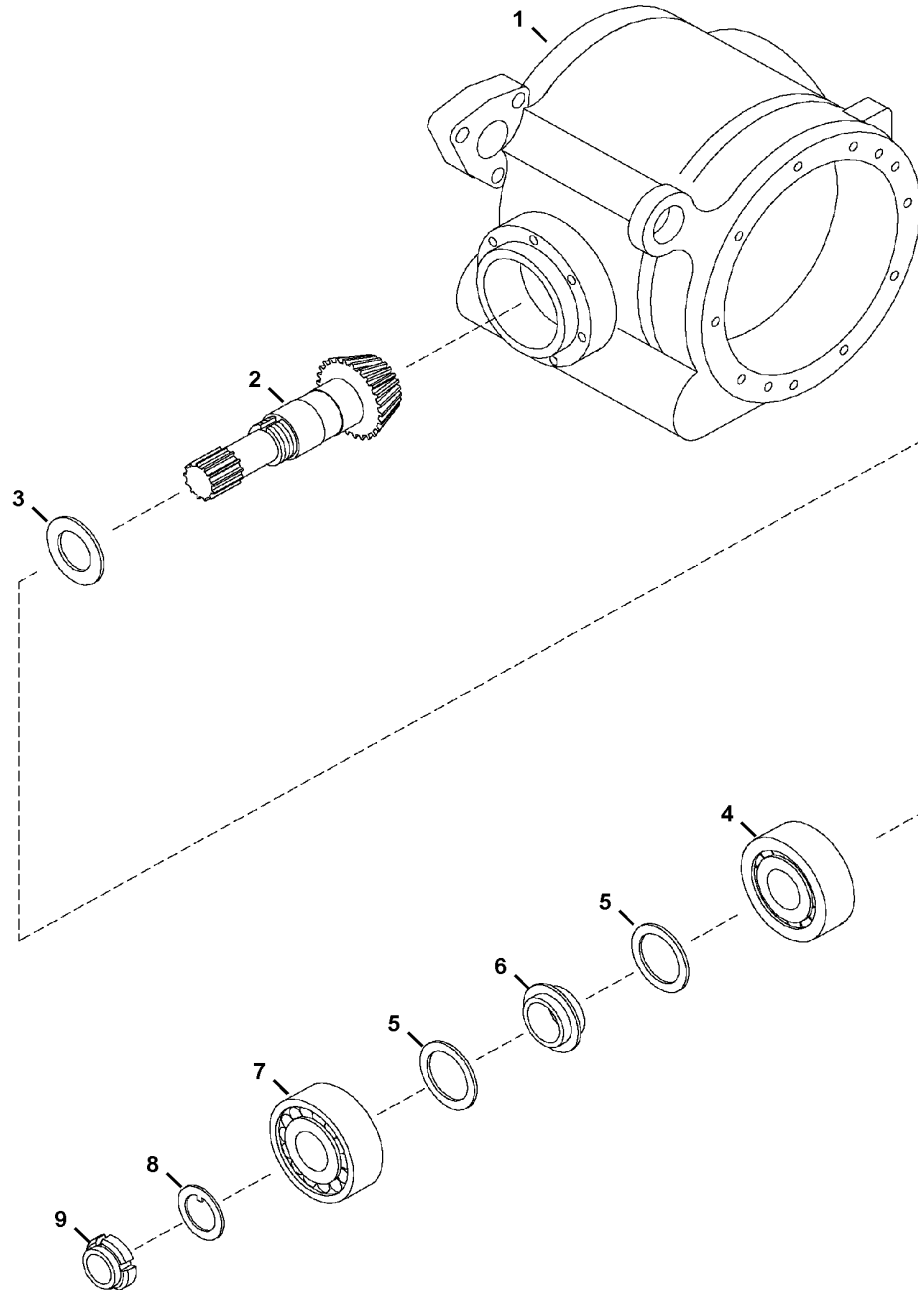


MS-01200

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Pinion Group Disassembly

Figure 40-20-90

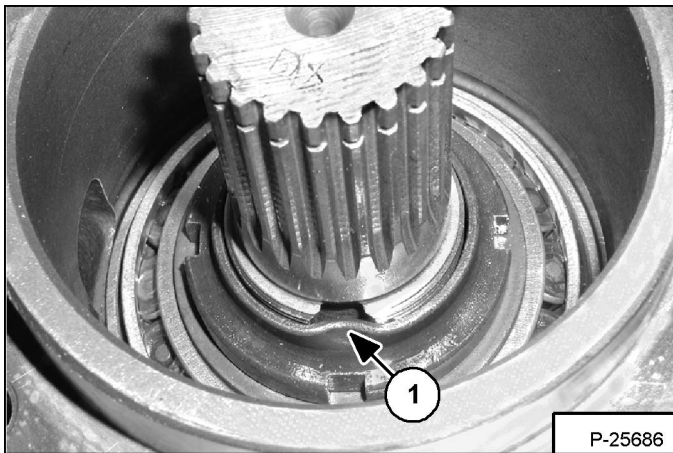


Pry up the peened notch (Item 1) [Figure 40-20-90] in the nut.

Figure 40-20-91

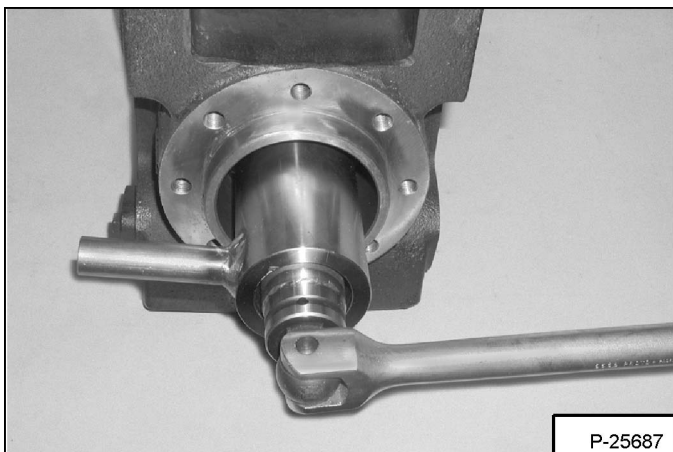


Loosen the nut using special tools CA119099 and CA715022 [Figure 40-20-91].

Figure 40-20-92

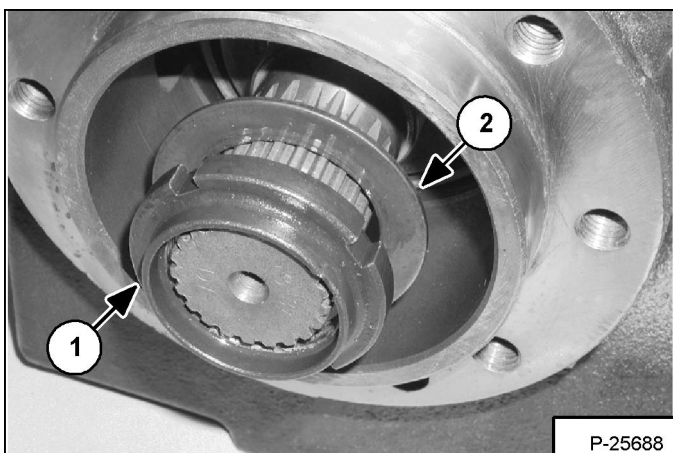

Remove the nut (Item 1) and washer (Item 2) [Figure 40-20-92].

Figure 40-20-93

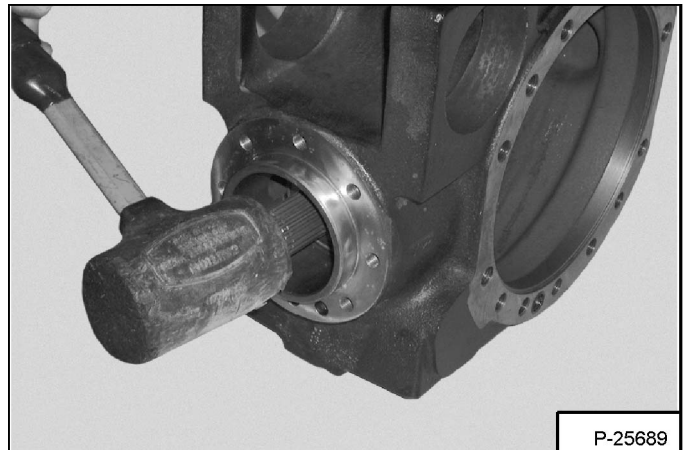


Free the pinion from the housing using a soft faced hammer [Figure 40-20-93].

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Pinion Group Disassembly (Cont'd)

Figure 40-20-94

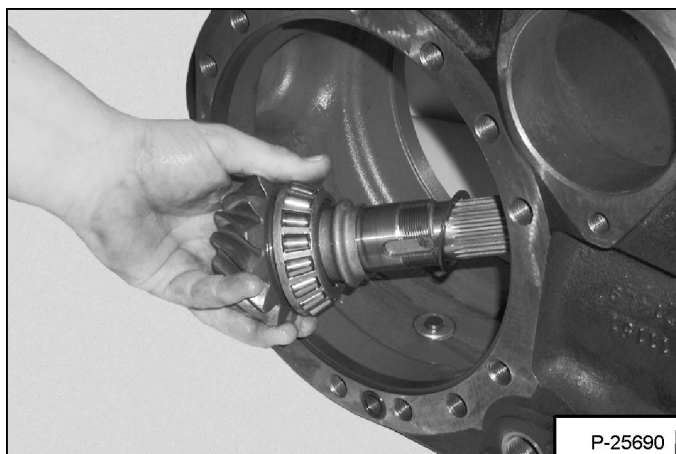


Remove the pinion shaft from the housing [Figure 40-20-94].

Figure 40-20-95

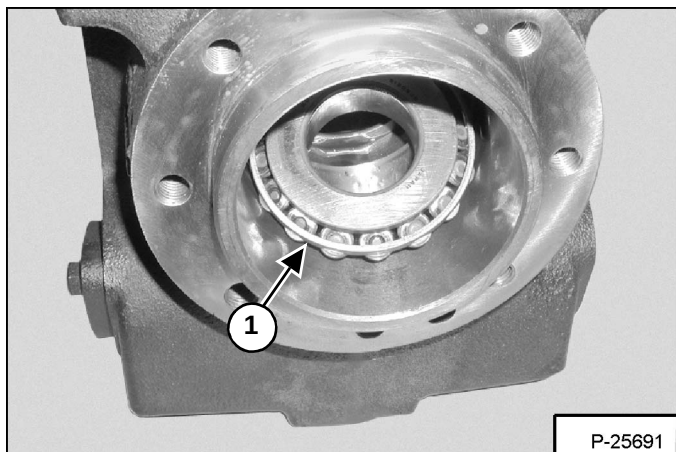


Remove the outer bearing (Item 1) [Figure 40-20-95].

Figure 40-20-96

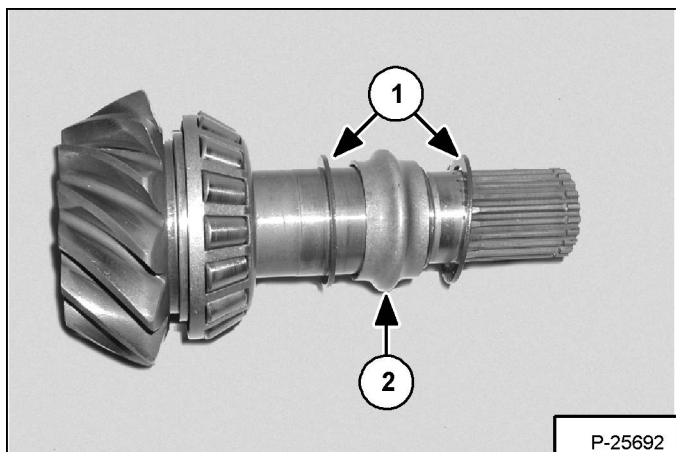

Remove the two washers (Item 1) and spacer (Item 2) [Figure 40-20-96] from the pinion shaft.

Figure 40-20-97

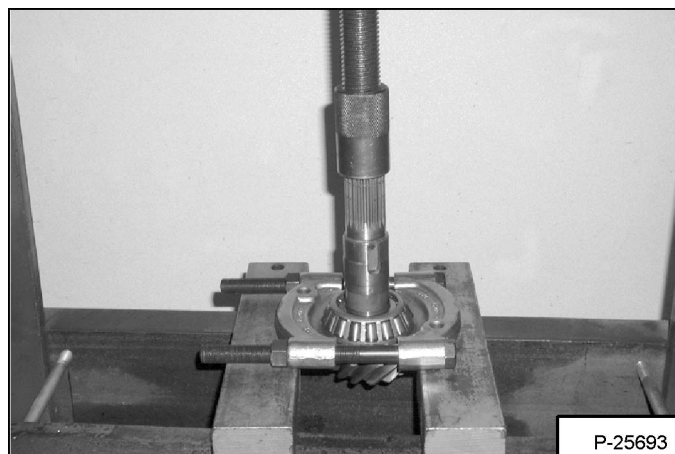


Remove the bearing from the pinion shaft [Figure 40-20-97].

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Pinion Group Disassembly (Cont'd)

Figure 40-20-98

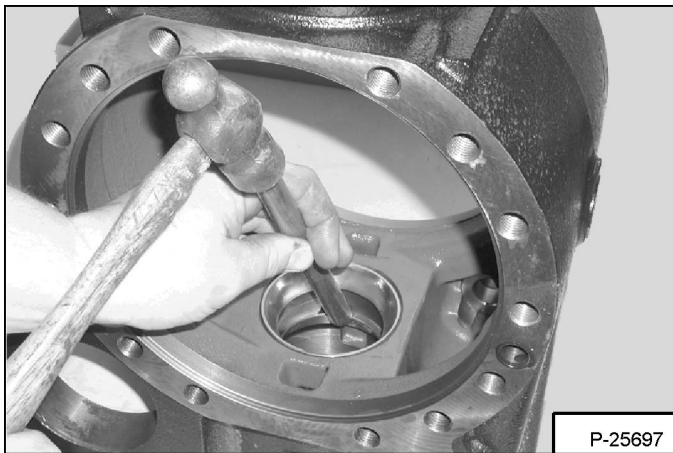

Remove the outer race from the housing [Figure 40-20-98].


Figure 40-20-99

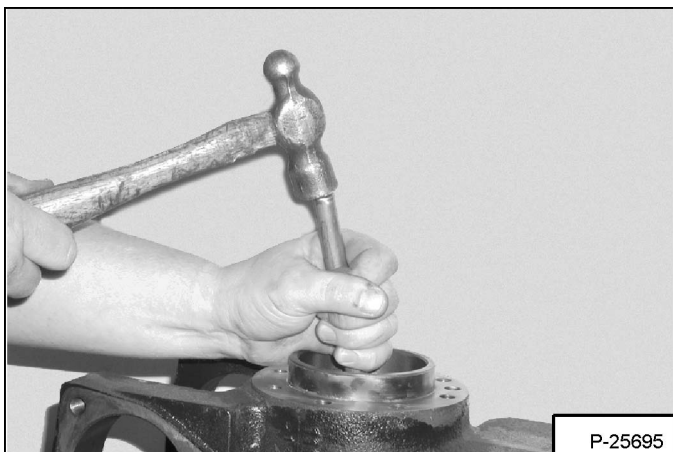

Remove the inner race from the housing [Figure 40-20-99].

Pinion Group Inspection

Figure 40-20-100

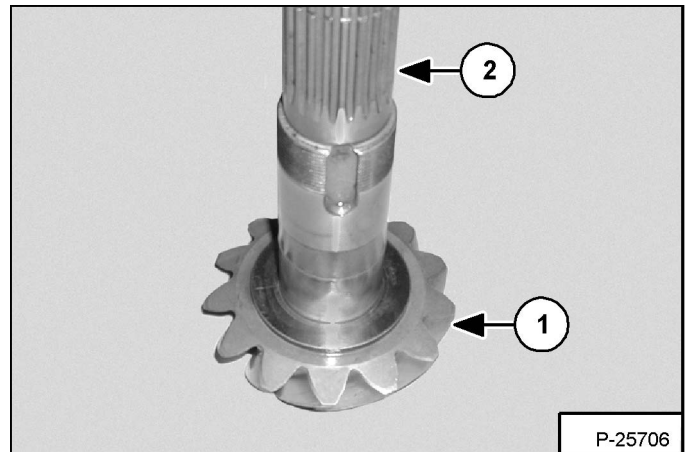

Inspect the pinion gear (Item 1) and shaft splines (Item 2) [Figure 40-20-100] for broken or damaged teeth.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Pinion Group Assembly


IMPORTANT

When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.

I-2003-0888

Prior to assembly, clean and lightly oil all parts.

Figure 40-20-101

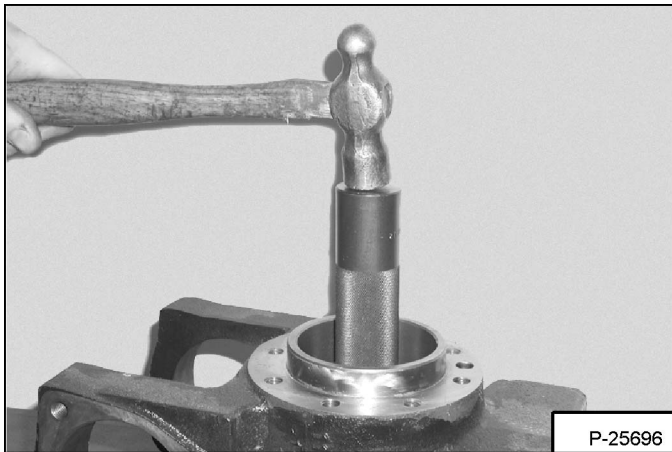


Install the outer race [Figure 40-20-101].

Figure 40-20-102




Install the inner race [Figure 40-20-102].

Figure 40-20-103

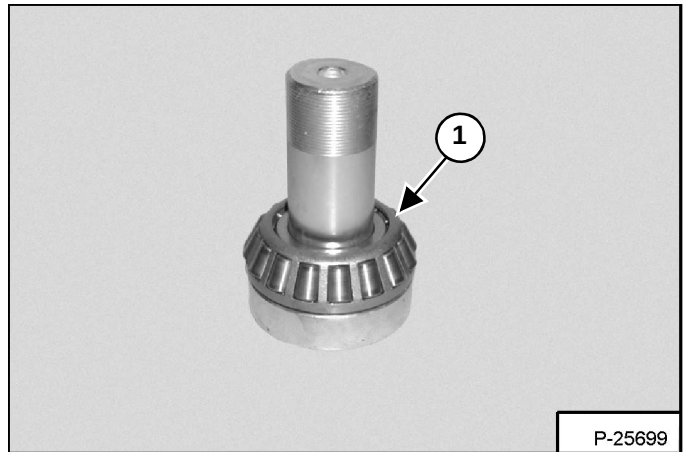

Install the bearing (Item 1) [Figure 40-20-103] onto the dummy pinion tool CA715040.

Figure 40-20-104

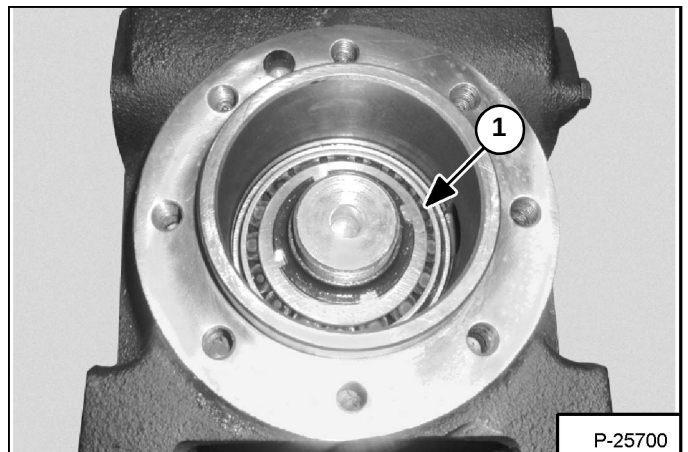

Install the dummy pinion and bearing into the center housing and install the outer bearing and lock nut (Item 1) [Figure 40-20-104].

Tighten the lock nut to eliminate any bearing end play. DO NOT overtighten the nut.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Pinion Group Assembly (Cont'd)

Figure 40-20-105



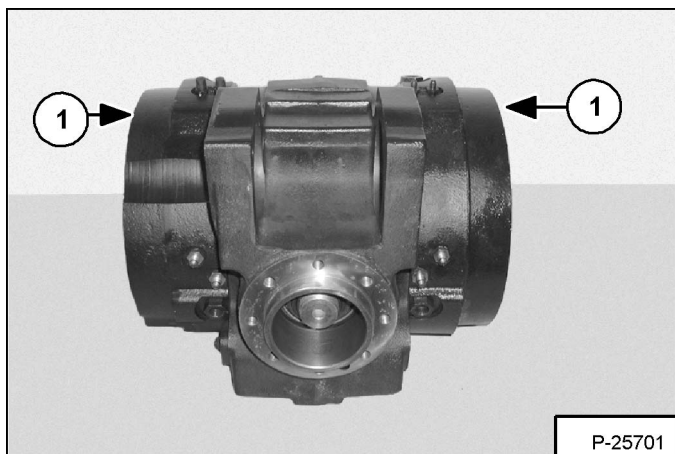


Figure 40-20-106

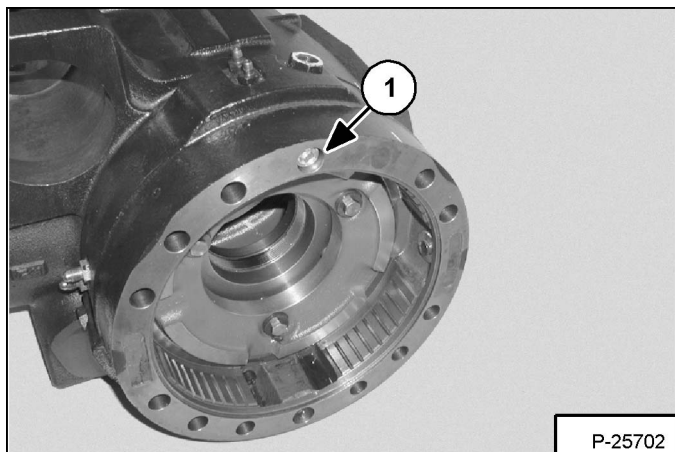

Install both brake housings (Item 1) [Figure 40-20-105] onto the center housing. Install and tighten the bolt (Item 1) [Figure 40-20-106].

Figure 40-20-107

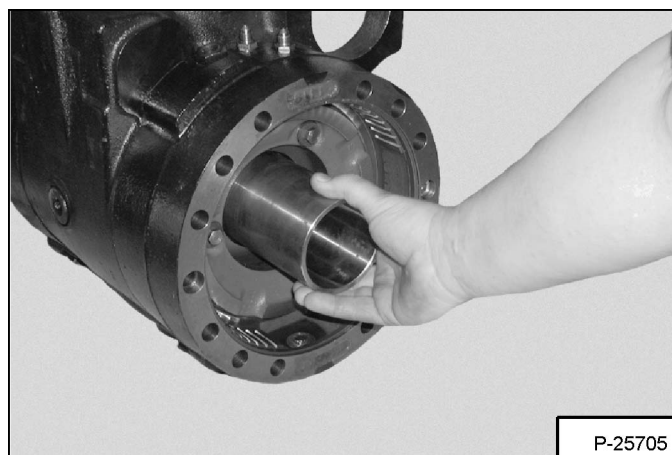

Insert the dummy differential tool CA715041 into the brake housings [Figure 40-20-107].

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Pinion Group Assembly (Cont'd)

Figure 40-20-108


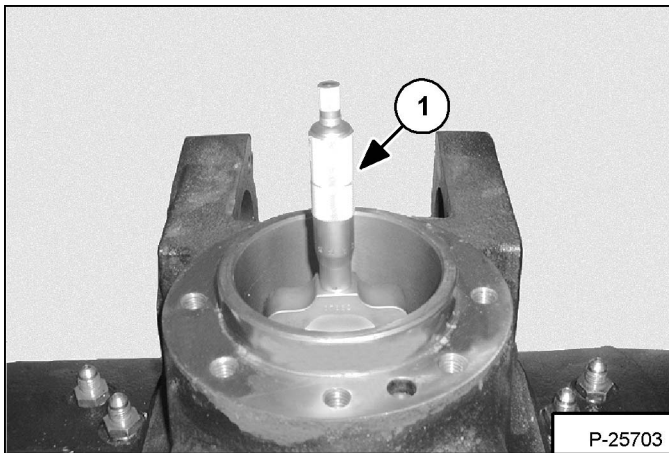



Figure 40-20-109

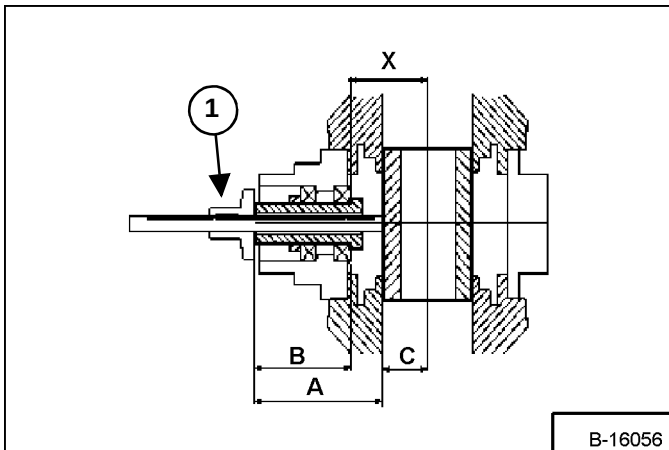

Using a depth gauge (Item 1) [Figure 40-20-108] & [Figure 40-20-109] measure thru the reference hole in the dummy pinion.


X = (distance to be measured)
A = (measured value)
B = (given value) = 100 ± 0,01 mm
C = (given value) = 45 mm
 $(A + C) - B = X$

Figure 40-20-110

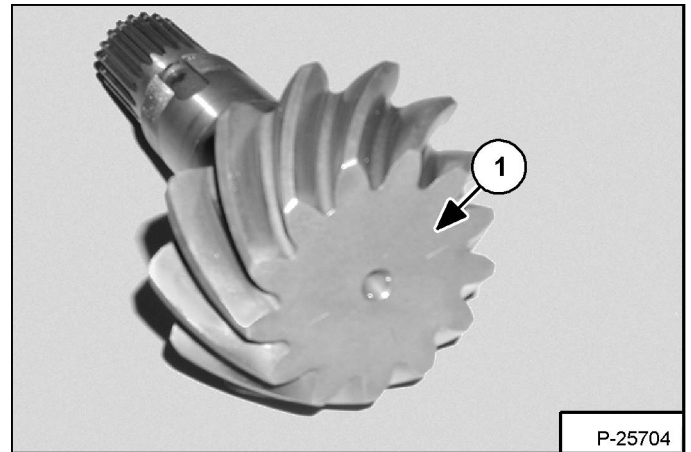

To determine the thickness of the shim to be installed between the pinion and bearing, subtract the value stamped on the end of the pinion (Item 1) [Figure 40-20-110] from the value X.

Figure 40-20-111

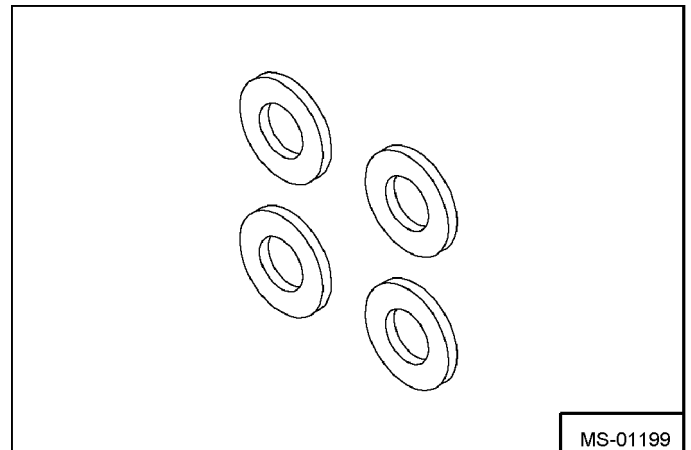


Select the correct shim [Figure 40-20-111] from the chart below:

SHIM THICKNESS RANGE										
Thick	2.5	2.6	2.7	2.8	2.9	3.0	3.1	3.2	3.3	3.4
Qty.	-	-	-	-	-	-	-	-	-	-

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Pinion Group Assembly (Cont'd)

Figure 40-20-112

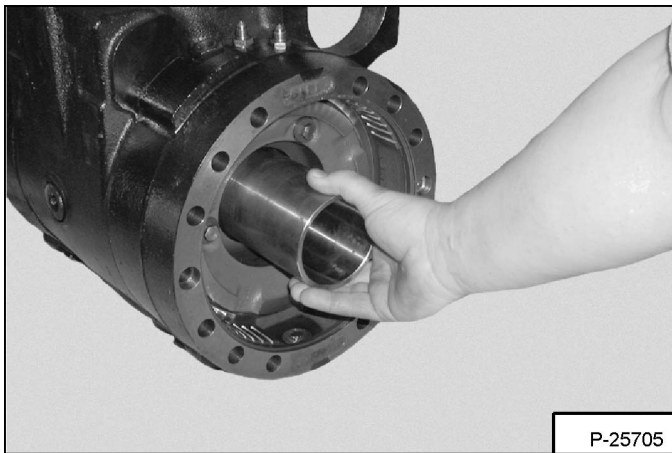


Remove the dummy differential tool [Figure 40-20-112].

Figure 40-20-113

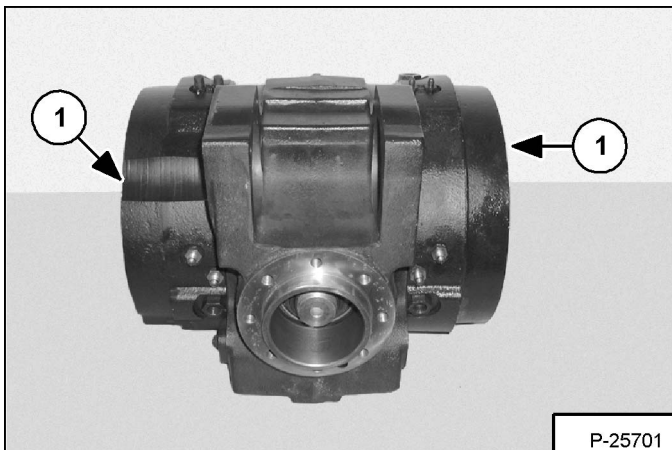


Remove both brake housings (Item 1) [Figure 40-20-113] from the center housing.

Figure 40-20-114

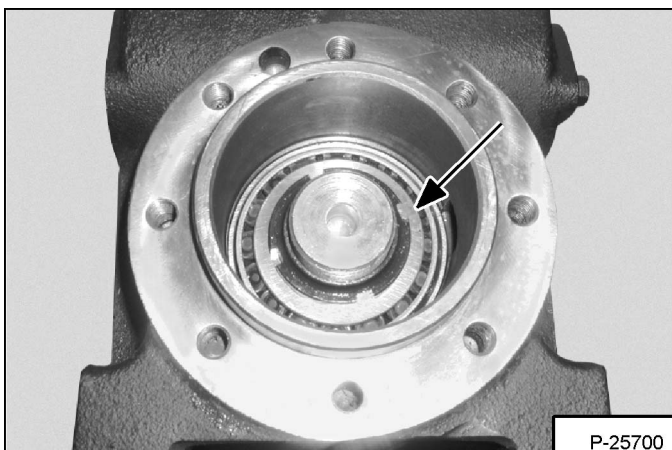

Remove the dummy pinion tool (Item 1) [Figure 40-20-114] from the center housing.

Figure 40-20-115

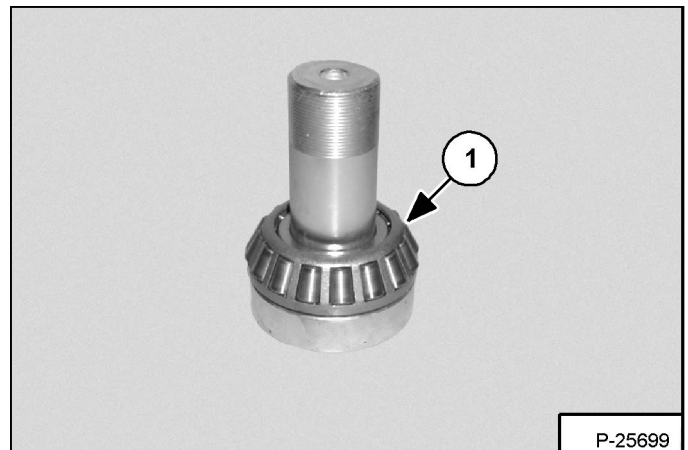


Remove the bearing (Item 1) [Figure 40-20-115] from the dummy pinion.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Pinion Group Assembly (Cont'd)


Figure 40-20-116

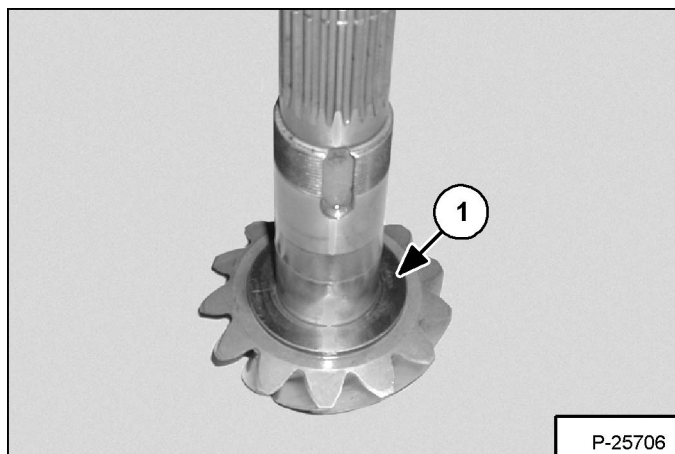

Install the shims selected (Item 1) [Figure 40-20-116] onto the pinion shaft.


NOTE: The beveled edge must go towards the gear.

Figure 40-20-117

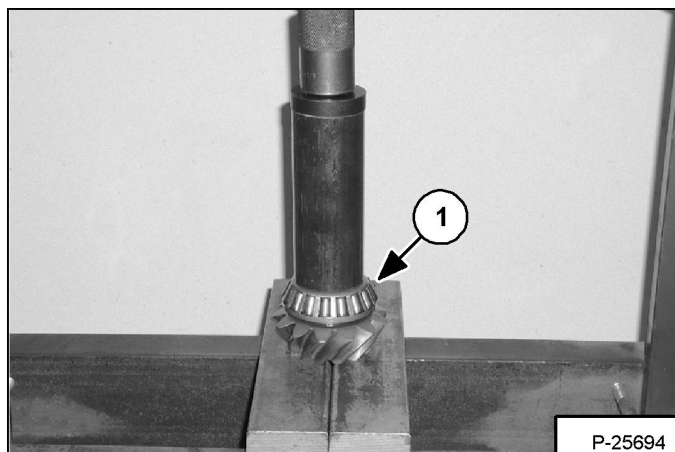


Install the bearing (Item 1) [Figure 40-20-117] onto the pinion shaft until it is fully seated.

Figure 40-20-118

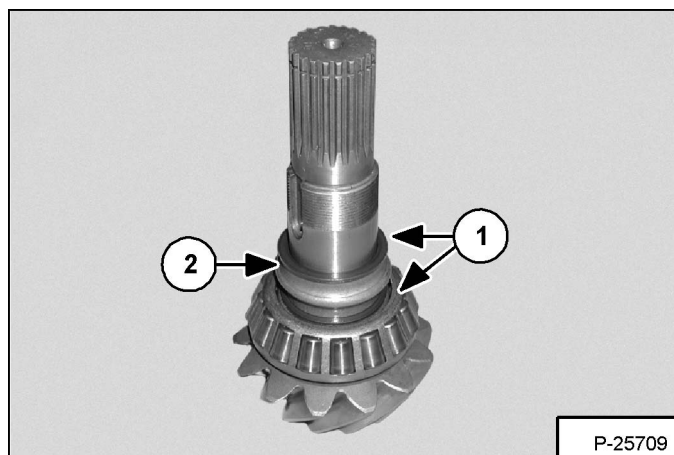

Install the two washers (Item 1) and collapsible spacer (Item 2) [Figure 40-20-118] onto the shaft.

Figure 40-20-119

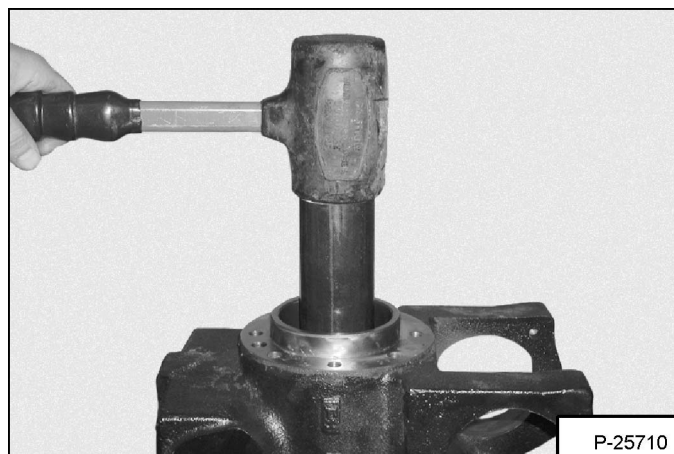


Install the pinion gear assembly into the center housing and install the outer bearing [Figure 40-20-119].

NOTE: Drive the outer bearing onto the shaft, have an assistant place a second hammer on the pinion head to absorb the impact.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Pinion Group Assembly (Cont'd)

Figure 40-20-120

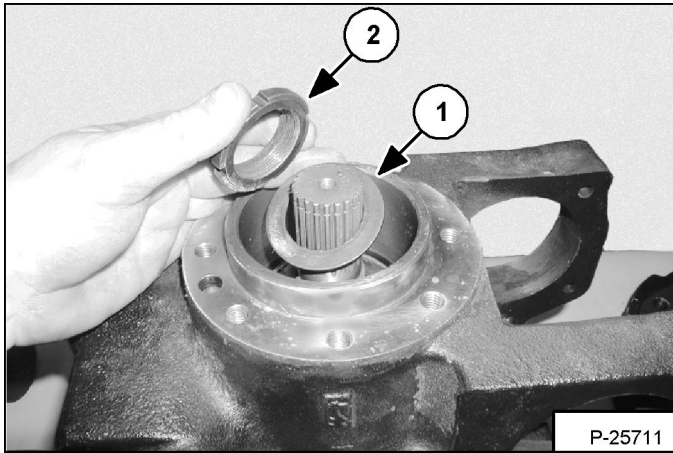

Install the backing washer (Item 1) and nut (Item 2) [Figure 40-20-120].

Figure 40-20-121

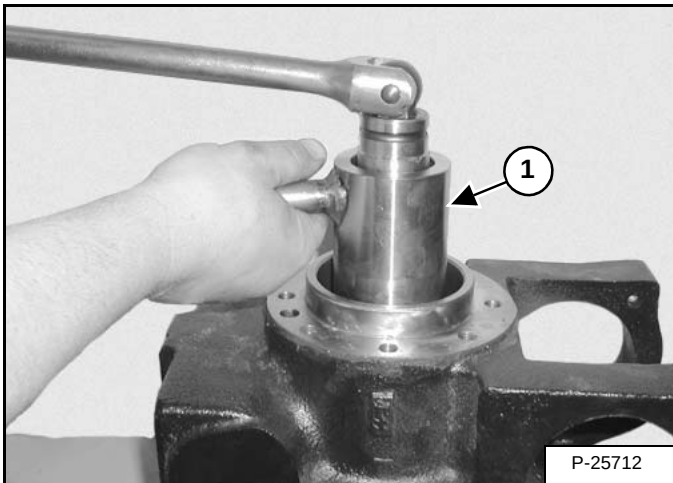


Gradually tighten the nut (See Figure 122 & 123 for the proper procedure) using the special tools CA119099 and CA715022 (Item 1) [Figure 40-20-121].

NOTE: The tightening torque is determined by measuring the force required to rotate the pinion (preload of bearings).


SEE Figure 122 & 123. Tighten the nut in incremental steps. If overtightened (preload too high) the collapsible spacer (Item 2) [Figure 40-20-118] must be replaced and the procedure repeated [Figure 40-20-121].

Figure 40-20-122

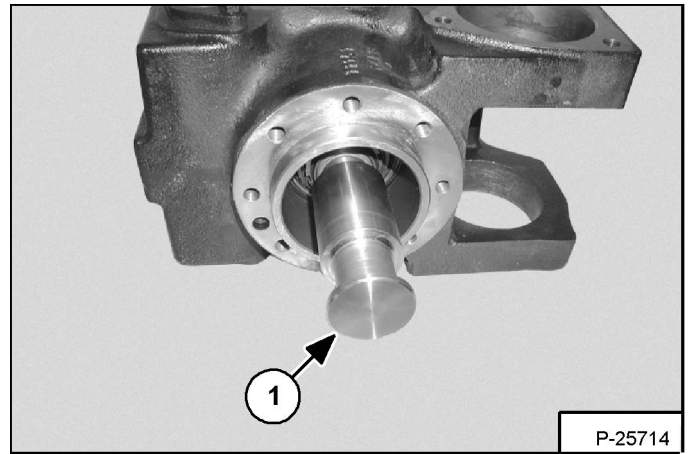

Install the special tool CA715116 (Item 1) [Figure 40-20-122] onto the pinion shaft.

Figure 40-20-123

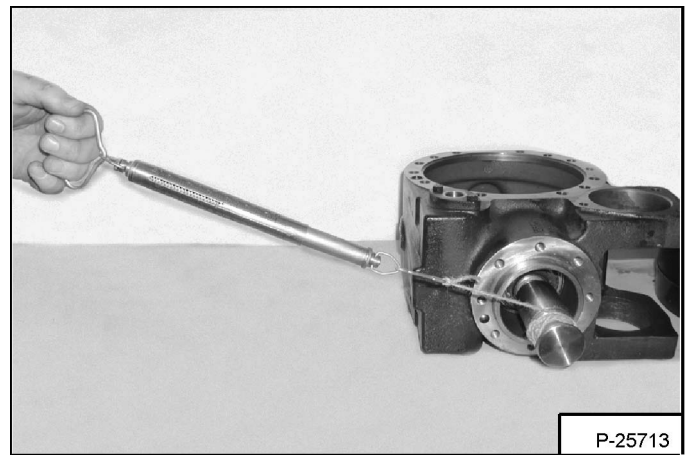


Attach one end of a light rope to the special tool [Figure 40-20-123]. Make 2 or 3 complete wraps around the tool. Attach the spring scale perpendicular to the housing to measure the rolling torque on the bearings. Tighten (or loosen) the nut [Figure 40-20-121] until 2-3 lb (.9 - 1.4 Kg) of smooth and continuous rolling torque is measured on the spring scale.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Differential Assembly

Figure 40-20-124

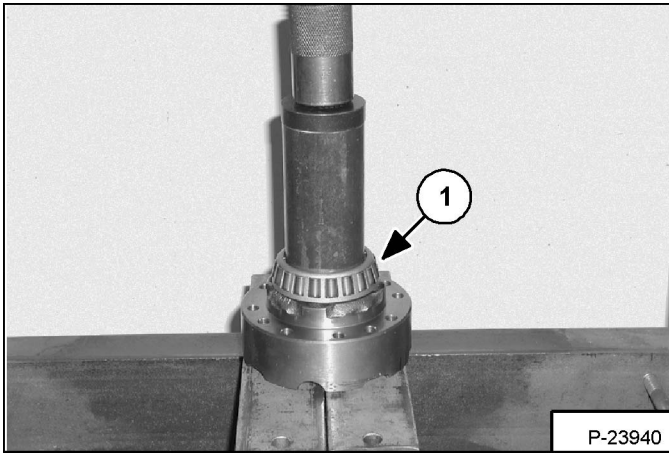

Install the bearing (Item 1) [Figure 40-20-124] onto each housing.


Figure 40-20-125

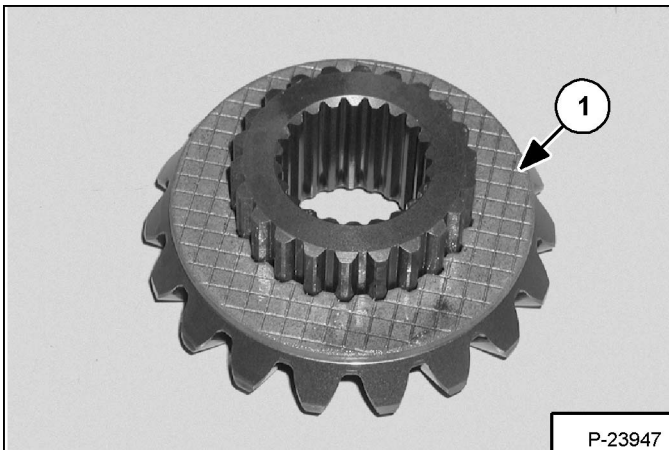

Install the disc (Item 1) [Figure 40-20-125] that is one half friction and the other half metal onto the gear splines.


NOTE: The metal side must be next to the gear.

Figure 40-20-126

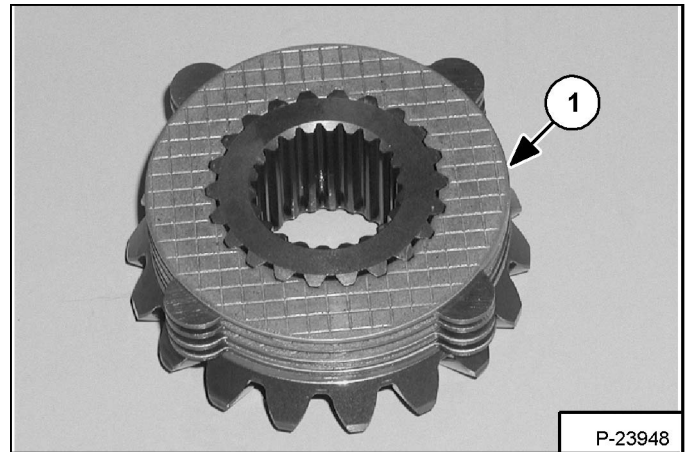

Install the remaining discs (Item 1) [Figure 40-20-126] onto the shaft, alternating between steel and friction.

Figure 40-20-127

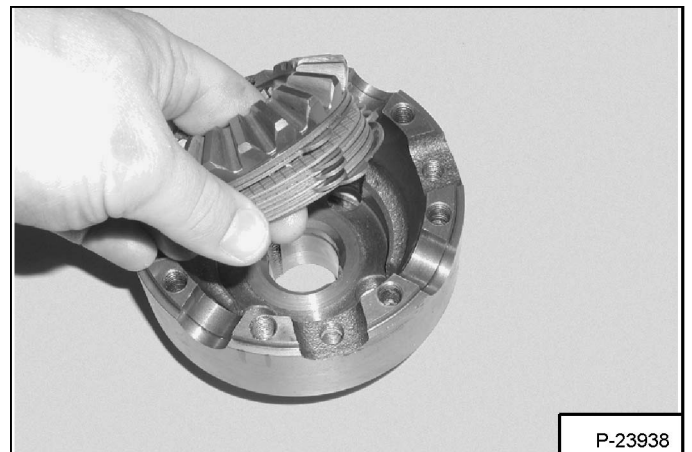


Install the gear/disc assembly into the housing [Figure 40-20-127].

NOTE: Make sure the disc remains in correct position.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Differential Assembly (Cont'd)

Figure 40-20-128

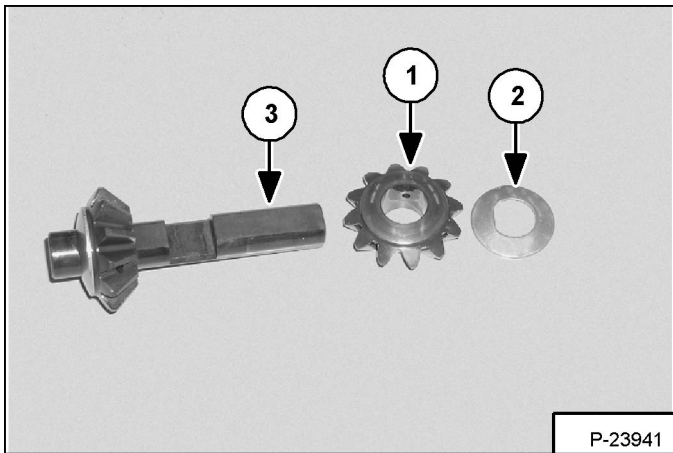


Install the gear (Item 1) cup washer (Item 2) onto the spindle (Item 3) [Figure 40-20-128].

Figure 40-20-129

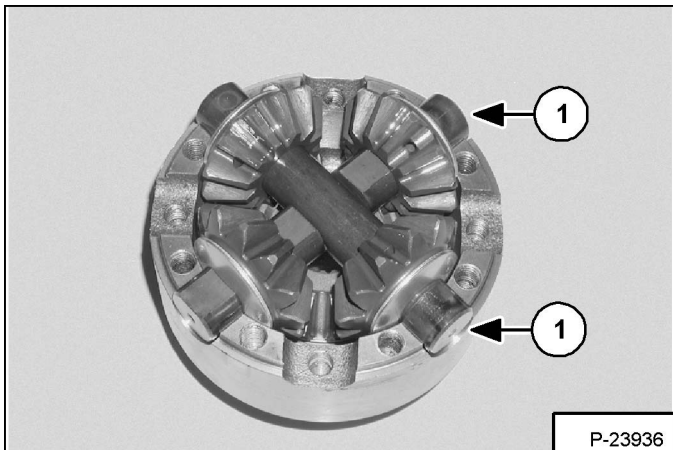


Install the spindle/gear assemblies (Item 1) [Figure 40-20-129] into the housing.

Figure 40-20-130

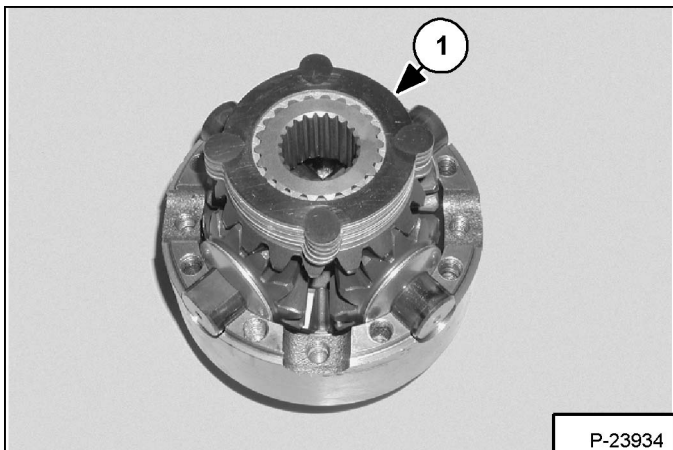

Set the gear/discs assembly (Item 1) [Figure 40-20-130] onto the spindle gears.

Figure 40-20-131

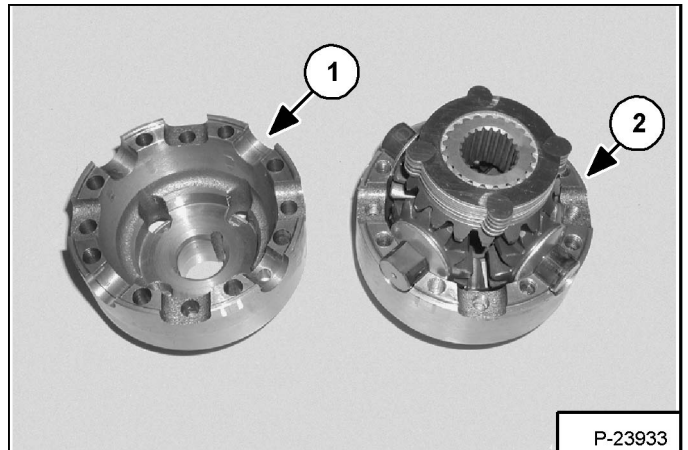


Install the housing (Item 1) onto the housing/gear assembly (Item 2) [Figure 40-20-131]. Make sure to align the reference marks made earlier.

**AXLE AND DIFFERENTIAL (FRONT) (For S/N
362811001 - 362812000, S/N 362911001 - 362912000)
(CONT'D)**


Differential Assembly (Cont'd)

Figure 40-20-132

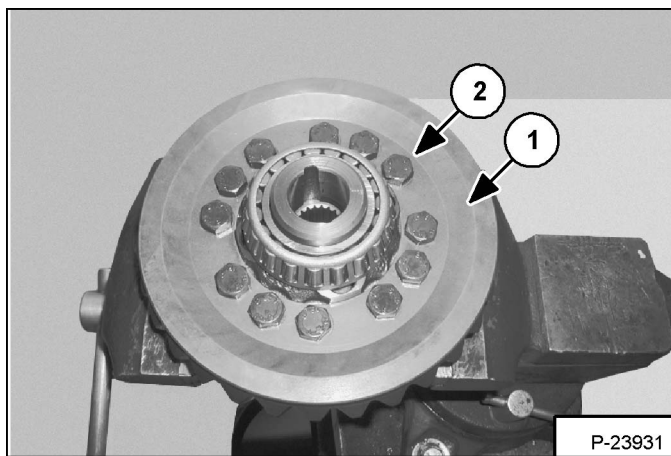

Install the ring gear (Item 1) and twelve bolts (Item 2) [Figure 40-20-132]. Tighten the bolts to 58 ft.-lbs. (78 Nm) torque.

Figure 40-20-133

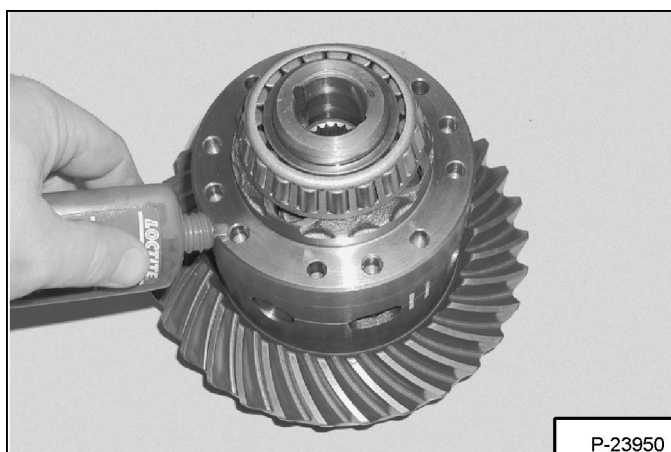


Apply LOCTITE #270 to the end of the mounting bolts [Figure 40-20-133].

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Brake Group Assembly

Figure 40-20-134

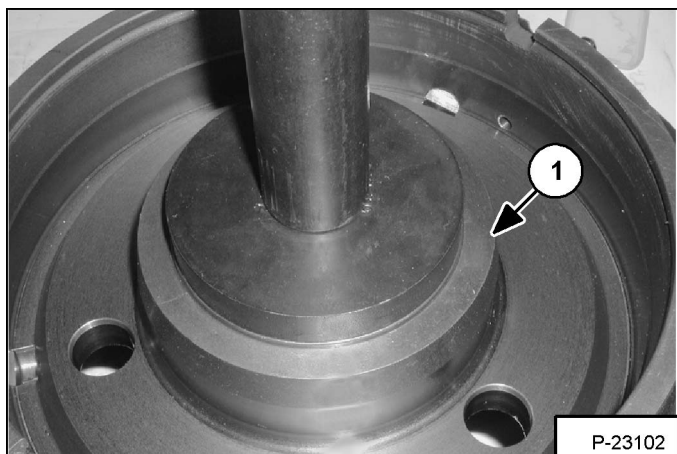


Install the bearing race into the housing until it is flush with the center surface (Item 1) [Figure 40-20-134].

Figure 40-20-135

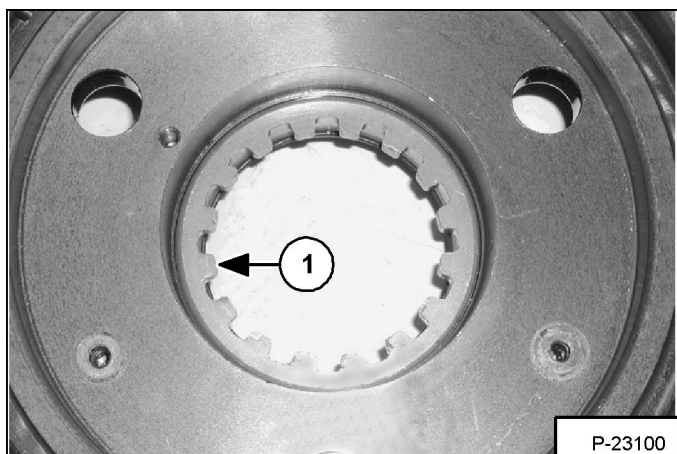


Install the internal adjusting nut (Item 1) [Figure 40-20-135] into the brake housing by rotating clockwise until it is tight against the bearing race.

Figure 40-20-136

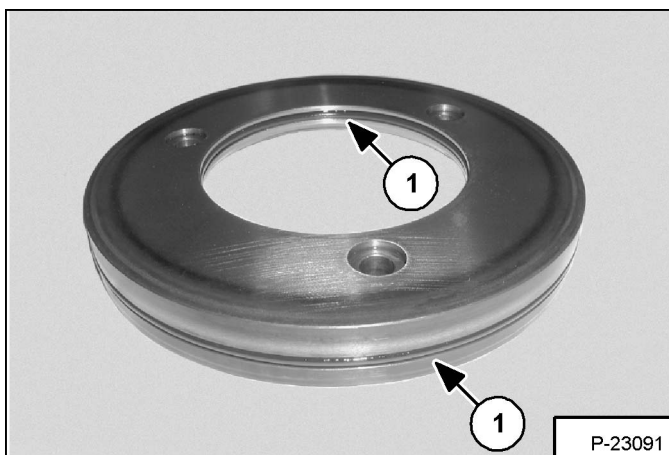

Lightly lubricate and install two new O-rings (Item 1) [Figure 40-20-136] onto the brake plate.

Figure 40-20-137

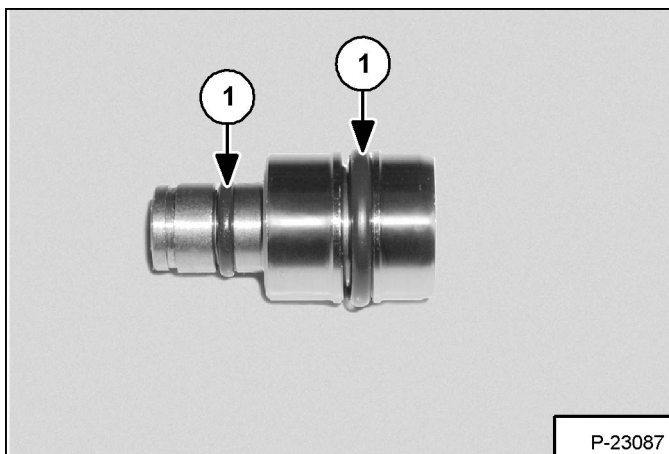


Lightly lubricate and install new O-rings (Item 1) [Figure 40-20-137] onto the pins.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Brake Group Assembly (Cont'd)

Figure 40-20-138

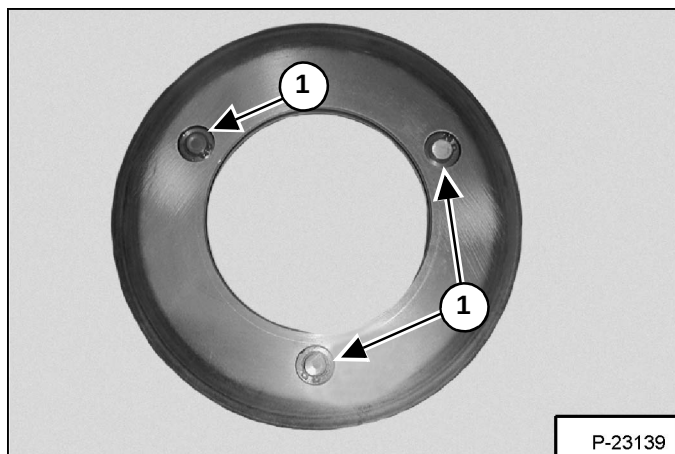

Install the three pins into the brake plate and retain with the snap rings (Item 1) [Figure 40-20-138].


Figure 40-20-139

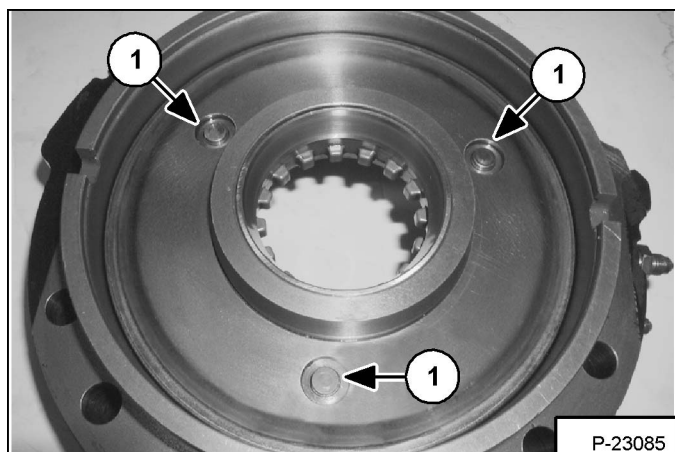

Align the holes in the brake housing with the pins (Item 1) [Figure 40-20-139] and install the brake plate into the brake housing until it is fully seated.


Turn the brake housing over.

Figure 40-20-140

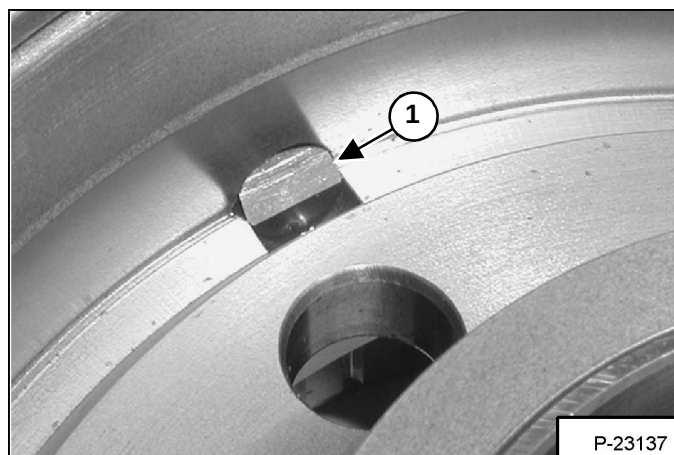

Install the three wedges (Item 1) [Figure 40-20-140] into the brake housing as shown.

Figure 40-20-141

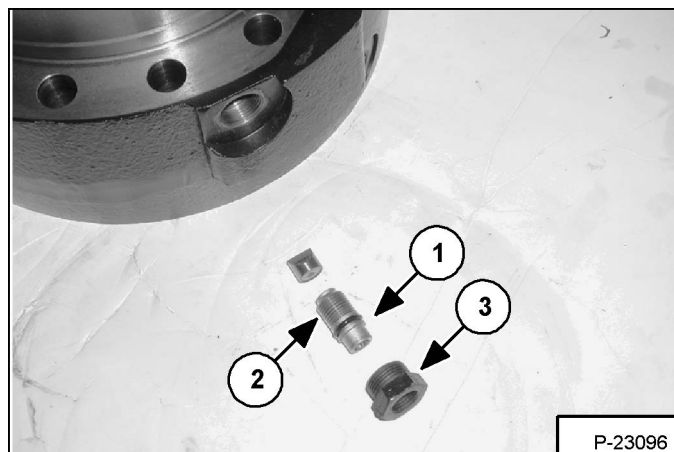


Lubricate and install a new O-ring (Item 1) [Figure 40-20-141] onto the adjusting screw.

Install the adjusting screw (Item 2) and jam nut (Item 3) [Figure 40-20-141] into the housing.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Brake Group Assembly (Cont'd)


Figure 40-20-142

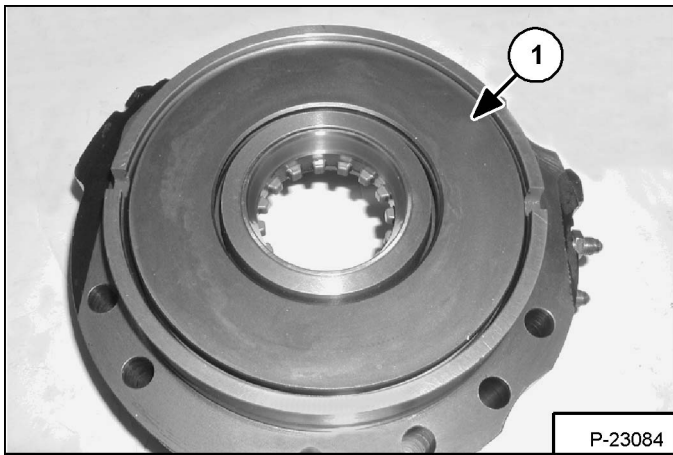

Install the Belleville springs (Item 1) [Figure 40-20-142] into the brake housing.


NOTE: The inner edges of the Belleville springs must touch for correct installation.

Figure 40-20-143

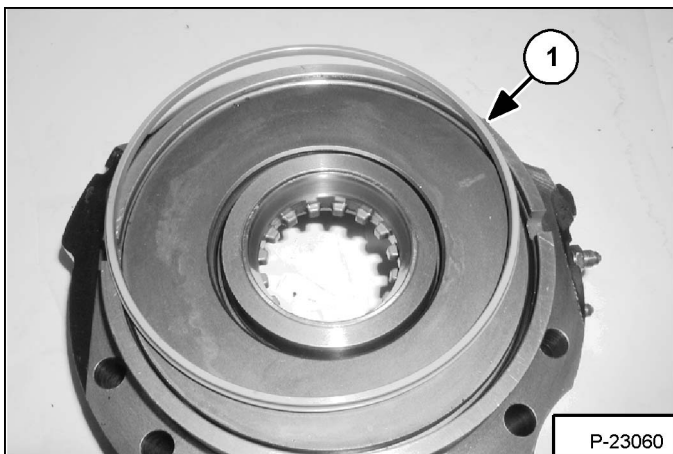

Temporarily place the spring ring retainer ring (Item 1) [Figure 40-20-143] on the Belleville springs.


Figure 40-20-144

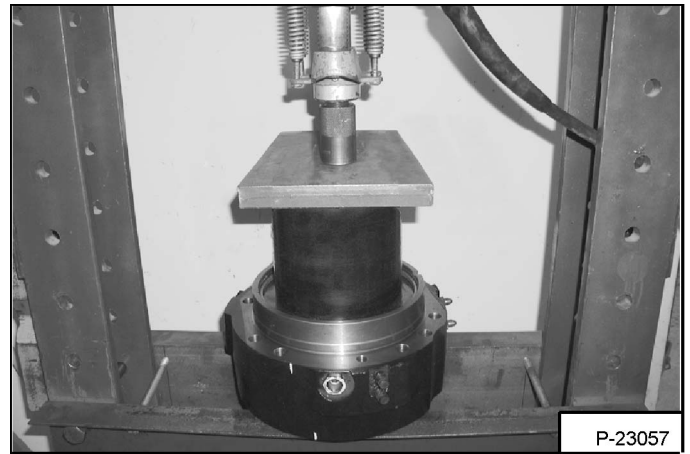

Using a 6-1/2 inch O.D. tube and suitable press, apply enough downward pressure on the Belleville springs allowing the split ring retainer to drop down [Figure 40-20-144].

NOTE: Make sure the Belleville springs are centered in the housing.

Figure 40-20-145

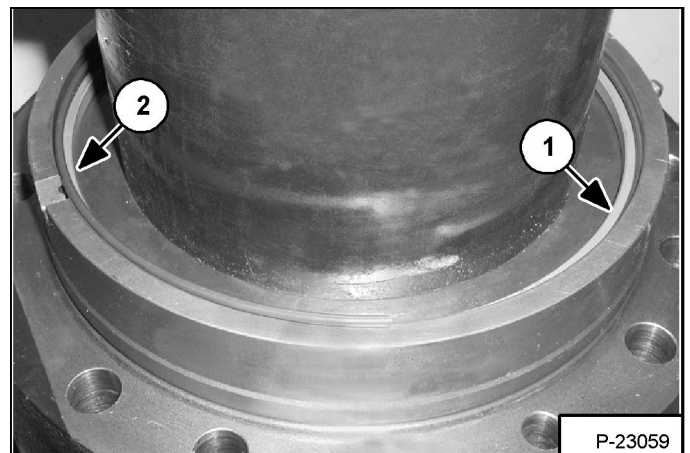

With the split ring retainer (Item 1) in the down position, install the split ring (Item 2) [Figure 40-20-145] into the groove in the brake housing.


Carefully release press pressure making sure that the split ring is fully seating the housing groove and the retainer ring secures the split ring.

Remove the housing from the press.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Brake Group Assembly (Cont'd)


Figure 40-20-146

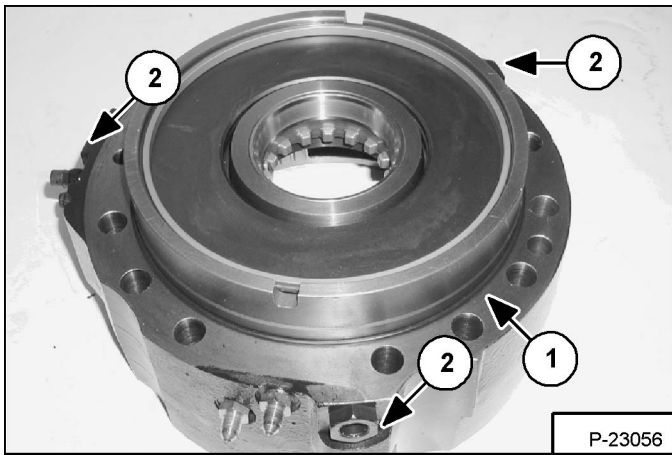

Install a new O-ring (Item 1) [Figure 40-20-146] on the housing.


Turn the three brake adjusting screws (Item 2) [Figure 40-20-146] in (clockwise) equally.

Figure 40-20-147

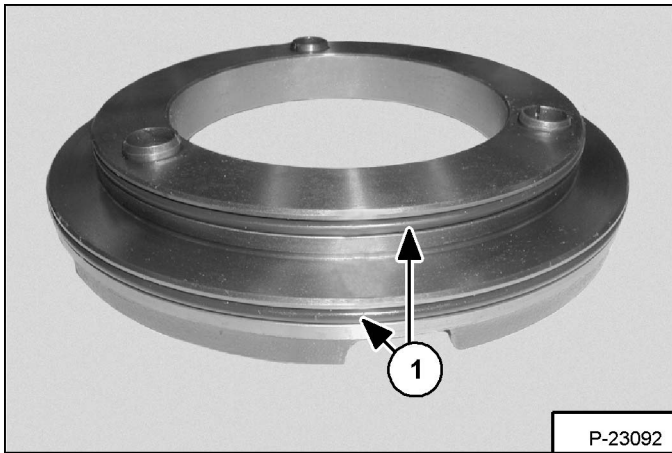


Lightly lubricate and install two new O-rings (Item 1) [Figure 40-20-147] onto the piston.

Figure 40-20-148

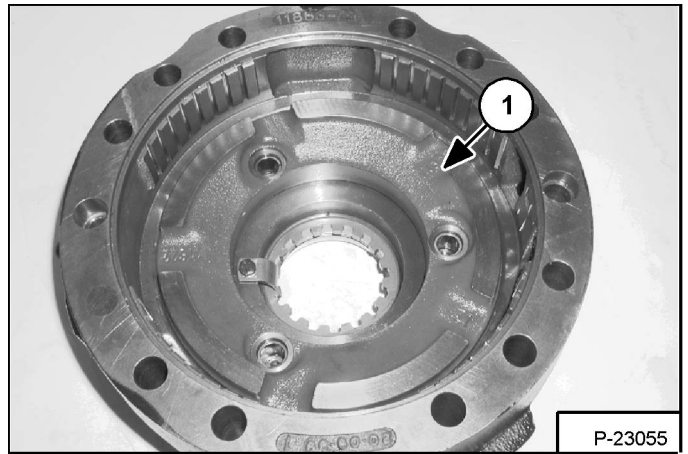

Align the holes in the piston and the threaded holes in the housing and install the piston (Item 1) [Figure 40-20-148] into the housing.

Figure 40-20-149

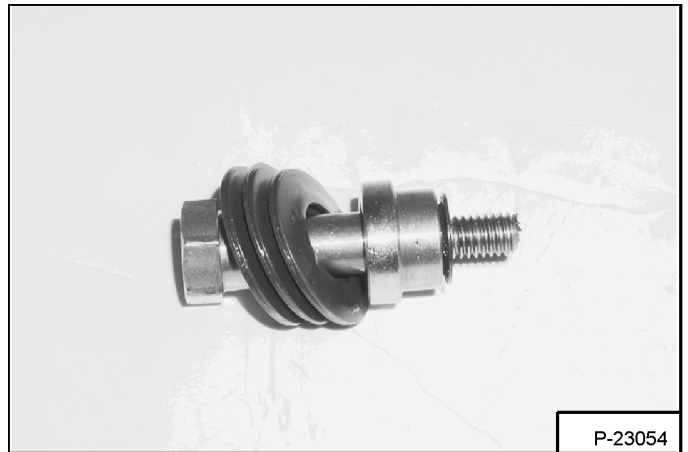


Be sure that the bolt assembly is in the arrangement shown [Figure 40-20-149].

AXLE AND DIFFERENTIAL (FRONT) (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Brake Group Assembly (Cont'd)

Figure 40-20-150

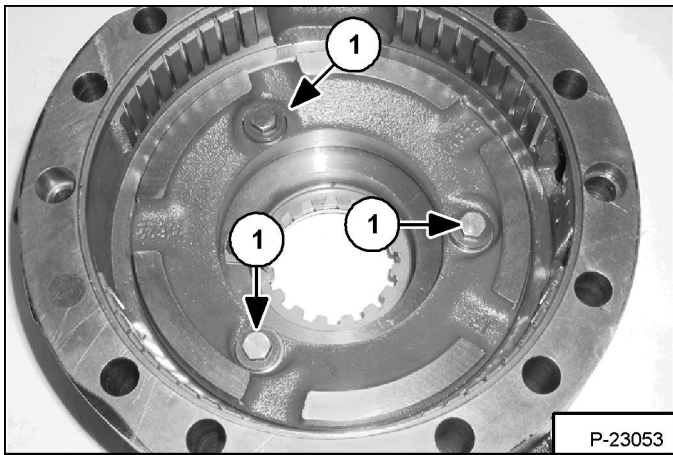


Install the bolt assembly (Item 1) [Figure 40-20-150] into the brake housing and tighten to 7 ft.-lbs. (10 Nm) torque.

Figure 40-20-151

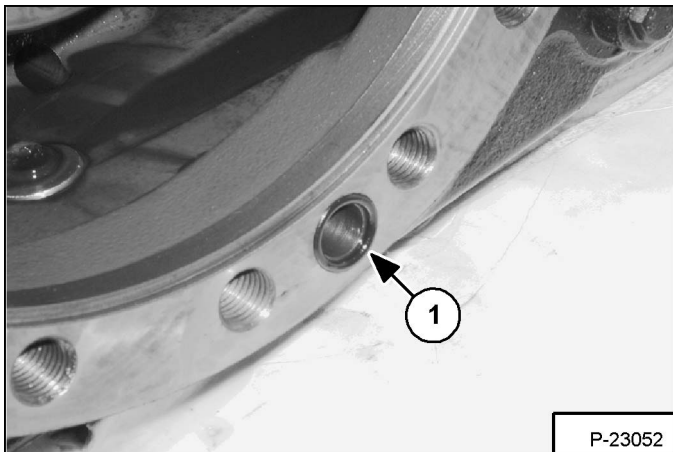


Install a new O-ring (Item 1) [Figure 40-20-151] onto the center housing.

Figure 40-20-152

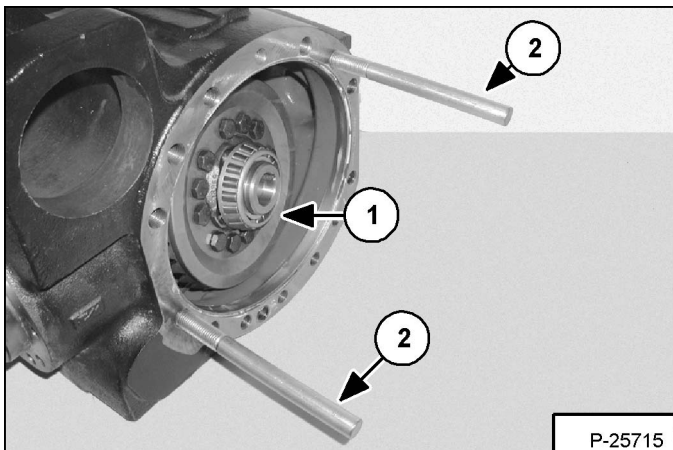

Set the pinion assembly (Item 1) in the center housing as shown. Install the two guide studs (Item 2) [Figure 40-20-152].

Figure 40-20-153

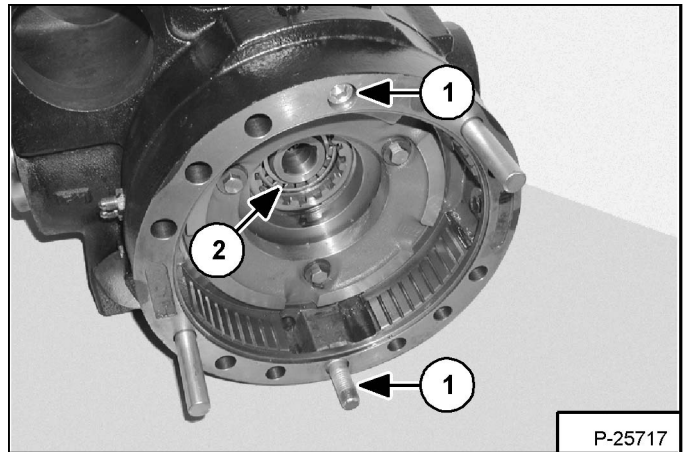


Install the brake housing and two bolts (Item 1) [Figure 40-20-153].

NOTE: Be sure the bearing (Item 2) [Figure 40-20-153] on the pinion gear is aligned with the brake housing race.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Brake Group Assembly (Cont'd)

Figure 40-20-154

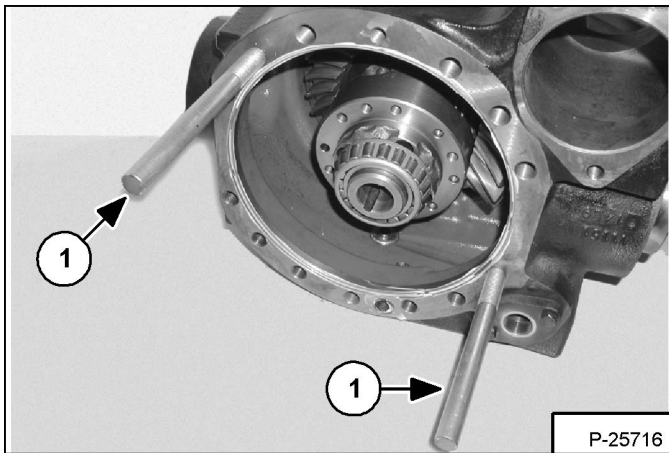

Install the two guide studs (Item 1) [Figure 40-20-154].

Figure 40-20-155

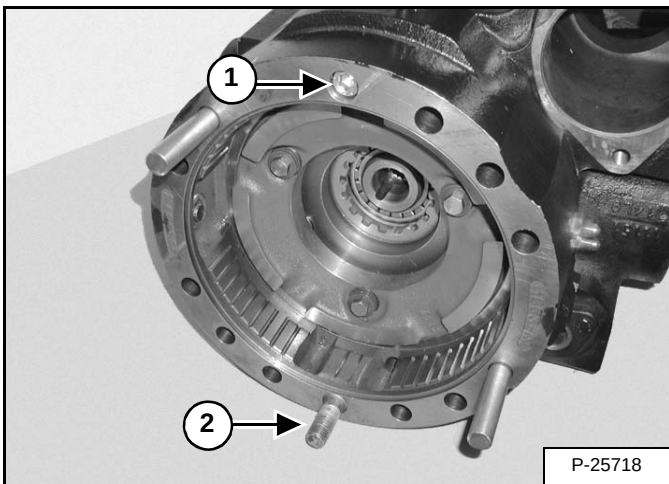


Install the brake housing bolt (Item 1) and stud (Item 2) [Figure 40-20-155].

NOTE: Be sure the bearing on the pinion gear is aligned with the brake housing race.


Tighten the bolt to 59 ft.-lbs. (80 Nm) and the stud to 88 ft.-lbs. (120 Nm) torque.

Figure 40-20-156

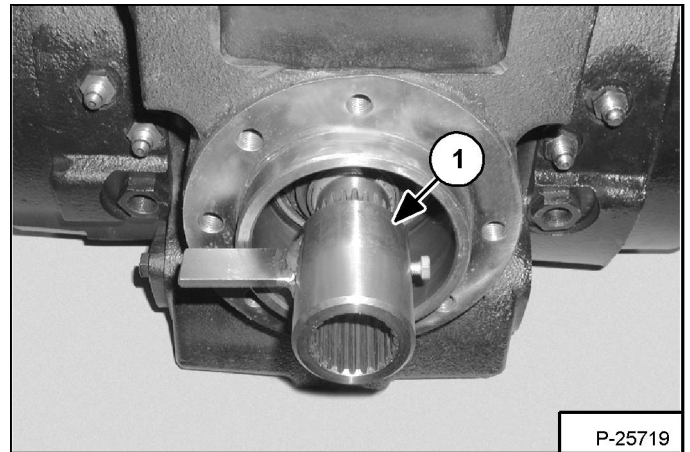

Install the tool CA715055 (Item 1) on the pinion shaft [Figure 40-20-156].

Figure 40-20-157

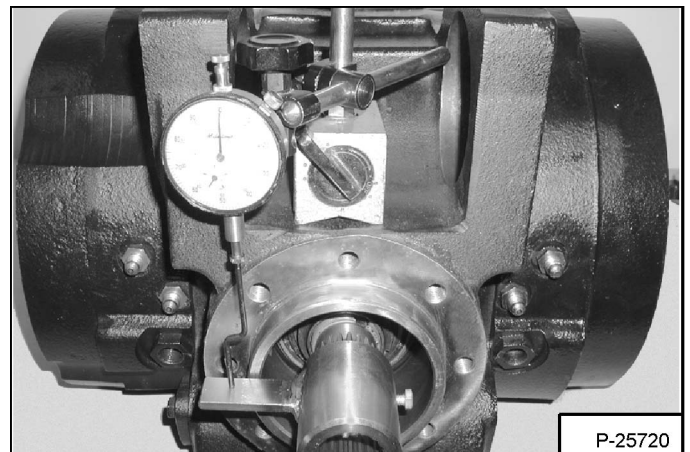


Using a dial gauge, move the pinion shaft back and forth and make a note of the backlash between the pinion and ring gear [Figure 40-20-157].

Check that the backlash is within the permissible range of 0.007 - 0.009 inches (0.18 - 0.23 mm).

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Brake Group Assembly (Cont'd)

Figure 40-20-158

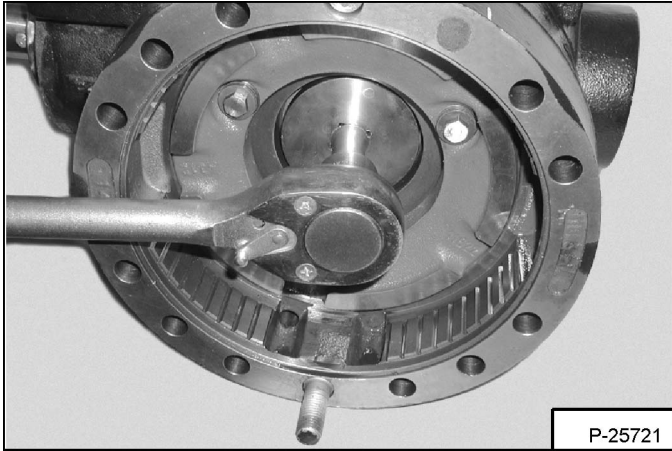

Adjusting the lock nuts [Figure 40-20-158]:


- If the backlash measured is under the permissible range, tighten the lock nut on the side opposite the crown wheel and unscrew the lock nut on the other side by the same amount.

- If the backlash is above the permissible range, tighten the lock nut on the side of the crown wheel and loosen the lock nut on the other side by the same amount.

Once the pinion and ring gear adjustment has been carried out, check that there is at least a minimal preload on the differential cage bearings. If necessary, repeat the steps if backlash is still outside the permissible range.


Once the pinion/ring gear backlash has been determined, the total preload of the pinion ring gear wheel bearings must be measured, to verify that it falls within the permissible range.

Figure 40-20-159

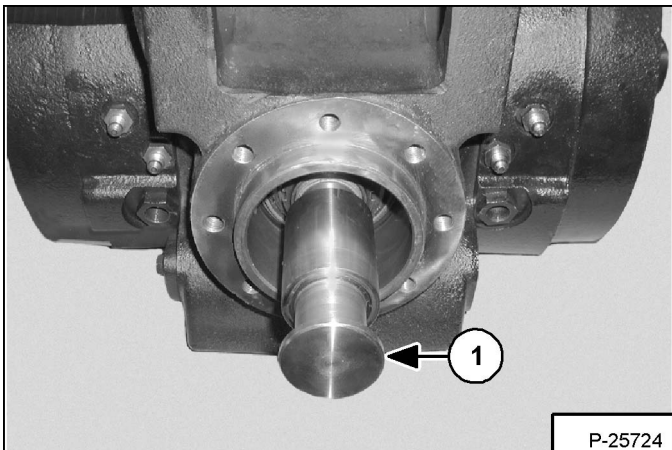

Install the special tool CA715116 (Item 1) [Figure 40-20-159] onto the pinion shaft.


Figure 40-20-160

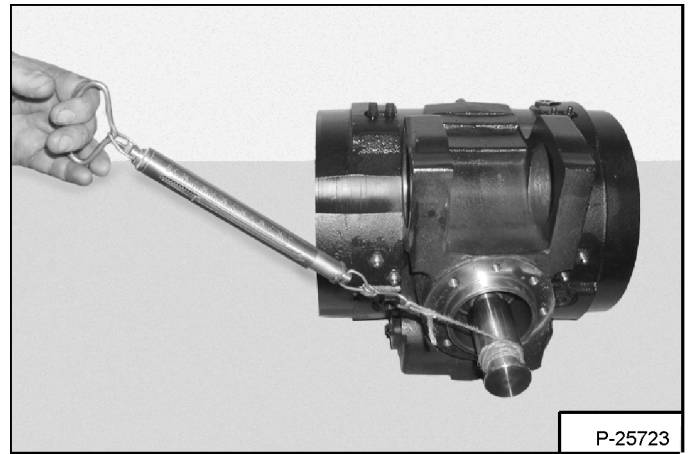

Attach one end of a light rope to the special tool and make 2 or 3 wraps around the tool. Attach the spring scale to the opposite end of the rope. Pull the scale perpendicular to the housing to measure the rolling torque on the bearings. The value is 2 - 3 lbs. (0.9 to 1.4 Kg) [Figure 40-20-160].

- If the total preload is under the permissible range, tighten the two lock nuts by same amount, retaining the value of the pinion ring gear backlash. -If the total preload is above the permissible range, slacken the two lock nuts by the same amount, retaining the value of the pinion ring gear backlash.

Figure 40-20-161

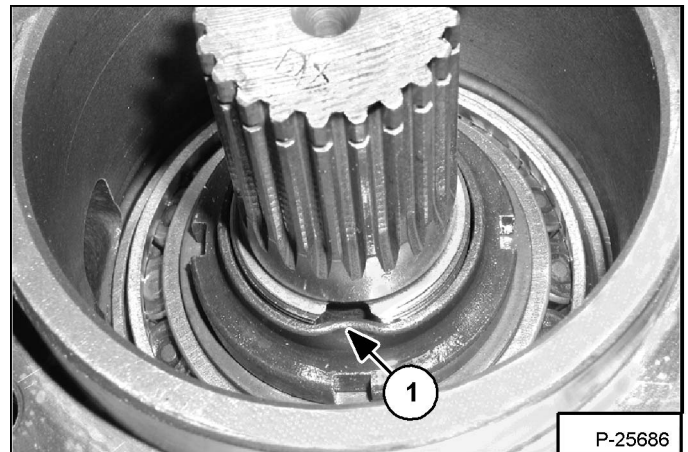


Stake the lock nut (Item 1) [Figure 40-20-161] on the pinion.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Brake Group Assembly (Cont'd)

Figure 40-20-162

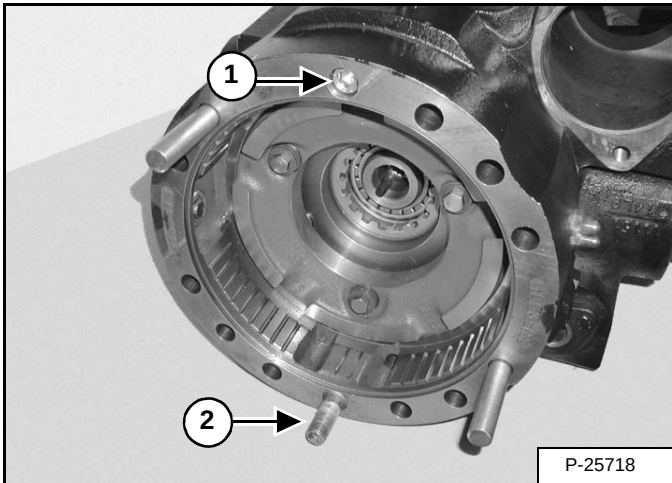


Temporarily remove the brake housing bolt (Item 1) and stud (Item 2) [Figure 40-20-162] opposite from the ring gear. Remove the brake housing.

Figure 40-20-163

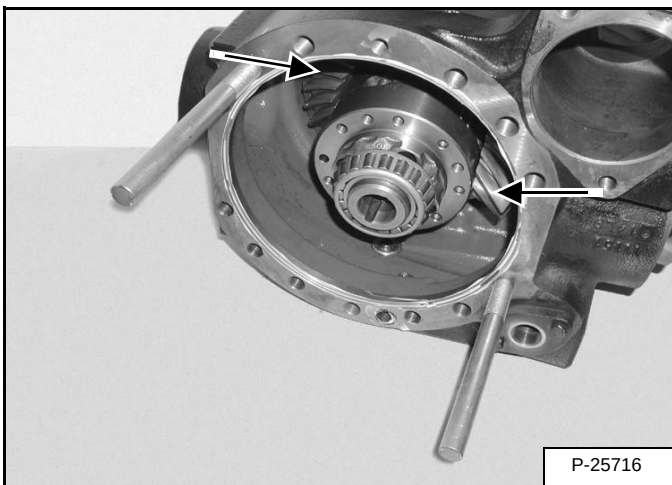

Use colored lead and brush to paint 3 or 4 teeth of the ring gear in three opposite places [Figure 40-20-163].


Figure 40-20-164

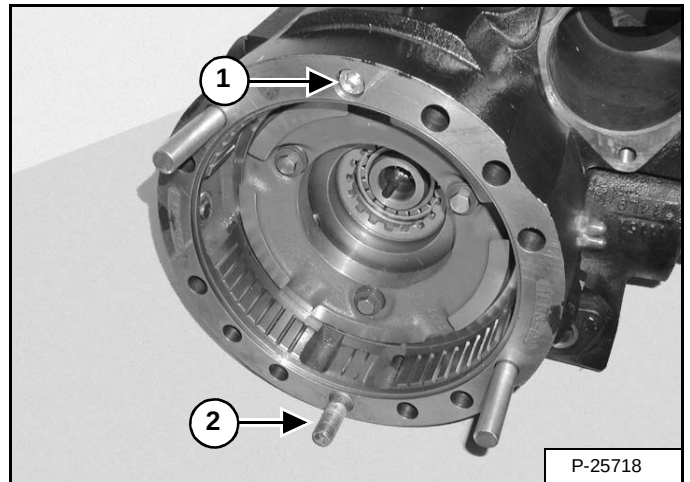

Temporarily install the brake housing, bolt (Item 1) and stud (Item 2) [Figure 40-20-164].

Tighten the bolt to 59 ft.-lbs (80 Nm) and the stud to 88 ft.-lbs. (120 Nm) torque.

Figure 40-20-165

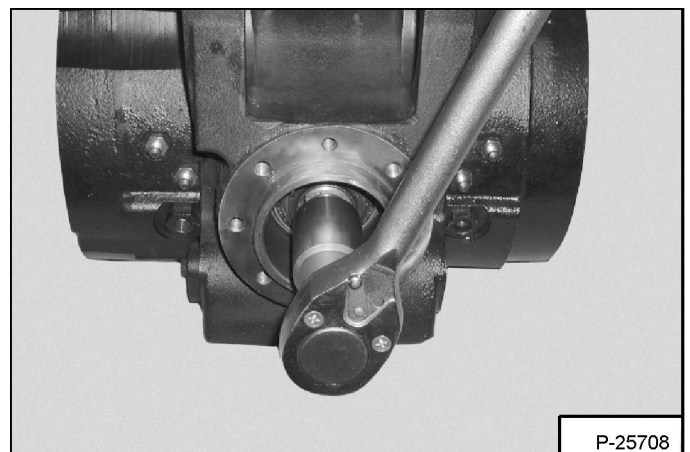

Turn the pinion using the special tool CA715022 several turns [Figure 40-20-165].


Remove the brake housing [Figure 40-20-162].

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Brake Group Assembly (Cont'd)


Check the wear pattern of the pinion/ring gear teeth.

Figure 40-20-166

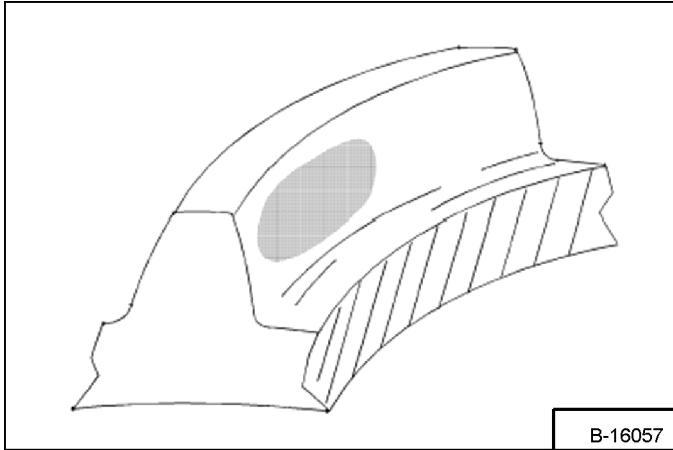


Correct Pattern - If pinion/ring gear has been properly adjusted, wear pattern (contact) should be as shown [Figure 40-20-166].

Figure 40-20-167

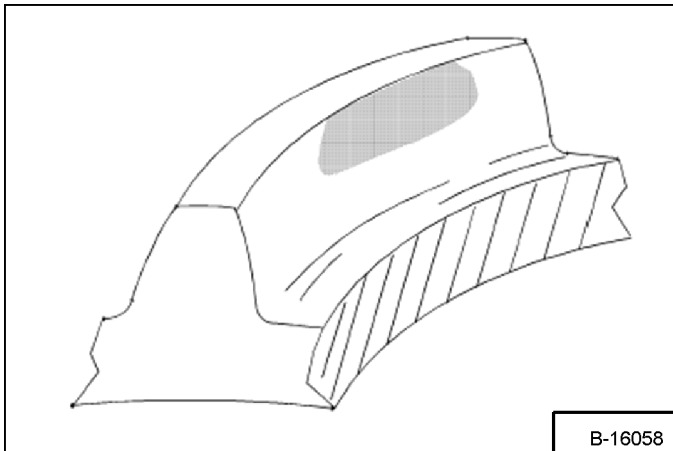


Excessive contact on tooth edge - adjust the backlash [Figure 40-20-167].

Figure 40-20-168

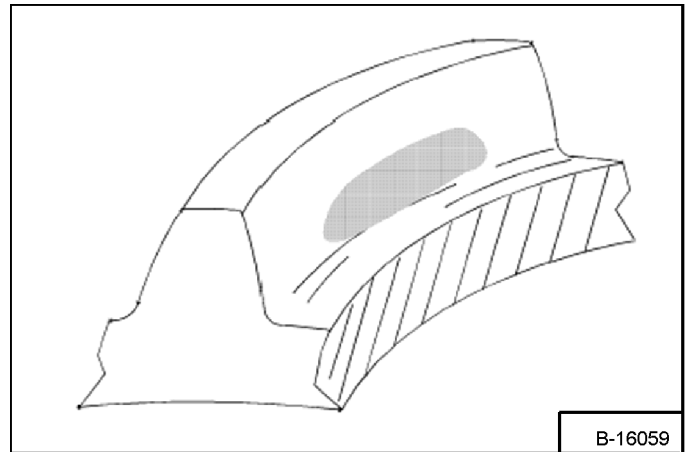

Excessive contact on flank of tooth - adjust the backlash [Figure 40-20-168].

Figure 40-20-169

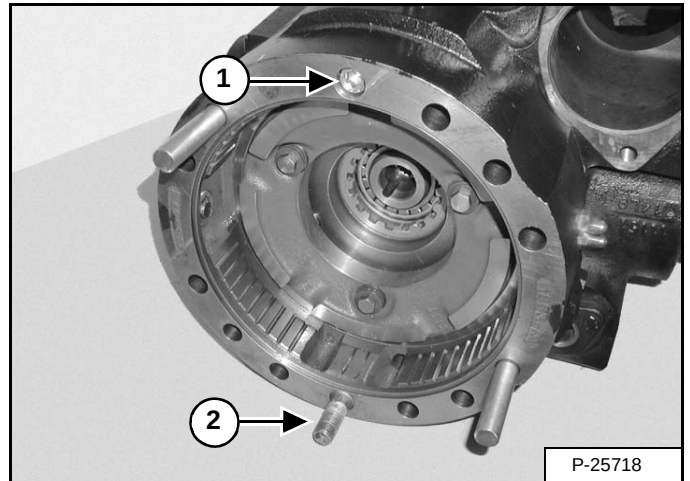


Once the wear pattern is correct install the brake housing, bolt (Item 1) and stud (Item 2) [Figure 40-20-169].

Tighten the bolt to 59 ft.-lbs. (80 Nm) and the stud to 88 ft.-lbs. (120 Nm) torque.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Brake Group Assembly (Cont'd)

Figure 40-20-170

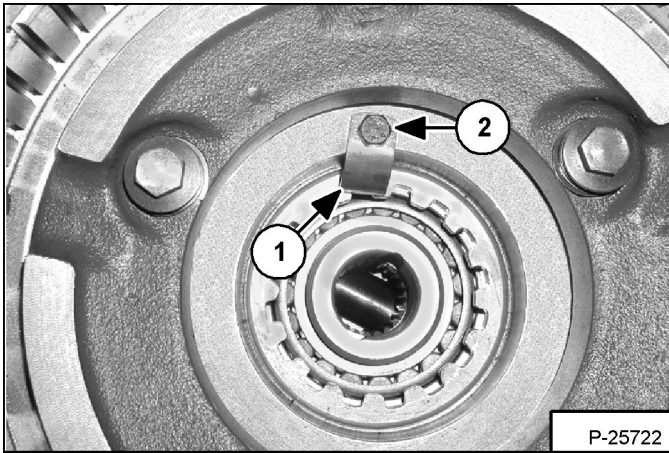


Install the lock nut retainer (Item 1) and bolt (Item 2) [Figure 40-20-170] tighten the bolt to 10 ft.-lbs. (13 Nm) torque.

Figure 40-20-171

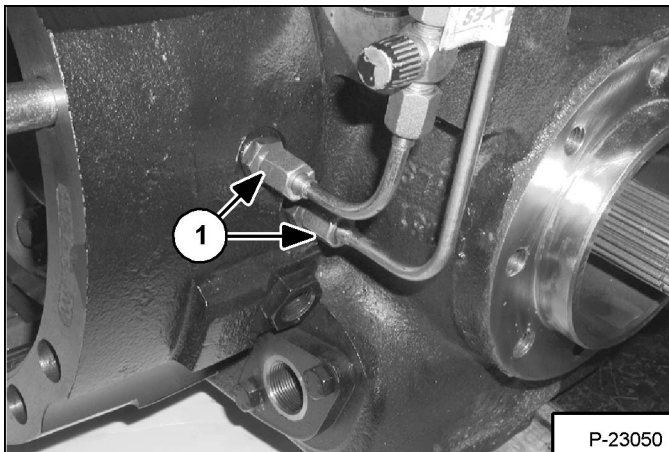


Install the two tubelines (Item 1) [Figure 40-20-171].

Figure 40-20-172

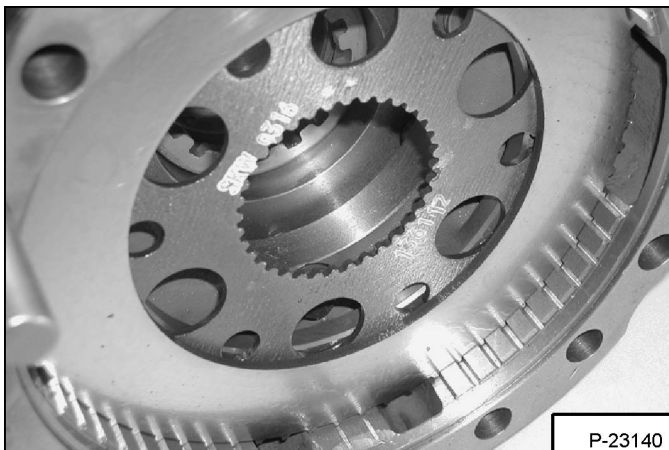

Install the thick spacer plate into the grooves in the brake housing followed by a friction plate and a thin spacer plate [Figure 40-20-172].

Figure 40-20-173

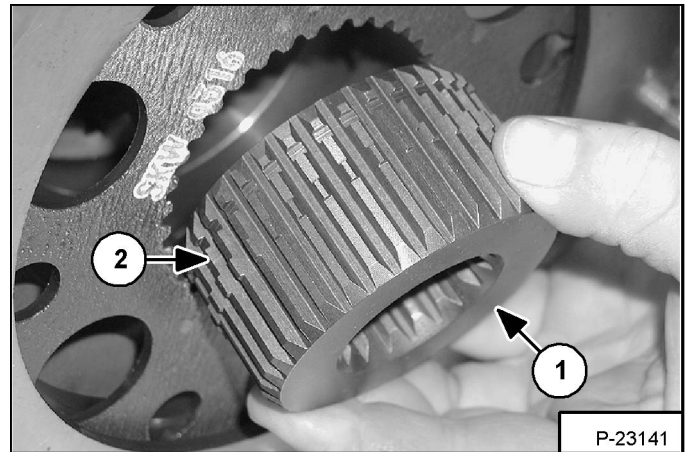


Install the coupler (Item 1) [Figure 40-20-173] in the friction plate.

Note the position of the groove (Item 2) [Figure 40-20-173] in the coupler.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Brake Group Assembly (Cont'd)

Figure 40-20-174

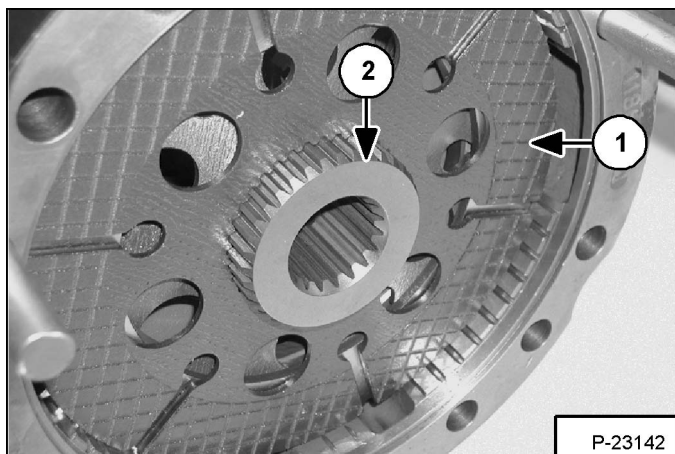

Install the second friction plate (Item 1) onto the coupler (Item 2) [Figure 40-20-174].


Figure 40-20-175

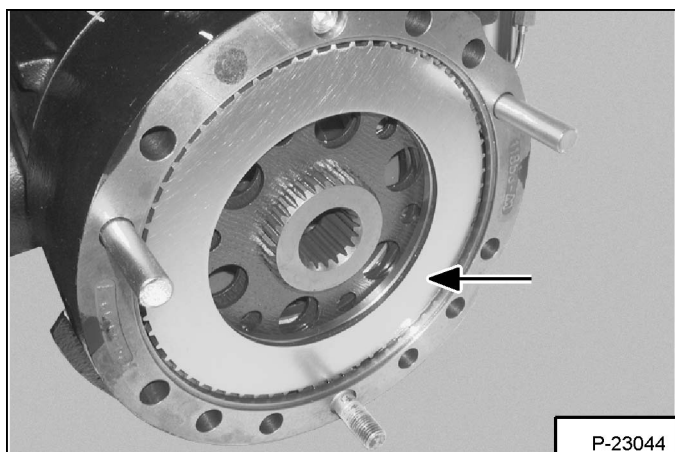

Install the second thick spacer plate followed by the thin spacer plate [Figure 40-20-175].

Axle Housing/Drive Axle Assembly

Figure 40-20-176

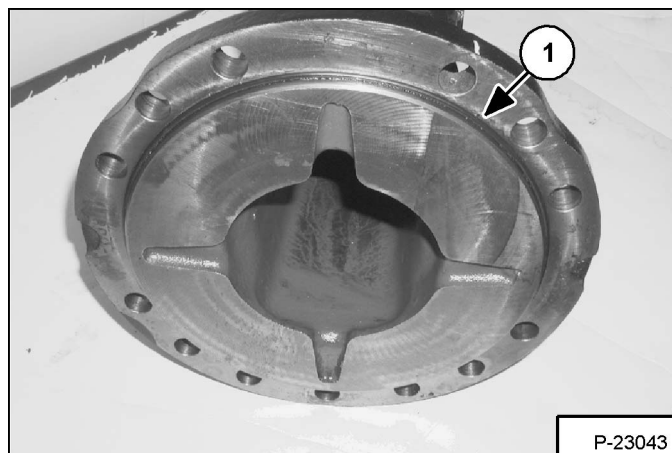

Install a new O-ring (Item 1) [Figure 40-20-176] on the axle housing.

Figure 40-20-177




Install the axle housing onto the brake housing by sliding on the alignment studs [Figure 40-20-177].

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Axle Housing/Drive Axle Assembly (Cont'd)

Figure 40-20-178

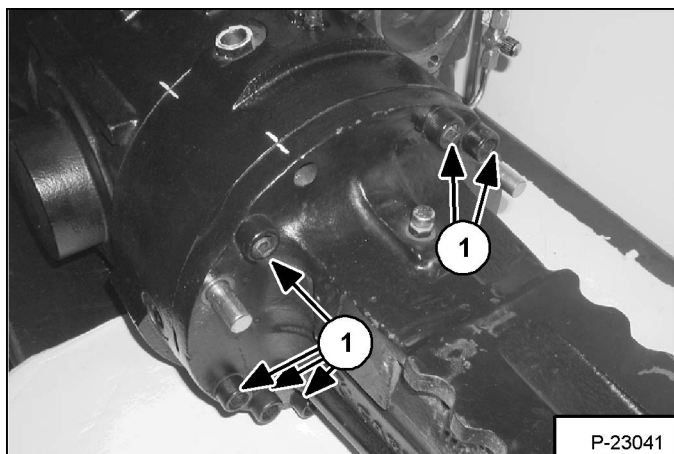


Install and tighten the mounting bolts (Item 1) [Figure 40-20-178].

Figure 40-20-179

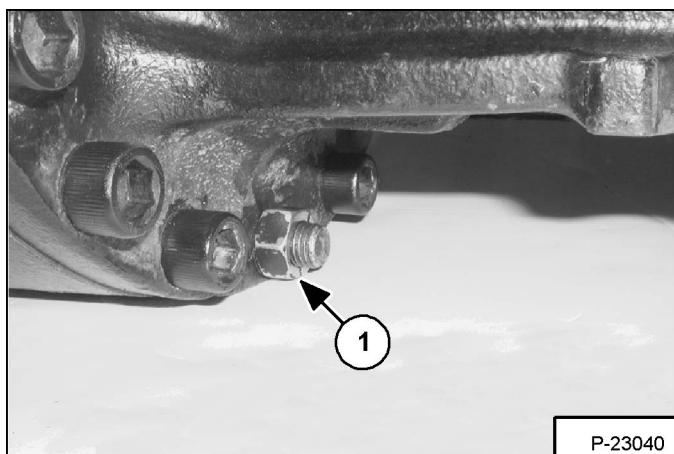


Install the nut (Item 1) [Figure 40-20-179] on the stud on the bottom of the housing. Tighten to 140 ft.-lbs. (190 Nm) torque.

Figure 40-20-180

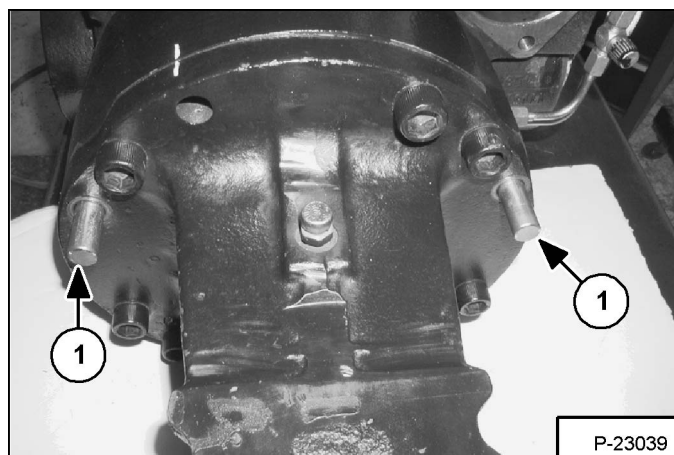

Remove the two alignment studs (Item 1) [Figure 40-20-180], install the two remaining bolts, tighten all bolts to 236 ft.-lbs. (320 Nm) torque.

Figure 40-20-181

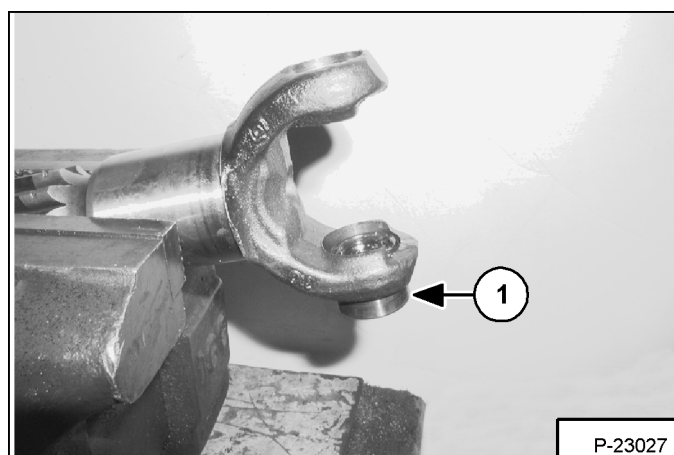


Partially install a new bearing cup (Item 1) [Figure 40-20-181] into the yoke.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Axle Housing/Drive Axle Assembly (Cont'd)

Figure 40-20-182

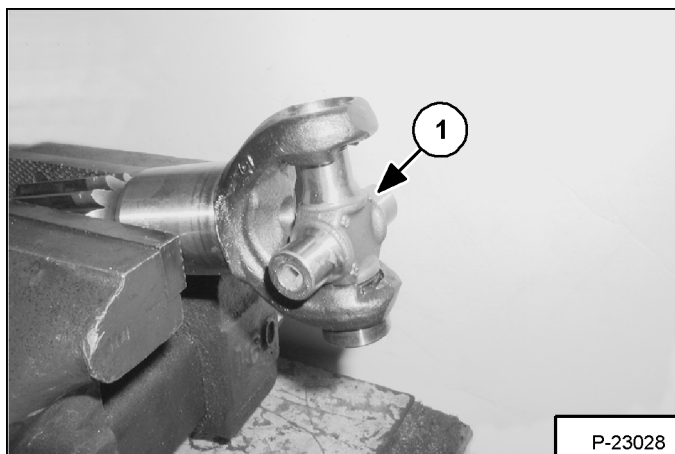


Install the cross (Item 1) [Figure 40-20-182] into the bearing cup.

Figure 40-20-183

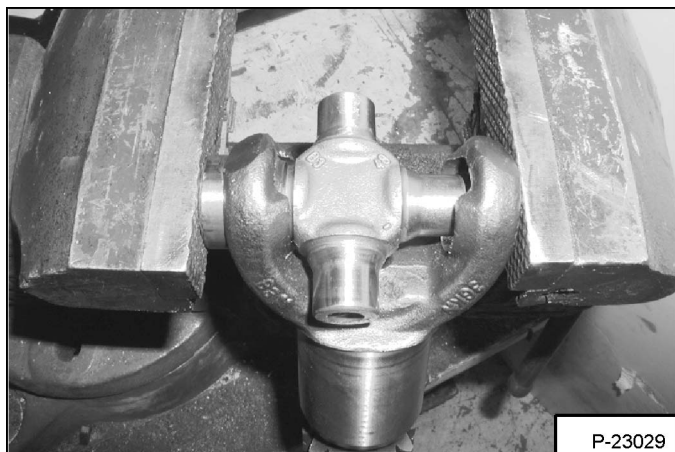

Press the bearing cup into the yoke [Figure 40-20-183].


Figure 40-20-184

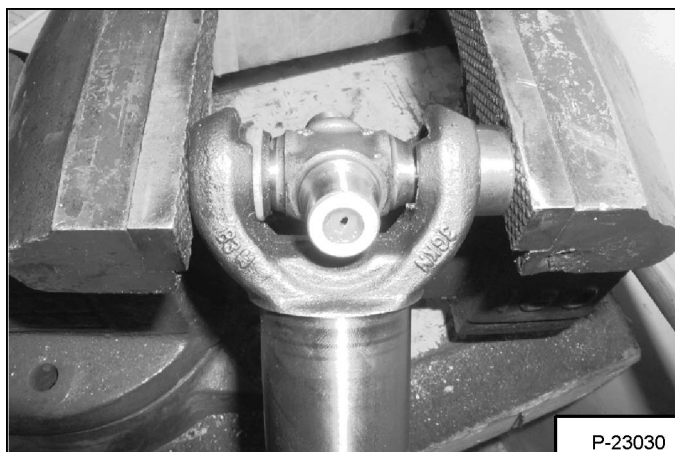

Install the second bearing cup into the yoke and press onto the cross [Figure 40-20-184].

NOTE: Use care not to lose or drop any needle bearings out of position.

Figure 40-20-185

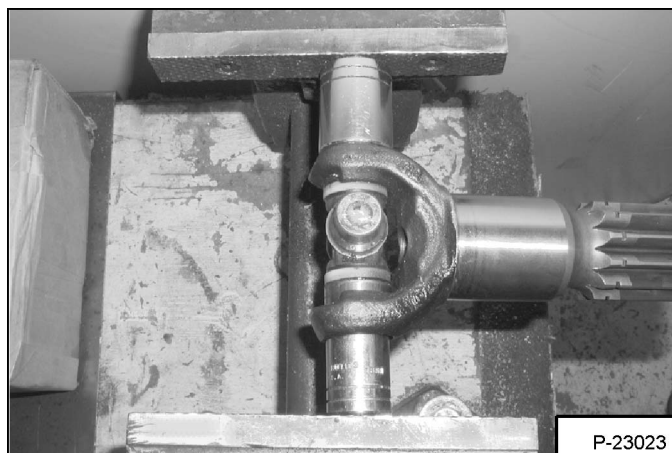


Fully press the two bearing cups into the drive shaft yoke [Figure 40-20-185].

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Axle Housing/Drive Axle Assembly (Cont'd)

Figure 40-20-186

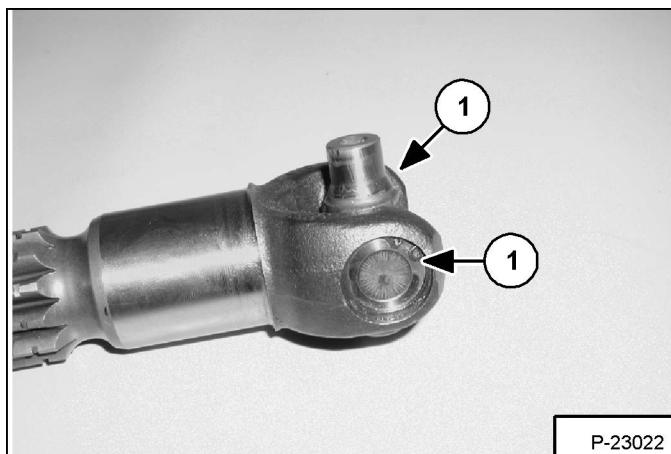


Install the two snap rings (Item 1) [Figure 40-20-186].

Figure 40-20-187

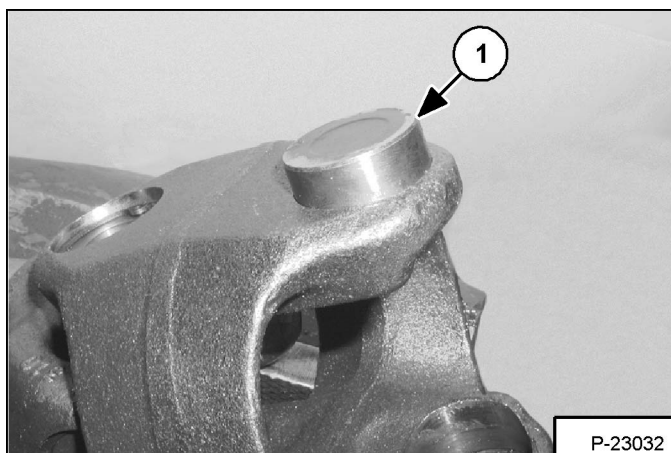


Partially install a new bearing cup (Item 1) [Figure 40-20-187] into the yoke.

Figure 40-20-188

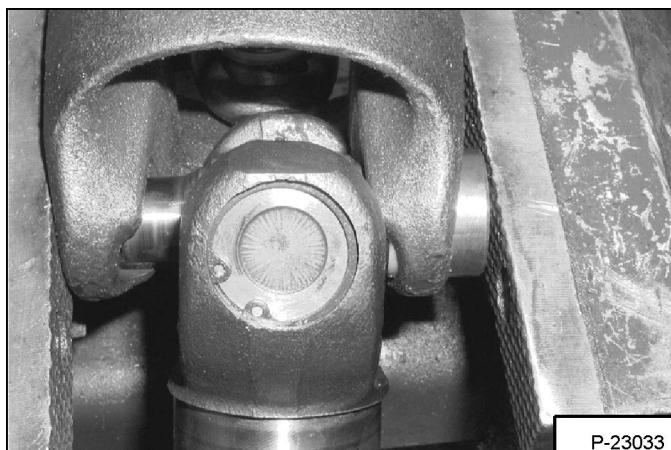

Install the cross/shaft assembly into the bearing cup [Figure 40-20-188].

Figure 40-20-189

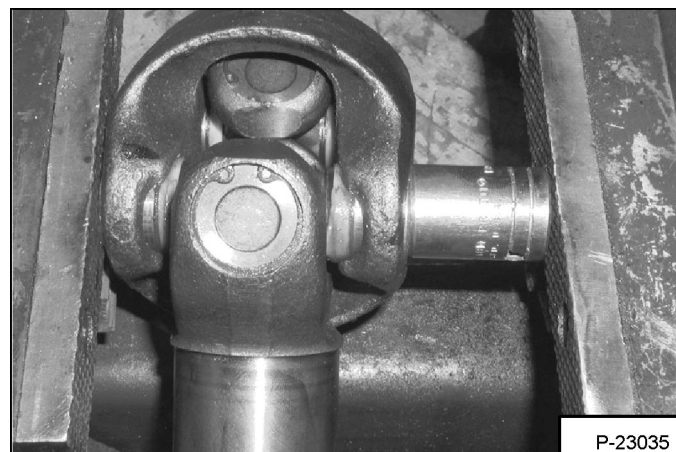


Install the second bearing cup into the yoke and press onto the cross [Figure 40-20-189].

NOTE: Use care not to lose or drop any needle bearings out of position.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Axle Housing/Drive Axle Assembly (Cont'd)

Figure 40-20-190

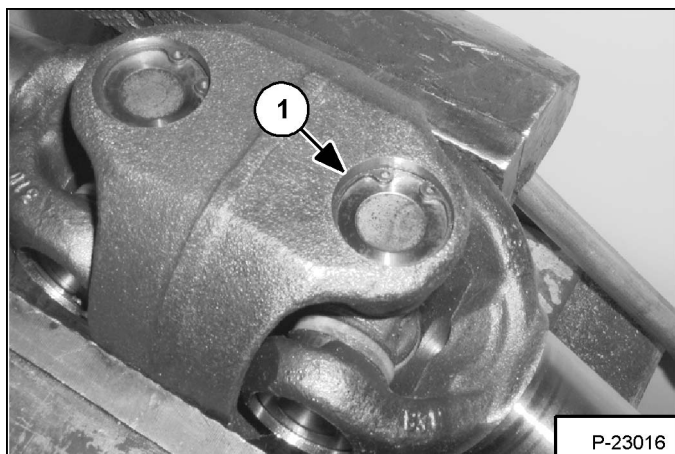

Make sure the bearing cups are fully seated and install both snap rings (Item 1) **[Figure 40-20-190]**.

Figure 40-20-191

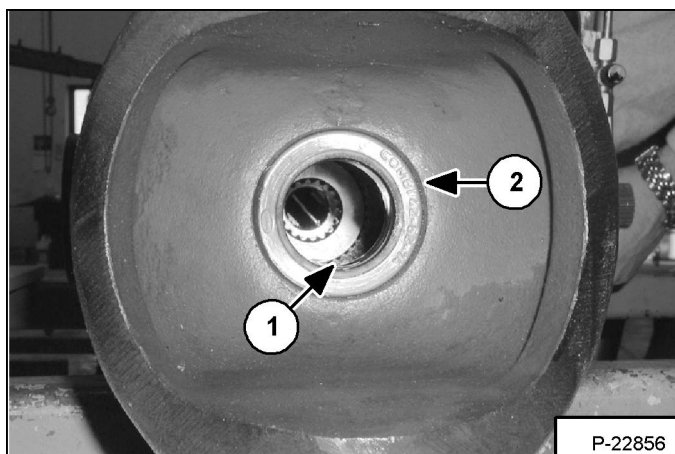

Install a new bushing (Item 1) and seal (Item 2) **[Figure 40-20-191]** into the axle housing.

Lightly lubricate the new seal and bushing.

Figure 40-20-192



Install the drive axle into the axle housing aligning the shaft with the splines **[Figure 40-20-192]**.

NOTE: Use care not to damage the seal.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Steering Knuckle Assembly

Figure 40-20-193



Install the bushing (Item 1) [Figure 40-20-193] into the knuckle housing.

Figure 40-20-194

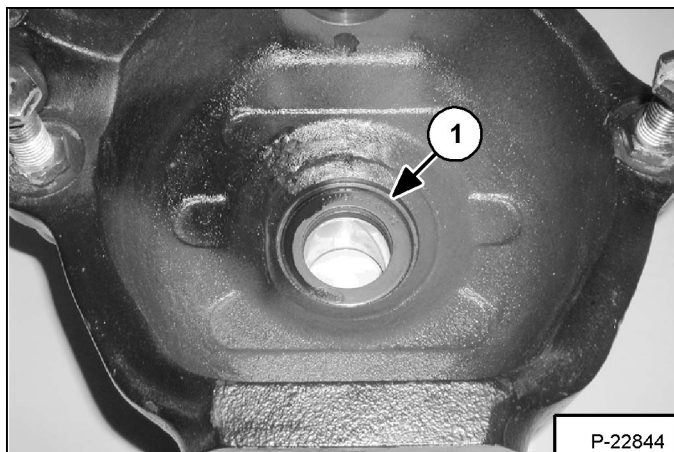


Install a new seal (Item 1) [Figure 40-20-194] into the knuckle housing.

Figure 40-20-195



Figure 40-20-196

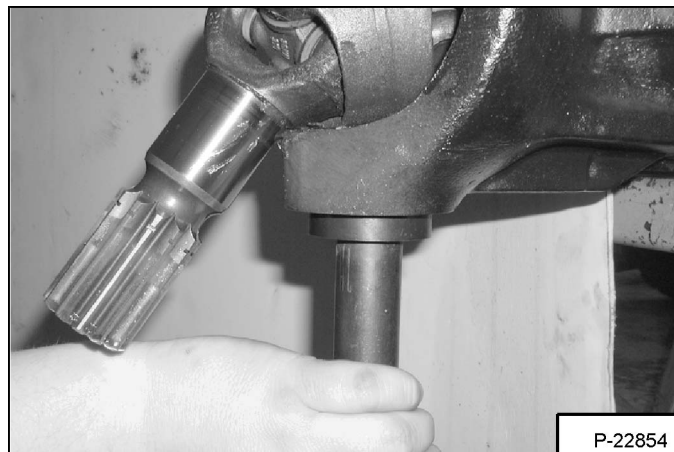


Install the bushings into the top and bottom of the axle [Figure 40-20-195] & [Figure 40-20-196].

NOTE: The cupped bushing goes on the bottom.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Steering Knuckle Assembly (Cont'd)

Figure 40-20-197

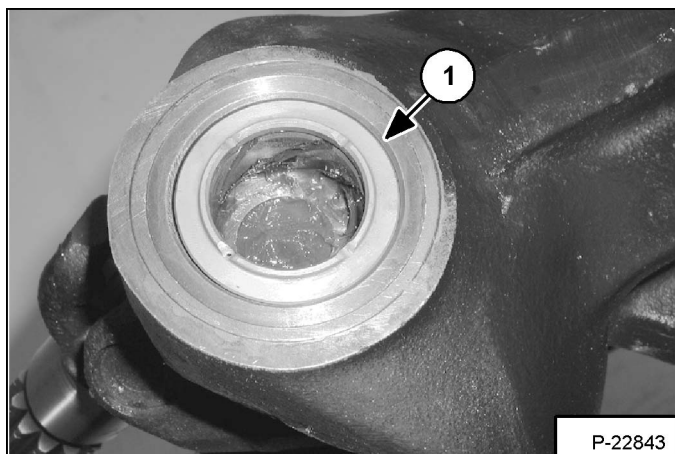

Install the spacer washer (Item 1) [Figure 40-20-197] on the top bushing.


Figure 40-20-198

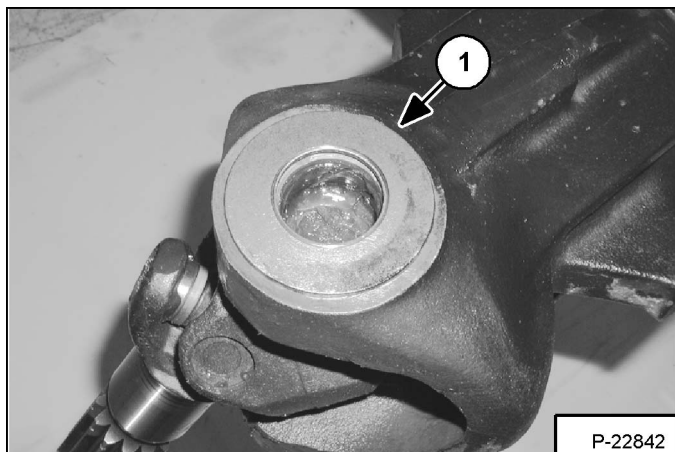

Install the Belleville washers (Item 1) [Figure 40-20-198] on the top and bottom bushing.


NOTE: The larger Belleville washer is on top.

Figure 40-20-199

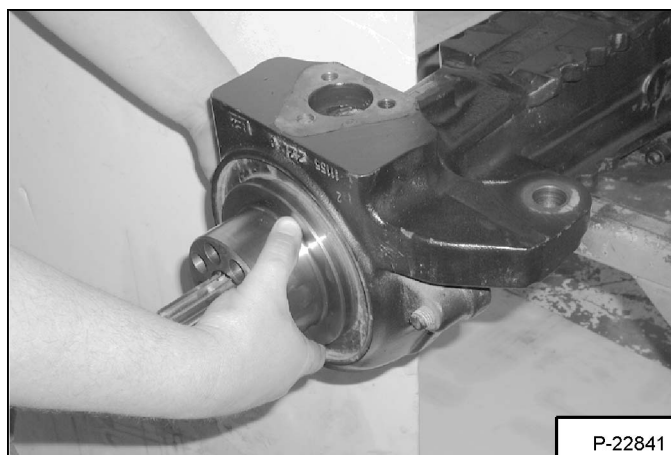

Install the knuckle assembly onto the axle [Figure 40-20-199].

Figure 40-20-200

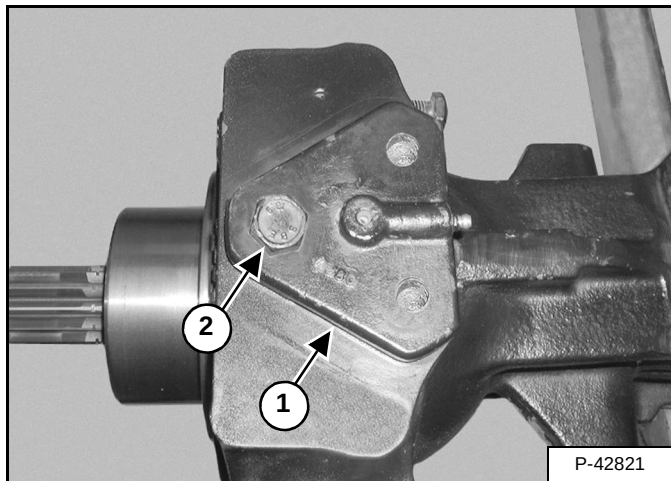


Install the upper king pin (Item 1) and bolt (Item 2) [Figure 40-20-200]. Tighten to 140 ft.-lbs. (190 Nm) torque.

**AXLE AND DIFFERENTIAL (FRONT) (For S/N
362811001 - 362812000, S/N 362911001 - 362912000)
(CONT'D)**


Steering Knuckle Assembly (Cont'd)

Figure 40-20-201

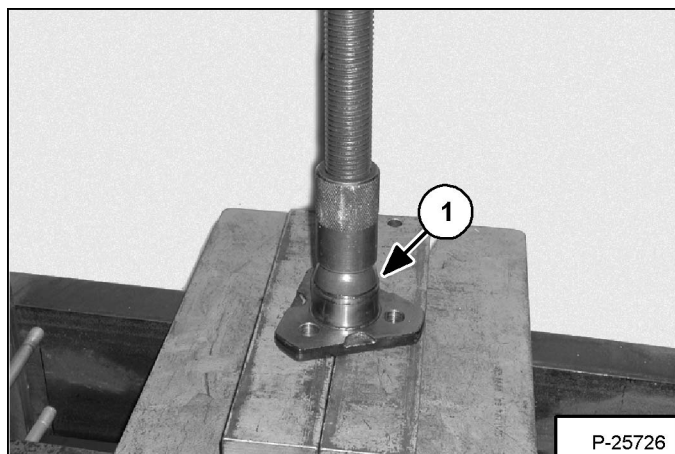

Place the lower king pin in a vise or press and install the ball bearing (Item 1) [Figure 40-20-201] onto the king pin shaft until it is fully seated.

Figure 40-20-202

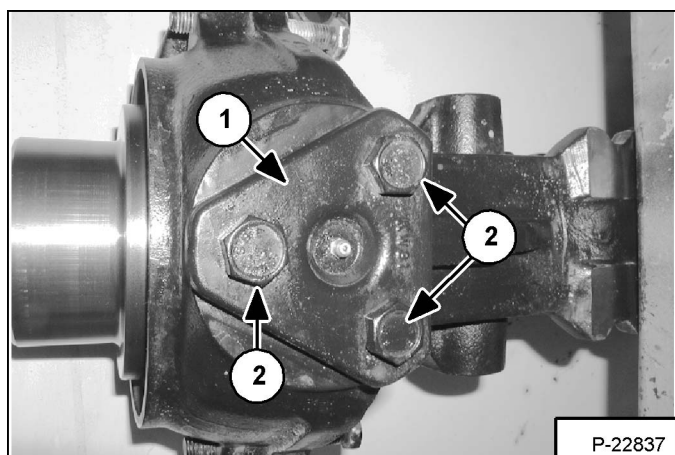


Install the lower king pin (Item 1) and three bolts (Item 2) [Figure 40-20-202]. Tighten to 140 ft.-lbs. (190 Nm) torque.

Lubricate the upper and lower king pins.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Wheel Hub Assembly

Figure 40-20-203

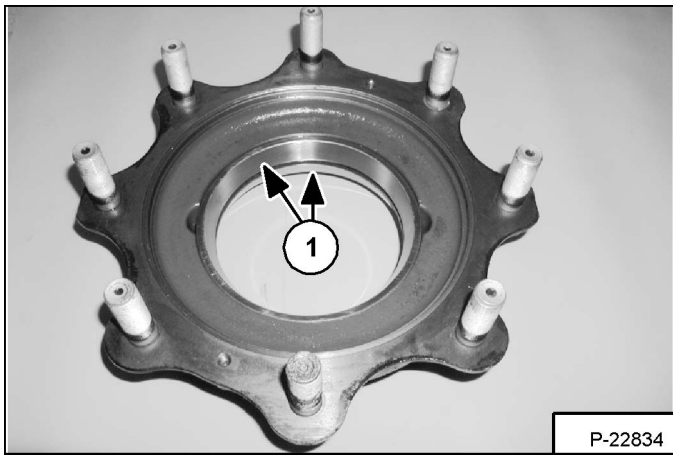


Install both bearing races (Item 1) [Figure 40-20-203] into the hub.

Figure 40-20-204

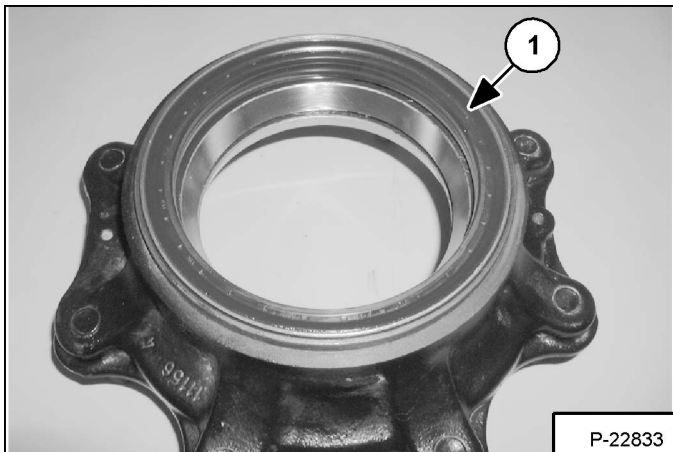


Lightly lubricate the seal (Item 1) [Figure 40-20-204] and install into the hub.

Figure 40-20-205

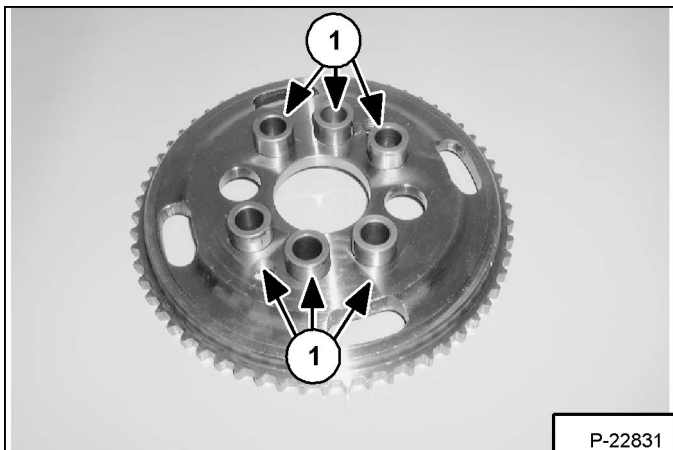

Install the six bushings (Item 1) [Figure 40-20-205] into the gear.

Figure 40-20-206

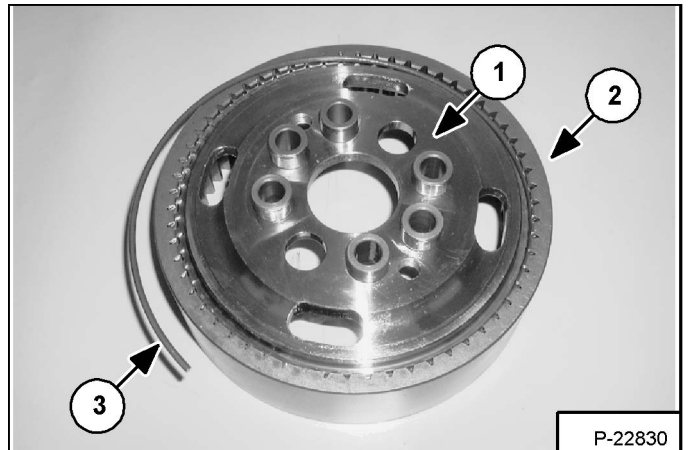


Install the gear (Item 1) into the ring gear (Item 2) [Figure 40-20-206].

Install the retainer ring (Item 3) [Figure 40-20-206] into the groove in the ring gear.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Wheel Hub Assembly (Cont'd)

Figure 40-20-207

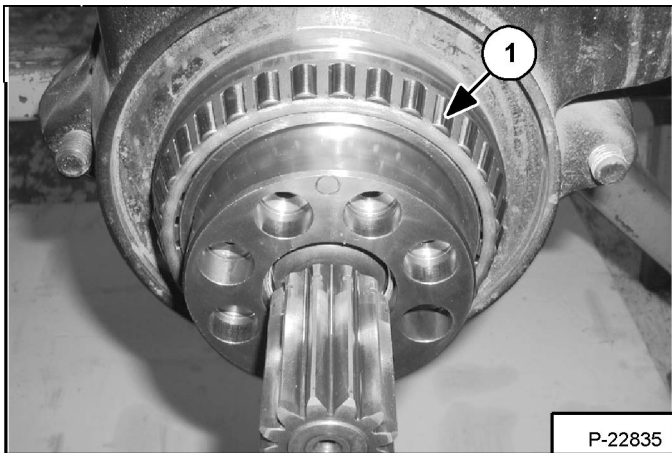


Install the inner bearing (Item 1) [Figure 40-20-207] onto the steering knuckle.

Figure 40-20-208

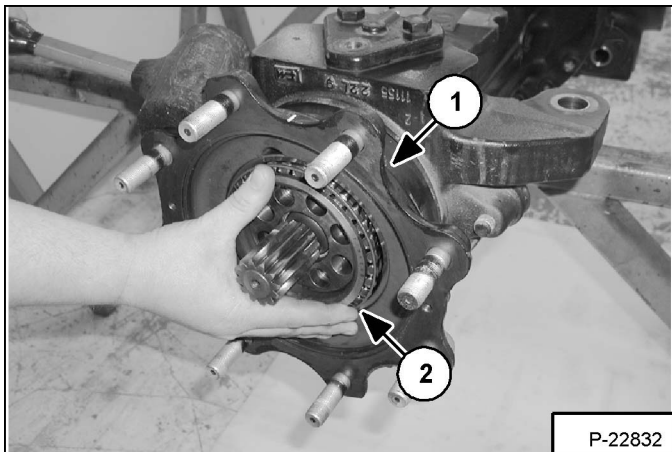


Install the hub assembly (Item 1) and outer bearing (Item 2) [Figure 40-20-208] onto the steering knuckle.

Figure 40-20-209

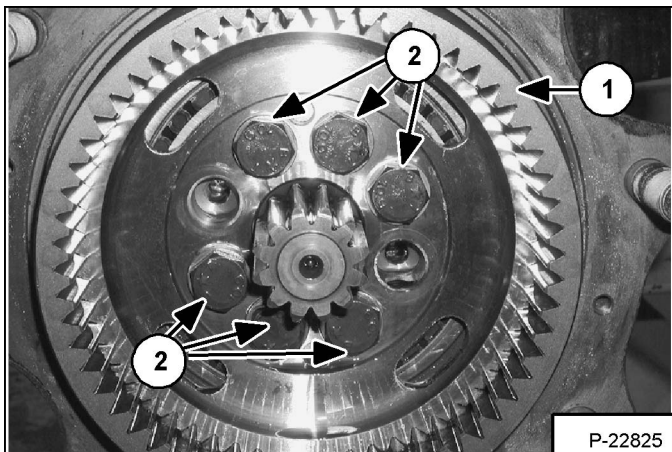

Install the ring gear assembly (Item 1) onto the steering knuckle. Install the six mounting bolts (Item 2) [Figure 40-20-209] and tighten to 88 ft.-lbs. (120 Nm) torque.

Figure 40-20-210

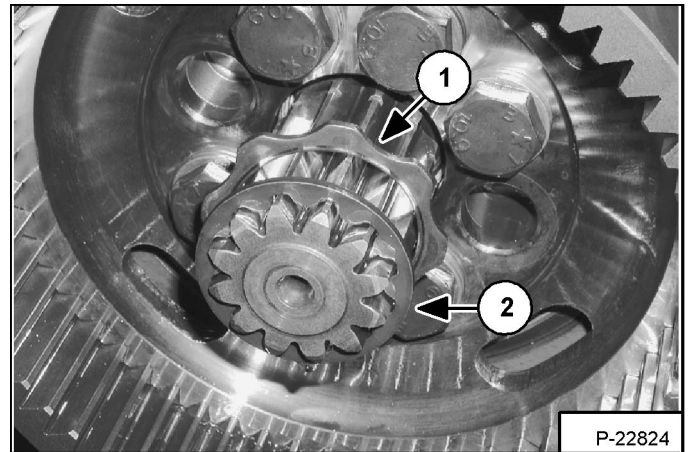


Install the spacer (Item 1) and thrust washer (Item 2) [Figure 40-20-210] on the axle shaft.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Wheel Hub Assembly (Cont'd)


Figure 40-20-211

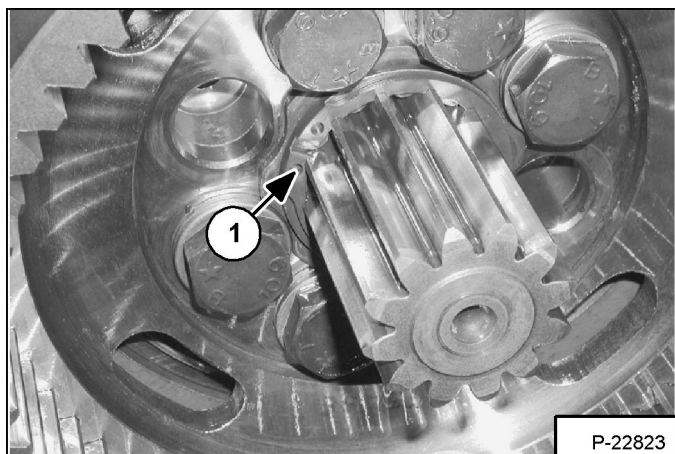

Install the snap ring (Item 1) [Figure 40-20-211] onto the axle shaft.


Planetary Carrier Assembly

Figure 40-20-212

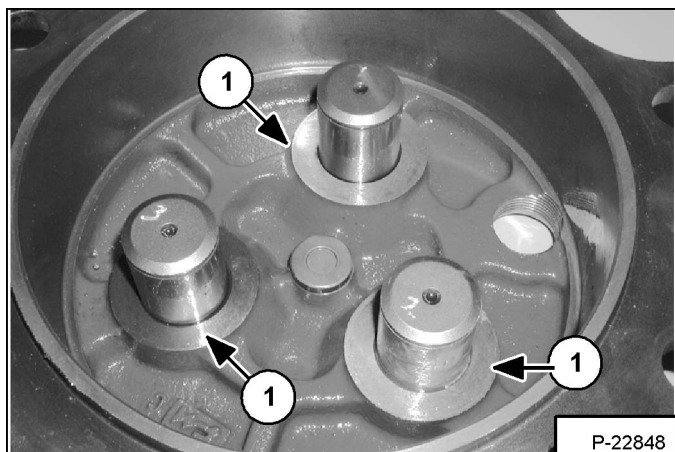


Install the thrust washers (Item 1) [Figure 40-20-212] onto the shafts.

Figure 40-20-213

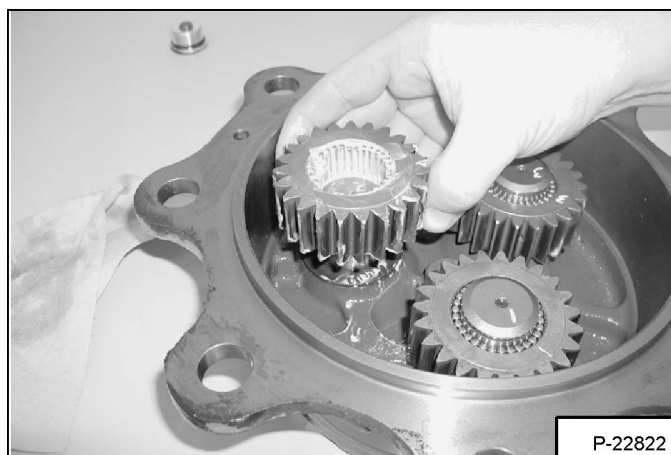

Using grease to hold the needle bearings in position, install the gears onto the shaft [Figure 40-20-213].

Figure 40-20-214

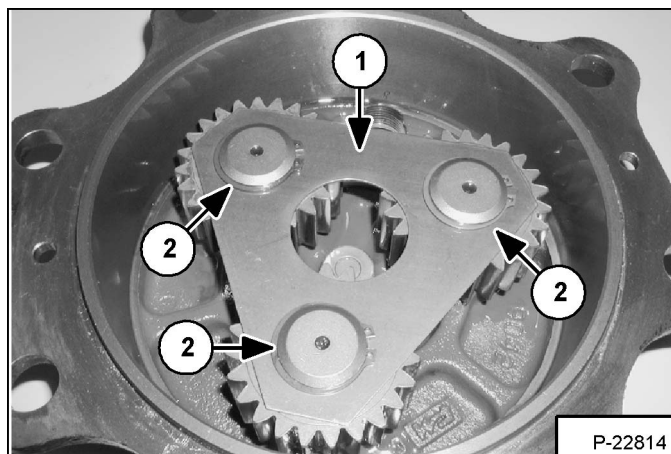


Install the thrust plate (Item 1) and snap rings (Item 2) [Figure 40-20-214].

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Planetary Carrier Assembly (Cont'd)

Figure 40-20-215

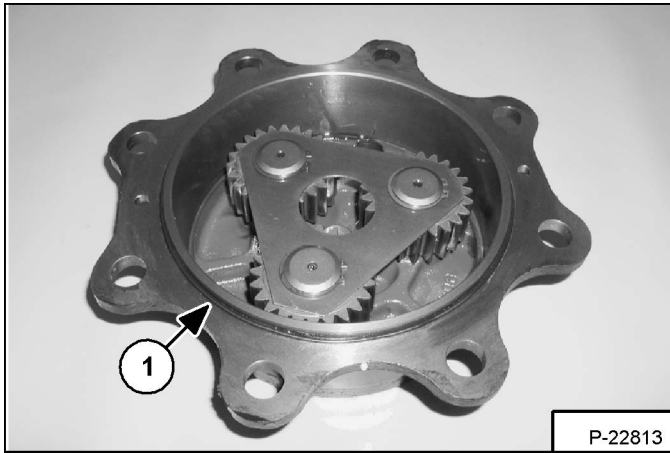


Install a new O-ring (Item 1) [Figure 40-20-215] onto the planetary carrier.

Figure 40-20-216

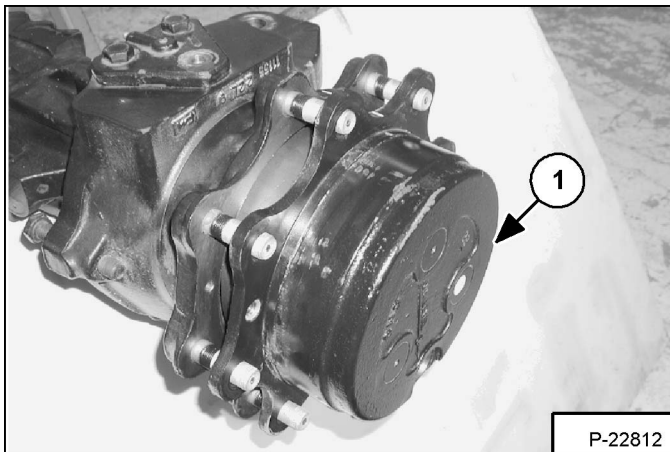


Install the planetary carrier (Item 1) [Figure 40-20-216].

Figure 40-20-217

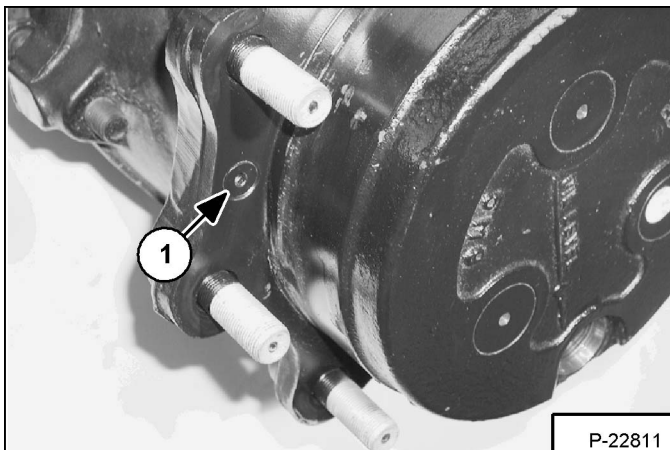

Install the two screws (Item 1) [Figure 40-20-217] and tighten to 18 ft.-lbs. (25 Nm) torque.

Figure 40-20-218

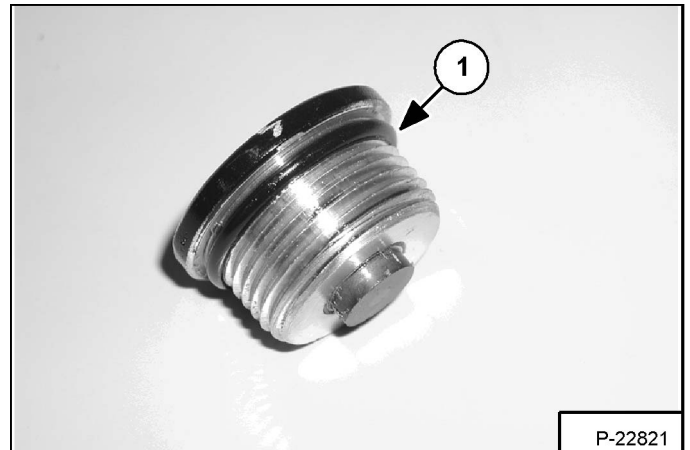

Install a new O-ring (Item 1) [Figure 40-20-218] onto the drain plug.

See "AXLES (FRONT AND REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000)" on page 10-110-1 for filling the axle assembly with fluid.



Bobcat®

**AXLE AND DIFFERENTIAL (REAR) (For S/N
362811001 - 362812000, S/N 362911001 - 362912000)
(CONT'D)**


General Information

For photo clarity, the following axle procedures are done with the complete axle assembly removed from the machine, although the planetary carrier, wheel hub, steering knuckle and drive axle procedures may be done with the axle assembly installed in the machine. For complete axle repair, the following must be done:

- Rear Axle removal. (See "Removal" on page 40-90-1)
- Rear steering cylinder removal. (See "Removal And Installation" on page 20-62-1.)

Planetary Carrier Parts Identification

1. Plug
2. Bolt
3. Planetary Carrier
4. Thrust Pin
5. Shaft
6. Needle Bearings
7. Gear
8. Thrust Washer
9. Snap Ring

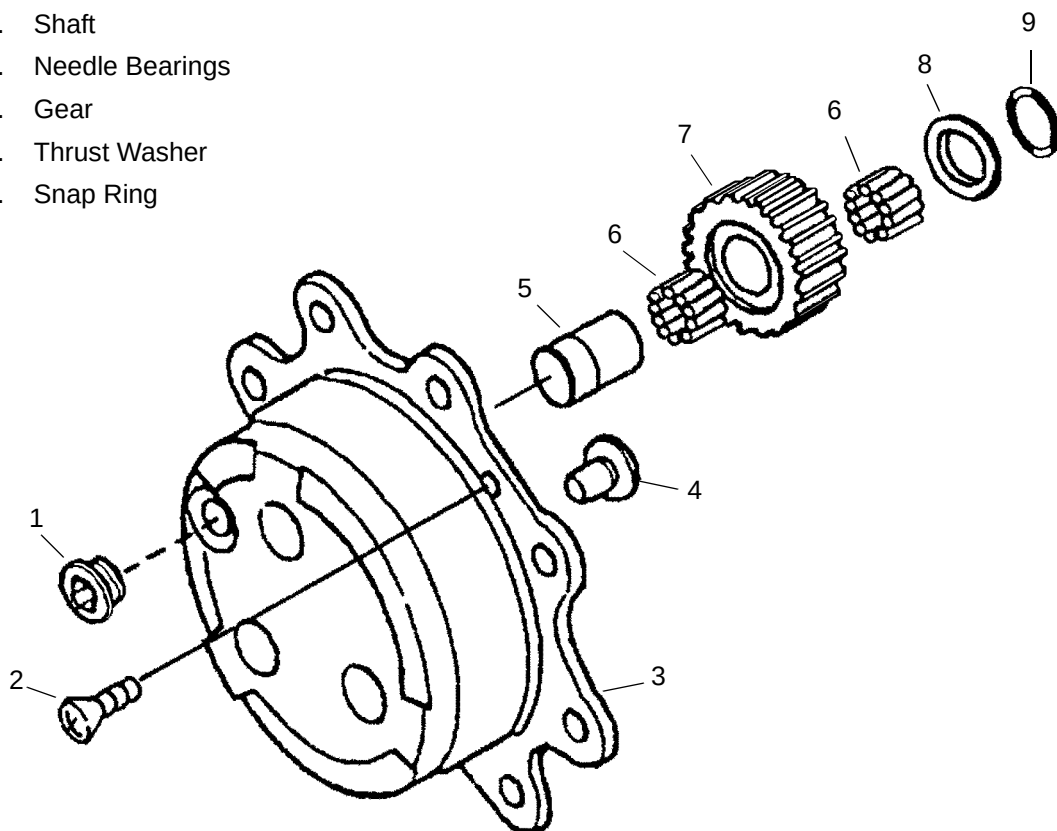

b-19863

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Planetary Carrier Disassembly

IMPORTANT

When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.


I-2003-0888

Figure 40-21-1

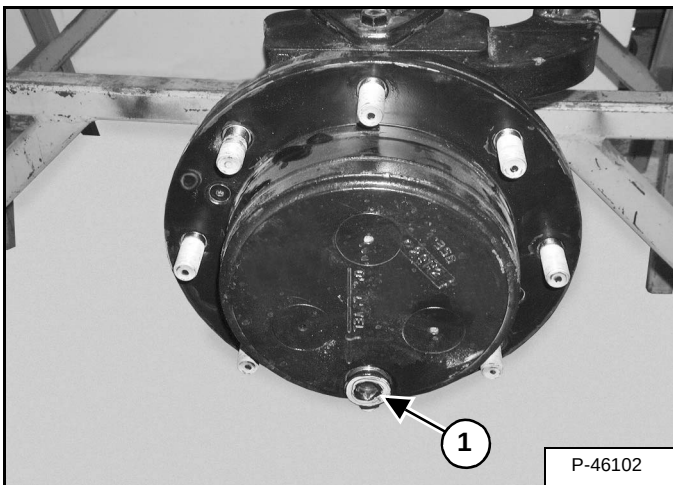


With the drain plug (Item 1) [Figure 40-21-1] in the position shown, place a drain pan under the hub, remove the plug and drain the oil from the planetary carrier. Dispose of the oil in an environmentally safe manner. (Both sides)

Figure 40-21-2

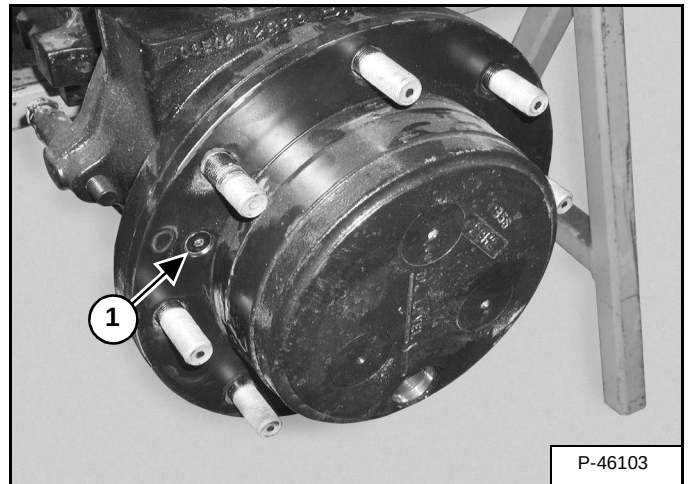

Remove the two screws (Item 1) [Figure 40-21-2] from the planetary carrier. (Both sides)

Figure 40-21-3

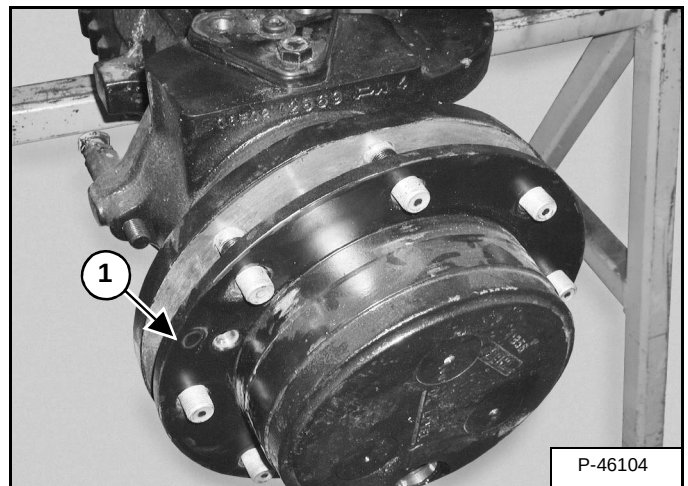


Remove the planetary carrier (Item 1) [Figure 40-21-3] from the axle. (Both sides)

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Planetary Carrier Disassembly (Cont'd)

Figure 40-21-4

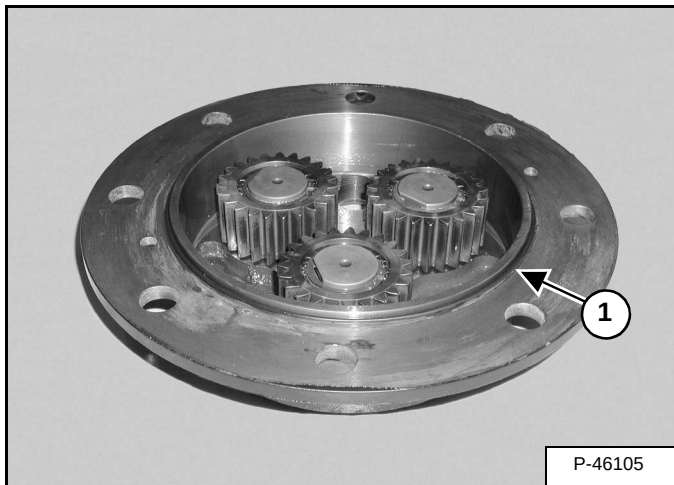


Remove and discard the O-ring (Item 1) [Figure 40-21-4] from the planetary carriers.

Figure 40-21-5

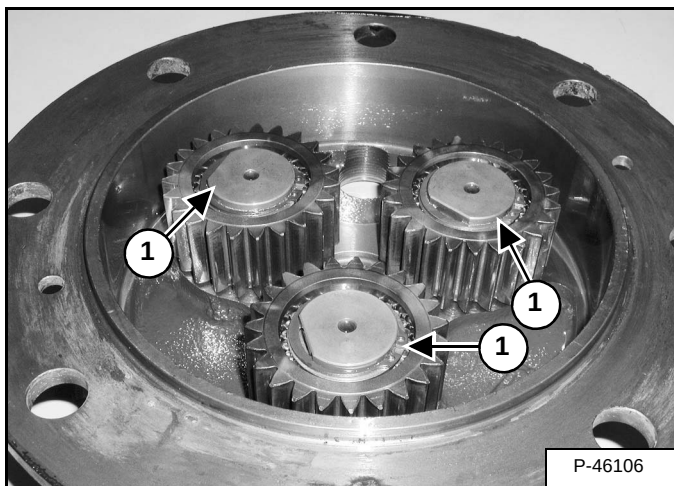


Remove the three snap rings (Item 1) [Figure 40-21-5].

Figure 40-21-6

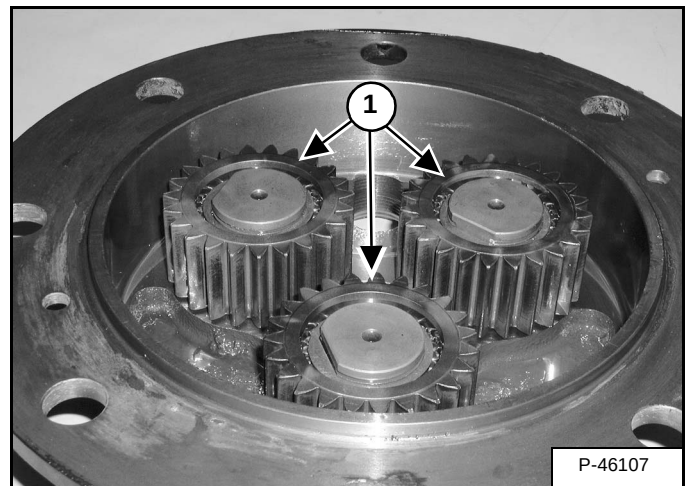

Remove the thrust washers (Item 1) [Figure 40-21-6].

Figure 40-21-7

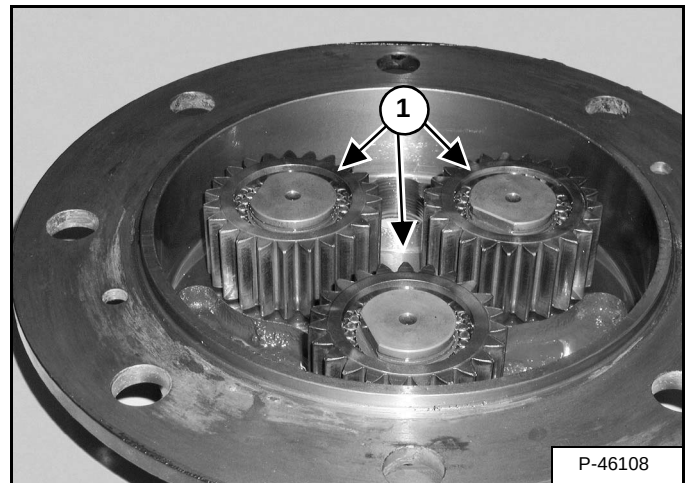


Remove the three gears (Item 1) [Figure 40-21-7] with needle bearings from each gear shaft.

NOTE: Mark the gear location for correct assembly.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Planetary Carrier Inspection


Figure 40-21-8

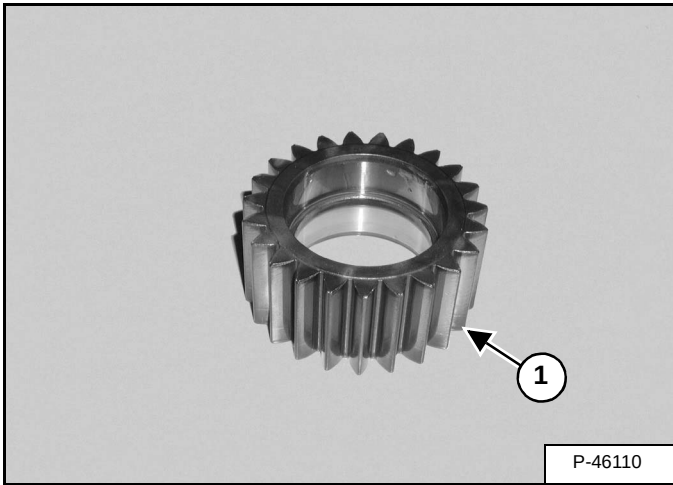

Inspect the planetary gears (Item 1) [Figure 40-21-8] for worn or cracked teeth.

If any of the planetary gears are damaged, replace all the planetary gears and drive axle end of the drive axle assembly. One damaged gear can cause a microscopic fatigue crack in mating teeth and cause premature failure after servicing.

Figure 40-21-9

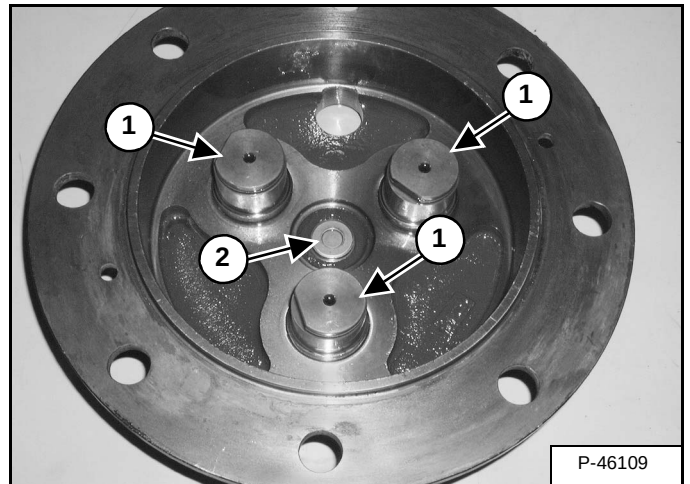


If any of the bearing shafts (Item 1) [Figure 40-21-9] are damaged, replace all bearing shafts.

If the thrust pin (Item 2) [Figure 40-21-9] is worn, replace the entire planetary carrier.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Wheel Hub Parts Identification

1. Ring Gear
2. Snap Ring
3. Thrust Washer
4. Spacer
5. Bushing
6. Bolt
7. Gear
8. Retainer Ring
9. O-Ring
10. Bearing (outer)
11. Hub
12. Bearing (inner)
13. Seal

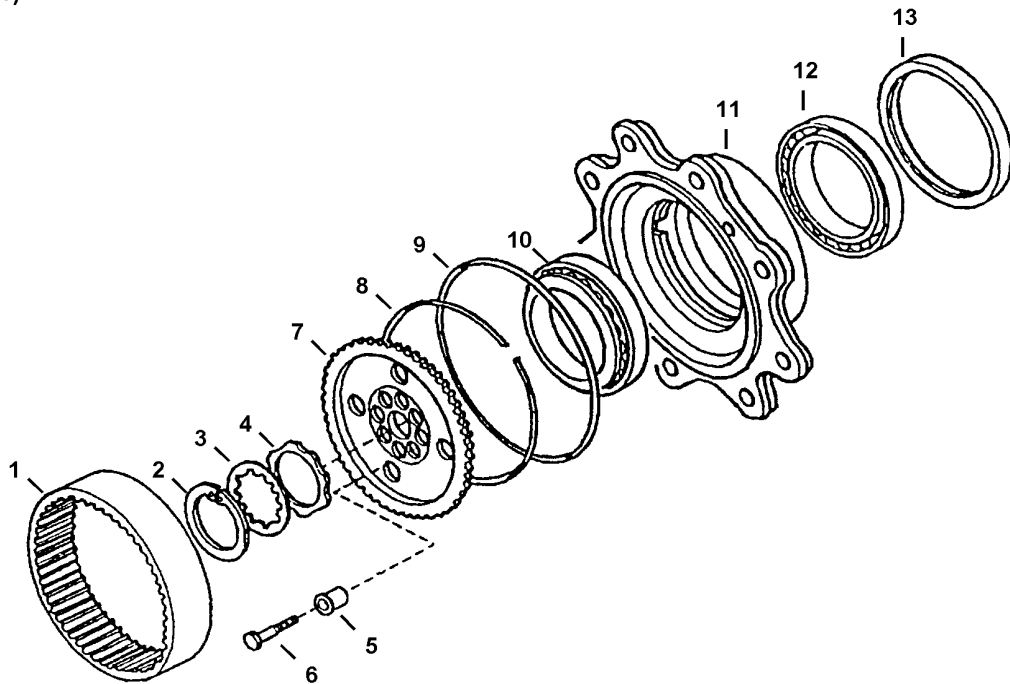


B-16011

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Wheel Hub Disassembly

Figure 40-21-10

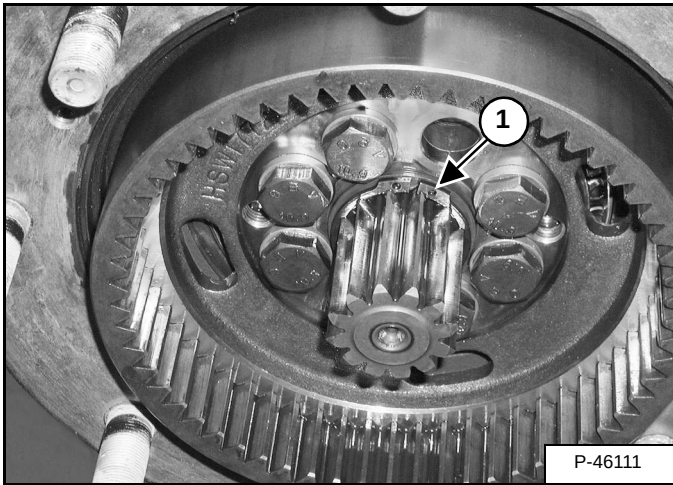


Remove the snap ring (Item 1) [Figure 40-21-10]. (Both sides)

Figure 40-21-11

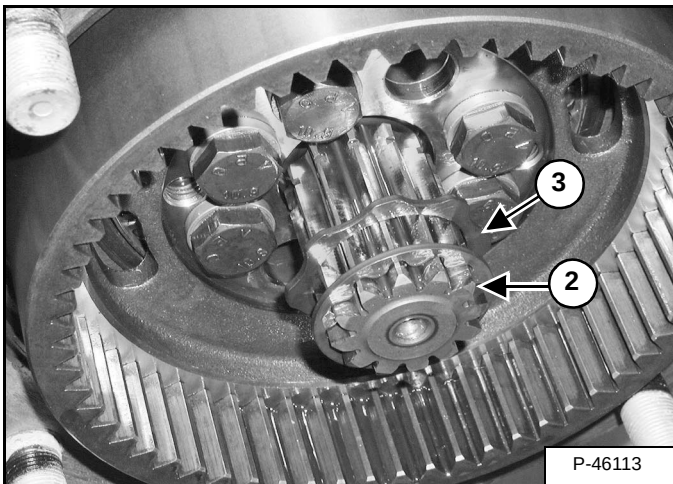


Remove the thrust washer (Item 1) and spacer (Item 2) [Figure 40-21-11]. (Both sides)

Figure 40-21-12

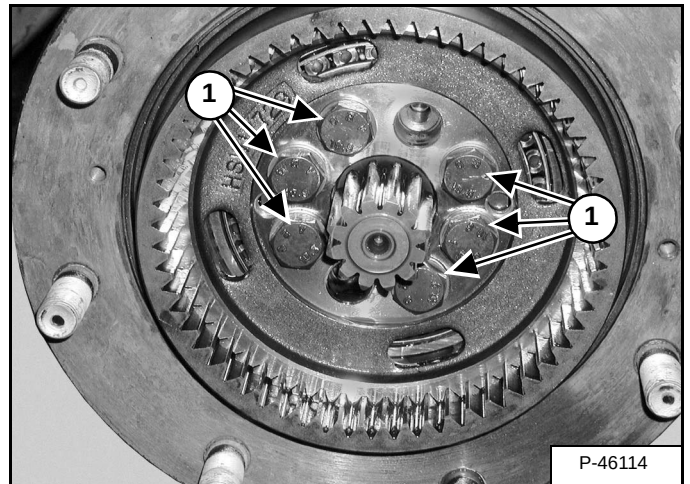

Remove the six ring gear mounting bolts (Item 1) [Figure 40-21-12]. (Both sides)

Figure 40-21-13

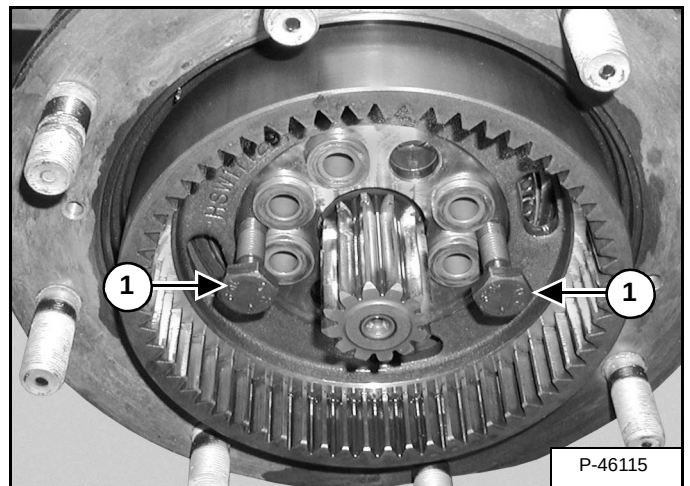


Install two bolts (Item 1) into the ring gear as shown, and tighten equally pushing the ring gear assembly (Item 2) [Figure 40-21-13] from the shaft. (Both sides)

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Wheel Hub Disassembly (Cont'd)

Figure 40-21-14

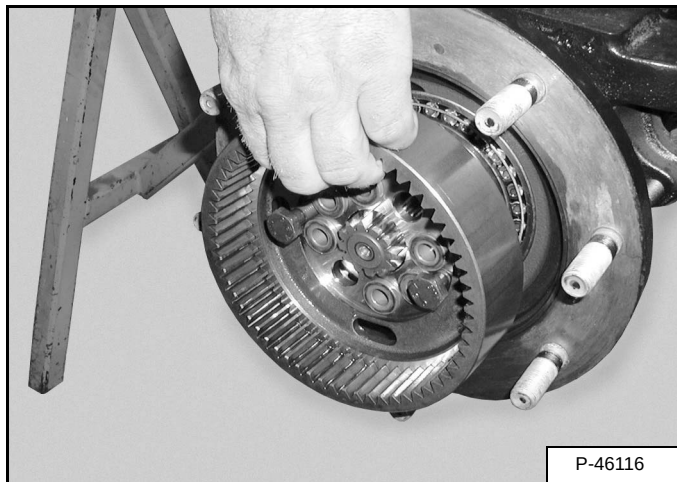

Remove the ring gear assembly [Figure 40-21-14]. (Both sides)


Figure 40-21-15

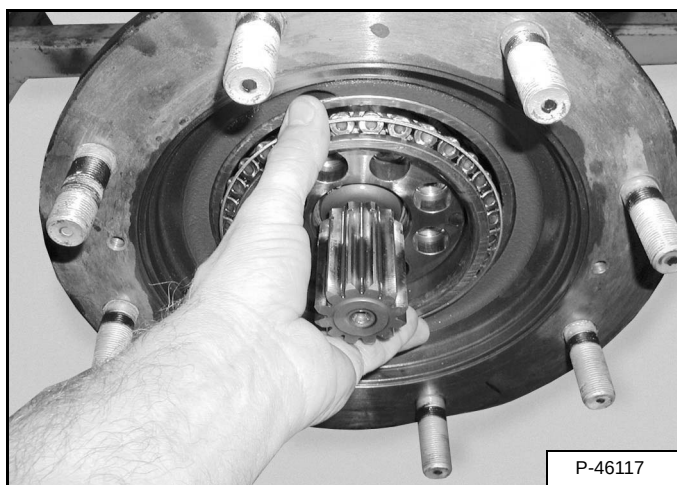

Remove the outer bearing and hub assembly from the axle [Figure 40-21-15]. (Both sides)

NOTE: Use care while removing, as assembly may remove easy.

Figure 40-21-16

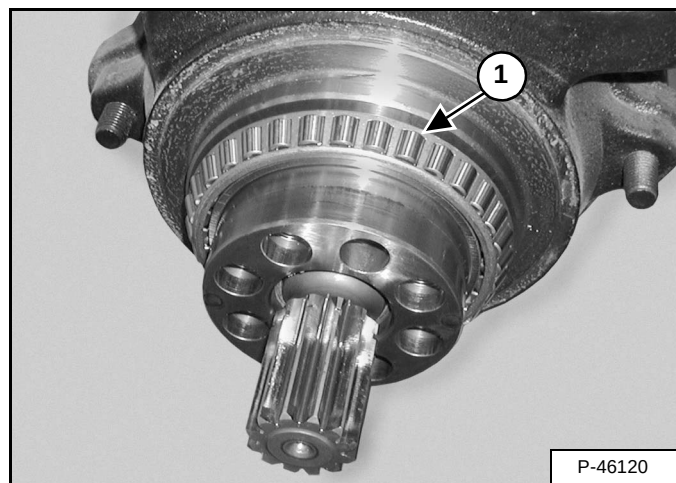

Remove the inner bearing (Item 1) [Figure 40-21-16] from the swivel housing. (Both sides)

Figure 40-21-17




Remove the retainer ring (Item 1) [Figure 40-21-17] from the ring gear assembly.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Wheel Hub Disassembly (Cont'd)

Figure 40-21-18

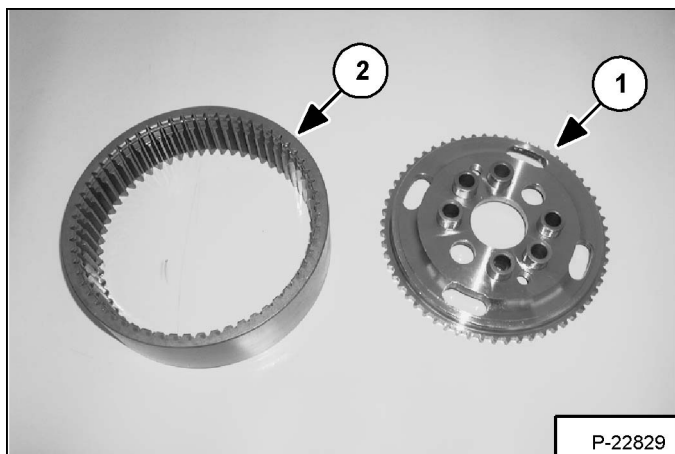


Remove the gear (Item 1) from the ring gear (Item 2) [Figure 40-21-18].

Figure 40-21-19

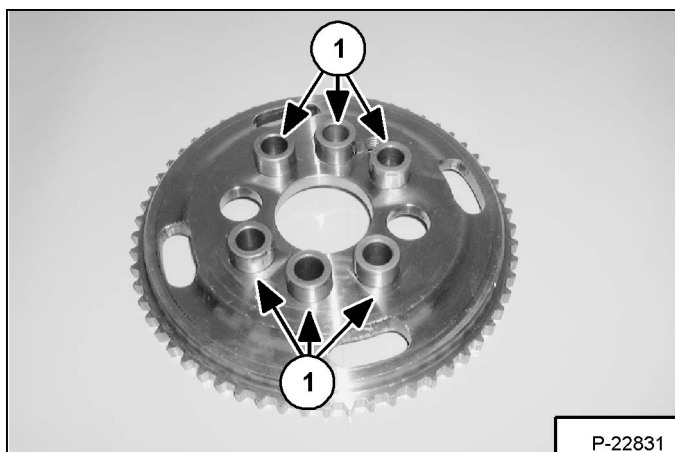


Remove the six bushings (Item 1) [Figure 40-21-19] from the gear if damaged or worn.

Figure 40-21-20

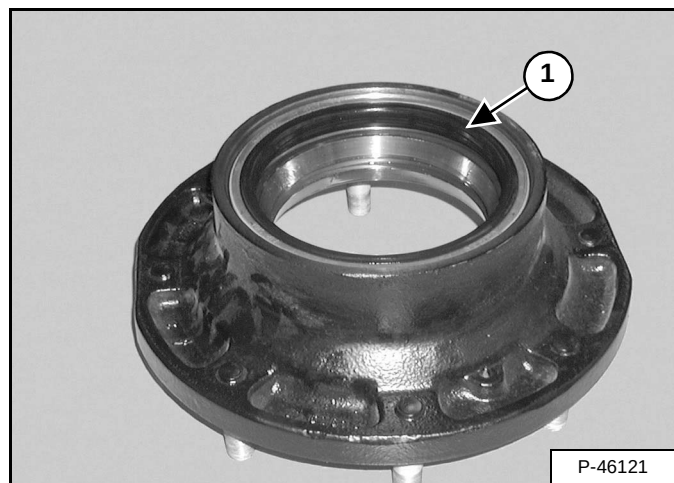

Remove the seal (Item 1) [Figure 40-21-20] from the hub.

Figure 40-21-21

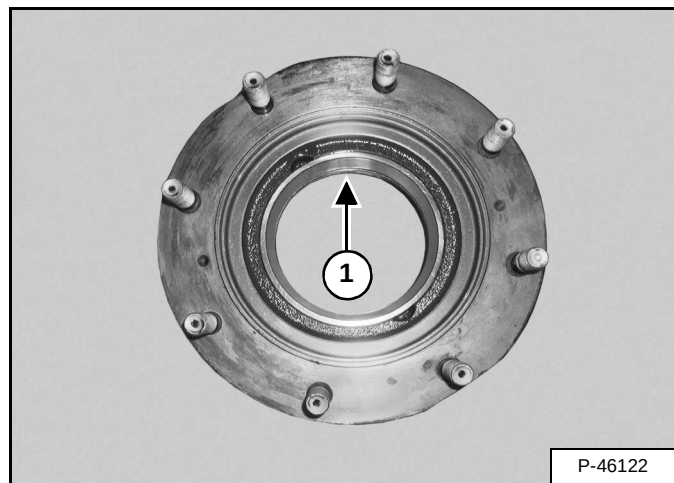


Using a brass drift remove both bearing races (Item 1) [Figure 40-21-21] from the hub.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Wheel Hub Inspection

Figure 40-21-22

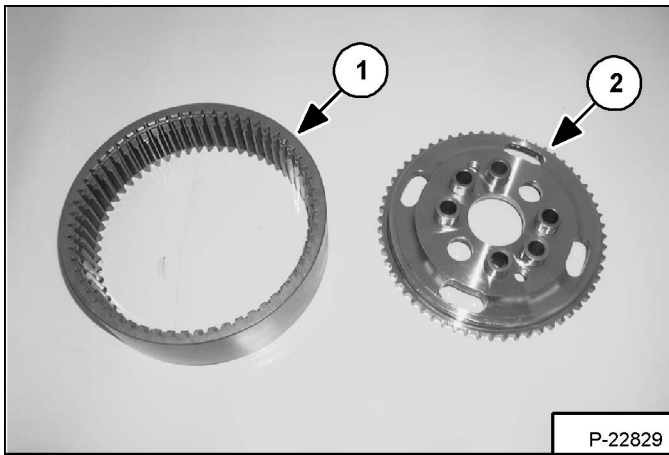


Inspect the ring gear (Item 1) and inner gear (Item 2) [Figure 40-21-22] for broken or damaged teeth.

If the ring gear or innergear are damaged, replace both parts.

Steering Knuckle Parts Identification

1. Bolt
2. Grease Fitting
3. Knuckle Housing
4. King Pin (upper)
5. King Pin (lower)
6. Bushing
7. Washer
8. Spacer Washer
9. Housing
10. Vent

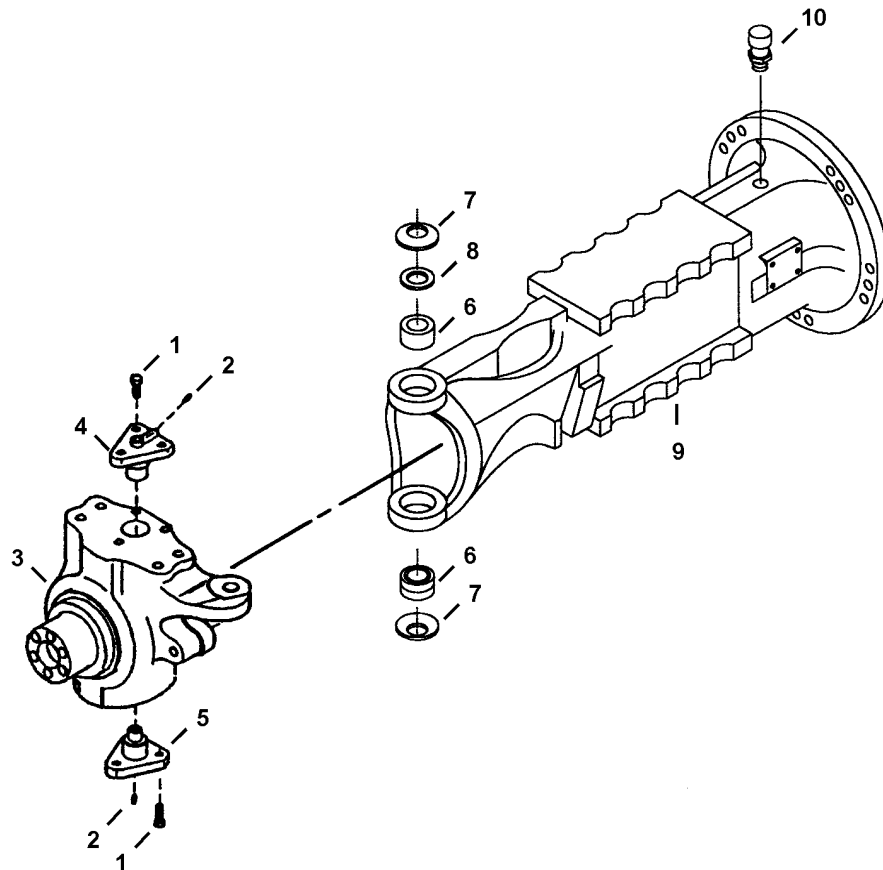


B-16010

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Steering Knuckle Disassembly

Figure 40-21-23

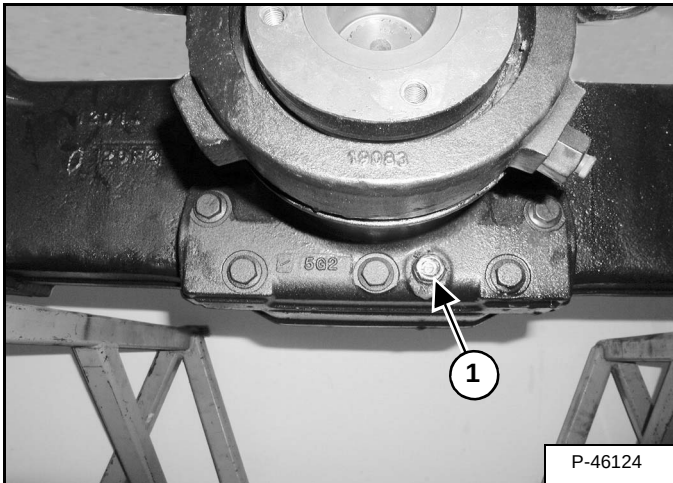


Remove the drain plug (Item 1) [Figure 40-21-23]. Drain the fluid into a pan.

Figure 40-21-24

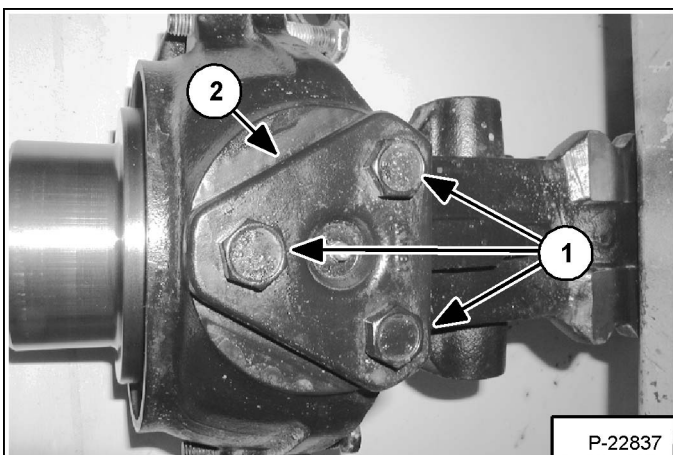


Remove the three bolts (Item 1) and king pin (Item 2) [Figure 40-21-24] from the bottom of the knuckle. (Both sides)

Figure 40-21-25

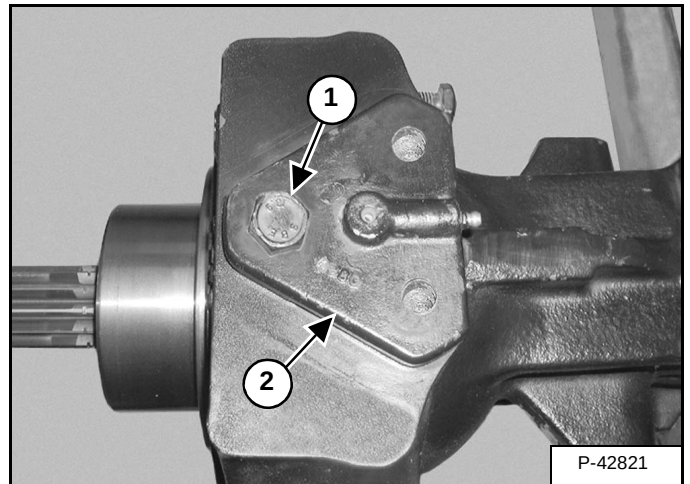

Remove the bolt (Item 1) and king pin (Item 2) [Figure 40-21-25] from the top of the knuckle. (Both sides)

Figure 40-21-26

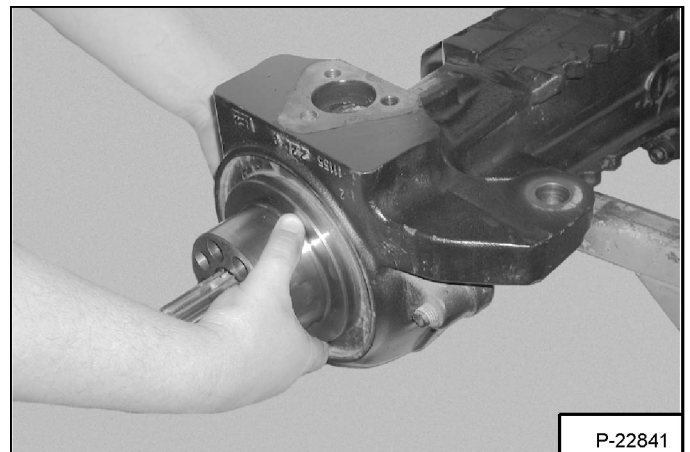


Lift and remove the knuckle assembly from the axle [Figure 40-21-26]. (Both sides)

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Steering Knuckle Disassembly (Cont'd)


Figure 40-21-27

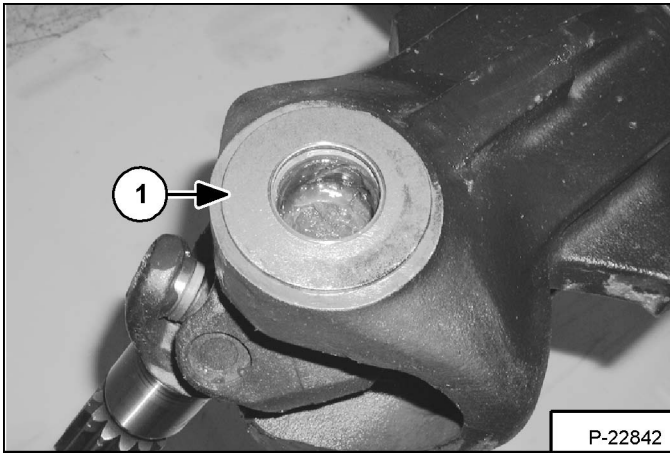

Remove the Belleville washers (Item 1) [Figure 40-21-27] from the top and bottom of the axle. (Both sides)

NOTE: The bottom Belleville washer is smaller than the top Belleville washer.

Figure 40-21-28

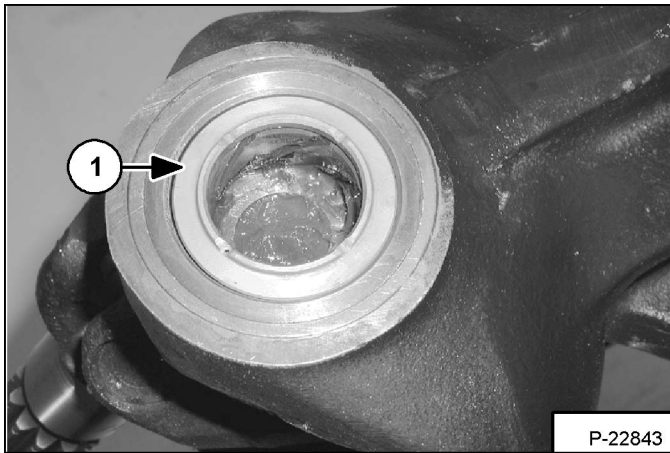

Remove the spacer washer (Item 1) [Figure 40-21-28] from the top of the axle. (Both sides)

Figure 40-21-29



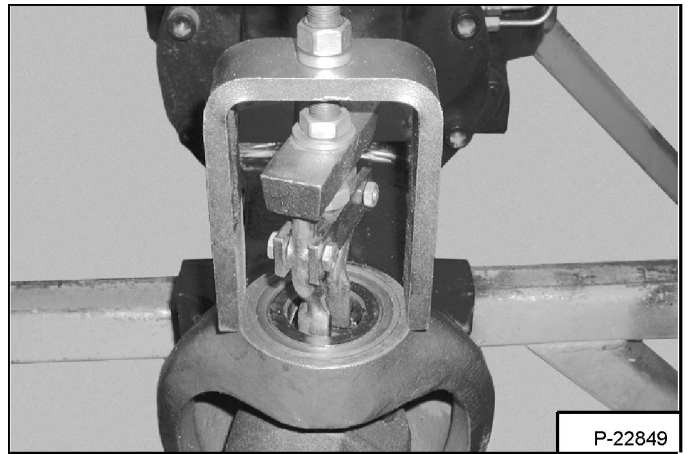


Figure 40-21-30

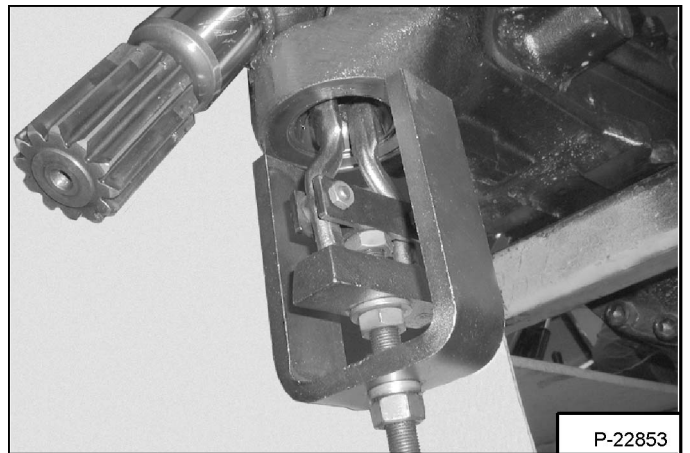

Using a puller, remove the top and bottom bushings from the axle [Figure 40-21-29] & [Figure 40-21-30]. (Both sides)

Figure 40-21-31

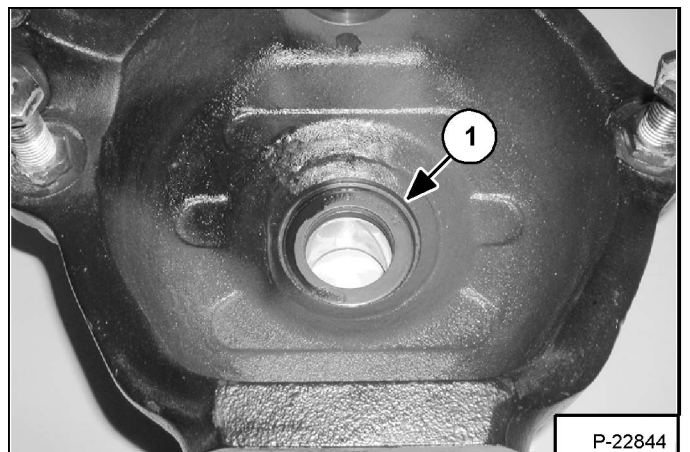


Remove the seal (Item 1) [Figure 40-21-31] from the knuckle assembly. (Both sides)

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Steering Knuckle Disassembly (Cont'd)


Figure 40-21-32

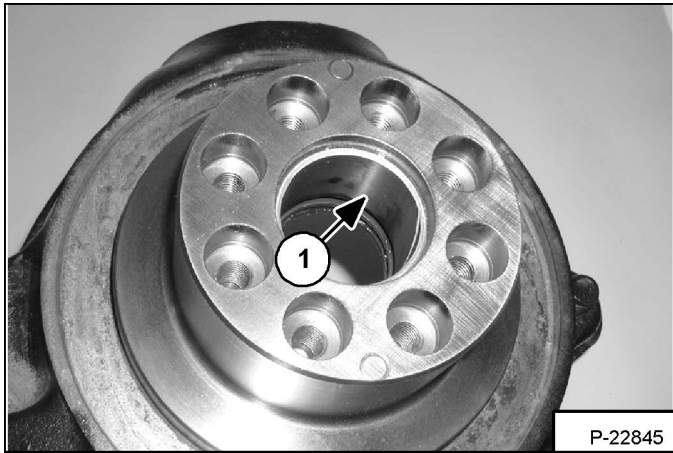

Remove the bushing (Item 1) [Figure 40-21-32] from the knuckle assembly. (Both sides)


Axle Housing/Drive Axle Parts Identification

1. Drive Shaft (outer)
2. Bearing
3. Snap Ring
4. Yoke
5. Drive Shaft (inner)
6. Seal
7. Bushing
8. Axle Housing

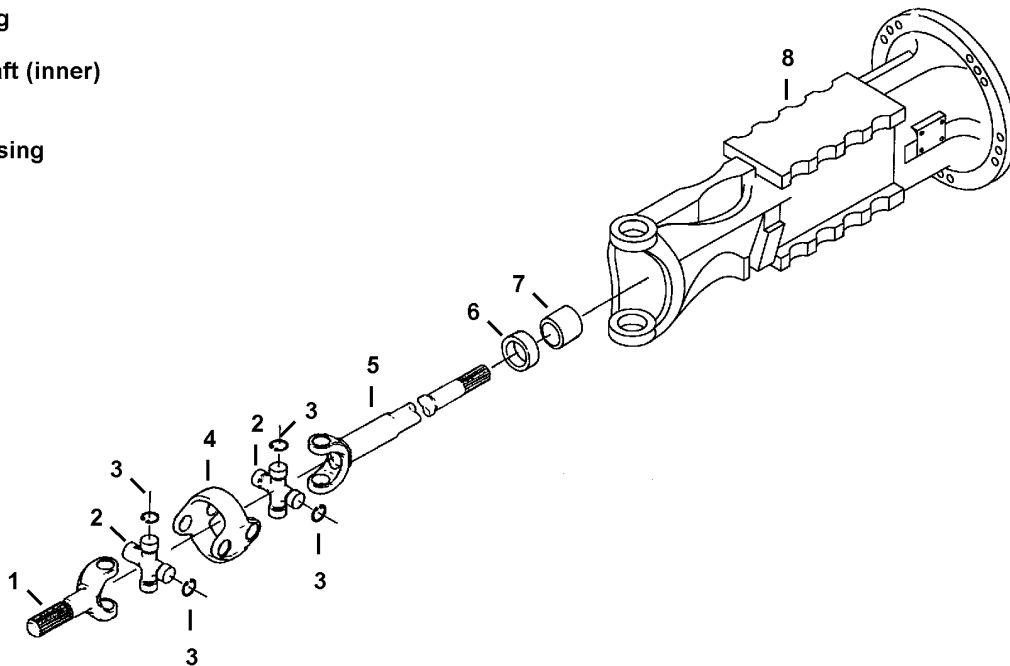

B-16007

Figure 40-21-33

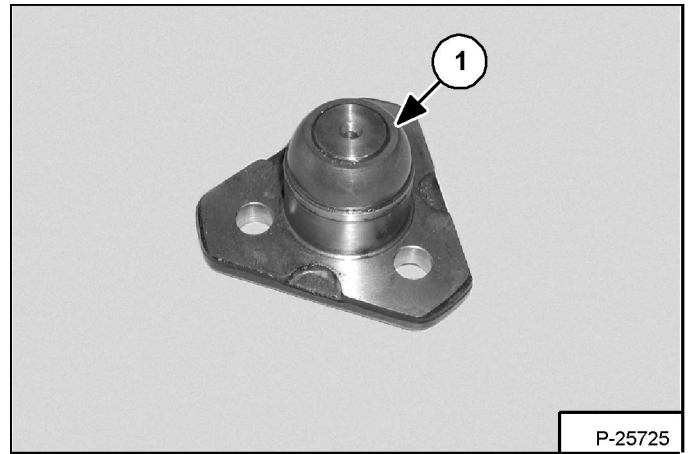


Remove the ball type bearing (Item 1) [Figure 40-21-33] from the lower king pins.

NOTE: Removal procedure will destroy the ball bearing.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Axle Housing/Drive Axle Disassembly

Figure 40-21-34

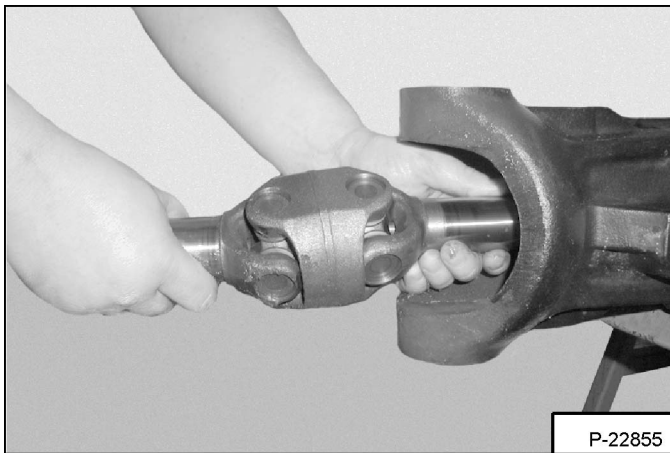


Remove the drive axle from the axle housing [Figure 40-21-34]. (Both sides)

Figure 40-21-35

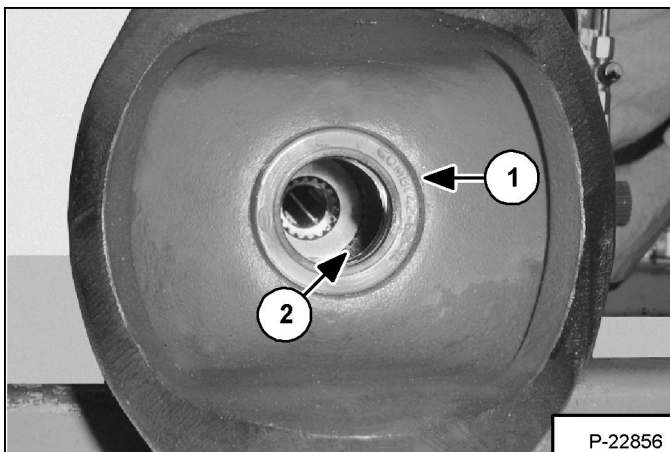


Remove the seal (Item 1) and bushing (Item 2) [Figure 40-21-35] from the axle end housing. (Both sides)

Figure 40-21-36

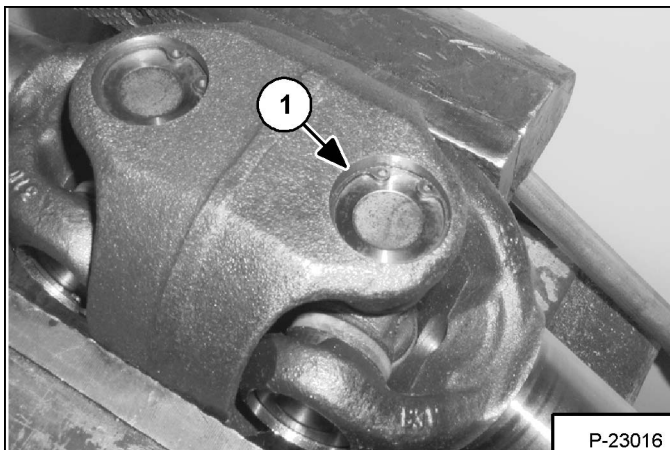

Remove the two snap rings (Item 1) [Figure 40-21-36] across from each other.

Figure 40-21-37

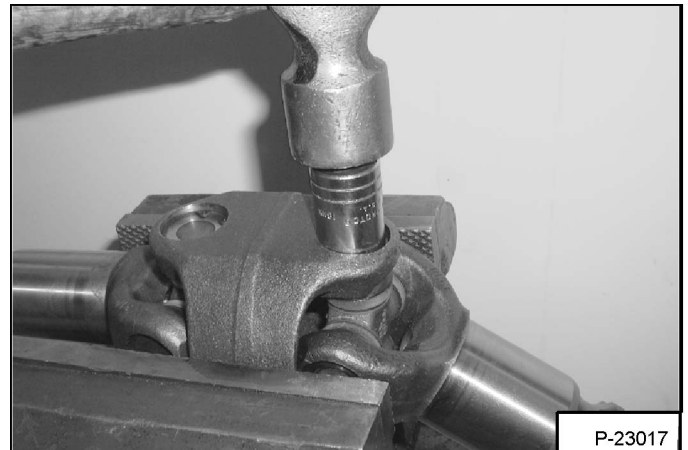


Drive the upper bearing cup down to push the opposite bearing cup partially through the yoke [Figure 40-21-37].

NOTE: The bottom bearing cup will not be completely removed.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Axle Housing/Drive Axle Disassembly (Cont'd)

Figure 40-21-38

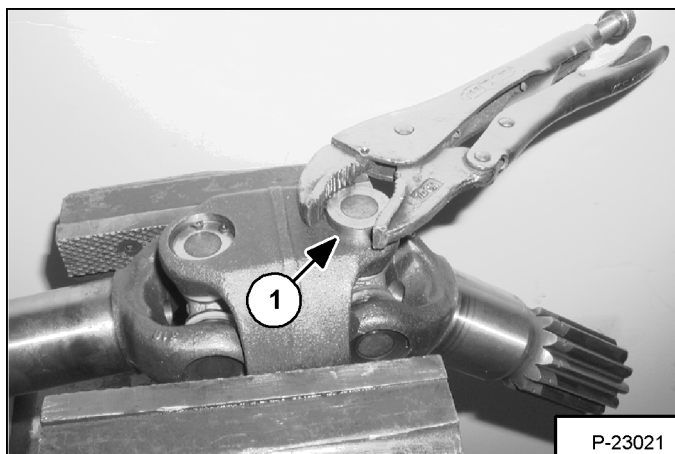

Turn the shaft over and remove the bearing cup (Item 1) [Figure 40-21-38].


Figure 40-21-39

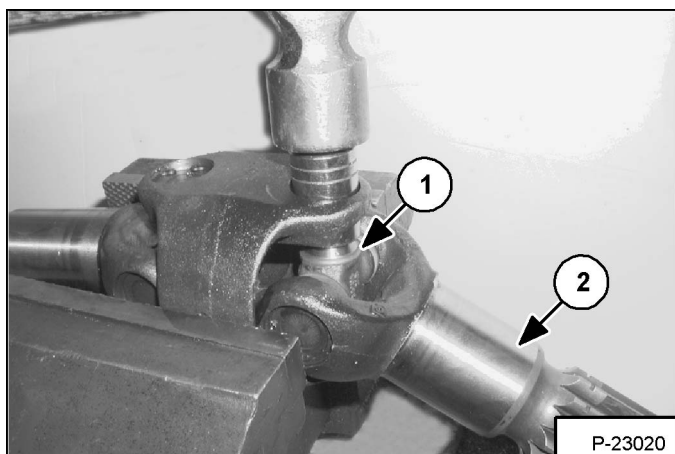

Drive the cross (Item 1) [Figure 40-21-39] down to push the opposite bearing cup through the yoke.


NOTE: Drive shaft end (Item 2) [Figure 40-21-39] may fall out of the yoke.

Figure 40-21-40

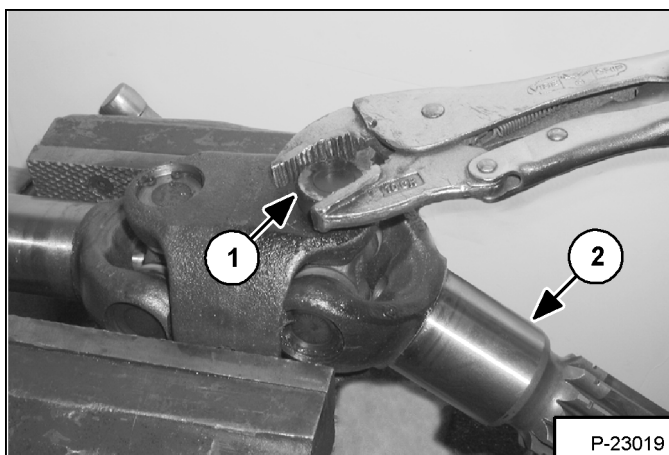

Turn the shaft over and remove the bearing cup (Item 1). Remove the drive shaft (Item 2) [Figure 40-21-40] from the yoke.

Figure 40-21-41

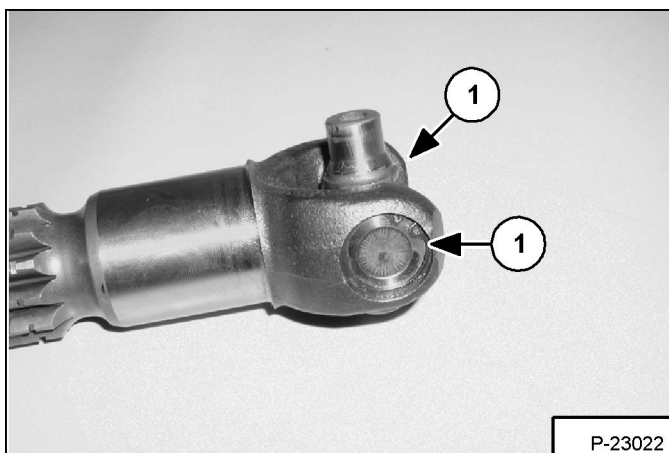


Remove the two snap rings (Item 1) [Figure 40-21-41] from the yoke.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Axle Housing/Drive Axle Disassembly (Cont'd)

Figure 40-21-42

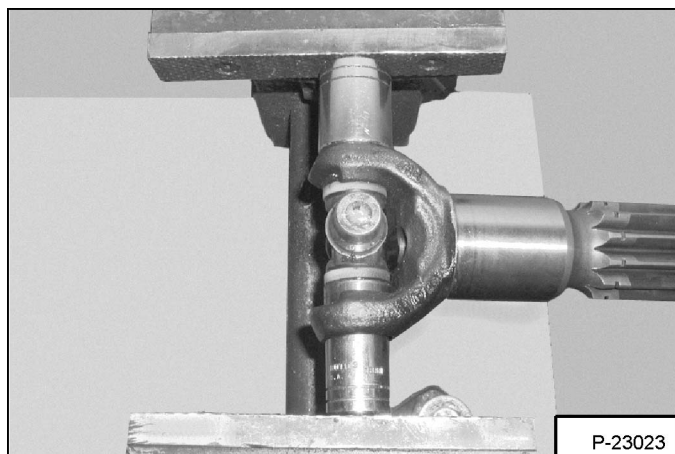


Using two different size sockets and a vice, press one bearing cup into the yoke while pushing the opposite bearing cup through the yoke [Figure 40-21-42].

Figure 40-21-43

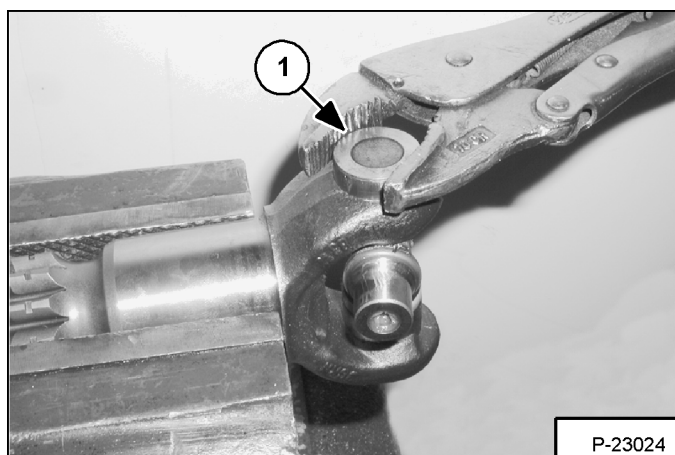


Remove the bearing cup (Item 1) [Figure 40-21-43].

Figure 40-21-44

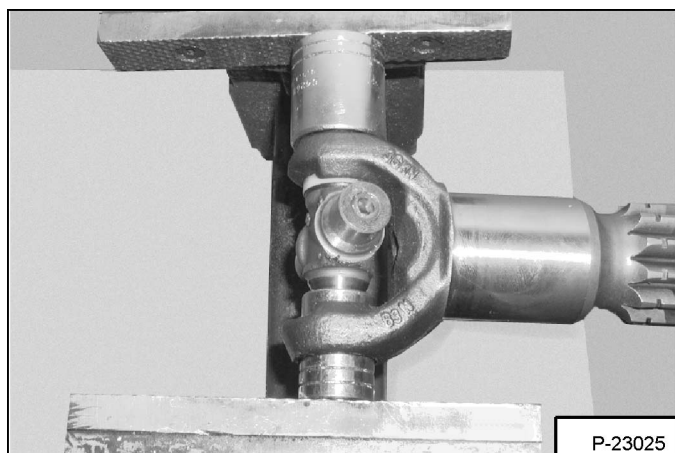

Press the second bearing cup through the yoke [Figure 40-21-44].

Figure 40-21-45

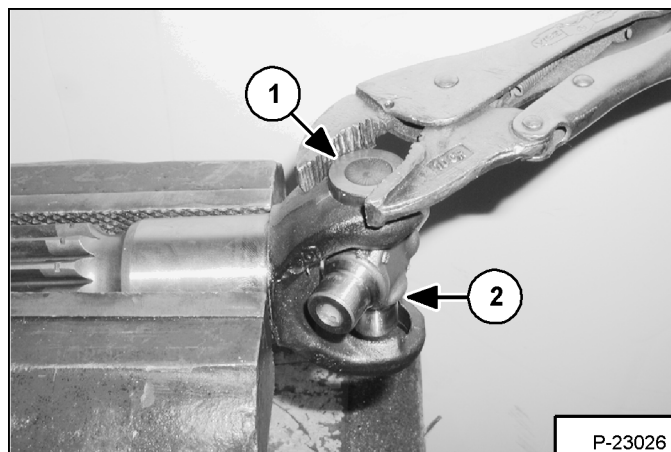


Remove the bearing cup (Item 1) and cross (Item 2) [Figure 40-21-45] from the yoke.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Differential Parts Identification


1. Bearing
2. Housing
3. Friction Disk
4. Spacer
5. Washer
6. Gear
7. Gear (Pinion)
8. Spindle
9. Ring Gear
10. Bolt

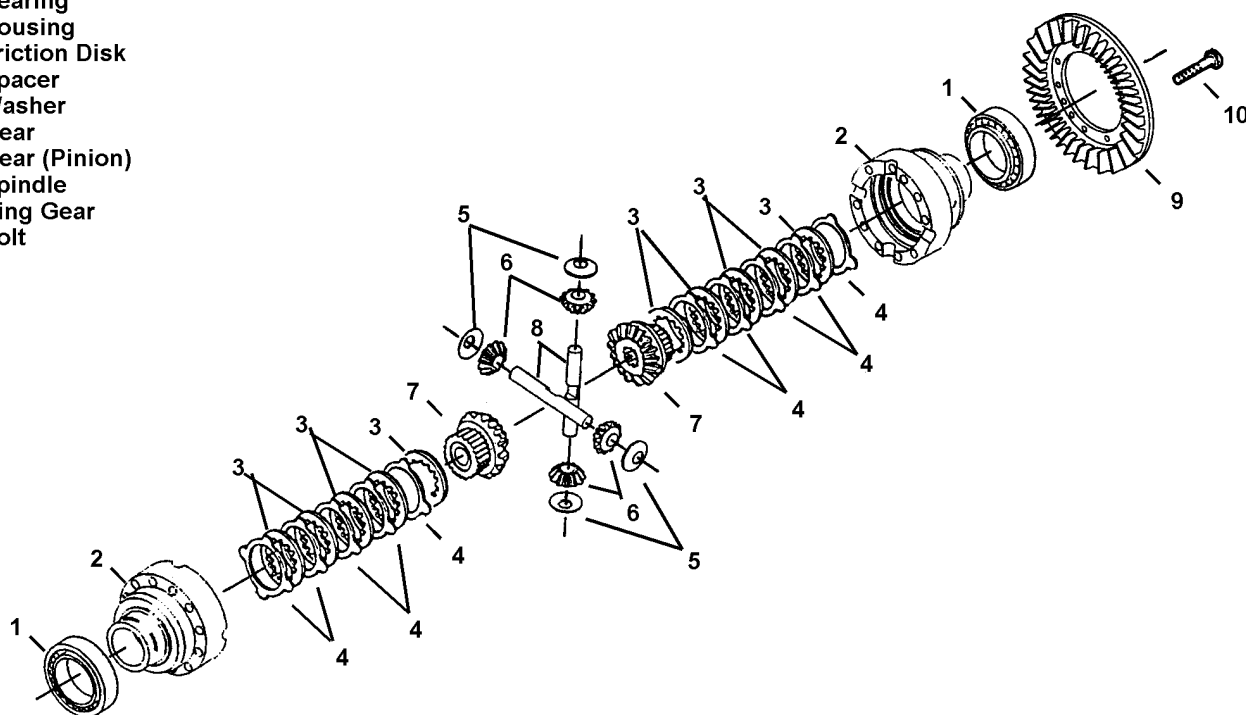

B-16008


Differential Disassembly

Figure 40-21-46

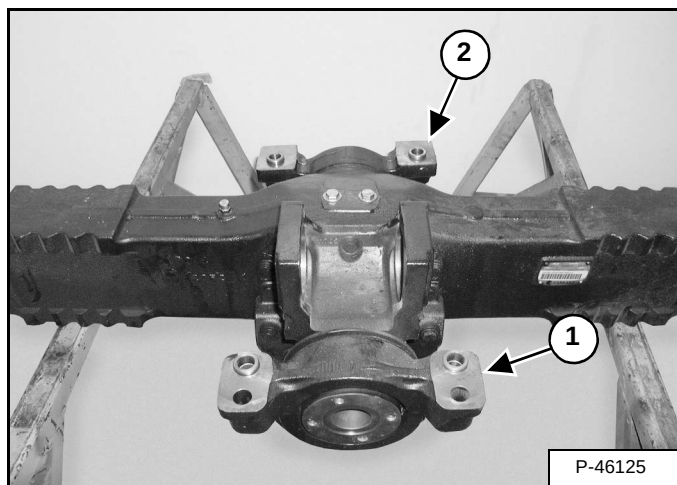

Remove the front (Item 1) and rear (Item 2) [Figure 40-21-46] mount brackets.

Figure 40-21-47

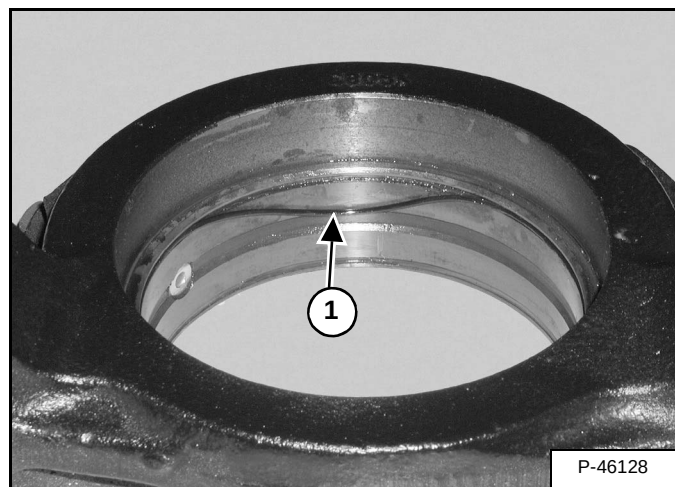


Remove the O-ring (Item 1) [Figure 40-21-47] from the front mount bracket.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Differential Disassembly (Cont'd)

Figure 40-21-48

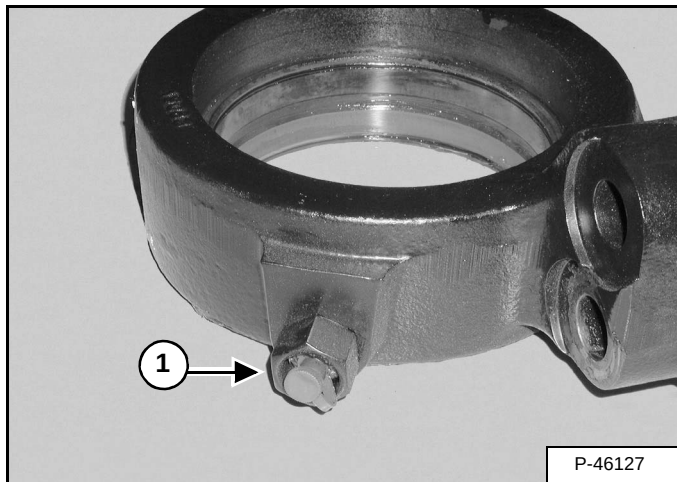


Loosen the retainer (Item 1) [Figure 40-21-48] on the front mount bracket.

Figure 40-21-49

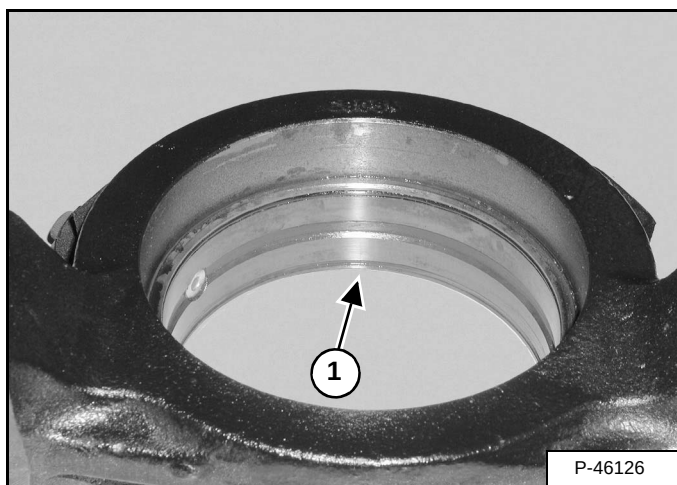


Remove the bushing (Item 1) [Figure 40-21-49] from the front mount bracket.

Figure 40-21-50

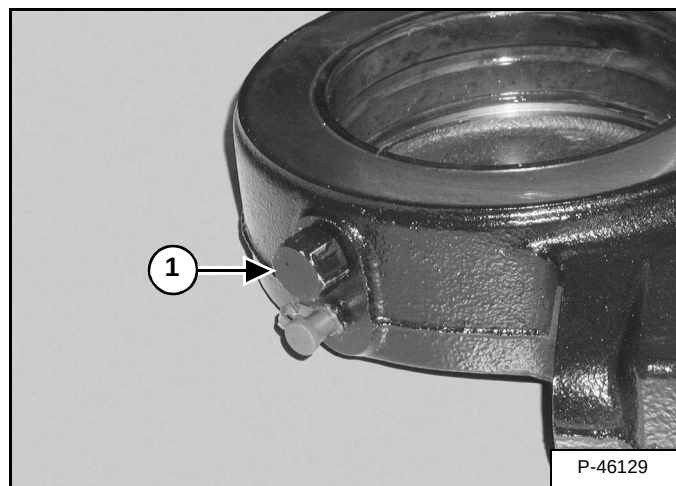

Loosen the retainer (Item 1) [Figure 40-21-50] on the rear mount bracket.

Figure 40-21-51

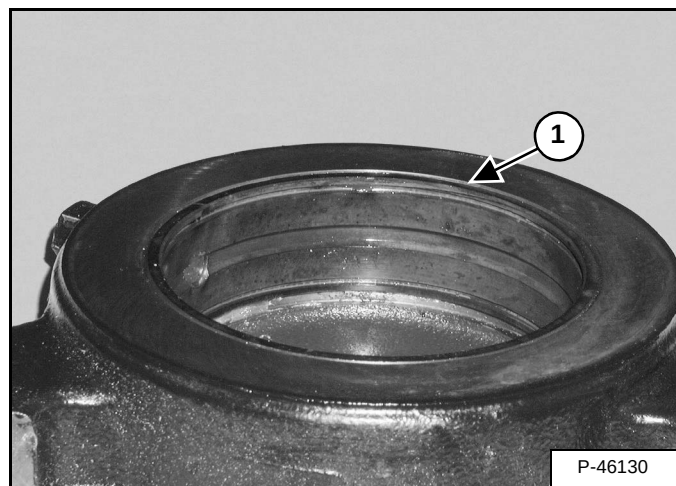


Remove the bushing (Item 1) [Figure 40-21-51] from the rear mount bracket.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Differential Disassembly (Cont'd)

Figure 40-21-52

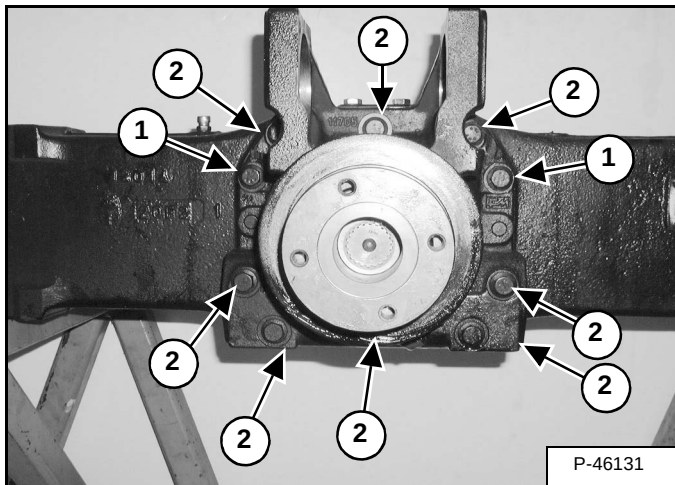


Remove the bolts (Item 1) & (Item 2) [Figure 40-21-52].

Figure 40-21-53

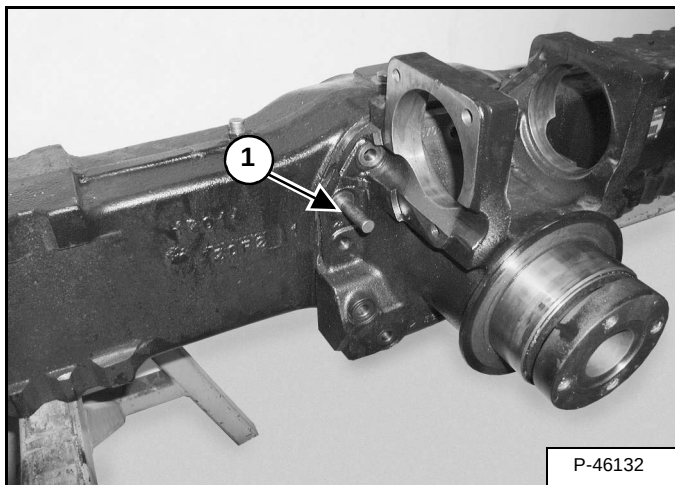


Install studs (Item 1) [Figure 40-21-53] in the bolt holes (Item 1) [Figure 40-21-52].

Figure 40-21-54

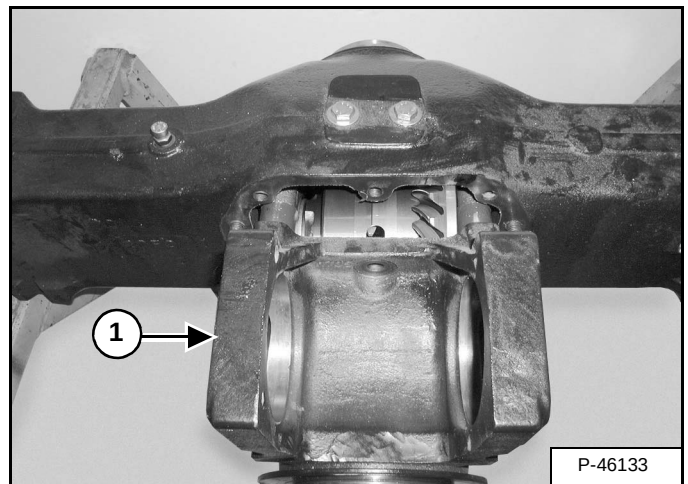

Remove the differential assembly (Item 1) [Figure 40-21-54].

Figure 40-21-55

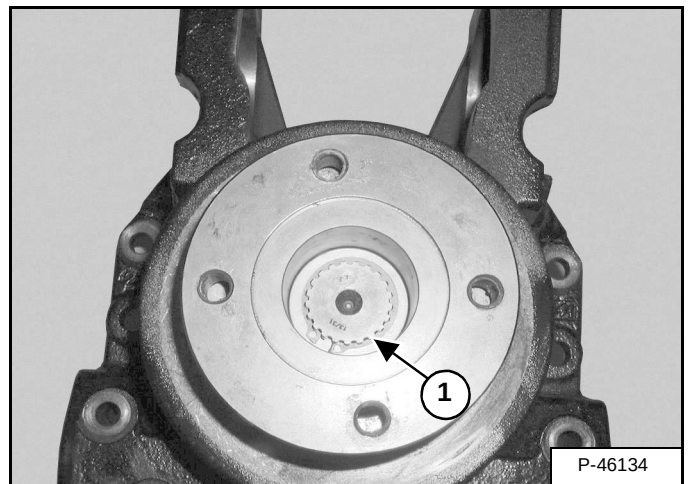


Remove the snap ring (Item 1) [Figure 40-21-55] from the drive coupler.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Differential Disassembly (Cont'd)

Figure 40-21-56

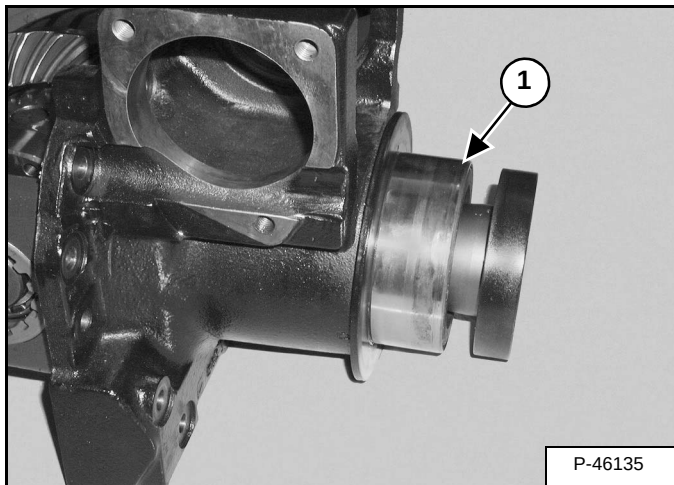


Remove the drive coupler (Item 1) [Figure 40-21-56].

Figure 40-21-57

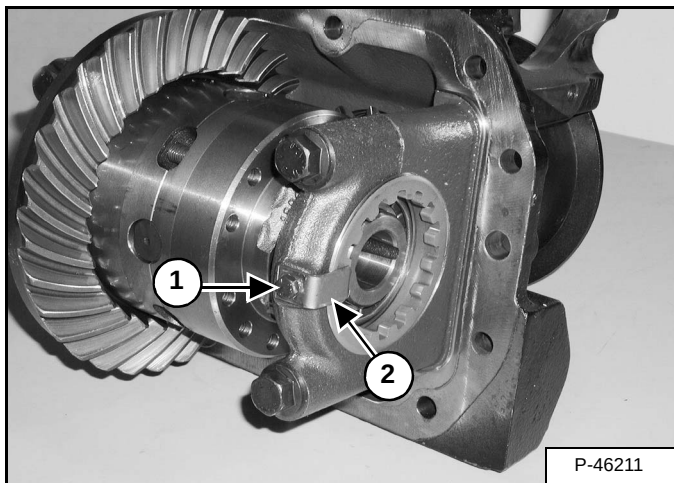


Remove the bolt (Item 1) and retainer (Item 2) [Figure 40-21-57]. (Both sides)

Figure 40-21-58

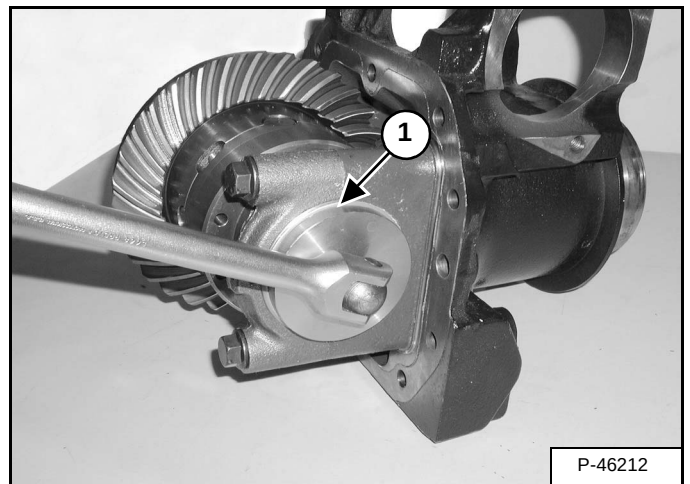

Remove the internal nut (Item 1) [Figure 40-21-58] from the housing by rotating counterclockwise using special tool CA119030. (Both sides)

Figure 40-21-59

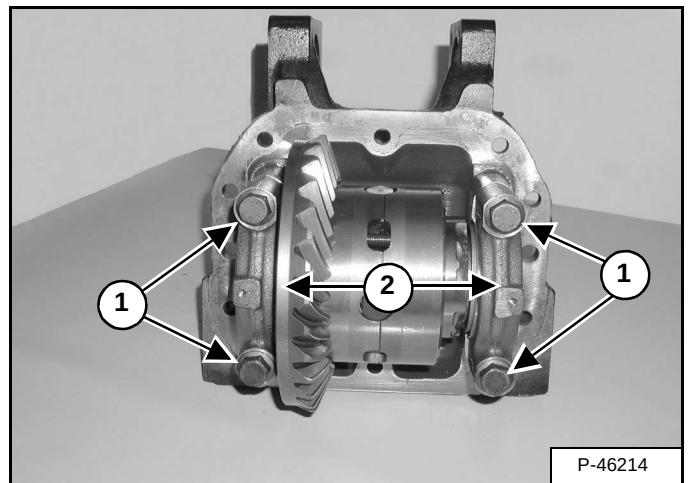


Remove the four bolts (Item 1) and remove the yokes (Item 2) [Figure 40-21-59].

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Mark the housing for correct assembly **[Figure 40-21-62]**.


Differential Disassembly (Cont'd)

Figure 40-21-60

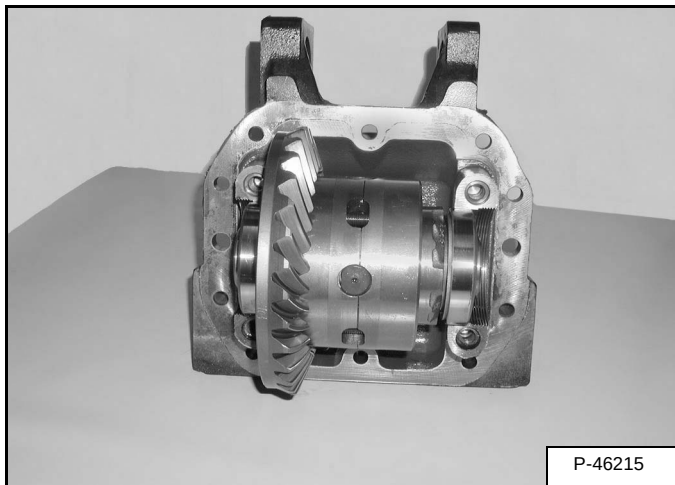

Remove the ring gear assembly **[Figure 40-21-60]**.

Figure 40-21-61

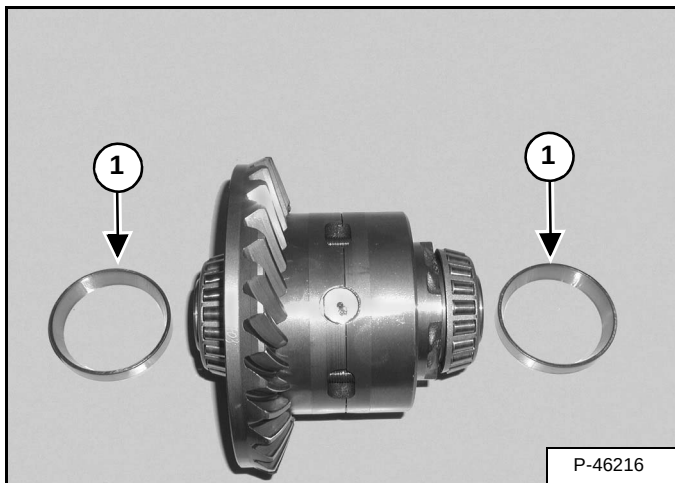

Remove the bearing races (Item 1) **[Figure 40-21-61]**.


Figure 40-21-62



AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Differential Disassembly (Cont'd)

Figure 40-21-63

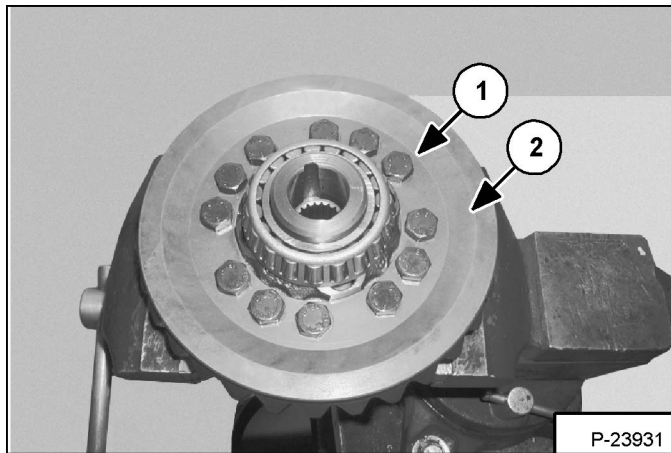


Support the differential assembly in a vise. Remove the twelve bolts (Item 1) and ring gear (Item 2) [Figure 40-21-63].

Figure 40-21-64

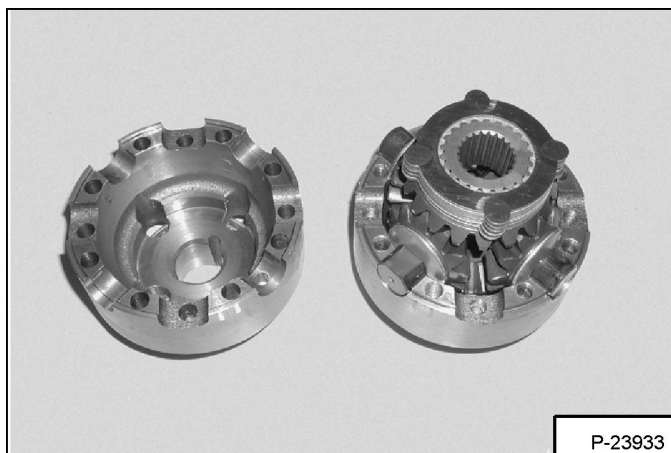


Separate the housings [Figure 40-21-64].

Figure 40-21-65

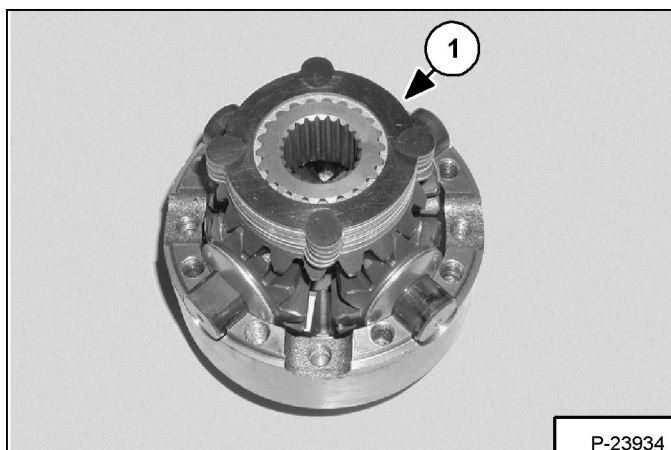

Remove the discs and spacers (Item 1) [Figure 40-21-65] from the pinion gear.

Figure 40-21-66

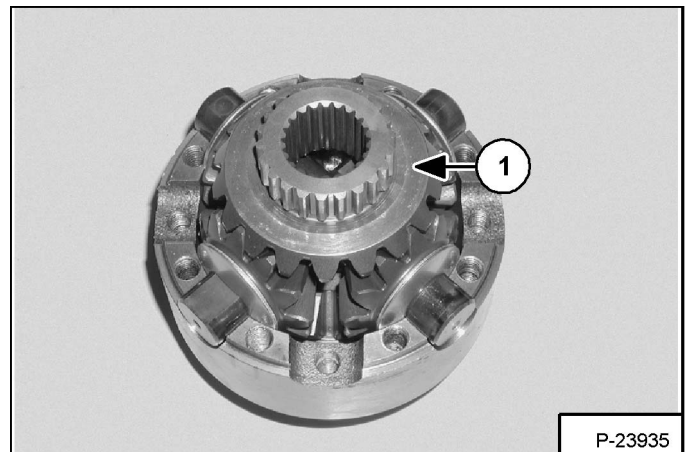


Remove the pinion gear (Item 1) [Figure 40-21-66].

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Remove the gear (Item 1) and cup washer (Item 2) from the spindle (Item 3) [Figure 40-21-69].


Differential Disassembly (Cont'd)

Figure 40-21-67

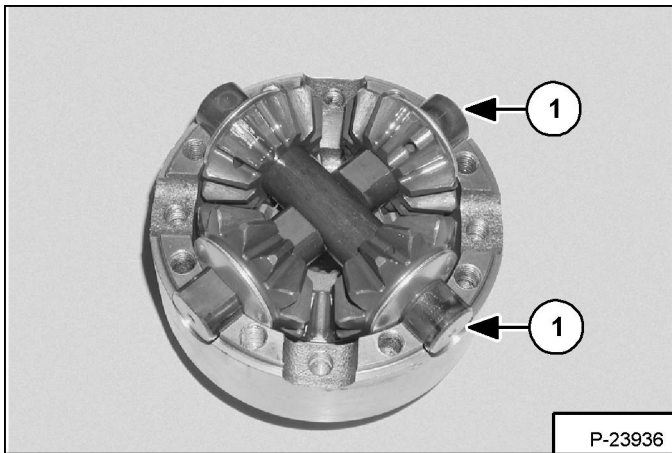


Remove the spindle/gear assemblies (Item 1) [Figure 40-21-67].

Figure 40-21-68

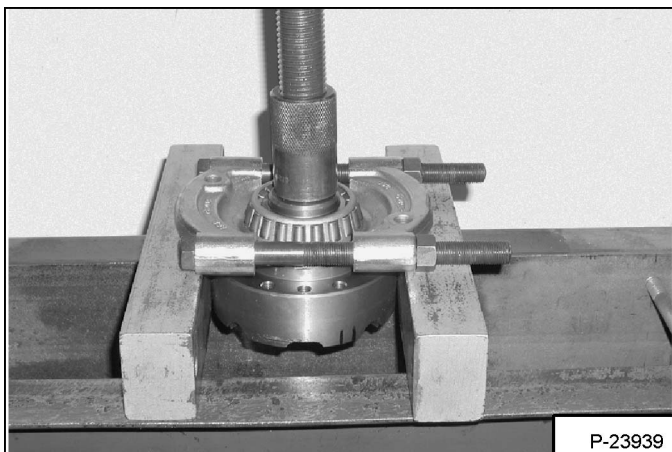

Remove the bearing from the housing [Figure 40-21-68].

Figure 40-21-69

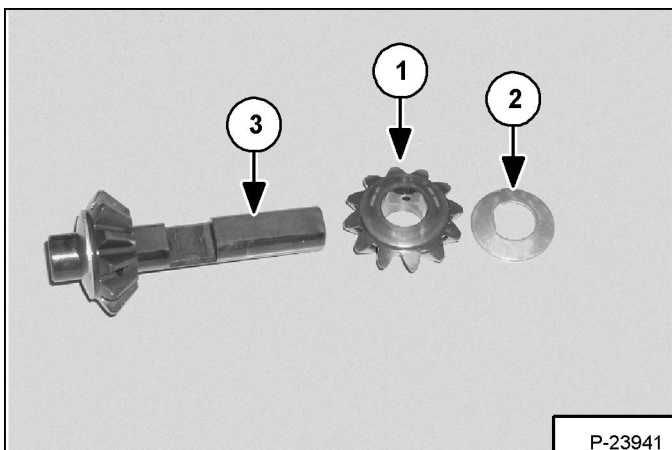

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Inspect the cup washers (Item 1) [Figure 40-21-72] for damage or wear. Replace as needed.

Differential Inspection

Figure 40-21-70


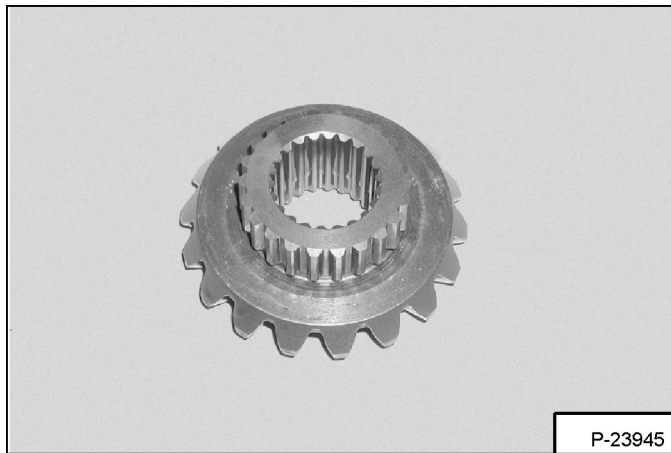



Figure 40-21-71

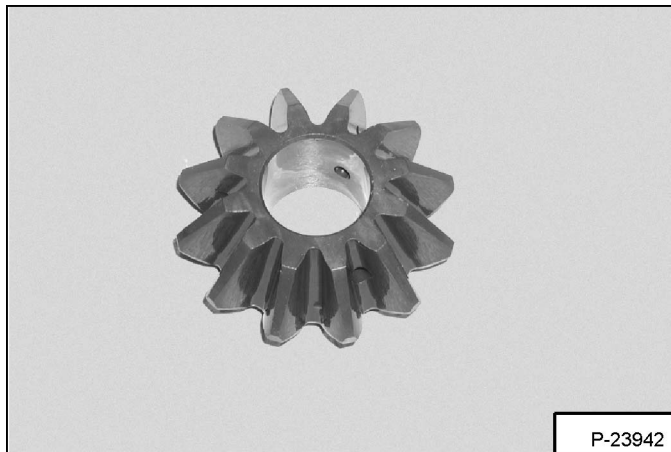

Inspect the pinion gear [Figure 40-21-70] & [Figure 40-21-71] for broken or damaged teeth.

If either gear is damaged, replace both gears.


Figure 40-21-72

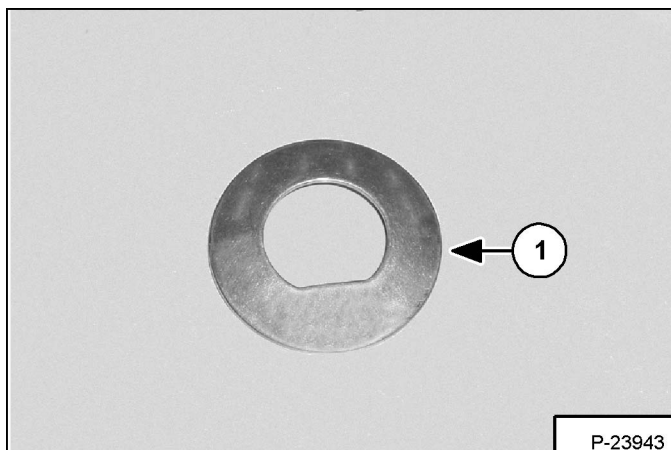

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Pinion Group Parts Identification

1. Housing
2. Pinion Shaft
3. Shim
4. Inner Bearing/Race
5. Washer
6. Spacer
7. Outer Bearing/Race
8. Lock Washer
9. Nut

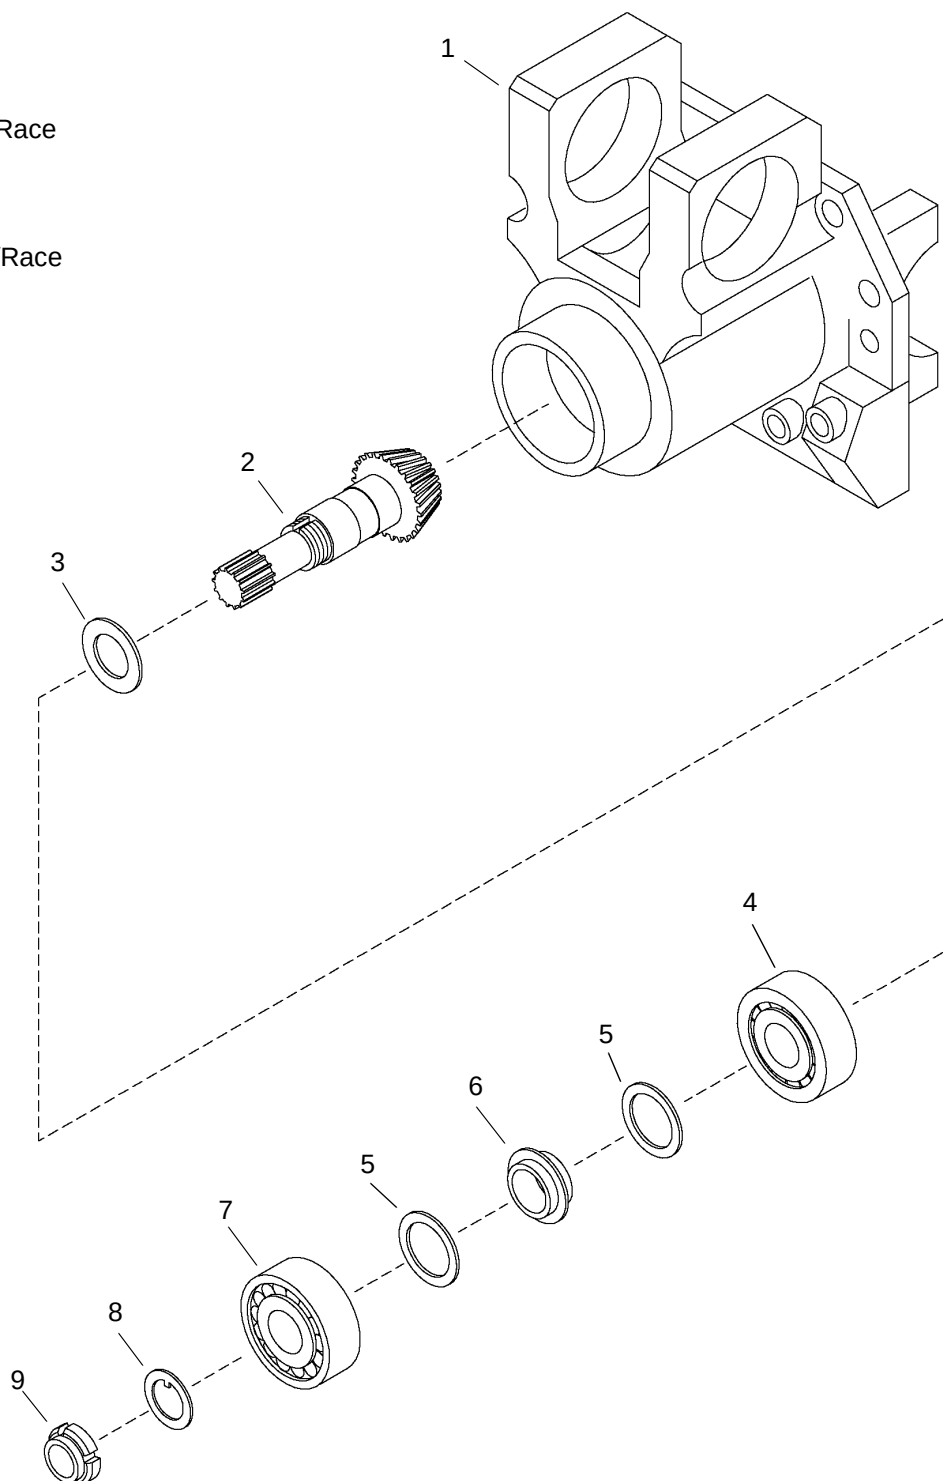


MS1838

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Remove the washer (Item 1) [Figure 40-21-75].


Pinion Group Disassembly

Figure 40-21-73

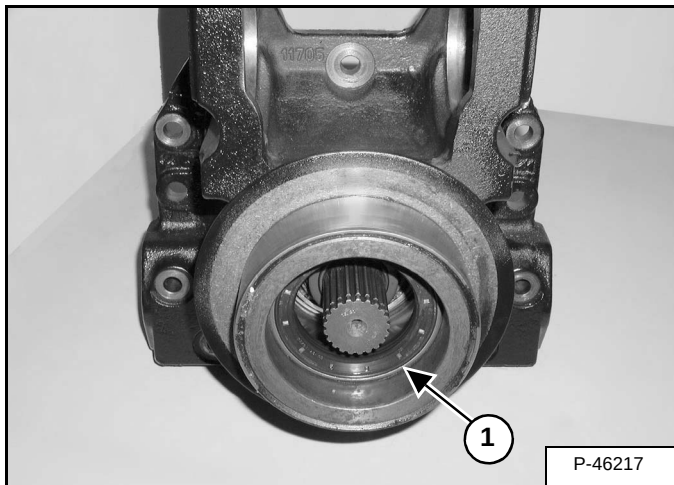


Remove the seal (Item 1) [Figure 40-21-73].

Figure 40-21-74

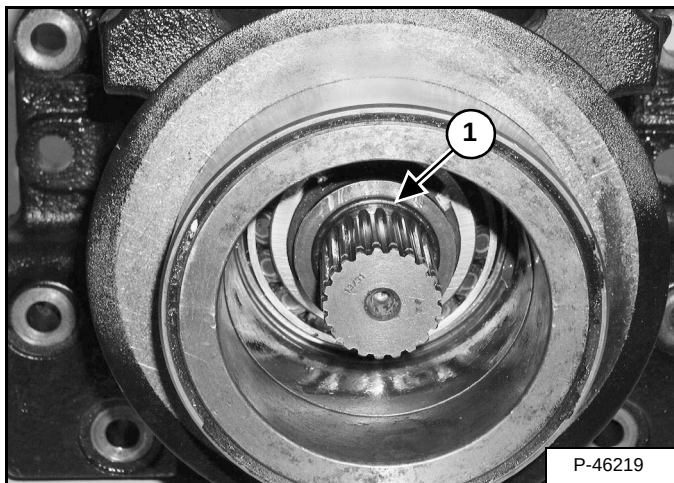

Remove the O-ring (Item 1) [Figure 40-21-74].


Figure 40-21-75

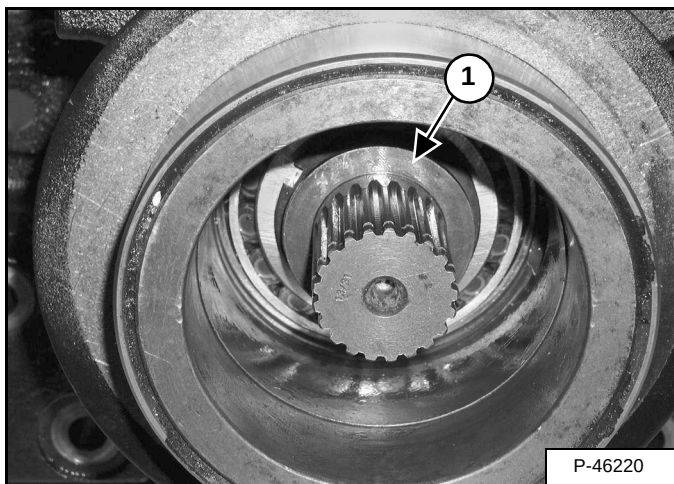

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Pinion Group Disassembly (Cont'd)

Figure 40-21-76

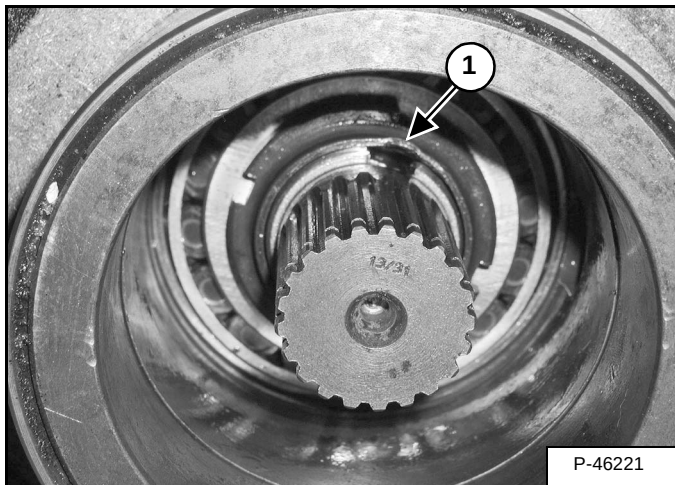


Straighten the peened notch (Item 1) [Figure 40-21-76] in the nut.

Figure 40-21-77

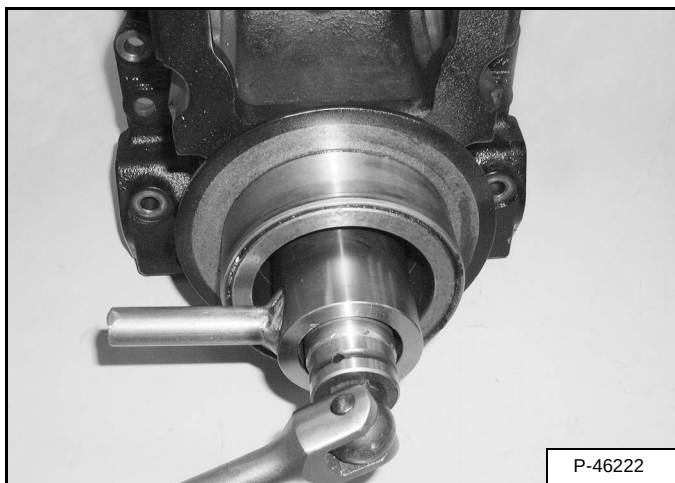


Loosen the nut using special tools CA119099 and CA715022 [Figure 40-21-77] and remove the nut.

Figure 40-21-78

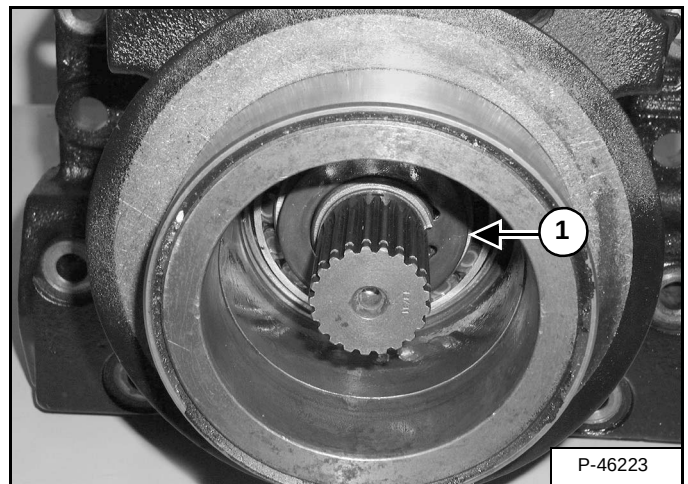

Remove the washer (Item 1) [Figure 40-21-78].

Figure 40-21-79

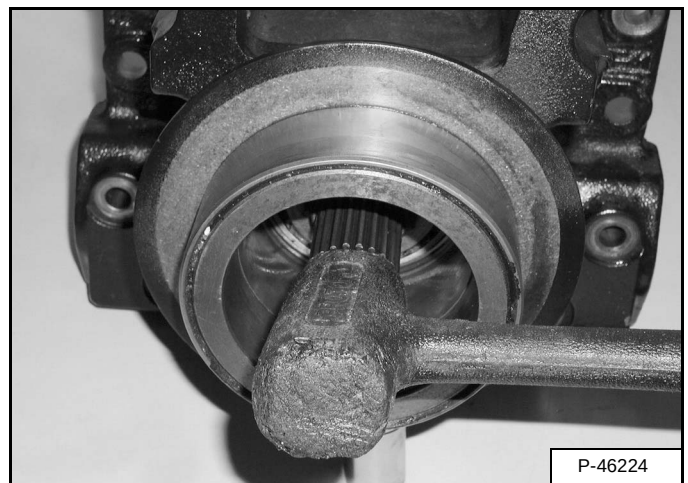


Free the pinion from the housing using a soft faced hammer [Figure 40-21-79].

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Pinion Group Disassembly (Cont'd)

Figure 40-21-80

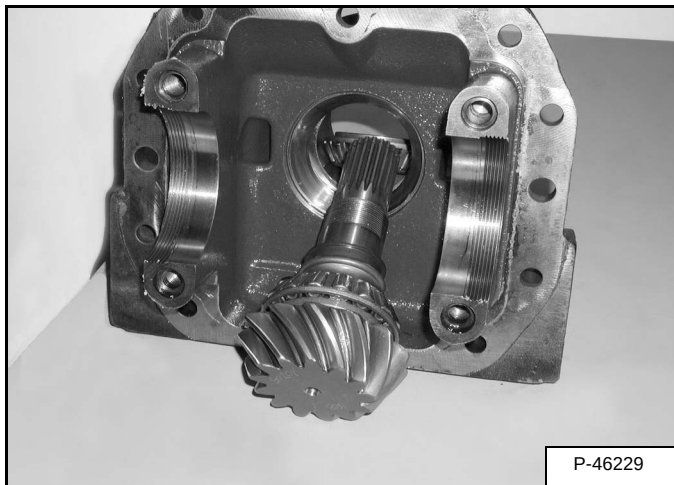


Remove the pinion shaft from the housing [Figure 40-21-80].

Figure 40-21-81

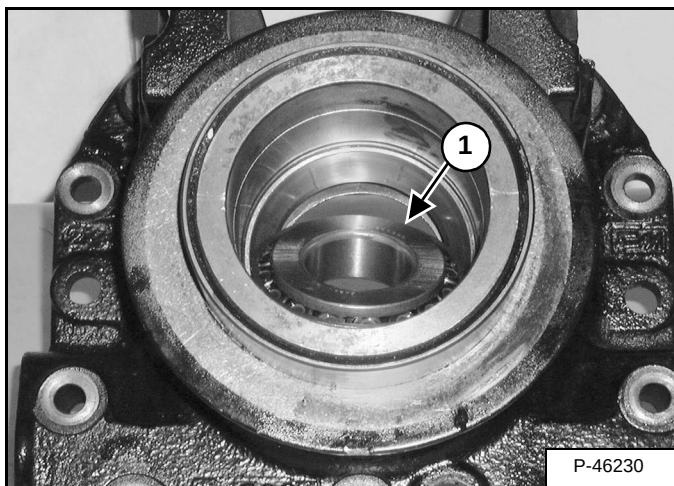


Remove the outer bearing (Item 1) [Figure 40-21-81].

Figure 40-21-82

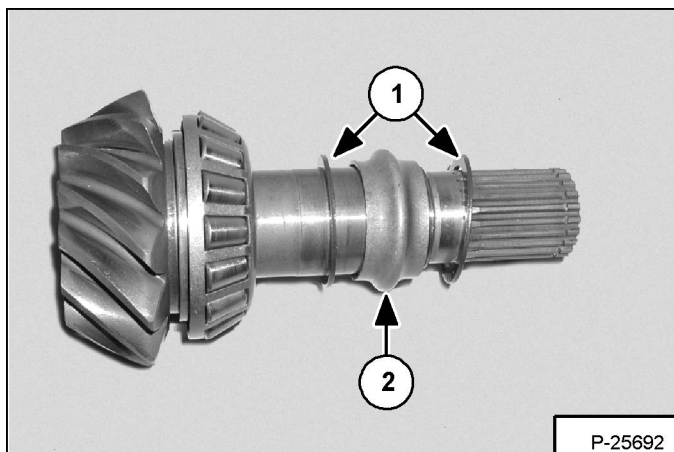

Remove the two washers (Item 1) and spacer (Item 2) [Figure 40-21-82] from the pinion shaft.

Figure 40-21-83

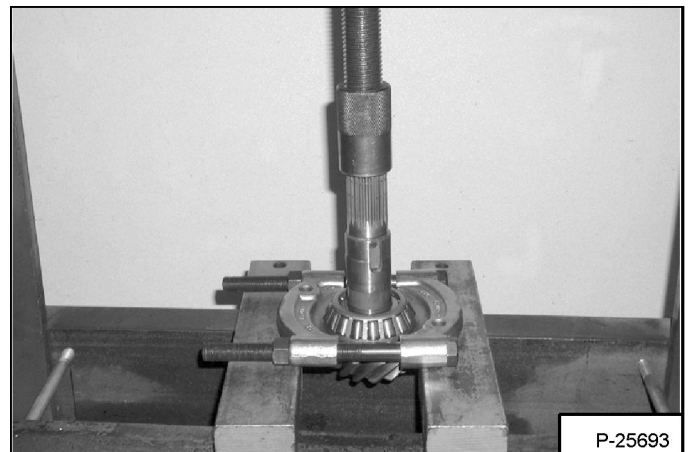


Remove the bearing from the pinion shaft [Figure 40-21-83].

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Pinion Group Disassembly (Cont'd)

Figure 40-21-84

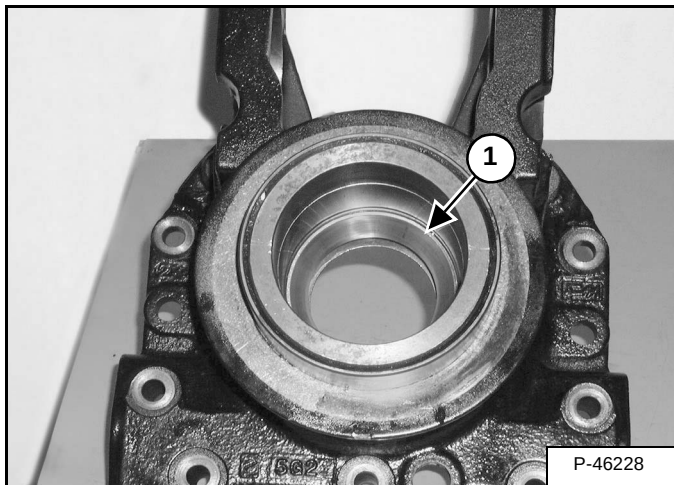

Remove the outer race from the housing [Figure 40-21-84].


Figure 40-21-85

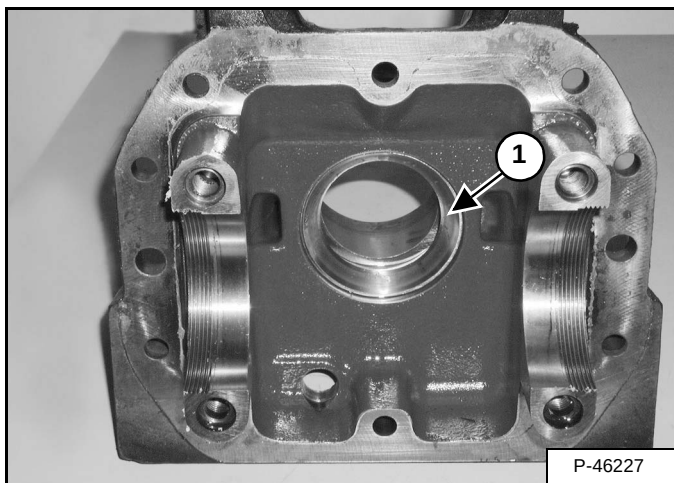

Remove the inner race from the housing [Figure 40-21-84].

Pinion Group Inspection

Figure 40-21-86

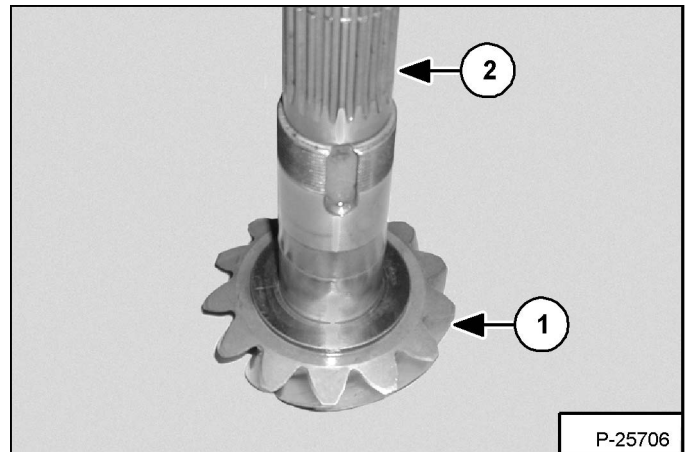

Inspect the pinion gear (Item 1) and shaft splines (Item 2) [Figure 40-21-86] for broken or damaged teeth.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Pinion Group Assembly


IMPORTANT

When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.

I-2003-0888


Prior to assembly, clean and lightly oil all parts.

Figure 40-21-87

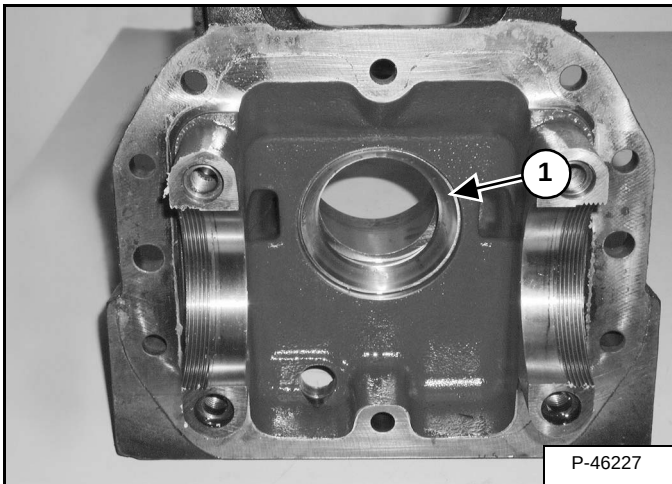


Install the inner race [Figure 40-21-87].

Figure 40-21-88

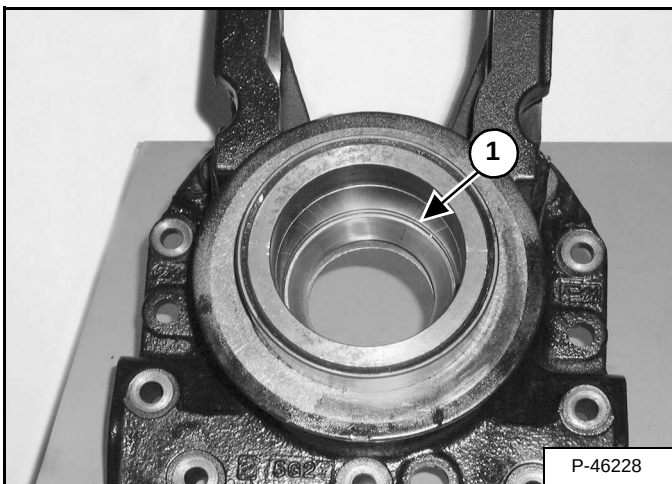


Install the outer race [Figure 40-21-88].

Figure 40-21-89

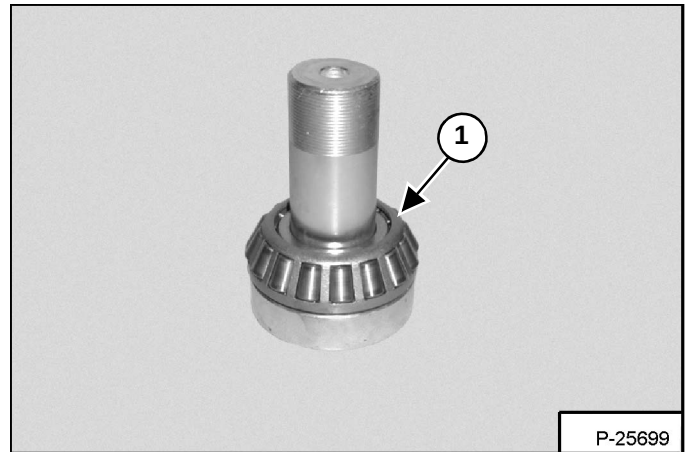

Install the bearing (Item 1) [Figure 40-21-89] onto the dummy pinion tool CA715040.

Figure 40-21-90

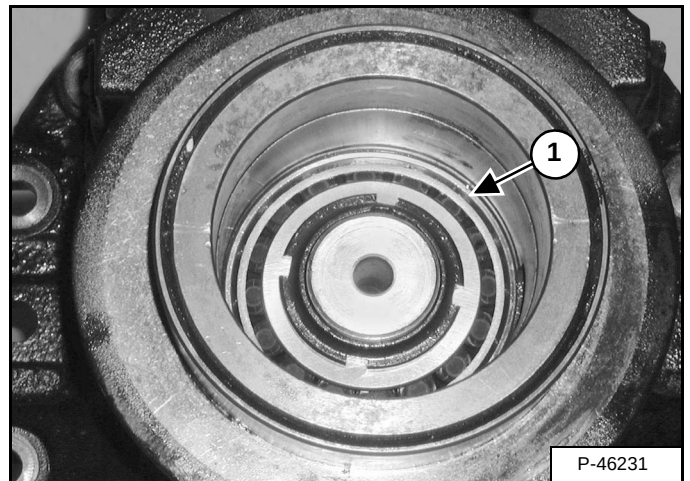


Install the dummy pinion and bearing into the center housing and install the outer bearing and lock nut (Item 1) [Figure 40-21-90].

Tighten the lock nut to eliminate any bearing end play. DO NOT overtighten the nut.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Pinion Group Assembly (Cont'd)

Figure 40-21-91

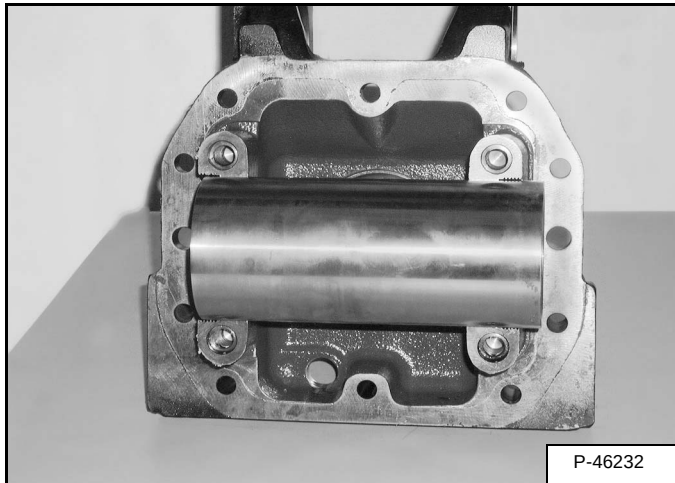

Insert the dummy differential tool CA715041 into the housing [Figure 40-21-91].

Figure 40-21-92

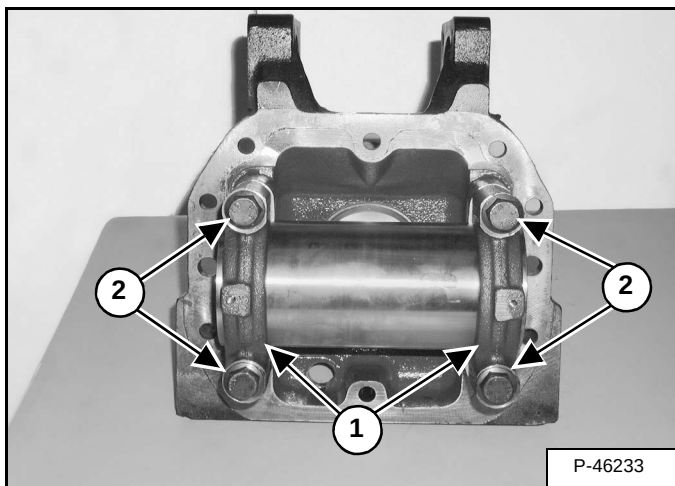


Install the yokes (Item 1) and bolts (Item 2) [Figure 40-21-92]. Tighten the bolts.

Figure 40-21-93



Figure 40-21-94

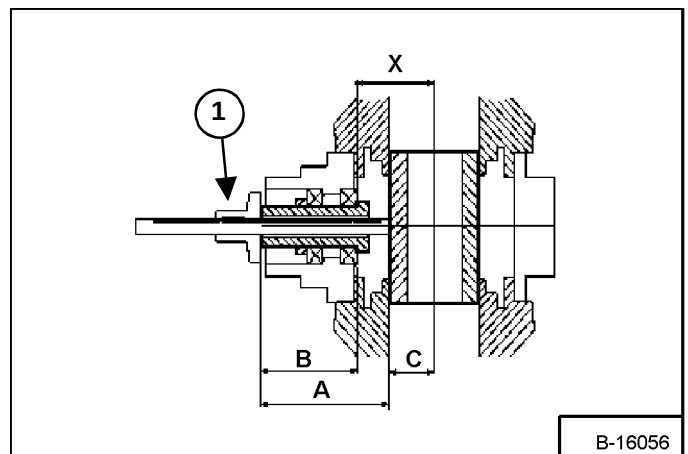

Using a depth gauge (Item 1) [Figure 40-21-93] & [Figure 40-21-94] measure thru the reference hole in the dummy pinion.

X = (distance to be measured)

A = (measured value)

B = (given value) = $100 \pm 0,01$ mm


C = (given value) = 45 mm

$(A + C) - B = X$

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Pinion Group Assembly (Cont'd)

Figure 40-21-95

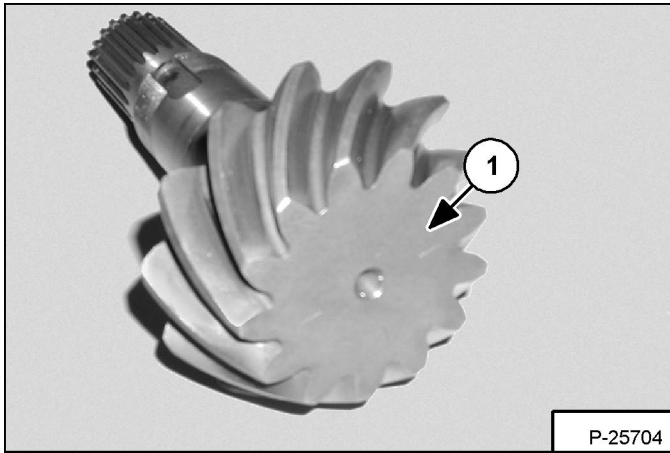

To determine the thickness of the shim to be installed between the pinion and bearing, subtract the value stamped on the end of the pinion (Item 1) [Figure 40-21-95] from the value X.


Figure 40-21-96

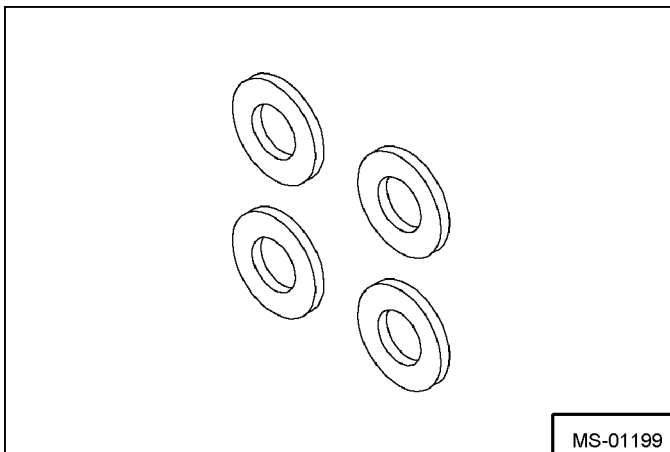

Select the correct shim [Figure 40-21-96] from the chart below:


SHIM THICKNESS RANGE										
Thick	2.5	2.6	2.7	2.8	2.9	3.0	3.1	3.2	3.3	3.4
Qty.	-	-	-	-	-	-	-	-	-	-

Figure 40-21-97

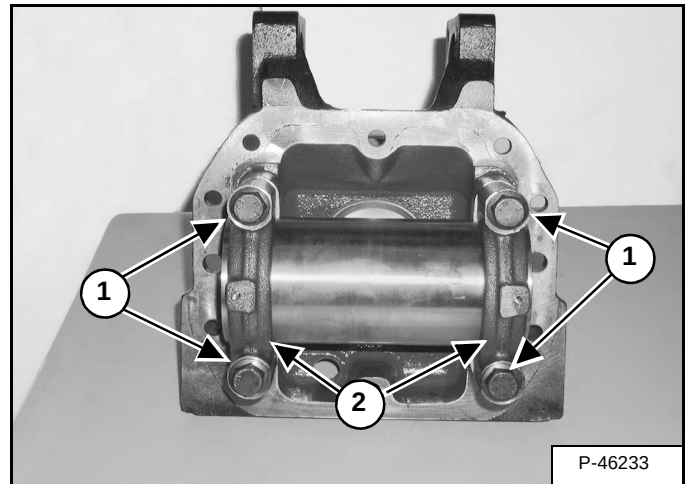

Remove the bolts (Item 1) and yokes (Item 2) [Figure 40-21-97].

Figure 40-21-98

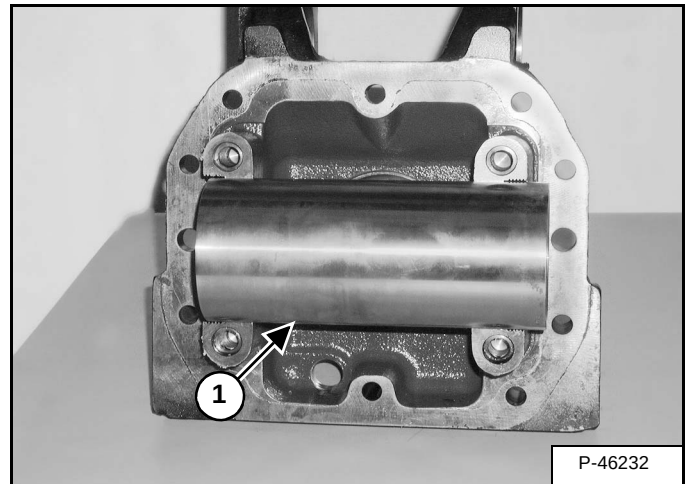


Remove the dummy differential tool (Item 1) [Figure 40-21-98] from the housing.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Pinion Group Assembly (Cont'd)

Figure 40-21-99

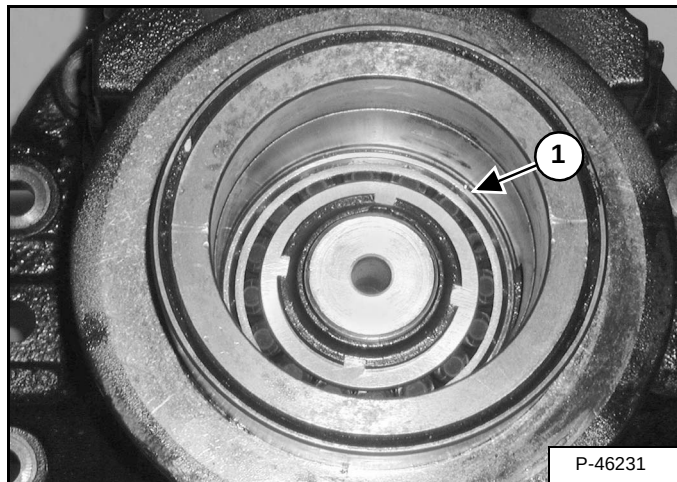


Remove the dummy pinion tool (Item 1) [Figure 40-21-99] from the center housing.

Figure 40-21-100

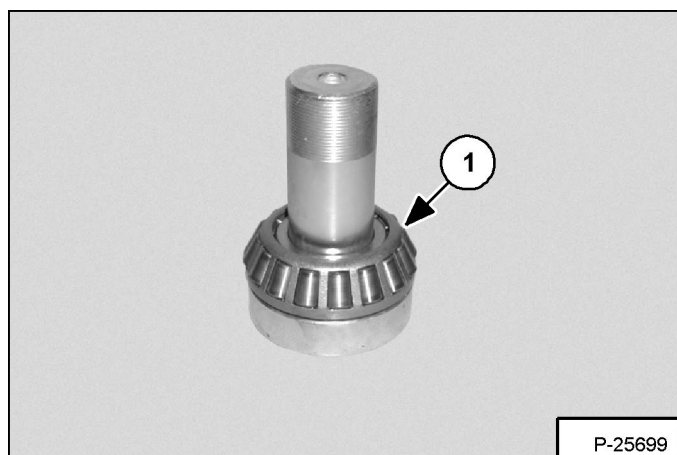

Remove the bearing (Item 1) [Figure 40-21-100] from the dummy pinion.


Figure 40-21-101

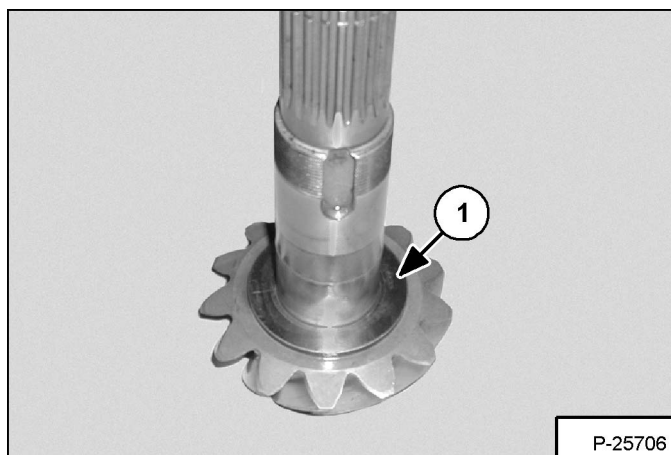

Install the shims selected (Item 1) [Figure 40-21-101] onto the pinion shaft.

NOTE: The beveled edge must go towards the gear.

Figure 40-21-102

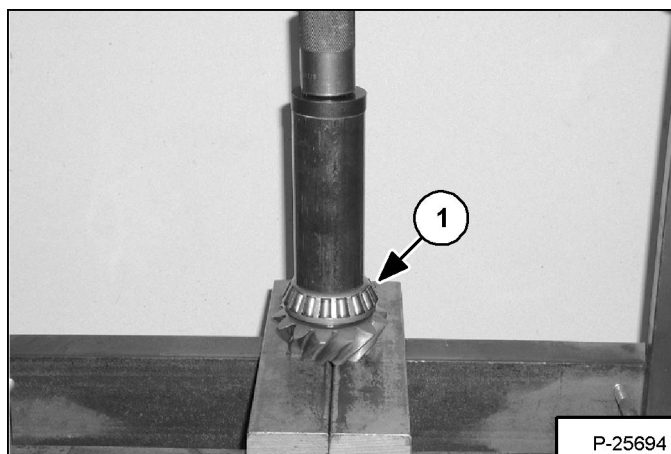


Install the bearing (Item 1) [Figure 40-21-102] onto the pinion shaft until it is fully seated.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Pinion Group Assembly (Cont'd)

Figure 40-21-103

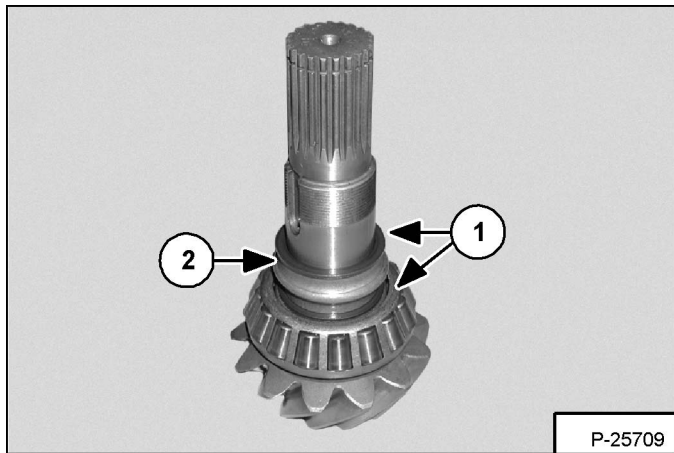


Install the two washers (Item 1) and collapsible spacer (Item 2) [Figure 40-21-103] onto the shaft.

Figure 40-21-104

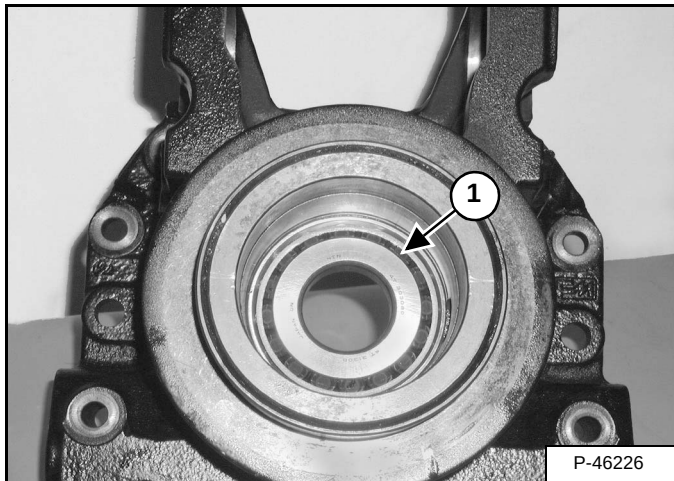


Install the outer bearing (Item 1) [Figure 40-21-104].

Figure 40-21-105

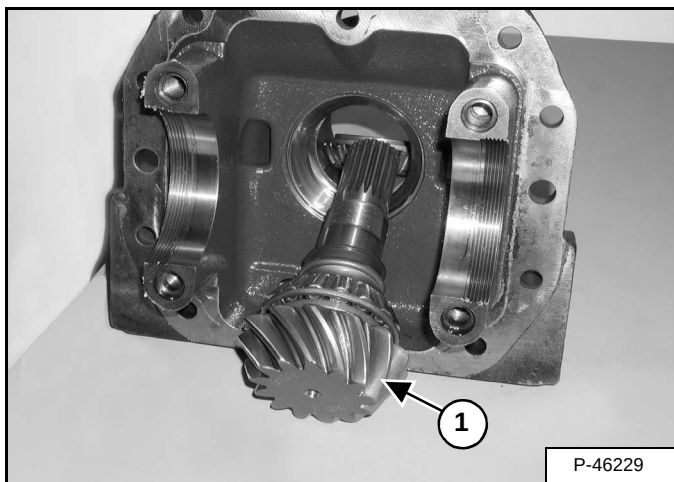

Install the pinion assembly (Item 1) [Figure 40-21-105].

Figure 40-21-106

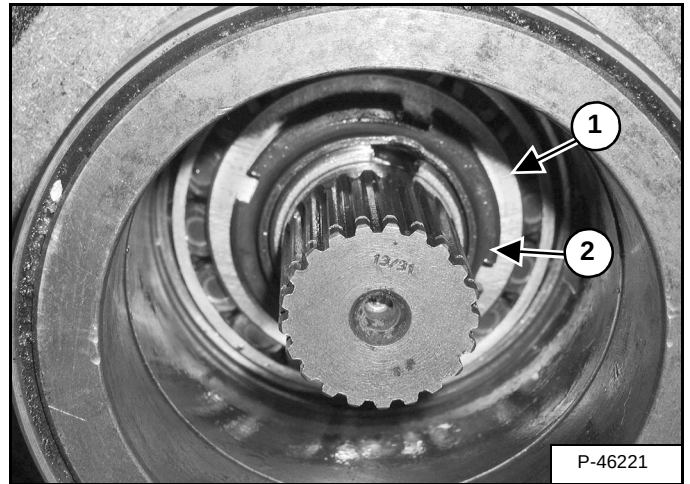


Install the backing washer (Item 1) and nut (Item 2) [Figure 40-21-106].

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Pinion Group Assembly (Cont'd)

Figure 40-21-107

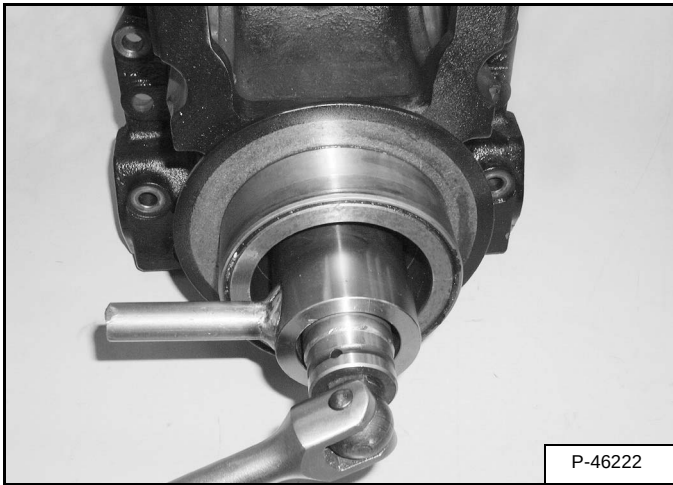


Gradually tighten the nut (See Figure 108 & 109 for the proper procedure) using the special tools CA119099 and CA715022 (Item 1) [Figure 40-21-107].

NOTE: The tightening torque is determined by measuring the force required to rotate the pinion (preload of bearings).


SEE Figure 108 & 109. Tighten the nut in incremental steps. If overtightened (preload too high) the collapsible spacer (Item 2) [Figure 40-21-103] must be replaced and the procedure repeated [Figure 40-21-107].

Figure 40-21-108

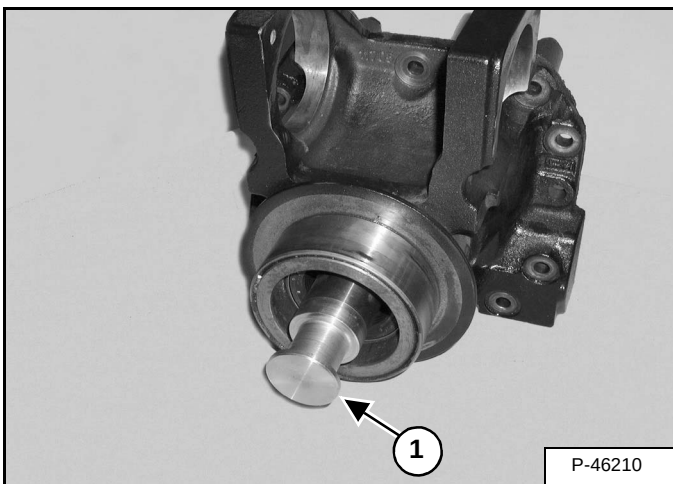

Install the special tool CA715116 (Item 1) [Figure 40-21-108] onto the pinion shaft.

Figure 40-21-109

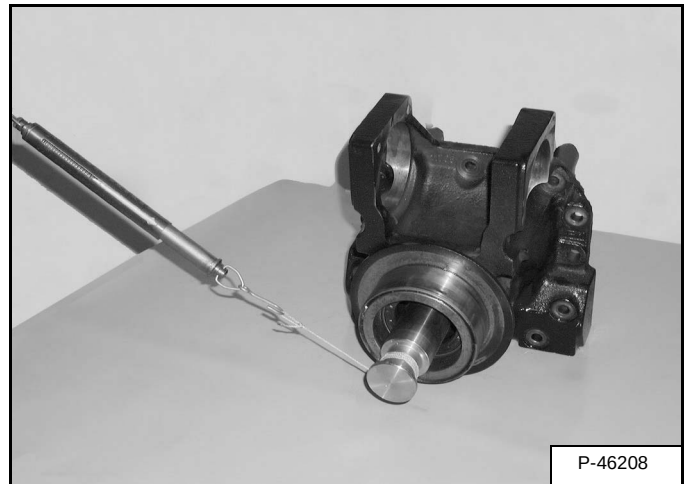


Attach one end of a light rope to the special tool [Figure 40-21-109]. Make 2 or 3 complete wraps around the tool. Attach the spring scale perpendicular to the housing to measure the rolling torque on the bearings. Tighten (or loosen) the nut (Item 1) [Figure 40-21-106] until 2-3 lb (.9 - 1.4 Kg) of smooth and continuous rolling torque is measured on the spring scale.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Differential Assembly

Figure 40-21-110

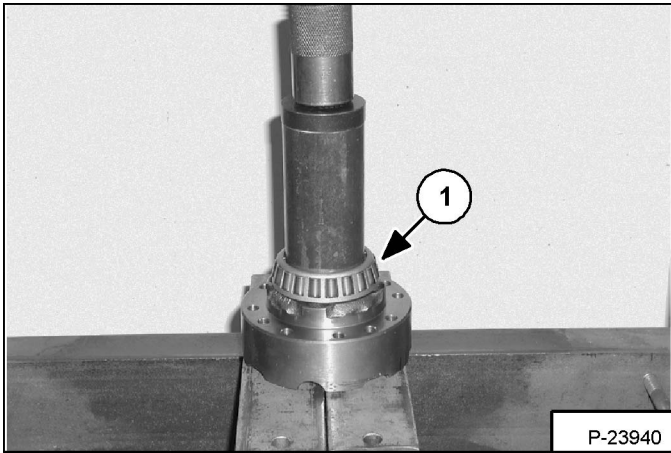

Install the bearing (Item 1) [Figure 40-21-110] onto each housing.


Figure 40-21-111

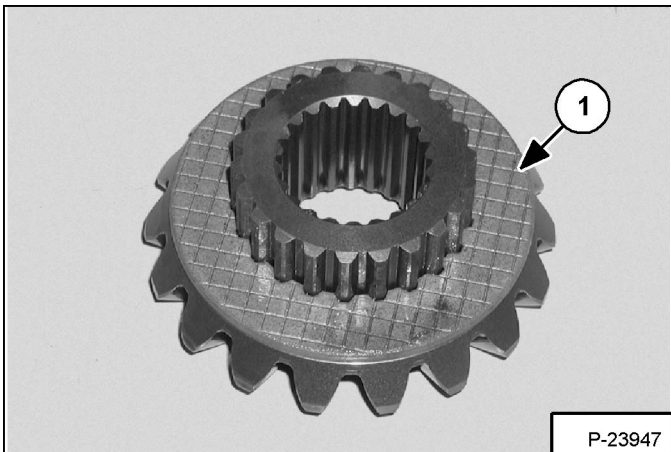

Install the disc (Item 1) [Figure 40-21-111] that is one half friction and the other half metal onto the gear splines.


NOTE: The metal side must be next to the gear.

Figure 40-21-112

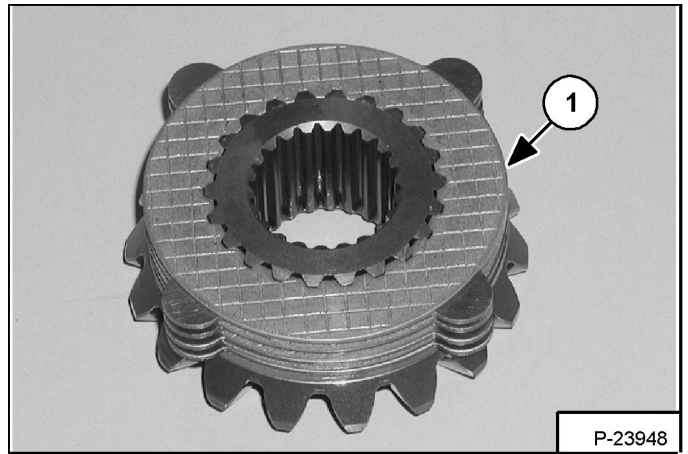

Install the remaining discs (Item 1) [Figure 40-21-112] onto the shaft, alternating between steel and friction.

Figure 40-21-113

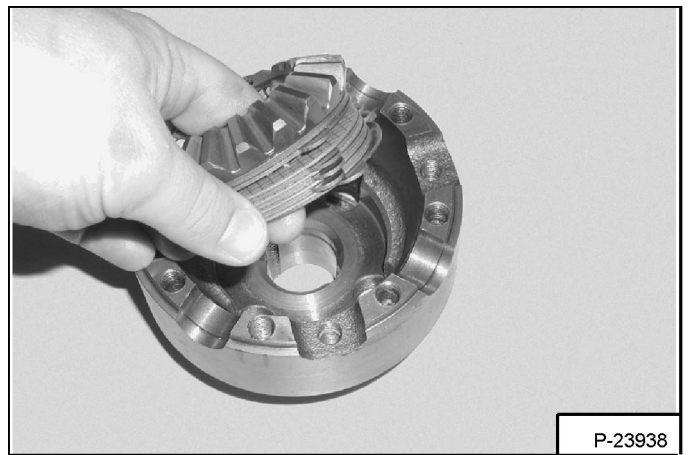


Install the gear/disc assembly into the housing [Figure 40-21-113].

NOTE: Make sure the disc remains in correct position.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Differential Assembly (Cont'd)

Figure 40-21-114

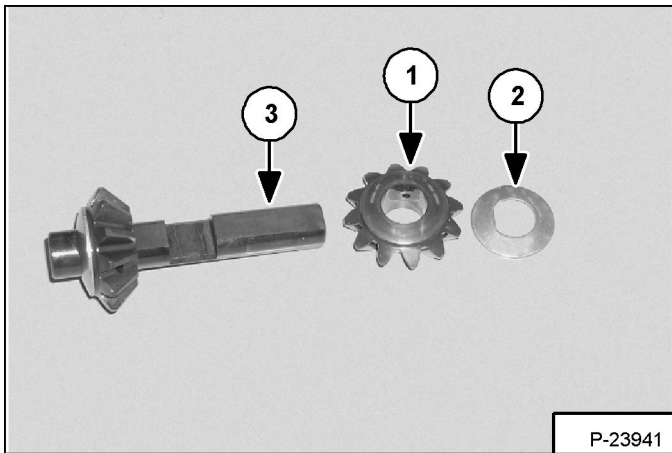


Install the gear (Item 1) cup washer (Item 2) onto the spindle (Item 3) [Figure 40-21-114].

Figure 40-21-115

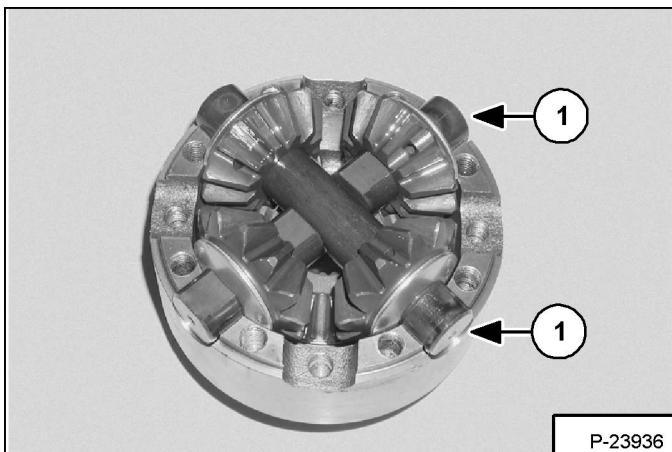


Install the spindle/gear assemblies (Item 1) [Figure 40-21-115] into the housing.

Figure 40-21-116

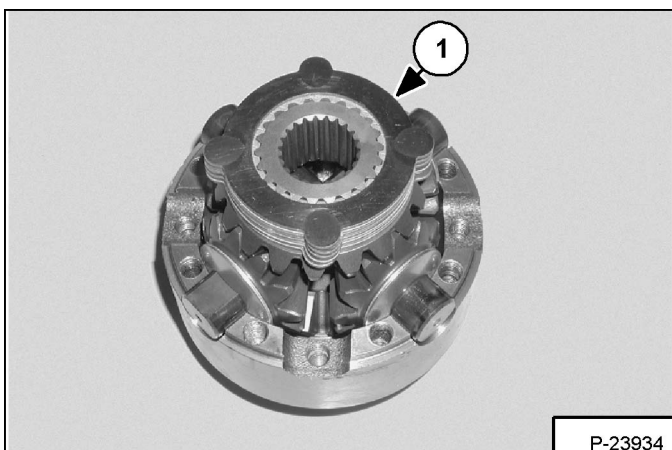

Set the gear/discs assembly (Item 1) [Figure 40-21-116] onto the spindle gears.

Figure 40-21-117

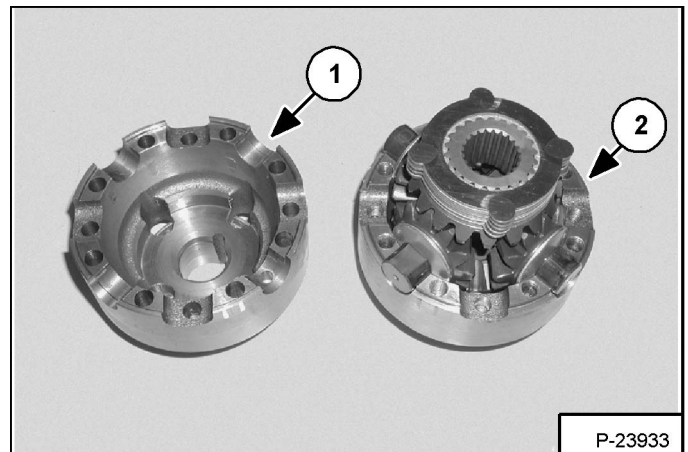


Install the housing (Item 1) onto the housing/gear assembly (Item 2) [Figure 40-21-117]. Make sure to align the reference marks made earlier.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Differential Assembly (Cont'd)

Figure 40-21-118

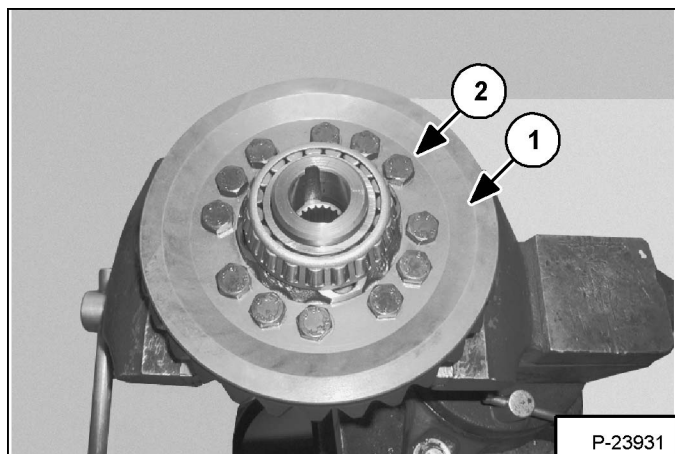


Install the ring gear (Item 1) and twelve bolts (Item 2) [Figure 40-21-118]. Tighten the bolts to 58 ft.-lbs. (78 Nm) torque.

Figure 40-21-119

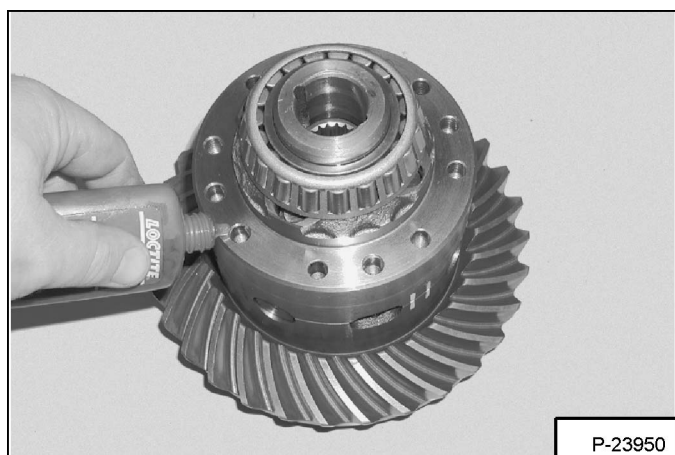


Apply LOCTITE #270 to the end of the mounting bolts [Figure 40-21-119].

Figure 40-21-120

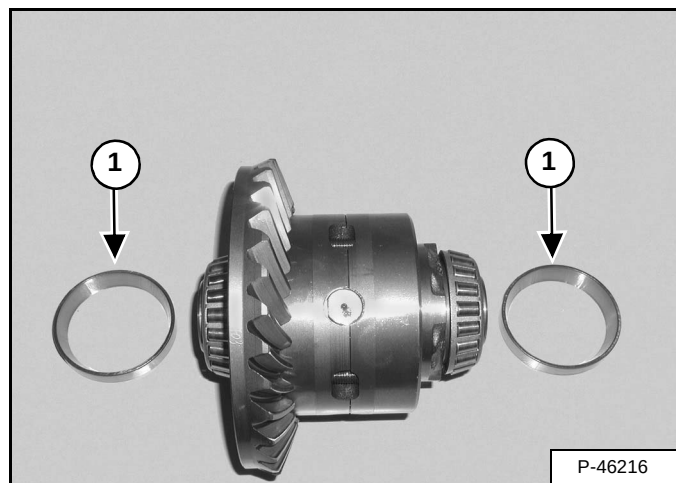

Install the bearing races (Item 1) [Figure 40-21-120] on the bearings.

Figure 40-21-121

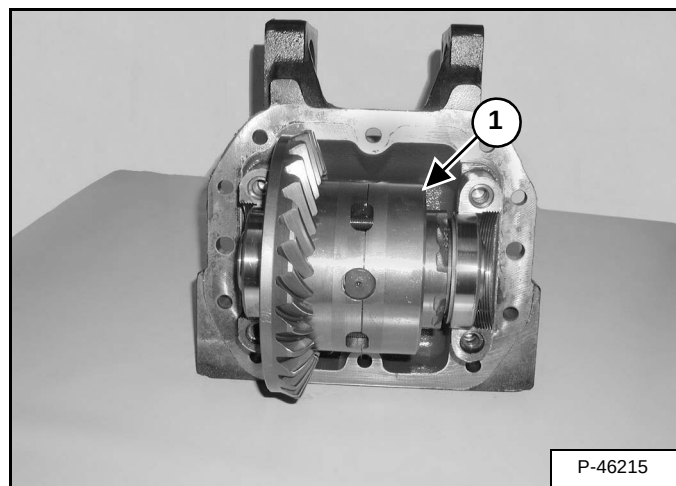


Install the differential assembly (Item 1) [Figure 40-21-121] in the housing.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Differential Assembly (Cont'd)

Figure 40-21-122

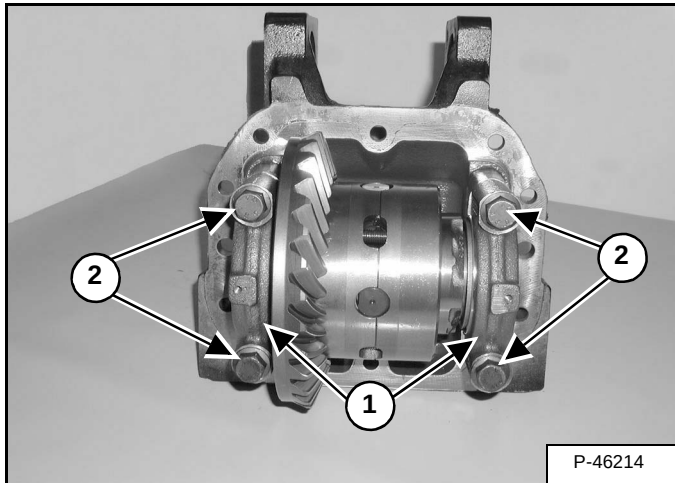


Install the yokes (Item 1) with the four bolts (Item 2) [Figure 40-21-122].

Figure 40-21-123

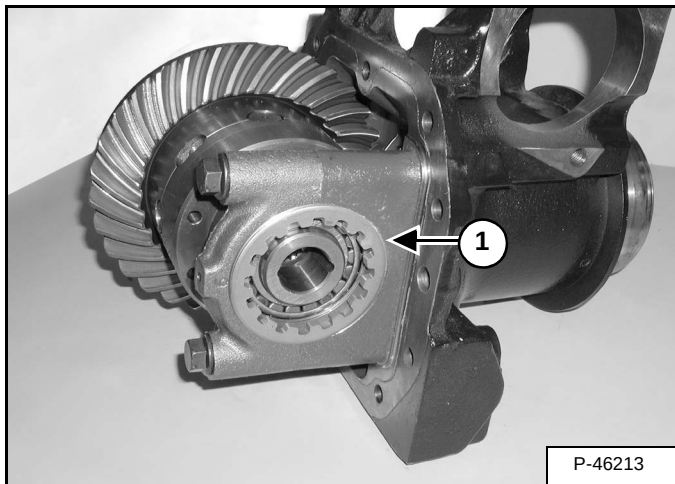


Install the internal nut (Item 1) [Figure 40-21-123]. (Both sides)

Figure 40-21-124

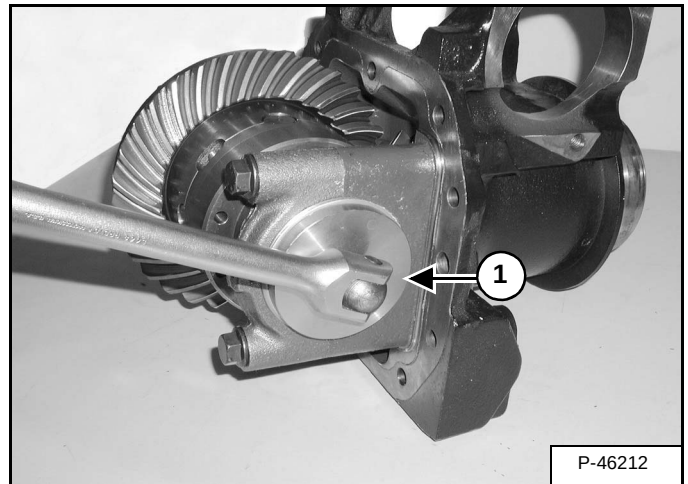

Tighten the internal nut (Item 1) [Figure 40-21-123] using special tool CA119030 (Item 1) [Figure 40-21-124]. (Both sides)

Figure 40-21-125

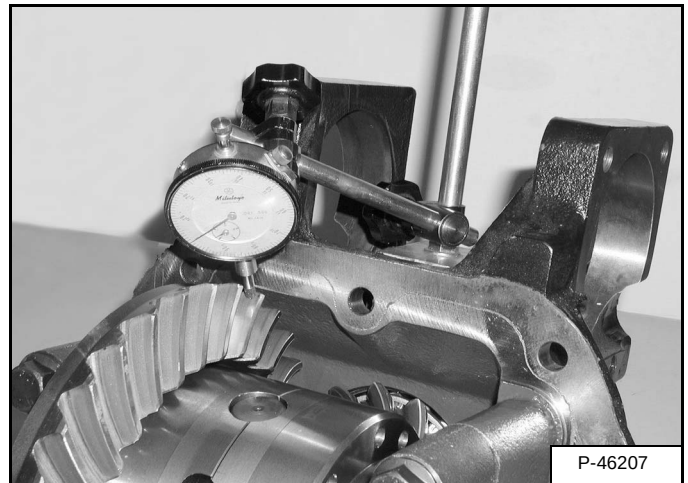


Using a dial gauge, move the ring gear back and forth and make a note of the backlash between the pinion and ring gear [Figure 40-21-125].

Check that the backlash is within the permissible range of 0.007 - 0.009 inches (0.18 - 0.23 mm).

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Differential Assembly (Cont'd)

Figure 40-21-126

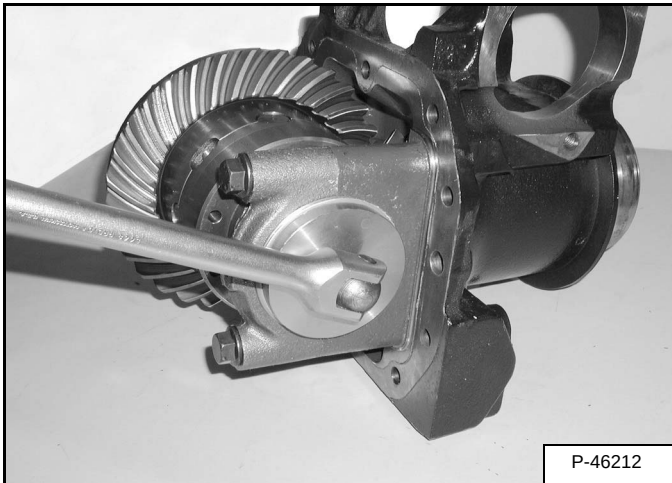


Adjusting the lock nuts [Figure 40-21-126]:

- If the backlash measured is under the permissible range, tighten the lock nut on the side opposite the crown wheel and unscrew the lock nut on the other side by the same amount.
- If the backlash is above the permissible range, tighten the lock nut on the side of the crown wheel and loosen the lock nut on the other side by the same amount.

Once the pinion and ring gear adjustment has been carried out, check that there is at least a minimal preload on the differential cage bearings. If necessary, repeat the steps if backlash is still outside the permissible range.


Once the pinion/ring gear backlash has been determined, the total preload of the pinion ring gear wheel bearings must be measured, to verify that it falls within the permissible range.

Figure 40-21-127

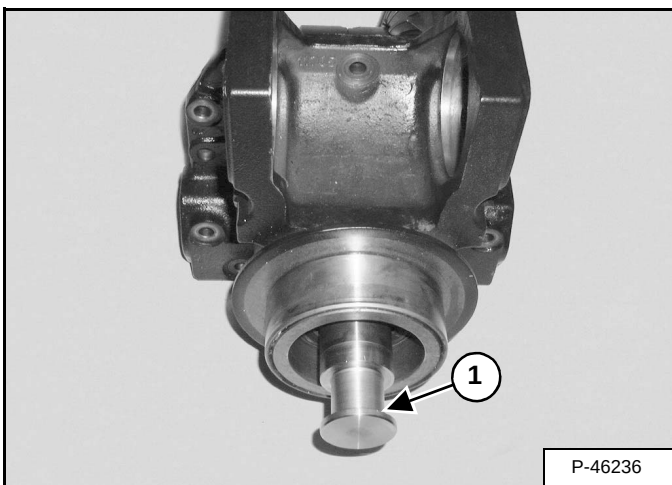

Install the special tool CA715116 (Item 1) [Figure 40-21-127] onto the pinion shaft.


Figure 40-21-128

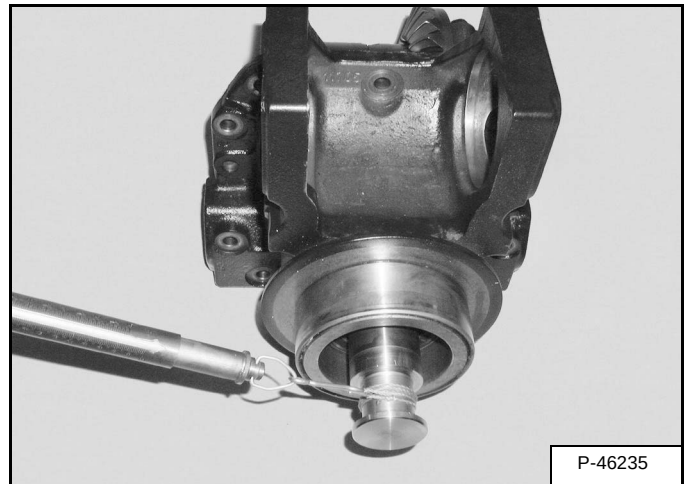

Attach one end of a light rope to the special tool and make 2 or 3 wraps around the tool. Attach the spring scale to the opposite end of the rope. Pull the scale perpendicular to the housing to measure the rolling torque on the bearings. The value is 2 - 3 lbs. (0.9 to 1.4 Kg) [Figure 40-21-128].

- If the total preload is under the permissible range, tighten the two lock nuts by same amount, retaining the value of the pinion ring gear backlash. -If the total preload is above the permissible range, slacken the two lock nuts by the same amount, retaining the value of the pinion ring gear backlash.

Figure 40-21-129

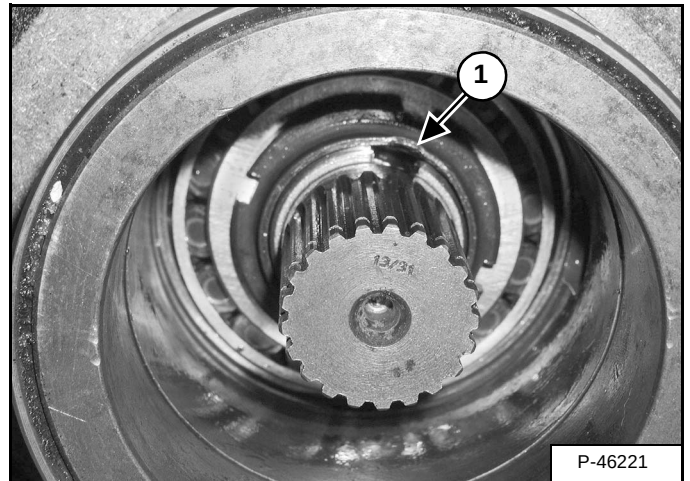


Stake the lock nut (Item 1) [Figure 40-21-129] on the pinion.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Differential Assembly (Cont'd)

Figure 40-21-130

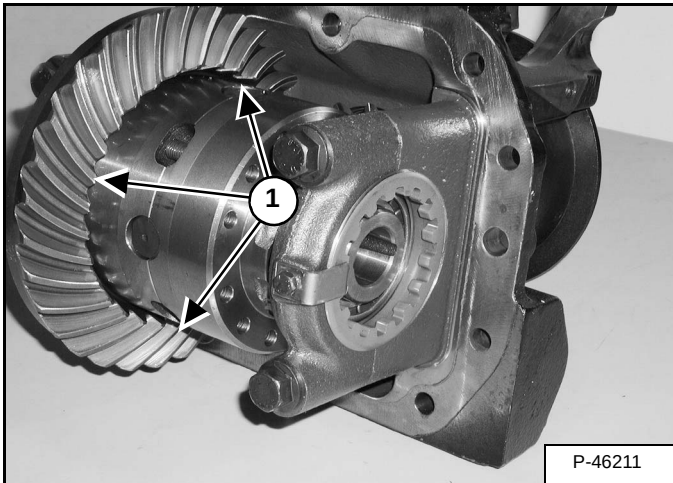

Use colored lead and brush to paint 3 or 4 teeth of the ring gear in three opposite places (Item 1) [Figure 40-21-130].


Figure 40-21-131

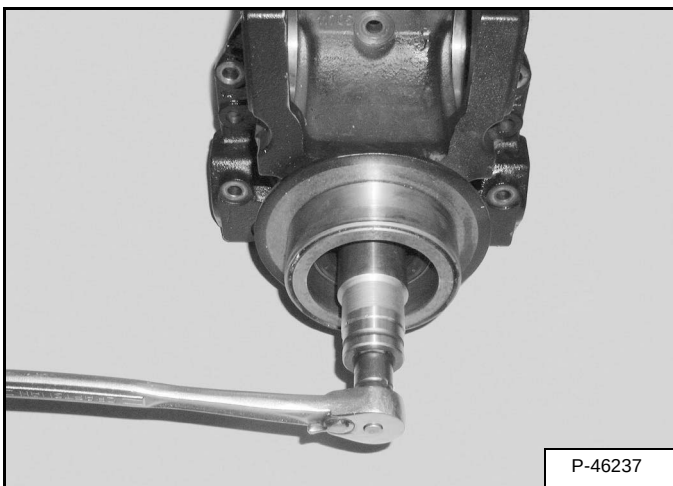

Turn the pinion using the special tool CA715022 several turns [Figure 40-21-131].


Check the wear pattern of the pinion/ring gear teeth.

Figure 40-21-132

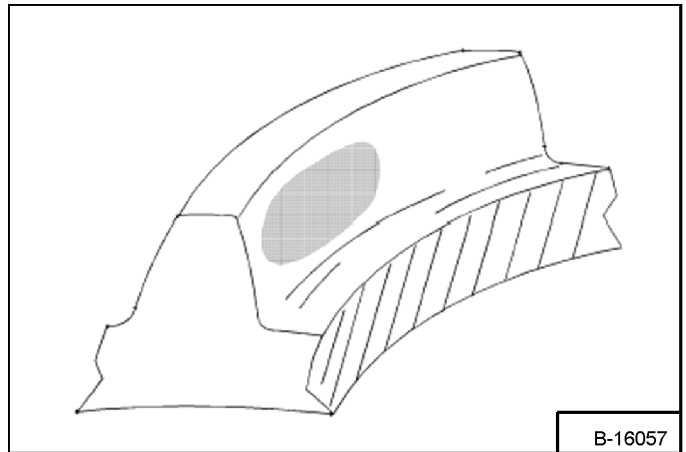

Correct Pattern - If pinion/ring gear has been properly adjusted, wear pattern (contact) should be as shown [Figure 40-21-132].

Figure 40-21-133

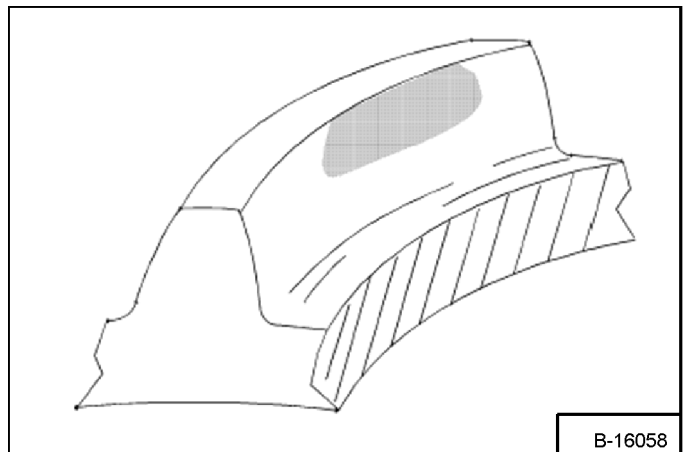


Excessive contact on tooth edge - adjust the backlash [Figure 40-21-133].

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Differential Assembly (Cont'd)

Figure 40-21-134

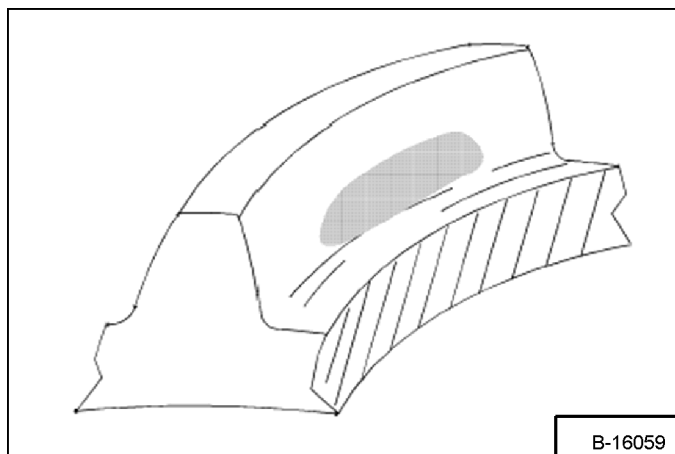

Excessive contact on flank of tooth - adjust the backlash [Figure 40-21-134].


Figure 40-21-135

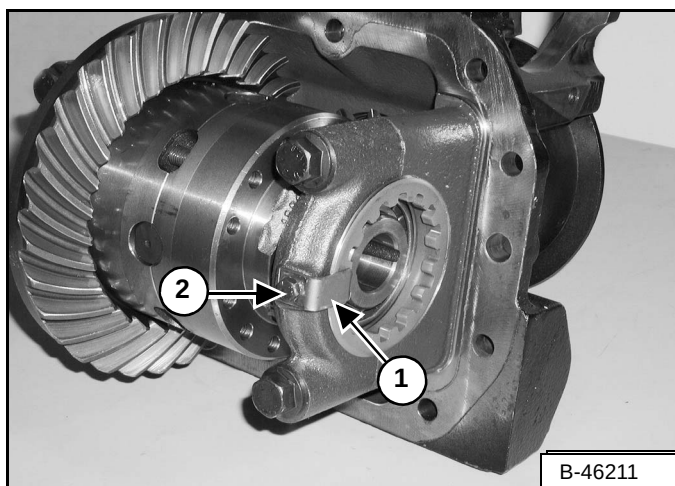

Once the wear pattern is correct install the lock nut retainer (Item 1) and bolt (Item 2) [Figure 40-21-135].


Tighten the bolt to 10 ft.-lbs. (13 Nm) torque. (Both sides)

Figure 40-21-136

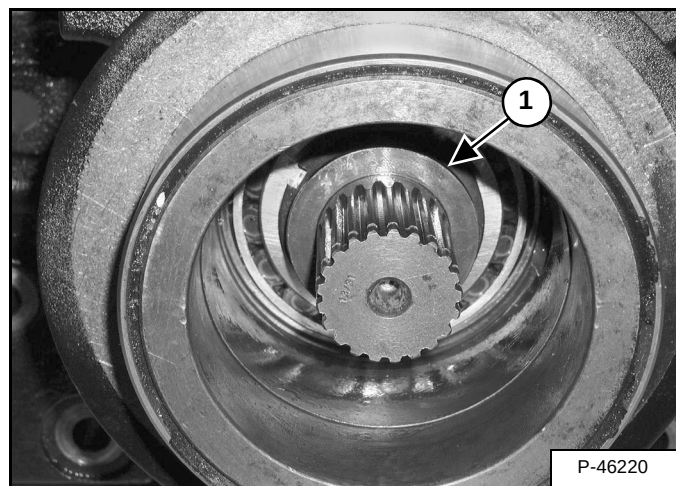

Install the washer (Item 1) [Figure 40-21-136] in the housing.

Figure 40-21-137

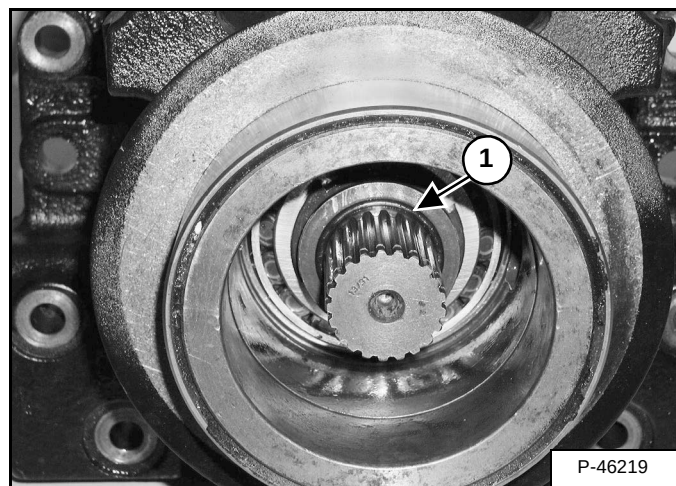


Install the O-ring (Item 1) [Figure 40-21-137].

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Differential Assembly (Cont'd)

Figure 40-21-138

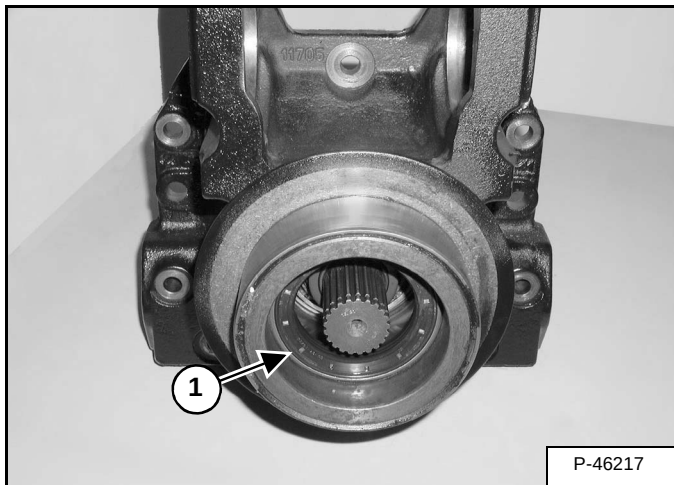


Install the seal (Item 1) [Figure 40-21-138].

Figure 40-21-139

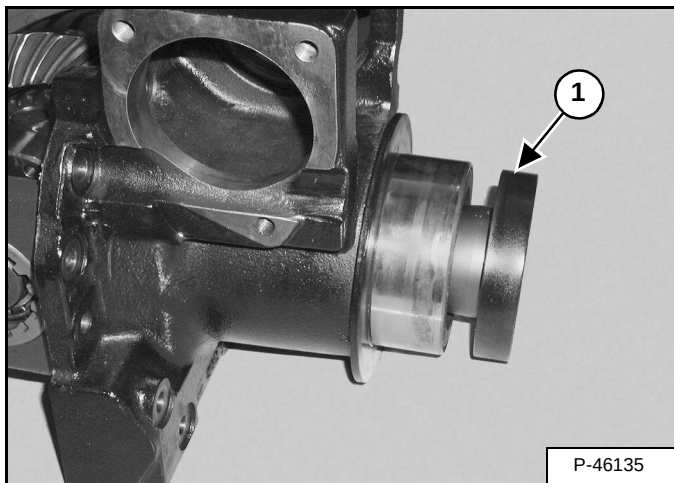


Install the drive coupler (Item 1) [Figure 40-21-139].

Figure 40-21-140

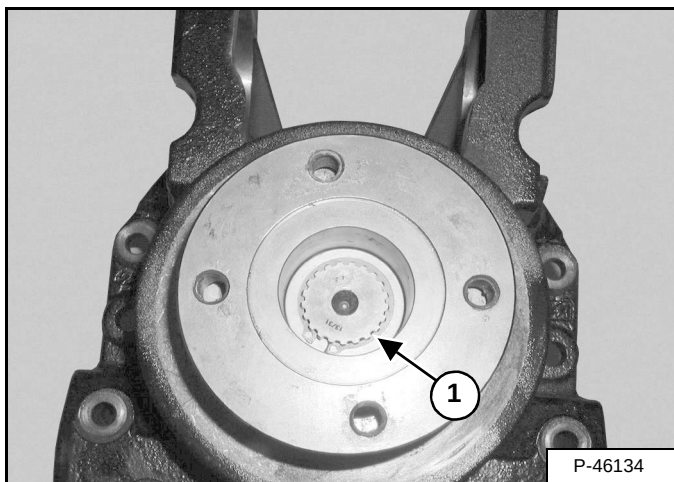

Install the snap ring (Item 1) [Figure 40-21-140].

Figure 40-21-141

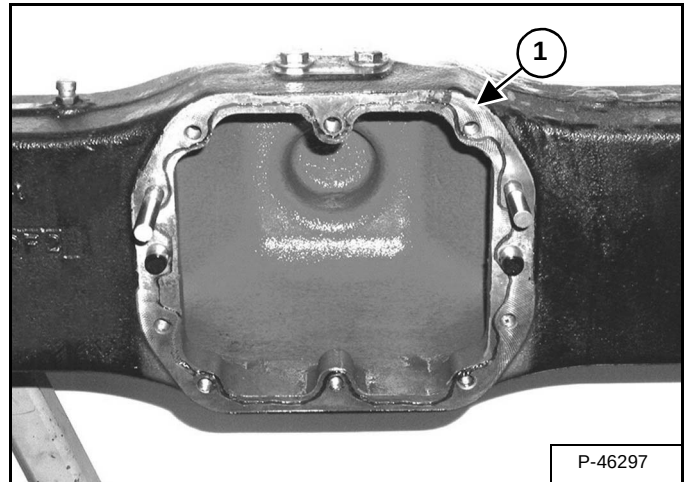


Apply a 3 mm bead of LOCTITE 510 Gasket Eliminator (or equivalent) to the axle housing (Item 1) [Figure 40-21-141] in the pattern shown.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Differential Assembly (Cont'd)

Figure 40-21-142

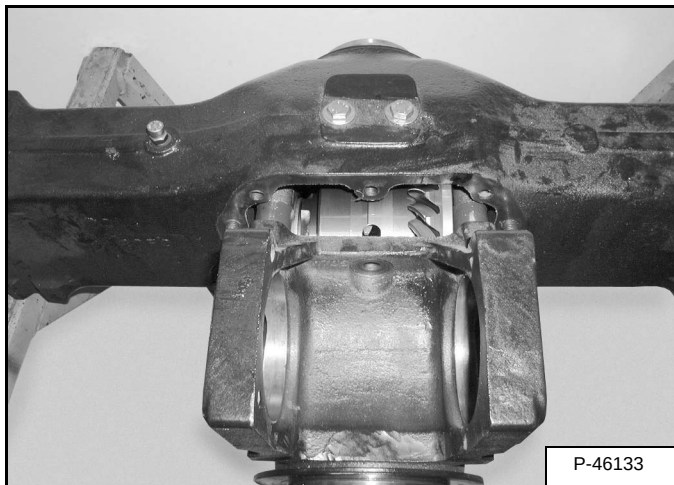


Install the differential assembly [Figure 40-21-142].

Figure 40-21-143

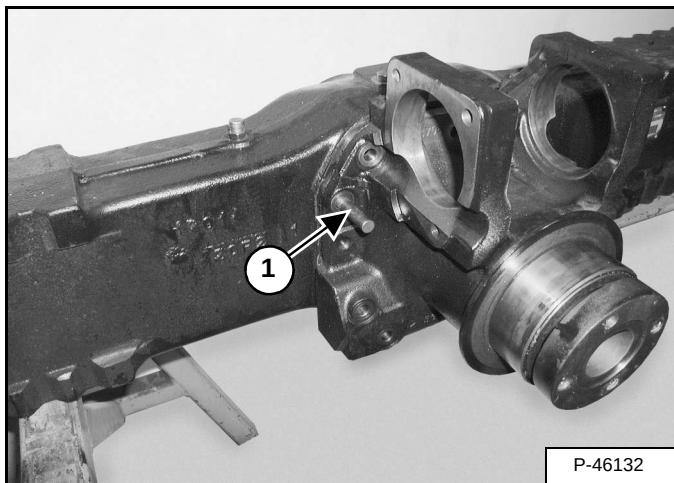


Remove the alignment studs (Item 1) [Figure 40-21-143].

Figure 40-21-144

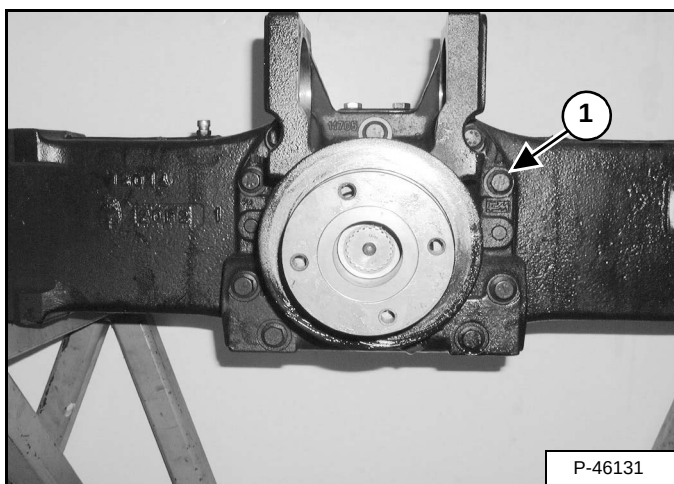

Install the ten bolts (Item 1) [Figure 40-21-144] .

Figure 40-21-145

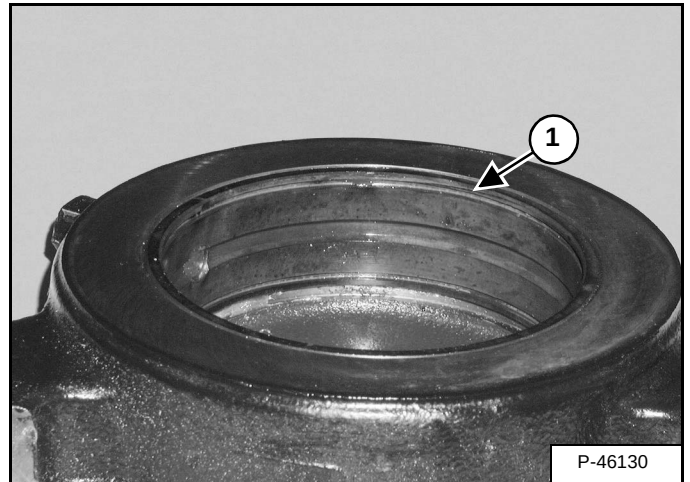


Install the bushing (Item 1) [Figure 40-21-145] in the rear mount bracket.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Differential Assembly (Cont'd)

Figure 40-21-146

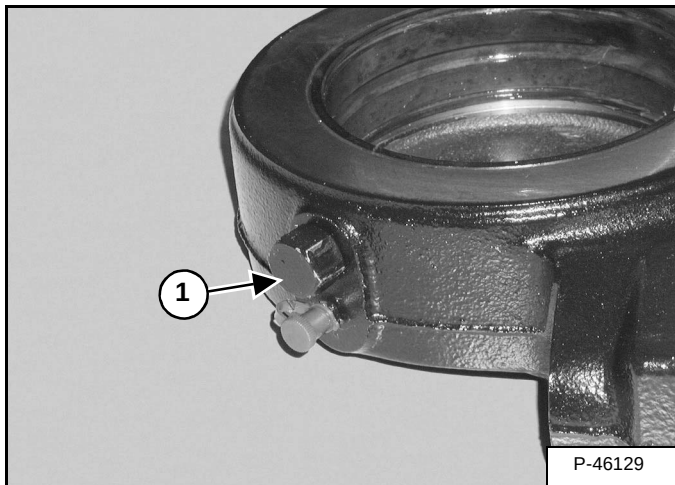


Tighten the retainer (Item 1) [Figure 40-21-146] on the rear mount bracket.

Figure 40-21-147

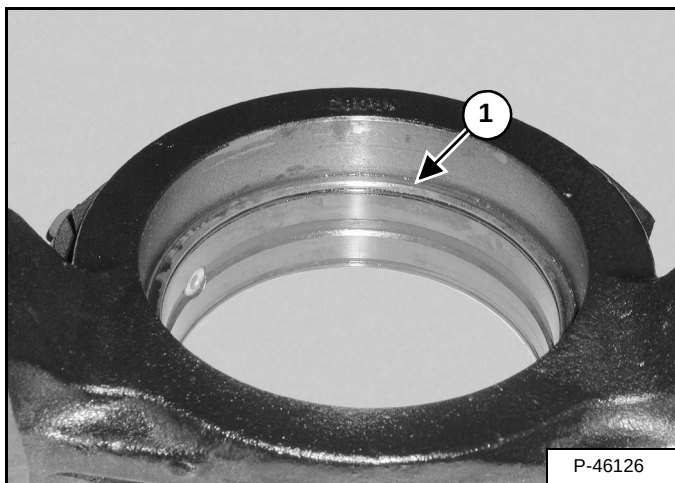


Install the bushing (Item 1) [Figure 40-21-147] in the front mount bracket.

Figure 40-21-148

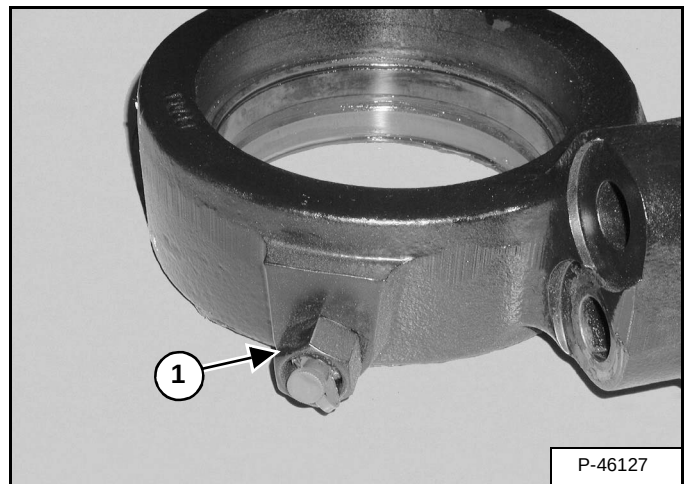

Tighten the retainer (Item 1) [Figure 40-21-148].

Figure 40-21-149

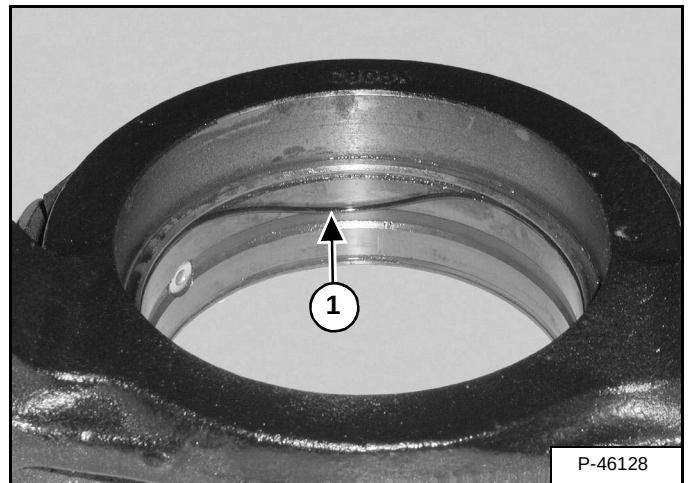


Install the O-ring (Item 1) [Figure 40-21-149] in the front mount bracket.

**AXLE AND DIFFERENTIAL (REAR) (For S/N
362811001 - 362812000, S/N 362911001 - 362912000)
(CONT'D)**


Differential Assembly (Cont'd)

Figure 40-21-150

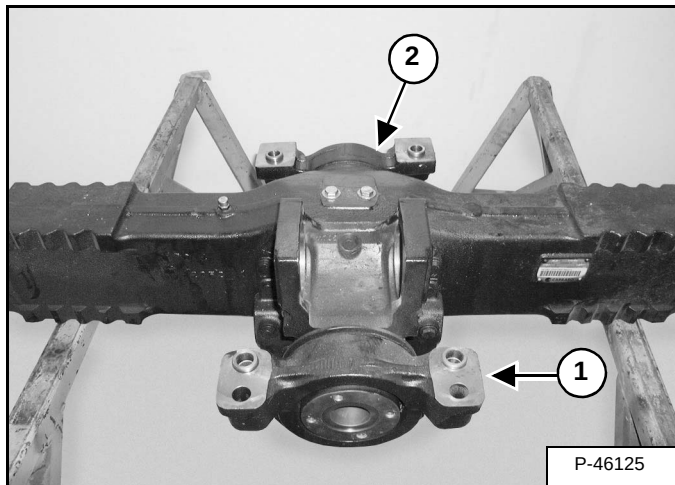

Install the front (Item 1) and rear (Item 2) **[Figure 40-21-150]** mount brackets on the axle housing.

Figure 40-21-151

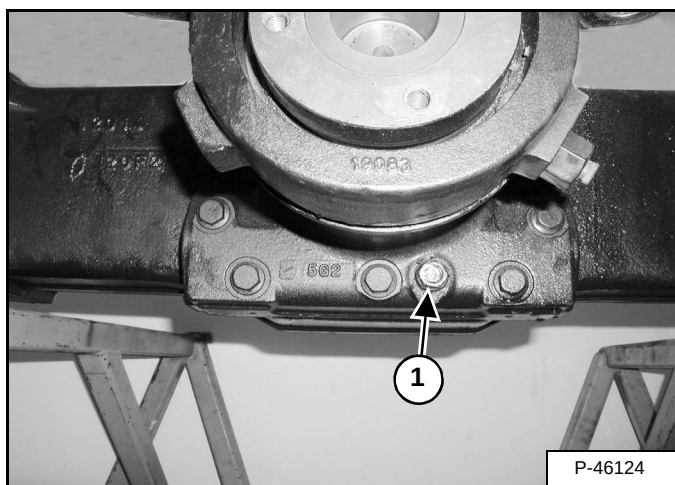


Install the plug (Item 1 **[Figure 40-21-151]**) in the axle housing.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Axle Housing/Drive Axle Assembly

Figure 40-21-152

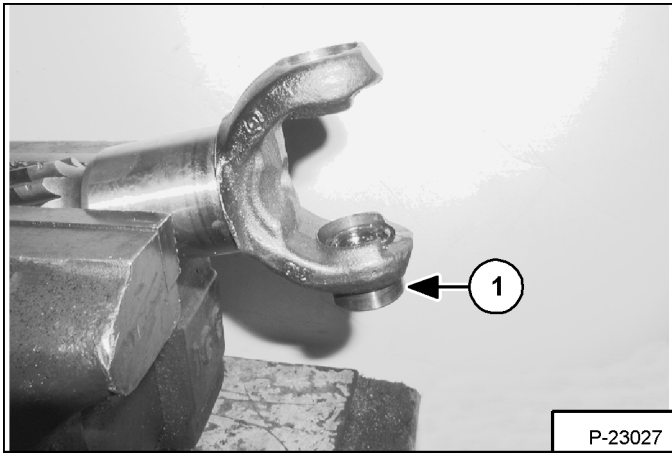


Partially install a new bearing cup (Item 1) [Figure 40-21-152] into the yoke.

Figure 40-21-153

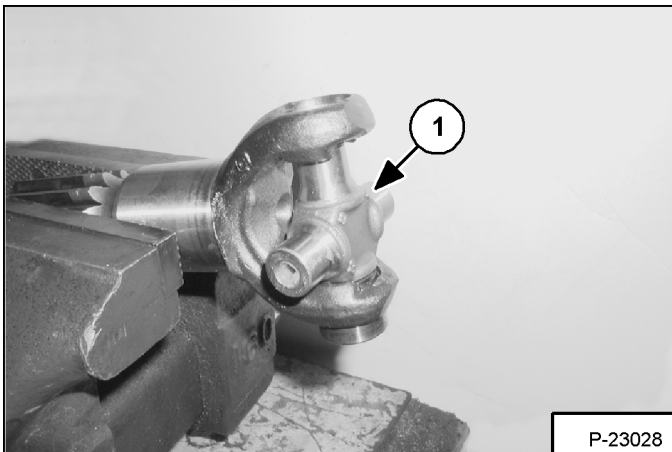


Install the cross (Item 1) [Figure 40-21-153] into the bearing cup.

Figure 40-21-154

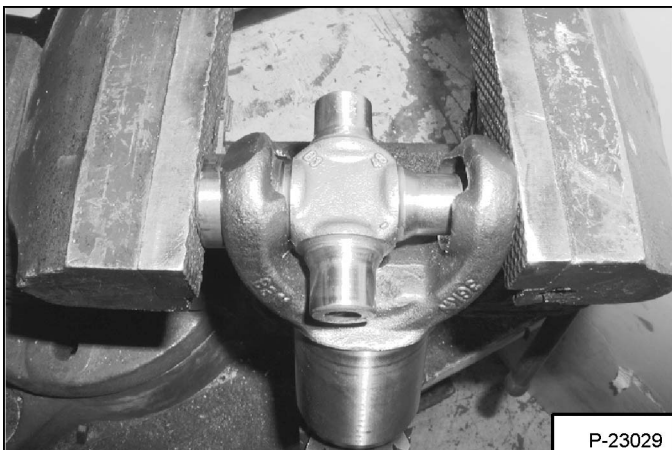

Press the bearing cup into the yoke [Figure 40-21-154].

Figure 40-21-155

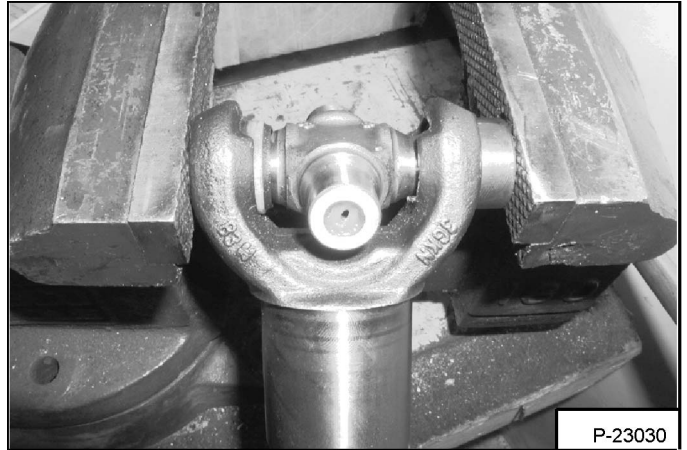

Install the second bearing cup into the yoke and press onto the cross [Figure 40-21-155].

NOTE: Use care not to lose or drop any needle bearings out of position.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Axle Housing/Drive Axle Assembly (Cont'd)

Figure 40-21-156




Fully press the two bearing cups into the drive shaft yoke [Figure 40-21-156].

Figure 40-21-157

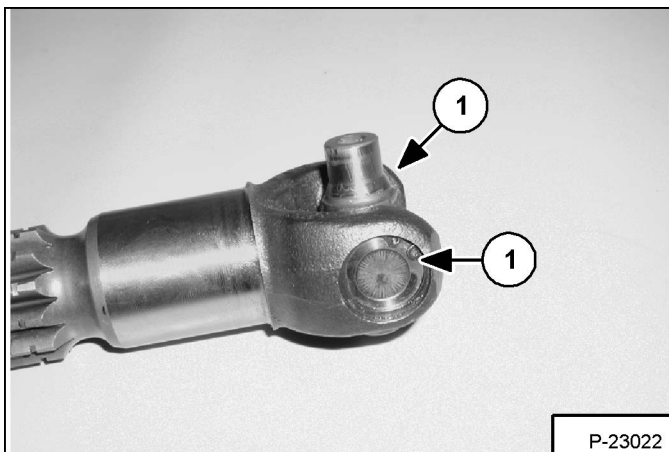


Install the two snap rings (Item 1) [Figure 40-21-157].

Figure 40-21-158

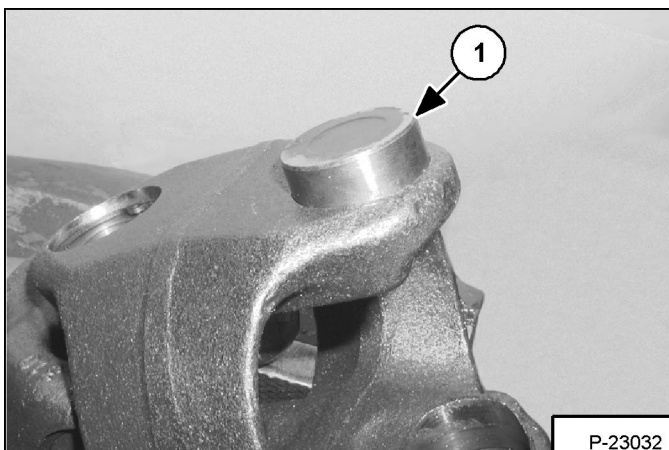

Partially install a new bearing cup (Item 1) [Figure 40-21-158] into the yoke.

Figure 40-21-159

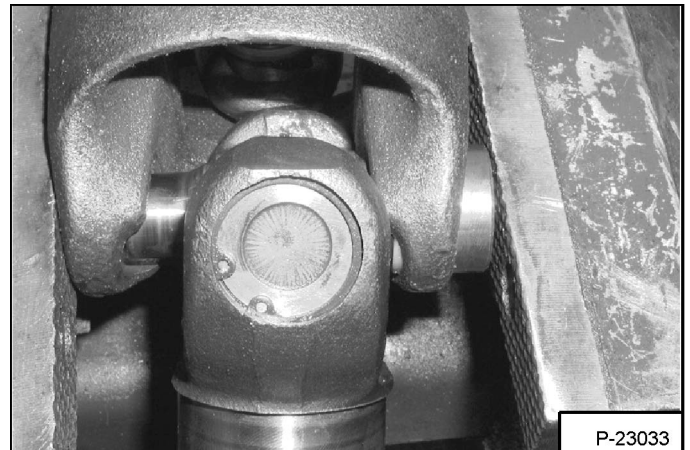


Install the cross/shaft assembly into the bearing cup [Figure 40-21-159].

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Axle Housing/Drive Axle Assembly (Cont'd)


Figure 40-21-160

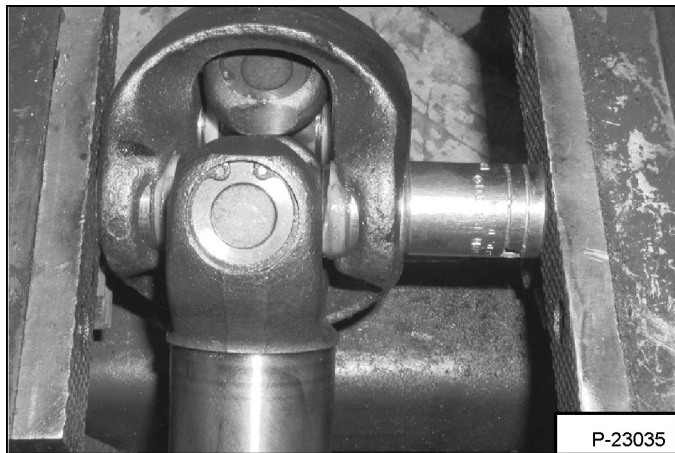

Install the second bearing cup into the yoke and press onto the cross **[Figure 40-21-160]**.


NOTE: Use care not to lose or drop any needle bearings out of position.

Figure 40-21-161

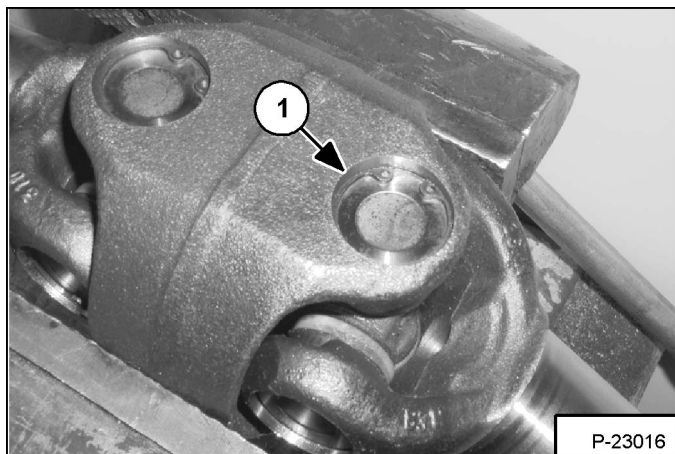

Make sure the bearing cups are fully seated and install both snap rings (Item 1) **[Figure 40-21-161]**.

Figure 40-21-162

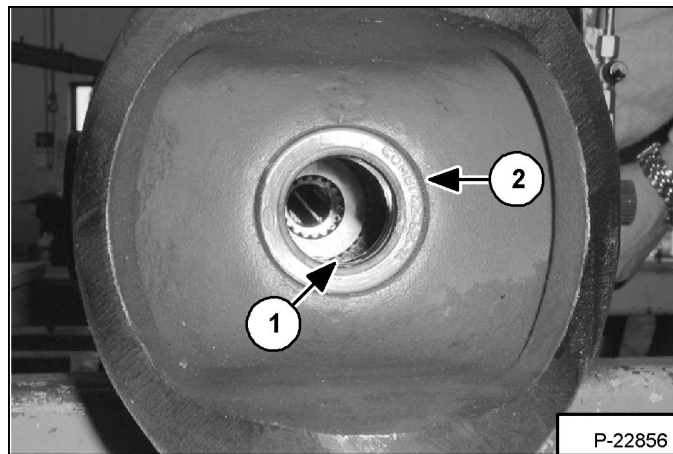

Install a new bushing (Item 1) and seal (Item 2) **[Figure 40-21-162]** into the axle housing.

Lightly lubricate the new seal and bushing.

Figure 40-21-163



Install the drive axle into the axle housing aligning the shaft with the splines **[Figure 40-21-163]**.

NOTE: Use care not to damage the seal.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Steering Knuckle Assembly

Figure 40-21-164



Install the bushing (Item 1) [Figure 40-21-164] into the knuckle housing.

Figure 40-21-165

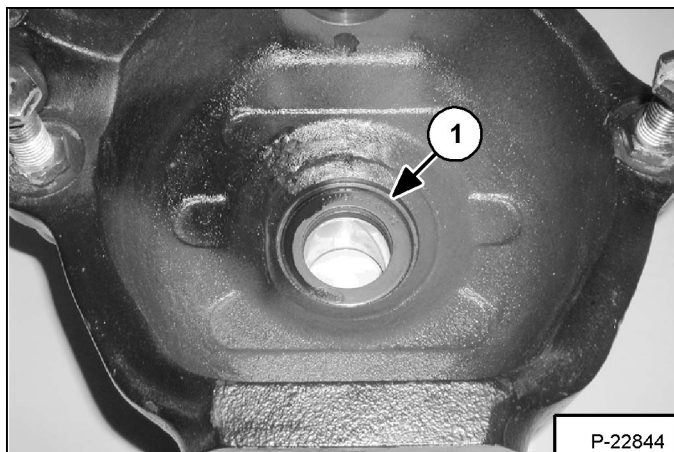


Install a new seal (Item 1) [Figure 40-21-165] into the knuckle housing.

Figure 40-21-166



Figure 40-21-167

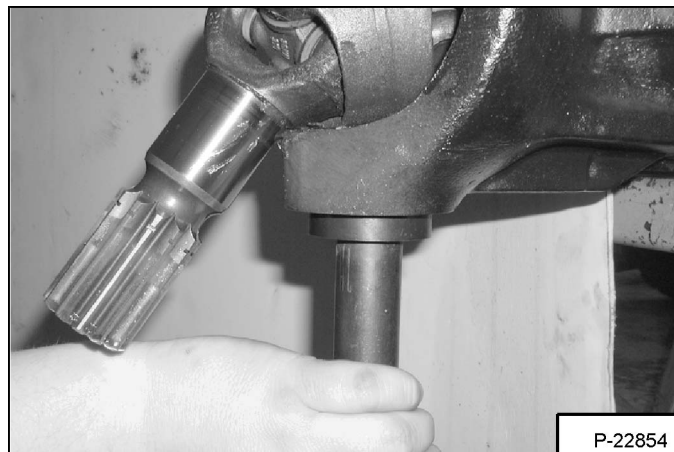


Install the bushings into the top and bottom of the axle [Figure 40-21-166] & [Figure 40-21-167].

NOTE: The cupped bushing goes on the bottom.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Steering Knuckle Assembly (Cont'd)

Figure 40-21-168

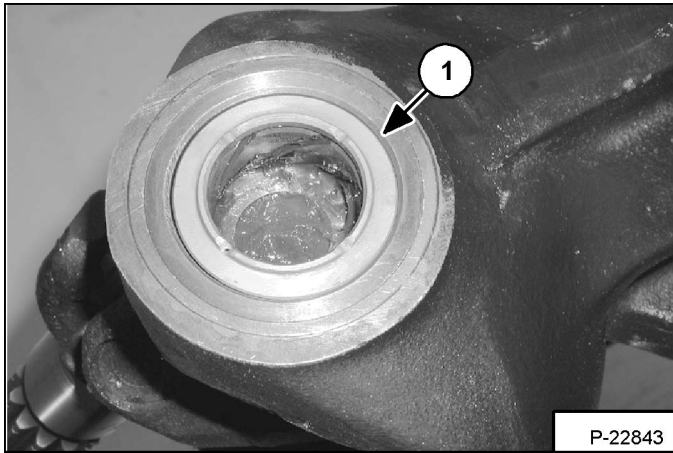

Install the spacer washer (Item 1) [Figure 40-21-168] on the top bushing.


Figure 40-21-169

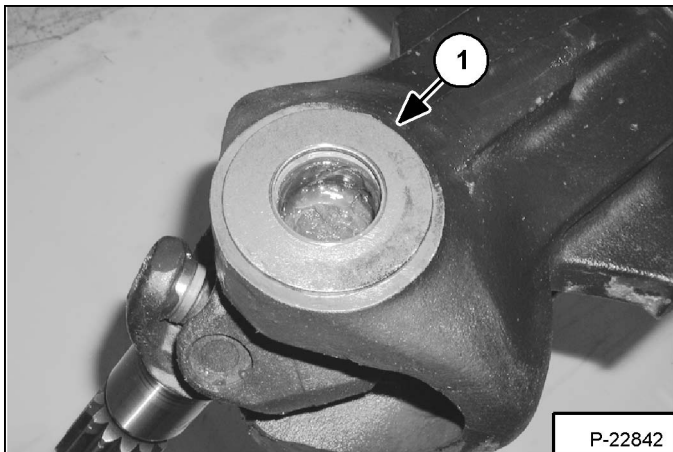

Install the Belleville washers (Item 1) [Figure 40-21-169] on the top and bottom bushing.


NOTE: The larger Belleville washer is on top.

Figure 40-21-170

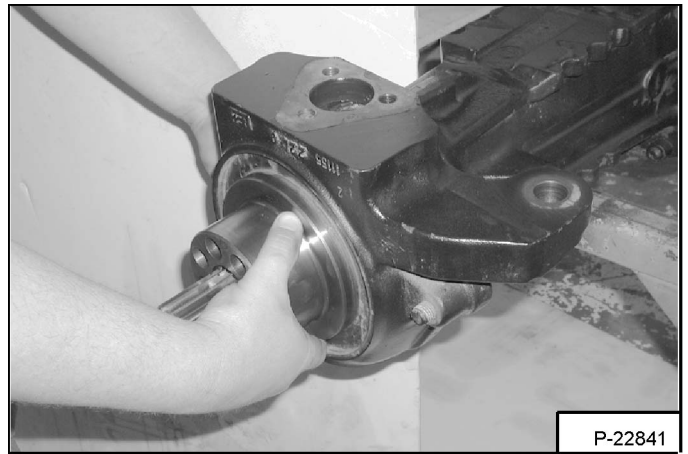

Install the knuckle assembly onto the axle [Figure 40-21-170]. (Both sides)

Figure 40-21-171

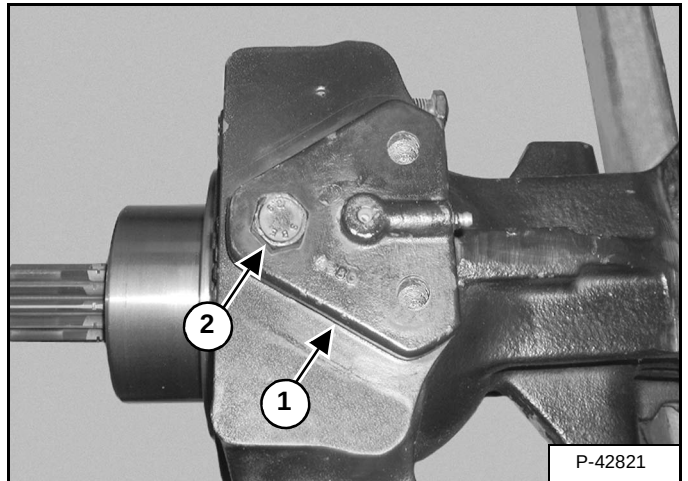


Install the upper king pin (Item 1) and bolt (Item 2) [Figure 40-21-171]. Tighten to 140 ft.-lbs. (190 Nm) torque. (Both sides)

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Steering Knuckle Assembly (Cont'd)

Figure 40-21-172

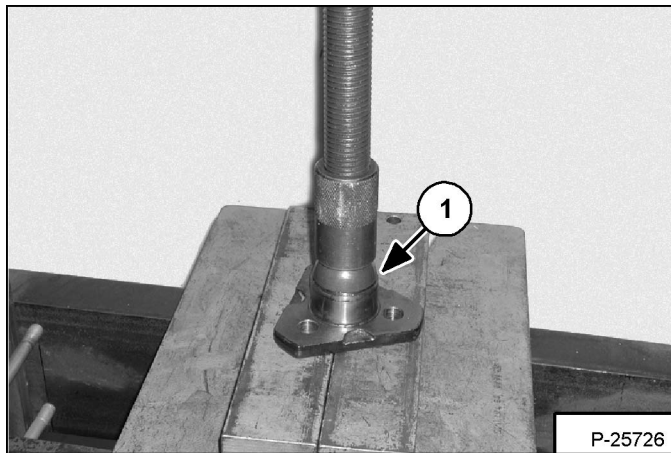

Place the lower king pin in a vise or press and install the ball bearing (Item 1) [Figure 40-21-172] onto the king pin shaft until it is fully seated.

Figure 40-21-173

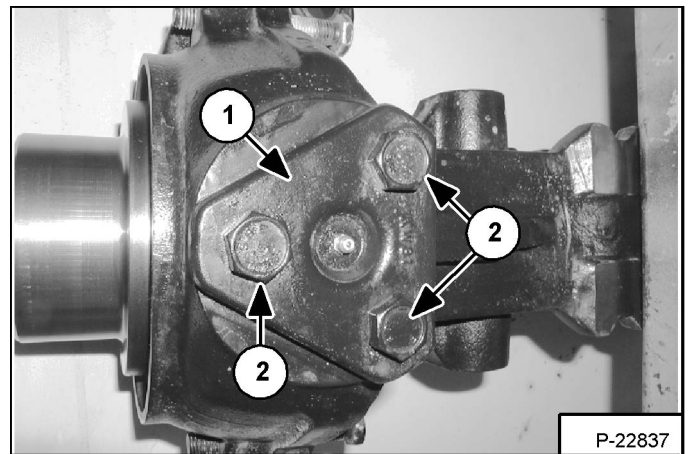


Install the lower king pin (Item 1) and three bolts (Item 2) [Figure 40-21-173]. Tighten to 140 ft.-lbs. (190 Nm) torque. (Both sides)

Lubricate the upper and lower king pins.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Wheel Hub Assembly

Figure 40-21-174

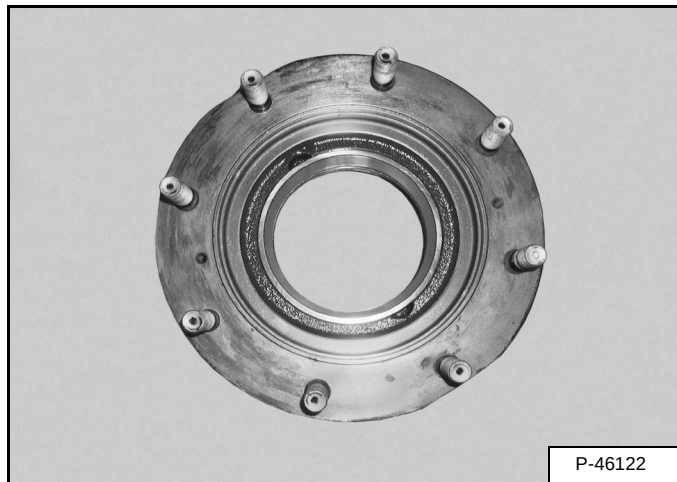


Install both bearing races (Item 1) [Figure 40-21-174] into the hub.

Figure 40-21-175




Lightly lubricate the seal (Item 1) [Figure 40-21-175] and install into the hub.

Figure 40-21-176

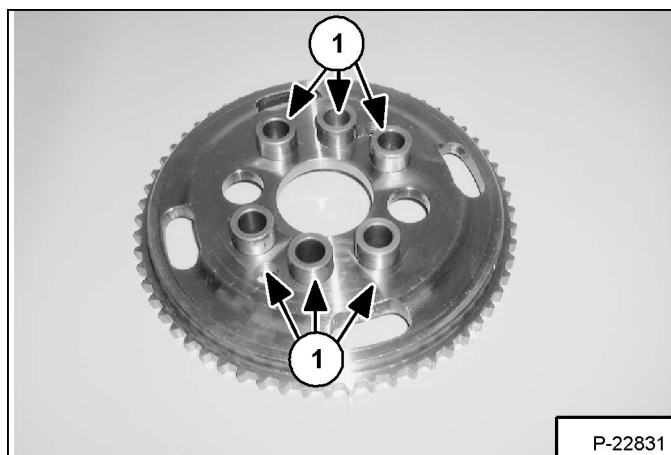

Install the six bushings (Item 1) [Figure 40-21-176] into the gear.

Figure 40-21-177

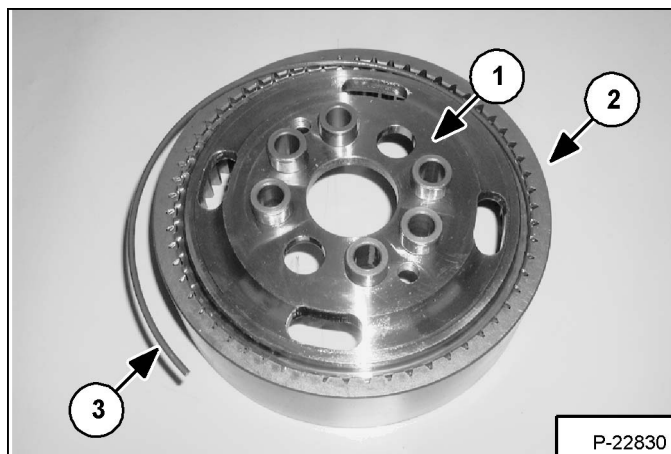


Install the gear (Item 1) into the ring gear (Item 2) [Figure 40-21-177].

Install the retainer ring (Item 3) [Figure 40-21-177] into the groove in the ring gear.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Wheel Hub Assembly (Cont'd)

Figure 40-21-178

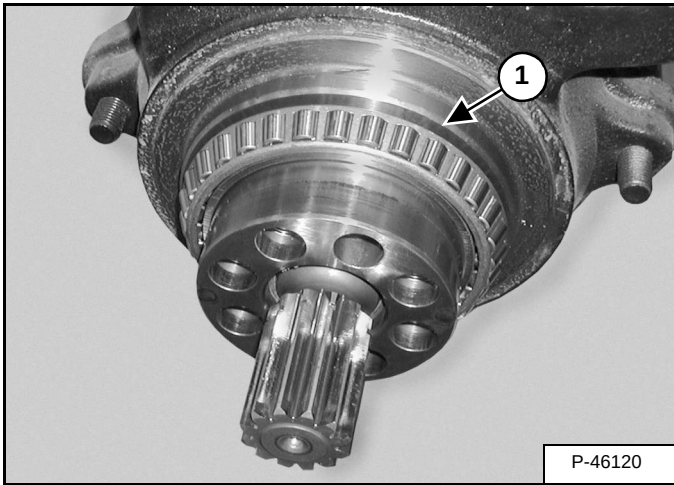


Install the inner bearing (Item 1) [Figure 40-21-178] onto the steering knuckle. (Both sides)

Figure 40-21-179

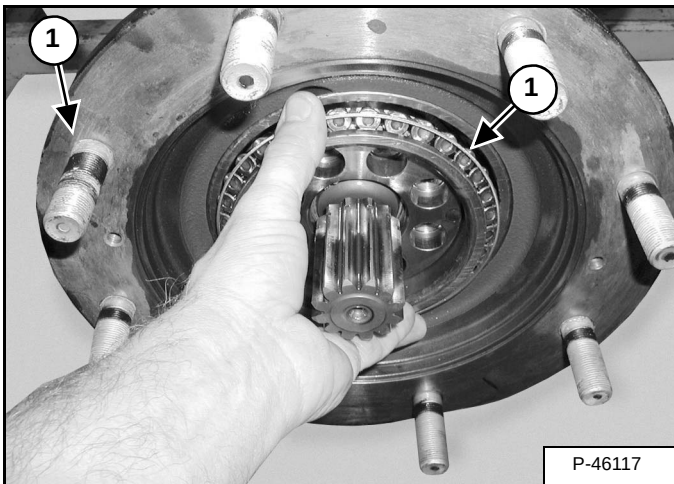


Install the hub assembly (Item 1) and outer bearing (Item 2) [Figure 40-21-179] onto the steering knuckle. (Both sides)

Figure 40-21-180

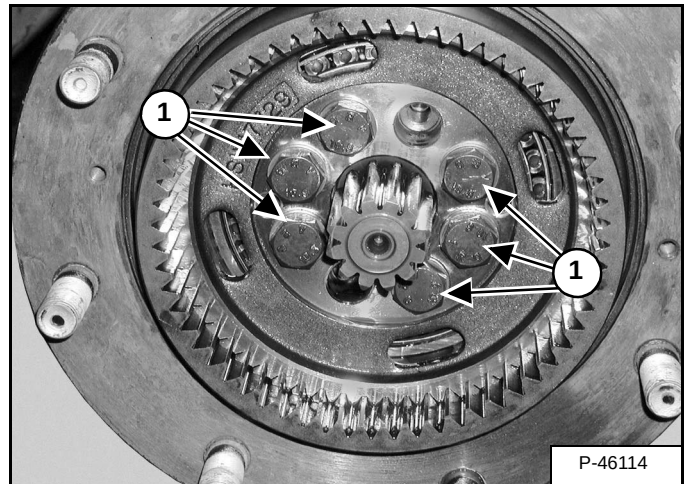

Install the ring gear assembly (Item 1) onto the steering knuckle. Install the six mounting bolts (Item 2) [Figure 40-21-180] and tighten to 88 ft.-lbs. (120 Nm) torque. (Both sides)

Figure 40-21-181

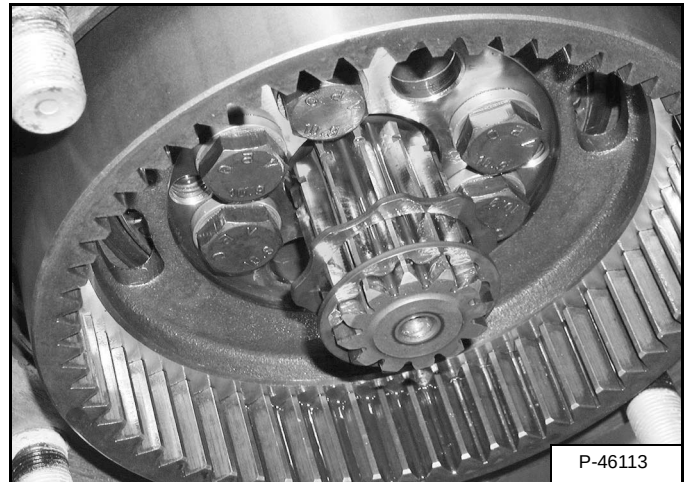


Install the spacer (Item 1) and thrust washer (Item 2) [Figure 40-21-181] on the axle shaft. (Both sides)

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Wheel Hub Assembly (Cont'd)


Figure 40-21-182

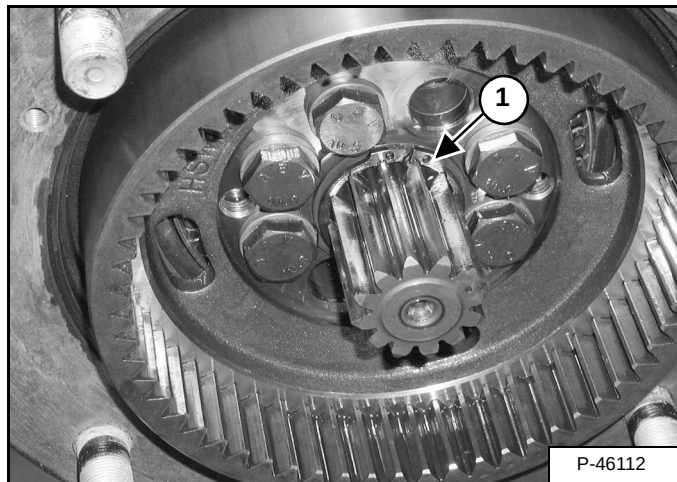

Install the snap ring (Item 1) [Figure 40-21-182] onto the axle shaft.


Planetary Carrier Assembly

Figure 40-21-183

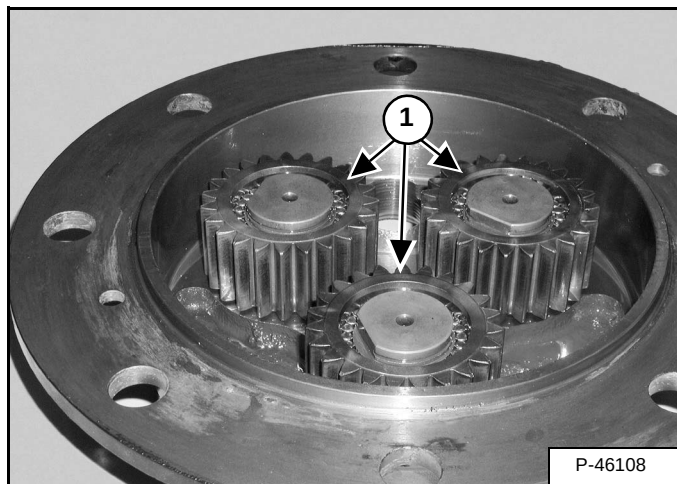


Using grease to hold the needle bearings in position, install the gears onto the shaft [Figure 40-21-183].

Figure 40-21-184

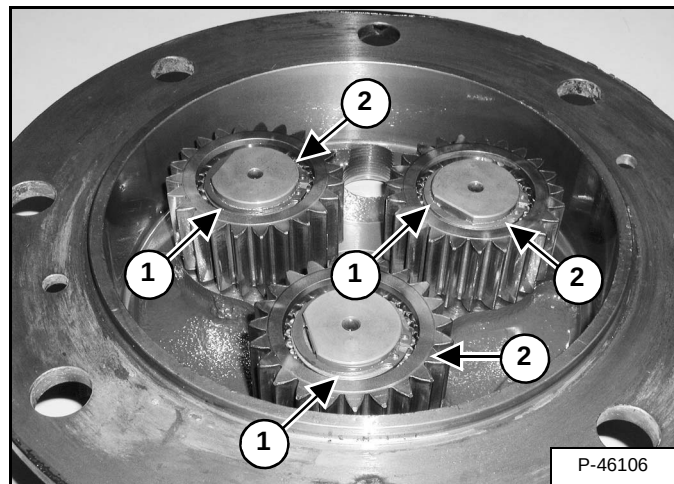

Install the thrust washers (Item 1) and snap rings (Item 2) [Figure 40-21-184].

Figure 40-21-185

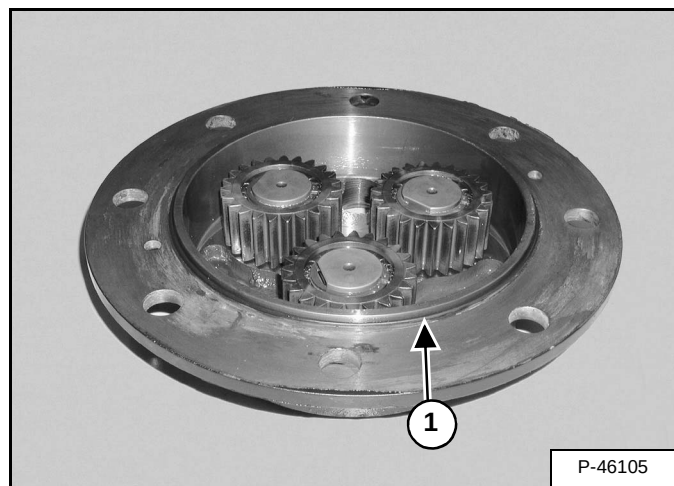


Install a new O-ring (Item 1) [Figure 40-21-185] onto the planetary carrier.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Planetary Carrier Assembly (Cont'd)

Figure 40-21-186

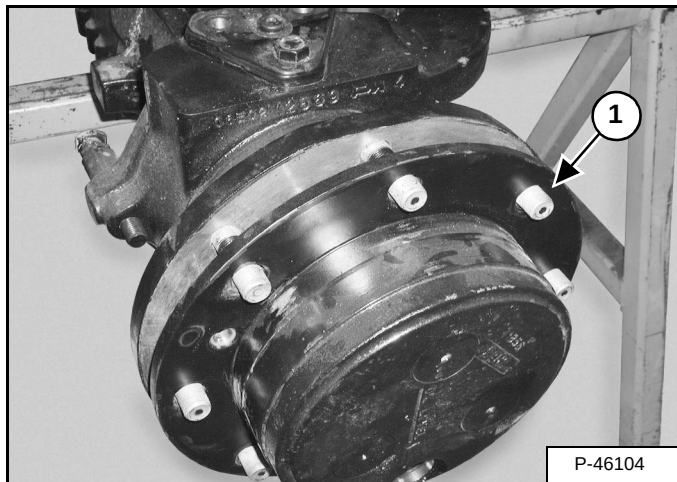


Install the planetary carrier (Item 1) **[Figure 40-21-186]**. (Both sides)

Figure 40-21-187

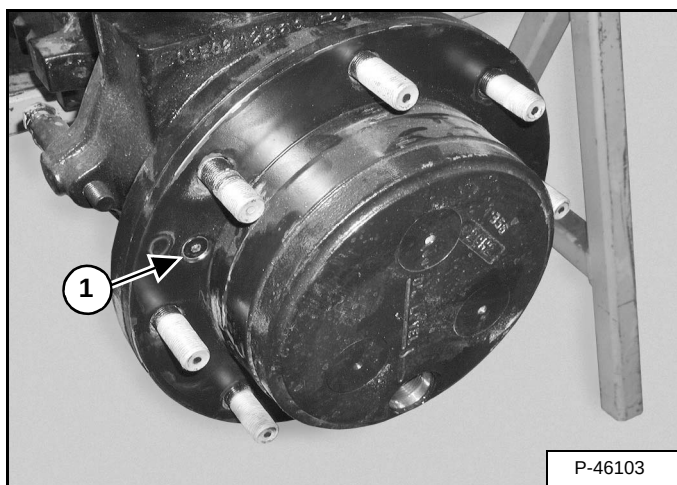

Install the two screws (Item 1) **[Figure 40-21-187]** and tighten to 18 ft.-lbs. (25 Nm) torque. (Both sides)

Figure 40-21-188

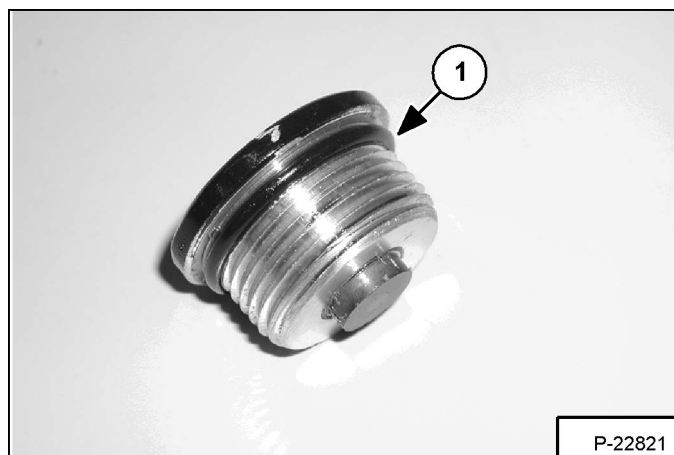

Install a new O-ring (Item 1) **[Figure 40-21-188]** onto the drain plug.

See "AXLES (FRONT AND REAR) (For S/N 362811001 - 362812000, S/N 362911001 - 362912000)" on page 10-110-1 for filling the axle assembly and planetary carriers with fluid.



Bobcat®


AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above)

General Information

For photo clarity, the following axle procedures are done with the complete axle assembly removed from the machine, although the planetary carrier, wheel hub, steering knuckle and drive axle procedures may be done with the axle assembly installed in the machine. For complete axle repair, the following must be done.

- Rear Axle removal. (See "Removal" on page 40-91-1.)
- Rear steering cylinder removal. (See "Removal And Installation" on page 20-62-1.)


Planetary Carrier Parts Identification

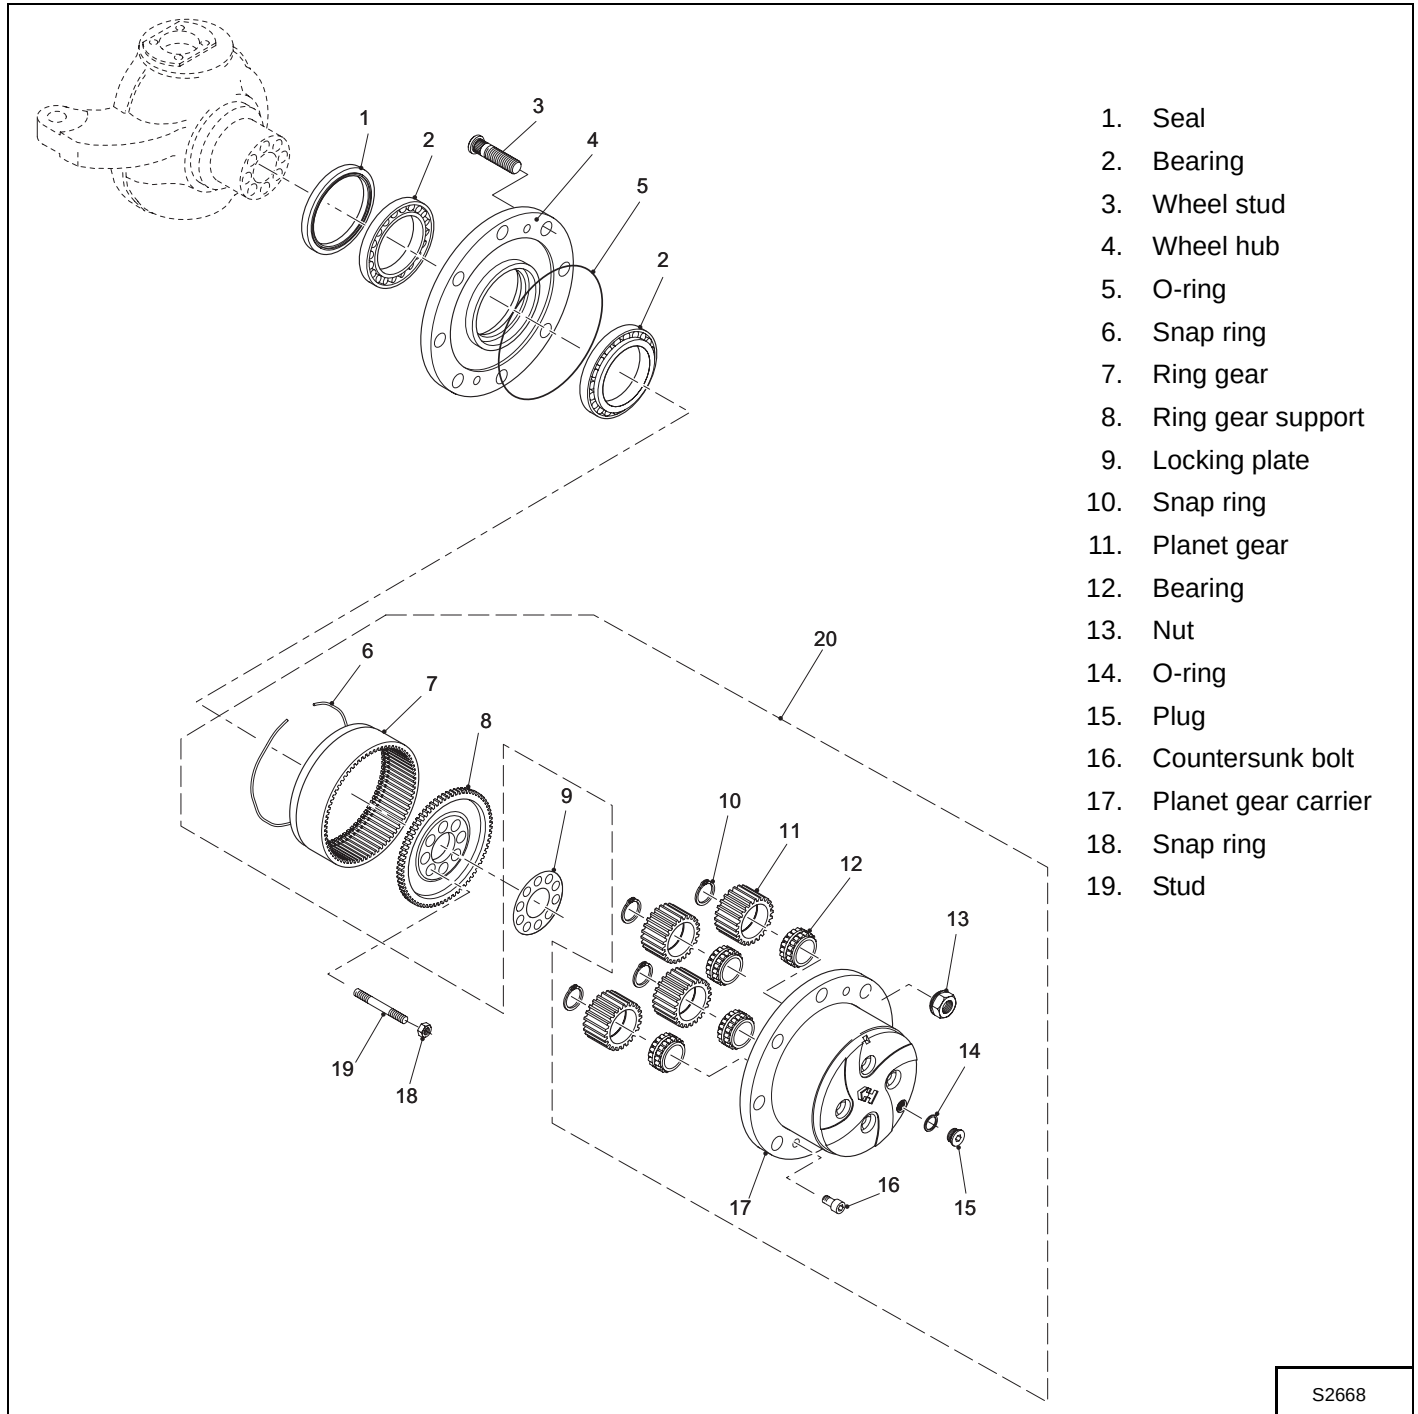

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Planetary Carrier Disassembly

Figure 40-22-1

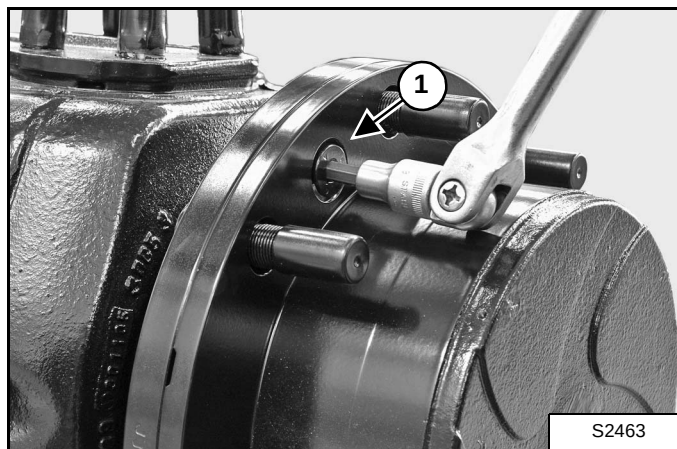


Loosen the securing bolts (Item 1) [Figure 40-22-1] only so that later when you pry the planet gear carrier loose, it does not fall.

Figure 40-40-22-2

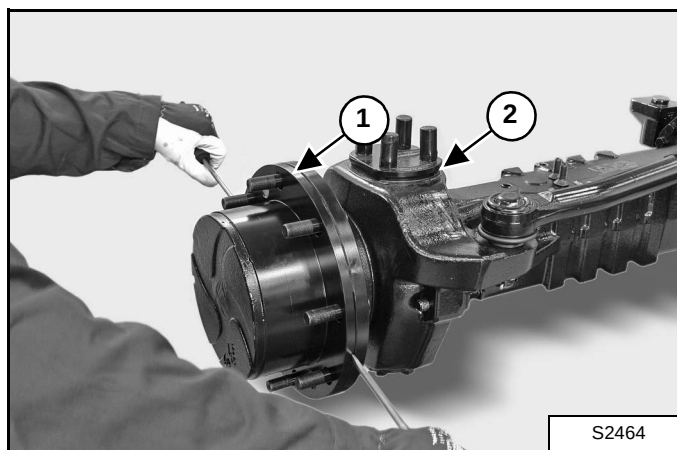


Remove the planet gear carrier (Item 1) from the steering case (Item 2) [Figure 40-40-22-2] by alternatively forcing a screwdriver into the appropriate slots.

Figure 40-22-3

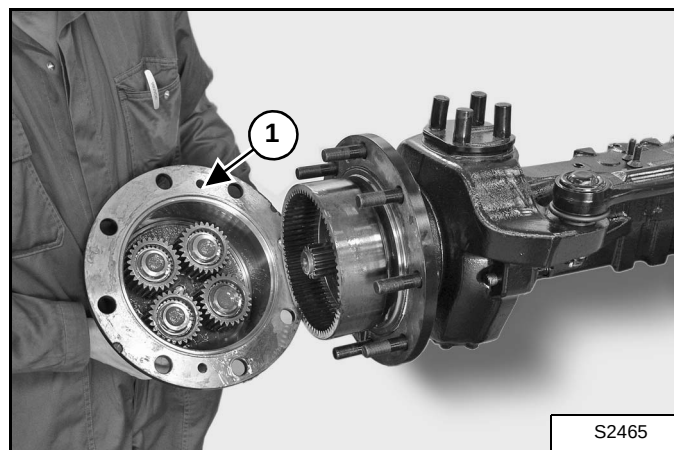

Remove the securing bolts and lift the planet gear carrier (Item 1) [Figure 40-22-3].

Figure 40-22-4

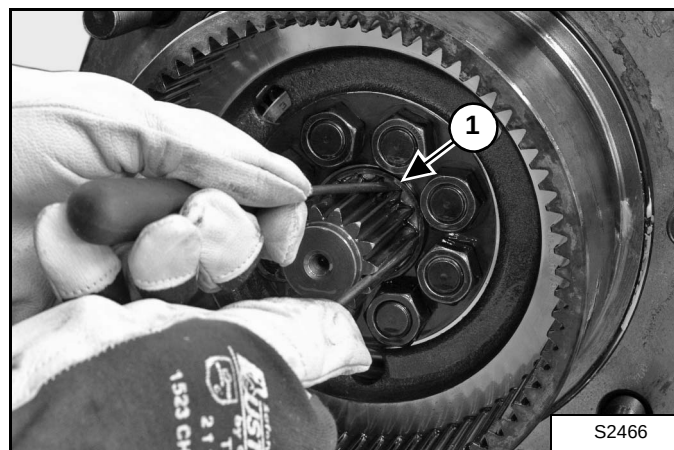


Remove the snap ring (Item 1) [Figure 40-22-4].

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Planetary Carrier Disassembly (Cont'd)

Figure 40-22-5

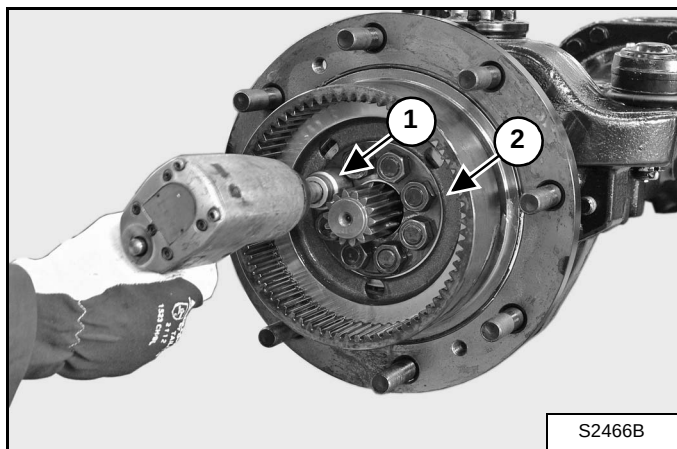


Remove the nuts (Item 1) from the ring gear support (Item 2) [Figure 40-22-5].

Figure 40-22-6

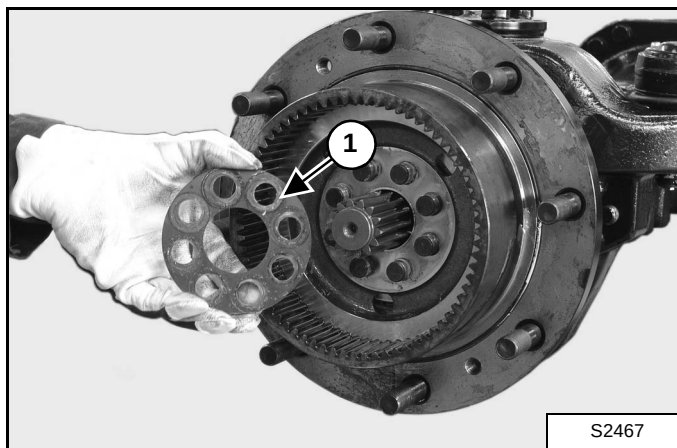


Remove the locking plate (Item 1) [Figure 40-22-6].

Figure 40-22-7

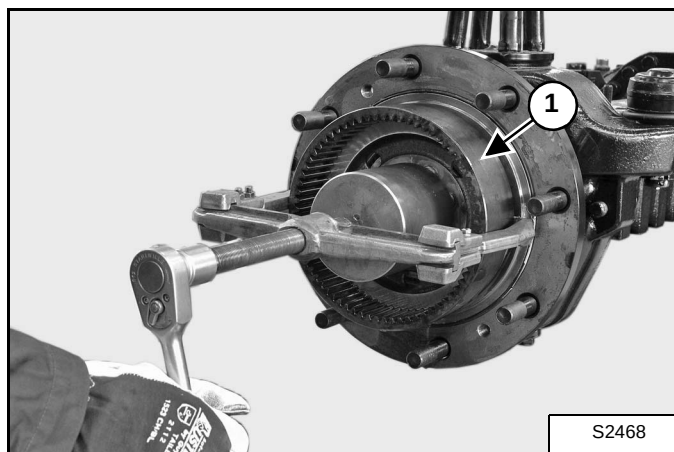

Using a puller, remove the complete ring gear (Item 1) [Figure 40-22-7] by acting on the stud bolts.

Figure 40-22-8

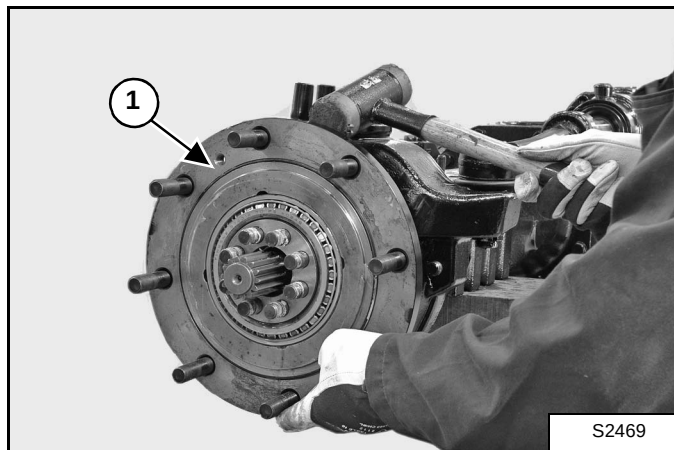


Partially extract the wheel hub (Item 1) [Figure 40-22-8] using a plastic hammer.

NOTE: Alternately hammer on several equidistant points.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Planetary Carrier Disassembly (Cont'd)

Figure 40-22-9

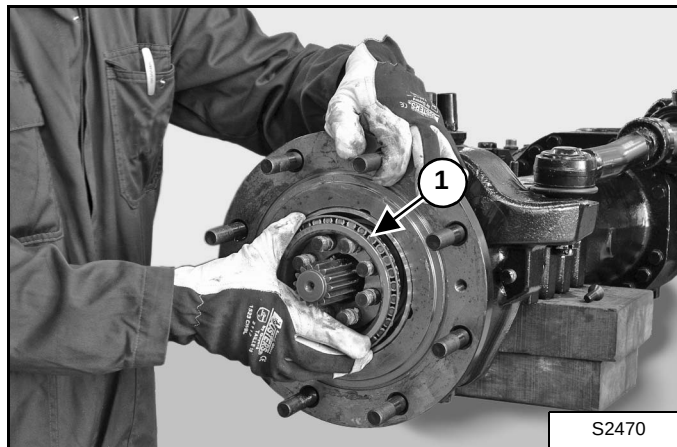


Remove the external bearing (Item 1) [Figure 40-22-9].

Figure 40-22-10

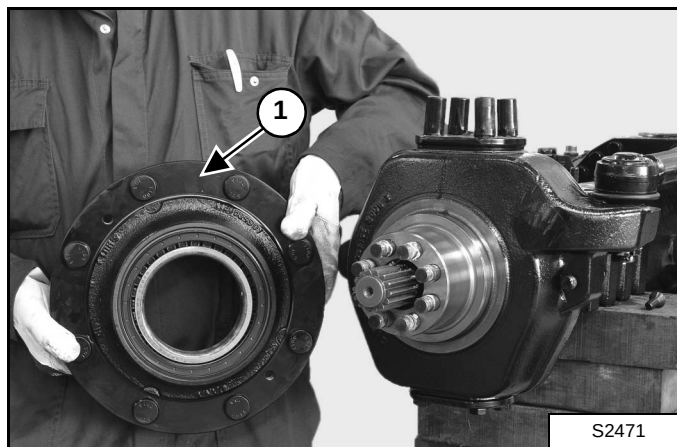


Remove the complete wheel hub (Item 1) [Figure 40-22-10] by hand.

Figure 40-22-11

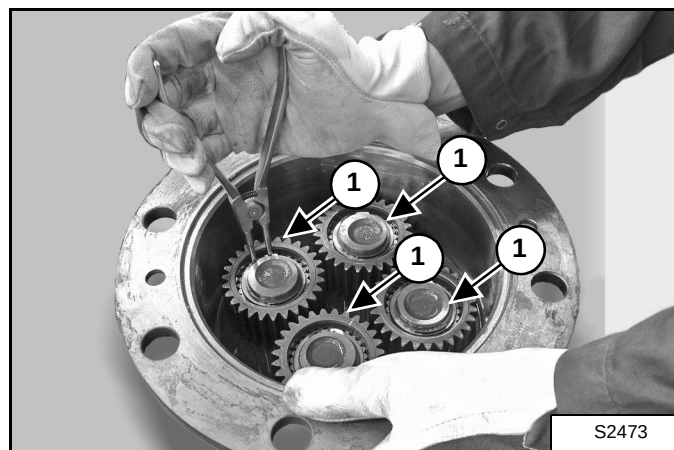

Remove the snap rings (Item 1) [Figure 40-22-11].

Figure 40-22-12

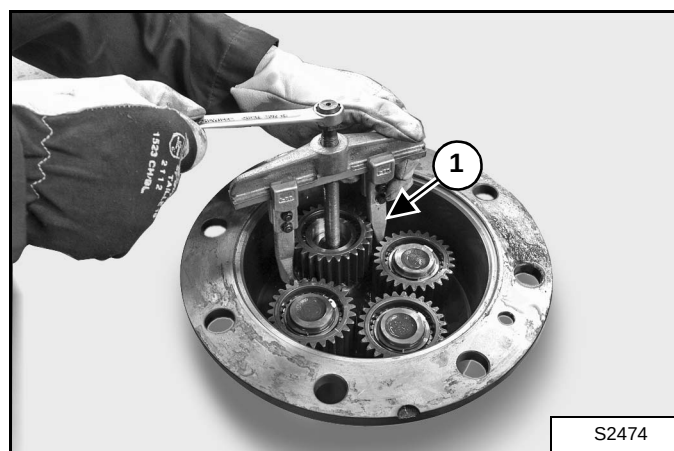


With the help of a puller, remove the planet wheel gears (Item 1) [Figure 40-22-12].

NOTE: Mark the assembly side of the planet wheels.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Planetary Carrier Disassembly (Cont'd)

Figure 40-22-13

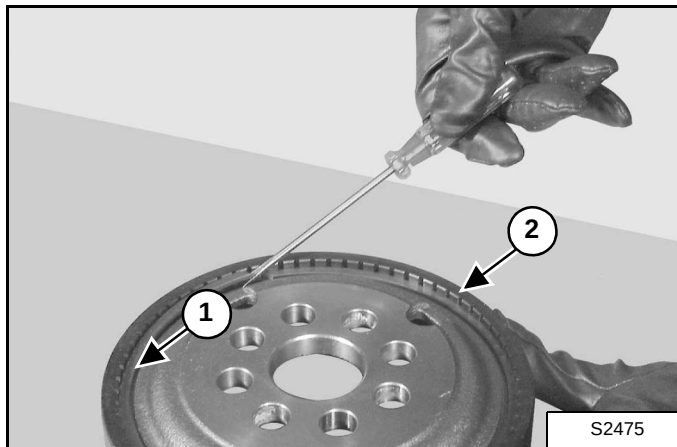


Remove the snap ring (Item 1) from the ring gear (Item 2) [Figure 40-22-13].

Figure 40-22-14

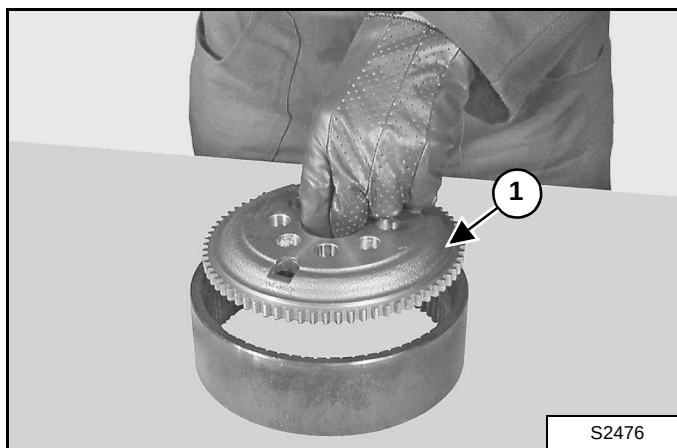


Remove the ring gear support (Item 1) [Figure 40-22-14].

Figure 40-22-15

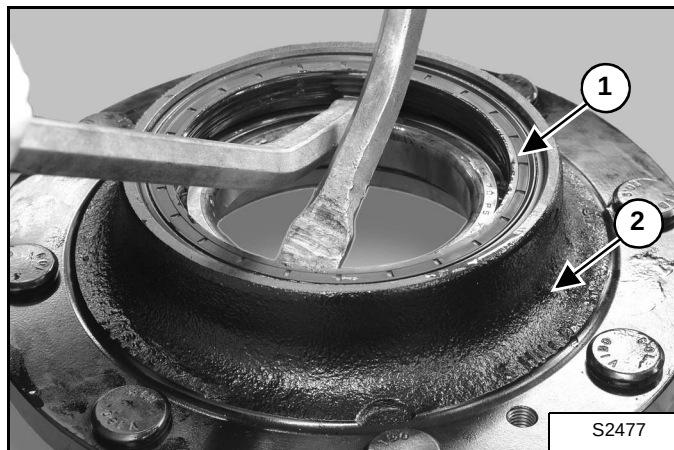

Remove the sealing ring (Item 1) from the wheel hub (Item 2) [Figure 40-22-15].

Figure 40-22-16

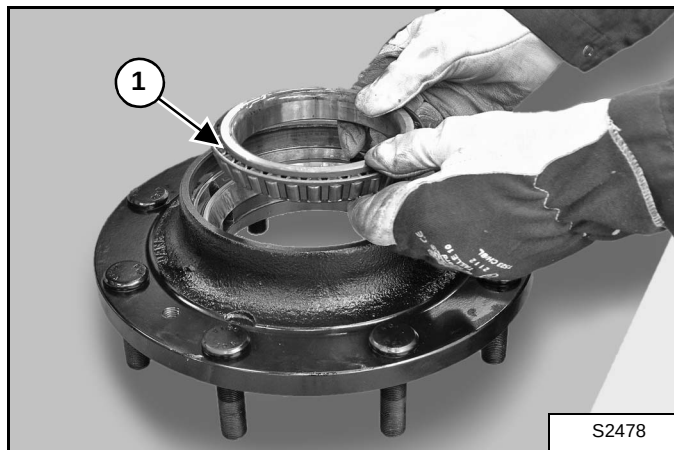

Remove the internal bearing (Item 1) [Figure 40-22-16].

**AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above)
(CONT'D)**

Planetary Carrier Disassembly (Cont'd)


Figure 40-22-17



Remove the external bearing races from the bearing forcing a pin-driver into the appropriate slots on the hub (Item 1) [Figure 40-22-17].

NOTE: Hammer in an alternate way so as to avoid crawling or deformation of the bearing races.

Steering Knuckle and Drive Axle Parts Identification

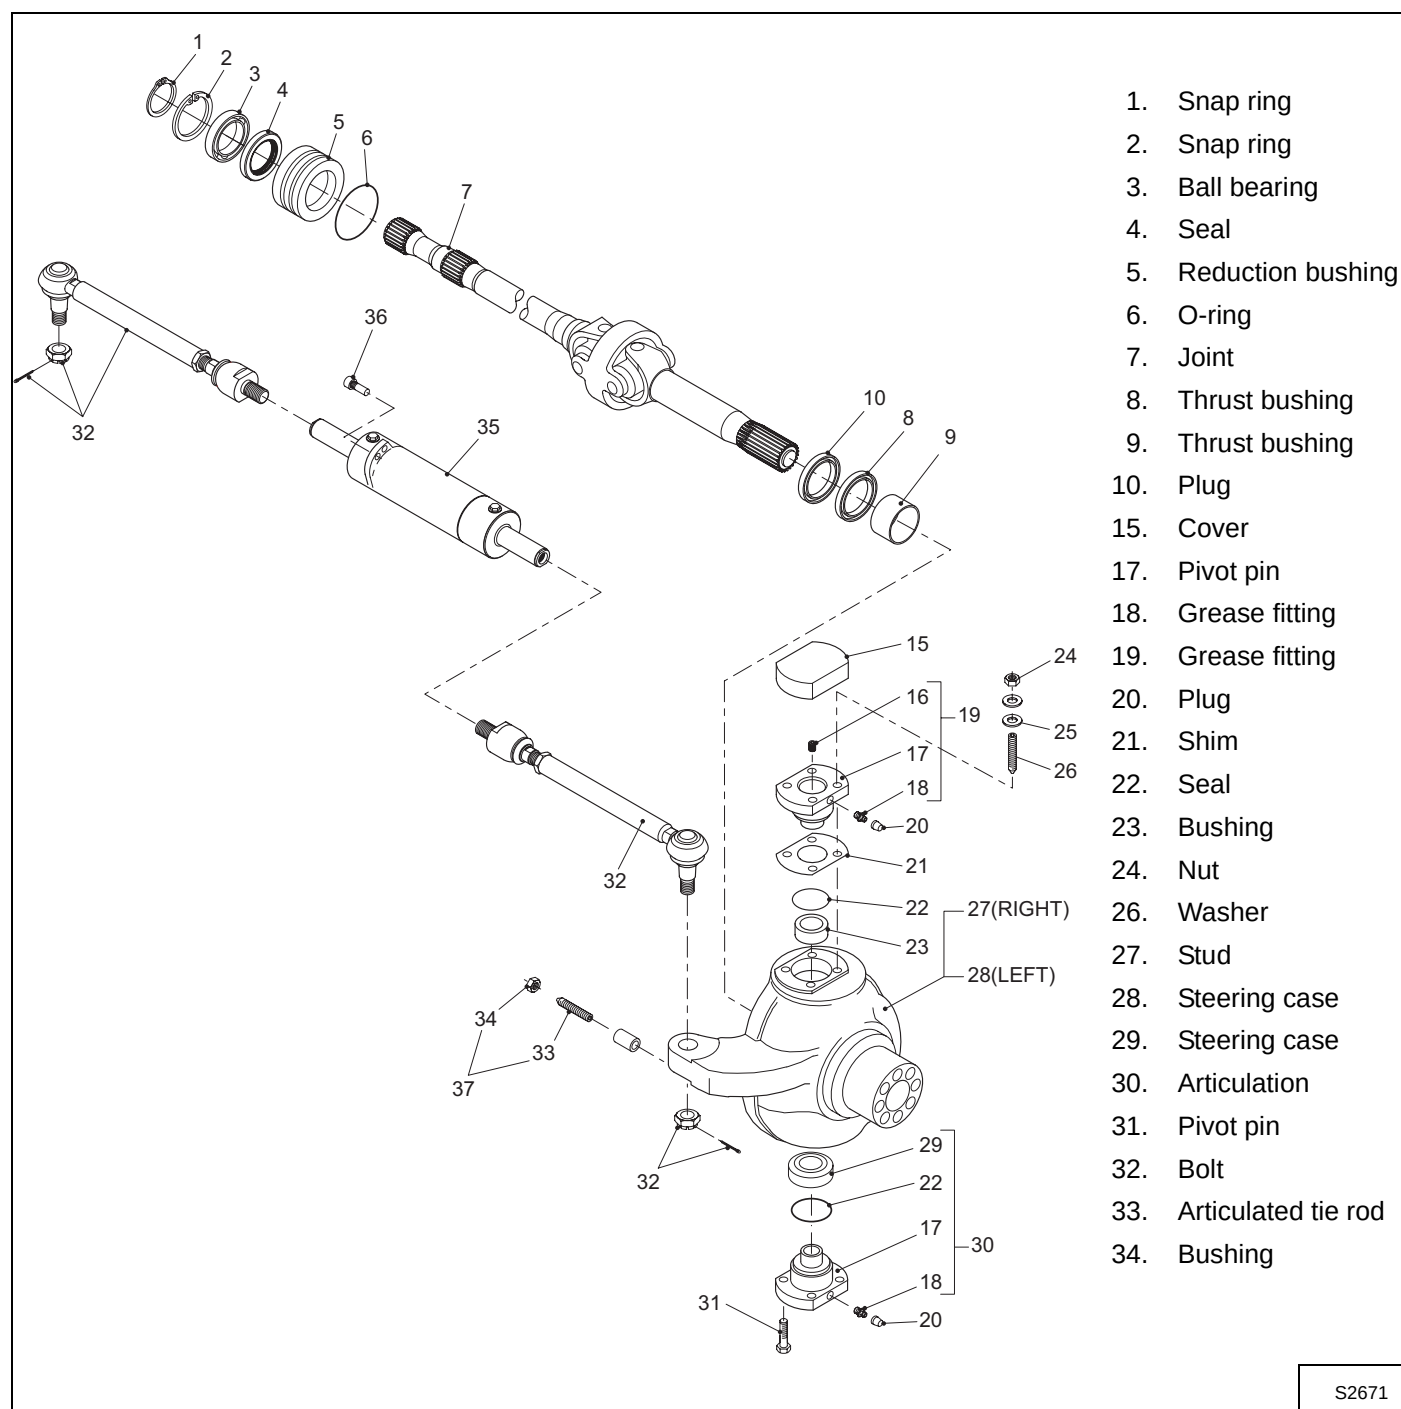


S2671

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Steering Knuckle Disassembly

Figure 40-22-18

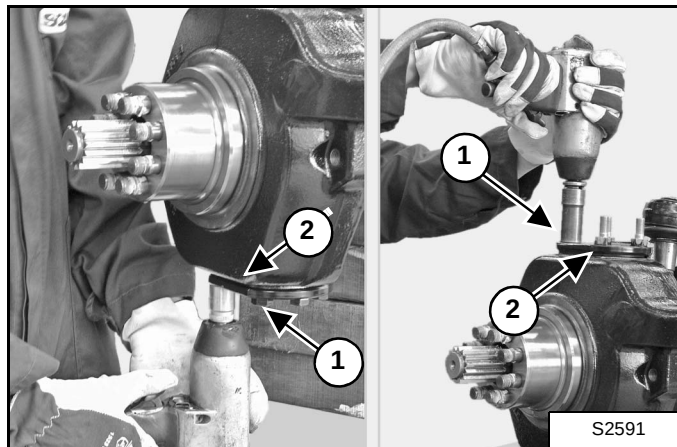


Unloose and remove the fitting screws (Item 1) from the tie rod (Item 2) [Figure 40-22-18].

Figure 40-22-19

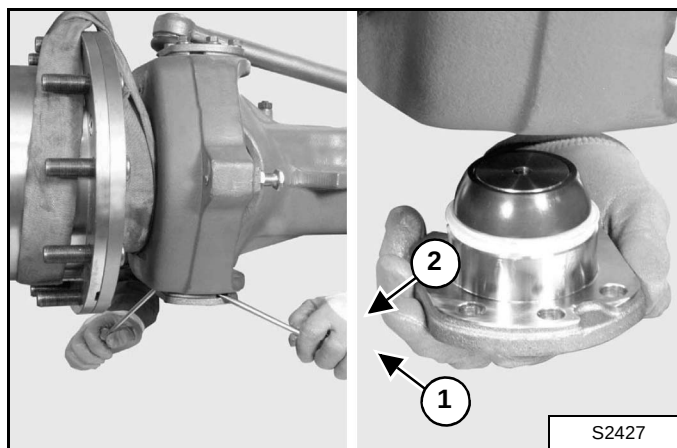


Using two levers, remove the bottom tie rod (Item 1) complete with front sealing ring (Item 2) [Figure 40-22-19].

Figure 40-22-20

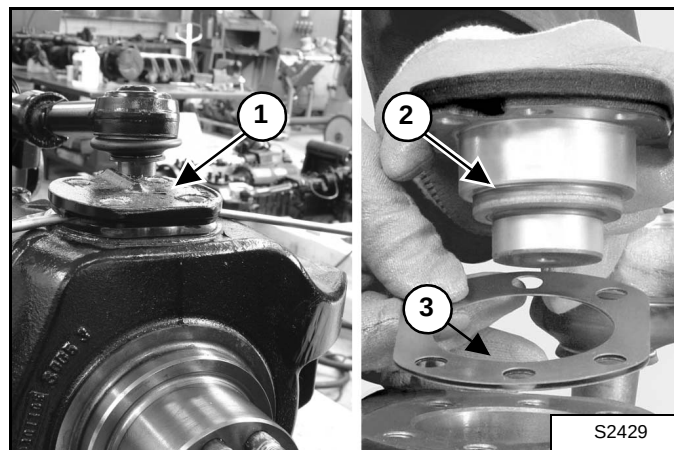

Using two levers, remove the top tie rod (Item 1) complete with front sealing ring (Item 2) and shims (Item 3) [Figure 40-22-20].

Figure 40-22-21

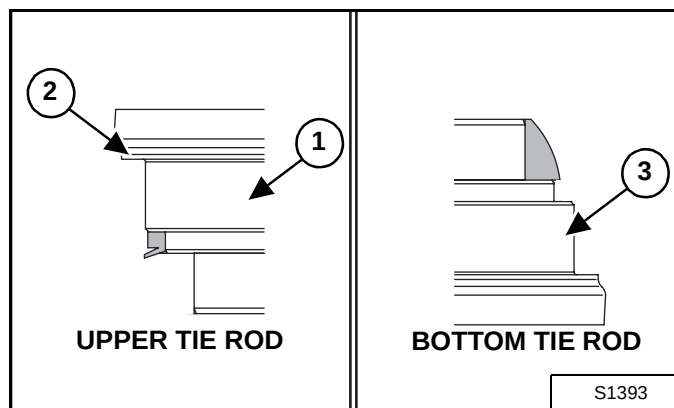


Configuration of the upper (1) tie rod with shims (2) and the bottom tie rod (3) [Figure 40-22-21].

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Steering Knuckle Disassembly (Cont'd)

Figure 40-22-22

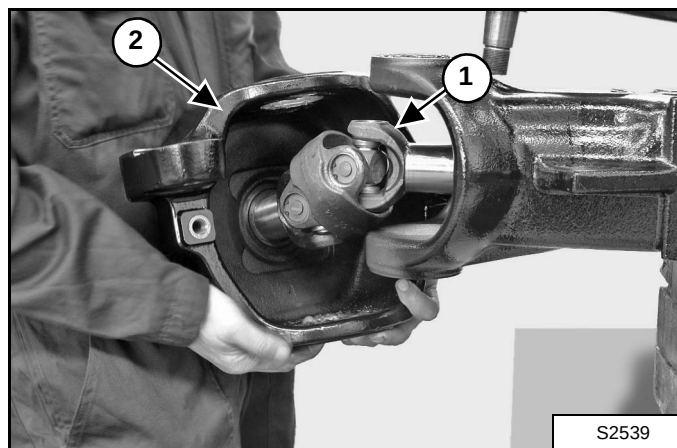

Remove the complete steering case (Item 1) and drive axle (Item 1) [Figure 40-22-22].

Figure 40-22-23

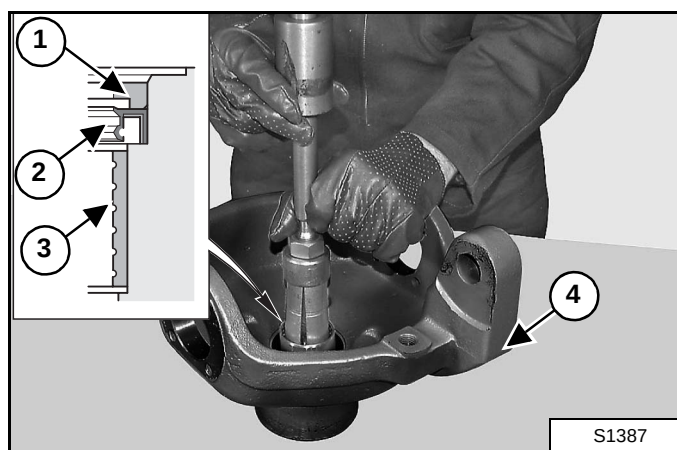


Use a puller to remove the centering ring (Item 1), the sealing ring (Item 2) and the bearing (Item 3) from the steering case (Item 4) [Figure 40-22-23].

NOTE: Note down the orientation of both centering and sealing ring.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Drive Axle Disassembly

Figure 40-22-24

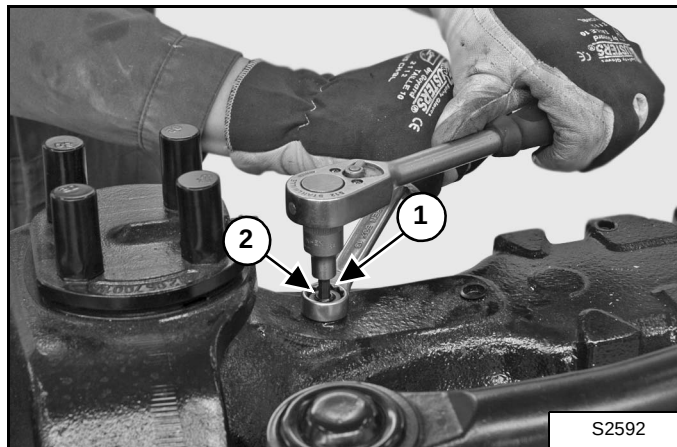

Unloose and remove the top and bottom check nuts (Item 1) from the dowels (Item 2) [Figure 40-22-24].


Figure 40-22-25

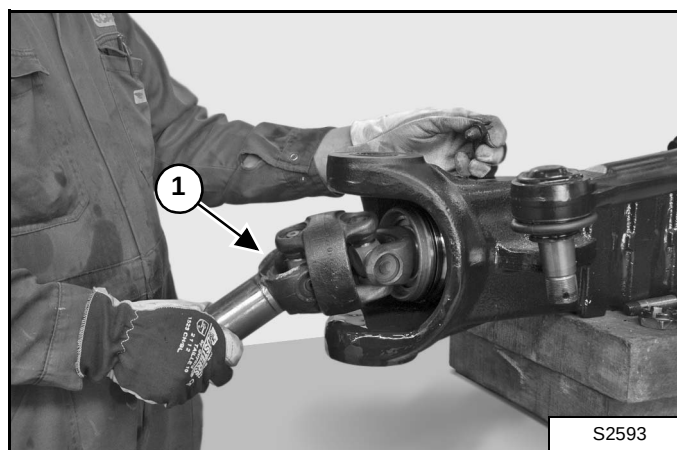

Remove the entire drive axle (Item 1) [Figure 40-22-25].


NOTE: To remove the drive axle use, if necessary, a plastic hammer or a lever.

Figure 40-22-26

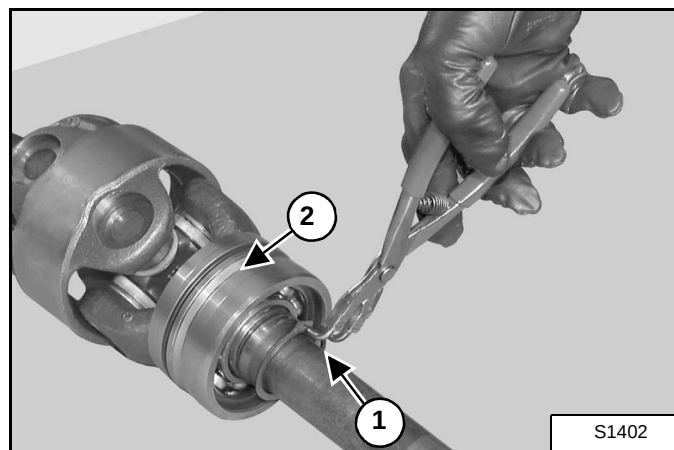

Remove the snap ring (Item 1) from the bushing unit (Item 2) [Figure 40-22-26].

Figure 40-22-27

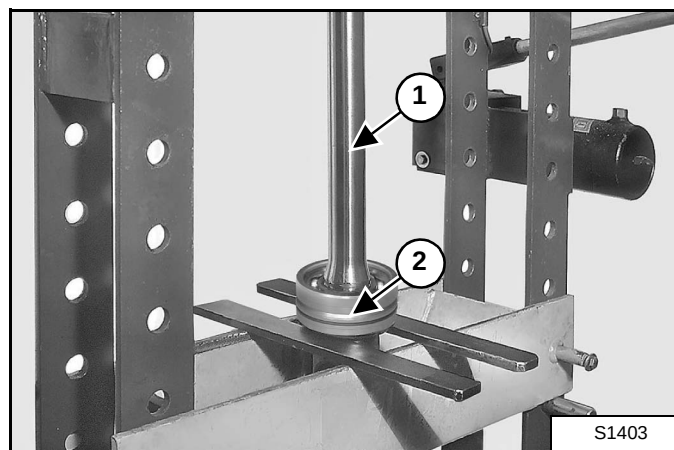


Position the entire drive axle (Item 1) under a press and remove the complete bush (Item 2) [Figure 40-22-27].

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Drive Axle Disassembly (Cont'd)

Figure 40-22-28

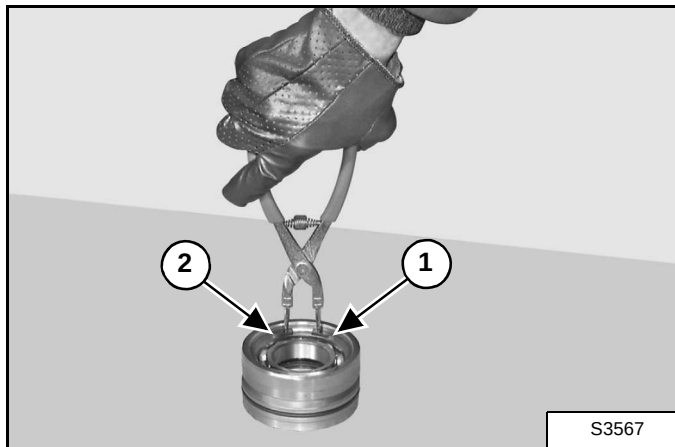

Remove the snap ring (Item 1) from the bearing (Item 2) [Figure 40-22-28].

Figure 40-22-29

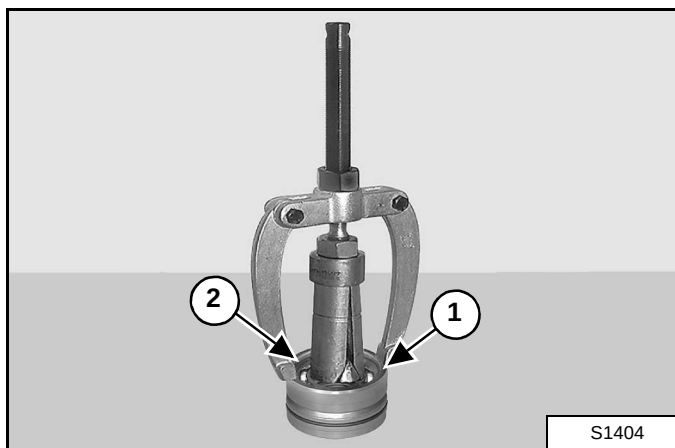


Use a puller to remove the bearing (Item 1), the sealing ring (Item 2) [Figure 40-22-29] and the O-ring.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Brake system Identification

Figure 40-22-30

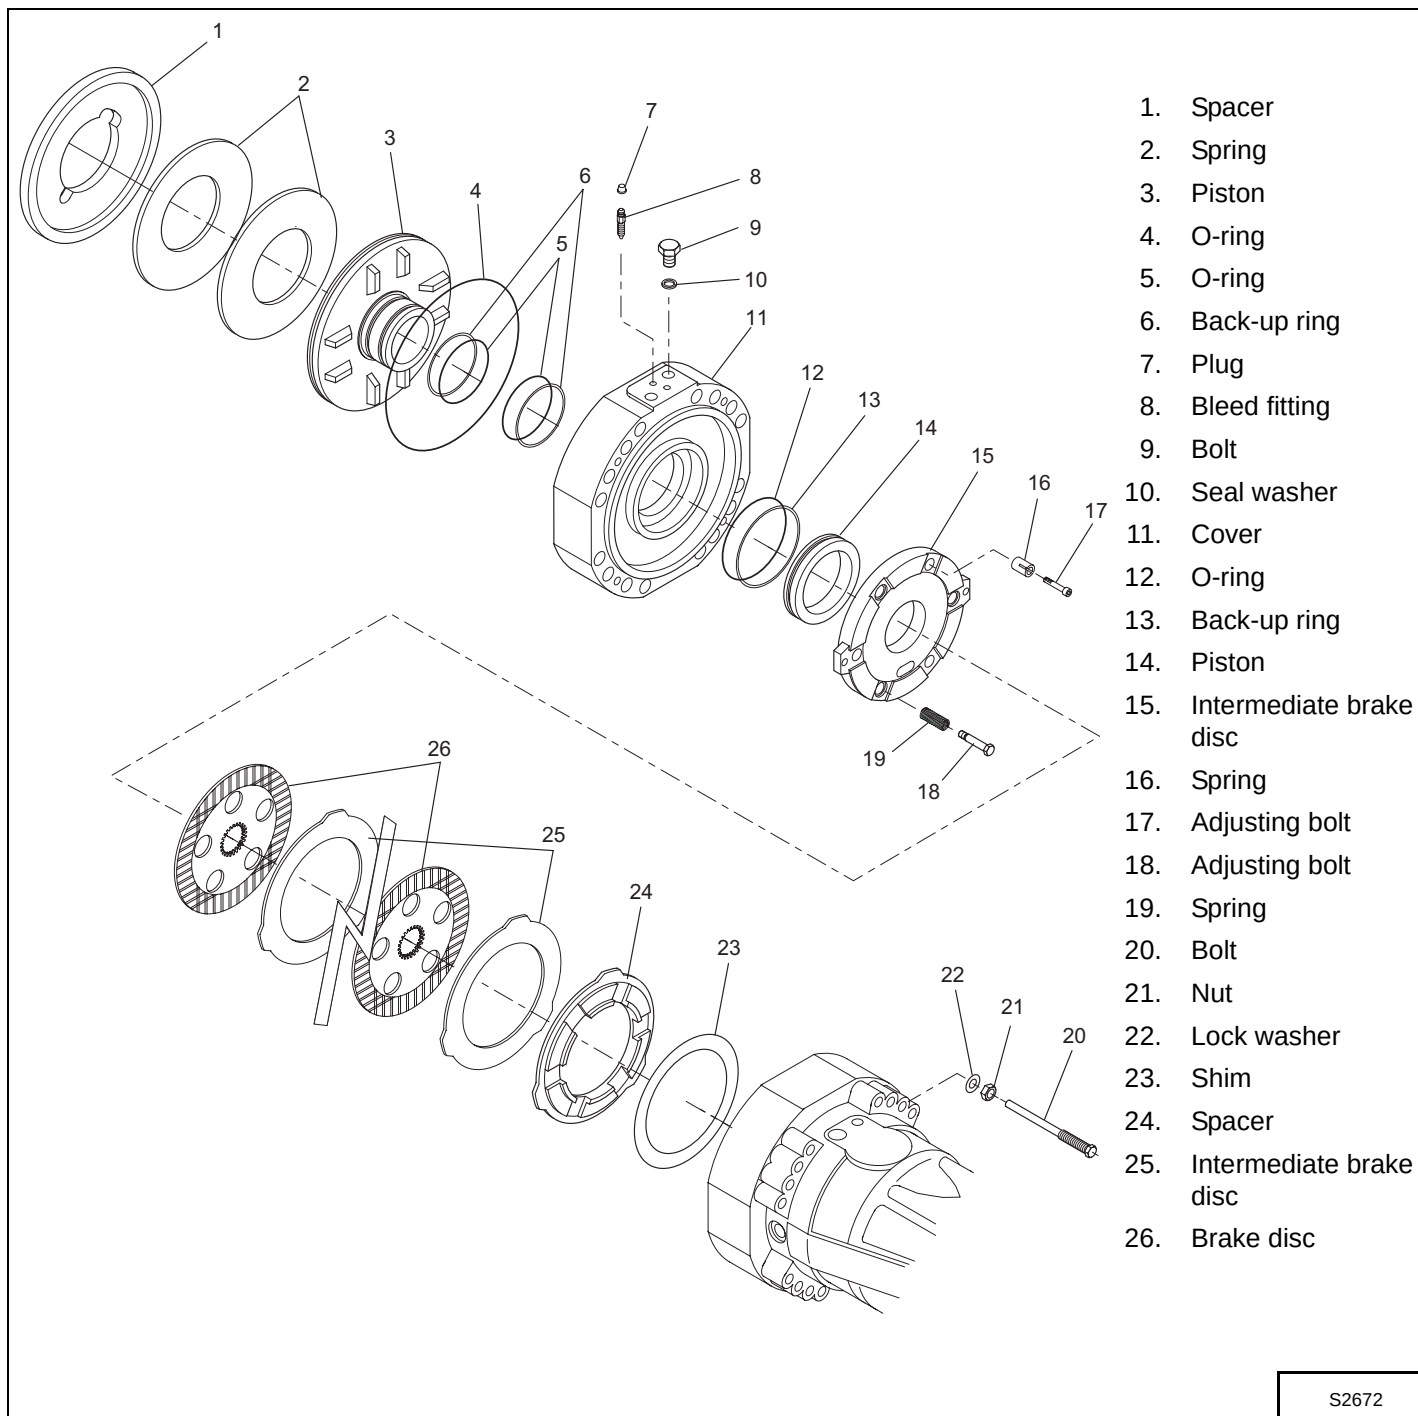


S2672

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Brake System Disassembly

Figure 40-22-31

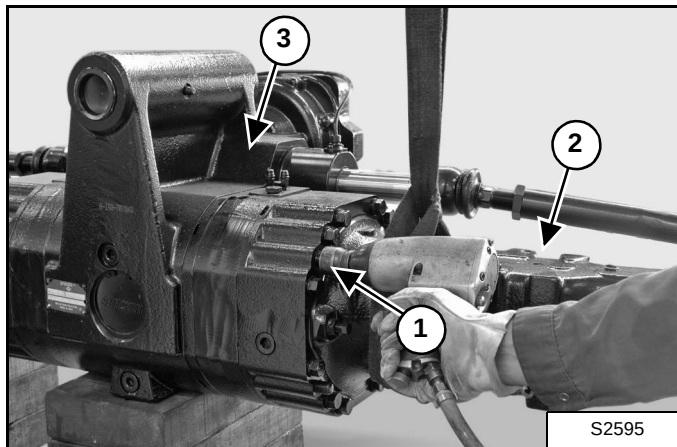


Sling the arms to be removed and connect it to a hoist. Loosen and remove the screws (Item 1) that fix the arm (Item 2) to the central body (Item 3) **[Figure 40-22-31]**.

Figure 40-22-32

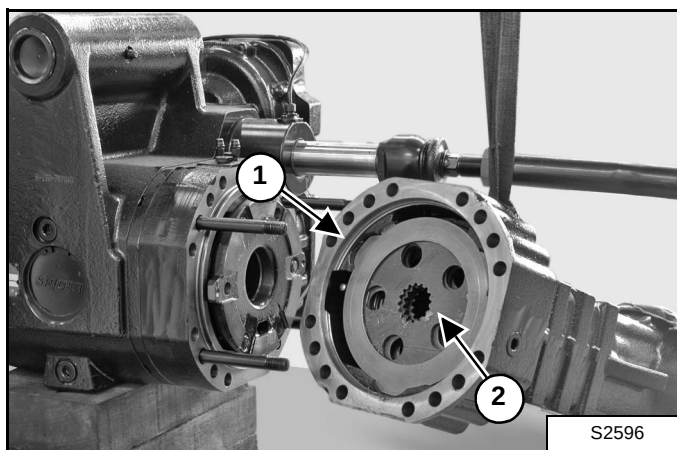

Remove arm (Item 1) together with the pack of the braking discs (Item 2) **[Figure 40-22-32]**. Place the arm on a bench.

Figure 40-22-33

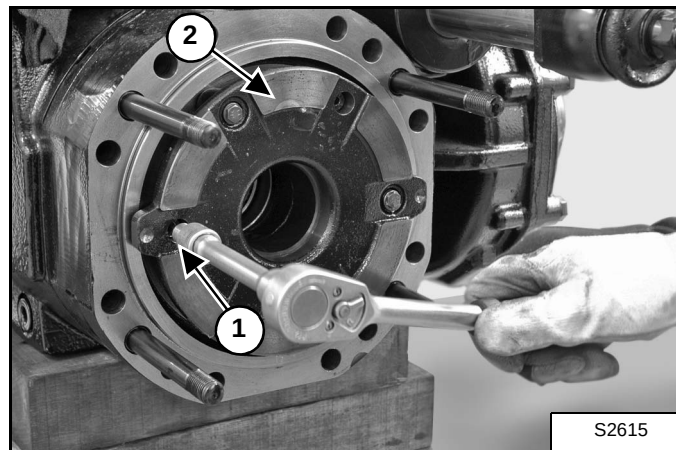


Remove the adjusting bolts (Item 1) from the intermediate brake disc (Item 2) **[Figure 40-22-33]**.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Brake System Disassembly (Cont'd)

Figure 40-22-34

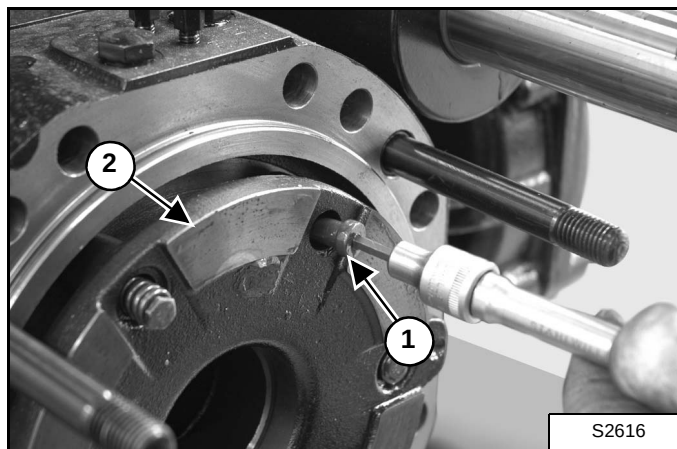


Remove the pin screws (Item 1) guiding the intermediate brake disc (Item 2) [Figure 40-22-34].

IMPORTANT


If the screws are to be replaced, note down the different colours for the different brake gaps.

Figure 40-22-35

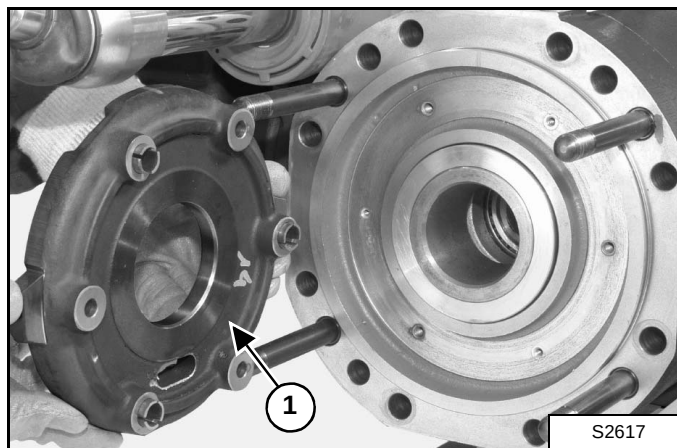


Remove the intermediate brake disc (Item 1) [Figure 40-22-35].

Figure 40-22-36

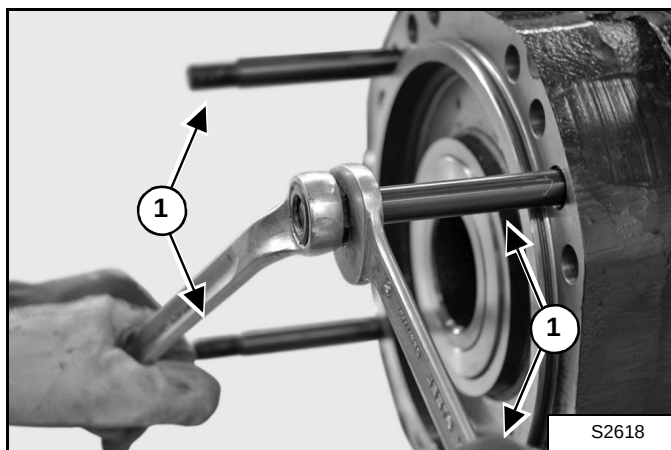


Loose the four studs (Item 1) [Figure 40-22-36].

Figure 40-22-37

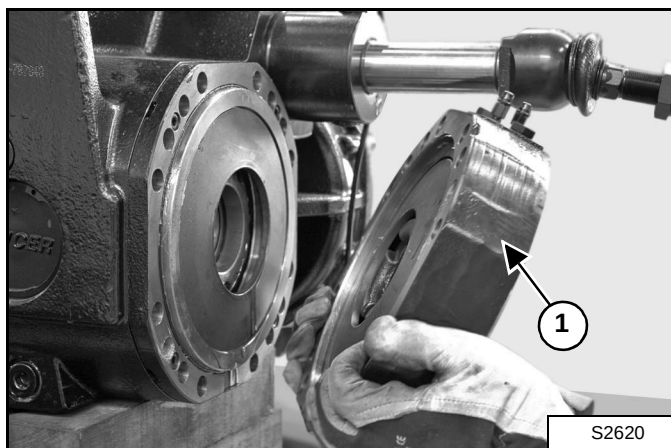

Remove the cover (Item 1) [Figure 40-22-37].

Figure 40-22-38

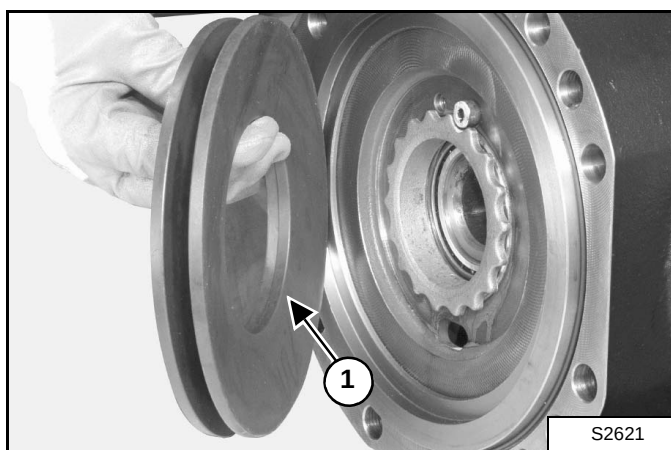


Remove the Belleville washers (Item 1) [Figure 40-22-38] and note down direction of assembly.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Brake System Disassembly (Cont'd)

Figure 40-22-39

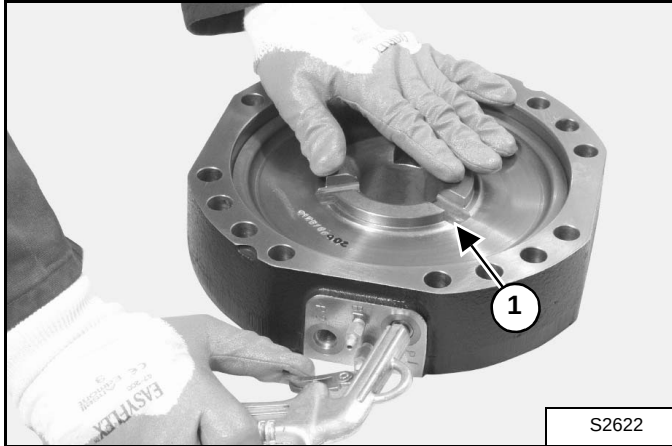

Slowly introduce low-pressure compressed air through the connection member for the service brake, in order to extract the piston (Item 1) [Figure 40-22-39].

IMPORTANT


Hold the piston back, as it may be suddenly ejected and damaged.

Figure 40-22-40



Note down their order of assembly and remove negative piston. Sign the position.

Figure 40-22-41

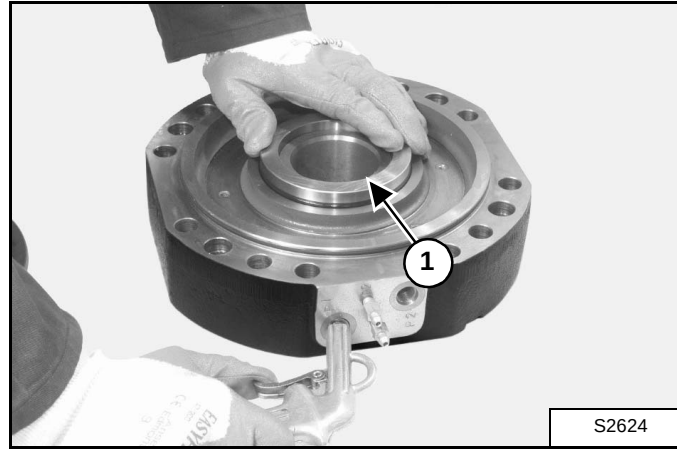


Slowly introduce low-pressure compressed air through the connection member for the service brake, in order to extract the piston (Item 1) [Figure 40-22-41].

IMPORTANT

Hold the piston back, because it may be suddenly ejected.

Figure 40-22-42

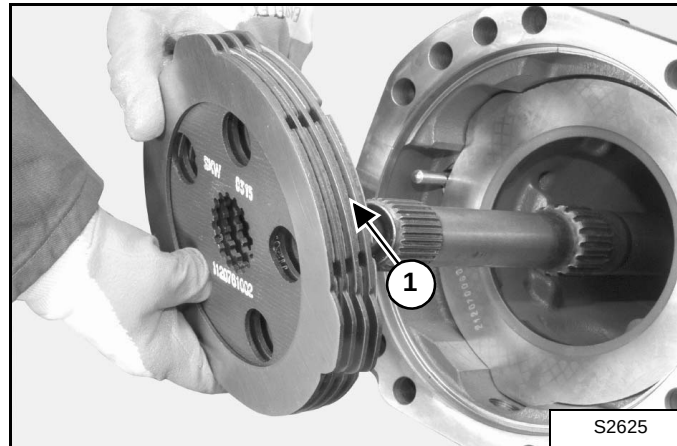


Remove the braking discs (Item 1) [Figure 40-22-42], noting down direction of assembly.

NOTE: If disks are not to be replaced, avoid changing their position

**AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above)
(CONT'D)**

Brake System Disassembly (Cont'd)

Figure 40-22-43

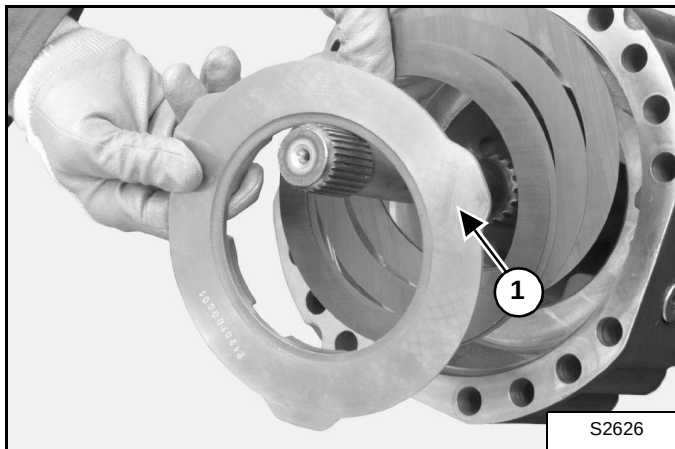


Remove the braking discs, noting down direction of assembly (Item 1) [Figure 40-22-43].

NOTE: If disks are not to be replaced, avoid changing their position.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Differential Parts Identification

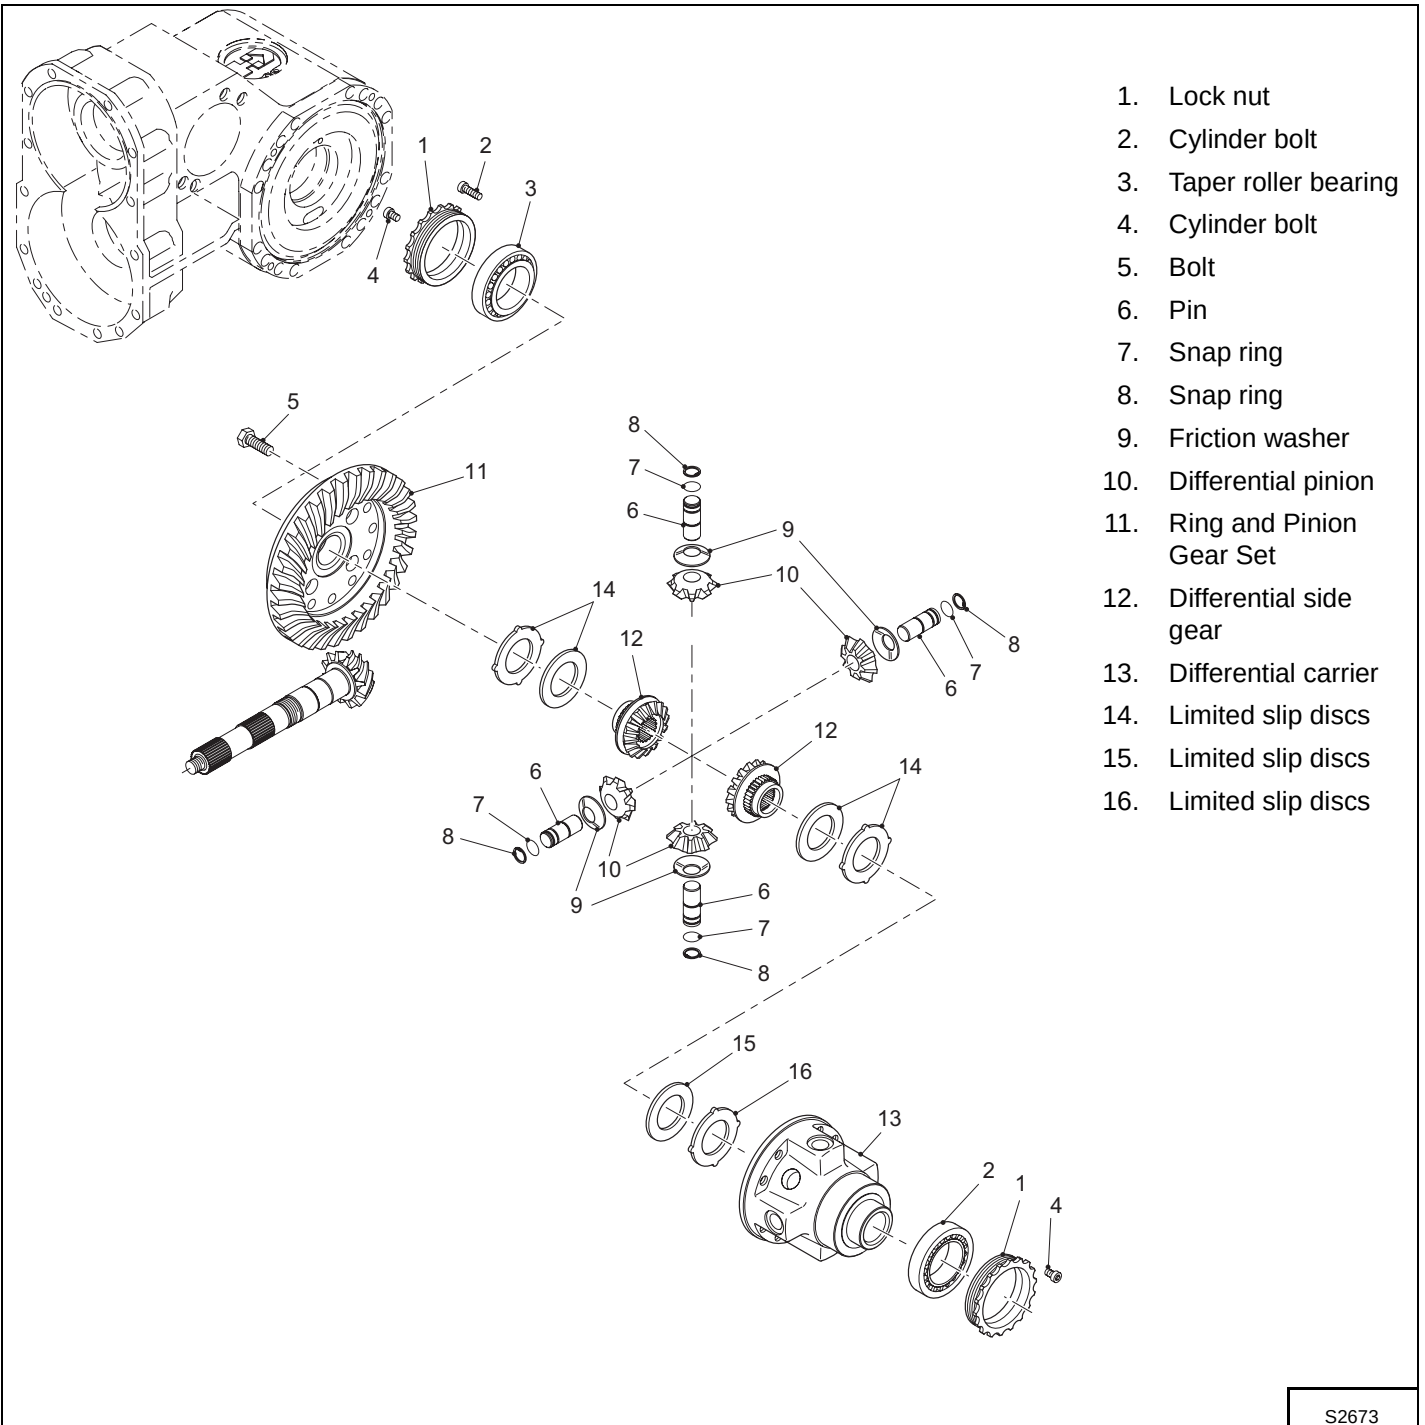


S2673

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Differential Disassembly

Figure 40-22-44

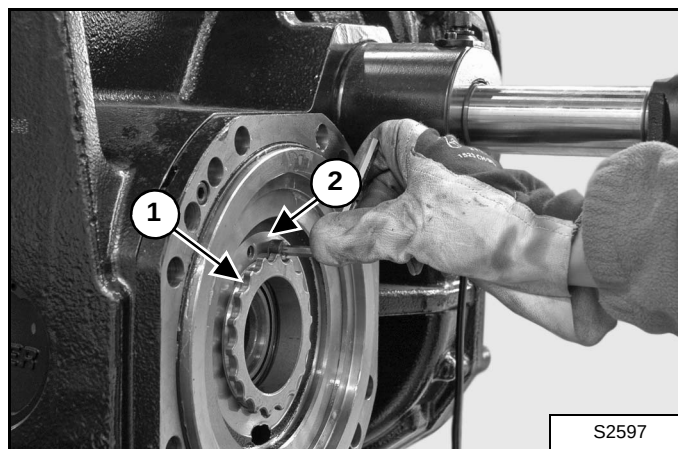

Mark the position of the ring nut (Item 1). Remove the cylinder bolts (Item 2) [Figure 40-22-44] from the ring nut.

Figure 40-22-45

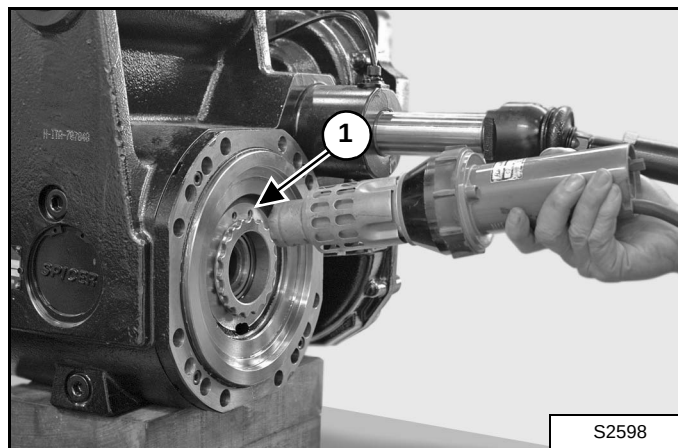


Uniformly heat the ring nuts (Item 1) [Figure 40-22-45] up to a temperature of 80°C.

! WARNING

AVOID BURN INJURY


Wear protective clothing when handling hot parts.

Figure 40-22-46

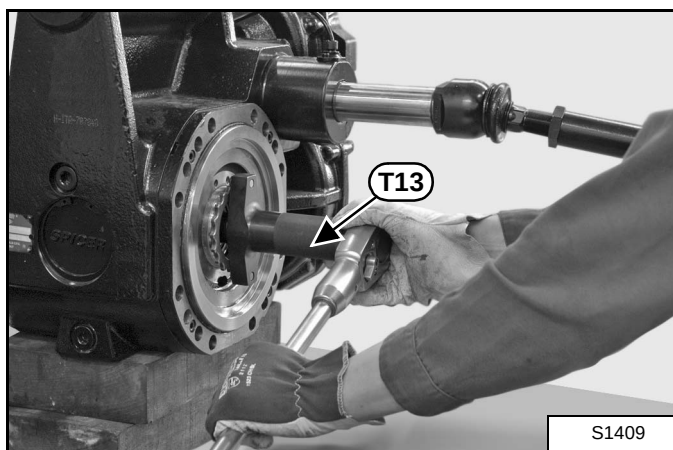

Apply tool **T13** and remove the ring nuts.

Figure 40-22-47

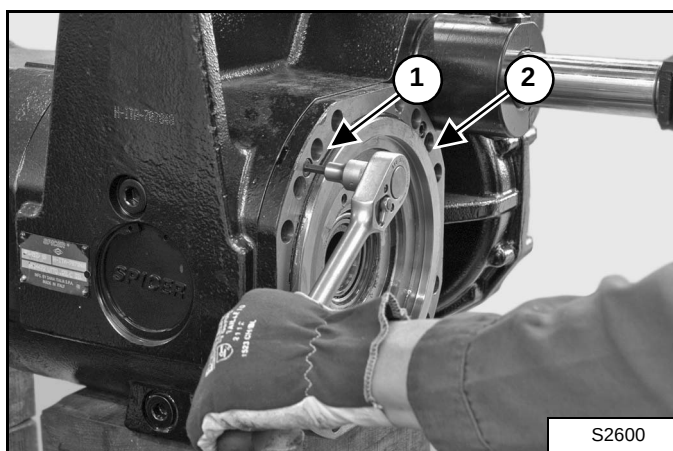


Remove the fitting screws (Item 1) from the middle cover (Item 2) [Figure 40-22-47].

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Differential Disassembly (Cont'd)

Figure 40-22-48

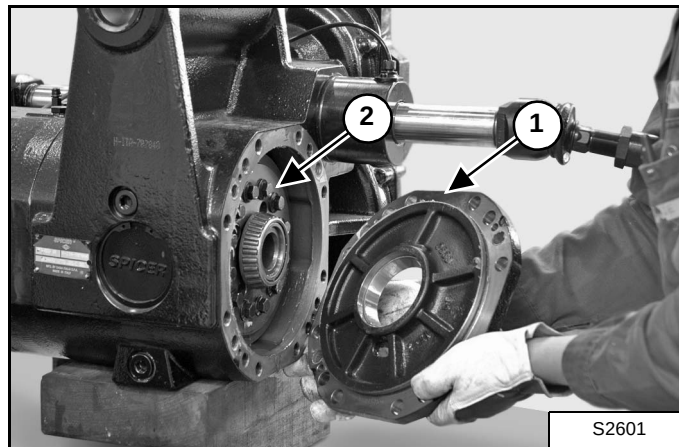

Insert a screwdriver in the opposing slots then force and remove the middle cover (Item 1) and the complete differential unit (Item 2) [Figure 40-22-48].


Figure 40-22-49

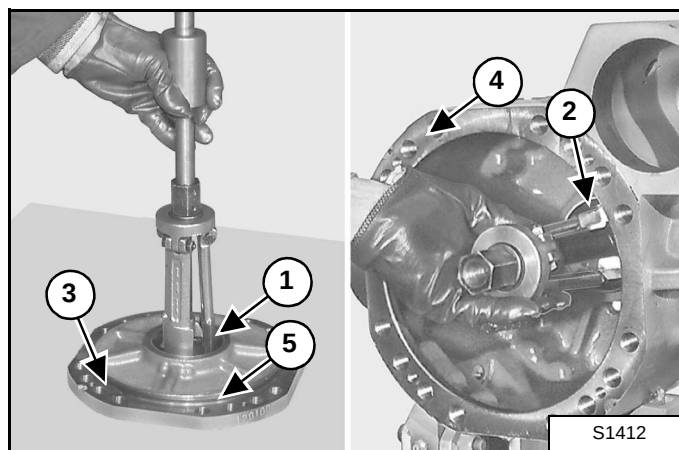

If the bearings need replacing, extract the bearing race (Item 1 and 2) from the middle cover (Item 3) and central body (Item 4) [Figure 40-22-49].


NOTE: Check for damaged O-rings (Item 5) [Figure 40-22-49].

Figure 40-22-50

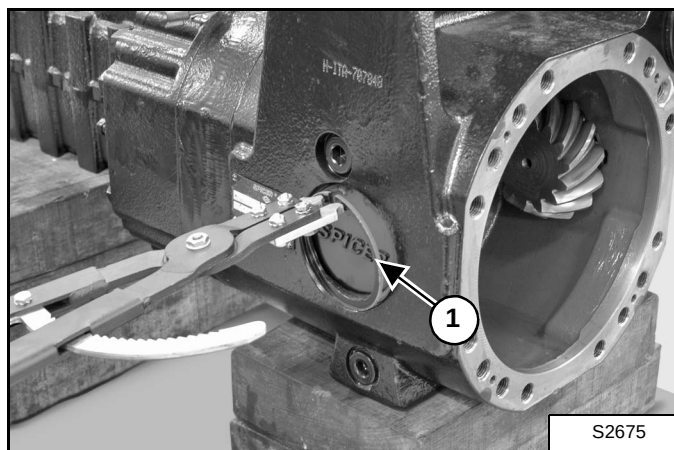

Remove the snap ring (Item 1) [Figure 40-22-50].

Figure 40-22-51

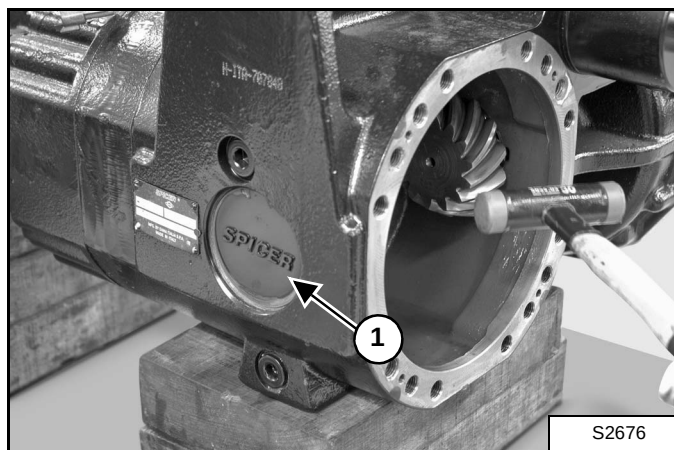


Remove the plug (Item 1) [Figure 40-22-51].

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Differential Disassembly (Cont'd)

Figure 40-22-52

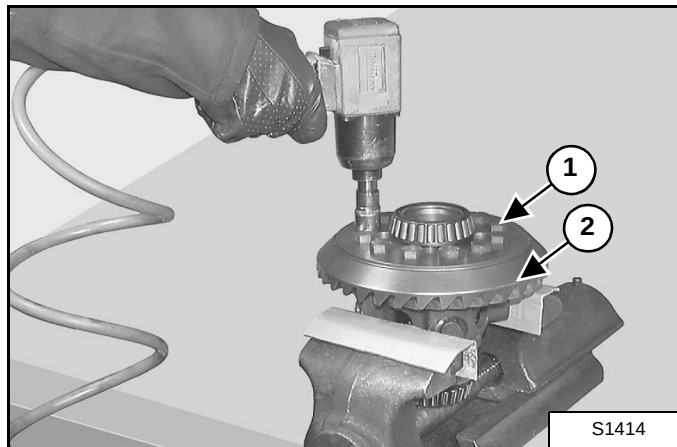


Remove the fitting screws (Item 1) from the crown (Item 2) [Figure 40-22-52].

Figure 40-22-53

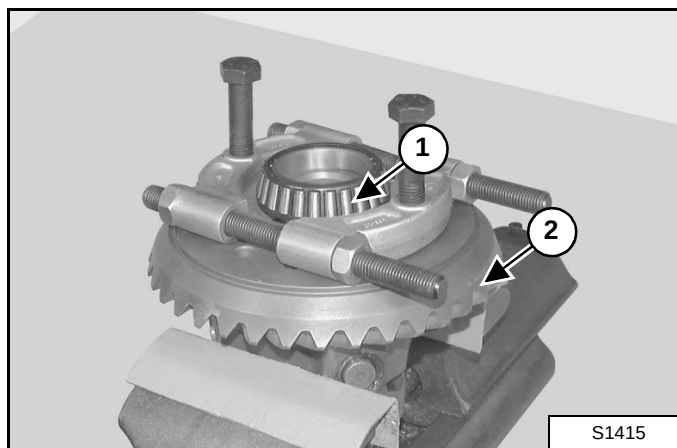


If the bearing needs to be replaced, extract the bearing (Item 1) and remove the crown (Item 2) [Figure 40-22-53].

Figure 40-22-54

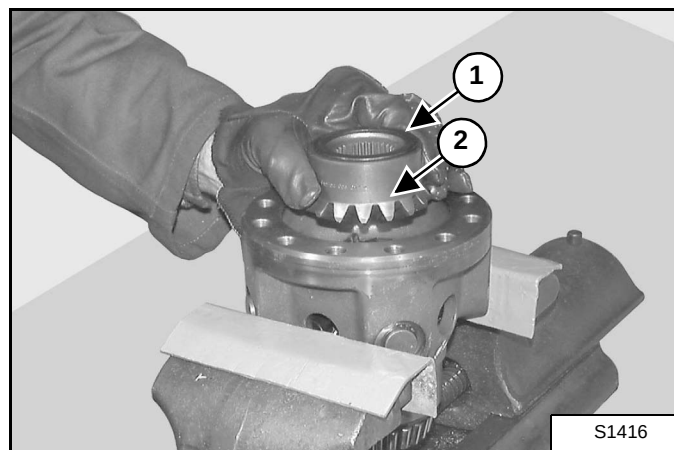

Remove the shim washer (Item 1) and the planetary gear (Item 2) [Figure 40-22-54].

Figure 40-22-55

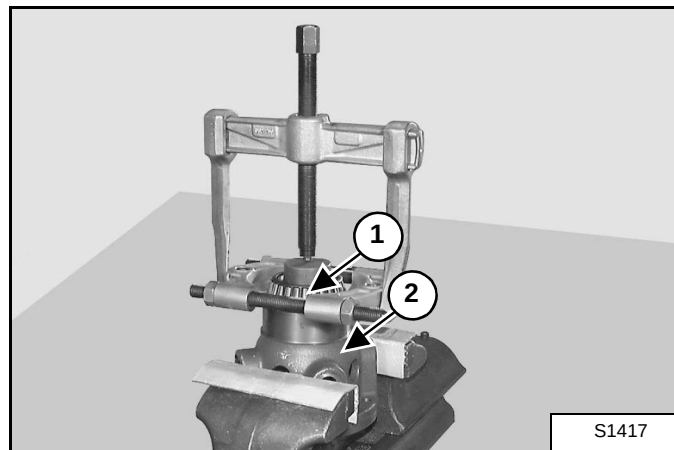


If the bearing needs to be replaced, extract the bearing (Item 1) from the differential carrier (Item 2) [Figure 40-22-55].

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Differential Disassembly (Cont'd)

Figure 40-22-56

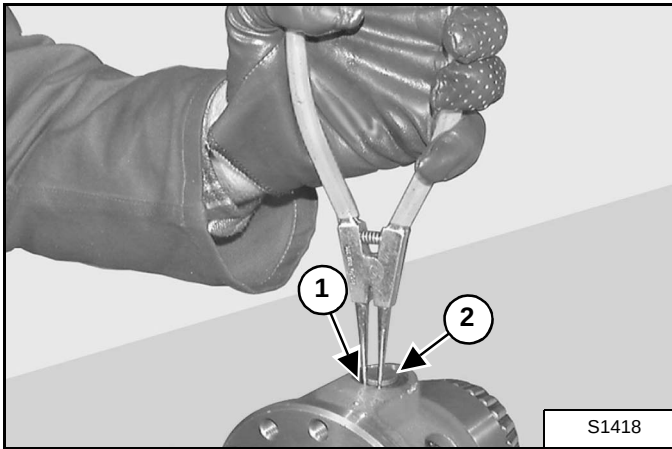

Remove the snap rings (Item 1) from the four pins (Item 2) [Figure 40-22-56] of the planet wheel gears.


Figure 40-22-57

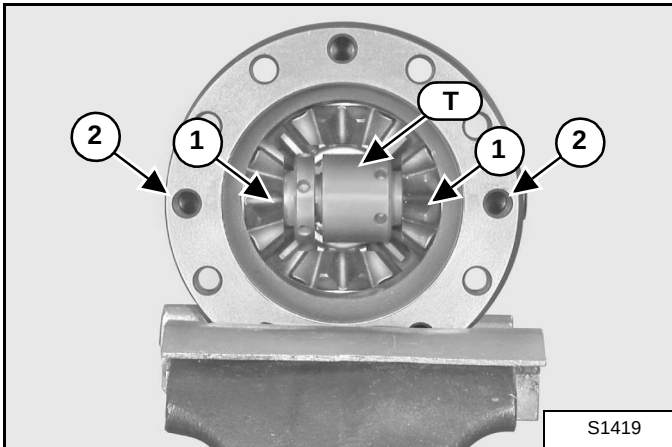

Insert a tool T between two planet wheel gears (Item 1) [Figure 40-22-57].


NOTE: Make sure that the tool is perfectly lined up with the pins (Item 2) [Figure 40-22-57] when locked.

Figure 40-22-58

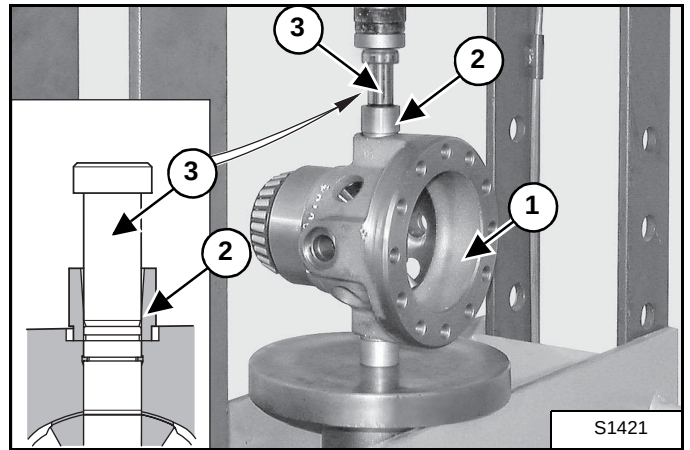

Place the differential carrier (Item 1) under a press, position a bushing (Item 2) and insert a pin (Item 3) [Figure 40-22-58]. Press the pin of the upper planet wheel gear into the tool T [Figure 40-22-57].

Figure 40-22-59

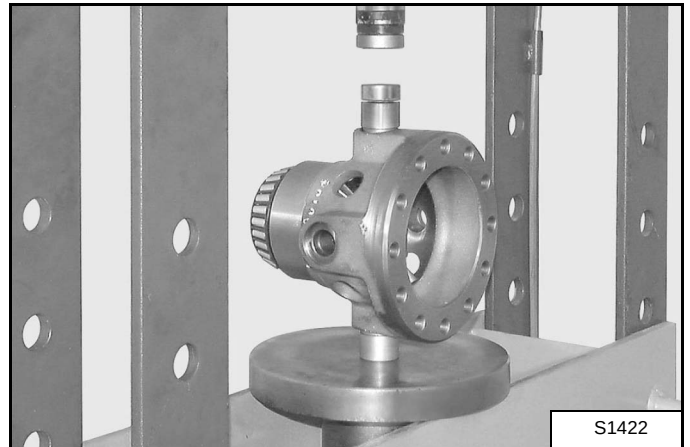


Remove pinion and bush.

NOTE: In this condition the tool contains the pin.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Differential Disassembly (Cont'd)

Figure 40-22-60

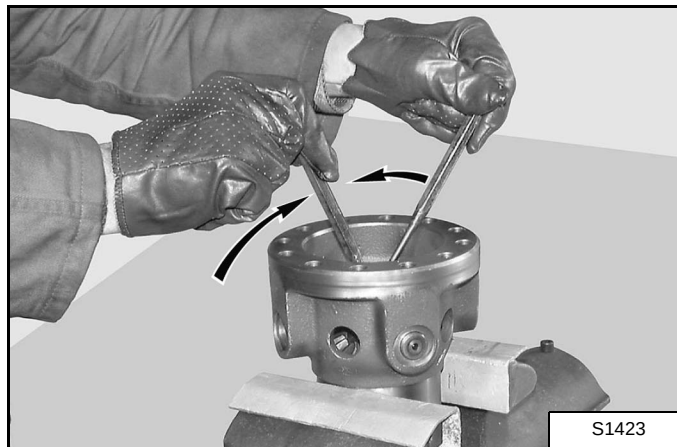


Remove the tool with inside the pin of the planet wheel gear.

Figure 40-22-61

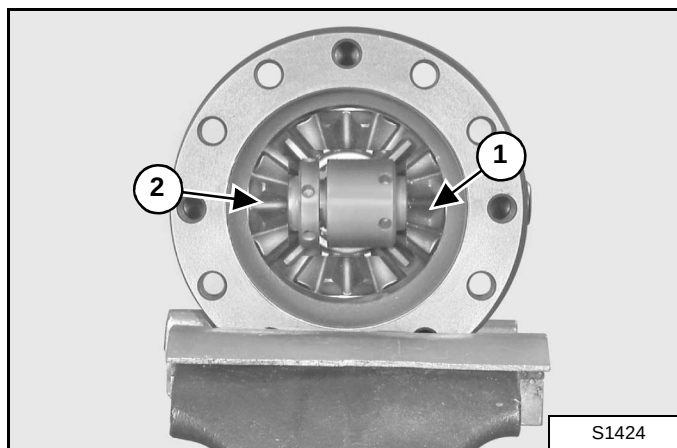

Leave the released planet wheel gear (Item 1) [Figure 40-22-61] in position and again lock the tool. Repeat the operations for the extraction of the pin of the 2nd planet wheel gear (Item 2) [Figure 40-22-61]. Repeat the operations for the two remaining pins.

Figure 40-22-62

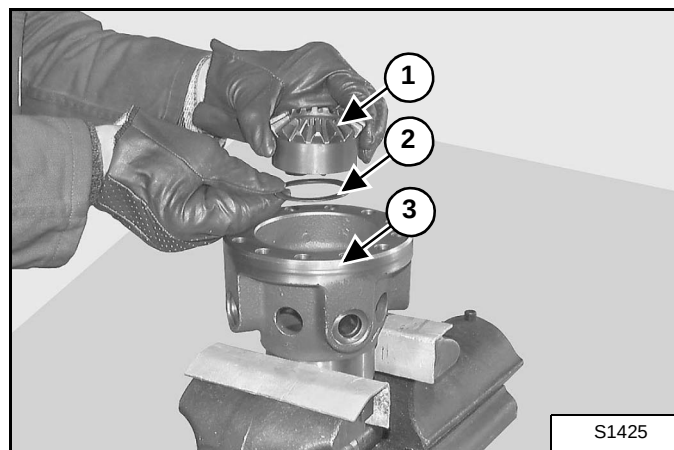


Remove the tool T and remove the planet wheel gears (Item 1) and the relative shim washers (Item 2) from the differential carrier (Item 3) [Figure 40-22-62].

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Bevel pinion Parts Identification

1. Cover
2. Gear
3. Snap ring
4. Ball bearing
5. Snap ring
6. Ring and Pinion Gear Set
7. Taper roller bearing
8. Shim
9. Shim
10. Spacer
11. Lock nut
12. Seal
13. Ball bearing
14. Gear
15. Snap ring
16. Ball bearing
17. Seal
18. Plug
19. Spring washer
20. Hexagon bolt
21. Magnet plug
22. Dowel
23. Plug
24. Flange
25. O-ring
26. Cylinder bolt

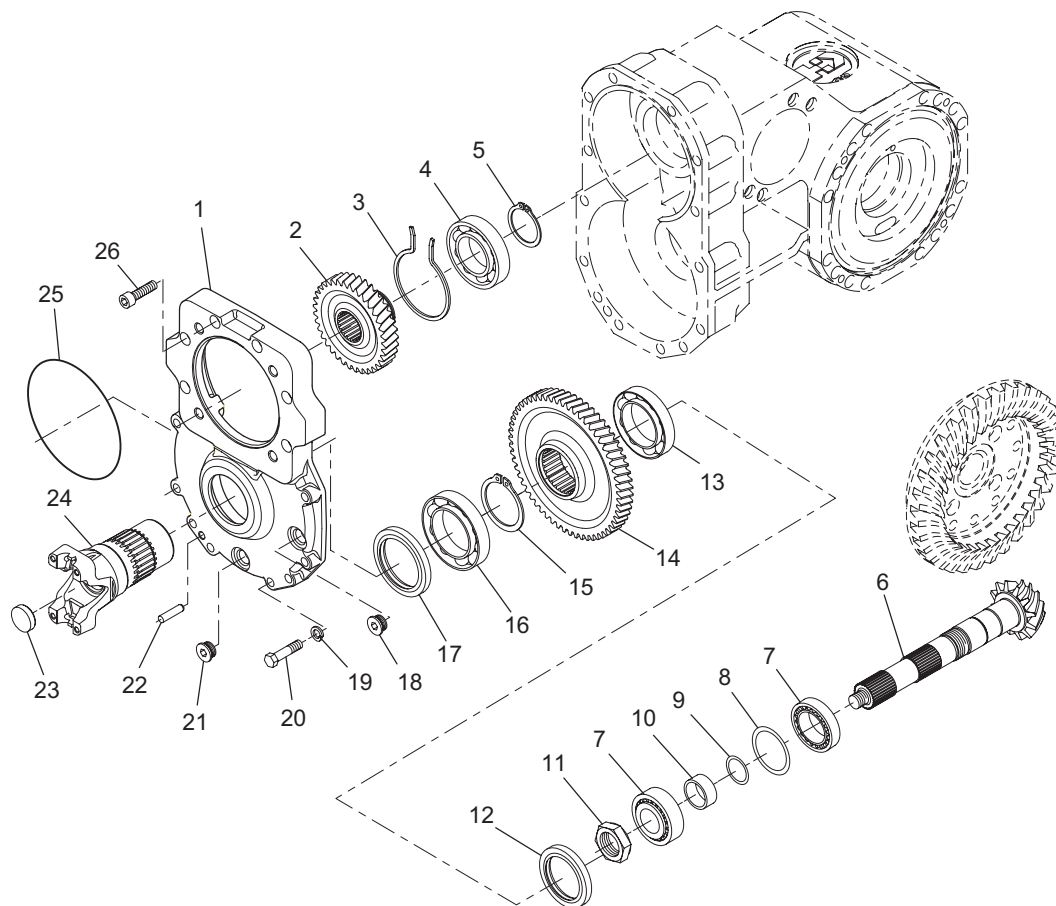


S1568

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Bevel Pinion Disassembly

Figure 40-22-63

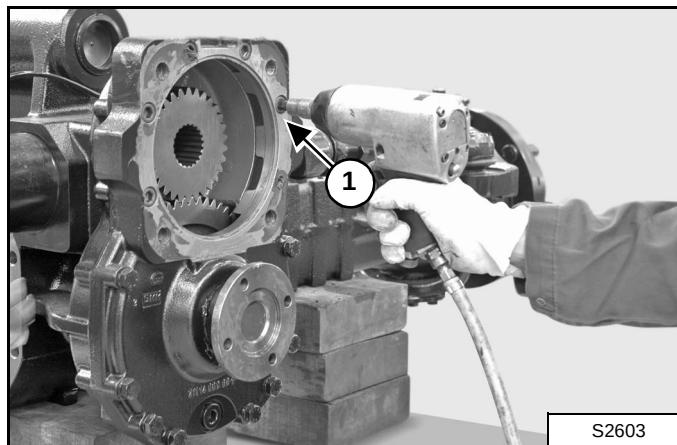


Remove cylinder bolts (Item 1) [Figure 40-22-63] of the drive side flange cover.

Figure 40-22-64

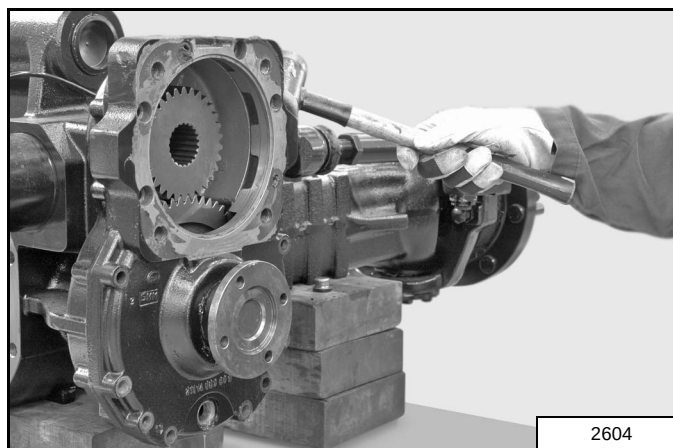

Make the drive side flange cover loose using a plastic hammer.


Figure 40-22-65

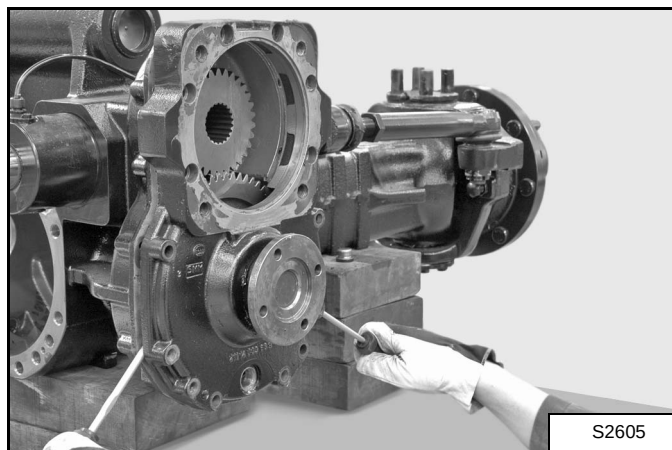

Place two levers into the appropriate slots.

NOTE: Look out not to damage the surfaces.

Figure 40-22-66

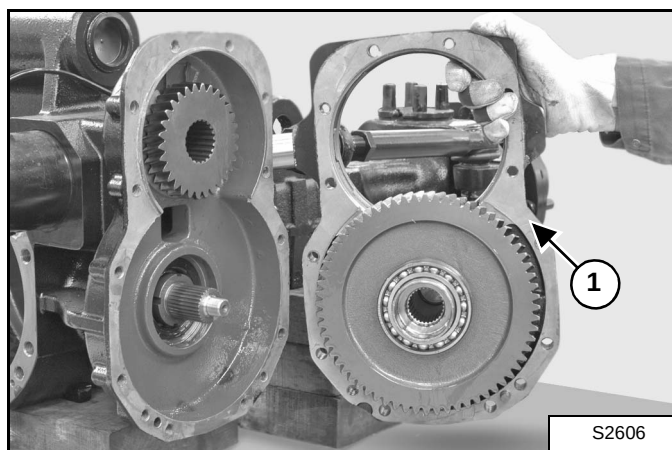


Lift off the cover (Item 1) [Figure 40-22-66].

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Bevel Pinion Disassembly (Cont'd)

Figure 40-22-67

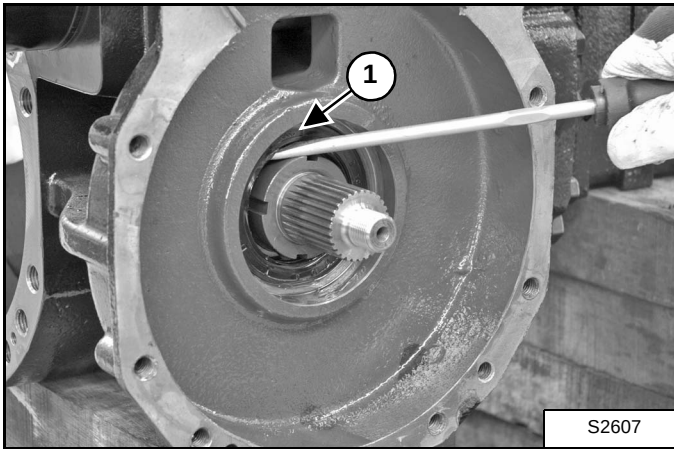


Remove the sealing ring (Item 1) [Figure 40-22-67].

Figure 40-22-68

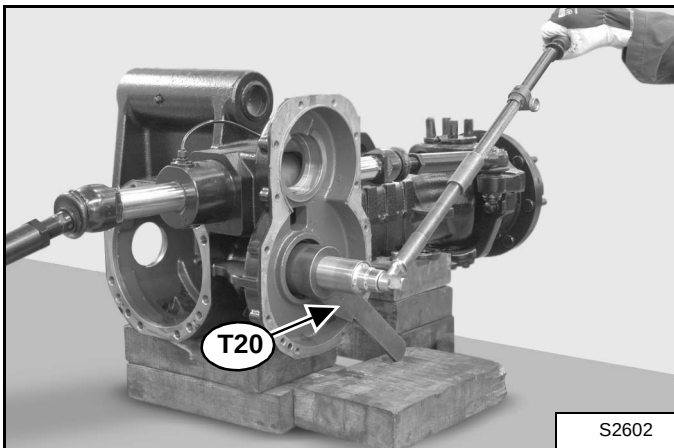

Position tool **T20A** (or T20B), so as to avoid pinion rotation. Unloose and remove the nut; also remove the O-ring.


Figure 40-22-69

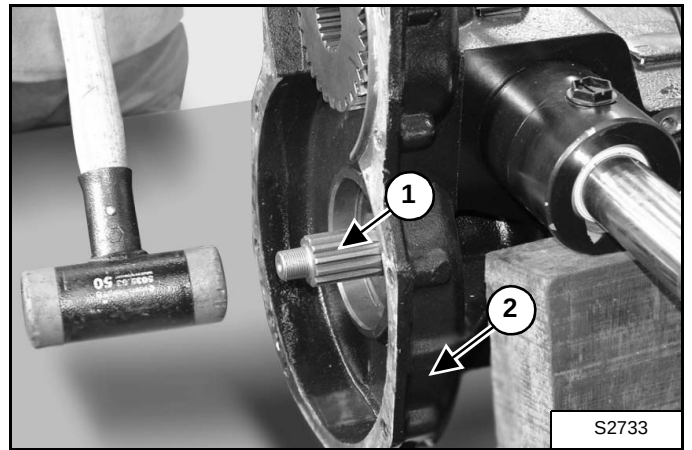

Extract the pinion (Item 1) [Figure 40-22-69] complete with the internal bearing, the distance piece and shims.

NOTE: The bearing races of the bearings remain in the central body (Item 2) [Figure 40-22-69].

Figure 40-22-70

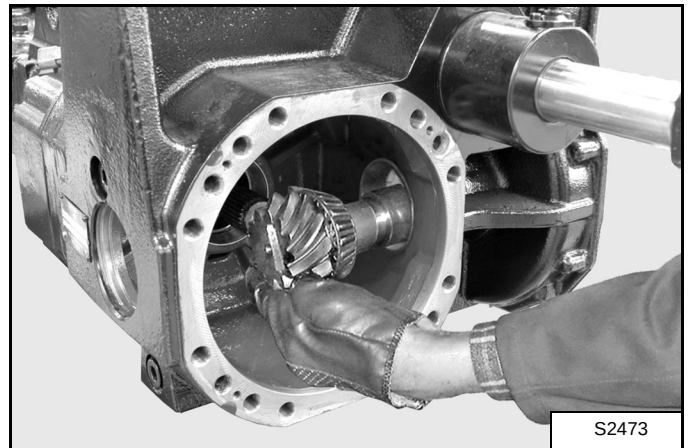


Remove the pinion (Item 1) [Figure 40-22-70], shims and distance piece.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Bevel Pinion Disassembly (Cont'd)

Figure 40-22-71

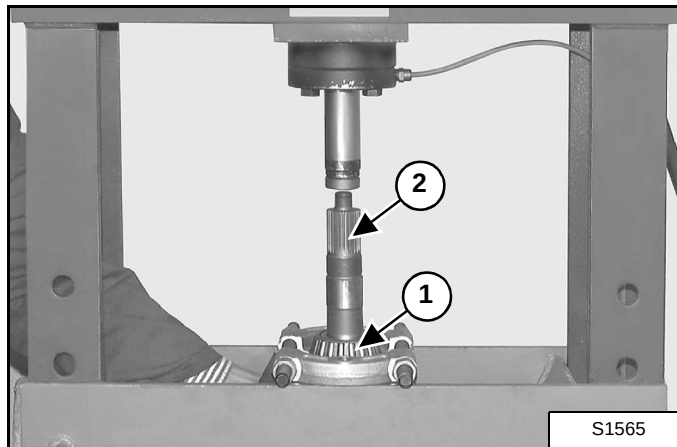


Using a puller and a press, remove the inner bearing (Item 1) from the pinion (Item 2) [Figure 40-22-71].

Figure 40-22-72

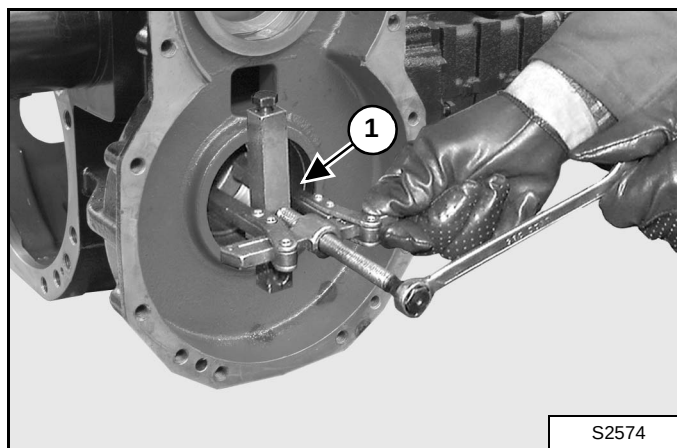

Remove the bearing race (Item 1) [Figure 40-22-72].

Figure 40-22-73

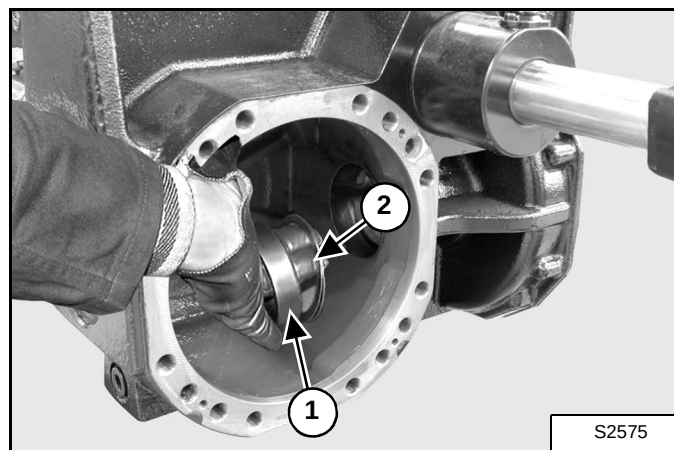


Insert a drift in the appropriate holes and remove the bearing race (Item 1) as well as the shim washers (Item 2) [Figure 40-22-73].

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Bevel Pinion Assembly

Figure 40-22-74

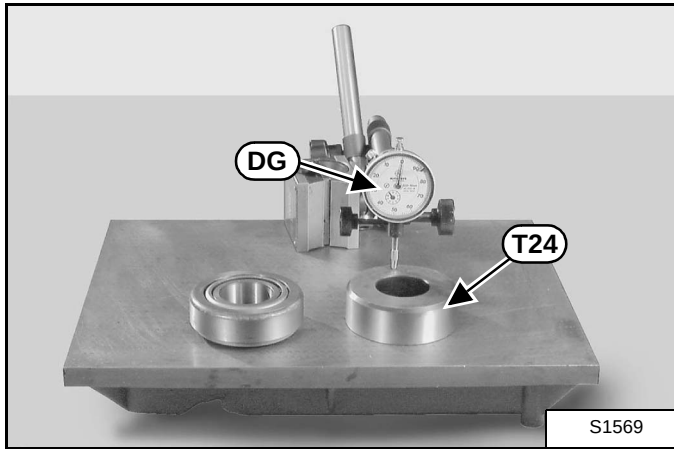

Using a surface plate, reset a magnetic based dial indicator and placing it on the measurement ring **T24** (with a thickness of 30.2 mm). Preset the indicator to approx. 2mm.

Figure 40-22-75

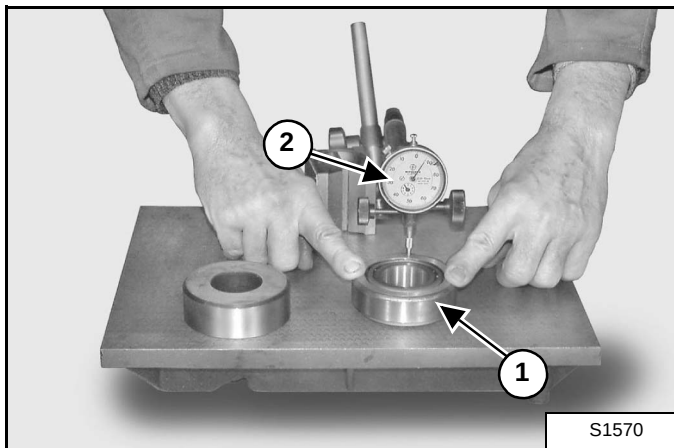


Bring the internal bearing (Item 1), complete with its bearing race, under the indicator (Item 2) **[Figure 40-22-75]**.

Determine overall thickness "D" of the bearing checking the discrepancy between this size and the size of the measurement ring.


NOTE: Press the bearing race in the centre and take several measurements while rotating the bearing race.

Figure 40-22-76

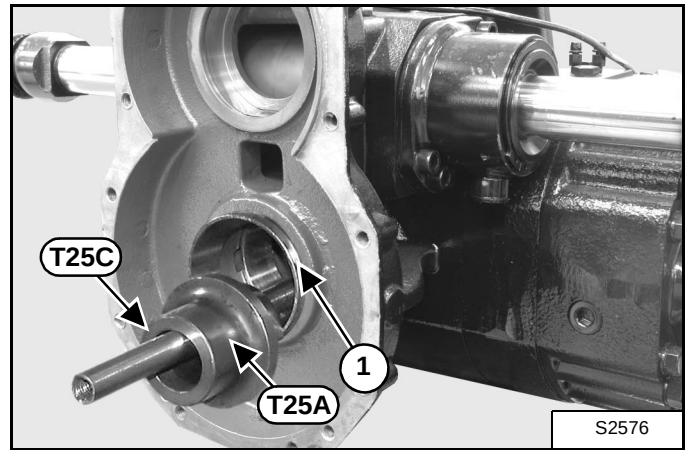

Partially insert the bearing race (Item 1) **[Figure 40-22-76]**

Figure 40-22-77

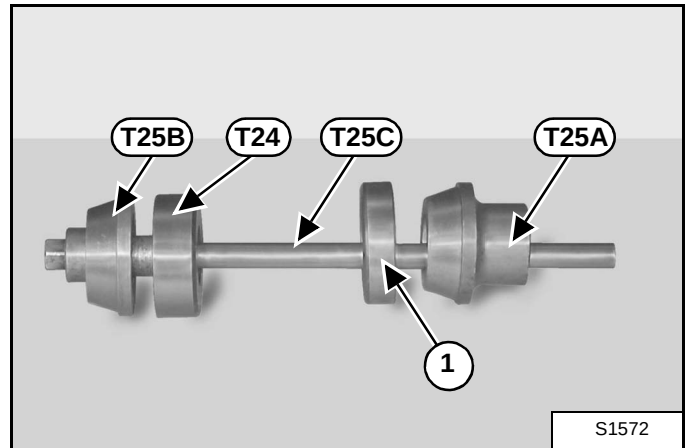


Install tension rod **T25C**, measurement ring **T24** and front guide tool **T25A** on the bearing race (Item 1) **[Figure 40-22-77]**.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Pinion Group Assembly (Cont'd)


Figure 40-22-78

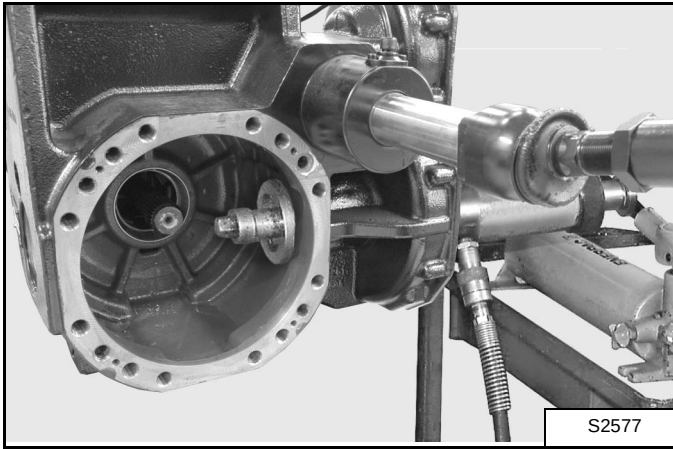

Connect the tension rod to the press and move the bearing race (Item 1) [Figure 40-22-78] into its seat. Disconnect the press and remove the tension rod.


NOTE: Before starting the next stage, make sure that the bearing race has been completely inserted into its seat.

Figure 40-22-79

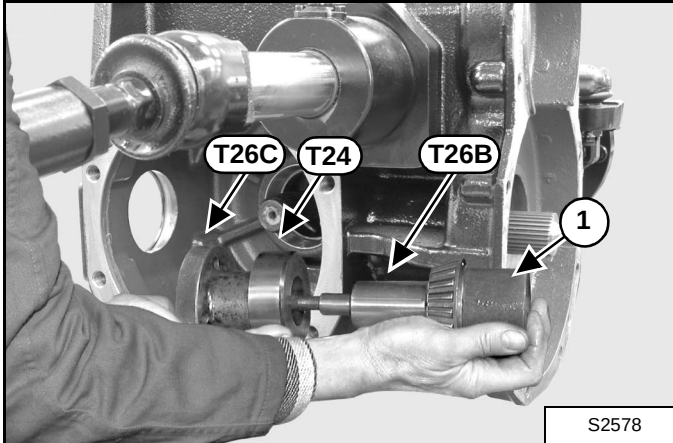


Insert tool **T26B** complete with external bearing (Item 1) [Figure 40-22-79], measurement ring **T24** and gauged ring nut **T26C**. Manually tighten.

Figure 40-22-80

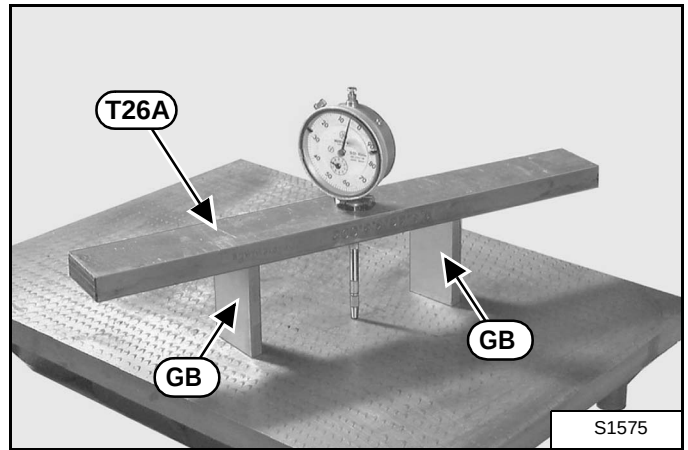

Fit a magnetic based dial indicator with long stem into bar **T26A**; when the bar rests on two size-blocks "GB" of 57mm, reset the indicator. Preset the indicator to approx. 2 mm and reset.

Figure 40-22-81

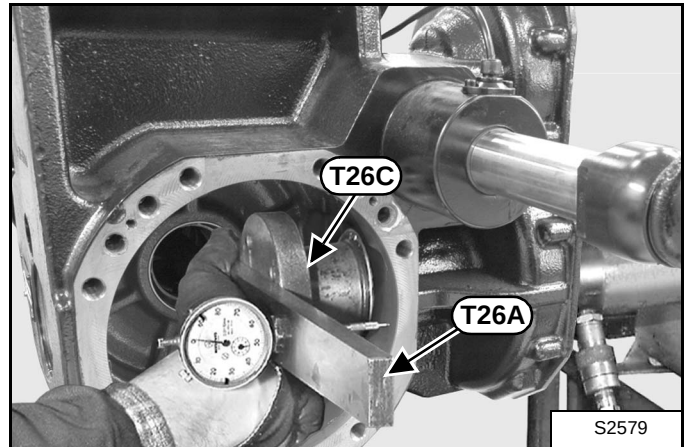


Lay bar **T26A** on gauged nut **T26C** and take the size "A" at about 57 mm corresponding to the maximum diameter of arms centring.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Pinion Group Assembly (Cont'd)

Figure 40-22-82

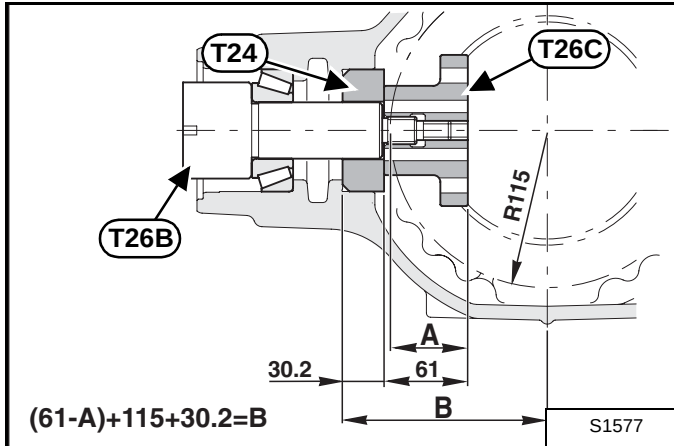

Calculate size "B" which will be the first useful value for calculating the size of the shims that are to be inserted under the bearing race.


Figure 40-22-83

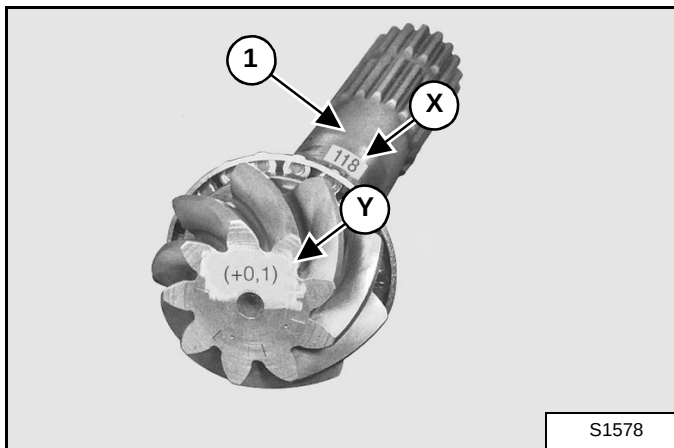

Check the nominal size (X) marked on the pinion (Item 1) [Figure 40-22-83] and add or subtract the indicated variation (Y) so as to obtain size (Z).


e.g.: $Z = 118 + 0,1 = 118.1$
 $Z = 118 - 0.2 = 117.8$

Figure 40-22-84

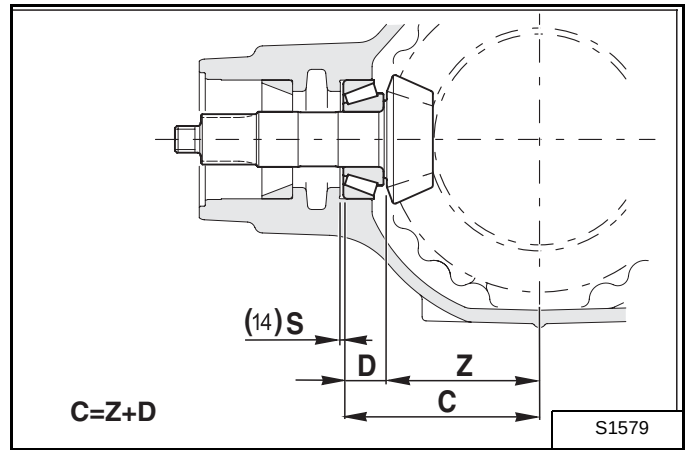

Calculate size "C" which represents the second value for calculating the size of the shims "S" that are to be placed under the bearing race.

Figure 40-22-85

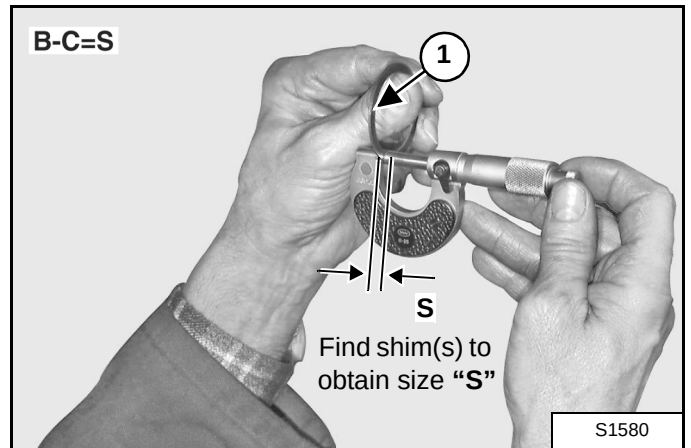


Calculate the difference between sizes "B" and "C" so as to obtain the size "S" of the shim (Item 1) [Figure 40-22-85] that will go under the bearing race.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Pinion Group Assembly (Cont'd)

Figure 40-22-86

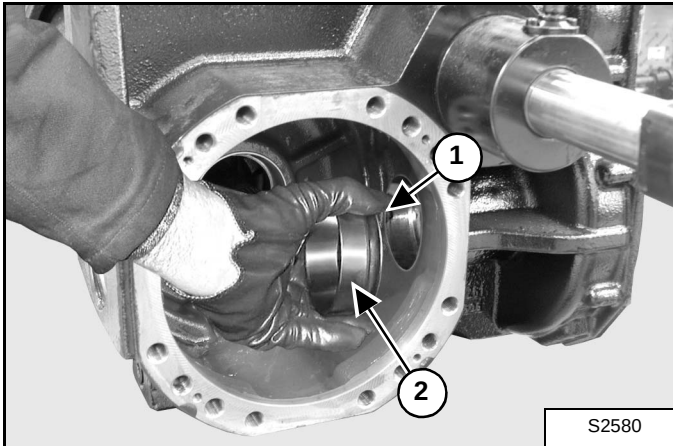

Insert shim "S" (Item 1) and the bearing race of the internal bearing (Item 2) [Figure 40-22-86] in the central body.


Figure 40-22-87

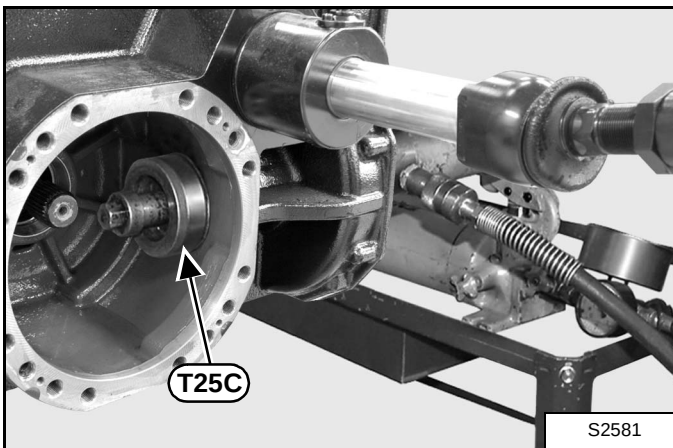

Connect the tension rod to the press, fasten the bearing race and then remove the tools.


NOTE: Before going on to the next stage, make sure that the bearing race has been completely inserted.

Figure 40-22-88

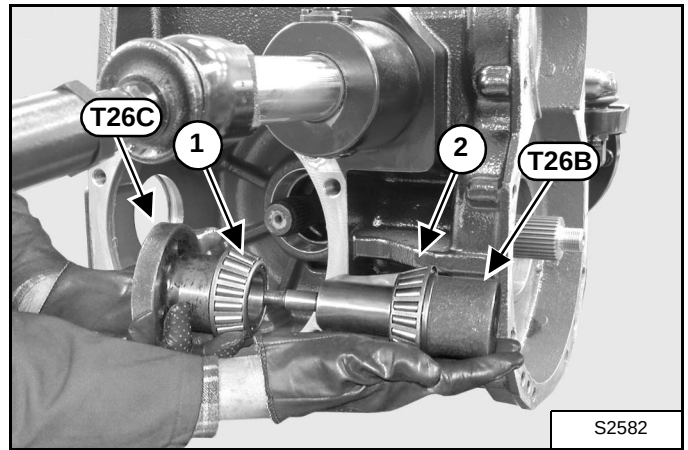

Position tools **T26C** and **T26B** complete with tapered bearings (Item 1 & 2) [Figure 40-22-88]; manually tighten until a rolling torque has been obtained.

Figure 40-22-89

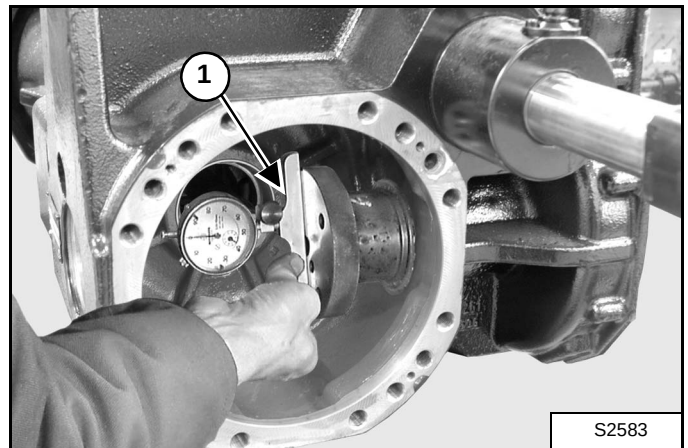


Insert the stem of a depth gauge (Item 1) in either side hole of tool **T26C**; reset the indicator with a presetting of approx. 3 mm.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Pinion Group Assembly (Cont'd)


Figure 40-22-90

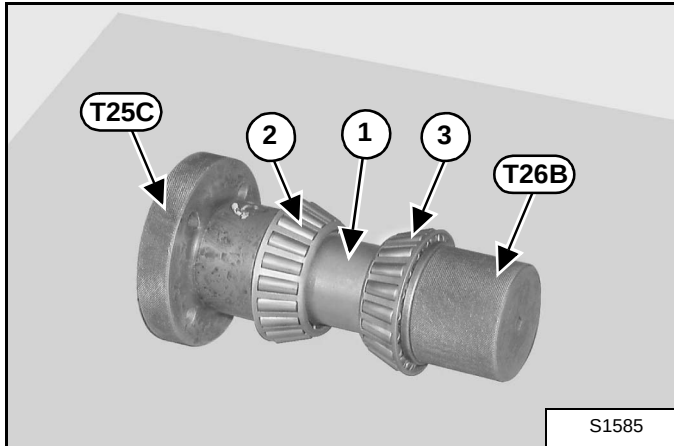

Remove the indicator and release tools and bearings from the central body.


Re-install all and insert the distance piece (Item 1) between both bearings (Item 2 & 3) [Figure 40-22-90]; manually tighten the whole pack.

Figure 40-22-91

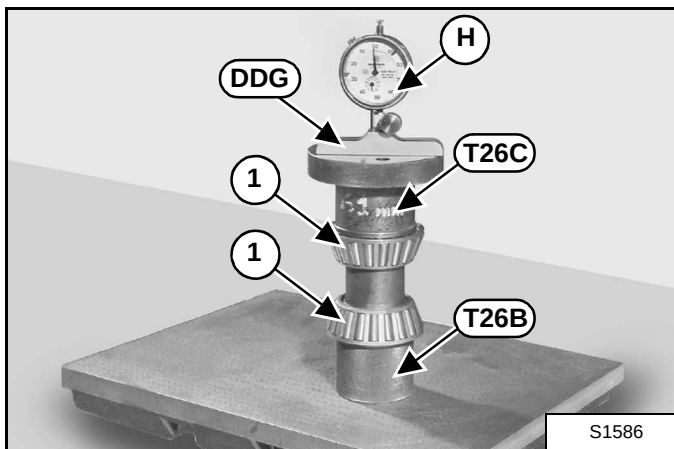


Insert depth gauge into tool **T26B-T26C** and measure variation "H" in relation to the zero setting performed in [Figure 40-22-89].

Figure 40-22-92

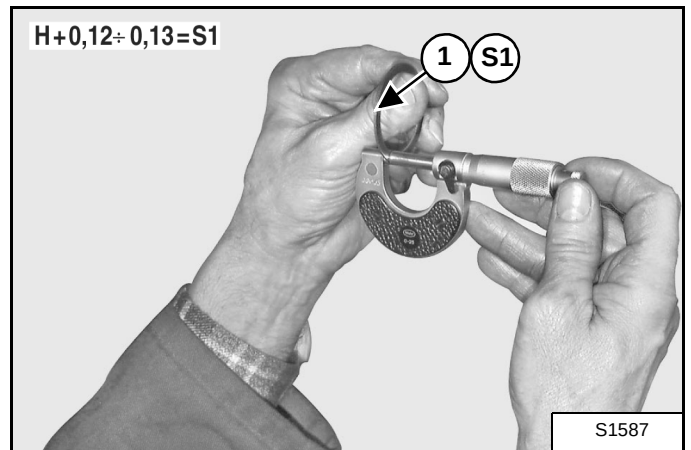

The variation is to be added to a set value of 0.12-0.13 mm, so as to obtain the size of shim "S1" (Item 1) [Figure 40-22-92] which will be inserted between the external bearing (Item 1) [Figure 40-22-91] and the distance piece (Item 1) [Figure 40-22-90] and subsequently, to determine the preload for the bearings.

Figure 40-22-93

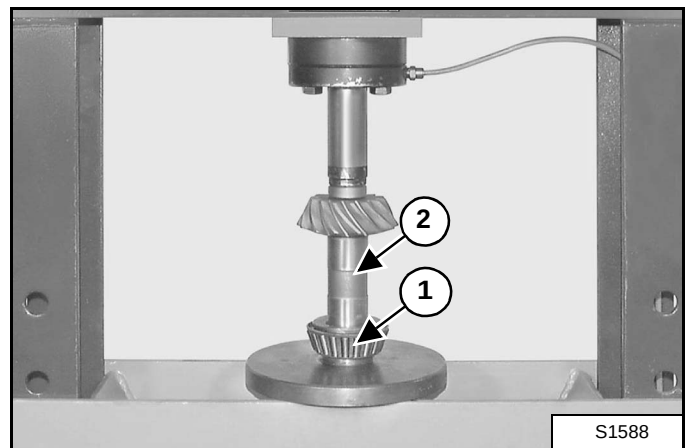


Position the internal bearing (Item 1) and the pinion (Item 2) [Figure 40-22-93] under a press. Force the bearing onto the pinion.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Pinion Group Assembly (Cont'd)


Figure 40-22-94

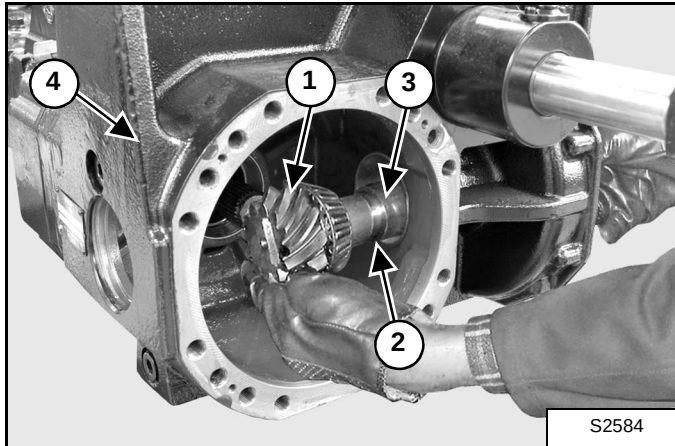

Fit the pinion (Item 1), shim "S1" (Item 2) and the distance piece (Item 3) in the main body (Item 4) [Figure 40-22-94].


NOTE: If multiple shims are used, always position the thinner shims in between the thicker shims.

Figure 40-22-95

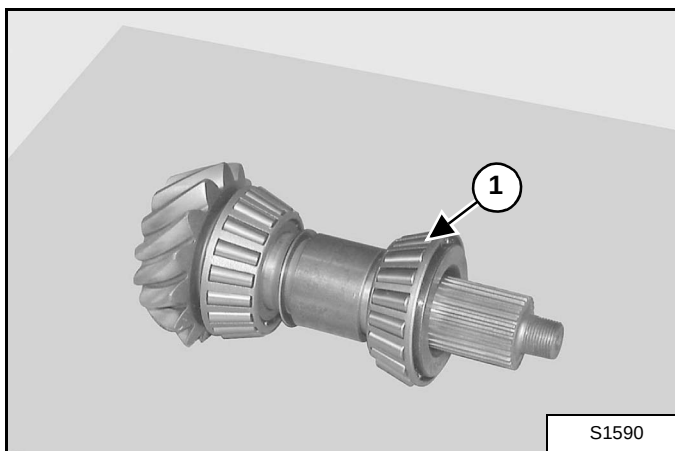


Insert the external bearing (Item 1) [Figure 40-22-95] in the central body in order to complete the pack arranged as in the figure.

Figure 40-22-96

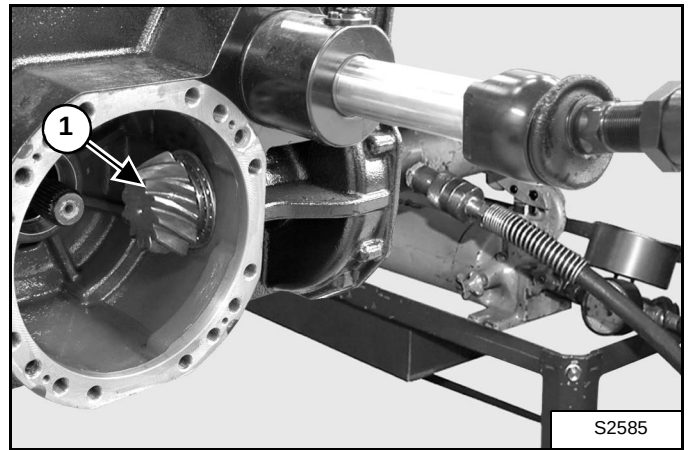

Connect the pinion (Item 1) [Figure 40-22-96] to the tie rod **T28A** and **T28B**. Connect the tie rod **T28C** to the press and block.

Figure 40-22-97

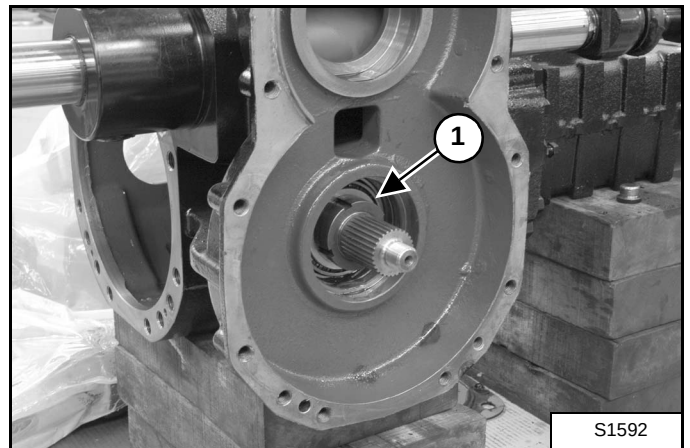


Apply Loctite 242 to the thread of the ring nut (Item 1) [Figure 40-22-97] and screw the nut onto the pinion.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Pinion Group Assembly (Cont'd)


Figure 40-22-98

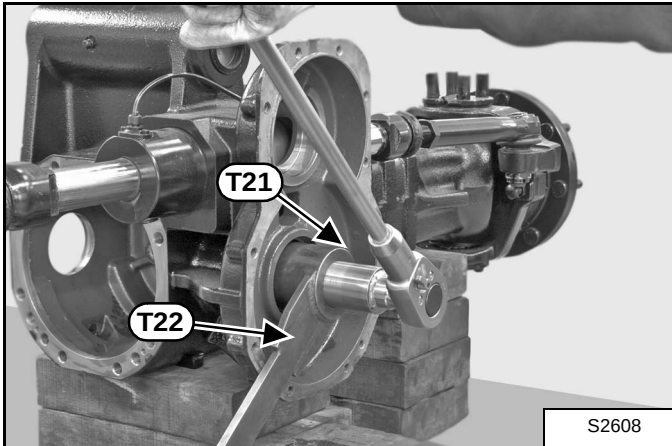

Apply special wrench **T22** to the ring nut (Item 1) [Figure 40-22-97] and bar-hold **T21** to the pinion (Item 2) [Figure 40-22-97].

Lock the wrench **T22** and rotate the pinion using a dynamometric wrench, up to a minimum required torque setting of 370 ft.-lb. (500 Nm).

Figure 40-22-99

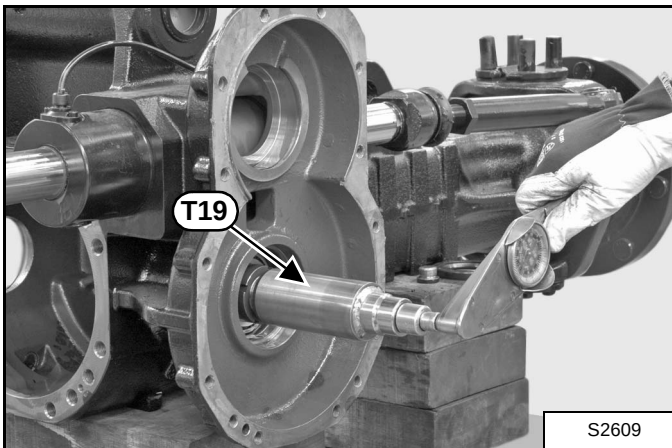

The rolling torque of the pinion shaft must be checked. Using a dial indicator torque wrench, measure the rolling torque. The correct torque is 0.88 - 1.25 ft.-lb. (1,20-1,70 Nm).

NOTE: If torque exceeds the maximum value, then the size of shim "S1" between the bearing and the distance piece needs to be increased.

NOTE: If torque does not reach the set value, increase the torque setting of the ring nut in different stages to obtain a maximum value of 420 ft.-lb. (570 Nm) (see the step under [Figure 40-22-97]).


NOTE: If torque does not reach the minimum value, then the size of shim "S1" needs to be reduced.

NOTE: When calculating the increase or decrease in size of shim "S1", bear in mind that a variation of shim of 0.01 mm corresponds to a variation of 0.44 ft.-lb. (60 Ncm) in the torque of the pinion.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Pinion Group Assembly (Cont'd)


Figure 40-22-100

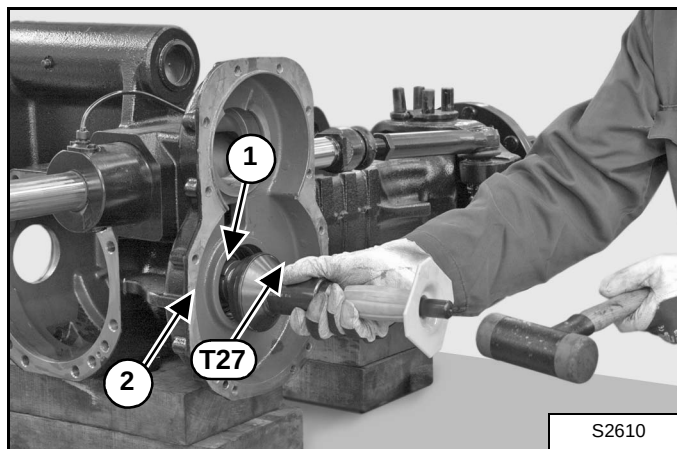

Lubricate the outer surface of the new sealing ring (Item 1) and fit it onto the central body (Item 2) [Figure 40-22-100] using tool T27.


NOTE: Check that it is properly oriented.

Figure 40-22-101

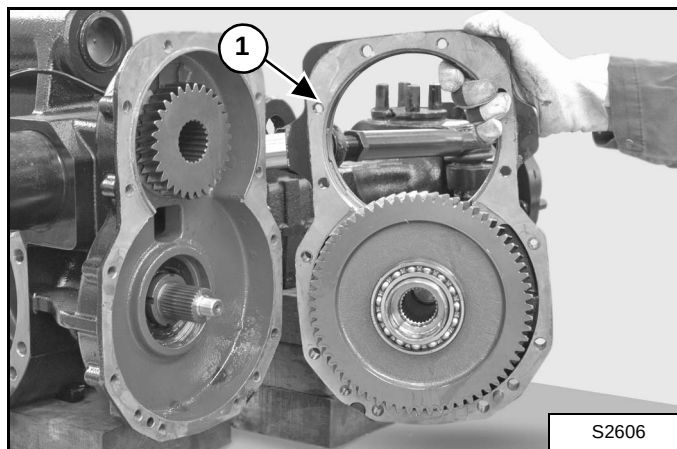

Install the drive side flange cover (Item 1) [Figure 40-22-101].

Figure 40-22-102

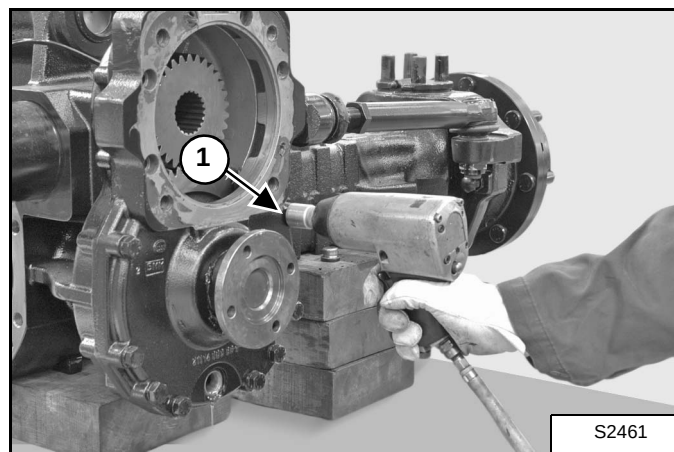


Tighten the screws (Item 1) [Figure 40-22-102] of the drive side flange cover.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Pinion Group Assembly (Cont'd)

Figure 40-22-103

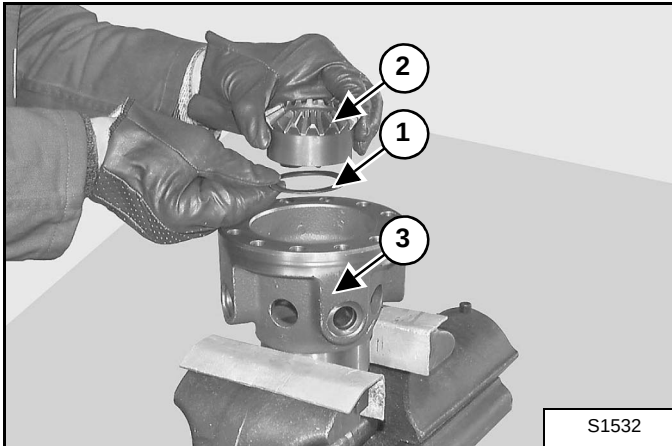


Insert the thrust washer (Item 1) and the planetary gear (Item 2) in the differential carrier (Item 3) **[Figure 40-22-103]**.

Figure 40-22-104

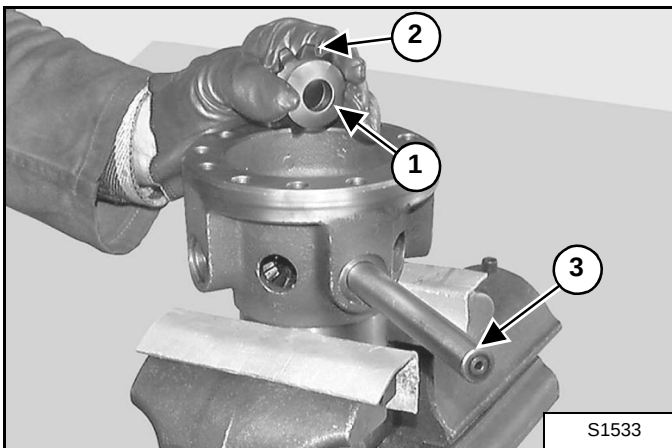


Position the thrust washer (Item 1) and the first planet wheel gear (Item 2). Temporarily hold them in position using a bar (Item 3) **[Figure 40-22-104]**.

Figure 40-22-105

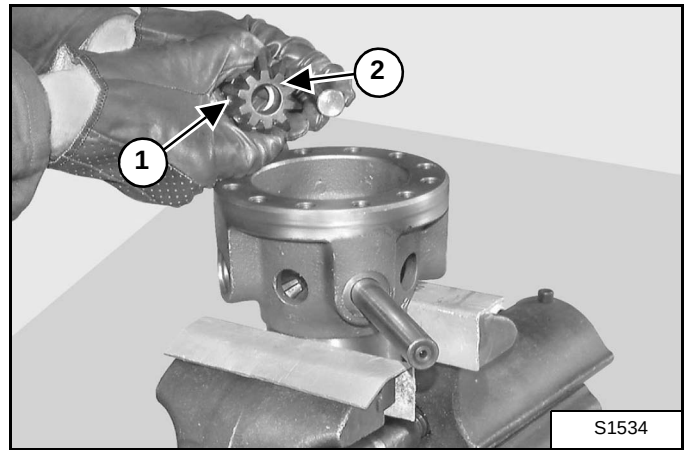

With the help of a bar, position the second planet wheel gear (Item 1) and the relative thrust washer (Item 2) **[Figure 40-22-105]**.

Figure 40-22-106

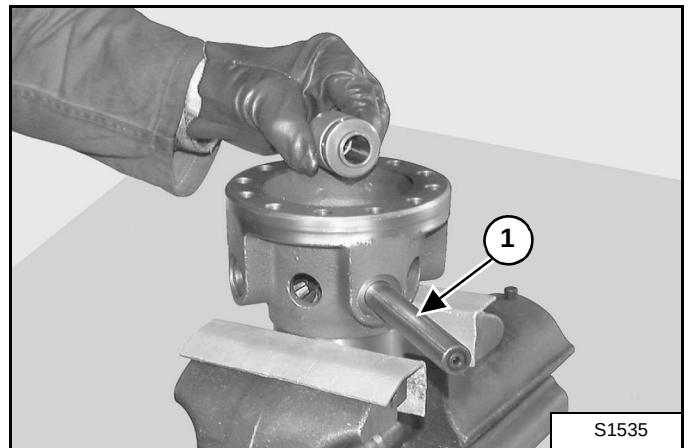


Insert a tool between the two planetary gears and line up the entire unit by pushing the bar (Item 1) **[Figure 40-22-106]** all the way down until it is ejected.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Differential assembly

Figure 40-22-107

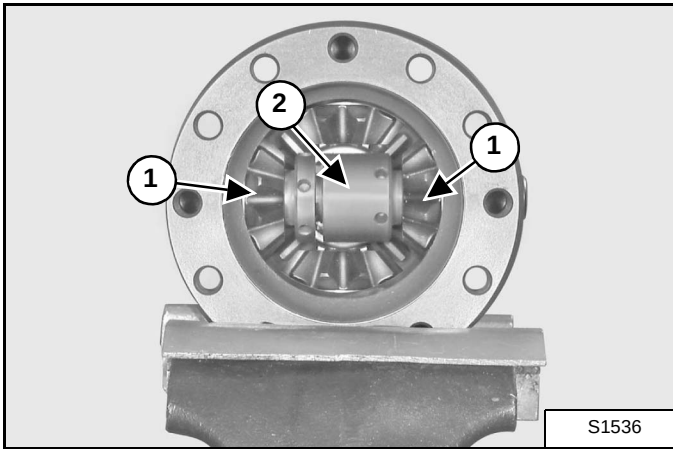


Lock tool (Item 2) behind the planet wheel gears (Item 1) [Figure 40-22-107]. After locking, remove the bar.

Figure 40-22-108

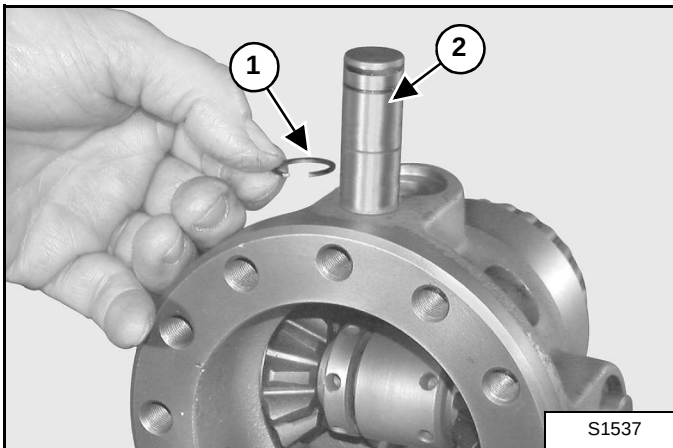


Fit the snap rings (Item 1) onto the pins (Item 2) [Figure 40-22-108].

Figure 40-22-109

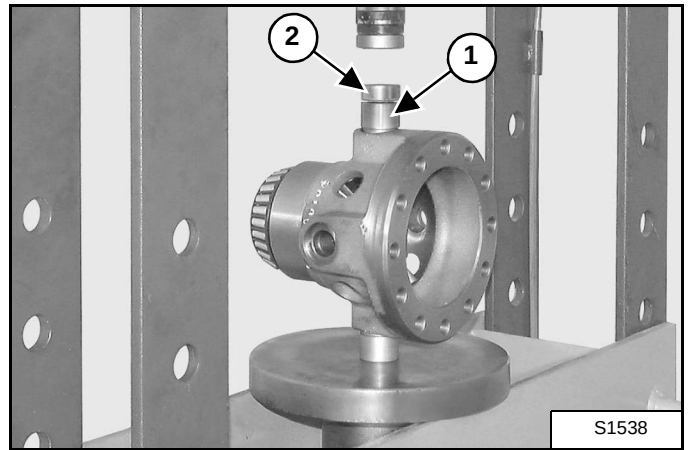

Place the differential carrier under the press, position bushing (Item 1) and insert the planet wheel pin (Item 2) [Figure 40-22-109].

Figure 40-22-110

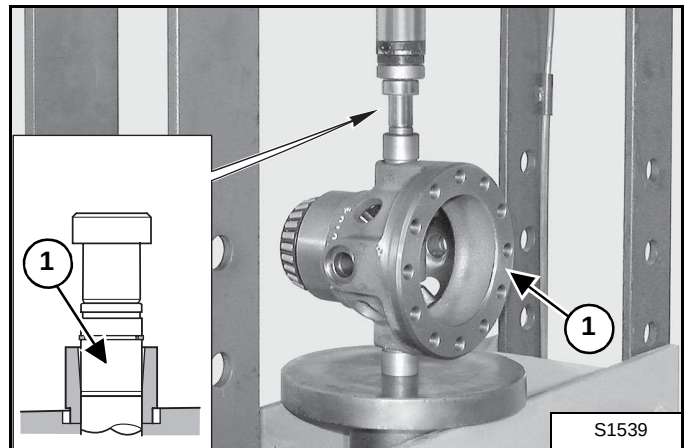


Put a tool pin on top of the planet wheel pin (Item 1) [Figure 40-22-110].

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Differential assembly (Cont'd)

Figure 40-22-111

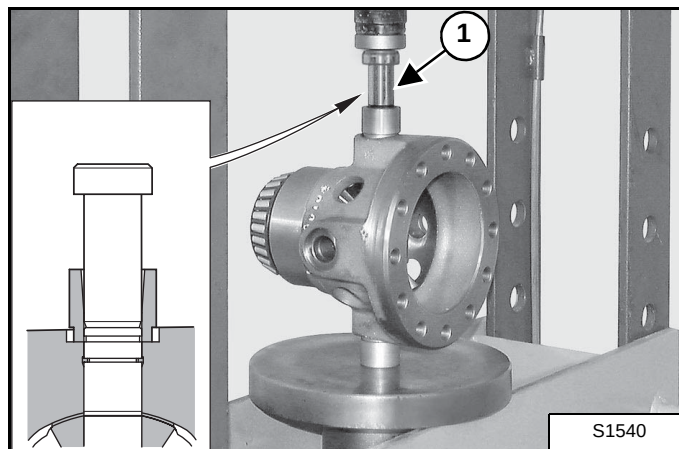

Press the pin all the way down (Item) **[Figure 40-22-111]**


Figure 40-22-112

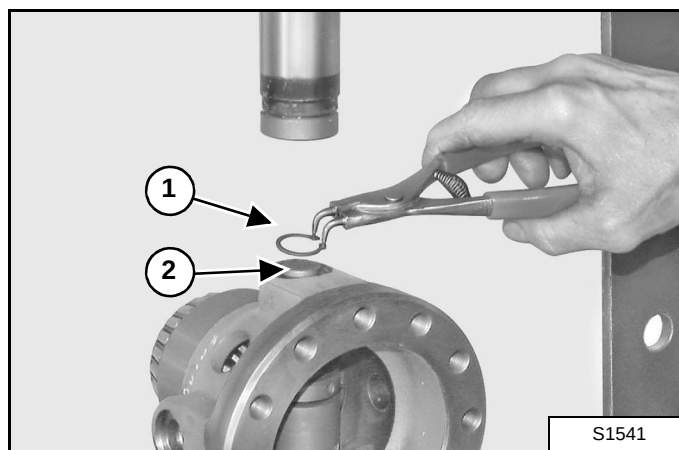

Remove the tool pin, bushing and fit the snap ring (Item 1) on the pin (Item 2) **[Figure 40-22-112]**.


NOTE: Make sure that the snap ring centers the seat and that it rests on the surface of the differential carrier.
Repeat the operations on the other planet wheel pin or planet wheel axle.

Figure 40-22-113

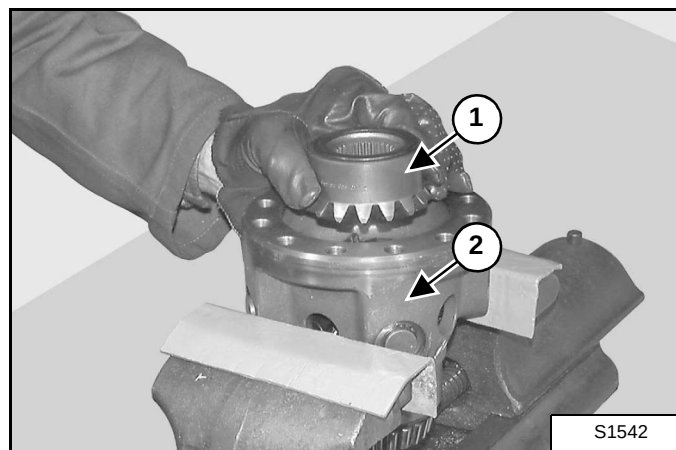

Position the second planetary gear (Item 1) in the differential carrier (Item 2) **[Figure 40-22-113]**.

Figure 40-22-114

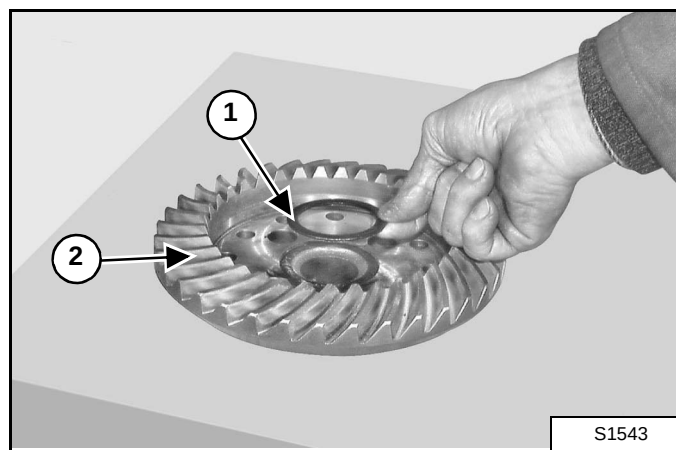


Position the thrust washer (Item 1) on the crown (Item 2) **[Figure 40-22-114]**.

NOTE: In order to hold the shim washer in position, apply grease to it.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Differential assembly (Cont'd)

Figure 40-22-115

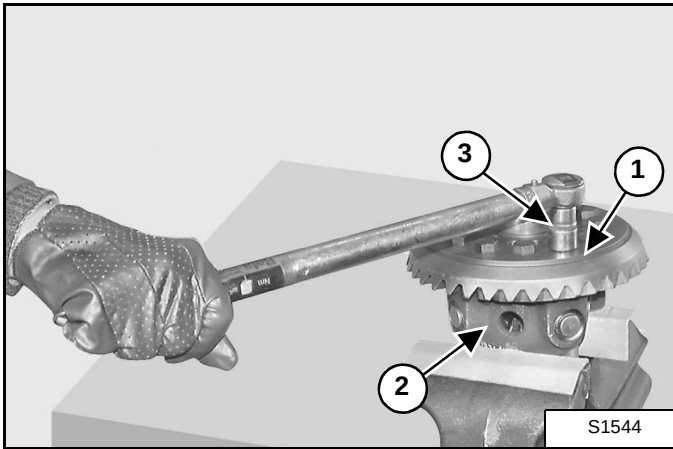


Position the crown (Item 1) on the differential carrier (Item 2) and lock it with screws (Item 3) [Figure 40-22-115] applied with Loctite 242.

Torque wrench setting for screws: 95 - 105 ft.-lb. (128-142 Nm).


NOTE: Secure the screws using the cross tightening method.

Figure 40-22-116

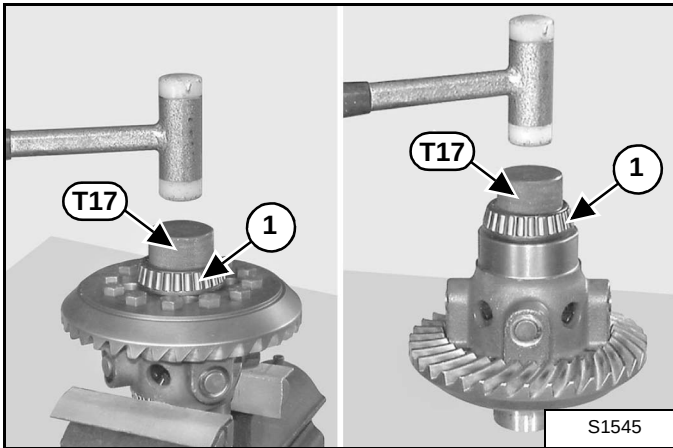


Install the bearing races (Item 1 and 2) [Figure 40-22-116] using tool T17.

Figure 40-22-117

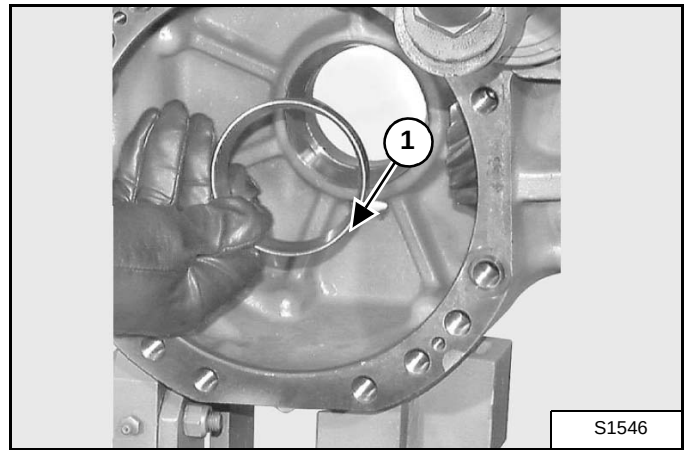

If the bearings are replaced, insert the external bearing races in the middle cover (Item 1) [Figure 40-22-117] and in the central body.

Figure 40-22-118

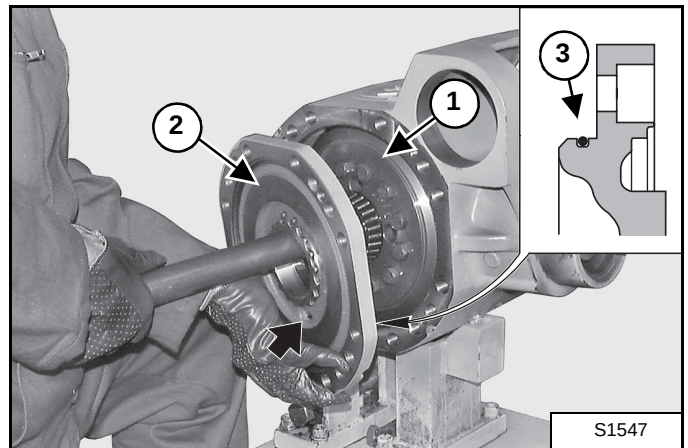


Position the differential unit in the central body (Item 1) with the help of a bar and fit the middle cover (Item 2) [Figure 40-22-118].

NOTE: Thoroughly check the state of the O-ring (Item 3) [Figure 40-22-118] and make sure that the cover is fitted with the hole (see arrow on [Figure 40-22-118]) in the lower position.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Differential assembly (Cont'd)


Figure 40-22-119

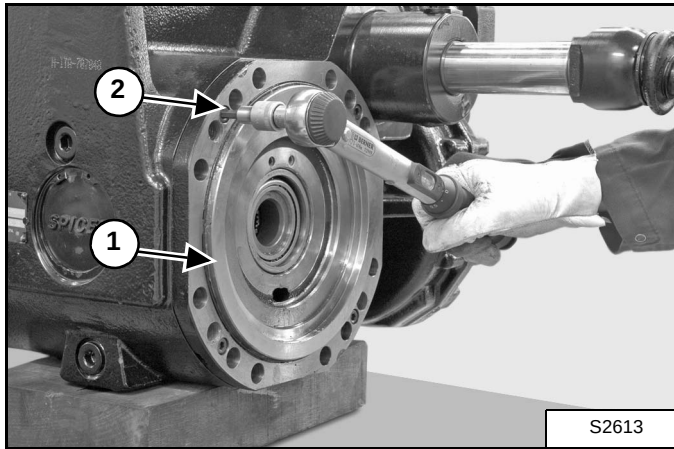

Lock the middle cover (Item 1) with screws (Item 2) [Figure 40-22-119]. Torque wrench setting for screw: 17.5 - 19.5 ft.-lb. (23.8-26.2 Nm).


Setting Ring And Pinion Backlash

Figure 40-22-120

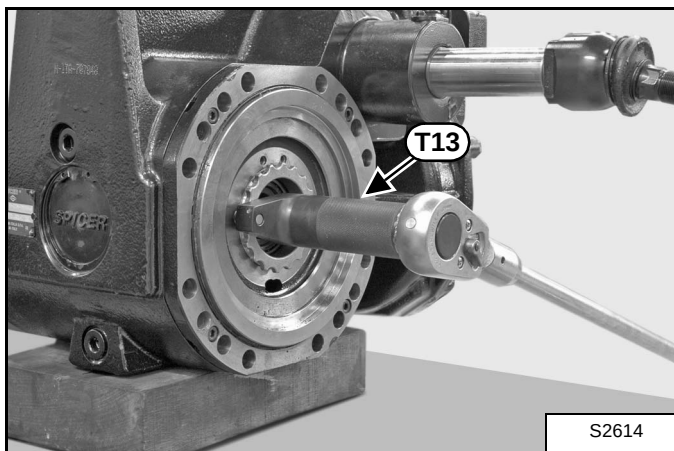

NOTE: If the lock nuts (Item 1) [Figure 40-22-44] are removed, apply some Loctite 242 to them. Tighten lock nuts on the crown side until clearance between pinion and crown is zero, then lock the crown. Go back 1/4—1/2 turn.


Figure 40-22-121

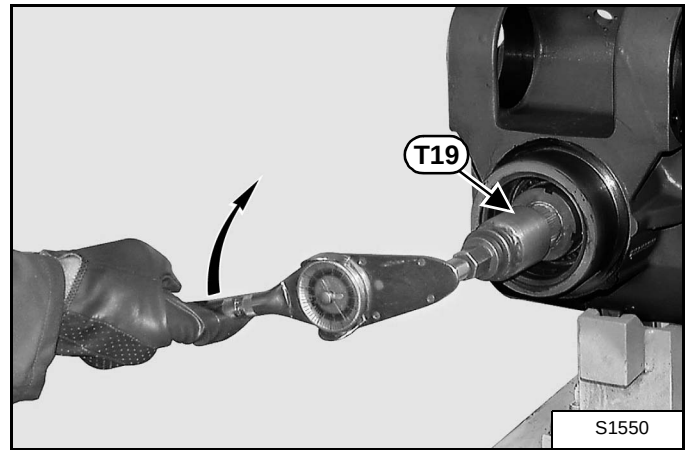

Pre-set the bearings by means of the ring nut situated on the opposite side of the crown, so as to increase pinion torque up to 1.0 - 1.55 ft.-lb. (1,40- 2,10 Nm).

NOTE: If bearings are not new, check the static torque. If bearings are new, check the continuous torque.

Figure 40-22-122

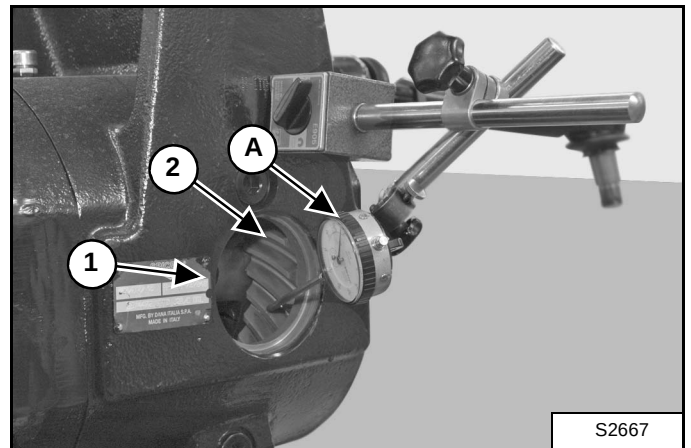


Introduce a dial indicator with rotary key "A" through the plug hole (Item 1) [Figure 40-22-122]. Position the indicator on the centre of one of the teeth of the crown (Item 2) [Figure 40-22-122] and pre-set it to 1 mm and reset it.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Differential assembly (Cont'd)

Figure 40-22-123

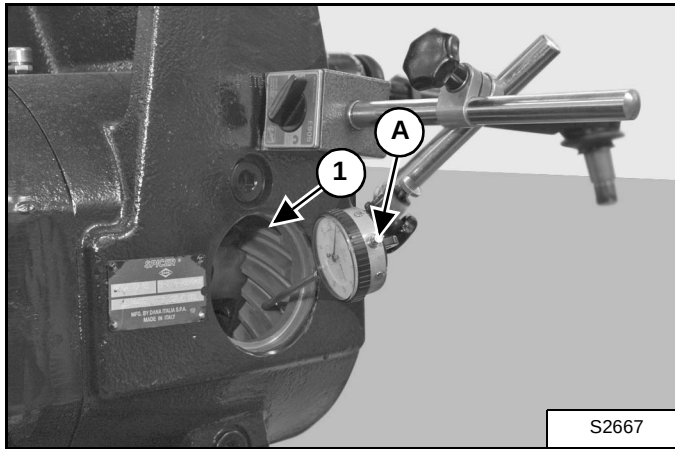

Manually move the crown (Item 1) [Figure 40-22-123] in both directions in order to check the existing backlash between the pinion and the crown.

Figure 40-22-124

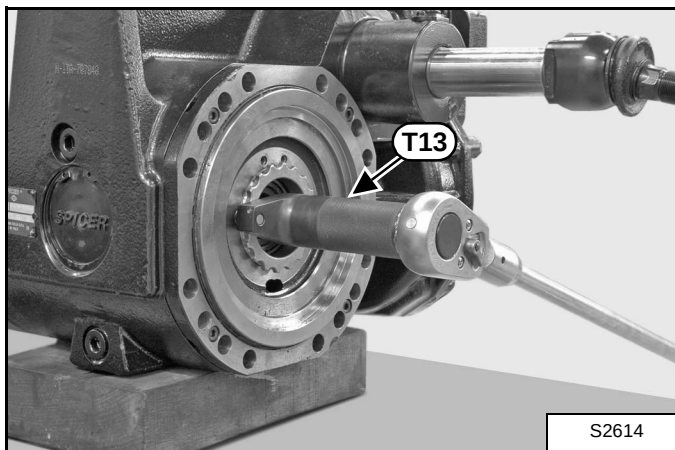


Adjust the backlash between the pinion and the crown by unloosening one of the ring nuts (Item 1) [Figure 40-22-124] and tightening the opposite to compensate. Normal backlash: see table.

RATIO	CLEARANCE	
	MIN.	MAX.
14—32	0.18	0.23

NOTE: Difference between MIN and MAX clearance for whole circumference should not exceed 0.09 mm.

Figure 40-22-125

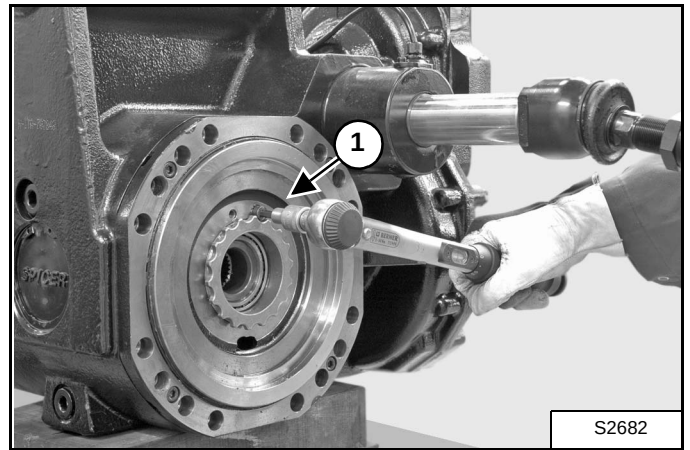


Apply Loctite 242 to the screws (Item 1) [Figure 40-22-125], fit them into one of the two holes and tighten. Torque wrench setting: 17.5 - 19.3 ft.-lb. (23.8 - 26.2 Nm). Fit the plug in the hole (Item 1) [Figure 40-22-122] after applying flexible gasket compound for seals to the rims.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Brake System Assembly

Figure 40-22-126

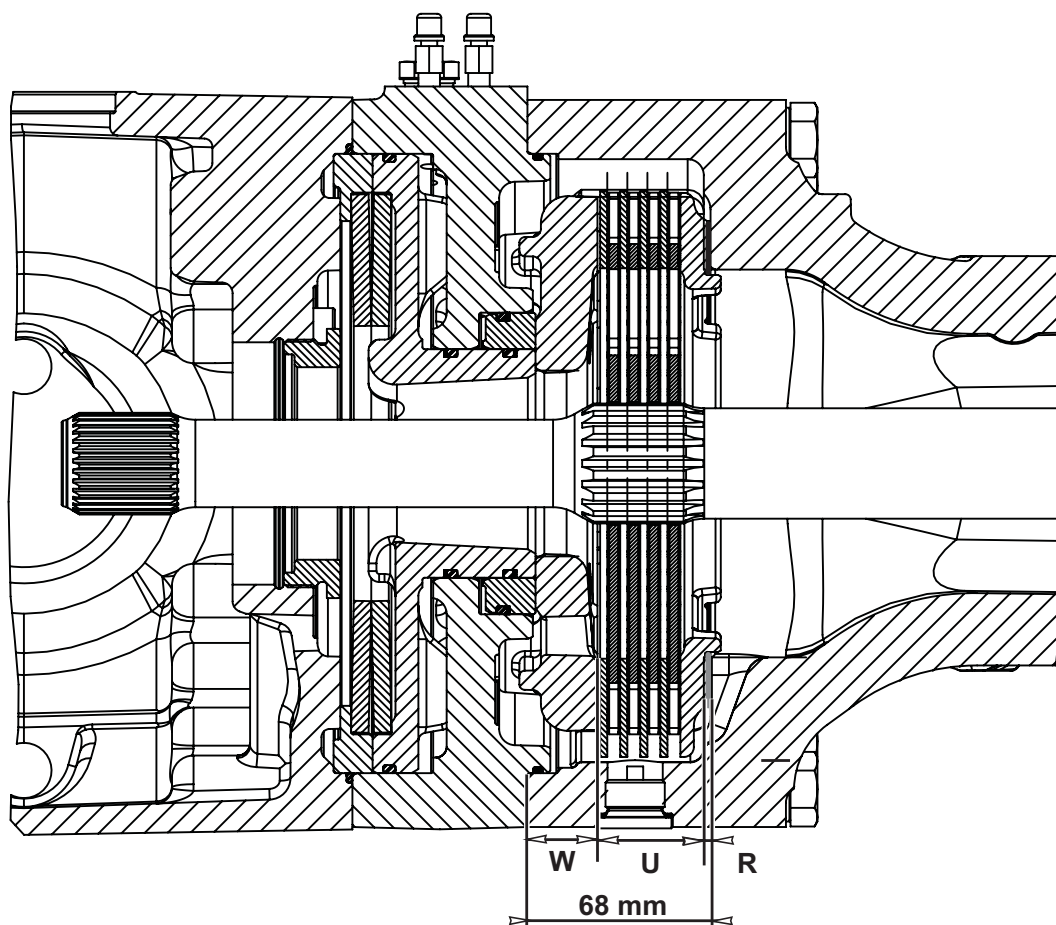


Y = Brake gap
Y = 0.75 mm

S2735

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Brake System Assembly (Cont'd)

Figure 40-22-127

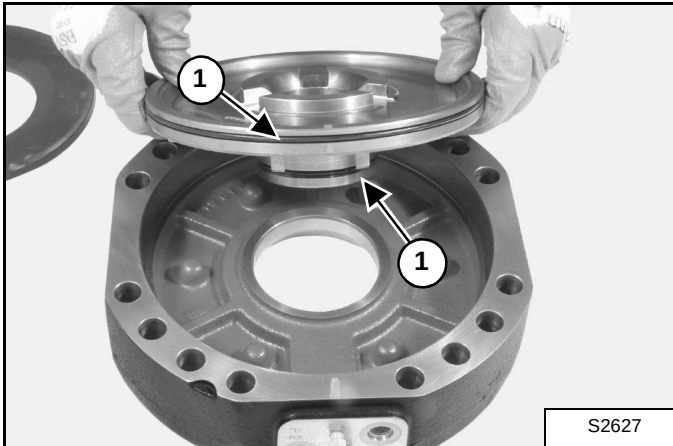

Fit O-rings (Item 1) [Figure 40-22-127] onto the piston. Lubricate the piston and the O-rings and install the unit into the cylinder.


Figure 40-22-128

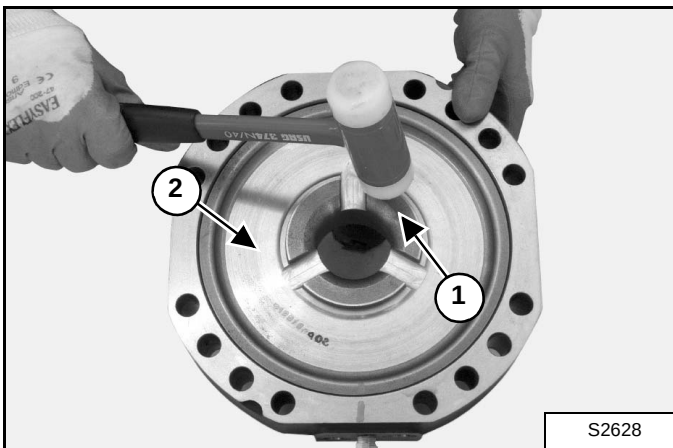

Using a plastic hammer, tap the piston (Item 1) into the cylinder (Item 2) [Figure 40-22-128].


NOTE: Lightly hammer all around the edge in an alternate sequence.

Figure 40-22-129

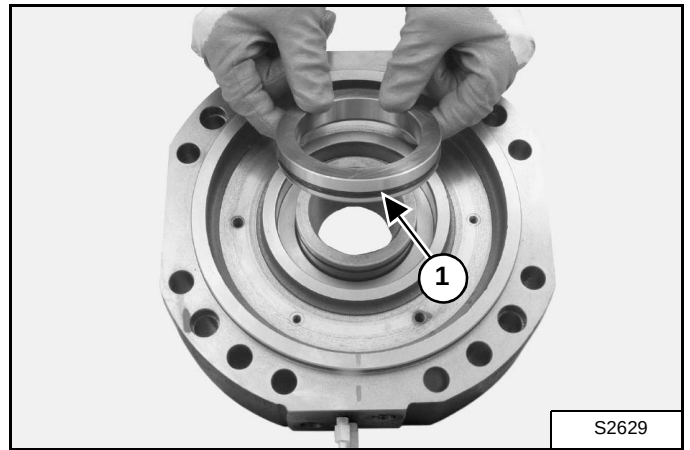

Fit O-rings (Item 1) [Figure 40-22-129] onto the piston. Lubricate the piston and the O-rings and install the unit into the cylinder.

Figure 40-22-130

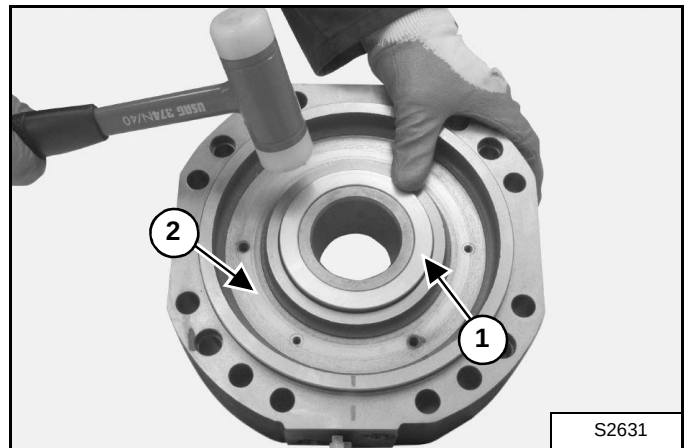


Using a plastic hammer, tap the piston (Item 1) into the cylinder (Item 2) [Figure 40-22-130].

NOTE: Lightly hammer all around the edge in an alternate sequence.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Brake System Assembly (Cont'd)


Figure 40-22-131

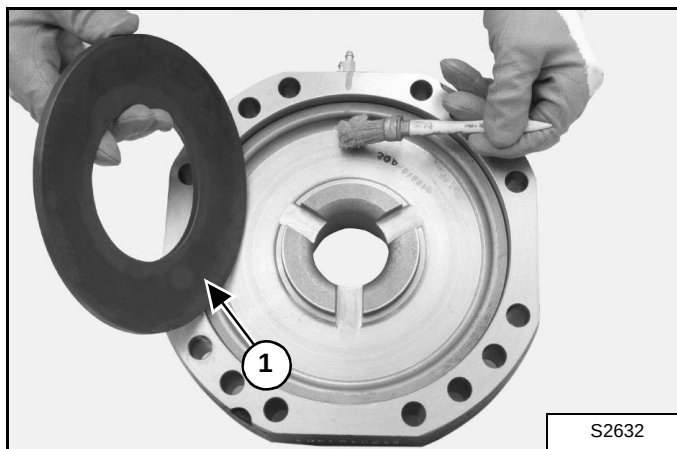

Clean and grease the surface, position the Belleville washers (Item 1) [Figure 40-22-131] and engage the cylinder.


NOTE: Check the sense of direction of washers and relative centring.

Figure 40-22-132

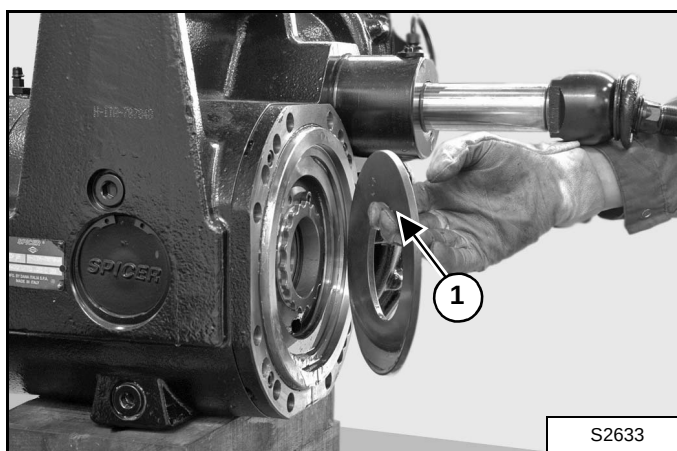


Position the Belleville washers (Item 1) [Figure 40-22-132] and engage the cylinder.

Figure 40-22-133

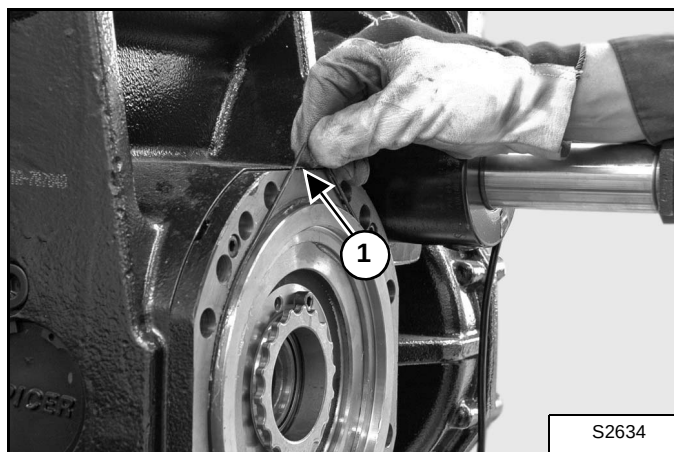

Install the O-ring (Item 1) [Figure 40-22-133].

Figure 40-22-134

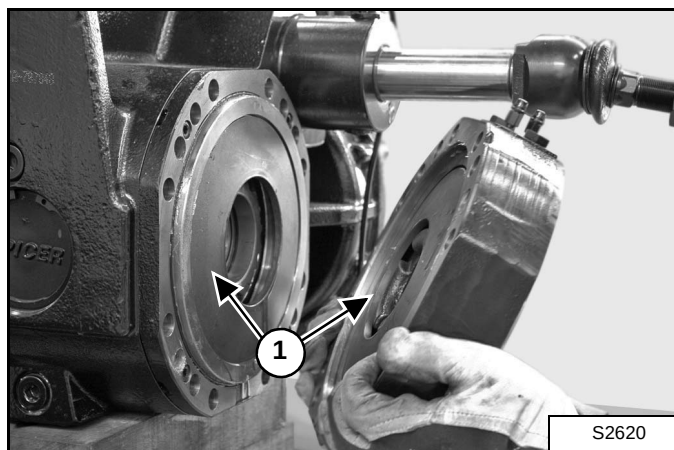


Position the Belleville washers (Item 1) [Figure 40-22-134] and engage the cylinder.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Brake System Assembly (Cont'd)

Figure 40-22-135

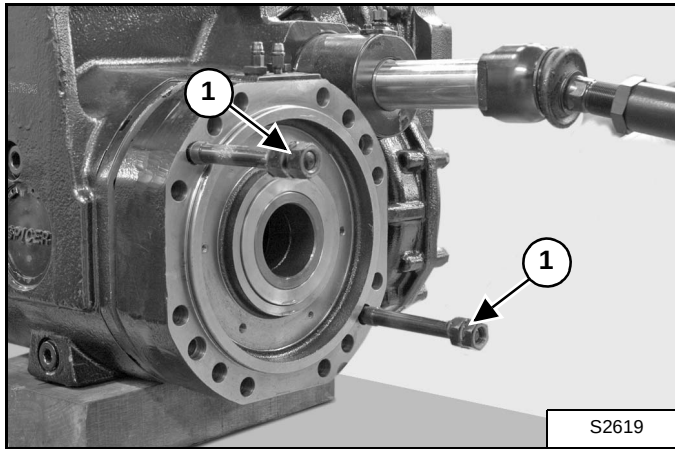


Tighten the studs (Item 1) [Figure 40-22-135] with a dynamometric wrench to set a torque of 22 - 33 ft.-lb. (30 - 45 Nm).

Figure 40-22-136

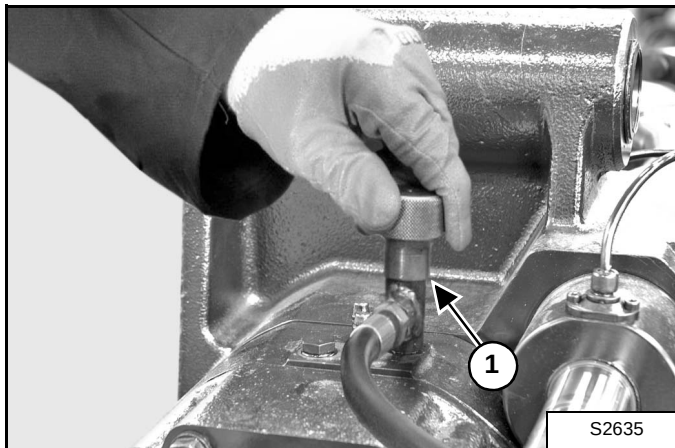


Connect an external pump to the negative brake (Item 1) [Figure 40-22-136] and introduce pressure to 217 - 435 PSI (15 - 30 Bar). Always use Bobcat hydraulic fluid.

Figure 40-22-137

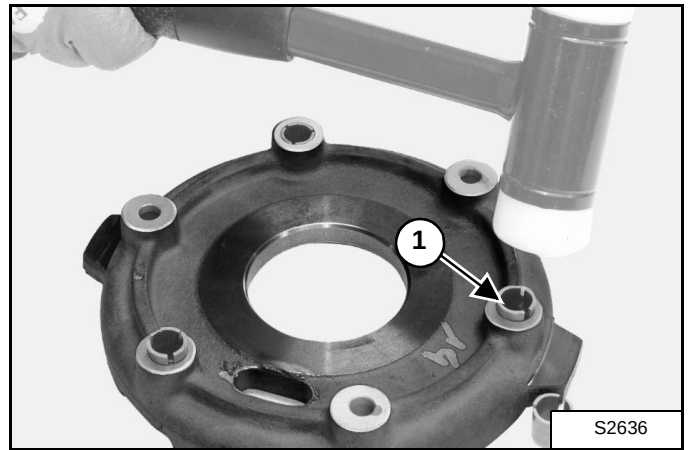

Insert the stroke automatic regulation springs (Item 1) [Figure 40-22-137], place them in line with the piston.

Figure 40-22-138

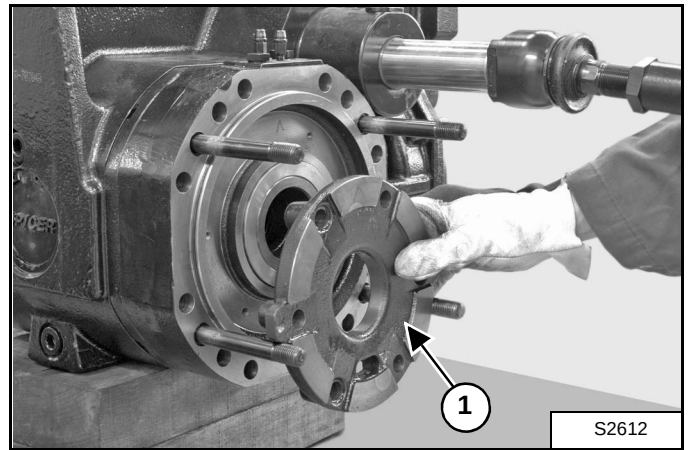


Insert the intermediate disk (Item 1) [Figure 40-22-138].

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Brake System Assembly (Cont'd)

Figure 40-22-139

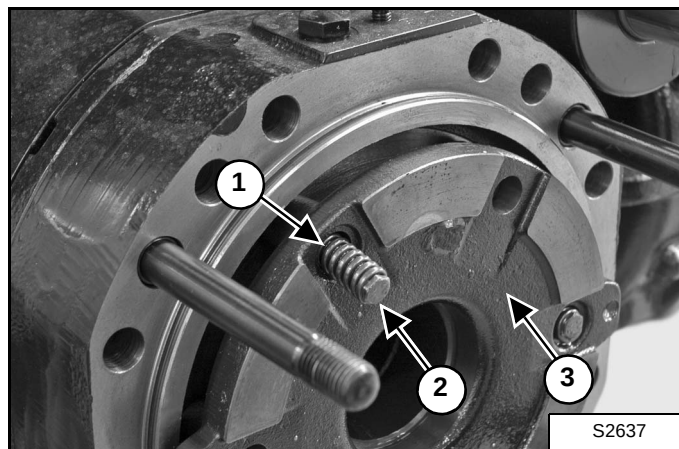

Install the six springs (Item 1) and the bolts (Item 2) into the piston (Item 3) [Figure 40-22-139].

Figure 40-22-140

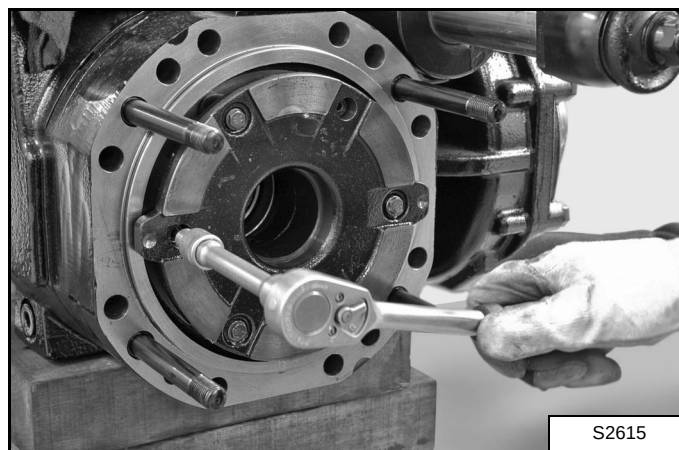


Fit the pin screws making sure that they are all of the same colour.

Apply Loctite 270 to the thread.


Torque wrench setting: 3.7 - 5.2 ft.-lb. (5 - 7 Nm).

Figure 40-22-141

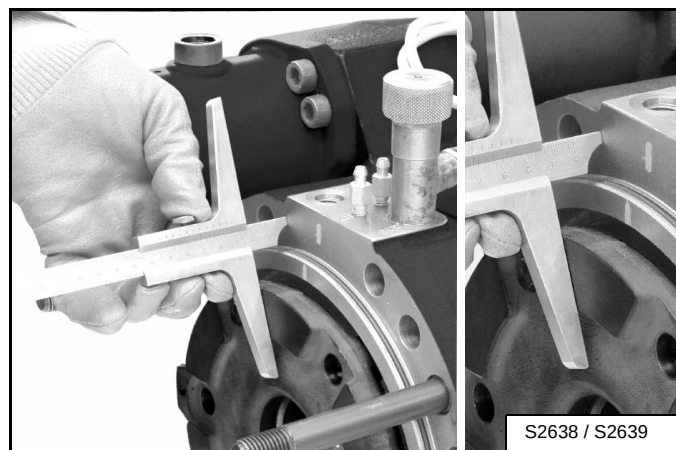

Take measure from the surface of the intermediate disk to the cover sealing surface with 435 PSI (30 bar) of pressure introduced. (example : 25.4 mm).

Figure 40-22-142

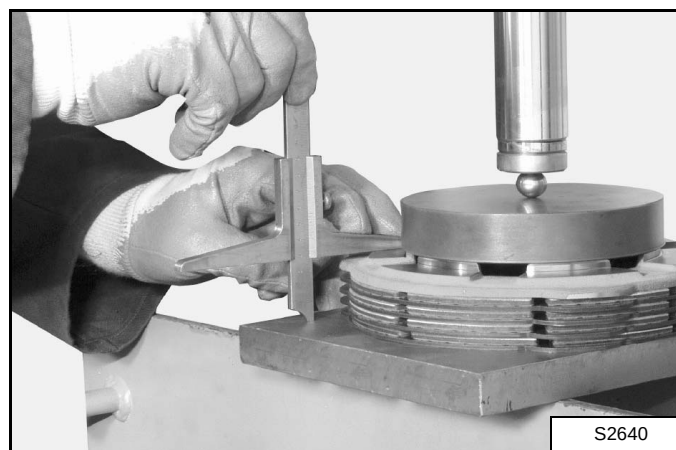


Put the brake disc pack including the shim under a press, load with 220 lb. (100 kg) and take the measure "V". (example: 40 mm)

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Brake System Assembly (Cont'd)


Figure 40-22-143

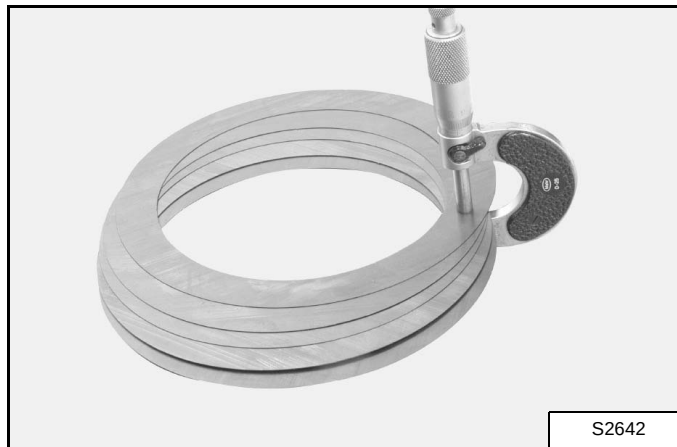

$S = 68 \text{ mm} - (x + y + v) =$ Thickness of shims to insert under the shim washer.


See figure [Figure 40-22-126] for a sectional view showing these dimensions.

Figure 40-22-144

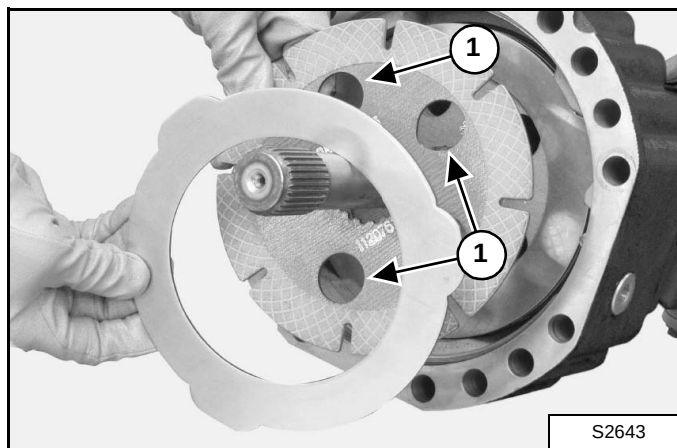

Slightly lubricate the braking disks with Bobcat hydraulic fluid and fit them in the arm following the correct sequence. Orient them so that the oil circulation holes and the holes (Item 1) [Figure 40-22-144] are perfectly lined up.

Figure 40-22-145

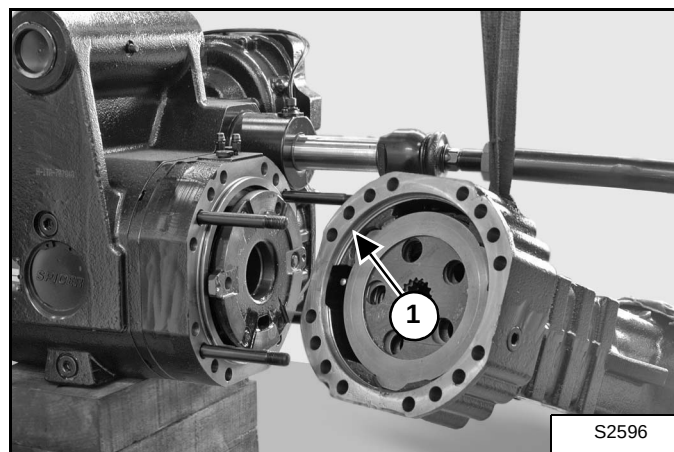


Check integrity and position of the arms' O-ring (Item 1) [Figure 40-22-145], install the complete arm.

NOTE: To assist axle shaft centring, slightly move the wheel hub.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Brake System Assembly (Cont'd)

Figure 40-22-146

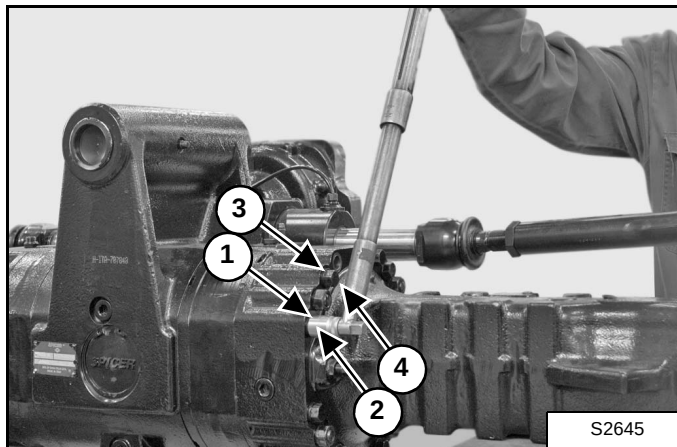


Install the four washer (Item 1) and nuts (Item 2) [Figure 40-22-146], tighten nuts to 150 ft.-lb. (200Nm) torque. Install the twelve washer (Item 3) and bolts (Item 4) [Figure 40-22-146], tighten the bolts to 209 ft.-lb. (283 Nm).

NOTE: Tighten using the criss-cross method.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Drive Axle Assembly


Figure 40-22-147

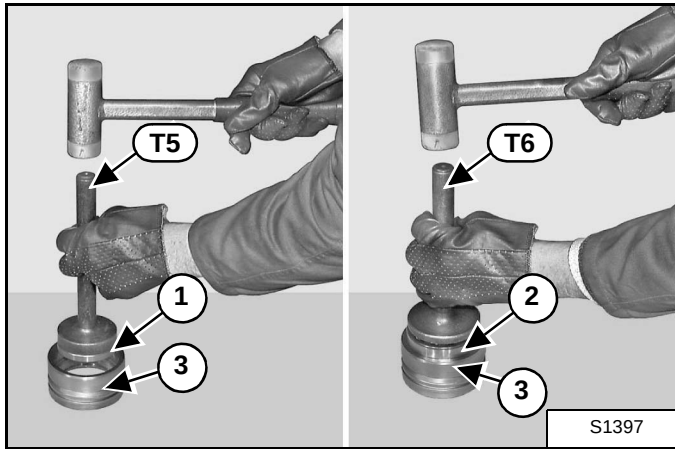

Using tools T5 and T6, insert the sealing ring (Item 1) and the bearing (Item 2) in the bush (Item 3) [Figure 40-22-147].


NOTE: Carefully check the assembly side of the sealing ring.

Figure 40-22-148

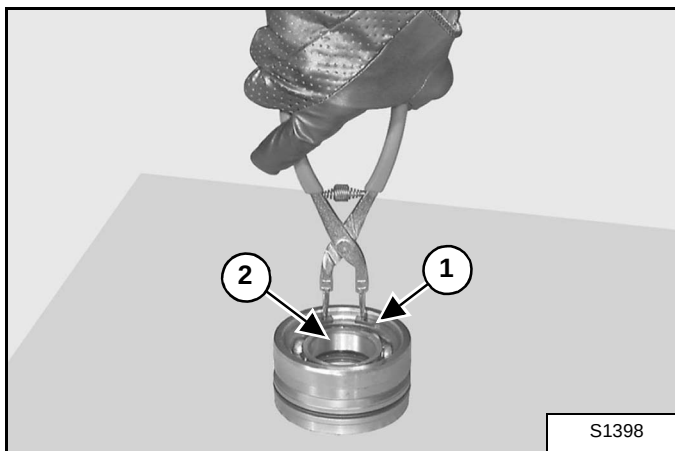

Fit the snap ring (Item 1) on the bearing (Item 2) [Figure 40-22-148].

Figure 40-22-149

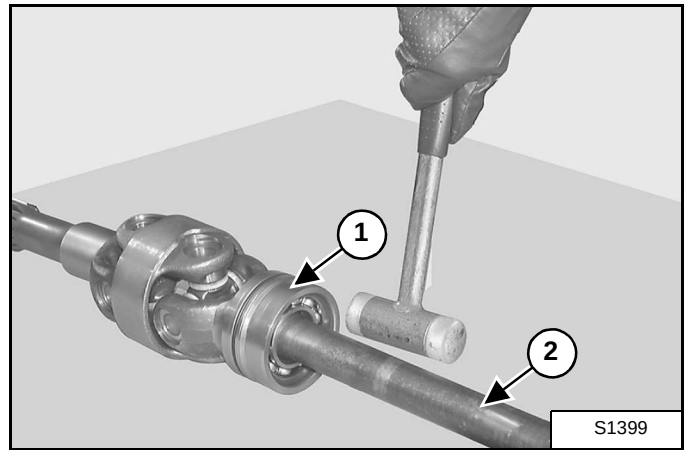

Heat the bush in oil at an approx. temperature of 100°C and fit the entire bush (Item 1) on the drive axle (Item 2) [Figure 40-22-149].




WARNING

AVOID BURN INJURY

Wear protective clothing when handling hot parts.

Figure 40-22-150

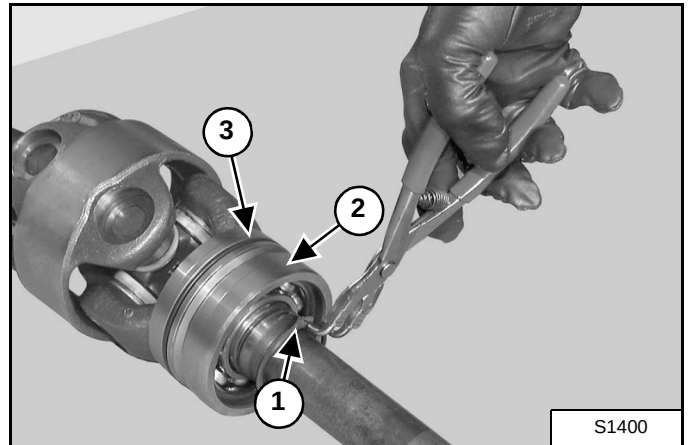


Install the snap ring (Item 1) on the axle shaft (Item 2) [Figure 40-22-150]. After the bearing has cooled, install the O-ring (Item 3) [Figure 40-22-150].

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Drive Axle Assembly (Cont'd)


Figure 40-22-151

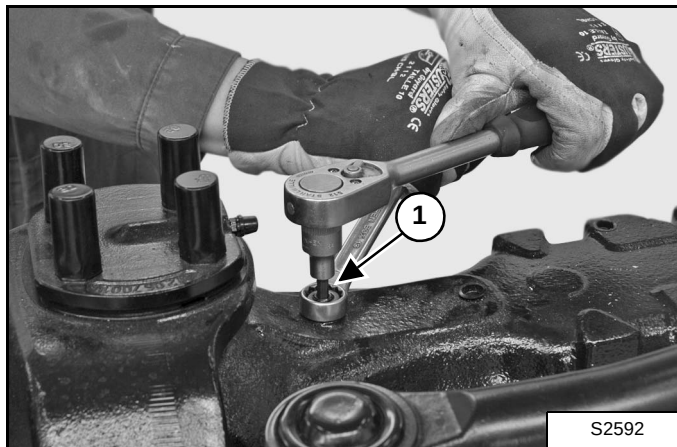

Insert the drive axle and tighten the top and bottom dowels (Item 1) [Figure 40-22-151]. Torque wrench setting: max. 11 ft.-lb. (15 Nm).

NOTE: Centre the point of the check dowels in the slot.

Figure 40-22-152

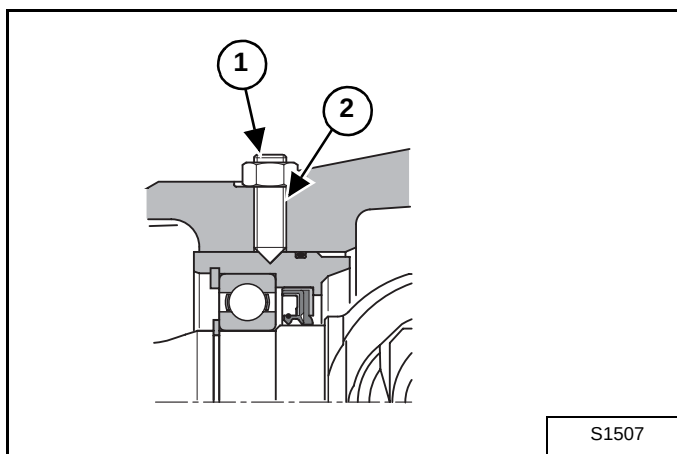


Screw the check nuts (Item 1) of the dowels (Item 2) [Figure 40-22-152] and lock them using a dynamometric wrench: 90 ft.-lb. (122 Nm).

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Steering Knuckle Assembly

Figure 40-22-153

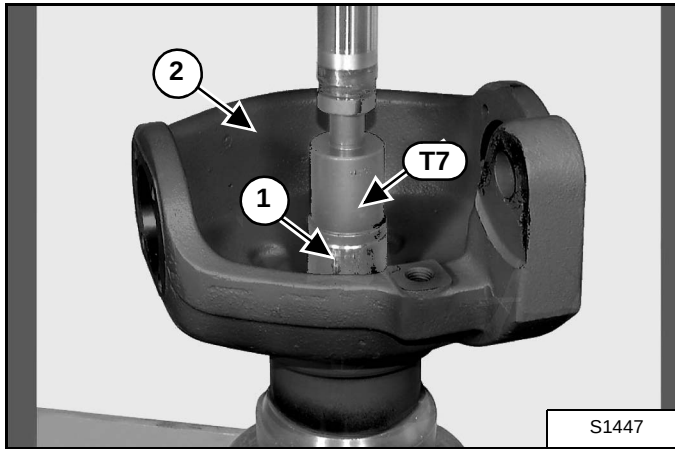


Lubricate the bushing (Item 1) and the seat of the steering case (Item 2). Install the bushing (Item 1) [Figure 40-22-153], using tool T7.

Figure 40-22-154

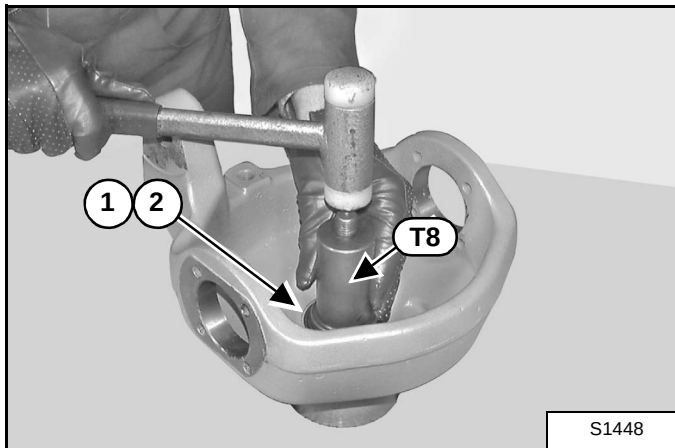


Lubricate the outer surface of the sealing ring (Item 1) and centering ring (Item 2) [Figure 40-22-154]. Fit them into their seat using tool T8.

Figure 40-22-155

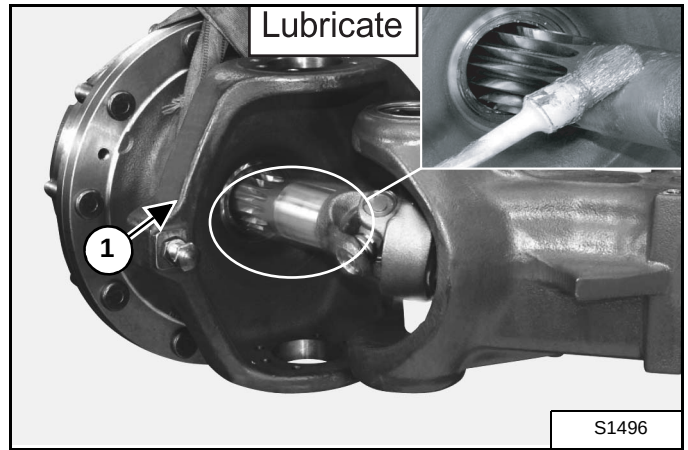

Lubricate the terminal of the drive axle and install the steering case (Item 1) [Figure 40-22-155]. Pay due attention not to damage the dust cover rings and the sealing rings.

Figure 40-22-156

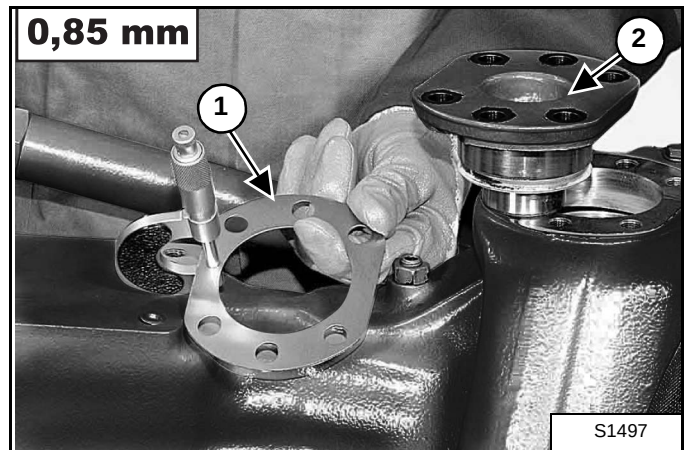


Prepare a series of shims (Item 1) of 0.85 mm. To be assembled under the upper pin (Item 2) [Figure 40-22-156].

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Steering Knuckle Assembly (Cont'd)

Figure 40-22-157

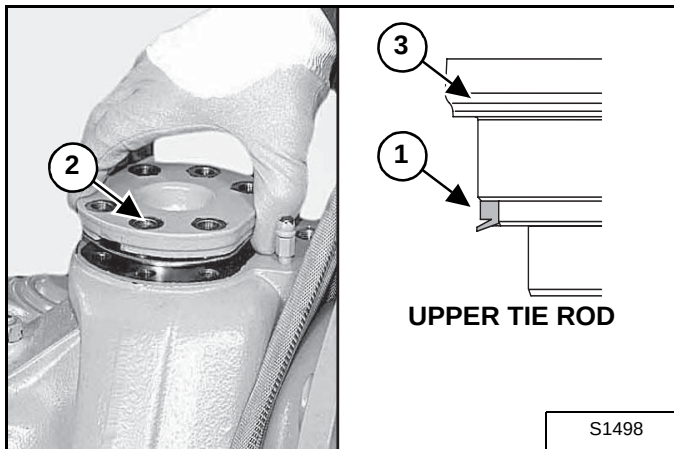


Install the seal (Item 1). Make sure the seal (Item 1) [Figure 40-22-157] is orientated as shown in the inset. Lubricate the pivot pin (Item 3) and the seal (Item 1) [Figure 40-22-157]. Install the pivot pin (Item 3) and the six bolts (Item 2) [Figure 40-22-157]. (Bolts not shown in photo.) Tighten the bolts to 103 ft.-lb. (140 Nm) torque.

Figure 40-22-158

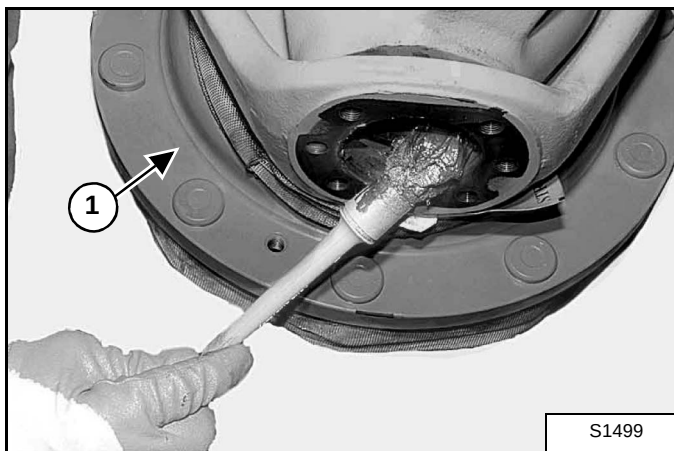


Lubricate the group with grease and mount it in the steering case (Item 1) [Figure 40-22-158].

Figure 40-22-159

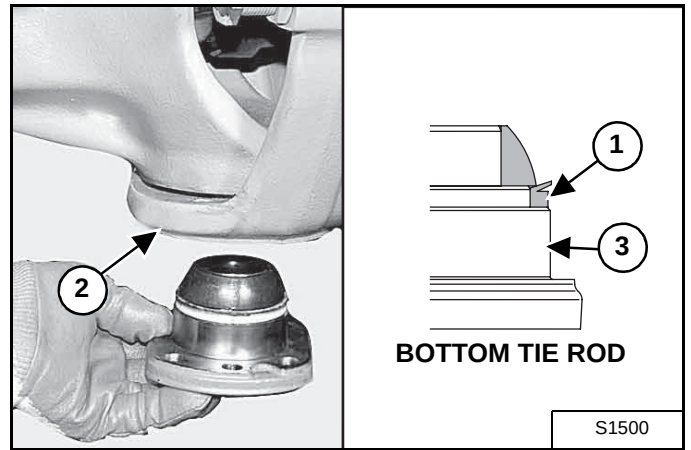

Install the seal (Item 1). Make sure the seal (Item 1) [Figure 40-22-159] is orientated as shown in the inset. Lubricate the pivot pin (Item 3) and the seal (Item 1) [Figure 40-22-159]. Install the pivot pin (Item 3) and the six bolts (Item 2) [Figure 40-22-159]. (Bolts not shown in photo.) Tighten the bolts to 103 ft.-lb. (140 Nm) torque.

Figure 40-22-160

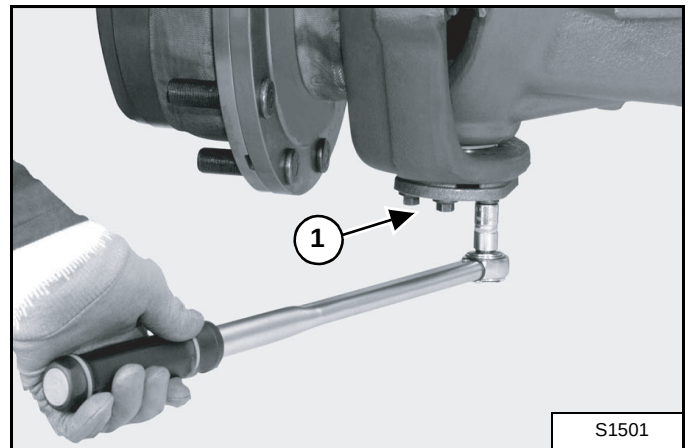


Tighten the fitting screws (Item 1) [Figure 40-22-160] of the bottom tie rod in sequence using the cross tightening method, apply a torque of 103 ft.-lb. (140 Nm).

**AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above)
(CONT'D)**


Steering Knuckle Assembly (Cont'd)

Figure 40-22-161

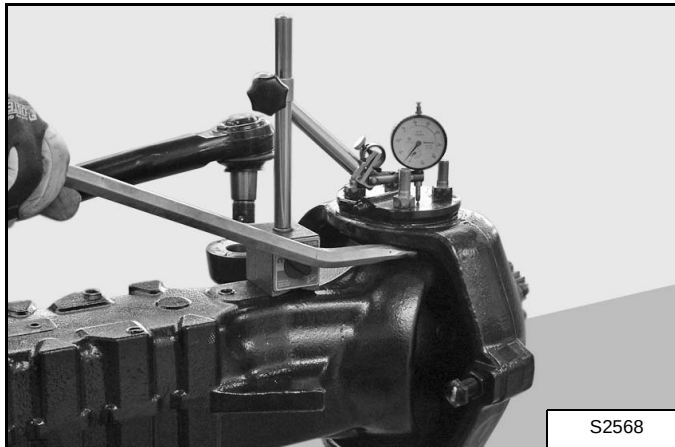

Install a magnetic based dial indicator on the steering housing. Check by means of a lever that there is no vertical gap. In case there is any gap, determine the width and reduce it by removing shims.

Figure 40-22-162

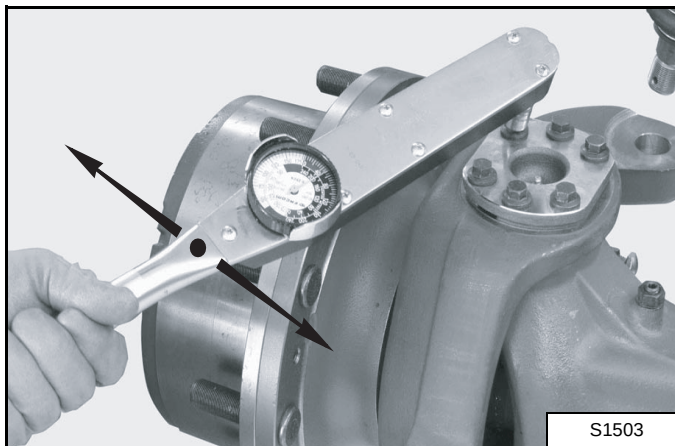


Check the torque of the pins, which has to be between 30 and 44 ft.-lb. (60 Nm). If the preliminary measured value is too high, the shims have to be increased.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Planetary carrier Assembly

Figure 40-22-163

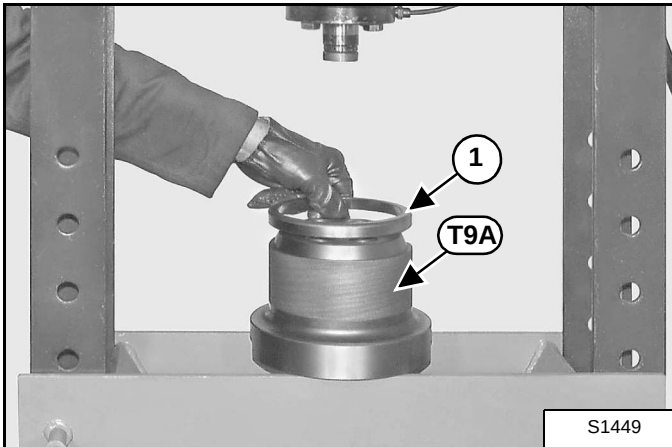

Position the lower part of tool **T9A** and the bearing race of the external bearing (Item 1) **[Figure 40-22-163]** under the press.


Figure 40-22-164

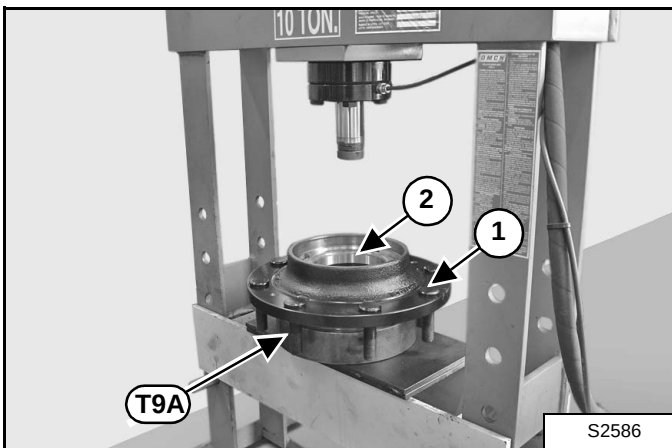

Lubricate the seats of the bearings and position the hub (Item 1) **[Figure 40-22-164]** on tool **T9A**. Position the bearing race (Item 2) **[Figure 40-22-164]** (wide side up).


NOTE: Check that the bearing race is correctly oriented.

Figure 40-22-165

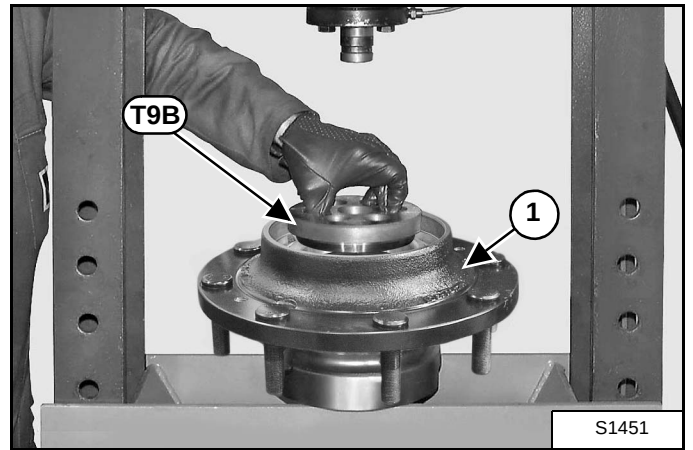

Position the upper part of tool **T9B** and press the bearing races into the hub (Item 1) **[Figure 40-22-165]** all the way down.

Figure 40-22-166

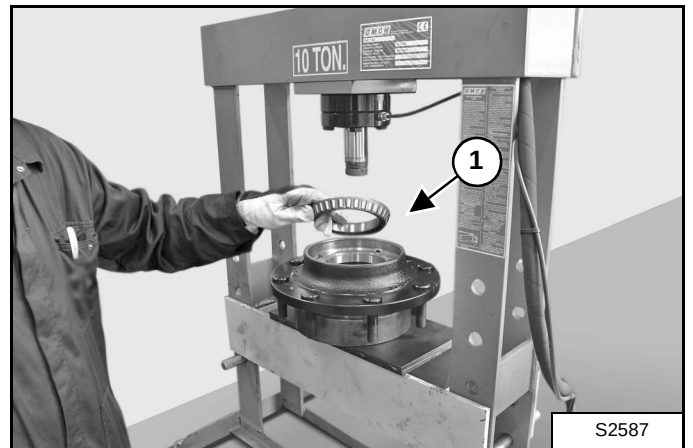


Fit the bearing (Item 1) **[Figure 40-22-166]** into the bearing race.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Planetary carrier Assembly (Cont'd)

Figure 40-22-167

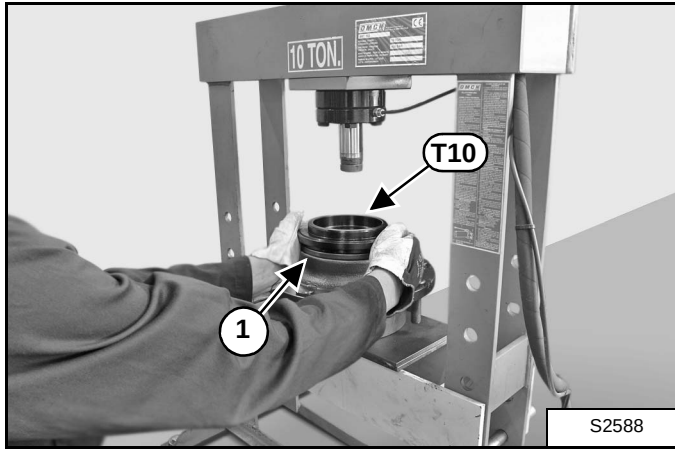


Position tool **T10** and press the sealing ring (Item 1) [Figure 40-22-167] into its seat.

Figure 40-22-168

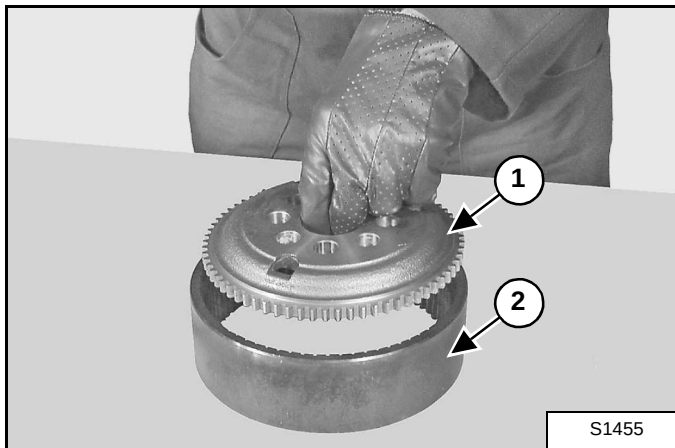

Insert the flange (Item 1) in the crown (Item 2) [Figure 40-22-168].


Figure 40-22-169

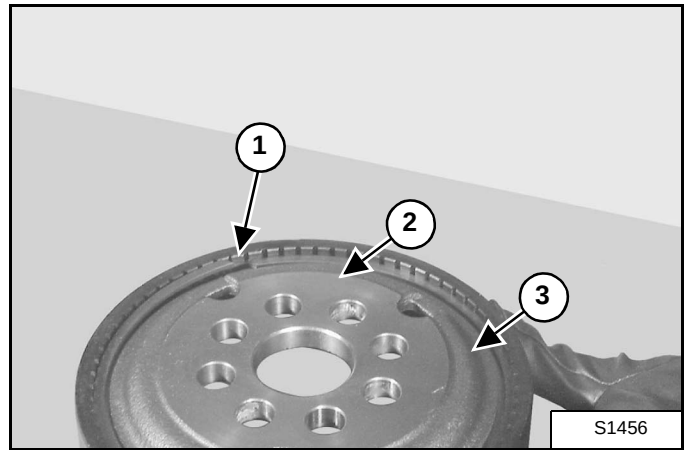

Insert the snap ring (Item 1) in order to fix the flange (Item 2) in the crown (Item 3) [Figure 40-22-169].

NOTE: Make sure the snap ring is firmly seated in the groove.

Figure 40-22-170

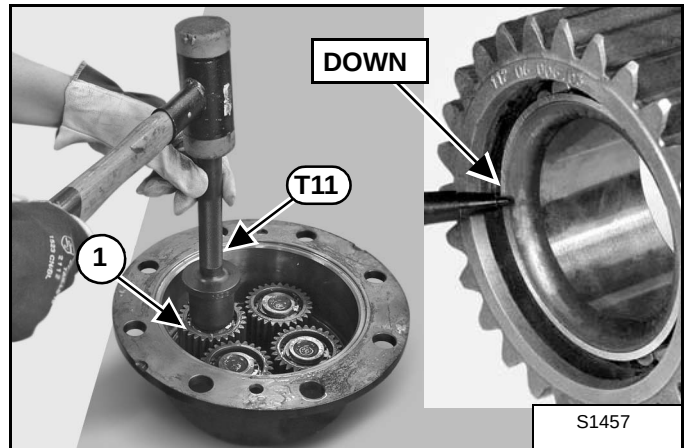


With the help of tool **T11**, insert the planet wheel gears (Item 1) into the cover (Item 2) [Figure 40-22-170]. Accurately check the orientation.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Planetary carrier Assembly (Cont'd)

Figure 40-22-171

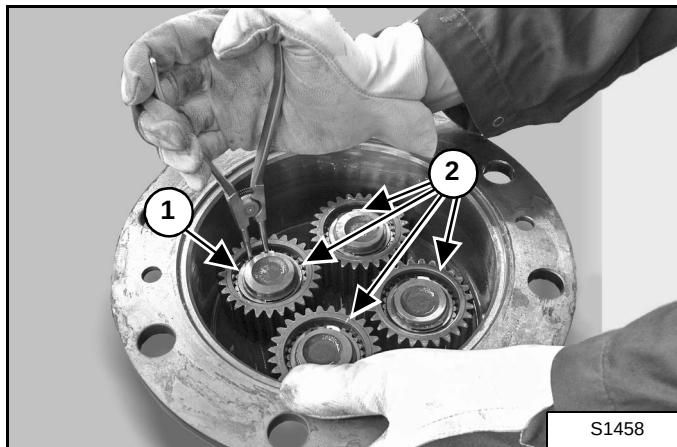


Install the four snap rings (Item 1) [Figure 40-22-171].

Figure 40-22-172

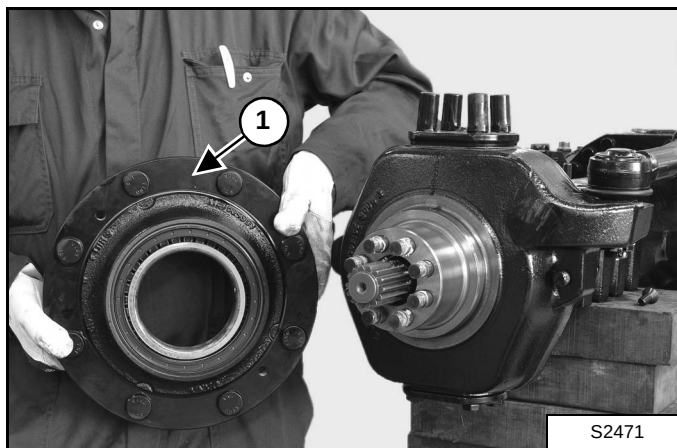

Install the hub (Item 1) [Figure 40-22-172].

Figure 40-22-173

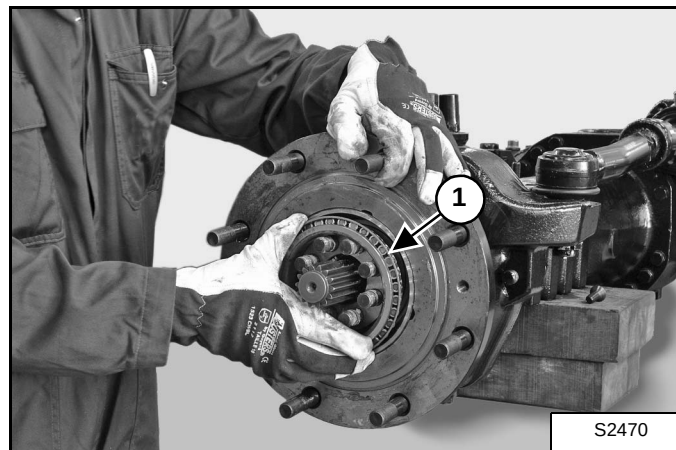


Install the external bearing (Item 1) [Figure 40-22-173].

NOTE: Using a plastic hammer, drive the bearing to the limit stop by lightly hammering around the edge.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Planetary carrier Assembly (Cont'd)


Figure 40-22-174

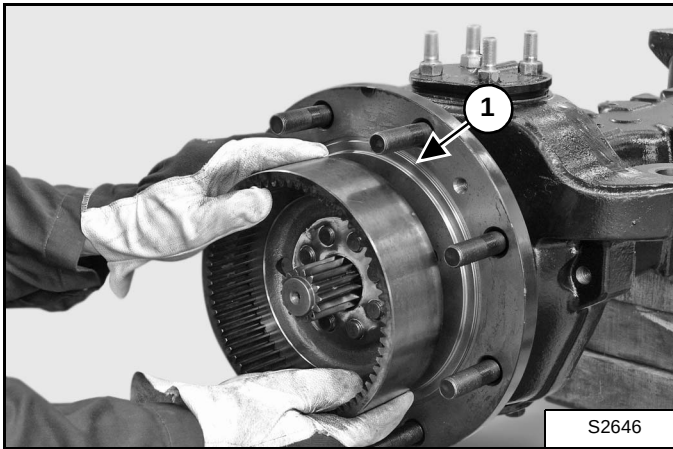

Fit the complete crown flange (Item 1) [Figure 40-22-174].

NOTE: In order to fasten the flange, use a plastic hammer and alternatively hammer on several equidistant points.


Figure 40-22-175

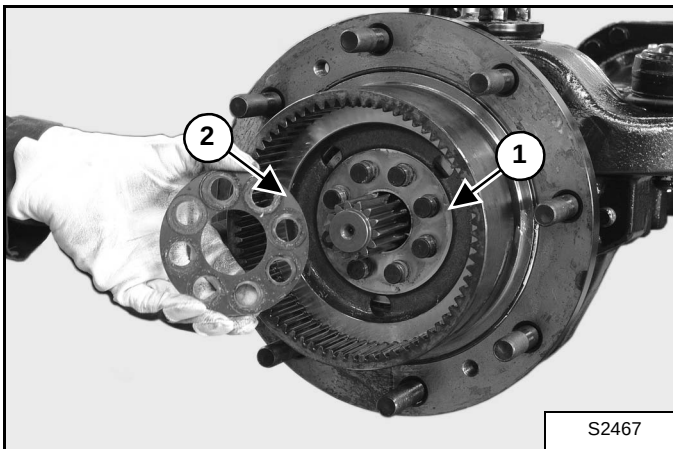

Apply silicone-based grease to the surface of the flange (Item 1) which touches the crown flange (Item 2) [Figure 40-22-175].

Fit the flange (Item 1) [Figure 40-22-175].

Figure 40-22-176

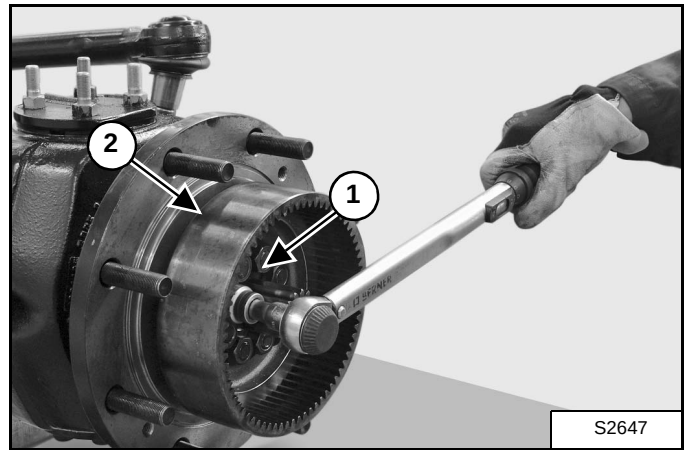


Apply silicone based grease to the surface of the flange (Item 1) which touches the crown flange (Item 2) [Figure 40-22-176].

Cross tighten the nuts (Item 1) [Figure 40-22-176] in two stages.

Initial torque wrench setting: 89 ft.-lb. (120 Nm).

Final torque wrench setting: 188 - 210 ft.-lb. (255 - 285 Nm).

Figure 40-22-177

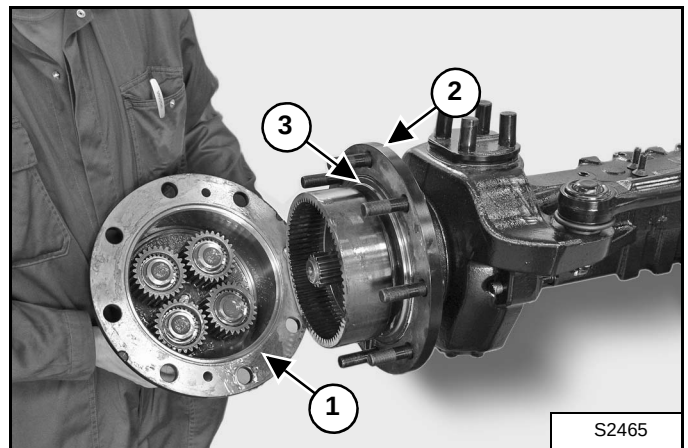


Fit the planetary carrier cover (Item 1) onto the hub (Item 2) [Figure 40-22-177].

NOTE: Check that the O-ring (Item 3) [Figure 40-22-177] is in good condition and in position.

AXLE AND DIFFERENTIAL (FRONT) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Planetary carrier Assembly (Cont'd)

Figure 40-22-178

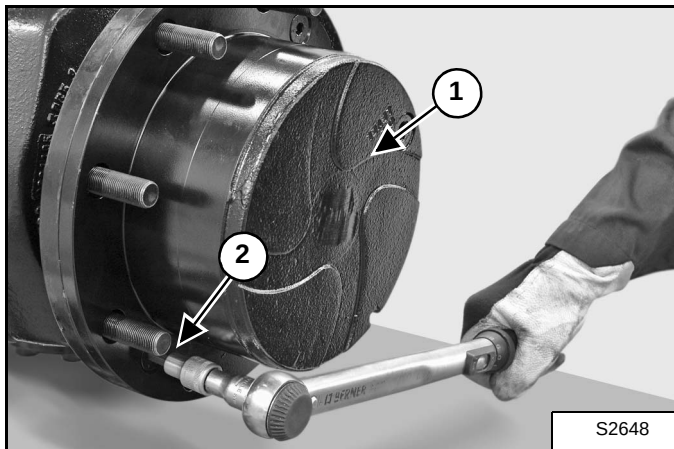

Lock the planetary carrier cover (Item 2) **[Figure 40-22-178]** by tightening the screws (Item 1) **[Figure 40-22-178]**. Apply a torque of 30 - 37 ft.-lb. (40 - 50 Nm).

SPECIAL TOOLS

BOBCAT PN	IMAGE	DESCRIPTION	TOOL NR.
6912190		WHEEL HUB SEAL	T10
6912192		DIFFERENTIAL RING NUT	T13
6912196		DIFFERENTIAL BEARING INNER RINGS	T17
6912197		PINION RING NUT	T19 T21 T22
6912199		PINION DUMMY BEARING	T24
6912201		DUMMY PINION	T26
6912202		PINION TAIL SEAL	T27


AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above)

General Information

For photo clarity, the following axle procedures are done with the complete axle assembly removed from the machine, although the planetary carrier, wheel hub, steering knuckle and drive axle procedures may be done with the axle assembly installed in the machine. For complete axle repair, the following must be done.

- Rear Axle removal. (See "Removal" on page 40-91-1.)
- Rear steering cylinder removal. (See "Removal And Installation" on page 20-62-1.)

Planetary Carrier Parts Identification

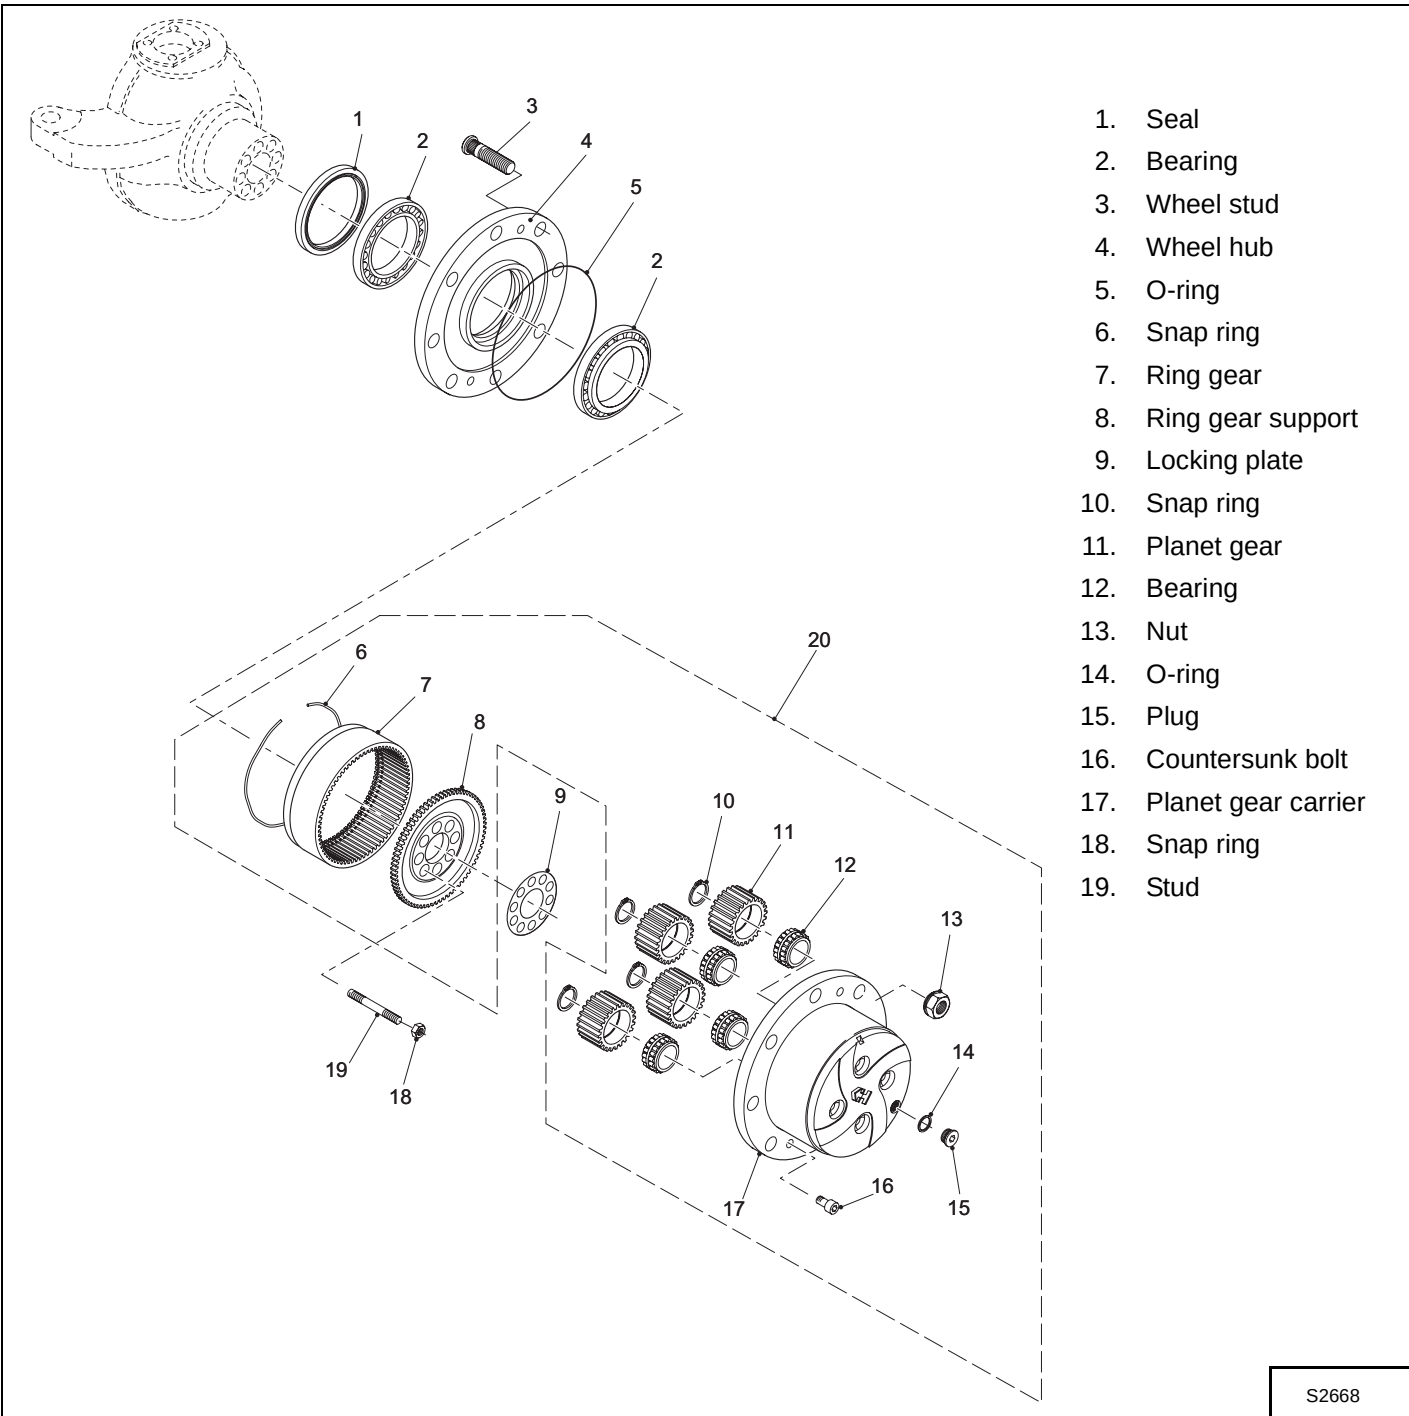


S2668

AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Planetary Carrier Disassembly (Cont'd)

Figure 40-23-1

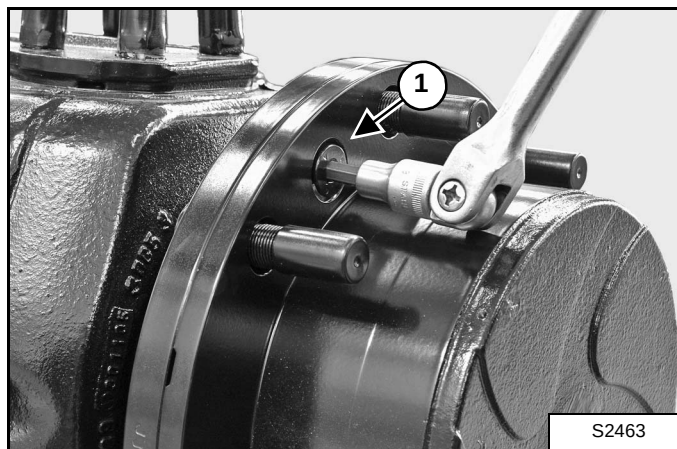


Loosen the securing bolts (Item 1) [Figure 40-23-1] only so that later when you pry the planet gear carrier loose, it does not fall.

Figure 40-23-2

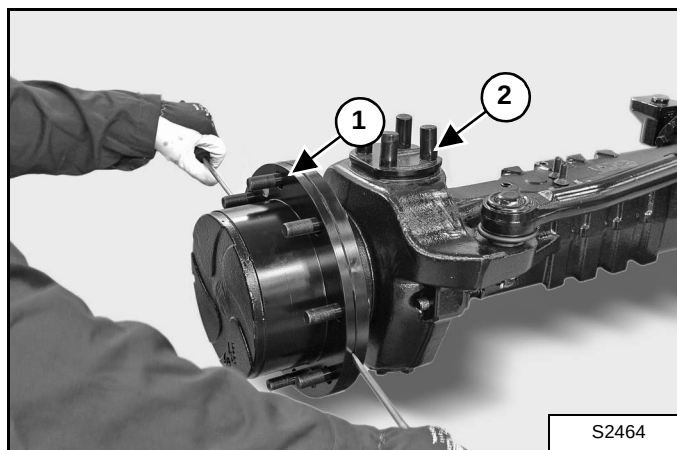


Remove the planet gear carrier (Item 1) from the steering case (Item 2) [Figure 40-23-2] by alternatively forcing a screwdriver into the appropriate slots.

Figure 40-23-3

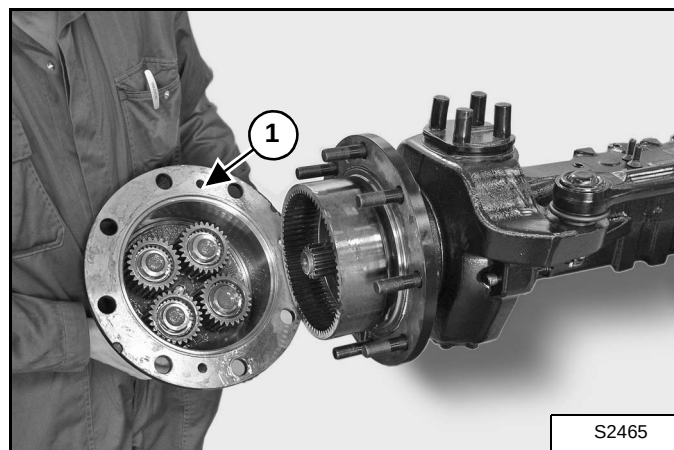

Remove the securing bolts and lift the planet gear carrier (Item 1) [Figure 40-23-3].

Figure 40-23-4

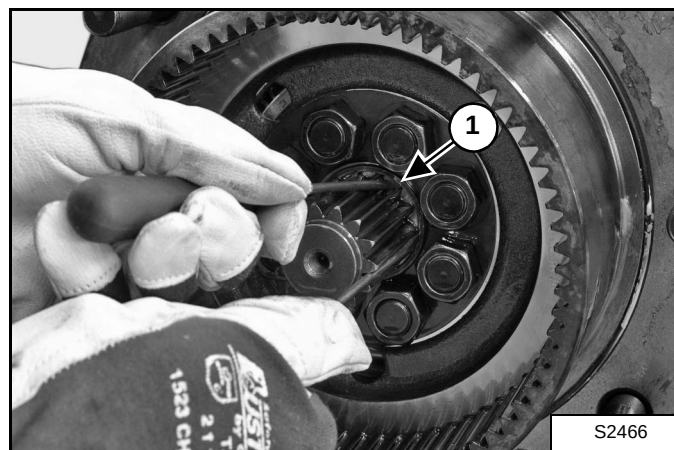


Remove the snap ring (Item 1) [Figure 40-23-4].

AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Planetary Carrier Disassembly (Cont'd)

Figure 40-23-5

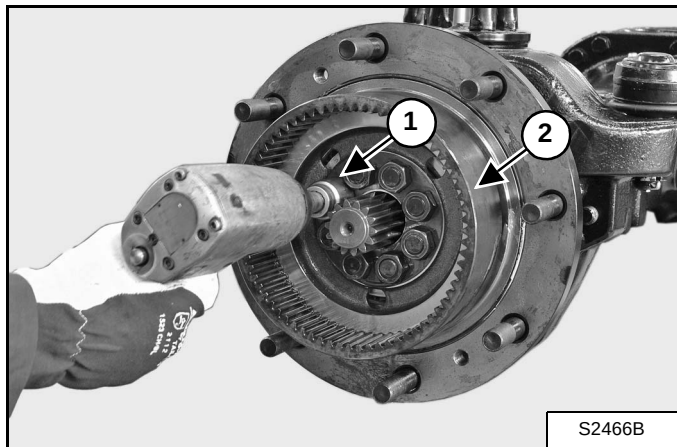


Remove the nuts (Item 1) from the ring gear support (Item 2) [Figure 40-23-5].

Figure 40-23-6

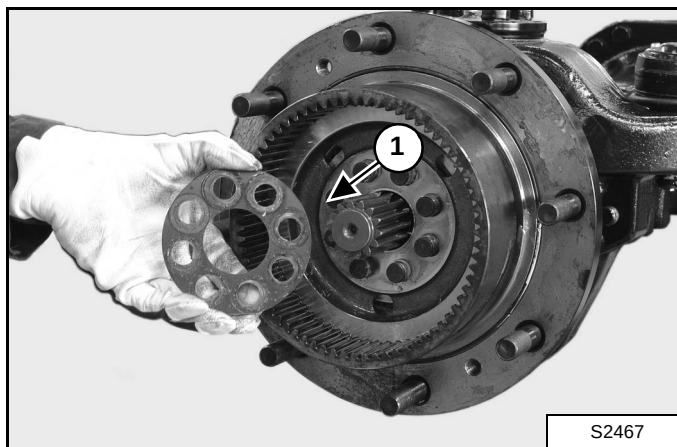


Remove the locking plate (Item 1) [Figure 40-23-6].

Figure 40-23-7

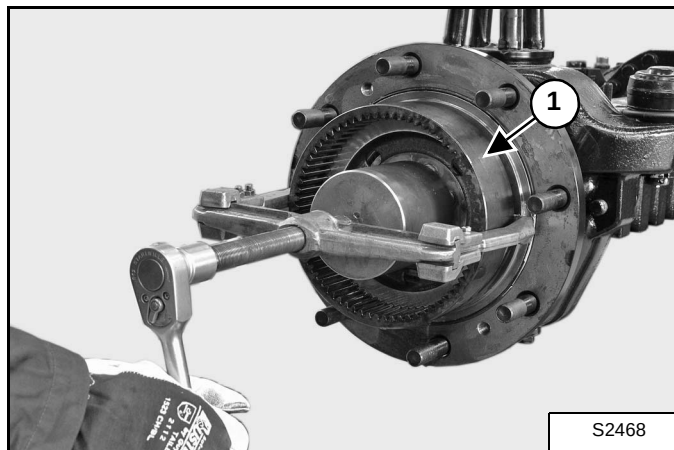

Using a puller, remove the complete ring gear (Item 1) [Figure 40-23-7] by acting on the stud bolts.

Figure 40-23-8

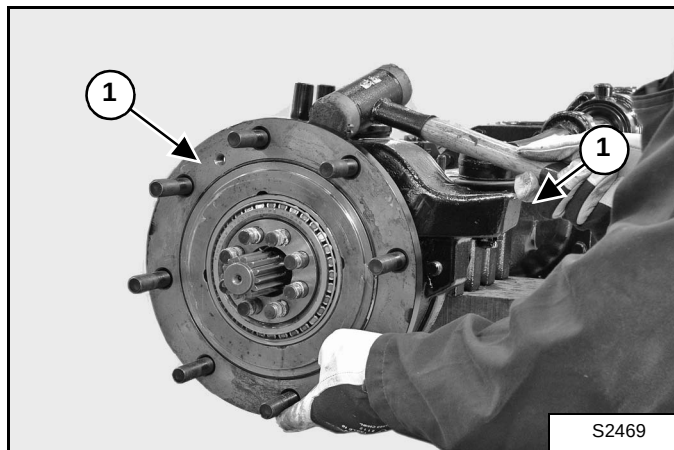


Partially extract the wheel hub (Item 1) [Figure 40-23-8] using a plastic hammer.

NOTE: Alternately hammer on several equidistant points.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Planetary Carrier Disassembly (Cont'd)

Figure 40-23-9

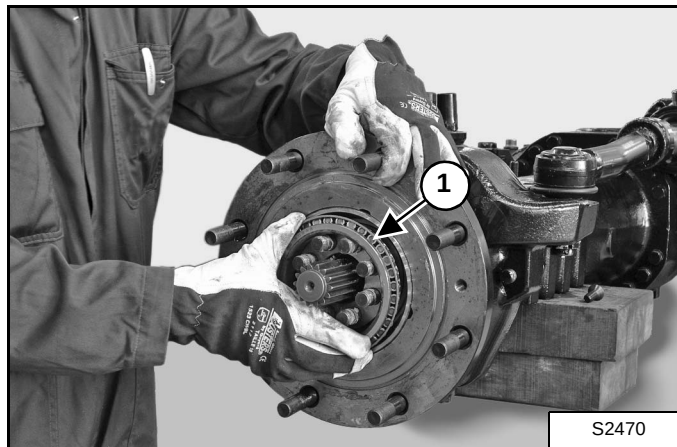


Remove the external bearing (Item 1) [Figure 40-23-9].

Figure 40-23-10

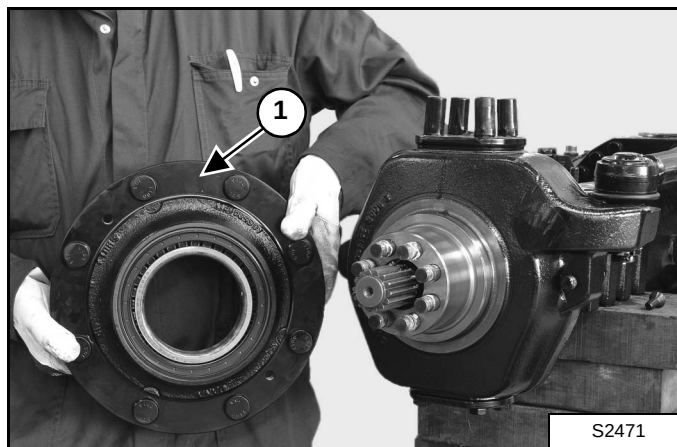


Remove the complete wheel hub (Item 1) [Figure 40-23-10] by hand.

Figure 40-23-11

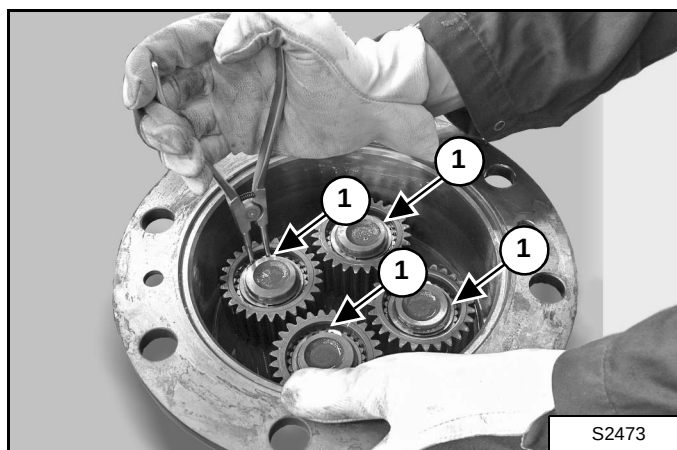

Remove the snap rings (Item 1) [Figure 40-23-11].

Figure 40-23-12

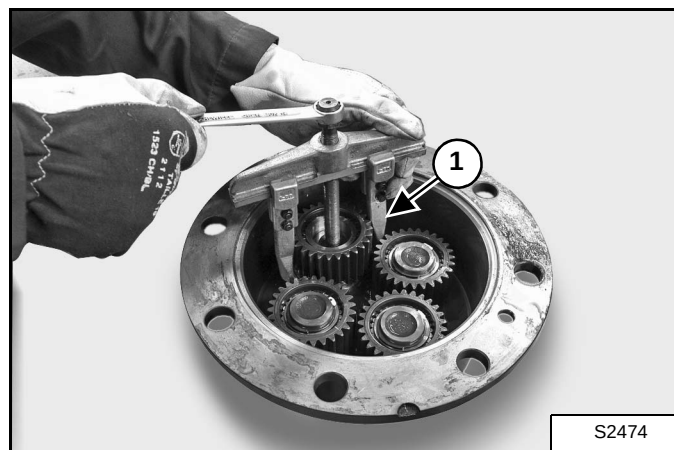


With the help of a puller, remove the planet wheel gears (Item 1) [Figure 40-23-12].

NOTE: Note the assembly side of the planet wheels.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Planetary Carrier Disassembly (Cont'd)

Figure 40-23-13

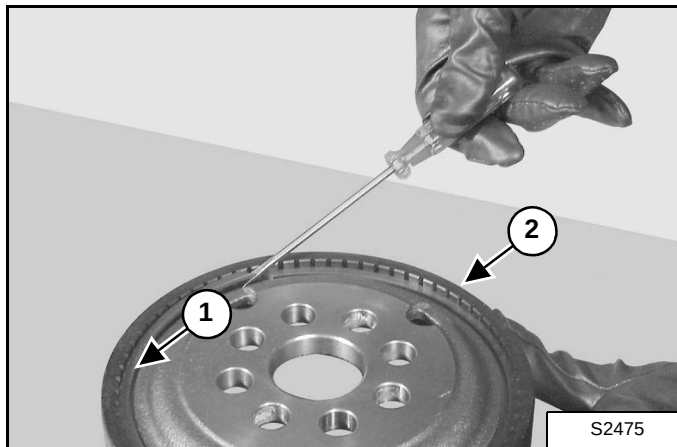


Remove the snap ring (Item 1) from the ring gear (Item 2) [Figure 40-23-13].

Figure 40-23-14

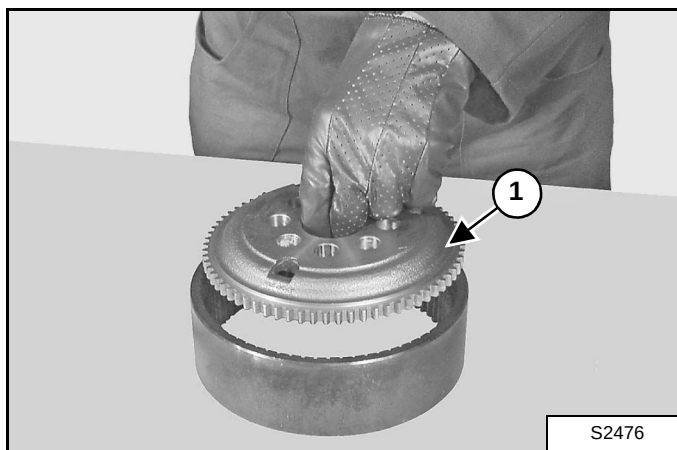


Remove the ring gear support (Item 1) [Figure 40-23-14].

Figure 40-23-15

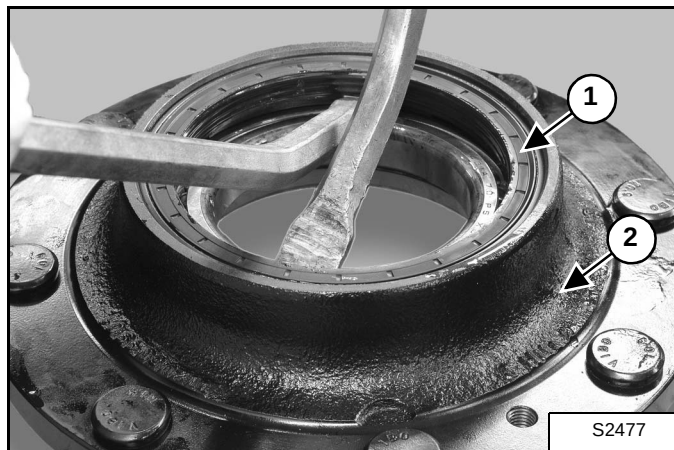

Remove the sealing ring (Item 1) from the wheel hub (Item 2) [Figure 40-23-15].

Figure 40-23-16

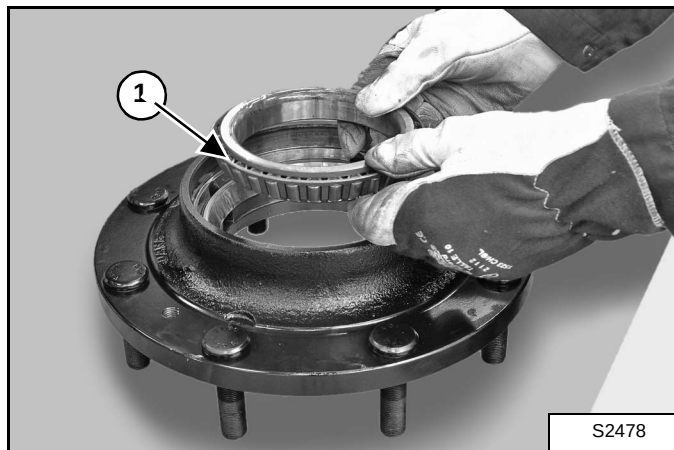

Remove the internal bearing (Item 1) [Figure 40-23-16].

**AXLE AND DIFFERENTIAL (REAR) (For S/N
362812001 and Above, S/N 362912001 and Above)
(CONT'D)**

Planetary Carrier Disassembly (Cont'd)


Figure 40-23-17



Remove the external bearing races from the bearing forcing a pin-driver into the appropriate slots on the hub (Item 1) [Figure 40-23-17].

NOTE: Hammer in an alternate way so as to avoid crawling or deformation of the bearing races.

Steering Knuckle and Drive Axle Parts Identification

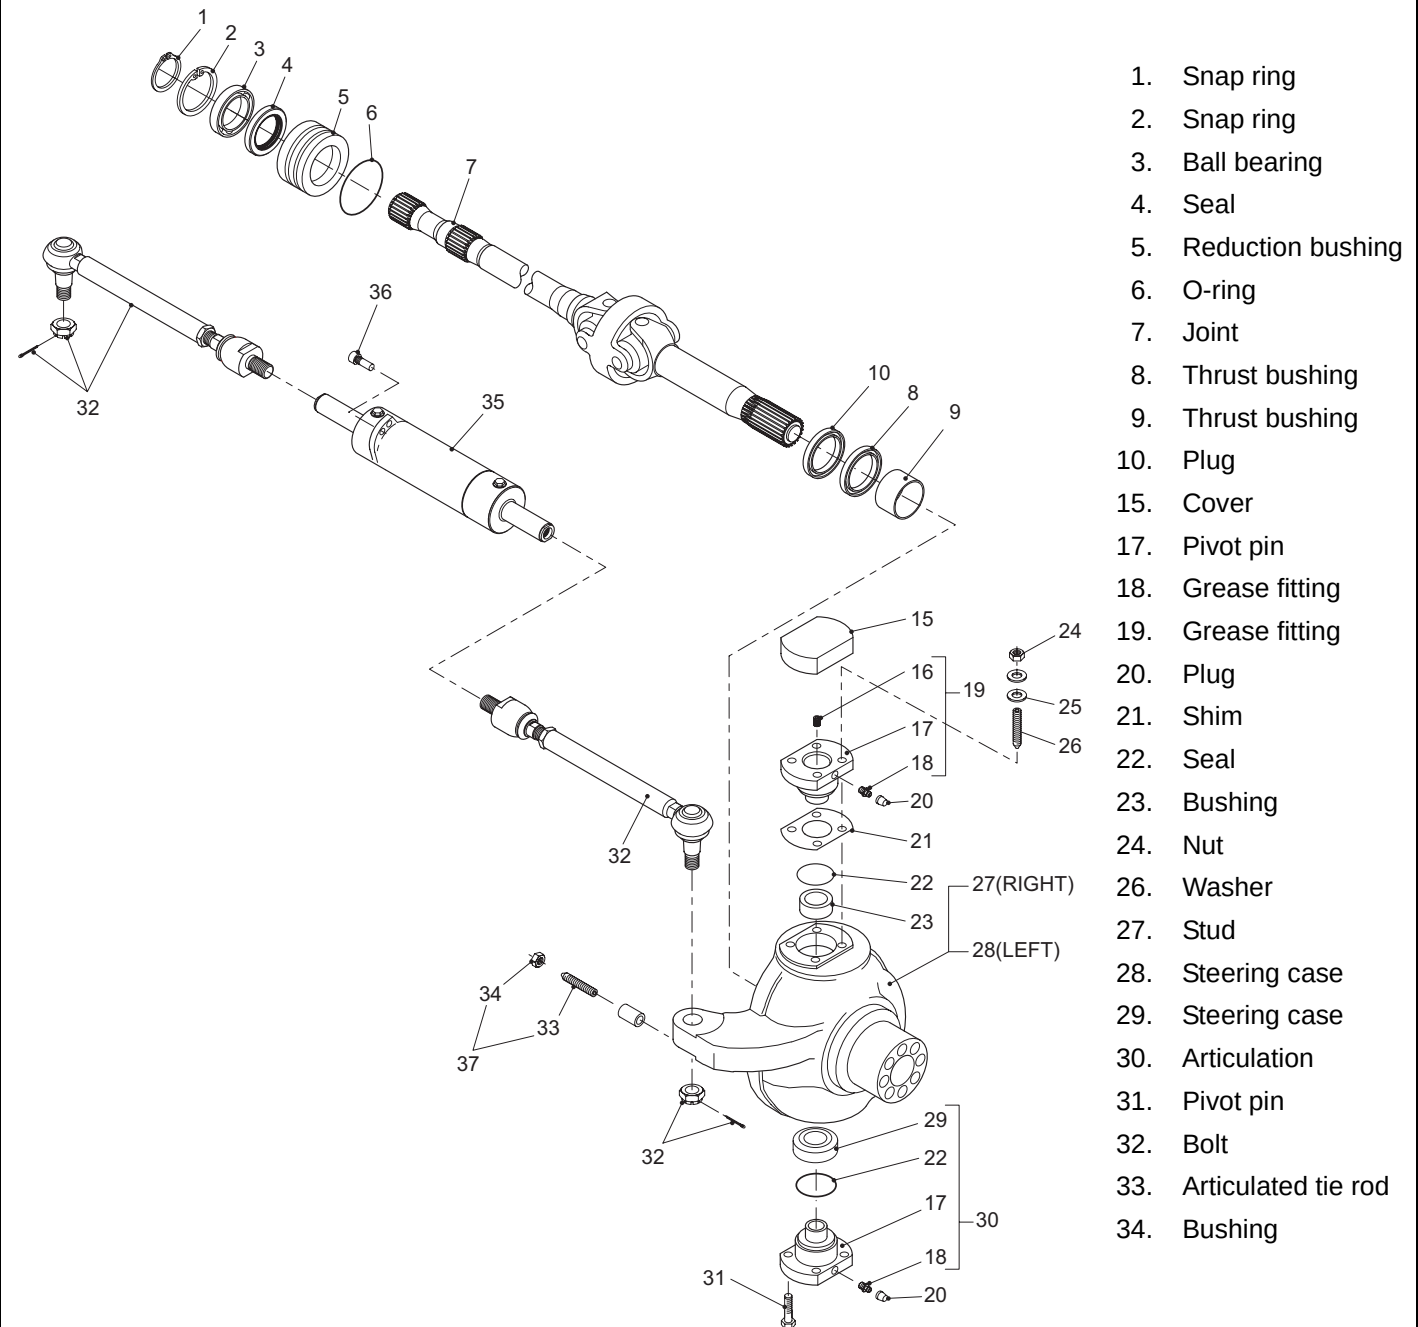


S2671

AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Steering Knuckle Disassembly

Figure 40-23-18

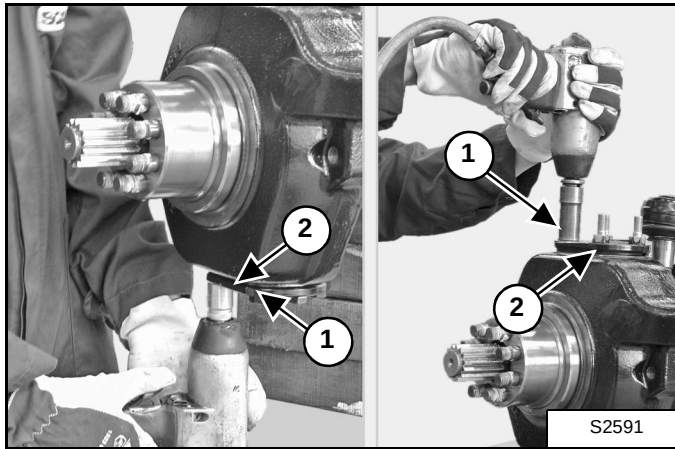


Unloose and remove the fitting screws (Item 1) from the tie rod (Item 2) [Figure 40-23-18].

Figure 40-23-19

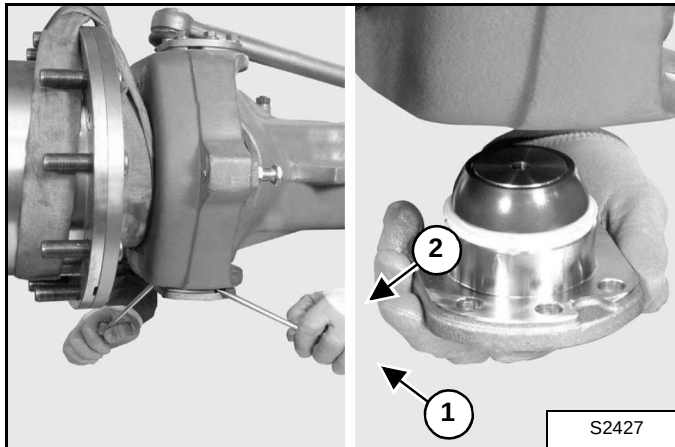


Using two levers, remove the bottom tie rod (Item 1) complete with front sealing ring (Item 2) [Figure 40-23-19].

Figure 40-23-20

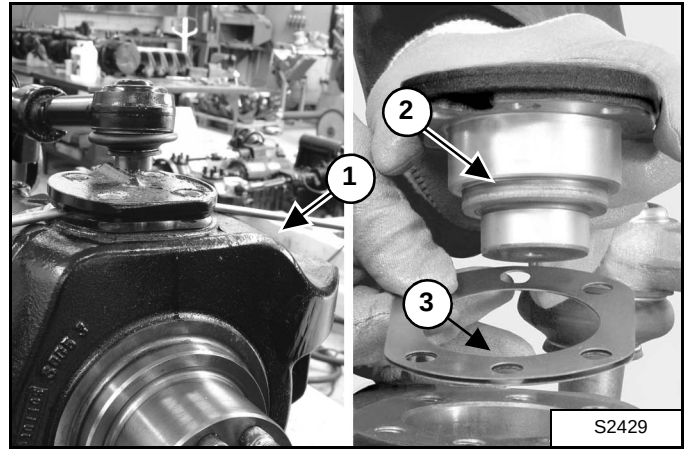

Using two levers, remove the top tie rod (Item 1) complete with front seal (Item 2) and shims (Item 3) [Figure 40-23-20].

Figure 40-23-21

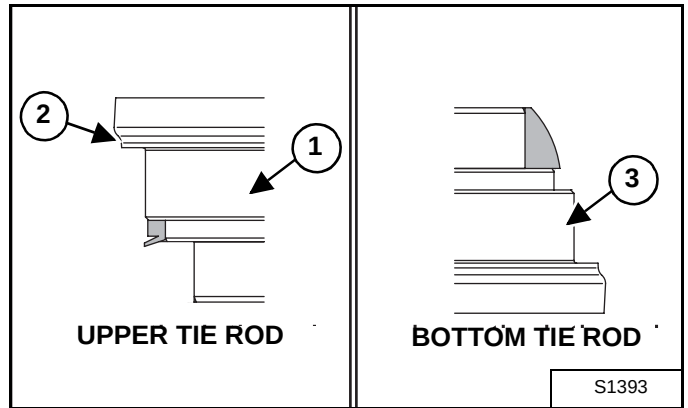


Configuration of the upper (1) tie rod with shims (2) and the lower tie rod (3) [Figure 40-23-21].

AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Steering Knuckle Disassembly (cont'd)

Figure 40-23-22

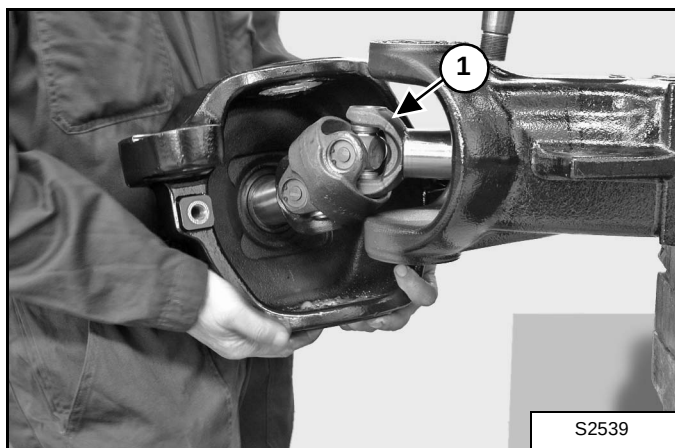

Remove the complete steering case (Item 1) [Figure 40-23-22].


Figure 40-23-23

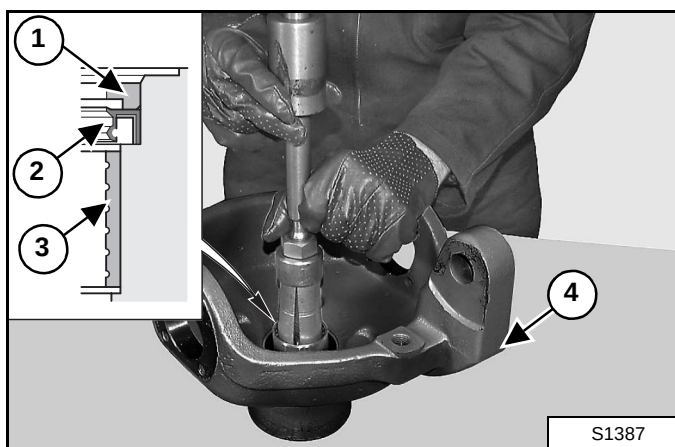

Use a puller to remove the centring ring (Item 1), the sealing ring (Item 2) and the bearing (Item 3) from the steering case (Item 4) [Figure 40-23-23].

NOTE: Note down the orientation of both centring and sealing ring.


Figure 40-23-24

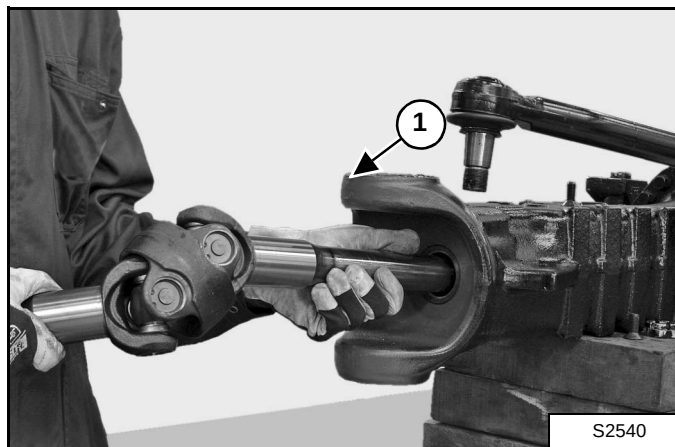

Remove the entire drive axle (Item 1) [Figure 40-23-24].

NOTE: To remove the drive axle use, if necessary, a plastic hammer or a lever.

Differential and Bevel Pinion Parts Identification

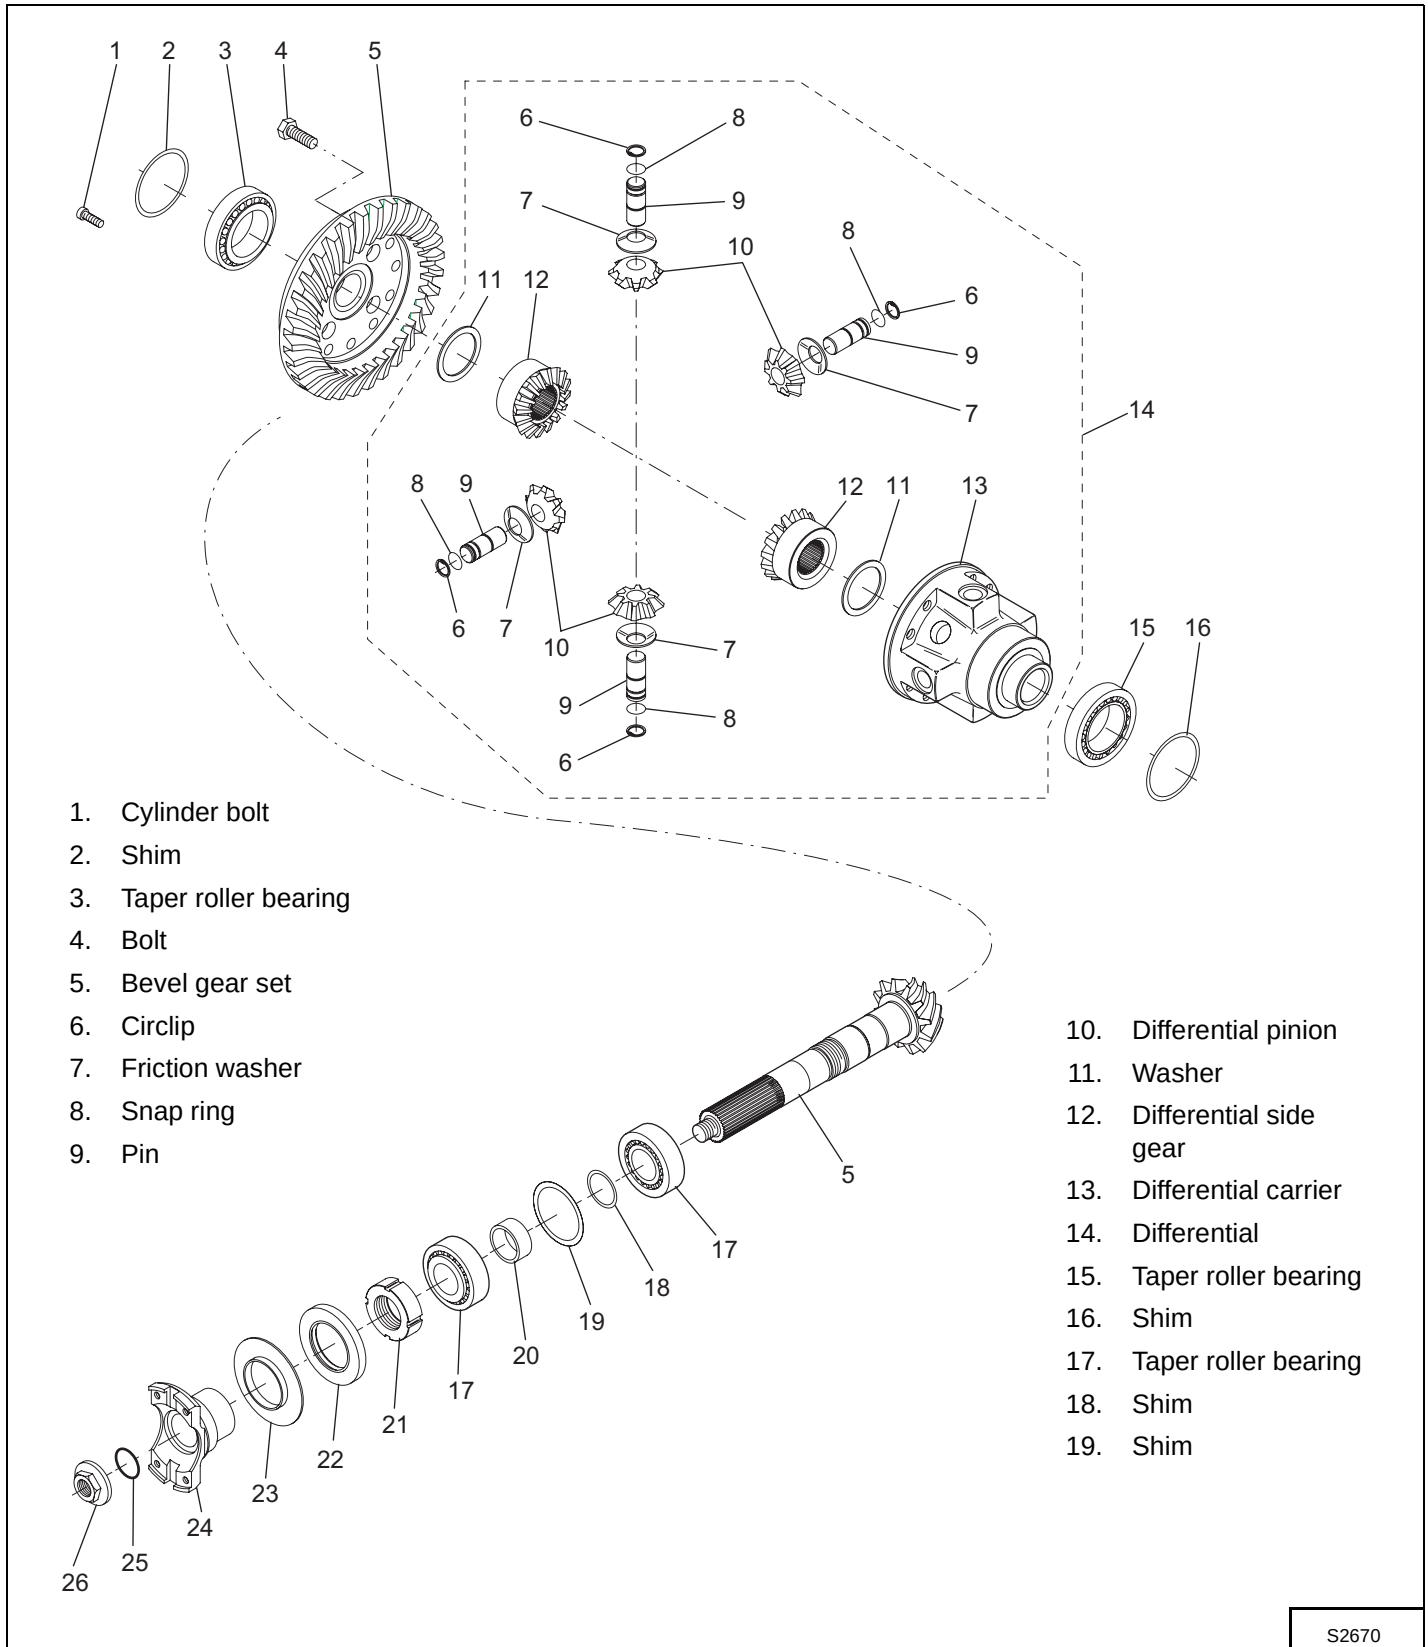


S2670

AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Differential Disassembly

Figure 40-23-25

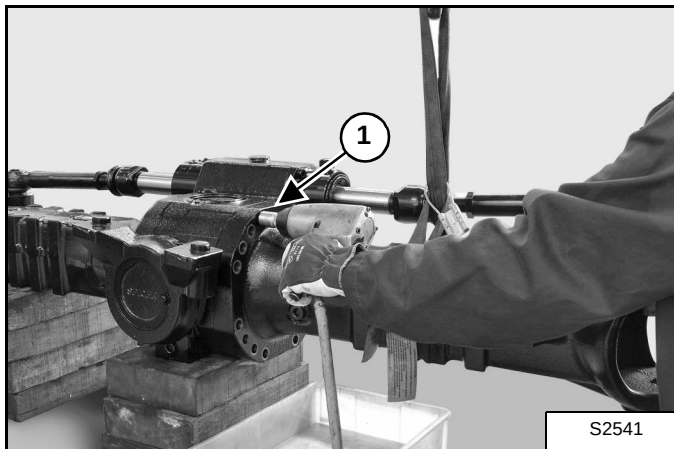


Loose the nuts (Item 1) [Figure 40-23-25].

Figure 40-23-26

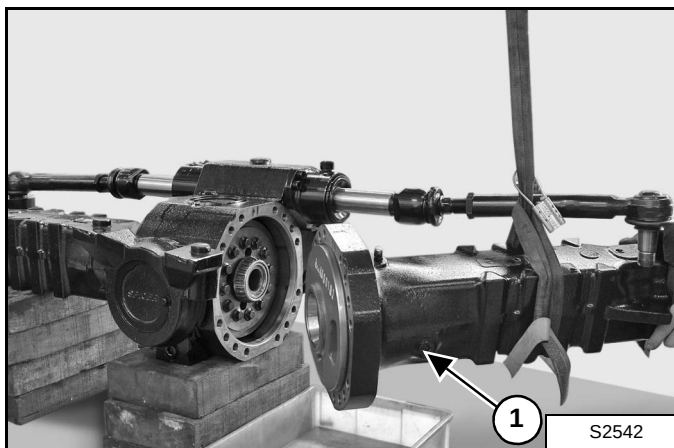


Remove the complete arm (Item 1) [Figure 40-23-26].

Figure 40-23-27

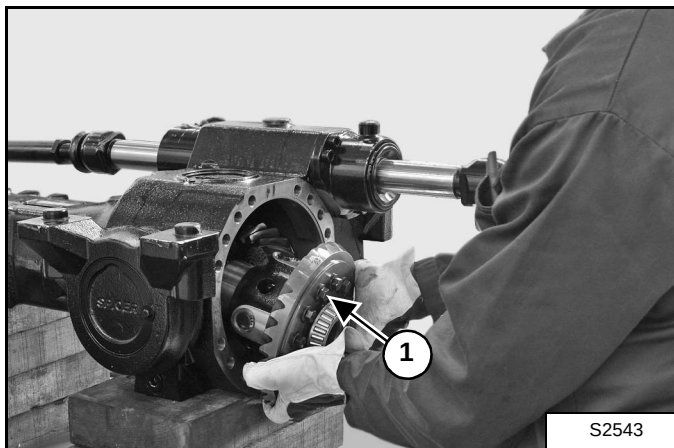

Pull out the differential (Item 1) [Figure 40-23-27].

Figure 40-23-28

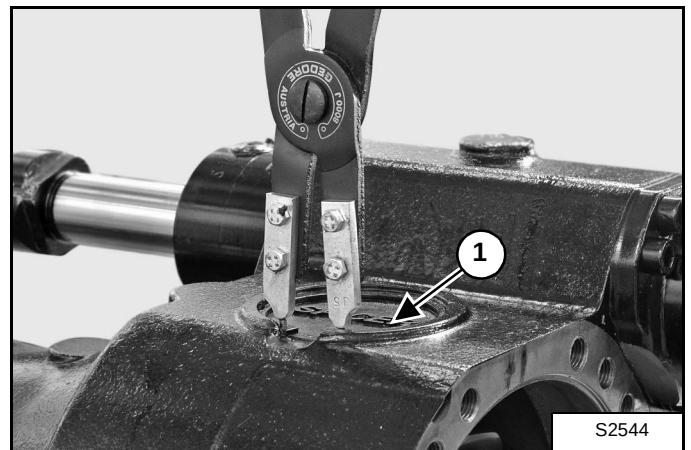


Remove the snap ring (Item 1) [Figure 40-23-28].

AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Differential Disassembly (Cont'd)

Figure 40-23-29

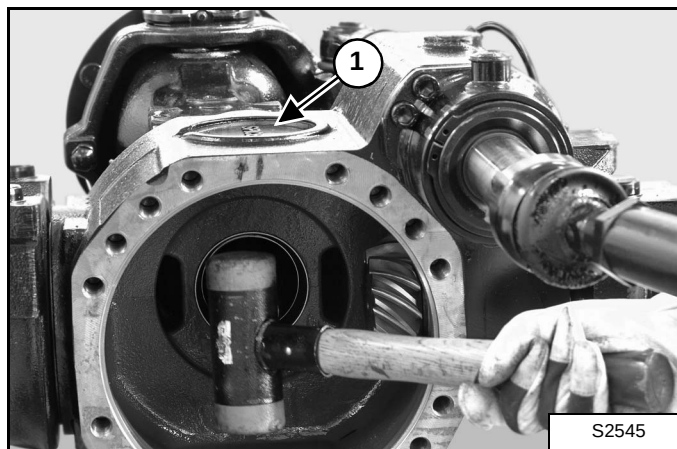


Remove the top plug (Item 1) [Figure 40-23-29].

Figure 40-23-30

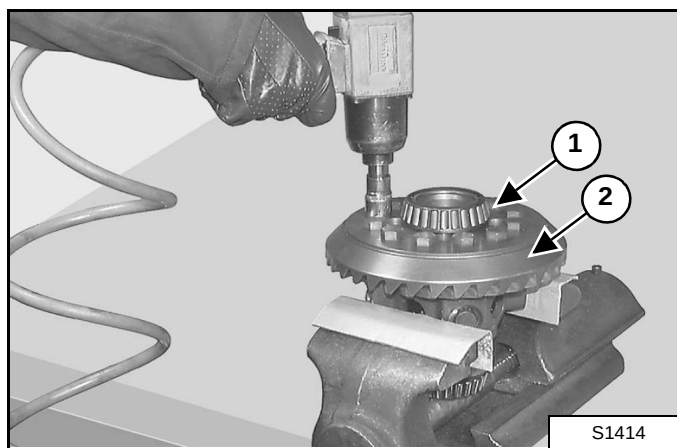


Remove the fitting screws (Item 1) from the crown (Item 2) [Figure 40-23-30].

Figure 40-23-31

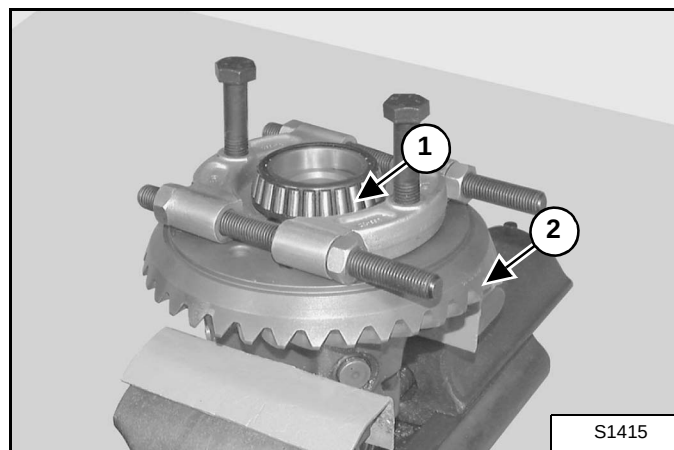

If the bearing needs to be replaced, extract the bearing (Item 1) and remove the crown (Item 2) [Figure 40-23-31].

Figure 40-23-32

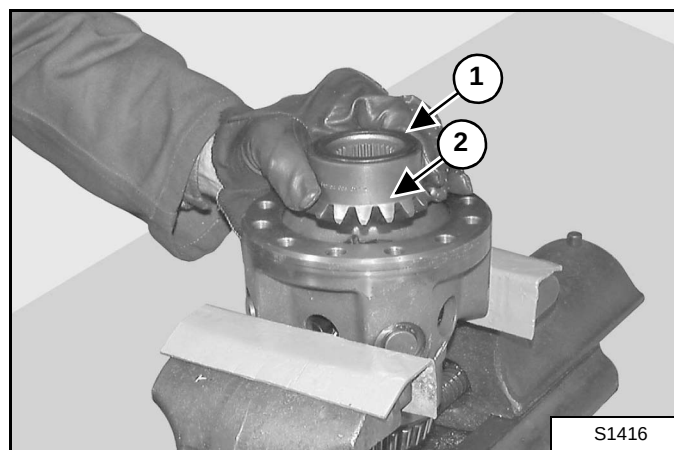


Remove the shim washer (Item 1) and the planetary gear (Item 2) [Figure 40-23-32].

AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Differential Disassembly (Cont'd)

Figure 40-23-33

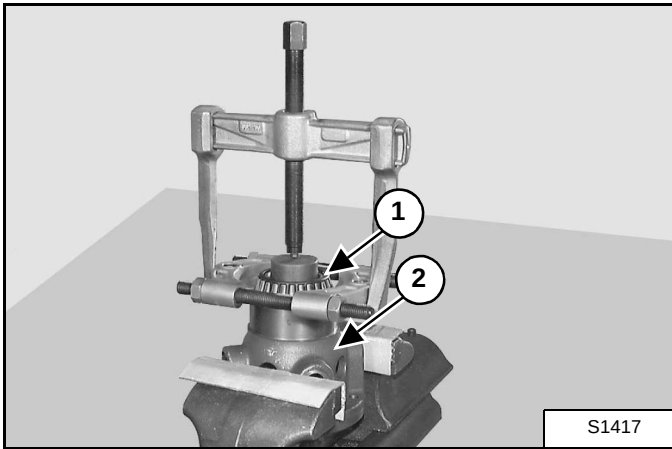


If the bearing needs to be replaced, extract the bearing (Item 1) from the differential carrier (Item 2) [Figure 40-23-33].

Figure 40-23-34

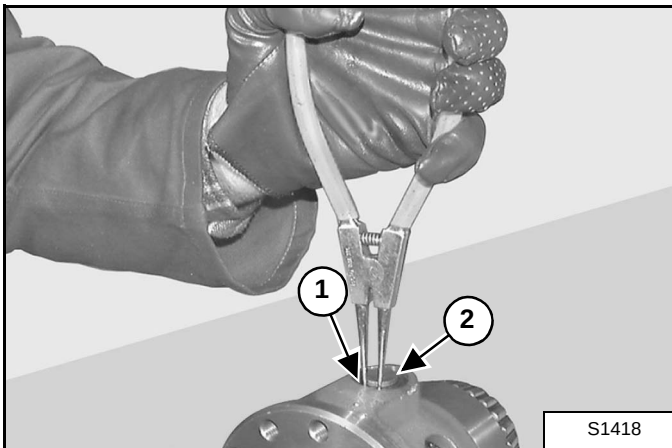

Remove the snap rings (Item 1) from the four pins (Item 2) [Figure 40-23-34] of the planet wheel gears.


Figure 40-23-35

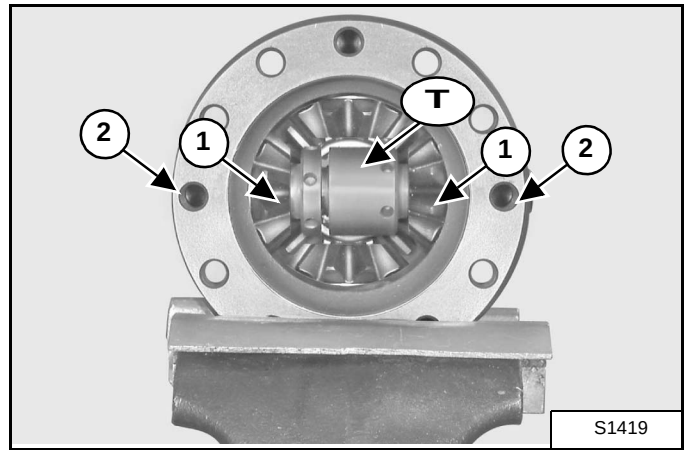

Insert a tool tool T between two planet wheel gears (Item 1) [Figure 40-23-35].

NOTE: Make sure that the tool is perfectly lined up with the pins (Item 1) [Figure 40-23-35] when locked.

Figure 40-23-36

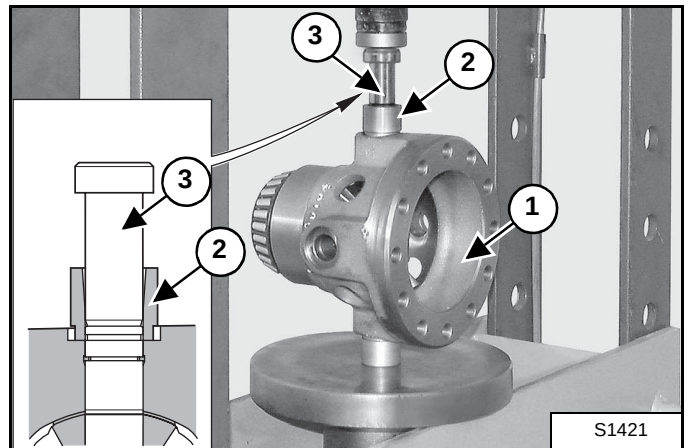


Place the differential carrier (Item 1) under a press, position a bushing (Item 2) and insert a pin (Item 3) [Figure 40-23-36]. Press the pin of the upper planet wheel gear into the tool T [Figure 40-23-35].

AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Differential Disassembly (Cont'd)


Figure 40-23-37

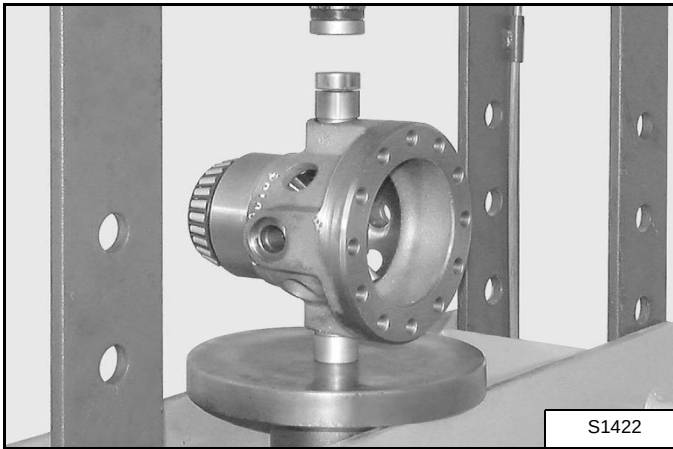

Remove the pin and bushing.


NOTE: In this condition the tool contains the pin.

Figure 40-23-38

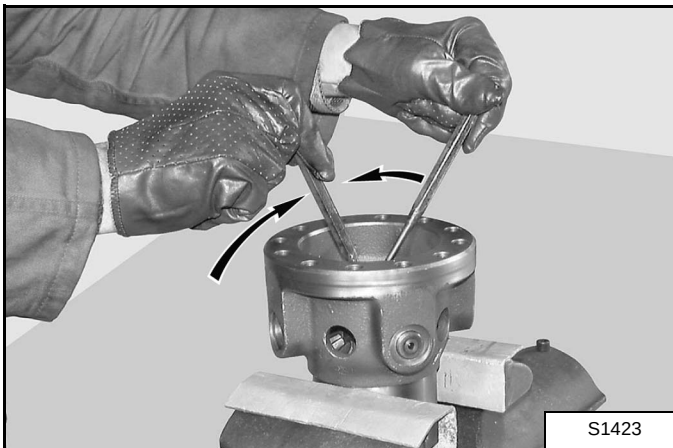


Remove the tool with inside the pin of the planet wheel gear.

Figure 40-23-39

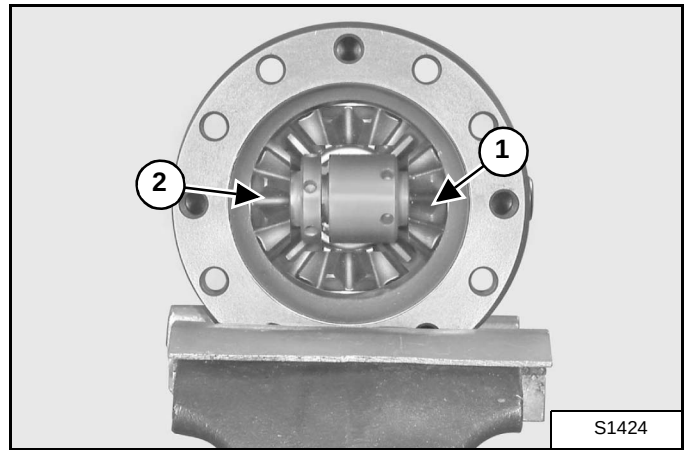

Leave the released planet wheel gear (Item 1) [Figure 40-23-39] in position and again lock the tool. Repeat the operations for the extraction of the pin of the 2nd planet wheel gear (Item 2) [Figure 40-23-39]. Repeat the operations for the two remaining pins.

Figure 40-23-40

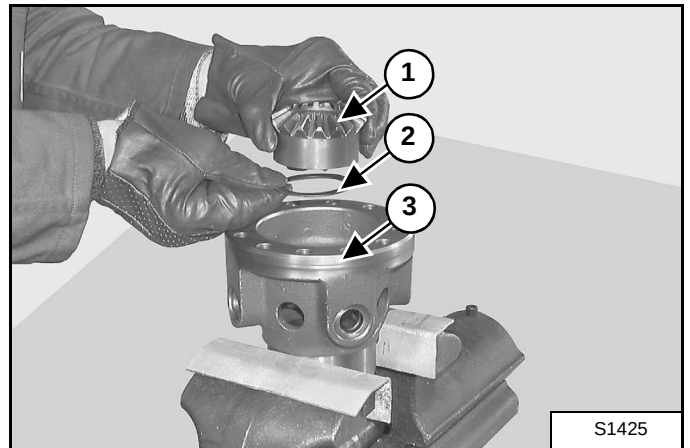


Remove the tool T and remove the planet wheel gears (Item 1) and the relative shim washers (Item 2) from the differential carrier (Item 3) [Figure 40-23-40].

AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Bevel pinion Disassembly


Figure 40-23-41

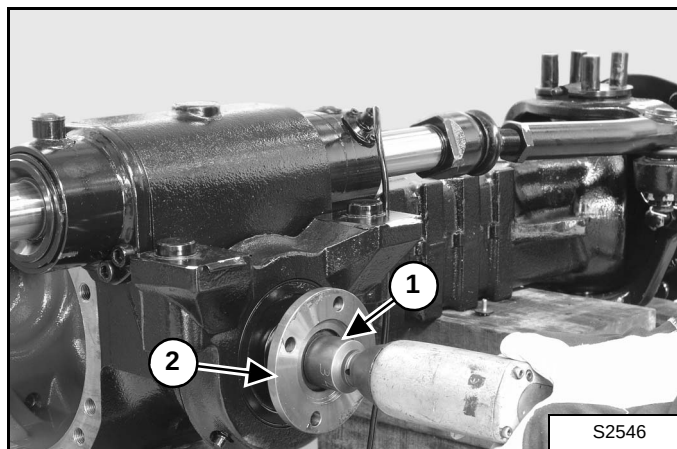

If disassembly is awkward, heat the check nut (Item 1) of the flange (Item 2) [Figure 40-23-41] at 80°C.


NOTE: Heating is meant to unloose the setting of Loctite on the nut. Always be careful with hot parts.

Figure 40-23-42

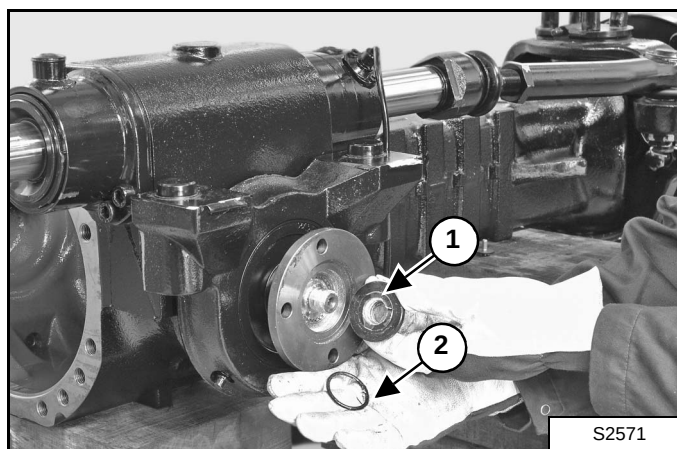


Remove the nut (Item 1) and remove the O-ring (Item 2) [Figure 40-23-42].

Figure 40-23-43

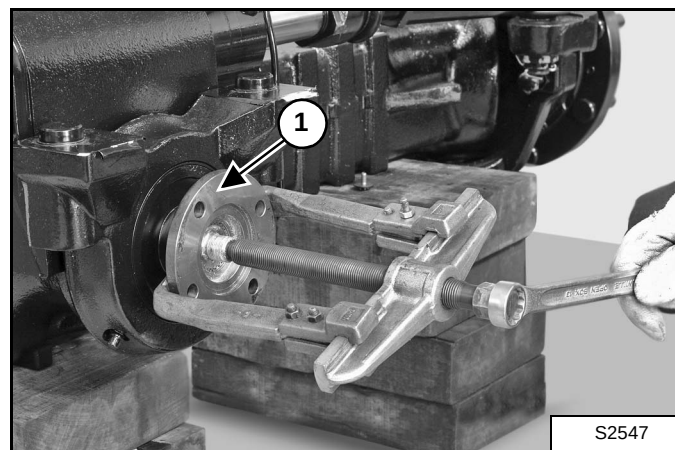

Remove the flange (Item 1) [Figure 40-23-43] complete with guard by means of a puller.

Figure 40-23-44

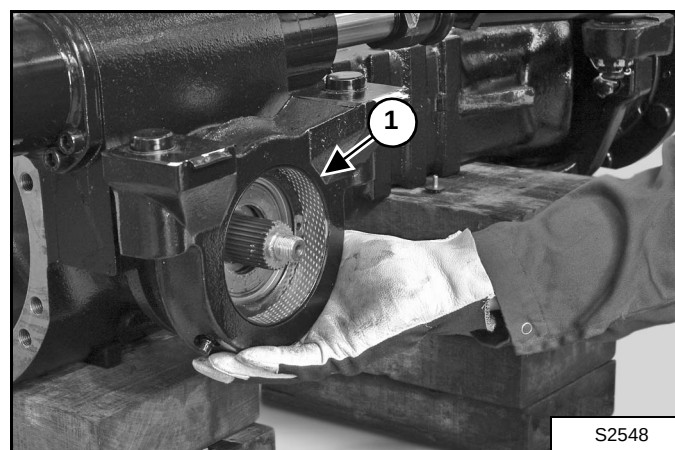


Remove the swinging support (Item 1) [Figure 40-23-44].

AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Bevel pinion Disassembly (cont'd)

Figure 40-23-45

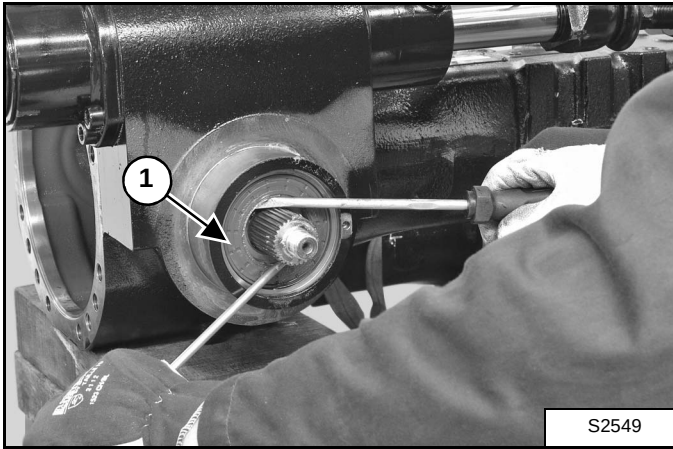

Remove the sealing ring (Item 1) [Figure 40-23-45].

Figure 40-23-46

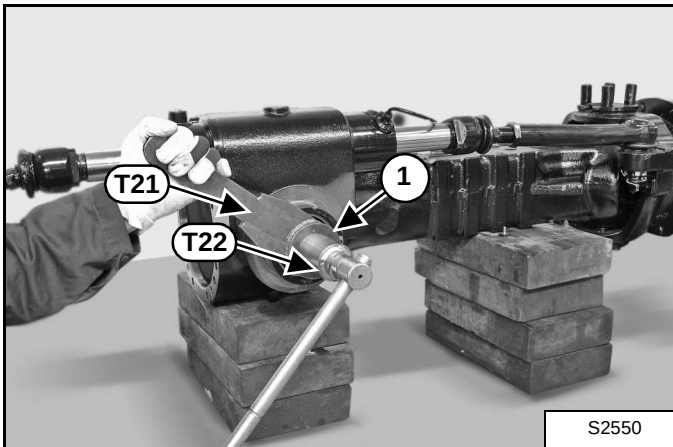


Position wrench **T22** onto the ring nut (Item 1) [Figure 40-23-46] and apply bar hold **T21** to the pinion (Item 1) [Figure 40-23-47].

Stop wrench **T22** and rotate the pinion so as to release and remove the ring nut (Item 1) [Figure 40-23-46].

NOTE: If disassembly proves awkward, heat the ring nut to approx. 80°C.


Figure 40-23-47

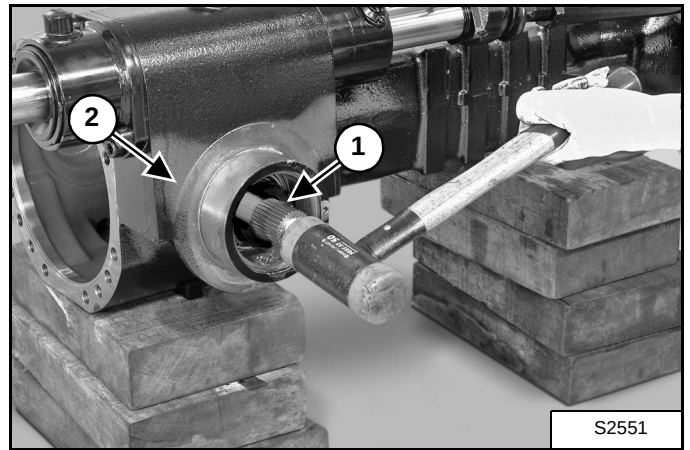

Extract the pinion (Item 1) [Figure 40-23-47] complete with the internal bearing, the distance piece and shims.

NOTE: The bearing races remain in the central body (Item 2) [Figure 40-23-47].

Figure 40-23-48

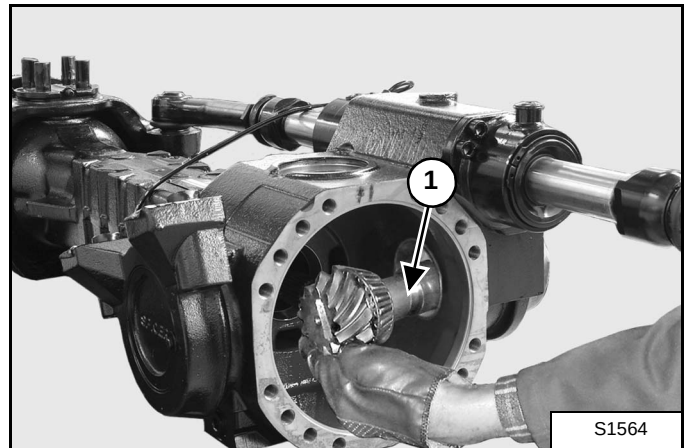


Remove the pinion (Item 1) [Figure 40-23-48], shims and distance piece.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Bevel pinion Disassembly (cont'd)

Figure 40-23-49

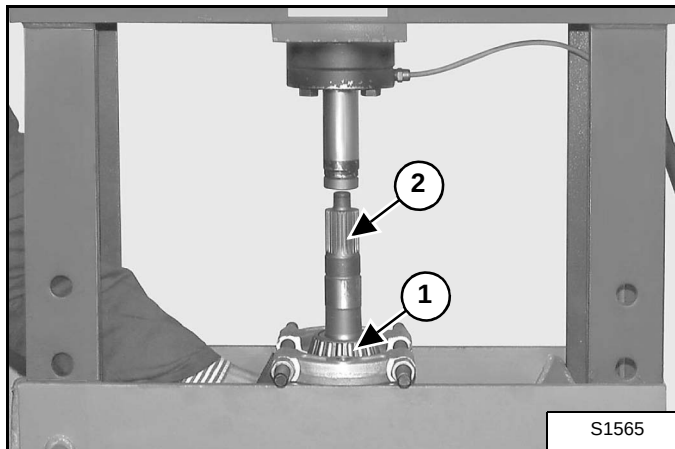


Using a puller and a press, remove the inner bearing (Item 1) from the pinion (Item 2) [Figure 40-23-49].

Figure 40-23-50

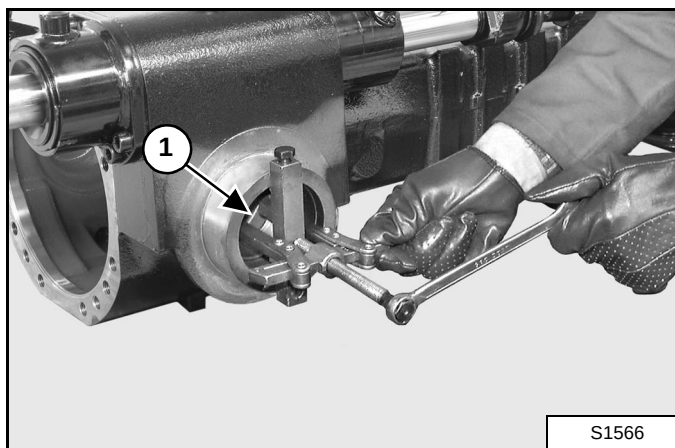

Remove the bearing race of the external bearing (Item 1) [Figure 40-23-50].

Figure 40-23-51

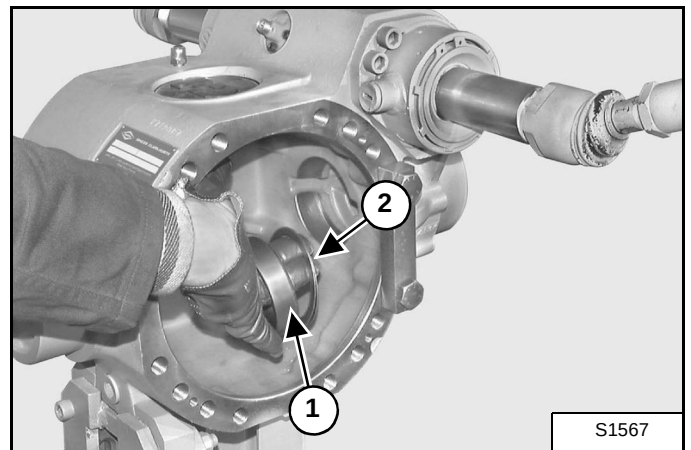


Insert a drift in the appropriate holes and remove the bearing race (Item 1) as well as the shim washers (Item 1) [Figure 40-23-51].

AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Bevel pinion Assembly

Figure 40-23-52

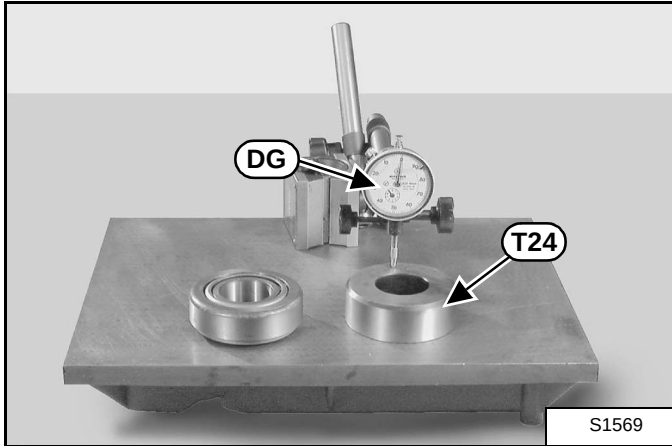

Using a surface plate, reset a magnetic based dial indicator and placing it on the measurement ring **T24** (with a thickness of 30.2 mm). Preset the indicator to approx. 2mm.


Figure 40-23-53

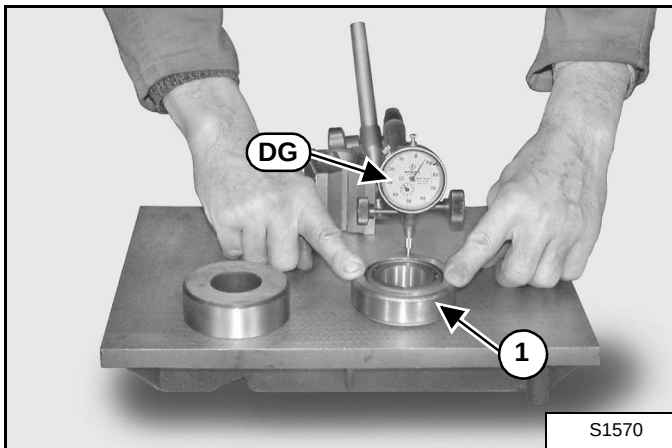

Bring the internal bearing (Item 1) [Figure 40-23-53], complete with its bearing race, under the indicator. Determine overall thickness "D" of the bearing checking the discrepancy between this size and the size of the measurement ring.


NOTE: Press the bearing race in the centre and take several measurements while rotating the bearing race.

Figure 40-23-54

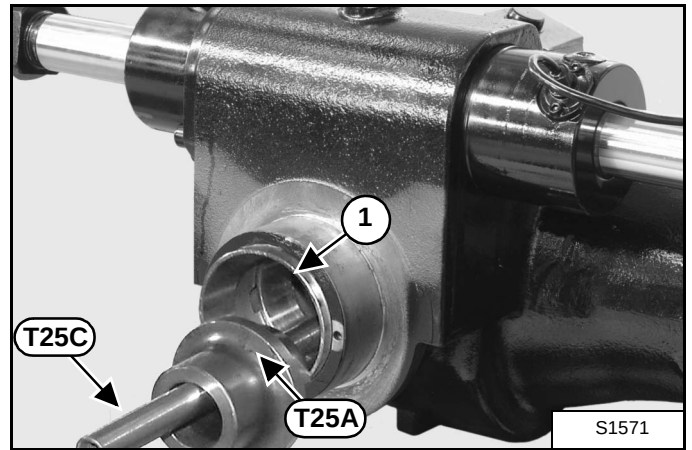

Partially insert the bearing race (Item 1) [Figure 40-23-54].

Figure 40-23-55

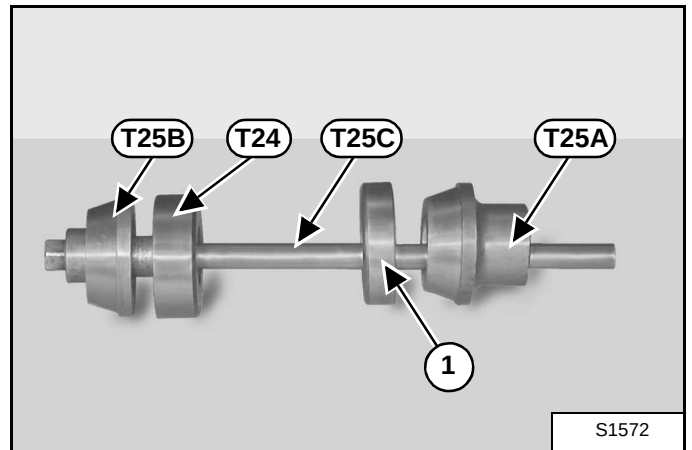


Install tension rod **T25C**, measurement ring **T24** and front guide tool **T25A** on the bearing race of the external bearing (Item 1) [Figure 40-23-55].

AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Bevel pinion Assembly (Cont'd)


Figure 40-23-56

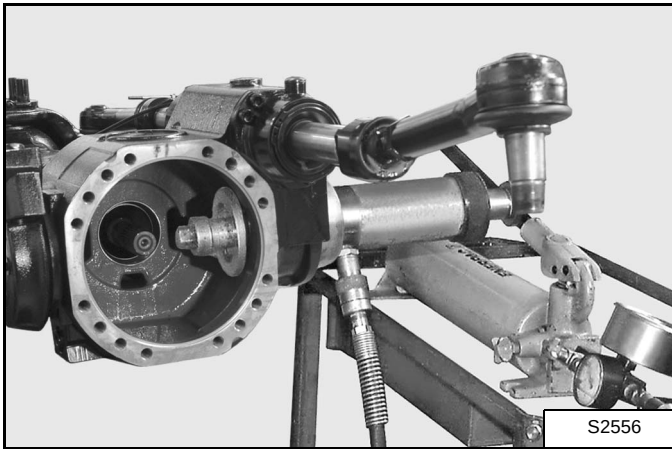

Connect the tension rod to the press and move the bearing race (Item 1) [Figure 40-23-54] into its seat. Disconnect the press and remove the tension rod.


NOTE: Before starting the next stage, make sure that the bearing race has been completely inserted into its seat.

Figure 40-23-57

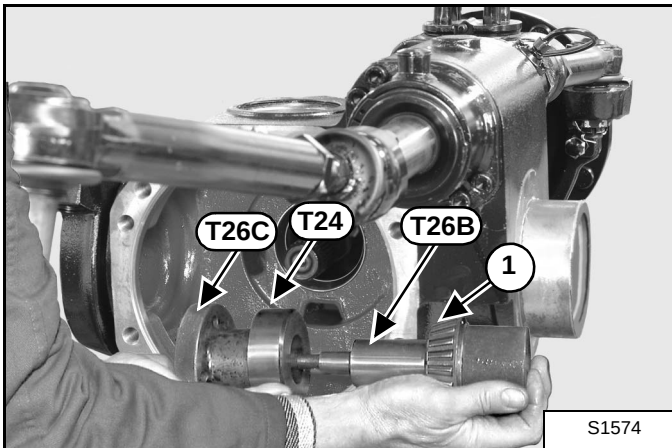


Insert tool **T26B** complete with external bearing (Item 1) [Figure 40-23-57], measurement ring **T24** and gauged ring nut **T26C**. Manually tighten.

Figure 40-23-58

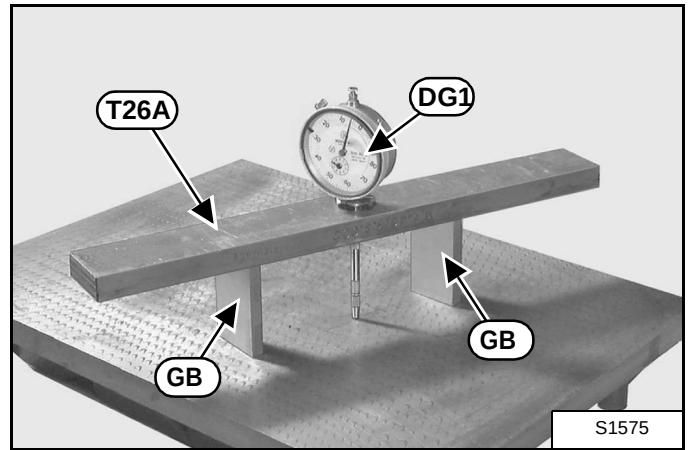

Fit a magnetic based dial indicator with long stem into bar **T26A**; when the bar rests on two size-blocks "GB" of 57mm, reset the indicator. Preset the indicator to approx. 2 mm and reset.

Figure 40-23-59

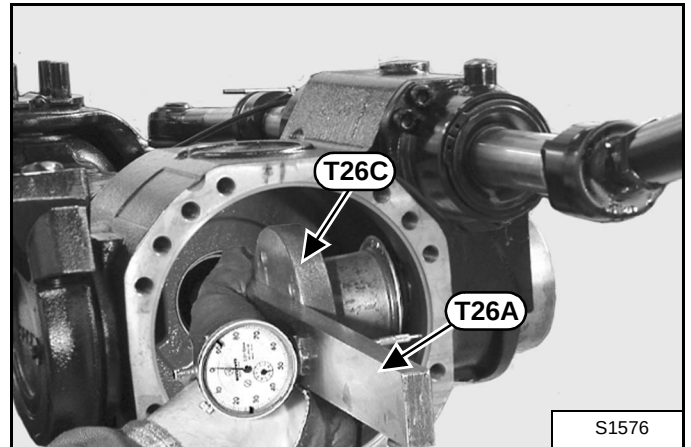


Lay bar **T26A** on gauged nut **T26C** and take the size "A" at about 57 mm corresponding to the maximum diameter of arms centring.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Bevel pinion Assembly (Cont'd)

Figure 40-23-60

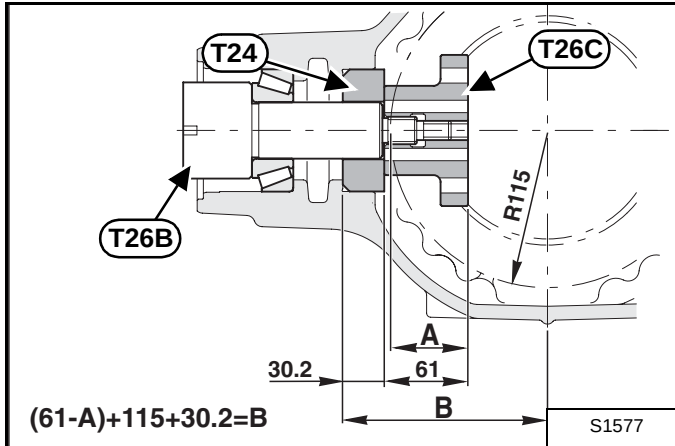

Calculate size "B" which will be the first useful value for calculating the size of the shims that are to be inserted under the bearing race.

Figure 40-23-61

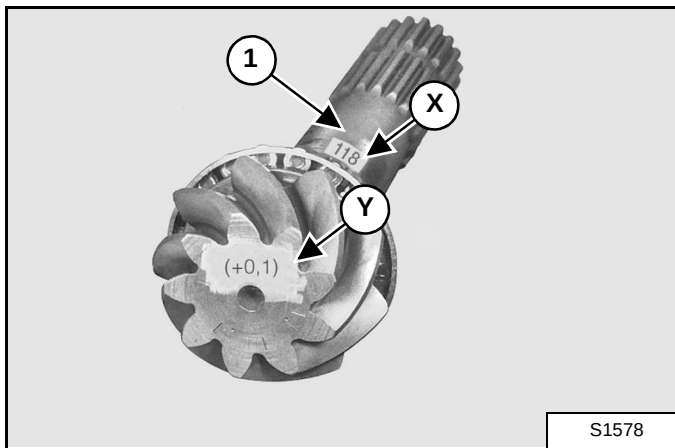


Check the nominal size (X) marked on the pinion (Item 1) [Figure 40-23-61] and add or subtract the indicated variation (Y) so as to obtain size (Z).

e.g.: $Z = 118 + 0,1 = 118.1$


$Z = 118 - 0.2 = 117.8$

Figure 40-23-62

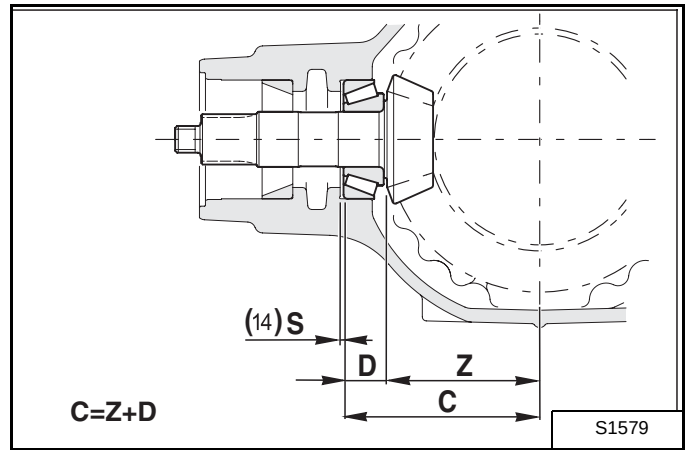

Calculate size "C" which represents the second value for calculating the size of the shims "S" that are to be placed under the bearing race.

Figure 40-23-63

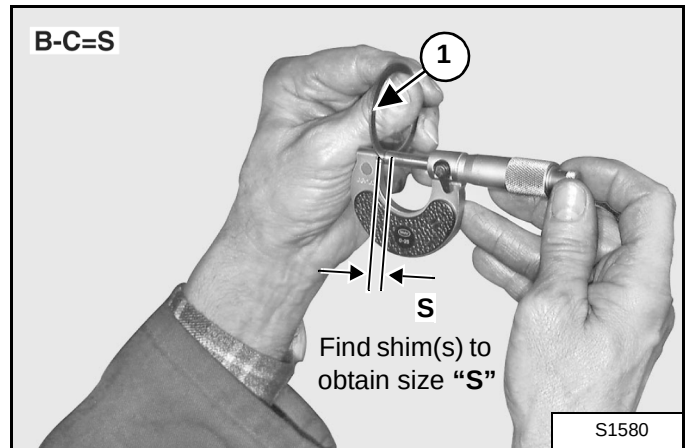


Calculate the difference between sizes "B" and "C" so as to obtain the size "S" of the shim (Item 1) [Figure 40-23-63] that will go under the bearing race.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Bevel pinion Assembly (Cont'd)

Figure 40-23-64

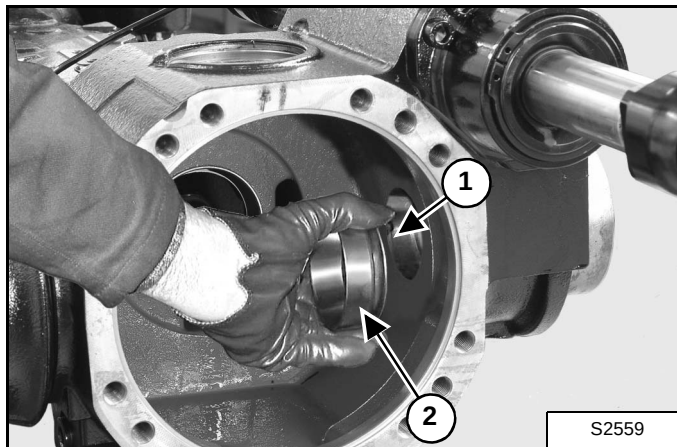

Insert shim "S" (Item 1) and the bearing race of the internal bearing (Item 2) [Figure 40-23-64] in the central body.


Figure 40-23-65

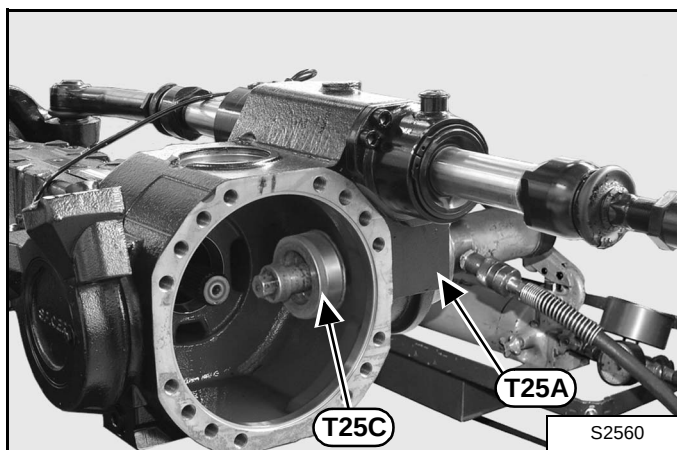

Position tool **T25A** and tension rod **T25C**. Connect the tension rod to the press, fasten the bearing race and then remove the tools.


NOTE: Before going on to the next stage, make sure that the bearing race has been completely inserted.

Figure 40-23-66

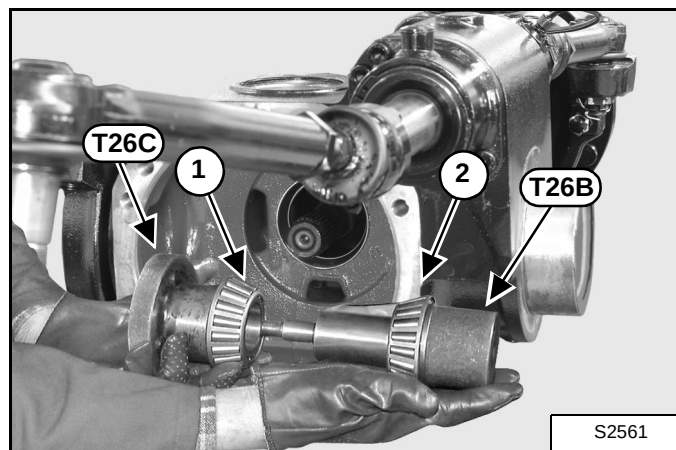

Position tools **T26C** and **T26B** complete with tapered bearings (Item 1 & 2) [Figure 40-23-66]; manually tighten until a rolling torque has been obtained.

Figure 40-23-67

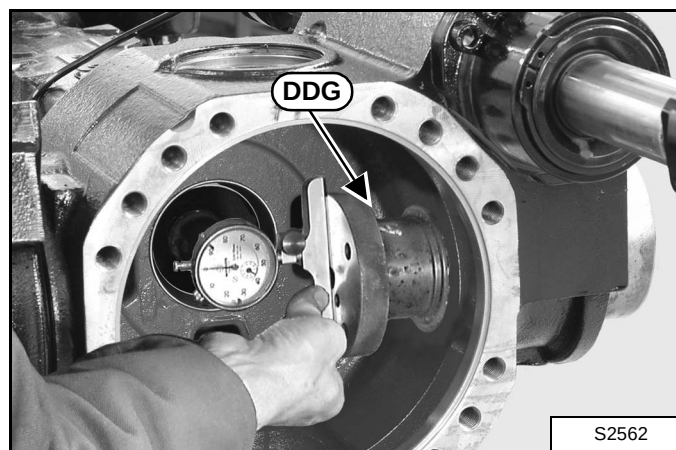


Insert the stem of a depth dial indicator in either side hole of tool **T26C**; reset the indicator with a presetting of approx. 3 mm.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Bevel pinion Assembly (Cont'd)

Figure 40-23-68

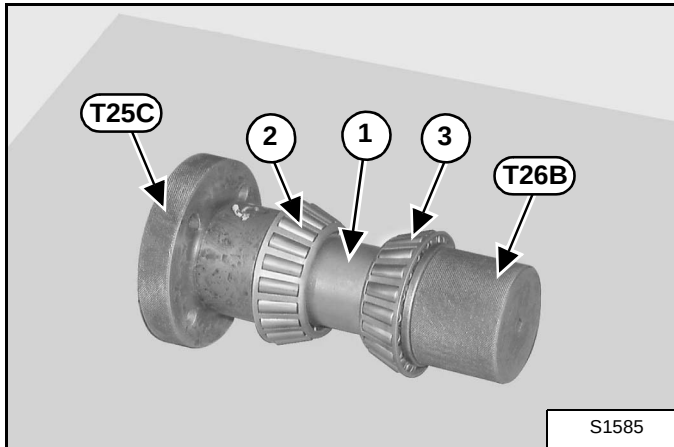


Remove the indicator and release tools and bearings from the central body.
Re-install all and insert the distance piece (Item 1) between both bearings (Item 2 & 3) [Figure 40-23-68]; manually tighten the whole pack.

Figure 40-23-69

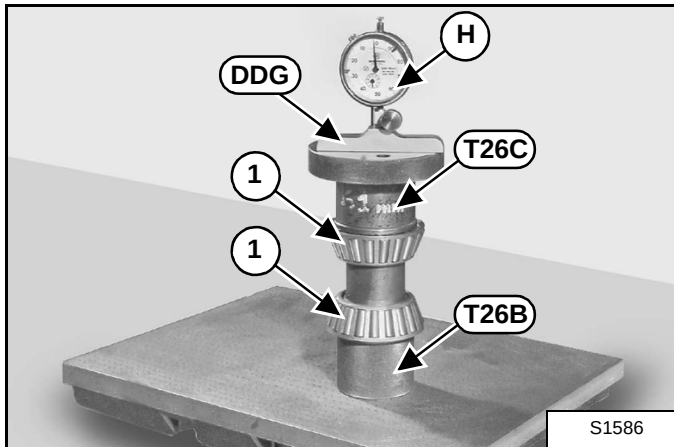


Insert depth dial indicator into tool T26B-T26C and measure variation "H" in relation to the zero setting performed in [Figure 40-23-69].

Figure 40-23-70

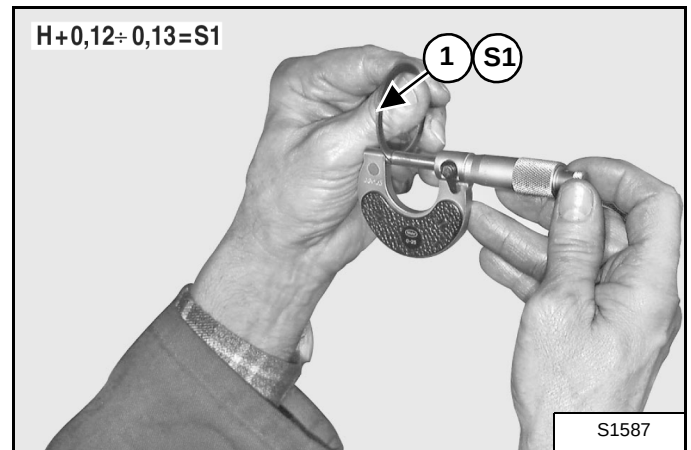

The variation is to be added to a set value of 0.12-0.13 mm, so as to obtain the size of shim "S1" (Item 1) [Figure 40-23-70] which will be inserted between the external bearing (Item 1) [Figure 40-23-69] and the distance piece (Item 1) [Figure 40-23-68] and subsequently, to determine the preload for the bearings.

Figure 40-23-71

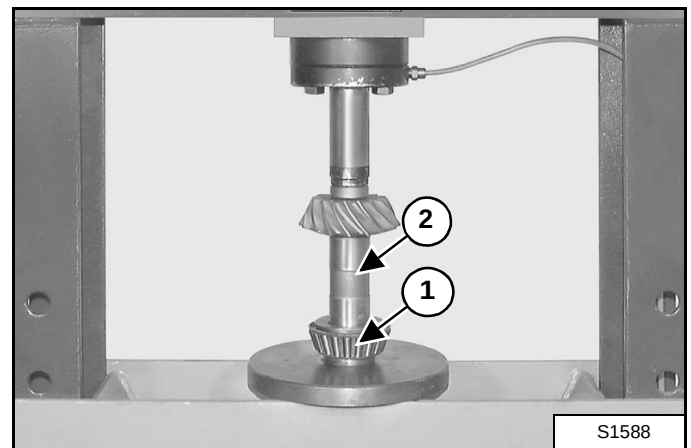


Position the internal bearing (Item 1) [Figure 40-23-71] and the pinion (Item 2) [Figure 40-23-71] under a press. Force the bearing onto the pinion.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Bevel pinion Assembly (Cont'd)


Figure 40-23-72

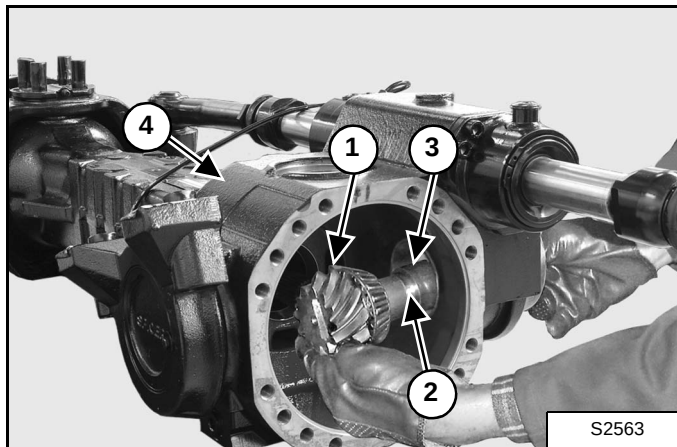

Fit the pinion (Item 1), shim "S1" (Item 2) and the distance piece (Item 3) in the main body (Item 4) [Figure 40-23-72].


NOTE: The finer shims must be placed in between the thicker ones.

Figure 40-23-73

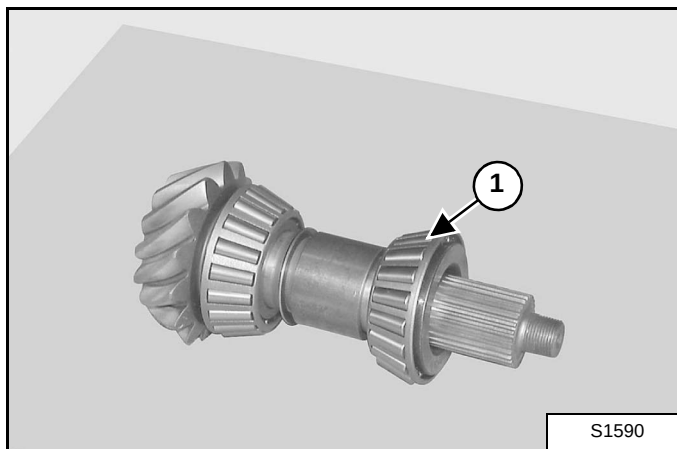


Insert the external bearing (Item 1) [Figure 40-23-73] in the central body in order to complete the pack arranged as in the figure.

Figure 40-23-74

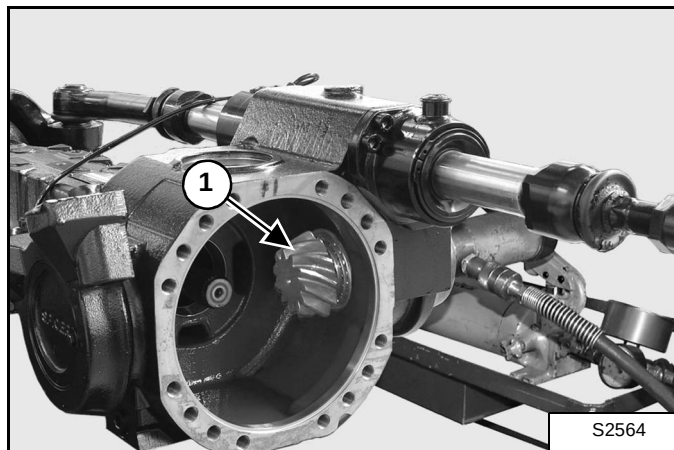

Connect the pinion (Item 1) [Figure 40-23-74] to the tie rod **T28A** and **T28B**. Connect the tie rod **T28C** to the press and block.

Figure 40-23-75

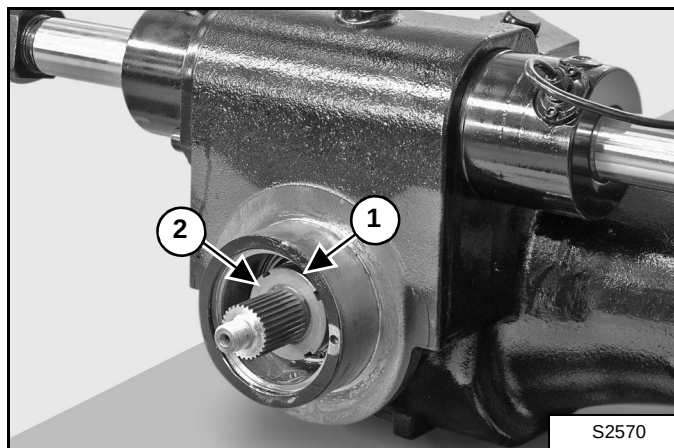


Apply Loctite 242 to the thread of the ring nut (Item 1) and screw the nut onto the pinion (Item 2) [Figure 40-23-75].

AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Bevel pinion Assembly (Cont'd)


Figure 40-23-76

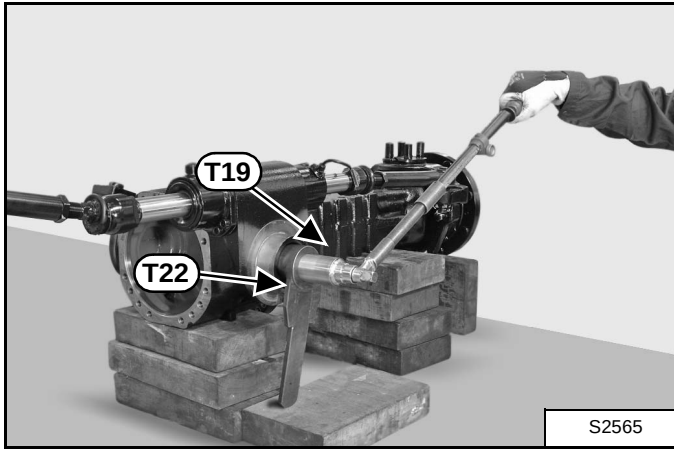

Apply special wrench **T22** to the ring nut (Item 1) [Figure 40-23-75] and bar-hold **T19** to the pinion (Item 2) [Figure 40-23-75].

Lock the wrench **T22** and rotate the pinion using a dynamometric wrench, up to a minimum required torque setting of 370 ft.-lb. (500 Nm).

Figure 40-23-77

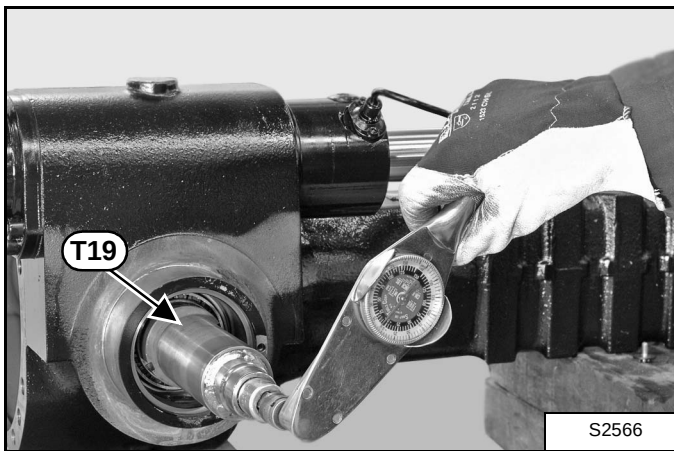

Apply onto the pinion (Item 2) [Figure 40-23-75] the bar-hold and with the help of a torque metre, check the torque of the pinion.

Torque: 120-170 Ncm.

NOTE: If torque exceeds the maximum value, then the size of shim "S1" between the bearing and the distance piece needs to be increased.

NOTE: If torque does not reach the set value, increase the torque setting of the ring nut in different stages to obtain a maximum value of 420 ft.-lb. (570 Nm).


NOTE: If torque does not reach the minimum value, then the size of shim "S1" needs to be reduced.

NOTE: When calculating the increase or decrease in size of shim "S1", bear in mind that a variation of shim of 0.01 mm corresponds to a variation of 0,44 ft.-lb. (60 Ncm) in the torque of the pinion.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Bevel pinion Assembly (Cont'd)

Figure 40-23-78

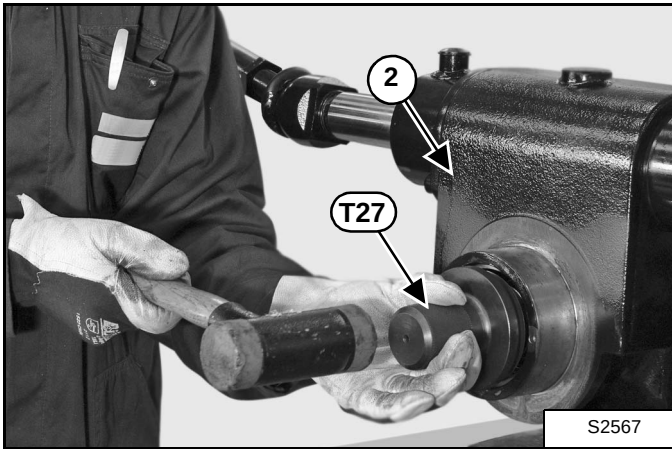

Lubricate the outer surface of the new sealing ring (Item 1) and fit it onto the central body (Item 2) [Figure 40-23-78] using tool T27.


Figure 40-23-79

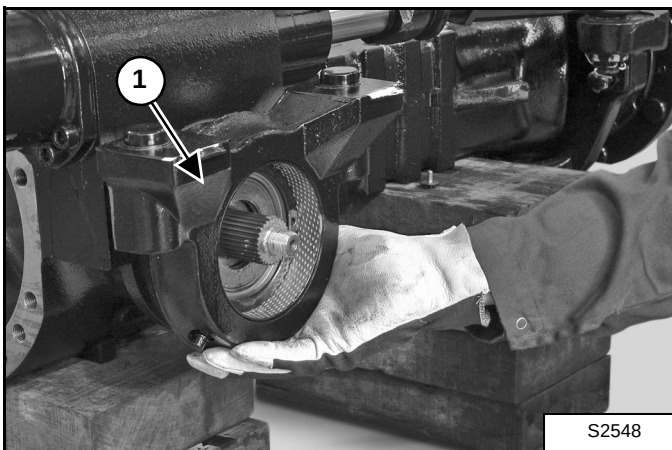

Install the swinging support (Item 1) [Figure 40-23-79].

NOTE: Check that it is properly oriented.


Figure 40-23-80

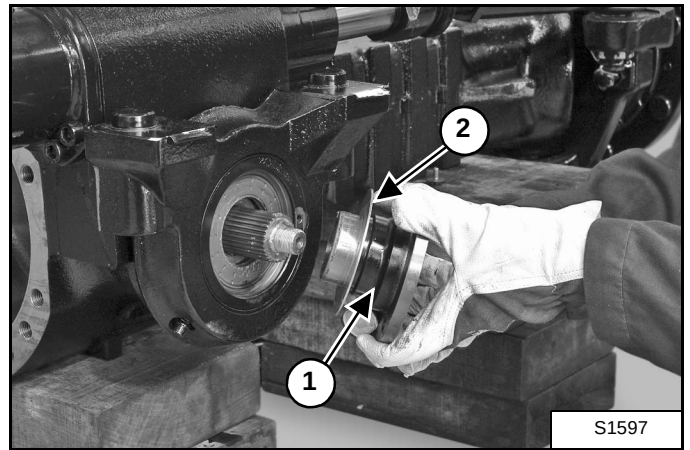

Fit the flange (Item 1) complete with the guard (Item 2) [Figure 40-23-80] and fasten it. For aligning the flange, use a plastic hammer if necessary.

NOTE: Make sure that the guard is securely fastened onto the flange and that it is not deformed.

Figure 40-23-81

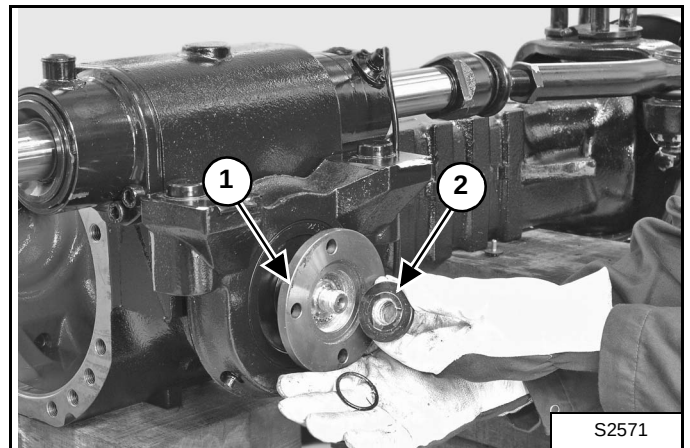


Apply Loctite 242 to the threaded part of the pinion (Item 2) [Figure 40-23-75]. Position tool T20A (or T20B) and fasten it in order to avoid rotation. Insert the O-ring (Item 1) and the nut (Item 2) [Figure 40-23-41] and tighten it using a dynamometric wrench. Torque wrench setting: 207 - 229 ft.-lb. (280-310 Nm).

AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Differential assembly

Figure 40-23-82

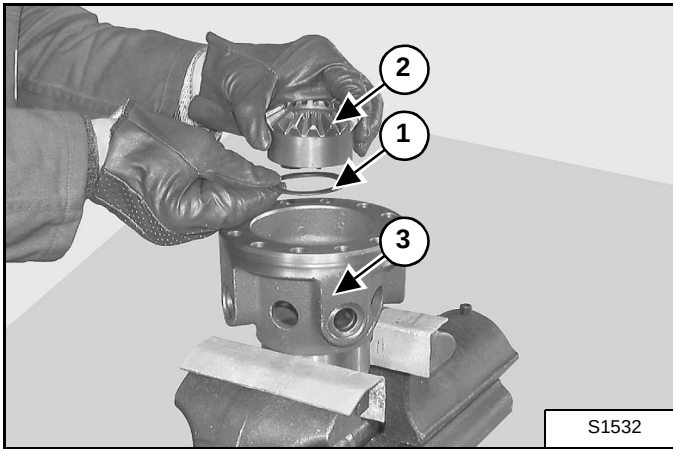


Insert the shim washer (Item 1) and the planetary gear (Item 2) in the differential carrier (Item 3) [Figure 40-23-82].

Figure 40-23-83

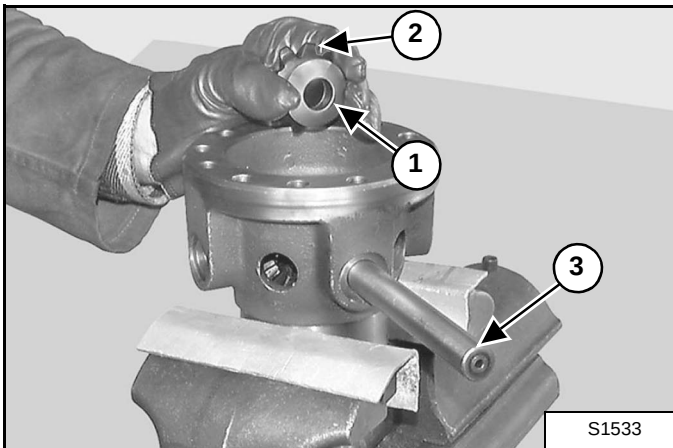


Position the shim washer (Item 1) and the first planet wheel gear (Item 2). Hold them in position using a bar (Item 3) [Figure 40-23-83].

Figure 40-23-84

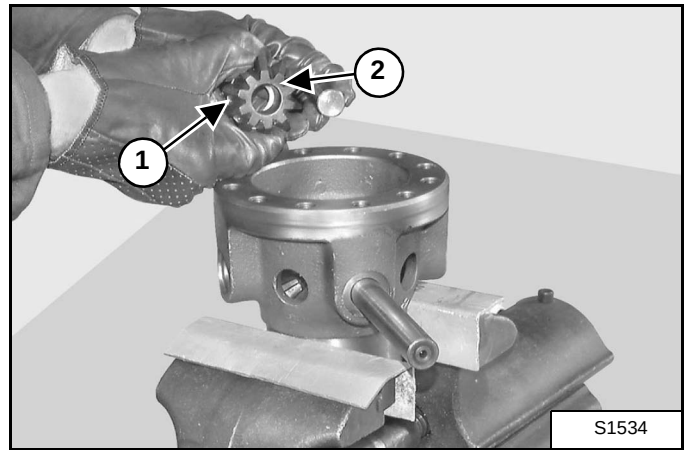

With the help of a bar, position the second planet wheel gear (Item 1) and the relative shim washer (Item 2) [Figure 40-23-84].

Figure 40-23-85

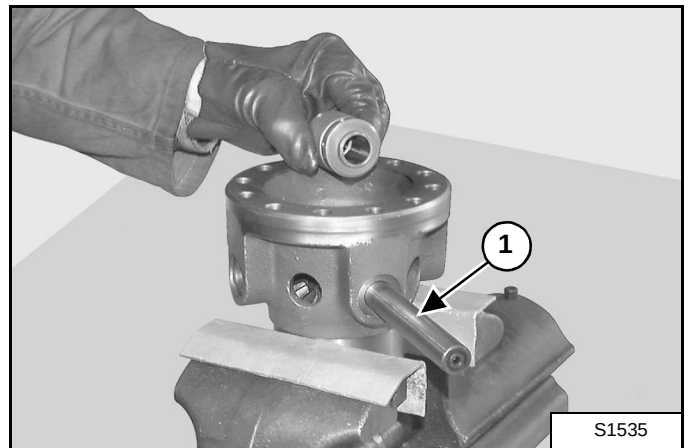


Insert a tool between the two planetary gears and (Item 1) [Figure 40-23-84]. Line up the entire unit by pushing the bar all the way down until it is ejected.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Differential assembly (Cont'd)

Figure 40-23-86

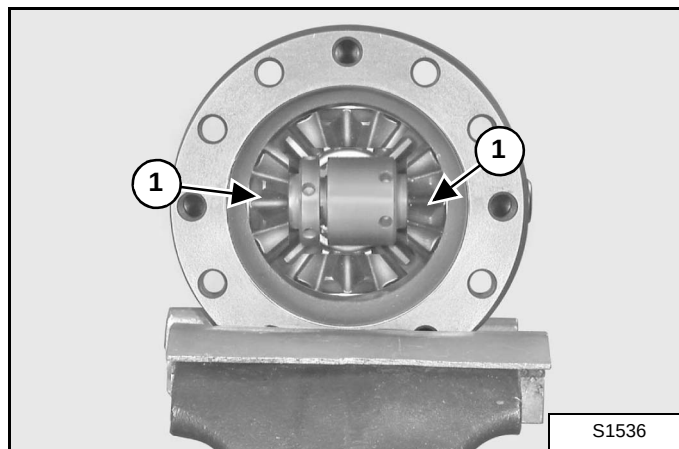


Lock the tool behind the planet wheel gears (Item 1) [Figure 40-23-86]. After locking, remove bar T16C.

Figure 40-23-87

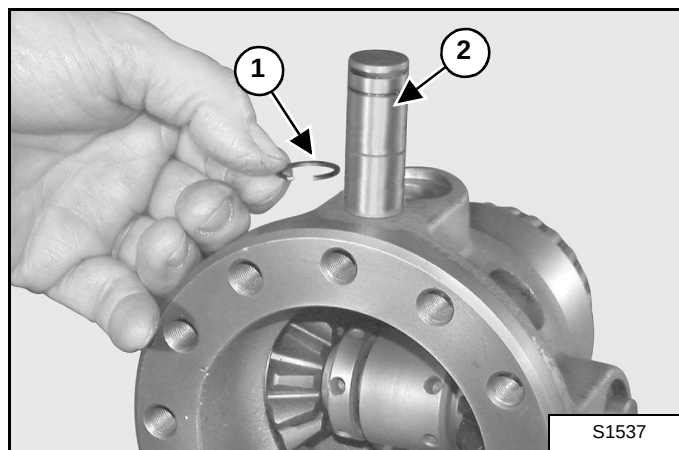


Fit the snap rings (Item 1) onto the pins (Item 2) [Figure 40-23-87].

Figure 40-23-88

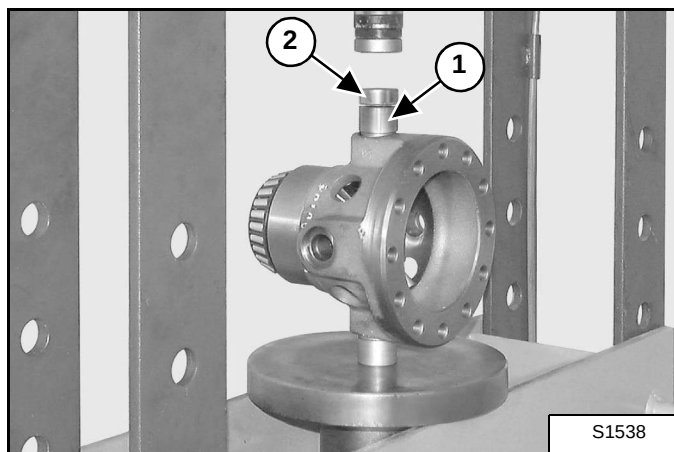

Place the differential carrier under the press, position bushing (Item 1) and insert the planet wheel pin (Item 2) [Figure 40-23-88].

Figure 40-23-89

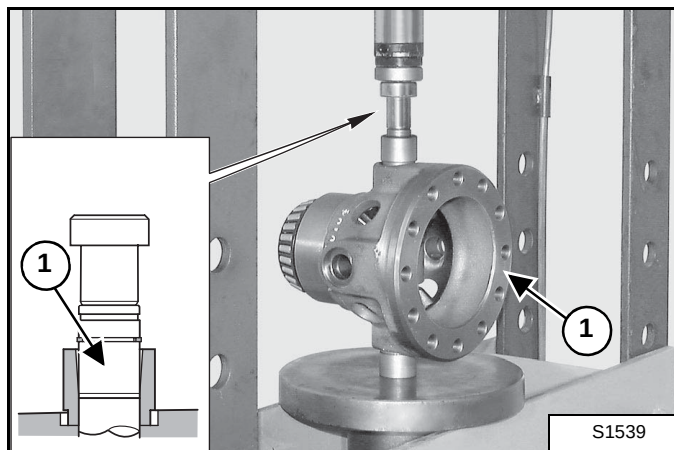


Put a tool pin on top of the planet wheel pin (Item 1) [Figure 40-23-89].

AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Differential assembly (Cont'd)

Figure 40-23-90

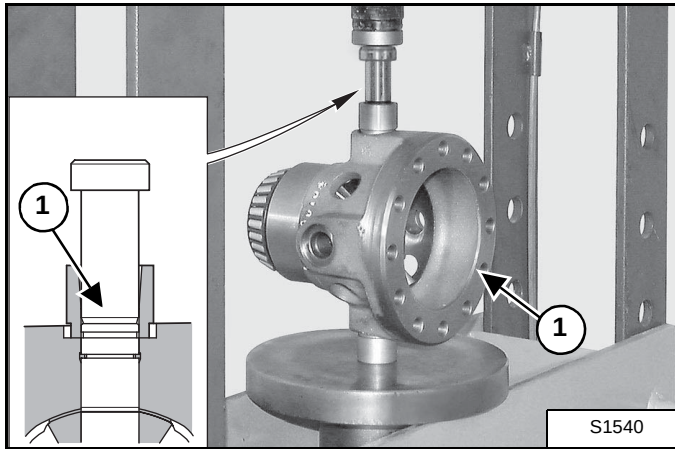

Press the pin all the way down (Item 1) [Figure 40-23-90].


Figure 40-23-91

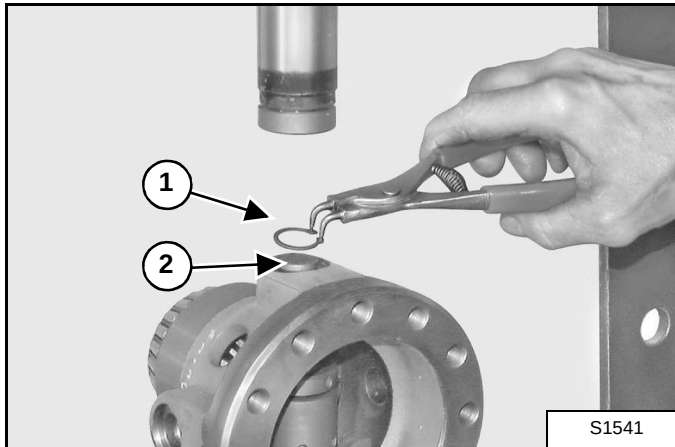

Remove tool pin, bushing and fit the snap ring (Item 1) on the pin (Item 2) [Figure 40-23-91].


NOTE: Make sure that the snap ring centres the seat and that it rests on the surface of the differential carrier.
Repeat the operations on the other planet wheel pin or planet wheel axle.

Figure 40-23-92

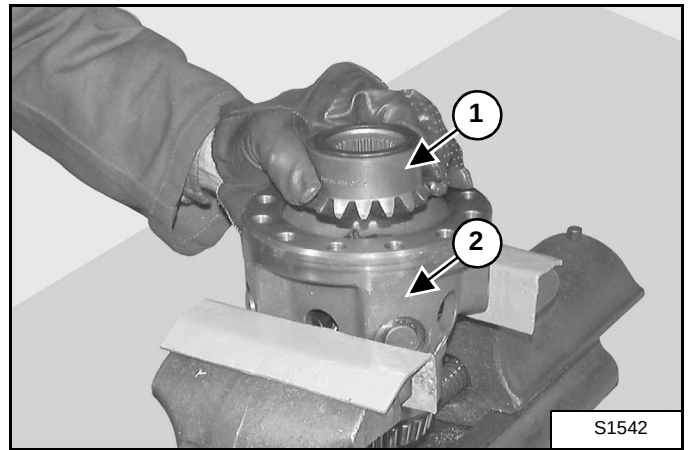

Position the second planetary gear (Item 1) in the differential carrier (Item 2) [Figure 40-23-92].

Figure 40-23-93

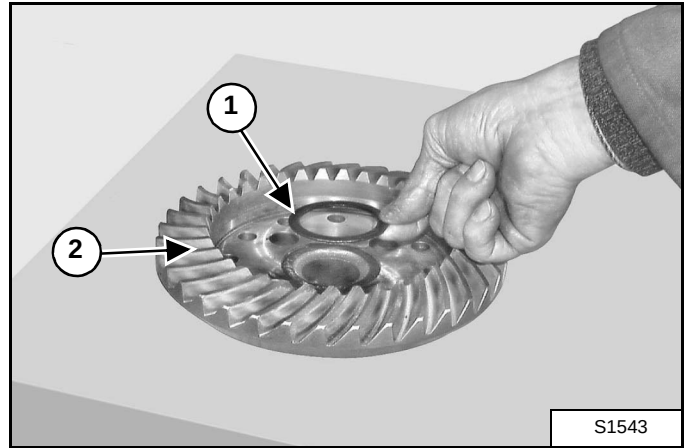


Position the shim washer (Item 1) on the crown (Item 2) [Figure 40-23-93].

NOTE: In order to hold the shim washer in position, apply grease to it.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Differential assembly (Cont'd)


Figure 40-23-94

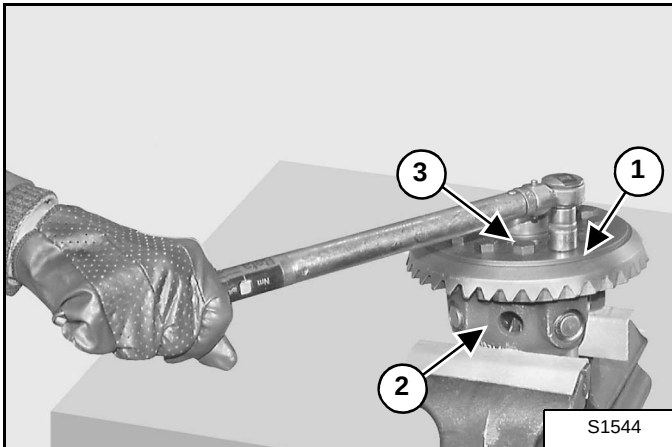

Position the crown (Item 1) on the differential carrier (Item 2) and lock it with screws (Item 3) **[Figure 40-23-94]** applied with Loctite 242.
Torque wrench setting for screws: 94 - 105 ft.-lb. (128-142 Nm).


NOTE: Secure the screws using the cross tightening method.

Figure 40-23-95

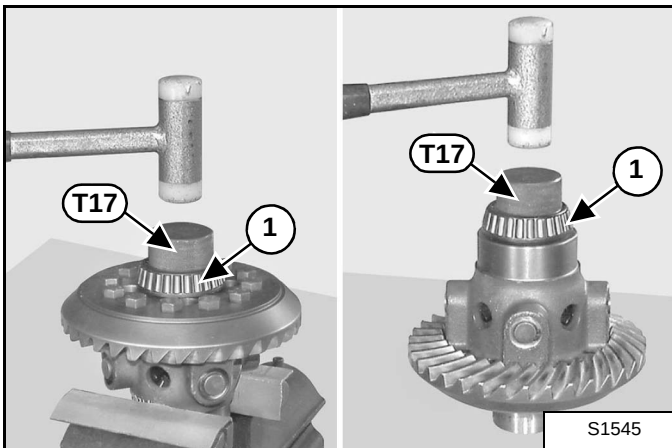


Install the bearing races (Item 1 and 2) **[Figure 40-23-95]** using tool **T17**.

Figure 40-23-96

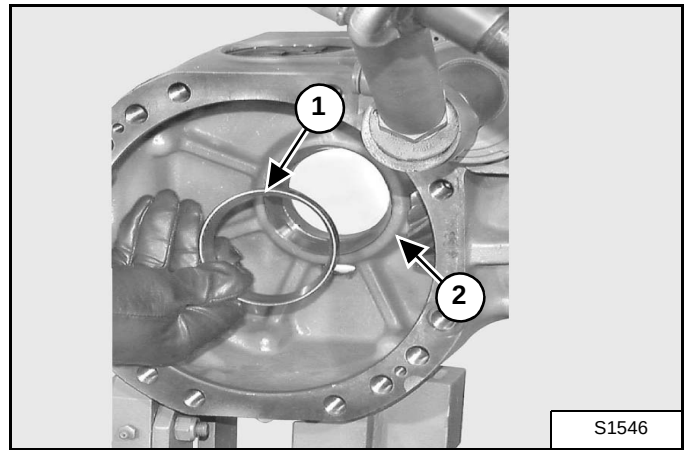

If the bearings are replaced, insert the external bearing races in the central body (Item 2) **[Figure 40-23-96]**.

Figure 40-23-97

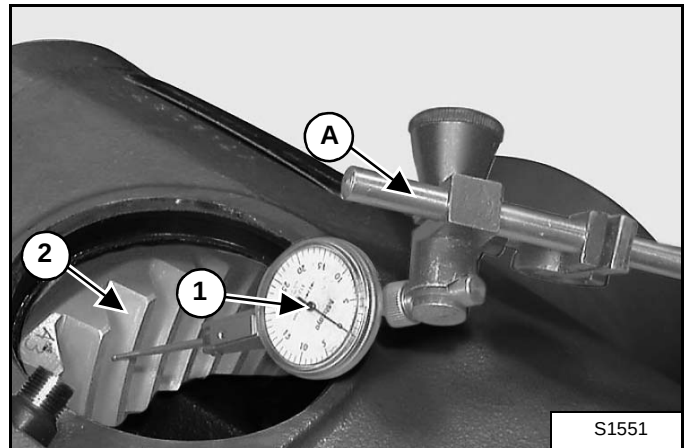


Introduce a dial indicator with rotary key "A" through the top plug hole (Item 1). Position the indicator on the centre of one of the teeth of the crown (Item 2) **[Figure 40-23-97]** and pre-set it to 1 mm and reset it.

**AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above)
(CONT'D)**

Differential assembly (Cont'd)


Figure 40-23-98

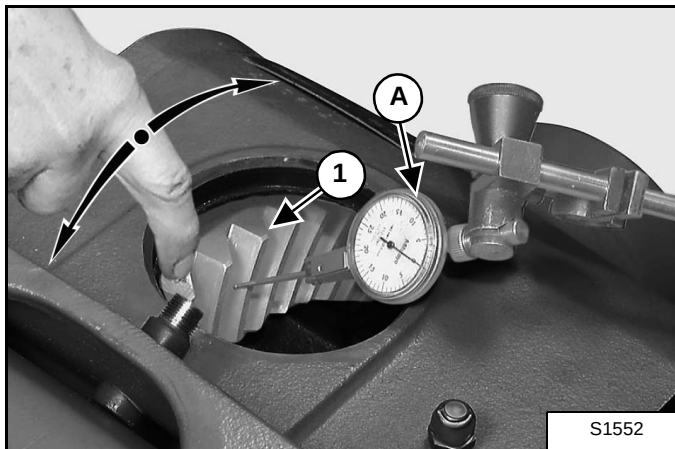

Manually move the crown (Item 1) [Figure 40-23-98] in both directions in order to check the existing backlash between the pinion and the crown.

NOTE: Difference between MIN and MAX clearance for whole circumference should not exceed 0.09 mm.

Figure 40-23-99

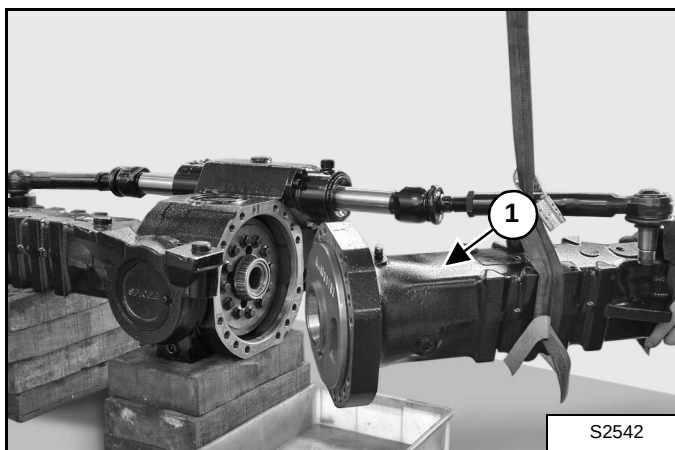


Re-install the complete arms (Item 1) [Figure 40-23-99].

AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Steering Knuckle Assembly

Figure 40-23-100

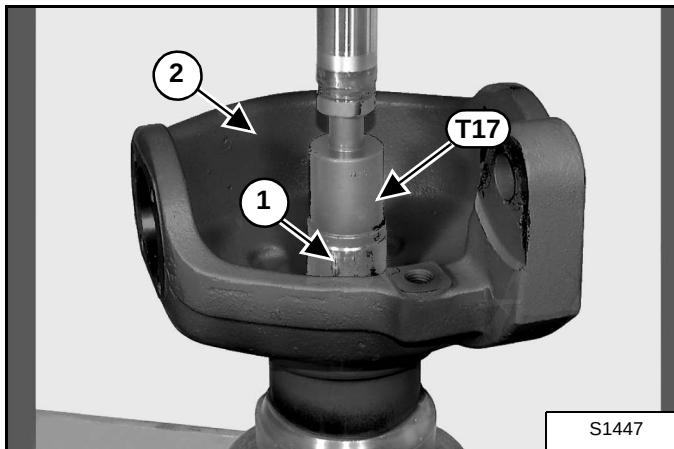


Lubricate the bushing (Item 1) and the seat of the steering case (Item 2). Install the bushing (Item 1) [Figure 40-23-100], using tool T17.

Figure 40-23-101

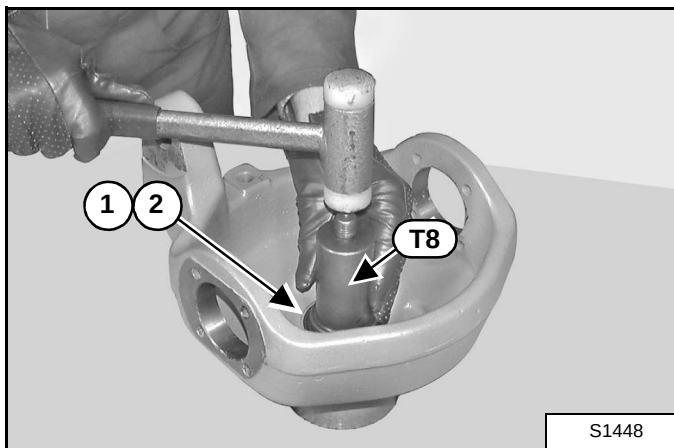


Lubricate the outer surface of the sealing ring (Item 1) and centering ring (Item 2) [Figure 40-23-101]. Fit them into their seat using tool T8.

Figure 40-23-102

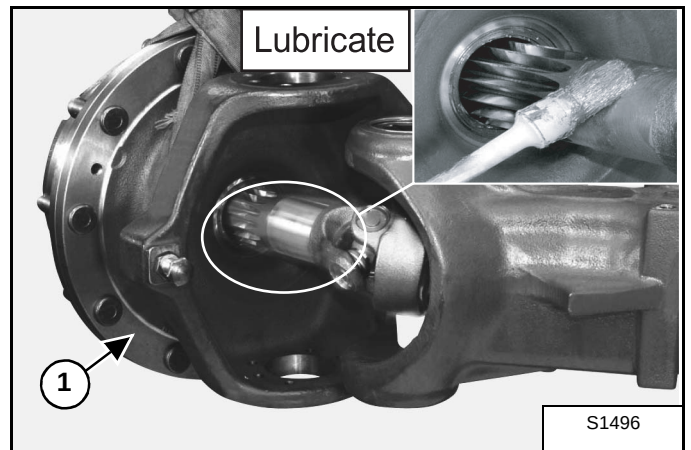

Lubricate the terminal of the drive axle and install the steering case (Item 1) [Figure 40-23-102]. Pay due attention not to damage the dust cover rings and the sealing rings.

Figure 40-23-103

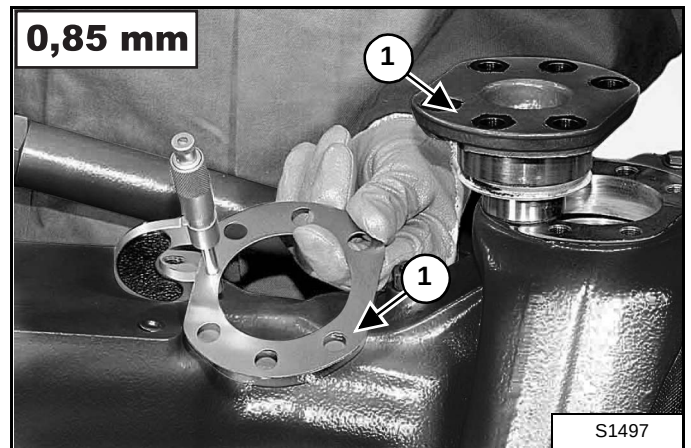


Prepare a series of shims (Item 1) of 0.85 mm. To be assembled under the upper pin (Item 2) [Figure 40-23-103].

AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Steering Knuckle Assembly (Cont'd)

Figure 40-23-104

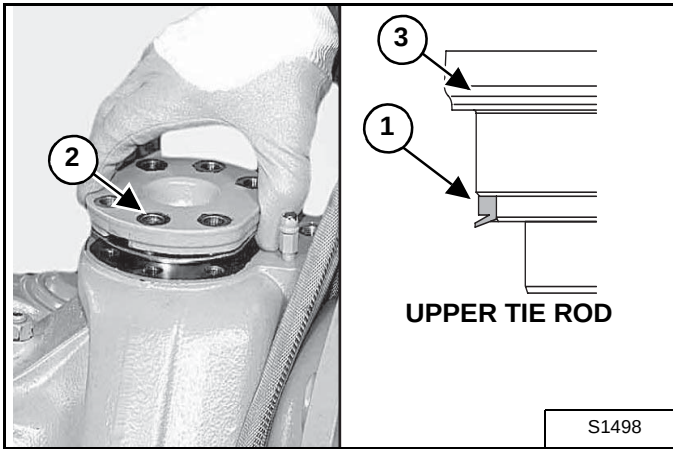


Fit a new seal (Item 1) onto the top tie rod (Item 3) [Figure 40-23-104]. Lubricate and install the unit in the steering case. Insert and tighten the 6 screws (Item 2) [Figure 40-23-104], apply a torque of 103 ft.-lb. (140 Nm) using the cross tightening method. Check the correct assembly side of the seal (Item 1) [Figure 40-23-104].

Figure 40-23-105




Lubricate the group with grease and mount it in the steering case (Item 1) [Figure 40-23-105].

Figure 40-23-106

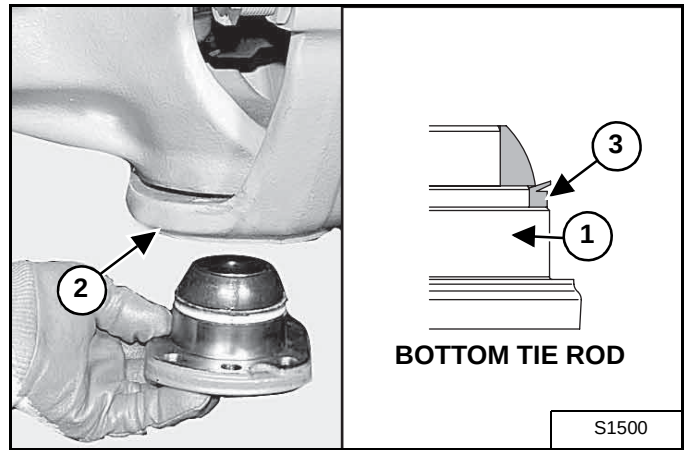

Fit the unit (Item 1) in the steering case (Item 2) [Figure 40-23-106]. Position the new screws and tighten. Check for the correct assembly side of the seal (Item 3) [Figure 40-23-106].

Figure 40-23-107

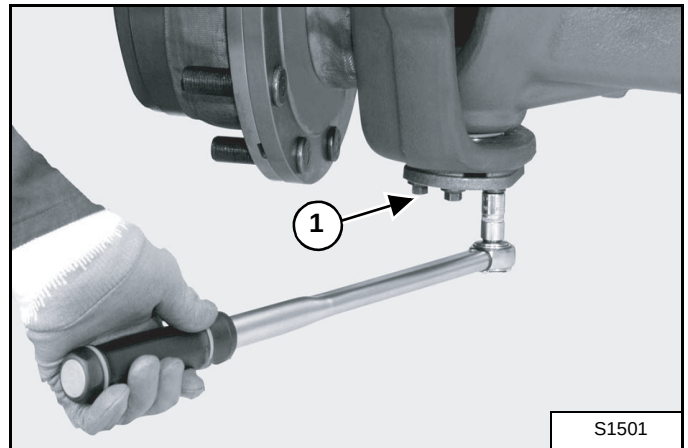


Tighten the fitting screws (Item 1) [Figure 40-23-107] of the bottom tie rod in sequence using the cross tightening method, apply a torque of 103 ft.-lb. (140 Nm).

AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Steering Knuckle Assembly (Cont'd)

Figure 40-23-108

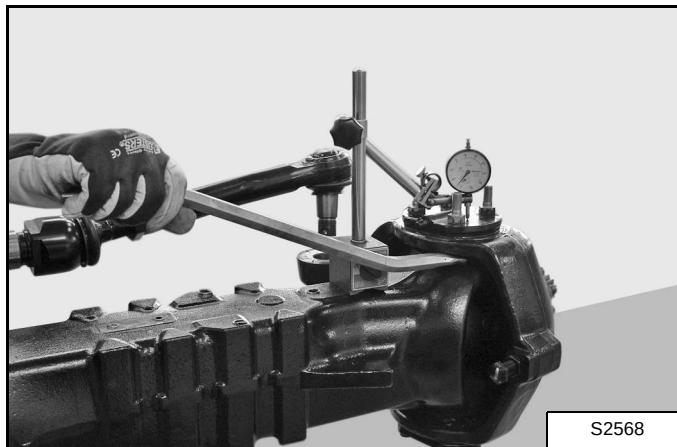

Install a magnetic based dial indicator on the steering housing. Check by means of a lever that there is no vertical gap. In case there is any gap, determine the width and reduce it by removing shims.

Figure 40-23-109

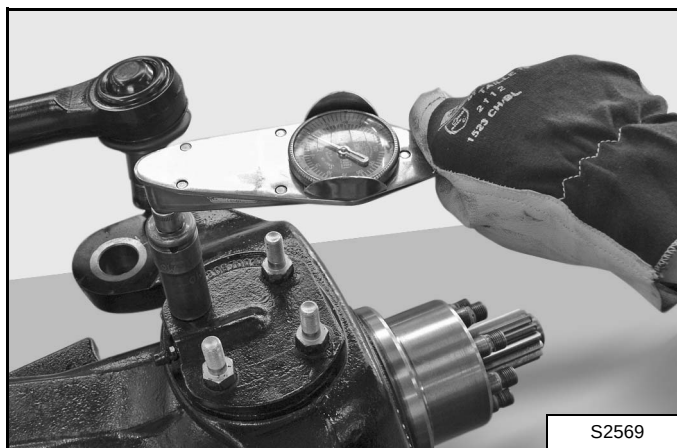


Check the torque of the pins, which has to be between 22 - 44 ft.-lb. (30 - 60 Nm). If the preliminary measured value is too high, the shims have to be increased.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Planetary Carrier Assembly

Figure 40-23-110

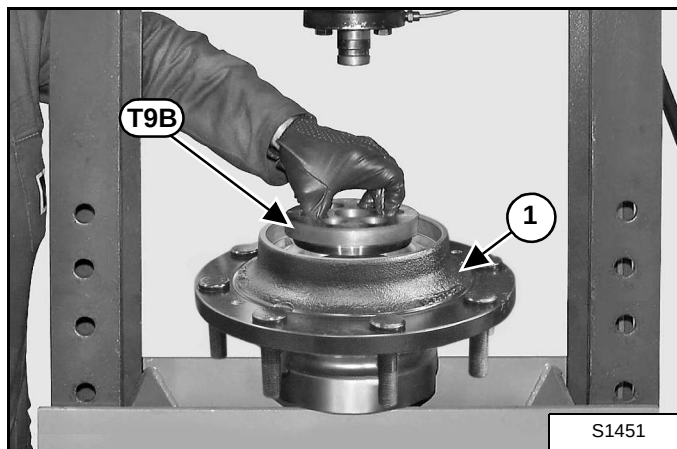


Position the upper part of tool **T9B** and press the bearing races into the hub (Item 1) **[Figure 40-23-110]** all the way down.

Figure 40-23-111

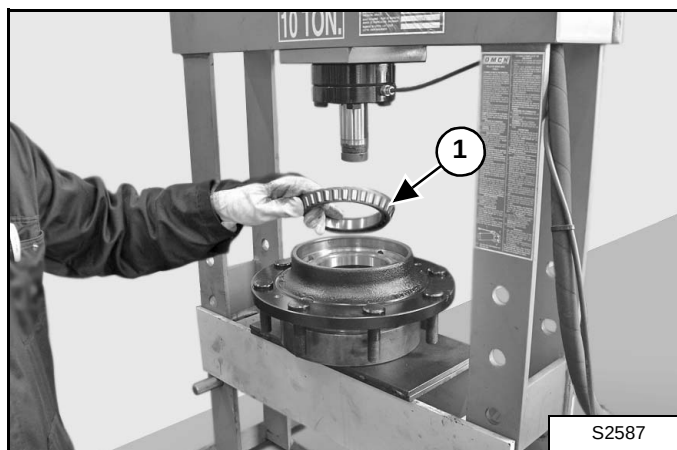


Fit the bearing (Item 1) **[Figure 40-23-111]** into the internal bearing race (wide side up).

Figure 40-23-112

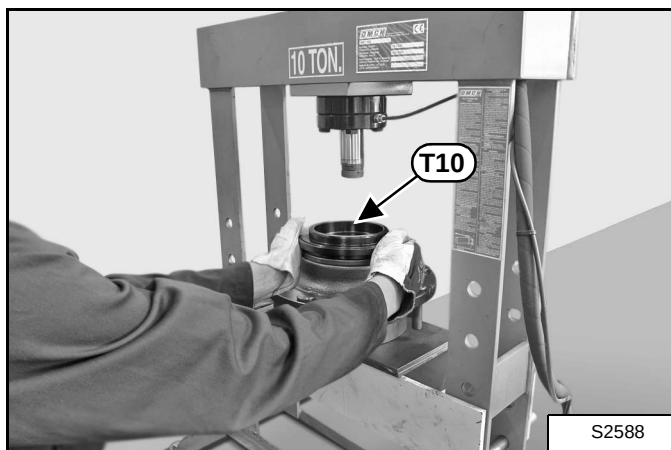

Position tool **T10** and press the sealing ring into its seat.

Figure 40-23-113

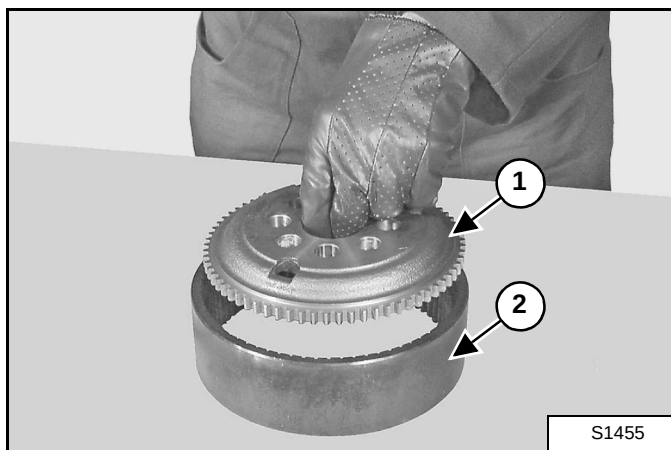


Insert the flange (Item 1) in the crown (Item 2) **[Figure 40-23-113]**.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Planetary Carrier Assembly (Cont'd)


Figure 40-23-114

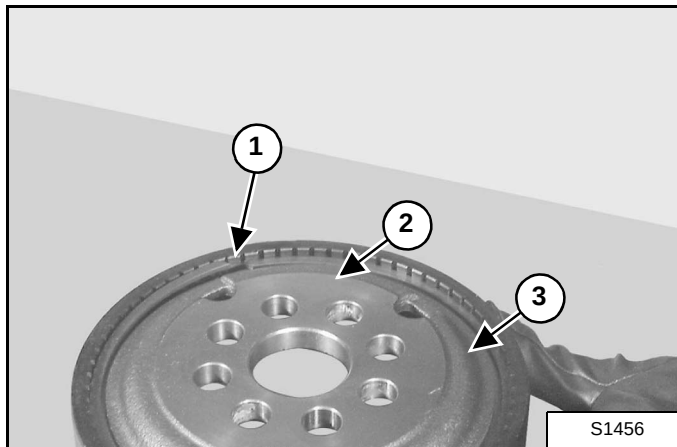

Insert the snap ring (Item 1) in order to fix the flange (Item 2) in the crown (Item 3) [Figure 40-23-114].


NOTE: Carefully check that the ring is properly inserted in the slot of the crown.

Figure 40-23-115

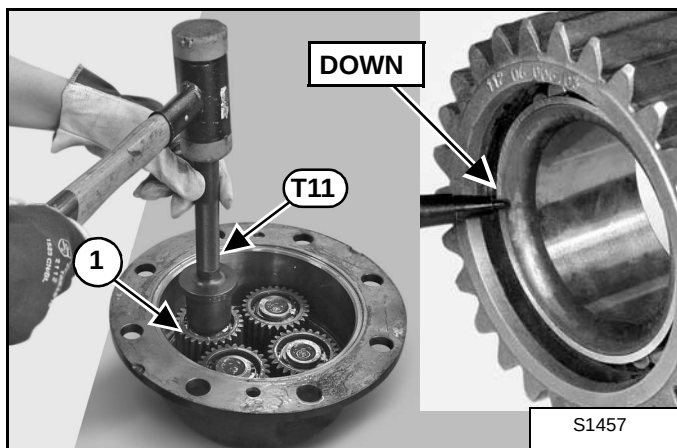


With the help of tool **T11**, insert the planet wheel gears (Item 1) into the cover (Item 2) [Figure 40-23-115]. Accurately check the orientation.

Figure 40-23-116

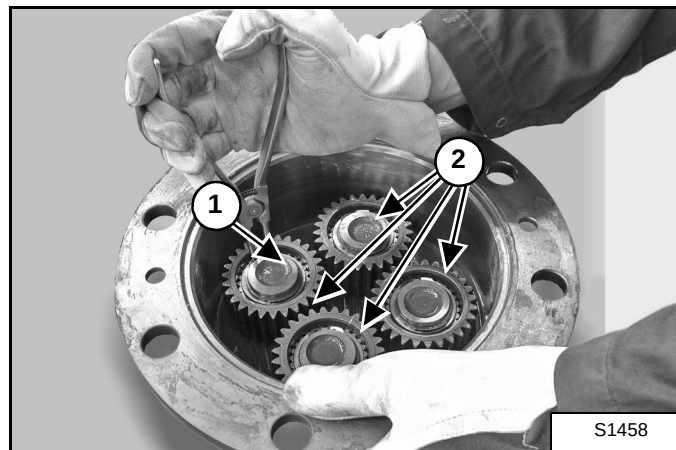

Install the four snap rings (Item 1) [Figure 40-23-116].

Figure 40-23-117

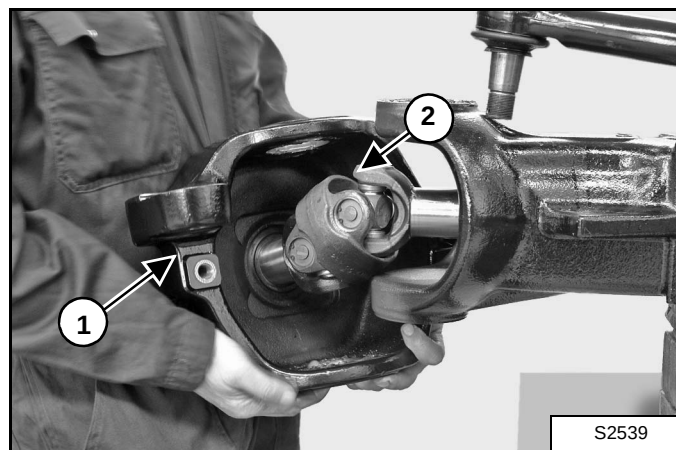


Fit the steering case (Item 1) onto the drive axle (Item 2) [Figure 40-23-117] and install the tie rods.

Connect the steering bars.

AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Planetary Reduction Assembly (Cont'd)

Figure 40-23-118

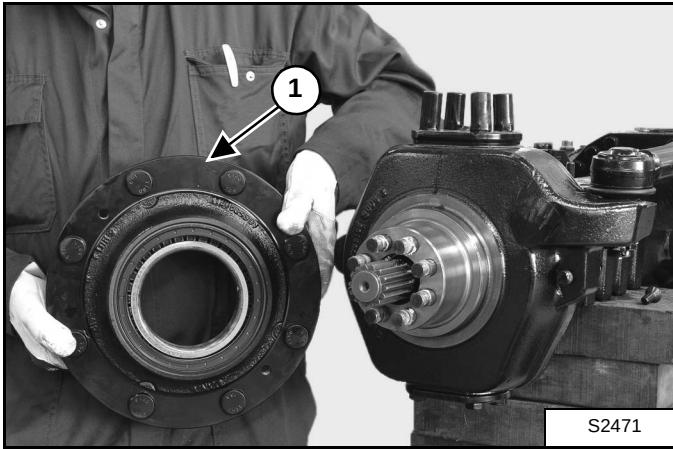

Install the hub (Item 1) [Figure 40-23-118].


Figure 40-23-119

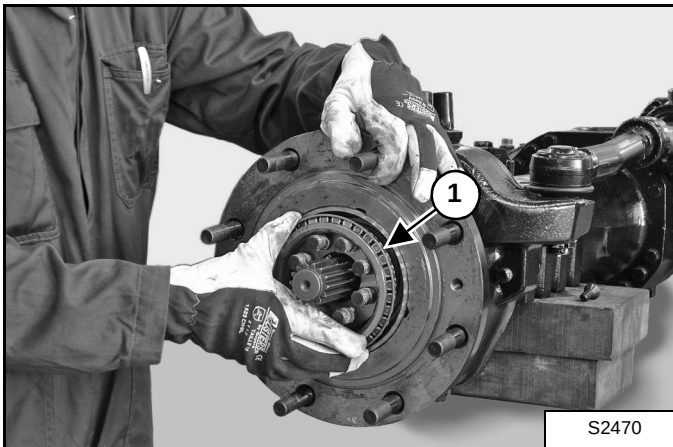

Install the external bearing (Item 1) [Figure 40-23-119].

NOTE: Using a plastic hammer, drive the bearing to the limit stop by lightly hammering around the edge.


Figure 40-23-120

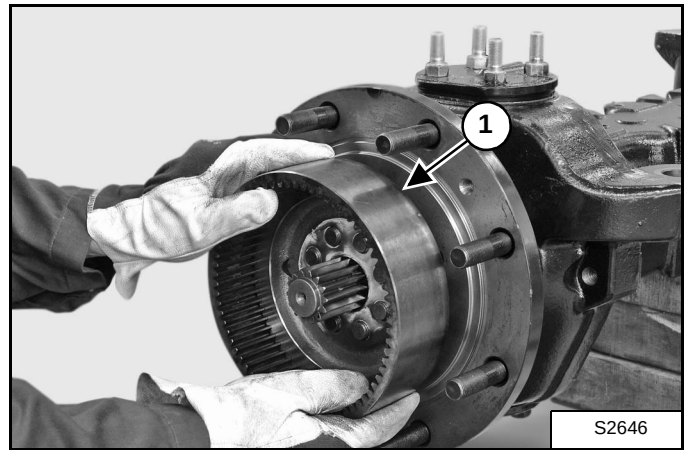

Fit the complete crown flange (Item 1) [Figure 40-23-120].

NOTE: In order to fasten the flange (5), use a plastic hammer and alternatively hammer on several equidistant points.

Figure 40-23-121

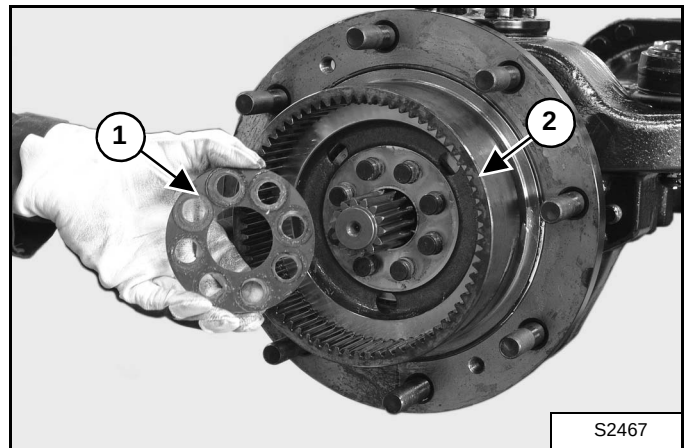


Apply silicone based grease to the surface of the flange (Item 1) which touches the crown flange (Item 2) [Figure 40-23-121]. Fit the flange (Item 1) [Figure 40-23-121].

AXLE AND DIFFERENTIAL (REAR) (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Planetary Reduction Assembly (Cont'd)

Figure 40-23-122

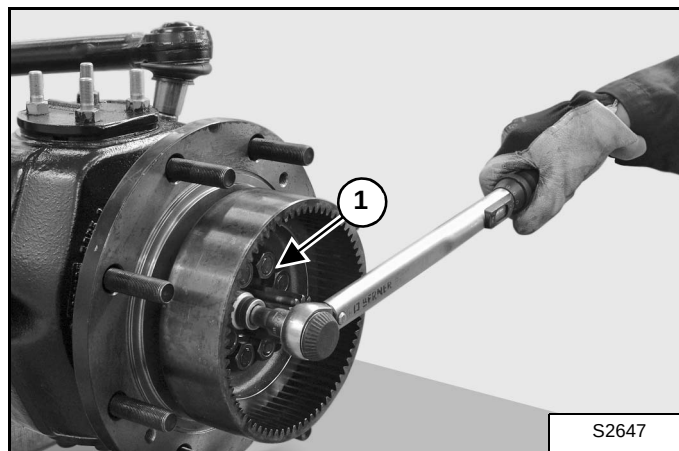


Cross tighten the nuts (Item 1) [Figure 40-23-122] in two stages.

Initial torque wrench setting: 88 ft.-lb. (120 Nm).

Final torque wrench setting: 188 - 210 ft.-lb. (255 - 285 Nm).


Figure 40-23-123

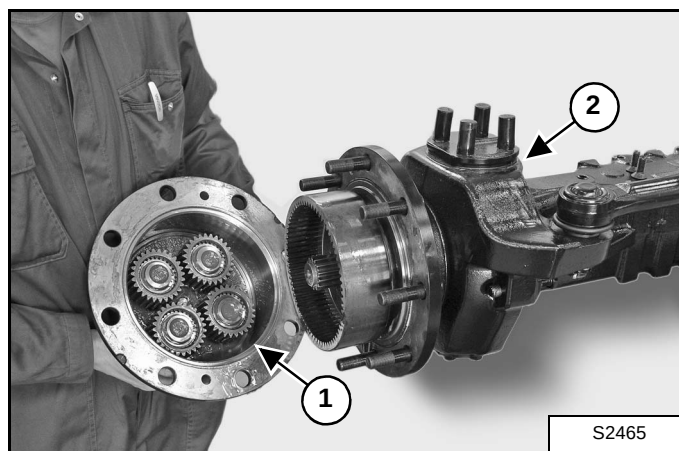

Fit the planetary carrier cover (Item 1) onto the hub (Item 2) [Figure 40-23-123].


NOTE: Check that the O-ring is in good condition and in position.

Figure 40-23-124

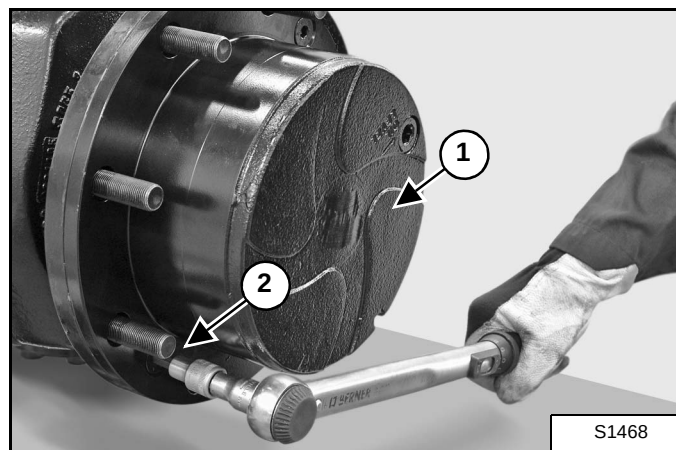

Lock the planetary carrier cover (Item 2) by tightening the screws (Item 1) [Figure 40-23-124]. Apply a torque of 30 - 37 ft.-lb. (40 - 50 Nm).


SPECIAL TOOLS

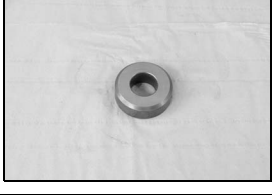BOBCAT PN	IMAGE	DESCRIPTION	TOOL NR.
6912190		WHEEL HUB SEAL	T10
6912192		DIFFERENTIAL RING NUT	T13
6912196		DIFFERENTIAL BEARING INNER RINGS	T17
6912197		PINION RING NUT	T19 T21 T22
6912199		PINION DUMMY BEARING	T24
6912201		DUMMY PINION	T26
6912202		PINION TAIL SEAL	T27

FRONT AXLE WITHOUT FRAME LEVELING (For S/N 362811001 - 362812000)

Removal

Figure 40-30-1

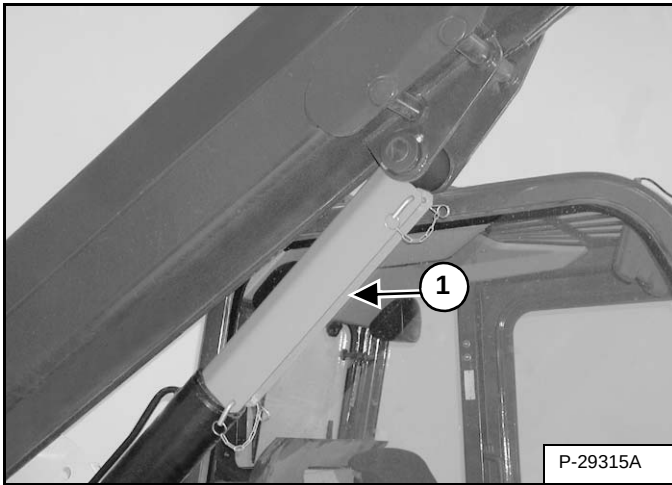

Raise the boom and install the boom stop (Item 1) [Figure 40-30-1].


Relieve hydraulic pressure.

! WARNING

Hydraulic fluid escaping under pressure can have sufficient force to enter a person's body by penetrating the skin. This can cause serious injury and possible death if proper medical treatment by a physician familiar with this injury is not received immediately.

W-2145-0290


Figure 40-30-2

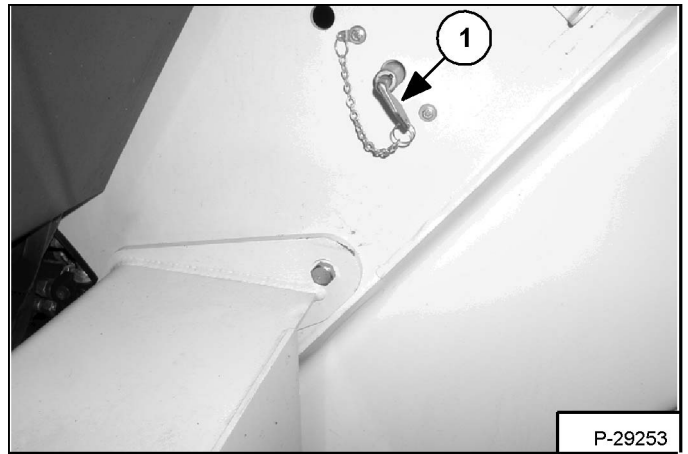

Rotate the battery disconnect switch (Item 1) [Figure 40-30-2] to the right, to disconnect the power supply from the battery.

Drain the hydraulic reservoir. (See "Replacing Hydraulic Fluid" on page 10-100-3)

Figure 40-30-3

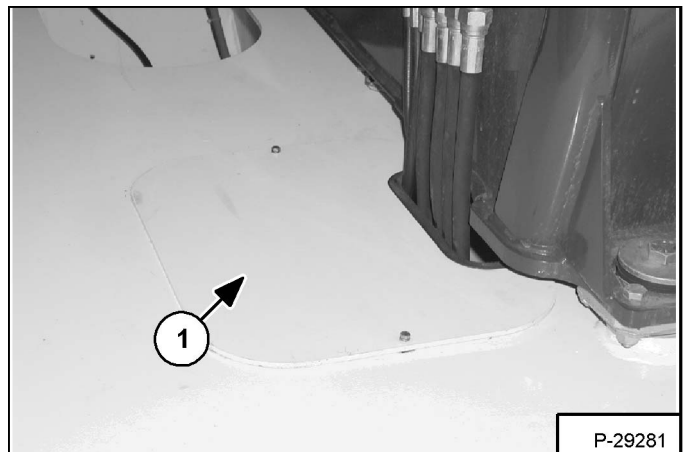


Remove the access panel (Item 1) [Figure 40-30-3].

FRONT AXLE WITHOUT FRAME LEVELING (CONT'D)

Removal (Cont'd)

Figure 40-30-4

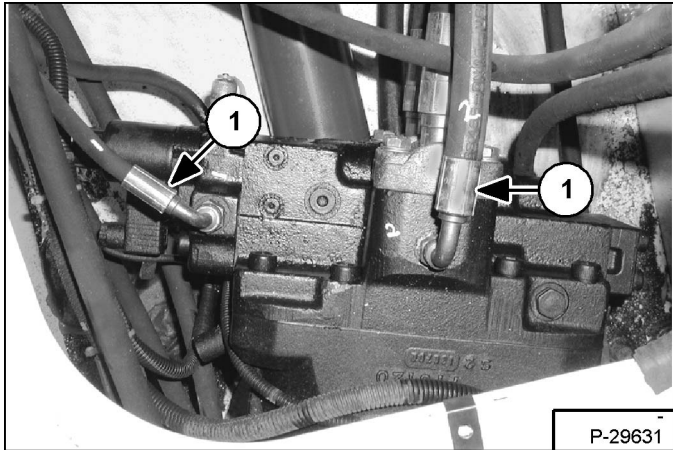

Remove the two hoses (Item 1) [Figure 40-30-4] from the drive motor. Install caps and plugs.


NOTE: Mark all hoses for correct installation.

IMPORTANT

When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.


I-2003-0888

Figure 40-30-5

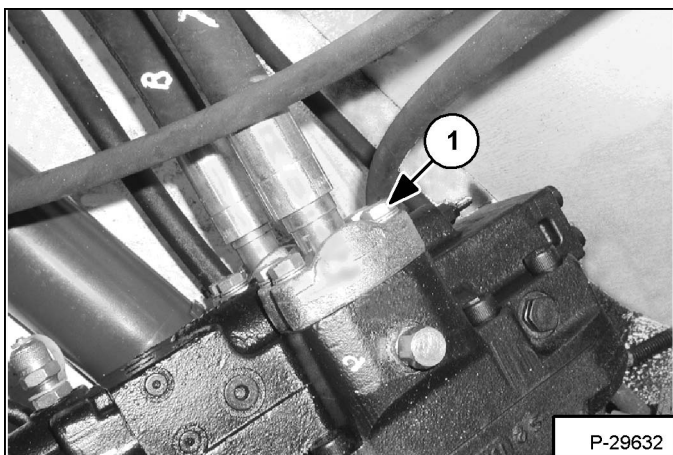


Remove the upper four bolt flange hose (Item 1) [Figure 40-30-5].

Figure 40-30-6

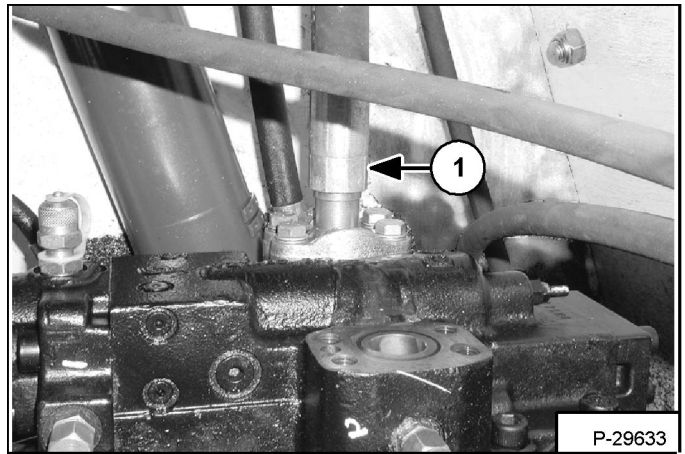


Remove the lower four bolt flange hose (Item 1) [Figure 40-30-6].

Figure 40-30-7

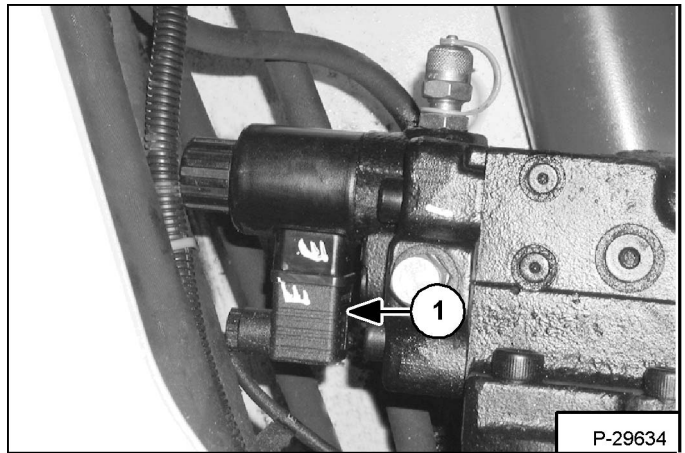

Remove the electrical plug (Item 1) [Figure 40-30-7].

Figure 40-30-8

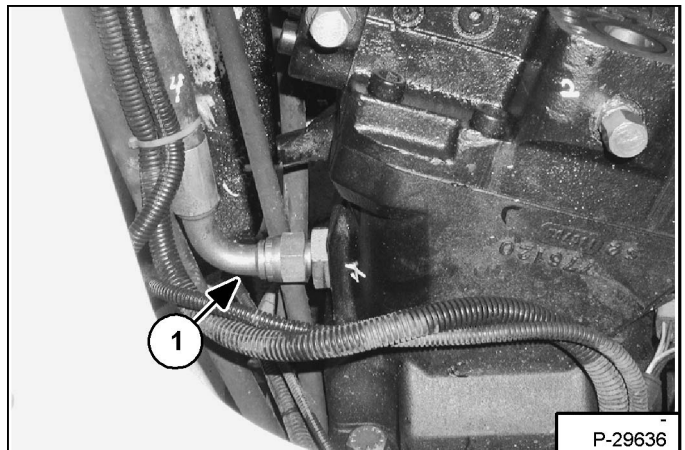


Remove the return hose (Item 1) [Figure 40-30-8] from the side of the drive motor.

FRONT AXLE WITHOUT FRAME LEVELING (CONT'D)


Removal (Cont'd)

Figure 40-30-9

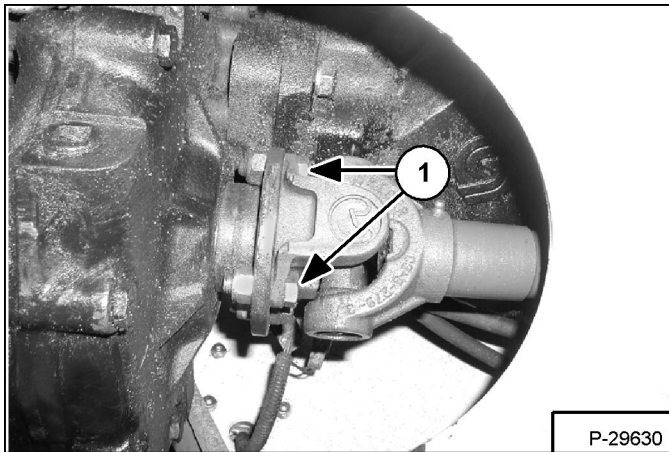

Remove the four driveshaft mounting bolts (Item 1) [Figure 40-30-9]. Lower the driveshaft.


Figure 40-30-10

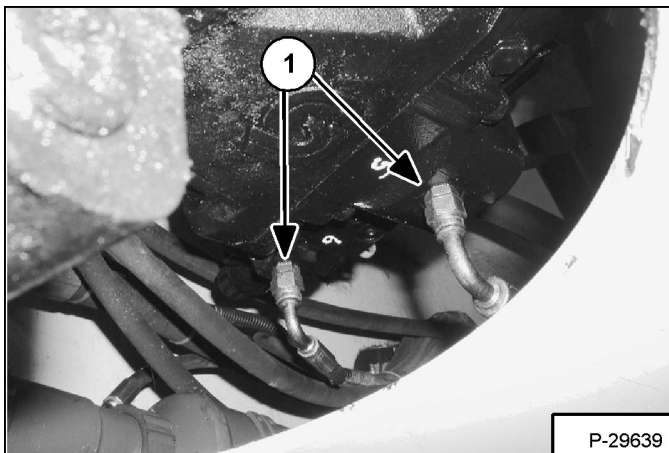

Remove the two hoses (Item 1) [Figure 40-30-10] from the bottom of the drive motor.


Install caps and plugs.

Figure 40-30-11

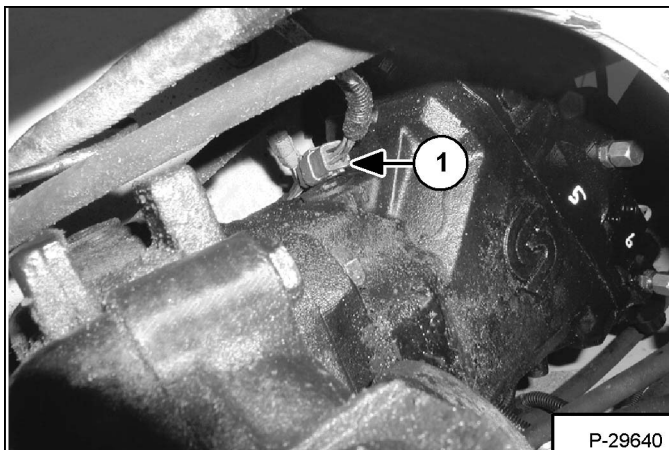

Unplug the electrical connector (Item 1) [Figure 40-30-11] from each side of the drive motor.

Figure 40-30-12

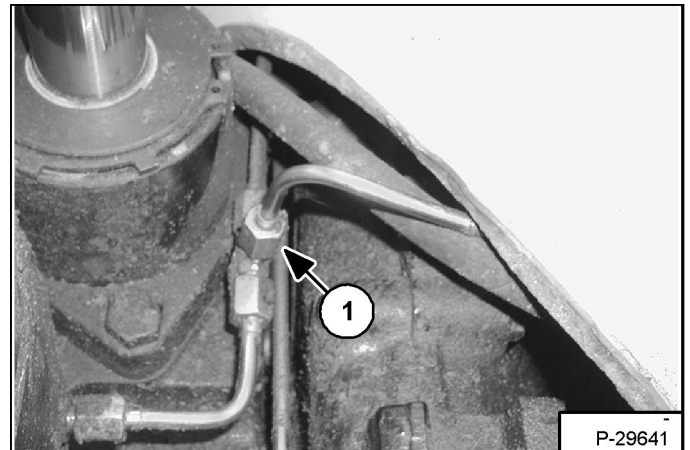


Remove the brake tubeline (Item 1) [Figure 40-30-12] from the left side of the axle.

FRONT AXLE WITHOUT FRAME LEVELING (CONT'D)


Removal (Cont'd)

Figure 40-30-13

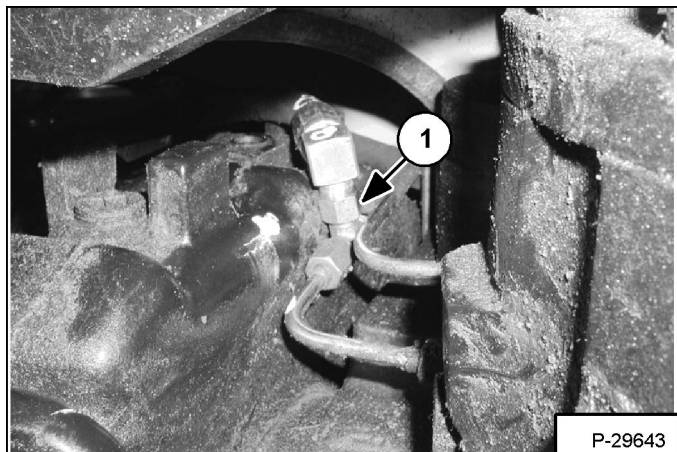

Remove the brake hose (Item 1) [Figure 40-30-13] from the right side of the axle.


Figure 40-30-14

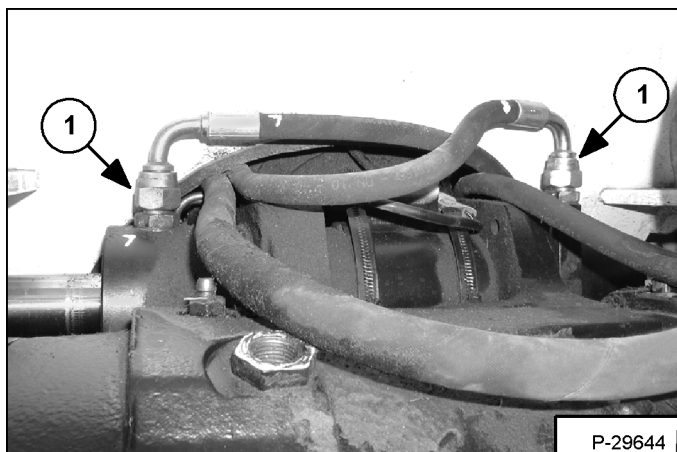

Remove the two hoses (Item 1) [Figure 40-30-14] from the steering cylinder.


Install caps and plugs.

Figure 40-30-15

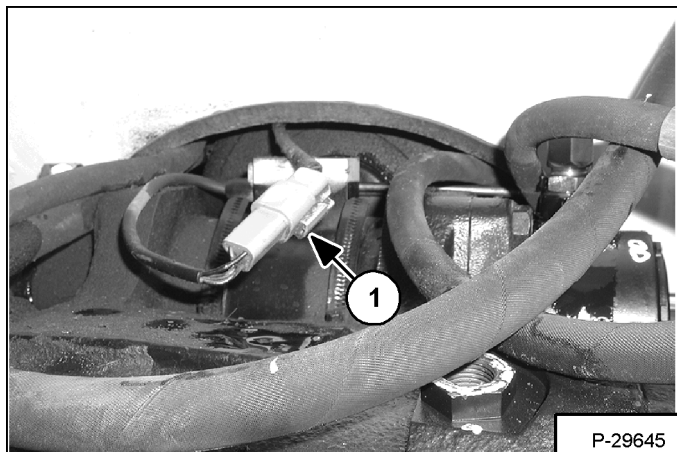

Unplug the electrical connector (Item 1) [Figure 40-30-15].

Figure 40-30-16

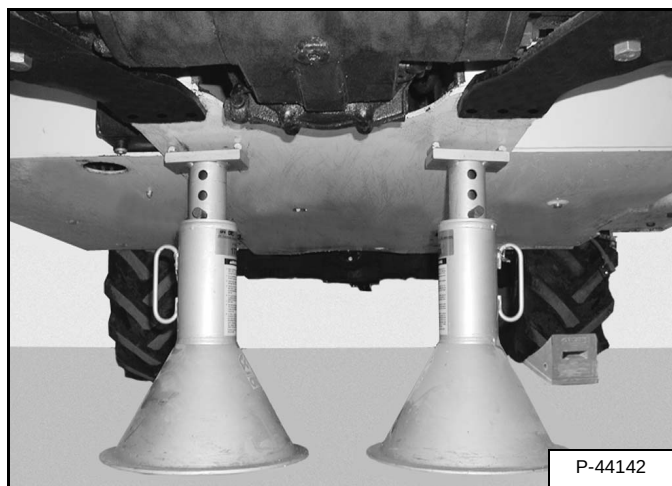


Lift the front of the machine and place jackstands under the frame as shown [Figure 40-30-16].

Place a block in front and behind the rear wheel [Figure 40-30-16].

FRONT AXLE WITHOUT FRAME LEVELING (CONT'D)

Removal (Cont'd)


Figure 40-30-17

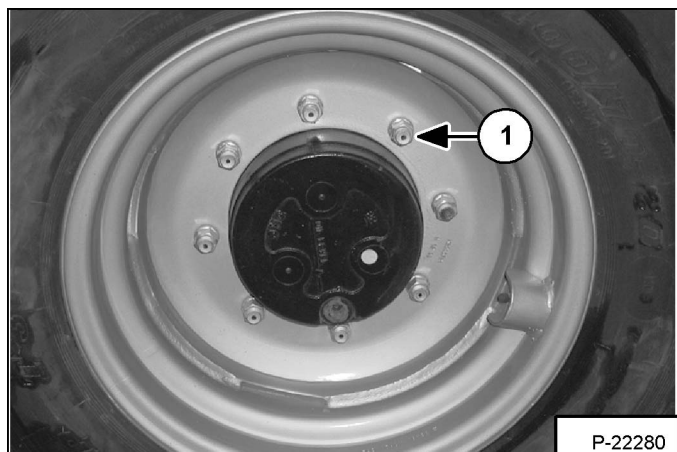

Remove the eight lug nuts and washers (Item 1) [Figure 40-30-17] from each front tire.


Remove both front tires.

Figure 40-30-18

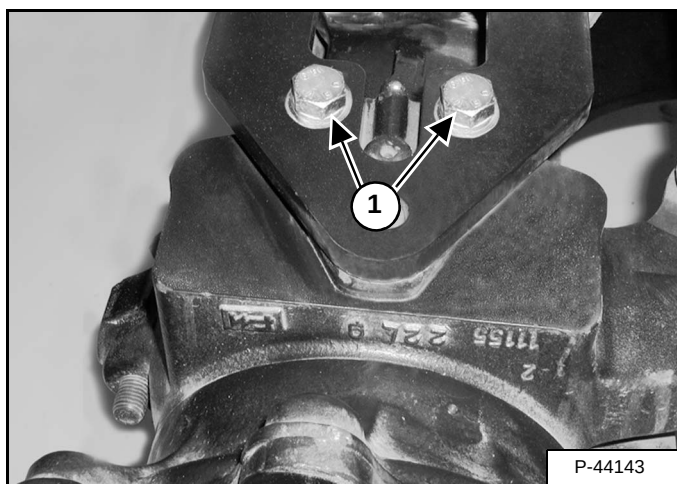


Remove the two bolts (Item 1) [Figure 40-30-18] and remove the front fenders.

Figure 40-30-19

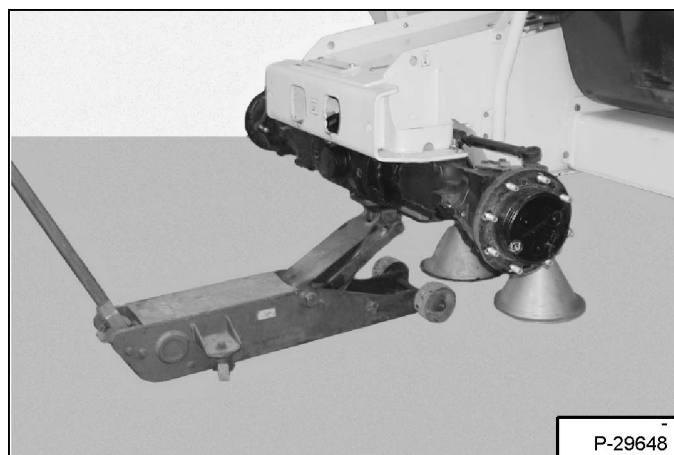

Using a floor jack, apply upward pressure to lift and support the front axle [Figure 40-30-19].

Figure 40-30-20

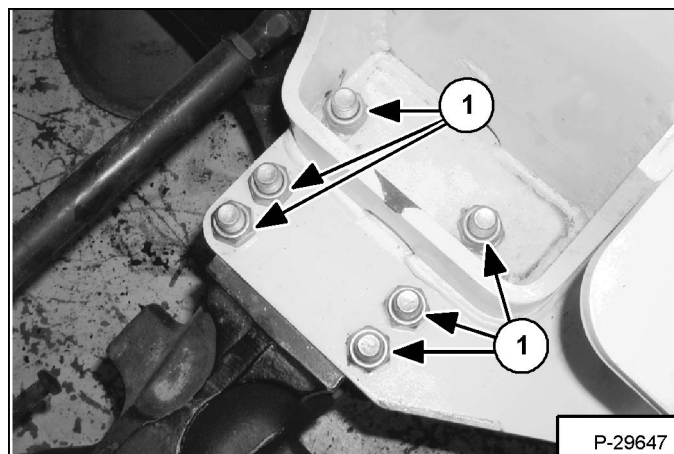


Remove the six axle mounting bolts (Item 1) [Figure 40-30-20] from each side of the axle.

FRONT AXLE WITHOUT FRAME LEVELING (CONT'D)

Removal (Cont'd)

Figure 40-30-21

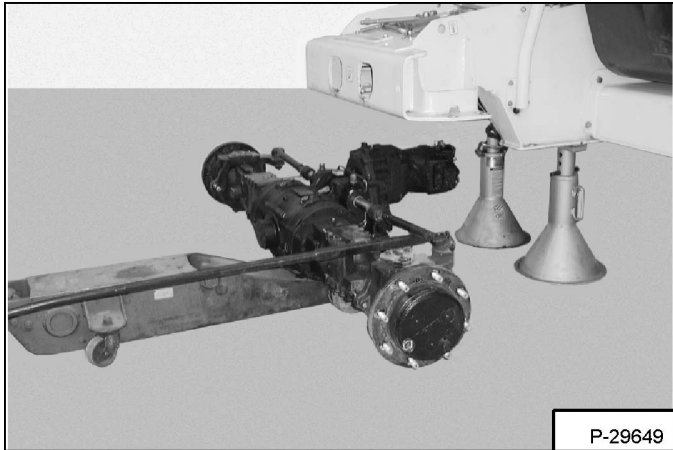


Have an assistant balance the axle on the floor jack and lower the floor jack slowly. Roll the axle out from under the frame **[Figure 40-30-21]**.

FRONT AXLE WITHOUT FRAME LEVELING (CONT'D)


Installation

Figure 40-30-22

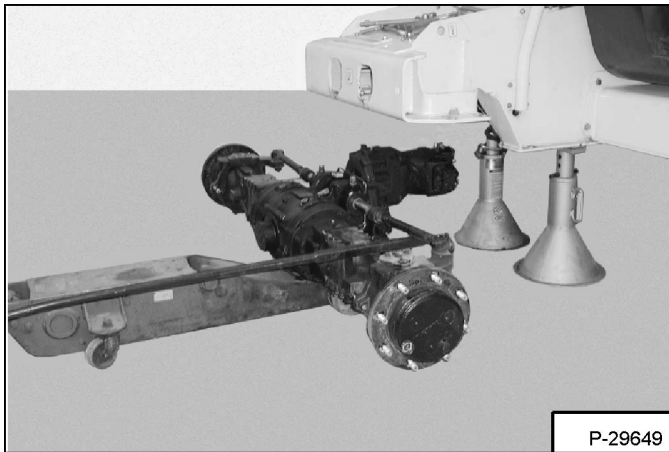


Have an assistant balance the axle on the floor jack and roll the axle under the frame [Figure 40-30-22].

Figure 40-30-23

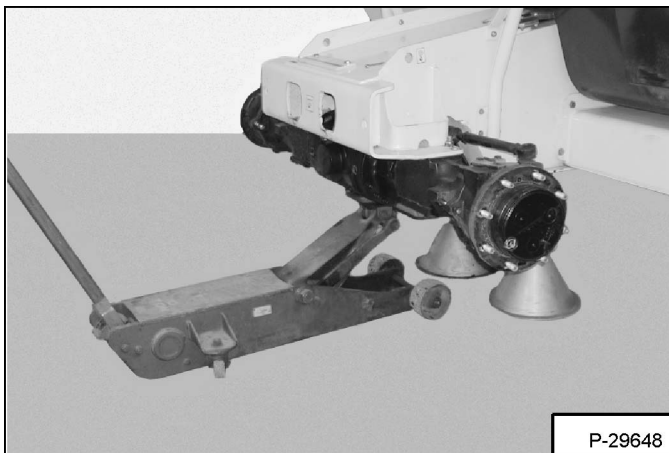


Raise the floor jack, lifting the axle upward and into position [Figure 40-30-23].

Figure 40-30-24

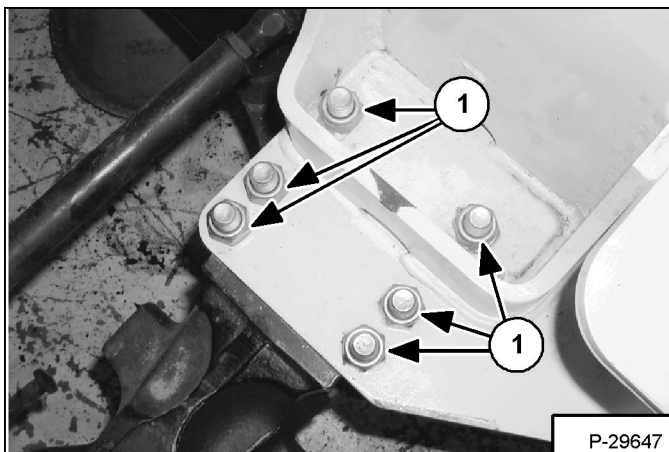

Install the mounting bolts (Item 1) [Figure 40-30-24] (Both sides). Tighten to 275-300 ft.-lbs. (370-410 Nm) torque.

Figure 40-30-25

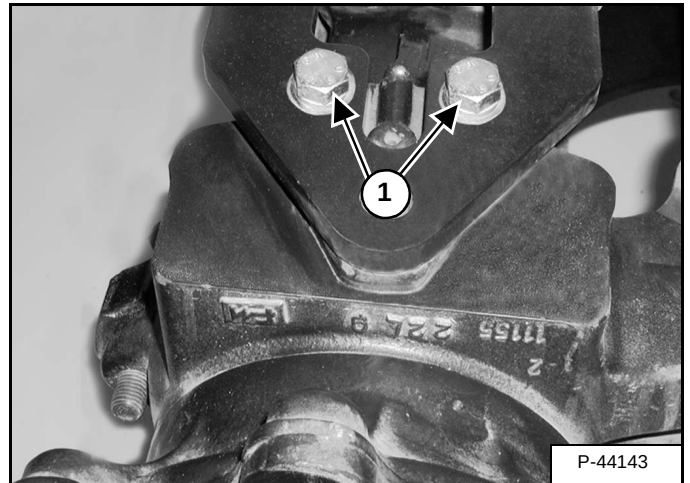


Install the front fenders using the two bolts (Item 1) [Figure 40-30-25]. Tighten to 90-100 ft.-lbs. (125-140 Nm) torque.

FRONT AXLE WITHOUT FRAME LEVELING (CONT'D)


Installation (Cont'd)

Figure 40-30-26

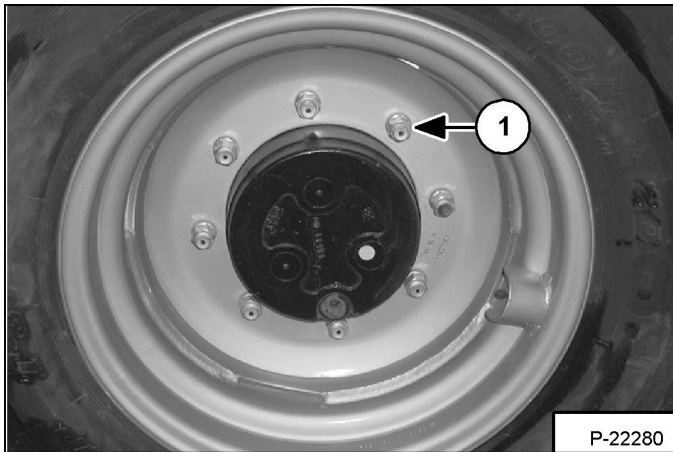

Install both front tires, tighten the nuts (Item 1) [Figure 40-30-26] to 221 ft.-lbs. (300 Nm) torque.


Figure 40-30-27

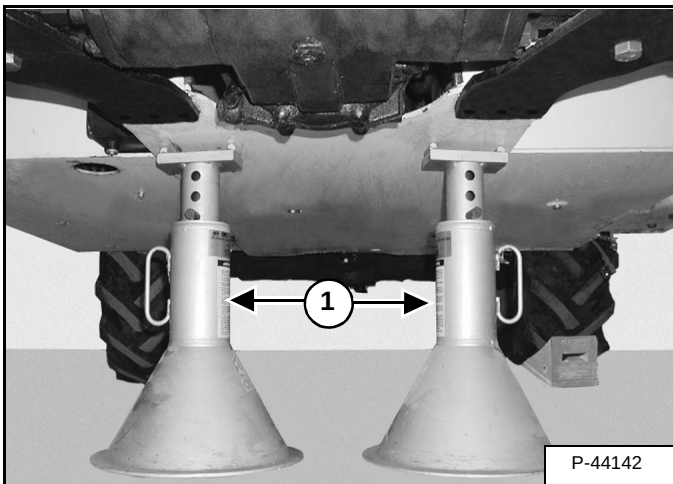

Raise the machine and remove the two jackstands (Item 1) [Figure 40-30-27].


Lower the machine.

Figure 40-30-28

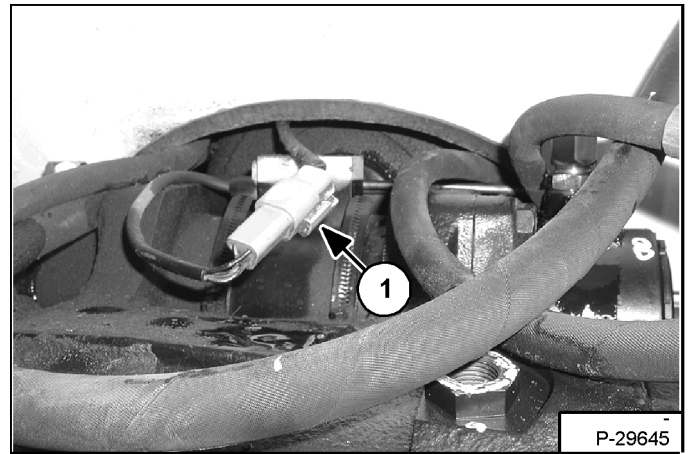

Plug the electrical connector (Item 1) [Figure 40-30-28] into the axle solenoid.

Figure 40-30-29

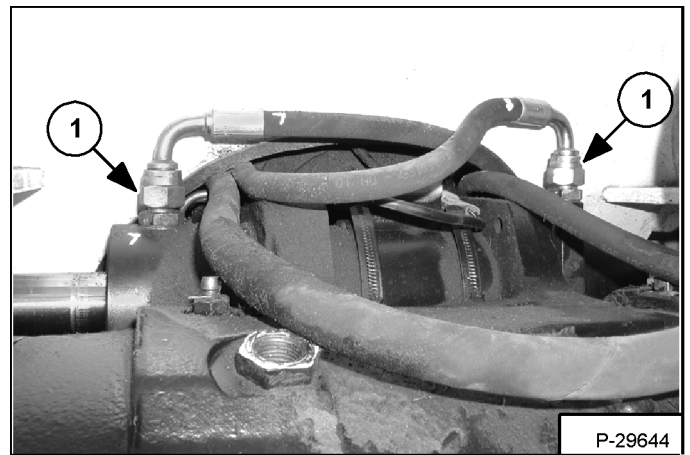


Install the two steering hoses (Item 1) [Figure 40-30-29] on the steering cylinder.

FRONT AXLE WITHOUT FRAME LEVELING (CONT'D)


Installation (Cont'd)

Figure 40-30-30

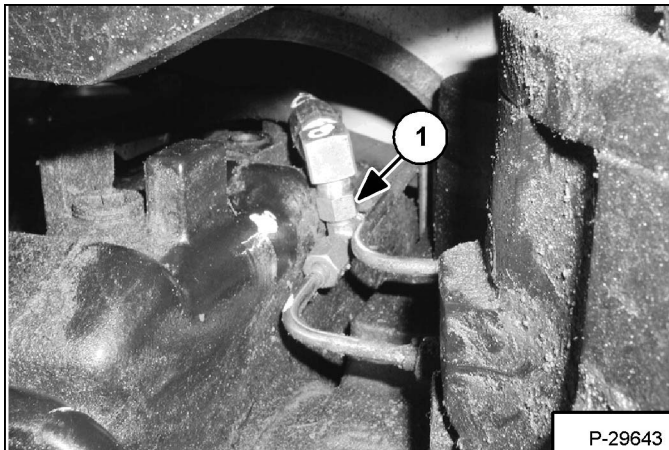


Install the brake hose (Item 1) [Figure 40-30-30] on the right side of the axle.

Figure 40-30-31

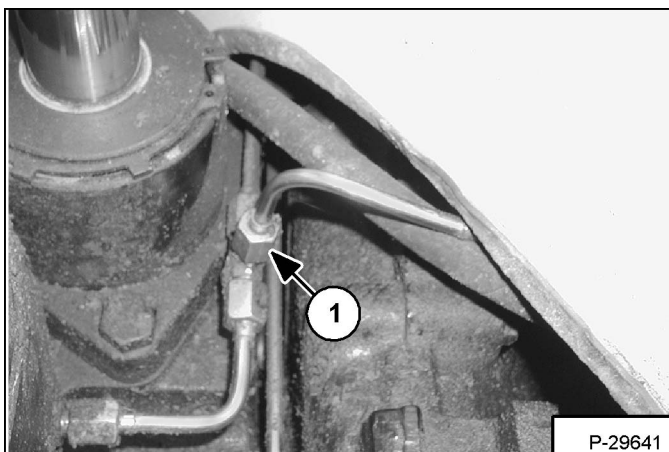


Install the brake tubeline (Item 1) [Figure 40-30-31] on the left side of the axle.

Figure 40-30-32

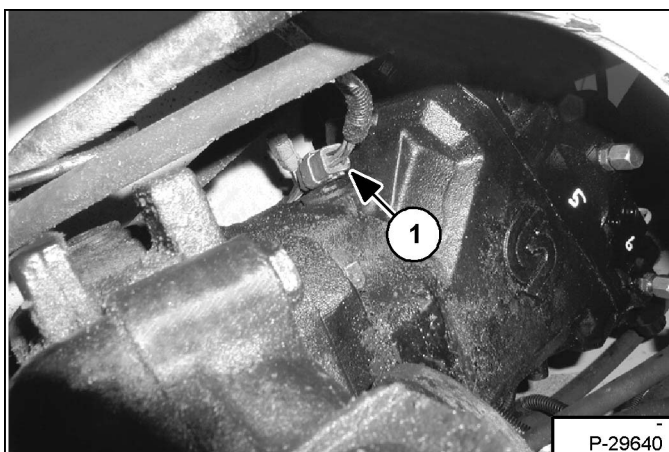

Plug in the electrical connector (Item 1) [Figure 40-30-32] on both sides of the drive motor.

Figure 40-30-33

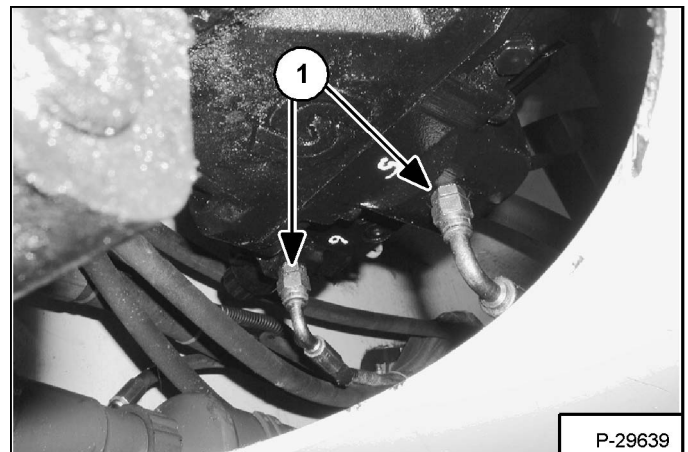


Install the two hoses (Item 1) [Figure 40-30-33] on the bottom of the drive motor.

FRONT AXLE WITHOUT FRAME LEVELING (CONT'D)


Installation (Cont'd)

Figure 40-30-34

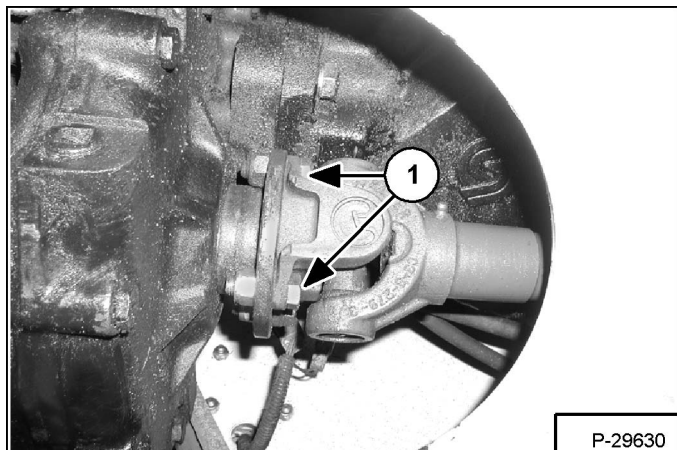


Install the driveshaft using the four mounting bolts (Item 1) [Figure 40-30-34]. Tighten the bolts to 87 ft.-lbs. (118 Nm) torque.

Figure 40-30-35

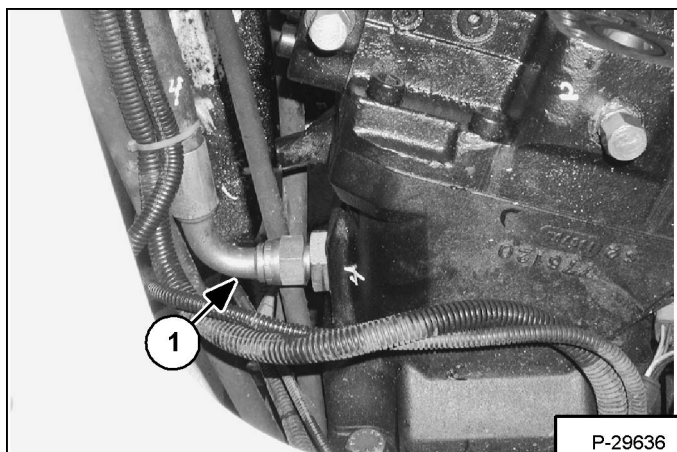


Install the hose (Item 1) [Figure 40-30-35] on the side of the drive motor.

Figure 40-30-36

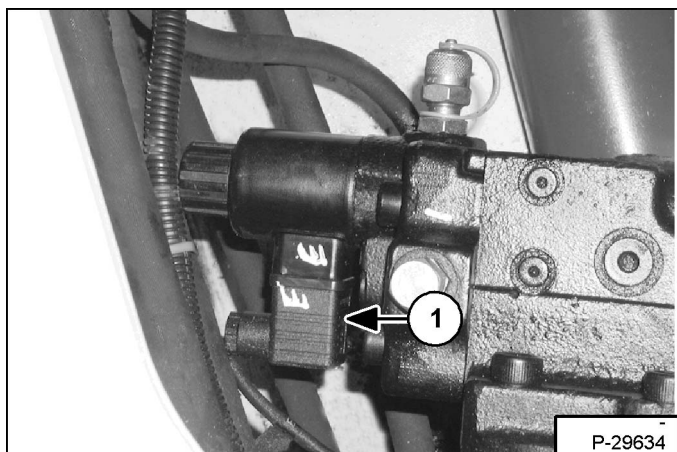

Plug in the electrical connector (Item 1) [Figure 40-30-36].

Figure 40-30-37

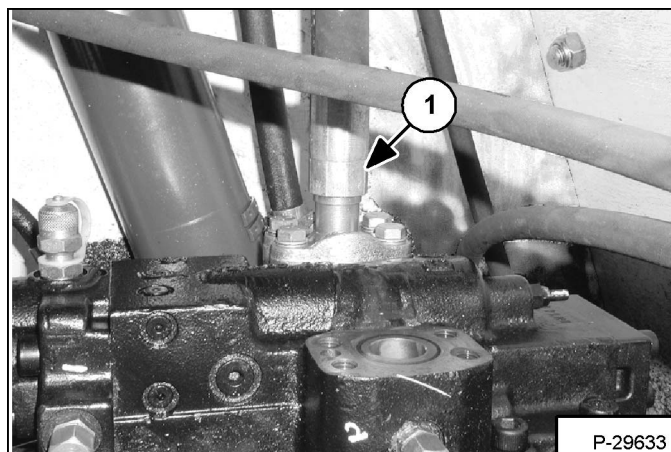


Install the lower four bolt flange hose (Item 1) [Figure 40-30-37].

FRONT AXLE WITHOUT FRAME LEVELING (CONT'D)


Installation (Cont'd)

Figure 40-30-38

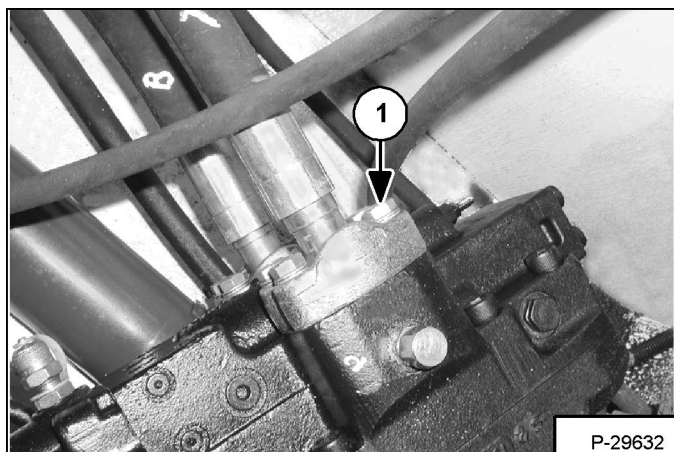


Install the upper four bolt flange hose (Item 1) [Figure 40-30-38].

Figure 40-30-39

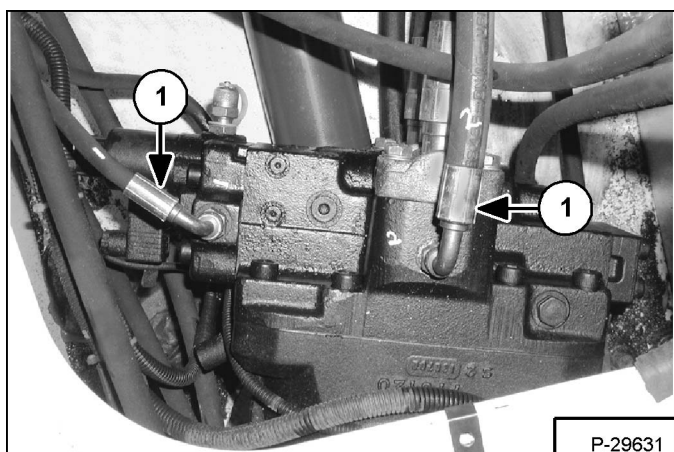

Install the two hoses (Item 1) [Figure 40-30-39].


Figure 40-30-40

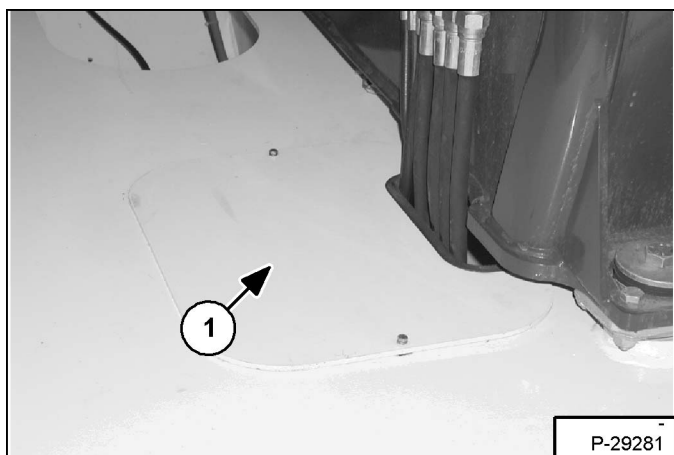

Install the access cover (Item 1) [Figure 40-30-40].

Fill the hydraulic reservoir to the correct level. (See "Checking And Adding Fluid" on page 10-100-1.)

Figure 40-30-41

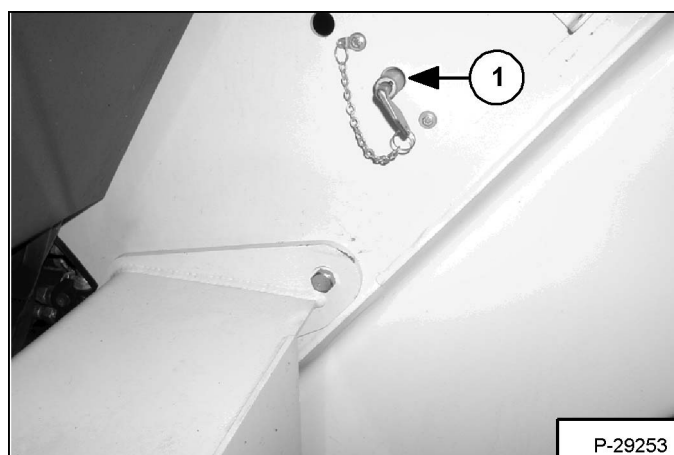


Rotate the battery disconnect switch (Item 1) [Figure 40-30-41] to the left, to restore the power supply from the battery.

FRONT AXLE WITHOUT FRAME LEVELING (CONT'D)

Installation (Cont'd)

Figure 40-30-42

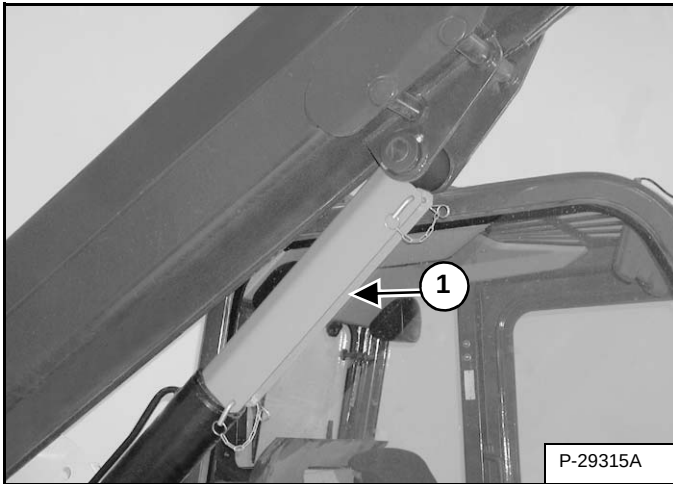


Raise the boom and remove the boom stop (Item 1) [Figure 40-30-42].

FRONT AXLE WITH FRAME LEVELING (For S/N 362911001 - 362912000)

Removal

Fully retract the telescoping boom. Raise the boom and install the boom stop. (See "Installing The Approved Boom Stop" on page 10-150-1.)

Figure 40-31-1

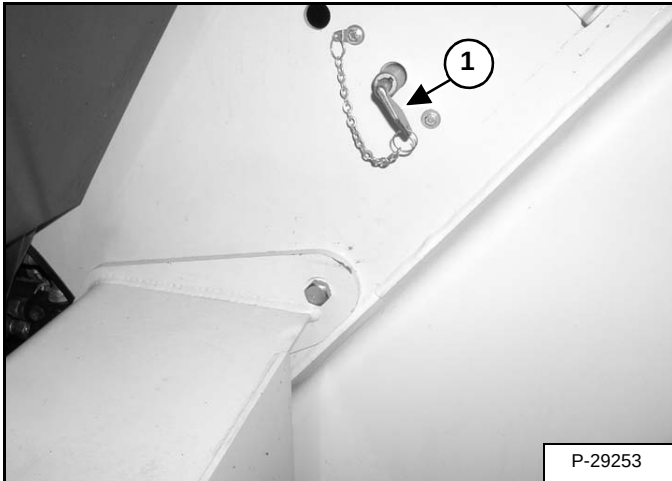

Rotate the battery disconnect switch (Item 1) [Figure 40-31-1] to the right, to disconnect the power supply from the battery.

WARNING


Hydraulic fluid escaping under pressure can have sufficient force to enter a person's body by penetrating the skin. This can cause serious injury and possible death if proper medical treatment by a physician familiar with this injury is not received immediately.

W-2145-0290

Relieve hydraulic pressure.

Drain the hydraulic reservoir. (See "Replacing Hydraulic Fluid" on page 10-100-3)

Figure 40-31-2

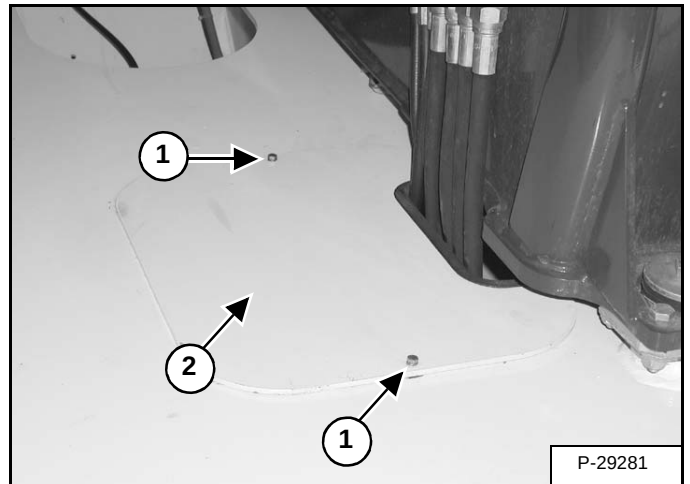


Remove the two bolts (Item 1) from the cover (Item 2) [Figure 40-31-2]. Remove the cover.

IMPORTANT

When making repairs on hydraulic system, clean the work area before disassemble and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.

I-2056-0793

Figure 40-31-3

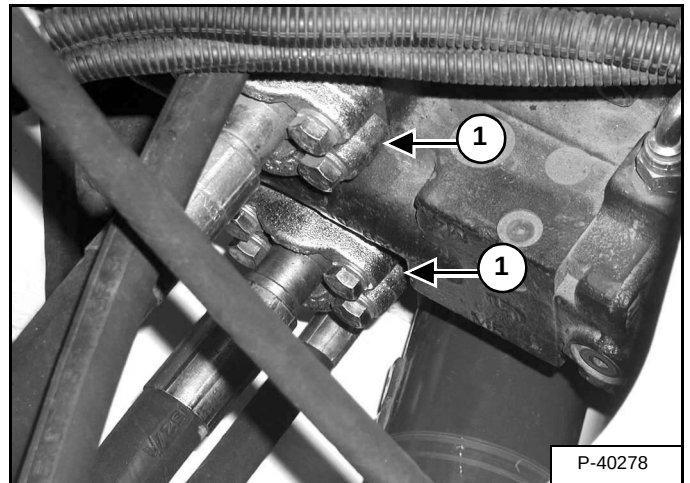


Remove the two 4 bolt flange hoses (Item 1) [Figure 40-31-3].

Mark the location of the hoses for correct installation.

FRONT AXLE WITH FRAME LEVELING (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Removal (Cont'd)

Figure 40-31-4

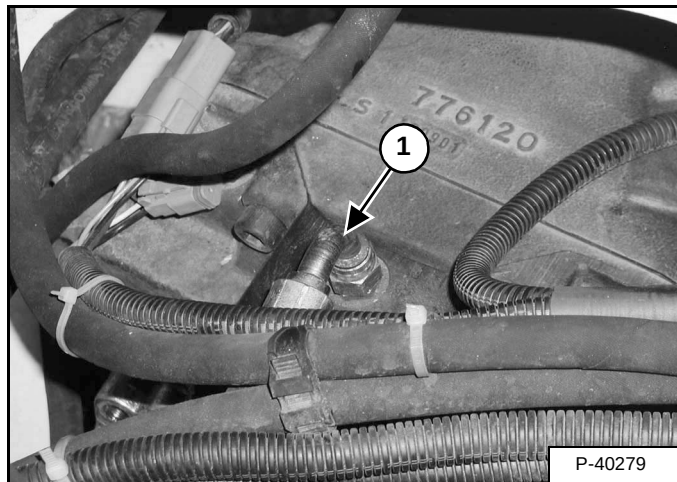


Remove the hose (Item 1) [Figure 40-31-4] from the top of the drive motor.

Figure 40-31-5

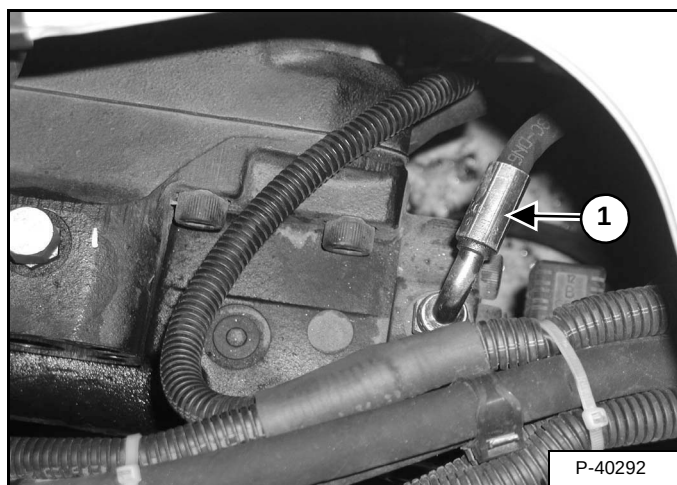


Remove the hose (Item 1) [Figure 40-31-5] from the top right side of the drive motor.

Figure 40-31-6

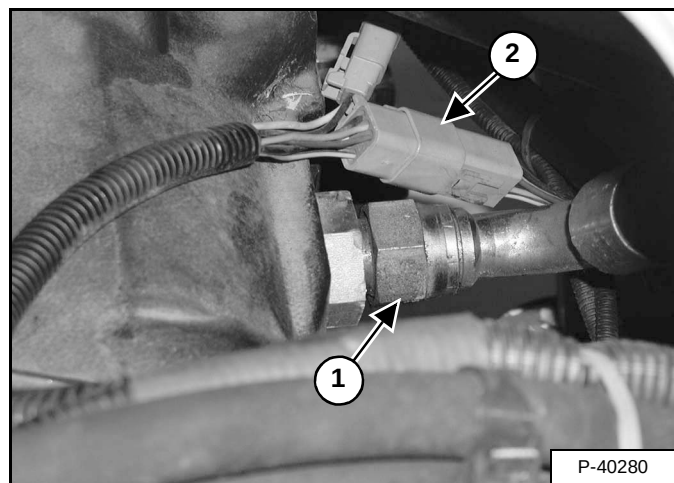

Remove the hose (Item 1) and disconnect the wire harness (Item 2) [Figure 40-31-6] from the right side of the drive motor.

Figure 40-31-7

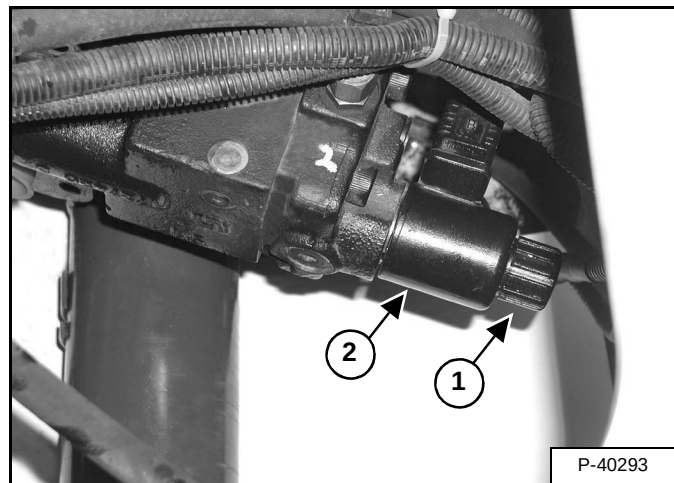


Remove the nut (Item 1) and coil (Item 2) [Figure 40-31-7] from the right side of the drive motor.

FRONT AXLE WITH FRAME LEVELING (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Removal (Cont'd)

Figure 40-31-8

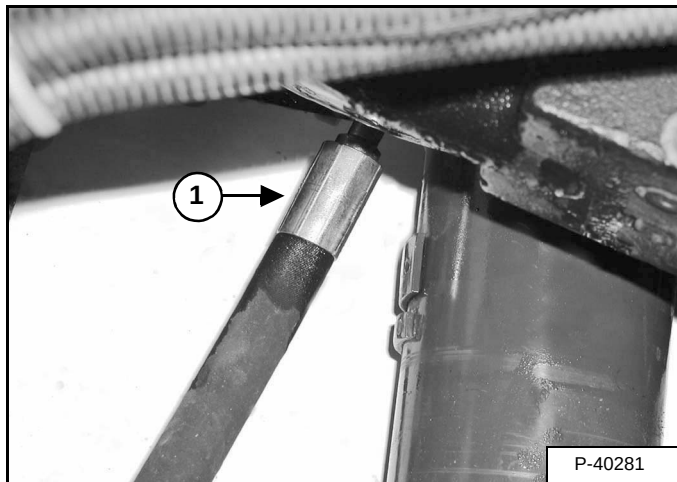


Remove the hose (Item 1) [Figure 40-31-8] from the bottom of the drive motor.

Figure 40-31-9

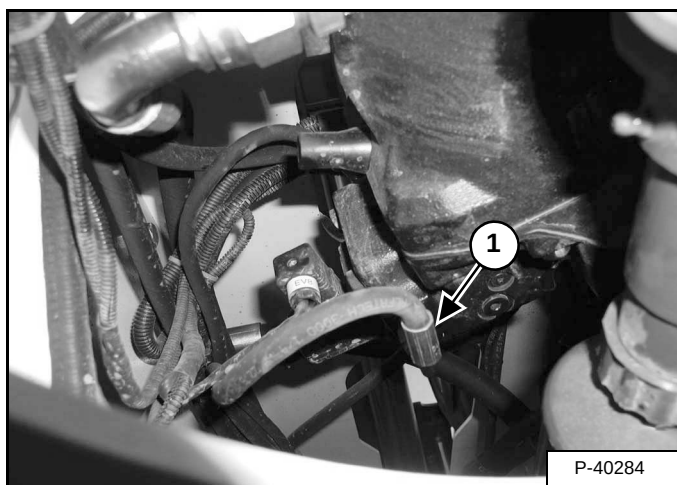


Remove the hose (Item 1) [Figure 40-31-9] from the bottom of the drive motor.

Figure 40-31-10

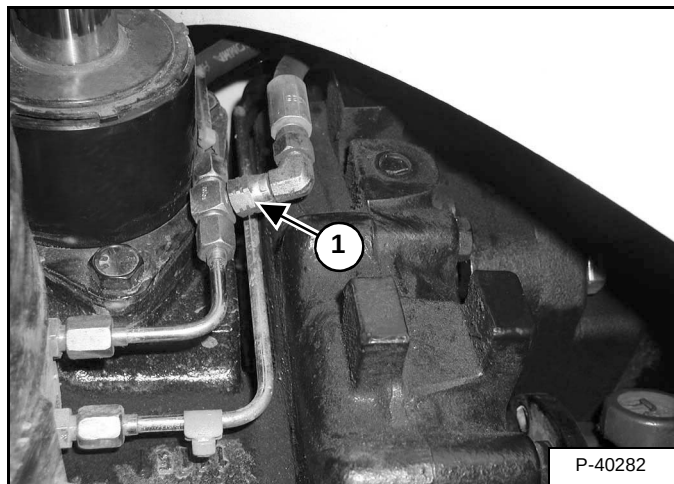

Remove the brake hose (Item 1) [Figure 40-31-10] from the left side of the axle.

Figure 40-31-11

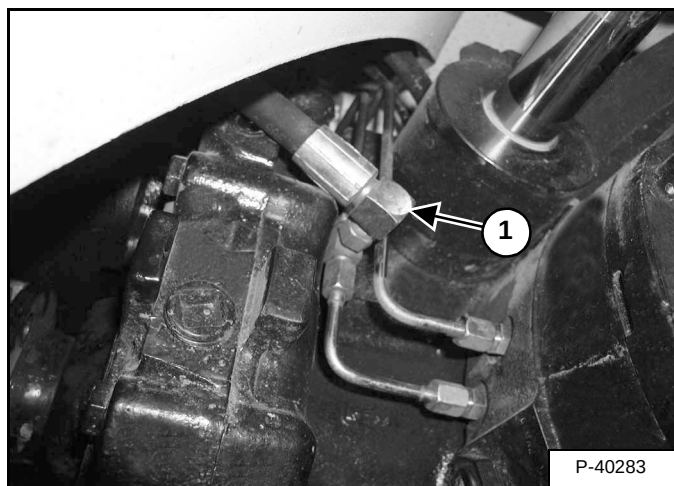


Remove the brake hose (Item 1) [Figure 40-31-11] from the right side of the axle.

FRONT AXLE WITH FRAME LEVELING (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Removal (Cont'd)


Figure 40-31-12

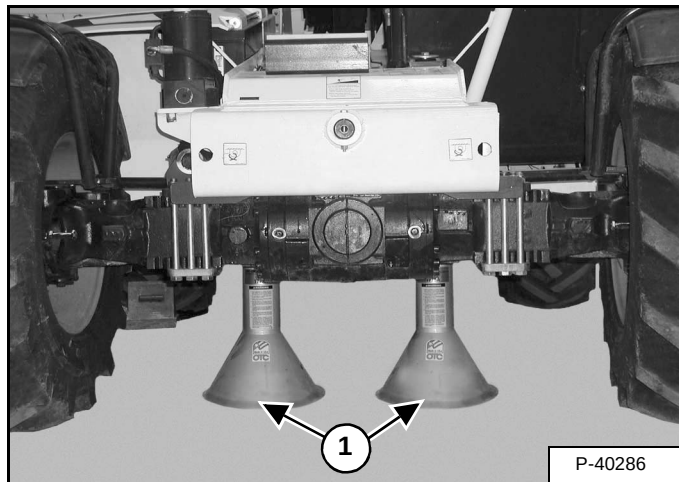

Lift the front of the machine and place jack stands (Item 1) [Figure 40-31-12] under the frame as shown.

Place a block in front and behind one of the rear wheels.


Figure 40-31-13

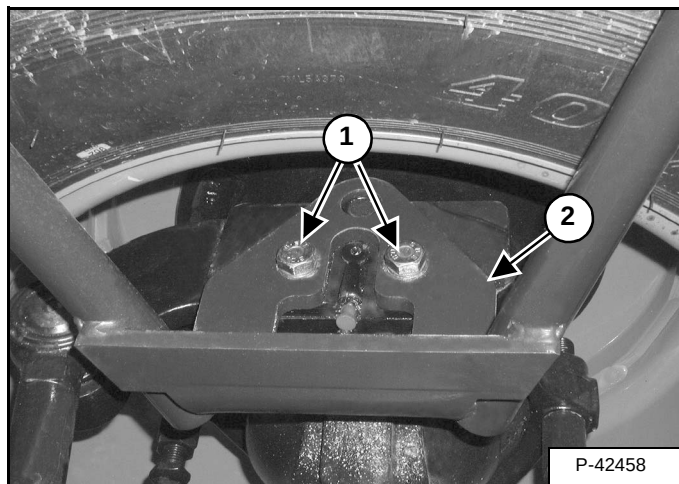

Remove the two bolts (Item 1) from both front fender mount brackets (Item 2) [Figure 40-31-13].


Remove the front fenders.

Figure 40-31-14

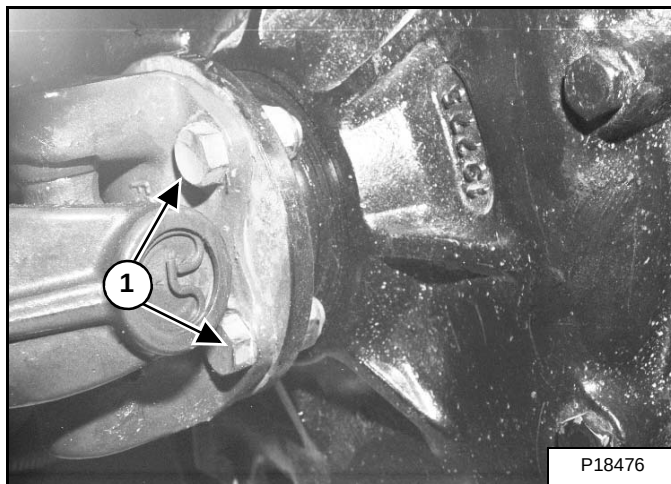

Remove the four driveshaft mounting bolts (Item 1) [Figure 40-31-14] and nuts.

Figure 40-31-15

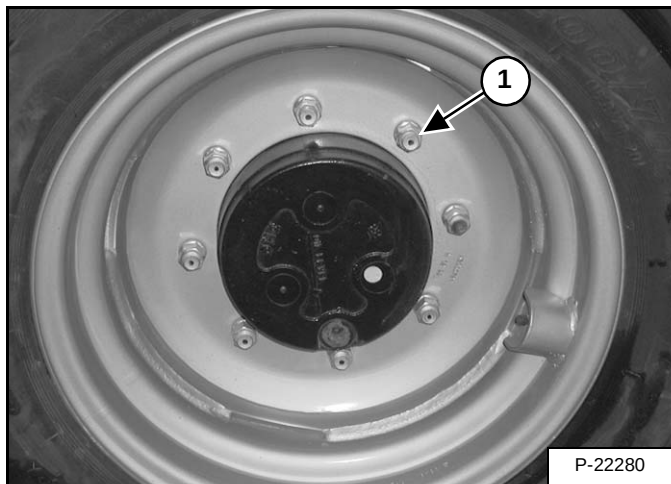


Remove the eight lug nuts and washers (Item 1) [Figure 40-31-15] from each front tire.

Remove both front tires.

FRONT AXLE WITH FRAME LEVELING (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Removal (Cont'd)

Figure 40-31-16

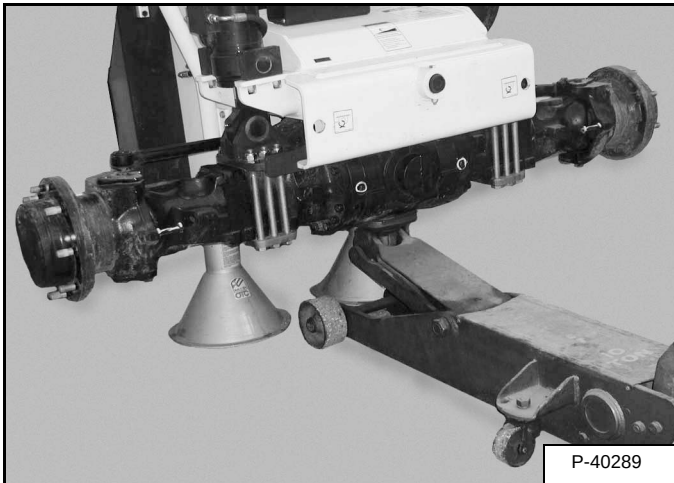


Using a jack, apply upward pressure to lift and support the front axle [Figure 40-31-16].

Figure 40-31-17

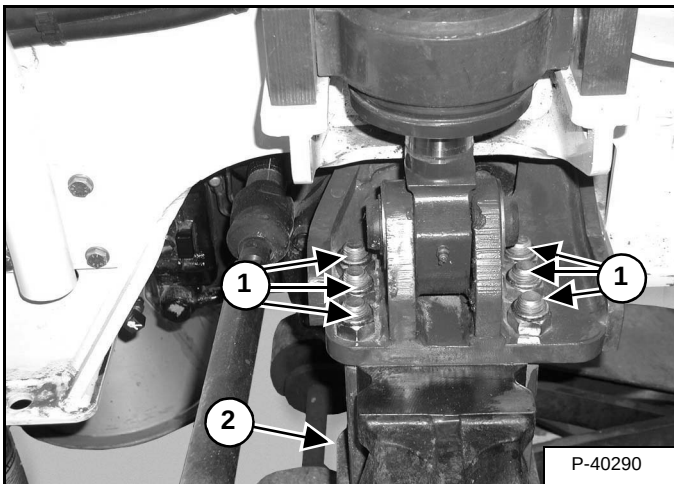


Remove the six mounting bolts (Item 1) and mounting plate (Item 2) [Figure 40-31-17] from the right side of the axle.

Figure 40-31-18

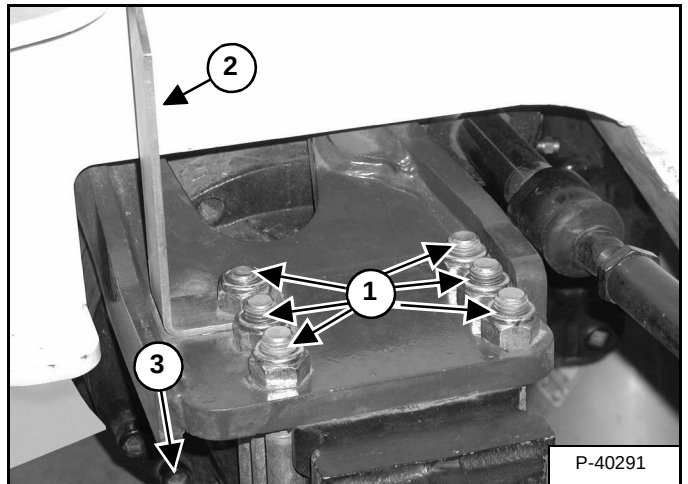

Remove the six mounting bolts (Item 1), gauge (Item 2) and mounting plate (Item 3) [Figure 40-31-18] from the left side of the axle.

Figure 40-31-19

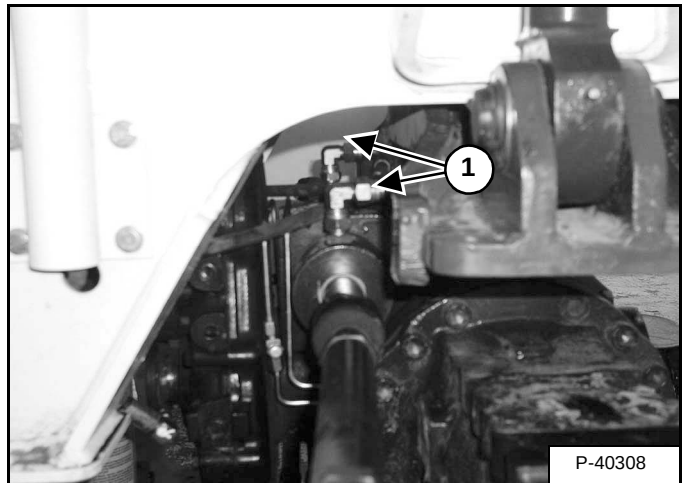


Lower the jack approximately 4 inches (100 mm) and remove the two steering cylinder hoses (Item 1) [Figure 40-31-19].

FRONT AXLE WITH FRAME LEVELING (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Removal (Cont'd)


Figure 40-31-20

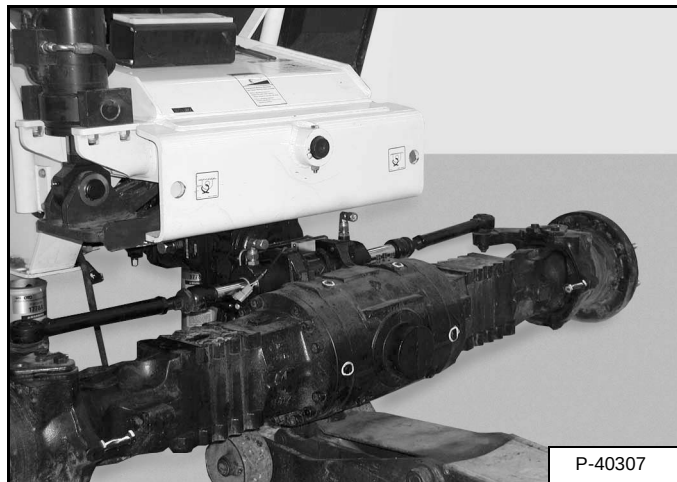

Have an assistant balance the axle on the jack and lower the jack slowly. Roll the axle out from under the frame [Figure 40-31-20].


Installation

Figure 40-31-21

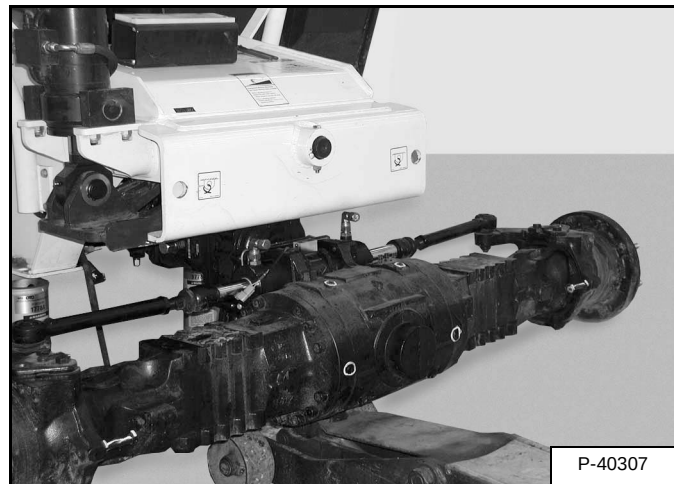

Have an assistant balance the axle on the jack and roll the axle under the frame [Figure 40-31-21].

Figure 40-31-22

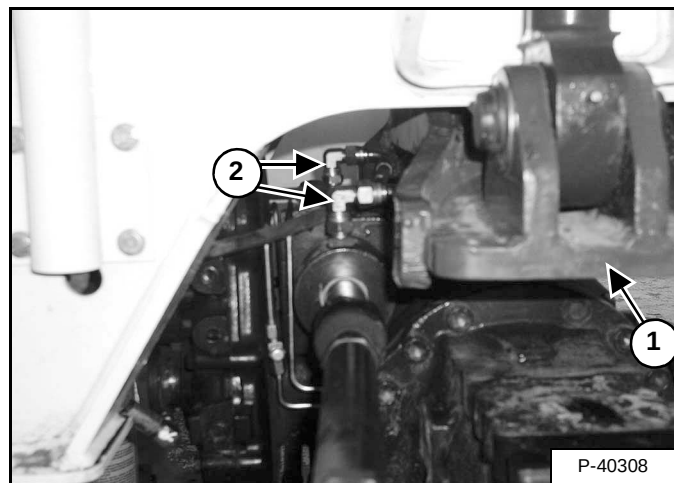


Raise the jack, lifting the axle upward to within 4 inches (102 mm) of the frame (Item 1) [Figure 40-31-22].

Install the hoses (Item 2) [Figure 40-31-22] on the steering cylinder.

FRONT AXLE WITH FRAME LEVELING (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Installation (Cont'd)


Figure 40-31-23

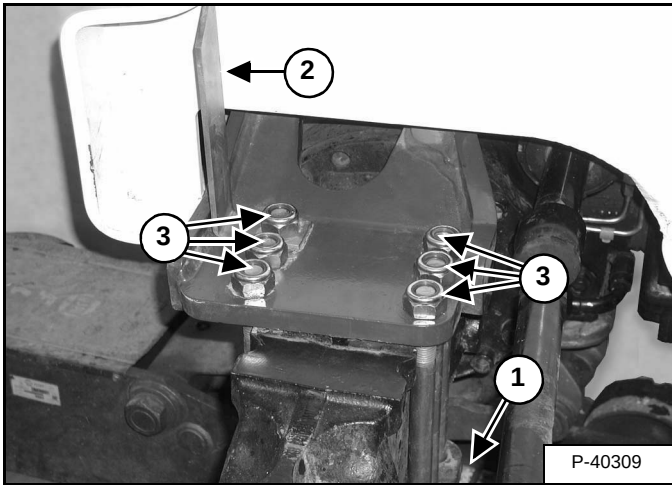

Raise the jack, lifting the axle upward into position and install the bottom plate (Item 1), gauge (Item 2) and mounting bolts and nuts (Item 3) [Figure 40-31-23] on the left side of the axle.

NOTE: Do not tighten the bolts at this time.


Figure 40-31-24

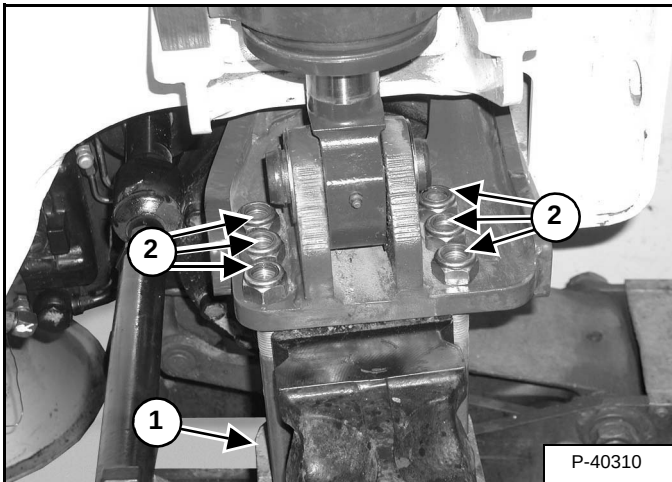

Install the bottom plate (Item 1) and mounting bolts and nuts (Item 2) [Figure 40-31-24] on the right side of the axle.


NOTE: Do not tighten the bolts at this time.

Figure 40-31-25

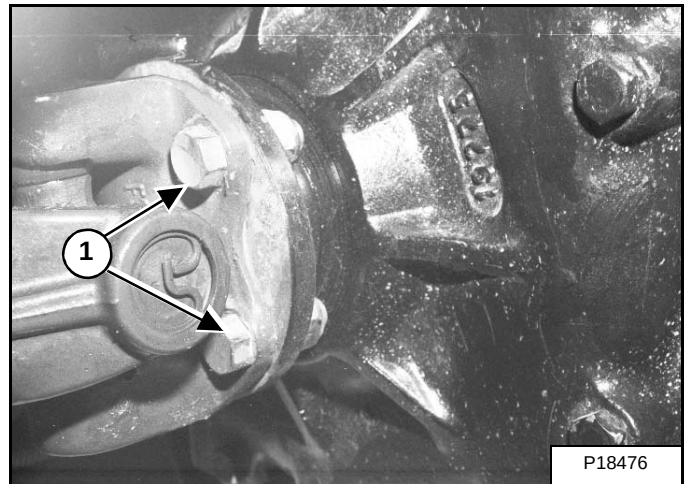

Install the driveshaft using the four mounting bolts (Item 1) [Figure 40-31-25]. Tighten the bolts to 87 ft.-lbs. (118 Nm) torque.

Figure 40-31-26

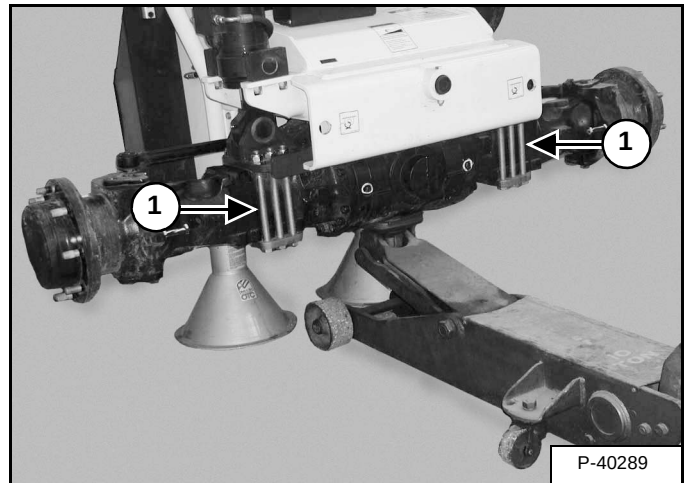


Tighten the axle mounting bolts (Item 1) [Figure 40-31-26] on both sides of the axle to 275-300 ft.-lbs. (370-410 Nm) torque.

FRONT AXLE WITH FRAME LEVELING (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Installation (Cont'd)

Figure 40-31-27

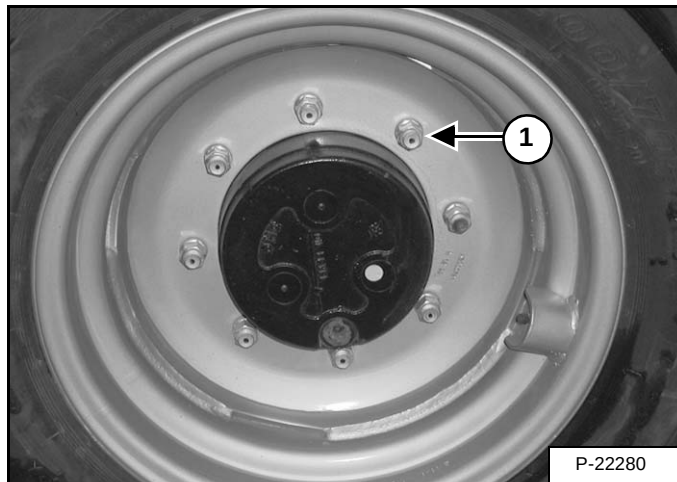

Install both front tires, tighten the nuts (Item 1) [Figure 40-31-27] to 221 ft.-lbs. (300 Nm) torque.


Figure 40-31-28

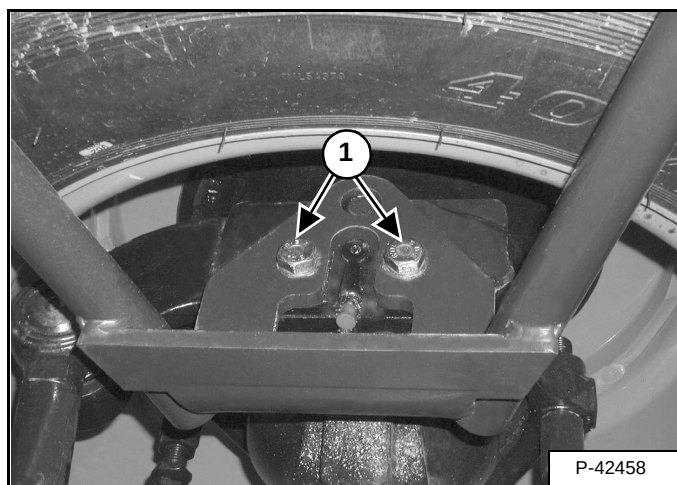

Install the front fenders using the two bolts (Item 1) [Figure 40-31-28].

Tighten the bolts to 90-100 ft.-lbs. (125-140 Nm) torque.


Figure 40-31-29

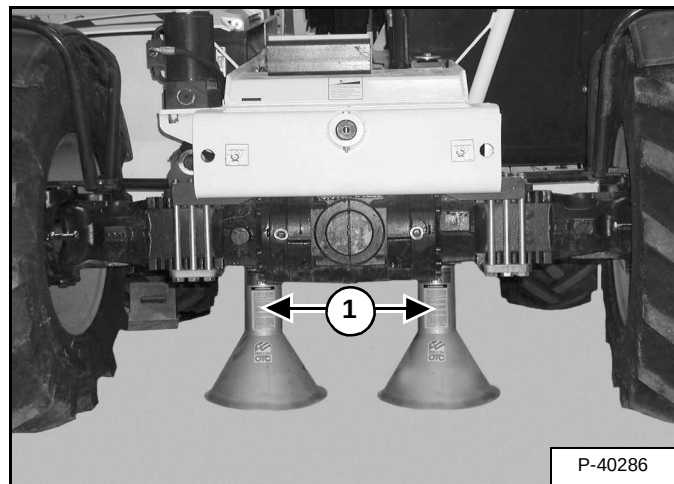

Raise the machine and remove the two jack stands (Item 1) [Figure 40-31-29].

Lower the machine.

Figure 40-31-30

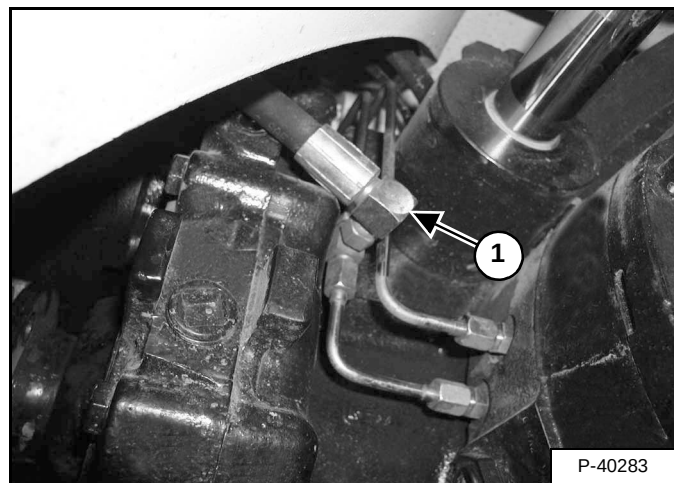


Install the brake hose (Item 1) [Figure 40-31-30] on the right side of the axle.

FRONT AXLE WITH FRAME LEVELING (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Installation (Cont'd)

Figure 40-31-31

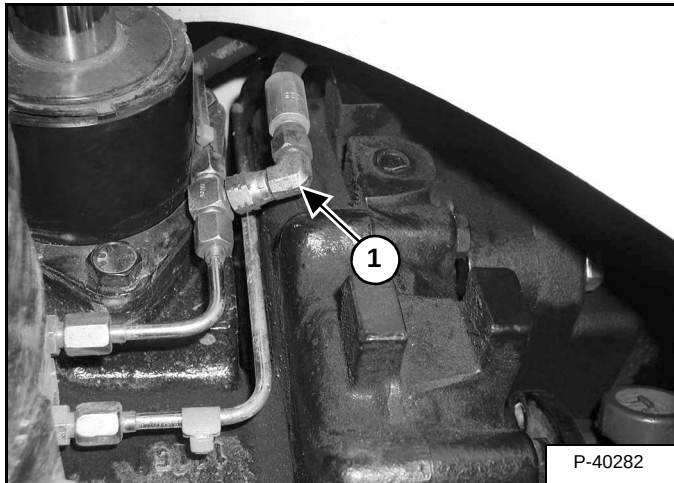

Install the brake hose (Item 1) [Figure 40-31-31] on the left side of the axle.


Figure 40-31-32

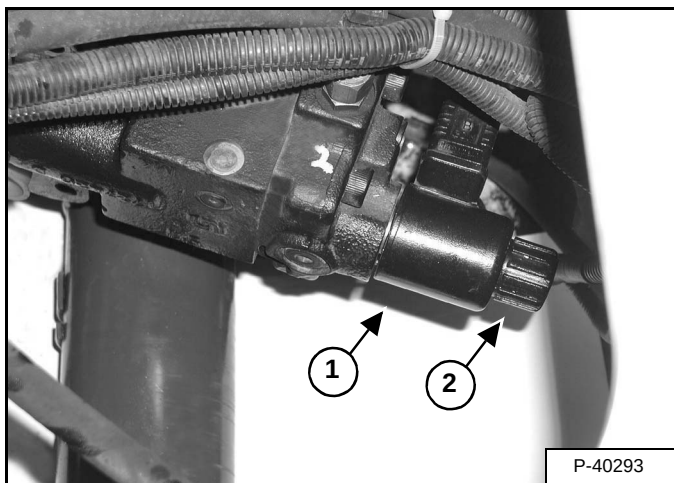

Install the coil (Item 1) and nut (Item 2) [Figure 40-31-32]. Hand tighten the nut.


NOTE: Do not overtighten the nut.

Figure 40-31-33

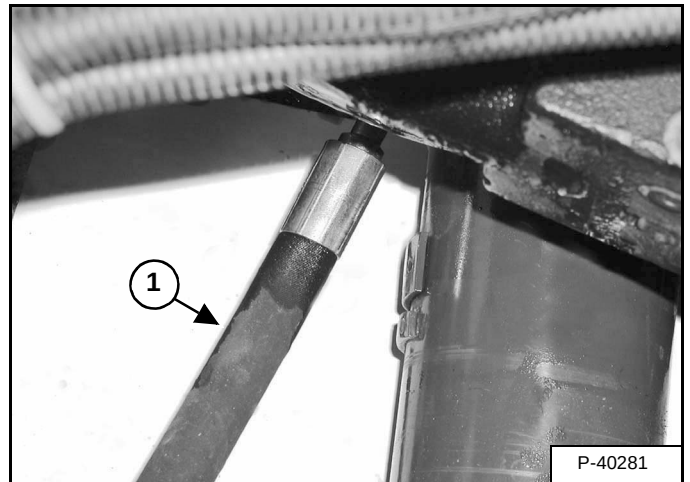

Install the hose (Item 1) [Figure 40-31-33] on the bottom of the drive motor.

Figure 40-31-34

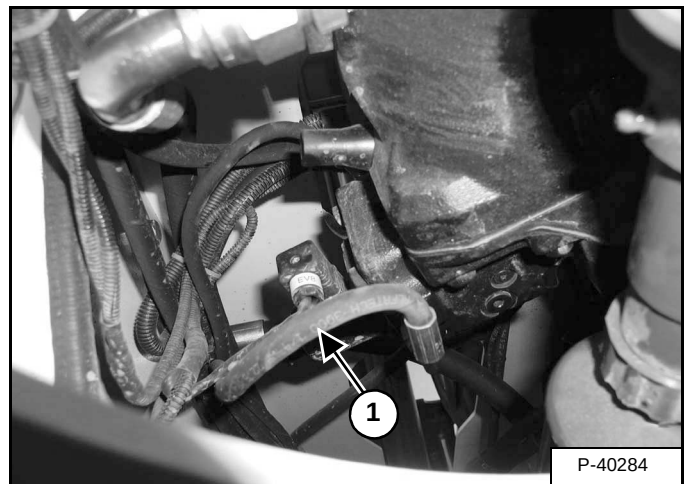


Install the hose (Item 1) [Figure 40-31-34] on the bottom of the drive motor.

FRONT AXLE WITH FRAME LEVELING (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Installation (Cont'd)

Figure 40-31-35

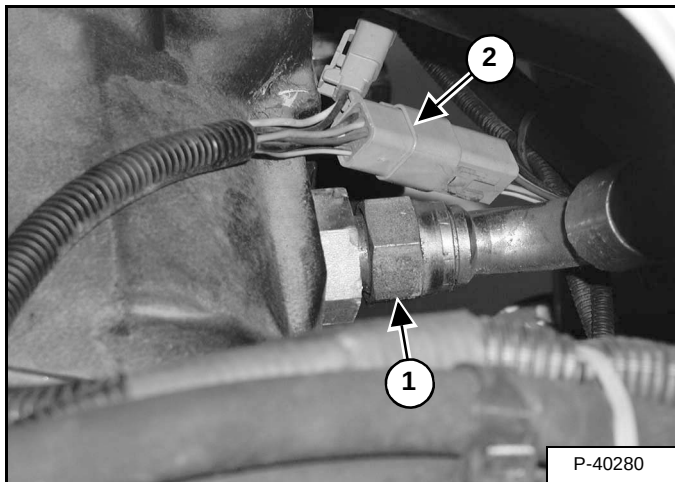


Install the hose (Item 1) and connect the wire harness (Item 2) [Figure 40-31-35] on the right side of the drive motor.

Figure 40-31-36

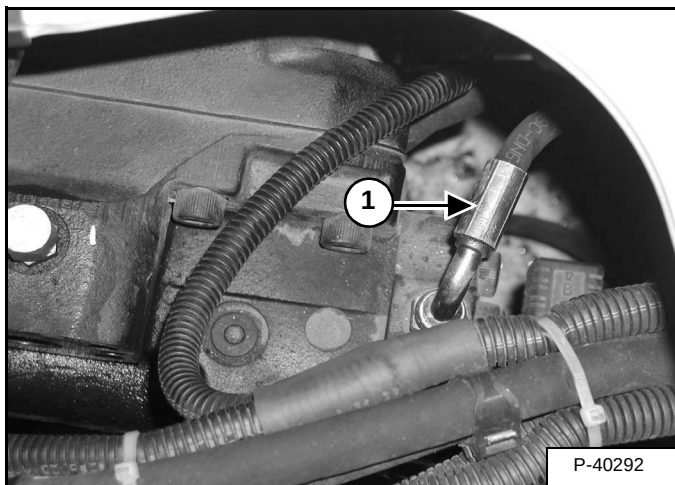


Install the hose (Item 1) [Figure 40-31-36] on the top right side of the drive motor.

Figure 40-31-37

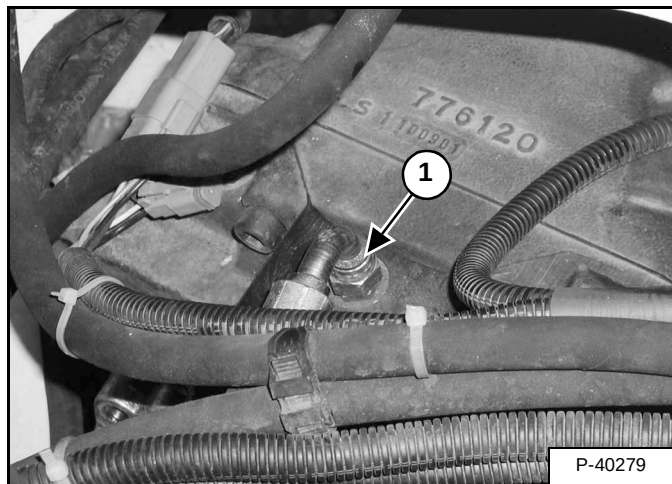

Install the hose (Item 1) [Figure 40-31-37] on the top of the drive motor.

Figure 40-31-38

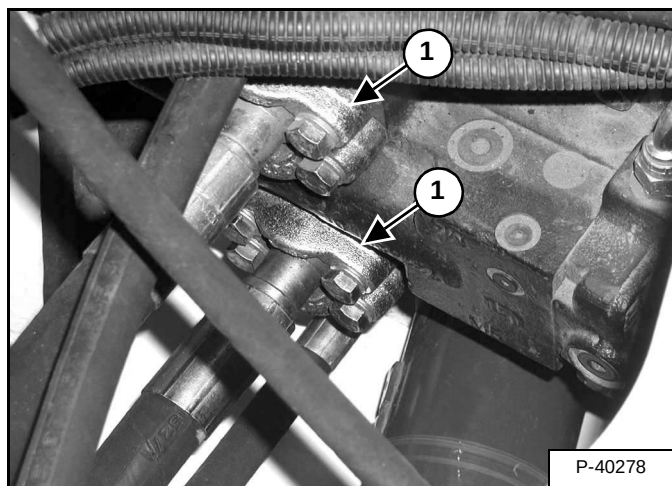


Install the two 4-bolt flange hoses (Item 1) [Figure 40-31-38].

**FRONT AXLE WITH FRAME LEVELING (For S/N
362811001 - 362812000, S/N 362911001 - 362912000)
(CONT'D)**

Installation (Cont'd)


Figure 40-31-39

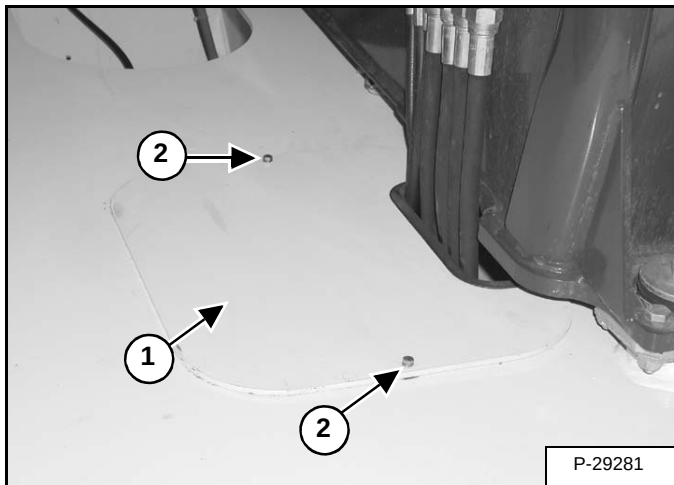

Install the cover (Item 1) with two bolts (Item 2) **[Figure 40-31-39]**.

Fill the hydraulic reservoir. (See "Replacing Hydraulic Fluid" on page 10-100-3.)

Figure 40-31-40

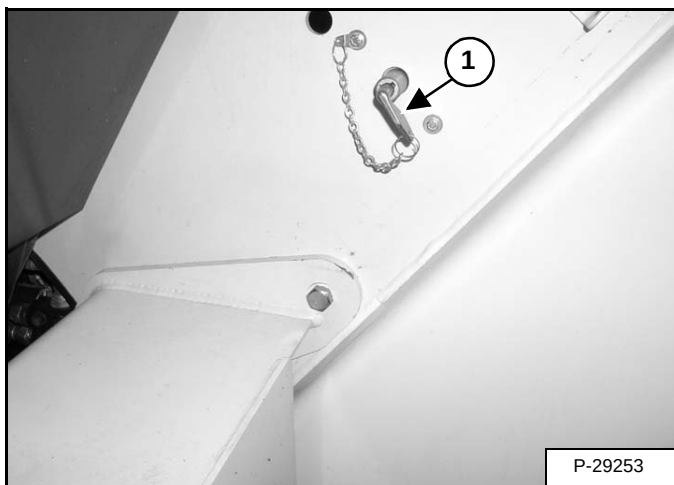

Rotate the battery switch (Item 1) **[Figure 40-31-40]** to the left to reconnect the power supply from the battery.




Bobcat®

AXLE PIVOT FRAME (Only For S/N 362811001 - 362812000, S/N 362911001 - 362912000)

Removal And Installation


Remove the front axle. (See "Removal" on page 40-31-1 for machine with Frame Leveling) or (See "Removal" on page 40-30-1 for machine without Frame Leveling)

Figure 40-32-1

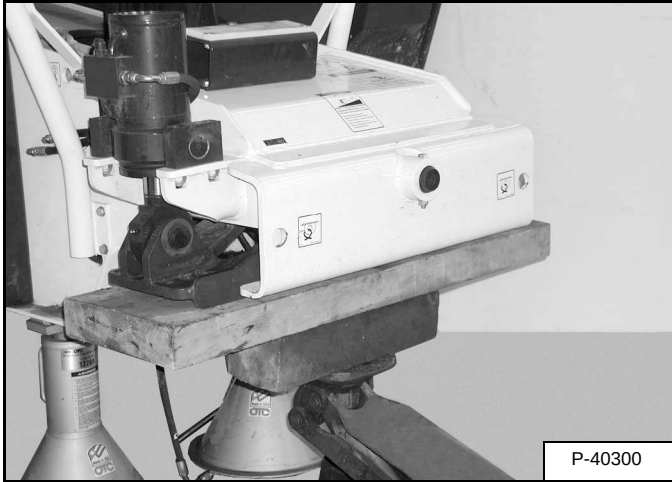

Support the pivot with blocks and a jack [Figure 40-32-1].


Figure 40-32-2

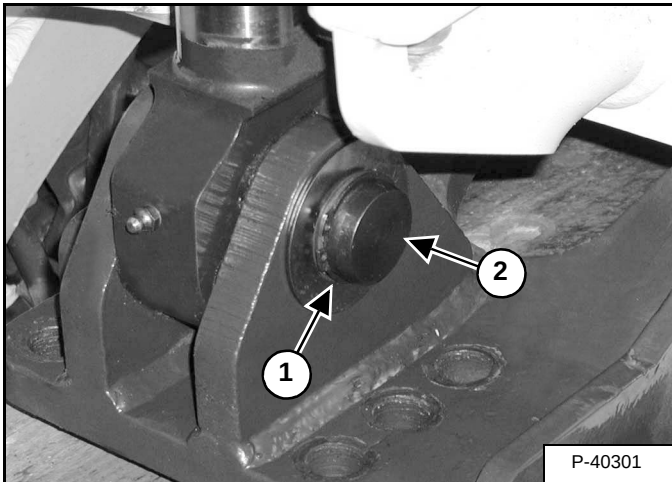

Remove the snap ring (Item 1) and washer from the rod end pivot pin (Item 2) [Figure 40-32-2] of the leveling cylinder.


Remove the pivot pin.

Figure 40-32-3

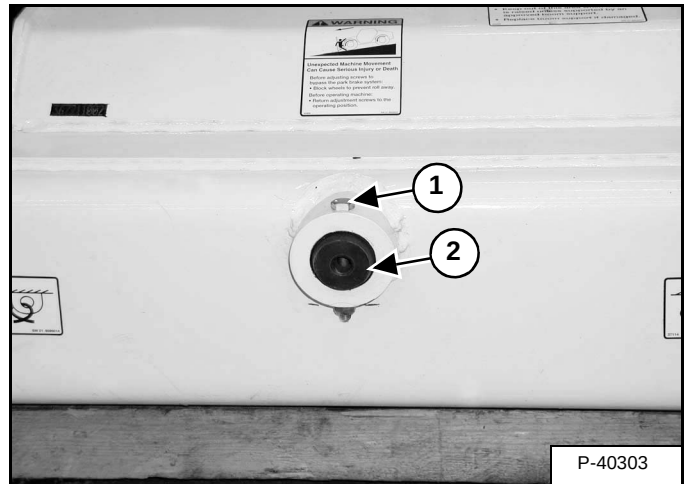

Remove the bolt (Item 1) and nut from the pivot pin (Item 2) [Figure 40-32-3]. Remove the pivot pin.

Figure 40-32-4

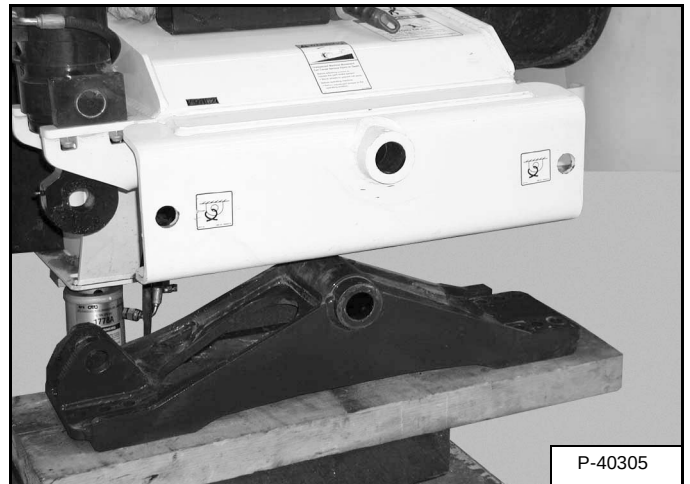


Slowly lower the jack and remove the pivot frame out from under the frame [Figure 40-32-4].

AXLE PIVOT FRAME (CONT'D)

Bushing Removal And Installation

Figure 40-32-5

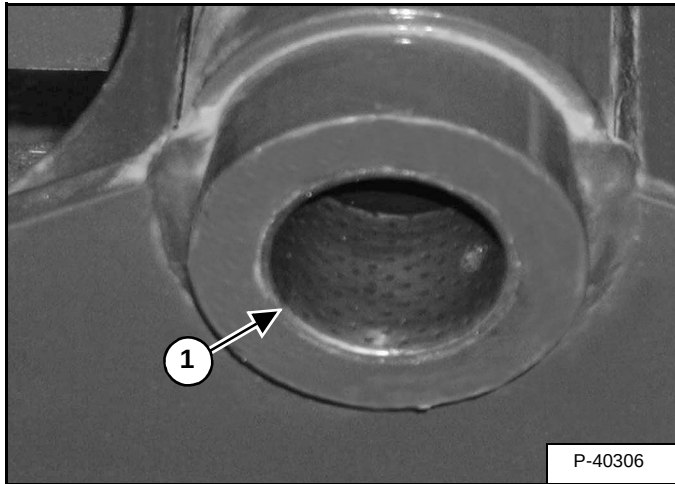

Remove the axle pivot frame. (See Page 40-32-1.)

Remove the bushings (Item 1) **[Figure 40-32-5]**. (Front And Rear)


Installation: Install the bushings flush with the outside of the frame.

FRONT AXLE (For S/N 362812001 and Above, S/N 362912001 and Above)

Removal

Fully retract the telescoping boom. Raise the boom and install the boom stop. (See "Installing The Approved Boom Stop" on page 10-150-1)

Figure 40-33-1

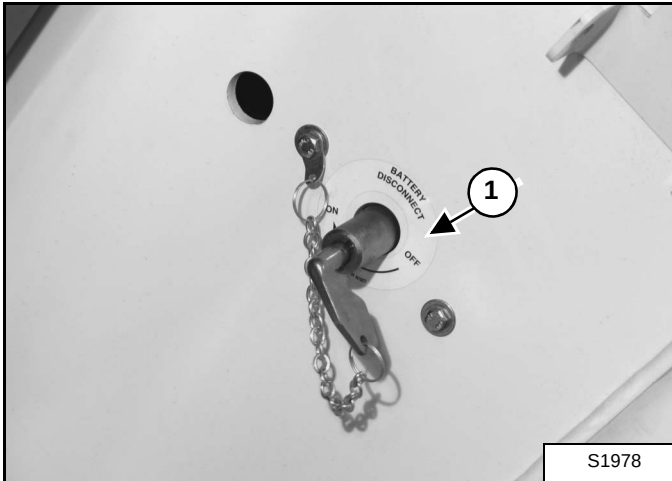

Rotate the battery disconnect switch (Item 1) [Figure 40-33-1] to the right, to disconnect the power supply from the battery.

WARNING


Hydraulic fluid escaping under pressure can have sufficient force to enter a person's body by penetrating the skin. This can cause serious injury and possible death if proper medical treatment by a physician familiar with this injury is not received immediately.

W-2145-0290

Relieve hydraulic pressure.

Drain the hydraulic reservoir. (See "Replacing Hydraulic Fluid" on page 10-100-3)

Figure 40-33-2

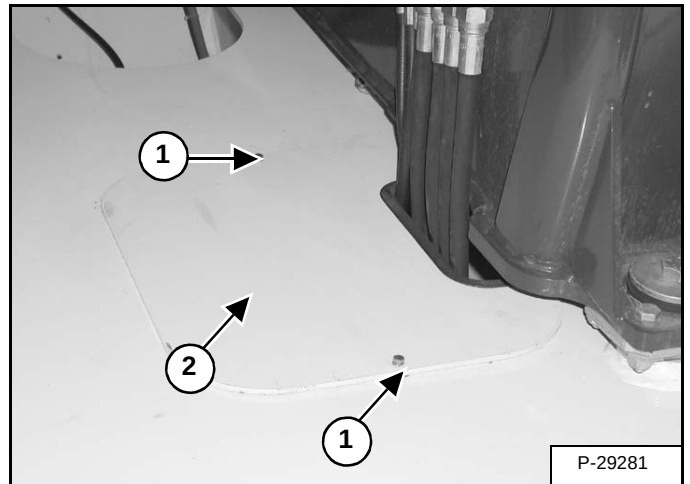

Remove the two bolts (Item 1) from the cover (Item 2) [Figure 40-33-2]. Remove the cover.

IMPORTANT

When making repairs on hydraulic system, clean the work area before disassemble and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.

-2056-0793

NOTE: On machines without frame leveling, the frame leveling cylinder has been replaced by a rigid connection (Item 1) [Figure 40-33-3]. Follow the same procedure.


Figure 40-33-3



FRONT AXLE (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Removal (Cont'd)

Figure 40-33-4

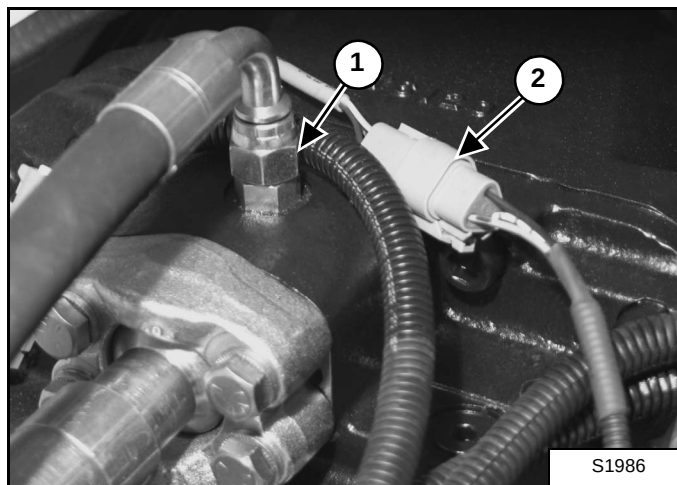


Remove the hose (Item 1) and disconnect the wire harness (Item 2) [Figure 40-33-4] from the top of the drive motor.

Figure 40-33-5

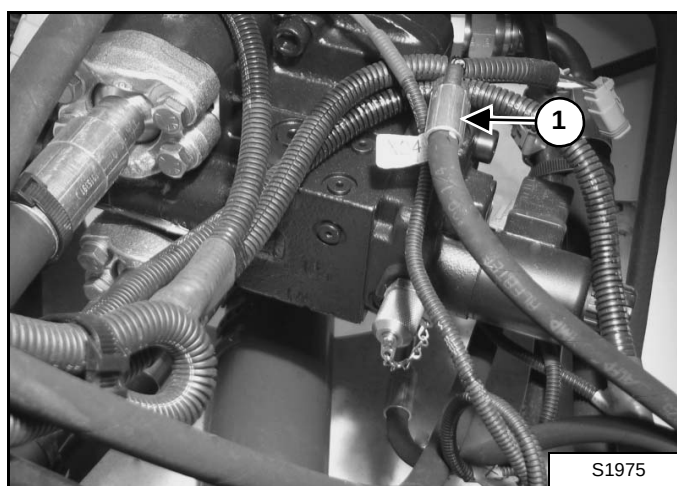


Remove the hose (Item 1) [Figure 40-33-5] from the top right side of the drive motor.

Figure 40-33-6

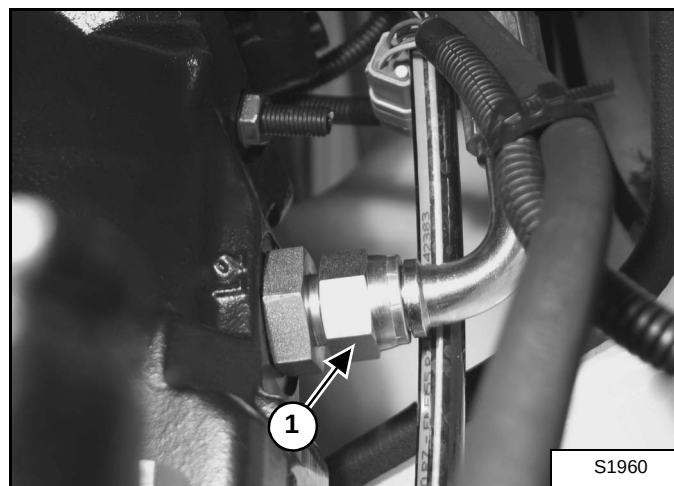

Remove the hose (Item 1) [Figure 40-33-6] from the right side of the drive motor.

Figure 40-33-7

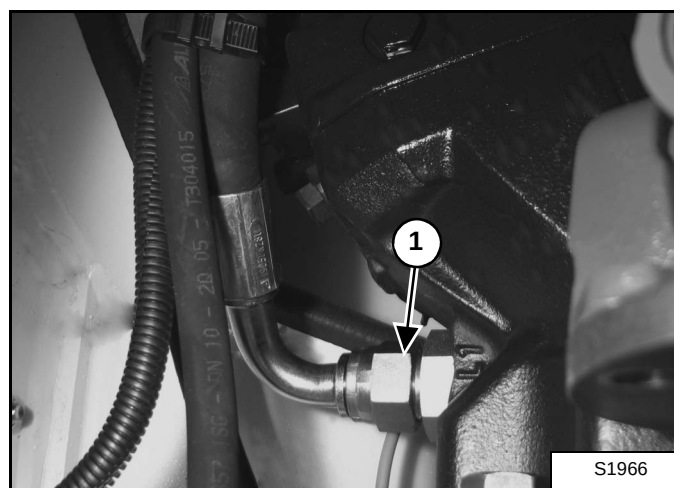


Remove the hose (Item 1) [Figure 40-33-7] from the left side of the drive motor.

FRONT AXLE (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Removal (Cont'd)

Figure 40-33-8

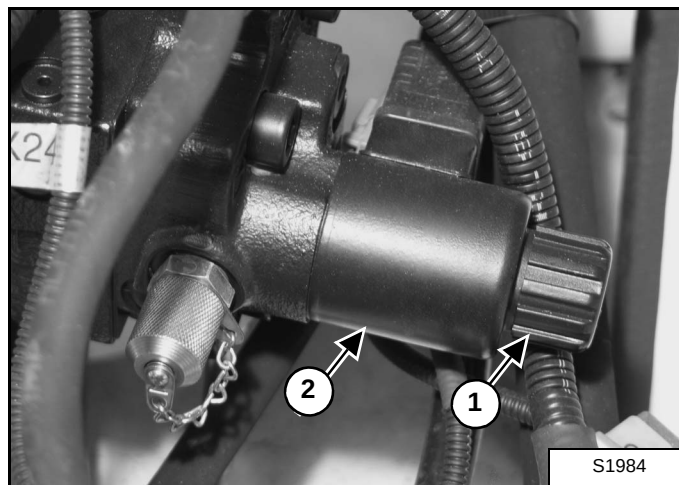


Remove the nut (Item 1) and coil (Item 2) [Figure 40-33-8] from the right side of the drive motor.

Figure 40-33-9

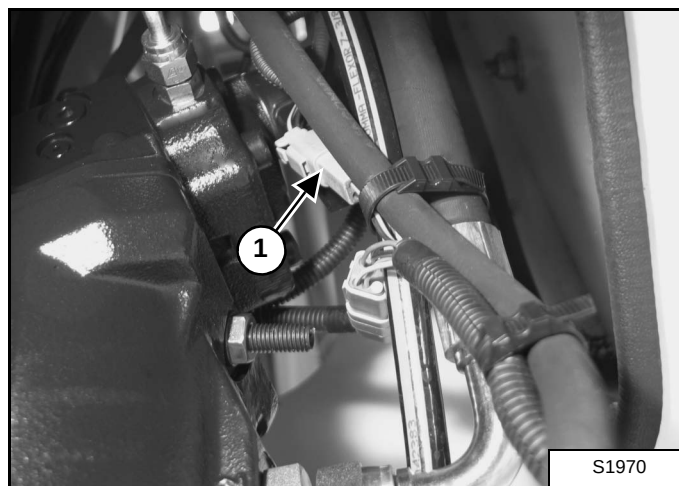


Disconnect the wire harness (Item 1) [Figure 40-33-9] coming from the headlights on the right side.

Figure 40-33-10

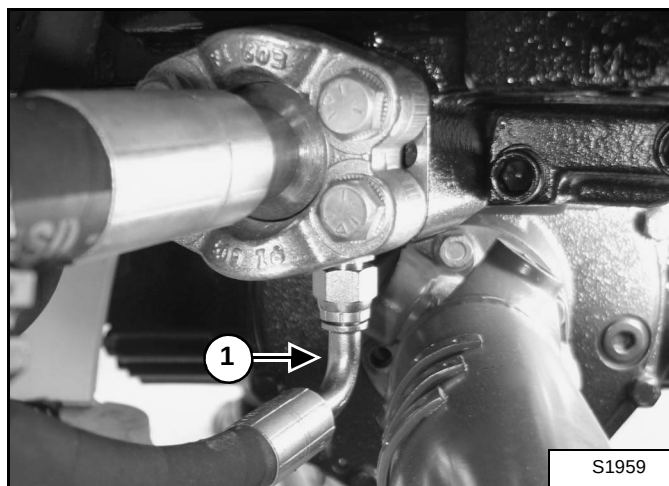

Remove the hose (Item 1) [Figure 40-33-10] from the bottom of the drive motor.

Figure 40-33-11

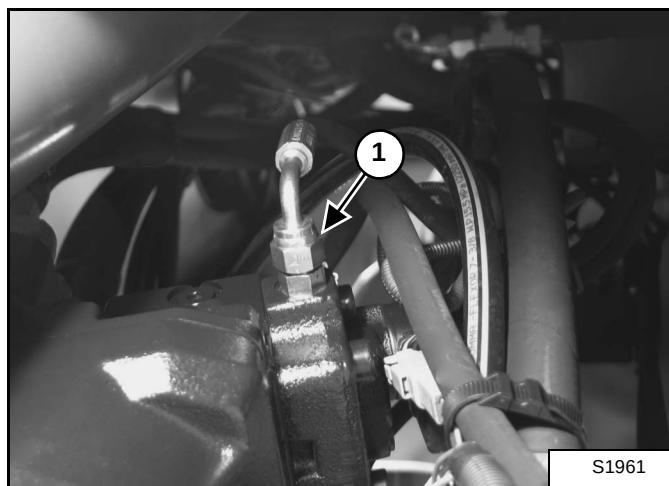


Remove the hose (Item 1) [Figure 40-33-11] from the bottom right side of the drive motor.

FRONT AXLE (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Removal (Cont'd)


Figure 40-33-12

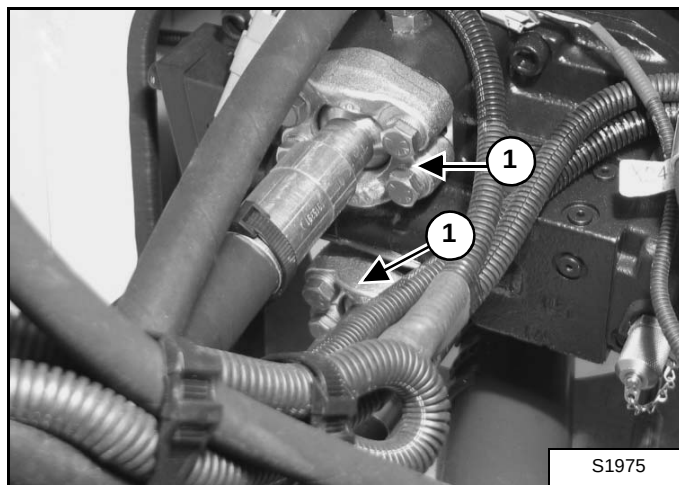

Remove the two four bolt flange hoses (Item 1) [Figure 40-33-12].


Mark the location of the hoses for correct installation.

Figure 40-33-13

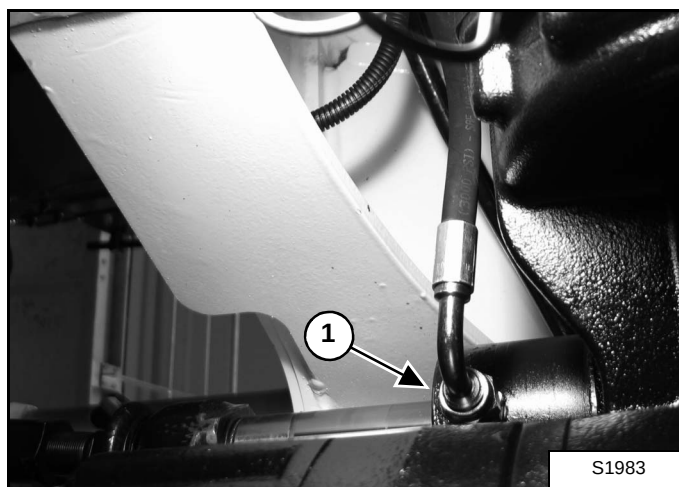


Remove the hose (Item 1) [Figure 40-33-13] on the left side of the steering cylinder.

Figure 40-33-14

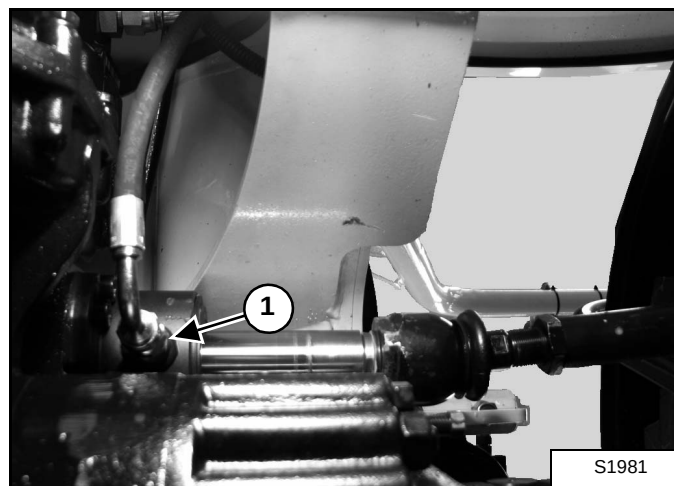

Remove the hose (Item 1) [Figure 40-33-14] on the right side of the steering cylinder.

Figure 40-33-15

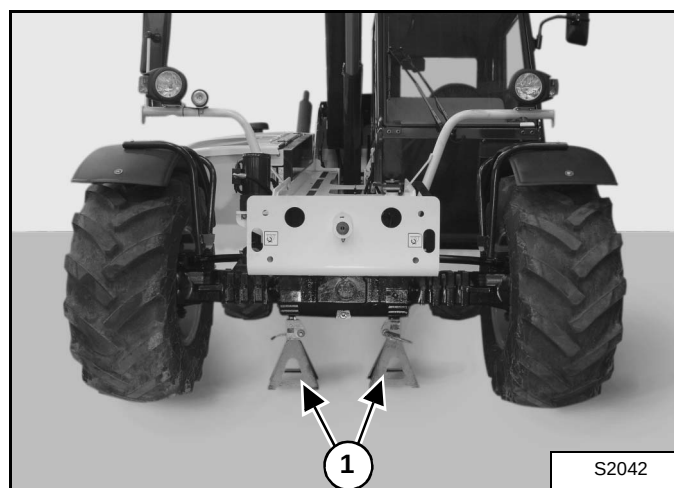


Lift the front of the machine and place jack stands (Item 1) [Figure 40-33-15] under the frame as shown.

Place a block in front and behind one of the rear wheels.

FRONT AXLE (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Removal (Cont'd)

Figure 40-33-16

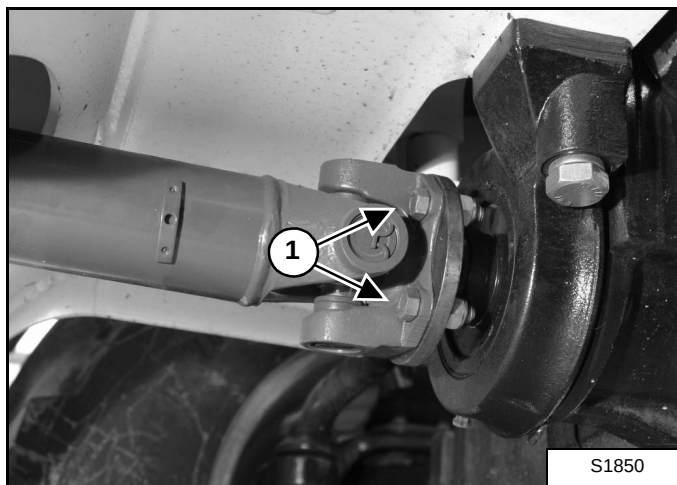

Remove the four driveshaft mounting bolts (Item 1) [Figure 40-33-16] and nuts.


Figure 40-33-17

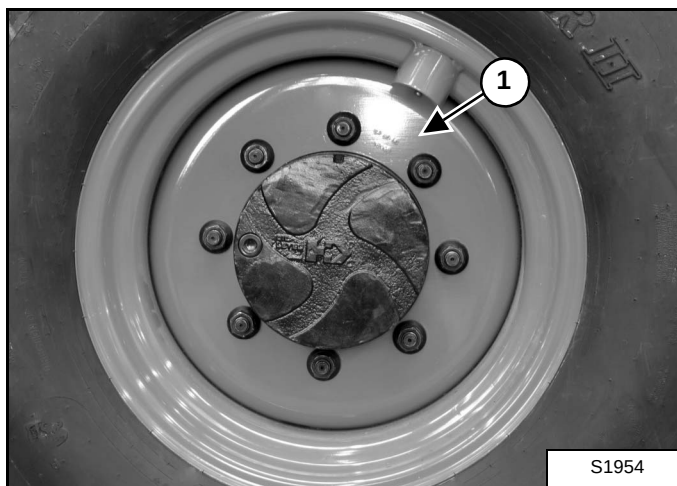

Remove the eight lug nuts and washers (Item 1) [Figure 40-33-17] from each front tire.

Remove both front tires.


Figure 40-33-18

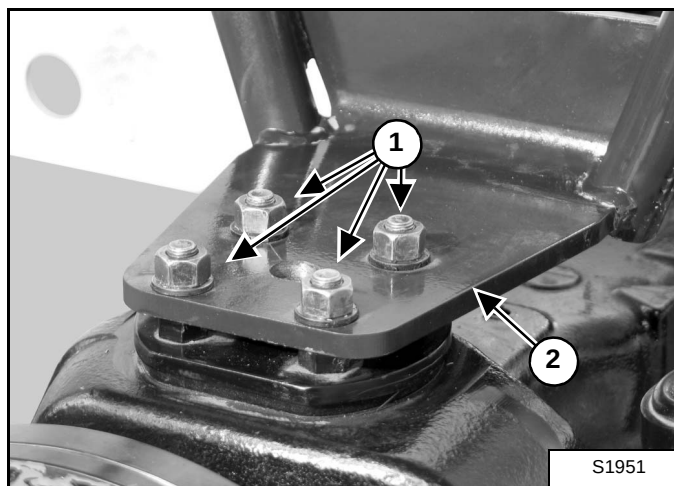

Remove the four bolts (Item 1) from both front fender mount brackets (Item 2) [Figure 40-33-18].

Remove the front fenders.

Figure 40-33-19

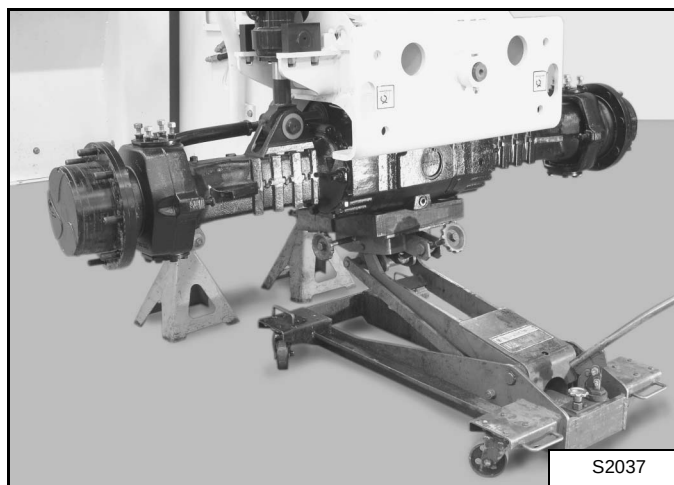


Using a jack, apply upward pressure to lift and support the front axle [Figure 40-33-19].

FRONT AXLE (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Removal (Cont'd)

Figure 40-33-20

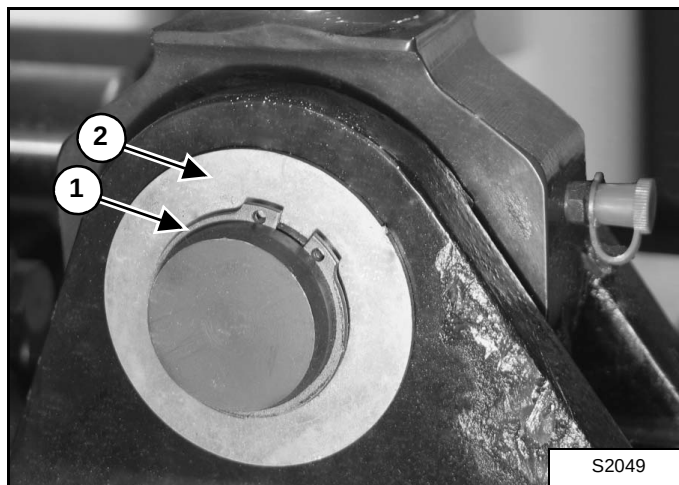


Remove the snap ring (Item 1) and washer (Item 2) [Figure 40-33-20].

Figure 40-33-21

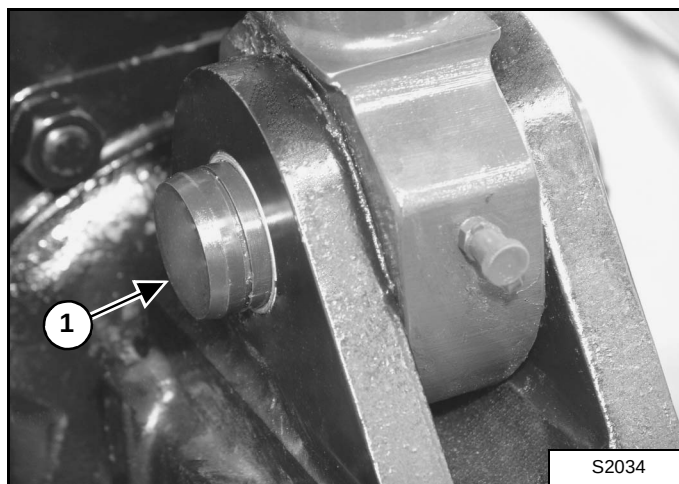


Remove the snap ring and washer. Remove the pivot pin (Item 1) [Figure 40-33-21].

Figure 40-33-22

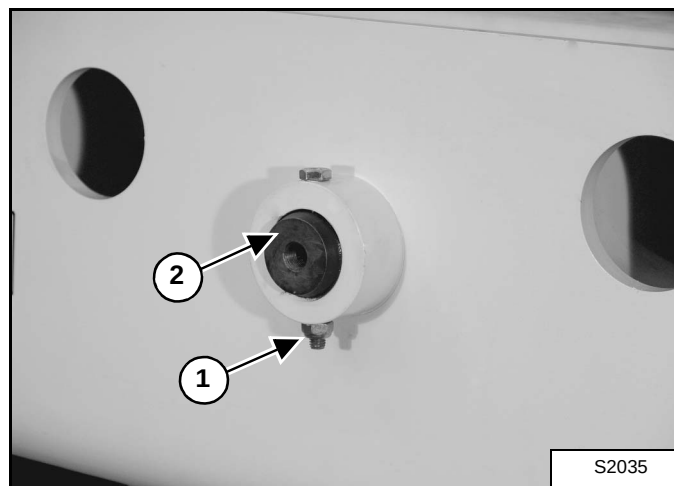

Remove the bolt (Item 1) and nut from the pivot pin (Item 2) [Figure 40-33-22].

Figure 40-33-23

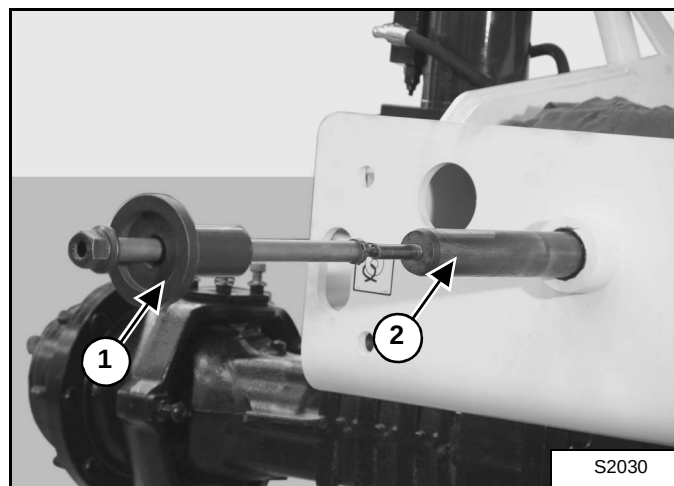


Use a pin removal tool (Item 1) to remove the pivot pin (Item 2) [Figure 40-33-23].

FRONT AXLE (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Removal (Cont'd)

Figure 40-33-24

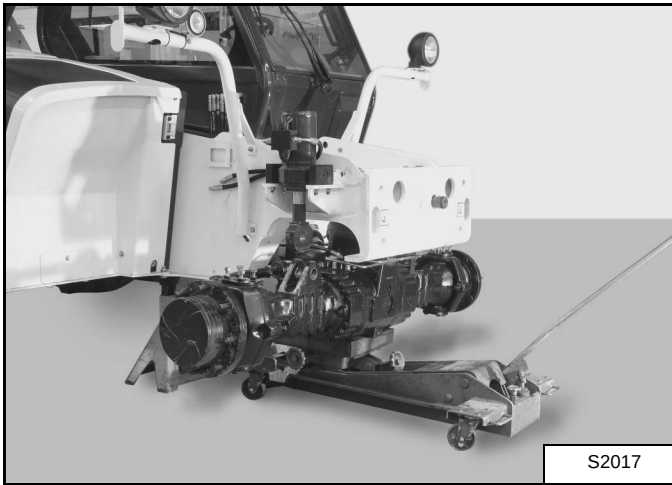


Gently lower the jack approximately 6 inches (150 mm).

Figure 40-33-25

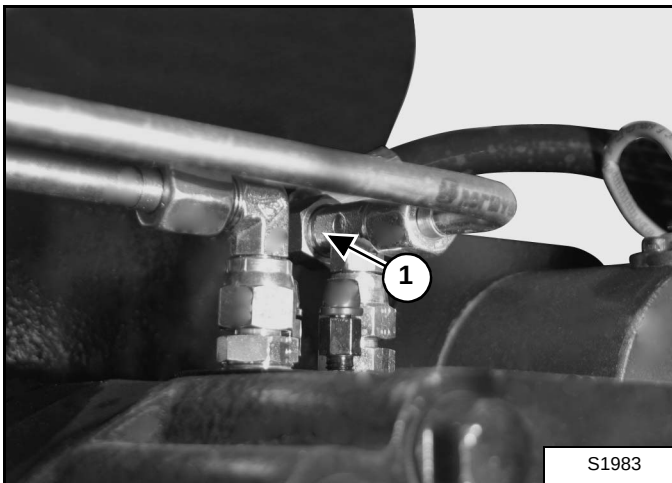


Remove the brake hose (Item 1) [Figure 40-33-25] from the left side of the axle.

Figure 40-33-26

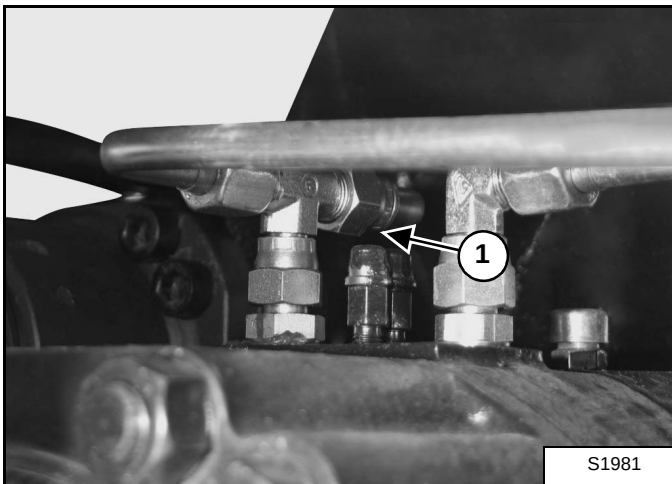

Remove the brake hose (Item 1) [Figure 40-33-26] from the right side of the axle.

Figure 40-33-27

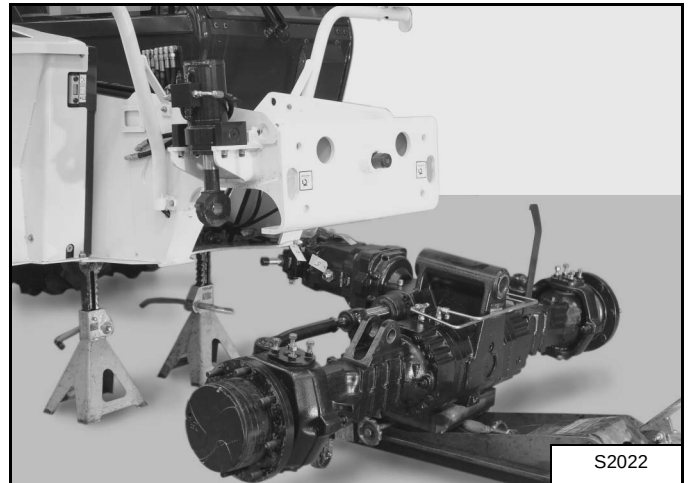


Have an assistant balance the axle on the jack and lower the jack slowly while rolling the axle out from under the frame [Figure 40-33-27].

FRONT AXLE (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Installation

Figure 40-33-28

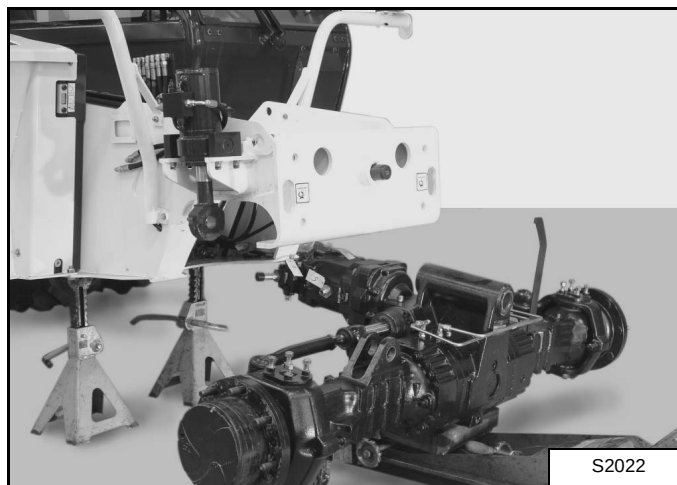


Have an assistant balance the axle on the jack and roll the axle under the frame **[Figure 40-33-28]**.

Figure 40-33-29

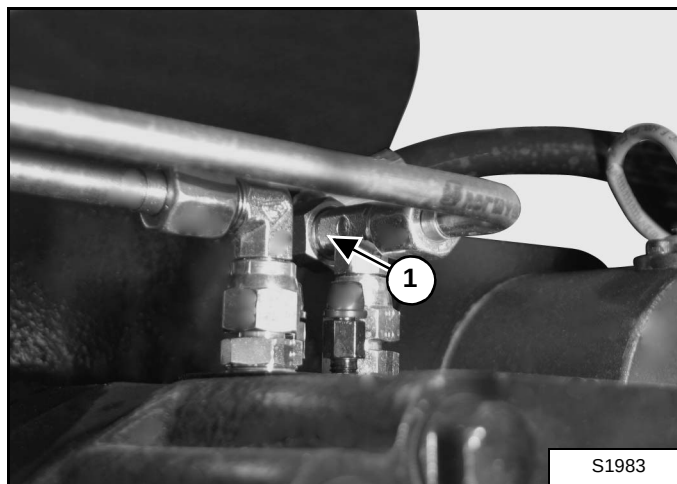


Install the brake hose (Item 1) **[Figure 40-33-29]** from the left side of the axle.

Figure 40-33-30

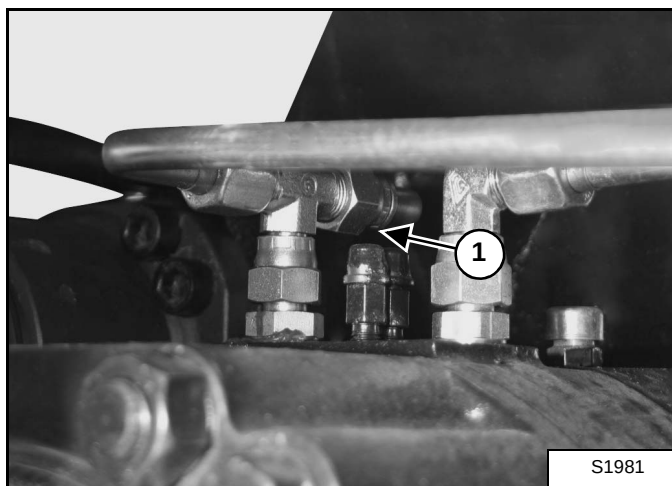

Install the brake hose (Item 1) **[Figure 40-33-30]** from the right side of the axle.

Figure 40-33-31

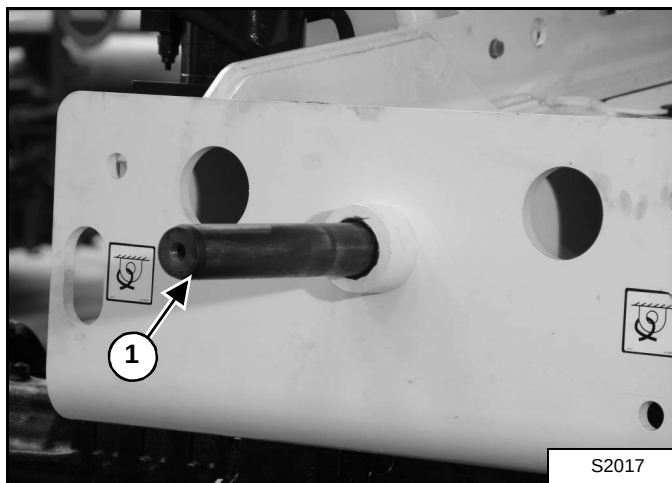


Install the pivot pin (Item 1) **[Figure 40-33-31]** using a copper hammer.

FRONT AXLE (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Installation (Cont'd)

Figure 40-33-32

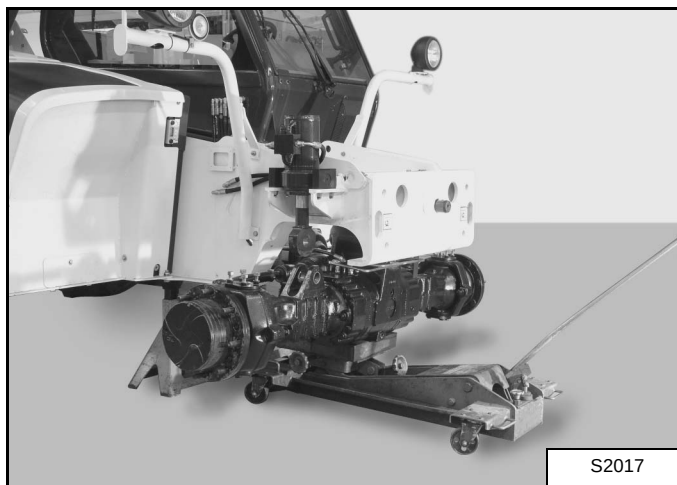


Gently raise the jack.

Figure 40-33-33

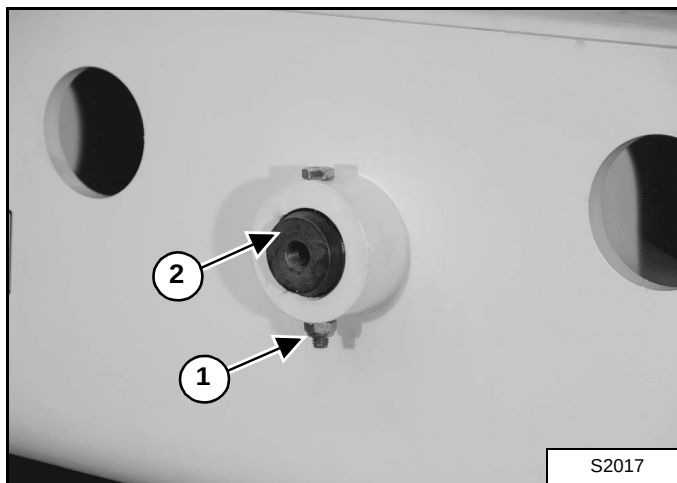


Install the bolt (Item 1) and nut from the pivot pin (Item 2) [Figure 40-33-33].

Figure 40-33-34

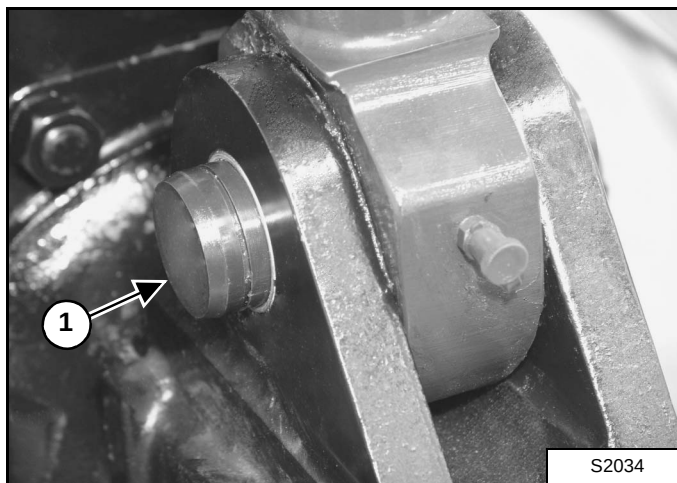

Install the snap ring and washer. Remove the pivot pin (Item 1) [Figure 40-33-34].

Figure 40-33-35

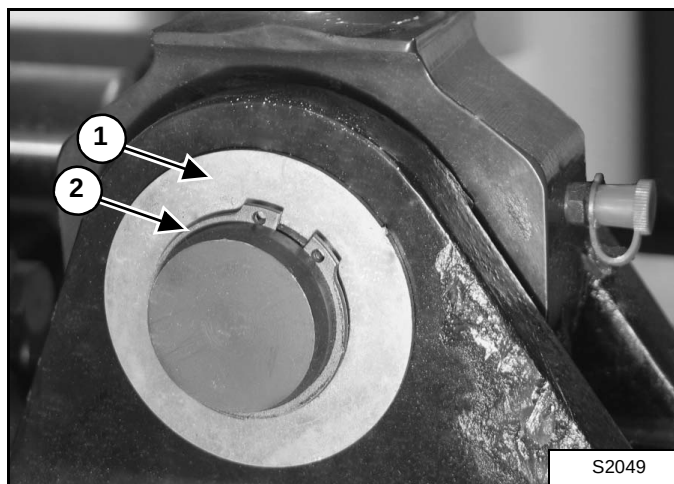


Install the washer (Item 1) and snap ring (Item 2) [Figure 40-33-35].

FRONT AXLE (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Installation (Cont'd)

Figure 40-33-36

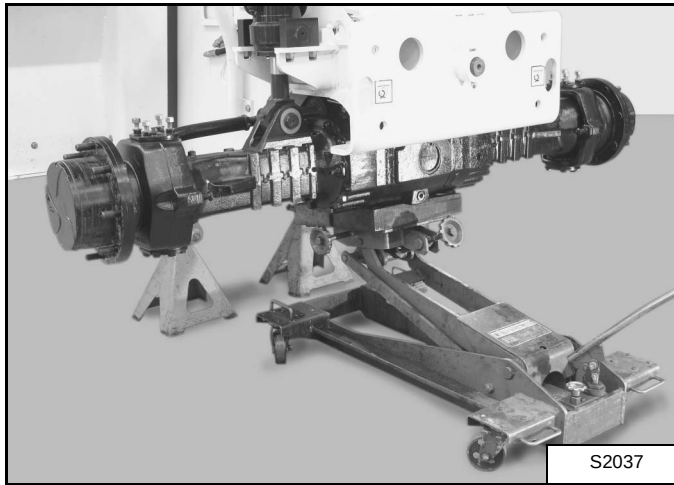

Lower the jack and remove it [Figure 40-33-36].


Figure 40-33-37

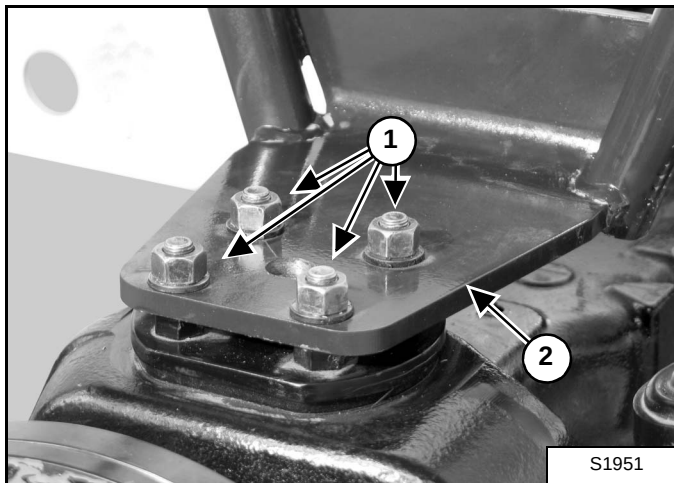

Install the front fenders.
Install the four bolts (Item 1) from both front fender mount brackets (Item 2) [Figure 40-33-37].


Tighten the bolts to 90-100 ft.-lbs. (125-140 Nm) torque.

Figure 40-33-38

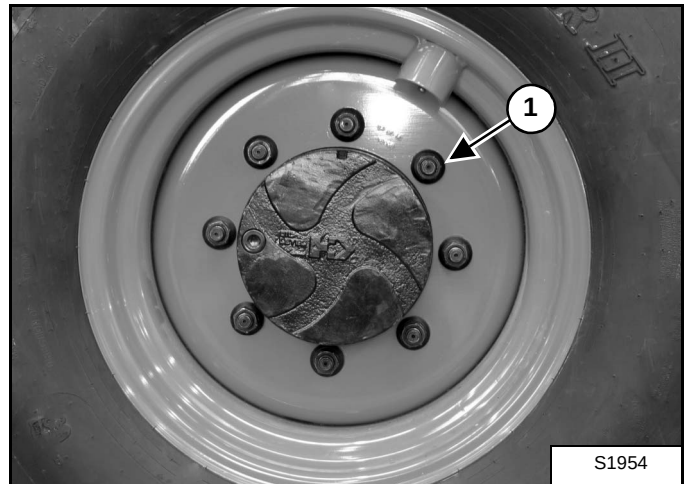

Install both front tires. Install the eight lug nuts and washers (Item 1) [Figure 40-33-38] from each front tire. Tighten the nuts to 221 ft.-lbs. (300 Nm) torque.

Figure 40-33-39

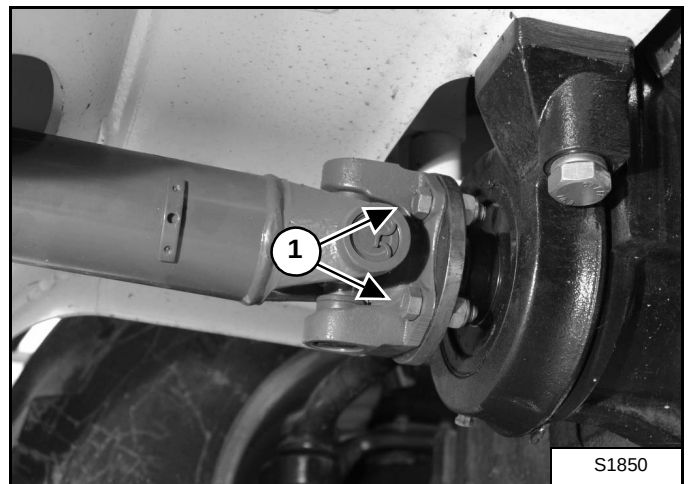


Remove the four driveshaft mounting bolts (Item 1) [Figure 40-33-39] and nuts.

FRONT AXLE (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Installation (Cont'd)


Figure 40-33-40

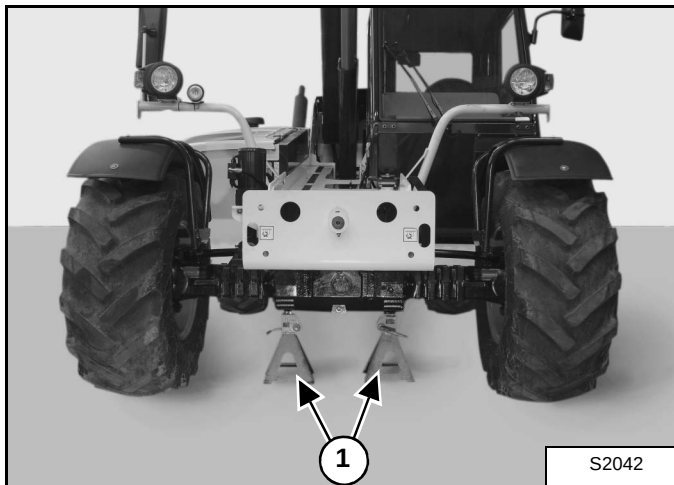

Lift the front of the machine and place jack stands (Item 1) [Figure 40-33-40] under the frame as shown.


Place a block in front and behind one of the rear wheels.

Figure 40-33-41

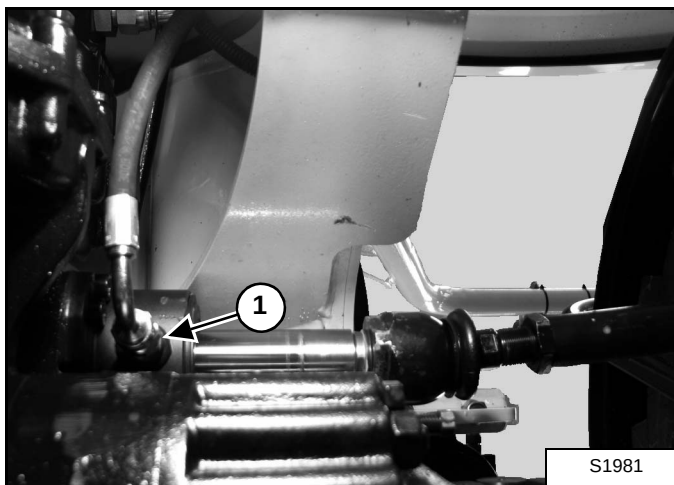


Install the hose (Item 1) [Figure 40-33-41] on the right side of the steering cylinder.

Figure 40-33-42

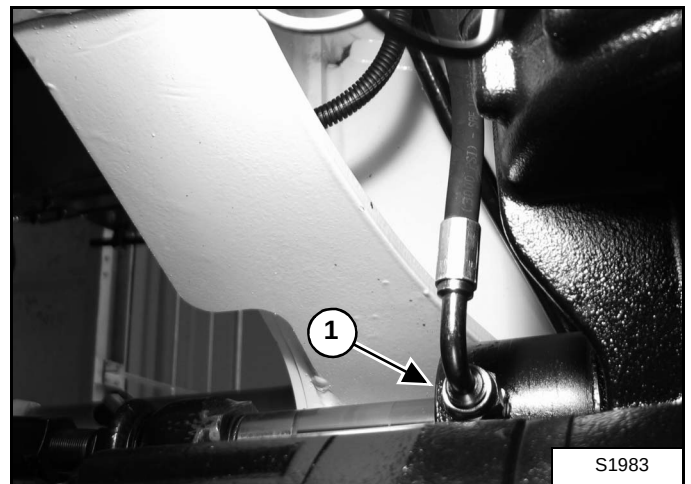

Install the hose (Item 1) [Figure 40-33-42] on the left side of the steering cylinder.

Figure 40-33-43

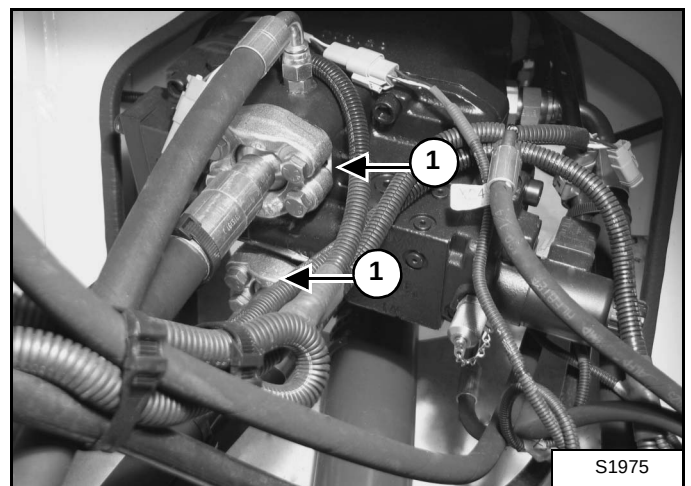


Install the two four bolt flange hoses (Item 1) [Figure 40-33-43].

Mark the location of the hoses for correct installation.

FRONT AXLE (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Installation (Cont'd)

Figure 40-33-44

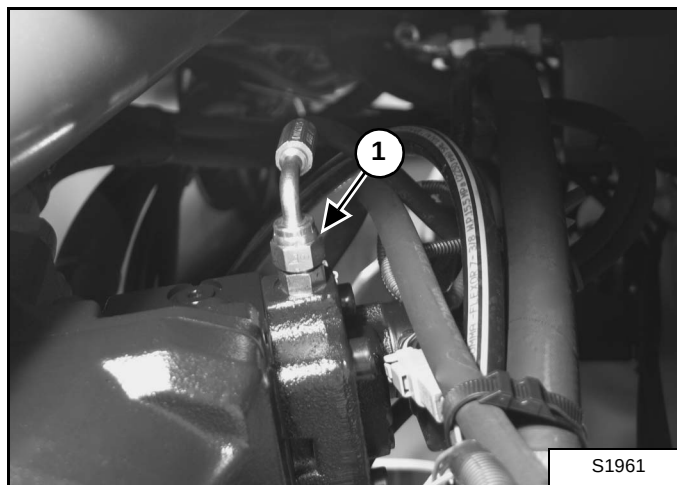


Install the hose (Item 1) [Figure 40-33-44] from the bottom right side of the drive motor.

Figure 40-33-45

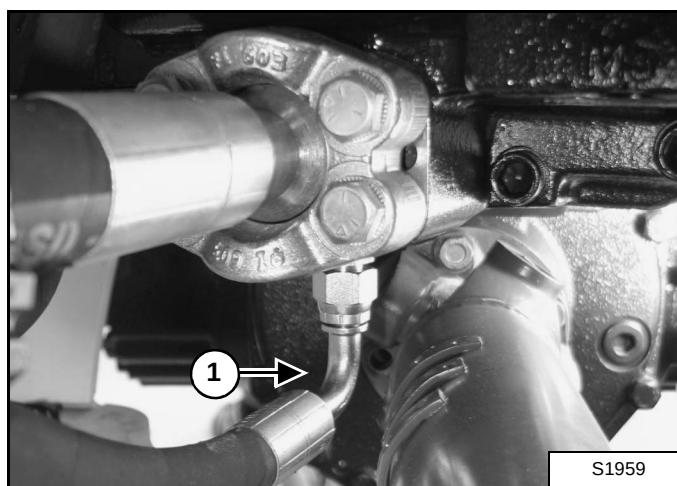


Install the hose (Item 1) [Figure 40-33-45] from the bottom of the drive motor.

Figure 40-33-46

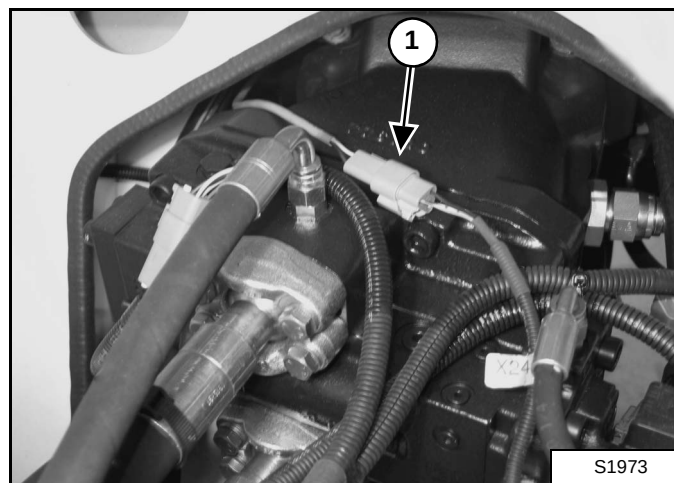

Disconnect the wire harness (Item 1) [Figure 40-33-46] coming from the headlights on the left side.

Figure 40-33-47

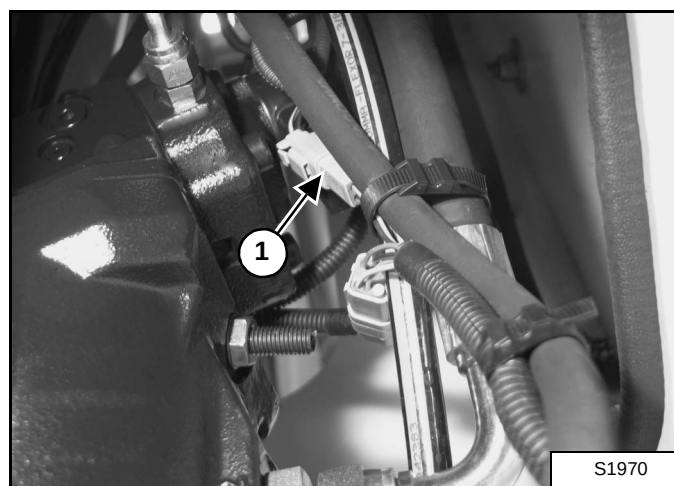


Disconnect the wire harness (Item 1) [Figure 40-33-47] coming from the headlights on the right side.

FRONT AXLE (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Installation (Cont'd)

Figure 40-33-48

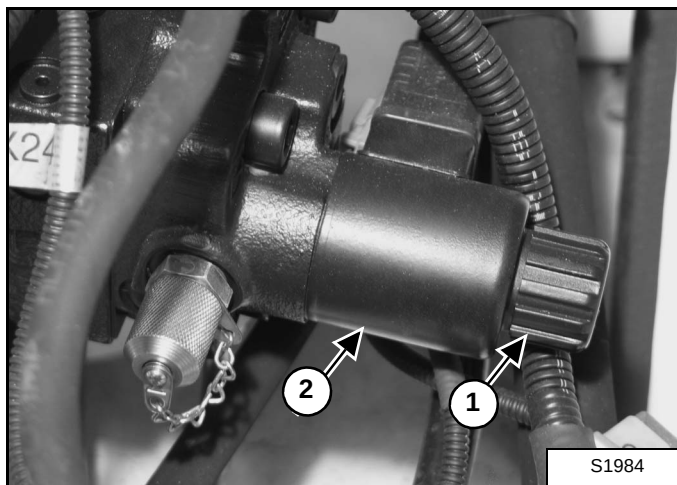


Install the nut (Item 1) and coil (Item 2) [Figure 40-33-48] from the right side of the drive motor.

Figure 40-33-49

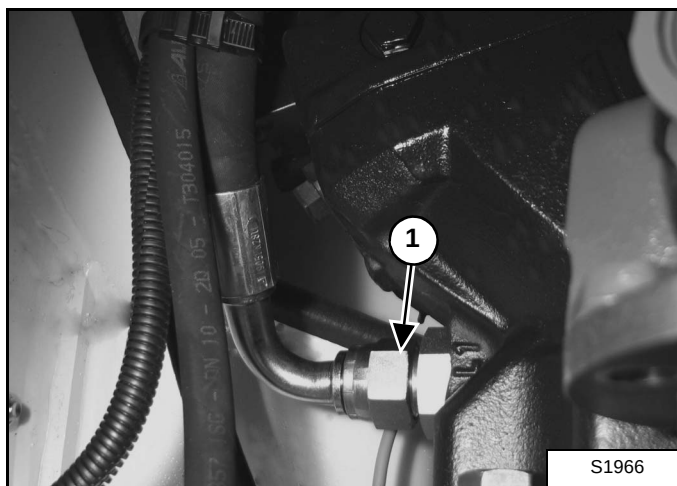


Install the hose (Item 1) [Figure 40-33-49] on the left side of the drive motor.

Figure 40-33-50

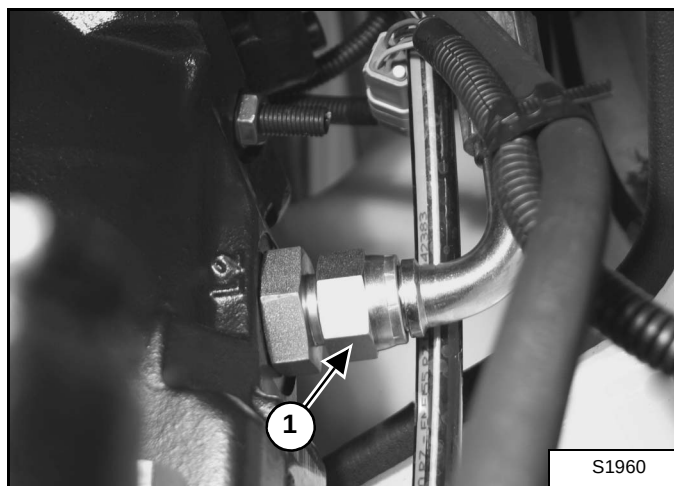

Install the hose (Item 1) [Figure 40-33-50] on the right side of the drive motor.

Figure 40-33-51

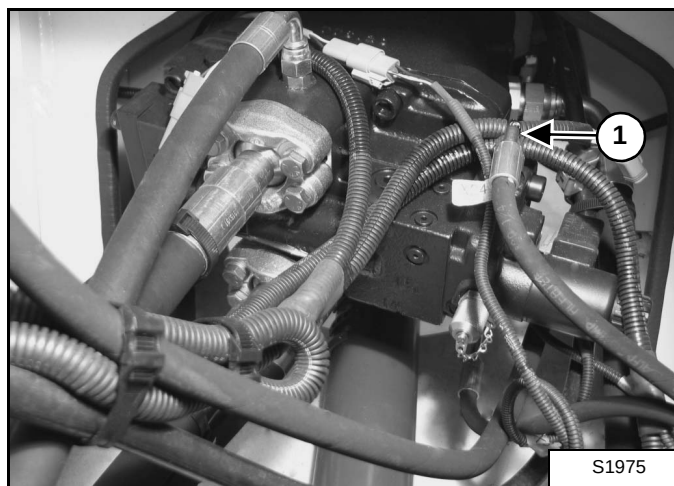


Install the hose (Item 1) [Figure 40-33-51] on the top right side of the drive motor.

FRONT AXLE (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Installation (Cont'd)

Figure 40-33-52

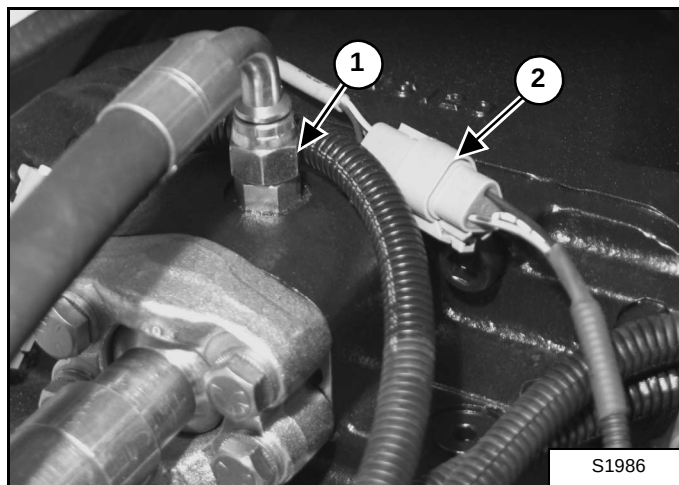

Install the hose (Item 1) and connect the wire harness (Item 2) [Figure 40-33-52] on the top of the drive motor.


Figure 40-33-53

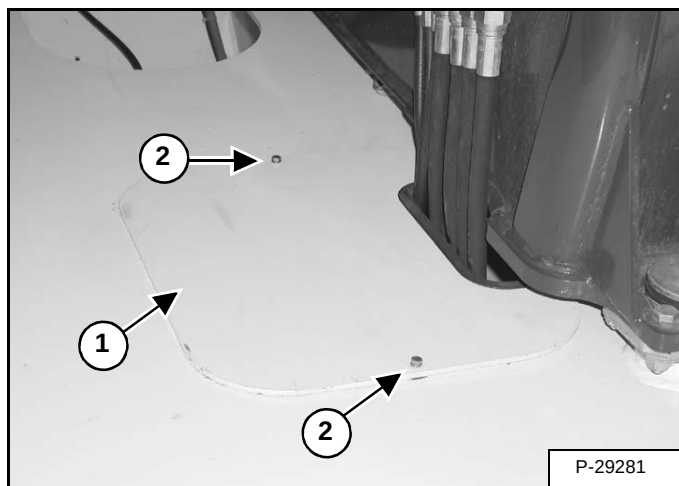

Install the cover (Item 1) with two bolts (Item 2) [Figure 40-33-53].

Fill the hydraulic reservoir. (See "Replacing Hydraulic Fluid" on page 10-100-3)

Figure 40-33-54

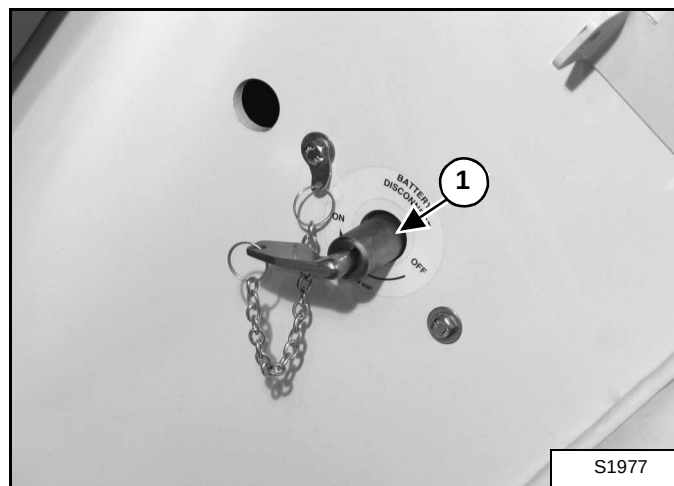

Rotate the battery switch (Item 1) [Figure 40-33-54] to the left to reconnect the power supply from the battery.


AXLE TOE-IN (For S/N 362811001 - 362812000, S/N 362911001 - 362912000)

Adjustment

The axle is removed from the machine for photo clarity, but this procedure may be completed with the axle installed in the machine.

Turn the steering wheel until the steering cylinder rod is positioned in the center. Measure the exposed part of the cylinder rod on each side of the cylinder housing making sure they are the same length.


Figure 40-40-1

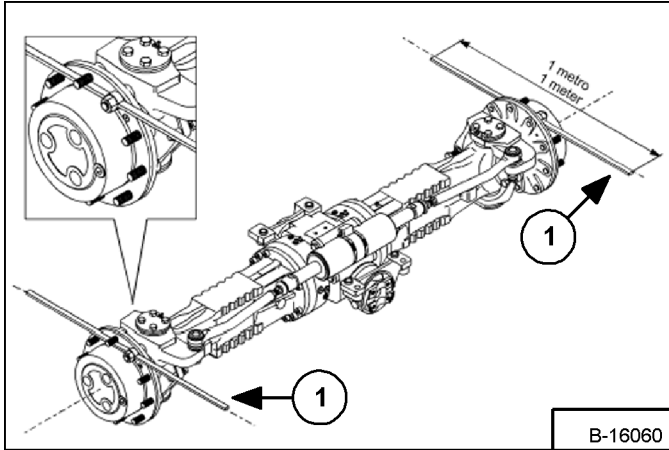

Install two identical, straight bars (Item 1) [Figure 40-40-1] onto the wheel hub and secure them using lug nuts.


NOTE: The two bars must be perpendicular to the ground.

Figure 40-40-2

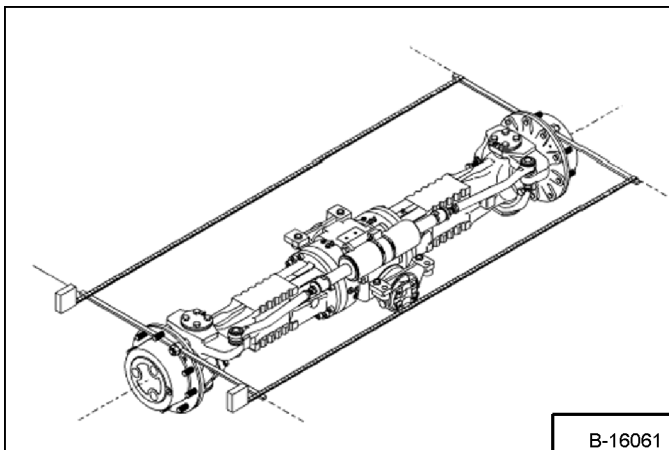

Measure the distance between the ends of the two bars [Figure 40-40-2]. The measurement must be equal.

Figure 40-40-3

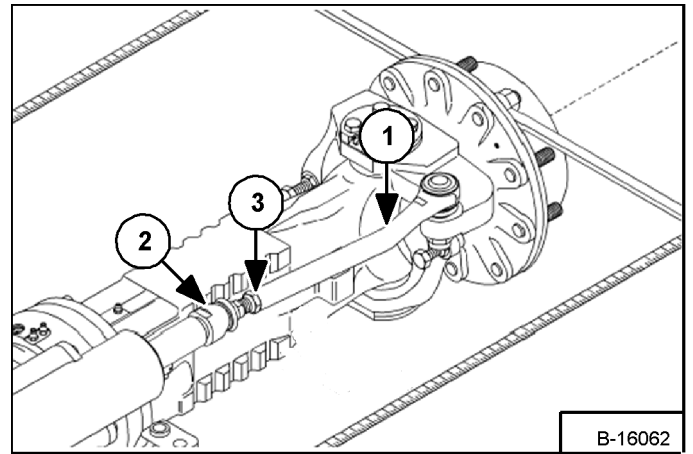

If measurement is not the same, adjust both tie rod ends (Item 1) by loosening or tightening the track rods (Item 2) [Figure 40-40-3] of both tie rods until the measurement is the same.

Tighten nut (Item 3) [Figure 40-40-3] to 221 ft.-lbs. (300 Nm) torque.



Bobcat®


AXLE TOE-IN (For S/N 362812001 and Above, S/N 362912001 and Above)

Adjustment

The axle is removed from the machine for photo clarity, but this procedure may be completed with the axle installed in the machine.

Turn the steering wheel until the steering cylinder rod is positioned in the center. Measure the exposed part of the cylinder rod on each side of the cylinder housing making sure they are the same length.


Figure 40-41-1

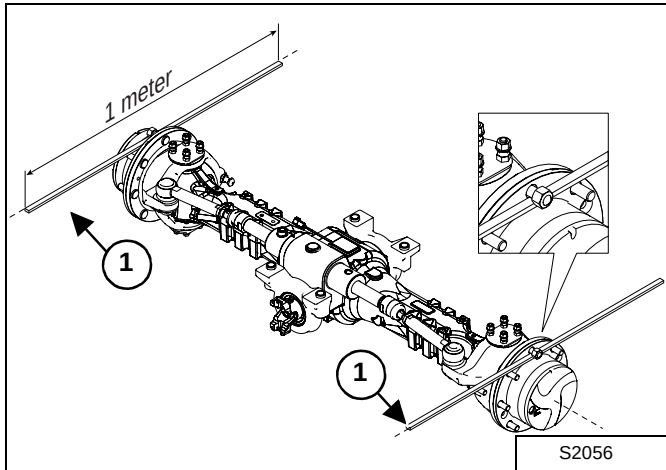

Install two identical, straight bars (item 1) [Figure 40-41-1] onto the wheel hub and secure them using lug nuts.


NOTE: The two bars must be perpendicular to the ground.

Figure 40-41-2

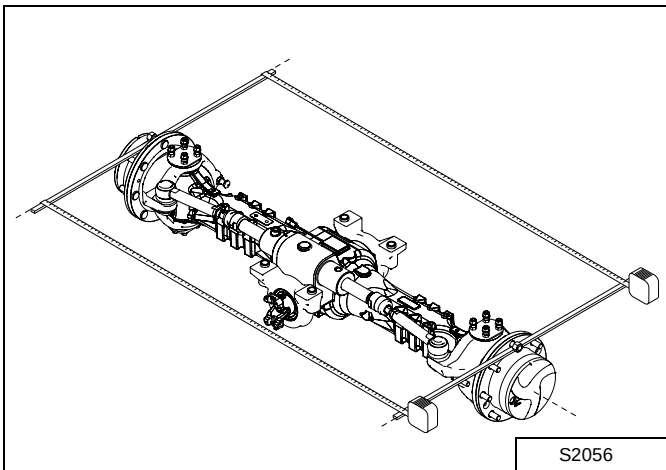

Measure the distance between the ends of the two bars [Figure 40-41-2]. The measurement must be equal.

Figure 40-41-3

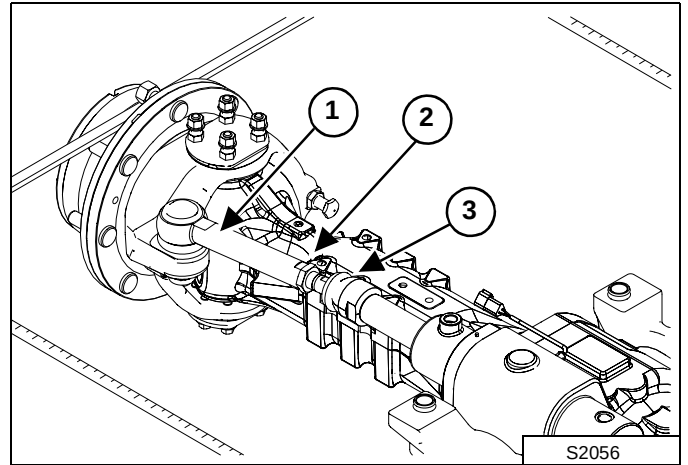

If measurement is not the same, adjust both tie rod ends (item 1) by loosening or tightening the track rods (item 2) [Figure 40-41-3] of both tie rods until the measurement is the same.

Tighten the nut (item 3) [Figure 40-41-3] to 221 ft.-lbs. (300 Nm) torque.



Bobcat®

PARKING BRAKE (For S/N 362811001 - 362812000, S/N 362911001 - 362912000)

Preparing for towing

The Telescopic Handler can be towed a short distance such as removing it from mud or loading onto a transport vehicle.

The machine must be prepared before towing.


WARNING

- Before towing, the machine must be immobilised using chocks in front of the wheels or any other means independent of the machine. Do not apply the handbrake.
- After this operation, the handbrake will not work and it will no longer be possible to lock the machine with the hydrostatic transmission.

Disengaging the hydrostatic transmission

It is impossible for oil to circulate in a hydrostatic transmission in a closed circuit when the machine is not running, this operation involves making oil circulation possible:


Figure 10-40-1

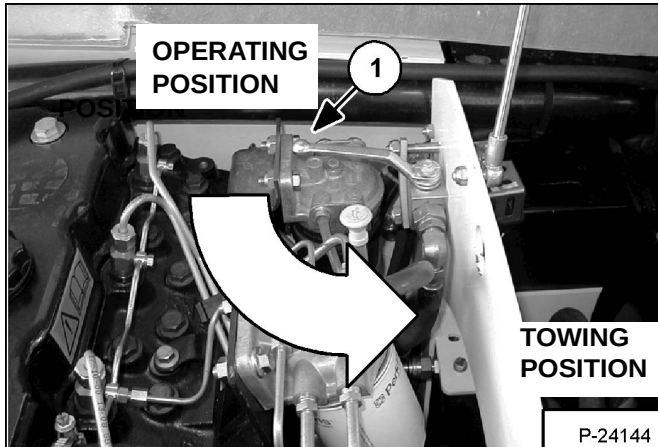

If the optional tow valve is installed, simply raise the engine cover and turn the valve counterclockwise 90° (Item 1) [Figure 10-40-1] to TOWING POSITION.

Follow the below procedure if the optional tow valve is not installed:

Figure 10-40-2

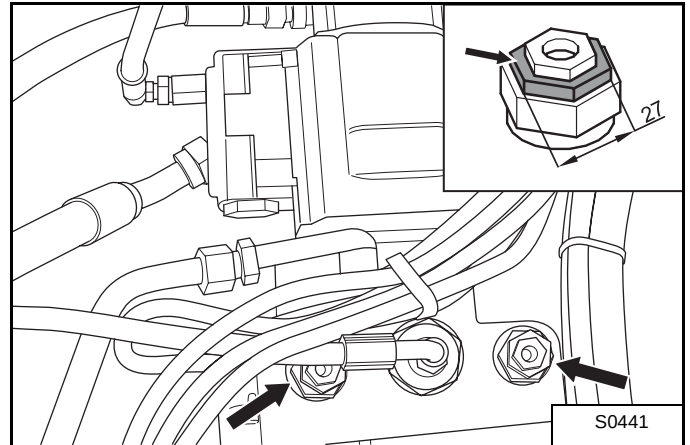

- Locate the two identical multi-function valves on the hydrostatic transmission pump [Figure 10-40-2]. Each valve has three 6-sided nuts of different sizes.
- Unscrew the middle screw of each valve 2.5 turns. This action will bypass the oil flow from the hydrostatic transmission.

PARKING BRAKE (For S/N 3628 12000 and below, S/N 3629 12000 and below) (CONT'D)

Releasing the parking brake

As the machine's handbrake is tightened by lack of pressure, this operation involves releasing the brake mechanically:

- There are three screws at each end of the central part of the front axle, equally distributed 120° from each other. These screws are driven into a counterbore.
[Figure 10-40-3] shows the 3 screws of one of the two sides of the front axle.
[Figure 10-40-4] shows the position of the screw around the shaft.

Figure 10-40-3


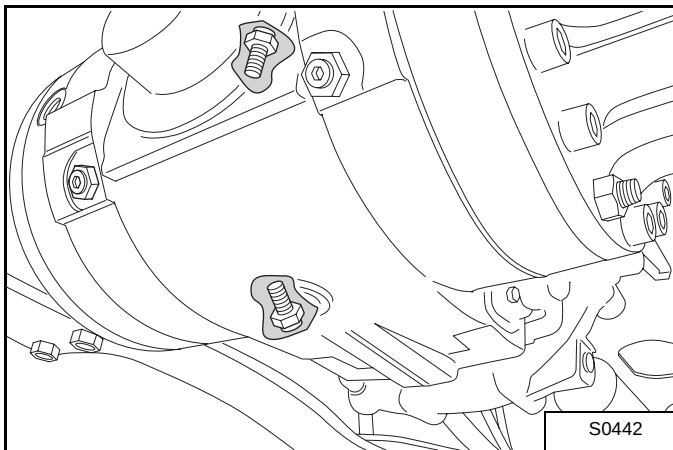


Figure 10-40-4

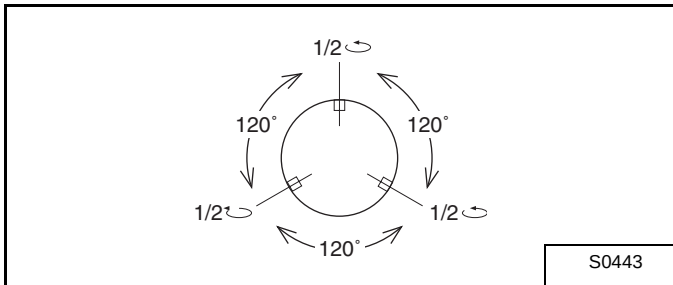

- The work will first be carried out on the three screws on one side then on the next three.
- Gradually screw (quarter turn by quarter turn) each of the three screws alternatively until they bite (2 - 2.5 turns)

The brakes are now released for towing the vehicle.

Towing the Telescopic Handler

IMPORTANT

The vehicle will not be able to brake until the screws are returned to their original position.

Tow the Telescopic Handler at slow speed.

After towing:

- Re-engage the hydrostatic transmission by reversing the procedure "Disengaging the hydrostatic transmission" on page 1.
- Re-activate the brakes by reversing the above procedures.

PARKING BRAKE (For S/N 362812001 and Above, S/ N 362912001 and Above)

Preparing for towing

The Telescopic Handler can be towed a short distance such as removing it from mud or loading onto a transport vehicle.

The machine must be prepared before towing.


WARNING

- Before towing, the machine must be immobilised using chocks in front of the wheels or any other means independent of the machine. Do not apply the handbrake.
- After this operation, the handbrake will not work and it will no longer be possible to lock the machine with the hydrostatic transmission.

Disengaging the hydrostatic transmission

It is impossible for oil to circulate in a hydrostatic transmission in a closed circuit when the machine is not running, this operation involves making oil circulation possible:


Figure 10-40-5

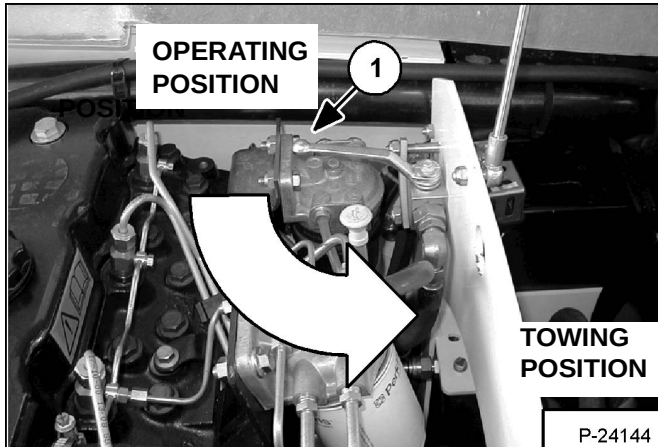

If the optional tow valve is installed, simply raise the engine cover and turn the valve counterclockwise 90° (Item 1) [Figure 10-40-5] to TOWING POSITION.

Follow the below procedure if the optional tow valve is not installed:

Figure 10-40-6

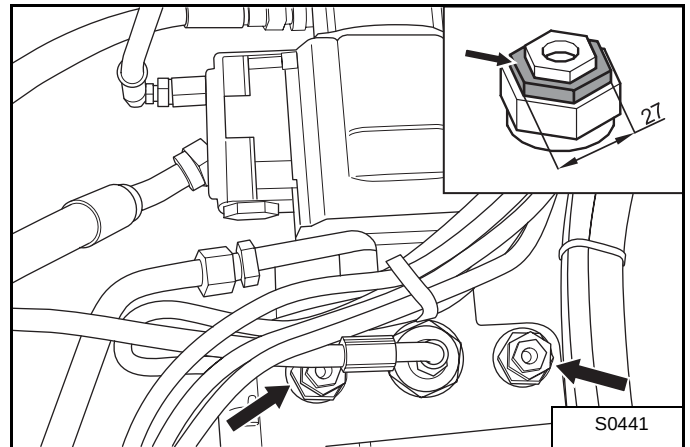

- Locate the two identical multi-function valves on the hydrostatic transmission pump [Figure 10-40-6]. Each valve has three 6-sided nuts of different sizes.
- Unscrew the middle screw of each valve 2.5 turns. This action will bypass the oil flow from the hydrostatic transmission.

PARKING BRAKE (For S/N 3628 12000 and below, S/N 3629 12000 and below) (CONT'D)

Releasing the parking brake

As the machine's brakes are tightened by lack of hydraulic pressure (= handbraked position), this operation involves releasing the brakes mechanically. Only the front axle has brakes.

The following procedure describes how to untighten the brakes.

- Release the handbrake. This will open the hydraulic circuit. It is not possible to manually release the brakes when the hydraulic circuit is closed.
- At each end of the central part of the front axle are two screws (see **[Figure 10-40-7]**). When screwed in, these screws will remove the spring pressure that block the brake disks.

[Figure 10-40-8] shows the function of such a screw inside the axle.

The work will first be carried out on the two screws on one side of the front axle then on the other side:

- Loosen the locking nuts of the screws and create some clearance for the screws.
- Gradually screw (quarter turn by quarter turn) each of the two screws alternatively until they bite.
- Repeat the above steps on the other side of the front axle.

The brakes are now released for towing the vehicle.
Towing the Telescopic Handler

IMPORTANT

The vehicle will not be able to brake until the screws are returned to their original position.

Tow the Telescopic Handler at slow speed.

After towing:

- Re-engage the hydrostatic transmission by reversing the procedure "Disengaging the hydrostatic transmission" on page 1.
- Re-activate the brakes by reversing the above procedures.

Figure 10-40-7


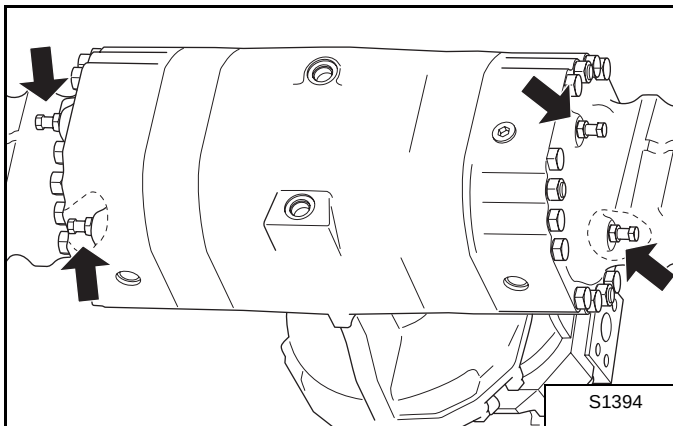


Figure 10-40-8

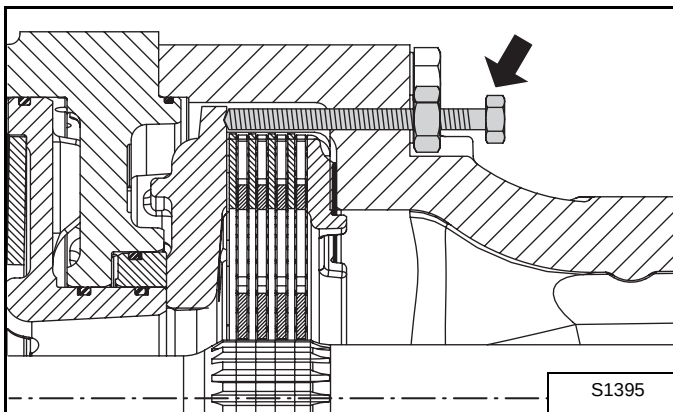


STEERING ANGLE ADJUSTMENT (For S/N 362811001 - 362812000, S/N 362911001 - 362912000)

Adjustment


The axle is removed from the machine for photo clarity, but this procedure may be completed with the axle installed in the machine.

Figure 40-60-1

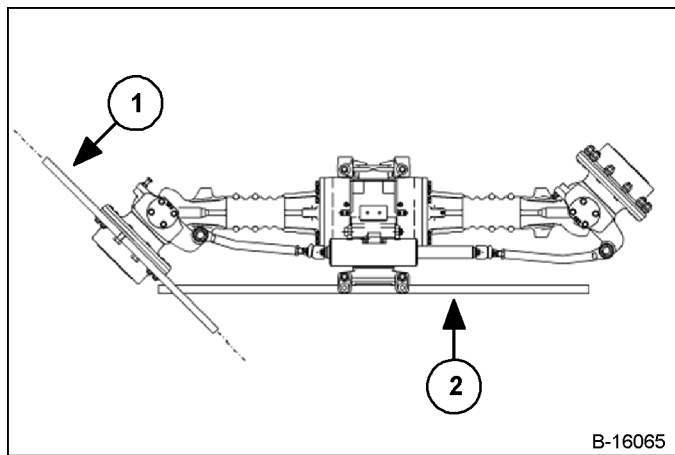


Install a straight bar (Item 1) onto the wheel hub and secure using lug nuts. Turn the steering wheel completely to one side. Place a straight bar (Item 2) [Figure 40-60-1] on the pinion shaft.

Figure 40-60-2

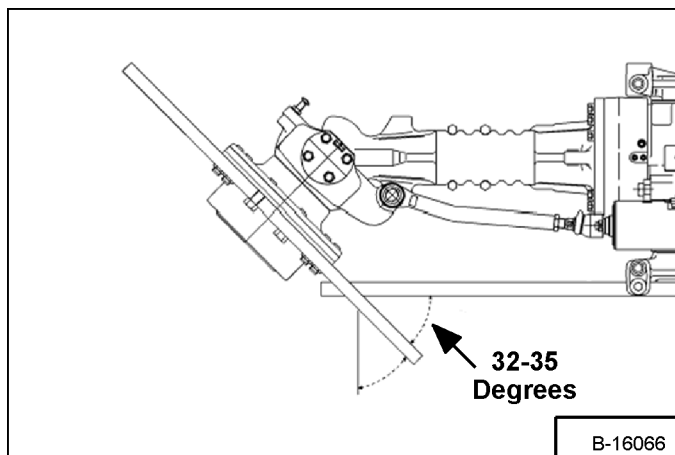


Using an angle gauge, to obtain a reading of 32-35 degrees [Figure 40-60-2].

Figure 40-60-3

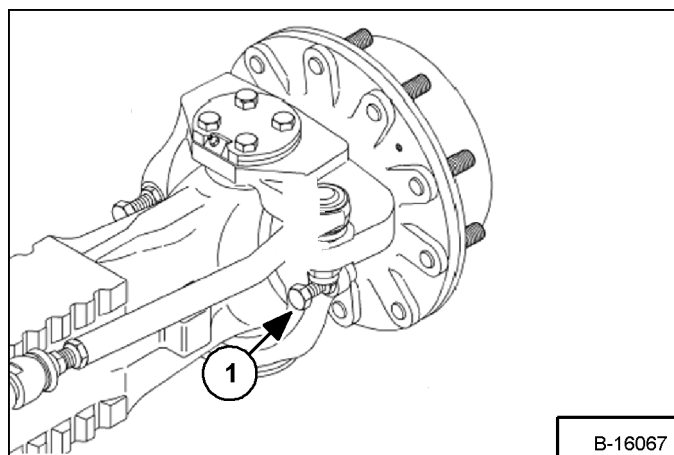

Adjust the stop (Item 1) [Figure 40-60-3] as needed. Tighten the lock nut to 110 ft.-lbs. (150 Nm) torque.

Figure 40-60-4

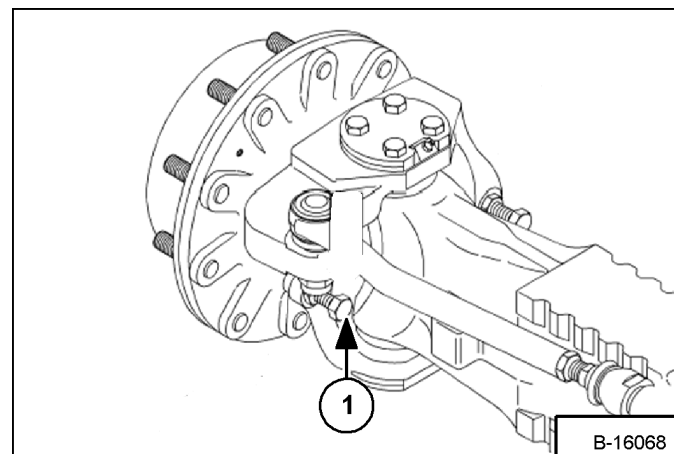

Turn the steering wheel completely to the other side [Figure 40-60-4] and repeat above procedure.




Bobcat®

STEERING ANGLE ADJUSTMENT (For S/N 362812001 and Above, S/N 362912001 and Above)

Adjustment


The axle is removed from the machine for photo clarity, but this procedure may be completed with the axle installed in the machine.

Figure 40-61-1

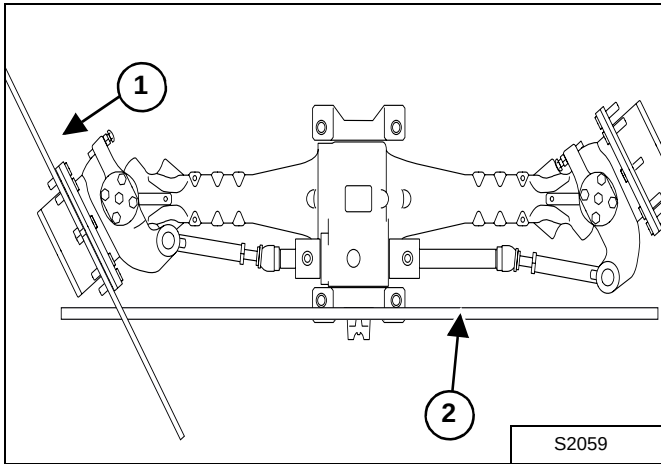


Install a straight bar (item 1) onto the wheel hub and secure using lug nuts. Turn the steering wheel completely to one side. Place a straight bar (item 2) [Figure 40-61-1] on the pinion shaft.

Figure 40-61-2

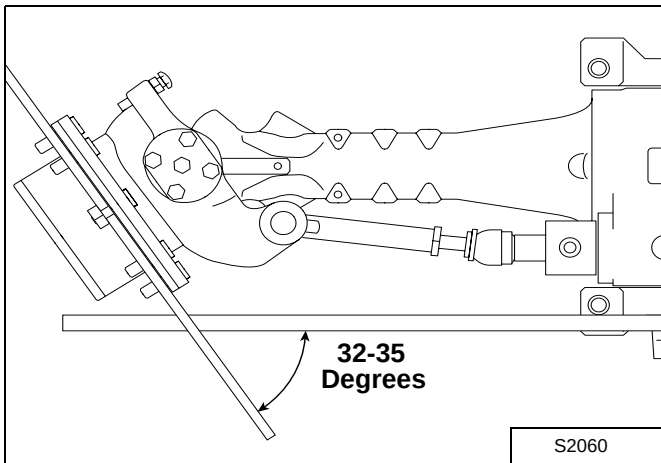


Use an angle gauge, to obtain a reading of 32-35 degrees [Figure 40-61-2].

Figure 40-61-3

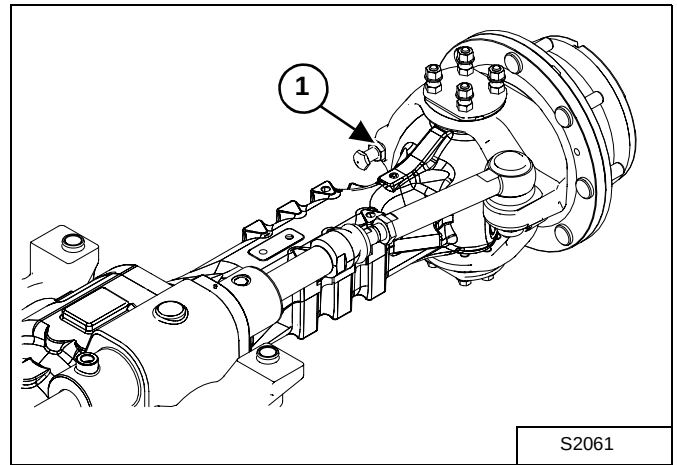

Adjust the stop (item 1) [Figure 40-61-3] as needed. Tighten the lock nut to 110 ft.-lbs. (150 Nm) torque.

Figure 40-61-4

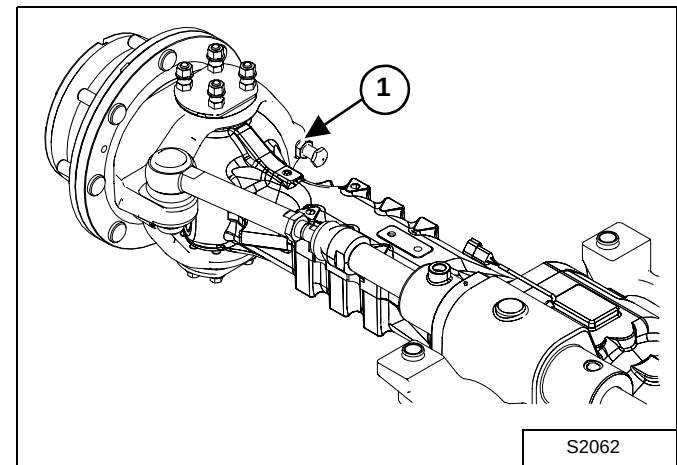

Turn the steering wheel completely to the other side [Figure 40-61-4] and repeat above procedure.




Bobcat®

DRIVESHAFT

Removal And Installation


(For S/N 362811001 - 362812000, S/N 362911001 - 362912000):

Figure 40-70-1

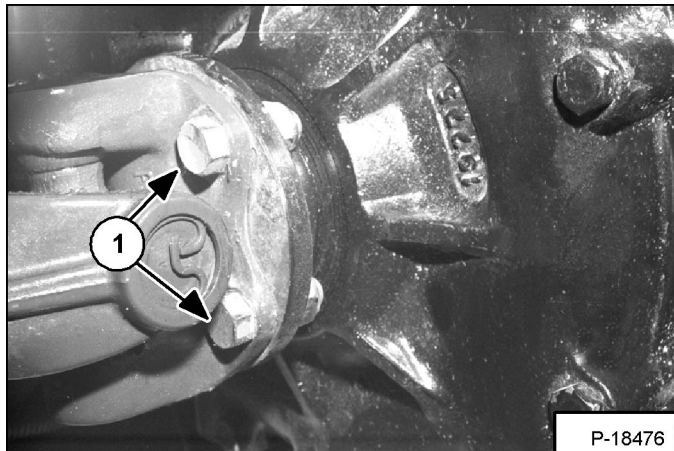

Remove the four drive shaft mounting bolts (item 1) [Figure 40-70-1] from each end of the drive shaft.

Figure 40-70-2

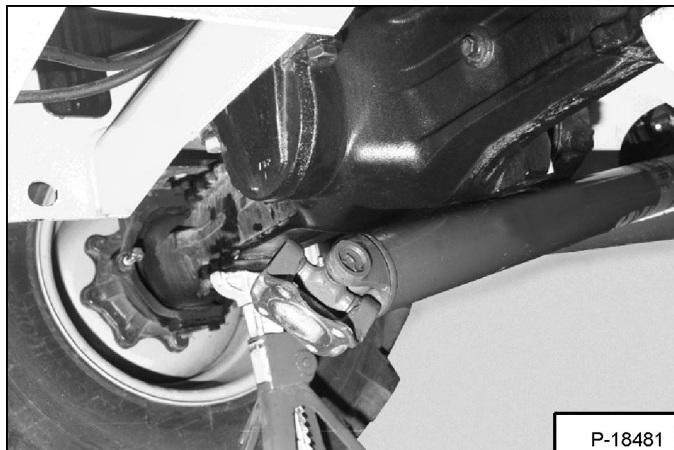

Remove the drive shaft out the rear of the machine [Figure 40-70-2].


(For S/N 362812001 and Above, S/N 362912001 and Above):

Figure 40-70-1



Remove the four drive shaft mounting bolts (item 1) [Figure 40-70-1] from each end of the drive shaft.

Figure 40-70-2

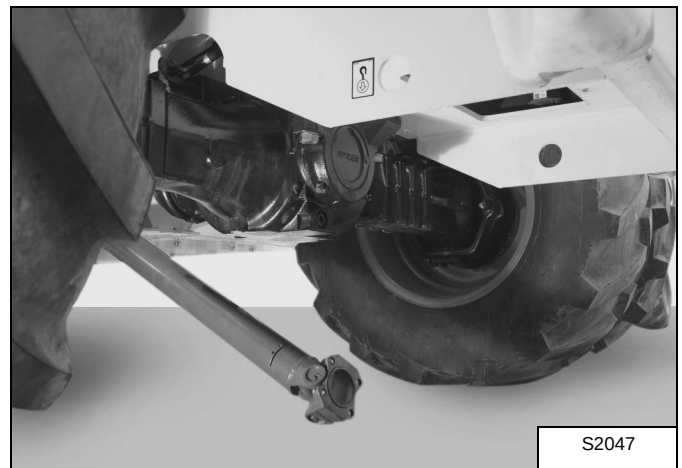

Remove the drive shaft out the rear of the machine [Figure 40-70-2].



Bobcat®

SERVICE BRAKE (For S/N 362811001 - 362812000, S/N 362911001 - 362912000)

Description

There are two bleed screws located on each side of the front axle differential housing.

Air trapped in the brake lines may cause a spongy feel and/or delayed activation of the service brake.


Use the following procedure to remove air from the brake circuit.

Bleeding The Brake Circuit

Lift and block the machine. (See "LIFTING AND BLOCKING THE Telescopic Handler" on page 10-10-1)

NOTE: Position the jackstands to allow starting the machine and driving the wheels.

Figure 40-80-1

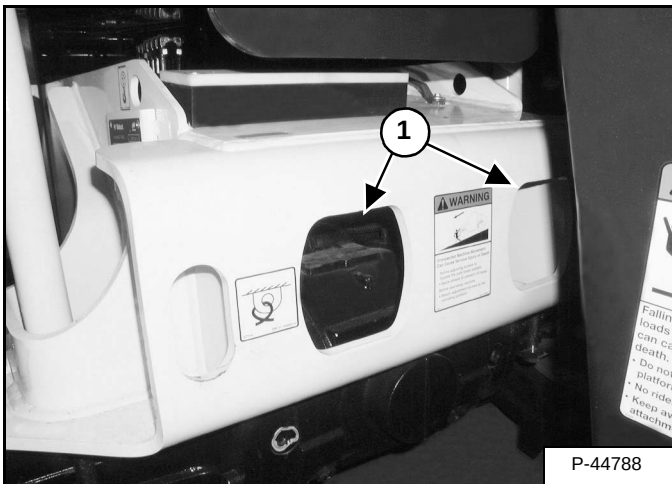

On machines without frame leveling the bleed screws are accessible through the holes (Item 1) [Figure 40-80-1] in the main frame.

Figure 40-80-2


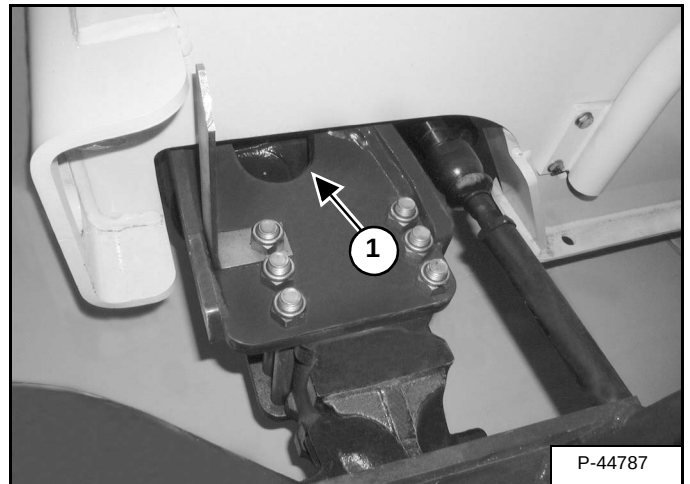



Figure 40-80-3

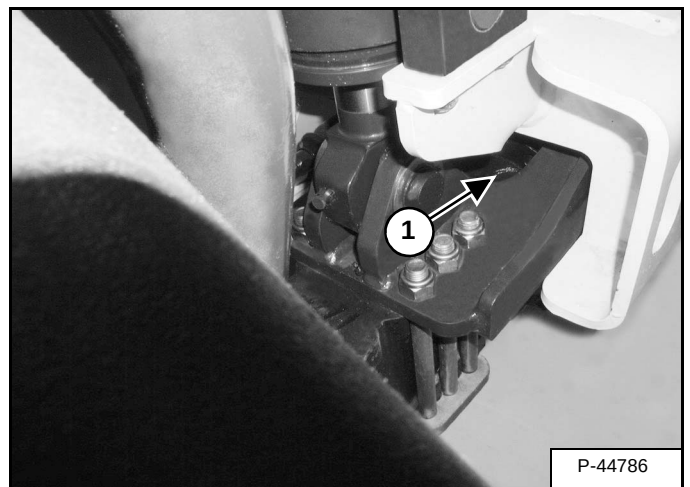

On machines with frame leveling the bleed screws are accessible through the holes (Item 1) [Figure 40-80-2] and [Figure 40-80-3] on each side of the pivot frame.

SERVICE BRAKE (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Figure 40-80-4

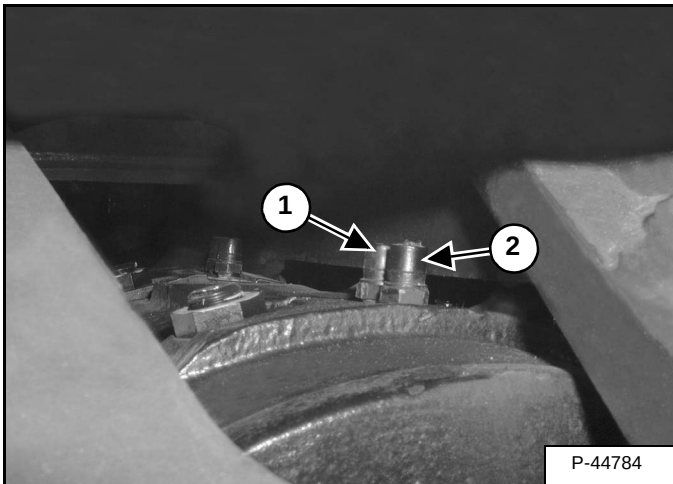

Start the machine, engage the hydrostat and turn the wheels until a continuous stream of clean hydraulic fluid, with no air, flows from the outside bleed screws (Item 2) [Figure 40-80-4] and [Figure 40-80-5]. Stop the engine and tighten the two outside bleed screws.

Lower the machine and test for proper brake operation.

Figure 40-80-5

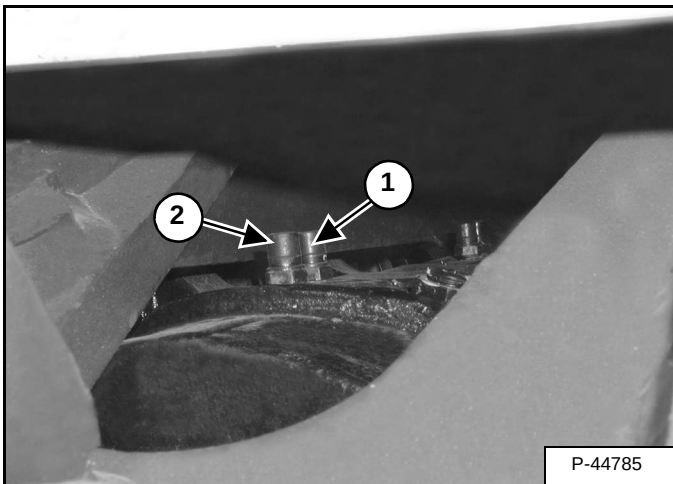

Remove the caps and loosen the four bleed screws (Item 1) & (Item 2) [Figure 40-80-4] and [Figure 40-80-5].

WARNING: Hydraulic fluid will be forced from the bleed screws during the following procedure:

With the aid of an assistant, start the engine and apply the service brake until a continuous stream of clean hydraulic fluid, with no air, flows from the inside bleed screws (Item 1) [Figure 40-80-4] and [Figure 40-80-5]. Stop the engine and tighten the two inside bleed screws.

SERVICE BRAKE (For S/N 362812001 and Above, S/N 362912001 and Above)

Description

There are two bleed screws located on each side of the front axle differential housing.

Air trapped in the brake lines may cause a spongy feel and/or delayed activation of the service brake.

Use the following procedure to remove air from the brake circuit.

Bleeding The Brake Circuit

Lift and block the machine. (See "LIFTING AND BLOCKING THE Telescopic Handler" on page 10-10-1)

NOTE: Position the jack stands to allow starting the machine and driving the wheels.

Figure 40-81-1


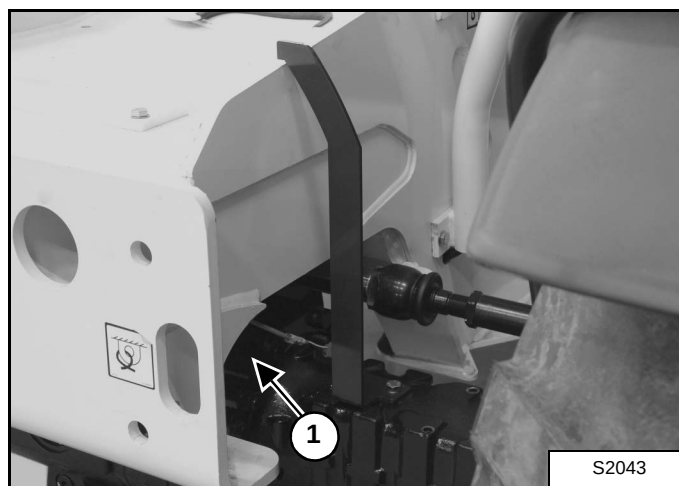


Figure 40-81-2

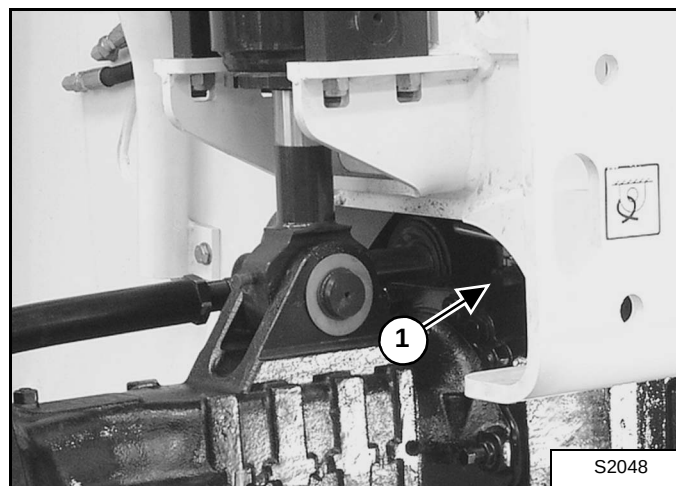

On machines with frame leveling the bleed screws are accessible from [Figure 40-81-1] and [Figure 40-81-2] on each side of the pivot frame.

SERVICE BRAKE (For S/N 362812001 and Above, S/N 362912001 and Above) (Cont'd)

Figure 40-81-3


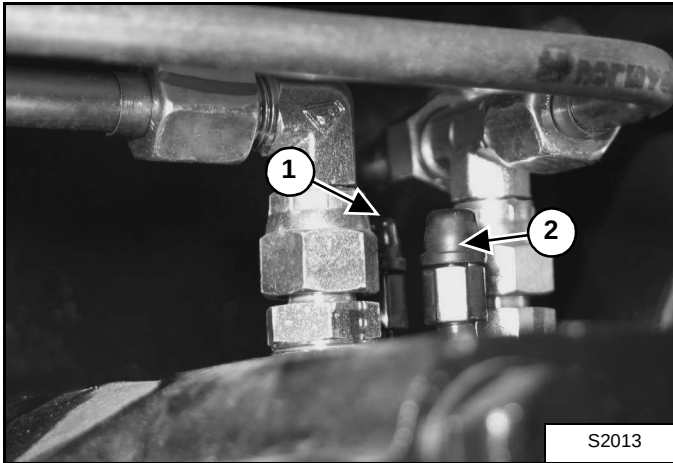


Figure 40-81-4

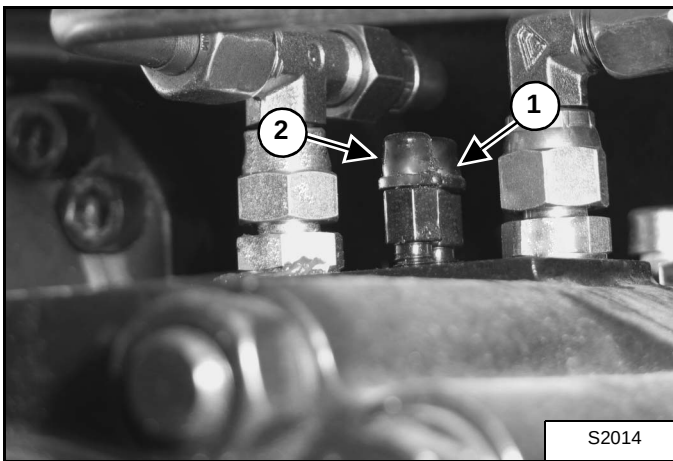

Remove the caps and loosen the four bleed screws (item 1) & (item 2) [Figure 40-81-3] and [Figure 40-81-4].

NOTE: Hydraulic fluid will be forced from the bleed screws during the following procedure:

With the aid of an assistant, start the engine and apply the service brake until a continuous stream of clean hydraulic fluid, with no air, flows from the inside bleed screws (item 1) [Figure 40-81-3] and [Figure 40-81-4]. Stop the engine and tighten the two inside bleed screws.

Start the machine, engage the hydro stat and turn the wheels until a continuous stream of clean hydraulic fluid, with no air, flows from the outside bleed screws (item 2) [Figure 40-81-3] and [Figure 40-81-4]. Stop the engine and tighten the two outside bleed screws.

Lower the machine and test for proper brake operation.

REAR AXLE (For S/N 362811001 - 362812000, S/N 362911001 - 362912000)

Removal

Position the machine on the work surface.


Relieve hydraulic pressure.

! WARNING

Hydraulic fluid escaping under pressure can have sufficient force to enter a person's body by penetrating the skin. This can cause serious injury and possible death if proper medical treatment by a physician familiar with this injury is not received immediately.

W-2145-0290

Figure 40-90-1

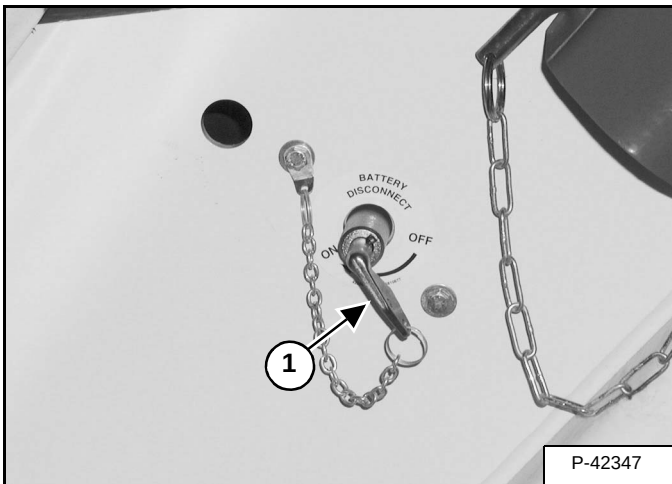

Rotate the battery disconnect switch (Item 1) [Figure 40-90-1] to the right, to disconnect the power supply from the battery.

Drain the hydraulic reservoir. (See "Replacing Hydraulic Fluid" on page 10-100-3)


Figure 40-90-2



Lift the rear of the machine and place jackstands under the frame as shown.

Place a block in front and behind the front wheel [Figure 40-90-2].

Figure 40-90-3

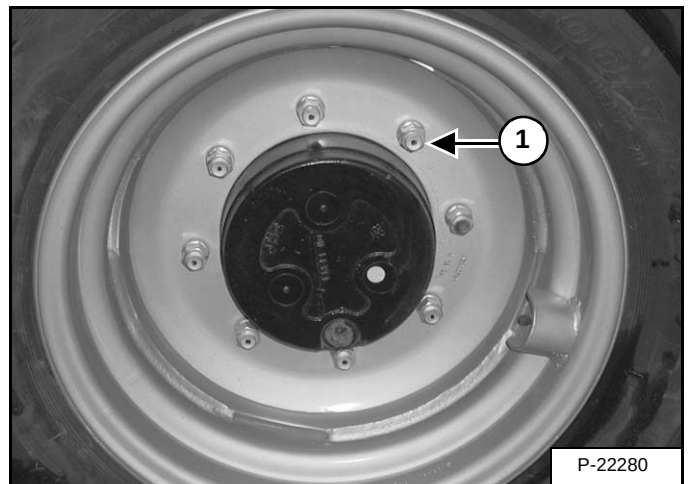


Remove the eight lug nuts and washers (Item 1) [Figure 40-90-3] from each rear tire.

Remove both rear tires.

REAR AXLE (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Removal (Cont'd)

Figure 40-90-4

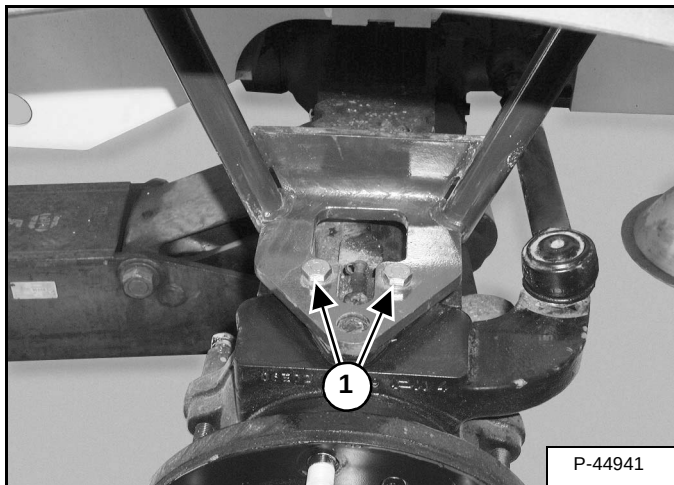

Remove the two bolts (Item 1) [Figure 40-90-4] and remove the rear fenders.

Figure 40-90-5

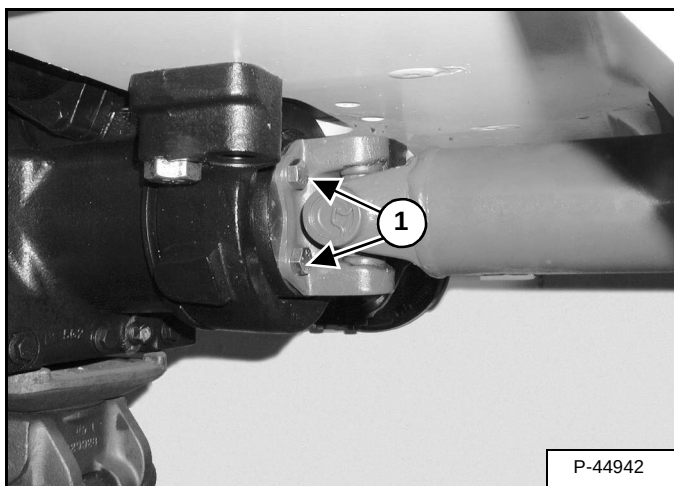

Remove the four bolts (Item 1) [Figure 40-90-5] and nuts from the driveshaft.


NOTE: Mark all hoses for correct installation.

IMPORTANT

When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.


I-2003-0888

Figure 40-90-6

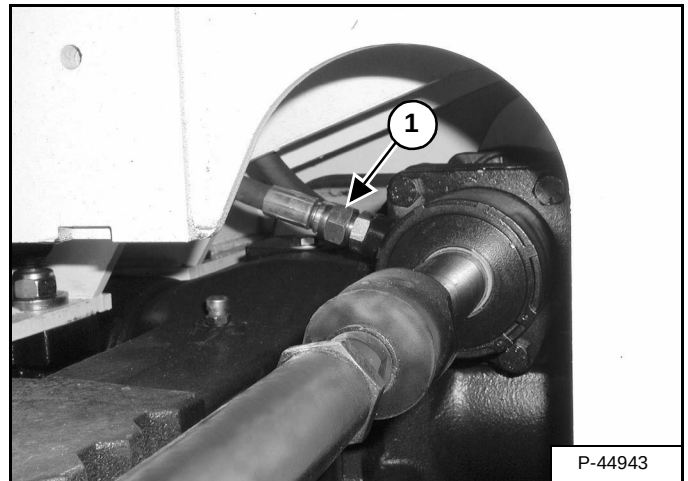

Remove the hose (Item 1) [Figure 40-90-6] from the steering cylinder.

Figure 40-90-7

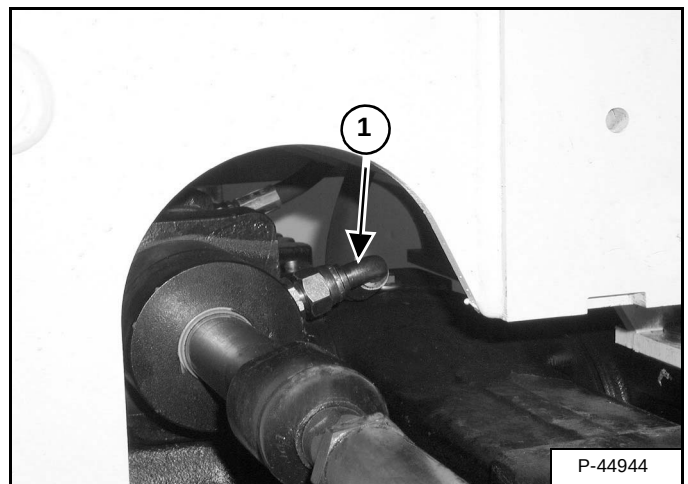


Remove the hose (Item 1) [Figure 40-90-7] from the steering cylinder.

REAR AXLE (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Removal (Cont'd)

Figure 40-90-8

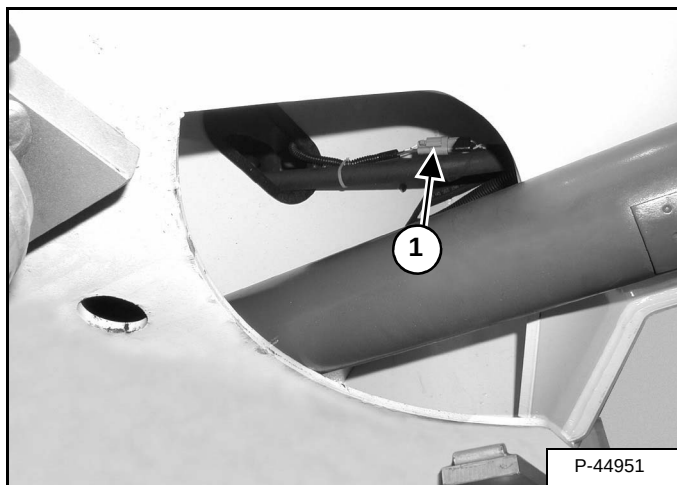


Unplug the electrical connector (Item 1) [Figure 40-90-8].

Figure 40-90-9

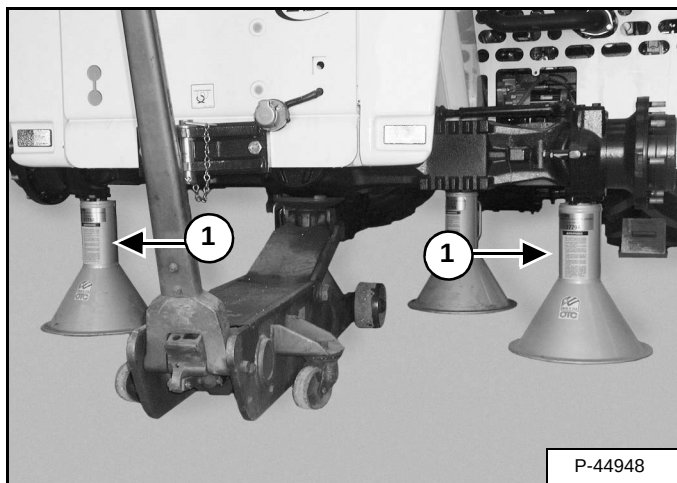


Install two jackstands (Item 1) [Figure 40-90-9] under the axle.

Figure 40-90-10

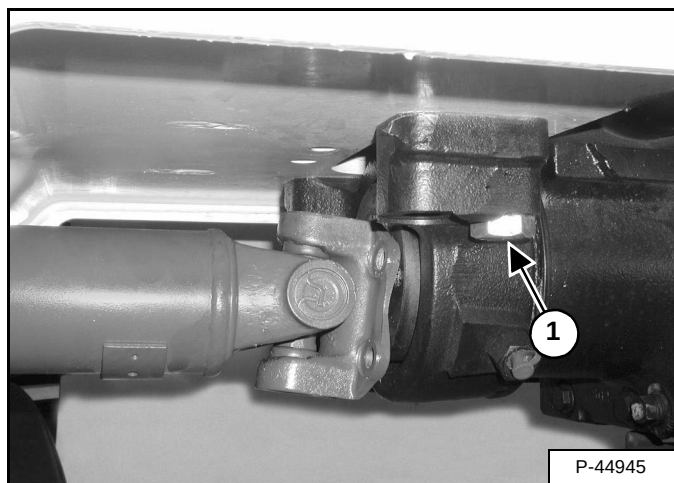

Remove the two bolts (Item 1) [Figure 40-90-10] from the front mount bracket.

Figure 40-90-11

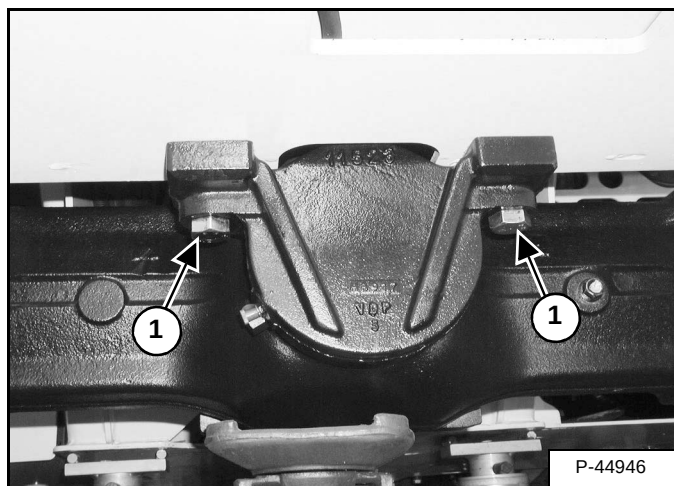

Remove the two bolts (Item 1) [Figure 40-90-11] from the rear mount bracket.

REAR AXLE (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)

Removal (Cont'd)

Figure 40-90-12



Remove the jackstands from the axle.

Have an assistant balance the axle on the floor jack and lower the floor jack slowly. Roll the axle out from under the frame [Figure 40-90-12].

Installation

Figure 40-90-13




Have an assistant balance the axle on the floor jack and roll the axle under the frame [Figure 40-90-13].

Figure 40-90-14



Raise the floor jack, lifting the axle upward and into position [Figure 40-90-14].

Figure 40-90-15

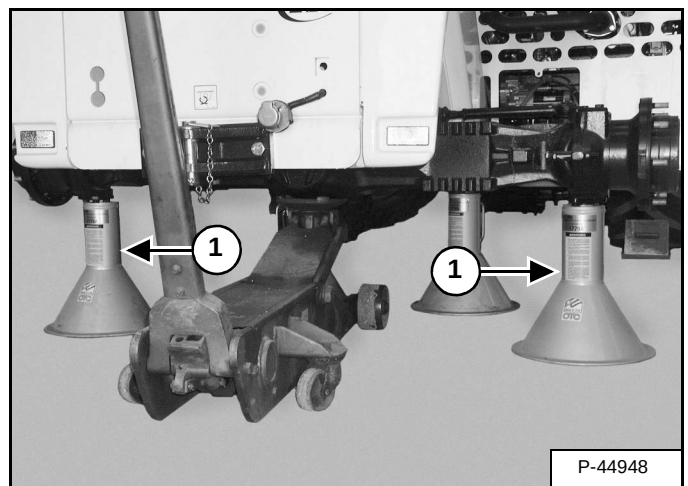


Install jackstands (Item 1) [Figure 40-90-15] under the axle.

REAR AXLE (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Installation (Cont'd)

Figure 40-90-16

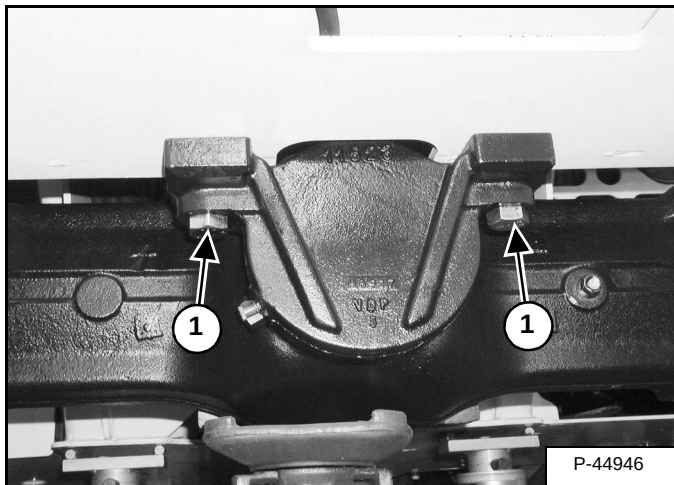


Install the two bolts (Item 1) [Figure 40-90-16] in the rear mount bracket.

Figure 40-90-17

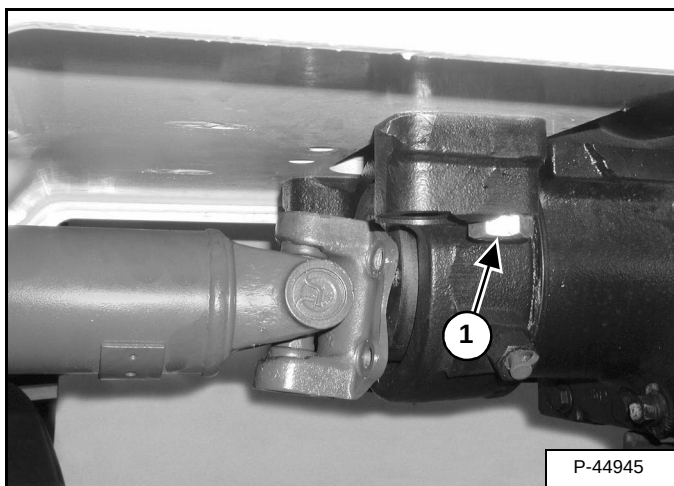


Install the two bolts (Item 1) [Figure 40-90-17] in the front mounting bracket.

Figure 40-90-18

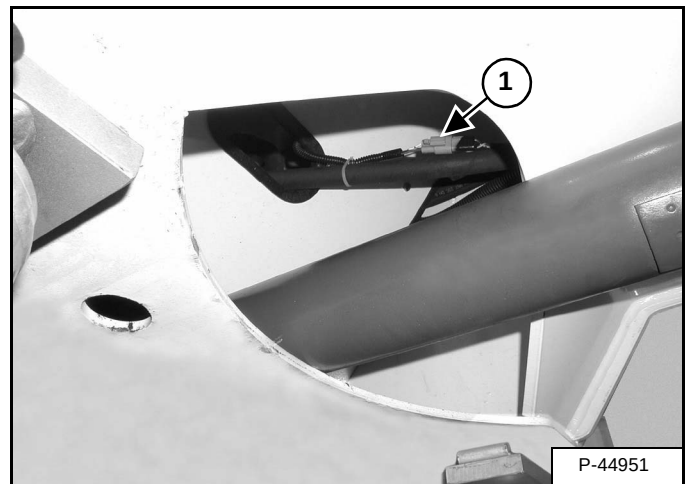

Plug the wire connector (Item 1) [Figure 40-90-18] into the wire harness.

Figure 40-90-19

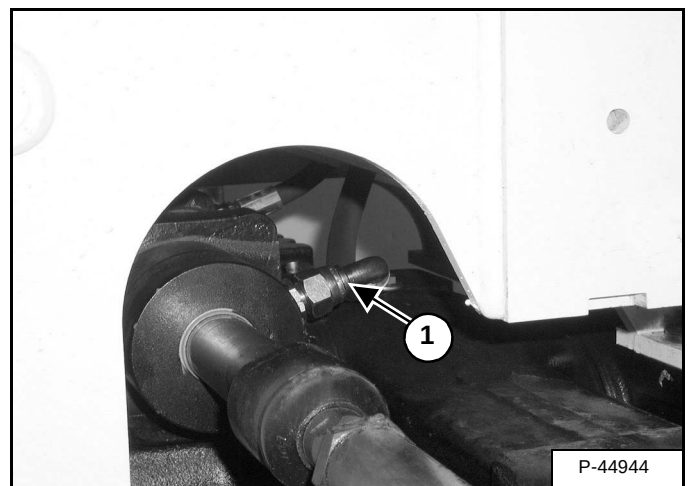


Install the hose (Item 1) [Figure 40-90-19] on the steering cylinder.

REAR AXLE(For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Installation (Cont'd)

Figure 40-90-20

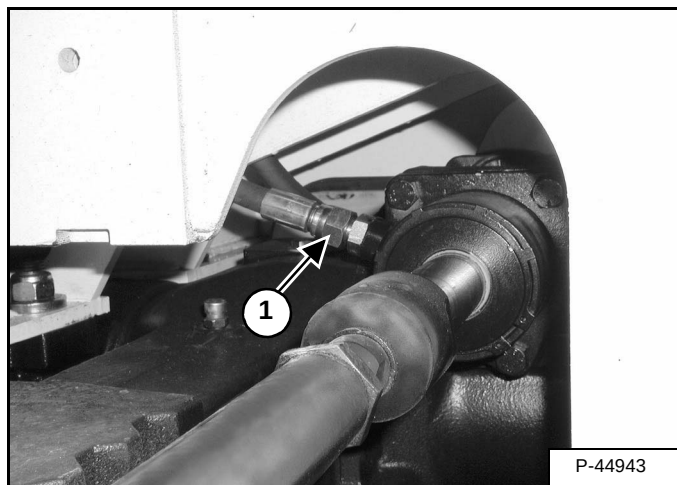


Install the hose (Item 1) [Figure 40-90-20] on the steering cylinder

Figure 40-90-21

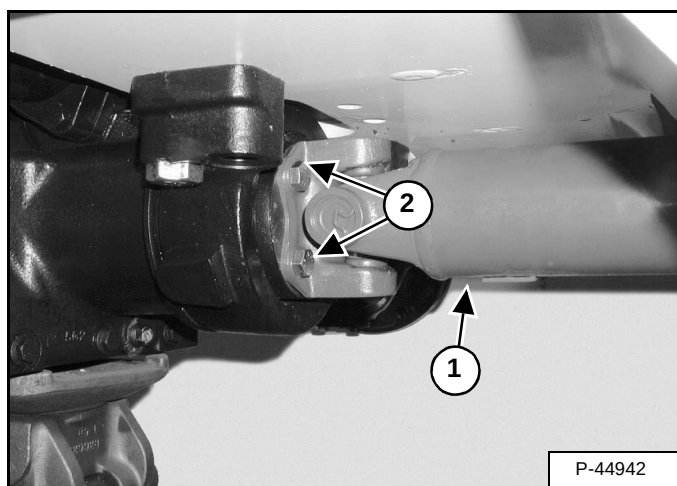


Install the driveshaft (Item 1) with four bolts (Item 2) [Figure 40-90-21]. Tighten the bolts to 87 ft.-lbs. (118 Nm) torque.

Figure 40-90-22

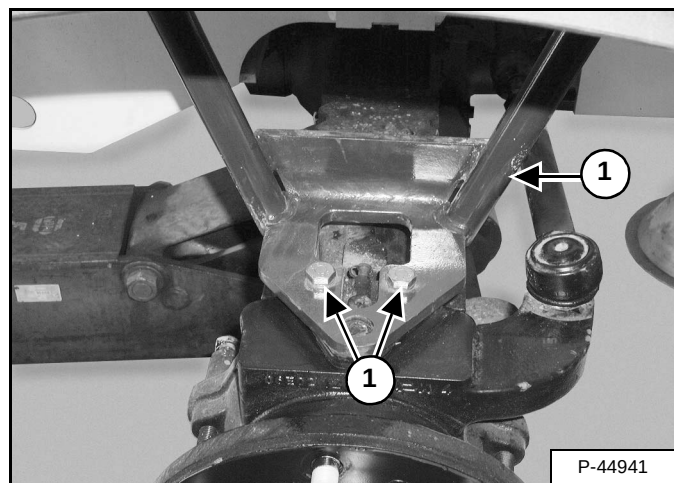

Install the rear fenders (Item 1) with two bolts (Item 2) [Figure 40-90-22].

Figure 40-90-23

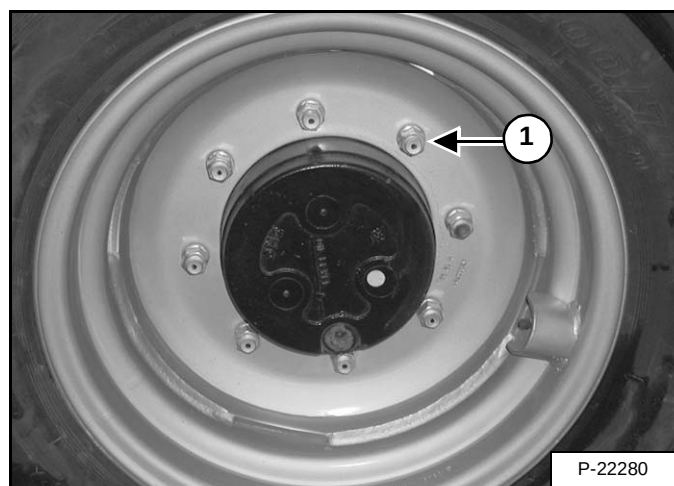

Install the rear tires with eight nuts (Item 1) [Figure 40-90-23] and washers.

Tighten the nuts to 221 ft.-lbs. (300 Nm) torque.

REAR AXLE (For S/N 362811001 - 362812000, S/N 362911001 - 362912000) (CONT'D)


Installation (Cont'd)

Figure 40-90-24



Raise the machine and remove the jackstands. Lower the machine and remove the blocks from the front tire **[Figure 40-90-24]**.

Figure 40-90-25

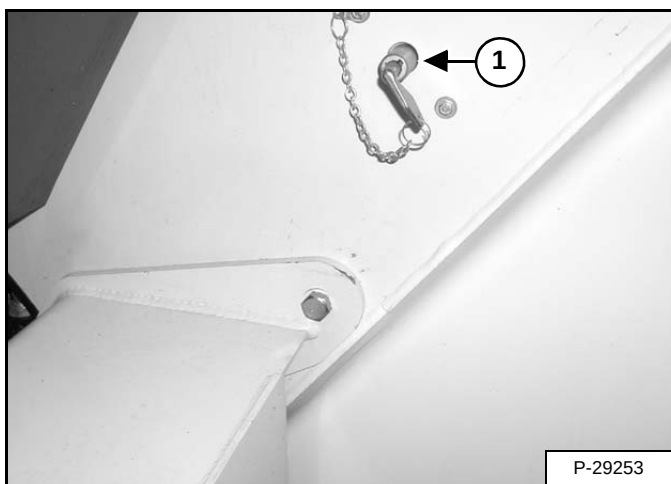

Rotate the battery disconnect switch (Item 1) **[Figure 40-90-25]** to the left, to restore the power supply from the battery.



Bobcat®

REAR AXLE (For S/N 362812001 and Above, S/N 362912001 and Above)

Removal

Position the machine on the work surface.


Relieve hydraulic pressure.

WARNING

Hydraulic fluid escaping under pressure can have sufficient force to enter a person's body by penetrating the skin. This can cause serious injury and possible death if proper medical treatment by a physician familiar with this injury is not received immediately.

W-2145-0290

Figure 40-91-1

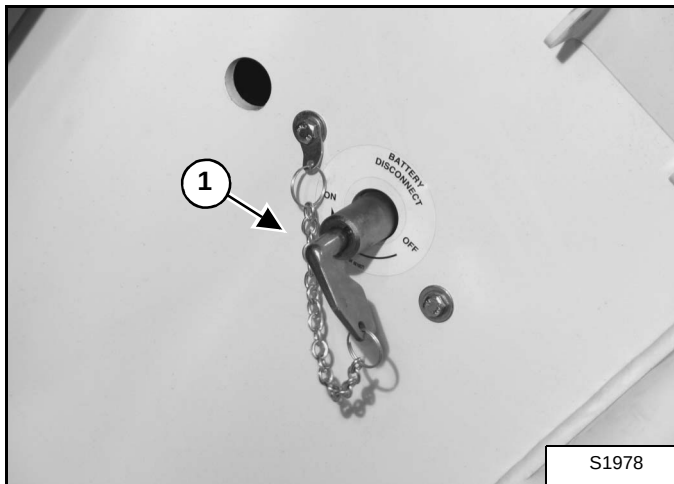

Rotate the battery disconnect switch (item 1) [Figure 40-91-1] to the right, to disconnect the power supply from the battery.

Drain the hydraulic reservoir. (See "Replacing Hydraulic Fluid" on page 10-100-3)


Figure 40-91-2



Lift the rear of the machine and place jack stands under the frame as shown.

Place a block in front and behind the front wheel [Figure 40-91-2].

Figure 40-91-3

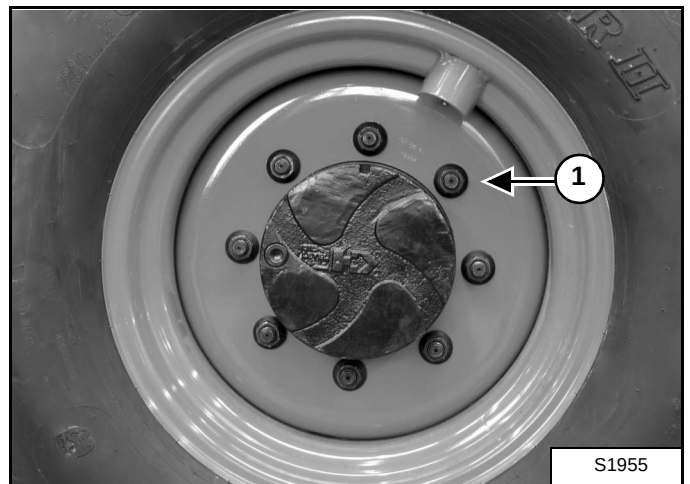


Remove the eight lug nuts and washers (item 1) [Figure 40-91-3] from each rear tire.

Remove both rear tires.

REAR AXLE (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Removal (Cont'd)

Figure 40-91-4

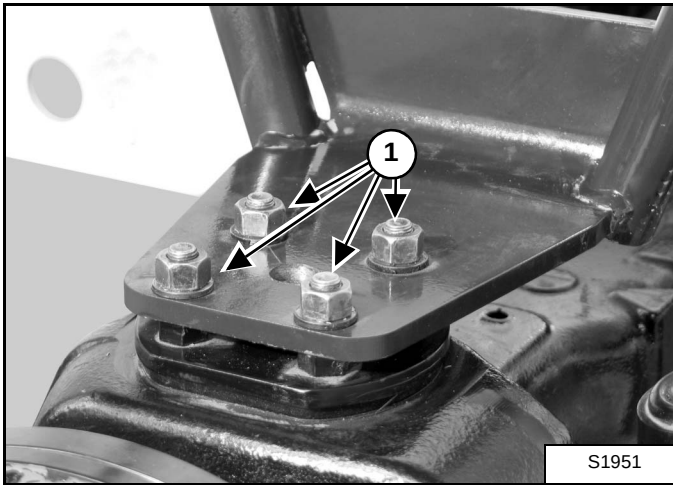

Remove the four bolts (item 1) [Figure 40-91-4] and remove the rear fenders.

Figure 40-91-5

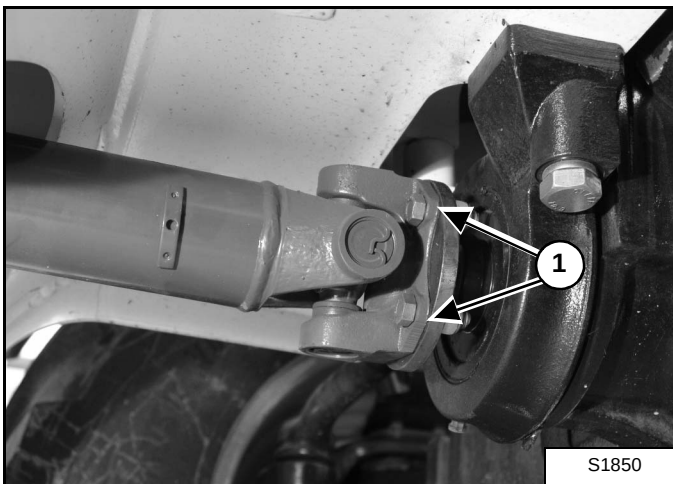

Remove the four bolts (item 1) [Figure 40-91-5] and nuts from the driveshaft.


NOTE: Mark all hoses for correct installation.

IMPORTANT

When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.


I-2003-0888

Figure 40-91-6

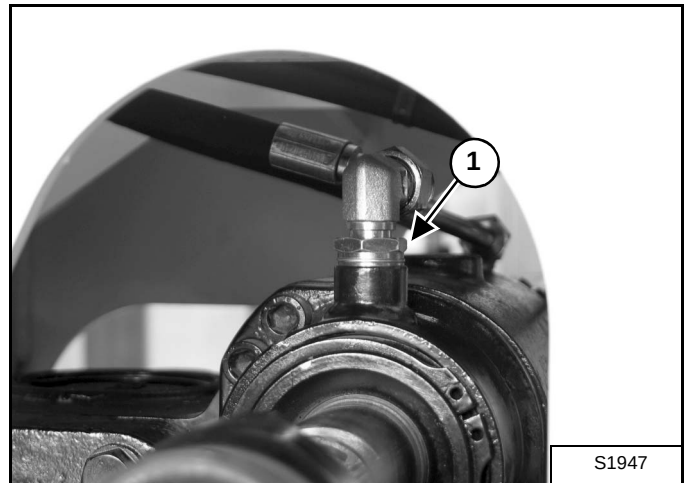

Remove the hose (item 1) [Figure 40-91-6] from the steering cylinder.

Figure 40-91-7

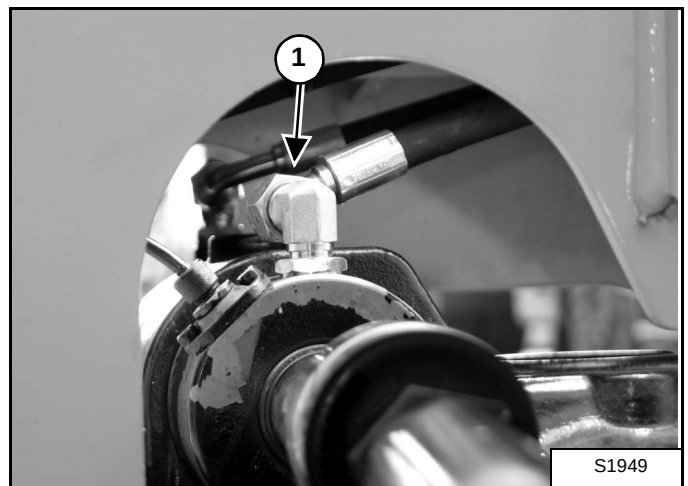


Remove the hose (item 1) [Figure 40-91-7] from the steering cylinder.

REAR AXLE (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Removal (Cont'd)

Figure 40-91-8

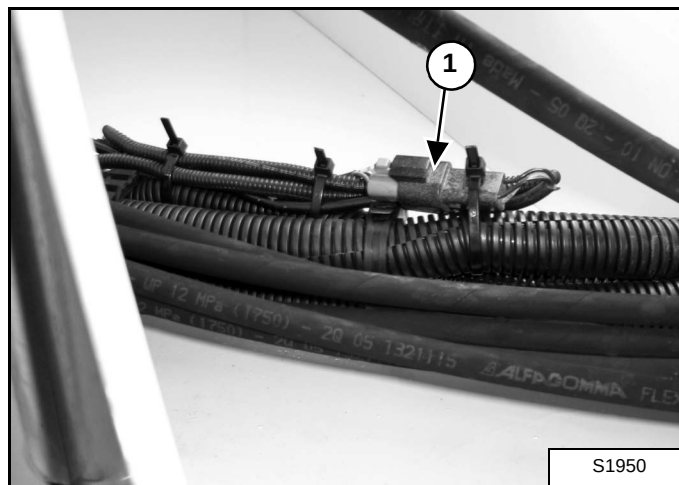


Unplug the electrical connector (item 1) [Figure 40-91-8].

Figure 40-91-9

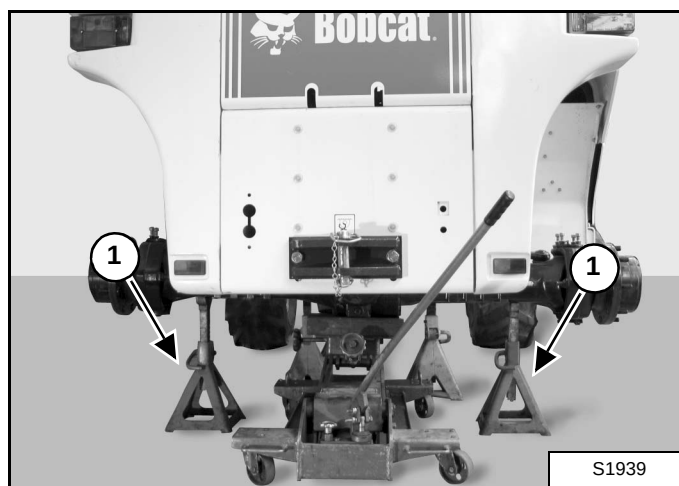


Install two jack stands (item 1) [Figure 40-91-9] under the axle.

Figure 40-91-10

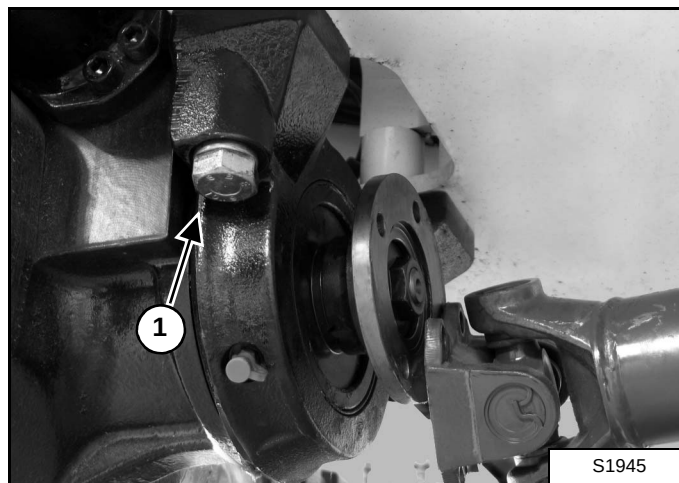

Remove the two bolts (item 1) [Figure 40-91-10] from the front mount bracket.

Figure 40-91-11

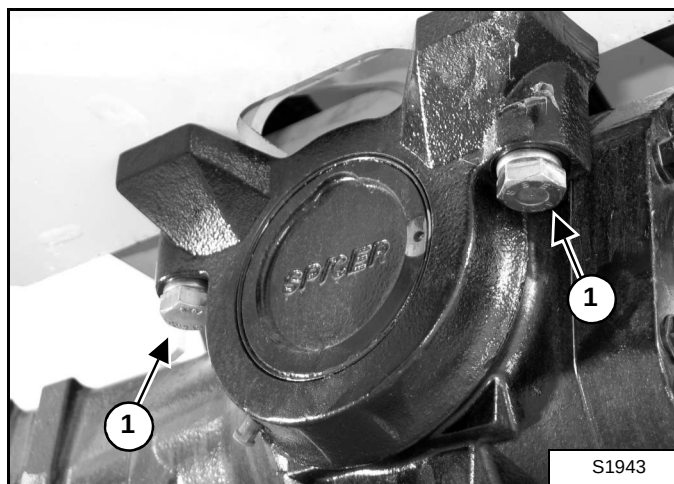

Remove the two bolts (item 1) [Figure 40-91-11] from the rear mount bracket.

REAR AXLE (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)

Removal (Cont'd)

Figure 40-91-12




S1936

Remove the jack stands from the axle.

Have an assistant balance the axle on the floor jack and lower the floor jack slowly. Roll the axle out from under the frame [Figure 40-91-12].

Installation


Figure 40-91-13

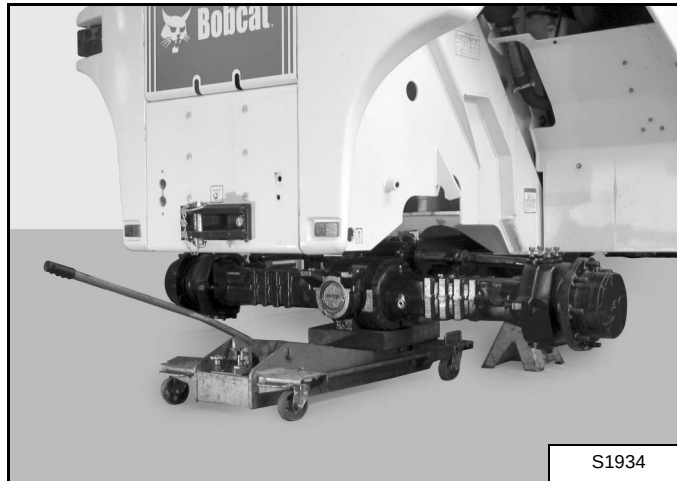

S1934

Have an assistant balance the axle on the floor jack and roll the axle under the frame [Figure 40-91-13].


Figure 40-91-14

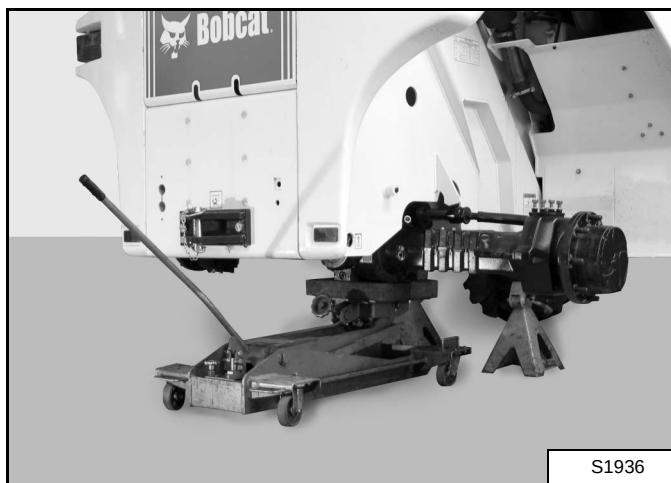

S1936

Raise the floor jack, lifting the axle upward and into position [Figure 40-91-14].

Figure 40-91-15

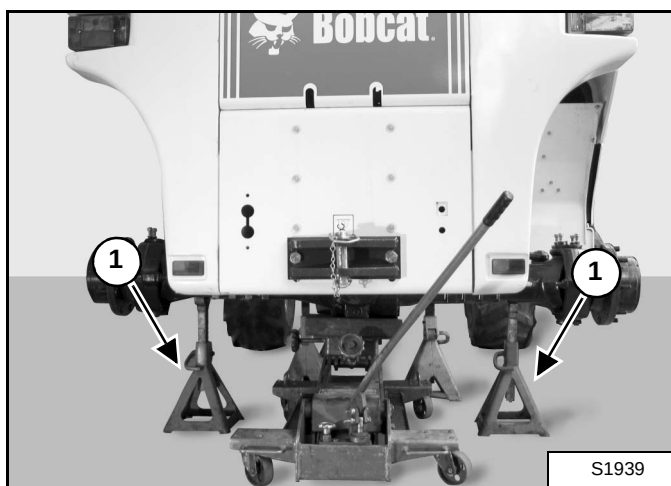


S1939

Install jack stands (item 1) [Figure 40-91-15] under the axle.

REAR AXLE (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Installation (Cont'd)

Figure 40-91-16

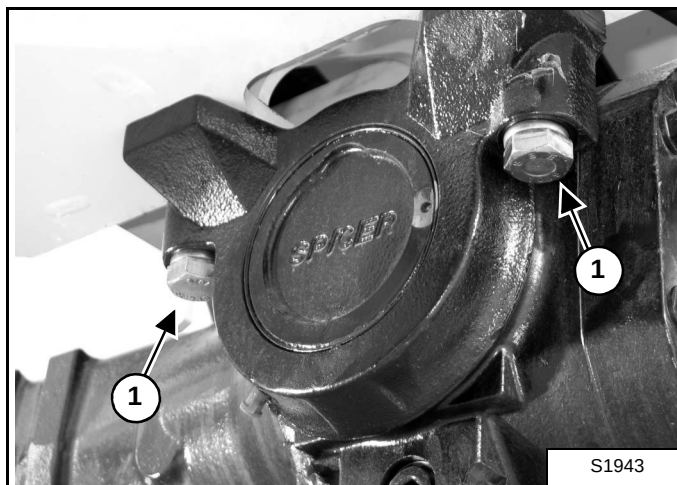


Install the two bolts (item 1) [Figure 40-91-16] in the rear mount bracket.

Figure 40-91-17

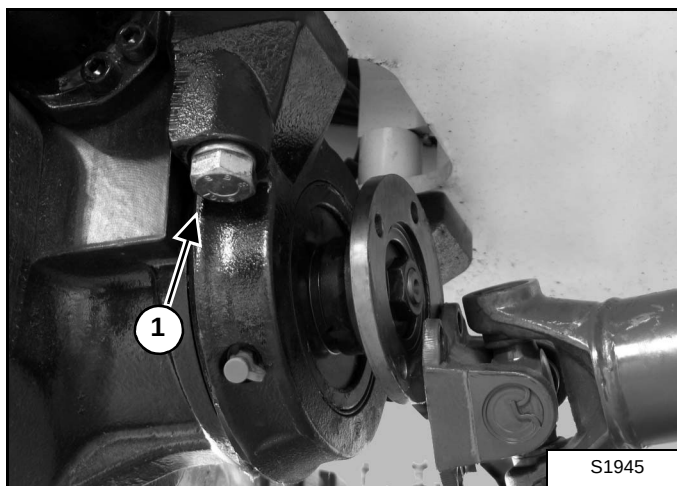


Install the two bolts (item 1) [Figure 40-91-17] in the front mounting bracket.

Figure 40-91-18

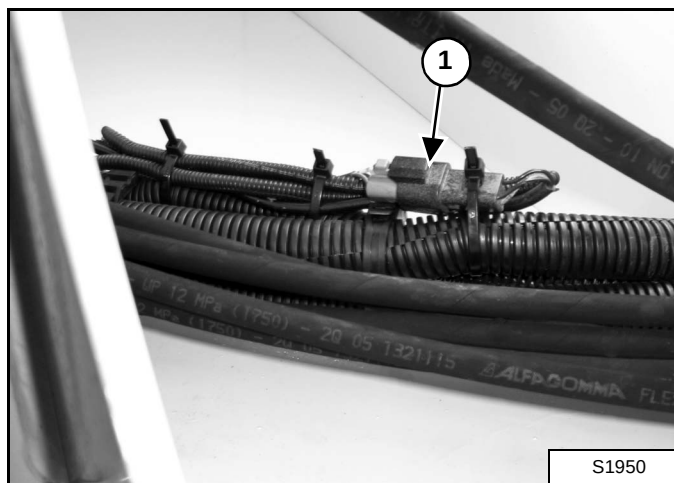

Plug the wire connector (item 1) [Figure 40-91-18] into the wire harness.

Figure 40-91-19

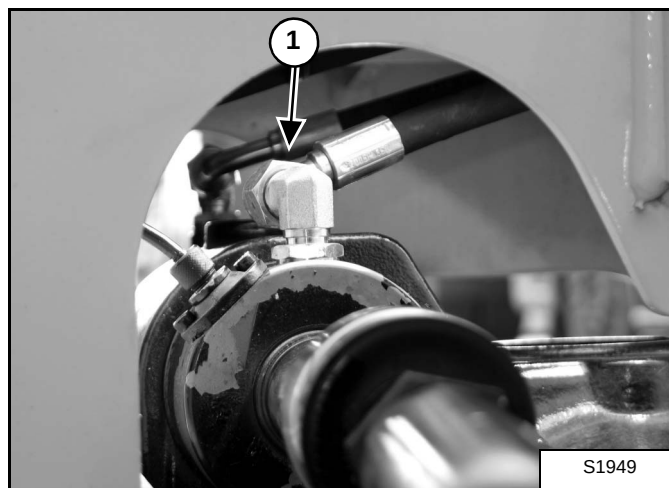


Install the hose (item 1) [Figure 40-91-19] on the steering cylinder.

REAR AXLE (For S/N 362812001 and Above, S/N 362912001 and Above) CONT'D)


Installation (Cont'd)

Figure 40-91-20

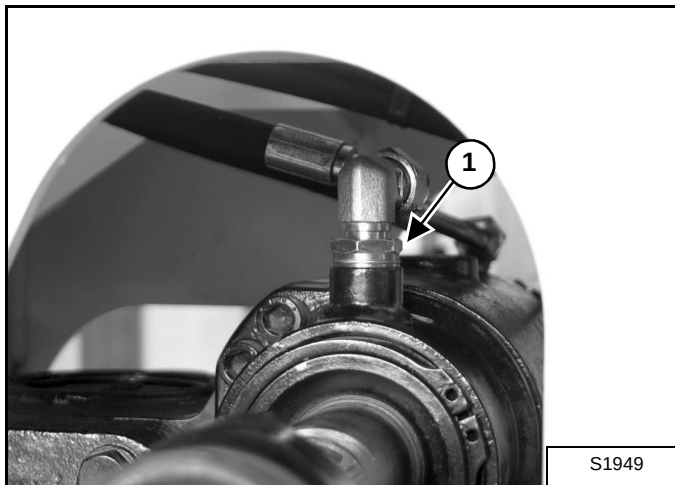


Install the hose (item 1) [Figure 40-91-20] on the steering cylinder

Figure 40-91-21

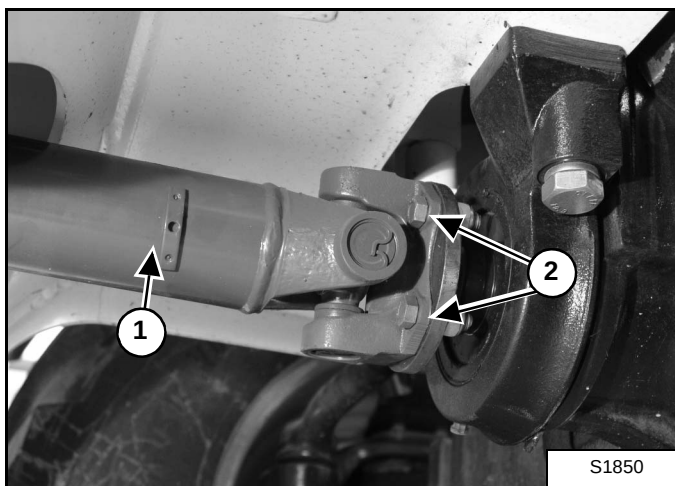


Install the driveshaft (item 1) with four bolts (item 2) [Figure 40-91-21]. Tighten the bolts to 87 ft.-lbs. (118 Nm) torque.

Figure 40-91-22

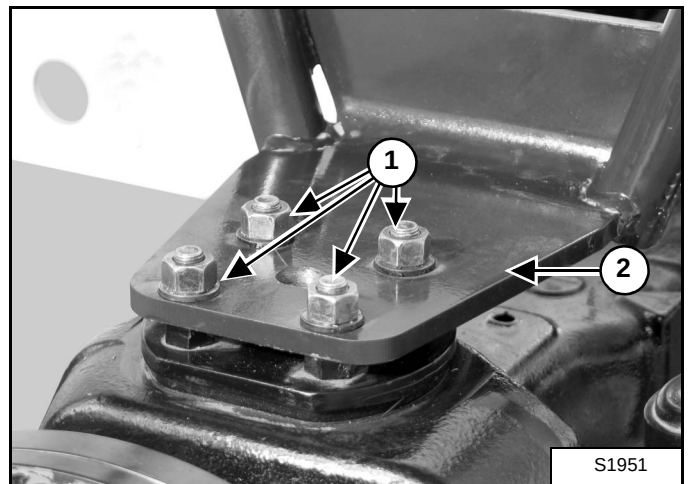

Install the rear fenders (item 1) with four bolts (item 2) [Figure 40-91-22].

Figure 40-91-23

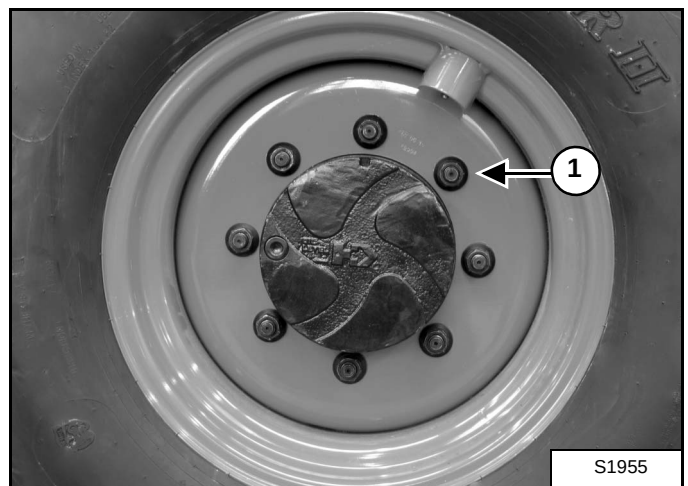


Install the rear tires with eight nuts (item 1) [Figure 40-91-23] and washers.

Tighten the nuts to 221 ft.-lbs. (300 Nm) torque.

REAR AXLE (For S/N 362812001 and Above, S/N 362912001 and Above) (CONT'D)


Installation (Cont'd)

Figure 40-91-24

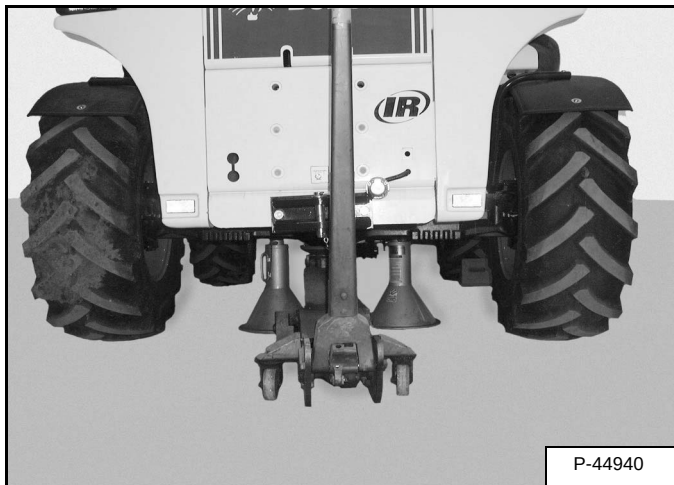

Raise the machine and remove the jack stands. Lower the machine and remove the blocks from the front tire **[Figure 40-91-24]**.

Figure 40-91-25

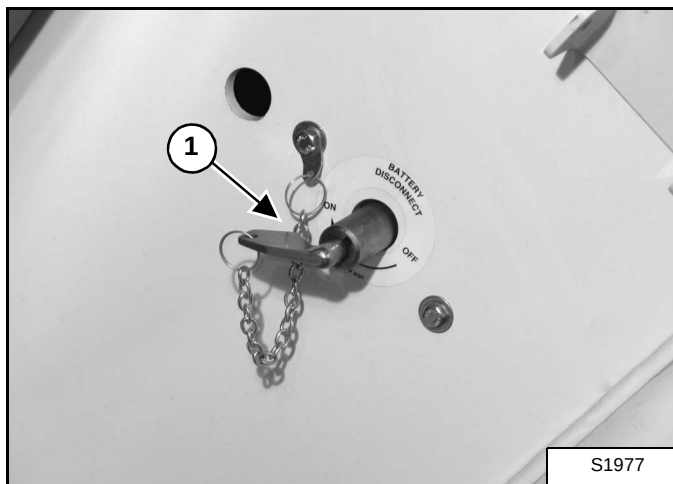

Rotate the battery disconnect switch (item 1) **[Figure 40-91-25]** to the left, to restore the power supply from the battery.



Bobcat®

MAIN FRAME

AIR INTAKE COWLING	50-71-1
Removal And Installation.	50-71-1
BOOM ASSEMBLY.....	50-30-1
Removal And Installation.	50-30-1
DASH COVER/STEERING COLUMN COVER	50-130-1
Removal And Installation.	50-130-1
ENGINE COVER	50-70-1
Gas Cylinder Removal And Installation.	50-70-1
Removal And Installation.	50-70-1
FENDER.....	50-110-1
Removal And Installation.	50-110-1
FUEL TANK	50-80-1
Removal And Installation.	50-80-1
INNER BOOM.....	50-40-1
Installation	50-40-3
Removal	50-40-1
JOYSTICK PANEL	50-140-1
Removal And Installation.	50-140-1
OPERATOR CAB	50-10-1
Removal and Installation	50-10-1
OPERATOR SEAT	50-20-1
Not available at time of printing.	50-20-1
PIVOT LINK	50-120-1
Removal And Installation.	50-120-1
QUICK TACH	50-90-1
Removal And Installation.	50-90-1
REAR WEIGHTS	50-100-1
Removal And Installation.	50-100-1
WEAR PADS (FRONT).....	50-50-1
Removal And Installation.	50-50-1
WEAR PADS (REAR).....	50-60-1
Installation	50-60-1
Removal	50-60-1

MAIN FRAME




Bobcat®

OPERATOR CAB

Removal and Installation

Figure 50-10-1

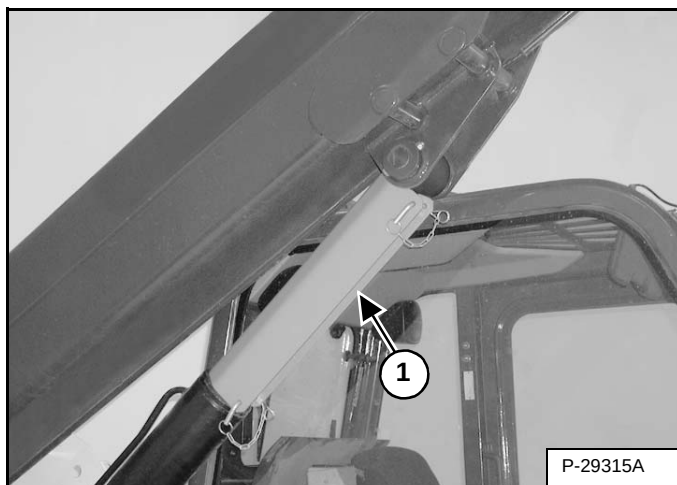


Raise the boom and install the boom stop (Item 1) [Figure 50-10-1].

Stop the engine.


Relieve hydraulic pressure.

Figure 50-10-2

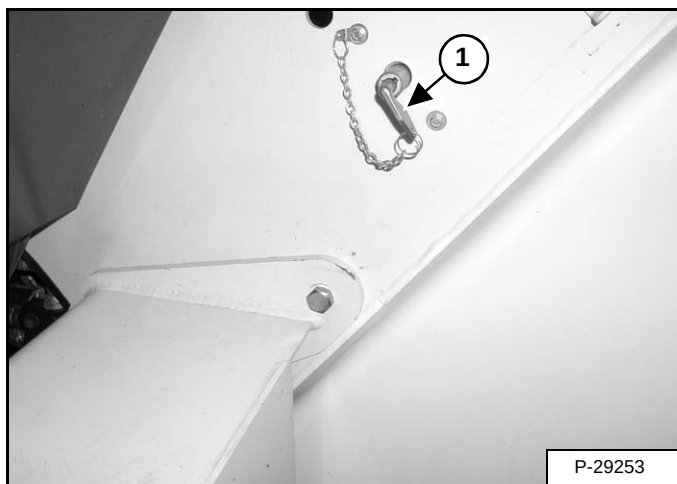

Rotate the battery disconnect switch (Item 1) [Figure 50-10-2] to the right, to disconnect the power supply from the battery.

Figure 50-10-3

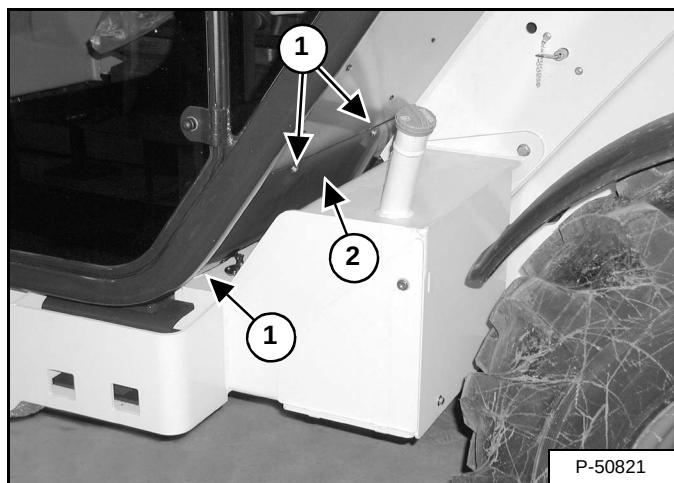


Remove the three screws (Item 1) from the access cover (Item 2) [Figure 50-10-3] located on the back of the cab.

Remove the access cover.

NOTE: Mark all hoses and electrical connectors for correct installation.

Figure 50-10-4

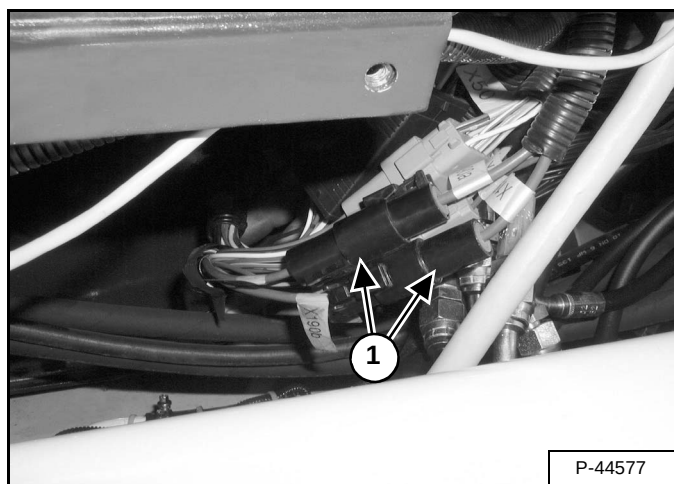


Unplug the two electrical connectors (Item 1) [Figure 50-10-4].

OPERATOR CAB (CONT'D)


Removal and Installation (Cont'd)

Figure 50-10-5

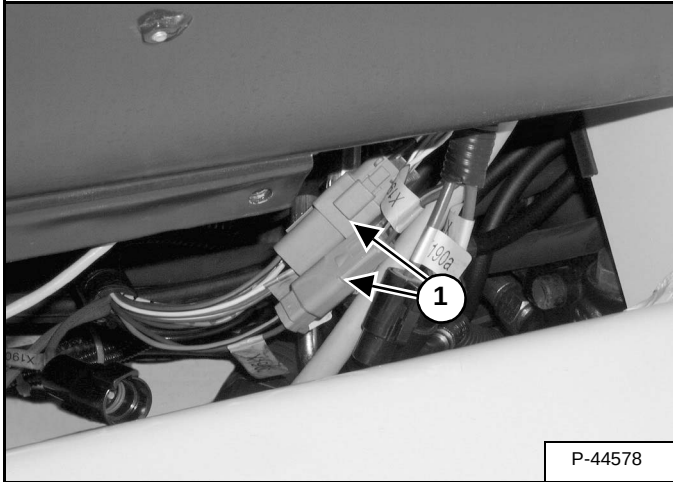


Unplug the two electrical connectors (Item 1) [Figure 50-10-5].

Figure 50-10-6

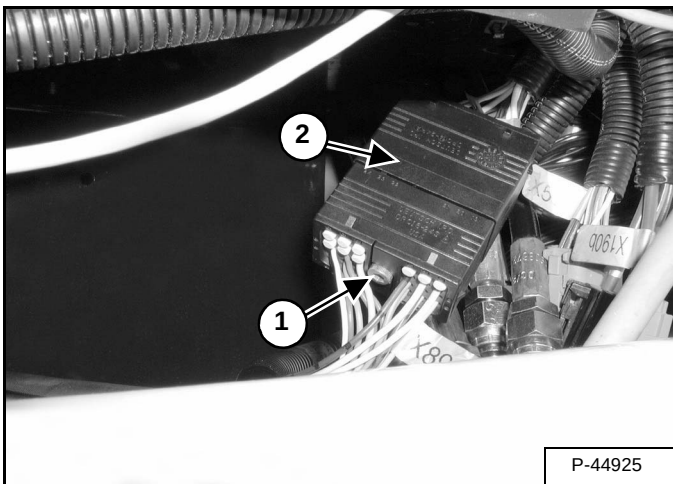

Loosen the screw (Item 1) and unplug the electrical connector (Item 2) [Figure 50-10-6].

Figure 50-10-7

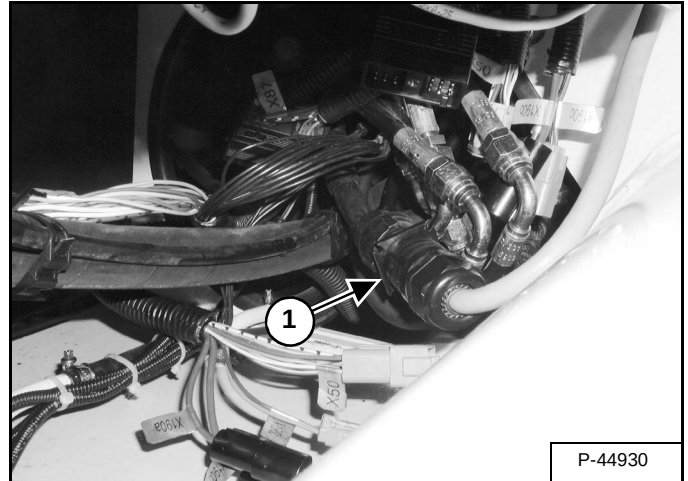

Unplug the electrical connector (Item 1) [Figure 50-10-7].

! WARNING

Hydraulic fluid escaping under pressure can have sufficient force to enter a person's body by penetrating the skin. This can cause serious injury and possible death if proper medical treatment by a physician familiar with this injury is not received immediately.

W-2145-0290

IMPORTANT


When making repairs on hydraulic system, clean the work area before disassemble and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.

I-2056-0793

OPERATOR CAB (CONT'D)


Removal and Installation (Cont'd)

Figure 50-10-8

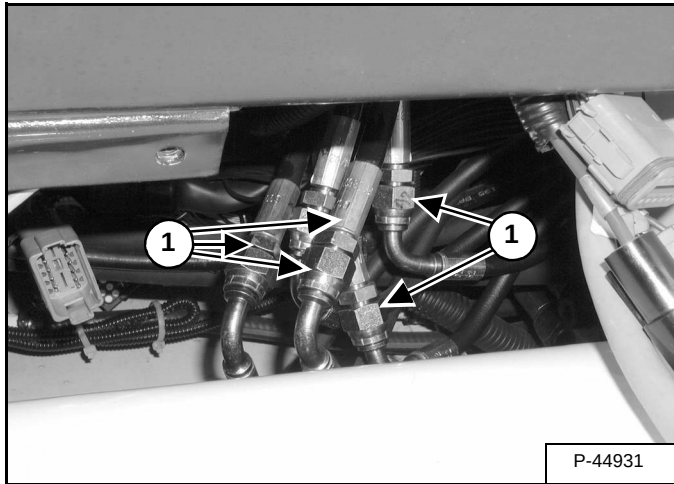


Disconnect the five hydraulic hoses (Item 1) [Figure 50-10-8].

Figure 50-10-9

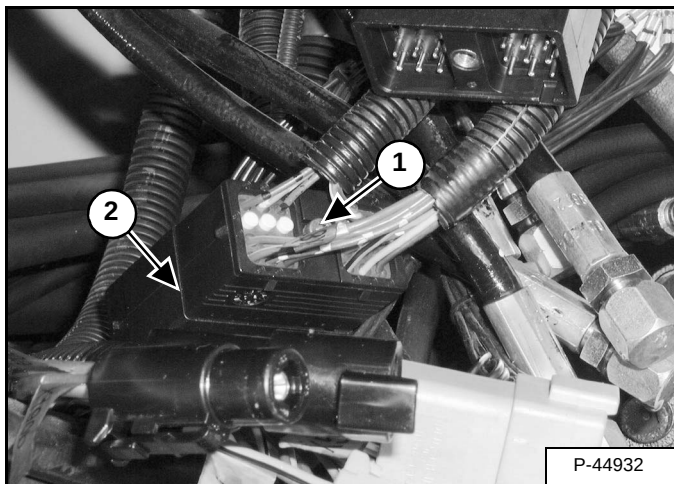


Loosen the screw (Item 1) and unplug the electrical connector (Item 2) [Figure 50-10-9].

Figure 50-10-10

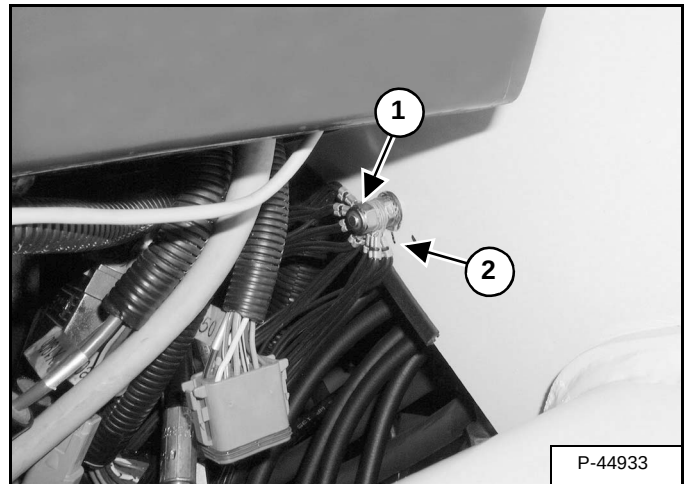

Remove the nut (Item 1) and ground wires (Item 2) [Figure 50-10-10].

Figure 50-10-11

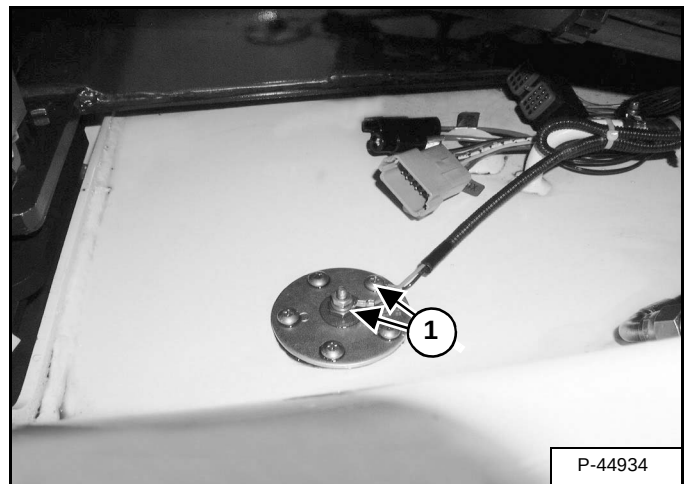

Remove the two wires (Item 1) [Figure 50-10-11] from the fuel sending unit.

OPERATOR CAB (CONT'D)

Removal and Installation (Cont'd)

Remove the travel/signal levers. (See "Removal And Installation" on page 60-70-1)


Remove the instrument panel. (See "Removal And Installation" on page 60-80-1.)

Remove the switch panel. (See "SWITCH PANEL" on page 60-90-1)

Remove the dash cover/steering column cover. (See "Removal And Installation" on page 50-130-1)

Drain the radiator. (See "Removal And Installation" on page 70-50-1)


Figure 50-10-12

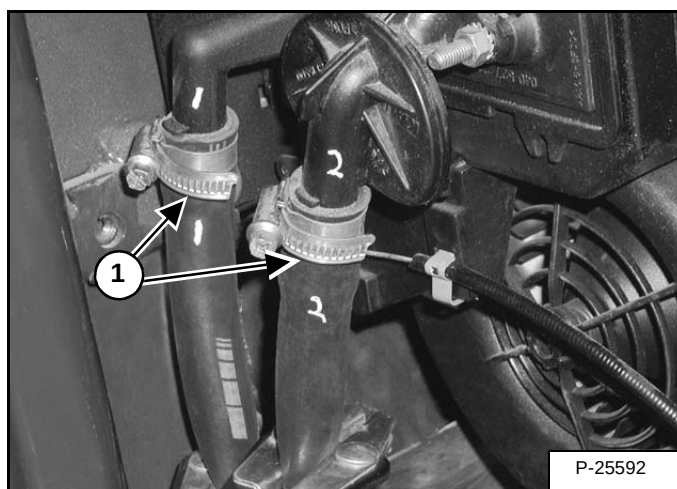

Remove the heater hoses (Item 1) [Figure 50-10-12] from the heater assembly.

NOTE: Mark the hoses for correct installation.


Figure 50-10-13

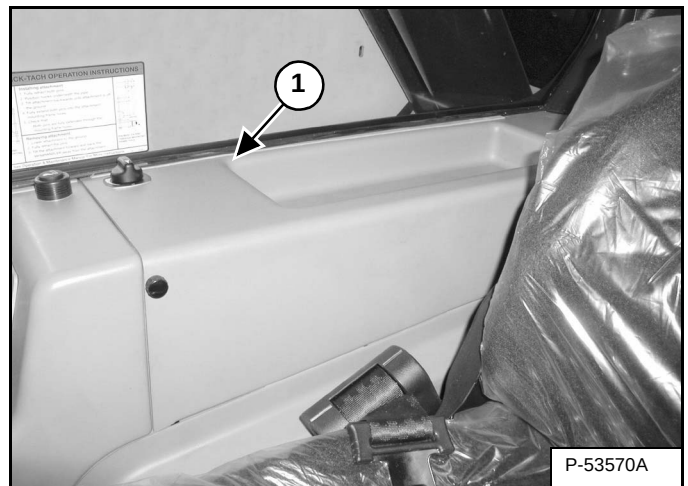

Remove the fuse box cover (Item 1) [Figure 50-10-13].

Open the engine cover.

Figure 50-10-14

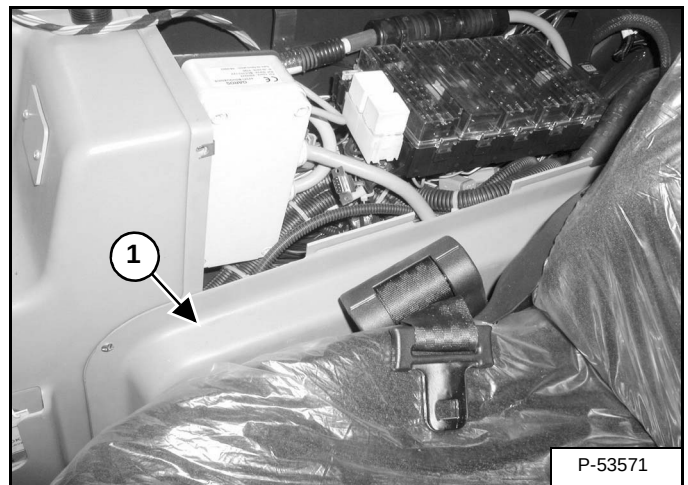


Remove the side cover (Item 1) [Figure 50-10-14].

OPERATOR CAB (CONT'D)

Removal and Installation (Cont'd)


Figure 50-10-15

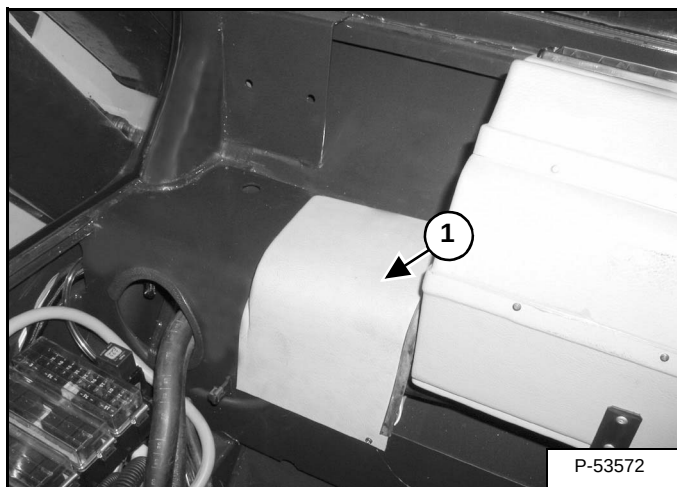

Remove the cover (Item 1) [Figure 50-10-15].


If machine is equipped with air conditioning, remove the refrigerant from the A/C system. (See "Reclamation Procedure" on page 80-100-1)

Figure 50-10-16

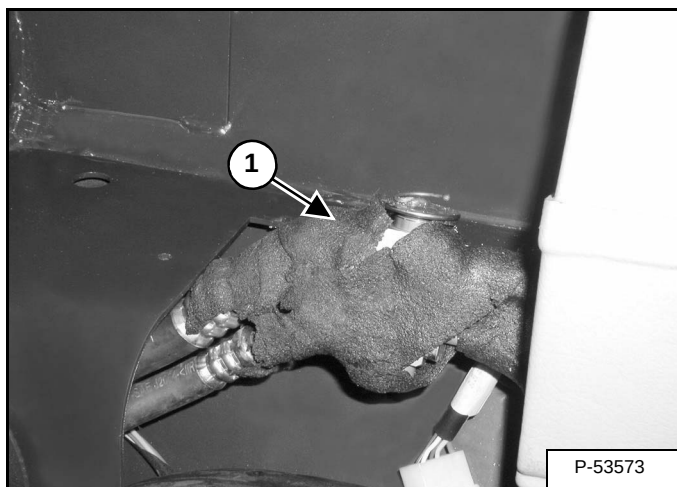

Temporarily remove the protective covering (Item 1) [Figure 50-10-16] from the A/C hoses and expansion valve.


Figure 50-10-17

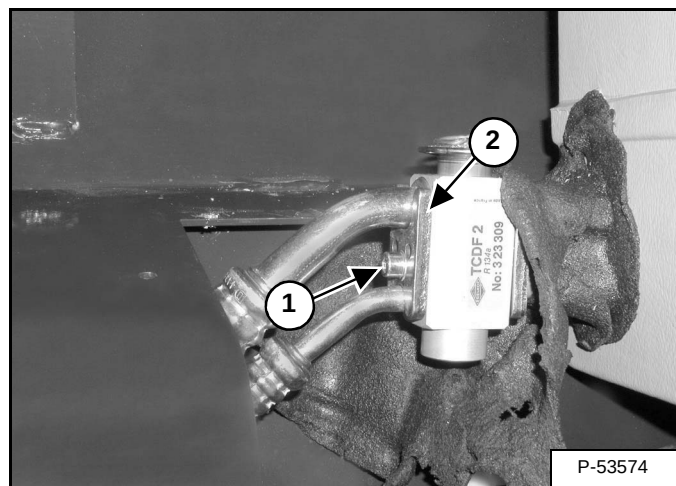

Remove the bolt (Item 1) and plate (Item 2) [Figure 50-10-17]. Remove the A/C hoses.

NOTE: Plug the A/C hoses to prevent contamination.

Figure 50-10-18

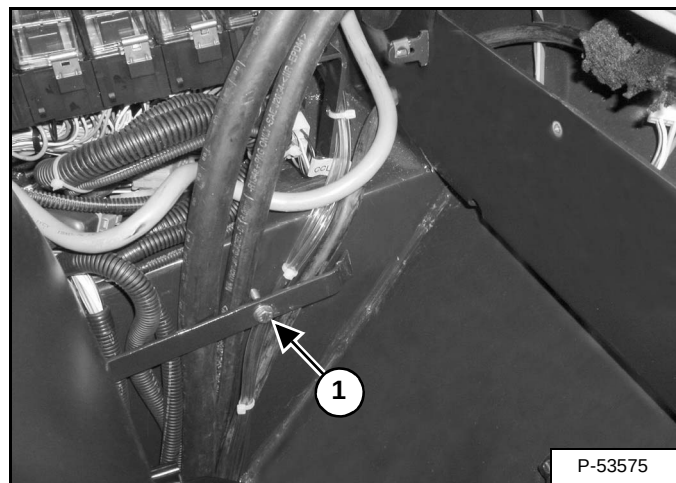


Loosen the mounting bracket bolt (Item 1) [Figure 50-10-18].

OPERATOR CAB (CONT'D)


Removal and Installation (Cont'd)

Figure 50-10-19

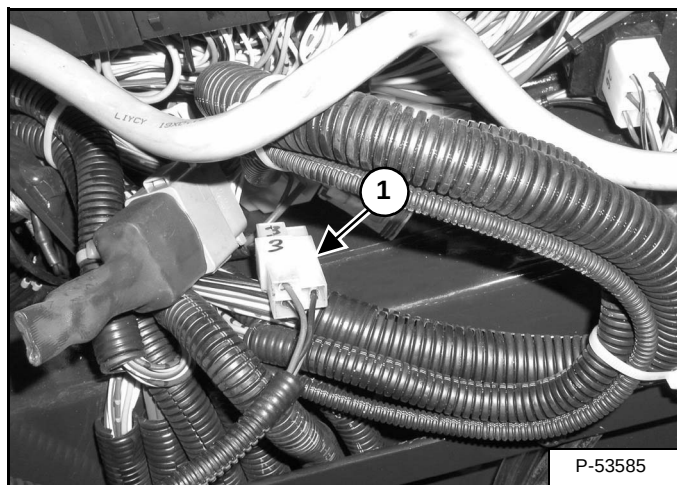


Unplug the connector (Item 1) [Figure 50-10-19] located under the fuse box.

Figure 50-10-20

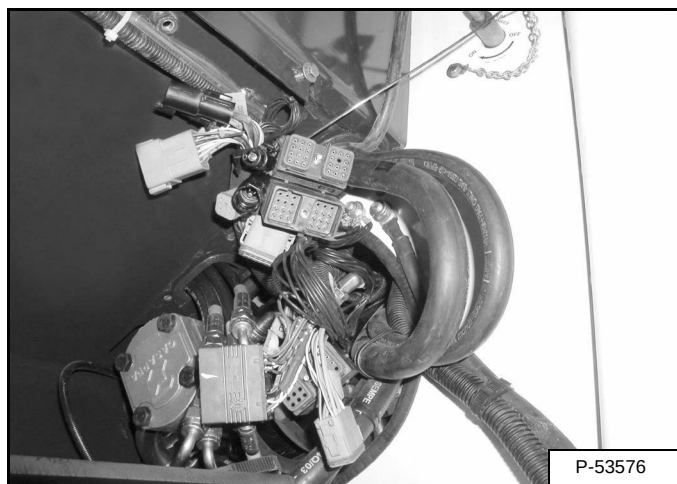

Remove the two A/C hoses, heater hoses and harness from the rear corner of the cab [Figure 50-10-20].


Figure 50-10-21

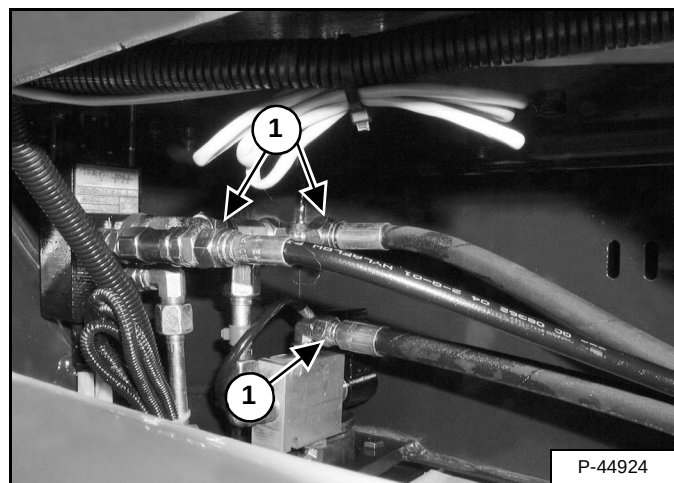

Remove the three hoses (Item 1) [Figure 50-10-21].

Remove any necessary nylon ties.

Figure 50-10-22

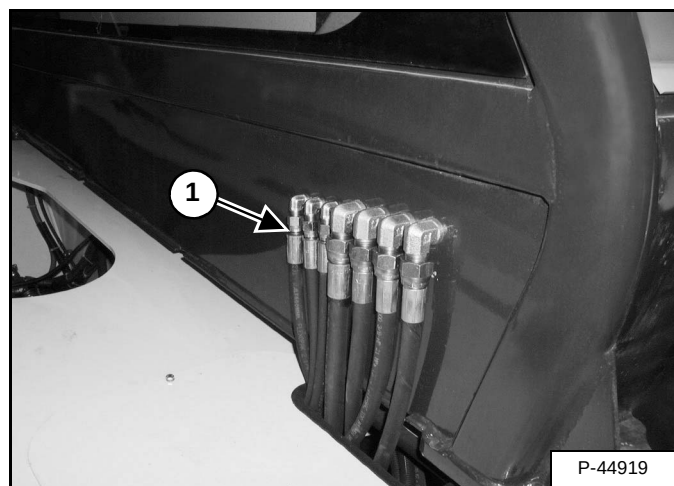


Remove the seven hoses on the right side of the cab [Figure 50-10-22].

Open the engine cover.

OPERATOR CAB (CONT'D)


Removal and Installation (Cont'd)

Figure 50-10-23

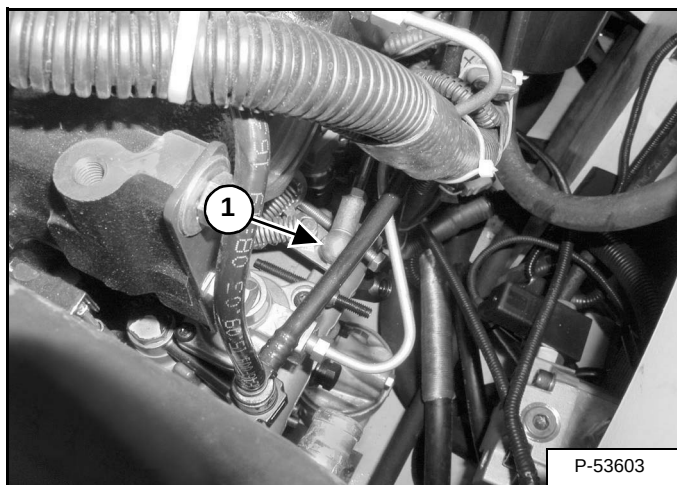

Remove the engine speed control cable (Item 1) [Figure 50-10-23].

Figure 50-10-24

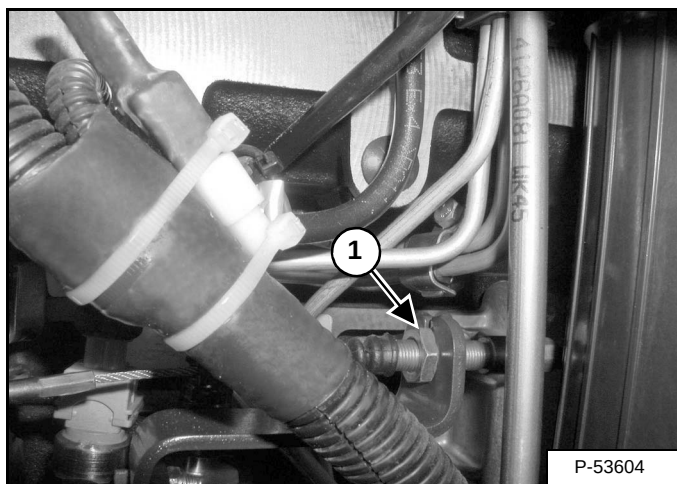


Remove the engine speed control cable (Item 1) [Figure 50-10-24] from the bracket.

Remove any necessary nylon ties, carefully remove the speed control cable from the engine compartment and into the cab.

NOTE: Adjust the engine speed control cable during installation. (See "Removal And Installation" on page 70-20-1)

Close the engine cover.

Figure 50-10-25

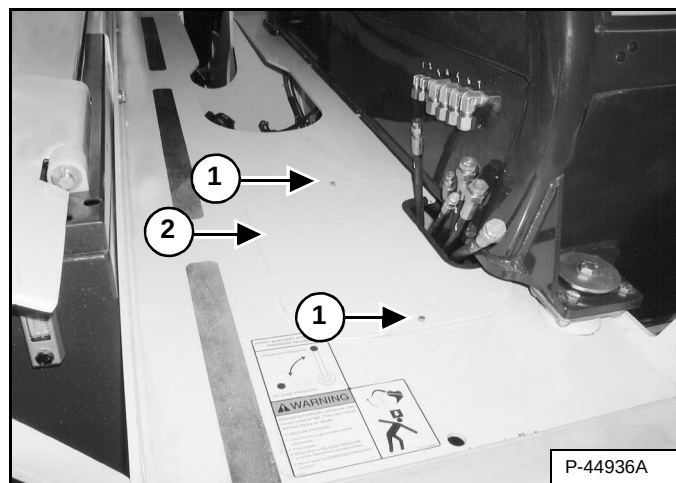

Remove the two screws (Item 1) from the access panel (Item 2) [Figure 50-10-25]. Remove the access panel.

Figure 50-10-26




Install a hoist to lift and support the cab [Figure 50-10-26].

OPERATOR CAB (CONT'D)


Removal and Installation (Cont'd)

Figure 50-10-27

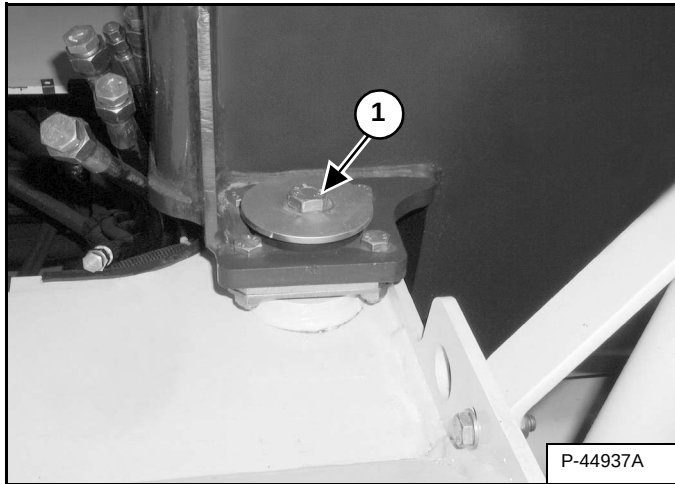


Remove the cab mount bolt (Item 1) [Figure 50-10-27] from the front of the cab.

Figure 50-10-28

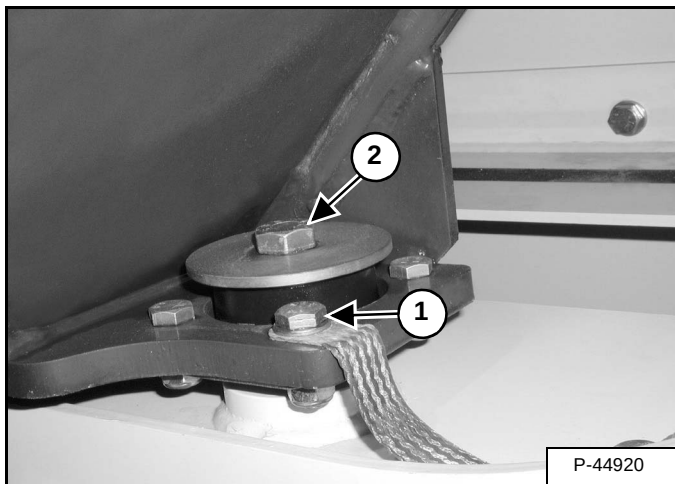


Remove the grounding strap (Item 1) and rear mounting bolt (Item 2) [Figure 50-10-28].

Figure 50-10-29

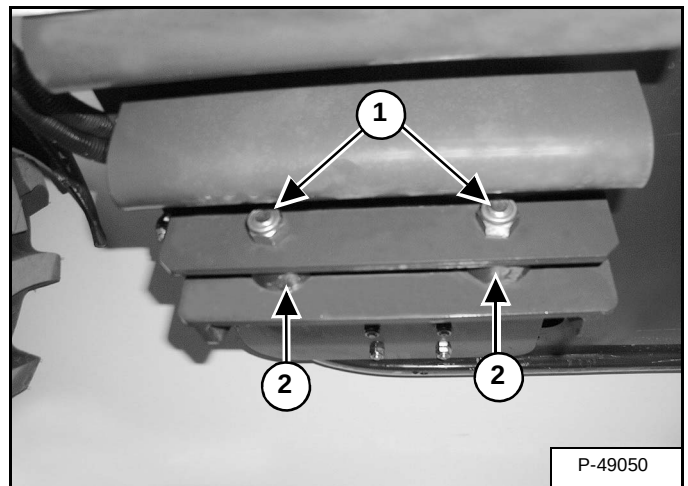

Remove the two bolts (Item 1) and rubber cushions (Item 2) [Figure 50-10-29].

Figure 50-10-30

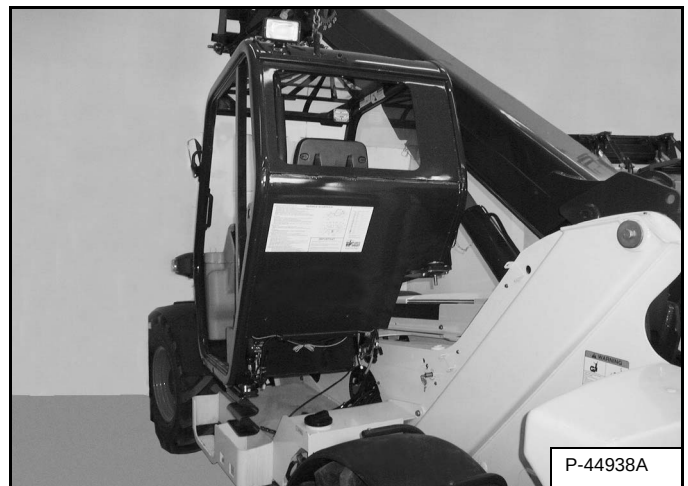

Lift and remove the cab [Figure 50-10-30].

OPERATOR SEAT

Not available at time of printing




Bobcat®

BOOM ASSEMBLY

Removal And Installation


Remove the bucket positioning cylinder. (See "Removal And Installation" on page 20-30-1)

Figure 50-30-1

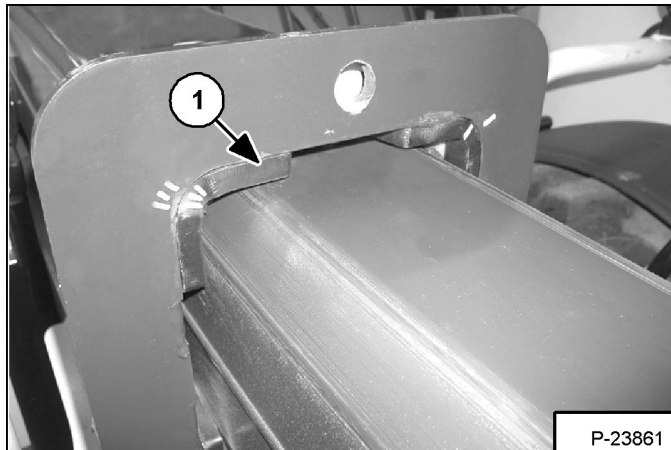


Lower the boom onto adequate stands or blocks as shown [Figure 50-30-1].

Figure 50-30-2

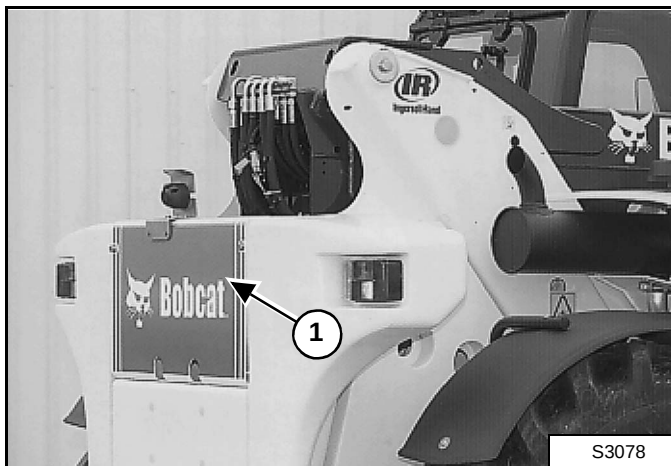


Remove the rear cover (Item 1) [Figure 50-30-2] from the machine.

Figure 50-30-3

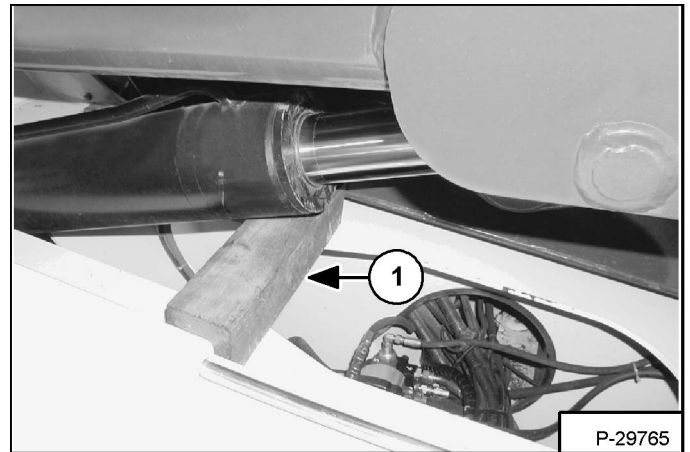

Place a wood block (Item 1) [Figure 50-30-3] under the lift cylinder.

Figure 50-30-4

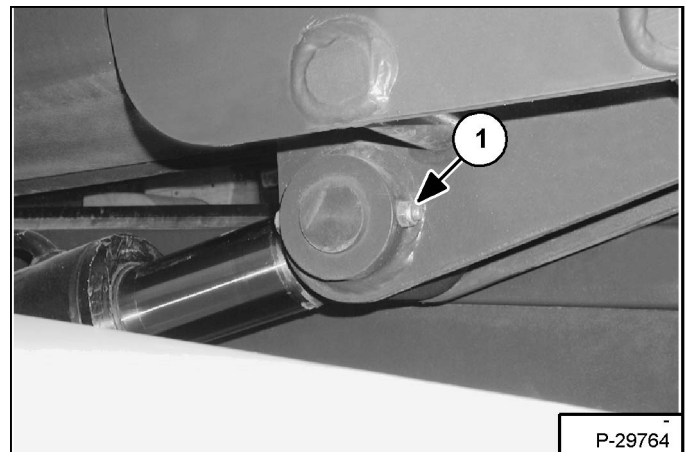


Remove the pivot pin retainer bolt (Item 1) [Figure 50-30-4] from the lift cylinder.

BOOM ASSEMBLY (CONT'D)

Removal And Installation (Cont'd)


Figure 50-30-5

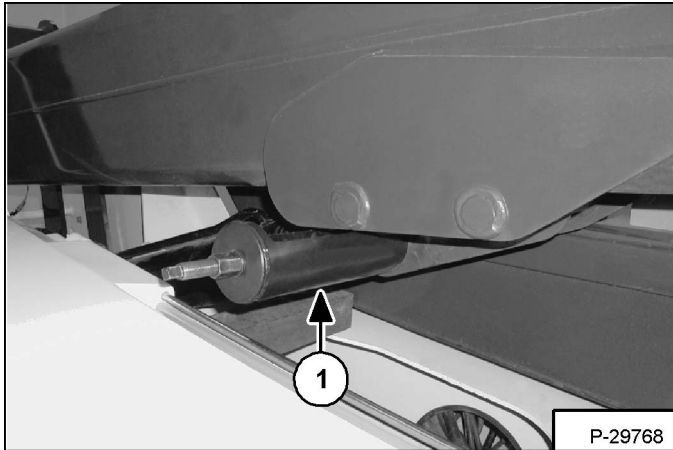

Remove the lift cylinder pivot pin using a pin removal tool (Item 1) [Figure 50-30-5]. Lower the cylinder onto the block.


NOTE: See "Removal And Installation" on page 20-20-1 for additional information on removing the lift cylinder.

Figure 50-30-6

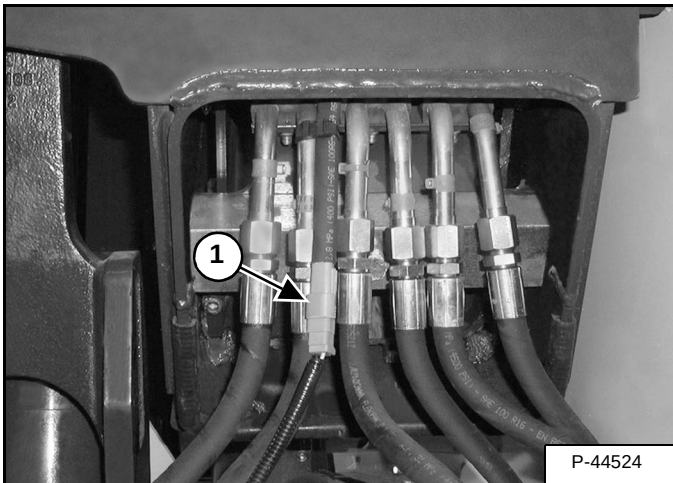

Disconnect the secondary auxiliary harness connector (Item 1) [Figure 50-30-6]. (If Equipped)

Figure 50-30-7

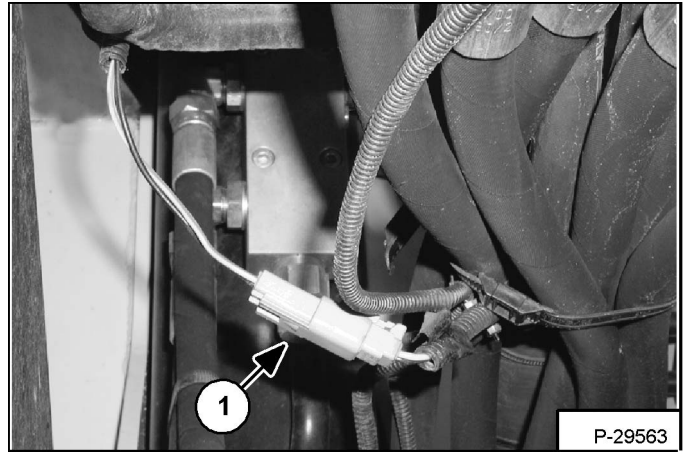


Disconnect the light harness connector (Item 1) [Figure 50-30-7]. (If Equipped)

IMPORTANT

When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.

I-2003-0888

Figure 50-30-8

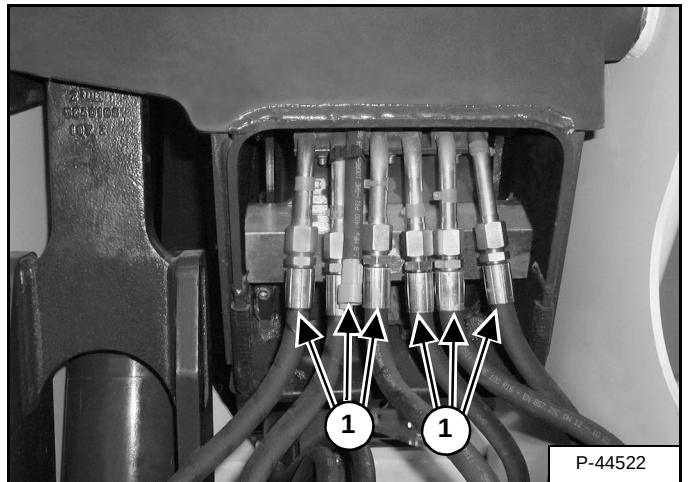


Disconnect the six hydraulic hoses (Item 1) [Figure 50-30-8] from the tubelines.

NOTE: Mark the hoses for correct installation.

BOOM ASSEMBLY (CONT'D)


Removal And Installation (Cont'd)

Figure 50-30-9

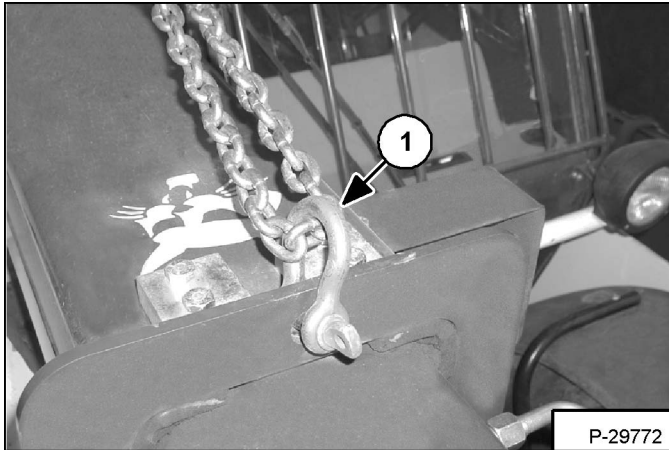

Install a lifting chain (Item 1) [Figure 50-30-9] on the front of the boom.


Figure 50-30-10

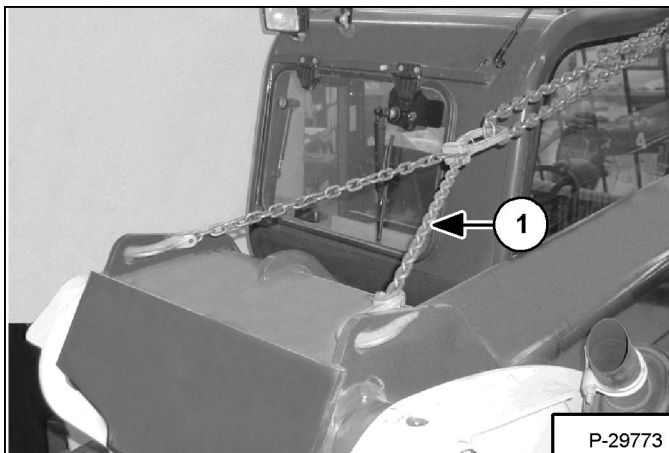

Install a lifting chain (Item 1) [Figure 50-30-10] on the rear of the boom.

Raise the hoist until the weight of the boom is supported by the hoist.

Figure 50-30-11

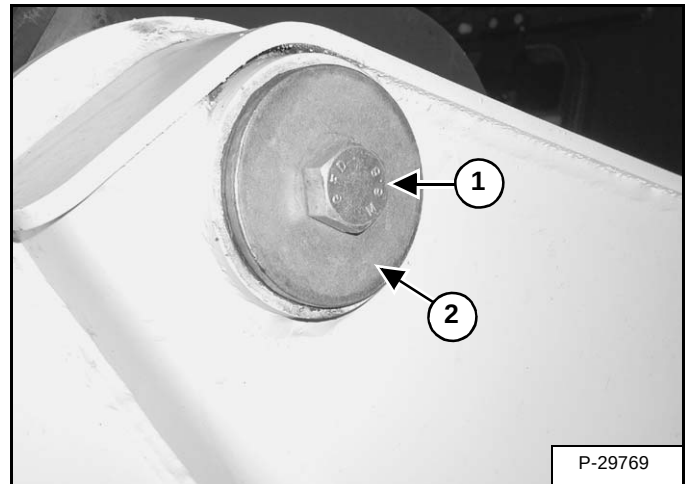

Remove the bolt (Item 1) and washer (Item 2) [Figure 50-30-11] from the boom pin.

Figure 50-30-12



Remove the boom pin [Figure 50-30-12].

BOOM ASSEMBLY (CONT'D)

Removal And Installation (Cont'd)

Figure 50-30-13




Lift and remove the boom assembly [Figure 50-30-13].

INNER BOOM

Removal


Figure 50-40-1

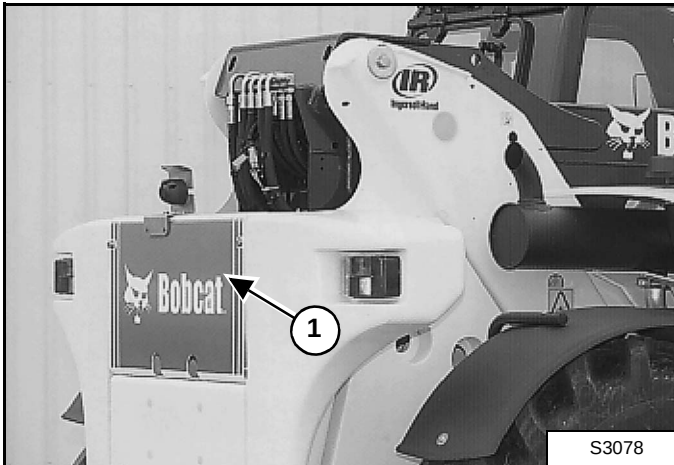

Remove the rear cover (Item 1) [Figure 50-40-1].


Remove the front wear pads. (See "Removal And Installation" on page 50-50-1)

Figure 50-40-2

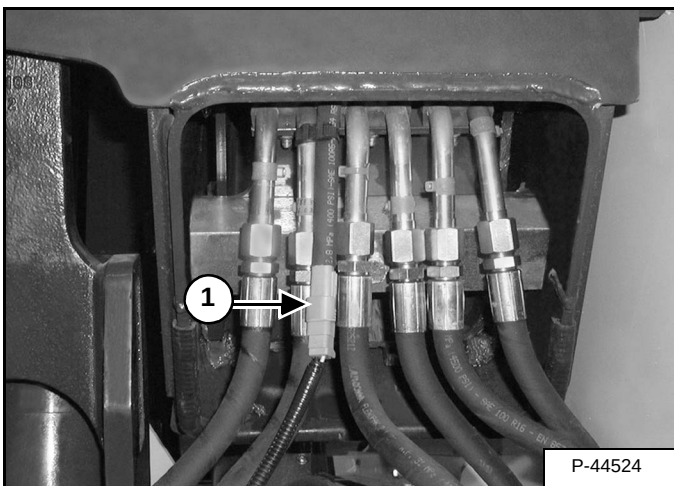

Disconnect the secondary auxiliary harness connector (Item 1) [Figure 50-40-2]. (If Equipped)

Figure 50-40-3

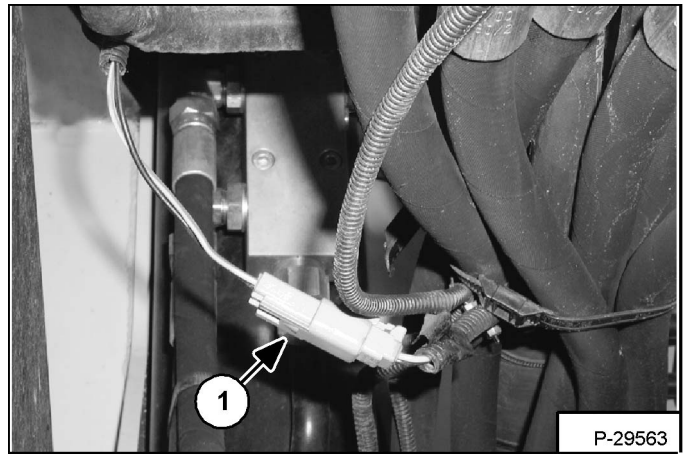


Disconnect the light harness connector (Item 1) [Figure 50-40-3]. (If Equipped)

IMPORTANT

When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.

I-2003-0888

Figure 50-40-4

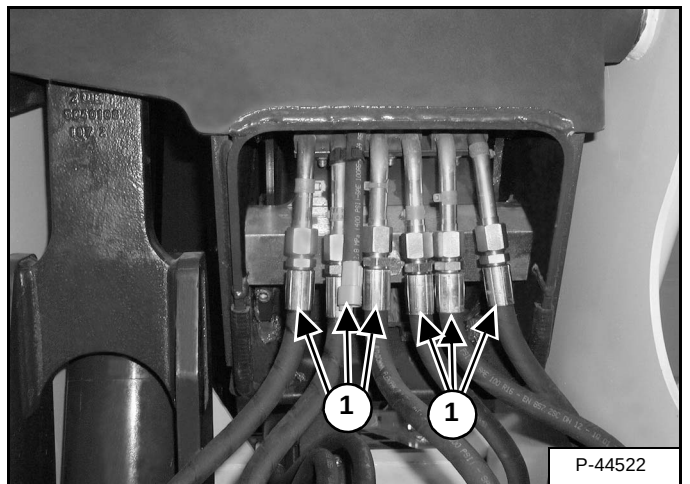


Disconnect the six hydraulic hoses (Item 1) [Figure 50-40-4] from the tubelines.

NOTE: Mark the hoses for correct installation.

INNER BOOM (CONT'D)

Removal (Cont'd)


Figure 50-40-5

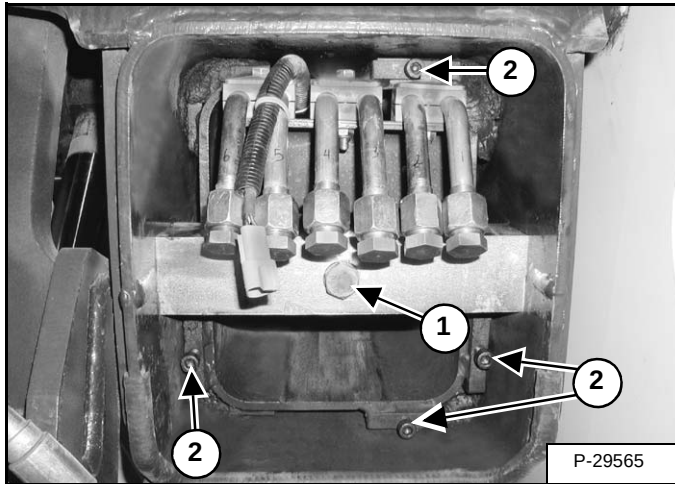

Remove the bolt (Item 1) [Figure 50-40-5] from the cylinder.

Loosen the rear wear pad adjusting bolts (Item 2) [Figure 50-40-5].

Figure 50-40-6

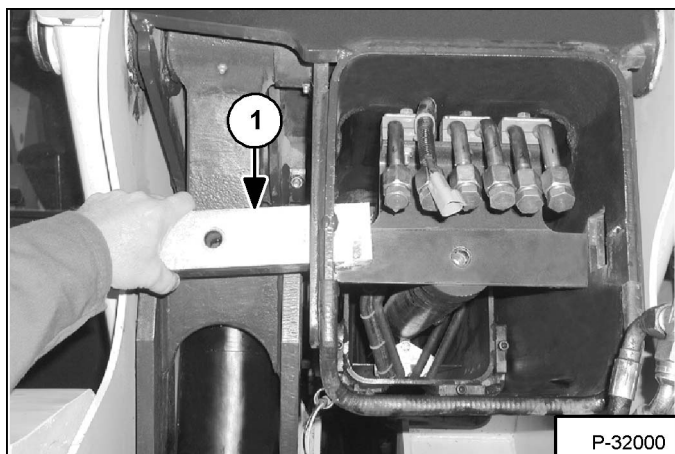

Remove the extension cylinder mounting block (Item 1) [Figure 50-40-6].

Figure 50-40-7




Begin sliding the inner boom from the main boom. Before the inner boom is completely removed, position a hoist and lifting strap on the inner boom. Carefully continue to remove the inner boom completely [Figure 50-40-7].

INNER BOOM (CONT'D)


Installation

Figure 50-40-8

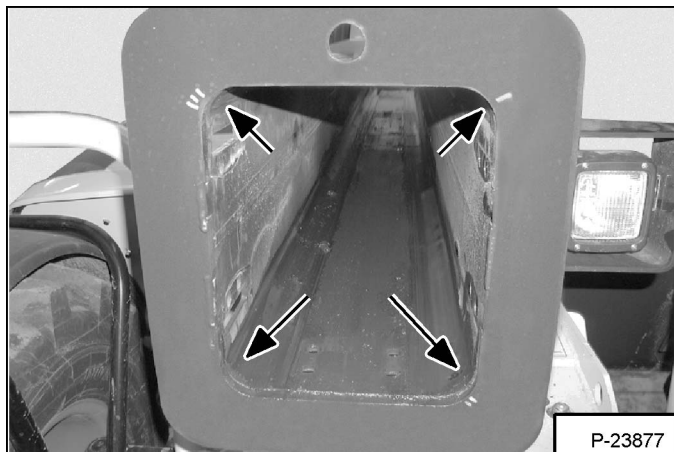

Apply grease to the inside top and bottom corners of the main boom **[Figure 50-40-8]**.

Figure 50-40-9

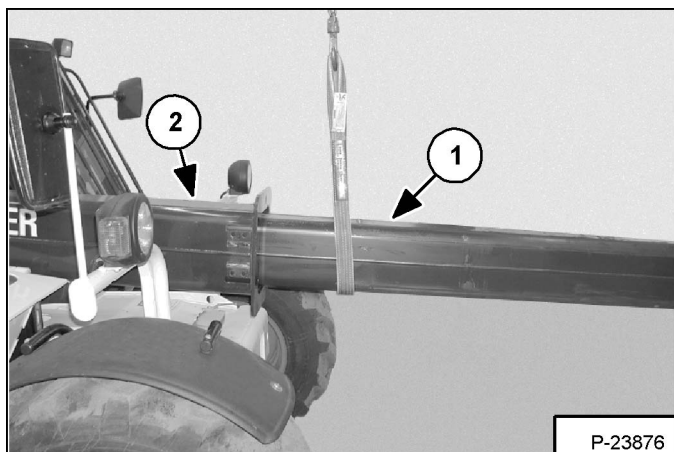


Install the end of the inner boom (Item 1) **[Figure 50-40-9]** into the main boom approximately 2 ft. (610 mm).

Install the front wear pads. (See "Removal And Installation" on page 50-50-1)


Remove the lifting strap and slide the inner boom fully into the main boom (Item 2) **[Figure 50-40-9]**.

Figure 50-40-10

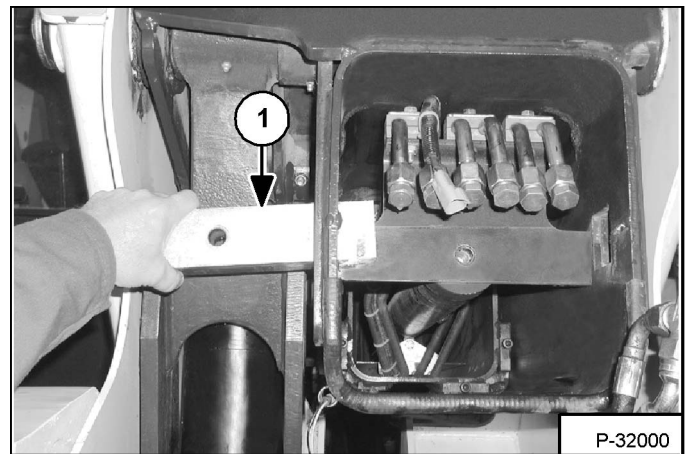

Install the extension cylinder mounting block (Item 1) **[Figure 50-40-10]**.

Figure 50-40-11

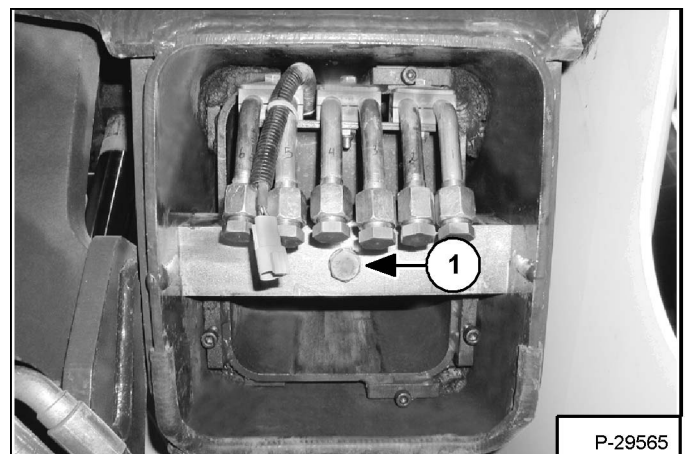


Apply LOCTITE 242 to the bolt and install the bolt (Item 1) **[Figure 50-40-11]** through the support pin and into the cylinder. Tighten the bolt to 221 ft.-lbs. (300 Nm) torque.

INNER BOOM (CONT'D)


Installation (Cont'd)

Figure 50-40-12

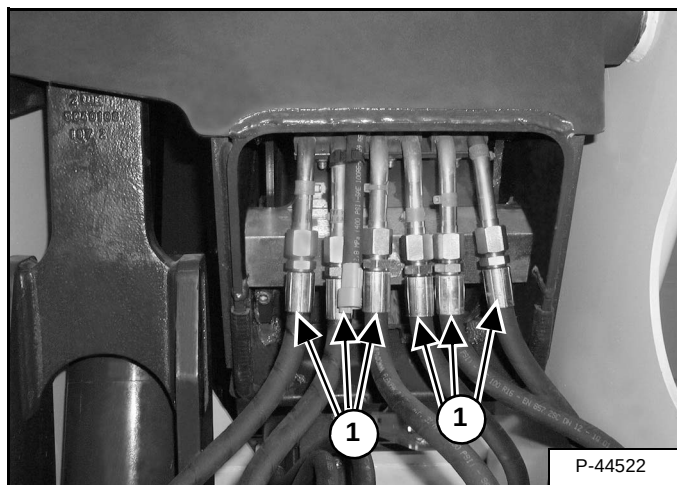


Reconnect the six hoses (Item 1) [Figure 50-40-12] to the tubelines.

Figure 50-40-13

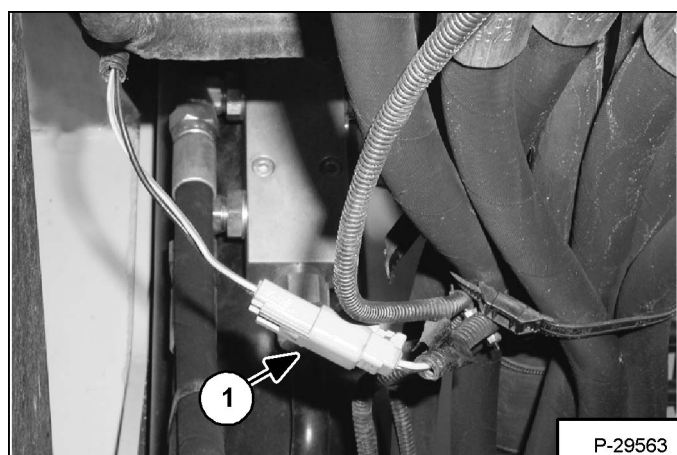

Reconnect the light harness connector (Item 1) [Figure 50-40-13]. (If Equipped)


Figure 50-40-14

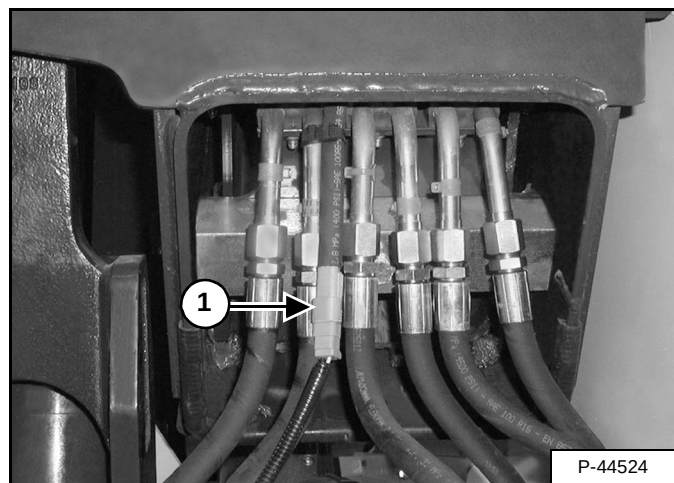

Reconnect the front auxiliary harness connector (Item 1) [Figure 50-40-14]. (If Equipped)

Adjust the wear pads. (See "Removal And Installation" on page 50-50-1)

Figure 50-40-15

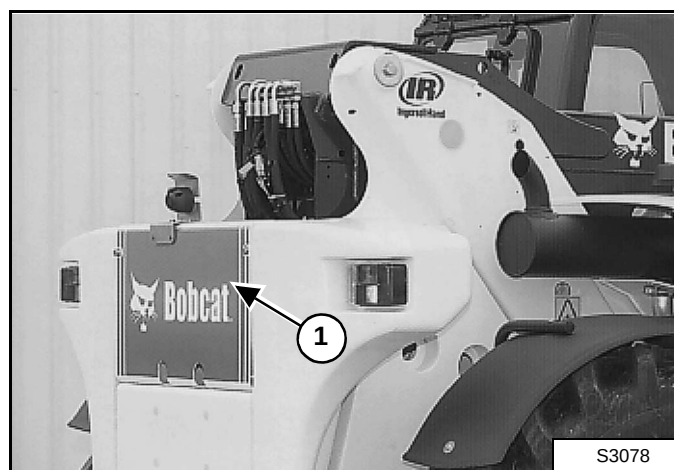


Install the rear cover (Item 1) [Figure 50-40-15].

WEAR PADS (FRONT)


Removal And Installation

Figure 50-50-16

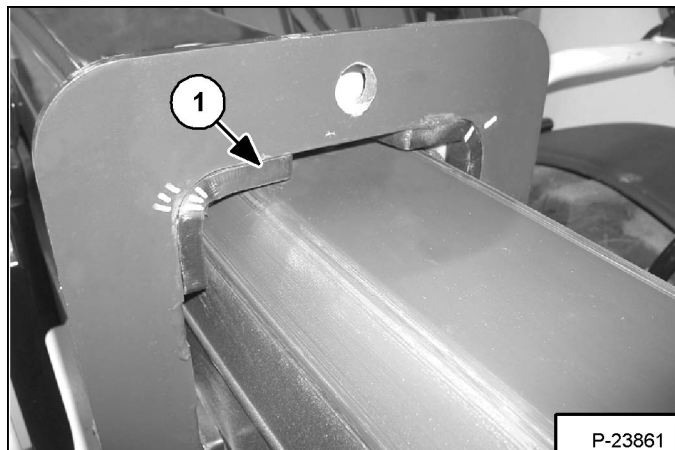

Extend the inner boom approximately 2 ft. (610 mm) and mark the location of the inner supports and wear pads (Item 1) [Figure 50-50-16].


Figure 50-50-17

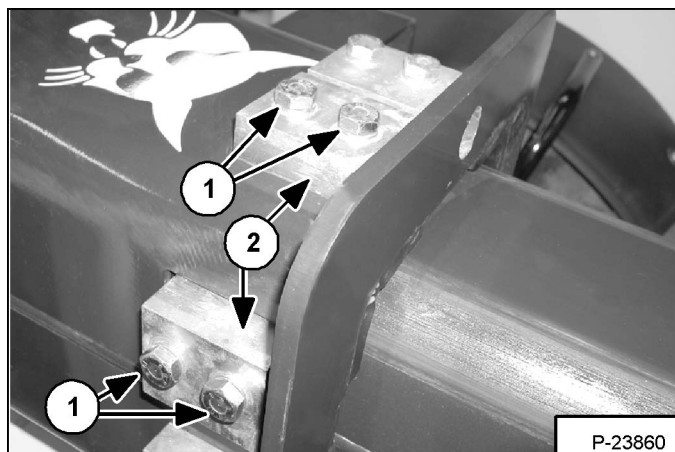

Remove the four bolts (Item 1) and two blocks (Item 2) [Figure 50-50-17] from the boom.

Installation: Tighten the bolts to 58 ft.-lbs. (43 Nm).


Figure 50-50-18

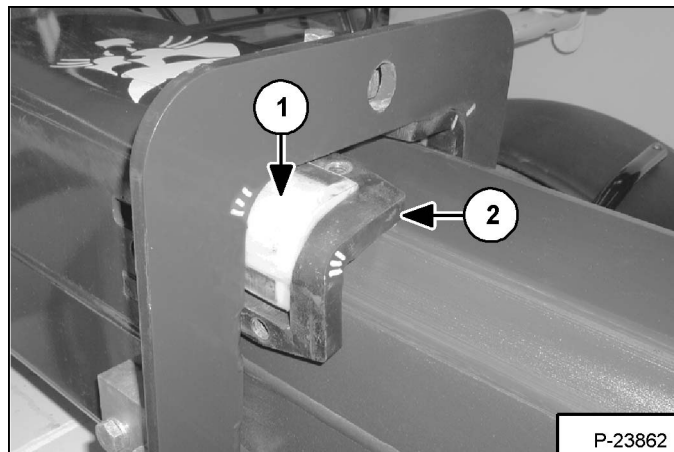

Remove the wear pad (Item 1) and inner support (Item 2) [Figure 50-50-18].

With both upper wear pads removed, use a hoist and lifting strap at the end of the boom, apply upwards pressure, lifting the inner boom off the bottom wear pads.

Figure 50-50-19

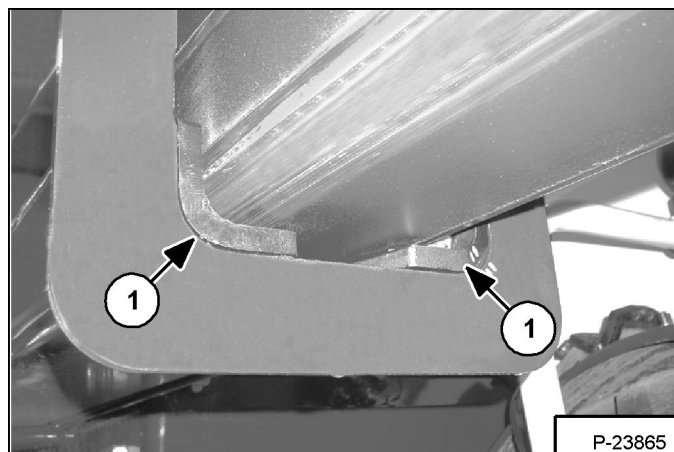

Remove the bottom wear pads (Item 1) [Figure 50-50-19].




Bobcat®

WEAR PADS (REAR)

Removal

Figure 50-60-1

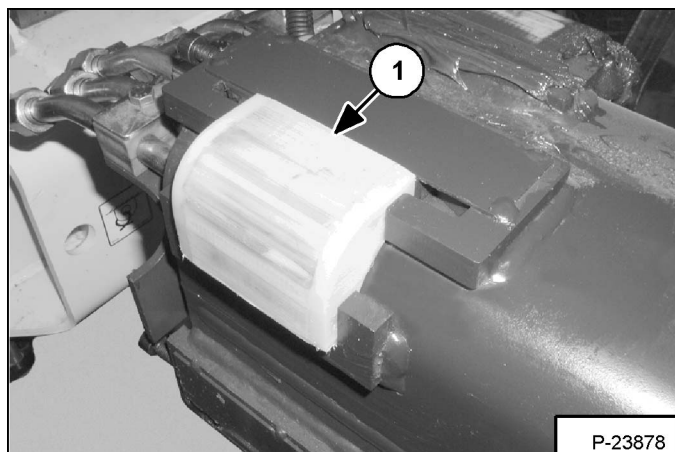


Remove the inner boom. (See "Removal" on page 50-40-1)

With the inner boom supported, remove the wear pad (Item 1) [Figure 50-60-1].

NOTE: Grease was removed for photo clarity.


Installation

Figure 50-60-2

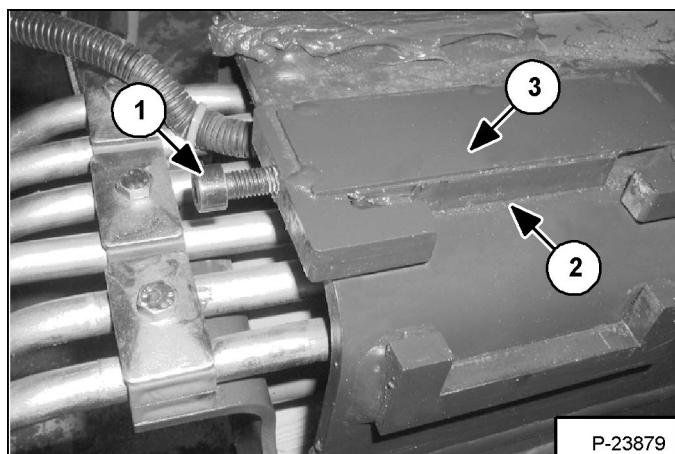


Loosen the adjustment screw (Item 1) until the adjusting plate (Item 2) is flush with the wear pad retainer (Item 3) [Figure 50-60-2].

Figure 50-60-3

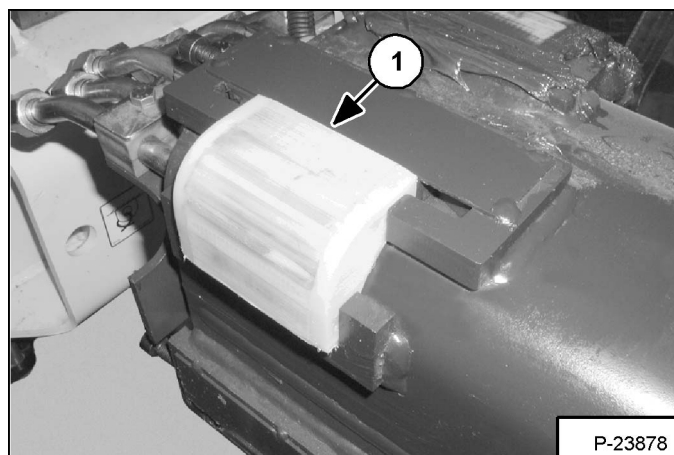

Install the new wear pad (Item 1) [Figure 50-60-3].

Figure 50-60-4

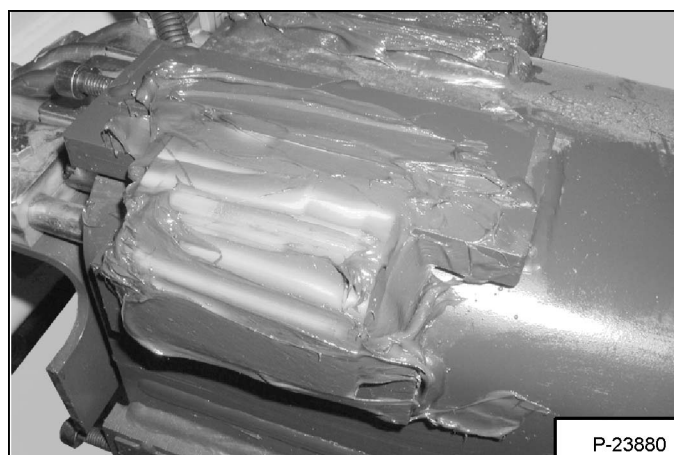


Apply grease to the wear pads [Figure 50-60-4].

Install the inner boom. (See "Installation" on page 50-40-3) DO NOT hook up the hoses at this time.

WEAR PADS (REAR) (CONT'D)


Installation (Cont'd)

Figure 50-60-5

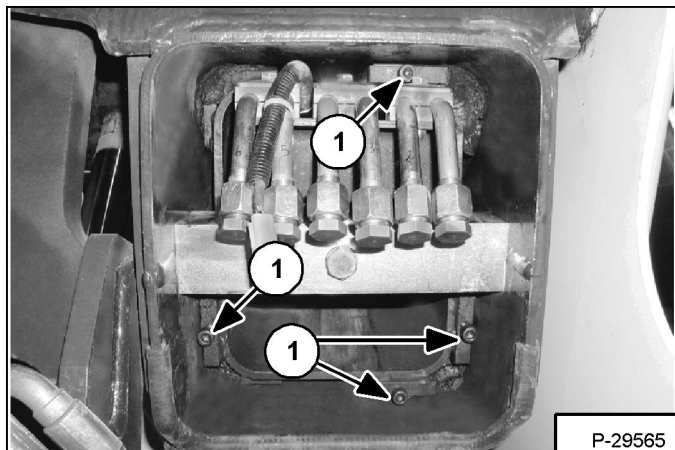


Turn the adjusting bolts (Item 1) [Figure 50-60-5] equally, centering the inner boom inside the main boom. Tighten the adjusting bolts to 29 ft.-lbs. (39 Nm) torque.

Figure 50-60-6

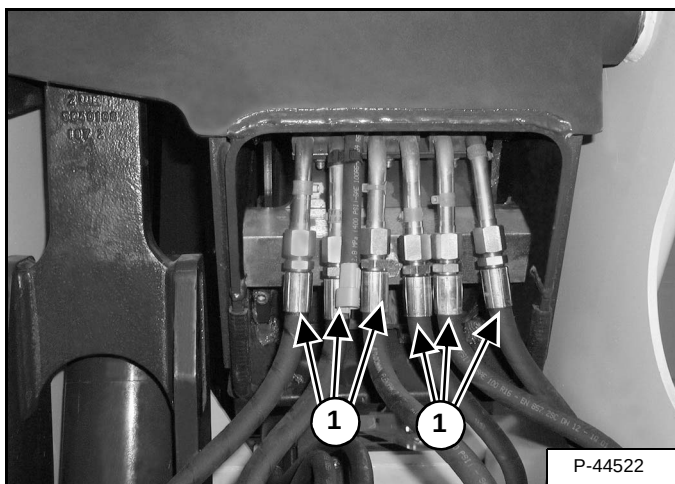


Reconnect the hoses (Item 1) [Figure 50-60-6] to the tubelines.

Figure 50-60-7

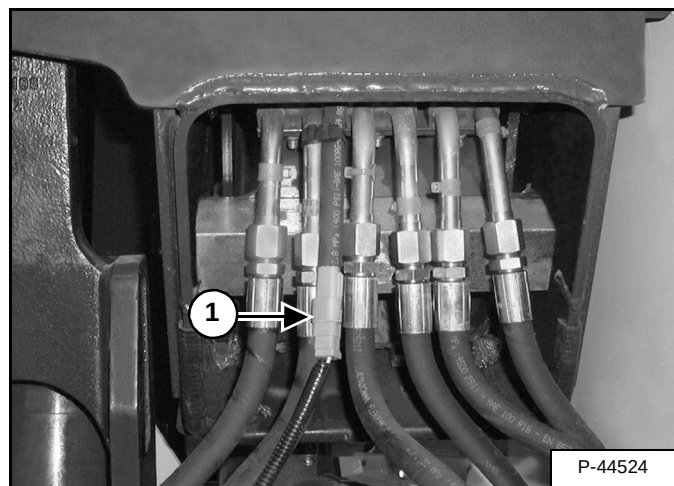

Connect the secondary auxiliary harness (Item 1) [Figure 50-60-7]. (If Equipped)

Figure 50-60-8

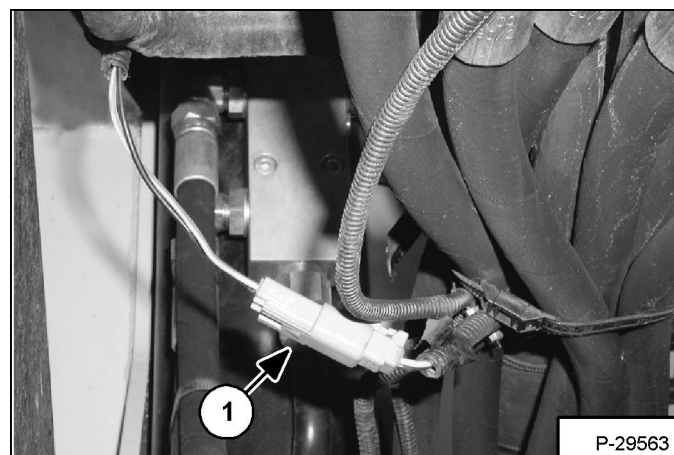

Connect the front auxiliary light harness connector (Item 1) [Figure 50-60-8]. (If Equipped)

Install the rear cover.

ENGINE COVER

Gas Cylinder Removal And Installation

Figure 50-70-1



Lift the engine cover [Figure 50-70-1]. Add a support to prevent the cover from closing when the gas cylinder is removed.

Remove the retainer clips (Item 1) [Figure 50-70-1] at both of the ball joints ends. Remove the ball joints from the ends.

Remove the gas cylinder.

WARNING

Cylinder contains high pressure gas. Do not open. Opening cylinder can release rod and cause injury or death.

W-2113-0288

Removal And Installation

Remove the gas cylinder.

Figure 50-70-2


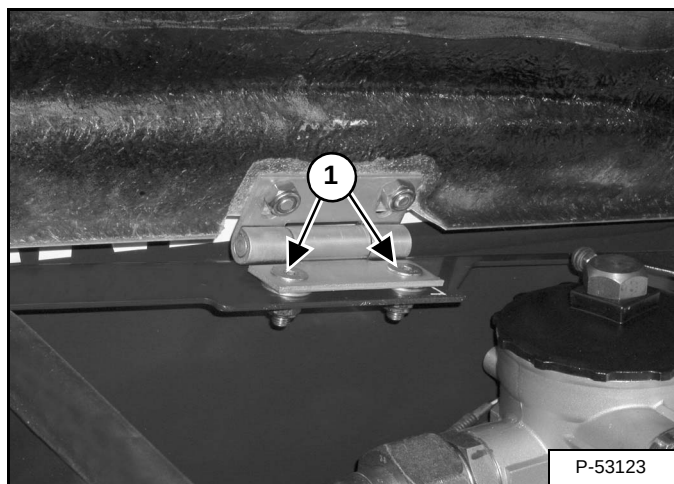


Figure 50-70-3



Remove the four hinge mounting bolts (Item 1) [Figure 50-70-2] and [Figure 50-70-3].

Remove the engine cover.

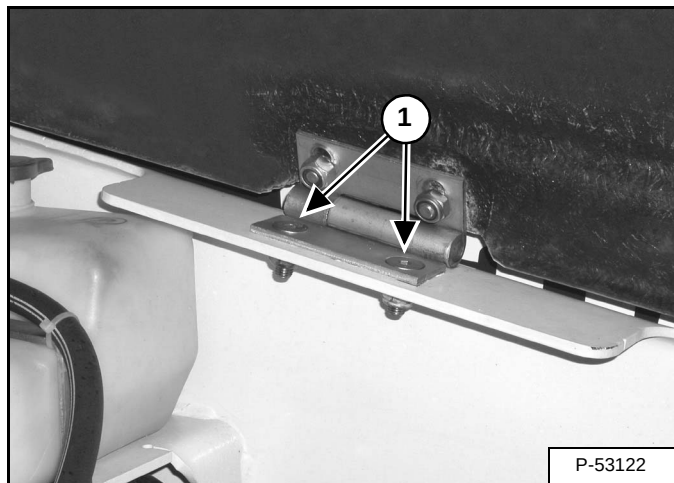

Bobcat®

AIR INTAKE COWLING

Removal And Installation

While supporting the air intake cowling remove the two bolts (Item 1) [Figure 50-71-3].

Remove the air intake cowling.

Figure 50-71-1



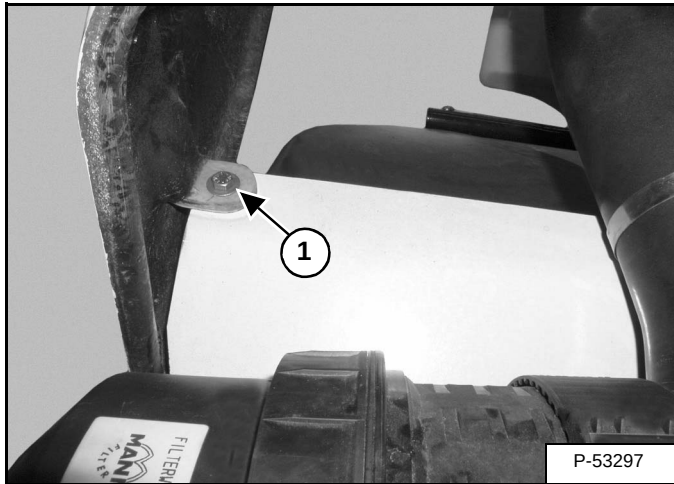


Figure 50-71-2

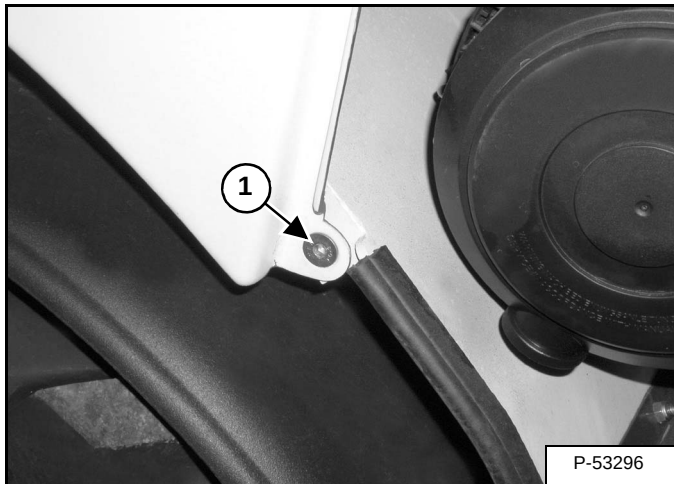

Remove the bolt (Item 1) [Figure 50-71-1] & [Figure 50-71-2].

Figure 50-71-3

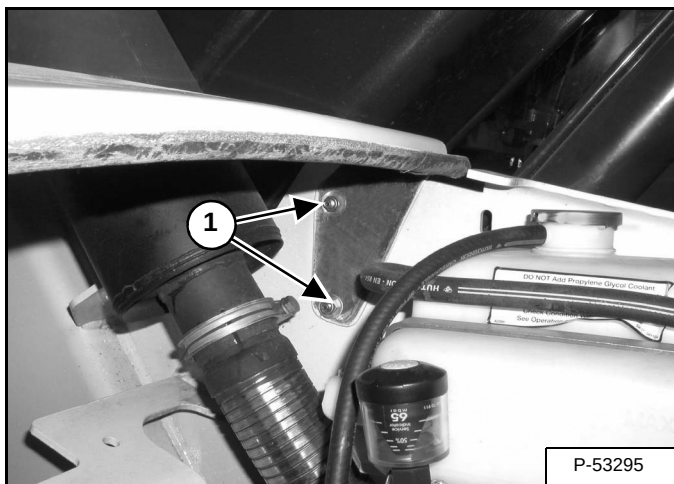




Bobcat®

FUEL TANK

Removal And Installation

Figure 50-80-1

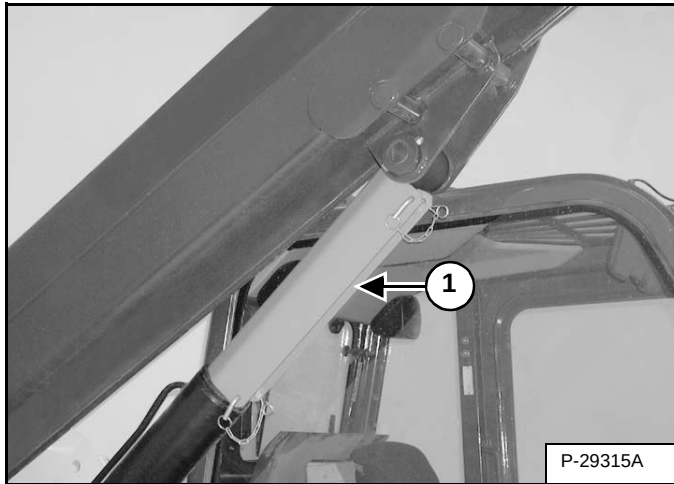

Raise the boom and install the boom stop (Item 1) [Figure 50-80-1].


Remove the battery. (See "Removal And Installation" on page 60-20-1)

Figure 50-80-2




Install a hoist to lift and support the cab [Figure 50-80-2].

Figure 50-80-3

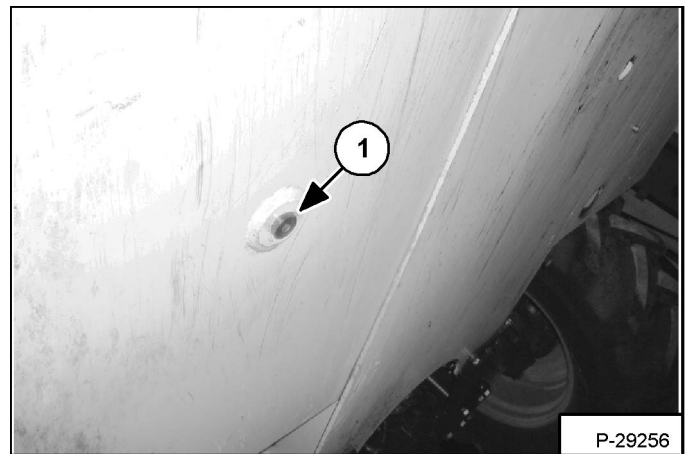

Drain the fuel from the fuel tank by removing the plug (Item 1) [Figure 50-80-3].

Figure 50-80-4

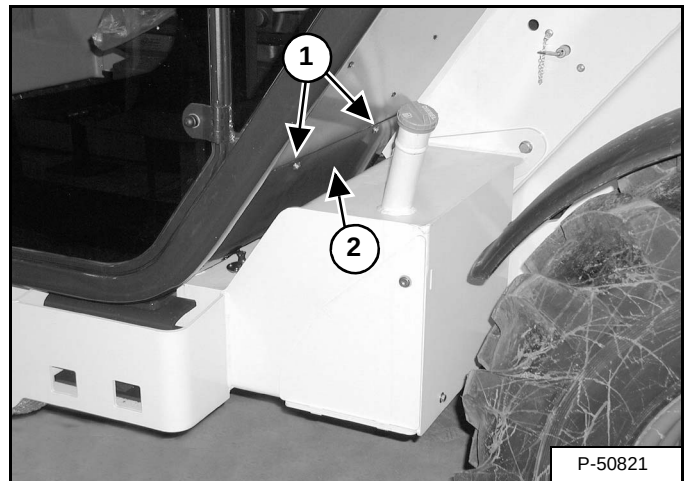


Remove the three screws (Item 1) and remove the access panel (Item 2) [Figure 50-80-4].

FUEL TANK (CONT'D)


Removal And Installation (Cont'd)

Figure 50-80-5

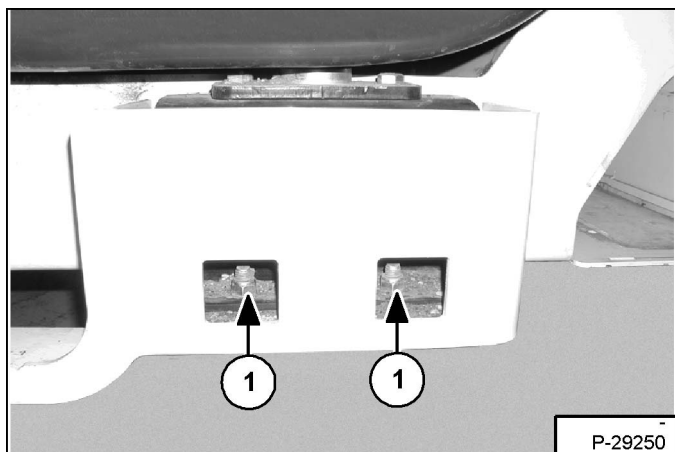

Remove the two bolts (Item 1) [Figure 50-80-5] from the cab spring.


Figure 50-80-6

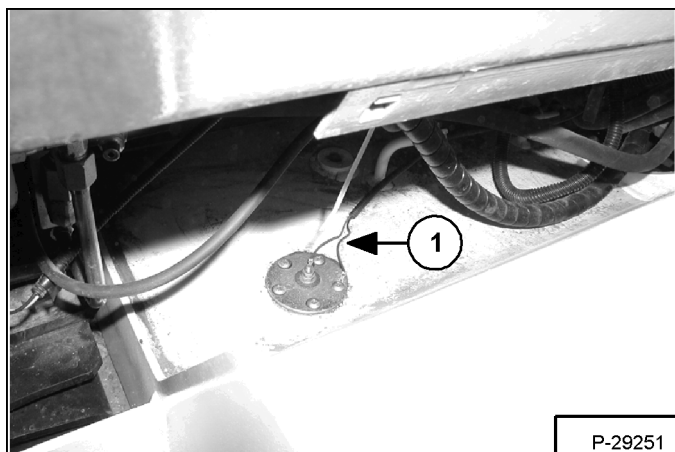

Remove the two wires (Item 1) [Figure 50-80-6] from the fuel sending unit.

NOTE: Mark the wires for correct installation.


Figure 50-80-7

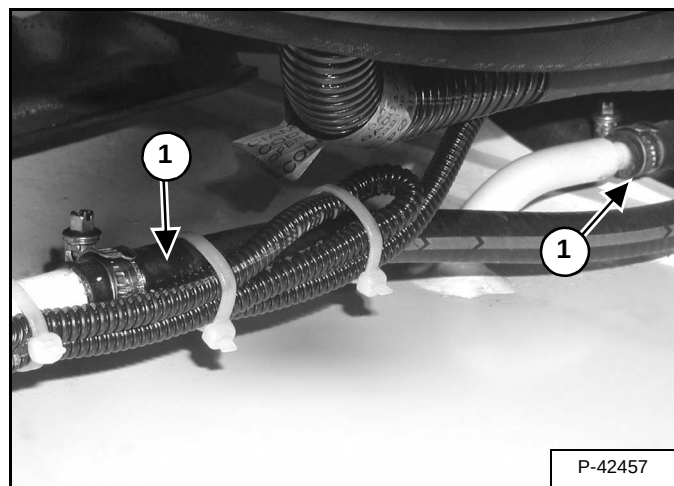

Remove the two hoses (Item 1) [Figure 50-80-7] from the fuel tank.

NOTE: Mark the hoses for correct installation.

Figure 50-80-8

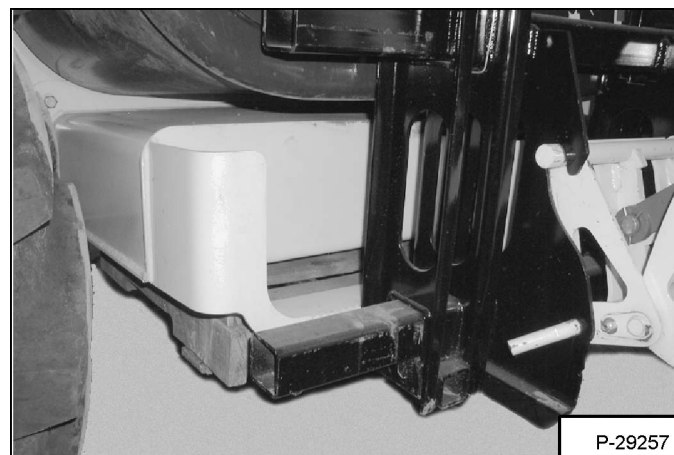


Support the fuel tank using a forklift or jack [Figure 50-80-8].

FUEL TANK (CONT'D)


Removal And Installation (Cont'd)

Figure 50-80-9

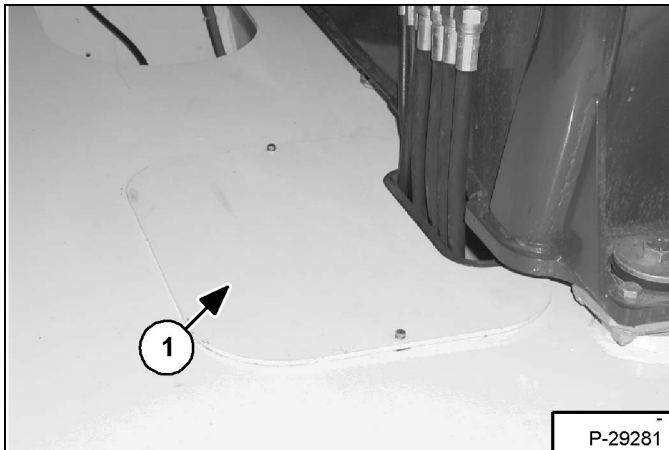

Remove the access panel (Item 1) [Figure 50-80-9].

Figure 50-80-10

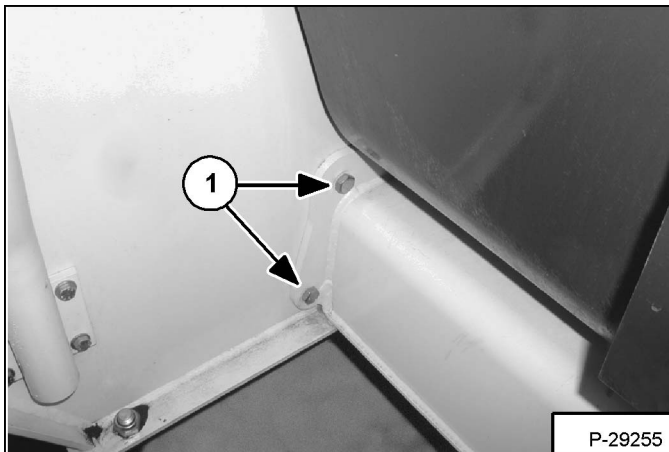

Remove the two mounting bolts (Item 1) [Figure 50-80-10] from the front of the fuel tank.

Figure 50-80-11


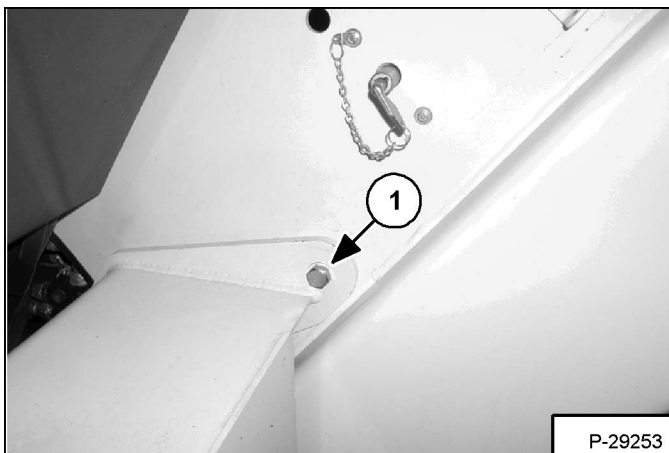


Figure 50-80-12

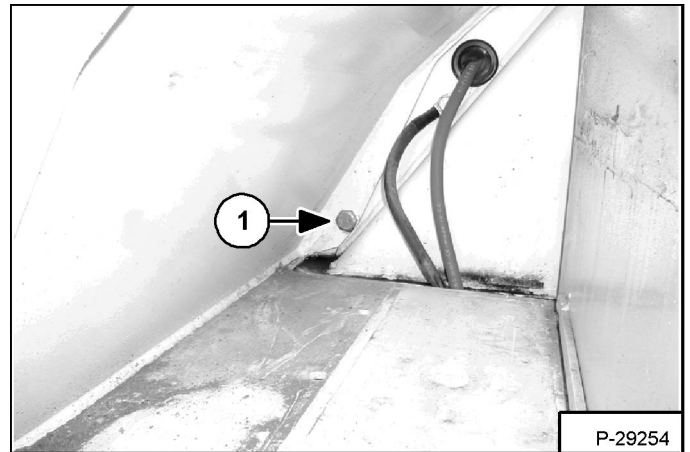

Remove the mounting bolts (Item 1) [Figure 50-80-11] & [Figure 50-80-12] from the rear of the fuel tank.

FUEL TANK (CONT'D)

Removal And Installation (Cont'd)

Figure 50-80-13




Carefully lower and remove the fuel tank [Figure 50-80-13]

QUICK TACH

Removal And Installation


Figure 50-90-1

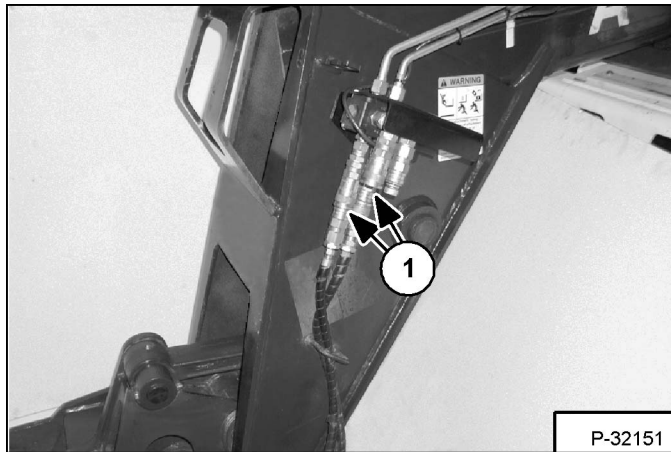

Rotate the quick tach forward fully.

Disconnect the couplers (Item 1) [Figure 50-90-1].

Figure 50-90-2

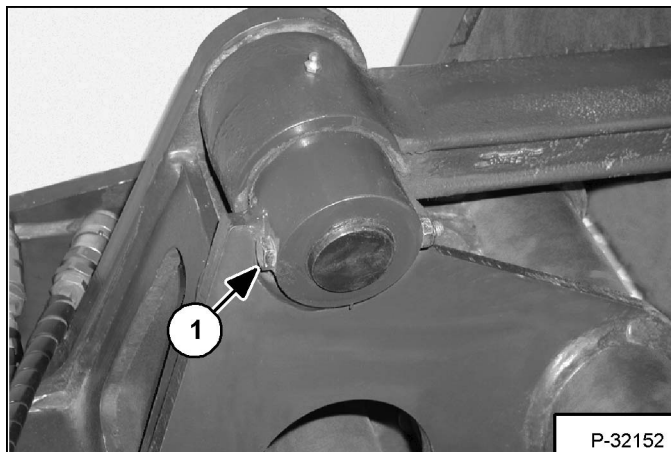


Remove the pivot pin retainer bolt (Item 1) [Figure 50-90-2].

Figure 50-90-3



Remove the pivot pin [Figure 50-90-3].

Figure 50-90-4

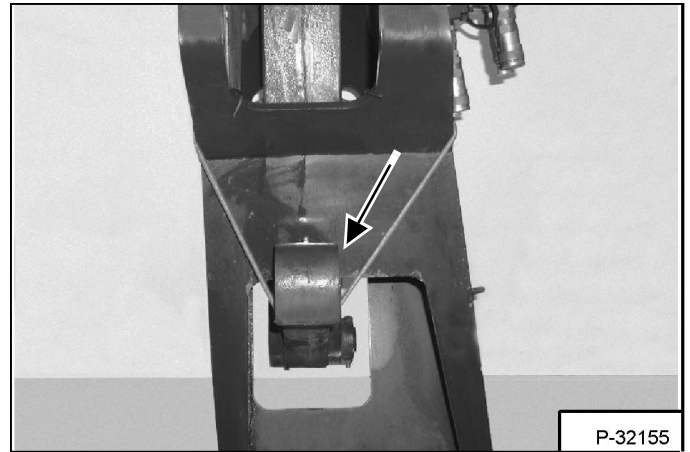


Support the link as shown [Figure 50-90-4].

QUICK TACH (CONT'D)


Removal And Installation (Cont'd)

Figure 50-90-5

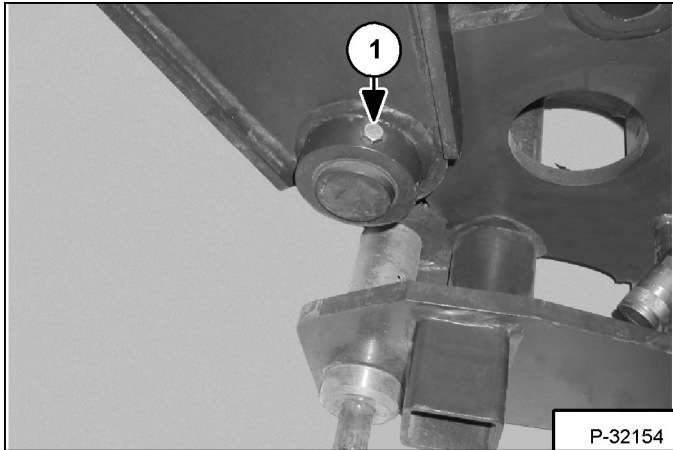

Remove the pivot pin retainer bolt (Item 1) [Figure 50-90-5].

Figure 50-90-6

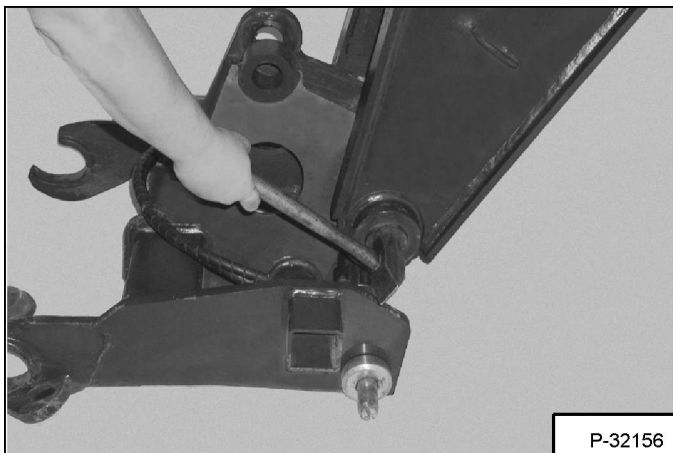


Remove the pivot pin [Figure 50-90-6].

Remove the quick tach.

REAR WEIGHTS


Removal And Installation

Figure 50-100-1

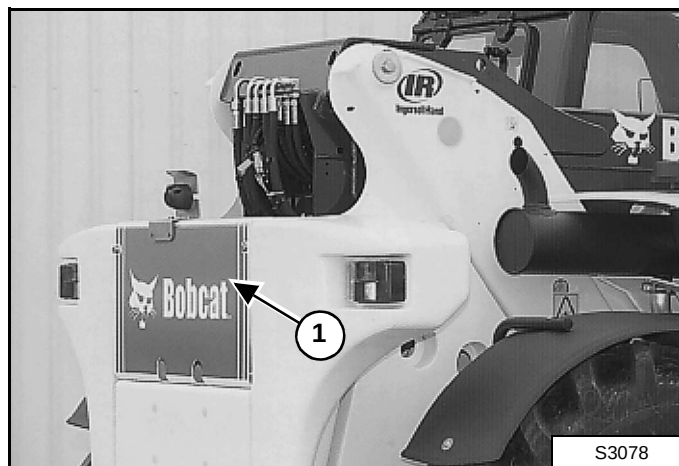

Remove the rear cover (Item 1) [Figure 50-100-1].

Figure 50-100-2

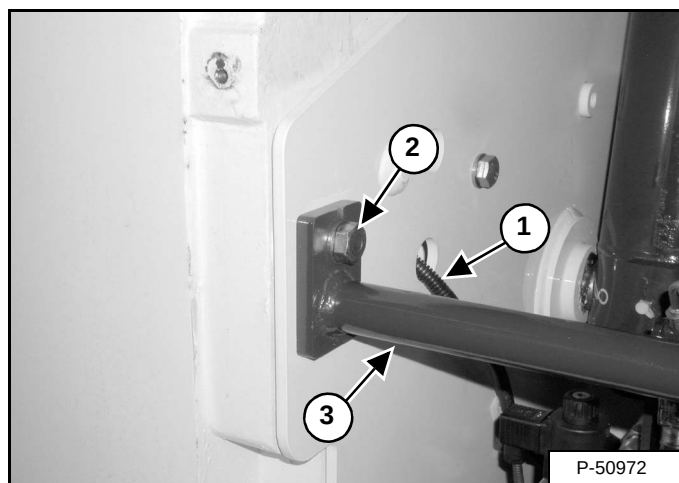

Unplug the tail light connector (Item 1) [Figure 50-100-2] from the main harness.

Remove the cross bar mounting bolt (Item 2) (both sides) and remove the cross bar (Item 3) [Figure 50-100-2].


Installation: Tighten the bar to 188-210 ft.-lbs. (255-285 Nm) torque.

Figure 50-100-3



Position a hoist as shown to lift and support the rear weight [Figure 50-100-3].

Figure 50-100-4

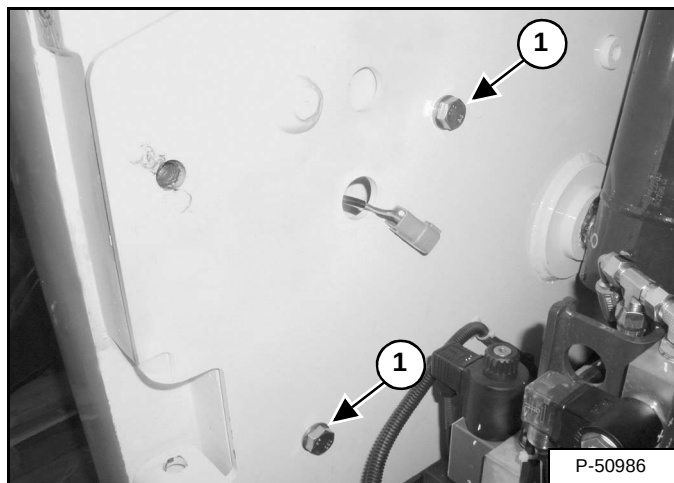

Remove the two weight mounting bolts (Item 1) [Figure 50-100-4].

Remove the weight.




Bobcat®

FENDER

Removal And Installation

(For S/N 362811001 - 362812000, S/N 362911001 - 362912000):

Figure 50-110-1

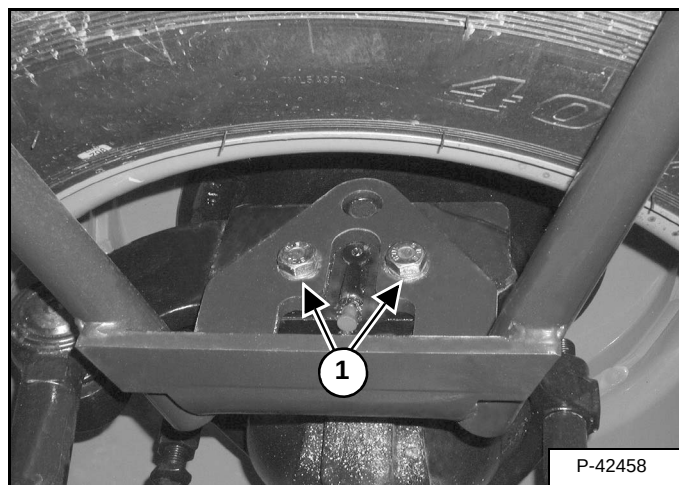


Remove the two fender mount bolts (item 1) [Figure 50-110-1]. Remove the fender.

Installation: Tighten the bolts to 90-100 ft.-lbs. (125-140 Nm) torque.


For S/N 362812001 and Above, S/N 362912001 and Above:

Figure 50-110-2

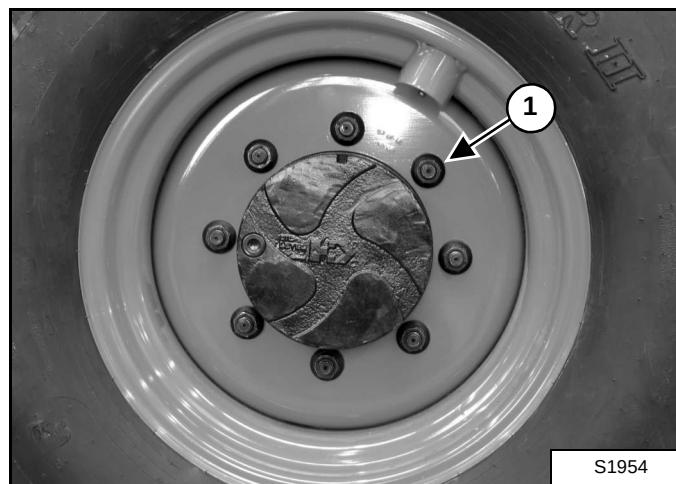

Remove the eight lug nuts and washers (item 1) [Figure 50-110-2] from the tire. Remove the tire.

Figure 50-110-3

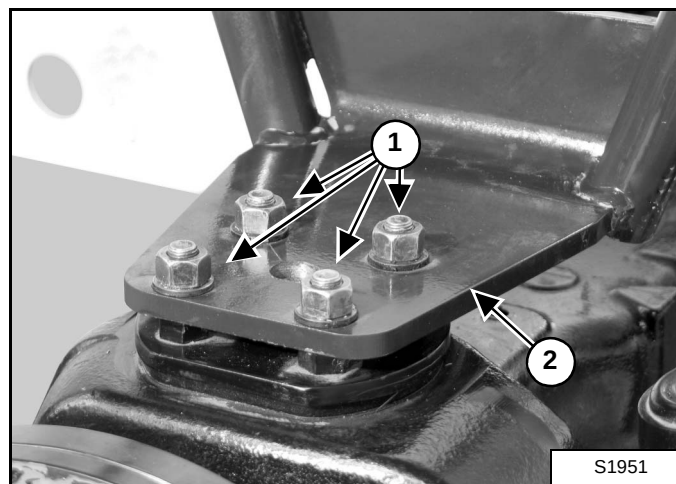

Remove the four bolts (item 1) from the fender mount brackets (item 2) [Figure 50-110-3].

Remove the fender.

Installation: Tighten the bolts to 90-100 ft.-lbs. (125-140 Nm) torque.




Bobcat®

PIVOT LINK

Removal And Installation


Rotate the quick tach back fully.

Figure 50-120-1

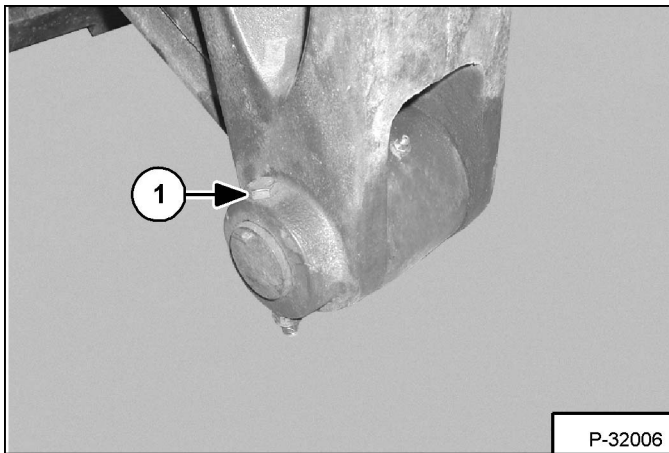


Remove the pivot pin retainer bolt (Item 1) [Figure 50-120-1] from the pivot.

Figure 50-120-2

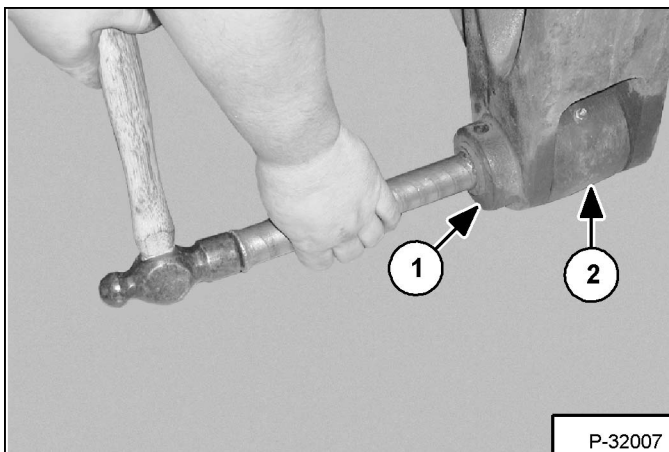


Remove the pivot pin (Item 1) and lower the link (Item 2) [Figure 50-120-2].

Figure 50-120-3

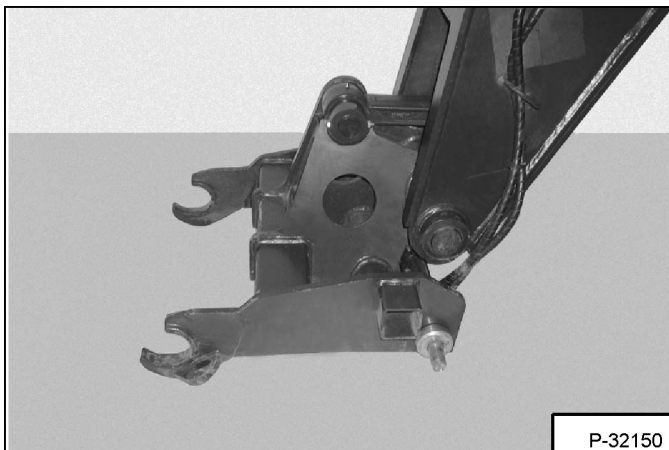

Rotate the quick tach forward until it is on the ground [Figure 50-120-3].

Figure 50-120-4

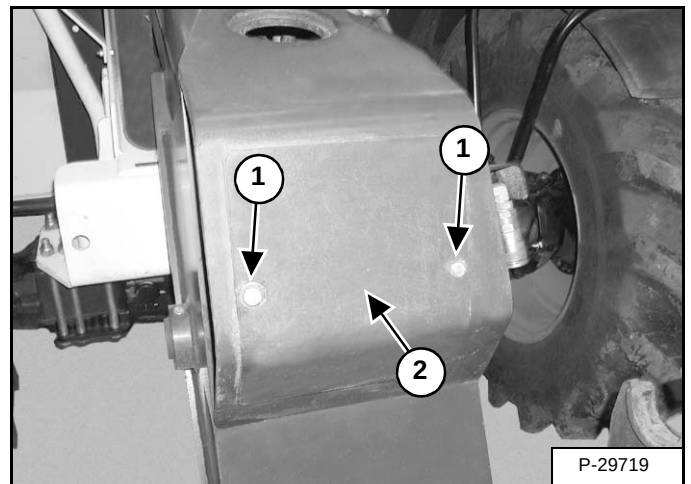


Remove the two mounting bolts (Item 1) and cover (Item 2) [Figure 50-120-4].

PIVOT LINK (CONT'D)


Removal And Installation (Cont'd)

Figure 50-120-5

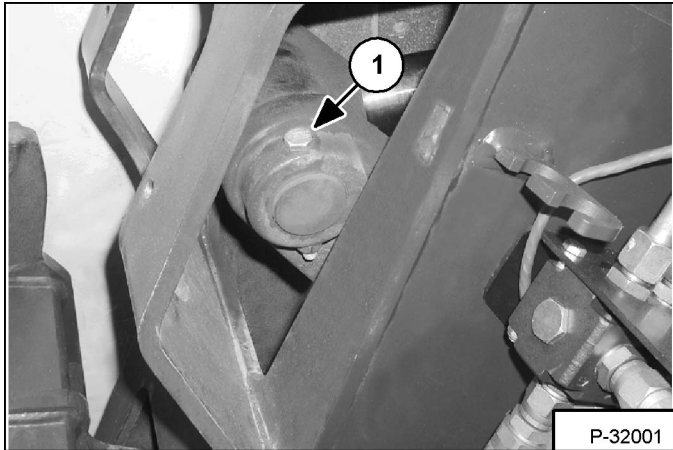


Remove the pivot pin retainer bolt (Item 1) [Figure 50-120-5].

Figure 50-120-6

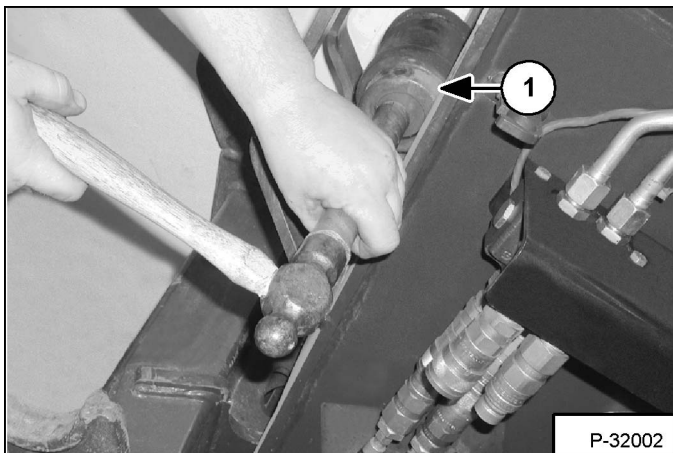


Remove the pivot pin (Item 1) [Figure 50-120-6] from the tilt cylinder.

Figure 50-120-7

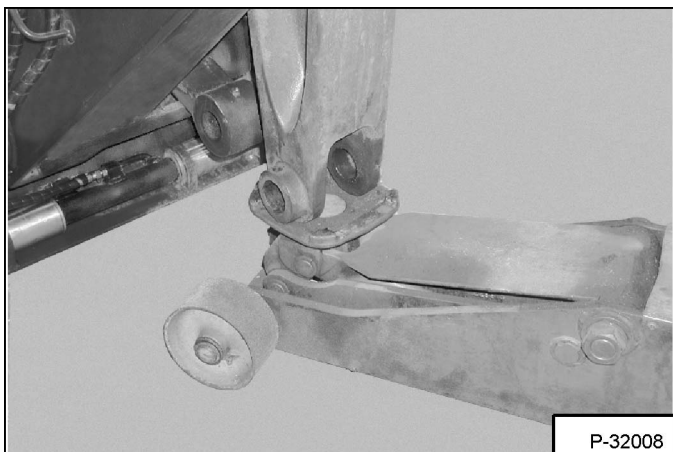

Place a floor jack under the pivot link [Figure 50-120-7].

Figure 50-120-8

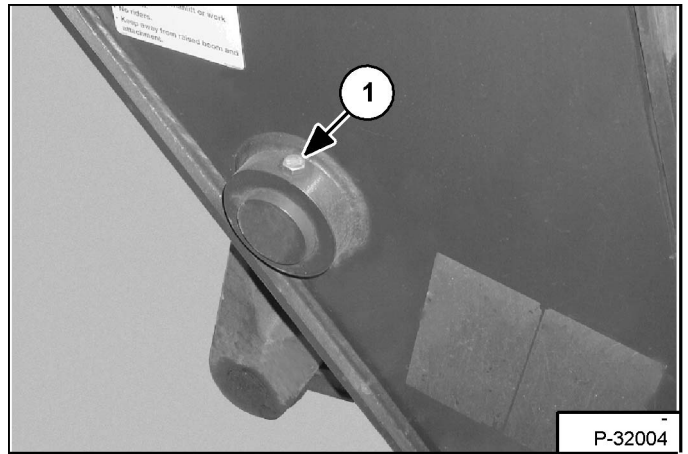


Remove the pivot pin retainer bolt (Item 1) [Figure 50-120-8].

PIVOT LINK (CONT'D)


Removal And Installation (Cont'd)

Figure 50-120-9

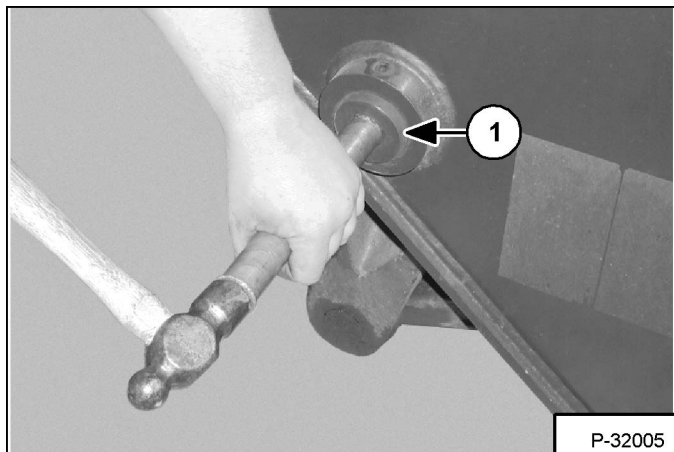

Remove the pivot pin (Item 1) [Figure 50-120-9].

Figure 50-120-10

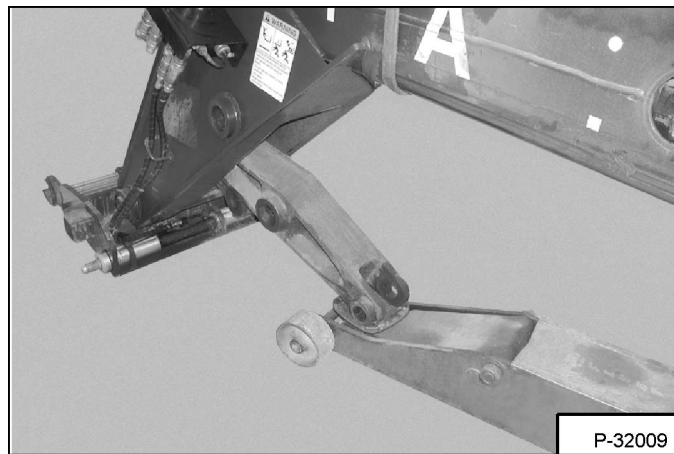

Lower the floor jack and remove the pivot link [Figure 50-120-10].



Bobcat®


DASH COVER/STEERING COLUMN COVER

Removal And Installation

Remove the instrument panel. (See "Removal And Installation" on page 60-80-1)


Remove the switch panel. (See "SWITCH PANEL" on page 60-90-1)

Figure 50-130-1

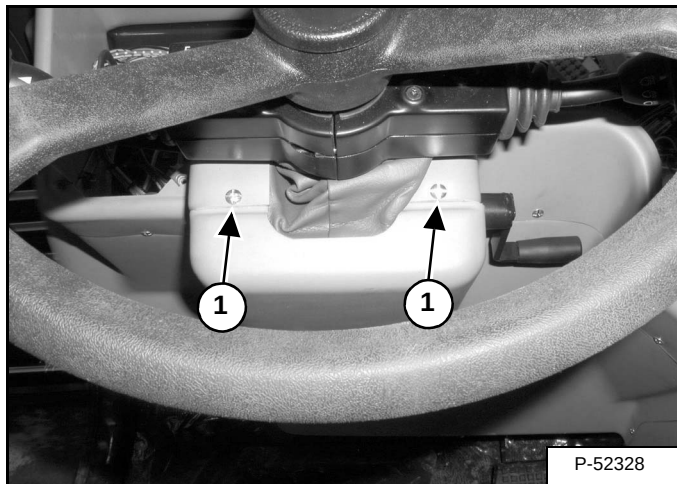


Remove the two screws (Item 1) [Figure 50-130-1] from the center of the dash cover.

Figure 50-130-2

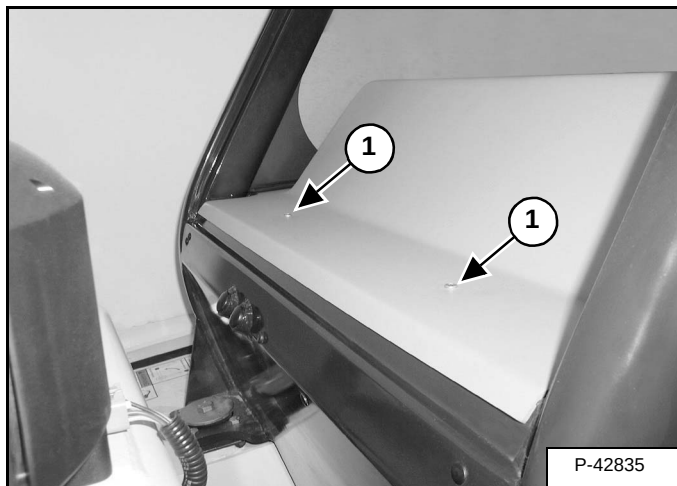


Remove the two dash cover mounting screws (Item 1) [Figure 50-130-2].

Figure 50-130-3

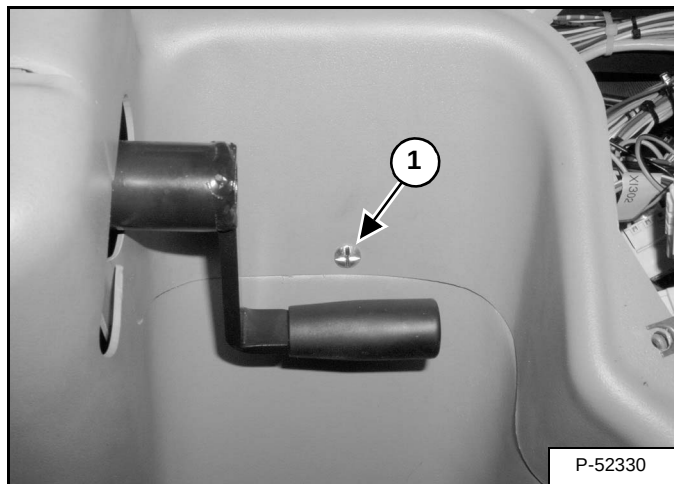

Remove the screw (Item 1) [Figure 50-130-3] from the right side of the dash.

Figure 50-130-4

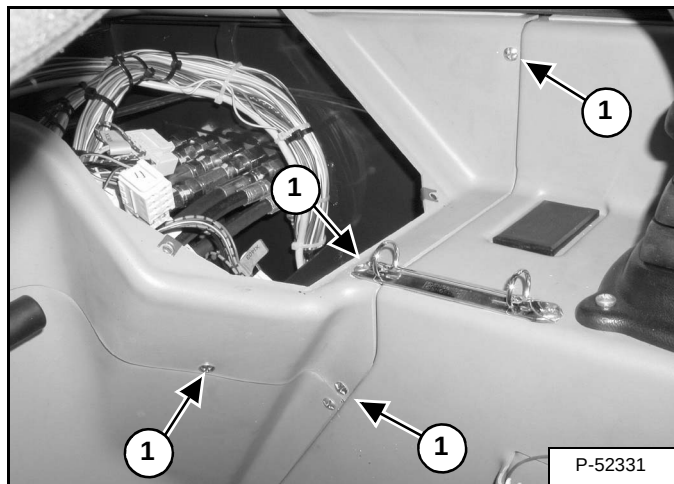


Remove the four screws (Item 1) [Figure 50-130-4] from the right side of the dash cover.

DASH COVER/STEERING COLUMN COVER (CONT'D)


Removal And Installation (Cont'd)

Figure 50-130-5

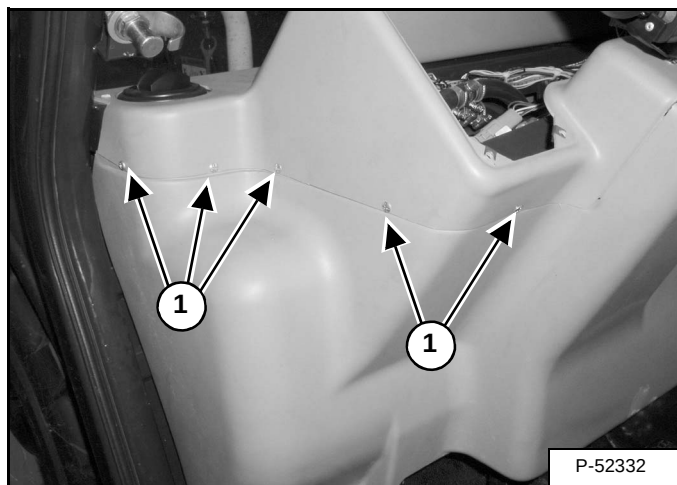


Remove the five screws (Item 1) [Figure 50-130-5] from the left side of the dash cover.

Figure 50-130-6

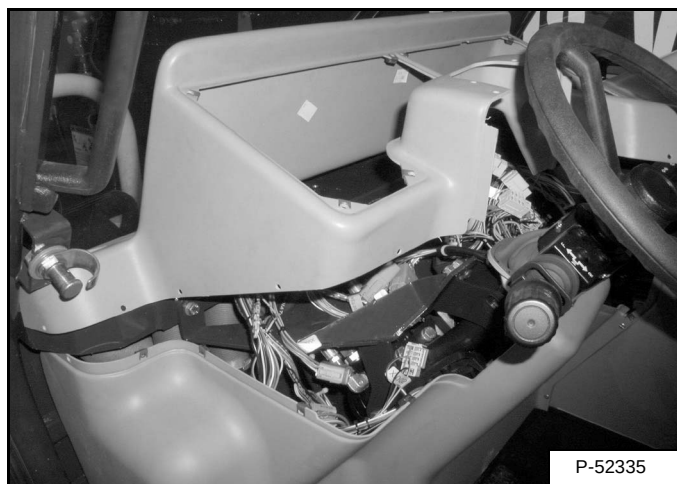


Lift and remove the dash cover [Figure 50-130-6].

Figure 50-130-7

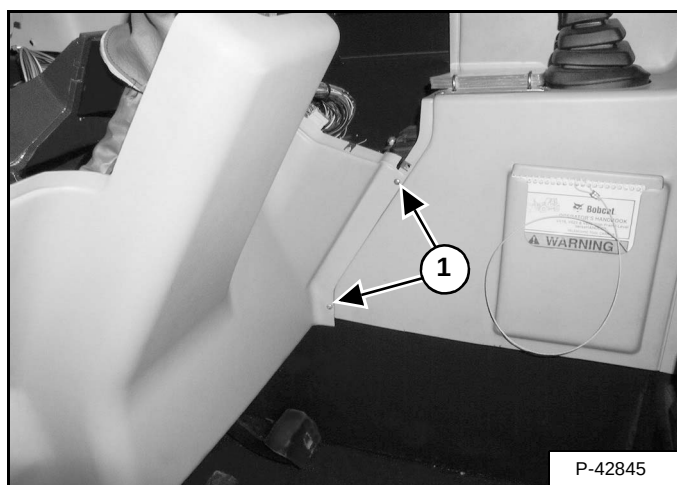

Remove the two screws (Item 1) [Figure 50-130-7] from the right side of the column cover.

Figure 50-130-8

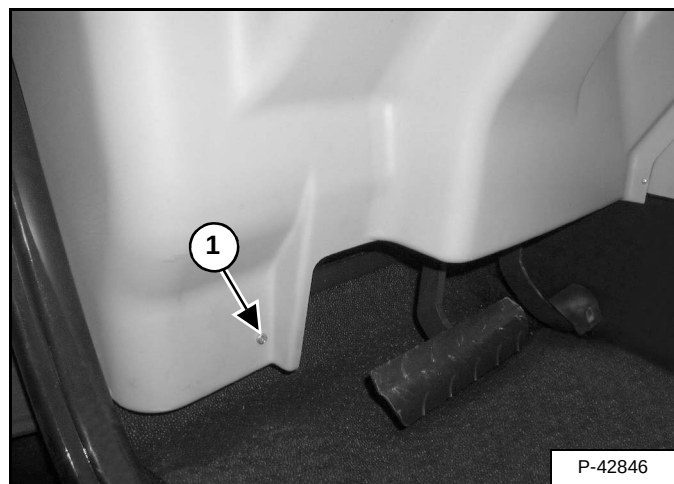


Remove the screw (Item 1) [Figure 50-130-8] from the left side of the column cover.

DASH COVER/STEERING COLUMN COVER (CONT'D)

Removal And Installation (Cont'd)

Figure 50-130-9

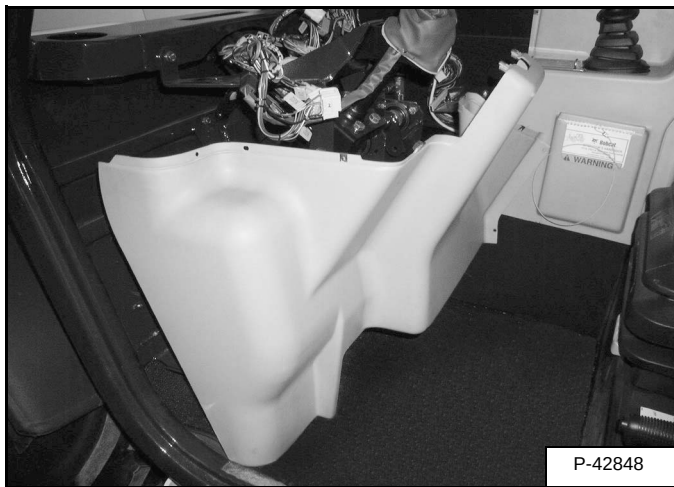

Remove the steering column cover [Figure 50-130-9].



Bobcat®

JOYSTICK PANEL


Removal And Installation

Remove the instrument panel. (See "Removal And Installation" on page 60-80-1)

Remove the switch panel. (See "SWITCH PANEL" on page 60-90-1)


Remove the dash cover/steering column cover. (See "Removal And Installation" on page 50-130-1)

Figure 50-140-1

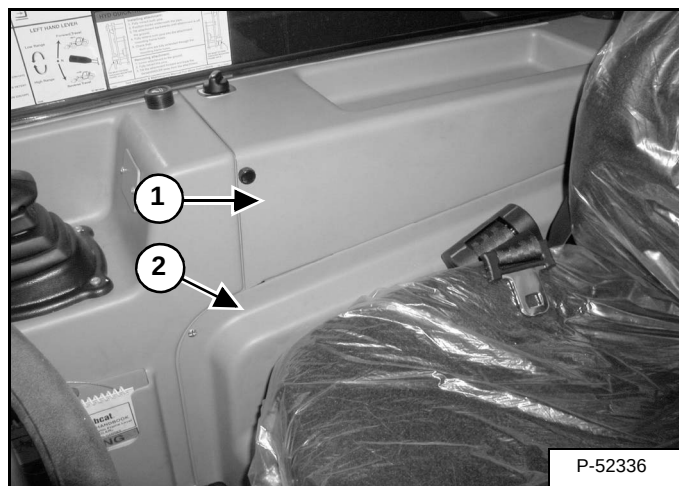


Remove the fuse box cover (Item 1) and side cover (Item 2) [Figure 50-140-1].

Figure 50-140-2

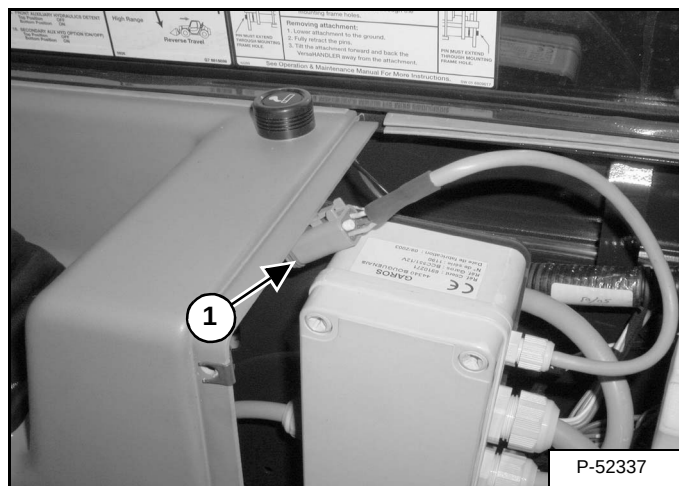


Disconnect the frame leveling connector (Item 1) [Figure 50-140-2].

Figure 50-140-3

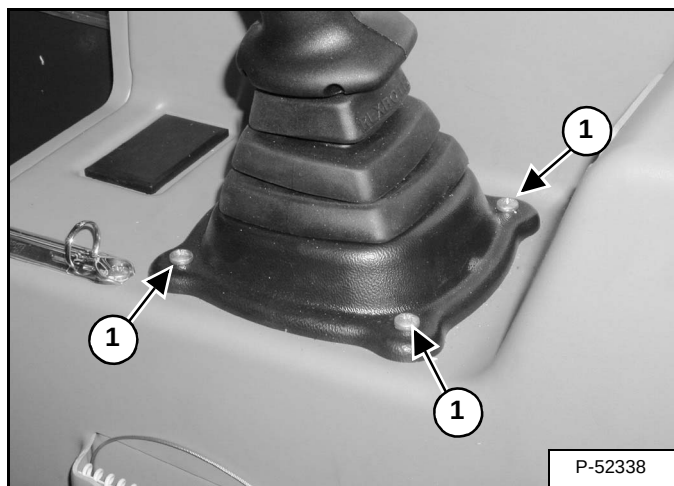

Remove the four bolts (Item 1) [Figure 50-140-3].

Figure 50-140-4

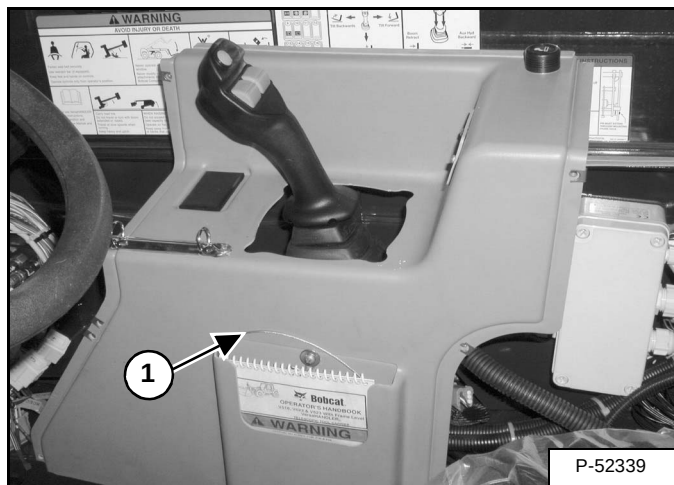

Remove the joystick panel (Item 1) [Figure 50-140-4].



Bobcat®

ELECTRICAL SYSTEM AND ANALYSIS

ALTERNATOR	60-30-1
Removal And Installation.	60-30-1
BATTERY	60-20-1
Removal And Installation.	60-20-1
Servicing	60-20-2
Using A Booster Battery (Jump Starting).	60-20-3
BRAKE LIGHT SWITCH.	60-100-1
Adjustment	60-100-1
Removal And Installation.	60-100-1
ELECTRICAL SYSTEM INFORMATION	60-10-1
Description	60-10-2
Fuses, Diodes & Relays	60-10-2
Troubleshooting Chart.	60-10-1
FRAME LEVEL SPEED SWITCH.	60-170-1
Description	60-170-1
Disassembly And Assembly	60-170-3
Installation	60-170-2
Removal	60-170-1
FRONT WIPER MOTOR	60-110-1
Removal And Installation.	60-110-1
INCHING SWITCH	60-150-1
Adjustment	60-150-1
Removal And Installation.	60-150-1
INSTRUMENT PANEL	60-80-1
Removal And Installation.	60-80-1
LIGHTS.	60-60-1
Front Light Removal And Installation	60-60-2
Rear Light Removal And Installation.	60-60-1
LONGITUDINAL STABILITY INDICATOR CALIBRATION.	60-180-1
Fitting the sensor.	60-180-1
CALIBRATION PROCEDURE	60-180-1
PEDAL ASSEMBLY	60-140-1
Disassembly And Assembly	60-140-2
Removal And Installation.	60-140-1

ELECTRICAL SYSTEM AND ANALYSIS

Continued On Next Page

ELECTRICAL SYSTEM AND ANALYSIS (CONT'D)

REAR WIPER MOTOR	60-130-1
Removal And Installation	60-130-1
SERVICE SOFTWARE	60-160-1
Calibrate Inch Pedal	60-160-5
Connecting The Laptop Computer	60-160-1
Entering The Service Software	60-160-2
Monitor Screen	60-160-3
Warnings Screen	60-160-4
STARTER	60-40-1
Removal And Installation	60-40-1
Parts Identification	60-40-2
Assembly/disassembly	60-40-3
SWITCH PANEL	60-90-1
Parts description	60-90-1
TOP WIPER MOTOR	60-120-1
Removal And Installation	60-120-1
TRAVEL/SIGNAL LEVER	60-70-1
Removal And Installation	60-70-1
LONGITUDINAL STABILITY INDICATOR CALIBRATION	60-180-1
Fitting the sensor	60-180-1
CALIBRATION PROCEDURE	60-180-1

ELECTRICAL SYSTEM INFORMATION

Troubleshooting Chart

The following troubleshooting chart is provided for assistance in locating and correcting problems which are most common. Many of the recommended procedures must be done by authorized Bobcat Service Personnel only.



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0199


PROBLEM	CAUSE
Battery will not take charge.	1, 2, 3, 4, 5
Alternator will not charge.	1, 2, 5
Starter will not turn the engine.	2, 3, 4, 6, 7, 8, 9

KEY TO CORRECT THE CAUSE
1. Alternator belt is loose or damaged.
2. Battery connections are dirty or loose.
3. Battery is damaged.
4. The ground connection is not making a good contact.
5. The alternator is damaged
6. The engine is locked.
7. The starter is damaged.
8. The wiring or the solenoid is damaged.
9. Check the fuses.

ELECTRICAL SYSTEM INFORMATION (CONT'D)

Description

Figure 60-10-1

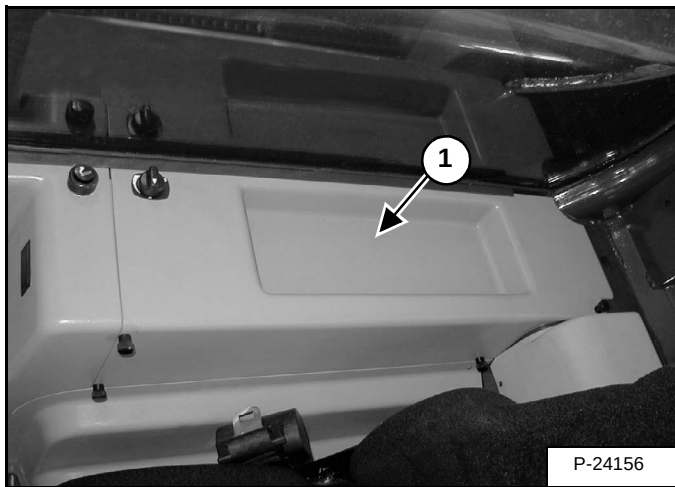


The Telescopic Handler has a 12 volt, negative ground alternator charging system. The electrical system is protected by fuses located in the cab in the right console (Item 1) **[Figure 60-10-1]**.

The fuses will protect the electrical system when there is an electrical overload. The reason of the overload must be found before starting the engine again.

Fuses, Diodes & Relays

Figure 60-10-2

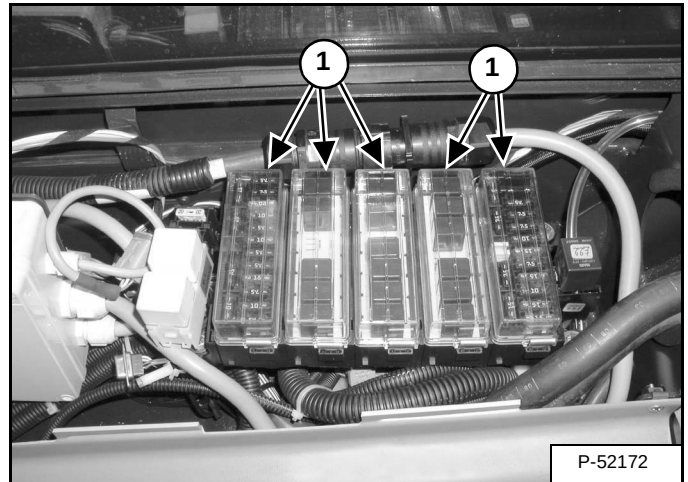

The electrical system is protected by fuses, diodes and relays.

Remove the console cover (Item 1) **[Figure 60-10-1]**.



Remove the cover(s) from the rows of fuses/relays/diodes (Item 1) **[Figure 60-10-2]** to check or replace fuses, diodes or relays.

Two relays and two fuses are located in the rear of the engine compartment. See page 60-10-5.


ELECTRICAL SYSTEM (CONT'D)

Fuses, Diodes & Relays (Cont'd)

Figure 60-10-3

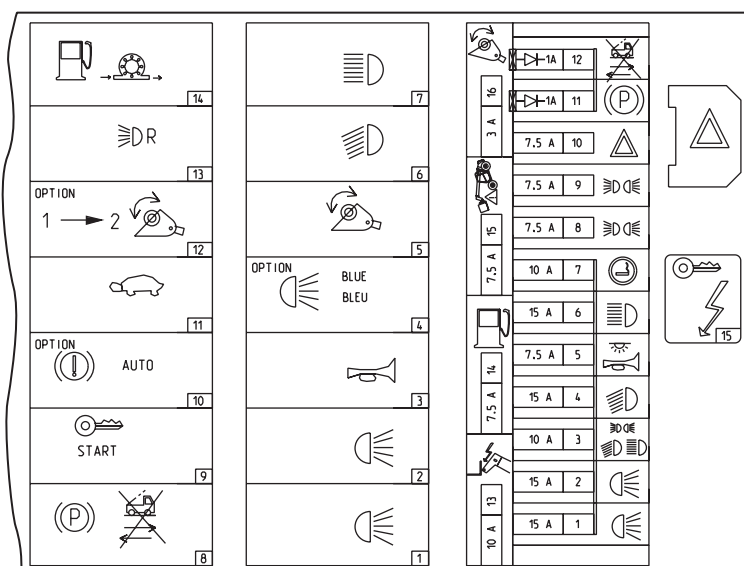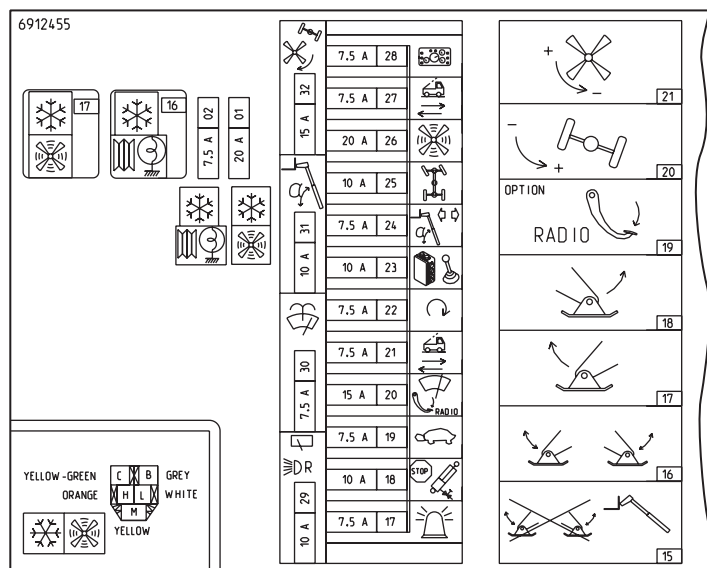

E18

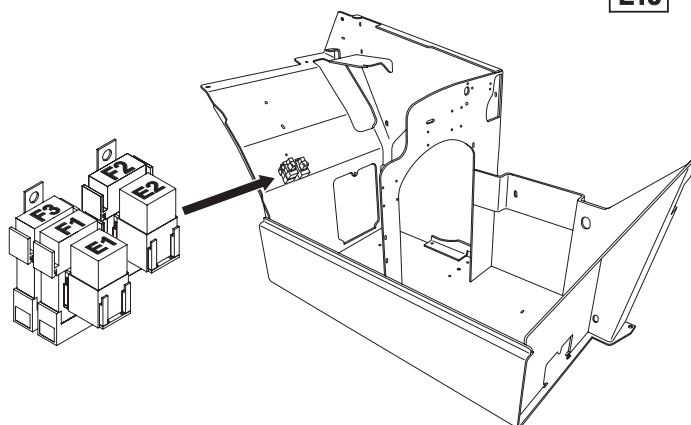

S0401

Fuses and diodes**[Figure 60-10-3]**

Reference	Gauge	Function protected
1	15 A	Front work lights
2	15 A	Rear work lights
3	10 A	Lighting and full-beam control
4	15 A	Headlamps
5	7.5 A	Road alarm and ceiling light
6	15 A	Full-beam
7	10 A	Cigarette lighter
8	7.5 A	Left side-lights
9	7.5 A	Right side-lights
10	7.5 A	Hazard warning lights
11	DIODE 1 A	Parking brake
12	DIODE 1 A	Advance safety if parking brake tight
13	10 A	Second hydraulic function on boom (option)
14	15 A	Fuel pump
15	7.5 A	Stability indicator and fuel pump
16	3 A	Hydraulic function on boom
17	7.5 A	Rotating beacon (option)
18	10 A	Brake lights, rear hydraulic options, stop lights
19	7.5 A	Slow travel speed
20	15 A	Front wiper
21	7.5 A	Transmission control box supply
22	7.5 A	Engine cutoff
23	7.5 A	Joystick supply / Joystick control box
24	7.5 A	Direction indicators
25	10 A	Steering mode control
26	20 A	Heating fan
27	7.5 A	Direction of travel
28	7.5 A	Instrument panel supply
29	10 A	Reversing light and roof windscreen wiper (option)
30	7.5 A	Rear windscreen wiper: Rear windscreen and roof washer
31	10 A	Boom angle measurement
32	7.5 A	Fan direction reversing (option) correction
01	20 A	Air conditioning fan (option)
02	7.5 A	Air conditioning compressor (option)
F01	50 A	permanent line (+)
F02	40 A	Permanent line (+) by contact key
F03	70 A	Glow plugs


Relays**[Figure 60-10-3]**

Reference	Function performed
1	Front work lights
2	Rear work lights
3	Road horn
4	Blue lights (option)
5	Hydraulic function on boom
6	Headlamps
7	Full-beam
8	Advance safety if parking brake tight
9	Starting safety if transmission is in gear
10	Not used
11	Slow travel speed
12	Second hydraulic function on boom
13	Backup lights / backup alarm
14	Fuel pump
15	Prevent raising of the stabilisers
16	Stabilisers
17	Raise left stabiliser
18	Raise right stabiliser
19	Radio control for acceleration of the engine
20	Frame leveling
21	Fan direction reversing (option) correction
E01	Glowplugs
E02	Starter control
E15	12V power relay after contact
E16	Air conditioning compressor (option)
E17	Air conditioning fan (option)
E18	Center for the directional signals (located beneath the fuse box)

ELECTRICAL SYSTEM INFORMATION (CONT'D)

Fuses, Diodes & Relays (Cont'd)

Figure 60-10-4

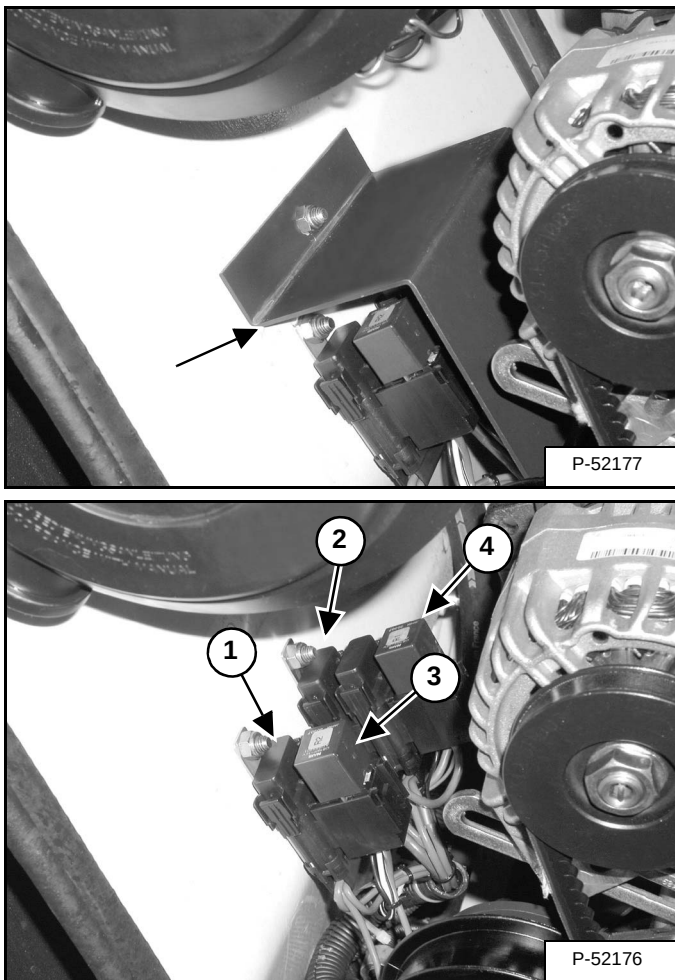

Remove the access panel at the rear of the engine compartment. The relay/fuse receptacles are located under the air conditioning compressor [Figure 60-10-4].

FUSES

Ref.	Description	Amps
1	Unswitched Power Fuse	40
2	Switched Power Fuse	50

RELAYS

Ref.	Description
3	Starting Motor Relay
4	Preheat Relay



Bobcat®

BATTERY

Removal And Installation

! WARNING


Batteries contain acid which burns eyes and skin on contact. Wear goggles, protective clothing and rubber gloves to keep acid off body.

In case of acid contact, wash immediately with water. In case of eye contact get prompt medical attention and wash eye with clean, cool water for at least 15 minutes.

If electrolyte is taken internally drink large quantities of water or milk! DO NOT induce vomiting. Get prompt medical attention.


W-2065-1296

Figure 60-20-1

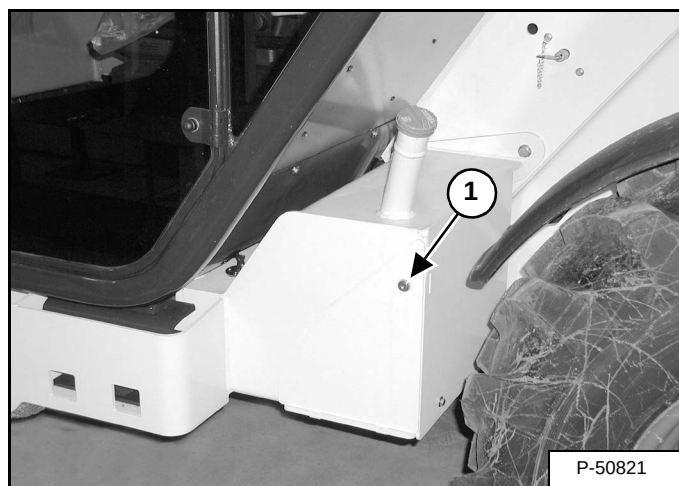


Remove the battery access door (Item 1) [Figure 60-20-1].

Figure 60-20-2

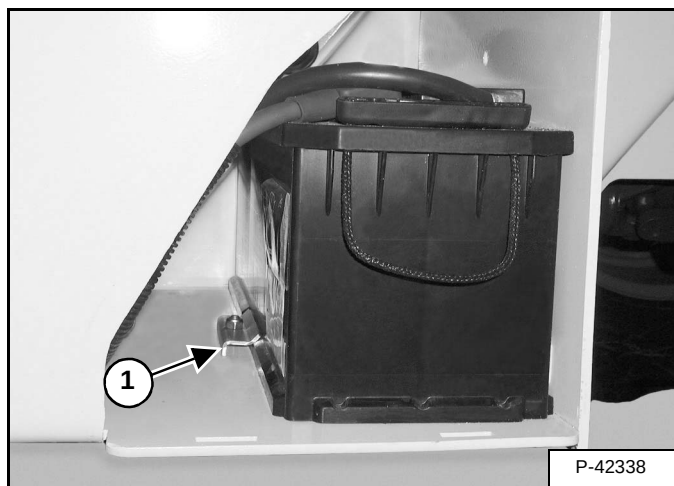

Remove the battery hold down clamp (Item 1) [Figure 60-20-2].

Figure 60-20-3

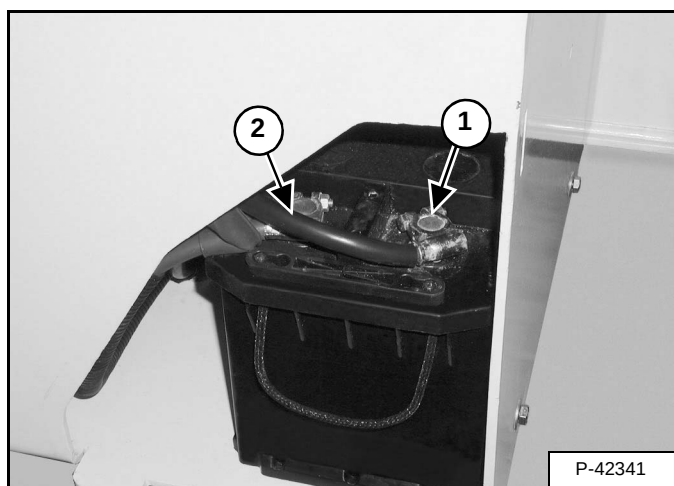

Always disconnect the negative cable (Item 1) [Figure 60-20-3] first to prevent sparks.


Remove the positive battery cable (Item 2) [Figure 60-20-3].

Remove the battery.

BATTERY (CONT'D)


Servicing

Figure 60-20-4

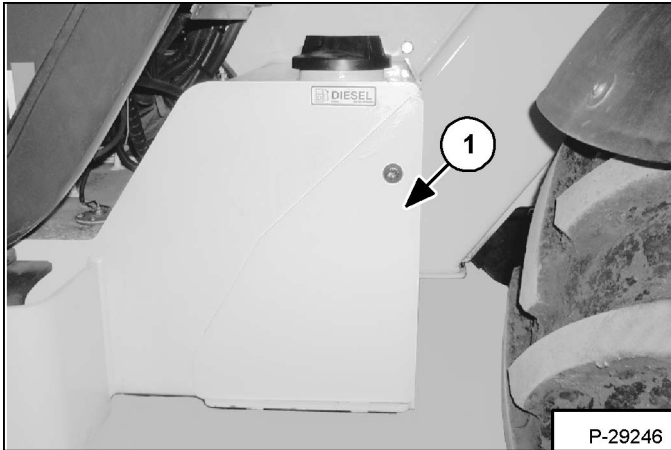

P-29246

Figure 60-20-5

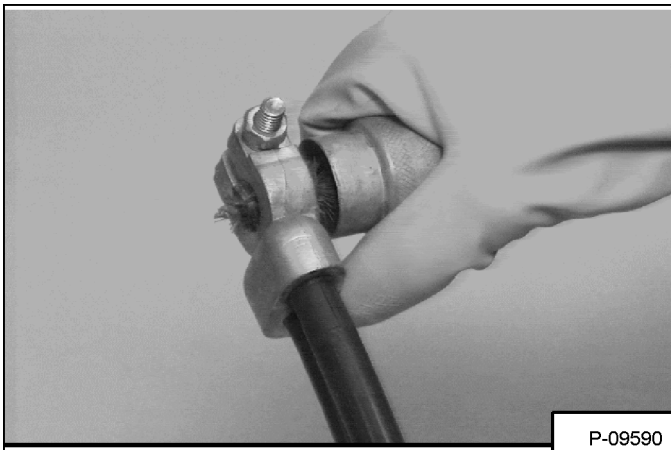

P-09590

Always clean the terminals and cable ends when installing a new battery [Figure 60-20-4] and [Figure 60-20-5].

When installing the battery in the machine, do not touch any metal parts with the battery terminal posts.

Connect and tighten the battery cables. Connect the negative (-) cable last to prevent sparks.

WARNING


Batteries contain acid which burns eyes and skin on contact. Wear goggles, protective clothing and rubber gloves to keep acid off body.

In case of acid contact, wash immediately with water. In case of eye contact get prompt medical attention and wash eye with clean, cool water for at least 15 minutes.

If electrolyte is taken internally drink large quantities of water or milk! DO NOT induce vomiting. Get prompt medical attention.

W-2065-1296

Figure 60-20-6

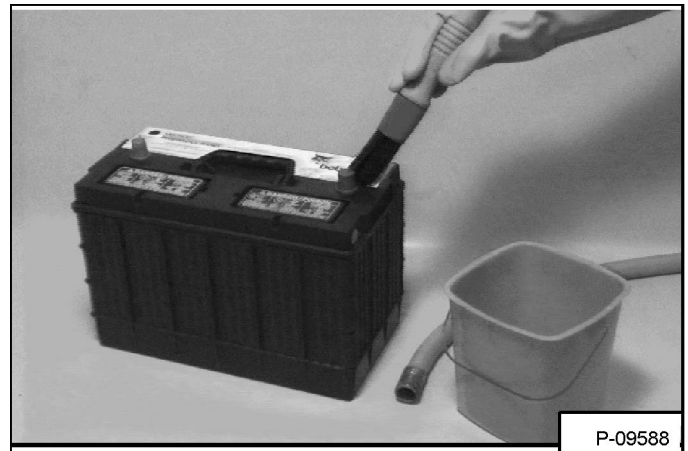

P-09588

The battery cables must be clean and the connections tight. Remove acid or corrosion from the battery and cables with a sodium bicarbonate (baking soda) and water solution [Figure 60-20-6].

Check the electrolyte level in the battery. Add distilled water as needed.

Put Battery Saver (P/N 6664458) or grease on the battery terminals and cable ends to prevent corrosion.


BATTERY (CONT'D)

Using A Booster Battery (Jump Starting)

If it is necessary to use a booster battery to start the engine, BE CAREFUL! There must be one person in the operator's seat and one person to connect and disconnect the battery cables. (Booster Cables)

The key switch must be OFF. The booster battery must be 12 volt.

Figure 60-20-7

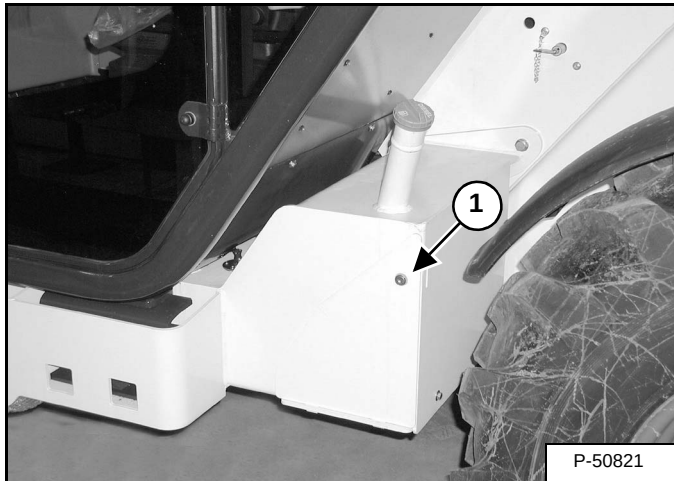

Remove the battery access door (Item 1) [Figure 60-20-7].

NOTE: The battery compartment is located in front of the left rear tire, on the back side of the cab.

WARNING

Keep arcs, sparks, flames and lighted tobacco away from batteries. When jumping from booster battery make final connection (negative) at engine frame. Do not jump start or charge a frozen or damaged battery. Warm battery to 60°F. (16°C.) before connecting to a charger. Unplug charger before connecting or disconnecting cables to battery. Never lean over battery while boosting, testing or charging. Battery gas can explode and cause serious injury.

W-2066-1296


IMPORTANT

Damage to the alternator can occur if:

- Engine is operated with battery cables disconnected.
- Battery cables are connected when using a fast charger or when welding on the loader. (Remove both cables from the battery.)
- Extra battery cables (booster cables) are connected wrong.

I-2023-1285

Figure 60-20-8

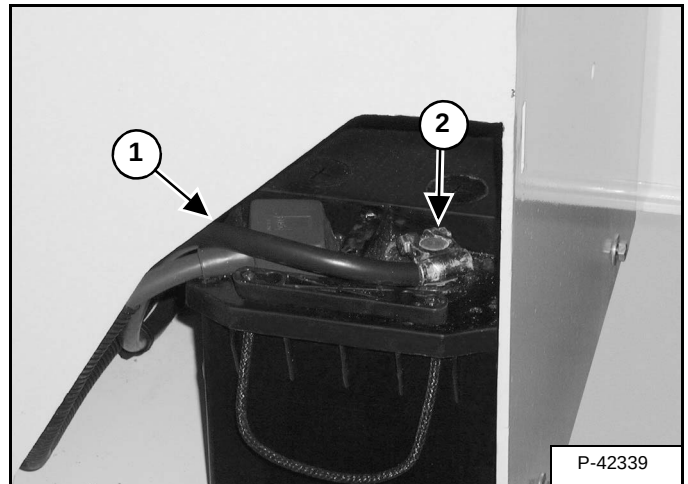

Connect the end of the first cable to the positive (+) terminal of the booster battery. Connect the other end of the same cable to the positive terminal (Item 1) [Figure 60-20-8] on the Telescopic Handler battery.

Connect the end of the second cable to the negative (-) terminal of the booster battery. Connect the other end of the same cable to the negative terminal (Item 2) [Figure 60-20-8] on the Telescopic Handler battery.

Keep cables away from moving parts. Start the engine.

After the engine has started, remove the ground (-) cable (Item 2) [Figure 60-20-8] first.

Remove the cable from the positive terminal (Item 1) [Figure 60-20-8].




Bobcat®

ALTERNATOR

Removal And Installation


Figure 60-30-1

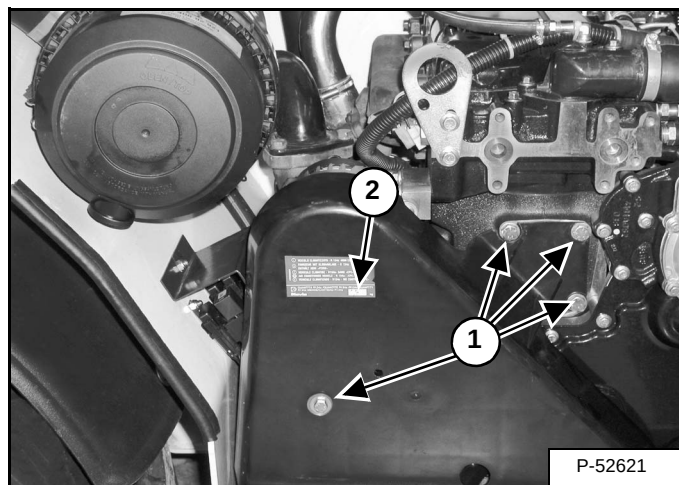

Open the engine cover.


Remove the four bolts (Item 1) and belt shield (Item 2) [Figure 60-30-1].

Figure 60-30-2

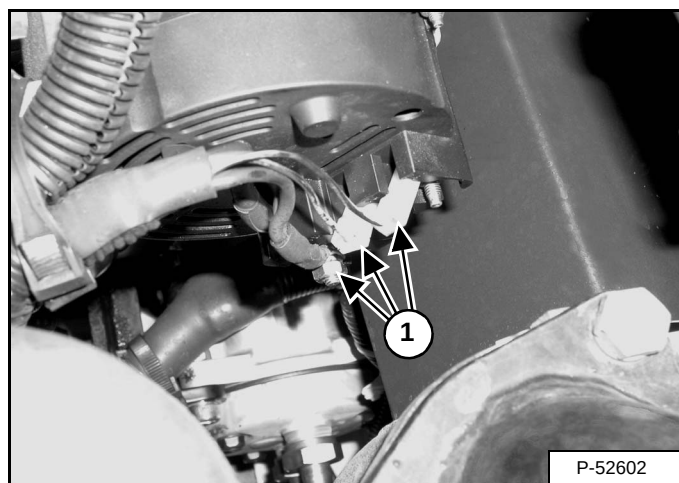


Remove the three connectors (Item 1) [Figure 60-30-2] from the back of the alternator.

Figure 60-30-3

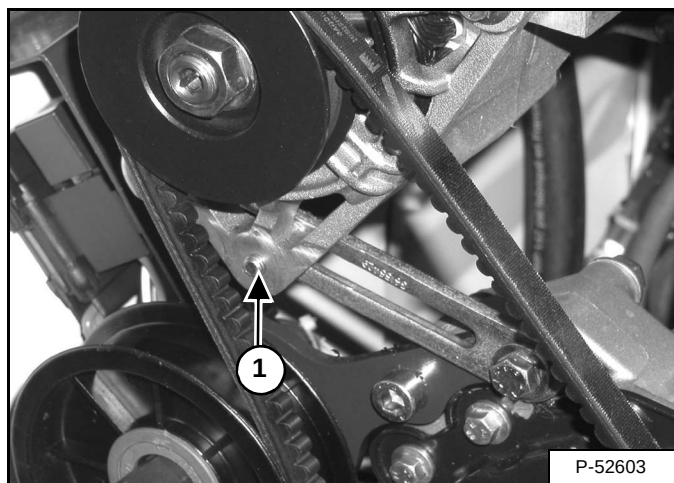

Loosen and remove the alternator adjusting bolt (Item 1) [Figure 60-30-3].

Figure 60-30-4

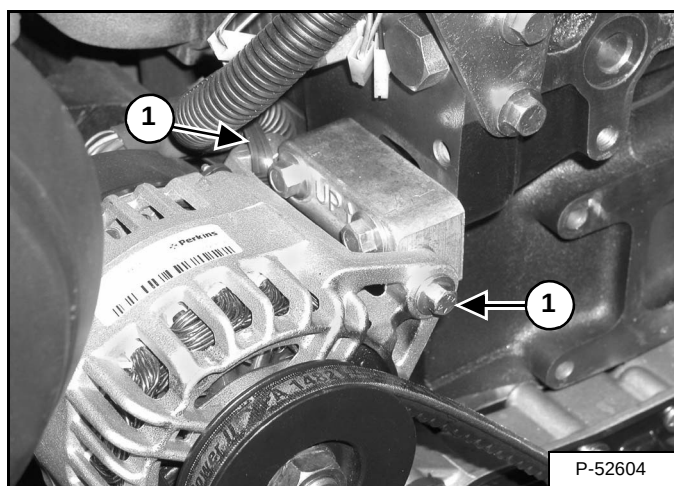

Loosen and remove both mounting bolts (Item 1) [Figure 60-30-4].

Remove the alternator.


ALTERNATOR (CONT'D)

Adjusting The Alternator Belt

Stop the engine.


Open the engine cover.

Figure 60-30-5

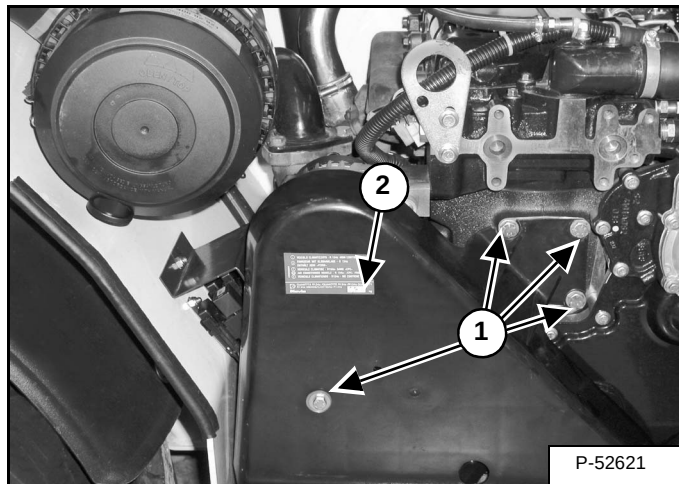

Remove the two bolts (Item 1) and the belt shield (Item 2) [Figure 60-30-5].


Figure 60-30-6

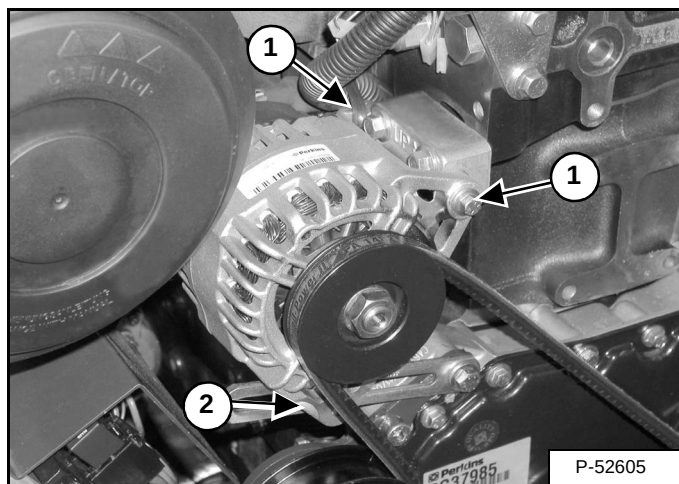

Loosen the two alternator mounting bolts (Item 1) [Figure 60-30-6].

Loosen the adjustment bolt (Item 2) [Figure 60-30-6].

Figure 60-30-7

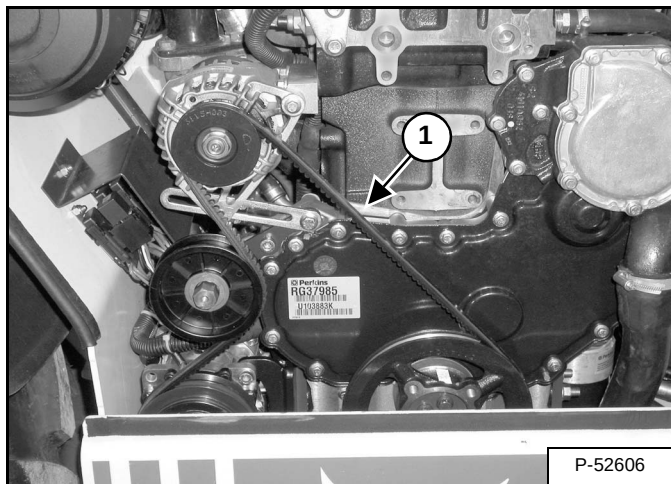

Move the alternator until the belt has 5/16 inch (8,0 mm) movement at the middle of the belt span (Item 1) [Figure 60-30-7] with 15 lbs. (20 Nm) of force.

Tighten the adjustment and mounting bolts.


Install the belt shield.

Close the engine cover

STARTER


Removal And Installation

Figure 60-40-1

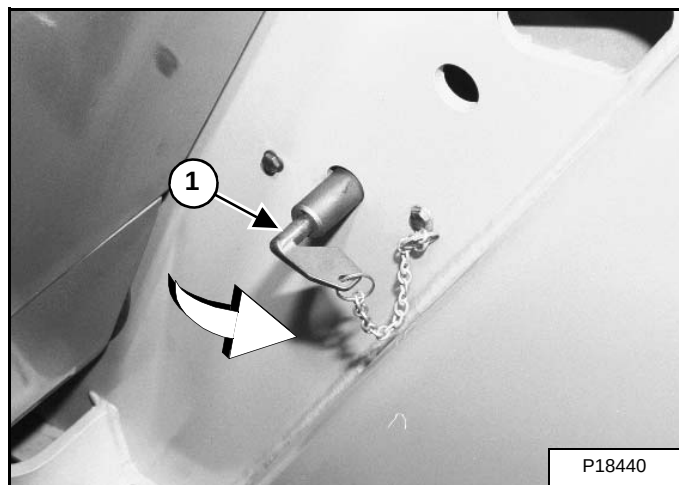


Rotate the battery disconnect switch (Item 1) [Figure 60-40-1] to the right, to disconnect the power supply from the battery.

Figure 60-40-2

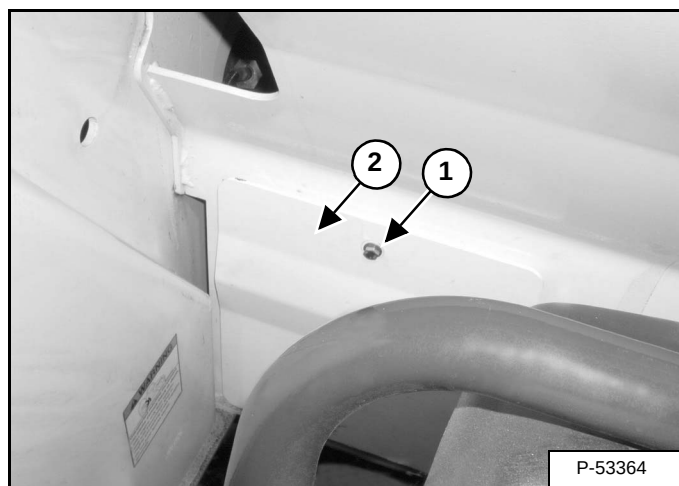


Remove the access cover mounting bolt (Item 1) and remove the access cover (Item 2) [Figure 60-40-2].

Figure 60-40-3

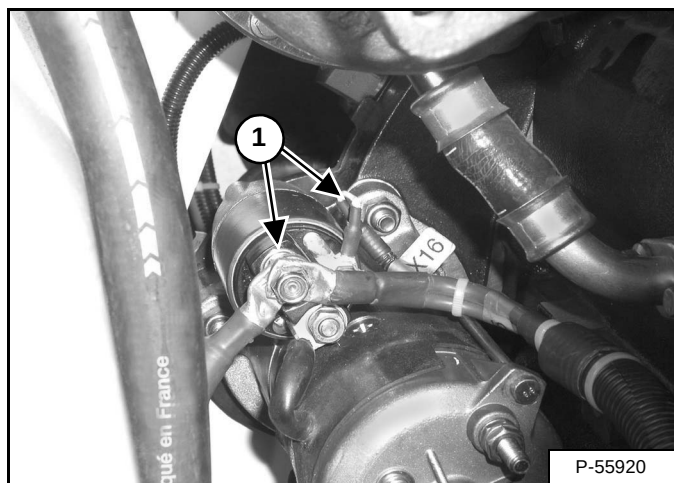

Remove the three wires (Item 1) [Figure 60-40-3] from the starter.

Figure 60-40-4

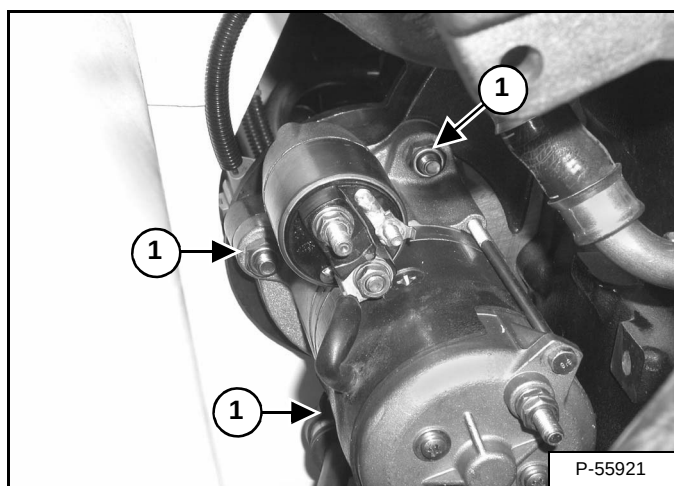

Remove the three nuts and bolts (Item 1) [Figure 60-40-4] and remove the starter.

Installation: Tighten to 40-45 ft.-lbs. (54-61 Nm) torque.

STARTER (CONT'D)

Parts Identification

Starter Parts Are Not serviceable.

STARTER (CONT'D)

Assembly/disassembly

The starter is not serviceable. If the starter is defective please contact your dealer to order a complete starter.




Bobcat®

LIGHTS


Rear Light Removal And Installation

Figure 60-60-1

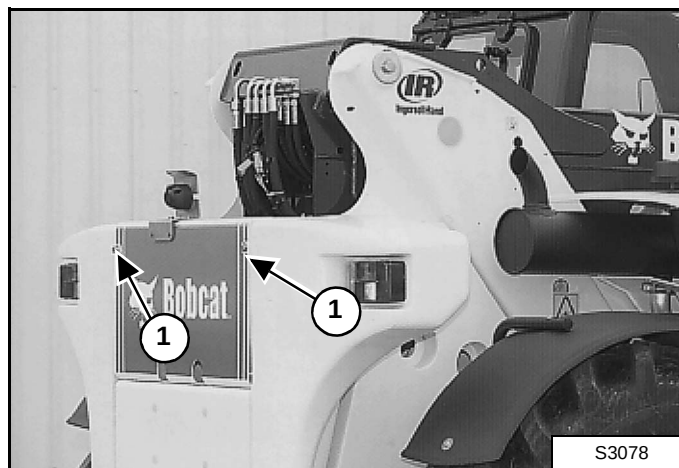


Remove the two rear cover mounting bolts (Item 1) [Figure 60-60-1]. Remove the cover.

Figure 60-60-2

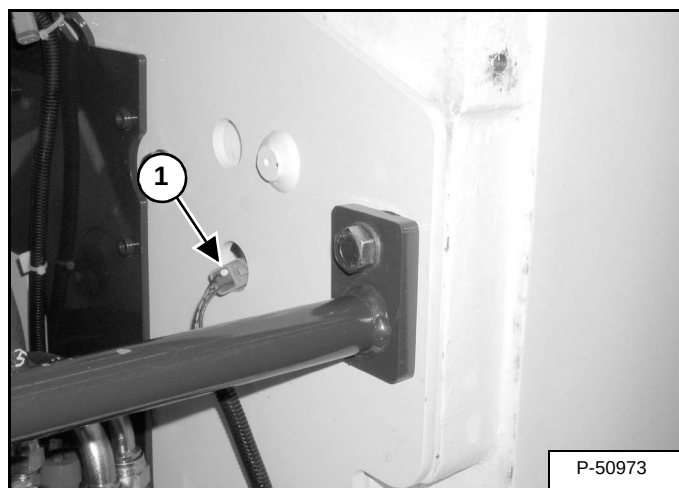


Unplug the light harness connector (Item 1) [Figure 60-60-2] from the main harness.

Figure 60-60-3

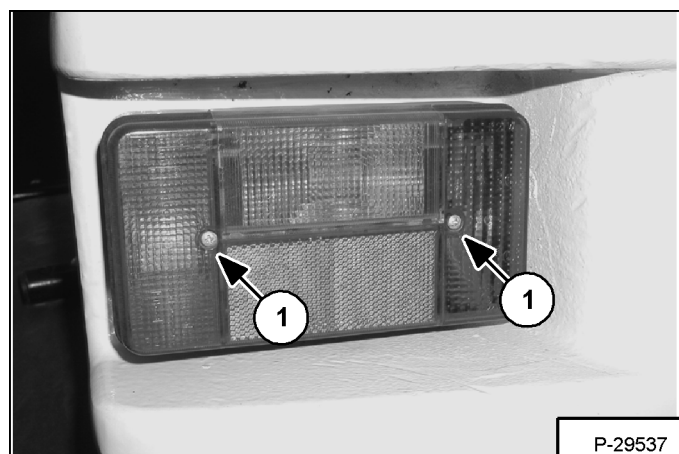

Remove the two lens retainer screws (Item 1) [Figure 60-60-3].

Figure 60-60-4

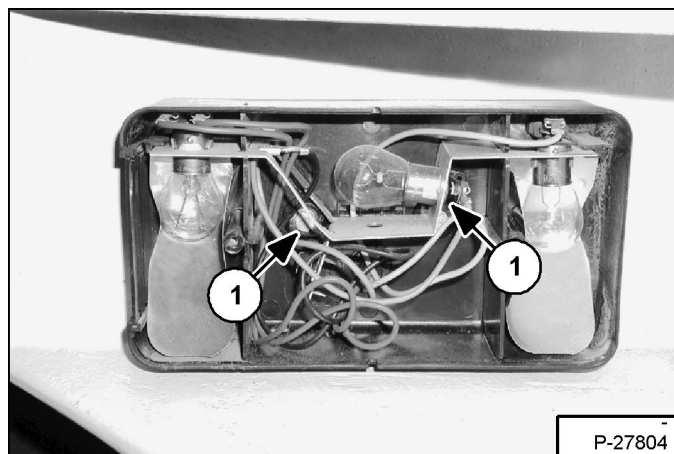


Remove the two light mounting bolts (Item 1) [Figure 60-60-4].

Remove the light assembly.

LIGHTS (CONT'D)


Front Light Removal And Installation

Figure 60-60-5

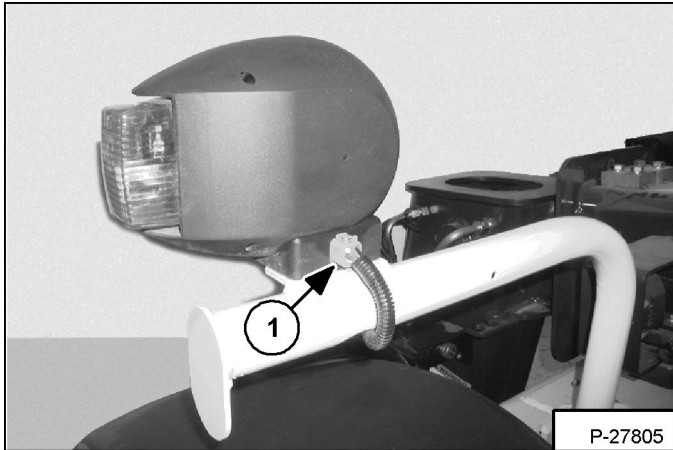

Unplug the harness (Item 1) [Figure 60-60-5] from the light.

Figure 60-60-6

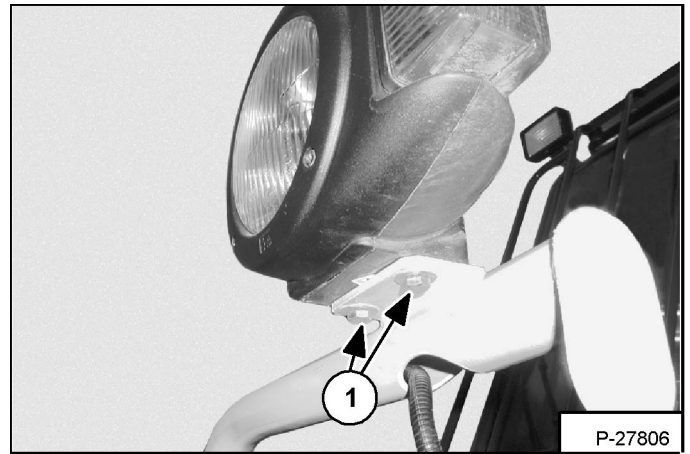


Remove the two bolts (Item 1) [Figure 60-60-6] and remove the light.

TRAVEL/SIGNAL LEVER

Removal And Installation


Remove the instrument panel. (See "Removal And Installation" on page 60-80-1)

Figure 60-60-1

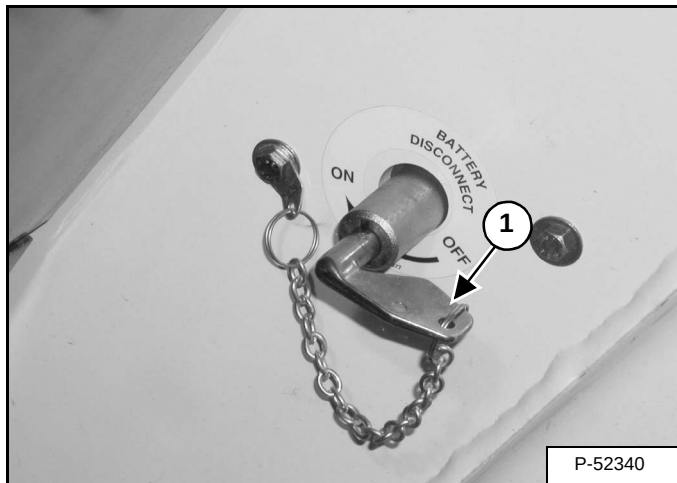


Rotate the battery disconnect switch (Item 1) [Figure 60-60-1] to the right, to disconnect the power supply from the battery.

Figure 60-70-2

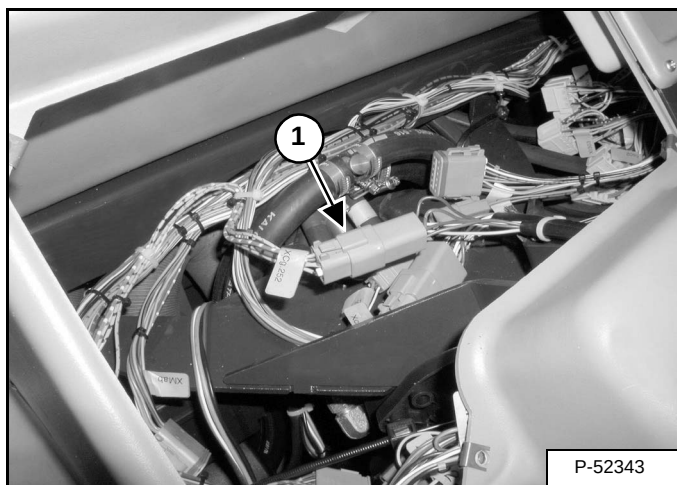


Disconnect the travel control wire harness connector (Item 1) [Figure 60-70-2].

Figure 60-70-3

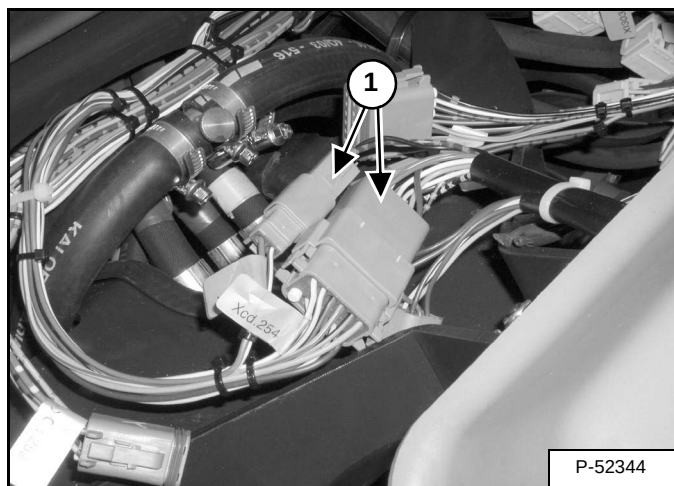

Disconnect the two signal control wire connectors (Item 1) [Figure 60-70-3].

Figure 60-70-4

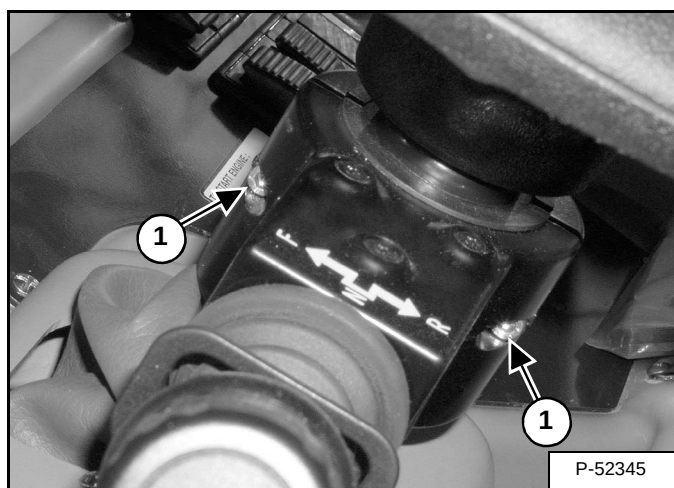


Remove the two screws (Item 1) [Figure 60-70-4] from the travel/signal levers.

TRAVEL/SIGNAL LEVER (CONT'D)

Removal And Installation (Cont'd)


Installation: Align the pin (Item 1) in the travel lever with the top hole (Item 2) [Figure 60-70-7] in the steering column.

Figure 60-70-5

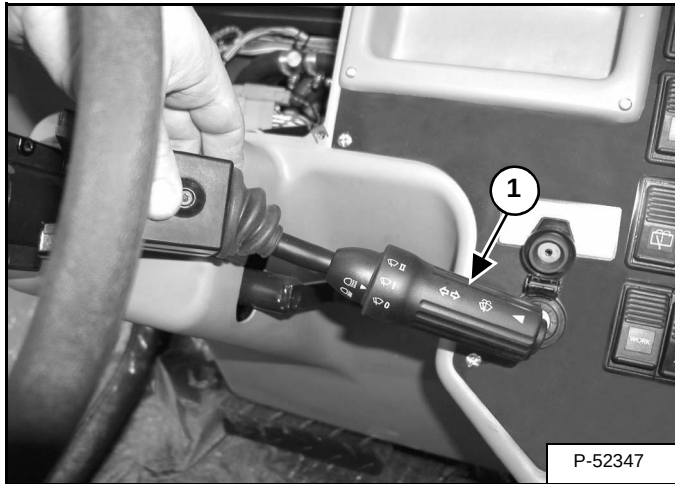


Remove the signal lever (Item 1) [Figure 60-70-5].

Figure 60-70-6

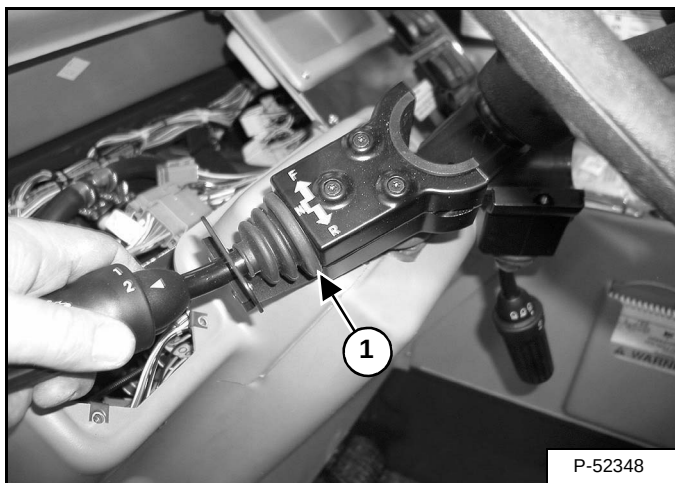

Remove the travel lever (Item 1) [Figure 60-70-6].


Figure 60-70-7

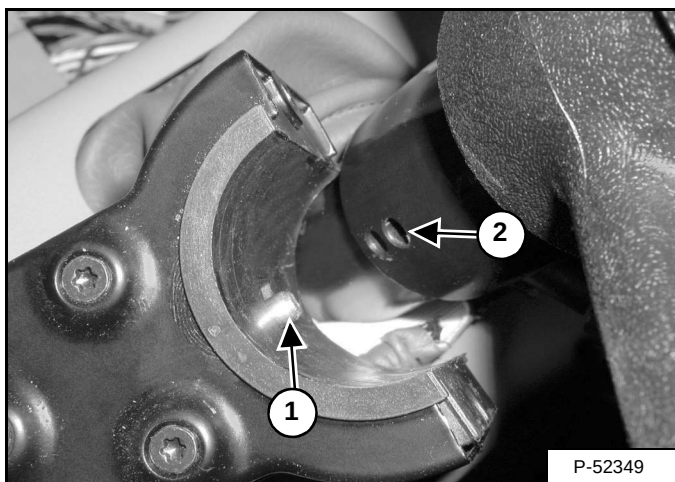

INSTRUMENT PANEL


Removal And Installation

Figure 60-80-1

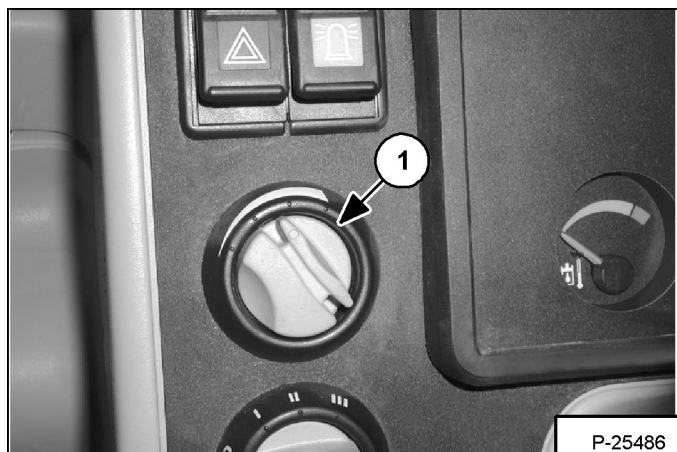


Remove the temperature control knob (Item 1) [Figure 60-80-1]. (If Equipped)

Figure 60-80-2

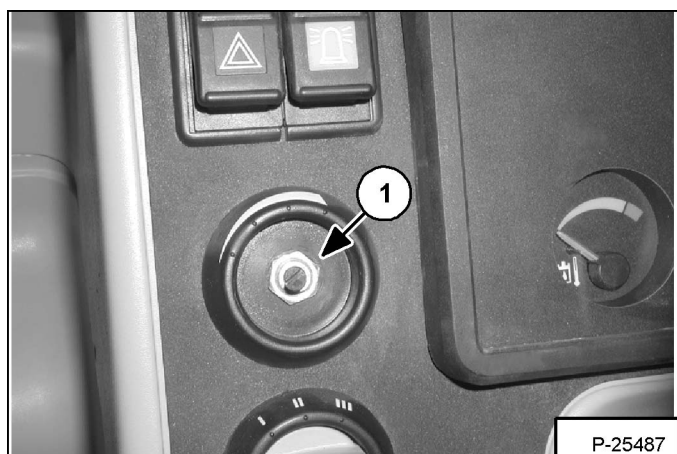


Remove the nut (Item 1) [Figure 60-80-2] letting the temperature controller fall inward.

Figure 60-80-3

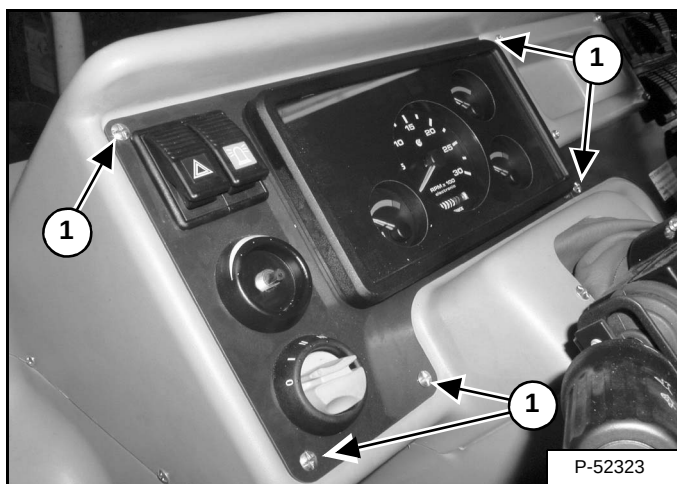

Remove the five instrument panel mounting bolts (Item 1) [Figure 60-80-3].

Figure 60-80-4

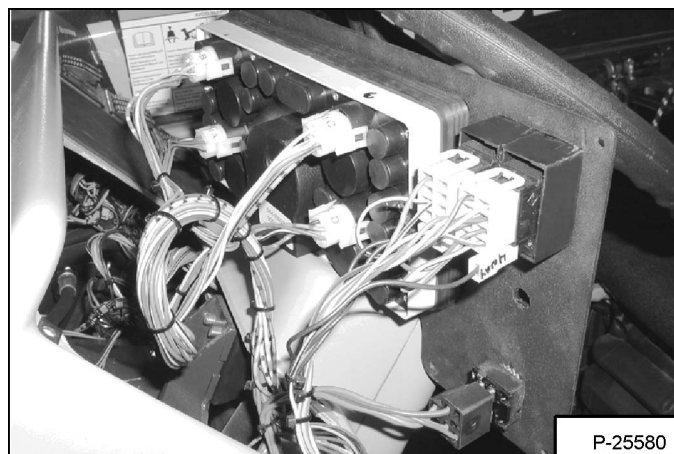

Tilt the instrument panel forward and unplug all connectors [Figure 60-80-4]. Remove the instrument panel.


NOTE: Mark the connectors for correct installation.



Bobcat®

SWITCH PANEL

Parts description

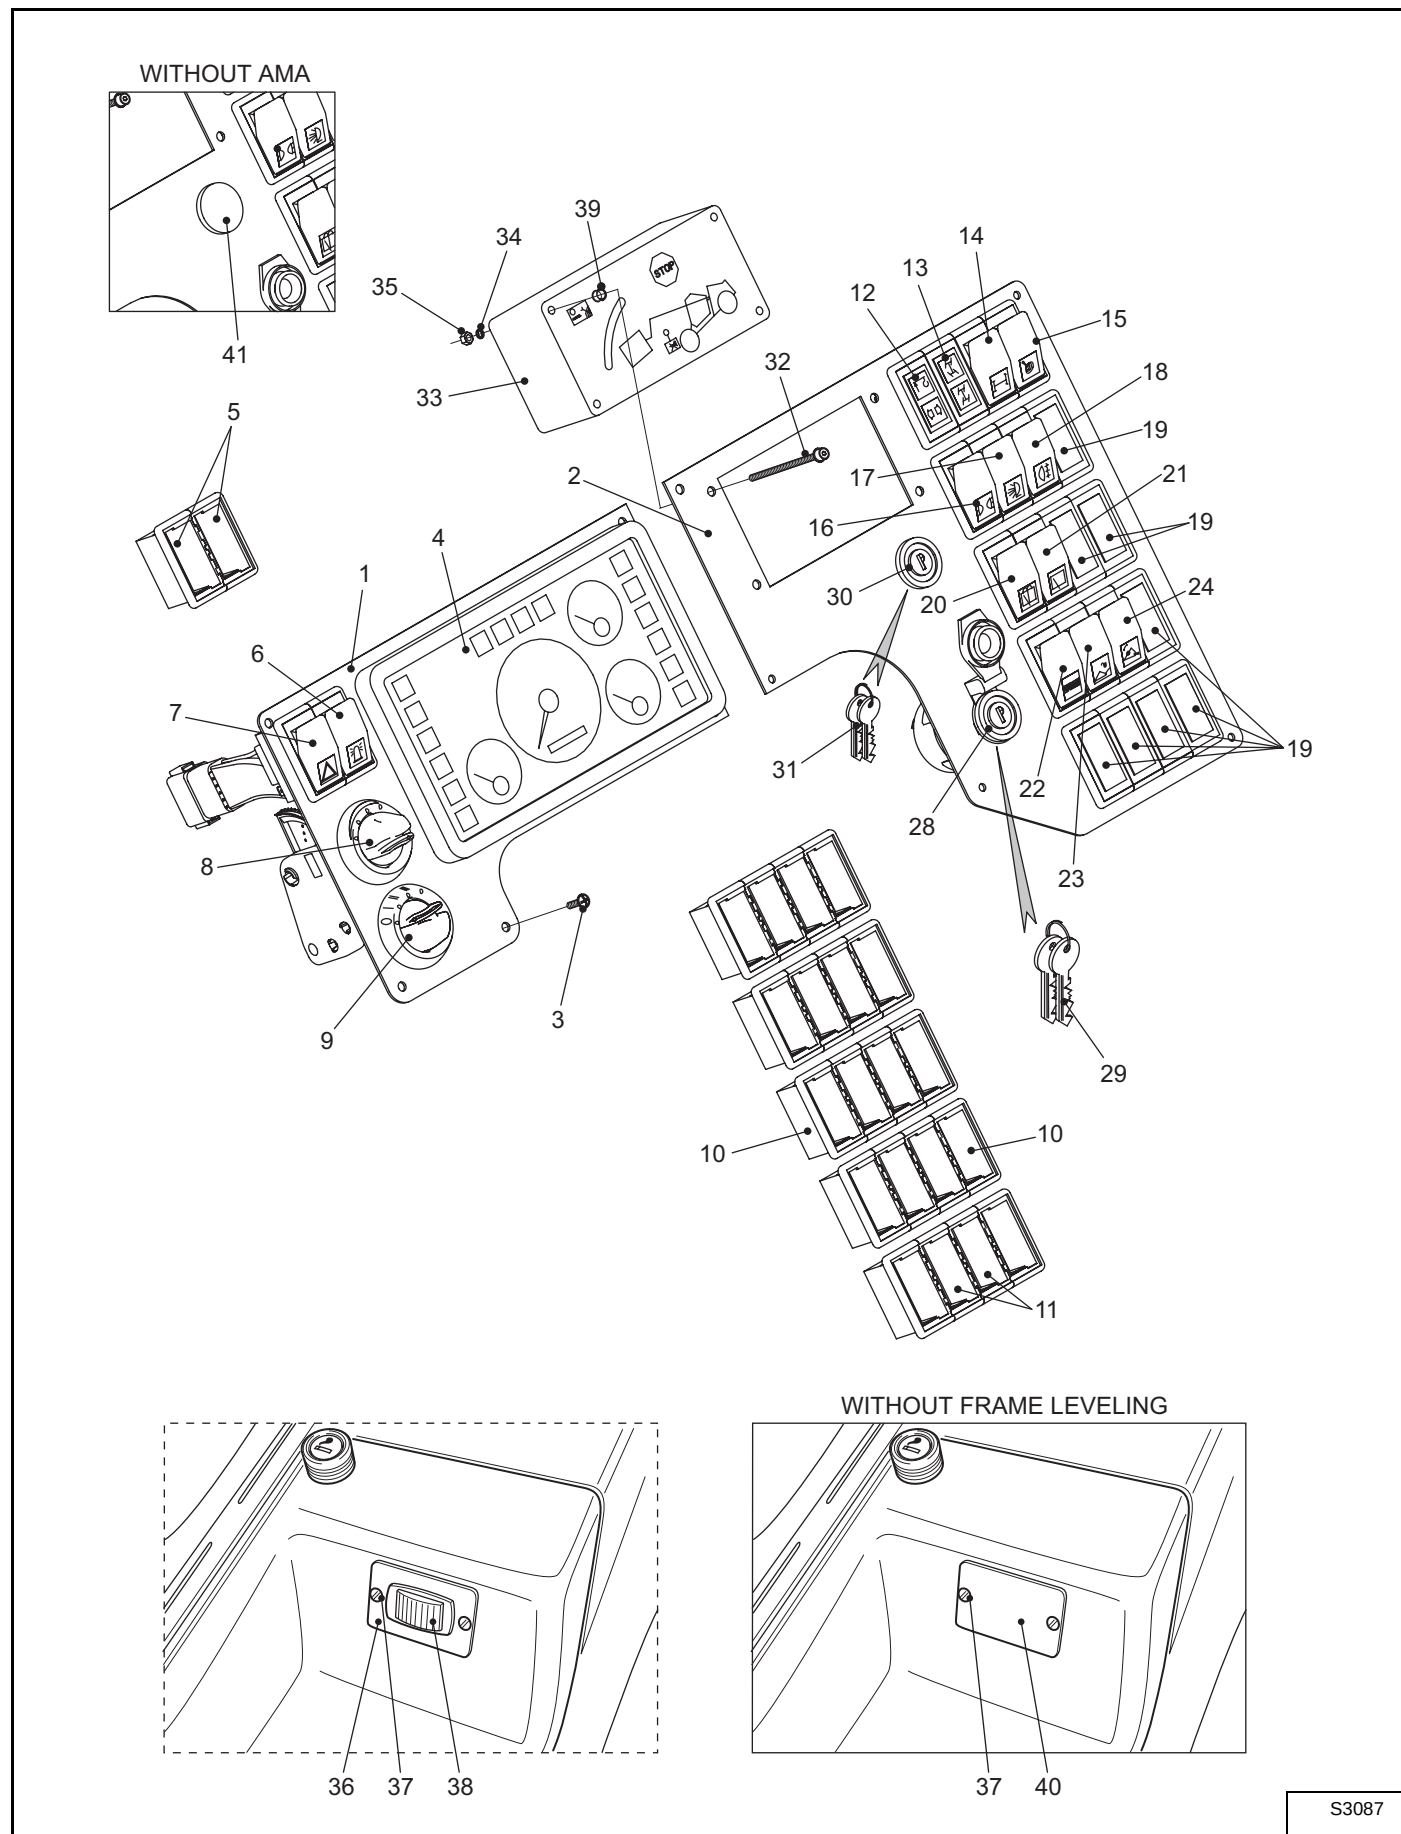

S3087

SWITCH PANEL (CONT'D)


Parts description (Cont'd)

1	L.H. control panel plate
2	R.H. control panel plate
3	Screw
4	Instrument panel
5	Bezel
6	Switch, beacon light
7	Warning Switch
8	Heating Control Valve
9	Fan Speed Switch
10	Bezel For outer left and right positions
11	Bezel For middle positions
12	Trailer turn indicator
13	Steering mode indicator
14	Steering mode switch
15	Lever Switch
16	Switch, head lamp
17	Working light switch
18	Fog light switch
19	Blank Plug
20	Switch, rear wiper/washer
21	Switch, roof wiper (Option)
22	Switch, transmission mode
23	Locking switch
24	Switch, aux. hydr.
28	Ignition Switch
29	Set of keys (ignition)
30	Knob
31	Set of keys
32	Screw
33	Stability indicator and wire harness
34	Washer
35	Nut
36	Support for frame leveling knob
37	Screw
38	Switch (proportional)
39	Spacer
40	Plate
41	Plug

BRAKE LIGHT SWITCH

Removal And Installation


Figure 60-100-1

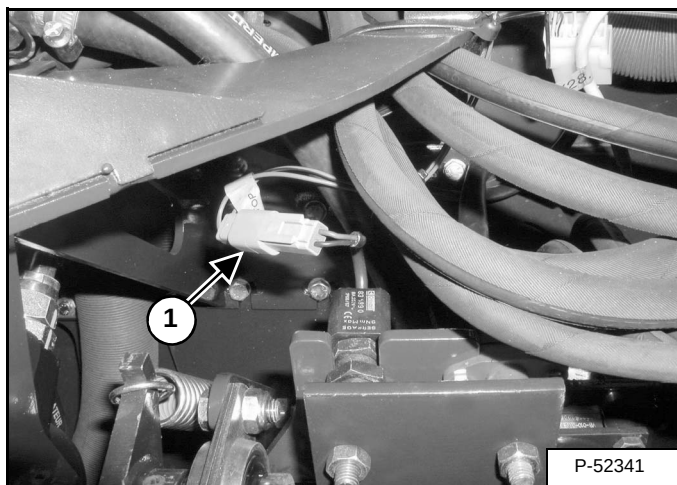

Remove the dash cover/column cover. (See "Removal And Installation" on page 50-130-1)

Unplug the switch connector (Item 1) [Figure 60-100-1] from the wiring harness.


Figure 60-100-2

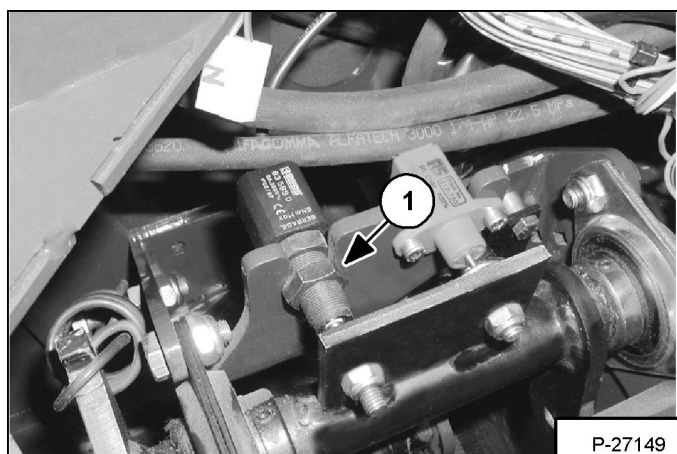

Loosen the nut (Item 1) [Figure 60-100-2]. Remove the switch.

Adjustment

Figure 60-100-3

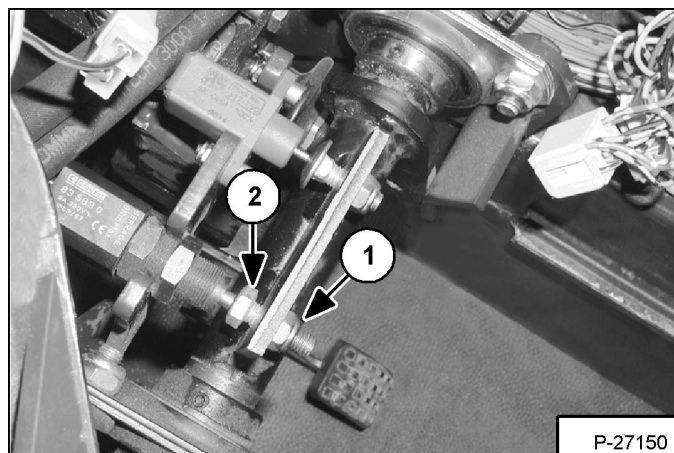

Remove the dash cover/column cover. (See "Removal And Installation" on page 50-130-1)

Loosen the nut (Item 1) [Figure 60-100-3].

With the brake pedal at rest, turn the adjustment bolt (Item 2) [Figure 60-100-3] until it touches the brake light switch plug.

Tighten the nut (Item 1) [Figure 60-100-3].




Bobcat®

FRONT WIPER MOTOR

Removal And Installation


Figure 60-110-1

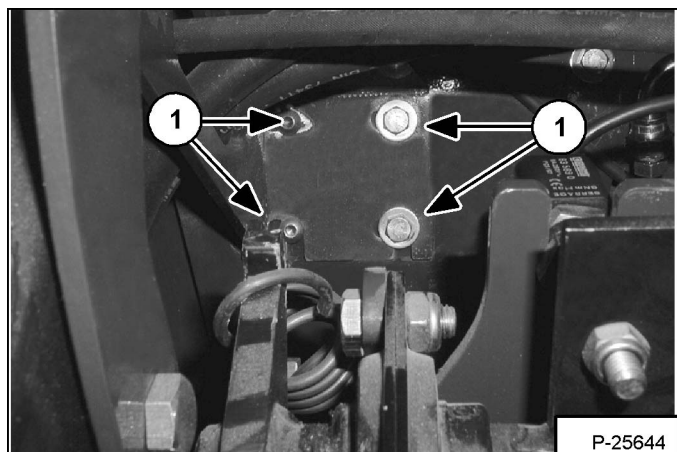

Remove the dash cover/steering column cover. (See "Removal And Installation" on page 50-130-1)

Remove the four lower mounting bracket bolts (Item 1) [Figure 60-110-1].


Figure 60-110-2

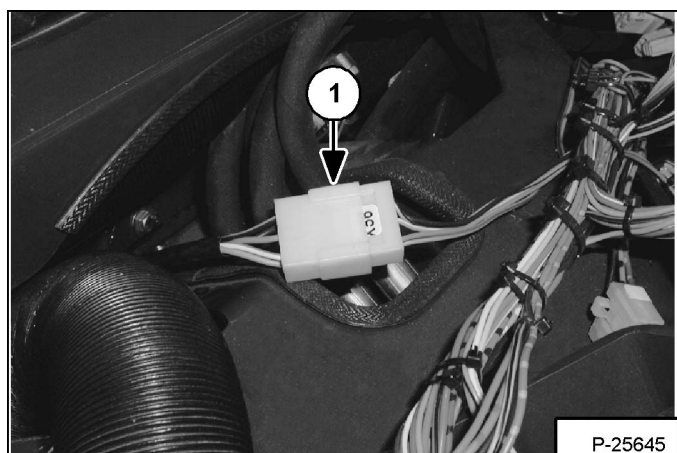

Disconnect the front wiper connector (Item 1) [Figure 60-110-2] from the main harness.


Reposition the main wire harness to the right side of the cab.

Figure 60-110-3

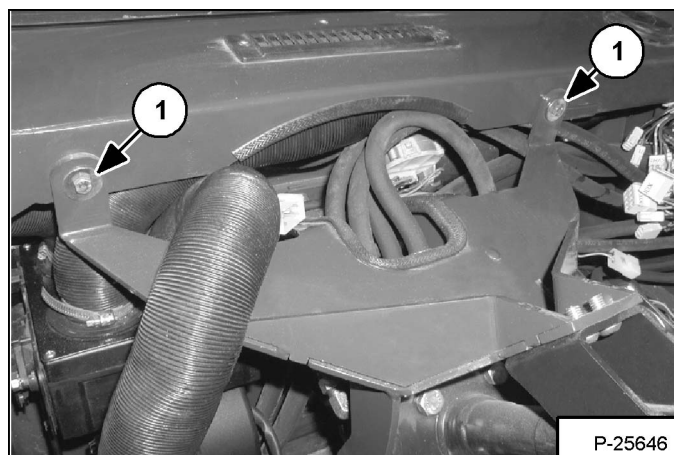

Remove the two mounting bracket bolts (Item 1) [Figure 60-110-3].

Figure 60-110-4

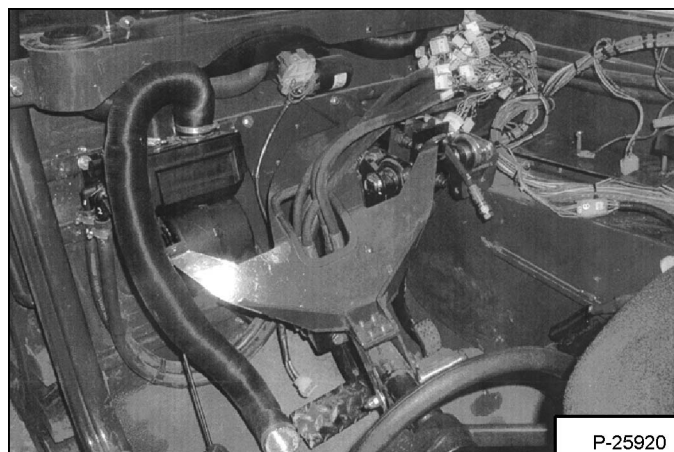


Reposition the steering column assembly (as shown) [Figure 60-110-4].

FRONT WIPER MOTOR (CONT'D)


Removal and Installation (Cont'd)

Figure 60-110-5

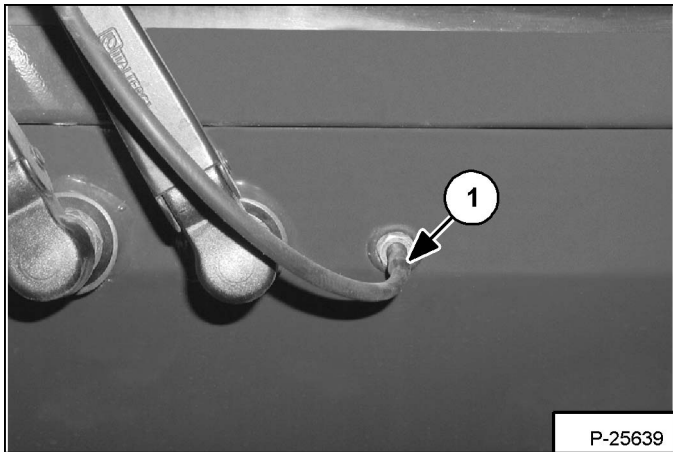


Remove the spray tube (Item 1) [Figure 60-110-5].

Figure 60-110-6

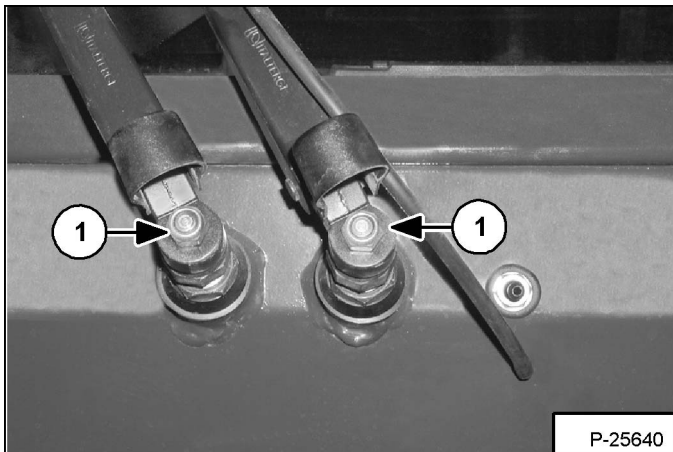


Flip the wiper covers and remove the two nuts (Item 1) [Figure 60-110-6].

Figure 60-110-7

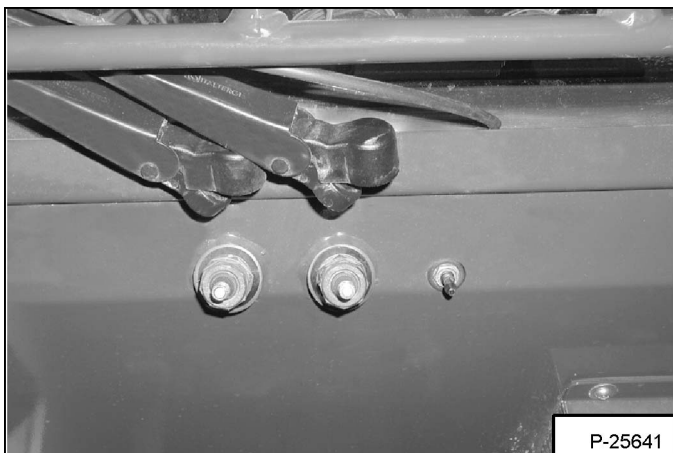

Remove the wiper arms from the wiper motor shafts [Figure 60-110-7].

Figure 60-110-8

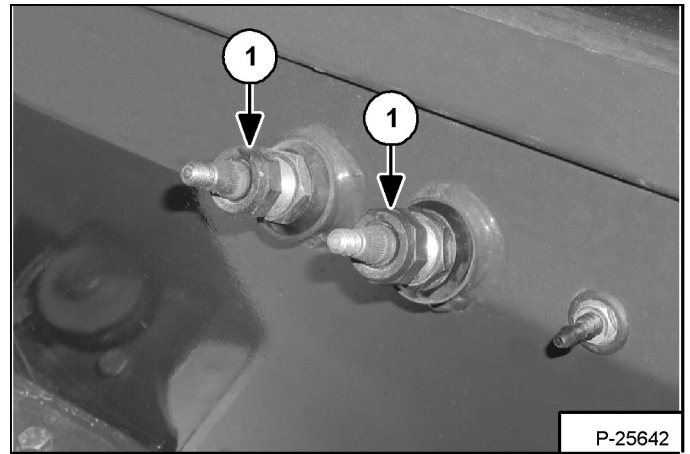


Remove both outer nuts (Item 1) [Figure 60-110-8].

FRONT WIPER MOTOR (CONT'D)


Removal And Installation (Cont'd)

Figure 60-110-9

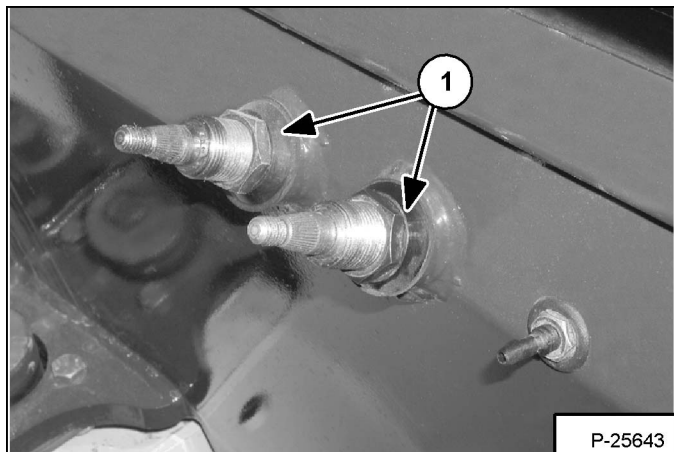

Remove both inner nuts and washers (Item 1) [Figure 60-110-9].

Figure 60-110-10

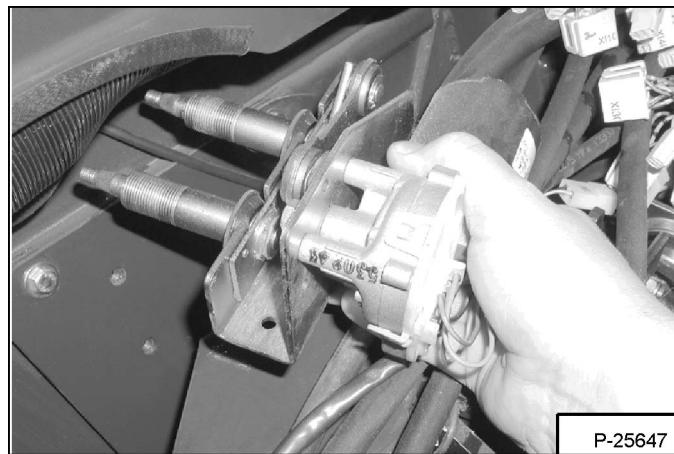

Remove the wiper motor from inside the cab [Figure 60-110-10].




Bobcat®

TOP WIPER MOTOR

Removal And Installation

Figure 60-120-1

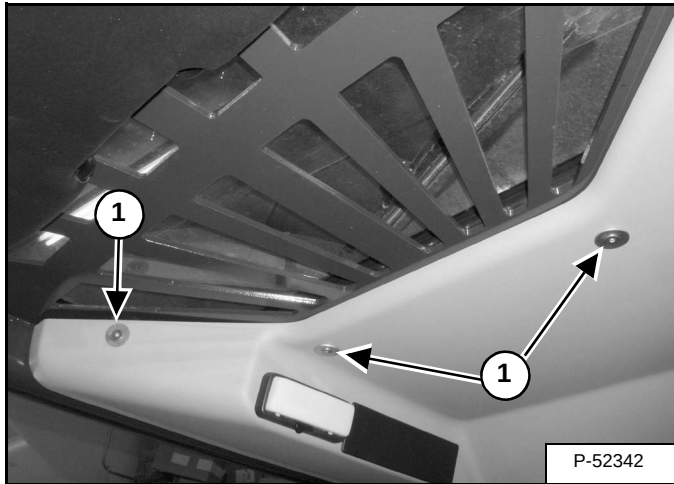

Remove the three screws (Item 1) [Figure 60-120-1] from the upper panel.


Figure 60-120-2



Slide the upper panel forward on the support rails [Figure 60-120-2].


Lower the panel.

Figure 60-120-3

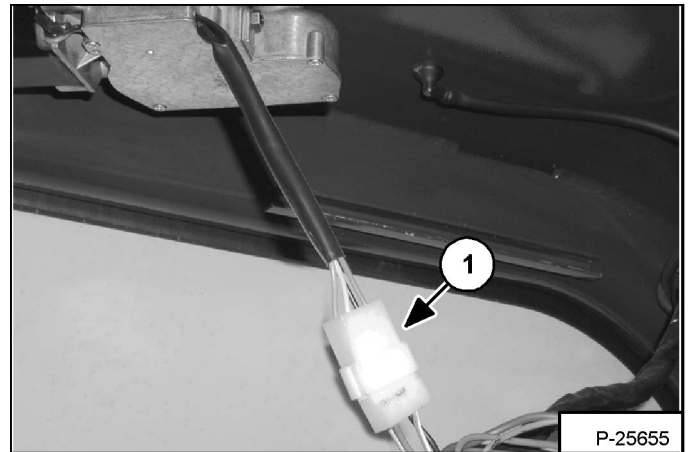

Unplug the wiper motor connector (Item 1) [Figure 60-120-3] from the harness.

Figure 60-120-4

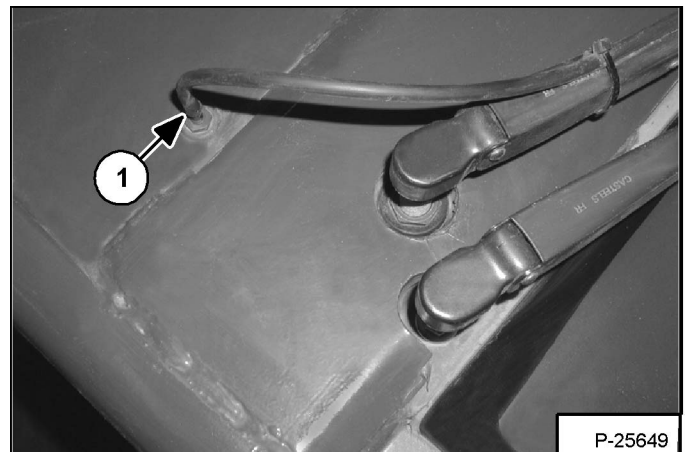


Remove the squirter tube (Item 1) [Figure 60-120-4].

TOP WIPER MOTOR (CONT'D)


Removal And Installation (Cont'd)

Figure 60-120-5

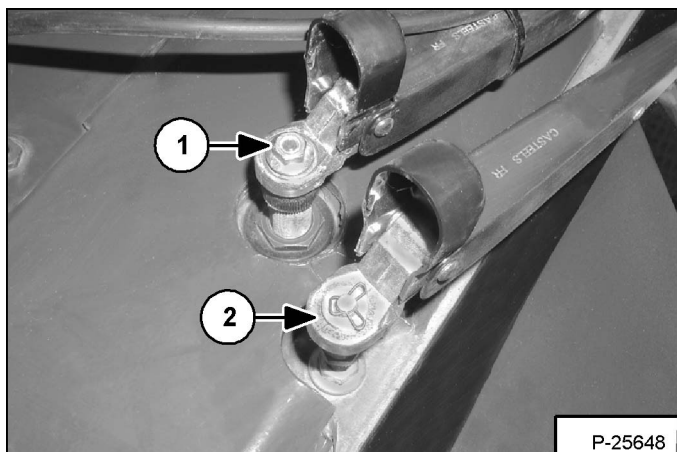


Flip open the wiper covers and remove the nut (Item 1) [Figure 60-120-5] and clip (Item 2) [Figure 60-120-5].

Figure 60-120-6

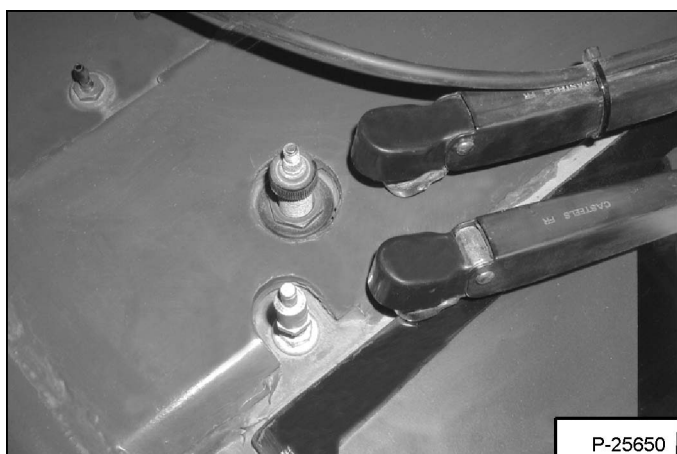


Remove the wiper arms from the wiper shafts [Figure 60-120-6].

Figure 60-120-7

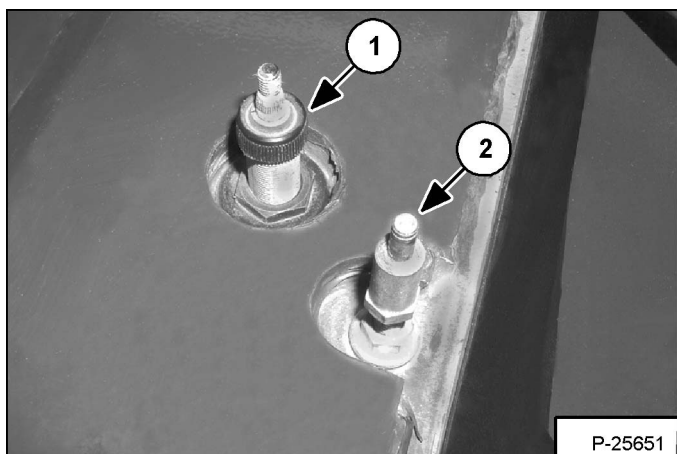

Remove the plastic nut (Item 1) and extension post (Item 2) [Figure 60-120-7].

Figure 60-120-8

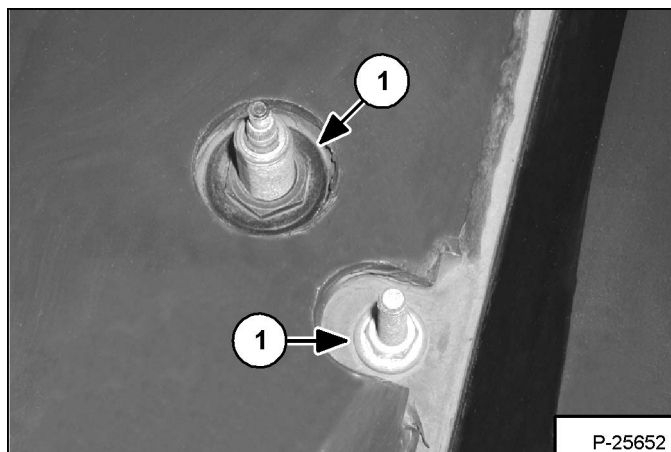


While supporting the wiper motor inside the cab, have an assistant remove the two nuts (Item 1) [Figure 60-120-8].

Remove the wiper motor.

REAR WIPER MOTOR


Removal And Installation

Figure 60-130-1

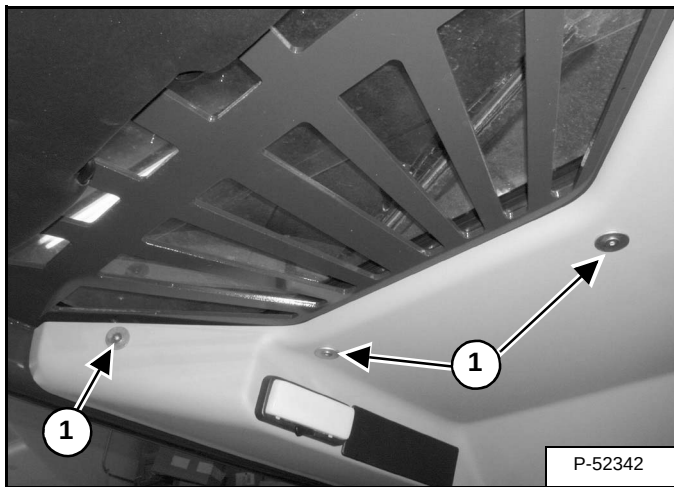


Remove the three screws (Item 1) [Figure 60-130-1] from the upper panel and slide the upper panel forward.

Figure 60-130-2

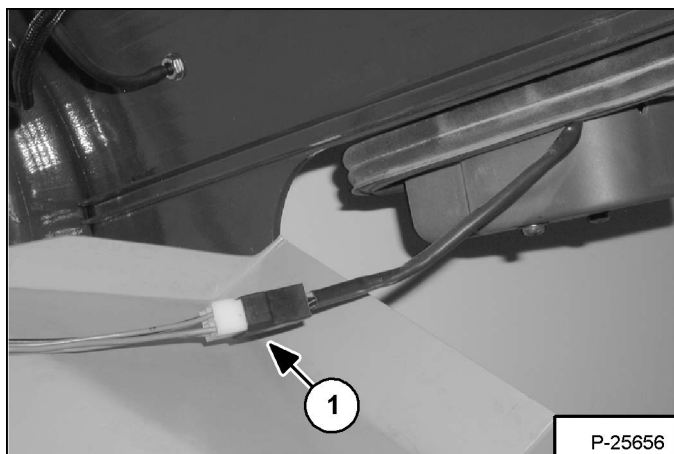


Unplug the rear wiper motor connector (Item 1) [Figure 60-130-2] from the harness.

Figure 60-130-3

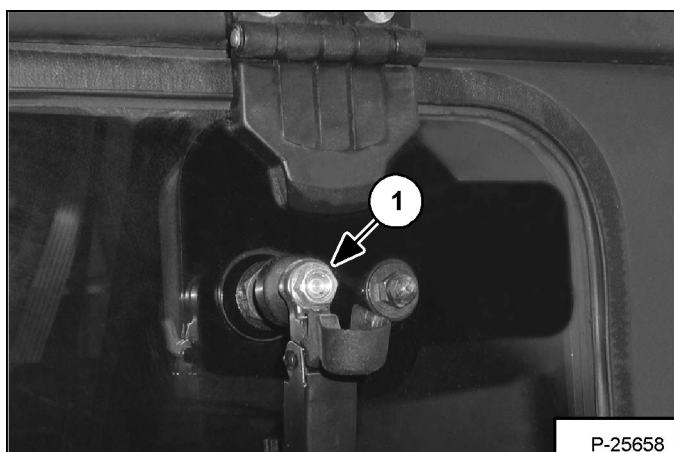

Flip open the wiper cover and remove the nut (Item 1) [Figure 60-130-3].

Figure 60-130-4

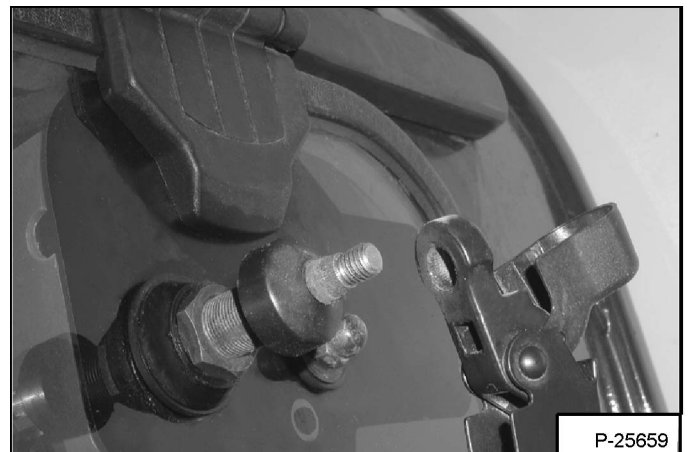

Remove the wiper arm [Figure 60-130-4].

REAR WIPER MOTOR (CONT'D)


Removal And Installation (Cont'd)

Figure 60-130-5



Have an assistant support the wiper motor [Figure 60-130-5].

Figure 60-130-6

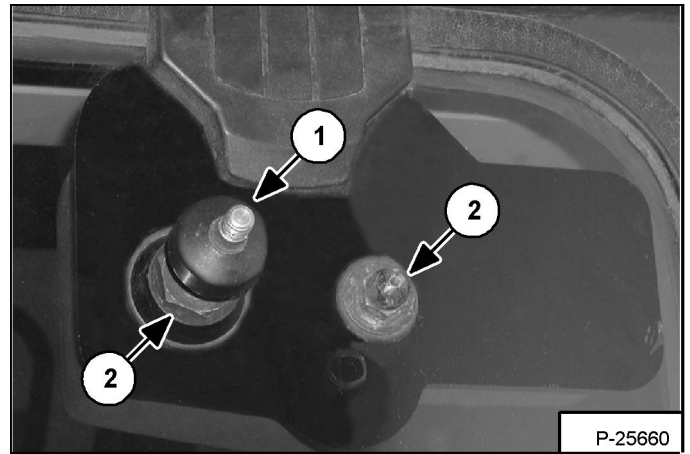


Remove the plastic cover (Item 1) and two nuts (Item 2) [Figure 60-130-6].

Remove the wiper motor.

PEDAL ASSEMBLY

Removal And Installation


Figure 60-140-1

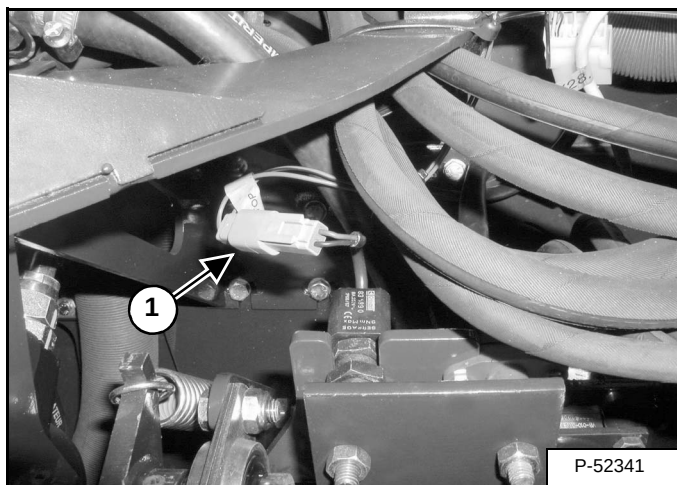

Remove the dash cover/column cover. (See "Removal And Installation" on page 50-130-1)


Unplug the connector (Item 1) [Figure 60-140-1] from the brake light switch.

Figure 60-140-2

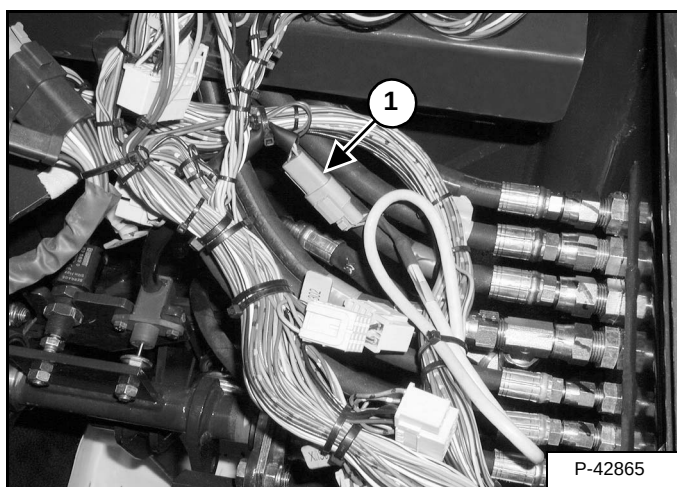


Unplug the connector (Item 1) [Figure 60-140-2] from the inching switch.

Figure 60-140-3

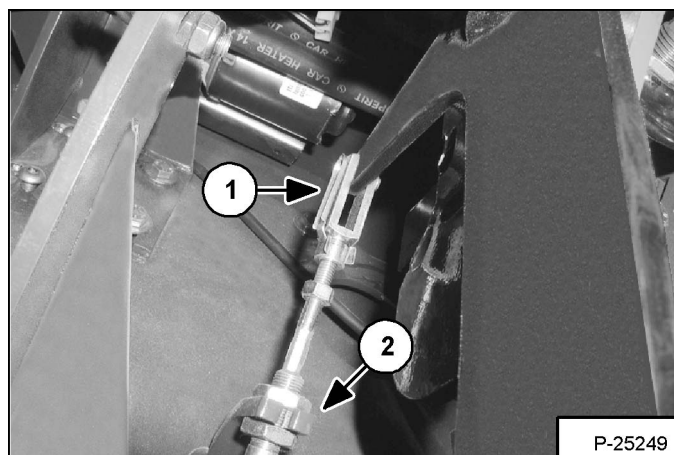

Remove the accelerator cable (Item 1) from the pedal and mounting bracket (Item 2) [Figure 60-140-3].

Figure 60-140-4

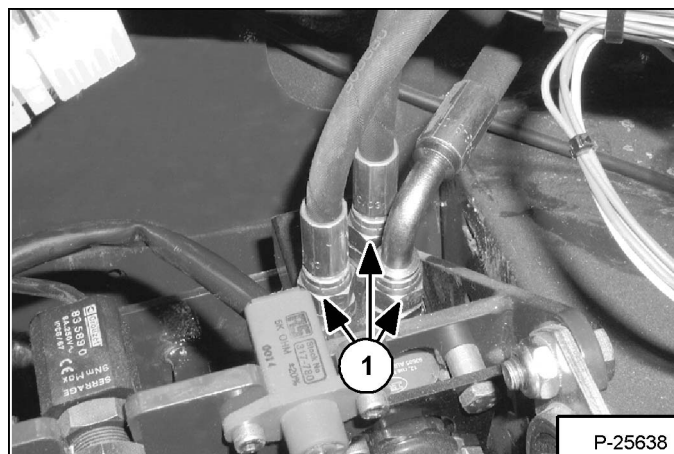

Remove the three hoses (Item 1) [Figure 60-140-4] from the brake valve.

NOTE: Mark hoses for correct installation.

IMPORTANT


When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.

I-2003-0888

PEDAL ASSEMBLY (CONT'D)

Removal and Installation (Cont'd)

Figure 60-140-5

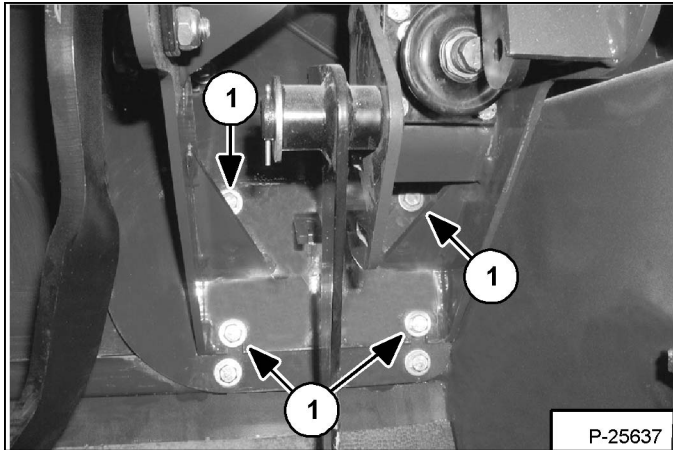


Remove the mounting bolts (Item 1) [Figure 60-140-5].

Remove the pedal assembly.


Disassembly And Assembly

Figure 60-140-6

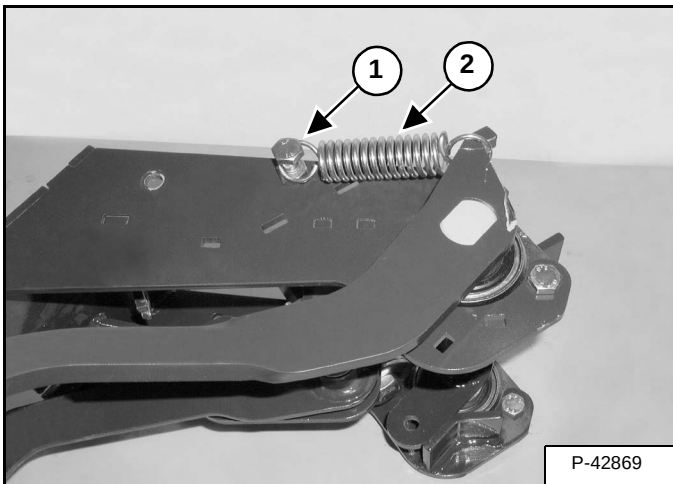


Remove the bolt (Item 1) and spring (Item 2) [Figure 60-140-6].

Figure 60-140-7

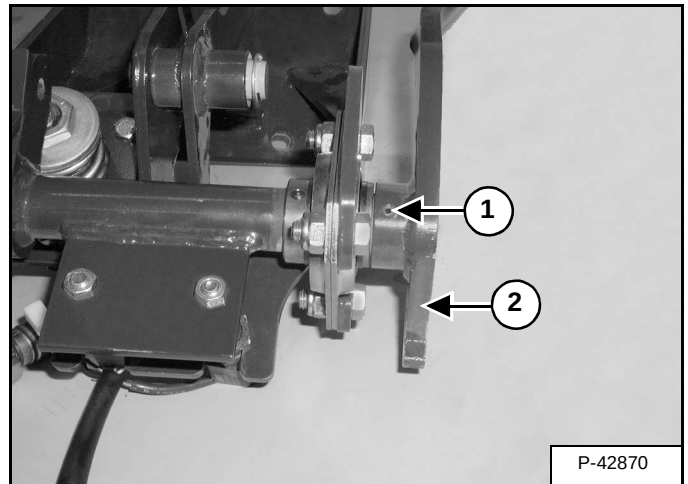

Remove the roll pin (Item 1) and pedal (Item 2) [Figure 60-140-7].

Figure 60-140-8

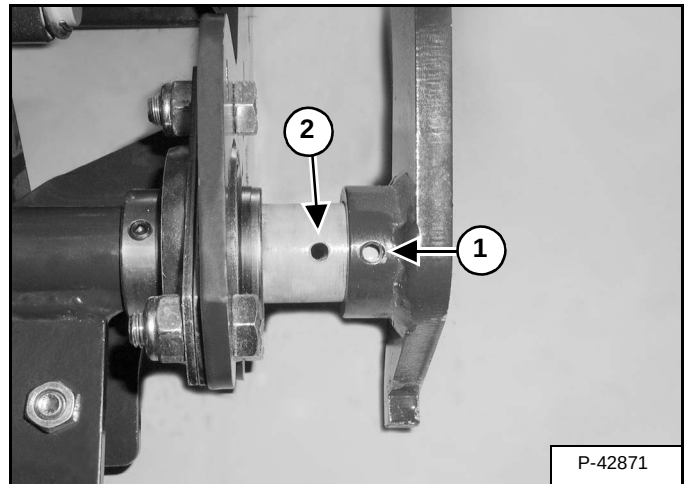


Installation: Align the hole (Item 1) in the pedal with the hole (Item 2) [Figure 60-140-8] in the shaft.

PEDAL ASSEMBLY (CONT'D)


Disassembly And Assembly (Cont'd)

Figure 60-140-9

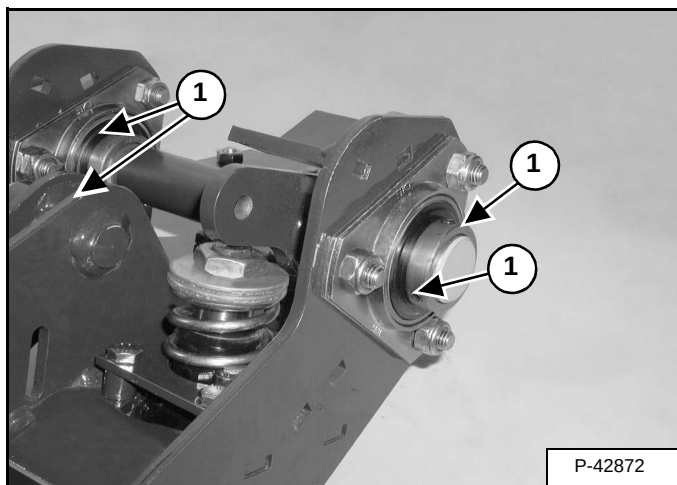


Loosen the two set screws (Item 1) [Figure 60-140-9] on the two bearings.

Figure 60-140-10

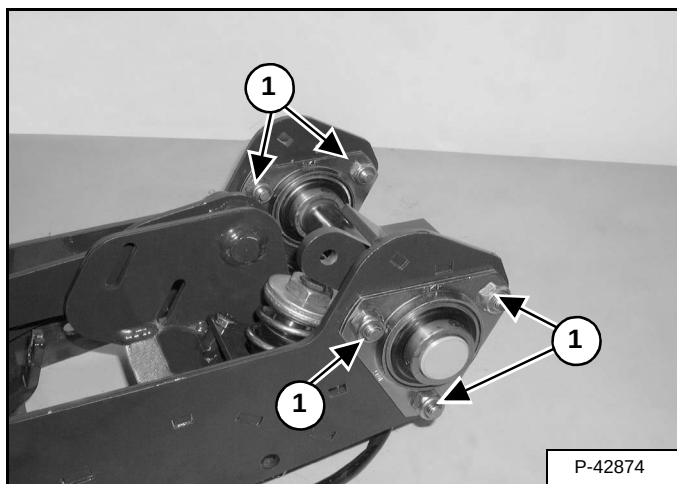


Remove the three bolts (Item 1) [Figure 60-140-10] from both bearing flanges.

Figure 60-140-11

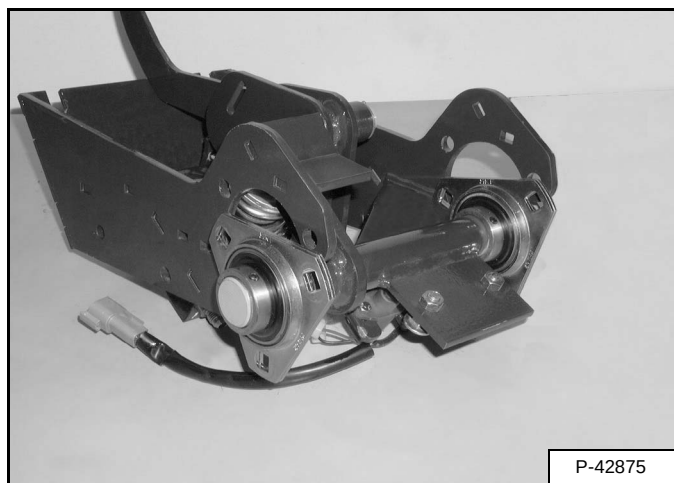

Remove the shaft and bearing assembly [Figure 60-140-11].

Figure 60-140-12

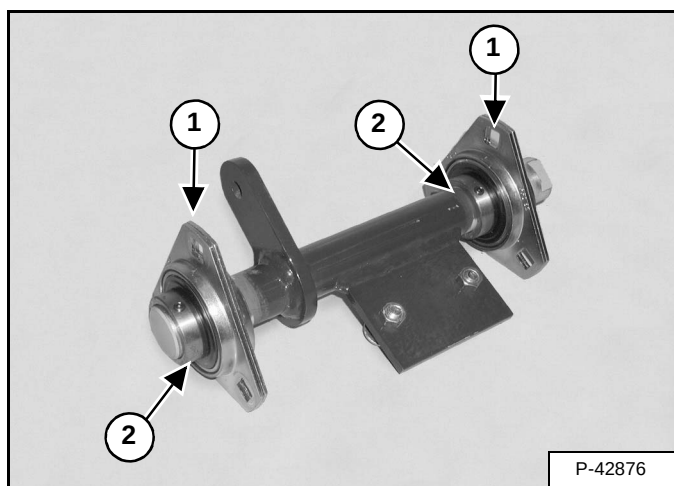


Remove the flanges (Item 1) and bearings (Item 2) [Figure 60-140-12].

PEDAL ASSEMBLY (CONT'D)


Disassembly And Assembly (Cont'd)

Figure 60-140-13

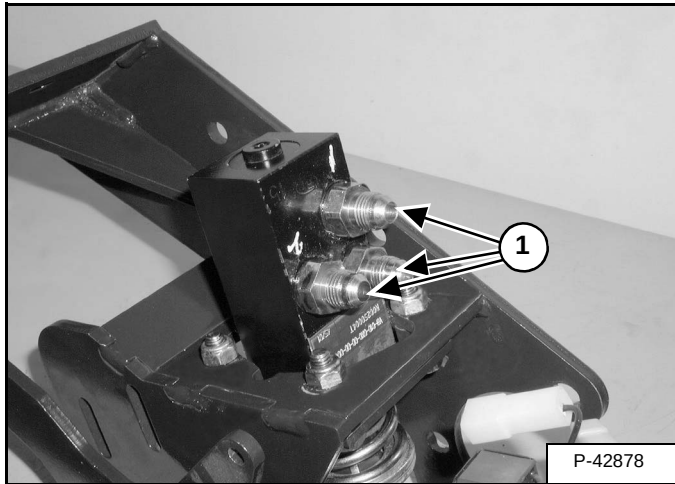


Remove the three fittings (Item 1) [Figure 60-140-13] from the brake valve.

Figure 60-140-14

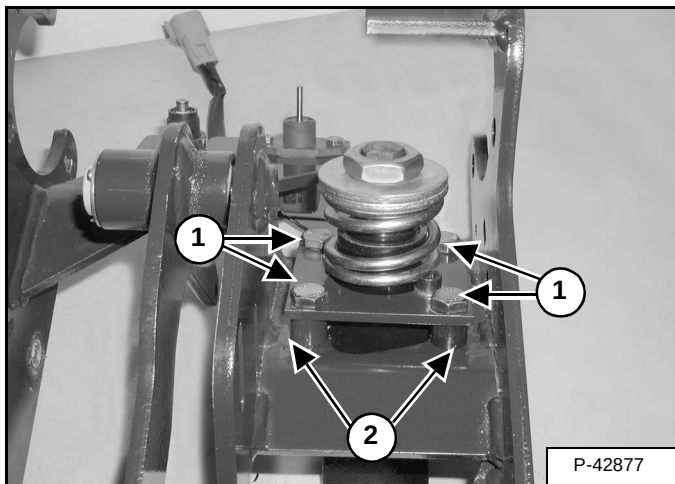


Remove the four bolts (Item 1) spacers (Item 2) [Figure 60-140-14] and nuts from the brake valve.

Figure 60-140-15

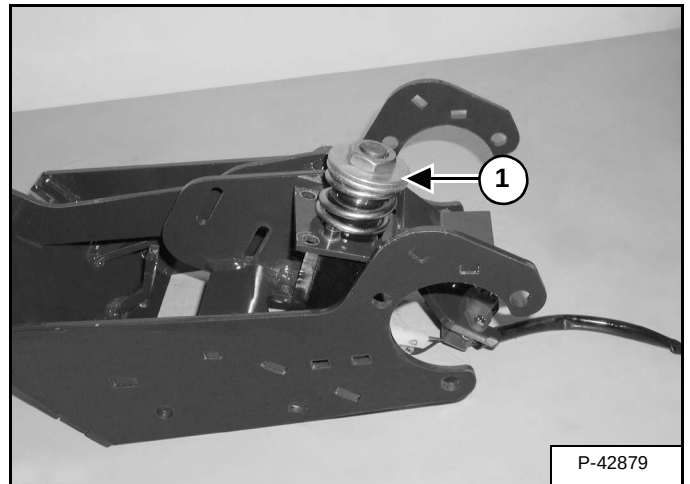

Remove the brake valve (Item 1) [Figure 60-140-15].

Figure 60-140-16

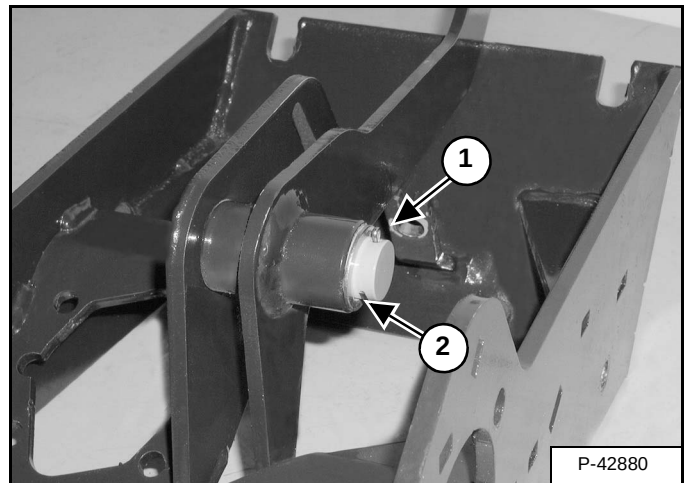


Remove the retainer pin (Item 1) and washer (Item 2) [Figure 60-140-16].

PEDAL ASSEMBLY (CONT'D)

Disassembly And Assembly (Cont'd)

Figure 60-140-17

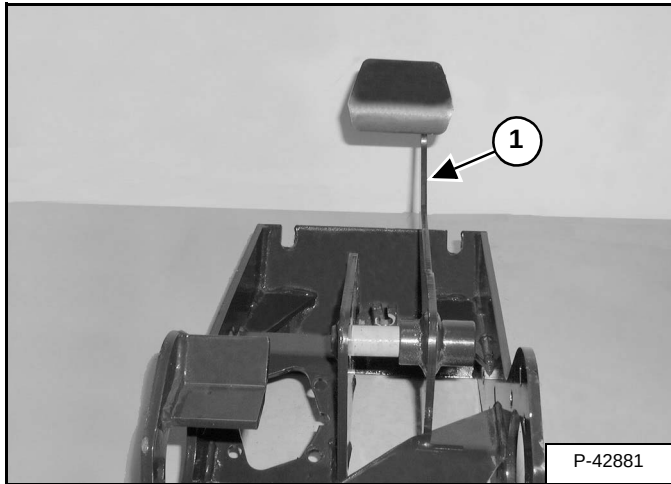

Remove the pedal (Item 1) [Figure 60-140-17].




Bobcat®

INCHING SWITCH

Removal And Installation


Figure 60-160-1

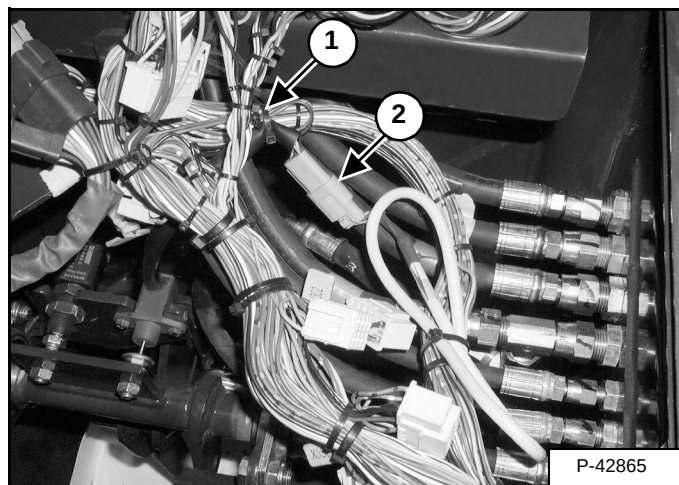

Remove the dash cover/column cover. (See "Removal And Installation" on page 50-130-1)

Remove the tie strap (Item 1) and unplug the switch connector (Item 2) [Figure 60-160-1] from the harness.

Figure 60-160-2

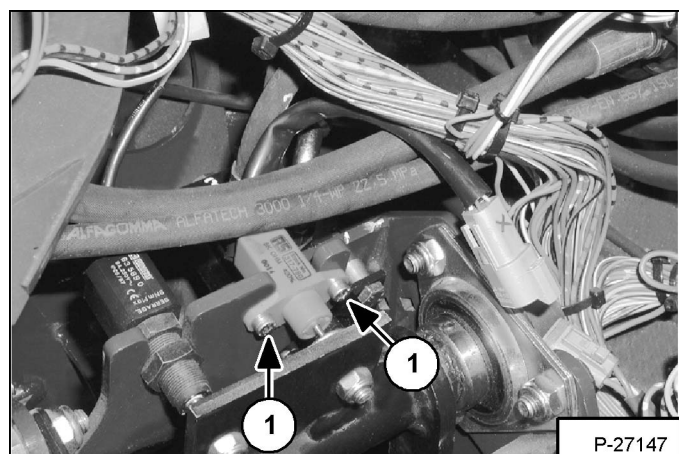

Remove the two mounting bolts and nuts (Item 1) [Figure 60-160-2].


Installation:

- Before installation, make sure that the 2 resistors (see electric diagram) are on the switch's wiring.
- Be sure the switch is on the front side of the mounting bracket.

Remove the switch.

Adjustment

Figure 60-160-3

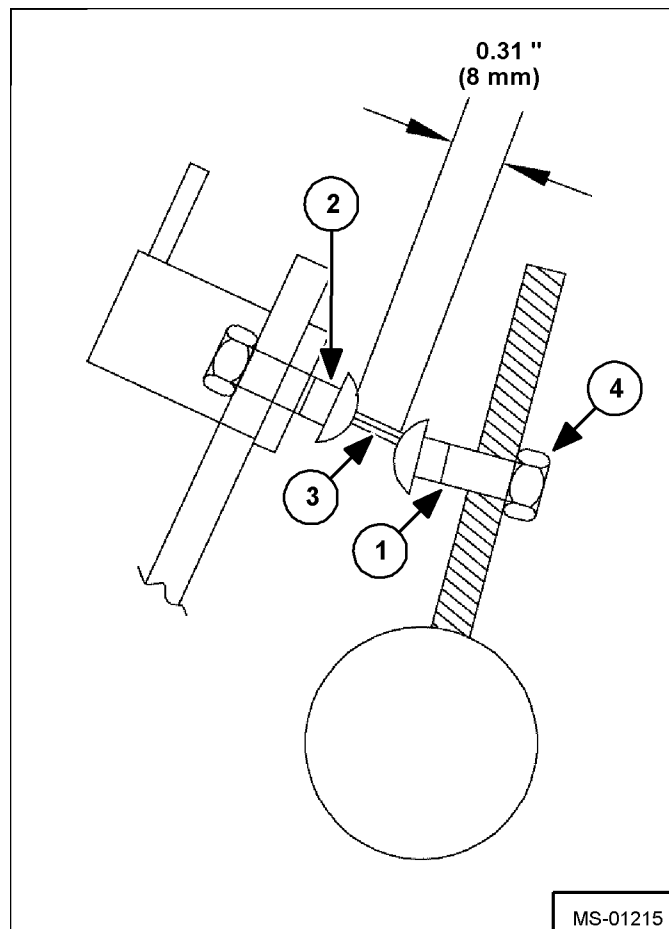

Remove the dash cover/column cover. (See "Removal And Installation" on page 50-130-1)

With the brake pedal in the rest position, turn the adjustment bolt (Item 1) so that it is 0.31 in. (8 mm) away from the switch body (Item 2) [Figure 60-160-3].

Check that the potentiometer rod (Item 3) [Figure 60-160-3] is in contact with the center of the adjusting bolt.

When adjustment is complete, tighten the nut (Item 4) [Figure 60-160-3] without turning the adjusting bolt.




Bobcat®

SERVICE SOFTWARE


Connecting The Laptop Computer

Figure 60-160-1

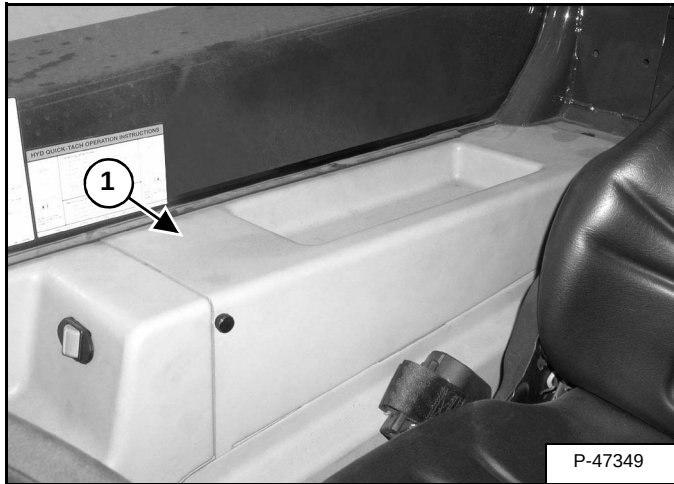


Remove the console cover (Item 1) [Figure 60-160-1].

Figure 60-160-2

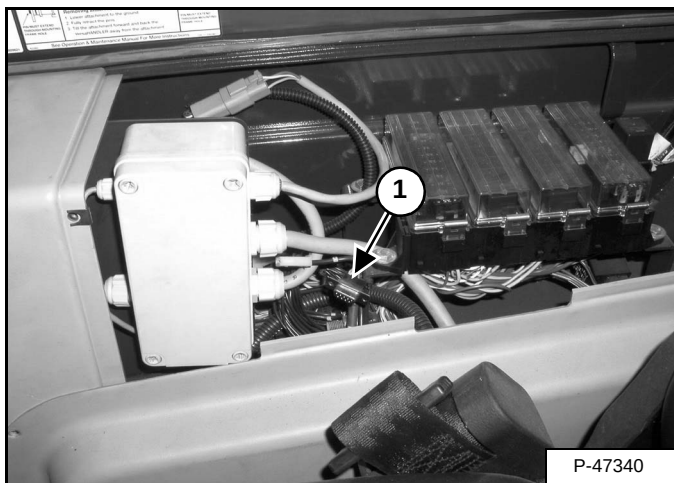

Locate the nine pin connector (Item 1) [Figure 60-160-2].

Figure 60-160-3

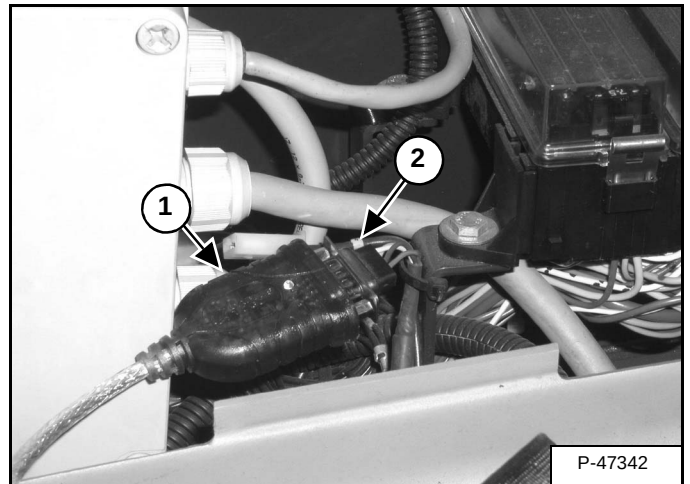

Plug the connector (Item 1) from the laptop computer into the nine pin connector (Item 2) [Figure 60-160-3].

Figure 60-160-4




Open the laptop and begin [Figure 60-160-4].

SERVICE SOFTWARE (CONT'D)


Entering The Service Software

Figure 60-160-5

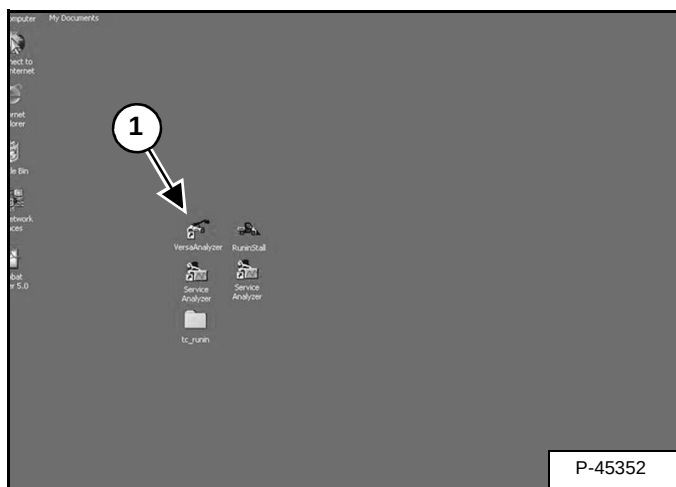


Click the Telescopic Handler icon (Item 1) [Figure 60-160-5] to enter the program.

Figure 60-160-6

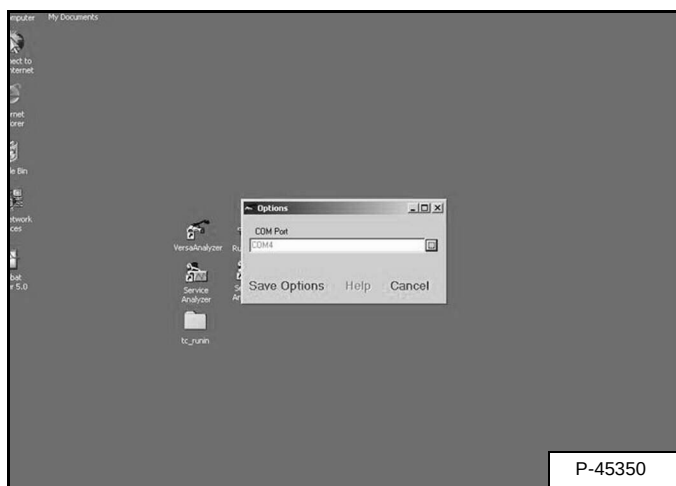


The option screen will appear when entering the Telescopic Handler service analyzer [Figure 60-160-6]. The com port can be changed, if com port 1 is already being used.

Figure 60-160-7

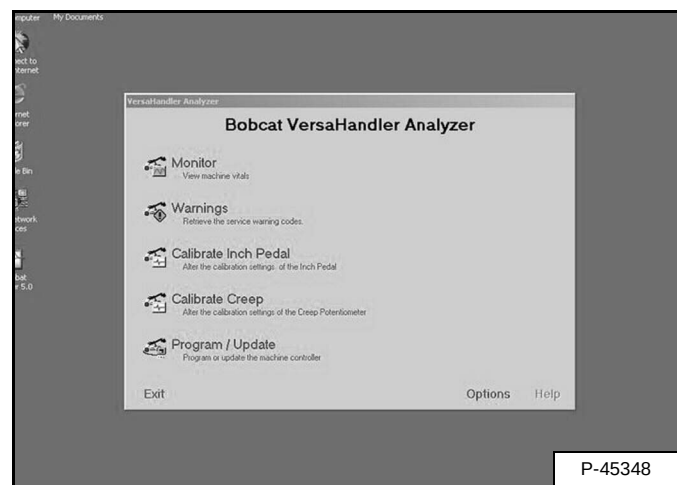

This is the Main Screen of the Telescopic Handler analyzer program [Figure 60-160-7].

Figure 60-160-8

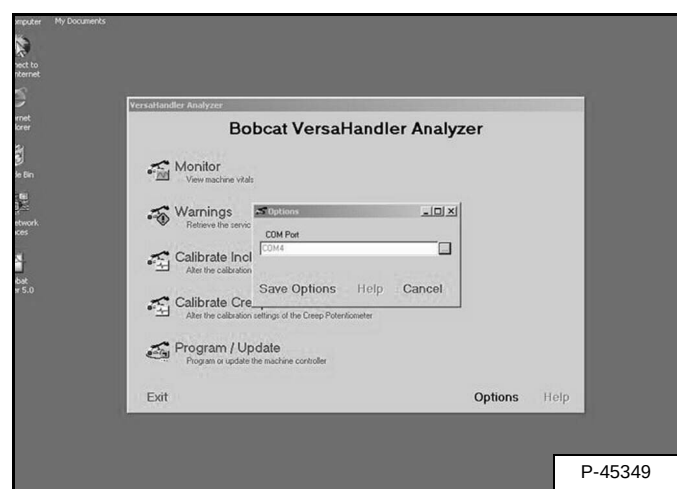


The options icon will take you to the options screen [Figure 60-160-8]. The com port can be changed, if com port 1 is already being used.

SERVICE SOFTWARE (CONT'D)


Monitor Screen

Figure 60-160-9

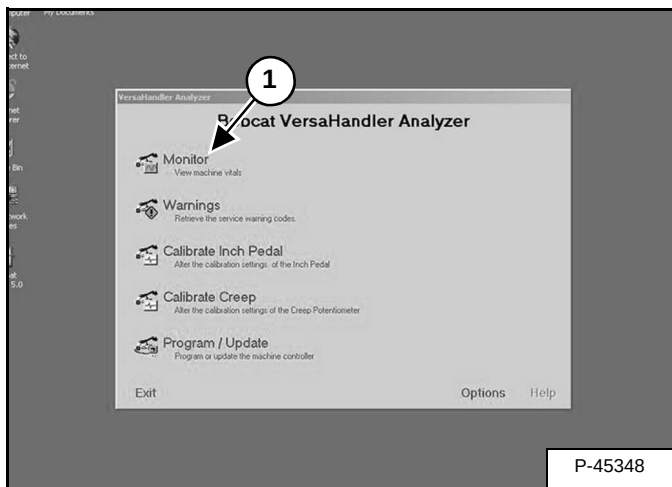

Select the Monitor icon (Item 1) [Figure 60-160-9].


Figure 60-160-10

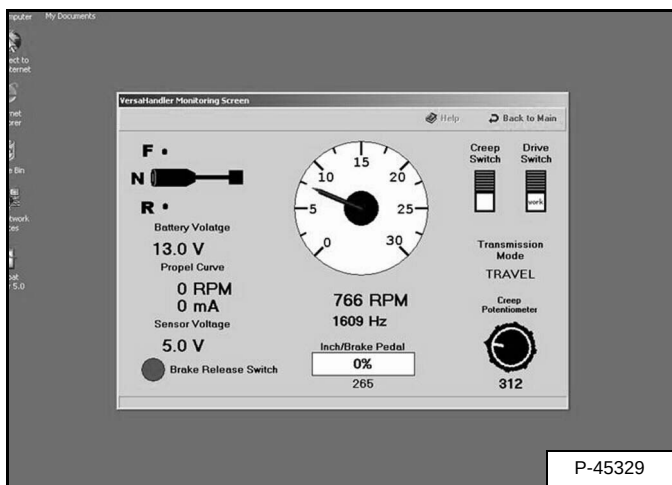

The Monitor screen displays the engine RPM, travel control position, battery voltage, propel curve, sensor voltage, brake release switch, inch/brake pedal, transmission mode, drive switch and creep switch [Figure 60-160-10].


If one of the icons does not change when the function is operated, the circuit is not operating properly or the susmic controller has a malfunction.

Figure 60-160-11

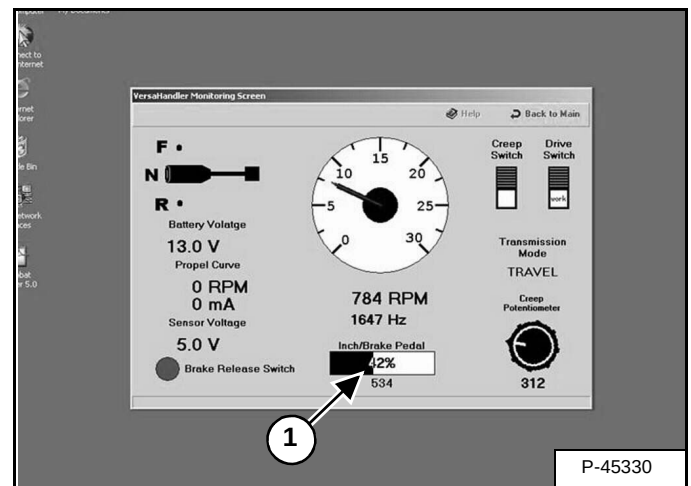

The Inch/Brake pedal graph (Item 1) [Figure 60-160-11] should move as the pedal is pressed down.

Figure 60-160-12

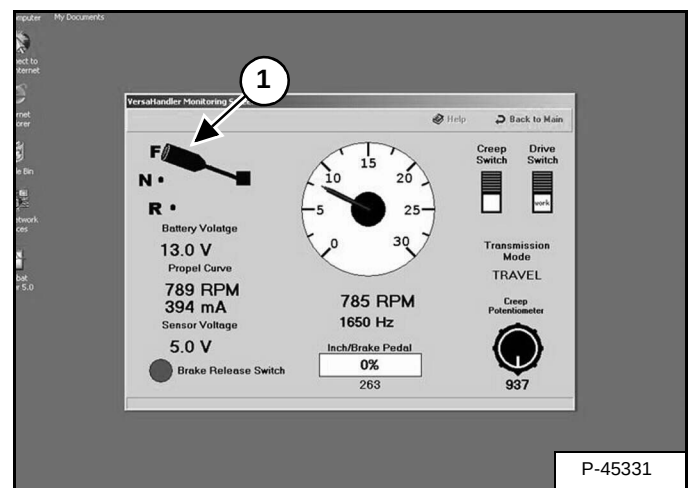


The travel control position lever (Item 1) [Figure 60-160-12] should move as the lever in the Telescopic Handler is moved (when handbrake is deactivated).

SERVICE SOFTWARE (CONT'D)

Monitor Screen (Cont'd)


Figure 60-160-13

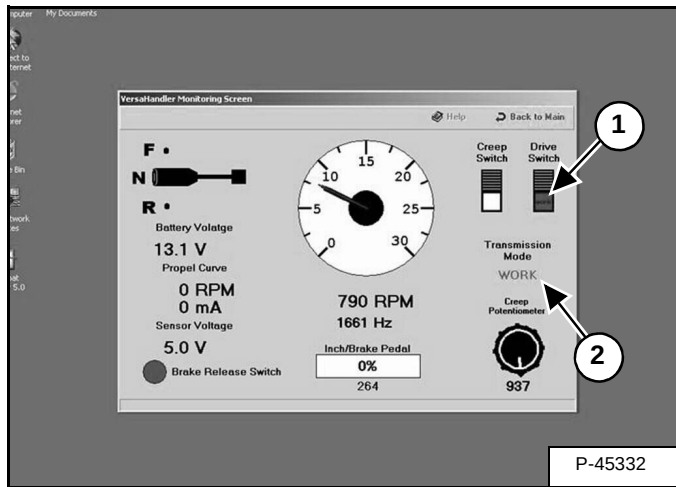

The Work Switch is turned on, the icon (Item 1) will turn on and the Transmission mode will change to work (Item 2) [Figure 60-160-13].


Warnings Screen

Figure 60-160-14

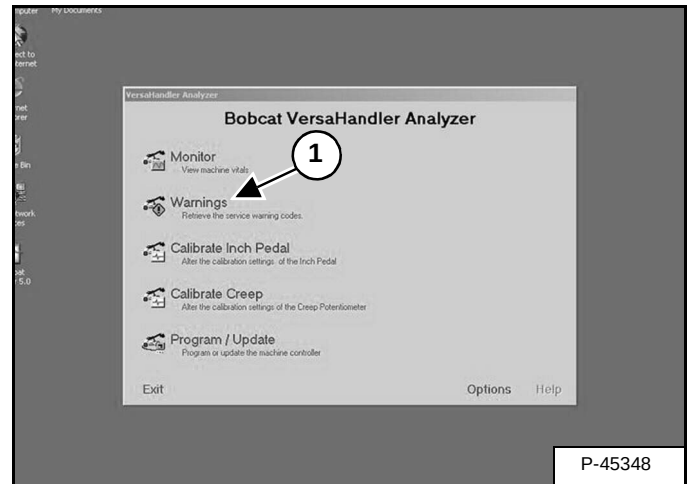

Select on the warning icon (Item 1) [Figure 60-160-14].


Figure 60-160-15

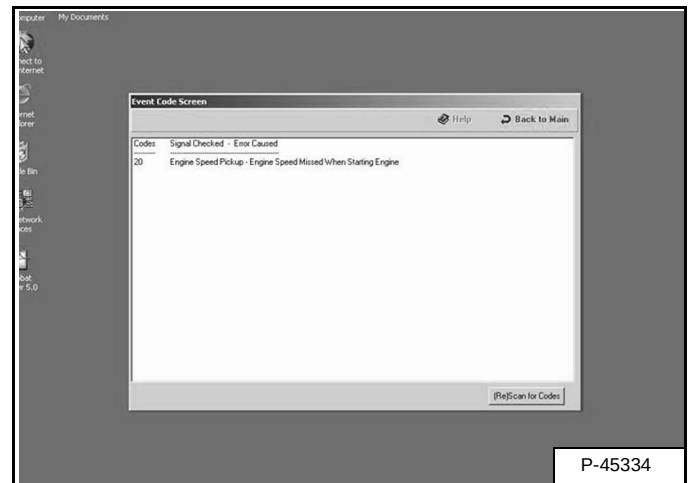


The warning screen will show codes and problem with the controller [Figure 60-160-15].

SERVICE SOFTWARE (CONT'D)**Warnings Screen (Cont'd)**

Error #	Description
01	Sensor supply voltage-sensor voltage out of range
17	Software did not load properly- Restart program and reload software
18	Inch pedal calibration failed-recalibrate the inch pedal
19	Inch/brake potentiometer-no pedal setup done, value too low, value too high
20	Engine speed pickup-engine speed missed when starting engine
21	Propel current-short cut, open circuit
22	F-N-R switch-short cut between forward and reverse
23	Engine speed pickup-engine speed interrupted
24	Hydro motor propel current-short cut, open circuit
25	Creep drive calibration failed-recalibrate the creep drive potentiometer
26	Creep drive potentiometer-value too low, value too high
27	Motor speed pickup-motor speed interrupted

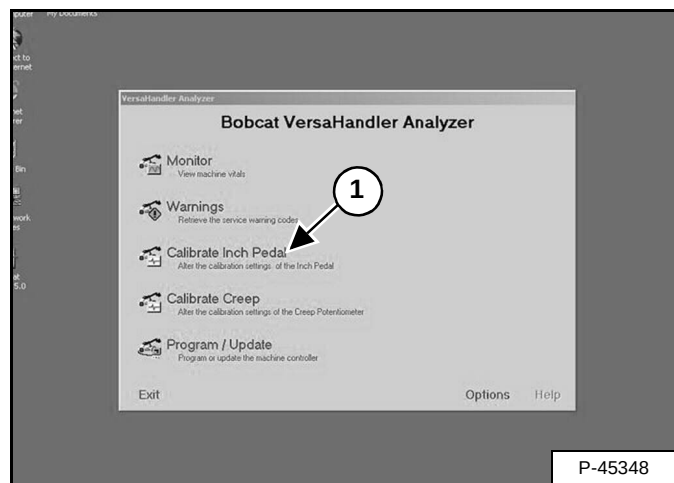Calibrate Inch Pedal**Figure 60-160-16**

Select the calibrate inch pedal icon (Item 1) [Figure 60-160-16].

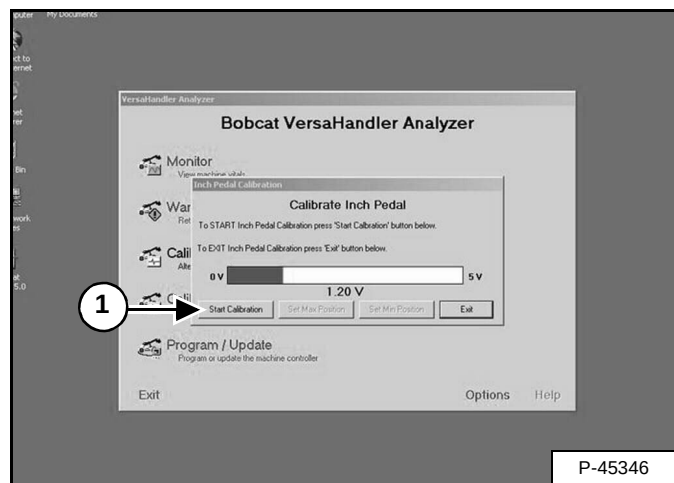Figure 60-160-17

Click on the Start Calibration (Item 1) [Figure 60-160-17].

SERVICE SOFTWARE (CONT'D)

Calibrate Inch Pedal (Cont'd)

Figure 60-160-18


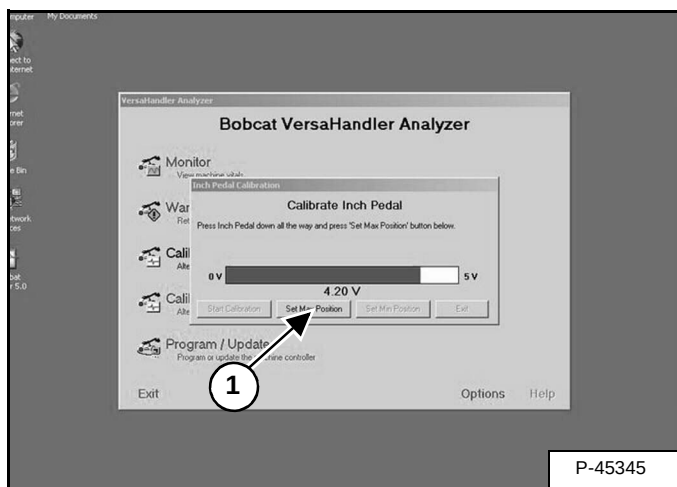



Figure 60-160-20

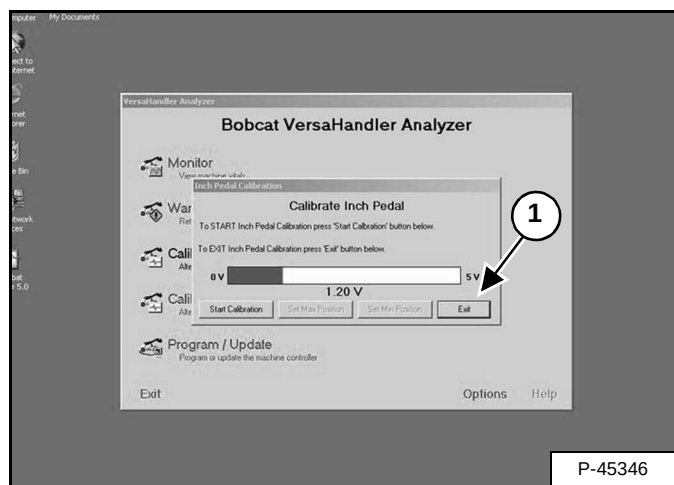

Click the exit (Item 1) [Figure 60-160-20] to get out of the calibrate inch pedal.

Press the brake pedal down approximately 1/2 the stroke and click on the set max position icon (Item 1) [Figure 60-160-18].

Figure 60-160-19

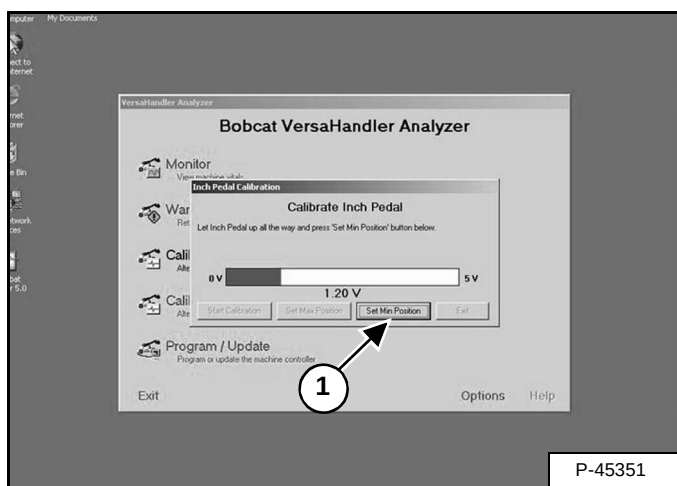


Release the brake pedal and click on the set min position icon (Item 1) [Figure 60-160-19].

FRAME LEVEL SPEED SWITCH

Description

Figure 60-170-1

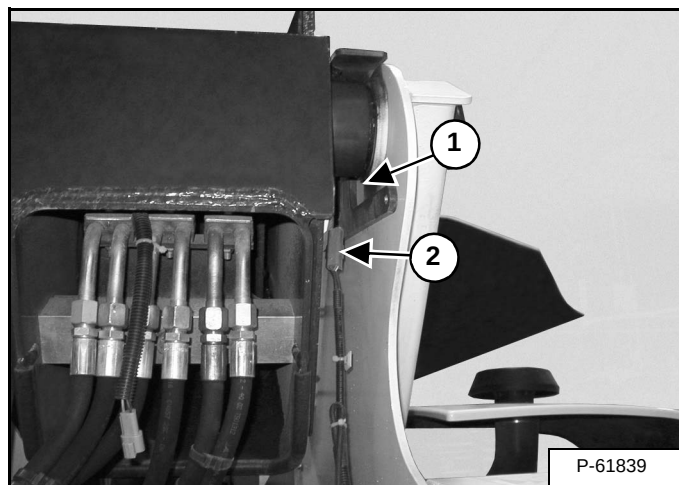


The T3571 Telescopic Handler is equipped with a frame level speed switch (Item 1) [Figure 60-170-1] located on the right rear side of the boom. This switch reduces the speed of the frame leveling after the boom is raised over 25 degrees.

Removal

Lower the boom completely and turn off the engine.


Figure 60-170-2

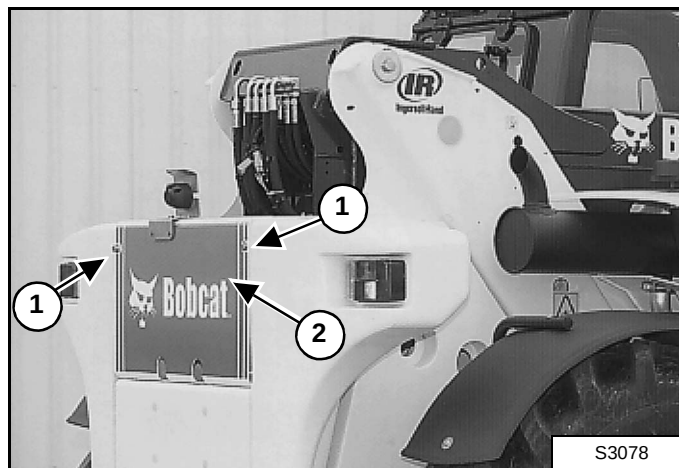

Remove the two bolts (Item 1) and remove the rear cover (Item 2) [Figure 60-170-2].

Unplug the harness connector (Item 2) [Figure 60-170-1].

Figure 60-170-3

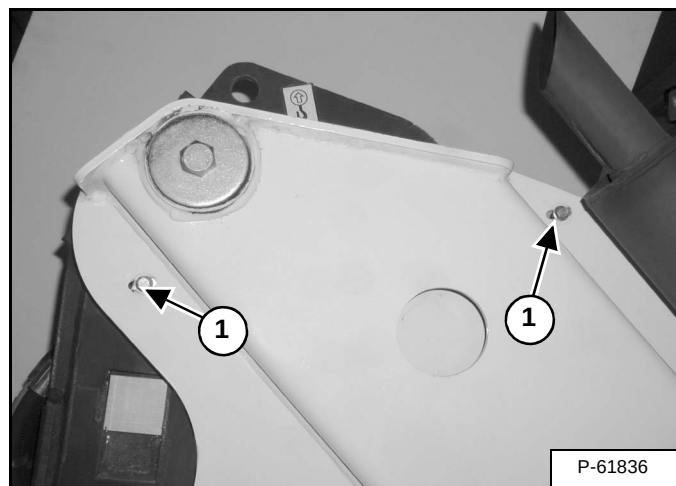


Remove the two bolts (Item 1) [Figure 60-170-3] and remove the switch/bracket assembly.

FRAME LEVEL SPEED SWITCH (CONT'D)

Installation

Figure 60-170-4

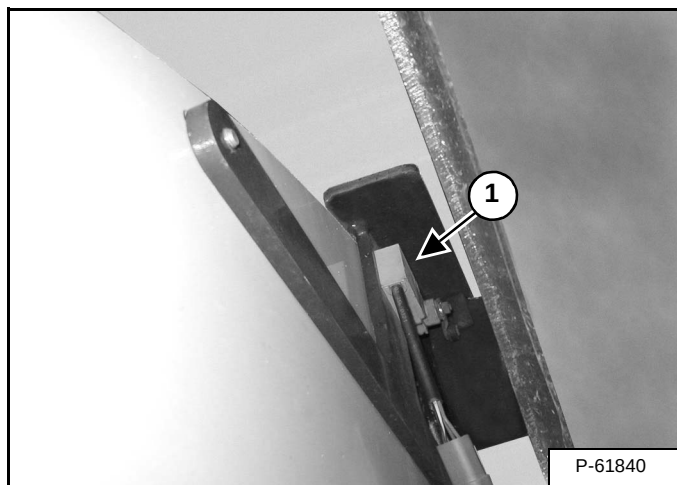

Slide the switch/bracket assembly (Item 1) until the switch roller (Item 2) [Figure 60-170-6] is in the position shown.

Tighten the bolts (Item 1) [Figure 60-170-5].

Figure 60-170-7


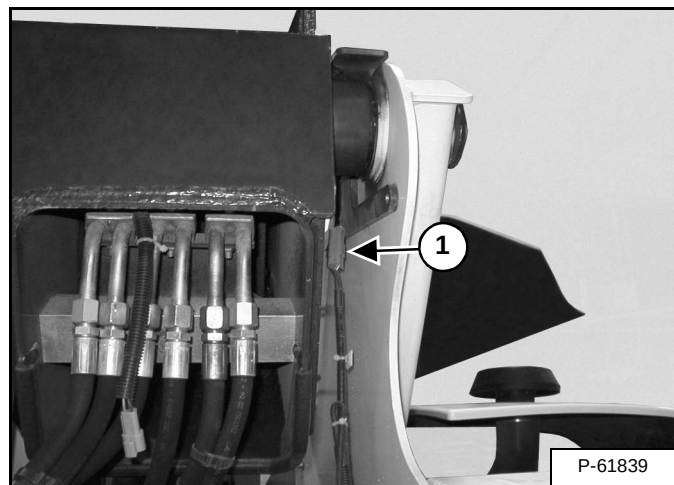



Figure 60-170-5

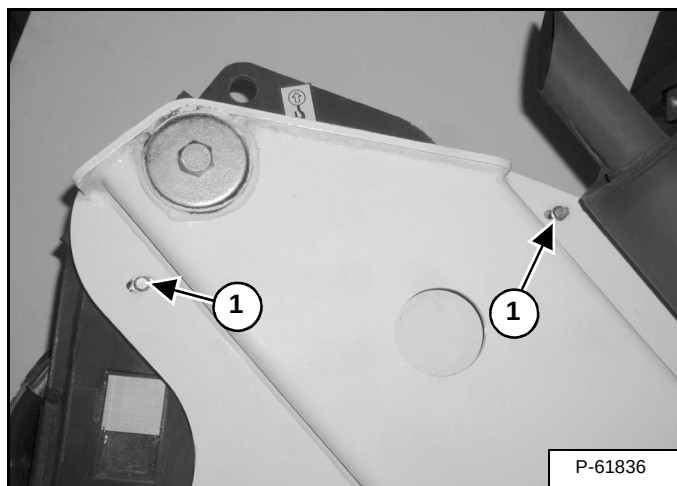

Plug the connector (Item 1) [Figure 60-170-7] into the harness.

Install the switch/bracket assembly (Item 1) [Figure 60-170-4] using the two bolts (Item 1) [Figure 60-170-5]. Do not tighten bolts at this time.


Figure 60-170-6

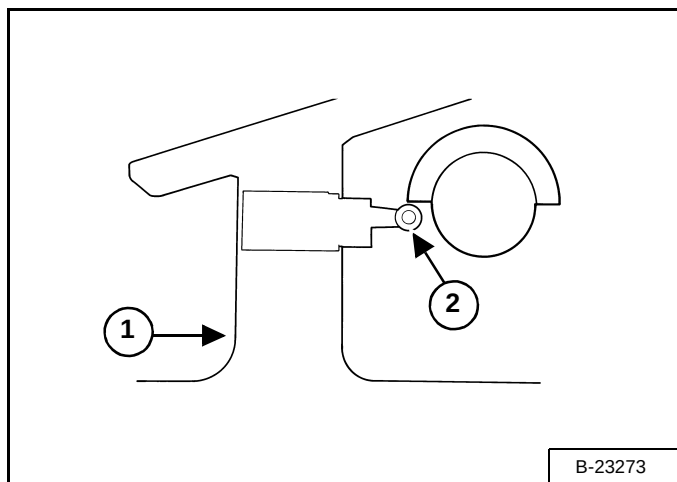

FRAME LEVEL SPEED SWITCH (CONT'D)

Installation (Cont'd)

Figure 60-170-8

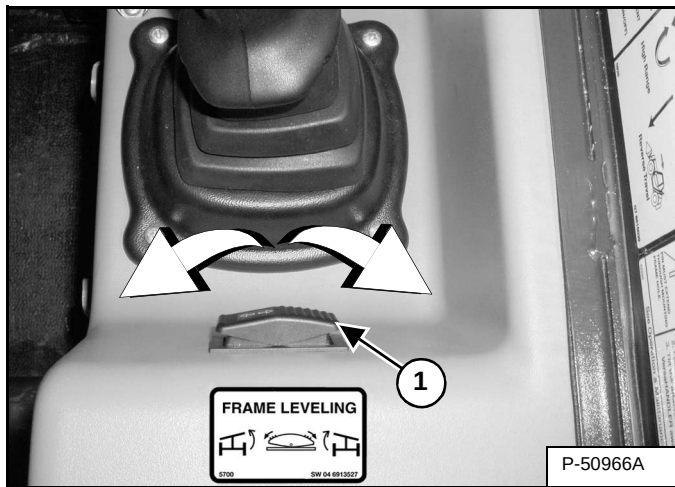


Start the engine.

While holding the frame leveling switch (Item 1) [Figure 60-170-8] raise the boom. When the boom reaches 25 degrees the speed of the frame leveling should decrease.

Disassembly And Assembly

Remove the frame level speed switch. (See "Removal" on page 60-170-1)

Figure 60-170-9

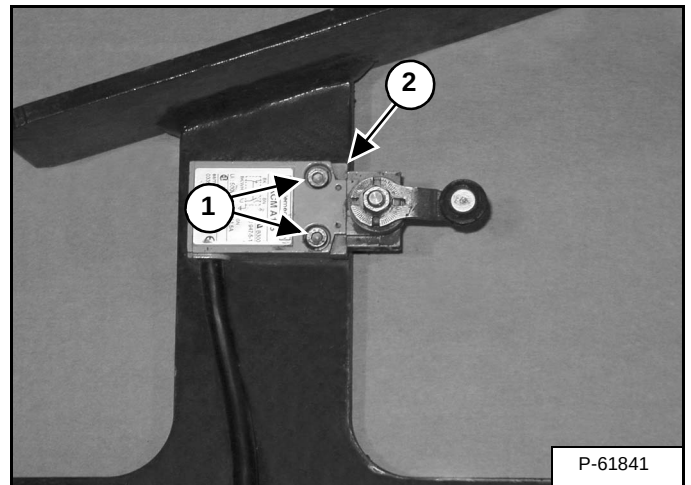

Remove the two bolts and nuts (Item 1) and remove the switch (Item 2) [Figure 60-170-9].




Bobcat®

LONGITUDINAL STABILITY INDICATOR CALIBRATION

Fitting the sensor

Figure 60-170-1

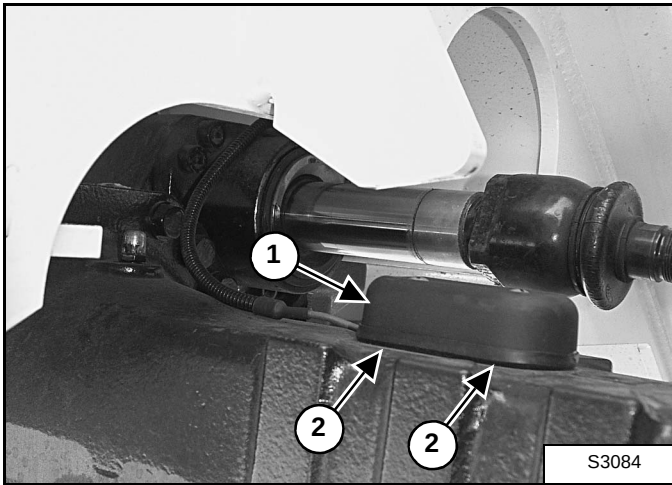

Remove the paint around the 2 M10-threaded holes on the rear axle and verify flatness of the surface. The surface must be perfectly flat.

Degrease the surface.

Apply Loctite to the threads of both screws.


Fit the sensor (p/n 6910655) (Item 1) [Figure 60-170-1] by alternately fastening both screws until a torque value of 60 Nm is reached.

Calibration procedure

IMPORTANT

The following adjustments must be done on a flat surface, without braking and conform to the telescopic handler safety prescriptions.

Figure 60-170-2

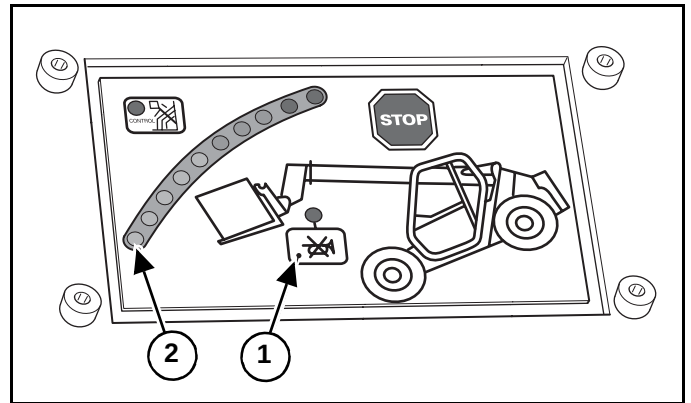

1. Turn off the ignition. Push buzzer button (Item 1) [Figure 60-170-2] and hold it.
2. While holding the buzzer button (Item 1) [Figure 60-170-2] pressed, start the machine. Hold the button for another 5 seconds and release it when the green LED's light up.
3. With the machine unloaded and the boom retracted, raise the boom until the maximum angle.
4. Wait until the machine stabilizes.
5. Push the buzzer button (Item 1) [Figure 60-170-2] for 5 seconds and wait until the "STOP" light turns red.
6. Lower the boom.
7. Take a load that can make the machine tip (do not exceed the maximum authorized load) over and lift it 30 centimeters above the ground.
8. Extend the boom till the rear wheels do no longer touch the ground. Use, if needed, the shunt key (located above the contact key).

! WARNING

Chain up the rear of the machine to the floor, to prevent tipping over too far.

9. Push the buzzer button (Item 1) [Figure 60-170-2] for 5 seconds and wait until all lights of the indicator turn on.
10. If the shunt key has been activated, turn it off now.
11. Retract the boom and then extend again to check if the LED's (Item 2) [Figure 60-170-2] light up in the right order and the buzzer works and if the system works ok.
The order is: green, orange, buzzer, red and "STOP". Aggravating movements (such as extending the boom) will be stopped when the "STOP" light turns on.
12. Remove the load.



Bobcat®

ENGINE SERVICE

AIR CLEANER	70-40-1
Housing Removal And Installation	70-40-1
ENGINE AND ENGINE MOUNTS	70-60-1
Removal And Installation.	70-60-1
ENGINE COMPONENTS AND TESTING	70-70-1
Checking The Fuel Lift Pump	70-70-9
Compression Checking	70-70-11
Glow Plugs Checking	70-70-12
Glow Plugs Removal And Installation	70-70-12
Fuel Injection Pump Installation	70-70-4
Fuel Injection Pump Removal	70-70-1
Fuel Injectors Removal And Installation	70-70-7
Fuel Lift Pump Removal And Installation	70-70-10
ENGINE/HYDROSTAT ASSEMBLY	70-80-1
Removal And Installation.	70-80-1
ENGINE SPEED CONTROL	70-20-1
Removal And Installation.	70-20-1
ENGINE TIMING	70-71-1
Procedure	70-71-1
FLYWHEEL AND HOUSING	70-90-1
Removal And Installation.	70-90-1
Ring Gear Installation	70-90-4
Ring Gear Removal.	70-90-4
MUFFLER.	70-30-1
Removal And Installation.	70-30-1
OIL COOLER/RADIATOR.	70-50-1
Disassembly And Assembly	70-50-3
Removal And Installation.	70-50-1

ENGINE SERVICE

Continued On Next Page

ENGINE SERVICE (CONT'D)

RECONDITIONING THE ENGINE	70-100-1
Camshaft And Tappets Installation	70-100-24
Camshaft And Tappets Removal	70-100-23
Changing Valve Springs (With Cylinder Head Installed) . . .	70-100-17
Checking Crankshaft End Play	70-100-38
Checking Piston Height	70-100-32
Connecting Rod Bushing Replacement.	70-100-30
Connecting Rod Inspection	70-100-30
Cooling System Description	70-100-39
Crankshaft And Bearings Description	70-100-33
Crankshaft And Bearings Installation.	70-100-35
Crankshaft And Bearings Removal	70-100-33
Crankshaft Pulley Removal And Installation	70-100-19
Cutting A Valve Seat	70-100-15
Cylinder Head Inspection	70-100-8
Cylinder Head Installation	70-100-8
Cylinder Head Removal.	70-100-6
Cylinder Liner Inspection.	70-100-49
Cylinder Liner Installation	70-100-51
Cylinder Liner Removal	70-100-50
Engine Block Description.	70-100-47
Engine Block Disassembly And Assembly	70-100-47
Engine Lubrication System Description.	70-100-42
Exhaust Manifold Removal And Installation	70-100-4
Fuel Injector Cover Removal And Installation	70-100-4
Front Oil Seal Removal And Installation	70-100-19
Inspection	70-100-48
Inspection Of Crankshaft And Bearings	70-100-35
Lubricating Oil Cooler Removal And Installation	70-100-40
Oil Filter Adapter Removal And Installation.	70-100-43
Oil Pan Removal And Installation	70-100-43
Oil Pressure Relief Valve Disassembly And Assembly . . .	70-100-46
Oil Pump Disassembly And Assembly	70-100-46
Oil Pump Installation	70-100-45
Oil Pump Removal.	70-100-44
Oil Screen And Pick-up Tube	70-100-44

Continued On Next Page

ENGINE SERVICE (CONT'D)

RECONDITIONING THE ENGINE	70-100-1
Piston And Connecting Rod Assembly	70-100-30
Piston And Connecting Rod Installation	70-100-30
Piston Cooling Jet Alignment	70-100-48
Piston Cooling Jet Installation	70-100-48
Piston Cooling Jet Removal	70-100-48
Piston Ring End Gap.	70-100-28
Piston Ring Groove Clearance	70-100-29
Piston Ring Installation	70-100-28
Pistons And Connecting Rods Description	70-100-26
Pistons And Connecting Rods Disassembly	70-100-28
Pistons And Connecting Rods Removal	70-100-26
Rear Oil Seal Housing Positioning	70-100-37
Rear Oil Seal Installation.	70-100-37
Rear Oil Seal Removal	70-100-37
Rocker Cover Removal And Installation	70-100-5
Rocker Shaft Disassembly And Assembly	70-100-11
Thermostat Removal and Installation	70-100-40
Thermostat Testing	70-100-40
Timing Case And Drive Assembly Description	70-100-19
Timing Case And Gear Installation	70-100-21
Timing Case And Gear Removal.	70-100-20
Timing Cover Installation.	70-100-19
Timing Cover Removal	70-100-19
Turbo Charger Description	70-100-2
Turbo Charger Removal And Installation	70-100-2
Turbo Charger Troubleshooting	70-100-1
Valve Clearance Adjustment	70-100-18
Valve Depth Checking.	70-100-12
Valve Guides Checking	70-100-13
Valve Guide Installation.	70-100-14
Valve Guide Removal	70-100-14
Valve Removal	70-100-11
Valve Seat Assembly.	70-100-16
Valve Springs Checking.	70-100-12
Valves Checking	70-100-15
Water Pump Installation	70-100-41
Water Pump Removal	70-100-41
TRUBLESHOOTING	70-10-1
Chart	70-100-1



Bobcat®

TROUBLESHOOTING

Chart

The following troubleshooting chart is provided for assistance in location and correcting problems which are most common. Many of the recommended procedures must be done by authorized Bobcat Service Personnel only.

PROBLEM	CAUSE
Slow cranking speed.	1, 2, 3, 4
Engine will not start (cold).	2, 5, 6, 7
Engine will not start.	1, 2, 3, 4, 5, 6, 7, 8, 9, 10
Difficult to start.	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 18, 19, 20, 21
No power for engine.	9, 11, 15, 16, 17, 18, 19, 21, 22, 25, 26, 27
Engine is mis-firing.	11, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24
Too much fuel consumption.	7, 16, 17, 18, 20, 21, 22, 28, 29, 30
Black exhaust.	16, 17, 18, 19, 20, 22, 25, 27
Blue/white exhaust.	4, 7, 16, 18, 19, 22, 31, 32
Low oil pressure.	4, 31, 32, 33, 34, 35, 37, 38, 39, 48, 51
Engine knocking.	4, 5, 17, 18, 19, 20, 23, 34, 35, 36, 37, 38
Engine running rough.	7, 8, 9, 10, 11, 12, 13, 14, 20, 21, 22, 25, 26, 27, 28, 29, 40, 52
Vibration	16, 30, 50, 51, 52
High oil pressure warning.	4, 33, 36
Overheating.	18, 19, 20, 22, 25, 31, 33, 46, 47, 48, 49
Too much crankcase pressure.	25, 35, 36, 42
Poor compression.	17, 18, 22, 23, 30, 32, 34, 35, 36, 44
Start and stop.	9, 11, 13, 15, 17, 22, 23, 30
Excessive oil consumption	4, 22, 32, 36, 40, 41, 42, 43, 44, 45

TROUBLESHOOTING (CONT'D)


Chart (Cont'd)

KEY TO CORRECT THE CAUSE	
1. Battery capacity low.	27. Poor boost pressure.
2. Bad electrical connections	28. Fuel leak.
3. Faulty starter motor.	29. Lubrication oil diluted by fuel.
4. Incorrect grade of oil.	30. Sticking valves.
5. Incorrect grade of fuel.	31. Leaking head gasket.
6. Incorrect use of cold starting equipment.	32. Worn valve guides/stems.
7. Faulty cold starting equipment.	33. Faulty thermostat.
8. Insufficient fuel in tank.	34. Incorrect piston height.
9. Faulty stop control.	35. Broken/worn piston rings.
10. Broken fuel injection pump drive.	36. Worn cylinder liners.
11. Air in the fuel system	37. Worn wrist pins.
12. Restricted fuel feed.	38. Excessive camshaft end play.
13. Fuel tank vent blocked.	39. Excessive timing gear backlash.
14. Plugged fuel filters.	40. Oil leaks.
15. Faulty fuel pump.	41. New or rebuilt engine not broken in.
16. Low compression.	42. Plugged breather pipe.
17. Incorrect valve clearance.	43. Glazed cylinder liners.
18. Incorrect valve timing.	44. Worn pistons.
19. Incorrect fuel pump timing.	45. Worn valve stem seals.
20. Faulty injectors.	46. Coolant level low.
21. Faulty fuel injection pump.	47. Faulty water pump.
22. Plugged air filter.	48. Loose or broken blower fan belt.
23. Broken or weak valve springs.	49. Radiator cooling fins plugged.
24. Overheating.	50. Damaged blower fan.
25. Restricted exhaust system.	51. Loose flywheel.
26. Water in fuel.	52. Broken engine mounts.

ENGINE SPEED CONTROL

Removal And Installation

Figure 70-20-1

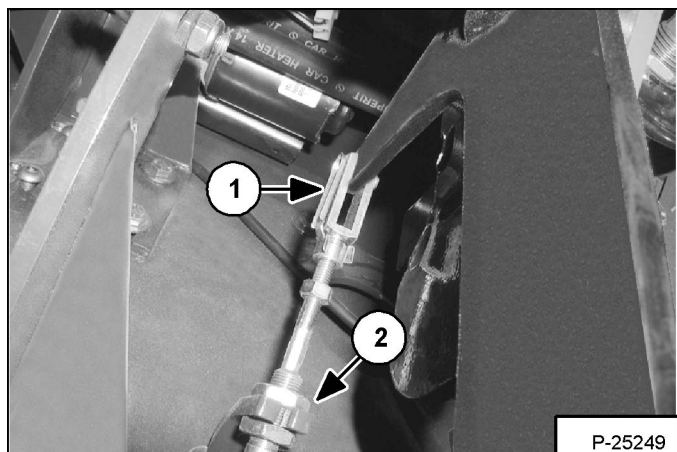


Remove the floor mat and insulation from the cab floor.

Remove the speed control cable (Item 1) from the pedal and mounting bracket (Item 2) [Figure 70-20-1].


Remove the battery box cover.

Figure 70-20-2

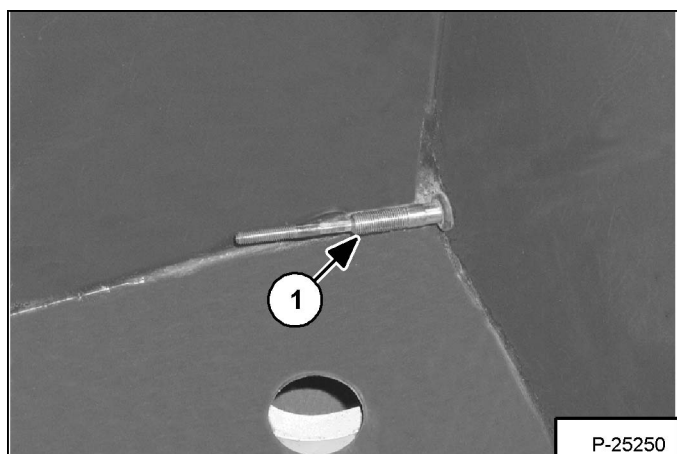

Carefully pull the speed control cable (Item 1) [Figure 70-20-2] through the cab and into the battery box.


Figure 70-20-3

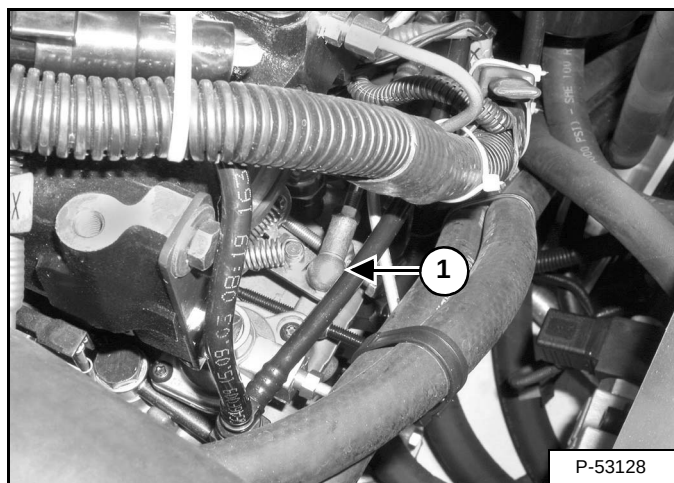

Open the engine cover.

Remove the engine speed control cable (Item 1) [Figure 70-20-3] from the linkage.

Figure 70-20-4

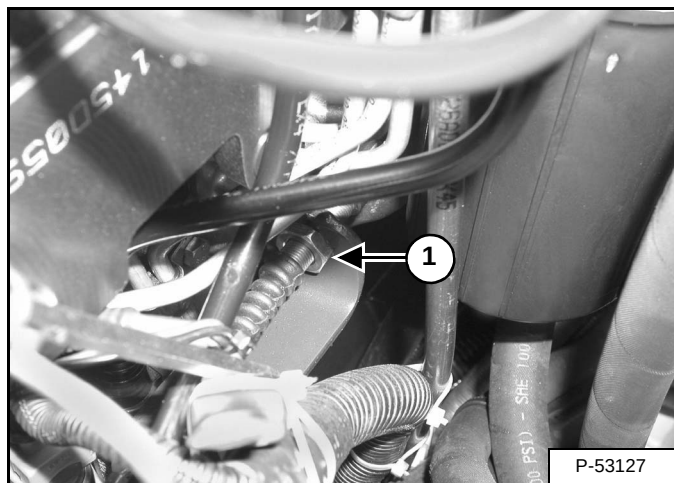

Remove the engine speed control cable from the mounting bracket (Item 2) [Figure 70-20-4].

Remove any necessary cable ties, carefully remove the speed control cable.




Bobcat®

MUFFLER

Removal And Installation

Figure 70-30-1

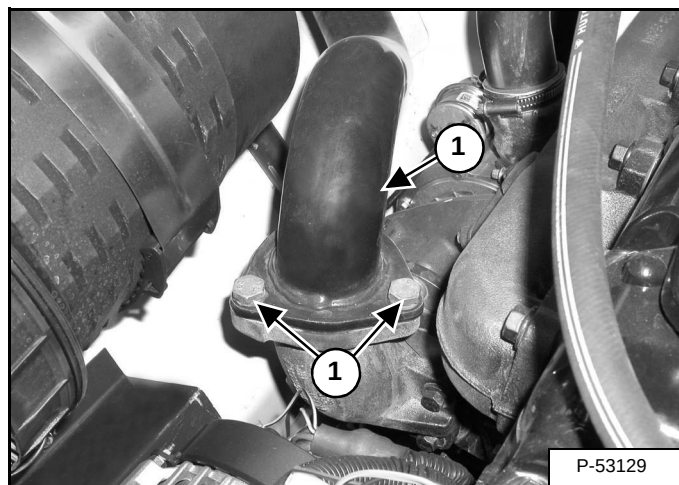


Open the engine cover.

Remove the three exhaust mounting bolts (Item 1) [Figure 70-30-1].

For S/N 362811001 - 362812000, S/N 362911001 - 362912000:

Figure 70-30-2

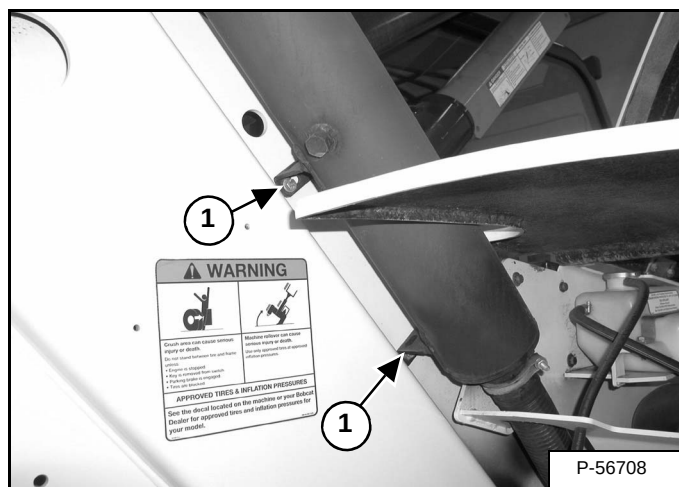


Remove the four muffler mounting bolts (Item 1) [Figure 70-30-2].

Remove the muffler.

For S/N 362812001 and Above, S/N 362912001 and Above:

Figure 70-30-3

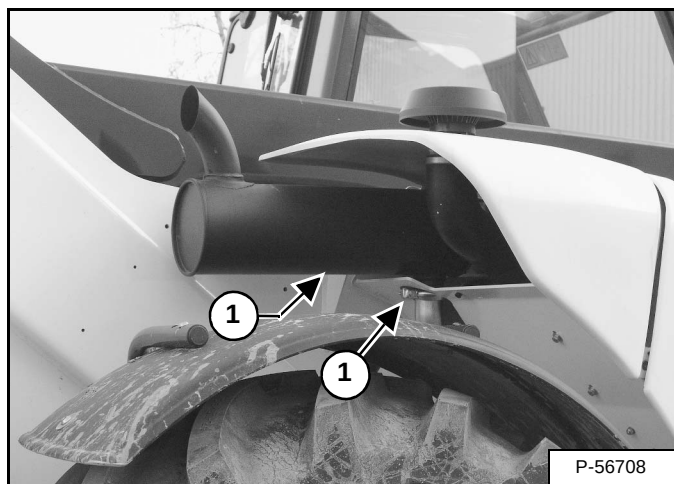

Remove the muffler mounting bolts (Item 1) [Figure 70-30-2].

Remove the muffler.




Bobcat®

AIR CLEANER

Housing Removal And Installation


Figure 70-40-1

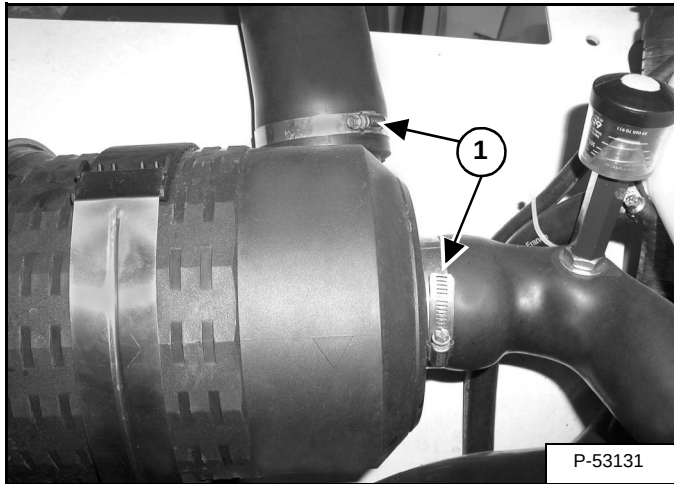

Open the engine cover.

Loosen the clamps (Item 1) [Figure 70-40-1] and remove the hoses from the air cleaner.

Figure 70-40-2

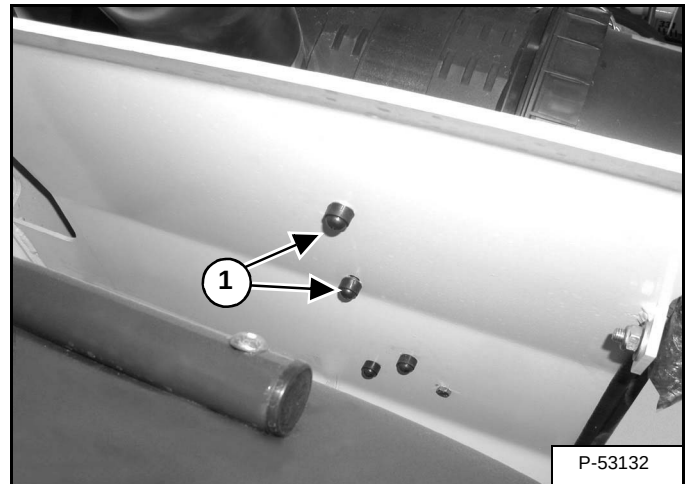

Remove both mounting bolts (Item 1) [Figure 70-40-2].

Remove the air cleaner housing assembly.



Bobcat®

OIL COOLER/RADIATOR

Removal And Installation


Remove the engine cover. (See "Removal And Installation" on page 50-70-1)

Drain the hydraulic reservoir. (See "Replacing Hydraulic Fluid" on page 10-100-3)

Drain the radiator. (See "Removal And Installation" on page 70-50-1)


Remove the fan motor. (Removal And Installation20-140-1)

Figure 70-50-1

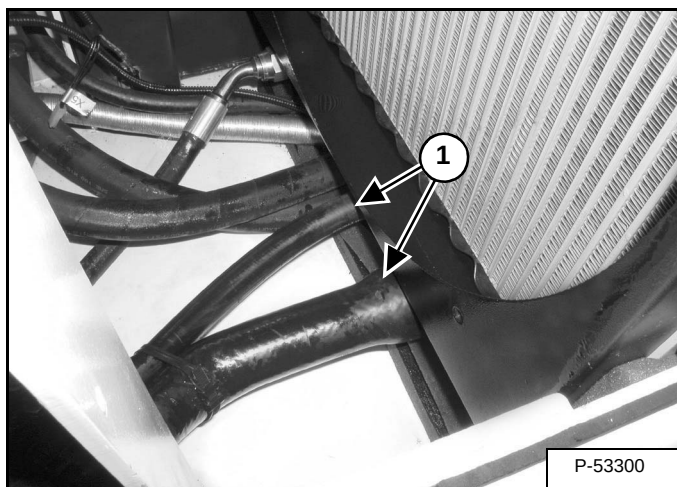


Remove the two lower radiator hoses (Item 1) [Figure 70-50-1].

Figure 70-50-2

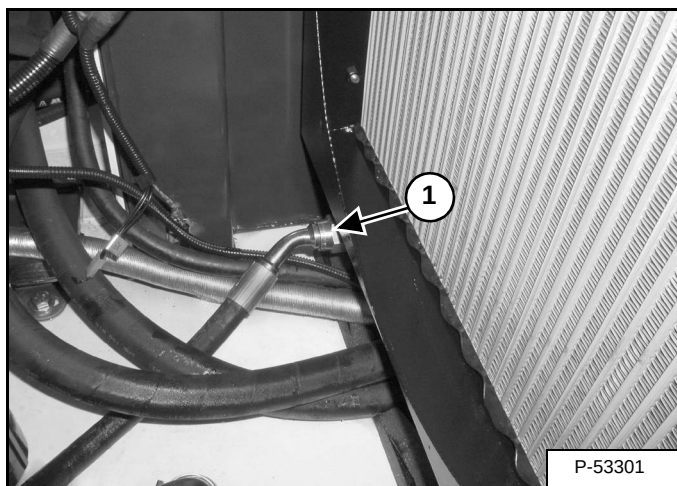


Remove the lower hydraulic hose (Item 1) [Figure 70-50-2].

Figure 70-50-3

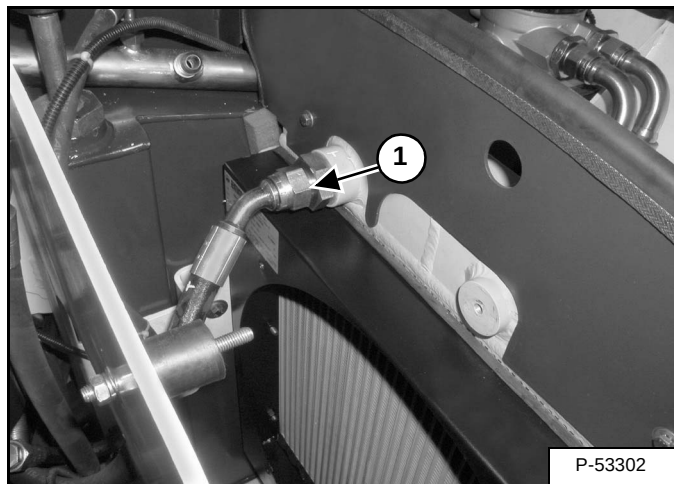

Remove the upper hydraulic hose (Item 1) [Figure 70-50-3].

Figure 70-50-4

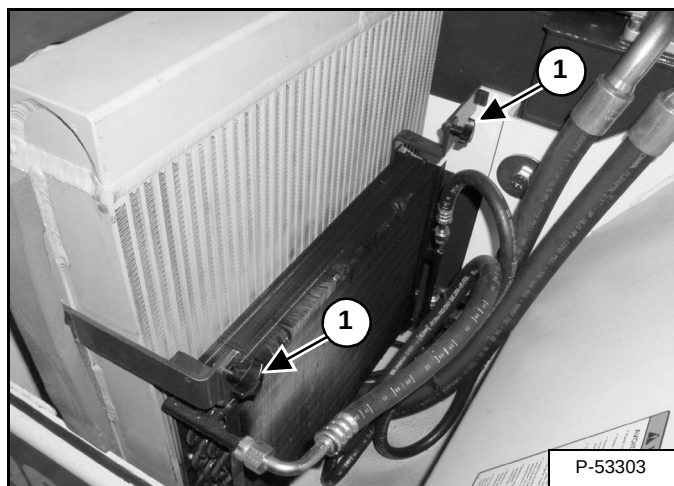


Remove the two nuts (Item 1) [Figure 70-50-4] from the condenser (if equipped with optional airco).

OIL COOLER/RADIATOR (CONT'D)


Removal And Installation (Cont'd)

Figure 70-50-5

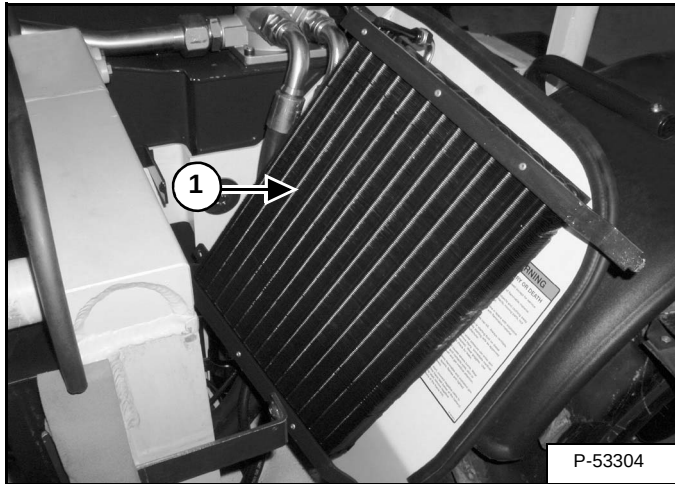


Position the condenser (Item 1) [Figure 70-50-5] (as shown).

Figure 70-50-6

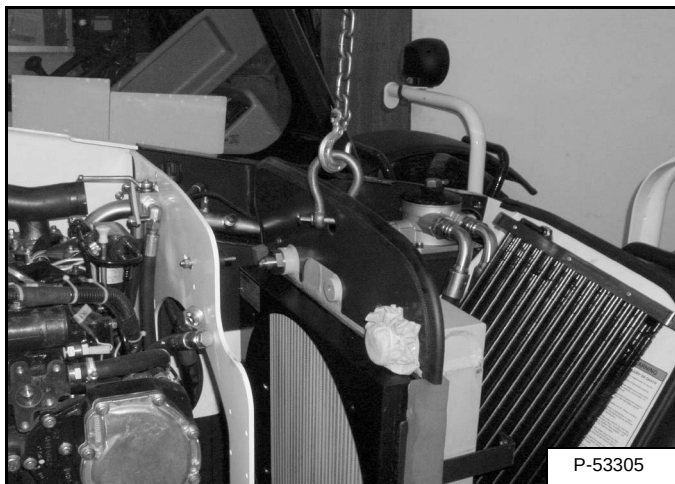


Install a hoist and chain to the oil cooler/radiator [Figure 70-50-6].

Figure 70-50-7

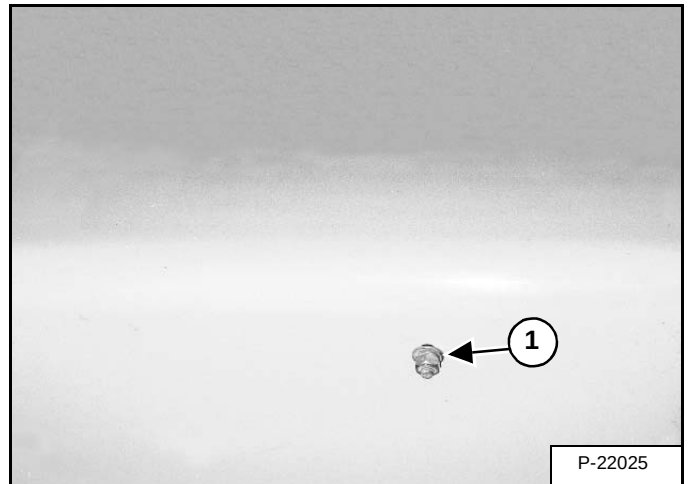

Remove both oil cooler/radiator mounting bolts (Item 1) [Figure 70-50-7] from the bottom of the engine pan.

Figure 70-50-8

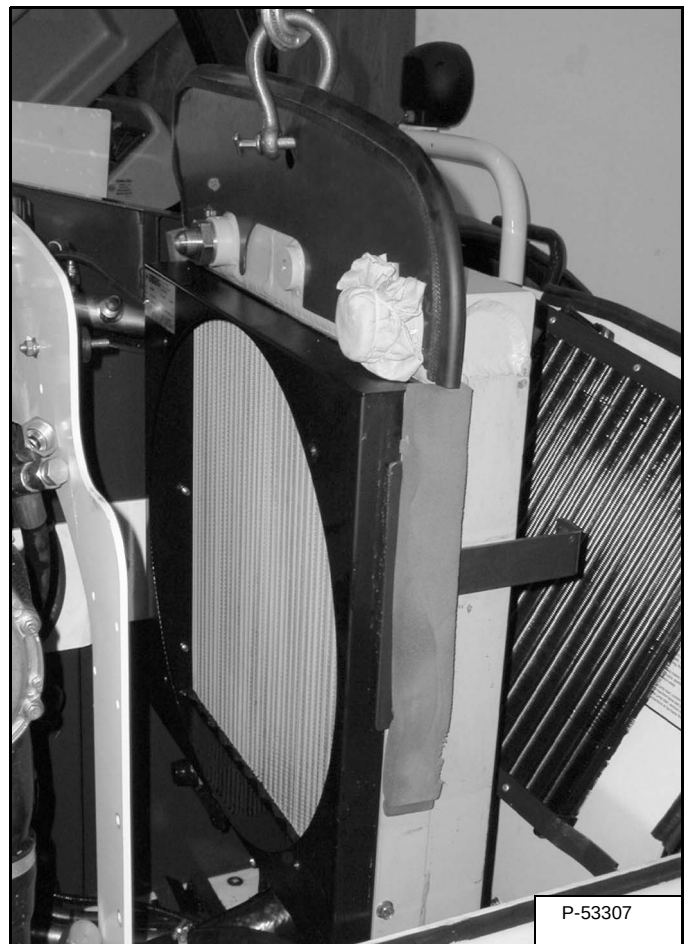


Lift and remove the oil cooler/radiator assembly [Figure 70-50-8].

OIL COOLER/RADIATOR (CONT'D)


Disassembly And Assembly

Figure 70-50-9

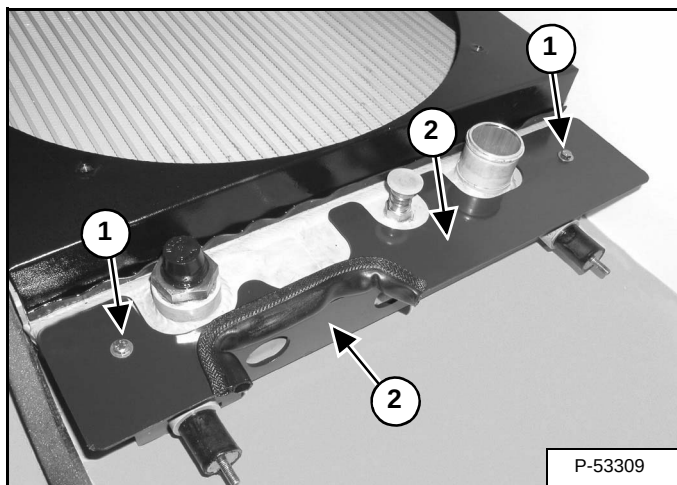


Remove the two bolts (Item 1) and remove the two brackets (Item 2) [Figure 70-50-9].

Figure 70-50-10

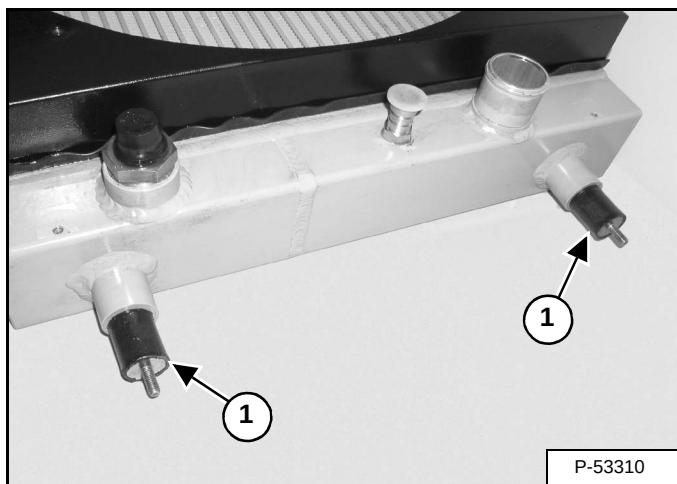


Remove both rubber mounts (Item 1) [Figure 70-50-10] by turning counterclockwise.

Figure 70-50-11

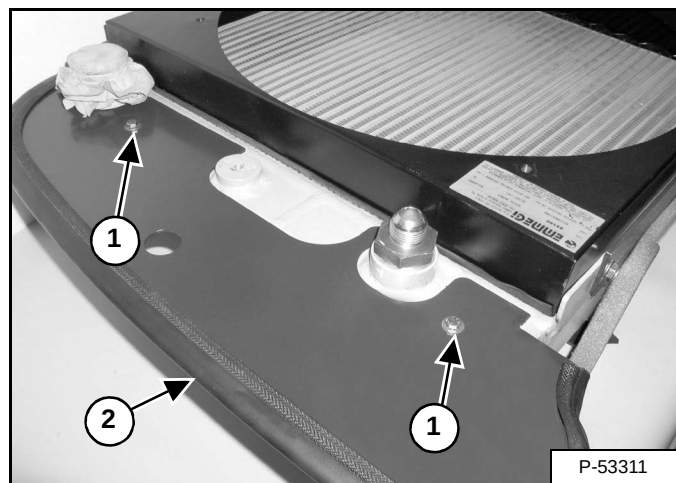

Remove the bolts (Item 1) and remove the upper bracket (Item 2) [Figure 70-50-11].

Figure 70-50-12

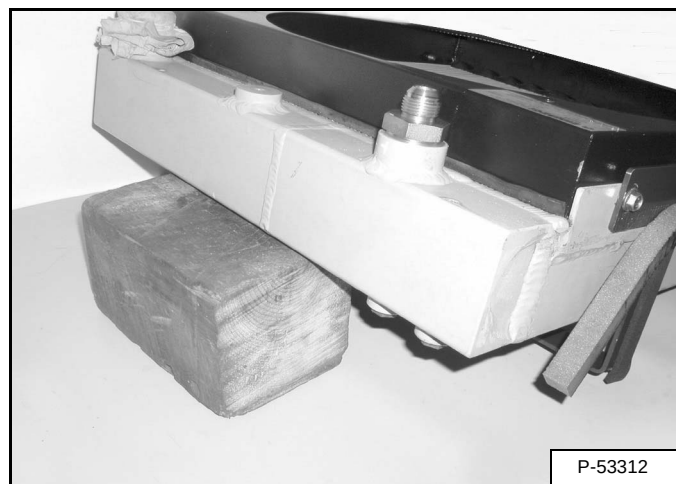


Support the oil cooler/radiator assembly as shown [Figure 70-50-12].

OIL COOLER/RADIATOR (CONT'D)

Disassembly And Assembly (Cont'd)

Figure 70-50-13

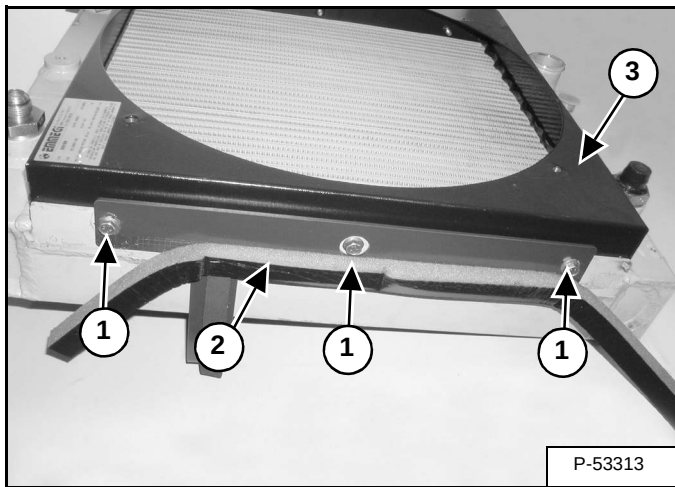

Remove the three bracket mounting bolts (Item 1) (both sides) and remove the condenser mounting bracket (Item 2) and shroud (Item 3) **[Figure 70-50-13]**.

ENGINE AND ENGINE MOUNTS

Removal And Installation

Remove the engine/hydrostat assembly. (See "Removal And Installation" on page 70-80-1)


NOTE: Set the engine/hydrostat assembly on blocks, to allow access to remove the motor mount bolts.

Remove the hydrostatic pump. (See "Removal And Installation" on page 30-40-1)

Remove the flywheel and housing. (See "Removal And Installation" on page 70-90-1.)


If equipped with air conditioning, remove the hoses from the compressor. (See "Removal And Installation" on page 80-110-1)

Figure 70-60-1

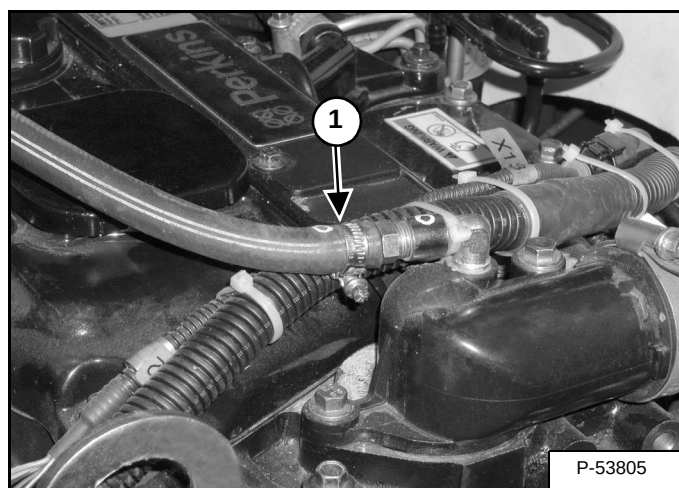


Remove the hose (Item 1) [Figure 70-60-1] from the thermostat housing.

Figure 70-60-2

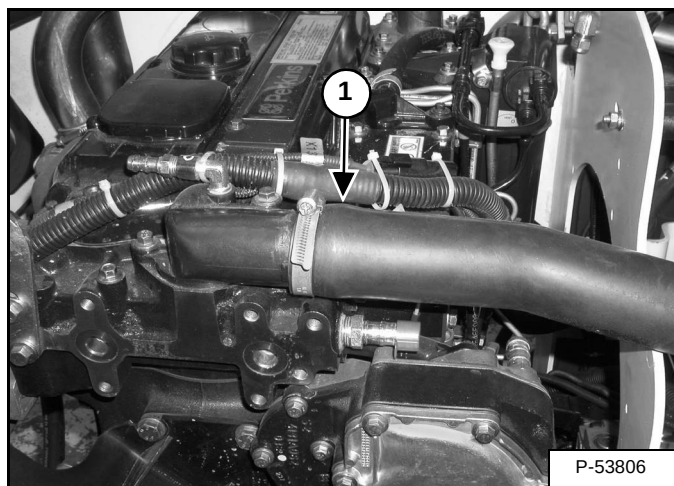

Remove the hose (Item 1) [Figure 70-60-2] and reposition.

Figure 70-60-3

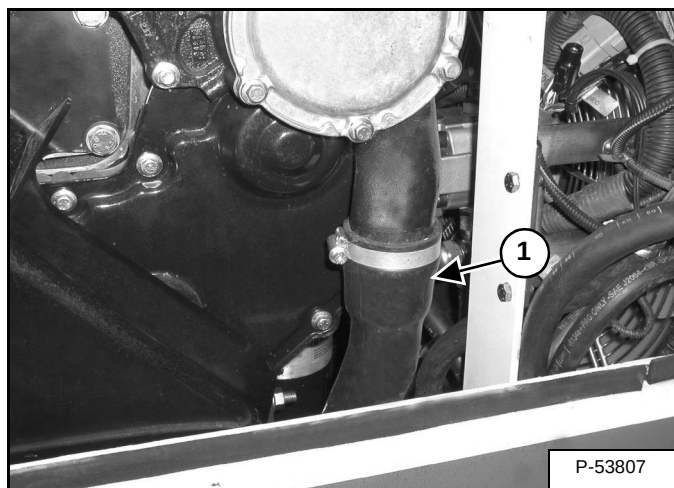


Remove the lower radiator hose (Item 1) [Figure 70-60-3] from the water pump.

ENGINE AND ENGINE MOUNTS (CONT'D)


Removal And Installation (Cont'd)

Figure 70-60-4

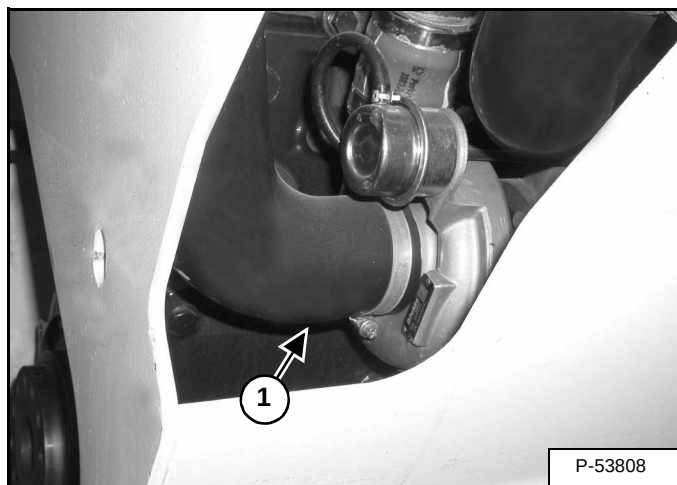


Remove the intake hose (Item 1) [Figure 70-60-4] from the turbo.

Figure 70-60-5

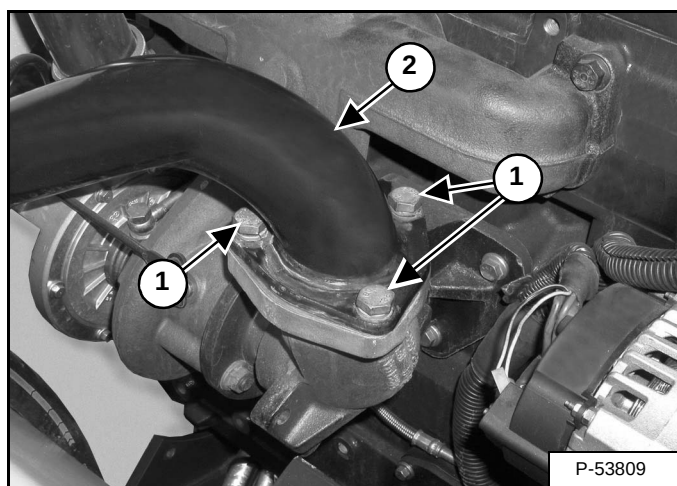


Remove the three bolts (Item 1) and exhaust tube (Item 2) [Figure 70-60-5].

Figure 70-60-6

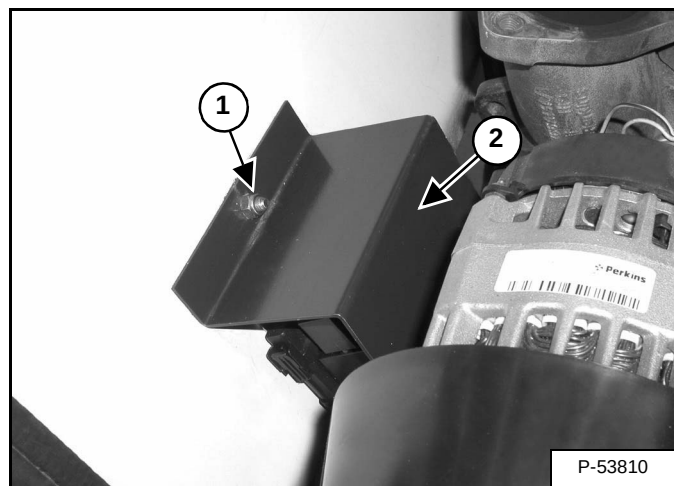

Remove the bolt and nut (Item 1) at the rear of the engine compartment and remove the access panel (Item 2) [Figure 70-60-6].

Figure 70-60-7

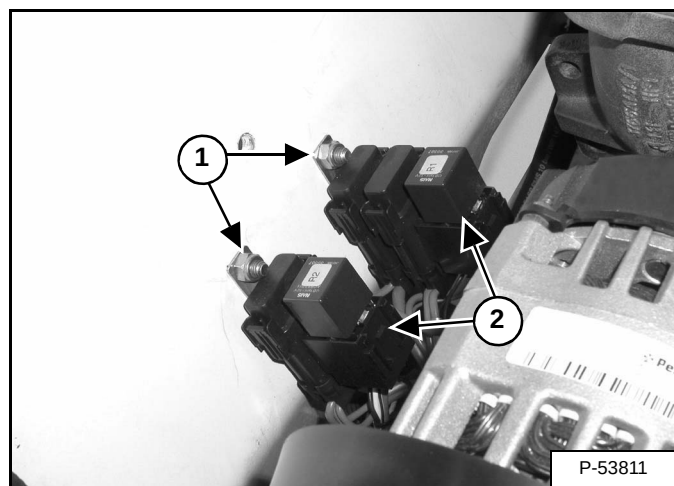

Remove the two bolts (Item 1) and remove the two fuse assemblies (Item 2) [Figure 70-60-7].

ENGINE AND ENGINE MOUNTS (CONT'D)


Removal And Installation (Cont'd)

Figure 70-60-8




Reposition the electrical harness [Figure 70-60-8] (as shown).

Figure 70-60-9

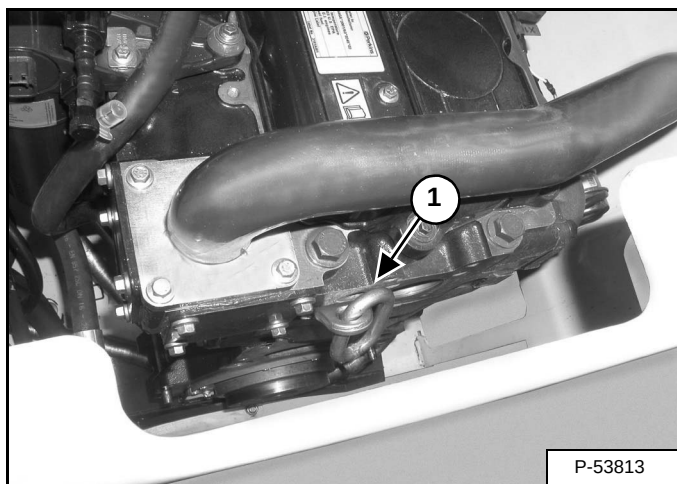


Install a lifting bracket (Item 1) [Figure 70-60-9] in the position shown.

Figure 70-60-10

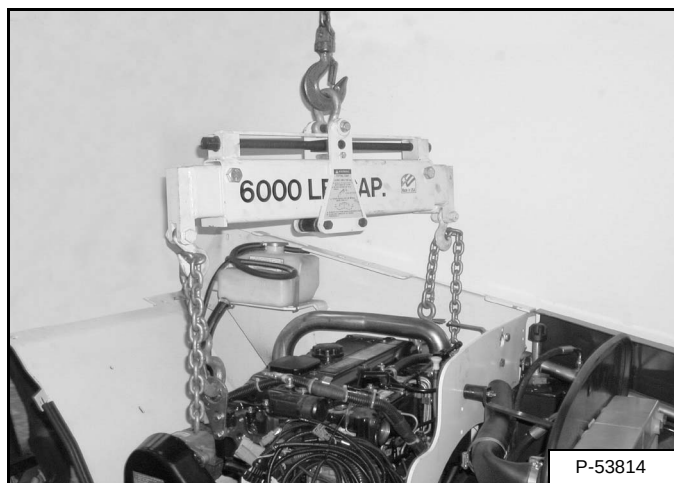

Install a hoist and chain to the lifting brackets [Figure 70-60-10] (as shown).

Figure 70-60-11

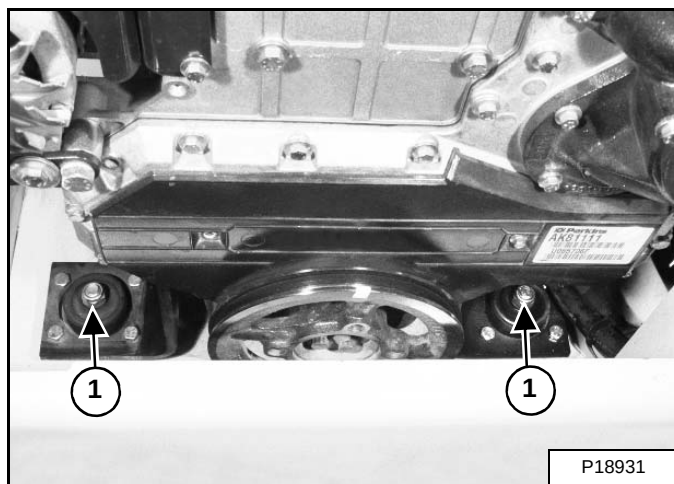


Remove both front engine mount bolts (Item 1) [Figure 70-60-11].

Installation: Tighten the engine mount bolts to 185-200 ft.-lbs. (250-271 Nm) torque.

ENGINE AND ENGINE MOUNTS (CONT'D)

Removal And Installation (Cont'd)

Figure 70-60-12

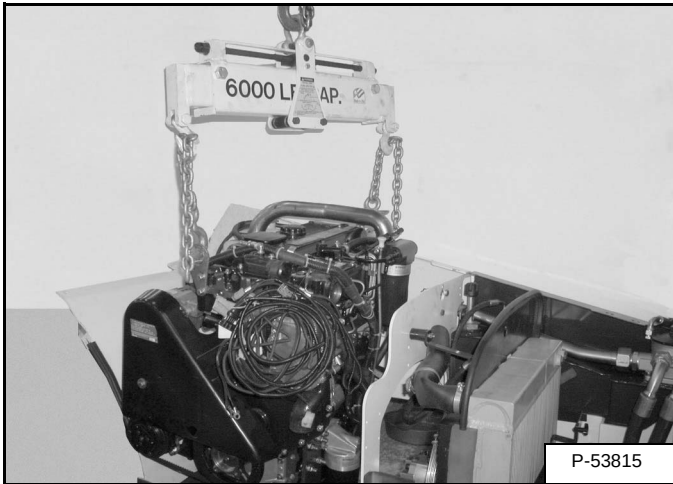

Lift and remove the engine [Figure 70-60-12]


ENGINE COMPONENTS AND TESTING

Fuel Injection Pump Removal

NOTE: Read and fully understand the following procedure before removing the fuel injection pump. Failure to remove the pump correctly will result in incorrect pump timing and the pump will have to be sent to an authorized Delphi dealer to be retimed. The internal adjustment for pump timing is tamper proof. High and low idle adjustments of the fuel injection pump are factory set and adjustments can not be made to the fuel pump.

Set the engine to TDC number one cylinder compression stroke. (See "ENGINE TIMING" on page 70-71-1)


Figure 70-70-1

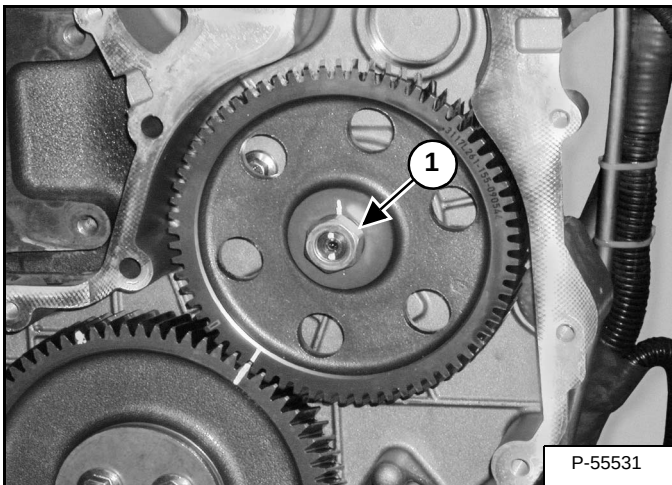

NOTE: If the fuel pump nut (Item 1) [Figure 70-70-1] is loosened before the fuel pump timing is set and the pump locked, the fuel pump timing will be lost and the fuel pump will have to be sent into the dealer to be reset.

Apply pressure counterclockwise by hand to the fuel pump gear to remove backlash from the gears.


Figure 70-70-2

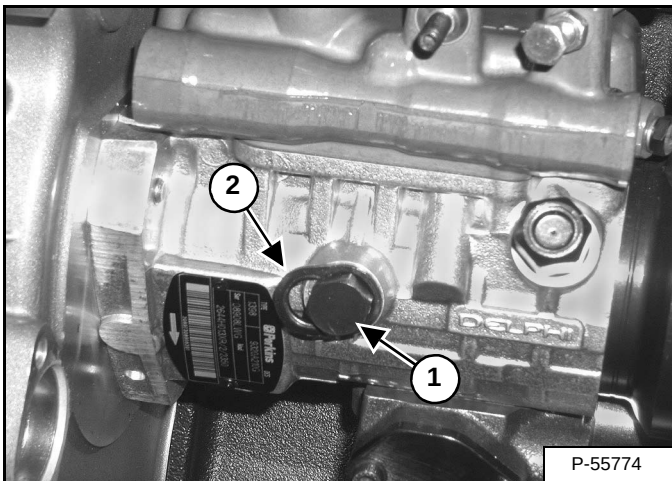

Loosen the lock bolt (Item 1) and move the washer (Item 2) [Figure 70-70-2] (to the position shown). Retighten the locking screw to 12 ft.-lbs. (17 Nm) torque.

Remove the nut and washer (Item 1) [Figure 70-70-1].

Figure 70-70-3

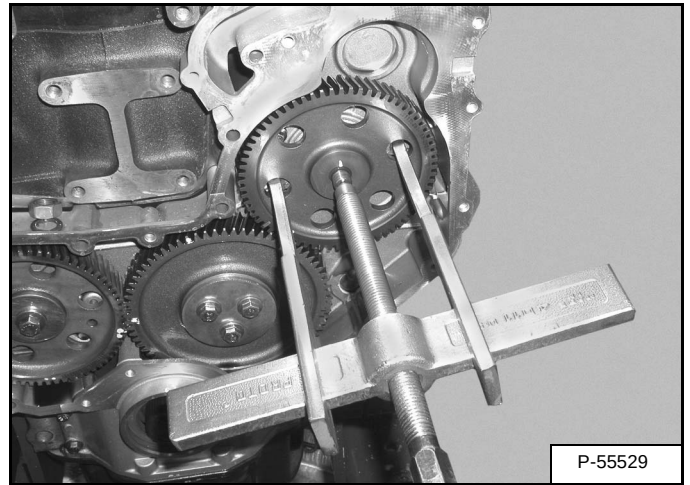


Using a gear puller, remove the fuel pump gear [Figure 70-70-3].

ENGINE COMPONENTS AND TESTING (CONT'D)

Fuel Injection Pump Removal (Cont'd)


Figure 70-70-4

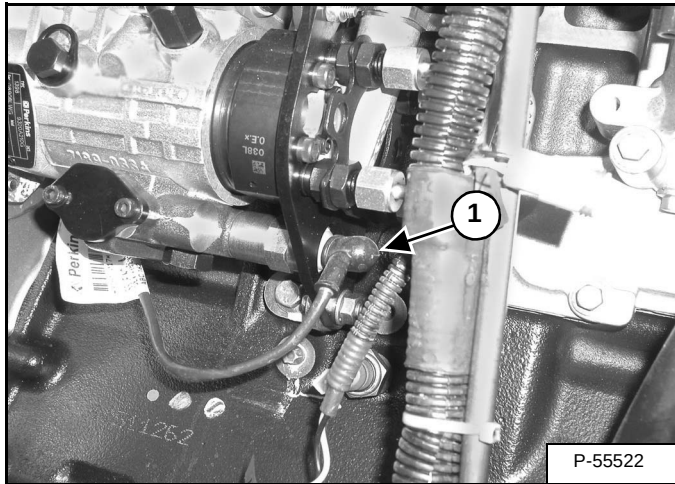

Remove the harness (Item 1) [Figure 70-70-4].


NOTE: Mark the connectors for correct installation.

Figure 70-70-5

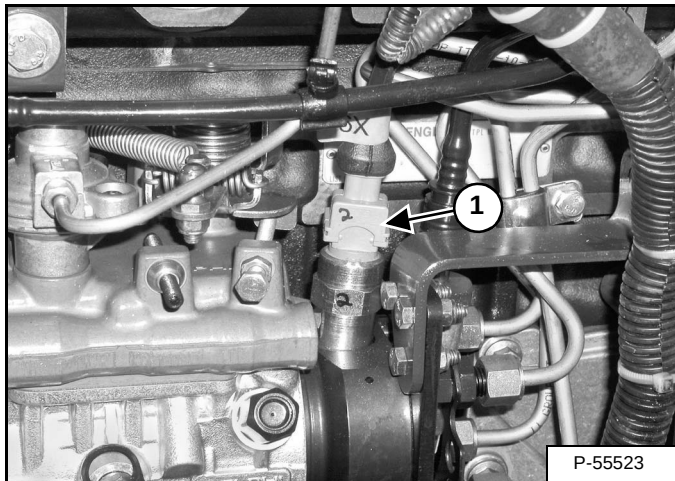


Remove the connector (Item 1) [Figure 70-70-5] from the top of the pump.

Figure 70-70-6

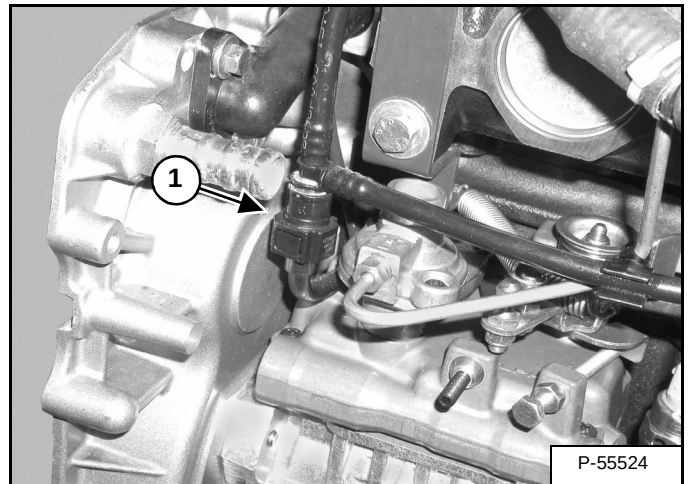

Remove the fuel line (Item 1) [Figure 70-70-6] from the front of the pump.

Figure 70-70-7

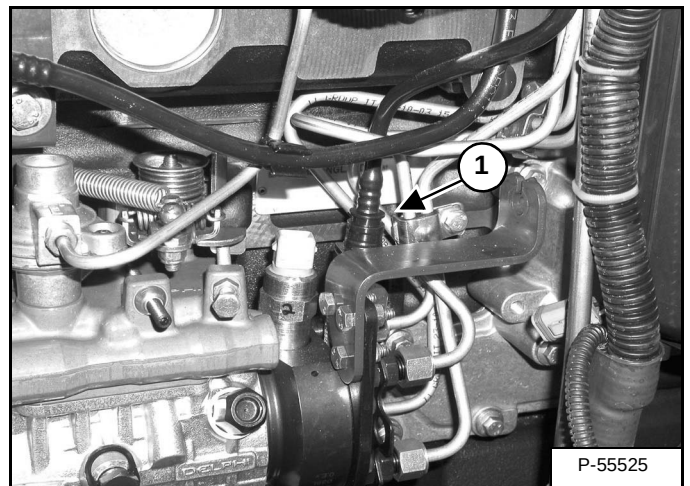


Remove the fuel line (Item 1) [Figure 70-70-7] from the rear of the pump.

ENGINE COMPONENTS AND TESTING (CONT'D)

Fuel Injection Pump Removal (Cont'd)

Figure 70-70-8

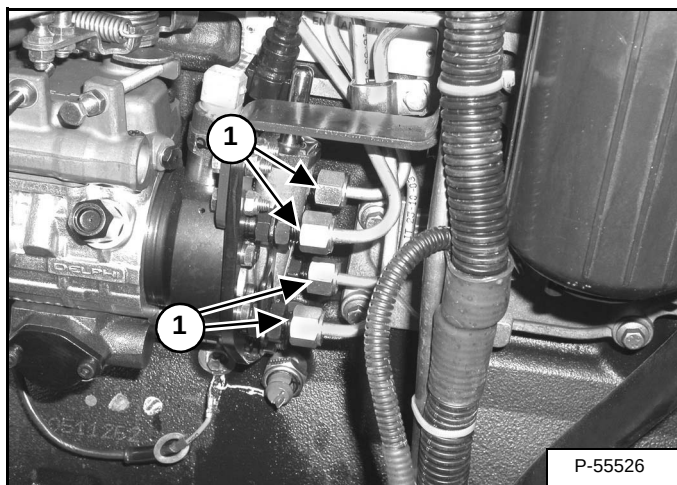

Remove the four fuel tubelines (Item 1) [Figure 70-70-8].

IMPORTANT

Do not bend the high pressure fuel injection tubes when removing or installing them.


I-2029-0289

Figure 70-70-9




Remove the tubeline (Item 1) [Figure 70-70-9] from the top of the pump.

Figure 70-70-10

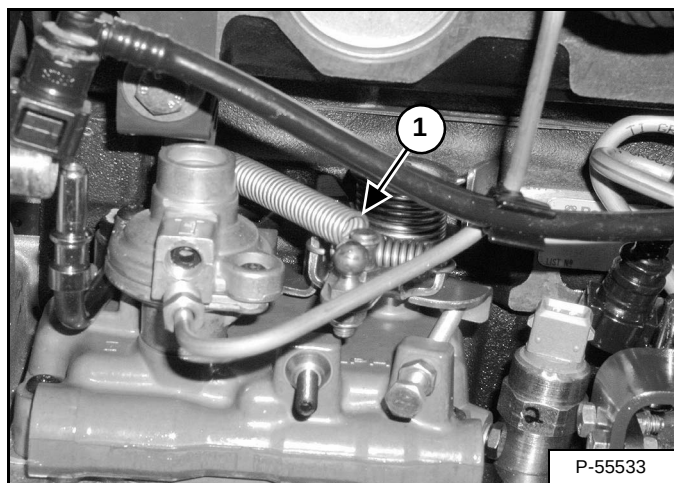

Disconnect the return spring (Item 1) [Figure 70-70-10] from the pump linkage.

Figure 70-70-11

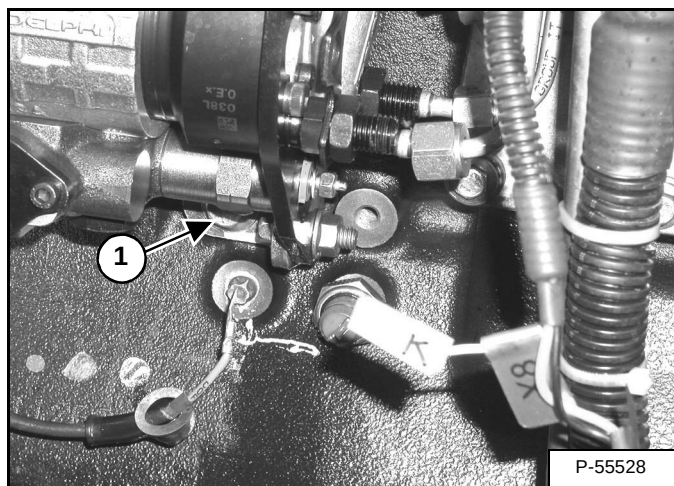


Remove the mount bolt (Item 1) [Figure 70-70-11] from the bracket.

ENGINE COMPONENTS AND TESTING (CONT'D)

Fuel Injection Pump Removal (Cont'd)

Figure 70-70-12

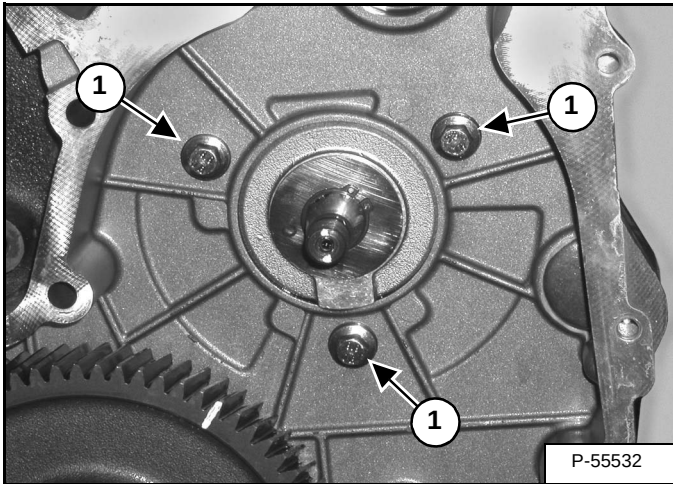

Remove the three mount bolts (Item 1) [Figure 70-70-12] and remove the pump.


Fuel Injection Pump Installation

The engine must be set to TDC number one cylinder, compression stroke before the pump is fitted. (See "ENGINE TIMING" on page 70-71-1)

NOTE: The new fuel pump will be supplied with the pump shaft in the locked position. Do not unlock the shaft of the fuel pump until the fuel pump gear is fitted.


Install a new O-ring onto the pump flange.

Figure 70-70-13

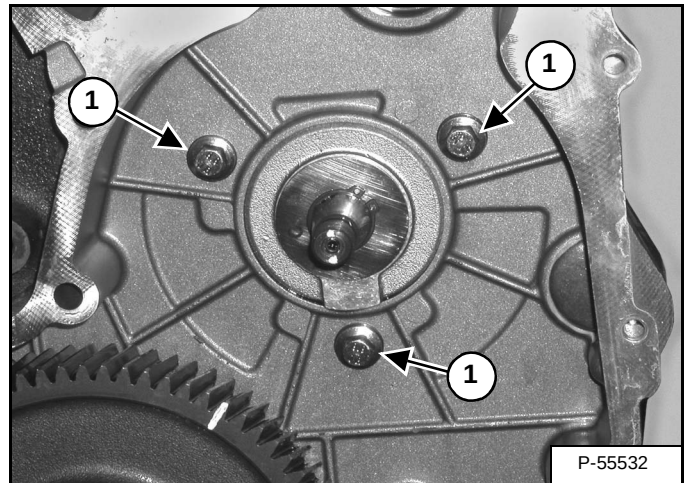

Install the fuel pump and tighten the three bolts (Item 1) [Figure 70-70-13] to 18 ft.-lbs. (25 Nm) torque.

Figure 70-70-14

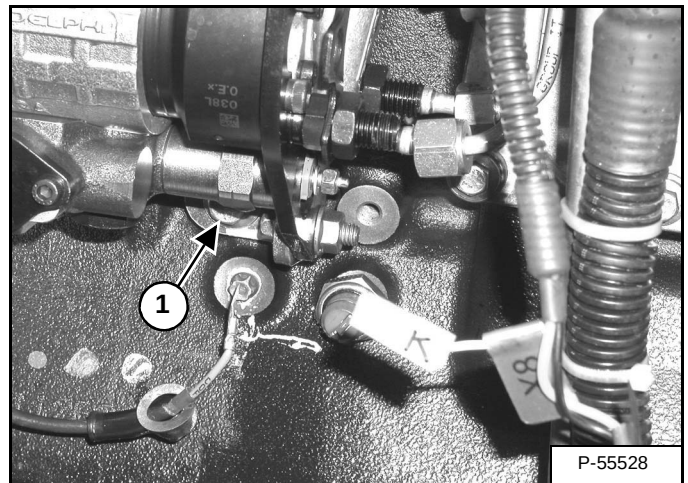


Install the mount bolt (Item 1) [Figure 70-70-14]. Do not tighten at this time.

ENGINE COMPONENTS AND TESTING (CONT'D)

Fuel Injection Pump Installation (Cont'd)


Figure 70-70-15

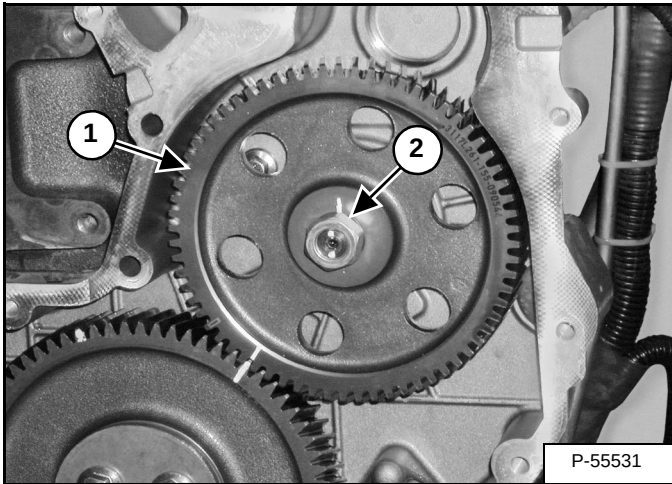

Fit the gear (Item 1) onto the tapered shaft. Make sure the fuel pump gear is correctly in mesh with the idler gear and install the washer and nut (Item 2) [Figure 70-70-15]. Do not tighten at this time.


NOTE: The backlash must be removed before the fuel injection pump is released. Failure to do so will make the fuel pump timing incorrect.

Figure 70-70-16

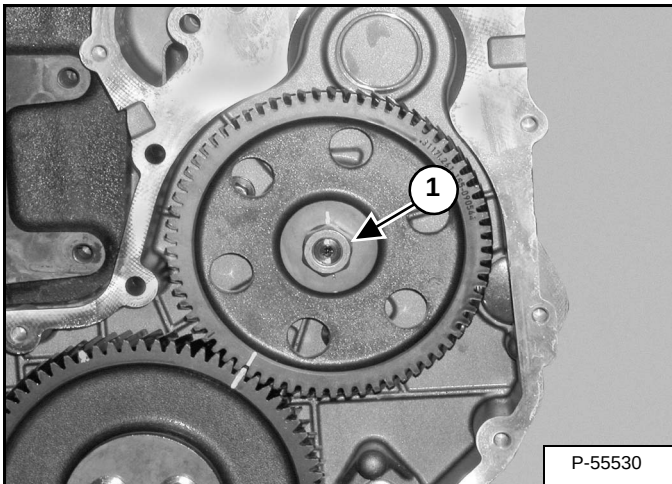

Apply pressure counterclockwise by hand to the fuel pump gear to remove the backlash from all the gears. Tighten the nut (Item 1) [Figure 70-70-16] to 18 ft.-lbs. (24 Nm) torque.


Figure 70-70-17

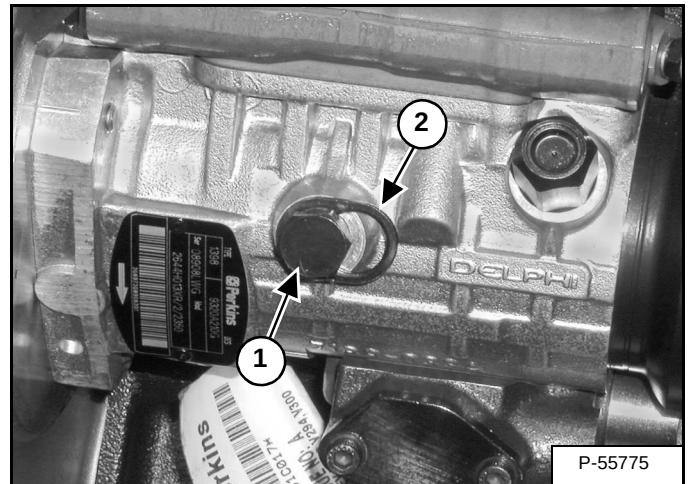

Loosen the locking bolt (Item 1) and move the washer (Item 2) [Figure 70-70-17] to the position shown and tighten the bolt to 9 ft.-lbs. (12 Nm) torque.

Retighten the nut (Item 1) [Figure 70-70-16] to 65 ft.-lbs. (88 Nm) torque.

Figure 70-70-18

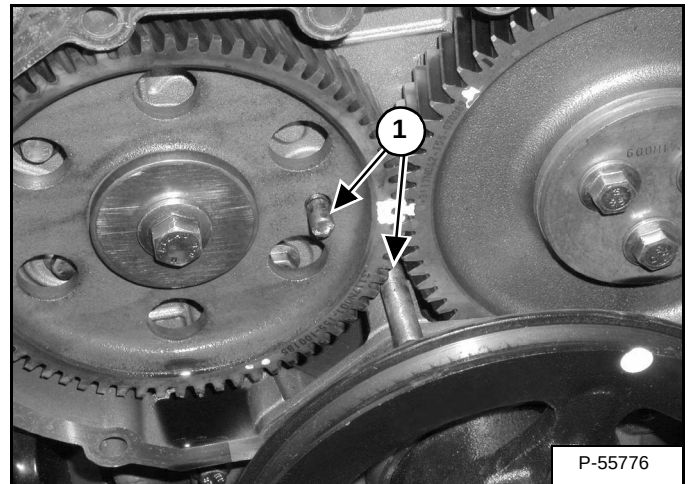

Remove the two timing pins (Item 1) [Figure 70-70-18].

Lightly lubricate each gear with clean engine oil.

Install the timing case cover. (See "Timing Cover Removal" on page 70-100-19)


Install the glow plugs. (See "Glow Plugs Removal And Installation" on page 70-70-12)

Install the rocker cover. (See "Rocker Cover Removal And Installation" on page 70-100-5)

ENGINE COMPONENTS AND TESTING (CONT'D)


Fuel Injection Pump Installation (Cont'd)

Figure 70-70-19

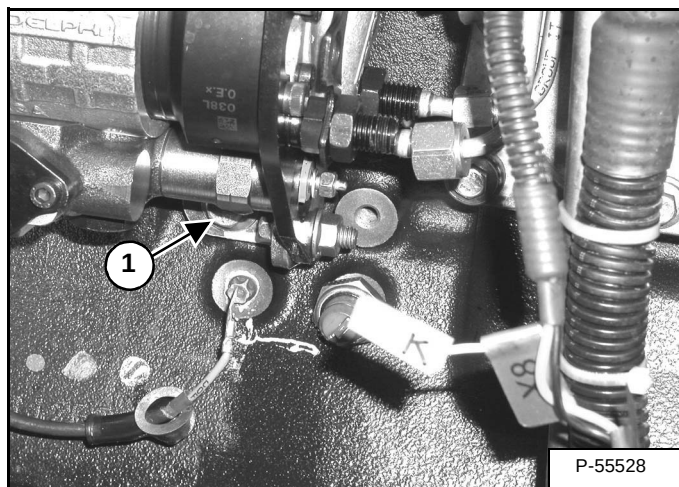


Tighten the mount bolt (Item 1) [Figure 70-70-19] to 32 ft.-lbs. (44 Nm) torque.

Figure 70-70-20

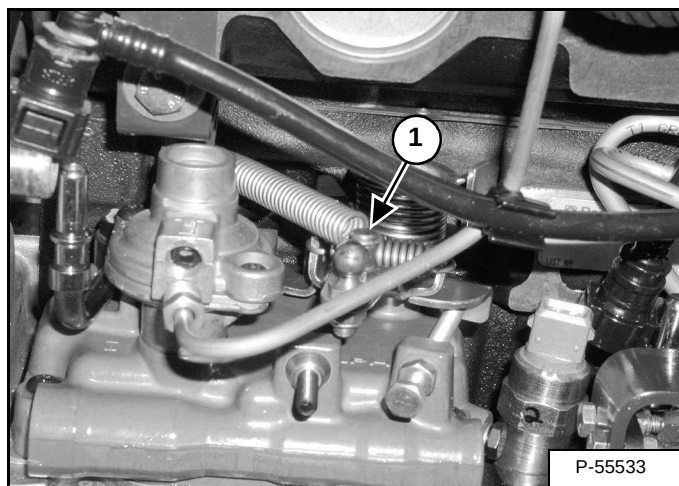

Connect the return spring (Item 1) [Figure 70-70-20] to the pump linkage.


Figure 70-70-21

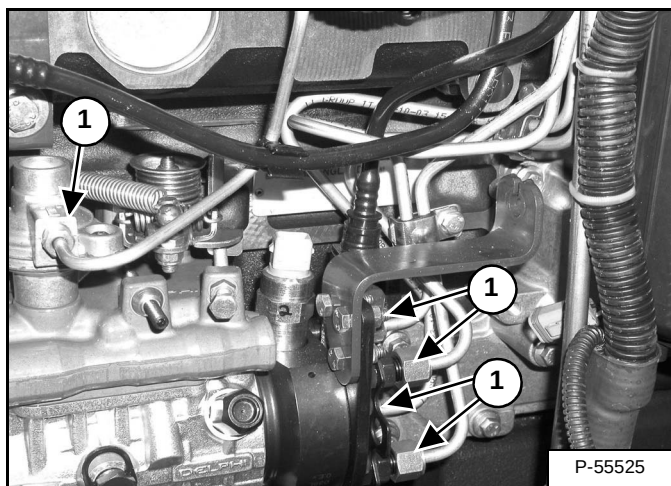

Install the tubelines (Item 1) [Figure 70-70-21] to the pump and tighten to 21 ft.-lbs. (27 Nm) torque.

Do not overtighten.


Figure 70-70-22

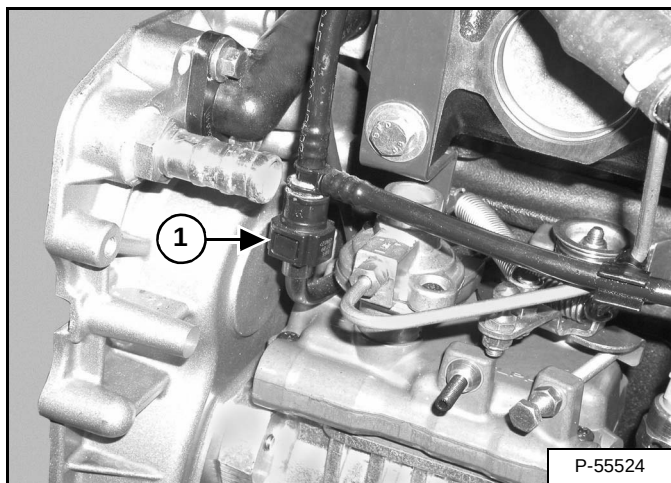

ENGINE COMPONENTS AND TESTING (CONT'D)

Fuel Injection Pump Installation (Cont'd)


Figure 70-70-23

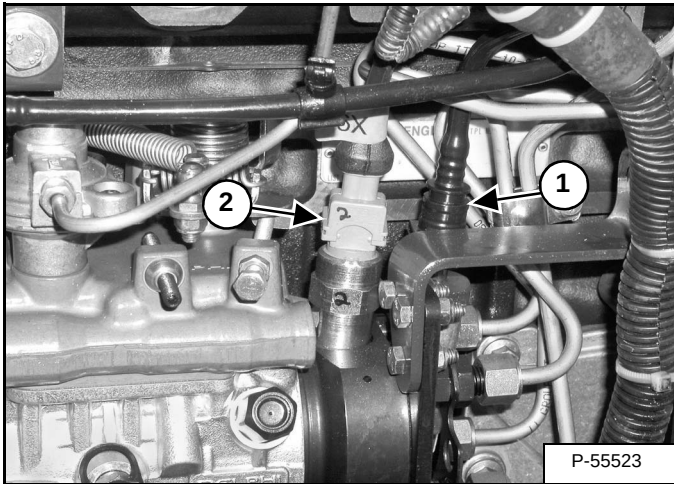

Install the two fuel lines (Item 1) [Figure 70-70-22] and [Figure 70-70-23].

Install the electrical connector (Item 2) [Figure 70-70-23].

Figure 70-70-24

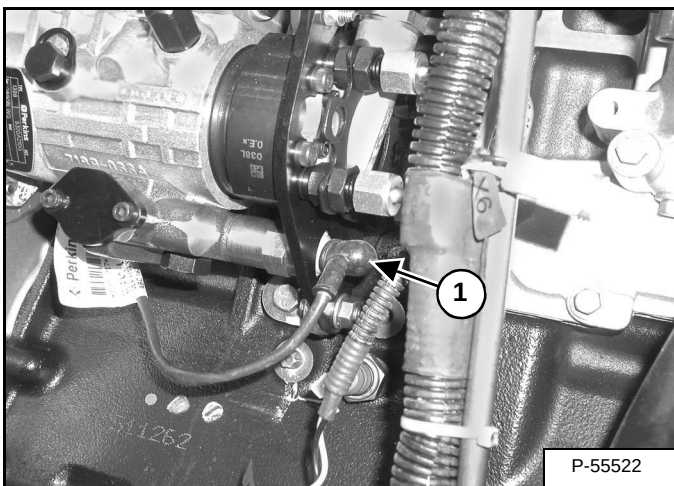

Install the harness (Item 1) [Figure 70-70-24].

Remove air from the system.


Fuel Injectors Removal And Installation

! WARNING

Diesel fuel or hydraulic fluid under pressure can penetrate skin or eyes, causing serious injury or death. Fluid leaks under pressure may not be visible. Use a piece of cardboard or wood to find leaks. Do not use your bare hand. Wear safety goggles. If fluid enters skin or eyes, get immediate medical attention from a physician familiar with this injury.


W-2072-0496

Figure 70-70-25

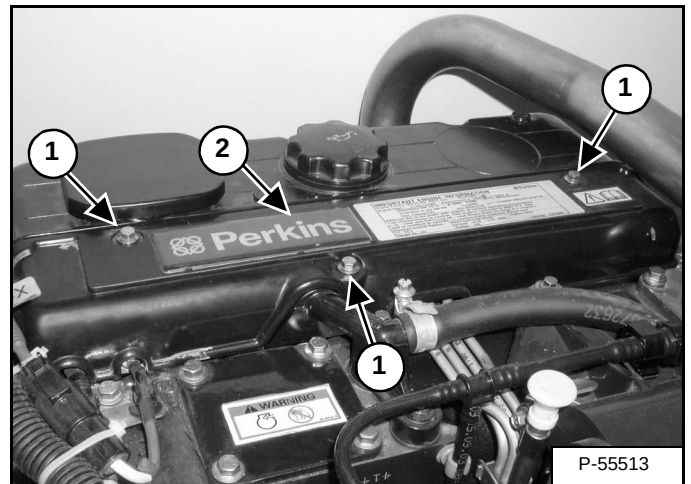

Remove the three bolts (Item 1) and remove the fuel injector cover (Item 2) [Figure 70-70-25].

Figure 70-70-26

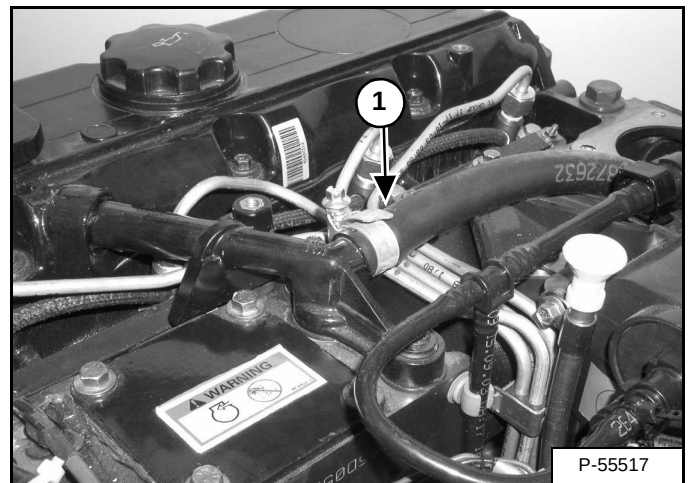


Remove the breather hose (Item 1) [Figure 70-70-26].

ENGINE COMPONENTS AND TESTING (CONT'D)

Fuel Injector Removal And Installation (Cont'd)


Figure 70-70-27

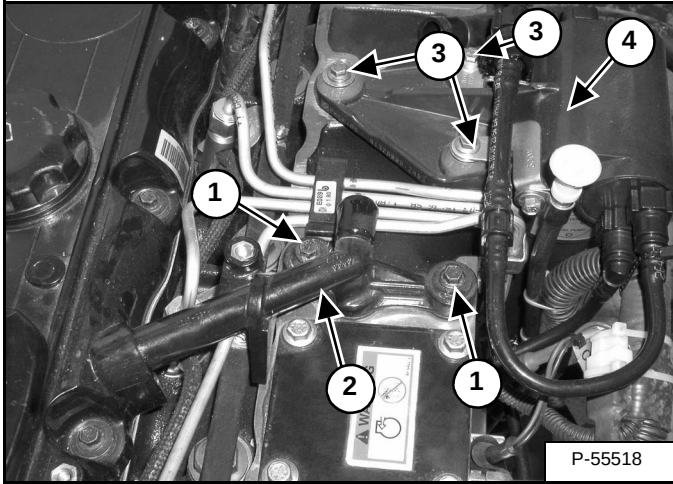

Remove the two bolts (Item 1) and remove the breather fitting (Item 2) [Figure 70-70-27].

Remove the two bolts (Item 3) and remove the fuel filter assembly (Item 4) [Figure 70-70-27].

Figure 70-70-28

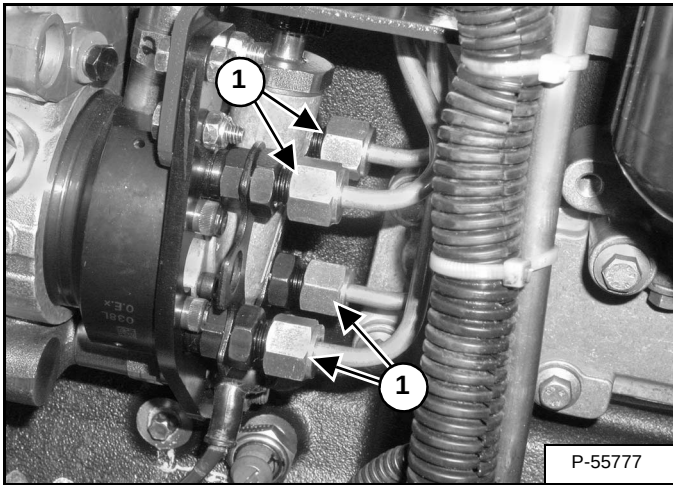

Disconnect the four injector tubelines (Item 1) [Figure 70-70-28] from the injector pump.


Installation: Tighten the tubelines to 20 ft.-lbs. (27 Nm) torque.

IMPORTANT

Do not bend the high pressure fuel injection tubes when removing or installing them.

I-2029-0289

Figure 70-70-29

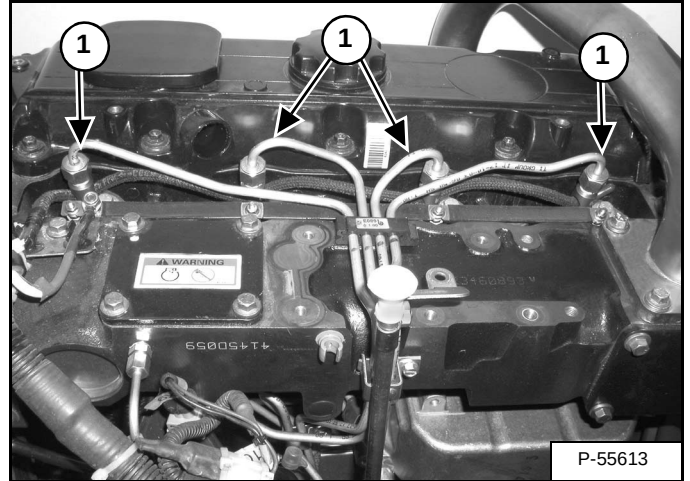


Disconnect the injector tubelines (Item 1) [Figure 70-70-29] from the injectors.

Installation: Tighten the tubelines to 20 ft.-lbs. (27 Nm) torque.

Remove the tubelines.

Figure 70-70-30

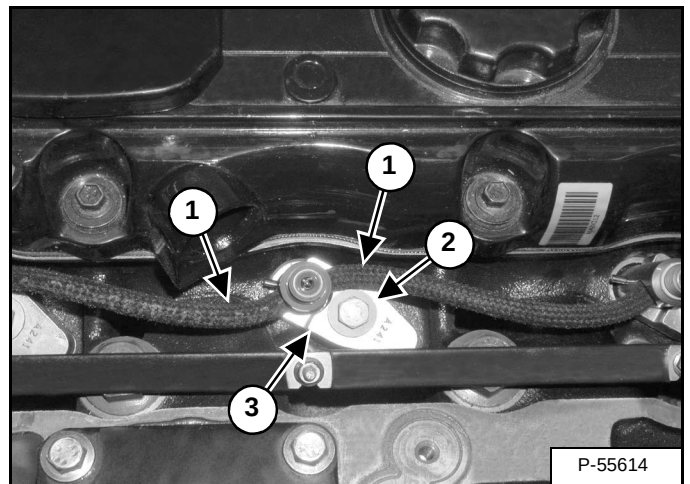

Remove the fuel return hoses (Item 1) and remove the bolt (Item 2) and clamp (Item 3) [Figure 70-70-30].

Installation: Tighten bolt to 20 ft.-lbs. (27 Nm) torque.

ENGINE COMPONENTS AND TESTING (CONT'D)


Fuel Injector Removal And Installation (Cont'd)

Figure 70-70-31




Remove the injector from the cylinder head [Figure 70-70-31].

Figure 70-70-32

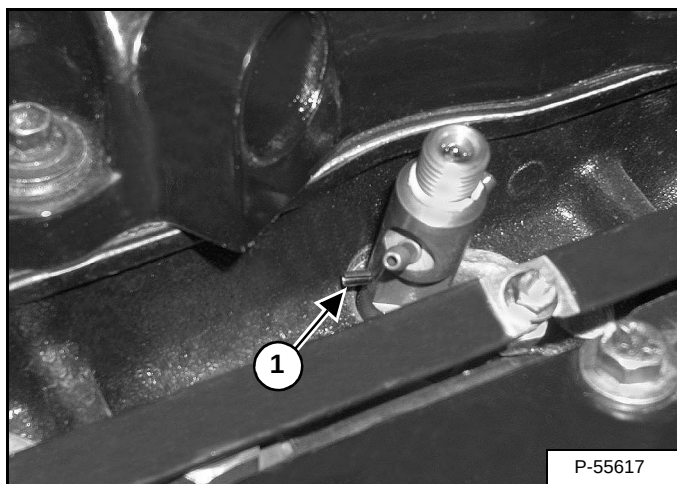

Installation: The roll pin must be in the position shown [Figure 70-70-32].


Figure 70-70-33

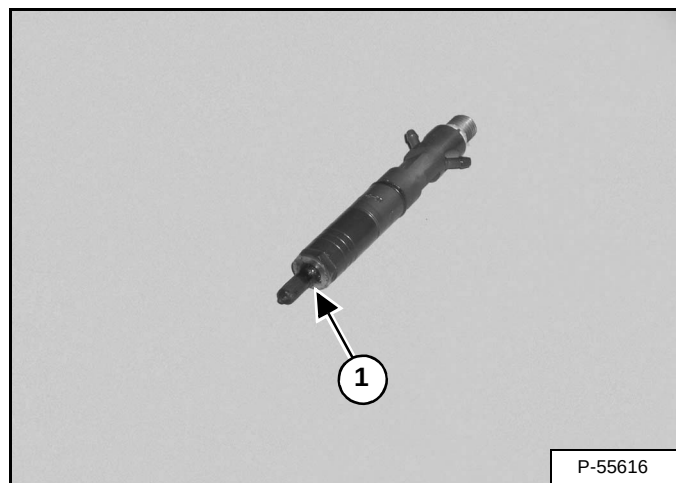

Installation: Always replace the copper washer (Item 1) [Figure 70-70-33] at the nozzle. If the washer remains in the cylinder head, it must be removed.

Checking The Fuel Lift Pump

Figure 70-70-34

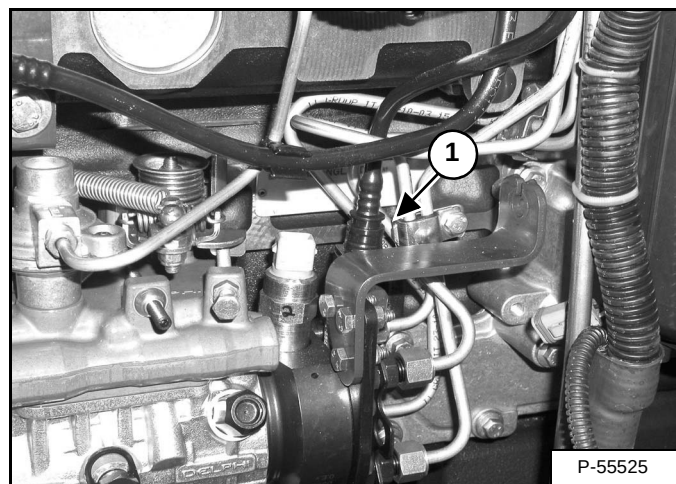

Remove the fuel lift pipe (Item 1) [Figure 70-70-34] from the injector pump, fit a suitable pipe with a pressure test point and connect a pressure gauge.


Operate the engine at idler for two minutes to allow any trapped air to be removed.

Standard pressure should be 4 PSI (.3 Bar).

ENGINE COMPONENTS AND TESTING (CONT'D)


Fuel Lift Pump Removal And Installation

Figure 70-70-35

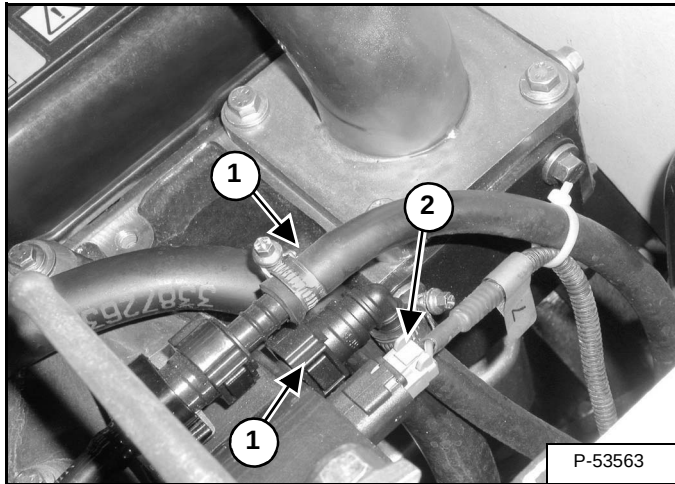

Remove the two fuel lines (Item 1) and electrical harness (Item 2) [Figure 70-70-35] from the fuel lift pump/filter assembly.

Figure 70-70-36

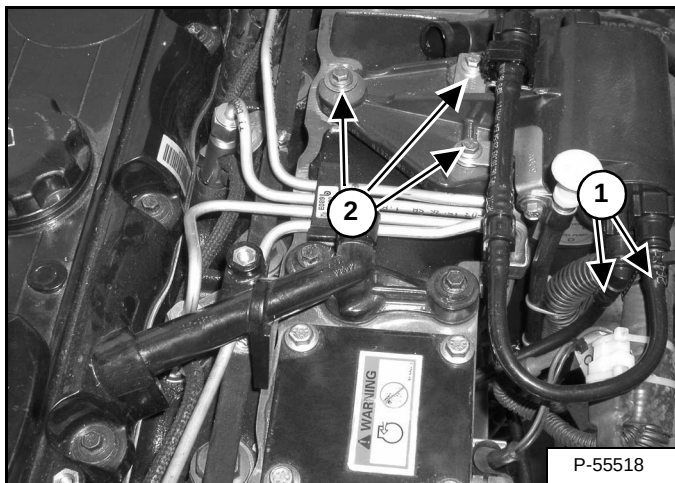

Remove the two fuel lines (Item 1) and three bolts (Item 2) [Figure 70-70-36] and remove the fuel lift pump/filter assembly.

ENGINE COMPONENTS AND TESTING (CONT'D)

Compression Checking


The tools listed will be needed to do the following procedure:

MEL10630 - Engine Compression Kit
MEL1352 - Compression Adapter

The engine must be at operating temperature.


Remove the glow plugs. (See "Glow Plugs Removal And Installation" on page 70-70-12)

Figure 70-70-37

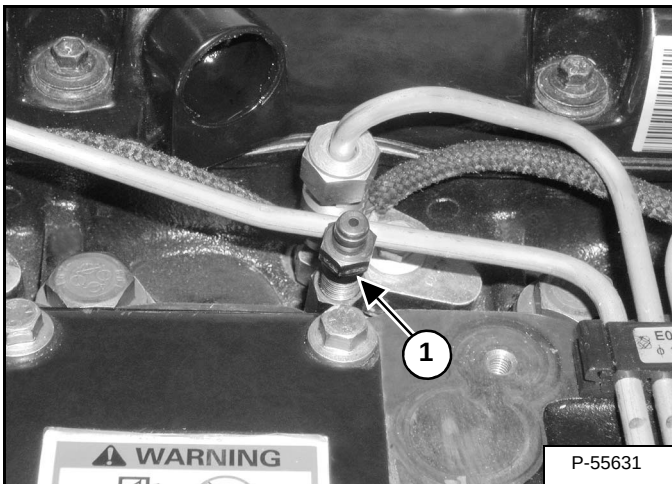

Install the correct compression adapter (Item 1) [Figure 70-70-37] into the cylinder head.

Figure 70-70-38

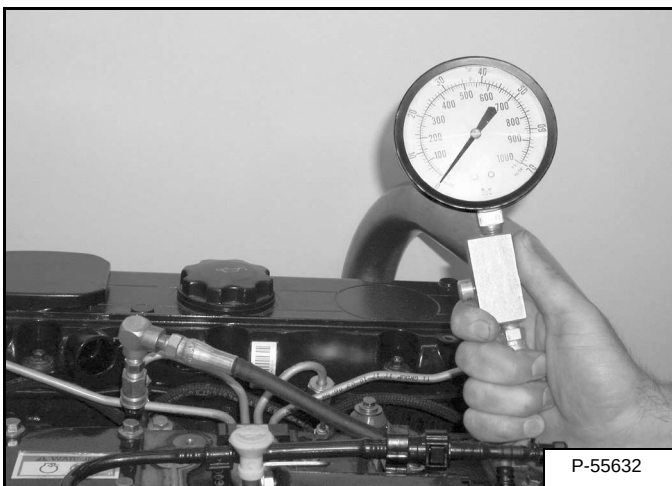

Connect the compression gauge to the adapter [Figure 70-70-38].

Make sure the engine speed control is fully backward (engine idle).

Disconnect the fuel stop solenoid.


Crank the engine with the starter at 200-300 RPM.

If the measurement is below the allowable limit, check the cylinder, piston ring, top clearance, valve and cylinder head.

Compression Pressure should be 290-570 PSI (20-35 Bar).

Compression tests should only be used to compare between the cylinders of an engine. (If one or more cylinders vary by more than 50 PSI (3.5 Bar) then those cylinders may be faulty.

Figure 70-70-39

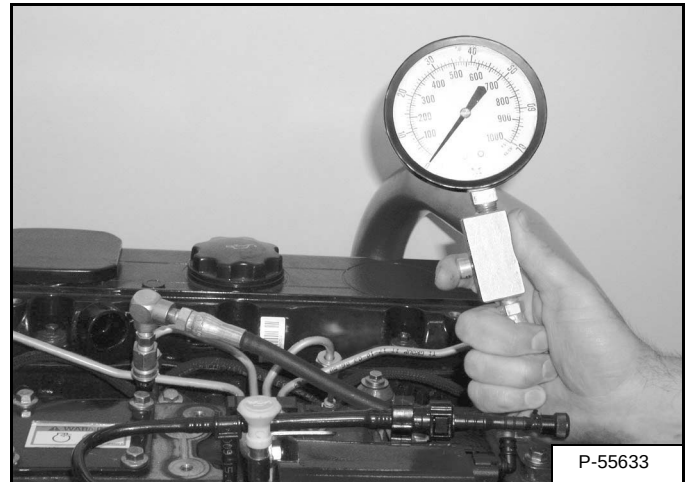

Push the button on the compression gauge to release pressure [Figure 70-70-39].


Connect the fuel stop solenoid.

ENGINE COMPONENTS AND TESTING (CONT'D)

Glow Plugs Checking


Disconnect the glow plug cables and leads.

Figure 70-70-40

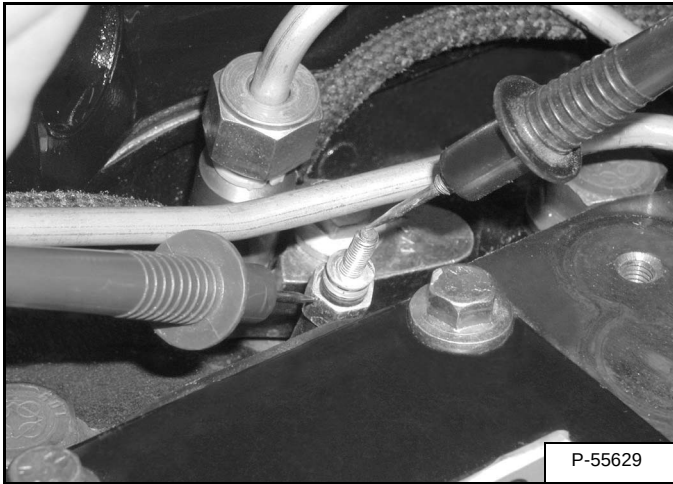

Use an ohmmeter to check the glow plugs [Figure 70-70-40].

Figure 70-70-41

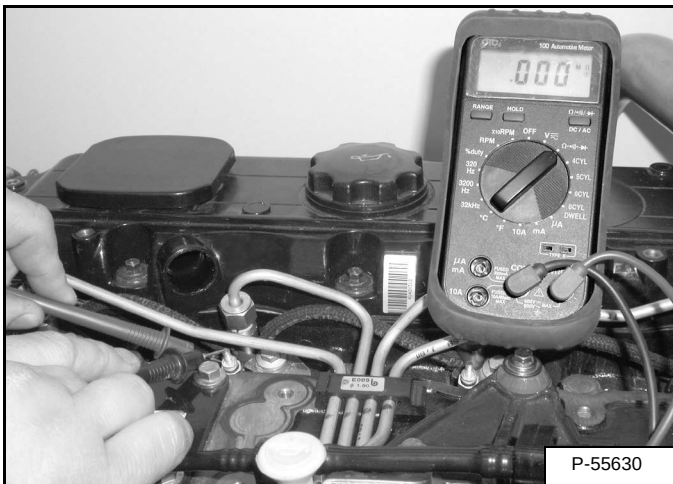

Touch one probe to the end of the glow plug and the other probe to the body of glow plug [Figure 70-70-41].


The reading must be between 1 and 2 ohms [Figure 70-70-41]. If the resistance is infinite, the coil of the glow plug is broken.

Repeat the procedure for each glow plug.

Glow Plugs Removal And Installation


Disconnect the negative (-) cable from the battery.

Figure 70-70-42

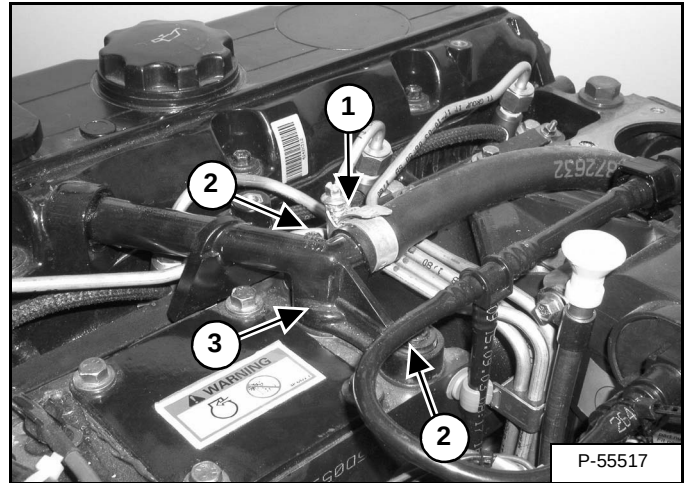

Remove the hose clamp (Item 1), the two bolts (Item 2) and remove the breather (Item 3) [Figure 70-70-42].

Figure 70-70-43

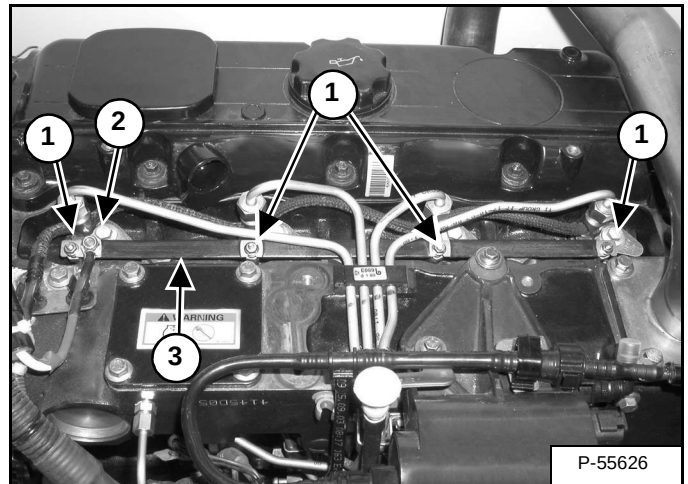

Remove the nut (Item 1) [Figure 70-70-43] from the top of each glow plug.

Installation: Tighten to 1.5 ft.-lbs. (2 Nm) torque.


Disconnect the engine harness wire (Item 2) [Figure 70-70-43] from the glow plug.

Remove the glow plug connecting strap (Item 3) [Figure 70-70-43].

ENGINE COMPONENTS AND TESTING (CONT'D)

Glow Plugs Removal And Installation (Cont'd)

Figure 70-70-44

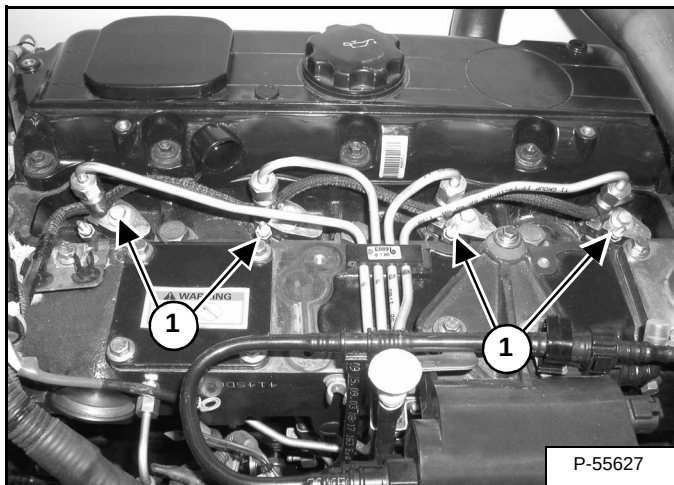

Loosen and remove the glow plugs (Item 1) [Figure 70-70-44].

Installation: Tighten the glow plug to 13 ft.-lbs. (18 Nm) torque.



Bobcat®

ENGINE TIMING

Procedure

The tool listed will be needed to do the following procedure:

MEL-1638 Camshaft Timing Pin

MEL-1639 Crankshaft Timing Pin


Remove the rocker cover. (See page 70-100-5)

Remove the glow plugs. (See page 70-70-12)

Remove the timing case cover. (See page 70-100-19)


NOTE: The marks on the timing gears are not to be used as timing marks. The marks indicate the front of the gear only.

Figure 70-71-1

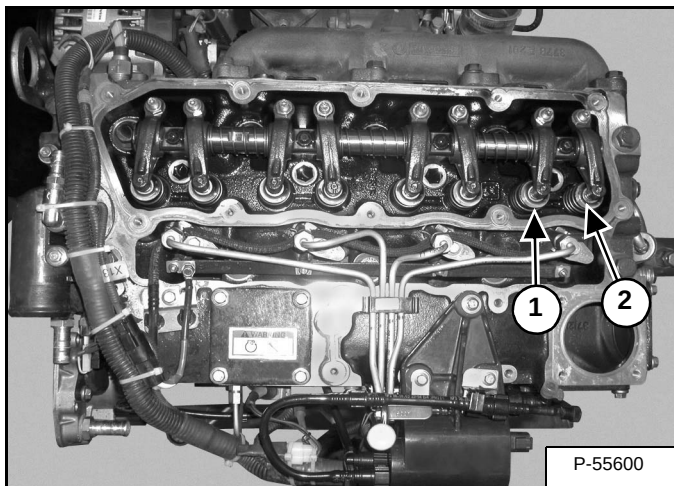


To set the number one piston to TDC on the correct stroke, rotate the crankshaft in the normal direction of rotation until the intake valve (Item 1) of the number four cylinder has just opened and the exhaust valve (Item 2) of the same cylinder has not closed completely.

Figure 70-71-2

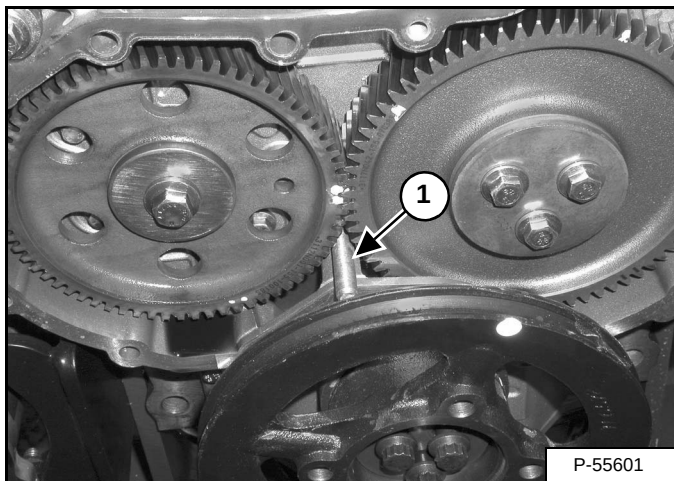

Carefully rotate the crankshaft in the normal direction of rotation. Align the hole in the crankshaft with the hole in the cylinder block and timing case and install the crankshaft timing pin (MEL-1639) (Item 1) [Figure 70-71-2]. Push the pin fully into the hole.

Figure 70-71-3

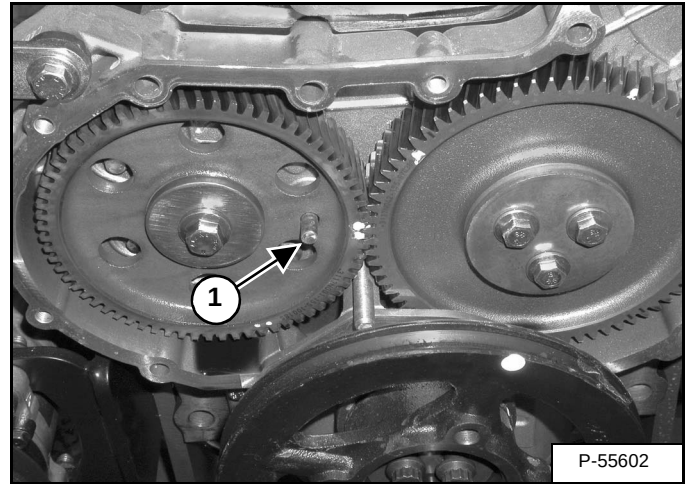

Insert the camshaft timing pin (MEL-1638) (Item 1) [Figure 70-71-3] through the hole in the camshaft gear and into the body of the timing case. With the two pins fitted the engine is set at TDC number one on the compression stroke.

NOTE: The camshaft timing pin is a push fit into the timing case. The camshaft gear can rotate a small amount when the pin is fitted. This allows the assembly of the gears and removal of the backlash from the gears, with the timing pins fitted.

Remove the timing pin from each gear.

Install the timing case cover. (See page 70-100-19)

Install the glow plugs. (See page 70-70-12)

Install the rocker cover. (See page 70-100-5)



Bobcat®

ENGINE/HYDROSTAT ASSEMBLY

Removal And Installation

Raise the boom and install the boom stop. (See page 10-150-1)

Remove the engine cover. (See page 50-70-1)

Remove the air intake cowling. (See page 50-71-1)

Drain the hydraulic reservoir. (See page 10-100-3)

Drain the radiator. (See page 70-50-1)


Remove the battery. (See page 60-20-1)

Remove the muffler. (See page 70-30-1)

Remove the drive shaft. (See page 40-70-1)

If equipped with air conditioning, remove the refrigerant from the A/C system. (See page 80-100-1)

Figure 70-80-1

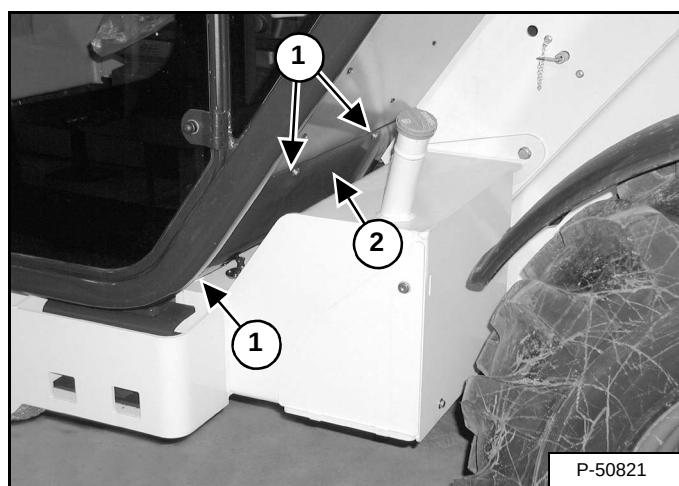


Remove the three screws (Item 1) from the access cover (Item 2) [Figure 70-80-1] located on the back of the cab.

Remove the access cover.


NOTE: Mark all hoses and electrical connectors, for correct installation.

Figure 70-80-2

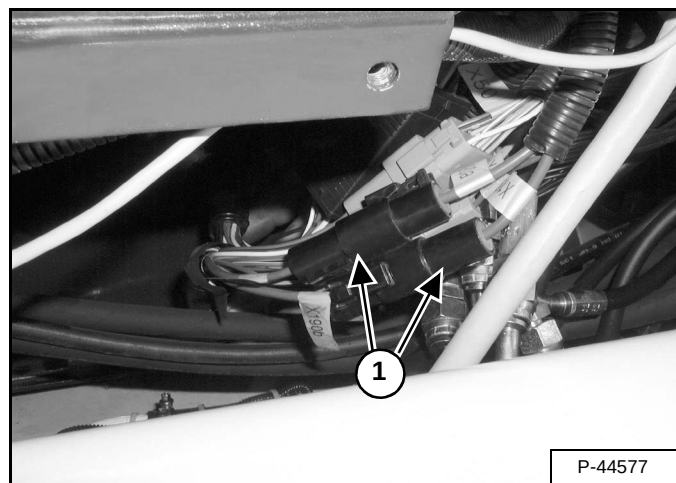

Unplug the two electrical connectors (Item 1) [Figure 70-80-2].

Figure 70-80-3

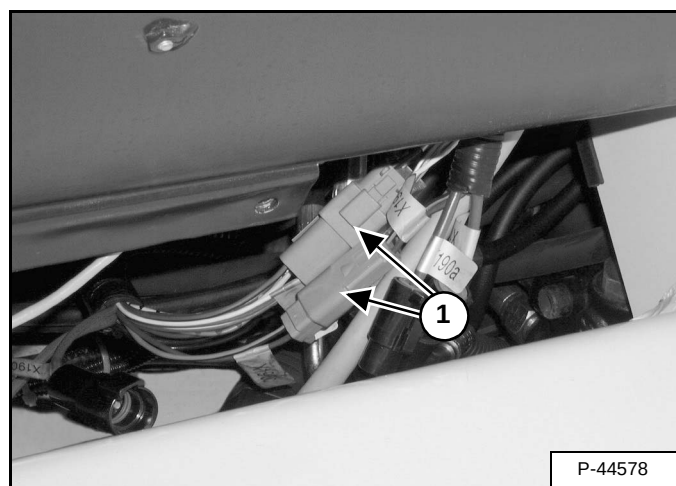


Unplug the two electrical connectors (Item 1) [Figure 70-80-3].

ENGINE/HYDROSTAT ASSEMBLY (CONT'D)


Removal And Installation (Cont'd)

Figure 70-80-4

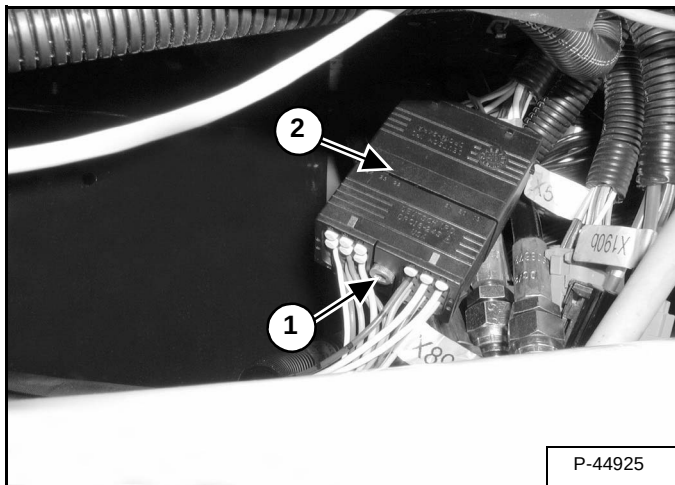


Loosen the screw (Item 1) and unplug the electrical connector (Item 2) [Figure 70-80-4].

Figure 70-80-5

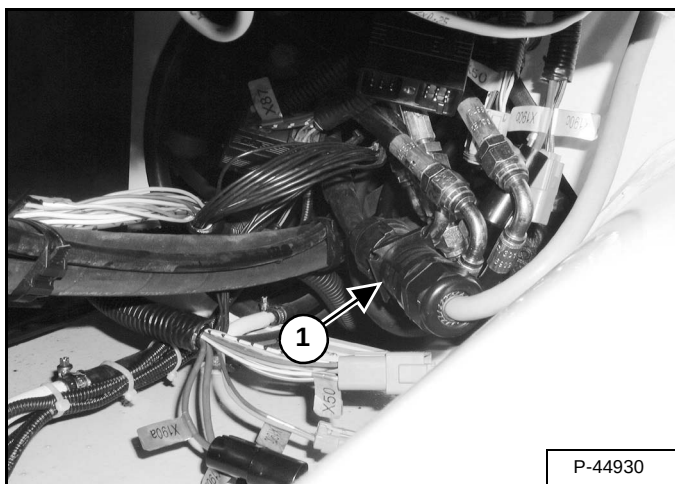


Unplug the electrical connector (Item 1) [Figure 70-80-5].

Figure 70-80-6

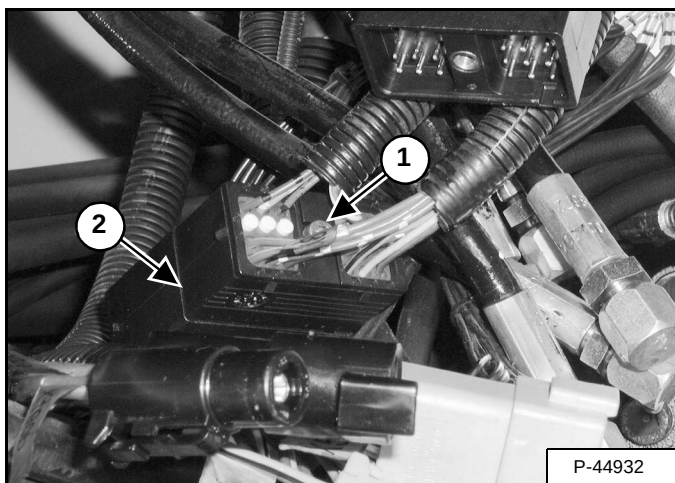

Loosen the screw (Item 1) and unplug the electrical connector (Item 2) [Figure 70-80-6].

Figure 70-80-7

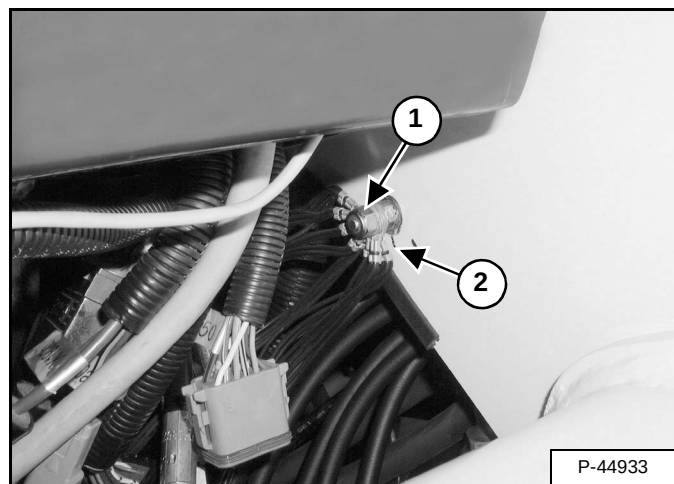


Remove the nut (Item 1) and ground wires (Item 2) [Figure 70-80-7].

ENGINE/HYDROSTAT ASSEMBLY (CONT'D)


Removal And Installation (Cont'd)

Figure 70-80-8

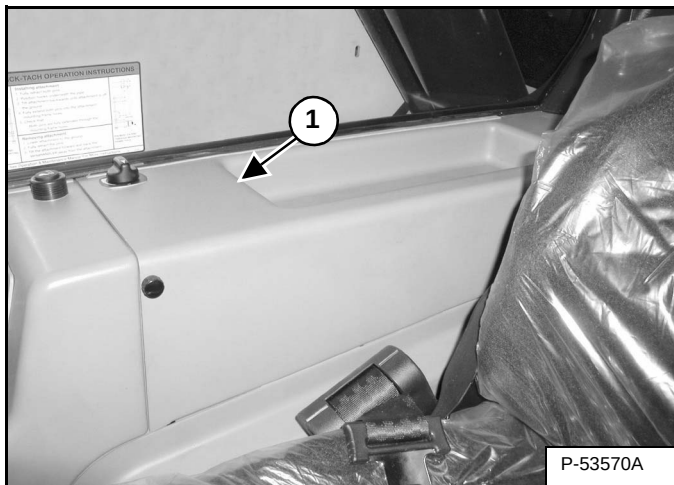


Remove the fuse box cover (Item 1) [Figure 70-80-8].

Figure 70-80-9

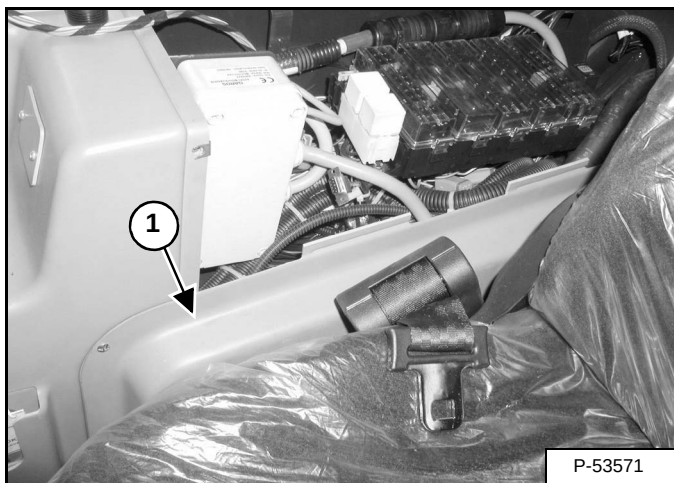


Remove the side cover (Item 1) [Figure 70-80-9].

Figure 70-80-10

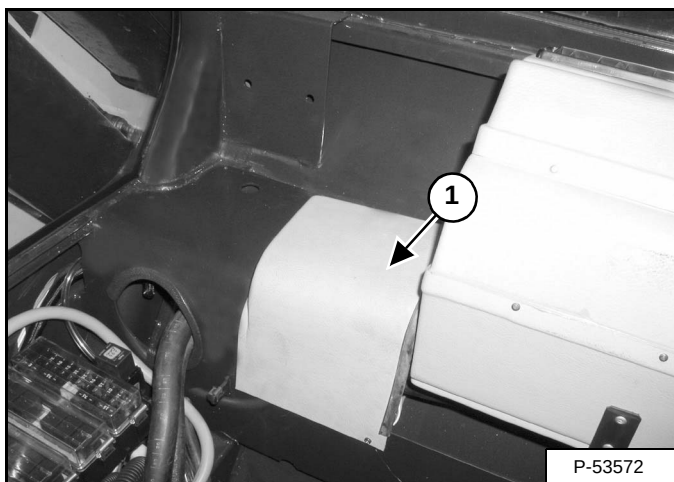

Remove the cover (Item 1) [Figure 70-80-10].

Figure 70-80-11

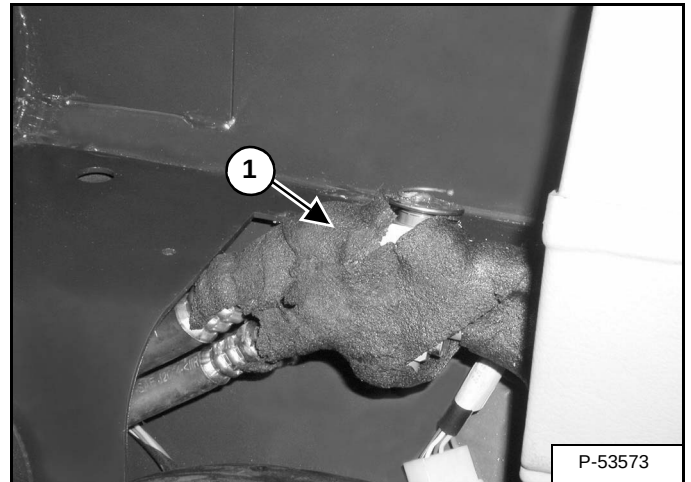


Temporarily remove the protective covering (Item 1) [Figure 70-80-11] from the A/C hoses and expansion valve.

ENGINE/HYDROSTAT ASSEMBLY (CONT'D)

Removal And Installation (Cont'd)


Figure 70-80-12

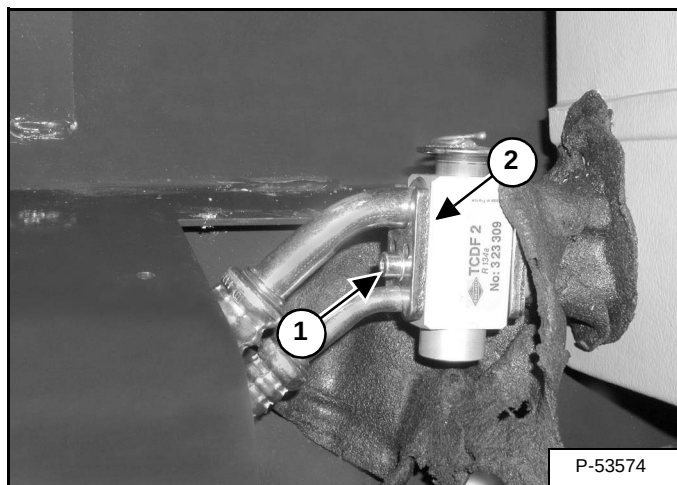

Remove the bolt (Item 1) and plate (Item 2) [Figure 70-80-12]. Remove the A/C hoses.


NOTE: Plug the A/C hoses to prevent contamination.

Figure 70-80-13

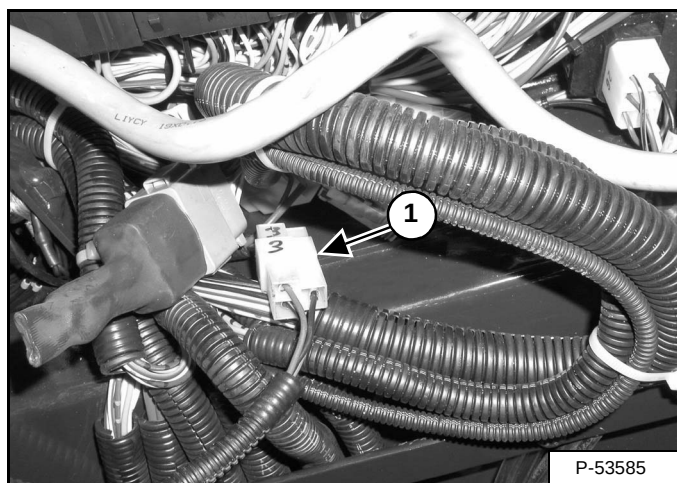


Unplug the connector (Item 1) [Figure 70-80-13] located under the fuse box.

Figure 70-80-14

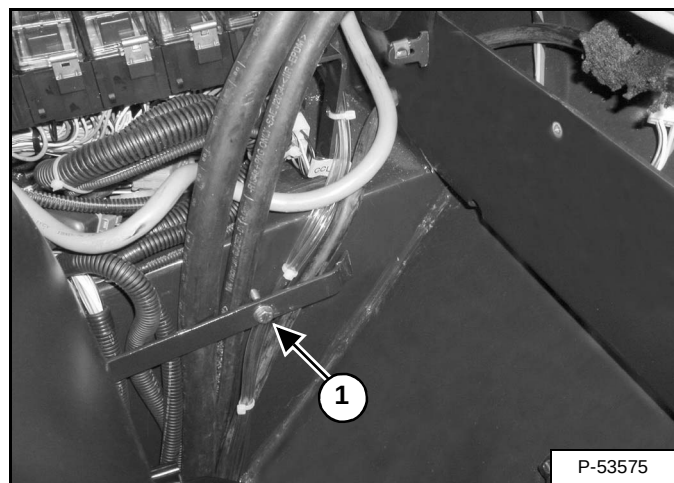

Loosen the mounting bracket bolt (Item 1) [Figure 70-80-14].

Figure 70-80-15

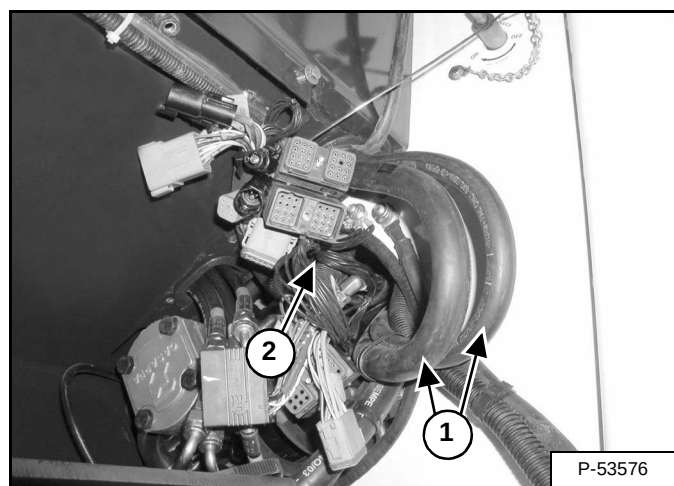


Remove the two A/C hoses (Item 1) and harness (Item 2) [Figure 70-80-15] completely from the rear corner of the cab.

ENGINE/HYDROSTAT ASSEMBLY (CONT'D)


Removal And Installation (Cont'd)

Figure 70-80-16

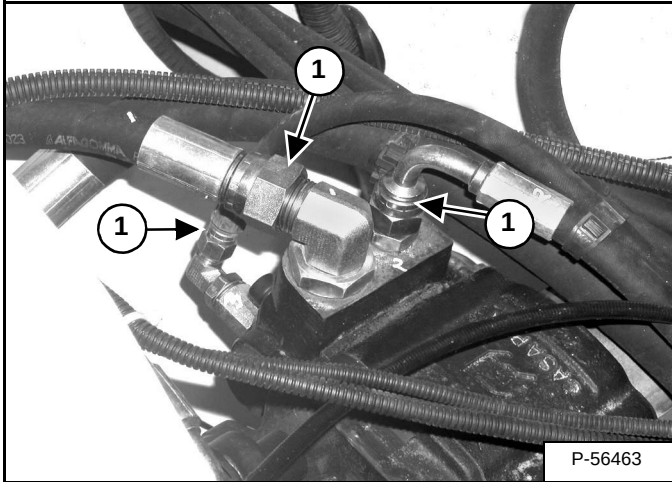

Remove the three hoses (Item 1) [Figure 70-80-16] from the backside of the pump.

Figure 70-80-17

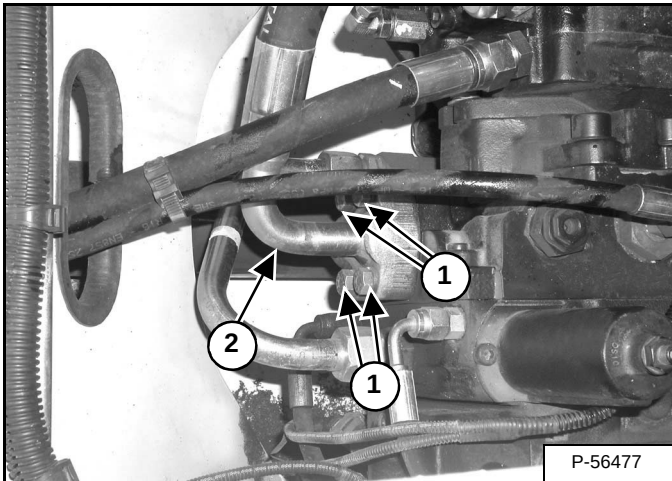


Remove the four bolts (Item 1) and remove the hose (Item 2) [Figure 70-80-17] from the hydrostatic pump.

WARNING

Hydraulic fluid escaping under pressure can have sufficient force to enter a person's body by penetrating the skin. This can cause serious injury and possible death if proper medical treatment by a physician familiar with this injury is not received immediately.


W-2145-0290

Figure 70-80-18

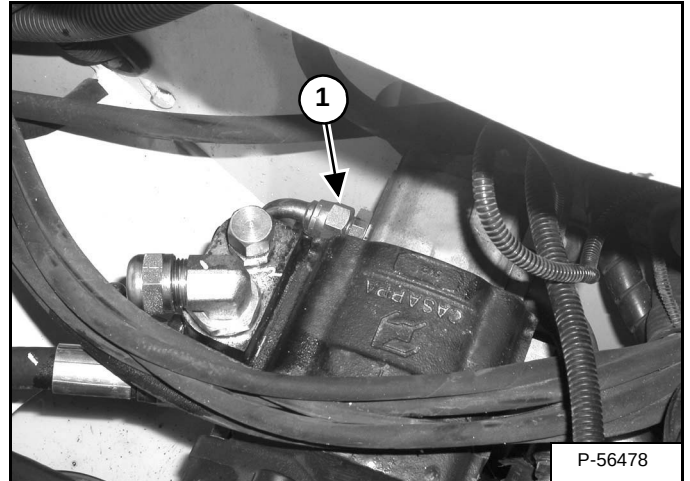

Remove the hose (Item 1) [Figure 70-80-18] from the backside of the pump.

Figure 70-80-19

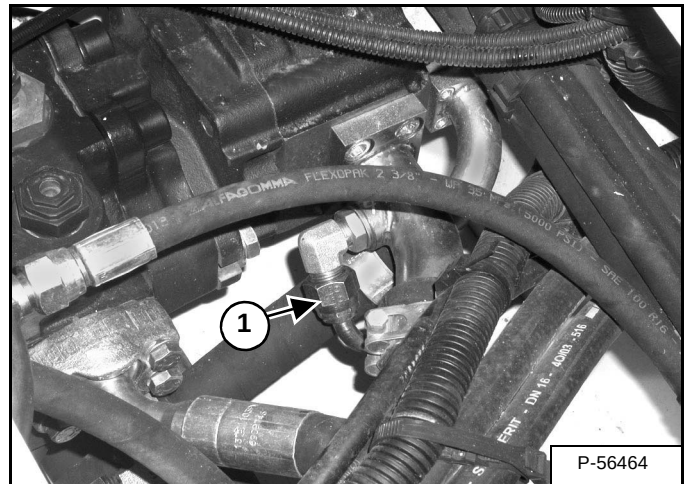

Remove the hose (Item 1) [Figure 70-80-19].

IMPORTANT


When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.

I-2003-0888

ENGINE/HYDROSTAT ASSEMBLY (CONT'D)


Removal And Installation (Cont'd)

Figure 70-80-20

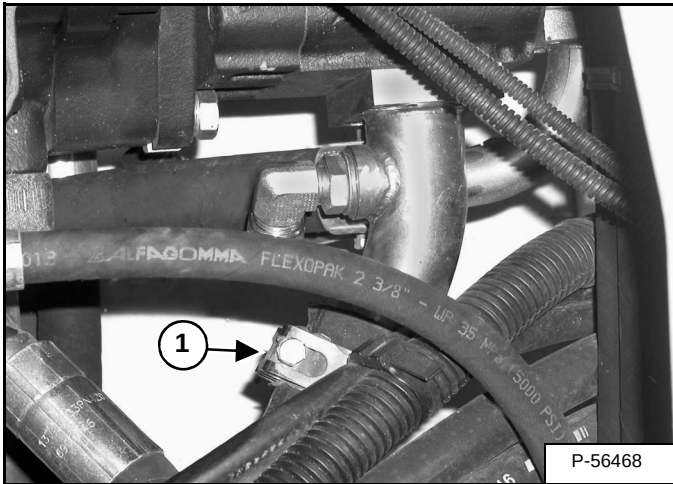

Loosen the hose clamp (Item 1) [Figure 70-80-20] and remove the hose.

Figure 70-80-21

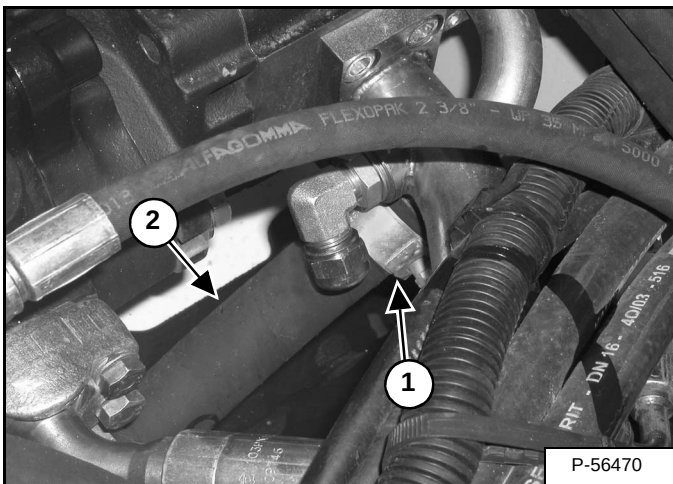


Loosen the hose clamp (Item 1) and remove the hose (Item 2) [Figure 70-80-21].

IMPORTANT

When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.


I-2003-0888

Figure 70-80-22

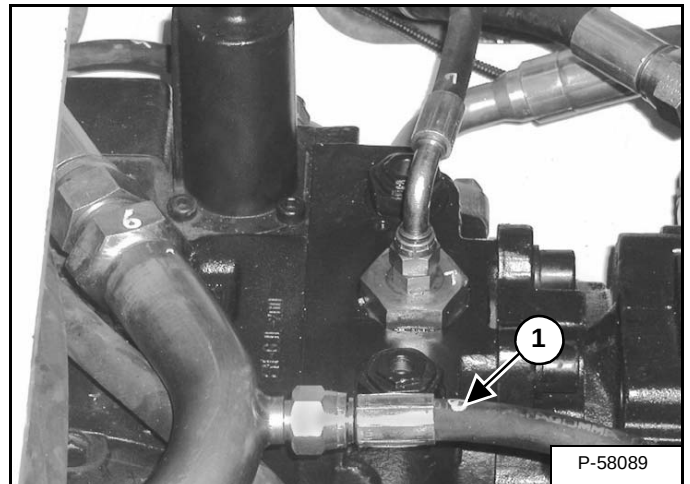

Remove the hose (Item 1) [Figure 70-80-22] from the hydrostatic pump.

Figure 70-80-23

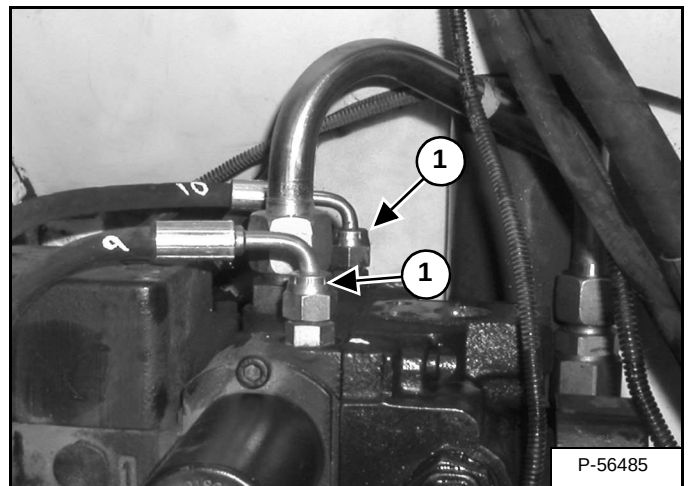


Remove the two hoses (Item 1) [Figure 70-80-23].

ENGINE/HYDROSTAT ASSEMBLY (CONT'D)

Removal And Installation (Cont'd)


Remove the four bolt flange hose (Item 1) [Figure 70-80-26] from the front of the pump.

Figure 70-80-24

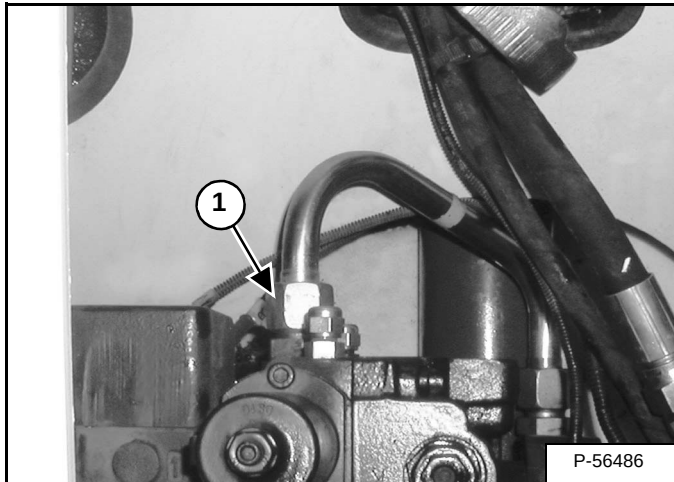


Remove the tubeline (Item 1) [Figure 70-80-24].

Figure 70-80-25

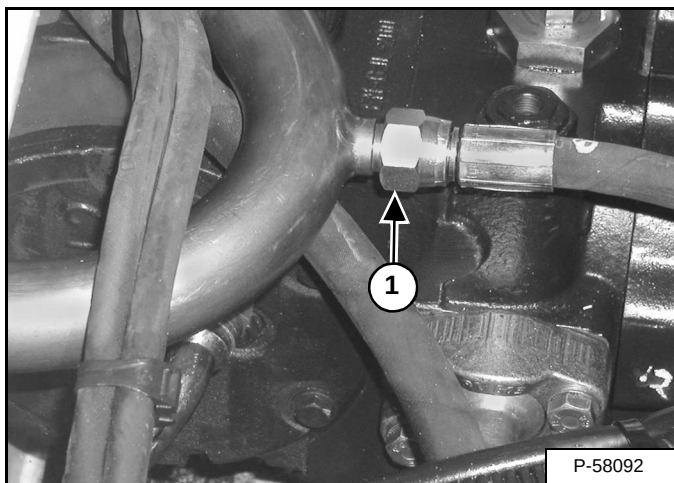

Remove the hose (Item 1) [Figure 70-80-25] from the tubeline.


Figure 70-80-26

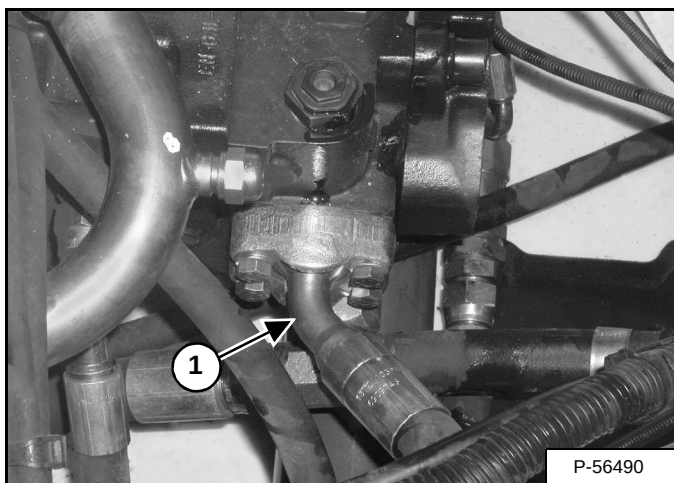

ENGINE/HYDROSTAT ASSEMBLY (CONT'D)


Removal And Installation (Cont'd)

Figure 70-80-27

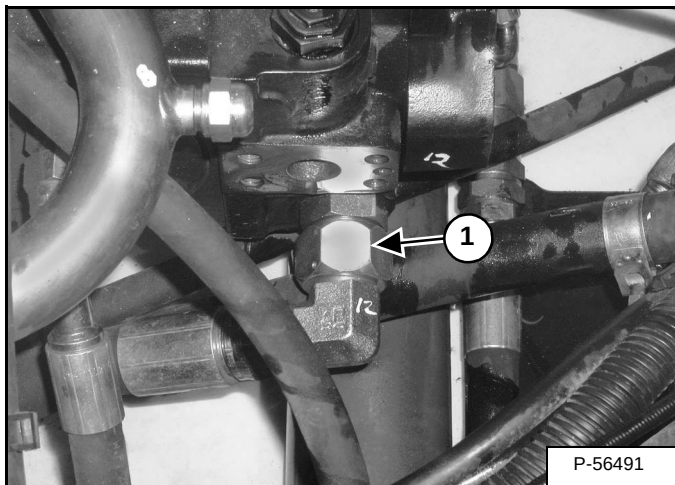


Remove the hose (Item 1) [Figure 70-80-27].

Figure 70-80-28

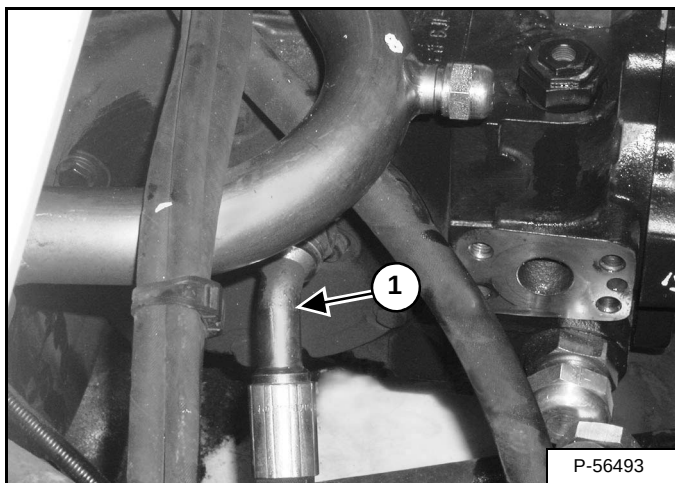


Remove the hose (Item 1) [Figure 70-80-28].

Figure 70-80-29

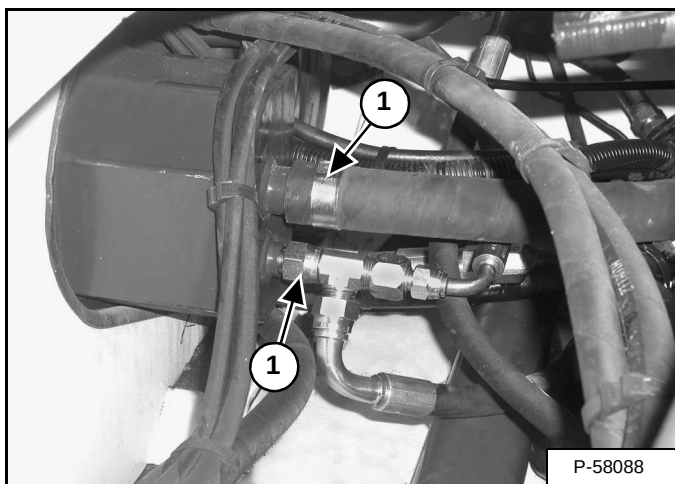

Remove the two hoses (Item 1) [Figure 70-80-29] from the hydraulic reservoir.

Figure 70-80-30

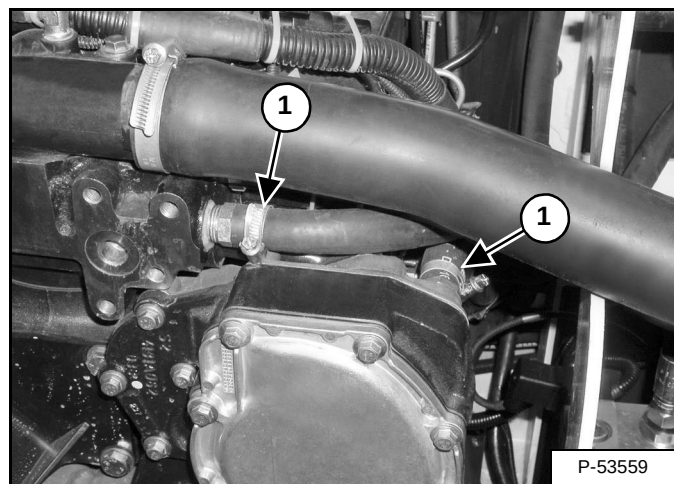


Remove the two heater hoses (Item 1) [Figure 70-80-30] from the engine.

ENGINE/HYDROSTAT ASSEMBLY (CONT'D)


Removal And Installation (Cont'd)

Figure 70-80-31

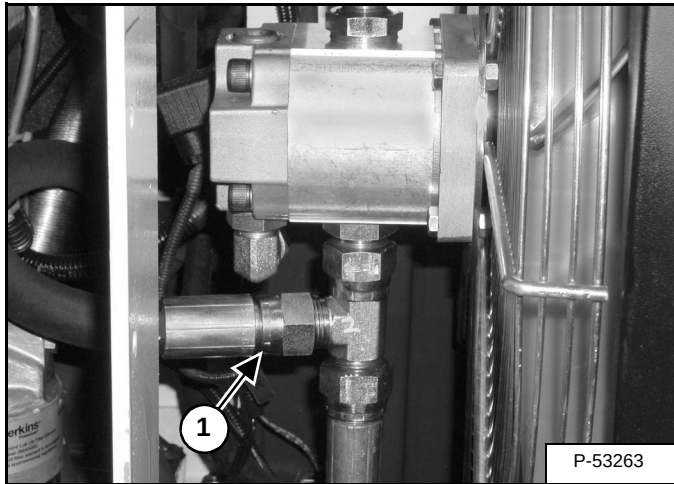


Remove the hose (Item 1) [Figure 70-80-31] from the fan motor.

Figure 70-80-32

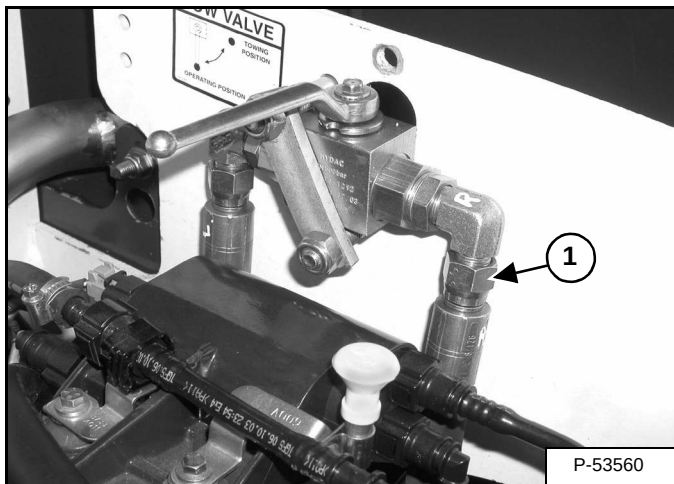


Remove the two hoses (Item 1) [Figure 70-80-32] from the tow valve (if equipped).

Figure 70-80-33

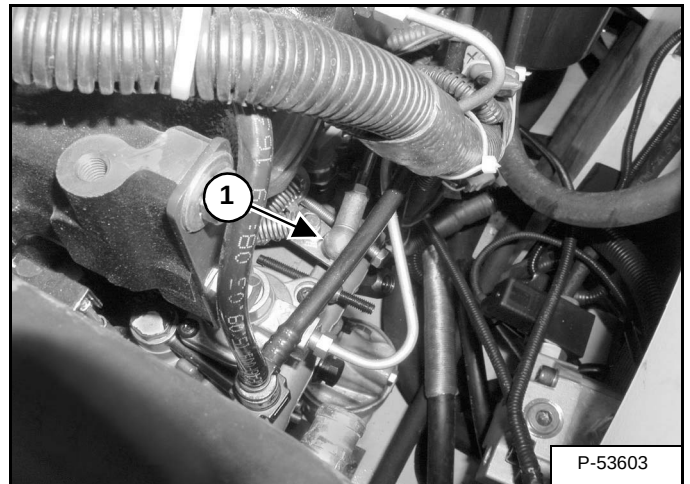

Remove the engine speed control cable (Item 1) [Figure 70-80-33].

Figure 70-80-34

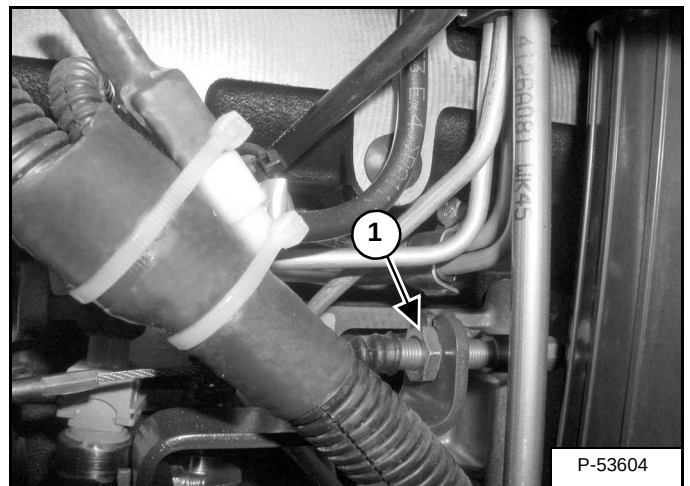


Remove the engine speed control cable (Item 1) [Figure 70-80-34] from the bracket.

ENGINE/HYDROSTAT ASSEMBLY (CONT'D)


Removal And Installation (Cont'd)

Figure 70-80-35

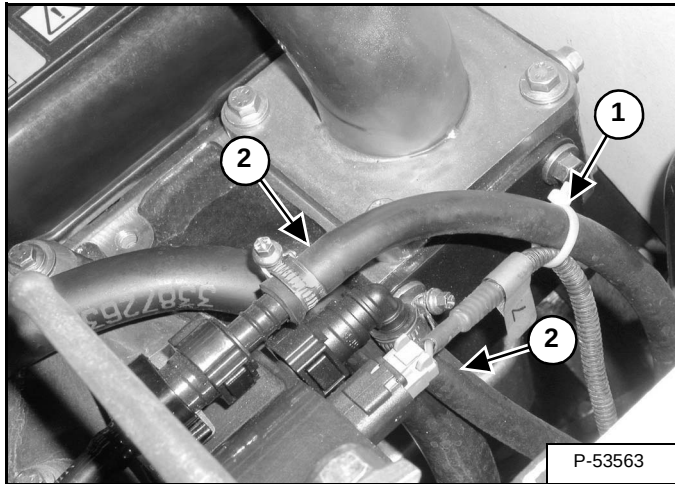


Cut the tie strap (Item 1) and remove the two fuel lines (Item 2) [Figure 70-80-35].

Figure 70-80-36

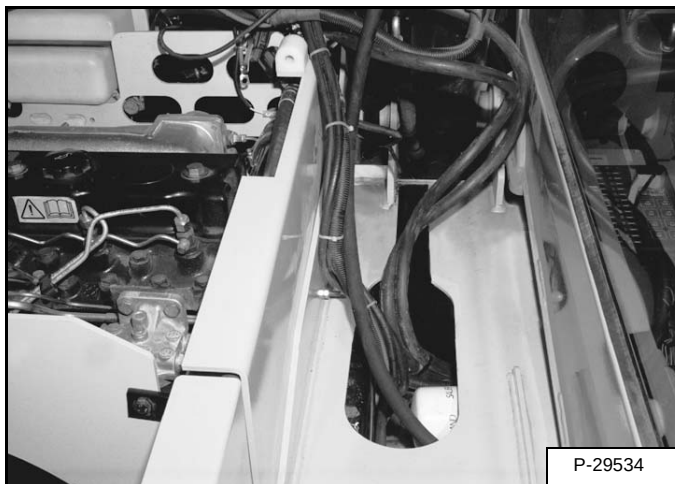

Remove the heater hoses, fuel lines and speed control cable from the engine compartment and route through the access hole [Figure 70-80-36].


Figure 70-80-37

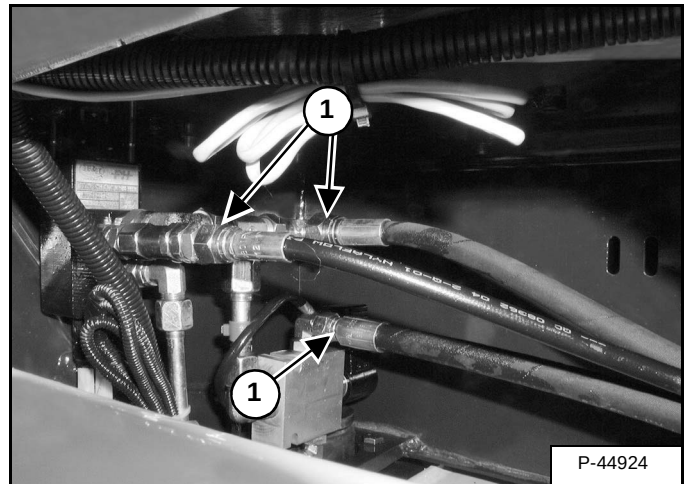

Remove the three hoses (Item 1) [Figure 70-80-37].

Remove any necessary nylon ties.

Figure 70-80-38

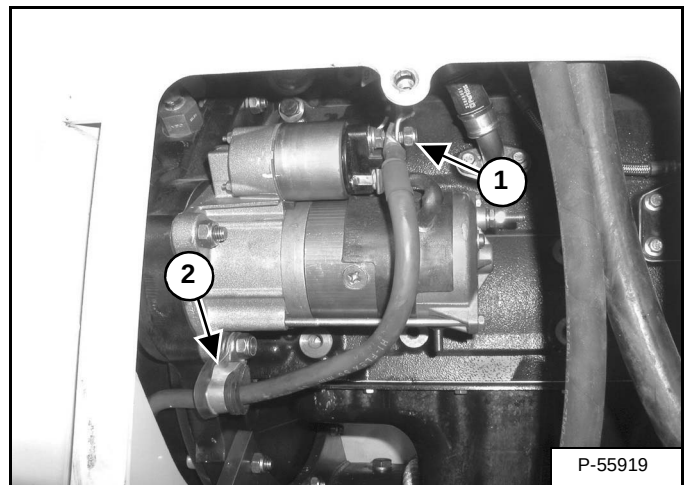


Remove nut (Item 1) and cable clamp (Item 2) [Figure 70-80-38].

ENGINE/HYDROSTAT ASSEMBLY (CONT'D)


Removal And Installation (Cont'd)

Figure 70-80-39

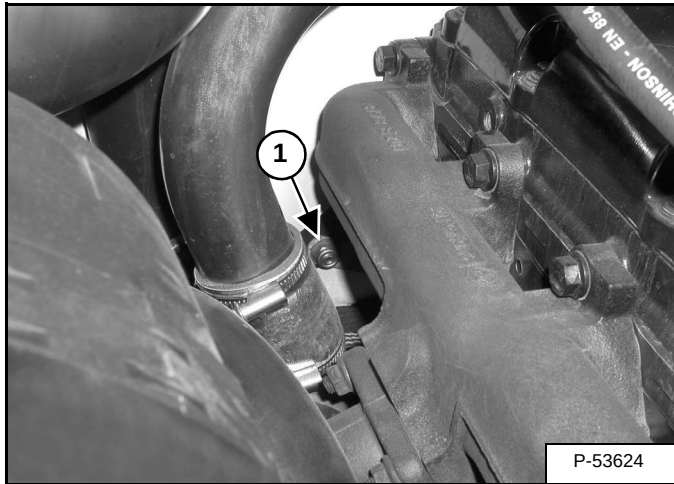


Route the ground strap mounting bolt (Item 1) [Figure 70-80-39].

Figure 70-80-40

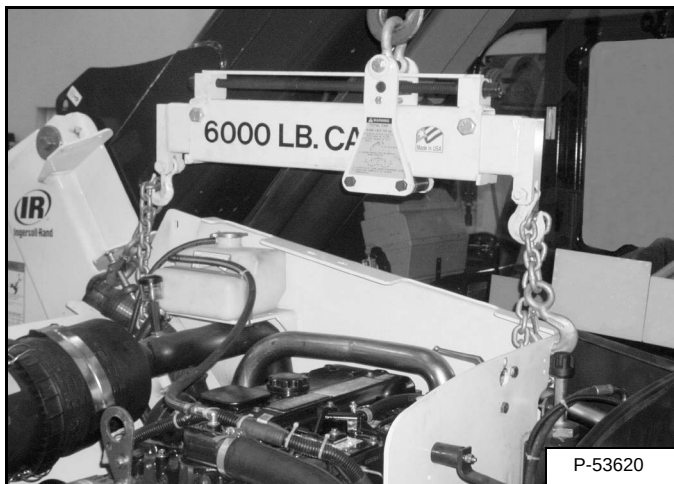

Install a chain hoist to lift and secure the engine assembly [Figure 70-80-40].

Figure 70-80-41

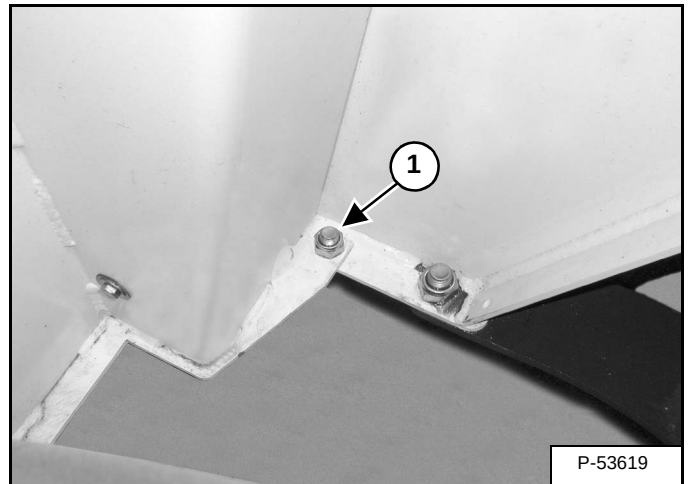

Remove the engine assembly mounting bolt (Item 1) [Figure 70-80-41] from the lower front.

ENGINE/HYDROSTAT ASSEMBLY (CONT'D)

Removal And Installation (Cont'd)

Figure 70-80-42

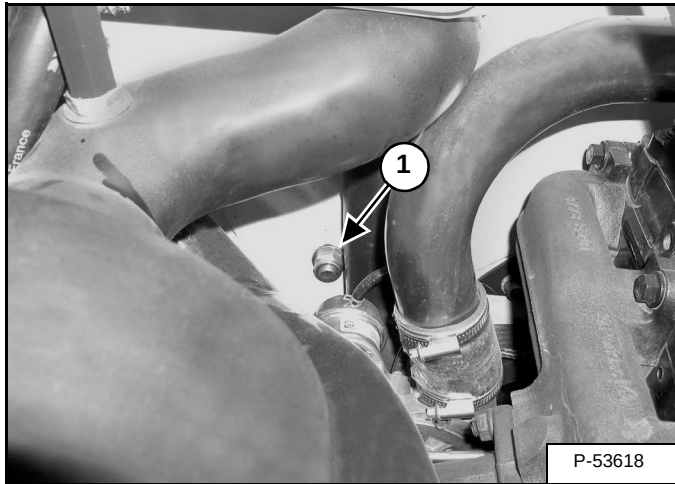


Figure 70-80-43


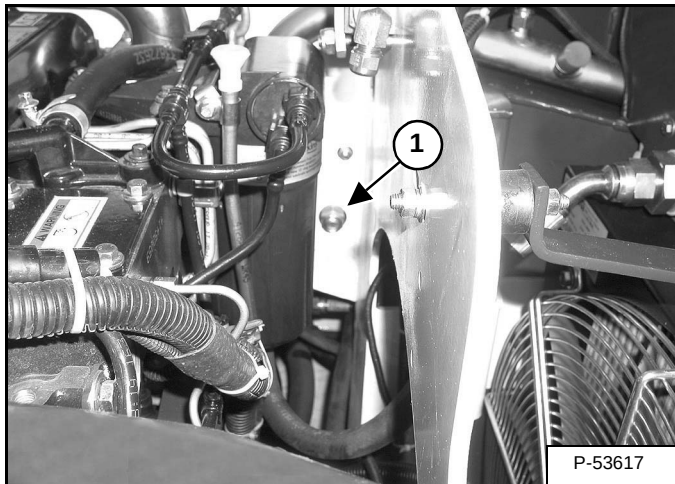


Figure 70-80-44



Remove the three engine assembly mounting bolts (Item 1) [Figure 70-80-42], [Figure 70-80-43] and [Figure 70-80-44].

Figure 70-80-45

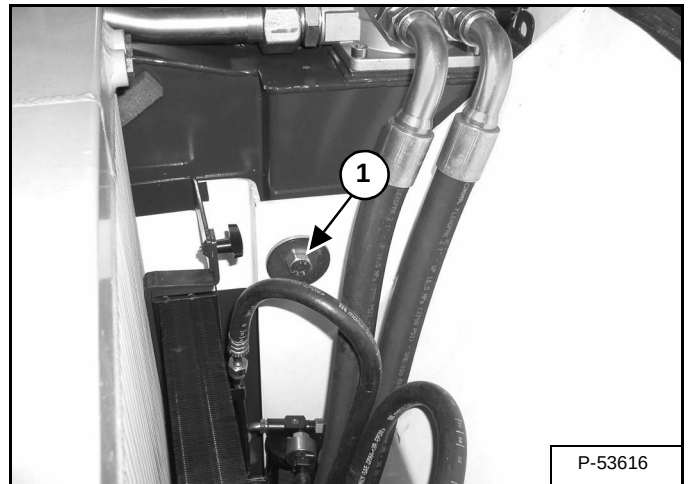

Lift the engine assembly up approximately one inch (25 mm) and remove the engine assembly from the machine [Figure 70-80-45].

FLYWHEEL AND HOUSING

Removal And Installation


Remove the engine/hydrostat assembly. (See page 70-80-1)

NOTE: Set the engine/hydrostat assembly on blocks, to allow access to remove the motor mount bolts.

Remove the hydrostatic pump. (See page 30-40-1)

Remove the starter. (See page 60-40-1)

Figure 70-90-1

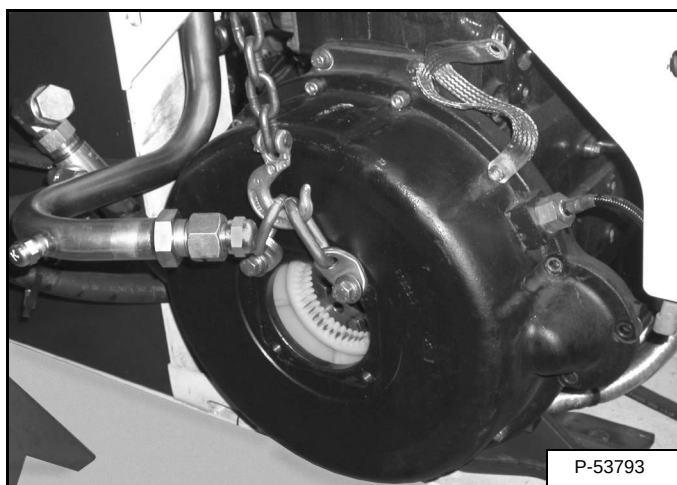

Install lifting brackets and hoist on the housing to lift and support [Figure 70-90-1].

Figure 70-90-2


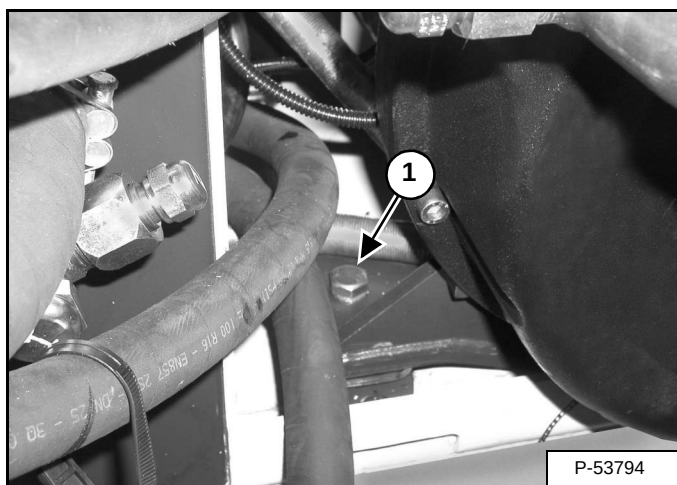


Figure 70-90-3

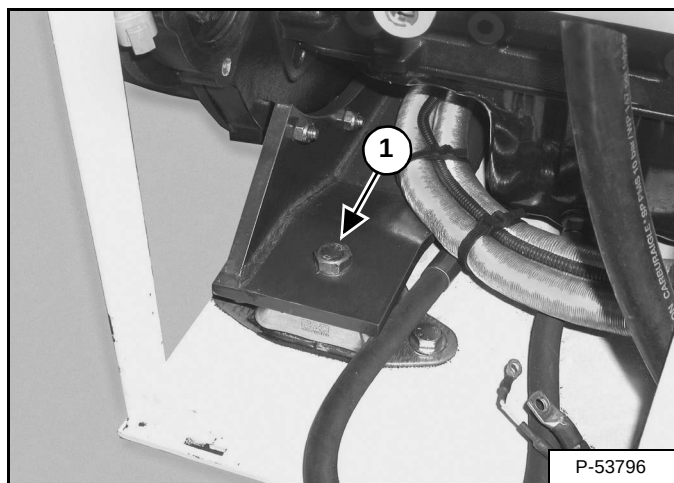

Remove both rear engine mounting bolts (Item 1) [Figure 70-90-2] & [Figure 70-90-3].

Installation: Tighten engine mounting bolts to 185-200 ft.-lbs. (250-271 Nm) torque.

Figure 70-90-4




Lifting from the housing assembly, raise the engine slightly and place support blocks under the oil pan [Figure 70-90-4].

Lower the engine assembly on the support blocks.

FLYWHEEL AND HOUSING (CONT'D)

Removal And Installation (Cont'd)


Figure 70-90-5

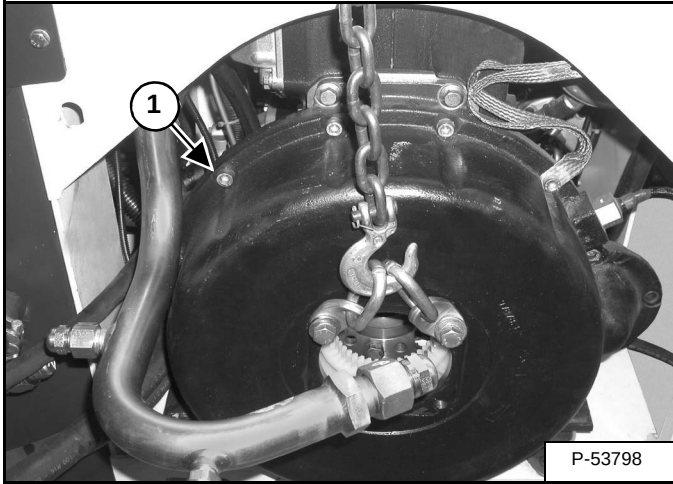

Loosen and remove the ten flywheel housing mount bolts (Item 1) [Figure 70-90-5].


Installation: Tighten to 40-45 ft.-lbs. (54-61 Nm) torque.

Figure 70-90-6

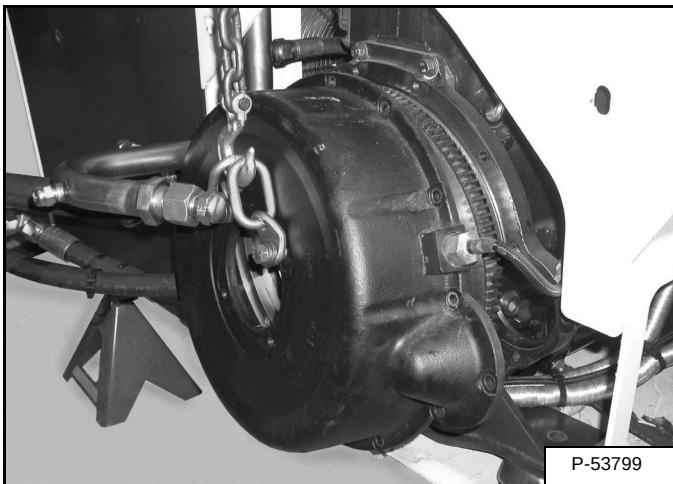

Remove the flywheel housing from the engine [Figure 70-90-6].


Figure 70-90-7

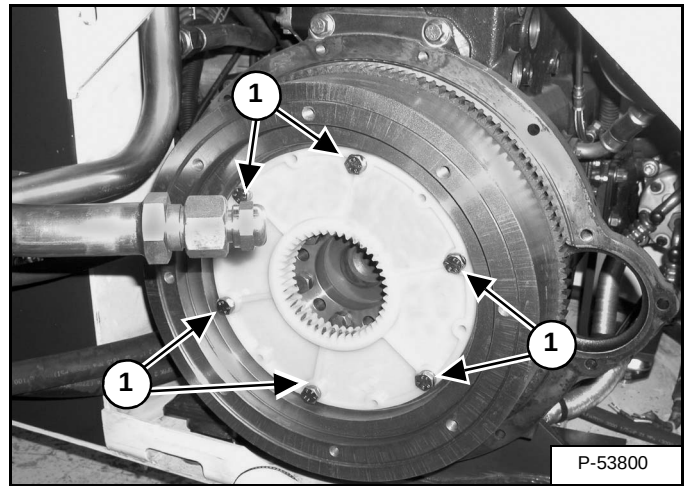

Remove the six coupler mounting bolts (Item 1) [Figure 70-90-7]. Remove the coupler.

Installation: Tighten the bolts to 40-45 ft.-lbs. (54-61 Nm) torque.

Figure 70-90-8

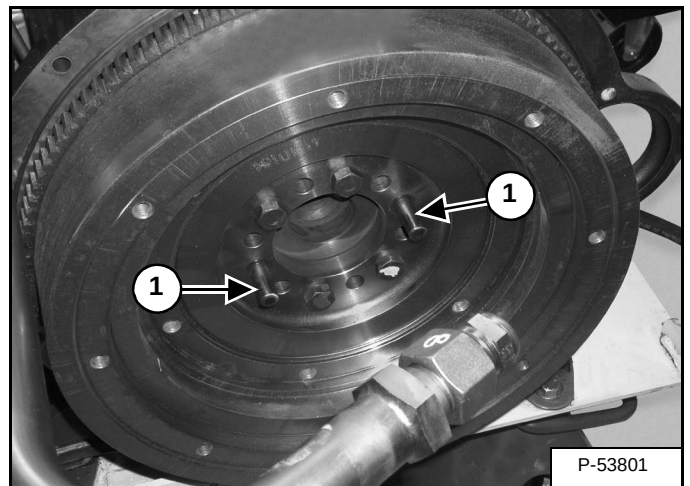


Remove two of the flywheel mount bolts and install two guide studs (Item 1) [Figure 70-90-8] in the flywheel to prevent the fly wheel from falling.

FLYWHEEL AND HOUSING (CONT'D)

Removal And Installation (Cont'd)

Figure 70-90-9

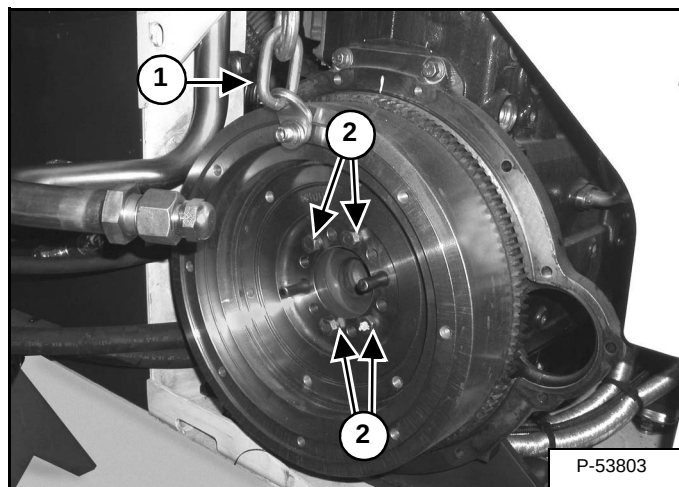


Install a chain hoist (Item 1) [Figure 70-90-9].

Remove the remainder of the bolts (Item 2) [Figure 70-90-9]. Remove the flywheel by sliding outward over the guide studs.

Installation: Tighten the flywheel bolts to 77 ft.-lbs. (105 Nm) torque.

Figure 70-90-10

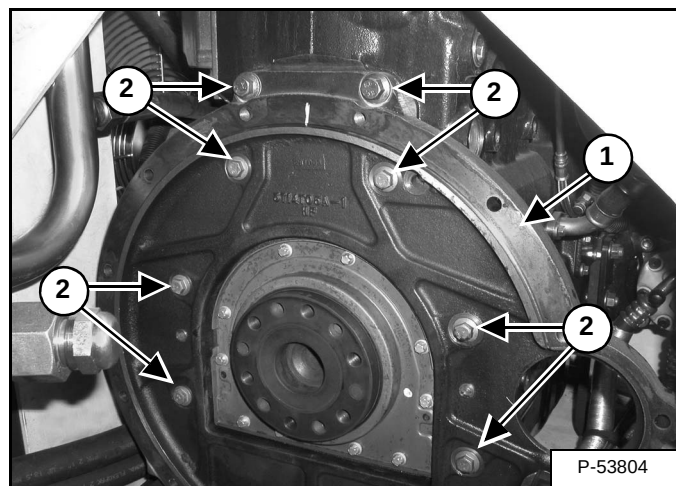

If removing the backing plate (Item 1) is required, loosen and remove the eight mounting bolts (Item 2) [Figure 70-90-10].


Installation: Tighten the bolts to 52 ft.-lbs. (70 Nm) torque.

Check the flywheel and ring gear for wear or damage. Replace as needed.

FLYWHEEL AND HOUSING (CONT'D)

Removal And Installation (Cont'd)


Figure 70-90-11

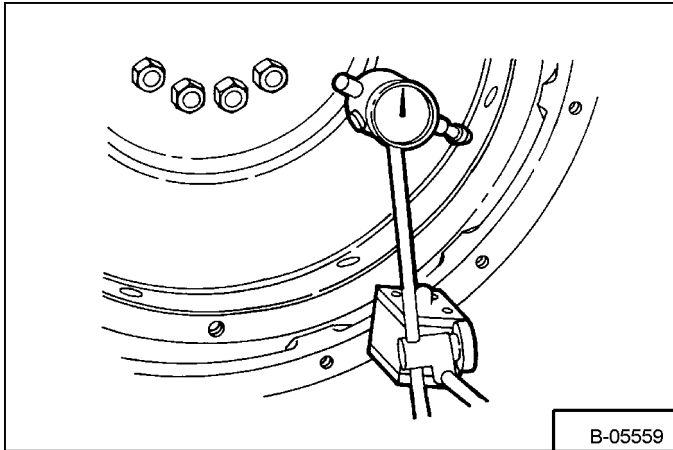

Install a dial indicator to check the flywheel run out [Figure 70-90-11].

Flywheel run out must be less than 0.012 inch (0,30 mm).

Figure 70-90-12

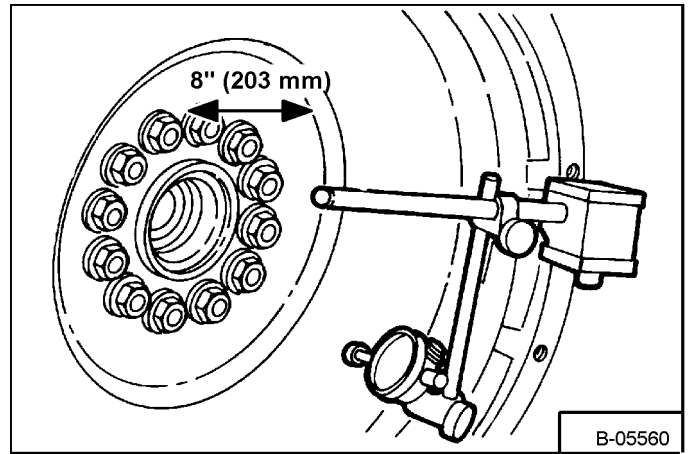

Check the alignment of the flywheel face [Figure 70-90-12].

The misalignment must not be more than 0.001 inch (0,03 mm) total indicator reading for every 1.0 inch (25 mm) of the flywheel radius from the crankshaft axis to the dial gauge plunger.

Example: The misalignment must not be greater than 0.008 inch (0,203 mm) at 8 inches. (203 mm) from the centerline of the crankshaft towards the outside of the flywheel.

During this check keep the crankshaft pressed toward the front so crankshaft end play will not affect the reading.

Ring Gear Removal

Before the ring gear is removed note the position of the chamfer on the teeth.

Heat the ring gear enough to expand it and hit it with a hammer evenly to remove it.

Be careful not to damage the flywheel during this operation.

Ring Gear Installation

The ring gear is a heat expansion fit on the flywheel.

Do not heat the ring gear to a temperature greater than 480° F (250° C) make sure the ring gear chamfer is in the correct position.

RECONDITIONING THE ENGINE

Turbo Charger Troubleshooting

The chart below is given to assist in the correct diagnosis of turbocharger faults.

If the inside of the intake manifold is wet, check that there is not a fuel leak from the starting aid.

PROBLEM	CAUSE
Not enough power	1, 4, 5, 6, 7, 8, 9, 10, 11, 18, 20, 21, 22, 25, 26, 27, 28
Black Smoke	1, 4, 5, 6, 7, 8, 9, 10, 11, 18, 20, 21, 22, 25, 26, 27, 28
Blue Smoke	1, 2, 4, 6, 8, 9, 17, 19, 20, 21, 22, 30, 31, 32
High Lubricating Oil Consumption	2, 8, 15, 17, 19, 20, 28, 29, 31, 32
Too Much Lubricating Oil At Turbine End	2, 7, 8, 17, 19, 20, 22, 28, 30, 31, 32
Too Much Lubricating Oil At Compressor End	1, 2, 4, 5, 6, 8, 19, 20, 21, 28, 31, 32
Not Enough Lubrication	8, 12, 14, 15, 16, 23, 24, 29, 32, 33, 34, 35
Lubricating Oil In The Exhaust Manifold	2, 7, 17, 18, 19, 20, 22, 28, 31, 32
Inside The Induction Manifold Wet	1, 2, 3, 4, 5, 6, 8, 10, 11, 17, 18, 19, 20, 21, 28, 32, 36, 37
Damaged Compressor Impeller	3, 4, 6, 8, 12, 15, 16, 20, 21, 23, 24, 29, 32, 33, 35, 36
Damaged Turbine Rotor	7, 8, 12, 13, 14, 15, 16, 18, 20, 22, 23, 24, 25, 27, 29, 29, 32, 33, 34, 35
Rotating Assembly Does Not Turn Freely	3, 6, 7, 8, 12, 13, 14, 15, 16, 18, 20, 21, 22, 23, 24, 29, 32, 33, 34, 35
Worn Bearings, Bearing Bores, Journals	6, 7, 8, 12, 13, 14, 15, 16, 23, 24, 29, 33, 34, 35
Noise From Turbocharger	1, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 20, 21, 22, 23, 24, 29, 32, 33, 34, 35
Sludge or Carbon Deposit In Bearing Housing	2, 11, 13, 14, 15, 17, 18, 24, 29, 33, 34, 35

KEY TO CORRECT THE CAUSE	
1. Air filter element dirty.	17. Restricted lubricating oil drain pipe.
2. Restricted crankcase breather.	18. Turbine housing damage or restricted.
3. Air filter element missing, leaking or not sealing correctly. Loose connection to turbocharger.	19. Leakage from turbocharger seals.
4. Internal distortion or restriction in pipe from air filter to turbocharger.	20. Worn turbocharger bearings.
5. Damaged/restricted crossover pipe, turbocharger to induction manifold.	21. Excessive dirt in turbocharger housing.
6. Restriction between air filter and turbocharger.	22. Excessive carbon behind turbine rotor.
7. Restriction in exhaust system.	23. Engine speed raised too rapidly at initial start.
8. Turbocharger loose or clamps/setscrews loose.	24. Insufficient engine idle period.
9. Induction manifold cracked or loose, flanges distorted.	25. Faulty fuel injection pump.
10. Exhaust manifold cracked or loose.	26. Worn or damaged fuel injectors.
11. Restricted exhaust system.	27. Valves burned.
12. Delay of lubricating oil to turbocharger at engine start.	28. Worn piston rings. flanges distorted.
13. Insufficient lubrication.	29. Lubricating oil leakage from supply pipe.
14. Dirty lubricating oil.	30. Excessive starting fluid (on initial engine start).
15. Incorrect lubricating oil.	31. Excessive engine idle period.
16. Restricted lubricating oil supply pipe.	32. Restriction in turbocharger bearing housing.
	33. Restriction in lubricating oil filter.
	34. Engine stopped too soon from high load.
	35. Insufficient lubricating oil.
	36. Fuel leakage from fuelled starting aid.
	37. Crack in back plate of compressor.

RECONDITIONING THE ENGINE (CONT'D)


Turbo Charger Description

WARNING

Turbochargers, operate at high speed and high temperatures. Keep fingers, tools and other objects away from the inlet and outlet ports. Avoid contact with hot surfaces.

W-2257-1196

Figure 70-100-1

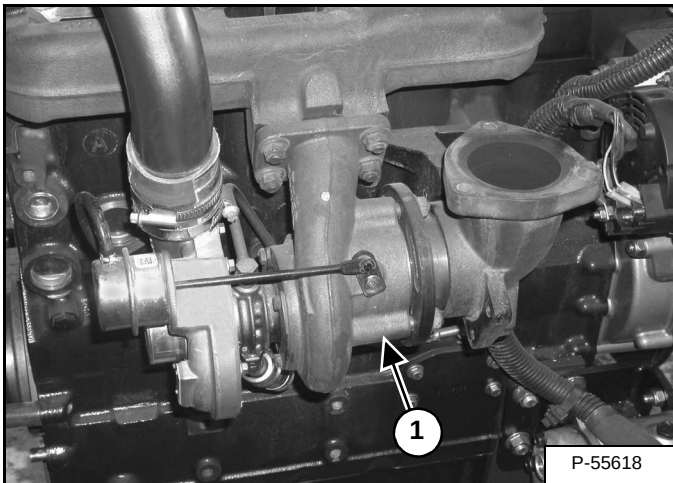


The turbocharger (Item 1) [Figure 70-100-1] is placed between the exhaust and intake manifolds. It is driven by hot exhaust gases and supplies air at more than atmospheric pressure to the intake. It is lubricated by oil from the main gallery.

The oil flows from the filter adapter through the bearing housing and returns to the engine block.

The turbocharger should only be serviced by an authorized dealer or repair shop.


Turbo Charger Removal And Installation

Figure 70-100-2

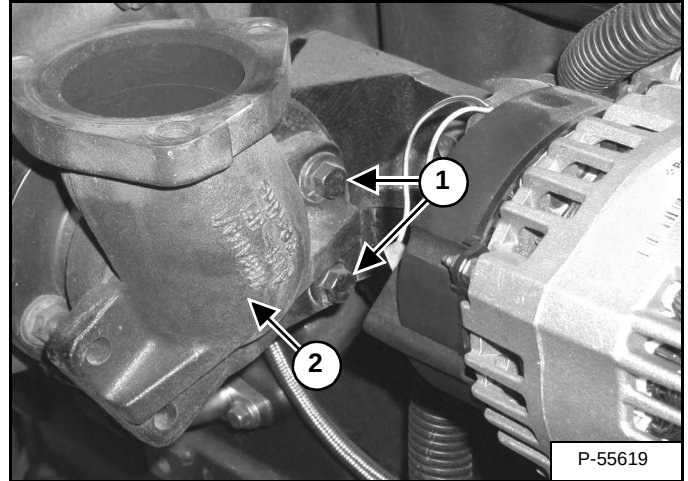

Remove the two bolts (Item 1) and remove the extension tube (Item 2) [Figure 70-100-2].

Figure 70-100-3

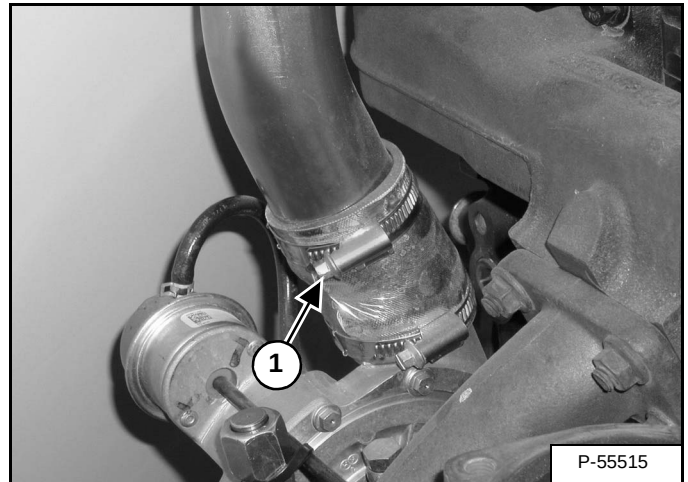


Loosen the intake tube clamp (Item 1) [Figure 70-100-3].

RECONDITIONING THE ENGINE (CONT'D)


Turbo Charger Removal And Installation (Cont'd)

Figure 70-100-4

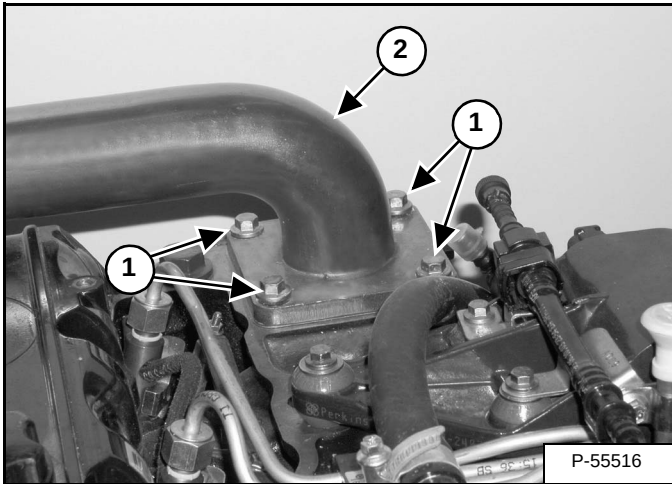

Remove the four bolts (Item 1) and remove the intake tube (Item 2) [Figure 70-100-4].


Figure 70-100-5

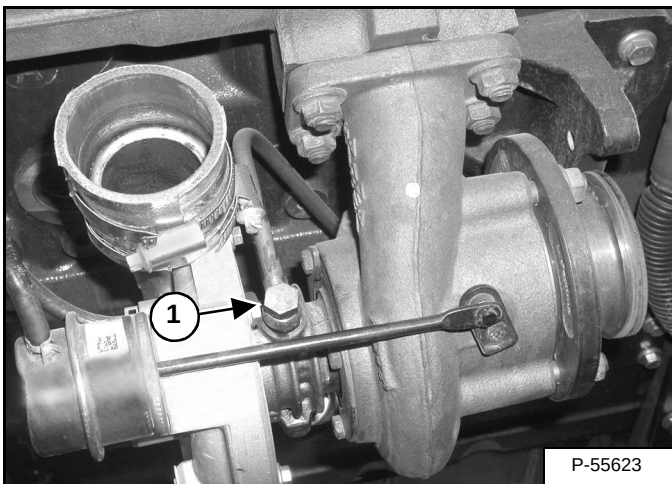

Disconnect the oil supply tubeline (Item 1) [Figure 70-100-5].


Installation: Fill the bearing housing with clean oil through the oil supply port. Tighten banjo fitting to 16 ft.-lbs. (22 Nm) torque.

Figure 70-100-6

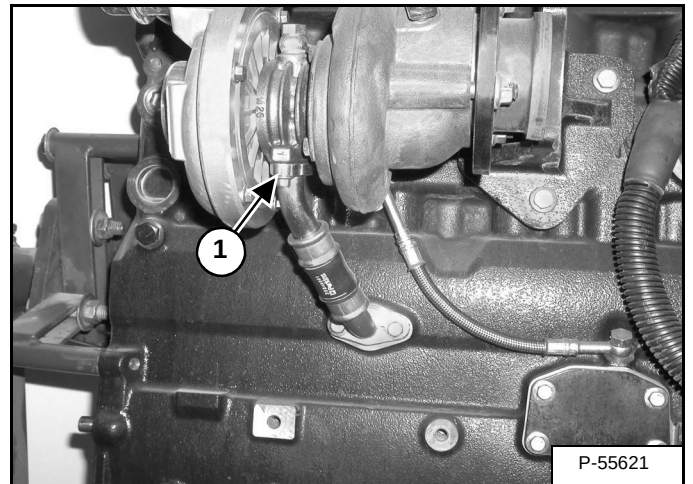

Remove the oil return line (Item 1) [Figure 70-100-6].

Figure 70-100-7

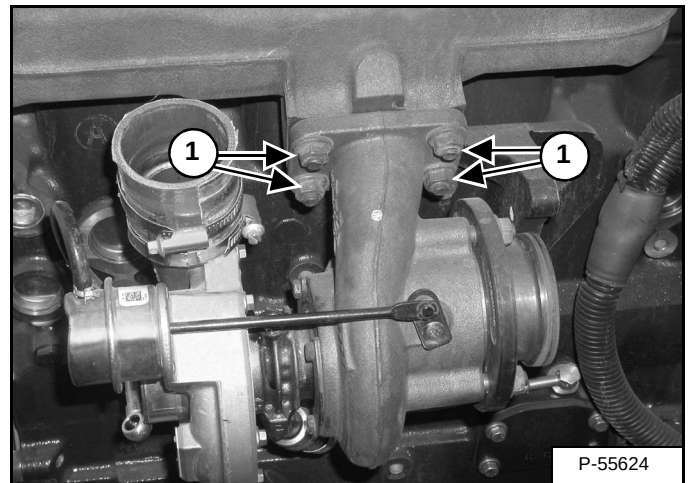

Remove the four nuts (Item 1) [Figure 70-100-7] for the turbocharger to exhaust manifold flange.

Installation: Apply anti-seize compound to the mounting studs. Tighten the nuts to 33 ft.-lbs. (44 Nm) torque.

Remove the turbocharger and gasket from the exhaust manifold.

The turbocharger must only be serviced by an authorized repair shop.


Before starting the engine, disconnect the electrical stop control. Crank the engine until oil pressure is obtained. Stop cranking and reconnect the stop control.

RECONDITIONING THE ENGINE (CONT'D)

Exhaust Manifold Removal And Installation

Remove the turbocharger. (See page 70-100-2)


Figure 70-100-8

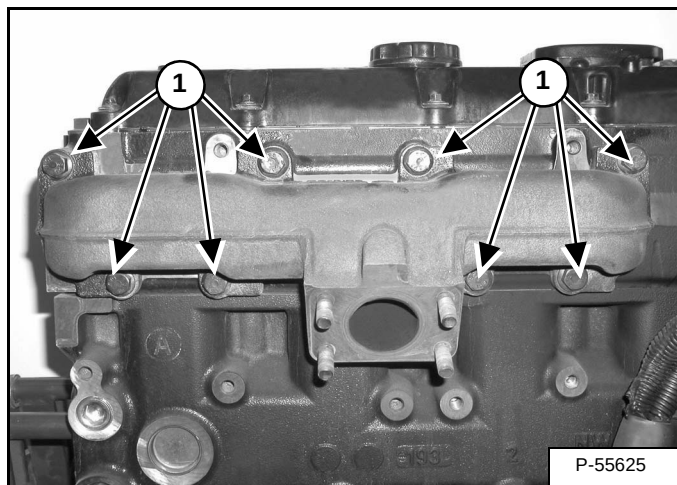

Remove the eight mount bolts (Item 1) [Figure 70-100-8].

Remove the exhaust manifold and gasket.


Figure 70-100-9

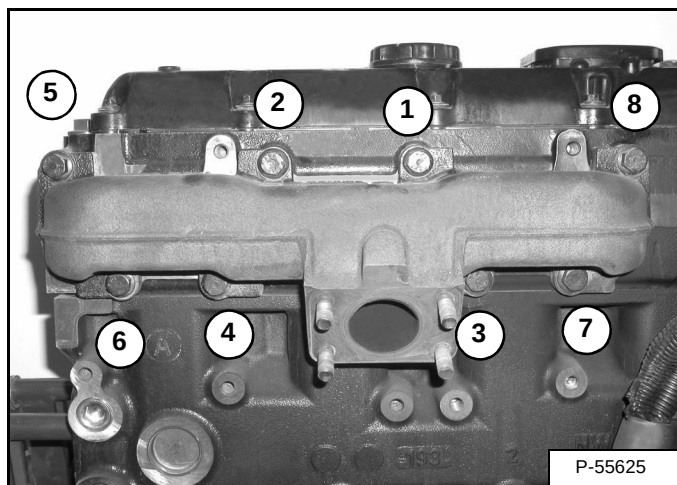

Installation: Tighten the bolts in the sequence shown [Figure 70-100-9] to 24 ft.-lbs. (33 Nm) torque.

Fuel Injector Cover Removal And Installation


Figure 70-100-10

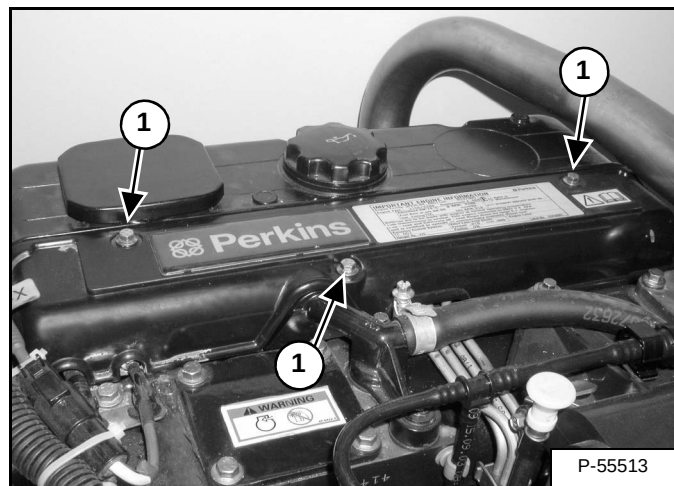

Remove the three bolts (Item 1) [Figure 70-100-10].

Installation: Tighten the bolts to 7 ft.-lbs. (9 Nm) torque.

Figure 70-100-11

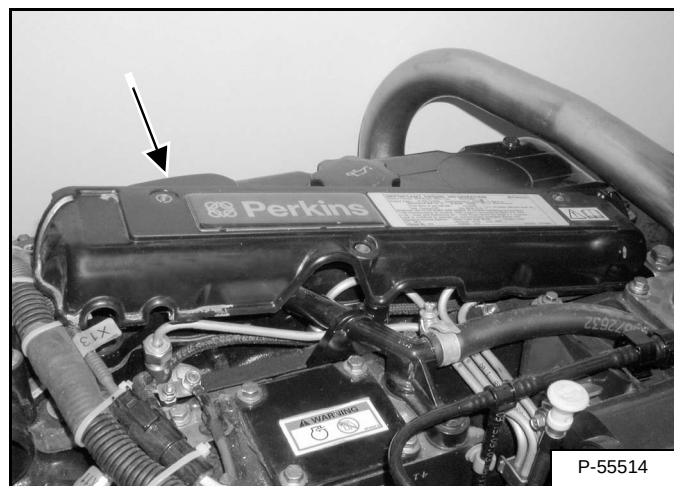


Remove the cover [Figure 70-100-11].

RECONDITIONING THE ENGINE (CONT'D)

Rocker Cover Removal And Installation


Remove the fuel injector cover. (See page 70-100-4)

Figure 70-100-12

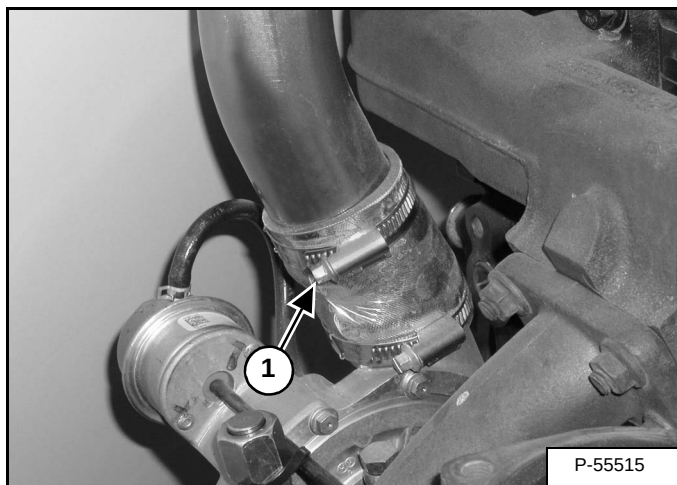


Loosen the intake tube clamp (Item 1) [Figure 70-100-12].

Figure 70-100-13

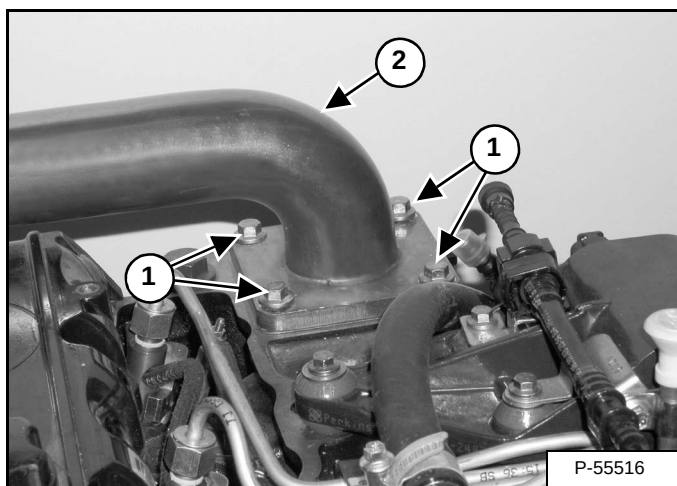


Remove the four bolts (Item 1) and remove the intake tube (Item 2) [Figure 70-100-13].

Figure 70-100-14

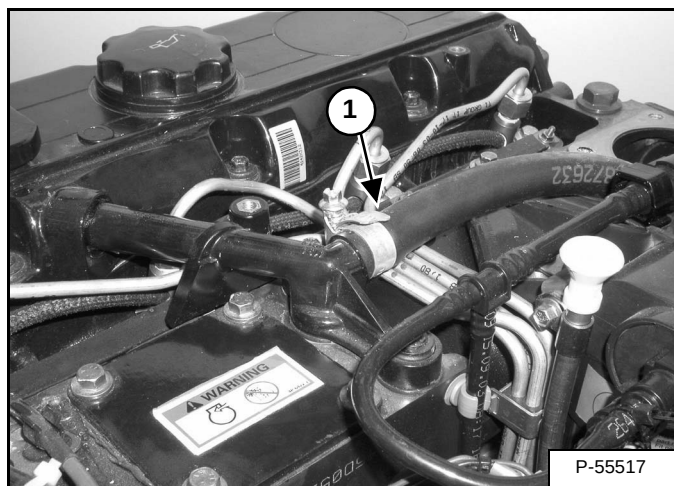

Remove the breather hose (Item 1) [Figure 70-100-14].

Figure 70-100-15

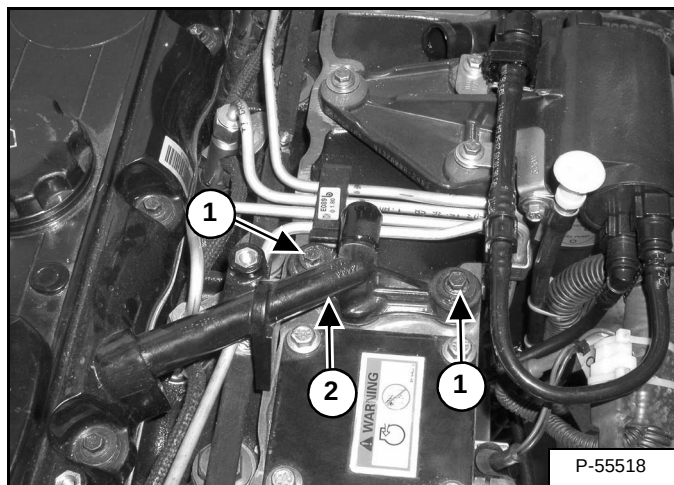


Remove the two bolts (Item 1) and remove the breather fitting (Item 2) [Figure 70-100-15].

RECONDITIONING THE ENGINE (CONT'D)


Rocker Cover Removal And Installation (Cont'd)

Figure 70-100-16

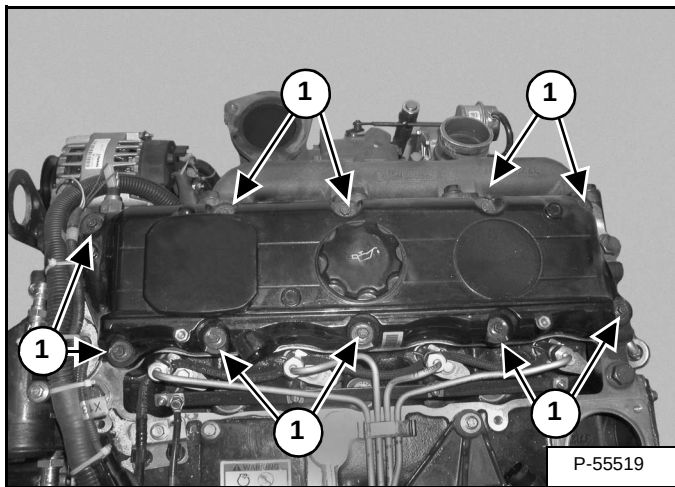

Remove the ten mount bolts (Item 1) [Figure 70-100-16].

Figure 70-100-17

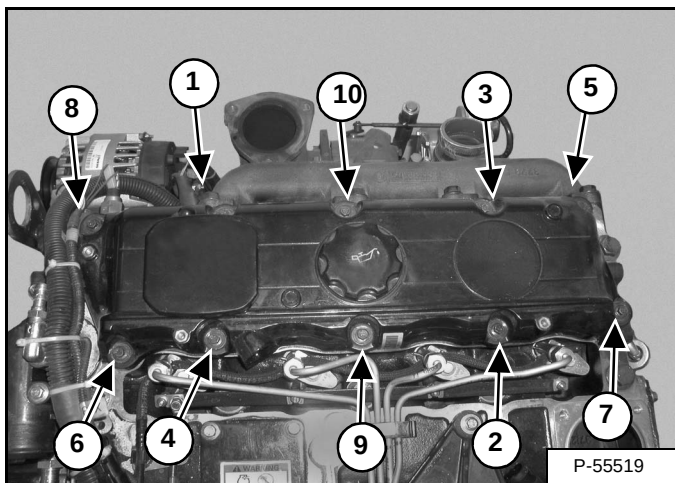

Installation: Tighten the bolts in the sequence shown [Figure 70-100-17] to 7 ft.-lbs. (9 Nm) torque.

Cylinder Head Removal

Remove the turbo charger. (See page 70-100-2)

Remove the exhaust manifold. (See page 70-100-4)


Remove the alternator. (See page 60-30-1)

Remove the fuel lift pump. (See page 70-70-10)

Remove the fuel injectors. (See page 70-70-7)

Remove the glow plugs. (See page 70-70-12)


Figure 70-100-18

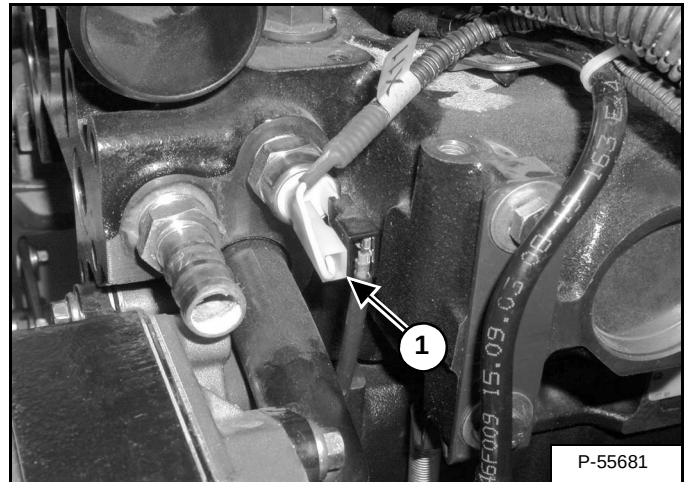

Unplug the engine cooling temperature sensor (Item 1) [Figure 70-100-18].

NOTE: Mark wires for correct installation.

Figure 70-100-19

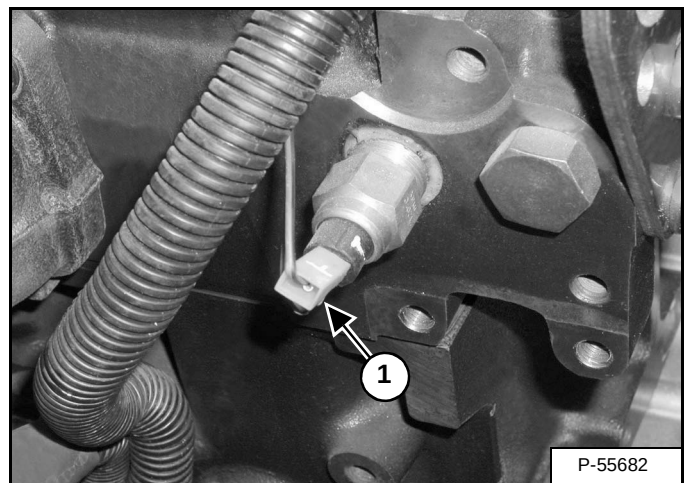


Unplug the intake manifold pressure sensor (Item 1) [Figure 70-100-19].

Reposition the harness.

RECONDITIONING THE ENGINE (CONT'D)


Cylinder Head Removal (Cont'd)

Figure 70-100-20

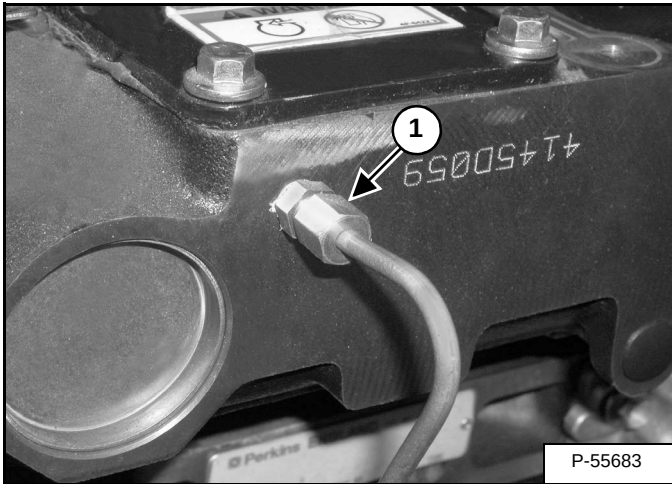

Remove the tubeline (Item 1) [Figure 70-100-20].

Figure 70-100-21

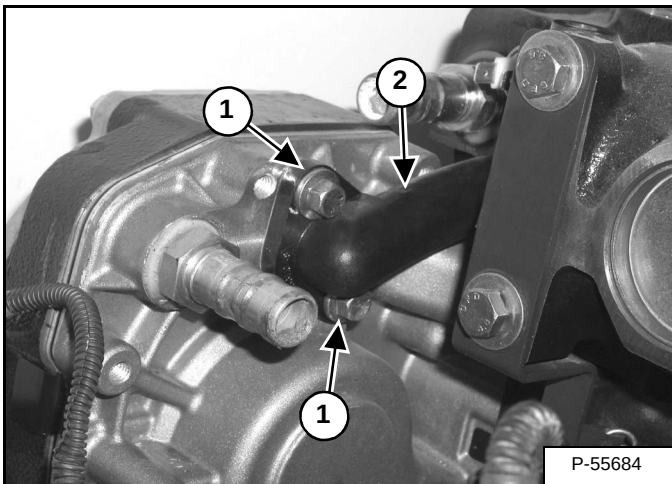


Remove the two bolts (Item 1) and remove the coolant bypass tube (Item 2) [Figure 70-100-21].

Remove the rocker cover. (See page 70-100-5)


Remove the rocker assembly. (See page 70-100-11)

Figure 70-100-22

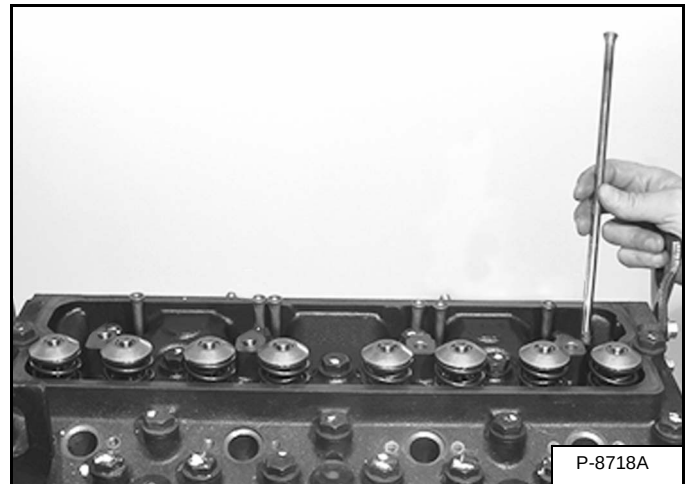

Remove the push rods [Figure 70-100-22].

Figure 70-100-23

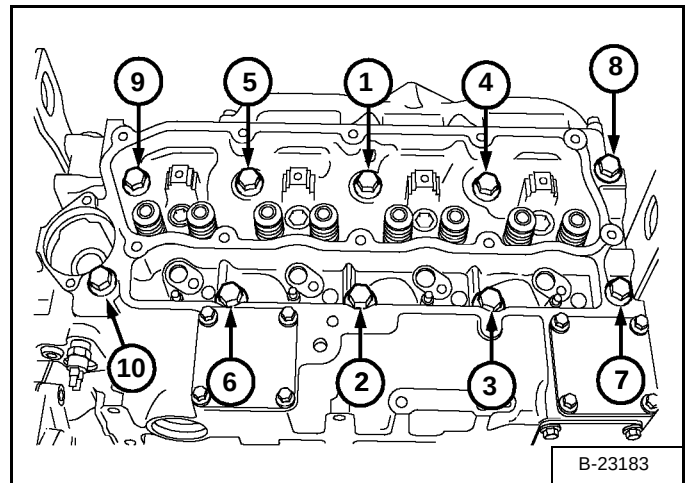

Release the cylinder head bolts evenly and gradually in the sequence shown [Figure 70-100-23].


Check the head bolts for distortion and damage. Replace as needed.

Lift off the cylinder head and clean the bottom face.

RECONDITIONING THE ENGINE (CONT'D)

Cylinder Head Inspection

Figure 70-100-24

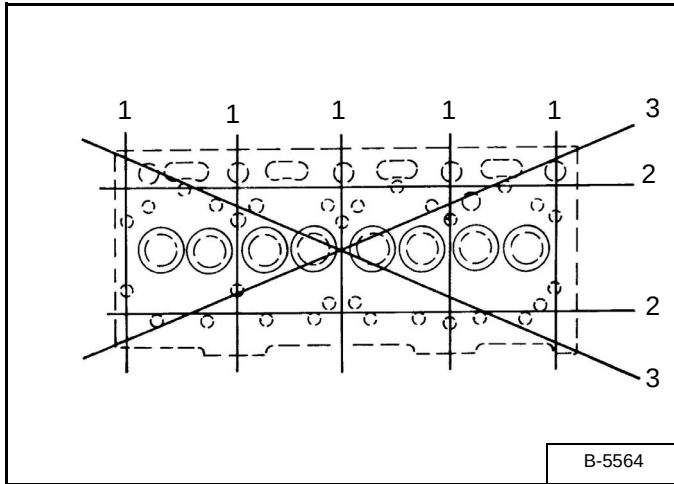

Put a straight edge on the cylinder head as shown in [Figure 70-100-24].

Using a feeler gauge between the straight edge and head, check for warping.

Maximum allowed (Item 1) is 0.0012 inches (0,03 mm), (Item 2) is 0.0019 inches (0,05 mm) and (Item 3) [Figure 70-100-24] is 0.0019 inches (0,05 mm).

The head may be machined removing only a minimum amount. Head thickness must not be less than 4.614 inches (117,20 mm).

Completely clean the rest of the head.

Check for cracks or other damage.


Cylinder Head Installation

Make sure the mating surfaces of the head and block are clean.

Clean the engine block bolt bores with the correct size tap to ensure correct torque for the cylinder head bolts.

Clean any debris out of the cylinder bores.

Figure 70-100-25

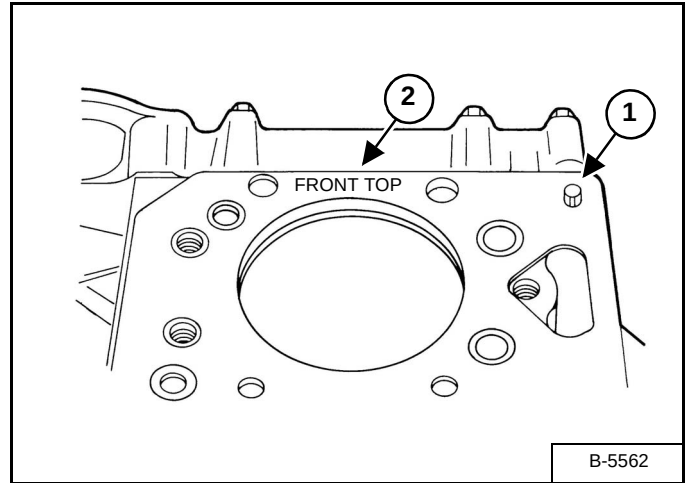

NOTE: The locating pins (Item 1) are pressed in the engine block so the head gasket (Item 2) [Figure 70-100-25] can be positioned correctly.

The head gasket is installed with no sealer.


Place the head gasket in position with the *Front Top* (Item 2) [Figure 70-100-25] marks in the correct position.

Lower the cylinder head in position.

RECONDITIONING THE ENGINE (CONT'D)

Cylinder Head Installation (Cont'd)


Figure 70-100-26

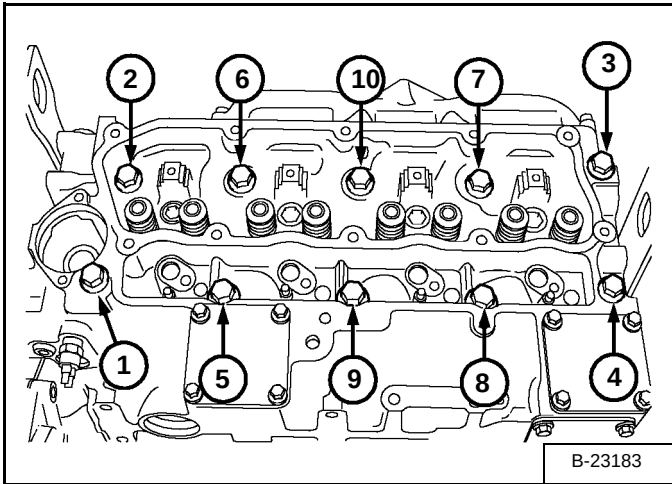

Tighten the head bolts to 37 ft.-lbs. (50 Nm) in the sequence shown [Figure 70-100-26].


Tighten the head bolts to 74 ft.-lbs. (100 Nm) in the sequence shown [Figure 70-100-26].

Figure 70-100-27

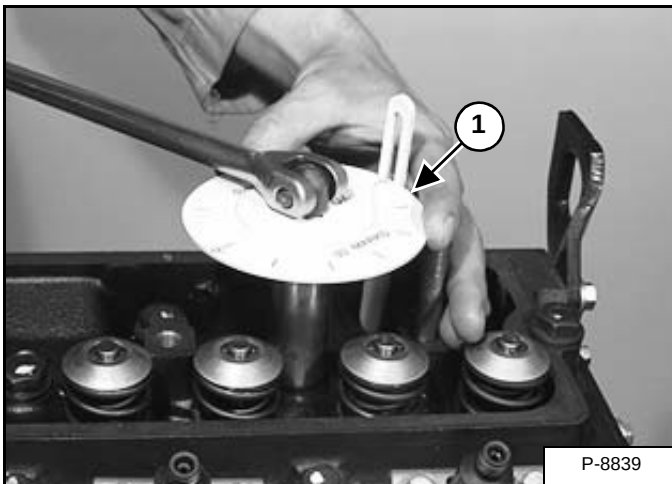


Additional tightening of the head bolts requires the use of a torque angle gauge (Item 1) [Figure 70-100-27]. Tighten the short bolts to 225° and long bolts to 270° in the same sequence as shown in [Figure 70-100-26].

Figure 70-100-28

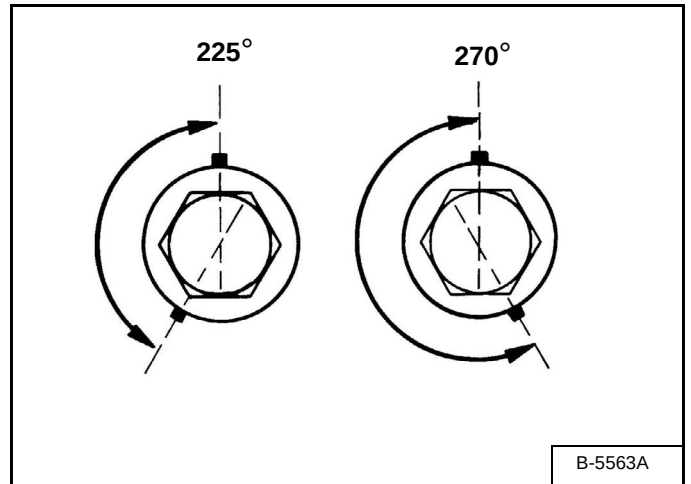

If no angle gauge is available make a suitable mark on the head bolt corner. Make another mark on the cylinder head the correct number of flats away [Figure 70-100-28]. Turn the head bolt until the lines match.

Figure 70-100-29

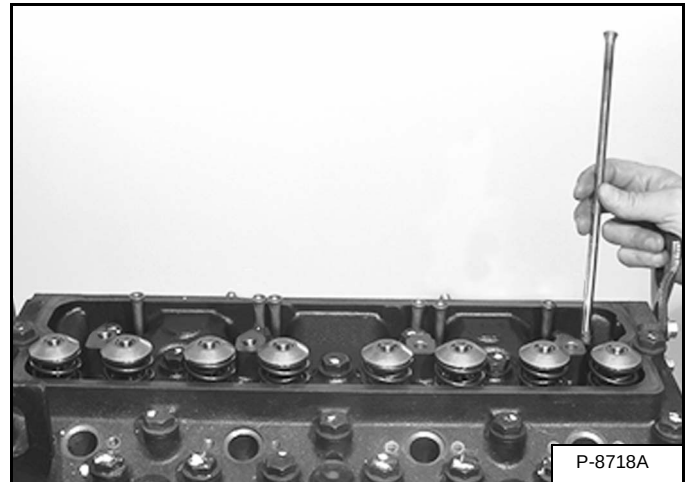

Install the push rods [Figure 70-100-29].

Make sure the push rods seat in the tappet sockets.


Install the rocker assembly. (See page 70-100-11)

Install the rocker cover. (See page 70-100-5.)

RECONDITIONING THE ENGINE (CONT'D)


Cylinder Head Installation (Cont'd)

Figure 70-100-30

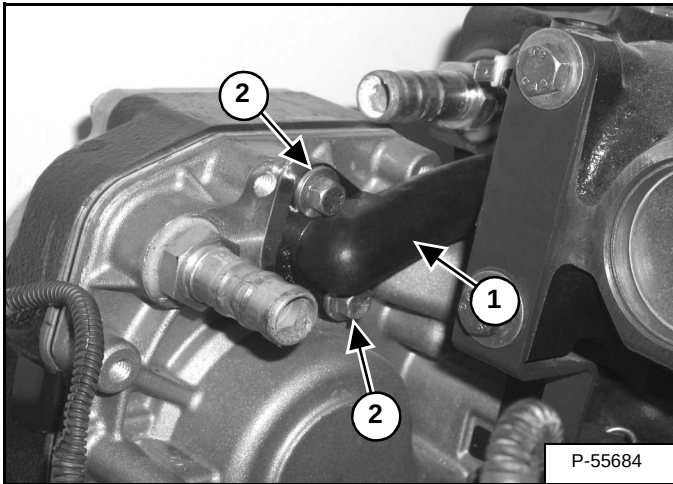


Install the coolant by-pass pipe (Item 1) and two screws (Item 2) [Figure 70-100-30].

Figure 70-100-31

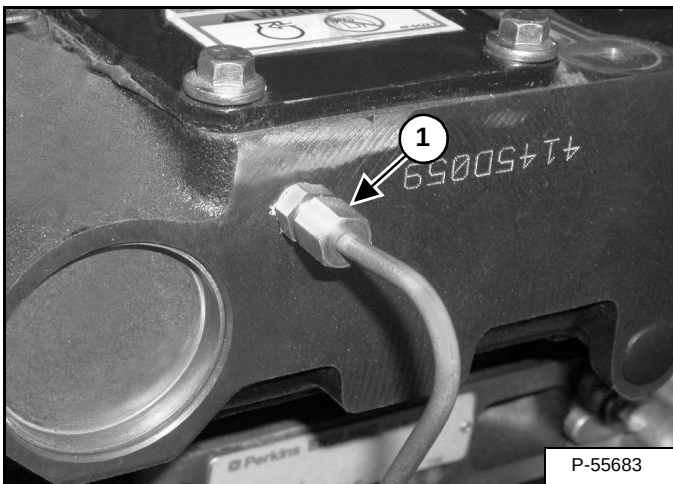


Install the tubeline (Item 1) [Figure 70-100-31].

Figure 70-100-32

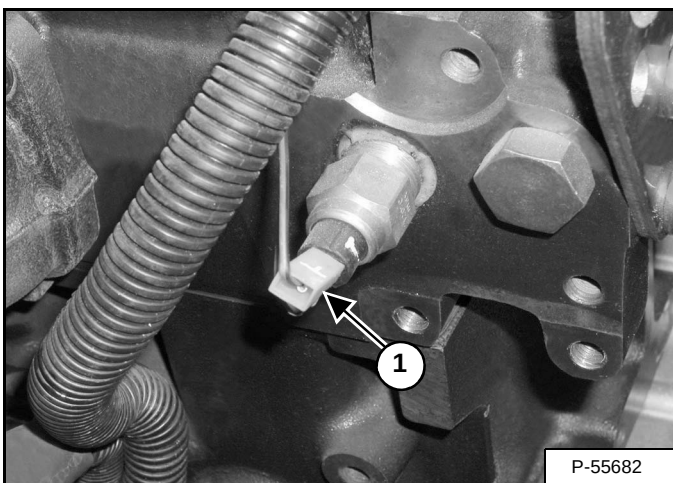

Connect the intake manifold pressure sensor (Item 1) [Figure 70-100-32].

Figure 70-100-33

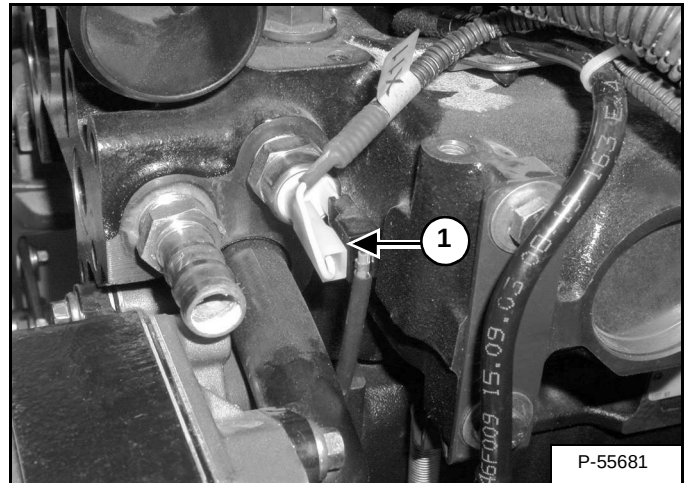

Connect the engine cooling temperature sensor (Item 1) [Figure 70-100-33].

Install the glow plugs. (See page 70-70-12)

Install the fuel injectors. (See page 70-70-7)

Install the fuel lift pump. (See page 70-70-10)

Install the alternator. (See page 60-30-1)


Install the exhaust manifold. (See page 70-100-4)

Install the turbo charger. (See page 70-100-2)

RECONDITIONING THE ENGINE (CONT'D)

Rocker Shaft Disassembly And Assembly

Figure 70-100-34

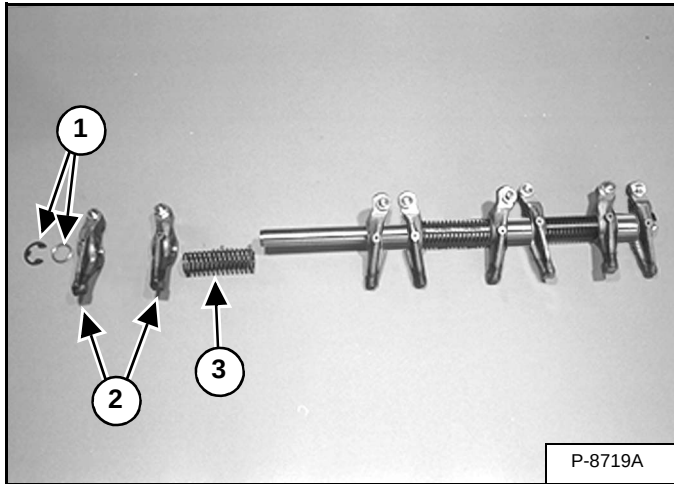

Remove the clips (Item 1) [Figure 70-100-34] from both ends of the shaft.

Remove the rocker arm (Item 2) and spring (Item 3) [Figure 70-100-34].

Continue to disassemble the rocker shaft.

Clean and inspect all components for damage and wear.

Check the clearance between the rocker arms and shaft.

Using a press and adapter, remove the old bushing and press in the new one making sure the oil holes line up.


Shaft O.D.	0.9828-0.9837 inch (24,96-24,99 mm)
Rocker Arm Bore Dia.	0.9848-09.863 inch (25,02-25,05 mm)
Clearance Between Rocker Arm & Shaft	0.0010-0.0035 inch (0,026-0,089 mm)

If the clearance is more than 0.005 inch (0,13 mm) replace the bushing(s).

Valve Removal

NOTE: Mark all components so they can be returned to the same position.

Figure 70-100-35

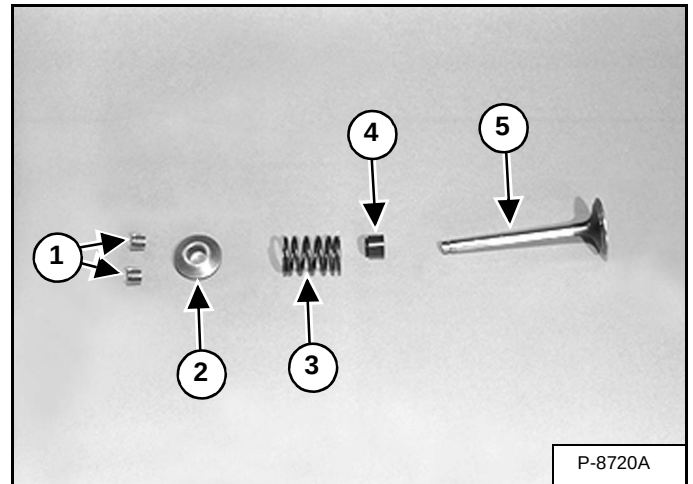

Using a valve spring compressor compress the springs and remove the retainers (Item 1) [Figure 70-100-35].


Release the compressor and remove the valve spring cap (Item 2), spring (Item 3), valve seal/spring seat washer (Item 4) and valve (Item 5) [Figure 70-100-35].

Clean and inspect all components.

RECONDITIONING THE ENGINE (CONT'D)

Valve Springs Checking

Figure 70-100-36

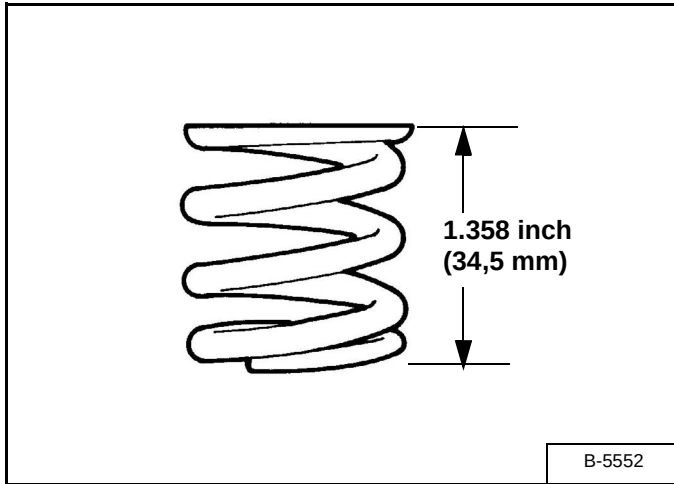


Use the following chart [Figure 70-100-36].

Valve Springs	
Compressed Height	1.358 inch (34,5 mm)
Installed Pressure	51 ft.-lbs. (229 N)

Valve Depth Checking

Figure 70-100-37

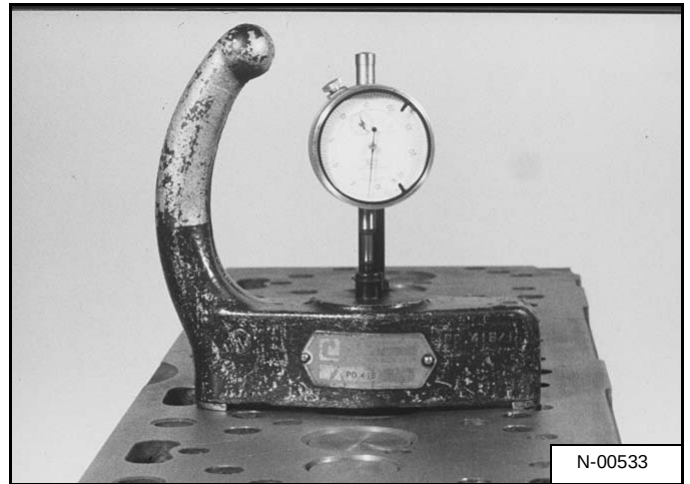

Check the valve depth as shown in [Figure 70-100-37].

The maximum depth is 0.081 inch (2,06 mm) for both intake and exhaust valves.


If the valve is below the limits, install a new valve and recheck the valve depth. If it is still below limits a new valve seat insert must be installed.

When the depth is less than 0.060-0.071 inch (1,53-1,81 mm) the seat may be ground to lower the valve depth.

RECONDITIONING THE ENGINE (CONT'D)

Valve Guides Checking

Figure 70-100-38

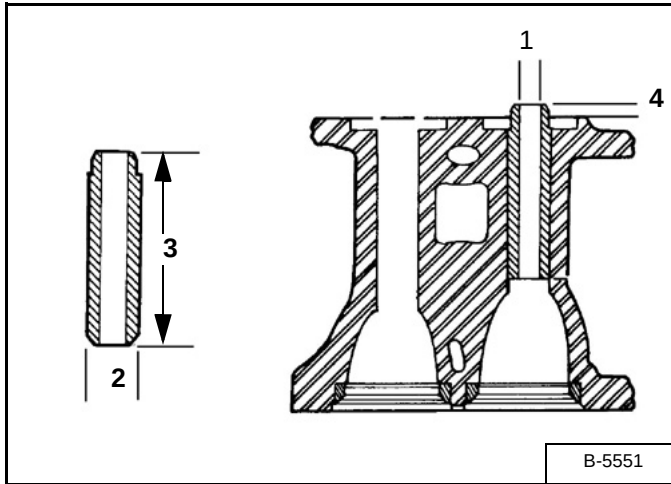

Intake & Exhaust	2.008-2.028 inch (51,00-51,50 mm)
------------------	--------------------------------------

Protrusion from bottom recess for valve spring;	
(Item 4) [Figure 70-100-38]	0.486-0.498 inch (12,35-12,65 mm)


To check the valve guides for wear using a valve.

Set up dial indicator gauge (Item 1) **[Figure 70-100-38]** as shown.

Lift the valve (Item 2) 0.60 inches (15,0 mm) and move the valve in and away from the gauge (Item 1) **[Figure 70-100-38]**. Record this reading.

If the clearance exceeds 0.009 inches (0,22 mm) for intake or 0.010 inches (0,25 mm) for exhaust (Item 3) **[Figure 70-100-39]** the valve guide needs to be replaced.

Figure 70-100-39

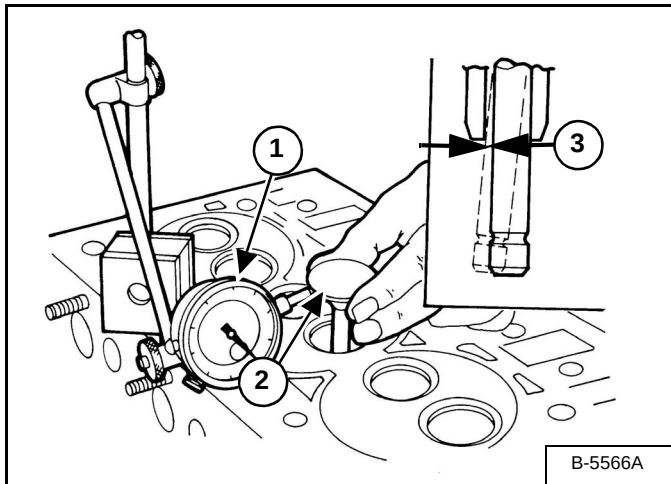

The valve guides can be checked for wear with either of the operations listed in **[Figure 70-100-38]** or **[Figure 70-100-39]**.

Use the following chart to check valve guides.

Inside Diameter	
(Item 1) [Figure 70-100-38]	0.3543-0.3552 inch (9,00-9,02 mm)

Outside Diameter (Item 2) [Figure 70-100-38]	
Intake & Exhaust	0.5131-0.5137 inch (13,04-13,05 mm)

Interference fit of valve guide to cylinder head: 0.0003-0.0019 inch (0,007-0,047 mm)


Overall Diameter (Item 3) [Figure 70-100-38]

RECONDITIONING THE ENGINE (CONT'D)

Valve Guide Removal

Clean the guide bore in the head.

Figure 70-100-40

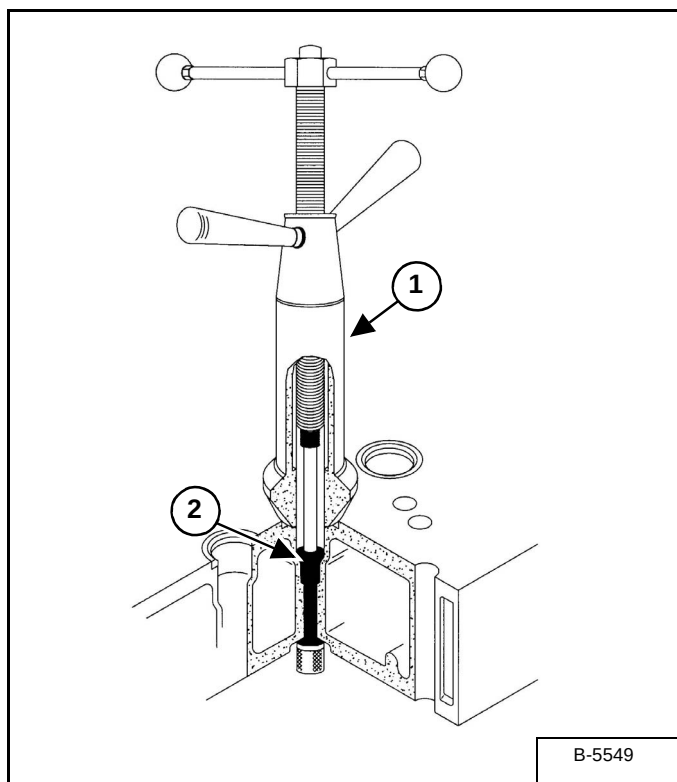


Install a valve guide removal/installation tool (Item 1) on the valve guide (Item 2) **[Figure 70-100-40]**.

Pull the guide (Item 2) **[Figure 70-100-40]** out of the cylinder head.

Valve Guide Installation

Figure 70-100-41

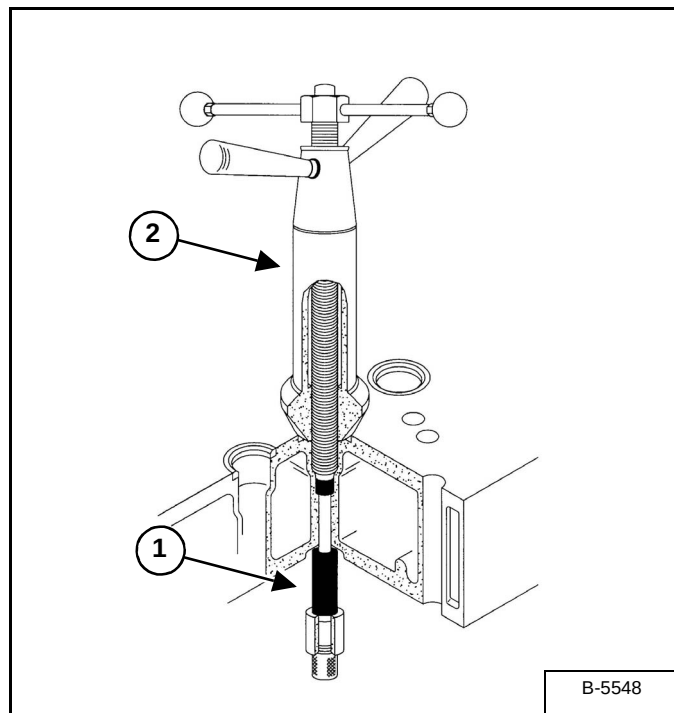

Clean the guide bore in the head.

Lubricate the outer surface of the new guide (Item 1) **[Figure 70-100-41]** with the engine oil.


Put the guide in position on the valve guide removal/installation tool (Item 2) **[Figure 70-100-41]**.

Pull the guide into the cylinder head.

When correctly positioned the top of the guide should extend 0.486-0.498 inch (12,35-12,65 mm) above the valve spring seat as shown on Page 70-100-13 **[Figure 70-100-38]**.

RECONDITIONING THE ENGINE (CONT'D)**Valves Checking**

NOTE: If the valves do not meet specifications they need to be replaced. They cannot be ground.

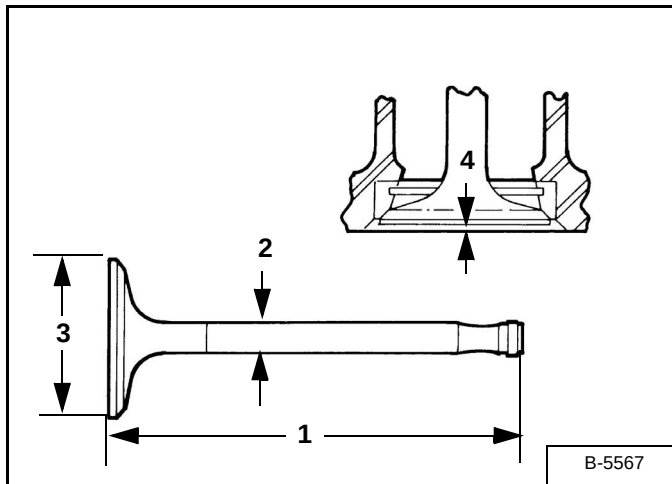Figure 70-100-42

Use the following chart [Figure 70-100-42] to check the valve dimensions.

Ref.	Valve	Specifications
1.	Intake	5.076-5.093 inch (128,92-129,37 mm)
	Exhaust	5.075-5.093 inch (128,92-129,37 mm)
2.	Intake	0.3525-0.3533 inch (8,95-8,98 mm)
	Exhaust	0.3519-0.3528 inch (8,93-8,96 mm)
3.	Intake	1.819-1.829 inch (46,20-46,45 mm)
	Exhaust	1.634-1.644 inch (41,51-41,75 mm)
4.	Intake (Production)	0.062-0.072 inch (1,58-1,84 mm)
	Intake (Service Max.)	0.082 inch (2,09 mm)
	Exhaust (Production)	0.060-0.071 inch (5,53-1,81 mm)
	Exhaust (Service Max.)	0.081 inch (2,06 mm)
	Intake/Exhaust Valve Face Angle	30°


Cutting A Valve Seat

Before any work is done the valve guides must meet specifications or have been replaced.

Install the pilot in the valve guide.

Select the correct size cutter.

Valve Seat Angle	30°
------------------	-----

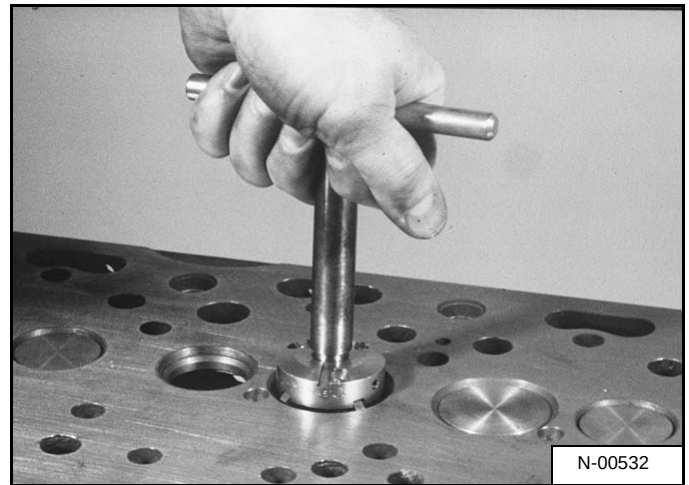Figure 70-100-43

Carefully turn the cutter in a clockwise direction using even downward pressure. Keep the valve seat as narrow as possible [Figure 70-100-43].

Remove any cutting debris.

Install the valve and lightly tap.

Check the valve depth to make sure that it is within limits. (See page 70-100-12)

NOTE: If the valve seat is worn or damaged, a new valve seat insert can be installed.

RECONDITIONING THE ENGINE (CONT'D)

Valve Seat Assembly


WARNING

Wear safety glasses to prevent eye injury when any of the following conditions exist:

- When fluids are under pressure.
- Flying debris or loose material is present.
- Engine is running.
- Tools are being used.

W-2019-1285

Figure 70-100-44

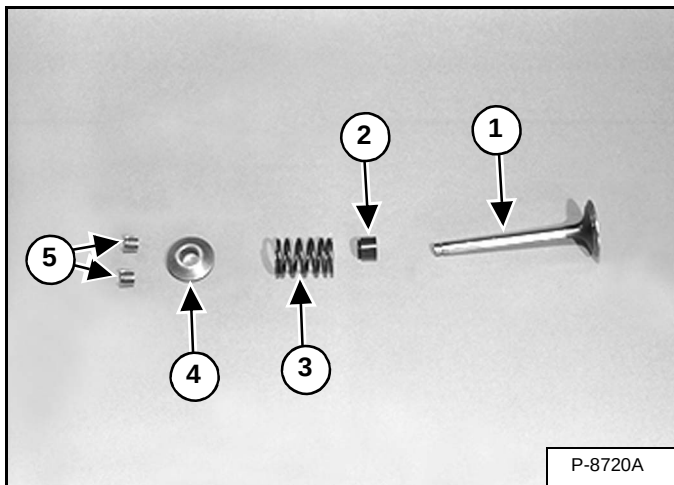

Lubricate the valve stems (Item 1) [Figure 70-100-44] with clean engine oil and install them in the respective guides.

Install new valve seals/spring seat washer (Item 2) [Figure 70-100-44].

Install the spring (Item 3) [Figure 70-100-44] on the washer (make sure the larger diameter is against the cylinder head).

Place the valve cap (Item 4) [Figure 70-100-44] on the spring.

Using a valve spring compressor compress the springs and install the retainers (Item 5) [Figure 70-100-44].

RECONDITIONING THE ENGINE (CONT'D)

Changing Valve Springs (With Cylinder Head Installed)


Remove the rocker cover.

Release the compressor and remove the valve spring(s).

Place the new valve springs in position.

Compress the valve springs and install the retainers.


Figure 70-100-45

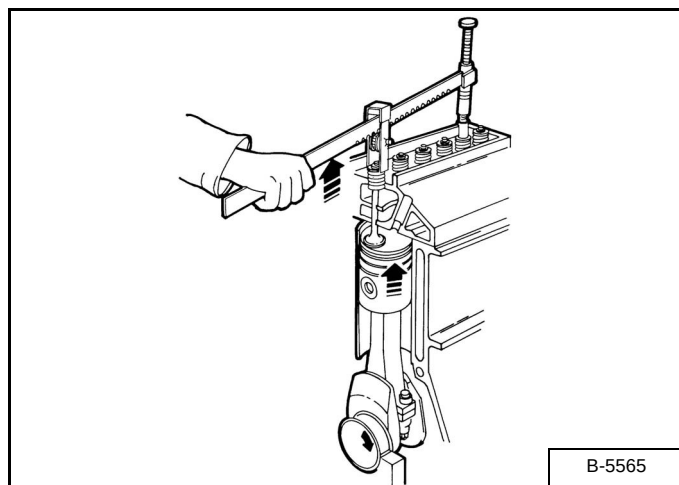

Rotate the crankshaft clockwise until the intake valve has opened and the exhaust valve has not fully closed. In this position the piston (Item 1) [Figure 70-100-45] will be at approximately T.D.C.

Remove the rocker shaft assembly.

Figure 70-100-46

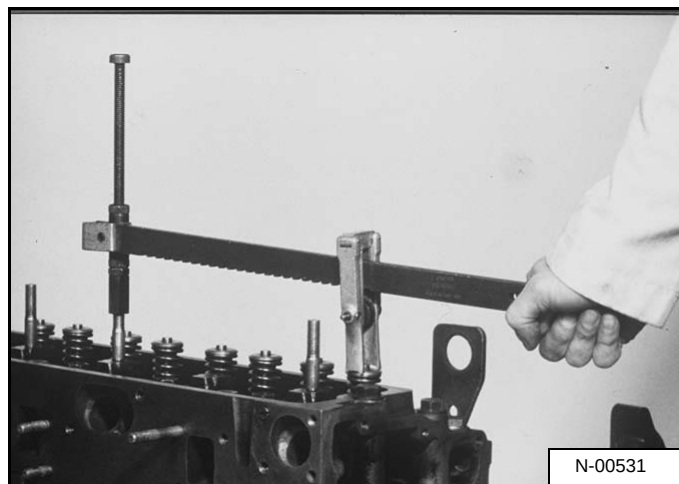


Install the valve spring compressor and adapter [Figure 70-100-46].

Compress the valve springs squarely and remove the retainers.

NOTE: Do not rotate the crankshaft while the valve springs are removed.

RECONDITIONING THE ENGINE (CONT'D)**Valve Clearance Adjustment**

Adjust the valve clearance as follows:

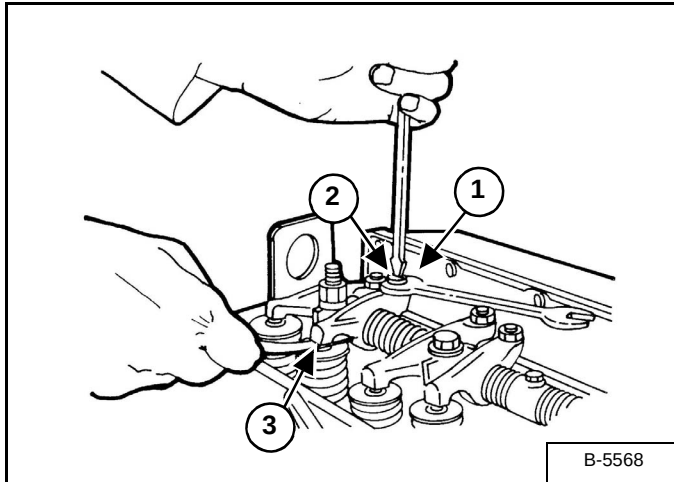Figure 70-100-47


Loosen the lock nut (Item 1) **[Figure 70-100-47]**.

Turn the adjustment screw (Item 2) **[Figure 70-100-47]** until the correct clearance is obtained.

NOTE: The clearance is measured between the rocker arm and valve stem tip (Item 3) **[Figure 70-100-47]**.

Adjust the valve clearance as follows:

0.008 inch (0,20 mm)	Intake
0.018 inch (0,45 mm)	Exhaust

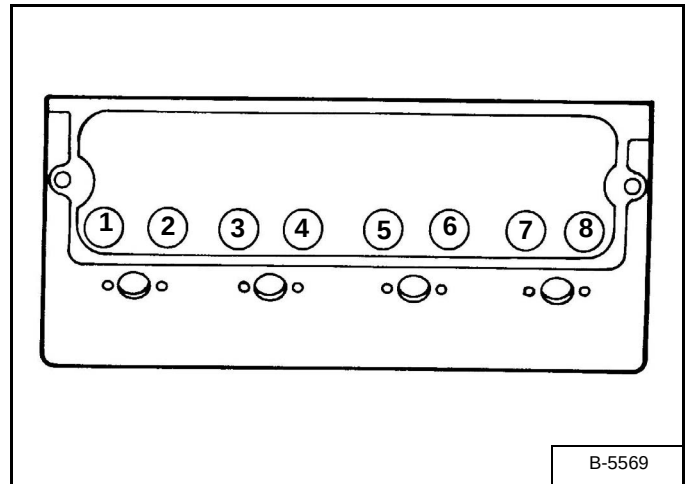Figure 70-100-48**Figure 70-100-49**

Cylinder No.	1		2		3		4	
Valve No.	1	2	3	4	5	6	7	8
Valve 1=Intake E=Exhaust	I	E	I	E	I	E	I	E

Use the following sequence to set the valves **[Figure 70-100-48]** & **[Figure 70-100-49]**.

a.	With the rocker arm rocking (valves 7 & 8) on No. 4 cylinder set clearance at No. 1 cylinder (valves 1 & 2).
b.	With the rocker arm rocking (valves 3 & 4) on No. 2 cylinder set clearance at No. 3 cylinder (valves 5 & 6).
c.	With the rocker arm rocking (valves 1 & 2) on No. 1 cylinder set clearance at No. 4 cylinder (valves 7 & 8).
d.	With the rocker arm rocking (valves 5 & 6) on No. 3 cylinder set clearance at No. 2 cylinder (valves 3 & 4).

RECONDITIONING THE ENGINE (CONT'D)

Timing Case And Drive Assembly Description


The timing case is made of aluminum and the cover is made of tin and in most applications, the timing gears are made of steel. The drive from the crankshaft passes to the idler gear, to the camshaft gear, to the gear on the fuel injection pump and to the water pump.

The camshaft and fuel injection pump run at half the speed of the crankshaft.

Timing Cover Removal

Remove the water pump. (See page 70-100-41)

Figure 70-100-50

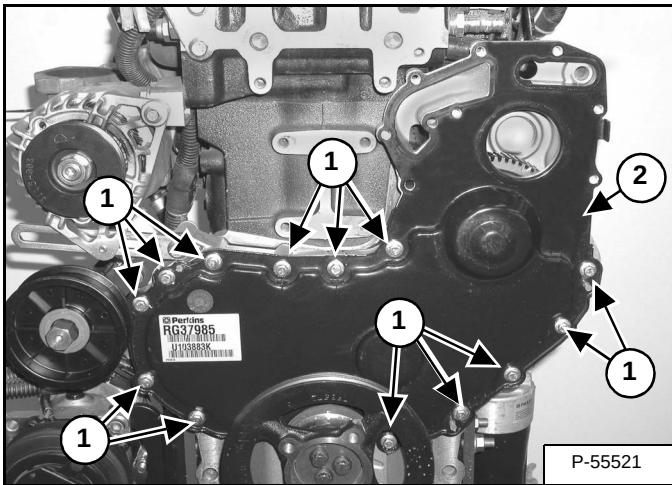

Remove the timing cover bolts (Item 1) and remove the timing cover (Item 2) [Figure 70-100-50].

Timing Cover Installation

Clean the gasket mating surfaces.

Place the gasket and timing cover on the engine.

Remove the timing pins if fitted.

Hold the timing cover in position and install two bolts that are on opposite sides of the cover. Do not tighten the bolts.


Install the water pump. (See page 70-100-41)

Do not tighten bolts at this time.

Tighten the cover bolts and water pump bolts to 16 ft.-lbs. (22 Nm) torque.

Crankshaft Pulley Removal And Installation

Figure 70-100-51

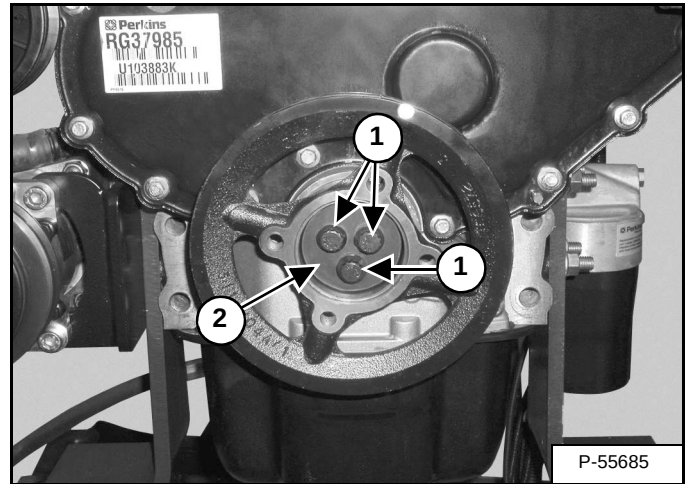

Remove the three bolts (Item 1) and thrust block (Item 2) [Figure 70-100-51].

Installation: Tighten the bolts to 85 ft.-lbs. (115 Nm) torque.

Remove the pulley.


Front Oil Seal Removal And Installation

Remove the crankshaft pulley. (See page 70-100-19)

Remove the oil seal using a seal removal tool.

Do not damage the edge of the seal housing.

Figure 70-100-52

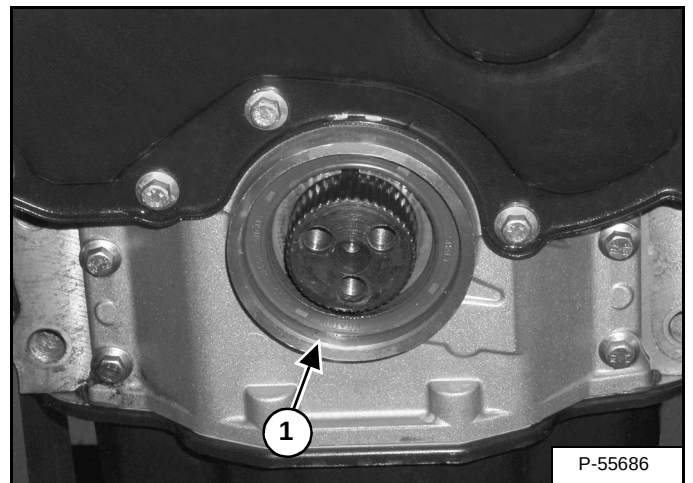

Install the oil seal (Item 1) [Figure 70-100-52] into the housing using the special tool.

Install crankshaft pulley. (See page 70-100-19)

RECONDITIONING THE ENGINE (CONT'D)


Timing Case And Gear Removal

Remove the timing cover. (See page 70-100-19)

Remove the crankshaft pulley. (See page 70-100-19)


Remove the fuel injection pump. (See page 70-70-1.)

Figure 70-100-53

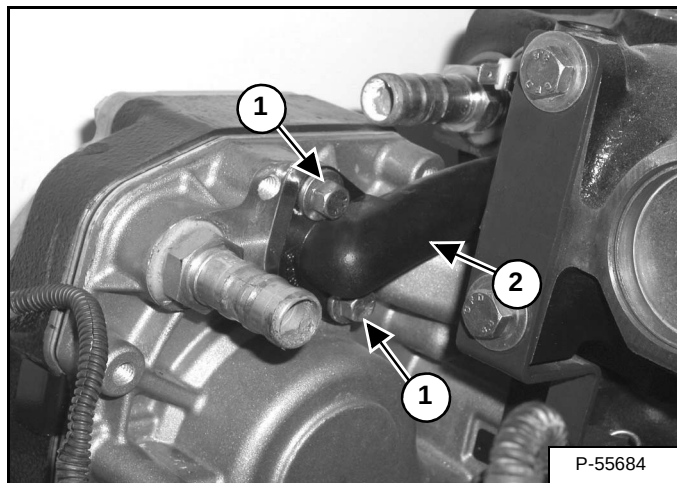


Remove the two bolts (Item 1) and remove the coolant bypass tube (Item 2) [Figure 70-100-53].

Figure 70-100-54

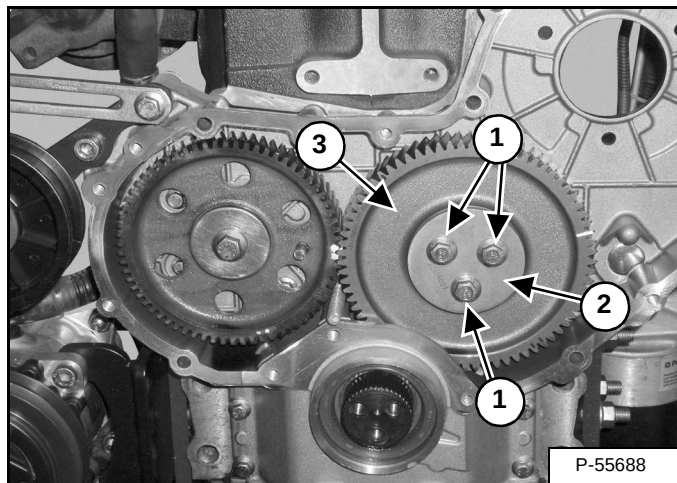

Remove the three bolts (Item 1) and plate (Item 2) from the idler gear (Item 3) [Figure 70-100-54].


Figure 70-100-55

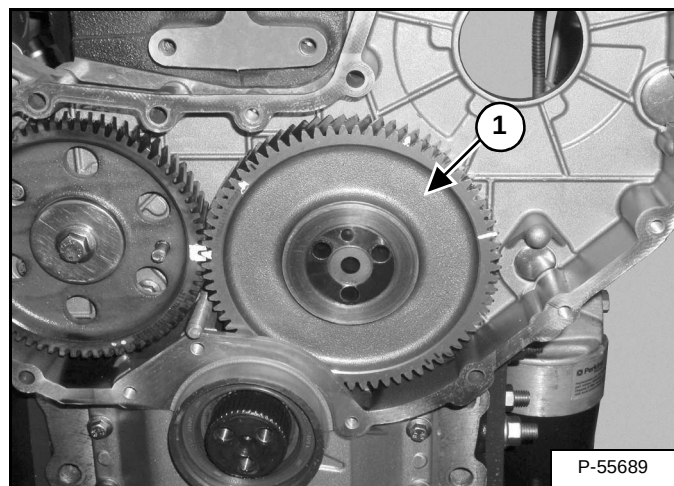

Remove the idler gear (Item 1) [Figure 70-100-55] by moving the gear assembly forward and lifted over the front oil seal housing.

NOTE: Do not turn the crankshaft with the idler gear removed.

Figure 70-100-56

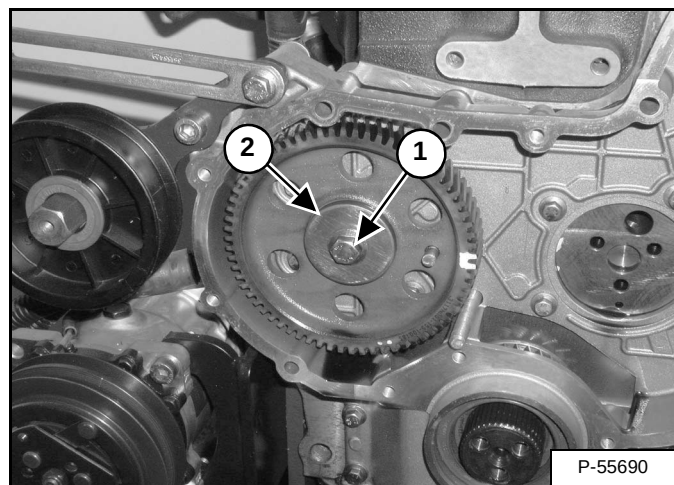


Remove the bolt (Item 1) and washer (Item 2) [Figure 70-100-56].

RECONDITIONING THE ENGINE (CONT'D)

Timing Case And Gear Removal (Cont'd)


Figure 70-100-57

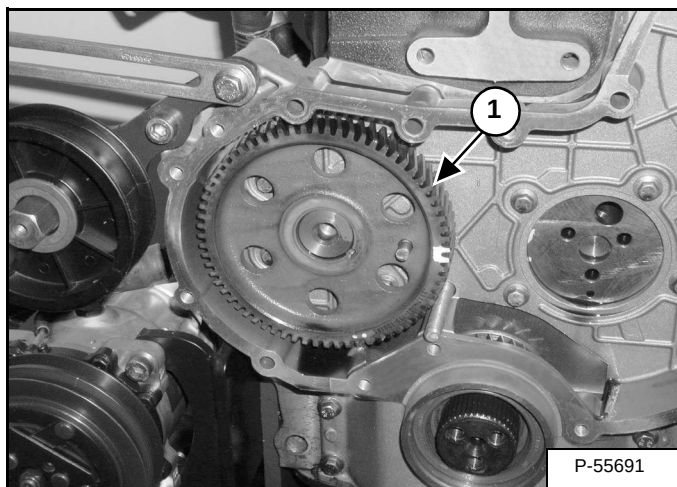

Remove the camshaft gear (Item 1) [Figure 70-100-57].

NOTE: Use care not to lose the key from the key way.

Figure 70-100-58

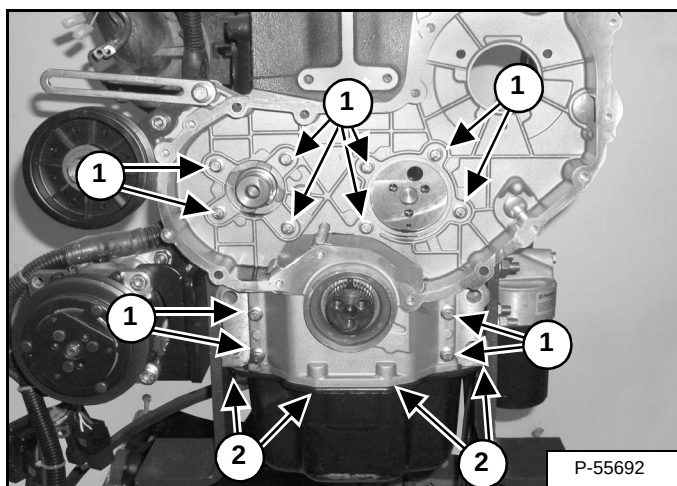


Remove all the timing case mount bolts (Item 1) and the four bolts (Item 2) [Figure 70-100-58] from the front of the oil pan.

Remove the timing case from the engine.

Timing Case And Gear Installation

Clean the mating surfaces, if the oil pan was not removed trim the oil gasket flush with the block.


Figure 70-100-59

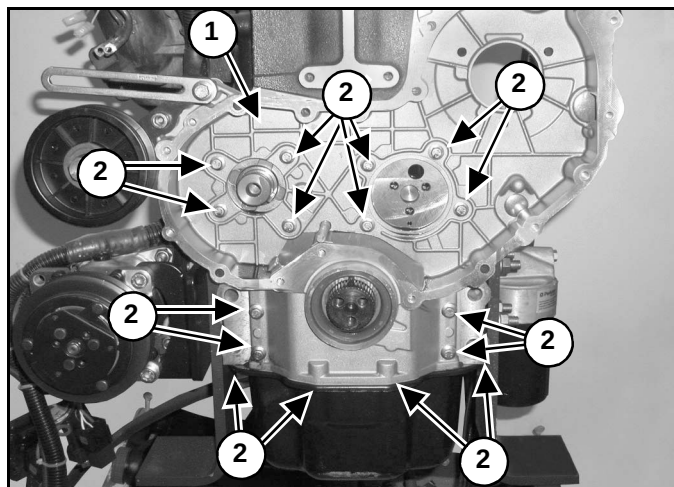

Fit the timing case (Item 1) onto the cylinder block and hand tighten the bolts (Item 2) [Figure 70-100-59].

After the cover is correctly aligned, tighten the mount bolts (Item 2) [Figure 70-100-59] to 16 ft.-lbs (22 Nm) torque.

Figure 70-100-60

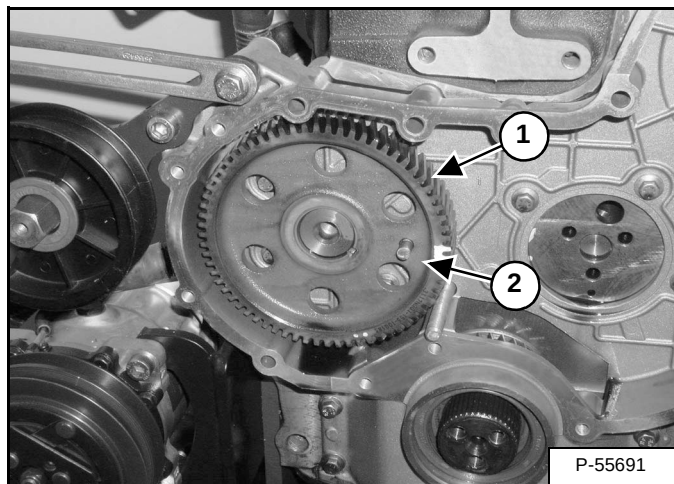


Install the camshaft gear (Item 1) onto the shaft using alignment pin (Item 2) [Figure 70-100-60] for correct alignment.

RECONDITIONING THE ENGINE (CONT'D)


Timing Case And Gear Installation (Cont'd)

Figure 70-100-61

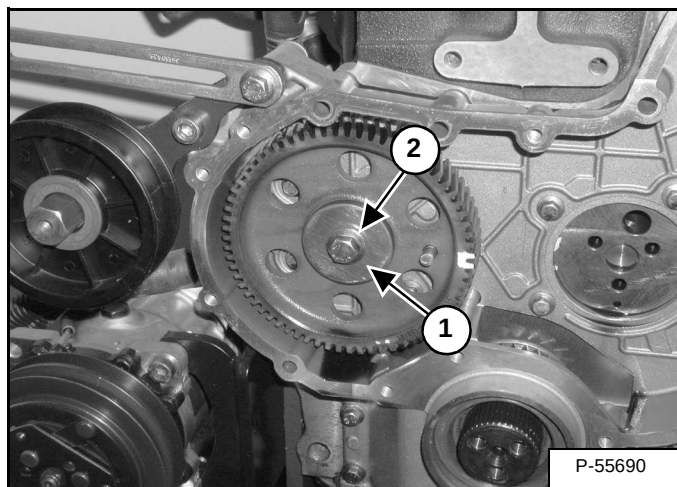


Install the washer (Item 1) and bolt (Item 2) [Figure 70-100-61] and tighten to 70 ft.-lbs. (95 Nm) torque.

Figure 70-100-62

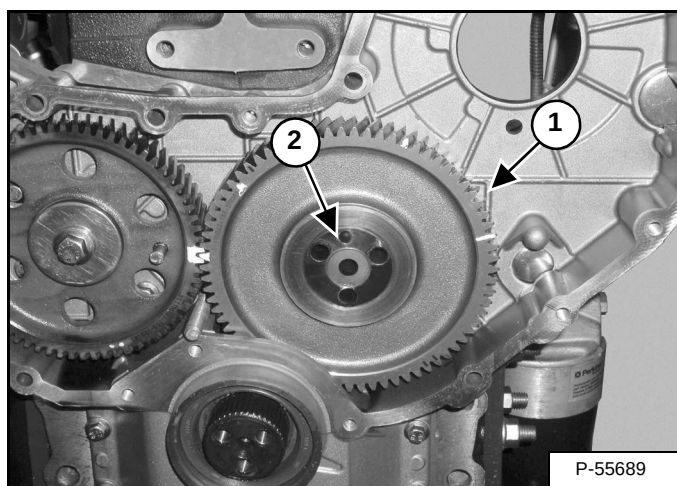

Install the idler gear (Item 1) make sure the hole (Item 2) [Figure 70-100-62] is towards the cylinder head.


Figure 70-100-63

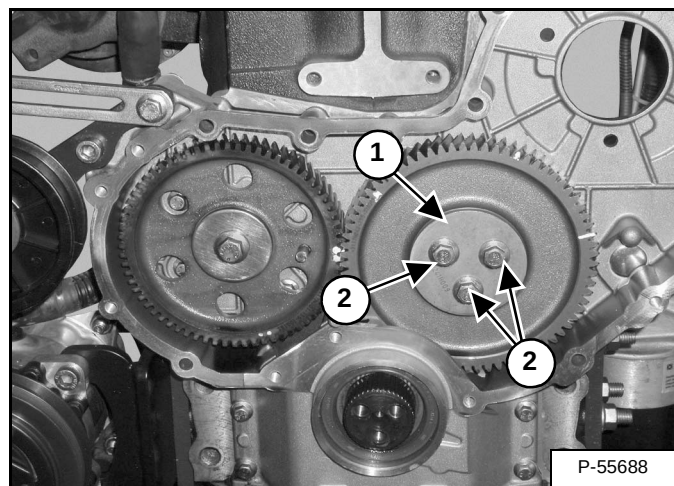

Install the plate (Item 1) and three bolts (Item 2) [Figure 70-100-63].

Tighten the bolts to 33 ft.- lbs. (44 Nm) torque.

Figure 70-100-64

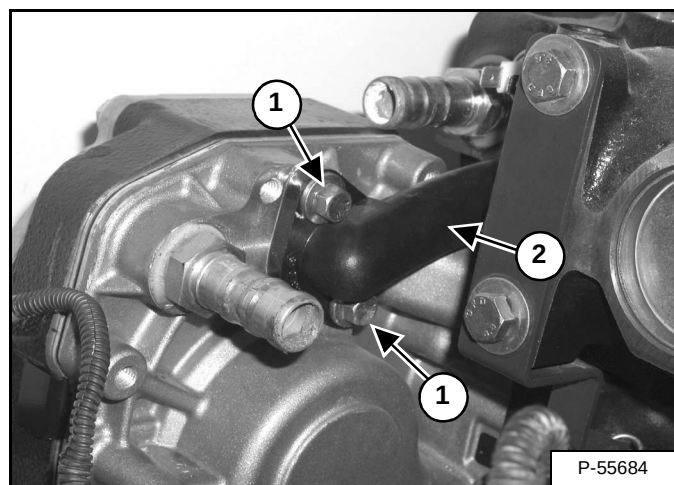

Install the coolant by-pass tube (Item 1) using the two bolts (Item 2) [Figure 70-100-64].

Install the fuel injection pump. (See page 70-70-4)

Install the crankshaft pulley. (See page 70-100-19)

Install the timing cover. (See page 70-100-19)

RECONDITIONING THE ENGINE (CONT'D)

Camshaft And Tappets Removal

Remove the timing case cover. (See page 70-100-19)


Remove the fuel injection pump. (See page 70-70-1)

Remove the timing case. (See page 70-100-20)

Remove the rocker cover, rocker assembly and push rods. (See page 70-100-5)

Remove the fuel pump and gasket.

Figure 70-100-65

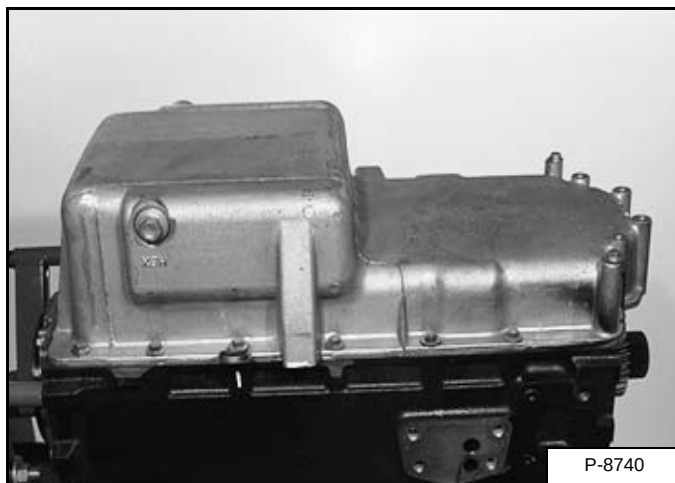


Turn the engine over and remove the oil pan mounting bolts [Figure 70-100-65].

Remove the oil pan and gasket.


Installation: Tighten the oil pan mounting bolts to 16 ft.-lbs. (22 Nm) torque.

Figure 70-100-66

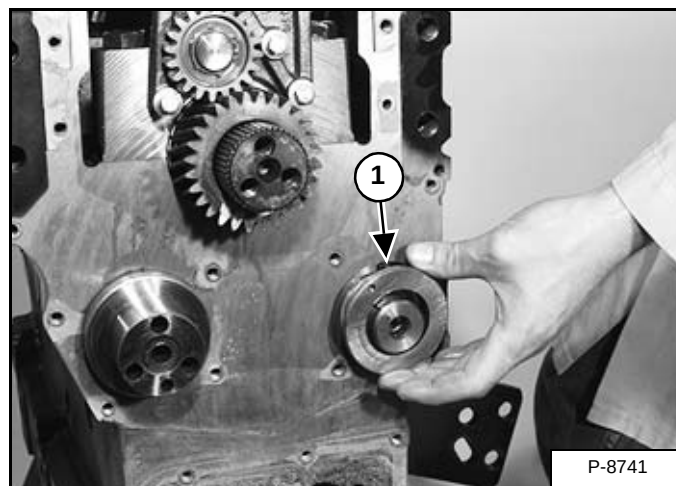

Remove the camshaft thrust washer (Item 1) [Figure 70-100-66].

Figure 70-100-67

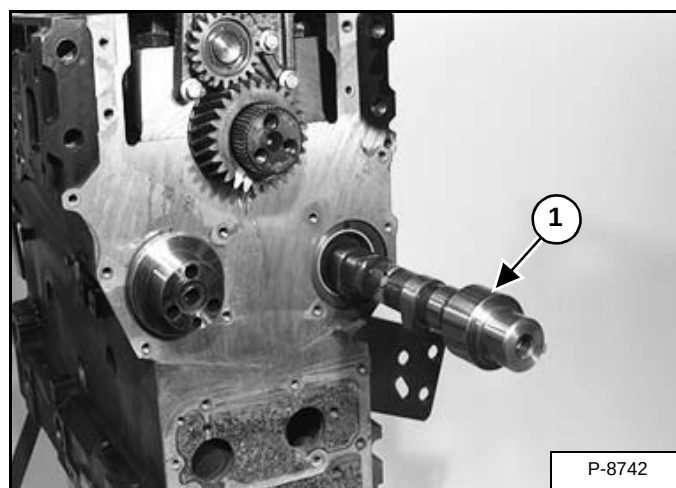


Carefully remove the camshaft (Item 1) [Figure 70-100-67].

RECONDITIONING THE ENGINE (CONT'D)

Camshaft And Tappets Removal (Cont'd)

Figure 70-100-68

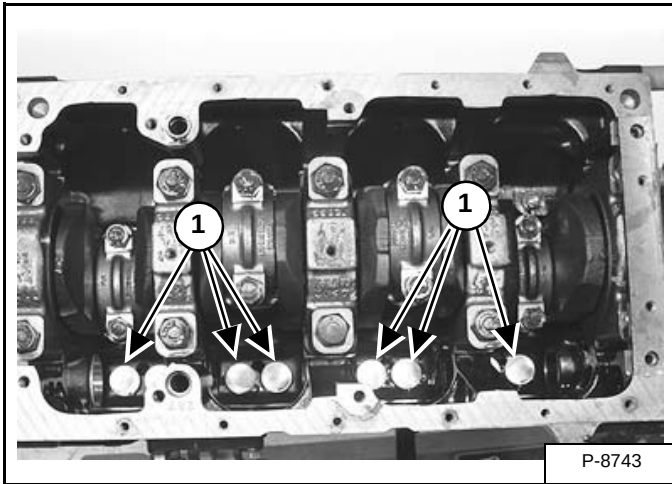

Remove the tappets (Item 1) [Figure 70-100-68] from the block.

Camshaft And Tappets Installation

Clean and inspect the camshaft and tappets for excessive wear and damage.


Inspect the camshaft bushing for excessive wear and damage.

NOTE: Only the front camshaft journal bore has a bushing.

Clearance between the camshaft journals, the bushing and camshaft bore is 0.0025 - 0.0055 inch (0,06 - 0,14 mm).


Make sure all components are clean and lubricated with clean engine oil.

Figure 70-100-69

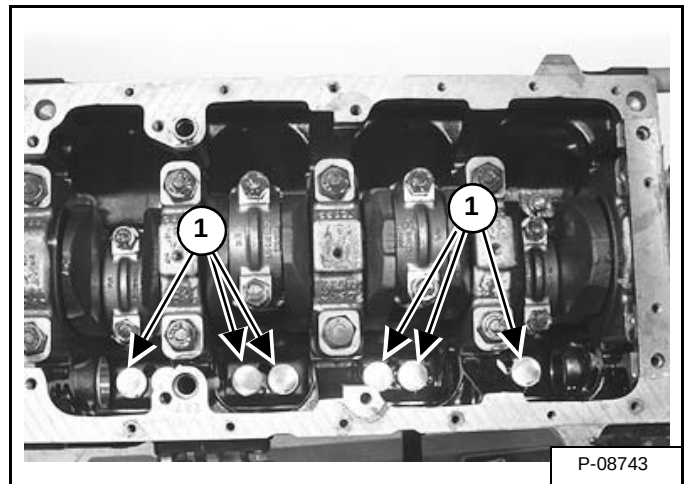

Install the tappets (Item 1) [Figure 70-100-69].

Figure 70-100-70

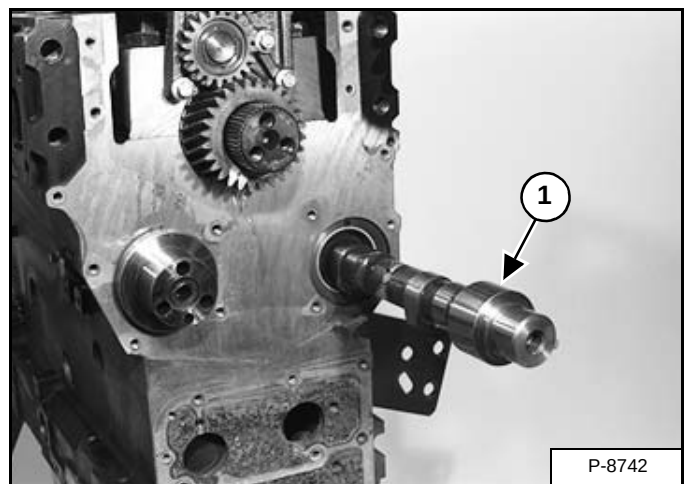


Carefully install the camshaft (Item 1) [Figure 70-100-70].

RECONDITIONING THE ENGINE (CONT'D)

Camshaft And Tappets Installation (Cont'd)

Figure 70-100-71

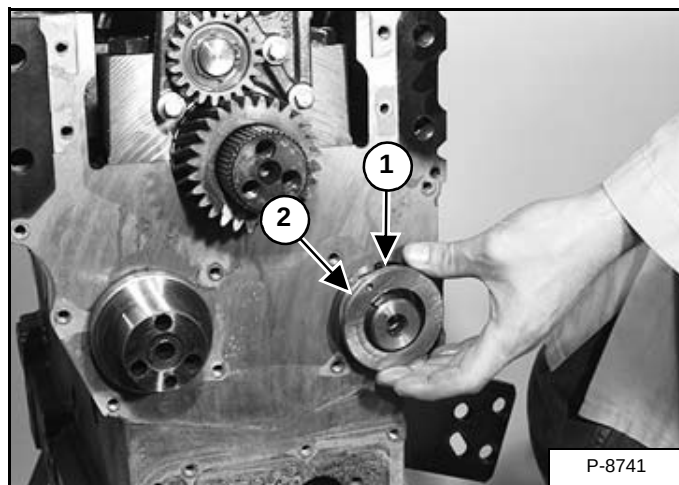

Install the camshaft thrust washer (Item 1). Make sure that the dowel pin (Item 2) **[Figure 70-100-71]** lines up with the hole in the thrust washer.

Install the timing case. (See page 70-100-21)

Check camshaft end play. The end play for a new engine is 0.004 - 0.022 inch (0,10 - 0,55 mm), service limits 0.023 inch (0,60 mm).

Install the timing gears. (See page 70-100-21)

Install the injection pump. (See page 70-70-4)

Install the push rods and rocker assembly. (See page 70-100-11.)

Install the timing cover. (See page 70-100-19)

Install the oil pan. (See page 70-100-43)

RECONDITIONING THE ENGINE (CONT'D)

Pistons And Connecting Rods Description


The pistons have a Quadram combustion chamber. They have two compression rings and one oil control ring. The top ring groove has a hard metal insert to reduce wear. Full floating piston pins are used and are retained by snap rings.

Controlled expansion pistons have a steel insert ring in the piston skirt. The connecting rods are molybdenum steel. The connecting rods on the turbocharged engines have wedge shaped small ends. The location of the bearing caps to the connecting rods is made by serrations and the cap is retained by two bolts.

The pistons used in the 1000 series engines have two compression rings and one oil control ring. All the rings are above the piston pin. Each of the three piston rings have different design features. Always use the engine identification number to order new parts.

Pistons And Connecting Rods Removal

Figure 70-100-72

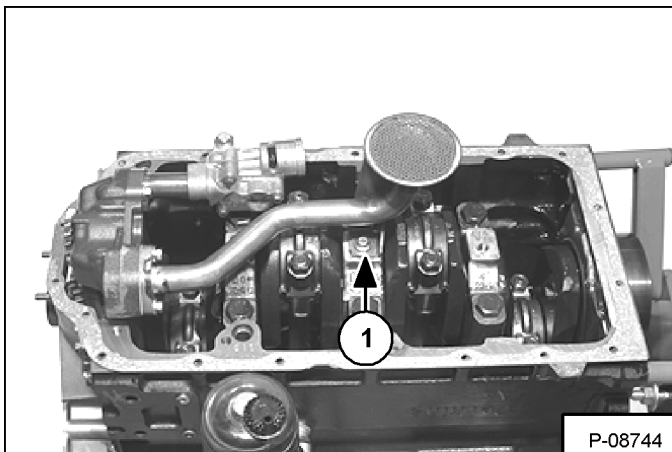


Remove the cylinder head. (See page 70-100-6.)

Remove all the carbon from the top of the cylinder liners.

Remove the oil pan. (See page 70-100-43.)

Remove the oil pick up screen and tube (Item 1) [Figure 70-100-72].


Figure 70-100-73

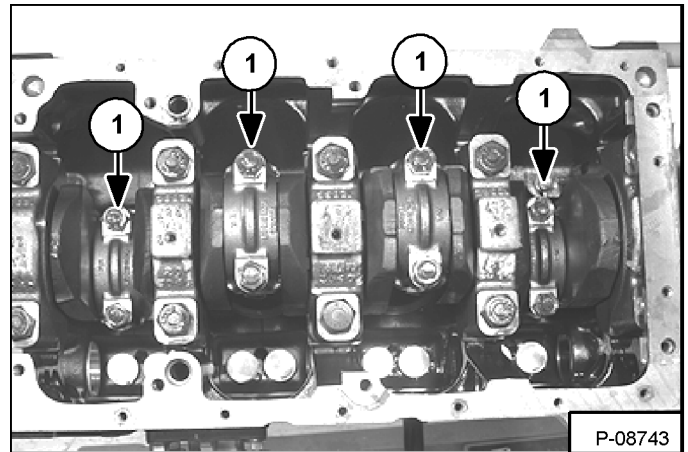

Mark and remove the connecting rod caps (Item 1) [Figure 70-100-73].

NOTE: Do not allow the connecting rods to hit the cooling jets.

Figure 70-100-74

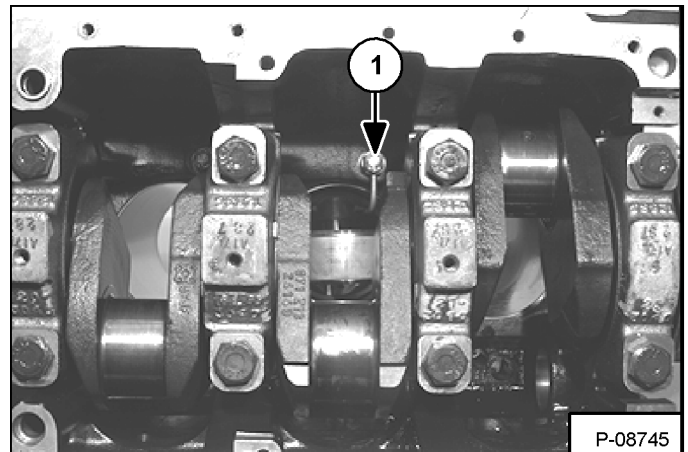


Turn the connecting rods 90° to prevent contact with the piston cooling jets (Item 1) [Figure 70-100-74]. Push the piston and rod assemblies out the top of the cylinder.

RECONDITIONING THE ENGINE (CONT'D)

Pistons And Connecting Rods Removal (Cont'd)

Figure 70-100-75

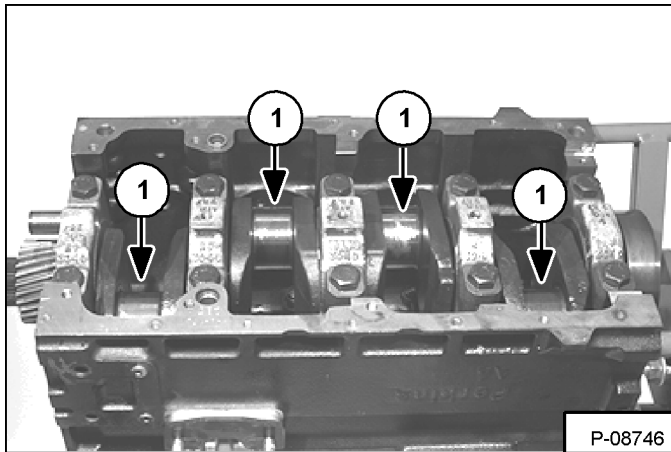

Inspect the crankshaft journals (Item 1) [Figure 70-100-75] for wear or damage.


NOTE: Keep all parts together so they can be replaced in their original position.

NOTE: Before installing the pistons check cylinder bore for wear or damage. (See Page 70-100-49.)

RECONDITIONING THE ENGINE (CONT'D)


Pistons And Connecting Rods Disassembly

Figure 70-100-76

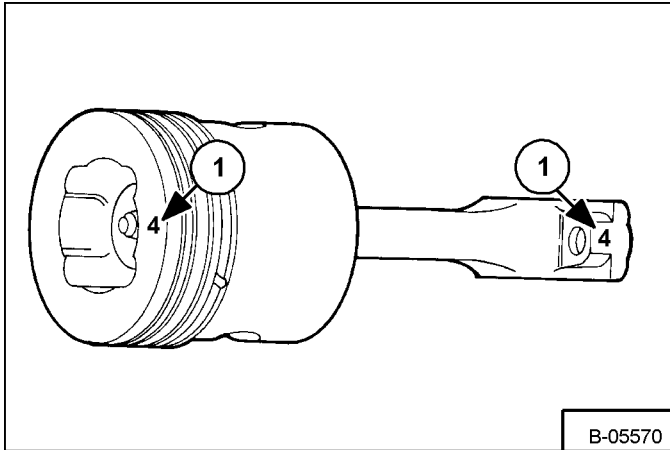

Mark the piston to indicate the cylinder number (Item 1) [Figure 70-100-76] as shown on the connecting rod.

Figure 70-100-77

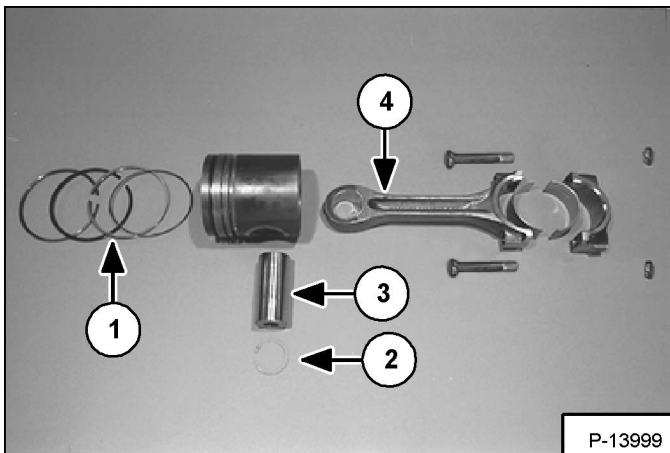

Remove the piston rings (Item 1) [Figure 70-100-77] with a ring expander.


Remove the snap rings (Item 2) [Figure 70-100-77] which retain the piston pin.

Push the piston pin (Item 3) [Figure 70-100-77] out by hand. If the pin doesn't push out easily, heat the piston to 100°-120° F (40°-50° C) for easier removal.

Remove the connecting rod (Item 4) [Figure 70-100-77].

Piston Ring End Gap

Figure 70-100-78

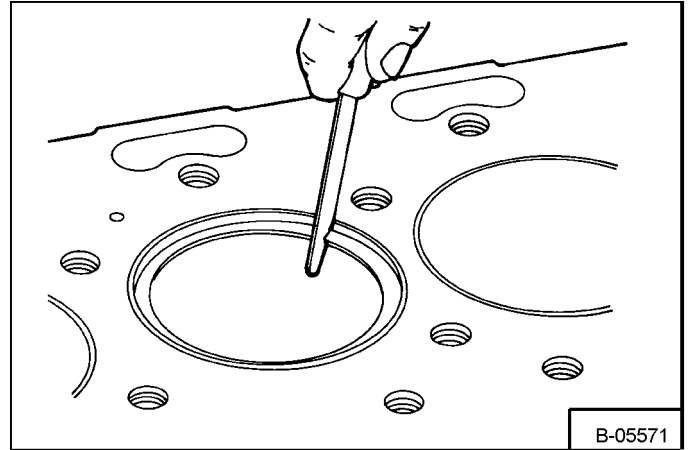


Place the piston rings in the upper part of the cylinder to check the end gap [Figure 70-100-78].

Top Ring End Gap	0.0118-0.0216 inch (0,30-0,55 mm)
Second Ring End Gap	0.0275-0.0374 inch (0,70-0,95 mm)
Third Ring End Gap	0.0118-0.0216 inch (0,30-0,55 mm)

Piston Ring Installation

Figure 70-100-79

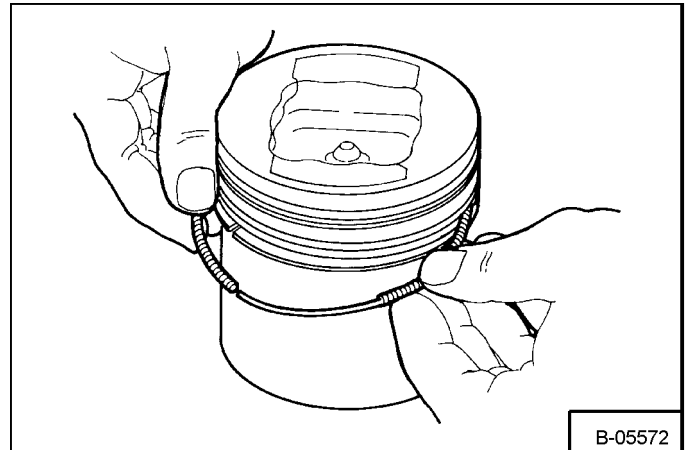

Install the spring of the oil control ring in the bottom groove with the latch pin inside both ends of the spring [Figure 70-100-79].


RECONDITIONING THE ENGINE (CONT'D)

Piston Ring Installation (Cont'd)

Use a ring expander to install the piston rings.

Install the oil spring on the bottom groove of the piston with the latch pin inside both ends of the spring.

Figure 70-100-80

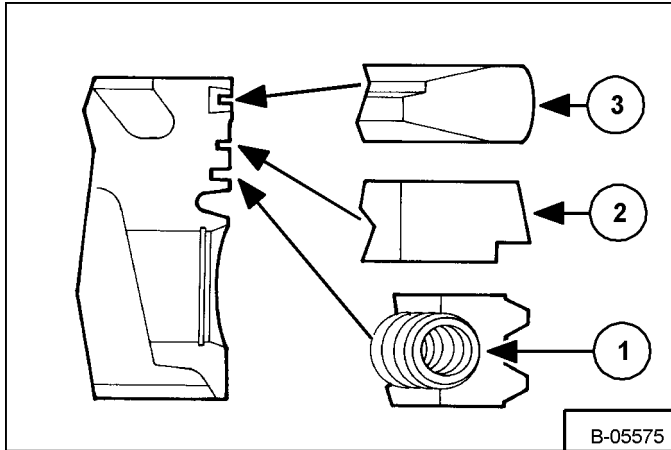

Install the oil control ring over the spring (Item 1) **[Figure 70-100-80]**.

Make sure the ring gap is 180° from the latch pin.

Install the cast iron ring with the tapered face (Item 2) **[Figure 70-100-80]** in the second groove with the word *TOP* or symbol facing the top of the piston.

New second rings have a green identification mark, which must be on the left of the ring gap after the ring is installed and the piston is upright.

The second ring has an external step at the bottom of the tapered face.

Place the chromium ring (Item 3) **[Figure 70-100-80]** with the symbol or word *TOP* up when installed on the piston.


The top ring (Item 3) **[Figure 70-100-80]** has an internal step.

New top rings have a red or blue identification mark, which must be on the left of the ring gap after the ring is installed and the piston is uptight.

Make sure the ring gaps are 120° apart.

Piston Ring Groove Clearance

Figure 70-100-81

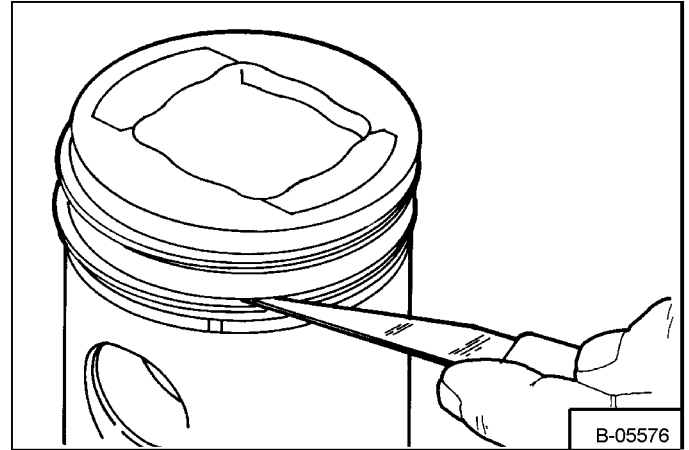


With the piston rings installed, check the groove clearance **[Figure 70-100-81]**.

Top Ring	Wedge
Second Ring Side Clearance	0.002 - 0.003 inch (0,05 - 0,09 mm)
Third Ring Side Clearance	0.0011 - 0.0029 inch (0,03 - 0,07 mm)

RECONDITIONING THE ENGINE (CONT'D)

Connecting Rod Inspection

Figure 70-100-82

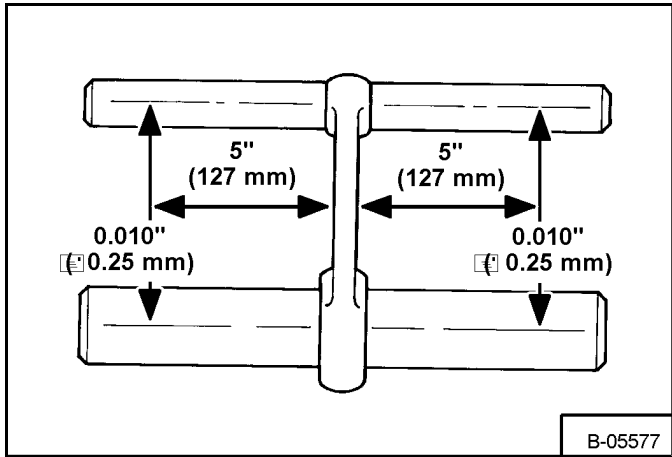

Checking the connecting rod for distortion [Figure 70-100-82].

NOTE: The large and small end bores must be square and parallel within the limits of ± 0.010 inch (0,25 mm).

Measure this 5.0 inch (127 mm) on each side of the connecting rod axis on a test fixture.

With the piston pin bushing installed the limit is reduced to ± 0.0025 inch (0,06 mm).

Check the pin bushing for wear or damage. Replace as needed.

Connecting Rod Bushing Replacement


Press out the old bushing. Clean the bore and remove any burrs.

Press in the new bushing making sure the oil feed holes line up.

Ream the bushing to get the proper clearance of 0.0009 - 0.0017 inch (0,023 - 0,044 mm) between the small end bushing and piston pin.

Piston And Connecting Rod Assembly

Figure 70-100-83

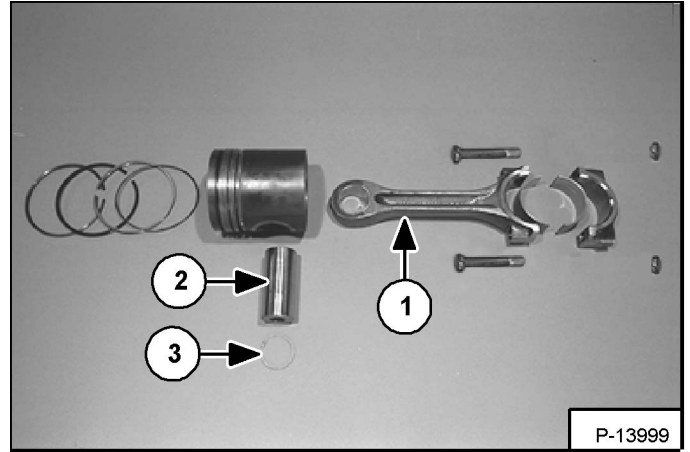


Install the connecting rod (Item 1), piston pin (Item 2) and two snap rings (Item 3) [Figure 70-100-83] in the piston.

Piston And Connecting Rod Installation

Apply a light coat of oil to the piston and piston rings.

NOTE: Make sure the piston ring end gaps are 120° apart.

Figure 70-100-84

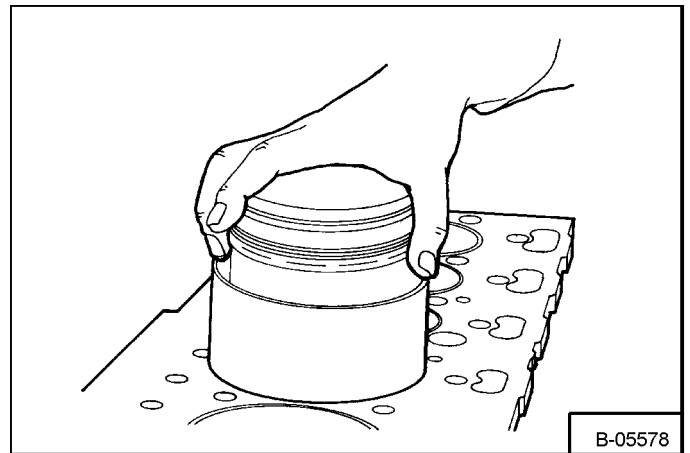


Install the ring compressor over the piston rings [Figure 70-100-84].

Carefully place the connecting rod in the cylinder and using a hammer handle, push the piston in the bore.

RECONDITIONING THE ENGINE (CONT'D)


Piston And Connecting Rod Installation (Cont'd)

Figure 70-100-85

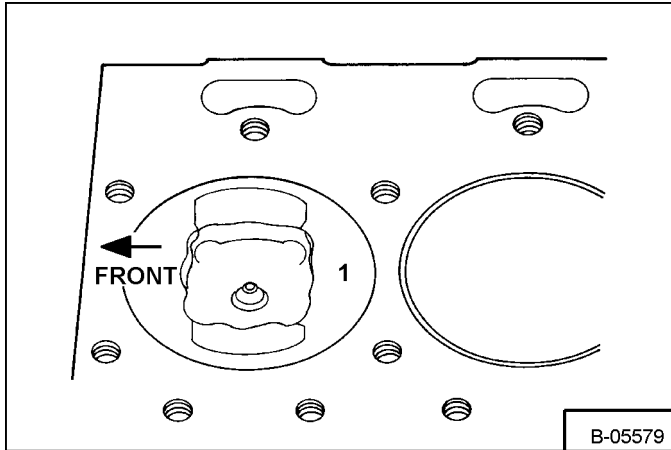


When the piston has cleared the cooling jet, rotate the piston assembly so that the arrow or *FRONT* mark is toward the front of the engine [Figure 70-100-85].

Figure 70-100-86

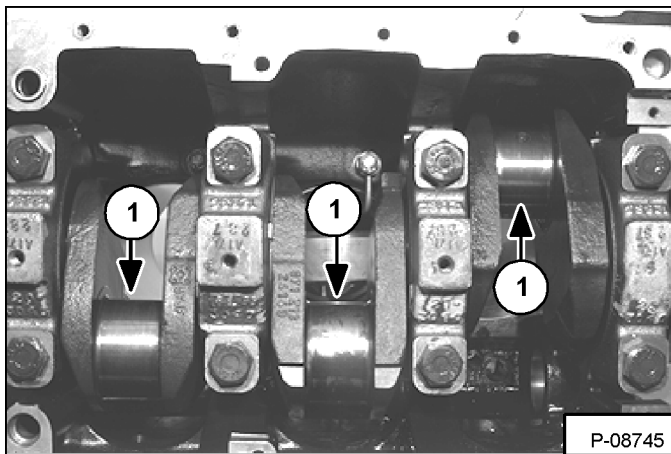

Clean the bearing surfaces and crank pin. Lubricate the crank pin (Item 1) [Figure 70-100-86] with clean engine oil.


Figure 70-100-87

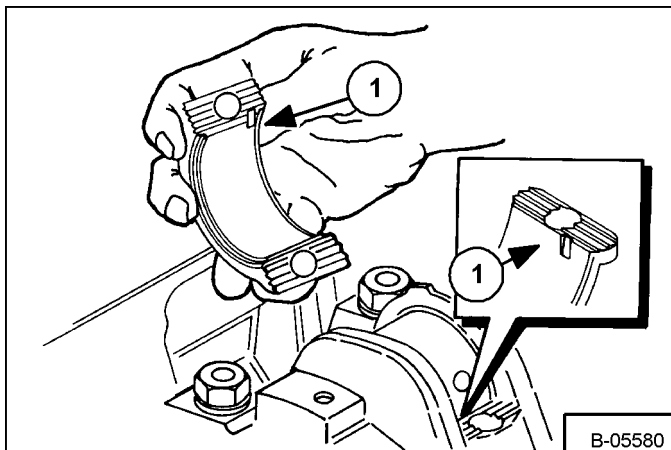

Install the upper and lower bearing shells in position making sure the locating tang (Item 1) [Figure 70-100-87] is in the correct position.

NOTE: New connecting rod nuts must be installed each time the rod caps are removed.

Figure 70-100-88

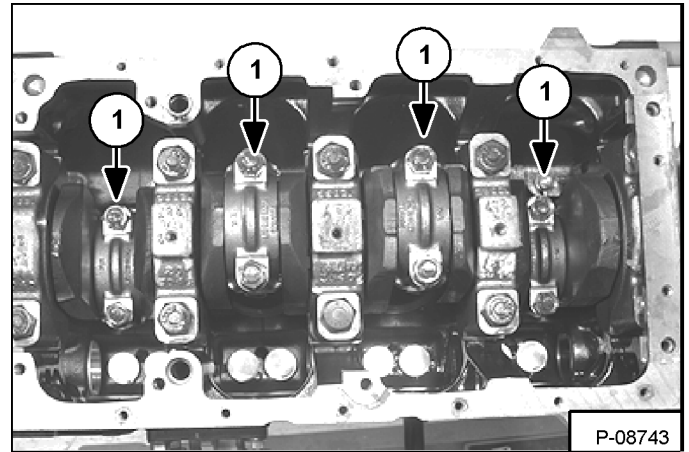


Install the caps (Item 1) [Figure 70-100-88] and nuts. Gradually tighten the nuts to 13 ft.-lbs. (18 Nm) torque. Tighten to a final torque of 52 ft.-lbs. (70 Nm). The fasteners must be tightened a further 120°.

Rotate the crankshaft. The crankshaft must rotate smoothly.

RECONDITIONING THE ENGINE (CONT'D)

Piston And Connecting Rod Installation (Cont'd)

Figure 70-100-89

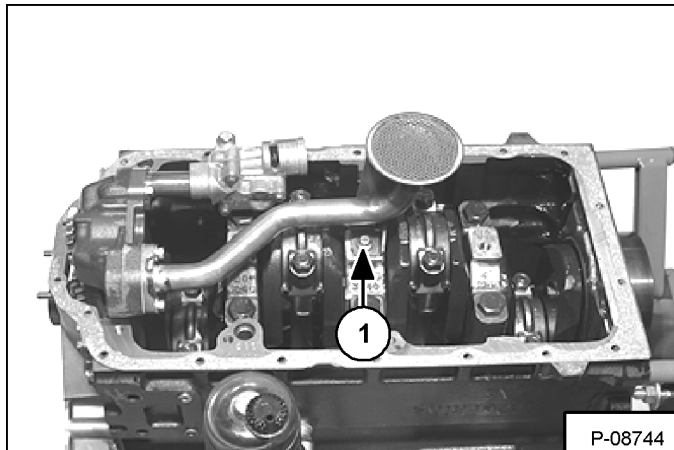

Install the oil pick up tube and screen (Item 1) [Figure 70-100-89].

Install the oil pan. (See Page 70-100-43.)

Checking Piston Height

Rotate the crankshaft until the piston is approximately at top dead center (T.D.C.).

Using a dial indication gauge, pre-load the plunger on the top surface of the block and zero the gauge.

Carefully move the dial gauge so that the plunger is on top of the piston above the axis of the piston pin.

Rotate the crankshaft to bring the piston to it's highest point. Record this gauge reading.

When installed, the top surface of the piston is slightly above the surface of the cylinder block.

The height above the surface of the block should be 0.008 to 0.014 inch (0,21 to 0,35 mm).

Install the cylinder head. (See page 70-100-8)

RECONDITIONING THE ENGINE (CONT'D)

Crankshaft And Bearings Description


The crankshaft is a chrome-moly forging which has five main journals. End play is controlled by two half thrust washers on both sides of the center main bearing.

The main bearings have steel backs with a aluminium/ tin bearing material. The main bearing caps are made of cast iron.

The front and rear oil seals are viton lip seals with a dust lip to the outside of the main lip.

Crankshaft And Bearings Removal

Figure 70-100-90

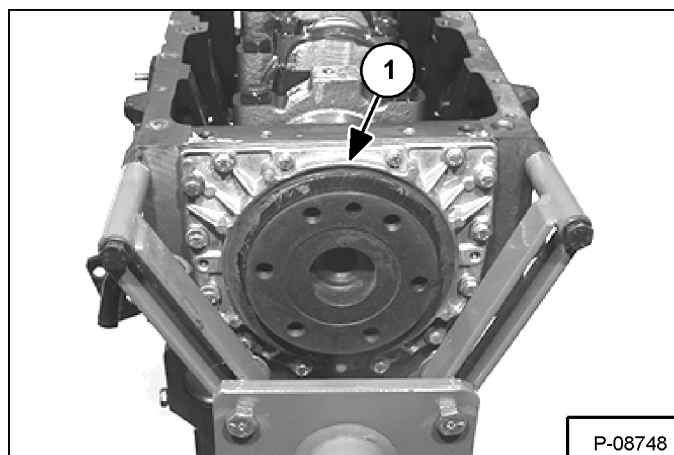

Remove the water pump. (See Page 70-100-41.)

Remove timing case cover. (See Page 70-100-19.)

Remove the fuel injection pump. (See page 70-70-1.)


Remove the timing gears and timing case. (See page 70-100-20.)

Remove the flywheel. (See page 70-90-1.)

Remove the pistons and connecting rods (See page 70-100-26), keeping them in order.

Remove the rear oil seal housing (Item 1) **[Figure 70-100-90]**.


Figure 70-100-91

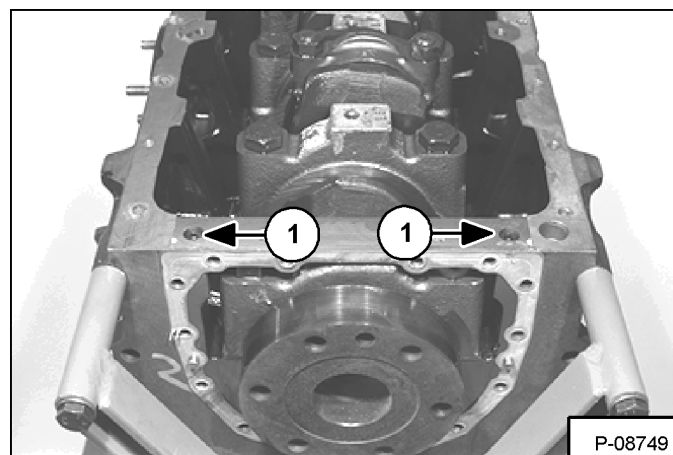

Remove the two bolts (Item 1) **[Figure 70-100-91]** retaining the bridge piece.

Remove the bridge piece.

Figure 70-100-92

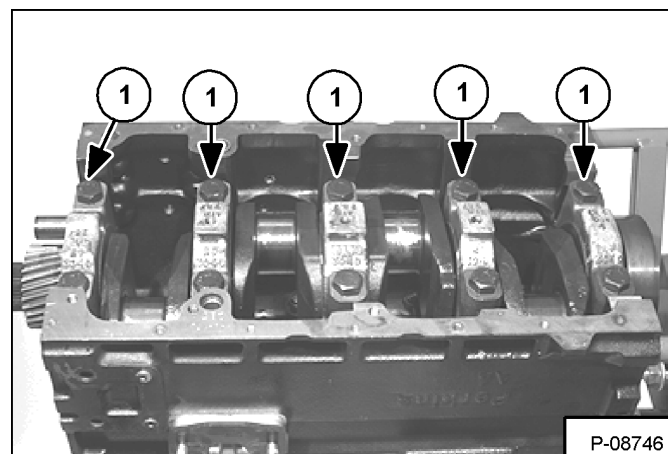


Mark the main bearing caps (Item 1) **[Figure 70-100-92]** for correct installation.

Remove the main bearing cap bolts.

RECONDITIONING THE ENGINE (CONT'D)

Crankshaft And Bearings Removal (Cont'd)

Figure 70-100-93

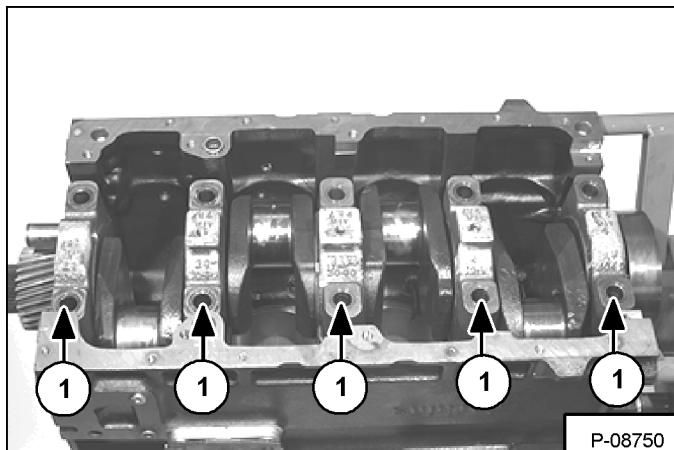


Remove the main bearing caps (Item 1) [Figure 70-100-93].

Figure 70-100-94




Remove the thrust washers from the sides of the center main bearing bore [Figure 70-100-94].

Figure 70-100-95

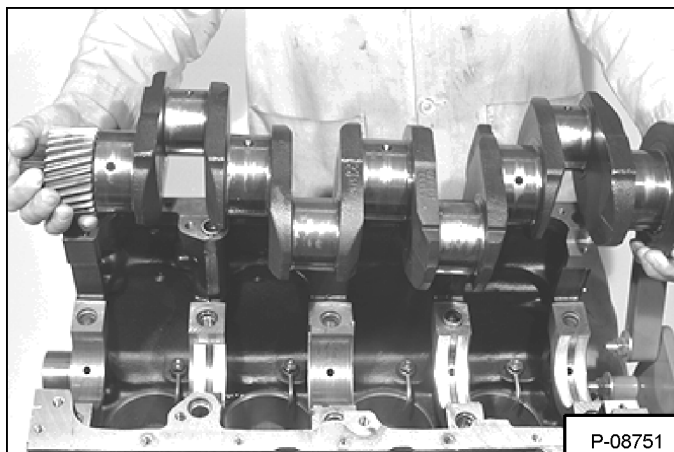

Remove the crankshaft [Figure 70-100-95].

Figure 70-100-96

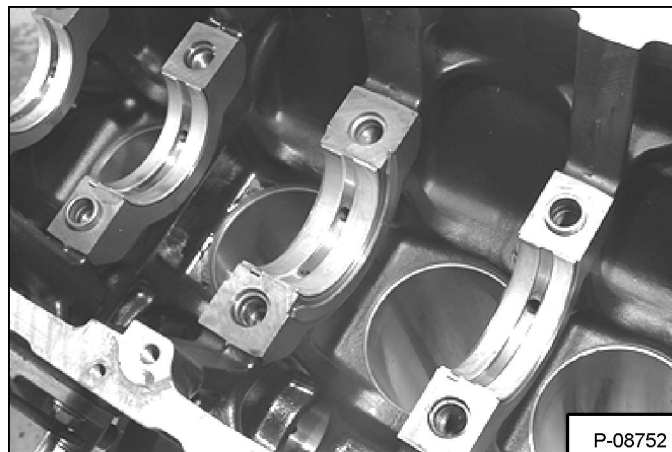


Remove the crankshaft bearings from the engine block [Figure 70-100-96].

Keep the bearings with their respective caps for installation.

RECONDITIONING THE ENGINE (CONT'D)

Inspection Of Crankshaft And Bearings

Figure 70-100-97

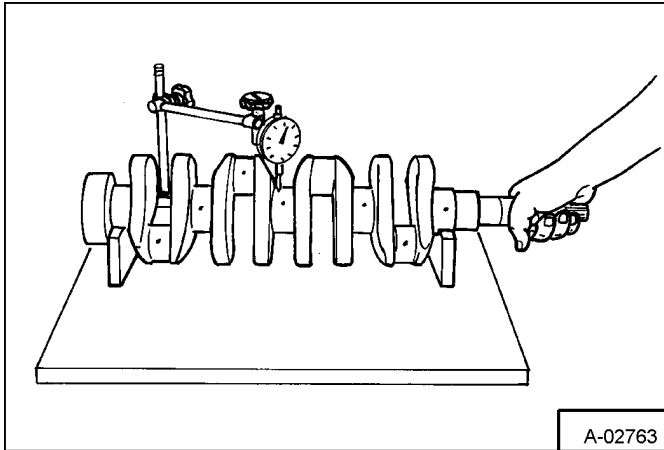

Check the crankshaft for wear [Figure 70-100-97]. The maximum wear and out of round of the crank journals is 0.0016 inch (0,04 mm).

The main journals and the crank pins of standard size can be machined 0.010 inch (0,25 mm) 0.020 inch (0,50 mm) or 0.030 inch (0,75 mm).

NOTE: See “ENGINE SPECIFICATIONS” on page SPEC-20-1 for more crankshaft specifications.


Check the oil clearance of the bearings.

All Main Bearings	0.0022 - 0.0046 inch (0,057 - 0,117 mm)
-------------------	---

Thrust Washer Thickness	
Standard	0.089 - 0.091 inch (2,26 - 2,31 mm)
Oversize	0.096 - 0.098 inch (2,45 - 2,50 mm)

Crankshaft And Bearings Installation


Figure 70-100-98

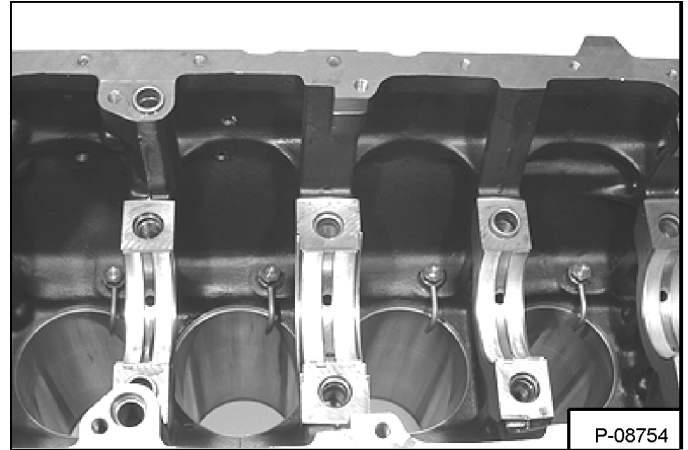

Clean the main bearing bores and install the upper bearing shells in position. Lubricate the bearings with clean engine oil [Figure 70-100-98].

NOTE: Only the upper half of the bearings has oil lubrication holes and must be installed in the cylinder block.

Figure 70-100-99

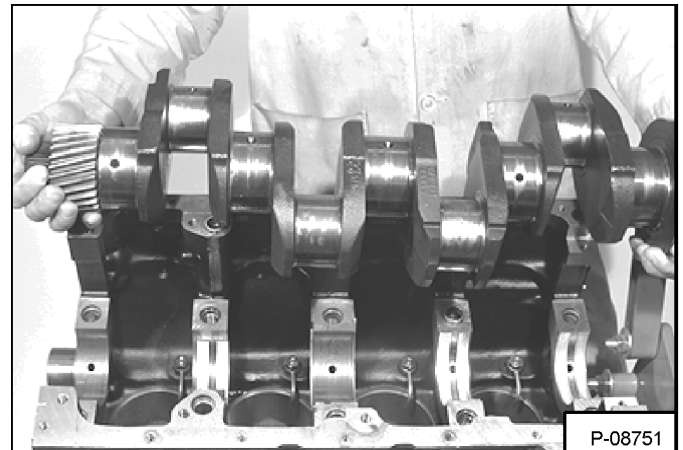

Make sure the main journals are clean and install the crankshaft in the block [Figure 70-100-99].

Make sure the locating pins for the main caps are in position.

RECONDITIONING THE ENGINE (CONT'D)**Crankshaft And Bearings Installation (Cont'd)****Figure 70-100-100**

Clean and install the upper and lower thrust bearings on each side of the center main bearing **[Figure 70-100-100]**.


Clean the main caps and install the bearings.

Lubricate the bearings with clean engine oil.


Install the main cap bolts and torque in steps working from the center outward.

Step 1	65 ft.-lbs. (88 Nm)
Step 2	125 ft.-lbs. (170 Nm)
Step 3	185 ft.-lbs. (250 Nm)

Clean the bridge piece and apply a bead of LOCTITE #518 in the corners and around the thread holes on the block.

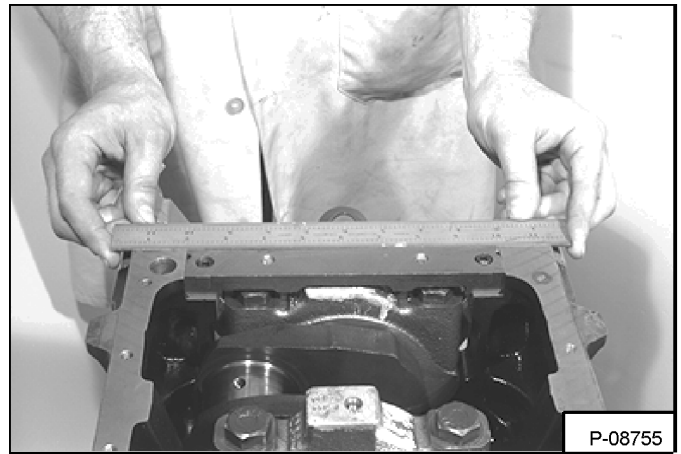Figure 70-100-101

Install the bridge piece, and using a straight edge, align the bridge with the cylinder block **[Figure 70-100-101]**. Tighten the bridge retaining bolts to 12 ft.-lbs. (16 Nm) torque.

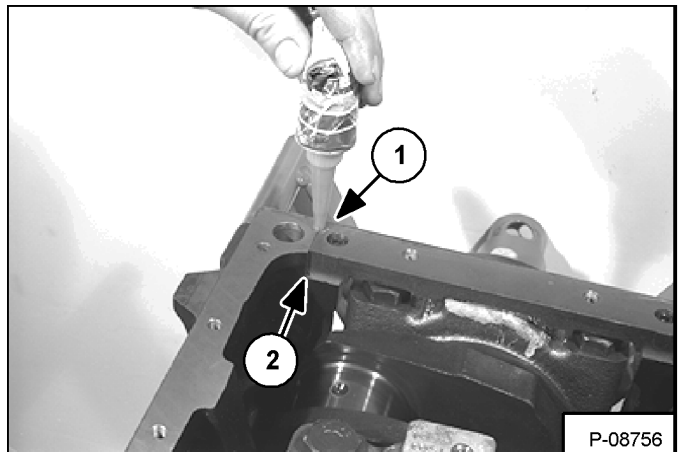Figure 70-100-102

Inject LOCTITE #518 into the groove (Item 1) at each end of the bridge piece. Continue to inject sealant until it leaves the lower groove (Item 2) **[Figure 70-100-102]** at the front and rear of the piece.

RECONDITIONING THE ENGINE (CONT'D)

Rear Oil Seal Removal

Remove the bolts that retain the seal housing. Remove the housing.

Inspect the seal for wear or damage. Replace even if there is only a small nick or scratch.

Inspect the crankshaft flange for damage.


Clean the block, seal housing, and crankshaft.

Rear Oil Seal Housing Positioning

The tool listed will be needed to do the following procedure;

MEL1532 - Rear Crankshaft Seal Installation Tool

Figure 70-100-103

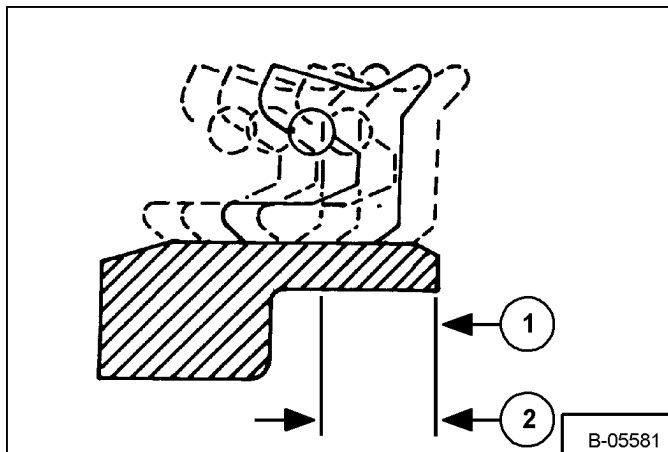

The seal can be installed from flush with the housing face (Item 1) [Figure 70-100-103] to 0.27 inch (6,86 mm) (Item 2) [Figure 70-100-103] back from the housing face. Install seal so that the seal lip does not line up with any worn areas on the crankshaft.

Figure 70-100-104




Install the seal in the seal housing using the seal installation tool. Seat the seal to the correct depth [Figure 70-100-104].

Rear Oil Seal Installation

Install the new seal in the housing.

Figure 70-100-105

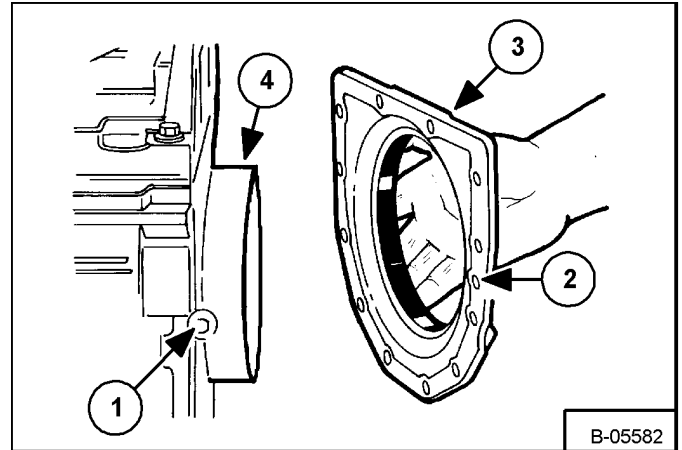

Make sure the dowels (Item 1) [Figure 70-100-105] are in the block correctly.

Install the new gasket (Item 2) on the housing (Item 3) [Figure 70-100-105].

Install the seal replacer tool (PD145-3) (Item 4) [Figure 70-100-105] on the crankshaft.


Lubricate the seal, tool, and crankshaft with clean engine oil.

Carefully push the seal and housing (Item 3) [Figure 70-100-105] over the tool and crankshaft and into position on the dowels. Remove the tool.

RECONDITIONING THE ENGINE (CONT'D)

Rear Oil Seal Installation (Cont'd)

Figure 70-100-106

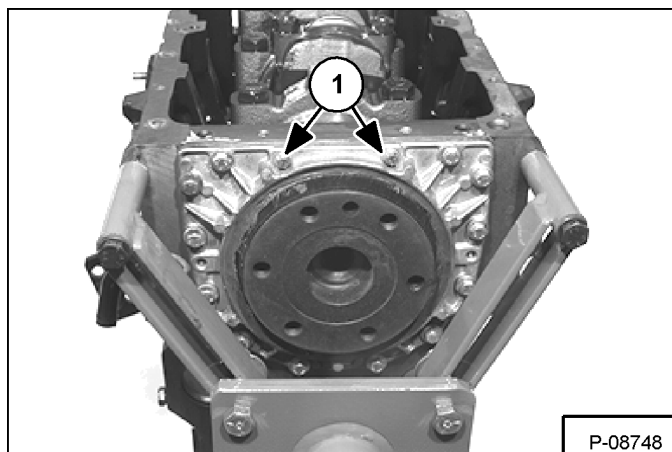


Tighten the bolts (Item 1) [Figure 70-100-106] to 16 ft.-lbs. (22 Nm) torque.

Checking Crankshaft End Play

The axial movement of the crankshaft is controlled by two half thrust washers placed on both sides of the center main bearing.


Figure 70-100-107

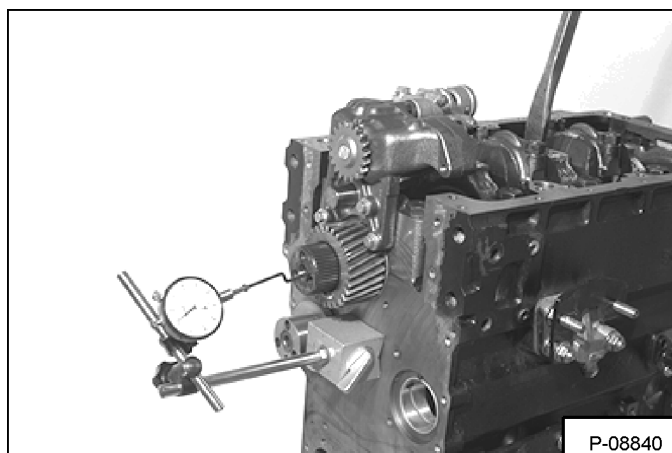

Install a dial indicator on the end of the crankshaft [Figure 70-100-107].

Pry the crankshaft to the rear of the cylinder block and set the dial indicator to zero.

Figure 70-100-108

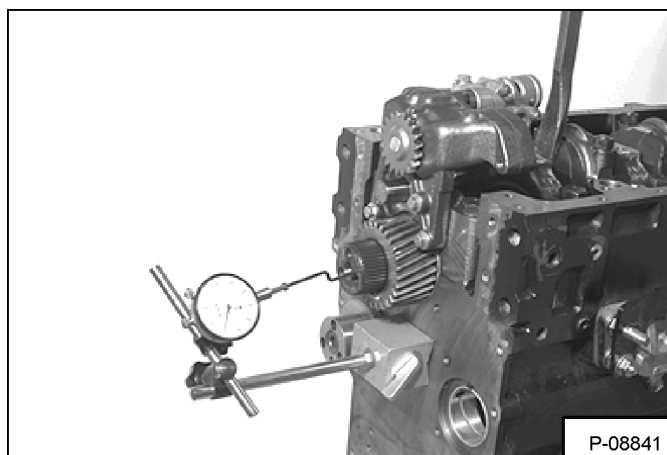


Remove the pry bar and record the dial indicator reading [Figure 70-100-108].

The end play specification is 0.002 - 0.015 inch (0,05 - 0,38 mm) maximum.

If end play is excessive there is over size thrust washers available to reduce movement.

Figure 70-100-109

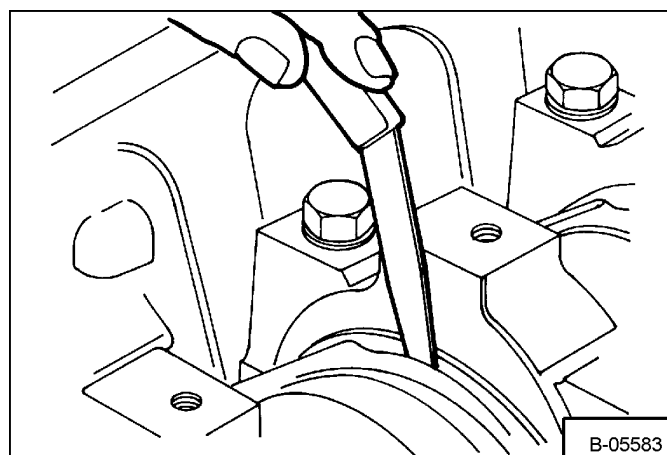


The end play can also be checked using a feeler gauge [Figure 70-100-109].

Pry the crankshaft to the rear of the cylinder block and measure the distance between the thrust washer and crankshaft.

RECONDITIONING THE ENGINE (CONT'D)

Cooling System Description

Figure 70-100-110

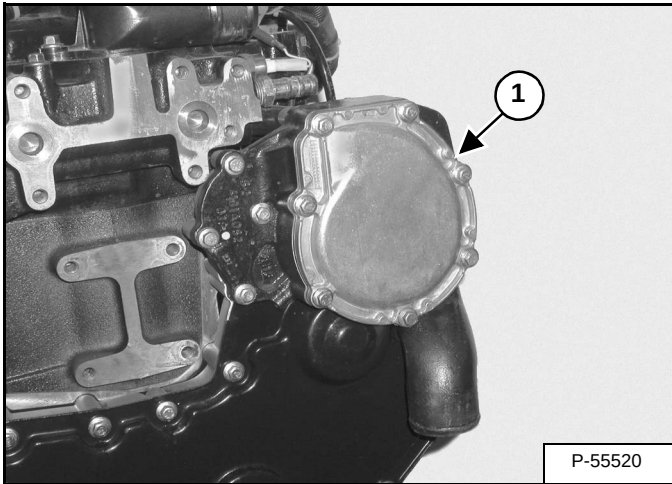


Coolant from the radiator passes through the centrifugal water pump (Item 1) [Figure 70-100-110], to assist the flow of the coolant through the system.

The water pump is gear driven from the gear off the fuel injection pump.

From the water pump, the coolant passes through a passage in the timing case.


The coolant passes through a passage in the left side of the cylinder block to the rear of the cylinder block.

Figure 70-100-111

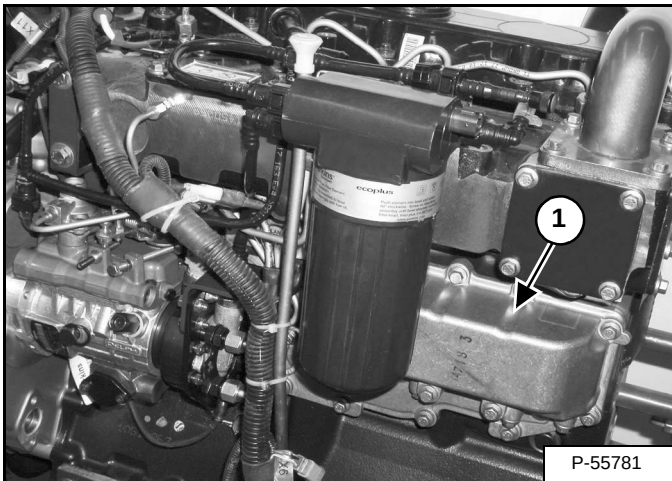

The oil cooler (Item 1) [Figure 70-100-111] is installed on the left side of the engine. Coolant from the by-pass connection at the rear of the coolant pump passes through a pipe to the oil cooler.

Figure 70-100-112

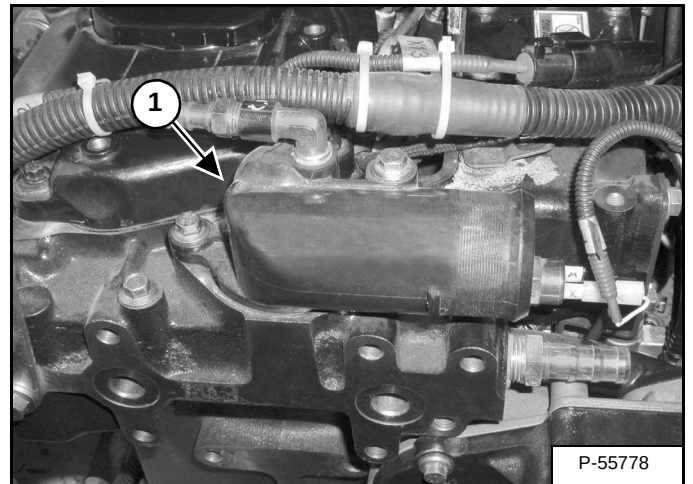

The coolant then passes around the cylinders and in the cylinder head. The coolant leaves the cylinder head at the front and passes into the thermostat housing (Item 1) [Figure 70-100-112].


If the thermostat is closed, the coolant goes directly through a by-pass to the inlet side of the water pump. If the thermostat is open, the thermostat closes the by-pass and the coolant passes to the radiator.

RECONDITIONING THE ENGINE (CONT'D)

Thermostat Removal and Installation

Drain the engine coolant until it is below the thermostat level.


Figure 70-100-113

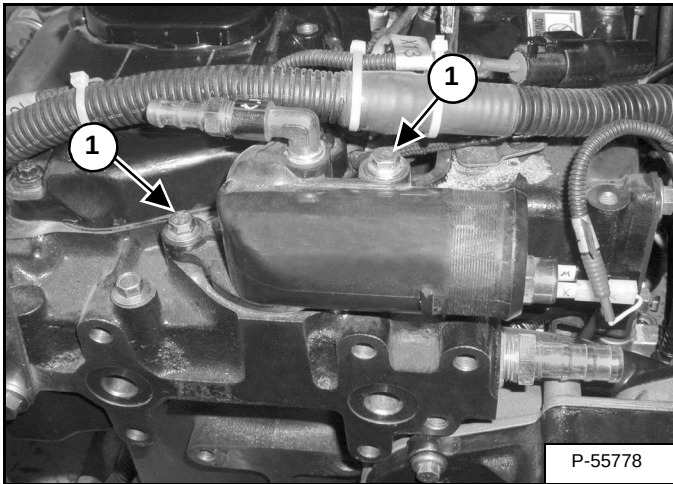

Remove the bolts (Item 1) [Figure 70-100-113] and thermostat housing.

Installation: Make sure all gasket surfaces are clean. Replace the gasket before installing the thermostat housing.

Figure 70-100-114

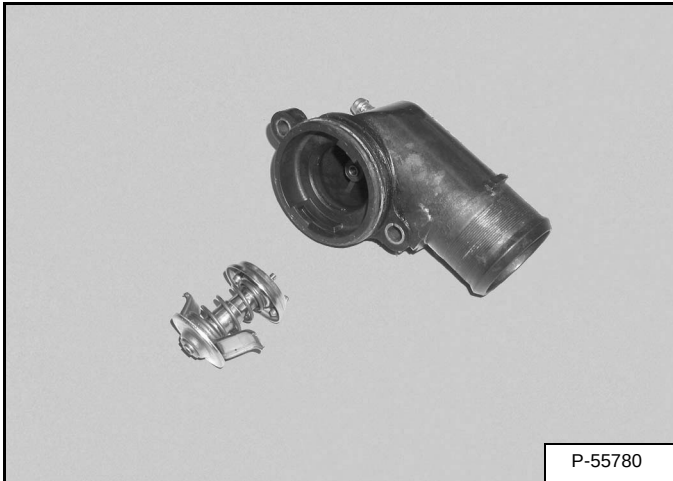

Remove the housing and thermostat [Figure 70-100-114].

Thermostat Testing

Hang the thermostats in a suitable container filled with coolant.


Heat the coolant gradually. Use a thermometer to check the temperature when it starts to open and when it's fully open.

If the thermostats do not operate correctly they must be replaced.

NOTE: Identify thermostat temperature by the stamping on the by-pass valve.

Lubricating Oil Cooler Removal And Installation

Figure 70-100-115

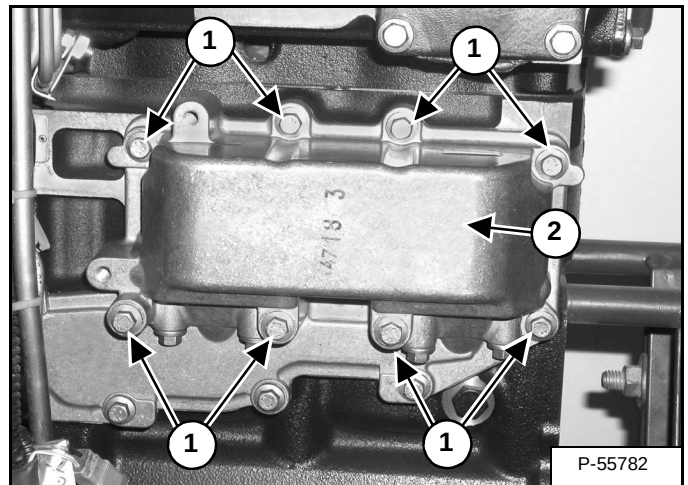

Remove the eight mounting bolts (Item 1) and remove the cooler (Item 2) [Figure 70-100-115].


Installation: Check oil level using the dipstick add oil as needed.

RECONDITIONING THE ENGINE (CONT'D)

Water Pump Removal

Remove the coolant from the cooling system.

Figure 70-100-116

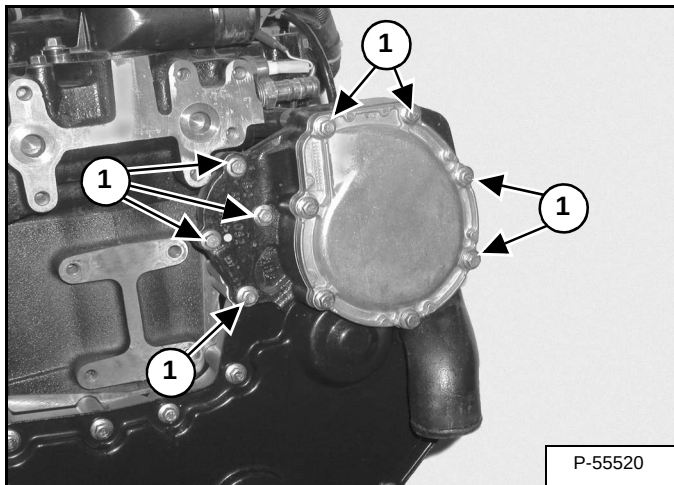

Remove the mounting bolts (Item 1) **[Figure 70-100-116]** from the water pump.

Remove the water pump.

Water Pump Installation

Clean the gasket surfaces and replace the gasket.


Install the water pump in the timing cover. The pump is a tight fit in the cover and is pulled into position by tightening the bolts evenly.

Install the water pump bolts (Item 1) **[Figure 70-100-116]** and tighten to 16 ft.-lbs. (72 Nm) torque.

RECONDITIONING THE ENGINE (CONT'D)

Engine Lubrication System Description

Figure 70-100-117

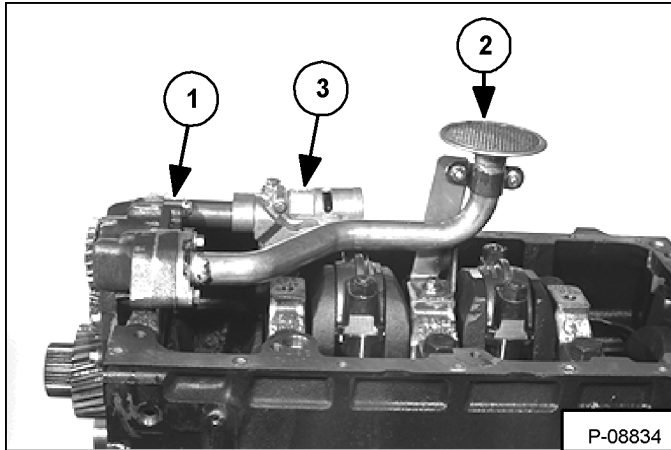


Pressure lubrication is supplied by a rotor type pump (Item 1) [Figure 70-100-117] which is driven through an idler gear from the crankshaft gear.

Engine oil from the oil pan sump passes through a strainer (Item 2) [Figure 70-100-117] and pipe to the suction side of the pump.


The engine oil passes from the outlet side of the pump through a pipe to a relief valve (Item 3) [Figure 70-100-117], which is installed in the bottom left side of the cylinder block. The relief valve opens if the oil pressure is too high; this allows some of the engine oil to return to the sump.

Figure 70-100-118

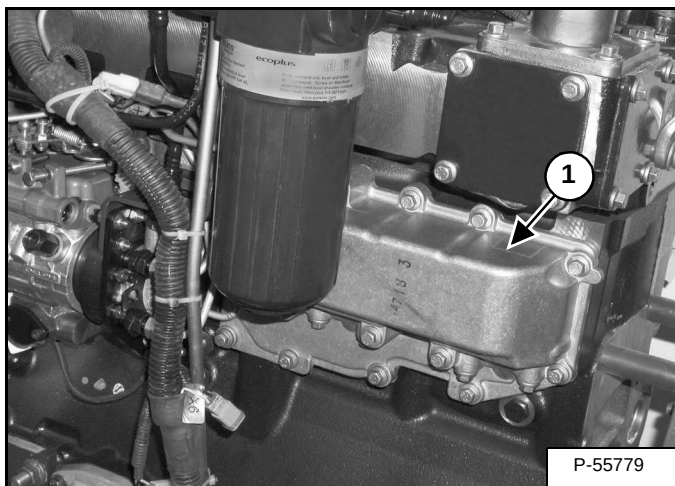

From the relief valve, engine oil passes to a plate type oil cooler (Item 1) [Figure 70-100-118].

Figure 70-100-119

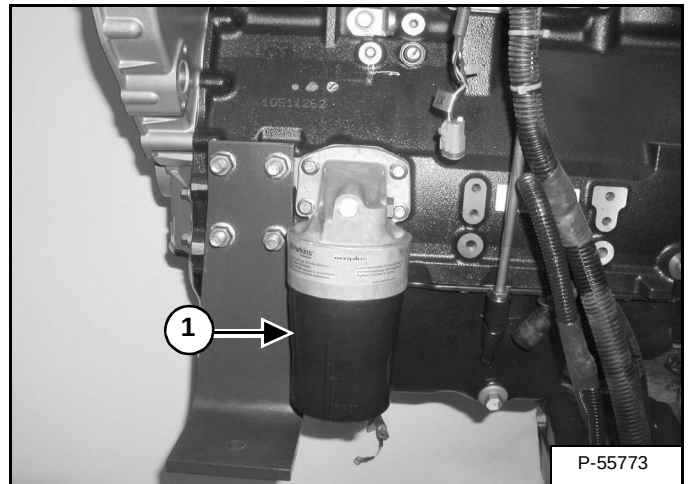

The engine oil passes from the filter (Item 1) [Figure 70-100-119] to the cylinder block.

The oil passes to the main bearings of the crankshaft and through passages in the crankshaft to the big end bearings. The pistons and the cylinder bores are lubricated by splash and oil mist.

Engine oil passes from the main bearings through passages in the cylinder block to the journals of the camshaft. Engine oil passes from the center journal of the camshaft through a passage in the cylinder block and cylinder head to a restriction in the pedestal of the rocker shaft, at a reduced pressure, to feed the rocker bushing. The oil passes through a passage in the rocker shaft to the bearings of the rocker levers. The valve stems, valve springs and the tappets are lubricated by splash and oil mist.


The hub of the idler gear is lubricated by oil from the cylinder block and the timing gears are splash lubricated.

The turbocharger is lubricated by oil after the filter. Oil is supplied from a connection on the right side of the cylinder block through an external pipe to the turbocharger. The oil passes through the turbocharger and returns through a pipe to the oil pan sump.

RECONDITIONING THE ENGINE (CONT'D)

Engine Lubrication System Description (Cont'd)


Figure 70-100-120

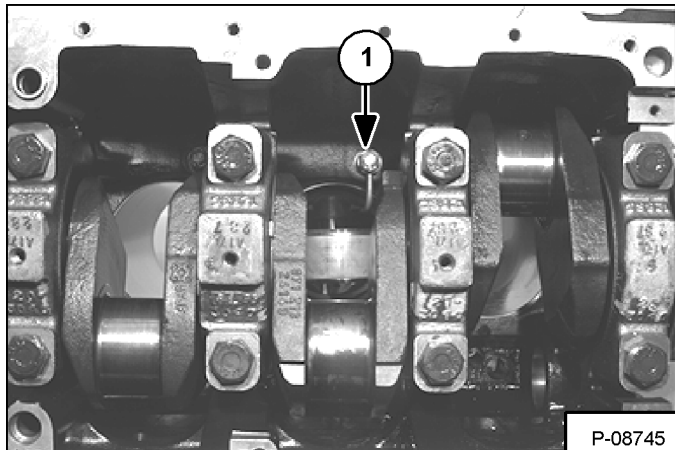

Turbocharged engines have piston cooling jets (Item 1) [Figure 70-100-120]. These jets are connected to the oil pressure rail and spray lubricating oil inside the pistons to keep them cool.

Oil Filter Adapter Removal And Installation

Figure 70-100-121

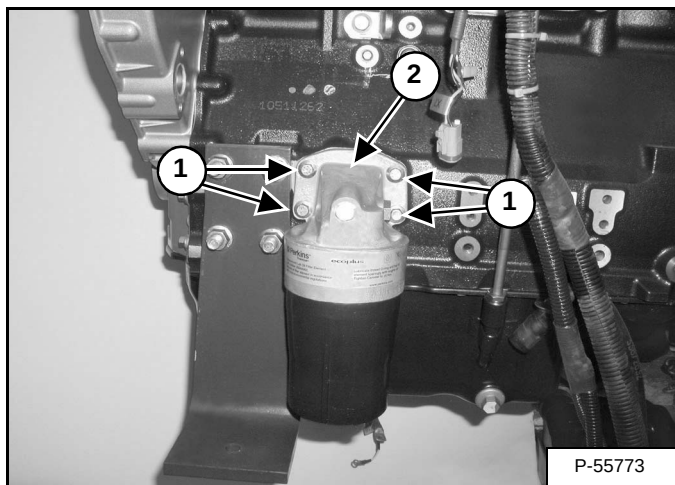

Remove the oil filter.

Remove the four bolts (Item 1) and the filter adapter (Item 2) [Figure 70-100-121].


Clean the filter adapter and the block mounting surfaces.

Using a new gasket, install the adapter (Item 2) [Figure 70-100-121] on the block.

Install the oil filter.

Oil Pan Removal And Installation

Figure 70-100-122

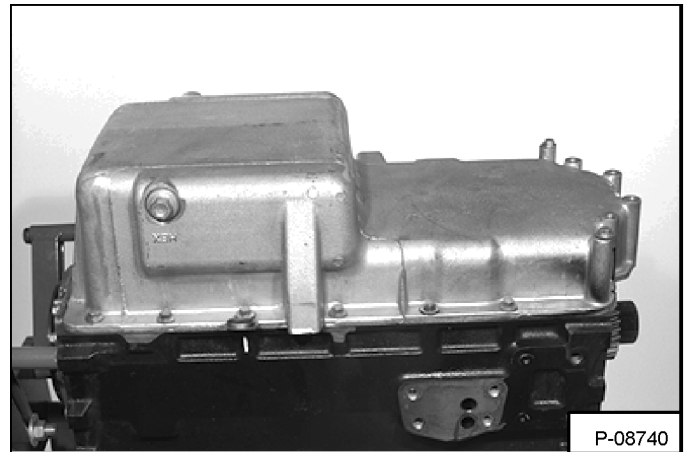

Remove the oil pan retaining bolts [Figure 70-100-122].

Remove the pan and gasket.

Clean the pan in solvent and dry with compressed air.


Clean the block surface.

Installation: Place a new gasket on the oil pan. Place two bolts on each side to position the oil pan correctly. Install the remaining bolts. Tighten the bolts to 16 ft.-lbs. (22 Nm) torque [Figure 70-100-122].

RECONDITIONING THE ENGINE (CONT'D)

Oil Screen And Pick-up Tube

Figure 70-100-123

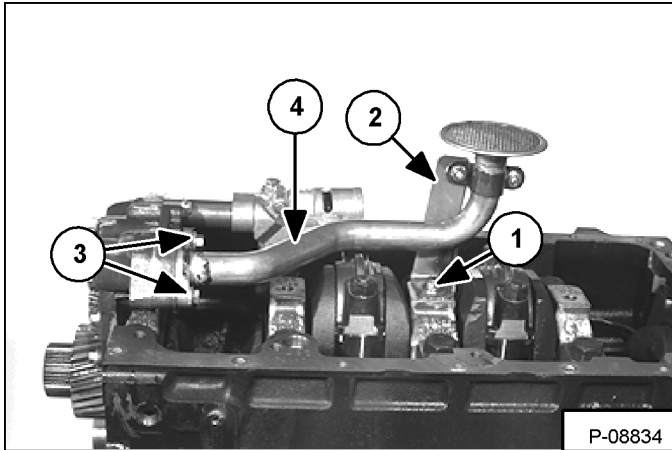

Remove the bolt (Item 1) that holds the bracket (Item 2) [Figure 70-100-123] to the main bearing cap.

Remove the bolts (Item 3) [Figure 70-100-123] from the pick-up tube flange.

Remove the pick-up tube (Item 4) [Figure 70-100-123] and gasket.

Wash the assembly in solvent and dry with compressed air.

Check the tube and strainer for cracks or other damage. Replace as necessary.

Loosely assemble the bracket (Item 2) [Figure 70-100-123] with the pick-up tube to the main bearing cap.

Install the pick up tube gasket and mounting bolts (Item 3) [Figure 70-100-123].

Tighten the mounting bolts to 16 ft.-lbs. (22 Nm) torque.

Tighten the bolt (Item 1) [Figure 70-100-123] for the pick-up tube bracket.


Tighten the bolt to 16 ft.-lbs. (22 Nm) torque.

Oil Pump Removal

NOTE: The oil pump has a channel in the body of the pump. Oil from the front main bearing passes down the channel of the pump to an oil hole in the idler shaft for lubrication of the idler shaft bushing.

Remove the oil pan. (See page 70-100-43.)

Figure 70-100-124

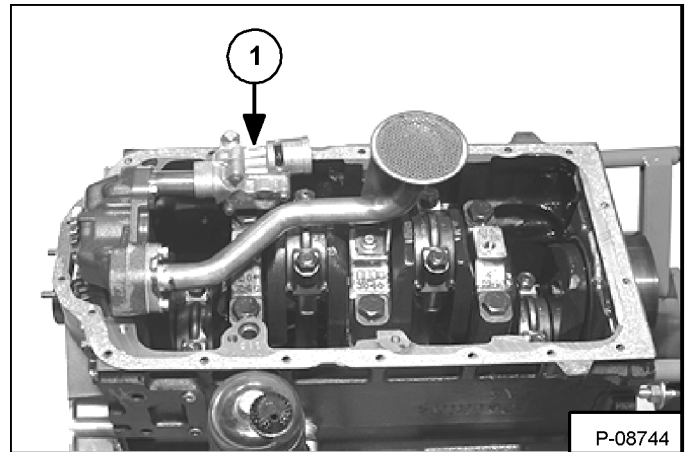

Remove the oil pressure relief valve (Item 1) [Figure 70-100-124].


Remove the oil screen and pick-up tube.

The oil pump is installed on the number 1 main bearing cap.

NOTE: The pump can be removed with the main bearing cap if a spanner wrench is available that will allow the torque to be applied directly to the main cap bolts.

If there is no spanner wrench, the front timing case cover must be removed. (See page 70-100-19.)

Figure 70-100-125

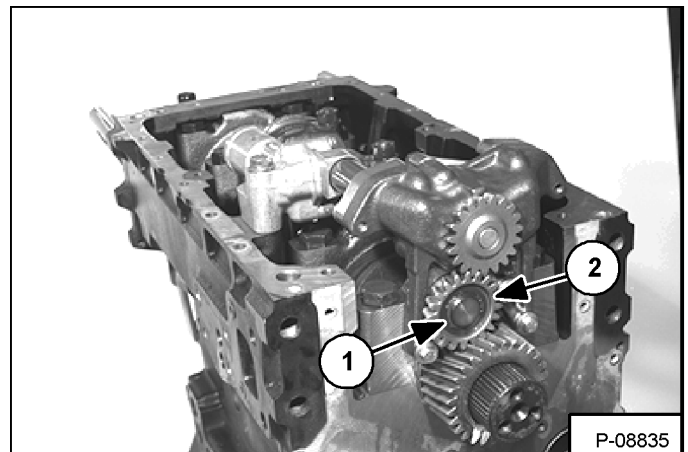


Remove the snap ring (Item 1), idler gear (Item 2) [Figure 70-100-125], and washer.

Remove the bolts and oil pump.

RECONDITIONING THE ENGINE (CONT'D)

Oil Pump Installation

Figure 70-100-126

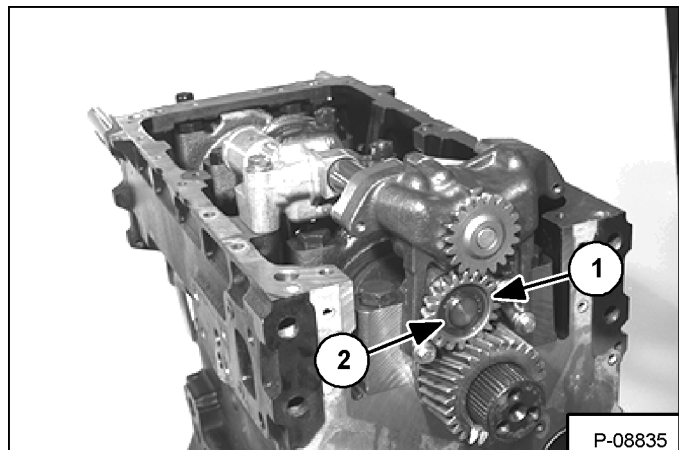

Fill the pump with engine oil.

If the number one main cap was removed, reinstall and tighten to 185 ft.-lbs. (250 Nm) torque.

Install the pump on the main cap and tighten to 16 ft.-lbs. (22 Nm) torque.


Check the idler gear and bushing for wear.

Lubricate with clean engine oil and install the washer, idler gear (Item 1) and snap ring (Item 2) [Figure 70-100-126].

Check the backlash between oil pump and idler gears.

There must be a minimum of 0.003 inch (0,076 mm).

Figure 70-100-127

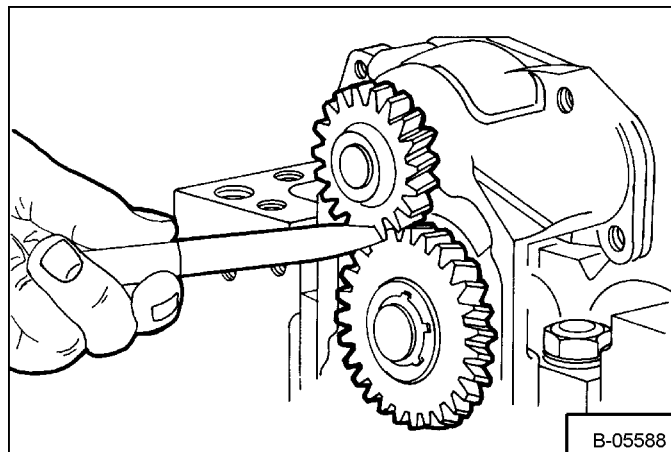

Check that there is a minimum of 0.003 inch (0,076 mm) backlash between the idler gear and oil pump gear [Figure 70-100-127].

End play for the idler gear should be 0.0019/0.0108 inch (0,050/0,275 mm).

Install the oil screen and pick-up tube. (See page 70-100-44.)


Install the pressure relief valve.

Install the oil pan. (See page 70-100-43.)

RECONDITIONING THE ENGINE (CONT'D)

Oil Pump Disassembly And Assembly

Figure 70-100-128

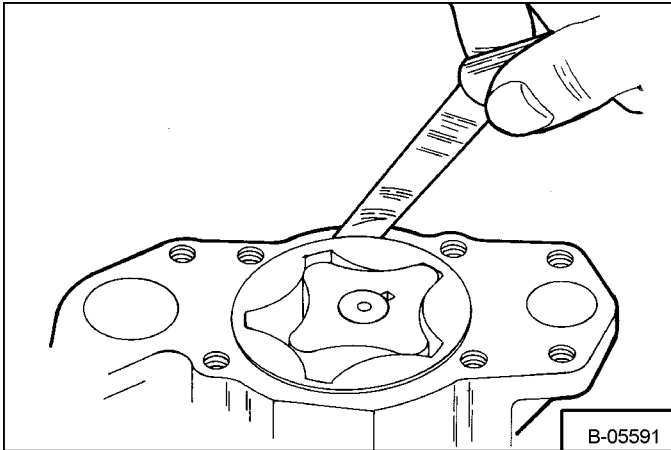

NOTE: If any part is worn enough to effect performance replace the complete oil pump.


Remove the cover of the oil pump.

Remove the outer rotor and thoroughly clean. Check for cracks or other damage.

Install the outer rotor and check the outer rotor to body clearance [Figure 70-100-128].

Clearance between the outer rotor and body must be 0.006-0.013 inch (0,15-0,34 mm).


Figure 70-100-129

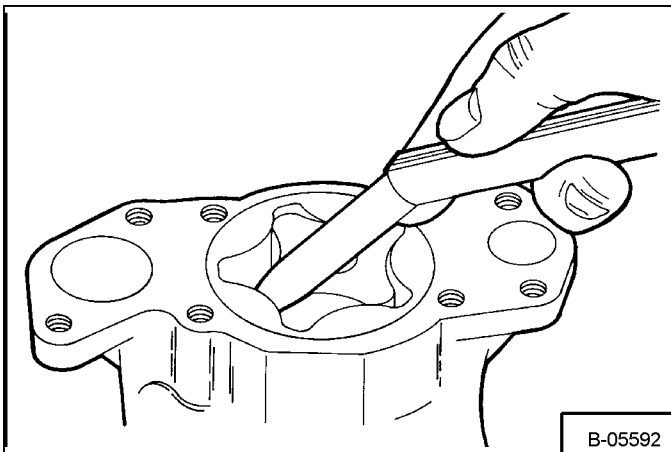

Check the inner rotor to outer rotor clearance [Figure 70-100-129].

Clearance between the inner rotor and outer rotor must be 0.0015 - 0.005 inch (0,04-0,13 mm).

Figure 70-100-130

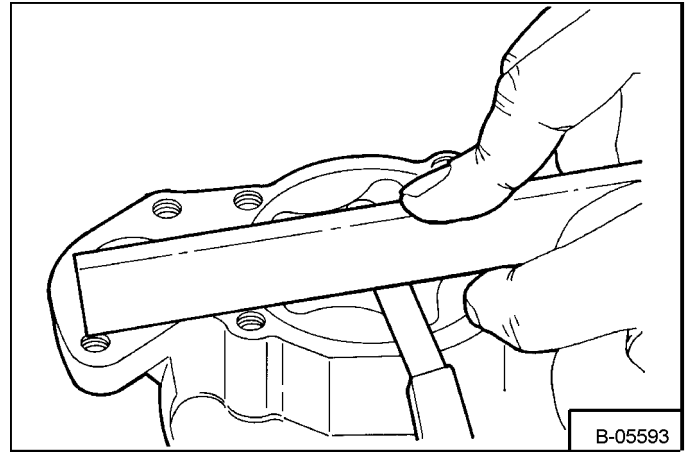


Check the rotor end play [Figure 70-100-130].

Rotor end play must be 0.001-0.004 inch (0,03-0,10 mm).

Install the cover and tighten the bolts to 16 ft.-lbs. (22 Nm) torque.

Oil Pressure Relief Valve Disassembly And Assembly

Figure 70-100-131

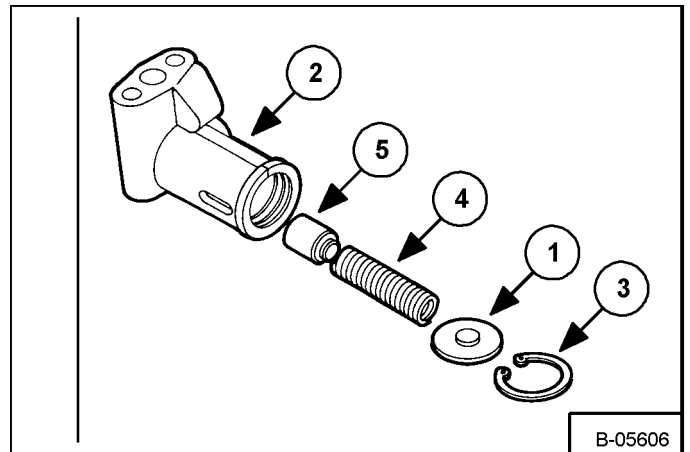

Press the end plate (Item 1) in the valve body (Item 2) and remove the snap ring (Item 3) [Figure 70-100-131].

Remove the end plate (Item 1), spring (Item 4), and plunger (Item 5) from the body (Item 2) [Figure 70-100-131].


Clean the parts in solvent and dry with compressed air.

Lubricate the bore of the valve body (Item 2), plunger (Item 5) and the end plate (Item 1) [Figure 70-100-131] with clean engine oil before assembly.

RECONDITIONING THE ENGINE (CONT'D)

Engine Block Description


Figure 70-100-132

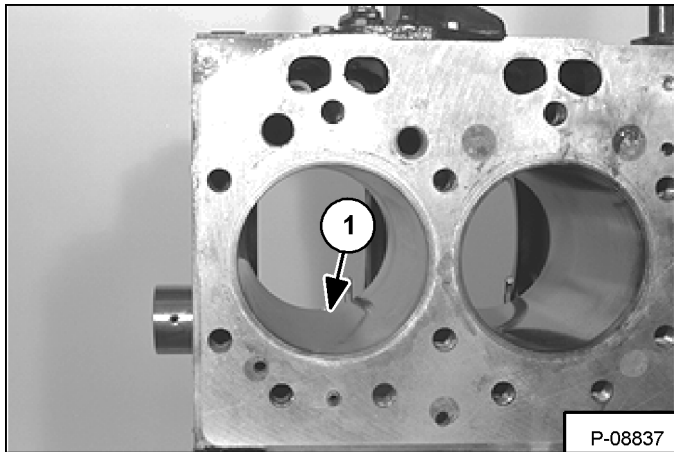

The cylinder block is made of cast iron and provides full length support for the dry liners.

The liners (Item 1) [Figure 70-100-132] are made of cast iron. Production liners are a press fit and service liners are a transition fit. Both types of liners are honed with silicon carbide tools to a specially controlled finish to ensure long engine life and low oil consumption.

Figure 70-100-133

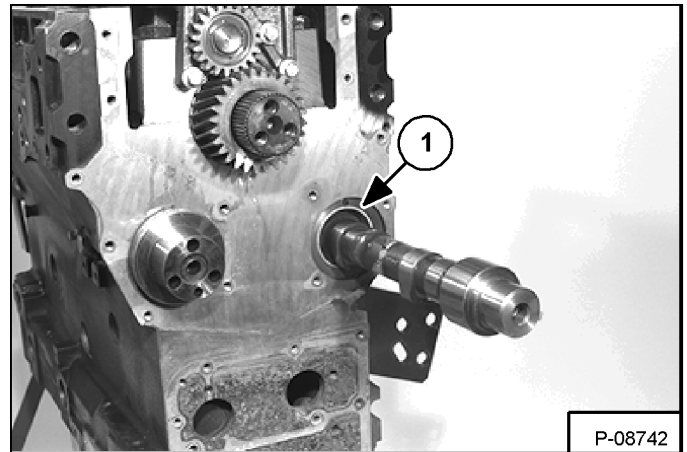

A bushing (Item 1) [Figure 70-100-133] is installed in the cylinder block for the front camshaft journal while the other camshaft journals run directly in the block.

Engine Block Disassembly And Assembly

Remove the water pump. (See page 70-100-41.)

Remove the fuel injection pump. (See page 70-70-1)

Remove the oil cooler. (See page 70-50-1)

Remove the oil filter and oil pan. (See page 70-100-43)

Remove the turbocharger. (See page 70-100-2)

Remove the lift fuel pump. (See page 70-70-10)

Remove the starter. (See page 60-40-1)

Remove the cylinder head. (See page 70-100-6)

Remove the timing case and gears. (See page 70-100-20)

Remove the piston and connecting rod assemblies. (See page 70-100-26)

Remove the camshaft and tappets. (See page 70-100-23)


Remove the engine mounting bracket and flywheel. (See page 70-60-1)

Remove the rear oil seal and the crankshaft. (See page 70-100-37)

RECONDITIONING THE ENGINE (CONT'D)


Piston Cooling Jet Removal

Figure 70-100-134

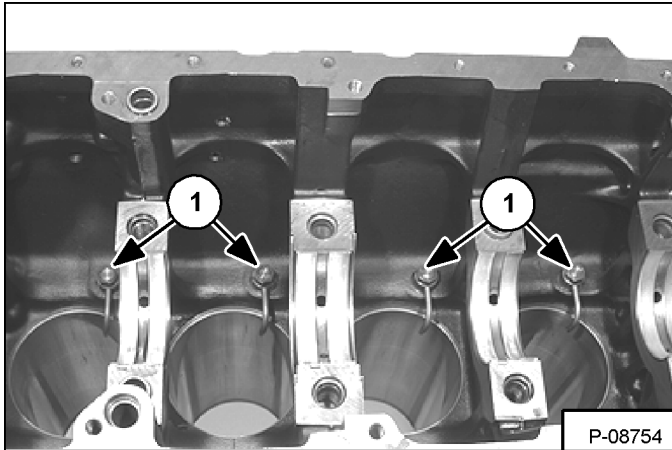

Remove the piston cooling jet assembly (Item 1) [Figure 70-100-134] from the engine block.

Figure 70-100-135

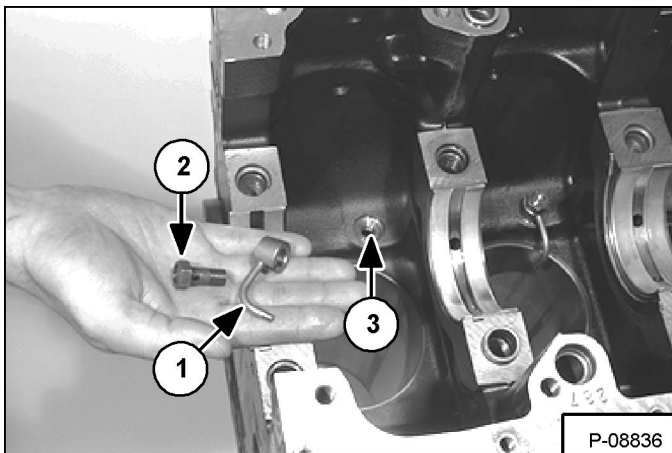

Inspect the jet tube (Item 1), mount bolt (Item 2) and alignment pin (Item 3) [Figure 70-100-135] for damage. Replace as needed.

Piston Cooling Jet Installation


Clean all parts in solvent and dry with compressed air.

Install the cooling jet (Item 1) being sure it is seated correctly on the dowel (Item 3) [Figure 70-100-135] in the block.

Install the mounting bolt (Item 2) [Figure 70-100-135] and tighten to 7 ft.-lbs. 9 Nm) torque.

Piston Cooling Jet Alignment

Figure 70-100-136

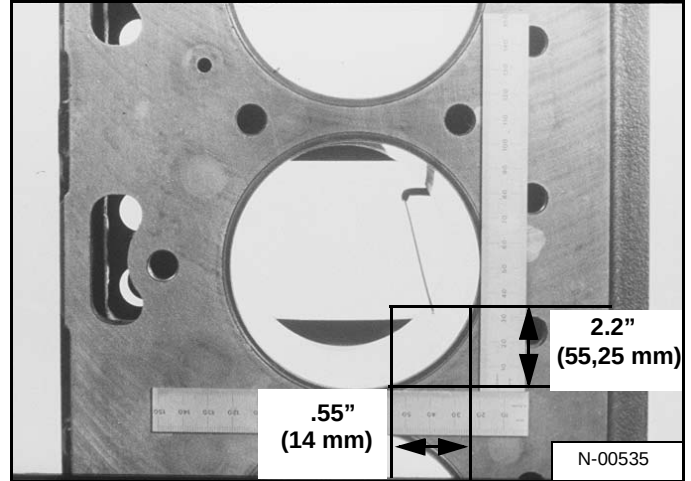

Insert a 0.067 inch (1,70 mm) diameter rod of suitable length, in the jet.

The tip of the rod must extend out the top of the cylinder in an area 2.2 inch (55,25 mm) in height and .55 inch (14 mm) of width to provide proper cooling jet alignment to cool the pistons [Figure 70-100-136].

Inspection

Clean all passages of coolant and oil.

Check the block for cracks or other damage.


NOTE: The top face of the block must not be machined. This will affect liner flange depth and piston height above the top face of the cylinder block.

Check the camshaft bushing for wear. If the bushing needs to be replaced, press out old one. Press a new one in, insuring that the oil holes line up.

RECONDITIONING THE ENGINE (CONT'D)

Cylinder Liner Inspection

Figure 70-100-137

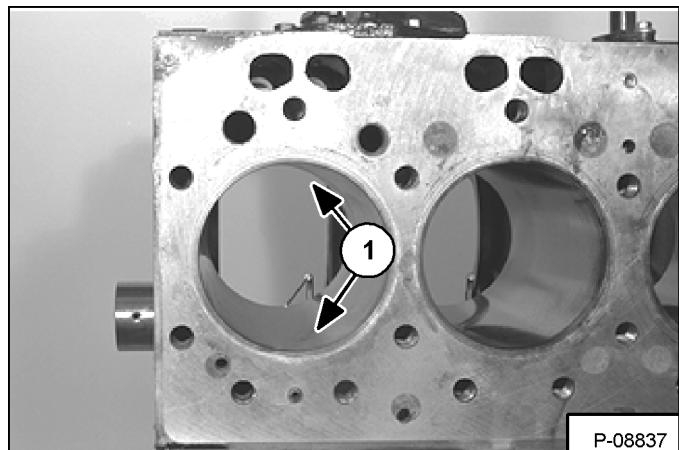


The condition of a cylinder liner is decided by:

- The amount and location of polished areas.
- Wear.
- Damage to the liner wall.

NOTE: It is not necessary to replace the liners if: The honed finish can be clearly seen. Engine performance and oil consumption is acceptable.

Examine the liner surface (Item 1) [Figure 70-100-137] for cracks, deep scratches and polished areas where the honed finish is worn away.

Figure 70-100-138

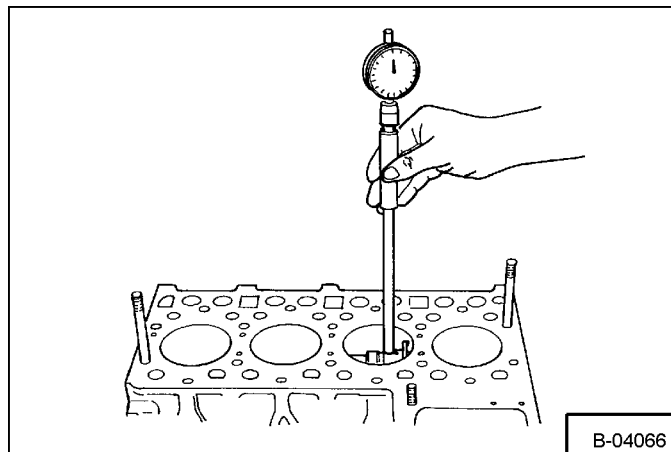

Check the cylinder liner bore for out of round or wear beyond service limits [Figure 70-100-138]. The inside diameter of the service liner should be 3.937-3.939 inch (100,00-100,06 mm).


A flex type hone may be used to clean up small scoring or pitting.

Damaged or worn liners must be replaced.

RECONDITIONING THE ENGINE (CONT'D)

Cylinder Liner Removal

Figure 70-100-139

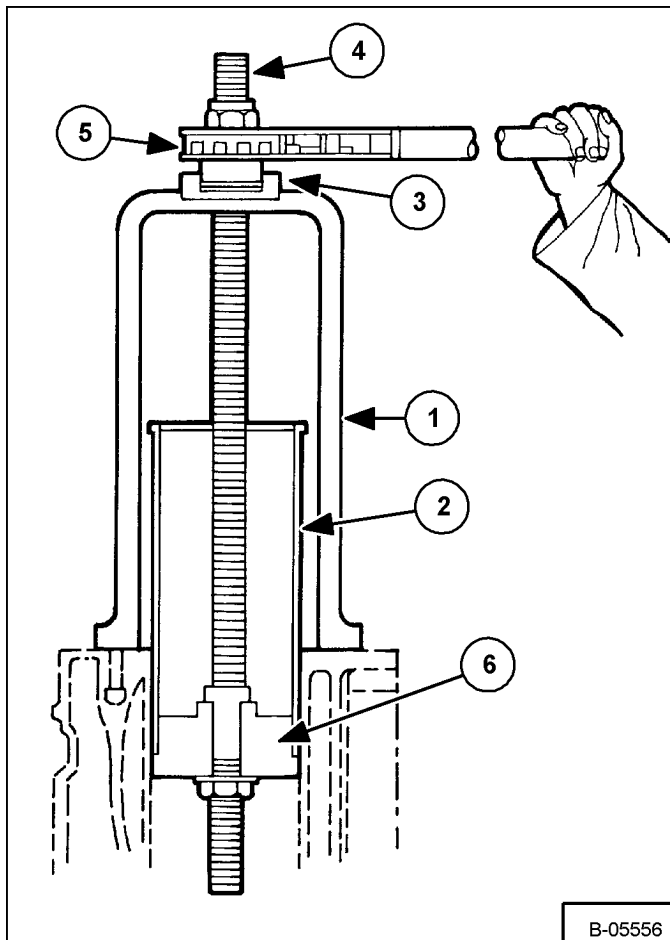

NOTE: Where several liners are to be removed or a very tight production liner is found, a press should be used.

When one liner is replaced, a hand tool is available and the following procedure can be done with the crank shaft installed.

Rotate the crankshaft (if installed) to provide access to the liner and protect the crank pin from damage.

Place the tool (Item 1) over the center of the liner (Item 2). Make sure the flat bearing race (Item 3) [Figure 70-100-139] is against the bottom of the recess.

Install the rod (Item 4) through the handle (Item 5) [Figure 70-100-139].

Place the adapter (Item 6) [Figure 70-100-139] under the cylinder liner. Tighten the nut and washer. Turn the handle and pull out the old liner.

RECONDITIONING THE ENGINE (CONT'D)

Cylinder Liner Installation


IMPORTANT

For the first five hours after the new liners have been installed:

- Do not operate at full load.
- Do not operate at high speed.
- Do not allow engine to idle for extended periods.

I-2117-1196

Figure 70-100-140

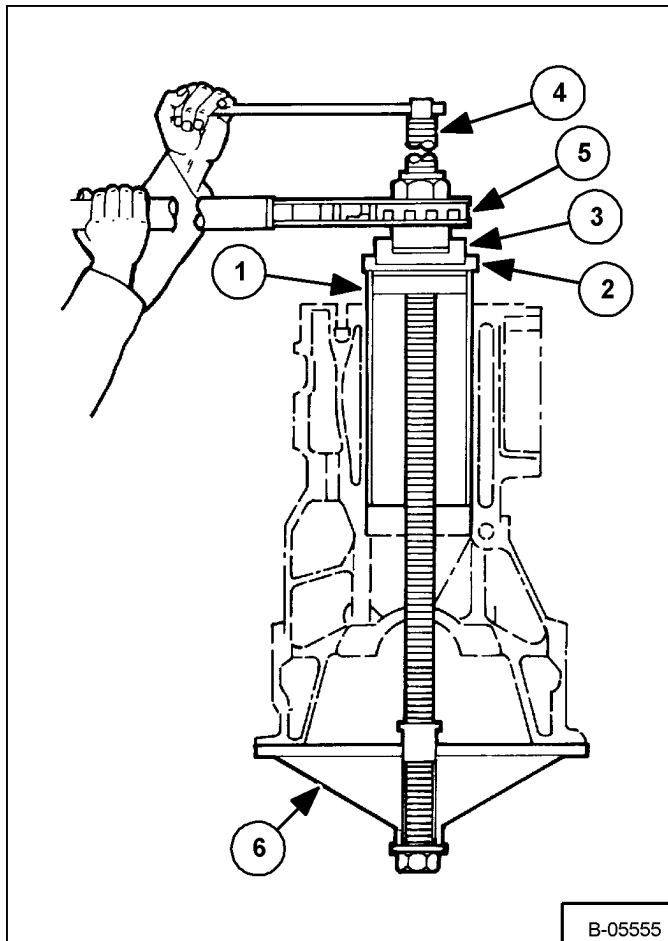

Clean the cylinder bore and the outside of the liner.

Lubricate the cylinder bore with engine oil.

Start the liner (Item 1) [Figure 70-100-140] in the bore. Make sure it is started straight.

With the adapter (Item 2) on the top of the liner, place the bearing (Item 3) [Figure 70-100-140] in the recess at the top.

Place the threaded rod (Item 4) through the handle (Item 5) and liner (Item 1) [Figure 70-100-140].

Adjust the rod until it is below the bottom of the block surface.

Install the adapter (Item 6) [Figure 70-100-140] on the rod. Center the adapter against the bottom of the block.


Tighten the nut and washer.

Turn the handle and press the liner in the bore, stopping when approximately 2 inch (50 mm) remain. Apply LOCTITE #603 to the outer surface below the flange and to the flange recess.

Continue to press the liner into position. Remove the tool.

NOTE: Do Not hit the cylinder liners with a hammer. They will be damaged.

Figure 70-100-141

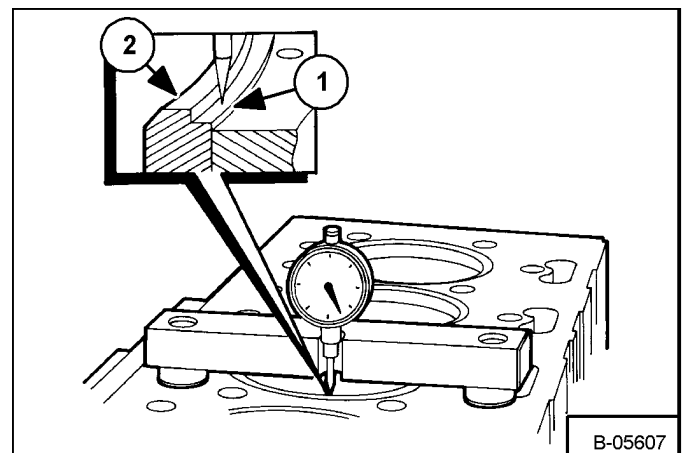

Check liner protrusion with a dial gauge [Figure 70-100-141].

The liner may have 0.004 inch (0,10 mm) protrusion or recession from the block face.

Allow 15 minutes before measuring the bore. The liner will take six hours to reach full strength.

The inside diameter of the service liner should be 3.937-3.939 in. (100,00- 100,06 mm).

New piston rings must be used when the cylinder liners have been replaced.

The measurement must be from the flange (Item 1) of the cylinder liner, not the top of the flame ring (Item 2) [Figure 70-100-141].



Bobcat®

HEATING, VENTILATION, AIR CONDITIONING

AIR CONDITIONING SERVICE	80-90-1
Chart	80-90-1
AIR CONDITIONING SYSTEM FLOW	80-10-2
Principals.	80-10-2
BASIC TROUBLESHOOTING	80-50-1
Checking The Electrical System	80-50-2
Compressor Drive Belt Inspection.	80-50-1
Poor A/C Performance	80-50-1
COMPONENTS	80-20-1
Identification	80-20-1
COMPRESSOR	80-110-1
Compressor Clutch Disassembly And Assembly	80-110-2
Removal And Installation.	80-110-1
CONDENSER.	80-120-1
Removal And Installation.	80-120-1
EVAPORATOR/BLOWER UNIT	80-150-1
Removal And Installation.	80-150-1
EXPANSION VALVE	80-160-1
Removal And Installation.	80-160-1
GENERAL AIR CONDITIONING SERVICE GUIDELINES	80-60-1
Component Replacement And Refrigeration Leaks	80-60-2
Compressor Oil	80-60-1
Compressor Oil Check	80-60-1
HEATER ASSEMBLY	80-170-1
Core Removal And Installation	80-170-2
Fan Removal And Installation	80-170-2
Removal And Installation.	80-170-1
PRESSURE SWITCH.	80-140-1
Removal And Installation.	80-140-1
RECEIVER/DRIER	80-130-1
Removal And Installation.	80-130-1

HVAC

Continued On Next Page

HEATING, VENTILATION, AIR CONDITIONING (CONT'D)

REGULAR MAINTENANCE	80-40-1
Cleaning The Condenser	80-40-2
Compressor Drive Belt Inspection	80-40-2
Filter Element Removal And Installation	80-40-1
SAFETY	80-30-1
Safety Equipment	80-30-1
SYSTEM CHARGING AND RECLAMATION	80-100-1
Charging Procedure	80-100-5
Charging Procedure With A Manifold Gauge Set	80-100-4
Reclamation Procedure	80-100-1
SYSTEM TROUBLESHOOTING CHART	80-70-1
TEMPERATURE/PRESSURE	80-80-1
Chart	80-80-1



AIR CONDITIONING SYSTEM FLOW

Principals

In an air conditioning system the refrigerant is circulated under pressure through five major components in a closed circuit. At these five points in the system the refrigerant goes through pressure and temperature changes.

The compressor (Item 1) Page 80-10-3 takes in heated, low pressure refrigerant gas through the suction valve (low pressure side) and as the name indicates, pressurizes the heated refrigerant and forces it through the discharge valve (high pressure side) on the condenser (Item 2) Page 80-10-3.

Ambient air passing through the condenser removes the heat from refrigerant resulting in physical state change in the refrigerant from a gas to a liquid.


The liquid refrigerant moves on to the receiver/drier (Item 3) Page 80-10-3 where impurities such as moisture and dirt are filtered out. The receiver/drier also serves as the storage tank for the liquid refrigerant. The liquid refrigerant (still under high pressure) flows to the expansion valve (Item 4) Page 80-10-3.

The expansion valve meters the amount of refrigerant into the evaporator coil (Item 5) Page 80-10-3. As the refrigerant passes through the expansion valve, it again changes its physical state. It becomes a low temperature, low-pressure liquid and saturated vapor. The low pressure liquid immediately starts to boil and vaporize as it enters the evaporator. The hot humid air of the machine's cab is drawn through or blown into the evaporator by the blower fan (Item 6) Page 80-10-3. Since the refrigerant is colder than the air, it absorbs the heat from the air and produces cooled air, which is pushed into the cab by the blower fan. The moisture in the air condenses on the evaporator coil and drips into the drain pan, which directs the water out of the cab.

The refrigerant cycle is completed when the heated low pressure gas is again drawn into the compressor.

AIR CONDITIONING SYSTEM FLOW (CONT'D)

Chart

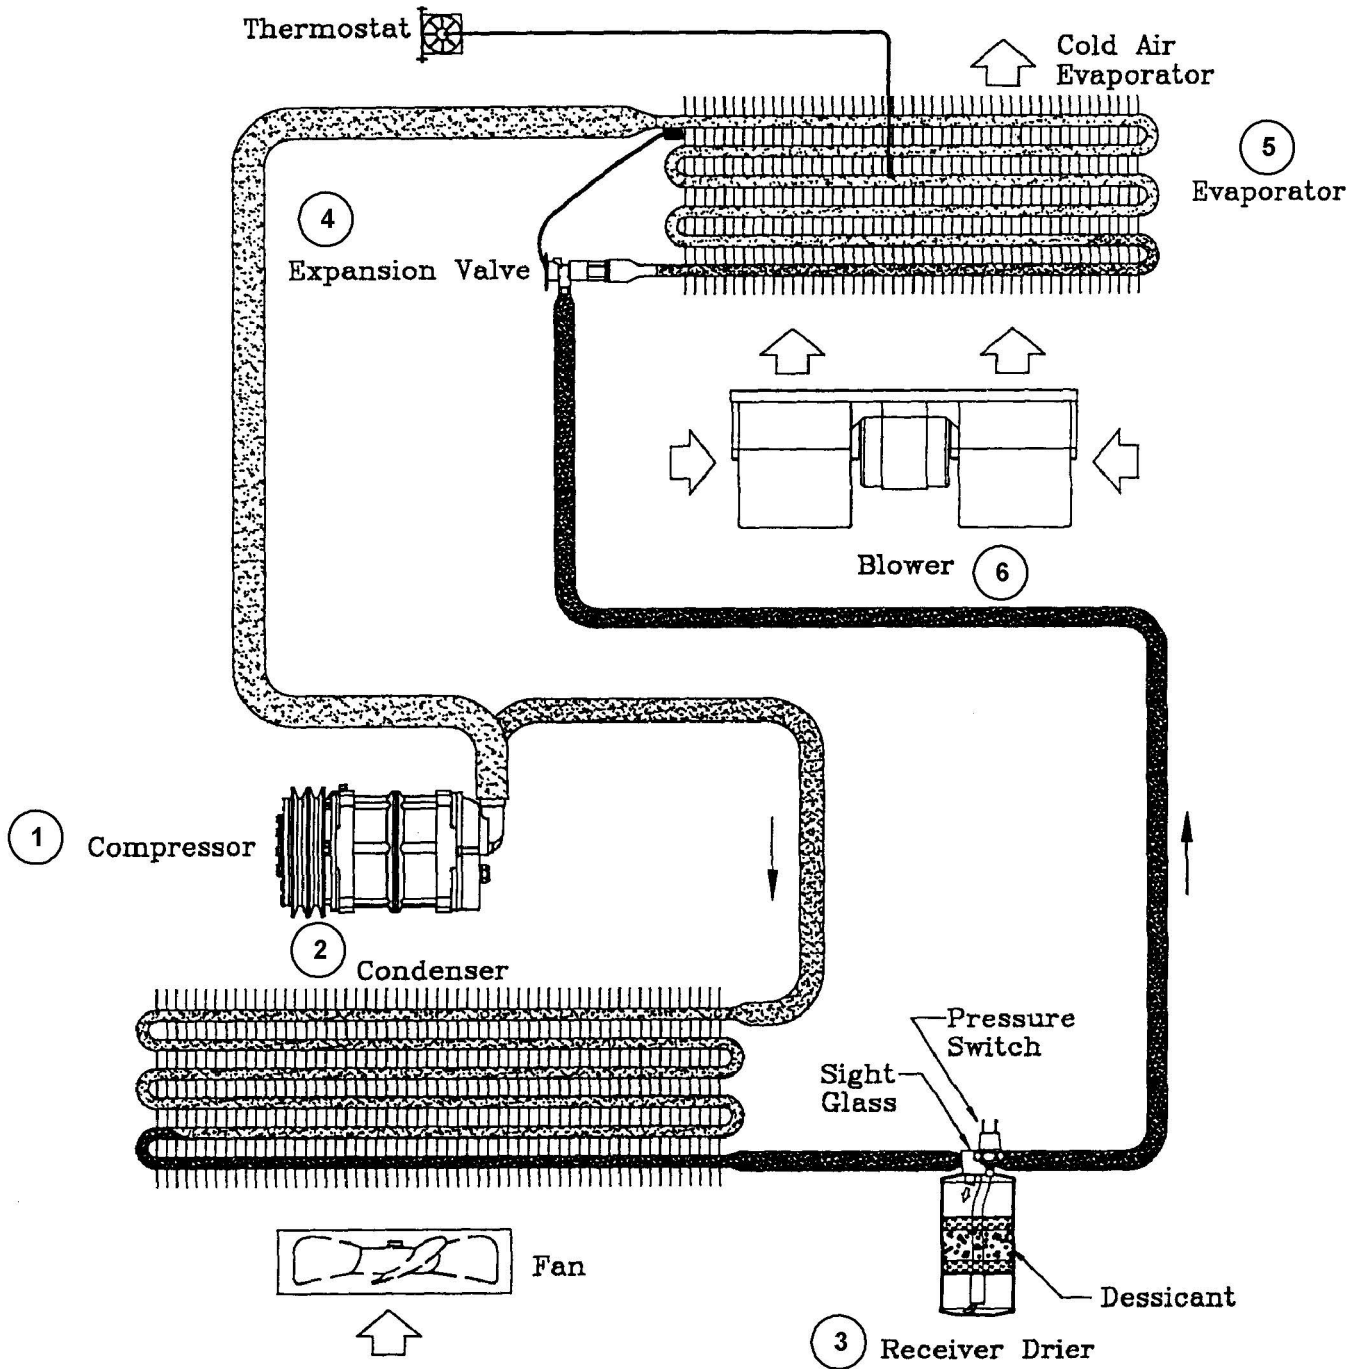

Status Of R134a

 High Pressure Gas	 Low Pressure Liquid
 High Pressure Liquid	 Low Pressure Gas




Bobcat®

COMPONENTS

Identification


Figure 80-20-1

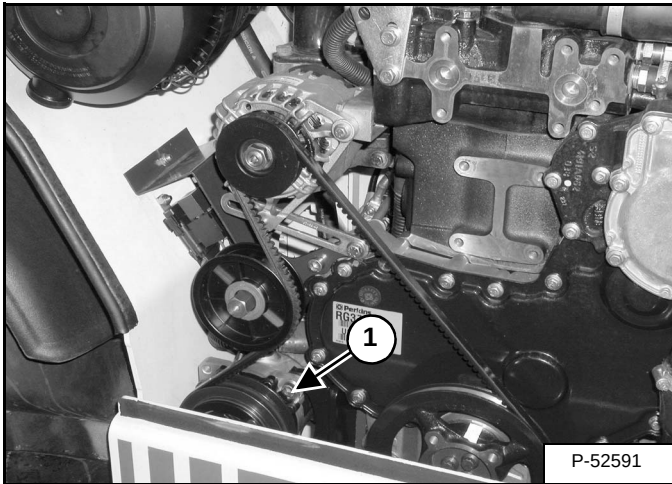

Compressor: The compressor (Item 1) [Figure 80-20-1] is the pump that circulates the refrigerant throughout the system. It raises the pressure of the refrigerant for heat transfer through the condenser and evaporator.


NOTE: The A/C System (compressor) is recommended to be turned on for at least 5 minutes weekly throughout the year to lubricate the internal components.

Figure 80-20-2

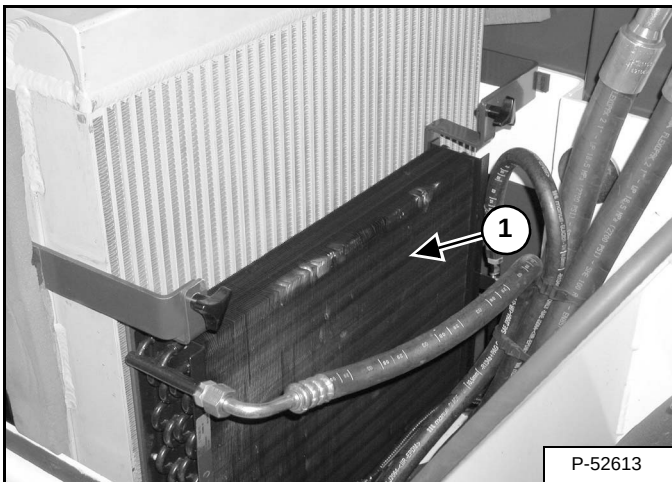


Condenser: The condenser (Item 1) [Figure 80-20-2] is the unit that receives the high pressure, high temperature refrigerant vapor from the compressor and condenses it into a high temperature liquid.

Figure 80-20-3

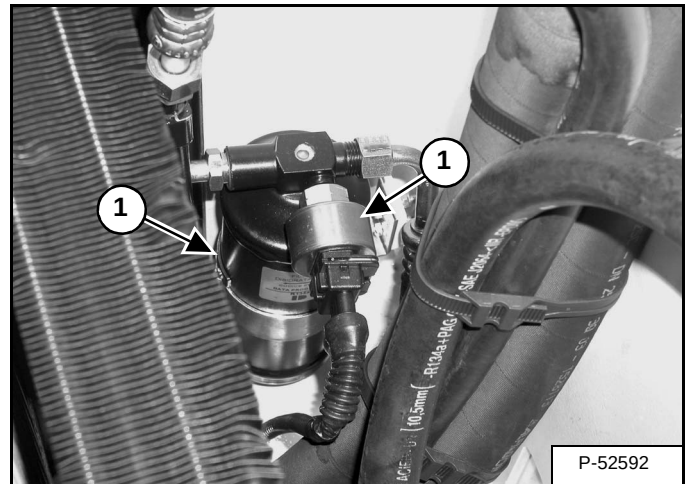

Receiver/Drier: The receiver/drier (Item 1) [Figure 80-20-3] is the unit that receives the liquid refrigerant from the condenser and removes moisture and foreign matter from the system. It also serves as a storage tank for the extra liquid refrigerant until it is needed by the evaporator.

Figure 80-20-4

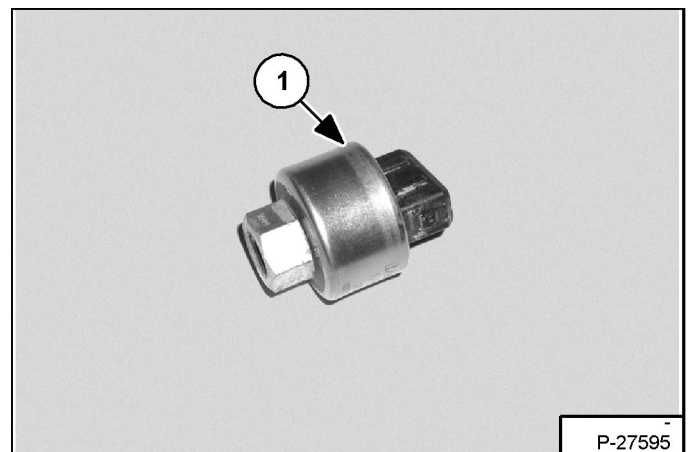


Pressure Switch: The pressure switch (Item 1) [Figure 80-20-4] is located on the receiver/drier assembly (Item 2) [Figure 80-20-3]. It will disengage the compressor clutch if the pressure readings are too low or too high, which indicates loss of refrigerant.

COMPONENTS (CONT'D)


Identification (Cont'd)

Figure 80-20-5

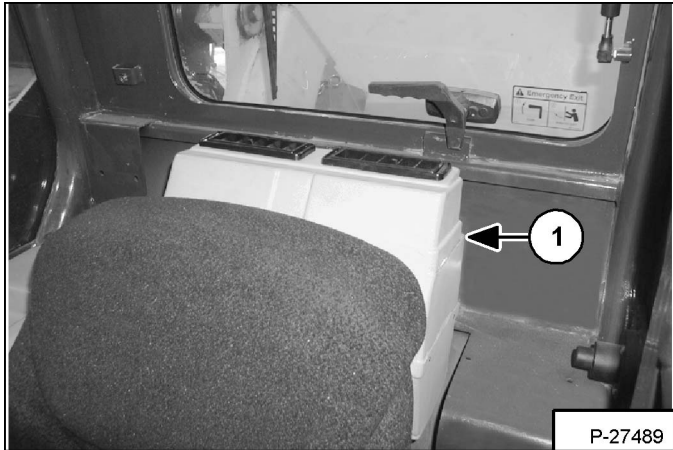


Evaporator Unit: The evaporator unit (Item 1) [Figure 80-20-5] is located behind the operator seat inside the cab. The unit delivers the cold air for the A/C into the cab. The unit also contains the blower fan, evaporator coil and thermostat which are not serviceable.

Figure 80-20-6

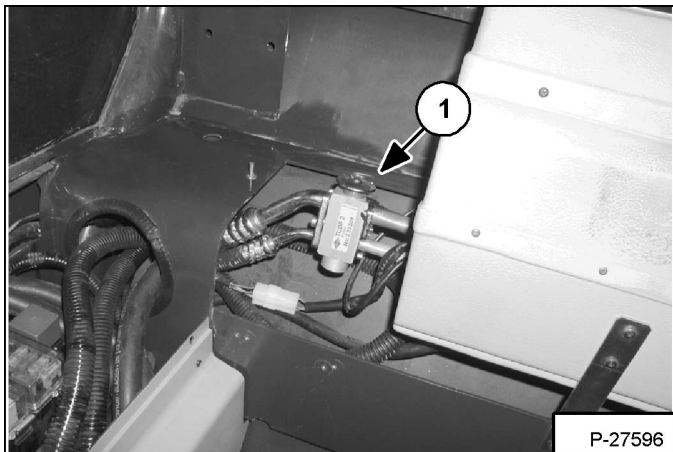

Expansion Valve: The expansion valve (Item 1) [Figure 80-20-6] controls the amount of refrigerant entering the evaporator coil.

Figure 80-20-7

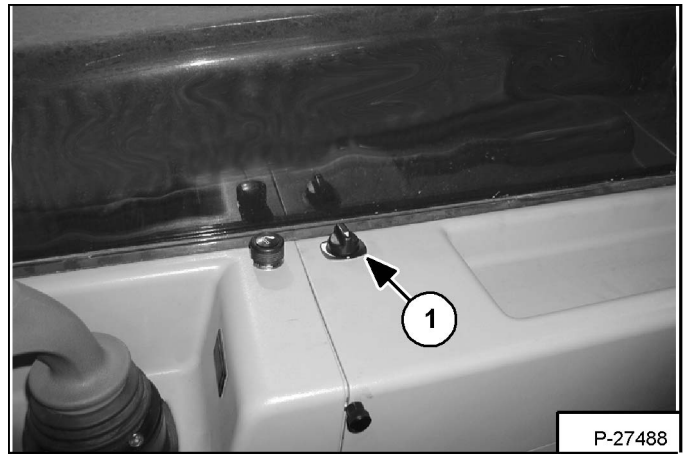


Blower Fan Switch: This is a three position switch (Item 1) [Figure 80-20-7]. When the blower fan switch is in the OFF position the A/C will not engage.

SAFETY

Safety Equipment

In servicing A/C and heater systems you will be exposed to high pressures, temperatures and several chemical hazards. Moving belts and pulleys are normal shop hazards.

Figure 80-30-1

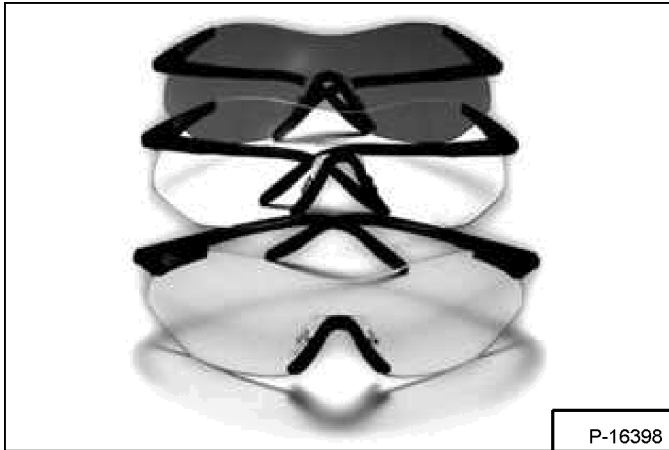

In addition to exercising caution in your work, DO WEAR SAFETY GLASSES OR A FACE SHIELD [Figure 80-30-1] when you are using R-134a or a leak detector, adjusting service valves or the manifold gage set connectors. Safety glasses or a transparent face shield are practical safety items and one or the other is absolutely required.

! WARNING

In the event of a leakage, wear safety goggles. Escaping refrigerant can cause severe injuries to eyes. In contact with a flame, R134a refrigerant gives a toxic gas.

W-2371-0500

Figure 80-30-2



R-134a inside a canister or in an A/C system is a liquid under pressure. When it escapes or releases into the air, **ITS TEMPERATURE DROPS TO 21.6 F DEGREES "INSTANTLY"**. If it spills on your skin or in your eyes you should flood the area with cool water and **SEEK MEDICAL ATTENTION FAST!** It is a good idea to wear gloves [Figure 80-30-2] to prevent frost bite if you should get refrigerant on your hands.

! WARNING

HFC 134A refrigerant can be dangerous if not properly handled. Liquid 134A may cause blindness if it contacts the eyes and may cause serious frostbite if it contacts the skin.

- Gaseous 134A becomes lethal (phosgene) gas when it contacts open flame or very hot substances.
- **NEVER SMOKE** when there is the possibility of even small amounts of 134A in the air.

Any servicing work that involves release or addition of 134A to the system must be done by a competent refrigeration dealer who has the proper equipment, knowledge, and experience to service refrigeration equipment.

W-2373-0500




Bobcat®

REGULAR MAINTENANCE

Filter Element Removal And Installation

Figure 80-40-1

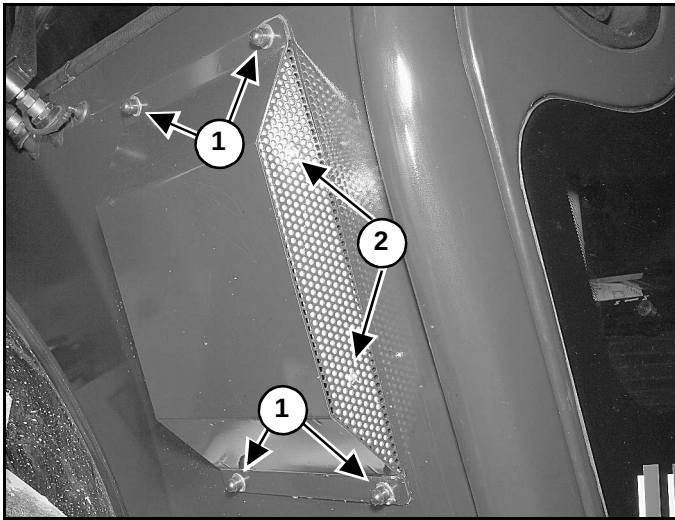

Remove the four mount bolts (Item 1) **[Figure 80-40-1]** from the fresh air filter cover at the front of the cab.

Remove the two filter mount bolts (Item 2) **[Figure 80-40-1]**.

Inside the filter housing, remove the filter and backup screen.

The fresh air filter is made of open cell foam and should be cleaned with water. A mild detergent may also be used.

REGULAR MAINTENANCE (CONT'D)


Compressor Drive Belt Inspection

It is a good rule to regularly inspect (weekly) the compressor drive belt for tension and wear.

Open the engine cover.

Remove the drive belt cover.

Figure 80-40-2

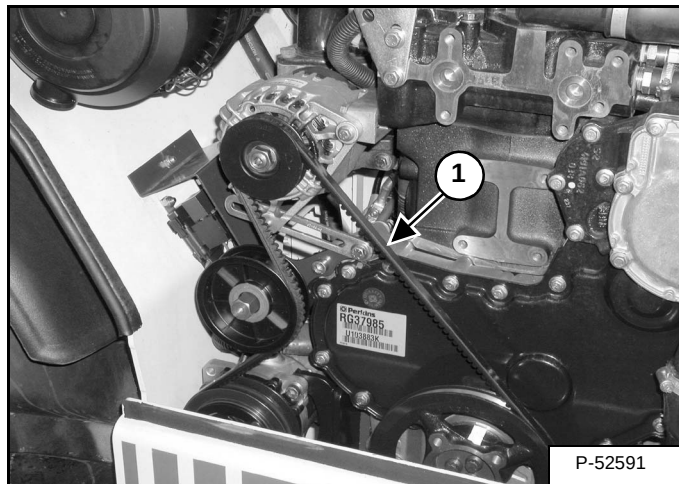


Check the tension on the compressor belt (Item 1) [Figure 80-40-2].

Cleaning The Condenser

Open the engine cover.

Temporarily remove the air cleaner. (See page 70-40-1)

Figure 80-40-3

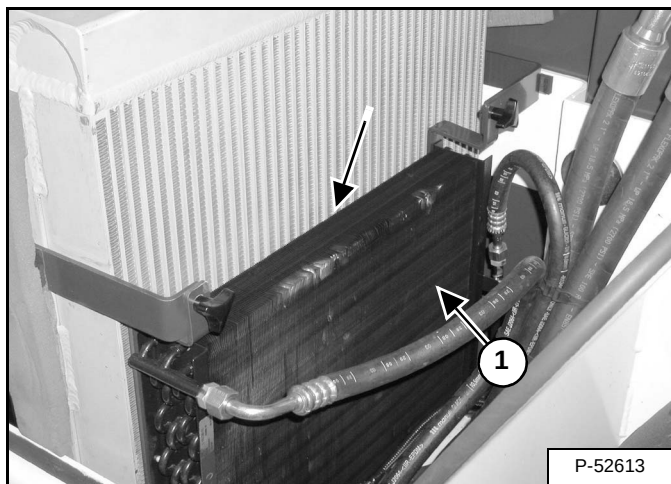

Clean the condenser (Item 1) [Figure 80-40-3] using water or air pressure.

NOTE: Clean between the oil cooler and condenser.

BASIC TROUBLESHOOTING

Poor A/C Performance

Start the Telescopic Handler, engage the parking brake. Engage the A/C system with the blower fan on high. Run the Telescopic Handler at full RPM for approximately 15 minutes, with the cab door closed.

Figure 80-50-1


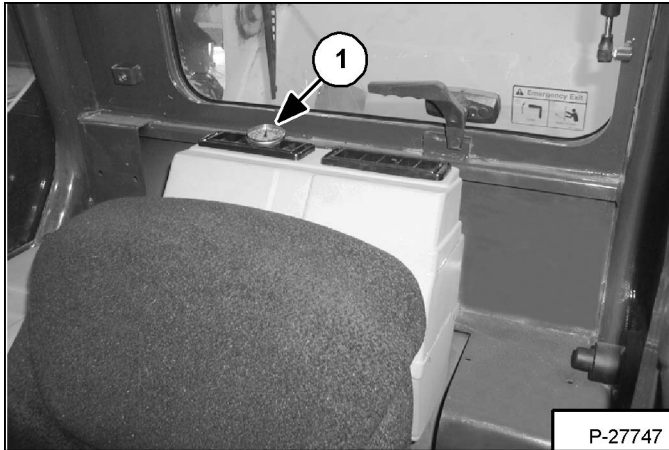


Figure 80-50-2

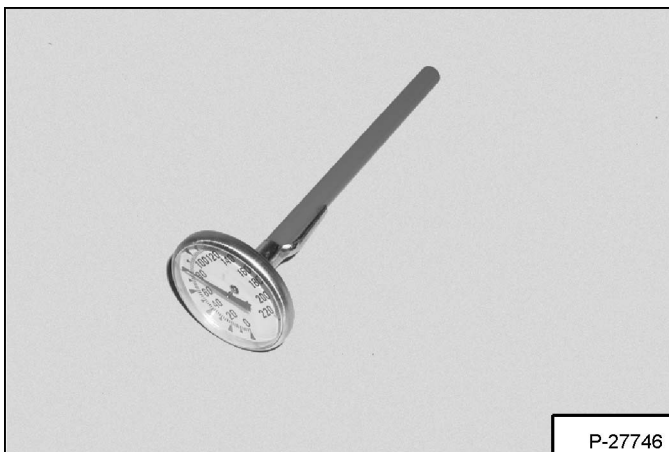

Check the temperature at the louvers (Item 1) [Figure 80-50-1] with a thermometer [Figure 80-50-2].

The louver temperature should be between 36-53°F (2.2-11.6°C) depending on the amount of humidity in the air.

If the louver temperature is too high. (See "SYSTEM TROUBLESHOOTING CHART" on page 80-70-1)

Check the blower fan for proper operation or noise, and replace if necessary. (See "EVAPORATOR/BLOWER UNIT" on page 80-150-1)

Check the belt tension on the A/C compressor. (See "Compressor Drive Belt Inspection" on page 80-40-2)

Check the A/C condenser for dirt or mud, and clean if necessary. (See "CONDENSER" on page 80-120-1)

Inspect the sight glass located on the receiver/drier for air bubbles. (See "RECEIVER/DRYER" on page 80-130-1)


Compressor Drive Belt Inspection

Regularly inspect (weekly) the compressor drive belt for wear.

Open the engine cover.

Remove the belt cover.

Figure 80-50-3

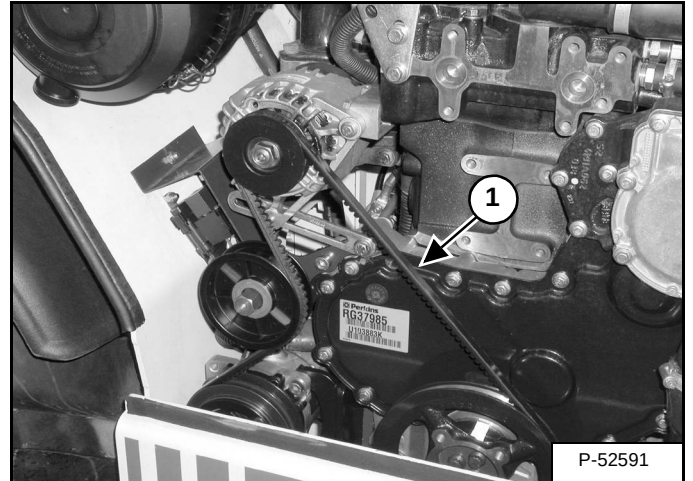


Check the tension on the compressor belt (Item 1) [Figure 80-50-3].

BASIC TROUBLESHOOTING (CONT'D)

Checking The Electrical System


Figure 80-50-4

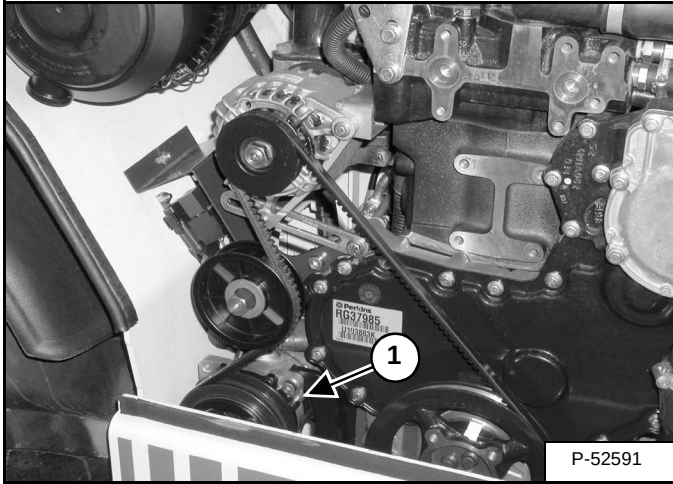

Check to see if the compressor clutch (Item 1) [Figure 80-50-4] is engaging.


Turn the ignition key switch to the RUN position without starting the machine.

Figure 80-50-5

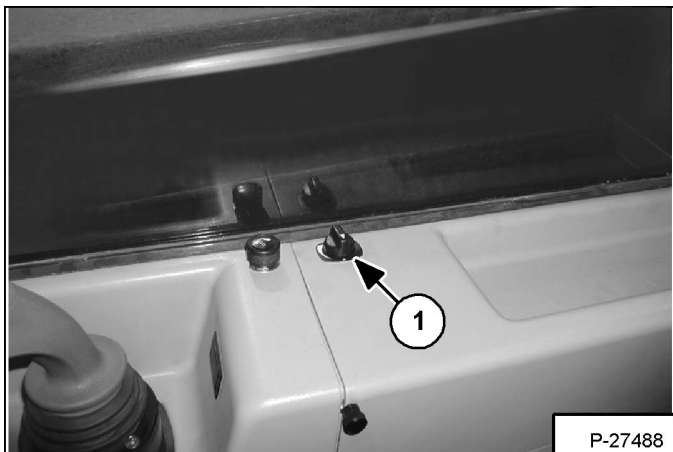


Turn the blower fan switch (Item 1) [Figure 80-50-5] to the first on position, the compressor clutch should make a click sound, which indicates the clutch is engaging.

Figure 80-50-6

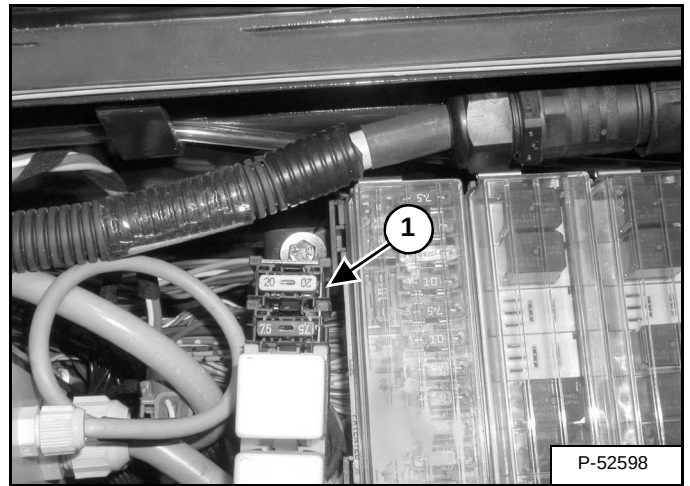

If the compressor clutch does not engage, check the fuse (Item 1) [Figure 80-50-6]. Replace the fuse if needed.

Figure 80-50-7

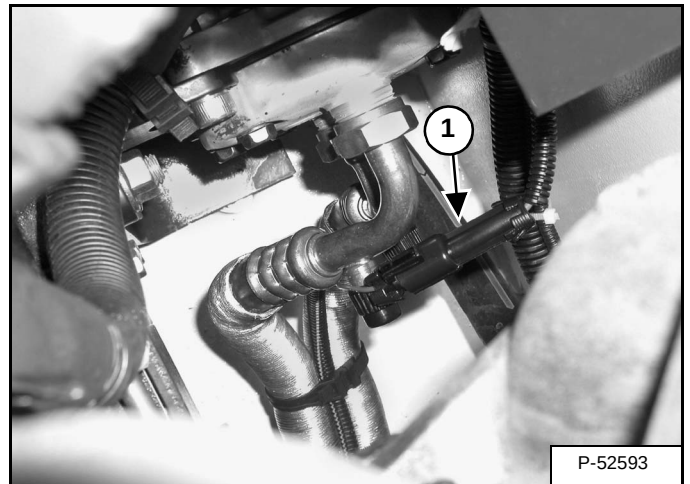


Unplug the connector (Item 1) [Figure 80-50-7] from the compressor.

BASIC TROUBLESHOOTING (CONT'D)

Checking The Electrical System (Cont'd)


Figure 80-50-8

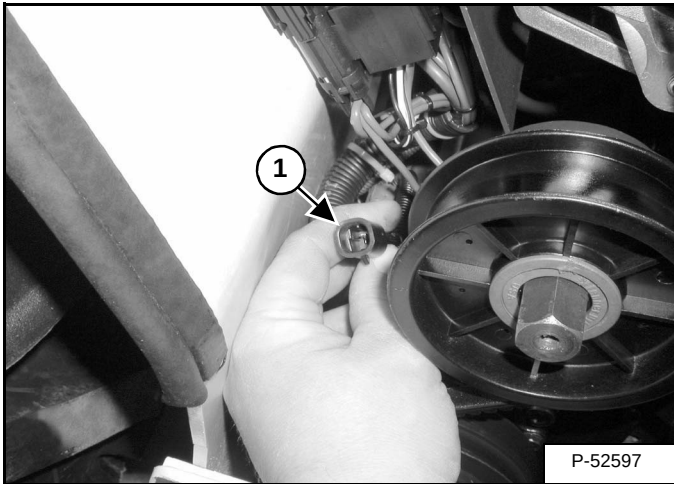

With a multimeter check the resistance to the compressor clutch connector (Item 1) [Figure 80-50-8].

If there is no resistance value replace the compressor clutch. (See "COMPRESSOR" on page 80-110-1)

Figure 80-50-9

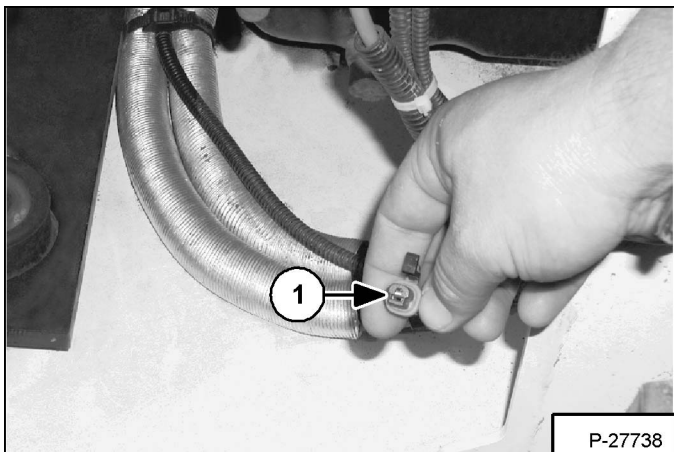


With a multimeter, check the voltage to the compressor clutch at the main harness (Item 1) [Figure 80-50-9].

If there is no power at the clutch, check the wiring harness for broken wires.


If there is no power at the clutch, reconnect the wiring harness to the compressor clutch.

Figure 80-50-10

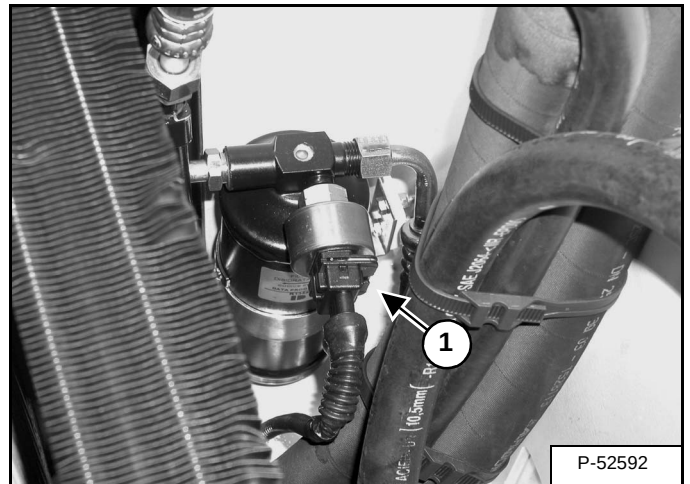

Disconnect the machine harness (Item 1) [Figure 80-50-10] from the pressure switch.

Figure 80-50-11

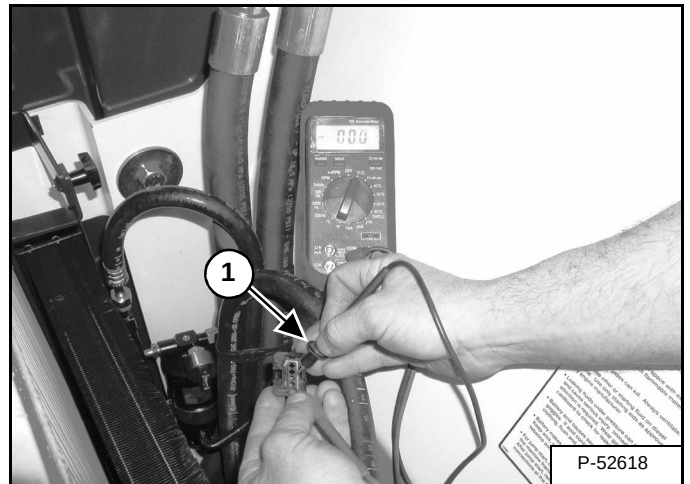


With the key switch to the run position (engine off) and the blower fan switch on the first position. Use a multimeter to check the main harness (Item 1) [Figure 80-50-11] for voltage.

There should be 12 volts. If there is no voltage, check the harness for broken wires.

BASIC TROUBLESHOOTING (CONT'D)

Checking The Electrical System (Cont'd)

Figure 80-50-12

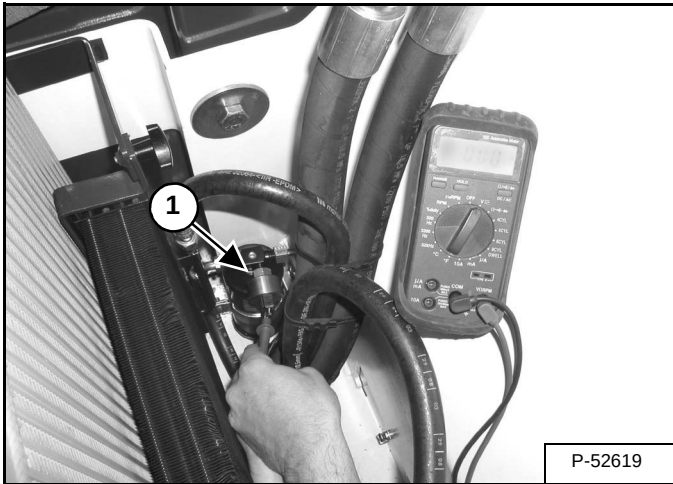


If there is voltage at the harness, check the resistance at the pressure switch (Item 1) **[Figure 80-50-12]**.

If there is no resistance value, check for a low refrigerant level. (See Contents Page 80-01.)

If good resistance value is observed, the pressure switch is good.


Reconnect the main harness to the pressure switch.

Figure 80-50-13

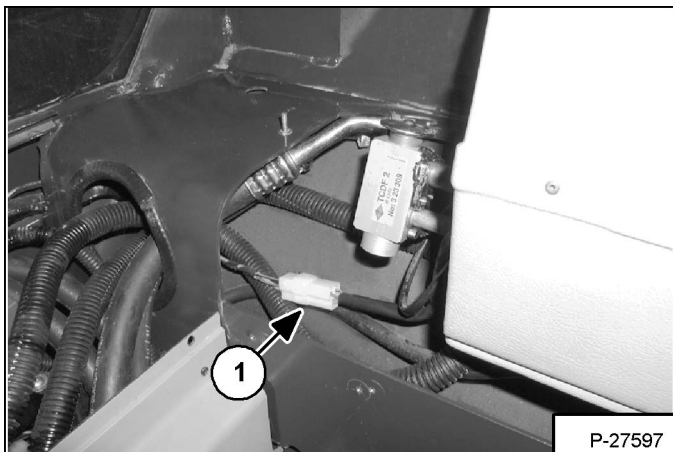


Disconnect the thermostat wiring connector (Item 1) **[Figure 80-50-13]** from the main harness.

Figure 80-50-14

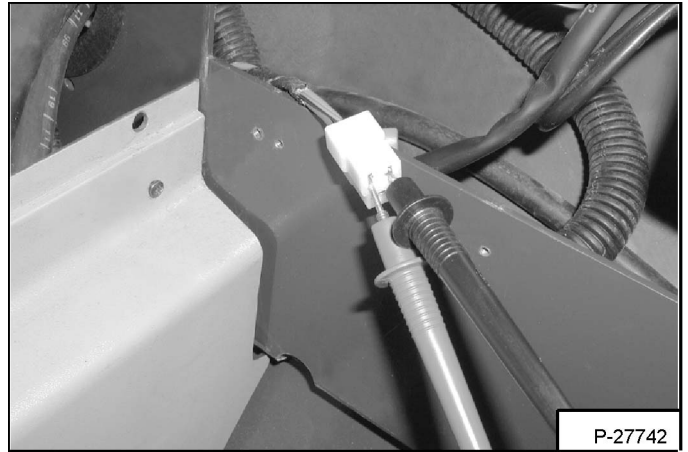

Check the main harness (Item 1) **[Figure 80-50-14]** for voltage. The voltage should be 12 volts. If there is no voltage, check the harness for broken wires.

Figure 80-50-15

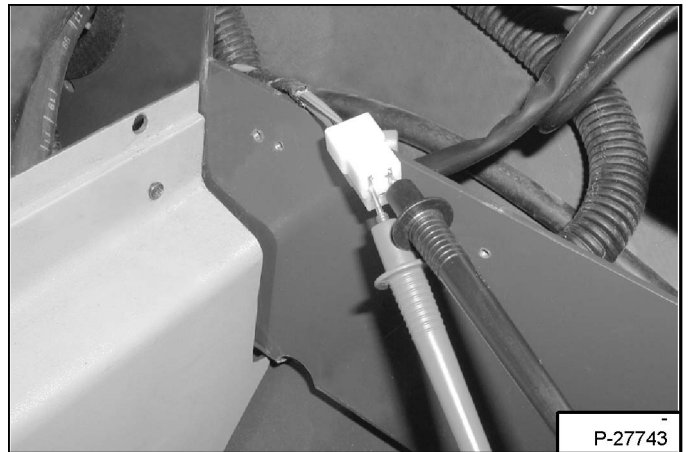


If there is voltage at the wiring harness, check the thermostat wire (green) for resistance. The resistance value should be 10 ohms at 68° F (20 ° C) **[Figure 80-50-15]**.

If there is no resistance, replace the entire blower fan unit.

BASIC TROUBLESHOOTING (CONT'D)


Checking The Electrical System (Cont'd)

Figure 80-50-16

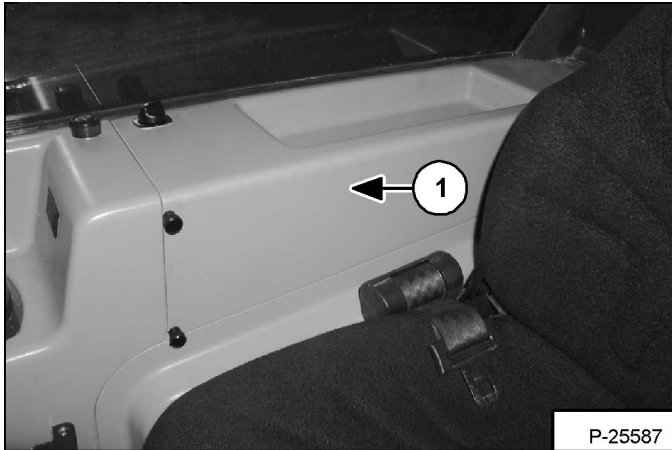

Remove the fuse box cover (Item 1) [Figure 80-50-16].


Figure 80-50-17

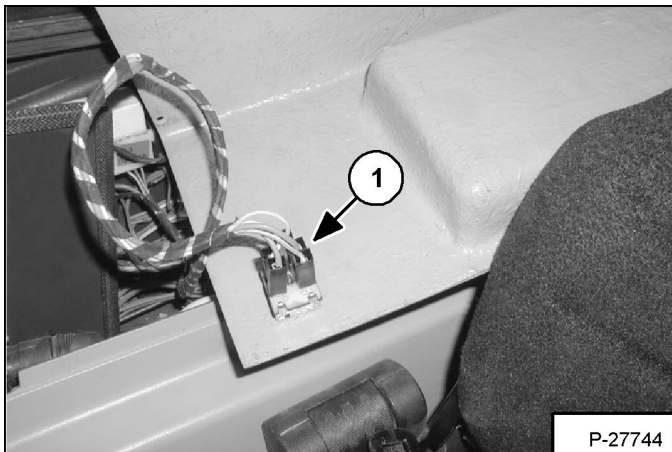

Disconnect the main wire harness connectors (Item 1) [Figure 80-50-17] from the switch.


NOTE: Mark the wires for correct assembly.

Figure 80-50-18

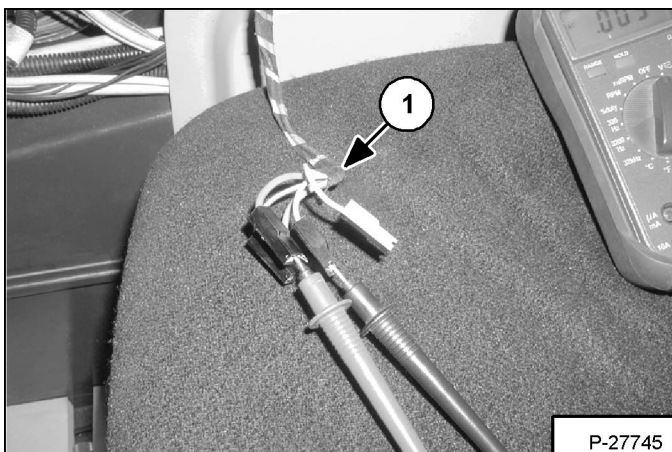

Check the main harness (Item 1) [Figure 80-50-18] for voltage. The voltage should be 12 volts if there is no voltage check the harness for broken wires.

Figure 80-50-19

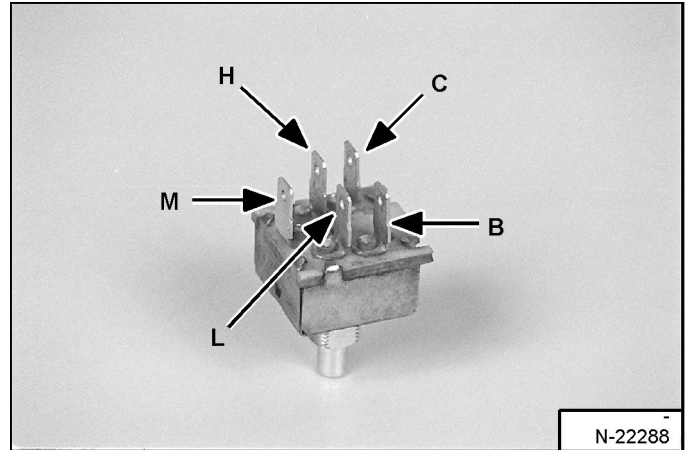

If there is voltage at the main harness check the blower fan switch [Figure 80-50-19] for resistance.

With the switch in the **OFF** position, there should be zero resistance between all terminals.

With the switch in the **1** position, there should be resistance between **C** terminal and the **B** terminal. And also between the **C** terminal and the **L** terminal frame [Figure 80-50-19].

With the switch in the **2** position, there should be resistance between **C** terminal and the **B** terminal. And also between the **C** terminal and the **M** terminal frame [Figure 80-50-19].

With the switch in the **3** position, there should be resistance between **C** terminal and the **B** terminal. And also between the **C** terminal and the **H** terminal frame [Figure 80-50-19].

If any of the above resistance tests fail, replace the blower fan switch.




Bobcat®

GENERAL AIR CONDITIONING SERVICE GUIDELINES

Compressor Oil

Figure 80-60-20

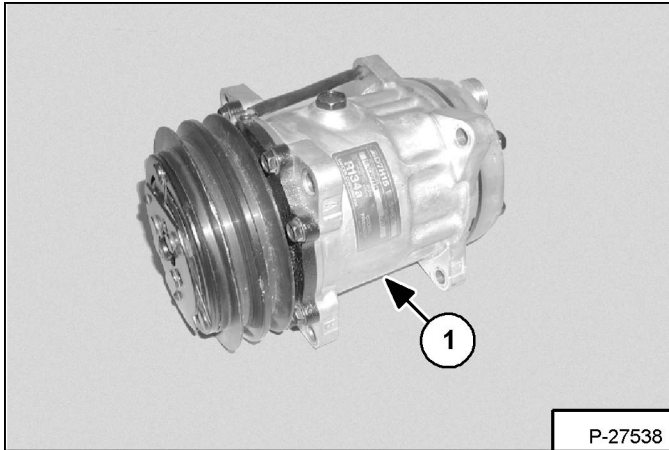

The compressor (Item 1) [Figure 80-60-20] is factory filled with 150-170 cc's of PAG oil (Poly Alkelene Glycol).

Unlike engine oil, it is not necessary to frequently check or change the compressor oil.

It is necessary to check, replenish or replace the compressor oil in the following cases:

1. When the evaporator, condenser or receiver-drier is replaced.
2. When refrigerant has leaked from the system.
3. When refrigerant is suddenly released from the cooling cycle.
4. When any related problems occur in the cooling cycle.

When one of the components (the evaporator, condenser or receiver-drier) is replaced, **one ounce** (30 cc) of PAG oil should be added for each component replaced.

If the A/C compressor is changed, no oil should be added to the system, because the compressor comes factory filled with oil.

NOTE: Only PAG oil should be used. Never mix R-12 and R-134a Oils.

Compressor Oil Check

The compressor oil should be checked as follows when oil is being added to an in service machine.

There is a close affinity between oil and refrigerant. During normal operation, part of the oil circulates with the refrigerant in the system. therefore, when checking the amount of oil in the system or replacing any system component, the compressor must be run-in advance to insure return of oil to the compressor.

If the amount of refrigerant in the system has decreased, charge the system. (See "SYSTEM CHARGING AND RECLAMATION" on page 80-100-1)

Open the cab door and windows.

Run the blower fan at maximum speed.

Run the compressor for at least 20 minutes at 800-1200 RPM.

Remove the compressor from the machine. (See "COMPRESSOR" on page 80-110-1)

Figure 80-60-21


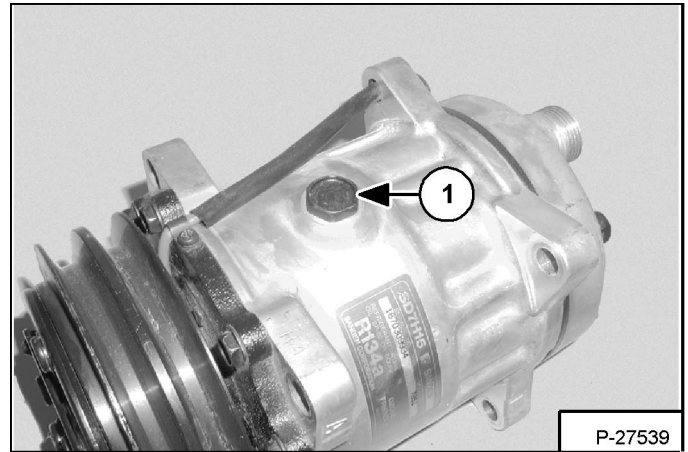


Figure 80-60-22

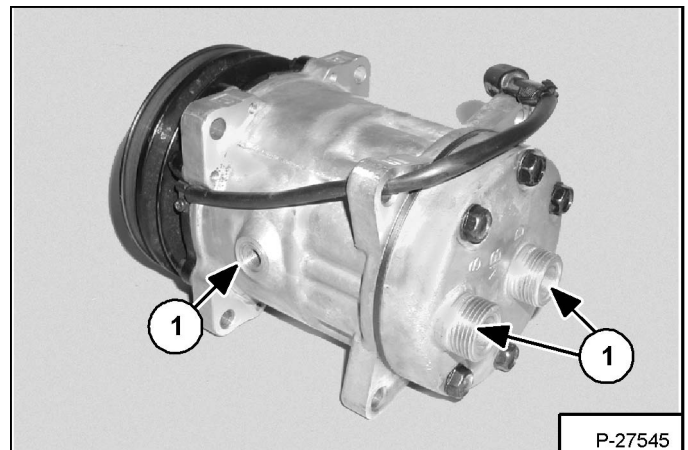


Remove the oil drain plug (Item 1) [Figure 80-60-21] and drain the oil through the connectors and the oil drain hole (Item 1) [Figure 80-60-22].

Installation: Tighten the oil drain plug to 9.4-10.8 ft.-lbs. (13-15 Nm) torque.

GENERAL AIR CONDITIONING SERVICE GUIDELINES (CONT'D)

Compressor Oil Check (Cont'd)

Figure 80-60-23

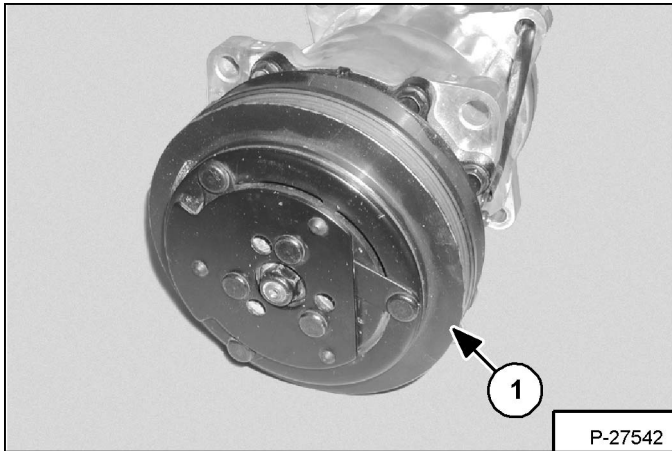


NOTE: After draining the oil through the drain hole and the connectors, extract the remaining oil through the discharge-side connector by rotating the drive pulley (Item 1) [Figure 80-60-23] several times by hand.

Measure the drained oil in a measuring cylinder.

Check the oil for contamination, dirt, metal shavings, or varnish color, discard the oil if contaminated.

NOTE: If metal shavings are found in the compressor oil, replace the complete compressor assembly.

Figure 80-60-24

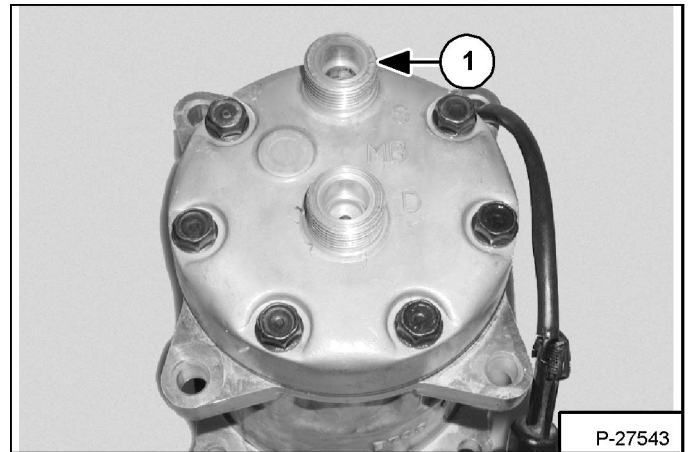


Add new compressor oil through the suction side connector (Item 1) [Figure 80-60-24].

Installation: Add 150-170 cc's of PAG oil.

NOTE: The suction port on the compressor is marked with an S and is the large port on the compressor.

Component Replacement And Refrigeration Leaks

Figure 80-60-25

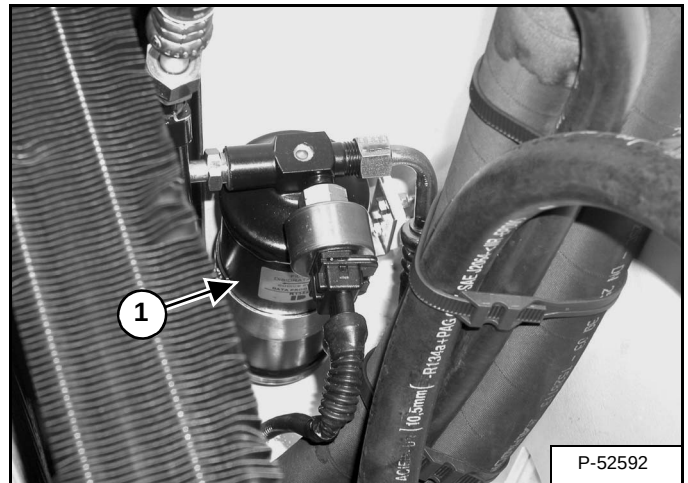

Whenever the A/C system is opened to the atmosphere or there has been a leak in the system, the receiver/drier (Item 1) [Figure 80-60-25] must be changed.

Never leave hose fittings, compressor fittings or components uncapped while working on the A/C system.

SYSTEM TROUBLESHOOTING CHART

Blower motor does not operate

	POSSIBLE CAUSE	INSPECTION	SOLUTION
1.	Blown Fuse.	Inspect the fuse/wiring.	Replace fuse/repair wiring.
2.	Broken wiring or bad connection.	Check the fan motor ground and connectors.	Repair the wiring or connector.
3.	Fan motor malfunction.	Check the lead wires from the motor with a circuit tester.	Replace Evaporator/Blower Unit.
4.	Fan motor switch malfunction.	Check power into and out of the fan switch.	Replace Fan Switch.

Blower motor operates normally, but air flow is insufficient

	POSSIBLE CAUSE	INSPECTION	SOLUTION
1.	Evaporator inlet obstruction	Check evaporator for plugging.	Remove obstruction and clean evaporator fins with air or water.
2.	Defective thermo. switch (frozen evaporator).	Check thermostat using a circuit tester.	Replace Evaporator/Blower unit.

Insufficient cooling although air flow and compressor operation are normal

	POSSIBLE CAUSE	INSPECTION	SOLUTION
1.	System low on refrigerant.	The high side pressure will be low and bubbles may be present in sight glass on receive drier.	Repair any leaks and recharge the refrigerant to the correct level.
2.	Excessive refrigerant.	The high pressure side pressure will be high.	Use refrigerant recovery equipment to capture excess refrigerant. Charge to the correct refrigerant level.

The compressor does not operate at all, or operates improperly

	POSSIBLE CAUSE	INSPECTION	SOLUTION
1.	Loose drive belt.	The belt is vibrating or oscillating.	Adjust tension.
2.	Internal compressor malfunction.	The compressor is locked up and the belt slips.	Replace compressor.
		Magnetic clutch related	
3.	Low battery voltage.	Clutch slips.	Recharge the battery.
4.	Faulty coil.	Clutch slips.	Replace the magnetic clutch.
5.	Oil on the clutch surface.	Clutch slips.	Replace or clean the clutch surface.
6.	Open coil.	Clutch does not engage and there is not reading when a circuit tester is connected between the coil and terminals.	Replace clutch.
7.	Broken wiring or poor ground.	Clutch will not engage. Inspect the ground and connections.	Repair.
8.	Wiring harness components.	Test the conductance of the pressure switch, thermostat, Relay, etc.	Check operation.

SYSTEM TROUBLESHOOTING CHART (CONT'D)

Gauge Pressure Related Troubleshooting

Normal compressor suction (low side) and discharge (high side) pressure at ambient temperatures of 86-96 degrees F (30-38 degrees C) and compressor speed of approximately 2000 RPM are:

High pressure side pressure: 210-265 PSI

Low pressure side pressure: 15-33 PSI

As a rule of thumb the high side pressure will be around eight times greater than the low side pressure

POSSIBLE CAUSE	INSPECTION	SOLUTION
Low pressure side Too high.	The low pressure side pressure normally becomes too high when the high pressure side pressure is too high. As this is explained below, the following inspection is only used when the low pressure side is too high.	
1. Expansion valve opens too far.	Frost is present on the suction hose.	Replace expansion valve
2. Defective compressor	The high and low pressure side gauge pressures equalize when the magnetic clutch is disengaged.	Replace compressor.
Low pressure side Too low.		
1. Low refrigerant charge	The high side pressure will be low and bubbles may be present in sight glass on receiver drier.	Repair any leaks and recharge the refrigerant to the correct level.
2. Clogged or closed expansion valve.	The expansion valve's inlet side is frosted. Moisture or other Contaminants can be the cause.	Clean or replace the expansion Valve.
3. Restriction between drier and expansion valve.	Frost on the line between drier and expansion valve. A Negative low pressure reading may be shown.	Flush system or replace hose.
4. Thermostat malfunction.	The evaporator is frozen.	Replace Evaporator/Blower unit.
High pressure side Too high.		
1. Poor condenser performance.	Dirty or clogged condenser fins. Condenser fans not Operating.	Clean fins, and/or repair the fan.
2. Excessive refrigerant.	The high pressure side pressure will be high.	Use refrigerant recovery equipment to capture excess refrigerant. Charge to the correct refrigerant level.
3. Excessive oil charge	The high pressure side will be high.	Evacuate system. Remove oil from condenser and compressor. Measure oil from compressor and add correct oil charge back into compressor. Flush system with nitrogen. Replace drier.
4. Air in system.	Pressure is high on both high and low sides.	Evacuate and recharge with Refrigerant.
5. Restriction in drier, condenser or high pressure line.	High pressure side will be high, and low pressure side will be low.	Evacuate and flush system replacing defective parts.

SYSTEM TROUBLESHOOTING CHART (CONT'D)

Gauge Pressure Related Troubleshooting (Cont'd)

POSSIBLE CAUSE	INSPECTION	SOLUTION
High pressure side Too low.		
1. Low refrigerant charge	The high side pressure will be low and bubbles may be present in sight glass on receiver drier.	Repair any leaks and recharge the refrigerant to the correct level.
System pressures Equal		
1. Clutch not operating	See magnetic clutch related topics above.	
2.Compressor not pumping.	Equal high and low pressures.	Replace compressor.



Bobcat®

TEMPERATURE/PRESSURE**Chart**

NORMAL EVAPORATOR RANGE	
TEMP F.	PSIG
16	15.69
18	17.04
20	18.43
22	19.87
24	21.35
26	22.88
28	24.47
30	26.10
32	27.79
34	29.52
36	31.32
38	33.17
40	35.07
42	37.03
44	39.05
45	40.09
50	45.48
55	51.27
60	57.47
65	64.10
70	71.19
75	78.75
80	86.80
85	95.40
90	104.40
91	106.30
92	108.20

NORMAL CONDENSER RANGE	
TEMP F.	PSIG
93	110.20
94	112.10
95	114.10
100	124.30
102	128.50
104	132.90
106	137.30
108	141.90
110	146.50
112	151.30
114	156.10
116	161.10
118	166.10
120	171.30
122	176.60
124	182.00
126	187.50
128	193.10
130	198.90
135	213.70
140	229.40
145	245.80
150	263.00
155	281.10
160	300.10
165	320.10
170	340.80

Evaporator

Pressures represent gas temperatures inside the coil, not the coil surface. For an estimate of the temperature of the air coming off the coil add 8-10 degrees F. to the temperature on the chart.

Condenser

Temperatures are not ambient temperatures but condensing temperatures. Add 40 degrees F. to the ambient temperature to get the condensing temperature and then refer to the pressure chart to see appropriate pressure for ambient temperature.

Example: Ambient Temperature=90 degrees F.

90 degrees F.

+40 degrees F.

130 degrees F. condenser temperature=200 psig

Conditions and pressures will vary from system to system.



Bobcat®

AIR CONDITIONING SERVICE

Chart

Service Company/Phone Number: Date: Machine Model: Machine Serial Number: Machine Hours:	Machine Dealer: Customer:		
Pre Service Conditions	15 Minutes	30 Minutes	Notes
Ambient Temperature:			
Louver Temperature:			
Cab Temperature at Head Position:			
Temperature into Condenser:			
High Side Pressure			
Low Side Pressure			
Ambient Humidity			
Observations:			
Explain services required:			
Post Service Conditions	15 Minutes	30 Minutes	Notes
Ambient Temperature:			
Louver Temperature:			
Cab Temperature at Head Position:			
Temperature into Condenser:			
High Side Pressure			
Low Side Pressure			
Ambient Humidity			
Observations:			




Bobcat®

SYSTEM CHARGING AND RECLAMATION

Reclamation Procedure


Figure 80-100-1

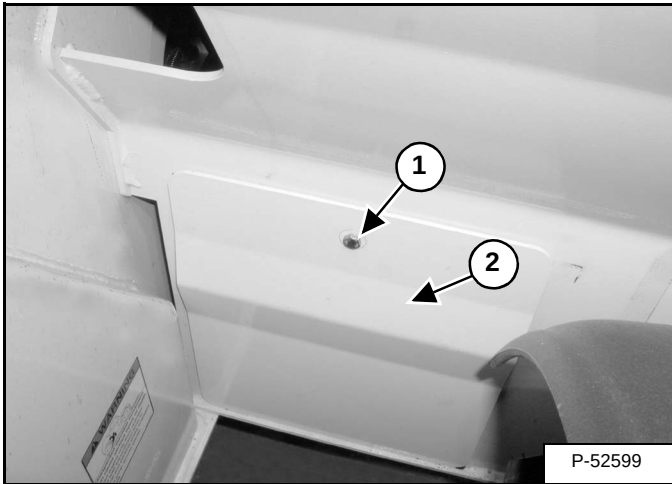

Open the engine cover.

Remove the access cover mounting bolt (Item 1).
Remove the access cover (Item 2) [Figure 80-100-1].

Figure 80-100-2

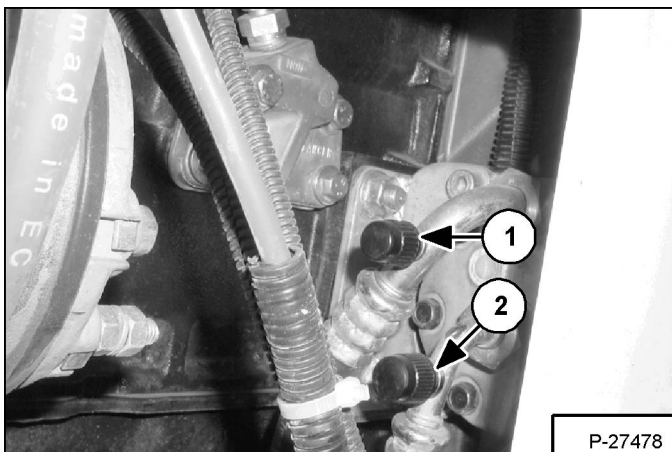

Locate the low pressure port (Item 1) and high pressure port (Item 2) [Figure 80-100-2] on the back side of the compressor.


WARNING

In the event of a leakage, wear safety goggles. Escaping refrigerant can cause severe injuries to eyes. In contact with a flame, R134a refrigerant gives a toxic gas.

W-2371-0500

NOTE: This test is run with the engine OFF, and the A/C switch in the OFF position.

Figure 80-100-3

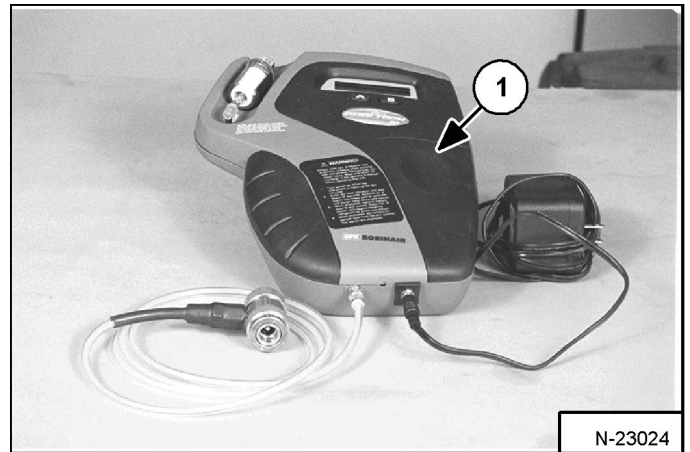

NOTE: Before reclaiming a refrigeration system, it is recommended to identify the type of refrigerant that is in the A/C system and if it is pure enough to use. The tool MEL 1592, Refrigerant Identifier (Item 1) [Figure 80-100-3] will determine, the kind of refrigerant and any possible harmful or dangerous substances that may be present in the system. Thus preventing mixing of dangerous material with your reclaimed R-134a in your reclaimer, and further contamination to other A/C systems that are reclaimed and charged from your MEL 1581 Recovery/Recycling/Recharging Machine.

Remove the protective cap and connect the refrigerant identifier to the low pressure hose (Item 1) [Figure 80-100-2].

Connect the refrigerant identifier to its power source.

SYSTEM CHARGING AND RECLAMATION (CONT'D)

Reclamation Procedure (Cont'd)

Figure 80-100-4



Follow the steps displayed on the refrigerant identifier screen [Figure 80-100-4].

Allow two minutes for the refrigerant identifier to display the type of refrigerant and air content. An alarm will sound if potentially flammable hydrocarbons are present and will also indicate on the visual display.

Disconnect the refrigerant identifier from the A/C.

If the refrigerant is dangerous or flammable, it must be evacuated from the A/C system into a separate container and properly and safely disposed of.

If R134a is found, evacuate the system.

IMPORTANT: Only A/C trained technicians should perform the reclaiming and recharging procedure.

WARNING

HFC 134A refrigerant can be dangerous if not properly handled. Liquid 134A may cause blindness if it contacts the eyes and may cause serious frostbite if it contacts the skin.

- Gaseous 134A becomes lethal (phosgene) gas when it contacts open flame or very hot substances.
- **NEVER SMOKE** when there is the possibility of even small amounts of 134A in the air.

Any servicing work that involves release or addition of 134A to the system must be done by a competent refrigeration dealer who has the proper equipment, knowledge, and experience to service refrigeration equipment.

W-2373-0500

Figure 80-100-5




Use an approved recovery/charging unit [Figure 80-100-5] to evacuate the system.

Connect the reclaiming unit to the A/C charge ports.

SYSTEM CHARGING AND RECLAMATION (CONT'D)

Reclamation Procedure (Cont'd)


Figure 80-100-6

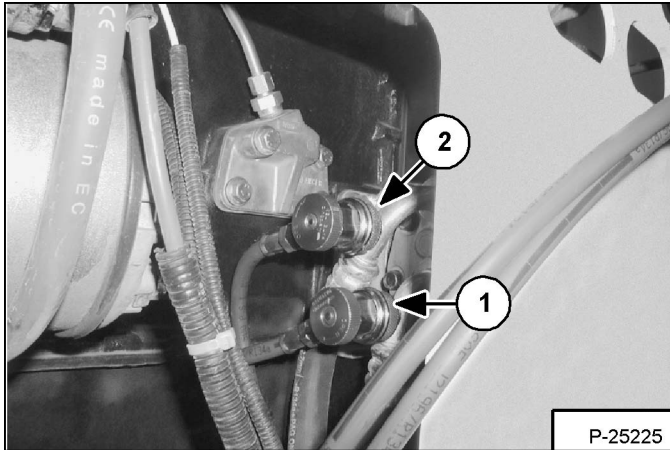

Connect the Red hose (Item 1) [Figure 80-100-6] to the high pressure port and open the valve.


Connect the Blue hose (Item 2) [Figure 80-100-6] to the low pressure port and open the valve.

Figure 80-100-7

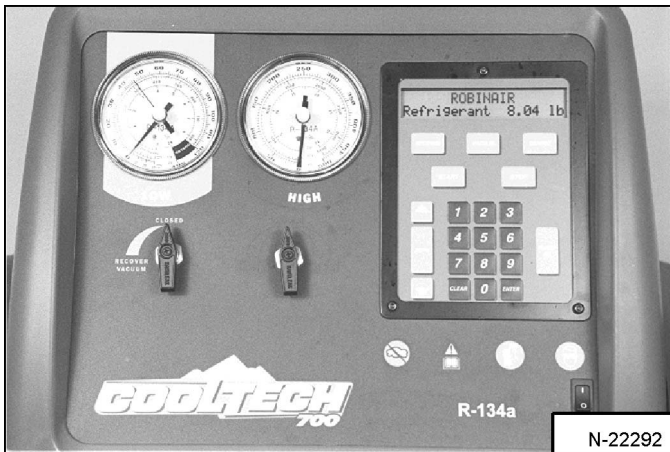

Turn the reclaimer unit [Figure 80-100-7] to the ON position and follow the on screen instructions.

Figure 80-100-8

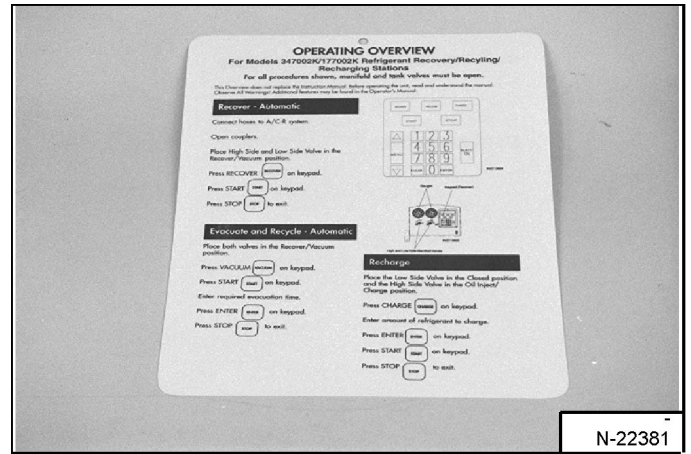

NOTE: The reclaimer unit, has a complete step by step set of instructions [Figure 80-100-8] to follow for reclamation and recharging of the A/C system. a trained technician should follow these instructions as they may very slightly depending on the model and brand of reclaimer used.

SYSTEM CHARGING AND RECLAMATION (CONT'D)

Charging Procedure With A Manifold Gauge Set


Open the hood.

WARNING

In the event of a leakage, wear safety goggles. Escaping refrigerant can cause severe injuries to eyes. In contact with a flame, R134a refrigerant gives a toxic gas.

W-2371-0500

Figure 80-100-9

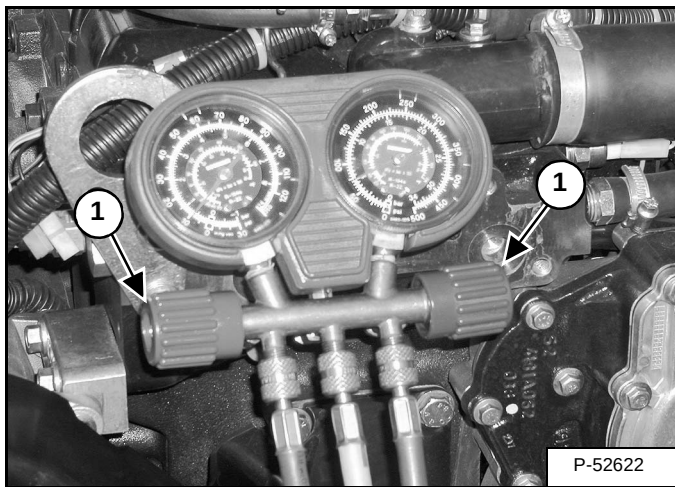


Check to see that the hand valves (Item 1) [Figure 80-100-9] are closed on the manifold gauge set.

If there is any refrigerant in the A/C system, it must be recovered by an approved A/C reclamation procedure. (See "Reclamation Procedure" on page 80-100-1)

Connect the gauges to the A/C charge ports.


Figure 80-100-10

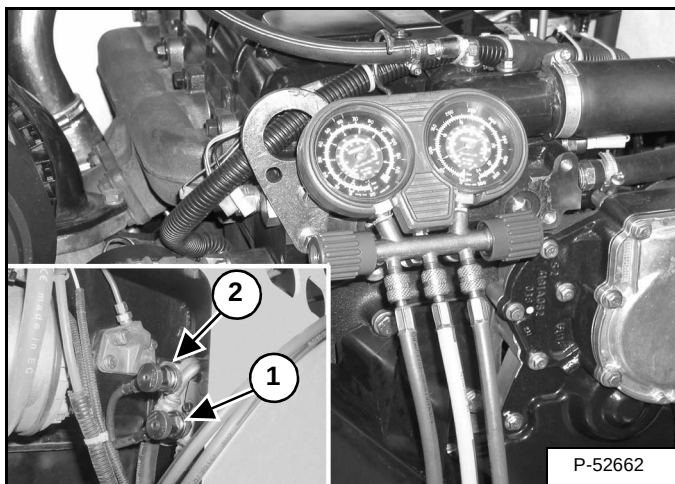

Connect the Red hose (Item 1) [Figure 80-100-10] to the high pressure port and open the valve.

Connect the Blue hose (Item 2) [Figure 80-100-10] to the low pressure port and open the valve.

Figure 80-100-11

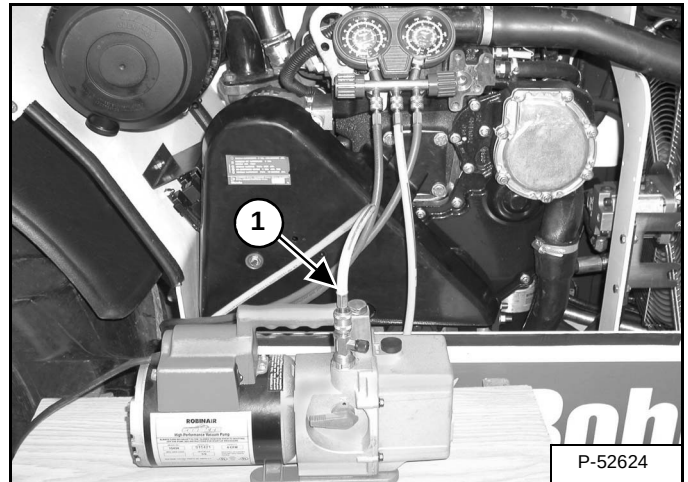


Connect the Yellow hose (Item 1) [Figure 80-100-11] to the vacuum pump.

SYSTEM CHARGING AND RECLAMATION (CONT'D)

Charging Procedure With A Manifold Gauge Set (Cont'd)

Figure 80-100-12

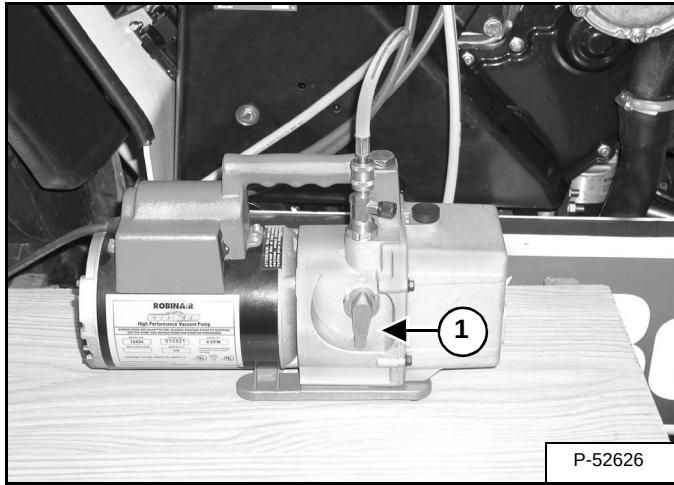


Start the vacuum pump and open ISO-valve (Item 1) [Figure 80-100-12] on the vacuum pump.

Run the vacuum pump for at least 5-10 minutes to insure that a vacuum has been pulled on the system.

Close the ISO-valve (Item 1) [Figure 80-100-12] (which isolates the vacuum pump from the A/C system) and turn OFF the vacuum pump.

Charging Procedure

Figure 80-100-13

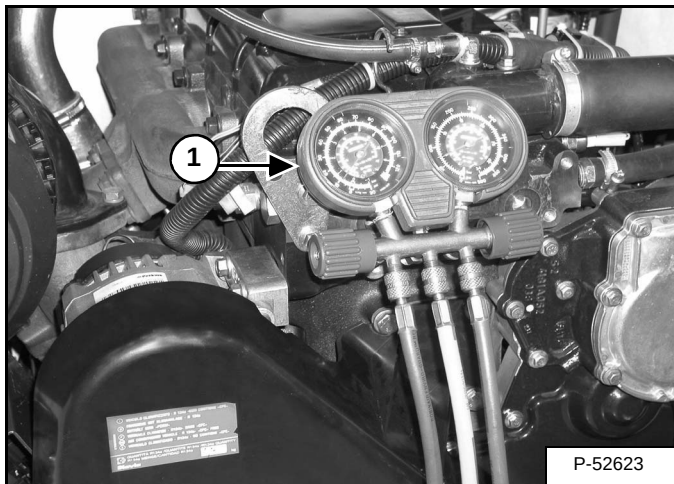


Note vacuum pressure indicated on the low pressure (Blue) gauge (Item 1) [Figure 80-100-13]. Let stand for 5-10 minutes and recheck the pressure for changes.

If the pressure drops, this may be an indication of a leak in the A/C system.

Determine the problem with the A/C system and repair it.

Figure 80-100-14

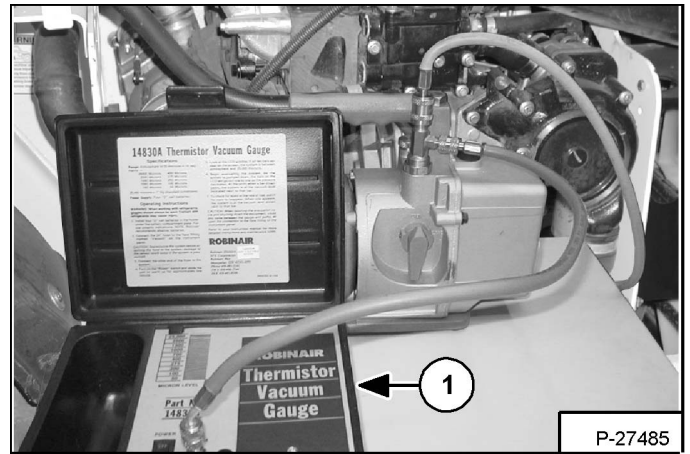

A thermistor vacuum gauge (Item 1) [Figure 80-100-14] can be used to determine the critical vacuum level during evacuation. It is a solid state instrument that constantly monitors and visually indicates the vacuum level.

The thermistor vacuum gauge is used with the vacuum pump [Figure 80-100-14].

Start the vacuum pump and open ISO-valve on the vacuum pump.

Be sure that both hand valves, and both charge port valves are open.

Run the vacuum pump for at least 45 minutes to insure that all the moisture is boiled out of the system.

Stop the vacuum pump and close the ISO-valve on the vacuum pump.


Close both hand valves on the manifold gauge set and remove the yellow hose from the vacuum pump that goes to the manifold gauge set.

Remove the vacuum pump and thermistor vacuum gauge.

SYSTEM CHARGING AND RECLAMATION (CONT'D)

Charging Procedure (Cont'd)


Figure 80-100-15

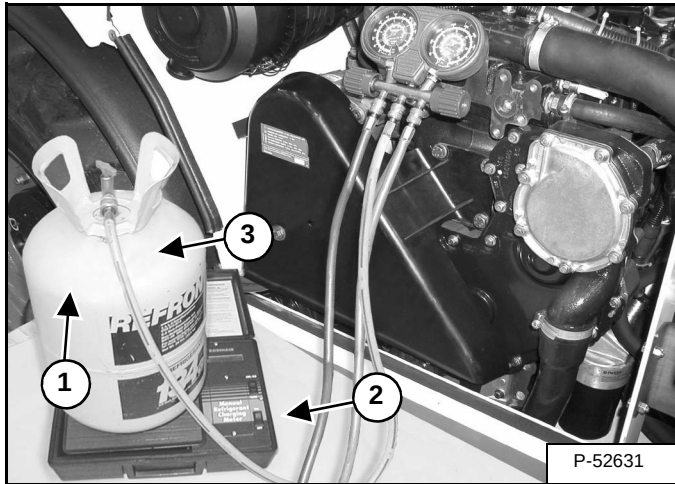

Place a refrigerant container with R134a (Item 1) on a charging scale (Item 2) [Figure 80-100-15] and zero out the scale.


Connect the yellow hose (Item 3) [Figure 80-100-15] from the manifold gauge set to the valve on the refrigerant tank.

Figure 80-100-16

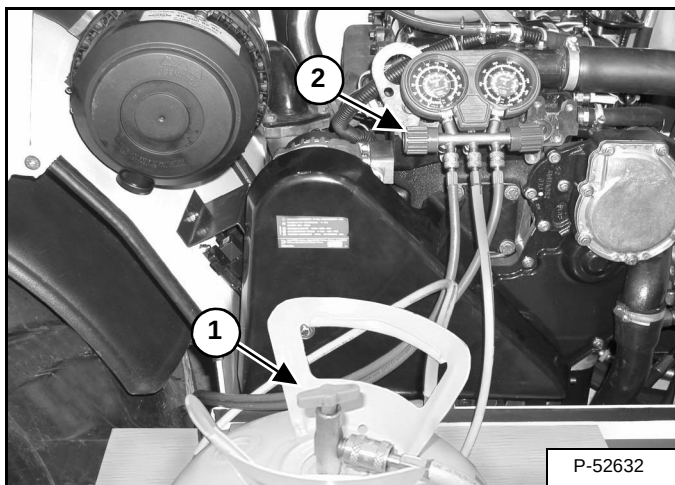

Open the valve on the refrigerant container (Item 1) and open the low pressure hand valve (Blue) (Item 2) [Figure 80-100-16] on the manifold gauge set. Allow the vacuum to pull in the refrigerant until the pressure stabilizes.

Figure 80-100-17

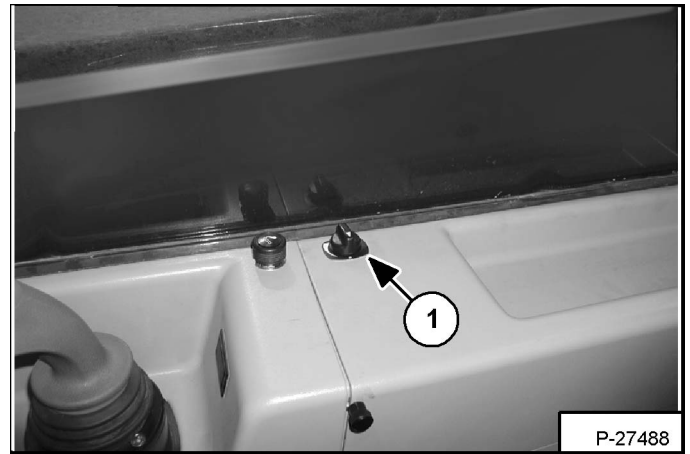

Turn the A/C fan switch (Item 1) [Figure 80-100-17] to HIGH position.

Start the machine, and run at medium speed.

Watch the scale and run system until the predetermined amount of refrigerant is added to the A/C system.

The A/C system holds 1.76 lbs (0,800 Kg) of refrigerant.

Turn off the valve on the refrigerant container, and hand valves on the manifold gauge set.

Turn off the engine and remove the A/C charging equipment from the machine.

Install access cover.

Close the engine cover.

COMPRESSOR


Removal And Installation

Evacuate the A/C system. (See "Reclamation Procedure" on page 80-100-1)

Remove the alternator. (See "Removal And Installation" on page 60-40-1)


Remove the compressor belt.

Figure 80-110-1

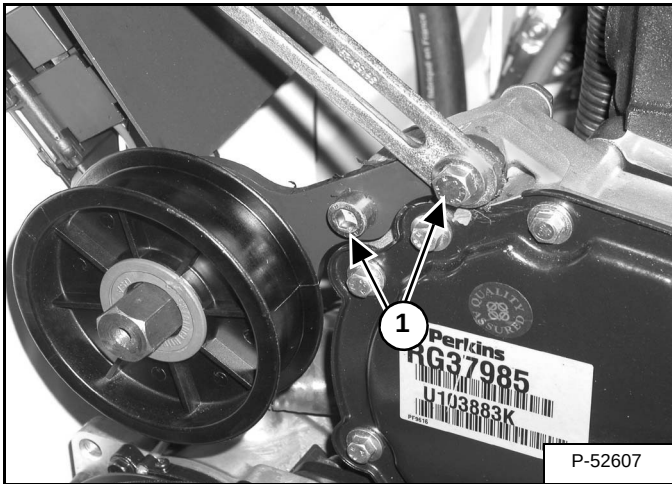

Remove the two tensioner pulley mount belts (Item 1) [Figure 80-110-1]. Remove the pulley assembly.

Figure 80-110-2

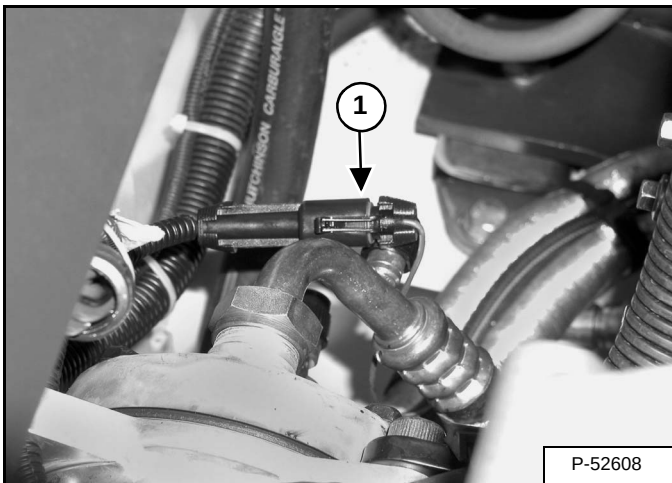

Unplug the connector (Item 1) [Figure 80-110-2] from the compressor.


Mark the compressor hoses for correct installation.

WARNING

In the event of a leakage, wear safety goggles. Escaping refrigerant can cause severe injuries to eyes. In contact with a flame, R134a refrigerant gives a toxic gas.

W-2371-0500

Figure 80-110-3

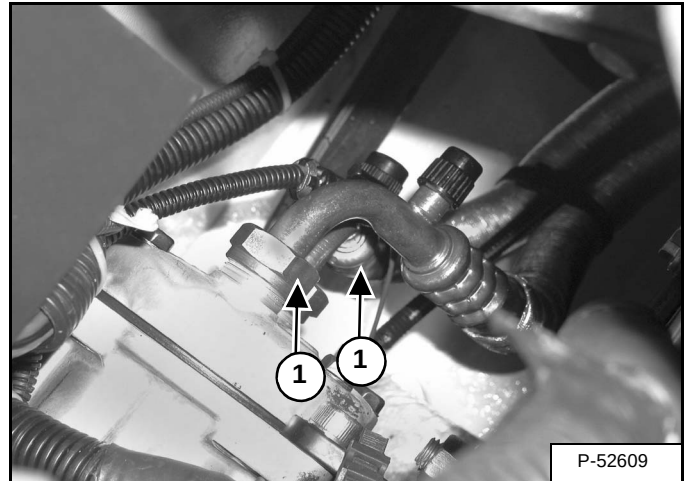


Remove the compressor hoses (Item 1) [Figure 80-110-3].

Installation: Tighten the hoses to 22 ft.-lbs. (29,8 Nm) torque.

Cap and plug the hoses and fittings with the proper A/C caps and plugs.

Figure 80-110-4

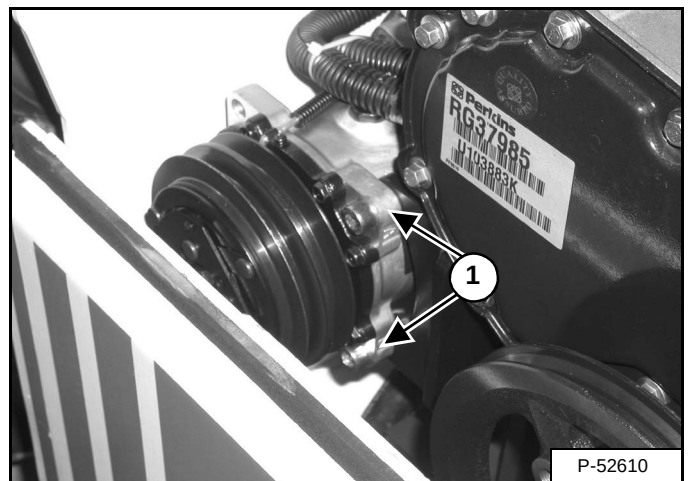


Remove the mount bolts (Item 1) [Figure 80-110-4].

Remove the compressor.

COMPRESSOR (CONT'D)

Compressor Clutch Disassembly And Assembly


Figure 80-110-5

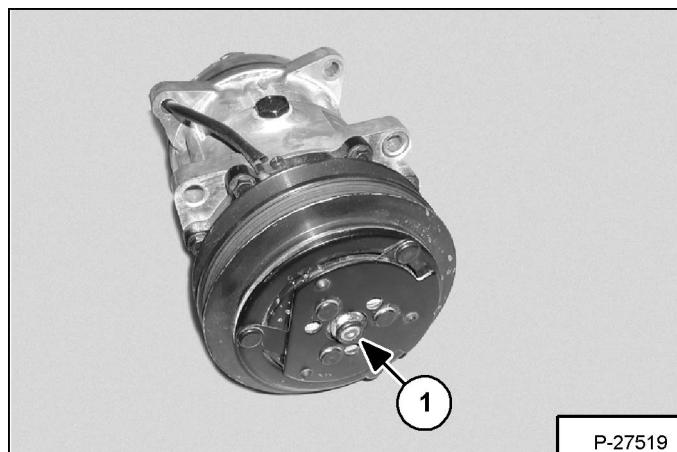

Remove the center armature nut (Item 1) [Figure 80-110-5].


Assembly: Tighten the armature nut to 8 ft.-lbs. (12 Nm).

Figure 80-110-6

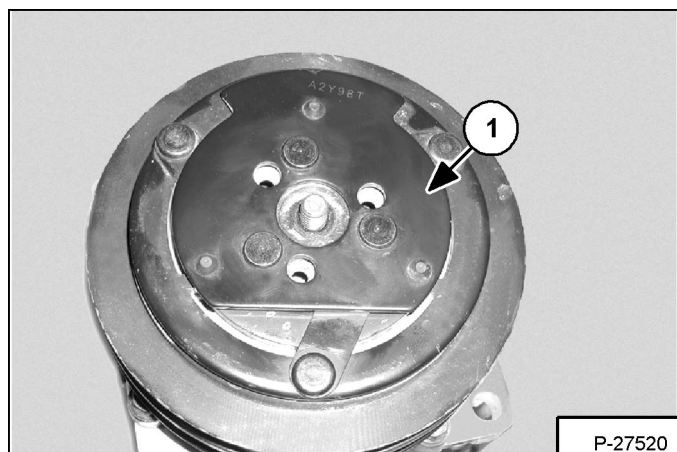


To remove the armature plate (Item 1) [Figure 80-110-6] from the clutch face you must make an armature plate puller.

Figure 80-110-7

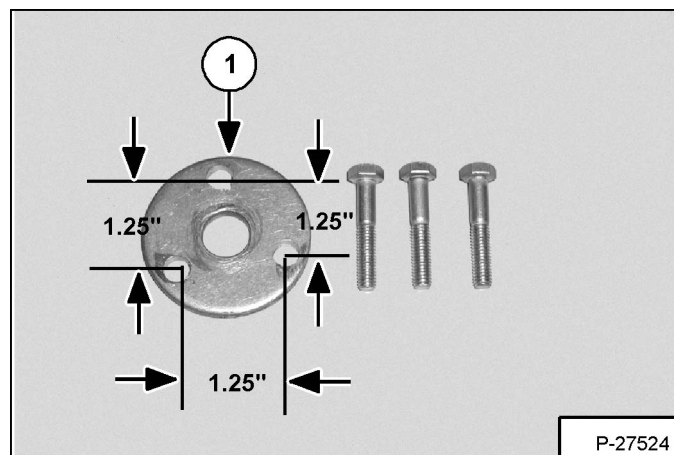

The armature plate puller (Item 1) [Figure 80-110-7] can be constructed by drilling three 0.315 inch (8 mm) holes in a flat circular plate, located 1.25 inches (31,75 mm) apart.

Figure 80-110-8

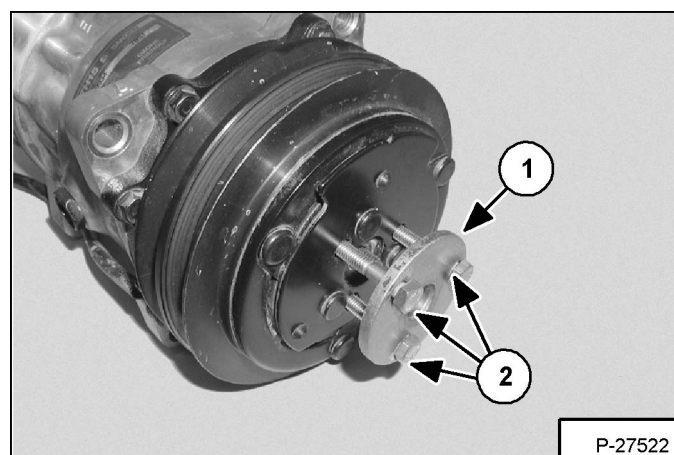


Attach the armature puller plate (Item 1) to the armature plate using the three bolts (Item 2) [Figure 80-110-8].

COMPRESSOR (CONT'D)


Compressor Clutch Disassembly And Assembly (Cont'd)

Figure 80-110-9

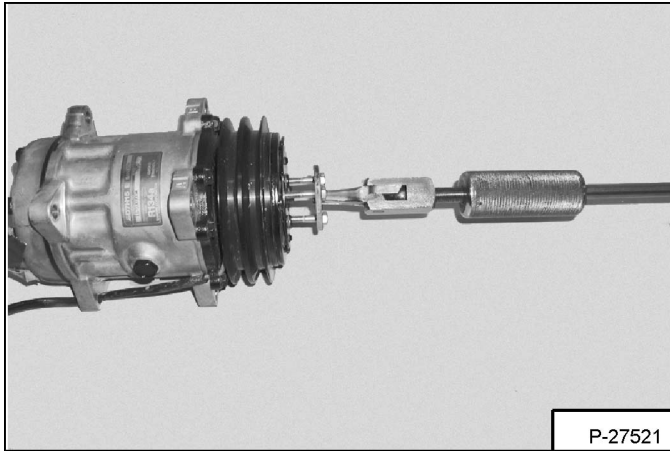

Attach a slide hammer puller to the armature puller tool [Figure 80-110-9].

Figure 80-110-10

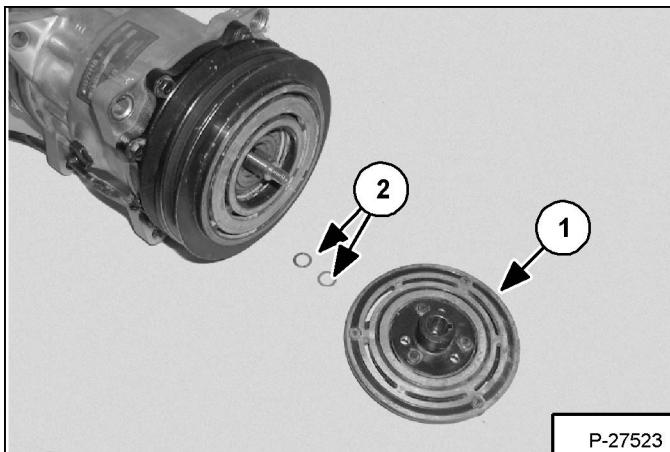

Remove the armature plate (Item 1) [Figure 80-110-10] from the compressor clutch.


Remove the shims (Item 2) [Figure 80-110-10] from the armature shaft or armature plate.

Assembly: Insure that the clutch has the correct clearance by adding the shims (Item 2) [Figure 80-110-10].

The specified clearance for the clutch is 0.01-0.02 in. (0.3-0.6 mm) adjusting shims are available in the following thicknesses.


- 0.0039 in. (0.1 mm)
- 0.0118 in. (0.3 mm)
- 0.0197 in. (0.5 mm)

Figure 80-110-11

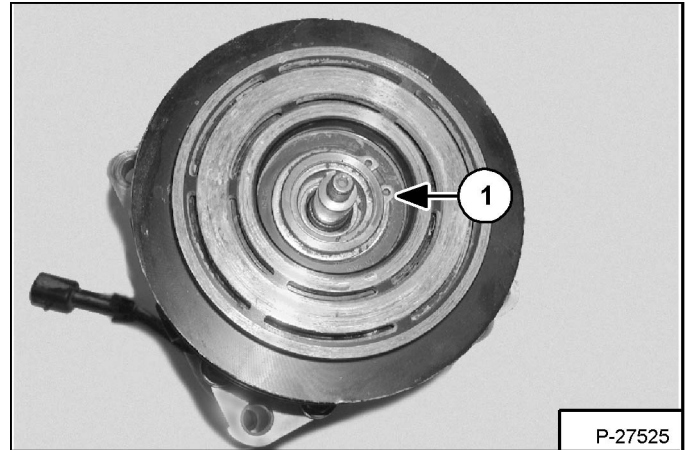

Remove the snap ring (Item 1) [Figure 80-110-11] from the pulley assembly.

Figure 80-110-12

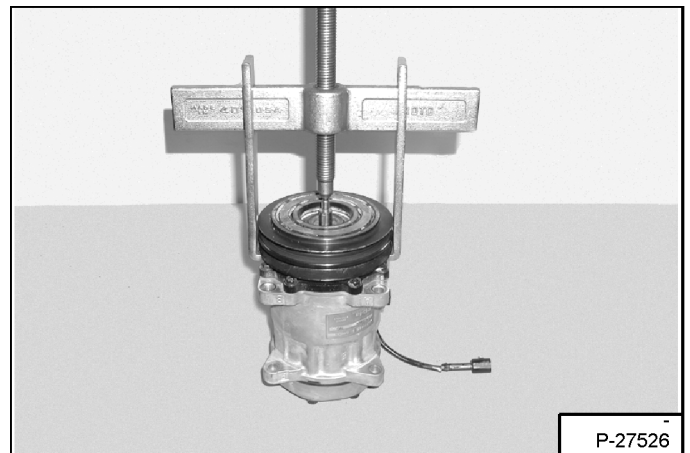


Remove the pulley from the compressor [Figure 80-110-12].

COMPRESSOR (CONT'D)


Compressor Clutch Disassembly And Assembly (Cont'd)

Figure 80-110-13

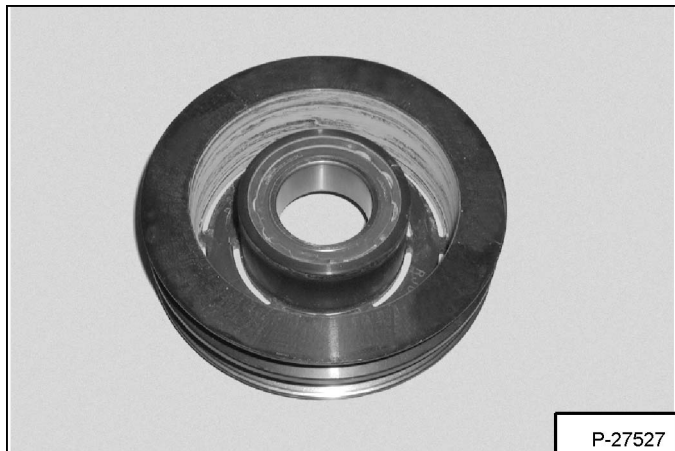


The pulley assembly and bearing [Figure 80-110-13] must be replaced as a complete unit.

Figure 80-110-14

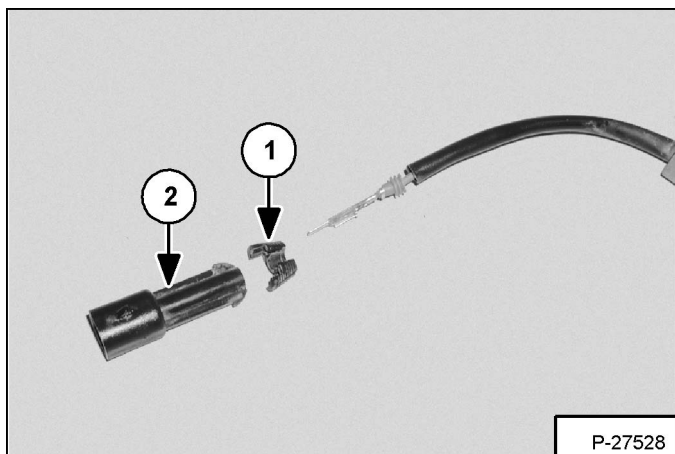


Remove the lock (Item 1) and connector (Item 2) [Figure 80-110-14] from the compressor harness.

Figure 80-110-15

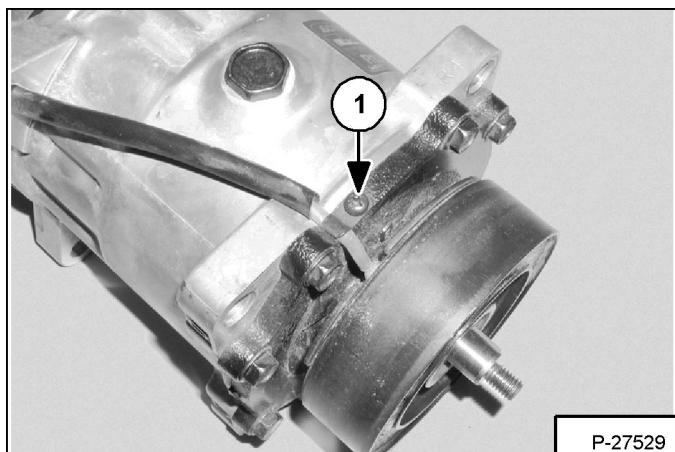

Remove the harness retainer screw assembly (Item 1) [Figure 80-110-15].

Figure 80-110-16

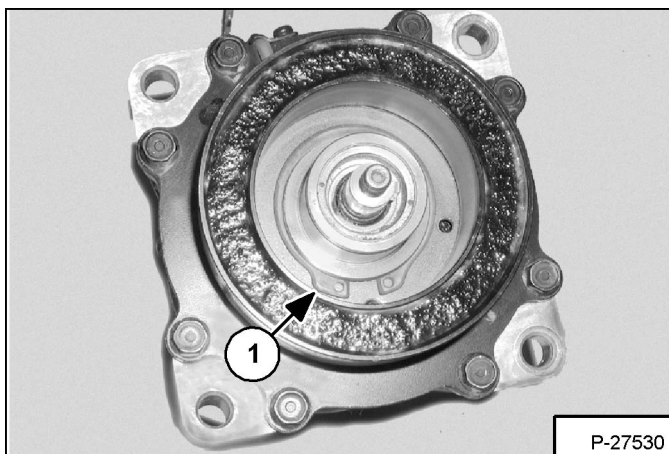


Remove the snap ring (Item 1) [Figure 80-110-16] from the coil.

COMPRESSOR (CONT'D)


Compressor Clutch Disassembly And Assembly (Cont'd)

Figure 80-110-17

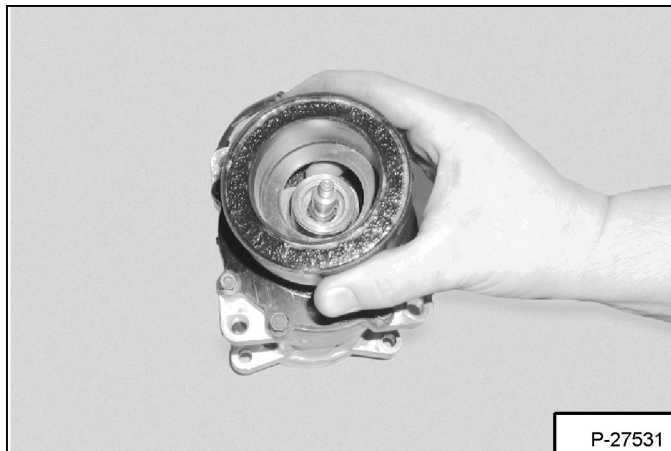

Remove the coil from the compressor [Figure 80-110-17].

Figure 80-110-18

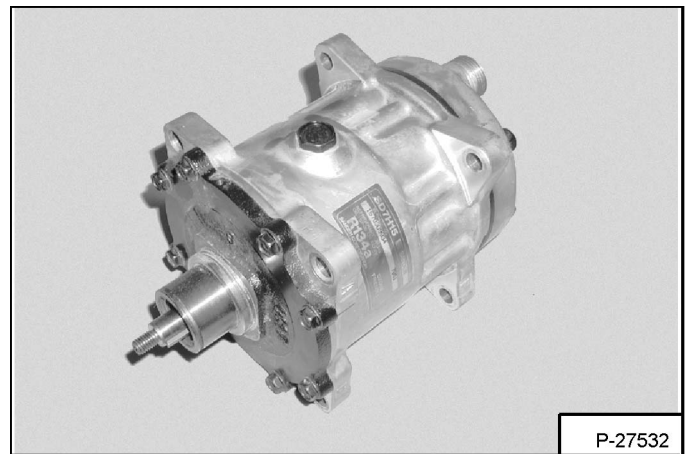

The compressor [Figure 80-110-18] must be replaced as a complete unit.



Bobcat®

CONDENSER

Removal And Installation


Remove the refrigerant from the A/C system. (See "Reclamation Procedure" on page 80-100-1)

WARNING

In the event of a leakage, wear safety goggles. Escaping refrigerant can cause severe injuries to eyes. In contact with a flame, R134a refrigerant gives a toxic gas.

W-2371-0500


Figure 80-120-1

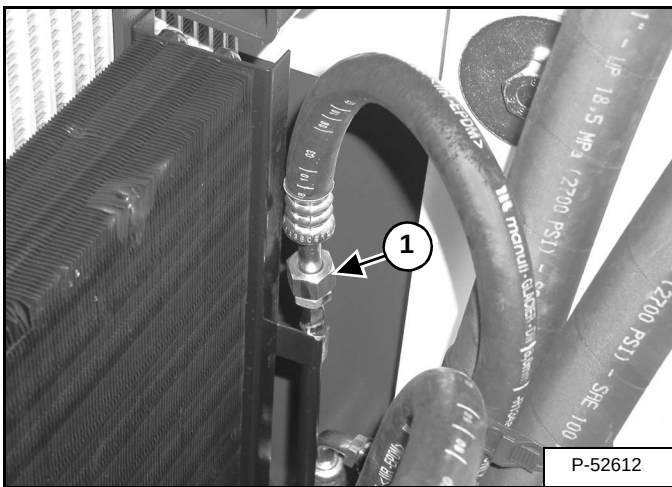

Remove the hose (Item 1) [Figure 80-120-1] from the condenser.


NOTE: Install caps and plugs on all fittings.

Figure 80-120-2

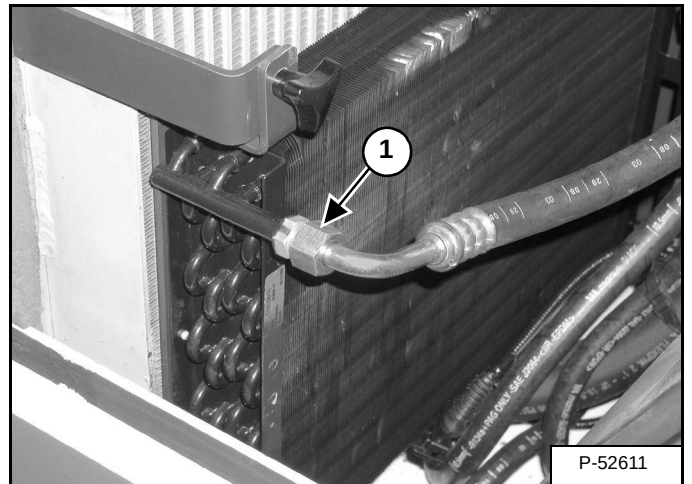

Remove the A/C hose (Item 1) [Figure 80-120-2] from the condenser.

Figure 80-120-3

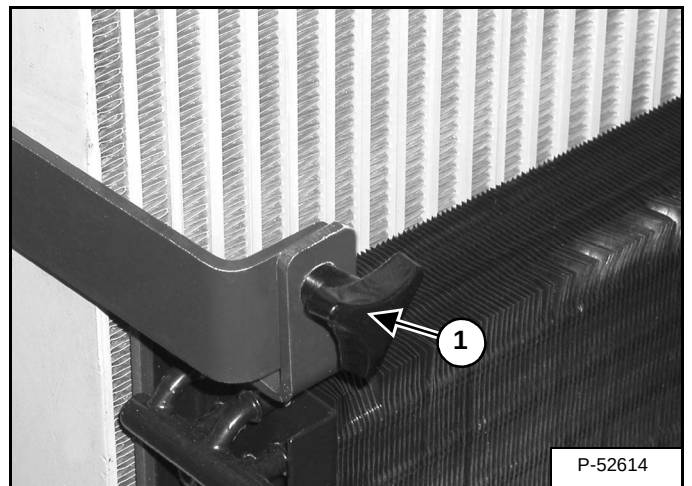

Remove the two nuts (Item 1) [Figure 80-120-3] from each side of the condenser.

Tilt the condenser forward and remove.



Bobcat®

RECEIVER/DRIER

Removal And Installation

Open the engine cover.

Remove the refrigerant from the A/C system. (See "Reclamation Procedure" on page 80-100-1)

Remove the air cleaner. (See "Housing Removal And Installation" on page 70-40-1)

Remove the two hoses (Item 1) [Figure 80-130-2] from the Receiver/Drier.

NOTE: Mark the hoses for correct installation.

NOTE: Install caps and plugs on all fittings.


Loosen the bolt (Item 2) [Figure 80-130-2] on the mounting bracket.

WARNING

In the event of a leakage, wear safety goggles. Escaping refrigerant can cause severe injuries to eyes. In contact with a flame, R134a refrigerant gives a toxic gas.


W-2371-0500

Figure 80-130-1

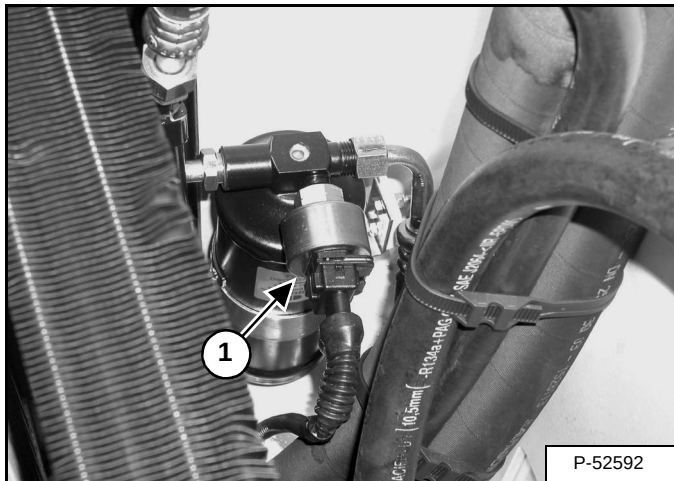

Unplug the connector (Item 1) [Figure 80-130-1] from the pressure switch.

Figure 80-130-2

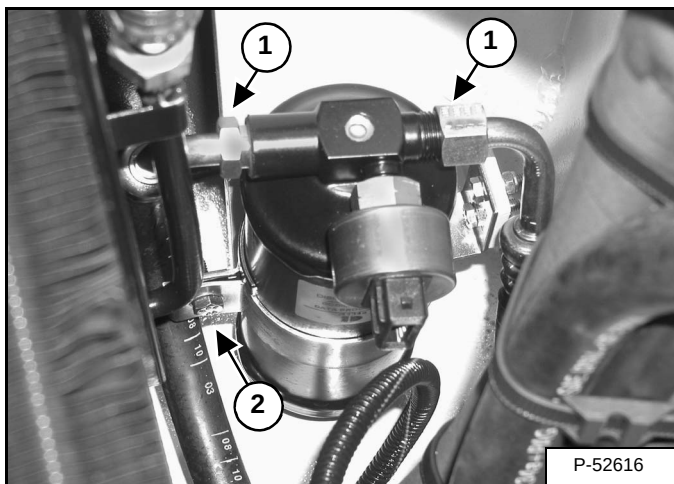



Bobcat®

PRESSURE SWITCH

Removal And Installation

Open the engine cover.


Remove the refrigerant from the A/C system. (See "Reclamation Procedure" on page 80-100-1)

WARNING

In the event of a leakage, wear safety goggles. Escaping refrigerant can cause severe injuries to eyes. In contact with a flame, R134a refrigerant gives a toxic gas.


W-2371-0500

Figure 80-140-1

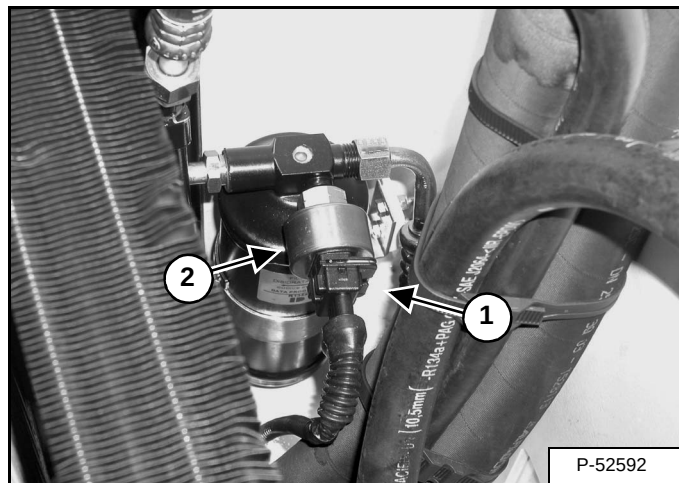

Unplug the connector (Item 1) from the pressure switch (Item 2) [Figure 80-140-1].

Figure 80-140-2

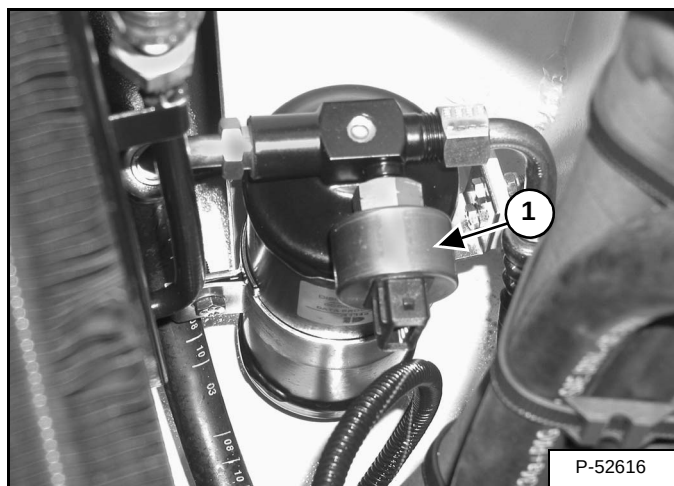

Remove the pressure switch (Item 1) [Figure 80-140-2] from the Receiver/Drier assembly.



Bobcat®

EVAPORATOR/BLOWER UNIT

Removal And Installation


Remove the refrigerant from the A/C system. (See "Reclamation Procedure" on page 80-100-1)

WARNING

In the event of a leakage, wear safety goggles. Escaping refrigerant can cause severe injuries to eyes. In contact with a flame, R134a refrigerant gives a toxic gas.


W-2371-0500

Figure 80-150-1

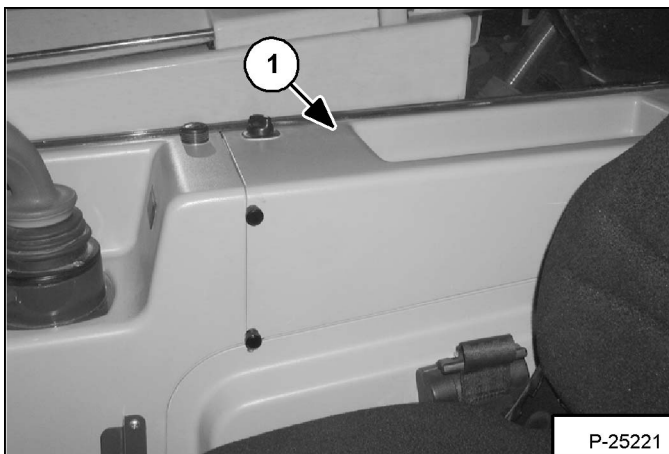


Remove the fuse box cover (Item 1) [Figure 80-150-1].

Figure 80-150-2

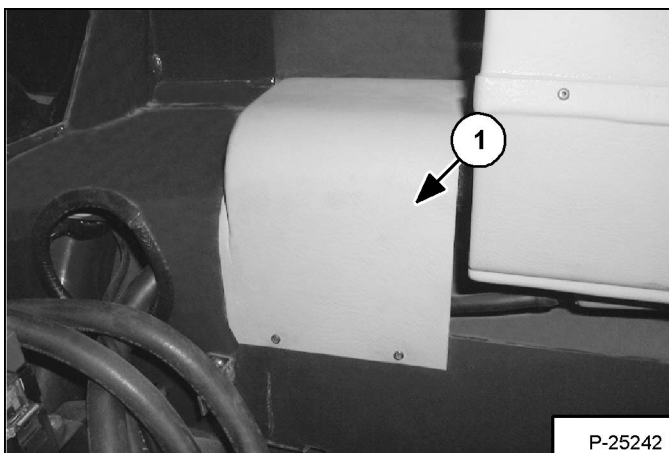


Remove the rear panel (Item 1) [Figure 80-150-2].

Figure 80-150-3

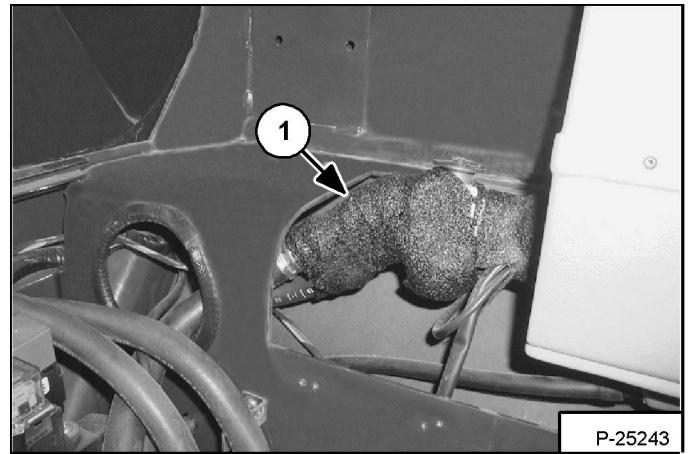

Temporarily remove the covering (Item 1) [Figure 80-150-3] from the A/C hoses and expansion valve.

Figure 80-150-4

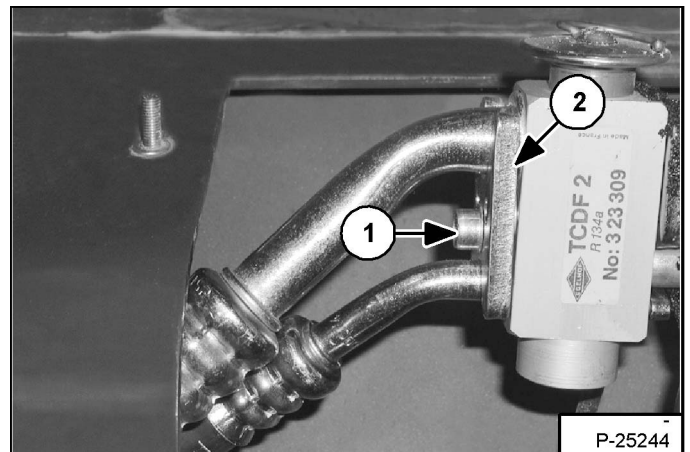


Remove the bolt (Item 1) and plate (Item 2) [Figure 80-150-4]. Remove both A/C hoses.

NOTE: Plug the A/C hoses to avoid contamination.

EVAPORATOR/BLOWER UNIT (CONT'D)


Removal And Installation (Cont'd)

Figure 80-150-5

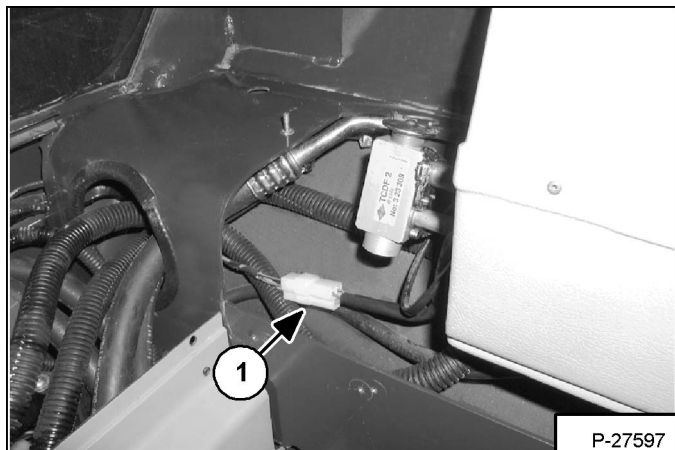


Unplug the thermostat wiring connector (Item 1) [Figure 80-150-5].

Figure 80-150-6

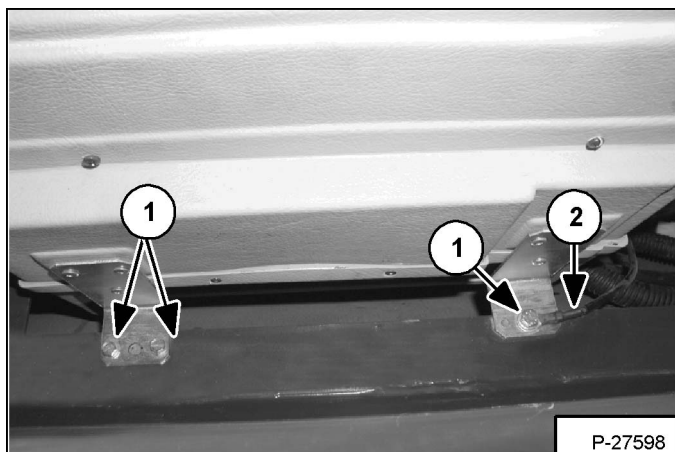

Remove the three mount bolts (Item 1) and ground wire (Item 2) [Figure 80-150-6] from the back of the evaporator unit.


Figure 80-150-7

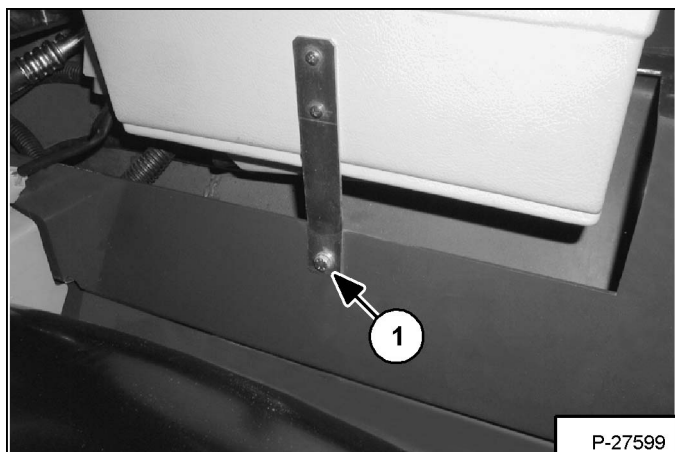

Remove the front mounting bolt (Item 1) [Figure 80-150-7].

Lay the evaporator/blower unit on the seat.

Figure 80-150-8

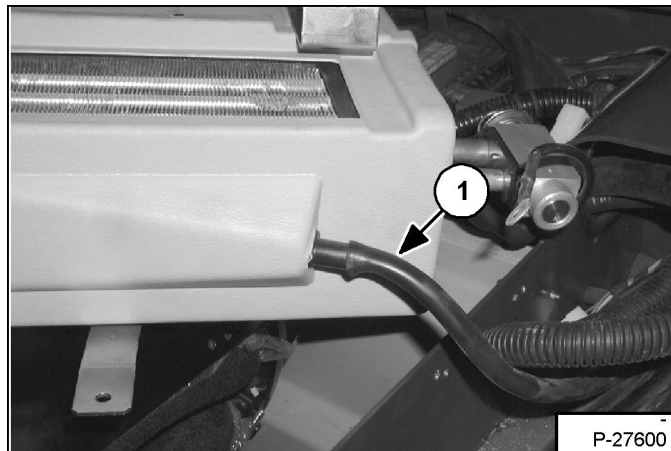

Remove the drain hose (Item 1) [Figure 80-150-8].

Remove the evaporator/blower unit from the machine.

EXPANSION VALVE

Removal And Installation


Remove the refrigerant from the A/C system. (See "Reclamation Procedure" on page 80-100-1)

WARNING

In the event of a leakage, wear safety goggles. Escaping refrigerant can cause severe injuries to eyes. In contact with a flame, R134a refrigerant gives a toxic gas.


W-2371-0500

Figure 80-160-9

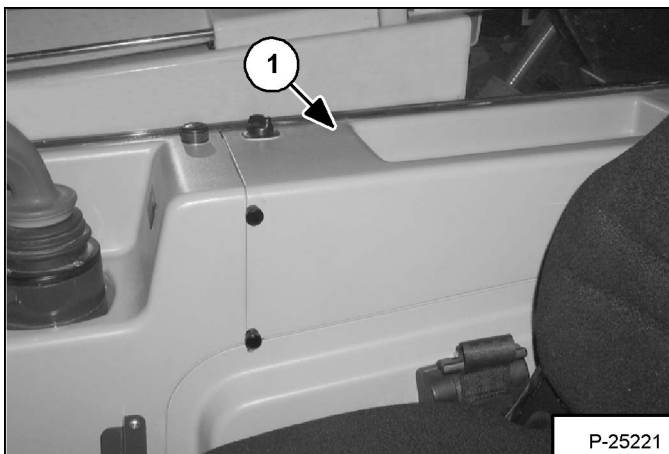


Remove the fuse box cover (Item 1) [Figure 80-160-9].

Figure 80-160-10

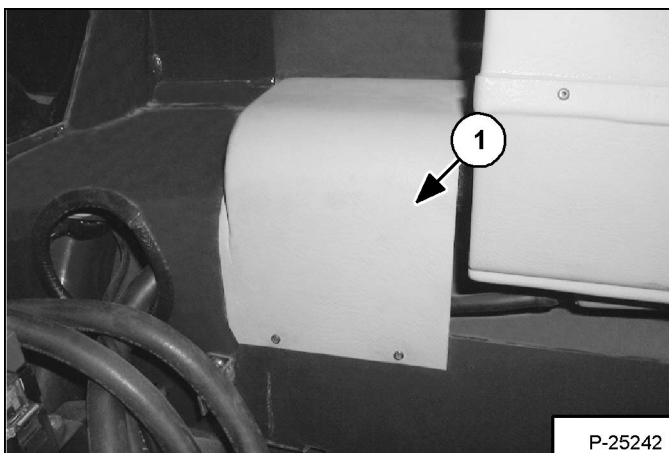


Remove the rear panel (Item 1) [Figure 80-160-10].

Figure 80-160-11

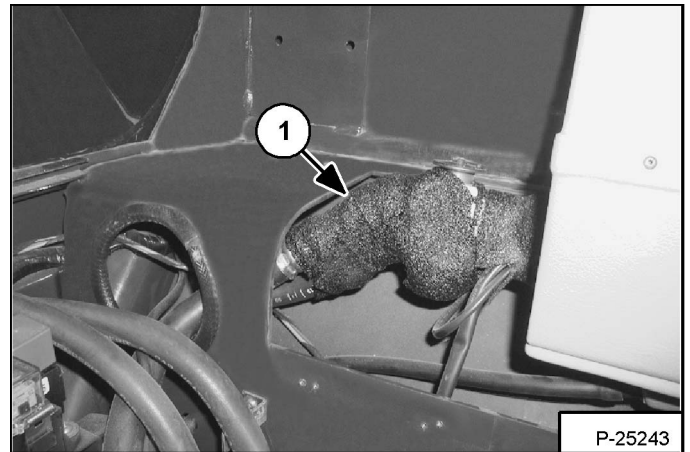

Temporarily remove the covering (Item 1) [Figure 80-160-11] from the A/C hoses and expansion valve.

Figure 80-160-12

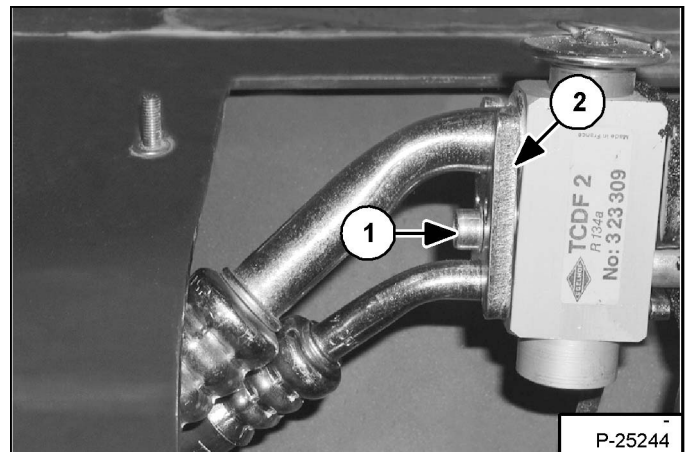

Remove the bolt (Item 1) and plate (Item 2) [Figure 80-160-12]. Remove both A/C hoses.

NOTE: Plug the A/C hoses to avoid contamination.

EXPANSION VALVE (CONT'D)

Removal And Installation (Cont'd)

Figure 80-160-13


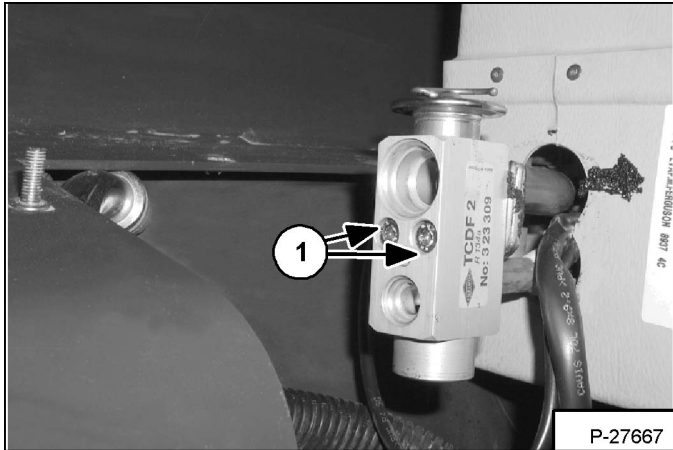


Figure 80-160-14

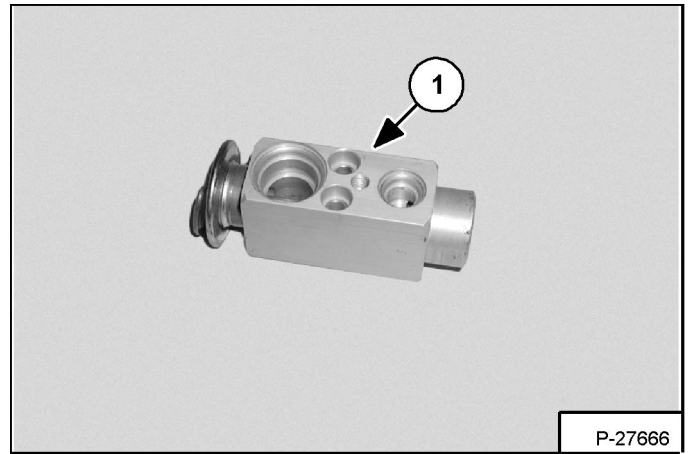

The expansion valve (Item 1) [Figure 80-160-14] is replaced as a complete unit.

Remove the two mount bolts (Item 1) [Figure 80-160-13].

Remove the expansion valve.

HEATER ASSEMBLY

Removal And Installation


Remove the travel/signal levers. (See page 60-70-1.)

Remove the instrument panel. (See page 60-80-1)

Remove the switch panel. (See page 60-90-1)


Remove the dash cover/steering column cover. (See "Removal And Installation" on page 50-130-1)

Figure 80-170-1

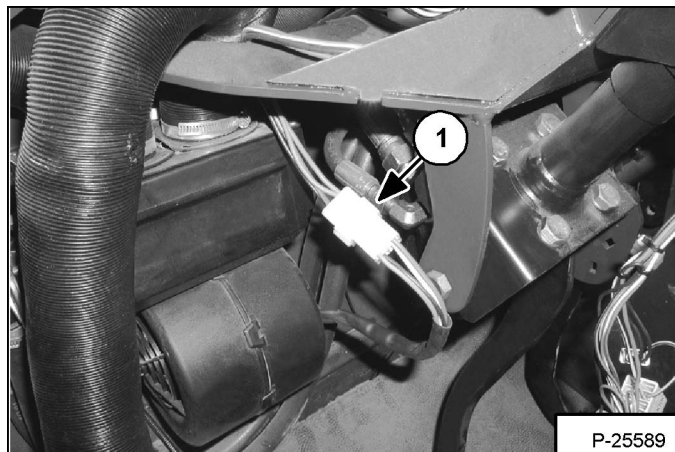


Unplug the connector (Item 1) [Figure 80-170-1].

Figure 80-170-2

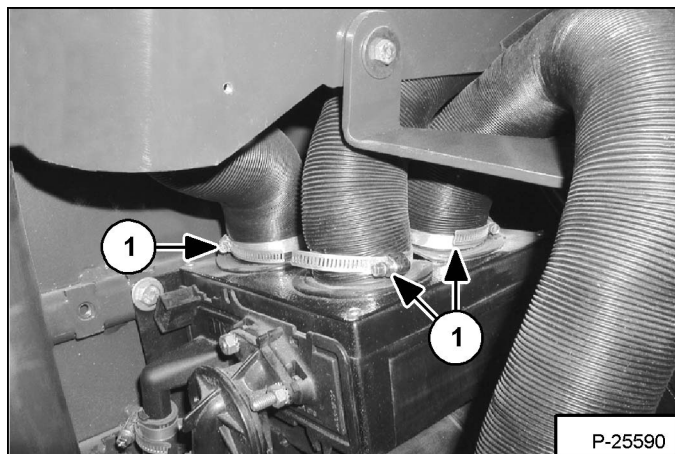


Remove the vent hoses (Item 1) [Figure 80-170-2] from the top of the assembly.

Figure 80-170-3

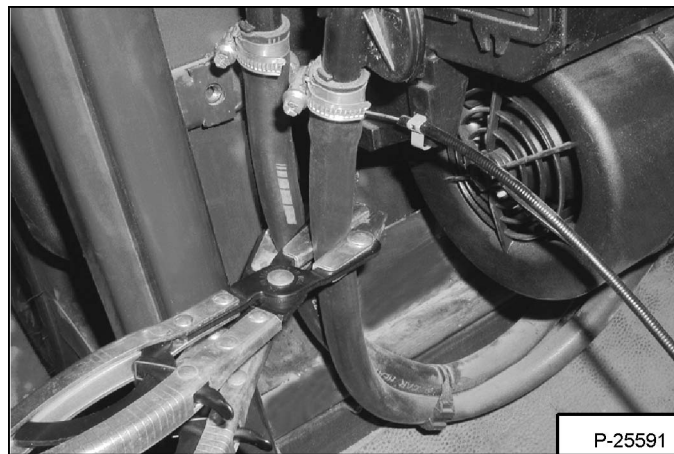

Clamp the heater hoses [Figure 80-170-3].

Figure 80-170-4

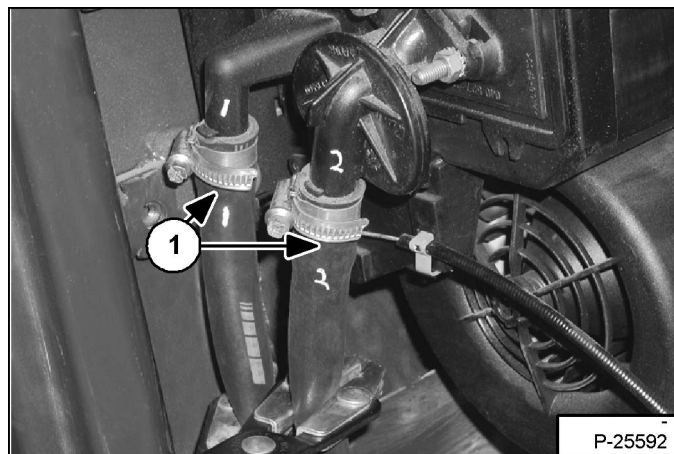


Remove the heater hoses (Item 1) [Figure 80-170-4] from the heater assembly.

NOTE: Mark the hoses for correct installation.

HEATER ASSEMBLY (CONT'D)

Removal And Installation (Cont'd)


Figure 80-170-5

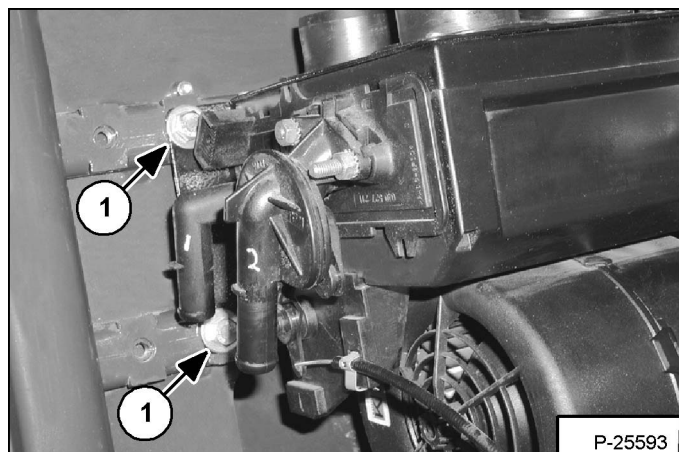

Remove the mounting bolts (Item 1) [Figure 80-170-5] and remove the heater assembly.


Fan Removal And Installation

Figure 80-170-6

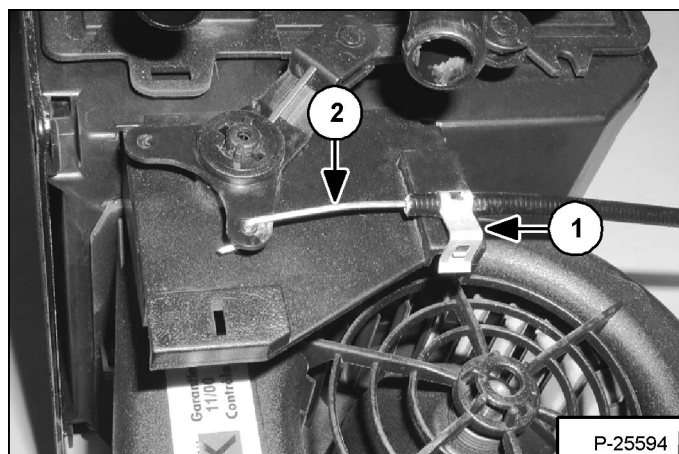

Carefully remove the clip (Item 1) and cable (Item 2) [Figure 80-170-6].


Figure 80-170-7

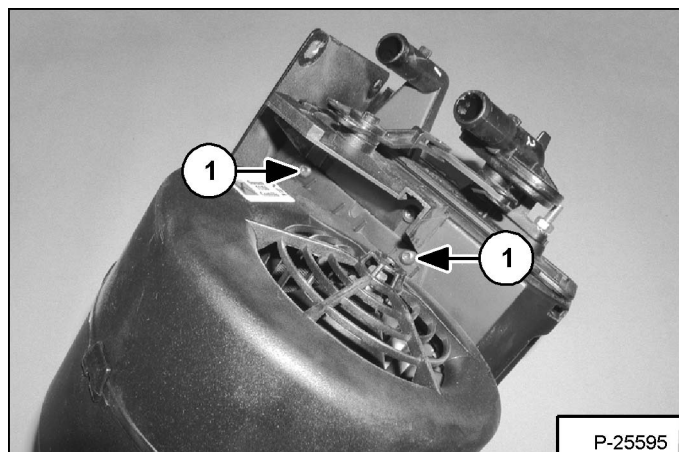

Remove the fan mounting bolts (Item 1) [Figure 80-170-7] and remove the fan.

Core Removal And Installation

Figure 80-170-8

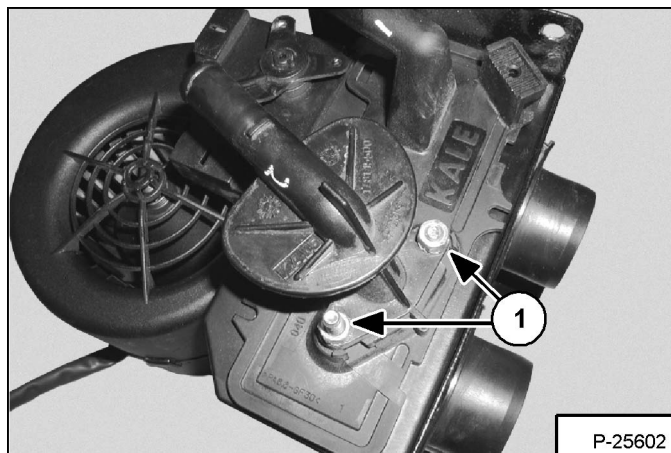


Remove the two flange mounting nuts (Item 1) [Figure 80-170-8].

HEATER ASSEMBLY (CONT'D)


Core Removal And Installation (Cont'd)

Figure 80-170-9

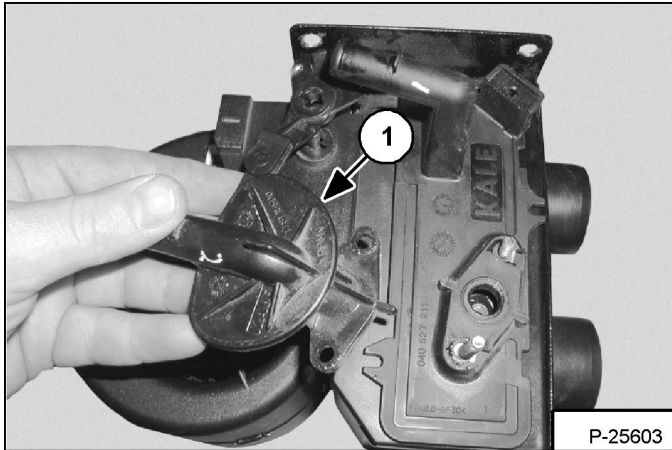


Remove the flange/linkage assembly (Item 1) [Figure 80-170-9] from assembly.

Figure 80-170-10

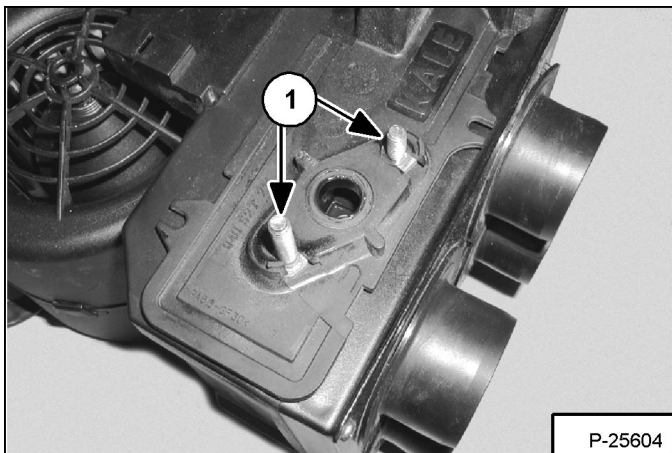


Remove the two bolts (Item 1) [Figure 80-170-10] and save for later use.

Figure 80-170-11

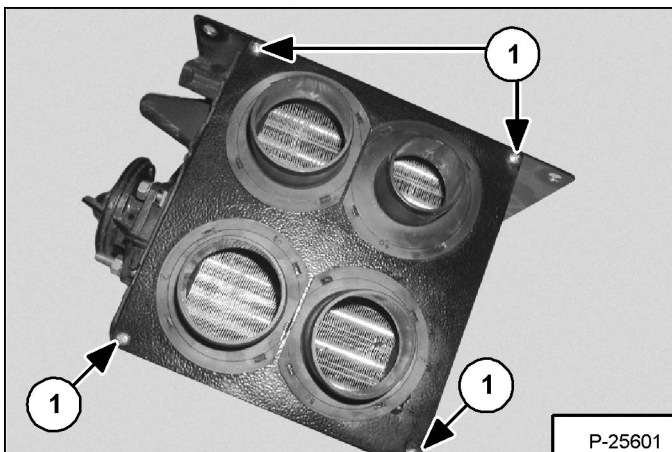

Remove the four screws (Item 1) [Figure 80-170-11] from the vent bracket.

Figure 80-170-12

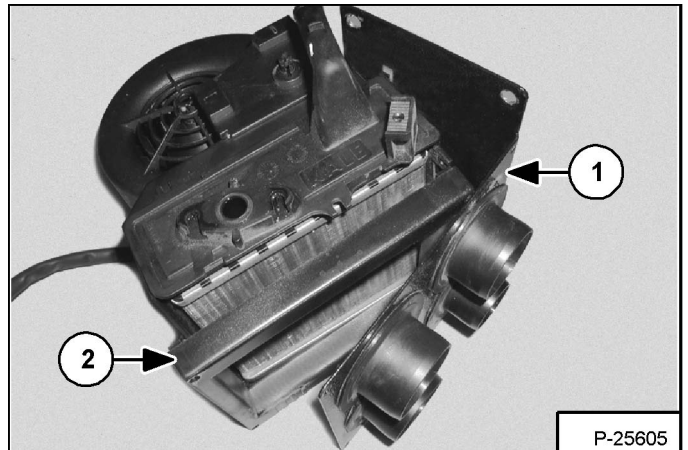


Remove the end bracket (Item 1) and spacer (Item 2) [Figure 80-170-12] from the assembly.

HEATER ASSEMBLY (CONT'D)


Core Removal And Installation (Cont'd)

Figure 80-170-13

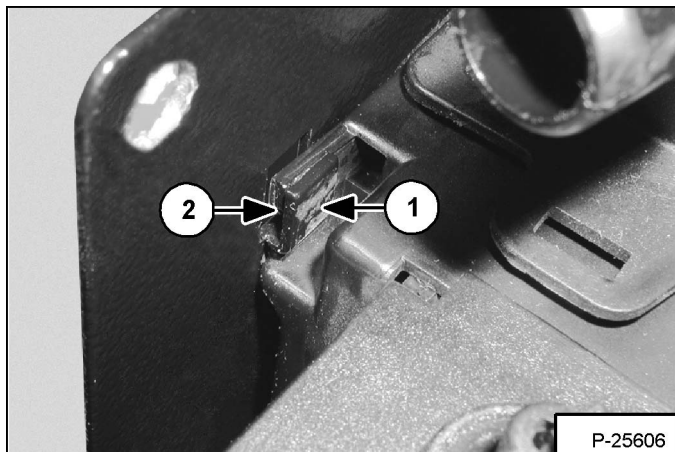

Be sure to separate the bracket (Item 1) and tab (Item 2) [Figure 80-170-13].

Figure 80-170-14

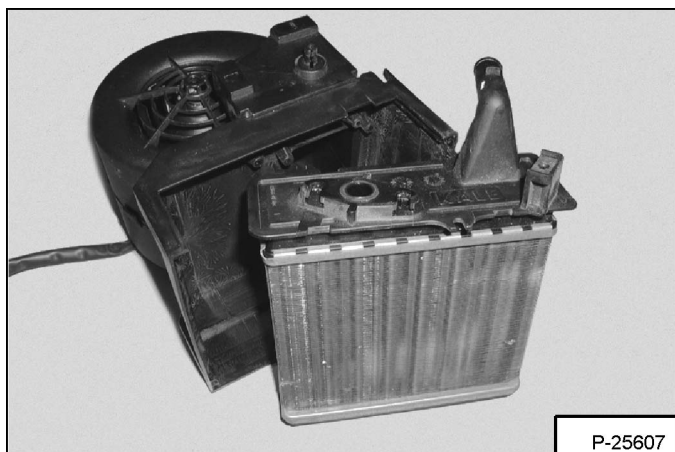

Slide the core from the housing [Figure 80-170-14].

SPECIFICATIONS

CONVERSIONS	SPEC-70-1
Decimal And Millimeter Equivalents	SPEC-70-1
U.S. To Metric Conversion.	SPEC-70-2
ENGINE SPECIFICATIONS	SPEC-20-1
Camshaft And Thrust Washer	SPEC-20-6
Connecting Rods And Bearings	SPEC-20-4
Crankshaft	SPEC-20-4
Crankshaft Re-Grind Data	SPEC-20-5
Cylinder Block	SPEC-20-6
Cylinder Head	SPEC-20-1
Cylinder Liners	SPEC-20-7
Engine Torque Component	SPEC-20-11
Exhaust Valves	SPEC-20-2
Flywheel	SPEC-20-9
Fuel Injection Pump.	SPEC-20-7
Fuel Injectors.	SPEC-20-7
Fuel Lift Pump	SPEC-20-7
General	SPEC-20-1
Intake Valves	SPEC-20-2
Main Bearings	SPEC-20-6
Oil Pump, Gear And Relief Valve	SPEC-20-9
Pistons And Piston Rings	SPEC-20-3
Rocker Shaft, Rockers And Bushings	SPEC-20-3
Thrust Washers	SPEC-20-6
Timing Case And Timing Gears	SPEC-20-8
Turbocharger	SPEC-20-9
Valve Guides	SPEC-20-1
Valve Springs.	SPEC-20-2
Water Pump And Thermostat	SPEC-20-10
HYDRAULIC CONNECTION SPECIFICATIONS	SPEC-50-1
Flare Fitting	SPEC-50-2
O-ring Face Seal Connection	SPEC-50-1
O-ring Flare Fitting	SPEC-50-3
Port Seal Fitting.	SPEC-50-5
Straight Thread O-ring Fitting	SPEC-50-1
Tubelines And Hoses	SPEC-50-1
HYDRAULIC/HYDROSTATIC FLUID SPECIFICATIONS.	SPEC-60-1
Specifications	SPEC-60-1

SPECIFICATIONS

Continued On Next Page

SPECIFICATIONS (CONT'D)


MACHINE TORQUE SPECIFICATIONS	SPEC-30-1
Axle	SPEC-30-1
Boom	SPEC-30-1
Drive Box	SPEC-30-1
Drive Motor	SPEC-30-1
Engine	SPEC-30-2
Hydraulic Pump	SPEC-30-2
TORQUE SPECIFICATIONS FOR BOLTS	SPEC-40-1
Torque For General Metric Bolts	SPEC-40-2
Torque for General SAE Bolts	SPEC-40-1
Telescopic Handler SPECIFICATIONS	SPEC-10-1
Capacities	SPEC-10-3
Controls	SPEC-10-2
Dimensional Specifications	SPEC-10-1
Drive System	SPEC-10-2
Electrical System	SPEC-10-3
Engine	SPEC-10-2
Hydraulic System	SPEC-10-3
Instrument Panel	SPEC-10-3
Performance Specifications	SPEC-10-2
Tires	SPEC-10-3

Telescopic Handler SPECIFICATIONS

Dimensions are given for machine equipped with standard tires and may vary with other tire types.

- All dimensions are shown in millimetres. Respective metric dimensions are given in millimeters enclosed by parentheses.
- Where applicable, specifications conform to SAE, ASME or ISO standards and are subject to change without notice.

Dimensional Specifications

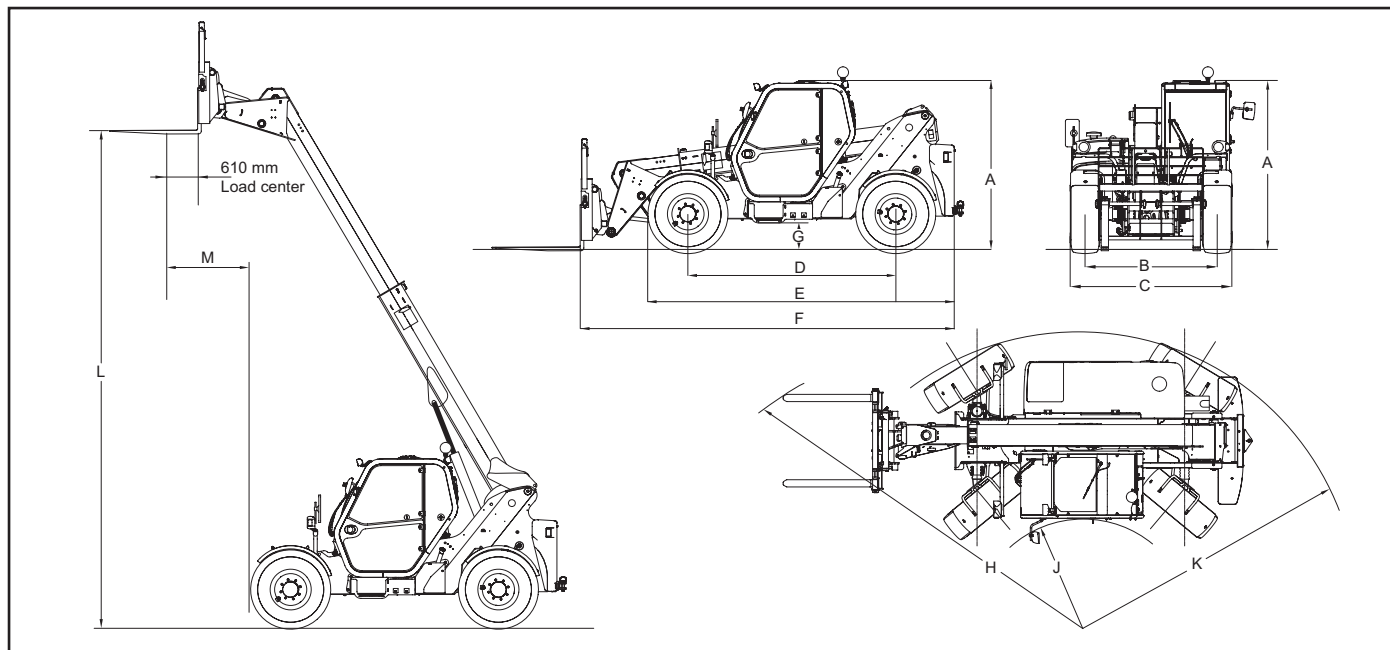

	T3571	T3571L
A	2372 mm	2372 mm
B	1798 mm	1798 mm
C	2215 mm	2215 mm
D	2850 mm	2850 mm
E	4143 mm	4143 mm
F	4969 mm	4969 mm
G	513 mm	513 mm
H	5066 mm	5066 mm
J	1400 mm	1400 mm
K	3885 mm	3885 mm
L	7205 mm	7205 mm
M	1395 mm	1395 mm

Telescopic Handler SPECIFICATIONS (CONT'D)

Performance Specifications

Operating Weight	T3571 15,233 lbs. (6910 kg)	T3571L 15,300 lbs. (6,940 kg)
Maximum Rated Capacity	*7716 lbs. (3500 kg)	*7716 lbs. (3500 kg)
*Rated Load Capacity can change depending on which approved attachment is used		

- Where applicable, specifications conform to SAE, ASME or ISO standards and are subject to change without notice.

Engine

Make/Model	PERKINS 1104C-44T (Turbo-charged)
Fuel/Cooling	Diesel/Liquid
Horsepower (SAE Net)	100 HP (74,5 kW)
Number of Cylinders	Four
Lubrication	Pressure System W/Filter
Air Cleaner	Dry replaceable cartridge w/safety element

Controls

Steering	Steering Wheel w/ 3 Mode Sel-ctions (Front-Wheel, All-Wheel, Crab)
Hydraulics	Joystick w/ switches
Auxiliary Hydraulics	Electric Switches on Joystick
Parking Brake	Hand Operated Lever

Drive System

Main Drive	Hydrostatic 4 wheel drive
Transmission	Infinitely variable hydrostatic piston pump, driving 1 fully reversing hydrostatic motor
Final Drive	Front Differential with reduction gear box, Rear Differential, Planetary Axles with Oil Lubrication.

Travel Speed	T3571	T3571L
Low Range	0-4.4 mph (7.1 km/hr)	0-4.4 mph (7.1 km/hr)
High Range	0-18.7 mph (30,1 km/hr)	0-18.7 mph (30,1 km/hr)

Telescopic Handler SPECIFICATIONS (CONT'D)

Tires

	T3571	T3571L
Standard Tires	TITAN 400/70x20 150B 166A2 LIFT RIGGER II (4 bar front/rear)	TITAN 400/70x20 150B 166A2 LIFT RIGGER II (4 bar front/rear)
Optional Tires	DUNLOP 400/80x24 153B T37 TL (4.25 bar front/rear)	DUNLOP 400/80x24 153B T37 TL (4.25 bar front/rear)
	DUNLOP 405/70x20 MPT 152J 168A2 SP T9 (5.5 bar front/rear)	DUNLOP 405/70x20 MPT 152J 168A2 SP T9 (5.5 bar front/rear)
	MICHELIN 440/70x24 XM37 150A8 147B (3.5 bar front/rear)	MICHELIN 440/70x24 XM37 150A8 147B (3.5 bar front/rear)

Capacities

	T3571	T3571L	Type
Fuel Tank	38.3 gals. (145 L)	38.3 gals. (145 L)	Diesel #2 or #1
Hyd./Hydros. System	33 gals. (125 L)	33 gals. (125 L)	EQUIVIS ZS 46
Eng. Cooling System	18 qts. (17 L)	18 qts. (17 L)	Antifreeze mixture (Ethylene Glycol)
Engine Oil Change w/Filter	9 qts (8,5 L)	9 qts. (8,5 L)	See oil chart
Front Axle	11.1 qts (10,5 L)	11.1 qts (10,5 L)	100032-06A
Rear Axle	11qts. (10 L)	11 qts. (10 L)	100032-06A
Front Reduction Gearbox	0.85 qts. (0,8 L)	0.85 qts. (0,8 L)	100032-06A
Planetary Carrier	1.3 qts. (1,3 L)	1.3 qts. (1,3 L)	100032-06A

Hydraulic System

	T3571
Hydraulic Pump	Engine driven, 25 GPM (95 L/min)
Hydraulic Pressure	3843 PSI (265 Bar)
Auxiliary Flow	@ High idle 0-21 GPM (0-80 L/min)

Electrical System

Alternator	14.2 Volt, 70 amp with internal regulator
Battery	12 V — 105 Ah — 700A

Instrument Panel

Full compliment of instrumentation for engine, hydraulic and machine functions.



Bobcat®

ENGINE SPECIFICATIONS

All dimensions are given in inches. Respective metric dimensions are given in millimeters enclosed by parentheses.

General

Number Of Cylinders	4
Cylinder Arrangement	In-line
Cycle	4 Stroke
Direction Of Rotation	Clockwise From The Front
Intake System	Turbocharged
Combustion System	Direct Injection
Nominal Bore	3.937 (100)
Stroke	4.134 (105)
Compression Ratio	17.25:1
Displacement	243 C.I. (4 liters)
Firing Order	1-3-4-2

Cylinder Head

Head Thickness	4.643 - 4.647 (117,95 - 118,05)
Head Thickness After Machining (Minimum)	4.614 (117,20)
Valve Seat Angle	30°
Leak Test Pressure	29 PSI (2 Bar)

Valve Guides

Inside Diameter	0.3248-0.3287 (8,250-8,350)
Outside Diameter	0.5131-0.5137 (13,034-13,047)
Valve Guide Bore	0.5118-0.5129 (13,000-13,027)
Valve Guide Clearance In The Cylinder Head (Interference)	0.0003-0.00019 (0,007-0,047)
Overall Length:	
Intake	5.076-5.093 (128,92-129,37)
Exhaust	5.075-5.093 (128,92-129,37)
Protrusion From Bottom	0.486-0.498 (12,35-12,65)

ENGINE SPECIFICATIONS (CONT'D)

All dimensions are given in inches. Respective metric dimensions are given in millimeters enclosed by parentheses.

Exhaust Valves

Valve Stem Diameter	0.3515-0.3 528(8,93-8,96)
Valve Guide Clearance	0.0016-0.0033 (0,040-0,84)
Maximum	0.006 (0,15)
Valve Head Diameter	1.634-1.644 (41,51-41,75)
Valve Face Angle	30°
Overall Length	5.075-5.093 (128,92-129,37)
Seal Type	Stem seal with integral seating washer
Valve Seat Angle	30°
Valve Clearance	0.018 (0,45)
Exhaust Depth (Production)	0.060-0.071 (1,53-1,81)
Exhaust Depth (Service)	0.081 (2,06)

Intake Valves

Valve Stem Diameter	0.3525-0.3535 (8,95-8,98)
Valve Guide Clearance	0.0010-0.0027 (0,025-0,069)
Maximum	0.005 (0,13)
Valve Head Diameter	1.819-1.829 (46,20-46,45)
Valve Face Angle	30°
Overall Length	5.076-5.093 (128,92-129,37)
Seal Type	Stem seal with integral seating washer
Valve Seat Angle	30°
Valve Clearance	0.008 (0,20)
Intake Depth (Production)	0.062-0.072 (1,58-1,84)
Intake Depth (Service)	0.082 (2,09)

Valve Springs

Installed Height	1.358 (34,5)
Installed Height Pressure	51 lbs. (229 N)
Number Of Active Coils	3.8

ENGINE SPECIFICATIONS (CONT'D)

All dimensions are given in inches. Respective metric dimensions are given in millimeters enclosed by parentheses.

Rocker Shaft, Rockers And Bushings

Shaft Outside Diameter	0.9828-0.9837(24,962-24,987)
Clearance Between Rocker Arm Bushing and Shaft	0.0010-0.0035 (0,26-0,89)
Maximum	0.007 (0,17)

Pistons And Piston Rings

Type	Fastram combustion bowl inserted top ring groove, graphite skirt
Piston Pin Bore Diameter	1.5631-1.5633 (39,703-39,709)
Piston Projection Above the Block Deck	0.008-0.0137 (0,21-0,35)
Top Ring Groove Width	Tapered
Second Ring Groove Width	0.0999-0.1007 (2,54-2,56)
Third Ring Groove Width	0.1385-0.1393 (3,52-3,54)
Top Ring	Barrel Face, Molybdenum insert, Keystone
Second Ring	Taper Face, Cast Iron, Internal Bottom Step
Oil Control Ring	Two Piece Coil Spring Loaded, Chromium Face
Top Ring Width	Tapered
Second Ring Width	0.097-0.098 (2,48-2,49)
Third Ring Width	0.1366-0.1374 (3,47-3,49)
Top Ring Side Clearance	Wedge
Second Ring Side Clearance	0.002-0.003 (0,05-0,09)
Third Ring Side Clearance	0.0011-0.0027 (0,03-0,07)
Top Ring End Gap	0.011-0.021 (0,30-0,55)
Second Ring End Gap	0.027-0.037 (0,70-0,95)
Third Ring End Gap	0.0118-0.0216 (0,30-0,55)
Piston Pin Type	Full Floating
Piston Pin Outside Diameter	1.5628-1.5630 (39,694-39,700)
Piston Boss Clearance	0.0001-0.0006 (0,003-0,015)
Bushing Type	Steel Back, Lead Bronze Tin Bearing Material
Bushing Outside Diameter	1.7190-1.7259 (43,66-43,84)
Bushing Inside Diameter (Reamed)	1.5638-1.5645 (39,723-39,738)
Piston Pin Bushing Clearance	0.0009-0.0017 (0,023-0,044)

ENGINE SPECIFICATIONS (CONT'D)

All dimensions are given in inches. Respective metric dimensions are given in millimeters enclosed by parentheses.

Connecting Rods And Bearings

Connecting Rod Type	H Section, Wedge Shape Small End
Connecting Rod Cap Location	Flat joint face with dowels
Crank Pin End Diameter	2.6460-2.6465 (67,21-67,22)
Piston Pin End	1.693-1.694 (43,01-43,03)
Length Between Centers	8.624-8.626 (219,05-219,10)
Bearing Type	Steel Back, Lead Bronze Bearing Material with Lead Finish
Bearing Width	1.240-1.255 (31,55-31,88)
Bearing Thickness At The Center	0.0723-0.0725 (1,835-1,842)
Bearing Clearance	0.0012-0.0032 (0,03-0,081)
Bearing Undersize Available	-0.010 (-0,25), -0.020 (-0,50), -0.030 (-0,75)

Crankshaft

Main Journals	2.998-2.999 (76,16-76,18)
Maximum Wear And Out Of Round Of The Journals And Crank Pins	0.0016 (0,04)
Width Of Center Journal	1.738-1.741 (44,15-44,22)
Width Of Other Journals	1.545-1.549 (39,24-39,34)
Crank Pin Diameters	2.499-2.500 (63,47-63,49)
Width Of Crank Pins	1.589-1.591 (40,35-40,42)
Crankshaft End Play	0.0002-0.015 (0,05-0,38)
Thrust Washer Thickness: Std.	0.089-0.091 (2,26-2,31)
Oversize	0.096-0.098 (2,45-2,50)
Main Bearing Oil Clearance	0.0022-0.0046 (0,057-0,117)

ENGINE SPECIFICATIONS (CONT'D)

All dimensions are given in inches. Respective metric dimensions are given in millimeters enclosed by parentheses.


Crankshaft (Cont'd)

Undersize Journals And Crank Pins	0.010 (0,25), 0.020 (0,50), 0.030 (0,75)
-----------------------------------	--

With the crankshaft on V-blocks check the maximum run-out of the journals. They must not exceed these specifications below and the difference in run-out between journals must not exceed 0.004 (0,10)

Journal #1	Mounting
Journal #2	0.003 (0,08)
Journal #3	0.006 (0,15)
Journal #4	0.003 (0,08)
Journal #5	Mounting

Crankshaft Re-Grind Data

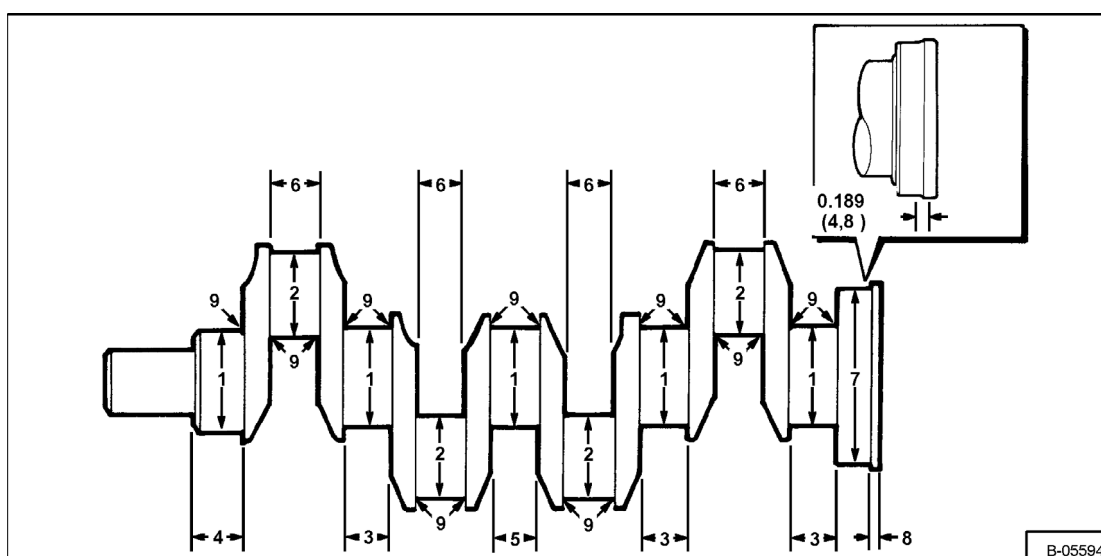

The finished sizes for crankshaft journals which have been ground undersize are given in the table below:

ITEM	0.010 (0,25)	0.020 (0,51)	0.030 (0,76)
1	2.9884-2.9892 (75.909-75.930)	2.9784-2.96792 (75,649-75,670)	2.9684-2.9692 (75,399-75,420)
2	2.488-2.4896 (63,220-63,240)	2.4788-2.4796 (62,962-62,982)	2.4688-2.4696 (62,708-62,728)
3	1.554 (39,47) maximum	-	-
4	1.474 (37,44) maximum	-	-
5	1.759 (44,68) maximum	-	-
6	1.596 (40,55) maximum	-	-
7	Do not machine this diameter	-	-
8	Do not machine this diameter	-	-
9	0.1448-0.1452 (3,68-3,69)	-	-

Crankshaft Heat Treatment: 60 Hour Nitride

NOTE: Crankshafts that have been nitrided for 60 hours can be machined 0.010 (0,25) without the need to harden again. Check the crankshaft for cracks before and after machining. Demagnetize the crankshaft after it has been checked for cracks. Remove any sharp corners from the oil holes. Surface finish and fillet radii must be maintained.

ENGINE SPECIFICATIONS (CONT'D)

All dimensions are given in inches. Respective metric dimensions are given in millimeters enclosed by parentheses.

Main Bearings

Type	Steel Back, 20% Tin Aluminium
All Others	1.244-1.255 (31,62-31,88)
Bearing Thickness (center)	0.0820-0.0823 (2,083-2,089)
Bearing Clearance	0.0022-0.0046 (0,057-0,117)
Bearing Undersize Available	-0.010 (-0,25) -0.020 (-0,50) -0.030 (-0,75)

Thrust Washers

Type	Steel back, bearing material
Position	Each Side Of Center Main Bearing
Standard	0.089-0.091 (2,26-2,31)
Oversize	0.096-0.098 (2,45-2,50)

Camshaft And Thrust Washer

Journal #1 Diameter	1.997-1.998 (50,71-50,74)
Journal #2 Diameter	1.987-1.988 (50,46-50,48)
Journal #3 Diameter	1.967-1.968 (49,95-49,98)
Cam Lift (Intake)	0.2768-0.2807 (7,03-7,13)
Cam Lift (Exhaust)	0.3135-0.3174 (7,963-8,063)
Maximum Wear And Out Of Round	0.021 (0,05)
Camshaft End Play (Production)	0.004-0.022 (0,10-0,55)
Service Limits	0.023 (0,60)
Thrust Washer Type	360°
Thrust Washer Thickness	0.216-0.218 (5,49-5,54)
Thrust Washer Recess Depth	0.218-0.222 (5,54-5,64)

Cylinder Block

Cylinder Bore Diameter	4.1338-4.1348 (105,000-105,025)
Main Bearing Bore Diameter	3.166-3.167 (80,416-80,442)

ENGINE SPECIFICATIONS (CONT'D)

All dimensions are given in inches. Respective metric dimensions are given in millimeters enclosed by parentheses.

Cylinder Liners

Production	Dry, Interference Fit, Flanged, With Flame Ring
Service	Dry, Interference Fit, Flanged, With Flame Ring
Production Liner Outside Diameter	4.105-4.106 (104,25-104,28)
Production Liner Clearance	0.001-0.003 (0,03-0,08)
Production Liner Inside Diameter	3.937-3.938 (100,00-100,03)
Service Liner Clearance	±0.001 (±0,03)
Inside Diameter Of Service Liner With Flame Ring (Installed)	3.937-3.961 (100,0-100,63)
Maximum	0.010 (0,25)
Flange Thickness	0.150-0.152 (3,81-3,86)
Liner Projection From Deck Surface	0.004 (0,10) Above or 0.004 (0,10) Below
Hose Angle	30/35°
Piston Cooling Jets	7 ft.lbs. (9 Nm)

Fuel Injection Pump

Type	DELPHI DP 210 with locking screw
Rotation From Drive End	Clockwise
Fuel System	Self Vent

Fuel Injectors

Working Pressure	4263 PSI (294 Bar)
------------------	--------------------

Fuel Lift Pump

Type	Electrically operated
Method of Drive	Electric Motor 12V/24V
Standard Pressure	6-10 PSI (0,41-0,69 Bar)
Minimum Pressure	3.75 PSI (0,26 Bar)

ENGINE SPECIFICATIONS (CONT'D)

All dimensions are given in inches. Respective metric dimensions are given in millimeters enclosed by parentheses.

Timing Case And Timing Gears

Camshaft Gear Number Of Teeth	68
Camshaft Gear Bore Diameter	1.375-1.376 (34,93-34,95)
Camshaft Hub Outside Diameter	1.374-1.375 (34,90-34,92)
Fuel Pump Gear Number Of Teeth (Electronic)	68
Fuel Pump Gear Bore (Electronic)	1.417-1.419 (29,99-30,02)
Crankshaft Gear Number Of Teeth	34
Crankshaft Gear Bore Diameter	1.875-1.8760 (47,625-47,650)
Crankshaft Gear Hub Diameter	1.875-1.8758 (47,625-47,645)
Crankshaft Gear Clearance	-0.0008 - +0.0008 (-0,020 - +0,020)
Idler Gear Number Of Teeth	73
Idler Gear Bore Diameter	2.250-2.251 (57,14-57,18)
(With Needle Bearings)	2.848-2.849 (72,35-72,36)
Width Of Idler Gear And Bushing Assembly (Fitted)	1.186-1.187 (30,14-30,16)
Flanged Bushing Inside Assembly (Fitted)	1.999-2.000 (50,78-50,80)
Idler Gear Hub Outside Diameter	1.9990-1.9999 (50,70-50,74)
(With Needle Bearings)	1.967-1.968 (49,975-49,988)
Idler Gear Hub Bushing Clearance	0.0016-0.0039 (0,04-0,10)
Gear End Play (Production Limits)	0.004-0.008 (0,10-0,20)
(With Needle Bearings)	0.0039-0.0295 (0,10-0,75)
Service Limit	0.015 (0,38)
Backlash For All Gears	0.003 (0,08) Minimum

ENGINE SPECIFICATIONS (CONT'D)

All dimensions are given in inches. Respective metric dimensions are given in millimeters enclosed by parentheses.

Oil Pump, Gear And Relief Valve

Type of Oil Pump	Gear Driven, Differential Rotor
Number Of Lobes	Inner 5, Outer 6
Clearance Of Outer Rotor To Body	0.006-0.013 (0,15-0,34)
End Play	
Inner Rotor	0.001-0.004 (0,04-0,09)
Outer Rotor	0.0010-0.0029 (0,025-0,076)
Oil Pump Idler Gear Bushing I.D.	0.6303-0.6314 (16,012-16,038)
Idler Shaft O.D.	0.6285-0.5292 (15,966-15,984)
Idler Gear Shaft Bushing Clearance	0.0011-0.0028 (0,028-0,072)
Oil Pump Idler Gear End Play	0.0019-0.0108 (0,050-0,275)
Relief Valve Plunger Bore Diameter	0.7578-0.7598 (19,250-19,300)
Relief Valve Plunger Outside Diameter	0.7553-0.7563 (19,186-19,211)
Clearance	0.0015-0.0044 (0,039-0,114)
Length Of The Spring (Installed)	2.35 (59,8)
Load On The Spring (Installed)	3.6-5.2 PSI (0,25 -0,36 Bar)
Pressure To Open Pressure Relief Valve	60-68 PSI (4,14-4,69 Bar)
Oil Filter Type	Full Flow Screw-on Type Canister
Pressure To Open By-pass Valve In Oil Filter	8-12 PSI (0,55-0,83 Bar)

Turbocharger

Type	Garrett GT25
------	--------------

Flywheel

Run-Out	Less than 0.012 (0,30)
Misalignment	0.001 (0,03) @ 1.0 (25)

ENGINE SPECIFICATIONS (CONT'D)

All dimensions are given in inches. Respective metric dimensions are given in millimeters enclosed by parentheses.

Water Pump And Thermostat

Type	Centrifugal, Gear Drive
Shaft Outside Diameter	0.8435-0.8440 (21,425-21,438)
Drive Gear Bore Diameter	0.8415-0.8425 (21,375-21,400)
Drive Gear Shaft Clearance	0.0009-0.0024 (0,025-0,063)
Impeller Bore Diameter	0.4701-0.4712 (11,943-11,971)
Impeller Shaft Outside Diameter	0.4723-0.4727 (11,997-12,008)
Impeller Clearance On Shaft	0.0010-0.0025 (0,026-0,065)
Bearing Bore Diameter	1.5743-1.5753 (39,989-40,014)
Bearing Diameter	1.5743-1.5747 (39,989-40,000)
Bearing Clearance In Pump Body	+0.0009/-0.0005 (+0,025/-0,011)
Thermostat Type	Wax Pellet, By-pass Blanking

NOMINAL TEMPERATURE STAMPED ON THERMOSTAT BY-PASS VALVE	START TO OPEN TEMPERATURE	FULLY OPEN TEMPERATURE	MINIMUM VALVE LIFT, FULLY OPEN
180° F (82° C)	170°/185° F (77°/85° C)	198°/208° F (92°/98° C)	0.35 (9,0)

ENGINE SPECIFICATIONS (CONT'D)

Engine Torque Component

COMPONENT	FT.-LBS.	NM
Bridge Piece To Block	12	16
Camshaft Gear Bolt	70	95
Connecting Rod Nuts		
Step 1	13	18
Final	52	70
Crank Pulley Bolts	85	115
Cylinder Head Bolt		
Step One	37	50
Step Two	74	100
Step Three	225°	
Step Three - Long Bolts	270°	
Engine Mounting Bridge To Frame	200	271
Exhaust Manifold Bolts	24	33
Flywheel Cover To Housing	45	61
Flywheel Housing To Cylinder Block	52	70
Flywheel To Crankshaft Bolts	77	105
Fuel Injector Nut	22	30
Fuel Injection Pump Gear Nut	18	24
Fuel Injection Pump Flange Nuts	18	24
Fuel Lift Pump Bolts	16	22
High Pressure Fuel Lines Fittings	22	30
Idle Gear Hub Bolts	33	44
Main Bearing Bolts		
Step 1	65	88
Step 2	125	170
Step 3	185	250
Oil Pan Bolts	16	22
Oil Pan Plug	25	34
Oil Pump Cover	16	22
Oil Pump To Front Main Cap	16	22
Oil Transfer Plate Bolts	22	30
Piston Cooling Jets	7	9
Rear Oil Seal Housing Bolts	16	22
Rocker Cover Nuts (With Shim Washer)	7	9
Rocker Shaft Bracket Nuts	20	27
Timing Case To Block	16	22
Timing Case Cover To Timing Case Bolts	16	22
Turbocharger To Manifold Nuts	33	44
Water Pump To Timing Case Bolts & Nuts	16	22



Bobcat®

MACHINE TORQUE SPECIFICATIONS

Axle

	FT.-LBS.	NM
Axle To Frame Mounting Bolts	275-300	370-410
Brake Housing Hex Bolt	59	80
Brake Housing Spring Bolts	7	10
Brake Housing Stud	88	120
Differential Lock Retainer Bolt	10	13
Fender Mount Bolt	90-100	125-140
Housing Bolt	236	320
Housing Nut	140	190
King Pin Mount Bolts	140	190
Pinion Ring Gear Bolts	10	13
Planetary Cover Bolts	18	25
Planetary Gear Mount Bolts	88	120
Steering Cylinder Bolts	88	120
Tie Rod Jam Nut	185	250
Tie Rod Nut	160	220
Tie Rod Swivel End	300	406
Turn Stop Adjust Jam Nut	110	150
Wheel Nuts	221	300

Boom

	FT.-LBS.	NM
Extension Cylinder Base End	133	180
Extension Cylinder Rod End	188-210	255-285
Wear Pads Front	43	58
Wear Pads Rear	29	39

Drive Box

	FT.-LBS.	NM
Cover Bolts	44	60
Inner Housing Bolts	88	120
Mounting Flange Bolts	44	60

Drive Motor

	FT.-LBS.	NM
End Cap Bolts	85	115
Mounting Bolts	155	210
Mounting Plate Bolts	46	63

MACHINE TORQUE SPECIFICATIONS (CONT'D)**Engine**

	FT.-LBS.	NM
A/C Compressor Mount Bolts	88	120
Alternator Mount Bolts	45	54
Starter Mount Bolts	45	54

Hydraulic Pump

	FT.-LBS.	NM
Filter Head	90	122
Flange Adapter	90	122
Guide Post Bolts	17	23
Mounting Bolts	78	106
Retaining Plate	10	13
Servo End Cap	10	13
Side Cover Bolts	24	32

TORQUE SPECIFICATIONS FOR BOLTS

Torque for General SAE Bolts

The following table shows standard torque specifications for bolts with zinc phosphate coating. Bolts purchased from Bobcat that have zinc phosphate coating are specified by the letter H following the part number.

THREAD SIZE		SAE GRADE 5	SAE GRADE 8
INCH. LBS.(Nm)	.250	80-90 (9,0-10,2)	110-120 (12,4-13,6)
	.3125	180-200 (20,3-22,6)	215-240 (24,2-27,1)
FOOT LBS.(Nm)	.375	25-28 (34-38)	35-40 (47-54)
	.4375	40-45 (54-61)	60-65 (81-88)
	.500	65-70 (88-95)	90-100 (122-136)
	.5625	90-100 (122-136)	125-140 (170-190)
	.625	125-140 (170-190)	175-190 (240-260)
	.750	220-245 (300-330)	300-330 (410-450)
	.875	330-360 (450-490)	475-525 (645-710)
	1.000	475-525 (645-710)	725-800 (985-1085)
	1.125	650-720 (880-975)	1050-1175 (1425-1600)
	1.250	900-1000 (1200-1360)	1475-1625 (2000-2200)
	1.375	1200-1350 (1630-1830)	2000-2200 (2720-2980)
	1.500	1500-1650 (2040-2240)	2600-2850 (3530-3870)
	1.625	2000-2800 (2720-2980)	3450-3800 (4680-5150)
	1.750	2500-2750 (3390-3730)	4300-4800 (5830-6500)
	1.875	3150-3500 (4270-4750)	5500-6100 (5830-6500)
	2.000	3800-4200 (5150-5700)	6500-7200 (8800-9800)

TORQUE SPECIFICATIONS FOR BOLTS (CONT'D)**Torque For General Metric Bolts**

Thread Size (Dia. x Pitch)	Material		
	Head Mark 4	Head Mark 7	Head Mark 10
M 5 x 0.8		3-4 ft.-lbs. (4-5 Nm)	
M 6 x 1.0		6-7 ft.-lbs. (8-9 Nm)	6-9 ft.-lbs. (8-12 Nm)
M 8 x 1.25	6-9 ft.-lbs. (8-12 Nm)	11-16 ft.-lbs. (15-22 Nm)	18-25 ft.-lbs. (24-34 Nm)
M 10 x 1.25	13-18 ft.-lbs. (18-24 Nm)	22-30 ft.-lbs. (30-41 Nm)	36-50 ft.-lbs. (49-68 Nm)
M 12 x 1.25	22-30 ft.-lbs. (30-41 Nm)	40-54 ft.-lbs. (54-73 Nm)	69-87 ft.-lbs. (94-118 Nm)
M 14 x 1.5	36-50 ft.-lbs. (49-68 Nm)	58-80 ft.-lbs. (79-108 Nm)	116-137 ft.-lbs. (157-186 Nm)

HYDRAULIC CONNECTION SPECIFICATIONS


O-ring Face Seal Connection

IMPORTANT

When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.

I-2003-0888


Figure SPEC-50-15

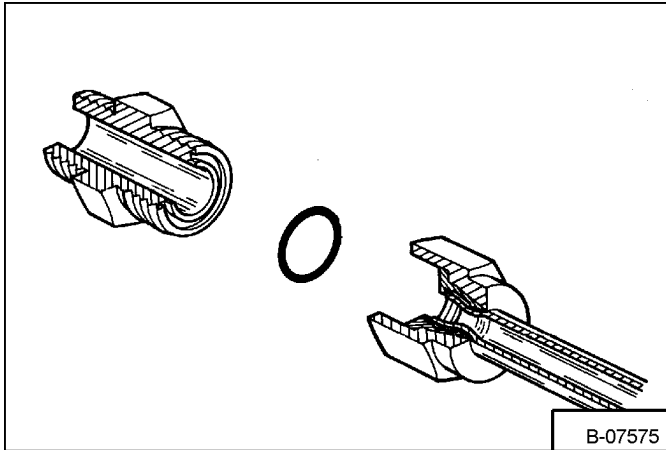

When the fitting is tightened, you can *feel* when the fitting is tight to eliminate leakage caused by under or over torqued fittings. Use vaseline petroleum jelly to hold the O-ring in position until the fittings are assembled [Figure SPEC-50-15].

Straight Thread O-ring Fitting

Figure SPEC-50-16

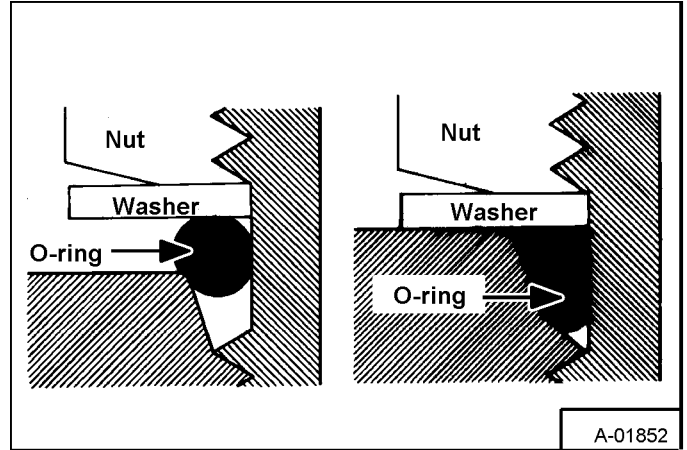

Lubricate the O-ring before installing the fitting. Loosen the jam nut and install the fitting. Tighten the jam nut until the washer is tight against the surface [Figure SPEC-50-16].

Tubelines And Hoses

Replace any tubelines that are bent or flattened. They will restrict flow, which will slow hydraulic action and cause heat.

Replace hoses which show signs of wear, damage or weather cracked rubber.


Always use two wrenches when loosening and tightening hose or tubeline fittings.

HYDRAULIC CONNECTION SPECIFICATIONS (CONT'D)

Flare Fitting

Use the following procedure to tighten the flare fitting:

Figure SPEC-50-17

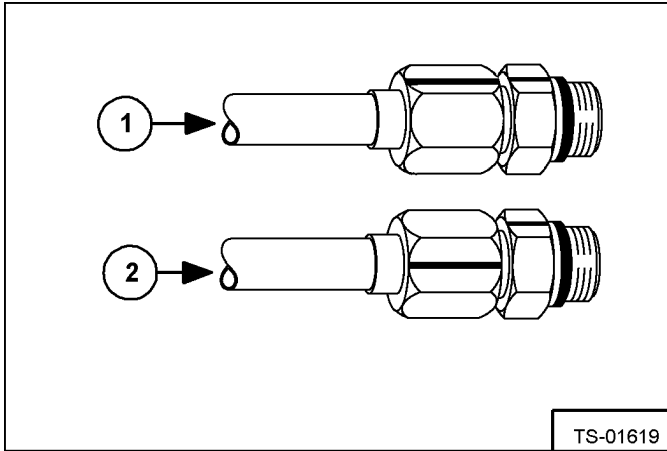

Tighten the nut until it makes contact with the seat. Make a mark across the *flats* of both the male and female parts of the connection (Item 1) **[Figure SPEC-50-17]**.


Use the chart below to find the correct tightness needed (Item 2) **[Figure SPEC-50-17]**. If the fitting leaks after tightening, disconnect it and inspect the seat area for damage.

FLARE FITTING TIGHTENING TORQUE					
WRENCH SIZE	TUBELINE OUTSIDE DIAMETER	THREAD SIZE	TORQUE FT.- LBS. (NM)	NEW ROTATE NO. OF HEX FLATS	RE-ASSEMBLY ROTATE NO. OF HEX FLATS
5/8"	5/16"	1/2" - 20	17 (23)	2-1/2	1
11/16"	3/8"	9/16" - 18	22 (30)	2	1
7/8"	1/2"	3/4" - 16	40 (54)	2	1
1"	5/8"	7/8" - 14	60 (81)	1-1/2	1
1-1/4"	3/4"	1-1/16" - 12	84 (114)	1	3/4
1-3/8"	1"	1-5/16" - 12	118 (160)	3/4	3/4

HYDRAULIC CONNECTION SPECIFICATIONS (CONT'D)

O-ring Flare Fitting

Figure SPEC-50-18

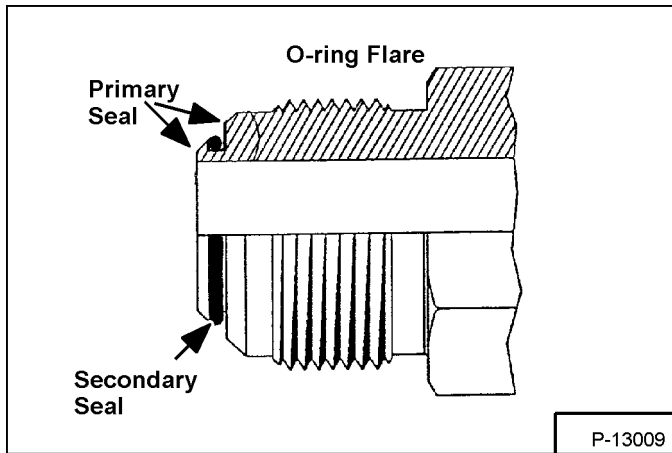


The flare is the primary seal, the O-ring is the secondary seal and helps absorb vibration and pressure pulses at the connection [Figure SPEC-50-18].

If necessary, the O-ring-flare fitting can be used without an O-ring.

Use the following procedure to tighten the O-ring flare fitting.

Figure SPEC-50-19

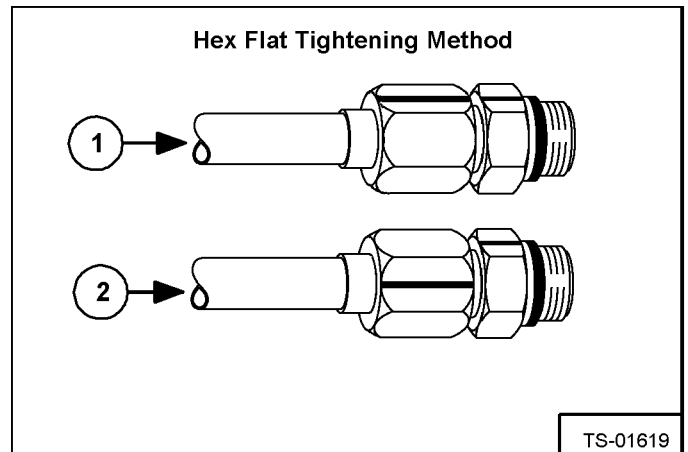

Tighten the nut until it contacts with the seat. Make a mark across the flats of both the male and female parts of the connection (Item 1) [Figure SPEC-50-19].

Use the chart below to find the correct tightness needed (Item 2) [Figure SPEC-50-19]. If the fitting leaks after tightening, disconnect it and inspect the seat area for damage.

FLARE FITTING TIGHTENING TORQUE					
WRENCH SIZE	TUBELINE OUTSIDE DIAMETER	THREAD SIZE	* TORQUE FT.- LBS. (NM)	** NEW ROTATE NO. OF HEX FLATS	*** RE-ASSEMBLY ROTATE NO. OF HEX FLATS
5/8"	5/16"	1/2" - 20	17 (23)	2-1/2	1
11/16"	3/8"	9/16" - 18	22 (30)	2	1
7/8"	1/2"	3/4" - 16	40 (54)	2	1
1"	5/8"	7/8" - 14	60 (81)	1-1/2	1
1-1/4"	3/4"	1-1/16" - 12	84 (114)	1	3/4
1-3/8"	1"	1-5/16" - 12	118 (160)	3/4	3/4

* If a torque wrench is used to tighten a new fitting to a used hose/tubeline.

* If a torque wrench is used to tighten a used fitting to a new hose/tubeline.

* If a torque wrench is used to tighten a new fitting to a new hose/tubeline.

** If using the hex flat tightening method to tighten a new fitting to a new hose/tubeline.

** If using the hex flat tightening method to tighten a new fitting to a used hose/tubeline.

*** If using the hex flat tightening method to tighten a used fitting to a new hose/tubeline.


HYDRAULIC CONNECTION SPECIFICATIONS (CONT'D)

O-ring Flare Fitting (Cont'd)

NOTE: O-ring flare fittings are not recommended in all applications. Use the standard flare fittings in these applications.

Do not use a O-ring flare fitting when a copper bonnet orifice is used. When tightened the connection at the bonnet may distort the flare face and prevent it from sealing.


Figure SPEC-50-20

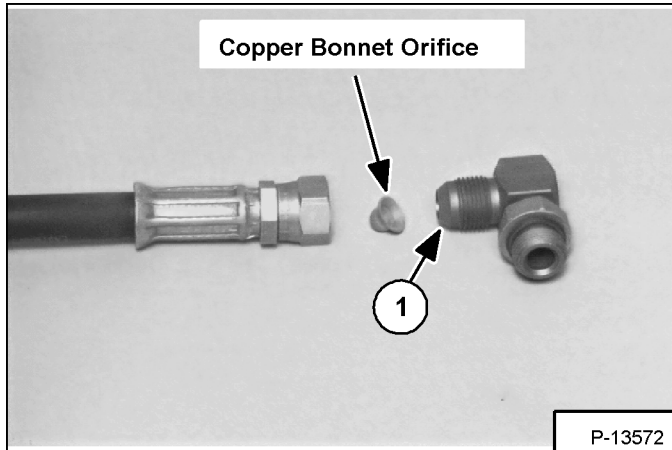

Use a standard flare fitting (Item 1) [Figure SPEC-50-20] as shown.

When a O-ring flare fitting is used as a straight thread port adapter the O-ring flare face is not used to seal. The O-ring may come off the fitting and enter the system.

Figure SPEC-50-21

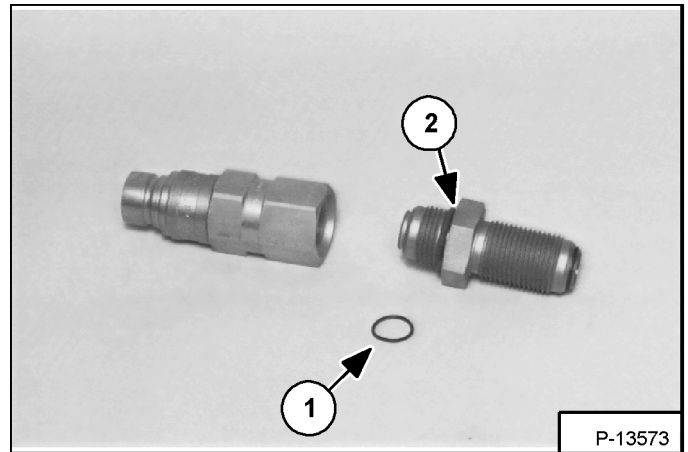


Always remove the O-ring (Item 1) [Figure SPEC-50-21] from the flare face as shown.

An O-ring (Item 2) [Figure SPEC-50-21] is added to the flat boss of the fitting to seal the connection in this application.

HYDRAULIC CONNECTION SPECIFICATIONS (CONT'D)

Port Seal Fitting

Figure SPEC-50-22

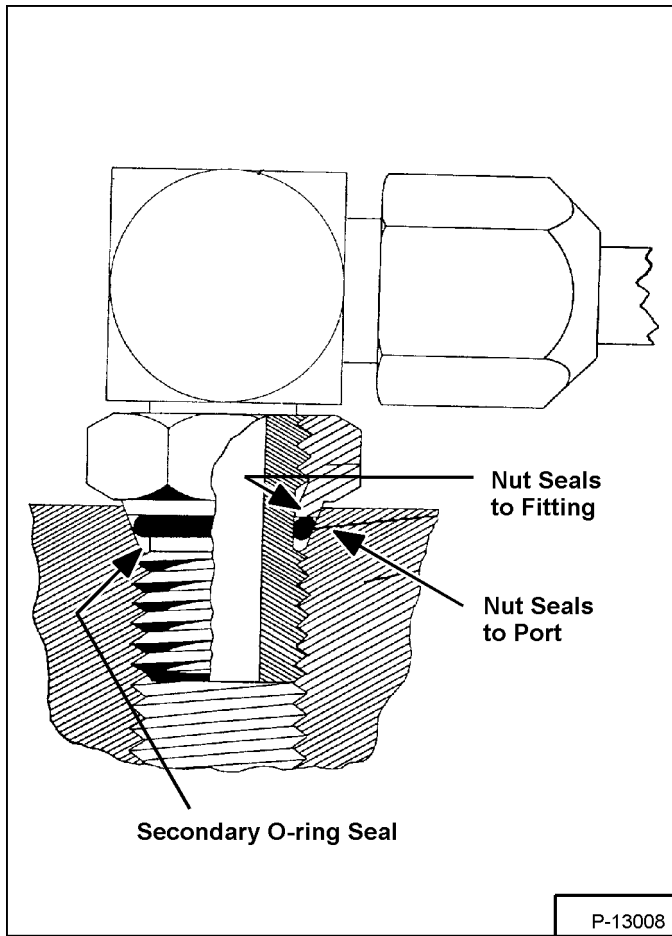

The nut is the primary seal, the O-ring is the secondary seal and helps absorb vibration and pressure pulses at the connection [Figure SPEC-50-22].

The hex portion of the nut does not contact the surface of the component when the nut is tight.

Use the following procedure to tighten the port seal fitting:

Port seal and nut, washer and O-ring (O-ring Boss) fittings use the same tightening torque valve chart.

If a torque wrench cannot be used, use the following method.

Tighten the nut until it just makes metal to metal contact, you can feel the resistance.

Tighten the nut with a wrench no more than one hex flat maximum.

Do not over tighten the port seal fitting.


NOTE: If a torque wrench cannot be used, use the hex flat tightening method as an approximate

guideline.

NOTE: Port seal fittings are not recommended in all applications. Use O-ring boss fittings in these applications.

PORT SEAL AND O-RING BOSS TIGHTENING TORQUE		
FITTING NUT WRENCH SIZE	THREAD SIZE	TORQUE FT.-LBS. (NM)
11/16"	9/16" - 18	22 (30)
15/16"	3/4" - 16	40 (54)
1-1/8"	7/8" - 14	60 (81)
1-1/4"	1-1/16" - 12	84 (114)
1-1/2"	1-5/16" - 12	118 (160)

Figure SPEC-50-23

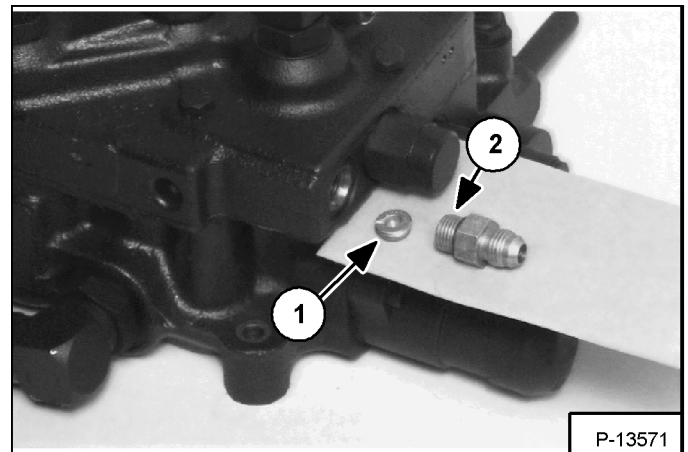

Do not use port seal fittings when a thread in orifice (Item 1) [Figure SPEC-50-23] is used in the port. The orifice may interfere with the fitting and prevent it from sealing.

Use an O-ring boss fitting (Item 2) [Figure SPEC-50-23] as shown.



Bobcat®

HYDRAULIC/HYDROSTATIC FLUID SPECIFICATIONS

Specifications

Use Bobcat axle fluid (P/N 100032-06A), for the transfer case, planetarys and axle housings.

Use Bobcat hydraulic/hydrostatic transmission fluid (P/N 6563328). If this fluid is not available, use 10W-30 or 10W-40 SAE Motor Oil (5W-30 for 0°F [-18°C] and Below).

DO NOT use automatic transmission fluids in the machine or permanent damage to the hydraulic/hydrostatic system will result.

WARNING

Diesel fuel or hydraulic fluid under pressure can penetrate skin or eyes, causing serious injury or death. Fluid leaks under pressure may not be visible. Use a piece of cardboard or wood to find leaks. Do not use your bare hand. Wear safety goggles. If fluid enters skin or eyes, get immediate medical attention from a physician familiar with this injury.

W-2072-0496

When temperatures below zero degree F (-18°C) are common, the machine must be kept in a warm building. Extra warm-up time must be used each time the machine is started during cold temperature conditions. Cold fluid will not flow easily and it makes action on the hydraulic function slower. Loss of fluid flow to the hydrostatic pump can cause damage in less than 60 seconds.

WARNING

During cold weather (32°F [0°C] and below), do not operate machine until the engine has run for at least five minutes at less than half throttle. This warm-up period is necessary for foot pedal operation and safe stopping. Do not operate controls during warm-up period.

When temperatures are below -20°F (-30°C), the hydrostatic oil must be heated or kept warm. The hydrostatic system will not get enough oil at low temperatures. Park the machine in an area where the temperature will be above 0°F (-18°C) if possible.

W-2027-1285



Bobcat®

CONVERSIONS

Decimal And Millimeter Equivalents

FRACTIONS	DECIMALS	MM	FRACTIONS	DECIMALS	MM
1/64	0.015625	0.397	33/64	0.515625	13.097
1/32	0.03125	0.794	17/32	0.53125	13.494
3/64	0.046875	1.191	35/64	0.546875	13.891
1/16	0.0625	1.588	9/16	0.5625	14.288
5/64	0.078125	1.984	37/64	0.578125	14.684
3/32	0.09375	2.381	19/32	0.59375	15.081
7/64	0.109375	2.778	39/64	0.609375	15.478
1/8	0.1250	3.175	5/8	0.6250	15.875
9/64	0.140625	3.572	41/64	0.640625	16.272
5/32	0.15625	3.969	21/32	0.65625	16.669
11/64	0.171875	4.366	43/64	0.671875	17.066
3/16	0.1875	4.762	11/16	0.6875	17.462
13/64	0.203125	5.159	45/64	0.703125	17.859
7/32	0.21875	5.556	23/32	0.71875	18.256
15/64	0.234375	5.953	47/64	0.734375	18.653
1/4	0.2500	6.350	3/4	0.7500	19.050
17/64	0.265625	6.747	49/64	0.765625	19.447
9/32	0.28125	7.144	25/32	0.78125	19.844
19/64	0.296875	7.541	51/64	0.796875	20.241
5/16	0.3125	7.938	13/16	0.8125	20.638
21/64	0.328125	8.334	53/64	0.828125	21.034
11/32	0.34375	8.731	27/32	0.84375	21.431
23/64	0.359375	9.128	55/64	0.859375	21.828
3/8	0.3750	9.525	7/8	0.8750	22.225
25/64	0.390625	9.922	57/64	0.890625	22.622
13/32	0.40625	10.319	29/32	0.90625	23.019
27/64	0.421875	10.716	59/64	0.921875	23.416
7/16	0.4375	11.112	15/16	0.9375	23.812
29/64	0.453125	11.509	61/64	0.953125	24.209
15/32	0.46875	11.906	31/32	0.96875	24.606
31/64	0.484375	12.303	63/64	0.984375	25.003
1/2	0.5000	12.700	1	1.000	25.400
1 mm = 0.03937"	0.001" = 0.0254 mm				

CONVERSIONS (CONT'D)**U.S. To Metric Conversion**

	TO CONVERT	INTO	MULTIPLY BY
LINEAR MEASUREMENT	Miles	Kilometers	1.609
	Yards	Meters	0.9144
	Feet	Meters	0.3048
	Feet	Centimeters	30.48
	Inches	Meters	0.0254
	Inches	Centimeters	2.54
	Inches	Millimeters	25.4
AREA	Square Miles	Square Kilometers	2.59
	Square Feet	Square Meters	0.0929
	Square Inches	Square Centimeters	6.452
	Acre	Hectare	0.4047
VOLUME	Cubic Yards	Cubic Meters	0.7646
	Cubic Feet	Cubic Meters	0.02832
	Cubic Inches	Cubic Centimeters	16.39
WEIGHT	Tons (Short)	Metric Tons	0.9078
	Pounds	Kilograms	0.4536
	Ounces (Avdp.)	Grams	28.3495
PRESSURE	Pounds/Sq. In.	Kilopascal	6.895
WORK	Foot-Pounds	Newton-Metre	1.356
LIQUID VOLUME	Quarts	Liters	0.9463
	Gallons	Liters	3.785
LIQUID FLOW	Gallons/Minute	Liters/Minute	3.785
TEMPERATURE	Fahrenheit	Celsius	1. Subtract 32° 2. Multiply by 5/9