



Service Manual



WF3000 Series

Overview of Revisions:

Blank page



TABLE OF CONTENTS

Blank page

Table of Contents

MA – SAFETY	PAGE	SER-NO. CUT	REV.
Safety Symbols used in the Manual	3		
ITD – INTRODUCTION	PAGE	SER-N0. CUT	REV.
General Maintenance and Repair Safety Notes	3		
Maintenance and Repair	3		
Before Leaving the Truck	4		
Before Carrying out Work on the Truck	4		
Before Operating the Truck	4		
Warnings and Labels on the Truck	4		
General	7		
Operating Instructions	7		
Service Training	7		
Ordering Spare Parts	7		
Using the Manual	7		
Model-Number	8		
M1 – LUBRICATION AND ADJUSTMENT	PAGE	SER-N0. CUT	REV.
Raising And Towing The Truck	11		
Raising With Another Forklift Truck	11		
Lifting by Crane	12		
Towing the Truck	13		
Component Access	14		
Maintenance	16		
Recommended Lubricants and Oils	16		
Lubricants	16		
Cold Store Trucks	16		
Taking the truck out of service	16		
Bringing the truck back into service	16		
Lubricant Table	17		
Adjuvants Table	18		
Truck Tilt Settings	22		
Testing and Adjusting the Lateral Inclination	22		
Lowering Plumb Test	22		
M2 – HYDRAULICS	PAGE	SER-N0. CUT	REV.
Hydraulic Symbols	27		
Hydraulics	31		
Hydraulic Reservoir Capacity	31		
Changing the Hydraulic oil and			
Hydraulic Filter	31		
Hydraulic system	33		
Function	33		
Lifting (see diagram)	33		
Lowering (see diagram)	34		
MOTOR AND PUMP ASSEMBLY	35		
Hydraulic Lines and Fittings	35		
General Rules for Hydraulic Lines and Connections ..	35		
Bleeding the Hydraulic System	35		
Drift Test	35		
Proportional function:	35		
REMOVAL	35		
MOTOR	36		
PUMP	36		
After replacing the pump:	36		

M2 – HYDRAULICS	PAGE	SER-N0. CUT	REV.
Replacing the relief valve	37		
Relief valve test and setting	37		
Hydraulic System Troubleshooting	38		
M3 – DRIVE UNIT	PAGE	SER-N0. CUT	REV.
Gear Unit	41		
Drive unit, general	42		
Drive unit removal	42		
Drive motor removal	42		
Motor disassembly	43		
Motor assembly	43		
Drive motor assembly	45		
Gear unit disassembly	46		
General	46		
Preparation	46		
Draining the oil	46		
Drive unit removal	46		
Gear unit cover removal	46		
Gear unit disassembly	47		
Gear unit assembly	47		
Gear unit cover installation	49		
Adding Oil	49		
Drive unit installation	49		
M4 – ELEKTRICS	PAGE	SER-N0. CUT	REV.
Electrics - General	53		
Wire Colour Codes	53		
Abbreviations	54		
Electrical Symbols	57		
Electrical Components	58		
Traction Pod (POT, FS, RS)	58		
Fast / Slow Travel Switch (HSS)	58		
Safety Reverse Switch (SAS)	58		
Brake Switch (BRS)	58		
Override Switch (ORS)	58		
Raise / Lower Switches (RAS, LOS)	59		
Limit Switch (LMS)	59		
Horn Switch (HNS)	59		
Key Switch (KYS)	59		
Emergency Disconnect (BD)	59		
Fuses (FU)	59		
OPTION Thermal Switch (THS)	59		
Thermal switch (THS2)	59		
Hydraulic Control Module (HCM)	59		
Unigage (BDI)	59		
Integrated Charger	59		
Plug Holder (PC)	59		
Drive motor (M1)	59		
Hydraulic Motor (M2)	60		
Main Contactor (Line/LC)	60		
Lift Contactor (P/P1+P2)	60		
Electromagnetic Brake (BRK)	60		
Terminal Board (TB)	60		
Travel Alarm Driver (DR)	60		
Aux. Hydraulic Switch (SLS/SRS)	60		

M4 – ELEKTRICS	PAGE	SER-N0. CUT REV.
Remote Control Toggle Switch (ECS)	60	
Aux. Hydraulic Valves (SVA1/SVA2)	60	
Horn (HN)	60	
Main Circuit Board (MAIN PCB)	60	
Hydraulic Circuit Board (HYD PCB)	60	
Travel Alarm (ALM)	60	
Receiver	60	
Transmitter	60	
SEM0 Traction Controller	64	
General	64	
Precautionary Measures	64	
Functional Characteristics	64	
Speed control	64	
Reduced speed ranges	64	
Downhill speed control	64	
Regenerative braking	64	
Anti Roll Down Function	65	
Hourmeter	65	
Self-Diagnostic System	65	
Monitored Circuits	65	
Safety Mechanisms	65	
Incorrect polarity	65	
Wiring Errors	65	
Temperature protection	65	
Start sequence	65	
Protection rating	65	
Maintenance	66	
Replacing the SEM0 Traction Controller	67	
Parameter Setting after Replacing the Traction Controller	67	
Preparatory Measures	67	
Adjustment	67	
Status LED	69	
Programmer	70	
General	70	
Crown Handset P/N 793548 (Includes Cord)	70	
Operating SEM0 Controller Menu	71	
General	71	
Menu structure	71	
Menu Functions	72	
PARAMETER CHANGE	72	
TEST	72	
ALARMS	72	
PROGRAM VACC	72	
CONFIG	72	
Functions Menu, general	73	
Parameter Change Menus	74	
Settings and Error Messages	75	
Tester Menu	80	
TESTER Menu	81	
Alarms Menu	82	
ALARMS Menu	83	
Calibrating the Traction Pod Potentiometer, PROGRAM VACC menu	86	
Preparatory Measures	86	
Calibration	86	
Config. Menu	87	
CONFIG Menu	88	

M4 – ELEKTRICS	PAGE	SER-N0. CUT	REV.
SET MODEL	88		
SET OPTIONS	88		
ADJUSTMENTS	88		
On Board Charger	89		
General	89		
Battery Charging Phases	89		
First Phase (I1)	89		
Second Phase (P)	89		
Third Phase (U)	89		
Fourth Phase (I2)	89		
End of Normal Charging	90		
Special Charging Phases	90		
Compensating Charge	90		
Float Charge	90		
Partial Charging	90		
Charging Errors	91		
Green LED is not lit	91		
Possible Causes:	91		
Green LED flashing	91		
Important Technical Data	92		
Replacing the Charger	92		
Removal / Installation	92		
Electric Motors	93		
General Maintenance Instructions	93		
Preparation	93		
Important Maintenance Instructions	93		
Traction Motor Maintenance (WF 1.0 t)	94		
Access to brushes	94		
Maintenance	94		
Armature	94		
Bearings	94		
Traction Motor Maintenance (WF 1.2 t)	95		
Access to brushes	95		
Maintenance	95		
Armature	95		
Bearings	95		
Pump Motor Maintenance	96		
Access to brushes	96		
Maintenance	96		
Armature	96		
Contactors	97		
Inspection	97		
Contacts	97		
Coils	97		
Springs	97		
Servicing	98		
Dismantling	98		
Assembly	98		
Hydraulic Control Module (HCM)	99		
Battery Discharge Indicator (BDI)	100		
OPERATION	100		
General	101		
Battery Discharge Indicator Setting (BDI)	101		
Calibration for wet batteries	102		
TROUBLESHOOTING	103		
Traction Controller Safety Test	104		

M5 – BRAKE	PAGE	SER-N0. CUT REV.
Brake	107	
Function	107	
Disassembly	107	
Assembly	109	
Air gap setting	109	
Brake moment setting	110	
Brake test	110	
Definition of run-in/new rotor	110	
General Notes	110	
M6 – STEERING	PAGE	SER-N0. CUT REV.
Steering	115	
Live ring bearing	115	
Disassembly	115	
Installation	115	
Control handle return springs	116	
Adjustment	116	
Disassembly	116	
Installation	116	
Steering Chain	117	
Permissible Elongation	117	
Chain Tension Adjustment	117	
Tiller Handle	119	
Main Components	119	
Tiller Handle Component Removal / Installation	120	
Tiller Handle Shells	120	
Removing the Upper and Lower Shells	120	
Fitting the Upper and Lower Shells	121	
Switch Unit	122	
Removal	122	
Switch Unit Installation	122	
"Fast/Slow" Toggle Switch	123	
Removal	123	
Installation	123	
Hydraulic Board	123	
Removal	123	
Installation	123	
Potentiometer	124	
Removal	124	
Installation	124	
Safety Reverse Switch	125	
Removal	125	
Installation	125	
Horn Switch	126	
Removal	126	
Installation	126	
Handle	127	
Removal	127	
Installation	127	

M7 – MAST	PAGE	SER-N0. CUT	REV.
Mast	131		
General	131		
Torque Requirements	131		
Lifting Gear Minimum Capacity	131		
Mast Removal	131		
Installation	132		
Fork Carriage Removal	132		
Fork Carriage Installation	132		
Fork Carriage Adjustment	133		
Mast Maintenance	134		
Lubricating Roller Tracks	134		
Lowering Plumb Test	135		
Preparatory measures	135		
Carrying out the vertical plumb test	135		
Lift chains	136		
General	136		
Inspection	136		
Cleaning	136		
Wear	136		
Freedom of Movement of Chain Links	137		
Chain Tension	137		
Chain Anchor and Pulleys	138		
Worn Connection Plates	138		
Protruding or Turned Chain Pins	138		
Corrosion	138		
Chain Lateral Wear	139		
Uneven Chain Tension	139		
Misaligned Lift Components	139		
Lift Chain Lubrication	140		
Separating Lift Chains	141		
Tools and Equipment Required	141		
Detachment	141		
Fork Tines	142		
General	142		
Terms	142		
Fork Identification	142		
Repairs	142		
Fork Inspection	142		
Crack Inspection	142		
Verticality Test	143		
Fork Blade Warping	143		
Measuring the Fork Tip Width	143		
Fork Tine Height Difference	143		
Fork Stop	143		
Fork Blade Wear	144		

M8 – CYLINDERS	PAGE	SER-N0. CUT REV.
Cylinders	147	
General	147	
Safety when working on hydraulic systems	147	
General Instructions for Repairing Hydraulic Components	147	
Rod Seal Assembly	148	
General	148	
Large Rod Seal Assembly	148	
Small Seal Rod Assembly	149	
Rod Seal Assembly, Sealing Lip First	150	
Cylinders	151	
TL Mast Lift Cylinder	151	
Seal Replacement	151	
Installing TL Mast Lift Cylinders	152	
TF Mast Lift Cylinders	154	
Removing the TF Mast Lift Cylinders	154	
Seal Replacement	154	
Installing TF Mast Lift Cylinders	155	
Free Lift Cylinder TF and Mono Mast	156	
Seal Replacement	156	
Installing Free Lift Cylinder	157	
Cylinder Bleeding and Flushing	157	
Bleeding — Mast Lift Cylinders	157	
Bleeding — Free Lift Cylinder (if applicable)	157	
Flushing – Mast Lift Cylinders and Free Lift Cylinders (if applicable)	158	
Drift Test	158	
Cylinder Shimming	158	
Lift Cylinder Shims	158	
Free Lift Cylinder Shims	158	
DIA – ELECTRICAL DIAGRAMS	PAGE	SER-N0. CUT REV.
WF 3000-10 Standard	163	
Overview	163	
WF3000-10 Standard, Traction Controller - SEM0 Logic	164	
WF3000-10 Standard, Traction Controller - SEM0 Power Circuit	165	
WF3000-10 Standard, Power Unit Control Circuit	166	
WF3000-10 Standard, Control Handle - Control Circuit	167	
WF3000-10 Standard, Hydraulic Control Module (HCM)	168	
WF3000-10 with Options	169	
Overview	169	
WF3000-10 with Options, Traction Controller - SEM0 Logic	170	
WF3000-10 with Options, Traction Controller - SEM0 Power Circuit	171	
WF3000-10 with Options, Power Unit - Control Circuit	172	
WF3000-10 with Options, Control Handle - Control Circuit	173	
WF3000-10 with Options, Hydraulic Control Module (HCM) - Travel Alarm and Flashing Beacon	174	

DIA – ELECTRICAL DIAGRAMS	PAGE	SER-N0. CUT	REV.
WF 3000-12 Standard	175		
Overview	175		
WF3000-12 Standard, Traction Controller - SEM0 Logic	176		
WF3000-12 Standard, Traction Controller - SEM0 Power Circuit	177		
WF3000-12 Standard, Power Unit Control Circuit	178		
WF3000-12 Standard, Control Handle - Control Circuit	179		
WF3000-12 Standard, Hydraulic Control Module (HCM)	180		
WF3000-12 with Options	181		
Overview	181		
WF3000-12 Swith Options, Traction Controller - SEM0 Logic	182		
WF3000-12 with Options, Traction Controller - SEM0 Power Circuit	183		
WF3000-12 with Options, Power Unit - Control Circuit	184		
WF3000-12 with Options, Control Handle - Control Circuit	185		
WF3000-12 with Options, Hydraulic Control Module (HCM) - Travel Alarm and Flashing Beacon	186		
Wire Harness	187		
Control Handle Wiring	188		
Power Cables	189		
HYD – HYDRAULIC SCHEMATICS	PAGE	SER-N0. CUT	REV.
Hydraulik Schematic Standard Lift	193		
Hydraulik Schematic Soft Lift	194		



SAFETY

Blank page

Safety Symbols used in the Manual

To help guide you through the manual and to highlight particular danger areas, we have used graphic illustrations:

DANGER



This symbol indicates life-threatening risks

- Failure to comply with this notice may result in fatal injuries to yourself or other people.

WARNING



This symbol indicates the risk of serious injury and/or serious material damage.

- Failure to comply with this notice may result in severe injuries to yourself or other people and/or serious material damage.

CAUTION



This symbol indicates the risk of minor injury and/or minor material damage.

- Failure to comply with this notice may result in minor injuries to yourself or other people and/or minor material damage.

INFORMATION



Contains additional information with supplementary notes and hints.

OPTION



These items relate to optional features not supplied with the standard version.

General Maintenance and Repair Safety Notes

DANGER



Read the safety notices in the truck Maintenance and Operator's Manuals.

- Failure to do so could result in severe or fatal injuries to maintenance personnel and/or other persons.

Motorised vehicles can be dangerous if maintenance and service are neglected. For this reason maintenance and inspections must be carried out at regular short intervals by trained personnel working to approved company guidelines.

DANGER



Follow all national/local safety regulations applicable for maintenance work, e.g. for work on higher levels.

- Failure to do so could result in severe or fatal injuries to maintenance personnel and/or other persons.

Maintenance and Repair

1. Maintenance work must only be carried out in accordance with the test and maintenance program contained in the present Maintenance Manual and any applicable service notices.
2. Only qualified and authorised personnel may carry out work on the truck.
3. Always keep fire extinguishers in good working condition. Do not approach fluid levels or leaks with a naked flame.
4. To clean, use a non flammable, non combustible cleaning solution which is groundwater-neutral. Only carry out cleaning with an oil separator. Protect the electrical system from dampness.
5. Keep the service area clean, dry and well-ventilated.
6. Do not allow oil to penetrate the ground or enter the draining system. Used oil must be recycled. Oil filters and desiccants must be treated as special waste products. Relevant applicable regulations must be followed.
7. Neutralise and thoroughly rinse any spilled battery fluid immediately.
8. Keep the truck clean. This will facilitate the location of loose or faulty components.

9. Make sure that capacity and data plates, warnings and labels are legible at all times.
10. Alterations or modifications by the owner or operator are not permitted without the express written authorisation from Crown.
11. Only use original Crown spare parts to ensure the reliability, safety and suitability of the Crown truck.

Before Leaving the Truck

- Stop the truck.
- Lower the fork carriage fully.
- Apply the parking brake.
- Turn off the truck and remove the key.
- Block all wheels when parking on an uneven surface.

Before Carrying out Work on the Truck

- Raise the truck to free the drive wheel. Press the emergency Stop button and disconnect the battery.
- Prevent the truck from rolling away.
- Before carrying out work on the hoist frame, the lift mast or on the fork carriage: Block these parts according to maintenance instructions in order to prevent them from dropping.
- Only carry out operational testing when there is sufficient room to manoeuvre, to avoid the risk of injury to yourself and others.

Before Operating the Truck

- Check the safety devices.
- Get into the driver's seat.
- Check the operation of the lifting device, travel direction switch, speed control, steering, warning devices and brakes.

Warnings and Labels on the Truck

During regular maintenance check that the warnings and labels on the truck are complete and legible.

- Clean any illegible labels.
- Replace any faulty or missing labels.

The order and meaning of the warnings and labels on the truck are described in section 10.9 of the parts manual.



INTRODUCTION

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**