

Solar 300LC-V

Shop Manual

023-00043E

Serial Number 1001 and Up

May 2002

Daewoo reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.

Product Label



Instructions

**Trim Out The Label Along
The Lines And Insert Into
Pocket On The Binder Spine**

Solar 300LC-V
Serial Number 1001 and Up
Pub.No. 023-00043E



TABLE OF CONTENTS

Specifications

Safety

Track Excavator Safety.....	S0102000
Specifications for Solar 300LC-V.....	S0202080K

General Maintenance

General Maintenance Procedures.....	S0302000
Standard Torques.....	S0309000

Upper Structure

Cab.....	S0402040K
Counterweight.....	S0403050K
Fuel Tank.....	S0405110K
Fuel Transfer Pump.....	S0405500
Swing Bearing.....	S0407000
Swing Reduction Gear.....	S0408070K

Lower Structure and Chassis

Track Assembly.....	S0505000
---------------------	----------

Engine and Drive Train

Air-Conditioner.....	S0605060K
Drive Coupling (Main Pump).....	S0609010K

Hydraulics

Hydraulic System Troubleshooting, Testing and Adjustment.....	S0702170K
Accumulator.....	S0703010K
Center Joint (Swivel).....	S0704080K
Cylinders.....	S0705000

Swing Motor (Toshiba MFC200).....	S0707270K
Travel Motor (with Gearbox)	S0707315K
Main Pump (Kawasaki).....	S0708315K
Main Control Valve (Kayaba).....	S0709401K
Pilot Control Valve (Work Lever / Joystick).....	S0709451K
Travel Control Valve (With Damper).....	S0709820K
Hydraulic Schematic (S300LC-V)	S0792160K

Electrical System

Electrical System	S0802220K
Electrical Schematic (S300LC-V)	S0892160K

Attachments

Boom and Arm.....	S0902000
Bucket.....	S0904005K

SAFETY



TRACK EXCAVATOR SAFETY



CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that is in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

MODEL	SERIAL NUMBER RANGE
Solar 130LC-V	0001 and Up
Solar 170LC-V	1001 and Up
Solar 220LC-V	0001 and Up
Solar 220N-V	1001 and Up
Solar 250LC-V	1001 and Up
Solar 290LC-V	0001 and Up
Solar 300LC-V	1001 and Up
Solar 300LL	1001 and Up
Solar 330LC-V	1001 and Up
Solar 340LC-V	1001 and Up
Solar 400LC-V	1001 and Up
Solar 420LC-V	1001 and Up
Solar 450LC-V	1001 and Up
Solar 470LC-V	1001 and Up

TABLE OF CONTENTS

To the Operator of a Daewoo Excavator	3
General Safety Essentials	6
Location of Safety Labels	6
Summary of Safety Precautions for Lifting in Digging Mode	7
Unauthorized Modifications	8
General Hazard Information	8
Before Starting Engine	16
Machine Operation	19
Maintenance	26
Battery	34
Towing	36
Shipping and Transportation	37
Lifting With Sling	37

TO THE OPERATOR OF A DAEWOO EXCAVATOR



DANGER!

Unsafe use of the excavator could lead to serious injury or death. Operating procedures, maintenance and equipment practices or traveling or shipping methods that do not follow the safety guidelines on the following pages could cause serious, potentially fatal injuries or extensive damage to the machine or nearby property.

Please respect the importance of taking responsibility for your own safety, and that of other people who may be affected by your actions.

The safety information on the following pages is organized into the following sections:

1. "General Safety Essentials" on page 6
2. "Location of Safety Labels" on page 6
3. "Summary of Safety Precautions for Lifting in Digging Mode" on page 7
4. "Unauthorized Modifications" on page 8
5. "General Hazard Information" on page 8
6. "Before Starting Engine" on page 16
7. "Machine Operation" on page 19
8. "Maintenance" on page 26
9. "Battery" on page 34
10. "Towing" on page 36
11. "Shipping and Transportation" on page 37
12. "Lifting With Sling" on page 37



WARNING!

Improper operation and maintenance of this machine can be hazardous and could result in serious injury or death.

Operator and maintenance personnel should read this manual thoroughly before beginning operation or maintenance.

Keep this manual in the storage compartment to the rear of the operator's seat, and have all personnel involved in working on the machine periodically read the manual.

Some actions involved in operation and maintenance of the machine can cause a serious accident, if they are not done in a manner described in this manual.

The procedures and precautions given in this manual apply only to intended uses of the machine.

If you use your machine for any unintended uses that are not specifically prohibited, you must be sure that it is safe for any others. In no event should you or others engage in prohibited uses or actions as described in this manual.

Daewoo delivers machines that comply with all applicable regulations and standards of the country to which it has been shipped. If this machine has been purchased in another country or purchased from someone in another country, it may lack certain safety devices and specifications that are necessary for use in your country. If there is any question about whether your product complies with the applicable standards and regulations of your country, consult Daewoo or your Daewoo distributor before operating the machine.



SAFETY ALERT SYMBOL



Be Prepared - Get To Know All Operating and Safety Instructions.

This is the Safety Alert Symbol. Wherever it appears in this manual or on safety signs on the machine you should be alert to the potential for personal injury or accidents. Always observe safety precautions and follow recommended procedures.

LEARN THE SIGNAL WORDS USED WITH THE SAFETY ALERT SYMBOL

The words "**CAUTION**," "**WARNING**," and "**DANGER**" used throughout this manual and on decals on the machine indicate degree of risk of hazards or unsafe practices. All three degrees of risk indicate that safety is involved. Observe precautions indicated whenever you see the Safety Alert "Triangle," no matter which signal word appears next to the "Exclamation Point" symbol.



CAUTION!

This word is used on safety messages and safety labels and indicates potential of a hazardous situation that, if not avoided, could result in minor or moderate injury. It may also be used to alert against a generally unsafe practice.



WARNING!

This word is used on safety messages and safety labels and indicates potential of a hazardous situation that, if not avoided, could result in serious injury or death. It may also be used to alert against a highly unsafe practice.



DANGER!

This word is used on safety messages and safety labels and indicates an imminent hazard of a situation that, if not avoided, is very likely to cause death or extremely serious injury. It may also be used to alert against equipment that may explode or detonate if handled or treated carelessly.

Safety precautions are described in SAFETY from page -6 on.

Daewoo cannot predict every circumstance that might involve a potential hazard in operation and maintenance. Therefore the safety messages in this manual and on the machine may not include all possible safety precautions. If any procedures or actions not specifically recommended or allowed in this manual are used, you must be sure that you and others can do such procedures and actions safely and without damaging the machine. If you are unsure about the safety of some procedures, contact a DAEWOO distributor.

GENERAL SAFETY ESSENTIALS

ACCESSORY APPLICATIONS

The excavator has been primarily designed for moving earth with a bucket. For use as a grapple or for other object handling, contact Daewoo for proper installation and application. Lifting-work applications (unless restricted or prohibited by local regulations) are permitted in approved lift configuration, to rated capacity only, with no side-loading. DO NOT use the machine for activities for which it was not intended. DO NOT use the bucket for lifting work, unless lift slings are used in the approved configuration.

Use of an accessory hydraulic hammer (breaker), work in rough terrain, demolition applications or other hazardous operation may require installation of additional protective structures to safeguard the operator.

LIFTING CAPACITY RATING CONFIGURATION

Lifting capacity ratings that are printed at the end of this safety section are based on the machine being level, on a firm supporting surface, with hooks and slings attached in approved configuration. Loads must be balanced and supported evenly. Use taglines to keep the load steady if wind conditions and large surface area are a problem. Work crew hand signals, individual tasks and safe procedures should all be universally understood before the lift is made.

IMPORTANT

Before using the excavator to make lifts check municipal and regional regulations or statutes that could apply. Governing ordinances may require that all heavy lifting be done with single purpose equipment specifically designed for making lifts, or other local restrictions may apply. Making heavy lifts with a general purpose excavator that can be used for digging, loading, grading or other work may be expressly forbidden by a regional injunction or other legal prohibition. Always follow all of the other instructions, guidelines and restrictions for Safe Lifting in the Operation and Maintenance Manuals.

LOCATION OF SAFETY LABELS

Location of safety labels (decals) can vary from unit to unit. Refer to appropriate Operation and Maintenance Manual, and parts manual for your unit.

Always replace damaged or faded decals.

SUMMARY OF SAFETY PRECAUTIONS FOR LIFTING IN DIGGING MODE



DANGER!

Unsafe use of the excavator while making rated lifts could cause serious, potentially fatal injuries or extensive damage to the machine or nearby property. Do not let anyone operate the machine unless they've been properly trained and understand the information in the Operation and Maintenance Manual.

To lift safely while in Digging Mode, the following items must be evaluated by the operator and the work site crew.

- Condition of ground support.
- Excavator configuration and attachments.
- Weight, lifting height and lifting radius.
- Safe rigging of the load.
- Proper handling of the suspended load.

Taglines on opposite sides of the load can be very helpful in keeping a suspended load secure, if they are anchored safely to control points on the ground.



WARNING!

NEVER wrap a tagline around your hands or body.

NEVER rely on taglines or make rated lifts when wind gusts are more than 48.3 km/hr (30 mi/h). Be prepared for any type of wind gust when working with loads that have a large surface area.

Always engage the "**Digging Mode**" control on the Instrument Panel before using the excavator for lifting work.



WARNING!

If you need more information or have any questions or concerns about safe operating procedures or working the excavator correctly in a particular application or in the specific conditions of your individual operating environment, please consult your local Daewoo representative.

UNAUTHORIZED MODIFICATIONS

Any modification made without authorization or written approval from Daewoo can create a safety hazard, for which the machine owner must be held responsible.

For safety's sake, replace all OEM parts with the correct authorized or genuine Daewoo part. For example, not taking the time to replace fasteners, bolts or nuts with the correct replacement parts could lead to a condition in which the safety of critical assemblies is dangerously compromised.

GENERAL HAZARD INFORMATION

SAFETY RULES

Only trained and authorized personnel can operate and maintain the machine.

Follow all safety rules, precautions and instructions when operating or performing maintenance on the machine.

Do not operate the machine if you are not feeling well, if you are taking medication that makes you feel sleepy, if you have been drinking, or if you are suffering from emotional problems. These problems will interfere with your sense of judgement in emergencies and may cause accidents.

When working with another operator or with a person on work site traffic duty, be sure that all personnel know the nature of the work and understand all hand signals that are to be used.

Always observe strictly any other rules related to safety.

SAFETY FEATURES

Be sure that all guards and covers are installed in their proper position. Have guards and covers repaired immediately if damaged.

Be sure that you understand the method of use of safety features such as safety lock lever and the seat belt, and use them properly.

Never remove any safety features. Always keep them in good operating condition.

Failure to use safety features according to the instructions in the Operation and Maintenance Manual could result in serious bodily injury.

INSIDE OPERATOR'S COMPARTMENT

When entering the operator's compartment, always remove all mud and oil from the soles of your shoes. If you operate the travel pedal with mud or oil stuck to your shoes, your foot may slip and this may cause a serious accident.

After using the ashtray, make sure that any matches or cigarettes are properly extinguished, and be sure to close the ashtray. If the ashtray is left open, there is danger of fire.

Do not stick suction pads to the window glass. Suction pads act as a lens and may cause fire.

Do not leave lighters laying around the operator's compartment. If the temperature inside the operator's compartment becomes high, there is danger that the lighter may explode.

Do not use cellular telephones inside the operator's compartment when driving or operating the machine. There is danger that this may lead to an unexpected accident.

Never bring any dangerous objects such as flammable or explosive items into the operator's cab.

To ensure safety, do not use the radio or music headphones when operating the machine. There is danger that this may lead to a serious accident.

When operating the machine, do not put your hands or head out of the window.

When standing up from the operator's seat, always place safety lock lever securely in the "LOCK" position. If you accidentally touch the work equipment levers when they are not locked, the machine may suddenly move and cause serious injury or damage.

When leaving the machine, lower the work equipment completely to the ground, set safety lock lever to the "LOCK" position and shut down engine. Use the key to lock all the equipment. Always remove the key and take it with you.

CLOTHING AND PERSONAL PROTECTIVE ITEMS

Contain long hair, and avoid loose clothing and jewelry. They can catch on controls or in protruding parts and cause serious injury or death.

Do not wear oily clothes. They are highly flammable.

Full eye protection, a hard hat, safety shoes and gloves may be required at the work site.

While working on the machine, never use inadequate tools. They could break or slip, causing injury, or they may not adequately perform intended functions.

Do not forget that some risks to your health may not be immediately apparent. Exhaust gases and noise pollution may not be visible, but these hazards can cause disabling or permanent injuries.



Figure 1

MOUNTING AND DISMOUNTING

Before getting on or off the machine, if there is any oil, grease, or mud on the handrails, steps, or track shoes, wipe it off immediately. Always keep these parts clean. Repair any damage and tighten any loose bolts.

Never jump on or off the machine. In particular, never get on or off a moving machine. These actions may lead to serious injury.

When getting on or off the machine, always face the machine, and maintain three-point contact (both feet and one hand or one foot and both hands) with the handrails, steps, and track shoes to ensure that you support yourself securely.

Never hold any control levers when getting on or off the machine.

Apply the door lock securely. If you grip the handrail inside the door when moving on top of the track shoes, and the door lock is not applied securely, the door may move and cause you to fall.

Use the points marked by arrows in the diagram when getting on or off the machine.

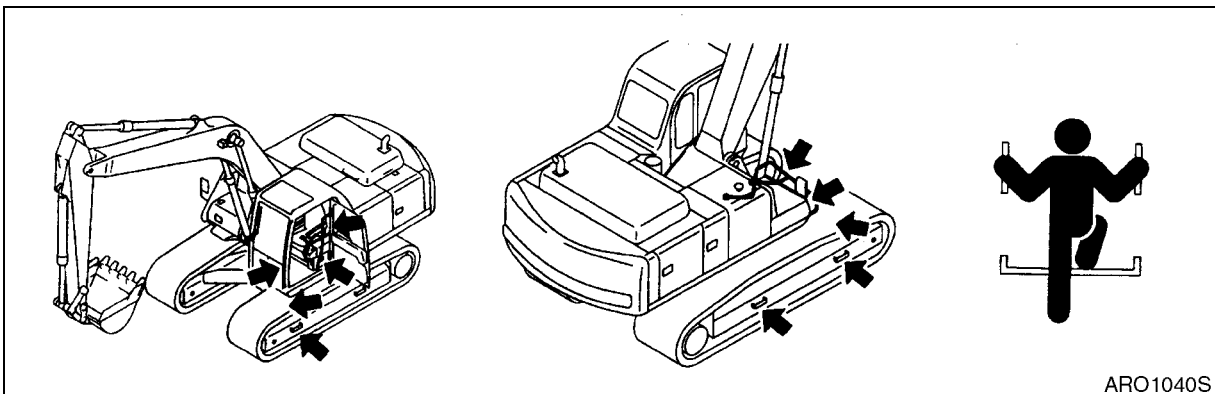


Figure 2

FUEL, OIL AND HYDRAULIC FLUID FIRE HAZARDS

Fuel, oil and antifreeze will catch fire if it is brought close to a flame. Fuel is particularly flammable and can be hazardous.

Always strictly observe the following.

Add fuel, oil, antifreeze and hydraulic fluid to the machine only in a well-ventilated area. The machine must be parked with controls, lights and switches turned "OFF." The engine must be "OFF" and any flames, glowing embers, auxiliary heating units or spark-causing equipment must be doused, turned off and/or kept well clear of the machine.

Static electricity can produce dangerous sparks at the fuel filling nozzle. In very cold, dry weather or other conditions that could produce a static discharge, keep the tip of the fuel nozzle in constant contact with the neck of the fuel filling nozzle, to provide a ground.

Keep fuel and other fluid reservoir caps tight and do not start the engine until caps have been secured.



Figure 3

PRECAUTIONS WHEN HANDLING FLUIDS AT HIGH TEMPERATURE

Immediately after operations are stopped, the coolant, engine oil, and hydraulic oil are at high temperature and the radiator and hydraulic tank are still under pressure. Attempting to remove the cap, drain the oil or coolant, or replace the filters may lead to serious burns. Always wait for the temperature to go down, and follow the specified procedures when carrying out these operations.

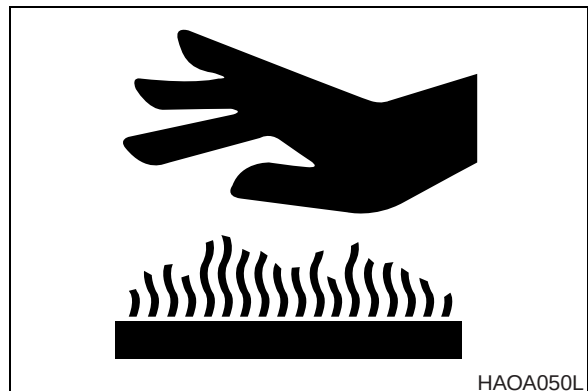


Figure 4

To prevent hot coolant from spurting out, stop the engine, wait for the coolant to cool, then loosen the cap slowly to relieve the pressure.

To prevent hot oil from spurting out, stop the engine, wait for the oil to cool, then loosen the cap slowly to relieve the pressure.

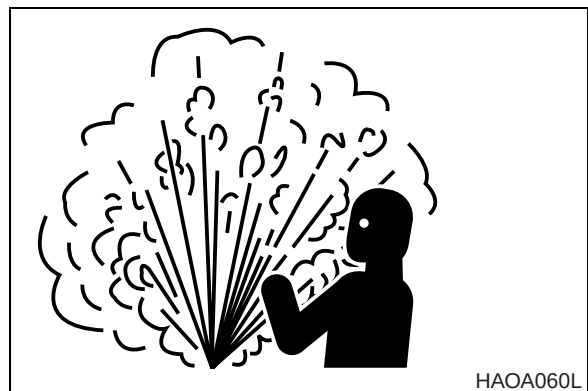


Figure 5

ASBESTOS DUST HAZARD PREVENTION

Asbestos dust can be HAZARDOUS to your health if it is inhaled.

If you handle materials containing asbestos fibers, follow these guidelines as given below:

- Use an approved respirator.
- Never use compressed air for cleaning.
- Use water for cleaning to keep down the dust.
- Work on the machine or component with the wind at your back whenever possible.
- Always observe any rules and regulations related to the work site and working environment.

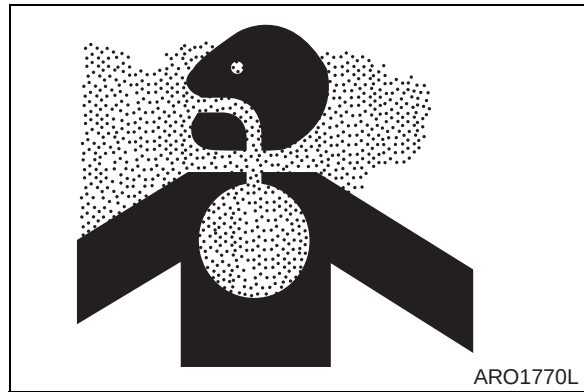


Figure 6

INJURY FROM WORK EQUIPMENT

Do not enter or put your hand, arm or any other part of your body between movable parts, such as between the work equipment and cylinders, or between the machine and work equipment.

If the control levers are operated, the clearance between the machine and the work equipment will change and this may lead to serious damage or personal injury.

If going between movable parts is necessary, always position and secure the work equipment so that it cannot move.

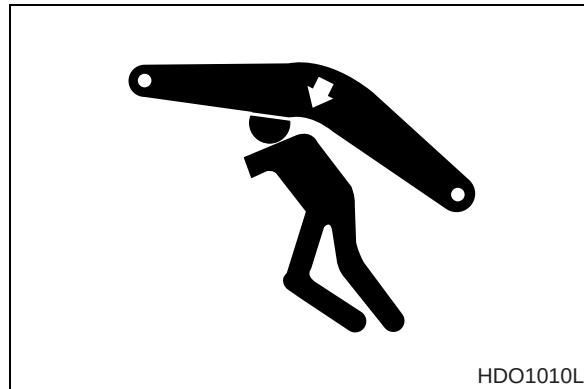


Figure 7

FIRE EXTINGUISHER AND FIRST AID KIT

As a precaution if any injury or fire should occur, always do the following.

- Be sure that fire extinguishers have been provided and read the labels to ensure that you know how to use them. It is recommended that an appropriately sized (2.27 kg [5 lb] or larger) multipurpose "A/B/C" fire extinguisher be mounted in the cab. Check and service the fire extinguisher at regular intervals and make sure that all work site crew members are adequately trained in its use.
- Provide a first aid kit in the storage compartment and keep another at the work site. Check the kit periodically and make any additions if necessary.
- Know what to do in case of injury from fire.
- Keep emergency numbers for doctor, ambulance service, hospital and fire department near your telephone.

If the machine catches fire, it may lead to serious personal injury or death. If a fire occurs during operation, escape from the machine as follows;

- Turn the starter switch "OFF" and stop the engine.
- If there is time, use the fire extinguisher to extinguish as much of the fire as possible.
- Use the handrails and steps to escape from the machine.

The above is the basic method for escaping from the machine, but changing the method may be necessary according to the conditions, so carry out practice drills at the work site.

PROTECTION FROM FALLING OR FLYING OBJECTS

On work sites where there is danger that falling objects or flying objects may hit the operator's cab select a guard to match the operating conditions to protect the operator.

Working in mines, tunnels, deep pits or on loose or wet surfaces could produce danger of falling rock or hazardous flying objects. Additional protection for the operator's cab could be required in the form of a FOPS (Falling Object Protective Structure) or window guards.

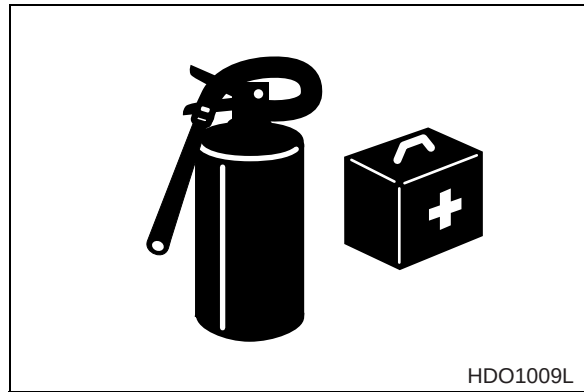


Figure 8

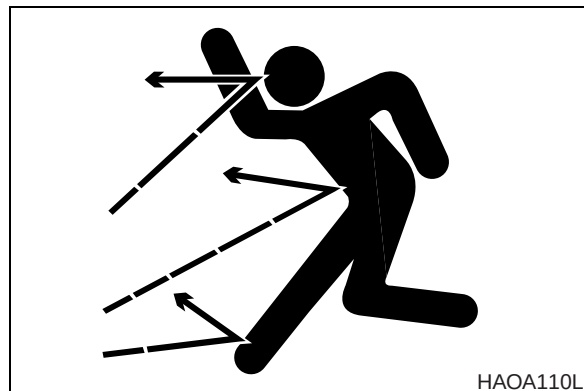


Figure 9

Never attempt to alter or modify any type of protective structure reinforcement system, by drilling holes, welding, remounting or relocating fasteners. Any serious impact or damage to the system requires a complete integrity reevaluation. Reinstallation, recertification and/or replacement of the system may be necessary.

Contact your Daewoo distributor for available safety guards and/or recommendations if there is any danger of getting hit by objects that could strike the operator's cab. Make sure that all other work site crew members are kept well away from the excavator and safe from possible hazards.



Figure 10

For breaker operation, install a front guard and apply a laminated coating sheet to the front glass. Contact your DAEWOO distributor for recommendations.

When carrying out demolition or cutting operation, install a front guard and top guard, and apply a laminated coating sheet to the front glass.

When working in mines or quarries where there is danger of falling rock, install FOPS (Falling Objects Protective Structure) and apply a laminated coating sheet to the front glass.

If any glass on the machine is broken, replace it with new glass immediately.

ATTACHMENT PRECAUTIONS

Option kits are available through your dealer. Contact Daewoo for information on available one-way (single-acting) and two-way (double-acting) piping / valving / auxiliary control kits. Because Daewoo cannot anticipate, identify or test all of the attachments that owners may wish to install on their machines, please contact Daewoo for authorization and approval of attachments, and their compatibility with options kits.

ACCUMULATOR

The pilot control system is equipped with an accumulator. For a brief period of time after the engine has been shut down, the accumulator will store a pressure charge that may enable hydraulic controls to be activated. Activation of any controls may enable the selected function to operate under force of gravity.

When performing maintenance on the pilot control system, the hydraulic pressure in the system must be released as describe in "Handling of Accumulator" in the Operation and Maintenance Manual.

The accumulator is charged with high-pressure nitrogen gas, so it is extremely dangerous if it is handled in the wrong way. Always observe the following precautions;

- Do not drill or make any holes in the accumulator or expose it any flame, fire or heat source.
- Do not weld on the accumulator, or try attaching anything to it.
- When carrying out disassembly or maintenance of the accumulator, or when disposing of the accumulator, the charged gas must be properly released. Contact your Daewoo distributor.
- Wear safety goggles and protective gloves when working on an accumulator. Hydraulic oil under pressure can penetrate the skin and cause serious injuries.

INDOOR VENTILATION

Engine exhaust gases can cause fatal accidents, and unconsciousness, loss of alertness, judgement and motor control and serious injury.

Make sure there is adequate ventilation before starting the engine in any enclosed area.

You should also be aware of open windows, doors or ductwork into which exhaust may be carried, or blown by the wind, exposing others to danger.

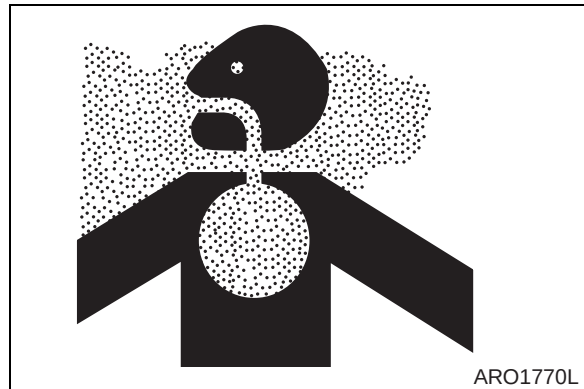


Figure 11

EMERGENCY EXIT

This machine is equipped with a glass breaking tool. It is behind the operator seat in the upper right corner of the cab. This tool can be used in case of an emergency situation that requires the breaking of glass to exit from the operator's cabin. Grip the handle firmly and use the sharp point to break the glass.



Figure 12

BEFORE STARTING ENGINE

WORK SITE PRECAUTIONS

Before starting operations, thoroughly check the area for any unusual conditions that could be dangerous.

Check the terrain and condition of the ground at the work site, and determine the best and safest method of operation.

Make the ground surface as hard and horizontal as possible before carrying out operations. If there is a lot of dust and sand on the work site, spray water before starting operations.

If you need to operate on a street, protect pedestrians and cars by designating a person for work site traffic duty or by erecting fences and posting "No Entry" signs around the work site.

Erect fences, post "No Entry" signs, and take other steps to prevent people from coming close to or entering the work site. If people come close to a moving machine, they may be hit or caught by the machine, and this may lead to serious personal injury or death.

Water lines, gas lines, phone lines and high-voltage electrical lines may be buried under the work site. Contact each utility and identify their locations. Be careful not to damage or cut any of these lines.

Check the condition of the river bed, and the depth and flow of the water before operating in water or crossing a river. NEVER be in water that is in excess of the permissible water depth.

Any type of object in the vicinity of the boom could represent a potential hazard, or cause the operator to react suddenly and cause an accident. Use a spotter or signal person working near bridges, phone lines, work site scaffolds, or other obstructions.

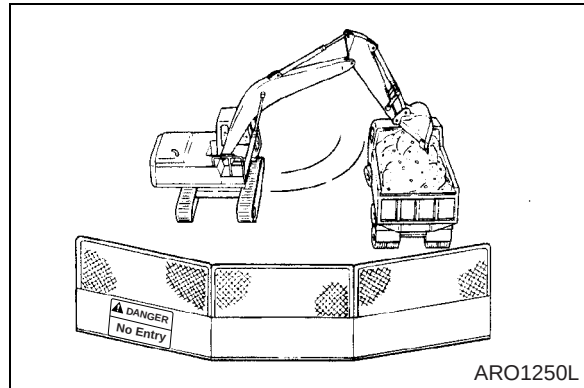


Figure 13

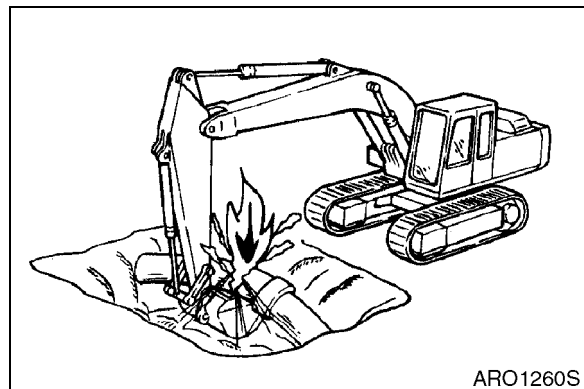


Figure 14

Minimum levels of insurance coverage, work permits or certification, physical barriers around the work site or restricted hours of operation may be mandated by governing authorities. There may also be regulations, guidelines, standards or restrictions on equipment that may have to be followed for local requirements. There may also be regulations related to performing certain kinds of work. If there is any question about whether your machine and work site complies with the applicable standards and regulations contact your local authorities and agencies.

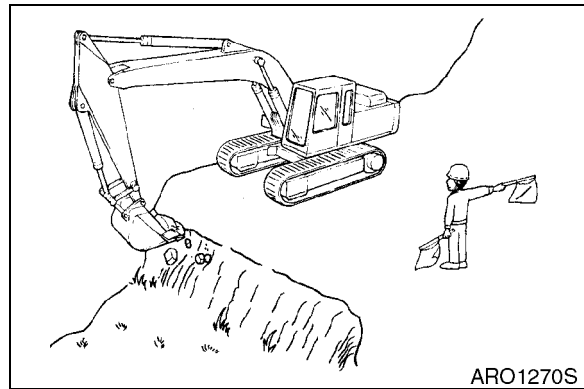


Figure 15

Avoid entering soft ground. It will be difficult for the machine to escape.

Avoid operating your machine too close to the edge of cliffs, overhangs, and deep ditches. The ground may be weak in such areas. If the ground should collapse, the machine could fall or tip over and this could result in serious injury or death.

Remember that the soil after heavy rain, blasting or after earthquakes, is weakened in these areas.

Earth laid on the ground and the soil near ditches is loose. It can collapse under the weight of vibration of your machine and cause your machine to tip over.

Install the head guard (FOPS) if working in areas where there is danger of falling rocks.

CHECKS BEFORE STARTING ENGINE

Every day before starting the engine for the first time, carry out the following checks. If these checks are not carried out properly, there is danger of serious injury.

Completely remove all wood chips, leaves, grass, paper and other flammable materials accumulated in the engine compartment and around the battery. They could cause a fire. Remove any dirt from the window glass, mirrors, handrails, and steps.

Do not leave tools or spare parts laying around in the operator's compartment. The vibration of the machine when traveling or during operations may cause them to fall and damage or break the control levers or switches. They may also get caught in the gap of the control levers and cause the work equipment to malfunction or move dangerously. This may lead to unexpected accidents.

Check the coolant level, fuel level, and hydraulic tank oil level, and check for clogged air cleaner and damage to the electrical wiring.

Adjust the operator's seat to a position where it is easy to operate the machine, and check the seat belt and mounts for damage and wear.

Check the operation of the gauges and the angle of the mirrors, and check that the safety lever is in "LOCKED" position.

If any abnormalities are found in the above checks, carry out repairs immediately.

ENGINE STARTING

Walk around your machine before getting in the operator's cab. Look for evidence of leaking fluid, loose fasteners, misaligned assemblies or any other indications of possible equipment hazard.

All equipment covers and machinery safety guards must be in place, to protect against injury while the machine is being operated.

Look around the work site area for potential hazards, people or property that could be at risk while operation is in progress.

NEVER start the engine if there is any indication that maintenance or service work is in progress, or if a warning tag is attached to controls in the cab.

A machine that has not been used recently, or is being operated in extremely cold temperatures, could require a warm-up or maintenance service before start-up.

Check gauges and monitor displays for normal operation before starting the engine. Listen for unusual noises and remain alert for other potentially hazardous conditions at the start of the work cycle.

Do not short circuit the starting motor to start the engine. This is not only dangerous, but may also damage the machine.

When starting the engine, sound the horn as an alert.

Start and operate the machine only while seated.

BEFORE OPERATING MACHINE

If checks are not carried out properly after starting the engine, it may result in a delay in discovering abnormalities in the machine, and this may lead to personal injury or damage to the machine.

Carry out the checks in an open area where there are no obstructions. Do not let anyone near the machine when carrying out the checks.

- Check the operating condition of the equipment, and the actuation of the bucket, arm, boom, travel, and swing systems.
- Check the machine for any abnormal noise, vibration, heat, smell, or abnormality with the gauges. Check also for leakage of air, oil, and fuel.
- If any abnormality is found, repair the problem immediately. If the machine is used without repairing the problems, it may lead to unexpected injury or failure.
- Clear all personnel from directly around machine and from the area.
- Clear all obstacles from the machine's path. Beware of hazards.
- Be sure that all windows are clean. Secure the doors and the windows in the open position or in the shut position.
- Adjust the rear view mirrors for best visibility close to the machine. Make sure that the horn, the travel alarm (if equipped), and all other warning devices are working properly.
- Fasten the seat belt securely.
- Warm up the engine and hydraulic oil before operating machine.
- Before moving the machine, check the position of undercarriage. The normal travel position is with idler wheels to the front under the cab and the drive sprockets to the rear. When the undercarriage is in the reversed position, the travel controls must be operated in opposite directions.

MACHINE OPERATION

WHEN SWINGING OR CHANGING DIRECTION OF TRAVEL

Before operating the machine or the work equipment, always observe the following precautions to prevent serious injury or death.

- When changing the direction of travel from forward to reverse or from reverse to forward, reduce speed early and stop the machine before changing the direction of travel.
- Sound the horn to warn people in the area.
- Check that there is no one in the area around the machine. There are blind spots behind the machine, so if necessary, swing the upper structure to check that there is no one behind the machine before traveling in reverse.
- When operating in areas that may be hazardous or have poor visibility, designate a person to direct work site traffic.
- Ensure that no unauthorized person can come within the turning radius or direction of travel.

Be sure to observe the above precautions even if a travel alarm or mirrors are installed.

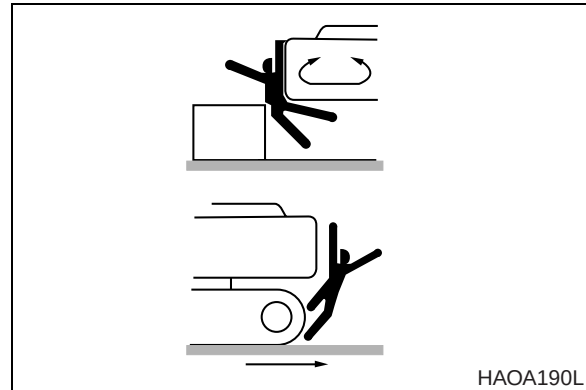


Figure 16

TRAVEL PRECAUTIONS

Never turn the starting switch to the "O" (OFF) position when traveling. It is dangerous if the engine stops when the machine is traveling. It will be impossible to operate the steering.

Attachment control levers should not be operated while traveling.

Do not change selected travel mode (FAST/SLOW) while traveling.

Fold in work equipment so that the outer end of the boom is as close to the machine as possible, and is 40-50 cm (16 - 20 in) above ground.

Never travel over obstacles or slopes that will cause the machine to tilt severely. Travel around any slope or obstacle that causes the machine to tilt 10 degrees or more to the right or left, or 30 degrees or more from front to rear.

Do not operate the steering suddenly. The work equipment may hit the ground and cause the machine to lose its balance, and this may damage the machine or structures in the area.

When traveling on rough ground, travel at low speed, and avoid sudden changes in direction.

Always keep to the permissible water depth. Permissible water depth is to the centerline of the upper track rollers.

When traveling over bridges or structures on private land, check first that the bridge or structure can withstand the weight of the machine. When traveling on public roads, check with the local authorities and follow their instructions.

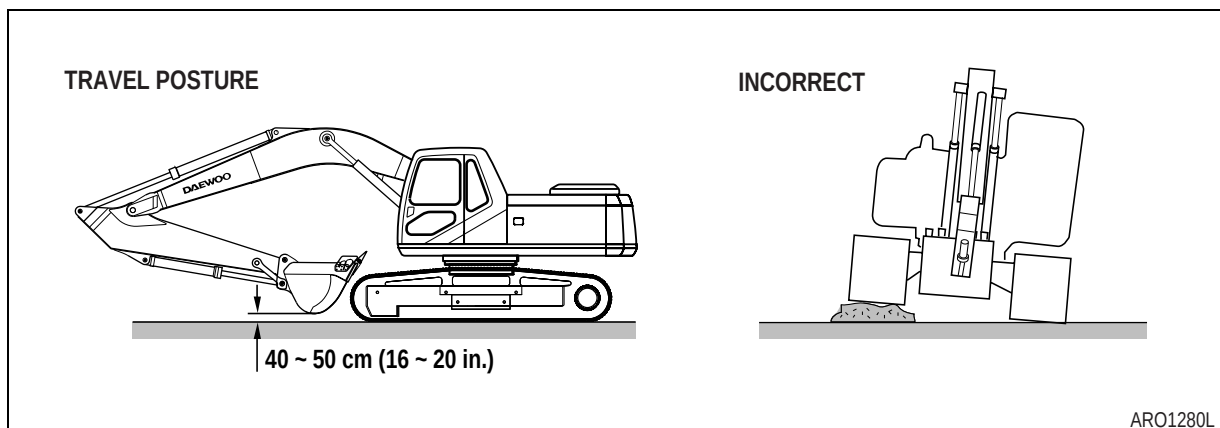


Figure 17

TRAVELING ON SLOPES

Never jump onto a machine that is running away to stop it. There is danger of serious injury.

Traveling on slopes could result in the machine tipping over or slipping.

On hills, banks or slopes, carry the bucket approximately 20 - 30 cm (8 - 12 in) above the ground. In case of an emergency, quickly lower the bucket to the ground to help stop the machine.

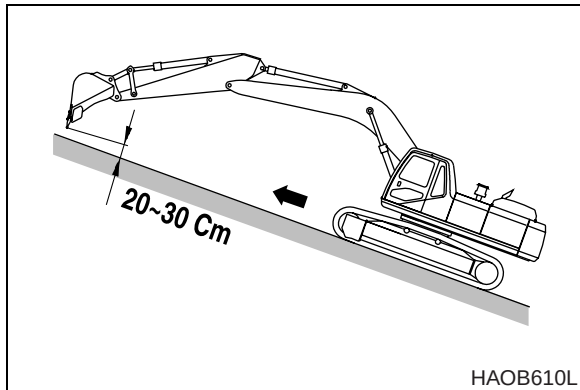


Figure 18

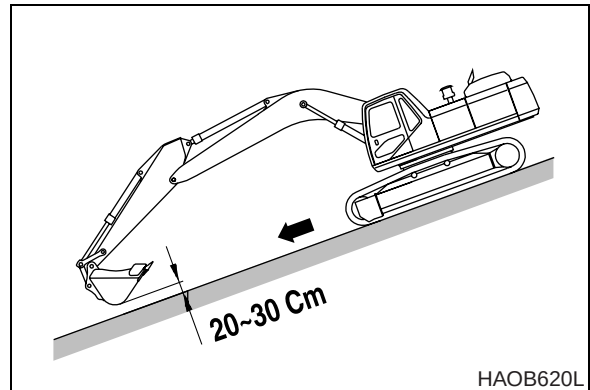


Figure 19

Do not travel on grass, fallen leaves, or wet steel plates. Even slight slopes may cause the machine to slip to the side, so travel at low speed and make sure that the machine is always traveling directly up or down the slope.

Avoid changing the direction of travel on a slope. This could result in tipping or side slipping of the machine.

When possible, operate the machine up slopes and down slopes. Avoid operating the machine across the slope, when possible.

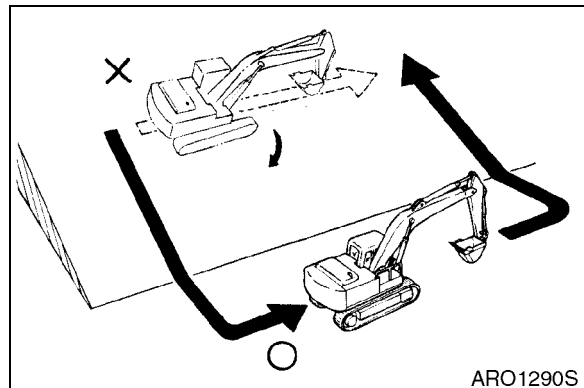


Figure 20

PROHIBITED OPERATIONS

Do not dig the work face under an overhand. This may cause the overhand to collapse and fall on top of the machine.

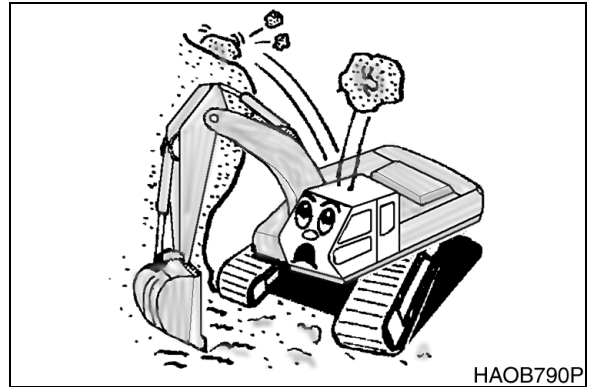


Figure 21

Do not carry out deep digging under the front of the machine. The ground under the machine may collapse and cause the machine to fall.

Working heavy loads over loose, soft ground or uneven, broken terrain can cause dangerous side load conditions and possible tipover and injury. Travel without a load or a balanced load may also be hazardous.

Never rely on lift jacks or other inadequate supports when work is being done. Block tracks fore and aft to prevent any movement.

When using the machine, to prevent accidents caused by damage to the work equipment and overturning because of an excessive load, do not use the machine in excess of its ability (in terms of the maximum load and stability determined by the structure of the machine).

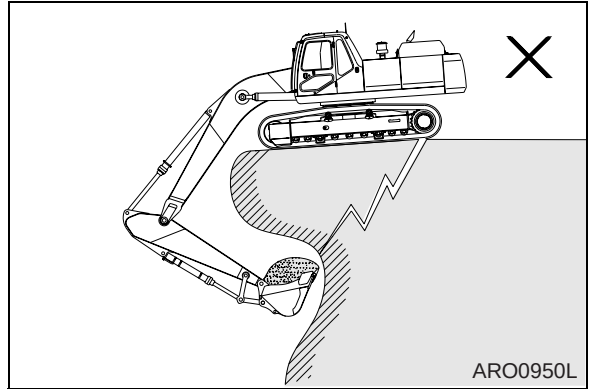


Figure 22

PRECAUTIONS FOR OPERATION

Be careful not to go close to the edge of a cliff by mistake.

Use the machine only for its main purpose. Using it for other purposes will cause failures.

To ensure an ample view, do as follows:

- When working in dark areas, attach working lights and front lights to the machine. If necessary, set up lighting at the work site.
- Stop operations when the visibility is poor, such as in fog, mist, snow, and rain. Wait for the visibility to improve to a level which causes no problems for the operation.

To avoid hitting the work equipment, always do the following;

- When working in tunnels, on bridges, under electric wires, or when parking the machine or carrying out other operations in places with limited height, be extremely careful not to hit the bucket or other parts.
- To prevent collisions, operate the machine at a safe speed when working in confined spaces, indoors, or in crowded areas.
- Do not pass the bucket over the heads of workers or over the operator's compartment of dump truck.

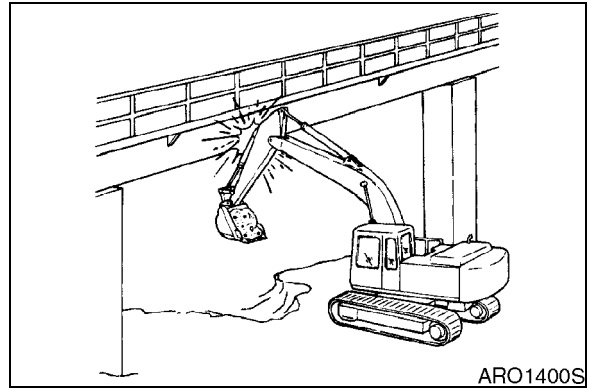


Figure 23

AVOID HIGH-VOLTAGE CABLES

Serious injury or death can result from contact or proximity to high-voltage electric lines. The bucket does not have to make physical contact with power lines for current to be transmitted.

Use a spotter and hand signals to stay away from power lines not clearly visible to the operator.

VOLTAGE	MINIMUM SAFE DISTANCE
6.6 kV	3 m (9' 10")
33.0 kV	4 m (13' 1")
66.0 kV	5 m (16' 5")
154.0 kV	8 m (26' 3")
275.0 kV	10 m (32' 10")

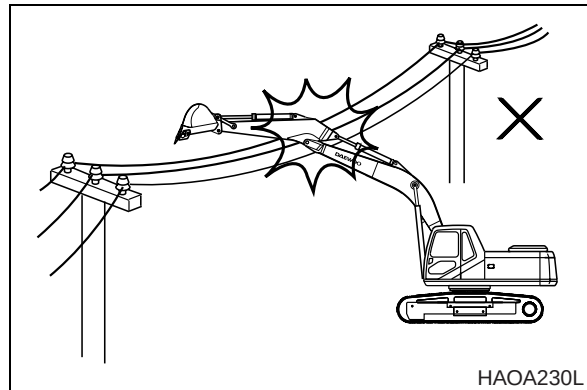


Figure 24

Use these minimum distances as a guideline only. Depending upon the voltage in the line and atmospheric conditions, strong current shocks can occur with the boom or bucket as far away as 4 - 6 m (13 - 20 ft.) from the power line. Very high voltage and rainy weather could further decrease that safety margin.

NOTE: Before starting any type of operation near power lines (either above ground or buried cable-type), you should always contact the power utility directly and work out a safety plan with them.

OPERATE CAREFULLY ON SNOW, ICE AND IN VERY COLD TEMPERATURES

In icy cold weather avoid sudden travel movements and stay away from even slight slopes. The machine could skid off to one side very easily.

Snow accumulation could hide or obscure potential hazards. Use care while operating or while using the machine to clear snow.

Warming up the engine for a short period may be necessary, to avoid operating with sluggish or reduced working capacity. The jolting shocks and impact loads caused by bumping or bottoming the boom or attachment are more likely to cause severe stress in very cold temperatures. Reducing work cycle rate and work load may be necessary.

When the temperature rises, frozen road surfaces become soft, so the machine travel becomes unstable.

In cold weather, do not touch metal surfaces with your bare hands. If you touch a metal surface in extremely cold weather, your skin may freeze to the metal surface.

OPERATIONS ON SLOPES

When working on slopes, there is danger that the machine may lose its balance and turn over, when swinging, or when work equipment is operated. Always carry out these operations carefully.

Do not swing the work equipment from the uphill side to the downhill side when the bucket is loaded. This operation is dangerous.

If the machine has to be used on a slope, pile the soil to make a platform that will keep the machine as horizontal as possible.

In addition, lower the bucket as far as possible, keep it pulled into the front, and keep the swing speed as low as possible.

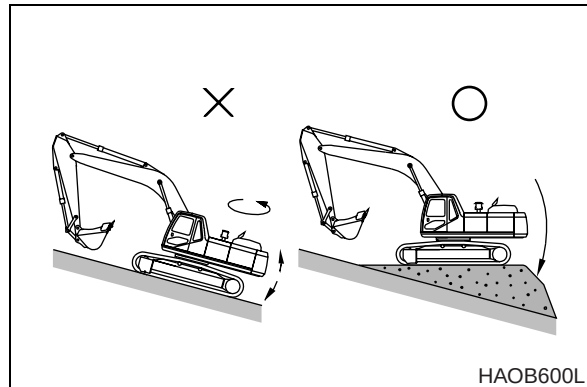


Figure 25

PARKING MACHINE

Avoid making sudden stops, or parking the machine wherever it happens to be at the end of the work day. Plan ahead so that the excavator will be on firm, level ground away from traffic and away from high walls, cliff edges and any area of potential water accumulation or runoff. If parking on inclines is unavoidable, block the crawler tracks to prevent movement. Lower the bucket or other working attachment completely to the ground, or to an overnight support saddle. There should be no possibility of unintended or accidental movement.

When parking on public roads, provide fences, signs, flags, or lights, and put up any other necessary signs to ensure that passing traffic can see the machine clearly, and park the machine so that the machine, flags, and fences do not obstruct traffic.

After the front attachment has been lowered to an overnight storage position and all switches and operating controls are in the "OFF" position, the safety lock lever must be set to the "LOCKED" position. This will disable all pilot circuit control functions.

Always close the door of the operator's compartment.

NEVER LET ANYONE RIDE ON ATTACHMENT

Never let anyone ride on any work attachment, such as the bucket, crusher, grapple, or clamshell (grab bucket). There is a danger of the person falling and suffering serious injury.

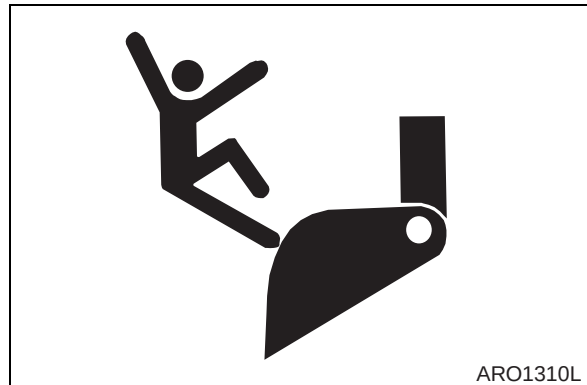


Figure 26

MAINTENANCE

WARNING TAG

Alert others that service or maintenance is being performed and tag operator's cab controls – and other machine areas if required – with a warning notice. OSHA mandated control lever lockout can be made with any OSHA certified lockout device and a length of chain or cable to keep the left-hand control console in the fully raised, non-active position.

Warning tags, for controls are available from Daewoo distributors.



Figure 27

CLEAN BEFORE INSPECTION OR MAINTENANCE

Clean the machine before carrying out inspection and maintenance. This prevents dirt from getting into the machine and also ensures safety during maintenance.

If inspection and maintenance are carried out when the machine is dirty, it will become more difficult to locate the problems, and also there is danger that you may get dirt or mud in your eyes or that you may slip and injure yourself.

When washing the machine, do the following;

- Wear shoes with non-slip soles to prevent yourself from slipping and falling on wet places.
- Wear safety glasses and protective clothing when washing the machine with high-pressure steam.
- Take action to prevent touching high-pressure water and cutting your skin or having mud fly into your eyes.
- Do not spray water directly on electrical components (sensors, connector) (1, Figure 28). If water gets into the electrical system, there is danger that it will cause defective operation and malfunction.

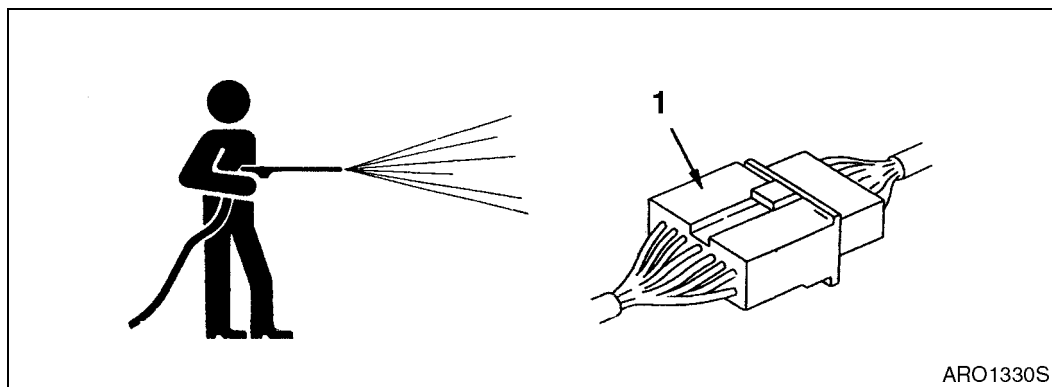


Figure 28

Pick up any tools or hammers that are laying in the work place, wipe up any grease or oil or any other slippery substances, and clean the area to make it possible to carry out the operation in safety. If the work place is left untidy, you may trip or slip and suffer injury.

PROPER TOOLS

Use only tools suited to the task. Using damaged, low quality, faulty, or makeshift tools could cause personal injury. There is danger that pieces from, chisels with crushed heads, or hammers, may get into your eyes and cause blindness.

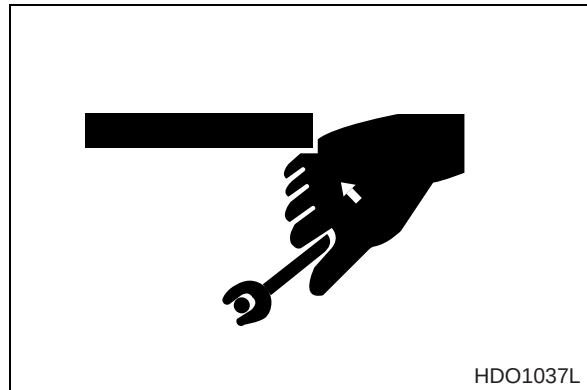


Figure 29

USE OF LIGHTING

When checking fuel, oil, battery electrolyte, or window washing fluid, always use lighting with anti-explosion specifications. If such lighting equipment is not used, there is danger of explosion.

If work is carried out in dark places without using lighting, it may lead to injury, so always use proper lighting.

Even if the place is dark, never use a lighter or flame instead of lighting. There is danger of fire. There is also danger that the battery gas may catch fire and cause an explosion.

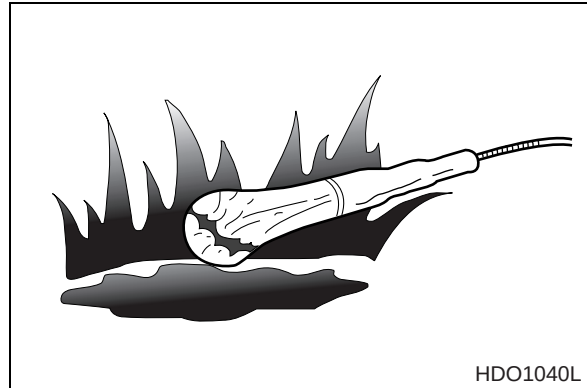


Figure 30

FIRE PREVENTION AND EXPLOSION PREVENTION

All fuels, most lubricants and some coolant mixtures are flammable. Leaking fuel or fuel that is spilled onto hot surfaces or onto electrical components can cause a fire.

Store all fuels and all lubricants in properly marked containers and away from all unauthorized persons.

Store oily rags and other flammable material in a protective container.

Do not smoke while you refuel the machine or while you are in a refueling area.

Do not smoke in battery charging areas or in areas that contain flammable material.

Clean all electrical connections and tighten all electrical connections. Check the electrical wires daily for wires that are loose or frayed. Tighten all loose electrical wires before you operate the machine. Repair all frayed electrical wires before you operate the machine.

Remove all flammable materials before the flammable materials accumulate on the machine.

Do not weld on pipes or on tubes that contain flammable fluids. Do not flame cut on pipes or on tubes that contain flammable fluids. Before you weld on pipes or on tubes or before you flame cut on pipes or on tubes, clean the pipes or tubes thoroughly with a nonflammable solvent.

BURN PREVENTION

When checking the radiator coolant level, stop the engine, let the engine and radiator cool down, then check the coolant recovery tank. If the coolant level in the coolant recovery tank is near the upper limit, there is enough coolant in the radiator.

Loosen the radiator cap gradually to release the internal pressure before removing the radiator cap.

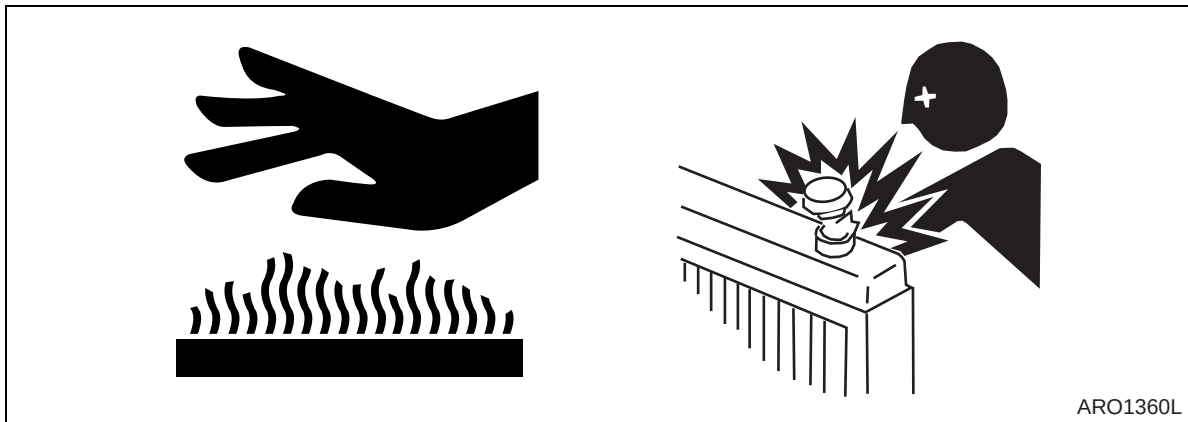


Figure 31

If the coolant level in the coolant recovery tank is below the lower limit, add coolant.

Cooling system conditioner contains alkali. Alkali can cause personal injury. Do not allow alkali to contact the skin, the eyes, or the mouth.

Allow cooling system components to cool before you drain the cooling system.

Hot oil and hot components can cause personal injury. Do not allow hot oil or hot components to contact the skin.

Remove the hydraulic tank filter plug only after the engine has been stopped. Make sure that the hydraulic tank filter plug is cool before you remove it with your bare hand. Remove the hydraulic tank filter plug slowly to relieve pressure.

Relieve all pressure in the hydraulic oil system, in the fuel system, or in the cooling system before you disconnect any lines, fittings, or related items.

Batteries give off flammable fumes that can explode.

Do not smoke while you are checking the battery electrolyte levels.

Electrolyte is an acid. Electrolyte can cause personal injury. Do not allow electrolyte to contact the skin or the eyes.

Always wear protective glasses when you work on batteries.

WELDING REPAIRS

When carrying out welding repairs, carry out the welding in a properly equipped place. The welding should be performed by a qualified worker. During welding operations, there is the danger of, generation of gas, fire, or electric shock, so never let an unqualified worker do welding.

The qualified welder must do the following;

- To prevent explosion of the battery, disconnect the battery terminals and remove batteries.
- To prevent generation of gas, remove the paint from the location of the weld.
- If hydraulic equipment, piping or places close to them are heated, a flammable gas or mist will be generated and there is danger of it catching fire. To avoid this, never subject these places to heat.
- Do not weld on pipes or on tubes that contain flammable fluids. Do not flame cut on pipes or on tubes that contain flammable fluids. Before you weld on pipes or on tubes or before you flame cut on pipes or on tubes, clean the pipes or tubes thoroughly with a nonflammable solvent.
- If heat is applied directly to rubber hoses or piping under pressure, they may suddenly break so cover them with a fireproof covering.
- Wear protective clothing.
- Make sure there is good ventilation.
- Remove all flammable objects and provide a fire extinguisher.

WARNING FOR COUNTERWEIGHT AND FRONT ATTACHMENT REMOVAL



DANGER!

Daewoo warns any user, that the removal of the counterweight from the machine, front attachment or any other part, may affect the stability of the machine. This could cause unexpected movement, resulting in death or serious injuries. Daewoo is not liable for any misuse.

Never remove the counterweight or front attachment unless the upper structure is in-line with the lower structure.

Never rotate the upper structure once the counterweight or front attachment has been removed.

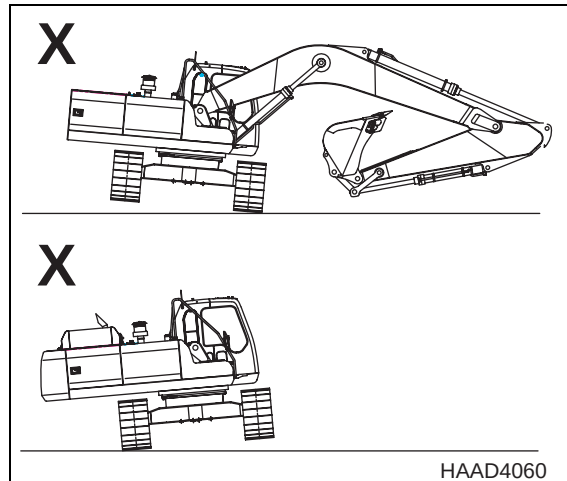


Figure 32

PRECAUTIONS FOR REMOVAL, INSTALLATION, AND STORAGE OF ATTACHMENTS

Before starting removal and installation of attachments, decide the team leader.

Do not allow anyone except the authorized workers close to the machine or attachment.

Place attachments that have been removed from the machine in a safe place so that they do not fall. Put up a fence around the attachments and take other measures to prevent unauthorized persons from entering.

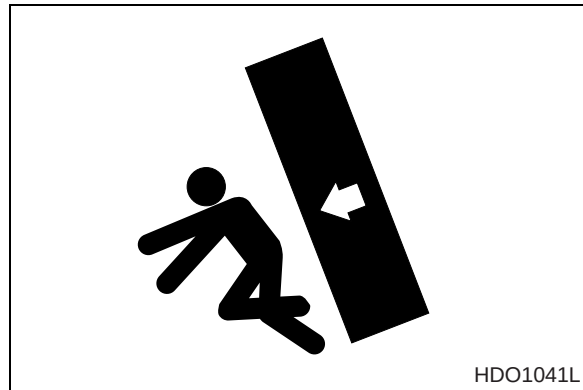


Figure 33

PRECAUTIONS WHEN WORKING ON MACHINE

When carrying out maintenance operations on the machine, keep the area around your feet clean and tidy to prevent you from falling. Always do the following;

- Do not spill oil or grease.
- Do not leave tools laying about.
- Watch your step when walking.

Never jump down from the machine. When getting on or off the machine, use the steps and handrails, and maintain a three-point contact (both feet and one hand or both hands and one foot) to support yourself securely.

If the job requires it, wear protective clothing.

To prevent injury from slipping or falling, when working on the hood or covers, never use any part except the inspection passage fitted with non-slip pads.



Figure 34

LOCK INSPECTION COVERS

When carrying out maintenance with the inspection cover open, lock the cover securely in position with the lock bar.

If maintenance work is carried out with the inspection cover open but not locked, there is danger that it may suddenly close and cause injury if there is a gust of wind.

CRUSHING PREVENTION AND CUTTING PREVENTION

You should always have at least two people working together if the engine must be run during service. One person needs to remain in the operator's seat, ready to work the controls or stop the machine and shut off the engine.

Unless you are instructed otherwise, never attempt adjustments while the machine is moving or while the engine is running.

Stay clear of all rotating parts and moving parts.

Keep objects away from moving fan blades. The fan blades will throw objects and the fan blades can cut objects.

Do not use a wire rope cable that is kinked or flayed. Wear gloves when you handle a wire rope cable.

When you strike a retainer pin, the retainer pin might fly out. The loose retainer pin can injure personnel. Make sure that the area is clear of people when you strike a retainer pin. To avoid injury to your eyes, wear protective glasses when you strike a retainer pin.

TRACK TENSION ADJUSTMENTS REQUIRE CAUTION

Never turn out the track tension grease fitting nut. To release pressure from the crawler frame track tension assembly, you should NEVER attempt to disassemble the track adjuster or attempt to remove the grease fitting or valve assembly.

Keep your face and body away from the valve. Refer to the track adjustment procedure in the Operator and Maintenance Manual or Shop Manual.

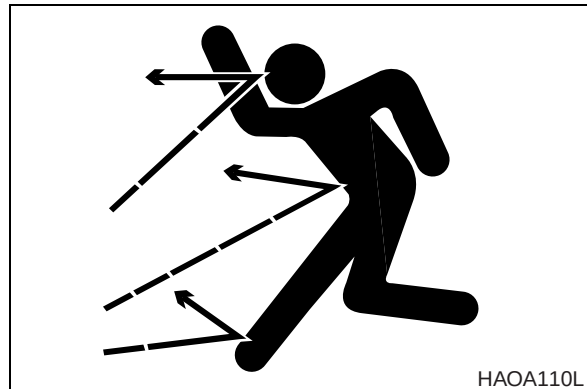


Figure 35

SUPPORTS AND BLOCKING FOR WORK EQUIPMENT

Do not allow weight or equipment loads to remain suspended. Lower everything to the ground before leaving the operator's seat. Do not use hollow, cracked or unsteady, wobbling weight supports. Do not work under any equipment supported solely by a lift jack.

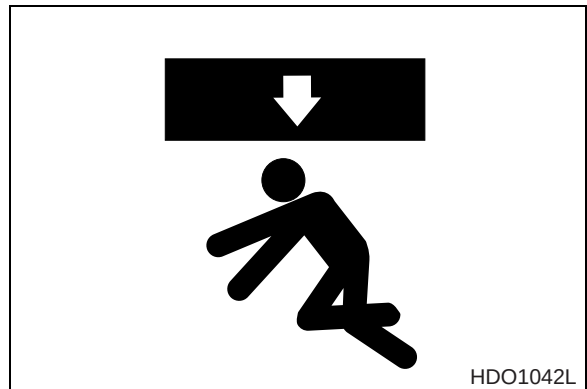


Figure 36

ACTION WHEN ABNORMALLY IS FOUND DURING INSPECTION

If any abnormality is found during inspection, always carry out repairs. In particular, if the machine is used when there are still problems with the brake or work equipment systems, it may lead to serious injury.

If necessary depending on the type of failure, please contact your Daewoo distributor for repairs.

PRECAUTIONS WITH HIGH PRESSURE LINE, TUBES AND HOSES

When inspecting or replacing high-pressure piping or hoses, check that the pressure has been released from the circuit. Failure to release the pressure may lead to serious injury. Always do the following;

- Wear protective glasses and leather gloves.
- Fluid leaks from hydraulic hoses or pressurized components can be difficult to see but pressurized oil has enough force to pierce the skin and cause serious injury. Always use a piece of wood or cardboard to check for suspected hydraulic leaks. Never use your hands or expose your fingers.
- Do not bend high pressure lines. Do not strike high pressure lines. Do not install lines, tubes or hoses that are bent or damaged.
- Make sure that all clamps, guards and heat shields are installed correctly to prevent vibration, rubbing against other parts, and excessive heat during operation.
 - If any of the following conditions are found, replace the part.
 - Damage or leakage from hose end.
 - Wear, damage, cutting of covering, or exposure of strengthening wire layer.
 - Cover portion is swollen in places.
 - There is twisting or crushing at movable parts of hose.
 - Foreign material is embedded in the covering.
 - Hose end is deformed.

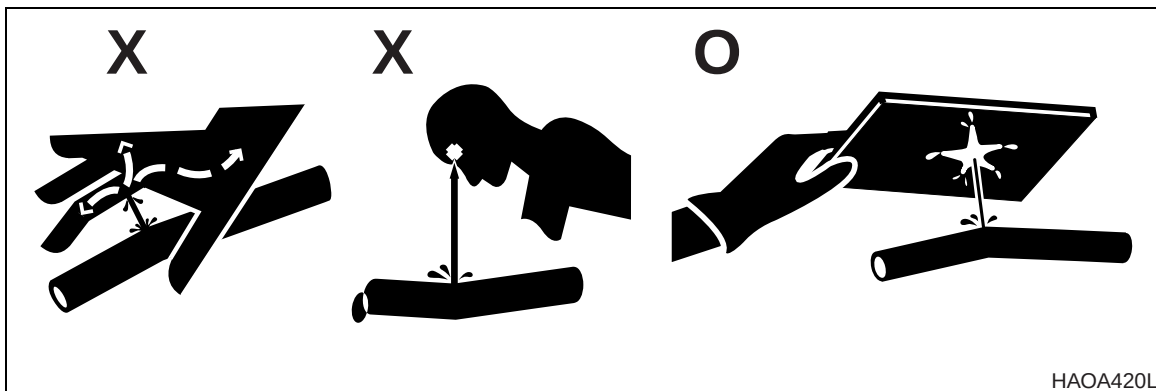


Figure 37

WASTE MATERIALS

Physical contact with used motor oil may pose a health risk. Wipe oil from your hands promptly and wash off any remaining residue.

Used motor oil is an environmental contaminant and may only be disposed of at approved collection facilities. To prevent pollution of the environment, always do the following;

- Never dump waste oil in a sewer system, rivers, etc.
- Always put oil drained from your machine in containers. Never drain oil directly onto the ground.
- Obey appropriate laws and regulations when disposing of harmful materials such as oil, fuel, solvent, filters, and batteries.

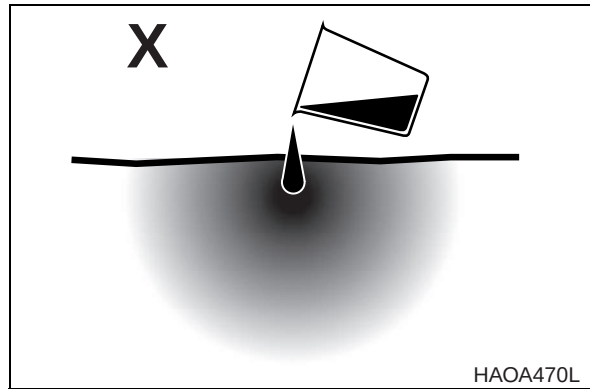


Figure 38

BATTERY

BATTERY HAZARD PREVENTION

Battery electrolyte contains diluted sulfuric acid and batteries generate hydrogen gas. Hydrogen gas is highly explosive, and mistakes in handling them can cause serious injury or fire. To prevent problems, always do the following;

- Do not smoke or bring any flame near the battery.
- When working with batteries, ALWAYS wear safety glasses and rubber gloves.
- If you spill battery electrolyte on yourself or your clothes, immediately flush the area with water.
- If battery electrolyte gets into your eyes, flush them immediately with large quantities of water and see a doctor at once.
- If you accidentally drink battery electrolyte, drink a large quantity of water or milk, raw egg or vegetable oil. Call a doctor or poison prevention center immediately.
- When cleaning the top surface of the battery, wipe it with a clean, damp cloth. Never use gasoline, thinner, or any other organic solvent or detergent.
- Tighten the battery caps securely.
- If the battery electrolyte is frozen, do not charge the battery or start the engine with power from another source. There is danger that the battery may catch fire.
- When charging the battery or starting with power from another source, let the battery electrolyte melt and check that there is no leakage of battery electrolyte before starting the operation.
- Always remove the battery from the machine before charging.

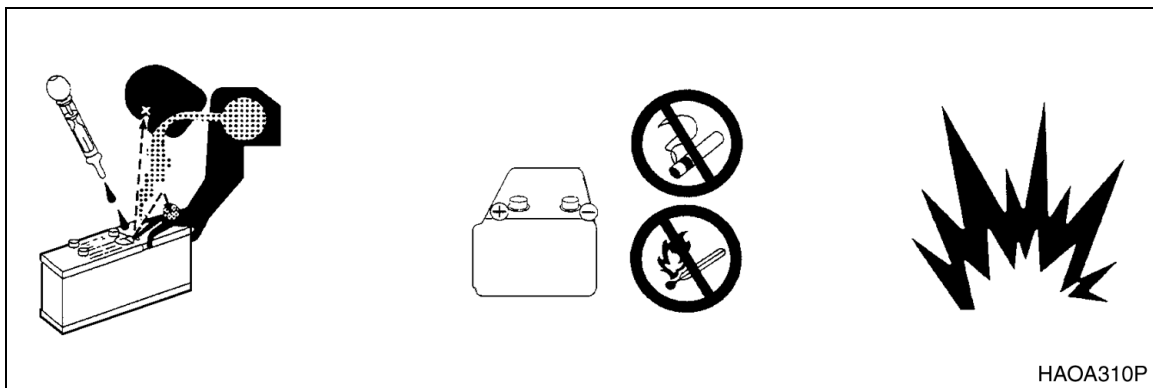


Figure 39

BOOST STARTING OR CHARGING ENGINE BATTERIES

If any mistake is made in the method of connecting the booster cables, it may cause an explosion or fire. Always do the following;

- Turn off all electrical equipment before connecting leads to the battery. This includes electrical switches on the battery charger or boost starting equipment.
- When boost-starting from another machine or vehicle do not allow the two machines to touch. Wear safety glasses or goggles while required battery connections are made.
- 24 volt battery units consisting of two series-connected twelve volt batteries have a cable connecting one positive terminal on one of the 12 volt batteries to a negative terminal on the other battery. Booster or charger cable connections must be made between the non-series-connected positive terminals and between the negative terminal of the booster battery and the metal frame of the machine being boosted or charged. Refer to the procedure and illustration in "Starting Engine With a Booster Cable" in the Operation and Maintenance Manual.
- Connect positive cable first when installing cables and disconnect the negative cable first when removing them. The final cable connection, at the metal frame of the machine being charged or boost-started, should be as far away from the batteries as possible.

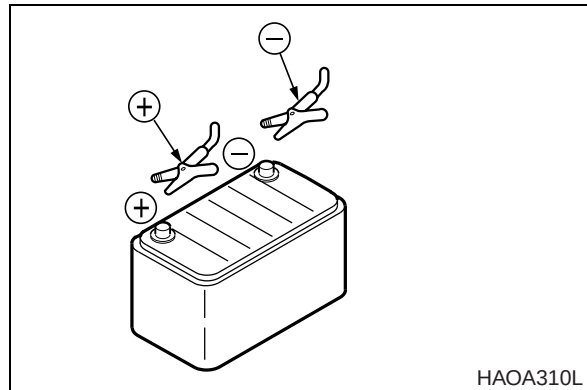


Figure 40

TOWING

PRECAUTIONS WHEN TOWING

If any mistake is made in the method of selecting or inspecting the towing wire or in the method of towing, it may lead to serious personal injury. Always do the following;

- Always use the method of towing given in this Operation and Maintenance Manual. Do not use any other method.
- Use leather gloves when handling the wire rope.
- When carrying out the preparation work for towing with two or more workers, determine the signals to use and follow these signals correctly.
- Always fit the towing rope to the left and right hooks and secure in position.
- If the engine on the problem machine will not start or there is a failure in the brake system, always contact your Daewoo distributor.
- Never go between the towing machine and the towed machine during the towing operation.
- It is dangerous to carry out towing on slopes, so select a place where the slope is gradual. If there is no place where the slope is gradual, carry out operations to reduce the angle of the slope before starting the towing operation.
- When towing a problem machine, always use a wire rope with a sufficient towing capacity.
- Do not use a frayed, kinked rope or a rope with any loss of diameter.
- Do not use the light-weight towing hook for towing another machine.

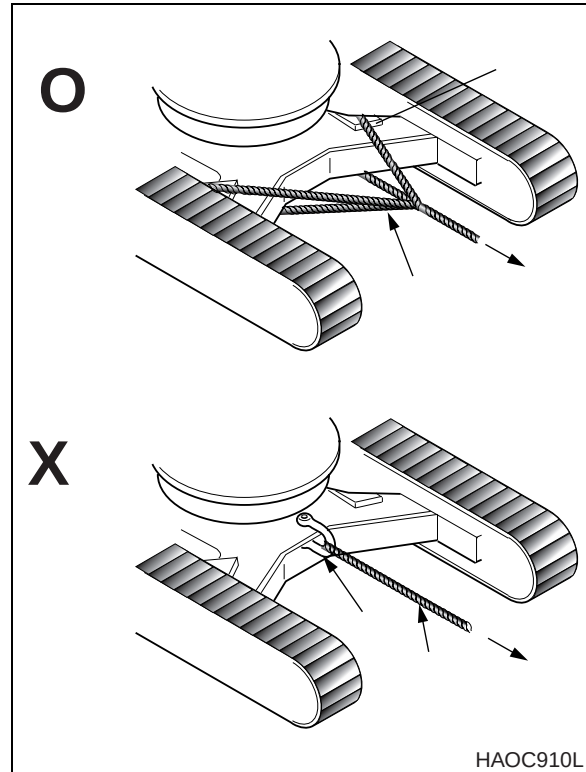


Figure 41

SHIPPING AND TRANSPORTATION

OBEY STATE AND LOCAL OVER-THE-ROAD REGULATIONS

Check state and local restrictions regarding weight, width and length of a load before making any other preparation for transport.

The hauling vehicle, trailer and load must all be in compliance with local regulations governing the intended shipping route.

Partial disassembly or tear-down of the excavator may be necessary to meet travel restrictions or particular conditions at the work site. See the Shop Manual for information on partial disassembly.

Refer to the Transportation and Shipping section of this Operation and Maintenance Manual for information on loading, unloading and towing.

LIFTING WITH SLING

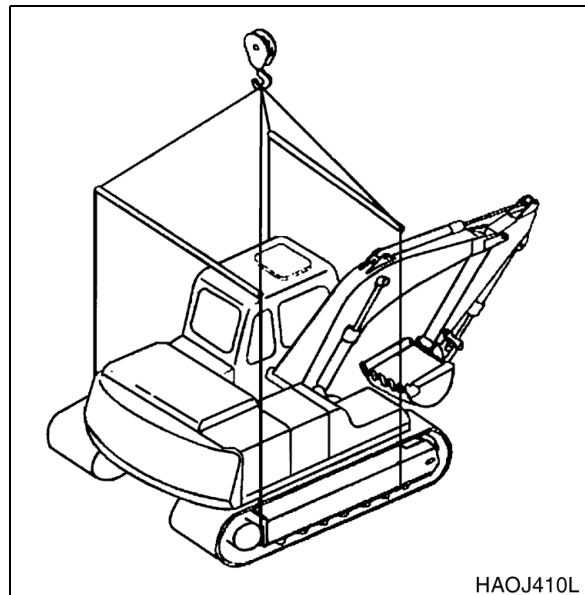


WARNING!

Improper lifting can allow load to shift and cause injury or damage.

1. Refer to Specification section of Operation and Maintenance Manual for information on weight and dimensions.
2. Use properly rated cables and slings for lifting.
3. Position machine for a level lift.
4. Lifting cables should have a long enough length to prevent contact with the machine. Spreader bars may be required.

NOTE: *If spreader bars are used, be sure that cables are properly secured to them and that the angle of the cables is factored into the lift strength.*



HAOJ410L

Figure 42

SPECIFICATIONS



SPECIFICATIONS FOR SOLAR 300LC-V



CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that is in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

MODEL	SERIAL NUMBER RANGE
Solar 300LC-V	1001 and Up

TABLE OF CONTENTS

General Description.....	3
Component Locations	4
General Dimensions.....	7
Working Range.....	8
General Specifications	10
Engine Performance Curves (Per DIN 6270 Standard).....	12
Approximate Weight of Workload Materials	14
Performance Tests.....	17
Excavator Performance Standards.....	18
Test Conditions.....	18
Travel Speed and Travel Motor Balance (Steering Deviation) Tests	18
Swing Speed and Deceleration Force Test	20
Cylinder Performance Tests	21

GENERAL DESCRIPTION

The excavator has three main component sections:

- The Upper Turntable
- The Lower Undercarriage and Track Frames
- The Excavator Front-end Attachment

The following illustration identifies main components and their locations. (See Figure 1 on page -4.)

COMPONENT LOCATIONS

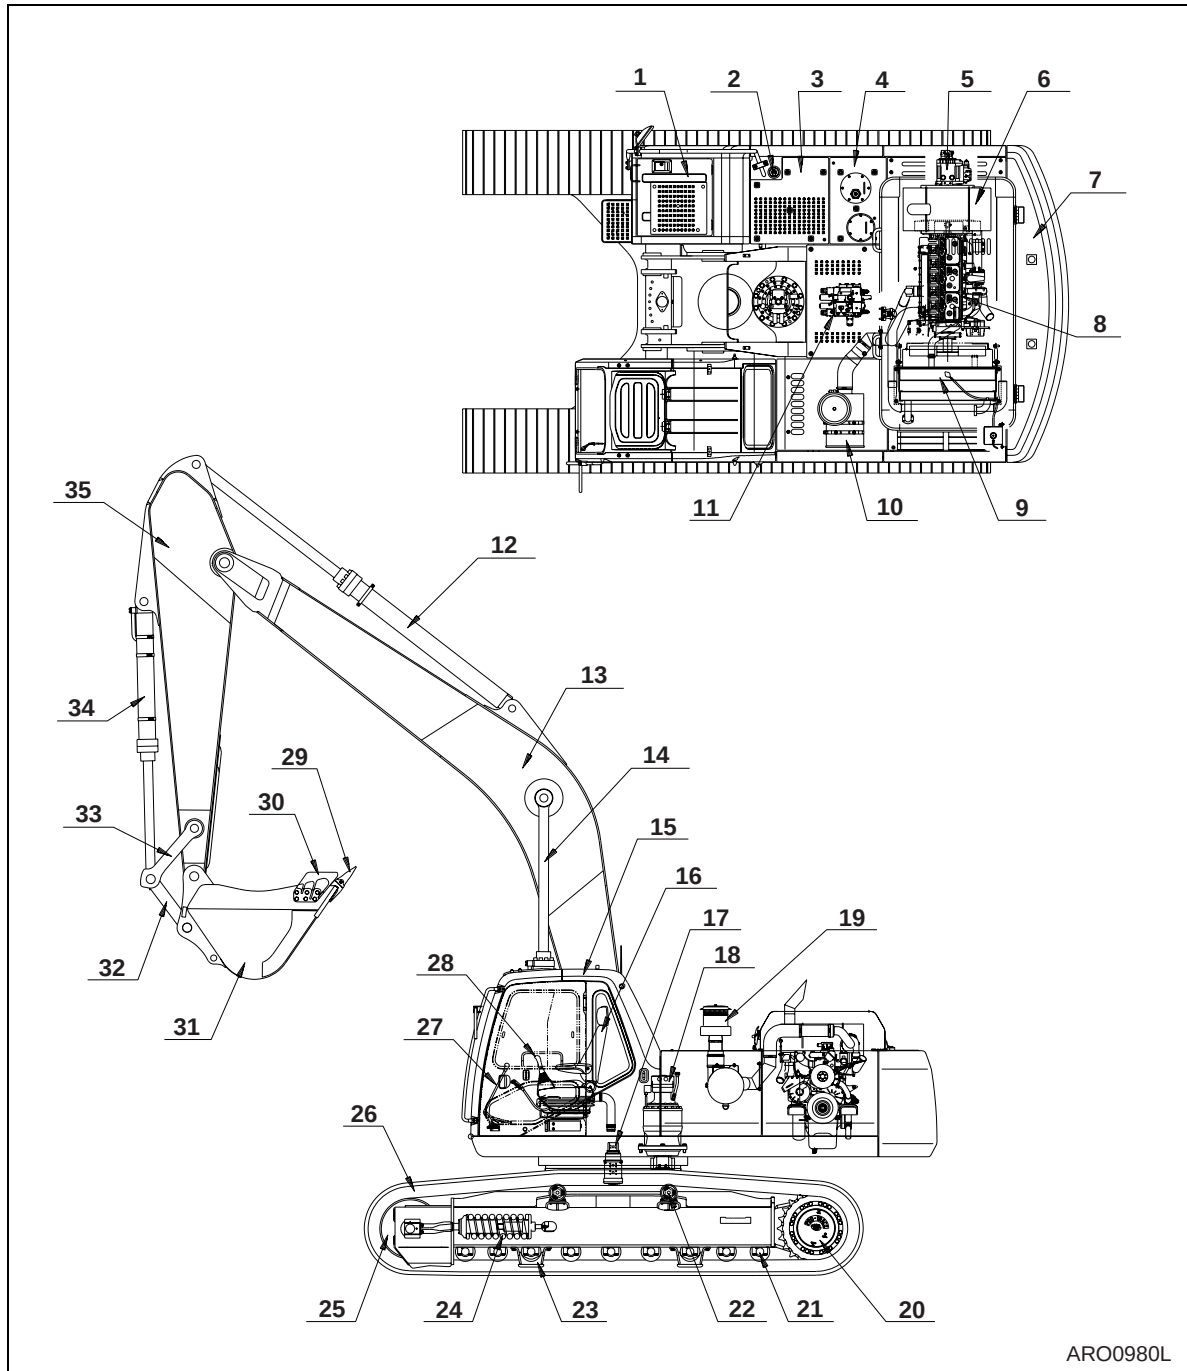


Figure 1

- | | |
|----------------------------|------------------------------------|
| 1. BATTERY | 19. PRECLEANER |
| 2. FUEL TANK FILL CAP | 20. TRAVEL MOTOR |
| 3. FUEL TANK | 21. LOWER ROLLER |
| 4. HYDRAULIC OIL TANK | 22. UPPER ROLLER |
| 5. PUMPS | 23. TRACK GUIDE |
| 6. MUFFLER | 24. TRACK ADJUSTER |
| 7. COUNTERWEIGHT | 25. IDLER |
| 8. ENGINE | 26. TRACK LINK AND SHOE |
| 9. RADIATOR AND OIL COOLER | 27. TRAVEL LEVER |
| 10. AIR CLEANER | 28. WORK LEVER (JOYSTICK) CONTROLS |
| 11. CONTROL VALVES | 29. TOOTH POINT |
| 12. ARM CYLINDER | 30. SIDE CUTTER |
| 13. BOOM | 31. BUCKET |
| 14. BOOM CYLINDER | 32. PUSH LINK |
| 15. CAB | 33. GUIDE LINK |
| 16. SEAT | 34. BUCKET CYLINDER |
| 17. CENTER JOINT | 35. ARM |
| 18. SWING MOTOR | |

GENERAL DIMENSIONS

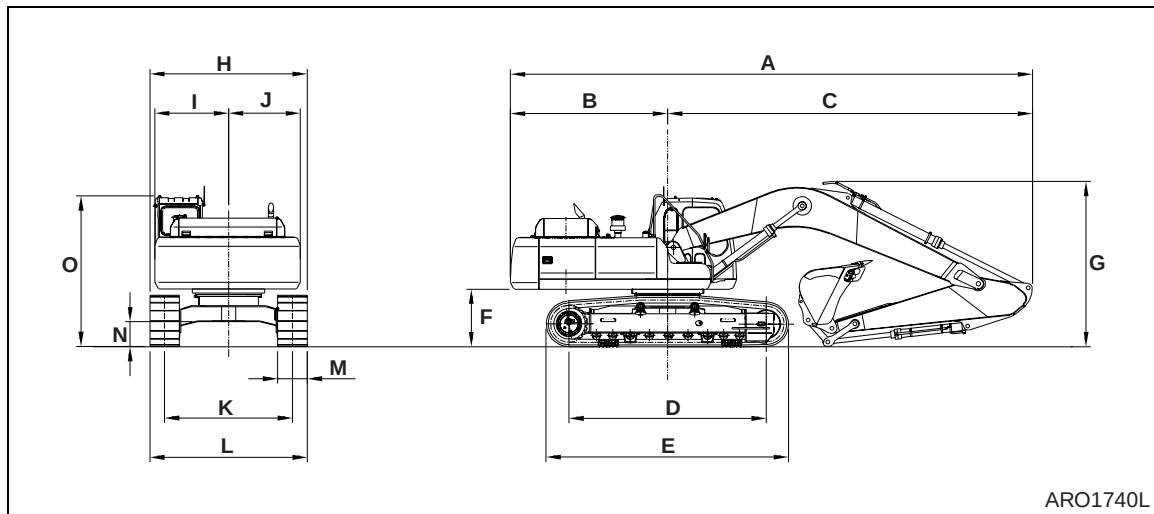


Figure 2

DIMENSION	6.245 m (20.5 ft) BOOM		
	3.1 m (10.17 ft) ARM	2.5 m (8.2 ft) ARM	3.75 m (12.3 ft) ARM
A	10,620 mm (34' 10")	10,705 mm (35' 1")	10,700 mm (35' 1")
B	3,200 mm (10' 6")		
C	7,420 mm (24' 4")	7,505 mm (24' 7")	7,500 mm (24' 7")
D	4,010 mm (13' 2")		
E	4,930 mm (16' 2")		
F	1,175 mm (3' 10")		
G	3,365 mm (11' 0")	3,515 mm (11' 6")	3,930 mm (12' 11")
H	2,960 mm (9' 9")		
I	1,500 mm (4' 11")		
J	1,460 mm (4' 9")		
K	2,600 mm (8' 6")		
L	3,200 mm (10' 6")		
M	600 mm (23.62 in)		
N	500 mm (19.69 in)		
O	3,065 mm (10' 1")		

WORKING RANGE



WARNING!

The actual value for dimension "L" Digging Reach, depends on the stability and support provided by ground conditions. Digging too far underneath the excavator if soil conditions are wet, loose or unstable can collapse ground support, which could cause injury and/or equipment damage.

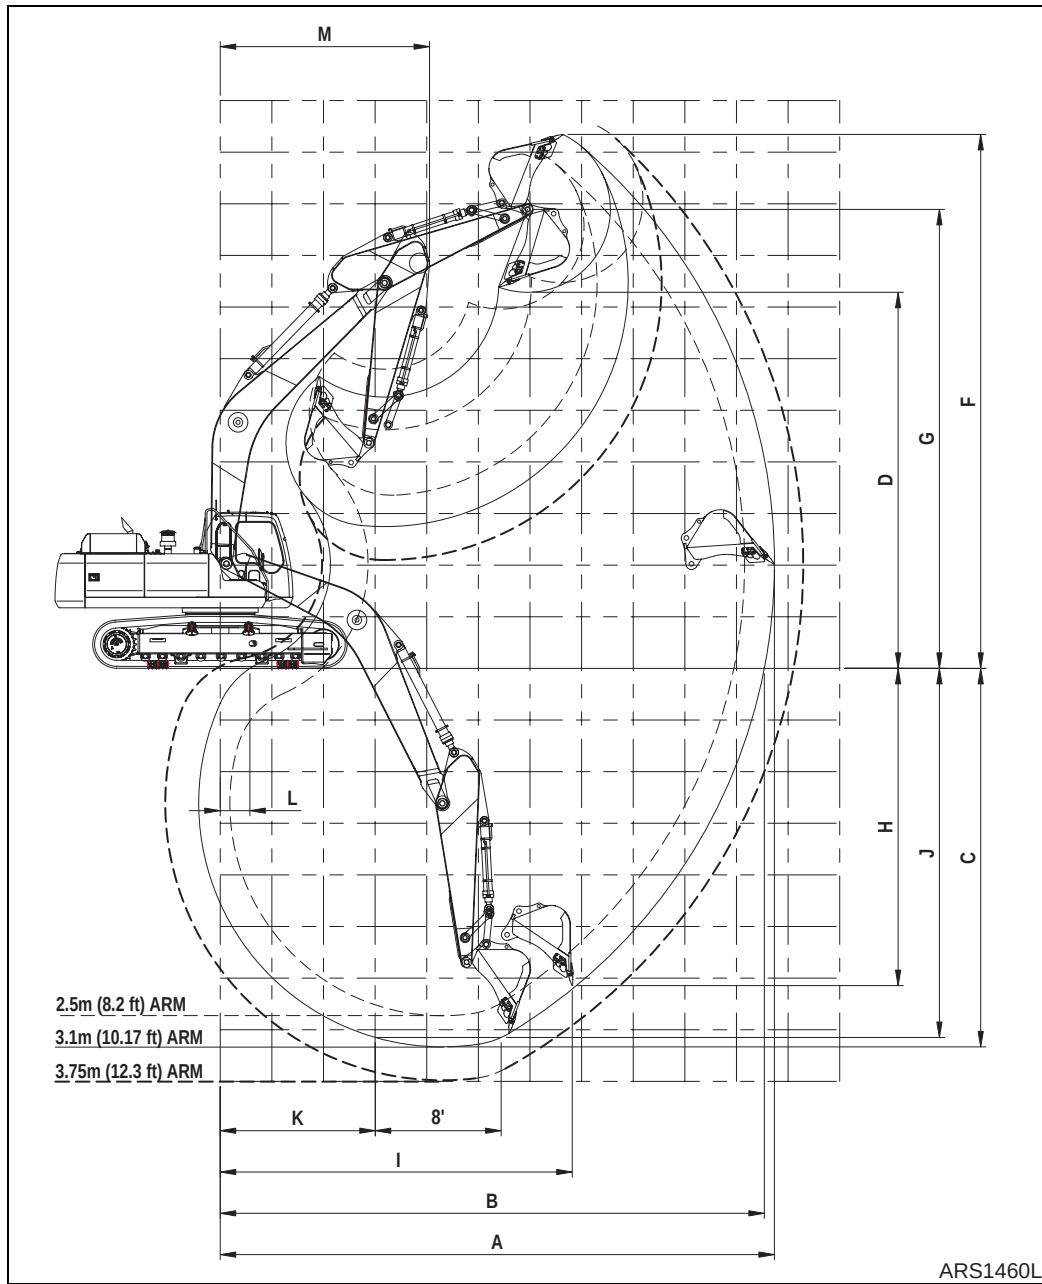


Figure 3

Dim.	Boom Type	One Piece 6.245 m (20.5 ft)		
	Arm Type	3.1 m (10.17 ft)	2.5 m (8.2 ft)	3.75 m (12.3 ft)
	Bucket Type (PCSA)	1.27 m ³ (1.66 yd ³)	1.50 m ³ (1.96 yd ³)	1.75 m ³ (2.29 yd ³)
A	Max. Digging Reach	10,735 mm (35' 3")	10,155 mm (33' 4")	11,290 mm (37' 0")
B	Max. Digging Reach (Ground)	10,540 mm (37' 7")	9,950 mm (32' 8")	11,105 mm (36' 5")
C	Max. Digging Depth	7,330 mm (24' 1")	6,725 mm (22' 1")	7,980 mm (26' 2")
D	Max. Loading Height	7,286 mm (23' 11")	6,960 mm (22' 10")	7,475 mm (24' 6")
F	Max. Digging Height	10,345 mm (33' 11")	9,985 mm (32' 9")	10,520 mm (34' 6")
G	Max. Bucket Pin Height	8,890 mm (29' 2")	8,565 mm (28' 1")	9,080 mm (29' 9")
H	Max. Vertical Wall	6,145 mm (20' 2")	5,370 mm (17' 7")	6,745 mm (22' 2")
I	Max. Radius Vertical	6,820 mm (22' 5")	6,865 mm (22' 6")	6,950 mm (22' 10")
J	Max. Depth to 8 ft Line	7,150 mm (23' 5")	6,505 mm (21' 4")	7,810 mm (25' 7")
K	Min. Radius 8 ft Line	3,005 mm (9' 10")	2,965 mm (9' 9")	2,970 mm (9' 9")
L	Min. Digging Reach	575 mm (1' 11")	1,970 mm (6' 6")	- 80 mm (- 0' 9")
M	Min. Swing Radius	4,055 mm (13' 4")	4,107 mm (13' 6")	4,010 mm (13' 2")

GENERAL SPECIFICATIONS

Shipping Weight	29.3 metric tons (64,600 lb), includes 10% fuel, boom, 3,100 mm (10' 2") arm, 1,334 mm (4' 5") backhoe bucket and standard shoes
Operating Weight	Add weight of full fuel tank and operator.
Shipping Weights With Optional Track Shoes	Add 600 kg (1,320 lb) for 700 mm (28") shoes
	Add 1,000 kg (2,204 lb) for 800 mm (32") shoes
	Add 1,200 kg (4,408 lb) for 850 mm (34") shoes
Major Component Weights	Standard Boom 2,330 kg (5,137 lb)
	2,500 mm (8' 2") Arm 900 kg (1,984 lb)
	3,100 mm (10' 2") Arm 1,050 kg (2,315 lb)
	3,750 mm (12' 4") Arm 1,060 kg (2,337 lb)
	Boom Cylinders 260 kg (573 lb) each
	Arm Cylinder 340 kg (750 lb)
	Bucket Cylinder 220 kg (485 lb)
	Counterweight 4,900 kg (10,800 lb)
	Upper Turntable 7,700 kg (16,975 lb)
	Lower - below Swing Bearing 11,050 kg (24,360 lb)
Digging Forces:	
Bucket Cylinder	177 kN or 18,100 kg (39,900 lb) - (with either 3,100 mm [10' 2"] or 2,500 mm [8' 2"] arm)
Arm Cylinder	131 kN or 13,400 kg (29,500 lb) with 3,100 mm (10' 2") standard arm
Fuel Tank Capacity	450 liters (119 U.S. gal)
Hydraulic System Capacity	290 liters (77 U.S. gal)
Hydraulic Reservoir Capacity	160 liters (42 U.S. gal)
Bucket Heaped Capacity Range	PCSA 0.90 - 1.5 m ³ (1.18 - 1.96 yd ³)
	IMPORTANT: Refer to the Load Weight, Bucket and Arm Length Compatibility Table for information on which bucket sizes may be used safely with which arm length, for load material weights.
Shoe Type	Triple Grouser
Shoe Width and Optional Sizes	600 mm (23.5") - standard
	700 mm (28") - optional
	800 mm (32") - optional
	850 mm (34") - optional
	910 mm (36") - special option (triangular)
Ground Pressure Ratings:	
Standard 600 mm (23.6") shoe -	0.57 kg/cm ² (8.1 psi)
Optional 700 mm (28.0") shoe -	0.50 kg/cm ² (7.1 psi)
Optional 800 mm (32.0") shoe -	0.44 kg/cm ² (6.2 psi)

Optional 850 mm (34.0") shoe -	0.42 kg/cm ² (6.0 psi)
Optional 910 mm (36.0") shoe -	0.39 kg/cm ² (5.5 psi)
Transport Dimensions	
Overall Shipping Length (standard boom and arm)	10,620 mm (34' 10")
Overall Shipping Width (standard shoes)	3,200 mm (10' 6")
Overall Shipping Height (to top of cylinder hose)	3,365 mm (11')
Track Shipping Length	4,930 mm (16' 2")
Transport Trailer Capacity	30 tons (33 short tons), minimum load capacity
Transport Loading Ramp Allowable Slope	15° angle CAUTION: Refer to Transport Maximum Procedure for Safe Shipping Instructions.

ENGINE PERFORMANCE CURVES (PER DIN 6270 STANDARD)

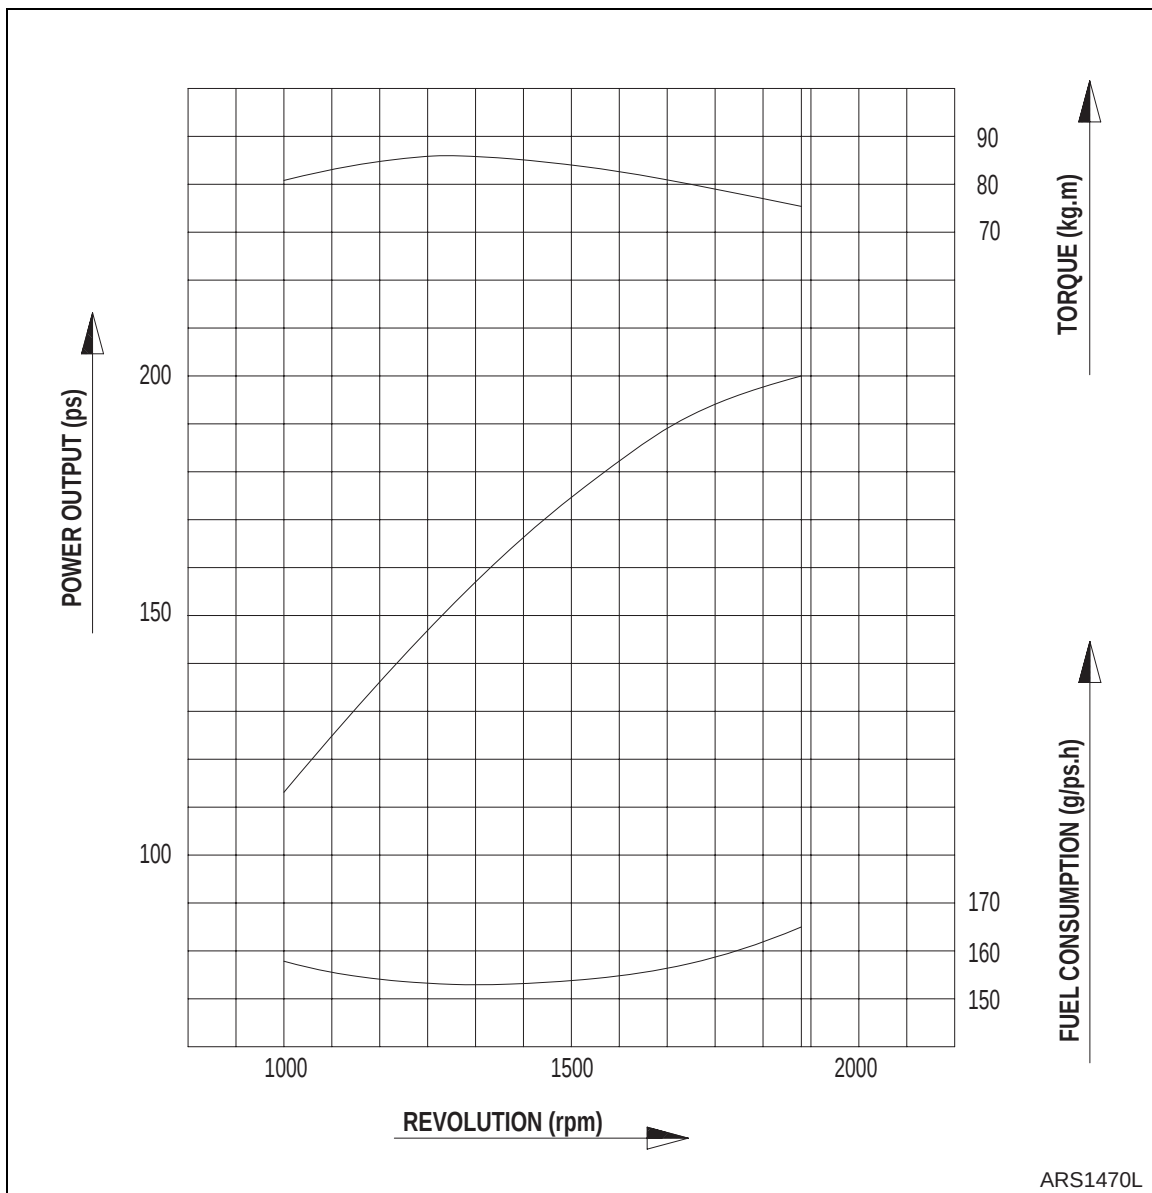


Figure 4

Condition	Specification
Engine Model	DE08TIS
Barometric Pressure	760 mmHg (20°C (68°F))
Cooling Fan	711 mm, SUCKER (28 in)
Alternator	24V x 50A
Air Cleaner	Installed
Muffler	Installed

Performance Standard	DIN 6270
Power	200 ps @ 1,900 rpm (197 hp @ 1,900 rpm)
Max. Torque	86 kg•m @ 1,300 rpm (620 ft lb @ 1,300 rpm)
Fuel Consumption (Rated)	165 g/ps•h (5.82 oz/hp•h)

APPROXIMATE WEIGHT OF WORKLOAD MATERIALS

IMPORTANT

Weights are approximations of estimated average volume and mass. Exposure to rain, snow or ground water; settling or compaction due to overhead weight, chemical or industrial processing or changes due to thermal or chemical transformations could all increase the value of weights listed in the table.

MATERIAL	LOW WEIGHT OR DENSITY 1,100 KG/M ³ (1,850 LB/YD ³), OR LESS	MEDIUM WEIGHT OR DENSITY 1,600 KG/M ³ (2,700 LB/YD ³), OR LESS	HIGH WEIGHT OR DENSITY 2,000 KG/M ³ (3,370 LB/YD ³), OR LESS
Charcoal	401 kg/m ³ (695 lb/yd ³)	-----	-----
Coke, blast furnace size	433 kg/m ³ (729 lb/yd ³)	-----	-----
Coke, foundry size	449 kg/m ³ (756 lb/yd ³)	-----	-----
Coal, bituminous slack, piled	801 kg/m ³ (1,350 lb/yd ³)	-----	-----
Coal, bituminous r. of m., piled	881 kg/m ³ (1,485 lb/yd ³)	-----	-----
Coal, anthracite	897 kg/m ³ (1,512 lb/yd ³)	-----	-----
Clay, DRY, in broken lumps	1,009 kg/m ³ (1,701 lb/yd ³)	-----	-----
Clay, DAMP, natural bed	-----	1,746 kg/m ³ (2,943 lb/yd ³)	-----
Cement, Portland, DRY granular	-----	1,506 kg/m ³ (2,583 lb/yd ³)	-----
Cement, Portland, DRY clinkers	-----	1,362 kg/m ³ (2,295 lb/yd ³)	-----
Dolomite, crushed	-----	1,522 kg/m ³ (2,565 lb/yd ³)	-----
Earth, loamy, DRY, loose	-----	1,202 kg/m ³ (2,025 lb/yd ³)	-----

MATERIAL	LOW WEIGHT OR DENSITY 1,100 KG/M³ (1,850 LB/YD³), OR LESS	MEDIUM WEIGHT OR DENSITY 1,600 KG/M³ (2,700 LB/YD³), OR LESS	HIGH WEIGHT OR DENSITY 2,000 KG/M³ (3,370 LB/YD³), OR LESS
Earth, DRY, packed	-----	1,522 kg/m ³ (2,565 lb/yd ³)	-----
Earth, WET, muddy	-----	-----	1,762 kg/m ³ (2,970 lb/yd ³)
Gypsum, calcined, (heated, powder)	961 kg/m ³ (1,620 lb/yd ³)	-----	-----
Gypsum, crushed to 3 inch size	-----	1,522 kg/m ³ (2,565 lb/yd ³)	-----
Gravel, DRY, packed fragments	-----	-----	1,810 kg/m ³ (3,051 lb/yd ³)
Gravel, WET, packed fragments	-----	-----	1,922 kg/m ³ (3,240 lb/yd ³)
Limestone, graded above 2	-----	1,282 kg/m ³ (2,160 lb/yd ³)	-----
Limestone, graded 1-1/2 or 2	-----	1,362 kg/m ³ (2,295 lb/yd ³)	-----
Limestone, crushed	-----	1,522 kg/m ³ (2,565 lb/yd ³)	-----
Limestone, fine	-----	-----	1,602 kg/m ³ (2,705 lb/yd ³)
Phosphate, rock	-----	1,282 kg/m ³ (2,160 lb/yd ³)	-----
Salt	929 kg/m ³ (1,566 lb/yd ³)	-----	-----
Snow, light density	529 kg/m ³ (891 lb/yd ³)	-----	-----
Sand, DRY, loose	-----	1,522 kg/m ³ (2,565 lb/yd ³)	-----
Sand, WET, packed	-----	-----	1,922 kg/m ³ (3,240 lb/yd ³)

MATERIAL	LOW WEIGHT OR DENSITY 1,100 KG/M³ (1,850 LB/YD³), OR LESS	MEDIUM WEIGHT OR DENSITY 1,600 KG/M³ (2,700 LB/YD³), OR LESS	HIGH WEIGHT OR DENSITY 2,000 KG/M³ (3,370 LB/YD³), OR LESS
Shale, broken	-----	1,362 kg/m ³ (2,295 lb/yd ³)	-----
Sulphur, broken	529 kg/m ³ (1,620 lb/yd ³)	-----	-----

PERFORMANCE TESTS

1. Main Relief Pressure

normal operation: 330 kg/cm³ (4,689 psi)

with "Pressure Up": 350 kg/cm³ (4,970 psi)

2. Actuator Speeds

Operation		Unit	Standard Mode	Power Mode
Boom	Up	sec.	4.2 ±0.4	3.5 ±0.4
	Down	sec.	2.8 ±0.4	2.7 ±0.4
Arm	Dump	sec.	3.1 ±0.4	2.8 ±0.4
	Crowd	sec.	4.5 ±0.4	3.8 ±0.4
Bucket	Dump	sec.	3.1 ±0.4	2.6 ±0.4
	Crowd	sec.	3.8 ±0.4	3.5 ±0.4
Swing (3 Revolutions)		sec.	19.5 ±1.0	16.5 ±1.0
Jack-Up Speed (3 Turns)	High	sec.	24.6 ±1.2	22.0 ±1.2
	Low	sec.	40.2 ±1.9	35.0 ±1.9
Travel Speed 20 m (65.62 ft)	High	sec.	15.9 ±0.9	14.4 ±0.9
	Low	sec.	25.7 ±1.3	22.5 ±1.3
Travel Deviation 20 m (65.62 ft)	High	mm (in)	150 (5.91)	150 (5.91)
	Low	mm (in)	150 (5.91)	150 (5.91)

EXCAVATOR PERFORMANCE STANDARDS

Evaluation of equipment performance and operating condition can be made by running the excavator through a series of different tests, and recording results with a stop watch and tape measure.

Compare results of performance tests against the specifications and standards that follow, which are for equipment in new or renewed condition.

TEST CONDITIONS

1. All tests should be performed on a flat, level, firmly supporting ground surface.
2. All recommended, applicable maintenance and adjustment service should be completed prior to testing.
3. Hydraulic fluid and engine oil should be of appropriate viscosity for ambient weather conditions. Warm up hydraulic oil to standard operating temperature, between 45° - 55°C (112° - 135°F).
4. Run all tests with the engine speed control set to maximum RPM.
5. Repeat tests with Power Mode engine control settings at both Standard Mode (standard work mode) and Power Mode (high speed mode). Travel speed tests should also be repeated at both high and low speed.

TRAVEL SPEED AND TRAVEL MOTOR BALANCE (STEERING DEVIATION) TESTS

Speed Test

Prepare the excavator for travel speed tests by extending all hydraulic cylinders - boom, arm and bucket - to the fully extended position, shown in Figure 5.

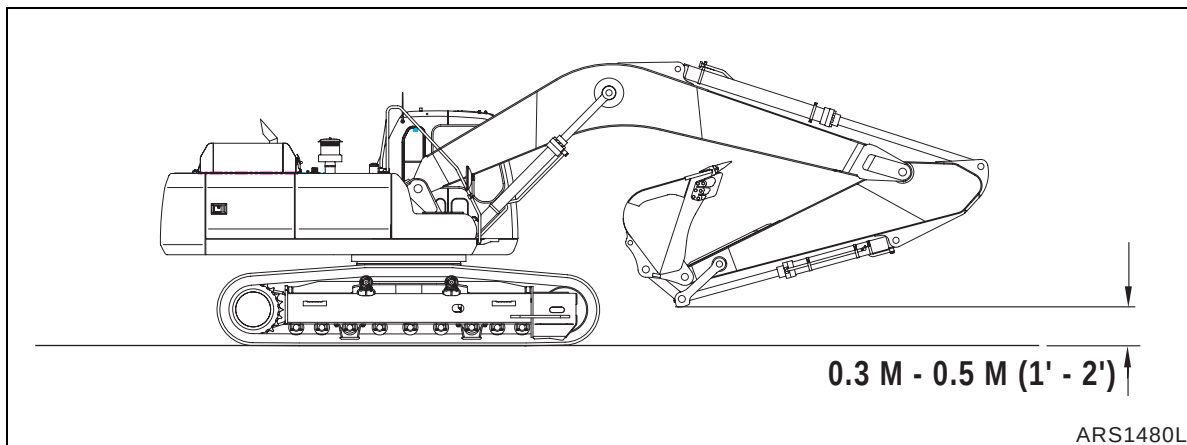


Figure 5

The lowest part of the bucket linkage should be 0.3 - 0.5 m (1' - 2') off the ground.

Mark off a 20 m (65' 7-1/2") test distance, with a 3 - 5 m (10' - 15') run-up area, and a 3 - 5 m (10' - 15', or longer) speed run-off distance.

Travel the excavator back and forth to be sure steering is centered and side frames are perfectly parallel with the test course.

Operate both travel levers at the fully engaged position and measure the time it takes to cross 20 m (65' 7-1/2"). Compare measured results against the standard for new machines:

RATE OF TRAVEL	TIME	
	STANDARD MODE	POWER MODE
High Speed	15.9 ±0.9 seconds	14.4 ±0.9 seconds
Low Speed	25.7 ±1.3 seconds	22.5 ±1.3 seconds

Rotate the turntable 180°. Both tests should be repeated three times. Average all results to obtain a final value.

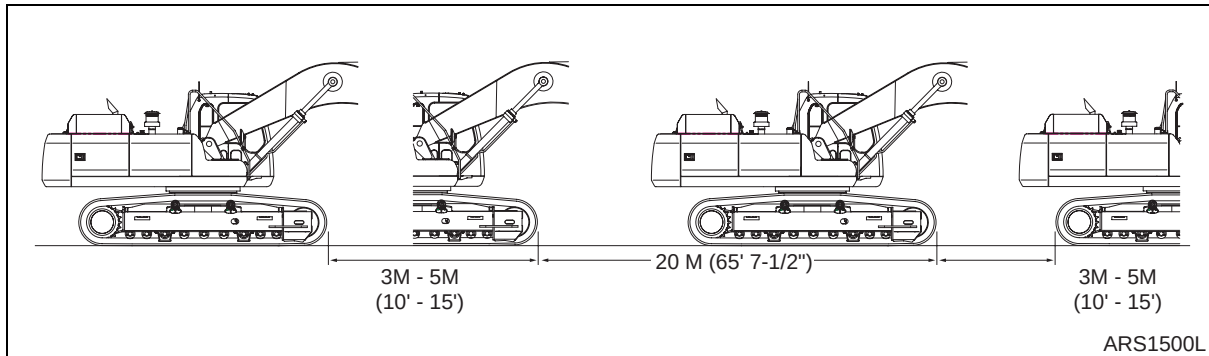


Figure 6

Travel Deviation

To check steering deviation (travel motor balance), use a long tape or rope, or the edge of an undeviating straight road curb or other marker to verify side-to-side travel motor uniformity.

Deviation distance should always be measured at the 20 m (65' 7-1/2'') "finish line." Repeat the test in reverse to measure in both directions, with starting point becoming the finish line, and vice versa. (Figure 6)

A greater amount of deviation is allowed with the travel control set for high speed.

RATE OF TRAVEL	MAX. DISTANCE
High Speed	150 mm (6 in)
Low Speed	150 mm (6 in)

SWING SPEED AND DECELERATION FORCE TEST

Swing Speed Test

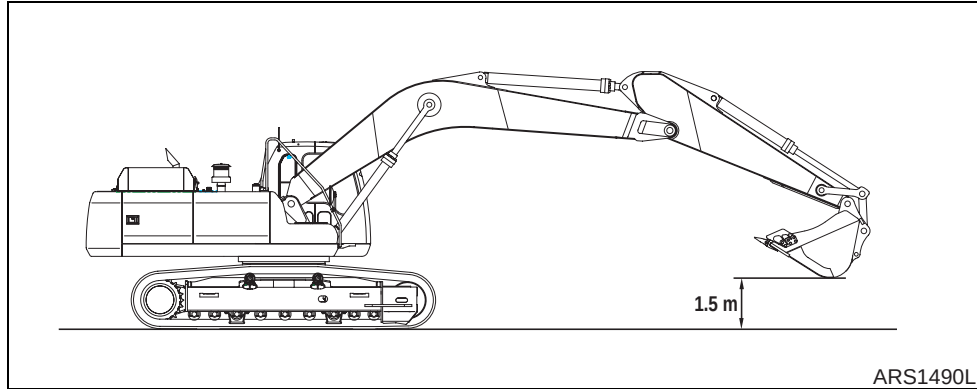


Figure 7

Extend the bucket cylinder completely and retract the arm cylinder, as shown in Figure 7, to test swing speed. The lowest point of the bucket will be approximately 1.5 m (3') off the ground.

Use paint marks at the same point on the turntable and undercarriage, or select alternate measuring locations and use a stopwatch to time 3 full 360° rotations. The time required for 3 revolutions should be between 15.5 and 17.5 seconds in Standard Mode, 15.5 and 17.5 seconds in Power Mode.

Swing Deceleration Force Test

With the boom, arm and bucket in the same position as for the swing speed test, rotate the turntable so that the boom is evenly centered between the side frames, pointing straight ahead. Locate the 90° reference point, perpendicular to the boom. Mark the turntable and undercarriage with paint at the 90° point.

Make several attempts to rotate the turntable exactly 90°, starting from the boom straight ahead position. Engage the swing lever and brake at the 90° point, shown as "swing stop" in Figure 8.

Record how far the turntable drifts past the stop point, measuring the distance between paint marks. Maximum distance should be less than 1200 mm (47-1/4"), in both Power Mode and Standard Mode.

Reference Number	Description
1	Start Swing
2	90° Swing
3	Swing Force
4	Swing Stop

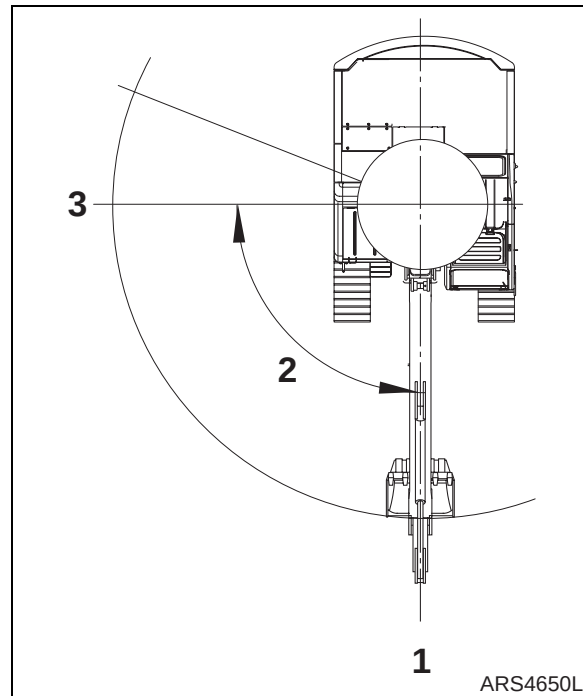


Figure 8

CYLINDER PERFORMANCE TESTS

NOTE: All tests are performed with standard boom, arm and bucket configuration. The bucket should be empty.

Boom Cylinders Test

The starting points for the test are with the boom and arm extended away from the excavator, and the bucket curled inward. The arm cylinder should be fully retracted; boom and bucket cylinders must be extended. Test movement in both directions, several times, and average results for both Standard Mode and Power Mode.

Arm Cylinder Test

Start with the boom up and the arm cylinder fully retracted. Test movement in both directions several times, between the "crowd" and "dump" positions, and average the results of both tests, in both standard and extra-duty power modes.

Bucket Cylinder Test

Start with the boom up and the teeth of the bucket hanging vertically, 500 mm (1-1/2' - 2') above the ground. Dump and crowd the bucket several times, and average results, for both standard and extra-duty power modes.

OPERATION	STANDARD MODE	POWER MODE
Boom Up	3.8 - 4.6 seconds	3.1 - 3.9 seconds
Boom Down	2.4 - 3.2 seconds	2.3 - 3.1 seconds
Arm Dump	2.7 - 3.5 seconds	2.4 - 3.2 seconds
Arm Crowd	4.1 - 4.9 seconds	3.4 - 4.2 seconds
Bucket Dump	2.7 - 3.5 seconds	2.2 - 3.0 seconds
Bucket Crowd	3.4 - 4.2 seconds	3.1 - 3.9 seconds

Hydraulic Cylinder Natural Drop Test

To check boom and arm cylinder tightness against the specified performance standard for new cylinders, put a full load of dirt in the bucket and move the attachment cylinders so that the arm cylinder is extended 20 - 50 mm (1" - 2") and boom cylinders are retracted the same amount, 20 - 50 mm (1" - 2"). The top of the bucket should be approximately 2 m (6' - 7') off the ground.

Turn off the engine and measure cylinder drop after 5 minutes. Bucket cylinder should not show more than 40 mm (1.57") change, while the arm and boom cylinders should not fall more than 10 mm (0.39").

Travel Motor Jack-up Test

Test travel motor operation on each side by painting or chalking a mark on one crawler shoe, with a corresponding mark on the travel frame. Use the attachment to jack up one side of the machine and operate the raised travel motor. Record the number of seconds it takes the crawler shoe to make 3 full rotations, during both high speed and low speed operation.

OPERATION	STANDARD MODE	POWER MODE
High Speed	23.4 - 25.8 seconds	20.8 - 23.2 seconds
Low Speed	38.3 - 42.1 seconds	33.1 - 36.9 seconds

GENERAL MAINTENANCE



GENERAL MAINTENANCE PROCEDURES



CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that is in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

MODEL	SERIAL NUMBER RANGE
ALL MODELS	ALL RANGES

TABLE OF CONTENTS

Welding Precautions and Guidelines	3
Hydraulic System - General Precautions	4
Maintenance Service and Repair Procedure	5
General Precautions	5
Hydraulic System Cleanliness and Oil Leaks.....	6
Maintenance Precautions for Hydraulic System Service	6
Oil Leakage Precautions	6
Cleaning and Inspection.....	7
General Guidelines	7
Bearing inspection	8

WELDING PRECAUTIONS AND GUIDELINES

IMPORTANT

To avoid accidents, personal injury and the possibility of causing damage to the machine or to components, welding must only be performed by properly trained and qualified personnel, who possess the correct certification (when required) for the specific welding fabrication or specialized repair being performed.

WARNING!

Structural elements of the machine may be built from a variety of steels. These could contain unique alloys or may have been heat treated to obtain particular strength characteristics. It is extremely important that welding repairs on these types of steel are performed with the proper procedures and equipment. If repairs are performed incorrectly, structural weakening or other damage to the machine (that is not always readily visible) could be caused. Always consult Daewoo After Sales Service before welding on integral components (loader arm, frames, car body, track frames, turntable, attachment, etc.) of the machine. It is possible that some types of structurally critical repairs may require Magnetic Particle or Liquid Penetrant testing, to make sure there are no hidden cracks or damage, before the machine can be returned to service.

CAUTION!

Always perform welding procedures with the proper safety equipment on hand. Adequate ventilation and a dry work area are absolutely essential. Keep a fire extinguisher nearby and always wear protective clothing and the recommended type of eye protection.



CAUTION!

Observe the following safety precautions:

- 1. Use extra caution and adequate safety shielding when welding near fuel and oil tanks, batteries, hydraulic piping lines or other fire hazards.**
- 2. Never weld when the engine is running. Battery cables must be disconnected before the welding procedure is started.**
- 3. Never weld on a wet or damp surface. The presence of moisture causes hydrogen embrittlement and structural weakening of the weld.**
- 4. If welding procedures are being performed near cylinder rods, operator's cab window areas or any other assemblies that could be damaged by weld spatters, use adequate shielding protection in front of the assembly.**
- 5. During equipment setup, always attach ground cables directly to the area or component being welded to prevent arcing through bearings, bushings, or spacers.**
- 6. Always use correct welding rods for the type of weld being performed and observe recommended precautions and time constraints. AWS Class E7018 welding rods for low alloy to medium carbon steel must be used within two hours after removal from a freshly opened container. Class E11018G welding rods for T-1 and other higher strength steel must be used within 1/2 hour.**

HYDRAULIC SYSTEM - GENERAL PRECAUTIONS

Always maintain oil level in the system at recommended levels. Assemblies that operate under heavy loads, at high speed, with extremely precise dimensional tolerances between moving parts - pistons and cylinders, or shoes and swash plates, for example - can be severely damaged if oil supply runs dry.

Assemblies can be run dry and damaged severely in a very short time when piping or hoses are disconnected to repair leaks and/or replace damaged components. Hoses that are inadvertently switched during disassembly (inlet for outlet and vice versa), air introduced into the system or assemblies that are low on oil due to neglect or careless maintenance, could all produce sufficient fluid loss to cause damage.

When starting the engine (particularly after long layoff or storage intervals), make sure that all hydraulic controls and operating circuits are in neutral, or "OFF." That will prevent pumps or other components that may be temporarily oil-starved from being run under a load.

Replacement of any hydraulic system component could require thorough cleaning, flushing, and some amount of pre-filling with fresh, clean oil if the protective seal on replacement parts has obviously been broken or if seal integrity may have been compromised. When protective seals are removed before installation and reassembly, inspect all replacement parts carefully, before they are installed. If the replacement part is bone dry (with no trace of factory pre-lube) or has been contaminated by dirt or by questionable oils, flushing and pre-filling with clean hydraulic fluid is recommended.

Vibration, irregular or difficult movement or unusual noise from any part of the hydraulic system could be an indication of air in the system (and many other types of problems). As a general precaution (and to help minimize the risk of potential long-term damage), allow the engine to run at no-load idle speed immediately after initial start-up. Hydraulic fluid will circulate, releasing any air that may have been trapped in the system before load demands are imposed.

A daily walk-around pre-start equipment safety inspection, including a quick visual scan for any exterior evidence of leaking hydraulic fluid, can help extend the service life of system components.

IMPORTANT

Hydraulic system operating conditions (repetitive cycling, heavy work loads, fluid circulating under high pressure) make it extremely critical that dust, grit or any other type of contamination be kept out of the system. Observe fluid and filter change maintenance interval recommendations and always pre-clean any exterior surface of the system before it is exposed to air. For example, the reservoir filler cap and neck area, hoses that have to be disassembled, and the covers and external surfaces of filter canisters should all be cleaned before disassembly.

MAINTENANCE SERVICE AND REPAIR PROCEDURE

GENERAL PRECAUTIONS

Fluid level and condition should always be checked whenever any other type of maintenance service or repair is being performed.

NOTE: *If the unit is being used in an extreme temperature environment (in sub-freezing climates or in high temperature, high humidity tropical conditions), frequent purging of moisture condensation from the hydraulic reservoir drain tap should be a regular and frequent part of the operating routine. In more moderate, temperate climates, draining reservoir sediment and moisture may not be required more than once or twice every few months.*

Inspect drained oil and used filters for signs of abnormal coloring or visible fluid contamination at every oil change. Abrasive grit or dust particles will cause discoloration and darkening of the fluid. Visible accumulations of dirt or grit could be an indication that filter elements are overloaded (and will require more frequent replacement) or that disintegrating bearings or other component failures in the hydraulic circuit may be imminent or have already occurred. Open the drain plugs on the main pump casings and check and compare drain oil in the pumps. Look for evidence of grit or metallic particles.

Vibration or unusual noise during operation could be an indication of air leaking into the circuit (Refer to the appropriate Troubleshooting section for component or unit for procedures.), or it may be evidence of a defective pump. The gear-type pilot pump could be defective, causing low pilot pressure, or a main pump broken shoe or piston could be responsible.

NOTE: *If equipped, indicated operating pressure, as shown on the multidisplay digital gauge on the Instrument Panel ("F-Pump" and "R-Pump") will be reduced as a result of a mechanical problem inside the pump. However, pressure loss could also be due to cavitation or air leakage, or other faults in the hydraulic system.*

Check the exterior case drain oil in the main pumps. If no metallic particles are found, make sure there is no air in the system. Unbolt and remove the tank return drain line from the top part of the swing motor, both travel motors and each main pump. If there is air in any one of the drain lines, carefully pre-fill the assembly before bolting together the drain line piping connections. Run the system at low rpm.

HYDRAULIC SYSTEM CLEANLINESS AND OIL LEAKS

MAINTENANCE PRECAUTIONS FOR HYDRAULIC SYSTEM SERVICE

Whenever maintenance, repairs or any other type of troubleshooting or service is being performed, it's important to remember that the hydraulic system - including both the interior and exterior surfaces of assemblies, and every drop of operating fluid - must be protected from contamination.

Dust and other foreign contaminants are major contributors to premature wear in hydraulic circuits. The narrow tolerances, rapidly moving parts and high operating pressures of the system require that fluid be kept as clean as possible. The performance and dependability of the machine (and the service life of individual components) can be noticeably reduced if proper precautions are not observed:

- Use a safe, non-combustible, evaporative-type, low-residue solvent and thoroughly clean exterior surfaces of assemblies before any part of the circuit is opened up or disassembled.

NOTE: *It's just as important to clean the cap and reservoir top before routine fluid changes or quick checks as it is before major repairs. (Accumulated dirt attracts moisture, oil and other fluids - and more dirt.)*

- Keep dismantled parts covered during disassembly. Use clean caps, plugs or tape to protect the disconnected openings of flanges, manifolds and piping.
- Do not allow cleaning solvents or other fluids to mix with the oil in the system. Use clean oil to flush any traces of solvent or other residue before reassembly.
- If metal or rubber fragments are found in the system, flush and replace all fluid in the system and troubleshoot the circuit to identify the source of contamination.

IMPORTANT

Make sure that cleaning solvents will be compatible with rubber materials used in the hydraulic system. Many petroleum based compounds can cause swelling, softening, or other deterioration of system sealing elements, such as O-rings, caps and other seals.

OIL LEAKAGE PRECAUTIONS

Oil that is visibly seeping from joints or seals should always serve as a "red flag" alarm.

Leaks must alert the machine operator and maintenance crew that air, water and dirt have an open, free passageway through which to enter the circuit. Harsh, corrosive salt air, freezing and thawing condensation cycles and working environments that are full of fine dust are especially hazardous. Clogging of valve spools or external piping (especially pilot circuit piping) can gradually diminish or very suddenly put a complete stop to normal hydraulic function. You can prevent having to make these types of repairs by following recommended assembly procedures:

1. Use new O-rings and oil seals whenever hydraulic assemblies are rebuilt.
2. Prepare joint surfaces before assembly by checking alignment and flatness. Clean and repair corrosion or any other damage.
3. Follow bolt torque recommendations and all other assembly requirements.

NOTE: Grease lip seals before assembly.

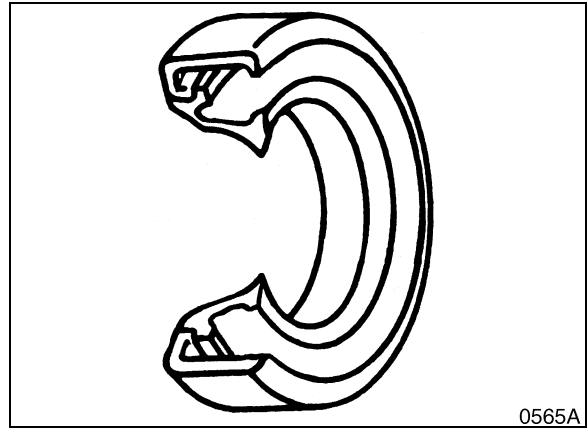


Figure 1

CLEANING AND INSPECTION

GENERAL GUIDELINES

All parts must be clean to permit an effective inspection. During assembly, it is very important that no dirt or foreign material enters unit being assembled. Even minute particles can cause malfunction of close fitting parts such as thrust bearing, matched parts, etc.



WARNING!

Care should be exercised to avoid inhalation of vapors, exposure to skin and creating fire hazards when using solvent type cleaners.

1. Clean all metal parts thoroughly using a suitable cleaning fluid. It is recommended that parts be immersed in cleaning fluid and moved up and down slowly until all oils, lubricants, and/or foreign materials are dissolved and parts are thoroughly clean.
2. For bearings that can be removed, soak them in a suitable cleaning fluid for a minute or two, then remove bearings from cleaning fluid and strike flat against a block of wood to dislodge solidified particles of lubricant. Immerse again in cleaning fluid to flush out particles. Repeat above operation until bearings are thoroughly clean. To dry bearings, use moisture-free compressed air. Be careful to direct air stream across bearing to avoid spinning bearings that are not lubricated. DO NOT SPIN BEARINGS WHEN DRYING; bearings may be rotated slowly by hand to facilitate drying process.
3. Carefully inspect all bearing rollers, cages and cups for wear, chipping or nicks to determine condition. Do not replace a bearing cone or cup individually without replacing mating cup or cone at the same time. After inspection, dip bearings in light weight oil and wrap in clean lintless cloth or paper to protect them until installation.

For those bearings that are to be inspected in place; inspect bearings for roughness of rotation, scoring, pitting, cracked or chipped races. If any of these defects are found, replace bearings. Also inspect defective bearing housing and/or shaft for grooved, galled or burred conditions that indicate bearing has been turning in its housing or on its shaft.

4. It is more economical to replace oil seals, O-rings, sealing rings, gaskets and snap rings when unit is disassembled than waiting for premature failures; refer to latest Micro Fiche and/or Parts Book for replacement items. Be extremely careful when installing sealing members, to avoid cutting or

scratching. Curling under of any seal lip will seriously impair its efficiency. Apply a thin coat of Loctite #120 to outer diameter, of metal casing, on oil seals to assure an oil tight fit into retainer. Use extreme care not to get Loctite on lips of oil seals. If this happens, that portion of the seal will become brittle and allow leakage.

When replacing lip type seals, make sure spring loaded side is towards oil to be sealed.

5. If available, use magna-flux or similar process for checking for cracks that are not visible to the eye. Examine teeth on all gears carefully for wear, pitting, chipping, nicks, cracks or scores. Replace all gears showing cracks or spots where case hardening has worn through. Small nicks may be removed with suitable hone. Inspect shafts and quills to make certain they have not been sprung, bent, or splines twisted, and that shafts are true.

NOTE: *Spline wear is not considered detrimental except where it affects tightness of splined parts.*

Inspect thrust washers for distortion, scores, burs, and wear. Replace thrust washer if defective or worn.

6. Inspect bores and bearing surfaces of cast parts and machined surfaces for scratches, wear, grooves and dirt. Remove any scratches and burrs with crocus cloth. Remove foreign material. Replace any parts that are deeply grooved or scratched which would affect their operation.

BEARING INSPECTION

The conditions of the bearing are vital to the smooth and efficient operation of the machinery. When any component containing bearings is disassembled, always carefully examine the condition of the bearings and all of its components for wear and damage.

Once the bearing is removed, clean all parts thoroughly using a suitable cleaning solution. If the bearing is excessively dirty soak the bearing assembly in a light solution and move the bearing around until all lubricants and or foreign materials are dissolved and the parts are thoroughly clean.

When drying bearings, moisture free compressed air can be used. Be careful not to direct the air in a direction which will force the bearing to dry spin while not being properly lubricated.

After the bearings have been cleaned and dried, carefully inspect all bearing rollers, cages and cups for wear, chipping or nicks. If the bearing cannot be removed and is to be inspected in place, check for roughness of rotation, scoring, pitting, cracked or chipped races. If any of these defects are found replace the whole bearing assembly. NEVER replace the bearing alone without replacing the mating cup or the cone at the same time.

After inspection lightly coat the bearing and related parts with oil and wrap in a clean lintless cloth or paper and protect them from moisture and other foreign materials until installation.

It is also important to inspect the bearing housing and/or shaft for grooved, galled or burred conditions that indicate that the bearing has been turning in its housing or on its shaft.

If available, use magna-flux or similar process for checking for cracks that are not visible to the naked eye.

The following illustrations will aid in identifying and diagnosing some of the bearing related problems.

NOTE: *The illustrations will only show tapered roller bearings, but the principles of identifying, diagnosing and remedying the defects are common to all styles and types of bearings.*

Normal Bearing

Smooth even surfaces with no discoloration or marks.

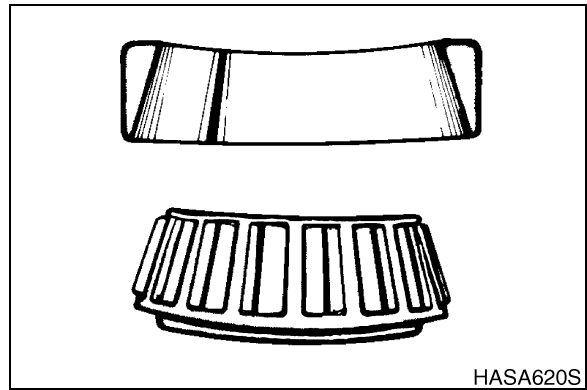


Figure 2

Bent Cage

Cage damage due to improper handling or tool usage.

Replace bearing.

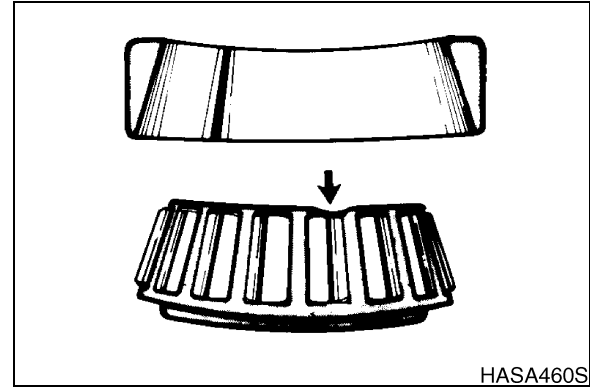


Figure 3

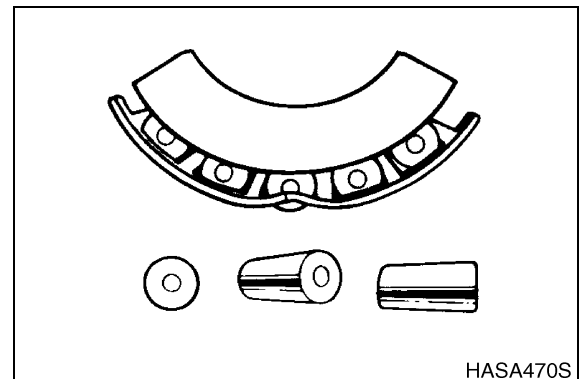


Figure 4

Galling

Metal smears on roller ends due to overheating, lubricant failure or overload.

Replace bearing - check seals and check for proper lubrication.

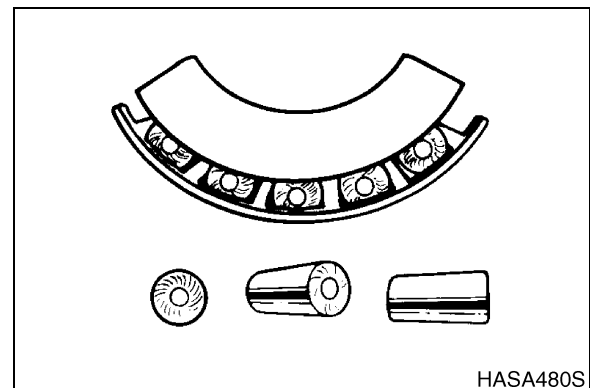
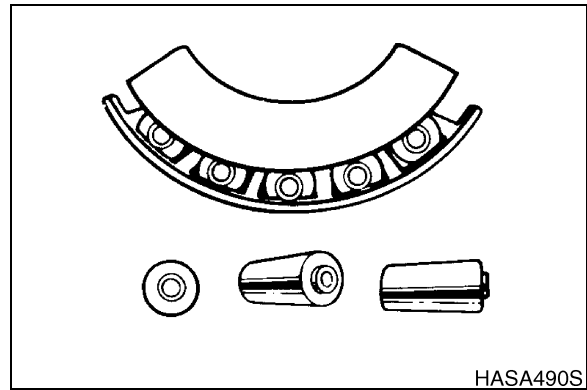


Figure 5

Abrasive Step Wear

Pattern on roller ends caused by fine abrasives.

Clean all parts and housings, check all parts and housings, check seals and bearings and replace if leaking, rough or noisy.



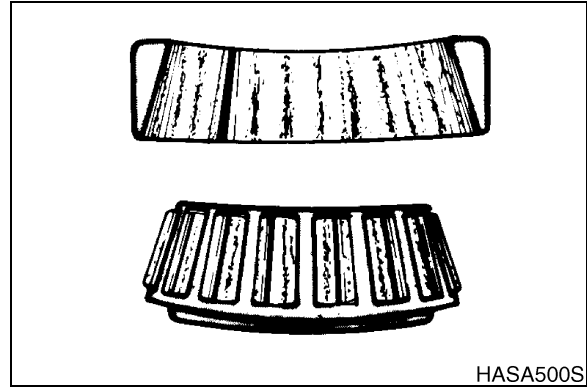
HASA490S

Figure 6

Etching

Bearing surfaces appear gray or grayish black in color with related etching away of material usually at roller spacing.

Replace bearings - check seals and check for proper lubrication.



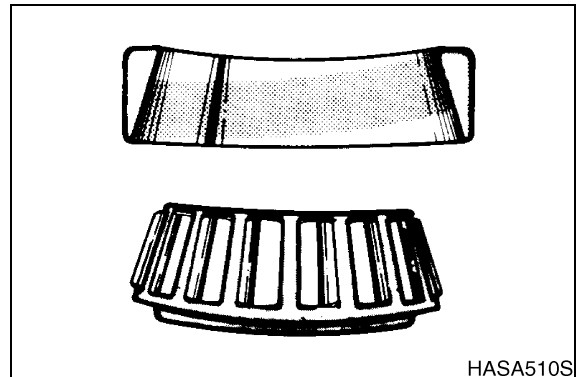
HASA500S

Figure 7

Misalignment

Outer race misalignment due to foreign object.

Clean related parts and replace bearing. Make sure races are properly seated.



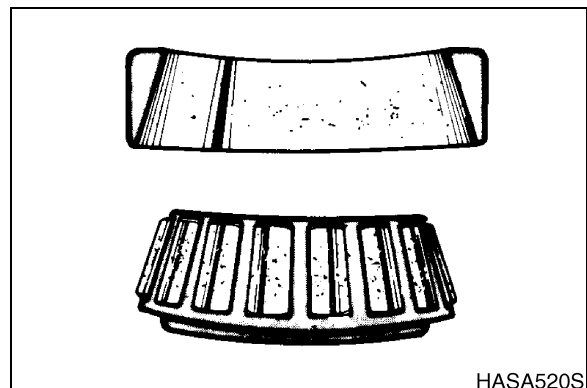
HASA510S

Figure 8

Indentations

Surface depressions on race and rollers caused by hard particles of foreign materials.

Clean all parts and housings, check seals and replace bearings if rough or noisy.



HASA520S

Figure 9

Fatigue Spalling

Flaking of surface metal resulting from fatigue.

Replace bearing - clean all related parts.

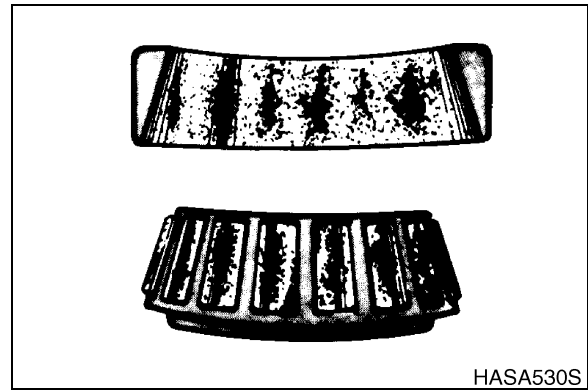


Figure 10

Brinelling

Surface indentations in raceway caused by rollers either under impact loading or vibration while the bearing is not rotating.

Replace bearing if rough or noisy.

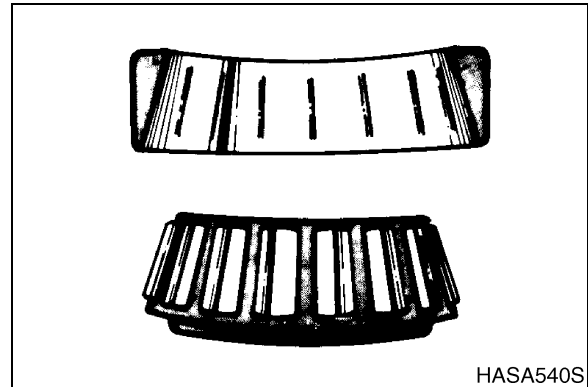


Figure 11

Cage Wear

Wear around outside diameter of cage and roller pockets caused by abrasive material and inefficient lubrication.

Replace bearings - check seals.

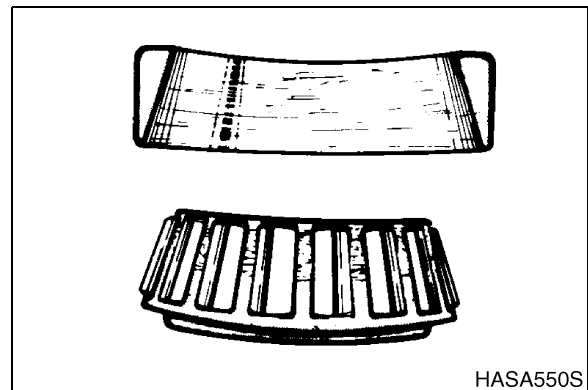


Figure 12

Abrasive Roller Wear

Pattern on races and rollers caused by fine abrasives.

Clean all parts and housings, check seals and bearings and replace if leaking, rough or noisy.

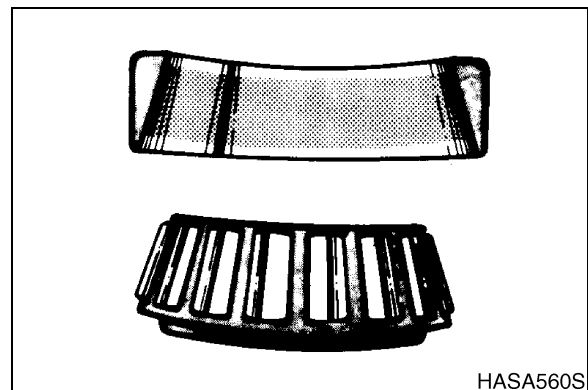


Figure 13

Cracked Inner Race

Race cracked due to improper fit, cocking or poor bearing seat.

Replace all parts and housings, check seals and bearings and replace if leaking.

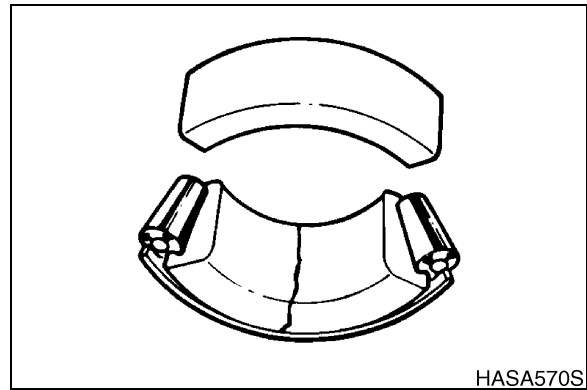


Figure 14

Smears

Smearing of metal due to slippage caused by poor fitting, lubrication, overheating, overloads or handling damage.

Replace bearings, clean related parts and check for proper fit and lubrication.

Replace shaft if damaged.

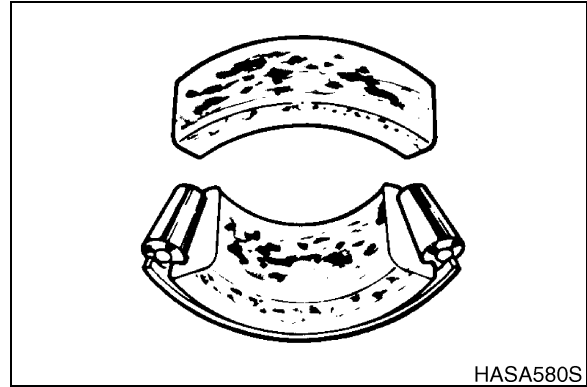


Figure 15

Fretting

Corrosion set up by small relative movement of parts with no lubrication.

Replace bearing. Clean all related parts. Check seals and check for proper lubrication.

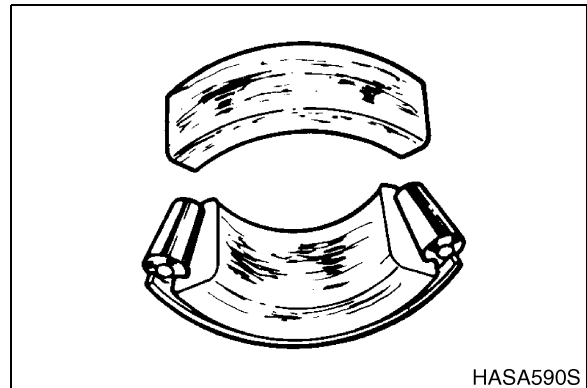


Figure 16

Heat Discoloration

Heat discoloration can range from faint yellow to dark blue resulting from overload or incorrect lubrication.

Excessive heat can cause softening of races or rollers.

To check for loss of temper on races or rollers, a simple file test may be made. A file drawn over a tempered part will grab and cut metal, whereas a file drawn over a hard part will glide readily with no metal cutting.

Replace bearing if over heating damage is indicated. Check seals and other related parts for damage.

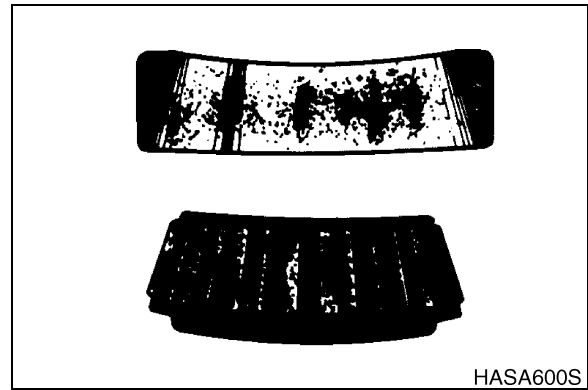


Figure 17

Stain Discoloration

Discoloration can range from light brown to black caused by incorrect lubrication or moisture.

if the stain can be removed by light polishing or if no evidence of overheating is visible, the bearing can be reused.

Check seals and other related parts for damage.

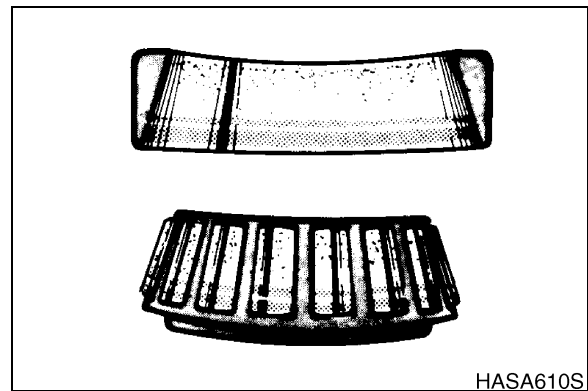


Figure 18



STANDARD TORQUES



CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that is in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

MODEL	SERIAL NUMBER RANGE
ALL MODELS	ALL RANGES

TABLE OF CONTENTS

Torque Values for Standard Metric Fasteners	3
Torque Values for Standard U.S. Fasteners.....	4
Type 8 Phosphate Coated Hardware	6
Torque Values for Hose Clamps	7
Torque Values for Split Flanges.....	8
Torque Wrench Extension Tools	9
Torque Multiplication	9
Other Uses for Torque Wrench Extension Tools	10
Tightening Torque Specifications (Metric)	10

TORQUE VALUES FOR STANDARD METRIC FASTENERS

NOTE: The units for the torque values are kg•m (ft lb).

Dia. x Pitch (mm)	Grade										
	3.6 (4A)	4.6 (4D)	4.8 (4S)	5.6 (5D)	5.8 (5S)	6.6 (6D)	6.8 (6S)	6.9 (6G)	8.8 (8G)	10.9 (10K)	12.9 (12K)
M5 x Std.	0.15 (1.08)	0.16 (1.15)	0.25 (1.80)	0.22 (1.59)	0.31 (2.24)	0.28 (2.02)	0.43 (3.11)	0.48 (3.47)	0.50 (3.61)	0.75 (5.42)	0.90 (6.50)
M6 x Std.	0.28 (2.02)	0.30 (2.16)	0.45 (3.25)	0.40 (2.89)	0.55 (3.97)	0.47 (3.39)	0.77 (5.56)	0.85 (6.14)	0.90 (6.50)	1.25 (9.04)	1.50 (10.84)
M7 x Std.	0.43 (3.11)	0.46 (3.32)	0.70 (5.06)	0.63 (4.55)	0.83 (6.00)	0.78 (5.64)	1.20 (8.67)	1.30 (9.40)	1.40 (10.12)	1.95 (14.10)	2.35 (16.99)
M8 x Std.	0.70 (5.06)	0.75 (5.42)	1.10 (7.95)	1.00 (7.23)	1.40 (10.12)	1.25 (9.04)	1.90 (13.74)	2.10 (15.18)	2.20 (15.91)	3.10 (22.42)	3.80 (27.48)
M8 x 1	0.73 (5.28)	0.80 (5.78)	1.20 (8.67)	1.00 (7.23)	1.50 (10.84)	1.35 (9.76)	2.10 (15.18)	2.30 (16.63)	2.40 (17.35)	3.35 (24.23)	4.10 (29.65)
M10 x Std.	1.35 (9.76)	1.40 (10.12)	2.20 (15.91)	1.90 (13.74)	2.70 (19.52)	2.35 (19.99)	3.70 (26.76)	4.20 (30.37)	4.40 (31.18)	6.20 (44.84)	7.20 (52.07)
M10 x 1	1.50 (10.84)	1.60 (11.57)	2.50 (18.08)	2.10 (15.18)	3.10 (22.42)	2.80 (20.25)	4.30 (31.10)	4.90 (35.44)	5.00 (36.16)	7.00 (50.63)	8.40 (60.75)
M12 x Std.	2.40 (17.35)	2.50 (18.08)	3.70 (26.76)	3.30 (23.86)	4.70 (33.99)	4.20 (30.37)	6.30 (45.56)	7.20 (52.07)	7.50 (54.24)	10.50 (75.94)	12.50 (90.41)
M12 x 1.5	2.55 (18.44)	2.70 (19.52)	4.00 (28.93)	3.50 (25.31)	5.00 (36.16)	4.50 (32.54)	6.80 (49.18)	7.70 (55.69)	8.00 (57.86)	11.20 (81.00)	13.40 (96.92)
M14 x Std.	3.70 (26.76)	3.90 (28.20)	6.00 (43.23)	5.20 (37.61)	7.50 (54.24)	7.00 (50.63)	10.00 (72.33)	11.50 (83.17)	12.00 (86.79)	17.00 (122.96)	20.00 (144.66)
M14 x 1.5	4.10 (29.65)	4.30 (31.10)	6.60 (47.73)	5.70 (41.22)	8.30 (60.03)	7.50 (54.24)	11.10 (80.28)	12.50 (90.41)	13.00 (94.02)	18.50 (11.26)	22.00 (158.12)
M16 x Std.	5.60 (40.50)	6.00 (43.39)	9.00 (65.09)	8.00 (57.86)	11.50 (83.17)	10.50 (75.94)	15.50 (112.11)	17.90 (129.47)	18.50 (133.81)	26.00 (188.05)	31.00 (224.22)
M16 x 1.5	6.20 (44.84)	6.50 (47.01)	9.70 (70.16)	8.60 (62.20)	12.50 (90.41)	11.30 (81.73)	17.00 (122.96)	19.50 (141.04)	20.00 (144.66)	28.00 (202.52)	35.50 (256.77)
M18 x Std.	7.80 (56.41)	8.30 (60.03)	12.50 (90.41)	11.00 (79.56)	16.00 (115.72)	14.50 (104.87)	21.00 (151.89)	27.50 (198.90)	28.50 (206.14)	41.00 (296.55)	43.00 (311.01)
M18 x 1.5	9.10 (65.82)	9.50 (68.71)	14.40 (104.15)	12.50 (90.41)	18.50 (133.81)	16.70 (120.79)	24.50 (177.20)	27.50 (198.90)	28.50 (206.14)	41.00 (296.55)	49.00 (354.41)
M20 x Std.	11.50 (83.17)	12.00 (86.79)	18.00 (130.19)	16.00 (115.72)	22.00 (159.12)	19.00 (137.42)	31.50 (227.83)	35.00 (253.15)	36.00 (260.38)	51.00 (368.88)	60.00 (433.98)
M20 x 1.5	12.80 (92.58)	13.50 (97.64)	20.50 (148.27)	18.00 (130.19)	25.00 (180.82)	22.50 (162.74)	35.00 (253.15)	39.50 (285.70)	41.00 (296.55)	58.00 (419.51)	68.00 (491.84)
M22 x Std.	15.50 (112.11)	16.00 (115.72)	24.50 (177.20)	21.00 (151.89)	30.00 (216.99)	26.00 (188.05)	42.00 (303.78)	46.00 (332.71)	49.00 (354.41)	67.00 (484.61)	75.00 (542.47)
M22 x 1.5	17.00 (122.96)	18.50 (133.81)	28.00 (202.52)	24.00 (173.59)	34.00 (245.92)	29.00 (209.75)	47.00 (339.95)	52.00 (44.76)	56.00 (405.04)	75.00 (542.47)	85.00 (614.80)
M24 x Std.	20.50 (148.27)	21.50 (155.50)	33.00 (238.68)	27.00 (195.29)	40.00 (289.32)	34.00 (245.92)	55.00 (397.81)	58.00 (419.51)	63.00 (455.67)	82.00 (593.10)	92.00 (655.43)
M24 x 1.5	23.00 (166.35)	35.00 (253.15)	37.00 (267.62)	31.00 (224.22)	45.00 (325.48)	38.00 (202.52)	61.00 (441.21)	67.00 (484.61)	74.00 (535.24)	93.00 (672.66)	103.00 (744.99)

TORQUE VALUES FOR STANDARD U.S. FASTENERS

TYPE	S.A.E. GRADE	DESCRIPTION	BOLT HEAD MARKING
1	1 OR 2	WILL HAVE NO MARKINGS IN THE CENTER OF THE HEAD. Low or Medium Carbon Steel Not Heat Treated.	
5	5	WILL HAVE THREE RADIAL LINES. Quenched and Tempered Medium Carbon Steel.	
8	8	WILL HAVE 6 RADIAL LINES. Quenched and Tempered Special Carbon or Alloy Steel.	

Recommended torque, in foot pounds, for all Standard Application Nuts and Bolts, provided:

1. All thread surfaces are clean and lubricated with SAE-30 engine oil. (See Note.)
2. Joints are rigid, that is, no gaskets or compressible materials are used.
3. When reusing nuts or bolts, use minimum torque values.

NOTE: *Multiply the standard torque by:*

0.65 when finished jam nuts are used.

0.70 when Molykote, white lead or similar mixtures are used as lubricants.

0.75 when parkerized bolts or nuts are used.

0.85 when cadmium plated bolts or nuts and zinc bolts w/waxed zinc nuts are used.

0.90 when hardened surfaces are used under the nut or bolt head.

NOTE: *When reusing bolts and nuts in service, use minimum torque values.*

The following General Torque Values must be used in all cases where **SPECIAL TORQUE VALUES** are not given

NOTE: TORQUE VALUES LISTED THROUGHOUT THIS MANUAL ARE LUBRICATED (WET) THREADS; VALUES SHOULD BE INCREASED 1/3 FOR NON-LUBRICATED (DRY) THREADS.				
THREAD SIZE	HEAT TREATED MATERIAL GRADE 5 AND GRADE 8			
	GRADE 5 (3 RADIAL DASHES ON HEAD)		GRADE 8 (6 RADIAL DASHES ON HEAD)	
	FOOT POUNDS (ft lb)	NEWTON METER (Nm)	FOOT POUNDS (ft lb)	NEWTON METER (Nm)
1/4" - 20	6	8	9	12
1/4" - 28	7	9	11	15
5/16" - 18	13	18	18	24
5/16" - 24	15	20	21	28
3/8" - 16	24	33	34	46
3/8" - 24	27	37	38	52
7/16" - 14	38	52	54	73
7/16" - 20	42	57	60	81
1/2" - 13	58	79	82	111
1/2" - 20	65	88	90	122
9/16" - 12	84	114	120	163
9/16" - 18	93	126	132	179
5/8" - 11	115	156	165	224
5/8" - 18	130	176	185	251
3/4" - 10	205	278	290	393
3/4" - 16	240	312	320	434
7/8" - 9	305	414	455	617
7/8" - 14	334	454	515	698
1" - 8	455	617	695	942
1" - 14	510	691	785	1064
1 1/8" - 7	610	827	990	1342
1 1/8" - 12	685	929	1110	1505
1 1/4" - 7	860	1166	1400	1898
1 1/4" - 12	955	1295	1550	2102
1 3/8" - 6	1130	1532	1830	2481
1 3/8" - 12	1290	1749	2085	2827
1 1/2" - 6	1400	2034	2430	3295
1 1/2" - 12	1690	2291	2730	3701
1 3/4" - 5	2370	3213	3810	5166
2" - 4 1/2	3550	4813	5760	7810

NOTE: If any bolts and nuts are found loose or at values less than what the chart states, it is recommended that the loose bolt and/or nut be replaced with a new one.

TYPE 8 PHOSPHATE COATED HARDWARE

This chart provides tightening torque for general purpose applications using original equipment standard hardware as listed in the Parts Manual for the machine involved. **DO NOT SUBSTITUTE.** In most cases, original equipment standard hardware is defined as Type 8, coarse thread bolts and nuts and thru hardened flat washers (Rockwell "C" 38 - 45), all phosphate coated and assembled without supplemental lubrication (as received) condition.

The torques shown below also apply to the following:

1. Phosphate coated bolts used in tapped holes in steel or gray iron.
2. Phosphate coated bolts used with phosphate coated prevailing torque nuts (nuts with distorted threads or plastic inserts).
3. Phosphate coated bolts used with copper plated weld nuts.

Markings on bolt heads or nuts indicate material grade ONLY and are NOT to be used to determine required torque.

NOMINAL THREAD DIAMETER	STANDARD TORQUE $\pm 10\%$	
	KILOGRAM METER (kg•m)	FOOT POUNDS (ft lb)
1/4"	1.1	8
5/16"	2.2	16
3/8"	3.9	28
7/16"	6.2	45
1/2"	9.7	70
9/16"	13.8	100
5/8"	19.4	140
3/4"	33.2	240
7/8"	53.9	390
1"	80.2	580
1 - 1/8"	113.4	820
1 - 1/4"	160.4	1160
1 - 3/8"	210.2	1520
1 - 1/2"	279.4	2020
1 - 3/4"	347.1	2510
2	522.8	3780

TORQUE VALUES FOR HOSE CLAMPS

The following chart provides the tightening torques for hose clamps used in all rubber applications (radiator, air cleaner, operating lever boots, hydraulic system, etc.).

CLAMP TYPE AND SIZE	TORQUE			
	RADIATOR, AIR CLEANER, BOOTS, ETC.		HYDRAULIC SYSTEM	
	KILOGRAM METER (kg•m)	INCH POUNDS (in lb)	KILOGRAM METER (kg•m)	INCH POUNDS (in lb)
"T" Bolt (Any Diameter)	0.68 - 0.72	59 - 63	-----	-----
Worm Drive - Under 44 mm (1-3/4 in) Open Diameter	0.2 - 0.3	20 - 30	0.5 - 0.6	40 - 50
Worm Drive - Over 44 mm (1-3/4 in) Open Diameter	0.5 - 0.6	40 - 50	-----	-----
Worm Drive - All "Ultra- Tite"	0.6 - 0.7	50 - 60	0.5 - 0.6	40 - 50

TORQUE VALUES FOR SPLIT FLANGES

The following chart provides the tightening torques for split flange connections used in hydraulic systems. Split flanges and fitting shoulders should fit squarely. Install all bolts, finger tight and then torque evenly.

NOTE: *Over torquing bolts will damage the flanges and/or bolts, which may cause leakage.*

FLANGE SIZE (*)	BOLT SIZE	BOLT TORQUE	
		KILOGRAM METER (kg•m)	FOOT POUNDS (ft lb)
1/2"	5/16"	2.1 - 2.5	15 - 18
3/4"	3/8"	3.0 - 3.7	22 - 27
1"	3/8"	3.7 - 4.8	27 - 35
1 - 1/4"	7/16"	4.8 - 6.2	35 - 45
1 - 1/2"	1/2"	6.4 - 8.0	46 - 58
2"	1/2"	7.6 - 9.0	55 - 65
2 - 1/2"	1/2"	10.9 - 12.6	79 - 91
3"	5/8"	19.1 - 20.7	138 - 150
3 - 1/2"	5/8"	16.2 - 18.4	117 - 133

(*) - Inside diameter of flange on end of hydraulic tube or hose fitting.

NOTE: *Values stated in chart are for Standard Pressure Series (Code 61) Split Flanges.*

TORQUE WRENCH EXTENSION TOOLS

Very large diameter, high grade fasteners (nuts, bolts, cap screws, etc.) require a great deal of turning force to achieve recommended tightening torque values.

Common problems that could occur as a result are:

- Recommended torque exceeds the measuring capacity of the torque wrench.
- Specialized sockets do not fit the adapter on the front end (nose) of the torque wrench.
- Generating adequate force on the back end (handle) of the wrench is difficult or impossible.
- Restricted access or an obstruction may make use of the torque wrench impossible.
- A unique application requires fabrication of an adapter or other special extension.

Most standard torque wrenches can be adapted to suit any one of the proceeding needs or situations, if the right extension tool is used or fabricated.

TORQUE MULTIPLICATION

A wrench extension tool can be used to increase the tightening force on a high capacity nut or bolt.

For example, doubling the distance between the bolt and the back (handle) end of the torque wrench doubles the tightening force on the bolt. It also halves the indicated reading on the scale or dial of the torque wrench. To accurately adjust or convert indicated scale or dial readings, use the following formula:

$I = A \times T / A + B$ where:

I = Indicated force shown on the torque wrench scale or dial.

T = Tightening force applied to the nut or bolt (actual Torque).

A = Length of the torque wrench (between the center of the nut or bolt and the center of the handle).

B = Length of the extension.

As an example, if a 12" extension is added to a 12" torque wrench, and the indicated torque on the dial reads "150 ft lb," the real force applied to the bolt is 300 ft lb:

$$I = \frac{A \times T}{A + B} = \frac{12 \times 300}{12 + 12} = \frac{3600}{24} = 150$$

NOTE: The formula assumes that there is no added deflection or "give" in the joint between the extension and torque wrench. Readings may also be inaccurate:

- If the extension itself absorbs some of the tightening force and starts to bend or bow out.
- If an extension has to be fabricated that is not perfectly straight (for example, an extension made to go around an obstruction, to allow access to a difficult to tighten fastener), the materials and methods used must be solid enough to transmit full tightening torque.

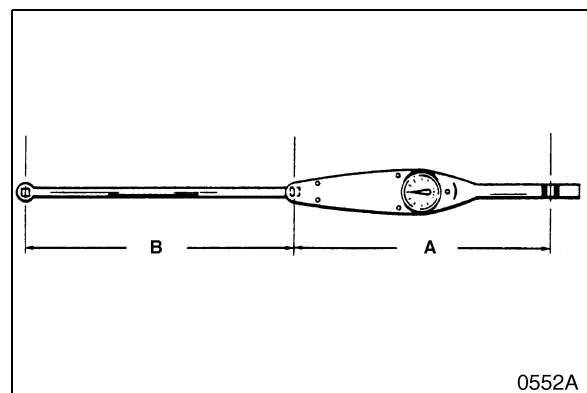


Figure 1

OTHER USES FOR TORQUE WRENCH EXTENSION TOOLS

Torque wrench extensions are sometimes made up for reasons other than increasing leverage on a fastener.

For example, a torque wrench and extension can be used to measure adjustment "tightness" of a linkage or assembly. Specially fabricated extensions can be used to make very precise checks of the force required to engage or disengage a clutch mechanism, release a spring-applied brake assembly, or "take up" free play in most any movable linkage.

Once the value of the adjustment force is established, repeated checks at regular intervals can help to monitor and maintain peak operating efficiency. These types of adjustment checks are especially useful if physical measurements of linkage travel are difficult to make or will not provide the needed degree of precision and accuracy.

To allow the assembly or mechanism to accept a torque wrench, welding a nut or other adapter on the end of a linkage shaft or other leverage point will allow turning the shaft or assembly manually.

TIGHTENING TORQUE SPECIFICATIONS (METRIC)

(For coated threads, prelubricated assemblies.)



CAUTION!

Disassembly, overhaul and replacement of components on the machine, installation of new or replacement parts and/or other service-related maintenance may require the use of thread or flange sealing assembly compound.

Use the information on this page as a general guide in selecting specific formulas that will meet the particular requirements of individual assembly installations. Daewoo does not specifically endorse a specific manufacturer or brand name but the following table of "Loctite" applications is included for which cross-references to other makers' products should also be widely available.

IMPORTANT

Use primer "T" or "N" for all cold weather assembly of fastener adhesives, with Thread locker sealers 222, 242/243, 262, 271, 272, or 277.

I. "Loctite" Fastener Adhesives

Product	Application	Color	Removal	Break-away Cure Strength (in lb) of Sealer Alone
222	Low strength for 6 mm (1/4") or smaller fasteners.	Purple	Hand tools	45
242 or 243	Medium strength for 6 mm (1/4") and larger fasteners.	Blue	Hand tools	80
262	High strength for high grade fasteners subject to shock, stress and vibration.	Red	Heat/260°C (500°F) Remove HOT (NO solvent)	160
271	Extra high strength for fine thread fasteners up to 25 mm (1") diameter.	Red	Heat/260°C (500°F) Remove HOT	160
272	High temperature/high strength for hostile environments to 232°C (450°F).	Red	Heat/316°C (600°F) Remove HOT	180
277	Extra high strength for coarse thread fasteners 25 mm (1") diameter and larger.	Red	Heat/260°C (500°F) Remove HOT	210

II. "Loctite" Pipe Thread Sealant

Product	Application	Color	Removal	Required Setup
545	"No-filler/non-clog" formula for high-pressure hydraulic systems. Over-application will not restrict or foul system components.	Purple	Hand tools	4 Hours (or 1/2 hour with Locquic "T" Primer)
656	Solvent-resistant, higher viscosity tapered thread sealer.	White	Hand tools	4 Hours (or 1/2 hour with Locquic "T" Primer)

III. "Loctite" gasket/flange sealer

Product	Application	Color	Notes
518	Gasket eliminator specifically made for aluminum flanges/surfaces. For hydraulic systems to 34,475 kPa (5,000 psi).	Red	Use Locquic "N" primer for fast (1/2 - 4 hours) setup. Unprimed setup 4 - 24 hours.
504	Low pressure/wide-gap gasket eliminator compound. Fills gaps to 0.0012 mm (0.030"), cures to rigid seal.	Orange	Use Locquic "N" primer for faster (1/2 - 4 hours) setup. Unprimed setup 4 - 24 hours.
515	General purpose, fast setup, flexible-cure gasket eliminator. For non-rigid assemblies subject to shock, vibration or deflection.	Purple	Use Locquic "N" primer for faster (1/4 - 2 hours) setup. Unprimed setup 1 - 12 hours.

IV. "Loctite" retaining compounds

Product	Application	Color	Notes
609	For bushings, sleeves, press-fit bearings, splines and collars. For gaps to 0.0002 mm (0.005"), temperatures to 121°C (250°F).	Green	Use Locquic "N" primer for increased bond strength and all cold temperature applications.
620	For high temperatures to 232°C (450°F).	Green	Same as 609, above.
680	For high strength bonds and tight clearance gaps, to 0.00008 mm (0.002").	Green	Same as 609, above.

V. "Loctite" Adhesives

Product	Application	Color	Notes
380	Black Max instant adhesive for shock and vibration-resistant bonds.	Black	May take 120 hours to reach full cure strength.
454	Adhesive for porous surfaces.	Clear	Full strength in 24 hours.
480	Increased strength (+50%), shock and vibration-resistant.	Black	Full strength in 24 hours.

UPPER STRUCTURE



CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that is in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

MODEL	SERIAL NUMBER RANGE
Solar 300LC-V	1001 and Up
Solar 300LL	1001 and Up
Solar 340LC-V	1001 and Up
Solar 420LC-V	1001 and Up
Solar 470LC-V	1001 and Up

TABLE OF CONTENTS

Removal	3
Installation	6

REMOVAL



CAUTION!

Avoid disassembling cab if there are strong wind gusts, which could catch large surface area of cab shell and push it sideways during lift.

1. Park on firm and level ground.
2. Lower front attachment (bucket) to the ground.
3. Stop the engine.
4. Set safety lever on "RELEASED" position.
5. Turn starter switch "ON."



WARNING!

If engine must be run while performing maintenance, use extreme care. Always have one person in the cab at all times. Never leave the cab with the engine running.

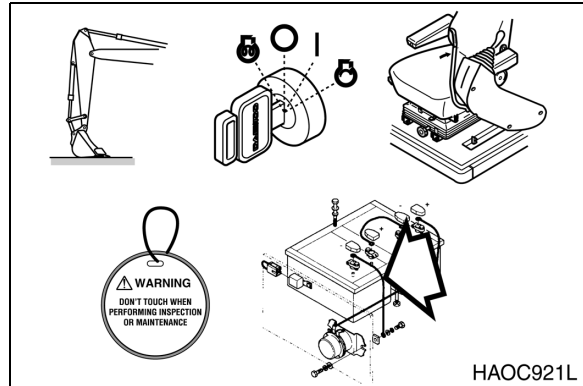


Figure 1

6. Fully stroke work levers (joysticks) in all directions to relieve pressure from accumulators.
7. Set safety lever on "LOCK" position.
8. Turn key to "OFF" position and remove from starter switch.
9. Hang maintenance warning tag on controls.
10. Disconnect negative (-) battery cable leading to frame from battery.
11. Prepare cab shell for removal by disconnecting wiring connectors for:
 - A. Cab interior lighting.
 - B. External light wiring.
 - C. Radio antenna and connections.
 - D. Wiper/washer connections.

NOTE: Control console wiring harnesses and hydraulic piping lines that pass through the floor of the cab do not need to be disassembled.

NOTE: If unit is equipped with a cab protective structure (for forestry, or hazardous working conditions), it must be removed.

12. Remove floor mat.
13. Remove operator's seat (1, Figure 2).
NOTE: *Be careful not to damage seat covering.*
14. Remove duct covers (2, 3 and 4, Figure 2). When removing cover (2) disconnect hour meter connector and cigar lighter connector. Disconnect main harness connector before removing cover (4).
15. Remove pocket (5, Figure 2) before removing side panel (6, Figure 2).

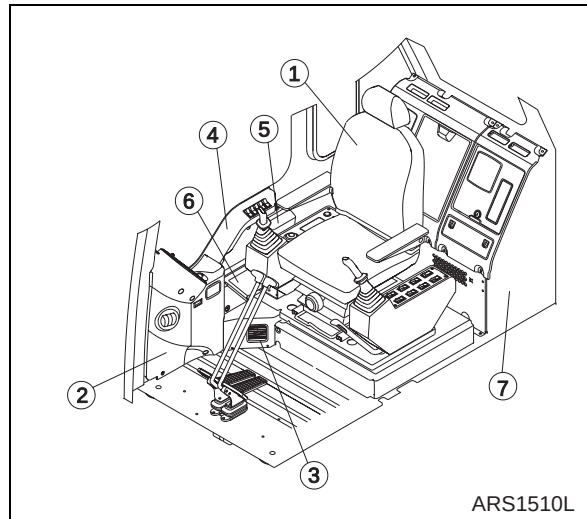


Figure 2

16. Remove air duct (1, 2 and 3, Figure 3) located at right side of cab. Disconnect duct wiring connector before removing duct (2).
17. Disconnect washer hose located at floor plate bottom.

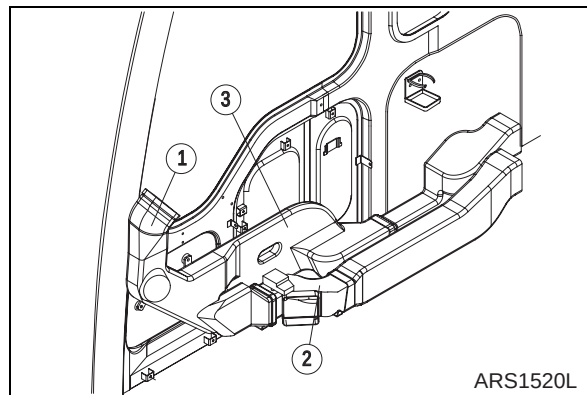


Figure 3

18. Remove cover (5, Figure 4) on left side dash cover (3) and bolts (1, Figure 5).
NOTE: *When removing cover disconnect speaker wire.*
19. Remove two rubber stops (2, Figure 4) used in storing the front lower glass. Remove bolts (1) from the rear left and right dash covers. Remove left side cover (3).
20. Lift right side dash cover (4, Figure 4) and disconnect speaker wire. Remove cover.

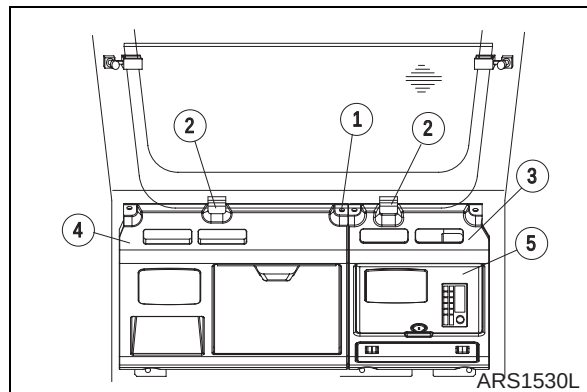


Figure 4

21. Remove three bolts (2, Figure 5) after disconnect speaker wire and antenna wire. Remove stereo assembly.
22. Disconnect cab lamp wiring connector.
23. Disconnect cabin ground cable (7, Figure 2).

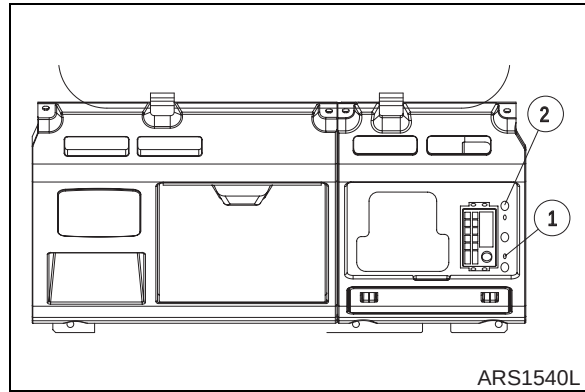


Figure 5

24. Remove four mounting nuts from four corners of cabin floor (2, Figure 6).
25. Remove four hex bolts (3, Figure 6) from door side of cabin floor.
26. Remove two hex bolts (1, Figure 6) from right side of cabin floor and one bolt (4) from front of cab floor.

Quantity	Description
4	16 mm hex nuts at each corner of the cab
4	10 mm x 1.5 hex bolts at the door side of the cab
3	10 mm x 1.5 mm hex head bolts, 2 on the right side of the cab and 1 under the front window.

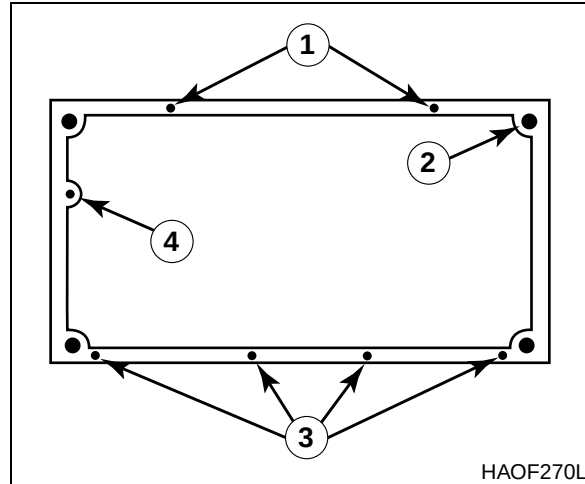


Figure 6

27. Using a suitable lifting device, attach slings to four lift points on top of cab (Figure 7).

NOTE: Cab weighs approximately 290 kg (639 lb).

28. Lift cab from 25 - 50 mm (1" - 2") above deck height. Check that all electrical connections have been disconnected and all other items unbolted.
29. Continue lifting with the assist crane to remove the cab shell. Lower the shell to a pre-prepared safe blocking support.

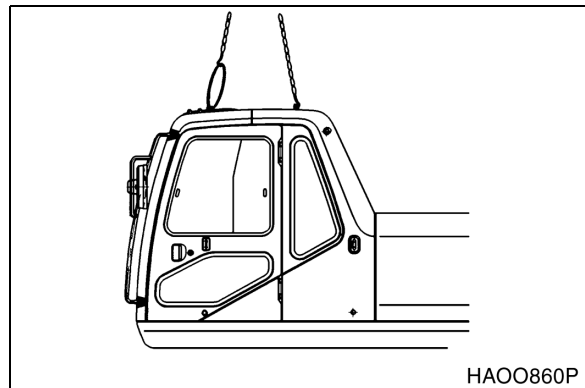


Figure 7

INSTALLATION

1. Using a suitable lifting device, attach slings to four lift points on top of cab (Figure 7).

NOTE: Cab weighs approximately 290 kg (639 lb).

2. Lower cab into position on cab floor

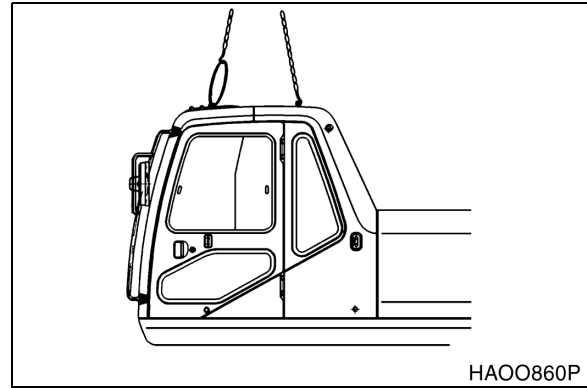


Figure 8

3. Install four mounting nuts on four corners of cabin floor (2, Figure 9).

NOTE: Mounting nut torque 20.2 kg•m (146 ft lb)

4. Install four hex bolts (3, Figure 9) in door side of cabin floor.
5. Install two hex bolts (1, Figure 9) in right side of cabin floor and one bolt (4) in front of cab floor.

Quantity	Description
4	16 mm hex nuts at each corner of the cab
4	10 mm x 1.5 hex bolts at the door side of the cab
3	10 mm x 1.5 mm hex head bolts, 2 on the right side of the cab and 1 under the front window.

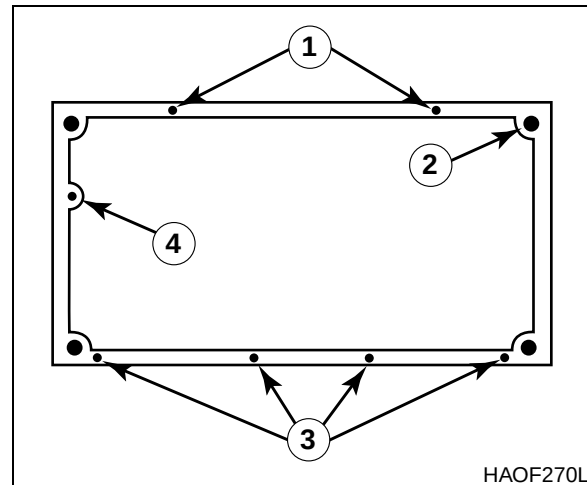


Figure 9

6. Once cab is mounted to floor, unhook lifting device
7. Connect cabin ground cable (7, Figure 2).
8. Connect cab light wiring connector.

9. Install stereo assembly with bolts (2, Figure 10) after connect speaker wire and antenna wire.

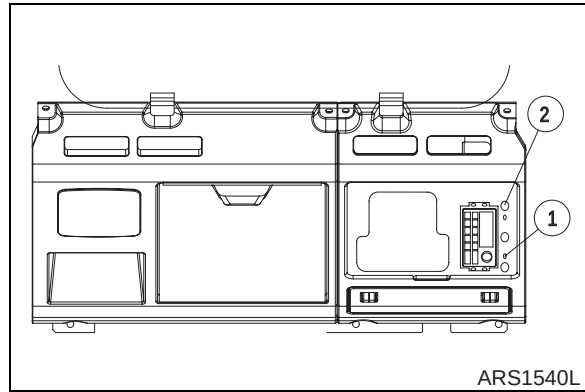


Figure 10

10. Install right side dash cover (4, Figure 11) with bolts (1, Figure 10).
11. Install left side dash cover (3, Figure 11) with bolts (1, Figure 10). Install two rubbers (2, Figure 11).
12. Install cover (5, Figure 11) on left side dash cover (3).

NOTE: *Connect speaker wire before installing cover.*

13. Connect washer hose located at floor plate bottom.
14. Install air duct (3, 2 and 1, Figure 12) located at right side of cab.

NOTE: *Connect wire connector of duct (2, Figure 12).*

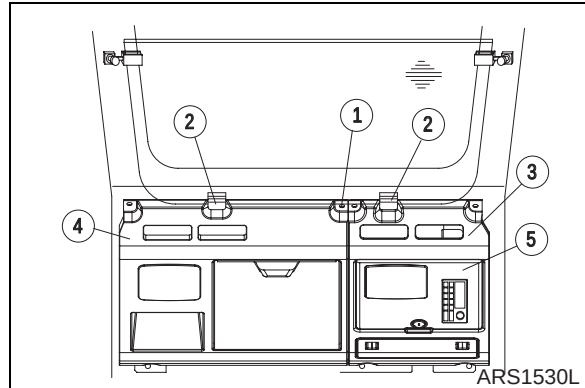


Figure 11

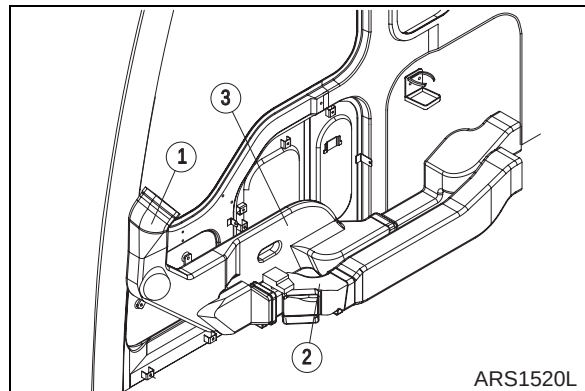


Figure 12

15. Install side panel (6, Figure 13) and pocket (5).
16. Install cover (4, Figure 13) and connect main harness. Install cover (3). Connect hour meter connector and cigar lighter connect of cover (2).
17. Install cover (2, Figure 13).
18. Install operator's seat (1, Figure 13).
NOTE: *Be careful not to damage seat covering.*
19. Install floor mat.
20. Connect negative (-) battery cable leading to frame from battery.

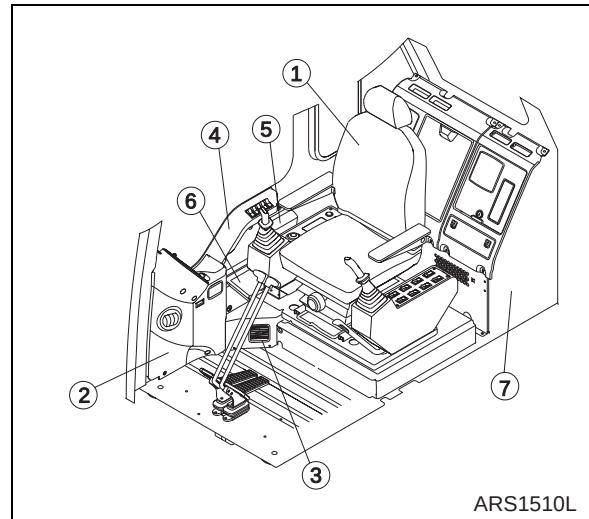


Figure 13



COUNTERWEIGHT



CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that is in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

MODEL	SERIAL NUMBER RANGE
Solar 300LC-V	1001 and Up
Solar 300LL	1001 and Up
Solar 340LC-V	1001 and Up
Solar 420LC-V	1001 and Up
Solar 470LC-V	1001 and Up

TABLE OF CONTENTS

General.....	3
Removal	5
Installation	7

GENERAL



DANGER!

Daewoo warns any user, that the removal of the counterweight from the machine, front attachment or any other part, may affect the stability of the machine. This could cause unexpected movement, resulting in death or serious injuries. Daewoo is not liable for any misuse.

Never remove the counterweight or front attachment unless the upper structure is in-line with the lower structure.

Never rotate the upper structure once the counterweight or front attachment has been removed.

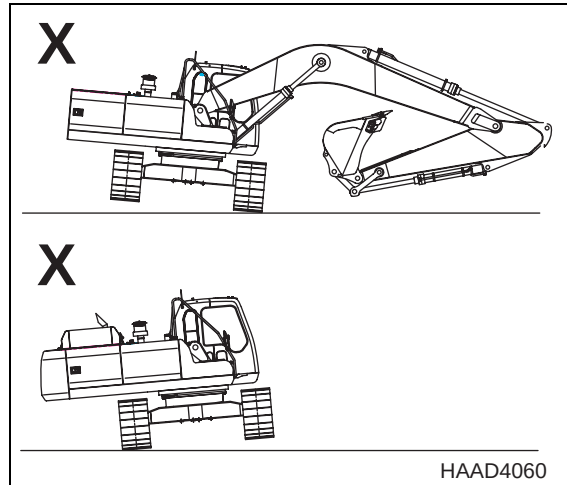


Figure 1

Before any attempt is made to begin removal or installation of the counterweight, the excavator must be parked on a firm and level supporting surface, with no sloping surfaces or soft or muddy ground in the area where the assist lift crane will be working. Position all accessories in the overnight storage position.



WARNING!

The weight of counterweight is given in the following table. Use only rated and approved slings and hardware when removal or installation lifts are being made. Lifting slings, shackles and all other hardware must be rigged safely. An assist crane that is rated above weight capacity is required.

MODEL	WEIGHT OF COUNTERWEIGHT
Solar 300LC-V	4,900 kg (10,803 lb)
Solar 300LL	6,300 kg (13,890 lb)
Solar 340LC-V	6,400 kg (14,110 lb)
Solar 420LC-V	8,200 kg (18,078 lb)
Solar 470LC-V	8,500 kg (18,740 lb)

Responsibility should be assigned to one person to be in charge of the lifting crew, and to verify that required safe lifting precautions have been taken before each part of the procedure has been started.

All members of the working crew should know and understand the signals that will be used between the lifting leader, the assist crane operator and the remainder of the work crew.

WARNING!

If the turntable deck has been unbalanced by removal of weight from one end only, traveling the excavator, swinging the turntable, movement over bumps or sloping and uneven surfaces could cause loss of control and possible accidents or injuries.

To maintain stability the counterweight should be removed whenever the front attachment is taken off the machine.

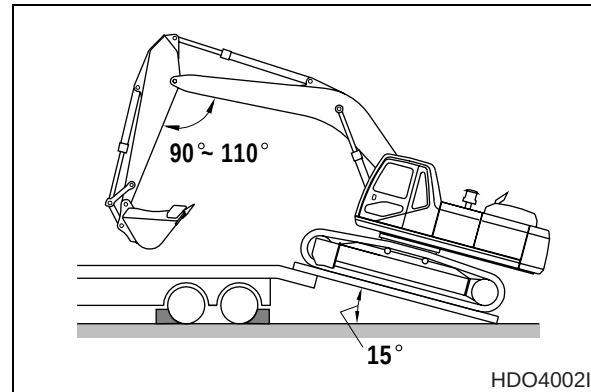


Figure 1

When loading an excavator (either track or wheeled type) on a trailer for transport after the front attachment has been removed, secure the swing lock (if equipped) to hold the deck in place and always go backwards up the loading ramp. The counterweight end of the deck has to get on the trailer first, while the cab is still going up the ramp (Figure 1).

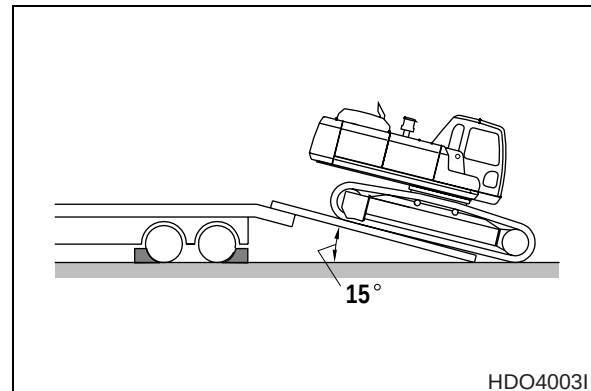


Figure 2

REMOVAL

1. Park on firm and level ground.
2. Lower front attachment (bucket) to the ground.
3. Stop the engine.
4. Set safety lever on "RELEASED" position.
5. Turn starter switch "ON."



WARNING!

If engine must be run while performing maintenance, use extreme care. Always have one person in the cab at all times. Never leave the cab with the engine running.

6. Fully stroke work levers (joysticks) in all directions to relieve pressure from accumulators.
7. Set safety lever on "LOCK" position.
8. Turn key to "OFF" position and remove from starter switch.
9. Hang maintenance warning tag on controls.
10. Disconnect negative (-) battery cable leading to frame from battery.
11. Raise engine compartment cover.

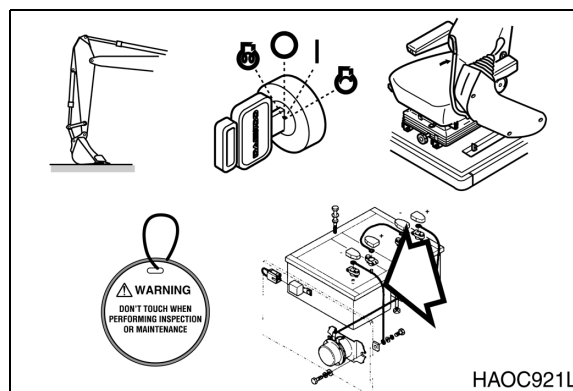


Figure 3

12. Remove two caps (1, Figure 4) from counterweight (2).
13. Install two lifting eyes in lifting holes (3, Figure 4).

Model	Lifting Eye Size
Solar 300LC-V Solar 300LL Solar 340LC-V Solar 420LC-V Solar 470LC-V	M48x5.0

14. Using a suitable lifting device capable of handling load, partially support counterweight (2, Figure 4) before beginning to loosen four bolts (4). Stop lifting with assist crane as soon as lifting slings are taut.
15. Remove four bolts (4, Figure 4) and washers (5) from counterweight (2).

NOTE: Heat bolts if necessary, to free them.

16. When bolts (4, Figure 4) and washers (5) have been removed, lift counterweight (2) a very short distance above support frame (6) and stop. Check slings and make sure counterweight is being supported evenly.

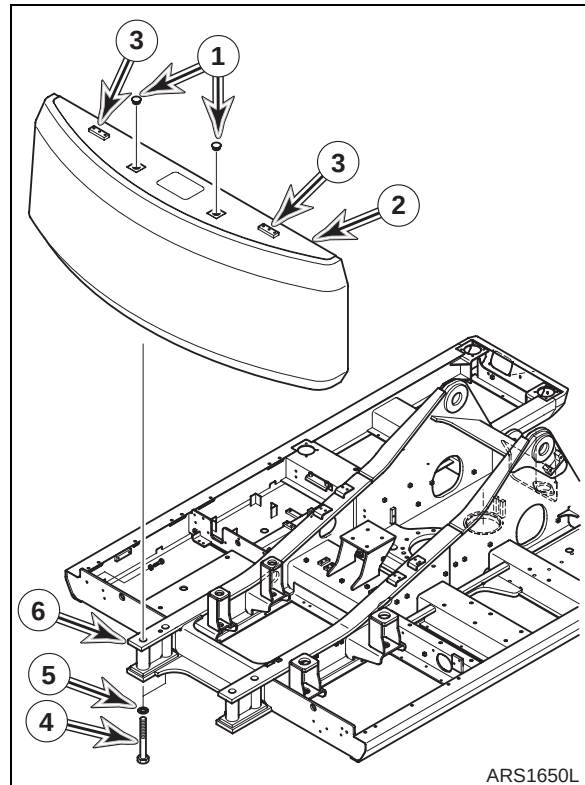


Figure 4

ARS1650L

INSTALLATION

1. Raise engine compartment cover.
2. Using suitable lifting device capable of handling load, raise counterweight (2, Figure 5) into position just above support frame (6) leaving counterweight suspended. Verify that counterweight is level and even.

NOTE: Leave counterweight (2, Figure 5) suspended 3 mm (0.125") above support frame (6) until all four mounting bolts (4) are started in counterweight mounting holes.

3. Slide washers (5, Figure 5) onto bolts (4). Apply Loctite #242 to mounting bolt threads.
4. Install four bolts (4, Figure 5) with washers (5) into counterweight until washers contact support frame. Fully lower counterweight onto support frame and finish tightening bolts.

NOTE: Tighten bolts (4, Figure 5) to values shown in following table.

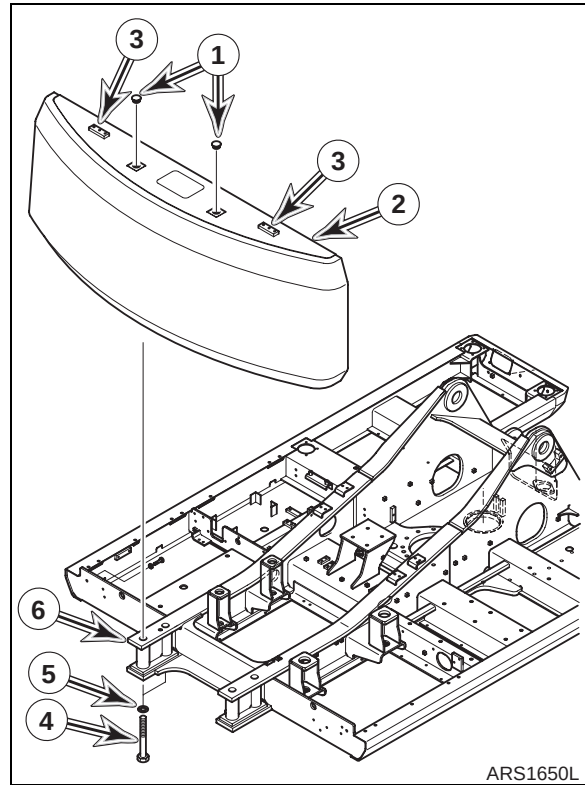


Figure 5

Model	Bolt Torque
Solar 300LC-V Solar 300LL Solar 340LC-V Solar 420LC-V Solar 470LC-V	250 kg•m (1,807 ft lb)

5. Remove lifting device and lifting eyes from counterweight lifting holes (3, Figure 5).
6. Install two caps (1, Figure 5) in lifting holes (3).
7. Connect negative (-) battery cable to battery.



S0405110K

FUEL TANK



CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that is in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

MODEL	SERIAL NUMBER RANGE
Solar 300LC-V	1001 and Up
Solar 300LL	1001 and Up

TABLE OF CONTENTS

General Description.....	3
Parts List	4
Specifications	5
Removal	6
Installation	10
Start-up Procedures	12

GENERAL DESCRIPTION



WARNING!

Engine fuel is highly flammable and potentially explosive. To prevent possible injury and/or damage to equipment, extinguish or move to a safe distance all potential fire hazards.

PARTS LIST

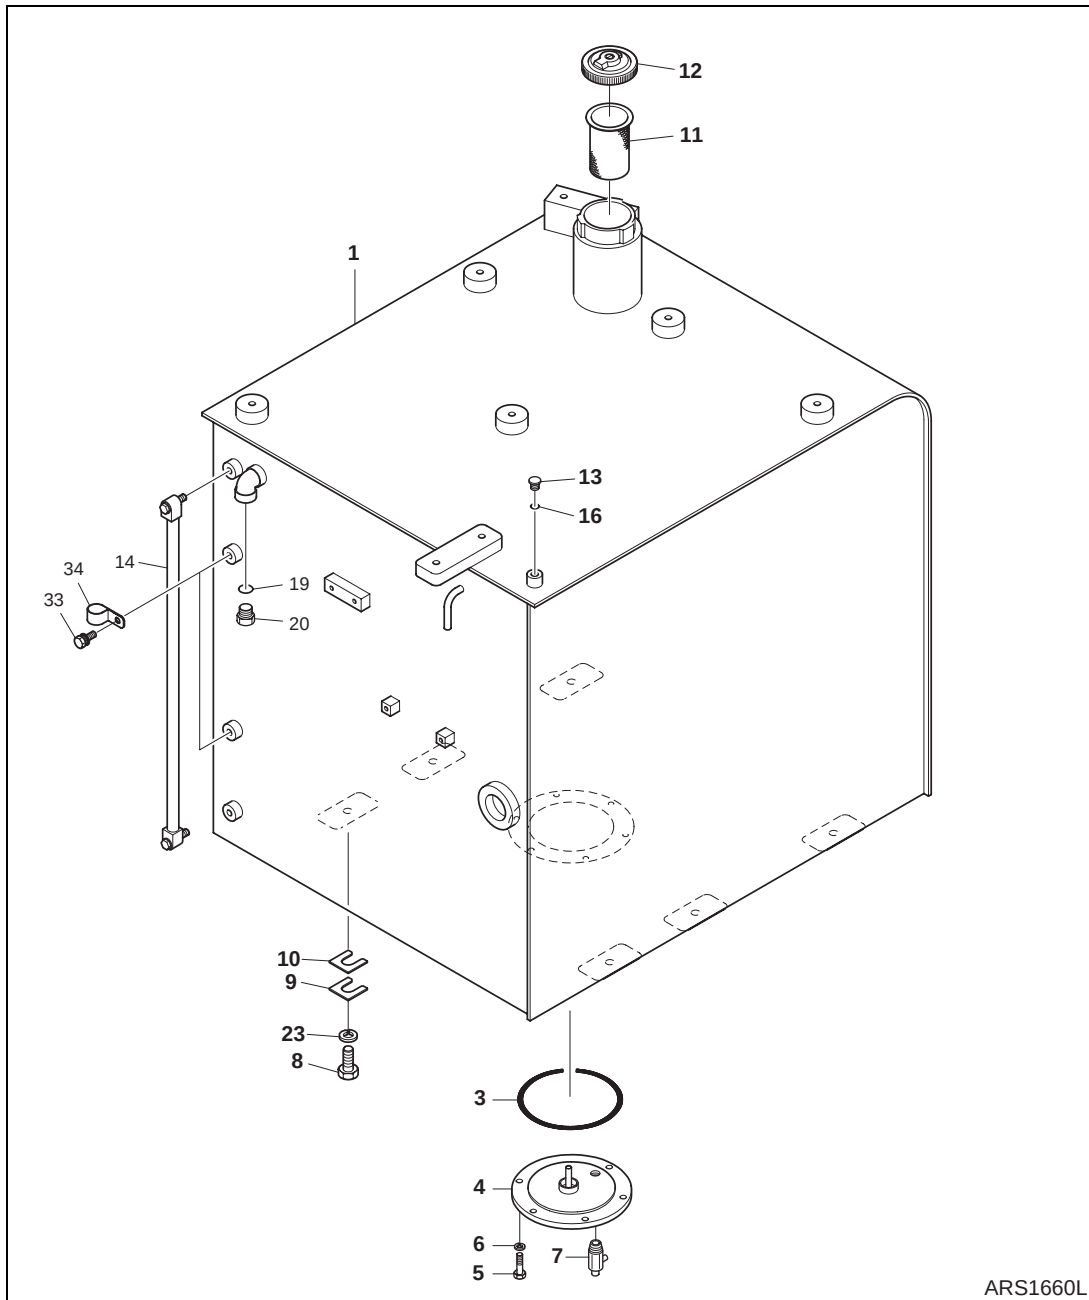


Figure 1

Reference Number	Description
1	Fuel Tank
3	O-ring
4	Cover
5	Bolt (M10x1.5x25)
6	Spring Washer (M10)
7	Drain Valve
8	Bolt
9	Shim
10	Shim
11	Fuel Filter

Reference Number	Description
12	Cap (=2188-9004)
13	Plug; SP
14	Level Gauge
16	O-ring
19	O-ring
20	Plug
23	Spacer
33	Bolt
34	Clip

SPECIFICATIONS

Fuel tank capacity is 450 liters (119 U.S. gal).

REMOVAL

1. Look at fuel level display (Figure 2) on instrument panel in operator's cab to see what it displays. The display is divided into ten separated segments, each representing 10 percent of total fuel supply. Also look at level gauge on side of tank to estimate volume of fuel left in tank.

NOTE: *If possible, work excavator until available fuel supply in tank has been run down as far as possible.*

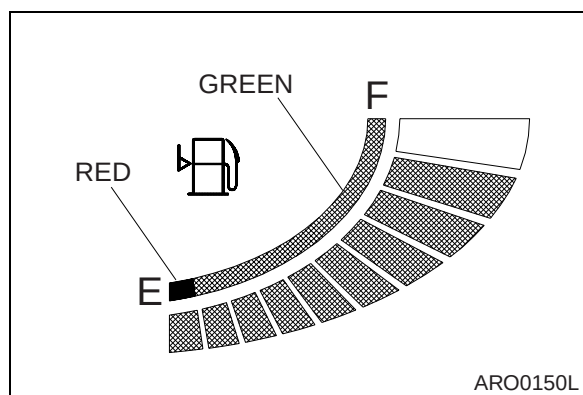


Figure 2

2. Park on firm and level ground and swing turntable to approximately a 90° with respect to tracks. See Figure 3.

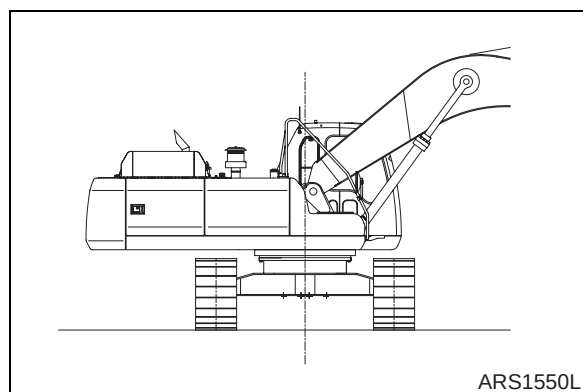


Figure 3

3. Lower front attachment (bucket) to the ground.
4. Stop the engine.
5. Set safety lever on "RELEASED" position.
6. Turn starter switch "ON."

	WARNING!
If engine must be run while performing maintenance, use extreme care. Always have one person in the cab at all times. Never leave the cab with the engine running.	

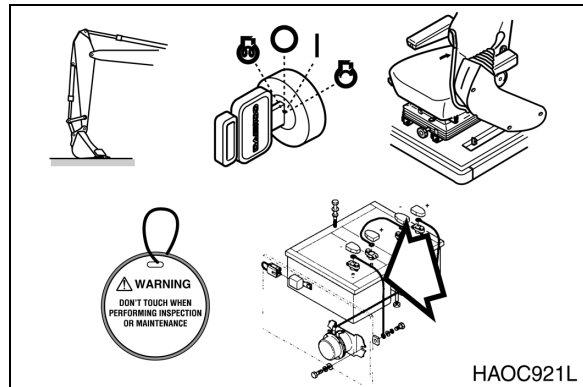


Figure 4

7. Fully stroke work levers (joysticks) in all directions to relieve pressure from accumulators.
8. Set safety lever on "LOCK" position.
9. Turn key to "OFF" position and remove from starter switch.
10. Hang maintenance warning tag on controls.
11. Disconnect negative (-) battery cable leading to frame from battery.
12. Clean area around fuel tank fill cap (1, Figure 5). Open fuel cap.

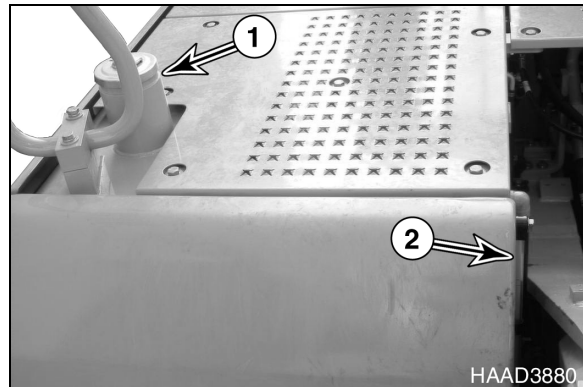


Figure 5

13. Place a large enough container under the tank to collect remaining fuel. Open drain valve (Figure 6) at bottom of tank and empty tank.

NOTE: Fuel tank capacity is 450 liters (119 U.S. gal).

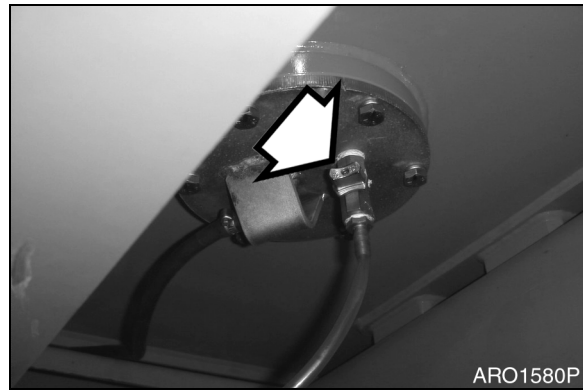


Figure 6

14. Tag and disconnect fuel supply line (1, Figure 7) and fuel return line (2) from tank (3) and carefully drain remaining fuel from lines.
15. Remove clamp (4, Figure 7) holding fuel return line (2) to tank (3).

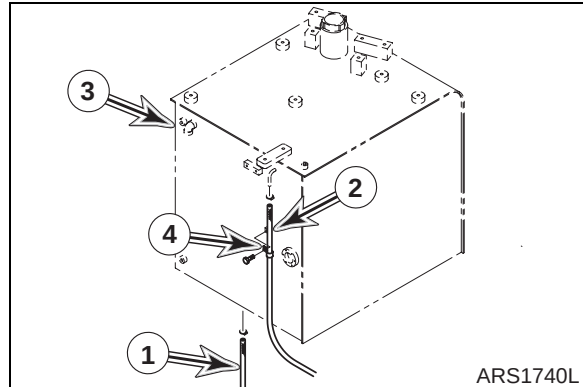


Figure 7

16. Tag and disconnect wires leading to fuel sensor (1, Figure 8) on side of fuel tank (2).
17. If equipped, remove components from fuel filler pump port (3, Figure 8) on side of fuel tank (2).

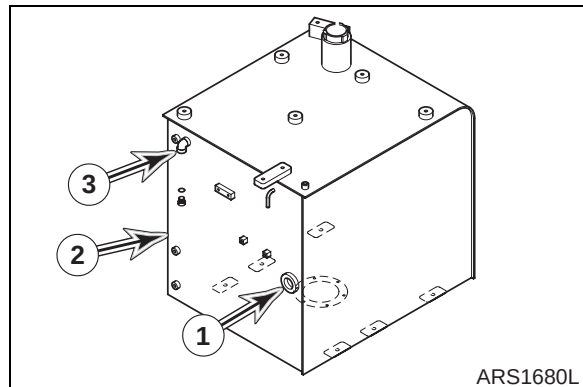


Figure 8

18. Remove six bolts (1, Figure 9) and cover (2) from fuel tank.

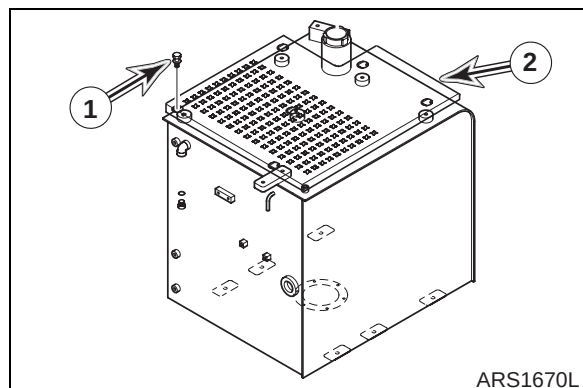


Figure 9

19. Remove four bolts (1 and 2, Figure 10), clamp (6) and stay (3) from fuel tank and frame.

Remove four bolts (4) and battery cover (5) from frame.

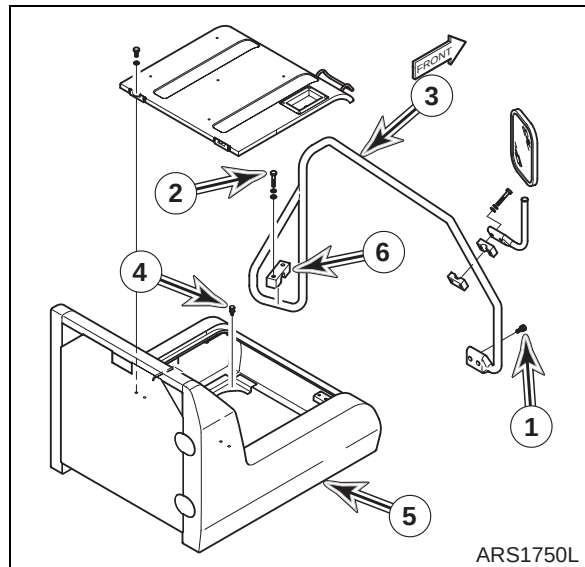


Figure 10

20. Remove four bolts (1 and 2, Figure 11) and cover (3) from fuel tank and support.

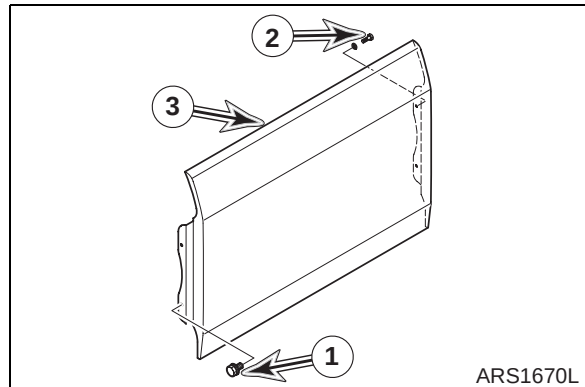


Figure 11

21. Install two 12 mm eye bolts in threaded holes (1 and 2, Figure 12). Using a suitable lifting device, sling eye bolts.
22. Remove six bolts and washers (4, Figure 12) holding tank (3) to frame. Lift tank 25 mm (1") and make sure it is balanced. Make sure that there are no other electrical wires or hoses connected to tank. Completely remove tank after inspection.

NOTE: The clear level gauge on the side of the tank is easily damaged. Be careful of obstacles and wind gusts.

23. Remove shims (5, Figure 12).

NOTE: If tank is to be reused note position and amount of shims used for each mounting bolt location.

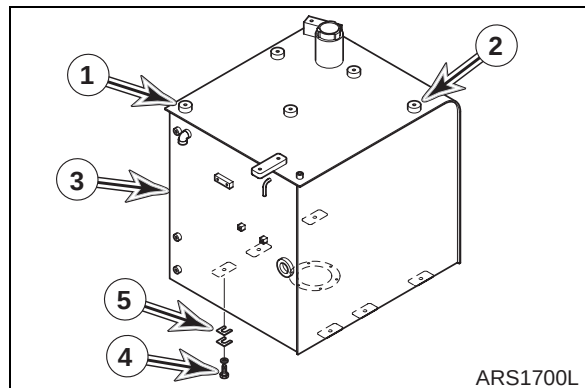


Figure 12

INSTALLATION

1. Install two 12 mm eye bolts in threaded holes (1 and 2, Figure 13). Using a suitable lifting device, sling eye bolts.
2. Set fuel tank (3, Figure 13) into position. Install six bolts and washers (4) finger tight, to secure tank to frame.

NOTE: *The clear level gauge on the side of the tank is easily damaged. Be careful of obstacles and wind gusts.*

3. Install shims (5, Figure 13) as needed to prevent tank (3) from rocking or stress from mounting bolts (4).
4. Tighten mounting bolts (4, Figure 13) after shims are installed.

NOTE: *Bolt torque is 27 kg•m*

5. Install four bolts (1 and 2, Figure 14) and cover (3) on fuel tank and support.

6. Install four bolts (4, Figure 15) and battery cover (5) on frame.

Install four bolts (1 and 2), clamp (6) and stay (3) on fuel tank and frame.

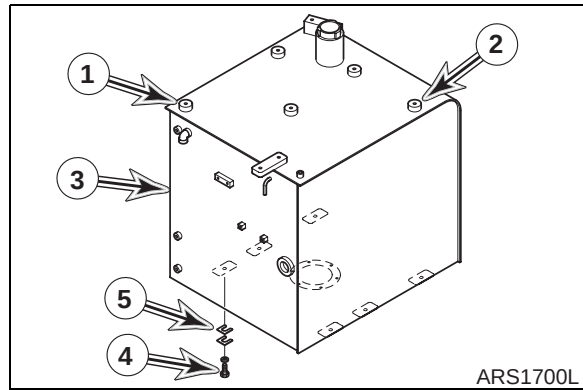


Figure 13

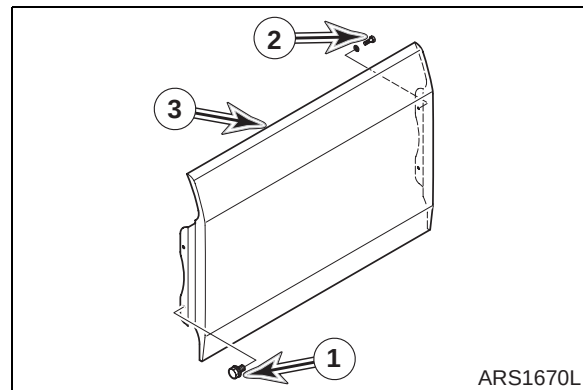


Figure 14

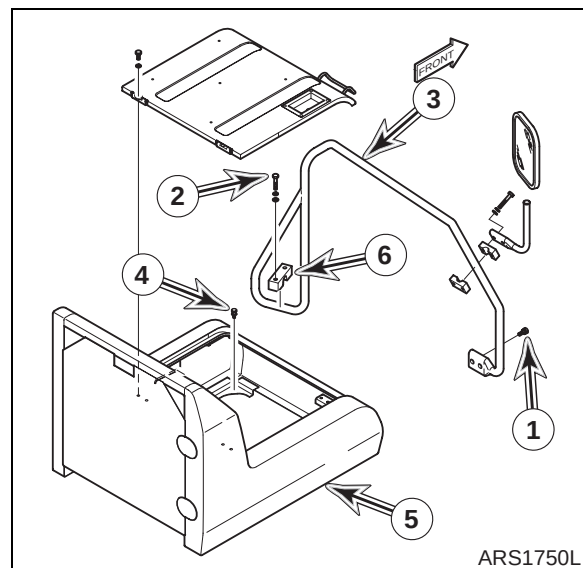


Figure 15

7. Install six bolts (1, Figure 16) and cover (2) on fuel tank.

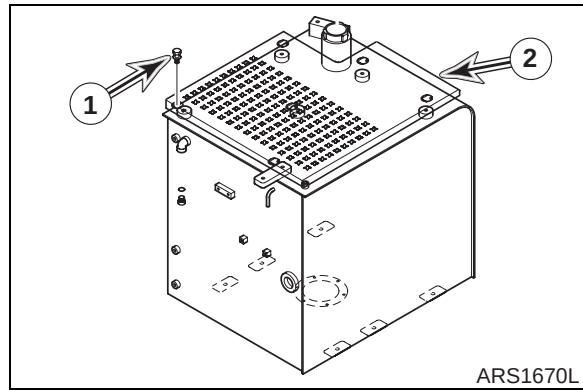


Figure 16

8. Connect wires as tagged to fuel sensor (1, Figure 17) on side of fuel tank (2).
9. If equipped, connect components to fuel filter pump port (3, Figure 17) on side of fuel tank (2).

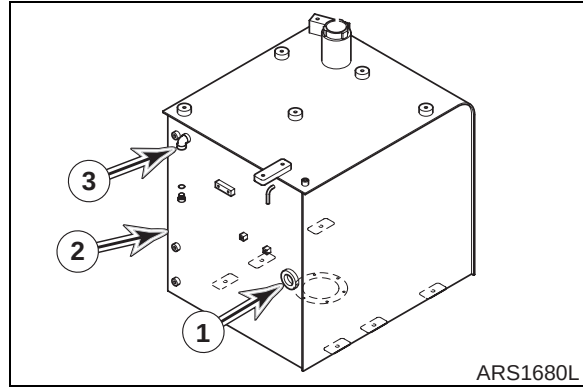


Figure 17

10. Connect as tagged, fuel supply line (1, Figure 18) and fuel return line (2) to fuel tank (3).
11. Install clamp (4, Figure 18) to hold fuel return line (2) to tank (3).

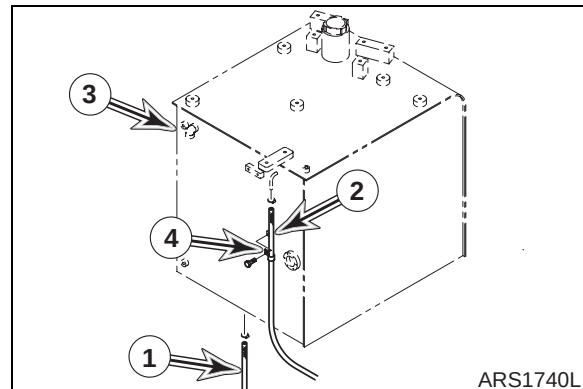


Figure 18

12. Make sure fuel tank drain valve (Figure 19) on bottom of tank is closed.
13. Fill fuel tank and check for signs of leaks. Correct any problems found.
14. Connect negative (-) battery cable to battery.

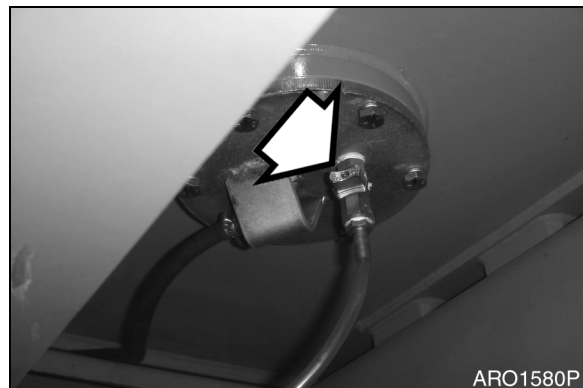


Figure 19

START-UP PROCEDURES

If engine does not start, the fuel system may need priming. Prime the fuel system using the following procedure;

1. Loosen plug (Figure 20) on top of fuel filter head.
2. Unscrew and pump the hand operated primer pump (Figure 21) by the fuel injection pump. Pump primer until fuel is present at plug hole in fuel filter head.
3. Tighten plug in fuel filter head.
4. Continue to pump primer pump until a strong resistance is felt. Screw the primer pump knob back into housing.
5. Start engine and look for signs of leaks.
6. Repeat procedure if necessary.

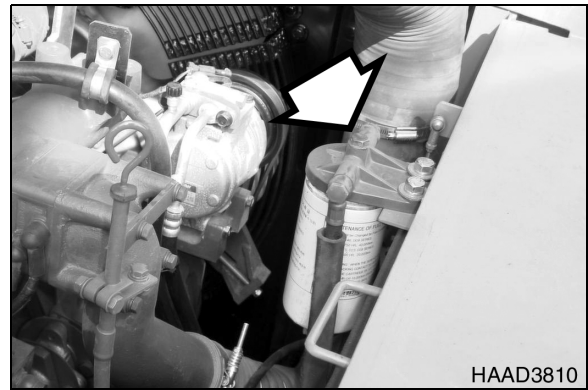


Figure 20

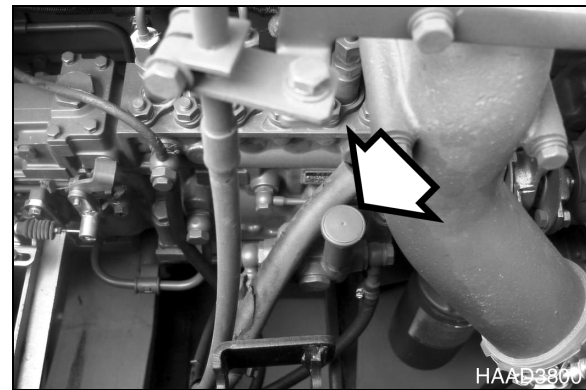


Figure 21



FUEL TRANSFER PUMP



CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that is in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

MODEL	SERIAL NUMBER RANGE
Mega 130	0001 and Up
Mega 160	0001 and Up
Mega 200-III	1001 and Up
Mega 200-V	1001 and Up
Mega 250-III	1001 and Up
Mega 250-V	1001 and Up
Mega 300-V	1001 and Up
Mega 400-III PLUS	1001 and Up
Mega 400-V	1001 and Up
Mega 500-V	1001 thru 2000
Mega 500-V (Tier II)	2001 and Up
Solar 130LC-V	0001 and Up
Solar 130W-V	0001 and Up
Solar 170LC-V	1001 and Up
Solar 170W-V	1001 and Up
Solar 200W-V	0001 and Up
Solar 220LC-V	0001 and Up
Solar 220LL	1001 and Up
Solar 220N-V	1001 and Up

Models continued on back of cover.

Copyright 2002 Daewoo

June 2002

MODEL	SERIAL NUMBER RANGE
Solar 250LC-V	1001 and Up
Solar 290LC-V	0001 and Up
Solar 290LL	1001 and Up
Solar 300LC-V	1001 and Up
Solar 300LL	1001 and Up
Solar 330LC-V	1001 and Up
Solar 340LC-V	1001 and Up
Solar 400LC-V	1001 and Up
Solar 420LC-V	1001 and Up
Solar 450LC-V	1001 and Up
Solar 470LC-V	1001 and Up

TABLE OF CONTENTS

General Description.....	3
Theory of Operation	3
Troubleshooting	4
Replacement of Rotor and Vane	4
Replacement of Rear Cover	5
Replacement of Armature	6

GENERAL DESCRIPTION

THEORY OF OPERATION

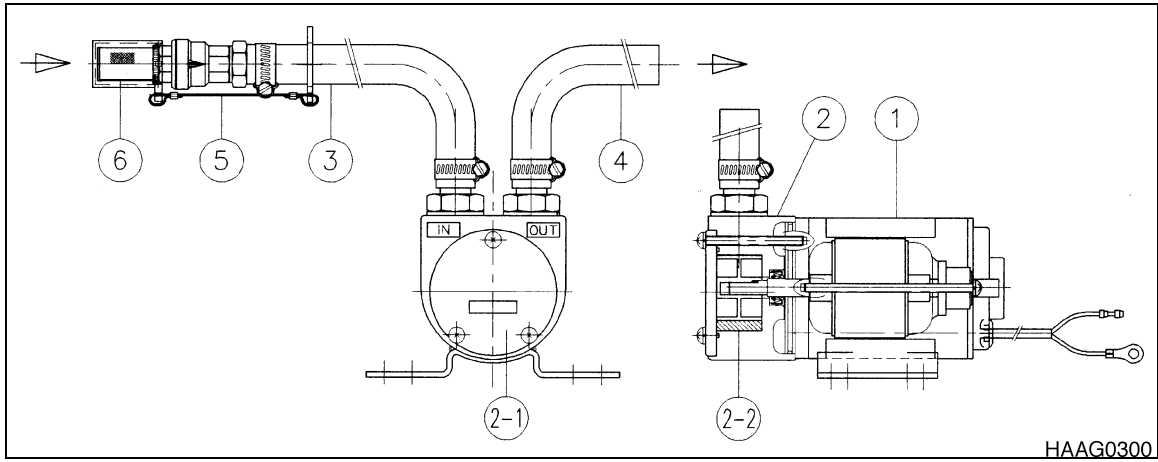


Figure 1

Reference Number	Description
1	Motor
2	Pump
2-1	Pump Cover
2-2	Rotor and Vane

Reference Number	Description
3	Inlet Hose
4	Outlet Hose
5	Check Valve
6	Strainer Cap

Fuel pump consists of motor, pump, switch and hose assembly.



Figure 2

TROUBLESHOOTING

On some pumps the ON-OFF switch is installed separately at a remote location.

A thermal limiter, built into the motor, will automatically shut off power if motor is overheating to protect it from damage.

NOTE: *OPEN TEMP: 150 ±5°C (302 ±41°F). After circuit is automatically shut off due to overheating the pump will stop running. When temperature drops below 143°C (289°F) the circuit will reactivate allowing the pump to restart.*

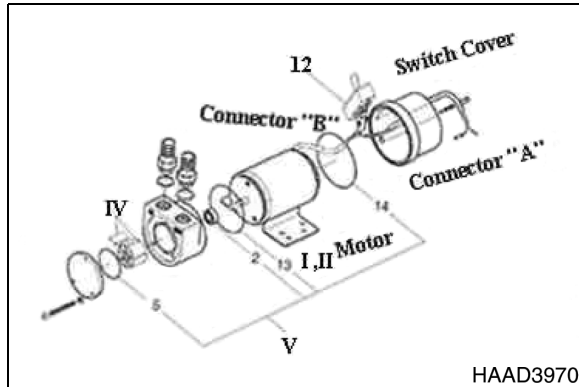


Figure 3 WITH TOGGLE SWITCH

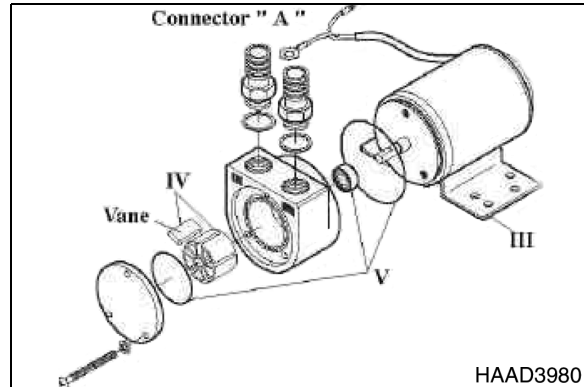


Figure 4 WITHOUT TOGGLE SWITCH

Check resistance at connectors "A." If reading is zero, or very close to zero, the motor is bad and must be replaced.

On units equipped with a toggle switch, check the resistance through the toggle switch, while the switch is in the "ON" position. If continuity is not present, the switch is bad. Be sure to check resistance through the motor.

REPLACEMENT OF ROTOR AND VANE

If dirt or other foreign materials enter pump during operation, it can become lodged between the rotor and/or vanes and generate heat which can cause pump damage.

Remove the pump cover and check the rotor and vane. If any pump parts or components become lost, damaged or inoperable, immediately replace them with a new ones.

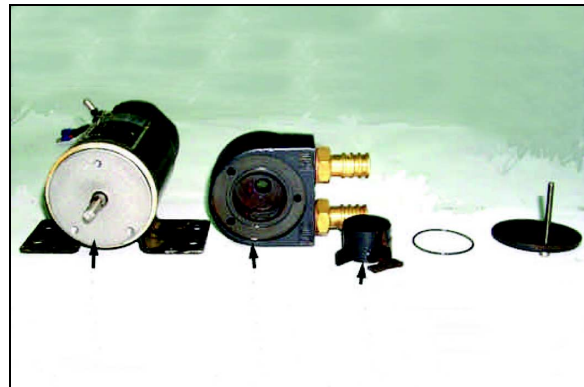


Figure 5 WITHOUT TOGGLE SWITCH

Insert vane, with the circled edge of vane facing in the counterclockwise direction. (Detail A)

Insert O-ring again at reassembly of pump cover.

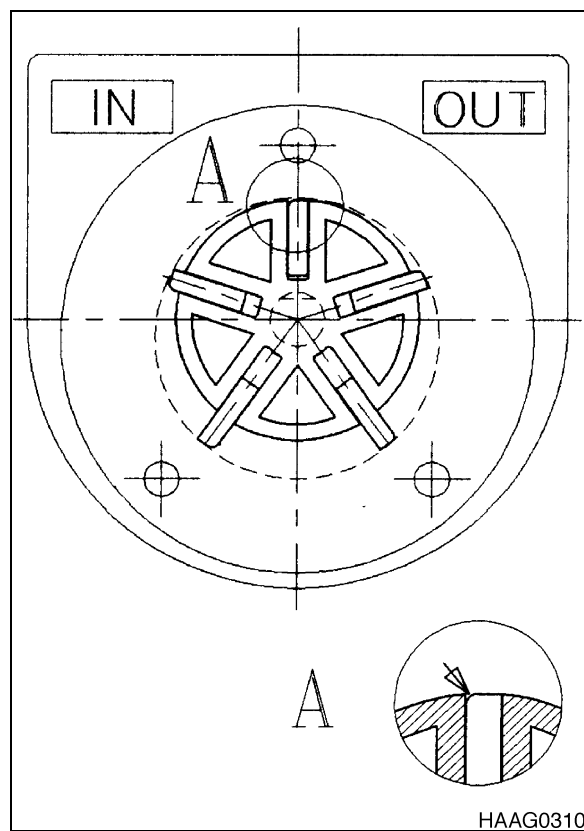


Figure 6

REPLACEMENT OF REAR COVER

Brush assembly and a thermal limiter are installed in the rear cover. If you find any damage, replace them with new ones.

Remove the switch cover and screw (M5 x L95) from the rear cover.

Remove cover.

At reassembly of rear cover, widen the space of brush and insert it to the armature. Then fit the hole of screw in the housing.

Be careful when installing screw. The cover screw may be attracted by the motor magnet.

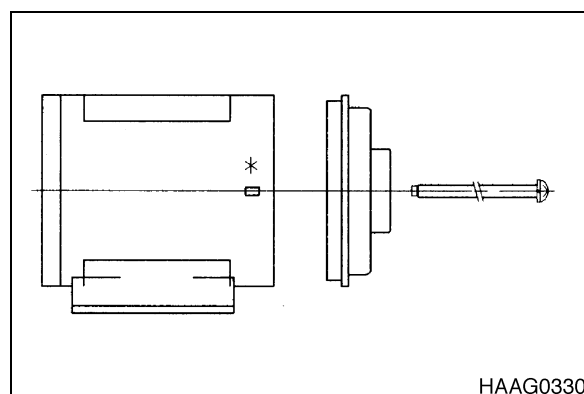


Figure 7

REPLACEMENT OF ARMATURE

You can replace only the armature in case motor was damaged by a short circuit.

Remove the switch cover and rear cover, than remove the armature from the housing.

Remove the pump cover and remove the rotor and vane.

Insert a new armature into the housing.

Refer to "Replacement of Rear Cover" on page 5, for installation of rear cover.

Fit the rotor in the shaft flute of armature. Insert vane to the rotor being careful for the direction. Refer to "Replacement of Rotor and Vane" on page 4.

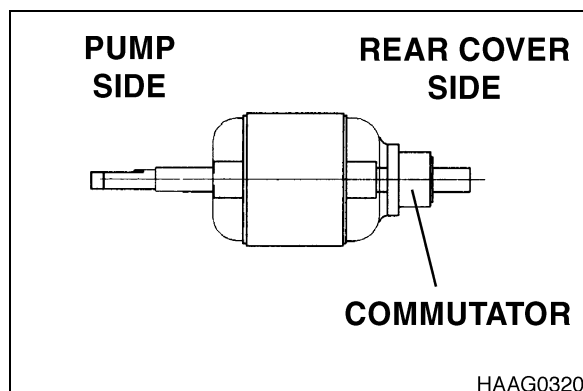


Figure 8



SWING BEARING



CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that is in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

MODEL	SERIAL NUMBER RANGE
Solar 130LC-V	0001 and Up
Solar 170LC-V	1001 and Up
Solar 220LC-V	0001 and Up
Solar 220LL	1001 and Up
Solar 250LC-V	1001 and Up
Solar 290LC-V	0001 and Up
Solar 290LL	1001 and Up
Solar 300LC-V	1001 and Up
Solar 300LL	1001 and Up
Solar 330LC-V	1001 and Up
Solar 340LC-V	1001 and Up
Solar 400LC-V	1001 and Up
Solar 420LC-V	1001 and Up
Solar 450LC-V	1001 and Up
Solar 470LC-V	1001 and Up

TABLE OF CONTENTS

Swing Bearing Maintenance	3
Operating Recommendation	3
Measuring Swing Bearing Axial Play	3
Measuring Bearing Lateral Play	3
Swing Bearing Basic Operation	4
Rebuilding Swing Bearing	4

SWING BEARING MAINTENANCE

OPERATING RECOMMENDATION

The service life of the swing bearing may be extended if a conscious, daily effort is made to equalize usage over both ends of the excavator. If the excavator is used in the same operating configuration day in and day out (for example, with the travel motors always under the counterweight, or with the attachment over one side of the machine more than the other), the bearing's service life could be reduced. Taking a few minutes in the middle of each work shift to reposition the excavator, to work the opposite end of the bearing, will provide a payoff in terms of more even, gradual rate of wear and extended service life.

MEASURING SWING BEARING AXIAL PLAY

Periodic, regular checks of bearing displacement should be made at least twice a year. Use a dial indicator. Push the attachment against the ground to lift the excavator off the ground and take measurements at 4 points, 90° apart, around the circumference of the bearing (Figure 1).

Record and keep all measurements. Play in the bearing should increase minimally from one inspection to the next. Eventually, however, as the bearing begins to approach the limit of its service life, clearance increases become much more pronounced and the actual measured play in the bearing could exceed twice the value that was measured when the machine was new.

MEASURING BEARING LATERAL PLAY

When vertical checks are made, the side-to-side play in the bearing can be checked by fully retracting the arm and bucket cylinders and extending the tip of the bucket as far forward as it will go. With the excavator parked on a flat, level surface and the bucket tip just off the ground, push against the bucket sideways to take up all of the lateral clearance in the bearing. (Less than 100 lb of force should be required to move the bucket over all the way.) Check lateral play in both directions and record the values. When the bearing is beginning to approach the end of its service life, measured lateral clearance should start to show larger and larger increases.

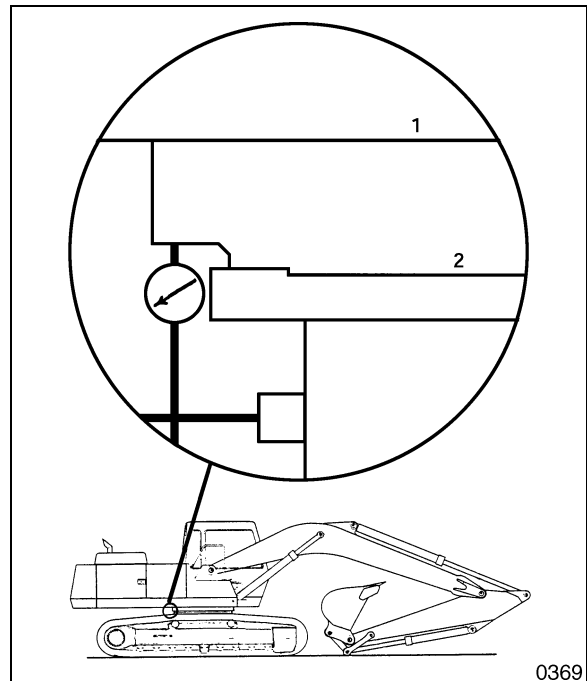


Figure 1

SWING BEARING BASIC OPERATION

The swing bearing, which connects the upper structure with the lower structure, consists of a inner ring, outer ring and ball bearings. During swing movement, power from the swing motor is transferred to the pinion by planetary gears connected to gears on the inner ring, which is fixed in the undercarriage. Ball bearings turn the outer ring.

Reference Number	Description
1	Ball
2	Seal A
3	Seal B
4	Retainer
5	Retainer
6	Outer Ring
7	Inner Ring
8	Tapered Pin
9	Plug

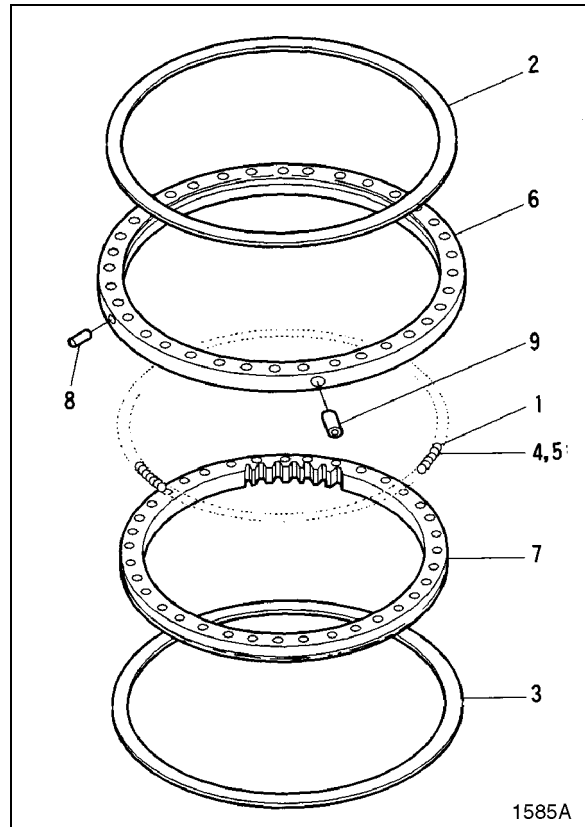


Figure 2

REBUILDING SWING BEARING

1. Remove tip of tapered pin (1, Figure 3) using grinder and tap lightly to remove debris.
2. Remove plug (1, Figure 4) using a M10 x 1.25 bolt (2).

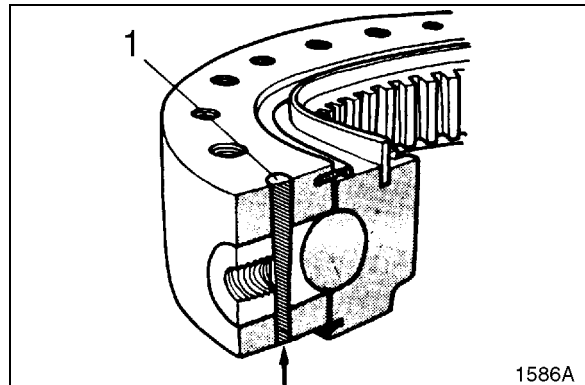


Figure 3

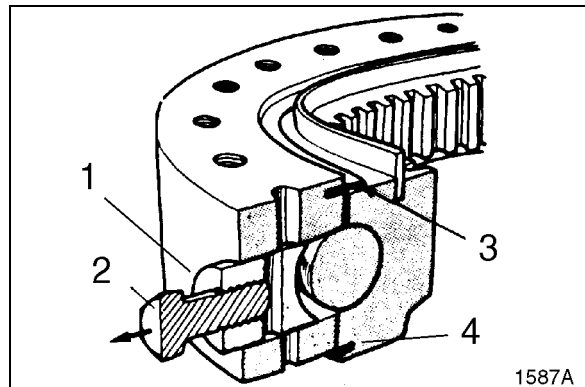


Figure 4

3. Lift outer ring and check that inner ring can move freely. See Figure 5, if not, replace seal (3, Figure 4) and/or seal (4, Figure 4).

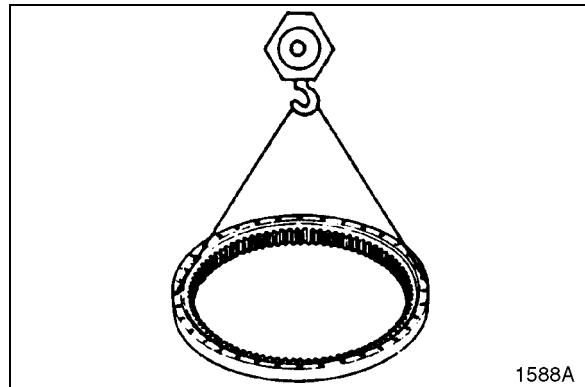


Figure 5

4. Turn inner ring and use magnet bar (1, Figure 6) to remove steel balls (2).

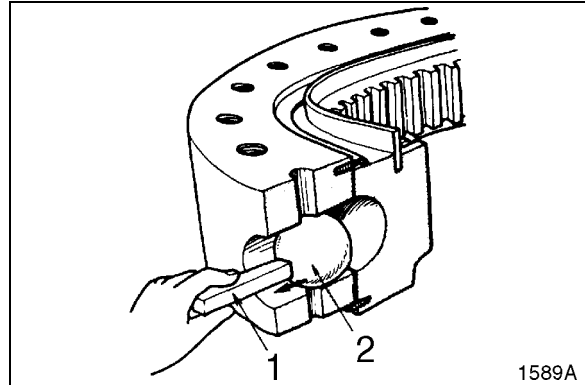


Figure 6

5. Turn inner ring and use wire (1, Figure 7) to remove retainers (2).

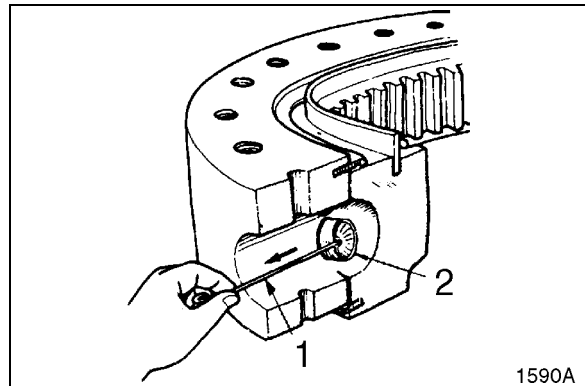


Figure 7

6. Assemble in reverse order of disassembly and then adjust the gap between the steel balls and retainers using the following guidelines: Assemble steel ball, retainer (A) and retainer (B) to bearing; if gap is too wide, adjust by moving steel balls or by replacing one of the retainers.

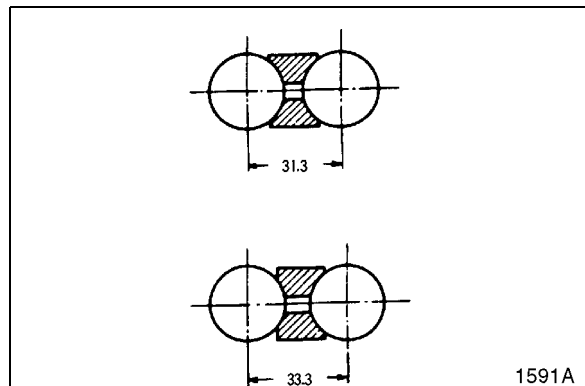


Figure 8



SWING REDUCTION GEAR



CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that is in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

MODEL	SERIAL NUMBER RANGE
Solar 300LC-V	1001 and Up

TABLE OF CONTENTS

General Description.....	3
Theory of Operation	3
Parts List	4
Specifications	5
Special Tools and Materials.....	6
Special Tools	6
Tool "A"	6
Tool "B"	6
Tool "C"	7
Tool "D"	7
Tool "E"	7
Tool "F"	8
Troubleshooting, Testing and Adjustment.....	9
Removal	10
Disassembly	12
Cleaning and Inspection (Wear Limits and Tolerances)	16
Reassembly.....	17
Installation	22
Start-up Procedures	23

GENERAL DESCRIPTION

THEORY OF OPERATION

The swing motor final drive is a two-step planetary gearbox with two planet gears, two sun gears and two-step output reduction. The planetary gear engages with the ring gear. The pinion gear is connected with the output shaft and spline.

The final drive reduces swing motor RPM in order to increase swing motor output torque. The available maximum swing speed provides a fast turning rate for efficient, rapid work cycling with more than adequate power for good acceleration.

PARTS LIST

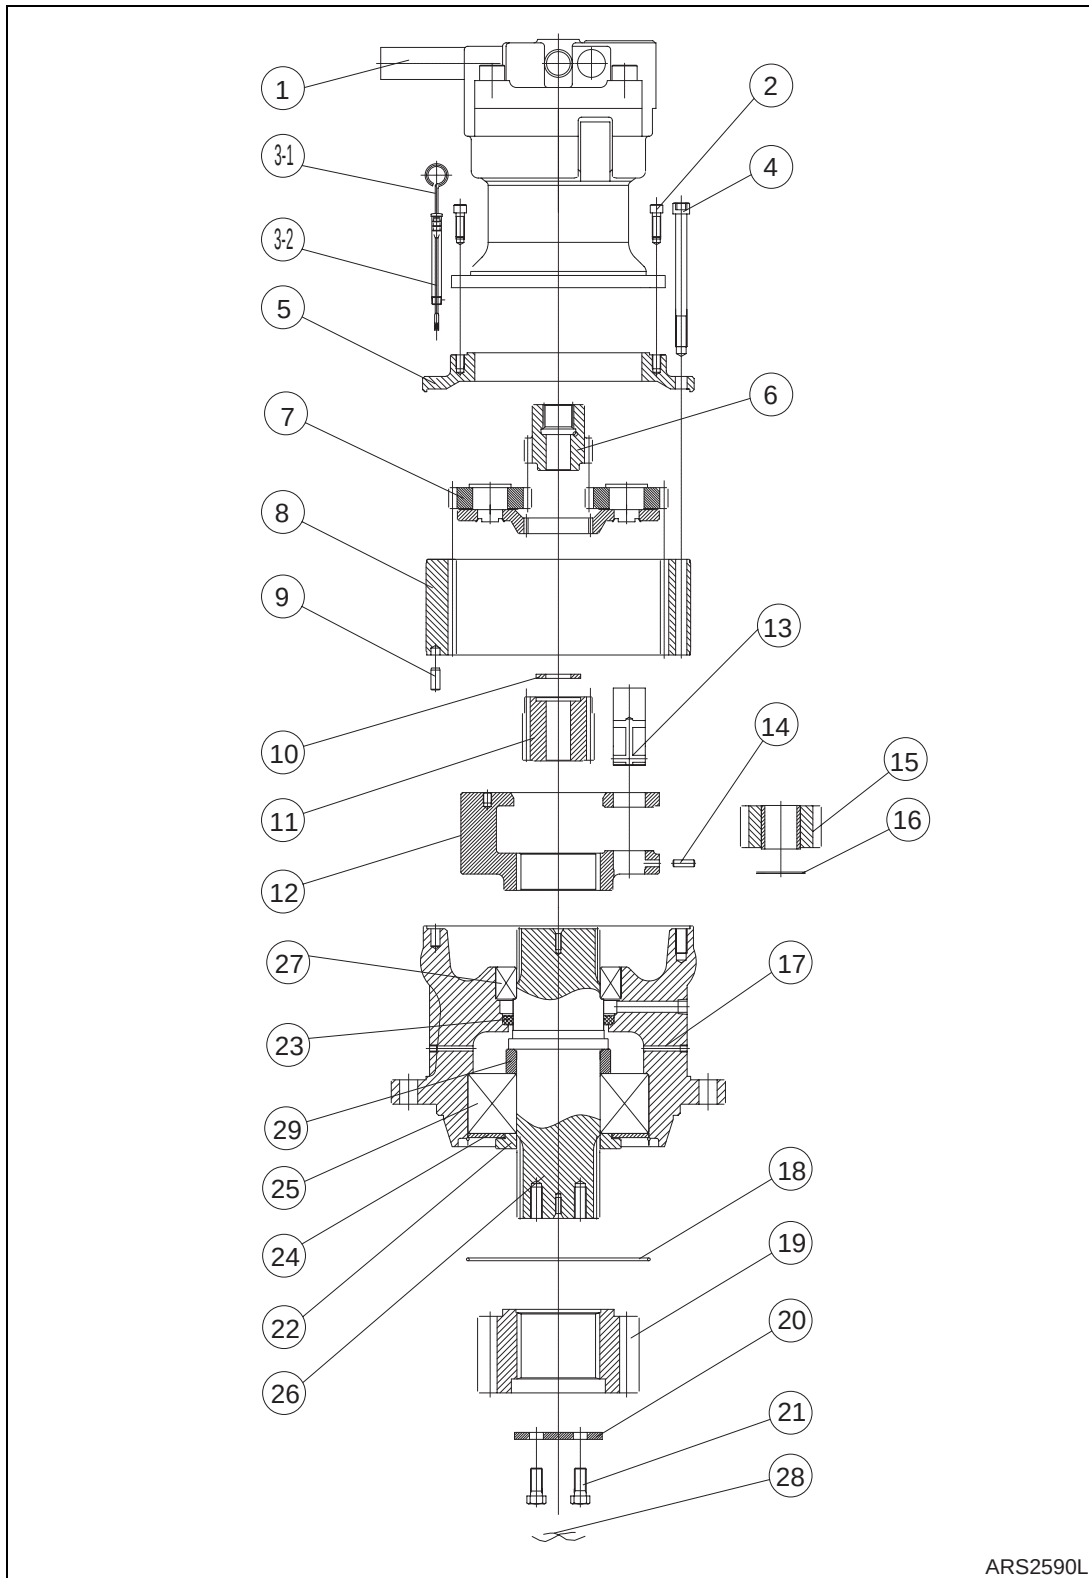


Figure 1

Reference Number	Description
1	Motor
2	Socket Bolt (M12x35)
3-1	Level Gauge
3-2	Pipe
4	Socket Bolt(M16x180)
5	Cover Plate
6	No.1 Sun Gear
7	No. 1 Carrier Assembly
8	Ring Gear
9	Lock Pin
10	Thrust Plate
11	No. 2 Sun Gear
12	No. 2 Carrier
13	No. 2 Shaft For Pin
14	Spring Pin

Reference Number	Description
15	No. 2 Planetary Gear
16	No. 2 Side Plate
17	Gear Case
18	Lock Ring
19	Pinion Gear
20	Cover
21	Hex Bolt (M16x40)
22	Collar
23	Seal
24	Plate
25	Bearing
26	Shaft
27	Bearing
28	Lock Wire
29	Spacer

SPECIFICATIONS

Swing Reduction Gearbox	Specification
Drive Type	2-Stage Planetary Gear
Reduction Ratio	21.968
Maximum Output Speed	63 rpm
Maximum Output Torque	1,860 kg•m (1,345 ft lb)
Weight	320 kg (706 lb)

Pinion Gear	Specification
Type	Spur Gear
Gear P.C.D	190 mm (7.48 in)
No. of Teeth	14
Module	14

SPECIAL TOOLS AND MATERIALS

SPECIAL TOOLS

Tool "A"

Dimension	Measurement
A	Ø190 mm (7.4803 in)
B	Ø220 mm (8.6614 in)
C	350 mm (13.7795 in)

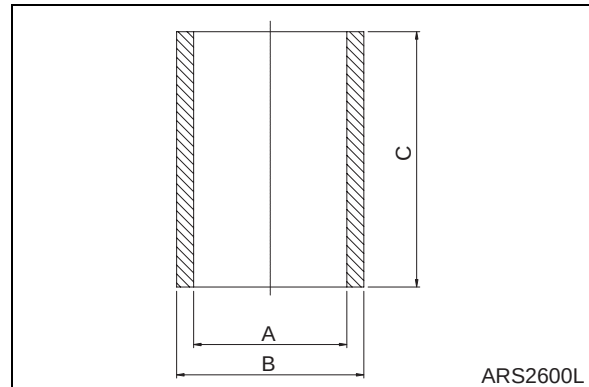


Figure 2

Tool "B"

Dimension	Measurement
A	Ø156 mm (6.1417 in)
B	Ø130 mm (5.1181 in)
C	$3^{+0.5}_{+0.3}$ mm (0.1299 - 0.1378 in)
D	128 mm (5.0394 in)
E	20 mm (0.7874 in)
F	120 mm (4.7244 in)
G	268 mm (10.5512 in)
H	Ø60 mm (2.3622 in)
I	Ø168 mm (6.6142 in)

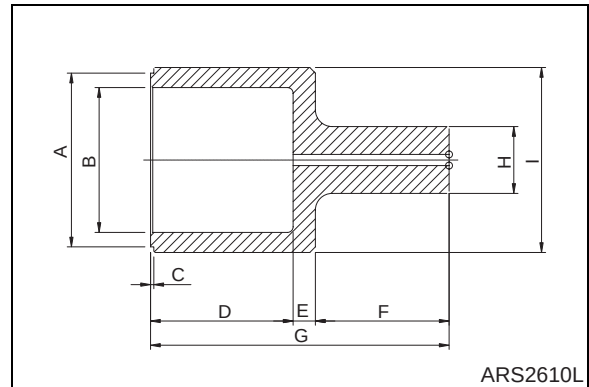


Figure 3

Tool "C"

Dimension	Measurement
A	70 mm (2.7559 in)
B	6 mm (0.2362 in)
C	6 mm (0.2362 in)
D	18 mm (0.7087 in)

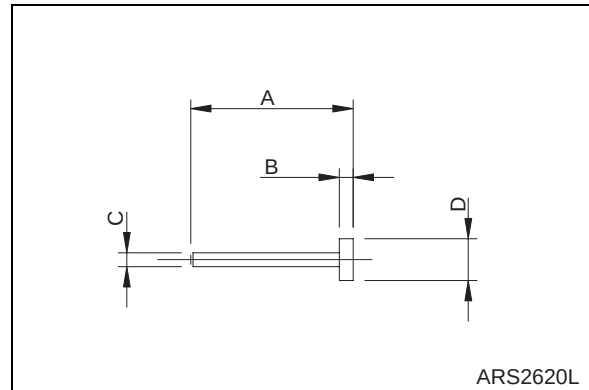


Figure 4

Tool "D"

Dimension	Measurement
A	Ø60 mm (2.3622 in)
B	Ø80 mm (3.1496 in)
C	150 mm (5.9055 in)

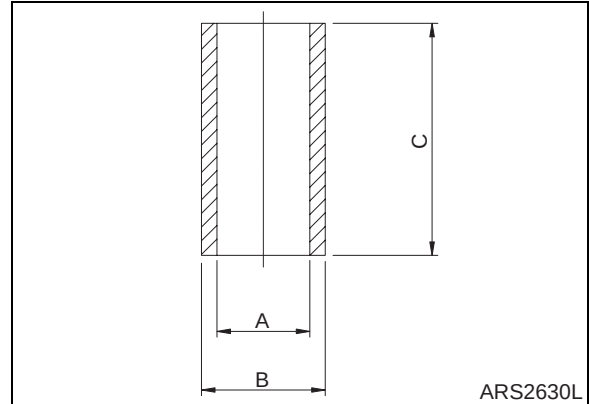


Figure 5

Tool "E"

Dimension	Measurement
A	Ø108 mm (4.2520 in)
B	Ø138 mm (5.4331 in)
C	150 mm (5.9055 in)

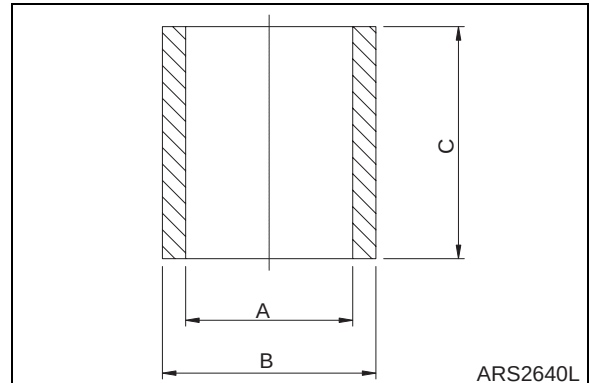


Figure 6

Tool "F"

Dimension	Measurement
A	Ø128 mm (5.0394 in)
B	Ø158 mm (6.2205 in)
C	150 mm (5.9055 in)

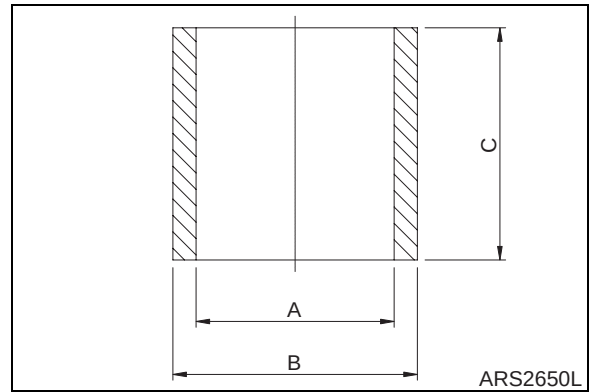


Figure 7

TROUBLESHOOTING, TESTING AND ADJUSTMENT

Symptoms	Possible Causes	Remedies
1. No rotation and – a. Pressure at swing motor inlet <i>increases</i> b. Pressure at swing motor inlet shows <i>no increase</i>, and the swing motor is making irregular noises c. Pressure at swing motor inlet shows <i>no increase</i>, but without irregular noises from the swing motor	Swing brake not releasing Internal damage to gearbox drive train Overload Swing motor drive shaft damage Internal damage to gearbox drive train Hydraulic pump or valve broken	Check brake engagement and disengagement, check release pressure Replace broken gears, drive train assemblies Reduce load weight Replace swing motor Repair/replace broken or faulty assemblies Troubleshoot hydraulic system
2. Oil leakage a. From drive shaft b. From bolted connections or other assembled surfaces	Oil seal damaged Assembly compound (joint sealer) old and not sealing, bolt not tight or flange warped	Replace oil seal Disassemble and check mating surfaces. Reapply Loctite, torque bolts to specifications
3. Excess heat Gearbox casing becomes excessively hot, with or without irregular noise(s) during operation	Low oil level Bearings or gear worn but not completely inoperative	Replace oil, refill to specified level Repair or replace gearbox

HAOE960L

REMOVAL

1. Park on firm and level ground.
2. Lower front attachment (bucket) to the ground.
3. Stop the engine.
4. Set safety lever on "RELEASED" position.
5. Turn starter switch "ON."



WARNING!

If engine must be run while performing maintenance, use extreme care. Always have one person in the cab at all times. Never leave the cab with the engine running.

6. Fully stroke work levers (joysticks) in all directions to relieve pressure from accumulators.
7. Set safety lever on "LOCK" position.
8. Turn key to "OFF" position and remove from starter switch.
9. Hang maintenance warning tag on controls.
10. Disconnect negative (-) battery cable leading to frame from battery.

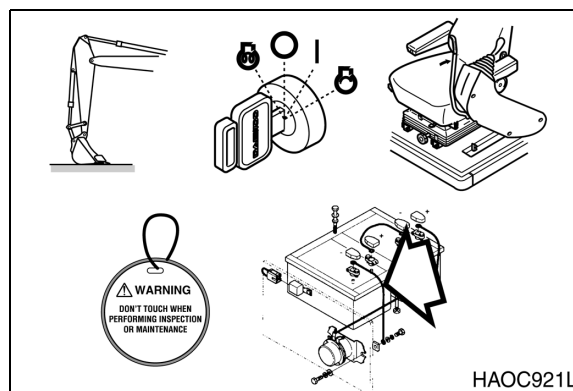


Figure 8

11. Tag and disconnect hoses from swing motor (1, Figure 9). Plug and cap hoses and ports to prevent contamination from entering hydraulic system or component.
12. Remove drain plug (3, Figure 9) from frame and drain oil from reduction gearbox (5, Figure 9).
13. Disconnect hose (2, Figure 9) from main frame by loosening nut (3).
14. Disconnect grease lubrication line (7, Figure 9) from reduction gearbox (5).
15. Remove twelve bolts and washers (4, Figure 9) holding swing reduction gearbox (5) to frame.
16. Using a suitable lifting device, sling swing motor (1, Figure 9) and remove swing motor and reduction gearbox (5) as an assembly from unit.

NOTE: *There are two alignment pins (6, Figure 9), located on reduction gearbox flange.*

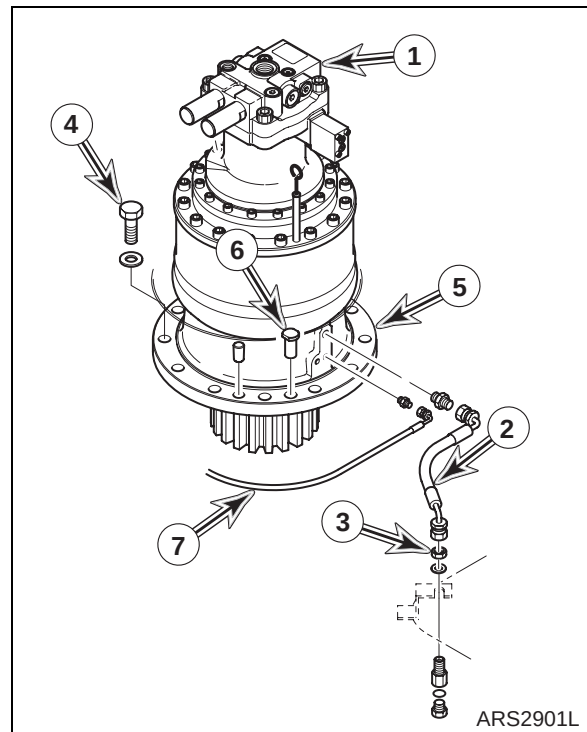


Figure 9

DISASSEMBLY

1. Drain oil from port A.
2. Using a pipe wrench, remove oil level gauge (3-1) and pipe (3-2) (PT1/4).

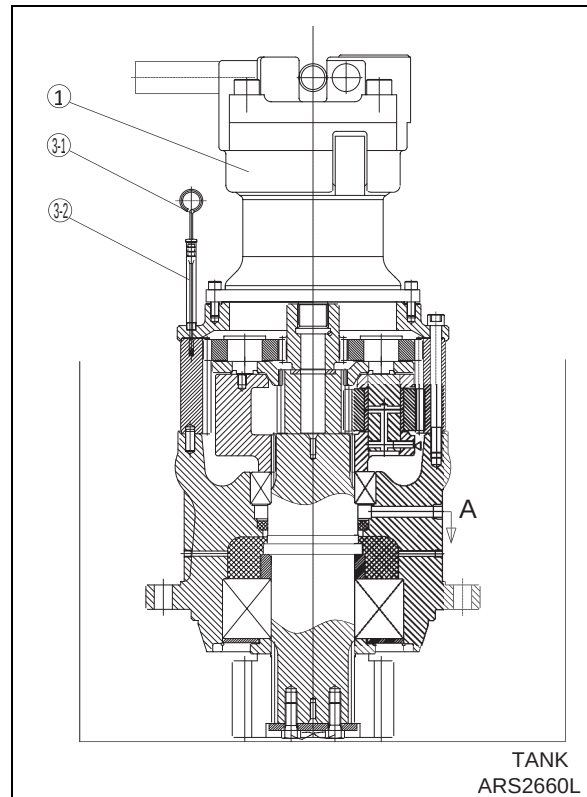


Figure 10

3. Using L-wrench, remove socket bolts (2) and motor (1).

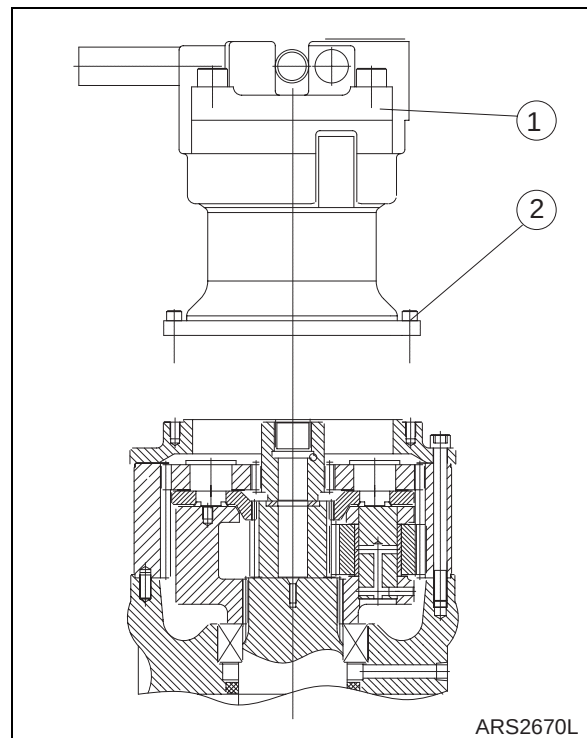


Figure 11

4. Using L-wrench, remove socket bolts (4) and cover (5).

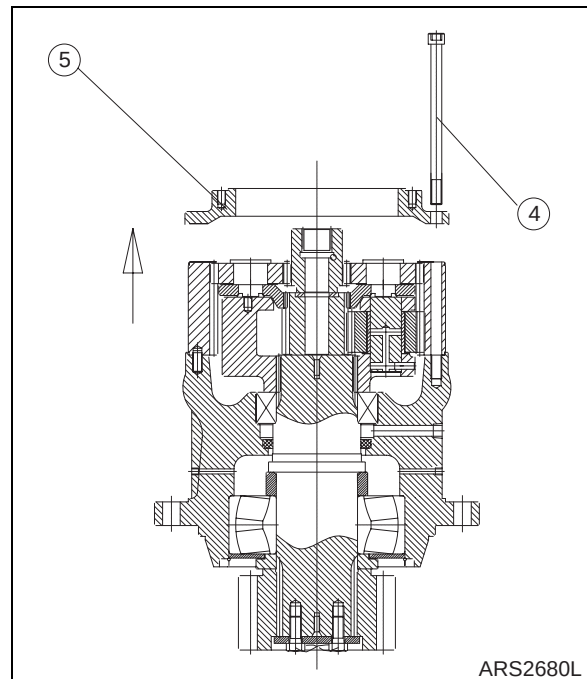


Figure 12

5. Remove sun gear No. 1 (6) and carrier assembly No. 1 (7). Remove thrust plate (10).

IMPORTANT

Do not remove carrier assembly No. 1 (7) in field because pin No. 1 and carrier No. 1 are caulked.

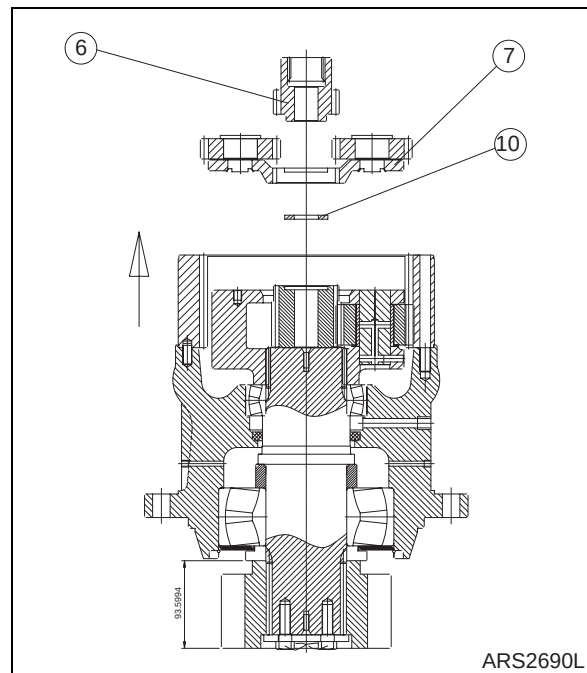


Figure 13

6. Remove sun gear No. 2 (11). Remove carrier assembly No. 2 and disassemble it.

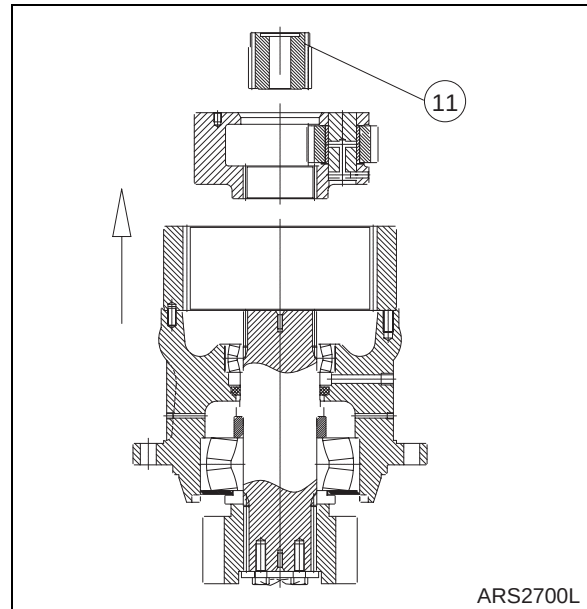


Figure 14

7. Using special tool (C), drive spring pin (14) into shaft No. 2 (13). This will allow shaft to be pressed out of carrier No. 2.

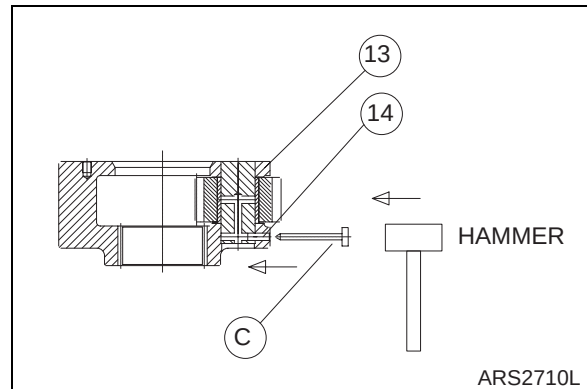


Figure 15

8. Remove shaft No. 2 (13) from carrier No. 2 (12). Remove spring pin (14) from shaft No. 2 (13). Remove planetary gear No. 2 (15) and side plate (16) from carrier No. 2 (12).

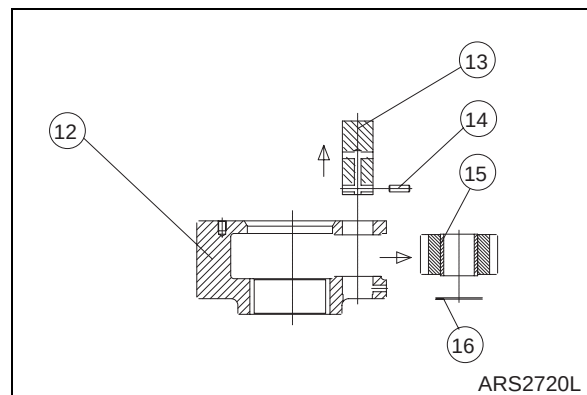


Figure 16

9. Remove ring gear (8). Remove lock pin (9) and turn body over.

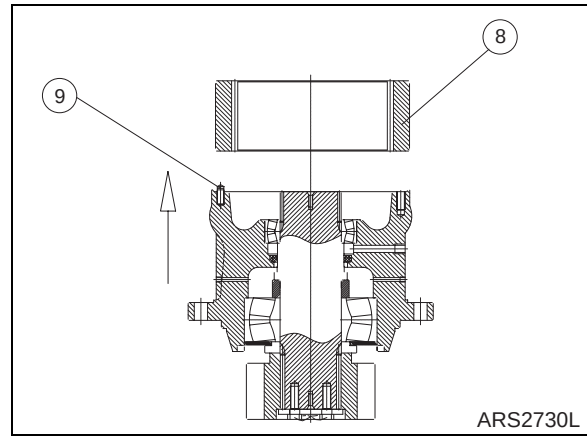


Figure 17

10. Remove wire (28) and hex bolt (21) by using socket wrench. Remove cover (20) and pinion (19).

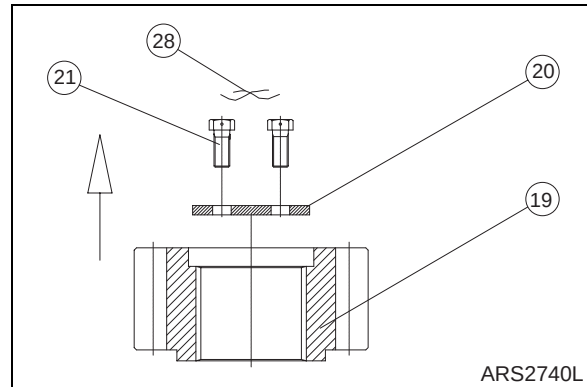


Figure 18

11. Remove lock ring (18). Put jig (D) on shaft (26) and press shaft assembly (22, 24, 25 and 26) out.

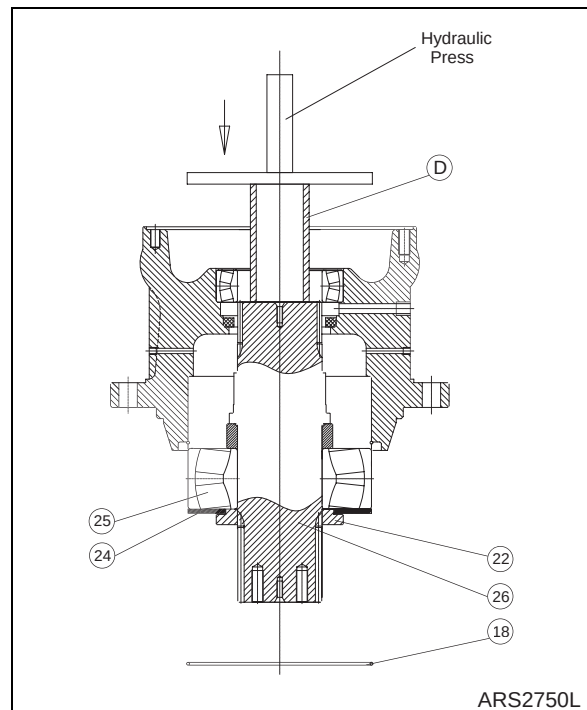


Figure 19 HYDRAULIC PRESS

12. Put jig (A) on bearing (25) and press bearing (25), plate (24) and collar (22) from shaft (26). Pull spacer (29) out.

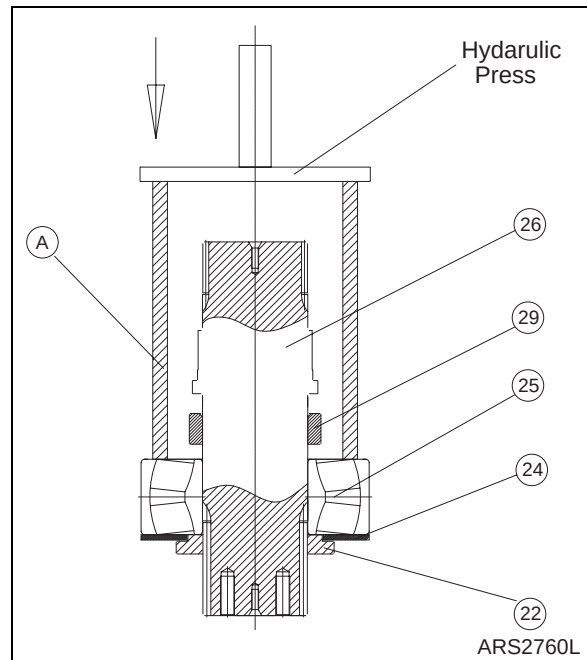


Figure 20 HYDRAULIC PRESS

13. Remove bearing (27). Put jig (F) on seal (23) and using a rubber hammer, tap seal (23) out of gear case (17).

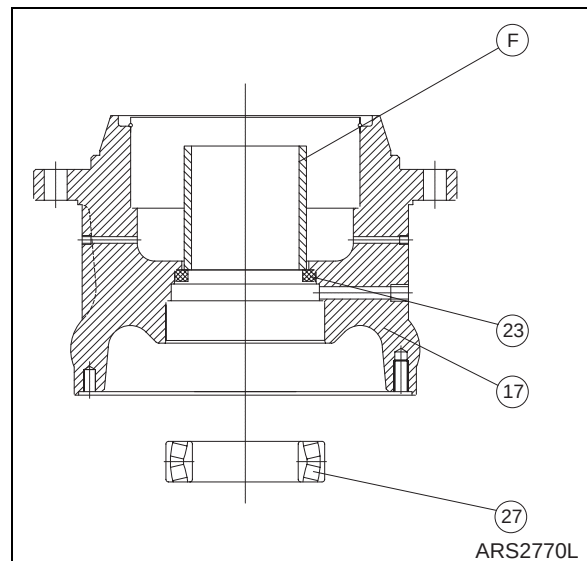


Figure 21

CLEANING AND INSPECTION (WEAR LIMITS AND TOLERANCES)

For general cleaning and inspection procedures, refer to "General Maintenance Procedures" section.

Inspect all components in the assembly. Pay particular attention to oil seals, lock and spring pins and fastener bolts. Using new replacement parts for these components is recommended whenever there is any doubt at all about the condition or serviceability of original parts.

REASSEMBLY

1. Install spacer (29) on shaft (26). Position jig (A) on bearing (25) and press bearing (25) on shaft (26) until contact is obtained.

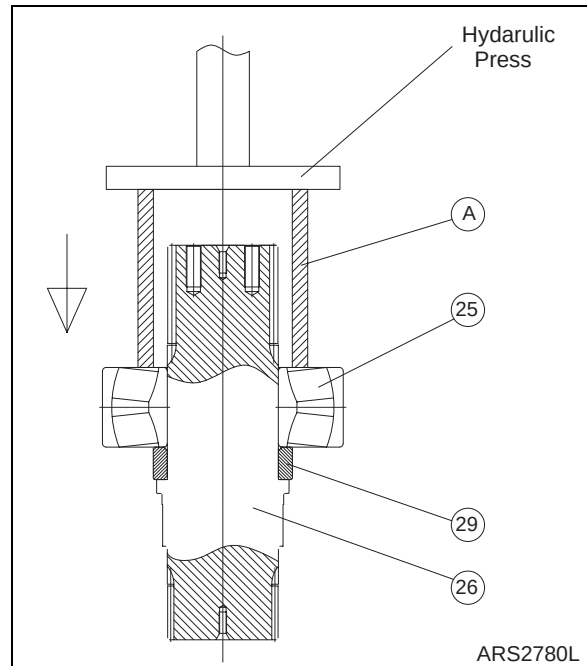


Figure 22 HYDRAULIC PRESS

2. Install plate (24) on shaft (26). Position Jig (A) on collar (22) and press collar (22) on shaft (26) until contact is obtained.

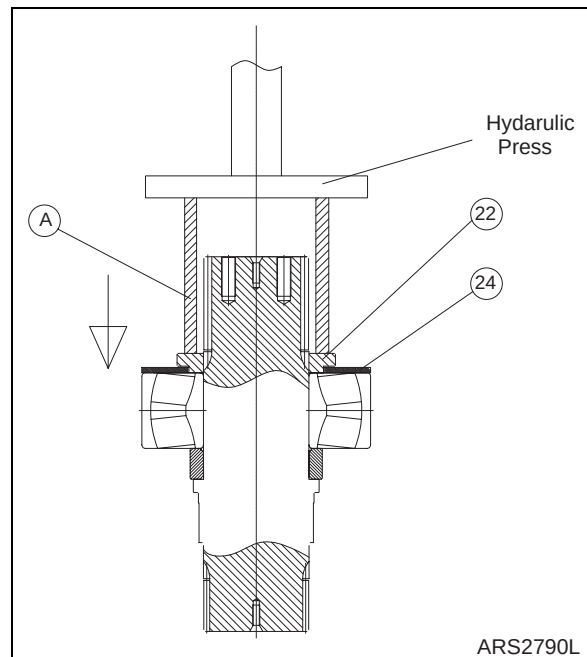


Figure 23 HYDRAULIC PRESS

3. Install pinion gear (19) on shaft assembly. Fasten cover (20) with hex bolts (21) and secure with lock wire (28) diagonally.

NOTE: Apply Loctite #262 to bolt threads.

NOTE: Tighten bolt to 2,700 kg•cm (195 ft lb).

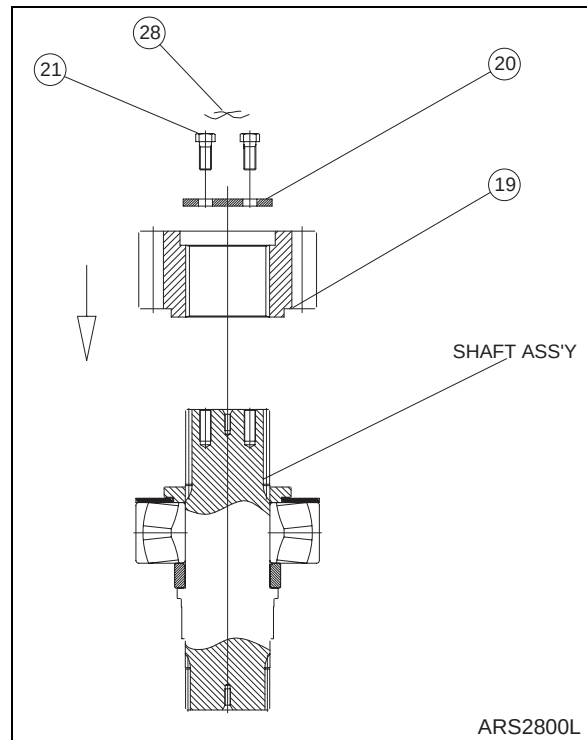


Figure 24

4. Put jig (A) on pinion gear and press shaft assembly with pinion into case (17) until contact is obtained. Install lock ring (18) and turn case over.

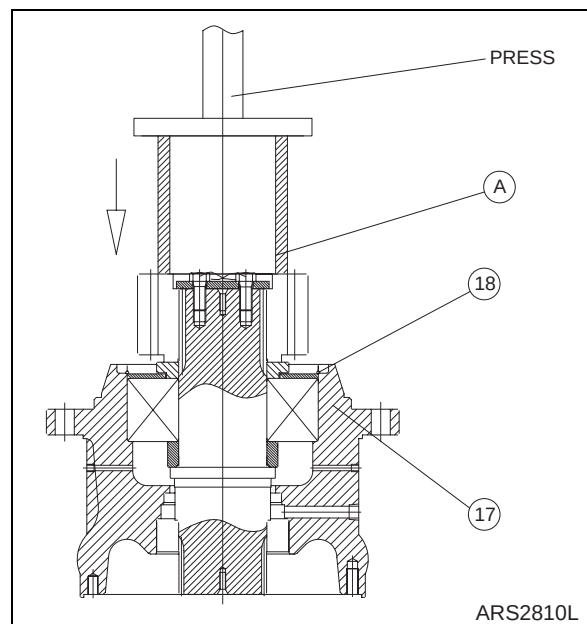


Figure 25

5. Using jig (B), insert seal (23) into case (17).

IMPORTANT

When installing, tap with rubber hammer lightly not to damage seal.

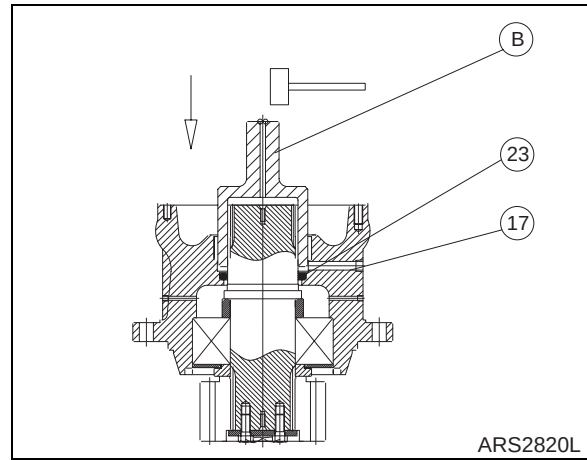


Figure 26

6. Place jig (F) on bearing (27) and press bearing (27) onto shaft assembly until contact is obtained.

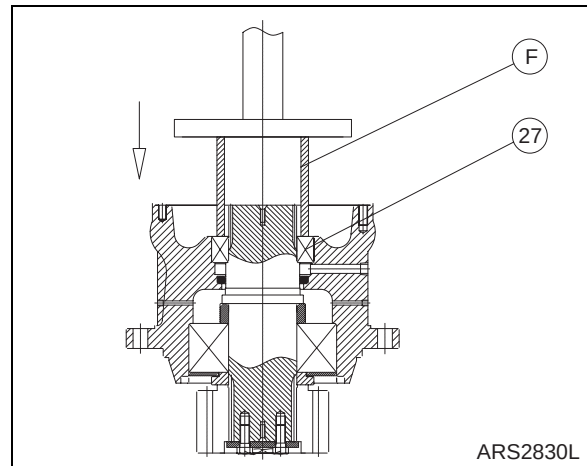


Figure 27

7. Insert lock pin (9) in case (17) and install ring gear (8) on case (17).

NOTE: Coat mating faces of case (17) and ring gear (8) with Loctite #609.

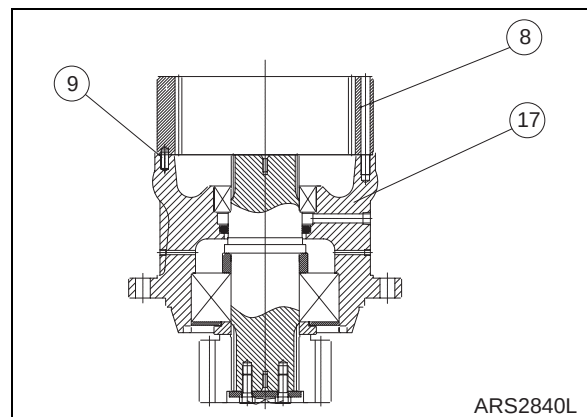


Figure 28

8. Install side plate No. 2 (16) on planetary gear No. 2 (15) and insert it into carrier No. 2 (12). Install shaft No. 2 (13) into carrier No. 2 (12) and planetary gear No. 2 (15). Using a hammer, tap pin (14) into carrier No. 2 (12) and shaft No. 2 (13).

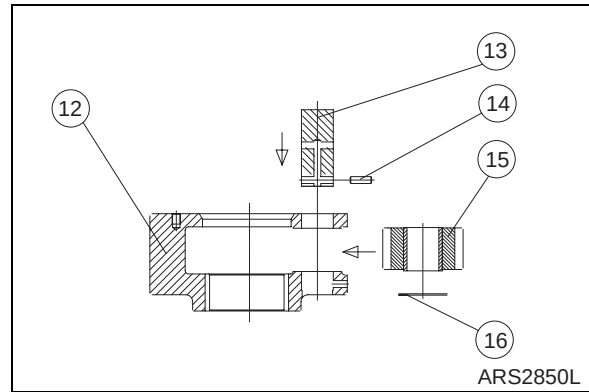


Figure 29

9. Install carrier assembly No. 2 onto ring gear (8) and shaft assembly. Install sun gear No. 2 (11) in carrier assembly No. 2.

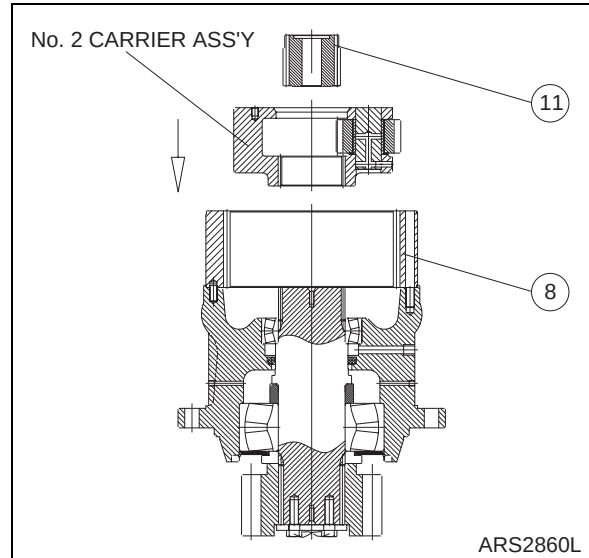


Figure 30

10. Insert thrust plate (10) in sun gear No. 2 (11). Install carrier assembly No. 1 (7) onto ring gear (8) and sun gear No. 2 (11). Install sun gear No. 1 (6) onto carrier assembly No. 1 (7).

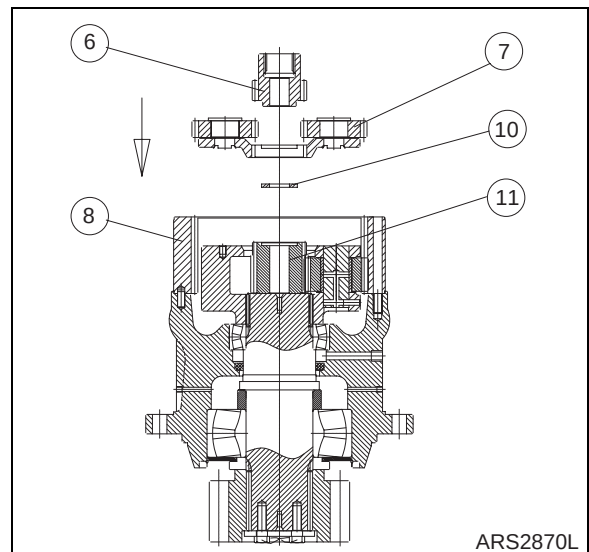


Figure 31

11. Secure cover plate (5) and ring gear (8) onto gear case (17) with socket bolt (4).

NOTE: Coat mating faces of ring gear (8) and cover plate (5) with Loctite #609.

NOTE: Apply Loctite #262 to bolt threads.

NOTE: Tighten bolt to 2,700 kg•cm (195 ft lb).

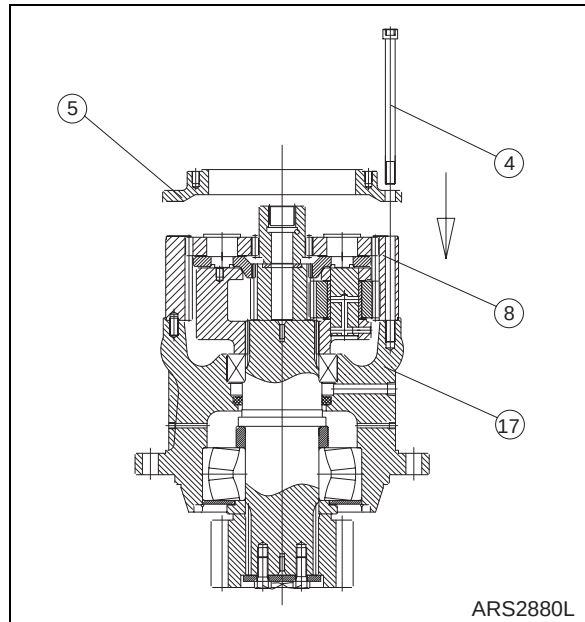


Figure 32

12. Secure motor (1) onto cover plate (5) with socket bolt (2). Install pipe (3-2) onto cover plate (5). Insert oil level gauge (3-1) into pipe.

NOTE: Coat mating faces of cover plate (5) and motor (1) with Loctite #609.

NOTE: Apply Loctite #262 to bolt threads.

NOTE: Tighten bolt to 1,100 kg•cm (875 ft lb).

IMPORTANT

After reassembling, turn gear pinion by hand and check if it is turned smoothly.

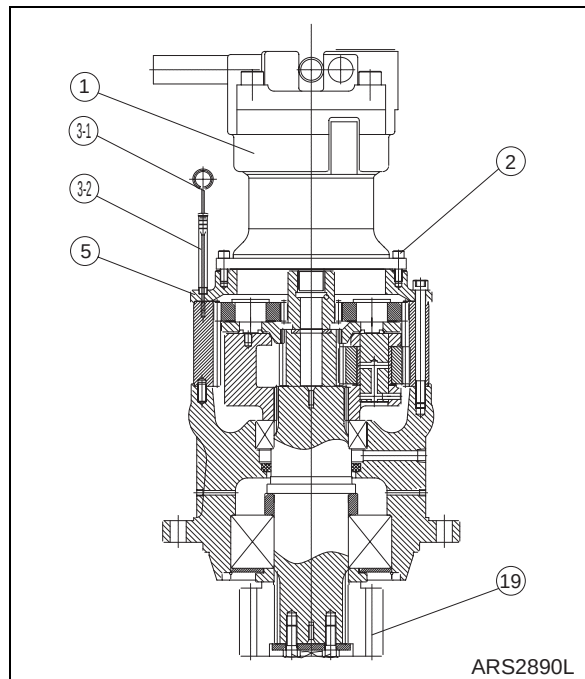


Figure 33

INSTALLATION

1. Coat pinion gear with grease. Refer to operation manual for specifications.
2. Make sure two alignment pins (6, Figure 34) are installed in flange of swing reduction gearbox (5).
3. Using a suitable lifting device, sling swing motor (1, Figure 34) and position swing motor and reduction gearbox (5) as an assembly on unit.
4. Install twelve bolts and washers (4, Figure 34) to secure swing reduction gearbox (5) to frame.

NOTE: Apply Loctite #262 to bolt threads.

NOTE: Tighten bolt to 95 kg•m (690 ft lb).

5. Connect hose (2, Figure 34) to main frame by tightening nut (3).
6. Connect grease lubrication line (7, Figure 34) to reduction gearbox (5).
7. Connect hoses as tagged during removal to swing motor (1, Figure 34).
8. Fill swing reduction gearbox with oil. Refer to operation manual for specifications.

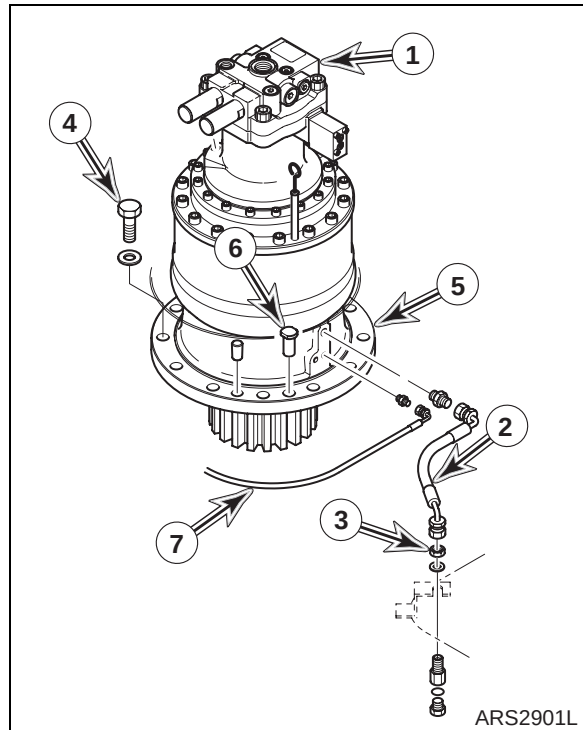


Figure 34

START-UP PROCEDURES

IMPORTANT

If the air is not vented from the system, it will cause damage to the swing motor and bearings.

1. Disconnect drain hose and fill swing motor case with hydraulic oil.
2. Connect the drain hose.
3. Start engine and set throttle at "LOW IDLE" and swing upper structure slowly two full revolutions to the left and right.
4. Shut the engine down and check the hydraulic oil level. Fill hydraulic oil tank to "H" mark on sight gauge.
5. Check for oil leaks and clean all fill and venting locations.

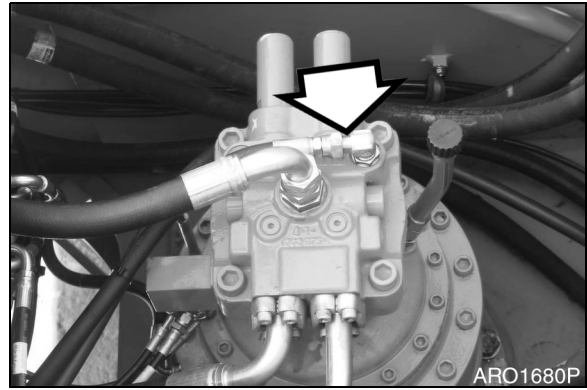


Figure 35

LOWER STRUCTURE AND CHASSIS



TRACK ASSEMBLY



CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that is in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

MODEL	SERIAL NUMBER RANGE
Solar 290LC-V	0001 and Up
Solar 300LC-V	1001 and Up
Solar 340LC-V	1001 and Up

TABLE OF CONTENTS

General Description.....	3
Track Tension.....	3
Cleaning and Inspection (Wear Limits and Tolerances)	6
Track Shoes and Links	10
Track Removal.....	10
Track Installation.....	11
Front Idler Roller.....	12
Parts List	12
Front Idler Roller Disassembly	13
Front Idler Roller Reassembly	15
Lower Roller	16
Parts List	16
Lower Roller Removal	17
Lower Roller Disassembly.....	17
Lower Roller Reassembly	18
Lower Roller Installation.....	19
Upper Roller	20
Parts List	20
Upper Roller Removal	21
Upper Roller Disassembly.....	21
Upper Roller Reassembly	23
Track Spring and Track Adjusting Cylinder	25
Parts List	25

GENERAL DESCRIPTION

The track assembly is composed of the following major components:

1. Track
2. Front Idler Roller
3. Upper Roller
4. Lower Roller
5. Track Spring and Track Adjustment Cylinder

TRACK TENSION



WARNING!

Safely measuring track tension requires two people. One person must be in the operator's seat, running the controls to keep one side frame in the air, while the other person makes dimensional checks. Take all necessary precautions to make sure the machine won't move or shift position during service. Warm up the engine to prevent stalls, travel the excavator to an area that provides level, uniform ground support and/or use support blocks when necessary.

The track adjusting mechanism is under very high pressure. NEVER release pressure too suddenly. The grease cylinder valve should never be backed off more than 1 complete turn from the fully tightened down position. Bleed off pressure slowly and keep your body away from the valve at all times.

Track shoe link pins and bushings wear with normal usage, reducing track tension. Periodic adjustment is necessary to compensate for wear and it may also be required by working conditions.

1. Track tension is checked by jacking up one side of the excavator. See Figure 1. Place blocking under frame while taking measurement.

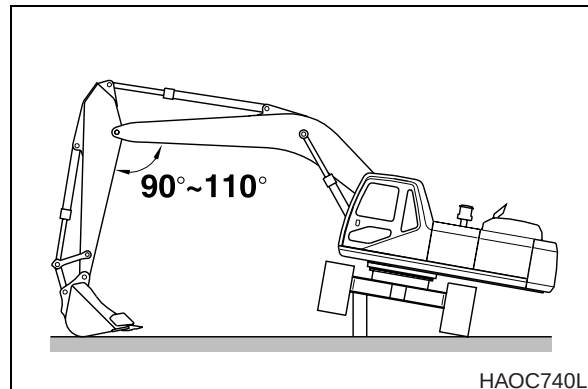


Figure 1

2. Measuring the distance (A, Figure 2) between the bottom of the side frame and the top of the lowest crawler shoe. Recommended tension for operation over most types of terrain is distance "B" on below table.

NOTE: *This measurement can be thrown off if there is too much mud or dirt or other material in the track assembly. Clean off the tracks before checking clearance.*

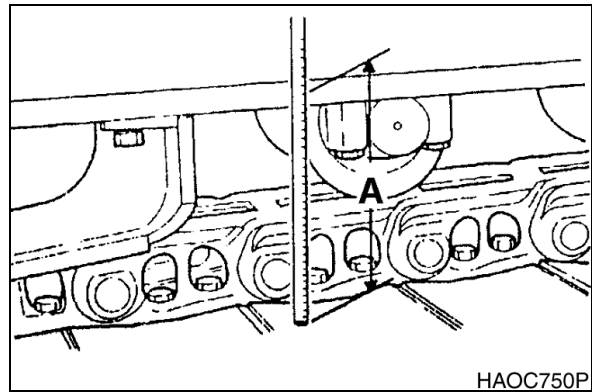


Figure 2

3. Too little sag in the crawler track (less than clearance distance "C" on below table) can cause excessive component wear. The recommended adjustment can also be too tight causing accelerated stress and wear if ground conditions are wet, marshy or muddy, or if the ground is hard and full of rocks or gravel.
4. The increased clearance recommended for muddy ground conditions is between distance "D" on below table. The clearance should be approximately distance "E" on below table for operation over gravel, rocky terrain, or over sand or snow.

Terrain Type	Distance "A"	
	Solar 290LC-V Solar 300LC-V	Solar 340LC-V
Normal "B"	320 - 340 mm (12.60 - 13.39 in)	330 - 360 mm (13.0 - 14.17 in)
Minimum "C"	320 mm (12.60 in)	330 mm (13.0 in)
Muddy "D"	340 - 370 mm (13.39 - 14.57 in)	360 - 410 mm (14.17 - 16.14 in)
Gravel, Rocky, Sand or Snow "E"	370 mm (14.57 in)	410 mm (16.14 in)



WARNING!

The track adjusting mechanism is under very high pressure. NEVER release pressure too suddenly. The grease cylinder valve should never be backed off more than 1 complete turn from the fully tightened down position. Bleed off pressure slowly and keep your body away from the valve at all times.

5. Track tension adjustments are made through the grease fitting (1, Figure 3) in the middle of each side-frame. Adding grease increases the length of an adjustment cylinder (2). The longer the adjustment cylinder, the greater the pressure on the tension spring pushing the track idler wheel outward.
6. If there is not enough slack or clearance in the tracks and the adjustment is too tight, the idler wheel and adjusting cylinder can be retracted by bleeding off grease thru hole in adjustment cylinder (2, Figure 3).

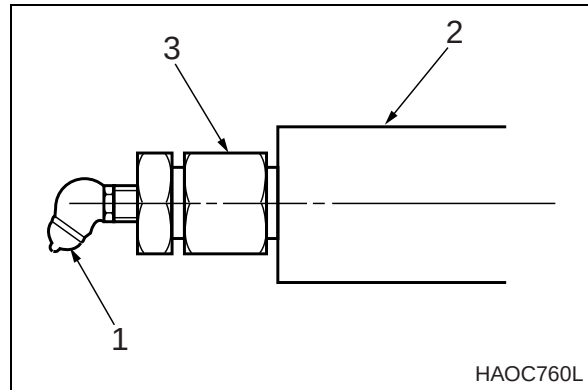


Figure 3

CLEANING AND INSPECTION (WEAR LIMITS AND TOLERANCES)

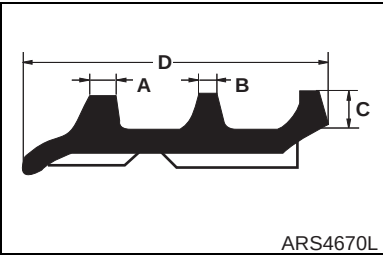
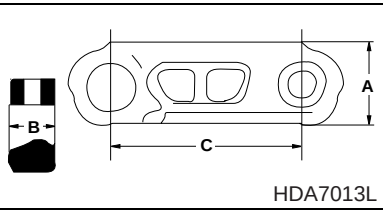


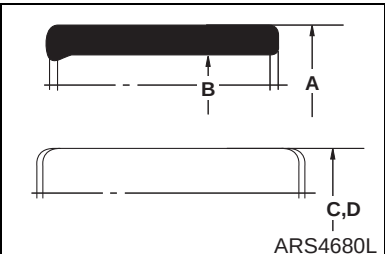
Refer to the "Welding Precautions and Guidelines" information in "General Maintenance Procedures" section for general recommendations and specific safety precautions, before starting any lower travel frame component rebuilding procedure.

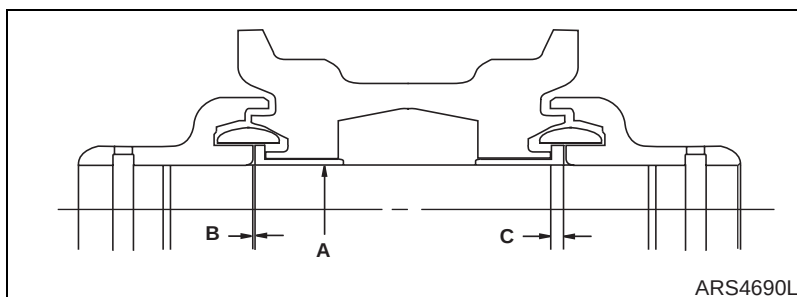
The tables that follow provide factory-specified dimensional limits (as-new condition, recommended service and replacement limit) for lower travel frame components.

Recommended maintenance to renew most listed components requires welding on additional material and grinding off excess. Some components must be replaced before the service limit is exceeded. No maintenance or renewal is possible.

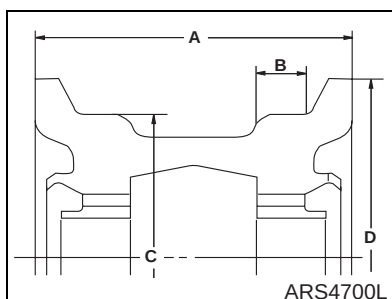
Compare the values in the tables with dimensions and profiles shown in the adjacent figures.

Component / Reference Dimensions	Reference	Normal (New) Dimension	Recommended Limit for Maintenance	Limit for Use (Repair - P or Replace - R)
Standard 600 mm Shoe  Figure 4	A	Solar 290LC-V Solar 300LC-V	24 mm (0.945")	
		Solar 340LC-V	26 mm (1.024")	
	B		18 mm (0.709")	
	C	Solar 290LC-V Solar 300LC-V	26 mm (1.024")	20 mm (0.787") 16 mm [P] (0.603")
		Solar 340LC-V	31 mm (1.22")	25 mm (0.984") 21 mm [P] (0.827")
	D		232.5 mm (9.154")	
Track link, master link  Figure 5	A		116.4 mm (4.583")	108 mm (4.252") 103 mm [P] (4.055")
	B		50 mm (1.969")	45 mm (1.772") 40 mm [P] (1.575")
	C*		203.2 mm (8.0")	206 mm (8.110") 208 mm [R] (8.189")
	*Check and record the pitch of at least 5 links. Use average of all measurements to assess required service or action. Master links must be replaced, they cannot be renewed or rebuilt.			

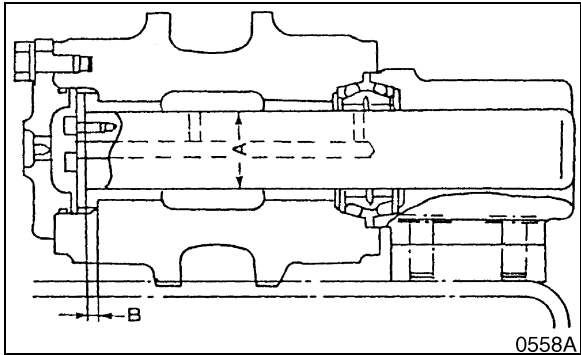
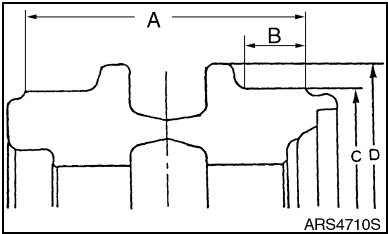
Component / Reference Dimensions	Reference	Normal (New) Dimension	Recommended Limit for Maintenance	Limit for Use (Repair - P or Replace - R)
Track link, master pin bushing, master bushing  Figure 6	A	66.65 mm (2.624")	62.5 mm (2.461")	59.0 mm [R] (2.323")
	B	44.8 mm (1.764")	47.0 mm (1.850")	49.0 mm [R] (1.929")
	C	44.5 mm (1.752")	42.5 mm (1.673")	41.5 mm [R] (1.634")
	D*	44.22 mm (1.741")	42.3 mm (1.665")	41.2 mm [R] (1.622")
	* Master pin			

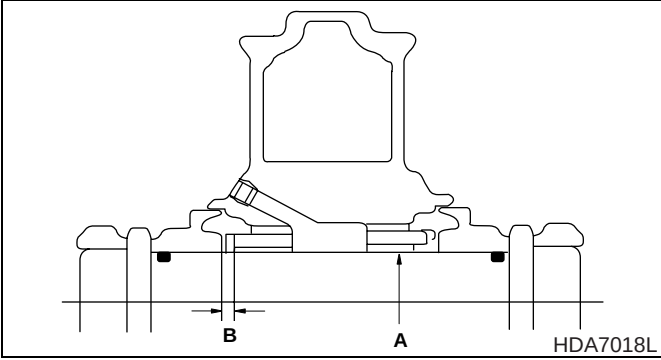
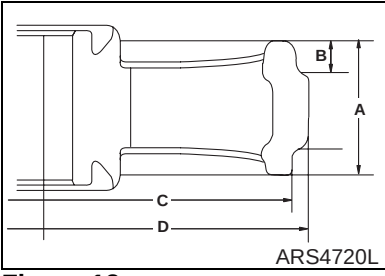

Figure 7

Lower roller, axle	A	75 mm (2.953")	74.5 mm (2.933")	74.2 mm [R] (2.921")
Lower roller, bushing	A		75.5 mm (2.972")	76 mm [R] (2.992")
Axle-bushing, clearance			1.0 mm (0.039")	1.8 mm (0.071")
Lower roller, axle	B		1.0 mm (0.039")	1.8 mm (0.071")
Lower roller, bushing	B	5 mm (0.197")	4.50 mm (0.177")	4.2 mm (0.165")

Lower roller dimensions

Figure 8

A	252 mm (9.921")		
B	53 mm (2.087")	59 mm (2.323")	62 mm [P] (2.441")
C	168 mm (6.614")	156 mm (6.142")	154 mm [P] (6.063")
D	205 mm (8.071")	193 mm (7.598")	190 mm [P] (7.480")

Component / Reference Dimensions	Reference	Normal (New) Dimension	Recommended Limit for Maintenance	Limit for Use (Repair - P or Replace - R)
 Figure 9				
Upper roller, axle	A	55 mm (2.165")	54.5 mm (2.146")	54.2 mm [R] (2.134")
Upper roller, bushing	A		55.5 mm (2.185")	56 mm [R] (2.205")
Axle-bushing, clearance			1.0 mm (0.039")	1.8 mm (0.071")
Flange thickness, bushing	B	6.5 mm (0.256")	5.5 mm (0.217")	5.0 mm (0.197")
Upper idler				
 Figure 10	A	188 mm (7.402")		
	B	45 mm (1.772")	52 mm (2.047")	54 mm [P] (2.126")
	C	142 mm (5.591")	135 mm (5.315")	130 mm [P] (5.118")
	D	175 mm (6.890")		

Component / Reference Dimensions	Reference	Normal (New) Dimension	Recommended Limit for Maintenance	Limit for Use (Repair - P or Replace - R)
 Figure 11				
Front idler, axle	A	90 mm (3.543")	89.5 mm (3.524")	89.2 mm [R] (3.512")
Front idler, bushing	A		90.5 mm (3.563")	91 mm [R] (3.583")
Axle-bushing, clearance			1.0 mm (0.039")	1.8 mm (0.071")
Gap between bushing and side collar (Total amount for both sides)	B		1.0 mm (0.039")	1.5 mm (0.059")
Front idler, bushing	B	8 mm (0.315")	7.0 mm (0.276")	6.5 mm (0.256")
Front idler  Figure 12	A	200 mm (7.874")		
	B	50 mm (1.969")	53 mm (2.087")	55 mm [P] (2.165")
	C	600 mm (23.622")	592 mm (23.307")	588 mm [P] (23.150")
	D	650 mm (25.591")		

TRACK SHOES AND LINKS

TRACK REMOVAL

1. Position machine on a smooth level surface with adequate room for forward and reverse travel.
2. Relieve track tension. Refer to "Track Tension" in this section for procedure.
3. Move machine until master link (1, Figure 13) is positioned at approximately 10 o'clock from top position on travel reduction gearbox.
4. Remove four nuts and bolts (2, Figure 13) holding shoe to link. Remove enough shoes to make access to lock pin easier.

NOTE: *Support track shoes with blocking so that when master pin (4, Figure 13) is removed track will not fall.*

5. Straighten lock pin (3, Figure 13) and remove it from master pin (4). Discard lock pin.
6. Remove master pin from master links.
7. Move unit forward until entire track is laying on ground.

NOTE: *Do not drive unit off track.*

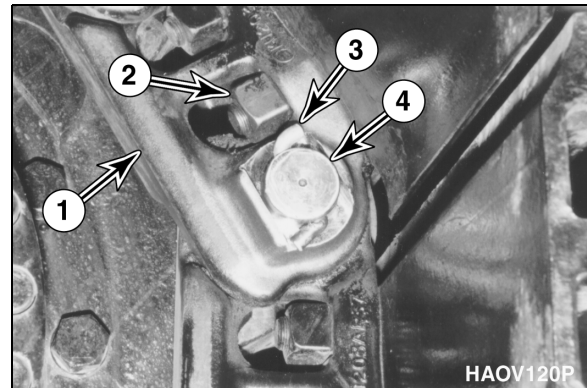


Figure 13

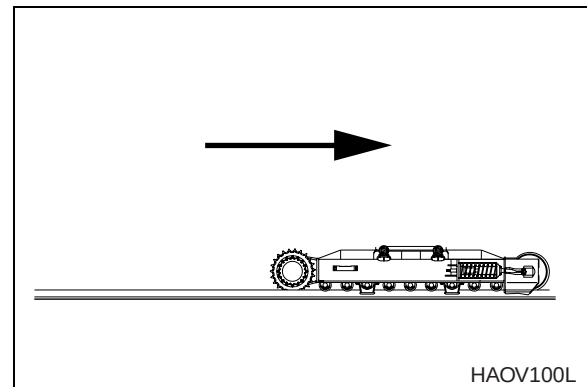


Figure 14

8. Rotate upper structure to 90° from track.
Use bucket and boom to raise track frame off track.
9. Position blocking under frame.

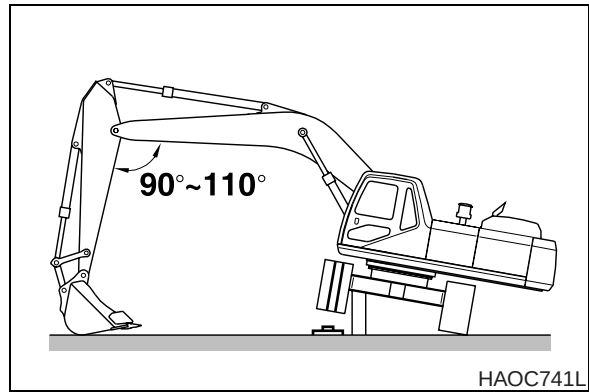


Figure 15

TRACK INSTALLATION

1. Lay rebuilt or new track into position under track frame. End of track should be positioned under front idler roller.
2. With upper structure at 90° to track frame. Use bucket and boom to raise track frame off blocking.
3. With blocking removed, lower track frame onto track. Make sure all rollers are properly positioned on track.
4. Move unit backwards while feeding track up over front idler roller. Continue to pull track back until it engages drive sprocket.
5. Align master links and install master pin.
6. Insert new lock pin in master pin. Bend end of pin over so it is pointing in opposite direction of other end as shown.
7. Apply track tension. Refer to "Track Tension" in this section for procedure.

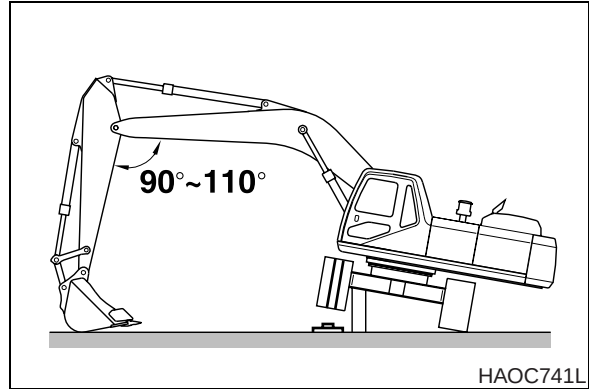


Figure 16

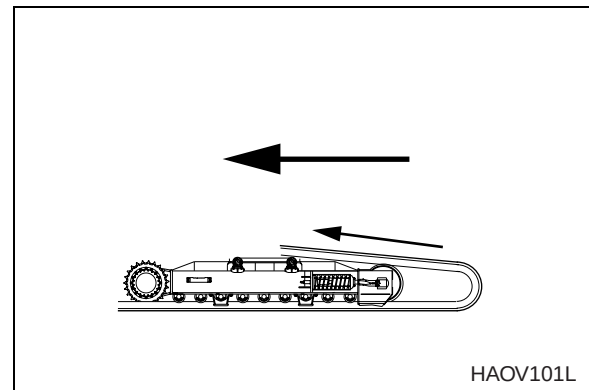


Figure 17

FRONT IDLER ROLLER

PARTS LIST

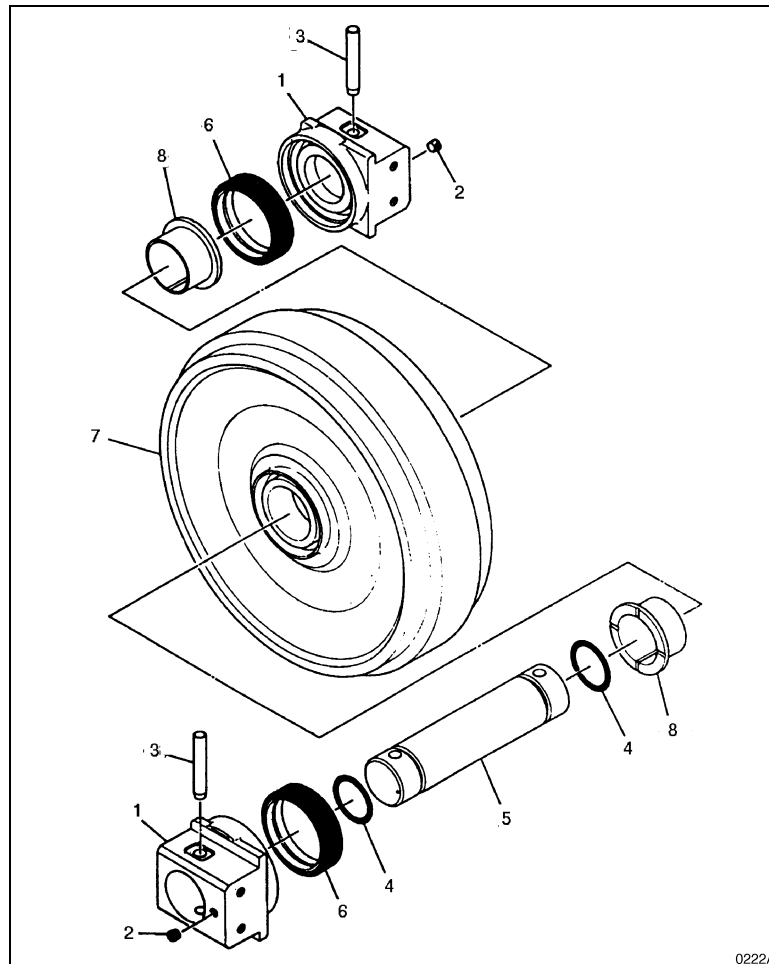


Figure 18

Reference Number	Description
1	Bearing
2	Plug
3	Pin
4	O-ring

Reference Number	Description
5	Axle
6	Group Seal
7	Idler
8	Bushing

FRONT IDLER ROLLER DISASSEMBLY

1. Remove plug (2, Figure 19) and drain oil from roller assembly (1).

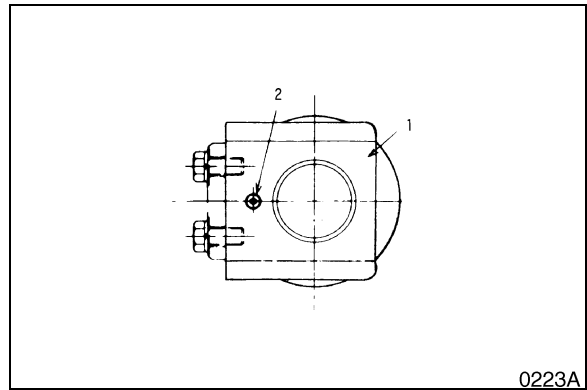


Figure 19

2. Separate the pin (3, Figure 20) from the bearing (1).

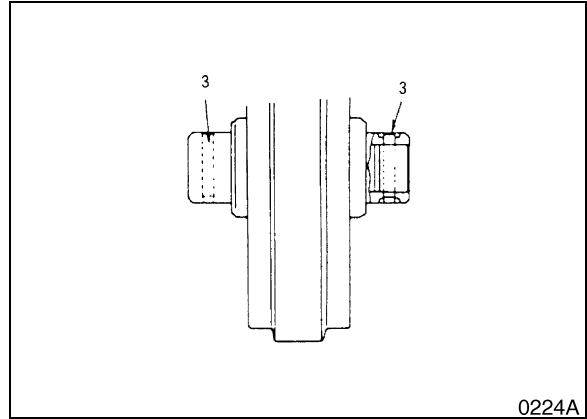


Figure 20

3. Use a press to remove the bearing from the axle. Separate the O-ring (4, Figure 21) from the axle and insert it into the bearing.

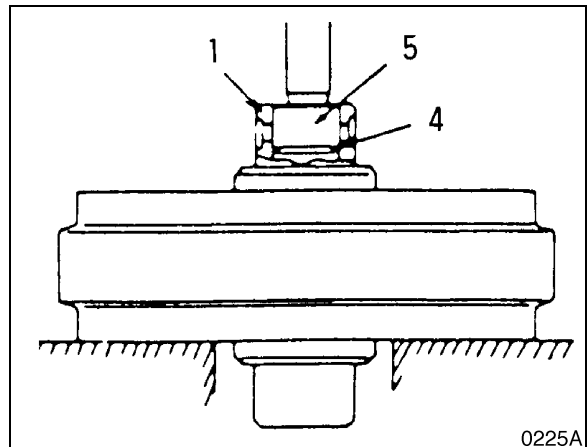


Figure 21

4. Detach the group seal (6, Figure 22) from the idler (7) and bearing (1).

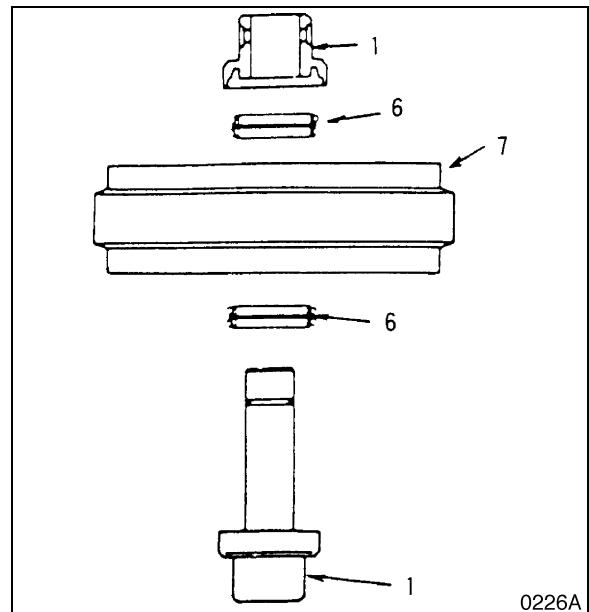


Figure 22

5. Use a press to separate the axle (5, Figure 23), O-ring (4) and bearing (1).

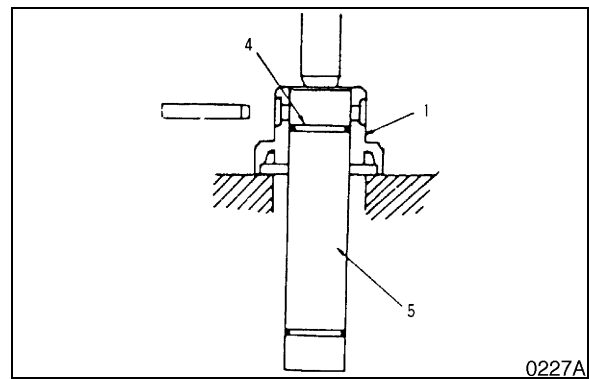


Figure 23

6. Remove bushing (8, Figure 24) with the press and special tool (ST-1909).

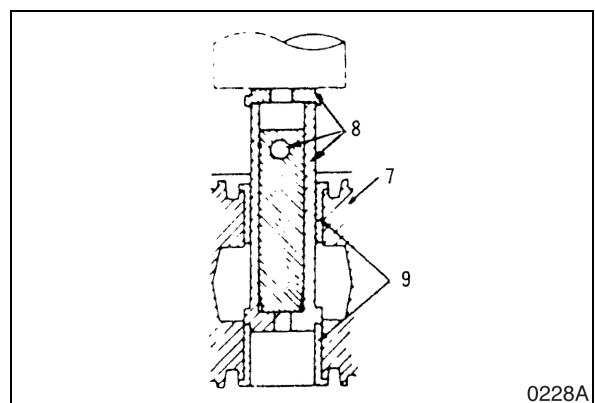


Figure 24

FRONT IDLER ROLLER REASSEMBLY

1. Degrease, clean and dry all parts before reassembly. Insert bushing (8, Figure 25) into the idler (7).
2. Grease O-ring (4, Figure 25) and insert it into the axle.
3. Align the bearing (1, Figure 25) and axle (5) holes and pin (3) them together.

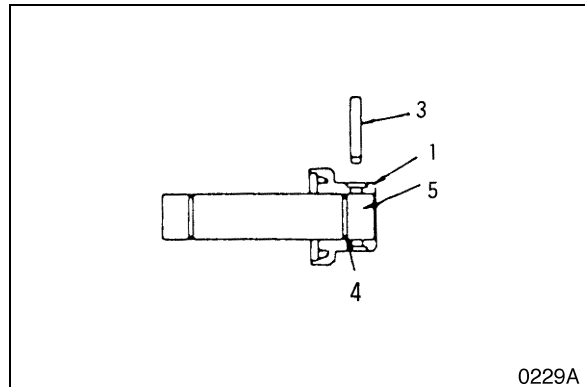


Figure 25

4. Install group seal (6, Figure 26) inside the idler (7) and bearing (1).

NOTE: Apply clean engine oil to the joint side of the group seal. Apply grease to the group seal O-ring.

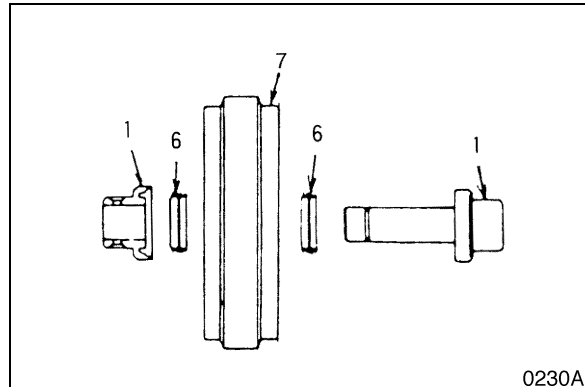


Figure 26

5. Install idler (7, Figure 27) on the axle.
6. Install bearing (1, Figure 27) and pin (3) to the axle.

NOTE: Fill the idler assembly with new engine oil with approximately 260 cc (1/2 pint).

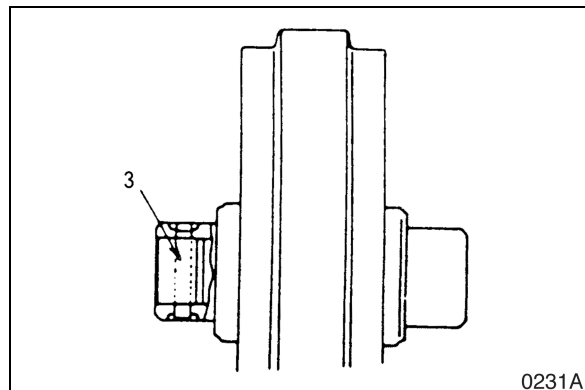


Figure 27

LOWER ROLLER

PARTS LIST

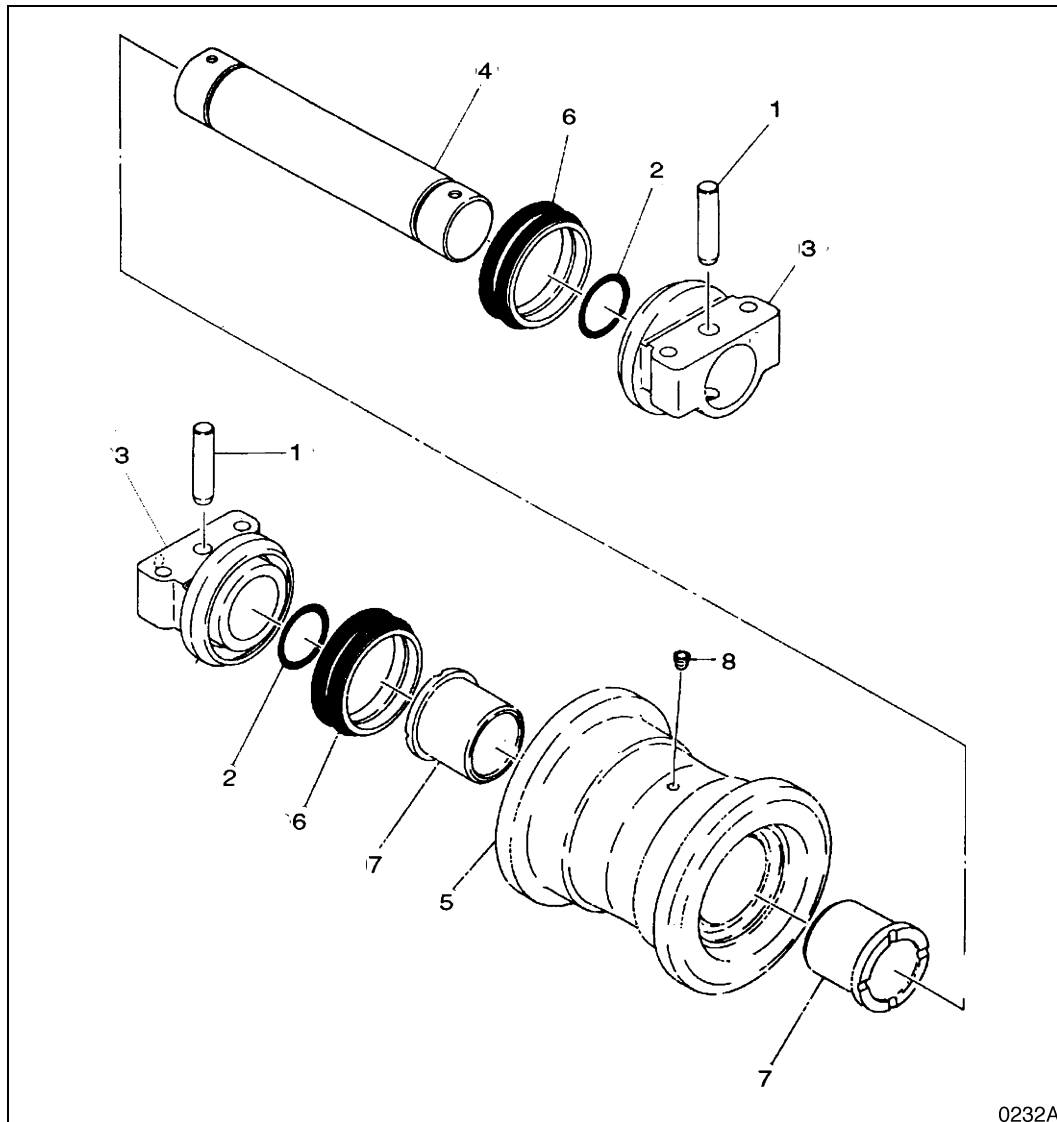


Figure 28

Reference Number	Description
1	Pin
2	O-ring
3	Collar
4	Axle

Reference Number	Description
5	Roller
6	Group Seal
7	Bushing
8	Plug

LOWER ROLLER REMOVAL

1. Relieve track tension. Refer to "Track Tension" in this section for procedure.
2. Swing upper structure at 90° to frame.
3. Using bucket raise track off ground and place blocking under frame.
4. Remove four bolts and lower roller assembly from track frame. There is an alignment pin on each end of lower roller assembly.

NOTE: To gain access to some rollers the link guard may have to be removed. Remove four spring washers and bolts to remove guard.

NOTE: If additional track clearance is required, remove upper rollers before raising track.

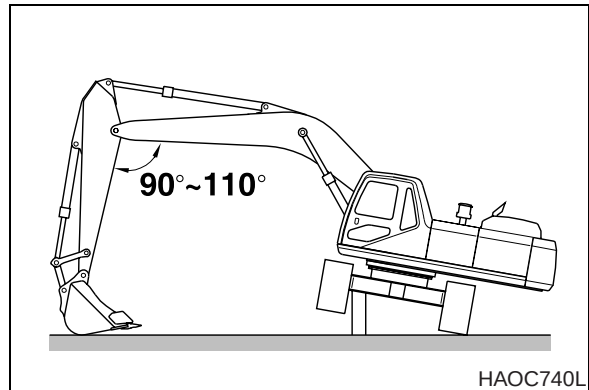


Figure 29

LOWER ROLLER DISASSEMBLY

1. Remove plug from the collar and drain oil.
2. Pull the pin (1, Figure 30) from the collar.

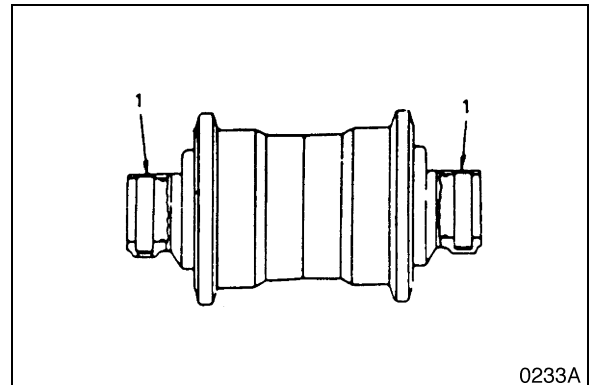


Figure 30

3. Separate the collar (3, Figure 31) from the axle, using a press.

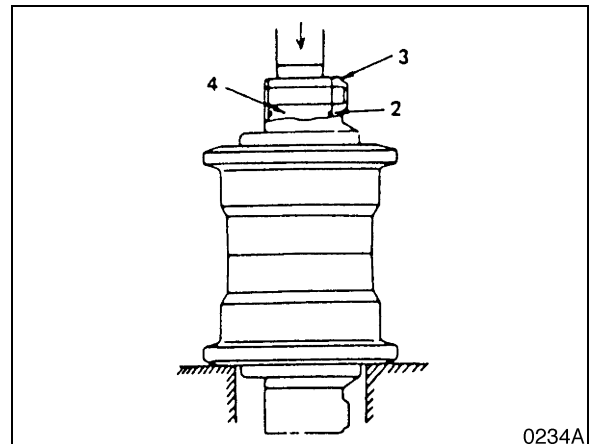


Figure 31

4. Detach O-rings (2, Figure 32) from the axle.
5. Separate group seals (6, Figure 32) from the collar and roller (5).
6. Detach collar (3, Figure 32) and O-rings (2) from the axle, using a press.

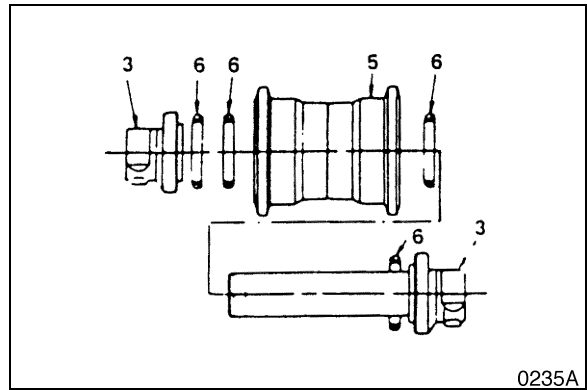


Figure 32

LOWER ROLLER REASSEMBLY

1. Degrease, clean and dry all parts before reassembly. Insert bushing (7, Figure 33) into roller.
2. Apply grease to the O-rings (2, Figure 33) and insert into axle.

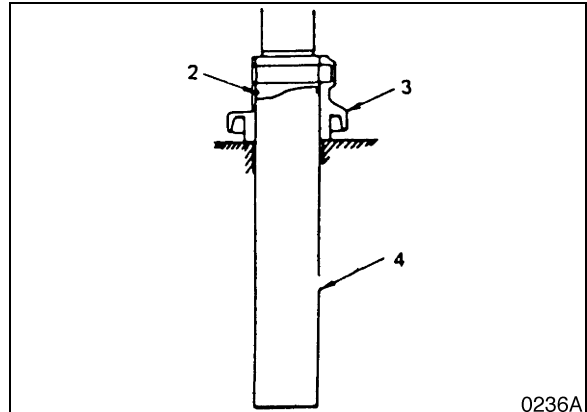


Figure 33

3. Align collar (3, Figure 34) and axle (4) pin holes and pin (1) the collar.

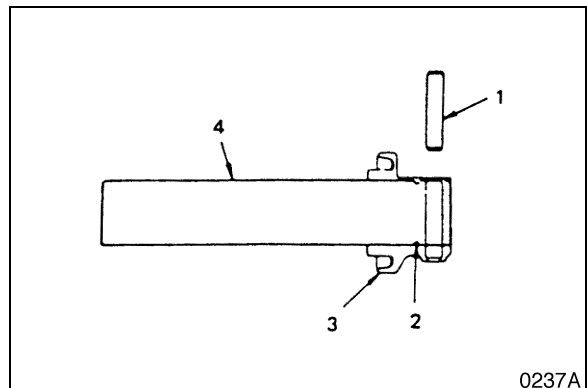


Figure 34

4. Insert group seals (6, Figure 35) into the roller (5) and collar (3).

NOTE: Apply clean engine oil to the joint side of the group seal. Apply grease to the group seal O-ring.

5. Slide the axle inside the roller.

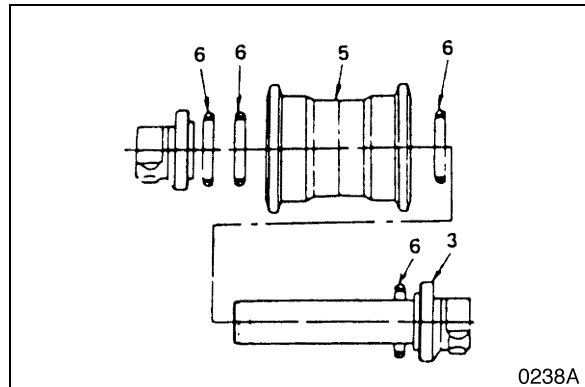


Figure 35

6. Install the collar (3, Figure 36), O-ring (2), and pin (1) on the remaining side.
7. Fill with clean engine oil with approximately 350 cc (3/4 pint).

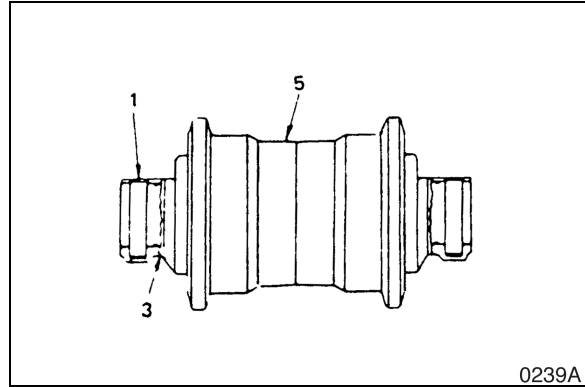


Figure 36

LOWER ROLLER INSTALLATION

1. Install four bolts to hold lower roller assembly to track frame.

NOTE: To gain access to some rollers a link guard may have to be removed. Remove four spring washers and bolts to remove guard.

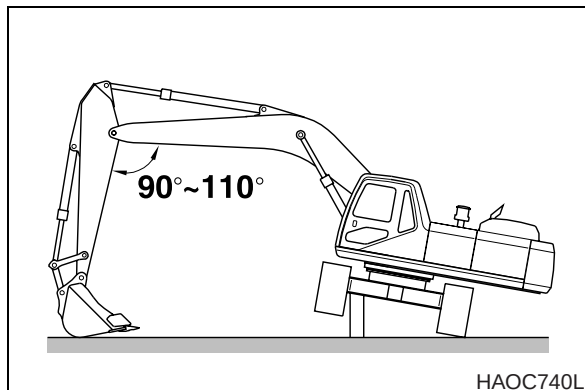


Figure 37

UPPER ROLLER

PARTS LIST

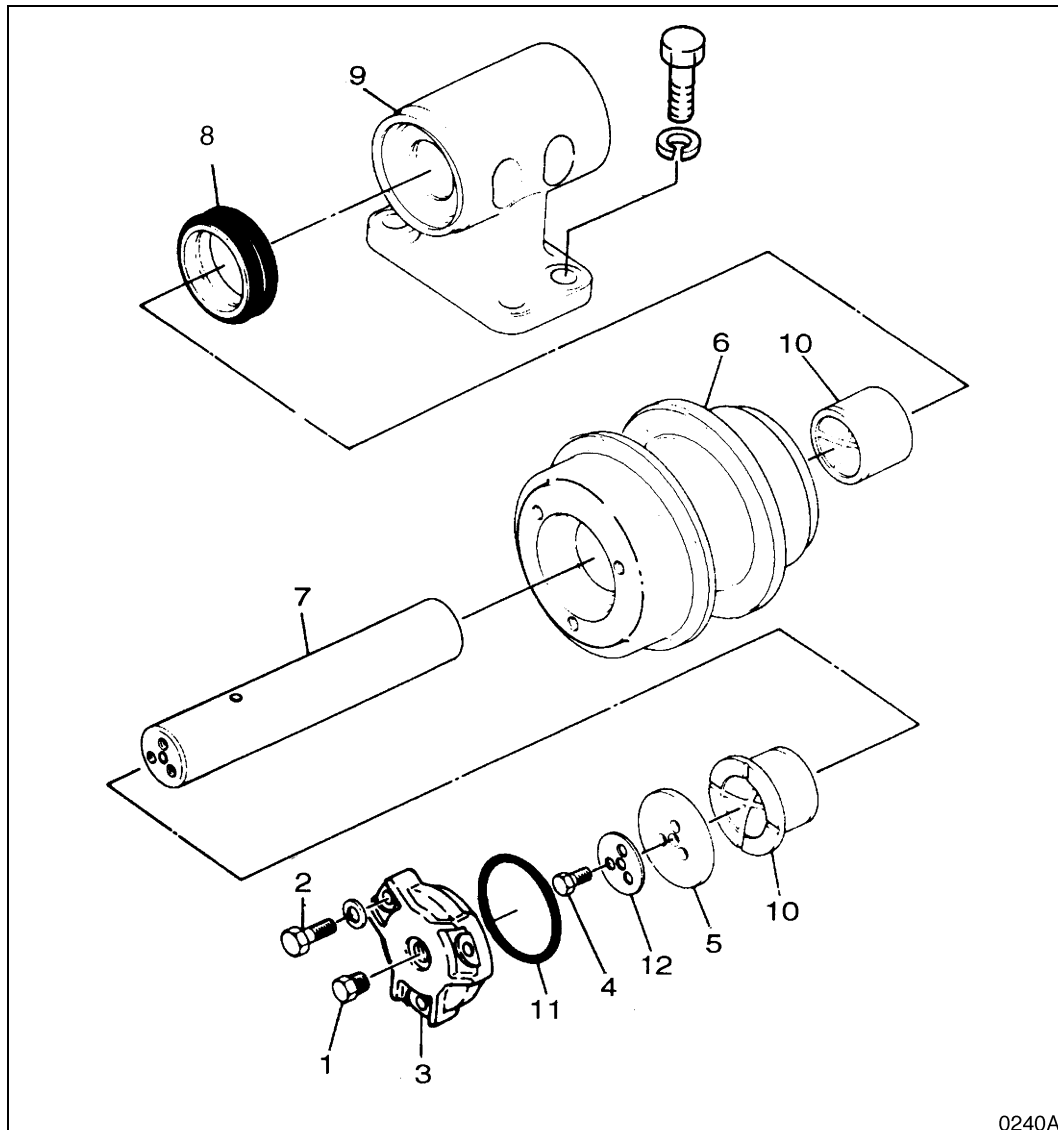


Figure 38

Reference Number	Description
1	Plug
2	Bolt
3	Cover
4	Bolt
5	Washer
6	Roller

Reference Number	Description
7	Axle
8	Group Seal
9	Bracket
10	Bushing
11	O-ring
12	Lock Washer

UPPER ROLLER REMOVAL

1. Relieve track tension. See This will allow track to be raised so that links clear top of roller.
2. Position a bottle jack on top of track frame and apply pressure to track shoe.
3. Remove mounting hardware holding upper roller assembly to track frame.



Figure 39

UPPER ROLLER DISASSEMBLY

1. Remove the plug (1, Figure 40) from the cover and drain oil.
2. Remove the bolts and cover (3, Figure 41). Detach bolts (4) and washer (5).
3. Separate the roller (6, Figure 42) from the axle (7).

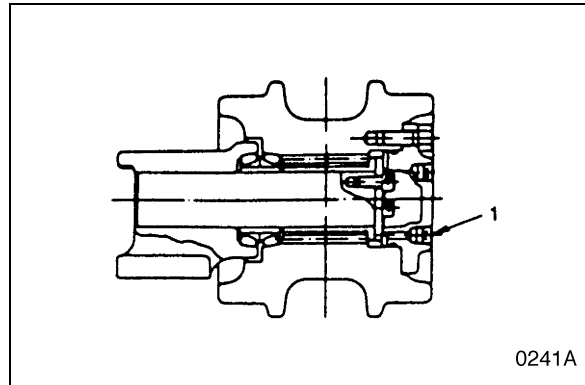


Figure 40

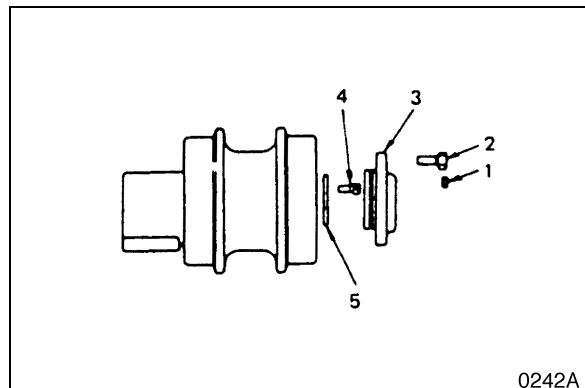


Figure 41

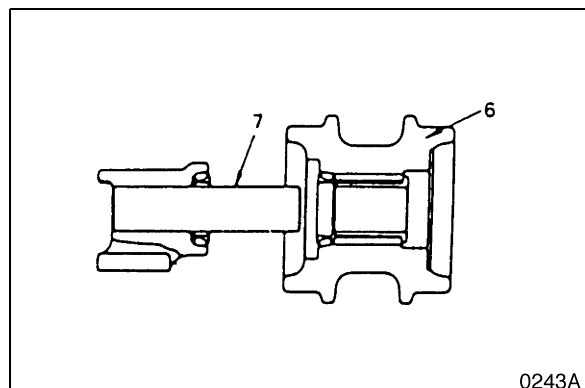


Figure 42

4. Separate the group seal (8, Figure 43) from the roller and bracket (9).

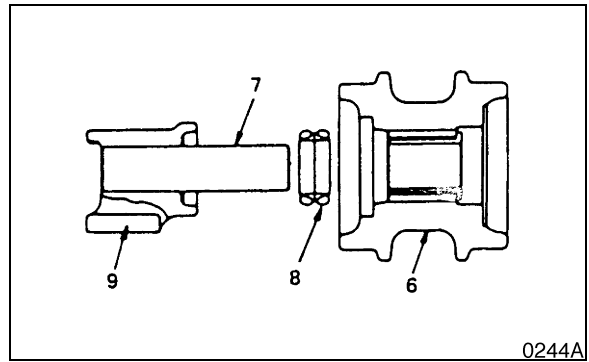


Figure 43

5. Separate the bushing (10, Figure 44) from the roller with a press and special tool (ST-1919).

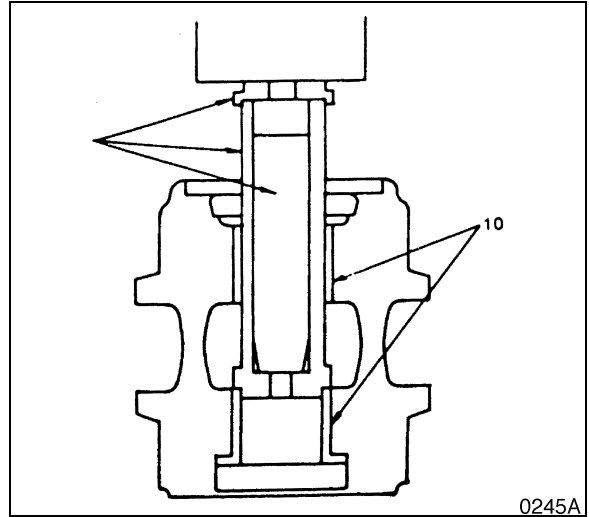


Figure 44

UPPER ROLLER REASSEMBLY

1. Degrease, clean and dry all parts before reassembly. Insert bushing (10, Figure 45) into the roller (6).

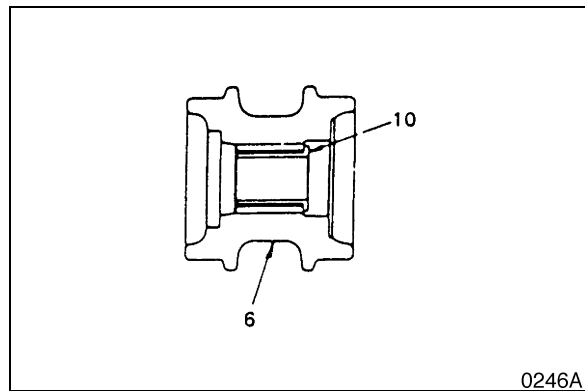


Figure 45

2. Insert group seal (8, Figure 46) into the roller (6) and bushing.

NOTE: Apply clean engine oil to the joint side of the group seal. Apply grease to the group seal O-ring.

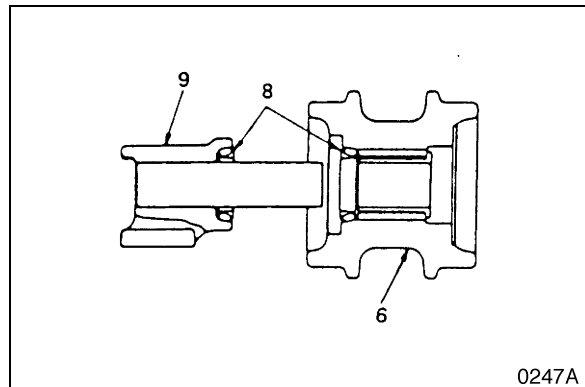


Figure 46

3. Install the axle, washer (5, Figure 47) and bolt (4).
4. Attach group seal (8, Figure 38) to the roller (6, Figure 47) and cover (3).
5. Insert the O-ring (11, Figure 47) to the cover. Attach cover (3) and bolt (2) to the roller.
6. Fill with engine oil.

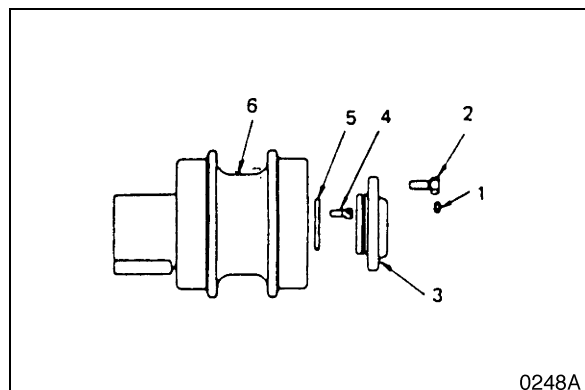


Figure 47

7. Tighten plug (1, Figure 48).

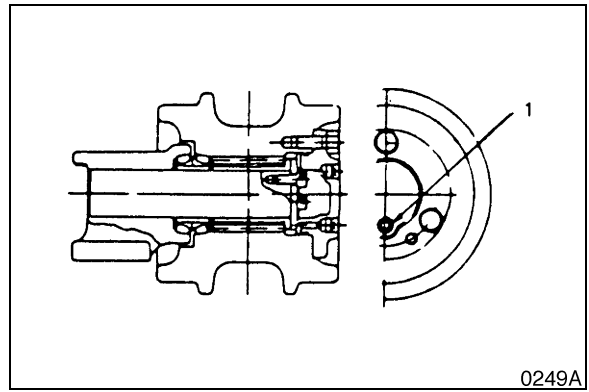


Figure 48

TRACK SPRING AND TRACK ADJUSTING CYLINDER

PARTS LIST

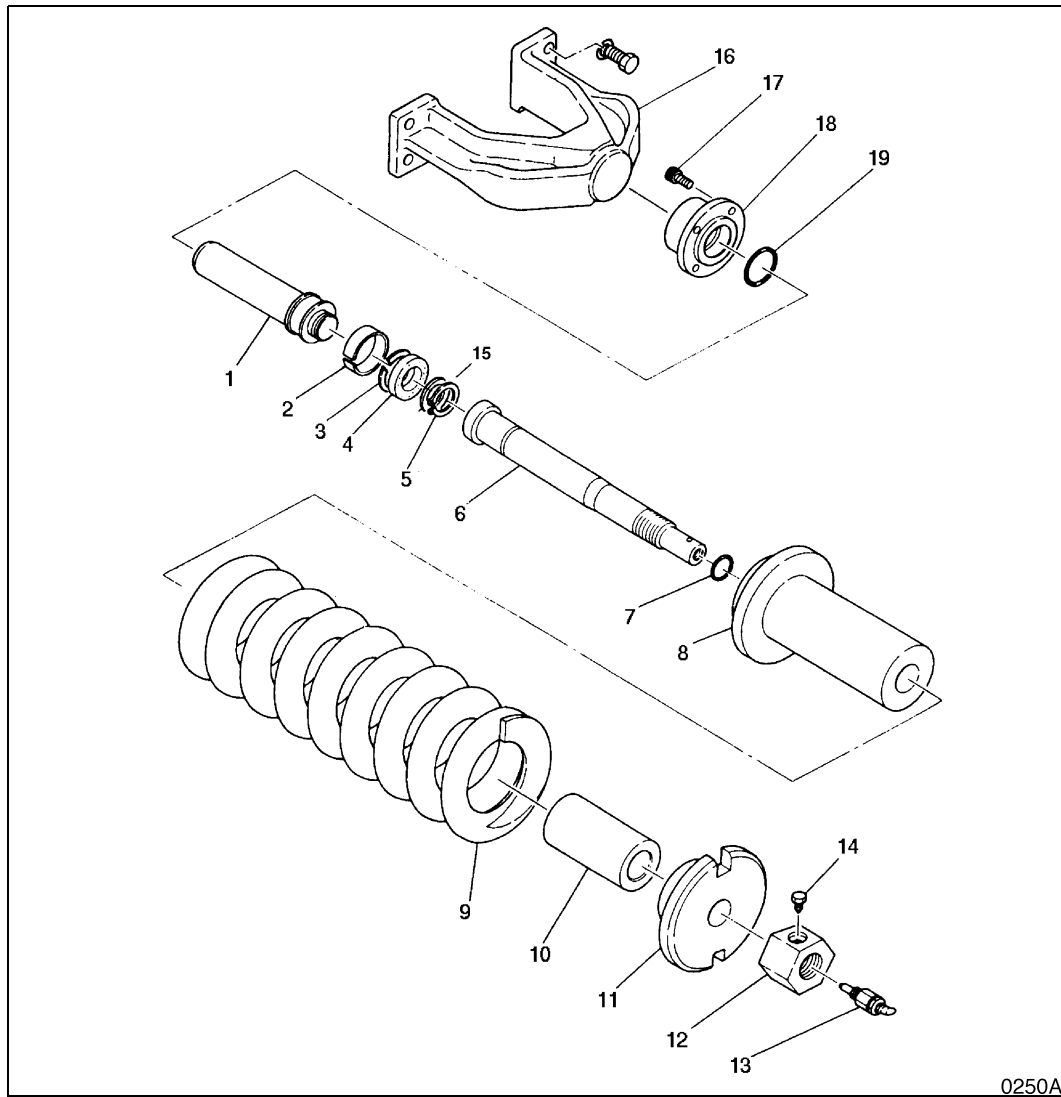


Figure 49

0250A

Reference Number	Description
1	Piston Rod
2	Piston Ring
3	Backup Ring
4	Packing
5	Retaining Ring
6	Rod
7	O-ring
8	Cylinder
9	Spring
10	Spacer

Reference Number	Description
11	Flange
12	Nut
13	Valve
14	Bolt
15	Plate
16	Yoke
17	Socket Bolt
18	Flange
19	O-ring

ENGINE AND DRIVE TRAIN



AIR-CONDITIONER



CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that is in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

MODEL	SERIAL NUMBER RANGE
Solar 300LC-V	1001 and Up
Solar 300LL	1001 and Up
Solar 340LC-V	1001 and Up
Solar 420LC-V	1001 and Up
Solar 470LC-V	1001 and Up

TABLE OF CONTENTS

General Description.....	3
Refrigerant Circulation.....	5
Control Panel.....	7
Control Specifications.....	8
Temperature Level Control and Display.....	9
Air Discharge According to Path Selection.....	10
Air-conditioning System Circuit Diagram.....	12
Troubleshooting	14
Weight of R134a Gas Used In Machines	17
Refrigerant System Repairs	18
Refrigerant Safe Handling Procedures	18
Repair and Replacement Procedure.....	19
Refrigerant Recovery	21
Vacuuming Refrigerant System.....	21
Leakage Check	22
Refrigerant Charging.....	23
Inspecting System For Leakage.....	25

GENERAL DESCRIPTION

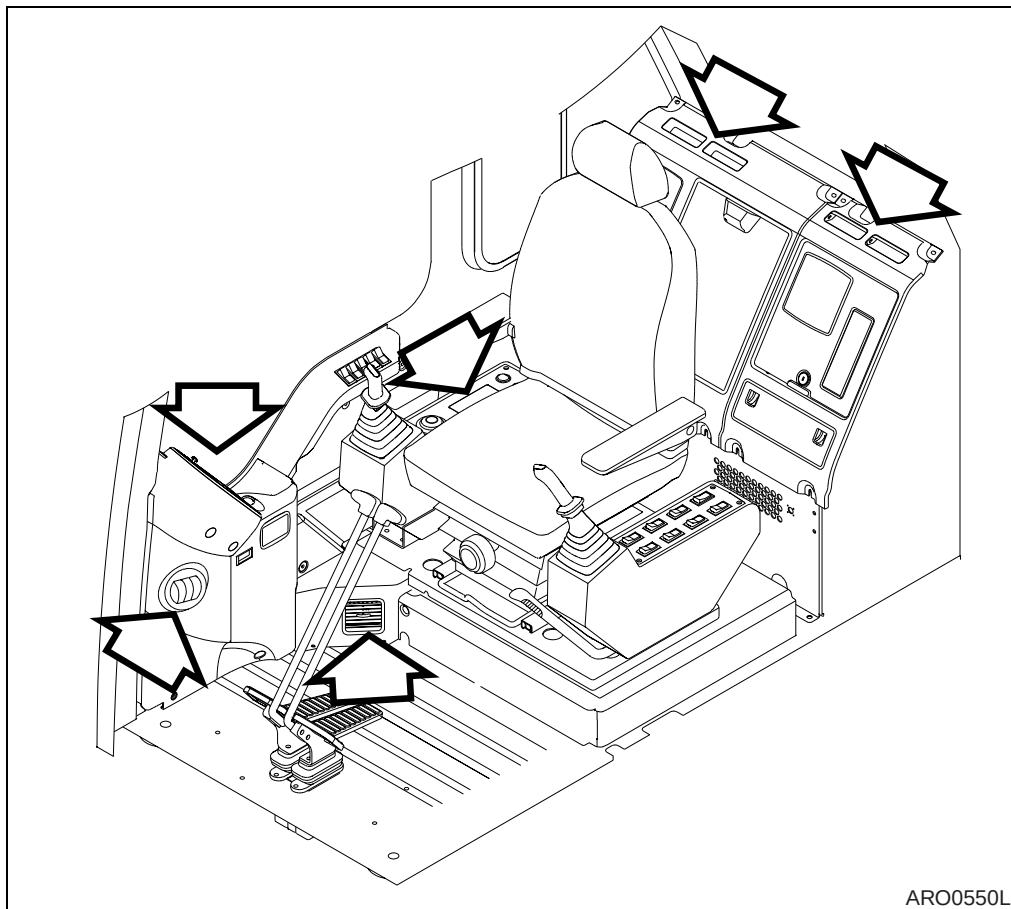


Figure 1

The heater and air-conditioner are combined into one unit in the rear cover behind the operator's seat. If necessary, the operator can control inner temperature using the operation panel installed in the right-hand control stand.

The unit is equipped with an air filtration system which filters out dirt and dust particles from air being circulated into operator's cab. This filter should be cleaned out every 500 hours.

NOTE: *In the event that the unit is being operated in a dusty environment, the cleaning and replacement should be performed more frequently. If filter element is damaged, replace damaged filter by a new one.*



WARNING!

All service and inspection of air conditioning system should be performed with the starter switch in the "O" (OFF) position.



WARNING!

If using compressed air to clean the element, make sure that proper eye protection is worn.

NOTE: All right and left call outs are based on the operator being seated in the operator's seat facing the front.

1. Turn the key cylinder (1, Figure 2) to open cover (2, Figure 2) behind operator's seat.
2. Disconnect speaker harness.
3. Remove cover (2, Figure 2) from the rear box.
4. Remove filter cover (3, Figure 2) from air conditioning unit.

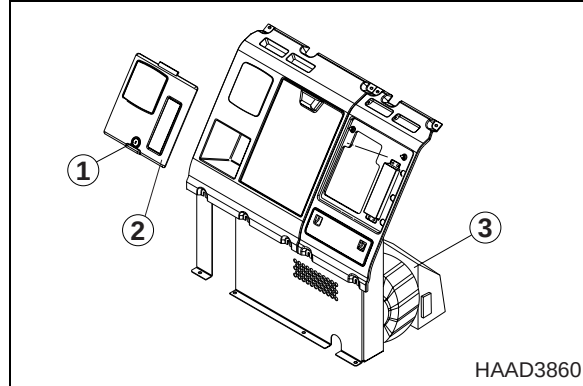


Figure 2

5. Remove filter element (1, Figure 3) and inspect for any damage.
6. Use compressed air to clean filter element. If filter element is very dirty use a mild soap or detergent and water to clean it.

NOTE: If water was used to clean filter, be certain it is completely dry before installing.

NOTE: When assembling the filter again, install so that the arrow on top of filter is facing the inside of the cab.

NOTE: Refer to appropriate Operation and Maintenance Manual for latest service intervals.

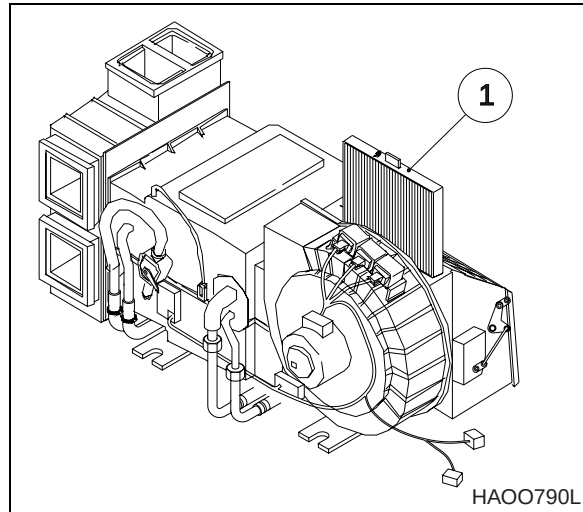


Figure 3

REFRIGERANT CIRCULATION

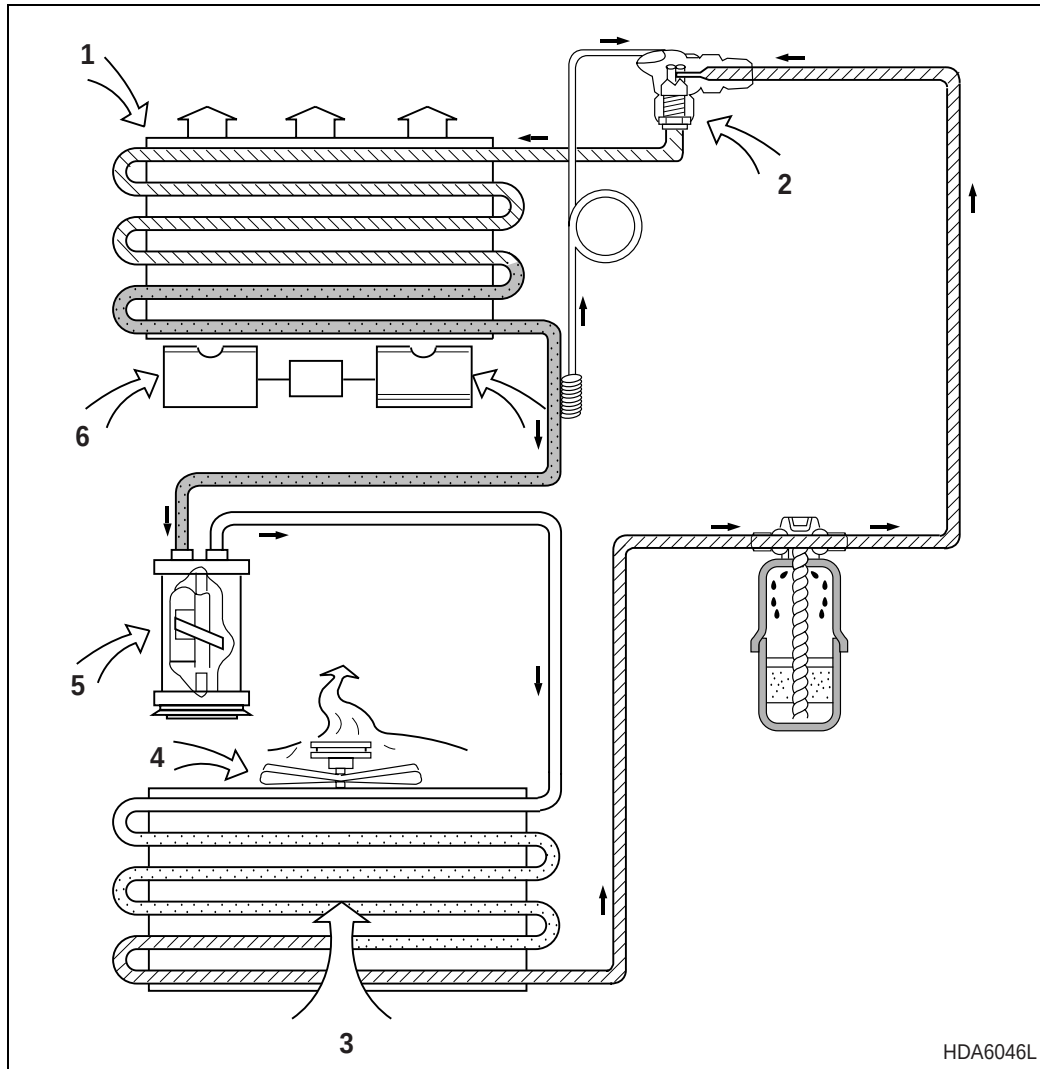


Figure 4

Reference Number	Description
1	Evaporator
2	Expansion Valve
3	Condenser
4	Condenser Fan

Reference Number	Description
5	Compressor
6	Blower Fan
7	Receiver Dryer

Shading	Temperature	Refrigerant State
	High	High Pressure Gas
	High	High Pressure Liquid
	Low	Low Pressure Liquid
	High	High Pressure Gas/Liquid
	Low	Low Pressure Gas

- Refrigerant (R134a) is compressed to approximately 15.0 kg/cm² (213 psi) within the compressor.
- The compressed refrigerant flows into the condenser at high temperature (approximately 80°C (176°F)).
- The refrigerant in the condenser is cooled to approximately 60° by the condenser fan. At this time the refrigerant changes from the gas to the liquid state, even though the temperature has only been reduced 20°C (68°F). (From 80° - 60°C (176° - 140°F)).
- The refrigerant in its liquid form is injected into the evaporator through the expansion valve. At this time the pressure is reduced by approximately 2.0 kg/cm² (28 psi) and the temperature is also reduced. As a result, the refrigerant absorbs the heat from the air surrounding the evaporator creating a cooling effect and changes from the gas to the liquid state.
- The refrigerant once again flows into the compressor in the gaseous state and the process is repeated.



WARNING!

Refrigerant gas is pressurized and sealed in the air conditioning system. Special precautions are required for the proper recharging or release of refrigerant. Release of refrigerant into the atmosphere is strictly regulated by law. Make sure that you are in compliance with all mandated federal, state and municipality requirements, before starting any service or repair of the air conditioner. Refrigerant gas used in the system must meet or exceed specifications for R134a refrigerant, or any subsequently issued environmentally-mandated standard.

CONTROL PANEL

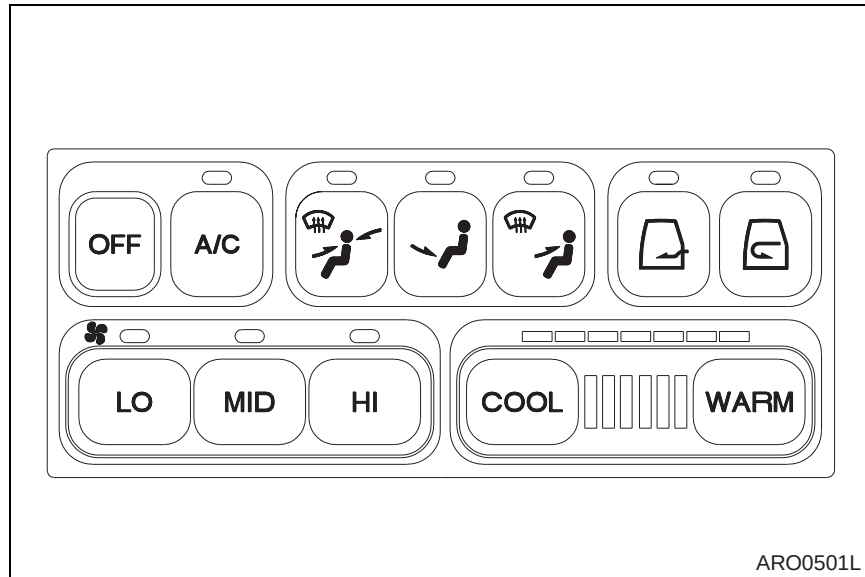


Figure 5

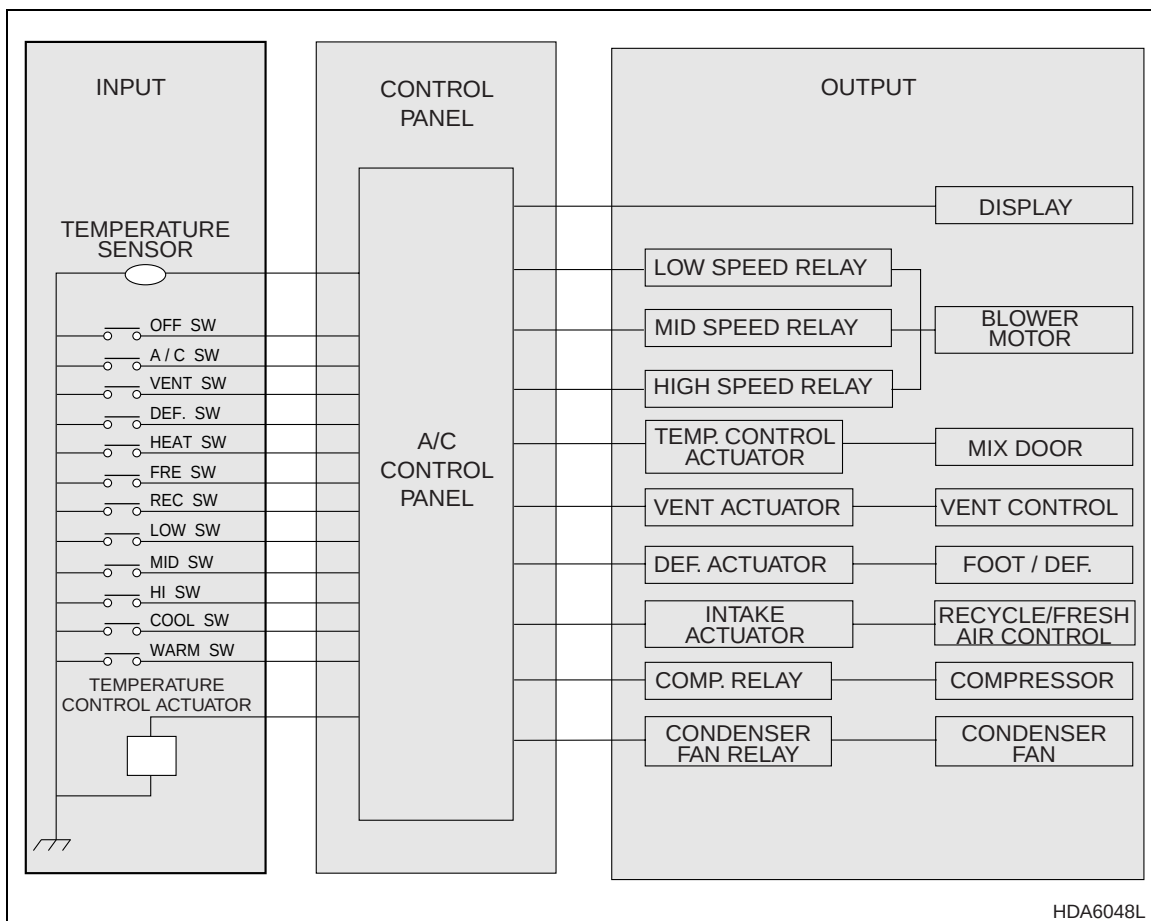
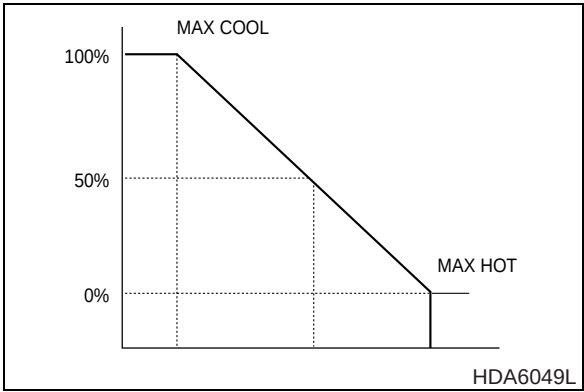
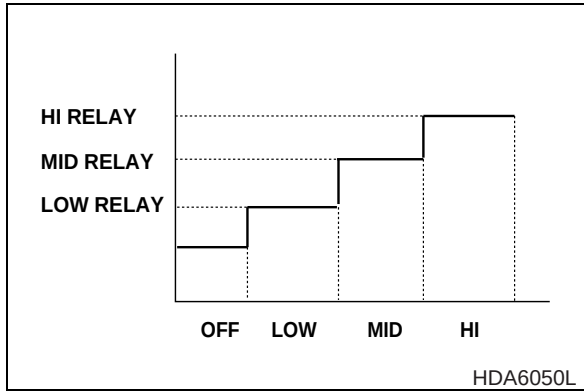
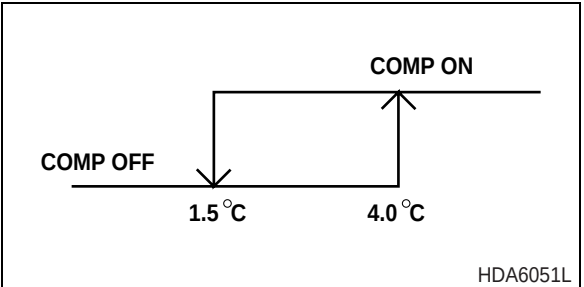


Figure 6

CONTROL SPECIFICATIONS

Control Item	Control Switch	Control Specifications
Temperature Control	'COOL' Switch 'WARM' Switch	 Figure 7 Temperature control switch consists of a 24 step variable selector. The display uses 7, Green / Red two-color LEDs to display the selected temperature.
Blower Fan Speed Control	'OFF' Switch 'LOW' Switch 'MID' Switch 'HI' Switch	 Figure 8
Compressor Control	Temperature Sensor	 Figure 9

TEMPERATURE LEVEL CONTROL AND DISPLAY

Step	LED 1	LED 2	LED 3	LED 4	LED 5	LED 6	LED 7	Position Sensor Voltage	Remark
0	Green	Green	Green	Green	Green	Green	Green	4.50 V $\pm$ 0.2	MAX. COOL
1	Green	Green	Green	Green	Green	Green	Green	4.33 V $\pm$ 0.2	
2	Green	Green	Green	Green	Green	Green	Green	4.15 V $\pm$ 0.2	
3	Red	Green	Green	Green	Green	Green	Green	3.98 V $\pm$ 0.2	
4	Red	Green	Green	Green	Green	Green	Green	3.80 V $\pm$ 0.2	
5	Red	Green	Green	Green	Green	Green	Green	3.63 V $\pm$ 0.2	
6	Red	Red	Green	Green	Green	Green	Green	3.46 V $\pm$ 0.2	
7	Red	Red	Green	Green	Green	Green	Green	3.28 V $\pm$ 0.2	
8	Red	Red	Green	Green	Green	Green	Green	3.11 V $\pm$ 0.2	
9	Red	Red	Red	Green	Green	Green	Green	2.93 V $\pm$ 0.2	
10	Red	Red	Red	Green	Green	Green	Green	2.76 V $\pm$ 0.2	
11	Red	Red	Red	Green	Green	Green	Green	2.59 V $\pm$ 0.2	
12	Red	Red	Red	Red	Green	Green	Green	2.41 V $\pm$ 0.2	
13	Red	Red	Red	Red	Green	Green	Green	2.24 V $\pm$ 0.2	
14	Red	Red	Red	Red	Green	Green	Green	2.07 V $\pm$ 0.2	
15	Red	Red	Red	Red	Red	Green	Green	1.89 V $\pm$ 0.2	
16	Red	Red	Red	Red	Red	Green	Green	1.72 V $\pm$ 0.2	
17	Red	Red	Red	Red	Red	Green	Green	1.54 V $\pm$ 0.2	
18	Red	Red	Red	Red	Red	Red	Green	1.37 V $\pm$ 0.2	
19	Red	Red	Red	Red	Red	Red	Green	1.20 V $\pm$ 0.2	
20	Red	Red	Red	Red	Red	Red	Green	1.02 V $\pm$ 0.2	
21	Red	Red	Red	Red	Red	Red	Red	0.85 V $\pm$ 0.2	
22	Red	Red	Red	Red	Red	Red	Red	0.67 V $\pm$ 0.2	
23	Red	Red	Red	Red	Red	Red	Red	0.50 V $\pm$ 0.2	MAX. HOT

AIR DISCHARGE ACCORDING TO PATH SELECTION

Face, Rear, and Defroster

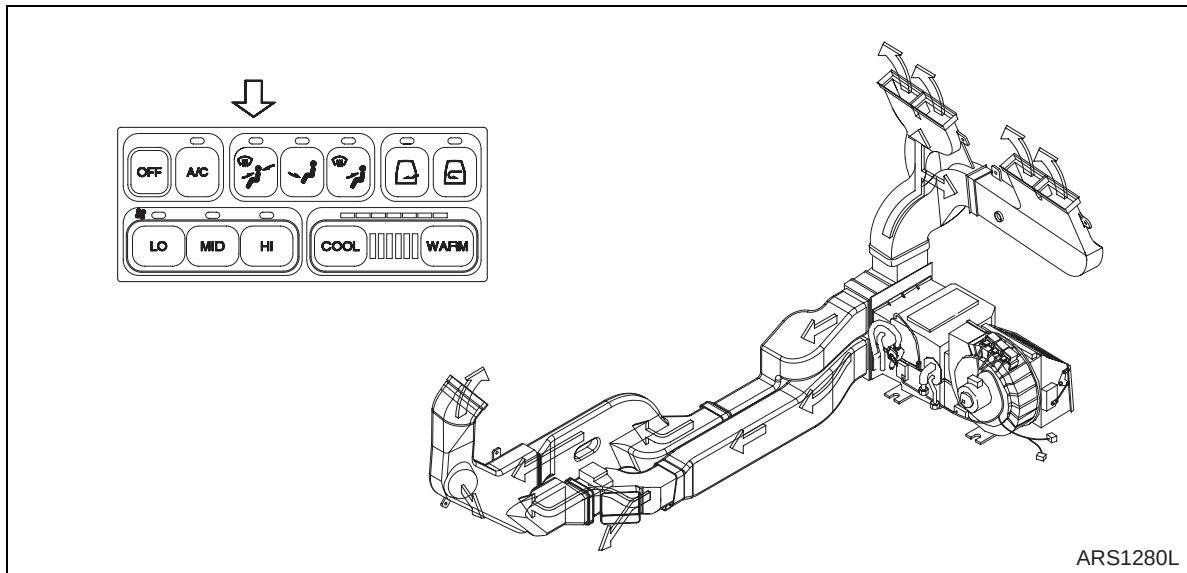


Figure 10

Foot

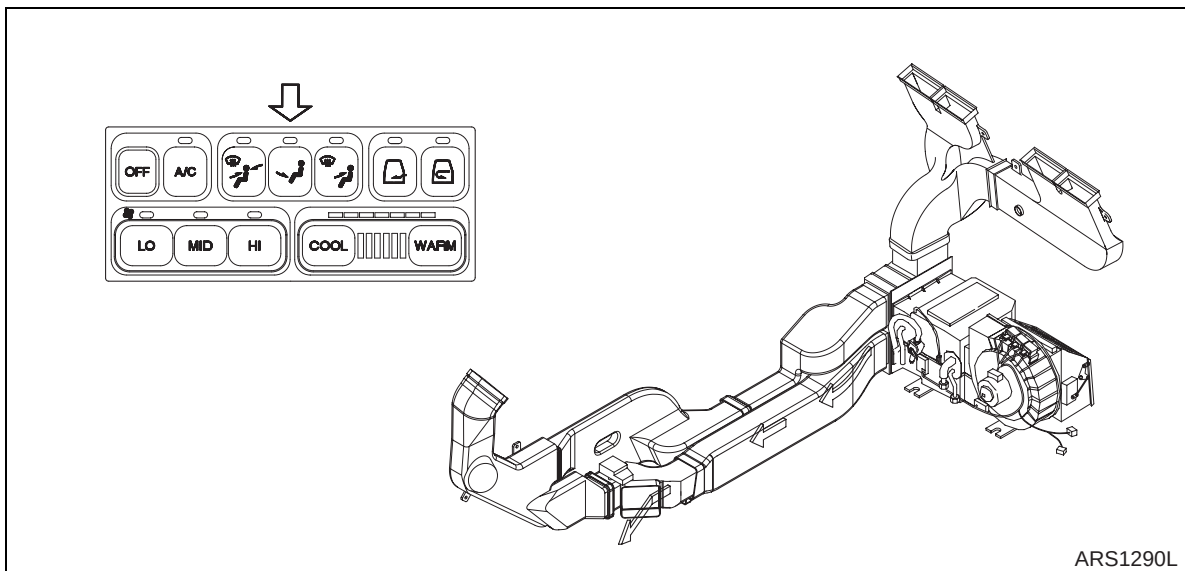


Figure 11

Face and Defroster

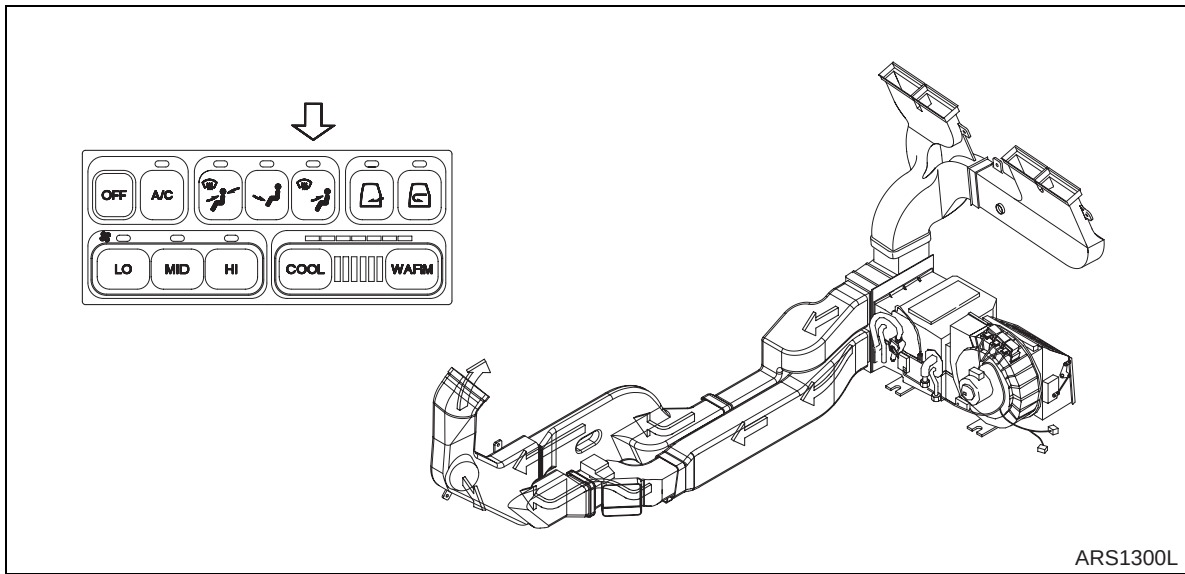
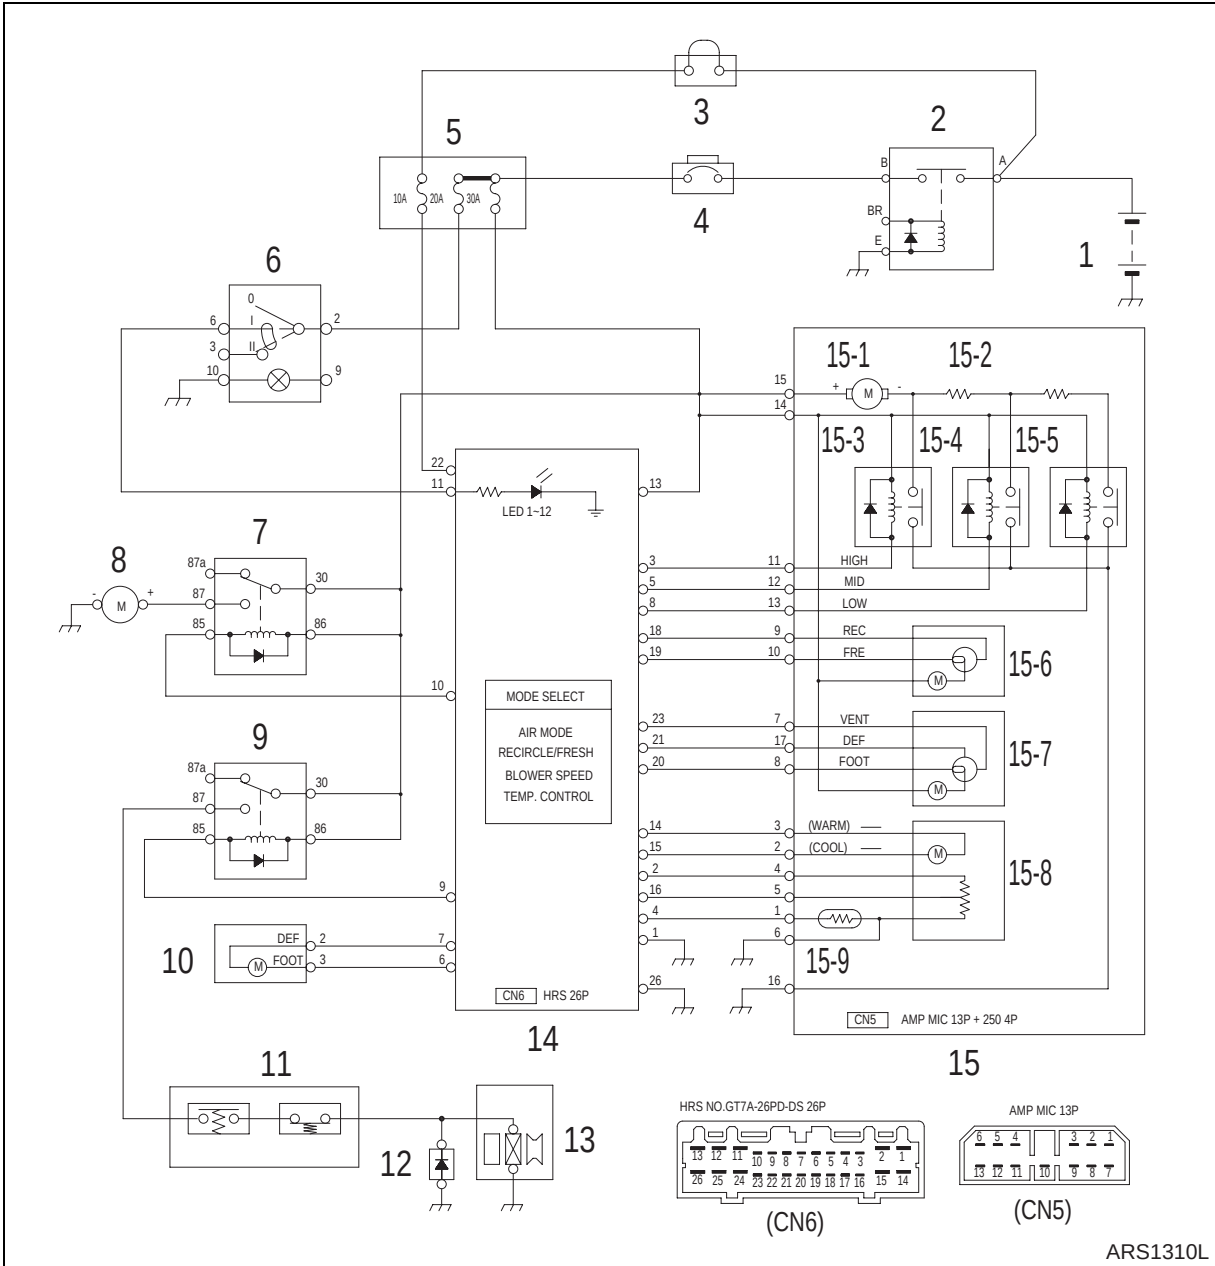


Figure 12

AIR-CONDITIONING SYSTEM CIRCUIT DIAGRAM



Reference Number	Description
1	Battery
2	Battery Relay
3	Fusible Link
4	Circuit Breaker
5	Fuse
6	Lamp Switch
7	Condenser Fan Relay
8	Condenser Fan Motor
9	Compressor Relay
10	Foot / Defrost Control Actuator
11	Receiver Dryer (Low / High Pressure Cut Off Switch)
12	Diode

Reference Number	Description
13	Compressor
14	A/C Control Panel
15	A/C Unit
15-1	Blower Motor
15-2	Resister
15-3	High Speed Relay
15-4	Mid Speed Relay
15-5	Low Speed Relay
15-6	Recirculate / Fresh Air Control Actuator
15-7	Vent Actuator
15-8	Temperature Control Actuator
15-9	Temperature Sensor (Evaporator)

TROUBLESHOOTING

Refrigerant Pressure Check

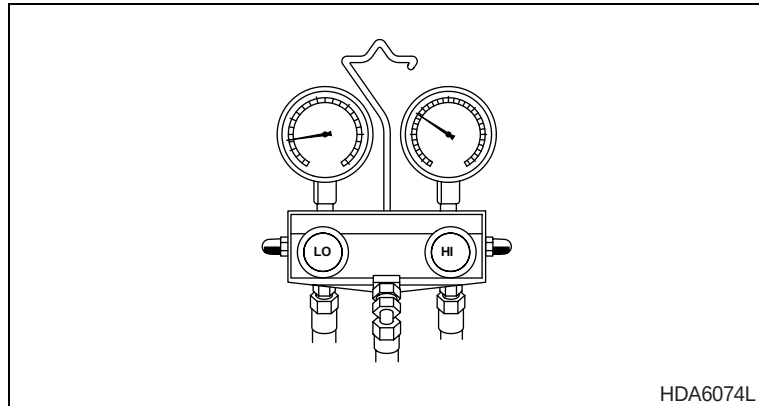


Figure 14

1. Open all doors and windows.
2. Install manifold gauge set.
3. Start engine and maintain engine speed at 1,800 - 2,000 RPM.
4. Check high / low pressure of refrigerant.

1	High Pressure: 8.0 - 10.0 kg/cm ² (114 - 142 psi)		
	Low Pressure: Approximately 1.0 kg/cm ² (14 psi)		
Possible Cause: Low Refrigerant Level			
Step	Inspection Item		Remedy
1	Check for traces of refrigerant oil.	Yes	Reassemble using correct tightening torque.
		No	Go to next step.
2	Using a leak detection device or soapy water check for refrigerant leakage at all major components and joints.	Yes	Repair leaking component.
		No	Recharge system to correct pressure.

2	High Pressure: Over 23 kg/cm ² (327 psi)		
	Low Pressure: Approximately 2.5 - 3.0 kg/cm ² (36 - 43 psi)		
Possible Cause: Overcharge, Frost on condenser			
Step	Inspection Item		Remedy
1	Check for condenser pin damage or contamination.	Yes	Clean, repair or replace condenser.
		No	Refrigerant overcharge.

3	High Pressure: Approximately 20 - 25 kg/cm² (285 - 356 psi) Low Pressure: Approximately 2.5 - 3.5 kg/cm² (36 - 50 psi)
Possible Cause: Air in system.	
1. Recover any remaining refrigerant. 2. Vacuum out system. 3. Recharge system.	
NOTE: <i>If the system has been exposed to the air for a long period of time, replace the receiver dryer.</i>	

4	High Pressure: Over 6 kg/cm² (85 psi) Low Pressure: Approximately 760 mmHg (Negative Pressure)		
Possible Cause: Refrigerant does not circulate			
Step	Inspection Item		Remedy
1	1. Connect manifold gauge and start engine. 2. Turn on air-conditioner. 3. Set blower switch to HIGH position. 4. Turn air-conditioner OFF and wait 10 minutes.	Yes	Moisture in system, replace receiver dryer.
	5. Recheck high / low pressure readings. High Pressure: 13.0 - 19.0 kg/cm ² (185 - 270 psi) Low Pressure: 1.5 - 3.3 kg/cm ² (21.3 - 46.9 psi)	No	Contaminated system, replace expansion valve. (Replace evaporator core assembly.)

5	High Pressure: Over 6 - 18 kg/cm² (85 - 256 psi) Low Pressure: 500 mmHg (Negative Pressure) - Dial indicator needle unstable.
Possible Cause: Moisture in system has iced up the expansion valve.	
NOTE: <i>When the absorbed moisture freezes the pressure readings may look normal. Careful readings should be made to determine whether pressure is in normal range.</i>	
1. Recover any remaining refrigerant. 2. Vacuum out system. 3. Recharge system.	
NOTE: <i>If the system has been exposed to the air for a long period of time, replace the receiver dryer.</i>	

6	High Pressure: Over 22.0 - 23 kg/cm ² (313 - 327 psi)		
	Low Pressure: 2.5 kg/cm ² (36 psi)		
Possible Cause: Refrigerant pressure problem due to defective expansion valve or temperature sensor.			
Step	Inspection Item		Remedy
1	Inspect whether the temperature sensor is installed properly.	Yes	Replace expansion valve.
		No	Exchange duct sensor.

7	High Pressure: Over 7.0 - 11.0 kg/cm² (100 - 156 psi) Low Pressure: 4.0 - 6.0 kg/cm² (57 - 85 psi)
Possible Cause: Low refrigerant pressure due to poor compressor compression	
Inspect and replace compressor if necessary.	

WEIGHT OF R134A GAS USED IN MACHINES

Model	Weight of Gas
Mega 130	850 ±20 grams (30 ±0.7 oz.)
Mega 160	850 ±20 grams (30 ±0.7 oz.)
Mega 200-III	850 ±20 grams (30 ±0.7 oz.)
Mega 200-V	850 ±20 grams (30 ±0.7 oz.)
Mega 250-III	850 ±20 grams (30 ±0.7 oz.)
Mega 250-V	850 ±20 grams (30 ±0.7 oz.)
Mega 300-III	950 ±20 grams (33 ±0.7 oz.)
Mega 300-V	850 ±20 grams (30 ±0.7 oz.)
Mega 400-III	950 ±20 grams (33 ±0.7 oz.)
Mega 400-III PLUS	850 ±20 grams (30 ±0.7 oz.)
Mega 400-V	850 ±20 grams (30 ±0.7 oz.)
Mega 500-V	850 ±20 grams (30 ±0.7 oz.)
Solar 130-III	950 ±20 grams (33 ±0.7 oz.)
Solar 130LC-V	850 ±20 grams (30 ±0.7 oz.)
Solar 130W-III	950 ±20 grams (33 ±0.7 oz.)
Solar 130W-V	850 ±20 grams (30 ±0.7 oz.)
Solar 170LC-V	850 ±20 grams (30 ±0.7 oz.)
Solar 170W-III	1100 ±20 grams (38 ±0.7 oz.)
Solar 200W-III	1100 ±20 grams (38 ±0.7 oz.)
Solar 200W-V	850 ±20 grams (30 ±0.7 oz.)
Solar 220LC-III	950 ±20 grams (33 ±0.7 oz.)
Solar 220LC-V	850 ±20 grams (30 ±0.7 oz.)
Solar 220LL	850 ±20 grams (30 ±0.7 oz.)
Solar 250LC-V	850 ±20 grams (30 ±0.7 oz.)
Solar 280LC-III	1250 ±20 grams (44 ±0.7 oz.)
Solar 290LC-V	850 ±20 grams (30 ±0.7 oz.)
Solar 290LL	850 ±20 grams (30 ±0.7 oz.)
Solar 300LC-V	850 ±20 grams (30 ±0.7 oz.)
Solar 300LL	850 ±20 grams (30 ±0.7 oz.)
Solar 330-III	1250 ±20 grams (44 ±0.7 oz.)
Solar 330LC-V	850 ±20 grams (30 ±0.7 oz.)
Solar 340LC-V	850 ±20 grams (30 ±0.7 oz.)
Solar 400LC-III	1250 ±20 grams (44 ±0.7 oz.)
Solar 400LC-V	850 ±20 grams (30 ±0.7 oz.)
Solar 420LC-V	850 ±20 grams (30 ±0.7 oz.)
Solar 450LC-III	1250 ±20 grams (44 ±0.7 oz.)
Solar 450LC-V	850 ±20 grams (30 ±0.7 oz.)
Solar 470LC-V	850 ±20 grams (30 ±0.7 oz.)
Solar 70-III	800 ±20 grams (28 ±0.7 oz.)

REFRIGERANT SYSTEM REPAIRS



WARNING!

Always wear protective glasses and gloves when handling refrigerant. If refrigerant comes in contact with the skin or eyes, immediately flush with clean, running water and consult a physician.

Select a clean and well ventilated area to work.

The refrigerant container is under high pressure and should be stored below 40°C (104°F). Be careful not to drop the container from a high location

The contents are under high pressure and should not be used with compressed air or near an open flame.

REFRIGERANT SAFE HANDLING PROCEDURES

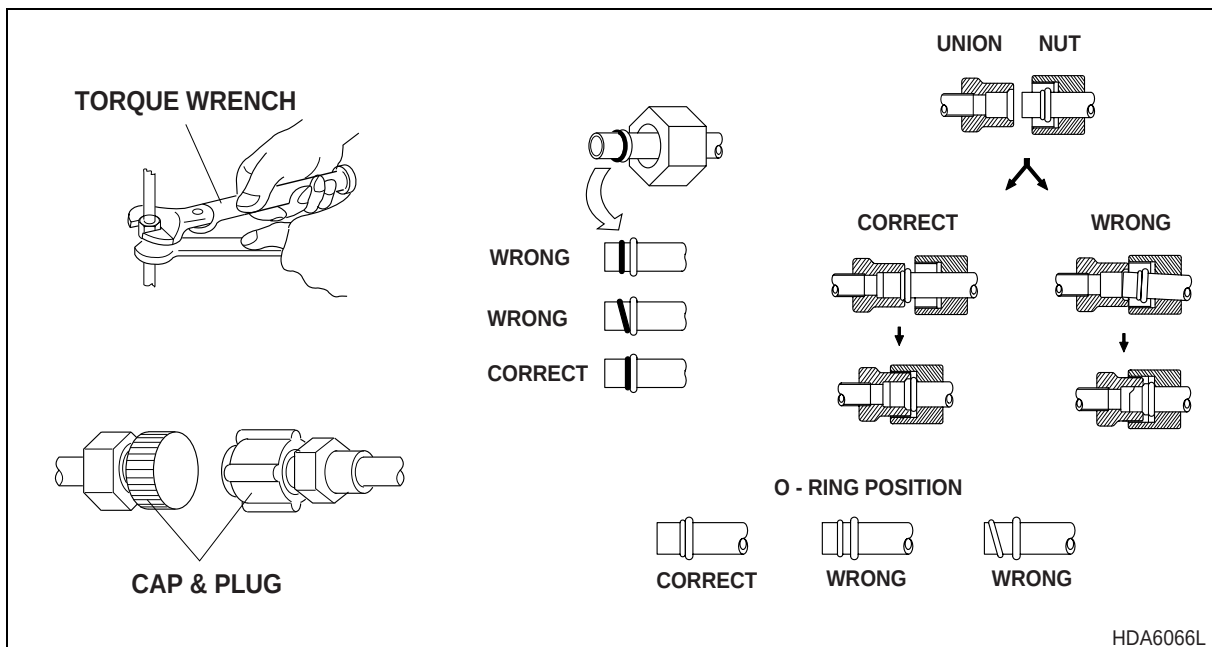


Figure 15

The following procedures should be observed for safe handling of refrigerant during vacuum and charging process.

1. Use an approved recovery / charging device which can safely perform vacuum and charge work simultaneously.
2. The new refrigerant has improved cooling characteristics than the old type and care should be used not to overcharge the system.
3. Do not over tighten connections when working on refrigerant system.
4. The new refrigerant system standards require new tools, equipment and parts. DO NOT attempt to use equipment use in servicing the old refrigerant system.

5. The new refrigerant oil (PAG type) has a high moisture absorption characteristic. When the refrigerant system vacuum seal has been broken, immediately plug up all openings to prevent moisture from entering into the system.
6. When joining unions which use O-ring seals, lightly coat O-rings with refrigerant oil. Be careful not to drip oil on the threads of the nut.
7. Be certain the O-rings are seated properly on the refrigerant line lip. Always use new O-rings when reassembling parts. Do not reuse old O-rings.
8. Use a vacuum pump to evacuate refrigerant system of air.
9. When charging the refrigerant system with the engine running, do not open the high pressure valve on the manifold gauge as the reverse flow of high pressure refrigerant will rupture the hose.
10. When releasing the high pressure hose after completing the charging process, quickly disconnect the hose to minimize refrigerant released to the air.

REPAIR AND REPLACEMENT PROCEDURE

1. Work Procedure
 - A. Before repairing or replacing any refrigerant components first, return all refrigerant oil to the compressor and perform recovery procedures.
2. Operating Condition
 - A. Run engine at maximum engine speed.
 - B. Select 'HI' blower fan speed and select A/C switch to 'ON'.
 - C. Set the temperature control switch for maximum cooling and leave running for approximately 20 minutes.

NOTE: *The manifold gauge dial pointer can vary depending on the outdoor temperatures.*

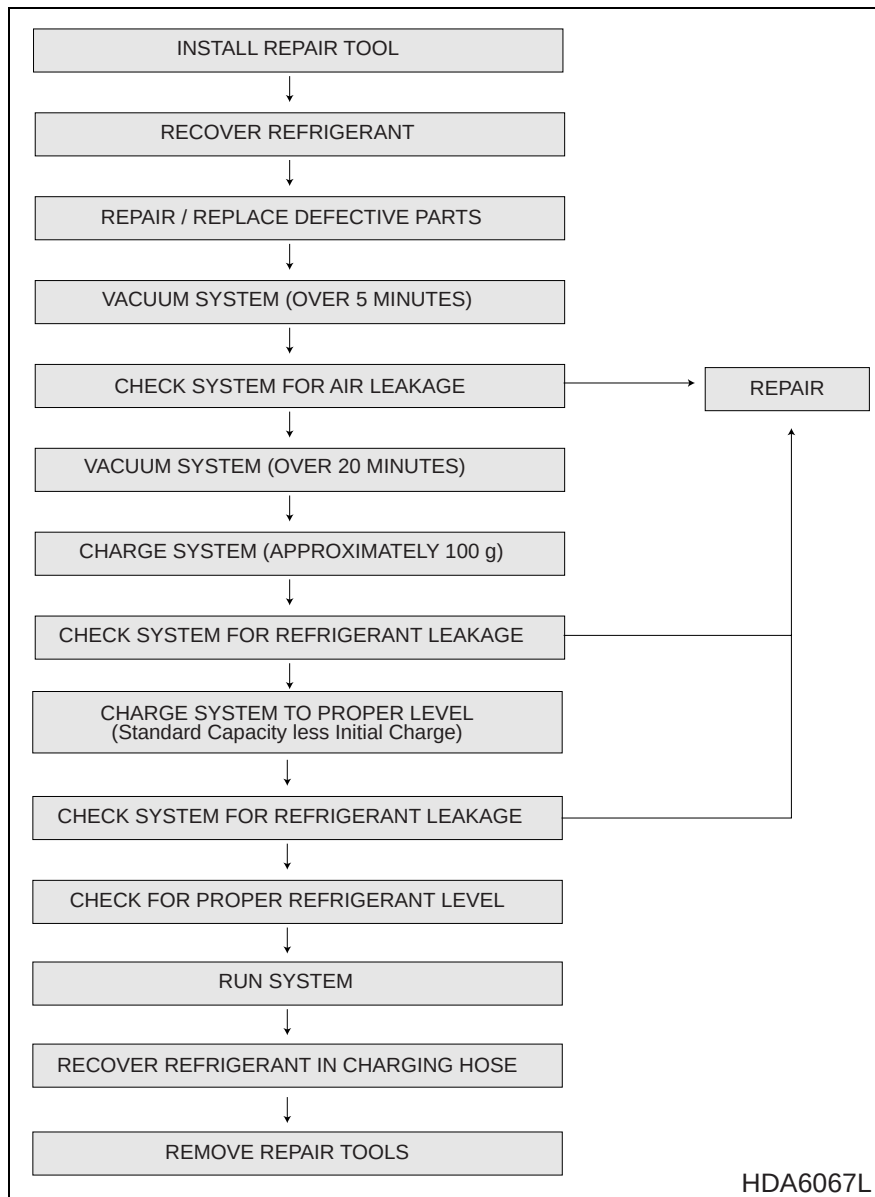


Figure 16

REFRIGERANT RECOVERY

Reference Number	Description
1	To Compressor
2	Low Pressure Side
3	High Pressure Side
4	From Receiver
5	Refrigerant Recovery Tank

1. Attach the manifold gauges and the refrigerant recovery unit to the refrigerant lines as shown.

NOTE: Be careful not to switch the connections for the low and high pressure valves.

2. Open the high pressure valve slowly to release the refrigerant to the recovery unit.

NOTE: Open the valve slowly, while checking to see that refrigerant is not leaking out.

3. When the manifold gauge dial falls below 3.5 kg/cm² (50 psi), slowly open the low pressure valve.

4. Open both the high and low pressure valves slowly until the manifold gauge dials indicates 0 kg/cm² (0 psi).

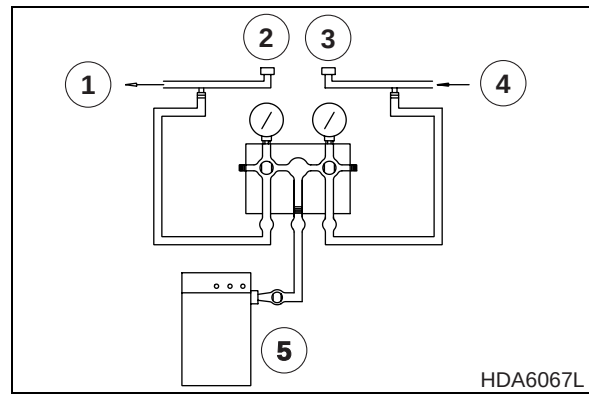


Figure 17

VACUUMING REFRIGERANT SYSTEM

Reference Number	Description
1	To Compressor
2	Low Pressure Side
3	High Pressure Side
4	From Receiver
5	Vacuum Pump

1. Vacuuming Procedure

NOTE: When the A/C system has been exposed to the air, it must be vacuumed out. Perform vacuum process for 30 minutes for complete moisture and air evacuation.

- A. Attach the manifold gauges and vacuum pump to the refrigerant system as shown.
- B. Turn on the vacuum pump and open both valves.
- C. When the low pressure gauge shows approximately 710 mmHg, close both valves and turn off vacuum pump.

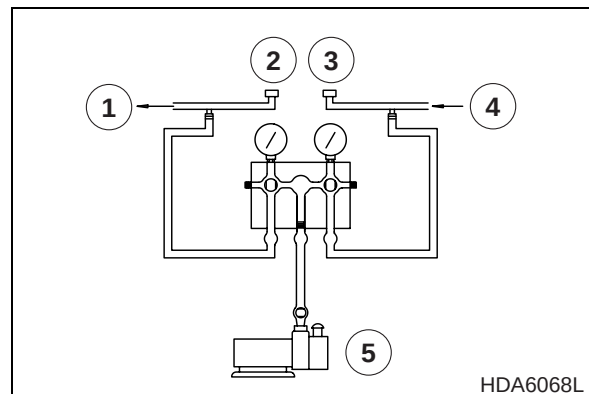


Figure 18

2. Check system for vacuum leak.

Allow system to sit for 10 minutes and check whether the system is holding the pressure. If the pressure has dropped, it must be repaired before proceeding to the next step.

3. Vacuuming Procedure

If the system is holding the pressure and it has not changed for 10 minutes, vacuum out the system for an additional 20 minutes.

- A. Turn on the vacuum pump and slowly open both valves.
- B. Allow vacuum pump to run for additional 20 minutes until the low pressure gauge dial reads approximately 750 mmHg.
- C. Close both valves and stop the vacuum pump.

4. Installation of Refrigerant Container

Reference Number	Description
1	Handle
2	Hose Connection
3	Mounting Disk

- A. Before mounting valve on the container, make sure the handle is in the counter clockwise most position, with the puncture pin retracted and the mounting disk is in the raised position.
- B. Attach the manifold gauge center hose to the valve assembly.
- C. Turn the disc in the clockwise direction and securely mount valve onto refrigerant container.
- D. Turn the valve handle in the clockwise direction and puncture the container seal with the pin.
- E. Once the can has been punctured, turn the handle in the counter clockwise direction so the refrigerant can flow into the manifold gauge center hose. At this time, do not open the low and high pressure valves of the manifold gauge.
- F. Press the manifold gauge low side valve to eliminate the trapped air in the hose.

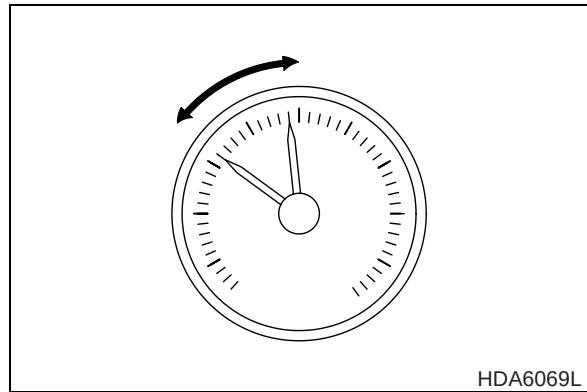


Figure 19

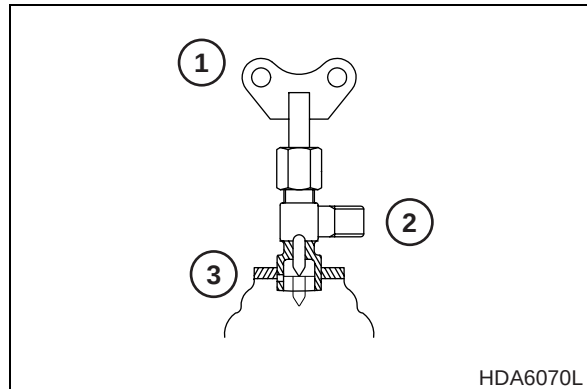


Figure 20

LEAKAGE CHECK

NOTE: Perform the leakage check after completing vacuuming process.

1. After attaching the manifold gauge, open the high side valve.
2. Charge system until the low side gauge dial indicates a pressure of 1 kg/cm² (14 psi) and close the high side valve.

3. Using a refrigerant leak detector or soapy water check each joint for leakage.

Reference Number	Description
1	Refrigerant Leak Detection Device

4. If a leak is detected, check for O-ring damage or correct tightening torque and replace or repair as necessary.
5. If no leaks are detected, proceed with the charging process.

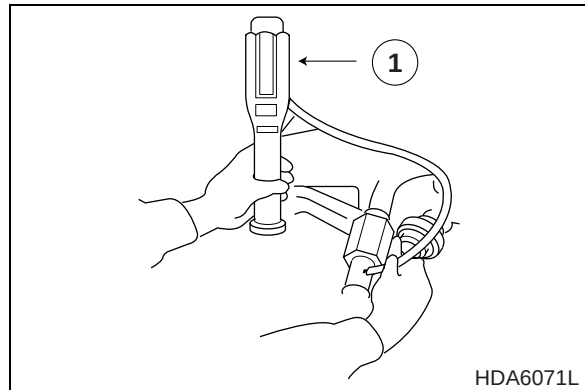


Figure 21



WARNING!

For accurate refrigerant leak detection, perform leak detection procedure in a well ventilated area.

REFRIGERANT CHARGING

1. Perform the vacuuming procedure, vacuum holding and leaking tests as described in the proceeding headings.

NOTE: First charge the refrigerant system with 100g (3.5 ounces) of refrigerant with the engine off. Then using the manifold gauges as a guide fully charge the system with the engine running.

When exchanging refrigerant containers, press the manifold gauge low side valve to eliminate air from the charging hose.

Reference Number	Description
1	To Compressor
2	Low Pressure Side
3	High Pressure Side
4	From Receiver
5	Refrigerant Supply Container

2. Charge the system by opening the manifold gauge low side valve.
Initial charge amount: 100 g (3.5 ounces).
3. If refrigerant does not flow freely into system, try starting engine first before operating air-conditioner.
 - Temperature control switch setting: Maximum Cooling
 - Blower Speed Setting: Hi (3 step)

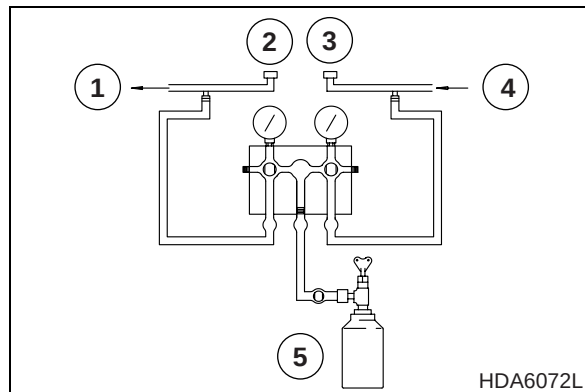


Figure 22

Engine Speed: 1,300 - 1,500 RPM



WARNING!

When charging refrigerant system with the engine running;

- **Always keep refrigerant supply container in the upright position.**
- **Never open the high side pressure valve.**

4. Open the manifold gauge low side valve and charge system to standard capacity.

Gauge Dial	Standard Reading
High Side Gauge	13 - 20 kg/cm ² (185 - 285 psi)
Low Side Gauge	1.5 - 3.5 kg/cm ² (22 - 50 psi)

NOTE: *These standards are for outside temperatures between 30° - 35°C (86° - 95°F). The gauge readings may vary for extreme temperature conditions.*



WARNING!

- **When outside temperature is low, warm the refrigerant supply container with warm water not exceeding 40°C (104°F). Do not allow water to come in contact with the charging adapter valve handle.**
- **When outside temperature is high, cool off refrigerant supply container and condenser to aid the refrigerant charging process.**

5. Close low pressure side valve.
6. Shut off engine and close refrigerant supply container adapter valve. Disconnect manifold gauge hoses from vehicle.

INSPECTING SYSTEM FOR LEAKAGE

After completing charging procedures, clean all joints and connections with a clean dry cloth. Using a refrigerant leak detecting device or soapy water, inspect system for leaks starting from the high pressure side.

NOTE: When the refrigerant circulation has been stopped the high pressure will start to decrease and the low pressure will start to increase until they are equalized. Starting the inspection from the high side will result in a accurate test.

Reference Number	Description
1	Pressure
2	High Pressure
3	Low Pressure
4	Compressor Stop

Inspection Procedure

- High Pressure Side
Compressor outlet → condenser inlet → receiver dryer inlet → air-conditioner unit inlet
- Low pressure side
Compressor inlet → air-conditioner unit outlet
- Compressor
Compressor shaft area, bolt hole area and magnetic clutch area.
- Receiver dryer
Pressure switch and plug area.
- Connection valve area
Inspect all valve areas.
Verify all valves are capped to prevent leaking.
Check for foreign material inside of valve cap.
- Interior of air-conditioning unit.
After stopping engine, insert detector probe into drain hose. (Leave inserted for 10 seconds minimum.)

NOTE: When inspecting leakage from the air-conditioning unit, perform the inspection in a well ventilated area.

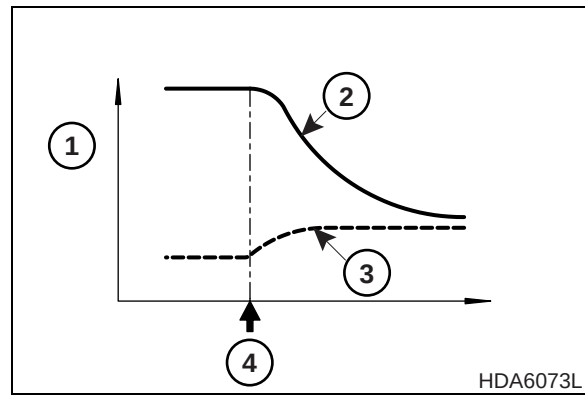


Figure 23



DRIVE COUPLING (MAIN PUMP)



CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that is in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

MODEL	SERIAL NUMBER RANGE
Solar 300LC-V	1001 and Up
Solar 300LL	1001 and Up
Solar 340LC-V	1001 and Up
Solar 420LC-V	1001 and Up
Solar 470LC-V	1001 and Up

TABLE OF CONTENTS

Drive Coupling	3
Special Tools	4
Drive Coupling Installation.....	6
Installation Procedure	8

DRIVE COUPLING

When installing the main pump on the engine, it is very important to properly adjust clearance between the face of the coupling hub and end of pump drive shaft ("Measurement H" shown in the following procedure) to a specific value.

Figure 1 thru Figure 2, show typical drive coupling installations.

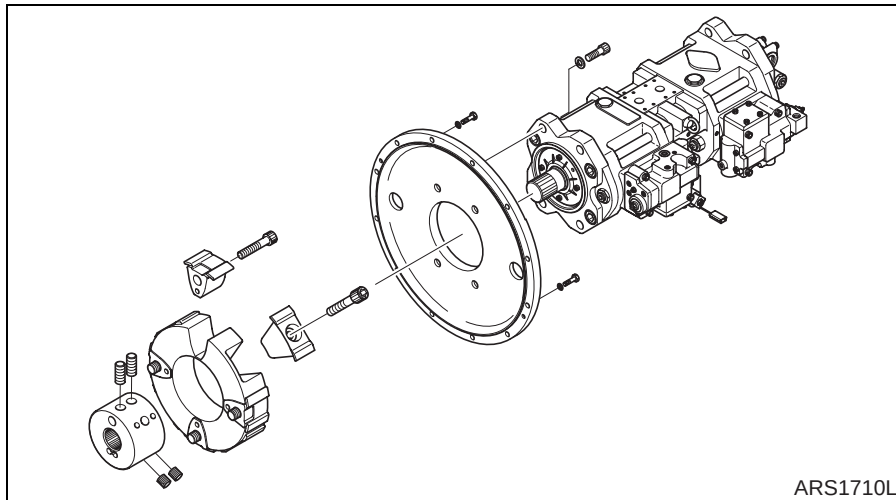


Figure 1 KAWASAKI

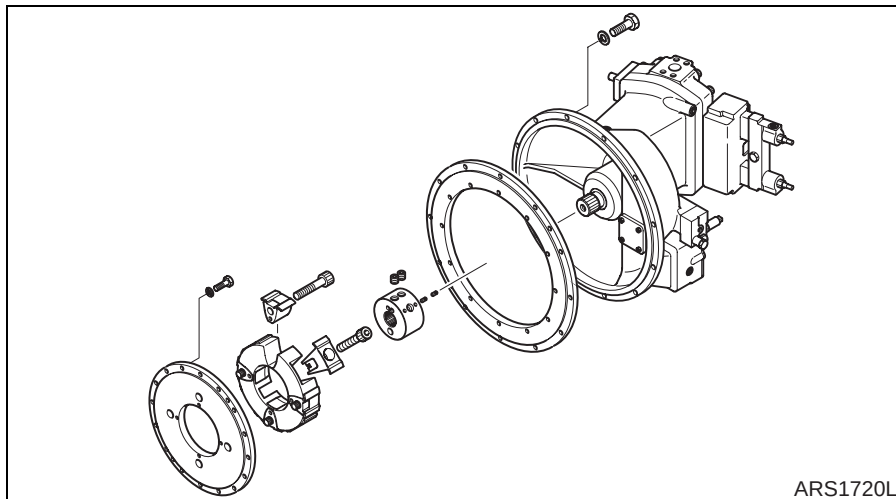


Figure 2 REXROTH

SPECIAL TOOLS

This tool is used to control the distance between the end of the pump drive shaft and the front face of the drive coupling hub (Figure 3 and Figure 5). This distance will be referred to as "Measurement H" in the installation instructions that follow.

NOTE: *In manufacturing drawings (Figure 4), dimension "A" and "B" equal the "Measurement H." The two tools shown are designed to be used on various models of equipment. Only one end of the tool is used for a specific model of equipment.*



Figure 3

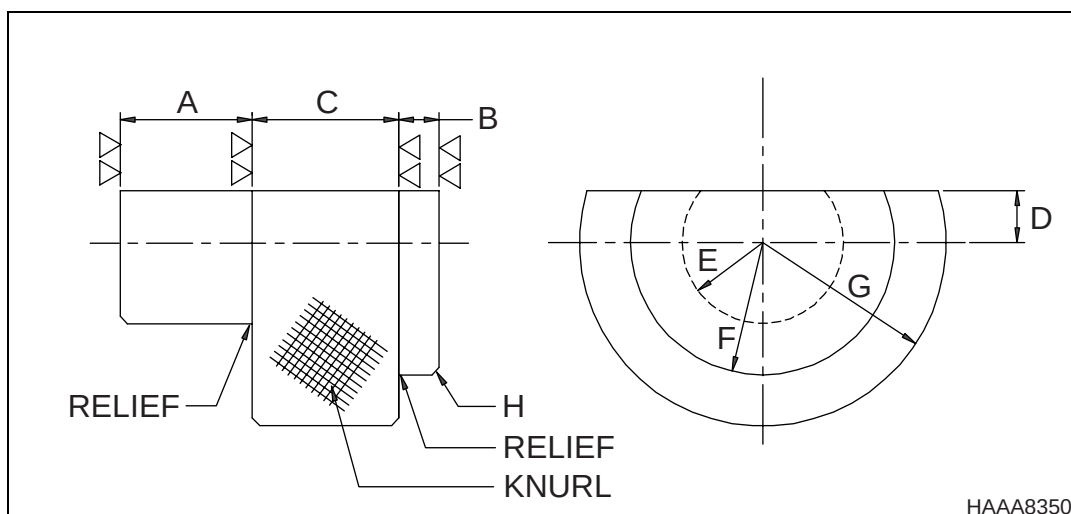


Figure 4

Dimensional Details for Figure 4		
Dimension	Measurement	Models
A	6 ±0.1 mm (0.2362 ±0.0039 in)	S300LC-V, S300LL
B	7 ±0.1 mm (0.2756 ±0.0039 in)	S340LC-V, S420LC-V, S470LC-V
C	20.0 mm (0.787 in)	
D	7.0 mm (0.275 in)	
E	18.0 mm (0.708 in) Radius	
F	22.0 mm (0.866 in) Radius	
G	30.0 mm (1.181 in) Radius	
H	1.0 mm (0.039 in) x 45° Chamfer	

DRIVE COUPLING INSTALLATION

Whenever the drive coupling for main pump is installed, the following mounting dimensions and installation procedures must be observed.

NOTE: *If these procedures are not followed, noise will occur and/or the service life of drive coupling or main pump will be reduced.*

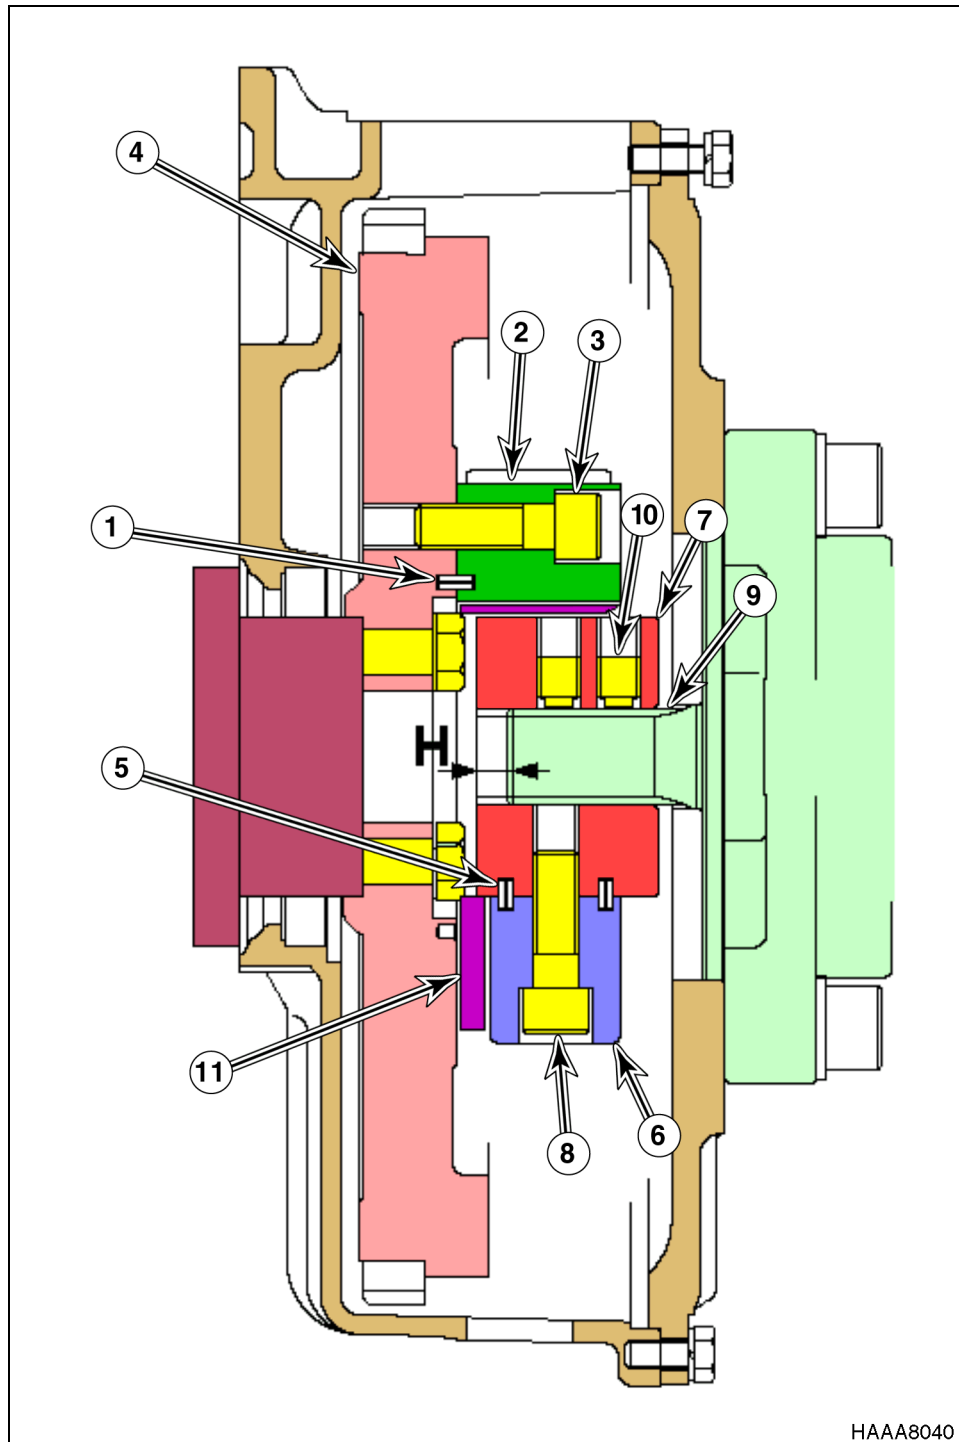


Figure 5 DRIVE COUPLING INSTALLATION

Table 1 Parts Information and Torque for Figure 5			
Reference Number	Description	Qty.	Torque (See Table 2)
1	Spring Pin	4	
2	Insert	4	
3	Bolt	4	Ta
4	Flywheel	1	
5	Spring Pin	8	
6	Insert	4	
7	Hub	1	
8	Bolt	4	Ta
9	Pump shaft	1	
10	Clamping screw	2	Tb
11	Element	1	

Specification for "Measurement H," from front hub face to pump shaft end, and TIGHTENING TORQUE of bolts and screws written in the "Table 2" must be observed.

Table 2 Specification for "Measurement H" and Torque (Refer to Figure 5)				
Model	Coupling Part Number	"Measurement H"	Torque Value for "Ta"	Torque Value for "Tb"
S300LC-V	414-00040	5.5 - 6.5 mm (0.216 - 0.256 in)	44 - 49 kg•m (318 - 354 ft lb)	20 - 22 kg•m (145 - 159 ft lb)
S300LL				
S340LC-V	414-00041	6.5 - 7.5 mm (0.256 - 0.295 in)	44 - 49 kg•m (318 - 354 ft lb)	20 - 22 kg•m (145 - 159 ft lb)
S420LC-V				
S470LC-V				

INSTALLATION PROCEDURE

NOTE: Refer to Figure 5 while using following procedure.

1. Install spring pin (1) and attach insert (2) with bolt (3) to engine flywheel (4).

NOTE: Tighten bolts to value "Ta" in the tables.

2. Install two spring pins (5) and attach insert (6) to hub (7) bolts (8).

NOTE: Tighten bolts to value "Ta" in the tables.

3. Attach flywheel cover to the main pump with bolts. (S300LC-V, S340LC-V only.)

4. Slide hub (7) into place on pump shaft (9) as specified in the "Table 2" for "Measurement H" and secure it in position with clamping screws (10).

NOTE: Tighten clamping screws to value "Tb" in the tables.

NOTE: Coat clamping screws (10) with Loctite #262.

5. Install element (11) between inserts (2) on engine flywheel (4)
6. Install main pump and hub (7) by pushing it softly into element (11).
7. Attach flywheel cover / pump housing to flywheel housing with bolts

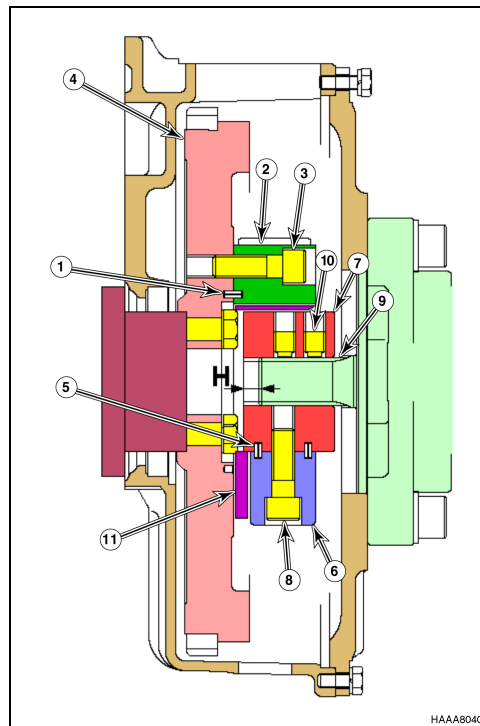


Figure 6 DRIVE COUPLING INSTALLATION



CAUTION!

1. Bolts (3 and 8) are coated against loosening with a bonding compound. Do not use any additional bonding compounds, oils or cleaning solvents on them.
2. Element (11) is non-resistant to bonding compounds, oil or grease. Be careful not to expose it to them.
3. Remove oil or dirt from flywheel cover and pump shaft before assembly.
4. Misalignment between pump and engine should be controlled to less than 0.6 mm (0.023 in).

HYDRAULICS



HYDRAULIC SYSTEM TROUBLESHOOTING, TESTING AND ADJUSTMENT



CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that is in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

MODEL	SERIAL NUMBER RANGE
Solar 300LC-V	1001 and Up
Solar 300LL	1001 and Up

TABLE OF CONTENTS

Hydraulic System - General Notes	4
Hydraulic Schematic.....	5
General Notes	5
Operation of Working Components	6
Boom Operating Circuit.....	6
Boom Up Circuit.....	6
Boom Down Circuit	6
Arm Operating Circuit	7
Arm Crowd Circuit.....	7
Arm Dump Circuit.....	7
Bucket Operating Circuit	8
Bucket Crowd Circuit.....	8
Bucket Dump Circuit	8
Swing Operating Circuit	8
Right Swing Operating Circuit.....	9
Left Swing Operating Circuit	9
Swing Relief Valve and Make-up Valve	9
Travel Operating Circuit.....	9
Forward Travel Circuit.....	10
Reverse Travel Circuit	10
Procedural Troubleshooting Baseline Recommendations	11
Initial Checks and Tests to Establish Operating Condition of the Excavator	11
Pilot Pressure	12
Adjustment and Testing.....	12
Power Mode Valve.....	13
Current Signal and Hydraulic Pressure Adjustments.....	13
Swing Priority Valve.....	14
Control Valve Pressure and Current Adjustments.....	14
Pressure Up Valve.....	15
Checks and Adjustments	15

Pump Input Power Control	17
Pump Regulator Adjustment	17
Flow Meter and Flow Meter Kit Installation and Testing	21
Swing System Troubleshooting	23
Precautions/Initial Checks	23
Swing Relief Valve Checking and Adjustment.....	23
Troubleshooting – Swing Gearbox.....	25
Troubleshooting – Hydraulic Problems	26
Troubleshooting – Control Valve	28
Troubleshooting – Travel Control Valve.....	29
Troubleshooting – Joystick Control Valve	30

HYDRAULIC SYSTEM - GENERAL NOTES

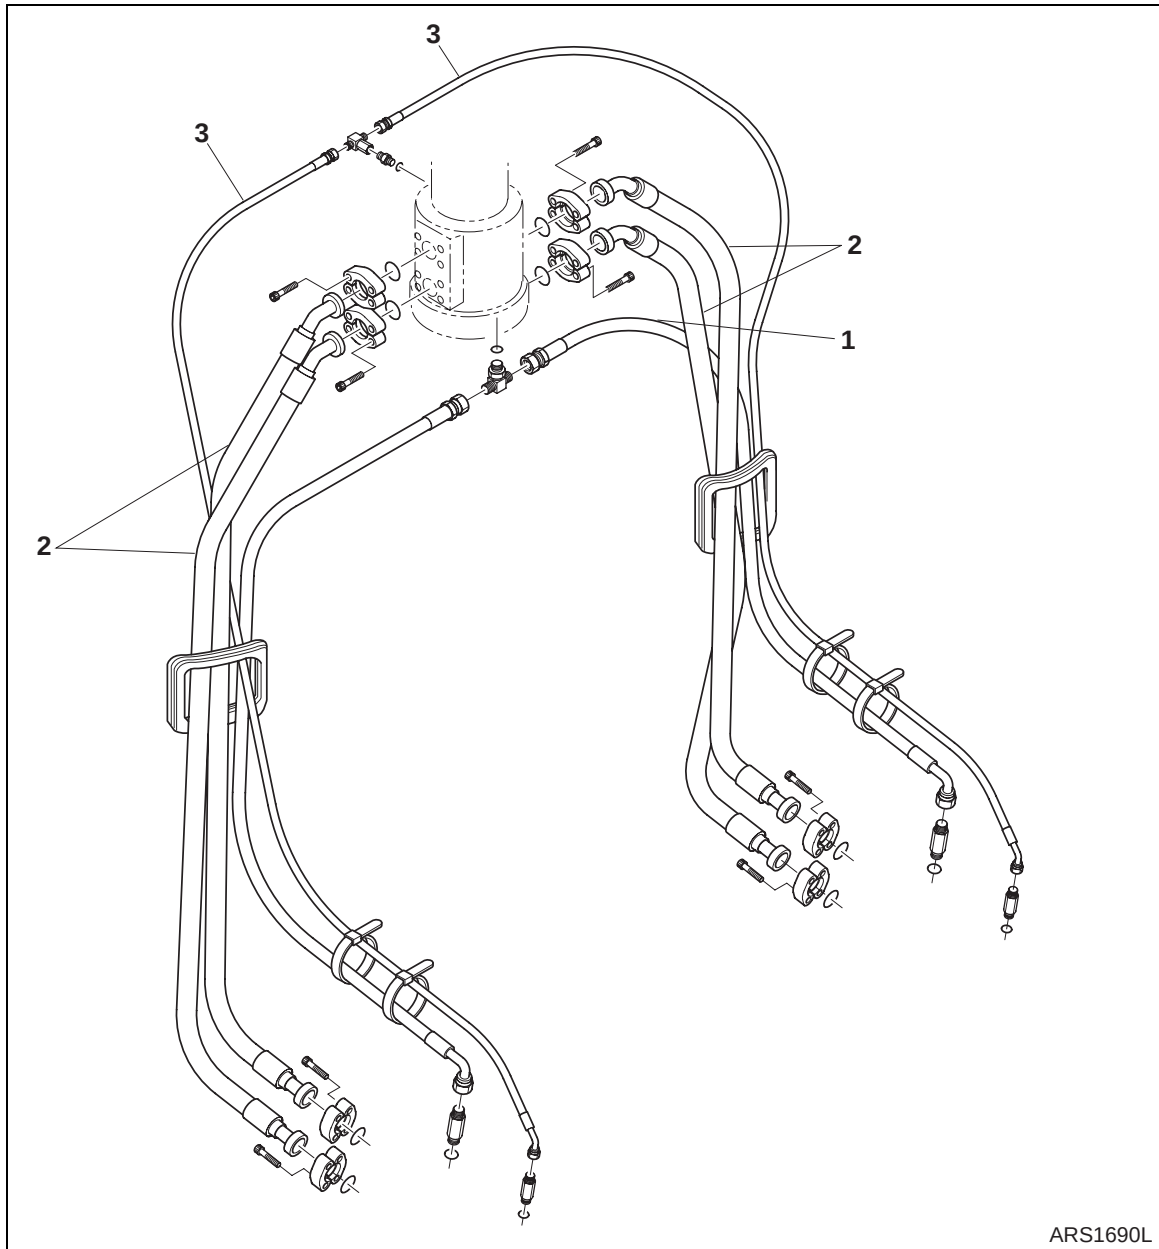


Figure 1

The hydraulic system has several improvements over conventional hydraulic systems - including cross-sensing total horsepower control - to maximize output efficiency.

The system features an electronically controlled output optimization system, which allows the operator to choose between two, distinctly different power modes: high-output/rapid cycling maximum-speed power mode, and a standard power mode for most types of general operation.

Electronic management of hydraulic control valves assists in optimizing the application speed and overall operator control of hydraulic actuators and functions.

HYDRAULIC SCHEMATIC

The hydraulic schematic(s) is available in the "Hydraulic and Electrical Schematic Shop Manual." This manual is a collection of diagrams and schematics for a number of models.

GENERAL NOTES

When referring to the schematic, refer to the following items:

- As shown in the schematic, the main pump assembly is driven by the engine. Mechanical energy is converted to hydraulic power, generating the required hydraulic flow which drives the system. Two main pumps (a right side pump and a left side pump) make up the main pump assembly.
- Hydraulic output from the right side pump is transmitted to the right side of the control valve. Output from the left side pump is transmitted to the valve spools on the left side of the control valve. Hydraulic output from the pilot pump is used to control the pump and to operate pilot and solenoid valves.
- The right half of the hydraulic control valve, supplied by the right pump in the pump assembly, operates valve spools for right travel, swing, boom up and arm functions. The amount of oil flow to the actuators at the output end of each of those circuits is regulated through the movement of each individual valve spool.
- The left half of the hydraulic control valve, fed by the left pump in the pump assembly, has control spools for left travel, bucket, boom and arm operation.
- Two-stage operation is a feature of boom and arm function. All of these circuits can be operated using the output of only one half of the hydraulic pump assembly (one pump or the other), or – since both halves of the control valve have a spool and available circuit for these functions – the output of both pumps can be combined, allowing higher speed operation. Boom up, arm crowd and dumping functions can operate in any one of the two available power modes – the standard or general duty mode, the high speed/rapid cycling mode.
- Whenever the right travel or left travel control spools are shifted, output from the main pump assembly flows through the center joint to one or both of the axial piston motors driving the side frame crawler tracks. A pilot valve connected to the swash plate of each travel motor changes motor capacity (and output) in direct proportion to the position of the travel switch selected by the operator.
- The hydraulic reservoir return line and the pilot circuit both have 10 micron full flow filters. The disposable elements in these two canister-type filters trap and remove impurities from the oil in the system. An 80 mesh, 177 micron reservoir intake strainer also helps maintain system cleanliness and should be cleaned each time hydraulic fluid is drained and replaced. An oil cooler in the hydraulic system helps maintain the operating temperature of the system at approximately 50°C (122°F).
- The arm cylinder operating circuit includes anti-vacuum valves which protect the hydraulic system from vacuum that could result from external shocks or other unusual conditions. Boom, Arm, and Bucket cylinder circuit are also protected by overload relief valves. Whenever high pressure is generated as a result of a shock or overload, excess pressure is dumped to the reservoir return circuit through the relief valve.

A selection valve in the travel circuit can be used to provide constant high torque/low speed travel, or variable speed/variable torque output for travel. To prevent sliding during simultaneous travel and boom/arm/bucket operation, select the high torque/low speed travel position.

OPERATION OF WORKING COMPONENTS

BOOM OPERATING CIRCUIT

The boom operating circuit includes the right and left main hydraulic pumps (both halves of the main pump assembly), both sides of the control valve and the boom cylinder. The circuit operates in boom down mode through the first shift position and through the second shift position in boom up mode. Overload relief valves set at 360 kg/cm^2 (5,112 psi) protect the hydraulic system from damage as a result of overloads or shocks to the boom.

BOOM UP CIRCUIT

When you pull the boom control lever backward, the right side pilot valve generates secondary boom up pilot pressure that is transmitted to the BOOM1 and BOOM2 spools of the control valve simultaneously. When secondary pilot pressure reaches $7 - 9 \text{ kg/cm}^2$ (100 - 130 psi), boom control valve spools open and oil from both pumps goes to the boom cylinder.

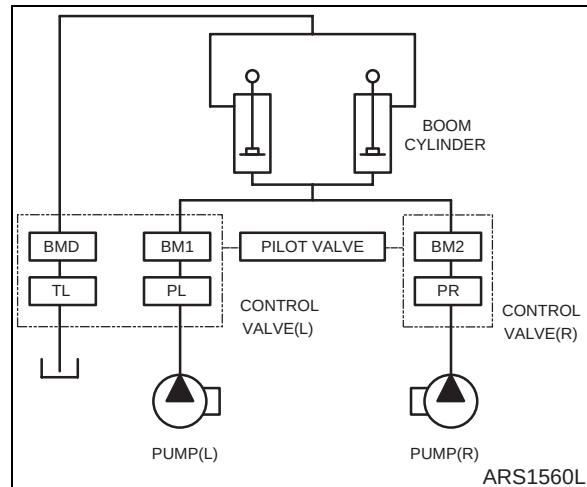


Figure 2

BOOM DOWN CIRCUIT

When the boom control lever is pushed forward, the right side pilot valve generates secondary boom down pilot pressure that is transmitted only to the BOOM1 spool of the control valve. When secondary pilot pressure reaches $7 - 9 \text{ kg/cm}^2$ (100 - 130 psi), the BOOM1 spool on the left side of the control valve opens so that oil from only one pump (PUMP(L)) assembly goes to the boom cylinder for boom lowering.

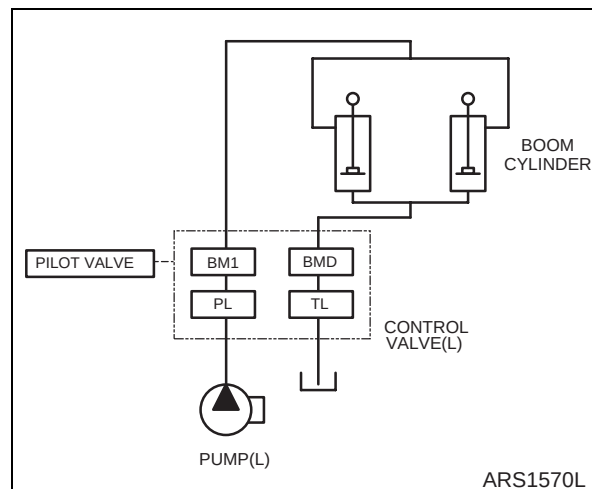


Figure 3

ARM OPERATING CIRCUIT

The arm operating circuit includes both the right and left hydraulic main pumps, the right and left halves of the control valve, a slow return orifice, and the arm cylinder. The circuit can be operated in the two-stage speed control mode which works through both halves of the control valve and doubles the volume of oil flowing to the cylinder.

Overload relief valves set at 360 kg/cm^2 (5,112 psi) have been installed at the **AM 1** and **AMD 1** ports on the right side of the control valve to protect the circuit and system components from possible damage caused by shocks and/or overload pressure. Additional protection - to prevent cavitation of the cylinder - is provided by a make-up valve and reservoir return circuit, which ensures that the volume of oil going to the cylinder will not exceed the volume of oil coming out.

ARM CROWD CIRCUIT

When the arm control lever is put in the crowd mode, the left side pilot valve generates secondary pressure that is transmitted to the AM1 and AM2 spools of the control valve simultaneously.

When secondary pilot pressure reaches 7 - 9 kg/cm^2 (100 - 130 psi), the arm control valve spools AM1 and AM2 open. Output flow from both halves of the pump assembly is directed to the arm cylinder.

When working in the arm crowd mode, under certain conditions, oil in the arm cylinder could suddenly be forced out by the weight of the arm and bucket. Insufficient oil flow to the cylinder could lead to cavitation in the cylinder and/or surging or irregular movement. This is prevented by a regeneration valve attached to the control valve which maintains the balance between oil flowing into the cylinder and oil flowing out.

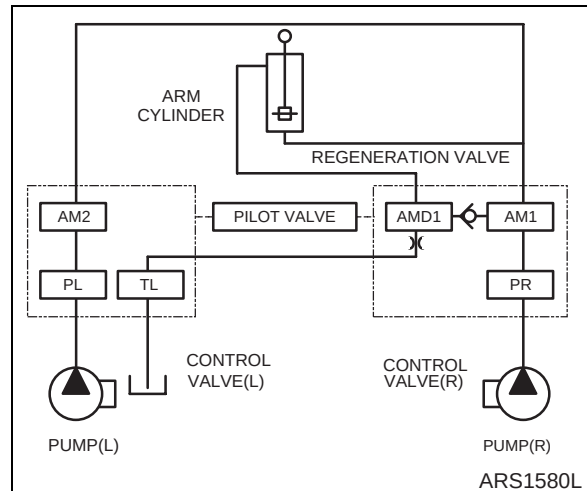


Figure 4

ARM DUMP CIRCUIT

When the arm control lever is put in "dump" mode, the left side pilot valve generates secondary pilot pressure that goes to both spools AM1 and AM2 of the control valve simultaneously.

When pilot pressure reaches 7 - 9 kg/cm^2 (100 - 130 psi), the control spools open, allowing oil from PUMP(L) and PUMP(R) to flow to the arm cylinder.

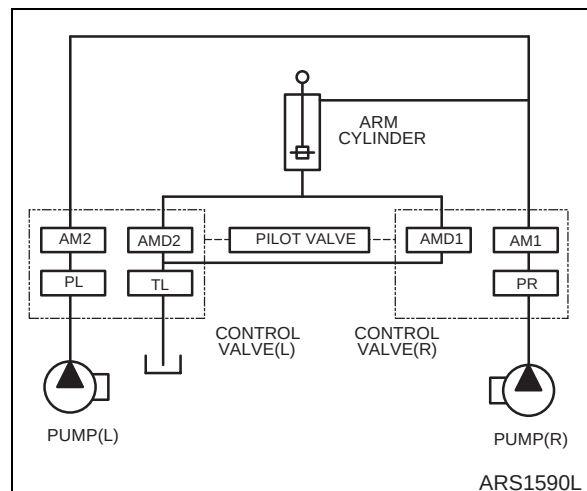


Figure 5

BUCKET OPERATING CIRCUIT

The bucket operating circuit includes the left main pump, the left half of the control valve and the bucket cylinder. 360 kg/cm² (5,112 psi) overload relief valves located at **BKT** and **BKTD 1** ports of the control valve protect the circuit and its components from damage.

BUCKET CROWD CIRCUIT

When the bucket control lever is placed in the crowd position, the bucket control valve spool on the left side of the control valve opens and oil from left main pump flows to the bucket cylinder.

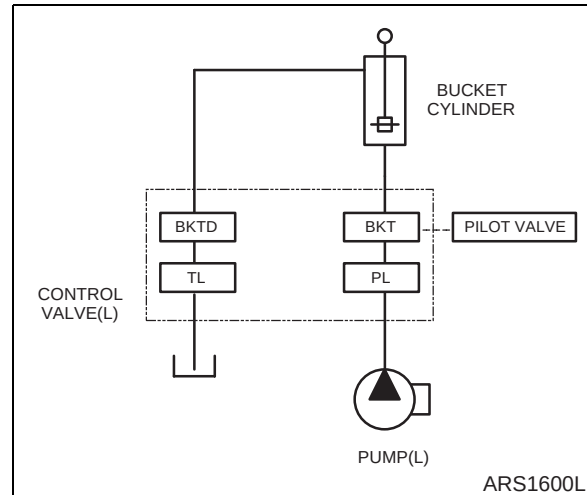


Figure 6

BUCKET DUMP CIRCUIT

When the bucket control lever is put in the dump mode, the bucket control valve spool in the left half of the control valve opens to supply oil from the left main pump to the cylinder.

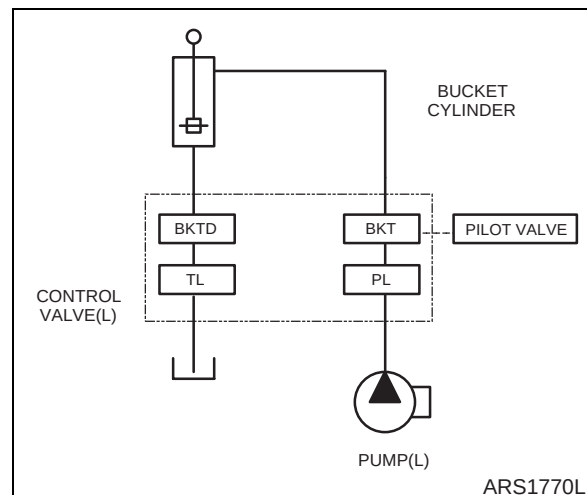


Figure 7

SWING OPERATING CIRCUIT

The swing operating circuit consists of the right main pump in the pump assembly, the right half of the control valve and the swing motor. To keep the upper works from coasting when the swing control is in neutral, an electrical sensor in the control circuit activates a valve to automatically engage a mechanical brake.

RIGHT SWING OPERATING CIRCUIT

When the swing control lever is pushed to the right swing position, pilot pressure from the left side pilot valve is directed to the right side pump regulator and right half of the control valve. Output flow from the right pump is then directed through the PR and SWR ports of the control valve to the swing motor.

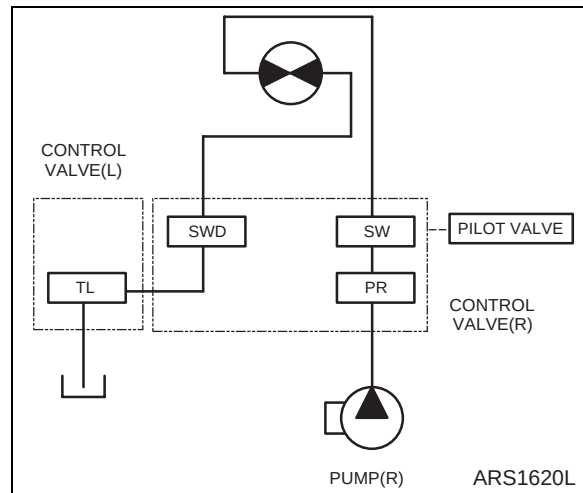


Figure 8

LEFT SWING OPERATING CIRCUIT

When the swing control lever is pushed to the left swing position, the control valve spool at the right side of the control valve moves in the opposite direction and output flow from the right pump is directed through the PR and SWL ports of the control valve to the swing motor.

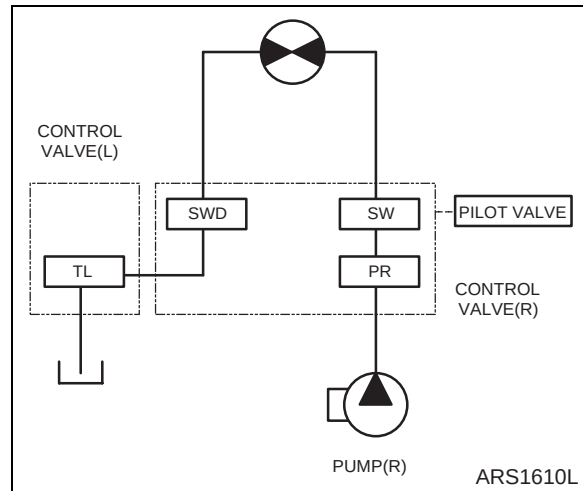


Figure 9

SWING RELIEF VALVE AND MAKE-UP VALVE

Whenever the spool is shifted to the neutral mode during swing operation, the possibility exists that surge pressure in the circuit - caused by inertial momentum of the upper works and correspondingly reduced pressure at the opposite motor port - could produce cavitation in the circuit. To keep that from happening, a 285 kg/cm² (4,052 psi) relief valve is installed in the swing motor and a large-capacity make-up valve is connected to the entrance port of the hydraulic reservoir, helping maintain acceptable pressures on both sides of the circuit.

TRAVEL OPERATING CIRCUIT

Output flow from both halves of the pump assembly is directed to the right and left travel motors through the right and left sides of the control valve, and the upper works center joint.

FORWARD TRAVEL CIRCUIT

When the right and left travel control levers are pushed forward, output from both of the main pumps is directed through the **PR**, **PL**, **TRRF** and **TRLF** ports on the control valve, through the upper works center joint, to the travel motors on each side of the machine.

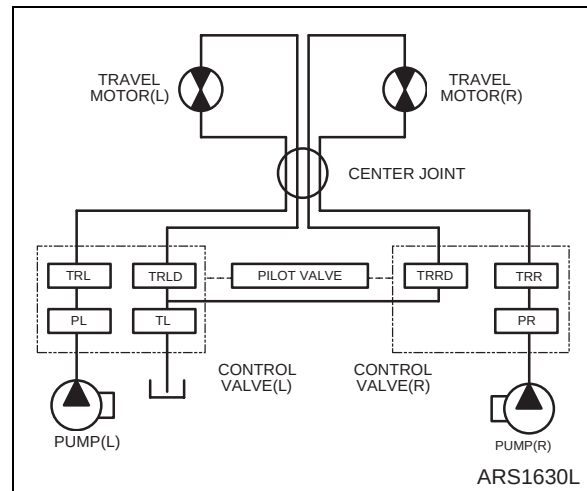


Figure 10

REVERSE TRAVEL CIRCUIT

When the right and left travel control levers are pushed backward, output from both main pumps is directed through the **PR**, **PL**, **TRRR** and **TRLR** ports on the control valve, through the upper works center joint, to the travel motors.

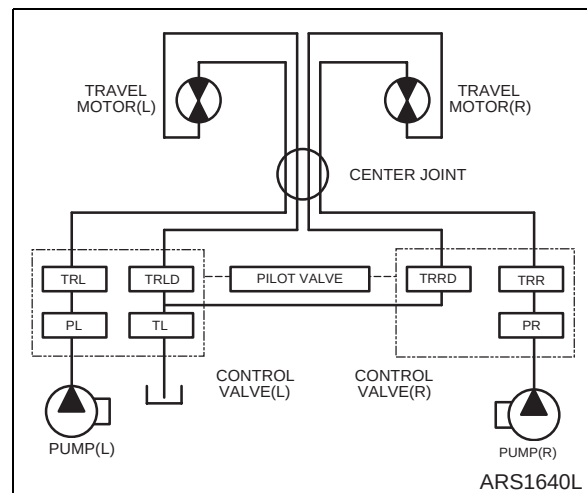


Figure 11

PROCEDURAL TROUBLESHOOTING BASELINE RECOMMENDATIONS

INITIAL CHECKS AND TESTS TO ESTABLISH OPERATING CONDITION OF THE EXCAVATOR

Triage Summary

An excavator that fails to deliver designed performance should be checked for the following:

- Hydraulic flow, first, and
- Hydraulic pressure, afterwards, in a specified order of priority through different points of the system.

To verify adequate available hydraulic flow, before any other tests are performed through the circuit:

Check engine operation -

- at 1,950 RPM with no load
- at 1,950 RPM stall load

If engine RPM drops excessively with a load or fails to surpass rated speed (1,900 RPM), performance problems may be due to inadequate hydraulic flow caused by lagging rotational speed.

NOTE: *Verify actual flow on the excavator against rated performance, with a flow meter.*

If engine tests meet specifications and adequate torque and horsepower are available at the pump drive flex coupling, pull out the electrical tray under the operator's seat to inspect the self-diagnostic display.

If the EPOS trouble code display is clear, check hydraulic functions in the following sequence:

- Pilot pressure
- Negacon, negative control pressure
- Main relief pressure (front and rear pump)
- Swing pressure
- Port relief pressure (individual control functions; boom, arm, bucket, swing and travel)
- Power boost circuit
- Standard performance tests; cylinder speed, hydraulic motor (travel and swing) speed, cylinder oil-tightness "permissible drift" test

NOTE: *System specification performance tests of individual activator function are determined by flow rate through the component or circuit, not the control pressure or system pressure available to the actuator. Poor flow through the individual circuit may indicate that the component is worn beyond tolerance limits, while all other hydraulic functions are adequate.*

IMPORTANT

It is suggested that the troubleshooter maintain the testing sequence of the preceding list. Checks and adjustments nearer the middle or the end of the list may depend on adequate functioning of systems tested nearer the top of the list.

PILOT PRESSURE

ADJUSTMENT AND TESTING



This procedure should be done with two people. To reduce the chance of accident or unintended start-up, one person should remain at the operator's control stand while checks and adjustments are made.

Vent hydraulic pressure from the reservoir before breaking the seal on fittings to install two in-line "t-style" adapters and test gauges (60 bar/1,000 psi) at the gear pump outlet port, and at the joystick control valve pilot line.

Start the engine and turn the engine speed control dial to the maximum setting. After the excavator has been operated long enough to reach normal operating temperature, back off the engine control dial to minimum rated RPM speed. With all controls in neutral, make sure the left console control stand is locked in the down (operating) position and check pressure at the gear pump outlet port and at the joystick.

If gear pump pressure is outside the tolerance specified in the table, adjust gear pump relief pressure by loosening the lock nut and turning the set screw in (clockwise) to increase pressure, or turning it out to decrease it.

NOTE: *Be aware that serial number changes and variation in the joystick assemblies used on different excavators could produce slight change in actual performance characteristics. Comparison of part numbers to serial numbers stamped on your assembly may be required, if questions or doubt exists.*

IMPORTANT

Top off the hydraulic fluid reservoir if there is any measurable loss of hydraulic oil during test gauge and adapter fitting installation.

Engine RPM	Pilot Pressure @ Pump	Pilot Pressure - Joystick
Minimum Speed Setting (full left) on Speed Control Dial	40 $\pm$ 5 bar (580 $\pm$ 73 psi)	23.5 $\pm$ 1.5 bar (341 $\pm$ 22 psi)

POWER MODE VALVE

CURRENT SIGNAL AND HYDRAULIC PRESSURE ADJUSTMENTS



WARNING!

This procedure should be done with two people. To reduce the chance of accident or unintended start-up, one person should remain at the operator's control stand while checks and adjustments are made.

The electromagnetic pressure proportioning control (EPPR) "power mode" valve is located on the underside of the pumps (not visible in the harness connections drawing, because it is underneath the assembly), near the engine/pump flexible coupling, adjacent to the pump return line. To test and adjust power shift current and pressure through the power mode valve a multi-lead jumper harness is required. The jumper harness (which is available through Daewoo After Sales Service, or could be spliced together from commonly available, purchased parts) has extra leads so that a VOM meter can be connected to the circuit.

To set up the testing equipment, turn off the engine and disconnect the single electrical lead from the power mode valve. Attach the jumper harness to the terminal on the valve, connect the test leads of the multimeter to the extra leads on the harness and reconnect the valve electrical lead.

Vent the lever on top of the hydraulic tank to relieve pressure and connect an in-line "t-style" adapter to the valve pressure port. Install a 60 bar (1,000 psi) test gauge in the adapter.

Restart the engine and increase engine RPM by turning the speed control to the maximum speed setting. Warm up the engine and hydraulic system until hydraulic oil temperature is at least 45°C (113°F). Select Power Mode on the Instrument Panel. Check current readings (in milliamps) on the VOM meter and hydraulic pressure gauge readings and make sure both conform to the values in the table below.

NOTE: *If recorded values do not conform to the specified current or pressure in the table, back off the lock nut on the end of the valve, turn the adjusting screw 1/4 turn and re-check current and pressure. Repeat adjustment as required to obtain specified performance and retighten the valve lock nut.*

Mode	Engine RPM	Current	Pressure
Power Mode	High Idle: 2,050 RPM	600 ±20 mA Mid-range value corresponding to engine RPM for both current and hydraulic pressure readings.	4 ±2 bar (58 ±29 psi)
Standard Mode	High Idle: 2,050 RPM	0 mA	36 ±6 bar (522 ±87 psi)

SWING PRIORITY VALVE

CONTROL VALVE PRESSURE AND CURRENT ADJUSTMENTS



This procedure should be done with two people. To reduce the chance of accident or unintended start-up, one person should remain at the operator's control stand while checks and adjustments are made.

The swing priority control valve is located inside the compartment behind the cabin.

The same jumper harness used for testing the power mode (EPOS) control valve is used to test this valve. Turn off the engine, disconnect either of the electrical leads and connect the test equipment to that side of the valve. An in-line "t-style" gauge adapter can be used to connect a 60 bar/870 psi (1,000 psi) test gauge to the outlet (pressure) side of the valve. Set the engine control speed dial to maximum and warm up the engine to at least 45°C (113°F) before making any tests.

NOTE: *Vent air from the hydraulic system before installing test equipment. Use the lever on the reservoir, while the engine is running. Pour clean replacement fluid back into the system if excessive fluid was lost.*

To verify operation of the swing priority solenoid valve, connect test equipment and begin testing with the work mode switch set to "digging" (the state turning off the "trenching" lamp) and the engine speed control dial at the maximum RPM position.

Operate the swing motor in both directions. Measure signal current and hydraulic pressure through the valve and record the highest and lowest values as the swing motor rotate clockwise and counter clockwise several times. Reset the work mode control to "trenching" mode and repeat the same tests.

Valve Function / Work Mode	Signal Voltage	Hydraulic Pressure
Swing Priority / Digging	0 V	0 bar (0 psi)
Swing Priority / Trenching	20 - 30 V	20 - 40 bar (290 - 580 psi)

NOTE: *If recorded values do not conform to the specified current or pressure in the table, readjust as required.*

PRESSURE UP VALVE

CHECKS AND ADJUSTMENTS



WARNING!

This procedure should be done with two people. To reduce the chance of accident or unintended start-up, one person should remain at the operator's control stand while checks and adjustments are made.

Vent hydraulic pressure from the reservoir to install an in-line "t-style" adapter and test gauge (60 bar/1,000 psi) at the pilot pump signal port relief valve outlet.

Start the engine and turn the engine speed dial to maximum. When normal operating temperature is reached,

- Check pilot pressure and readjust it, if required;
- Select the Instrument Panel rear pump "pressure display";
- Select Power Mode;
- Stall the boom cylinder (towards the extend side);
- Read rear pump pressure on the Instrument Panel display.

Repeat all tests with and without "pressure up" selected through the console rocker switch and joystick button.

If the two-stage main relief valve was not set correctly and main relief high-stage pressure ("pressure up") is outside the tolerance range, begin valve adjustment by loosening the outside (widest diameter) lock nut on the relief valve. Turn the adjusting screw clockwise to increase pressure, or counterclockwise to decrease it. Pressure must be 350 bars (5075 psi), or up to 10 bars (145 psi) higher.

Because one adjustment can affect the other, check low-stage main relief pressure by repeating the cylinder stall test without "pressure up." Readjust standard relief pressure by turning the inner-most (smallest diameter) screw clockwise to increase the setting, or counterclockwise to decrease it. Pressure should be at least 330 bars (4,785 psi), but less than 335 bars (4,858 psi).

IMPORTANT

Pressure adjustments and checks cannot be made if pilot pressure is outside the specified range. Refer to the pilot pump adjustment procedure if required, then proceed with any necessary adjustments to main relief pressure settings.

Power Mode	Operation	Main Pressure and Tolerance	Pilot Pressure and Tolerance
Power Mode	Neutral, No Operation	20 - 40 bar (290 - 580 psi)	30 bar + 10 bar (435 psi + 145 psi)
Power Mode	Cylinder Stall	330 bar + 5 bar (4,785 psi + 75 psi)	30 bar + 10 bar (435 psi + 145 psi)
Power Mode W/ Pressure Up	Cylinder Stall	350 bar + 10 bar 5,075 psi + 145 psi	30 bar + 10 bar (435 psi + 145 psi)

NOTE: *The electrical pressure up (power boost) solenoid valve located alongside the swing priority solenoid and arm speed control solenoid, in compartment rear of the operator's cab, must be operating correctly, or pressure tests and further adjustments cannot be made.*

PUMP INPUT POWER CONTROL

PUMP REGULATOR ADJUSTMENT



WARNING!

This procedure should be done with two people. To reduce the chance of accident or unintended start-up, one person should remain at the operator's control stand while checks and adjustments are made.

To perform these adjustments accurately the use of a flow meter is strongly recommended, as is consulting the factory (before starting work) to validate the need for making regulator adjustments. Vent hydraulic pressure from the reservoir before breaking the seal on fittings to install the flow meter kit. (Refer to the "Flow meter Installation and Testing" procedure.)

IMPORTANT

Before starting this procedure or going on to make any changes of adjustment settings,

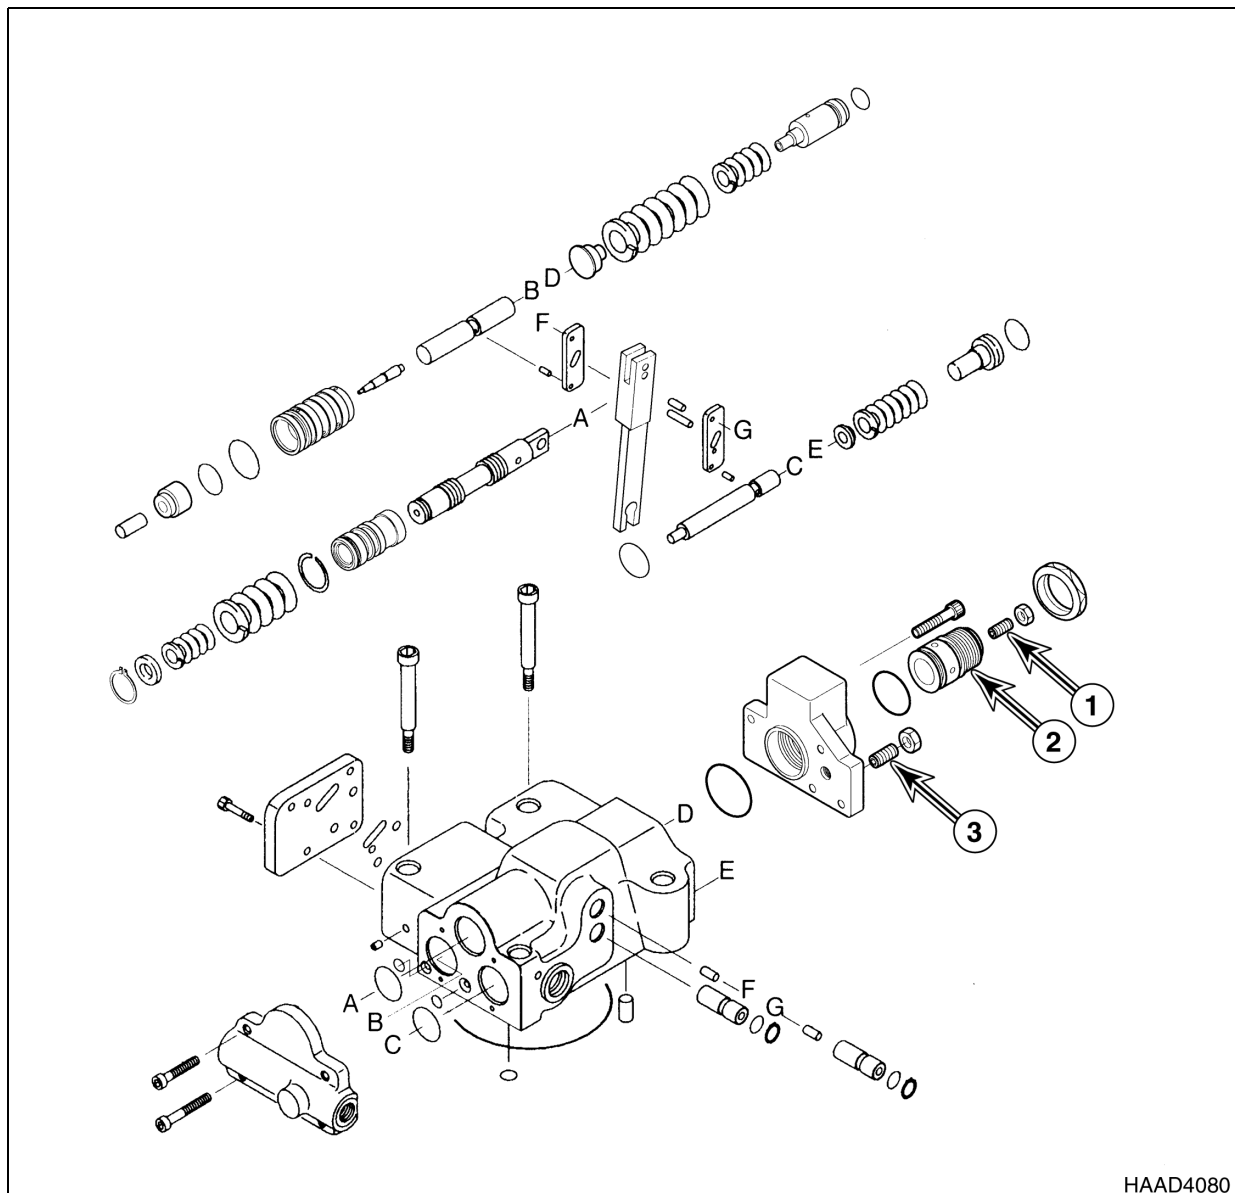
- **Verify engine output to the rated speed – 2,050 ±50 RPM.**
- **Permanently mark setscrew positions at the current regulator control setting.**

Use a scribe or other permanent marker to identify a reference point on adjusting screws with a corresponding reference on the body of the valve. The adjustment process affects a complex balance and could require some time to complete. If adjustment has to be interrupted or postponed, reference marks at the adjustment point allow immediate restoration of original performance.

This adjustment procedure is normally performed:

- If the engine is being consistently overloaded (and engine troubleshooting shows engine performance to be at or above rated output);
- If reduced cylinder speed and diminished work performance provide an indication that rated, maximum pump flow may not be available (and all other troubleshooting gives no indication of other flaws or hydraulic system defects);
- If pump output is out of balance and one pump is failing to keep up with the output flow of the other.

To check pump imbalance without a flow meter, travel the excavator forward on flat, level terrain. If the machine veers off despite neutral control input and even, balanced track adjustment, the pump which supplies output to the track frame toward which the excavator is veering is weak.



HAAD4080

Figure 12

Refer to the illustration of the pump regulator control valve (Figure 12) for the location of adjustment screws (1, 2 and 3). There are two different adjustments, along with the Negacon, negative control, adjustment screw (3, directly below 1 and 2). Each one of the adjustment procedures could affect the setting of the others.

Check and record the arm dump speed performance test before and after input power adjustment, whether or not a flow meter is used.

NOTE: *Regulator adjustments affect total cumulative horsepower, since each regulator compensates for the output of the other. It is not necessary to adjust both regulators at the same time, but after checking or adjusting one of them, the remaining unit should also be checked.*

Start the engine and turn the engine speed dial to maximum. When normal operating temperature is reached, loosen the largest diameter lock nut around the adjustment screw (2) for the outer regulator spring. Tightening the screw shifts the P/Q (Pressure/Flow) control curve to the right, and increases compensating control pressure.

On the other hand, if the persistent cause of performance problems is engine overloading, decreasing the adjustment by turning the larger diameter adjusting screw (2) out will decrease pump input horsepower. 1/4 turn on the adjusting screw is equal to approximately 17 horsepower.

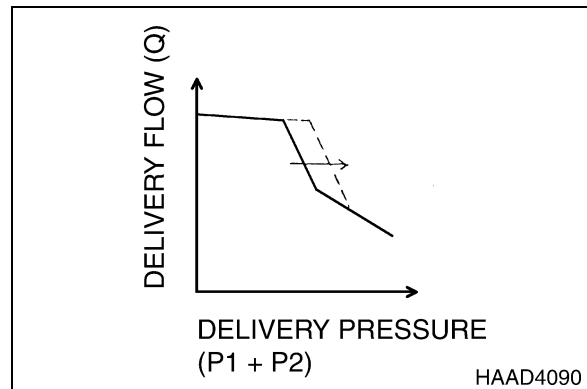


Figure 13

IMPORTANT

Because changing the position of adjusting screw (2) also affects the setting of the adjustment for the inner spring, the smaller diameter adjusting screw (1), turn in the inner screw 198° (slightly more than 1/2 turn, 180°) before screw (2) is backed out 1/4 turn (90°).

NOTE: For each full turn of adjustment on the larger diameter screw (2), the square-tipped adjusting screw should be turned in the opposite direction 2.2 turns to avoid changing inner spring adjustment.

Pump input power adjustments are normally made in small increments, 1/4 turn (90°) or less, each time.

Turning the square-tipped, smaller diameter screw (1) clockwise moves the flow curve up, increasing flow and then input horsepower.

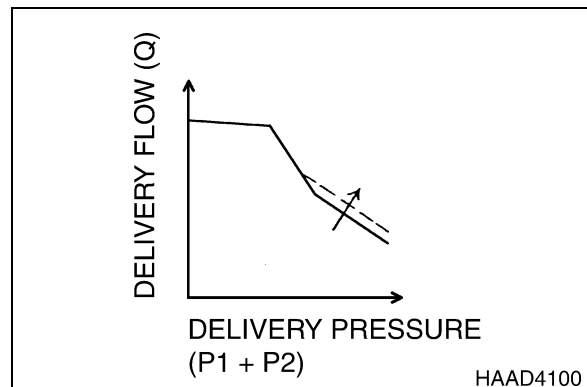


Figure 14

The adjusting screw (1, Figure 16) affects the delivery rate (Q) of the pump. Tightening the adjusting screw decreases the maximum cut flow (as shown in Figure 15) while backing out the screw increases cut flow delivery rate.

Balance both pumps for equal output.

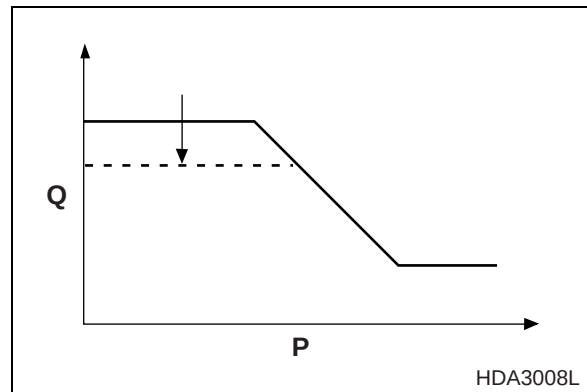


Figure 15

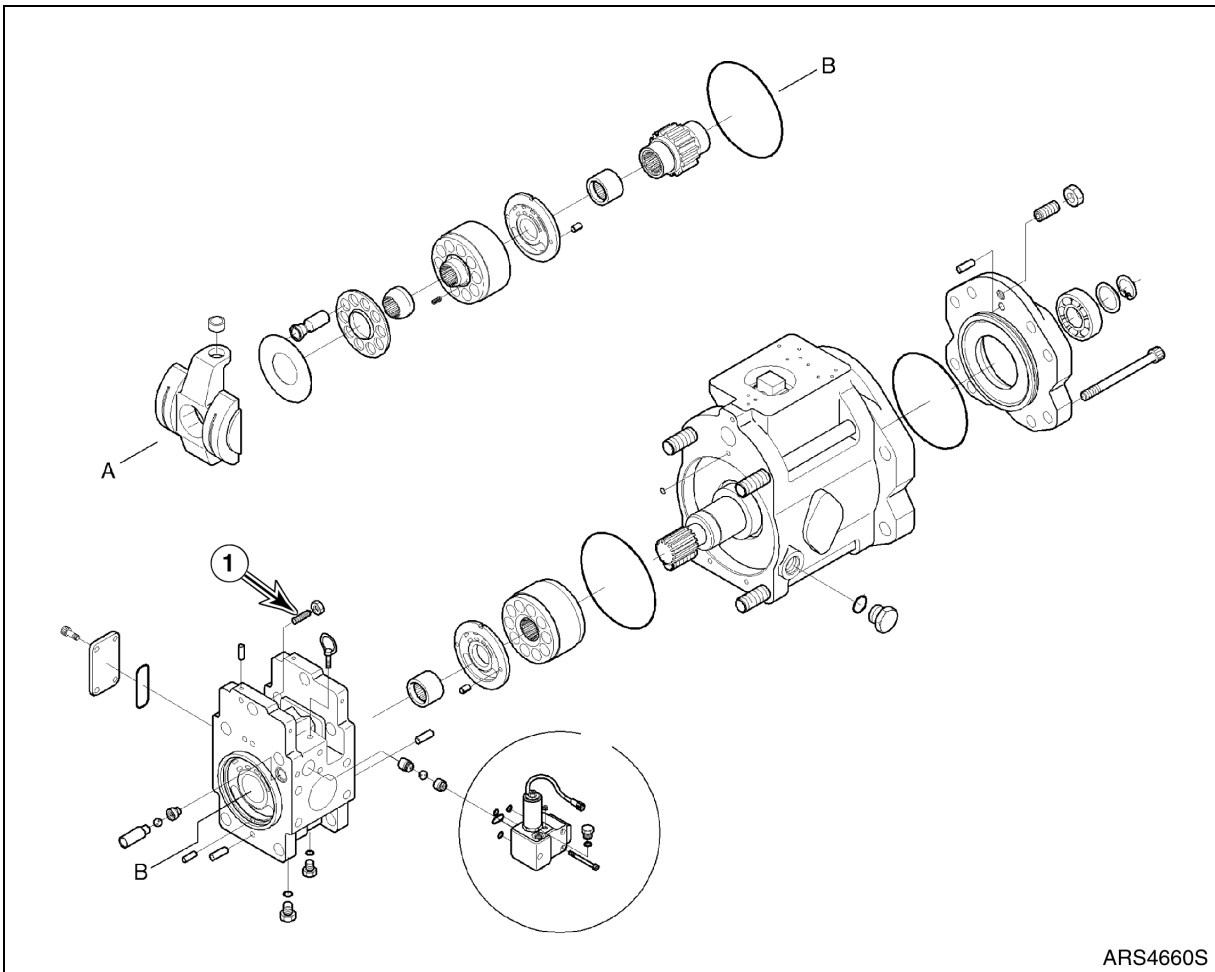


Figure 16

FLOW METER AND FLOW METER KIT INSTALLATION AND TESTING

Checking regulator and pump output, to assess the output balance between the front and rear pumps and to verify operating adjustment of each regulator, will require installation of a flow meter.

The After Sales Service department of the nearest local Daewoo dealer can assist you with these tests or, if you prefer carrying out your own testing, they should be able to help in putting together a hose and fitting kit (or the required dimensions and specifications for hoses and fittings) to allow you to install a flow meter downstream from the main pump assembly.

Installation and Testing Procedure

- Turn off the engine and operate controls to release hydraulic pressure from the accumulator.
- Vent the reservoir to release all pressure from the hydraulic system.
- Remove guard panels from around the main pump assembly.
- Disconnect the main pump discharge output line. Install the input flange of the flow meter on the pump end of the output line.
- Cap off the unused (input) end of the pump discharge line with a blocking flange.
- Bolt up a pre-measured length of hydraulic hose, between the output end of the flow meter assembly and the top of the reservoir. Use appropriate fittings and adapter flanges to guarantee a pressure tight seal.

NOTE: *Be sure to maintain even tightening torque on all flange fittings. Use Loctite brand "PST 545" (or an alternate manufacturer's hydraulic system joint seal) if required, to give an airtight seal.*

- An assistant – who must remain at the operator's control station at all times – should restart the engine and run it long enough (at minimum RPM) to de-aerate the system and warm up the engine and hydraulic system to operating temperature.

Record the values of all test results in three columns, comparing 1) pump pressure (from the instrument panel display) with 2) measured flow, in gallons or liters per minute, from the installed flow

meter. The third column of test results should provide a record of engine RPM measured during each of the following tests – with the engine speed control dial set at maximum, the power mode selector at Power Mode and the work mode selector at digging mode:

- Unloaded maximum engine speed baseline test (all controls in neutral).
- Front pump test – operate "travel right" lever. Record values at all specified pressures.
- Rear pump test – operate "travel left" lever. Record values at all specified pressures.

Record the values for each of the three tests (neutral, travel right and travel left) at the following pump pressure levels, with travel speed control set at "high speed."

Engine RPM	Pressure	Flow
	100 kg/cm ² (1,422 psi)	
	135 kg/cm ² (1,930 psi)	
	180 kg/cm ² (2,560 psi)	
	240 kg/cm ² (3,413 psi)	
	320 kg/cm ² (4,550 psi)*	
	*See Note, below	

Compare recorded values with output shown in the P-Q curve in the specifications section of this book.

If test results do not measure up to specified values, pump output tests can be repeated using different control levers. Recheck front pump operation while stroking the bucket cylinder out lever, and the rear pump by actuating the swing control lever.

NOTE: *When testing bucket and swing functions, read maximum flow tests at 330 kg/cm² (4,785 psi), not 350 kg/cm² (5075 psi).*

SWING SYSTEM TROUBLESHOOTING

PRECAUTIONS/INITIAL CHECKS

1. Stop work. Release all weight or any type of load safely before proceeding. Avoid risking injury or adding to damage.
2. Turn off engine and disengage control functions until initial tests are ready to be made.



WARNING

Prevent possible injury and/or loss of operating control. Stop work and park the excavator at the first indication of:

1. **Equipment breakdown**
2. **Inadequate control response**
3. **Erratic performance**

Stop the machine, put the boom and arm in the inoperative (overnight park) position and begin by making the fastest, simplest checks first:

- Check oil level.
- Check for overheating, oil leaks, external oil cooler clogging or broken fan belt. Consult service record for prior repair/service work.
- Drain some tank oil to a clean, clear container. Look for metal shavings/grit, cloudiness/water or foam/air bubbles in the oil.
- Check for wobble through the engine/pump flex coupling. Run engine with the pump input hydraulic power control nut turned to the lowest power to check the engine.
- Investigate unusual operating noises or vibration. Check for loose bolts, connections.

SWING RELIEF VALVE CHECKING AND ADJUSTMENT

Make a check of operating pressures through the swing relief valve if:

- The swing motor fails to turn.
 - Swings in one direction only.
 - Swings but continues to coast.
 - There is drifting on a slope.
1. Check operation by connecting:
 - A. Two 600 bar (8,700 psi) pressure gauges to the inlet and outlet measuring ports on top of the swing motor.

Pressure should be between 280 and 290 bar (4,060 psi and 4,205 psi), with both swing locks engaged. With swing locks released, during full acceleration and deceleration, pressure should approach 250 bar (3,625 psi) in each direction.
 - B. Connect a 60 bar (870 psi) pressure gauge at the "SH" port of the hydraulic brake.

Pressure should always stay at or above 13 bar (190 psi) when operating swing, boom or arm.
 - C. Connect a 10 bar (145 psi) gauge at the motor makeup valve.

Pressure should stay consistently above 2.5 bar (36 psi). If pressure falls below the recommended minimum level, forceful acceleration of the swing motor could lead to cavitation of the circuit and stalling, slowed rotation, noise and possible damage.

2. If main inlet and outlet pressures were off in the preceding tests in Step 1, adjust swing relief valve pressure.

Following adjustment, repeat the operating pressure tests (with gauges connected to the inlet and outlet test ports on top of the swing motor) and check pressures with the swing locks engaged and released.

If pressure adjustment fails to restore adequate performance, proceed to the Troubleshooting – Swing table.

3. If pressure tests were at recommended levels through the main inlet and outlet ports, and through the “SH” port of the swing brake, the causes of poor swing performance could include a faulty swing motor, drive train overloading or gearbox defect, or a problem in the brake assembly or swing control valve. Proceed to the troubleshooting information in the next procedure.

If pressure through the “SH” port was tested below the minimum 13 bar (190 psi) level, check the shuttle valve in the rear compartment behind cabin. When pressure through the port is at the recommended level, the brake release valve should disengage the swing brake, allowing the swing motor to rotate the excavator. If pressure adjustment to the valve has been restored but the brake still fails to release, the brake piston or friction plate may be frozen, requiring disassembly of the motor and parts repair/replacement.

4. If pressure tested at the motor makeup valve falls below recommended minimum level, and consequent problems with cavitation, stalling and surging are observed, check the restriction valve. If pressure adjustment to the valve has been restored but if problems with cavitation continues, disassemble the upper swing motor housing and clean or replace assembly components as required.

NOTE: *If all tested pressures are at or above recommended levels, and there are no mechanical problems in the drive train or in the motor/brake assembly, the problem will require further hydraulic troubleshooting. It's also possible that a defective joystick, an intermittent short in an electrical control circuit or a problem in the e-EPOS circuit is causing diminished swing performance. Pull out the e-EPOS indicator panel from underneath the operator's seat and perform the self-diagnosis test. If the display panel reads code “0.2,” it is reporting that the swing priority proportional valve is not functioning, except in the minimum “fail-safe” mode. Refer to the Electrical section of this book for more information.*

TROUBLESHOOTING – SWING GEARBOX

Problem	Possible Causes	Remedies
Swing motor fails to operate and:		
Three pressure tests at motor, brake or makeup valve show low reading(s).	Swing relief valve defective Brake release valve defective Motor makeup valve defective.	Adjust pressure to recommended range in affected valve. OR Disassemble and clean valve assembly. Replace all valve components that show damage.
All three pressure checks are OK but left travel also fails to run.	Exchange front and rear pump inlet and outlet hoses to test pump function.	If swing and left travel are restored but right travel stops working, replace or repair P1 pump.
All three pressure tests are OK, but machine fails to swing at all.	Brake assembly or motor friction plate failing to release.	Check for binding. Disassemble and repair.
	Pilot (control) pressure low or swing control valve stuck.	Disassemble / Repair pilot pressure swing spool (305) and / or swing control valve.
	Swing motor defective.	Test motor drain rate. Replace / Repair motor.
	Gear train defective.	Refer to "Swing Gear Troubleshooting" procedure.
Swing functions but only at reduced RPM.	Causes listed above could also produce dragging swing, OR hot or wrong oil OR worn-out parts.	Check above list; then replace oil, test motor drain rate and check for "03" reading (e-EPOS self-test).
Left travel speed is also reduced.	Low output at P1 pump or external pilot piping leaks/is clogged.	Clean and repair piping or repair or replace pump P1.
Swing control movement is reversed.	Inlet / outlet piping reversed.	Reset controls or reverse piping.
Machine swings but continues coasting on past stopping point.	Swing control valve spool not centered.	Replace return spring; clean/ repair valve piston and spool.
	Pilot pressure may be outside range.	Disassemble, clean or replace pilot relief valve or pilot valve.
	Swing relief valve may be faulty.	Repair/Replace swing relief valve.
Swing movement is in one direction only.	Check to see that pilot pressure is the same right and left.	If pilot pressure is unequal, clean or repair piping or repair/ replace valve.
	Swing control valve spool may be stuck.	Repair/Replace the swing control valve.
	Swing relief valve may be faulty.	Repair/Replace the swing relief valve.

Problem	Possible Causes	Remedies
No rotation and:		
Pressure at swing motor inlet increases.	Swing brake not releasing.	Check brake engagement and disengagement; check release pressure.
	Internal damage to gearbox drive train.	Replace broken gears and drive train assemblies.
	Overload.	Reduce load weight.
Pressure at swing motor inlet shows no increase, and the swing motor is making irregular noises.	Swing motor drive shaft damage.	Replace swing motor.
	Internal damage to gearbox drive train.	Repair/Replace broken or faulty assemblies.
Pressure at swing motor inlet shown no increase, but without irregular noises from the swing motor.	Hydraulic pump or valve problem.	Troubleshoot hydraulic system.
Oil Leakage:		
From drive shaft From bolted connections or other assembled surfaces.	Oil seal damaged Assembly compound (joint sealer) old and not sealing, bolt not tight or flange warped.	Replace oil seal Disassemble and check mating surfaces. Reapply Loctite; torque bolts to specifications.
Excess heat:		
Gearbox casing becomes excessively hot, with or without irregular noise (s), during operation.	Low oil level.	Replace oil; refill to specified level.
	Bearings or gears worn but not completely inoperative.	Repair or replace gearbox.

TROUBLESHOOTING – HYDRAULIC PROBLEMS

Problem	Possible Causes	Remedies
Attachment cylinders, swing and travel motors are all inoperable. Loud noises are heard from main pump assembly.	Main pump(s) malfunction.	Repair or replace.
	Low oil level in hydraulic system.	Refill.
	Main pump inlet (oil supply) piping or hose damaged.	Repair or replace.
Attachment cylinders, swing and travel motors are all inoperable. No usual or loud noises can be heard.	Pilot pump malfunction.	Repair or replace.
	Pilot cutoff solenoid stuck.	Repair or replace.
	Pilot cutoff switch faulty.	Repair or replace.
	Engine/pump flex coupling damaged.	Replace flex coupling.

Problem	Possible Causes	Remedies
Sluggish performance of all hydraulic functions – attachment, swing and travel.	Main pump(s) damaged or worn.	Repair or replace.
	Main relief valve pressure off.	Readjust pressure.
	Low oil level in hydraulic system.	Refill.
	Hydraulic reservoir intake strainer clogged.	Clean.
	Pump inlet (supply side) piping or hose allowing air into hydraulic system.	Tighten connection.
Oil temperature abnormally high.	Oil cooler clogged or air circulation to cooler blocked.	Clean.
	Cooling fan belt tension too loose.	Readjust belt tension.
	Relief valve set too low.	Readjust valve.
	Relief valve in constant use.	Reduce or slow work load or cycling rate.
	Hydraulic oil severely neglected or incorrect for application.	Replace oil.
One circuit in hydraulic system inoperable.	Overload relief valve malfunction.	Readjust or replace.
	Oil leak at make-up valve.	Clean, repair.
	Control valve spool damaged.	Repair or replace.
	Dirt in control valve spool.	Clean or replace.
	Actuator (joystick, foot pedal) damaged or worn.	Repair or replace.
	Internal seal leak in cylinder.	Repair or replace.
	Cylinder rod damaged.	Repair or replace.
	Pilot valve or piping malfunction.	Repair or replace.
	Mechanical linkage frozen, loose or damaged.	Repair or replace.
Travel motors inoperable.	Center joint damaged.	Repair or replace.
	Parking brake not releasing.	Repair or replace.
	Travel motor worn or damaged.	Repair or replace.
	Travel motor pilot piping damaged.	Repair or replace.
Travel motors operate very slowly.	Track tension poorly adjusted Low oil in idlers or rollers.	Readjust tension Refill.
	Travel brake dragging.	Repair.
	Track frame out of alignment, deformed or twisted.	Repair.
Swing motor inoperable.	Swing brake not releasing.	Repair or replace.
	Relief valve malfunction.	Repair or replace.
	Pilot piping damaged.	Repair or replace.

Problem	Possible Causes	Remedies
Swing motor operates unevenly.	Swing gear, bearing or mounting loose or worn.	Repair or replace.
	Lubricant worn away, inadequate.	Grease.
	Swing relief valve may be faulty.	Repair/Replace the swing relief valve.

TROUBLESHOOTING – CONTROL VALVE

Check control valve problems only after other hydraulic circuit operational tests have been made. Refer to the “Troubleshooting Baseline Recommendations” procedure. Pump flow, pilot pressure, Negacon pressure, main relief pressure, and port relief pressure should all be checked before starting to work on the control valve. Make sure the hydraulic system is topped up to the required level and free of oil leaks or air in the system that could cause cavitation problems.

Problem	Possible Causes	Remedies
Main Relief Valve	Particulate contamination.	Disassemble, clean main poppet.
	Broken or damaged spring.	Replace.
	Adjusting screw loose.	Readjust.
	Main poppet sticking.	Repair/replace.
	Clogged orifice in pilot passage to control valve.	Clean/replace.
Cylinder goes down in spool neutral.	Excessive clearance between casing and spool.	Replace spool or casing.
	Spool does not return to neutral/ sticking spool.	Check secondary pilot pressure.
	Spool does not return to neutral because of dirt or other contaminants.	Clean.
	Broken or damaged spring.	Replace.
	Main relief or port relief not operating properly.	See above.
	Impurities in pilot circuit.	Clean.
Cylinder drops before start at boom up operation	Rod check valve damaged or clogged.	Clean/replace.
	Poppet sticking.	Clean/replace.
	Broken or damaged spring.	Replace.
Slow operation or response	Excessive clearance between spool or casing.	Check pilot pressure and/or replace spool or casing.
	Sticking spool.	Clean/replace.
	Broken or damaged spring.	Replace.
	Main or port relief valve damaged.	Check pressure/replace.

Problem	Possible Causes	Remedies
Swing priority not operating correctly.	Sticking spool.	Clean/replace.
	Solenoid valve faulty.	Replace.
Boom and arm cylinders do not perform normally in combined operation.	Priority valve faulty or spool sticking.	Check pilot pressure.
	Broken or deformed spring.	Replace.
	Excess clearance between right and left casing and valve spool.	Clean/replace.
	Clogged spool passage.	Clean/replace, replace filter.
Relief valve malfunctions:		
Pressure does not increase at all.	Main poppet or pilot poppet stuck open.	Clean/replace.
Irregular or uneven pressure.	Poppet seat damaged or pilot piston sticking to main poppet.	Clean/replace.
	Loose lock nut and adjusting screw.	Readjust.
	Components worn out, past wear limits.	Replace.

TROUBLESHOOTING – TRAVEL CONTROL VALVE

Problem	Possible Causes	Remedies
Secondary pressure does not increase.	Low primary pressure.	Check primary pressure.
	Broken spring.	Replace spring.
	Spool sticking.	Clean, repair or replace.
	Excess spool to casing clearance.	Replace spool casing.
	Worn or loose universal joint (handle) subassembly.	Repair or replace U-joint subassembly.
Secondary pressure too high.	Dirt, other interference between valve parts.	Clean, repair or replace.
	Return line pressure too high.	Redirect return line.
Secondary pressure does not hold steady.	Dirt, other interference between valve parts, or worn spool sticking intermittently.	Clean, repair or replace.
	Interference or binding on spool return spring.	Clean, repair or replace.
	Interference, restriction or unsteady pressure in tank return line.	Repair or re-route tank return line.
	Air bubbles in piping (temporary) or air leak.	Vent air, or repair leak.
NOTE: Look for evidence of leaking oil.		

TROUBLESHOOTING – JOYSTICK CONTROL VALVE

Problem	Possible Causes	Remedies
Secondary pressure does not increase.	Low primary pressure.	Check primary pressure.
	Broken spring.	Replace spring.
	Spool sticking.	Clean, repair or replace.
	Excess spool to casing clearance.	Replace spool casing.
	Worn or loose handle subassembly.	Repair or replace handle subassembly.
Secondary pressure too high.	Dirt, other interference between valve parts.	Clean, repair or replace.
	Return line pressure too high.	Redirect return line.
Secondary pressure does not hold steady.	Dirt, other interference between valve parts, or worn spool sticking intermittently.	Clean, repair or replace.
	Interference or binding on spool return spring.	Clean, repair or replace.
	Unsteady pressure in tank return line.	Redirect return line.
	Air bubbles in piping (temporary) or air leak.	Vent air, or repair leak.
NOTE: Look for evidence of leaking oil to help locate damaged seals or gaskets that could be the cause of air leaks.		



ACCUMULATOR



CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that is in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

MODEL	SERIAL NUMBER RANGE
Solar 300LC-V	1001 and Up
Solar 300LL	1001 and Up
Solar 340LC-V	1001 and Up
Solar 420LC-V	1001 and Up
Solar 470LC-V	1001 and Up

TABLE OF CONTENTS

General Description.....	3
Specifications	4

GENERAL DESCRIPTION

The accumulator is a gas-charged storage device designed to hold a reserve quantity of hydraulic fluid under pressure. Accumulators are used in hydraulic circuits in much the same way that condensers (or capacitors) are used to collect, store and maintain electrical charge in a circuit.

In a hydraulic circuit, minor variations or lags in pump output that might otherwise cause unsteady or irregular operation are made up from the supply of pressurized oil in the accumulator.

Reference Number	Description
1	Screw Plug
2	Steel Pressure Vessel
3	Diaphragm
4	Fluid Valve

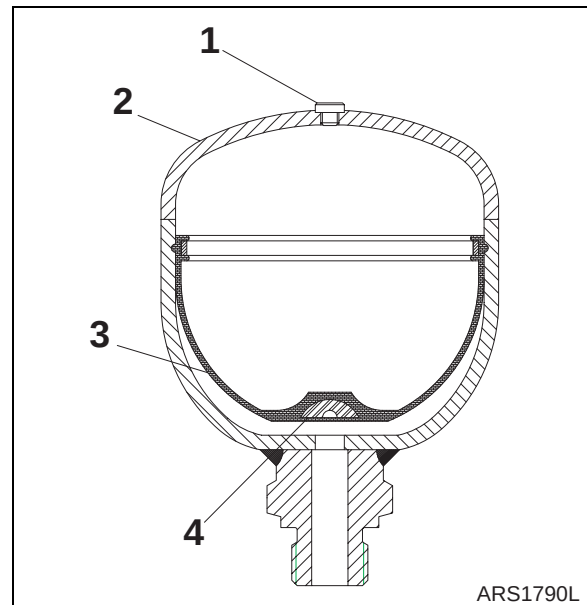


Figure 1

Accumulators are solidly constructed to resist the high operating pressures of the fluids they contain. There are only three main moving parts: a plug at the top allows pre-charging or expelling gas from the compressible, pre-charged upper chamber; a valve assembly at the bottom of the accumulator for passing hydraulic fluid in and out, and an elastic diaphragm to separate the two chambers. The flexible diaphragm changes shape to conform to the changing pressures and volumes of the two fluids in the upper and lower chambers.

There are six possible positions the diaphragm can be in and they are as follows:

1. With no gas charge in the upper chamber 0 bar (0 psi, empty) and no oil in the bottom 0 bar (0 psi, dry) the elastic diaphragm hangs loosely.
2. When the pre-pressure charge of gas (usually nitrogen) is introduced through the port at the top of the accumulator, the diaphragm expands to maximum size. The valve button in the center of the diaphragm pushes into the fluid opening in the bottom chamber, sealing off the lower valve. If the pressure of the gas charge exceeds system oil pressure, no fluid enters the accumulator. The button also keeps the diaphragm from protruding into the lower valve opening.

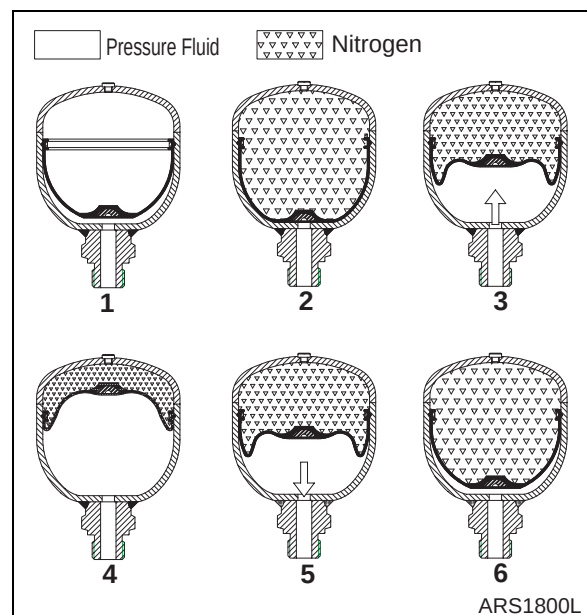


Figure 2

NOTE: *Pre-charge pressure is referred to as the "P1" pressure. The accumulator manufacturer's "P1" rated pressure should be stamped or marked on the accumulator's rating plate. Annual checks of actual pre-charge pressure should be made by tapping a hydraulic pressure gauge (and 3-way adapter coupling) into the valve on the bottom of the accumulator. When hydraulic fluid is pushed out the lower valve opening by the pressure of the gas charge on the other side of the diaphragm - and there is no counter-pressure from system oil - the valve button on the bottom of the diaphragm eventually seals off the lower oil passage. Just after the needle on the gauge reaches its highest point (when there is 0 bar (0 psi) resistance from hydraulic system pressure) pressure on the gauge will drop sharply to zero, as the accumulator is completely emptied of oil and the diaphragm button closes.*

Record the highest gauge reading and compare to the "P1" rated pre-charge pressure on the accumulator manufacturer's data label. Repeat this test at least once a year to verify proper functioning of the accumulator.

3. As hydraulic system pressure overcomes accumulator pre-charge pressure, the flexible diaphragm begins to retract upward.
4. When system oil is at highest working pressure and the accumulator fills to maximum reserve capacity, the flexible diaphragm is pushed up into the top of the upper chamber.

The highest working pressure is sometimes referred to as the "P3" pressure and can also be referenced on the manufacturer's data label on the exterior of the accumulator.

5. If system oil pressure begins to fall off or is momentarily checked or interrupted, the energy stored on the other side of the diaphragm, in the form of compressed gas, pushes oil back out of the lower chamber, maintaining oil pressure of the circuit.
6. With minimal system pressure, an equilibrium point may be reached in which accumulator pre-charge pressure and hydraulic system oil pressure achieve a rough balance. In this condition a minimal amount of oil is stored in the accumulator.

SPECIFICATIONS

Model	Serial Number	System	Charge Pressure	Volume
Solar 300LC-V	S/N 1001 thru 1099	Pilot / Travel	10 kg/cm ² (140 psi)	320 cc (19.53 in ³)
	S/N 1100 and Up			750 cc (45.77 in ³)
Solar 300LL	S/N 1100 and Up	Pilot / Travel	10 kg/cm ² (140 psi)	750 cc (45.77 in ³)
Solar 340LC-V	S/N 1001 thru 1059	Pilot / Travel	10 kg/cm ² (140 psi)	320 cc (19.53 in ³)
	S/N 1060 and Up			750 cc (45.77 in ³)
Solar 420LC-V	S/N 1001 thru 1029	Pilot / Travel	10 kg/cm ² (140 psi)	320 cc (19.53 in ³)
	S/N 1030 and Up			750 cc (45.77 in ³)

Model	Serial Number	System	Charge Pressure	Volume
Solar 470LC-V	S/N 1001 thru 1049	Pilot / Travel	10 kg/cm ² (140 psi)	320 cc (19.53 in ³)
	S/N 1050 and Up			750 cc (45.77 in ³)



CENTER JOINT (SWIVEL)



CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that is in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

MODEL	SERIAL NUMBER RANGE
Solar 300LC-V	1001 and Up
Solar 300LL	1001 and Up

TABLE OF CONTENTS

General Description.....	3
Parts List	4
Troubleshooting, Testing and Adjustment.....	5
Inspection.....	5
Testing	5
Disassembly	6
Reassembly.....	7

GENERAL DESCRIPTION

The center joint (swivel) is designed to allow hydraulic oil from the upper structure to flow to components in the lower structure.

It is capable of allowing continuous 360° rotation of the upper structure in relationship to the lower structure.

PARTS LIST

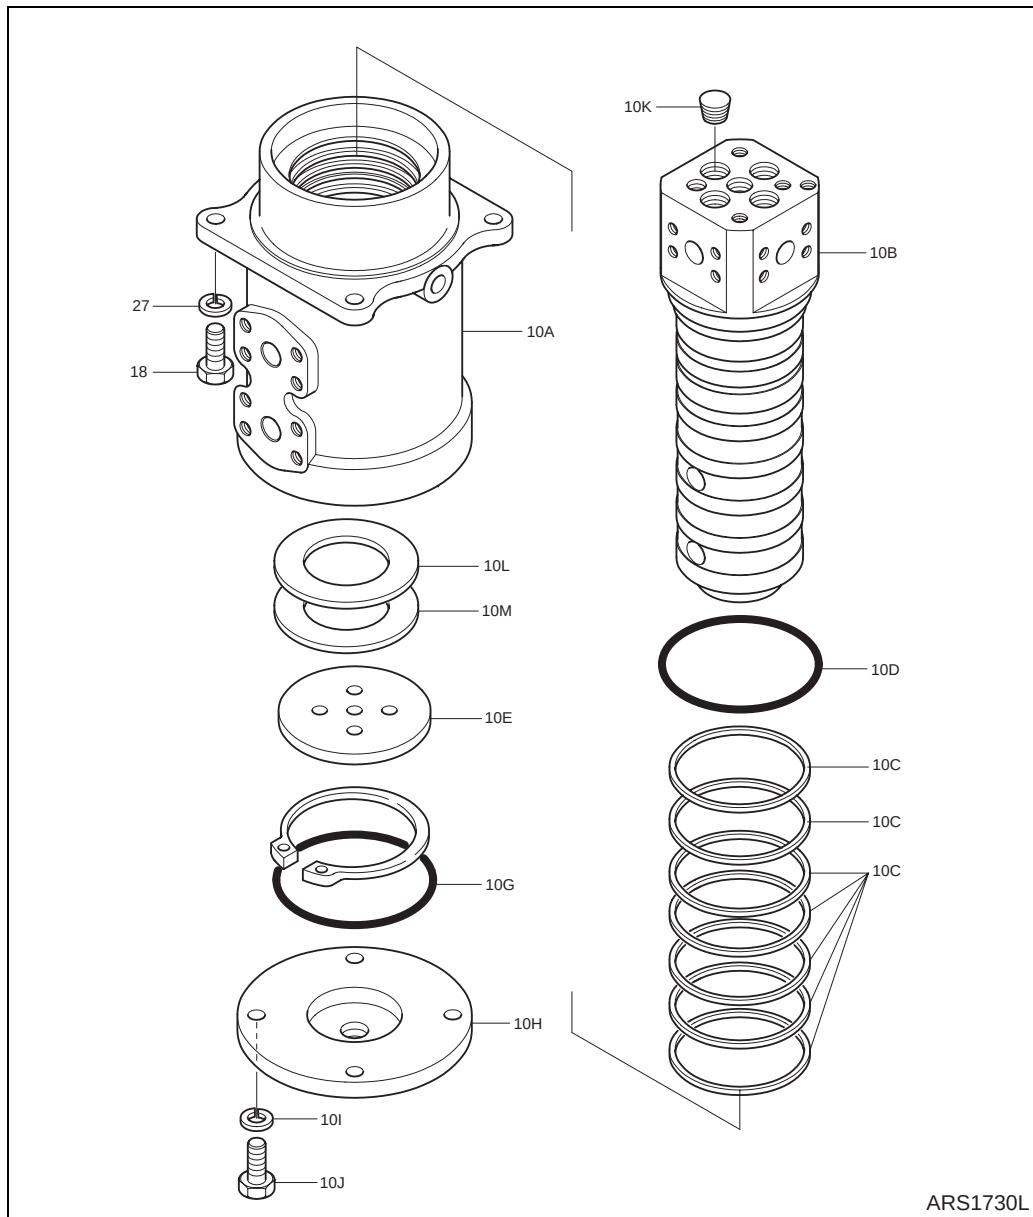


Figure 1

Reference Number	Description
10A	Body
10B	Spindle
10C	Seal
10D	O-ring
10E	Thrust Plate
10F	Retaining Ring
10G	O-ring

Reference Number	Description
10H	Cover
10I	Spring Washer
10J	Bolt
10K	Plug
10L	Shim
10M	Shim

TROUBLESHOOTING, TESTING AND ADJUSTMENT

INSPECTION

The center joint should be checked for evidence of external oil leakage every 2,000 operating hours. Leaking or defective O-rings are an indication that dirt and other contaminants could be getting inside the assembly, which will promote accelerated, abnormal wear and may cause early failure of the assembly.

If internal seals or other sliding surface components are worn and there is internal fluid leakage, complete overhaul and repair or replacement of the center joint may be required.

TESTING

To check pressure through the center joint, make up a test kit from the following equipment list:

- 700 bar (10,000 psi) pressure gauge
- Adapters, connectors, piping and flange block-off plates conforming to those used in high pressure piping connections of the excavator.
- A high pressure relief valve with a setting pressure 1.5 times maximum system pressure.
- A stop valve
- A manually operated, in-line change-over valve.

Install the change over valve upstream from one of the stem high-pressure ports. Connect the pressure gauge downstream from one of the body ports. Install the stop valve between the change-over valve and the stem of the center joint. Other components should be installed according to the layout in the block diagram. The test kit is used to pressurize the center swivel above normal working pressure and lock in the higher pressure (as the stop valve is closed manually) for a leak down test.

NOTE: *The same type of kit can also be made up for the drain port (return line) side of the center joint. Use appropriate piping, connectors, test gauges, etc., and follow the same block diagram general layout (Figure 2).*

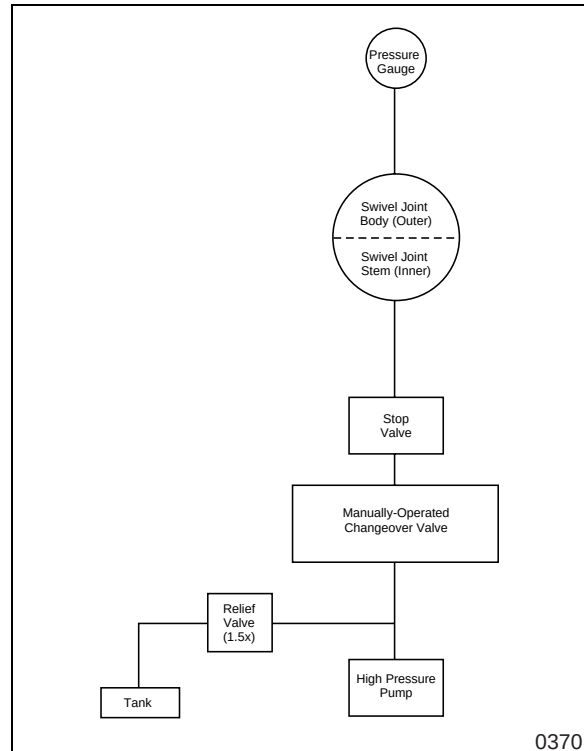


Figure 2

DISASSEMBLY

Refer to the assembly drawing of the swivel joint for component references (Figure 1).

IMPORTANT

Do not unbolt the center joint from the lower car body until an adequate number of piping block-off plates are available, for disconnected piping lines. Be sure that system pressure has been vented - including the hydraulic accumulator and tank reserve pressure - before disassembly is started.

1. Clean off the exterior of the swivel joint after it has been removed.
2. Scribe or otherwise mark a line across the cover and the body of the center joint, to allow reassembly in the same configuration.
3. Unbolt the four 12 mm fasteners holding the cover. Use a vise or V-block to hold the assembly in place.
4. Remove the cover, withdraw the O-ring and remove the retaining ring holding the thrust plate, taking care to support the spindle assembly, so that it will not separate and fall out when retaining ring is removed.
5. If the spindle assembly doesn't separate easily when the thrust plate and retaining ring are removed, use a wooden block and hammer to drive it out of the housing.
6. O-rings and seals should be replaced whenever the assembly is being overhauled or rebuilt. For repair procedures or emergency tear down, use a thin but rounded-tip, smooth-edge scraper or spatula to remove O-rings or seals, to avoid causing damage to those that must be reused.

NOTE: *The "backup ring" shown in the assembly drawing (above the swivel joint spindle lower seals) should not be overlooked. It is tucked behind the top slip ring, doubled up inside the same groove in the body of the spindle.*

7. Before reassembling the center swivel, visually inspect ball bearing surfaces for visible signs of wear, damage or discoloration and replace any worn component.

Check clearance between the spindle and thrust plate. Replace any component that shows more than 0.5 mm (0.020") of visible wear.

Clearance between the spindle and body of the center swivel must be tight. Replace or repair either component if there is more than 0.1 mm (0.0039") of measurable wear.

REASSEMBLY

1. Pre-lubricate O-rings with hydraulic oil, white grease or petroleum jelly.



CAUTION!

Apply a very light film of white grease or petroleum jelly to the lower rim of the stem and inner surface of the center swivel body. Apply slow, even-handed pressure, using both hands, to slowly push the stem into the body. Seals may be damaged if the stem is pushed in too quickly.

2. Thoroughly clean all other component surfaces of dirt or grease prior to reassembly.
3. Reverse disassembly steps for reassembly.
4. Clean threads of fasteners before pre-applying Loctite #243 to the threads, and before torquing the thrust plate and cover bolts.
5. Pre-fill the center swivel with clean hydraulic fluid prior to reassembly of high-pressure and drain line piping. Clean and pre-fill piping line ends to reduce the amount of air in the system. Bleed air from the hydraulic system and verify hydraulic tank fluid level before returning the excavator to service.



S0705000
R4

CYLINDERS



CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that is in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

MODEL	SERIAL NUMBER RANGE
Solar 130LC-V	0001 and Up
Solar 130W-V	0001 and Up
Solar 170LC-V	1001 and Up
Solar 170W-V	1001 and Up
Solar 200W-V	0001 and Up
Solar 220LC-V	0001 and Up
Solar 250LC-V	1001 and Up
Solar 290LC-V	0001 and Up
Solar 300LC-V	1001 and Up
Solar 300LL	1001 and Up
Solar 330LC-V	1001 and Up
Solar 340LC-V	1001 and Up
Solar 400LC-V	1001 and Up
Solar 420LC-V	1001 and Up
Solar 450LC-V	1001 and Up
Solar 470LC-V	1001 and Up

TABLE OF CONTENTS

General Description.....	3
Theory of Operation	3
Parts List	4
Special Tools and Materials.....	6
Piston Nut.....	6
Piston Jig.....	10
Steel bush Jig.....	14
Dust Wiper Jig.....	18
Slipper Seal Jig	22
Slipper Seal Straightening Jig	26
Disassembly	29
Reassembly.....	35

GENERAL DESCRIPTION

Two essentially similar types of hydraulic cylinders are used on the excavator. The cylinder that is used to operate the excavator boom or bucket is equipped with a rod stopper, which acts as a cushion only when the cylinder rod is fully retracted (and the bucket is pulled close to the arm). This type of cylinder is shown in the lower drawing.

Arm cylinders have a cushion or stopper for operation in both directions. This type of cylinder is shown in the upper drawing.

THEORY OF OPERATION

1.	Piston
2.	Oil Path A
3.	Oil Path B

Cylinder piston rods are extended or retracted by oil flow to the back side of the cylinder (shown as ("oil path A") or to the front of the cylinder ("oil path B").

The cylinder rod is extended as oil flow is pumped through the circuit to the back side of the piston. The force (F1) of the piston stroke can be expressed by the formula below, where P = circuit oil pressure and the inside diameter of the cylinder is expressed by B (Figure 1).

$$F_1 = P \times \frac{\pi B^2}{4}$$

(P: Pressure, p = 3.14, B: Cylinder Inside Diameter)

1.	Cylinder Inside Diameter - B
2.	Oil Path A
3.	Oil Path B
4.	Rod Diameter

When the cylinder rod is retracted, oil flow through the circuit from the pump to the front side of the cylinder generates a force (F2) that can be expressed by the formula in which the diameter of the piston rod is expressed by R, and the other two terms are the same as in the preceding expression.

$$F_2 = P \times \frac{\pi(B^2 - R^2)}{4}$$

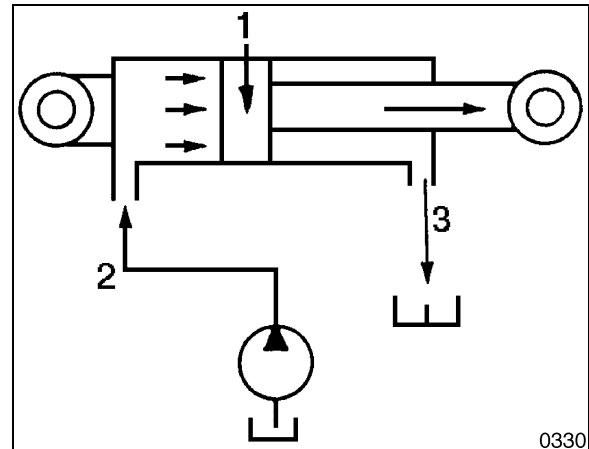


Figure 1

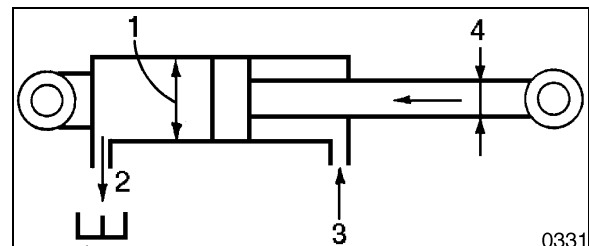


Figure 2

Because the volume of oil needed to lengthen the cylinder rod (Q₁) is greater than the volume of oil required to retract the cylinder rod, it takes more time to decrease cylinder stroke length than it does to lengthen it.

$$Q_1 = S \times \frac{\pi(B^2)}{4}$$

$$Q_2 = S \times \frac{\pi(B^2 - R^2)}{4}$$

$$Q_1 > Q_2$$

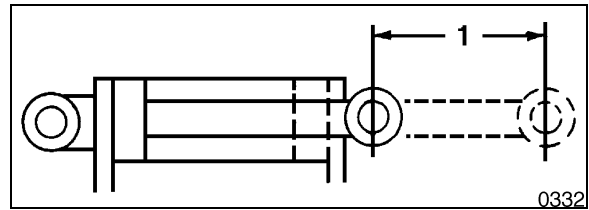


Figure 3

PARTS LIST

The following parts list is a partial listing only; for full and complete parts list information, refer to the Hydraulic Equipment Component Parts List

Cross section in Figure 4 shows an arm cylinder.

Cross section in Figure 5 shows a boom cylinder.

The bucket and boom cylinders are identical and differ only in the attached pipes.

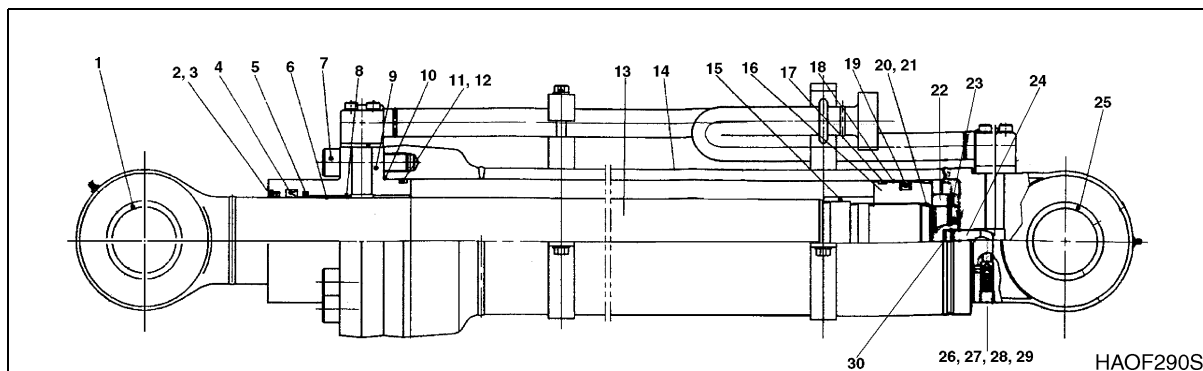


Figure 4

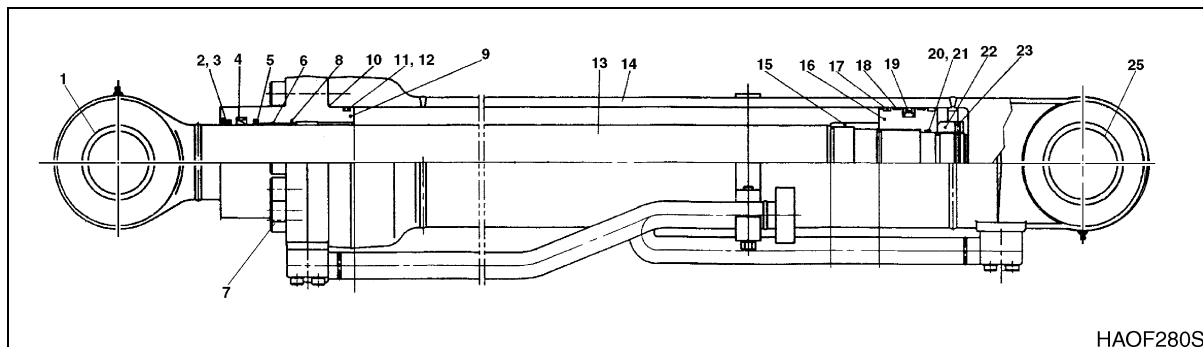


Figure 5

Reference Number	Description
1	Bushing
2	Dust Wiper
3	Retaining Ring
4	U-Packing
5	Buffer Seal
6	Rod Bushing
7	Bolt
8	Retaining Ring
9	Rod Cover
10	O-ring
11	O-ring
12	Backup Ring
13	Piston Rod
14	Cylinder Tube
15	Cushion Ring

Reference Number	Description
16	Piston
17	Slide Ring
18	Wear Ring
19	Slipper Seal
20	O-ring
21	Backup Ring
22	Piston Nut
23	Set Screw
24	Cushion Plunger
25	Bushing
26	Check Valve
27	Spring Support
28	Spring
29	Plug
30	Stop Ring

Technical drawing of a mechanical part, showing front and side views with dimensions and tolerances.

Front View (Top):

- Overall length: 350
- Overall width: 35
- Radius: $R(R15 \sim R20)$
- Feature A: $4R0.5$
- Feature B: $4R0.5$
- Feature C: $+0.1 / -0.2$
- Feature D: $+0.2 / +0.1$
- Feature E: $\varnothing 8$ Through Hole
- Feature F: (C3-C5)

Side View (Bottom):

- Overall width: 15
- Feature G: $\varnothing 8$ Through Hole

Notes:

- Surface texture symbol: $\sqrt{\text{W}} (\sim)$
- Dimension lines and arrows indicate the location and extent of features.

Material SM45C (AISI 1045)
Rockwell Harden from 22 - 27
Oil Quench

MODEL	CYLINDER	øA	øB	C	D	MODEL (CYLINDER)
S55-V	ARM	110.0 mm (4.33 in)	69.0 mm (2.72 in)	12.0 mm (0.47 in)	5.0 mm (0.20 in)	S55-V (BOOM, BOOM (OP))
	SWING	100.0 mm (3.94 in)	58.0 mm (2.23 in)	12.0 mm (0.47 in)	5.0 mm (0.20 in)	
	BUCKET	110.0 mm (4.33 in)	69.0 mm (2.72 in)	10.0 mm (0.39 in)	5.0 mm (0.20 in)	S80W-II (DOZER) MEGA 400 (P/S)
S130LC-V	ARM	130.0 mm (5.12 in)	90.0 mm (3.54 in)	12.0 mm (0.47 in)	5.0 mm (0.20 in)	S130W-V (ARM (EURO)) S170LC-V (BOOM) S170W-V (BOOM) S200W-V (BOOM) S200LC-V (BOOM) S200N-V (BUCKET) (OPTION)
	BOOM (OP)	125.0 mm (4.92 in)	85.0 mm (3.35 in)	12.0 mm (0.47 in)	5.0 mm (0.20 in)	S130W-V (ARM) S130LC-V (SHORT ARM) S170W-V (BUCKET) S220LC-V (BUCKET) S220LL (BUCKET)
	BUCKET	115.0 mm (4.53 in)	75.0 mm (2.95 in)	12.0 mm (0.47 in)	5.0 mm (0.20 in)	
	ARM	147.0 mm (5.79 in)	107.0 mm (4.21 in)	12.0 mm (0.47 in)	5.0 mm (0.20 in)	S330LC-V (ARM) S340LC-V (ARM) S370LC-V (ARM) S400LC-V (BOOM, BUCKET) S420LC-V (BOOM, BUCKET) S450LC-V (BOOM, BUCKET) S470LC-V (BOOM, BUCKET)
S220LL	BOOM	142.0 mm (5.59 in)	102.0 mm (4.02 in)	12.0 mm (0.47 in)	5.0 mm (0.20 in)	S200N-V (ARM (OP)) S220LC-V (ARM) S290LC-V (BOOM) S300LC-V (BOOM)
	BUCKET	125.0 mm (4.92 in)	102.0 mm (4.02 in)	11.0 mm (0.43 in)	4.5 mm (0.18 in)	S170LC-V (BOOM) S200W-V (BUCKET)

MODEL	CYLINDER	øA	øB	C	D	MODEL (CYLINDER)
S250LC-V	ARM	145.0 mm (5.71 in)	105.0 mm (4.13 in)	12.0 mm (0.47 in)	5.0 mm (0.20 in)	S290LL (BOOM, BUCKET) S330LC-V (BUCKET (OP), BOOM, BUCKET) S340LC-V (BUCKET (OP), BOOM, BUCKET) S370LC-V (BUCKET (OP), BUCKET) S390LL (BOOM, BUCKET)
S290LC-V	S/ARM	147.0 mm (5.79 in)	107.0 mm (4.21 in)	12.0 mm (0.47 in)	5.0 mm (0.20 in)	S290LC-V (ARM) S300LC-V (ARM, S/ARM) S370LC-V (BOOM)
S290LL	ARM	155.0 mm (6.10 in)	115.0 mm (4.53 in)	12.0 mm (0.47 in)	5.0 mm (0.20 in)	S400LC-V (ARM) S420LC-V (ARM)
S450LC-V	ARM	170.0 mm (6.69 in)	129.0 mm (5.08 in)	12.0 mm (0.47 in)	5.0 mm (0.20 in)	S470LC-V (ARM)
S55W-V	ARM	106.0 mm (4.17 in)	66.0 mm (2.60 in)	12.0 mm (0.47 in)	5.0 mm (0.20 in)	
S80W-II	ARM	120.0 mm (4.72 in)	79.0 mm (3.11 in)	10.0 mm (0.39 in)	5.0 mm (0.20 in)	S70-III (ARM) S80W-II (BOOM) MEGA 130-III (LIFT)
	BOOM	120.0 mm (4.72 in)	79.0 mm (3.11 in)	10.0 mm (0.39 in)	5.0 mm (0.20 in)	S70-III (BOOM, DOZER) S130LC-V (DOZER) MEGA 200-III TC (BUCKET) MEGA 130-III (BUCKET)
	BUCKET	110.0 mm (4.33 in)	69.0 mm (2.72 in)	10.0 mm (0.39 in)	5.0 mm (0.20 in)	S70-III (BUCKET)
S130W-V	BOOM	120.0 mm (4.72 in)	80.0 mm (3.15 in)	12.0 mm (0.47 in)	5.0 mm (0.20 in)	
S170W-V	ARM	140.0 mm (5.52 in)	98.0 mm (3.86 in)	12.0 mm (0.47 in)	5.0 mm (0.20 in)	S170LC-V (ARM) S250LC-V (BOOM, BUCKET) S290LC-V (S/BUCKET, BUCKET) S300LC-V (S/BUCKET, BUCKET)
P/S: Power Steering						

PISTON JIG

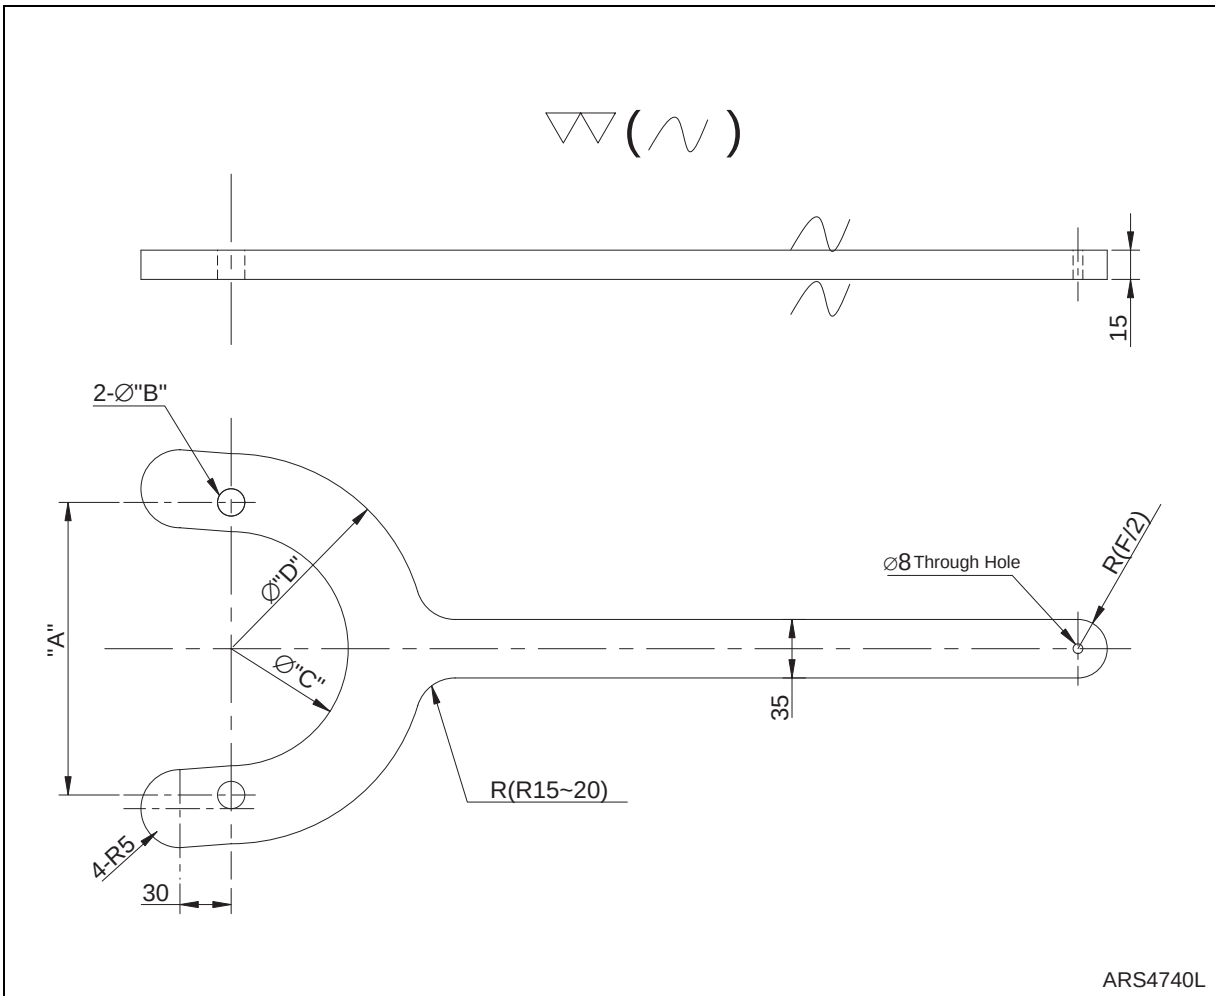


Figure 7

Material SM45C (AISI 1045)

Rockwell Harden from 22 - 27

Oil Quench

MODEL	CYLINDER	A (±0.1)	øB	øC	øD	MODEL (CYLINDER)
S55-V	BOOM	80.0 mm (3.15 in)	11.0 mm (0.43 in)	45.0 mm (1.77 in)	100.0 mm (3.94 in)	S55-V (BOOM (OP)) S55W-V (BOOM)
	SWING	58.0 mm (2.28 in)	11.0 mm (0.43 in)	38.0 mm (1.50 in)	80.0 mm (3.15 in)	MEGA 300 (P/S)
S70-III	ARM	70.0 mm (2.76 in)	11.0 mm (0.43 in)	51.0 mm (2.01 in)	95.0 mm (3.74 in)	S80W-II (ARM)
	BUCKET	60.0 mm (2.36 in)	11.0 mm (0.43 in)	43.0 mm (1.69 in)	85.0 mm (3.35 in)	S80W-II (BUCKET, DOZER)
	DOZER	70.0 mm (2.76 in)	11.0 mm (0.43 in)	53.0 mm (2.09 in)	95.0 mm (3.74 in)	S130LC-V (DOZER)
S220LC-V	ARM	110.0 mm (4.33 in)	13.0 mm (0.51 in)	76.0 mm (2.99 in)	140.0 mm (5.51 in)	S220LC-V (BOOM) S220N-V (ARM (OP)) S250LC-V (ARM) S290LC-V (BOOM, BUCKET) S300LC-V (BOOM, BUCKET)
	BUCKET	90.0 mm (3.54 in)	11.0 mm (0.43 in)	63.0 mm (2.48 in)	115.0 mm (4.53 in)	S70-III (BOOM) S80W-II (BOOM) S130W-V (ARM (EURO)) S130LC-V (S/ARM, BOOM (OP), ARM) S170LC-V (BOOM) S170W-V (BUCKET, BOOM) S220LC-V (BUCKET) MEGA 200-III (LIFT)
S290LC-V	ARM S/ARM	120.0 mm (4.72 in)	13.0 mm (0.51 in)	85.0 mm (3.35 in)	150.0 mm (5.91 in)	S290LL (BUCKET, BOOM) S300LC-V (ARM, S/ARM) S330LC-V (BOOM, BUCKET) S340LC-V (BUCKET, BOOM, BUCKET (OP)) S370LC-V (BUCKET, BUCKET (OP))
S330LC-V	ARM	130.0 mm (5.12 in)	13.0 mm (0.51 in)	93.0 mm (3.66 in)	165.0 mm (6.50 in)	S340LC-V (ARM) S400LC-V (ARM, BOOM) S420LC-V (ARM, BOOM, BUCKET) S450LC-V (BOOM, BUCKET) S470LC-V (BOOM, BUCKET)
S450LC-V	ARM	150.0 mm (5.91 in)	13.0 mm (0.51 in)	103.0 mm (4.06 in)	180.0 mm (7.09 in)	S470LC-V (ARM)
S55W-V	ARM	63.0 mm (2.48 in)	11.0 mm (0.43 in)	43.0 mm (1.69 in)	90.0 mm (3.54 in)	S55-V (ARM, BUCKET) S55W-V (BUCKET)
S130W-V	BOOM	75.0 mm (2.95 in)	11.0 mm (0.43 in)	53.0 mm (2.09 in)	100.0 mm (3.94 in)	S130LC-V (BOOM)
S170W-V	ARM	96.0 mm (3.78 in)	13.0 mm (0.51 in)	69.0 mm (2.72 in)	130.0 mm (5.12 in)	S170LC-V (ARM) S200W-V (O/R, DOZER) S250LC-V (BUCKET, BOOM)
	BUCKET	80.0 mm (3.15 in)	11.0 mm (0.43 in)	58.0 mm (2.28 in)	110.0 mm (4.33 in)	S70-III (BOOM) S80W-II (BOOM) S130W-V (ARM) S130LC-V (S/ARM, BOOM (OP))
S200W-V	BOOM	90.0 mm (3.54 in)	13.0 mm (0.51 in)	63.0 mm (2.48 in)	115.0 mm (4.53 in)	S220LC-V (BOOM) S220N-V (BUCKET (OP))

MODEL	CYLINDER	A (± 0.1)	$\emptyset B$	$\emptyset C$	$\emptyset D$	MODEL (CYLINDER)
<i>P/S: Power Steering</i> <i>O/R: Out Rigger</i>						

STEEL BUSH JIG

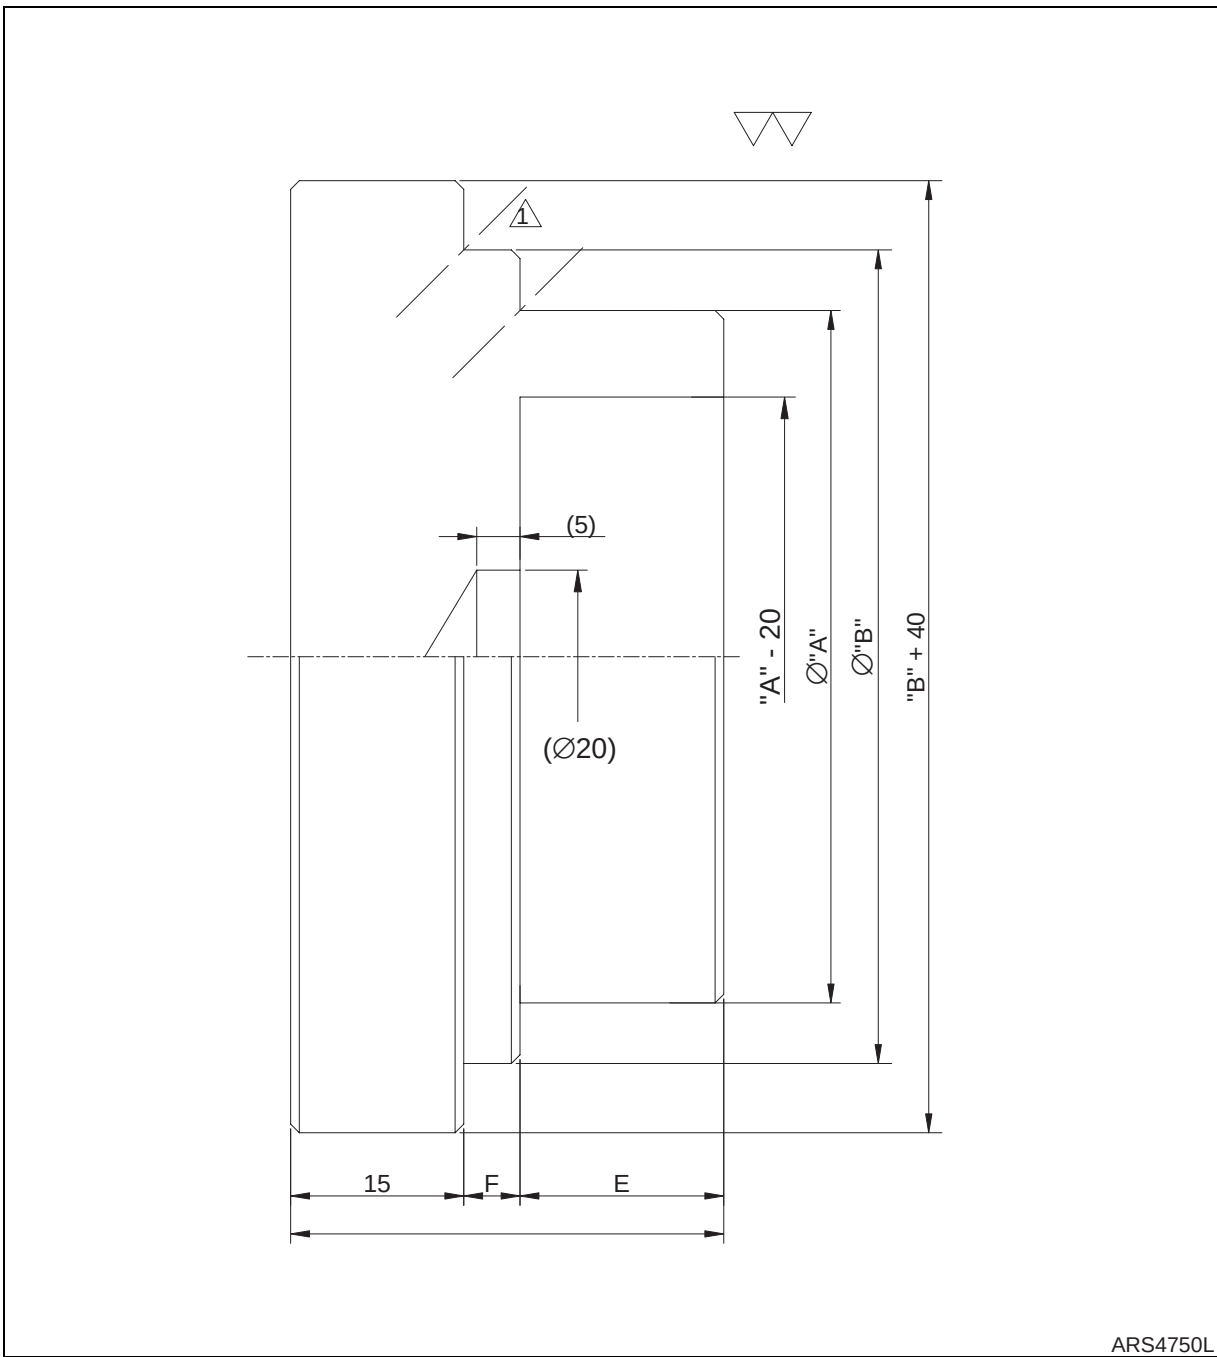


Figure 8

Material: SM45C which is done thermal refining <QT> Hrc 22 - 28

Undefined Chamfer C/R = 0.5 Max.

- 1 Place: Finally work to used DNMG Tip <Nose R0.4>

MODEL	CYLINDER	$\varnothing A$ ^{-0.05} _{-0.15}	$\varnothing B (\pm 0.1)$	E	F ^{+0.05} ₀	Part	MODEL (CYLINDER)
S55-V	BOOM	50.0 mm (1.97 in)	65.0 mm (2.56 in)	30.0 mm (1.18 in)	-		S55W-V (BOOM)
	SWING	40.0 mm (1.58 in)	50.0 mm (1.97 in)	20.0 mm (0.79 in)	-		
	DOZER	65.0 mm (2.56 in)	70.0 mm (2.76 in)	30.0 mm (1.18 in)	-		
S70-III	DOZER	50.0 mm (1.97 in)	60.0 mm (2.36 in)	40.0 mm (1.58 in)	0		
	BUCKET	50.0 mm (1.97 in)	60.0 mm (2.36 in)	25.0 mm (0.98 in)	5.0 mm (0.20 in)	H/C	S55-V (ARM)
	BUCKET	55.0 mm (2.17 in)	68.0 mm (2.68 in)	30.0 mm (1.18 in)	5.5 mm (0.22 in)	K/C	S80W-II BUCKET (K/C)
S130LC-V	DOZER	60.0 mm (2.36 in)	70.0 mm (2.76 in)	30.0 mm (1.18 in)	-		
	BUCKET	65.0 mm (2.56 in)	80.0 mm (3.15 in)	30.0 mm (1.18 in)	6.0 mm (0.24 in)		S70-III (ARM, BOOM) MEGA 200-III (LIFT) MEGA 200-III TC (H/C)
S220LL	ARM	90.0 mm (3.54 in)	105.0 mm (4.13 in)	40.0 mm (1.58 in)	6.5 mm (0.26 in)		S290LC-V (S/ARM, ARM) S290LL (BOOM, BUCKET) S300LC-V (S/ARM, ARM) MEGA 250-III (BUCKET) MEGA 400 (LIFT (H/C), BUCKET) MEGA 400-V (LIFT (H/C)) MEGA 500-III
	BOOM	80.0 mm (3.15 in)	95.0 mm (3.74 in)	35.0 mm (1.38 in)	6.5 mm (0.26 in)		S200W-V (BOOM, DOZER, O/R) S220N-V (ARM (OP), BUCKET (OP)) S220LC-V (ARM, BOOM, BUCKET) S250LC-V (ARM, BUCKET) MEGA 160 (BUCKET) MEGA 200-III (BUCKET) MEGA 200 (BUCKET) MEGA 300 (BUCKET) MEGA 300-V (LIFT)
	BUCKET	65.0 mm (2.56 in)	80.0 mm (3.15 in)	35.0 mm (1.38 in)	6.5 mm (0.26 in)		
S250LC-V	BOOM	90.0 mm (3.54 in)	105.0 mm (4.13 in)	40.0 mm (1.58 in)	7.0 mm (0.28 in)		S290LC-V (S/BUCKET, BOOM, BUCKET) S300LC-V (S/BUCKET, BOOM, BUCKET)
S290LL	ARM (STICK)	100.0 mm (3.94 in)	115.0 mm (4.53 in)	70.0 mm (2.76 in)	6.5 mm (0.26 in)		

MODEL	CYLINDER	ϕA ^{-0.05} _{-0.15}	$\phi B (\pm 0.1)$	E	F ^{+0.05} ₀	Part	MODEL (CYLINDER)
S330LC-V	BUCKET (OP)	100 mm (3.94 in)	115 mm (4.53 in)	45 mm (1.77 in)	7.5 mm (0.30 in)		S330LC-V (ARM, BOOM, BUCKET) S340LC-V (ARM, BOOM, BUCKET) S370LC-V (ARM, BOOM, BUCKET) MEGA 300-V (BUCKET) MEGA 400-V (BUCKET) MEGA 500-III (LIFT (H/C))
S450LC-V	ARM	120 mm (4.72 in)	140 mm (5.51 in)	75 mm (2.95 in)	11 mm (0.43 in)		S470LC-V (ARM)
	BOOM	110 mm (4.33 in)	130 mm (5.12 in)	70 mm (2.76 in)	11 mm (0.43 in)	H/C	S400LC-V (ARM, BOOM (H/C), BUCKET) S420LC-V (ARM, BOOM (H/C), BUCKET) S450LC-V (BUCKET) S470LC-V (BOOM, BUCKET)
	BOOM	120 mm (4.72 in)	140 mm (5.51 in)	70 mm (2.76 in)	11 mm (0.43 in)	K/C	S420LC-V (BOOM (K/C)) S400LC-V (BOOM (K/C))
S55W-V	BUCKET	50.0 mm (1.97 in)	60.0 mm (2.36 in)	30.0 mm (1.18 in)	-		S55-V (ARM, BOOM (OP), BUCKET)
	DOZER	65.0 mm (2.56 in)	75.0 mm (2.95 in)	30.0 mm (1.18 in)	-		
S80W-II	BUCKET	50.0 mm (1.97 in)	60.0 mm (2.36 in)	25.0 mm (0.98 in)	5.5 mm (0.22 in)	H/C	
S130W-V	BOOM	71.0 mm (2.80 in)	86.0 mm (3.39 in)	40.0 mm (1.58 in)	6.5 mm (0.26 in)		S130LC-V (BOOM, BOOM (OP))
	ARM (EURO)	71.0 mm (2.80 in)	86.0 mm (3.39 in)	40.0 mm (1.58 in)	7.0 mm (0.28 in)		S130W-V (ARM) S130LC-V (S/ARM, ARM)
S170W-V	ARM	71.0 mm (2.80 in)	86.0 mm (3.39 in)	50.0 mm (1.97 in)	6.0 mm (0.24 in)		S170W-V (BOOM, BUCKET) S170LC-V (ARM, BOOM)
H/C: Head Cover K/C: Knuckle Cover							

DUST WIPER JIG

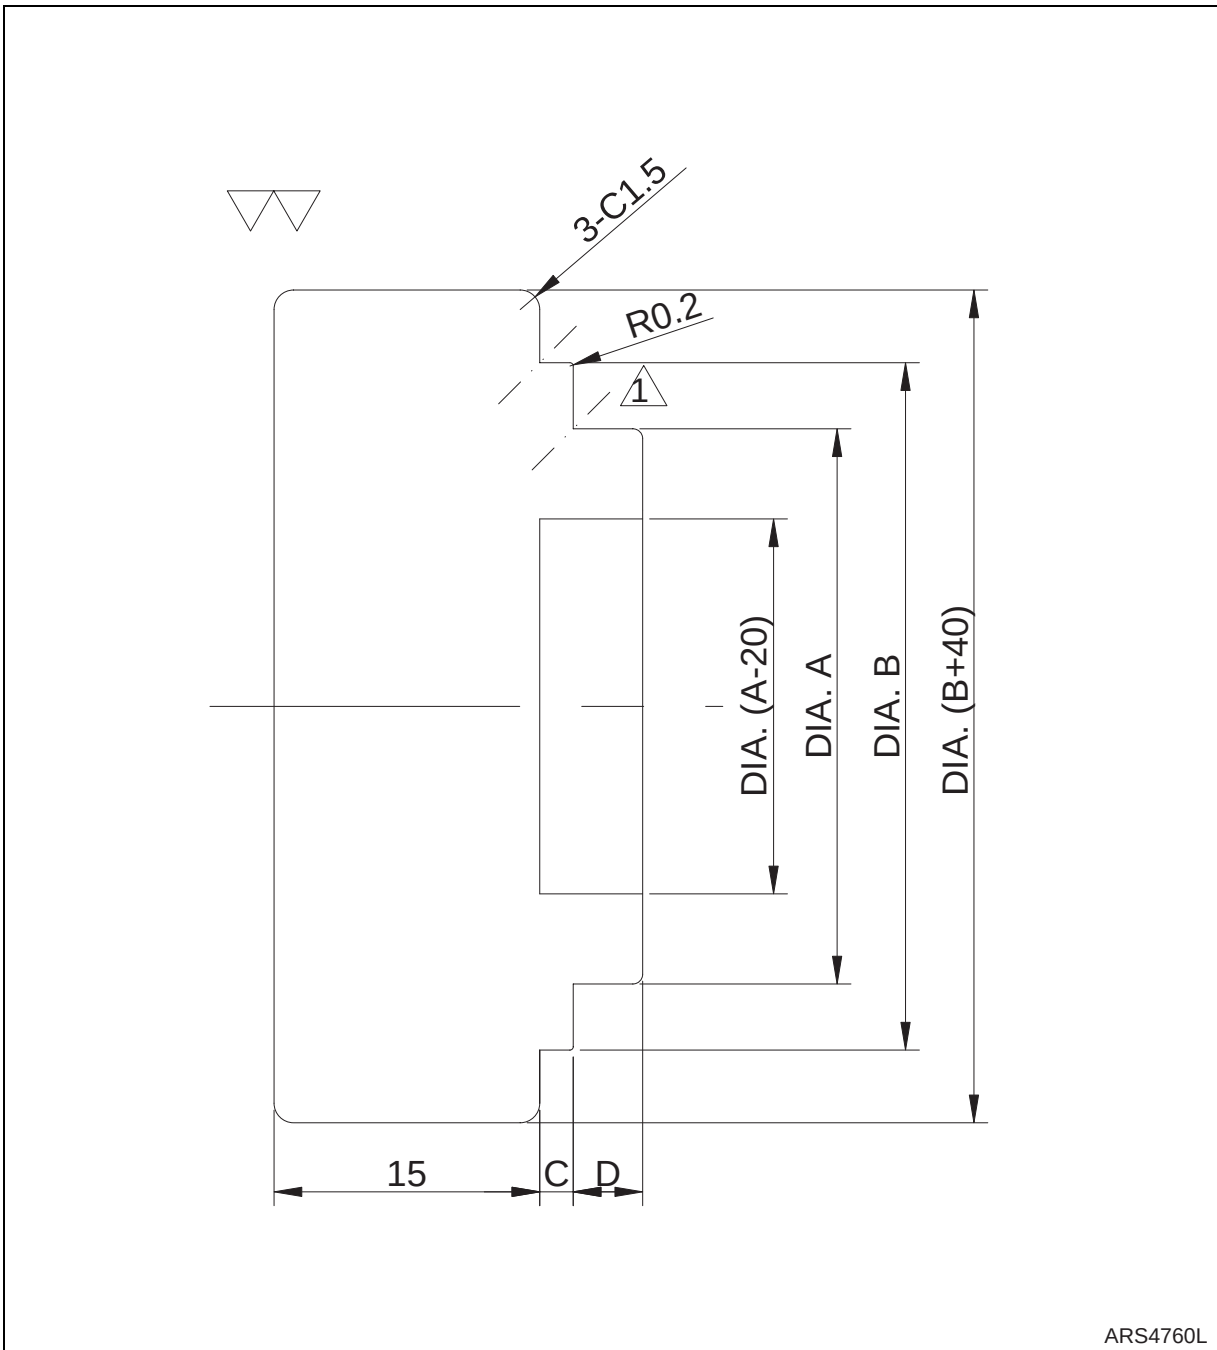


Figure 9

Material: SM45C which is done thermal refining <QT> Hrc 22 - 28

Undefined Chamfer C/R = 0.5 Max.

₁ Place: Finally work to used DNMG Tip <Nose R0.4>

MODEL	CYLINDER	øA ^{-0.2 -0.3}	øB ^{-0.2 -0.3}	C ^{0 -0.1}	D	MODEL (CYLINDER)
DD80L	TILT	35.0 mm (1.38 in)	47.0 mm (1.85 in)	0	6.0 mm (0.24 in)	
	DOZER	45.0 mm (1.77 in)	57.0 mm (2.24 in)	0.5 mm (0.02 in)	6.0 mm (0.24 in)	DD80L (ANGLE)
	ANGLE	45.0 mm (1.77 in)	57.0 mm (2.24 in)	0.5 mm (0.02 in)	6.0 mm (0.24 in)	
S55-V	ARM	55.0 mm (2.17 in)	69.0 mm (2.72 in)	5.0 mm (0.20 in)	6.0 mm (0.24 in)	
	BOOM	55.0 mm (2.17 in)	69.0 mm (2.72 in)	5.0 mm (0.20 in)	6.0 mm (0.24 in)	
	BOOM (OP)	55.0 mm (2.17 in)	69.0 mm (2.72 in)	5.0 mm (0.20 in)	6.0 mm (0.24 in)	
	BUCKET	55.0 mm (2.17 in)	69.0 mm (2.72 in)	5.0 mm (0.20 in)	6.0 mm (0.24 in)	
	SWING	40.0 mm (1.58 in)	52.0 mm (2.05 in)	3.5 mm (0.14 in)	6.0 mm (0.24 in)	S55W-V (SWING)
	DOZER	60.0 mm (2.36 in)	74.0 mm (2.91 in)	7.0 mm (0.28 in)	6.0 mm (0.24 in)	
S70-III	ARM	65.0 mm (2.56 in)	79.0 mm (3.11 in)	5.5 mm (0.22 in)	6.0 mm (0.24 in)	S80W-III (ARM)
	BOOM	70.0 mm (2.76 in)	84.0 mm (3.31 in)	5.5 mm (0.22 in)	6.0 mm (0.24 in)	S80W-III (BOOM) S130W-V (BOOM) S130LC-V (BOOM) MEGA 160-III (BUCKET)
	BUCKET	55.0 mm (2.17 in)	69.0 mm (2.72 in)	5.0 mm (0.20 in)	6.0 mm (0.24 in)	S55-V (ARM, BOOM, BOOM (OP), BUCKET) S55W-V (ARM) S80W-III (BUCKET) MEGA 130-III (LIFT)
	DOZER	60.0 mm (2.36 in)	74.0 mm (2.91 in)	5.0 mm (0.20 in)	6.0 mm (0.24 in)	S55W-V 9BOOM) MEGA 130-III (BUCKET) MEGA 160-III (LIFT) MEGA 200-III TC (BUCKET)
S80-III	DOZER	60.0 mm (2.36 in)	74.0 mm (2.91 in)	7.0 mm (2.28 in)	6.0 mm (0.24 in)	S55-V (DOZER) S55W-V (DOZER)
S130LC-V	ARM	80.0 mm (3.15 in)	94.0 mm (3.70 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	S170W-V (BOOM) S220N-V (BOOM (OP))
	BOOM	70.0 mm (2.76 in)	84.0 mm (3.31 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	
	BOOM (OP)	75.0 mm (2.95 in)	89.0 mm (3.50 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	
S220LC-V	ARM	95.0 mm (3.74 in)	109.0 mm (4.29 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	S220N-V (ARM(OP)) S290LC-V (BOOM) S300LC-V (BOOM)
	BOOM	85.0 mm (3.35 in)	99.0 mm (3.90 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	
	BUCKET	75.0 mm (2.95 in)	89.0 mm (3.50 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	

MODEL	CYLINDER	øA ^{-0.2} _{-0.3}	øB ^{-0.2} _{-0.3}	C ⁰ _{-0.1}	D	MODEL (CYLINDER)
S220LL	ARM (STICK)	115.0 mm (4.53 in)	131.0 mm (5.16 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	S340LC-V (ARM) S420LC-V (BOOM) S470LC-V (BOOM, BUCKET) S370LC-V (ARM) S360LC-V (ARM) S400LC-V (BOOM) S450LC-V (BOOM, BUCKET)
	BOOM (HOIST)	90.0 mm (3.54 in)	104.0 mm (4.10 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	
	BUCKET (HEEL)	75.0 mm (2.95 in)	89.0 mm (3.50 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	
S220N-V	ARM (OP)	95.0 mm (3.74 in)	109.0 mm (4.29 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	
	BOOM (OP)	80.0 mm (3.15 in)	94.0 mm (3.70 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	
S250LC-V	ARM	100.0 mm (3.94 in)	114.0 mm (4.49 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	S360LC-V (BOOM, BUCKET, BUCKET (OP)) S340LC-V (BOOM, BUCKET, BUCKET (OP)) S370LC-V (BUCKET, BUCKET (OP)) S290LL (BOOM (HOIST), BUCKET (HEEL))
	BOOM	90.0 mm (3.54 in)	104.0 mm (4.10 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	
	BUCKET	90.0 mm (3.54 in)	104.0 mm (4.10 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	
S290LC-V	ARM	105.0 mm (4.13 in)	121.0 mm (4.76 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	S290LC-V (S/ARM) S300LC-V (ARM, S/ARM) S370LC-V (BOOM)
	S/ARM	105.0 mm (4.13 in)	121.0 mm (4.76 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	
	BOOM	95.0 mm (3.74 in)	109.0 mm (4.29 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	
	BUCKET	90.0 mm (3.54 in)	104.0 mm (4.10 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	
	S/BUCKET	90.0 mm (3.54 in)	104.0 mm (4.10 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	
S290LL	ARM (STICK)	120.0 mm (4.72 in)	136.0 mm (5.35 in)	9.0 mm (0.35 in)	7.0 mm (2.28 in)	
	BOOM (HOIST)	100.0 mm (3.94 in)	114.0 mm (4.49 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	
	BUCKET (HEEL)	100.0 mm (3.94 in)	114.0 mm (4.49 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	
S360LC-V	ARM	115.0 mm (4.53 in)	131.0 mm (5.16 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	
	BOOM	100.0 mm (3.94 in)	114.0 mm (4.49 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	
	BUCKET	100.0 mm (3.94 in)	114.0 mm (4.49 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	
	BUCKET(OP)	100.0 mm (3.94 in)	114.0 mm (4.49 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	

MODEL	CYLINDER	ØA ^{-0.2 -0.3}	ØB ^{-0.2 -0.3}	C ^{0 -0.1}	D	MODEL (CYLINDER)
S400LC-V	ARM	120.0 mm (4.72 in)	136.0 mm (5.35 in)	9.0 mm (0.35 in)	7.0 mm (2.28 in)	S420LC-V (ARM) S290LL (ARM (STICK))
	BOOM	115.0 mm (4.53 in)	131.0 mm (5.16 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	
	BUCKET	110.0 mm (4.33 in)	126.0 mm (4.96 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	S420LC-V (BUCKET)
S450LC-V	ARM	130.0 mm (5.12 in)	146.0 mm (5.75 in)	6.5 mm (0.26 in)	7.0 mm (2.28 in)	S470LC-V (ARM)
	BOOM	115.0 mm (4.53 in)	131.0 mm (5.16 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	
	BUCKET	115.0 mm (4.53 in)	131.0 mm (5.16 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	
S55W-V	ARMS	55.0 mm (2.17 in)	69.0 mm (2.72 in)	5.0 mm (0.20 in)	6.0 mm (0.24 in)	
	SWING	40.0 mm (1.58 in)	52.0 mm (2.05 in)	3.5 mm (0.14 in)	6.0 mm (0.24 in)	
	BOOM	60.0 mm (2.36 in)	74.0 mm (2.91 in)	5.0 mm (0.20 in)	6.0 mm (0.24 in)	
	BUCKET	50.0 mm (1.97 in)	62.0 mm (2.44 in)	4.5 mm (0.18 in)	6.0 mm (0.24 in)	
	DOZER	60.0 mm (2.36 in)	74.0 mm (2.91 in)	5.0 mm (0.20 in)	6.0 mm (0.24 in)	
S80W-III	ARM	65.0 mm (2.56 in)	79.0 mm (3.11 in)	5.5 mm (0.22 in)	6.0 mm (0.24 in)	
	BOOM	70.0 mm (2.76 in)	84.0 mm (3.31 in)	5.5 mm (0.22 in)	6.0 mm (0.24 in)	
	BUCKET	55.0 mm (2.17 in)	69.0 mm (2.72 in)	5.0 mm (0.20 in)	6.0 mm (0.24 in)	
S130W-V	ARM	75.0 mm (2.95 in)	89.0 mm (3.50 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	S130W-V (S/ARM) S130LC-V (BOOM (OP)) S170W-V (BUCKET) S220LC-V (BUCKET) S220LL (BUCKET (HEEL))
	S/ARM	75.0 mm (2.95 in)	89.0 mm (3.50 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	
	BOOM	70.0 mm (2.76 in)	84.0 mm (3.31 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	
	BUCKET	65.0 mm (2.56 in)	79.0 mm (3.11 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	
S170W-V	ARM	90.0 mm (3.54 in)	104.0 mm (4.10 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	S220LL (BOOM (HOIST)) S250LC-V (BOOM, BUCKET) S290LC-V (BUCKET, S/BUCKET) S300LC-V (BUCKET, S/BUCKET)
	BOOM	80.0 mm (3.15 in)	94.0 mm (3.70 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	
	BUCKET	75.0 mm (2.95 in)	89.0 mm (3.50 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	
S200W-V	BOOM	85.0 mm (3.35 in)	99.0 mm (3.90 in)	6.0 mm (0.24 in)	7.0 mm (2.28 in)	S220LC-V (BOOM)

MODEL	CYLINDER	øA ^{+0.2} _{+0.1}	B ^{+0.2} _{+0.1}	MODEL (CYLINDER)
S55-V	ARM	85.0 mm (3.35 in)	32.0 mm (1.26 in)	S55W-V (ARM)
	BOOM	110.0 mm (4.33 in)	21.5 mm (0.85 in)	S55-V (BOOM (OP)) S55W-V (BOOM)
	SWING	80.0 mm (3.15 in)	30.0 mm (1.18 in)	S55W-V (BUCKET, SWING) MEGA 300-III (P/S)
	DOZER	100.0 mm (3.94 in)	18.0 mm (0.71 in)	S55W-V (DOZER)
S70-III	BUCKET	85.0 mm (3.35 in)	28.5 mm (1.12 in)	S55-V (ARM) S80W-II (BUCKET, DOZER)
S130LC-V	ARM	115.0 mm (4.53 in)	28.5 mm (1.12 in)	S170W-V (BOOM) S220LC-V (BUCKET) S220LL (BUCKET (HEEL))
S220LC-V	BOOM	120.0 mm (4.72 in)	28.5 mm (1.12 in)	S220N-V (BUCKET (OP))
S220LL	ARM (STICK)	165.0 mm (6.50 in)	34.5 mm (1.36 in)	S400LC-V (BOOM) S420LC-V (BOOM)
S250LC-V	ARM	140.0 mm (5.51 in)	28.5 mm (1.12 in)	S300LC-V (BOOM, BUCKET, S/BUCKET) S220LL (BOOM (HOIST)) S290-V (BOOM, BUCKET, S/BUCKET)
	BOOM	130.0 mm (5.12 in)	28.5 mm (1.12 in)	S250LC-V (BUCKET)
S290LC-V	ARM	150.0 mm (5.91 in)	28.5 mm (1.12 in)	S290LL (BOOM (HOIST), BUCKET (HEEL)) S290LC-V (S/ARM) S300LC-V (ARM, S/ARM) S340LC-V (BOOM, BUCKET, BUCKET (OP)) S360LC-V (BOOM, BUCKET, BUCKET (OP)) S370LC-V (BOOM, BUCKET, BUCKET (OP))
S360LC-V	ARM	170.0 mm (6.69 in)	34.5 mm (1.36 in)	S340LC-V (ARM) S370LC-V (ARM) S450LC-V (BOOM, BUCKET) S470LC-V (BOOM, BUCKET)
S400LC-V	ARM	180.0 mm (7.09 in)	41.5 mm (1.63 in)	S290LL (ARM (STICK)) S420LC-V (ARM)
	BUCKET	160.0 mm (6.30 in)	34.5 mm (1.36 in)	S420LC-V (BUCKET)
S450-V	ARM	190.0 mm (7.48 in)	41.5 mm (1.63 in)	S470LC-V (ARM)
S130W-V	ARM	110.0 mm (4.33 in)	28.5 mm (1.12 in)	S70-III (BOOM) S80W-III (BOOM) S130W-V (S/ARM) S130LC-V (BOOM (OP)) S170W-V (BUCKET)
	BOOM	100.0 mm (3.94 in)	28.5 mm (1.12 in)	S70-III (ARM, DOZER) S80W-III (ARM) S130W-V (BOOM) S130LC-V (BOOM (OP))
	BUCKET	95.0 mm (3.74 in)	28.5 mm (1.12 in)	
S170W-V	ARM	125.0 mm (4.92 in)	28.5 mm (1.12 in)	

MODEL	CYLINDER	$\varnothing A^{+0.2}_{+0.1}$	$B^{+0.2}_{+0.1}$	MODEL (CYLINDER)
S200W-V	BOOM	135.0 mm (5.32 in)	28.5 mm (1.12 in)	S220LC-V (ARM) S220N-V (ARM (OP))
P/S: Power Steering				

SLIPPER SEAL STRAIGHTENING JIG

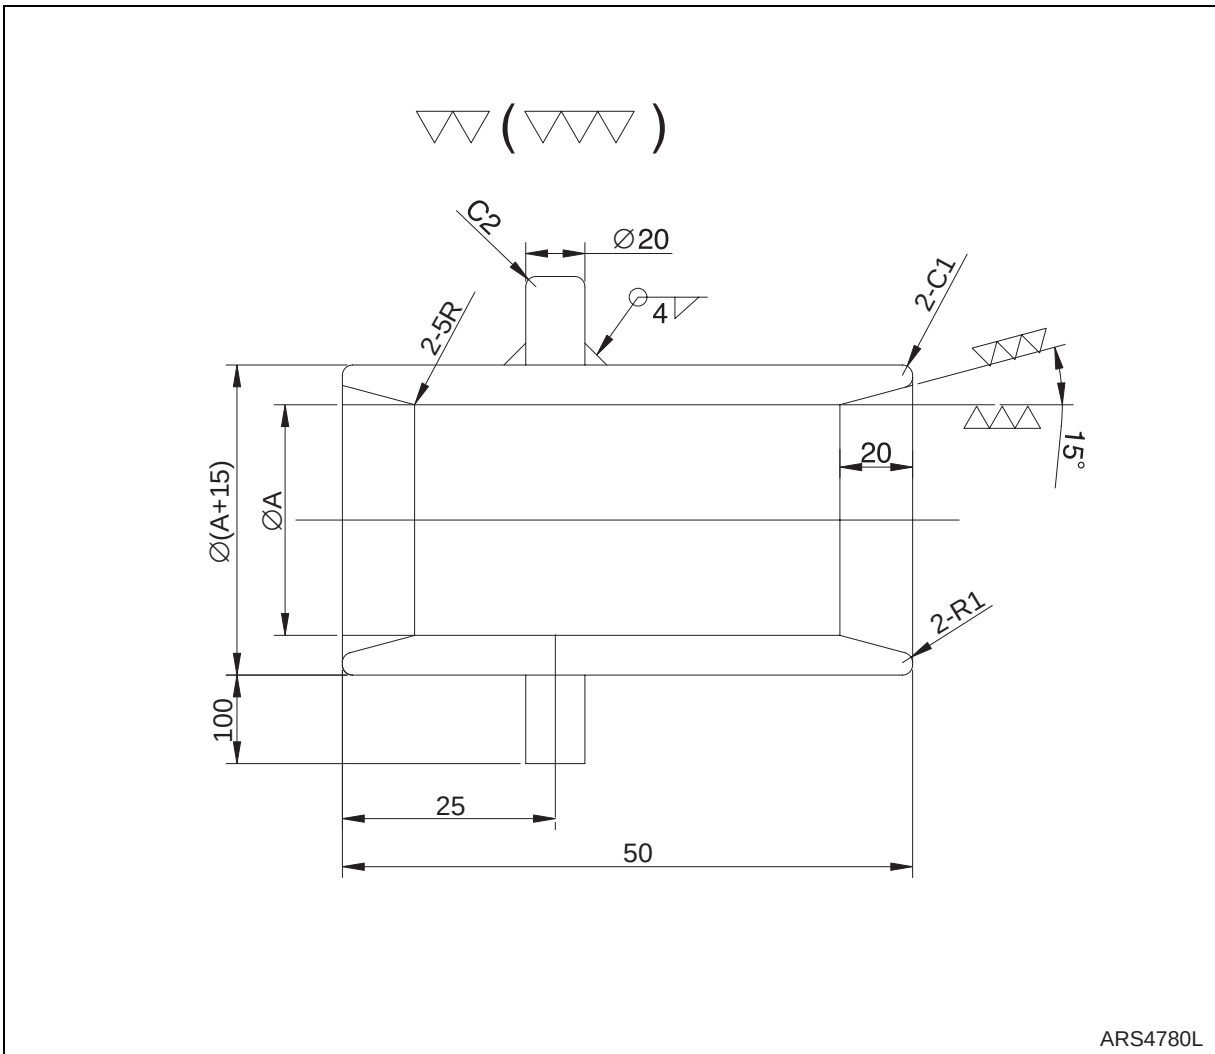


Figure 11

	CYLINDER	øA ^{+0.2} / _{+0.1}	MODEL (CYLINDER)
S55-V	ARM	85.0 mm (3.35 in)	S55W-V (ARM)
	BOOM	110.0 mm (4.33 in)	S55-V (BOOM (OP)) S55W-V (BOOM)
	SWING	80.0 mm (3.15 in)	S55W-V (BUCKET, SWING) MEGA 300-III P/S
	DOZER	100.0 mm (3.94 in)	S55W-V (DOZER)
S70-III	BUCKET	85.0 mm (3.35 in)	S55-V (ARM) S80W-III (BUCKET) S80-III (DOZER)
S130LC-V	ARM	115.0 mm (4.53 in)	S170W-V (BOOM) S220LC-V (BUCKET) S220LL (BUCKET (HEEL))
S220LC-V	BOOM	120.0 mm (4.72 in)	S220N-V (BUCKET (OP))
S220LL	ARM (STICK)	165.0 mm (6.50 in)	S400LC-V (BOOM) S420LC-V (BOOM)
S250LC-V	ARM	140.0 mm (5.51 in)	S300LC-V (BOOM, BUCKET, S/BUCKET) S220LL (BOOM (HOIST)) S290-V (BOOM, BUCKET, S/BUCKET)
	BOOM	130.0 mm (5.12 in)	S250-V (BUCKET)
S290LC-V	ARM	150.0 mm (5.91 in)	S300LC-V (ARM, S/ARM) S340LC-V (BOOM, BUCKET, BUCKET (OP)) S370LC-V (BOOM, BUCKET, BUCKET (OP)) S290-V (S/ARM) S360-V (BOOM, BUCKET, BUCKET (OP)) S290LL (BOOM (HOIST), BUCKET (HEEL))
S360-V	ARM	170.0 mm (6.69 in)	S340LC-V (ARM) S370LC-V (ARM) S470LC-V (BOOM, BUCKET) S450-V (BOOM, BUCKET)
S400LC-V	ARM	180.0 mm (7.09 in)	S420LC-V (ARM) S290LL (ARM (STICK))
	BUCKET	160.0 mm (6.30 in)	S420LC-V (BUCKET)
S450LC-V	ARM	190.0 mm (7.48 in)	S470LC-V (ARM)
S130W-V	ARM	110.0 mm (4.33 in)	S130W-V (S/ARM) S130-V (BOOM (OP)) S70-III (BOOM) S170W-V (BUCKET) S80W-III (BOOM)
	BOOM	100.0 mm (3.94 in)	S130W-V (BOOM) S130-V (BOOM) S70-III (ARM, DOZER) S80W-III (ARM)
	BUCKET	95.0 mm (3.74 in)	
S170W-V	ARM	125.0 mm (4.92 in)	

	CYLINDER	$\varnothing A^{+0.2}_{+0.1}$	MODEL (CYLINDER)
S200W-V	BOOM	135.0 mm (5.32 in)	S220LC-V (ARM) S220N-V (ARM (OP))
P/S: Power Steering			

DISASSEMBLY



CAUTION!

Vent air from the hydraulic system before disconnecting cylinder piping connections. Use the lever on the reservoir, while the engine is running. Discharge the hydraulic accumulator and vent residual tank pressure after the engine is shut off. Pour clean replacement fluid back into the system if excessive fluid is lost.

1. Following removal of cylinder from excavator attachment, support cylinder on some type of sturdy work platform and drain all oil. Rotate cylinder so that piping ports are on top, to allow trapped air to vent.

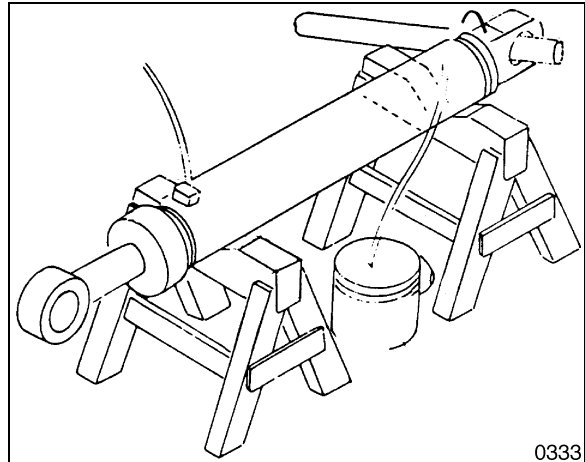


Figure 12

2. Position piston rod so that it is extended approximately one half meter (20").

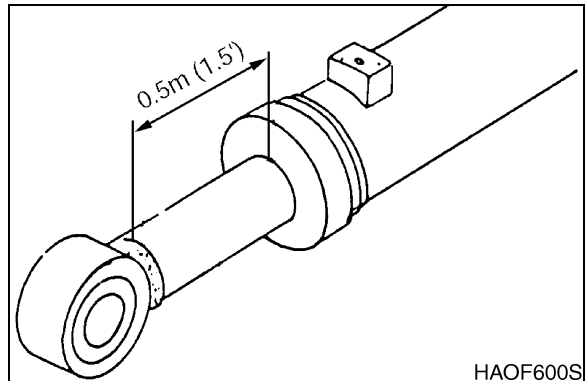


Figure 13

3. Remove bolts (7) on the end of cylinder.

NOTE: Wrap a cloth or other protective material around piston rod, to avoid possibility of accidentally scratching or scoring rod surface while fasteners are being loosened and removed. Component parts (numbered in parentheses) are keyed to Figure 4.

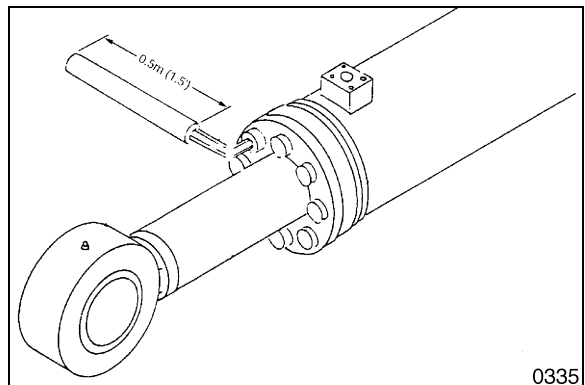


Figure 14

4. Tap two bolts into cover of cylinder head, 180° apart. Tighten them in a staggered, even sequence, to back off piston rod end cover from edge of cylinder wall. Look for adequate clearance between cover and end of cylinder wall before using a plastic or other soft-faced hammer for final disassembly.

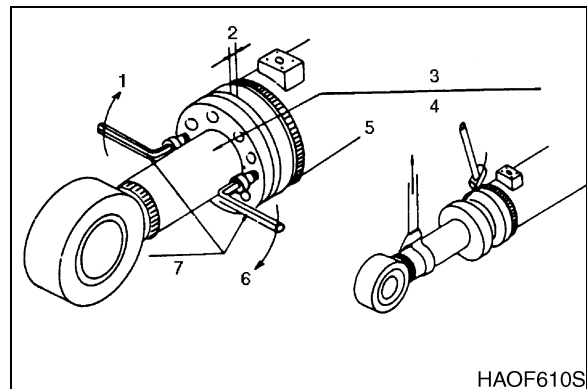


Figure 15

5. Begin withdrawing piston rod assembly, away from cylinder. Attach a lifting support when final 1/3 of rod is still inside barrel of cylinder. Prepare support blocks for piston rod before it has been completely withdrawn.

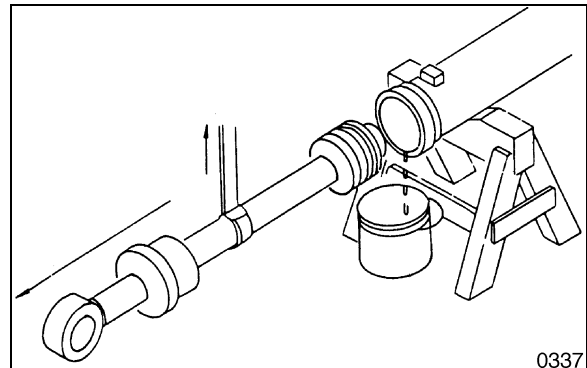


Figure 16

6. Lower piston rod to support blocks and detach wear ring (outer surface) (18) from end of rod.

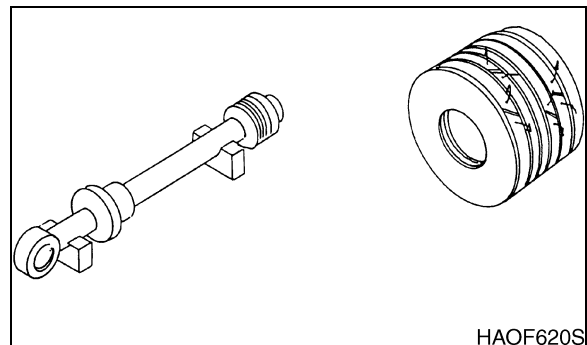


Figure 17

7. Immobilize piston rod by inserting a wooden or other non-scoring, non-metallic support through end of rod.

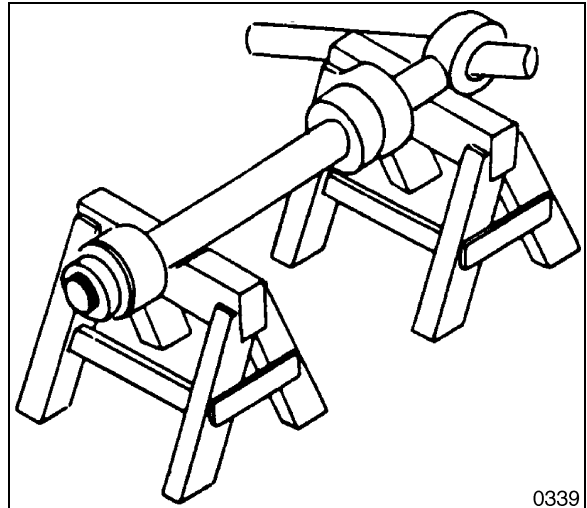


Figure 18

8. Remove set screw by using a socket wrench.

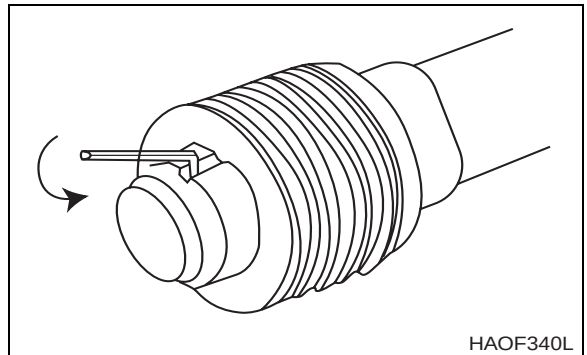


Figure 19

9. Fabricate or purchase a piston nut removal wrench. (Dimensions are called off at beginning of this procedure. This tool may also be ordered through your local Daewoo Parts distributor). Remove nut from end of piston.

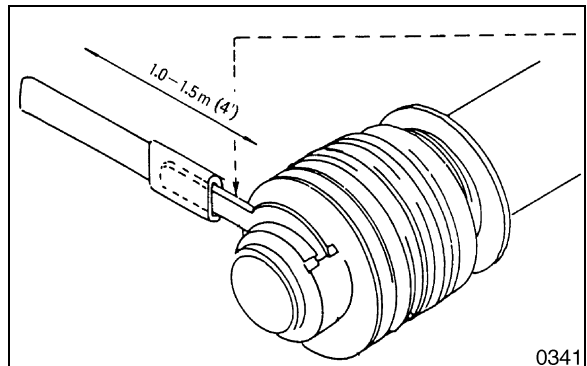


Figure 20

10. Use second piston tool described at beginning of this procedure to separate piston. Detach cushion ring (15), taking care not to damage cushion ring.

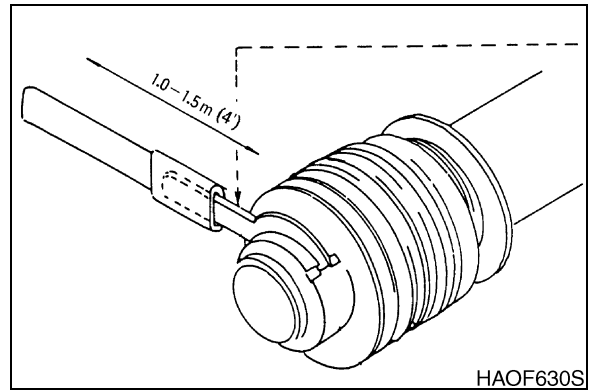


Figure 21

11. Use a plastic hammer to evenly pull off rod cover (9) from end of piston rod. Be careful not to damage rod bushing (6) and dust wiper, U-packing and other seals.

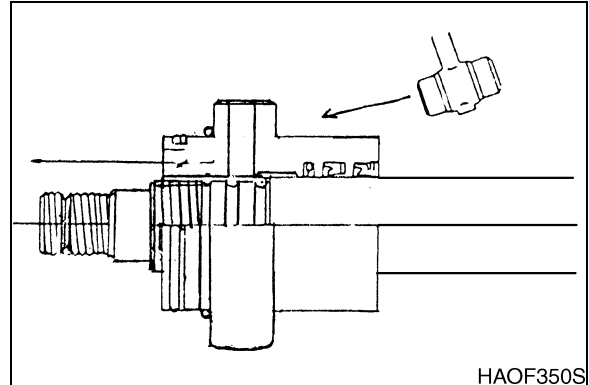


Figure 22

12. Use a dull, rounded-tip tool to pry off O-ring (11) and backup ring (12).

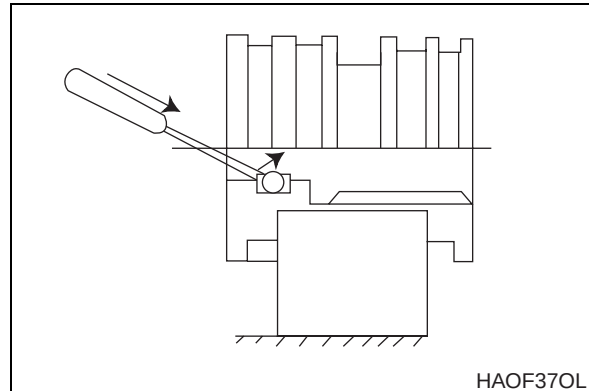


Figure 23

13. Find a screwdriver with an appropriate width tip to facilitate removal of slipper seal (19), wear ring (18) and slide ring (17) from piston (16).

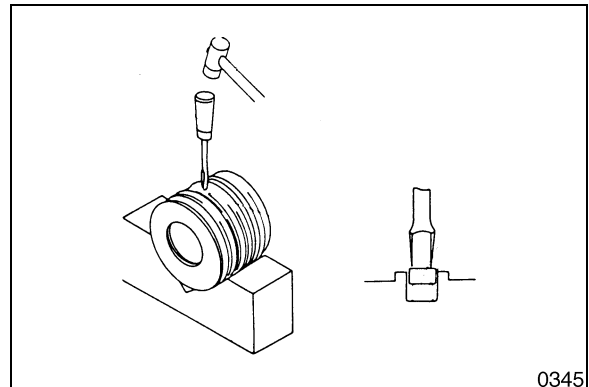


Figure 24

14. Pull off O-ring (20) and backup ring (21) from cylinder head.

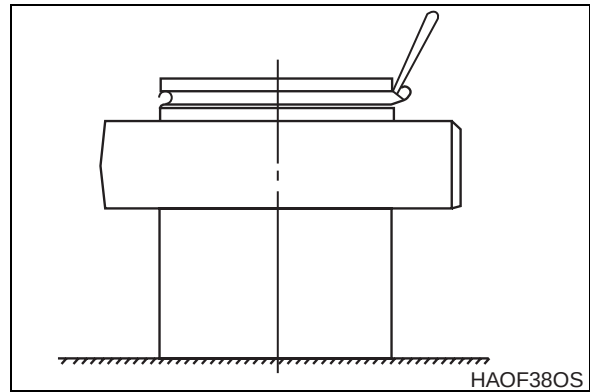


Figure 25

15. During disassembly of cylinder head, be careful not to damage buffer seal (5) and U-packing (4).

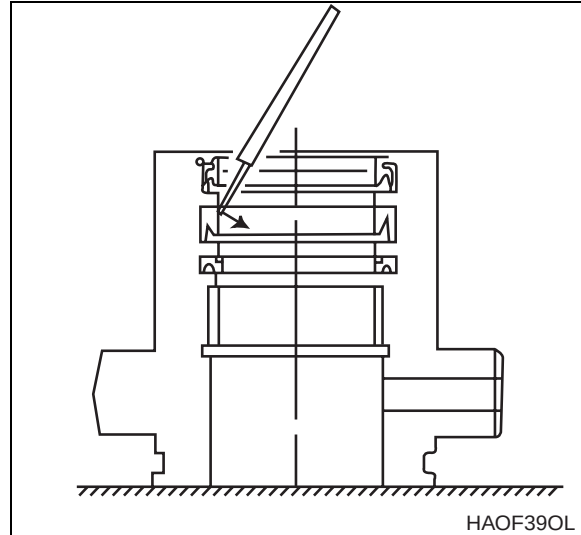


Figure 26

16. Disassemble retaining ring (3) and dust wiper (2). Separate retaining ring (8) and rod bushing (6).

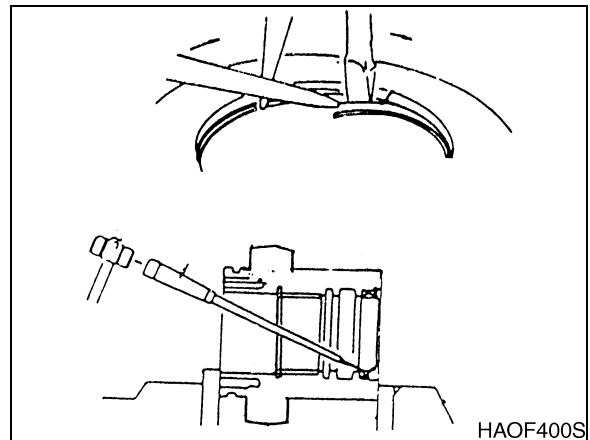


Figure 27

17. Force out pin bushing (1) from body of cylinder.

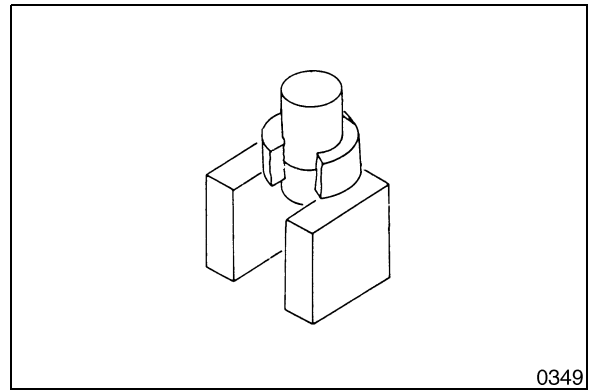


Figure 28

0349

REASSEMBLY

IMPORTANT

Replace any part that shows evidence of damage or excessive wear. Replacement of all O-rings and flexible seals is strongly recommended. Before starting the cylinder reassembly procedure, all parts should be thoroughly cleaned and dried, and/or prelubricated with clean hydraulic fluid. Prepare the work area beforehand to maintain cleanliness during the reassembly procedure.

NOTE: Reassemble the subassemblies of the cylinder in the following order:

1. Body of the cylinder
2. Piston rod
3. Piston assembly
4. Cylinder head assembly

1. Reassemble pin bushing (1) to piston rod (13) and body of cylinder (14).
2. Following reassembly of rod cover components, install the dust wiper (2) and rod bushing (6) to the rod cover (9). Insert retaining rings (3 and 8).

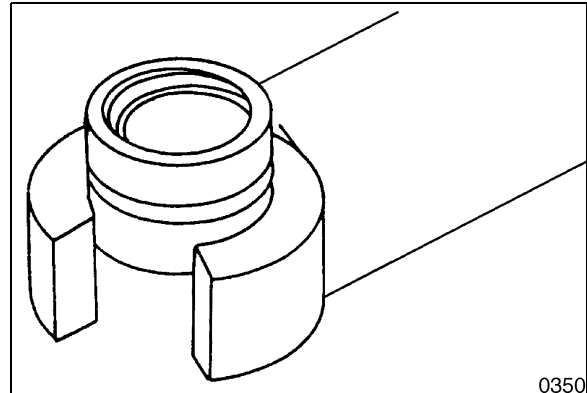


Figure 29

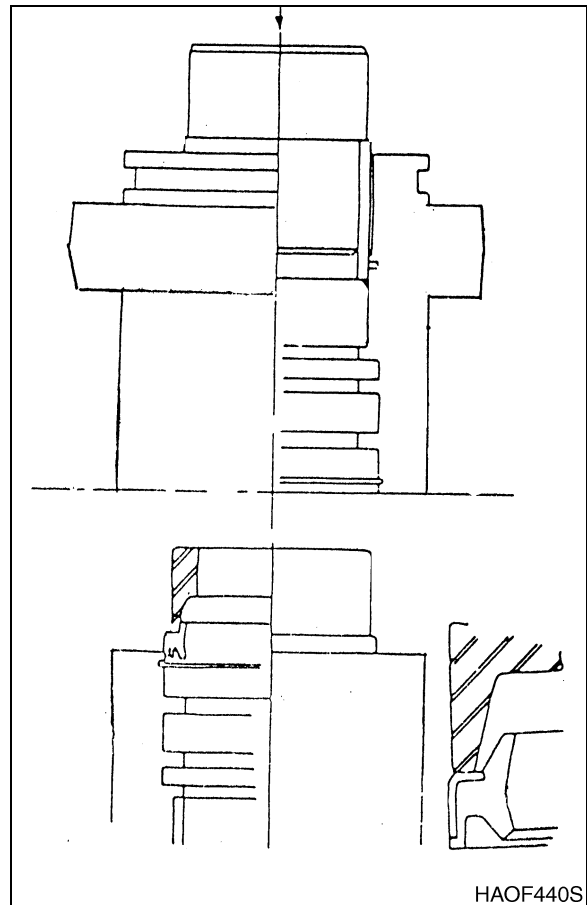


Figure 30

3. Pre-lubricate O-rings and seals before reassembly (Figure 31).

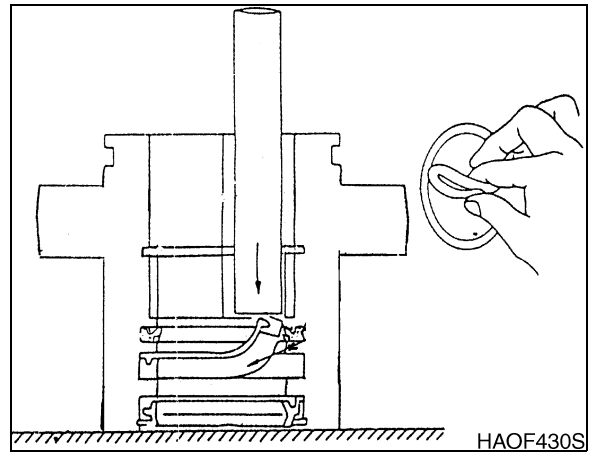


Figure 31

4. Before starting to rebuild piston assembly, heat slipper seal for 5 minutes in an oil bath warmed to 150° - 180°C (302° - 356°F). Use special slipper seal jig (third item in list of specialized tools at the beginning of this procedure) to attach seal. Cool seal by pushing a retracting jig against seal for several minutes. Apply a strip of clean, see-through sealing tape around slipper seal to keep it free of dust.

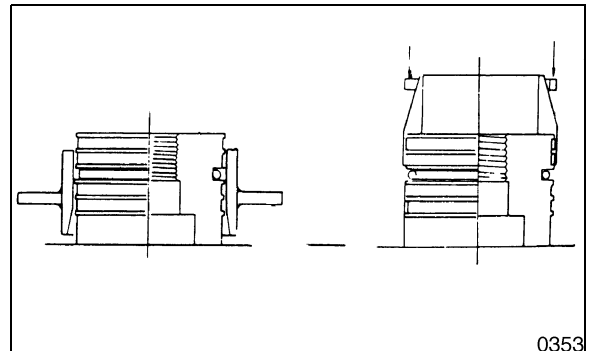


Figure 32

5. Immobilize piston rod on solid support blocks. Assemble O-ring (20) and backup ring (21). Prepare to attach rod cover assembly to piston rod. Push rod cover by tightening piston nut (22).

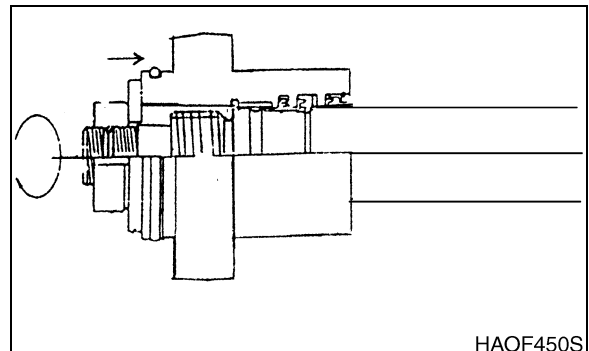


Figure 33

6. Assemble cushion ring (15) and attach piston assembly to piston rod.

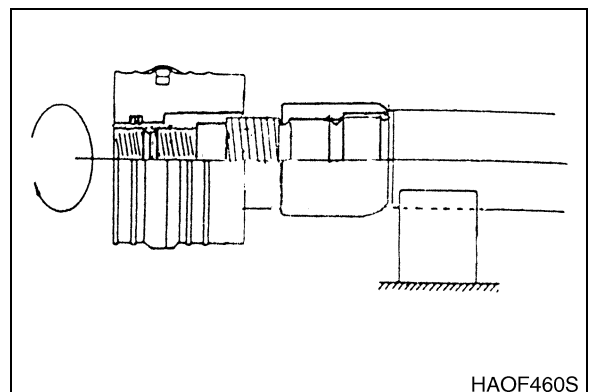


Figure 34

7. Use specially fabricate or factory-sourced tool to tighten piston nut (22).

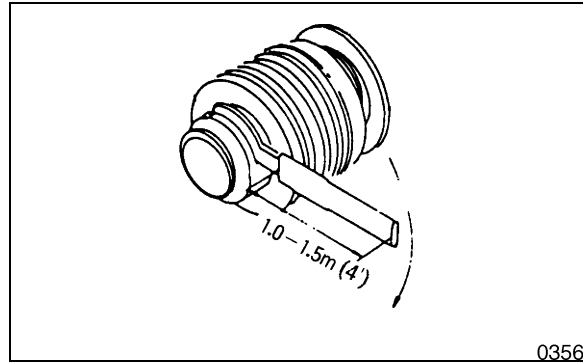


Figure 35

8. Assemble wear ring (18), slide ring (17) and set screw (23) to piston assembly.

Reference Number	Description
1	Set Screw

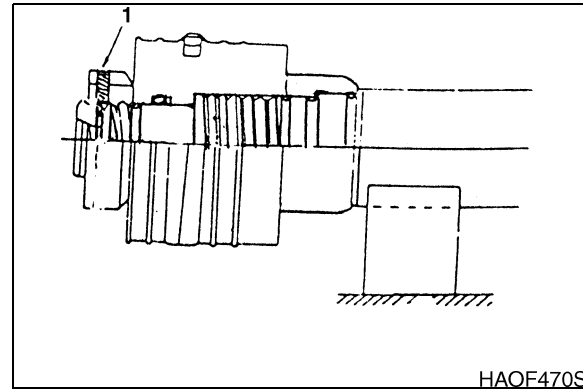


Figure 36

9. Immobilize body of cylinder before reassembly.

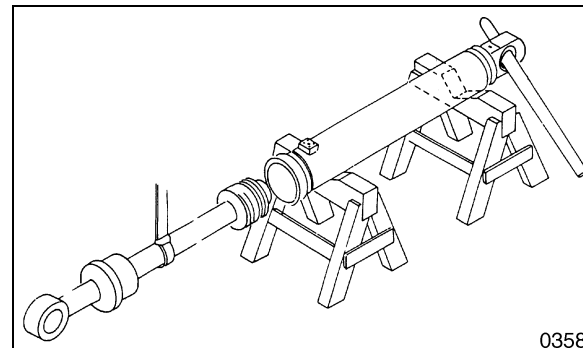


Figure 37

10. Pre-apply fastener locking compound (Loctite #242 or #243 or an alternate manufacturer's equivalent product) to all end cover retaining bolts. Wrap a protective cushion around end of rod while tightening fasteners, to prevent possible damage to polished surface of rod, should a wrench slip during retightening.

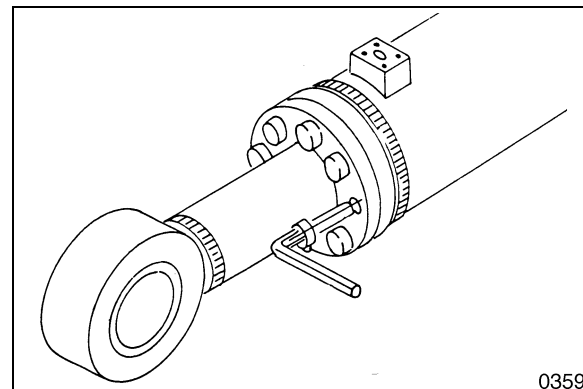


Figure 38



SWING MOTOR (TOSHIBA MFC200)



CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that is in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

MODEL	SERIAL NUMBER RANGE
Solar 300LC-V	1001 and Up

TABLE OF CONTENTS

General Description.....	4
Theory of Operation	4
Hydraulic Motor.....	4
Make-up Valve Operation.....	6
Super Shockless Relief Valve Operation (Relief Valve Section Drawing).....	7
Bypass Valve Operation (Bypass Valve Section Drawing)	8
Swing Brake Operation	9
Time Delay Valve (Time Delay Valve Section Drawing)	11
Parts List	12
Specifications	14
Special Tools and Materials.....	15
Special Tools	15
Pressing Tool of Inner Ring (2) and Taper Roller Bearing (4) Inner Race	15
Assembly Tool for Oil Seal (3)	15
Assembly Tool for Brake Piston (13)	15
Troubleshooting, Testing and Adjustment.....	16
Inspection Parts List.....	18
Removal	18
Disassembly	19
Disassembly of Lining Plates and Plates	22
Disassembly of Cylinder Assembly	22
Disassembly of Taper Roller Bearing Outer Race.....	22
Disassembly of Cylinder Assembly	23
Cleaning and Inspection (Wear Limits and Tolerances)	24
Reassembly.....	24
General	24
Reassembly of Cylinder Assembly.....	25
Reassembly of Oil Seal.....	26
Reassembly of Taper Roller Bearing Outer Race	27

Reassembly of Cylinder Assembly	27
Reassembly of Lining Plate And Plate	28
Reassembly of O-ring	28
Reassembly of Brake Piston	28
Reassembly of Spring	28
Reassembly of Balance Plate	29
Reassembly of Inner Race	29
Reassembly of O-ring	29
Applying Liquid Packing	30
Reassembly of Cover	30
Tightening of Bolt (Tightening of Cover (19) and Housing (28)).....	30
Reassembly of Relief Valve Assembly, Etc.	31
Confirming of Reassembly	31
Installation	31
Piping	31
Start-up Procedures	32
Hydraulic Oil.....	32
Preliminary Operation	32
Relief Valve	32

GENERAL DESCRIPTION

THEORY OF OPERATION

The swing drive motor is an axial piston motor (MFC200). The motor also contains the following components;

1. Mechanical brake
2. Make-up valve
3. Ultra shockless valve
4. Time relay valve
5. Bypass valve

Hydraulic Motor

The rotary group consist of a cylinder block (27) which is a single body design with an integral drive shaft. Nine piston assemblies (9) are housed in the cylinder block (27). Both ends of the cylinder block (27) are supported by bearings (4 and 25).

Piston assembly (9) is guided by return plate (8) and backing spring (6) to slide on cam plate (7). The strength of scrowave (18) and the hydraulic power which actuates bushing (16), cause the mating surfaces of balance plate (24) and cylinder block (27) to be pressed together.

Mechanical brake plates (10 and 11) used for braking are installed between the outer surface of cylinder block (27) and housing (28). Lining plates (10) are splined to the cylinder block. Plates (11) are splined to the housing. The brake plates are forced together by piston (13) and eighteen springs (15). This configuration results in the brake being "spring applied" and "hydraulically released."

Installed in the motor cover (19) are the following items;

- Relief valve (45) for cushioning function.
- Make-up valves (36, 37 and 38) for cavitation elimination.
- Bypass valve (30) for the elimination of vibration when stopping.

1. 3-2 Hydraulic Motor Operation

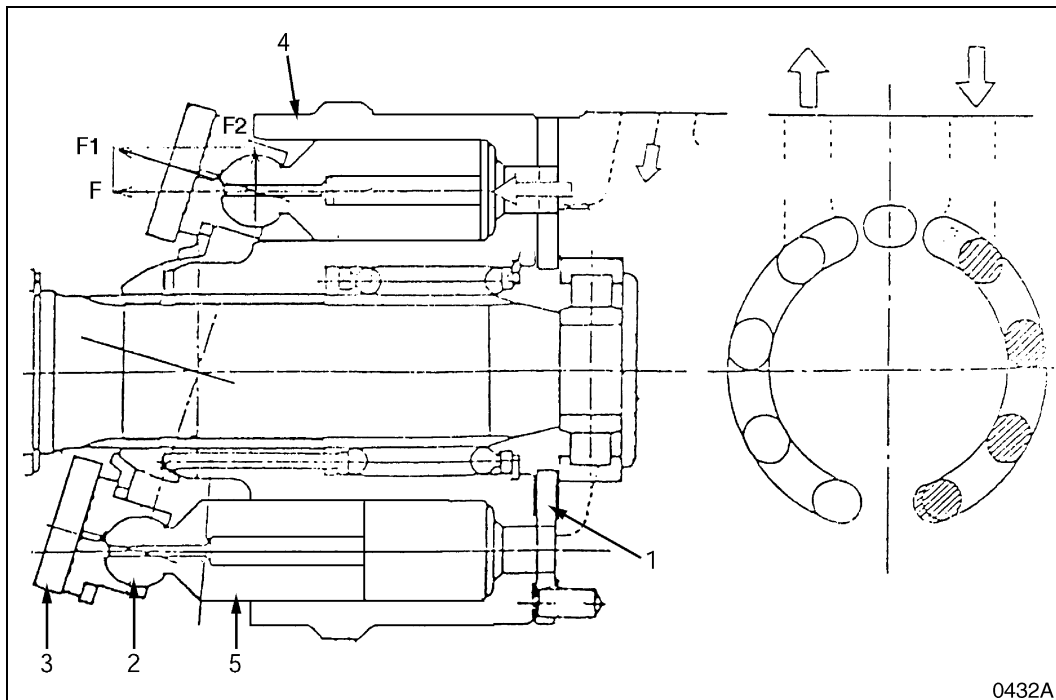


Figure 1

Reference Number	Description
1	Balance Plate
2	Shoe
3	Cam Plate

Reference Number	Description
4	Cylinder Block
5	Piston

The cross sectional view of the swing motor, Figure 1, show most of the main components of an axial-piston type hydraulic motor. Arrows indicating direction of flow and other graphic symbols provide a general guide for understanding basic operation.

When high-pressure oil enters the cylinder through the inlet port of the balance plate the sliding piston inside the cylinder is driven back, generating force "F" against the shoe behind the piston.

Force "F" acts in two different directions. Force F1 exerts pressure directly on the cam plate (3) to generate oil flow through the motor, while force F2 pushes laterally - at a right angle - against the drive shaft, providing the rotational energy to turn the cylinder block around the drive shaft.

All nine pistons in the cylinder block have equal bore diameter, length and volume. They are configured in a concentric layout around the drive shaft, as shown in the cross sectional end-view in Figure 1. As oil is forced through the inlet port, pistons rotating past the pressurized (supply) side of the motor (indicated as the shaded cylinders) transmit drive torque - one after the next, each in turn - to the cam plate (through F1, direct output force) and to the cylinder block (F2, lateral force to keep the block rotating).

If oil flow to the motor is directed to the opposite port (so that the supply side becomes the exhaust side and vice versa), the rotation of the motor is reversed.

Trench mode allows the operator to "prioritize" hydraulic oil flow between swing function and arm function. Turning "ON" the trench mode boosts oil flow to swing circuit components, increasing swing speed, as arm

crowd dump speed is reduced. If trench mode is turned "OFF" - diminishing the size of the opening through the swing priority valve - arm speed increases as slew rate falls off.

Connected through the e-EPOS controller, the switch of the trench mode changes the voltage of the electronic signal sent to the solenoid valve.

IMPORTANT

The trench mode setting only has a noticeable effect if both functions are used at the same time, when the right and the left joysticks are each engaged simultaneously, to control swing and boom/arm functions.

When the trench mode is engaged, an engaged voltage signal to the solenoid valve shifts the "swing priority" spool valve to increase oil flow through the swing motor. With trench mode "OFF," voltage is disengaged while current flow is reduced, shifting the spool in the priority valve for increased oil flow to the boom/arm side of the circuit.

Make-up Valve Operation

Unlike those designs for hydraulic swing motor application which incorporate a separate, external counterbalance valve, the problem of motor rotational speed overtaking or surpassing oil flow rate at the motor's supply-side inlet is answered with pressure-control valving that is incorporated in the motor casing.

1. Half brake condition (Condition that relief valve (45) does not operate)

When reducing swing speed by half after rapidly accelerating the upper structure, and supply oil from pump to port (A) is suddenly reduced, a supply oil demand is still present due to inertia of the upper structure. This causes pressure (c) to turn into negative pressure, since the motor starts to act like a pump. Since the motor is now acting as a pump, make-up oil is needed to supply oil in (c).

However, if pressure at port (B) is lower than the operating pressure of relief valve (45), the supply oil from port (A) to (c) flows through port (B) and flows out to the control valve. so that needed oil at (c) is insufficient with the only oil coming from the control valve (control valve is half lever position so that oil quantity from pump is controlled.).

To prevent the insufficient supply of oil, a make-up check valve (36) is installed.

2. When brake operates (Condition that relief valve (45) operates)

When the control lever is set to neutral by rapid operation at condition of (1), the supply oil from pump to port (A) is zero, but the upper structure will continue to turn due the force of inertia. When this happens, relief valve (45) in port (B) opens, and oil flows through relief valve oil passages (g) and (h), pushing make-up check (36) in port (A) off its seat. Oil is then supplied to oil passages (b) and (c). This is still not enough oil as needed to make up for the oil that leaks through the motor case drain. To protect the motor, make-up check (36) opens, allowing oil from the make-up port to supply the additional oil, preventing cavitation in passages (b) and (c).

Super Shockless Relief Valve Operation (Relief Valve Section Drawing)

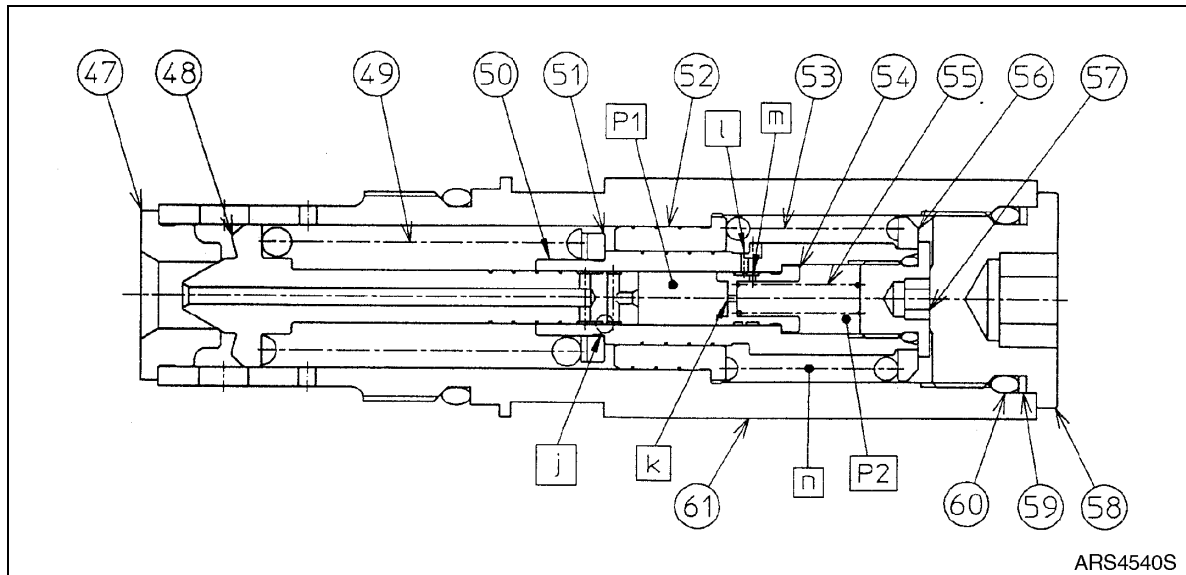


Figure 2

1. When starting

When the control valve is first actuated, pressurized oil is supplied to port (A). Due to the large initial inertia of the upper structure the swing motion is slower than that of the oil amount of oil being supplied for normal movement. The excess oil flows through relief valve (45). Oil from port (A) creates a resistance against spring (49), forcing open poppet (48). The excess oil then flows through passage (i) between seat (47) and poppet (48), and flows out to passage (h). It then opens the check valve (located in relief valve (46)) of port (B), and flows out to port (B).

2. When braking (When cushioning)

When setting control valve to neutral, the return oil passage of motor is closed. Just after closing it, the motor will continue to turn with a large inertia force. This inertia force makes the motor change momentarily into a pump. This pumping action tries to draw oil from port (A) and pump it into port (B), but the return oil passage to the control valve is closed. This causes pressure in port (B) to increase. The increased pressure at port (B) creates a resistance against spring (49), which forces open poppet (48), so that oil can pass through oil passages (g) and (h) from port (B), thus opening make-up check (36) and allowing oil to flow into passage (c).

During this period, the upper structure is stopped by the relief valve continuously absorbing inertia energy. Also during this period, high pressure oil seen at the front chamber of poppet (48), flows through orifice (j) of poppet (48) into the front chamber of poppet (54). There is an orifice (k) in poppet (54). The shoulder of poppet (54) is seated on the stepped surface of piston (50) by spring (55).

Pressurized oil, flowing into the front chamber of poppet (54), flows through orifices (k, m and l), flowing into piston chamber (n). This pushes piston (54) to the left. At this time, if the difference pressure ($P1 - P2$) between the front chamber pressure ($P1$) of orifice (k) and the spring chamber pressure ($P2$) is bigger than the spring load (F)/poppet area (A), poppet (54) moves to the right, shutting orifice (l), and the oil flowing into piston chamber is stopped.

When pressure ($P2$) in spring chamber is equal to ($P1$), poppet (54) is moved to the left by spring (55), so that oil is again allowed to flow through orifices (m and l).

Thus the oil regulating valve, controls the quantity of intake oil flowing to piston chamber (n), and the amount of time till the piston (50) is seated on the shoulder of liner (52).

When piston (50) is moving like as mentioned above, spring (49) force is increased from low force to high force, cushion relief operation is actuated at low pressure first, then it is increased to the rated pressure after a few moments have passed. By this slowly increasing pressure, the shock loading of the motor decreases when starting or stopping.

Bypass Valve Operation (Bypass Valve Section Drawing)

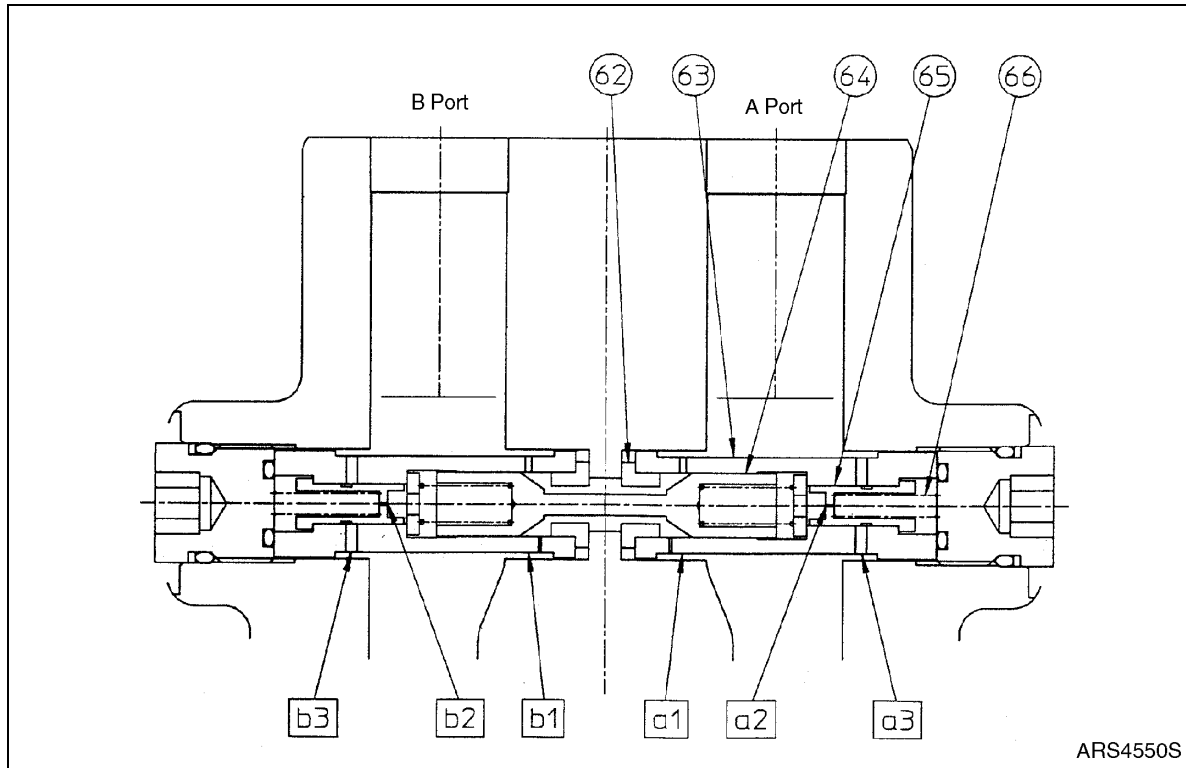


Figure 3

When stopping the upper structure (after moving it by operating the control valve), it tries to continue turning by inertia force. The hydraulic motor starts to operate like a pump, and brake pressure is generated at one of the ports. If for example it is port (A), as this brake pressure oil flows through orifice (a3 and a2) into the rear chamber of check (64) on side (A), the side (A) check (64) pushes the side (B) check (64) to the left, until it contacts seat (62) on side (A). This action closes the bypass passage, while reducing speed of the upper structure.

After the upper structure is stopped, but it is reversed by brake pressure, the pressure of side (B) increases, and the side (B) check (64) tries to push on side (A) check (64), but the oil of rear chamber of check (64) discharges slowly by opening the oil regulating valve consisting of side (A) poppet (65) and spring (66). Now the side (B) check (64) moves slowly, allowing pressurized oil to flow through orifice (b1) into center chamber, and bypasses through orifice (a1) to the side (A) port.

After the side (B) check (64), moves to a position where the bypass passage is closed by being compressed against seat (62) on side (B). Like this, by generating process of reverse pressure of side (B) port, pressure oil flow is not stopped and reversing is prevented by bypassing this pressure to side (A) port.

Swing Brake Operation

The swing brake is normally held in the applied position - preventing the upper structure from rotating - whenever the hydraulic system is not operated (pressurized). The brake system is automatically released whenever the swing controls are engaged to swing in one direction or the other.

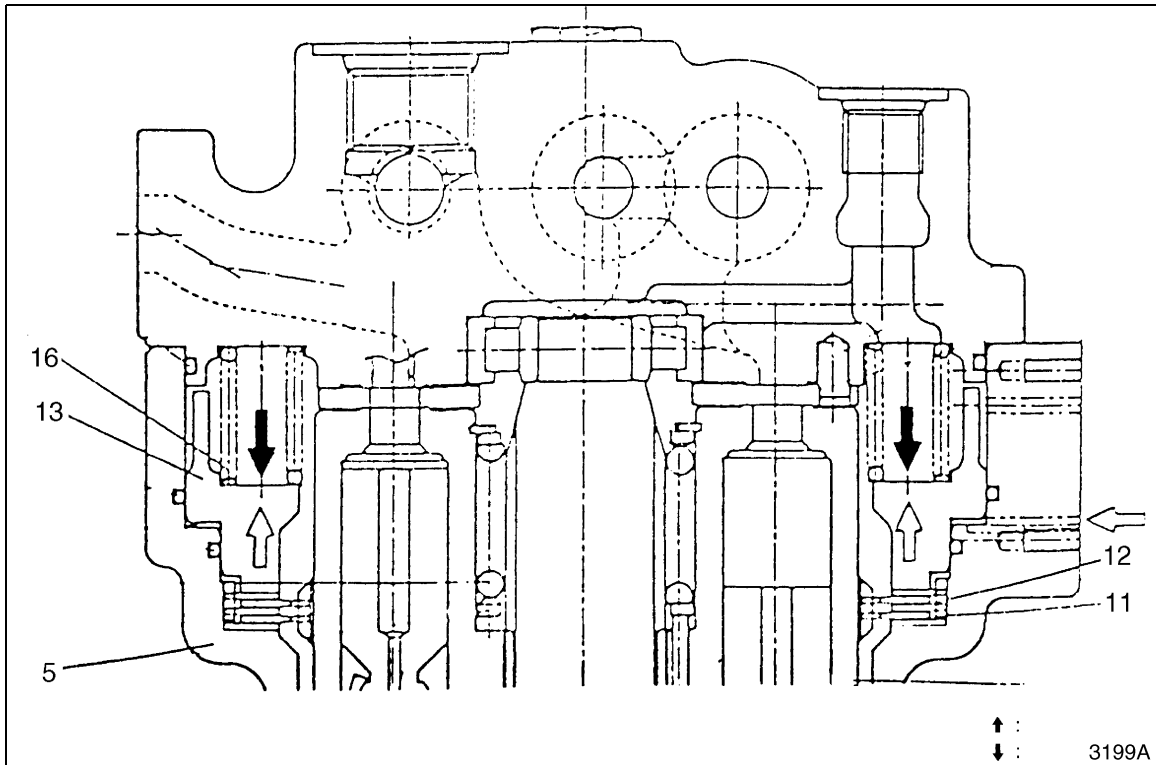


Figure 4

IMPORTANT

Along with the swing brake, a 2-position positive swing lock has also been provided. It should be secured whenever the upper deck revolving superstructure must be locked down and positively kept from rotating - including maintenance and/or repair intervals. (Do not rely on the swing brake alone to hold the superstructure in position for repairs, transport, maintenance or normal storage.)

The swing brake is applied when the brake spring. (16, Figure 4) locks up the friction plate (11), split plate (12) and swing motor casing (301), preventing the motor drive shaft from turning. When hydraulic pressure is forced to the back side of the brake piston, the friction plate and swing motor casing are separated, releasing the brake.

Time Delay Valve (Time Delay Valve Section Drawing)

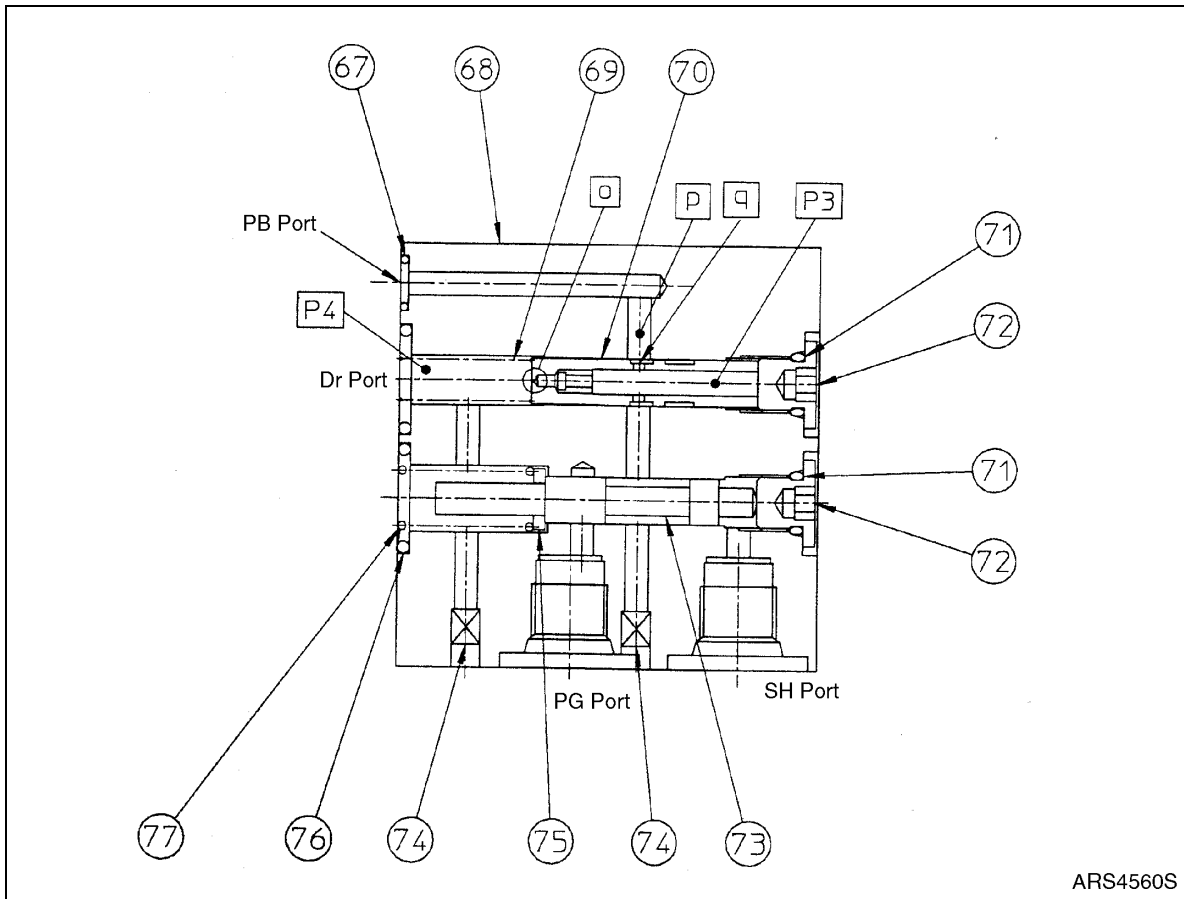


Figure 5

Pressure over mechanical brake releasing pressure always exists in port (PG).

1. Condition when drive shaft is locked by operation of mechanical brake

In this condition, pressure in port (SH) does not exist, and spool (73) is pushed to the right side end by spring (77) and stops the flow of oil from port (PG) to port (PB).

2. Condition when mechanical brake is released

In this condition, signal pressure into port (SH), moves spool (73) to the left side and oil flows through port (PG) and (PB) into the brake releasing chamber.

3. When delay function is operated

When pressurized oil, flowing into port (SH) is stopped, as in condition 2, spool (73) is pushed to the right side end by spring (77), and closes port (PG) and (PB). Pressurized oil from port (PB) flows out to port (Dr). At this time, when the pressure difference between (P3-P4) of front chamber (P3) orifice (o) and spring chamber pressure (P4) is larger than the force (F) of spring (69) ((F)/poppet (70) area (A)), poppet (70) is moved to left side, then stopper part of slot part of it closes passage (p), and stops the oil flow flowing into front chamber of orifice (o). Then spring chamber pressure (P4) equals (P3), then poppet (70) is moved to right side by spring (68) force, and oil flows from passage (p) to orifice (q) again. This oil quantity flowing to port (Dr) is controlled by the oil regulating valve and time is regulated till piston (13) is in the condition (1).

PARTS LIST

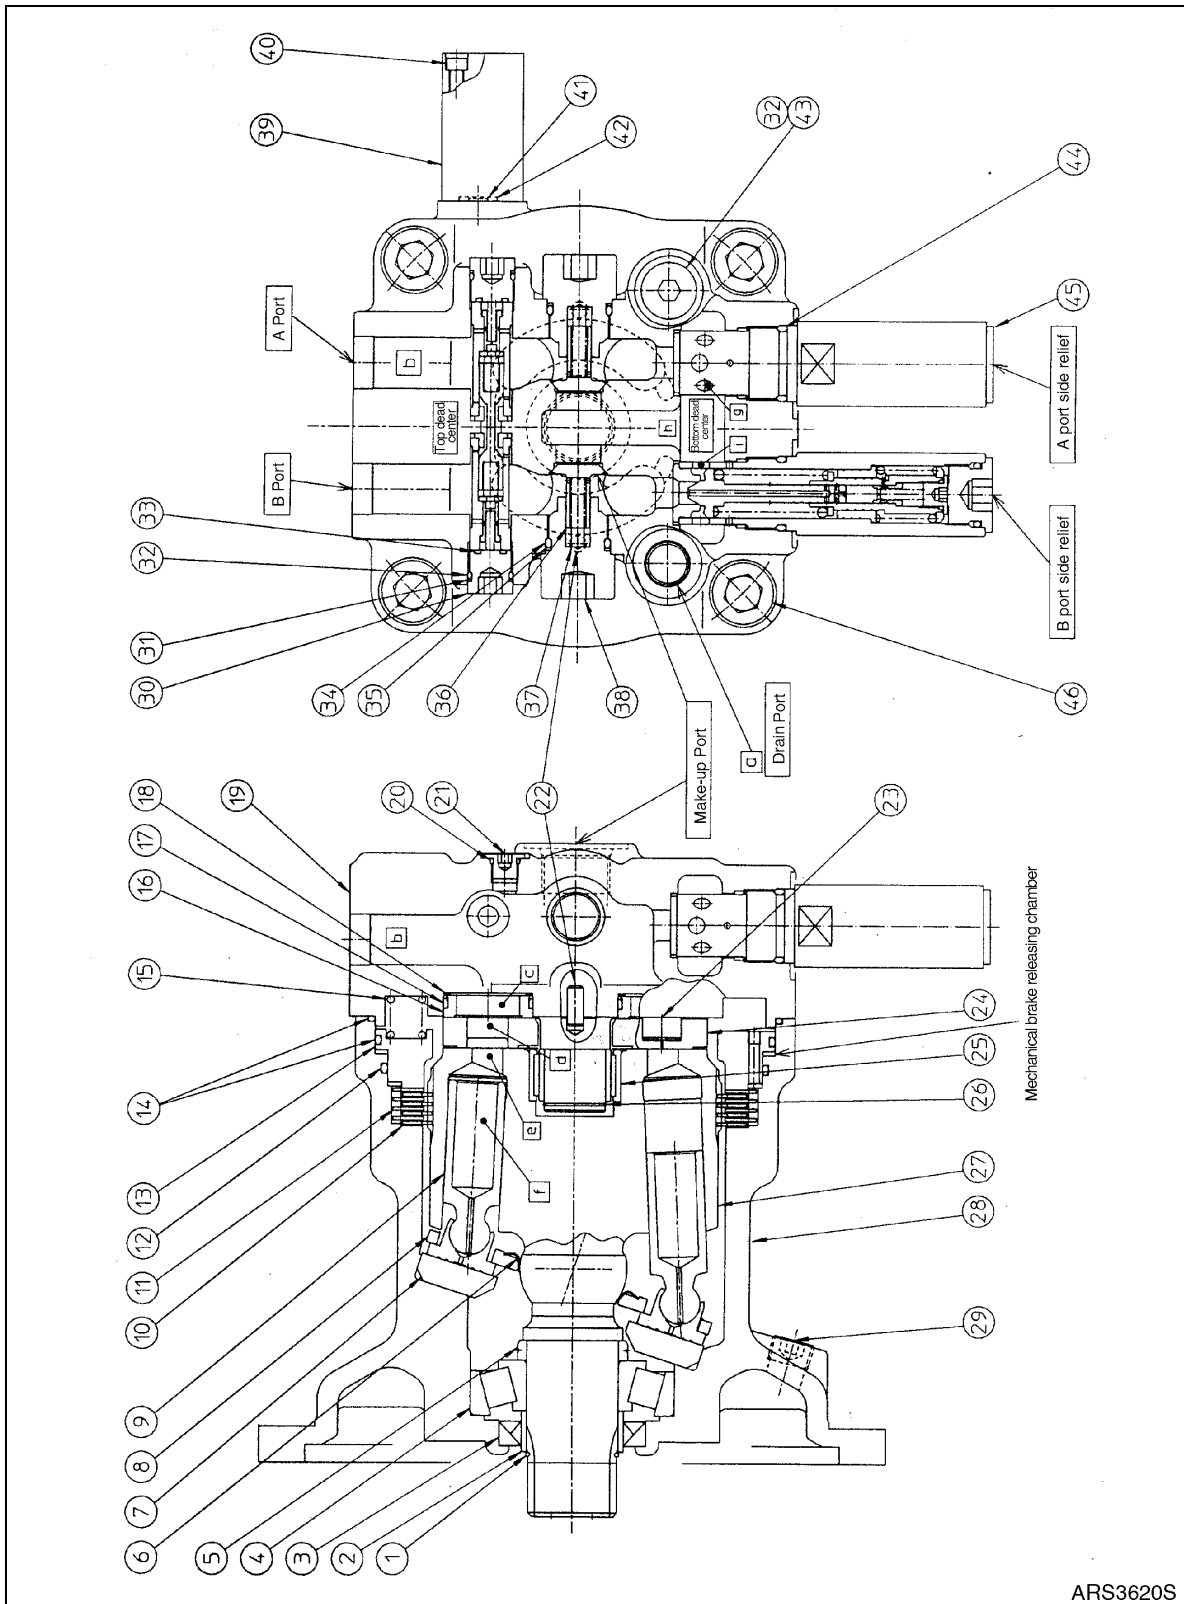


Figure 6

Reference Number	Description
1	Snap ring
2	Inner Ring
3	Oil Seal
4	Tapered Roller Bearing
5	Collar
6	Backing Spring
7	Cam Plate
8	Return Plate
9	Piston Assembly
10	Lining Plate
11	Plate
12	O-ring
13	Piston
14	O-ring
15	Spring
16	Bush
17	Teflon Ring
18	Scrowave
19	Cover
20	O-ring
21	Cap
22	Parallel Pin
23	Piston

Reference Number	Description
24	Balance Plate
25	Needle Bearing
26	Snap Ring
27	Cylinder
28	Housing
29	Plug
30	Bypass Valve Assembly
31	Back-up Ring
32	O-ring
33	O-ring
34	O-ring
35	Back-up Ring
36	Check
37	Spring
38	Cap
39	Time Delay Valve
40	Hex. Socket Bolt
41	O-ring
42	O-ring
43	Cap
44	O-ring
45	Relief Assembly
46	Hex. Socket Bolt

SPECIFICATIONS

Swing Motor	Specification
Theoretical Motor Displacement	186.70 cc (11.39 in ³)
Working Pressure	284.5 kg/cm ² (4,047 psi)
Brake Torque	834.0 kg•m (6,030 ft lb) (At Back Pressure 0 kg/cm ² (0 psi))
PG Port Supplying Pressure	39.77 kg/cm ² (565 psi) (100% Release Pressure) Allowable Pressure 49.97 kg/cm ² (710 psi)
Rotating Direction	B Port Inflow: Clockwise A Port Inflow: Counterclockwise
Allowable Viscosity Range	10 ~ 1000 mm ² /s
Allowable Temperature Range	-30 ~ +80°C (-22°F - 176°F)
Mass	About 60.0 kg (132 lb)
Allowable Drain Pressure	Max 3.06 kg/cm ² (43.52 psi)
SH Port Selector Switching Pressure	Cranking 12.95 kg/cm ² (184.22 psi) Allowable Pressure 49.97 kg/cm ² (710.76 psi)
Hydraulic Timer Setting Hour	6.5 ±1.5 S (VG# 46.50°C)

SPECIAL TOOLS AND MATERIALS

SPECIAL TOOLS

Pressing Tool of Inner Ring (2) and Taper Roller Bearing (4) Inner Race

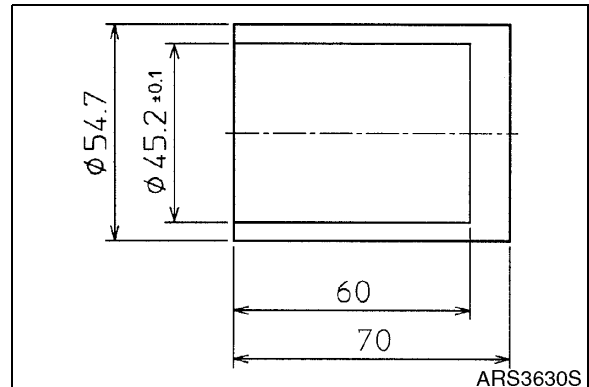


Figure 7

Assembly Tool for Oil Seal (3)

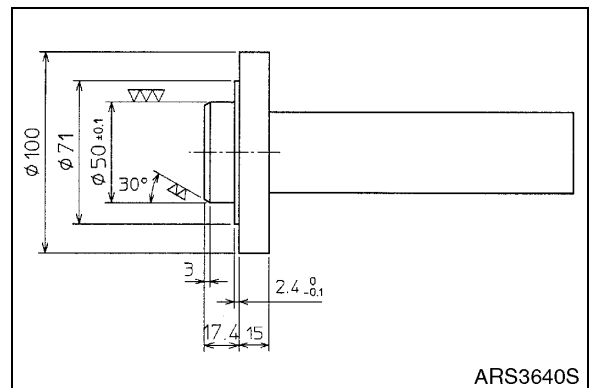


Figure 8

Assembly Tool for Brake Piston (13)

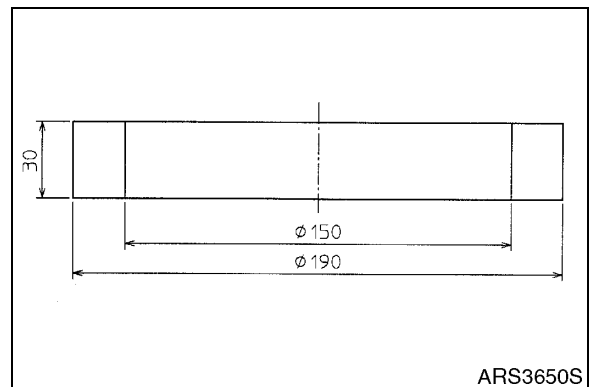


Figure 9

TROUBLESHOOTING, TESTING AND ADJUSTMENT

If abnormality is found when using motor, a way of handling to work is described when function is poor. As disassembling, inspection and reassembling is described in detail later also, use extreme care for handling absolutely not to damage the sliding surface of motor when working.

Problem	Possible Cause	Remedy
Motor does not rotate	Motor internal damaged	Check fluid drain quantity. If the fluid quantity supplied to motor is almost all of fluid drain quantity, it is necessary to disassemble and check it because the possibility of damage is large. Refer to "Inspection Parts List" on page -18.
	Motor internal damaged	Open inlet and outlet port of motor, apply pilot pressure of 3.9 - 4.9 Mpa to brake release port, and then check the turning of output shaft with torque of about 30 - 40 Nm over one revolution smoothly. If it does not turn smoothly with the torque described above, it is necessary to disassemble and check it because the possibility of damage is large. Replace damaged parts or motor assembly.
	Setting pressure of relief valve in circuit poor	Check load pressure by pressure gauge. Reset it to setting pressure.
Slip is very big	Sliding surface parts of motor and high pressure seal parts worn or damaged	Check fluid drain quantity. If fluid drain quantity is over 2.5 l/min, it is necessary to disassemble and check it. Refer to "Inspection Parts List" on page -18.
	fluid temperature too high and motor internal leakage too big	Check fluid temperature. Lower fluid temperature.

Problem	Possible Cause	Remedy
Torque is poor and Abnormal noise	Sliding surface parts worn or damaged	Open inlet and outlet port of motor, apply pilot pressure of 3.9 - 4.9 Mpa to brake release port, and then check the turning of output shaft with torque of about 30 - 40 Nm over one revolution smoothly. If it does not turn smoothly with the torque described above, it is necessary to disassemble and check it because the possibility of damage is large. Check the parts of the articles from (a) to (e) of "Inspection Parts List" on page -18 and bearings and replace if they are abnormal.
	Setting pressure of relief valve in circuit poor	Check load pressure by pressure gauge. Reset it to setting pressure.
	Motor internal damaged	Check whether metallic foreign material is in fluid drain of motor and drain filter. If metallic material is found, disassemble and check motor internal because the possibility of its damage is large. Repair or replace damaged parts. Replace motor.
	Air in fluid mixed	Check fluid in tank and motor case. Bleed air fully.
	Fastening parts loose	Check pipe laying parts, fastening part bolts, motor fastening bolts, and each motor fastening part bolts. Fasten suitable tightening torque.
Abnormal heat	Motor sliding and rotating parts stuck	Check whether metallic foreign material is in motor fluid drain and drain filter, and check the turning of output shaft with torque of about 30 - 40 Nm over one revolution smoothly. If metallic material is found or it does not turn smoothly with the torque described at left, it is necessary to disassemble and check it because the possibility of damage is large. Repair or replace damaged parts. Replace motor.
Assembling parts leaking	O-ring damaged	Replace O-ring.
	Seal surface damaged	Repair seal surface or replace seal.
	Bolt loose	Check bolts Fasten suitable tightening torque. Repair or Replace motor.
Oil seal leaking	Oil seal lip part damaged or worn	Check pressure in case and drain quantity.
	Shaft seal part damaged or worn	Pressure in case is made lower than 0.3Mpa. If drain is high, disassemble and check it.
	Pressure of case abnormal	Replace oil seal. Repair or replace damaged parts. Replace motor assembly.

Inspection Parts List

No.	INSPECTION PARTS	CORRECTION
a	Wear of sliding part of balance plate(24)	Repair or replace parts
b	Damage of sliding part of cam plate(7)	Repair parts or replace motor
c	Damage of sliding part of piston assembly(9)	Repair parts or replace motor
d	Wear of piston circumference surface of piston assembly(9)	Repair parts or replace motor
e	Wear of piston hole of cylinder(27)	Replace motor
f	Damage of teflon ring(17)	Replace parts

REMOVAL

When transporting and storing, set motor down vertically by pointing drive shaft downwards. When lifting motor, always attach a lifting-eye to make-up port in center of motor cover.

Do not attach sling or other lifting device to relief valves or timer. This could result in them being deformed and/or malfunctioning.

DISASSEMBLY



CAUTION!

Read this manual before working on or performing disassembly, reassembly, inspection, repair etc. of this component.

Disassembly of this component should be done after stopping machine and allowing surface temperature of this component to cool to 40°C or below. Working on this component when it is at higher temperatures can result in burns.

When disconnecting hoses from component, always work after allowing pressurized air and oil to vent. Disconnecting hoses from component that are under pressure can cause serious injury from oil squirting out.

Special tools or measuring apparatus are used for disassembly, reassembly, inspection, repair etc. of component. Using an inappropriate tool can cause injury or damage to component.

When performing disassembly, reassembly, inspection, repair, etc. of this component, be careful not to drop components. It can cause personal injury or damage to component parts.

When performing disassembly, reassembly, inspection, repair etc. of this component, do not touch threads with bare sink. It can cause injury.

After reassembling, verify operational performance and do not use it, if it does not operate properly. Improper operation can cause damage to other components.

1. Remove the following valve assemblies from motor cover (19).
 - Relief valve assembly (45) (hex hole size 14 mm).
 - Cap (38) (hex hole size 14 mm), spring (37), check (36) and bypass valve assembly (30) (hex hole size 10 mm) installed in motor cover.
 - Remove socket bolt (40) (hex hole size 5 mm) and disassemble oil pressure timer (39).

NOTE: Relief valve assembly (45), cap (38), spring (37), check (36), bypass valve assembly (30), oil pressure timer (39) that are disassembled, should be reassembled in the same position.

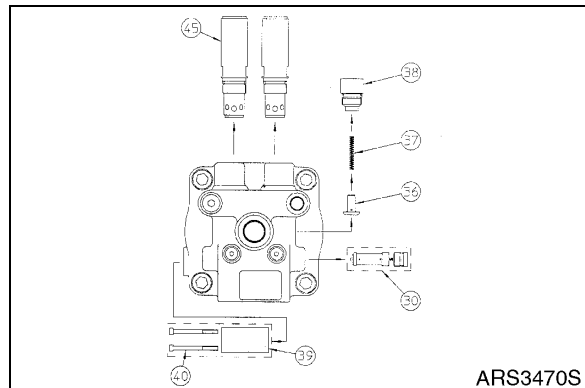


Figure 10

2. Match mark cover (19) and housing (28) so that they can be properly oriented during reassembly.

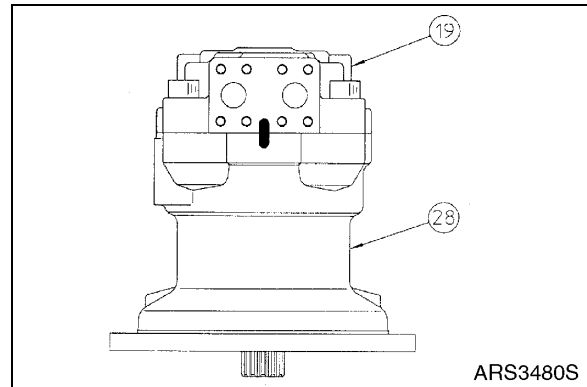


Figure 11

3. With motor output shaft pointing down, remove four socket head bolts (46) (hex hole size 17 mm) and cover (19) from housing.

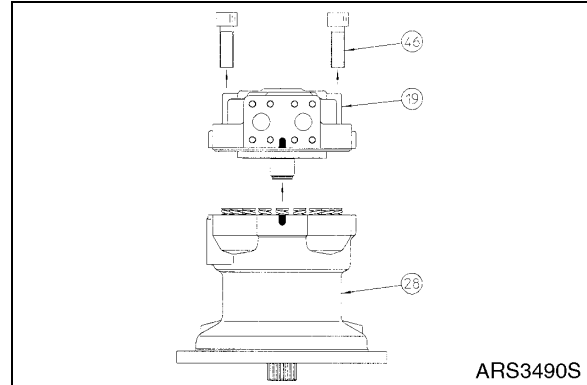


Figure 12

4. Remove snap ring (26), inner race of needle bearing (25) and balance plate (24).
5. Remove piston (23) from balance plate (24).

NOTE: Be careful not to scratch the sliding surface of balance plate (24) or not to deform it by excessive force.

NOTE: Match mark balance plate (24) with cover (19). Note assembly direction of the balance plate (24) against cover (19).

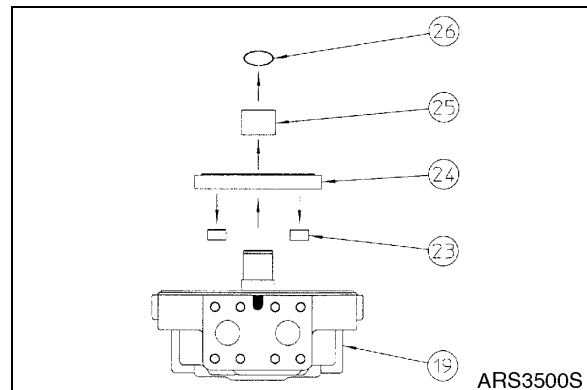


Figure 13

6. Remove O-ring (14) from cover (19).

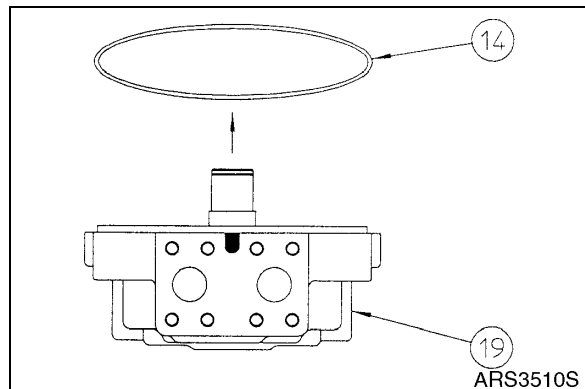


Figure 14

7. Remove bushing (16) attached in Teflon ring (17) and scrowave (18) from cover (19).

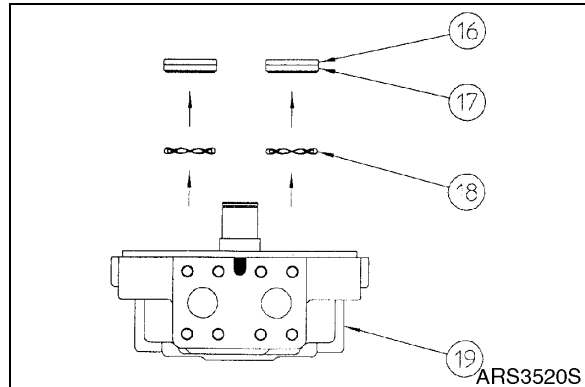


Figure 15

8. Remove springs (15) from piston (13).

NOTE: Match mark springs (15) with piston (13).

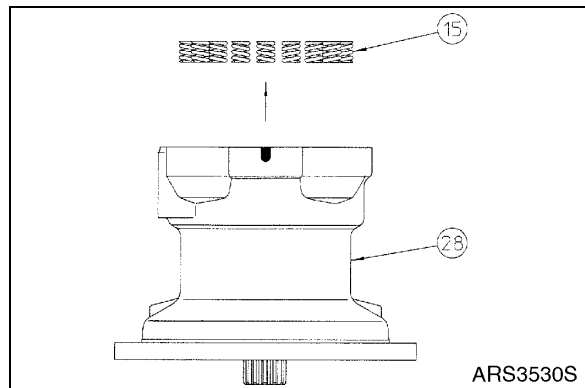


Figure 16

9. Piston (13) will not come out of housing (28) due to sliding resistance of O-rings (12 and 14). Remove it using tap holes (M6) in piston. remove piston (13) as shown in Figure 17.

NOTE: Position the fulcrum outside of the inner diameter of housing (28).

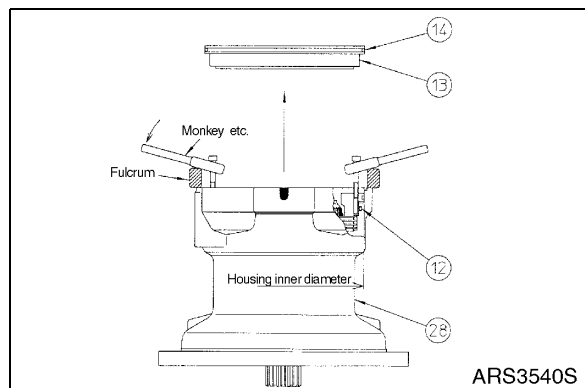


Figure 17

DISASSEMBLY OF LINING PLATES AND PLATES

1. Remove lining plate (10) and plates (11).

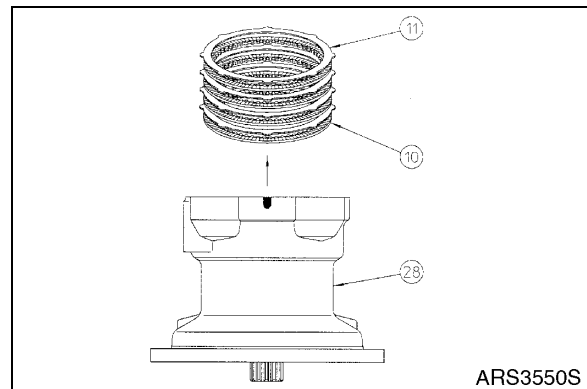


Figure 18

DISASSEMBLY OF CYLINDER ASSEMBLY

1. Holding cylinder (27) by the end part, remove cylinder assembly from housing (28).

NOTE: Be careful not to drop cylinder (27) as it is slippery.

2. The outer race of taper roller bearing (4) and oil seal (3) will remain in housing (28).
3. Keep the sliding surface (A) of cylinder (27) covered until installation. This will protect it from damage.
4. Mark or number piston holes of cylinder (27) and piston assemblies (9) for identification of original position at reassembly. Install them in the original position when reassembling.

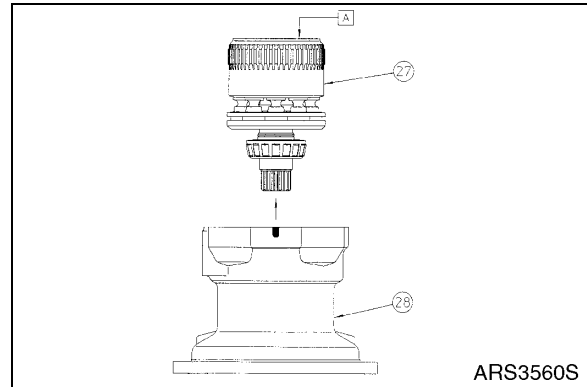


Figure 19

DISASSEMBLY OF TAPER ROLLER BEARING OUTER RACE

1. Remove taper roller bearing outer race (4) from housing (28). Push out oil seal (3) using driver and hammer.

NOTE: Do not reuse oil seal (3).

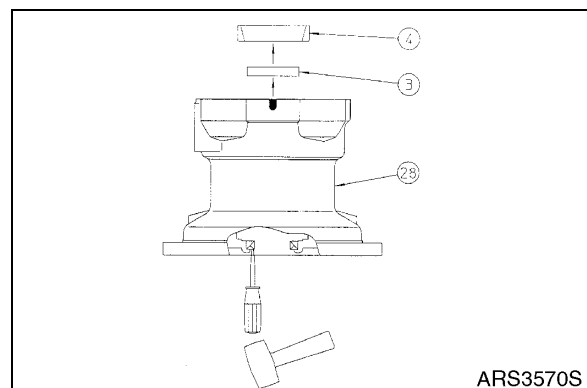


Figure 20

DISASSEMBLY OF CYLINDER ASSEMBLY

1. Squeeze out snap ring (1). Remove outer taper roller bearing inner race (4) and inner ring (2) using bearing puller.

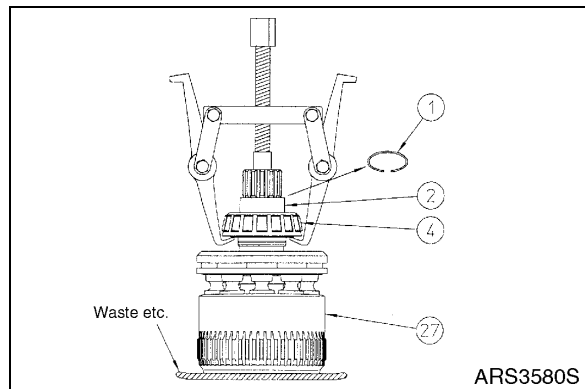


Figure 21

2. Remove collar (5) from cylinder (27). Remove cam plate (7), return plate (8) and piston assembly (9) from cylinder (27).

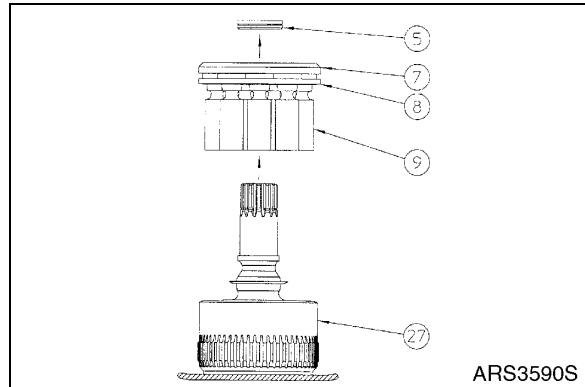


Figure 22

3. Remove cam plate (7) from sliding surface of piston assembly (9) by sliding it off.

NOTE: Be careful not to damage cam plate (7) and sliding surface of piston assembly (9).

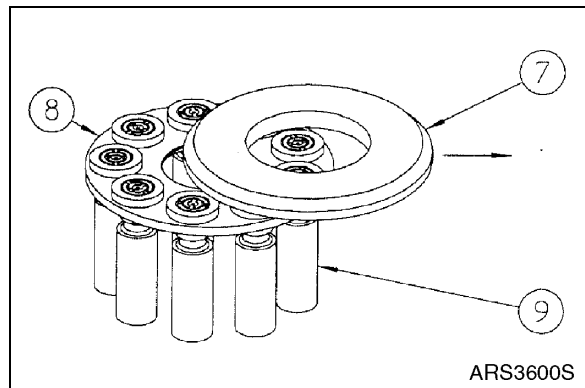


Figure 23

4. Remove spring plate (6) from cylinder (27).

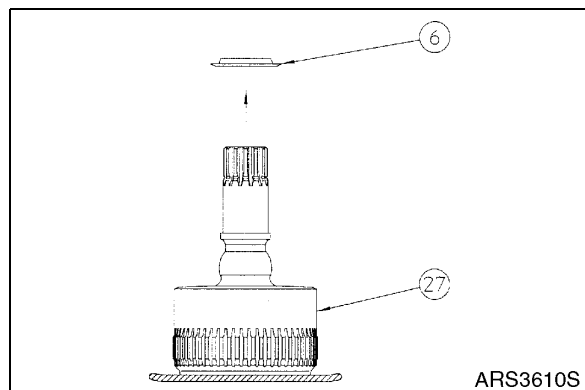


Figure 24

CLEANING AND INSPECTION (WEAR LIMITS AND TOLERANCES)

For general cleaning and inspection procedures, refer to "General Maintenance Procedures" section.

REASSEMBLY

GENERAL

NOTE: *When reassembling, first perform the following steps.*

1. Check each part for damage when disassembling. If it is damaged, repair it with fine grade oil stone or crocus cloth as necessary. Then thoroughly clean it with a suitable cleaning oil and dry it with moisture free compressed air.
2. Replace all seals with new ones.
3. Lap sliding surfaces of piston assemblies (9), cam plate (7) and balance plate (24) with #2000 crocus cloth on a surface plate.
4. When reassembling sliding parts, apply clean hydraulic oil to them.

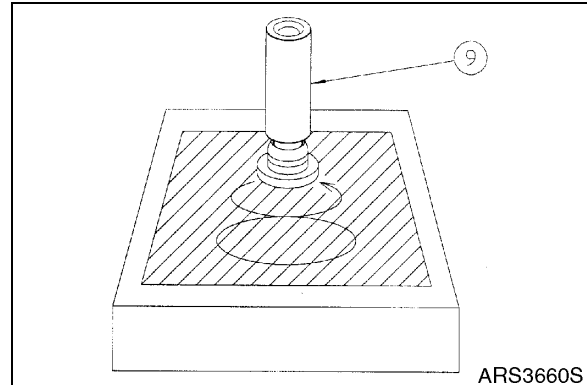


Figure 25

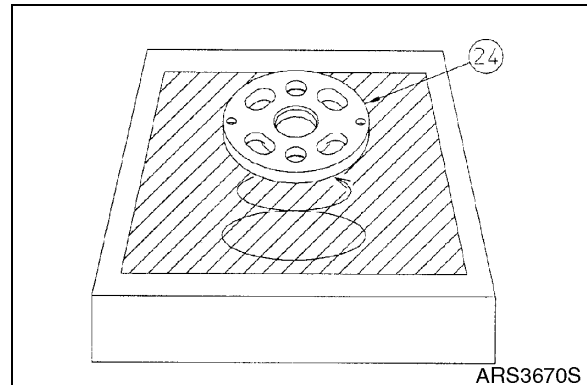


Figure 26

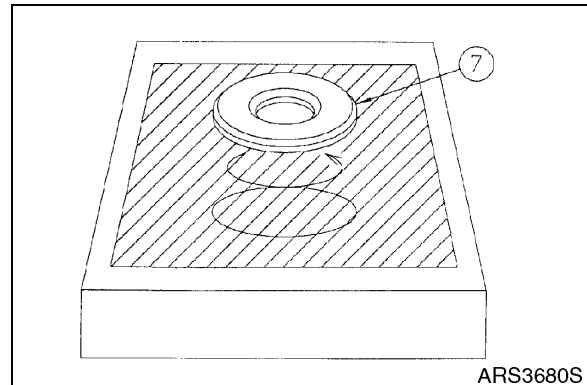


Figure 27

REASSEMBLY OF CYLINDER ASSEMBLY

1. Apply hydraulic oil to round part (contact part of backing spring (6)) of cylinder (27) and insert backing spring (6).

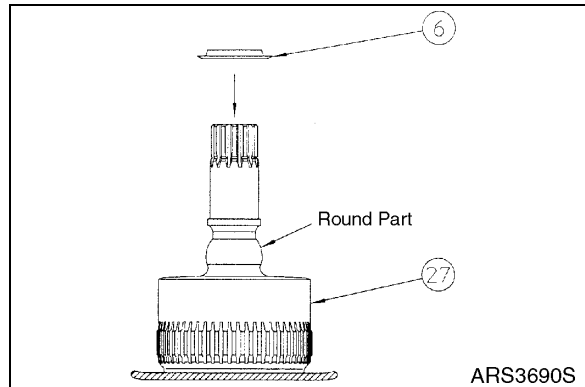


Figure 28

2. Insert piston assembly (9) into hole of return plate (8).

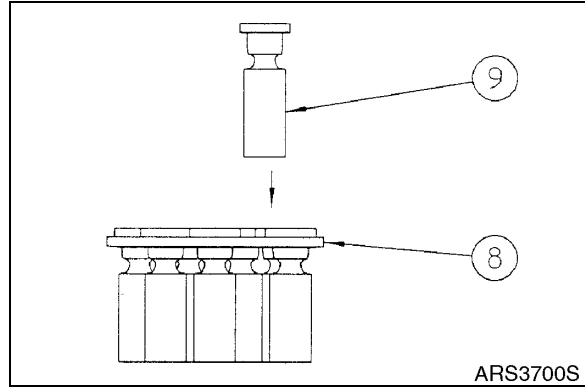


Figure 29

3. Install piston assembly (9) and return plate (8) into cylinder (27).

NOTE: Install piston assembly (9) into holes of cylinder (27) in the original position.

NOTE: When reassembling, apply hydraulic oil to the piston holes of cylinder (27).

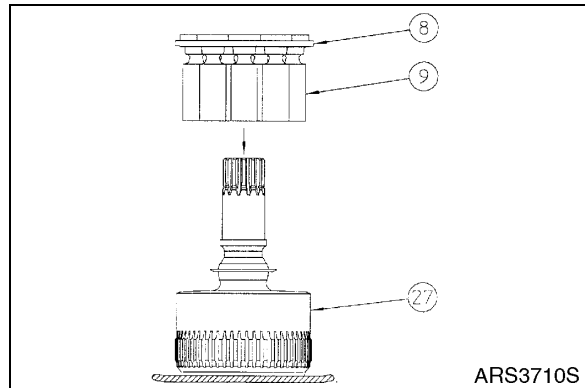


Figure 30

4. Apply hydraulic oil to the sliding surface of shoe of piston assembly (9) and install cam plate (7) in cylinder (27).
5. Insert collar (5) in cylinder (27).

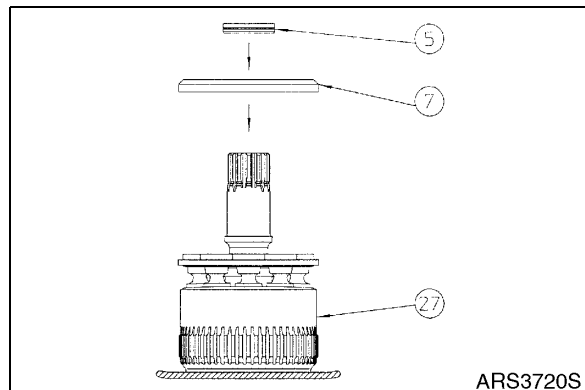


Figure 31

6. Press fit inner race of taper roller bearing (4) onto cylinder by using special tool and press.

NOTE: When pressing, wrap the surface of cylinder (27) with a lint free cloth or paper to protect it from being damage.

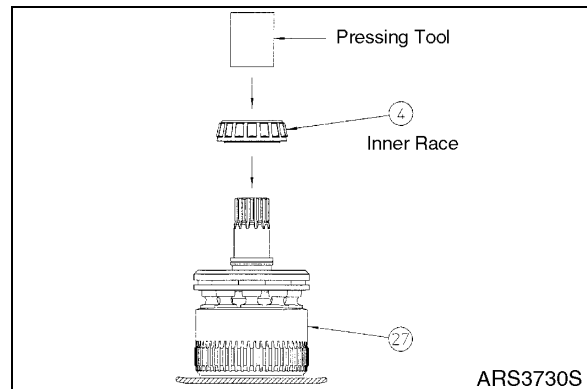


Figure 32

7. After cleaning and drying, reassemble part of cylinder (27), by applying a thin coat of Loctite (515, 518 or equivalent) to it and press fit inner ring (2) using special tool. Install snap ring (1).

NOTE: Use extreme care not to get Loctite on the rollers of taper roller bearing (4).

NOTE: Clean off remaining Loctite between inner ring (2) and taper roller bearing (4).

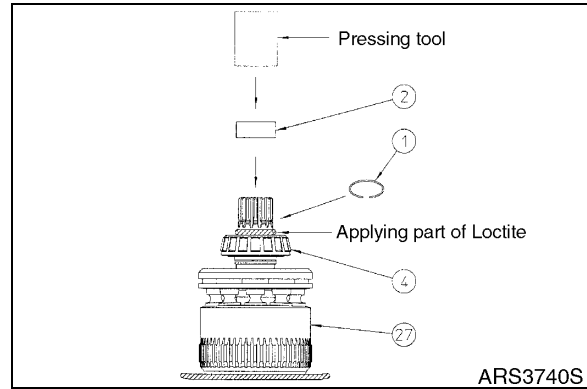


Figure 33

REASSEMBLY OF OIL SEAL

1. Clean and dry seal bore of housing (28). Dry the outer surface of oil seal (3), and apply a thin coat of sealing compound (Three Bond kk "1211" white or equivalent) to it and press it into housing (28) using special tool.

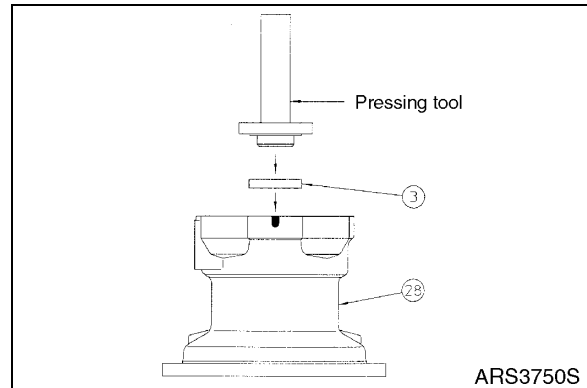


Figure 34

NOTE: Be careful to install oil seal (3) in the proper direction.

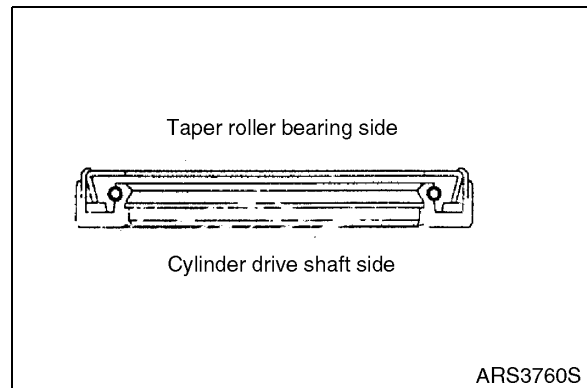


Figure 35

REASSEMBLY OF TAPER ROLLER BEARING OUTER RACE

1. Install taper roller bearing outer race (4) in housing (28).

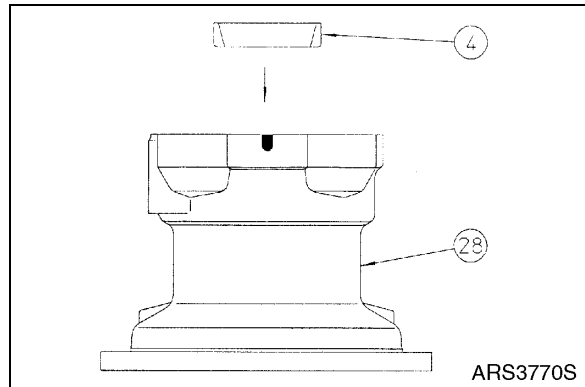


Figure 36

REASSEMBLY OF CYLINDER ASSEMBLY

1. Apply a thin coat of grease on lip of oil seal (3). Hold end part of cylinder (27), and slowly install cylinder assembly into housing (28).

NOTE: When installing cylinder assembly, check if backing spring (6) is inserted in the spot facing of return plate (8).

NOTE: When installing cylinder assembly, as the spline of cylinder (27) is out from the under part of housing (28), put a support of 30 - 50 mm under the lower portion of housing (28).

NOTE: Check if the end part of cylinder (27) is about 15.3 mm below the end of housing (28). If it is less than 15.3 mm, cam plate (7) is not properly installed in the spot facing of housing (28). If so, slowly lean cylinder (27) to lower the high part of cylinder, slightly wave cylinder up and down, and install cam plate (7).

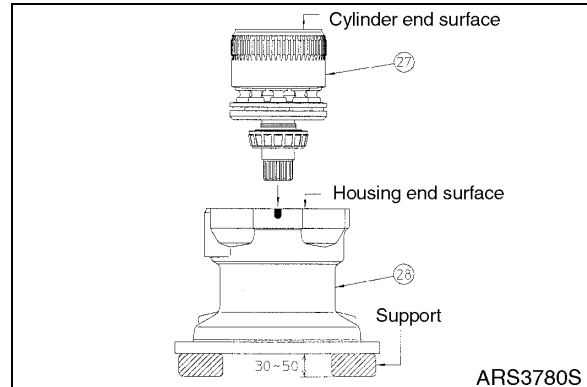


Figure 37

REASSEMBLY OF LINING PLATE AND PLATE

1. Install lining plates (10) and plates (11).

NOTE: Apply hydraulic oil to both faces of each plate.

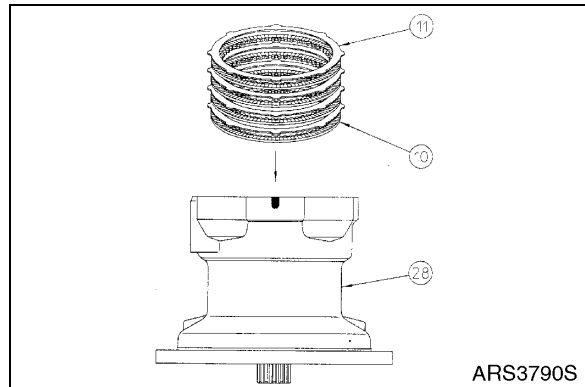


Figure 38

REASSEMBLY OF O-RING

1. Install O-ring (12) on housing (28) and O-ring (14) on piston (13).

NOTE: Apply grease to O-rings (12 and 14).

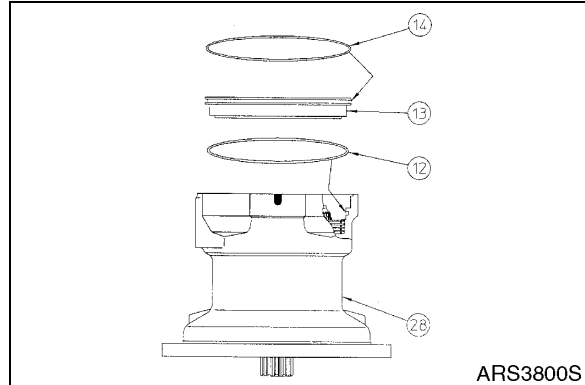


Figure 39

REASSEMBLY OF BRAKE PISTON

1. Apply hydraulic oil to the circumferential sliding surface of piston (13) and install it to housing (28).

NOTE: Since there is an interference between piston (13) and O-rings (12 and 14), when installing piston (13), mount the whole piston (13) horizontally and push it into housing (28).

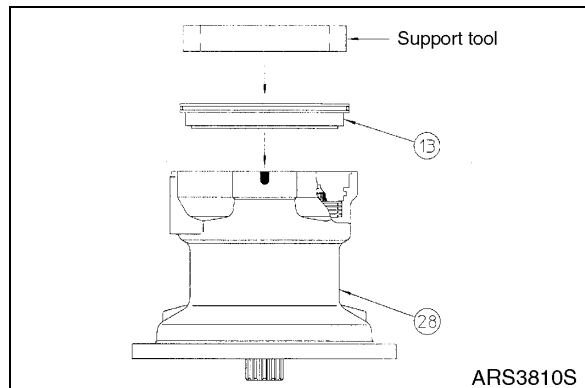


Figure 40

REASSEMBLY OF SPRING

1. Install spring (15) on piston (13) of brake.

NOTE: Install spring (15) in the original position where it was disassembled before.

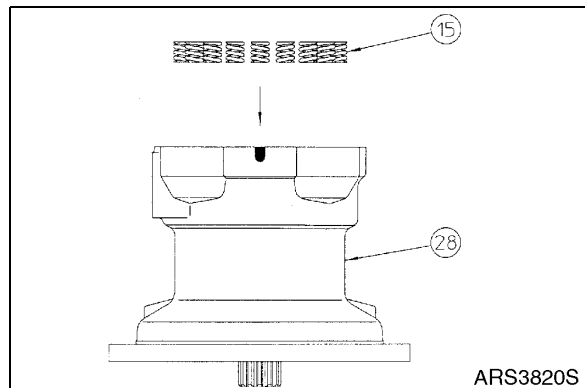


Figure 41

REASSEMBLY OF BALANCE PLATE

1. Install scrowave (18) and bushing (16) with Teflon ring (17) into bushing hole of cover (19). Install balance plate (24), in which piston (23) is inserted, on cover (19).

NOTE: Be careful of the reassembling direction, which was marked before disassembling, of balance plate (24) and cover (19).

NOTE: Fully apply grease to piston (23) and pin (22) (for stopping turning of balance plate) of cover (19) and install balance plate on cover.

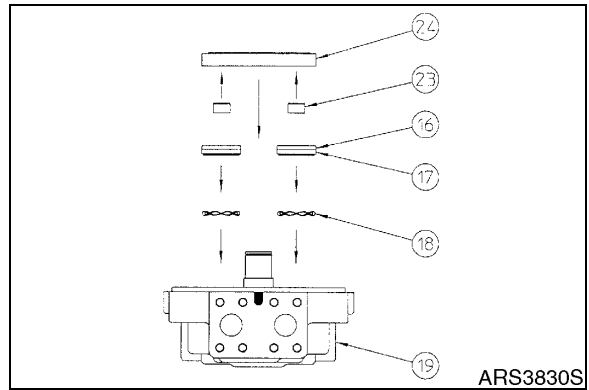


Figure 42

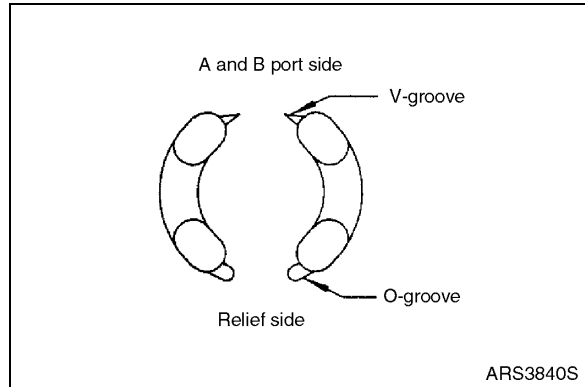


Figure 43

REASSEMBLY OF INNER RACE

1. Press needle bearing (25) inner race into cover (19) and install snap ring (26).

REASSEMBLY OF O-RING

1. Install O-ring (14) on cover (19).

NOTE: Apply grease to O-ring (14).

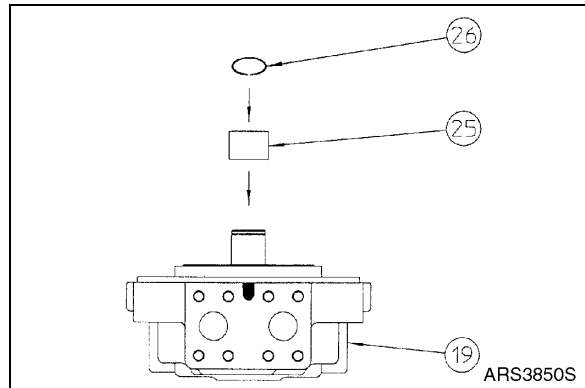


Figure 44

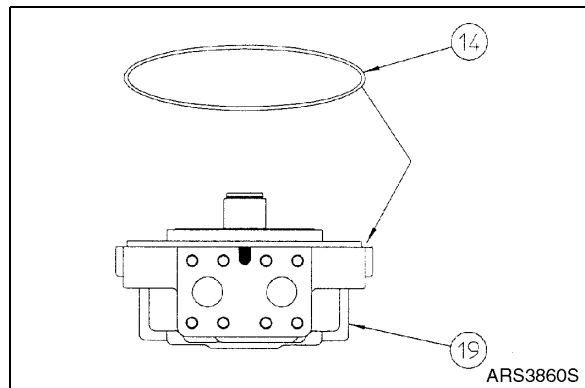


Figure 45

APPLYING LIQUID PACKING

1. Clean and dry the mating surfaces of housing (28) and cover (19), and apply liquid packing (Three Bond kk "1211" white or equivalent) to it like right figure.

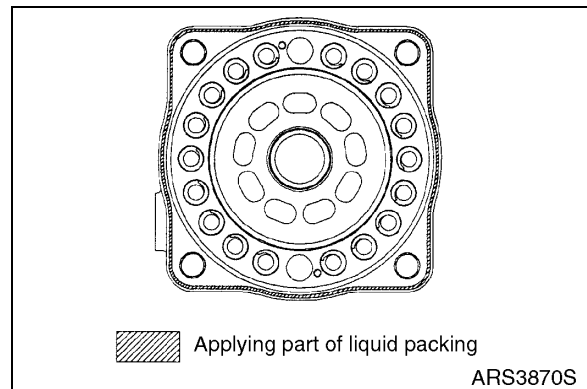


Figure 46

REASSEMBLY OF COVER

1. Clean and dry the mating surface of cover (19) against housing (28), lift cover (19) by hand, and install it to housing (28) slowly.

NOTE: Align and install cover (19) to housing (28) according to the installation position marked before disassembling.

NOTE: The clearance between housing (28) and cover (19) should be about 4 mm.

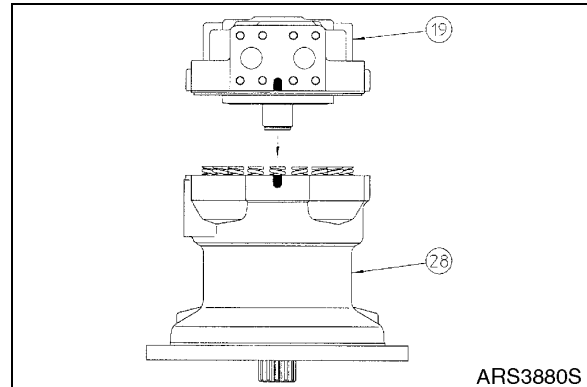


Figure 47

TIGHTENING OF BOLT (TIGHTENING OF COVER (19) AND HOUSING (28))

1. Tighten bolt (46) (hex hole size17) with torque of 392 Nm.

NOTE: Now the four bolts should be equally and lightly tightened to align housing (28) and cover (19) straight.

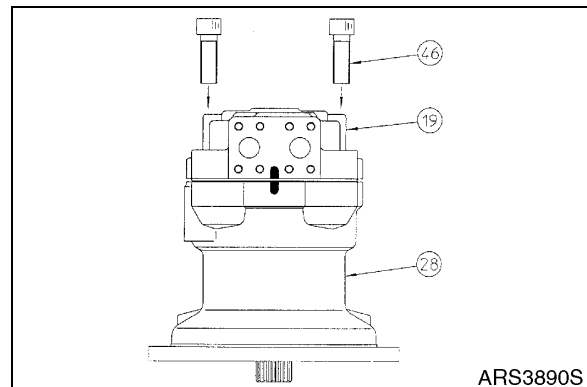


Figure 48

REASSEMBLY OF RELIEF VALVE ASSEMBLY, ETC.

1. Install relief valve assembly (45) (hex hole size 14 mm) to cover (19) with torque of 137 Nm. Install check (36) and spring (37) to cover (19) and tighten cap (38) (hex hole size) to cover (19) with torque of 137 Nm. Tighten bypass valve assembly (30) (hex hole size 10 mm) to cover (19) with torque of 78 Nm. Tighten time relay valve (39) to housing with torque of 12 Nm by means of hex socket bolt (40) (hex hole size 5 mm).

NOTE: *Install relief valve assembly (45), cap (38), spring (37), check (36), bypass valve assembly (30), and time relay valve (39) to the original position which was disassembled before.*

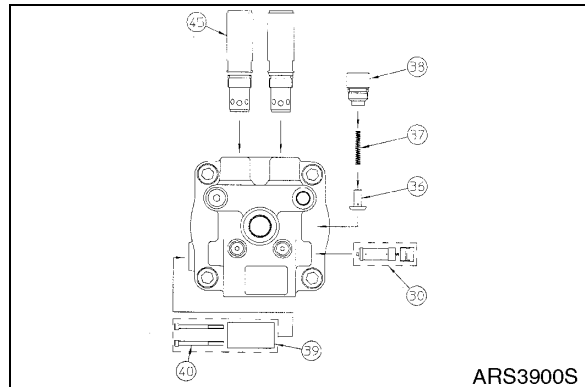


Figure 49

CONFIRMING OF REASSEMBLY

1. Open inlet and outlet port of motor, apply pilot pressure of 3.9 - 4.9 Mpa to brake release port, and then check the turning of output shaft with torque of about 30 - 40 Nm over one revolution smoothly. If it does not turn, readjust it by disassembling because it is improperly reassembled. At this time open drain port also.

NOTE: *After reassembling hydraulic motor, check the setting pressure of relief valve (45).*

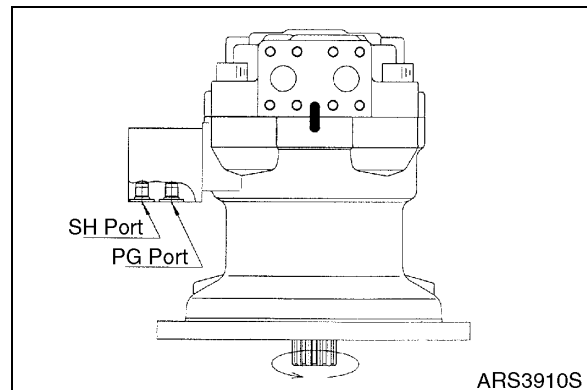


Figure 50

INSTALLATION

Piping

Dimensions for piping is already decided in outside drawing. Piping is to be hose or steel part. Also when piping, detach cap seal of rubber of port part. Because drain pipe is decreased pressure in motor case, uses large diameter pipe. Also when connecting return pipe other components, return oil is squirted out suddenly, abnormal back pressure of pressure in motor case should be below 0.3 MPa.

START-UP PROCEDURES

HYDRAULIC OIL

Recommended hydraulic oil is listed in the Operation and Maintenance Manual.

PRELIMINARY OPERATION

Make sure that all hoses and pipes are flushed and free of contamination. Check all fittings and connections in the circuit to be sure that they are properly tighten and connected.

Bleed air from motor case, when filling case with hydraulic oil. If motor is operated without hydraulic oil, it can result in internal parts being damage. After fully filling motor with oil, operate it at a no load condition, and low speed, for 10 - 15 minutes. Check for abnormal noises or vibration when operating. Slowly operate motor at a higher speed and load.

RELIEF VALVE

The relationship between adjusting oil pressure of relief valve and turning the adjustment screw is as follows, and it is very difficult to confirm. Do not adjust pressure unless absolutely necessary.

Pressure variation for 0.1 mm of screw advancement, is about 0.4 MPa.



TRAVEL MOTOR (WITH GEARBOX)



CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that is in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

MODEL	SERIAL NUMBER RANGE
Solar 290LC-V	-----
Solar 300LC-V	1001 and Up

TABLE OF CONTENTS

General Description.....	4
Theory of Operation	5
Hydraulic Motor.....	5
Reduction Gear.....	9
Parts List	12
Hydraulic Motor.....	12
Reduction Gear.....	14
Specifications	15
Special Tools and Materials.....	16
Special Tools	16
Reduction Gear Part	19
Hydraulic Motor Part	21
Tightening Torque Chart	22
Troubleshooting, Testing and Adjustment.....	23
Hydraulic Motor	23
General Caution Matters.....	23
Inspection method of abnormality of hydraulic motor	23
Cause and remedy of trouble.....	23
Travel Reduction Gear.....	25
General Caution Matters.....	25
Disassembly	26
General Caution Matters	26
Reduction Gear Part	26
Hydraulic Motor Part	29
Disassembly of Motor	29
Disassembly of Cylinder Subassembly	31
Disassembly of Valve Casing.....	32
Disassembling of Drive Shaft Subassembly	33
Cleaning and Inspection (Wear Limits and Tolerances)	34
Maintenance Standard	34

Changing Standard of Hydraulic Motor Part	35
Parts Inspection and Inspection Standard of Reduction Gear	37
Reassembly.....	38
General Caution Matters	38
Motor Part	38
Reassembling of Drive Shaft Subassembly	38
Reassembling of Valve Casing Subassembly	38
Reassembling of Cylinder Subassembly.....	40
Reassembling of Motor	41
Reduction Gear	44
Reassembling of Angular Ball Bearing (18) of Housing (1) Part....	44
Selection Method of Shim (15) Thickness	45
Reassembling of Floating Seal (19)	46
Reassembling of Housing (1) and Shaft Casing (25).....	46
Reassembling of Stopper (27)	46
Reassembling of Coupling Gear (5) and Ring Gear No.2 (4)	47
Reassembling of Coupling Gear Subassembly and Housing Subassembly	47
Reassembling of Carrier Subassembly.....	47
Decision of Cluster Gear (6) Phase	48
Reassembly of Housing (1) and Ring Gear No.1 (3)	49
Selection of Thrust Bearing (10) Thickness	49
Installation	51
Check	51
Fitting	51
Piping	51
Gear Oil.....	52
Kinds of Oil.....	52
Oil Drain	52
Oil Filling	52
General Caution Matters	52

GENERAL DESCRIPTION

1. Travelling device consists of a hydraulic motor and reduction gear.
2. Hydraulic motor is comprised of the following five items.
 - Rotary group - generating rotating force
 - Cross over relief valve
 - Negative brake
 - Counter balance valve
 - Swash tilting assembly
3. Reduction gear consists of two speed differential gear represented by the following graphic symbols.

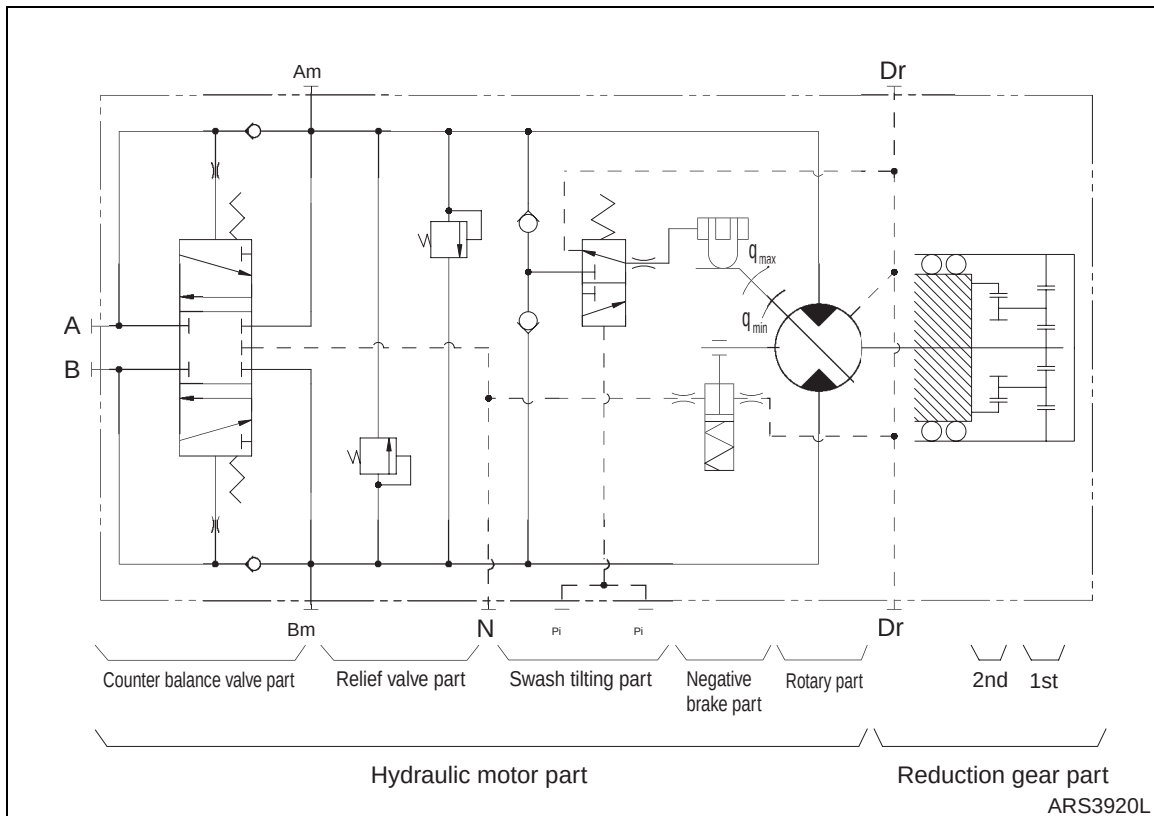


Figure 1

THEORY OF OPERATION

Hydraulic Motor

1. Generation of rotational force.

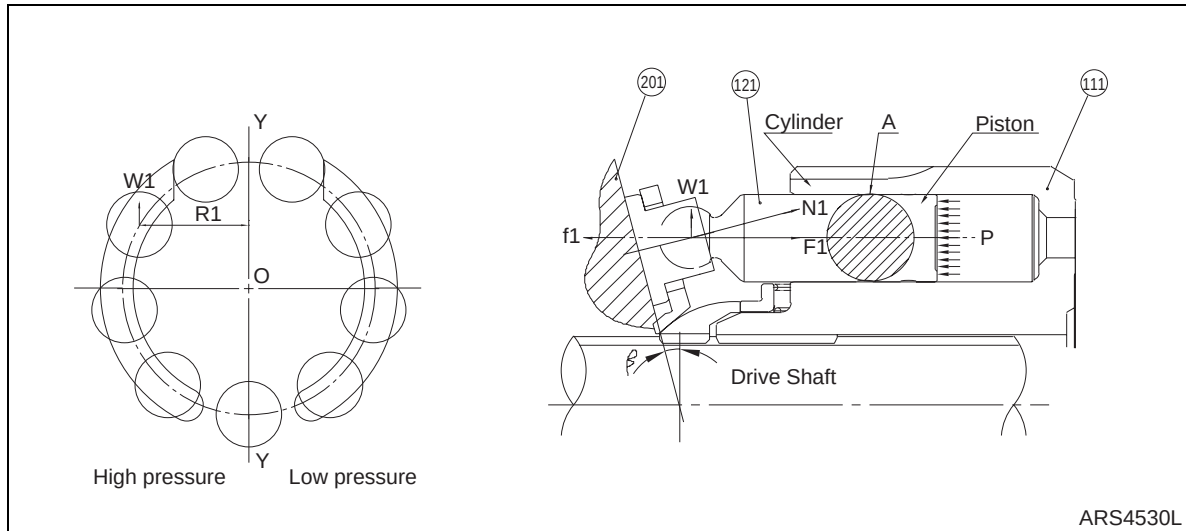


Figure 2

High pressure oil supplied from the hydraulic pump flows through valve casing (303) and valve plate (131) into cylinder block (111). (Refer to Figure 11 for indication numbers).

The internal design allows the high pressure oil to flow to one side of the center line "Y-Y" at the top and the bottom dead center piston (121).

The high pressure oil acts upon pistons and generates force "F1" ($F1 = P \times A$ (P: Supply pressure, A: Pressure area)). The force "F1" generates perpendicular force "N1" and radial force "W1" against swash plate (201), which has a tilting angle of "β." "W1" generates torque "T" ($T = W1 \times R1$) against the line "Y-Y" of bottom and top dead center of piston.

The resultant ($\sum W1 \times R1$) of torques which are generated from pistons (4 - 5 ea.) of high pressure side by high pressure oil generates rotating force. This torque is transmitted to cylinder (111) through piston, and then rotating force is transmitted to drive shaft because cylinder block is combined with drive shaft by spline.

2. Operation of relief valve

Relief valve performs the following two functions.

- A. When the hydraulic motor is operated, the relief valve maintains pressure and passes the surplus oil of motor inlet port to the outlet port in relationship to acceleration of inertial force.
- B. When inertial force has stopped, brake pressure can be generated to outlet port, so that equipment can be forced to stop.

Chamber "A" is connected with port "A" of motor. When pressure of port "A" rises and exceeds pressure setting of spring for poppet "A," poppet "A" is opened and hydraulic oil flows from chamber "A" to port "B."

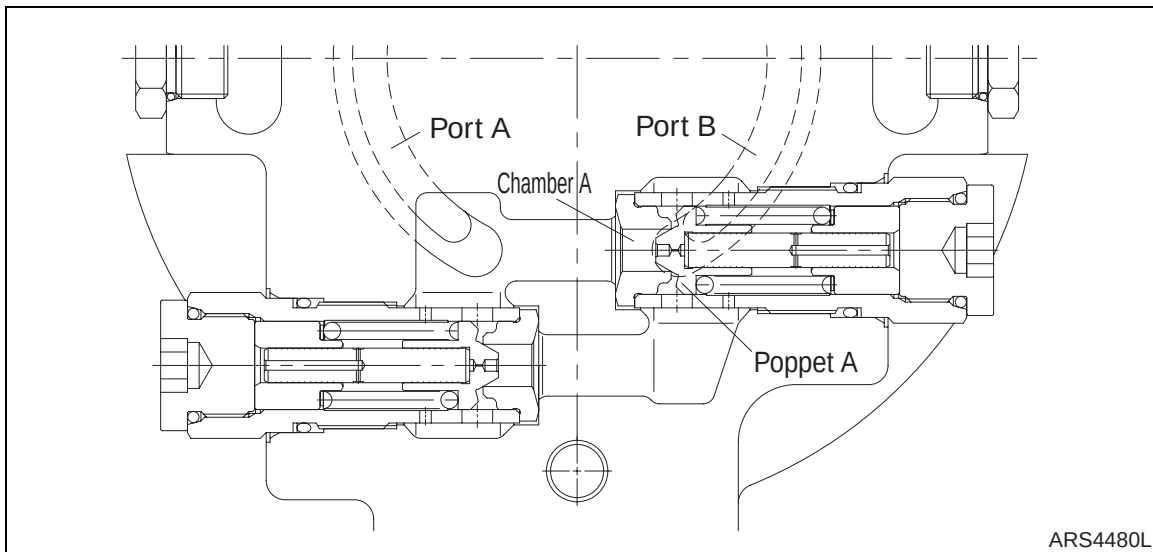


Figure 3

3. Operation of negative brake

Pressurized oil entering through counter balance spool (361) in valve casing, forces brake piston (702) to release the brake. When hydraulic oil pressure, is not present, the brake is spring applied by ten springs (705).

Brake force is generated by frictional force between separator plate (741) (which is fixed by pin (709) pressed into shaft casing) and friction plate (742) (which is connected to shaft casing, brake piston (702) and spline of cylinder block (111)).

Because of this friction force, cylinder block and drive shaft connected by spline are fixed and act as brake.

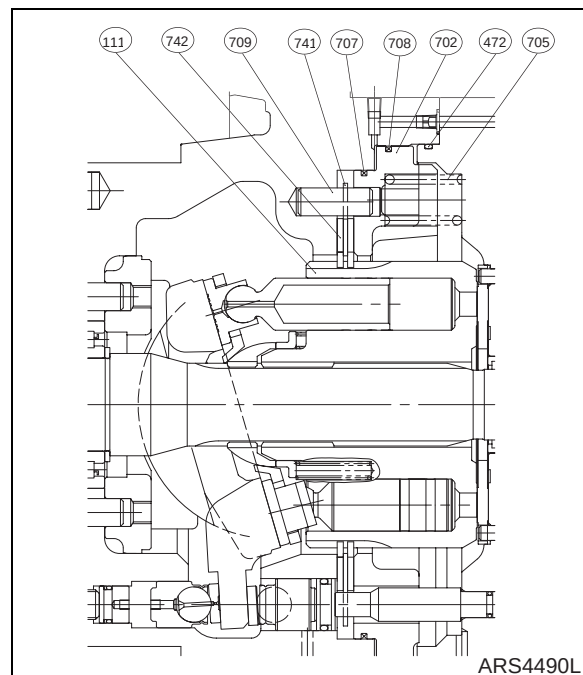


Figure 4

4. Counter balance valve

Av port is connected to the hydraulic pump, and Bv port is connected to the hydraulic oil tank. Oil supplied from pump flows to Av, to Cv and to C', presses and opens poppet of check valve, flows to L and to Am, and is supplied to hydraulic motor. Even though oil tries to turn the motor, it is locked with negative brake. Pressurized oil discharged from pump rises, and it is transmitted through passage G to spring chamber M, and pressure of chamber M exceeds spring force keeping spool to neutral, then spool moves to right.

Oil in chamber N flows through orifice I to chamber Dv, drains from port Bv to tank, and spool moves to left, then oil flows to K, to Dv, and to Bv. Passages of Cv, H and P are constructed, so that pressure of oil discharged from pump Av is transmitted to port P.

Hydraulic oil in chamber N drains through orifice and clearance, so that changing operation of spool happens slowly.

When discharging pressure of pump lowers, spool is moved to the left by spring located in chamber N, so that hydraulic oil flows through orifice I' to chamber Cv and drains to port Av.

When pressure of port Av lowers to pressure of tank, as pressure of chamber M is pressure of tank and so it is the same as pressure of chamber N, spool returns to neutral.

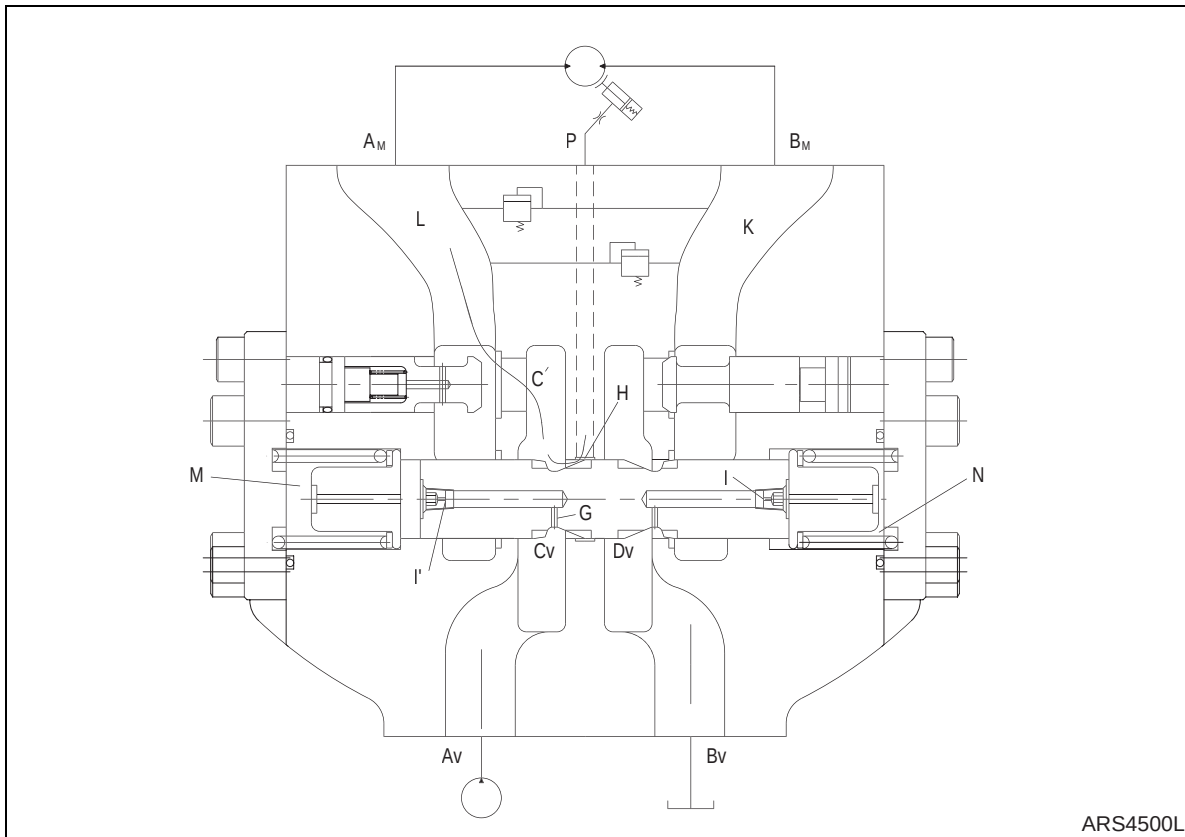


Figure 5

5. Operation of tilting part

Capacity of travelling motor varies with the change of swash plate (201) tilting angle. The tilt angle is controlled by tilting valve.

NOTE: *The smaller the tilt angle is, the faster the motor will rotate, while creating less torque.*

NOTE: *The larger the tilt angle is, the slower the motor will rotate, while creating more torque.*

A. External pilot pressure: $P_i = 0$ (Large tilt angle)

If pilot pressure does not act on tilting valve, the position of swash plate (201) is set at a large tilting angle. Swash plate (201) has a movable round surface to tilt on. High pressure oil flows through port Sa and Sb of tilting valve and passages, and forces swash piston (501) to move until swash piston (502) is stopped by stopper (503), and the position of swash plate (201) is in large tilting.

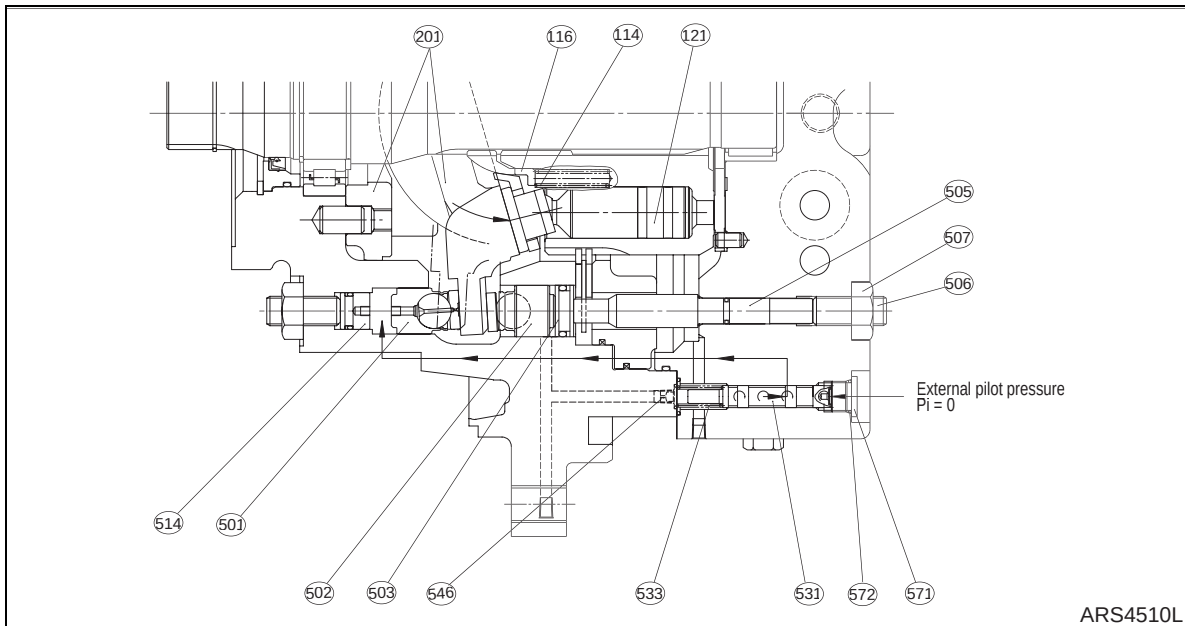


Figure 6

B. External pilot pressure: $P_i \geq 20 \text{ kg/cm}^2$ (284 psi) (Small tilt angle)

If pilot pressure acts on tilting valve, the force acting to spool (531) is greater than the swash spring (533). This forces the swash spool (531) to move to the left. High pressure oil flows through port Sa and Sc of tilting valve and passages, and acts on swash piston (502) until swash piston (501) is stopped by stopper (514). The position of swash plate (201) is now at a small tilt angle.

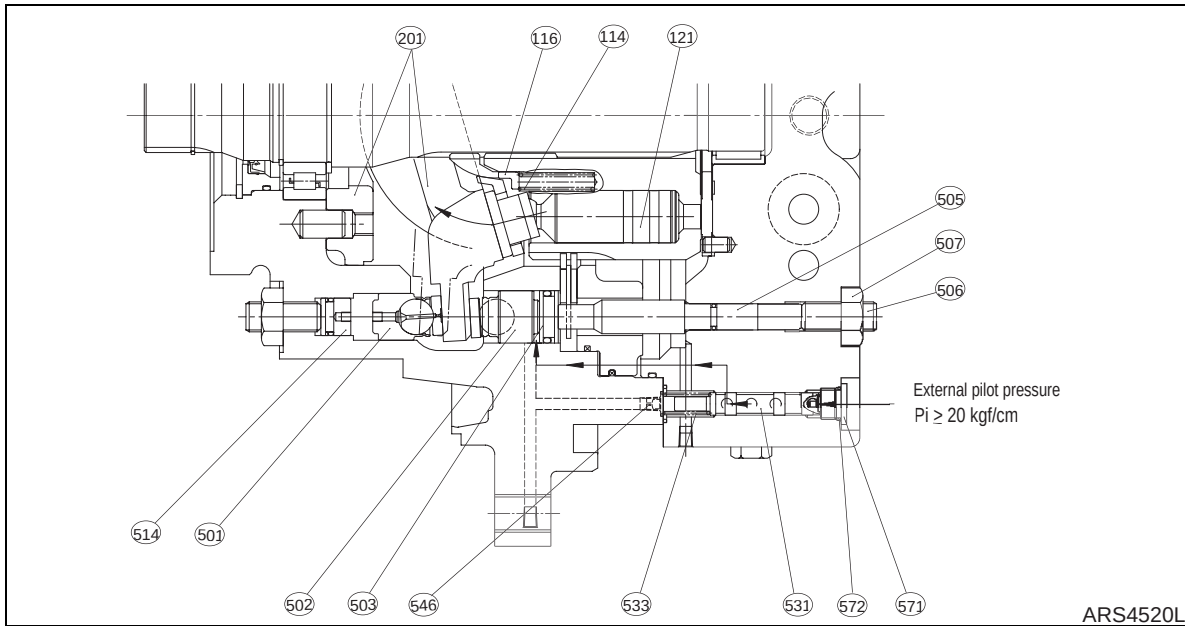


Figure 7

Reduction Gear

1. Operation

Reduction gear consists of a compound planetary gear assembly. The compound gear assembly, changes the high speed / low torque input, from the hydraulic motor, into low speed / high torque output.

2. Theory of operation

- A. When the hydraulic motor input shaft, turns sun gear (S), the planetary gears (P2) rotate and force carrier (C) to revolve in fixed ring gear (R). Carrier (C) then transmits its torque to the output shaft.

- Reduction ratio

$$I_1 = 1 = \frac{R \times P_2}{S \times P_1}$$

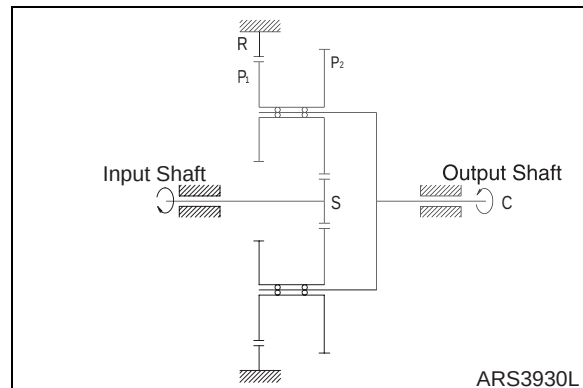


Figure 8 PLANETARY DEVICE

- Planetary gear (P1, P2) revolves by turning of carrier (C). Torque is transmitted by turning gear R1 because gear P1 and P2 are coaxial and the gear ratios between P1 and R2, P1 and P2 are properly different.
- Reduction ratio

$$I_2 = \frac{1}{1 - \frac{R_2 \times P_2}{R_1 \times P_1}}$$

- B. If turning sun gear (S) from input shaft, each gear among S, P1 and R1 starts planetary motion and revolution of gear P1 rotates carrier C1. Rotation of carrier C raises differential motion among gears R1, R2, P1, and P2, and rotates ring gear (R1). This ring gear (R1) rotates housing because it built into the housing.
- Reduction ratio:

$$I = I_1 \times I_2 = \frac{1 + \frac{R_2 \times P_2}{S \times P_1}}{1 - \frac{R_2 \times P_2}{R_1 \times P_1}}$$

NOTE: Rotating direction: Input shaft is opposite direction to output shaft.

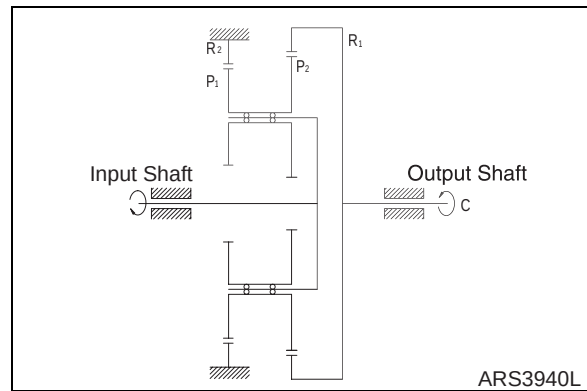


Figure 9 DIFFERENTIAL DEVICE

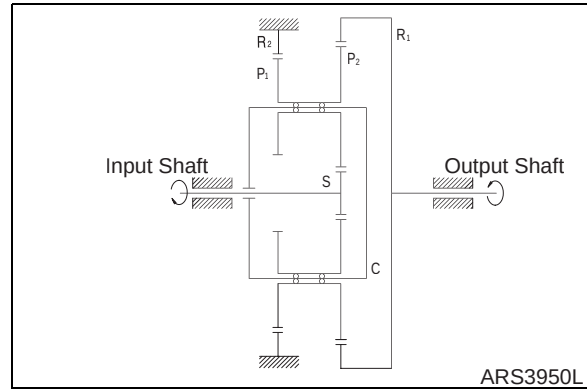
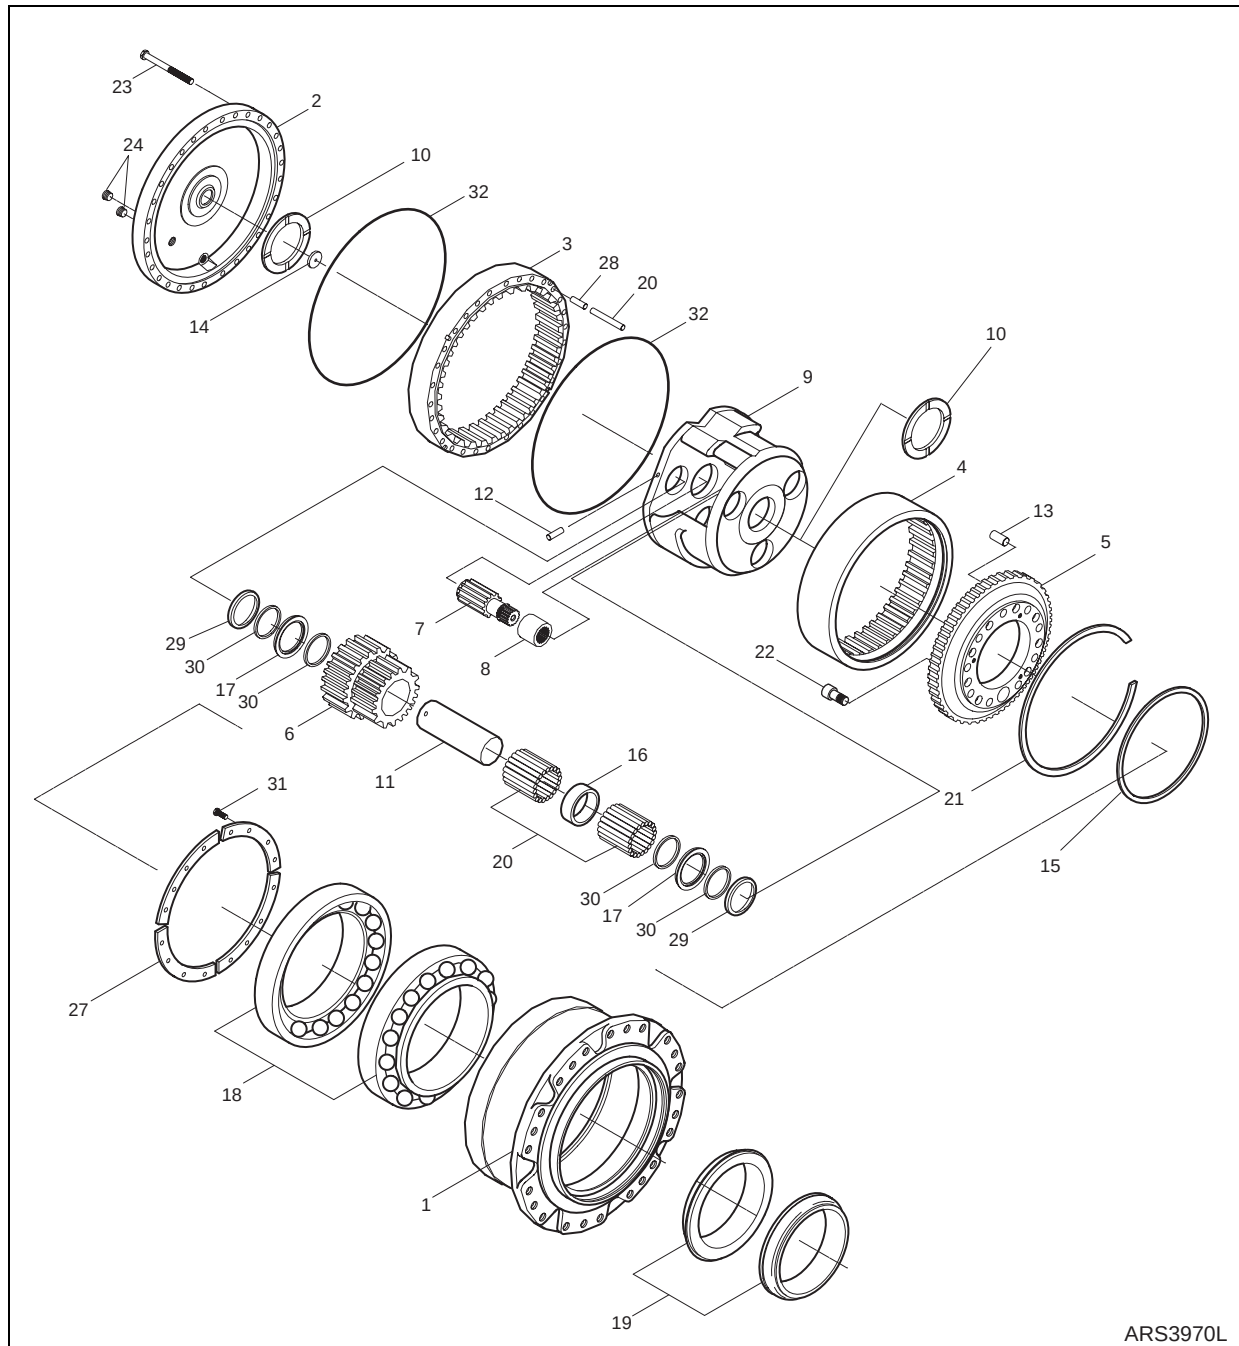


Figure 10 DIFFERENTIAL COMBINED DEVICE

Reference Number	Description
101	Shaft
102	Roller Bearing
103	Needle Bearing
106	Spacer - Bearing
107	Stop Ring
108	Stop Ring
111	Cylinder Block
114	Spring Cylinder
116	Spacer
121	Piston and Shoe Assembly
122	Bush and Push Plate Assembly
131	Valve Plate
201	Swash Assembly
272	Shaft Casing
281	Name Plate
303	Valve Casing
304	Seal Cover
350	Relief Valve Assembly
361	Spool - C.B. Valve
362	Spring - C.B. Valve
363	Orifice Screw
364	Damping Check Assembly
365	Cap - C.B. Valve (Left)
366	Cap - C.B. Valve (Right)
367	Hex. Socket Bolt
368	Hex. Socket Bolt
369	O-ring
381	Plunger- C.B. Valve
382	Stopper - Check
383	Backup Ring
384	Spring - Check
401	Hex. Socket Bolt
402	Hex. Socket Bolt
435	Lock Ring
451	Valve Plate Pin
452	Support Pin
461	Plug

Reference Number	Description
464	HP Plug
471	O-ring
472	O-ring
485	O-ring
491	Oil Seal
501	Swash Piston
502	Swash Piston
503	Stopper (Left)
504	O-ring
505	Swash Rod
506	Lock Screw
507	Hex. Nut
508	O-ring
509	O-ring
512	Backup Ring
513	Backup Ring
514	Stopper (S)
531	Swash Spool
533	Swash Spring
534	O-ring
541	Seat
542	Stopper
543	Ball
545	Orifice Screw
546	Orifice Screw
567	HP Plug
568	O-ring
571	Plug
572	O-ring
702	Brake Piston
705	Brake Spring
707	Piston Ring 252
708	Piston Ring 278
709	Brake Pin
741	Separator Plate
742	Friction Plate

Reduction Gear



ARS3970L

Figure 12

Reference Number	Description
1	Housing
2	Cover
3	Ring Gear No. 1
4	Ring Gear No. 2
5	Coupling Gear
6	Cluster Gear
7	Sun Gear
8	Coupling
9	Carrier
10	Thrust Bearing
11	Shaft
12	Pin
13	Pin
14	Thrust Plate
15	Shim

Reference Number	Description
16	Spacer
17	Thrust Needle Bearing
18	Angular Bearing
19	Floating Seal
20	Needle Roller
21	Snap Ring
22	Hex. Socket Head Bolt
23	Hex. Bolt
24	Plug
27	Stopper
28	Spacer
29	Collar
30	Thrust Washer
31	Hex. Head Bolt
32	O-ring

SPECIFICATIONS

Travel Motor	Specification
Motor displacement	174/105 cc/rev (10.62/6.41 in ³ /rev)
Reduction ratio	66.67
Total displacement	11600/7033 cc/rev (707.81/429.18 in ³ /rev)
Working pressure	330 kg/cm ² (4,700 psi)
Working flow	248 l/min. (65 U.S. gal.)
Output torque	6092/3694 kg•m (44,060/26,720 ft lb)
Speed	21.3/35.2 rpm
Gear oil	4.3 l/min. (1.14 U.S. gal.)
Weight	415 kg (910 lb)

SPECIAL TOOLS AND MATERIALS

SPECIAL TOOLS

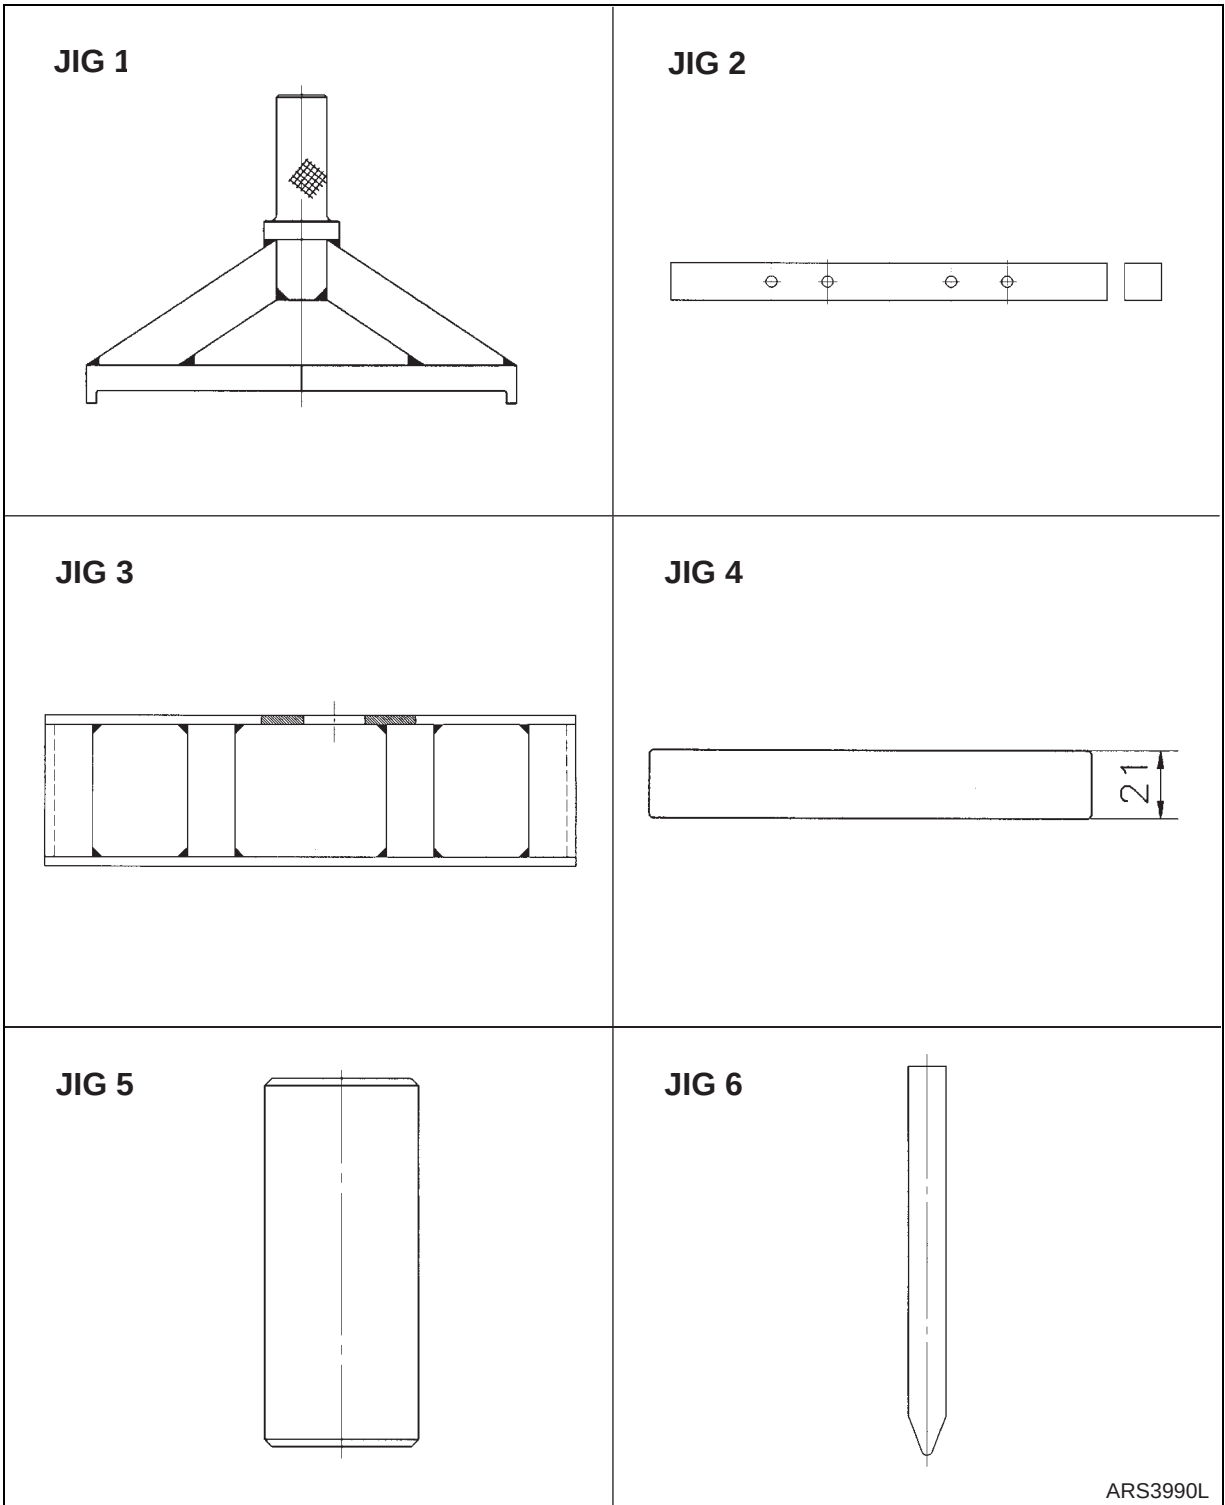


Figure 13

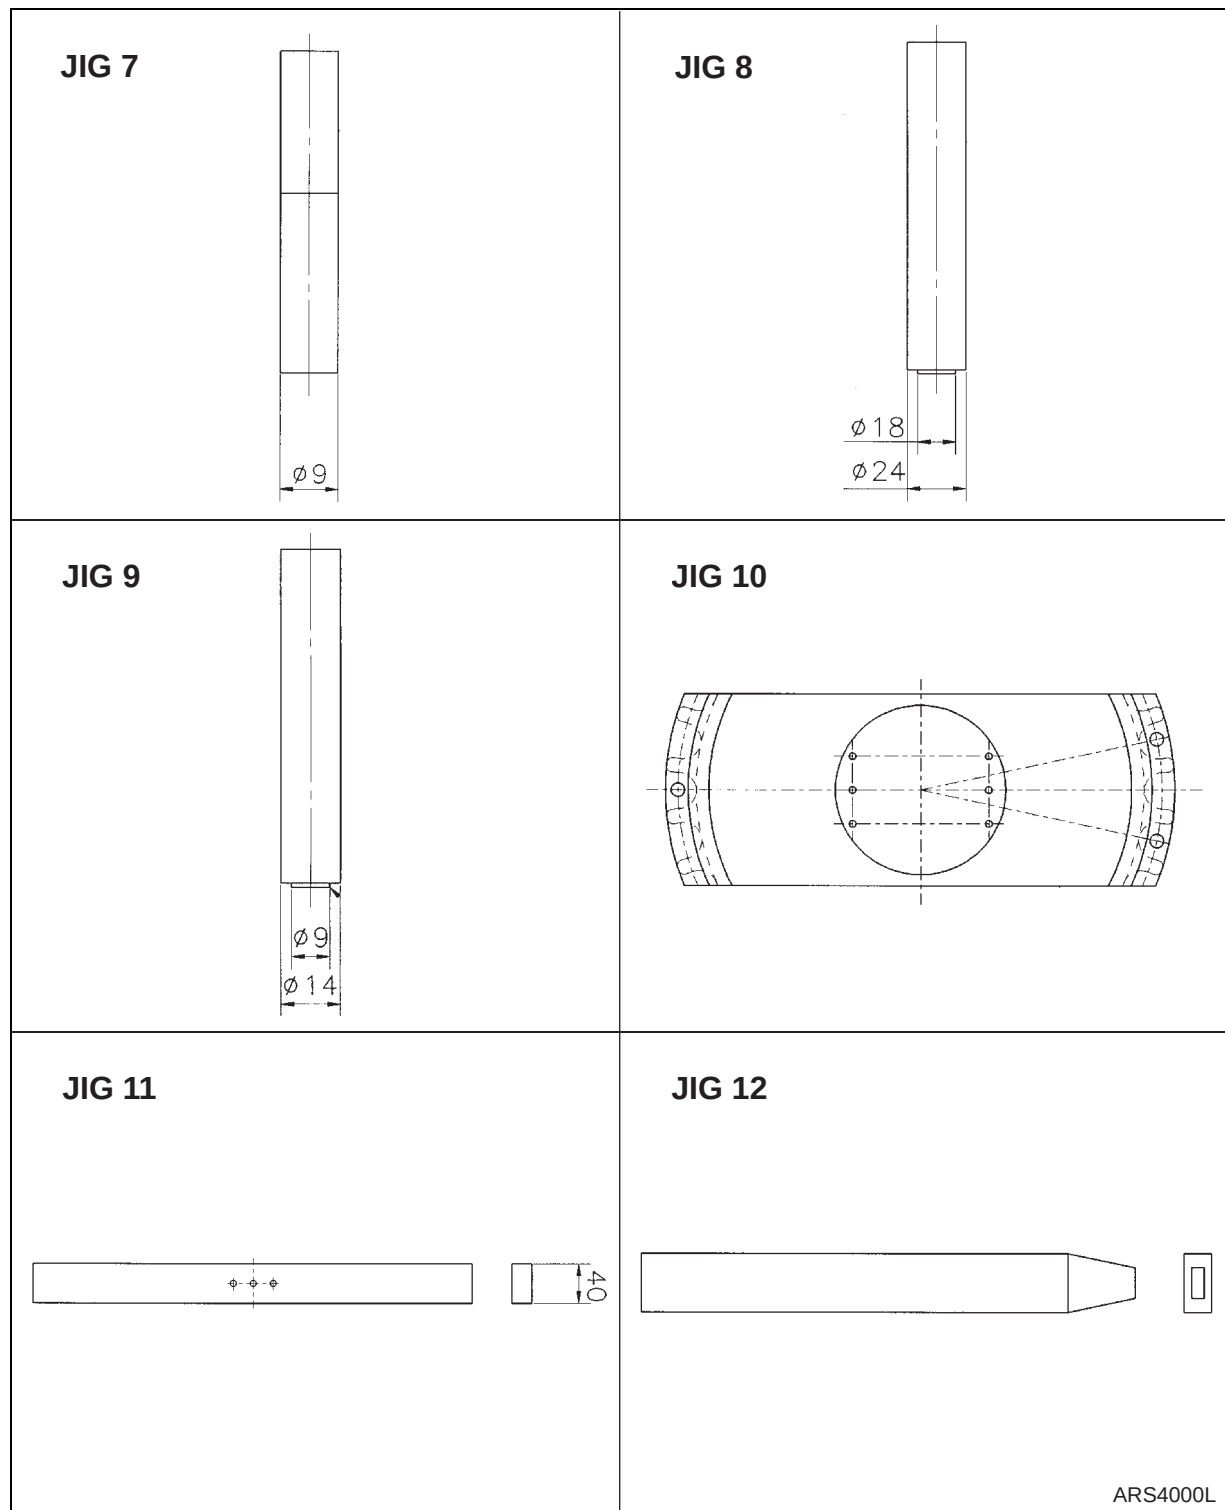


Figure 14

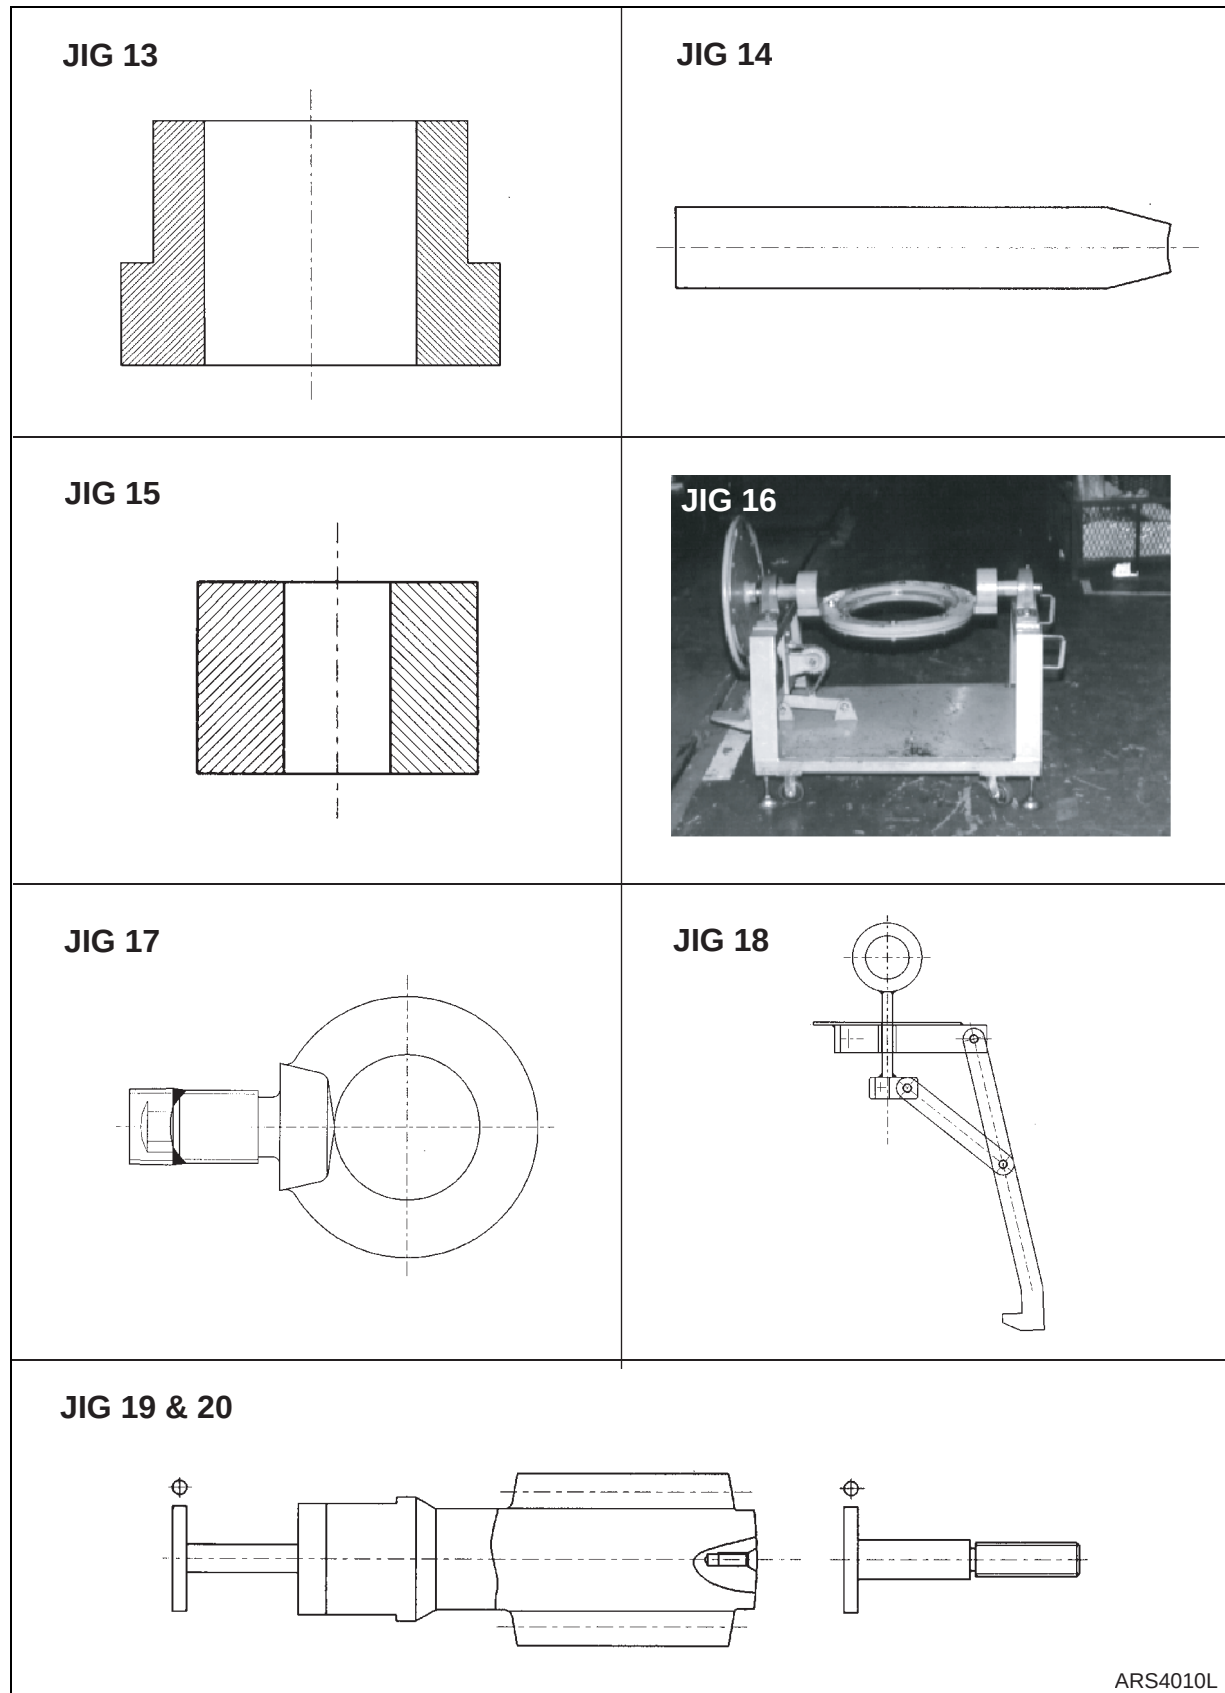


Figure 15

Tools	Applicable Parts
JIG 1	Angular Ball Bearing (18)
JIG 2	Shim (15)
JIG 3	Carrier Sub Assembly
JIG 4	
JIG 5	
JIG 6	Pin (12)
JIG 7	
JIG 8	Pin (13)
JIG 9	Pin (12)
JIG 10	

Tools	Applicable Parts
JIG 11	Thrust Bearing (10), Shim (15)
JIG 12	Cover (2), Ring Gear No.1 (3)
JIG 13	Shim (15)
JIG 14	Floating Seal (19)
JIG 15	Bolt (23)
JIG 16	Travel Device
JIG 17	Cover (2)
JIG 18	Carrier Sub Assembly
JIG 19	Cluster Gear (6)
JIG 20	Carrier (9)

Reduction Gear Part

Section	Name	Standard	Remark
Tool	Hex L-wrench	Nominal dimension; 4mm	Plug (24)
	Hex wrench	Nominal dimension; 17mm	Bolt (22)
	Socket wrench	Nominal dimension; 14mm, 17mm	Bolt (23, 31)
	Torque wrench	Nominal dimension; 2, 000mm, 7, 500mm	
	Impact gun		
	Plastic hammer		
	Copper hammer		
	Eye bolt	M20 M10 x 1.5	2 ea. 3 ea.
	Depth micrometer	Measurement range: 0 - 50 mm Minimum scale: 0.01 mm	
	Punch, vise, pliers		
	Driver		
Sub material	Loctite	Loctite 262 Loctite depend Loctite #587	
	Grease		Disulfuric molybdenum group
	Cleaning oil		
	Gear oil	Refer to Operation Manual	SAE #90 - #140
	Seal tape		

Etc.	Air pressure	6 kg/cm ² (85 psi)	
	Oil bath	Heating temperature: over 120°C	
	Vacuum cleaner		

Hydraulic Motor Part

Tool name	B Dimension	Applying part name
Hex L- wrench	4 mm	Plug (461), Orifice, Screw (545, 546)
	8 mm	Hex Socket Bolt (367), Plug (571)
	10 mm	Hex Socket Bolt (368)
	14 mm	Hex Socket Bolt (401, 402)
Socket wrench spanner	19 mm	Hp Plug (567)
	27 mm	Hp Plug (464)
	36 mm	Relief Valve (350)
Snap ring pliers (For hole or shaft)		Stop Ring (107, 108)
Plastic hammer (Also wood hammer is possible)		
Steel bar (7x7x200)		Needle Bearing (103), Pin (451, 709)
Monkey spanner		
Torque wrench		Nominal Dimension: 500 mm, 3000 mm
Driver		
Jig for assembling of oil seal		Oil Seal (491)
Induction heating device for bearing		Roller Bearing (102)
Bearing puller		Roller Bearing (102)
Jig for disassembling of motor		
Seal tape		

Tightening Torque Chart

Section	No.	Name	Standard	B	Tightening torque kg·cm
Hydraulic motor part	350	Relief valve	M33	36 mm	1,700 - 1, 900
	461	Plug	NPTF 1/16	4 mm	70 - 110
	464	HP Plug	PF 1/2	27 mm	1,100
	571	Plug	PF 3/8	8 mm	750
	567	HP Plug	PF 1/4	19 mm	370
	545, 546	Orifice screw	NPTF 1/16	4 mm	70
	368	Hex socket bolt	M12x30L	10 mm	1,000
	367	Hex socket bolt	M10x30L	8 mm	670
	401	Hex socket bolt	M16x50L	14 mm	2,400
	402	Hex socket bolt	M16x120L	14 mm	2,400
Reduction gear part	22	Hex socket bolt	M20x40L	17 mm	7,300 ±20
	24	Plug	PT1/2	10 mm	580
	26	Plug	NPTF 1/16	4 mm	70 - 110
	31	Hex head bolt	M10x25L	14 mm	690 ± 10
	23	Hex head bolt: Reamer	M12x110L	17 mm	1,520 ± 10

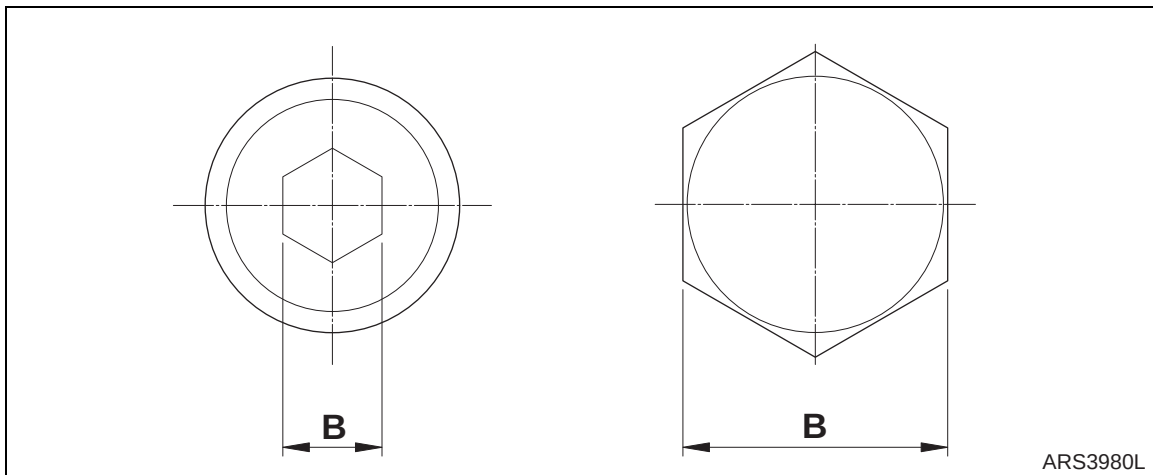


Figure 16

TROUBLESHOOTING, TESTING AND ADJUSTMENT

HYDRAULIC MOTOR

General Caution Matters

1. Before working, carefully judge the abnormal condition and be that there are not other causes besides the motor.
2. As the causes of wear have lots of cases with mixing of foreign materials, when disassembling, be careful not to mix foreign materials.
3. Since internal parts are accurately machined, be careful not to damage them when handling.

Inspection method of abnormality of hydraulic motor

1. Remove drain plug and check hydraulic oil in case.
2. Check of existence of abnormal noise. Check whether abnormal noises occur in motor itself.
3. Measurement of each part pressure.

Before disassembling, measure the circuit pressures to hydraulic motor and check existence of abnormality.

Cause and remedy of trouble

Problem	Possible Cause	Remedy
Travelling device fails to operate.		
Motor pressure does not increase.	Oil is bypassed at relief valve (350).	Replace or repair relief valve.
	Check spring damaged	Replace check spring.
	Counter balance valve spring damaged	Replace counter balance valve spring.
	Passage in valve casing cracked	Replace valve casing.
	Contact surface of check worn abnormally	Replace check.
	Clearance between valve casing and counter balance spool is big.	Replace valve casing or counter balance spool.
	Coupling of reduction gear damaged	Replace coupling after disassembling reduction gear.
Pressure increases but hydraulic motor does not rotate.	Orifice screw (546) plugged	Clean or replace orifice screw.
	Piston ring (707) and (708) damaged	Replace piston ring.
	Friction and separation plate stuck	Replace friction and separation plate.
	Sliding surfaces stuck	Replace sliding surfaces.
	Orifice screw in counter balance spool plugged	Clean or replace orifice screw.
	Gear of reduction gear damaged	Replace gear after disassembling reduction gear.

Problem	Possible Cause	Remedy
Rated swing speed is not reached.		
Swing speed low	Quantity of inflow oil low	Check hydraulic circuit to motor.
	Oil temperature too high	Lower oil temperature.
	Excessively large abnormal oil leaks	Replace or repair abnormal parts.
	Each sliding surface worn or damaged Tilting angle (from large to small) is not switched. - Orifice of small tilting side plugged - Abnormal leak of small tilting chamber (shaft casing, swash piston, too large clearance of stopper 'L')	Replace or repair abnormal parts. - Clean or replace orifice. - Replace abnormal parts.
Rated operating power is not reached.		
Pressure low	Setting pressure of relief valve low	Adjust pressure.
Brake is released but operating power is low.	Each sliding surface worn or damaged abnormally	Replace or repair sliding parts
Brake operation is difficult.		
Brake torque low	Friction and separation plate worn	Replace worn parts.
	Brake spring damaged	Replace brake spring.
Brake does not operate.	Parts in brake stuck	Replace parts.
Tilting angle does not switched.		
Tilting angle does not switched.	Orifice of tilting passage of shaft casing plugged	Clean or replace orifice.
	Tilting angle adjusting spool (531) and case stuck	Replace or repair abnormal parts.
	Abnormal oil leaks from excessive clearance between shaft casing and swash piston (501, 502), stopper (503)	
	Swash piston outer diameter or spherical part stuck	
	High pressure selection valve in valve casing does not operate.	
Oil leaks		
Oil seal (491) leaks	Oil seal or sliding parts of shaft damaged	Remove foreign materials after replacing damaged parts.
	Internal pressure of case high	Check drain line of equipment.
Leaks from assembling surface	O-ring damaged	Replace O-ring.
	Bolt or plug loose	Tighten rated torque.
Major sliding surfaces are stuck.		

Problem	Possible Cause	Remedy
Piston and shoe	Excessive load swing of motor	Check relief valve operation.
Shoe and swash plate	Temperature increasing	Check circuit.
Piston and cylinder	Roughness of sliding surfaces poor	Replace or repair abnormal parts.
Cylinder and valve plate	Hydraulic oil and lubricating poor	Replace hydraulic oil.
Pressure and spherical bush		

TRAVEL REDUCTION GEAR

General Caution Matters

1. Check whether damages occur in transportation.
2. Check whether bolts are loose or rated oil quantities fill.
3. When working, close piping port.
4. Before fitting pipe, fill oil in case of motor part adequately.

Problem	Possible Cause	Remedy
Temperature of reduction gear housing is high. (Over 60°C of ambient temperature)		
Gear oil is insufficient.	Lubricating poor due to insufficient gear oil	Fill gear oil in rated quantity.
Bearing is damaged.	Heat due to bearing damaged	Replace bearing.
Gear is damaged	Heat due to pitting or damaging of gear tooth	Replace gear.
Leakage phenomena occur.		
Assembling surfaces leak	Bolt loose	Tighten rated torque.
	Liquid gasket is not applied.	Tighten rated torque after applying liquid gasket.
Leaks from plug	Plug loose	Tighten rated torque.
	Seal tape is not wound	Apply seal tape.
Leaks from floating seal	Sliding surface damaged or stuck	Replace
	O-ring damaged	Replace
surface of housing	Casting surface cracked	Replace
Abnormal noises occur.; Disassemble reduction gear and replace abnormal parts after inspecting parts.		

DISASSEMBLY

GENERAL CAUTION MATTERS

1. Select clean disassembling place. Place a rubber pad on the work bench to prevent parts from being damaged.
2. Clean dirt and foreign materials from reduction gear and motor.
3. Be careful not to damage the contact surface of O-ring, oil seal, and seal class and the contact or sliding surface of gear, pin, and bearing class.
4. Numbers in () indicate part numbers in reduction gear and motor drawing.
5. Piping side of motor indicates rear side and output side indicates front side.
6. Before applying Loctite, completely remove oil from mating surfaces using Loctite #587 and uniting them.
7. When tightening bolts, apply Loctite #262 to bolt threads and tighten to rated torque using a torque wrench. (Apply when assembling reduction gear only.)
8. Use only a plastic hammer.
9. After cleaning each part, blow dry with moisture free air. But do not clean friction plates with cleaning oil.

REDUCTION GEAR PART

1. Place hydraulic motor side of traveling device on assembling jig (16). Use four bolts (M20x50L) to hold hydraulic motor to assembling jig.
2. Remove bolts (23) and plugs (24).
3. Using jig (12), remove cover (2) from ring gear No. 1 (3) and remove thrust bearing (10).

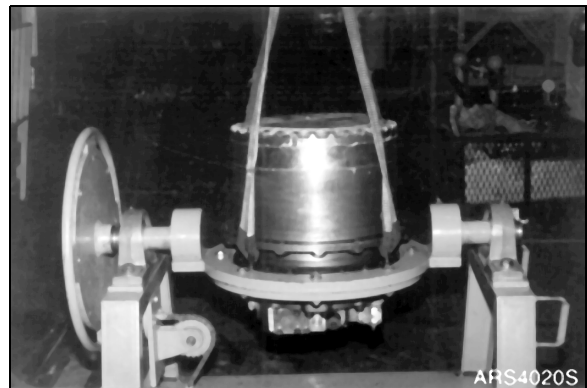


Figure 17



Figure 18

4. Remove carrier subassembly from housing (1) using jig (18) or eye bolt (M10x1.5) and rope, and put and align hole of jig (3) and shaft (11).

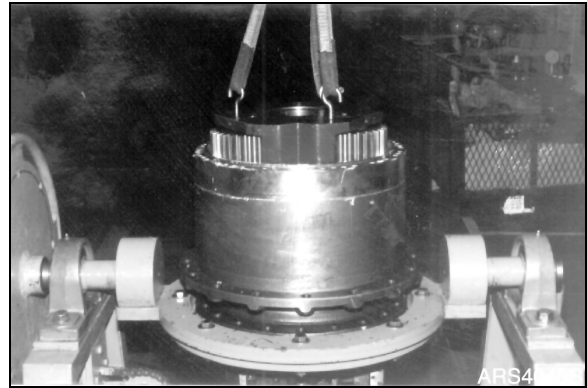


Figure 19

5. Remove calking mark of carrier (9) and pull pin (12) using a pulling tap (M6x1).
6. Tap and drop shaft (11) under jig (3) by using copper hammer.



Figure 20

7. Pull cluster gear (6) and remove thrust washer (30), thrust needle bearing (17), collar (29), needle roller (20) and spacer (16).



Figure 21

8. Remove gear oil in housing (1) by using a vacuum cleaner.

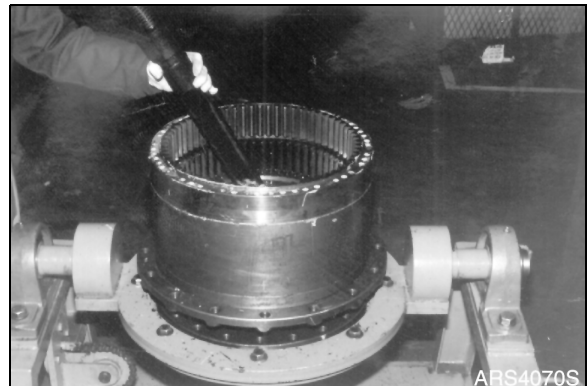


Figure 22

9. Using jig (12), remove ring gear No. 1 (3) from housing (1).
10. Remove socket head bolt (22) by using wrench (size B17).
11. Remove coupling gear subassembly from shaft casing using bolts (3 ea. M10x1.5x70) and pulling tap of coupling gear (5).

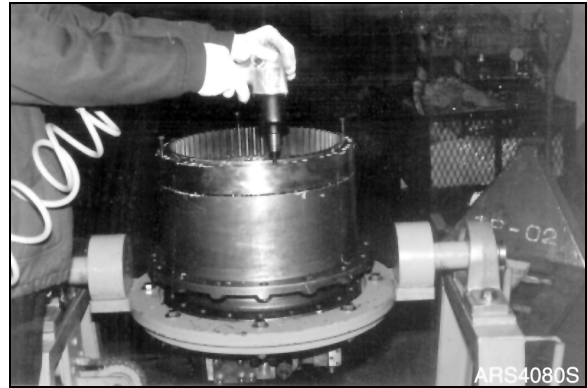


Figure 23

12. Put it with coupling gear subassembly facing ground by using eye bolts (2 ea. M10) and remove spacer (28).



Figure 24

13. Using driver, remove snap ring (21).

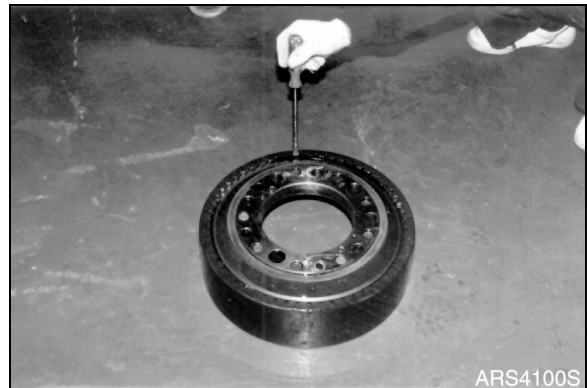


Figure 25

14. Remove coupling gear (5) from ring gear No. 2 (4).

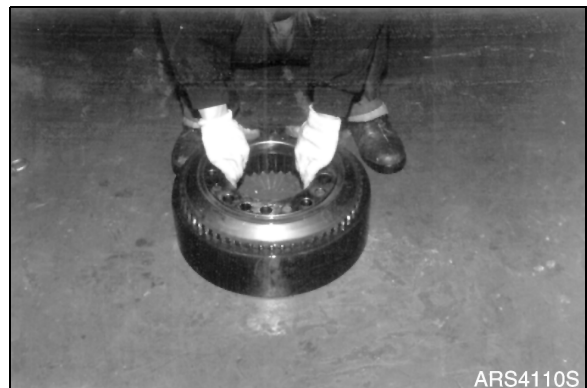


Figure 26

15. Remove housing (1) from shaft casing, using eye bolts (3 ea. M10x1.5), rope and crane and place it with the mating surface of ring gear No. 1 (3) facing ground.



Figure 27

16. Pull out floating seal (19) from housing by using drive and separate O-ring and seal.
17. Pull out floating seal (19) from shaft casing by using drive and separate O-ring and seal.



Figure 28

HYDRAULIC MOTOR PART

Disassembly of Motor

1. Using pliers, remove stop ring (108) from shaft.
2. Remove relief valve (350).

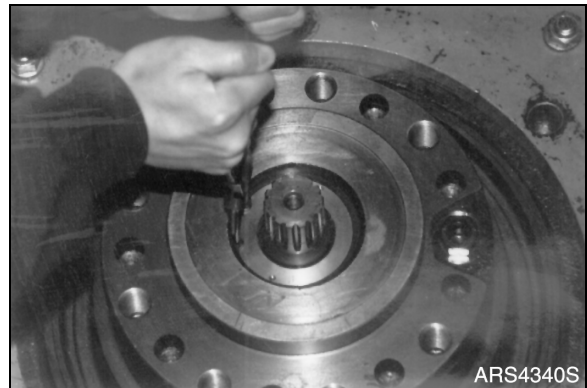


Figure 29

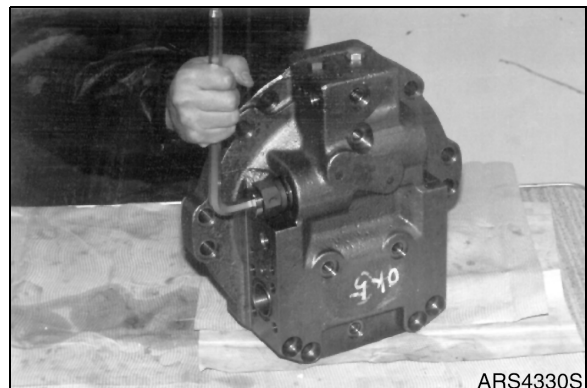


Figure 30

3. Remove hex socket bolts (401, 402) from shaft casing. Remove valve plate (131) from valve casing.
4. Remove O-ring and orifice screw (545) and (546).

NOTE: (546, 2ea $\varnothing 1.5$) (546, 1ea $\varnothing 0.8$)

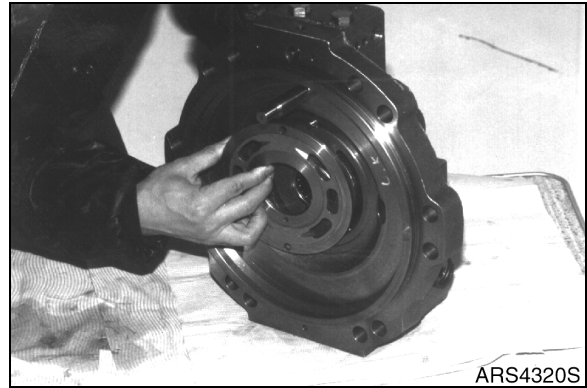


Figure 31

5. Remove brake spring (705).

NOTE: (Spring, 10ea) (Hole, 11ea)

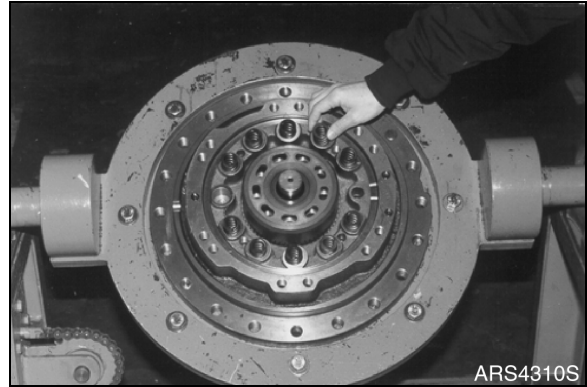


Figure 32

6. Remove brake piston (702) from shaft casing (272).
7. Remove piston ring 708 ($\varnothing 278$) and 707 ($\varnothing 252$) from brake piston (702).
8. Turn disassembling and reassembling jig 90° and set it with shaft direction from horizontal to vertical.

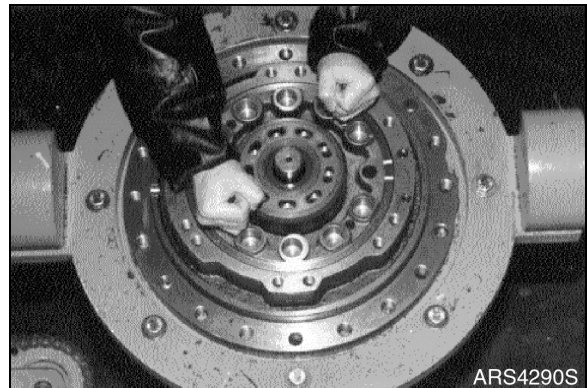


Figure 33

9. Remove cylinder subassembly.
10. Turn disassembling and reassembling jig 90° and so that shaft direction changes from vertical to horizontal position.

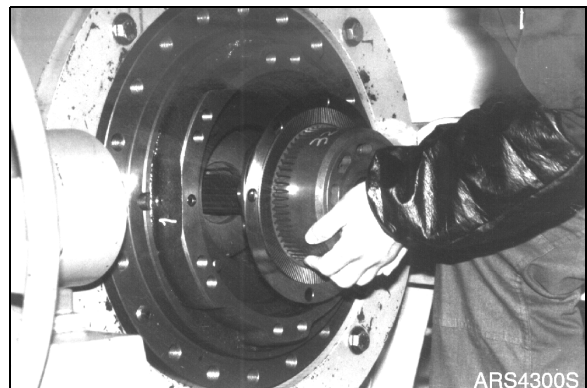


Figure 34

11. Remove swash assembly (201).

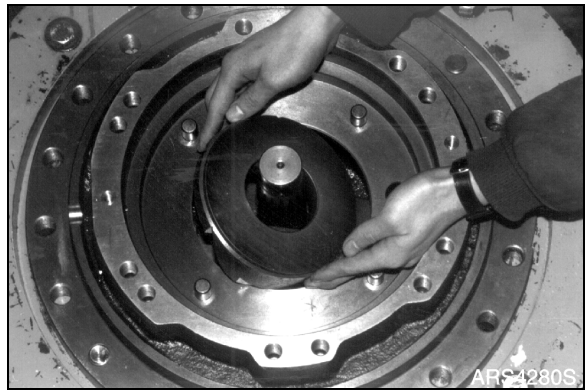


Figure 35

12. Remove stopper (503) and swash piston (502).
13. Remove swash piston (501).
14. Using snap ring pliers remove lock ring (435).

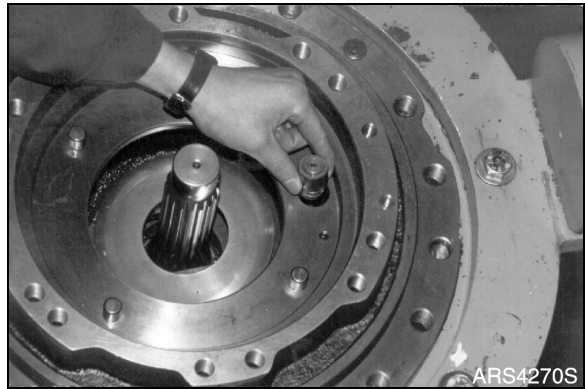


Figure 36

15. Remove drive shaft subassembly.

NOTE: *Lightly tap and remove cylindrical roller and outer race of bearing (102) by using copper bar and plastic hammer.*

16. Remove oil seal (491).
17. Remove fixing pin (709) from separate plate (741).
18. Remove four plugs (461) from shaft casing (272).

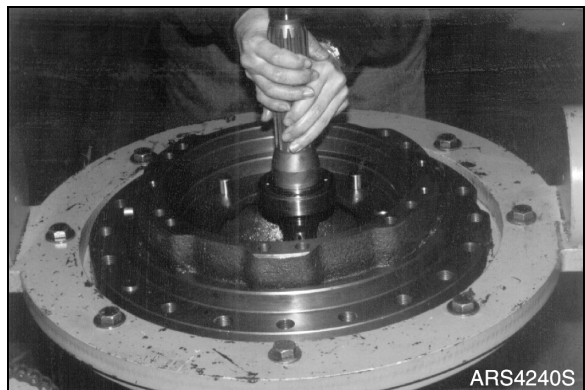


Figure 37

Disassembly of Cylinder Subassembly

1. Remove pressure plate (122) and piston shoe (121) from cylinder.

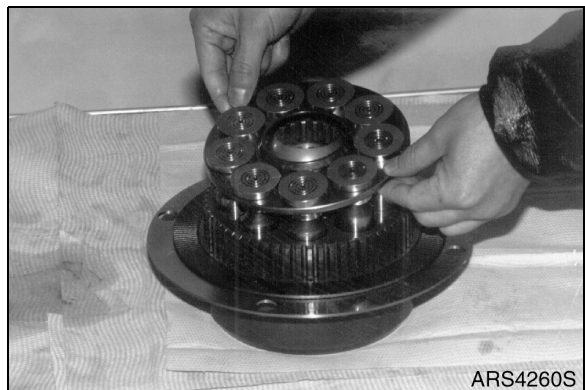


Figure 38

2. Remove friction plate (742) and separate plate (741) from cylinder.



Figure 39

3. Remove cylinder spring (114), spacer (116) and spherical bush (122) from cylinder block (111).

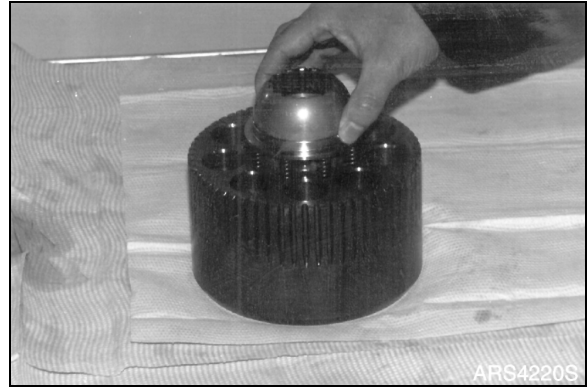


Figure 40

Disassembly of Valve Casing

1. Remove drain HP plug (464) with O-ring (485).
2. Remove O-ring (472) from valve casing.
3. Remove swash spool (531), swash spring (533) and O-ring (509).
4. Remove plug (571) with O-ring (572).
5. Remove hex socket bolt (367, 368) that hold cap R (366) and cap L (365) in position.

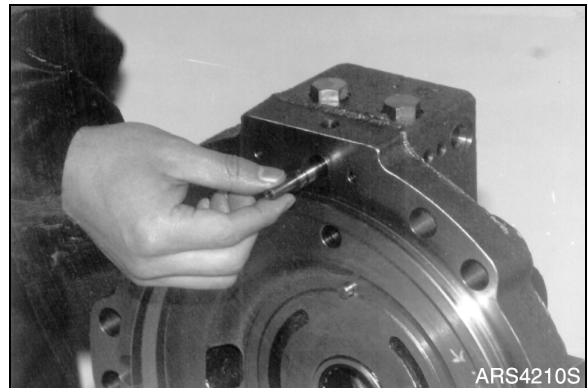


Figure 41

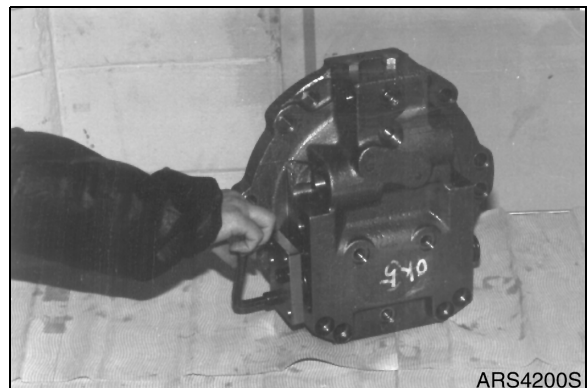


Figure 42

6. Remove spring (384), O-ring (485) and backup ring (383) from stopper (382).
7. Remove plunger (381) from valve casing.

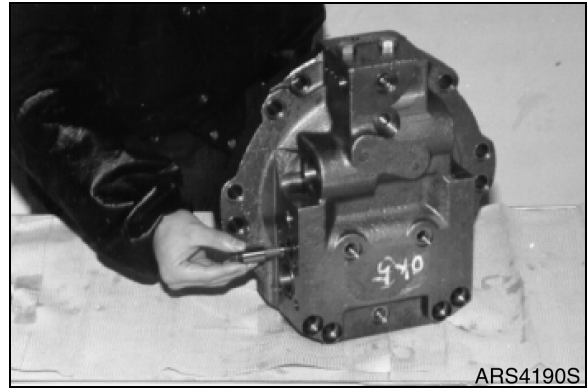


Figure 43

8. Remove CB valve spool (361), damping check assembly (364) and spring (362).
9. Remove left and right orifice screws (363) from CB valve spool (361).
10. Remove HP plug (567) with O-ring (568).

NOTE: 5 places.

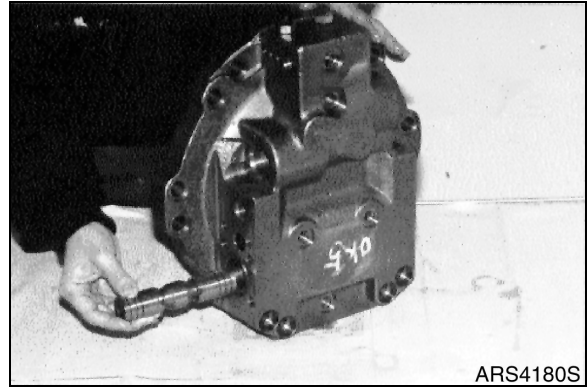


Figure 44

11. Remove seat (541), ball (543), stopper (542) and HP plug (567) with O-ring (568).
12. Remove needle bearing (103).

NOTE: Use plastic hammer and copper bar.

13. Remove pin (451).
14. Remove plug (461) from valve casing (303).

Disassembling of Drive Shaft Subassembly

1. Remove stopper ring (107) by using pliers.
2. Remove cylindrical roller bearing (102) by using bearing puller. Remove bearing spacer (106) from drive shaft (101).

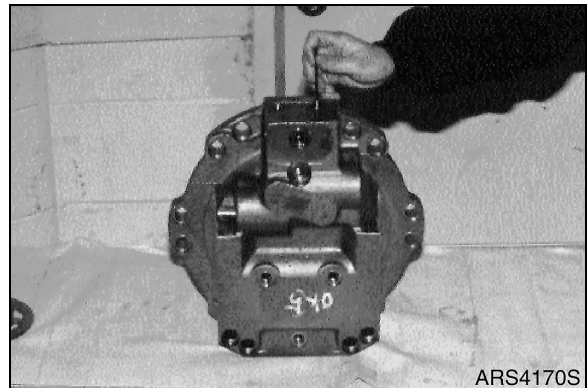


Figure 45

CLEANING AND INSPECTION (WEAR LIMITS AND TOLERANCES)

For general cleaning and inspection procedures, refer to "General Maintenance Procedures" section.

MAINTENANCE STANDARD

Change parts with standard of the following table. If parts have damages of external appearance, change without the following table.

Changing Standard of Hydraulic Motor Part

Parts name and inspection item		Standard dimension	Recommended value of replacement	Remedy
Clearance between piston and cylinder bore		0.035	0.06	Replace
Vertical direction vibration of piston and shoe		0.05	0.3	
Shoe thickness		5.5	5.3	
Height difference between spherical bush and pressure plate		13.5	13	Replace with set
Free length of cylinder spring		47.9	47.3	Replace
Over pin diameter (4.5) of drive shaft	Drive spline	43.91	43.31	Even if one each of recommended value of replacement is not reached, replace.
	Cylinder spline	49.06	48.46	
Over pin diameter (4.5) of spline inside of cylinder and spherical bush		35.25	35.75	Replace
Thickness of separate plate		3.3	3	
Thickness of friction plate		2.3	2.1	
Free length of brake spring		46.6	45.97	
Base tangent length of cylinder outside (7 each)		49.97	49.37	
Over pin diameter (4.5) of inside gear of friction plate		145.77	146.37	
Roughness of sliding surface	Swash plate/shoe	0.8S	3.2S	Lap each
	Cylinder	1.6S	3.2S	Lap
	valve plate	0.8S	3.2S	
	Swash plate/swash plate support	6.3sS	12.5S	Joint lapping
	Pressure plate/spherical bush	1.6S	6.3S	
Roller bearing/needle bearing				If there are flaking on sliding surface, replace.
O-ring/Oil seal				When disassembling, replace as a rule.
Kinds of bolt				If there are crushing parts, replace.
Piston ring				If there are signs of sticking or deforming, replace.

1. Clearance between piston and cylinder bore: $D-d$

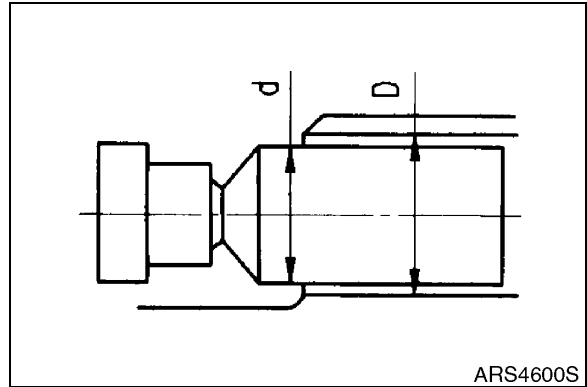


Figure 46

2. Thickness of shoe: t

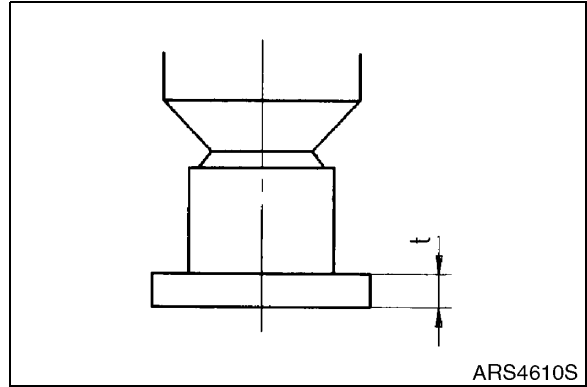


Figure 47

3. Vibration of vertical direction of piston and shoe: δ

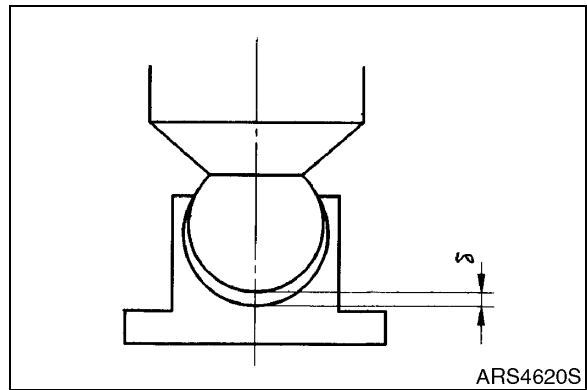


Figure 48

4. Height difference of spherical bush and pressure plate: $H-h$

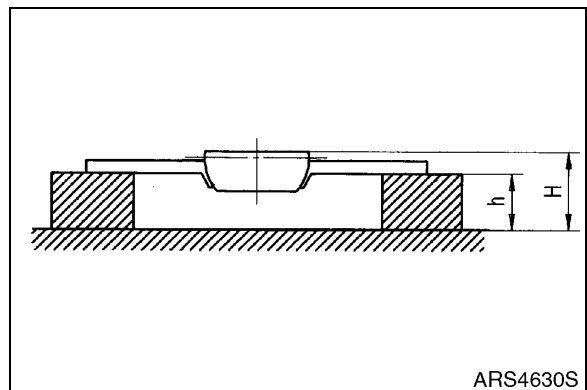


Figure 49

Parts Inspection and Inspection Standard of Reduction Gear

1. This reduction gear has few parts and designing life of each part is about the same. And so a state of single part can be supplied, but when changing there are many parts to change simultaneously for structure and function.
2. Inspection and inspection standard: It is a rule to change damaged parts unconditionally.

Inspection item		Standard	Standard of replacement	Remark
Backlash	Sun gear + Cluster gear	0.160 - 0.320	1.00	
	Cluster gear + Ring gear No.1	0.200 - 0.395	1.00	
	Cluster gear + Ring gear No.2	0.200 - 0.395	1.00	
	Ring gear No.2 + Coupling gear	0.200 - 0.608	1.30	
	Coupling + Sun gear spline	0.1-0.2	0.5	
OPD	Ring gear No.1	386.106 - 368.514		
	Ring gear No.2	337.482 - 337.678		
Base tangent length	Cluster gear No.1	63.259 - 63.344		4 Teeth
	Cluster gear No.2	65.845 - 65.930		4 Teeth
	Sun	27.791 - 27.858		2 Teeth
Each kind of gear	Pitting		Pitting size of one each is over 1 mm. Area rate:10%	
	Crack			
Angular ball bearing		Flaking, pressing marks, and other damages		
Carrier assembly	Clearance between cluster gear and thrust washer	0.3 - 0.7	1.2	
	Smoothing turn and noise of cluster gear			
Floating seal	Seal		Damage of sliding surface	
	O-ring		Damage	
Thrust bearing		5.0	Below 4.7	
		5.5	Below 5.2	
		6.0	Below 5.7	
Gear oil		Refer to Operation Manual	Change after first 250 hours of operation and every 1,000 hours thereafter. - But, change unconditionally when disassembling.	

REASSEMBLY

GENERAL CAUTION MATTERS

1. After cleaning each part, blow dry with moisture free air. DO NOT clean friction plates with cleaning oil or solvent.
2. When fastening each part, use the torque value.
3. Surely use plastic hammer.

MOTOR PART

Reassembling of Drive Shaft Subassembly

1. Install bearing spacer (106) on drive shaft (101). Heat and install roller bearing (102).

NOTE: Use induction heater to heat fit of cylindrical roller bearing and adjust temperature to about 100°C.

NOTE: Be careful not to damage oil seal contacting part of drive shaft.

2. Install stopper ring (107) by using pliers.

NOTE: Be careful of direction of stopper. (Round direction is bearing side.)



Figure 50



Figure 51

Reassembling of Valve Casing Subassembly

1. Tighten five plugs (461) to valve casing (303) to proper torque.

NOTE: After winding seal tape and applying Loctite to plug, install it.

NOTE: Tightening torque: 70 - 110 kg•cm (5 - 8 ft lb).

2. Press pin (451).

NOTE: Height of pin should be 5 mm (0.2 in) from contacting surface of valve plate by using hammer.

3. Install needle bearing (103).

NOTE: Use plastic hammer and copper bar.

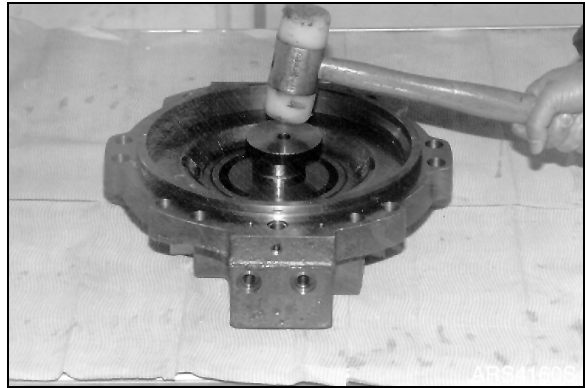


Figure 52

4. Install seat (541), ball (543), stopper (542) and HP plug (567) with O-ring (568) according to the order.

NOTE: Be careful of installing order and direction of seat and stopper.

NOTE: Tightening torque: 370 kg•cm (27 ft lb)

5. Install HP plug (567) with O-ring (568).

NOTE: Five places.

NOTE: Tightening torque: 370 kg•cm (27 ft lb).

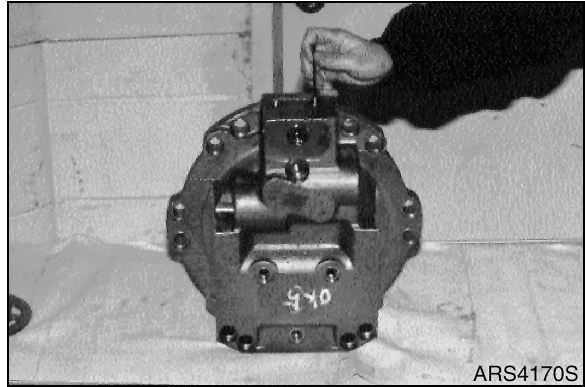


Figure 53

6. Tighten orifice screws (363) of right and left of CB valve spool (361) to proper torque.

NOTE: Tightening torque: 70 kg•cm (5 ft lb).

7. Install CB valve spool (361), damping check assembly (364), and spring (362) to valve casing according to order.

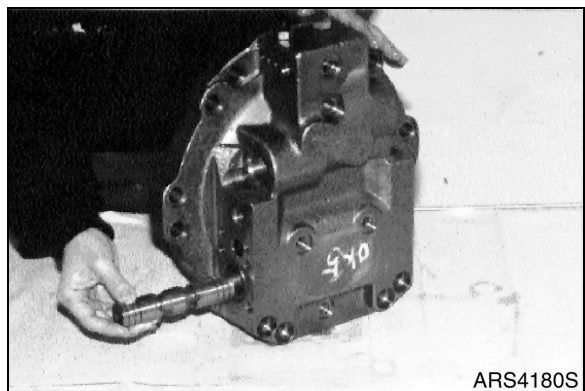


Figure 54

8. Insert plunger (381) to valve casing and install spring (384), O-ring (485), stopper (382) with backup ring (383).

NOTE: Be careful of order of O-ring and backup ring.

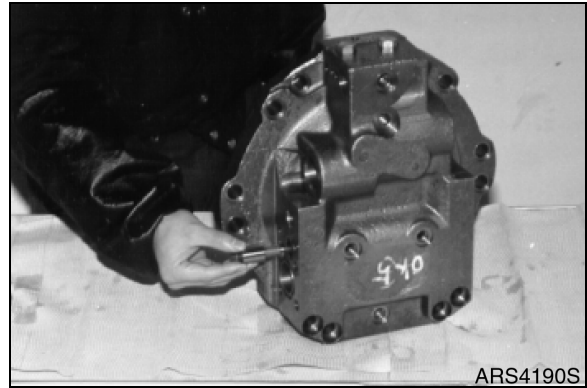


Figure 55

9. Tighten cap R (366) and cap L (365) by means of hex socket bolts (367, 368).

NOTE: When installing, cap R and L should not be changed.

NOTE: Tightening torque:
M12: 1,000 kg•cm (72 ft lb)
M10: 670 kg•cm (48 ft lb)

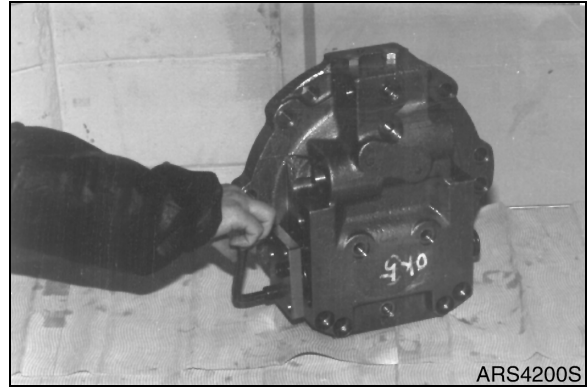


Figure 56

10. After tighten plug (571) with O-ring (572) to proper torque, insert swash spool (531), swash spring (533), and O-ring (509).

NOTE: Tightening torque: 750 kg•cm (54 ft lb).

11. Insert O-ring (472) to valve casing
12. Tighten drain plug (464) with O-ring (485) to proper torque.

NOTE: Tightening torque: 1,100 kg•cm (80 ft lb).

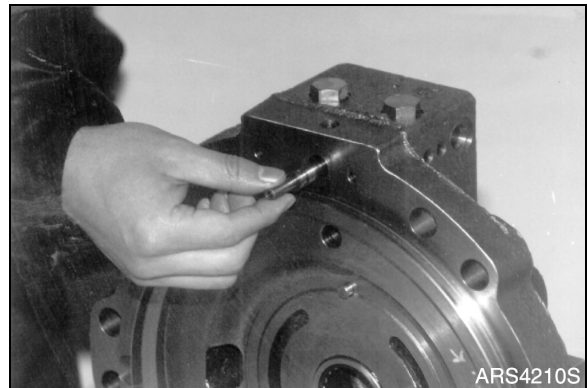


Figure 57

Reassembling of Cylinder Subassembly

1. Install cylinder spring (114), spacer (116), and spherical bush (122) to cylinder (111).

NOTE: Align cylinder and spline of spherical bush.



Figure 58

2. Install friction plate (742) and separate plate (741) on cylinder.



Figure 59

3. After inserting piston shoe (121) on pressure plate (122), install it on cylinder.

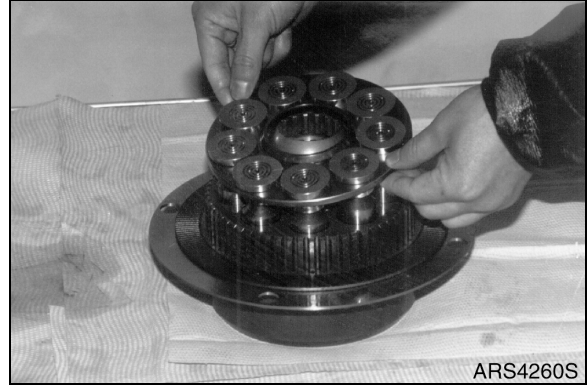


Figure 60

Reassembling of Motor

1. Tighten four plugs (461) to shaft casing (272) to proper torque.

NOTE: After winding seal tape and applying Loctite to plug, install it.

NOTE: Tightening torque: 70 - 110 kg•cm (5 - 8 ft lb).

2. Press pin (709) for securing separate plate (741) using hammer and round bar.

NOTE: Pin (451, 2ea): Set height to 19 mm (0.75 in) from machined surface of shaft casing.

3. Install drive shaft subassembly

NOTE: Slightly tap and install outer race of cylindrical roller bearing (102) by using copper bar and plastic hammer.

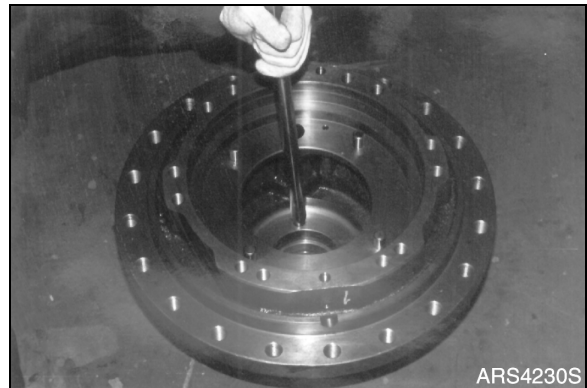


Figure 61

4. Install oil seal (491).

NOTE: *Be careful not to damage lip when using assembling jig.*

5. Install lock ring (435).

NOTE: *Install snap ring (435) with rounded surface facing bearing side.*

6. Install swash piston (501).

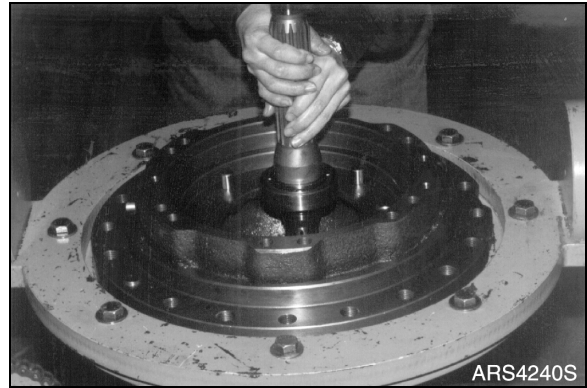


Figure 62

7. Install swash assembly (201).

NOTE: *Apply grease to sliding surface of swash plate.*

NOTE: *Check if swash plate moves smoothly.*

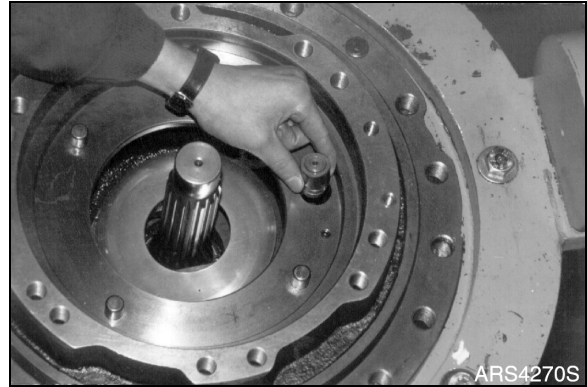


Figure 63

8. Install swash piston (502) and stopper (503).

9. Turn disassembling and reassembling jig 90° so shaft is changed from a horizontal position to a vertical position.

NOTE: *Be careful not to drop swash plate from swash plate support.*

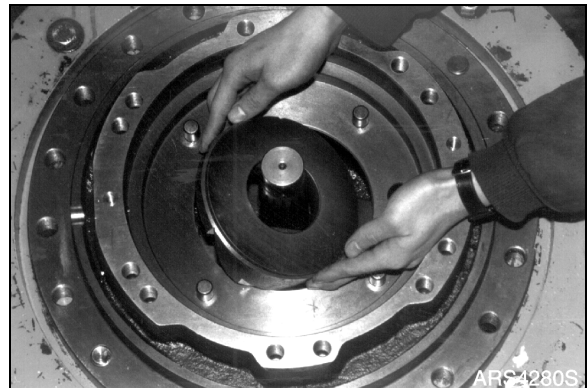


Figure 64

10. Install cylinder subassembly.

NOTE: *Align hole of separate plate to pin and install.*

11. Turn disassembling and reassembling jig 90° so shaft is changed from a vertical position to a horizontal position.

12. Install piston ring (707 (Ø252)) and (708 (Ø278)) to brake piston (702).

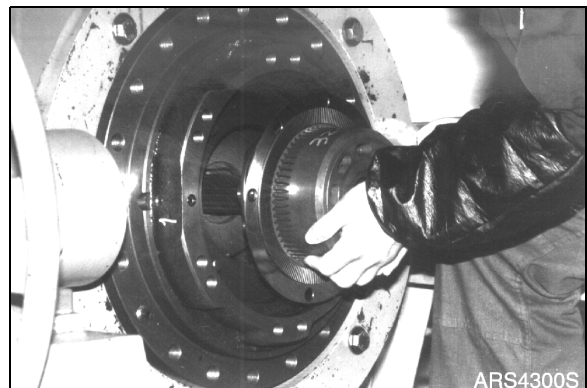


Figure 65

13. Install brake piston (702) on shaft casing (272).

NOTE: *Be careful of installing direction of brake piston.*

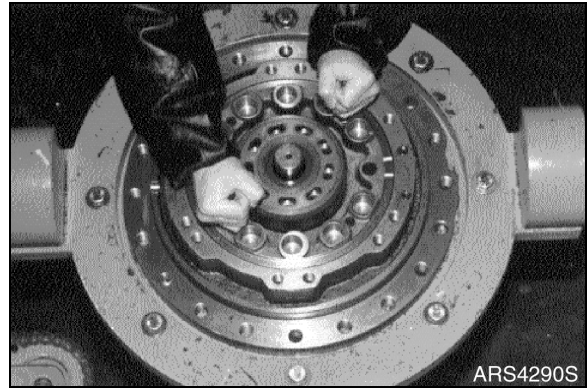


Figure 66

14. Install brake spring (705).

NOTE: *Quantity: Spring (10ea), Hole (11ea).*

NOTE: *Do not install at highest top portion of brake piston.*

15. After tightening orifice screw (545) and (546) to proper torque, insert O-ring (534).

NOTE: *Quantity and size: (546):2ea, Ø1.5 (546):1ea, Ø0.8*

NOTE: *Tightening torque: 70 kg•cm (5 ft lb)*

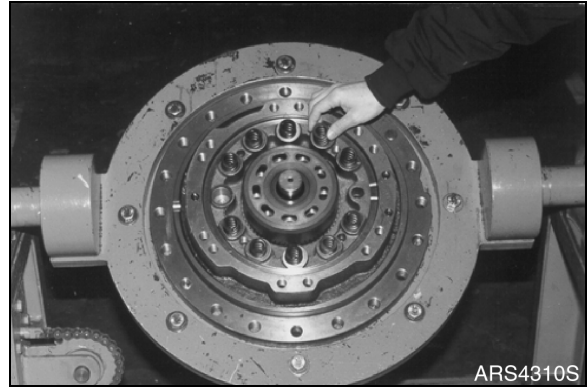


Figure 67

16. After inserting valve plate (131) to valve casing, tighten it to shaft casing by means of hex socket bolts (401) and (402).

NOTE: (1) *Apply grease to back surface of valve plate not to drop valve plate.*

(2) *When installing valve plate to shaft casing, use crane.*

(3) *Install valve plate of which Ø5 hole facing inlet and outlet ports side of valve casing.*

(4) *Apply grease to tilting spool side of tilting spring not to drop tilting spring.*

(5) *Tightening torque: 2,400 kg•cm (174 ft lb).*

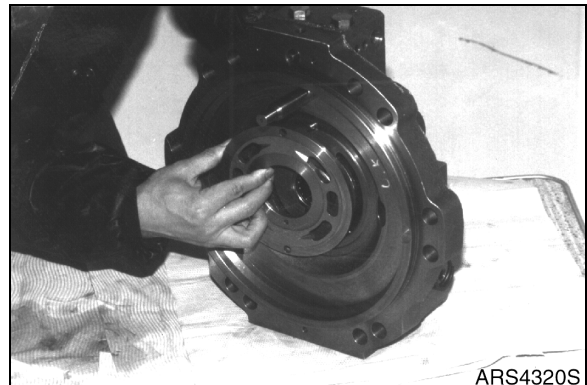


Figure 68

17. Tighten relief valve (350) to proper torque.

NOTE: Tightening torque: $1,800 \pm 100$ kg·cm (130 ± 7 ft lb)

18. Install stop ring (108) to shaft by using pliers.

NOTE: Be careful of direction of stop ring. (Round direction is bearing side.)

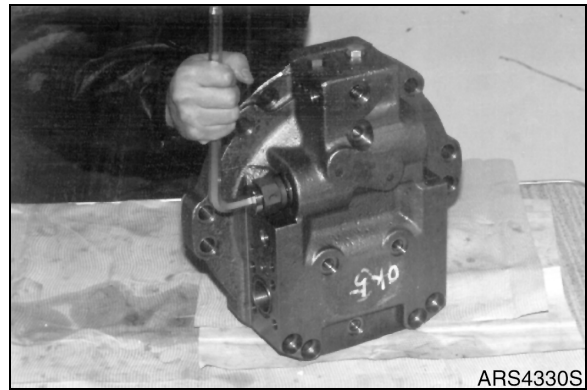


Figure 69

REDUCTION GEAR

Reassembling of Angular Ball Bearing (18) of Housing (1) Part

1. Adjust oil bath temperature to $100 \pm 5^\circ\text{C}$.
2. Fully submerge housing (1) into oil bath by using two eye bolts of M10 and crane. Be careful not to contact bottom of housing (1) to bottom of oil bath.

NOTE: Prevent uneven heat.

3. Take out housing (1) and position on assembling stand. Wipe off oil by using clean rag and insert angular ball bearing (18) in order.

NOTE: Be careful not to change top and bottom direction of bearing.

4. Tap and completely contact end surface of angular ball bearing (18) and housing (1) seat by using jig (1) and hammer like figure (1).

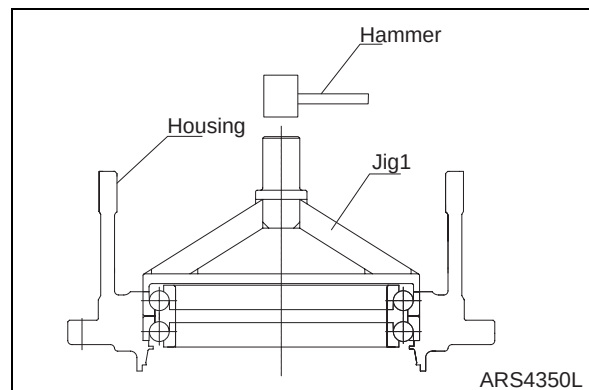


Figure 70

Selection Method of Shim (15) Thickness

1. Position coupling gear (5) on working stand like figure (2) and measure dimension "A" by using jig (2) or jig (11).
2. Calculate "T1."

- $T1 = A - B$

3. Position housing on jig (13) like figure (3) and measure "C" by using jig (2).
4. Calculate "T2."

- $T2 = E + C - D$

5. Position shaft casing (272) like figure (4) and measure "F" by using jig (2) or jig (11).
6. Calculate "T3."

- $T3 = F - D$

7. Calculate "T."

- $T = (T1 + T3 + 0.1) - T2$

8. Select shim (15) thickness "Ts" with value "T" from below table. Method is to decide most approximate value.

Part Number	Ts
2114-1647-D1	1.2
2114-1647-D2	1.4
2114-1647-D3	1.6
2114-1647-D4	1.8
2114-1647-D5	2.0
2114-1647-D6	2.3
2114-1647-D7	2.5
2114-1647-D8	2.8

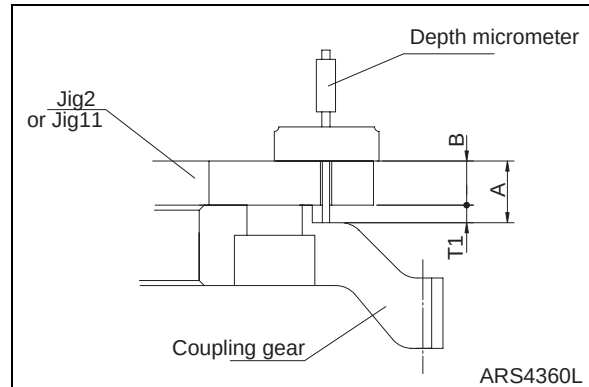


Figure 71

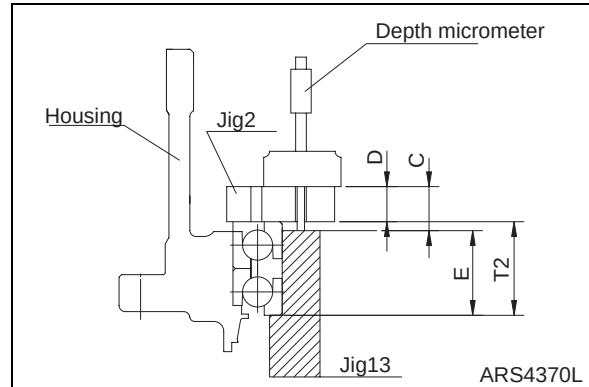


Figure 72

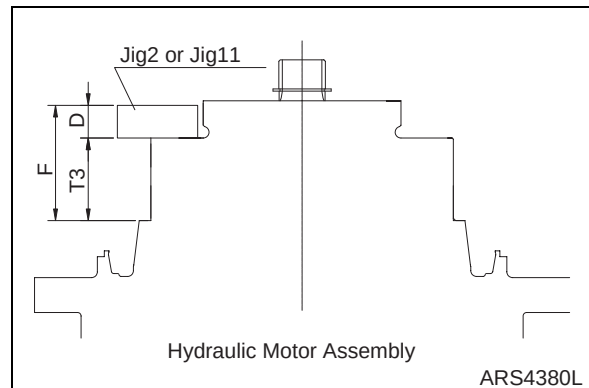


Figure 73

Reassembling of Floating Seal (19)

1. Position shaft casing (25), of which mating part against housing (1) facing upward, on jig (16) by using two eye bolts and crane and fasten with two M20 bolts.
2. Apply grease lightly to O-ring of floating seal (19).
3. Insert floating seal (19) in groove of shaft casing O-ring. Be careful not to damage sealing surface with jig (14).

NOTE: Pay attention to intruding of foreign materials.

Pay attention to damaging of O-ring.

4. Position housing (1), with mating surface of ring gear No.1 (3) facing upward, on working stand like figure (6).
5. Apply grease lightly on O-ring of floating seal (19).
6. Insert floating seal (19) in groove of shaft casing O-ring. Do not damage seal surface when using jig (14).

NOTE: Pay attention to intruding of foreign materials.

Pay attention to damaging of O-ring.

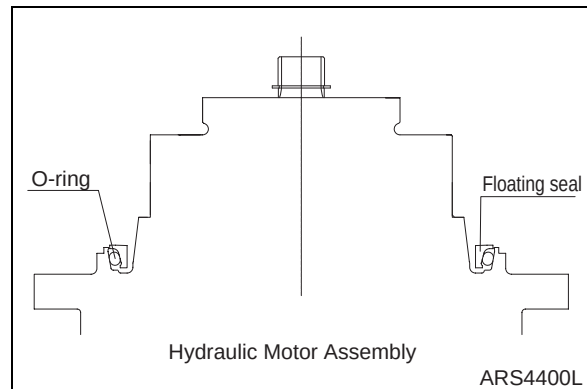


Figure 74

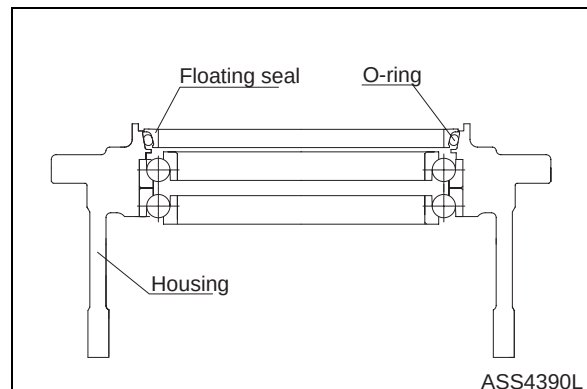


Figure 75

Reassembling of Housing (1) and Shaft Casing (25)

1. After attaching two eye bolts to housing (1), lift by using crane. Make sure inner race of angular ball bearing (18) and shaft casing (25) are aligned. Then slowly insert housing (1). When angular ball bearing (18) can not be properly inserted, tap contacting surface of housing (1) against ring gear No.1 by using copper hammer to help it insert.

NOTE: Do not tap by force.

Reassembling of Stopper (27)

1. Position stopper (27) on outer race of angular ball bearing (18). Apply Loctite #262 threads of bolt (31). Tighten to proper torque. Install remaining three stoppers using same procedure.

NOTE: Tightening torque: $690 \pm 10 \text{ kg} \cdot \text{cm}$ ($50 \pm 1 \text{ ft} \cdot \text{lb}$)

Reassembling of Coupling Gear (5) and Ring Gear No.2 (4)

1. Position ring gear No.2 (4) on working stand as shown in Figure 76.
2. Install coupling gear (5) from upper side.
3. Install snap ring (21) in groove of ring gear No.2 (4). Make sure ring is properly seated.

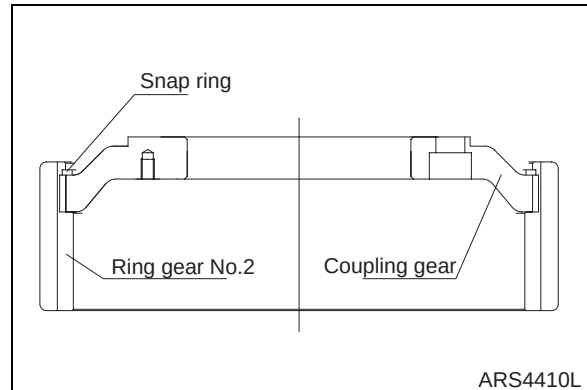


Figure 76

Reassembling of Coupling Gear Subassembly and Housing Subassembly

1. Lift coupling gear subassembly using two eye bolts (M10) and crane. After lightly applying grease to one side of shim (15) of thickness T_s selected clause Selection Method of Shim (15) Thickness, insert to contact this side to coupling gear (5).

NOTE: Be careful not to drop shim from coupling gear (5)

2. After checking lap reaming hole of coupling gear (5) and shaft casing (272), slowly position on shaft casing (272). Temporarily fasten coupling gear subassembly with four bolts (M20). Measure preload of angular ball bearing by using spring balance and tap of M20 bolt of shaft casing. If preload is appropriate, drive pin (13) by using jig (8).

Close two points of end surface of pin (13) hole of coupling gear (5) with 180° space by using punch and prevent pin (13) from dropping.

NOTE: Refer to Figure 77.

3. After lightly applying Loctite #262 to threads of hex socket bolt (22). Tighten proper torque.

NOTE: Tightening torque: 7,300 kg•cm (528 ft lb).

Reassembling of Carrier Subassembly

1. Position carrier (9), with pin (12) hole side facing downward, on jig (3) to crisscross hole of jig (3) and gear assembling hole of carrier (9) about 10 mm (0.39 in).

Place jig (4) near by carrier (9).

[Assembling thrust bearing subassembly] - Position thrust washer (30) outside collar (29) and thrust needle bearing (17) on thrust washer (30) and another thrust washer (30) on thrust needle bearing (17).

Position cluster gear (6) on thrust bearing subassembly to make No.1 spur gear face downward, insert jig (5) on cluster gear (6).

Insert twenty five needle rollers (20) between cluster gear (6) and jig (5).

Insert spacer (16) on them and insert twenty five needle rollers (20).

NOTE: Three cluster gears in carrier subassembly should be same phase. That is, The same English characters along the carved marks of English characters A, B, C, and D should be assembled among themselves.

NOTE: Pay attention to the 25 needle roller bearing.

2. After moving horizontally the whole except jig (4) in cluster subassembly to carrier (9), make jig (5) be inserted to hole of carrier (9).
3. Place on thrust bearing subassembly cluster gear (6).
4. Check alignment of pin (12) hole of shaft (11) and pin (12) hole of carrier (9). After aligning them in a straight line, lightly tap shaft (11) with copper hammer, align jig (5) to hole of jig (3), and pull out under jig (3).

NOTE: Prop jig (5) with rag from bottom not to fall first.

5. Check pin (12) hole of shaft (11) and pin (12) hole of carrier (9) by the naked eye. If holes are crisscrossed, align them using jig (6). Drive pin (12) to 1 mm (0.04 in) below the surface of carrier (9) by using hammer and jig (9).

Using a punch, close end surface of pin (12) hole of carrier (9) with two points 180° apart (Figure 77), to prevent pin (12) from coming out.

6. Install the remaining two cluster gears (6) by repeating the proceeding steps.
7. Turn over carrier subassembly so that cluster No.1 spur gear is facing down.
8. When installation is completed, draw lines on the upper surface of carrier (9) as shown in Figure 78, to make cluster gear phase easier. The three lines should all be parallel.

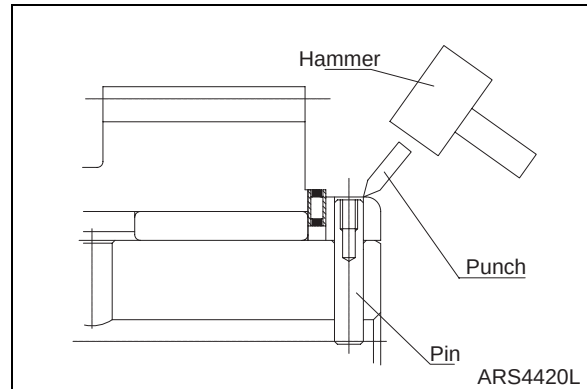


Figure 77

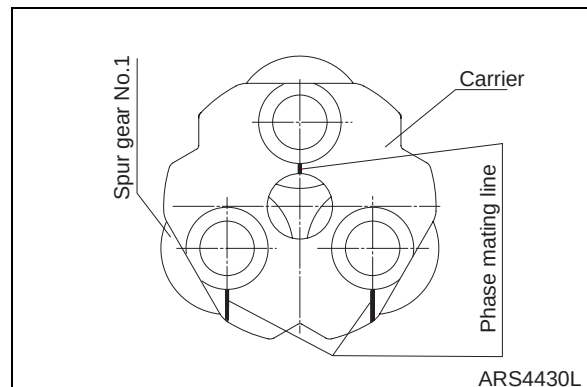


Figure 78

Decision of Cluster Gear (6) Phase

1. Make mark "C" of cluster gear (6) of carrier subassembly face like Figure 79.

NOTE: It is when phase indicated mark is "C."

2. Insert jig (19) to make spline side face upward like shown in Figure 79.

NOTE: Cluster gear (6) phase should not be changed at clause (1).

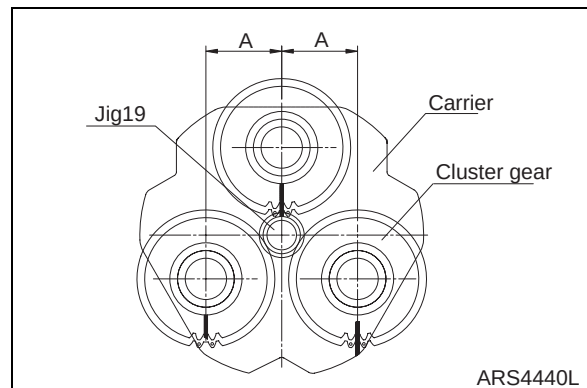


Figure 79

Reassembly of Housing (1) and Ring Gear No.1 (3)

1. Insert thrust bearing (10) $T_{TB} = 5.5$ to shaft casing (25).
2. Lightly apply grease to spline part of coupling (8). Insert coupling (8) on hydraulic motor shaft. Insert sun gear (7) on spline part of coupling (8).
3. Take carrier subassembly down slowly by using M10 eye bolts and crane, making ring gear No.2 (4) align with tooth.

NOTE: *Jig (18) can be used.*

4. Completely clean oil from mating surfaces between ring gear No.2 (4) and housing (1) by using cleaning oil and evenly apply Loctite #587.
5. Install O-ring (32) on ring gear No.1 (3) and insert needle roller (20) in housing (1). Lift ring gear No.1 (3) using two M10 eye bolts and crane. Check simultaneous machining lot No. of housing (1) and side surface of ring gear No.1 (3) and set down into position, aligning tooth of cluster No.1 spur gear and ring gear No.1.

Insert jig (15) to M10x1.5 four bolts (23) and temporarily fasten.

6. Turn the whole reduction gear by hand by using jig (20) for inspection. If gears bind and do not turn, take out carrier subassembly, recheck phase, and then recheck meshing of gears after reassembling.

NOTE: *Make the carrier turn one full revolution.*

Even though gear turns, if there are noises or turning is irregular, there is most likely an interference between bottom surface of carrier (9) and top surface of coupling gear (5), take out carrier subassembly and reassemble after inspection.

Selection of Thrust Bearing (10) Thickness

1. Measure (G) (H), and (I) of Figure 80, using a depth gauge and jig (11). Measure at four points and (I) is calculated using the largest value.

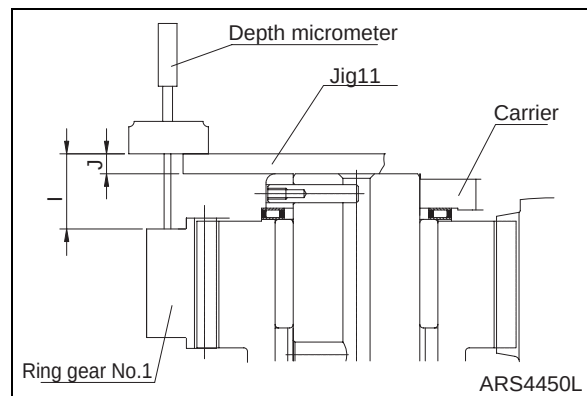


Figure 80

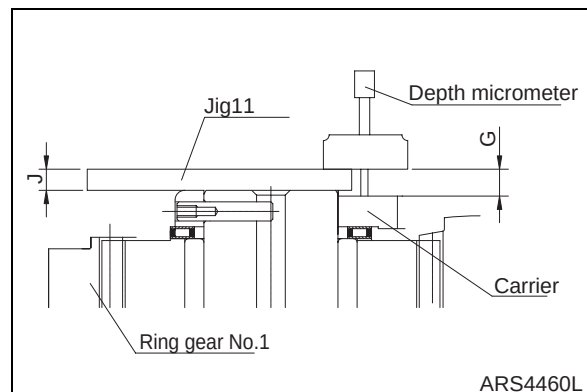


Figure 81

NOTE: If the difference of (I) among four points is over 0.3, reassembly of carrier subassembly is wrong or there is interference of bottom surface of carrier. Take out carrier subassembly and check whether there is interference.

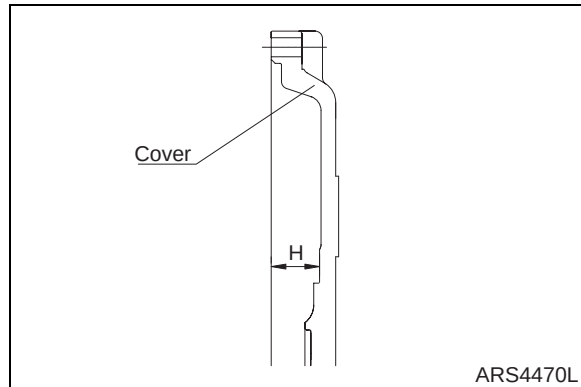


Figure 82

2. Calculate (T4).

- $T4 = I - G$

3. Calculate (T5).

- $T5 = H - T4 - (0.3 \sim 0.7)$

4. Select thickness (T_{TB}), which belong to T5, of thrust bearing from below table.

Part No.	T_{TB}
2114-1043D1	5.0
2114-1043D2	5.5
2114-1043D3	6.0
2114-1043D4	4.5

5. In case that T5 is over 6 and below 4.5, change $T_{TB} = 5.5$ of clause (1 of Reassembly of Housing (1) and Ring Gear No.1 (3)) to another and select with same method (But, do not use $T_{TB}=4.5$).
6. After lightly applying grease to surface of bearing (10) selected from clause (4) and oil groove facing carrier subassembly, press fit to cover (2) by using copper hammer. Press fit thrust plate (14) to be stuck to cover (2) by using hammer.
7. Fill gear oil with specific quantity.

NOTE: Specific quantity: 4.3 liters

8. Loosen M10x1.5 bolts (23) temporarily fastened at Reassembly of Housing (1) and Ring Gear No.1 (3). Insert spacer (28) to ring gear No.1 (3). After completely clean oil from mating surface of ring gear No.1 (3) and cover (2) by using cleaning oil, evenly apply Loctite 587. After Tightening jig (17) to level tap hole of cover (2) and lifting it, position it to ring gear No.1 (3). Tighten thirty hex head bolts (23, M10) with specific torque by using torque wrench.

NOTE: Specific torque: 1, 520±10 kg•cm (110 ±1 ft lb)

9. Wrap seal tape on thread of plug (24) and install it in cover (2).

NOTE: Specific torque: 660 kg•cm (48 ft lb).

10. Coat with specific paint except guide surface of hydraulic motor, tread portion of bolts and contact part of sprocket.

INSTALLATION

CHECK

Check the following items before installation and correct any defects.

Checking Items	Managing Matters
Is there any damage from transporting?	Report to Q/C Department.
Are there any loose bolts?	Tighten rated torque. (Refer to "Tightening Torque Chart" on page -22)
Is gear oil filled with proper quantity? After leveling motor indicated in outside dimension drawing (2401-6198) (Set level mark horizontally.), it is normal if oil flows out.	Refer to "Oil Filling" on page -52

FITTING

- Fitting part of motor machines as $\varnothing 380m6^{+0.057}_{+0.021}$, and so fitting part of equipment machines as $\varnothing 380F7^{+0.119}_{+0.062}$.
- Do not use an impact wrench on motor when installing bolts.

PIPING

- Turning direction is indicated in outside dimension drawing. Be careful of piping direction.

- Turning direction

Inlet	Outlet	Direction Seeing From Valve Casing
A	B	Counterclockwise
B	A	Clockwise

- Cover piping port with plug when transporting, and be careful not to insert welding and cutting scales, etc. in it.
- Two drain pipes are covered with plug. Use an upper pipe between two pipes. Fill fully hydraulic oil in motor casing before piping. Pipe to lower drain pressure under 2 kg/cm² (28 psi).
- If sand or metal powder are mixed in hydraulic oil, sliding surfaces will wear excessively and cause the motor to malfunction. Use a 10µm filter in the circuit.

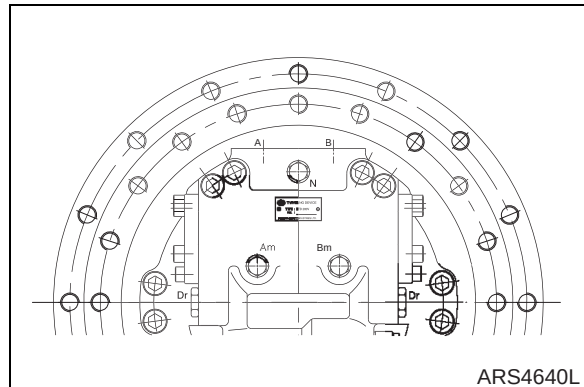


Figure 83

GEAR OIL

Kinds of Oil

Use GL-4 GRADE of service grouping API of SAE #90 equivalent. Do not mix oil of other types.

Oil Drain

Turn motor to position oil drain port to low side, then drain oil. (If level plug is loosened, the oil will drain faster.)

Oil Filling

Set LEVEL mark on cover horizontally, then fill 4.3 liters of oil.

GENERAL CAUTION MATTERS

1. Check whether there are loose bolts or oil leaks.
2. Be careful of casing temperature during operation. There is no problem if atmospheric temperatures are about below +60°C (90°F).



MAIN PUMP (KAWASAKI)



CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that is in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

MODEL	SERIAL NUMBER RANGE
Solar 300LC-V	1001 and Up

TABLE OF CONTENTS

Swash Plate Type K5V Series Axial Piston Pump.....	4
Type Designation.....	4
Specifications	5
Construction and Function	6
Construction.....	6
Function	6
Cautions for Operation	8
Installation.....	8
Cautions for Piping.....	8
Cautions for Filters	9
Working Oil and Temperature Range.....	10
Operational Cautions	10
Oil filling and Air Venting	11
Cautions During Starting Operation.....	11
Troubleshooting	11
General Cautions	11
Check Pump Proper for Abnormalities.....	11
Overload of Prime Mover	12
Extreme Decrease of Pump Delivery Flow and Non-increase of Delivery Pressure	12
Abnormal Noises and Abnormal Vibrations	13
Construction of Tandem Type Duplex Pump	14
Tools.....	16
Axial Piston Pump Disassembling.....	18
Axial Piston Pump Reassembling	22
Axial Pump Maintenance Criteria.....	25
Worn Part Replacement Criteria.....	25
Correction Criteria for Cylinder, Valve Plate and Swash Plate (Shoe Plate)	25
Tightening Torques.....	26

Regulator for K5V, K3V Series of Kawasaki	
Swash Plate Type Axial Piston Pump.....	27
Type Description.....	27
Construction of Regulator	28
Outline.....	30
Horsepower Control	30
Flow Control.....	31
Specifications	31
Functional Explanations.....	32
Regulator Function Diagram	32
Negative Flow Control.....	33
Total Horsepower Control.....	34
Variable Horsepower Control	36
Adjustment of Maximum and Minimum Flows.....	37
Adjustment of Maximum Flow.....	37
Adjustment of Minimum Flow	37
Summary of Regulator Adjustment Values	38
Fault Finding and Remedies on Regulator.....	38
Prime Mover is Overloaded	38
Maximum Flow Is Not Available	39
Preparation for Disassembly	40
Tools.....	40
Regulator Disassembly	41
Regulator Reassembly.....	44
Tightening Torque	47

SWASH PLATE TYPE K5V SERIES AXIAL PISTON PUMP

TYPE DESIGNATION

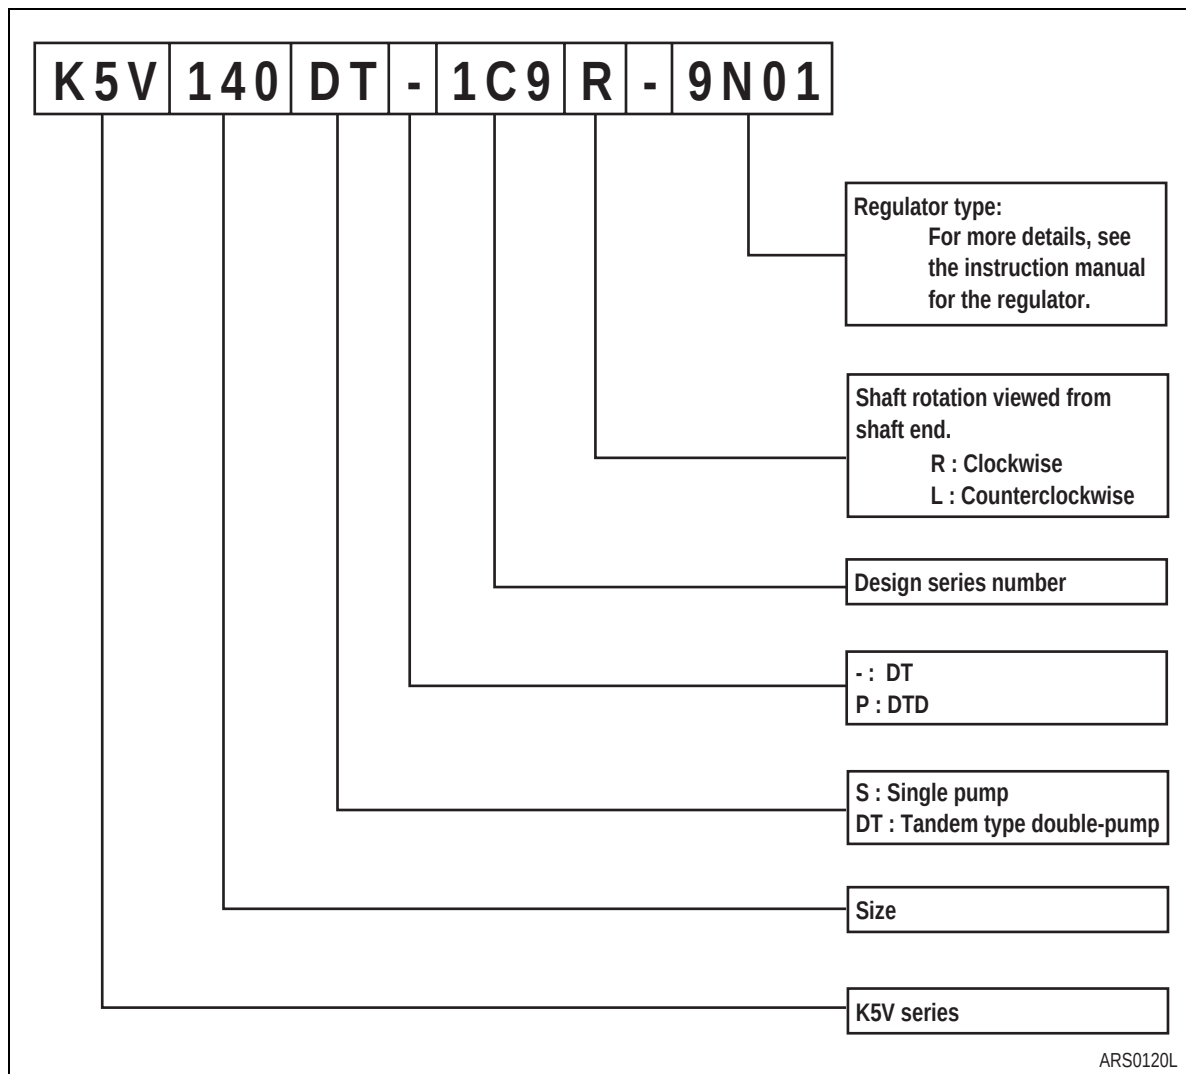


Figure 1

SPECIFICATIONS

Item		Specification
Size		140
Displacement		140 cm ³ / rev
Pressure	Rated	34.3 MPa (350 kg/cm ²)
	Max.	37.7 MPa (385 kg/cm ²)
Speed	Max. * ¹	2,500 min ⁻¹
	Max. for self-priming * ²	2,150 min ⁻¹
Weight	Single	
	Double	130 kg
Working Oil	Type	Mineral working oil
	Oil temp range	-20 ~ +95 °C
	Oil viscosity range	10~1,000 cSt (mm ² /s)
	Recommended filter	10μm

*¹ These are the maximum speeds for the closed-circuit specifications. For the closed-circuit specifications, consult us in advance.

*² These are the speeds when the suction pressure is 0 kg/cm² (0 psi).

CONSTRUCTION AND FUNCTION

Construction

This pump assembly consists of two pumps connected by a splined coupling (114). The two pumps can be driven simultaneously as the rotation of the prime mover (engine) is transferred by the drive shaft (F) (111) on the front side. The suction and discharge ports are integrated at the connecting part of the two pumps, i.e. in valve block (312): The suction port serves both the front pump and the rear pump.

Function

The pumps may be classified roughly into the rotary group performing a rotary motion and working as the major part of the whole pump function: the swash plate group that varies the delivery rates: and the valve cover group that changes over oil suction and discharge.

1. Rotary Group

The rotary group consists of a drive shaft (F) (111), cylinder block (141), piston shoes (151, 152), set plate (153), spherical bushing (156) and cylinder spring (157). The drive shaft is supported by bearings (123 and 124) at both ends. The shoe is caulked to the piston to form a spherical coupling. It has a pocket to relieve thrust force generated by loading pressure and to take hydraulic balance so that it slides lightly over the shoe plate (211). The sub-group is composed of a piston and shoe pressed against the shoe plate by the action of the cylinder spring via a retainer and a spherical bush.

Similarly, the cylinder block is pressed against valve plate (313) by the action of the cylinder spring.

2. Swash Plate Group

The swash plate group consists of swash plate (212), shoe plate (211), swash plate support (251), tilting bushing (214), tilting pin (531) and servo piston (532).

The swash plate is a cylindrical part formed on the opposite side of the sliding surface of the shoe and is supported by the swash support.

The servo piston moves to the right and left as hydraulic oil, controlled by the regulator is transmitted to each hydraulic chamber located on both ends of the servo piston. The swash plate slides over the swash plate support via the spherical part of the tilting pin to change the tilting angle (α).

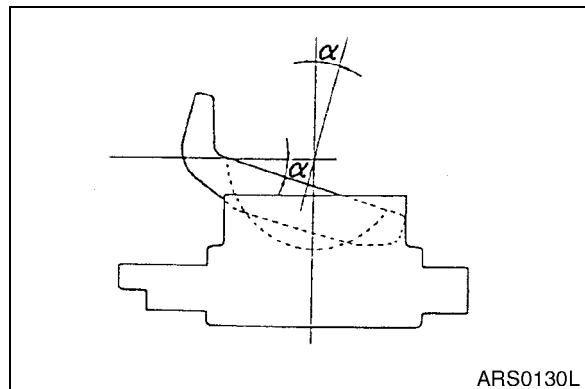


Figure 2 Swash Plate Group

3. Valve Block Group

The valve block group consists of valve block (312), valve plate (313) and valve plate pin (885). The valve plate has two melon-shaped ports, that are mated to the valve block. These feed and collect oil to and from the cylinder block.

The oil changed over by the valve plate is connected to an external pipeline by way of valve block.

When the drive shaft is driven by the prime mover (engine), it rotates the cylinder block via a splined coupling. If the swash plate is tilted as in Figure 2, the pistons arranged in the cylinder block make a reciprocating motion with respect to the cylinder block, while they revolve with the cylinder block. If you pay attention to a single piston, it performs a motion away from the valve plate (oil sucking process) within 180 degrees, and makes a motion towards the valve plate (or oil discharging process) in the rest of 180 degrees. When the swash plate has no tilt angle (zero degrees), the piston does not stroke and neither discharges or draws oil.

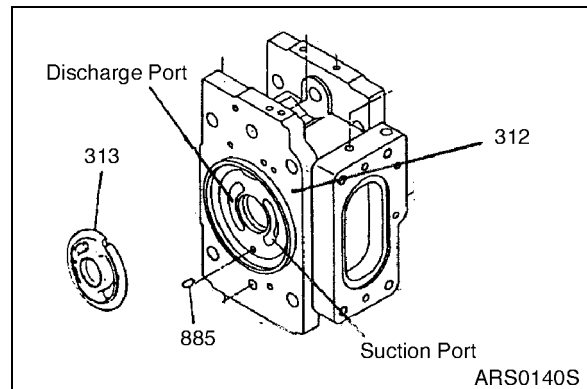


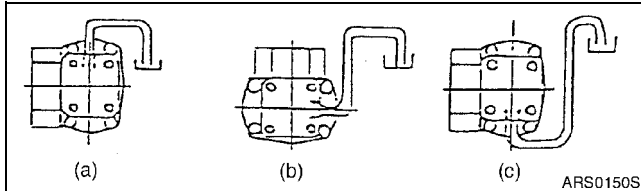
Figure 3 Valve Block Group

CAUTIONS FOR OPERATION

Installation

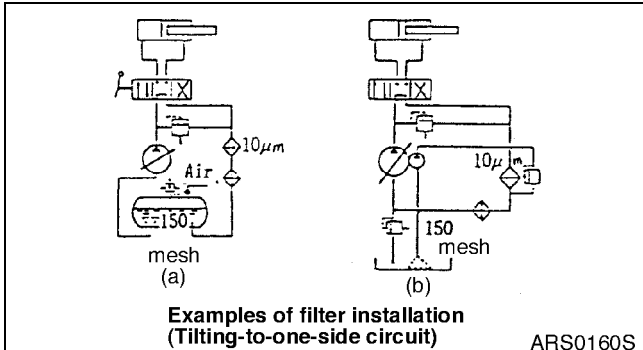
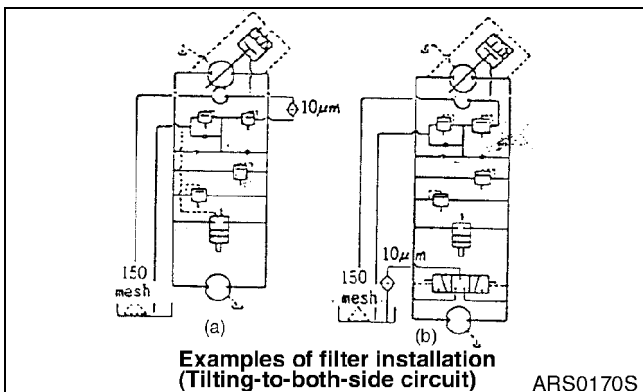
Item	Caution	Applied Type
Installed direction.	Install pump with drive shaft horizontal in general.	All types.
External load to shaft end.	Apply neither radial nor thrust load externally to the pump shaft end.	All types.
Removal of rust preventing paint.	Since the shaft end splined section has been coated with rust preventing paint, remove it with cleaning liquid before using the pump. Apply lubricant, such as molybdenum disulfide, before installing this section on the coupling. When cleaning liquid is used, be careful not to get liquid on oil seal sections.	All types.
Coupling and centering of pump.	Couple the pump drive shaft with the prime mover shaft with a flexible coupling in general. For centering between the coupling and drive shaft, keep the alignment within $\pm 0.03\text{mm}$.	All types.
Tightening of pump mounting bolts.	For the tightening torques of the pump mounting bolts, refer to the values of their respective sizes shown in "Tightening Torques" on page 26.	All types.

Cautions for Piping

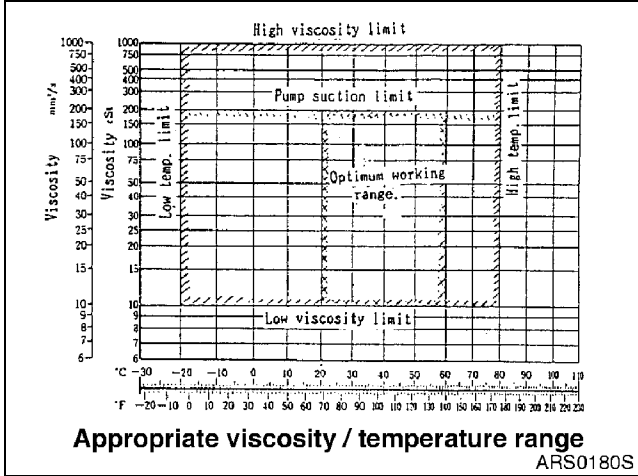
Item	Caution	Applied Type
Rotating direction and delivery direction.	For the variable pump, these indications depend on the command method of the regulator. For each application of the pump, refer to the indications shown in the outside dimension drawing.	All types.
Sanitation of pipings.	Carry out acid pickling and flushing of the suction / delivery pipings and tank. Especially, thoroughly clean the suction piping.	All types.
Installation of suction / delivery pipings.	When installing pipings, prevent the suction and delivery ports of the pump from being forcedly-stressed. Also avoid sudden bending as much as possible. Refer to attached list 1 tightening torque list in tightening the mounting bolts.	All types.
Drain piping.	Raise the drain pipe of the pump higher than the pump and route it to the tank, as shown in the following figures.  For a tandem type double-pump, install the drain pipe on the front pump first as far as possible. It is desirable to provide a filter in the drain line.	All types. Tandem type pumps.
Drain pressure.	Allowable internal case pressure for this pump is normally less than 1 kg/cm^2 (14 psi).	All types.

Cautions for Filters

The most important factor to prevent the pumps and other components from being damaged and to lengthen their life-spans is control of contamination in the hydraulic oil. A filter of 10µm must be provided in the circuit.

Item	Caution	Applied Type
Tilting-to-one side circuit.	In the circuit, do not forget to provide a filter of 10µm in the actuator return pipe. The following figure shows examples. In addition, provide a filter of 80 to 150 mesh at the suction side.  Examples of filter installation (Tilting-to-one-side circuit) ARS0160S	All types of tilting-to-one side pumps.
Tilting-to-both side circuit.	It is ideal to provide a filter of 10µm in the booster line as shown in (a) of the following figure, but there are also a number of experiences to provide filters of 10µm in the flushing circuits. Always, provide a filter of 80-150 mesh in the suction side of the booster pump.  Examples of filter installation (Tilting-to-both-side circuit) ARS0170S	All types of tilting-to-both side pumps.
Contamination.	The relationship between contamination and the pump's life-span is very understandable and the latter depends largely on the kind and nature of dust. Mixing of dust in the oil will cause any pump to have a shorter life-span. On the premise that dust is not mixed the recommended range is class 9 or better in NAS class, and 2 to 4 mmg/100cc or less in millipoise pollution grade.	All types.

Working Oil and Temperature Range

Item	Caution	Applied Type
Kind of oil.	Use general-use working oil that has an antifoaming additive, antioxidant, anticorrosive, sec. and has a high viscosity index.	All types.
Optimum viscosity and temperature of working oil.	For the open circuit, the recommended working viscosity range is 10 to 200 cSt. For the close circuit or when used as a motor, the range of 10 to 1000 cSt can be available, but the range of 10 to 200 cSt is desirable, considering the optimum efficiency. The temperature range is limited approximately to -20°C to 80°C by oil seals, O-rings, etc. It is desirable to use oil at a temperature lower than 65°C as low as possible, considering deterioration of working oil, seals and so on.  Appropriate viscosity / temperature range ARS0180S	All types.
Working oil other than mineral oil.	When any working oil of phosphate, water-glycol, fatty acid ester is to be used, do not fail to consult us in advance.	All types.

Operational Cautions

Item	Caution	Applied Type
Out of service for a long period.	It is not recommendable that the pump/motor is stored for a long period (one year or more) without being operated. During such period, rotate it even for a short time. When it is stored independently, it is effective even to turn its shaft manually. If the storage period is longer it is necessary to overhaul it.	All types.
Change of rotating direction.	The rotating direction is as indicated by the arrow plate. If it must be changed during its life-span, consult us.	All types.

Oil filling and Air Venting

Item	Caution	Applied Type
Oil filling.	Fill the pump casing with oil. Inside the pump there are high-speed sliding and moving parts, such as bearings, pistons/shoes, retainer, etc. If not filled with oil, these parts may suffer some serious problems, such as seizures damage.	All types.
Air venting.	When air is left in the circuit or pump, it may cause a malfunction or damage. Completely vent air.	All types.

Cautions During Starting Operation

1. Check pipings for proper installation.
2. Check that the rotating and suction / delivery directions are correct.
3. Before starting the prime mover, make sure the pump free of any load.
4. After starting, continue the idling for a while to vent air completely from the circuit.
5. Check the pump and pipings for oil leaks and abnormal vibrations.
6. When the pump is attached to a gear box, check that the box is full of oil to its proper level.

TROUBLESHOOTING

General Cautions

This section describes the countermeasures to be taken if any abnormality is detected during the operation of the Kawasaki swash plate type axial piston pump.

The general cautions are as follows:

1. Consider the condition before starting work.
2. Judge the nature of the abnormality, before starting work. Especially, judge if it is a problem in the circuit or caused by the regulator or attached valves and determine that something is truly wrong with the pump or not.
3. Read and understand the maintenance manual before disassembling and follow the right disassembling procedures.
4. Even when any section is to be disassembled, not to make dust or let it enter into the pump.
5. Since the parts are finely finished, handle them carefully to prevent damage.

Check Pump Proper for Abnormalities

The pump is often fitted with a regulator, accessory valves and associated pump. It is very difficult to find the cause of the failure. Investigate the following items, and the abnormal point will be revealed.

1. Check filter and drain oil
Check filter elements for excessive amount of abnormal impurities. Since the shoes and cylinder may give off worn metal particles, a small quantity may be detected there. However if a excessive amount of metal particles is found in the filters, it should be considered that shoes may be damaged. Similarly, check drain oil in the pump casing.
2. Existence of abnormal noises or vibrations

Check the pump for abnormal noises and vibrations. If any, investigate if it is a noise in the regular frequency, such as hunting of the regulator or the relief valve of an accessory valve, or not. If it is an abnormal vibration or noise, it may be the result of cavitation or damage inside the pump.

3. Case where two pumps are used

For the circuit with two single pumps or motors or for the duplex pump, exchange the piping of one pump with that of the other one. With the results of this exchange, it will be determined if the trouble is the problem of the circuit downstream the pump or not.

4. Pressure Measurement at Various Points

If the failure is a problem in control, do not unnecessarily overhaul the pump, but measure pressures at various areas to investigate the abnormal position.

Overload of Prime Mover

Cause	Countermeasure	Remark
Is not the speed-pressure higher than their specified values?	Set them as specified.	
Is not the torque setting of the regulator higher?	Reinvestigate the regulator.	See the instruction manual of the regulator.
Seizure or damage of a part inside the pump.	Replace the damaged part.	Check the filter and drain oil for abnormal worn metal particles.
Wrong installation of the regulator piping.	Correct the regulator piping.	

**Extreme Decrease of Pump Delivery Flow and
Non-increase of Delivery Pressure**

Cause	Countermeasure	Remark
Failure of the regulator.	Repair the regulator.	See the instruction manual of the regulator.
Seizure or damage of a part inside the pump.	Replace the damaged part.	Check the filters and drain oil.
Failure of the associated pump.	Replace the damaged part.	Remove the associated pump and check the shaft coupling.
Failure of the accessory valve.	Check the accessory valves. (Especially check the poppets, seats and springs).	See the instruction manual of the accessory valves.
Wrong installation of the regulator piping.	Correct the regulator piping.	

Abnormal Noises and Abnormal Vibrations

Cause	Countermeasure	Remark
Cavitation	Prevention from cavitation. Check working oil for emulsion.	Low boost press. Failure of the associated pump. Air leakage at the suction pipe. Increased suction resistance.
Damage in the caulking suction of the shoe.	Replace the piston shoe, plate, etc.	
Cranking of the cylinder.	Replace the cylinder.	
Wrong installation of the pump.	Correct installation.	
Hunting of the regulator.	Repair the regulator.	See the instruction manual for the regulator.
Hunting of the relief valve of the accessory valve.	Repair the accessory valve.	See the instruction manual for the accessory valve.

CONSTRUCTION OF TANDEM TYPE DUPLEX PUMP

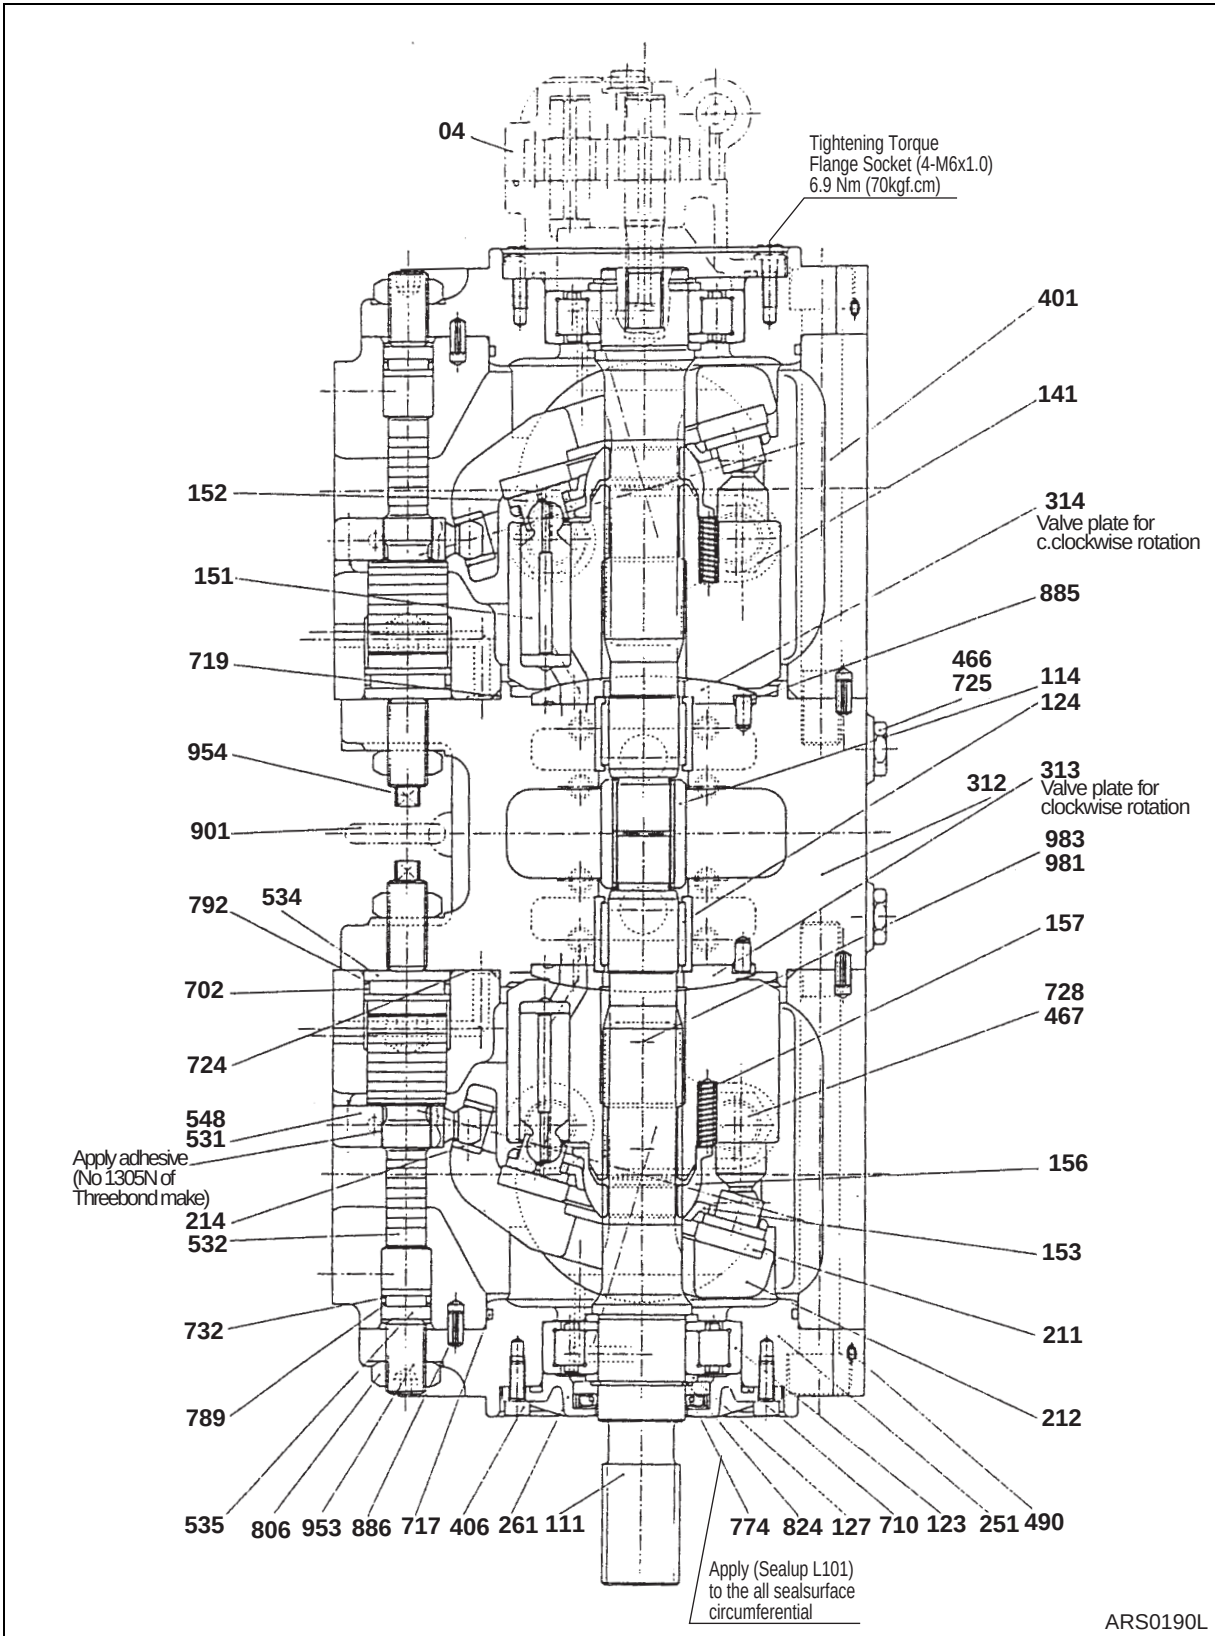


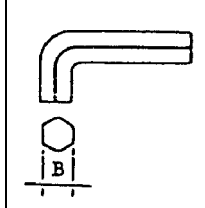
Figure 4

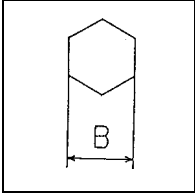
Reference Number	Description
04	Gear Pump
111	Drive Shaft (F)
113	Drive Shaft (R)
114	Spline Coupling
116	1st Gear (for DTP)
123	Roller Bearing
124	Needle Bearing
127	Bearing Spacer
141	Cylinder Block
151	Piston
152	Shoe
153	Set Plate
156	Spherical Bush
157	Cylinder Spring
211	Shoe Plate
212	Swash Plate
214	Tilting Bush
251	Swash Plate Support
261	Seal Cover (F)
262	Seal Cover (R)
271	Pump Casing
312	Valve Block
313	Valve Plate (R)
314	Valve Plate (L)
325	Valve Casing
401	Hexagon Socket Head Bolt
406	Hexagon Socket Head Bolt

Reference Number	Description
466	VP Plug
468	VP Plug
531	Tilting Pin
532	Servo Piston
534	Stopper (L)
535	Stopper (S)
548	Feed Back Pin
702	O-ring
710	O-ring
717	O-ring
719	O-ring
724	O-ring
725	O-ring
728	O-ring
732	O-ring
774	Oil Seal
789	Backup Ring
792	Backup Ring
808	Nut
824	Snap Ring
885	Valve Plate Pin
886	Spring Pin
901	Eye Bolt
953	Set Screw
954	Set Screw
981	Name Plate
983	Pin

TOOLS

The tools necessary to disassemble / reassemble the K3V pump are shown in the following list. The size of the bolts and plugs depend on the type of pump.

Tool Name And Size		Necessary Tool (Marked with O)		Part Name			
		Pump Type					
Name	B	K5V80	K5V140	Hexagon socket head bolt	PT plug (PT thread)	PO plug (PF thread)	Hexagon socket head setscrew
Allen wrench 	2						M4
	2.5						M5
	3						M6
	4	O	O	M5	BP-1/16		M8
	5	O	O	M6	BP-1/8		M10
	6	O	O	M8	BP-1/4	PO-1/4	M12,M14
	8	O		M10	BP-3/8	PO-3/8	M16,M18
	10			M12	BP-1/2	PO-1/2	M20
	12			M14			
	14	O		M16, M18	BP-3/4	PO-3/4	
	17		O	M20, M22	BP-1	PO-1, 1 ¹ / ₄ , 1 ¹ / ₂	
	19			M24, M27			
	21						
	22			M30		PO-2	

Tool Name and Size		Necessary Tool (Marked with O)		Part Name		
Name	B	K5V80	K5V140	Hexagon headed bolt	Hexagon nut	VP plug (PF thread)
Double ring spanner, Socket wrench, Double (single) open end spanner. 	19	O	O	M12	M12	VP-1/4
	22					VP-3/8
	24		O	M16	M16	
	27	O		M18	M18	VP-1/2
	30		O	M20	M20	
	36		O			VP-3/4
	41					VP-1
	50					VP-1 ¹ / ₄
	55					VP-1 ¹ / ₂
Adjustable angle wrench		O	O	Medium size, 1 set		
Screwdriver		O	O	Minus type screwdriver, medium size, 2 sets		
Hammer		O	O	Plastic hammer, 1 set		
Pliers		O	O	For snap ring, TSR-160		
Steel bar		O	O	Steel bar of key material approximately 10x8x200		
Torque wrench		O	O	Capable of tightening with the specified torques		

AXIAL PISTON PUMP DISASSEMBLING

For disassembling the pump, read this section thoroughly and disassemble it in the following sequence. The figures in parentheses after part names show the items in “Construction of Tandem Type Duplex Pump” on page 14.

This maintenance manual describes the disassembling procedures for both a single pump and tandem type double-pump. Disassemble the pump, referring to the contents for its appropriate type.

In addition, for the double-pump, do not exchange parts of one pump with the same ones of the other pump.

1. Select place suitable to disassembling.

IMPORTANT

Select clean place.

Spread a rubber mat or cloth on top of the overhaul workbench to prevent parts from being damaged.

2. Remove dust, rust, etc., from pump surfaces with cleaning oil.
3. Remove drain port plug (468) and let oil out of pump casing.

IMPORTANT

For tandem type pump, remove plugs from both front and rear pumps.

4. Remove hexagon socket head bolts (412 and 413) and regulator.

IMPORTANT

Refer to “Regulator for K5V, K3V Series of Kawasaki Swash Plate Type Axial Piston Pump” on page 27 for disassembling instructions.

5. Remove hexagon socket head bolts (401), swash plate support (251), pump casing (271) and valve block (312).

IMPORTANT

If a gear pump is attached to rear face of pump, remove it before proceeding.

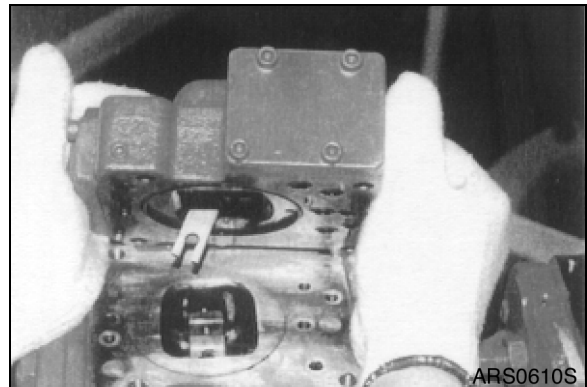


Figure 5

6. Place pump horizontally on workbench with its regulator mounting surface facing down. Separate pump casing (271) from valve block (312).

IMPORTANT

Before laying this surface down, spread rubber mat on workbench to prevent this surface from being damaged.

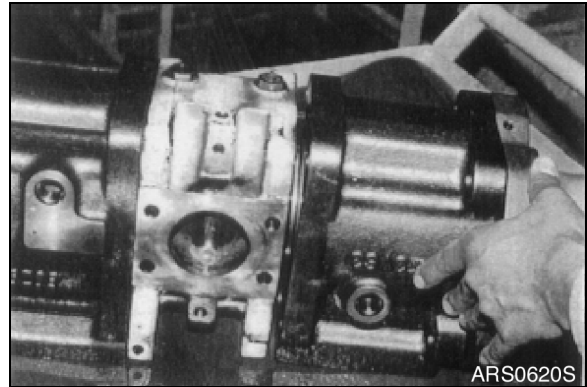


Figure 6

7. Pull cylinder (141) straight out of pump casing (271) over drive shaft (111). Pull out pistons (151), set plate (153), spherical bushing (156) and cylinder springs (157) simultaneously.

IMPORTANT

Do not damage sliding surfaces of cylinder, spherical bushing, shoes, swash plate, etc.

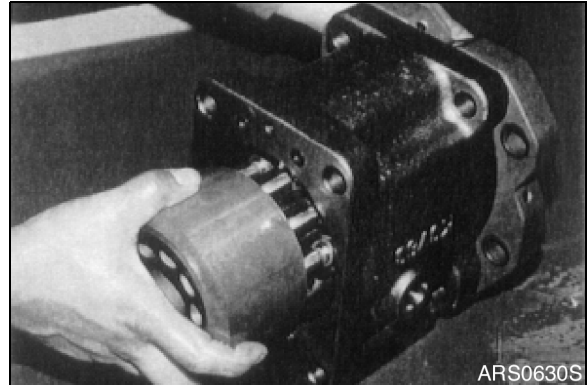


Figure 7

8. Remove hexagon socket head bolts (406) and seal cover (F) (261).

IMPORTANT

Install bolt into pulling-out tapped hole of seal cover (F), and cover can be removed easily.

Since oil seal is attached on seal cover (F), do not damage it when removing cover.

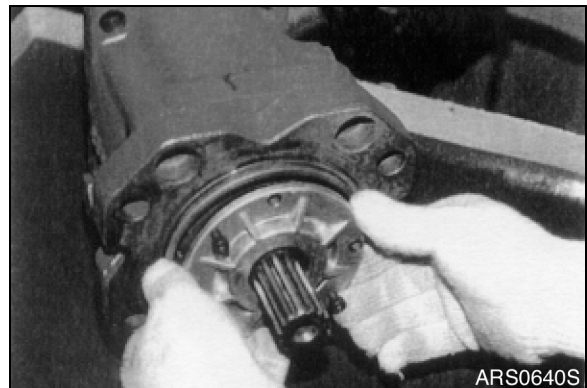


Figure 8

9. Remove hexagon socket head bolts (408) and seal cover (R) (262).

NOTE: *In case there is a gear pump, remove it first.*

10. Lightly tap flange section of swash plate support (251) on the pump casing side. This will separate swash plate support from pump casing.

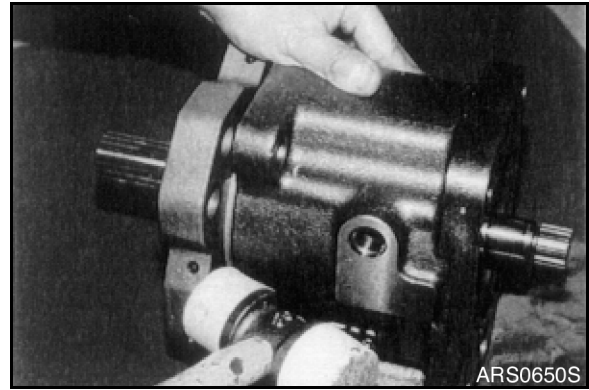


Figure 9

11. Remove shoe plate (211) and swash plate (212) from pump casing (271).

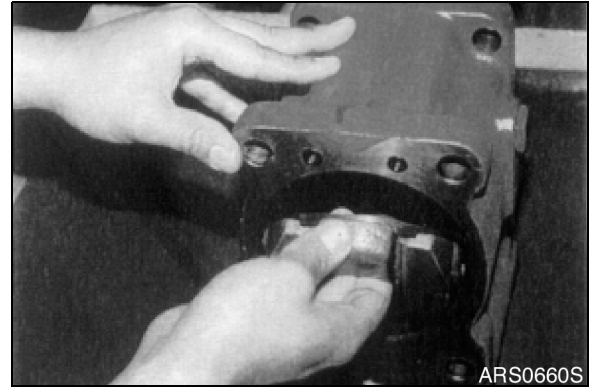


Figure 10

12. Lightly tap ends of drive shafts (111 and 113) with plastic hammer, to remove shafts from swash plate supports.

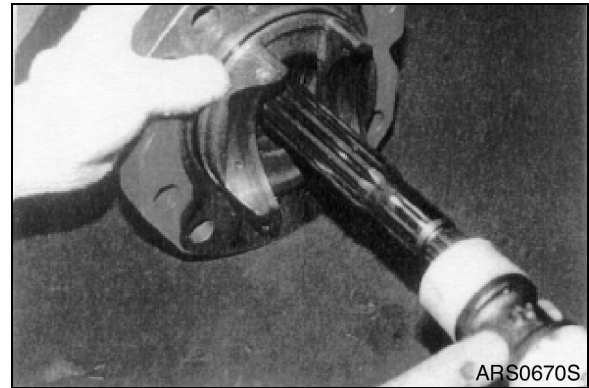


Figure 11

13. Remove valve plates (314 and 314) from valve block (312).

IMPORTANT
These may be removed in work 6.

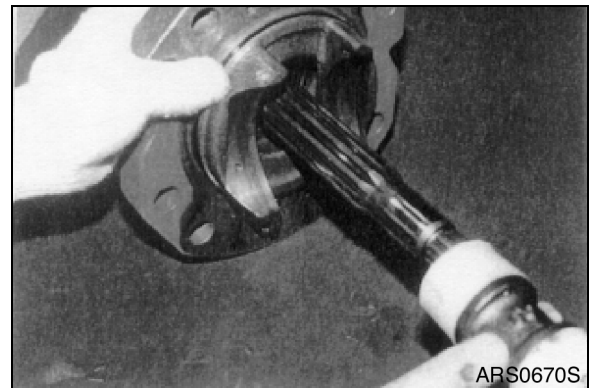


Figure 12

14. If necessary, remove stopper (L) (534), stopper (S) (535), servo piston (532) and tilting pin (531) from pump casing (271). Remove needle bearing (124) and splined coupling (114) from valve block (312).

IMPORTANT

When removing tilting pin, use a protector to prevent pin head from being damaged.

Since Loctite is applied to mounting areas of tilting pin and servo piston, do not damage servo piston.

Do not remove needle bearing if possible, except when it is considered to be worn out.

Do not loosen hexagon nuts of valve block and swash plate support. If loosened, flow setting will be changed.

AXIAL PISTON PUMP REASSEMBLING

For reassembling reverse the disassembling procedures, paying attention to the following items.

- Do not fail to repair the parts damaged during disassembling, and prepare replacement parts in advance.
- Clean each part with cleaning oil and dry it with compressed air.
- Do not fail to apply clean working oil to sliding sections, bearings, etc. before assembling them.
- Always replace seal parts, such as O-rings, oil seals, etc.
- For mounting bolts, plug, etc., use a torque wrench, and tighten them with torques shown in "Tightening Torques" on page 26.
- For the double-pump, do not exchange parts of the front pump with those of the rear pump.

1. Install swash plate support (251) on pump casing (271), by lightly tapping it with a hammer.

IMPORTANT

After servo piston, tilting pin, stopper (L) and stopper (S) are removed, Install them on pump casing in advance for reassembling.

When tightening servo piston and tilting pin, use a protector to prevent tilting pin head and feedback pin from being damaged. In addition, apply Loctite (medium strength) to their threaded sections.

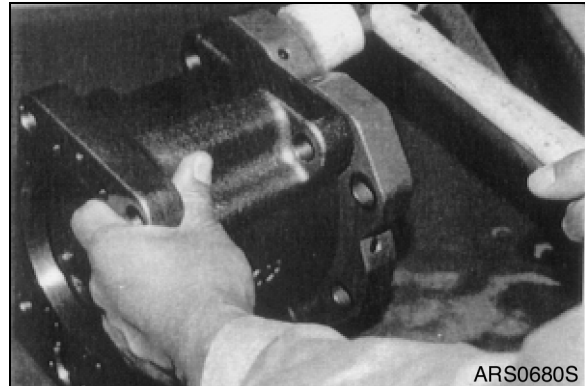


Figure 13

2. Place pump casing with its regulator mounting surface down, Install tilting bushing of swash plate on tilting pin (531). Install swash plate (212) on swash plate support (251) correctly.

IMPORTANT

Confirm with fingers of both hands that swash plate can be moved smoothly.

Apply grease to sliding sections of swash plate and swash plate support, so drive shaft can be easily installed.



Figure 14

3. On swash plate support (251), install drive shaft (111) with bearing (123), bearing spacer (127) and snap ring (824).

IMPORTANT

Do not tap drive shaft with hammer.

Assemble them into support, lightly tapping outer race of bearing with plastic hammer. Fully seat them, using steel bar.

4. Assemble seal cover (F) (261) to pump casing (271) and attach it with hexagon socket head bolts (406).

IMPORTANT

Lightly apply grease to oil seal in seal cover (F).

Assemble oil seal, taking full care not to damage it.

For tandem type pump, install rear cover (263) and seal cover (262) in the same manner.

5. Assemble piston cylinder subassembly (cylinder (141), piston subassembly (151, 152), set plate (153), spherical bushing (156) and cylinder spring (157).
6. Fit spline phases of retainer and cylinder.
7. Then insert piston cylinder subassembly into pump casing.

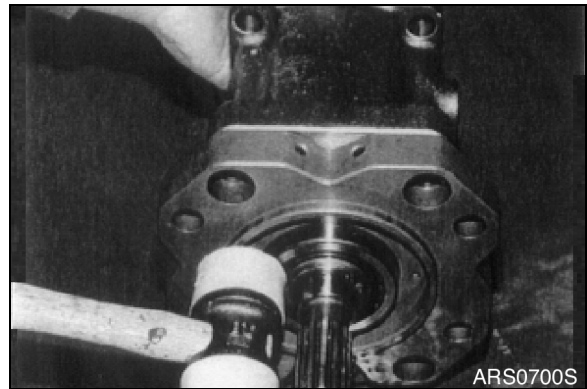


Figure 15

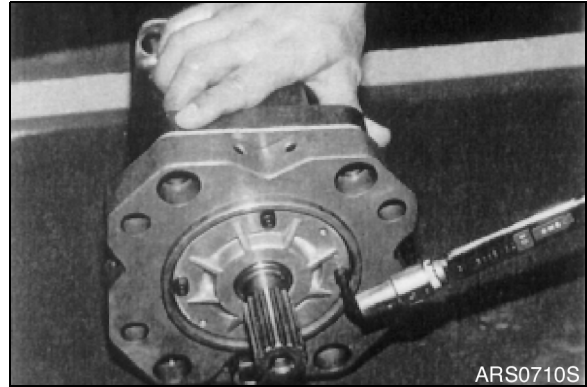


Figure 16

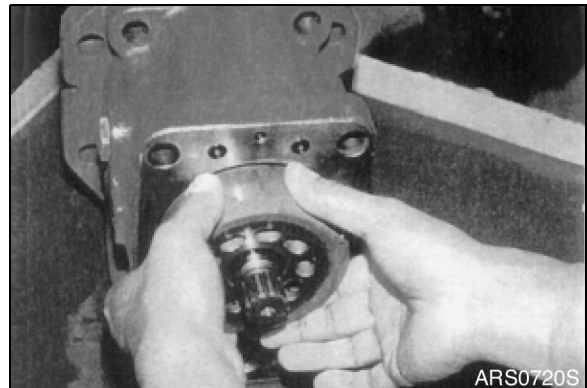


Figure 17

8. Install valve plate (313) on valve block (312), entering pin in to pin hole.

IMPORTANT

Do not mistake suction / delivery directions of valve plate.

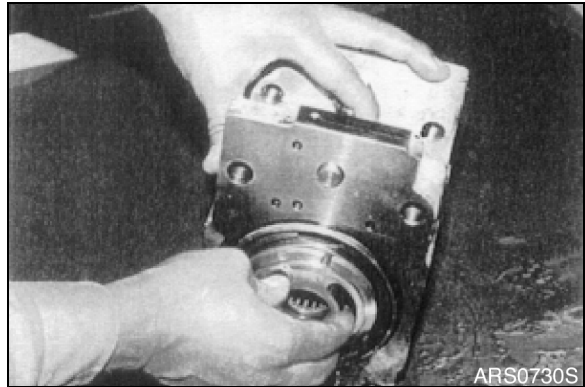


Figure 18

9. Install valve block (312) on pump casing (271) and tighten hexagon socket head bolts (401).

IMPORTANT

Assemble the rear pump side first, to make the procedure easier.

Do not mistake direction of valve block.

Clockwise rotation (viewed from input shaft side) - Install block with regulator up and with delivery flange left, viewed from front side.

Counterclockwise rotation (viewed from input shaft side) - Install block with regulator up and with delivery flange right, viewed from front side.

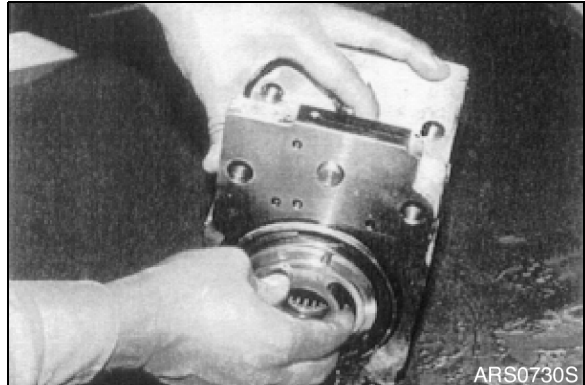


Figure 19

10. Place feedback pin of tilting pin into feedback lever of regulator. Install regulator and tighten hexagon socket head bolts (412 and 413).

IMPORTANT

Do not mistake regulator of front pump for that of rear pump.

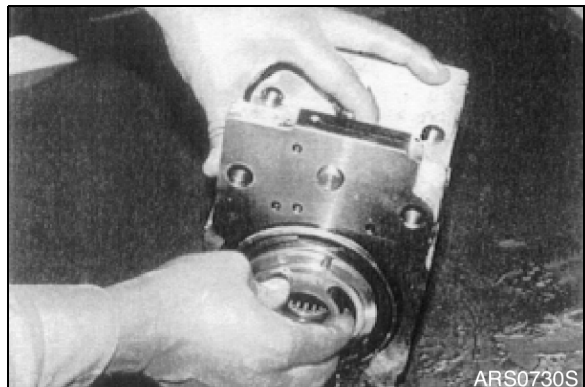


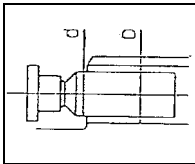
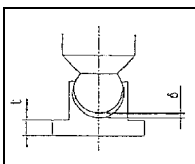
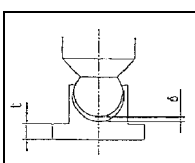
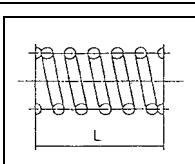
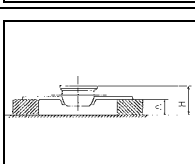
Figure 20

11. Install drain port plug (468).

AXIAL PUMP MAINTENANCE CRITERIA

Worn Part Replacement Criteria

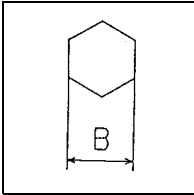
When a part exceeds any of the following criteria, replace or readjust it. However, when a part is seriously damaged in appearance, replace it.

Part Name and Inspection Item		Pump Type		Countermeasures
		K3V63/K5V80	K5V140	
		Standard Dimension / Recommended Replacement Value		
Clearance between piston and cylinder bore (D-d)		0.028 / 0.056	0.043 / 0.070	Replace piston or cylinder
Play between piston and shoe-caulking section (δ)		0-0.1 / 0.3	0-0.1 / 0.3	Replace assembly of piston and shoe
Thickness of shoe (t)		3.9 / 3.7	4.9 / 4.7	Replace assembly of piston and shoe
Free height of cylinder spring (L)		31.3 / 30.5	41.1 / 40.3	Replace cylinder spring
Combined height of set plate and spherical bushing (H-h)		19.0 / 18.3	23.0 / 22.0	Replace retainer or set plate

Correction Criteria for Cylinder, Valve Plate and Swash Plate (Shoe Plate)

Surface roughness for valve plate (sliding face), swash plate (shoe plate area) and cylinder (sliding face)	Surface roughness necessary to be corrected	3-Z
	Standard surface roughness (Corrected value)	0.4-Z or lower (Lapping)

TIGHTENING TORQUES

Part Name	Size	Tightening Torque	Tool Name	
Hexagon socket head bolt (Material: SCM 435)	M 5	70 kg•cm	B=4	 Allen wrench
	M 6	120 kg•cm	B=5	
	M 8	300 kg•cm	B=6	
	M 10	580 kg•cm	B=8	
	M 12	1,000 kg•cm	B=10	
	M 14	1,600 kg•cm	B=12	
	M 16	2,400 kg•cm	B=14	
	M 18	3,400 kg•cm	B=14	
	M 20	4,400 kg•cm	B=17	
PT plug (Material:S45C) Wind a seal tape 1½ to 2 turns round the plug.	PT 1/16	70 kg•cm	B=4	Do.
	PT 1/8	105 kg•cm	B=5	
	PT 1/4	175 kg•cm	B=6	
	PT 3/8	350 kg•cm	B=8	
	PT 1/2	500 kg•cm	B=10	
	PF 1/4	300 kg•cm	B=6	Do.
	PF 1/2	1,000 kg•cm	B=10	
	PF 3/4	1,500 kg•cm	B=14	
	PF 1	1,900 kg•cm	B=17	
	PF 1¼	2,700 kg•cm	B=17	
	PF 1½	2,800 kg•cm	B=17	

REGULATOR FOR K5V, K3V SERIES OF KAWASAKI SWASH PLATE TYPE AXIAL PISTON PUMP

TYPE DESCRIPTION

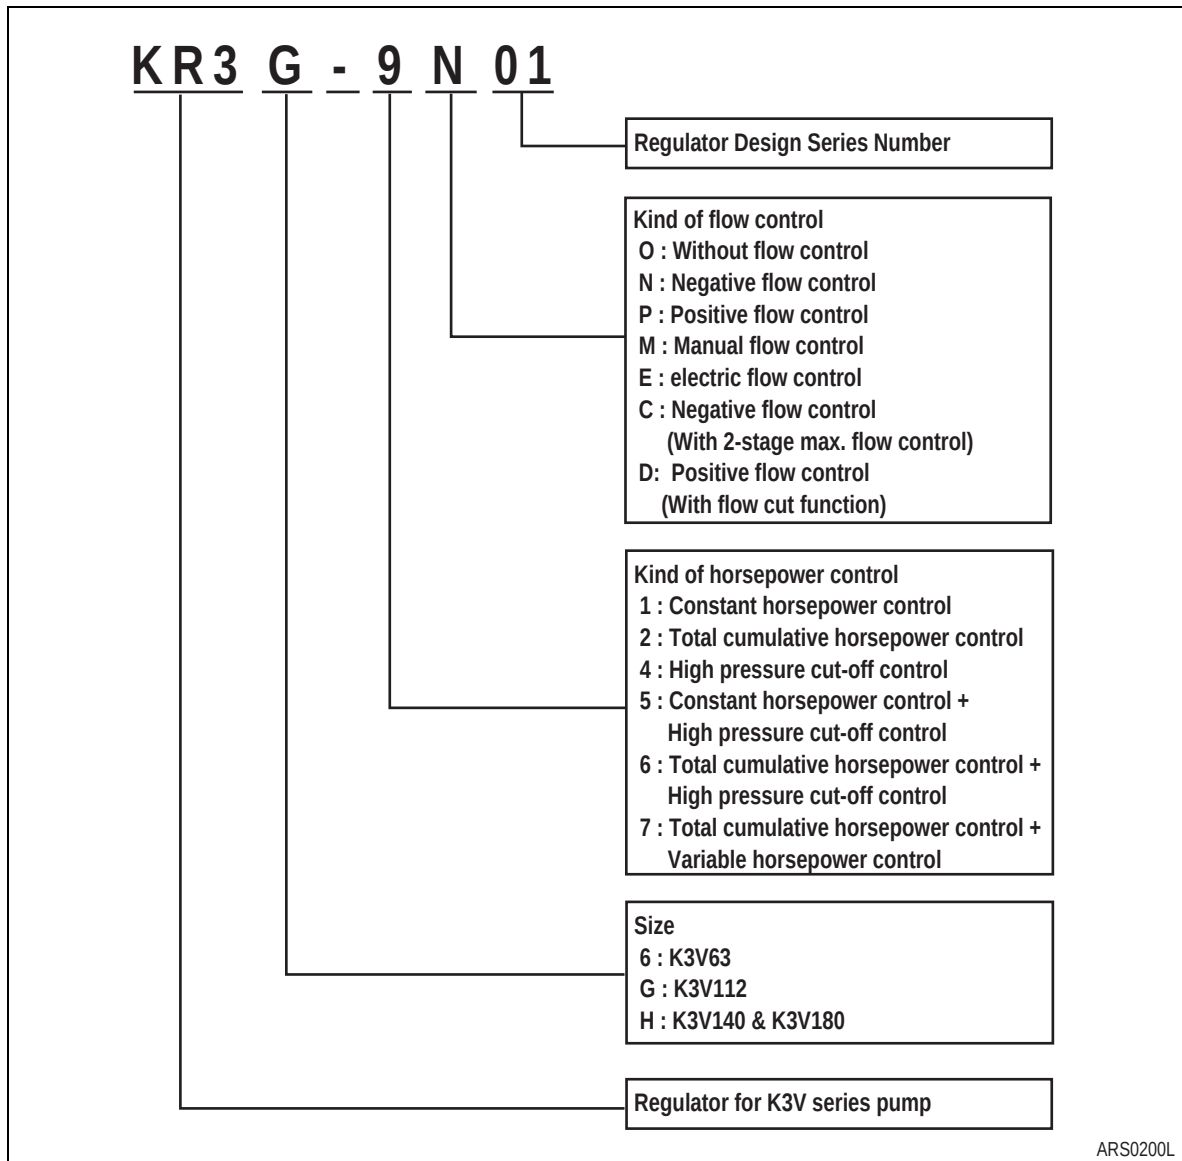


Figure 21

CONSTRUCTION OF REGULATOR

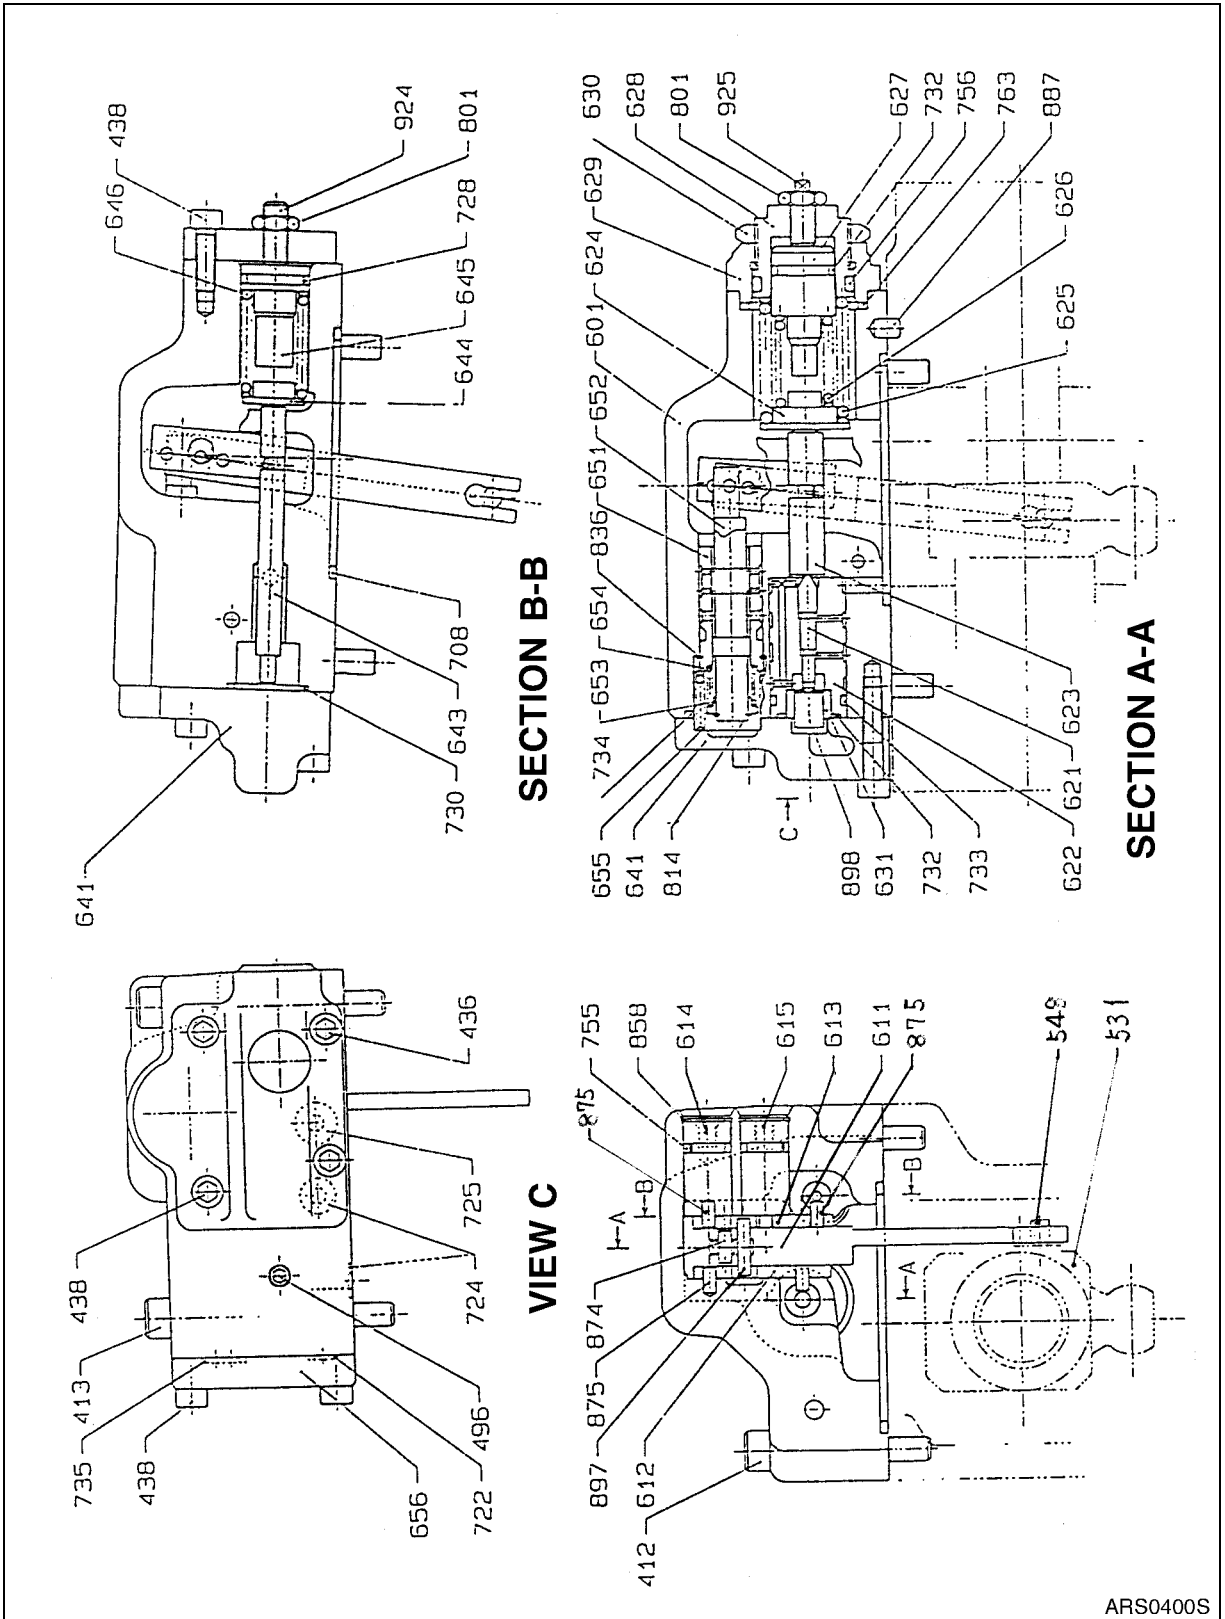


Figure 22

ARS0400S

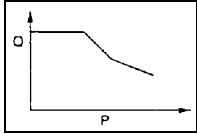
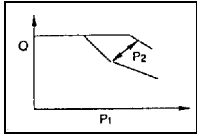
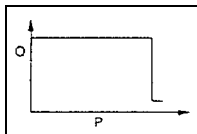
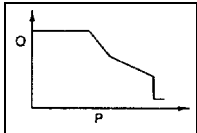
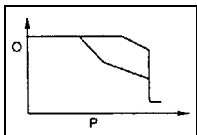
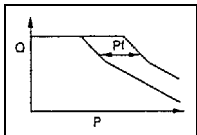
Reference Number	Description
412	Hexagon Socket Head Screw
413	Hexagon Socket Head Screw
436	Hexagon Socket Head Screw
438	Hexagon Socket Head Screw
496	Plug
531	Tilting Pin
548	Feedback Pin
601	Casing
611	Feedback Lever
612	Lever (1)
613	Lever (2)
614	Fulcrum Plug
615	Adjusting Plug
621	Compensating Piston
622	Piston Case
623	Compensating Rod
624	Spring Seat (C)
625	Outer Spring
626	Inner Spring
627	Adjusting Ring (C)
628	Adjusting Screw (C)
629	Cover (C)
630	Lock Nut
631	PF Sleeve
641	Pilot Cover
643	Pilot Piston
644	Spring Seat
645	Adjusting Ring (Q)
646	Pilot Spring
651	Sleeve

Reference Number	Description
652	Spool
653	Spring Seat
654	Return Spring
655	Set Spring
656	Block Cover
708	O-ring
722	O-ring
724	O-ring
725	O-ring
728	O-ring
730	O-ring
732	O-ring
733	O-ring
734	O-ring
735	O-ring
755	O-ring
756	O-ring
763	O-ring
801	Nut
814	Snap Ring
836	Snap Ring
858	Locking Ring
874	Pin
875	Pin
887	Pin
897	Pin
898	Pin
924	Adjusting Screw
925	Adjusting Screw (QI)

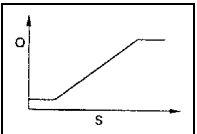
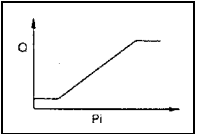
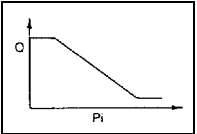
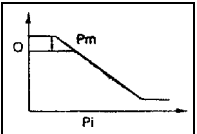
OUTLINE

The regulator for the K3V Series Kawasaki in-line type axial piston pump has various models to satisfy various kinds of specifications required. Therefore, the customer can select the appropriate model to its intended application.

Horsepower Control

Code	Control Type	Control Curve	Function and Features
1	Constant horsepower control		According to the rise of delivery pressure of a pump, the tilting angle of the pump is automatically controlled and torque control is achieved.
2	Total horsepower control	 P2 Companion pump pressure	According to the rise of delivery pressure of a pump, the tilting angle of the pump is automatically controlled and torque control is achieved. (compensation control) The total horsepower control can be achieved by decreasing the horsepower of a pump depending upon the pressure of its companion pump.
4	High pressure cut-off	 Pressure cut-off	If the pressure rises above the set value, the pump outlet flow is automatically decreased by the pressure cut-off control.
5		 Horsepower control pressure cut-off	
6		 Total horsepower control pressure cut-off	
9	Variable horsepower control		Variable horsepower control can be obtained by supplying pilot pressure or electric current.

Flow Control

Code	Control Type	Control Curve	Function and Features
M	Manual flow control	 Lever stroke	With the manual control, the outlet flow can be freely controlled.
P	Positive flow control	 Pilot pressure	Positive flow control can be carried out by using the pilot pressure.
N	Negative flow control		Negative flow control can be carried out by using the pilot pressure.
C	2-stage max. flow control		Two-stage max. flow control can be obtained by supplying external pilot pressure. (only in negative flow control)

One flow control and one horsepower control pump can be combined for use. When these controls function simultaneously, the lower tilting angle (lower flow) will prevail through the mechanical calculation mentioned below.

SPECIFICATIONS

- Working oil: Wear-resistant hydraulic working oil, ISO VG 32, 46 and 68
- Temperature range: -20 °C ~ +95°C
- Viscosity range: 10~1000 cSt (During normal operation: 10 ~ 200 cSt)
- Miscellaneous: With proportional pressure reducing valve (In case of type KR3*-9***)

FUNCTIONAL EXPLANATIONS

The regulator for Kawasaki in-line axial piston pump K3V Series consists of the following control functions.

1. Negative flow control
2. Total cumulative horsepower control
3. Variable horsepower control

Regulator Function Diagram

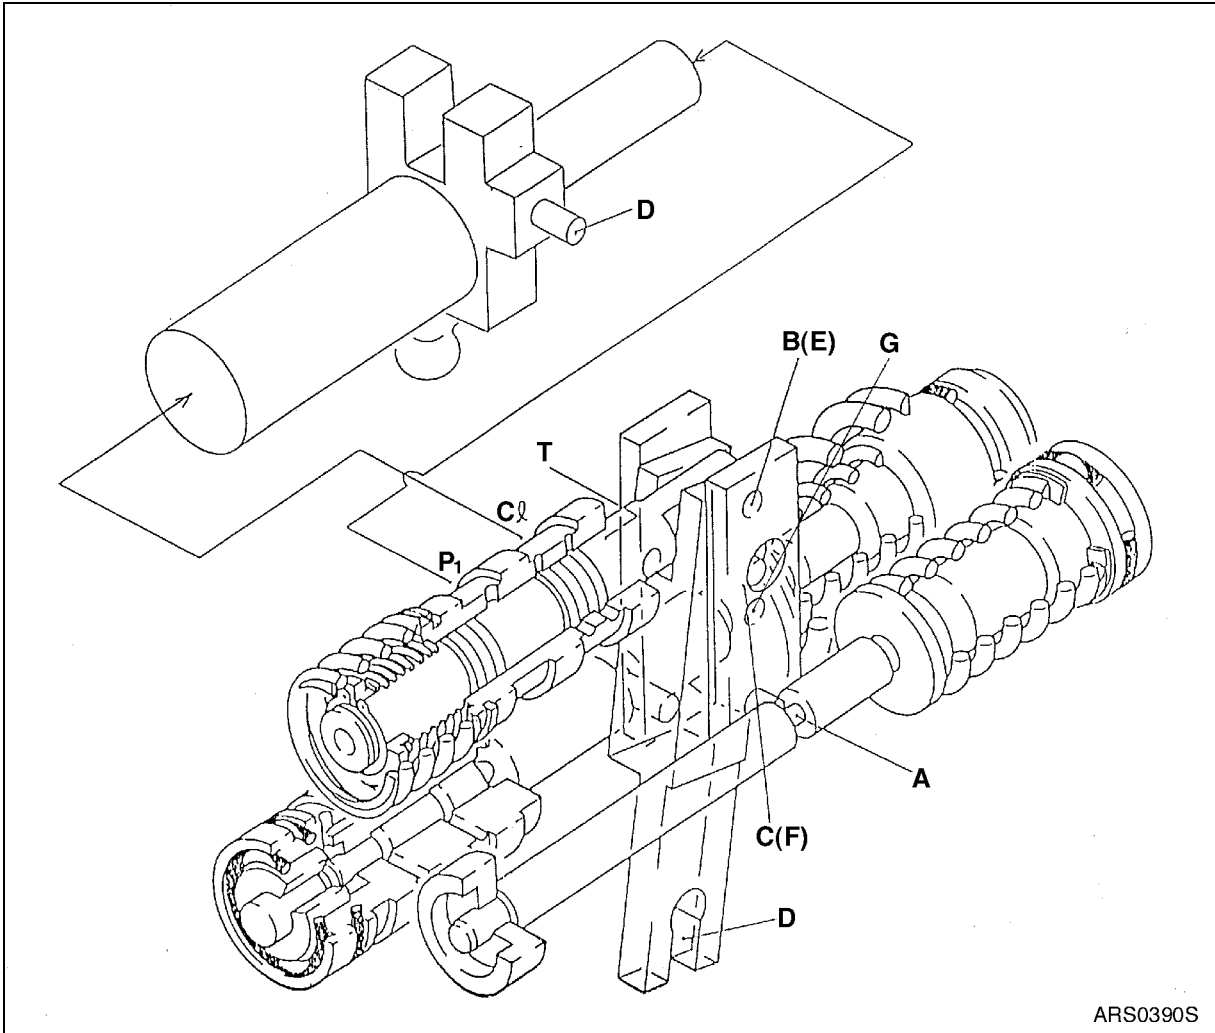


Figure 23

Negative Flow Control

By changing the pilot pressure P_i , the pump tilting angle (delivery flow) is regulated arbitrarily, as shown in Figure 24.

This regulator is a negative flow control in which the delivery flow Q decreases as the pilot pressure P_i rises. With this mechanism, when the pilot pressure corresponding to the flow required for the work is commanded, the pump discharges the required flow only, so it does not consume unnecessary power.

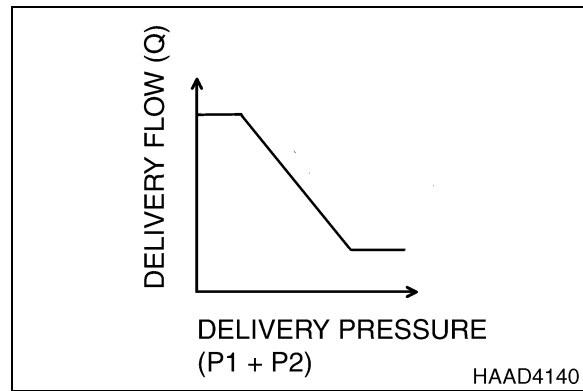


Figure 24

1. Functional Explanation

A. Flow reducing Function

As the pilot pressure P_i rises, the pilot piston (643) moves to the right to a position where the force of the pilot spring (646) balances with the hydraulic force.

The groove (A) in the pilot piston is attached with pin (875) that is fixed to lever 2 (613). Therefore, when the pilot piston moves, lever 2 rotates around the fulcrum of point B (fixed by the fulcrum plug (614) and pin (875)). Since the large-hole section (C, Figure 23) of lever 2 contains a protruding pin (897) fixed to the feedback lever (611), the pin (897) moves to the right as lever 2 rotates. Since the opposing-flat section (D) of the feedback lever is attached with the pin (548) fixed by the tilting pin (531) that swings the swash plate, the feedback lever rotates around the fulcrum of point D, as the pin (897) moves. Since the feedback lever is connected with the spool (652) via the pin (874), the spool moves to the right.

The movement of the spool causes the delivery pressure P_1 to connect to port C liter through the spool and to be admitted to the large-diameter section of the servo position. The delivery pressure P_1 that is constantly admitted to the small-diameter section of the servo piston moves the servo piston to the right due to the area difference, resulting in decrease of the tilting angle.

When the servo piston moves to the right, point D also moves to the right. The spool is fitted with the return spring (654) and is tensioned to the left at all times, and so the pin (897) is pressed against the large-hole section (C) of lever 2. Therefore, as point D moves, the feedback lever rotates around the fulcrum of point C, and the spool is shifted to the left. This causes the opening between the sleeve (651) and spool (652) to close slowly, and the servo piston comes to a complete stop when it closes completely.

B. Flow Increasing Function

As the pilot pressure P_i decreases, the pilot piston (643) moves to the left by the action of the pilot spring (646) and causes lever 2 (613) to rotate around the fulcrum of point B. Since the pin (897) is pressed against the large-hole section (C) of lever 2 by the action of the return spring (654) via the spool (652), pin (874), and feedback lever (611), the feedback lever rotates around the fulcrum of point D as lever 2 rotates, and shifts the spool to the left. Port C liter opens a way to the tank port as the spool moves. This deprives the large-diameter section of the servo piston of pressure, and shifts the servo piston to the left by the discharge pressure P_1 in the small-diameter section, resulting in an increase in the flow rate.

As the servo piston moves, point D also moves to the left, the feedback lever rotates around the fulcrum of point C, and the spool moves to the right till the opening between the spool and sleeve is closed.

2. Adjustment of flow control characteristic

The flow control characteristic can be adjusted with the adjusting screw.

Adjust it by loosening the hexagon nut (801) and by tightening (or loosening) the hexagonal socket head screw (924).

Tightening the screw shifts the control chart to the right as shown in the Figure 25.

NOTE: *Adjusting values are shown in the attached Table. See "Summary of Regulator Adjustment Values" on page -38.*

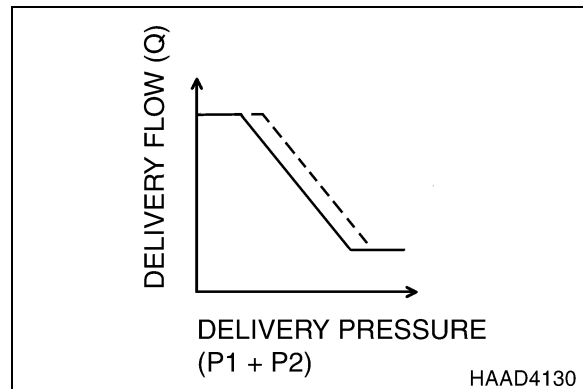


Figure 25

Total Horsepower Control

The regulator decreases the pump tilting angle (delivery flow) automatically to limit the input torque within a certain value with a rise in the delivery pressure P1 of the self pump and the delivery pressure P2 of the companion pump. (The input horsepower is constant when the speed is constant.)

Since the regulator is of the simultaneous total horsepower type that operates by the sum of load pressures of the two pumps in the tandem double-pump system, the prime mover is automatically prevented from being overloaded, irrespective of the load condition of the two pumps, when horsepower control is under way.

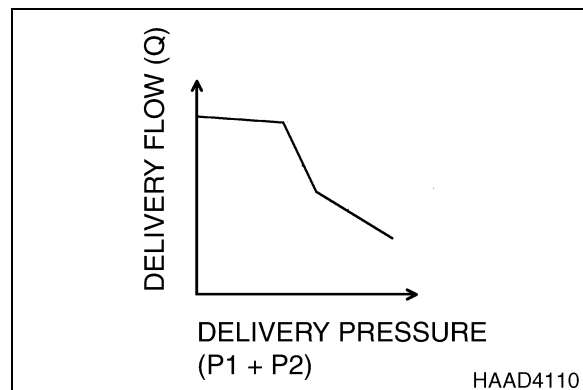


Figure 26

1. Functional explanation

Since this regulator is of the simultaneous total horsepower type, it controls the tilting angles (displacement volumes) of the two pumps to the same values as represented by the following equation:

$$\bullet \quad T_{in} = P1 \times q/2\pi + P2 \times q/2\pi = (P1 + P2) \times q/2\pi$$

The horsepower control function is the same as the flow control function and is summarized in the following. (For detailed behaviors of respective parts, refer to the section of flow control).

A. Overload Preventive Function

When the self pump delivery pressure P1 or the companion pump delivery pressure P2 rises, it acts on the stepped part of the compensating piston (621). It presses the compensating rod (623) to the right till the force of the outer spring (625) and inner spring (626) balances with the hydraulic force. The movement of the compensating rod is transmitted to Lever 1 via pin (875). Lever 1 rotates around the pin (875) (E) attached to the casing (601).

Since the large-hole section (F) of Lever 1 contains a protruding pin (897) attached to the feedback lever (611), the feedback lever rotates around the fulcrum of Point D as Lever 1 rotates, and then the spool (652) is shifted to the right. As the spool moves, the delivery pressure P1 is admitted to the large-diameter section of the servo piston via Port C liter, causes

the servo piston move to the right, reduces the pump delivery flow rate, and prevents the prime mover from being overloaded.

The movement of the servo piston is transmitted to the feedback lever via point D. Then the feedback lever rotates around the fulcrum of point F and the spool is shifted to the left. The spool moves till the opening between the spool and sleeve (651) is closed.

B. Flow Reset Function

As the self pump delivery pressure P1 or the companion pump delivery pressure P2 decreases, the compensating rod (623) is pushed back by the action of the springs (625 and 626) to rotate Lever 1 around point E. Rotating of Lever 1 causes the feedback lever to rotate around the fulcrum of point D and then the spool to move to the left. As a result, Port C liter opens a way to the tank port. This causes the servo piston to move to the left and the pump's delivery rate to increase.

The movement of the servo piston is transmitted to the spool by the action of the feedback mechanism to move it till the opening between the spool and sleeve is closed.

2. Low tilting angle (low flow) command preferential function

As mentioned above, flow control and horsepower control tilting angle commands are transmitted to the feedback lever and spool via the large-hole sections (C and F) of levers 1 and 2. However, since sections C and F have the pins ($\varnothing 4$) protruding from the large hole ($\varnothing 8$), only the lever lessening the tilting angle contacts the pin (897); the hole ($\varnothing 8$) in the lever of a larger tilting angle command is freed without contacting the pin (897). Such a mechanical selection method permits preference of the lower tilting angle command of the flow control and horsepower control.

3. Adjustment of Input horsepower

Since the regulator is of total cumulative horsepower type, adjust the adjusting screws of both the front and rear pumps, when changing the horsepower set values. The pressure change values by adjustment are based on two pumps pressurized at the same time, and the values will be doubled when only one pump is loaded.

A. Adjustment of outer springs

Adjust it by loosening the hexagon nut (630) and by tightening (or loosening) the adjusting screw C (628). Tightening the screw shifts the control chart to the right and increases the input horsepower as shown in the Figure 27. Since turning the adjusting screw C by N turns changes the setting of the inner spring, return the adjusting screw C1 (925) by NxA turns at first.

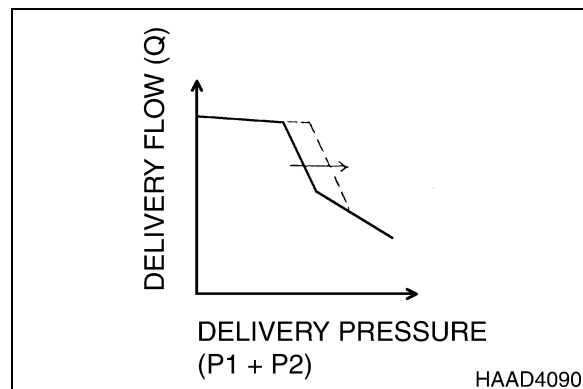


Figure 27

B. Adjustment of inner spring

Adjust it by loosening the hexagon nut (801) and by tightening (or loosening) the adjusting screw CI (925). Tightening the screw increases the flow and then the input horsepower as shown in the Figure 28.

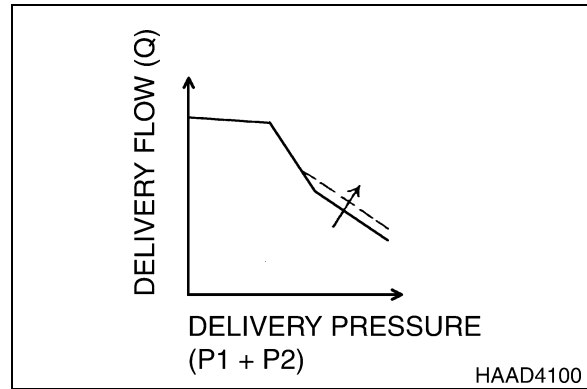


Figure 28

Variable Horsepower Control

The set horsepower valve is shifted by varying the command current level of the proportional pressure reducing valve attached to the pump.

Only one proportional pressure reducing valve is provided. However, the secondary pressure P_f (power shift pressure) is admitted to the horsepower control section of each pump regulator through the pump's internal path to shift it to the same set horsepower level. This function permits arbitrary setting of the Pump output power, thereby providing the optimum power level according to the operating condition.

1. Functional explanation

The power shift pressure P_f controls the set horsepower of the pump to a desired level, as shown in the Figure 29.

As the power shift pressure P_f rises, the compensating rod (623) moves to the right via the pin (898) and compensating piston (621). This decreases the pump tilting angle and then the set horsepower in the same way as explained in the overload preventive function of the horsepower control. On the contrary, the set horsepower rises as the power shift pressure P_f falls.

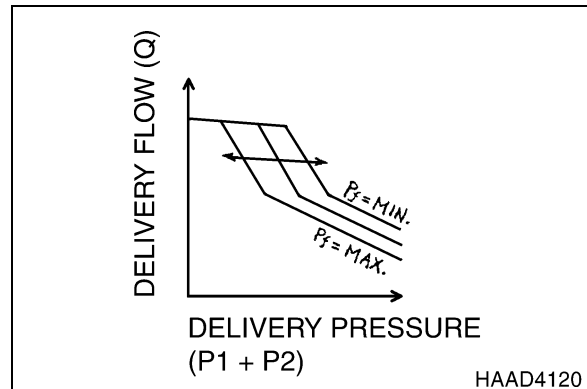


Figure 29

ADJUSTMENT OF MAXIMUM AND MINIMUM FLOWS

The regulator can adjust the maximum and minimum flows with the adjusting screws.

NOTE: Their respective adjustment values are shown in the attached Table. See "Summary of Regulator Adjustment Values" on page -38.

Adjustment of Maximum Flow

Adjust it by loosening the hexagon nut (809) and by tightening (or loosening) the set screw (954). The maximum flow only is adjusted without changing other control characteristics.

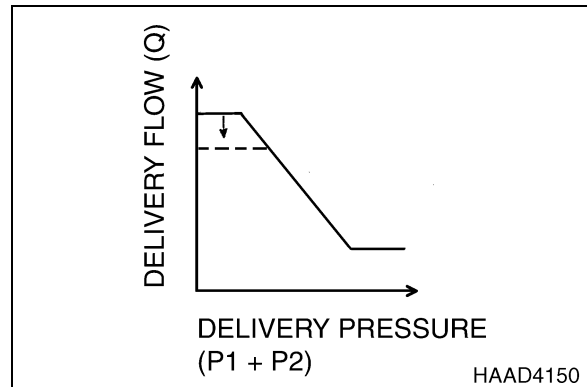


Figure 30

Adjustment of Minimum Flow

Adjust it by loosening the hexagon nut (909) and by tightening (or loosening) the hexagonal socket head set screw (953). Similarly to the adjustment of the maximum flow, other characteristics are not changed. However, remember that, if tightened too much, the required horsepower during the maximum delivery pressure (or during relieving) may increase.

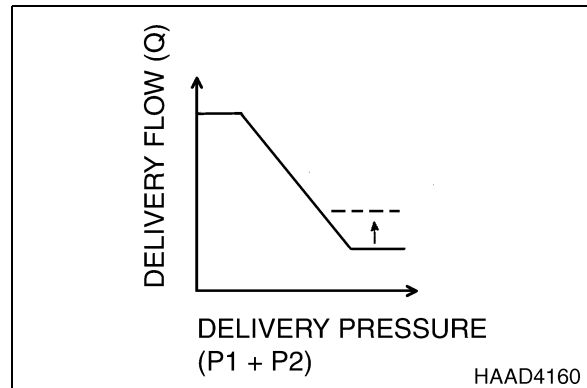


Figure 31

Summary of Regulator Adjustment Values

Item			Specification
Speed			2200 min ⁻¹
Adjustment of Maximum Flow		Tightening amount of adjusting screw (954)	+1/4 Turn
		Flow change amount	-3.5 L/min
Adjustment of Minimum Flow		Tightening amount of adjusting screw (953)	+1/4 Turn
		Flow change amount	+3.5 L/min
Adjustment of Input Horsepower	Adjustment of outer spring	Tightening amount of adjusting screw (C) (628)	+1/4 Turn
		Compensating control starting pressure change amount	+19 kg/cm ²
		Input torque change amount	+3 kg•m
		A	1.9
	Adjustment of inner spring	Tightening amount of adjusting screw (QI) (925)	+1/4 Turn
		Compensating control starting pressure change amount	+27 kg/cm ²
		Input torque change amount	+2.5 kg•m
Adjustment of flow control characteristic	Tightening amount of adjusting screw (924)	+1/4 Turn	
	Flow control starting pressure change amount	+1.5 kg/cm ²	
	Flow change amount	+8 L/min	

FAULT FINDING AND REMEDIES ON REGULATOR

In case a functional fault probably resulting from the regulator occurs, disassemble and inspect it, referring to the maintenance manual.

Prime Mover is Overloaded

Determine which is faulty, the front pump or rear pump, by loading each pump independently. When both pumps are found faulty, investigate the following (1) and (2). Begin investigation with (3), when only one pump is found faulty. (1) and (2) are only for cases of the variable horsepower control.

1. Check that the power shift command current I is normal.
2. The power shift pressure is low:
 - Check the amplifier dither.
 - Replace the proportional pressure reducing valve.
3. The compensating piston (621) and compensating rod (623) are stuck with each other:
 - Disassemble and clean the regulator.
4. The Pin (898) is stuck:
 - Disassemble and clean the regulator.

Maximum Flow Is Not Available

1. Check that the pilot pressure P_i is normal.
2. The pilot piston (643) is stuck:
 - Disassemble and clean the regulator.
3. The spool (652) is stuck:
 - Disassemble and clean the regulator.
4. The piston QMC stopper (647) and piston (648) are stuck with each other:
 - Disassemble and clean the regulator.
5. The spool (COV) (637) is stuck:
 - Disassemble and clean the regulator.

NOTE: *Replace faulty parts that are deeply scored.*

(1) and (2) are only for cases of the pilot control.

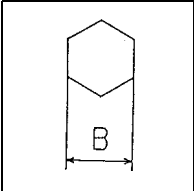
(4) is only for cases of the 2-stage max. flow control.

(5) is only for cases of the cut-off control.

PREPARATION FOR DISASSEMBLY

1. Since the regulator consists of small precision-finished parts, disassembly and assembly are rather complicated. For this reason, replacement of a regulator assembly is recommended, unless there is a special reason, but in case disassembly is necessary for an unavoidable reason, read through this manual to the end before starting disassembly.
2. The numbers in parentheses after part names represent those in the “Construction of Regulator” on page 28.

TOOLS

Name	Description
Allen wrench	4,5,6 (Dimension B mm) 
Socket wrench, double-ended (single-ended) wrench	
Adjustable wrench	Small size (max. 36 mm)
Screw driver	
Plastic hammer	
Torque wrench	
Pliers	2 sets for stop ring
Steel bar	4 mm or less in dia., L=100mm
Pincers	
Bolt	M4, L = about 50 mm

REGULATOR DISASSEMBLY

1. Choose a place for disassembly.



CAUTION!

1. Choose a clean place.
2. Spread rubber mat or cloth, on top of work-bench to prevent parts from being damaged.

2. Remove dust, rust, etc. from surfaces of regulator with cleaning oil.
3. Remove hexagon socket head screws (412,413) and regulator main body from pump main body.

IMPORTANT

Do not lose O-ring.

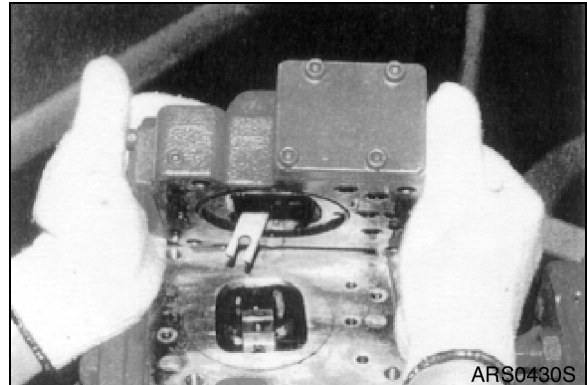


Figure 32

4. Remove hexagon socket head screws (488) and cover (C) (629).

IMPORTANT

Cover (C) is attached with adjusting screw (C), (QI) (628, 925), adjusting ring (C) (627), lock nut (630), hexagon nut (801) and adjusting screw (924). Do not loosen these screws and nuts. If they are loosened, adjusted pressure-flow setting will vary.

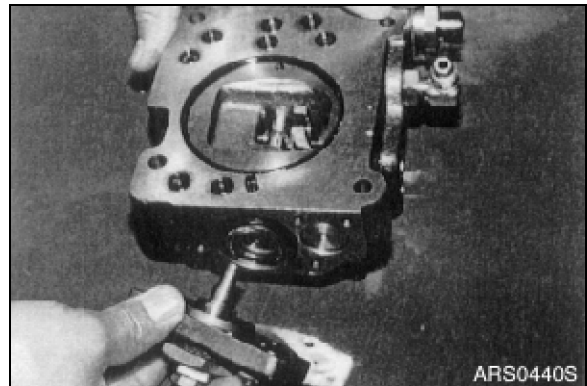


Figure 33

5. After removing cover (C) (629) subassembly, remove outer spring (625), inner spring (626) and spring seat (C) (624) from compensating section. Then draw out adjusting ring (Q) (645), pilot spring (646) and spring seat (644) from pilot section.

IMPORTANT

Adjusting ring (Q) (645) can easily be drawn out with M4 bolt.

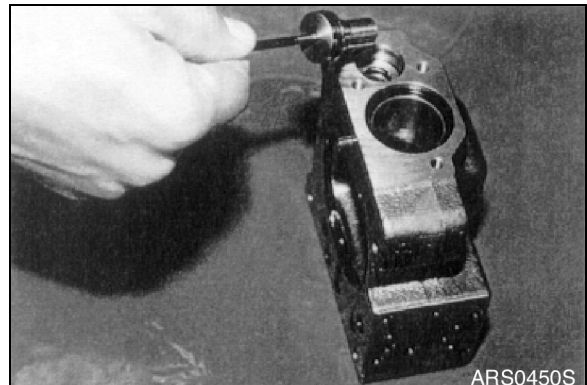


Figure 34

6. Remove hexagon socket head screws (436, 438) and pilot cover (641). After removing pilot cover, remove set spring (655) from pilot section.

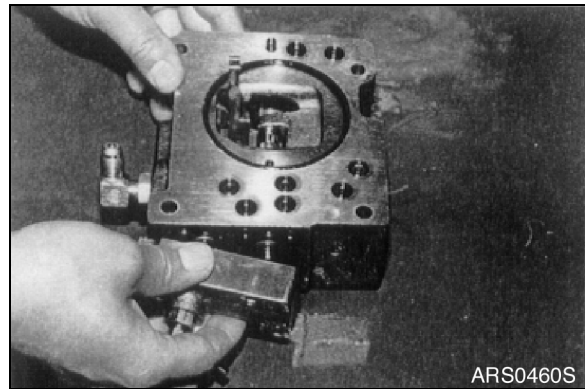


Figure 35

7. Remove snap ring (814), spring seat (653), return spring (654) and sleeve (651).

IMPORTANT

Sleeve (651) is attached with snap ring (836).

When removing snap ring (814), return spring (654) may pop out. Take care not to lose it.

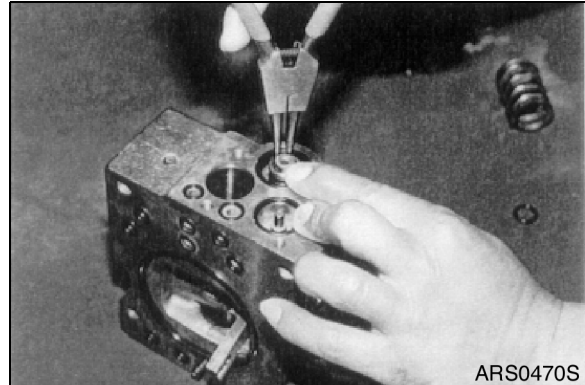


Figure 36

8. Remove locking ring (858), fulcrum plug (614) and adjusting plug (615).

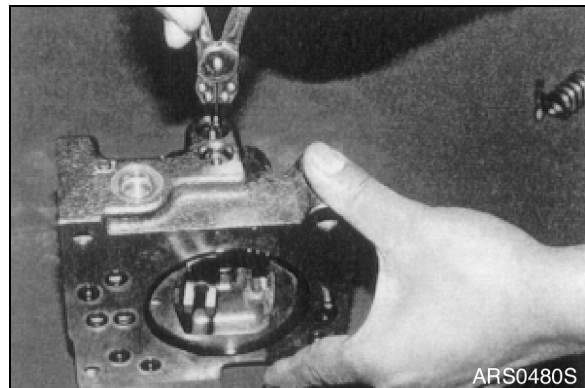


Figure 37

IMPORTANT

Fulcrum plug (614) and adjusting plug (615) can be easily taken out with M6 bolt.

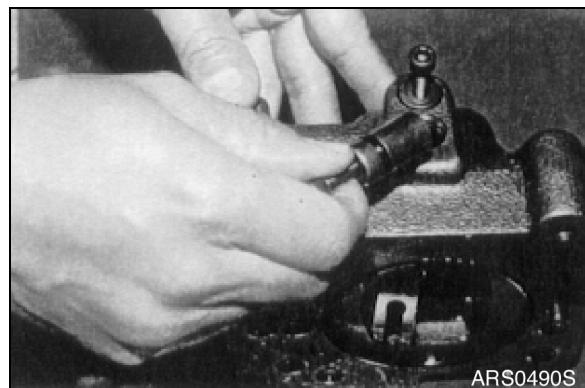


Figure 38

9. Remove lever (2) (613). Do not draw out pin (875).

IMPORTANT

Work will be promoted by using pincers.

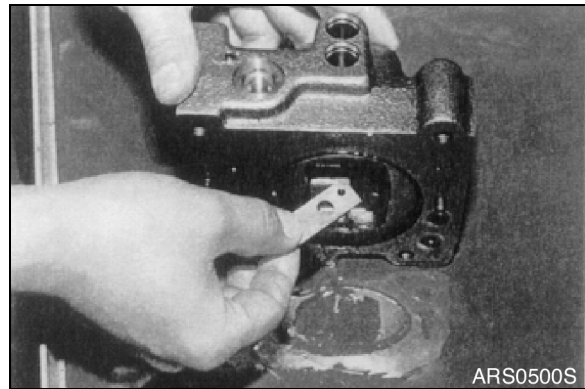


Figure 39

10. Draw out pin (874) and remove feedback lever (611).

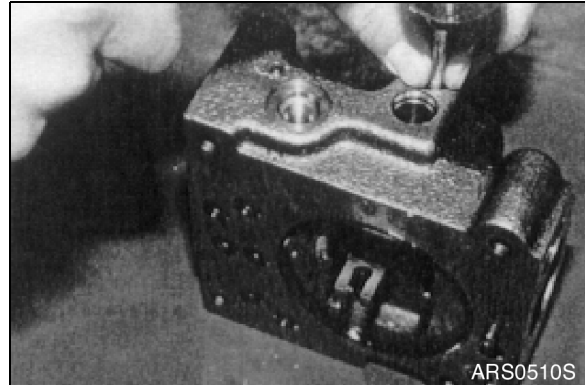


Figure 40

IMPORTANT

Push out pin (874) (4 mm in dia.) from above with slender steel bar so that it may not interfere with lever (1) (612).

11. Remove lever (1) (612). Do not draw out pin (875).
12. Draw out pilot piston (643) and spool (652).
13. Draw out piston case (622), compensating piston (621) and compensating rod (623).

NOTE: Since component parts are small, do not lose them.

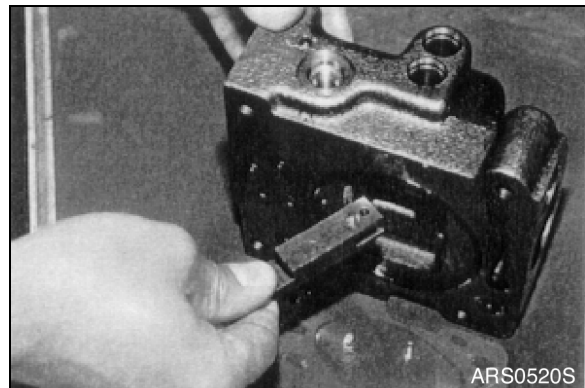


Figure 41

REGULATOR REASSEMBLY

For assembly, reverse disassembly procedures, but pay attention to the following.

- Always repair parts that were scored at disassembly. Get replacement parts ready beforehand.
 - Mixing of foreign material will cause malfunction. Therefore, wash parts well with cleaning oil, let them dry with jet air and handle them in clean place.
 - Always tighten bolts, plugs, etc. to their specified torques.
 - Do not fail to coat sliding surfaces with clean hydraulic oil before assembly.
 - Replace seals such as O-rings with new ones as a rule.
1. Put compensating rod (623) into compensating hole of casing (601).
 2. Press fit pin in lever (1) (612) into groove of compensating rod and fit lever (1) to pin press fitted in casing.
 3. Install spool (652) and sleeve (651) into hole in spool of casing.

IMPORTANT

Confirm that spool and sleeve slide smoothly in casing without binding.

Pay attention to orientation of spool.

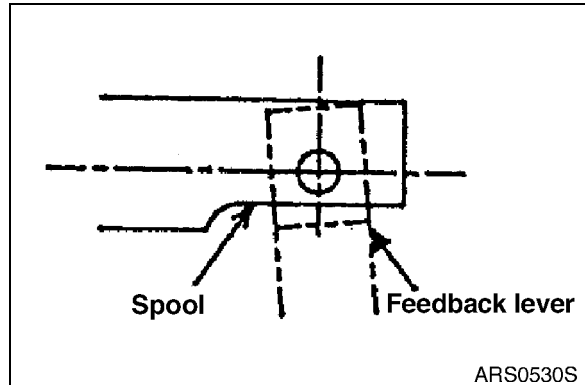


Figure 42

4. Install feedback lever (611), matching its pin hole with pin hole in spool. Then insert pin (874).

IMPORTANT

Insert pin in feedback lever a little to ease operation.

Do not mistake direction of feedback lever.

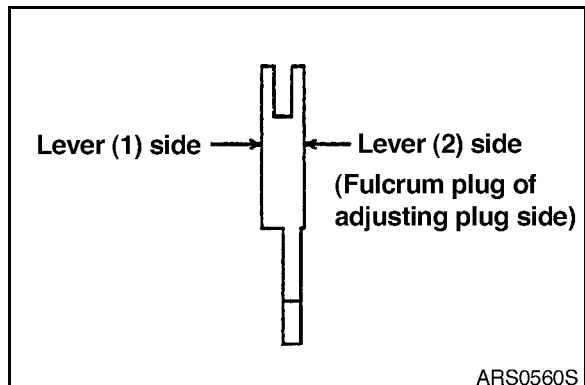


Figure 43

5. Insert pilot piston (643) into pilot hole of casing.

IMPORTANT

Confirm that pilot piston slides smoothly without binding.

6. Press fit pin in lever (2) (613) into groove of pilot piston. Then attach lever (2).

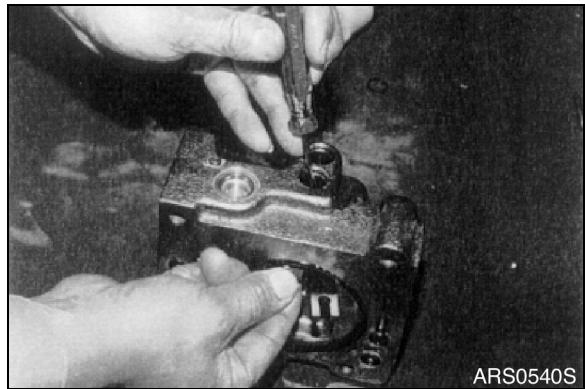


Figure 44

7. Install fulcrum plug (614) so that pin pressed into fulcrum plug (614) can be inserted into pin hole of lever (2). Then attach locking ring (858).
8. Insert adjusting plug (615) and install locking ring.

IMPORTANT

Do not mistake inserting holes for fulcrum plug and adjusting plug.

Now move feedback lever to confirm that it has no large play and is free from binding.

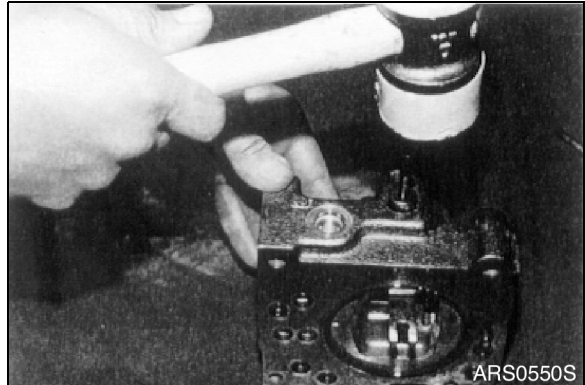


Figure 45

9. Install return spring (654) and spring seat (653) into spool hole. Install snap ring (814).

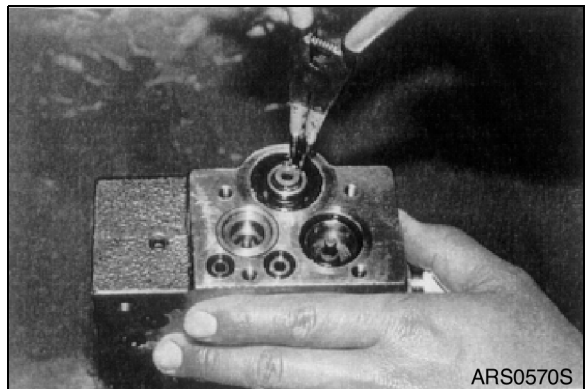


Figure 46

10. Install set spring (655) in spool hole. Slide compensating piston (621) and piston case (622) into compensating hole.
11. Install pilot cover (641) and secure it in place with hexagonal socket head screws (436 and 438).

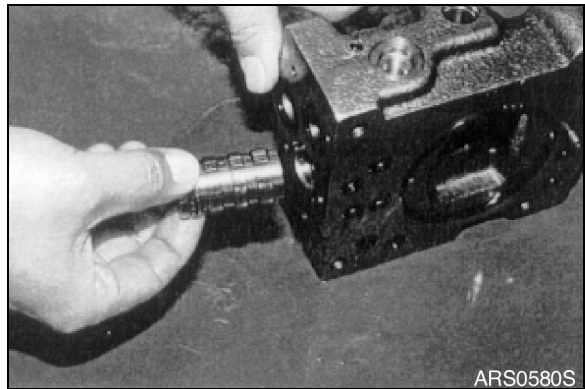


Figure 47

12. Insert spring seat (644), pilot spring (646) and adjusting ring (Q) (645) into pilot hole.
13. Install spring seat (624), inner spring (626) and outer spring (625) into compensating hole.

IMPORTANT

When fitting spring seat, do not mistake direction of spring seat.

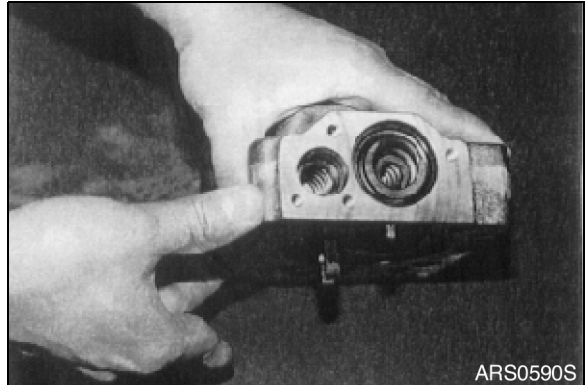


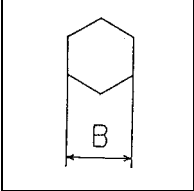
Figure 48

14. Install cover (C) (629) with adjusting screws (628 and 925), adjusting ring (C) (627), lock nut (630), hexagon nut (801) and adjusting screw (924). Secure them with hexagonal socket head screws (438).



Figure 49

TIGHTENING TORQUE

Part Name	Size	Tightening Torque	Tool Name	
Hexagon socket head bolt (Material: SCM 435)	M 5	70 kg•cm	B = 4	 Allen wrench
	M 6	120 kg•cm	5	
	M 8	300 kg•cm	6	
	M 10	580 kg•cm	7	
	M 12	1,000 kg•cm	8	
	M 14	1,600 kg•cm	10	
	M 16	2,400 kg•cm	12	
	M 18	3,400 kg•cm	14	
	M 20	4,400 kg•cm	17	
PT filling plug (Material: S45C) Wind a seal tape 1 1/2 to 2 turns round the plug.	PT 1/16	70 kg•cm	4	Do.
	PT 1/8	105 kg•cm	5	
	PT 1/4	175 kg•cm	6	
	PT 3/8	350 kg•cm	8	
	PT 1/2	500 kg•cm	10	
PO plug (Material: S35C)	PF 1/4	300 kg•cm	6	Do.
	PF 1/2	1,000 kg•cm	10	
	PF 3/4	1,500 kg•cm	14	
	PF 1	1,900 kg•cm	17	
	PF 1 1/4	2,700 kg•cm	17	
	PF 1 1/2	2,800 kg•cm	17	



MAIN CONTROL VALVE (KAYABA)



CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that is in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

MODEL	SERIAL NUMBER RANGE
Solar 300LC-V	1001 and Up
Solar 340LC-V	1001 and Up

TABLE OF CONTENTS

General Description.....	5
When All Spools are in Neutral	5
Neutral Passage.....	5
Signal Passage	8
Single Operation	10
Travel Spool Shifting	10
Spare Spool Shifting	10
Swing Spool Shifting.....	12
Bucket Spool Shifting.....	12
Boom Spool Shifting	14
Arm Spool Shifting	17
Parallel Orifice for Arm	20
Relief Valve	21
Combined Operation.....	22
Bucket Combined Operation	24
Antidrift Valve	25
Main Relief Valve.....	26
Overload Relief Valve (69, Total: Six Places)	27
Low Pressure Relief Valve (70, Total: Two Places)	28
Generation of Signal Pressure.....	28
Relief Operation	29
Parts List	30
Spool Assembly (2, Arm 2)	34
Spool Assembly (3, Boom1)	34
Spool Assembly (4, Bucket).....	34
Spool Assembly (5, Travel).....	35
Spool Assembly (6, Straight Travel)	35
Spool Assembly (14, Arm1)	35
Spool Assembly (15, Boom 2)	36
Spool Assembly (16, Swing)	36

Spool Assembly (17, Option)	36
Spool Assembly (20, Arm Regeneration Release Valve	36
Spacer Assembly (40).....	37
Plug Assembly (60).....	37
Anti-draft Valve Assembly (67)	38
Relief Valve Assembly (70)	39
Plug Assembly (90).....	39
Specifications	39
Troubleshooting, Testing and Adjustment.....	40
General	40
Relief Valve	41
Hydraulic System	41
Adjustment of Relief Valve	41
Main Relief Valve	41
Over Load Relief Valve	42
Disassembly	43
General Instructions for Disassembly.....	43
Disassembly of Main Spool Part	43
Disassembly of Arm 1 Para Spool Turn	44
Disassembly of Arm Regeneration Release Valve Part.....	45
Disassembly of Rod Check Valve Part.....	45
Disassembly of Antidrift Valve.....	46
Disassembly of Relief Valve	47
Disassembly of Spare Section Part	47
Disassembly of Miscellaneous Plug Kind	47
Disassembly of Valve Housing Combined Bolt	47
Disassembly of Main Relief Valve	48
Disassembly of Overload Relief Valve	48
Disassembly of Low Pressure Relief Valve	49
Cleaning and Inspection (Wear Limits and Tolerances)	50
Cleaning	50
Inspection.....	50
Reassembly.....	50

Instructions for Reassembly	50
Handling Instructions of O-ring	50
Handling Instructions for Spool	50
Application Method of Loctite	51
Procedure of Subassembly	51
Reassembly of Spool Assembly (Main Spool)	51
Reassembly of Arm 1 Para Turn Spool Assembly	52
Reassembly of Antidrift Valve Assembly	52
Reassembly Procedure of Control Valve Body	53
Reassembly of Relief Valve	53
Reassembly of Load Check Valve	53
Reassembly of Antidrift Valve	54
Reassembly of Spare Section Part	54
Reassembly of Arm Regeneration Release Valve	54
Reassembly of Arm 1 Para turn Spool.....	54
Reassembly of Main Spool	55
Reassembly of Miscellaneous Plug Kinds	55
Reassembly of Main Relief Valve.....	55
Reassembly of Overload Relief Valve	57
Reassembly of Low Pressure Relief Valve	57
Installation	58
Start-up Procedures	58

GENERAL DESCRIPTION

WHEN ALL SPOOLS ARE IN NEUTRAL

Neutral Passage

Oil supplied to port (P1, Figure 1 and Figure 2) flows through neutral passage (L1) to low pressure relief valve orifice (Lc1), to tank passage (Ta) and returns to ports (T1, T2, and T3).

Oil supplied to port (P1) flows through neutral passage (R1), to low pressure relief valve orifice (Rc1), then to tank passage (Ta), and returns to ports (T1, T2, and T3).

The pressures of low pressure relief valve upper chambers (L2 and R2) reach through ports (ps1 and ps2) to pumps and control displacement of pumps (P1 and P2).

If too much oil flows into neutral passages, low pressure relief valves are activated, and protect ports (P1 and P2) from rising pressures.

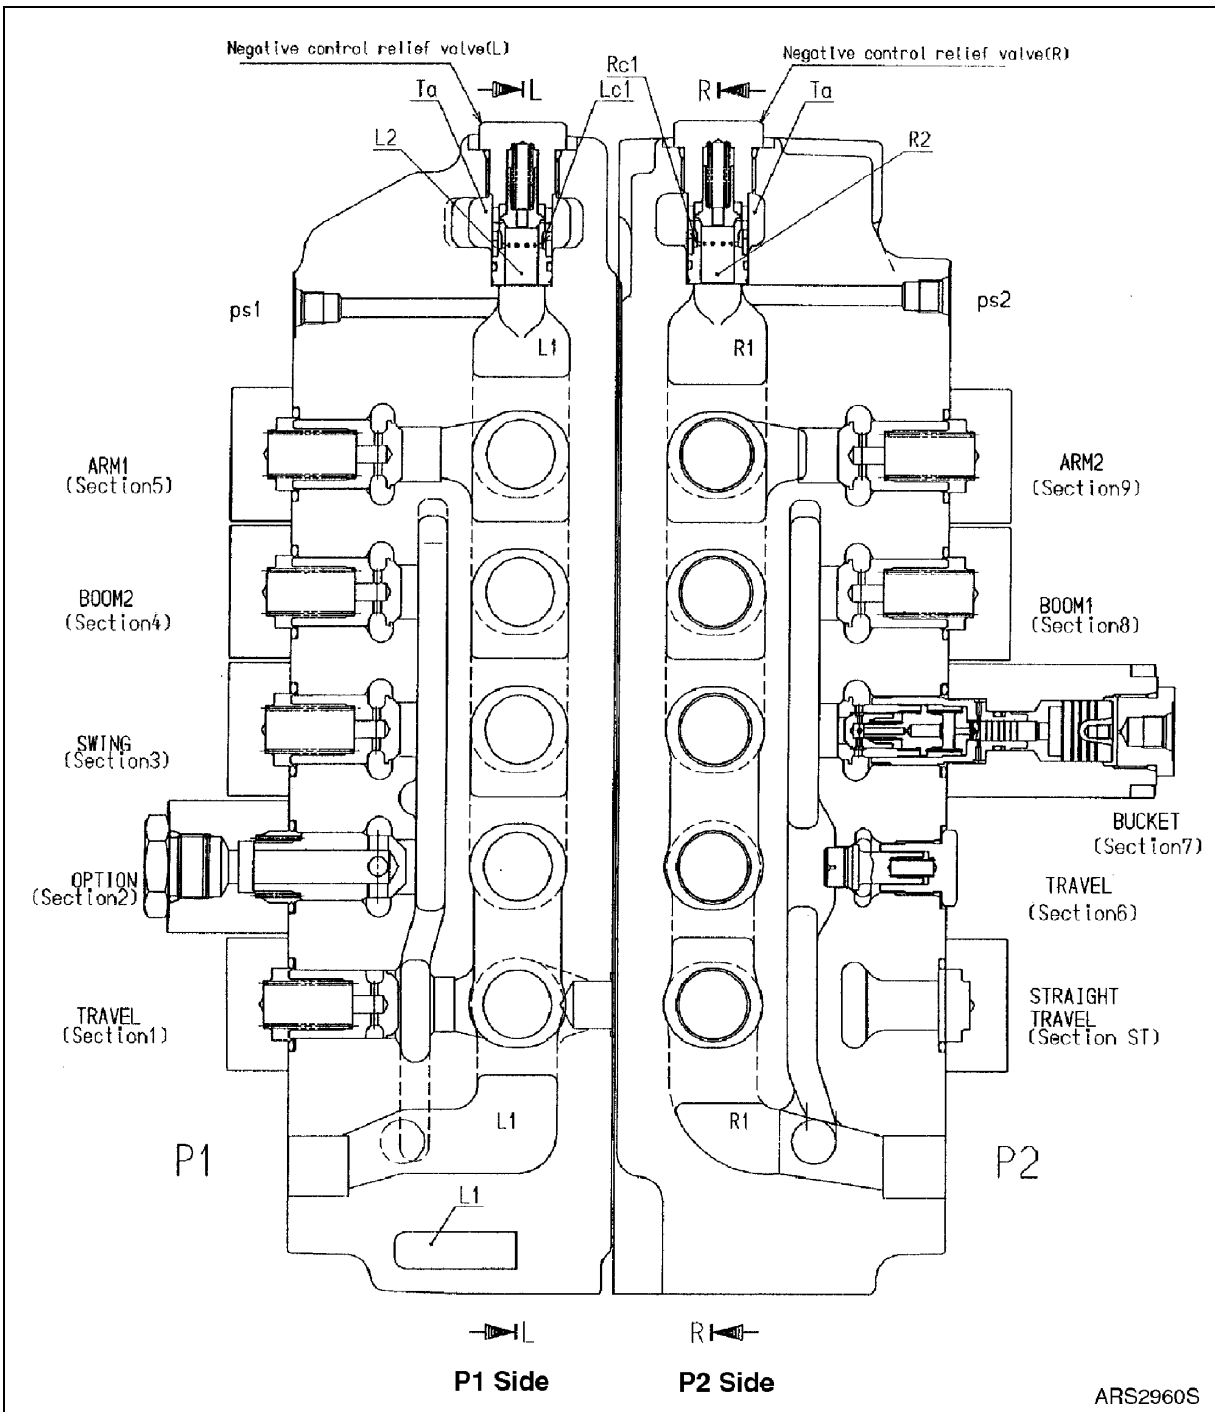


Figure 1

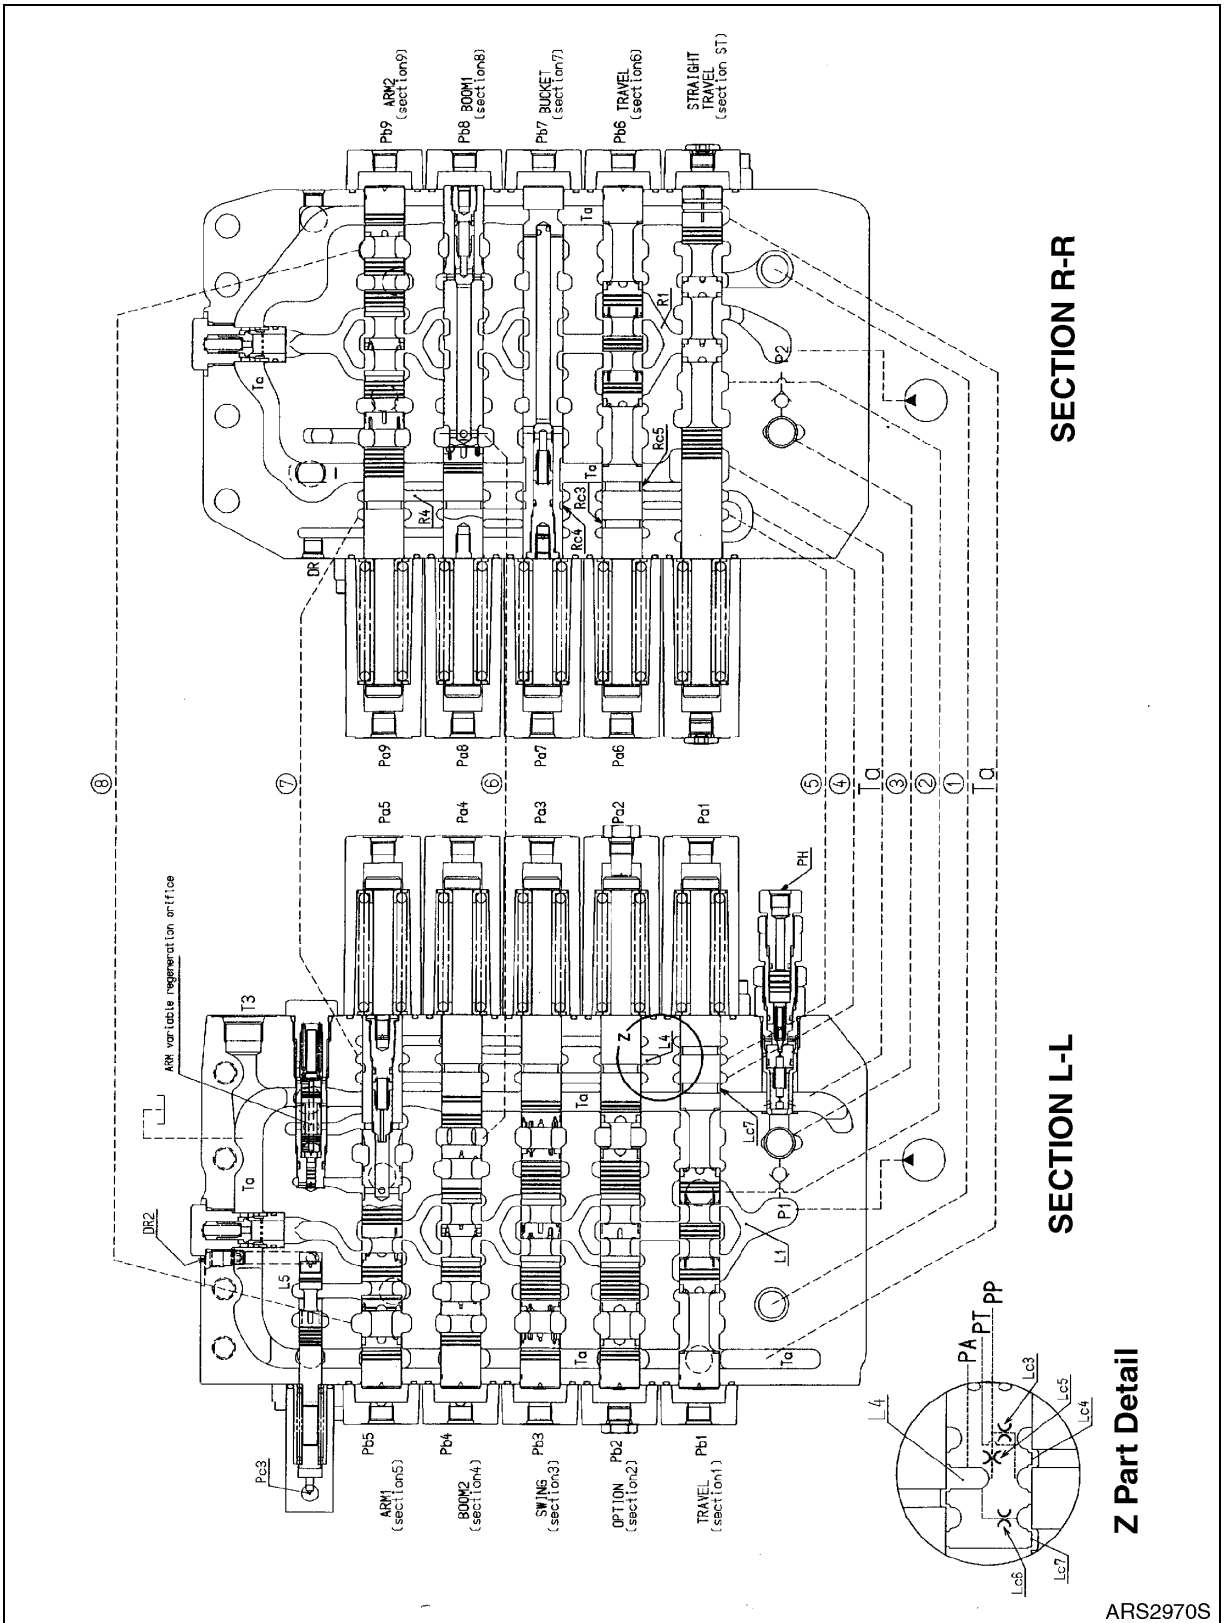


Figure 2

Signal Passage

1. Oil supplied to port (PP, Figure 2 and Figure 3) flows through orifice (Lc3) to port (PT) and simultaneously flows through land (Lc4), passage (5), and land (Rc3) into tank passage (Ta).
2. The same oil supplied to port (PP), then flows through orifice (Lc5) into port (PA), and it also flows through passages (L4)(7) and (R4) to bucket spool land (Rc4) and then flows into drain passage (DR).
3. The oil passing through orifice (Lc6) flows through land (Lc7) to tank passage (Ta) or flows through passage (4) to travel spool land (Rc5) and then flows into tank passage (Ta).

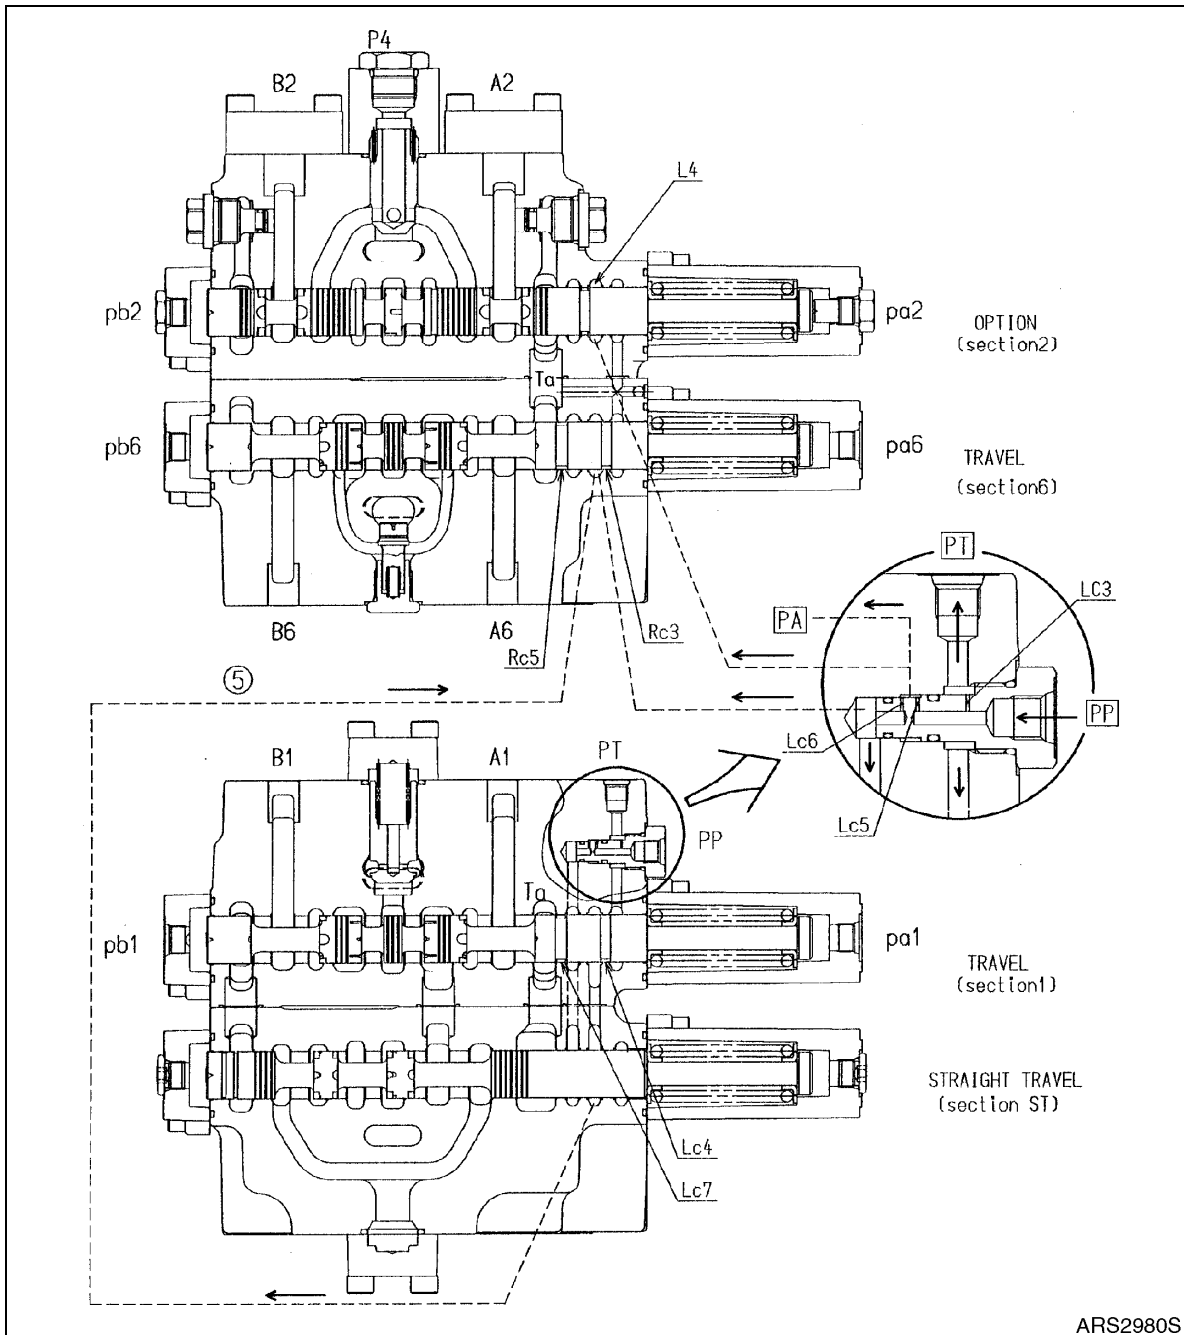


Figure 3

SINGLE OPERATION

Travel Spool Shifting

1. When shifting travel spool by increasing pressure of travel (section 1, Figure 4) pilot port (Pb1 (Pa1)), oil supplied to port (P1) flows through neutral passage (L1) to spool and flows to port (B1 (A1)). Return oil flows through port (A1 (B1)), to spool and returns to tank passage (Ta).
2. When shifting travel spool by increasing pressure of travel (section 6) pilot port (Pb6 (Pa6)), oil supplied to port (P2) flows through neutral passage (R1) to spool or passage (S6-1) and flows to port (B6 (A6)). At this time, pressure of parallel passage (R3) and passage (S6-1) are equal, so poppet (S6-2) does not open. Return oil flows through port (A6 (B6)) to spool and returns to tank passage (Ta).
3. When shifting either spool (section 1 or 6), land (Lc4) or (Rc3) is closed. Oil supplied from port (PP) does not flow into tank passage, so that pressure at port (PT) rises.

Spare Spool Shifting

1. When shifting spare spool by increasing pressure of spare (section 2, Figure 4) pilot port (Pb2 (Pa2)), neutral passage (L1) is closed. Oil supplied to port (P1) flows through parallel passage (L3), load check valve (S2-2), passage (S2-1), and spool, it then flows to port (B2 (A2)). Return oil flows through port (A2 (B2)) to spool and returns to tank passage (Ta). When oil is also supplied from port (P4), it flows through load check valve (S2-2) and is combined at passage (S-1).

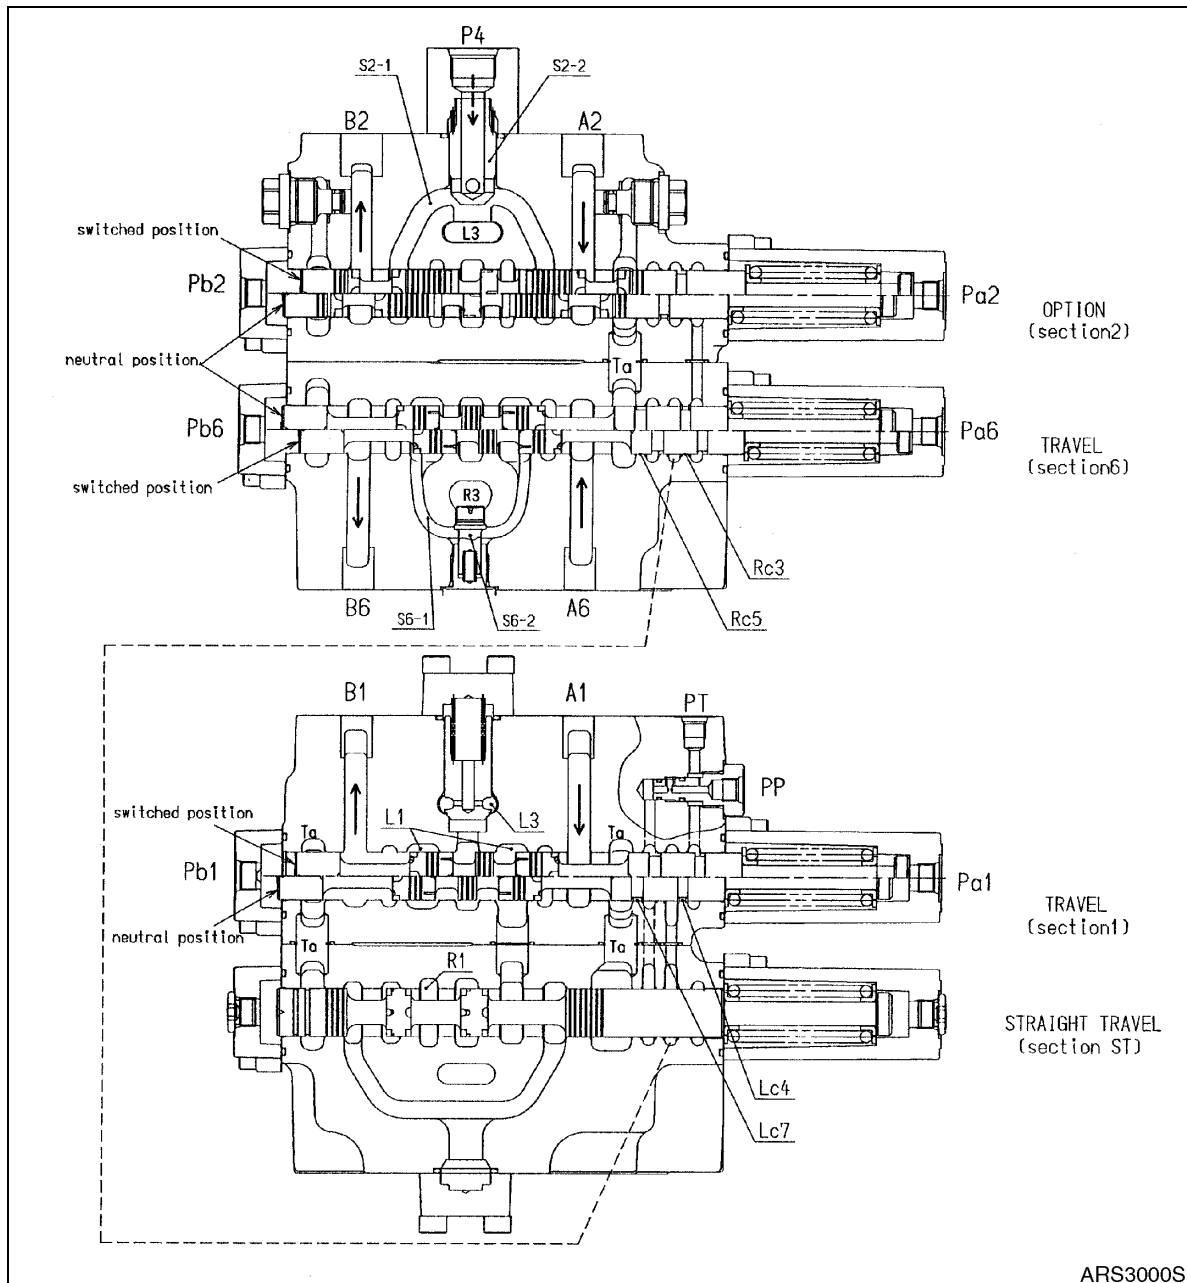


Figure 4

Swing Spool Shifting

1. When shifting swing spool by increasing pressure of swing (section 3, Figure 5) pilot port (Pb3 (Pa3)), neutral port (L1) is closed. Oil supplied to port (P1) flows through parallel passage (L3), load check valve (S3-2), passage (S3-1) and spool, it then flows to port (B3 (A3)). Return oil flows through port (A3 (B3)) to spool and is returned to tank passage (Ta).

Bucket Spool Shifting

1. Oil flow control in bucket section portion of valve is different from other sections because it has a regeneration function that works against pilot port pressure.

A. Dump

When bucket spool is shifted by increasing pressure of bucket (section 7, Figure 5) pilot port (Pa7), neutral passage (R1) is closed. Oil supplied to port (P2) flows through parallel passage (R3), load check valve (S7-2), passage (S7-1), spool and into port (B7). Oil returns through port (A7) and spool to tank passage (Ta).

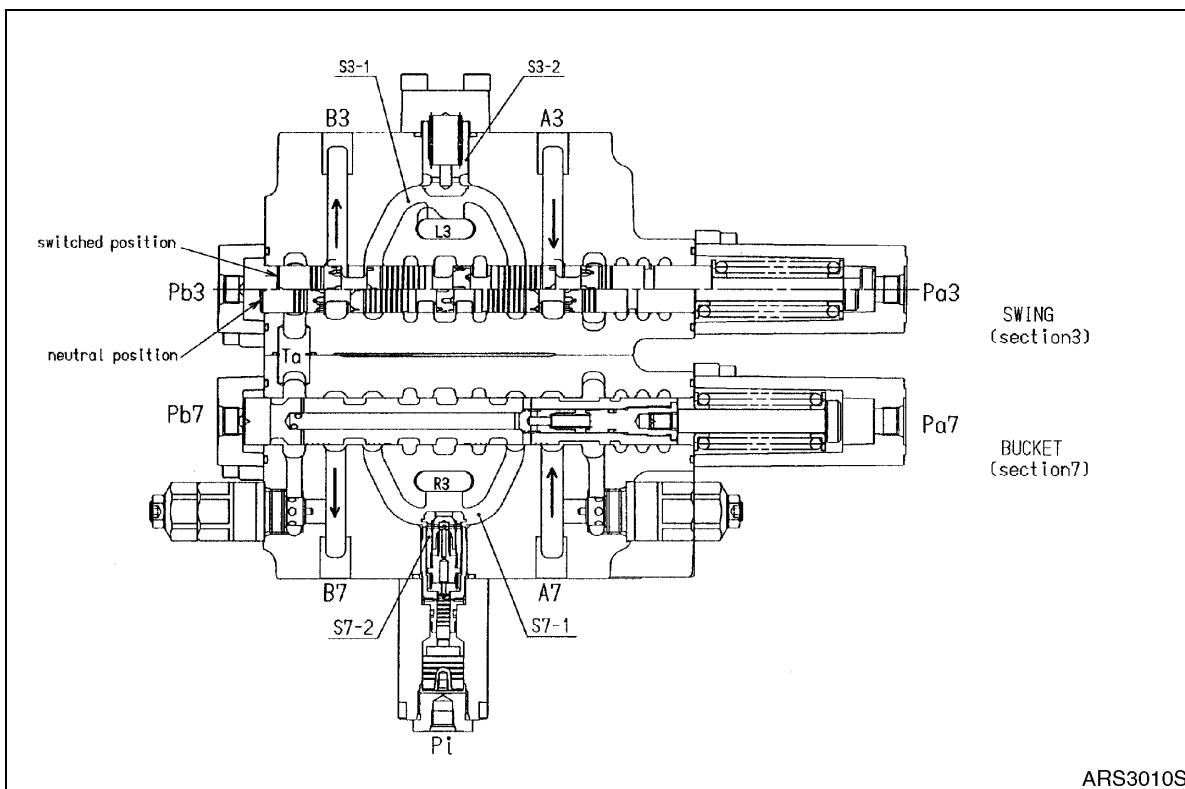


Figure 5

B. Crowd

When bucket spool is shifted by increasing pressure of bucket (section 7, Figure 6) pilot port (Pb7), neutral passage (R1) is closed. Oil supplied to port (P2) flows through parallel passage (R3), load check valve (S7-2), passage (S7-1), spool and into port (A7). Oil flows through port (B7) and one portion of the oil returns through spool to tank passage (Ta), and the other portion of oil flows through inside of spool, and pushes up load check, and then is combined at port (A7).

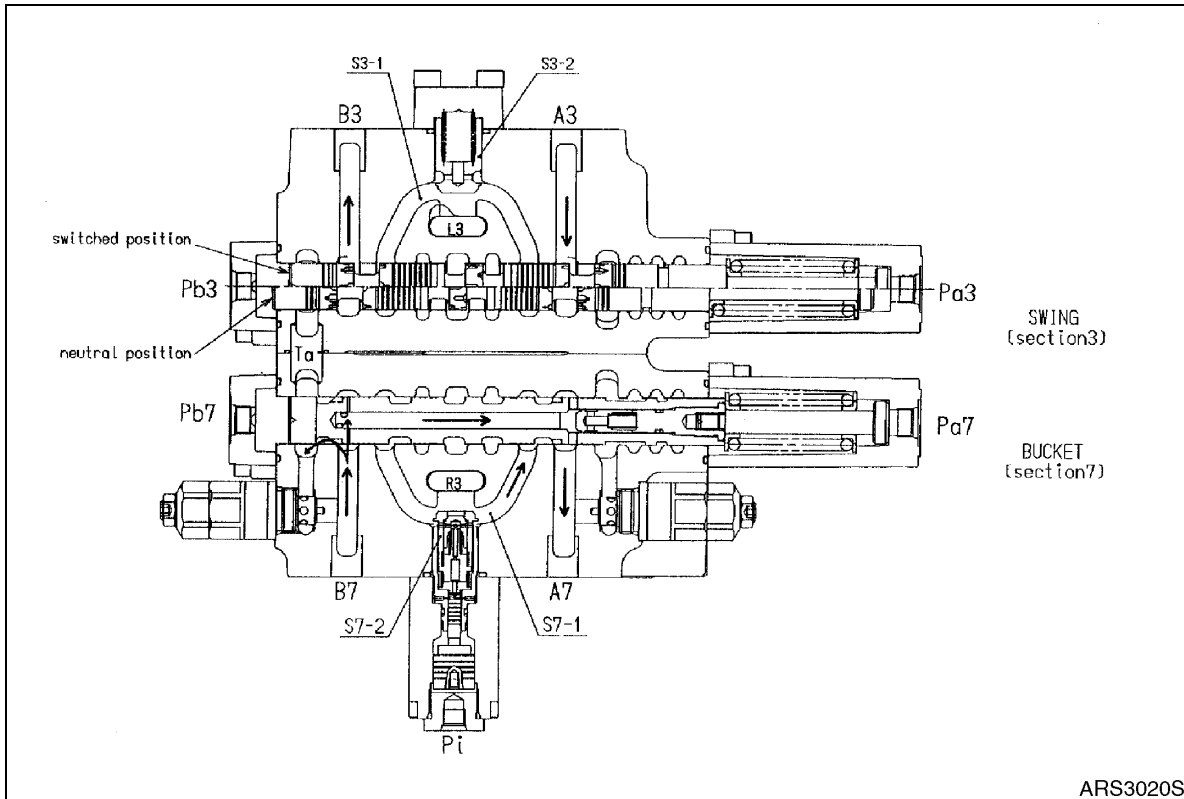


Figure 6

Boom Spool Shifting

1. Neutral

This valve also works with anti drift valves that are installed on the bottom side of each boom cylinder.

When in neutral, poppet (AD1, Figure 7) is closed by port (A8) pressure that is sent through passage (AD2), spool (AD3) to spring chamber (AD4).

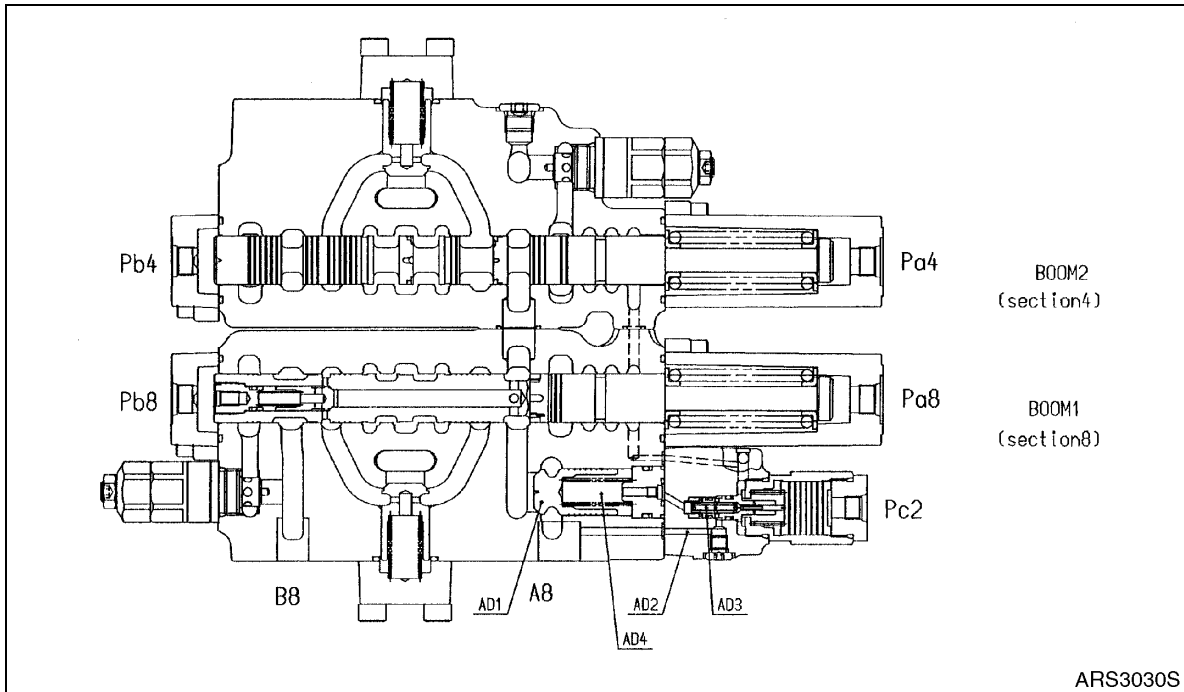


Figure 7

2. Boom Up (2 Speed Junction)

When boom 1 spool is shifted by increasing pressure of boom 1 (section 8, Figure 8) pilot port (Pa8), neutral passage (R1) is closed. Oil supplied to port (P2) flows through parallel passage (R3) and load check valve (S8-2) to spool and flows into port (A8).

When boom 2 spool is shifted by increasing pressure of boom 2 (section 4) pilot port (Pb4), neutral passage (L1) is closed. Oil supplied to port (P1) flows through parallel passage (L3), load check valve (S4-2), spool, and to passage (6) and joins at port (A8). Return oil flows from port (B8) to spool and returns to tank passage (Ta).

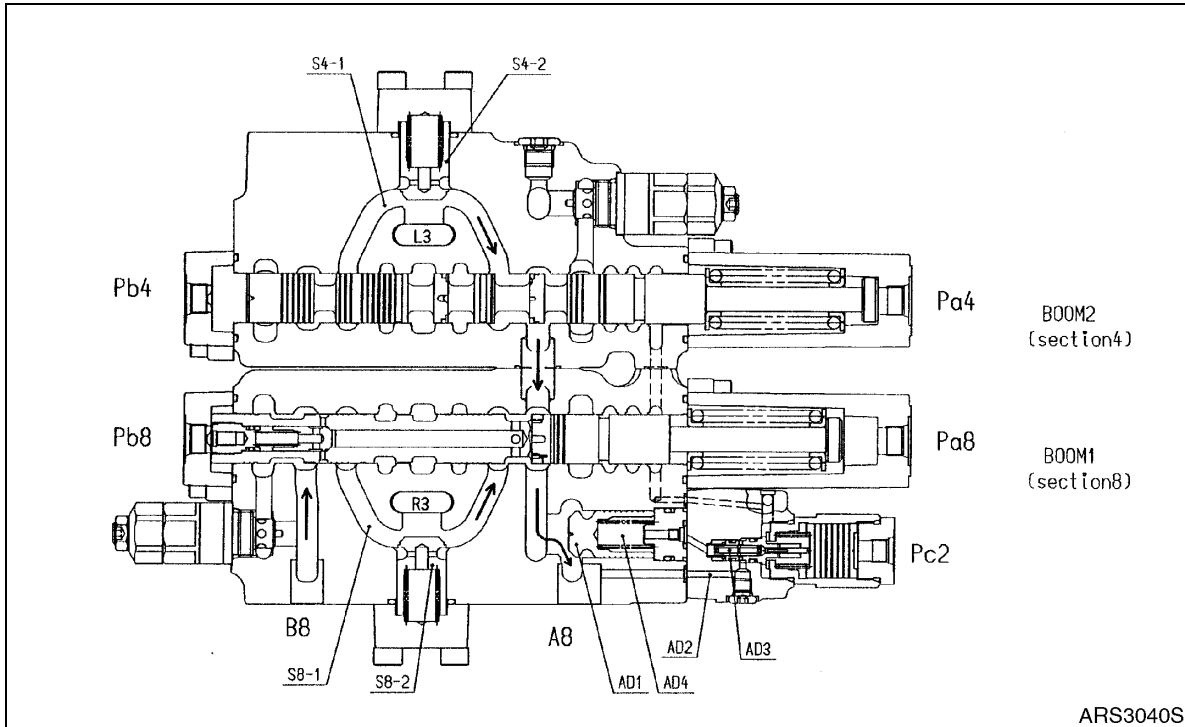


Figure 8

3. Boom Down (Regeneration)

When boom 1 (section 8, Figure 9) spool is shifted by increasing pressure of boom 1 pilot port (Pb8), neutral passage (R1) is closed. Oil supplied to port (P2) flows through parallel passage (R3) and load check valve (S8-2) to spool and flows into port (B8).

When spool (AD3) of antidrift valve is shifted by increasing pressure of port (P2), poppet (AD1) is opened by decreasing of pressure of spring chamber (AD4), and return oil from port (A8) flows to tank passage. Some return oil opens poppet (S8-3) in boom 1 spool, flows through passage (S8-2), joins at port (B7), and then prevents cavitation of cylinder rod side.

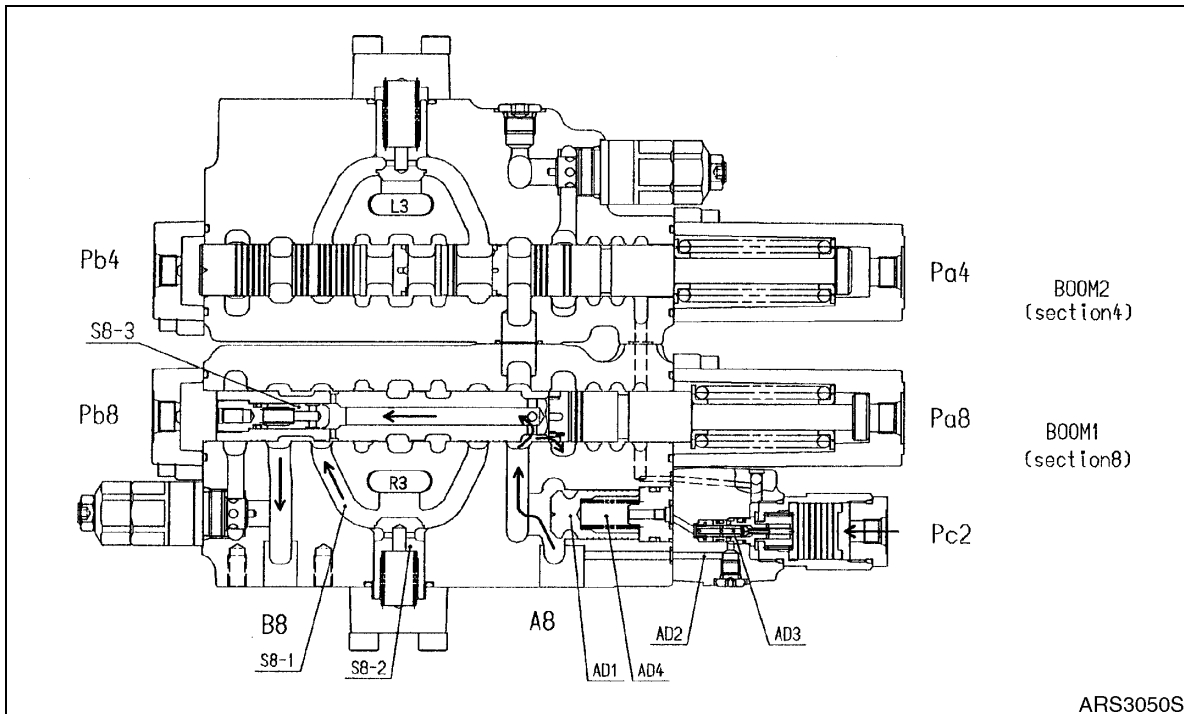


Figure 9

Arm Spool Shifting

1. Neutral

This valve also works with an anti drift valve that is installed on rod side of the arm cylinder.

When in neutral, poppet (AD1, Figure 10) is closed by port (A5) pressure that is sent through passage (AD2), spool (AD3) and to spring chamber (AD4).

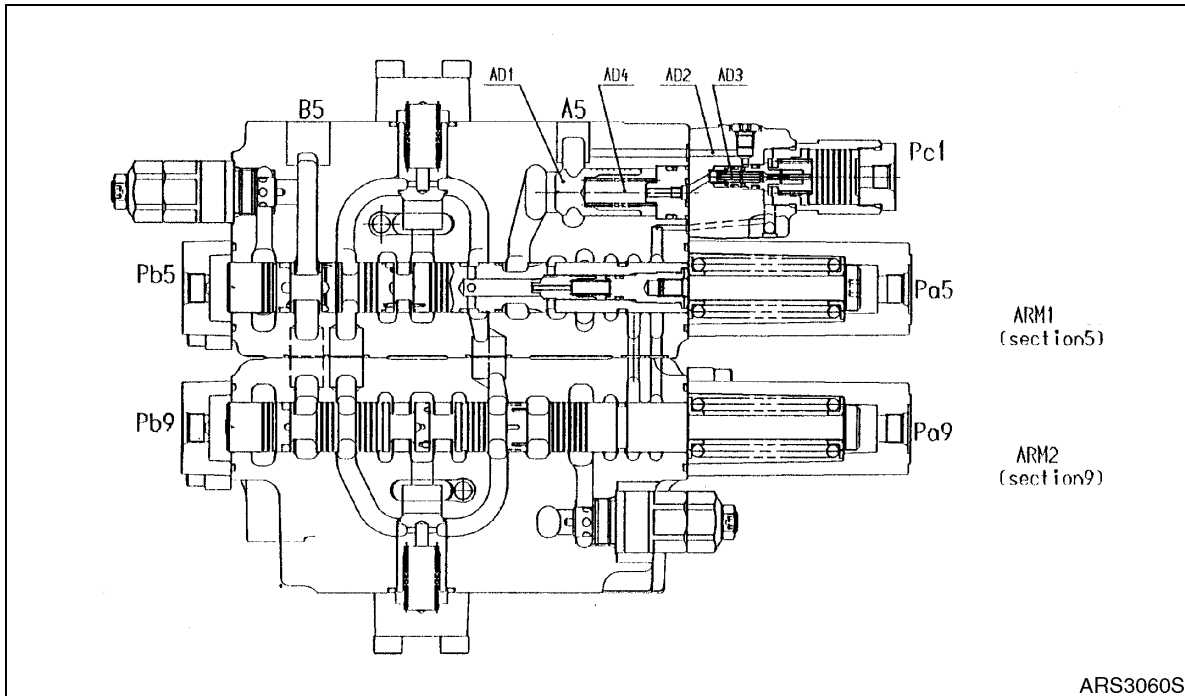


Figure 10

2. Arm Crowd (2 Speed Junction)

When arm 1 spool is shifted by increasing pressure of arm 1 (section 5, Figure 11) pilot port (Pb5), oil supplied to port (P1) flows through neutral passage (L1), load check valve (S5-2), passage (S5-1) and spool into port (B5).

When arm 2 spool is shifted by increasing pressure of arm 2 (section 9) pilot port (pb9), oil supplied to port (P2) flows through neutral passage (R1), load check valve (S9-1), passage (S9-2), and spool to passage (8) and joins at port (B5).

The return oil from port (B5) flows through regeneration check valve in spool, and then flows to port B to regenerate, and some oil returns through variable regeneration release valve to tank (Ta). (Refer to section 2-2)

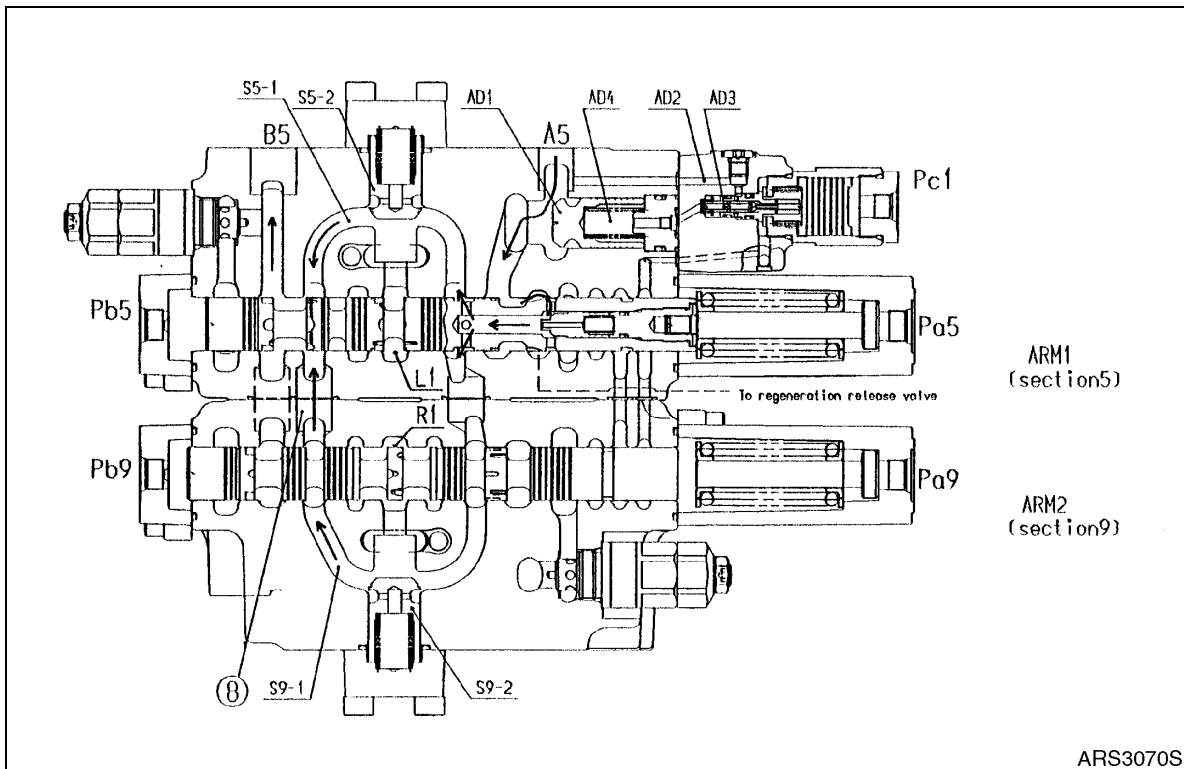


Figure 11

3. Arm Crowd (Variable Regeneration)

When crowding arm, after return oil from port (A5, Figure 12) flows through notch (a), one portion of the oil returns through fixed orifice (d), passage (e) and variable orifice (f) and to tank passage (Ta). The other portion of the oil flows through fixed orifice (b), regeneration check (c), and fixed orifice (i) in arm 1 spool, and joins in bridge passage (S5-1).

From there, if load pressure of port (B) is increased, it flows through regeneration release valve piston (g) and pushes regeneration release spool (h), as a result area of variable orifice (f) is increased, and oil returning to tank (Ta) is increased, and some oil to regenerate in port (B5) is decreased.

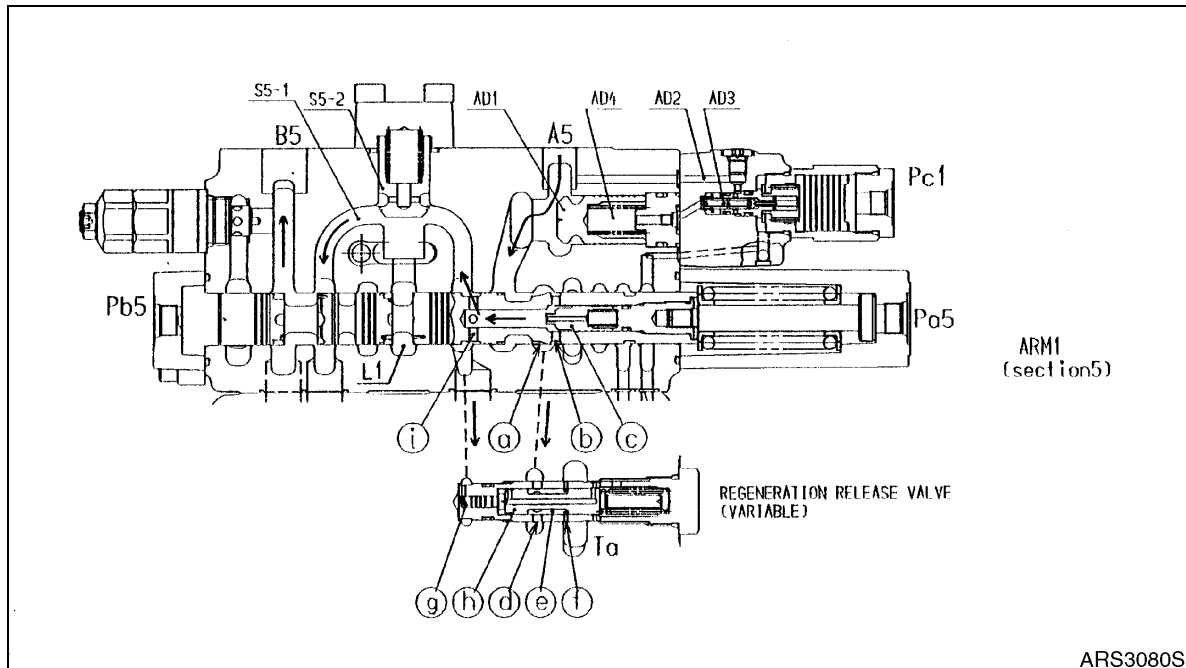


Figure 12

4. Arm Dump (2 Speed Junction)

When arm 1 spool is shifted by increasing pressure of arm 1 (section 5, Figure 13) pilot port (Pa5), oil supplied to port (P1) flows through neutral passage (L1), load check valve (S5-2), passage (S5-1) and spool and into port (A5).

Oil supplied to port (P2) flows through neutral passage (R1), load check valve (S9-2), passage (S9-1), spool and passage (8) and joins at port (A5). Return oil from port (B5) returns through spool to tank passage (Ta).

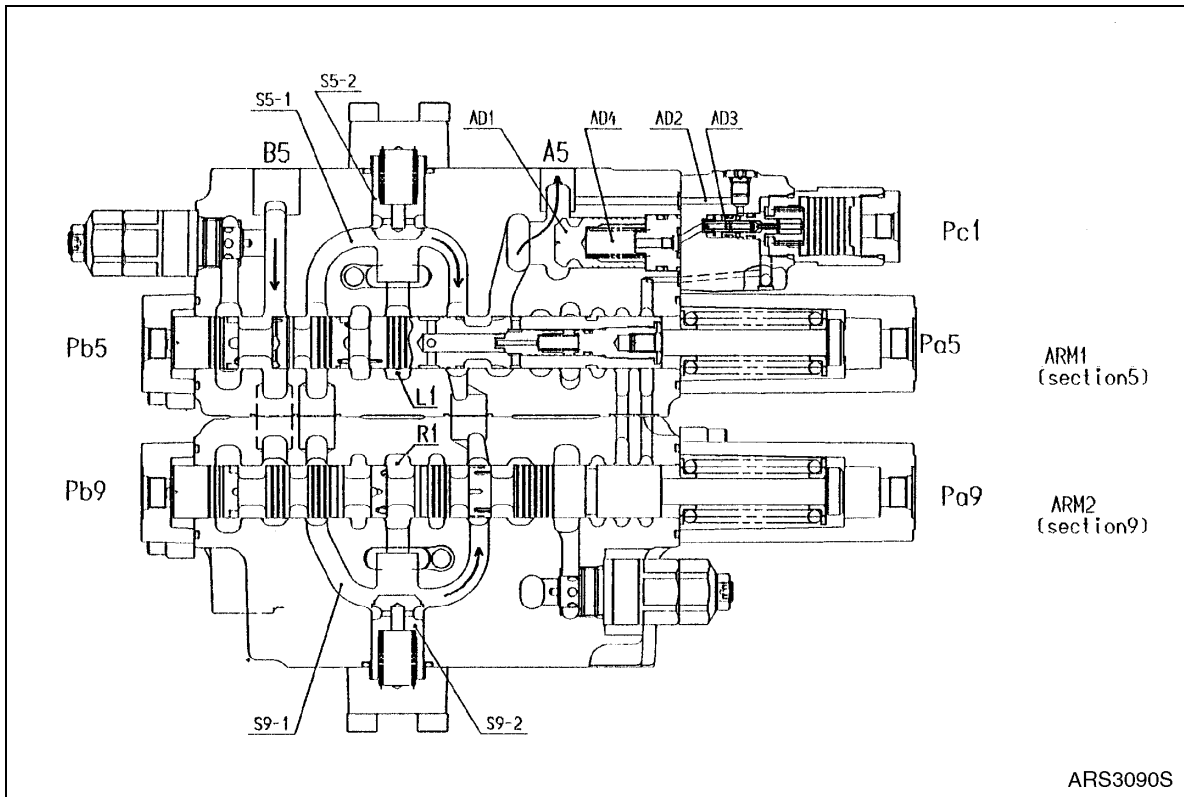


Figure 13

Parallel Orifice for Arm

The orifice, that is installed in parallel passage for arm 1, controls arm speed when operating in a combined operation. Oil supplied from parallel passage (L3, Figure 14) of arm 1 (section 5) pushes open poppet (S5-3). It then flows through orifice (Lc8) of variable orifice spool, and then is connected to passage (L5, Figure 3). From here, flow of orifice (Lc8) can be varied by increasing or decreasing pressure against pilot poppet (Pc3).

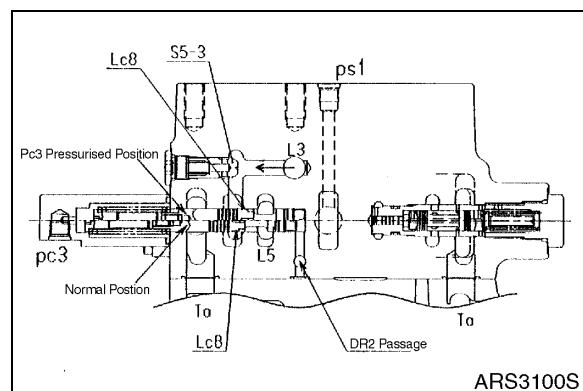


Figure 14

Relief Valve

1. Main Relief Valve

Oil supplied to port (P1, Figure 15) flows through poppet (LP). Oil supplied to port (P2) flows through poppet (RP) and passage (3). They join at the main relief valve. The highest pressure of pump (P1) and (P2) is controlled by reaction of main relief valve.

2. Over Load Relief Valve

The over load relief valve, that is installed in each cylinder port of boom 1, arm 1 and bucket, prevents pressure of actuator from increasing extremely high from outside forces. This relief valve, when pressure of cylinder port is negative, has a function to prevent cavitation by drawing oil from tank.

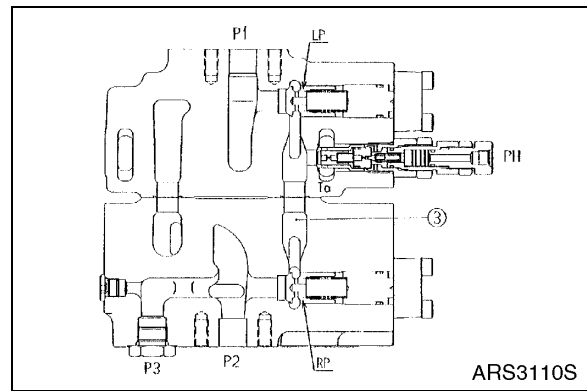


Figure 15

COMBINED OPERATION

When the unit is in operation the control valve spools will function differently, depending upon the type of operation and work being done.

The following spools are use for straight travel

Section 6: Travel

Section 1: Travel

Section ST: Straight Travel

When only travelling straight and no other functions are activated the following will occur:

Straight travel

Pump 1: 100% (Section 1: Travel)

Pump 2: 100% (Section 6: Travel)

PT: closed (The oil passage is closed at the land Lc4, Lc7, Rc3, and Rc5.)

PA: opened

PP: gear pump port

Signal passage pressure: Zero

There is no shifting pressure of Straight Travel.

When travel is combined with the operation of another function:

travelling ex(front)

Pump 1: 100% (Section 1: Travel) -

Pump 2: 50% (Section 6: Travel) 50%

- If there is no travel straight circuit, machine will travel in zig-zag manner.

PT: closed (The oil passage is closed at the signal land Lc4, Lc7, Rc3, and Rc5.)

PA: closed (The oil passage is closed at the signal land like PT)

Signal passage pressure: Rises up to relief pressure.

Straight Travel spool: shifting - If straight Travel spool is shifted, pump 1 supplies oil to Section 1 and 6 Travel and pump 2 supplies oil to ex(front).

travelling ex(front)

Pump 1: 100% (Section 1,6: Travel) -

Pump 2: - 100%

If the ex(front) pressure is higher than the travel pressure, some oil supplied from Pump 2 opens poppet S6-2, flows through poppet throttle and joins at passage S6-1.

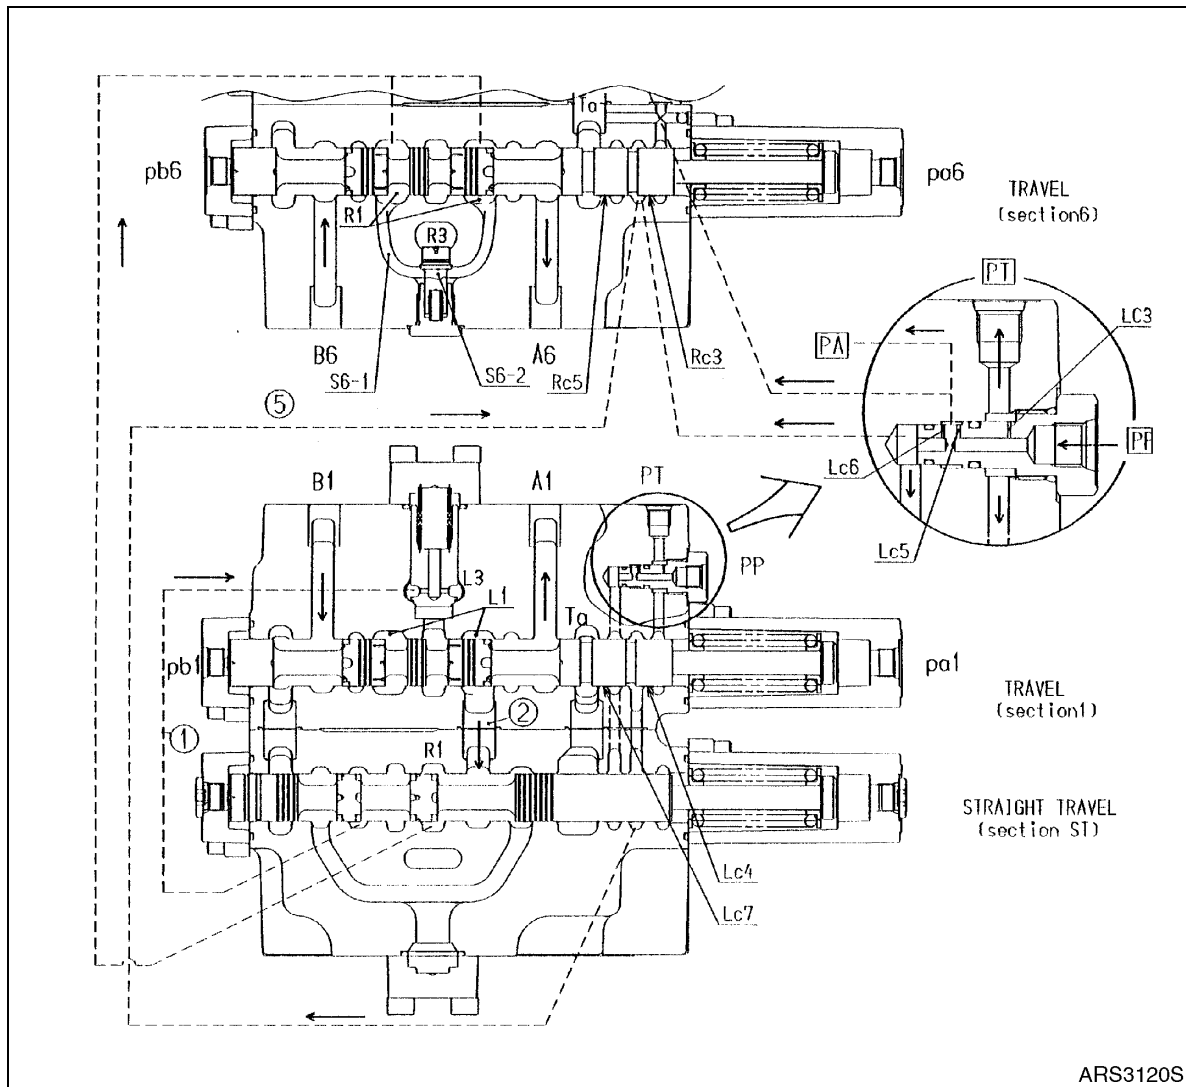
If main spool (travel, swing, etc.) of upper stream of L2(R2) operates, signal pressure of Ps1(Ps2) decreases because oil flowing to L2(R2) decreases.

When main spool acts, it reduces oil flowing to negacon valve.

Low pressure relief valve (negacon relief valve)

Pressure -> decreases

Flow -> decreases



ARS3120S

Figure 16

Bucket Combined Operation

A priority control valve is installed in bucket section 7, Figure 17). This valve controls oil flow entering into bucket when operating during a combined operation with travel, boom 1, and arm 2 sections, on P2 side.

If pressure at port (Pi) is increased when operating bucket, piston (S7-6), piston (S7-5) and plug (S7-4) are pressed, and poppet assembly (S7-2) is seated on valve housing. This causes oil flowing from parallel passage (R3) to open poppet (S7-3) in poppet assembly and flow into passage (S7-1).

As a result, passage diameter is smaller during combined operation, than passage diameter during a single operation. This smaller passage reduces flow of oil to port (A7, B7). Remaining oil flows through parallel passage (R3) and primarily flows to section being operated at P2 side during a combine operating procedure.

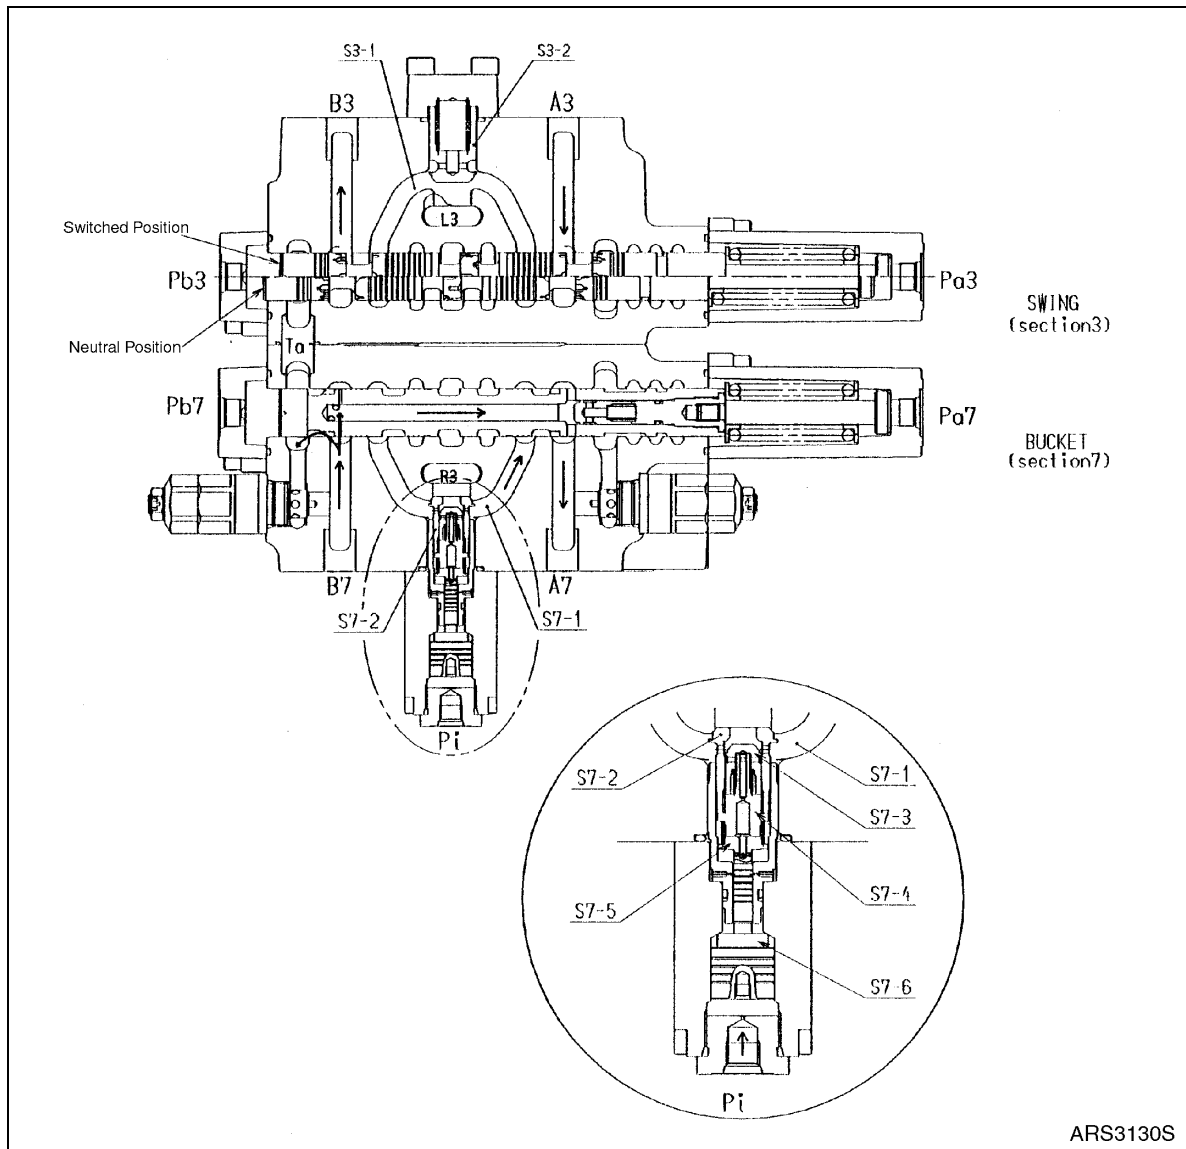


Figure 17

ANTIDRIFT VALVE

The antidrift valve is installed in cylinder port of arm rod (boom bottom) side to prevent arm (boom) cylinder from natural lowering. (As a representative arm side (A5) is shown.)

1. Neutral condition (A5, Figure 18 port keeping condition)

The holding pressure of A5 port is sent through passage (a, b, and c), and into spring chamber (d) of poppet (1). At this time pressurized oil flow from port A5 is cut off by seat S1 and seat S2.

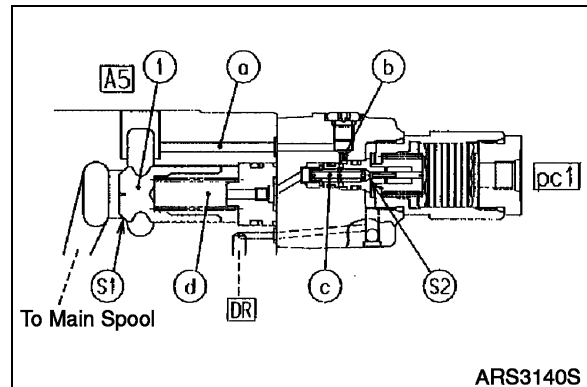


Figure 18

2. Cut off condition of passage of port A5 (Figure 19) and spring chamber

- A. If port pc1 is pressurized, piston 2 is moved and spool 3 reacts.
- B. Spool 3 activates poppet 4.
- C. And then by moving poppet 4, port A5 and spring chamber (d) is cut off by seat S1.

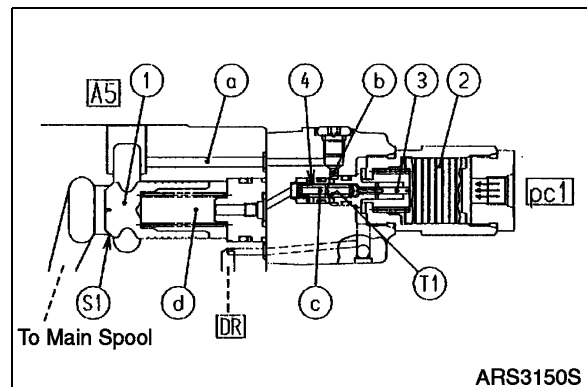


Figure 19

3. Operating condition of main poppet

- A. If again piston (2, Figure 20) reacts even more to pressure at port pc1, spring chamber (d) is then allowed to drain through passages (c and e) and to drain chamber (DR) through port T2.
- B. Spring chamber (DR) then lowers to drain pressure so that main poppet 1 is allowed to open.

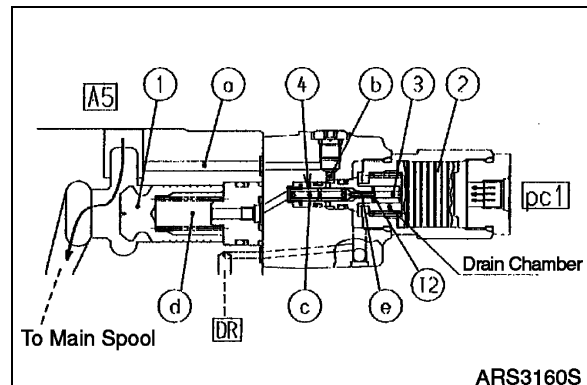


Figure 20

MAIN RELIEF VALVE

1. The main relief valve is located between neutral oil passage (HP, Figure 21) and low pressure oil passage (LP). Pressurized oil flows into neutral oil passage (HP) through orifice in the main poppet (C) to fill internal cavity (D). Due to the difference in areas between (A) and (B), on which hydraulic pressure acts, main poppet (C) seats on sleeve (E).

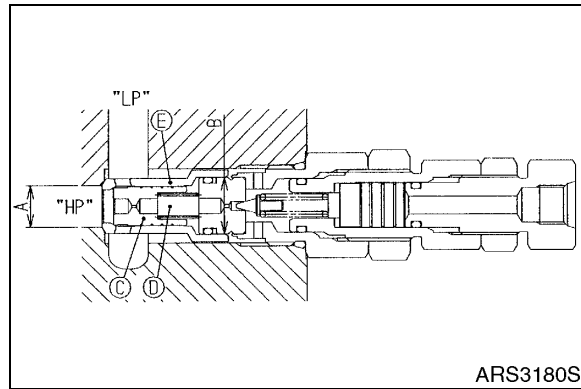


Figure 21

2. When pressure in neutral oil passage (HP) rises and exceeds relief valve setting, pilot poppet (F) opens. Pressurized oil flows through pilot poppet (F) into low pressure oil passage (LP), passing through hole (G).

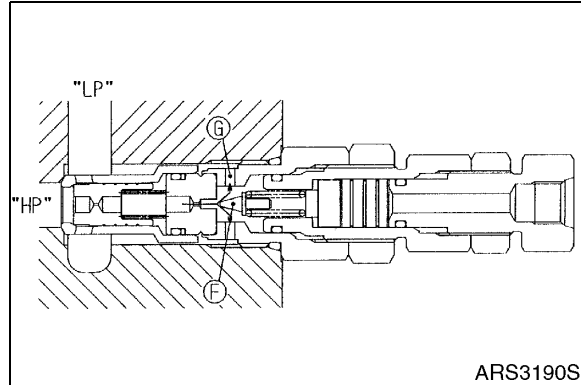


Figure 22

3. As pilot poppet (F) opens, pressure in internal cavity (D) lowers to move main poppet (C) so that pressurized oil flows into neutral oil passage (HP) and directly into low pressure oil passage (LP).

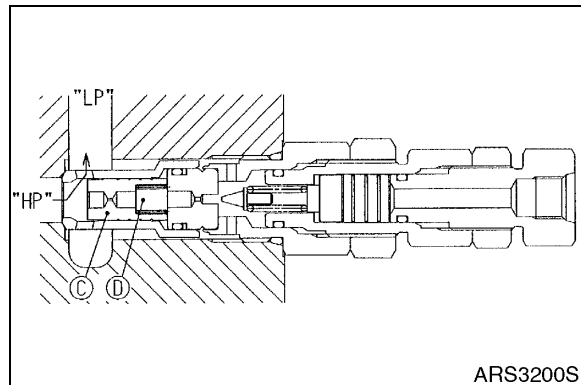


Figure 23

4. Pressure up operation

If pressure is applied to pilot port "PH," piston (H) moves to the pressure setting position of plug (I) so that the force of spring increases, thus increasing pressure in the neutral oil passage (HP).

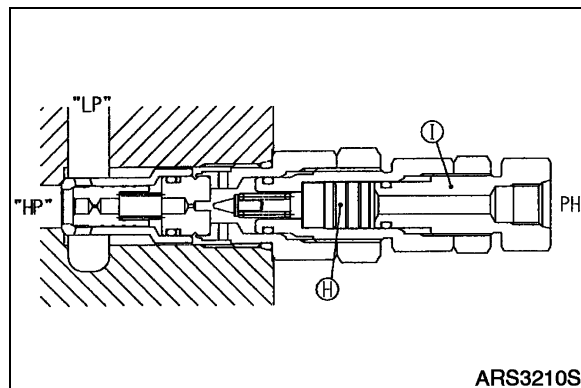


Figure 24

OVERLOAD RELIEF VALVE (69, TOTAL: SIX PLACES)

1. The overload relief valve is located between cylinder port (HP) and low pressure oil passage (LP). Pressurized oil at cylinder port (HP), flows through an orifice in piston (C), to fill internal cavity (G). Due to the difference in area between (A) and (B) on which the hydraulic pressure acts, main poppet (D) seats on sleeve (K).
2. When pressure in cylinder port (HP) rises and exceeds the relief valve setting, pilot poppet (E) opens. Pressurized oil then flows through pilot poppet (E) into low pressure oil passage (LP), passing through hole (H).
3. As pilot poppet (E) opens, pressurized oil flows through orifice (I) so that pressure on back of piston (C) lowers to move piston (C). As a result, piston (C) seats on pilot poppet (E).
4. Pressurized oil in passage (HP) flows through orifice (F) in piston (C) so that pressure on back of main poppet (D) moves main poppet (D). Pressurized oil then flows into passage (HP) and directly into passage (LP).

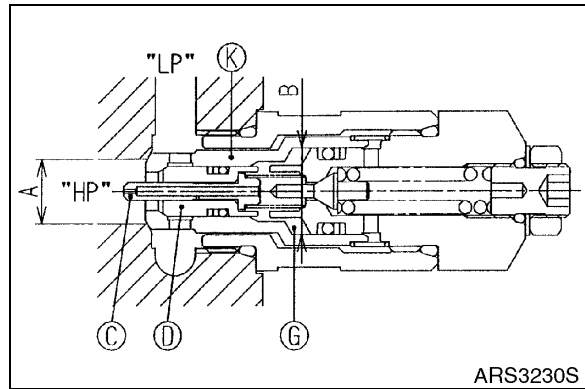


Figure 25

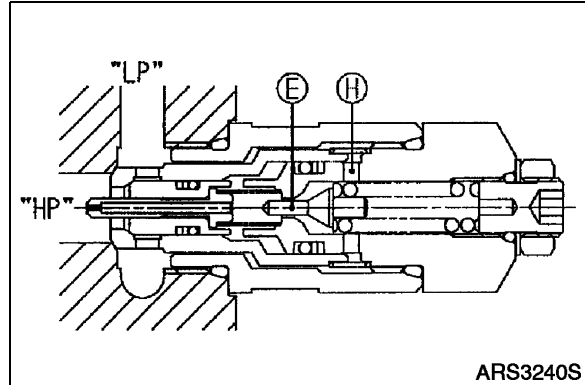


Figure 26

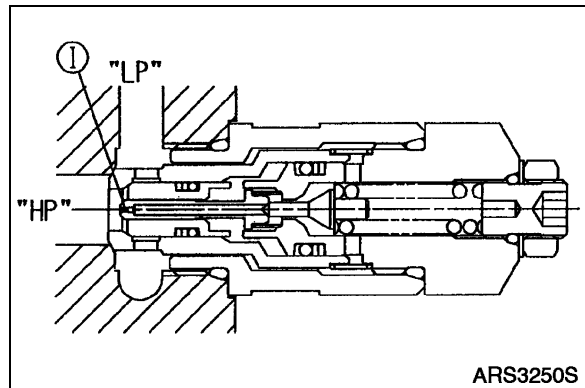


Figure 27

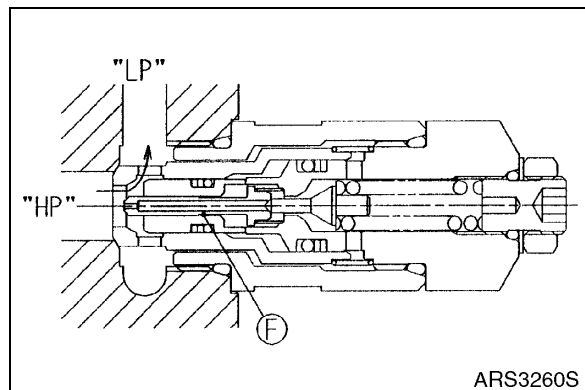


Figure 28

5. Sucking operation

An anti void unit is installed in cylinder port (HP) to prevent the development of cavitation. If pressure at cylinder port (HP) becomes lower than that of oil passage (LP), sleeve (K) moves so that oil is supplied from the low pressure oil passage (LP) to cylinder port (HP) to eliminate cavitation.

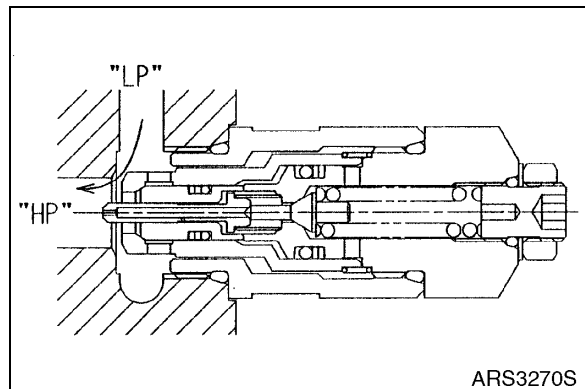


Figure 29

LOW PRESSURE RELIEF VALVE (70, TOTAL: TWO PLACES)

Generation of Signal Pressure

Oil supplied from pump port (P1 (P2)) flows through neutral passage (L1 (R1)), low pressure relief valve passage (L2 (R2)), and orifice (Lc1 (Rc1)) to tank passage (Ta).

Now, pressure generated at passage (L2 (R2)) by orifice (Lc1 (Rc1)) moves to low pressure relief signal port (Ps1 (Ps2)).

If main spool of upper reaches of L2 (R2)) operates, signal pressure of Ps1 (Ps2) decreases because oil flowing to L2 (R2) decreases.

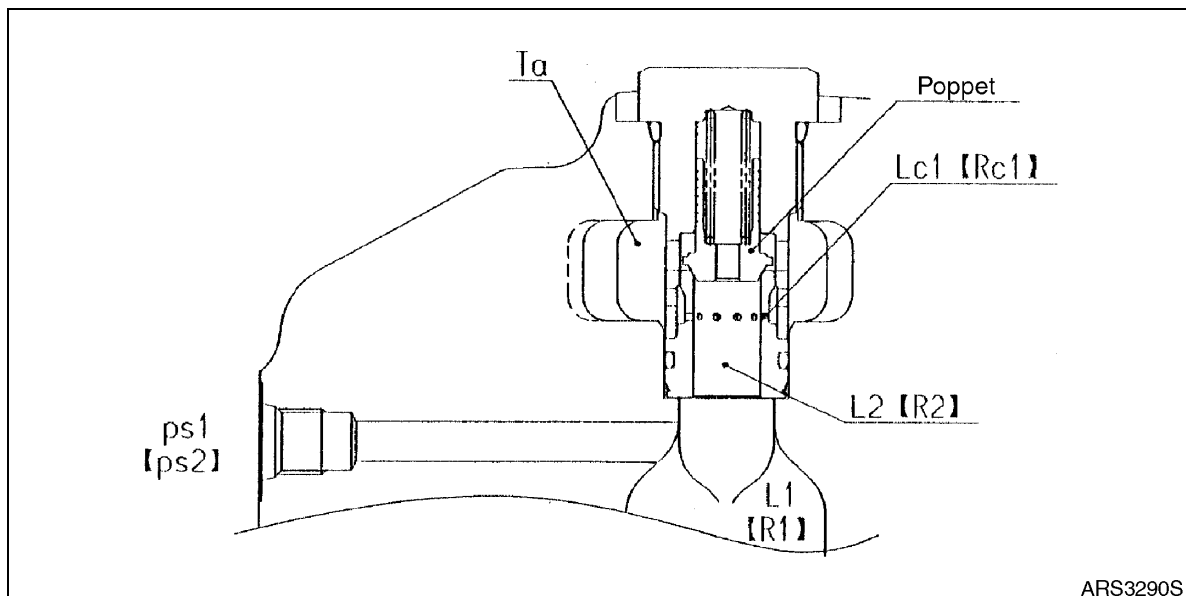


Figure 30

Relief Operation

If excessive oil flows into passage (L2 (R2)), pressure generated at passage (L2 (R2)) by orifice (Lc1 (Rc1)) goes to back chamber of poppet, and poppet operates by the difference of pressurized area between passage and back chamber.

By operation of this poppet, oil flows from passage through plug and drill hole to tank passage (Ta). By this action, generation of excessive pressure in low pressure relief signal port is prevented.

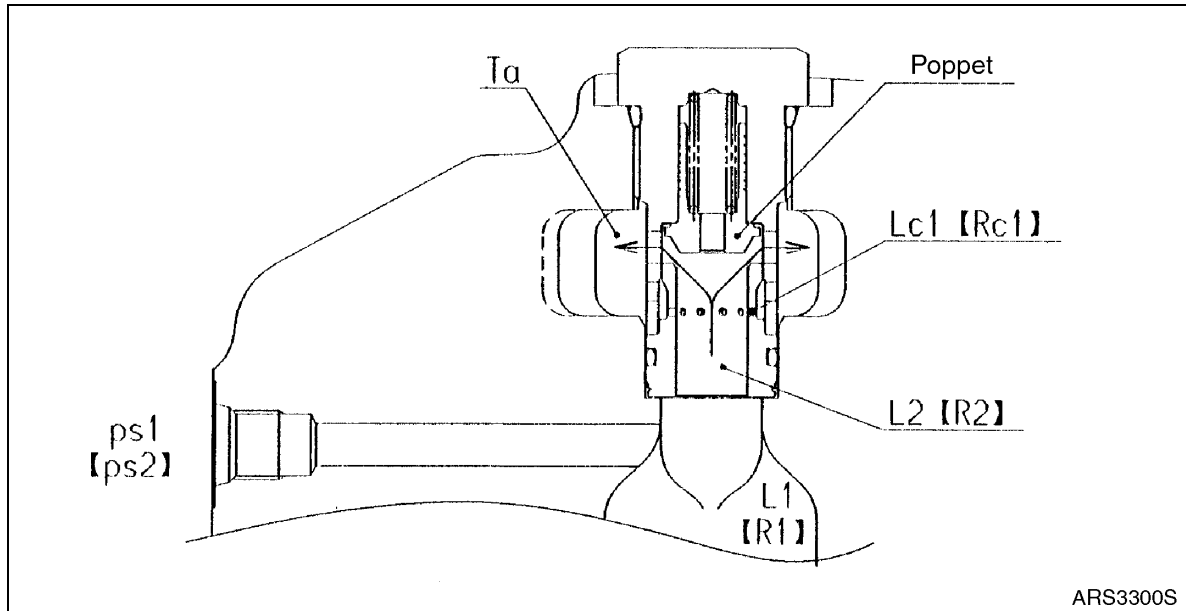


Figure 31

PARTS LIST

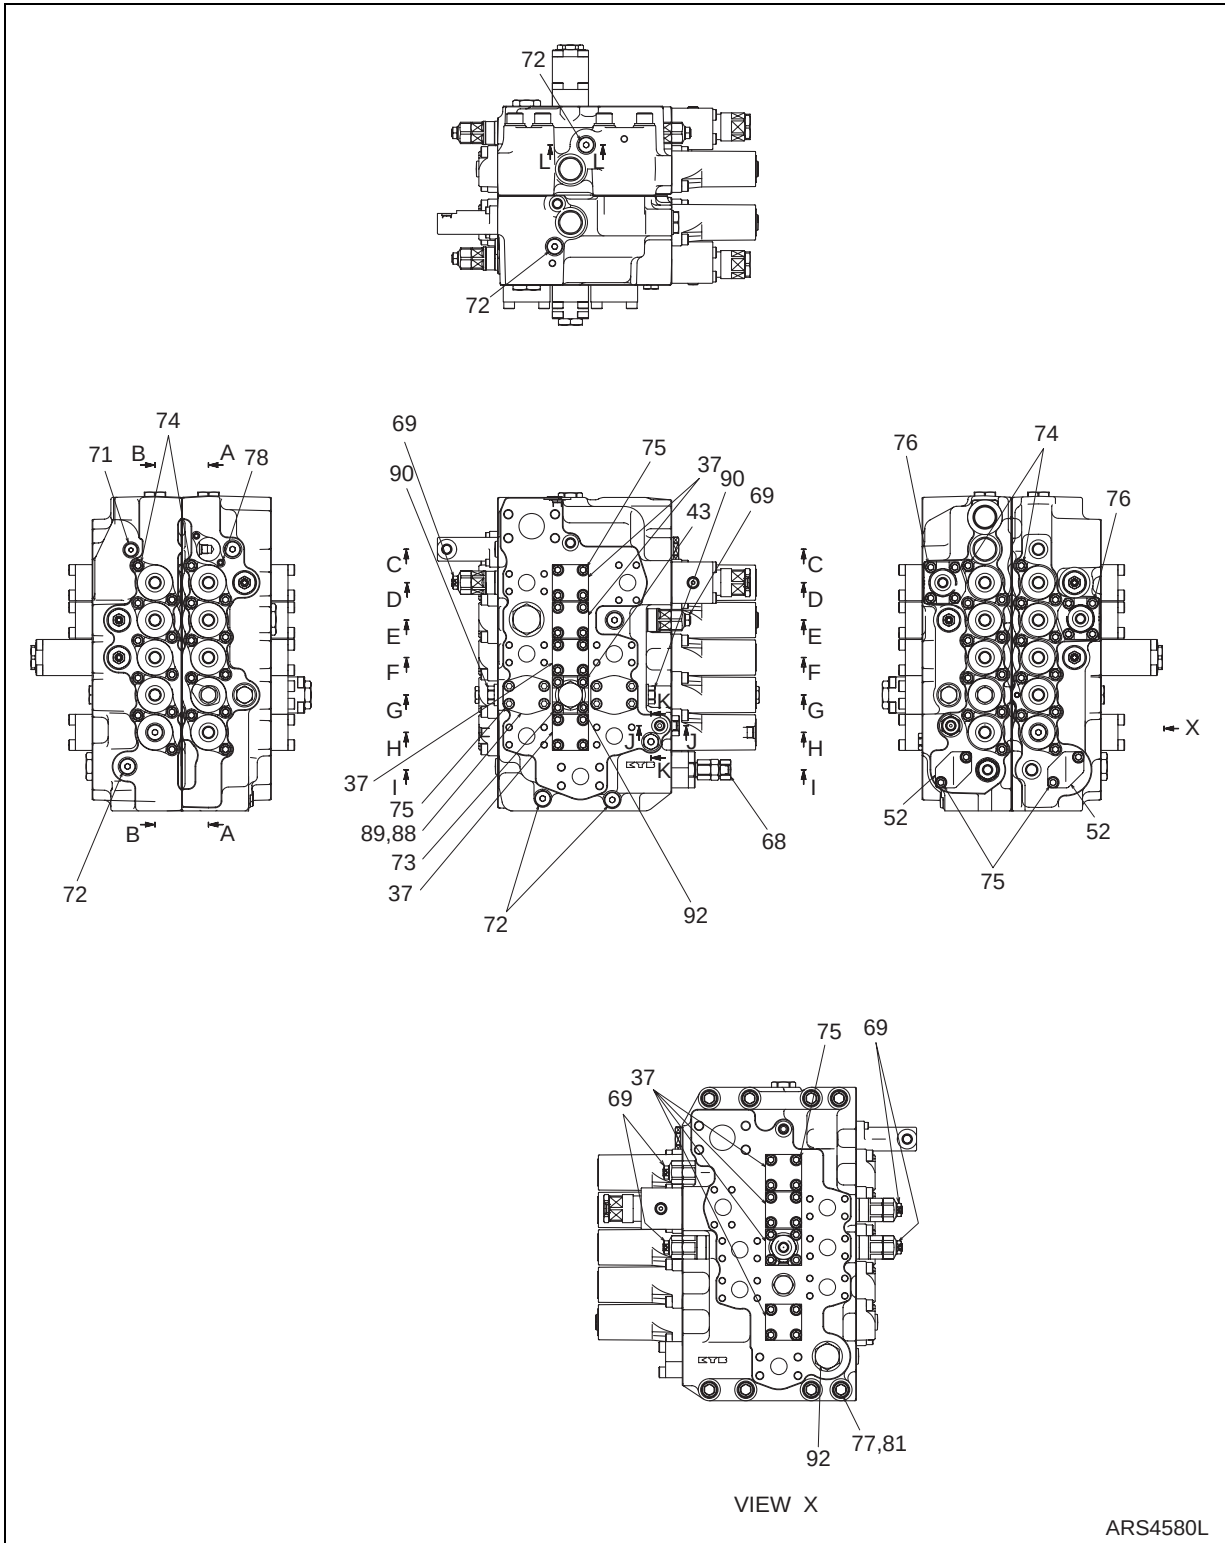


Figure 32

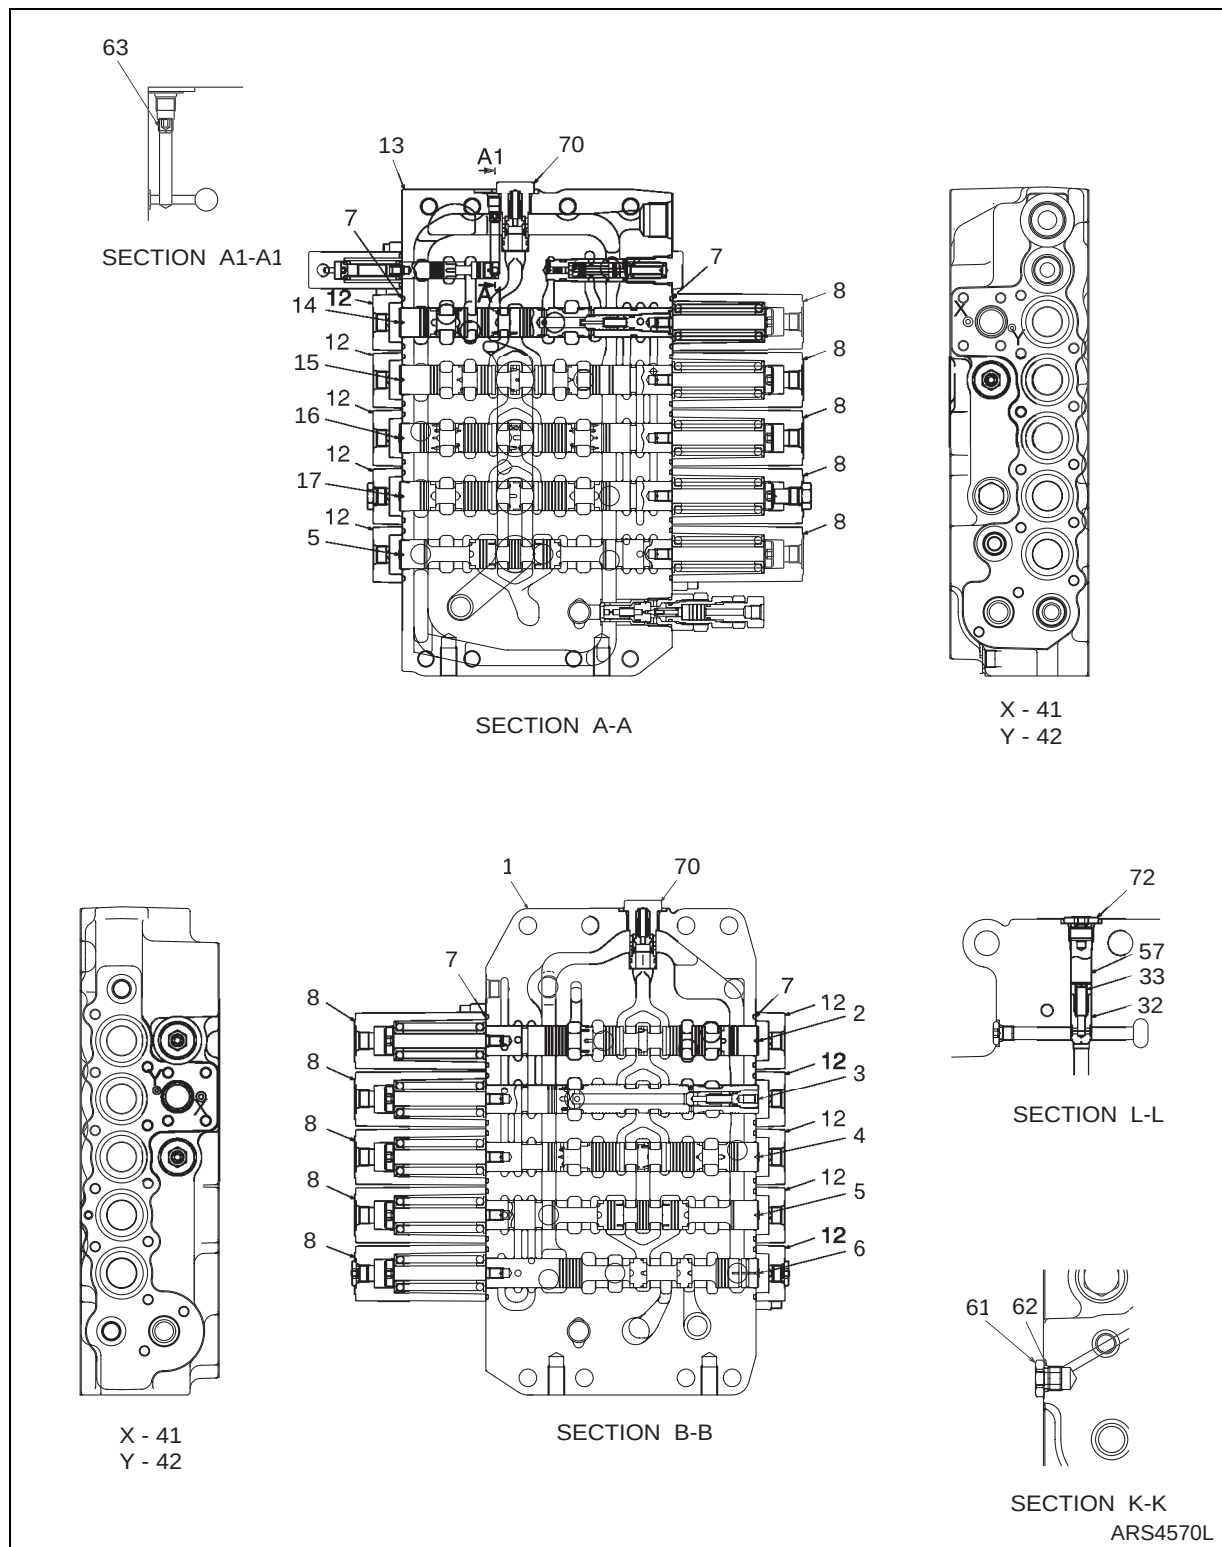


Figure 33

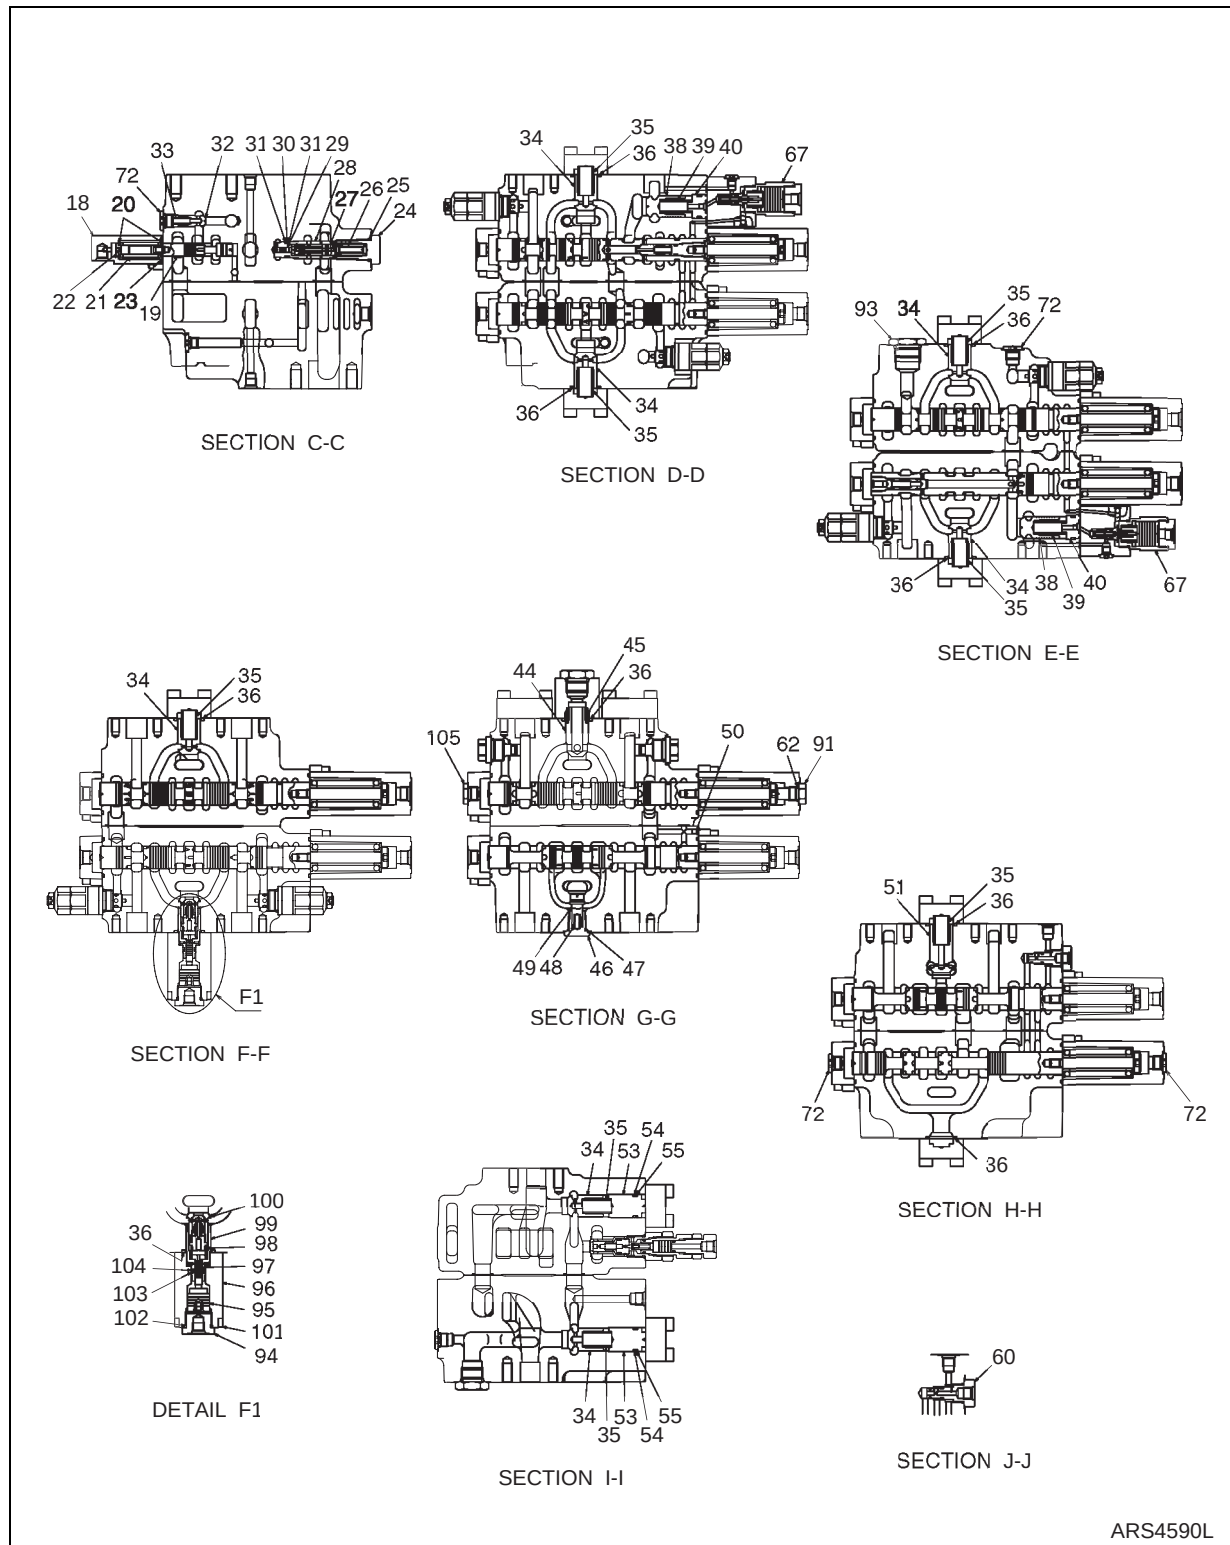


Figure 34

Reference Number	Description
1	Valve Housing
2	Spool Assembly (Arm2)
3	Spool Assembly (Boom1)
4	Spool Assembly (Bucket)
5	Spool Assembly (Travel)
6	Spool Assembly (Straight Travel)
7	O-ring
8	Cap
12	Cap
13	Valve Housing
14	Spool Assembly (Arm1)
15	Spool Assembly (Boom2)
16	Spool Assembly (Swing)
17	Spool Assembly (Option)
18	Cap
19	Spool
20	Spring Seat
21	Spring
22	Spool End
23	O-ring
24	Plug
25	O-ring
26	Spring
27	Spool Assembly
30	O-ring
31	Backup Ring
32	Poppet
33	Spring
34	Poppet
35	Spring
36	O-ring
37	Flange
38	Poppet
39	Spring
40	Spacer Assembly
41	O-ring
42	O-ring
43	Flange
44	Poppet
45	Spring
46	Plug

Reference Number	Description
47	O-ring
48	Spring
49	Poppet
50	Steel Ball
51	Poppet
52	Flange
53	Spacer
54	O-ring
55	Backup Ring
57	Spacer
60	Plug Assembly
61	Plug
62	O-ring
63	Orifice Plug
65	O-ring
66	O-ring
67	Anti-draft Valve Assembly
68-70	Relief Valve Assembly
71	Plug Assembly
72	Plug Assembly
73-78	Socket Head Bolt
79	Name Plate
80	Drive Screw
81	Washer
88	Cap
89	O-ring
90	Plug Assembly
91	Plug
92	Plug Assembly
93	Plug Assembly
94	Plug
95	Piston
96	Body
97	Piston
98	Spring
99	Sleeve
100	Poppet Assembly
101	Socket Head Bolt
102	O-ring
103	Backup Ring
104	O-ring
105	Plug Assembly

Spool Assembly (2, Arm 2)

Reference Number	Description
1	Spool
2	Spring Seat
3	Spring
4	Spool End

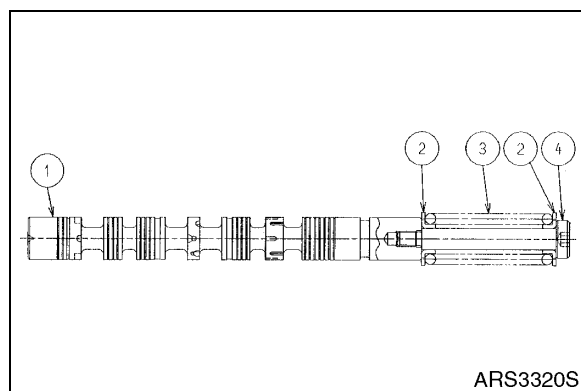


Figure 35

Spool Assembly (3, Boom1)

Reference Number	Description
1	Spool
2	Spring Seat
3	Spring
4	Spool End
5	Plug
6	Poppet
7	Spring
8	O-ring
9	Backup Ring

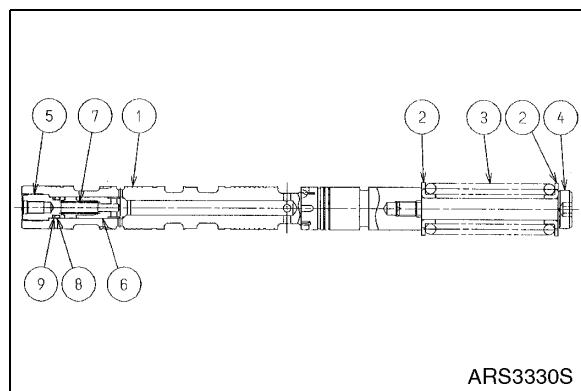


Figure 36

Spool Assembly (4, Bucket)

Reference Number	Description
1	Spool
2	Spring Seat
3	Spring
4	Spool End
5	Plug
6	Poppet
7	Spring
8	O-ring
9	Backup Ring

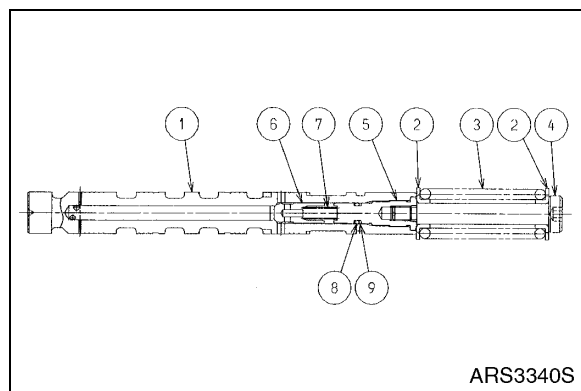


Figure 37

Spool Assembly (5, Travel)

Reference Number	Description
1	Spool
2	Spring Seat
3	Spring
4	Spool End

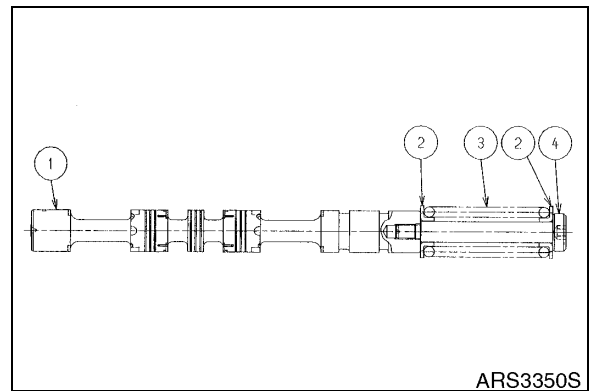


Figure 38

Spool Assembly (6, Straight Travel)

Reference Number	Description
1	Spool
2	Spring Seat
3	Spring
4	Spool End

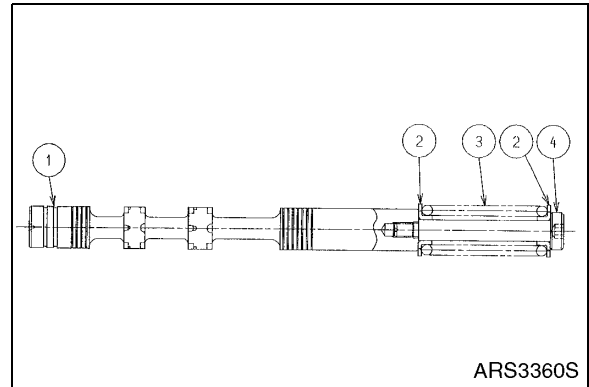


Figure 39

Spool Assembly (14, Arm1)

Reference Number	Description
1	Spool
2	Spring Seat
3	Spring
4	Spool End
5	Plug
6	Poppet
7	Spring
8	O-ring
9	Backup Ring

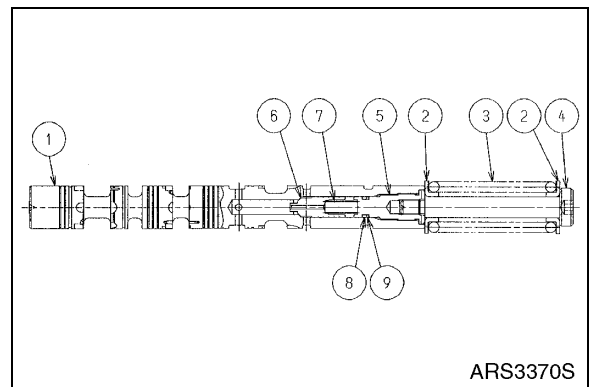


Figure 40

Spool Assembly (15, Boom 2)

Reference Number	Description
1	Spool
2	Spring Seat
3	Spring
4	Spool End

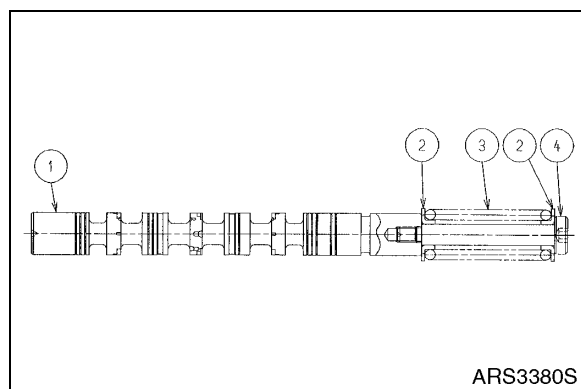


Figure 41

Spool Assembly (16, Swing)

Reference Number	Description
1	Spool
2	Spring Seat
3	Spring
4	Spool End

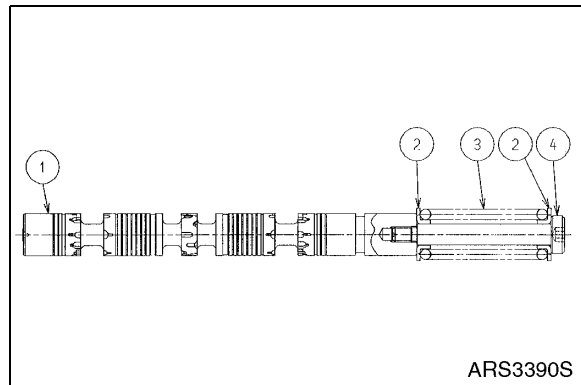


Figure 42

Spool Assembly (17, Option)

Reference Number	Description
1	Spool
2	Spring Seat
3	Spring
4	Spool End

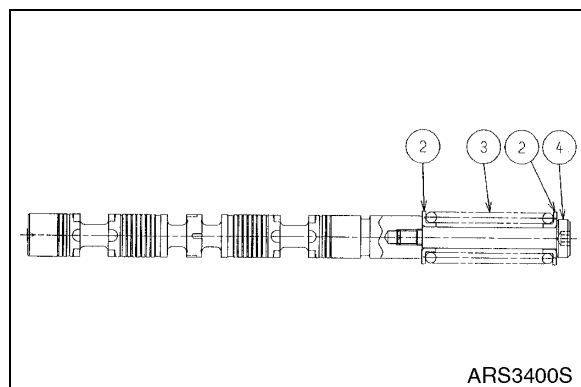


Figure 43

Spool Assembly (20, Arm Regeneration Release Valve)

Reference Number	Description
1	Spool
2	Sleeve
3	Piston

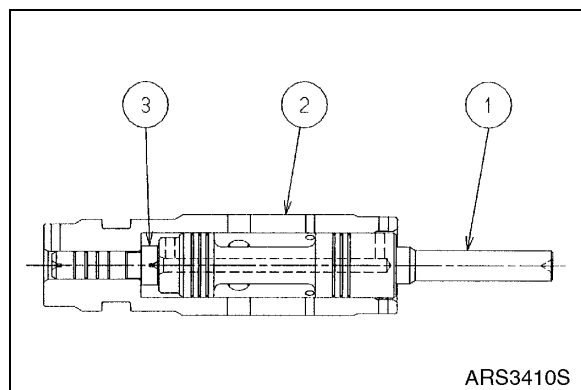


Figure 44

Spacer Assembly (40)

Reference Number	Description
1	Spacer
2	O-ring
3	Backup Ring
4	O-ring

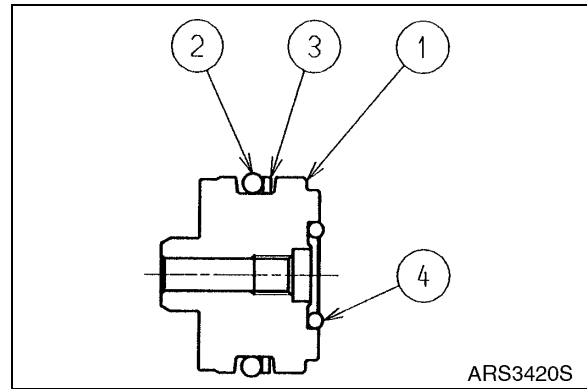


Figure 45

Plug Assembly (60)

Reference Number	Description
1	Plug
2	O-ring
3	O-ring
4	O-ring

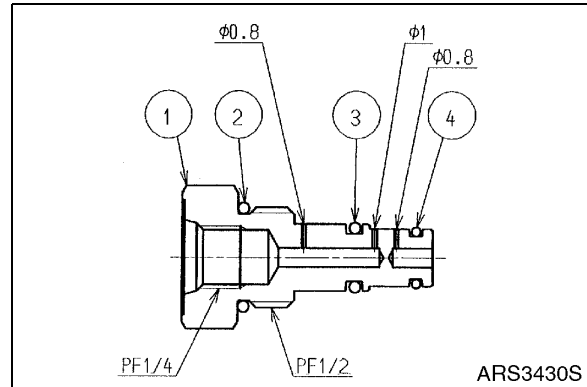


Figure 46

Anti-draft Valve Assembly (67)

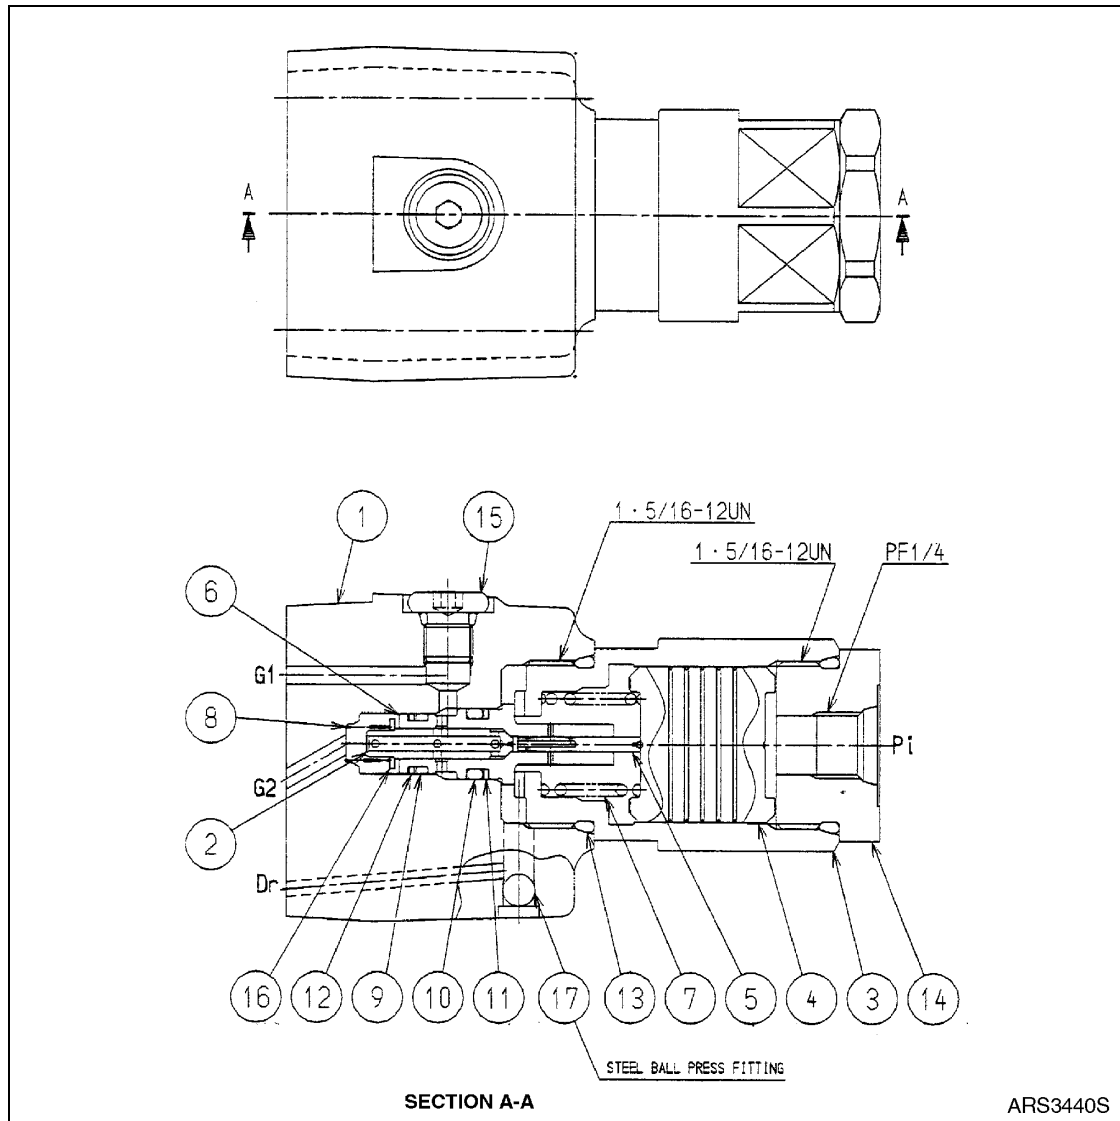


Figure 47

Reference Number	Description
1	Body
2	Poppet
3	Plug
4	Piston
5	Spool
6	Sleeve
7	Spring
8	Spring
9	O-ring

Reference Number	Description
10	O-ring
11	Backup Ring
12	Backup Ring
13	O-ring
14	Plug Assembly
15	Plug Assembly
16	Spring Seat
17	Steel Ball

Relief Valve Assembly (70)

Reference Number	Description
1	Plug
2	Spring
3	Poppet
4	Sleeve
5	O-ring
6	O-ring

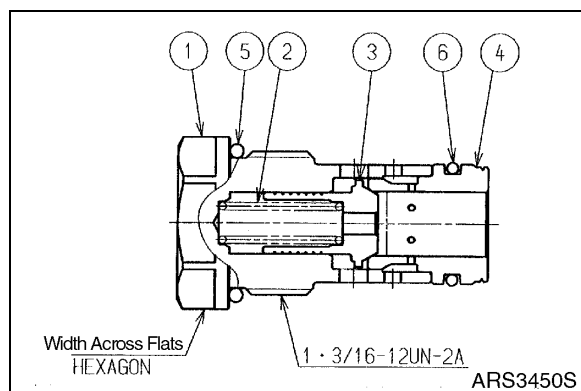


Figure 48

Plug Assembly (90)

Reference Number	Description
1	Plug
2	O-ring
3	O-ring
4	Backup Ring

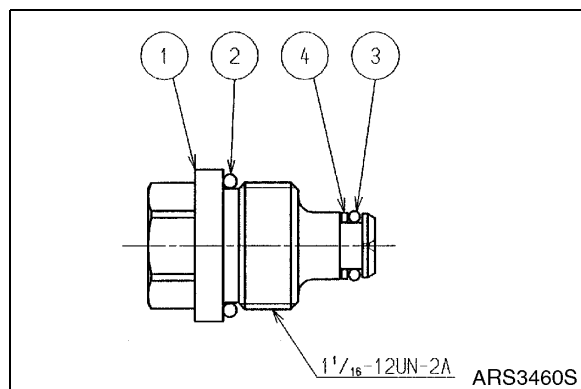


Figure 49

SPECIFICATIONS

Control Valve	Specification
Rated Flow	270 liter/min. 50 liter.min at Neutral
Max. Pressure	34.3 MPa
Allowable Back Pressure	Peak Pressure: Below 1.5 MPa Normal Pressure: Below 0.5 MPa
Allowable Working Temperature Range	-20 ~ 90°C Peak Max: 100°C (Seal is used nitrile rubber.)

TROUBLESHOOTING, TESTING AND ADJUSTMENT

GENERAL

Problem	Possible Cause	Remedy
Spool does not stroke.	Hydraulic oil excessively hot.	Remove blockage in oil piping.
	Hydraulic oil contaminated.	Change oil and clean oil passages.
	Over tightened piping port fittings.	Check torque.
	Valve housing deformed when assembling.	Remove assembling bolts and check.
	Pressure too high.	Check pump port pressure and cylinder port pressure with pressure gauge.
	Spool bent.	Replace valve assembly.
	Return spring damaged.	Replace damaged parts.
	Spring or cap crisscrossed.	Remove, center, and retighten cap.
	Valve temperature uneven.	Warm up entire system.
	Dirt in valve.	Clean valve (flushing).
	Lack of pilot pressure.	Check pilot valve and pilot relief pressure.
Fail to keep load	Cylinder leaks.	Check seal parts of cylinder.
	Spool leaks.	Check spool.
	Overload relief valve leaks.	Clean valve housing and relief valve seat parts.
	Antidrift valve leaks.	Remove antidrift valve and clean every seat parts.
		If seat parts are damaged, replace poppet or lap poppet and seat parts.
		If draft valve is malfunction, replace spool and sleeve at same time.
Load drops when changing spool from neutral to up.	Dirt in load check valve.	Remove and clean check valve.
	Poppet or seat parts in check valve scratched.	Remove poppet or lap poppet and seat parts.

RELIEF VALVE

Problem	Possible Cause	Remedy
Pressure does not rise.	Stuck main poppet, sleeve or pilot poppet opened or dirt in seat part.	Replace relief valve.
Relief pressure unstable	Seat parts of pilot poppet damaged.	
	Piston or main poppet stuck.	
Relief pressure is incorrect.	Seat parts worn due to dust.	Reset pressure and tighten lock nut in rated torque.
	Lock nut and adjuster loose.	
Oil leaks	Relief valve seat parts damaged	Replace relief valve.
	Every parts stuck due to dust	
	O-ring worn.	Replace adjuster or O-ring.

HYDRAULIC SYSTEM

Problem	Possible Cause	Remedy
Hydraulic system is malfunction or does not operate.	Hydraulic pump failed.	Check pressure or replace pump.
	Relief valve failed.	Replace pump.
	Some kinds of cylinders failed.	Repair or replace.
	Pump load pressure too high.	Check circuit pressure.
	Valve cracked.	Replace valve assembly.
	Spool does not fully stroke.	Check spool operation.
	Hydraulic oil level in tank too low.	Add hydraulic oil.
	Filter in circuit plugged.	Clean or replace filter.
	Circuit piping twisted.	Check piping.

ADJUSTMENT OF RELIEF VALVE

Main Relief Valve

1. Connect an accurate pressure gauge to inlet port.
2. Start engine and maintain rated pump speed.
3. Shift control valve spool and read pressure gauge from stroke end of cylinder.

NOTE: Shift a spool that the actuator pressure setting of the over load relief valve is higher than the pressure of the main relief valve.

4. High pressure adjustment (1st stage) (refer to figure of page 32/63)
 - A. Loosen lock nut (7) and tighten plug (8) until piston contacts step (* mark) of plug (6). Plug (8) should be torqued below 19.6 N*M. While plug (8) is tightened, plug (6) should not be turned. Distance A (Page 32/63) must be more than 4.0 mm (0.16 in). Tighten lock nut (7).

- B. Loosen lock nut (4) and turn adjusting plug (6) clockwise to raise relief pressure of preceding step. Turn adjusting plug (6) counterclockwise to lower relief pressure. One turn varies pressure by approximately 28.4 MPa. Tighten lock nut (4) after pressure has been adjusted.
5. Low pressure adjustment (second stage)
Loosen lock nut (7) and turn adjusting plug (8) counterclockwise to lower relief pressure at state of 4. One turn varies pressure by approximately 21.3 MPa. Tighten lock nut (7) after pressure has been adjusted.
6. Recheck pressure setting by raising pressure once more.

Over Load Relief Valve

IMPORTANT

If pressure of main relief valve is higher than the specified pressure for it, change main relief valve assembly setting without adjusting over load relief valve.

1. Shift control valve spool and read pressure gauge from stroke end of cylinder.
2. Loosen lock nut (3) and turn adjusting plug clockwise to raise pressure. Item number 69: six places
One turn varies pressure by approximately 21.2 MPa.
3. Tighten lock nut (3) after pressure has been adjusted. Lock nut (3) should be torqued to 2.80 - 3.20 kg•m (20 - 23 ft lb).
4. Recheck pressure setting by raising pressure once more.

DISASSEMBLY

GENERAL INSTRUCTIONS FOR DISASSEMBLY

1. Stop engine when pressure of actuator is not indicated.

It is dangerous to disassemble control valve while it is under pressure. High pressure oil can squirt out or components can spring out. When partially disassembling control valve that is on machine, be careful to follow the following caution.



CAUTION!

When disassembling assembly, when pressure is not fully released, or bucket is not lowered to ground, is very dangerous. A poppet in an antidrift valve may spring out and drop the bucket at the same time. Always lower bucket to ground and fully release pressure before disassembling.

2. Vent pressurized air from hydraulic oil tank.
3. Clean all exterior surfaces of valve before to disassembly and protect it from dirt and foreign materials.
4. Match mark the disassembled parts to ensure proper reassembling position.
5. Replace all sealing parts such as O-rings and backup rings with a new ones.
6. Do not replace spools, they are matched with valve housing and sleeve.

NOTE: *The further part numbers of an assembly part are shown as (assembly part number - further part number).*

Disassembly of Main Spool Part

1. Remove socket head bolt (74, two places per each section, width across flats: 8 mm) and cap (8, ten places).
2. Remove plug assembly (72, width across flats: 8 mm) and plug (91, width across flats: 22 mm) according to necessity.
3. Remove O-ring (7, one place per each section) from valve housing (1 and 13).
4. Remove all spool subassemblies from valve housing

IMPORTANT

When removing spool, be careful not to damage it.

Attach label to each spool in order to install it in the correct position when reassembling.

5. Remove socket head bolt (74, two places per each section, width across flats: 8 mm) and cap (12, ten places).
6. Remove O-ring (7, one place per each section) from valve housing (1, 13).

7. Disassembly of spool

IMPORTANT

Work with spool gripped in vise with wood (see Figure 50) not to scratch outside diameter of spool.

Because Loctite is applied to threaded portion of spool end, heat outside surface of spool with industrial drier to release Loctite.

Heat spool until spool end is easily loosened, and remove immediately after heating it to 200 - 250°C.

If it is over heated, change spring to new one.

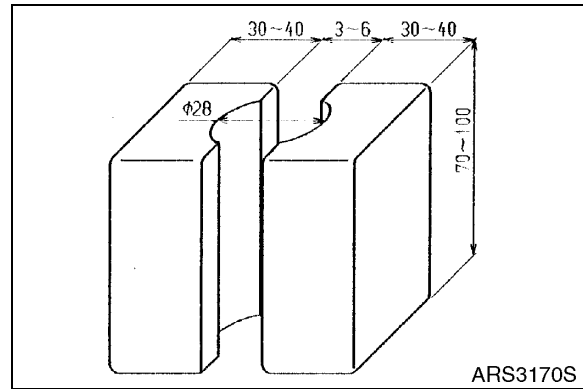


Figure 50

- A. Remove spool end (width across flats: 8 mm), spring seat and spring from spool assembly (2-6, 14-17).

NOTE: There is a poppet, spring and plug in spool assembly. Do not disassemble unless absolutely necessary. If disassembly is necessary, heat spool outside surface to release Loctite in screw portion and remove plug. When reassembling, replace O-ring and backup ring to new ones.

Disassembly of Arm 1 Para Spool Turn

1. Remove socket head bolt (78, width across flats: 5 mm) and cap (18).
2. Remove O-ring (23) from cap (18).
3. Remove spool (19) from valve housing under subassembly conditions.
4. Disassembly of spool.

IMPORTANT

Work with spool gripped in vise with wood (see Figure 50), so as not to scratch outside diameter of spool.

Because Loctite is applied to threaded portion of spool end, heat outside surface of spool with industrial drier to release Loctite.

Heat spool until spool end is easily loosened, and remove immediately after heating it to 200 - 250°C.

If it is over heated, replace spring with a new one.

- A. Remove spool end (22, width across flats: 5 mm), spring seat (20) and spring (21) from spool (19).

Disassembly of Arm Regeneration Release Valve Part

Small parts in assembly are indicated to (parental number - son number).



CAUTION!

When removing a plug, when pressure is not fully released, or bucket is not lowered to ground, is very dangerous. A part in the valve may spring out and drop the bucket at the same time. Always lower bucket to ground and fully release pressure before disassembling.

1. Remove plug (24, width across flats: 32 mm) and O-ring (25).
2. Remove spring (26) and spool (27-1) from sleeve (27-2).
3. Remove sleeve (27-2) from valve housing.
4. Remove piston (27-3), O-ring (30) and backup ring (31) from sleeve (27-2).

Disassembly of Rod Check Valve Part



CAUTION!

Removing a plug, when pressure is not fully released, or bucket is not lowered to ground, is very dangerous. A part in the valve may spring out and drop the bucket at the same time. Always lower bucket to ground and fully release pressure before disassembling.

1. Remove socket head bolt (75, four places per each section, width across flats: 8 mm) and flange (37, seven places).
2. Remove spring (35), poppet (34) (poppet (51)) and O-ring (36) from valve housing.

IMPORTANT

Be careful, there is not a poppet and spring in travel straight valve section (section H-H).

3. Remove socket head bolt (75, width across flats: 8 mm) and flange (52, two places).
4. Remove spacer (53) from valve housing. Remove O-ring (54) and backup ring (55) from spacer (53).
5. Remove spring (35) and poppet (34) from valve housing.
6. Remove plug (72, width across flats: 8 mm) (section C-C).
7. Remove spring (33) and poppet (32) from valve housing.
8. Remove plug (72, width across flats: 8 mm) (section L-L).
9. Remove spacer (57), spring (33) and poppet (32) from valve housing.
10. Remove plug (92, width across flats: 36 mm) (section G-G).
11. Remove socket head bolt (73, four places, width across flats: 8 mm) and flange (43).
12. Remove spring (45), poppet (44) and O-ring (36) from valve housing.
13. Remove plug (46, width across flats: 27 mm) and O-ring (47).

14. Remove spring (48) and poppet (49) from valve housing.
15. Remove socket head bolt (101, four places, width across flats: 8 mm) from body (96, one places).
16. Remove body (96) from valve housing. Remove sleeve (99), piston (97), spring (98), poppet assembly (100), backup ring (103), and O-ring (104).
17. Remove O-ring (36).
18. Grip body (96) in vise. Remove plug (94), piston (95) and O-ring (102).

Disassembly of Antidrift Valve

Small parts in assembly is indicated to (parental number - son number).



CAUTION!

Removing antidrift valve seat, when pressure is not fully released, or bucket is not lowered to ground, is very dangerous. A part in the valve may spring out and drop the bucket at the same time. Always lower bucket to ground and fully release pressure before disassembling.

1. Remove socket head bolt assembly (76, four places per section, width across flats: 8 mm) and antidrift valve assembly (67, two places).
2. Remove O-ring (41, 42) from valve housing. Remove O-ring (40-4) from spacer assembly.
3. Screw socket head bolt (78, M6*1) into spacer, and remove spacer assembly (40) from valve housing.
4. Remove O-ring (40-2) and backup ring (40-3).
5. Remove spring (39) and poppet (38) from valve housing.
6. Disassembly of antidrift valve assembly



CAUTION!

Removing inner parts of antidrift valve, when pressure is not fully released, or bucket is not lowered to ground, is very dangerous. A part in the valve may spring out and drop the bucket at the same time. Always lower bucket to ground and fully release pressure before disassembling.

Slowly loosen plug assembly (67-14) and plug (67-3), check if there is a resistance by remaining pressure and remove.

- A. Remove plug assembly (67-14, width across flats: 38 mm) and O-ring.
- B. Remove piston (67-4), spool (67-5), and spring (67-7).
- C. Remove plug (67-3, width across flats: 38 mm) and O-ring.
- D. Remove sleeve (67-6) and poppet (67-2) from body. Remove O-ring (67-9, 10) and backup ring (67-11, 12) from outside diameter of sleeve.
- E. Pull spring seat (67-16) and spring (67-8) out of inside hole.
- F. Remove plug assembly (67-15) if necessary.

NOTE: But do not remove steel ball (67-14) because it is pressed in body.

Disassembly of Relief Valve



CAUTION!

Removing relief valve, when pressure is not fully released, or bucket is not lowered to ground, is very dangerous. A part in the valve may spring out and drop the bucket at the same time. Always lower bucket to ground and fully release pressure before disassembling.

Do not loosen adjusting plug for pressure setting or lock nut.

Adjusting plug for pressure setting is dangerous because pressure setting will be changed which may result in a dangerous situation.

1. Remove over load relief valve (69, six places, width across flats: 32 mm).
2. Remove main relief valve (68, width across flats: 32 mm).
3. Remove relief valve assembly (70, two places, width across flats: 32 mm) and O-ring (70- 5, 6).

Disassembly of Spare Section Part

1. Remove socket head bolt (75, width across flats: 8 mm), cap (88, two places) and O-ring (89).
2. Remove plug assembly (87, two places, width across flats: 24 mm), O-ring and backup ring.

Disassembly of Miscellaneous Plug Kind

1. Remove plug assembly (60, width across flats: 27 mm) and O-ring (section J-J).
2. Remove plug (61, width across flats: 22 mm) and O-ring (62) (section K-K).
3. Remove orifice plug (63, width across flats: 5 mm) (section A1-A1).
4. Remove plug assembly (92, width across flats: 36 mm) and O-ring.
5. Remove plug assembly (71, width across flats: 6 mm) and O-ring.
6. Remove plug assembly (72, width across flats: 8 mm) and O-ring.

Disassembly of Valve Housing Combined Bolt

IMPORTANT

Do not disassemble combined bolt (77) if it is unnecessary.

If it is necessary to disassemble it, work by placing it horizontally on a work bench.

Prepare spare O-ring (65, 66).

1. Remove socket head bolt (77, eight places, width across flats: 14 mm) and washer (81, eight places).
2. Remove O-ring (65, 66) from valve housing mating surface.

Disassembly of Main Relief Valve

This relief valve should be replaced as an assembly. When replacing it, remove plug (1, width across flats: 32 mm), and O-ring (2). If oil is leaking from nut (4), remove nut (4) and plug (1), and replace O-ring (3). If oil is leaking from nut (7), remove nut (7) and plug (8), and replace O-ring (3).

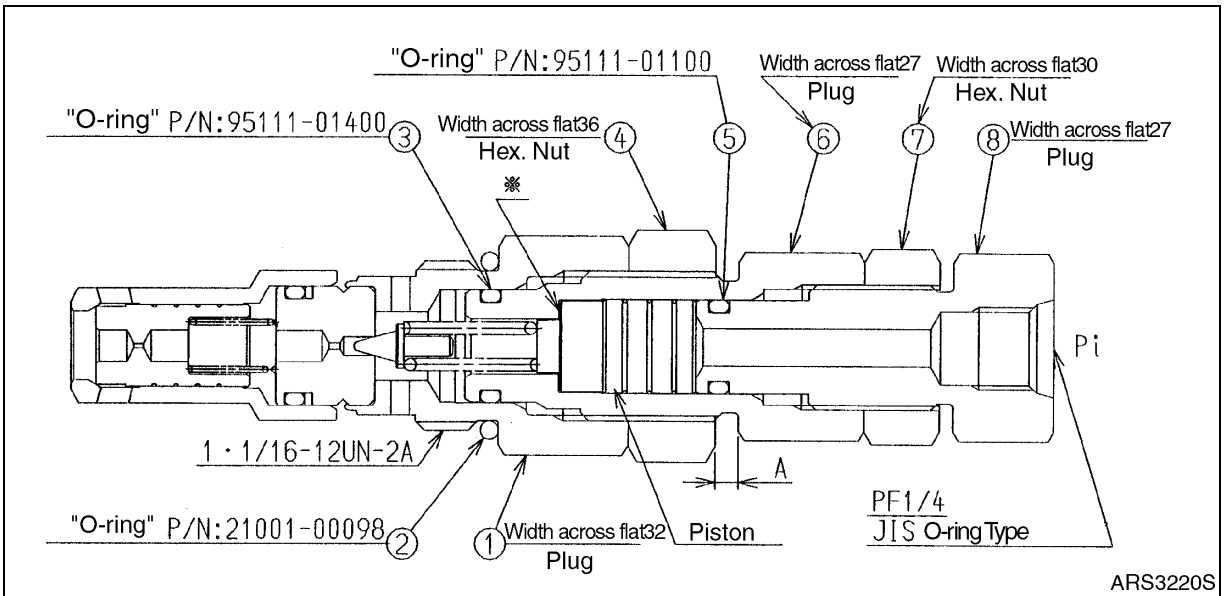


Figure 51

Disassembly of Overload Relief Valve

This relief valve should be replaced as an assembly. When replacing it, remove plug (1, width across flats: 32 mm) and O-ring (2). If oil is leaking from nut (4), remove nut (4) and plug (1), and replace O-ring (3). If oil is leaking from nut (7), remove nut (7) and plug (8), and replace O-ring (3).

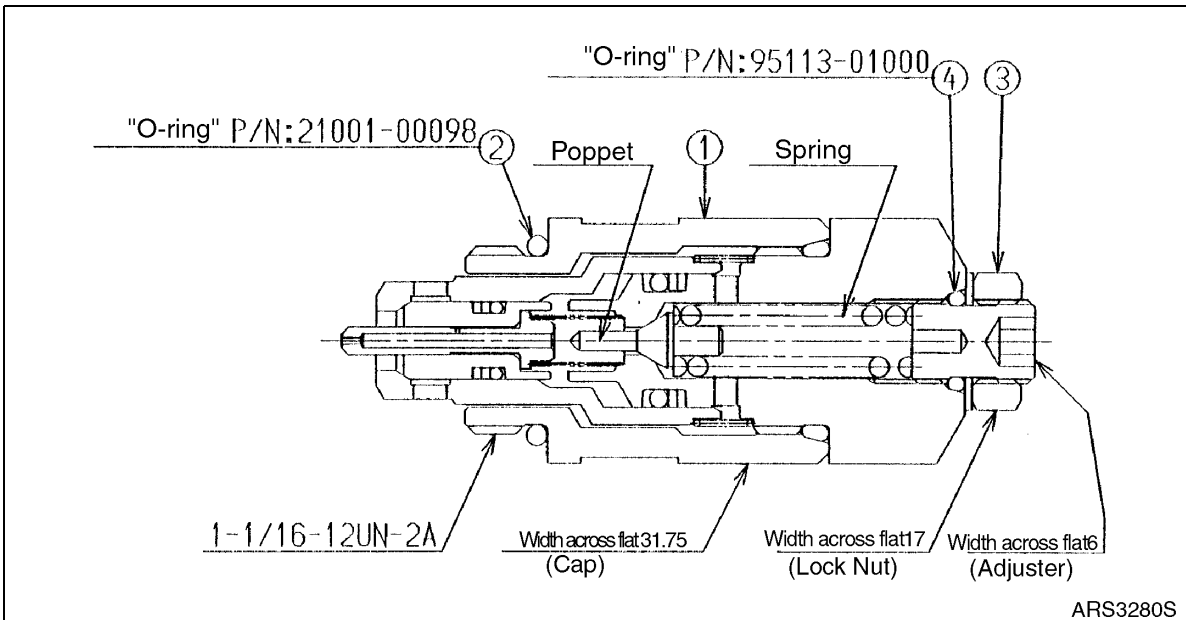


Figure 52

This relief valve should be replaced as an assembly. When replacing it, Remove cap (1, width across flats: 31.75 mm) and O-ring (2). If oil is leaking from adjusting kit (3), remove adjusting kit (3), and replace O-ring (4).

IMPORTANT

When disassembling adjuster kit, be careful not to let parts spring out or lose poppet because of spring force.

Disassembly of Low Pressure Relief Valve

This unit has press fit portion (D) so that it should be replaced by assembly.

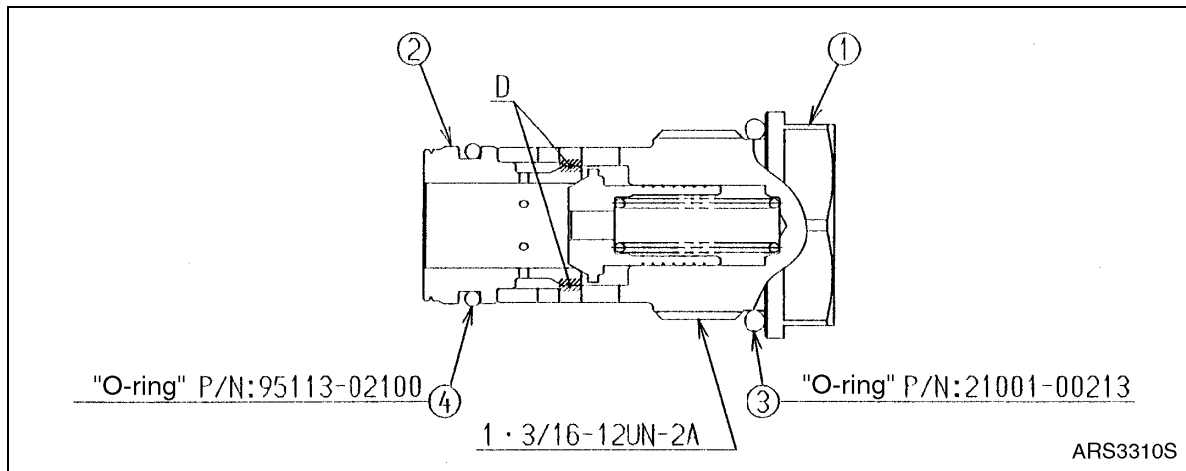


Figure 53

CLEANING AND INSPECTION (WEAR LIMITS AND TOLERANCES)

CLEANING

Clean all parts thoroughly using a suitable cleaning fluid and dry them with moisture free compressed air. Put them on a clean paper or a vinyl for inspection.

INSPECTION

Inspect all parts for scratches, notches and other defects.

1. Inspect load check seat surface of valve housing for scratches, scores, dirt, notches and corrosion. Remove small scratches with oilstone.
2. Inspect exterior surface of spool for scratches and notches. Remove small scratches with oilstone.
3. Sliding parts should be moved lightly and foreign materials should be removed in all grooves and passages.
4. Replace any springs that are damaged, heavy deformed or worn.
5. If relief valve malfunction, inspect it using relief valve maintenance procedure.
6. Replace all O-rings and backup rings with new ones.
7. After disassembling cap or plug, check whether there are paint chips around body hole or plug. If paint chips penetrate into valve, they can cause malfunction or valve to leak.

REASSEMBLY

INSTRUCTIONS FOR REASSEMBLY

Handling Instructions of O-ring

1. Do not use O-ring which has any defect or scratches from handling.
2. Apply grease or hydraulic oil to installation portion of O-ring grooves and O-ring to ease installation.
3. Do not stretch O-ring beyond permanent set.
4. When installing O-ring, be careful not to twist it. (A twisted O-ring, is very difficult to return to its original shape after installing it. This could also cause a leak.)

Handling Instructions for Spool

1. Rated torque should be kept because over torque of screw part cause malfunction of spool.
2. Be careful that each spool, spring and spool end should be reassembled like before disassembling.

Application Method of Loctite

Male and female screw threads of parts which need to adhere.



CAUTION!

When working with Loctite, work in a place that is well ventilated.

1. Cleaning (removal of grease)
Remove grease with steam, acetate, etc. or clean with an alkali cleanser.
2. Dry
Dry Loctite surface with moisture free air or naturally. If it is not completely dried, the effect of Loctite is weakened.
3. Primer painting
Slightly spray Loctite primer T effect promoter to Loctite surface and leave it for three or five minutes to dry.
4. Loctite application
Lightly apply Loctite #274 or equivalent to two or three threads of spool female inlet. At this time, be careful not to touch applying part to spring seat.

PROCEDURE OF SUBASSEMBLY

IMPORTANT

Check number of each part, installation position and tools needed before reassembling.

Reassembly of Spool Assembly (Main Spool)

1. Apply Loctite to threaded portion of spool (2-6, 14-17) and install spring seat, spring and spool end.
2. After gripping spool in vise with wood (that is used when disassembling it), tighten spool end. Tightening torque: 2.04 - 2.24 kg•m (15 - 16 ft lb).

IMPORTANT

Be careful not to get Loctite into spool by over applying it.

Be careful that spool operation does become deteriorated by over torquing spool end.

When reassembling it and A56, be careful because there are two different types of springs.

Reassembly of Arm 1 Para Turn Spool Assembly

1. Apply Loctite to threaded portion of spool (19) and install spring seat (20), spring (21) and spool end (22).
2. After gripping spool in vise with wood (that is used when disassembling it), tighten spool end. Tightening torque: 1.94 - 2.24 kg•m (14 - 16 ft lb).

IMPORTANT

Be careful not to get Loctite into spool by over applying it.

Be careful that spool operation does become deteriorated by over torquing spool end.

Reassembly of Antidrift Valve Assembly

1. Install O-ring (67-9, 10) and backup ring (67-11, 12) in groove of sleeve (67-6).

IMPORTANT

Be careful of installation position of O-ring and backup ring.

If they are reversed, the O-ring will be damaged and natural lowering speed of actuator can be increased.

2. Insert poppet (67-2) and spool (67-5) in sleeve hole.
3. Install spring seat (67-16) on small diameter of poppet end. Insert spring (67-8) and poppet assembly with sleeve into body (67-1).

IMPORTANT

It is better to apply grease to seat surface when installing spring and spring seat onto seat of poppet.

4. Install spring (67-7) and piston (67-4) in plug (67-3).
5. Tighten plug assembly (67-14) with O-ring installed on plug (67-3). Tightening torque: 14.99 - 16.01 kg•m (108 - 116 ft lb).
6. Install O-ring (67-13) on plug (67-3). Install it in body (67-1). Tightening torque: 14.99 - 16.01 kg•m (108 - 116 ft lb).
7. Tighten plug assembly (67-15) with O-ring in body (67-1). Tightening torque: 1.43 - 1.84 kg•m (10 - 13 ft lb).

REASSEMBLY PROCEDURE OF CONTROL VALVE BODY

Reassembly of Relief Valve



CAUTION!

When reassembling safety valve, securely tighten plug that is installed in body.

Do not loosen adjusting plug for pressure setting or lock nut.

Adjusting plug for pressure setting is dangerous because pressure setting will be changed which may result in a dangerous situation.

1. Install main relief valve (68). Tightening torque: Tightening torque: 7.95 - 8.97 kg•m (58 - 65 ft lb).
2. Install over load relief valve (69, six places) in each section. Tightening torque: 7.95 - 8.97 kg•m (58 - 65 ft lb).
3. Install spring seat (67-16) on small diameter of poppet. Then insert spring (67-8) and them with sleeve to body (67-1). Tightening torque: 10.50 - 11.52 kg•m (76 - 83 ft lb).

Reassembly of Load Check Valve

1. Install O-ring (36) on arm (1, 2, section D-D), boom (1, 2, section E-E) and swing section (section F-F). Install poppet (34) and spring (35). Mount flange (37) and install socket head bolt (75). Tightening torque: 5.91 - 6.53 kg•m (43 - 47 ft lb).
2. Install O-ring (36) on travel section (section H-H). Install poppet (51) and spring (35). Mount flange (37) and install socket head bolt (75). Tightening torque: 5.91 - 6.53 kg•m (43 - 47 ft lb).
3. Install O-ring (36) on travel straight section (section H-H). Mount flange (37) and install socket head bolt (75). Tightening torque: 5.91 - 6.53 kg•m (43 - 47 ft lb).
4. Install poppet (51) and spring (35) in common (section I-I). Insert spacer (53) with O-ring (54) and backup ring (55). Tightening torque: 3.98 - 4.49 kg•m (29 - 32 ft lb).

IMPORTANT

Be careful of installation position of O-ring and backup ring.

If they are reversed, the O-ring will be damaged and an oil leak can occur.

5. Install O-ring (36) on spare section (section G-G). Install poppet (44) and spring (45). Mount flange (43) and install socket head bolt (96). Tightening torque: 5.91 - 6.53 kg•m (43 - 47 ft lb).
6. Tighten flange assembly (92) with O-ring. Tightening torque: 20.90 - 23.15 kg•m (151 - 167 ft lb).
7. Insert poppet (49) and spring (48) in travel section (section G-G). Install plug (46) with O-ring (47). Tightening torque: 10.91 - 11.93 kg•m (79 - 86 ft lb).
8. Bucket section (section F-F)
 - A. Insert piston (95) and O-ring (102) on plug (94) and install in body (96). Tightening torque: 10.50 - 11.52 kg•m (76 - 83 ft lb).
 - B. Insert backup ring (103), O-ring (104), spring (98) and poppet assembly (100) in sleeve (99), and install it to body (96).

- C. Install O-ring (36) in valve housing and fasten body by means of socket head bolt (101). Tightening torque: 5.91 - 6.53 kg•m (43 - 47 ft lb)
9. Insert poppet (32) and spring (33) in arm 1 para turn part (section C-C). Install plug assembly (72) with O-ring. Tightening torque: 7.44 - 8.06 kg•m (54 - 58 ft lb).
10. Insert poppet (32), spring (33), and spacer (57) in arm 2 para turn part (section L-L). Install plug assembly (72) with O-ring. Tightening torque: 7.44 - 8.06 kg•m (54 - 58 ft lb).

Reassembly of Antidrift Valve

1. Install O-rings (41 and 42) on surfaces of antidrift valve assembly of arm 1 section (section D-D) and boom 1 section (section E-E).
2. Insert poppet (32) and spring (39). Install spacer assembly (40) with O-ring and backup ring.

IMPORTANT

Be careful of installation position of O-ring and backup ring.

If they are reversed, the O-ring will be damaged and an oil leak can occur.

Check installing of O-ring (40-4) on spacer assembly and be careful of installation direction.

3. Install antidrift valve assembly (67, two places) and socket head bolt. Tightening torque: 3.98 - 4.49 kg•m (29 - 32 ft lb).

Reassembly of Spare Section Part

1. Install O-ring (89) on cap (88, two places) and fasten it in place with socket head bolt (76). Tightening torque: 5.91 - 6.53 kg•m (43 - 47 ft lb).
2. Install O-ring and backup ring on plug assembly (87, two places). Install plug assembly. Tightening torque: 7.95 - 8.97 kg•m (58 - 65 ft lb)

Reassembly of Arm Regeneration Release Valve

1. Install O-ring (30) and backup ring (31, two places) on sleeve (28).
2. Install piston (29) and spool (27) on sleeve. Insert sleeve in valve housing.
3. Install O-ring (25) on plug (27), insert spring (26) and install it in valve housing. Tightening torque: 10.50 - 11.52 kg•m (76 - 83 ft lb).

Reassembly of Arm 1 Para turn Spool

1. Install spool of subassembly condition (19) to valve housing.

IMPORTANT

After inserting spool, check to see if it slides easily.

2. Install O-ring (23) on cap (18) and fasten it in place with socket head bolt (78). Tightening torque: 0.90 - 1.10 kg•m (6.49 - 7.97 ft lb).

Reassembly of Main Spool

1. Install O-ring on mating surface of valve housing cap.
2. Install spool of subassembly condition (2-6, 14-17) in same positions that they were remove from during disassembly

IMPORTANT

Align spool with hole and insert it slowly.

After inserting spool, check to see if it slides easily.

If spool is inserted when it is in a poor operating condition with a scratch, it can cause a malfunction of the spool.

3. Install cap (12, ten places) and fasten it in place with socket head bolt (74). A129
4. Install cap (8, ten places) and fasten it in place with socket head bolt (74). Tightening torque: 3.98 - 4.49 kg•m (29 - 32 ft lb)
5. Install O-ring on plug assembly (72) and tighten it to two sides of cap of travel straight section (section H-H).
6. Install O-ring (62) on plug assembly (91) and install it on long cap of spare section (section G-G). Install O-ring (62) on plug assembly (105). Install plug assembly on short cap of spare section (section G-G).

IMPORTANT

When tightening plug to cap, be careful not to over tighten. If it is over tighten, threads of cap can be damaged.

Reassembly of Miscellaneous Plug Kinds

1. Install O-ring on plug assembly (60) and install. Tightening torque: 10.50 - 11.52 kg•m (76 - 83 ft lb)
2. Install O-ring (62) on plug assembly (61) and install. Tightening torque: 3.98 - 4.49 kg•m (29 - 32 ft lb)
3. Tighten orifice plug (63). Tightening torque: 1.43 - 1.84 kg•m (10.33 - 13.28 ft lb).
4. Install O-ring on plug assembly (92) and install. Tightening torque: 20.90 - 23.15 kg•m (151 - 167 ft lb).
5. Install O-ring on plug assembly (71) and install. Tightening torque: 1.43 - 1.84 kg•m (10 - 13 ft lb).
6. Install O-ring on plug assembly (72) and install. Tightening torque: 7.44 - 8.06 kg•m (54 - 58 ft lb)

Reassembly of Main Relief Valve

Check if there is dirt and paint chips around threads of plug (1, 6, 8) and nut (4, 7). Replace O-ring with new one. Clean installation portion of relief valve and valve housing. Install valve, and then tighten plug (1, width across flats: 32 mm). Tightening torque: 7.95 - 8.97 kg•m (58 - 65 ft lb). If relief valve was disassembled, adjust pressure by referring to "Main Relief Valve" on page 41.

NOTE: *The torque values are based on use of lubricated threads.*

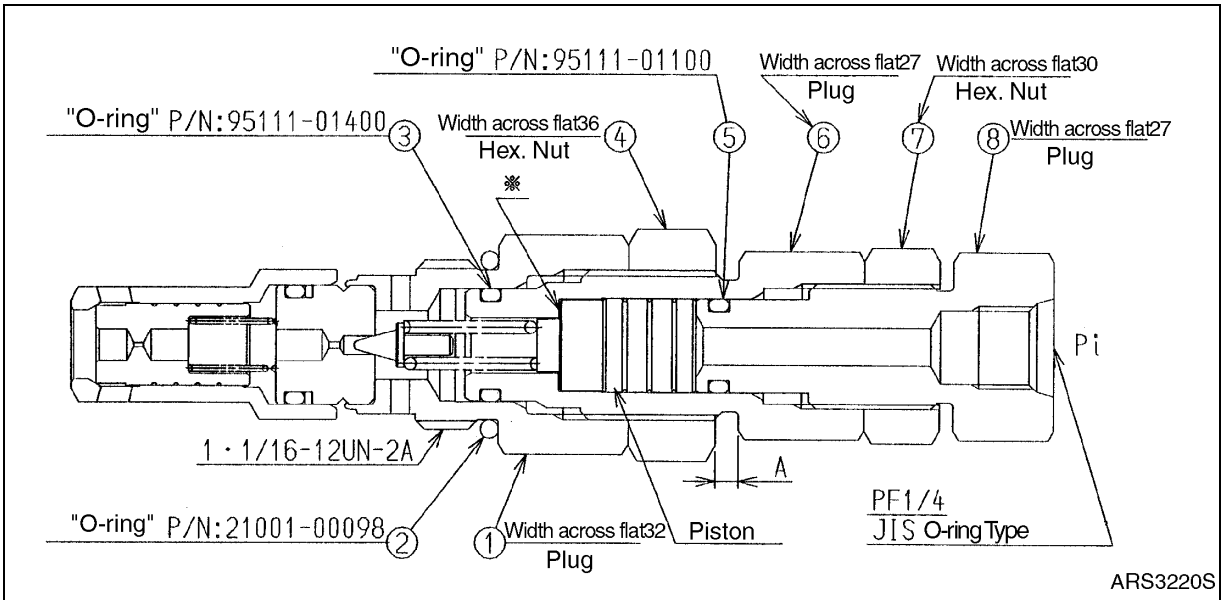


Figure 54

Reassembly of Overload Relief Valve

Check if there is dirt and paint chips around cap (1). Replace O-ring with new one. Clean installation portion of relief valve and valve housing. Install relief valve and tighten cap (1). Torque: 78-88N*M

If relief valve was disassembled, adjust pressure by referring to "Over Load Relief Valve" on page 42.

NOTE: The torque values are based on use of lubricated threads.

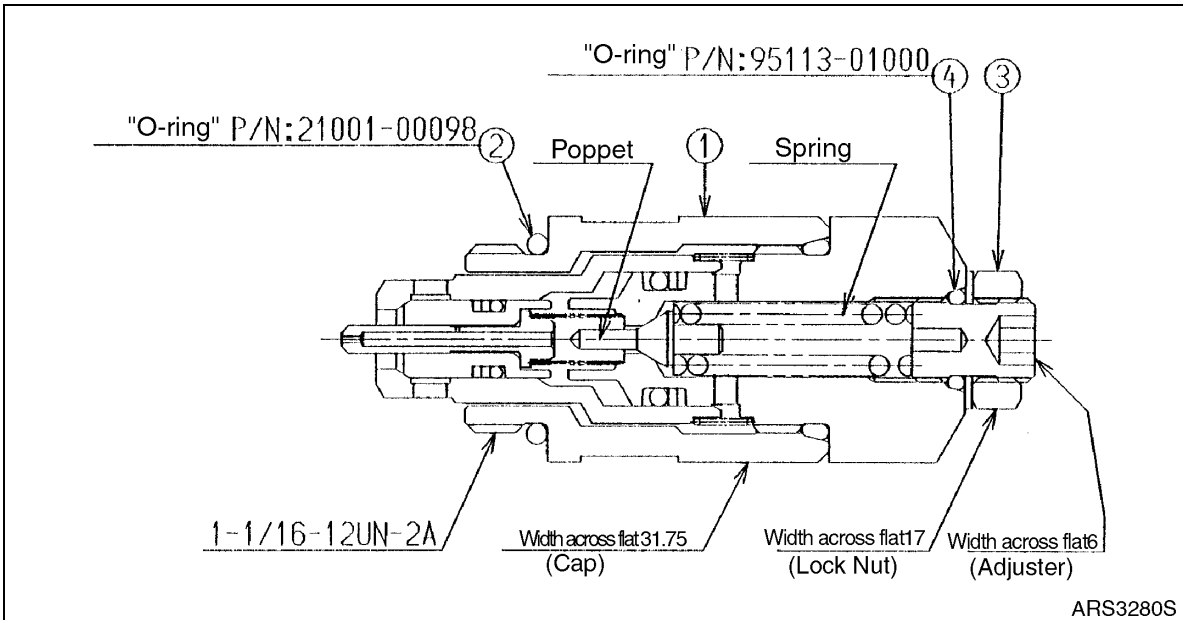


Figure 55

Reassembly of Low Pressure Relief Valve

Check if there is dirt and paint chips around plug (1). Replace O-ring (3) with new one. Install new O-ring (4) on sleeve (2). Clean installation portion of relief valve and valve housing. Tighten plug (1, width across flats: 32 mm) of relief valve. Torque: 10.50 - 11.52 kg*m (76 - 83 ft lb)

NOTE: The torque values are based on use of lubricated threads.

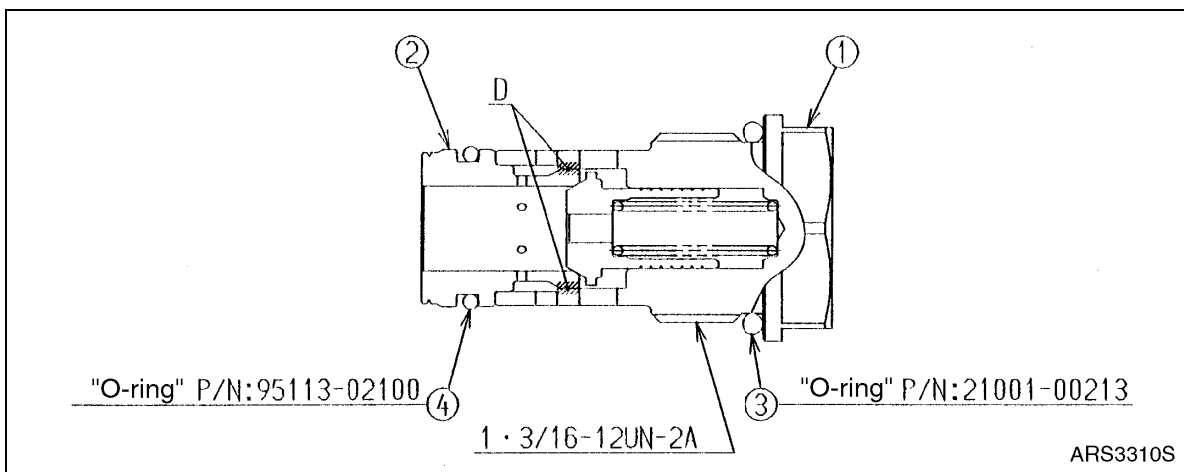


Figure 56

INSTALLATION

1. Be careful not to apply stress on control valve when attaching piping and hoses. Unnecessary stress may cause spools to bind and the control valve from functioning properly.
2. Tighten the assembling bolts alternately and evenly to the specified torque.
3. If welding procedures are being performed near the control valve, the valve could be damaged by weld spatter and heat. Use adequate shielding to protect valve.
4. Clean the installation portion of relief valve and install it. Tighten plug (1). Torque: 10.50 - 11.52 kg•m (76 - 83 ft lb).
5. Valve ports should be covered with caps, plugs or tape to protect them from dust and other foreign materials, until pipe laying work is started.

START-UP PROCEDURES

1. Before operating machine, make sure that oil passages and hydraulic oil are clean.
2. Hydraulic oil of which annealing point is 82-113°C should be used in the hydraulic system.
3. Relief valve pressure should not be raised above specified pressure setting.
4. The difference between main relief valve setting pressure and over load relief valve setting pressure should not be over 2.0 MPa.
5. Before operating machine, the hydraulic system should be fully warmed up. If machine is operated with cold hydraulic oil and valve, be careful of the following, to prevent spool sticking due to heat shock.

NOTE: *Do not operate main relief valve or over load relief valve suddenly and continuously. Cycle oil through all actuators and warmed up cold hydraulic oil in the lines and components uniformly.*

NOTE: *Slight or compound work should not be suddenly operated at cold weather because heat is developed partly at all the orifices.*



PILOT CONTROL VALVE (WORK LEVER / JOYSTICK)



CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that is in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

MODEL	SERIAL NUMBER RANGE
Solar 300LC-V	1001 and Up
Solar 340LC-V	1001 and Up

TABLE OF CONTENTS

General Description.....	3
Theory of Operation	3
Structure	3
Function	3
Parts List	4
Specifications	5
Torques	5
Performance.....	6
Removal	6
Disassembly	9
Cleaning and Inspection (Wear Limits and Tolerances)	13
Reassembly.....	14
Installation	19
Start-up Procedures	20

GENERAL DESCRIPTION

THEORY OF OPERATION

Structure

The remote control valve contains four push rods, spring holders, spools and return springs, which are located in the valve casing. The valve works as a pressure reduction valve.

The housing has six ports, which include input port P, tank port T, and four secondary pressure ports.

The electric horn switch is installed in the valve handle. Gear pump pressure is used for operating control spools.

Function

1. Neutral Mode

When the lever is in neutral mode, the spool is thrust upward by return spring, and the force of balancing spring, which determines the secondary discharge pressure, is not transmitted to the spool. The input port is closed and the pressure of the output port is the same as the pressure of the tank port T.

2. Control Mode

When push rod is pushed, the balance spring begins to compress, and spring force is conveyed to the spool. Ports P and T are then connected together and the pilot pressure is conveyed to the area. Output pressure works on the bottom of the spool, thrusting the spool upward until it is balanced with the power of the balance spring. The secondary pressure (output pressure), therefore, changes in proportion to the compression force of the balance spring.

PARTS LIST

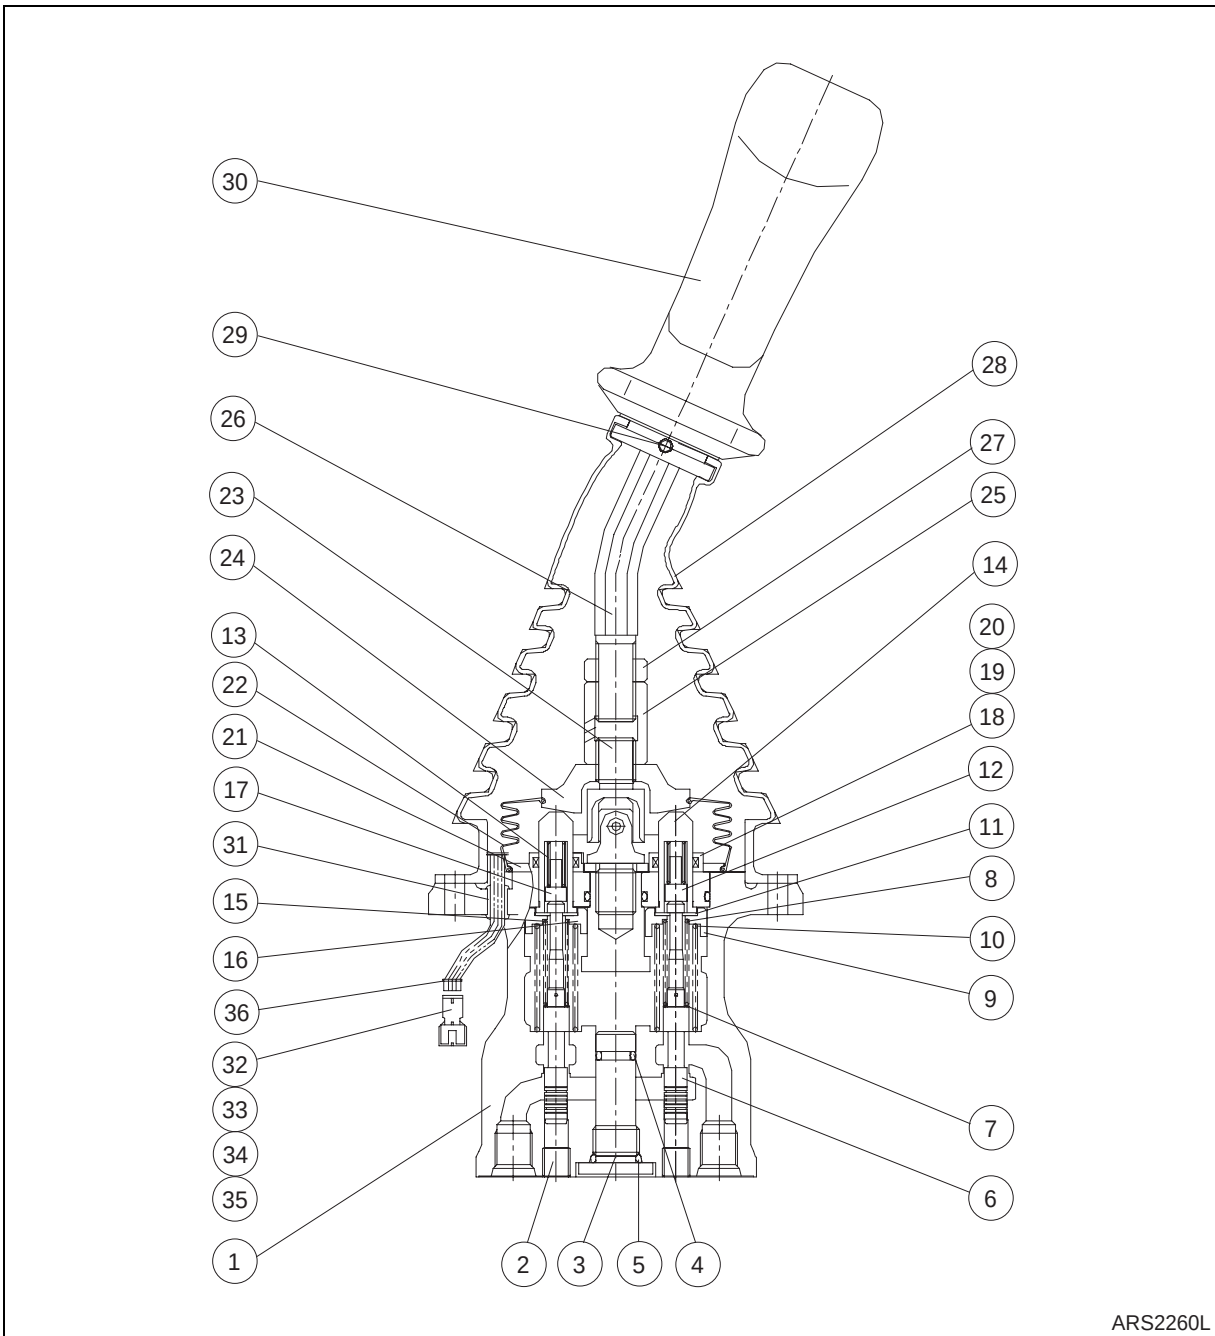


Figure 1

Reference Number	Description
1	Case
2	Plug
3	Plug
4	O-ring
5	O-ring
6	Spool
7	Shim
8	Spring
9	Spring Seat
10	Spring
11	Stopper
12	Stopper
13	Spring
14	Push Rod
15	Spring
16	Spring Seat
17	Stopper
18	Plug

Reference Number	Description
19	O-ring
20	Rod Seal
21	Plate
22	Boot
23	Joint Assembly
24	Swash Plate
25	Hex Nut
26	Handle Bar
27	Nut
28	Boot
29	Spring Pin
30	Handle Assembly
31	Bushing
32	Terminal
33	Seal Wire
34	Housing
35	Holder Rear
36	Clip Band

SPECIFICATIONS

Pilot Control Valve	Specification
Type	Pilot Control (2-Stage Joystick)
Pressure / Stroke	(1,3) 28 kg/cm ² @ 6.5 mm Stroke (398 psi @ 0.256 in. Stroke) (2,4) 28 kg/cm ² @ 7.5 mm Stroke (398 psi @ 0.295 in. Stroke)
Weight	4.8 kg (10.58 lb)

Torques

Reference Number	Bolt Size	Tool	Torque
2	PT 1/8	5 mm L-Wrench	150 kg•cm (36.2 ft lb)
3	PF 3/8	8 mm L-Wrench	500 kg•cm (36.2 ft lb)
24	M14	24 mm Spanner	1,240 kg•cm (89.7 ft lb)
25	M14	22 mm Spanner	1,240 kg•cm (89.7 ft lb)
27	M14	22 mm Spanner	1,240 kg•cm (89.7 ft lb)

Performance

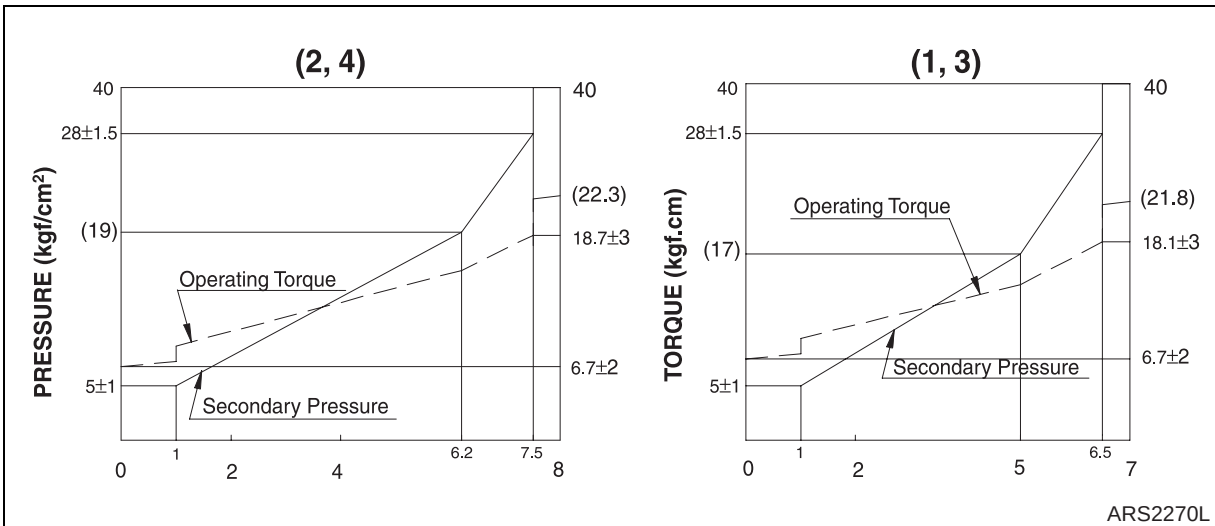


Figure 2

REMOVAL

1. Park on firm and level ground.
2. Lower front attachment (bucket) to the ground.
3. Stop the engine.
4. Set safety lever on "RELEASED" position.
5. Turn starter switch "ON."



WARNING!

If engine must be run while performing maintenance, use extreme care. Always have one person in the cab at all times. Never leave the cab with the engine running.

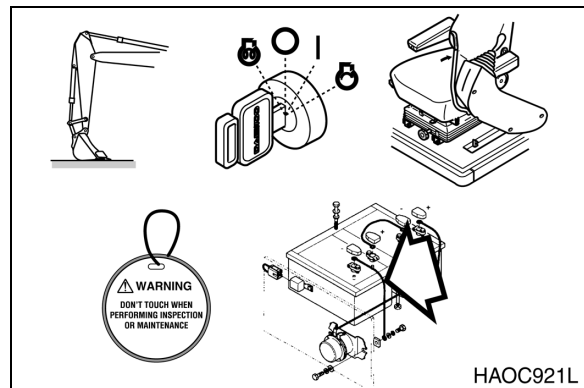


Figure 3

6. Fully stroke work levers (joysticks) in all directions to relieve pressure from accumulators.
7. Set safety lever on "LOCK" position.
8. Turn key to "OFF" position and remove from starter switch.
9. Hang maintenance warning tag on controls.
10. Disconnect negative (-) battery cable leading to frame from battery.

11. Remove four bolts and washers (2, Figure 4) and cover (1).
12. Pull cap (5, Figure 4) out and remove two screws, two bolts and washers (6) and cover (3).
13. Remove three screws, one bolt and washers (7, Figure 4) and cover (4).

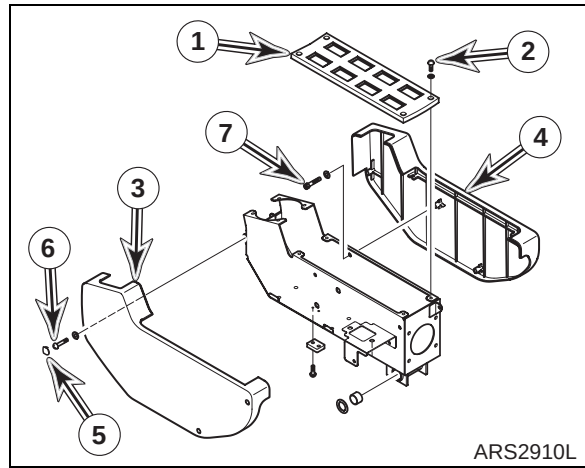


Figure 4

14. Remove four bolts (3, Figure 5) and cover (2), and pull remote control valve LH (1) out.
15. Tag and disconnect hoses from remote control valve LH (1, Figure 5). Plug and cap hoses and ports to prevent contamination from entering hydraulic system or component.

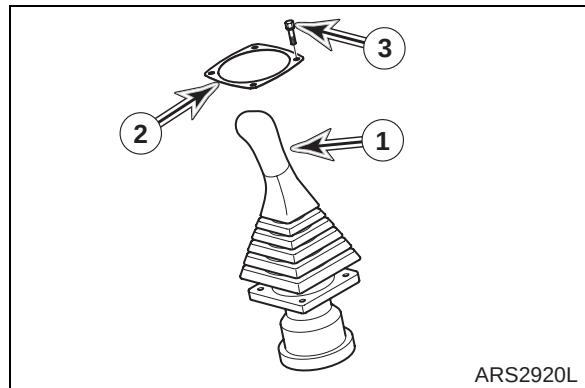


Figure 5

16. Remove four bolts and washer (2, Figure 6), and cover (2).
17. Pull cap (5, Figure 6) out and remove screw, three bolts and washers (6) and cover (3).
18. Remove two screws, two bolts and washers (7 and 8, Figure 6) and cover (4).

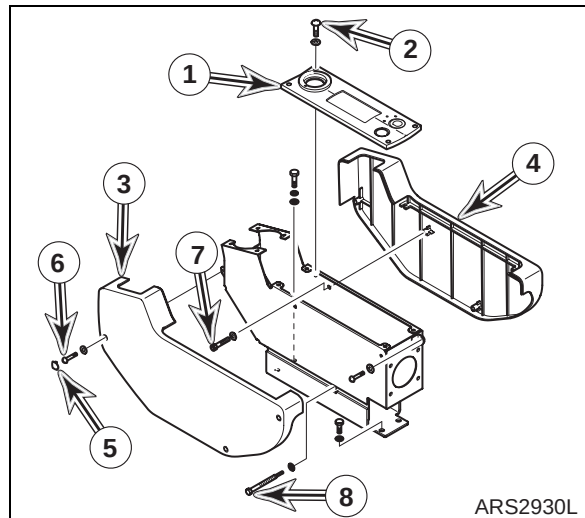


Figure 6

19. Remove four bolts (3, Figure 7) and cover (2), and pull remote control valve RH (1) out.
20. Tag and disconnect hoses from remote control valve RH (1, Figure 7). Plug and cap hoses and ports to prevent contamination from entering hydraulic system or component.

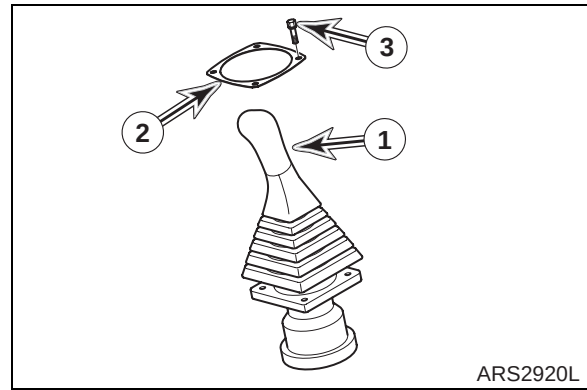


Figure 7

DISASSEMBLY

1. Lift up the boot (28) and pull the switch cord through the hole in the case (1).



Figure 8

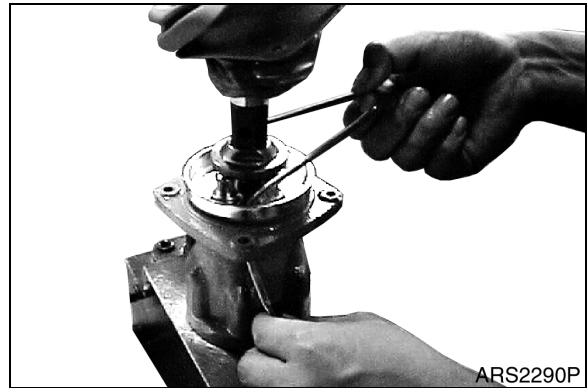


Figure 9

2. Loosen nut (27) from hex nut (25) and remove handle assembly (30).



Figure 10

3. Remove hex nut (25) and swash plate (24).

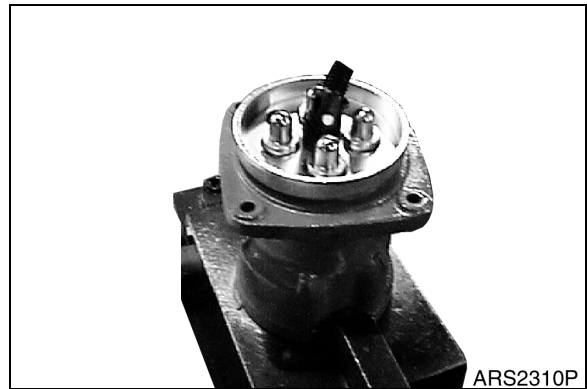


Figure 11

4. Remove joint (23) from case (1).

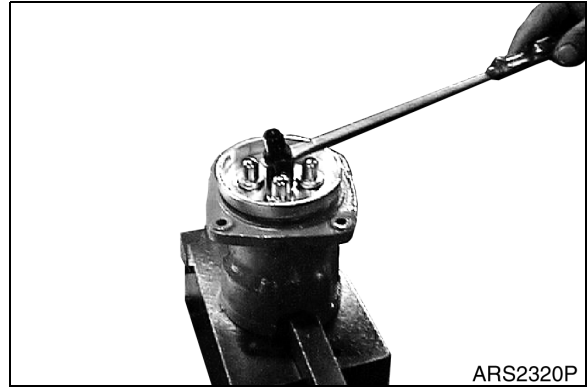


Figure 12

5. Remove plate (21).

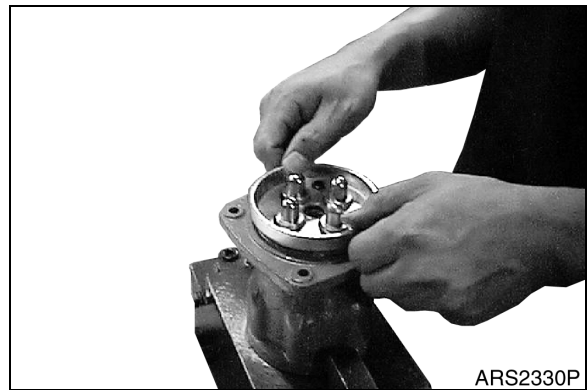


Figure 13

6. Press spring (10) and remove plug (18).

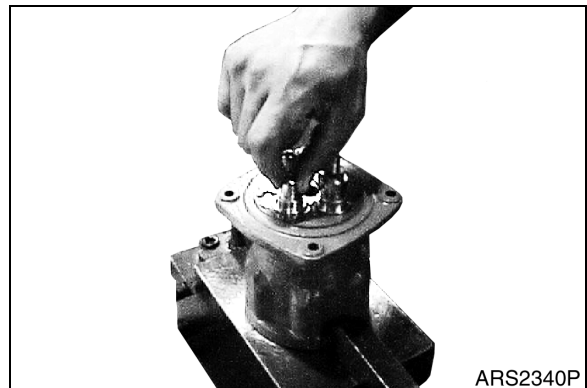


Figure 14

7. Remove pressure reduction valve (6, 7, 8, 9, 11) and spring (10).

IMPORTANT

Mark valve disassembling position (port).

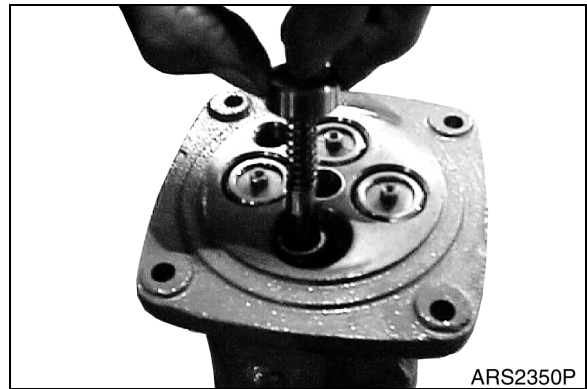


Figure 15

8. Remove plug (3) and four plugs (2).



Figure 16

9. Remove stopper (11) from pressure reduction valve (6, 7, 8, 9, 11).

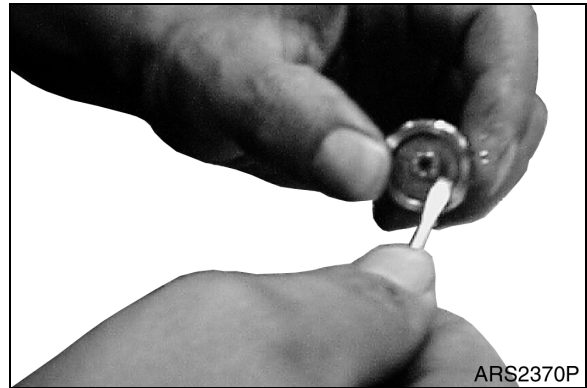


Figure 17

10. Remove spool (6), spring seat (9), spring (8) and shim (7).

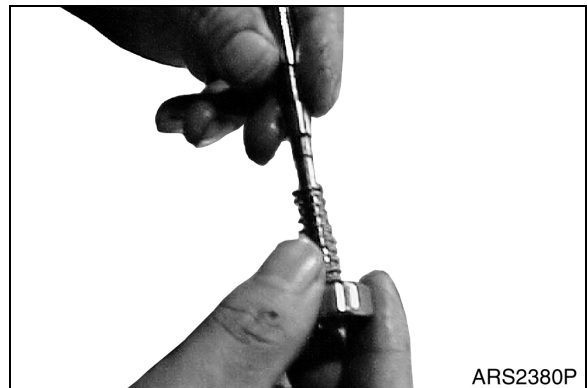


Figure 18

11. Remove push rod (14) and plug (18).

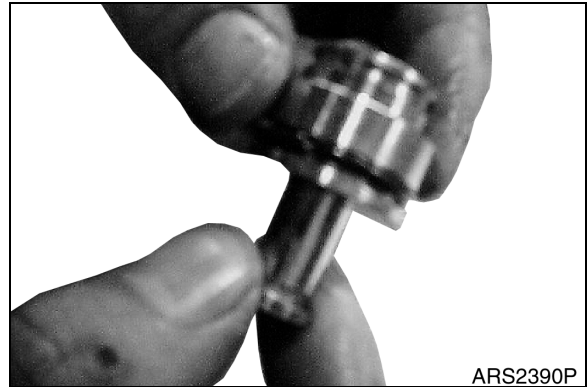


Figure 19

12. Remove O-ring (19) from plug (18).

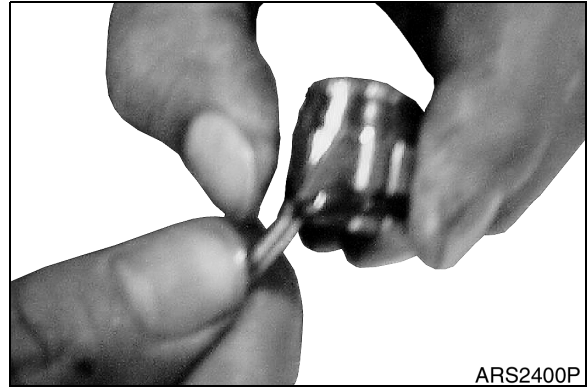


Figure 20

13. Remove seal (20) from plug (18).

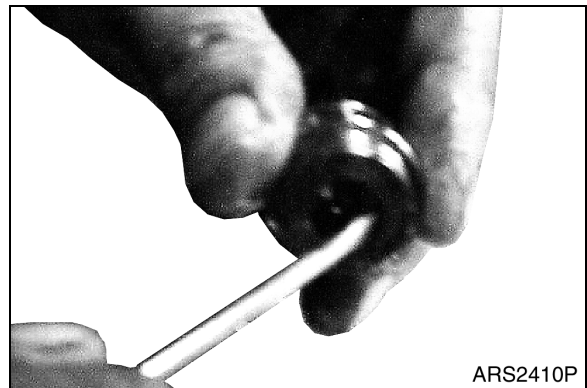


Figure 21

CLEANING AND INSPECTION (WEAR LIMITS AND TOLERANCES)

For general cleaning and inspection procedures, refer to "General Maintenance Procedures" section.

Clean all parts and dry them with compressed air. Keep all parts free from dust. Lubricate all moving parts.

REASSEMBLY

1. Tighten plug (3) slowly.

NOTE: Tightening torque: 350 kg•cm (25.3 ft lb).

Tighten four plugs (2).

NOTE: Use Loctite #592 pipe sealant on plugs.

NOTE: Tightening torque 150 kg•cm (10.9 ft lb).

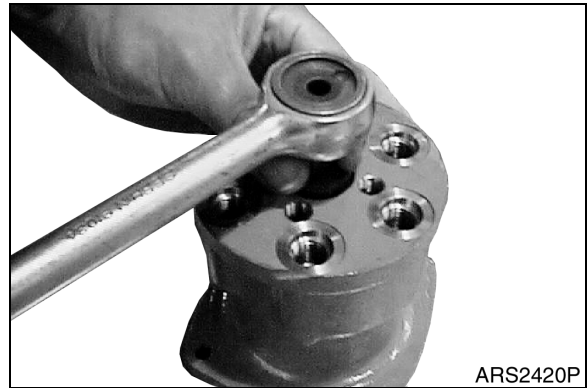


Figure 22

2. Install shim (7), spring (8), spring seat (9), and spool (6).

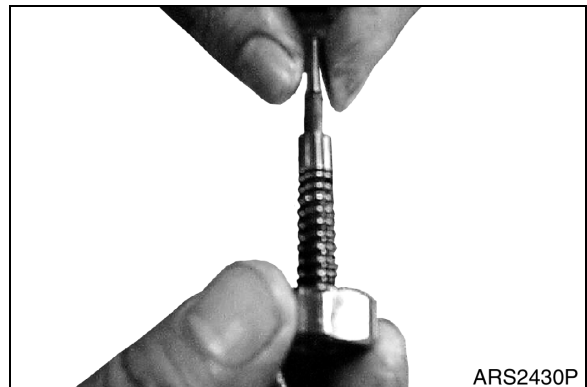


Figure 23

3. Press spring (9) and install stopper (11).

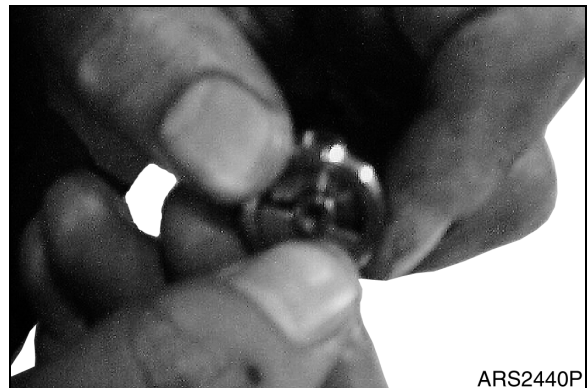


Figure 24

4. Install spring (10) in case (1) and pressure reducing valve assembly (6, 7, 8, 9, 11).

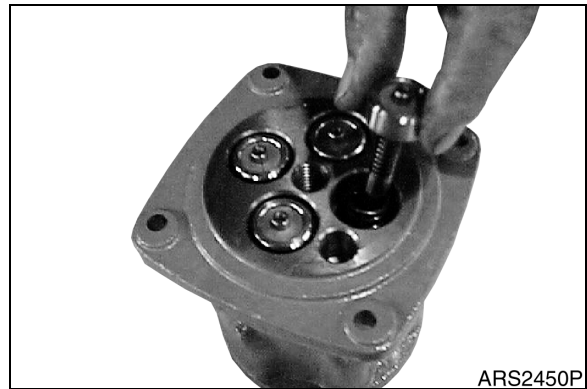


Figure 25

5. Install seal (20) on plug (18).



Figure 26

6. Install O-ring (19) on plug (18).



Figure 27

7. Install push rod (14) on plug (18).

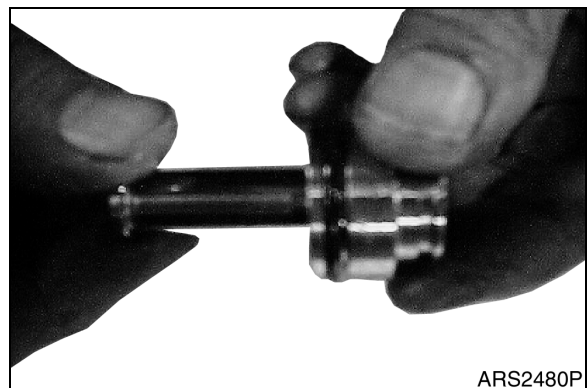


Figure 28

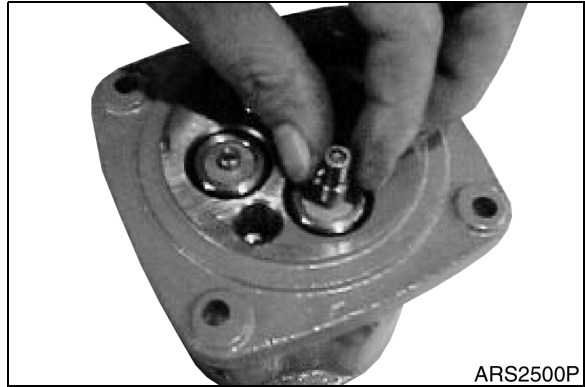
8. Install spring (13) on stopper (12).



ARS2490P

Figure 29

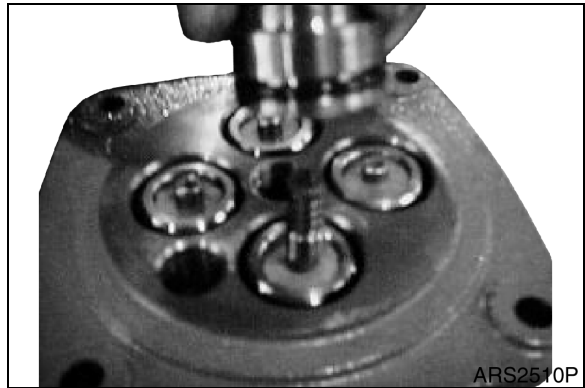
9. Position stopper (12) and spring (13) on pressure reducing valve.



ARS2500P

Figure 30

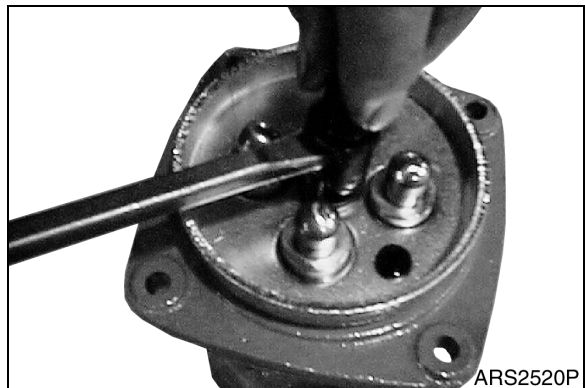
10. Install plug (18) in case (1).



ARS2510P

Figure 31

11. Install plate (21) and tighten joint (23).



ARS2520P

Figure 32

12. Install swash plate (24) on joint (23).

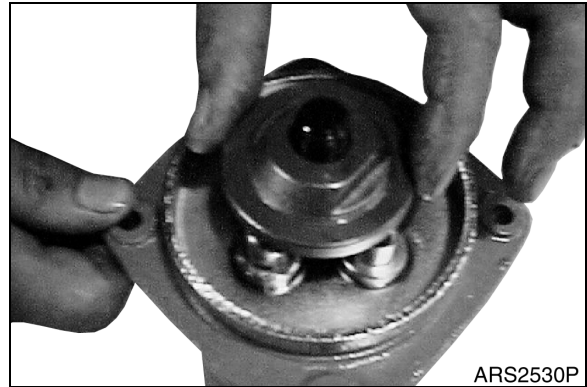


Figure 33

13. Install hex nut (25) and tighten swash plate (24).

NOTE: Tightening torque 1,240 kg•cm (89.7 ft lb).

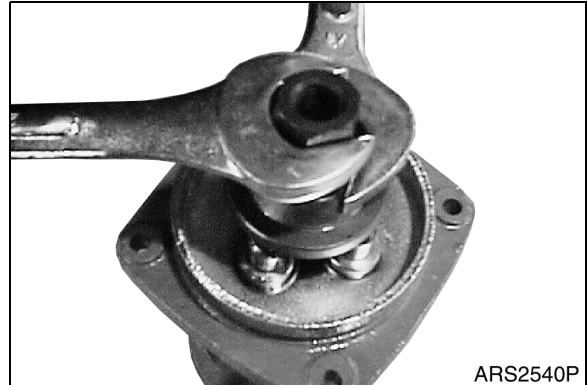


Figure 34

14. Pull cord and tube out through hole of hex nut (25).

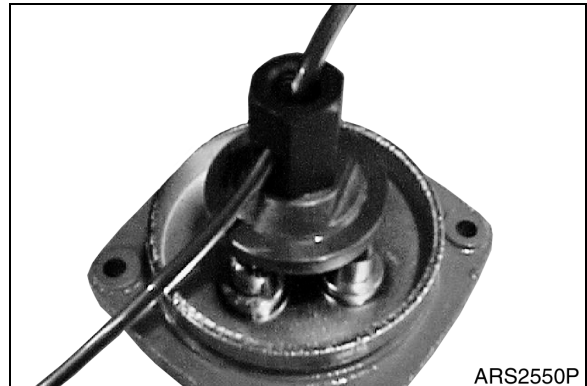


Figure 35

15. Align the direction of handle (30) and tighten hex nut (25) and nut (27).

NOTE: Tightening torque 1,240 kg•cm (89.7 ft lb).

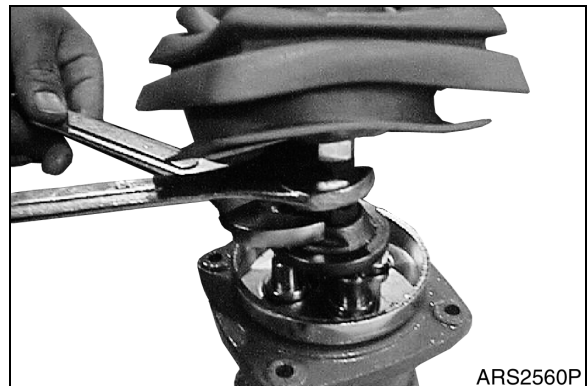


Figure 36

16. Grease joint (23), swash plate (24) and push rod (14).

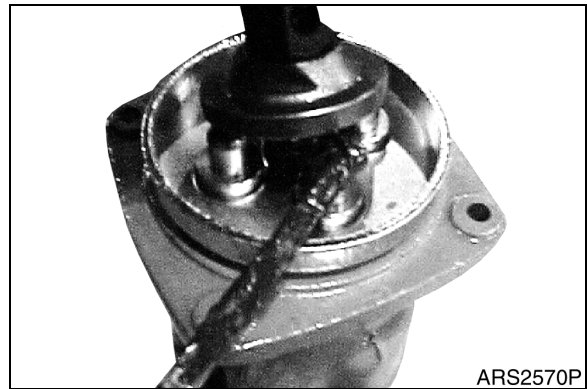


Figure 37

17. Install boot (28).

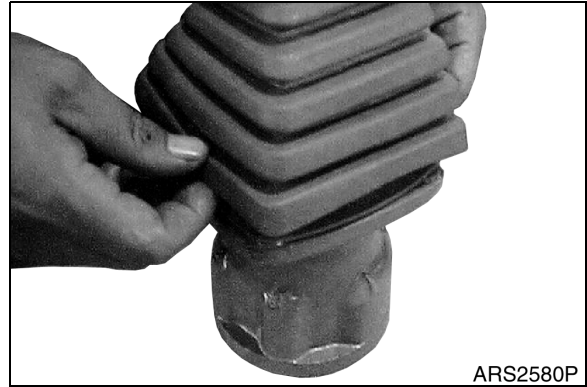


Figure 38

INSTALLATION

1. Connect hoses as tagged during removal to remote control valve RH (1, Figure 39).
2. Position remote control valve RH (1, Figure 39) on control stand and install four bolts and washers (3) and cover (2).

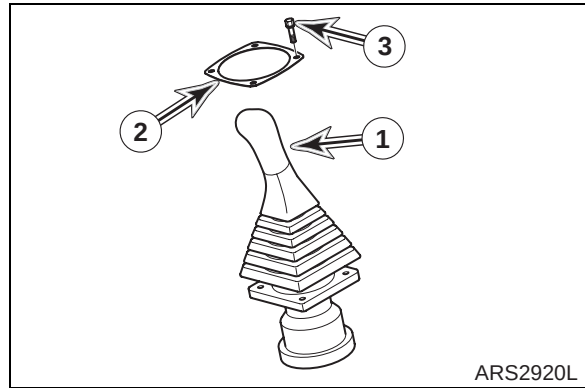


Figure 39

3. Install two screws, two bolts and washers (7 and 8, Figure 40) and cover (4).
4. Install a screw, three bolts and washers (6, Figure 40) and cover (3). Push cap (5) into cover (3).
5. Install four bolts and washers (2, Figure 40) and cover (1).

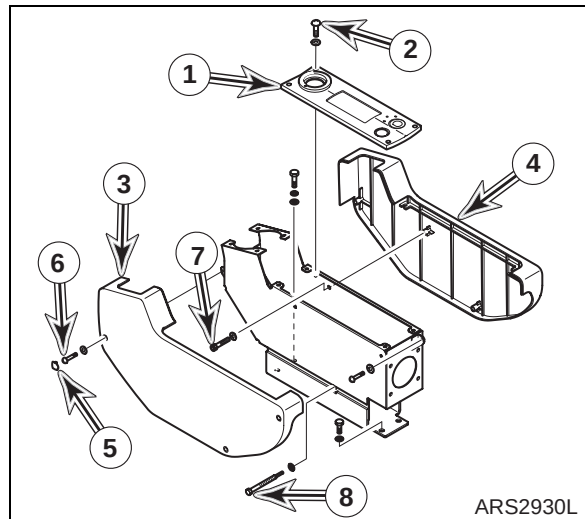


Figure 40

6. Connect hoses as tagged during removal to remote control valve LH (1, Figure 41).
7. Position remote control valve LH (1, Figure 41) on control stand and install four bolts and washers (3), and cover (2).

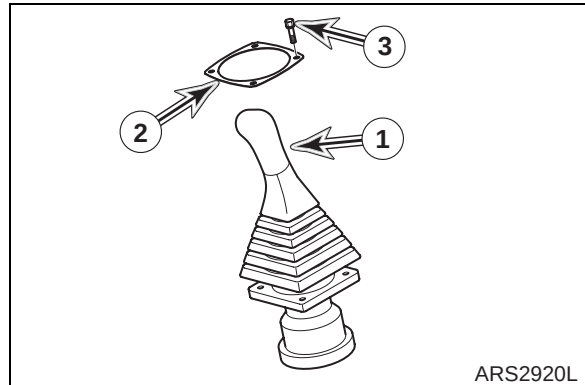


Figure 41

8. Install three screws, one bolts and washers (7, Figure 42), and cover (4).
9. Install two screws, two bolts and washers (6, Figure 42), and cover (3). Push cap (5) into cover (3).
10. Install four bolts and washers (2, Figure 42), and cover (1).

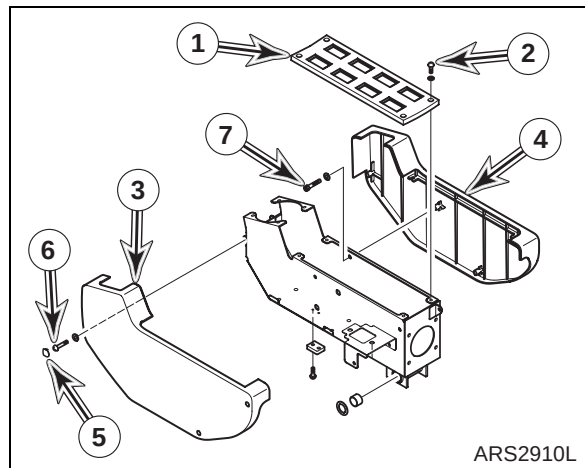


Figure 42

START-UP PROCEDURES

1. Start engine and set throttle at "LOW IDLE."
2. Set safety lever on "UNLOCK" position.
3. Slowly cycle boom, arm, bucket cylinders and swing motor about five times without a load to vent air from pilot lines. Do this for 5 minutes.

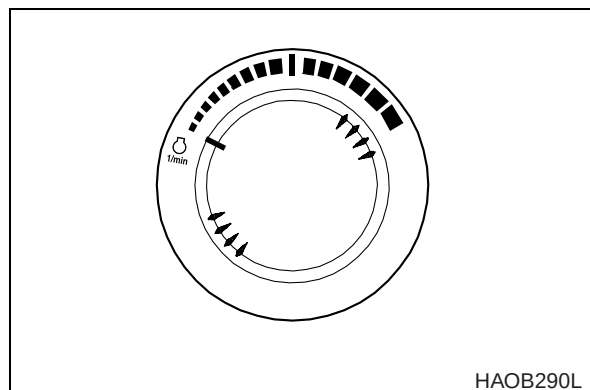


Figure 43

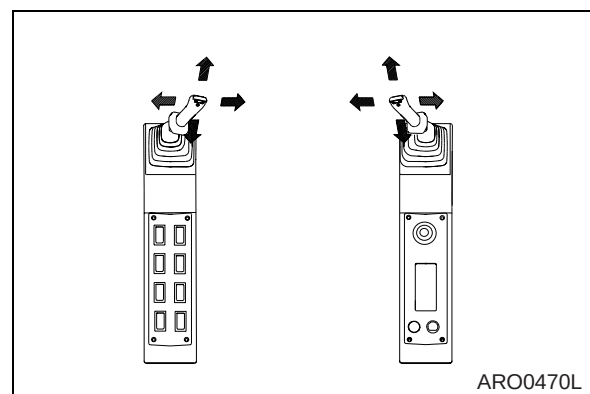


Figure 44



TRAVEL CONTROL VALVE (WITH DAMPER)



CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that is in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

MODEL	SERIAL NUMBER RANGE
Solar 300LC-V	1001 and Up
Solar 300LL	1001 and Up
Solar 340LC-V	1001 and Up
Solar 420LC-V	1001 and Up
Solar 470LC-V	1001 and Up

TABLE OF CONTENTS

General Description.....	3
Theory of Operation	3
Pressure Reducing Valve.....	3
Operating Theory of Damper Mechanism.....	5
Parts List	6
Specification.....	7
Torque	7
Troubleshooting, Testing and Adjustment.....	8
Removal	9
Disassembly	11
Cleaning and Inspection (Wear Limits and Tolerances)	17
Reassembly.....	18
Installation	23
Start-up Procedures	24

GENERAL DESCRIPTION

THEORY OF OPERATION

The damper valve is divided into two areas of operation. There is the pressure reducing valve (a) and the damper mechanism (b). The following hydraulic circuit is an example of a remotely located control valve.

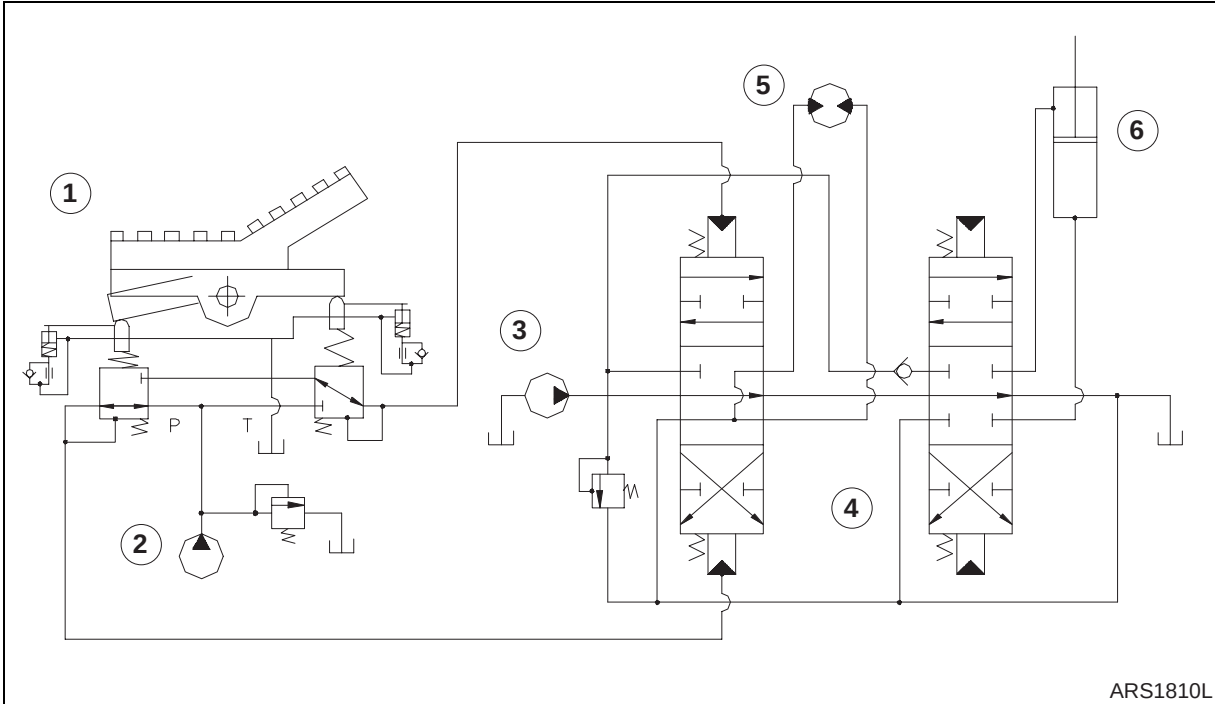


Figure 1

Reference Number	Description
1	Remote Control Valve
2	Pilot Pump
3	Main Pump

Reference Number	Description
4	Control Valve
5	Hydraulic Motor
6	Hydraulic Cylinder

Pressure Reducing Valve

1. Neutral Condition

If pedal is in neutral, spool is pushed up by return spring and spring seat. Port (P) is blocked by bottom part of spool and four operating ports (left forward and backward, right forward and backward) are connected to port (T) through inner hole of spool.

2. Half Operation Condition

If pedal is moved, push rod moves down, and they transmit this force through spring seat and control spring to spool. If spool is moved, primary pressure is transmitted through an inner hole of spool to operating port. If lever is stopped in middle position, compressed control spring force and secondary pressure transmitted through hole acts at bottom part of spool, balance is maintained by hydraulic force acted upward, and then this pressure is transmitted to traveling spool of control valve. That is,

primary pressure is transmitted to operating port as secondary pressure equivalent to control spring force compressed by spool.

3. Full Operating Condition

If pedal is moved to a maximum, bottom part of push rod presses spool seat to a maximum, and compresses control spring to a maximum. Primary pressure is transmitted through inner hole of spool to operating port, secondary pressure transmitted through spool overcomes control spring force and pushes spool up, but spool is restricted by push rod and does not move any more. That is, when pedal lever is moved to a maximum, control spring does not function, spool is restricted by push rod, and then primary pressure equalizes to secondary pressure.

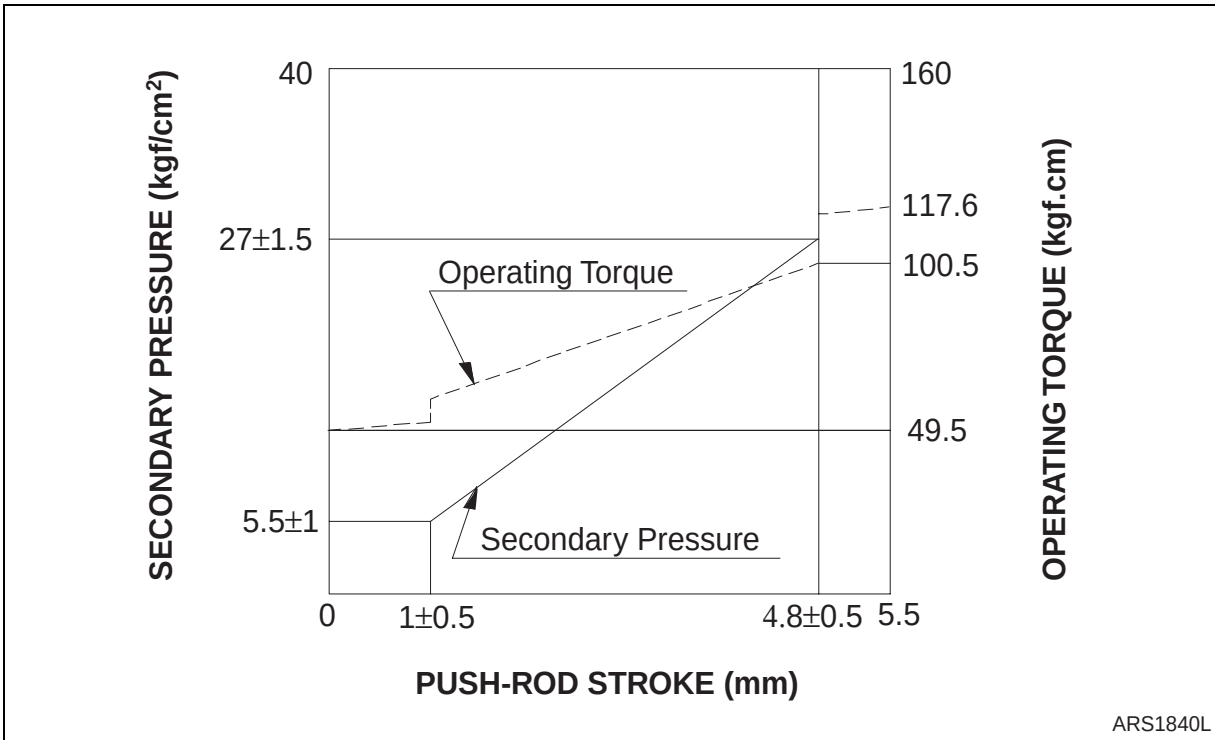


Figure 2

Operating Theory of Damper Mechanism

1. Operation When Operating Lever

When pushing pedal, pushing force pushing push rod and spool presses cylinder, return spring and hydraulic oil in cylinder is compressed, piston coming down with push rod compresses vibration prevention chamber of lower part, oil of vibration prevention chamber of lower part is flowed through orifice to oil pressure vibration prevention chamber of upper part of low pressure, at this time, ball check valve becomes closing condition because high pressure operates to vibration prevention chamber of lower part.

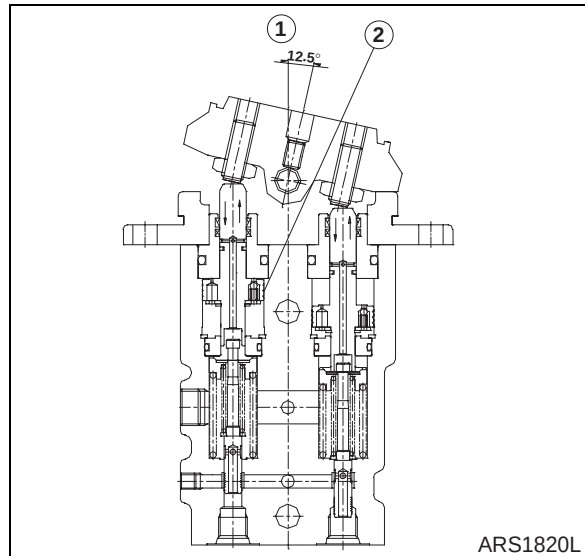


Figure 3

2. Operation When Operating Lever In Neutral Condition

Climbing restoring force acting on push rod, raises piston in oil pressure prevention chamber and compresses upper oil pressure prevention chamber. This compression operation of upper oil pressure prevention chamber prevents the push rod from quickly rising by restoring spring, and the damping force is generated.

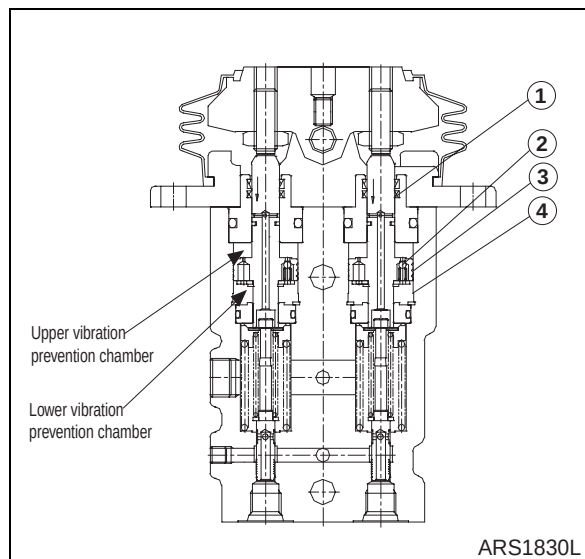


Figure 4

PARTS LIST

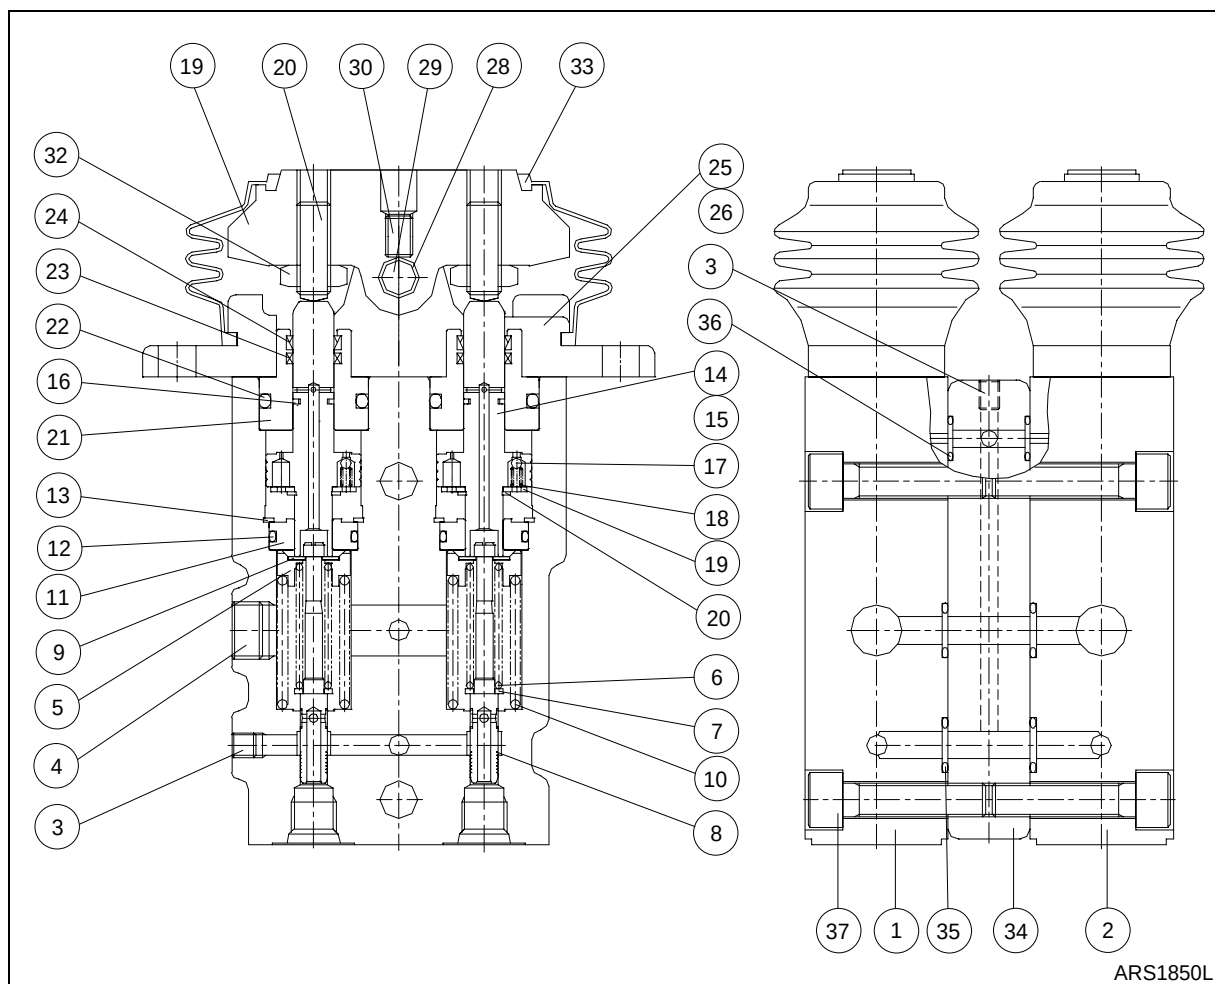


Figure 5

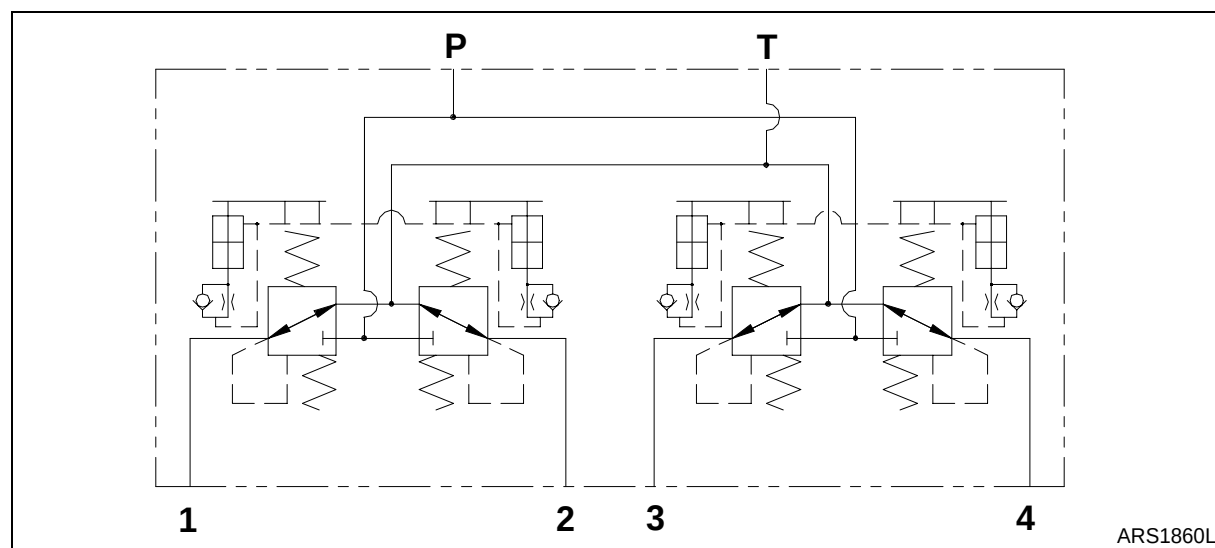


Figure 6

Reference Number	Description
1	Body (1)
2	Body (2)
3	Plug
4	Plug
5	Spring Seat
6	Spring
7	Spring Seat
8	Spool
9	Stopper
10	Spring
11	Rod Guide
12	O-ring
13	Snap Ring
14	Push Rod
15	Spring Pin
16	Seal
17	Steel Ball
18	Spring
19	Plate

Reference Number	Description
20	Snap Ring
21	Plug
22	O-ring
23	Rod Seal
24	Dust Deal
25	Cover
26	Wrench Bolt
27	Cam
28	Bushing
29	Camshaft
30	Set Screw
31	Set Screw
32	Hex Nut
33	Bellows
34	Space
35	O-ring
36	O-ring
37	Wrench Bolt

SPECIFICATION

Travel Control Valve	Specification
Type	Pilot Control (With Damper)
Pressure / Stroke	27 kg/cm ² @ 4.8 mm Stroke (384 psi @ 1.890 in. Stroke)
Weight	7.8 kg (17.2 lb)

TORQUE

Part Reference Number	Bolt Size	Tool	Tightening Torque
26	M6	5 mm L-Wrench	88 kg•cm (6.37 ft lb)
30	M8	4 mm L-Wrench	100 kg•cm (7.23 ft lb)
32	M10	17 mm Spanner	440 kg•cm (31.8 ft lb)
37	M10	8 mm L-Wrench	440 kg•cm (31.8 ft lb)

TROUBLESHOOTING, TESTING AND ADJUSTMENT

At times pinpointing the source of the problem may be difficult. The following table lists some possible problems, causes and remedies. Refer to this table for possible causes and remedies to help in correcting problems.

The table only lists general problems, causes and remedies. Often the problem is not caused by the failure of a single part but, may be the result of a combination of problems from related parts and their components. Possible problems other than the ones listed are not being specified but that is not to say that these are the only possible problems that can occur. The technician must diagnose the problem, considering all possible causes and repair the source of the malfunction.

Problem	Possible Cause	Remedy
Secondary pressure will not increase.	Low primary pressure.	Adjust primary pressure.
	Defective secondary pressure select spring.	Replace with new spring.
	Gap between spool and casing is abnormally large.	Replace spool casing assembly.
	Defective operating parts and components.	Disassemble/reassemble and replace defective parts.
Unstable secondary pressure.	Jamming of interconnected parts.	Repair/replace cause of jamming.
	Unstable tank line pressure.	Install direct line to hydraulic tank.
	Air in hydraulic lines.	Vent air from system.
Abnormally high secondary pressure.	High tank line pressure.	Install direct line to hydraulic tank.
	Jamming of unconnected parts.	Repair/replace cause of jamming.
No damping.	Jamming of interconnected parts.	Repair/replace cause of jamming.
	Worn damping piston and housing.	Replace damping piston and housing assembly.
	Defective/damaged check valve.	Disassemble and examine check valve.
	Worn damping piston orifice.	Replace damping piston.
Damping piston feels heavy.	Defective interconnected components.	Repair/replace defective parts.
	Restricted movement of damping piston.	Repair/replace damaged piston.
	Plugged orifice.	Replace related parts.

REMOVAL

1. Park on firm and level ground.
2. Lower front attachment (bucket) to the ground.
3. Stop the engine.
4. Set safety lever on "RELEASED" position.
5. Turn starter switch "ON."



WARNING!

If engine must be run while performing maintenance, use extreme care. Always have one person in the cab at all times. Never leave the cab with the engine running.

6. Fully stroke work levers (joysticks) in all directions to relieve pressure from accumulators.
7. Set safety lever on "LOCK" position.
8. Turn key to "OFF" position and remove from starter switch.
9. Hang maintenance warning tag on controls.
10. Disconnect negative (-) battery cable leading to frame from battery.
11. Remove cabin under cover by loosening bolts.
12. Tag and disconnect hoses from pedal valve (1, Figure 8). Plug and cap hoses and ports to prevent contamination from entering hydraulic system or component.

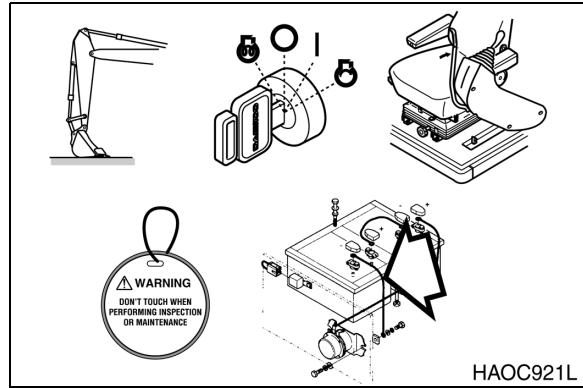


Figure 7

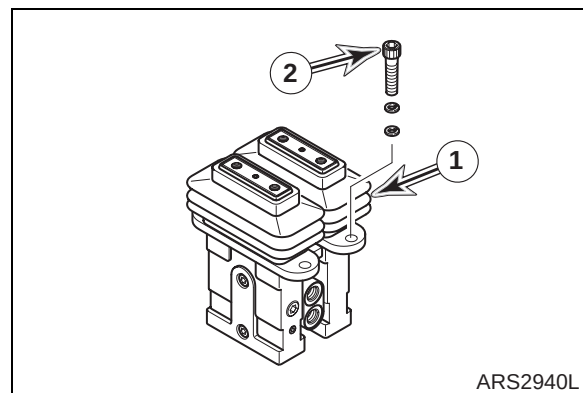


Figure 8

13. Remove rubber boots (1, Figure 9).
14. Remove four bolts and washers (2, Figure 9), pedal brackets (3) with levers.

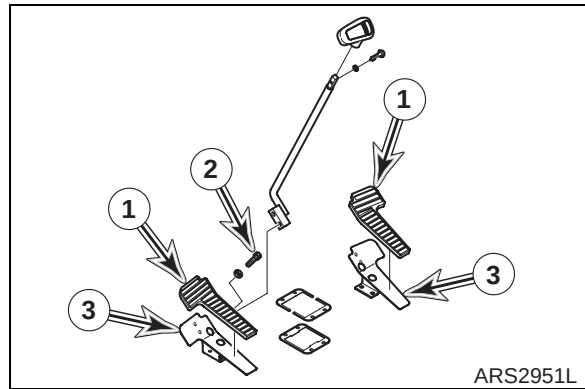


Figure 9

15. Remove four bolts and washers (2, Figure 10), and pedal valve (1).

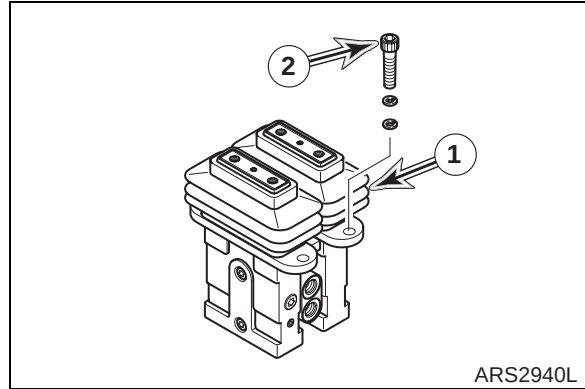


Figure 10

DISASSEMBLY

IMPORTANT

1. Prepare a clean, well lit, stable work bench where disassembly can be performed.
2. Prepare the necessary tools, materials and a container in which disassembled parts can be stored.
3. All precision parts must be handled with great care and all parts must be reassembled to their original position.
4. All parts must be carefully reassembled and not be forced. Damaged parts will cause oil leaks and poor performance of the equipment.
5. Do not leave parts exposed to air during or after disassembly. Exposed parts will come in contact with contaminants and will cause rust and damage.

1. Remove bellows (33).

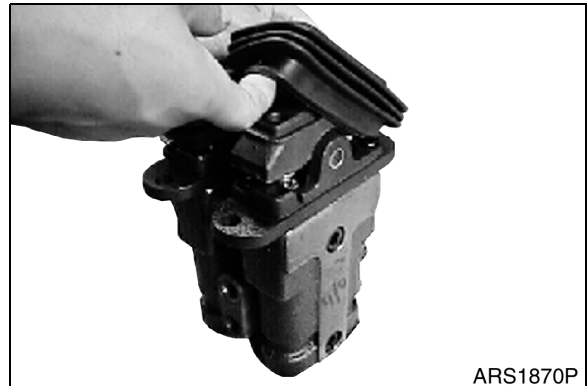


Figure 11

2. Remove set screw (30) by using L wrench.

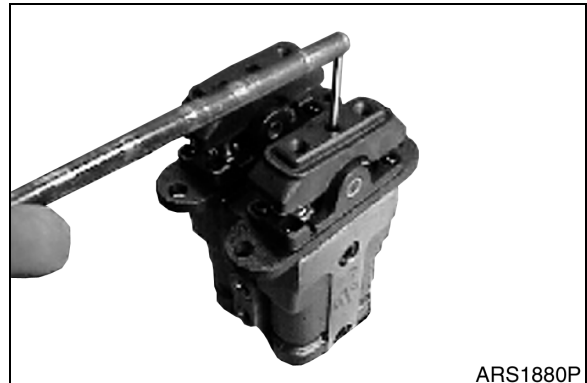


Figure 12

3. Remove cam shaft (29) and bushing (28) from cam (27).

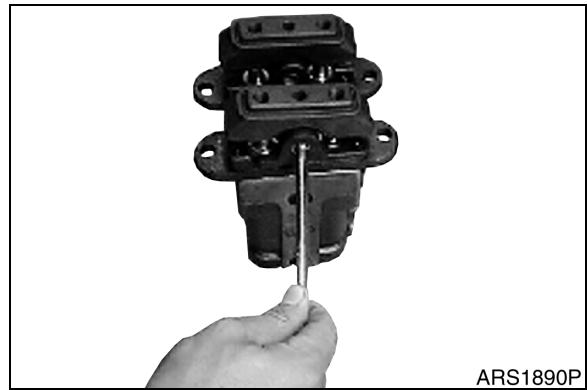


Figure 13

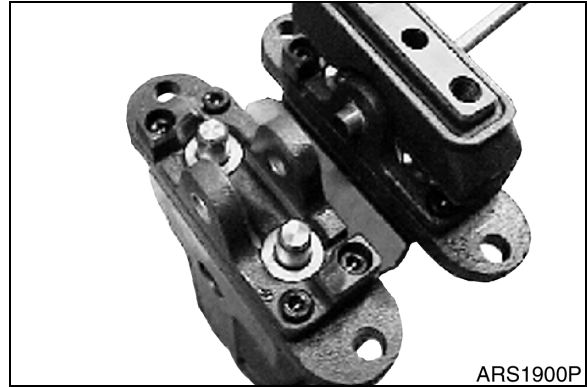


Figure 14

4. Remove cam (27) from cover (25).

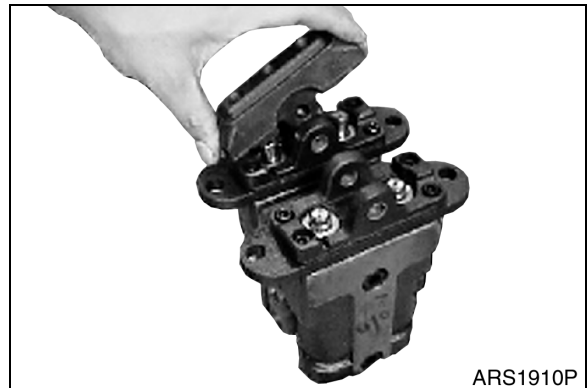


Figure 15

5. Remove wrench bolt (26) by using tool.

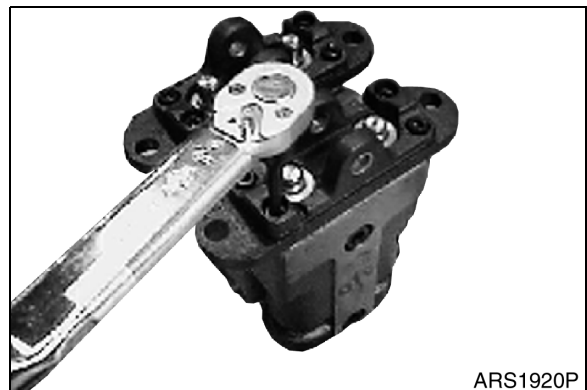


Figure 16

6. Remove cover (25) from body (1 and 2).

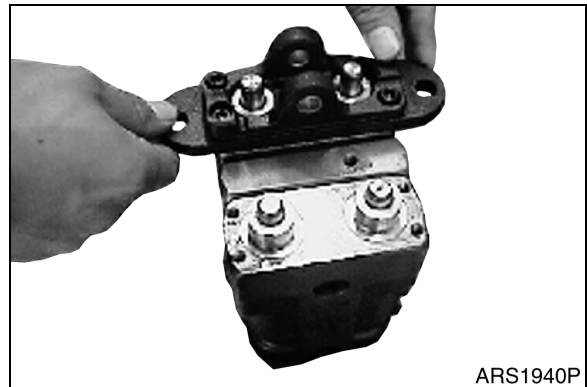


Figure 17

7. Remove plug assembly (21 - 24) with push rod assembly (14 - 20).

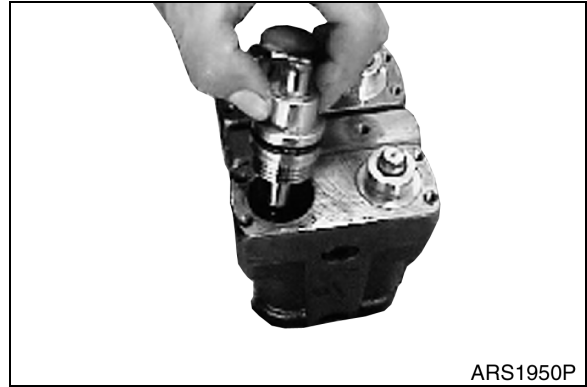


Figure 18

8. Remove snap ring (13).

IMPORTANT

Be careful not to spring rod guide (11).

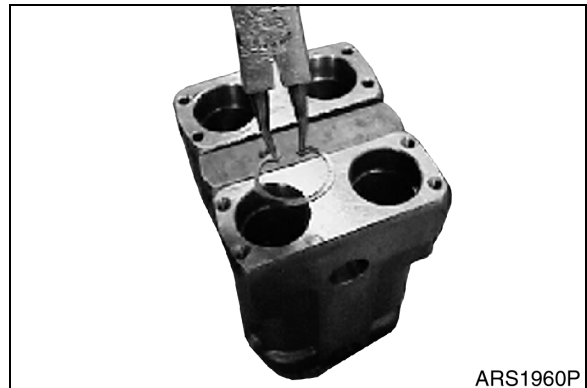


Figure 19

9. Remove rod guide (11).

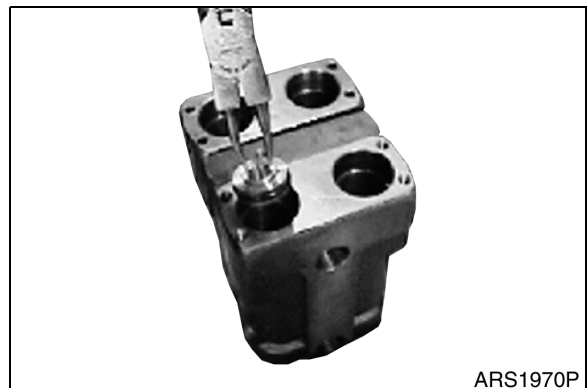


Figure 20

10. Remove spool assembly (5 - 9).

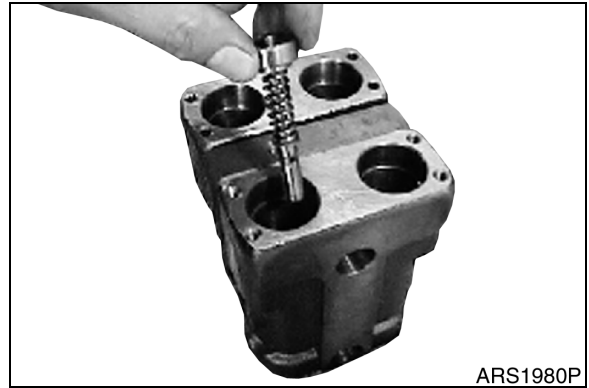


Figure 21

11. Remove spring (10).

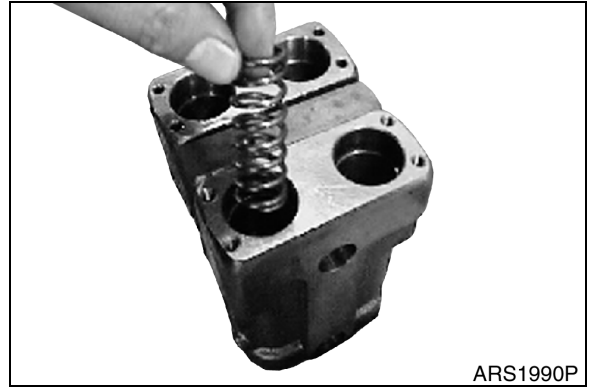


Figure 22

12. Remove stopper (9), spring (6) and spring seat (7) from spool assembly (5 - 9).

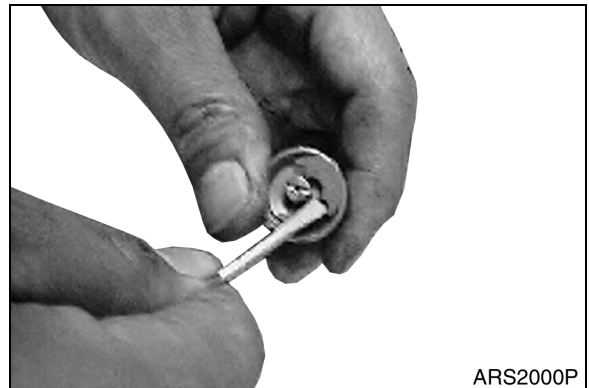


Figure 23

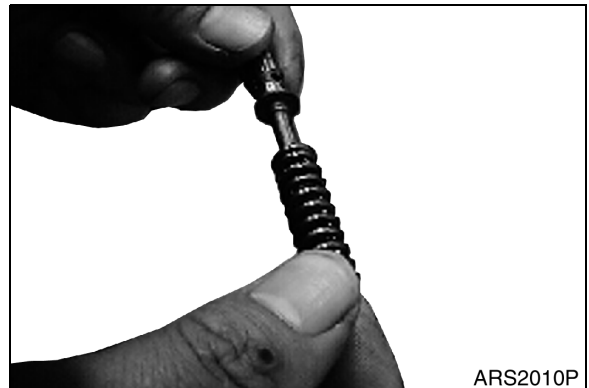


Figure 24

13. Remove plug assembly (21 - 24) from push rod assembly (14 - 20).

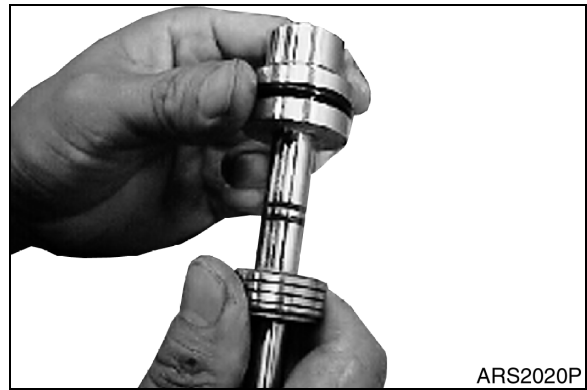


Figure 25

14. Remove seal (23 and 24) from plug (21).



Figure 26

15. Remove O-ring (22) from plug (21).

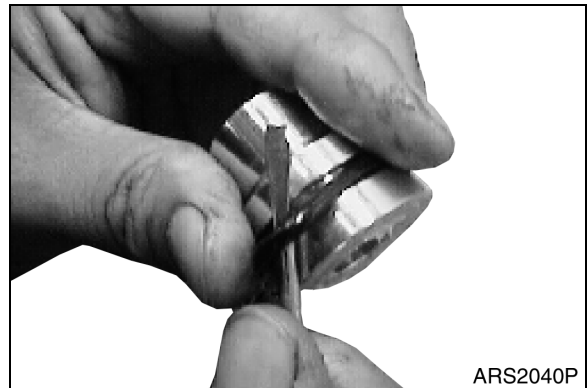


Figure 27

16. Remove seal (16) from push rod (14).

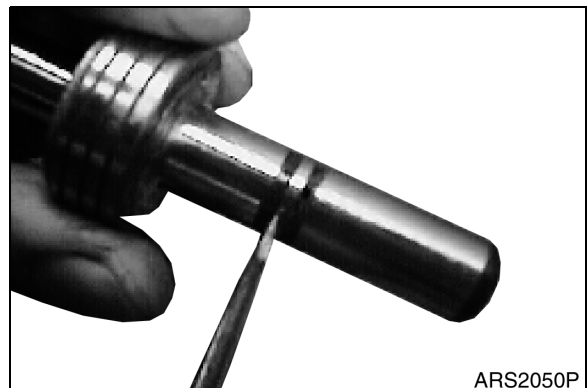


Figure 28

17. Remove snap ring (20) from push rod (14).

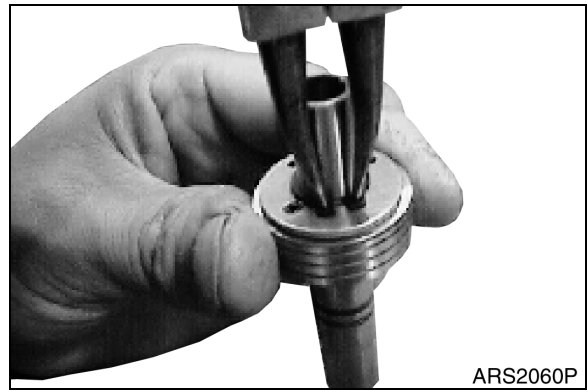


Figure 29

18. Remove plate (19) from push rod (14).

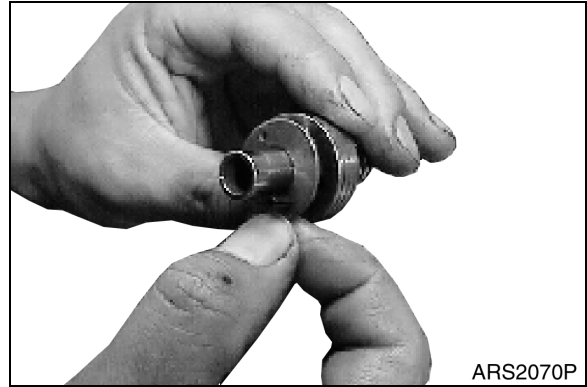


Figure 30

19. Remove spring (18) from push rod (14).



Figure 31

20. Remove steel ball (17) from push rod (14).

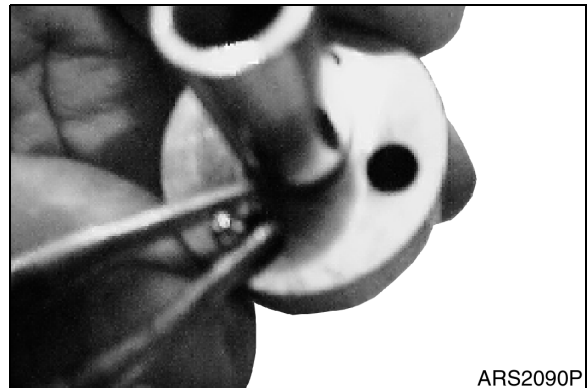


Figure 32

CLEANING AND INSPECTION (WEAR LIMITS AND TOLERANCES)

1. Cleaning disassembled parts.
 1. Place parts in a container with cleaning solvent.
 - Allow all parts to soak in solvent until grease and other foreign substances have dissolved and become loose, before cleaning.
 - Contaminated cleaning solvent may cause damage to parts and may cause poor equipment performance. Be sure to use clean, uncontaminated solvent when cleaning precision parts.
 2. Clean parts thoroughly by gently turning the solvent. Dry and clean each part with a clean cloth.
 - Do not use compressed air to dry parts. Foreign material and moisture present in compressed air may cause damage or rust.
2. Anti-corrosive treatment of disassembled parts.

Apply an anti-corrosive lubricant to all disassembled parts.

 - Leaving cleaned parts exposed to contaminants and moisture in the air will cause rust and may cause poor equipment performance.

REASSEMBLY

IMPORTANT

1. Prepare a clean, well lit, stable work bench where assembly can be performed.
2. Prepare the tools and materials necessary for reassembly process.
3. Inspect all parts, making sure that all parts are free from dirt and damage. If minor surface scratches are visible, use a very fine crocus cloth to clean it off.
4. Replace all O-rings and NHU packings with new ones. Use care when assembling O-rings and NHU packings.
5. Apply a light coat of approved lubricant to aid in smooth assembly.
6. Tighten all bolts to the specified torque rating as outlined in the torque table.
7. Seal all opens ports to prevent foreign material from entering the valve assembly.
8. All precision parts must be handled with great care and all parts must be reassembled to their original position.
9. All parts must be carefully reassembled and not be forced. Damaged parts will cause oil leaks and poor performance of the equipment.
10. Do not leave parts exposed to air during or after disassembly. Exposed parts will come in contact with contaminants and will cause rust and damage.
11. Grease must be applied to the top portion of each push rod.
12. Grease must be filled into each grease cup.
13. Spray Anti-rust lubricant into each bellows.

1. Clean body (1 and 2) and all parts.
2. Install spring (10) on body (1 and 2).

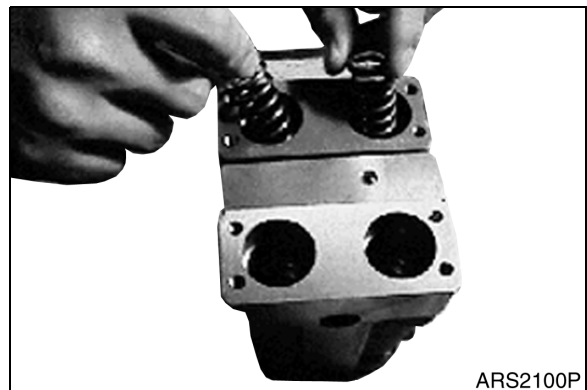


Figure 33

3. Clean plug (21) with thinner, inspect burrs and install rod seal (23) and dust seal (24) on both sides of plug by using tool.

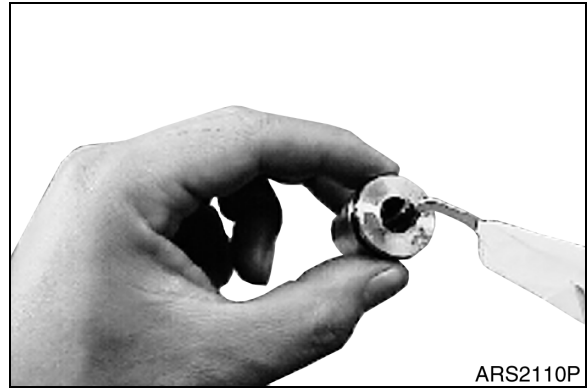


Figure 34

4. Install O-ring (22) on outside diameter of plug (21) and check plug whether it is abnormal.



Figure 35

5. Install spring seat (7), spring (6) and spring seat (5) on spool (8).

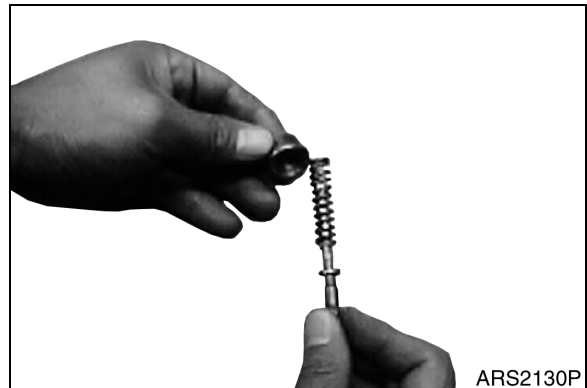


Figure 36

6. Install O-ring (12) on rod guide (11).

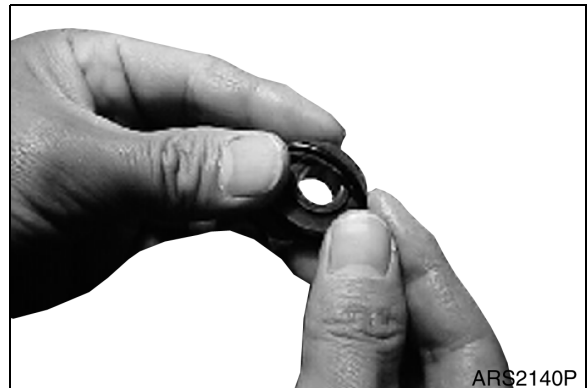


Figure 37

7. Install steel ball (17), spring (18), plate (19) and spring pin (15) on push rod (14).

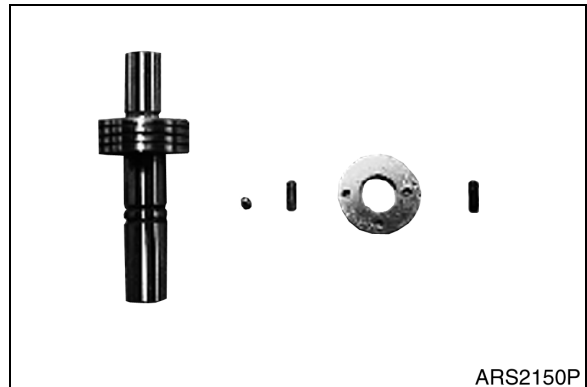


Figure 38

8. Install snap ring (20) on push rod assembly (14 - 19).



Figure 39

9. Install seal (16) on push rod (14).

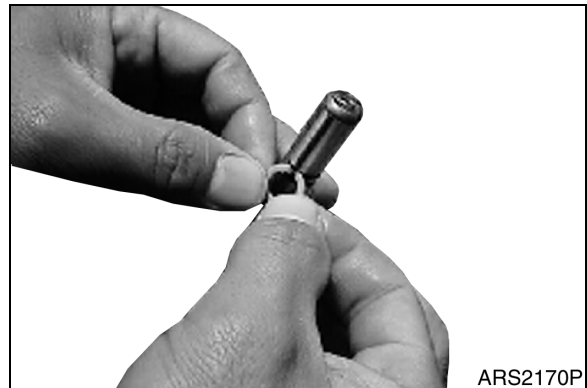


Figure 40

10. After installing spool assembly (5 - 9) on body (1 and 2), insert rod guide (11) and install snap ring (13).



Figure 41

11. Install plug assembly (21 - 24) with push rod assembly (14 - 20) on body (1 and 2).

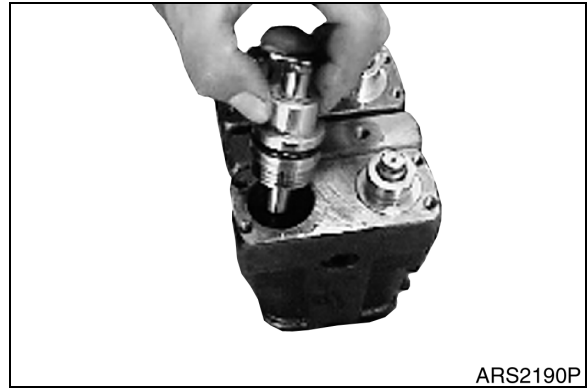


Figure 42

12. Install cover (25) on the upside of body (1 and 2).

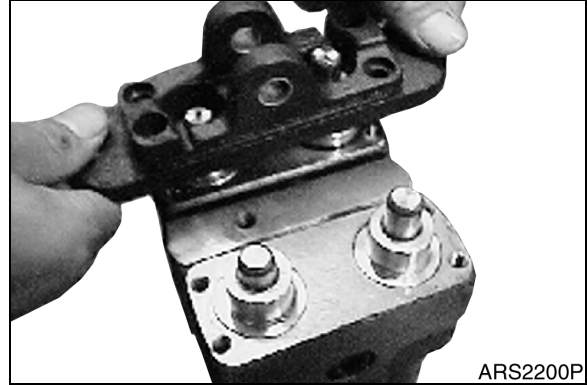


Figure 43

13. Tighten wrench bolt (26).

NOTE: Tightening torque: 88 kg·cm
(6.37 ft lb).

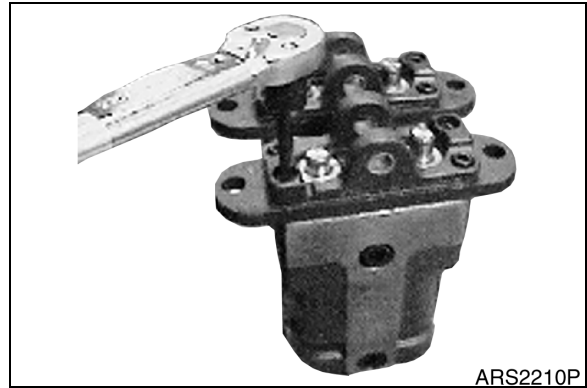


Figure 44

14. Put cam (27) on cover (25) and install cam shaft (29).

IMPORTANT

Check whether there is a play of cam.

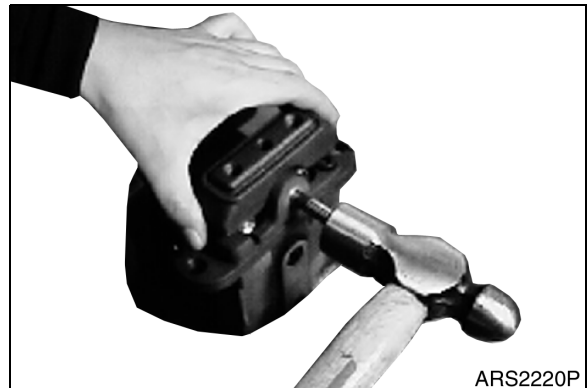


Figure 45

15. Tighten set screw (30) on center of cam (27) not to loose cam (27) and cam shaft (29) by using wrench.

NOTE: Tightening torque: 88 kg•cm (6.37 ft lb).

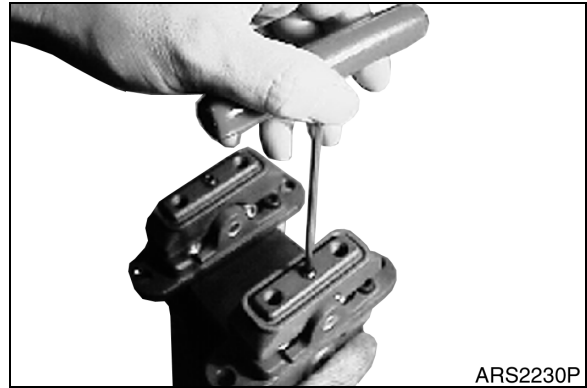


Figure 46

16. One side holds L wrench and the other side holds spanner and tighten set screw (31) and hex nut (32) attached to cam (27) not to loose.

IMPORTANT

Check whether there is a play of cam.

NOTE: Tightening torque: 440 kg•cm (31.8 ft lb).

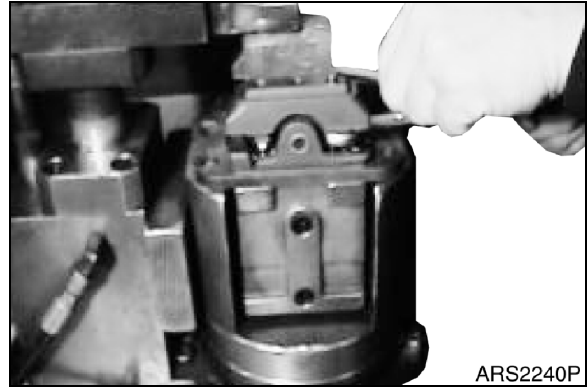


Figure 47

17. Install bellows.



Figure 48

INSTALLATION

1. Position pedal valve (1, Figure 49) on cabin floor plate and install four bolts and washers (2).

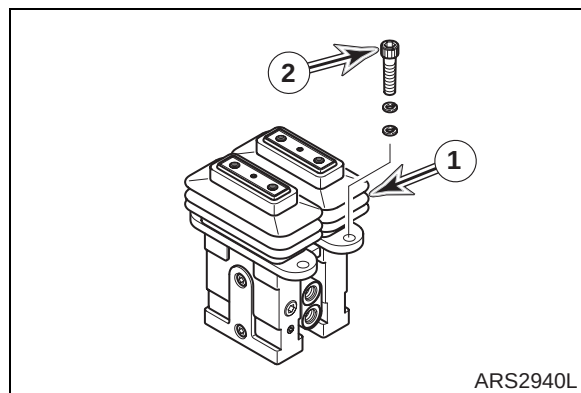


Figure 49

2. Install pedal brackets (3) and levers (4, Figure 50) on pedal valve and install four bolts and washers (2).
3. Install rubber boots (1, Figure 50).

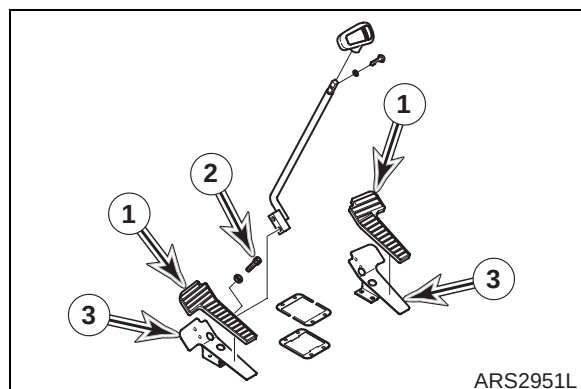


Figure 50

4. Connect hoses as tagged during removal to pedal valve (1, Figure 51).
5. Install cabin under cover by tightening bolts.

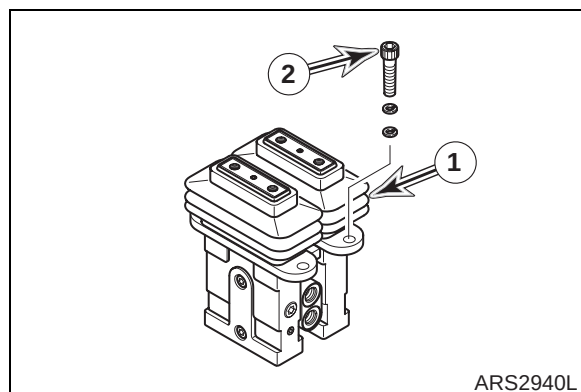


Figure 51

START-UP PROCEDURES

1. Start engine and set throttle at "LOW IDLE."
2. Set safety lever on "UNLOCK" position.

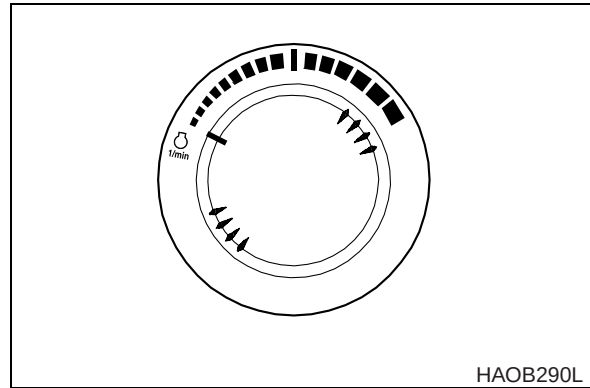


Figure 52

3. Slowly push and pull both travel lever about five times without a load to vent air from pilot lines.

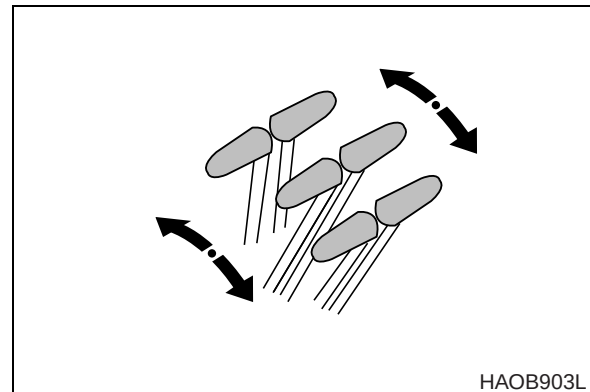


Figure 53



HYDRAULIC SCHEMATIC (S300LC-V)



CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that is in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

MODEL	SERIAL NUMBER RANGE
Solar 300LC-V	1001 and Up

TABLE OF CONTENTS

General Description.....	3
Solar 300LC-V	4

GENERAL DESCRIPTION

Schematic(s) presented in this section are laid out on facing pages.

An overlapping edge has been taken into consideration so that a photocopy can be made and pasted together to make a complete schematic.

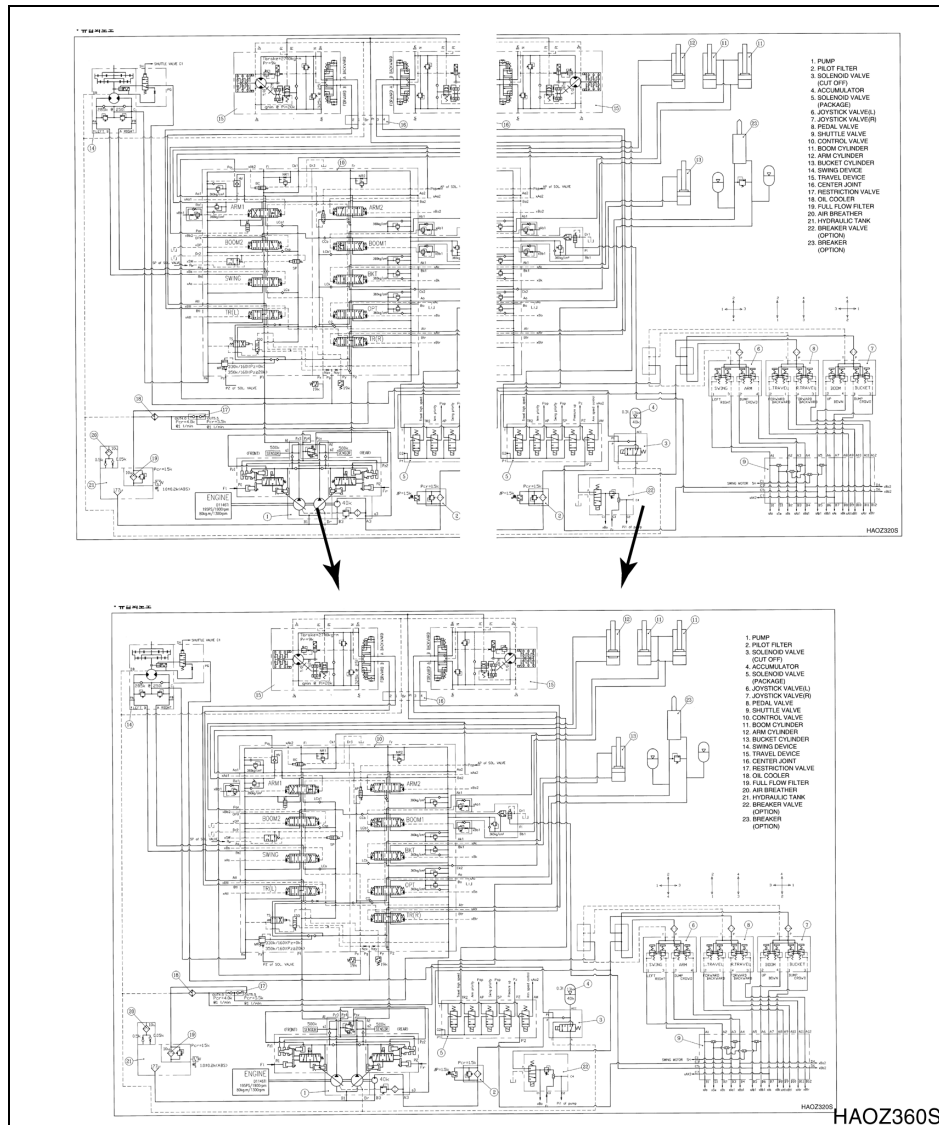


Figure 1

SOLAR 300LC-V

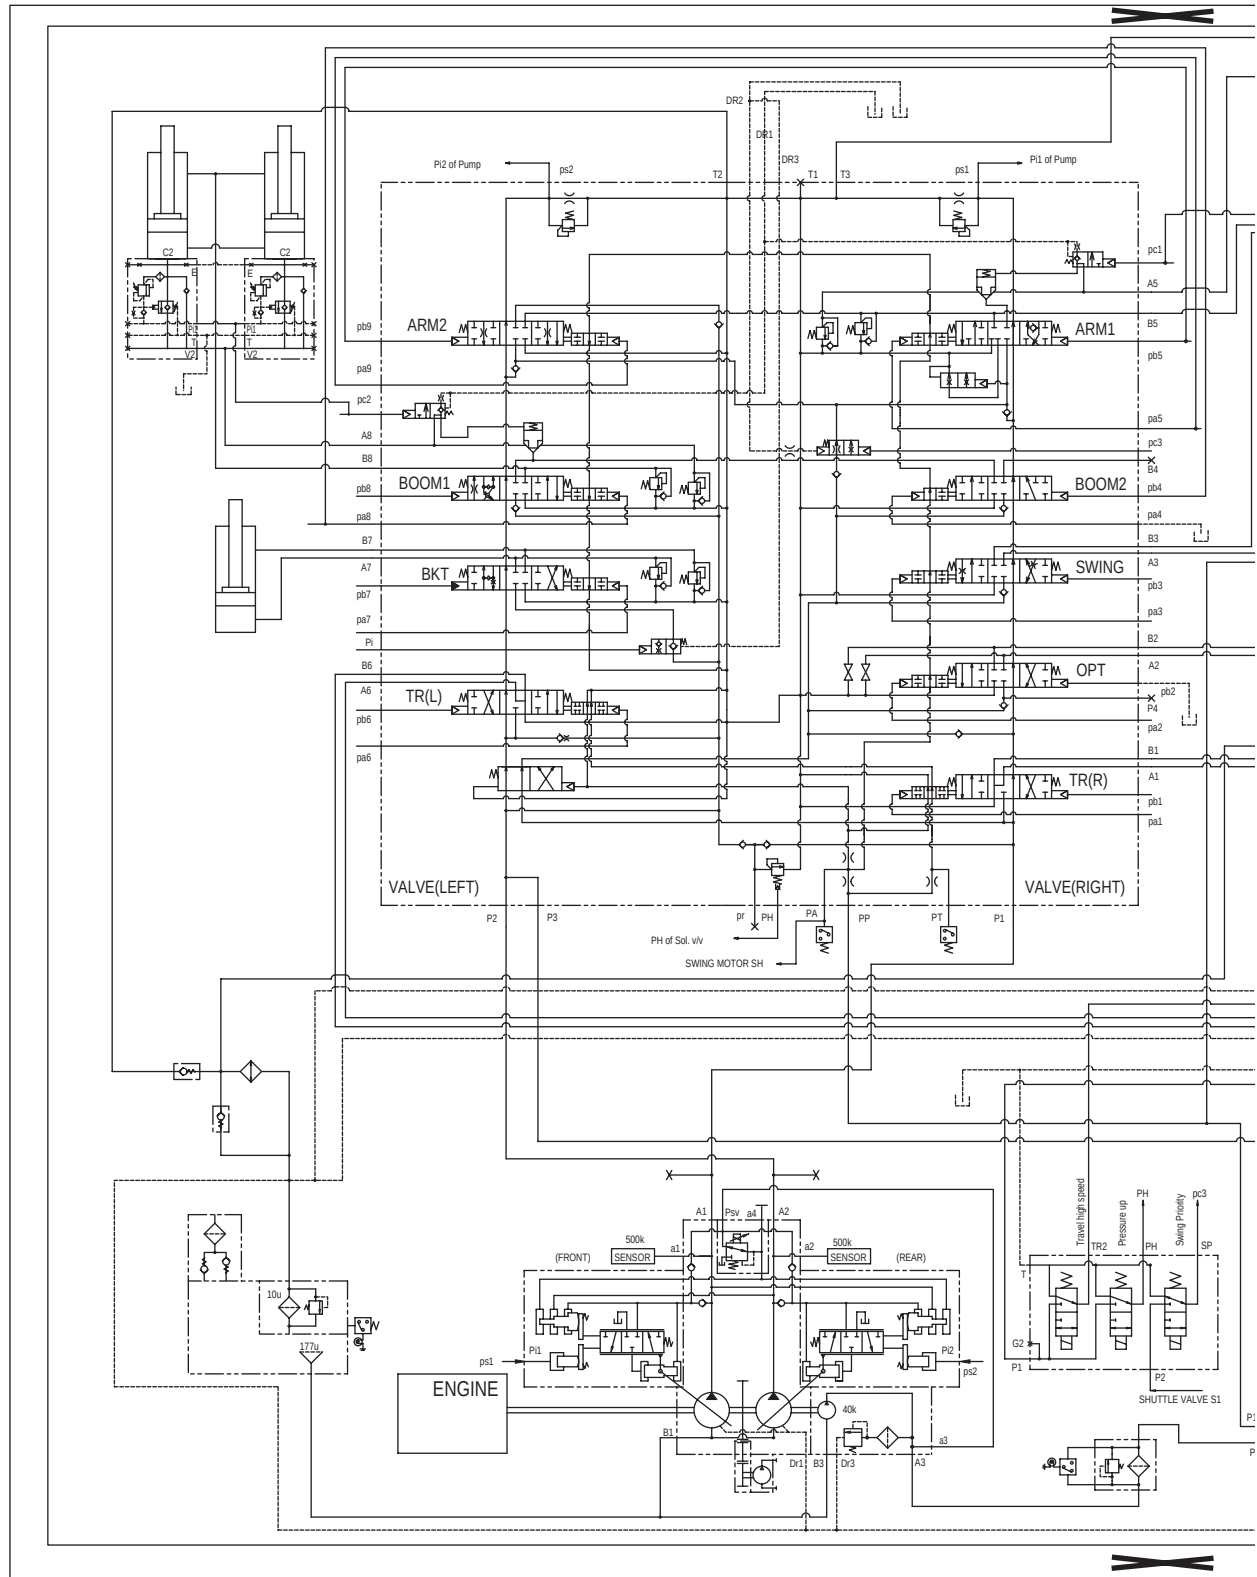
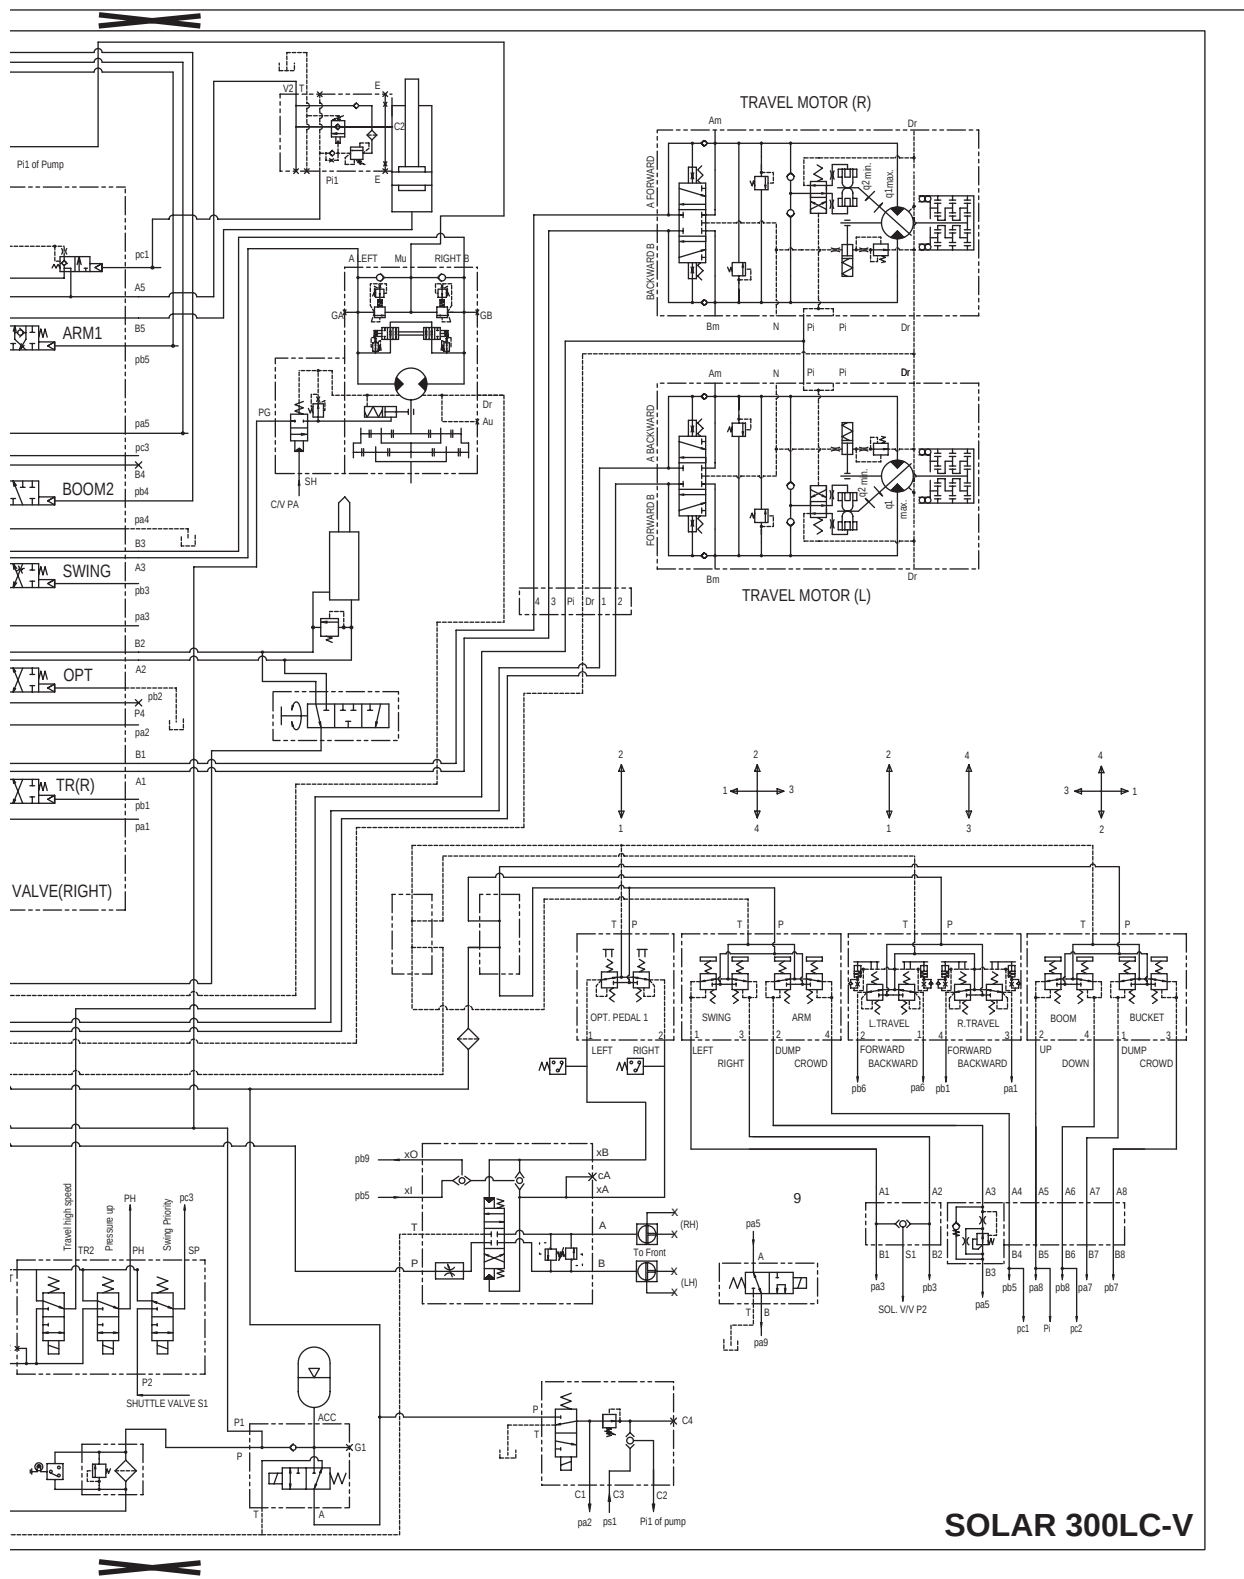


Figure 2



ARS1450L

ELECTRICAL SYSTEM



ELECTRICAL SYSTEM



CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that is in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

MODEL	SERIAL NUMBER RANGE
Solar 300LC-V	1001 and Up
Solar 300LL	1001 and Up
Solar 340LC-V	1001 and Up
Solar 420LC-V	1001 and Up
Solar 470LC-V	1001 and Up

TABLE OF CONTENTS

Troubleshooting - Electrical System	4
Overview	5
Electric Supply System	6
Engine Starting Circuit	7
Operation During Start Process	7
Operation After Start Process	8
Engine Preheating System.....	9
Engine Stop System.....	10
Charging System.....	13
Monitoring System	14
Instrument Panel	15
Monitoring System Schematic	16
Operation.....	18
Instruments	18
Warning and Indicator Lights.....	20
Initial Operation	22
Mode Select Switch.....	23
Graphic Information Area Display.....	24
Overview	24
Main Menus for the Graphic Display Area.....	25
Menu Selection Buttons	25
Main Menu.....	26
Language setting.....	26
Time Setting	26
Filter/Oil information	27
Special Menu.....	28
Entering/Accessing and Exiting/Escaping Menus	28
Special Menu Selections	29
Electronic Hydraulic Control System (e-EPOS)	42
Control System Schematic.....	42
Power Mode Control	44

Operation	45
Power Mode Control - Circuit Diagram	48
Trenching Mode Control	50
Operation	51
Trenching Mode Control - Circuit Diagram	52
Engine Control System.....	53
Engine Control Motor	55
Engine Control Dial	56
Engine Control Circuit Diagram	58
Automatic Deceleration Control (Auto Idle Control).....	59
Engine Overheat Protection System	60
Power Boost Mode	61
Operation	61
Power Boost Control - Circuit Diagram.....	62
Automatic Travel Speed Control	63
Automatic Travel Speed Control - Circuit Diagram	64
Engine Control Device - Adjustment	65
Self-diagnostic Function	68
e-EPOS Controller	68
Engine Throttle Controller	70
Wiper System	71
Wiper Circuit.....	71
Wiper Operation	71
Window Washer Operation	72
Lighting System.....	74
Lighting System Circuit Diagram.....	74
Kind of Light	75
Operation	75
Overload Warning Device.....	76
Overload Warning Device Circuit Diagram.....	76

TROUBLESHOOTING - ELECTRICAL SYSTEM

Problem	Possible Causes	Remedies
Battery will not stay charged.	Internal battery short.	Replace battery.
	Short in other part of circuit.	Repair wiring or replace component.
Battery does not charge.	Battery worn out or defective.	Replace battery.
	Defective alternator or belt.	Repair or replace.
	Cable connection loose or severely corroded. Circuit ground corroded or weak.	Repair or replace.
Engine rpm not controllable.	Engine speed potentiometer or dial defective.	Repair or replace.
	Engine control cable broken or loose.	Repair or replace.
	Engine control motor defective or not connected.	Repair connection or replace component.
	Engine throttle controller defective or not connected.	Repair connection or replace component.
	Blown fuse.	Replace fuse. Check connections and circuit components for shorts or other damage.
	Wiring harness or connector defective or damaged.	Repair or replace.
Power mode selection does not change.	Blown fuse.	Replace fuse. Check connections and circuit components for shorts or other damage.
	Instrument Panel switch broken.	Repair or replace.
	Wiring harness or connector defective or damaged.	Repair or replace.
	e-EPOS controller defective.	Replace.
	Speed sensor defective.	Replace.
Work mode selection does not change.	Blown fuse.	Replace fuse. Check connections and circuit components for shorts or other damage.
	Instrument Panel switch broken.	Repair or replace.
	Wiring harness or connector defective or damaged.	Repair or replace.
	e-EPOS controller defective.	Replace.
	Solenoid valve defective.	Replace.

OVERVIEW

The electrical system for this equipment is DC 24 volts. The rated voltage for all electric components is 24 volts with the exception of the car stereo and the air-conditioning control actuator. The system contains two 12 volt batteries connected in series and a three phase AC generator with a rectifier. The electric wiring used in the system is easily identifiable by the insulator color. The color symbols used in the electrical system are listed in the following chart.

Electric Wire Color

Symbol	Color
W	White
G	Green
Or	Orange
B	Black
L	Blue
Lg	Light green

Symbol	Color
R	Red
Gr	Gray
P	Pink
Y	Yellow
Br	Brown
V	Violet

NOTE: *RW: Red wire with White stripe*

R - Base Color, W - Stripe Color

NOTE: *0.85G: Nominal sectional area of wire core less insulator = 0.85 mm²*

ELECTRIC SUPPLY SYSTEM

The electric power circuit supplies electric current to each electric component. It consists of a battery, battery relay, starter switch, circuit breaker, fusible link and fuse box.

The negative terminal of the battery is grounded to the vehicle body.

Even when the starter switch (5) is in the "OFF" position, electric current is supplied to the following components through battery (1) → fusible link (3) → fuse (6).

1. Cabin light, fuel pump switch, No. 1 terminal of DC-DC converter (backup for car stereo memory)
2. "B" terminal of starter switch and No. 22 terminal of air conditioner control panel.
3. No. 17 terminal of instrument panel (backup for instrument panel).
4. Power terminal "B" of engine stop motor.

When the starter switch (5) is in the preheat, on and start positions, the current flows from the battery (1) → fusible link (3) → fuse (6) → starter switch (5) "B" terminal/starter switch (5) "BR" terminal → battery relay (2) "BR" terminal which activates the coil of the battery relay and the electric supply system is energized.

When the battery relay's contacts are connected, all electric devices can be operated.

While the engine is not running, the electric power for all electric devices are supplied by the battery. Once the engine is started the power is supplied from the alternator (7).

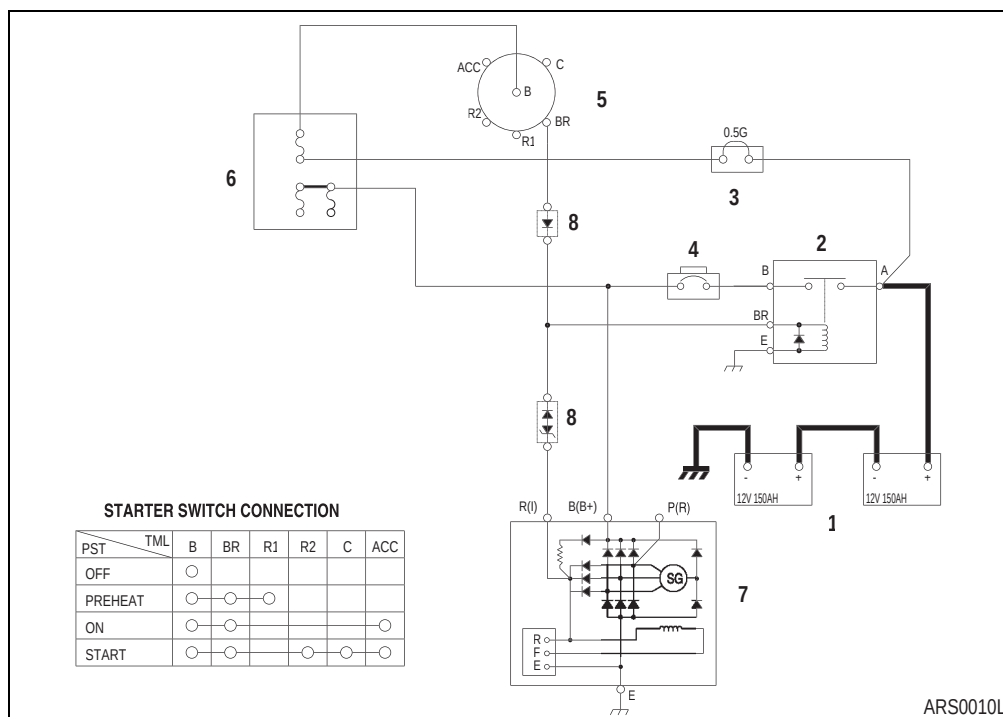


Figure 1 ELECTRIC POWER CIRCUIT DIAGRAM

Reference Number	Description
1	Battery
2	Battery Relay
3	Fusible Link
4	Circuit Breaker

Reference Number	Description
5	Starter Switch
6	Fuse Box
7	Alternator
8	Diode

ENGINE STARTING CIRCUIT

OPERATION DURING START PROCESS

When the starter switch is turned to the start position, the "S" and "E" terminals of the starter controller (7) are connected. At this time the contacts in the starter relay (8) are closed by the current flow from the battery (1, Figure 2) → fusible link (3) → "B" terminal of the starter switch (5) → "C" terminal of the starter switch (5) → "C" terminal of the starter relay (8) → "D" terminal of starter relay (8) → "S" terminal of starter controller (7) → "E" terminal of the starter controller (7) → ground.

The contact point "B" and "PP" of starter relay (8) are connected, the pinion gear of the starter (9) is pushed forward and makes contact with the ring gear of the flywheel and the internal contacts of the starter are connected.

The current flows from the battery (1) → "A" terminal of the battery relay (2) → "B" terminal of the battery relay (2, Figure 2) → "B" terminal of the starter (9). The starter motor is rotated and the engine is started.

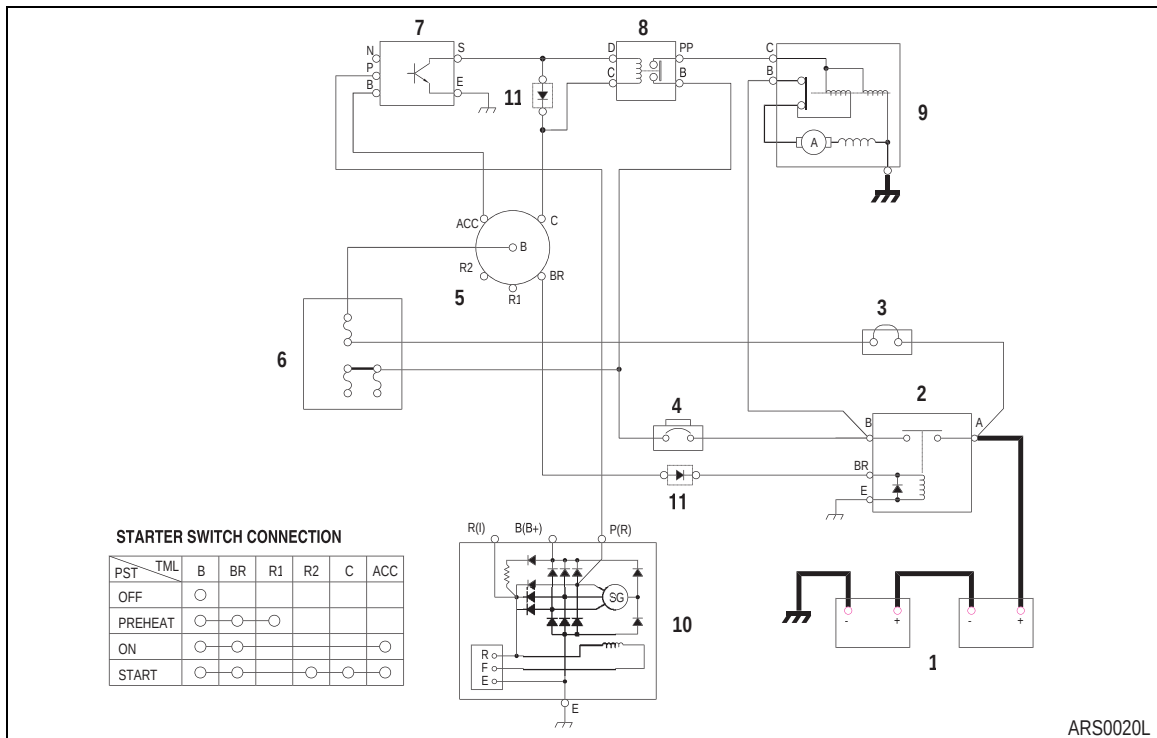


Figure 2 STARTER CIRCUIT (1) - WHILE STARTING

Reference Number	Description
1	Battery
2	Battery Relay
3	Fusible Link
4	Circuit Breaker
5	Starter Switch
6	Fuse Box

Reference Number	Description
7	Starter Controller
8	Starter Relay
9	Starter
10	Alternator
11	Diode

OPERATION AFTER START PROCESS

Once the engine has been started, the belt driven alternator (10) generates a current.

The output generated by the alternator (10) is a square wave pulse voltage through the "P" terminal and the frequency of the pulse voltage is proportional to the rotation of the alternator.

The starter controller (7) monitors the frequency of the output current. Once the frequency equivalent to 500 rpm is sensed the connection between "S" and "E" terminals and the connection between "B" and "PP" terminals are opened. As a result the rotation of the starter (9) is stopped. Once the engine is running, the starter (9) will not operate even if the starter switch (5) is moved to the start position, preventing possible damage to the starter.

Operation of the Start Circuit (2) - Immediately After Start

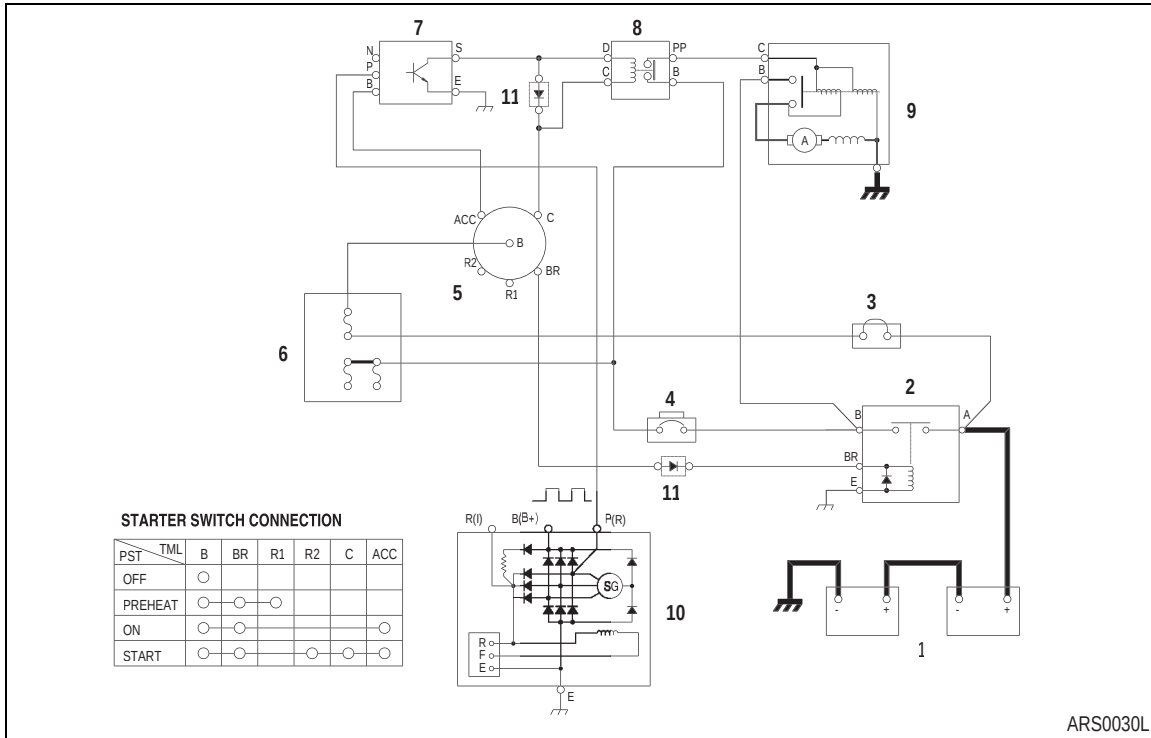


Figure 3 OPERATION OF START CIRCUIT (2) - IMMEDIATELY AFTER START

Reference Number	Description
1	Battery
2	Battery Relay
3	Fusible Link
4	Circuit Breaker
5	Starter Switch
6	Fuse Box

Reference Number	Description
7	Starter Controller
8	Starter Relay
9	Starter
10	Alternator
11	Diode

ENGINE PREHEATING SYSTEM

An air heater (8) device is installed in the intake manifold of the engine.

When the starter switch (5) is turned to the "Preheat" position, the current flows from the battery (1) → fusible link (3) → "B" terminal of starter switch (5) → "R1" terminal of starter switch (5) → "C" terminal of preheat relay (7) → ground and the contact points of the preheat relay are closed.

When the contact points of the preheat relay (7) are closed, the heating coils of the air heating device are heated by current flowing from the battery (1) → battery relay (2) → preheat relay (7) → air heater (8) → ground.

The preheat time is approximately 19 seconds. A built-in timer in the instrument panel will activate an indicator light approximately 19 seconds after the preheat process has been selected.

Even after the starter switch (5) has been moved to the start position the current will continue to flow through the "R2" terminal of the starter switch (5) to the coil of the preheat relay (7) without disruption of the preheat process.

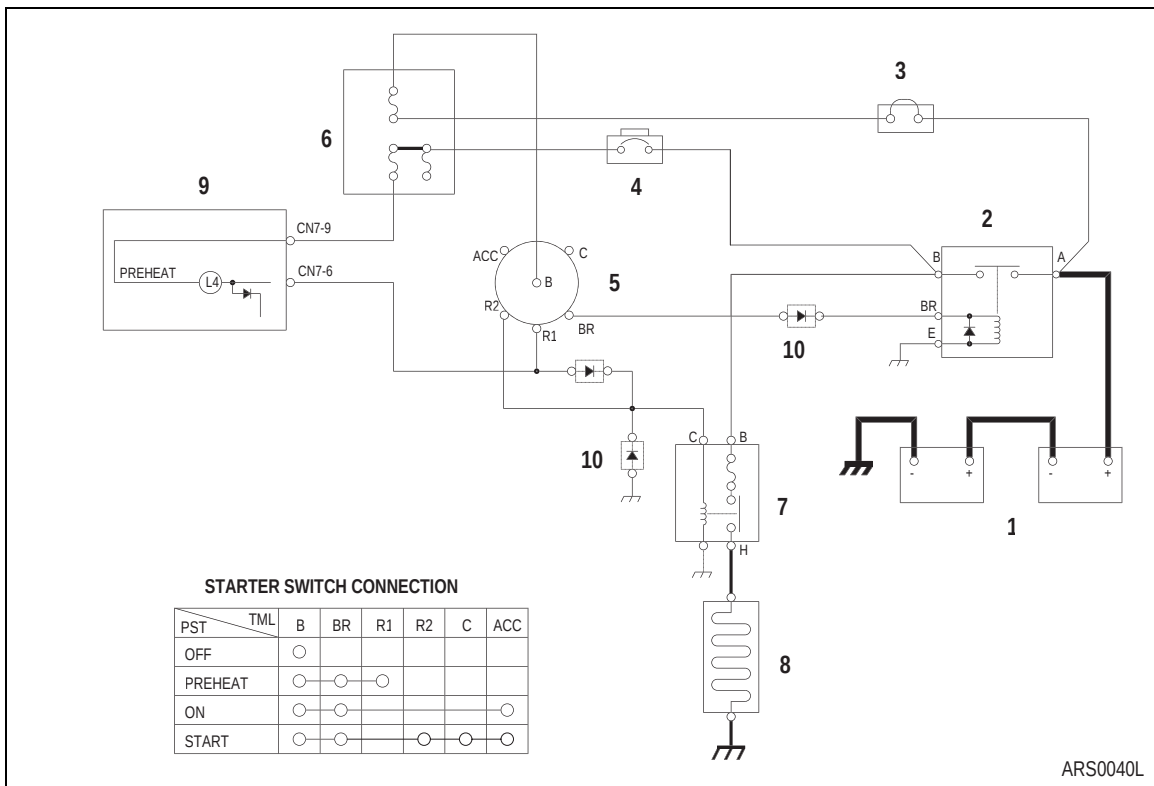


Figure 4 ENGINE PREHEAT CIRCUIT

Reference Number	Description
1	Battery
2	Battery Relay
3	Fusible Link
4	Circuit Breaker
5	Starter Switch

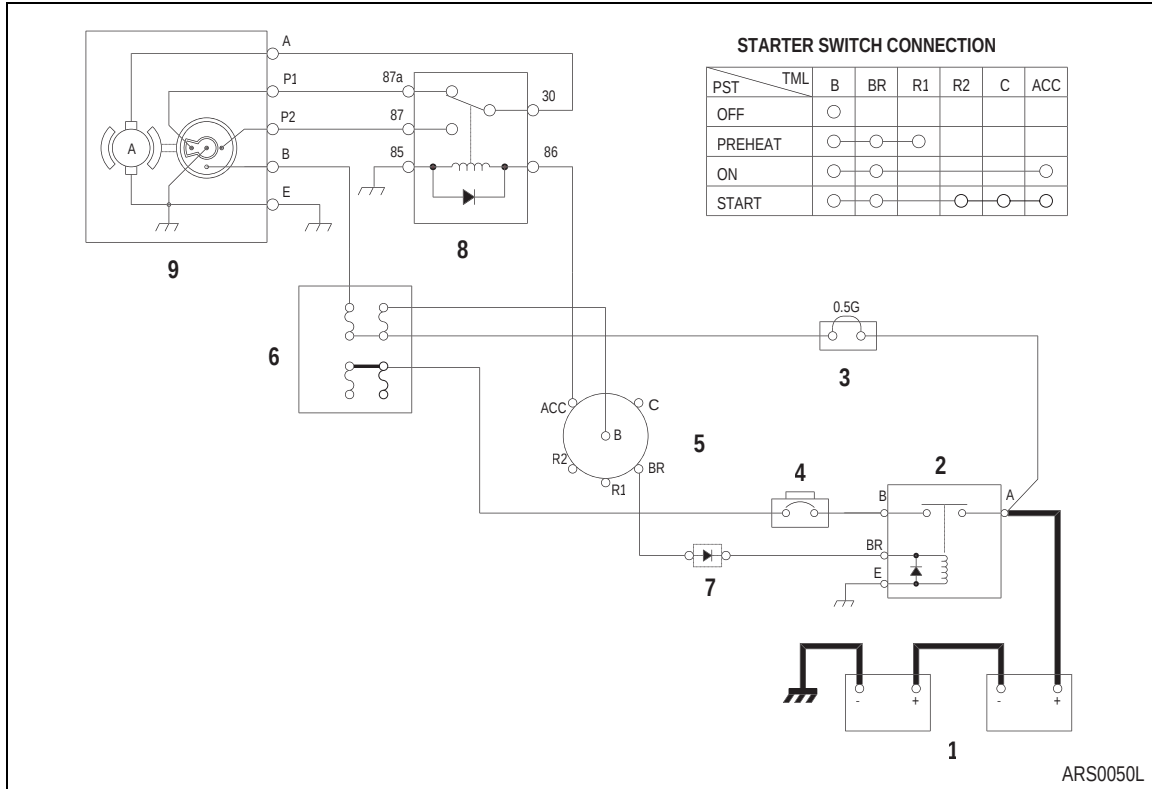
Reference Number	Description
6	Fuse Box
7	Preheat Relay
8	Air Heater
9	Indicator Lamp
10	Diode

ENGINE STOP SYSTEM

The engine stop circuit consists of a starter switch (5), engine stop motor (9) and engine stop relay (8). There are two modes of operation - engine running and engine stop.

The worm gear built into the motor reduces the engine stop motor's speed and changes motor's revolution to reciprocation. The fuel shut off lever is pushed or pulled by this change.

When the start switch is in the "ON" position, the engine stop motor rotates 180° and comes to a stop due to the cam switch. When the start switch is in the "OFF" position, the engine stop motor moves 180° from the running mode position and is stopped by the cam switch.



Reference Number	Description
1	Battery
2	Battery Relay
3	Fusible Link
4	Circuit Breaker
5	Starter Switch

Reference Number	Description
6	Fuse Box
7	Diode
8	Engine Stop Relay
9	Engine Stop Motor

Operation In Engine Running Mode

When the starter switch (3) is turned to the "ON" position, the contact points "30" and "87" of the engine stop relay (5) are closed due to current flowing from the battery (1) → fusible link (2) → "B" terminal of starter switch (3) → "ACC" terminal of starter switch (3) → "86" terminal of engine stop relay (5) → "85" terminal of engine stop relay (5) → ground.

As a result, the engine stop motor (6) is rotated by the current flow from the battery (1) → fusible link (2) → "B" terminal of the engine stop motor (6) → "P2" terminal of engine stop motor (6) → "87" terminal of engine stop relay (5) → "30" terminal of the engine stop relay (5) → "A" terminal of engine stop motor (6) → "E" terminal of engine stop motor (6) → ground. The engine stop motor opens (pushes) the fuel shut off lever of the fuel injection pump and the system is in the running mode. The engine stop motor rotates 180° and comes to a stop due to the cam switch which shuts off the current to the motor.

When the starter switch is in the "ON" position, the internal components of the engine stop motor's cam switch is in running mode position.

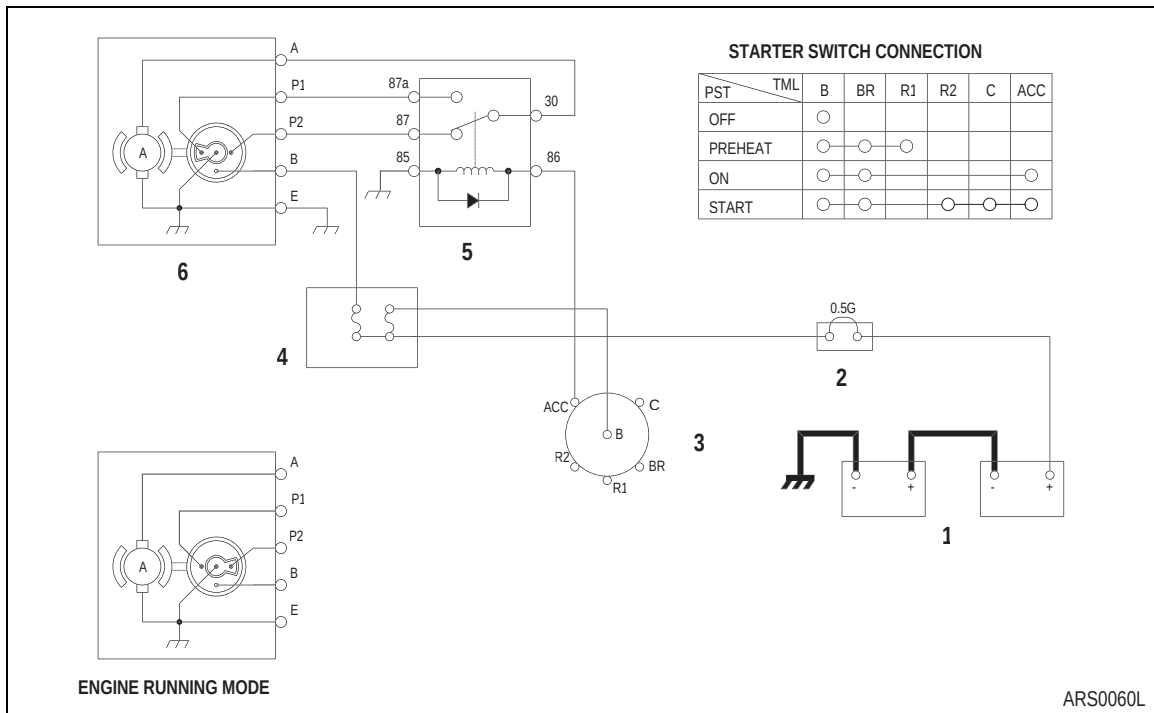


Figure 6 ENGINE STOP CIRCUIT - RUNNING MODE

Reference Number	Description
1	Battery
2	Fusible Link
3	Starter Switch

Reference Number	Description
4	Fuse Box
5	Engine Stop Relay
6	Engine Stop Motor

Operation In Engine Stop Mode

When the starter switch (3) is in the "OFF" position, the electric current flow to the coil of the engine stop relay (5) is shut off.

As a result, the "30" and "87a" contact point of the engine stop relay are connected and current is supplied to the engine stop motor from the battery (1) → fusible link (2) → "B" terminal of engine stop motor (6) → "P1" terminal of engine stop motor (6) → "87a" terminal of engine stop relay (5) → "30" terminal of engine stop relay (5) → "A" terminal of engine stop motor (6) → "E" terminal of engine stop motor (6) → ground and the motor is rotated.

The shut off lever of the fuel injection pump, linked to the engine stop motor by a cable, is moved to the close (pull) position and the engine is stopped. The engine stop motor moves 180° from the running mode position and is stopped by the internal cam switch which cuts off the current to the motor.

When the starter switch is in the "OFF" position, the internal components of the engine stop motor's cam switch is in the stop mode position.

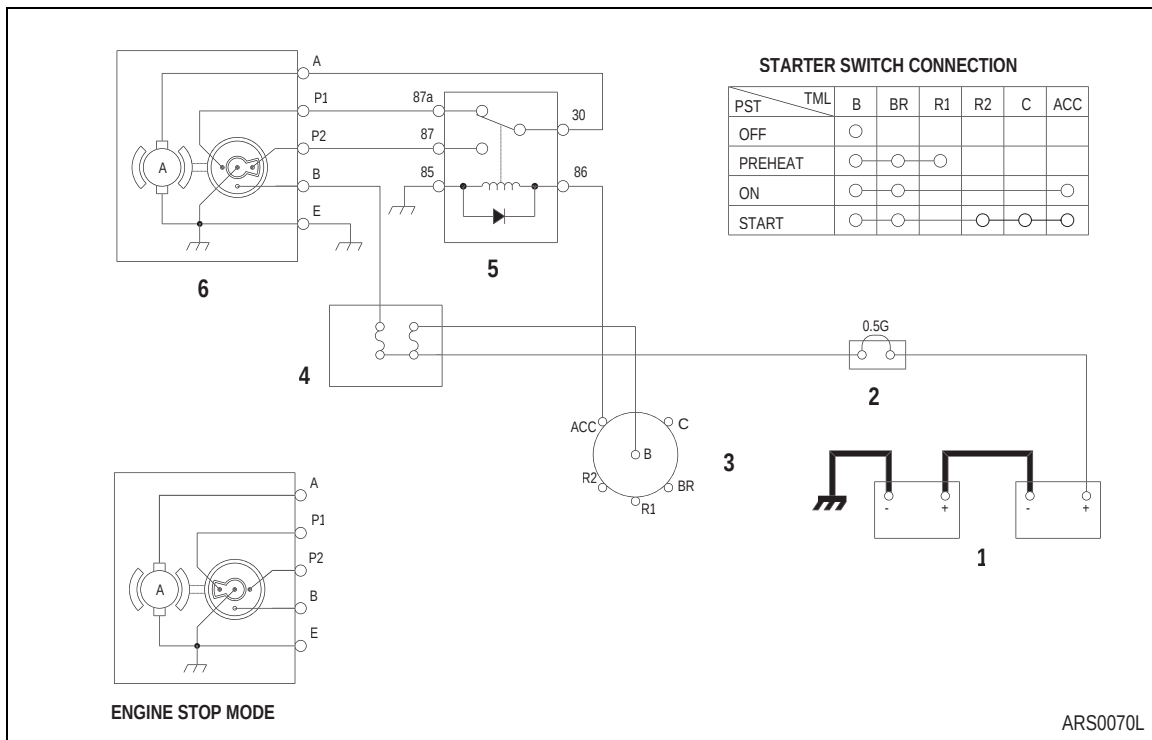


Figure 7 ENGINE STOP CIRCUIT - STOP MODE

Reference Number	Description
1	Battery
2	Fusible Link
3	Starter Switch

Reference Number	Description
4	Fuse Box
5	Engine Stop Relay
6	Engine Stop Motor

CHARGING SYSTEM

When the starter switch (5) is turned to the "ON" position, an initial excited current flows to the field coil of the alternator (7) through the battery relay (2) and circuit breaker (4). When the engine is started from this condition the alternator (7) starts charging. The current flows from the "B" terminal of alternator (7) → circuit breaker (4) → battery relay (2) → battery (1).

The alternator also supplies electric current to other electrical components. When the alternator (7) starts to operate, a current flows from the "R(I)" terminal of alternator → diode (8) → battery relay (2) coil securing a path for the charging current to the battery (1). Thus preventing the possibility of a high voltage build up and possible damage to the electric system.

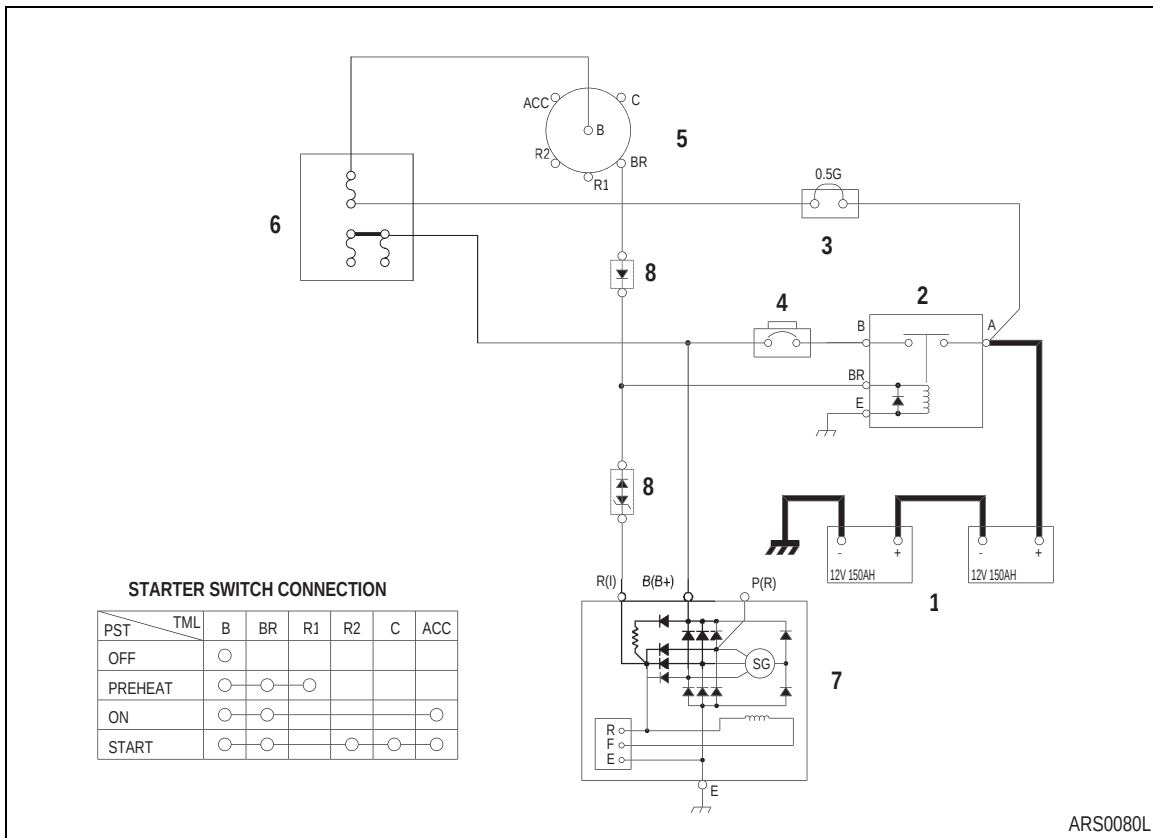


Figure 8 CHARGING CIRCUIT

Reference Number	Description
1	Battery
2	Battery Relay
3	Fusible Link
4	Circuit Breaker

Reference Number	Description
5	Starter Switch
6	Fuse Box
7	Alternator
8	Diode

MONITORING SYSTEM

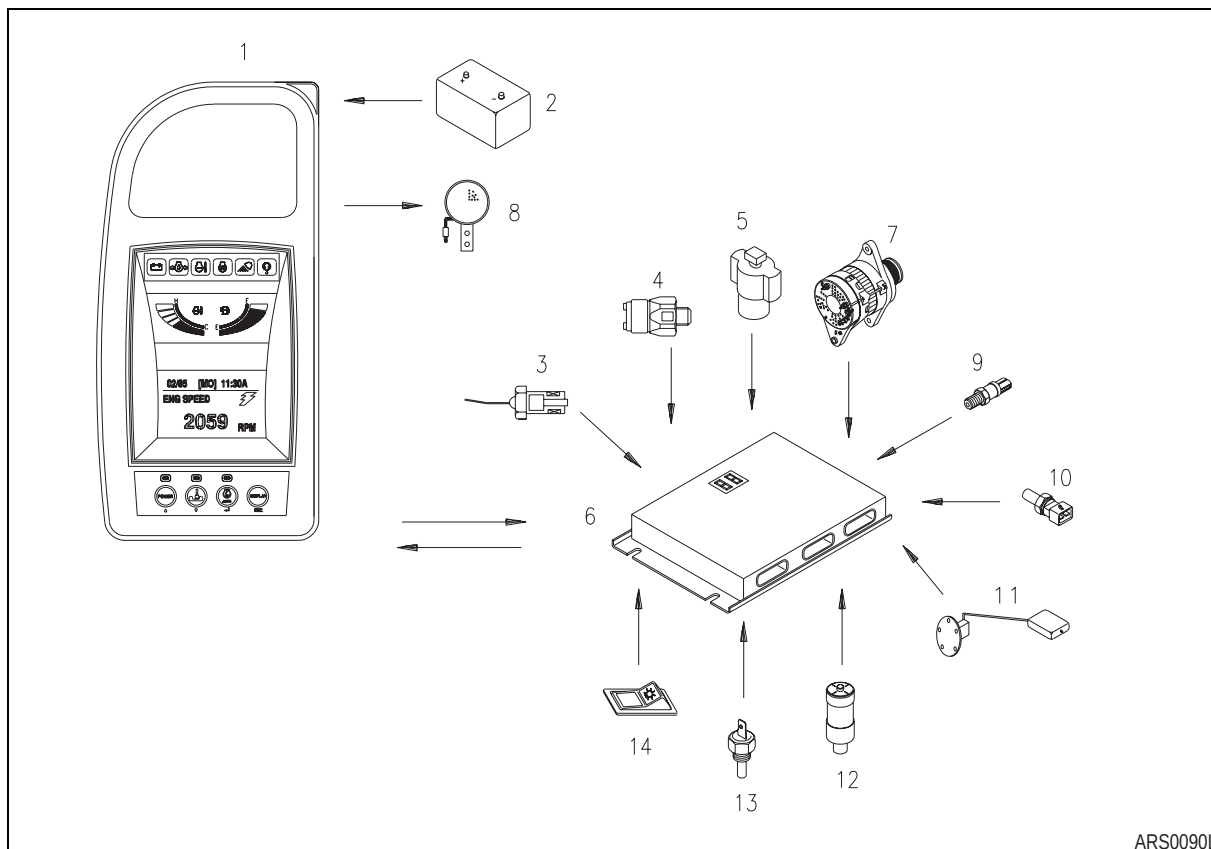


Figure 9

Reference Number	Description
1	Instrument Panel
2	Battery
3	Engine Speed Sensor
4	Return Filter Switch
5	Pilot Filter Switch
6	e-EPOS Controller
7	Alternator
8	Warning Buzzer

Reference Number	Description
9	Pump Discharge Pressure Sensor
10	Engine Coolant Temperature Sensor
11	Fuel Sensor
12	Air Cleaner Indicator
13	Engine Oil Pressure Switch
14	Light Switch

The monitoring system displays the various data and warning signals onto the instrument panel by processing the information gathered from the e-EPOS controller. It displays information selected by the operator.

INSTRUMENT PANEL

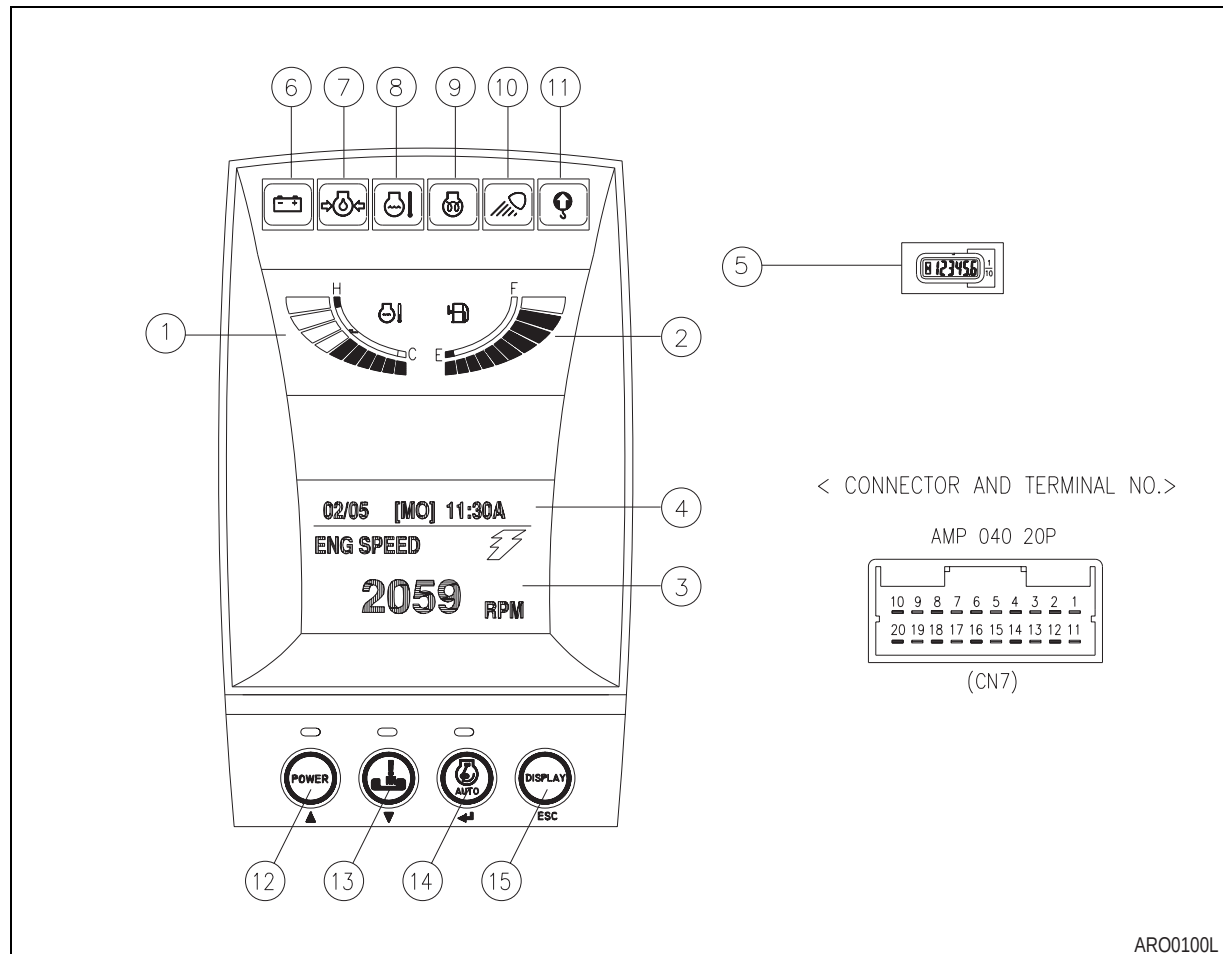


Figure 10

Gauges	Warning Lights	Mode Select Switches
1. Engine Coolant Temp. Gauge	6. Charge Warning Light	12. Power Mode Select Switch (Up Arrow Button)
2. Fuel Gauge	7. Engine Oil Pressure Warning Light	13. Trenching Mode Select Switch (Down Arrow Button)
3. Multi-function Gauge and Graphic Information Area	8. Coolant Temp. Warning Light	14. Auto Idle Switch (Enter Button)
4. Digital Clock	9. Preheat Completion Light	15. Display Select Switch (Escape Button)
5. Service Hour Meter	10. Work Light Indicator Light	
	11. Overload Warning Light	

When the engine starter switch is turned to the "I" (ON) position, all bands of gauges, indicator lights of switches/buttons and indicator/warning lights will turn "ON" and the alarm buzzer will sound for about 2 seconds.

During this time, a moving excavator will appear on the digital clock and graphic information area (3 and 4, Figure 10).

MONITORING SYSTEM SCHEMATIC

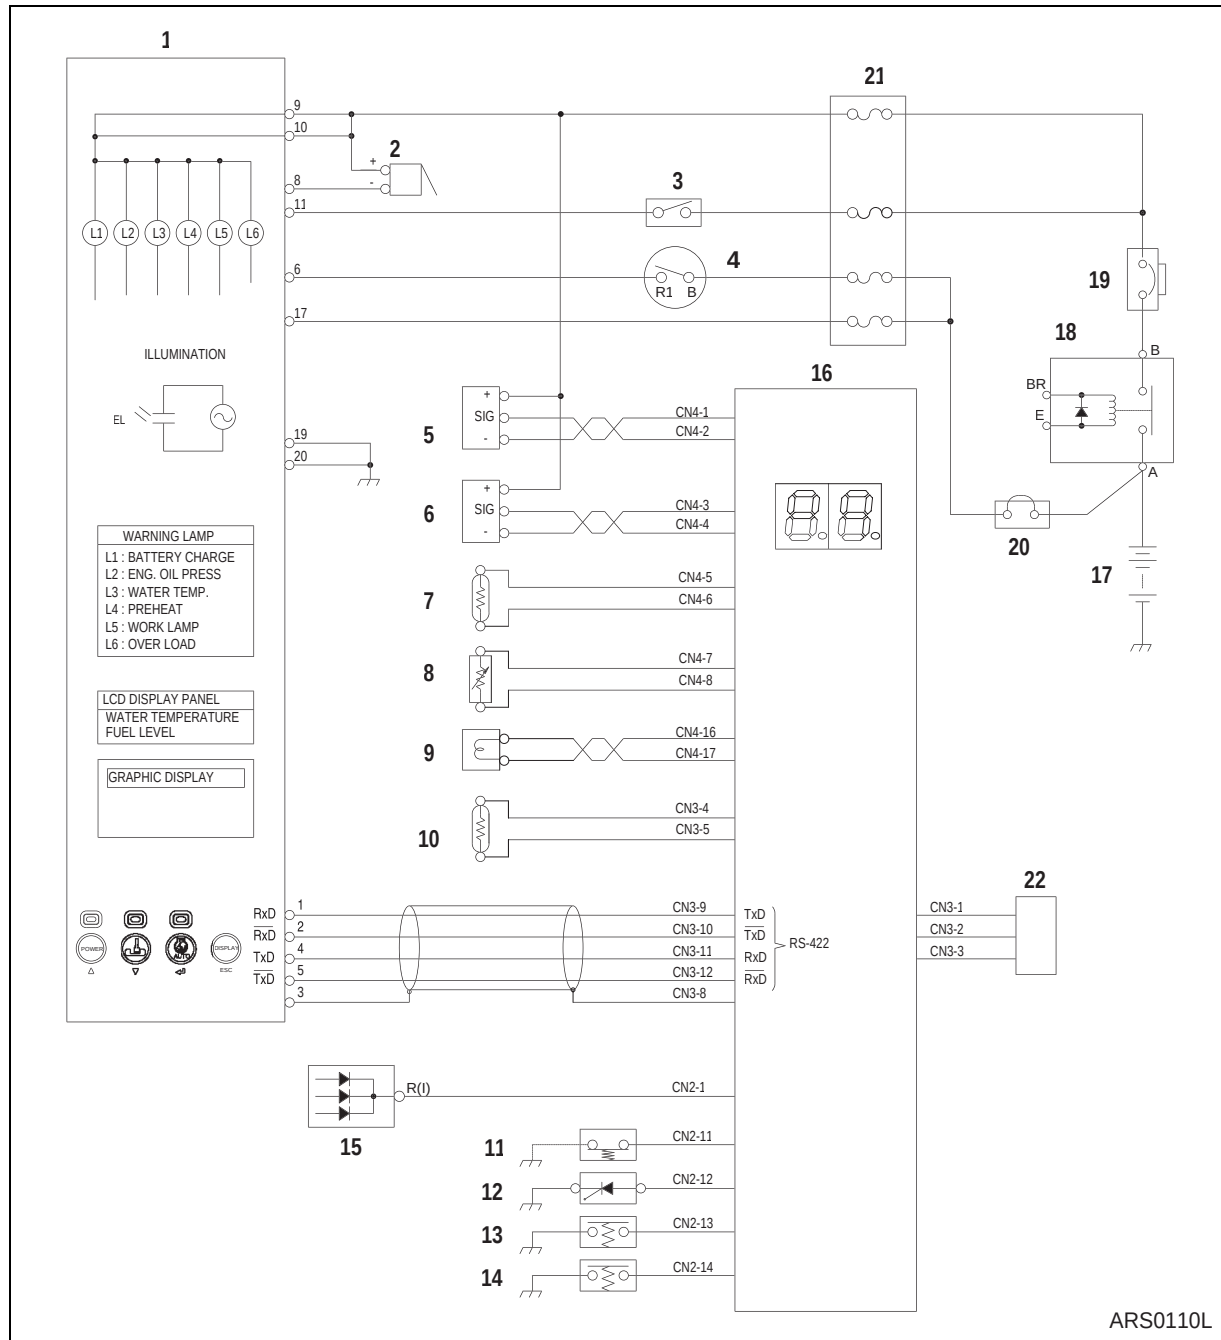


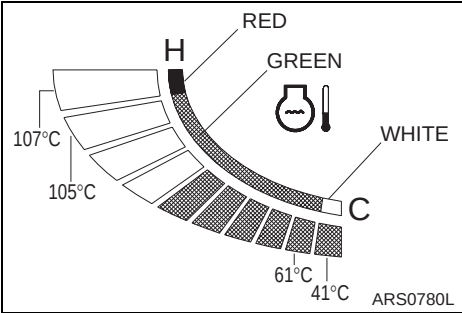
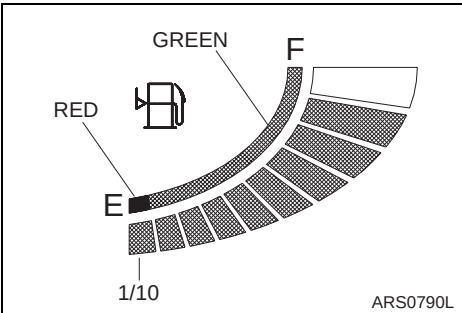
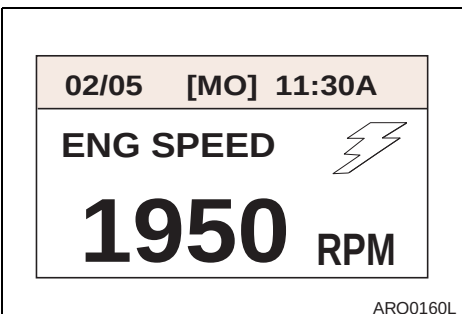
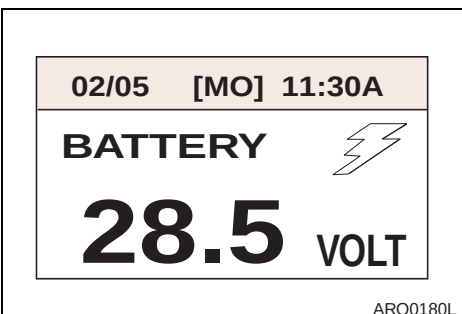
Figure 11

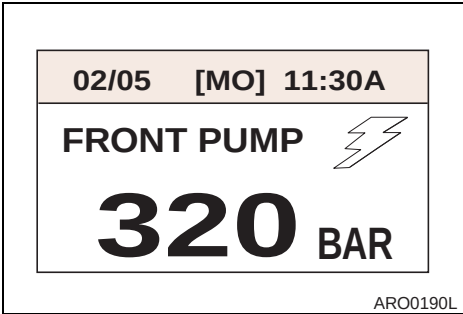
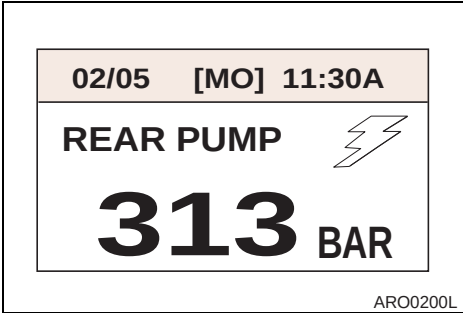
Reference Number	Description
1	Instrument Panel
2	Pilot Buzzer
3	Light Switch
4	Start Switch
5	Front Pump Pressure Sensor
6	Rear Pump Pressure Sensor
7	Engine Coolant Temperature Sensor
8	Fuel Gauge
9	Engine Speed Sensor
10	Hydraulic Oil Temp. Sensor

Reference Number	Description
11	Engine Oil Pressure Switch
12	Air Cleaner Indicator
13	Return Filter Switch
14	Pilot Filter Switch
15	Alternator
16	e-EPOS Controller
17	Battery
18	Battery Relay
19	Circuit Breaker
20	Fusible Link
21	Fuse Box
22	Check Connector

 
 
OPERATION

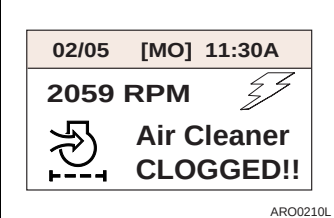
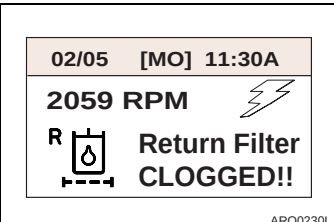
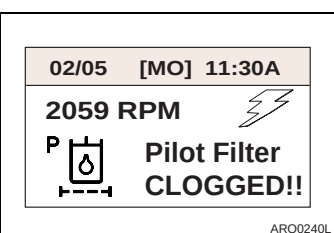
INSTRUMENTS

Function	Display	Sensor Specification	
		Input Terminal	Input Specification
Engine Coolant Temperature		CN4-5 CN4-6	41°C (106°F) → 1,372 ohms 61°C (142°F) → 855 ohms 102°C (216°F) → 160 ohms 105°C (221°F) → 147 ohms 107°C (225°F) → 128 ohms
Fuel Level		CN4-7 CN4-8	1/10 LCD Blinking → over 5K ohms FULL → under 525 ohms
Tachometer		CN4-16 CN4-17	N = 146 f / 60 (S300LC-V) N = 146 f / 60 (S300LL) N = 152 f / 60 (S340LC-V) N = 152 f / 60 (S420LC-V) N = 152 f / 60 (S470LC-V) N = Engine speed (rpm) f = Frequency of engine speed sensor (Hz)
Voltmeter		CN7-9 CN7-19	0 - 32 VDC

Function	Display	Sensor Specification	
		Input Terminal	Input Specification
Main pump discharge pressure (front pump)		CN4-1 CN4-2	$V = 0.00816 \times P + 1.0$ V: Sensor output voltage (V) P: Displayed pressure (Bar)
Main pump discharge pressure (rear pump)		CN4-3 CN4-4	

WARNING AND INDICATOR LIGHTS

Description	Symbol	Input Terminal	Operation	Remarks
Charge	 HAOA610L	CN2 - 1	Lights up when not charging [R(I) terminal output drops below 12±1V] and over charging [R(I) terminal output increase over 33 V].	Lights up before engine start up and shut off once engine is running.
Engine Oil Pressure	 HAOA620L	CN2 - 11	Lights up when engine oil pressure switch is turned "ON" (Oil pressure drops below 0.7 kg/cm ² (10 psi).	After starting engine, if engine oil pressure is insufficient after 8 seconds, a warning buzzer will sound.
Engine Coolant Temperature	 HAOD350L	CN4 - 5 CN 4 - 6	Lights up when the resistance of engine coolant temperature sensor drops below 128 ohms.	
Preheat	 HAOA639L	CN7 - 6	Lights up when preheat process is completed. (Approximately 19 seconds from start)	
Work Light	 2658A	CN2 - 7	Lights up when work light switch is turned "ON."	

Description	Symbol	Input Terminal	Operation	Remarks
Overload (Optional)	 ARO0220L	CN1 - 3 CN1 - 4	Lights up when lifting load exceeds limit. (When the over load warning switch is turned "ON," output voltage increases over reading in remarks.)	Warning buzzer will sound. 2.80 V (S300LC-V) 2.80 V (S300LL) 2.80 V (S340LC-V) 2.88 V (S420LC-V) 2.80 V (S470LC-V)
Graphic Information Area				
Air Cleaner	 ARO0210L	CN2 - 12	Lights up when air cleaner is clogged	Symbol is blinking.
Return Filter	 ARO0230L	CN2 - 13	Lights up when return filter pressure increases over 1.5 kg/cm ² (21 psi).	Symbol is blinking.
Pilot Filter	 ARO0240L	CN2 - 14	Lights up when pilot filter pressure increases over 1.0 kg/cm ² (14 psi).	Symbol is blinking.

INITIAL OPERATION

Item	Input (Terminal)	Output (Operation and initial setting mode)
Initial Operation	When battery voltage is input to CN7 - 9 (starter switch is turned from "OFF" to "ON" position).	• All LCD, LED and warning lights are turned on and turned off after about 2 seconds. • Warning buzzer is activated and turned off after about 2 seconds. • Power mode: Standard mode. • Work Mode: Digging mode. • Auto Idle: High Output (Activation). • Numerical display: Engine speed. • Clock: Current time display.

NOTE: Refer to the clock setting method of operation manual for time setting.

MODE SELECT SWITCH

Power Mode / Trenching Mode Switch

Operation Mode		Output Check (Operation mode display LED)	e-EPOS Output		
			Pump Volume Valve (mA)	Discharge Control Current	Swing Priority Solenoid Valve 7-Segment Display
Power Mode	Power Mode	ON	Variable Output		9 x
	Standard Mode	OFF	0		7 x
Work Mode	Trenching Mode	ON	-		ON x 2
	Digging Mode	OFF	-		OFF x 0

Auto Idle Switch

Operation Mode		Output Check (Operation mode display LED)	e-EPOS Output (CN1 - 7 Terminal)
Auto Idle	Activation	ON	H (11 ±1.5V)
	Cancellation	OFF	L (0 - 1V)

GRAPHIC INFORMATION AREA DISPLAY

OVERVIEW

Many kinds of condition of machine are displayed on the letter information display department. The information display department is divided into two menus. One is main menu for user and the other is special menu for specialist. These menus can be moved from normal display mode by the combination of select buttons.

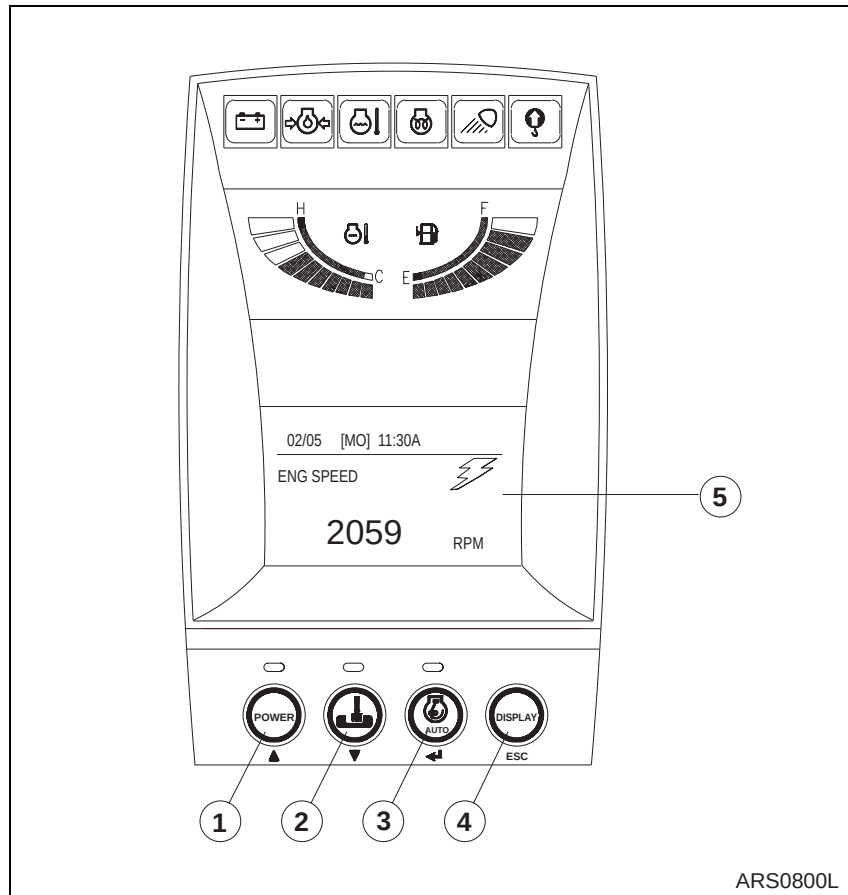


Figure 12

Selection Buttons	Graphic Display Area
1. Up Arrow Button	5. Letter Information Display Department
2. Down Arrow Button	
3. Enter Button	
4. Escape Button	

MAIN MENUS FOR THE GRAPHIC DISPLAY AREA

1. Main menu: Language setting, Time setting, Filter/Oil information
2. Special menu: Information of machine status, failure information, Information of machine operation.

MENU SELECTION BUTTONS

1. Up Arrow Button (▲, 1 on Figure 12): Move the cursor to up, left and previous screen.
2. Down Arrow Button (▼, 2 on Figure 12): Move the cursor to down, right and next screen.
3. Enter Button (↵, 3 on Figure 12): Move the menu to selected mode. When setting the menu, this button is used to function as the select button.
4. Escape Button (ESC, 4 on Figure 12): Move a screen to previous menu or main menu.

MAIN MENU

When the "ESC" button is pressed for more than 3 seconds, the main menu screen is displayed.

Main menu offers three sub-menus (language setting, time setting, or filter/oil information) to the operator.

Refer to the "Operation and Maintenance Manual" for details.

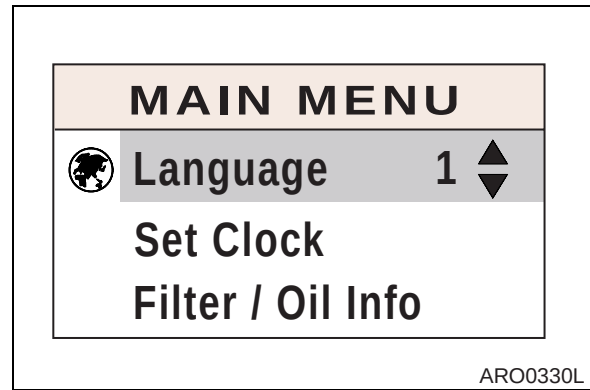


Figure 13

LANGUAGE SETTING

This mode is used for setting desired language.

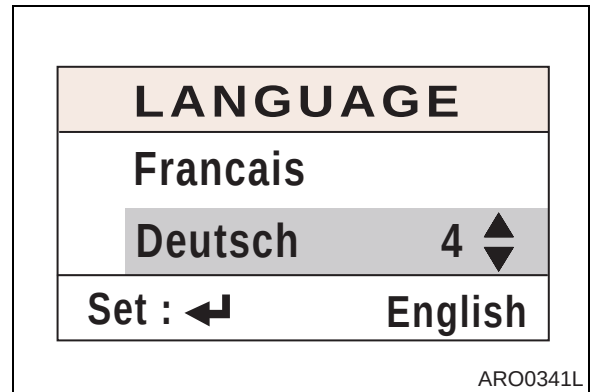


Figure 14

TIME SETTING

This mode is used for setting time on the digital clock.

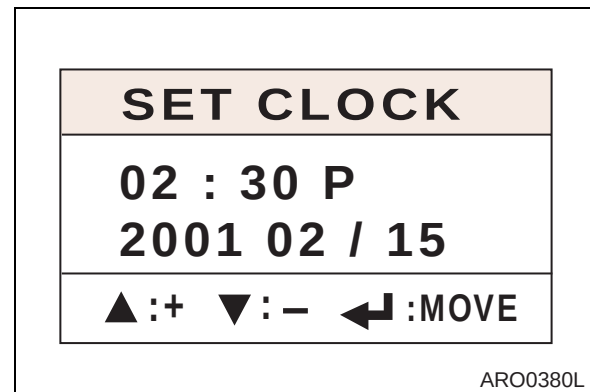


Figure 15

FILTER/OIL INFORMATION

This mode displays total operating hours of filters and oils.

After changing the filter and oil, reset the operating hour and then the operating hours until the next service interval can be easily checked.

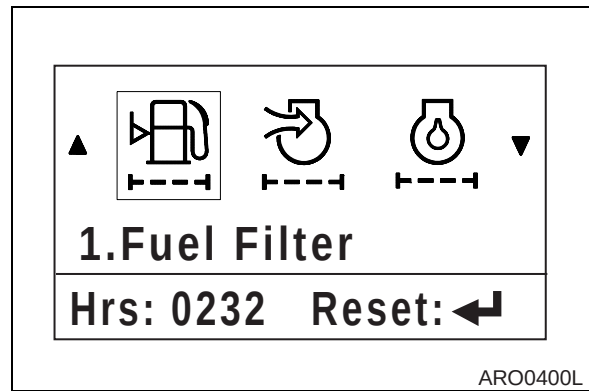


Figure 16

Menu Display Order and Icon Explanation

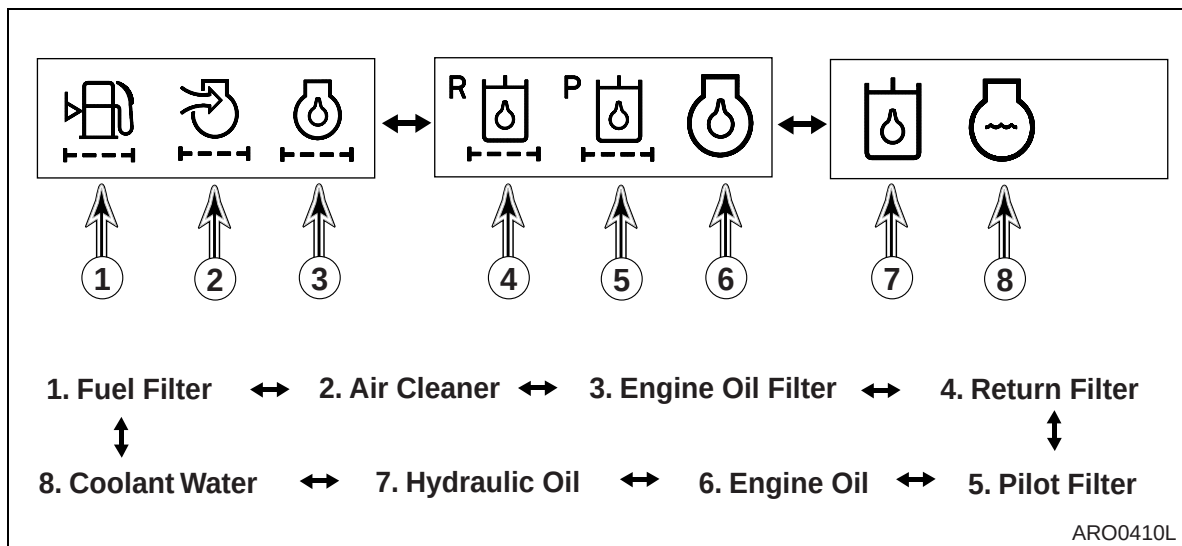


Figure 17

SPECIAL MENU

In this menu, many types of operating conditions and functions can be accessed and displayed, including the e-EPOS controller. This menu is mainly used for machine testing and failure diagnostics.

The special menu offers three sub-menus;

1. Machine status.
2. Failure information.
3. Information on machine operation

ENTERING/ACCESSING AND EXITING/ESCAPING MENUS

Entering/Accessing Menus

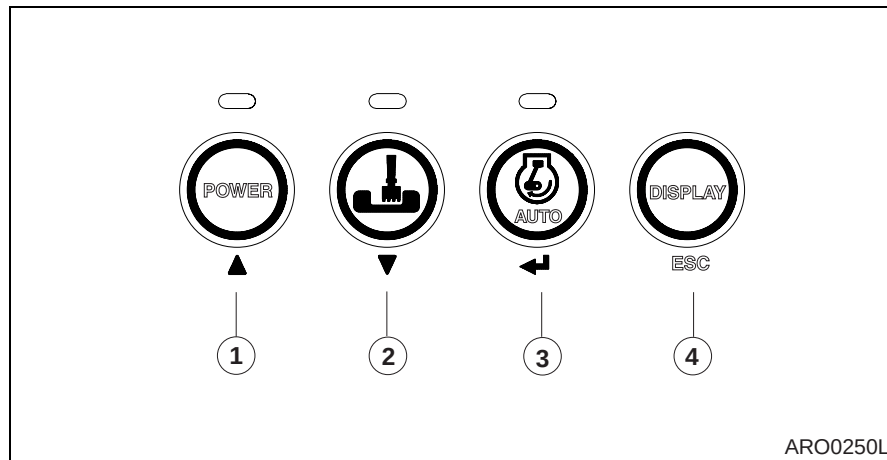


Figure 18

When normal mode screen is displayed, if the enter button (↵, 3) and escape button (ESC, 4) are pressed simultaneously for more than 3 seconds, normal mode screen (Figure 19) will be changed to special menu screen (Figure 20).

Normal Mode Screen

NOTE: Normal mode screen can display many kinds of display mode by selecting, for example, engine revolution (RPM), battery voltage (V), front pump pressure (BAR), rear pump pressure (BAR) and so on by selecting.

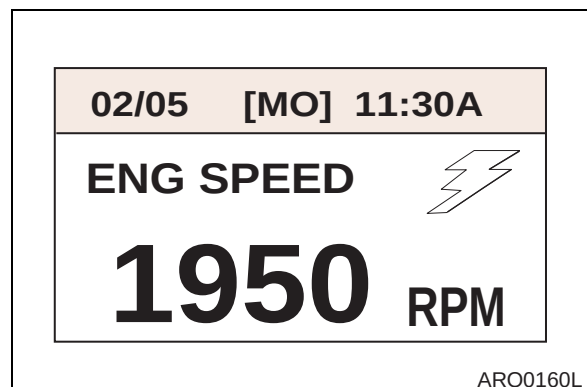


Figure 19

Special Menu Screen

NOTE: Displayed language on the special menu screen consists of Korean and English.

If any language except for Korean is selected during language selection mode of main menu, only English will be displayed on special menu screen.

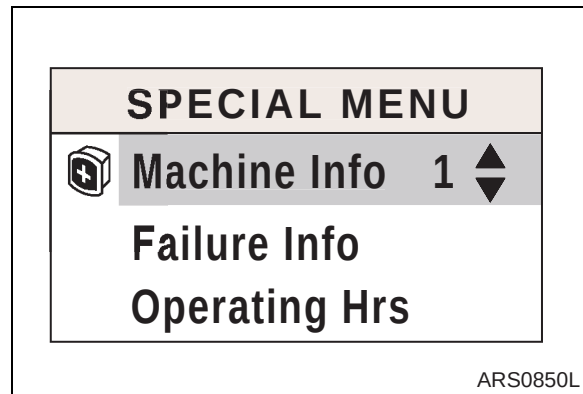


Figure 20

Exiting/Escaping Menus

1. If escape button (ESC, 4 on Figure 18) is pressed for more than 1 second, the special menu screen will be returned to the normal mode screen.
2. If this special menu is "ON" without any activity, for more than 20 seconds, it will turn to the normal mode screen.
3. After the turning starter switch to the "OFF" position, turn it back to the "ON" position, and the normal mode screen displayed once again.

SPECIAL MENU SELECTIONS

Sub-menu Selection Method

Various sub-menus can be selected by pressing "Up (▲, 1 on Figure 18)" and "Down (▼, 2 on Figure 18)" button.

Move the cursor to desired menu and a selected menu will be inverse displayed.

When the selected menu is inverse displayed, press the "Enter (↵, 3 on Figure 18)" button for menu selection.

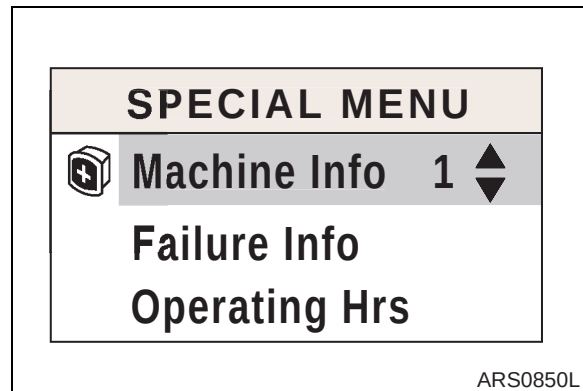


Figure 21

Information of Machine Status

1. Entering Sub-menus: When cursor is located on "Machine Info" of special menu screen, press "Enter (↵, 3 on Figure 18)" button and the "Machine Info Sub-menu" will be displayed.
2. Exiting Sub-menus: If escape button (ESC, 4 on Figure 18) is pressed for more than 1 second, display will be turned to previous sub-menu.

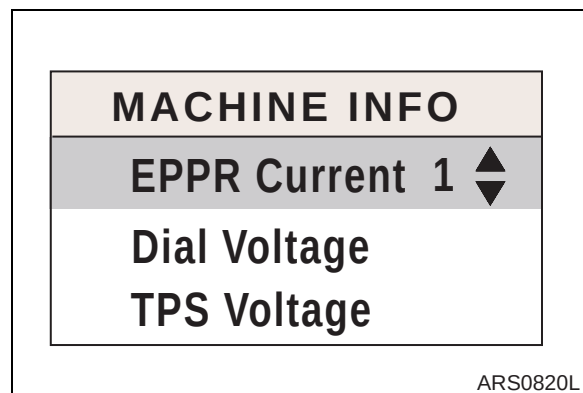


Figure 22

Contents of Machine Status

Display Item of Machine State Information			Display	Remarks
1. EPPR Current			"mA"	EPPR valve current
2. Dial Voltage			"mV"	Dial voltage
3. TPS Voltage			"mV"	TPS voltage
4. Input State	1. Alternator	8. Pressure (Px)	On or Off	Input status delivered from switches and sensors to e-EPOS controller is displayed as on or off. * Number 3 (Work/Travel Solenoid) is used only wheel type machine. * Number 13 (OWD Select) is optional part.
	2. Power Max	9. E/G Oil Press.		
	3. Work/Travel Solenoid	10. Air Cleaner		
	4. Hi Speed Solenoid	11. Return Filter		
	5. Auto Travel	12. Pilot Filter		
	6. Work Lamp	13. OWD Select		
	7. Pressure (Py)			
5. Output State	1. Relief Press Up	4. Spare Out 1	On or Off	Output status delivered from e-EPOS controller to solenoid valves is displayed as on or off.
	2. High Speed	5. Spare Out 2		
	3. Swing Priority			
6. Hydraulic Oil Temp			°C (°F)	Hydraulic oil temperature.
7. Boom Pressure (Opt)			BAR	On machine with overload warning device, it displays cylinder pressure.
8. T/M Pressure (Wheel Type)			BAR	At this machine, it is always displayed as "O."

Sub-menu Selections

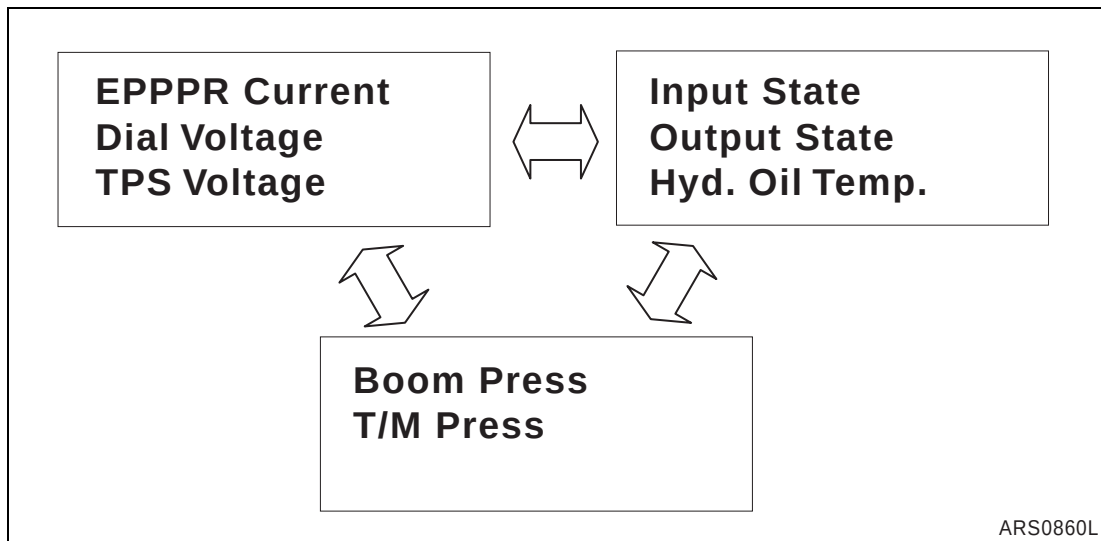


Figure 23

Display Example: Machine Status Information

1. EPPR Valve Current

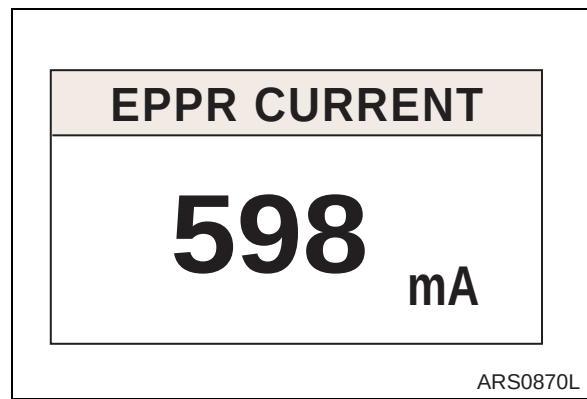


Figure 24

2. Dial Voltage

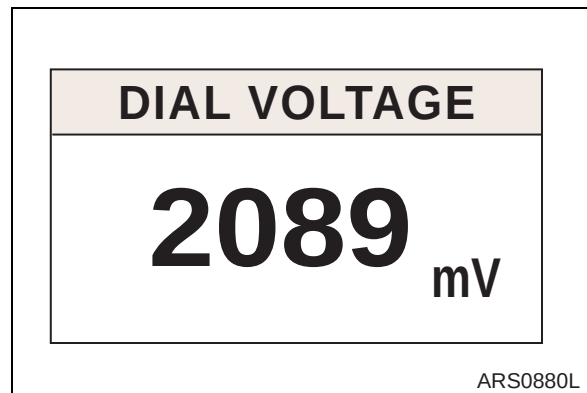


Figure 25

3. TPS Voltage

Output voltage of potentiometer built into engine control motor.

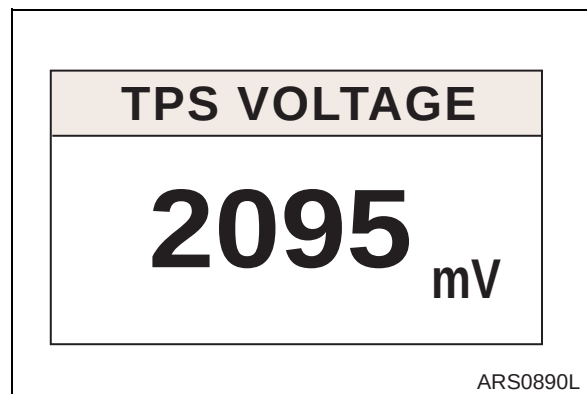


Figure 26

4. Input Status

"YES" or "NO" for alternator's generation (Generation: "ON"/ Non-generation: "OFF"), selection status of select switch (Selection: "ON"/ Non-selection: "OFF") and the other statuses of on/off type sensors.

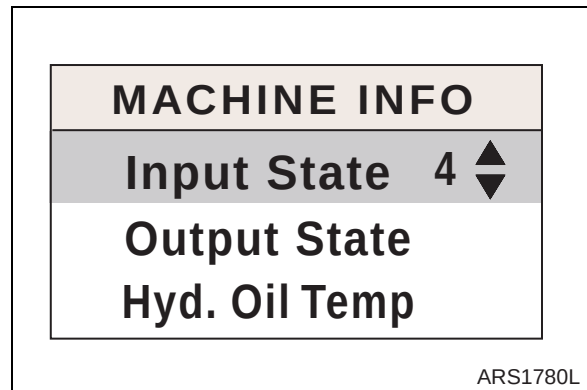


Figure 27

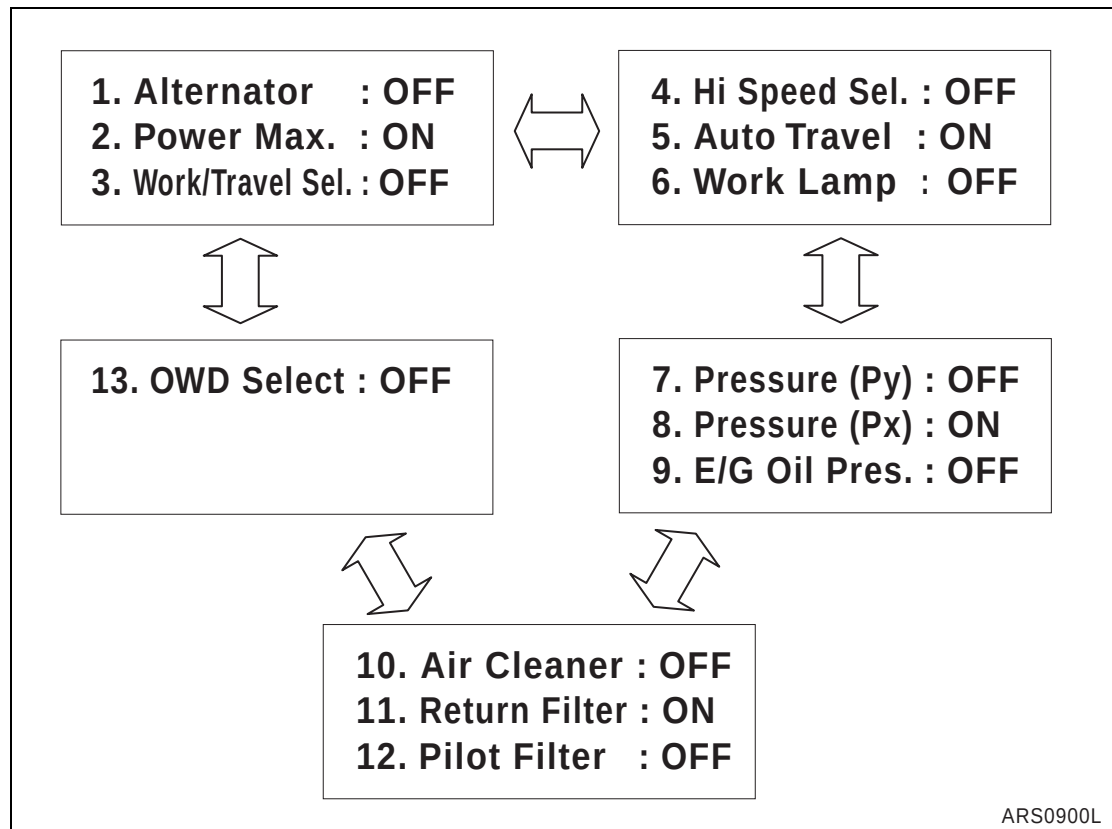


Figure 28

5. Output Status: Output status of solenoid valves and spare valves are displayed. (Output: "ON"/ Non-output: "OFF")

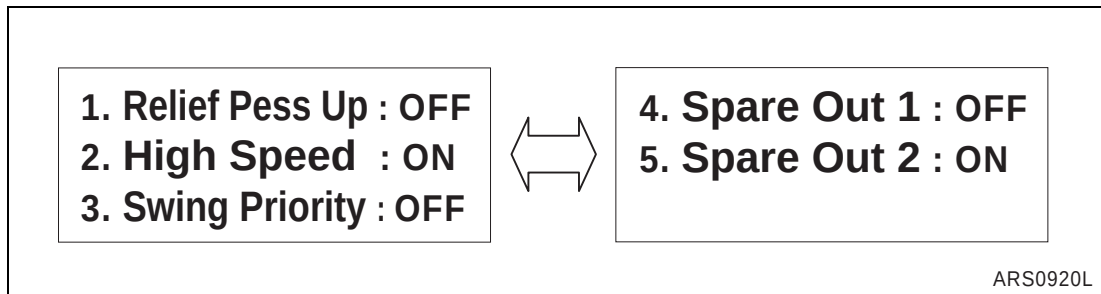


Figure 29

6. Hydraulic Oil Temperature

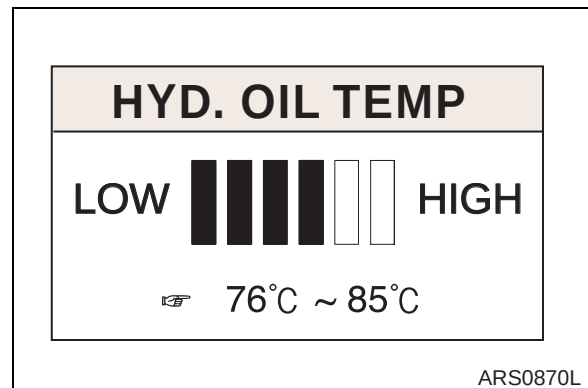


Figure 30

- Display Specification

BAR Graph Display	Input Terminal	Sensor Input Specification	Remarks
1/6 BAR Lit	CN 3 - 4 CN 3 - 5	Over 1,510 Ω	Below 30°C (Below 86°F)
1/6 ~ 2/6 BAR Lit		745 ~ 1,510 Ω	31 ~ 50°C (87 - 122°F)
1/6 ~ 3/6 BAR Lit		332 ~ 745 Ω	51 ~ 75°C (123 - 167°F)
1/6 ~ 4/6 BAR Lit		244 ~ 332 Ω	76 ~ 85°C (168 - 185°F)
1/6 ~ 5/6 BAR Lit		181 ~ 244 Ω	86 ~ 95°C (186 - 203°F)
1/6 ~ 6/6 BAR Lit		Under 181 Ω	Over 96°C (Over 204°F)

7. Boom Pressure (Optional)

On machine with OWD (Overload Warning Device), detected pressure from boom cylinder is displayed with numeric values (Unit: Bar).

The relative equation between the, output voltage of pressure sensor, and the pressure of boom cylinder, is as follows.

- $V = 0.00816P + 1$

V: Output voltage of pressure sensor (V).

P: Displayed pressure (Bar).

NOTE: At standard machine, "0 BAR" is always displayed.

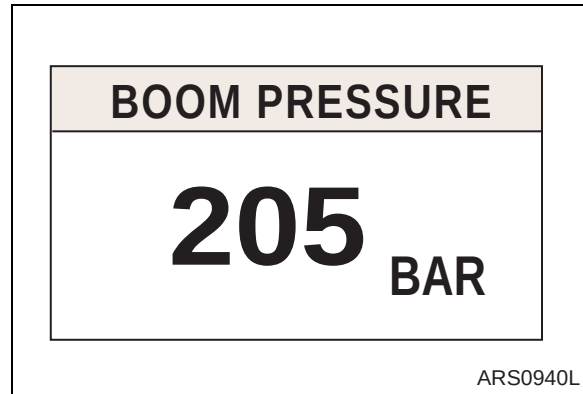


Figure 31

Failure Information

1. Entering Sub-menus: When a cursor is located in "Failure Info" of special menu screen press enter button (↵, 3 on Figure 18) and "Failure Info" screen is displayed.
2. Exiting Sub-menus: If escape button (ESC, 4 on Figure 18) is pressed for more than 1 second, this information screen will be returned to previous screen.

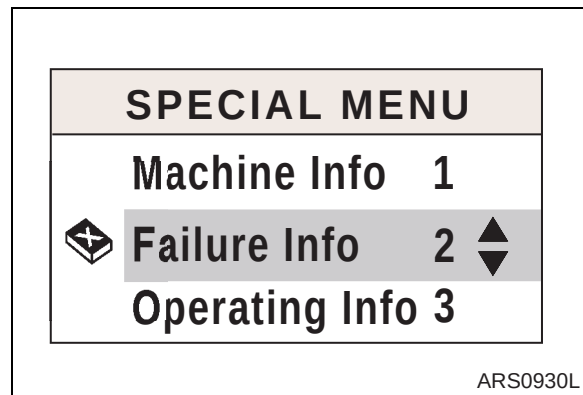


Figure 32

- * Real-time Failure:
Current status of failure is displayed.
- * Failure Log:
Memorized record of past failure is displayed.
- * Delete Fail Log:
This mode is used to delete all of the memorized record of past failure.

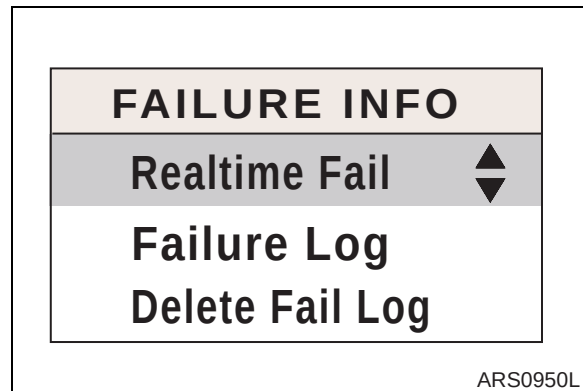


Figure 33

A. Current failure information

Current status of failure is displayed (Failure code, failure contents).

When a number of failures are produced, failure information can be checked by using "PRV" (▲, 1 on Figure 18) or "NXT" (▼, 2 on Figure 18) button.

* CODE: 12: Unique code of failure information.

* 01/02: A serial number of current failure/ total quantity of failure.

This example shows one of two failures.

B. Past failure information

Memorized record of past failure is displayed (Failure code, failure contents).

When a number of failures are produced, failure information can be checked by using "PRV" (▲, 1 on Figure 18) or "NXT" (▼, 2 on Figure 18) button.

NOTE: " N: xxx " : "xxx" means that the totally counted number of the same failure.

" xxxx Hr " : It will display the operation hour until the failure is generated. (Above example screen shows that breaking of a wire of pressure solenoid valve is generated at 75Hr.)

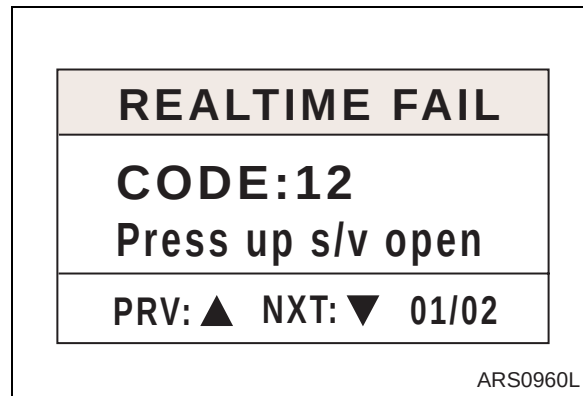


Figure 34

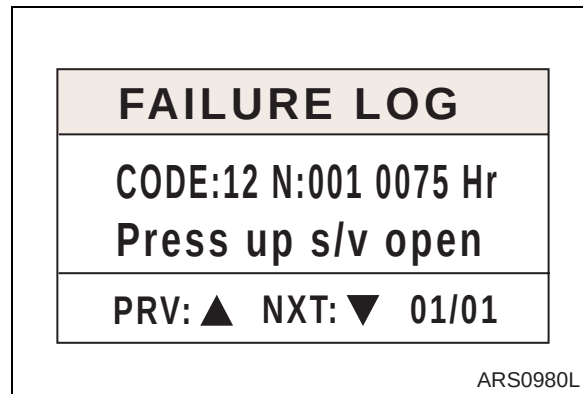


Figure 35

C. Failure record deletion

This mode is used to delete the memorized record of past failure. If this mode is selected, all records will be deleted.

When "YES" (←, 3 on Figure 18) button is pressed, the memorized record will be deleted.

At this time, deletion signal will be displayed and the screen will move to previous menu after deletion.

This screen will be displayed during 3 seconds.

When "NO" (ESC, 4 on Figure 18) button is pressed, the screen will recover to previous menu without deletion.

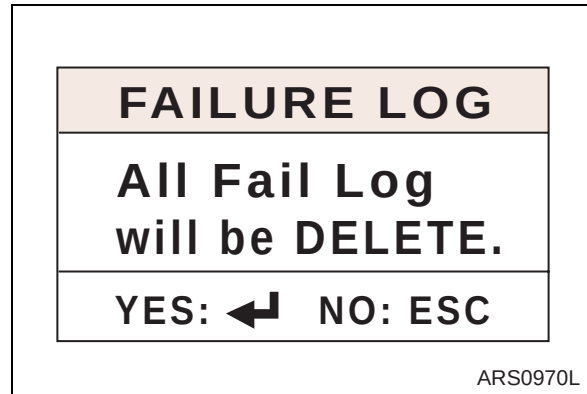


Figure 36

Code Description of Failure Information

Code	State
0 x	Short Circuit
1 x	Open circuit
2 x	Output error
3 x	Output error
8 x	Communication

Display Contents of Failure Information Code

Code	Contents	Cause	Operation	Reset Procedure
82	Communication Err!!	Communication error between e-EPOS controller and instrument panel	* Note	Automatic reset when problem is corrected
01	EPPR v/v short	Short Circuit	Cut off output current (0 mA)	After correcting problem, turn start switch from "OFF" to "ON."
02	Press Up s/v short	Short Circuit		
03	Swing pri. s/v short	Short Circuit		

Code	Contents	Cause	Operation	Reset Procedure
11	EPPR v/v open	Open Circuit	-	Automatic reset when problem is corrected
12	Press Up s/v open	Open Circuit	-	
13	Swing pri. s/v open	Open Circuit	-	
21	Dial Voltage Err (H)	Output voltage Over 4.6±0.2 V	-	
22	Dial Voltage Err (L)	Output voltage Over 0.4±0.2 V	-	
23	TPS Voltage Err (H)	Output voltage Over 4.6±0.2 V	Cut off EPPR v/v current (0 mA)	
24	TPS Voltage Err (L)	Output voltage Over 0.4±0.2 V	Cut off EPPR v/v current (0 mA)	
25	Fpump Sensor Err (H)	Output voltage Over 4.6±0.2 V	-	
26	Fpump Sensor Err (L)	Output voltage Over 0.4±0.2 V	-	
27	Rpump Sensor Err (H)	Output voltage Over 4.6±0.2 V	-	
28	Rpump Sensor Err (L)	Output voltage Over 0.4±0.2 V	-	
29	Speed Sensor Err	Under 1067±20Hz (On condition that alternator output exceeds over 12±1V)	-	
31	Fuel shot to GND	Sensor's resistance between two terminals is under 150±100Ω	-	
32	Fuel Sensor open	Sensor's resistance between two terminals is under 6.5±0.5 kΩ	-	
33	Alternator too high	Output voltage of alternator exceeds 33 V for more than 3 seconds	-	
34	Alternator too low	When the output voltage is maintained under 18±1 for more than 3 seconds (On condition that speed sensor output exceeds over 1,067Hz)	-	

NOTE:

1. If a communication error is generated during operation, the power mode, work mode and auto idle mode will be maintained at the last mode setting before the failure took place until the unit is shutdown.
2. When start switch is turned to the "ON" position during a period of a communication error, the e-EPOS controller will operate in the following modes.
 - Power mode: Standard mode

- *Work mode: Digging mode*
 - *Auto idle: "ON" (Selection state)*
3. *The above mentioned two statuses are applicable to normal condition of an e-EPOS controller.*
 4. *Under the abnormal condition of an e-EPOS controller, communication cable or instrument panel failure, "Failure code: 82" can be generated.*

Information of Machine Operation

Accumulated operation hour of each mode and status is displayed.

1. Operating Hour Information

- A. Entering Sub-menus: When a cursor is located in "Operating Info" of special menu screen (Figure 37) press enter button(↵, 3 on Figure 18) and "Operating Info" screen will be displayed (Figure 38).

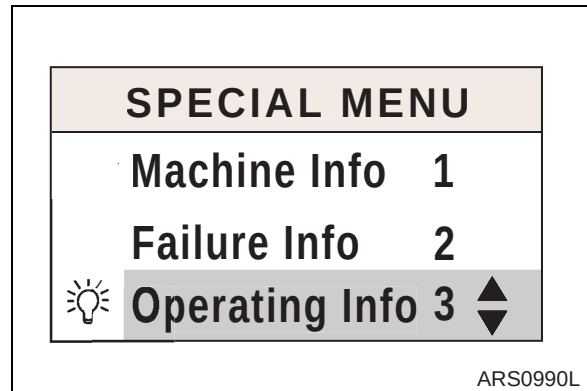


Figure 37

- B. Information screen of machine operation (Figure 38).

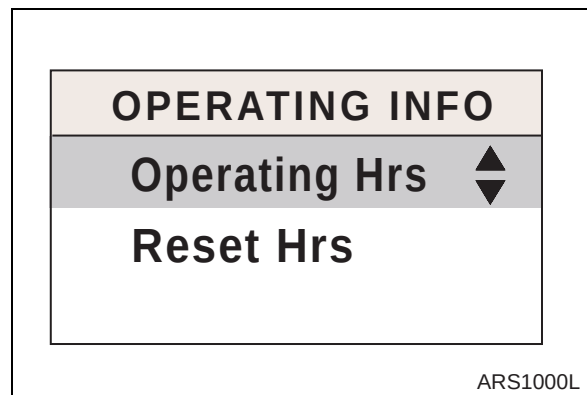


Figure 38

- C. Operation Hour Screen
- D. Exiting Sub-menus: If escape button (ESC, 4 on Figure 18) is pressed for more than 1 second, this information screen will be returned to previous screen.

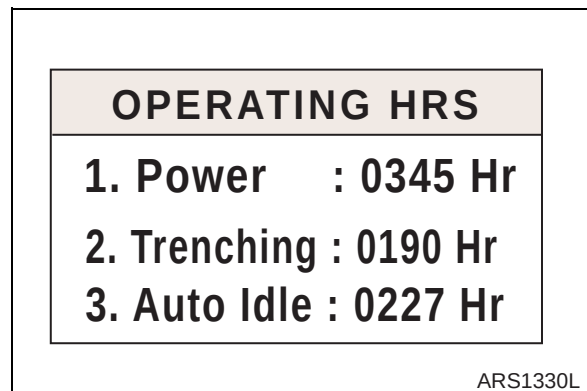


Figure 39

Information contents of operation hour

Item	Information Contents	Detection Method
Power Mode	Operation hours used power mode are displayed.	Power mode switch (Instrument panel) - "ON" status and Alternator signal (CN2-1)
Trenching Mode	Operation hours used trenching mode are displayed.	Trenching mode switch (Instrument panel) - "ON" status and Alternator signal (CN2-1)
Auto Idle	Operation hours used auto idle status are displayed.	Auto idle switch (Instrument panel) - "ON" status and Alternator signal (CN2-1)
Travel Speed: - Low speed - High speed	Operation hours used low speed and high speed are displayed	Low speed: High speed s/v "OFF" status and travel pressure switch "Py" (control valve) - "ON" status High speed: High speed s/v and travel pressure switch "Py" (control valve) - "ON" status
Hydraulic Oil Temperature Distribution (°C (°F))	Temperature of hydraulic oil is classified 6 steps. And operation hours of each step are displayed Under 30°C (87°F) 31 ~ 50°C (88 - 123°F) 51 ~ 75°C (124 - 168°F) 76 ~ 85°C (169 - 186°F) 86 ~ 95°C (187 - 203°F) Over 96°C (204°F)	The resistance delivered from temperature sensor of hydraulic oil is classified 6 steps. And operation hours of each step are displayed. (Alternator output)
Coolant Temperature Distribution (°C (°F))	Temperature of coolant is classified 6 steps. And operation hours of each step are displayed Under 40°C (105°F) 41 ~ 60°C (106 - 141°F) 61 ~ 85°C (142 - 186°F) 86 ~ 95°C (187 - 204°F) 96 ~ 105°C (205 - 222°F) Over 106°C (223°F)	The resistance delivered from coolant sensor is classified 6 steps. And operation hours of each step are displayed. (Alternator output)

Menu Selection of Operation Hour Information

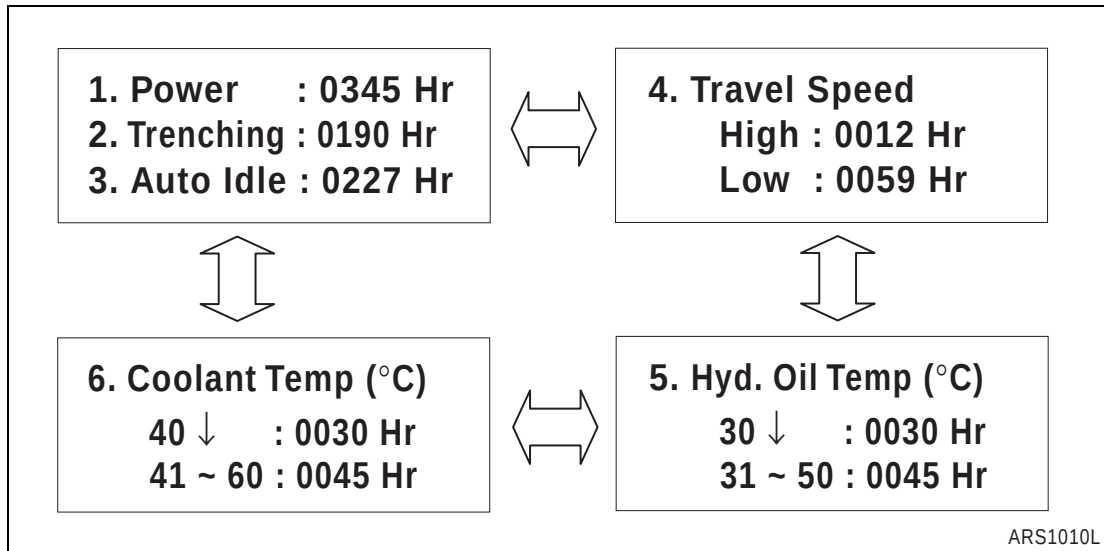


Figure 40

2. Operation hour reset

- A. Entering Sub-menus: When cursor is located in "Reset Hrs" of information screen of operation hour press enter button (↵, 3 on Figure 18) and "Reset Hrs" screen will be displayed.

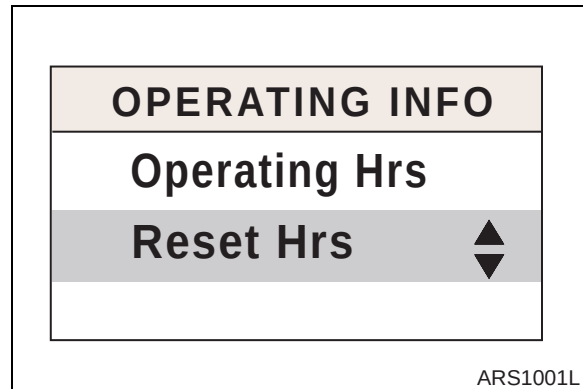


Figure 41

- B. Reset screen of operation hour
- C. Exiting Sub-menus: If escape button (ESC, 4 on Figure 18) is pressed for more than 1 second, this information screen will be returned to previous screen.

NOTE: When "YES" (↵, 3 on Figure 18) button is pressed, operation hours will reset.
At this time, resetting signal will be displayed and the screen will move to previous menu after resetting.

NOTE: When "NO" (ESC, 4) button is pressed, the screen will recover to previous menu without resetting.



Figure 42

ELECTRONIC HYDRAULIC CONTROL SYSTEM (E-EPOS)

CONTROL SYSTEM SCHEMATIC

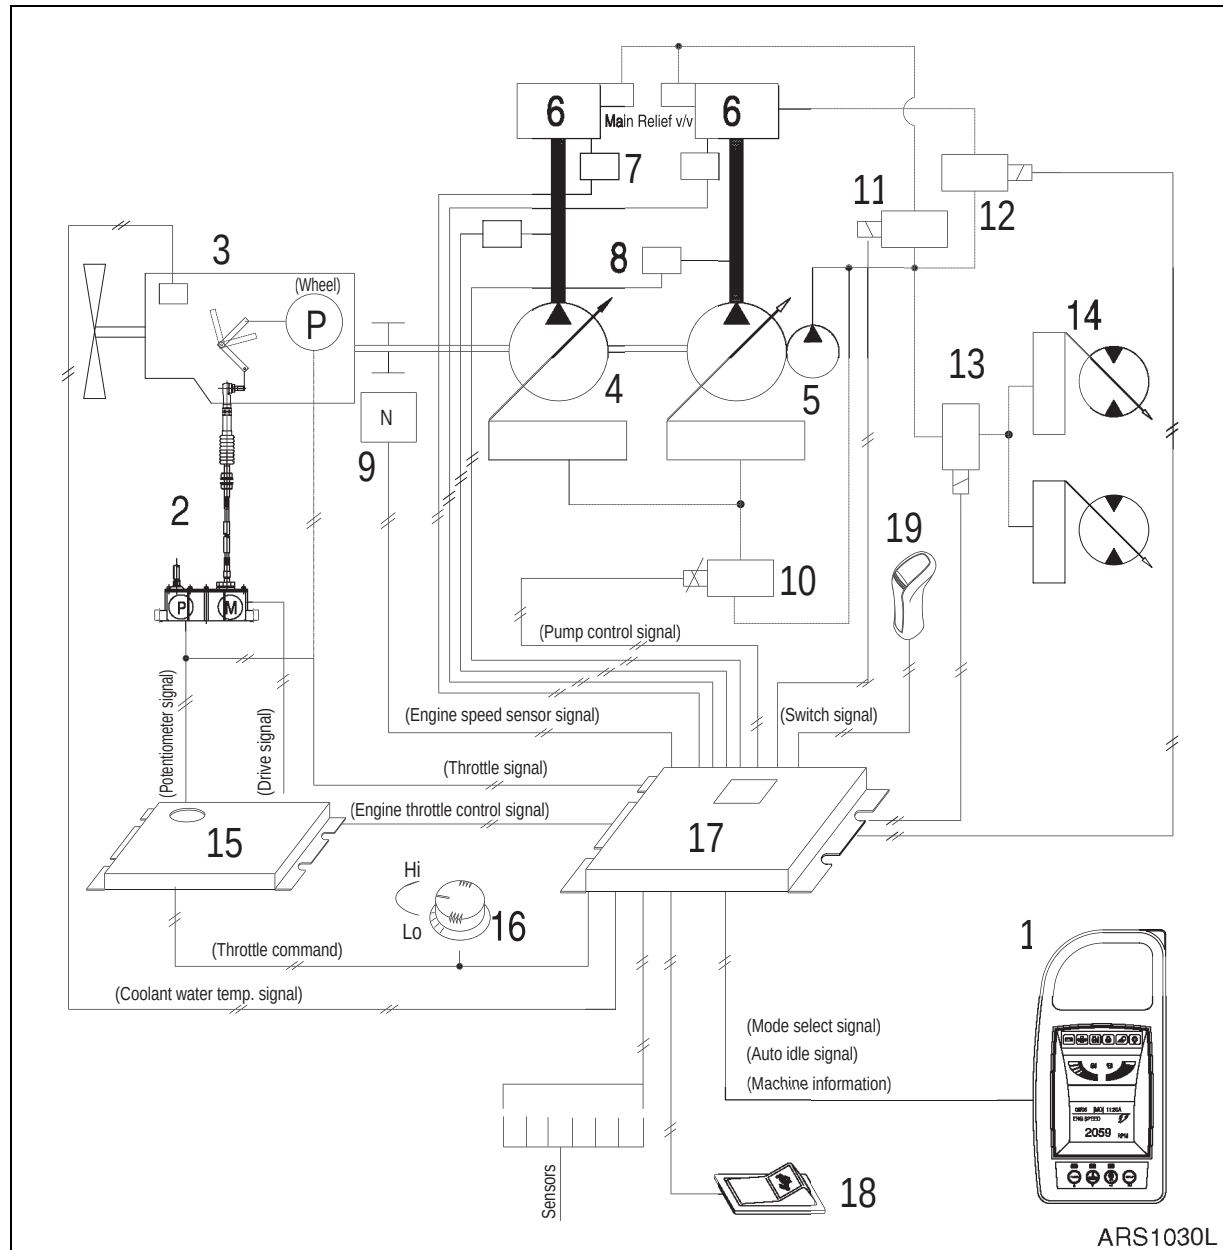


Figure 43

Reference Number	Description
1	Instrument Panel
2	Engine Control Motor
3	Engine
4	Main Hydraulic Pump
5	Control Pump
6	Control Valve
7	Pressure Switch
8	Pump Pressure Sensor
9	Engine Speed Sensor
10	Electro-magnetic Proportional Pressure Reducing Valve (E.P.P.R. Valve)

Reference Number	Description
11	Solenoid Valve (Pressure Up)
12	Solenoid Valve (Swing Priority)
13	Solenoid Valve (High Speed)
14	Travel Motor
15	Engine Throttle Control
16	Engine Control Dial
17	e-EPOS Controller
18	Auto Travel Select Switch
19	Boost Switch (Right Work Lever)

POWER MODE CONTROL

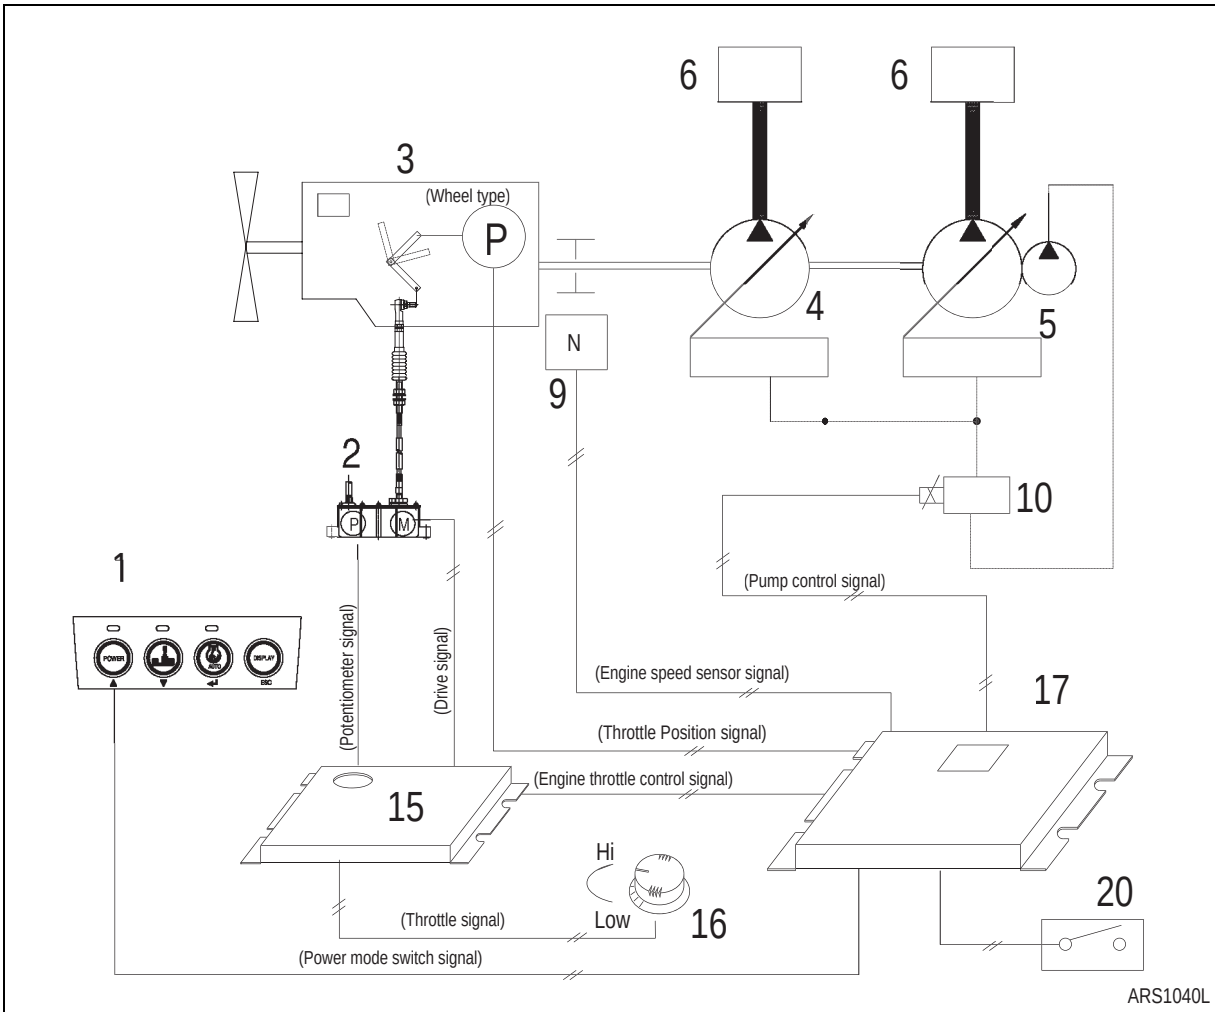


Figure 44

Reference Number	Description
1	Instrument Panel (Power Mode Selection Switch)
2	Engine Control Motor
3	Engine
4	Main Hydraulic Pump
5	Control Pump
6	Control Valve

Reference Number	Description
9	Engine Speed Sensor
10	E.P.R. Valve
15	Engine Throttle Controller
16	Engine Control Dial
17	e-EPOS Controller
20	Work / Travel Selection Switch (Wheel Type)

The power mode switch permits the selection of the appropriate engine power depending on the working condition. One of the two, Power Mode or Standard Mode, setting can be selected. When the engine start switch is turned "ON," the power mode is automatically defaulted to standard mode. The desired mode can be selected by pressing the select button on the instrument panel. When the power mode is selected, the indicator lamp will turn "ON" to display the selected mode.

The quantity of oil discharged by the pump and the engine speed are determined by the mode selected by the operator. The pump output in each mode is determined by the mode selection and is listed in the following table

Mode	Standard Mode	Power Mode
Output (%)	Approximately 85%	100%

OPERATION

1. Power Mode

This mode should be selected for high speed work. In this mode the engine output is most efficiently utilized due to the discharged oil volume being controlled based on the equivalent horsepower curve at various loaded pressures. The e-EPOS controller compares the target engine speed with the actual engine speed and controls the signal to the E.P.P.R. (Electric Proportional Pressure Reducing) valve which in turn varies the pump output quantity.

If the load increases, the engine speed will fall below the rated speed. When this occurs, the controller senses this decrease and immediately reduces the pump discharge volume to maintain the engine speed at the rated level.

On the other hand, if the load is decreased the controller increases the discharge volume of the pump to maintain the engine speed at the rated level.

By repeating these control operations, the engine speed is maintained at the rated speed so that maximum power can be generated.

In Power Mode, the controller receives engine speed signals from the engine speed sensor and the throttle position sensor (sensor is built into engine control motor) and converts it to an operating signal current and is then transferred to the pump's E.P.P.R. valve. At this time the E.P.P.R. valve converts the electric signal to the corresponding control pressure and sends it to the two pumps, adjusting the pump discharge volume to the desired level.

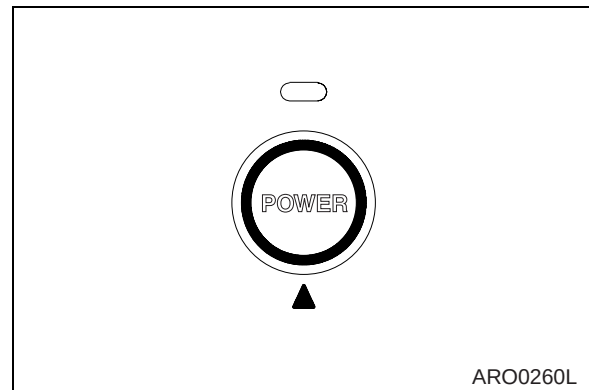


Figure 45

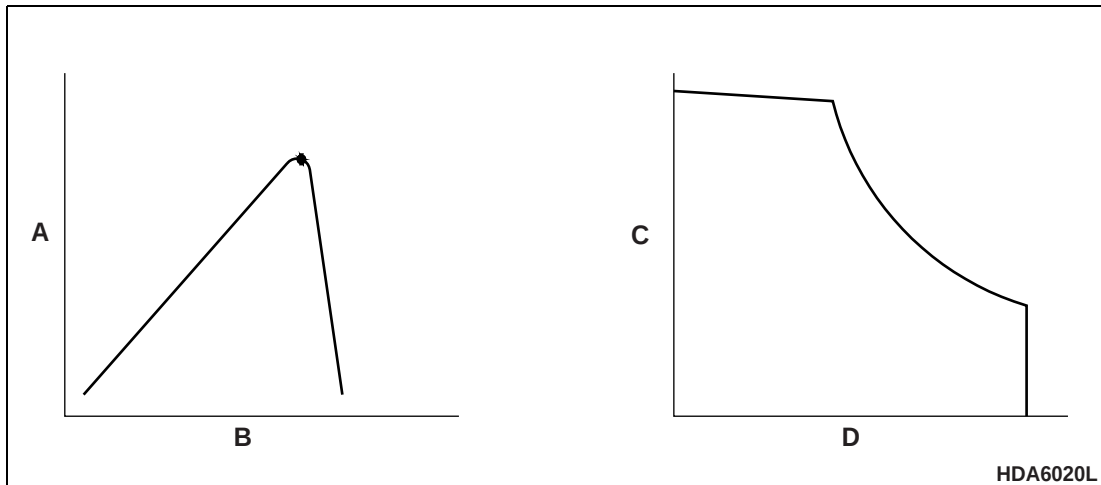


Figure 46

Reference Number	Description
A	Engine Horsepower (hp)
B	Engine Speed (rpm)
C	Pump Discharge Volume (lpm)

Reference Number	Description
D	Pump Discharge Pressure (kg/cm ²)

2. Standard Mode

Standard Mode is used for general work. When this mode is selected it will reduce noise and fuel consumption in comparison with Power Mode. The current to the E.P.R. valve is shut off and pump discharge volume is controlled by pump regulator.

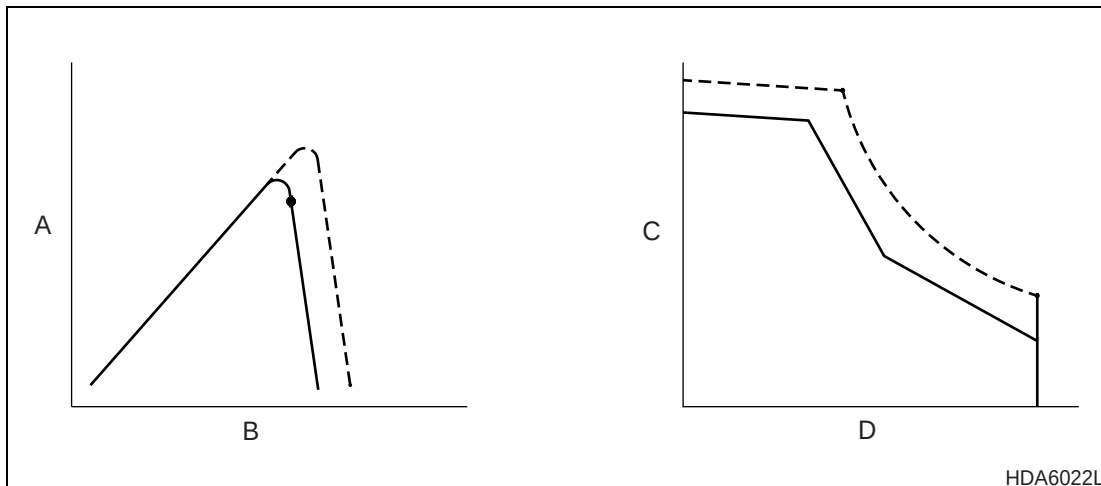


Figure 47

Reference Number	Description
A	Engine Horsepower (hp)
B	Engine Speed (rpm)
C	Pump Discharge Volume (lpm)

Reference Number	Description
D	Pump Discharge Pressure (kg/cm ²)



Reference Number	Description
1	Battery
2	Battery Relay
3	Fuse
4	e-EPOS Controller
5	Instrument Panel

Reference Number	Description
6	Engine Speed Sensor
7	Engine Throttle Controller
8	Engine Control Motor
9	Engine Control Dial

TRENCHING MODE CONTROL

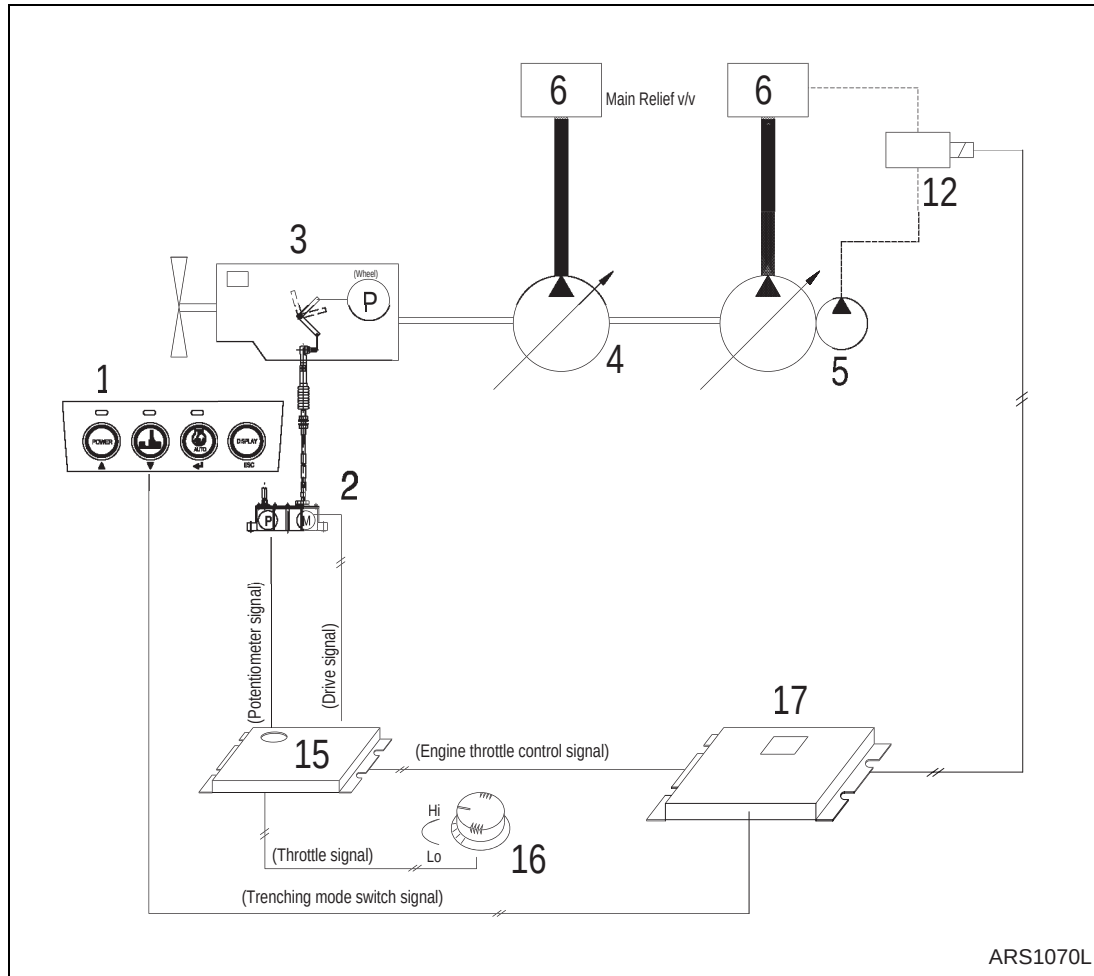


Figure 49

Reference Number	Description
1	Instrument Panel (Trenching Mode Select Switch)
2	Engine Control Motor
3	Engine
4	Main Hydraulic Pump
5	Control Pump

Reference Number	Description
6	Control Valve
12	Solenoid Valve
15	Engine Throttle Control
16	Engine Control Dial
17	e-EPOS Controller

Depending on the working condition, one of two work modes, "DIGGING" or "TRENCHING" can be selected from the instrument panel.

When the engine start switch is turned "ON," the work mode is automatically defaulted to digging mode.

Depending on the trenching mode selected, the control valve solenoid adjusts the assignment of hydraulic oil flow to each device on the equipment.

OPERATION

1. Digging Mode

This mode is used for general digging work, loading work and ground leveling work requiring quick stops. The current to the solenoid valve for swing priority is shut off.

2. Trenching Mode

This mode is used for heavy duty ditch digging work or for loading work requiring big swing angles. The voltage is assigned to the swing priority control valve activating the swing control valve restricting the flow of oil to the boom and the arm.

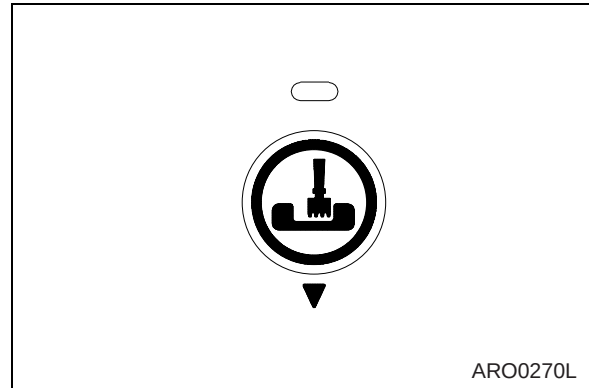


Figure 50

TRENCHING MODE CONTROL - CIRCUIT DIAGRAM

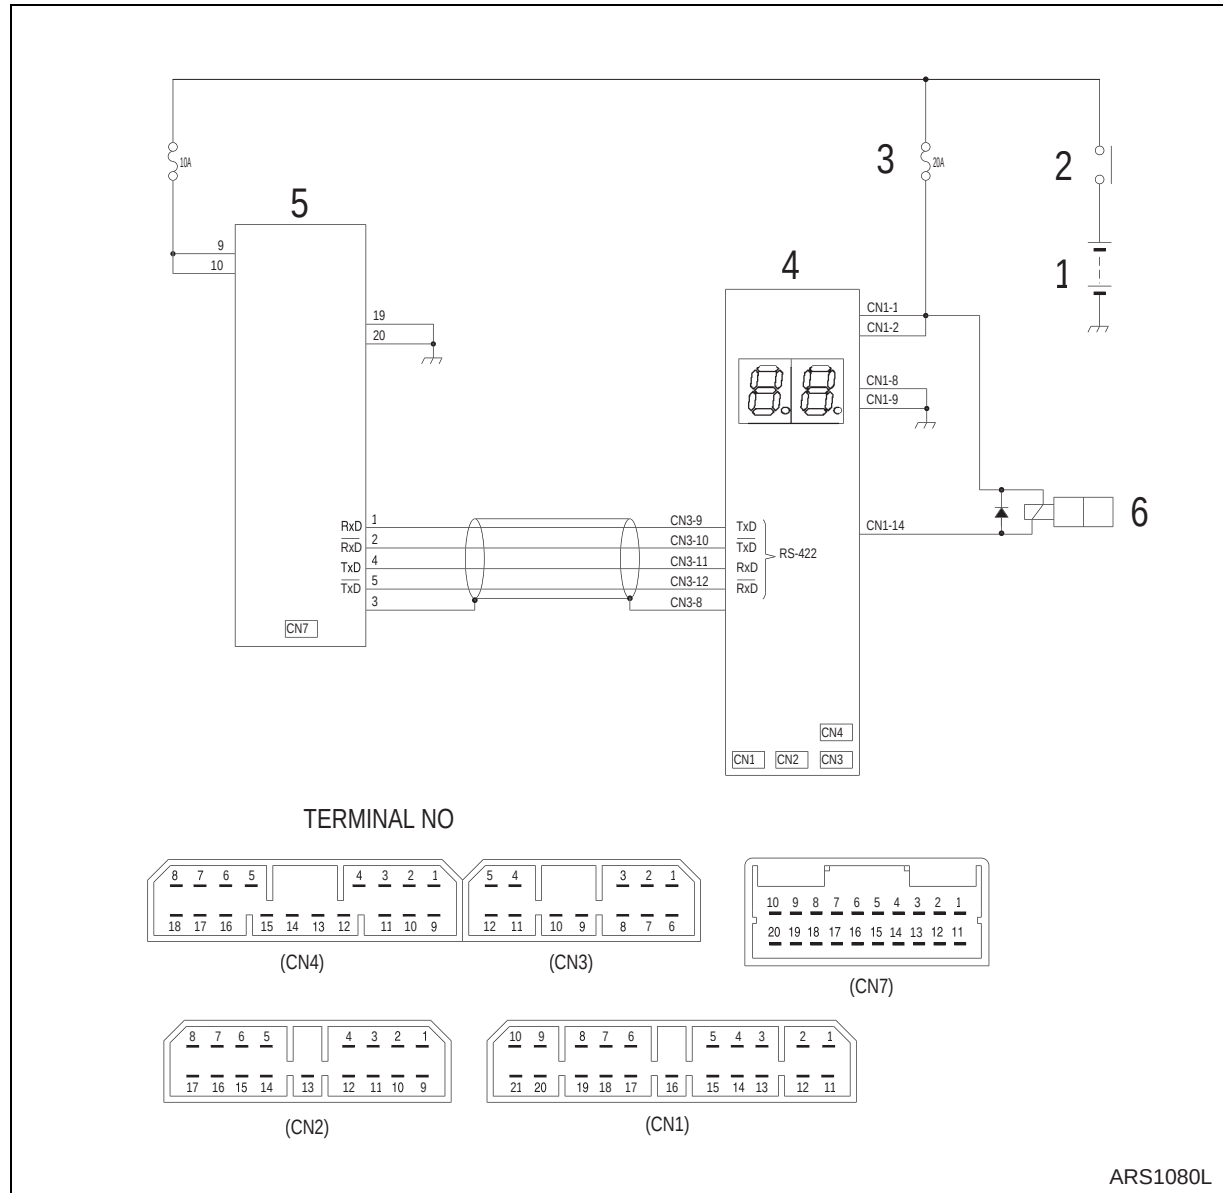


Figure 51

Reference Number	Description
1	Battery
2	Battery Relay
3	Fuse

Reference Number	Description
4	e-EPOS Controller
5	Instrument Panel
6	Solenoid Valve (Swing Priority)

ENGINE CONTROL SYSTEM

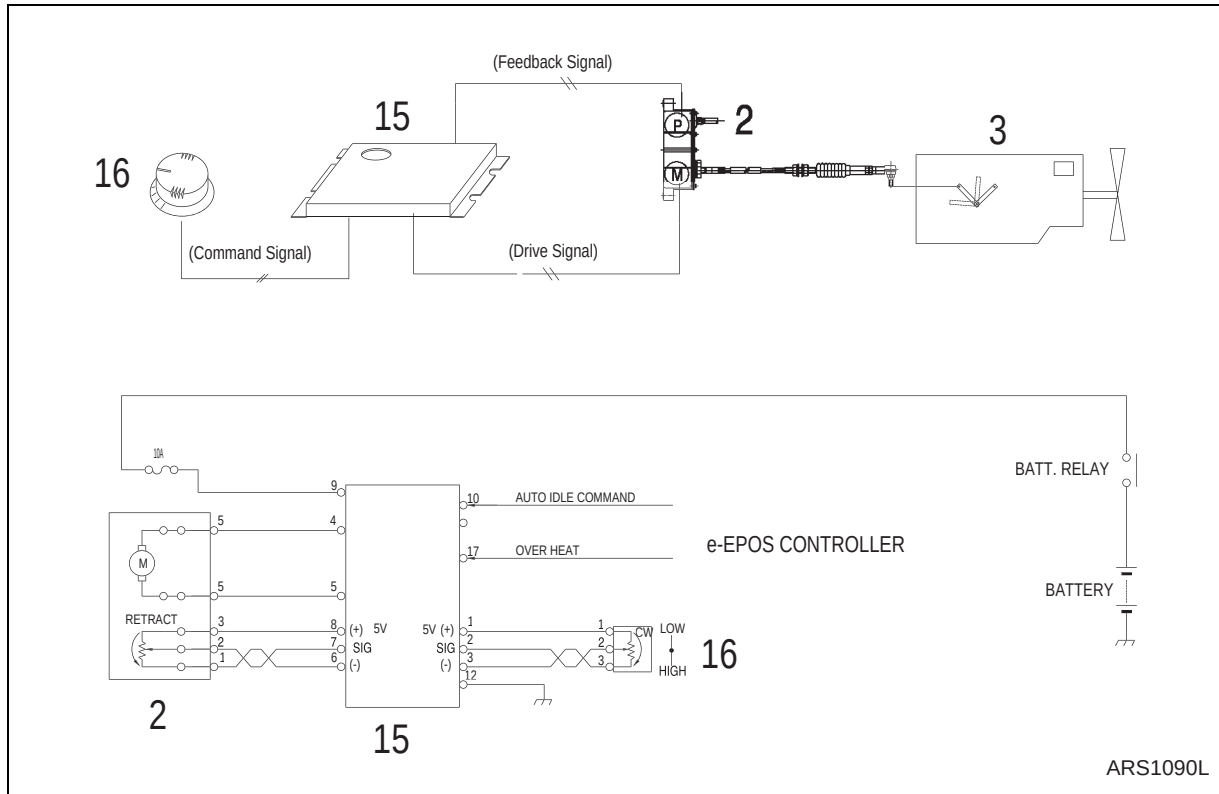


Figure 52

Reference Number	Description
2	Engine Control Motor
3	Engine

Reference Number	Description
15	Engine Throttle Controller
16	Engine Control Dial

When the engine control dial is moved the output voltage changes according to the dial position. This signal is input to the engine throttle controller. The engine throttle controller then compares the input voltage from the engine speed dial with the feedback signal from the throttle position sensor built into the engine control motor and drives the motor to the position set by the control dial. When the command signal and the potentiometer feed back signals are the same the engine controller shuts off the current to the control motor. The engine control motor cable is a solid type and is connected to the engine fuel injection control lever. The engine speed is controlled by the movement of the fuel injection lever which is directly linked with the rotation of the control motor.

ENGINE CONTROL MOTOR

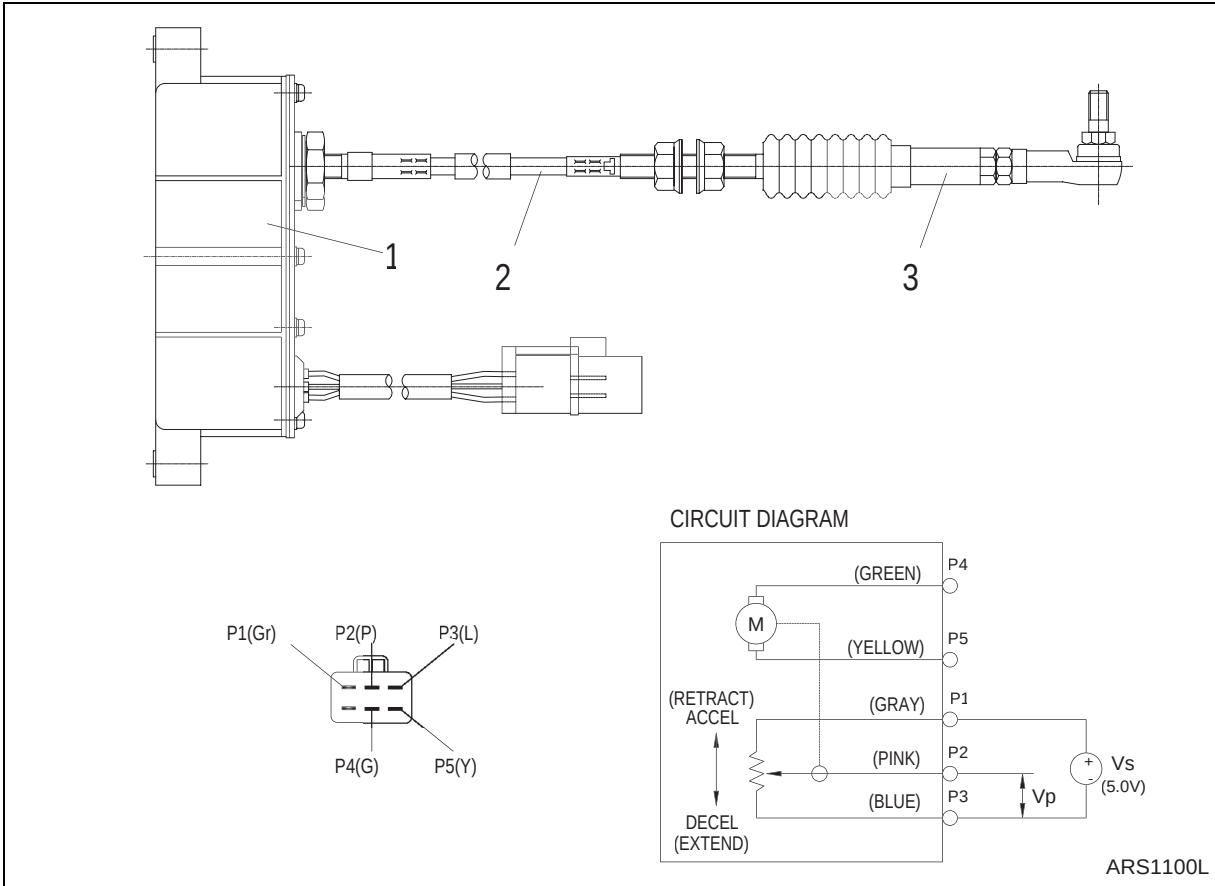


Figure 53

Reference Number	Description
1	Motor Assembly
2	Cable
3	Spring Assembly

The engine control motor uses a D.C. motor with a built in potentiometer to sense the position of the control cable. If an abnormal load (worn or kinked control cable) is sensed in the control motor, the engine controller cuts off the electric current flowing to the engine control motor to protect the system. In such a case, the engine control motor will not operate even though the engine control dial is moved.

The starter switch should be turned off and the cause of abnormal load should be repaired and the starter switch can be turned on again. The engine control dial can once again be used to control the engine speed.

IMPORTANT

When the engine control motor has been replaced or repaired refer to Adjusting the Engine Control Device for correct adjustment of the engine control system. The engine will not perform to its maximum efficiency if it is not adjusted properly.

ENGINE CONTROL DIAL

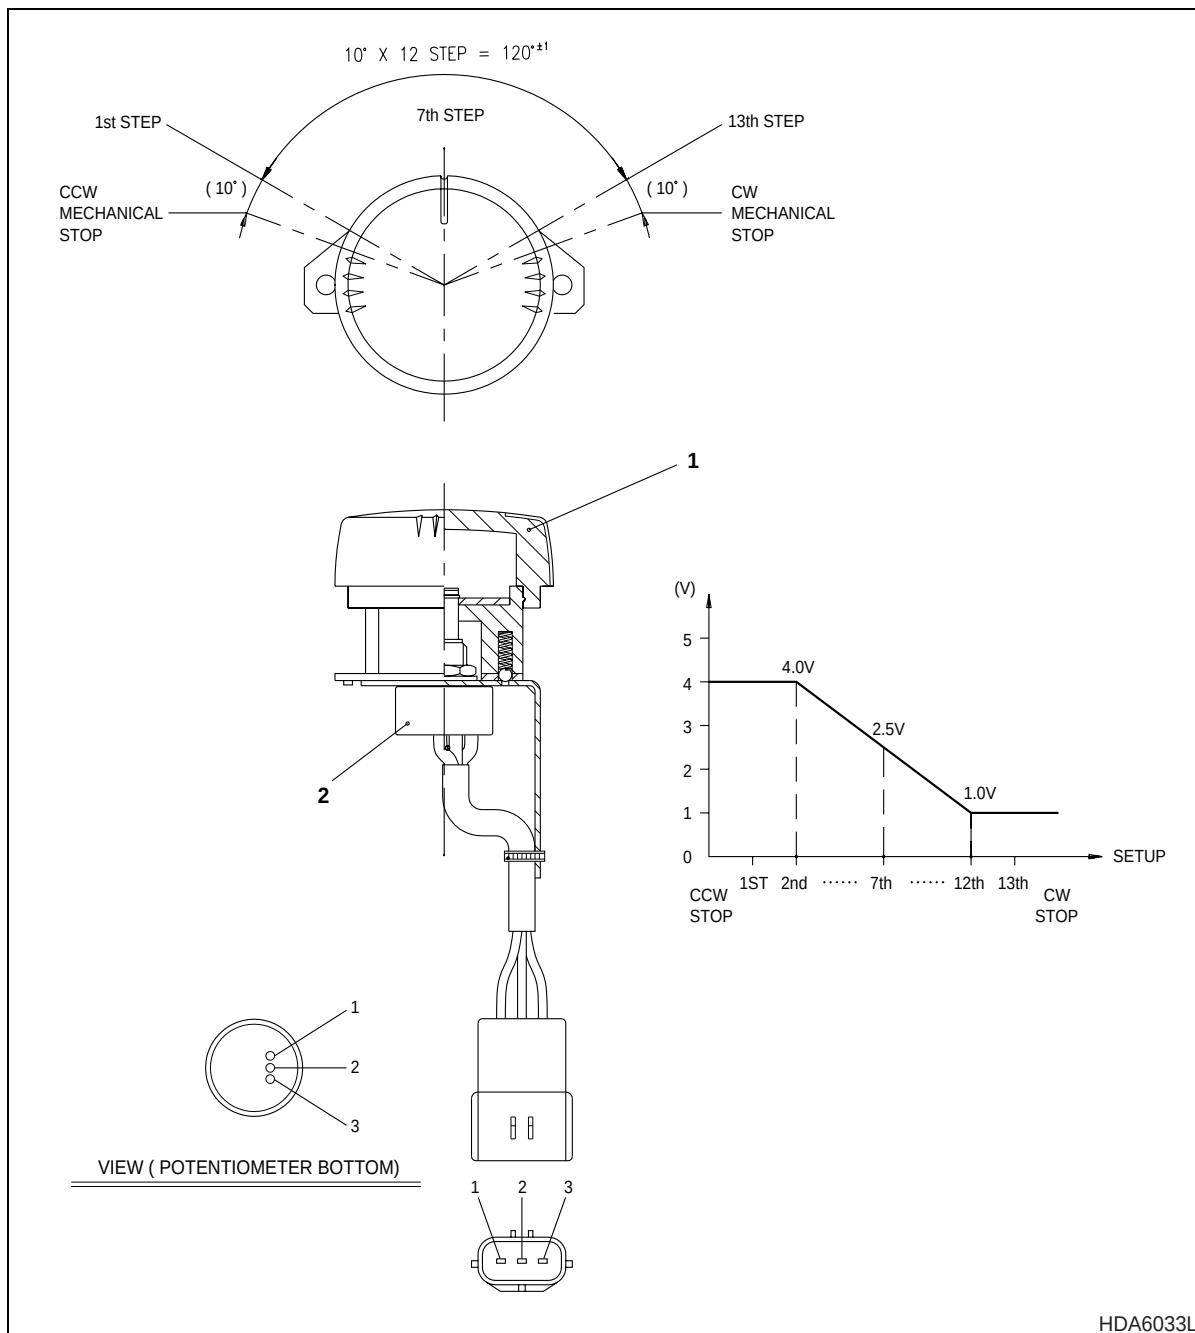


Figure 54

Reference Number	Description
1	Knob
2	Potentiometer (Variable Resistor)

The engine control dial has a built in potentiometer. When the control knob is moved the output voltage (through terminals 2 and 3) will vary from the 5 V supplied from the throttle controller as shown in the graph.

ENGINE CONTROL CIRCUIT DIAGRAM

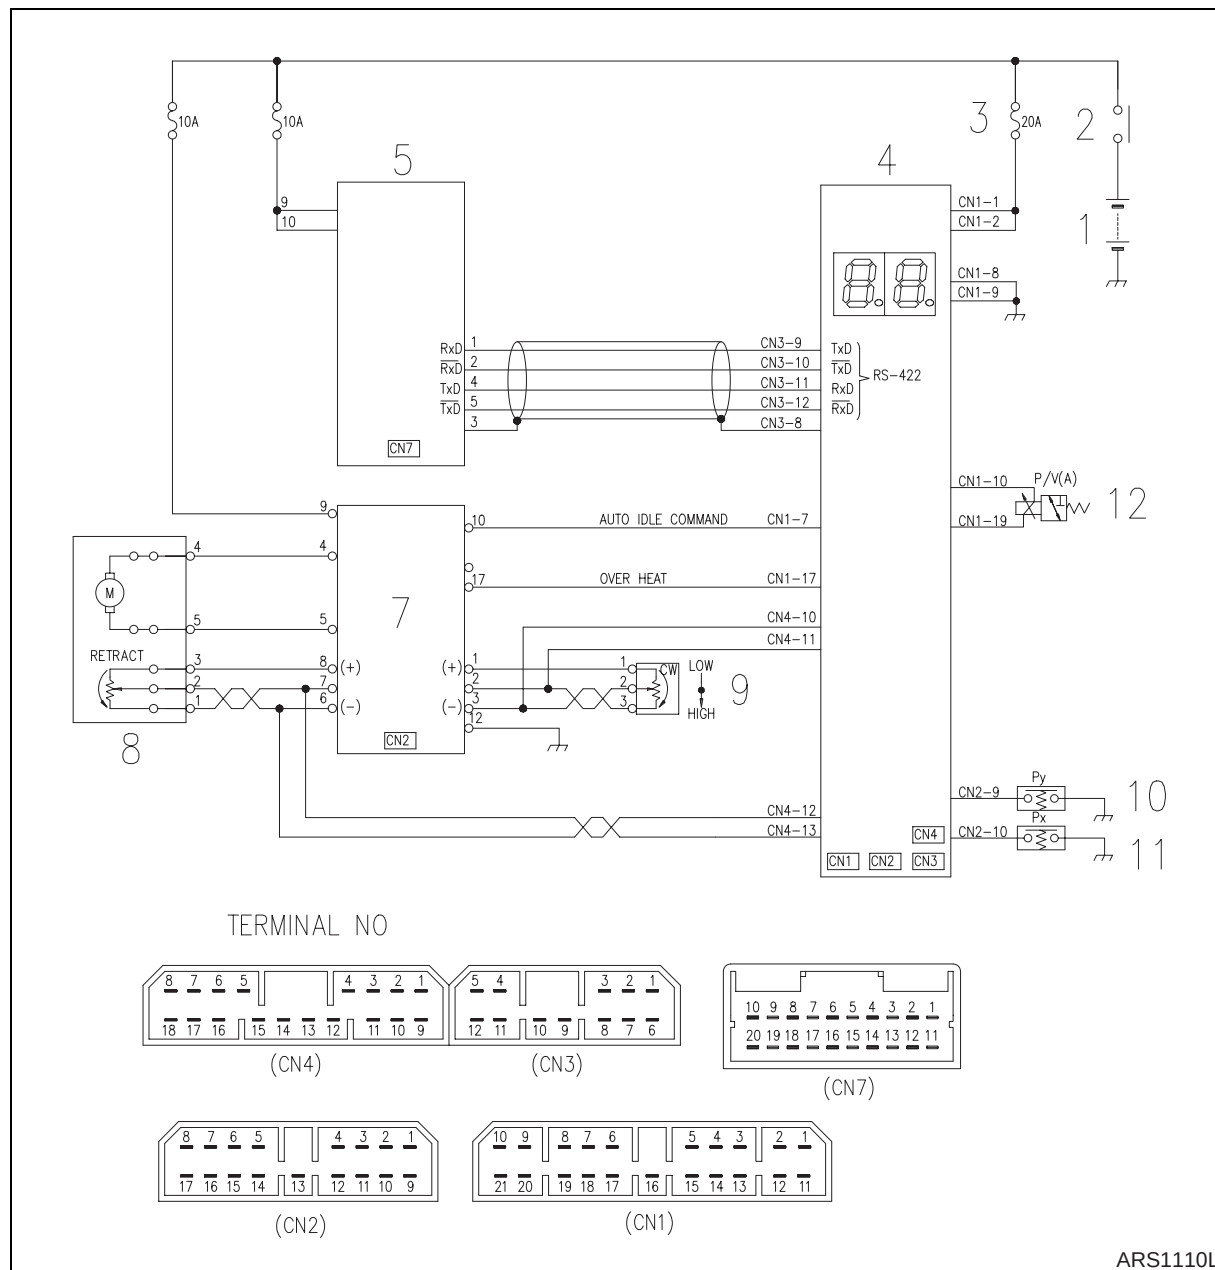


Figure 55

Reference Number	Description
1	Battery
2	Battery Relay
3	Fuse
4	e-EPOS Controller
5	Instrument Panel
6	Engine Speed Sensor

Reference Number	Description
7	Engine Throttle Controller
8	Engine Control Motor
9	Engine Control Dial
10	Pressure Switch (Py Port)
11	Pressure Switch (Px Port)

AUTOMATIC DECELERATION CONTROL (AUTO IDLE CONTROL)

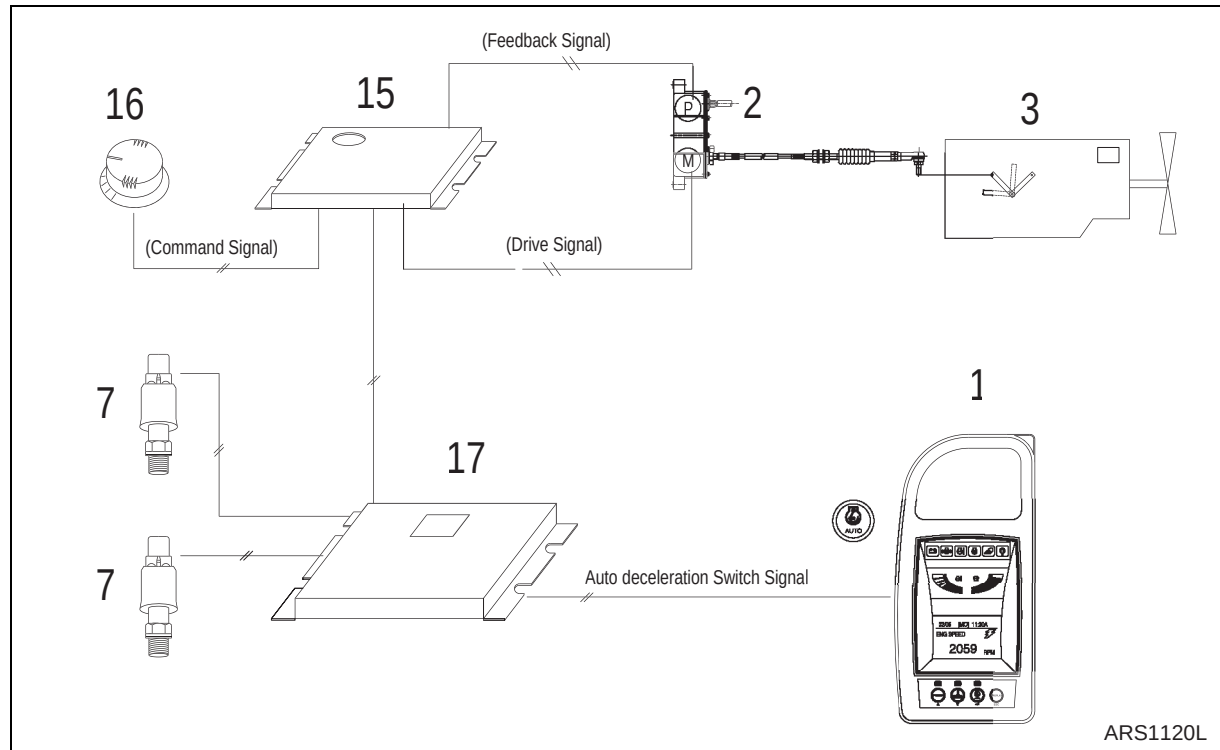


Figure 56

Reference Number	Description
1	Instrument Panel
2	Engine Control Motor
3	Engine
7	Pressure Switch

Reference Number	Description
15	Engine Throttle Controller
16	Engine Control Dial
17	e-EPOS Controller

If the machine is idling without the controls being operated or is waiting for a dump truck the engine speed is automatically lowered. Once the controls are operated and work is being started the machine will be restored to the previous settings. As a result, noise and fuel consumption will be reduced. This function can be selected or cancelled through the Auto Idle Select Switch on the instrument panel.

The initial setting at start-up is with this switch in the select position. Approximately 4 seconds after this function is selected, if all work levers are in the neutral position, the e-EPOS controller sends an automatic reduction signal to the throttle controller. When the engine throttle controller receives this signal, it is compared with the signal set by the engine control dial. The lower of the two signals is selected and the engine control motor is adjusted to this engine speed.

The neutral status of the machine is detected by the two pressure switches in the control valve. When the work levers are in the neutral position, the switch is in the off position.

ENGINE OVERHEAT PROTECTION SYSTEM

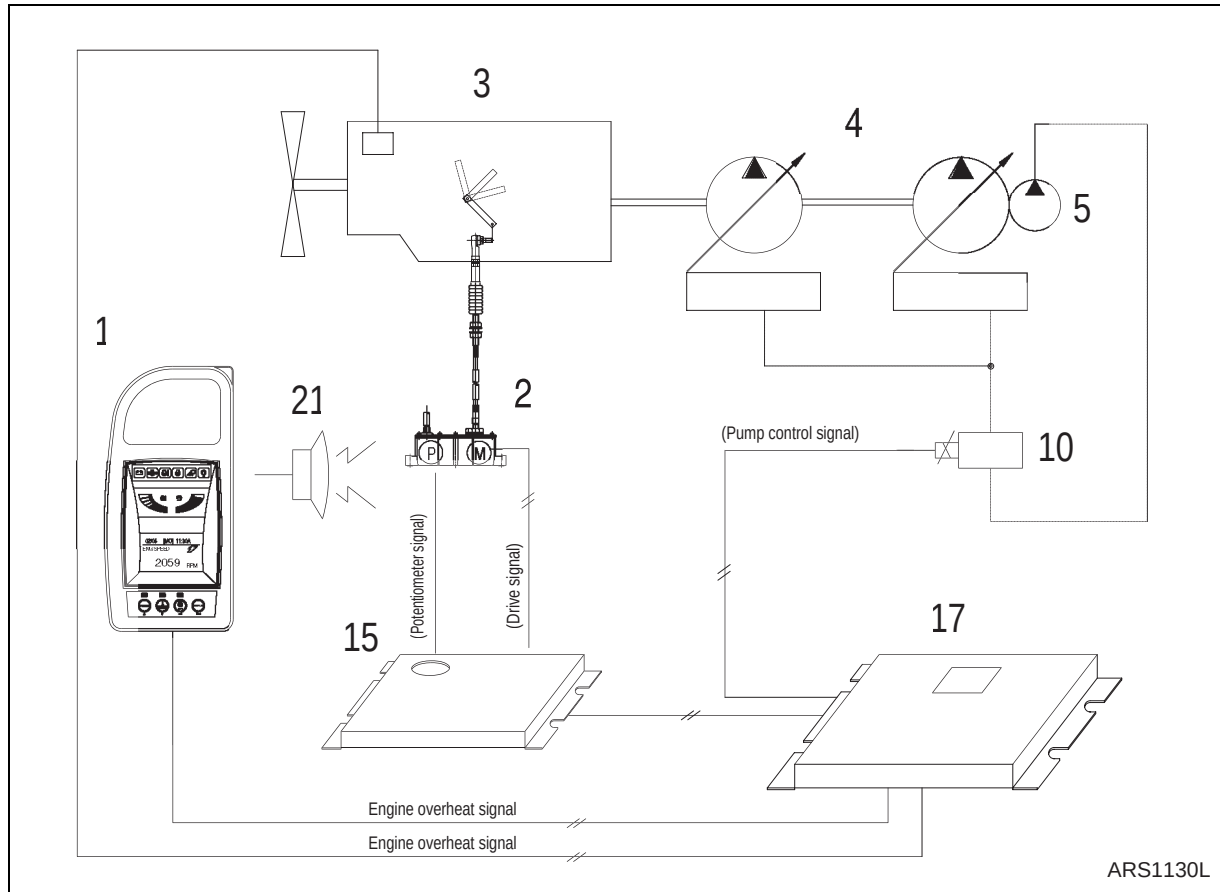


Figure 57

Reference Number	Description
1	Instrument Panel
2	Engine Control Motor
3	Engine
4	Main Pump
5	Control Pump

Reference Number	Description
10	E.P.P.R. Valve
15	Engine Throttle Controller
17	e-EPOS Controller
21	Warning Buzzer

When the engine coolant temperature increases to over 107°C (225°F), the sensor mounted in the coolant line will send a signal to the instrument panel. A overheat signal is also sent to the e-EPOS controller and the overheat warning buzzer will sound. The e-EPOS controller will send a signal to the engine throttle controller and the engine speed is adjusted to standard mode. The engine throttle controller will signal the engine control motor to decrease the engine speed.

When the coolant is overheated, the warning buzzer will sound, standard mode is selected and low engine speed will be selected.

When the coolant temperature falls below 95°C (203°F), normal operation will resume.

POWER BOOST MODE

OPERATION

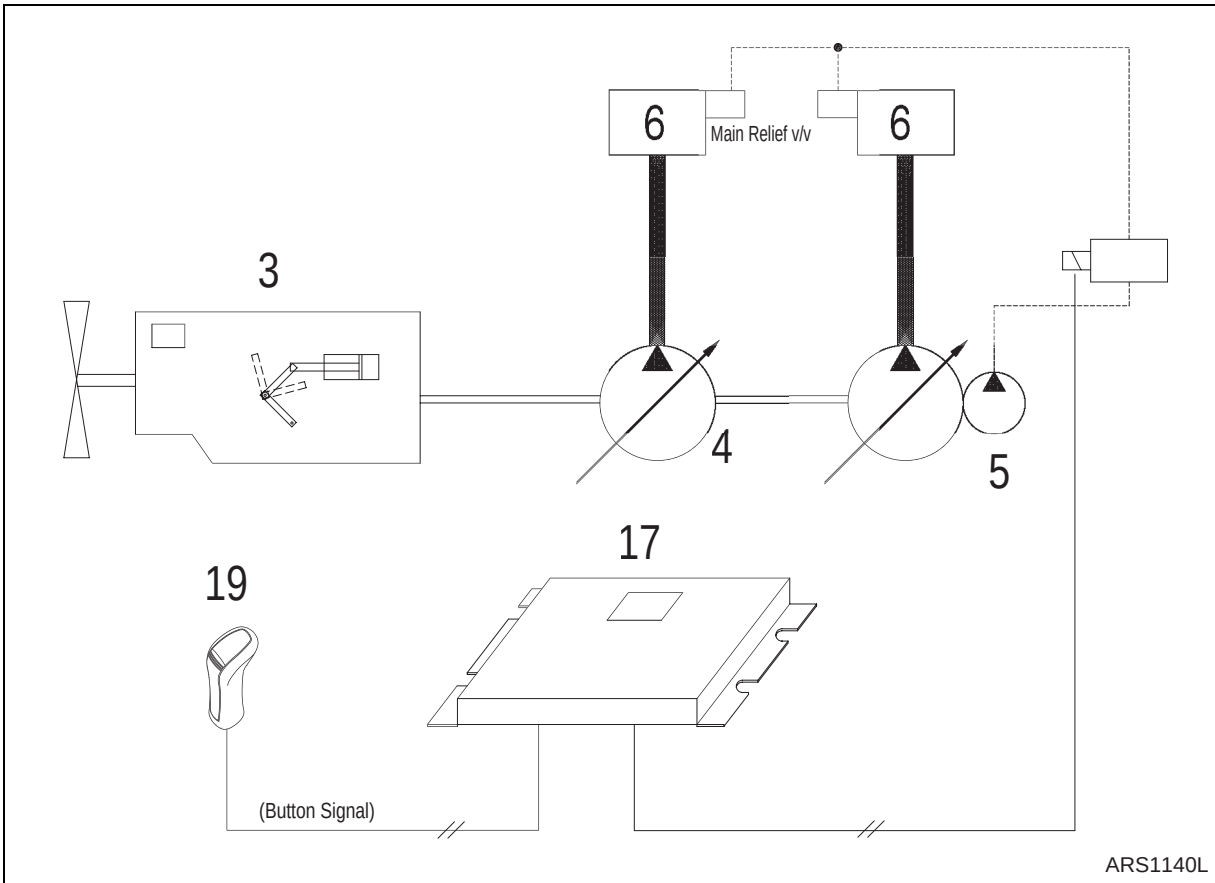


Figure 58

Reference Number	Description
3	Engine
4	Main Pump
5	Control Pump
6	Control Valve

Reference Number	Description
11	Solenoid Valve
17	e-EPOS Controller
19	Power Boost Switch (Top of Right Work Lever)

The Power Boost function is used to temporarily increase the main relief pressure to enhance excavation ability. When the switch button on top of the right work lever is pressed during work, the e-EPOS controller will activate the power boost solenoid valve and increase the relief valve pressure from 330 - 350 kg/cm² (4,700 - 5,000 psi). The excavation ability is increased by approximately 6%.

NOTE: Do not use this switch for more than 10 seconds.

POWER BOOST CONTROL - CIRCUIT DIAGRAM

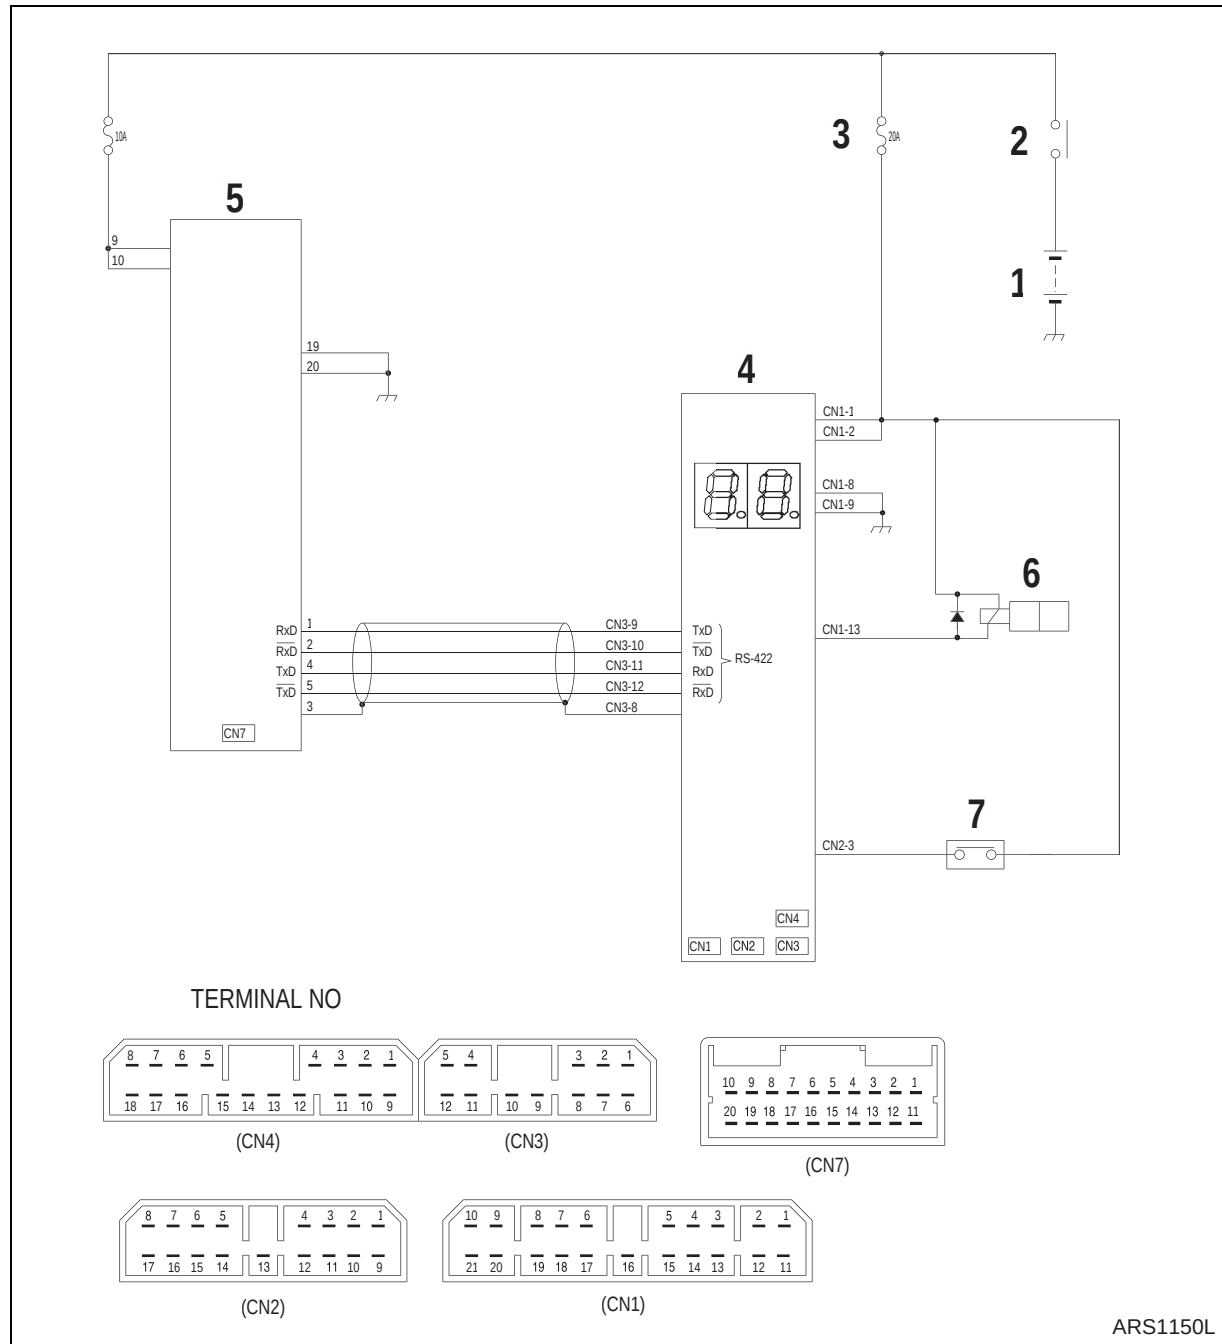


Figure 59

Reference Number	Description
1	Battery
2	Battery Relay
3	Fuse
4	e-EPOS Controller

Reference Number	Description
5	Instrument Panel
6	Solenoid Valve (Pressure Up)
7	Power Boost Switch (Top of Right Work Lever)

AUTOMATIC TRAVEL SPEED CONTROL

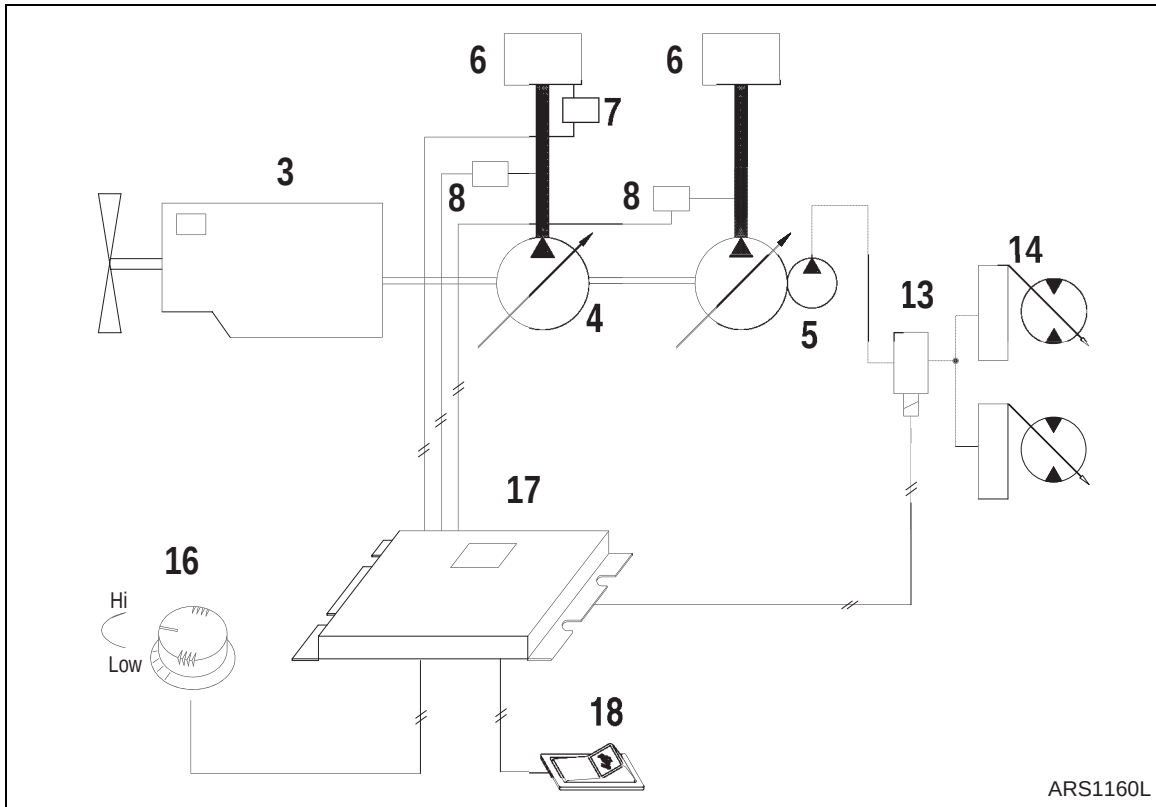


Figure 60

Reference Number	Description
3	Engine
4	Main Pump
6	Control Valve
7	Pressure Switch (Py)
8	Pump Pressure Sensor

Reference Number	Description
13	Solenoid Valve (High speed)
14	Travel Motor
16	Engine Control Dial
17	e-EPOS Controller
20	Selection Switch For Automatic Travel

If the automatic travel speed control switch is set to the "OFF" position, the travel motor will run in the I-speed (low speed) range. If the selection switch is set to the "I" position, the travel motor will run in the II-speed (high speed) range. If the selection switch is set to the "II" position, the e-EPOS controller will monitor the main pump discharge pressure and automatically select the "ON" - "OFF" status of the II - speed travel solenoid valve based on the travel load. The travel speed is changed between the I-speed and the II-speed mode.

The travel load is monitored by the two pressure sensors in the discharge lines of the front (upper) and rear (lower) pumps. When the travel load is high (pressure over 300 kg/cm² (4,300 psi) the solenoid valve is turned "OFF" and I-speed (low) is selected. In the case when the travel load is low (pressure under 160 kg/cm² (2,280 psi), the solenoid valve will be turned "ON" and the II-speed will be selected. But, if the engine speed control switch dial is set below approximately 1400 rpm, the travel speed will be set to I-speed mode.

AUTOMATIC TRAVEL SPEED CONTROL - CIRCUIT DIAGRAM

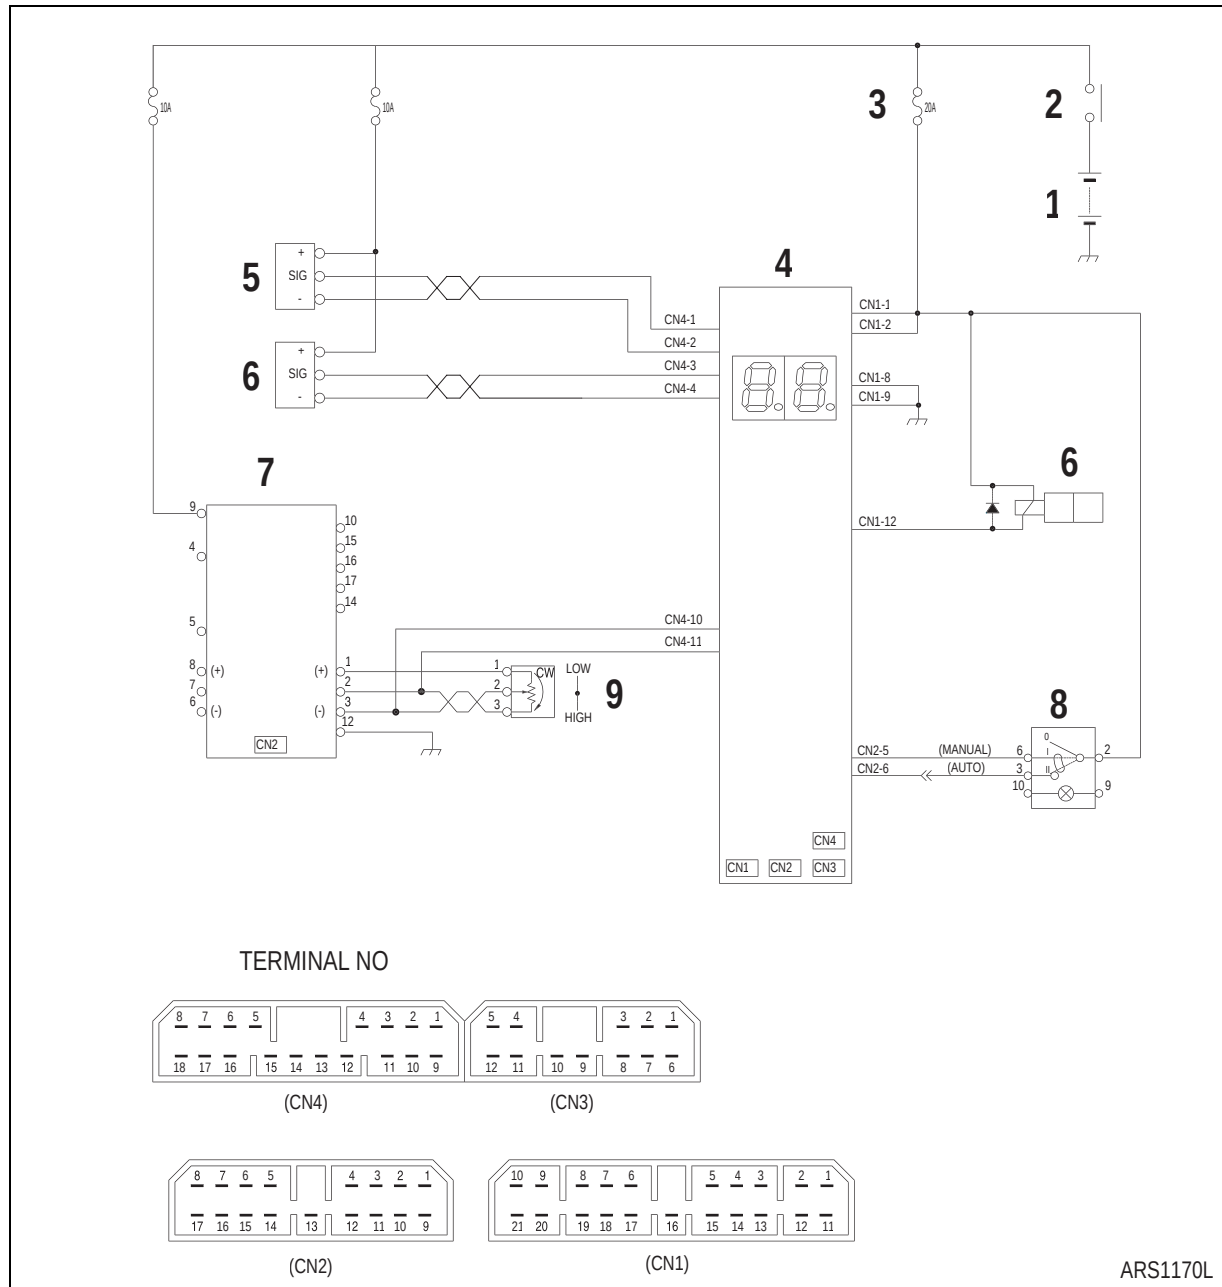


Figure 61

Reference Number	Description
1	Battery
2	Battery Relay
3	Fuse
4	e-EPOS Controller
5	Pressure Sensor (Front Pump)

Reference Number	Description
6	Pressure Sensor (Rear Pump)
7	Engine Throttle Controller
8	Automatic Travel Select Switch
9	Engine Control Dial
10	Solenoid Valve (High Speed)

ENGINE CONTROL DEVICE - ADJUSTMENT

Engine speed adjustment should be made by following the procedures listed below. (Under no load conditions)

1. Adjusting The High Idle Speed

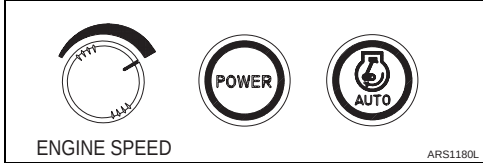
1. Turn the starter switch to the "ON" position. Select Power Mode from the instrument panel. Turn the engine speed control dial to the "HIGH IDLE" position to reduce the (3) motor cable to the shortest length.
2. Adjust the (3) motor cable linked with the (2) bracket so that the engine governor lever touches the maximum position of the stopper.

2. Adjusting The Low Idle Speed

1. Turn the engine speed control dial to the "LOW IDLE" position so that the (3) motor cable is extended to the maximum length. (The maximum stroke range for the lever and cable is 37.0 mm (1.46 in).)
2. Check that the engine governor is at the minimum stopper position and the cable slack is acceptable.
3.
 - A. If the lever is not in the minimum position and touching the stopper, move the (3) cable to one hole lower on the lever. If the cable slack is excessive, move the (3) cable to one hole above the original hole on the lever. Repeat above steps 1 and 2.
 - B. Shorten the (3) motor cable 1 - 1.25 mm (0.0394 - 0.0591 in) by turning the cable adjustment nut for motor cable (3), 2/3 - 1 turn in the high idle position.

3. Adjusting The Automatic Deceleration System and Power Mode (First perform Adjustments 1 and 2 before performing this adjustment.)

1. Automatic Deceleration (Auto Idle)
 - A. Turn engine speed control dial to "HIGH IDLE" position.
 - B. Turn power mode and auto idle buttons to "ON" position.
 - C. Adjust engine speed by slowly turning variable resistor screw "VR1." (See Figure 64.)
2. Standard Mode
 - A. Turn engine speed control dial to "HIGH IDLE" position.
 - B. Turn power mode and auto idle buttons to "OFF" position.
 - C. Adjust engine speed by slowly turning variable resistor screw "VR2." (See Figure 64.)

Mode	Variable Resistor	Dial Position and Mode Setting	Engine Speed Setting
Automatic Deceleration (Auto Idle)	VR1		Refer to throttle controller name plate (3, Figure 64).
Standard Mode	VR2		Refer to throttle controller name plate (3, Figure 64).

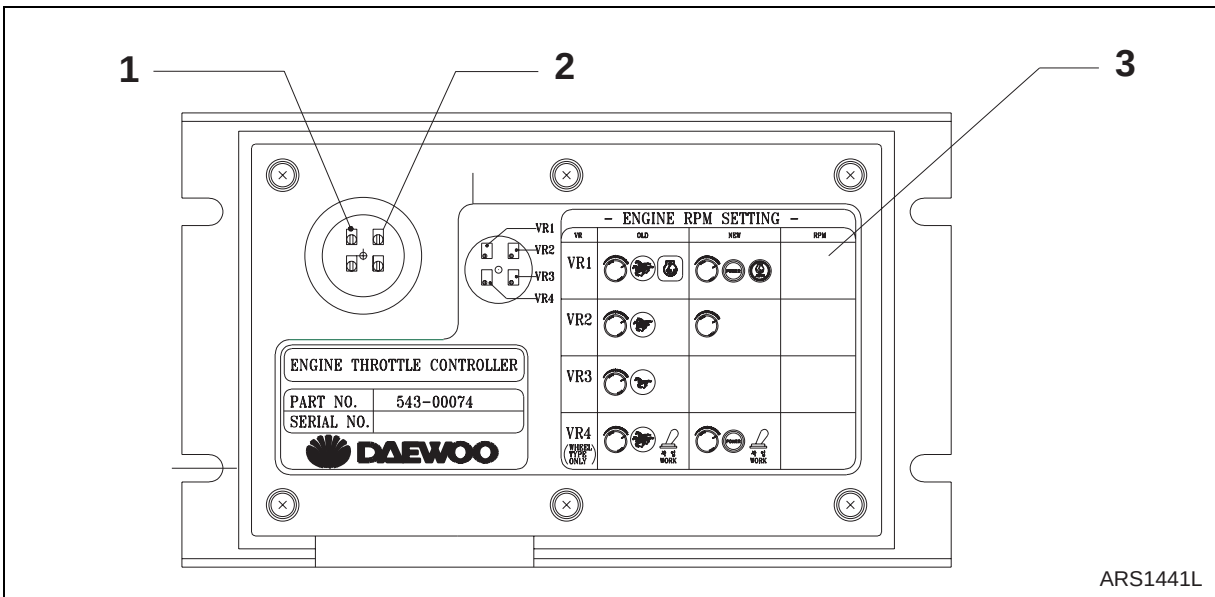


Figure 64

Reference Number	Description
1	VR1 (Automatic Deceleration Adjusting Variable Resistor)
2	VR2 (Stand Mode Adjusting Variable Resistor)
3	Name Plate

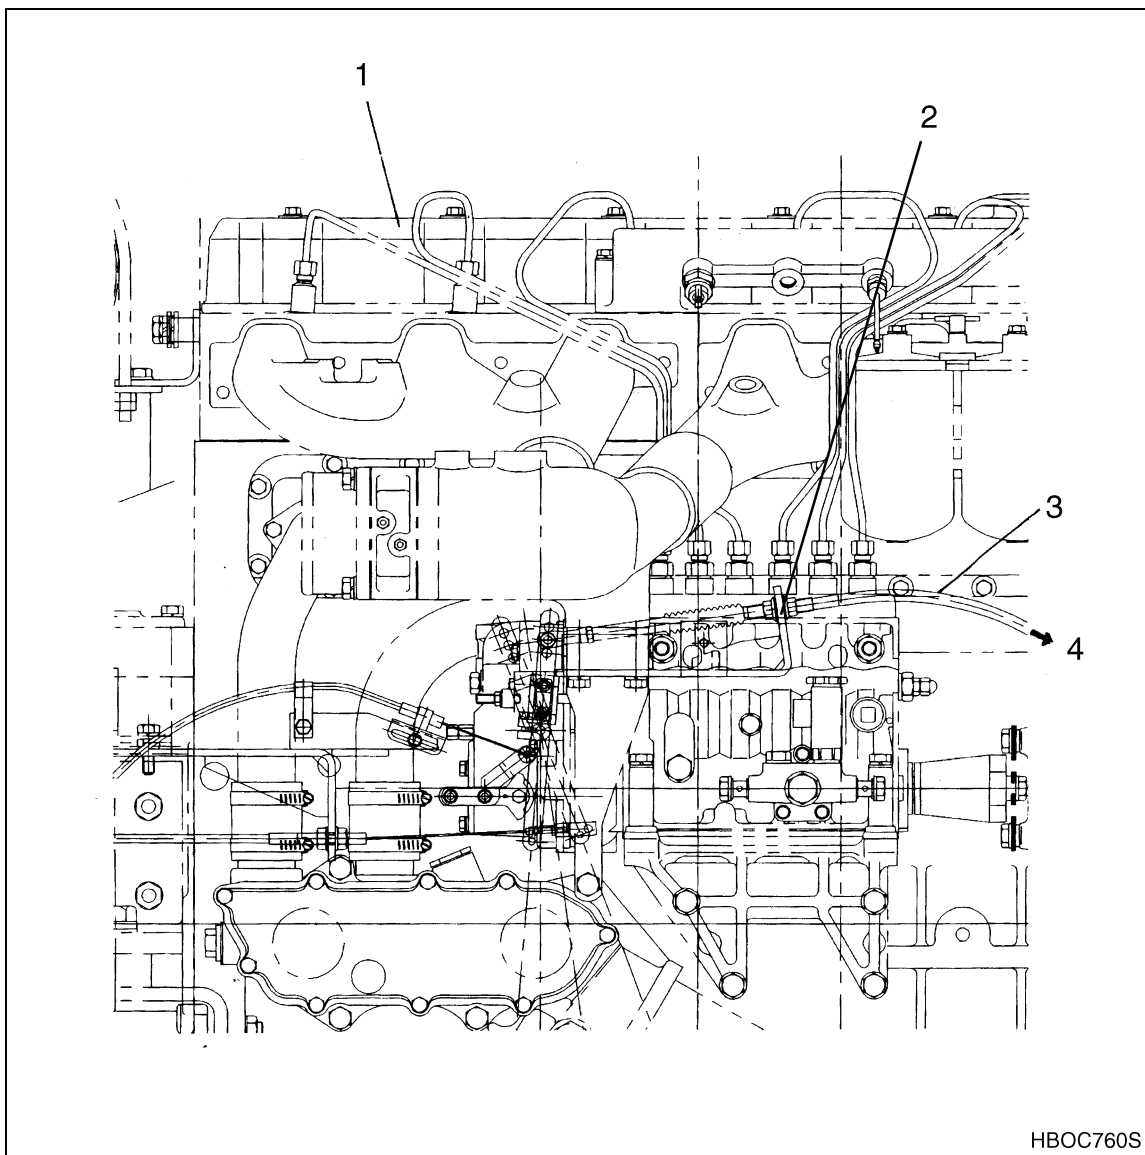


Figure 65

Reference Number	Description
1	Engine - Fuel Control Lever Area
2	Control Motor Cable Bracket

Reference Number	Description
3	Engine Speed Control Cable
4	To Engine Control Motor

SELF-DIAGNOSTIC FUNCTION

E-EPOS CONTROLLER

The system operation status and malfunction codes can be checked through the display on top of the e-EPOS controller box in the drawer under the operator's seat.

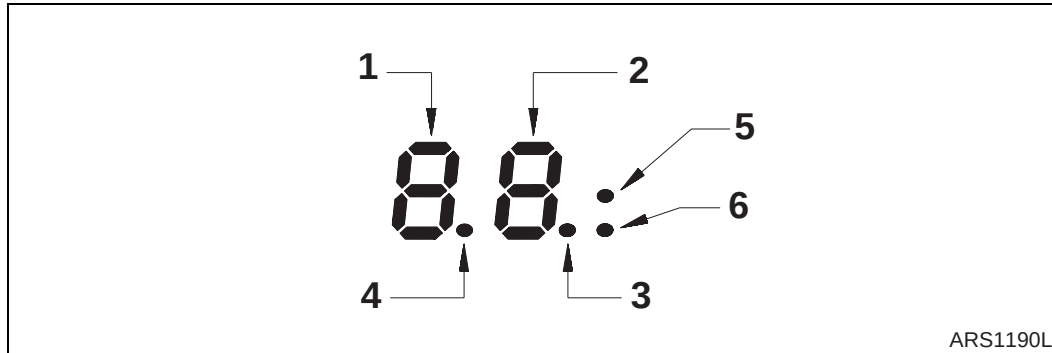


Figure 66

Reference Number	Description
1	Upper Digit
2	Lower Digit
3	Engine Speed Monitor LED (Flash Interval Increases With Engine Speed.)

Reference Number	Description
4	Power Monitor (Stays On While Power Is In Normal Range,)
5	Communication Monitor LED (Flash when normal condition)
6	

1. Power Monitor

This LED is turned off when the input voltage to the e-EPOS controller is below 18.5 ± 1 V or above 32.5 ± 1 V. Stays on while in normal range.

2. Engine Speed Monitor

This LED light flashes according to the engine speed. The flashing interval is proportional to the engine speed.

3. Communication Monitor

These LED lamps flash when normal state of communication between main controller and instrument panel.

4. Normal Operation Display Readout

Mode Selection		Display Readout		Operation Status
		Upper Digit	Lower Digit	
Power Mode	Power Mode	9 HAOH340L		Normal Operation Power Mode
	Standard Mode	7 HAOH350L		Normal Operation Standard Mode
Work Mode	Digging		0 HAOH370L	Normal Operation Digging Mode
	Trenching		2 HAOH380L	Normal Operation Trenching Mode

5. Malfunction Display and Reset Procedure

The malfunction codes displayed on the top of the e-EPOS controller and reset procedure are the same with failure information codes a part of failure information.

Refer to the failure information part of letter information display for details.

ENGINE THROTTLE CONTROLLER

Under the rubber cap on the surface of the engine controller, there are three LEDs. Based on the equipment status the following LEDs will turn "ON."

Throttle Controller Input Signal	Status	LED Status			Voltage At Control Motor Terminal
		Red	Green	Yellow	
Dial Voltage < Motor Potentiometer Voltage	While Control Motor Is Operating (Increasing rpm)	X	Δ	O	Approximately +24 V
Dial Voltage > Motor Potentiometer Voltage	While Control Motor Is Operating (Decreasing rpm)	Δ	X	O	Approximately - 24 V
Dial Voltage = Motor Potentiometer Voltage	Control Motor Stopped	O	O	O	0 V
	Motor Overload (Cut Off Motor Current)	X	X	O	0 V
	Abnormal Controller Power Voltage (Low Or No Input)	X	X	X	0 V

Δ	O	X
Brightly Lit	ON	OFF

- NOTE:**
1. Control Motor Voltage is Measured at throttle controller 4 (+) and 5 (-) terminals.
 2. Yellow LED indicates power status (ON, OFF).
 3. To protect the control motor from overloads, the control motor automatically cuts off supply voltage to the motor when there is a heavy load on the motor and the possibility of motor damage or burn out exists.
 4. After the malfunction is corrected, turn the starter switch from "OFF" to the "ON" position and normal operation will resume.

WIPER SYSTEM

WIPER CIRCUIT

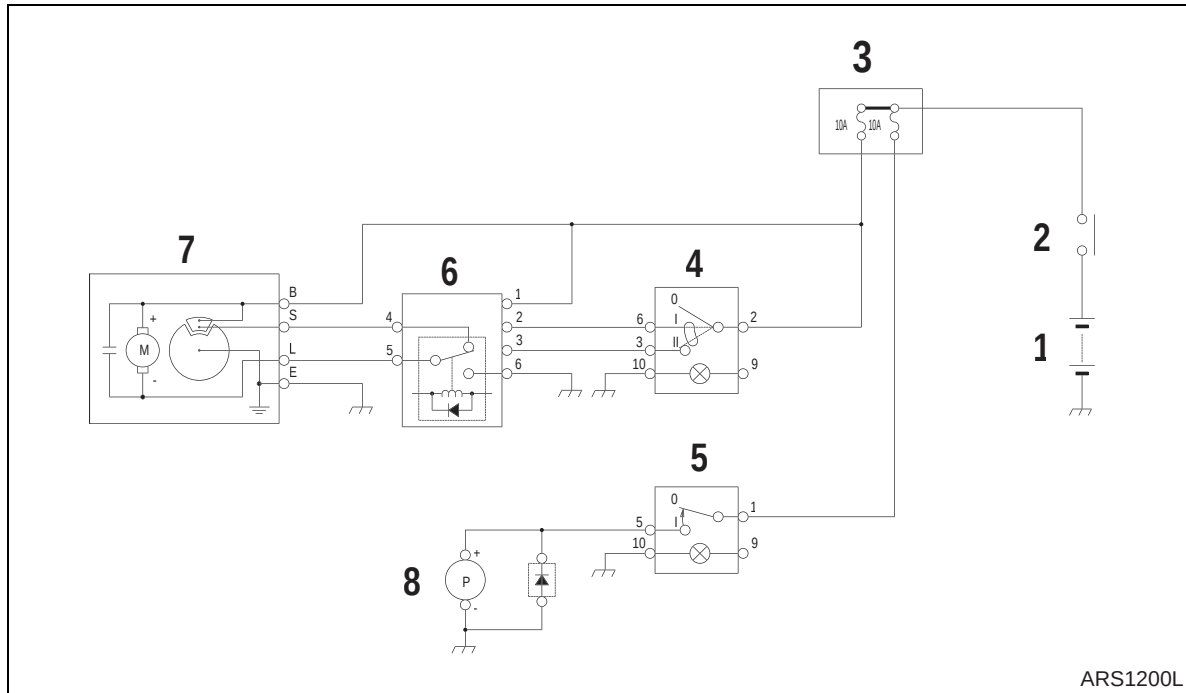


Figure 67

Reference Number	Description
1	Battery
2	Battery Relay
3	Fuse
4	Wiper Switch

Reference Number	Description
5	Washer Switch
6	Wiper Timer
7	Wiper Motor
8	Window Washer

WIPER OPERATION

Intermittent Operation (I - position)

When the wiper switch (4) is turned "I" position, the current flows from the fuse (3) → "B" terminal of wiper motor (7) → "L" terminal of wiper motor (7) → "5" terminal of wiper timer (6) → "6" terminal of wiper timer (6) → ground and the wiper motor operates intermittently by the timer built in wiper timer. (On: approximately 1 second, Off: approximately 5 seconds)

Continuous Operation (II - Position)

When the wiper switch (4) is turned "II" position, the current flows from the fuse (3) → "B" terminal of wiper motor (7) → "L" terminal of wiper motor (7) → No. 5 terminal of wiper timer (6) → No. 6 terminal of wiper timer (6) → ground and the contact points No. 5 and No. 6 of wiper timer (6) are connected continuously, the wiper motor operates continuously.

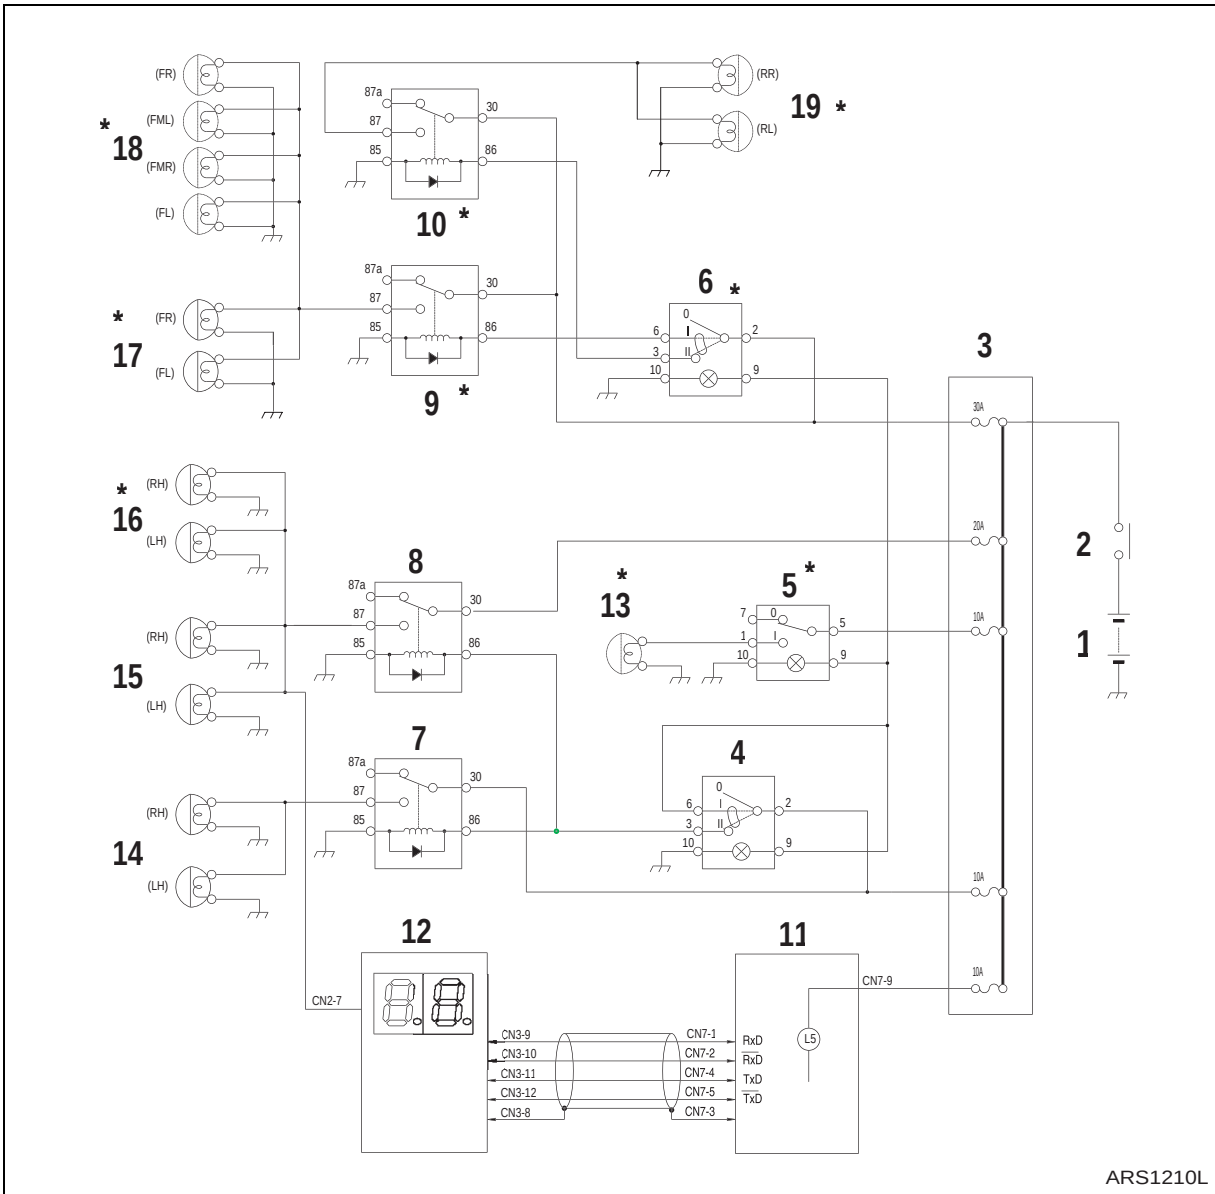
When the wiper switch (4) is turned "OFF," the current flows from the fuse (3) → "B" terminal of wiper motor (7) → "L" terminal of wiper motor (7) → No. 5 terminal of wiper timer (6) → No. 4 terminal of wiper timer (6) → "S" terminal of wiper motor (7) → "B" terminal of wiper motor (7) and the wiper motor is stopped at the auto stop position.

WINDOW WASHER OPERATION

When the window washer switch is turned "ON," the current flows from the fuse (3) → No. 1 terminal of washer switch (5) → No. 5 terminal of washer switch (5) → "+" terminal of window washer (8) → ground and windshield washer fluid is sprayed.

LIGHTING SYSTEM

LIGHTING SYSTEM CIRCUIT DIAGRAM



ARS1210L

Figure 68

Reference Number	Description
1	Battery
2	Battery Relay
3	Fuse Box
4	Light Switch
*5	Warning Light Switch
6	Cabin Light Switch
7	Headlight Relay (Work Light Indicate Light)
8	Work Light Relay
*9	Front Cabin Light Relay

Reference Number	Description
*10	Rear Cabin Light Relay
11	Instrument Panel
12	e-EPOS Controller
*13	Rotating Warning Light
14	Headlight (2 ea.)
15	Work Light (2 ea.)
*16	Additional Work Light (2 ea.)
*17	Front Cabin Light (2 ea.)
*18	Front Cabin Light (4 ea.)
*19	Rear Cabin Light (2 ea.)

NOTE: The "*" mark (5, 9, 10, 13, 16, 17, 18, 19) are optional parts.

KIND OF LIGHT

The lighting system is consists of headlights, work lights, cabin lights (optional), rotating warning light (optional), relays and switches.

OPERATION

Switch	Position	Connected Terminal of switch	Activated Relay	Lit Light
Light Switch	1	2-6 Terminal	-	Illumination Light of Switch
	2	2-6 Terminal	-	Illumination Light of Switch
		2-3 Terminal	Headlight Relay	Headlight (2 Ea.)
			Work Relay	Work Light (2 Ea.), Additional Work Light (2 Ea.) Indicator Light of Work Light (L5)
Cabin Light Switch	1	2-6 Terminal	Front Cabin Light Relay	Front Cabin Light (2 Ea.) or Front Cabin Light (4 Ea.)
	2	2-6 Terminal	Front Cabin Light Relay	Front Cabin Light (2 Ea.) or Front Cabin Light (4 Ea.)
		2-3 Terminal	Rear Cabin Light Relay	Rear Cabin Light (2 Ea.)
Warning Light Switch	-	5-1 Terminal	-	Rotating Warning Light

OVERLOAD WARNING DEVICE

OVERLOAD WARNING DEVICE CIRCUIT DIAGRAM

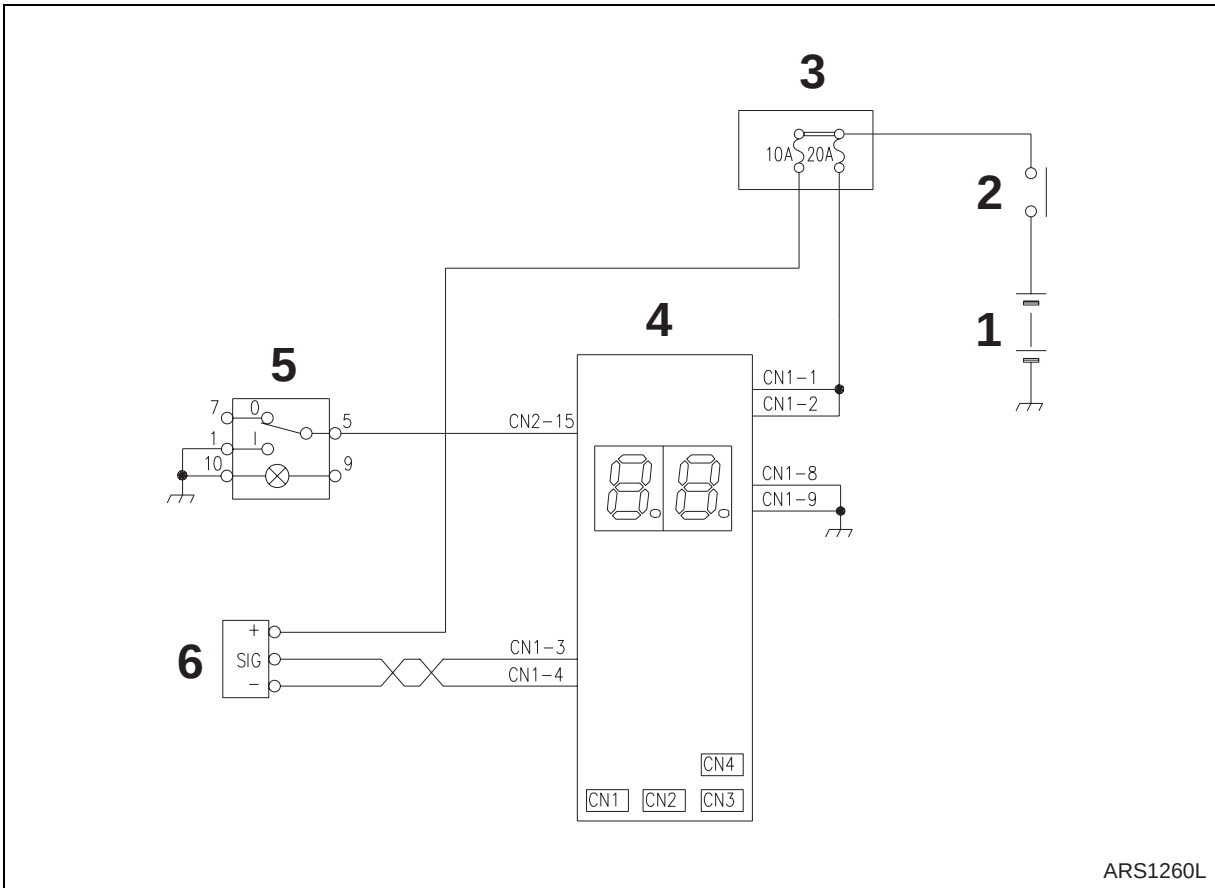


Figure 69

Reference Number	Description
1	Battery
2	Battery Relay
3	Fuse Box

Reference Number	Description
4	e-EPOS Controller
5	OWD Select Switch
6	Pressure Sensor



ELECTRICAL SCHEMATIC (S300LC-V)



CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that is in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

MODEL	SERIAL NUMBER RANGE
Solar 300LC-V	0001 and Up

TABLE OF CONTENTS

General Description.....	3
Solar 300LC-V	4

GENERAL DESCRIPTION

Schematic(s) presented in this section are laid out on facing pages.

An overlapping edge has been taken into consideration so that a photocopy can be made and pasted together to make a complete schematic.

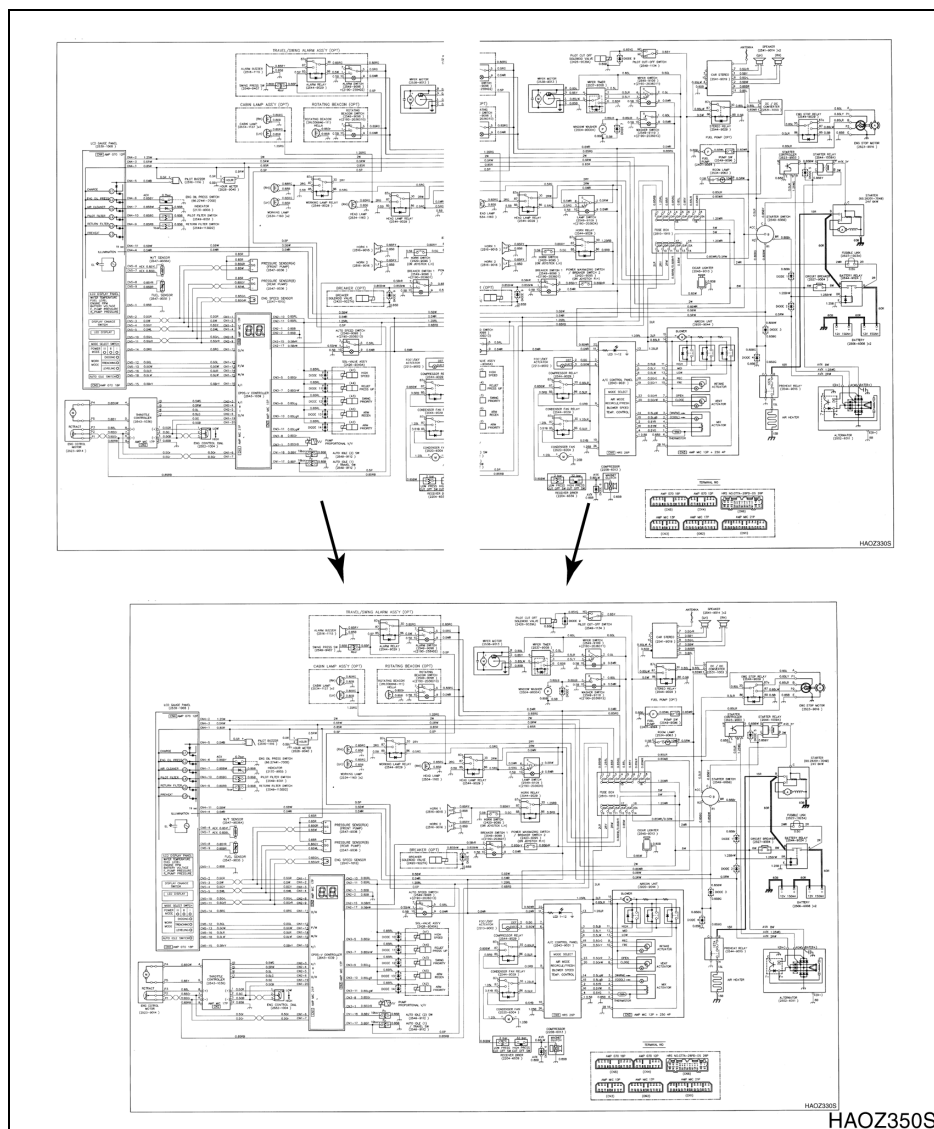


Figure 1

SOLAR 300LC-V

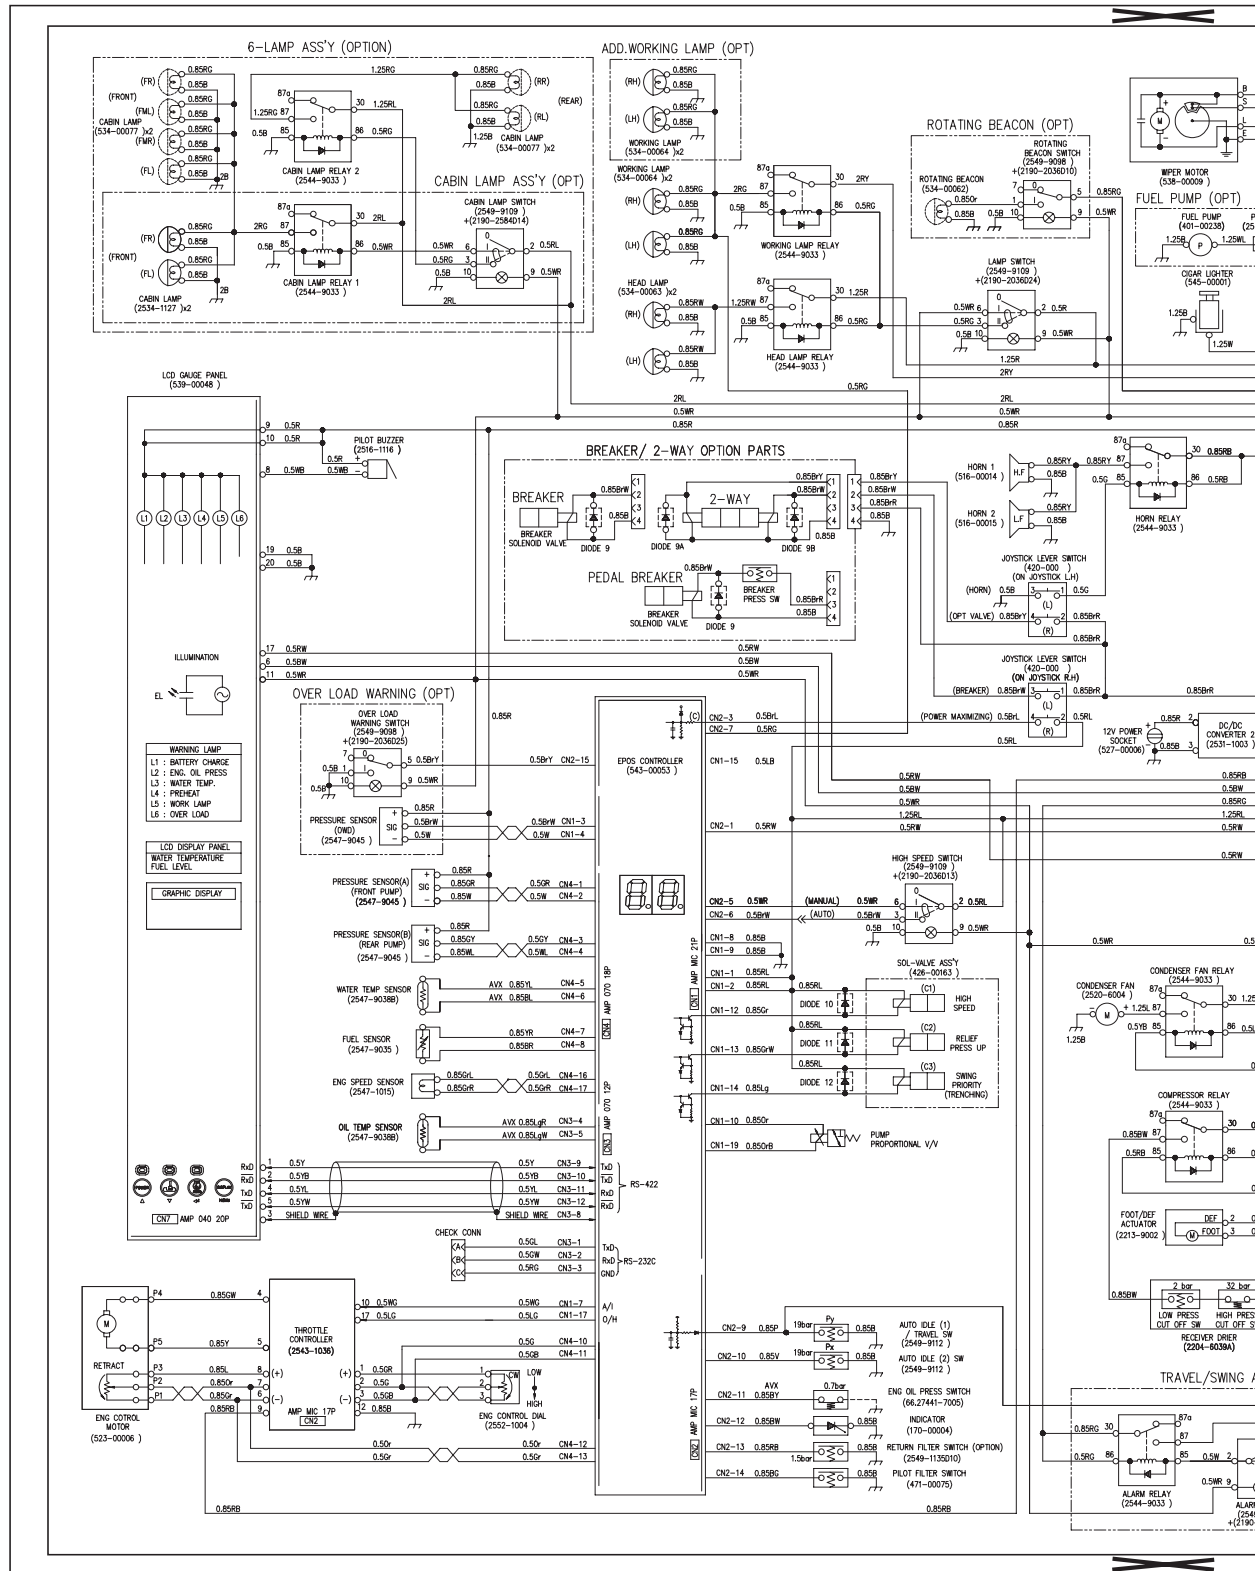


Figure 2

ATTACHMENTS



BOOM AND ARM



CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that is in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

MODEL	SERIAL NUMBER RANGE
Solar 290LC-V	0001 and Up
Solar 300LC-V	1001 and Up

TABLE OF CONTENTS

Front Attachment Pin Specifications.....	3
Front Attachment - Removal and Installation	4
Arm Removal Procedure.....	4
Boom Removal Procedure	6
Installation	7
Arm Installation Procedure.....	7
Boom Installation Procedure	7
Start-up Procedures	8

FRONT ATTACHMENT PIN SPECIFICATIONS

The table below has a complete listing of dimensional specifications for all mounting pins used on the front attachment.

NOTE: Some mounting pins must be drilled and tapped for lubrication fittings and piping, or may have other required specifications. Consult Daewoo After Sales Service for information on wear tolerances and replacement limits for mounting pins.

Mounting Pin	Diameter, mm (Inches)	Length, mm (Inches)
A	105 mm (4.134")	1001 mm (39.409")
B	90 mm (3.543")	890 mm (35.039")
C	90 mm (3.543")	266 mm (10.472")
D	100 mm (3.937")	636 mm (25.039")
E	90 mm (3.543")	266 mm (10.472")
F	90 mm (3.543")	244 mm (9.606")
G	80 mm (3.150")	512 mm (20.157")
H	90 mm (3.543")	512 mm (20.157")
I	90 mm (3.543")	593 mm (23.346")
J	90 mm (3.543")	593 mm (23.346")
K	90 mm (3.543")	244 mm (9.606")

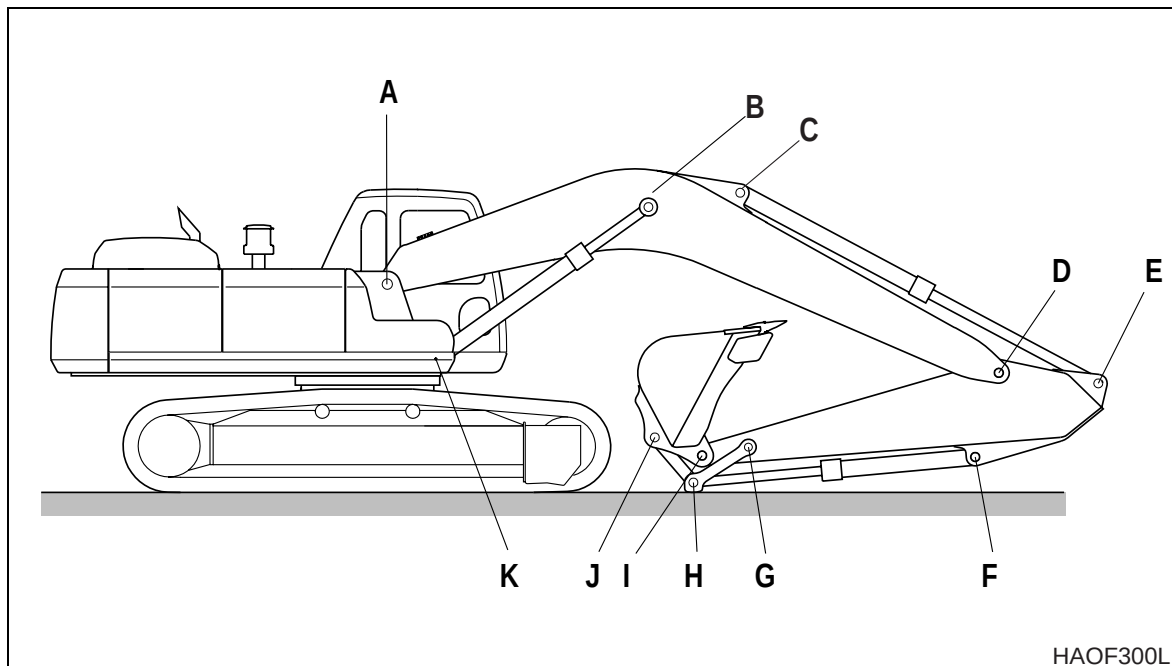


Figure 1

FRONT ATTACHMENT - REMOVAL AND INSTALLATION



DANGER!

Daewoo warns any user, that the removal of the counterweight from the machine, front attachment or any other part, may affect the stability of the machine. This could cause unexpected movement, resulting in death or serious injuries. Daewoo is not liable for any misuse.

Never remove the counterweight or front attachment unless the upper structure is in-line with the lower structure.

Never rotate the upper structure once the counterweight or front attachment has been removed.

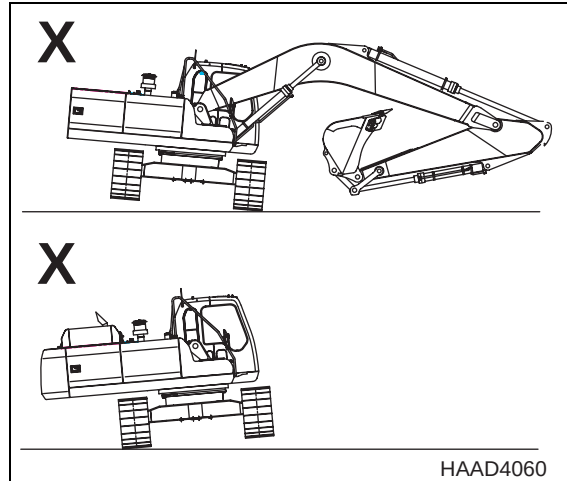


Figure 2

IMPORTANT

Always break down the front attachment by removing outermost sections first - the bucket before the arm, the arm before the boom. Reinstallation of the attachment should begin with the boom and end with the bucket.

Refer to the appropriate Bucket section for its removal and installation procedure before going onto the initial step of the front attachment removal or installation procedure.

ARM REMOVAL PROCEDURE



WARNING!

This procedure is only intended for routine removal or replacement of the attachment, while working under normal, safe operating conditions. In the event of a major structural collapse of some part of the attachment, an accident or complete loss of attachment hydraulic function, DO NOT proceed with attachment disassembly unless you are completely sure of what you are doing. Please call your local Daewoo distributor or Daewoo After Sales Service for assistance. DO NOT allow personnel to stand underneath a weakened or only partially supported attachment section. Keep clear of hydraulic lines that may have fluid escaping at high pressure - it can cause severe or even fatal injuries.

Complete the bucket end removal procedure by pulling out the two bucket linkage pins and the bucket cylinder mounting pin, on the arm. Use an assist crane or hoist to lift the cylinder and relieve weight on mounting pins.

Park the excavator away from obstructions and all traffic on clear, flat, level ground. Extend the arm cylinder and crowd the arm into the boom. Partially retract the boom cylinder so that the boom is stretched out in front of the excavator, as low to the ground as possible, with the arm crowded under the boom.

The tip of the arm point should be lowered to secure blocking that will safely support the weight of the arm. Place the blocking directly in front of the excavator and make sure that it will not be unbalanced with an initial weight load that is all to one end, under the arm point.

Shut off the engine and release hydraulic system pressure - move any of the control levers with the engine off to release pressure built up in the accumulator. Manually vent residual hydraulic pressure in the tank by moving the lever near the cap, on top of the reservoir.



WARNING!

Secure the swing lock and tag and lock out controls in the operator's cab to keep anyone from moving or inadvertently starting the engine. Restrict access to the work site while sections of the attachment are in the air, or while they are being supported by the assist crane. The safe lifting capacity of the assist crane or hoist that is used must exceed the weight of the heaviest section of the attachment, the boom (approximately 2,000 kg [4,400 lb], not including the weight of accessories or fixtures).

Before beginning the disassembly of attachment mounting pins, disconnect the arm cylinder hydraulic hose couplings and put a clean plug in the end of each one. Use any and all reasonable precautions necessary to avoid introducing dirt or other contaminants into the hydraulic system. Wipe down coupling points before disconnecting hydraulic lines and use evaporative-type solvent spray cleaner. Tag and mark hoses for reassembly, if necessary.

Place a sling under the arm cylinder (the cylinder used to extend and retract the attachment arm, pinned to the top of the boom). Lift the sling so that the weight load on the rod end of the arm cylinder (pinned to the ears on the inner end of the arm) is released. Prepare blocking under the arm that will securely support the weight of the arm and arm cylinder.



CAUTION!

To make sure that the polished surfaces of cylinder rod ends will not suffer accidental damage during disassembly or removal procedures, wrap exposed rod surfaces (especially those of boom cylinders) with a protective covering material. Immediately following disassembly and removal, cylinder rods should always be fully retracted. This eases handling problems and also avoids possible damage.

Remove retainers on the end of the mounting pin for the arm cylinder rod end. Use the assist crane to relieve the weight load and withdraw the pin. Lower the arm down to the blocking support for any continued disassembly procedures.

BOOM REMOVAL PROCEDURE

NOTE: *Boom removal may be simplified if the shell of the operator's cab is taken off the turntable deck first. Refer to the Operator's Cab Removal procedure before continuing, if both components are to be removed from the excavator.*

After the bucket, arm and arm cylinder have been removed, lower the end of the boom to a stable, secure blocking support.

Attach the assist crane sling to the body of either boom cylinder, break the mounting pin connection to the boom by tapping through the pin from the same side of the boom and repeat for the opposite cylinder.

Release hydraulic pressure and disconnect line couplings as previously outlined in the Arm Removal Procedure, observing the same precautions.

Disconnect wiring for work light assemblies and any other accessory lines or connections. Locate the sling of the assist crane near the center of gravity, optimum lift point for the boom, and use the crane to take pressure off the boom foot pin. Drive out the pin after disassembling retainers and carefully lift away the boom.



WARNING!

Traveling the excavator, swinging the turntable or movement over bumps or sloping, uneven surfaces could all produce loss of control and possible accidents or injuries, if the turntable deck has been unbalanced by removal of weight from one end only.

To maintain stability, the counterweight should be removed whenever the front attachment is taken off the machine.

INSTALLATION

ARM INSTALLATION PROCEDURE

Re-attach the base of the arm cylinder to the mounting point on top of the boom.



WARNING!

Before assembling the front attachment, make sure that the individual boom, arm and bucket sections are all compatible and can be used safely for work intended. Refer to the General Safety Pages, Lift Ratings, Working Range Diagrams and Weights of Materials sections in the Operation and Maintenance Manual. Consult your dealer or Daewoo After Sales Service for more information if you have any questions or require more information.

Begin with the arm securely supported on blocking in front of the excavator. Pre-grease the mounting pin for the rod end of the arm cylinder and push it through the ears on the end of the arm. Attach a sling around that mounting pin and lift the arm with an assist crane until it is in position for the boom-arm pin connection to be made.

Relieve hydraulic pressure from all points of the system before any hydraulic lines are opened, then carefully assemble hydraulic connections to the arm cylinder.

Remove the sling from around the rod end arm cylinder pin, withdraw the pin and lift the body of the arm cylinder to re-pin the mounting connection.

BOOM INSTALLATION PROCEDURE

Before reassembling the attachment, make sure to inspect all bushings and pivot points of each section. To avoid damaging the seats, bushings should never be hammered or chiseled out of their seats.

Installation is otherwise a reversal of the removal procedures.

START-UP PROCEDURES

Once the boom has been serviced, it should be lubricated as outlined in the initial start-up procedures of the operation manual. Refer to the appropriate operation and maintenance manual for unit.



BUCKET



CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that is in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

MODEL	SERIAL NUMBER RANGE
Solar 300LC-V	1001 and Up
Solar 300LL	1001 and Up
Solar 340LC-V	1001 and Up
Solar 420LC-V	1001 and Up
Solar 470LC-V	1001 and Up

TABLE OF CONTENTS

Bucket Tooth Inspection and Replacement	3
Type 1.....	3
Type 2.....	4
Bucket O-ring Replacement	6
Bucket Shimming Procedures	8
New Bucket Installation	8
Bucket Attachment, Removal and Reversal	9
Detaching the Bucket	9
Attaching The bucket.....	9
Reversing the Bucket	10

BUCKET TOOTH INSPECTION AND REPLACEMENT

There are several different types of attachment methods for replaceable bucket teeth. Some of the most common types are shown in the following drawings.

Bucket teeth are usually replaced in sets but it may sometimes be necessary to replace individual teeth.

TYPE 1

Look for the following indications of wear or damage:

- Lock pins protrude unevenly on one side.
- Lock pins have been worn down so far that they no longer make full contact through the length of the pin hole.
- Lock washers or pins show obvious damage or weakness.
- Wear points on the working surfaces of tooth points - pits, cracks, chips or craters - are larger than 8 mm to 10 mm (1/3" to 1/2") across.

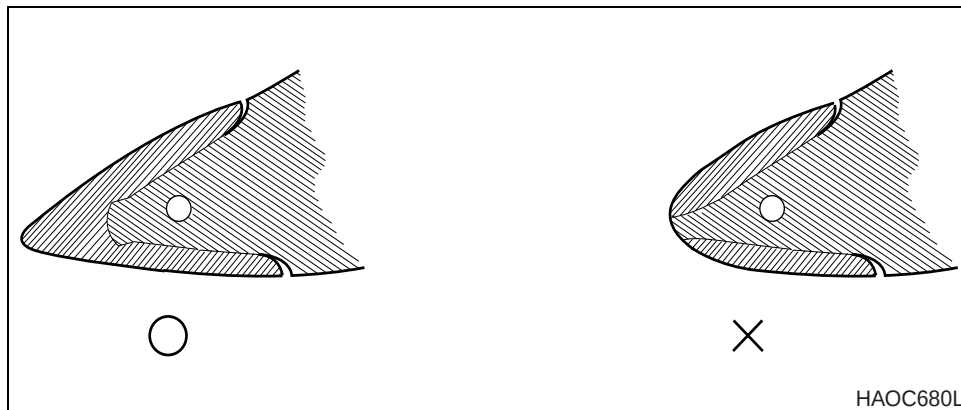


Figure 1

1. On a routine basis, inspect the bucket teeth to make sure that tooth wear or breakage has not developed. Do not allow the replaceable bucket teeth to wear down to the point that the bucket adapter is exposed. See Figure 4.
2. To replace a tooth (1, Figure 2), use a hammer and punch to drive the locking pin (2) and lock washer (3) out of the tooth adapter (4).
3. Once the worn tooth has been removed, use a putty knife to scrape the adapter as clean as possible.
4. Slide the new tooth into position and insert the lock washer.
5. Insert the locking pin into the tooth and with a hammer, drive the pin in until the lock washer seats in the locking groove.

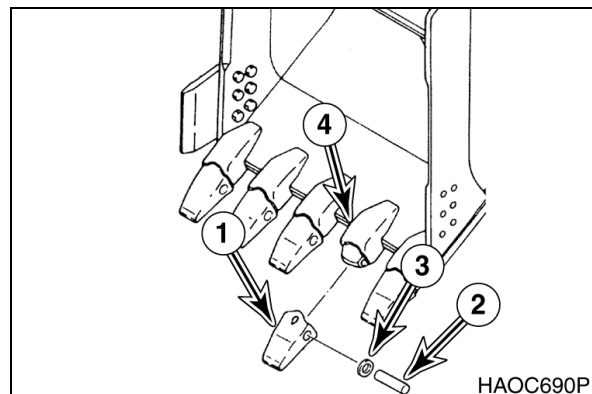


Figure 2

TYPE 2



WARNING!

Due to the possibility of flying metal objects, always wear safety helmet, protective gloves and eye protection when changing bucket teeth.

Curl the bucket upwards and place the round rear surface of the bucket firmly on the ground. Place wooden blocks under front of bucket. Shut the engine off and lock out the hydraulic controls before working on the bucket.

Inspect locking pin assembly and replace it if the following conditions exist;

1. The locking pin is too short when both surfaces are aligned.
2. The rubber has been torn and bosses of the steel balls are liable to slip off.
3. Pressing steel ball causes the boss to go inside.

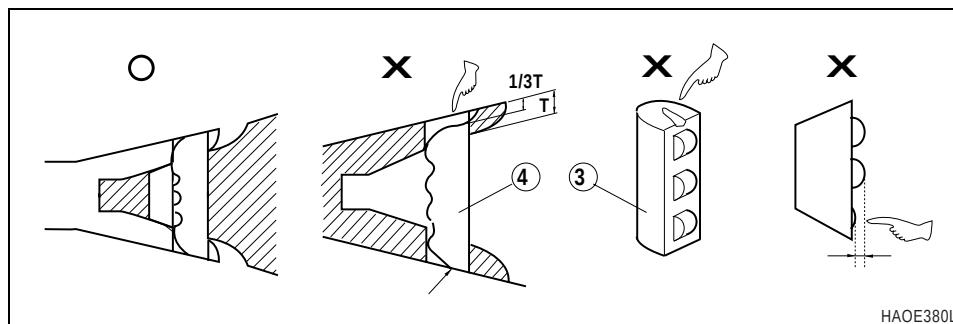


Figure 3

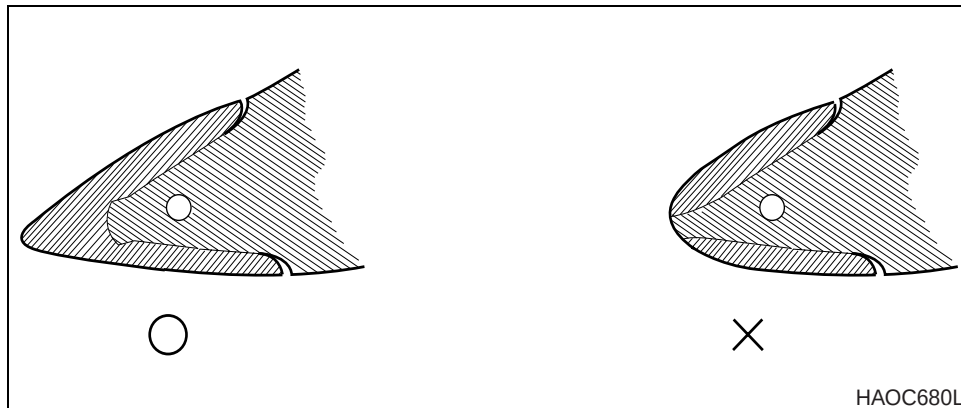


Figure 4

1. On a routine basis, inspect bucket teeth to make sure that tooth wear or breakage has not developed. Do not allow replaceable bucket teeth to wear down to a point that bucket adapter is exposed. See Figure 4.
2. To replace a tooth, use a hammer (1, Figure 5) and punch (2) to drive locking pin assembly out of tooth and tooth adapter.
3. Once the worn tooth has been removed, use a putty knife to scrape adapter as clean as possible.
4. Slide new tooth into position and insert locking pin assembly.

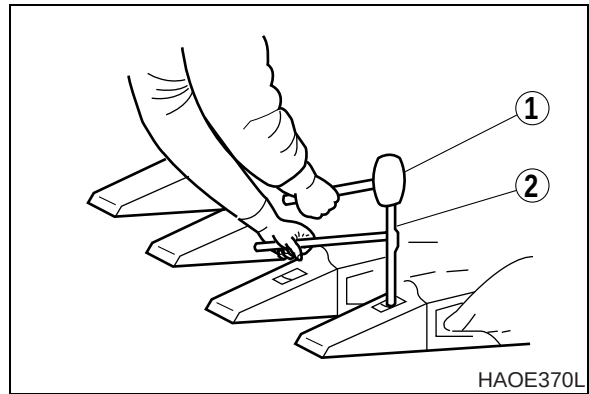


Figure 5

BUCKET O-RING REPLACEMENT



WARNING!

Due to possibility of flying metal objects, always wear safety helmet, protective gloves and eye protection when changing pins.

1. Inspect the bucket O-rings on a routine basis. If worn or damaged, replacement is necessary.

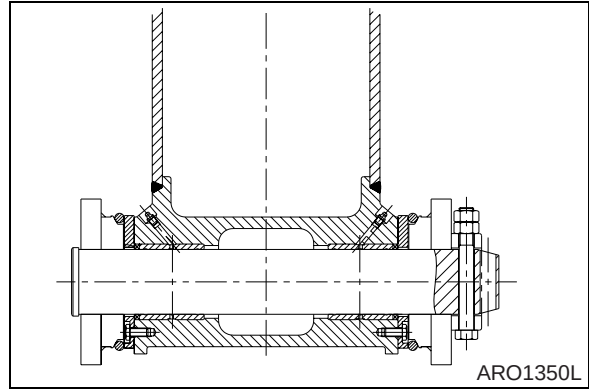


Figure 6

2. Roll the old O-ring (1, Figure 7) onto the boss (2) around the bucket pin (3). Remove the bucket pin and move the arm or bucket link (4) out of the way.

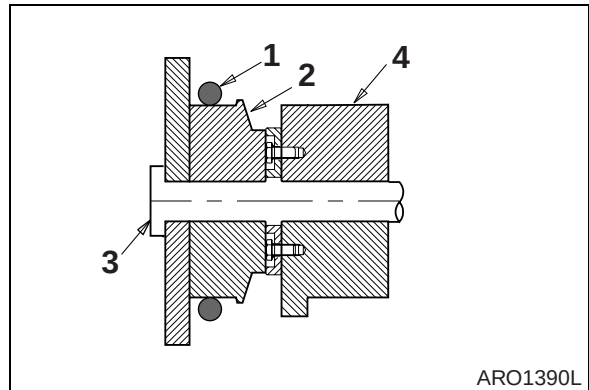


Figure 7

3. Remove the old O-ring and temporarily install the new O-ring (1, Figure 8) onto the bucket boss (2). Make sure that the O-ring groove on both the bucket link (4) and boss have been cleaned.
4. Realign the arm or link with the bucket pin hole and insert the bucket pin (3, Figure 7).

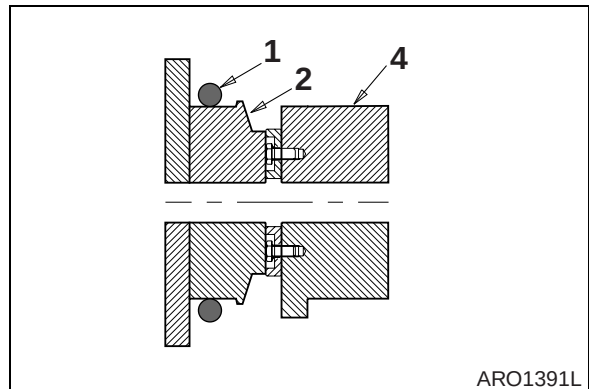


Figure 8

5. Roll the new O-ring (1, Figure 9) into the O-ring groove.

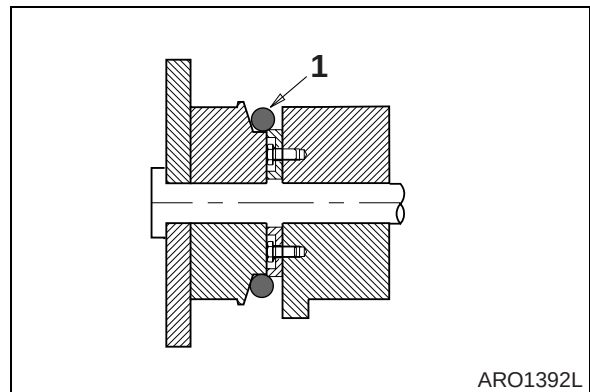


Figure 9

BUCKET SHIMMING PROCEDURES

NEW BUCKET INSTALLATION

1. If a new bucket is being installed on the excavator, measure the inside dimension between the bucket ears and the outside dimension across the arm mounting boss.
2. Subtract the clearance on both sides from the difference of the two and shim accordingly, prior to assembly.



WARNING!

To check end play (side-to-side) clearance at bucket attachment point, the bucket must be free to move but at all other times lower it to the ground or use support blocks to immobilize this assembly. Shut off engine and tag and lock out controls to prevent movement during this procedure.

Shimming Procedures for Installed Bucket

1. With bucket attached, curl bucket and arm outward and lower boom so that bucket teeth are pointing away from excavator, just a few inches off ground. This position provides easy accessibility for dimensional measurements.
2. Force bucket to one side and check for end play (side-to-side) clearance under O-rings at attachment point. Total clearance should be 1 mm (0.04 in) between side face of boss and inside edge of ear bushing (Y, Figure 10). Too tight a fit (less than 1 mm (0.04 in)) can cause excessive wear while too much clearance may produce excessive noise and potentially hazardous slack control.
3. Recheck end play by forcing bucket towards opposite side and repeating clearance measurements.
4. If an adjustment is required, remove two jam nuts (1, Figure 10) and bolt (2) from pin (3). Add or remove shims (4) as required. Use equal amount of shims on each side. Install bolt (2) and two jam nuts (1). Jam nuts must clear boss by 1 - 2 mm (0.04 - 0.08 in) at point (X).

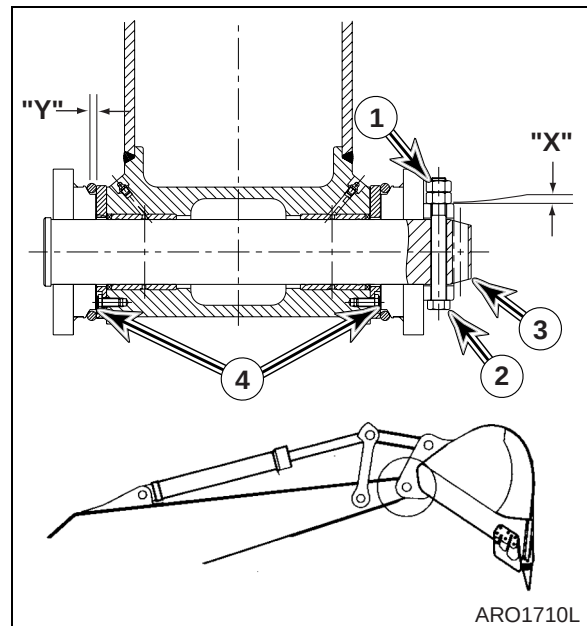


Figure 10

BUCKET ATTACHMENT, REMOVAL AND REVERSAL

DETACHING THE BUCKET

Park the excavator away from obstructions on clear, flat, level ground. Lower the bucket carefully to pre-assembled blocking on the ground. Brace the bucket so that there is no load weight on the pin connecting the bucket and arm. Disassemble the fasteners on the end of the bucket pin and pull out the pin.

If the pin sticks and resists normal withdrawal, there may be a load on it. Raise and lower the arm slightly until an unstressed pin position is located.



CAUTION!

Use care pulling out the pin to avoid damaging the dust seals on either end of the arm.

When the pin has been withdrawn, move the operating joystick slightly to take weight off the remaining link pin. Disassemble the link pin end retainers and pull out the pin.

Lift the arm away from the bucket so that the bucket can be carried away or another end attachment can be put on the excavator.

ATTACHING THE BUCKET

Carefully inspect all parts before reassembling the bucket linkage. Look for cracks or any other evidence of physical damage and replace any seal or O-ring that is not in like-new condition. Pre-lube linkage pins before reassembly.

Use an old cylinder rod, a long breaker bar or a similar, relatively thin diameter support bar for making the first (temporary) pin connection, between the bucket and arm. If the support bar is straight, the arm can be raised and the bucket will hang level, allowing direct insertion of the bucket ear-attachment linkage pin.

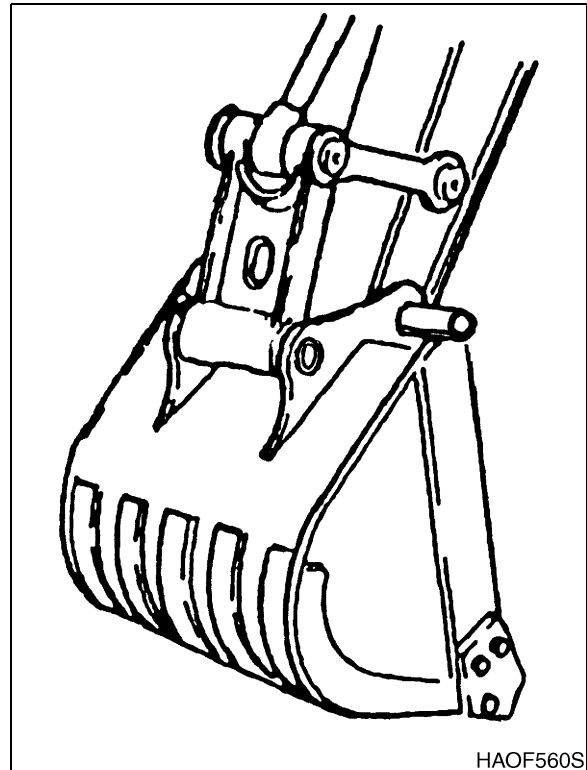


Figure 11

When the link pin has been installed, withdraw the temporary support rod from the bucket pin holes, lower and raise the arm and boom and install the bucket pin.



WARNING!

When making linkage alignments, never insert fingers into pin holes. The attachment or bucket could shift position and cause a severe injury. Match holes by visually lining them up. Use the sharp-tipped, soft point of a pencil or a similar tool to check for high spots or irregularities.

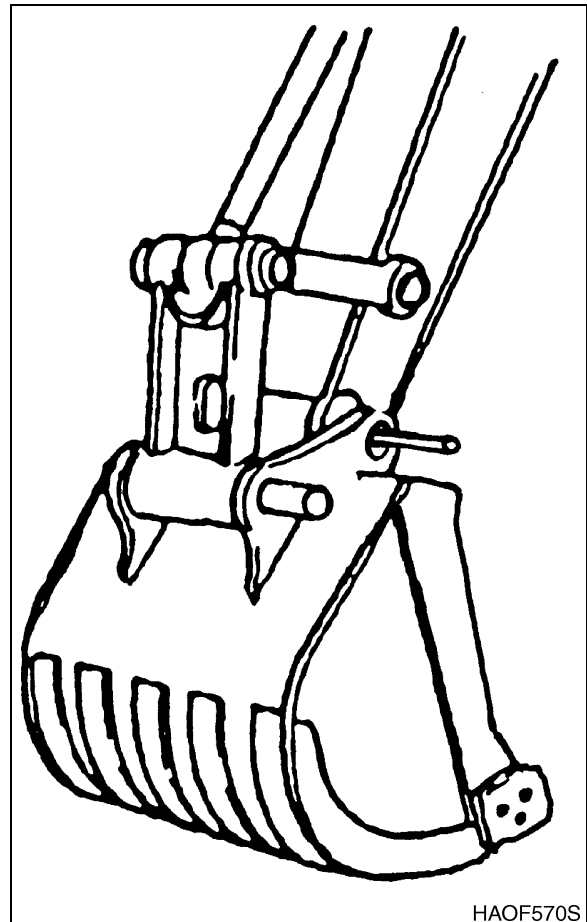
REVERSING THE BUCKET

Follow instructions for "Detaching the Bucket" and remove both the bucket and link pins. Rotate the bucket 180° to change bucket configuration. This procedure is greatly simplified if some type of rotating or swiveling support can be used, on the ground underneath the bucket. Follow instructions for "Bucket Attachment" to replace pins.



WARNING!

Bucket curl and dump levers must be used in opposite directions, after the bucket has been reversed.



HAOF570S

Figure 12

COMPANY NAME:	DATE:
STREET ADDRESS:	TELEPHONE:
CITY:	FAX:
STATE / PROVINCE:	
COUNTRY:	
NAME:	
MACHINE MODEL:	
SERIAL NUMBER:	
MANUAL NUMBER:	
SHOP MANUAL SECTION NUMBER:	
PROPOSED DESCRIPTION OF CORRECTION AND/OR SUGGESTION:	
Use additional paper if needed. Please include copy of current manual pages for reference. Attach any photos or illustrations. If digital photos are available, e-mail them to Bill.Bernhardt@dhiac.com (If possible, use 1024 x 768 resolution.).	
HAS THIS BEEN DISCUSSED WITH A DAEWOO SERVICE REPRESENTATIVE: YES NO	
IF YES - WHO:	
(It is advised to discuss this with a Daewoo service representative to ensure that the above correction is appropriate and valid.)	

Daewoo Heavy Industries America Corporation
2905 Shawnee Industrial Way
Suwanee, GA 30024
Attention: Publications

