

TABLE OF CONTENTS


Electrical Circuits

DD80, DD80L - Canopy Model3


DD80, DD80L - Cabin Model4

Hydraulic Circuits

DD80, DD80L6

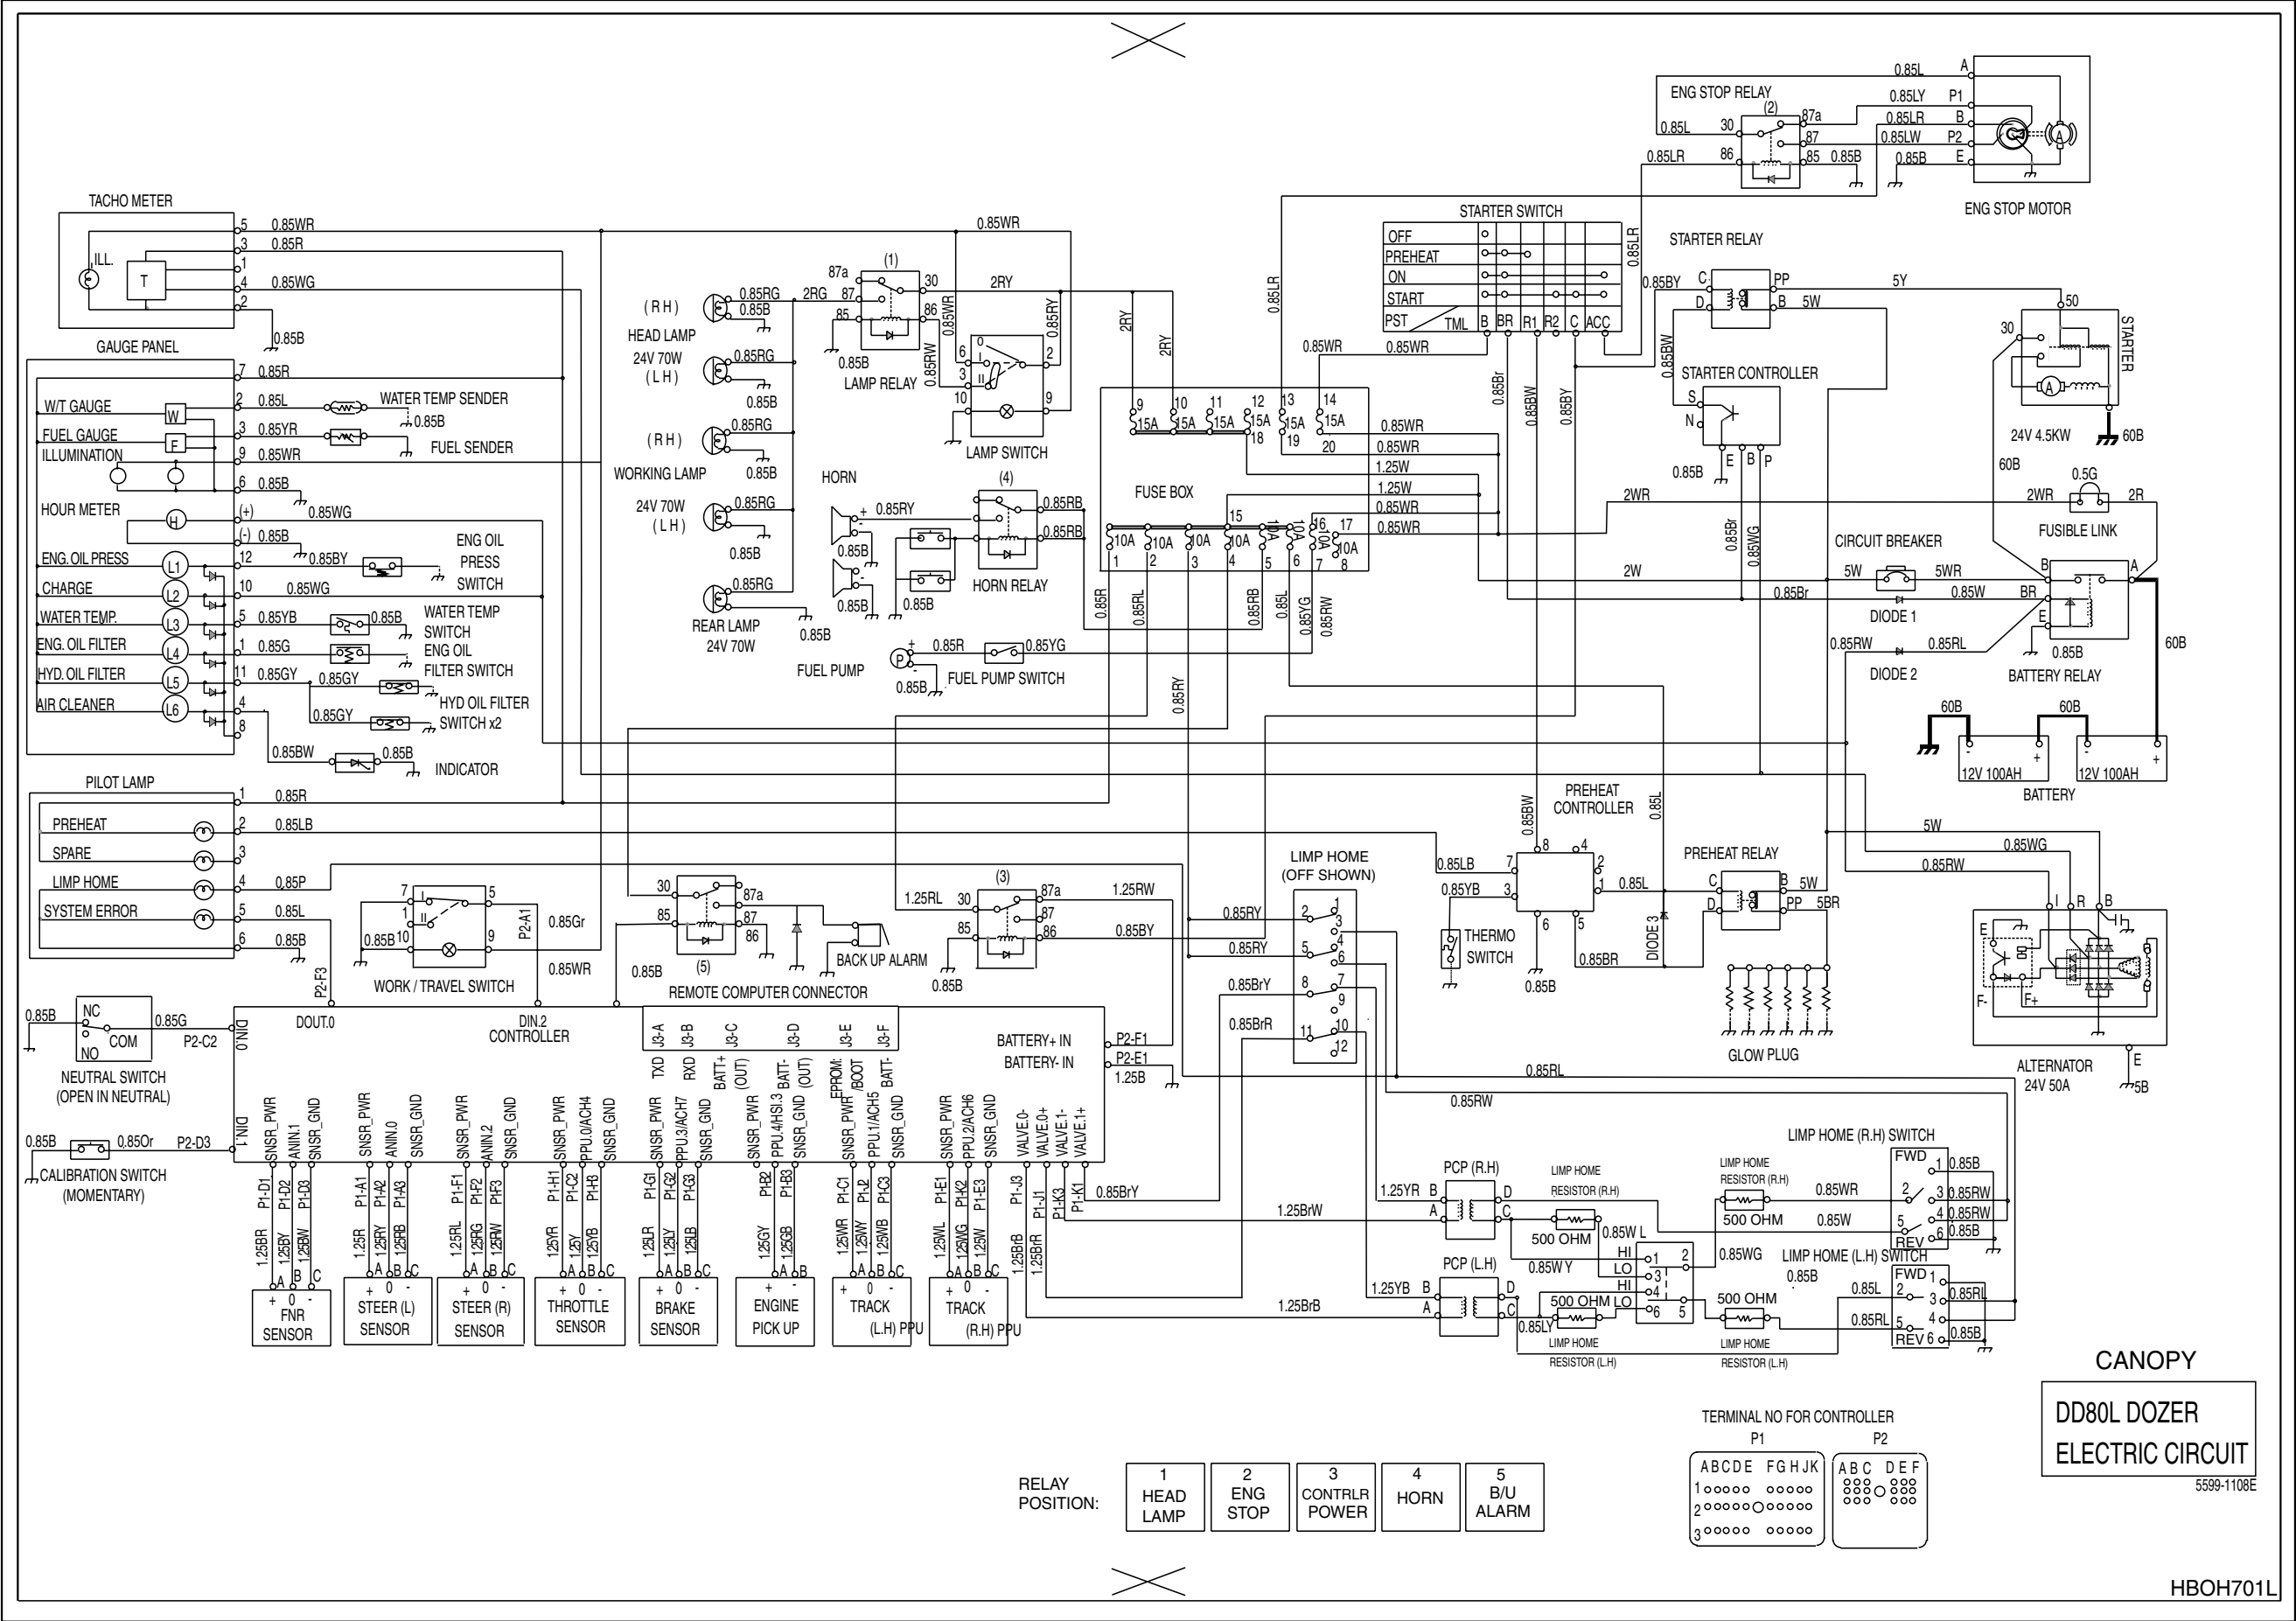

DD80, DD80L - CABIN MODEL

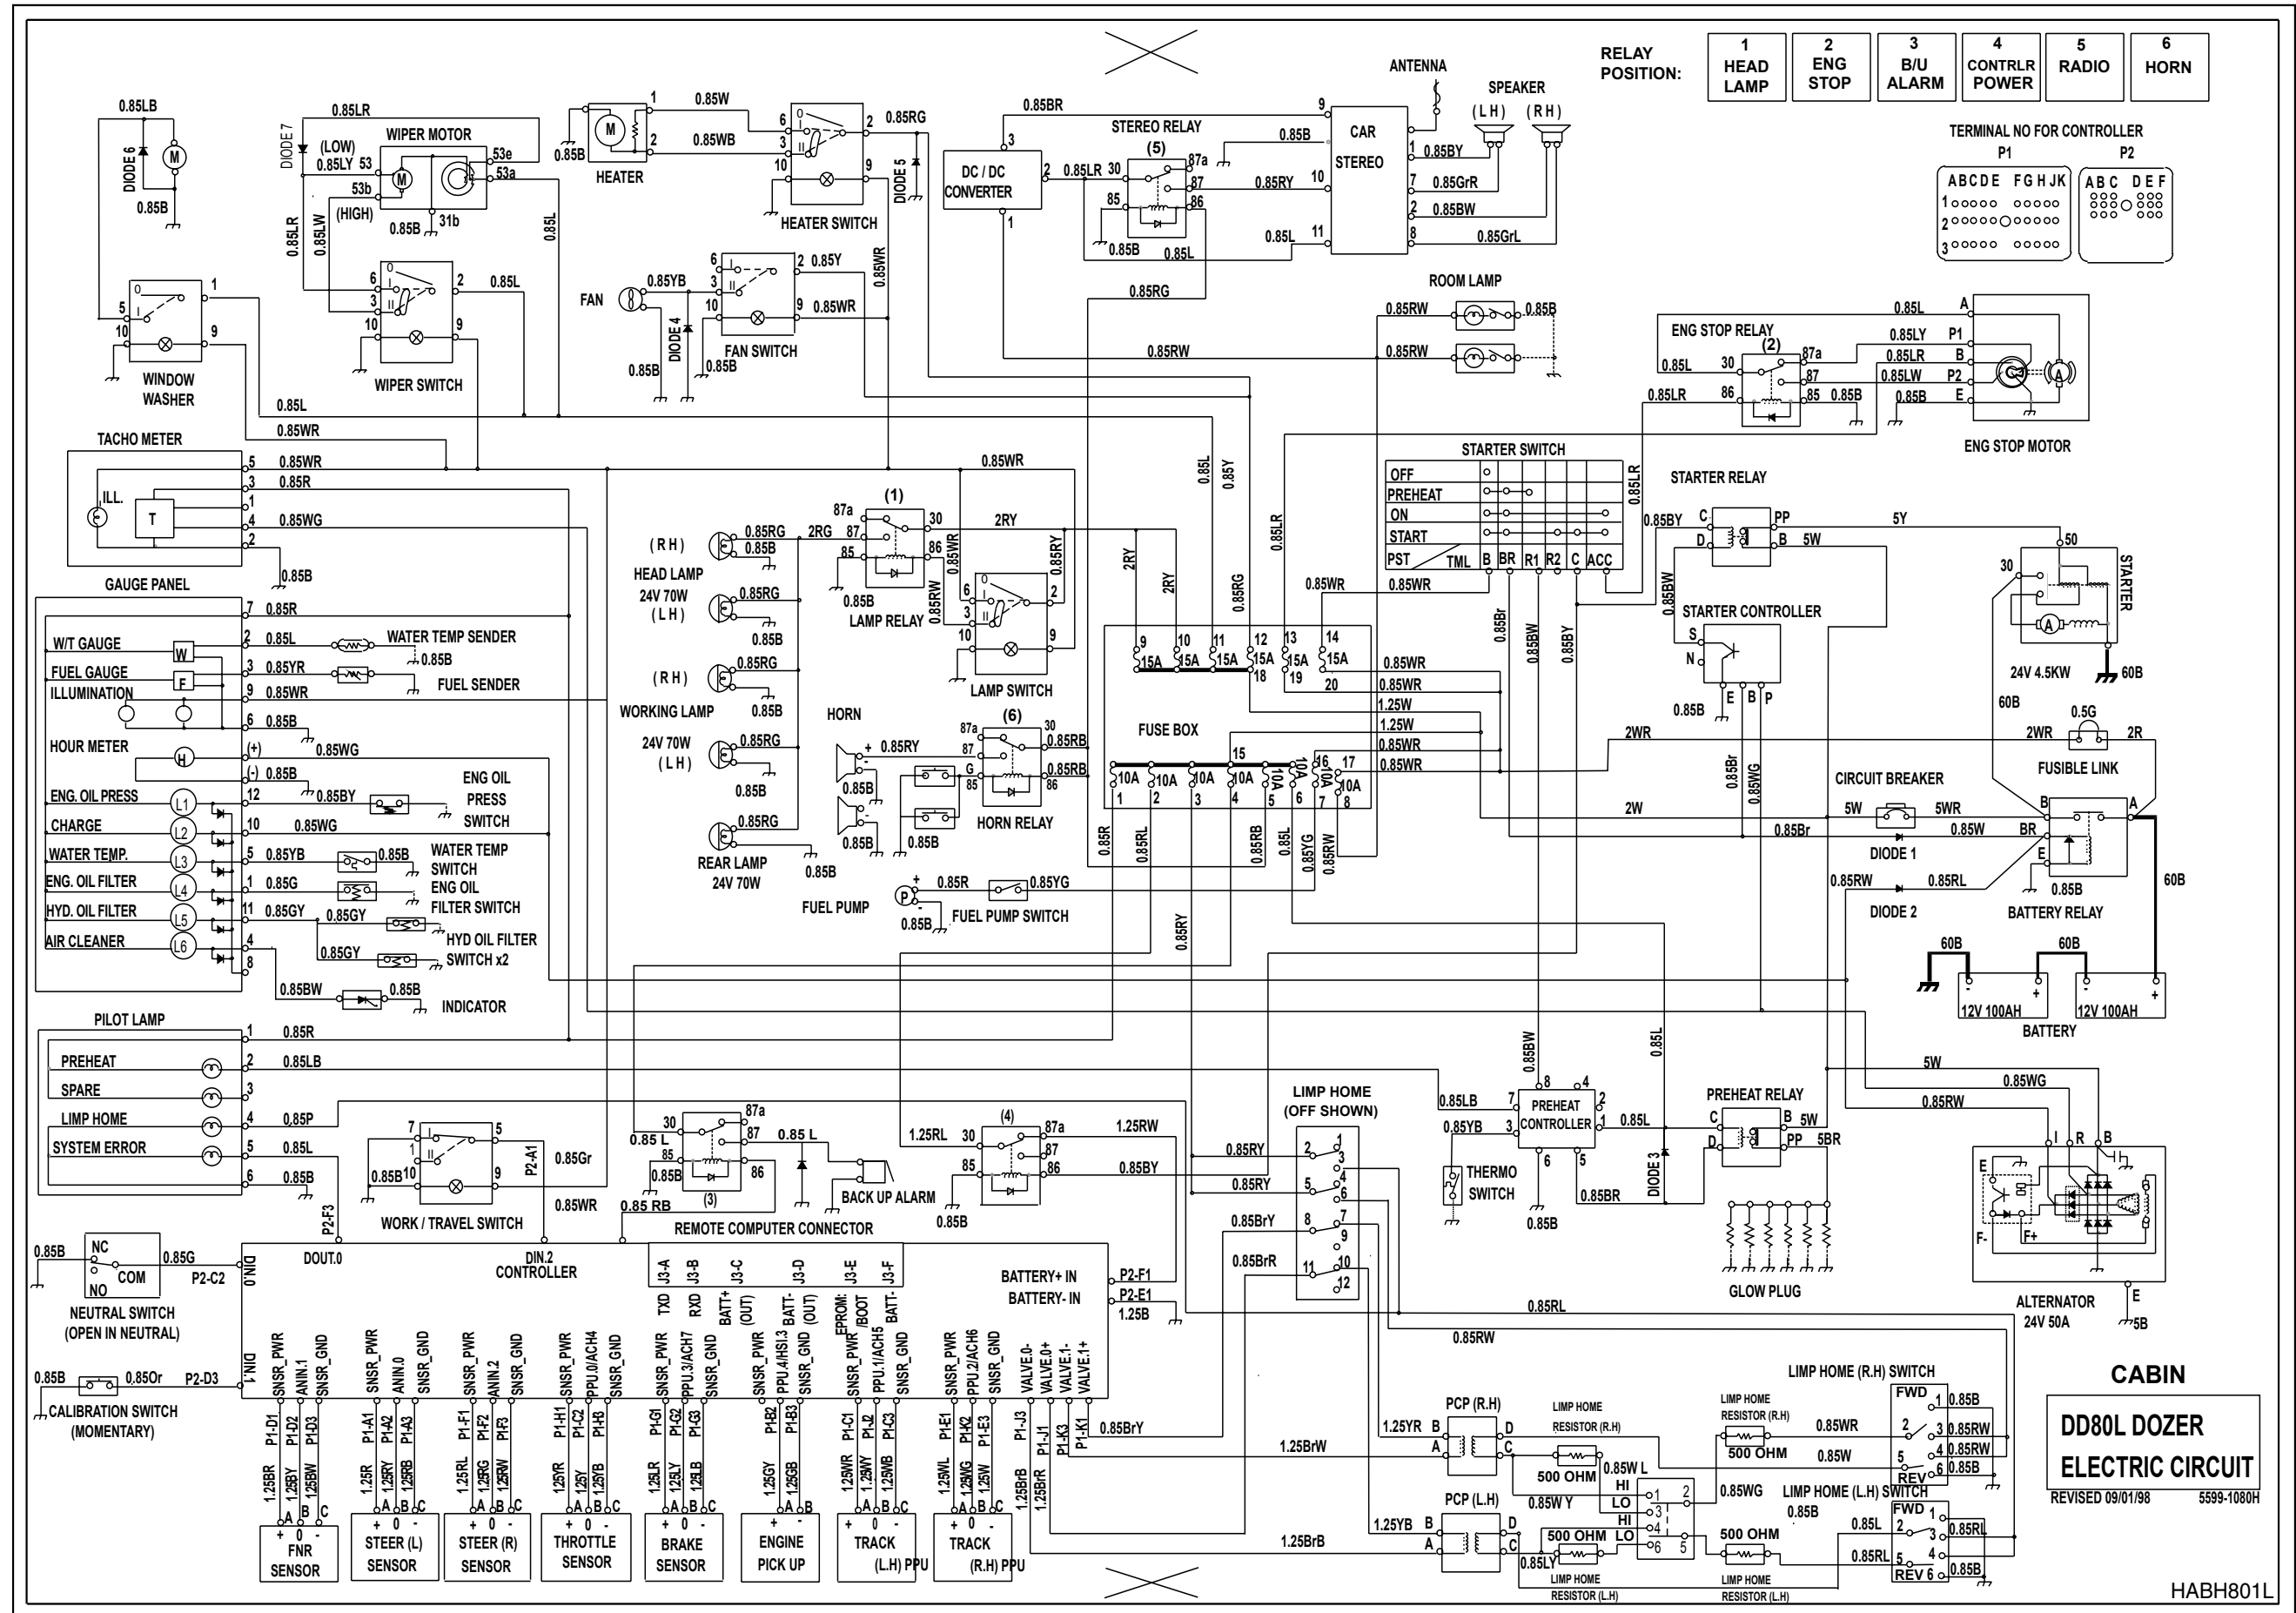

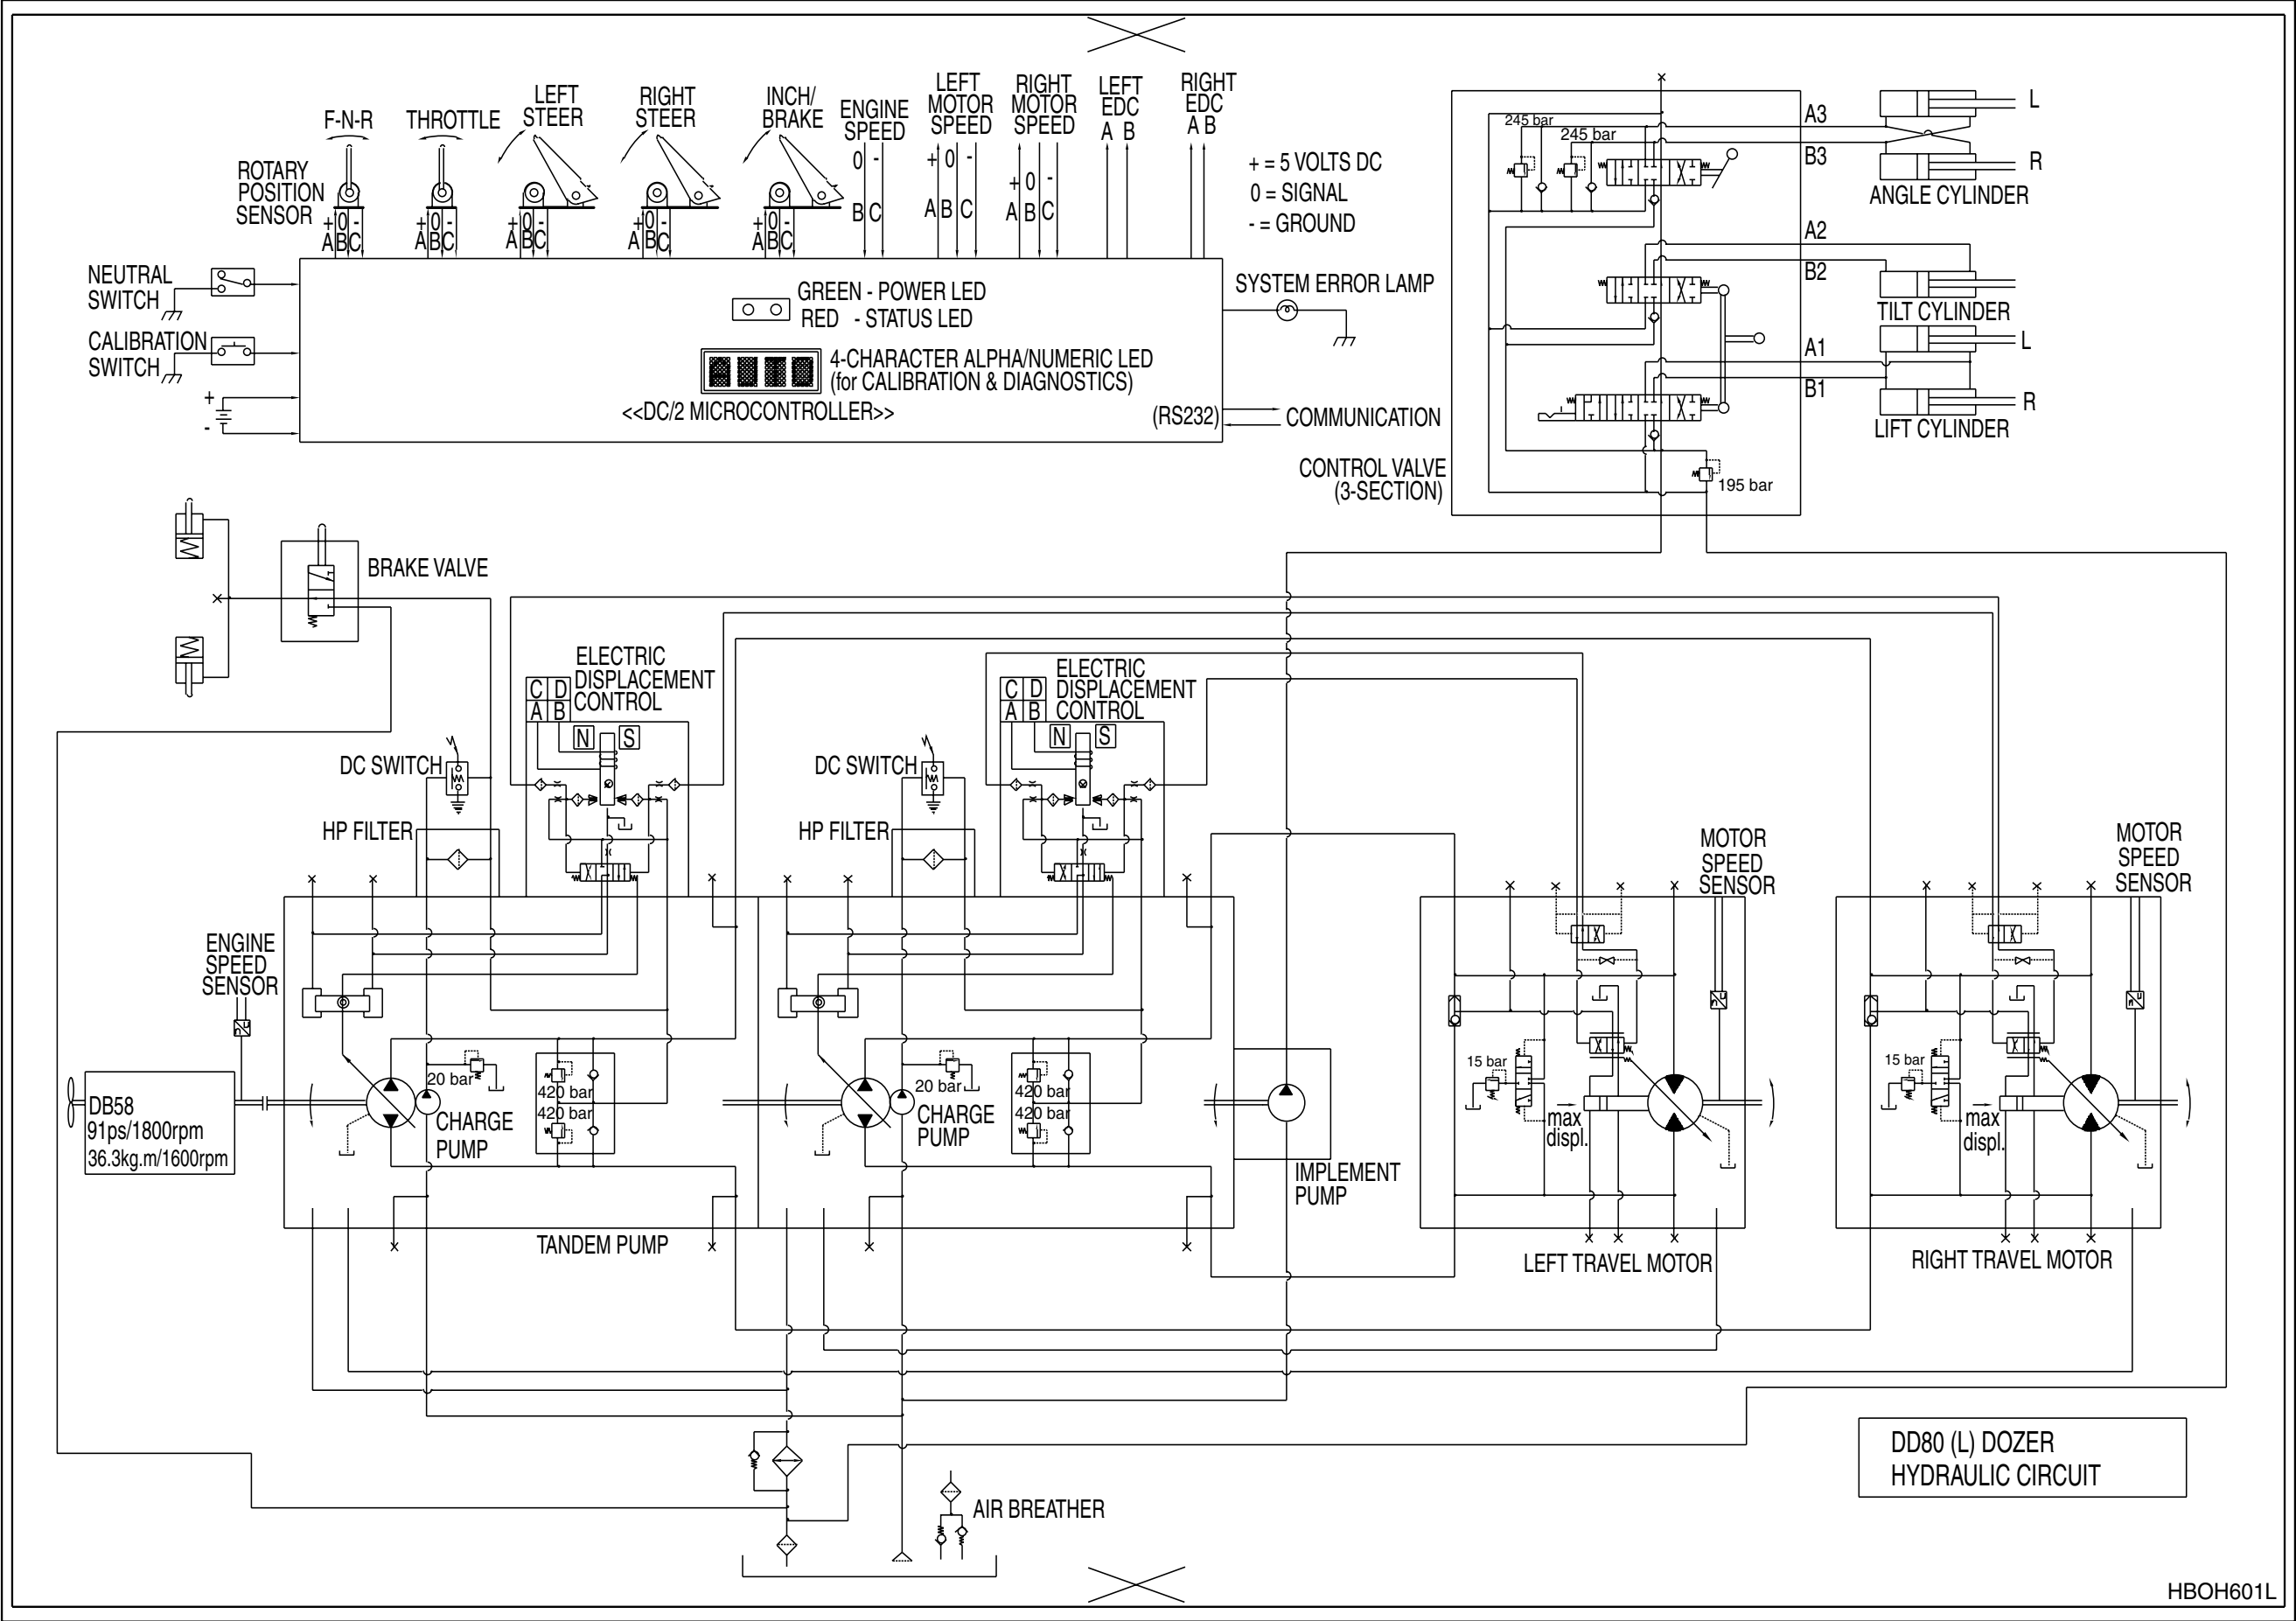


TABLE OF CONTENTS

Electrical Circuits

DH 030.....4

DH 050.....5

DH 050.....6

DH 130.....7

DH 130 (S/N 0483 and Up).....8

DH 130W9

DH 130-210

DH 170.....11

DH 180 / DH 22012

DH 200W13

DH 220LC14

DH 280LC15

DH 320LC16

DH 450.....17

Hydraulic Circuits

DH 030.....19

DH 050 (S/N 0001 thru 5600)20

DH 050 (S/N 5601 thru 5999).....21

DH 050 (S/N 6001 and Up).....22

DH 130.....23

DH 130W24

DH 130W25

DH 130-226

DH 170.....27

DH 180 / DH 20028

DH 200W29


DH 200W30


DH 220 (S/N 0001 thru 1779)31

DH 220 (S/N 1780 and Up).....32

DH 280.....33


DH 320.....34

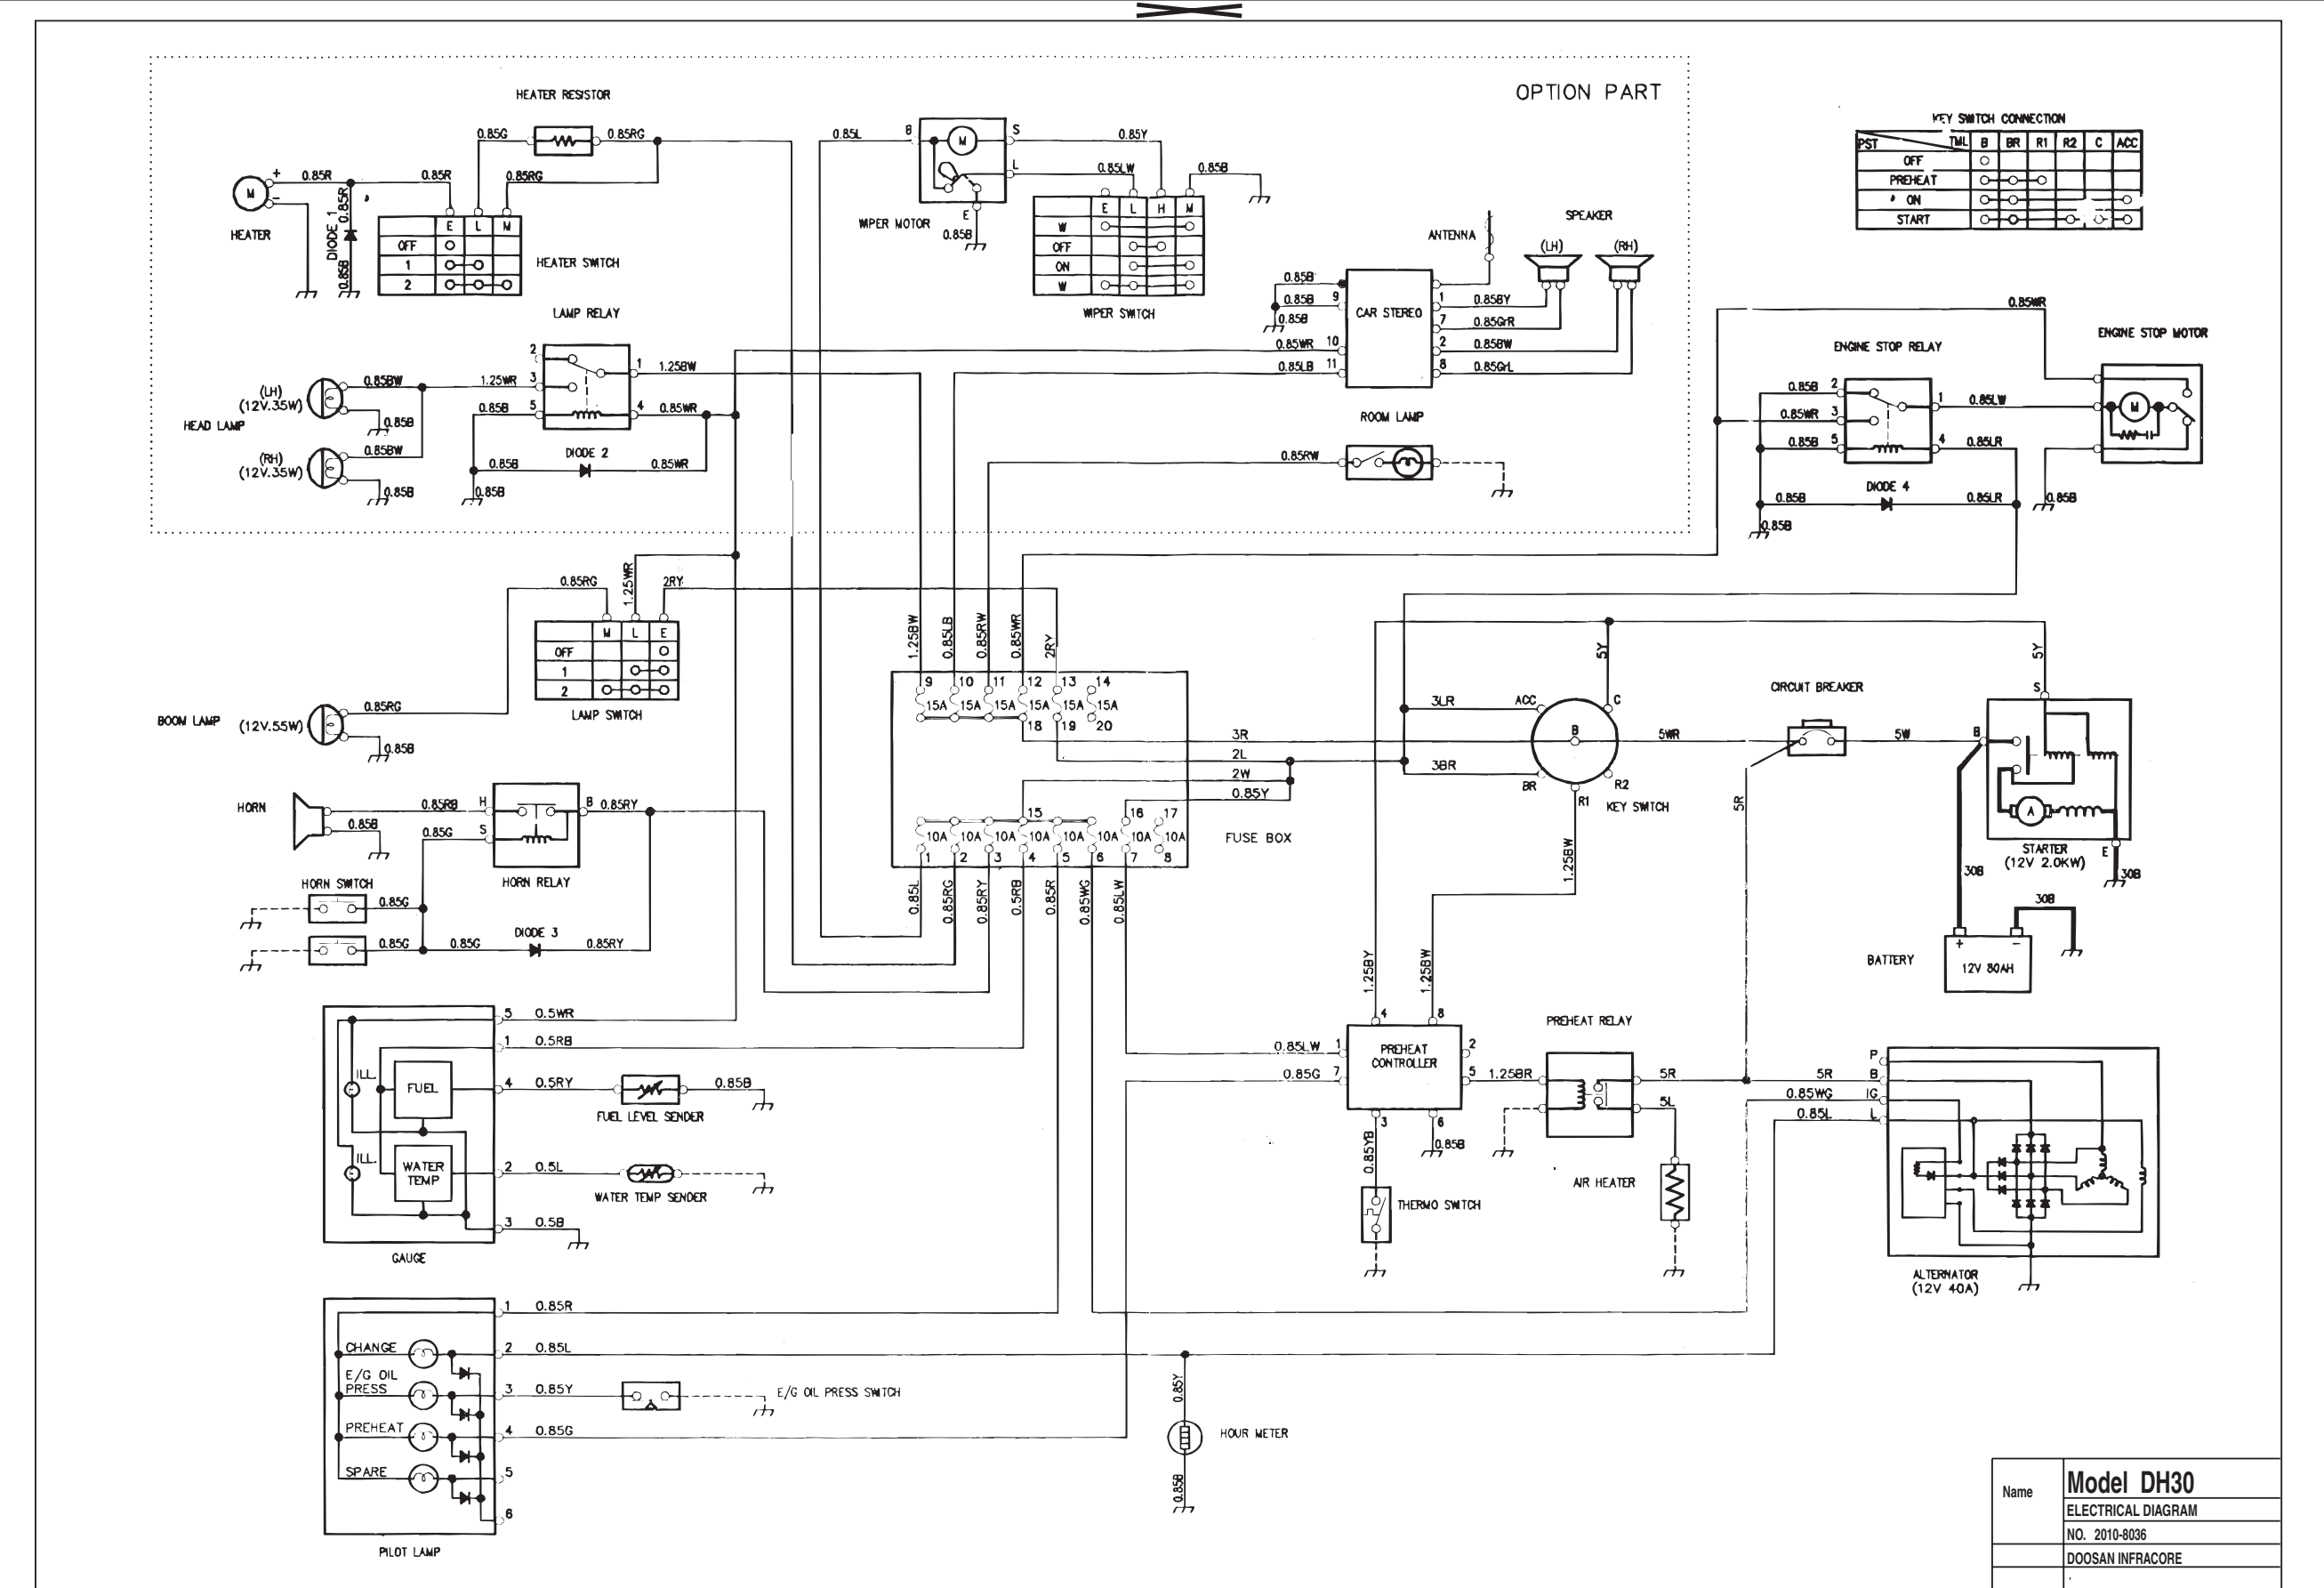


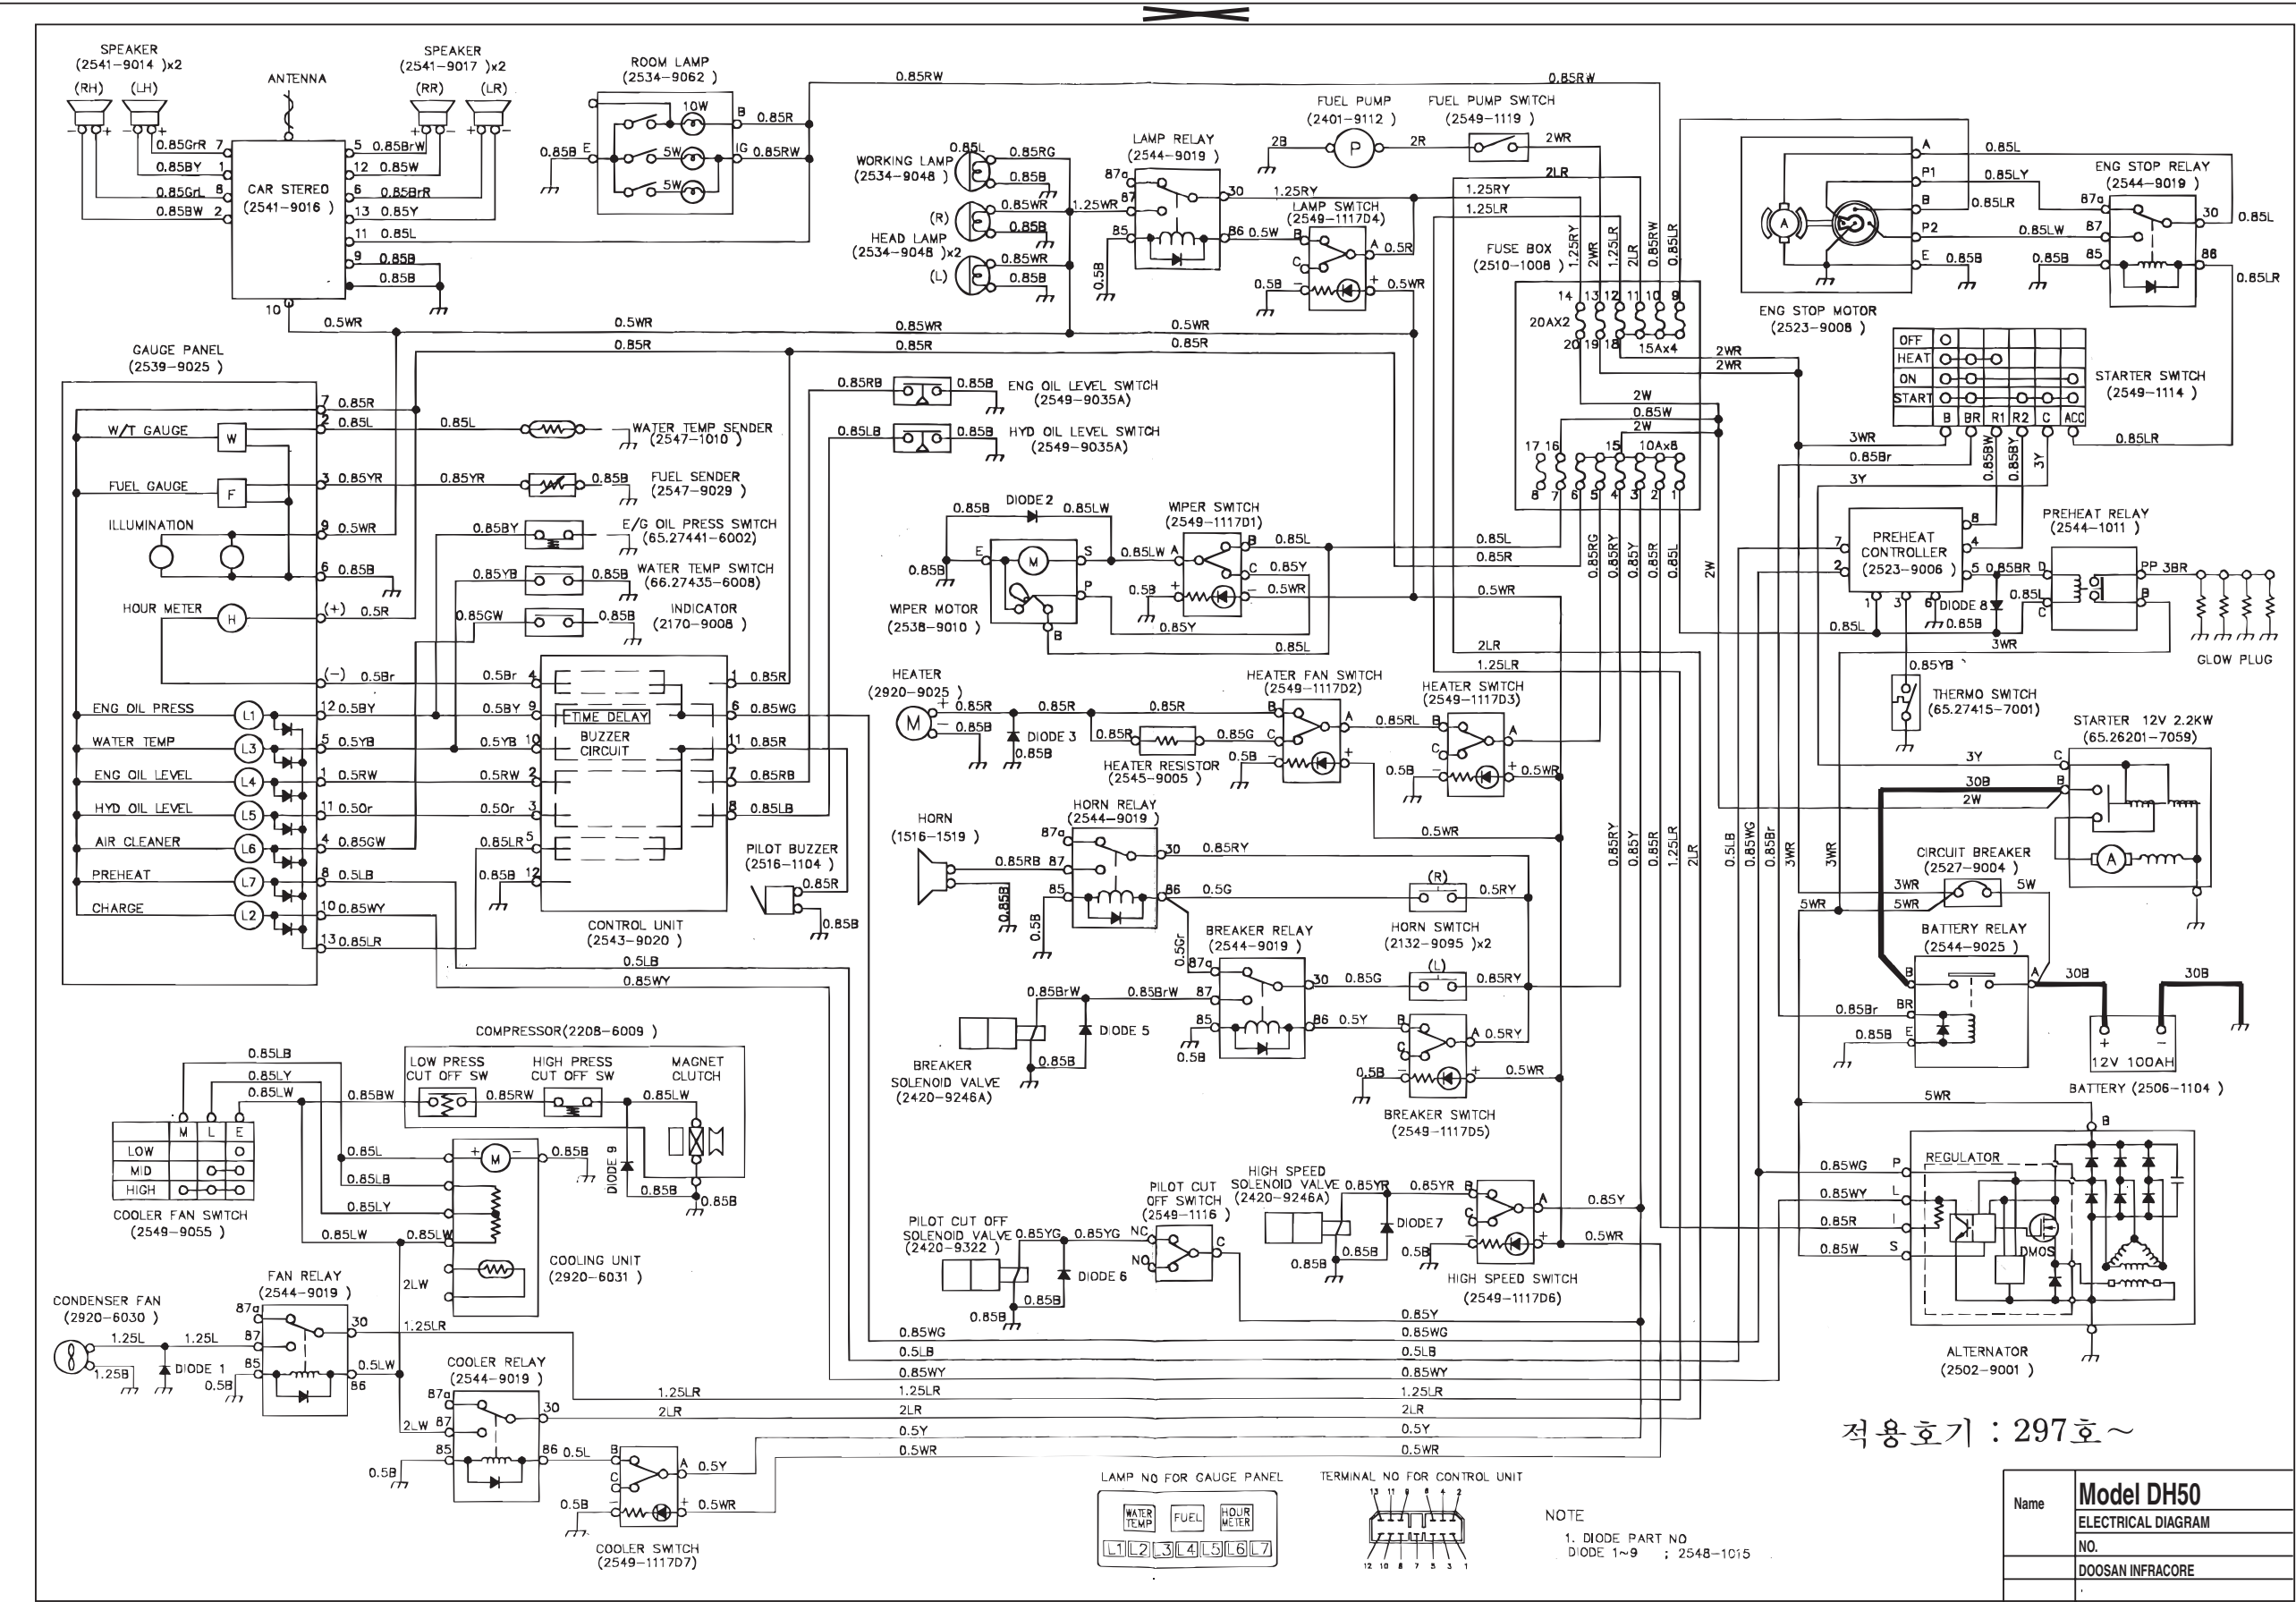

적용호기 : 297호~

HAAE2200

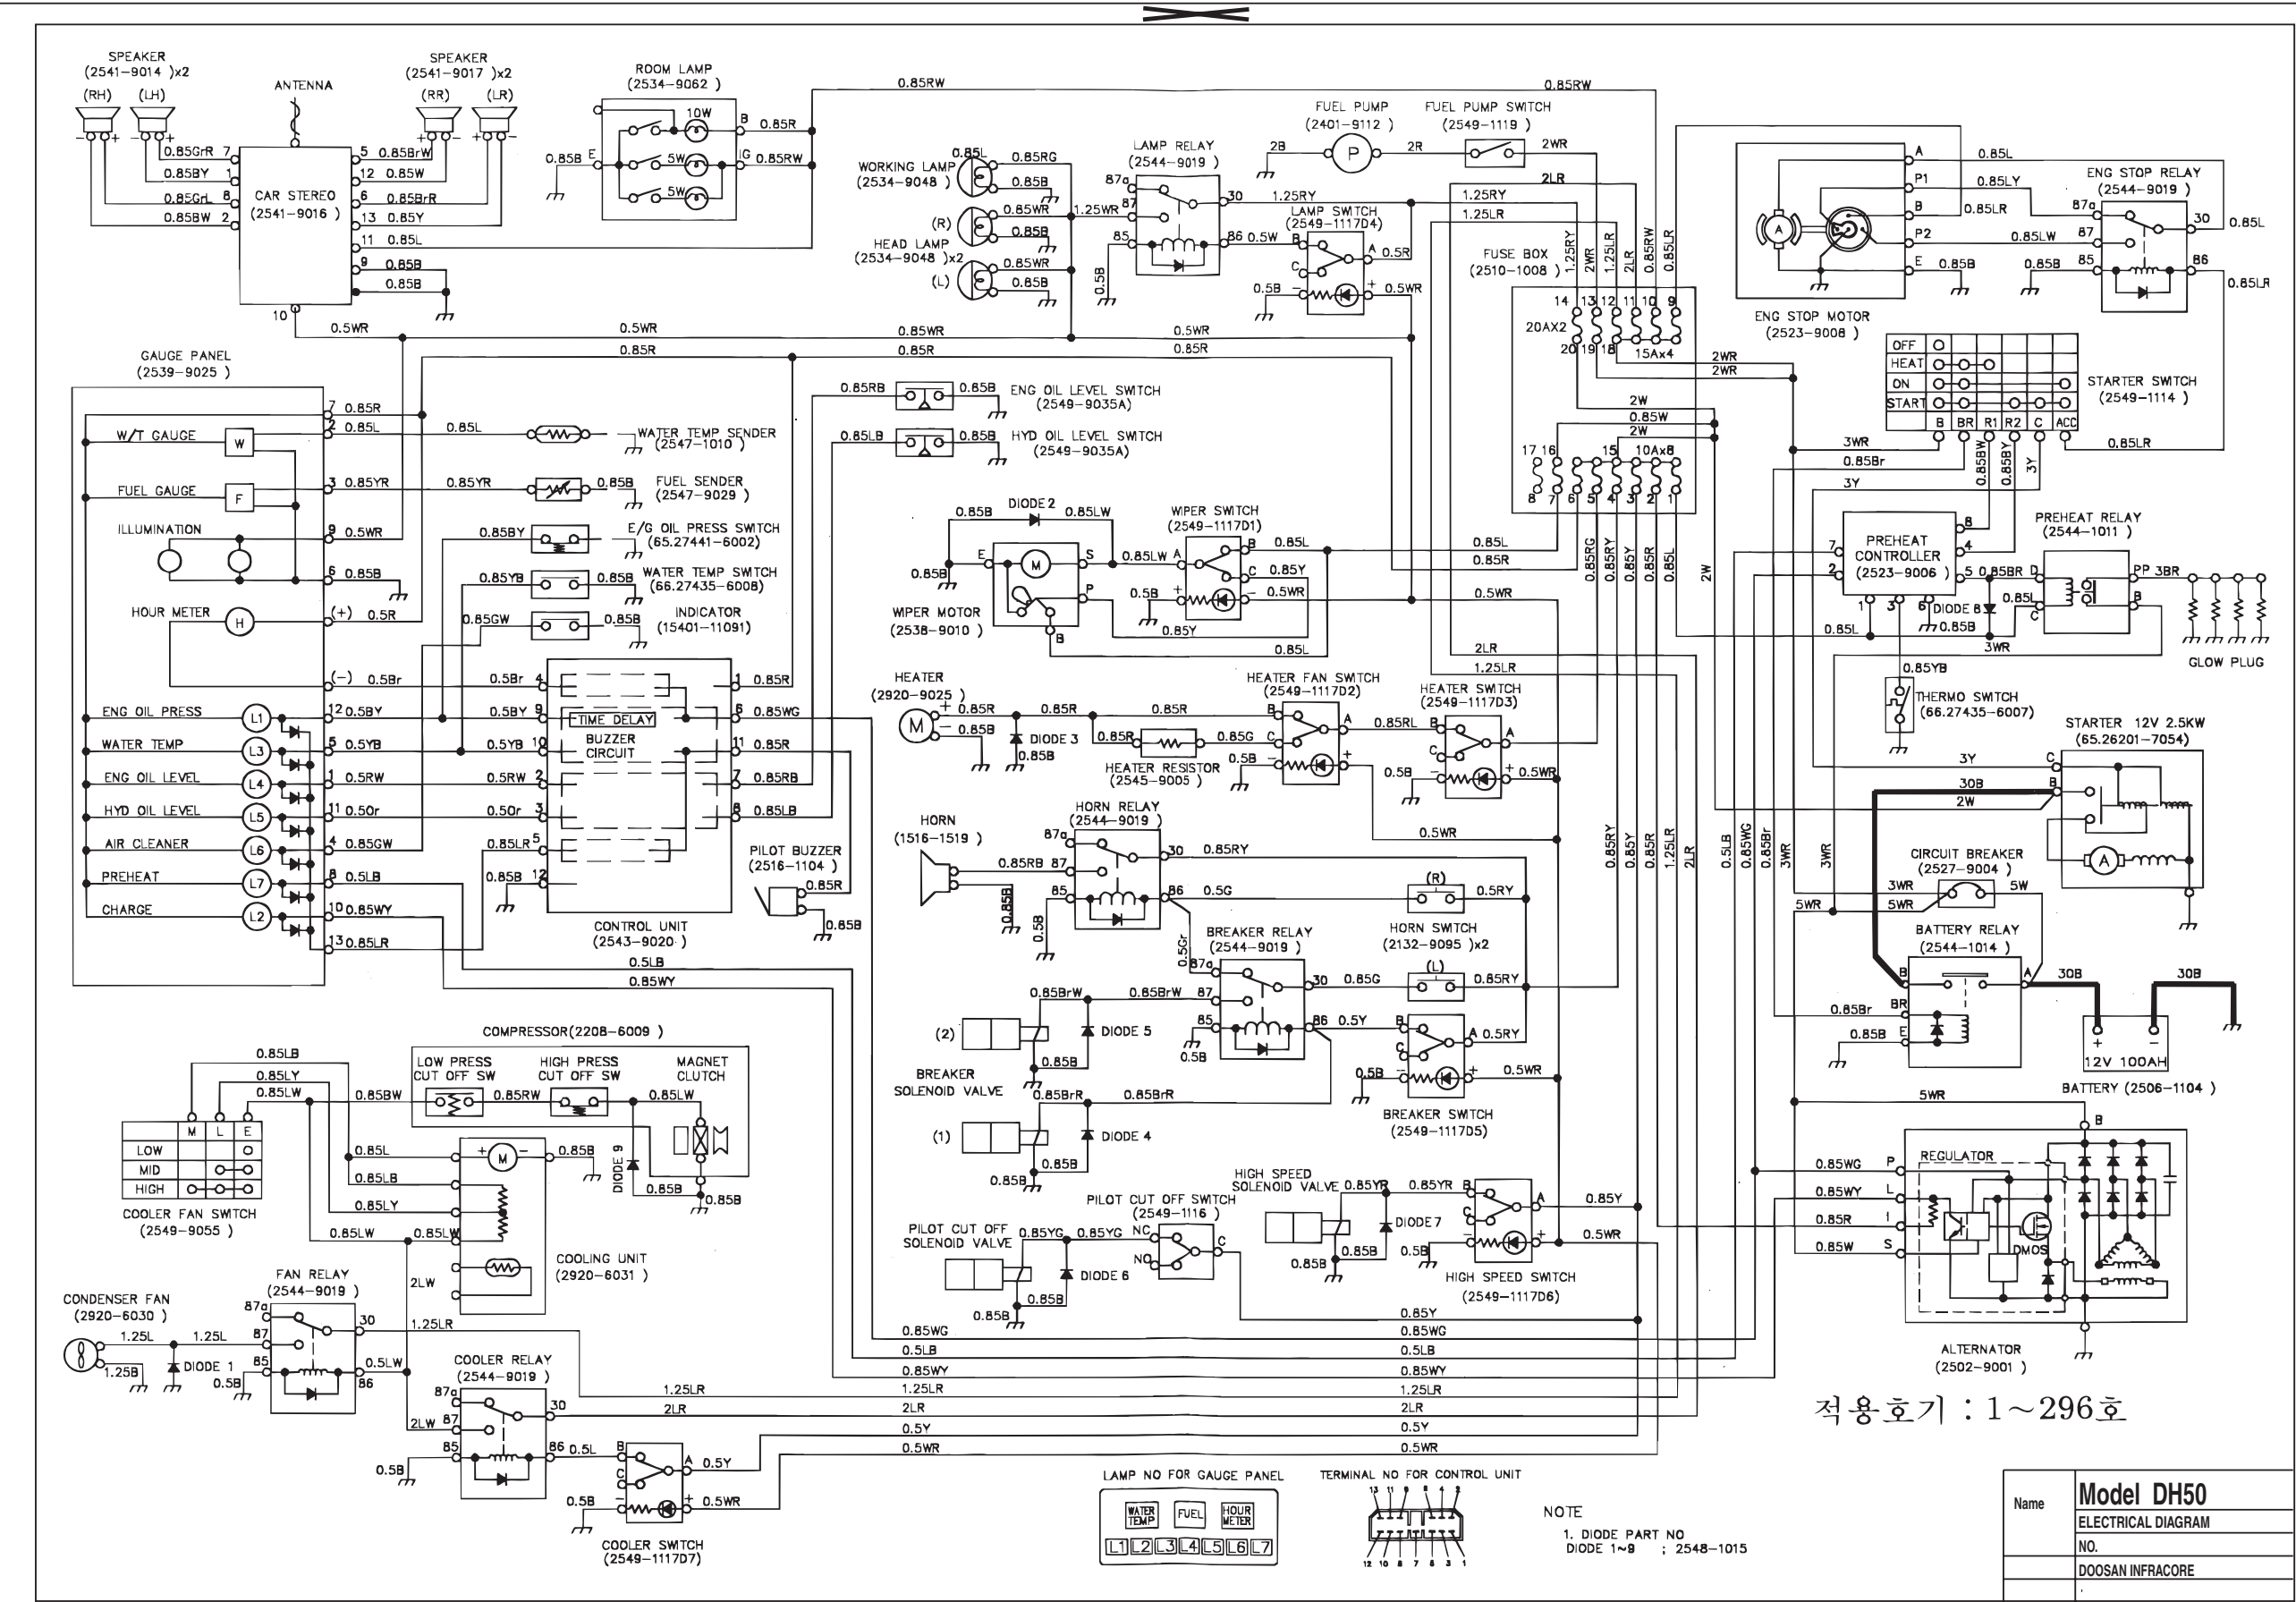


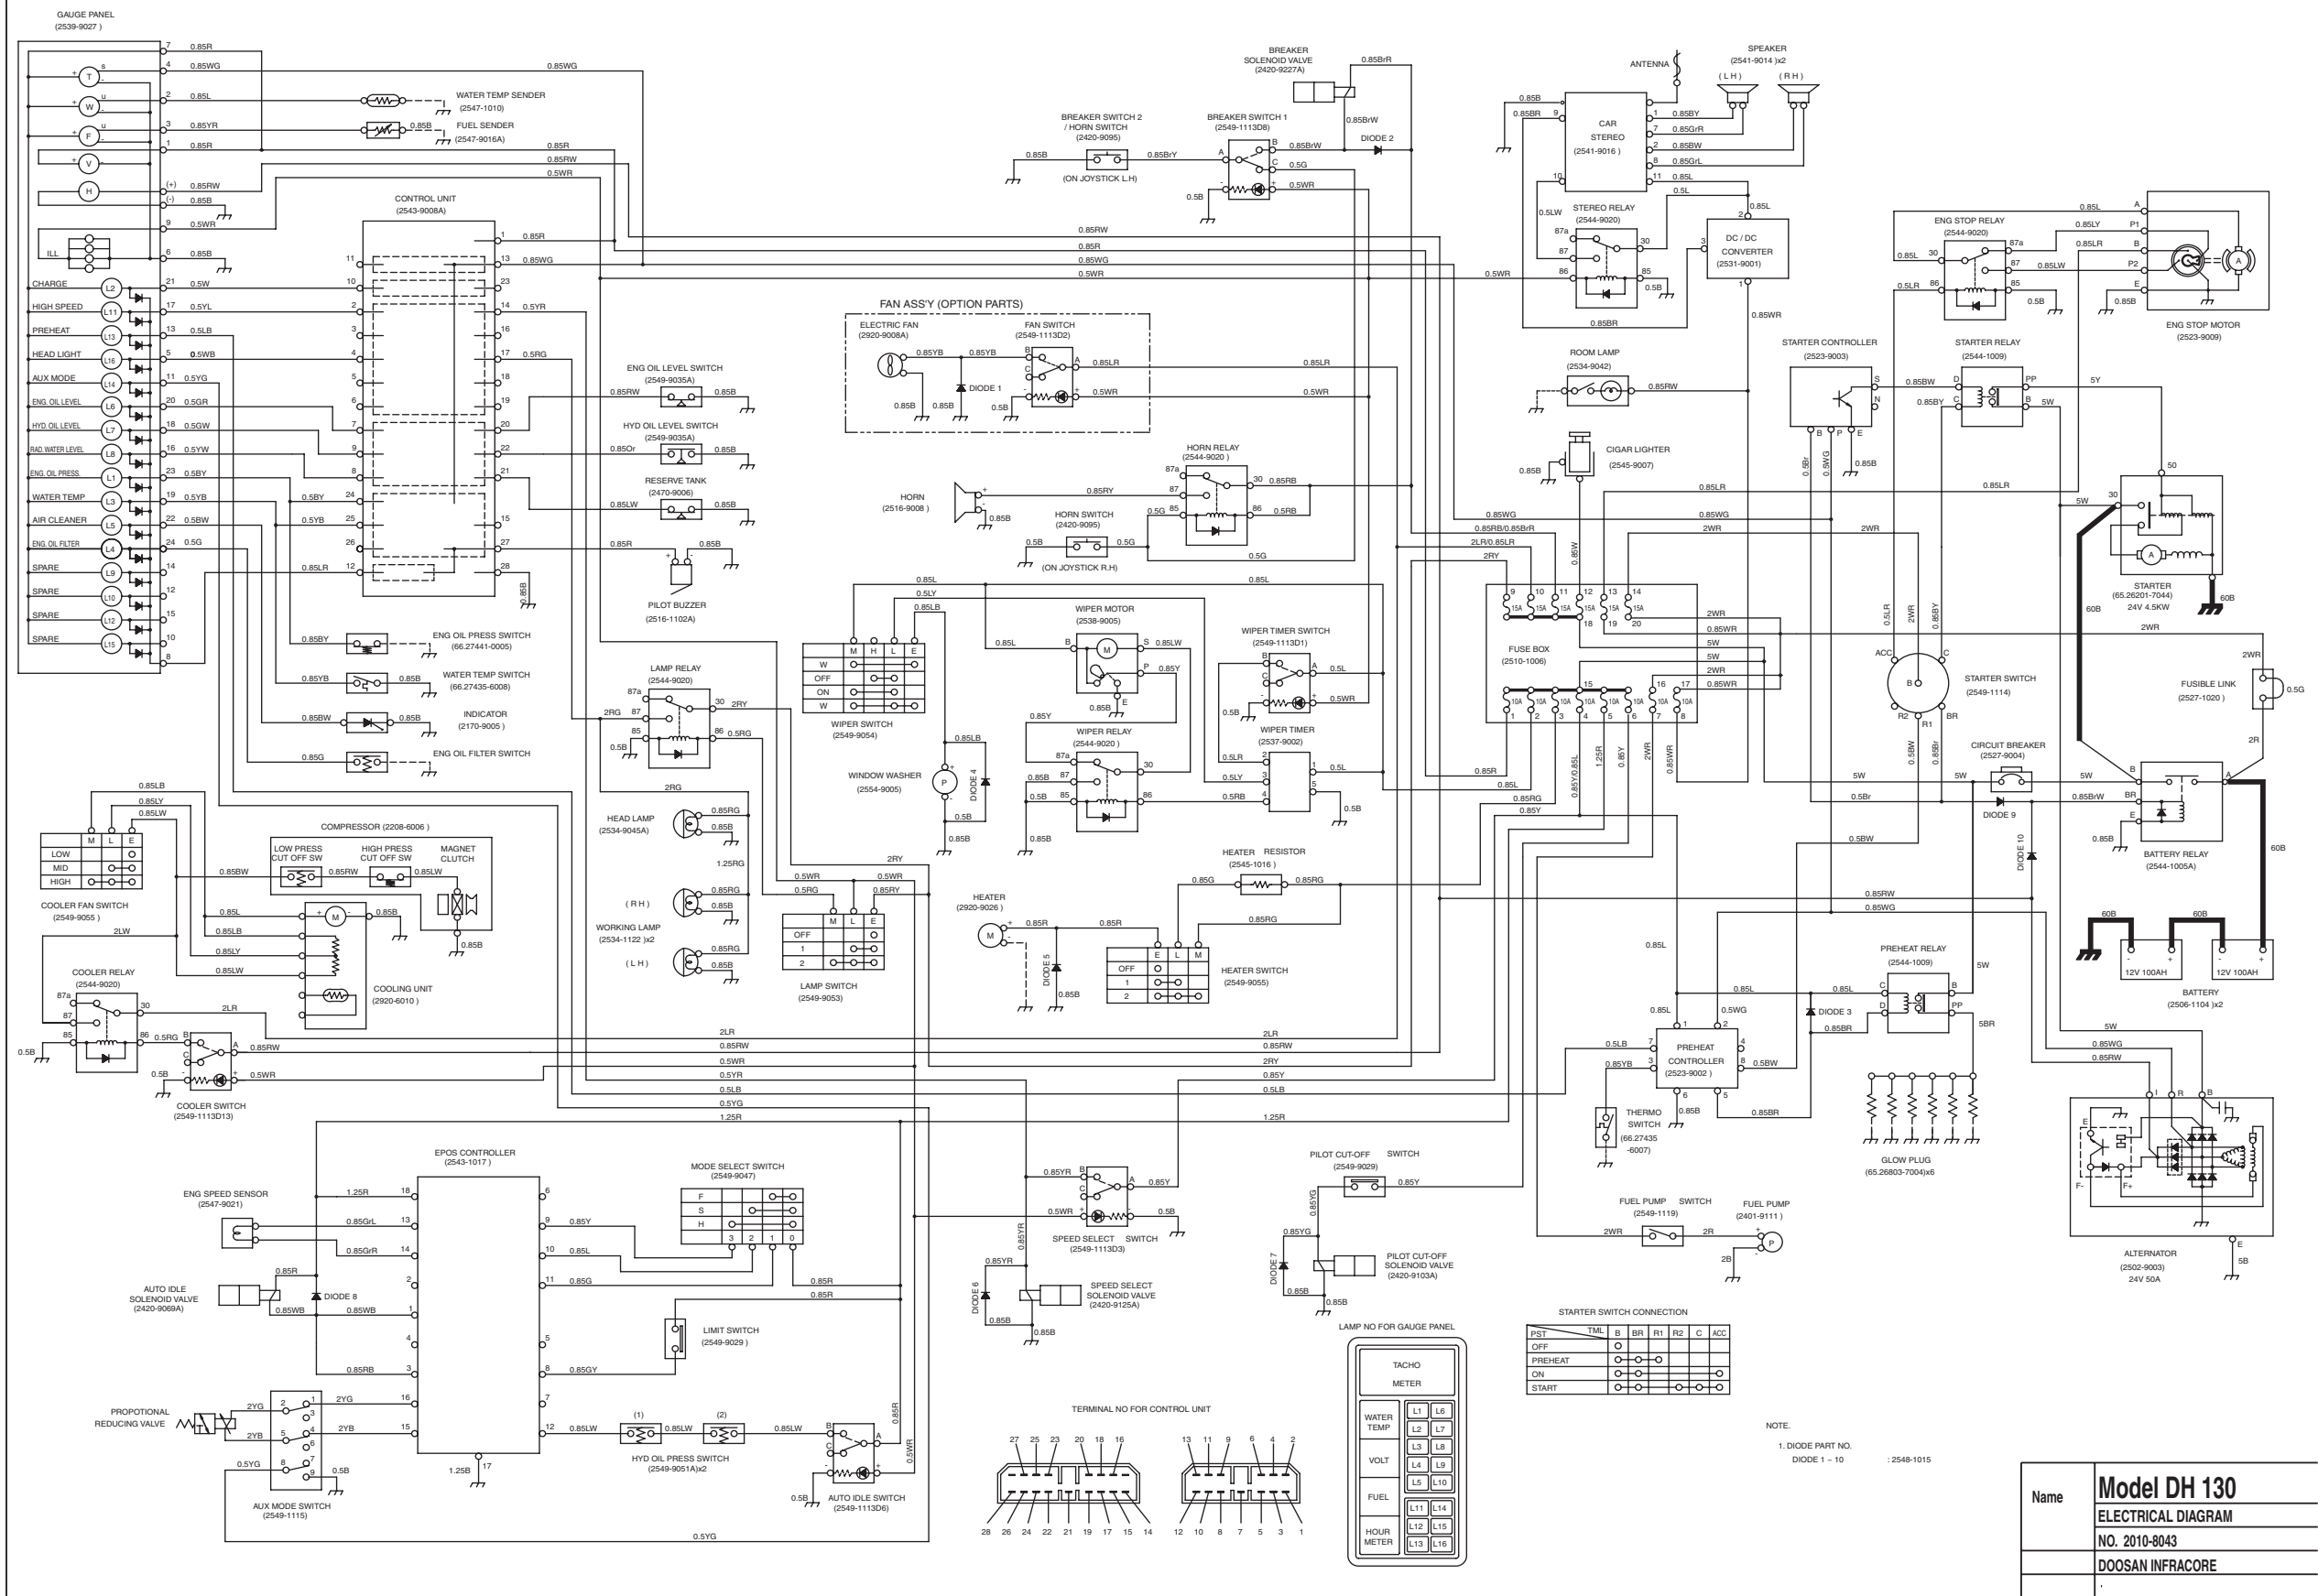

PST	TML	B	BR	R1	R2	C	ACC
OFF							
PREHEAT							
ON							
START							

NOTE:
1. DIODE PART NO.
DIODE 1 - 10 : 2548-1015


Name	Model DH 130
	ELECTRICAL DIAGRAM
	NO. 2010-8043
	DOOSAN INFRACORE

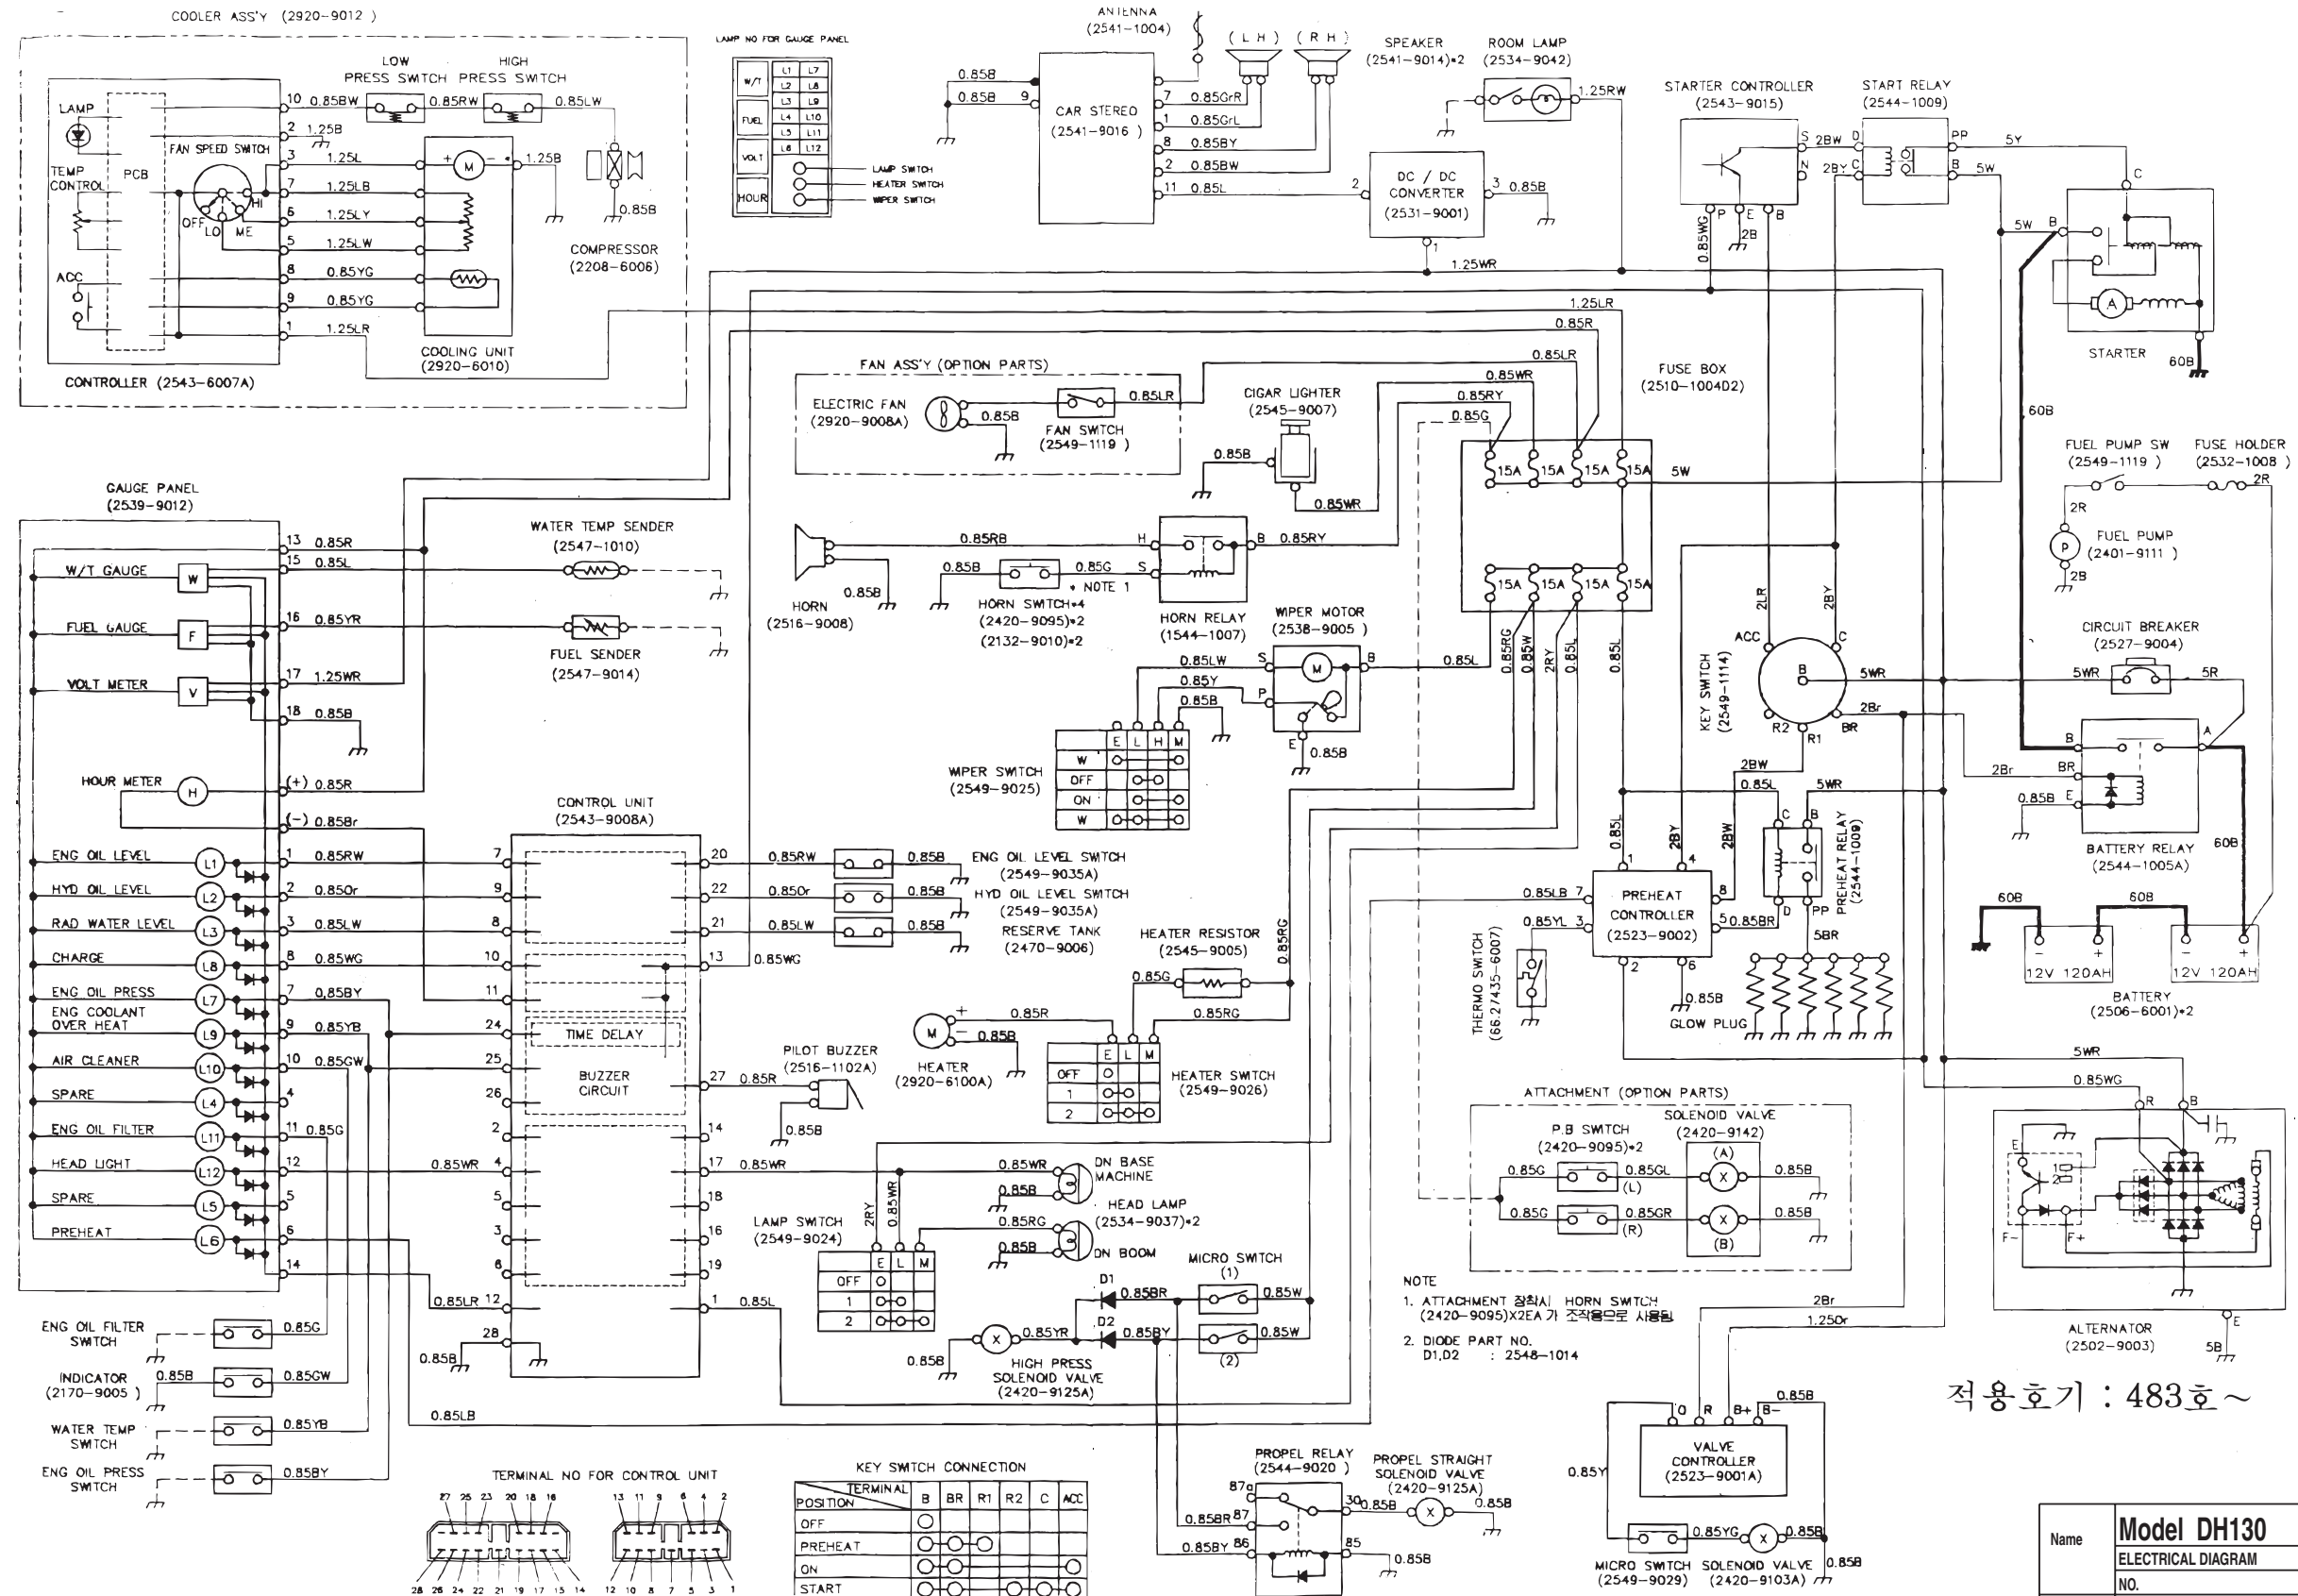



적용호기 : 483호~

Name	Model DH130
	ELECTRICAL DIAGRAM
	NO.
	DOOSAN INFRACORE




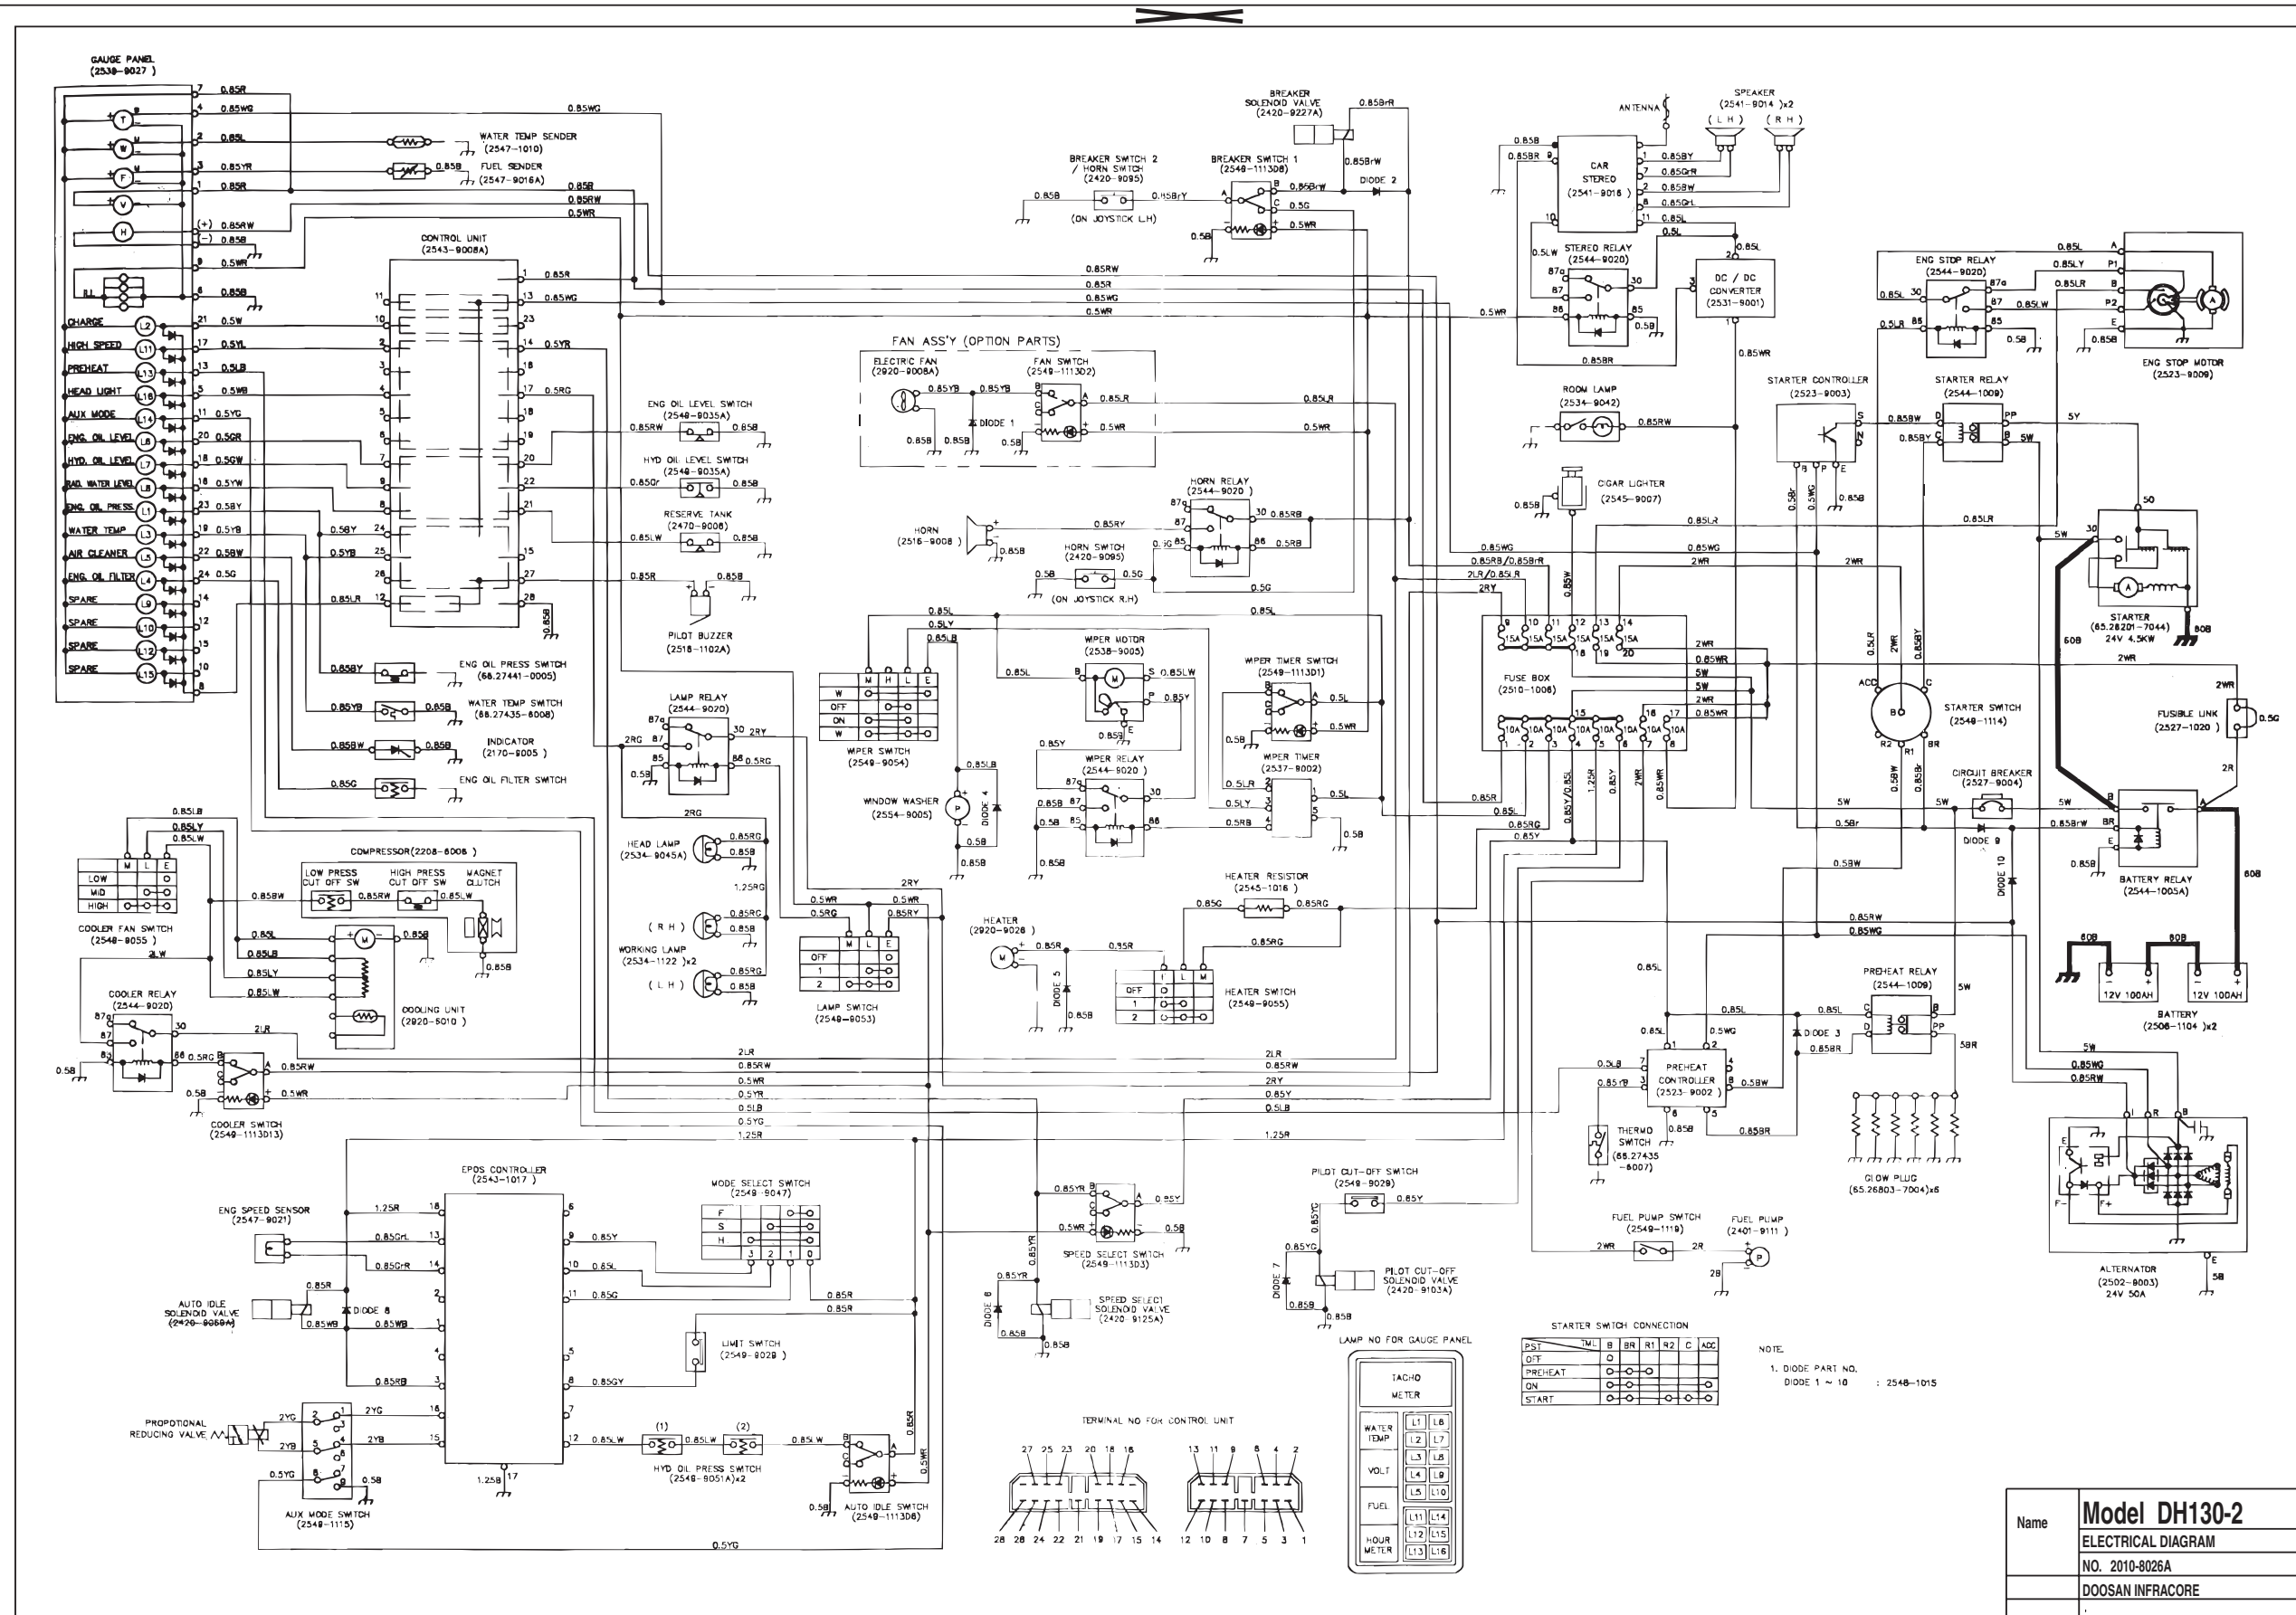

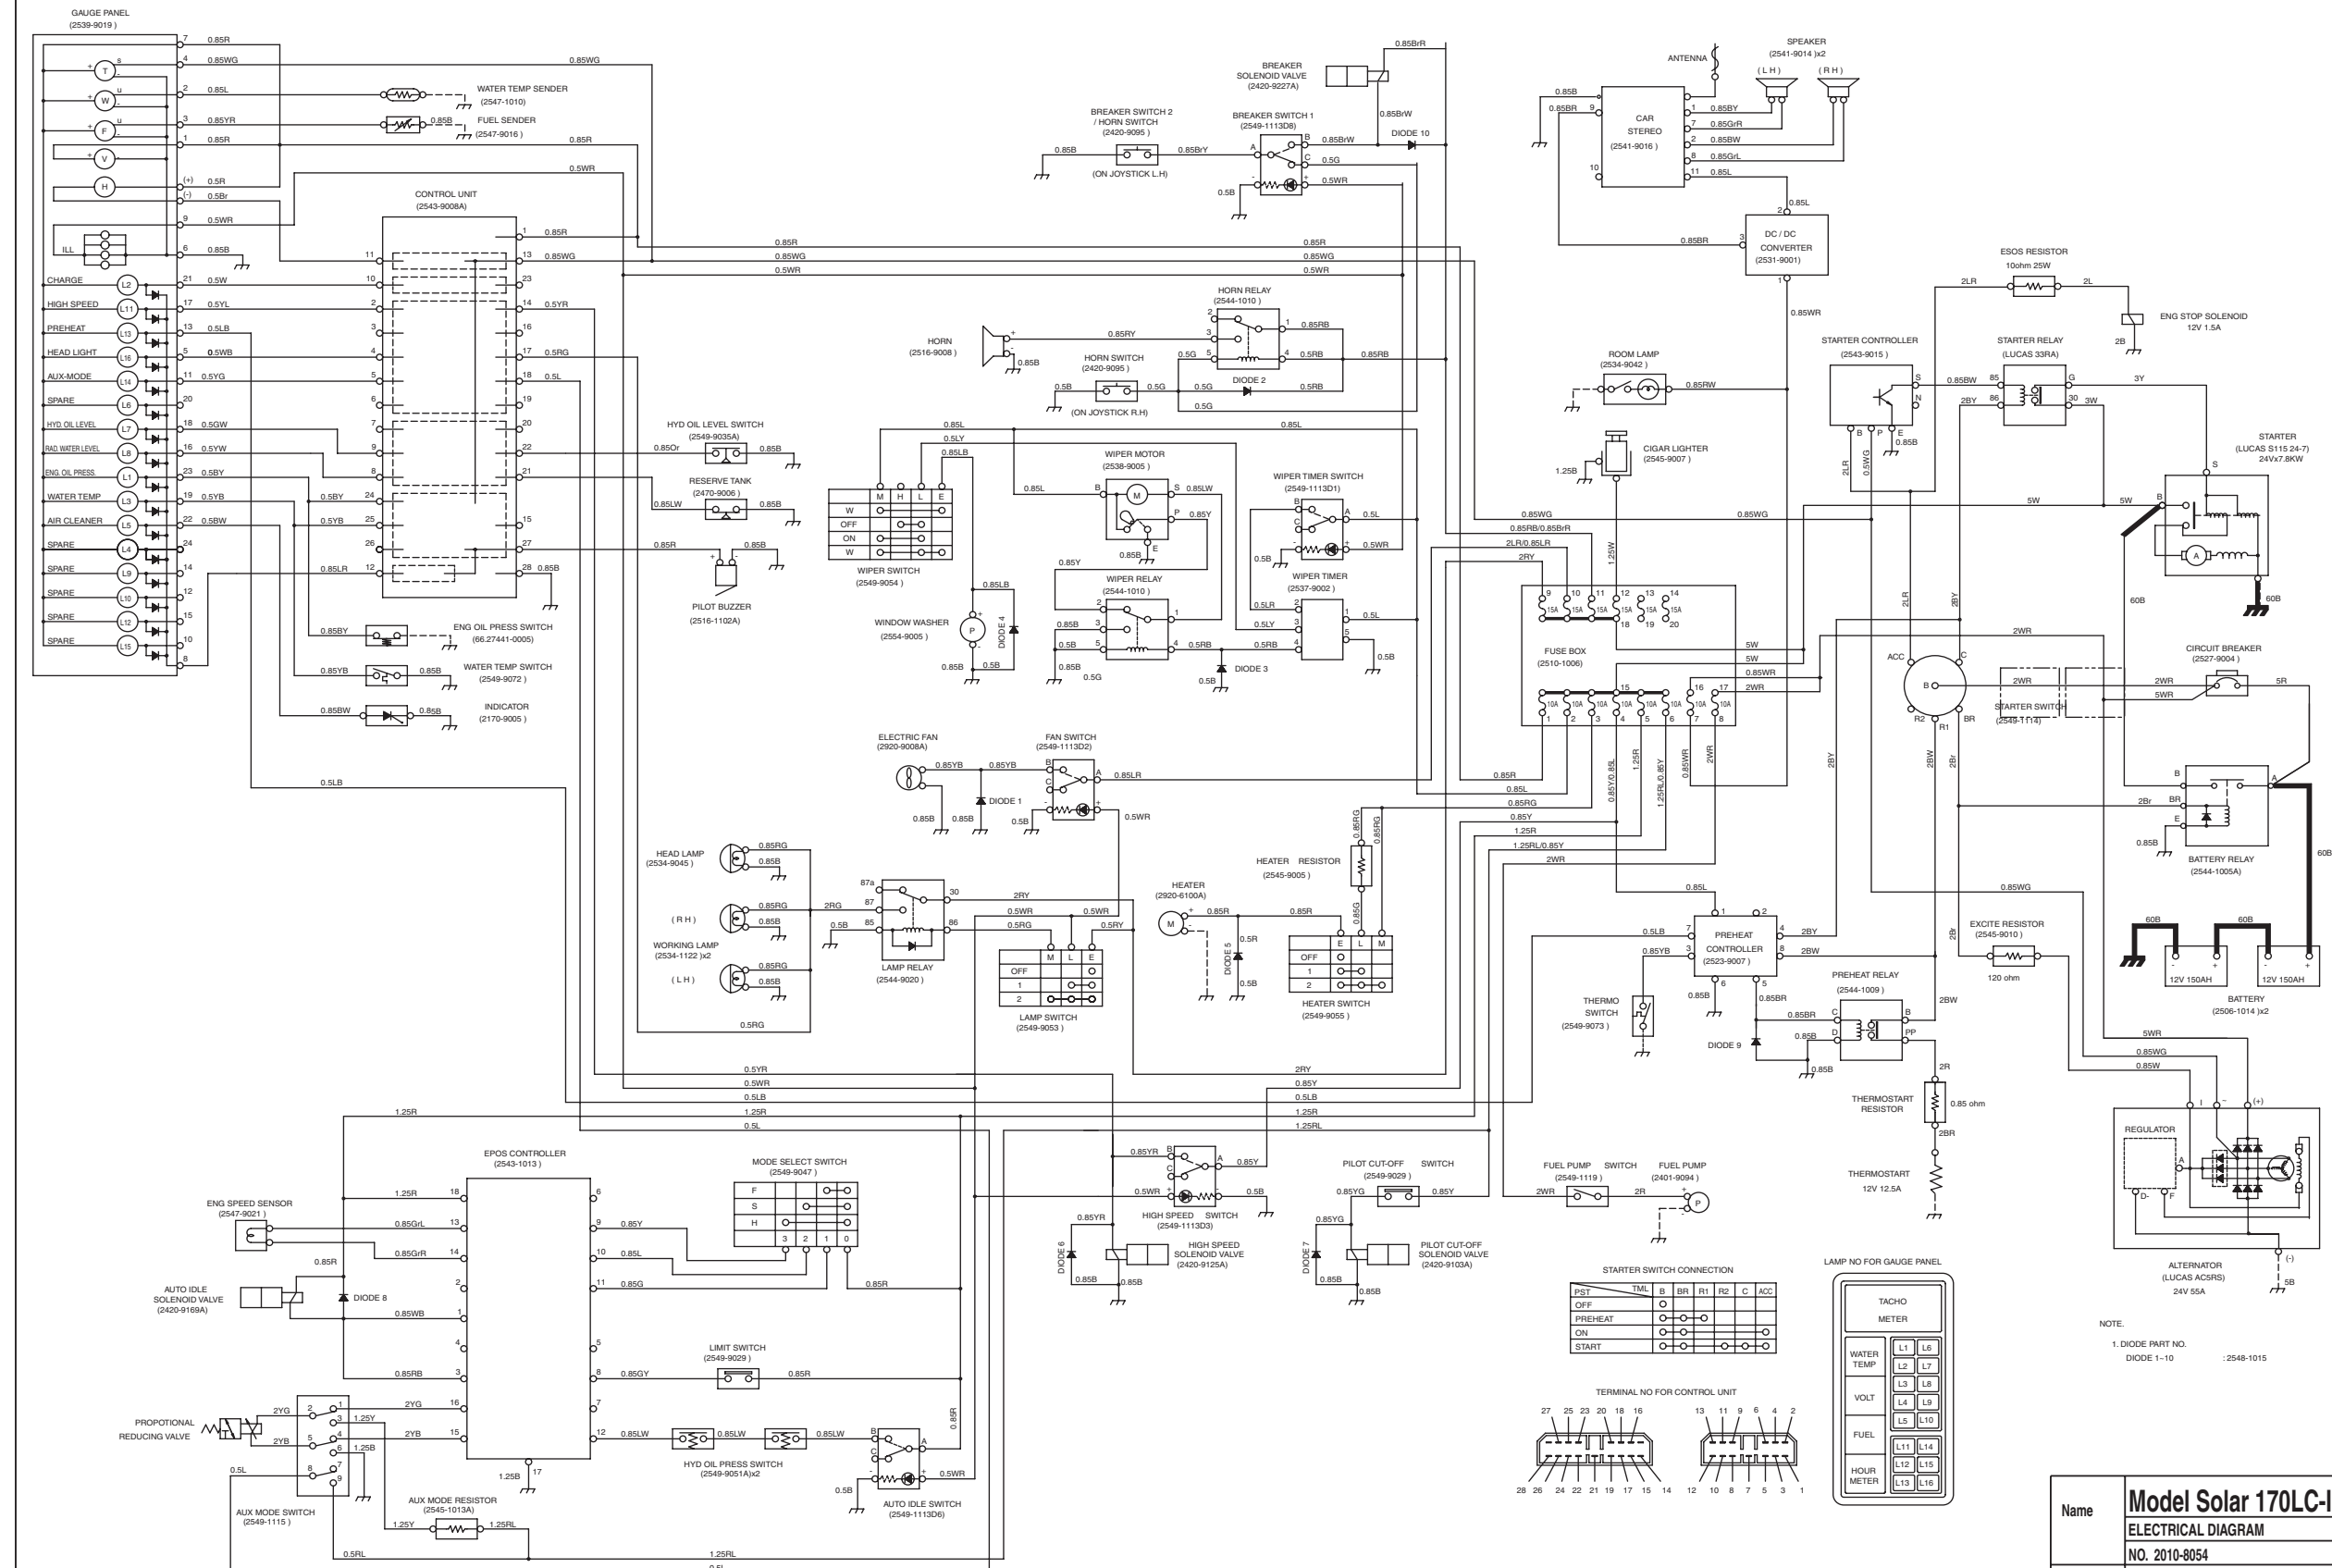


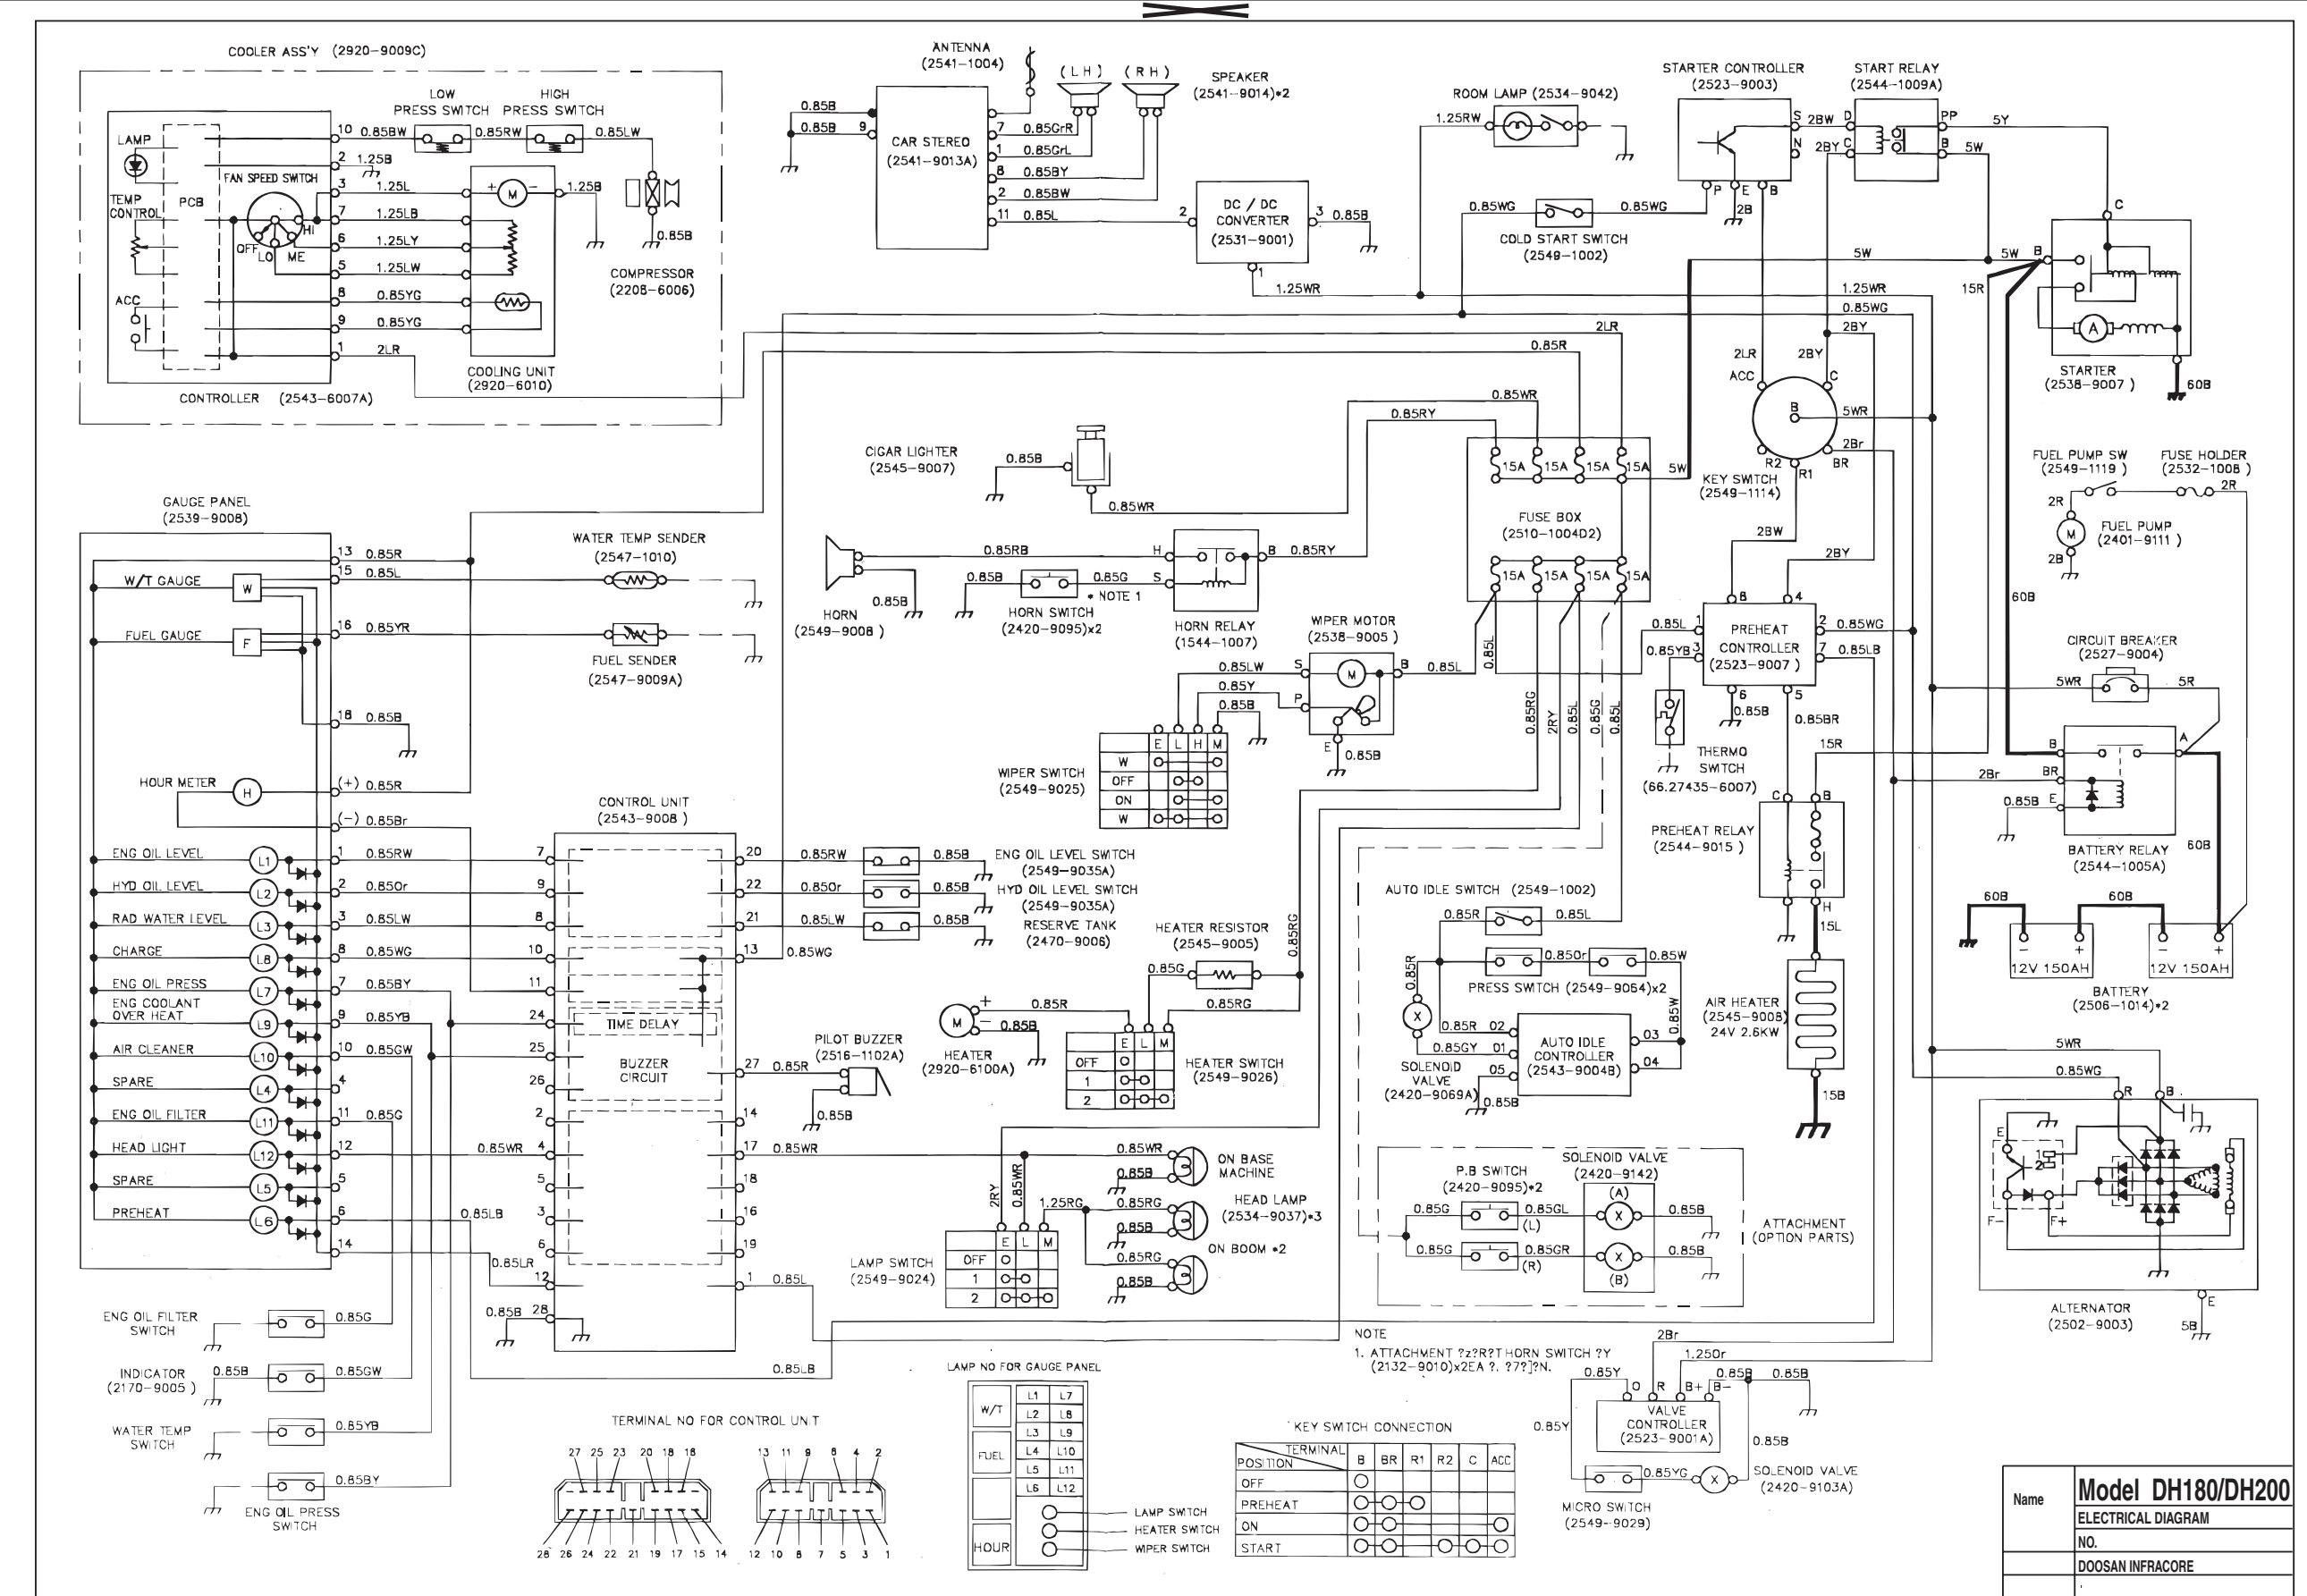


Name	Model DH180/DH200
	ELECTRICAL DIAGRAM
	NO.
	DOOSAN INFRACORE

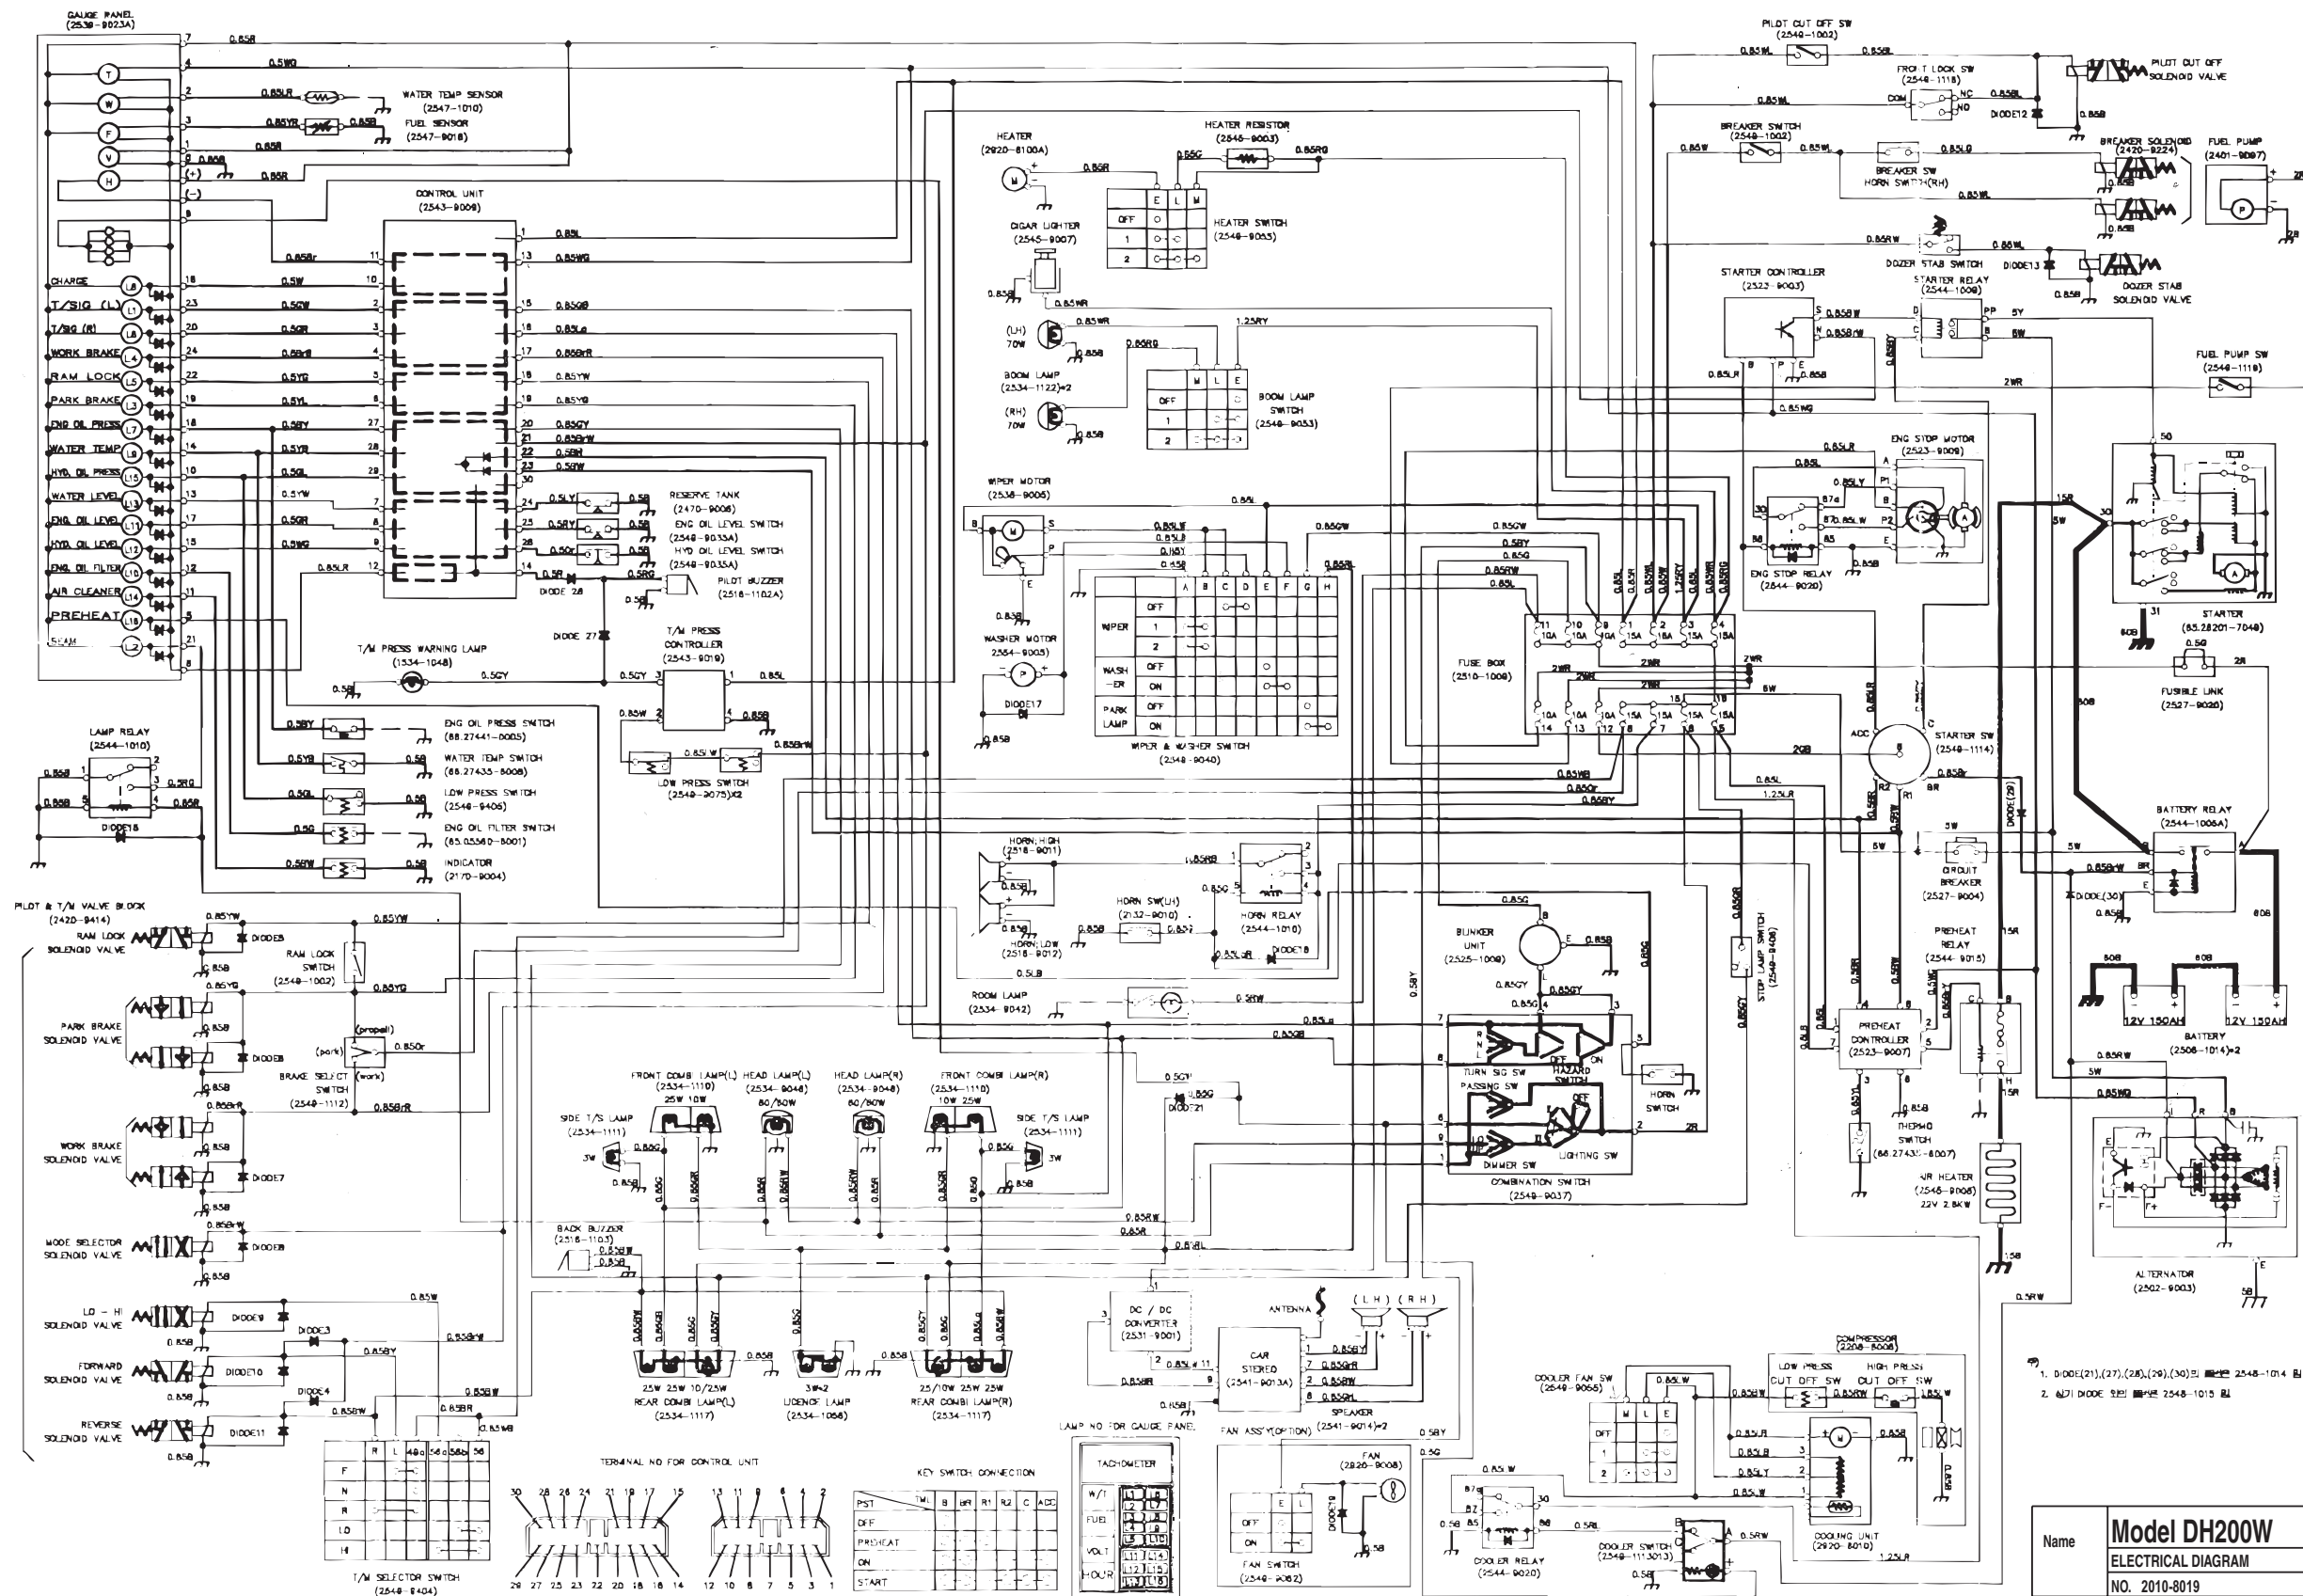



Name	Model DH200W
	ELECTRICAL DIAGRAM
	NO. 2010-8019
	DOOSAN INFRACORE

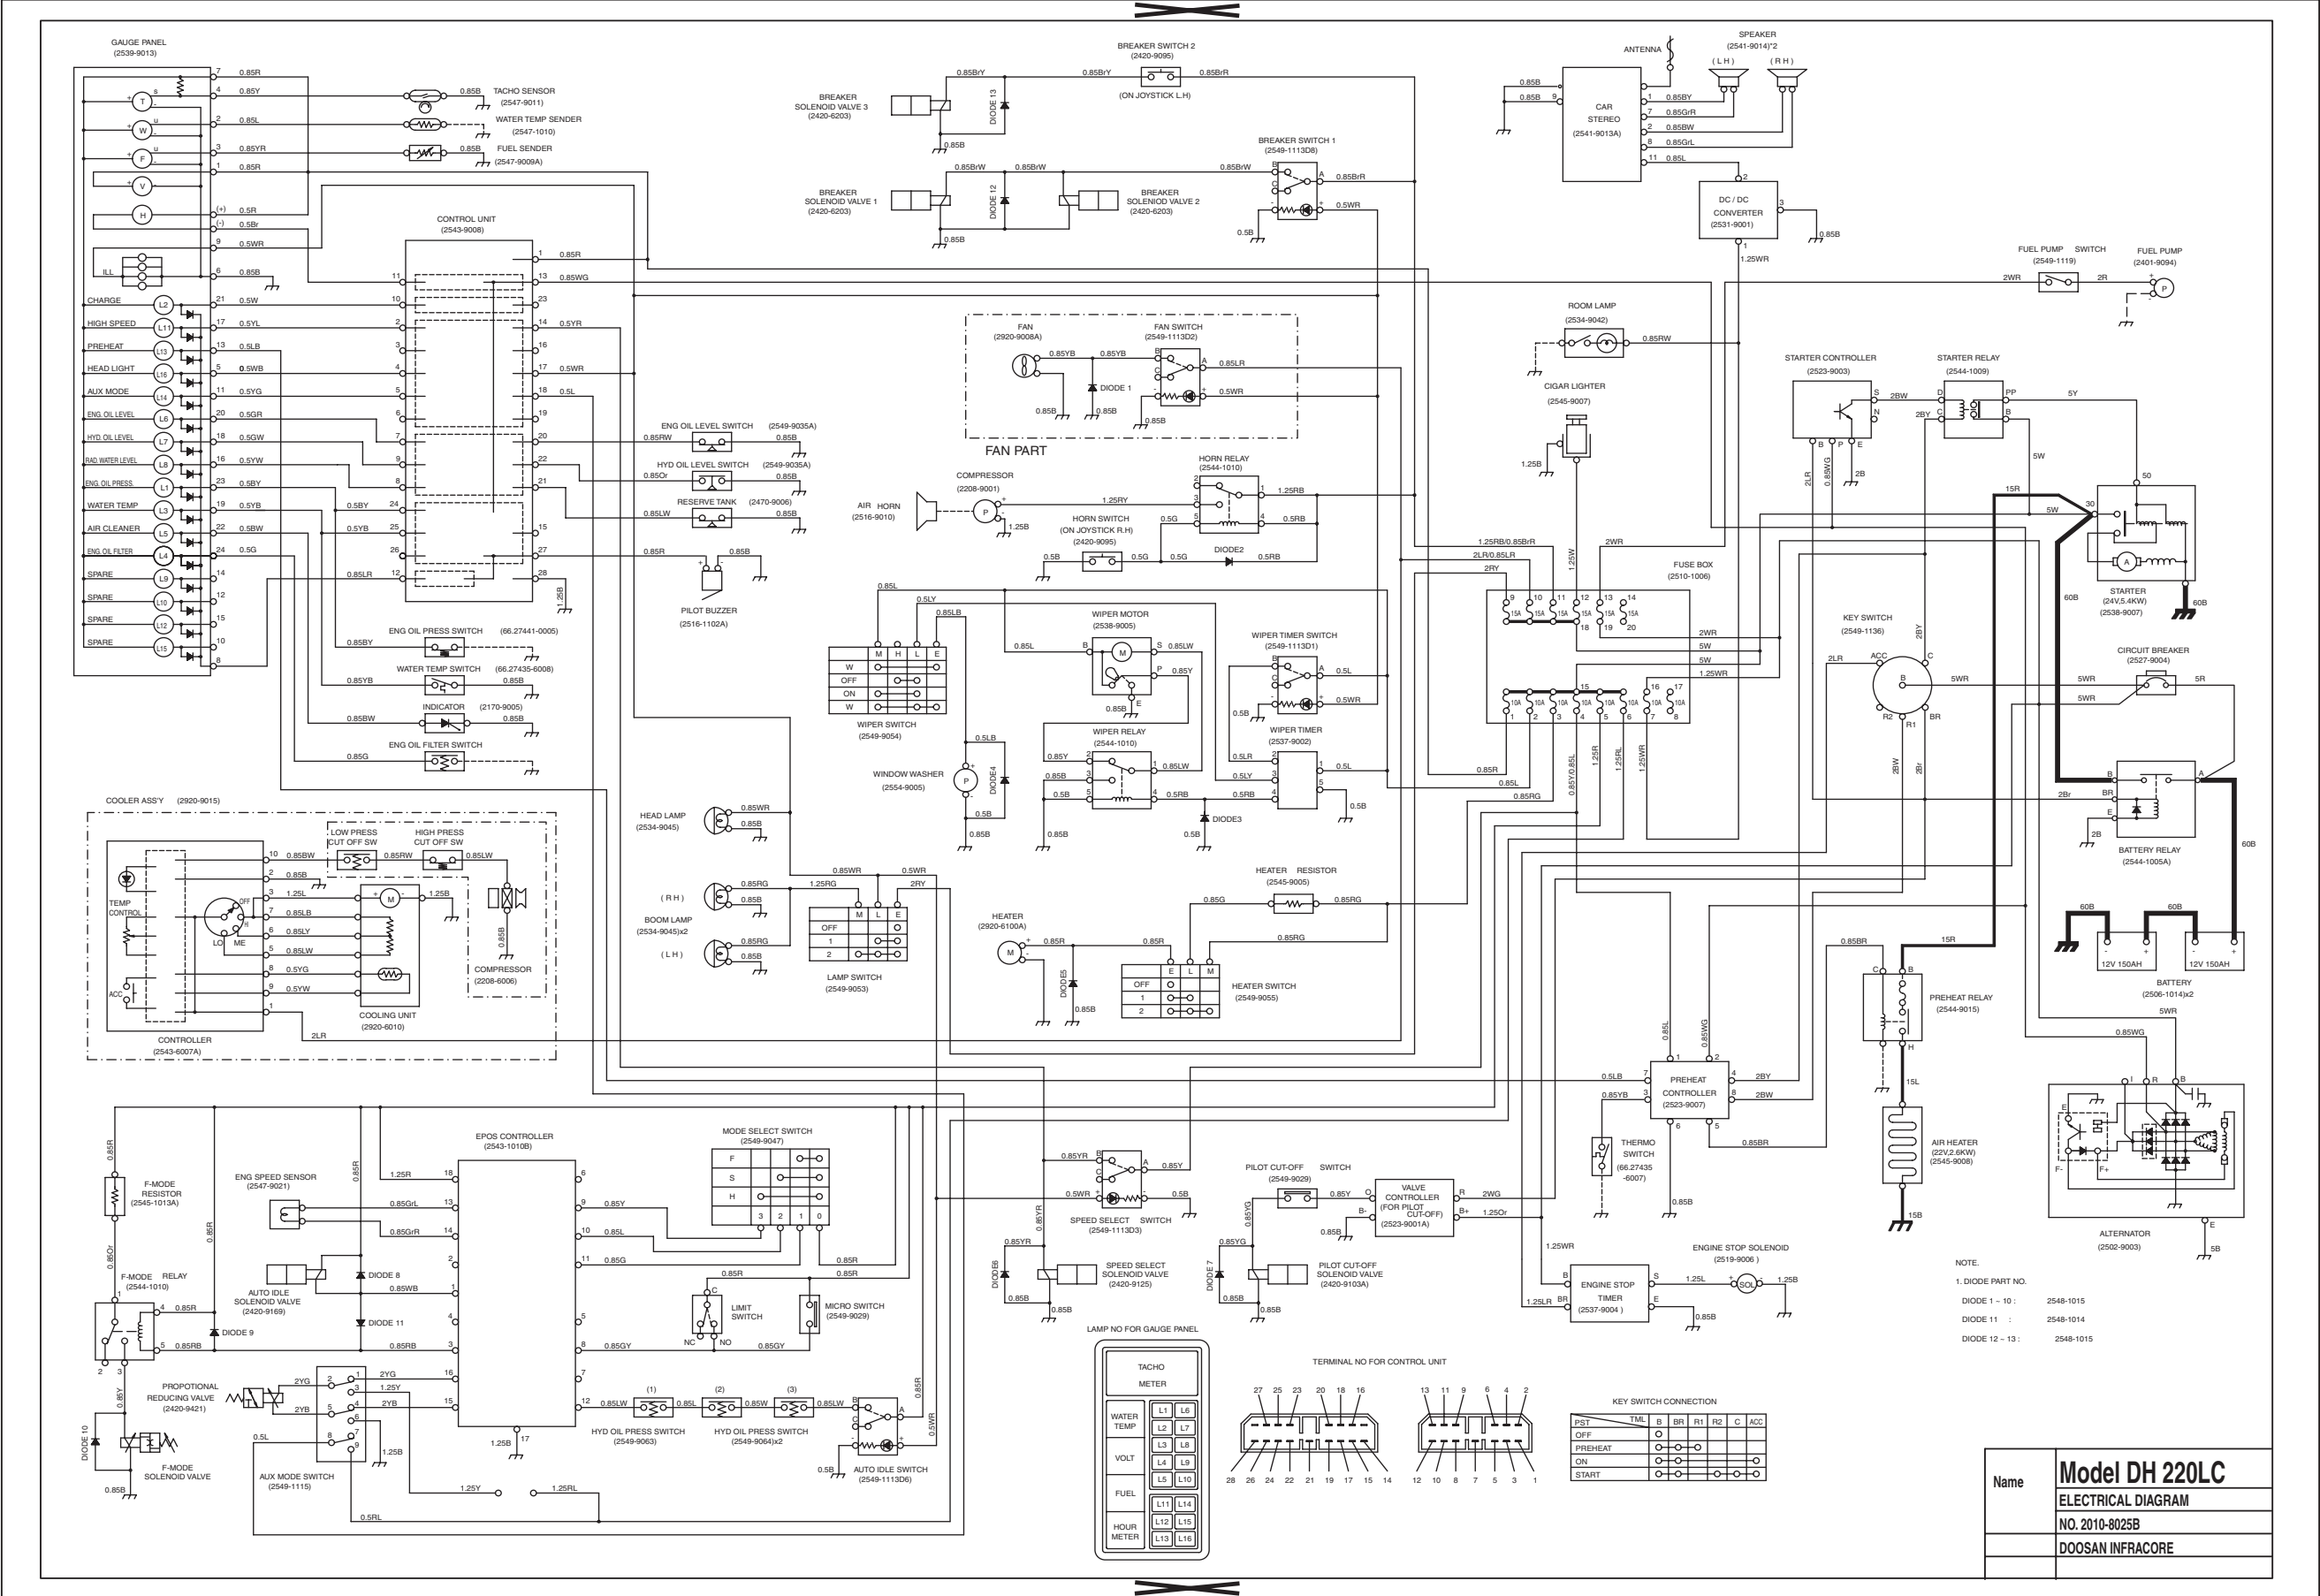


Name	Model DH 220LC
	ELECTRICAL DIAGRAM
	NO. 2010-8025B
	DOOSAN INFRACORE

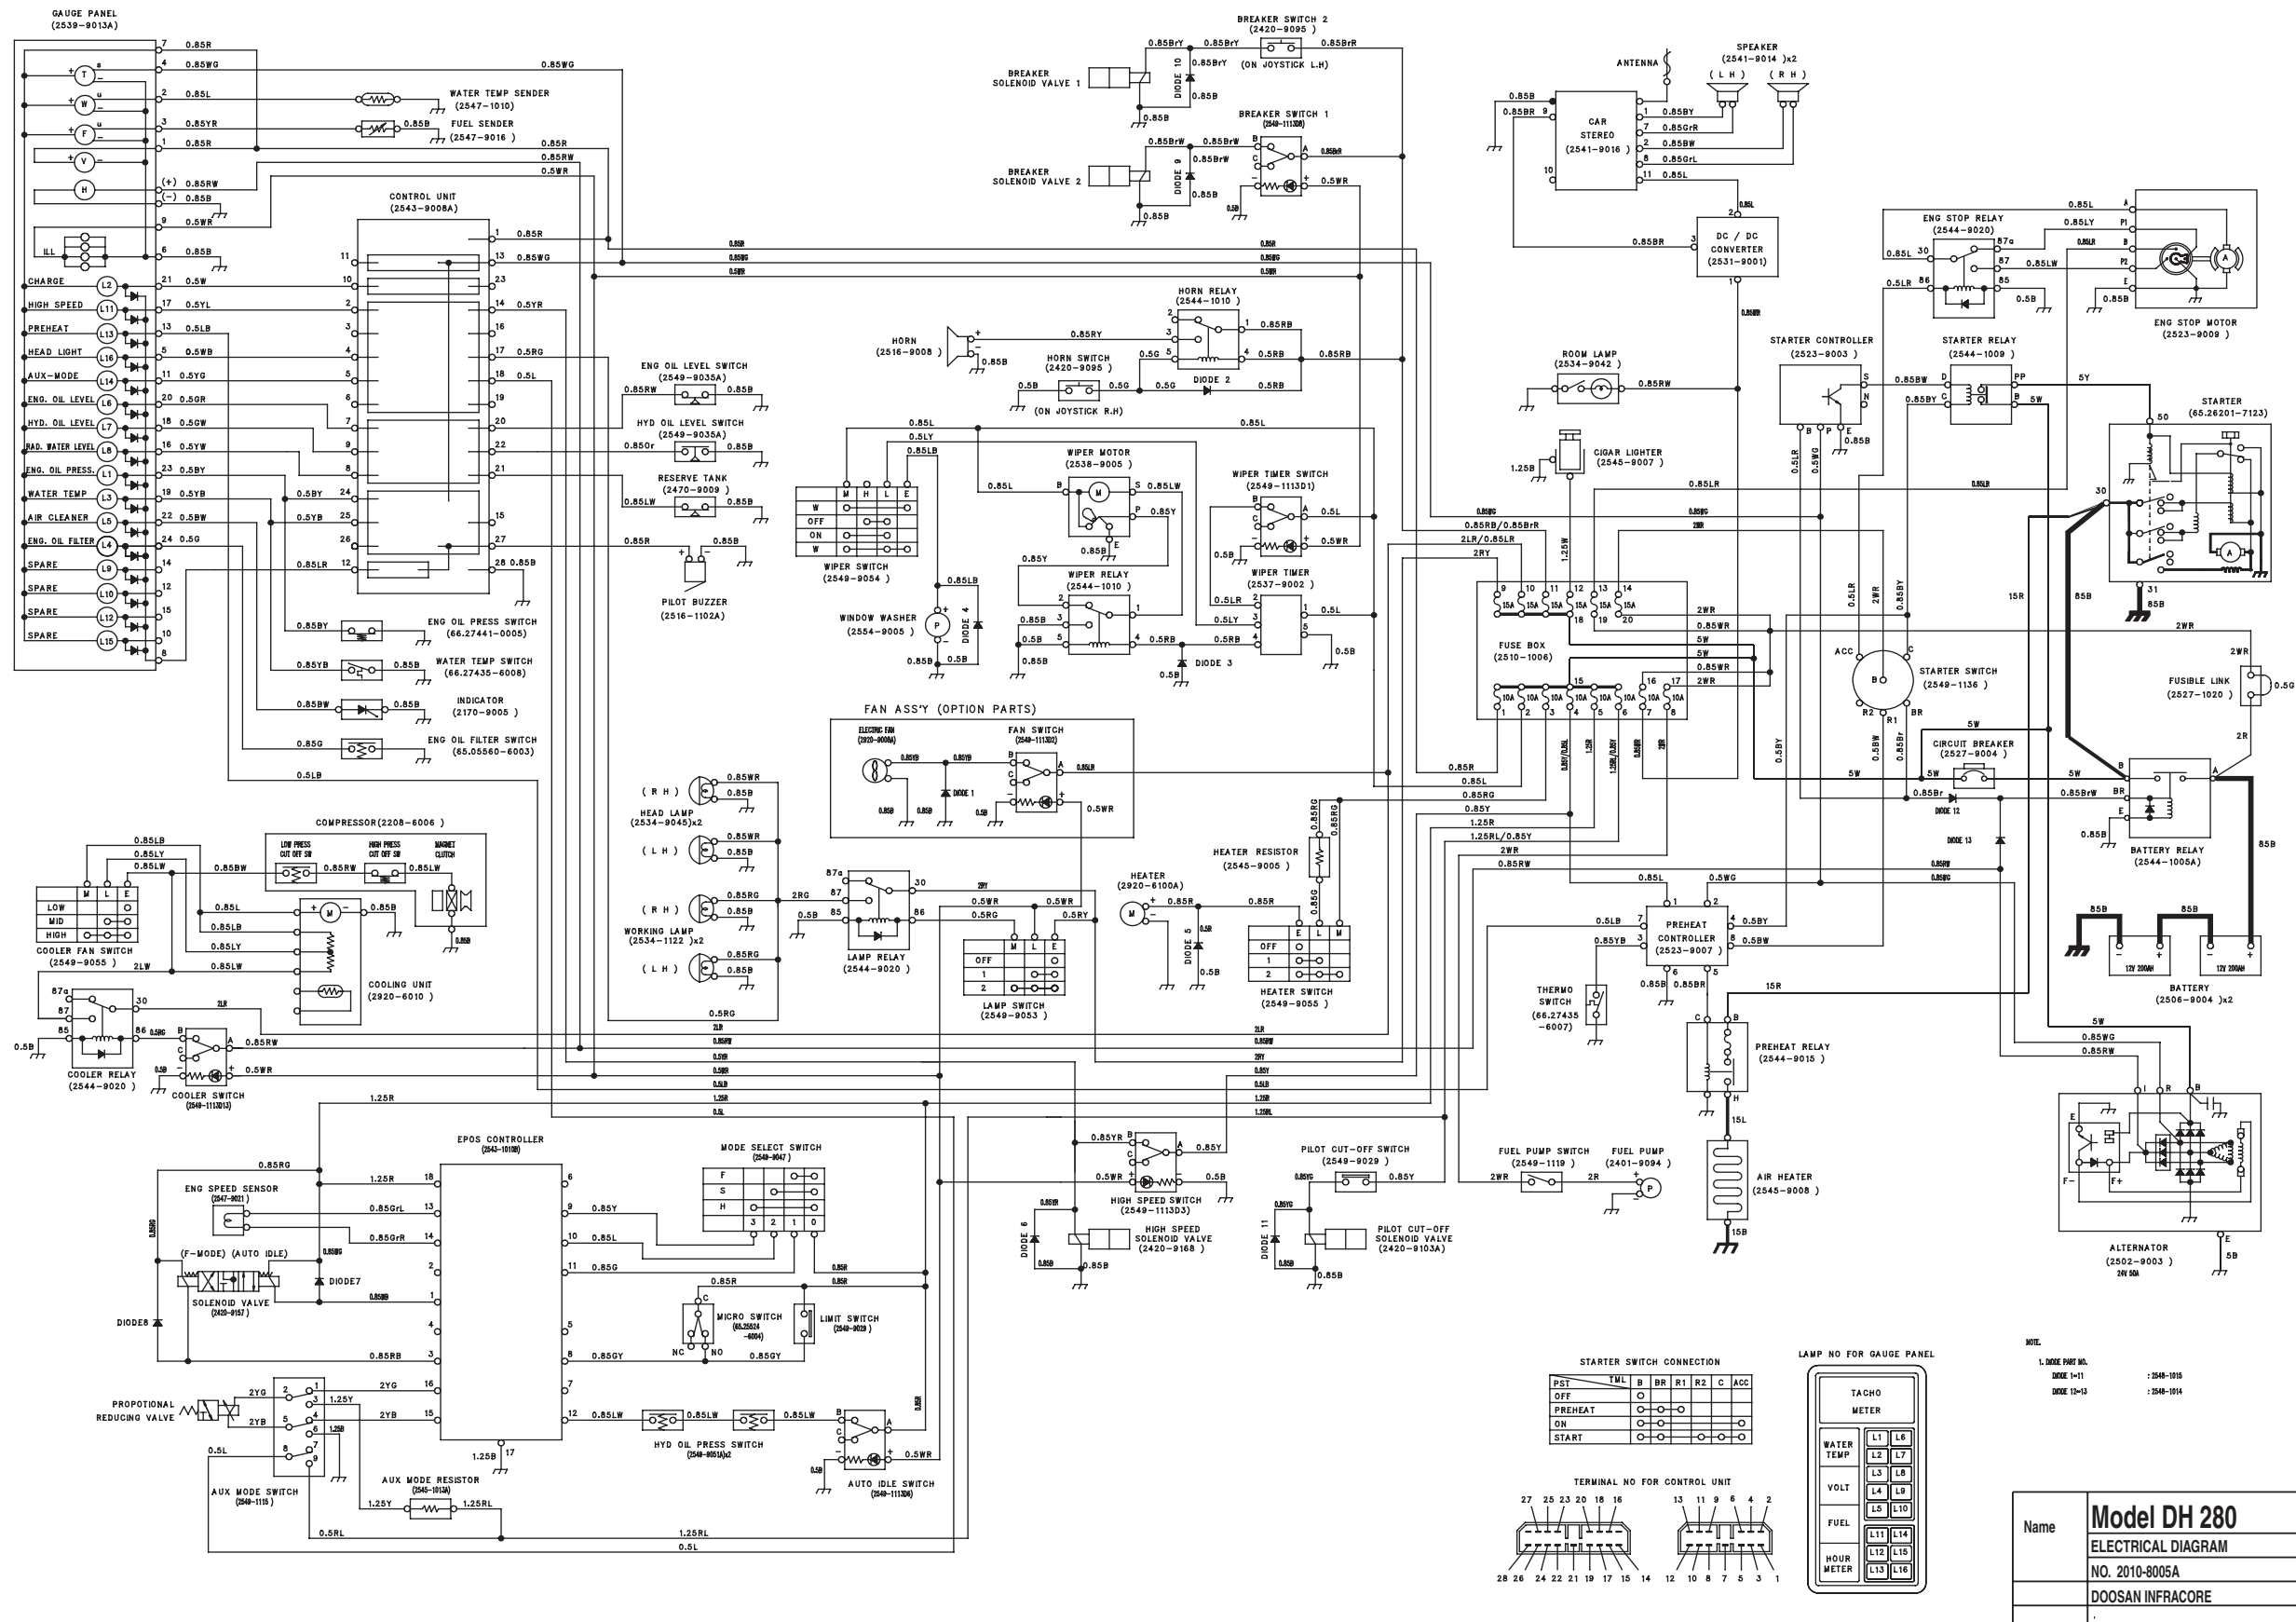

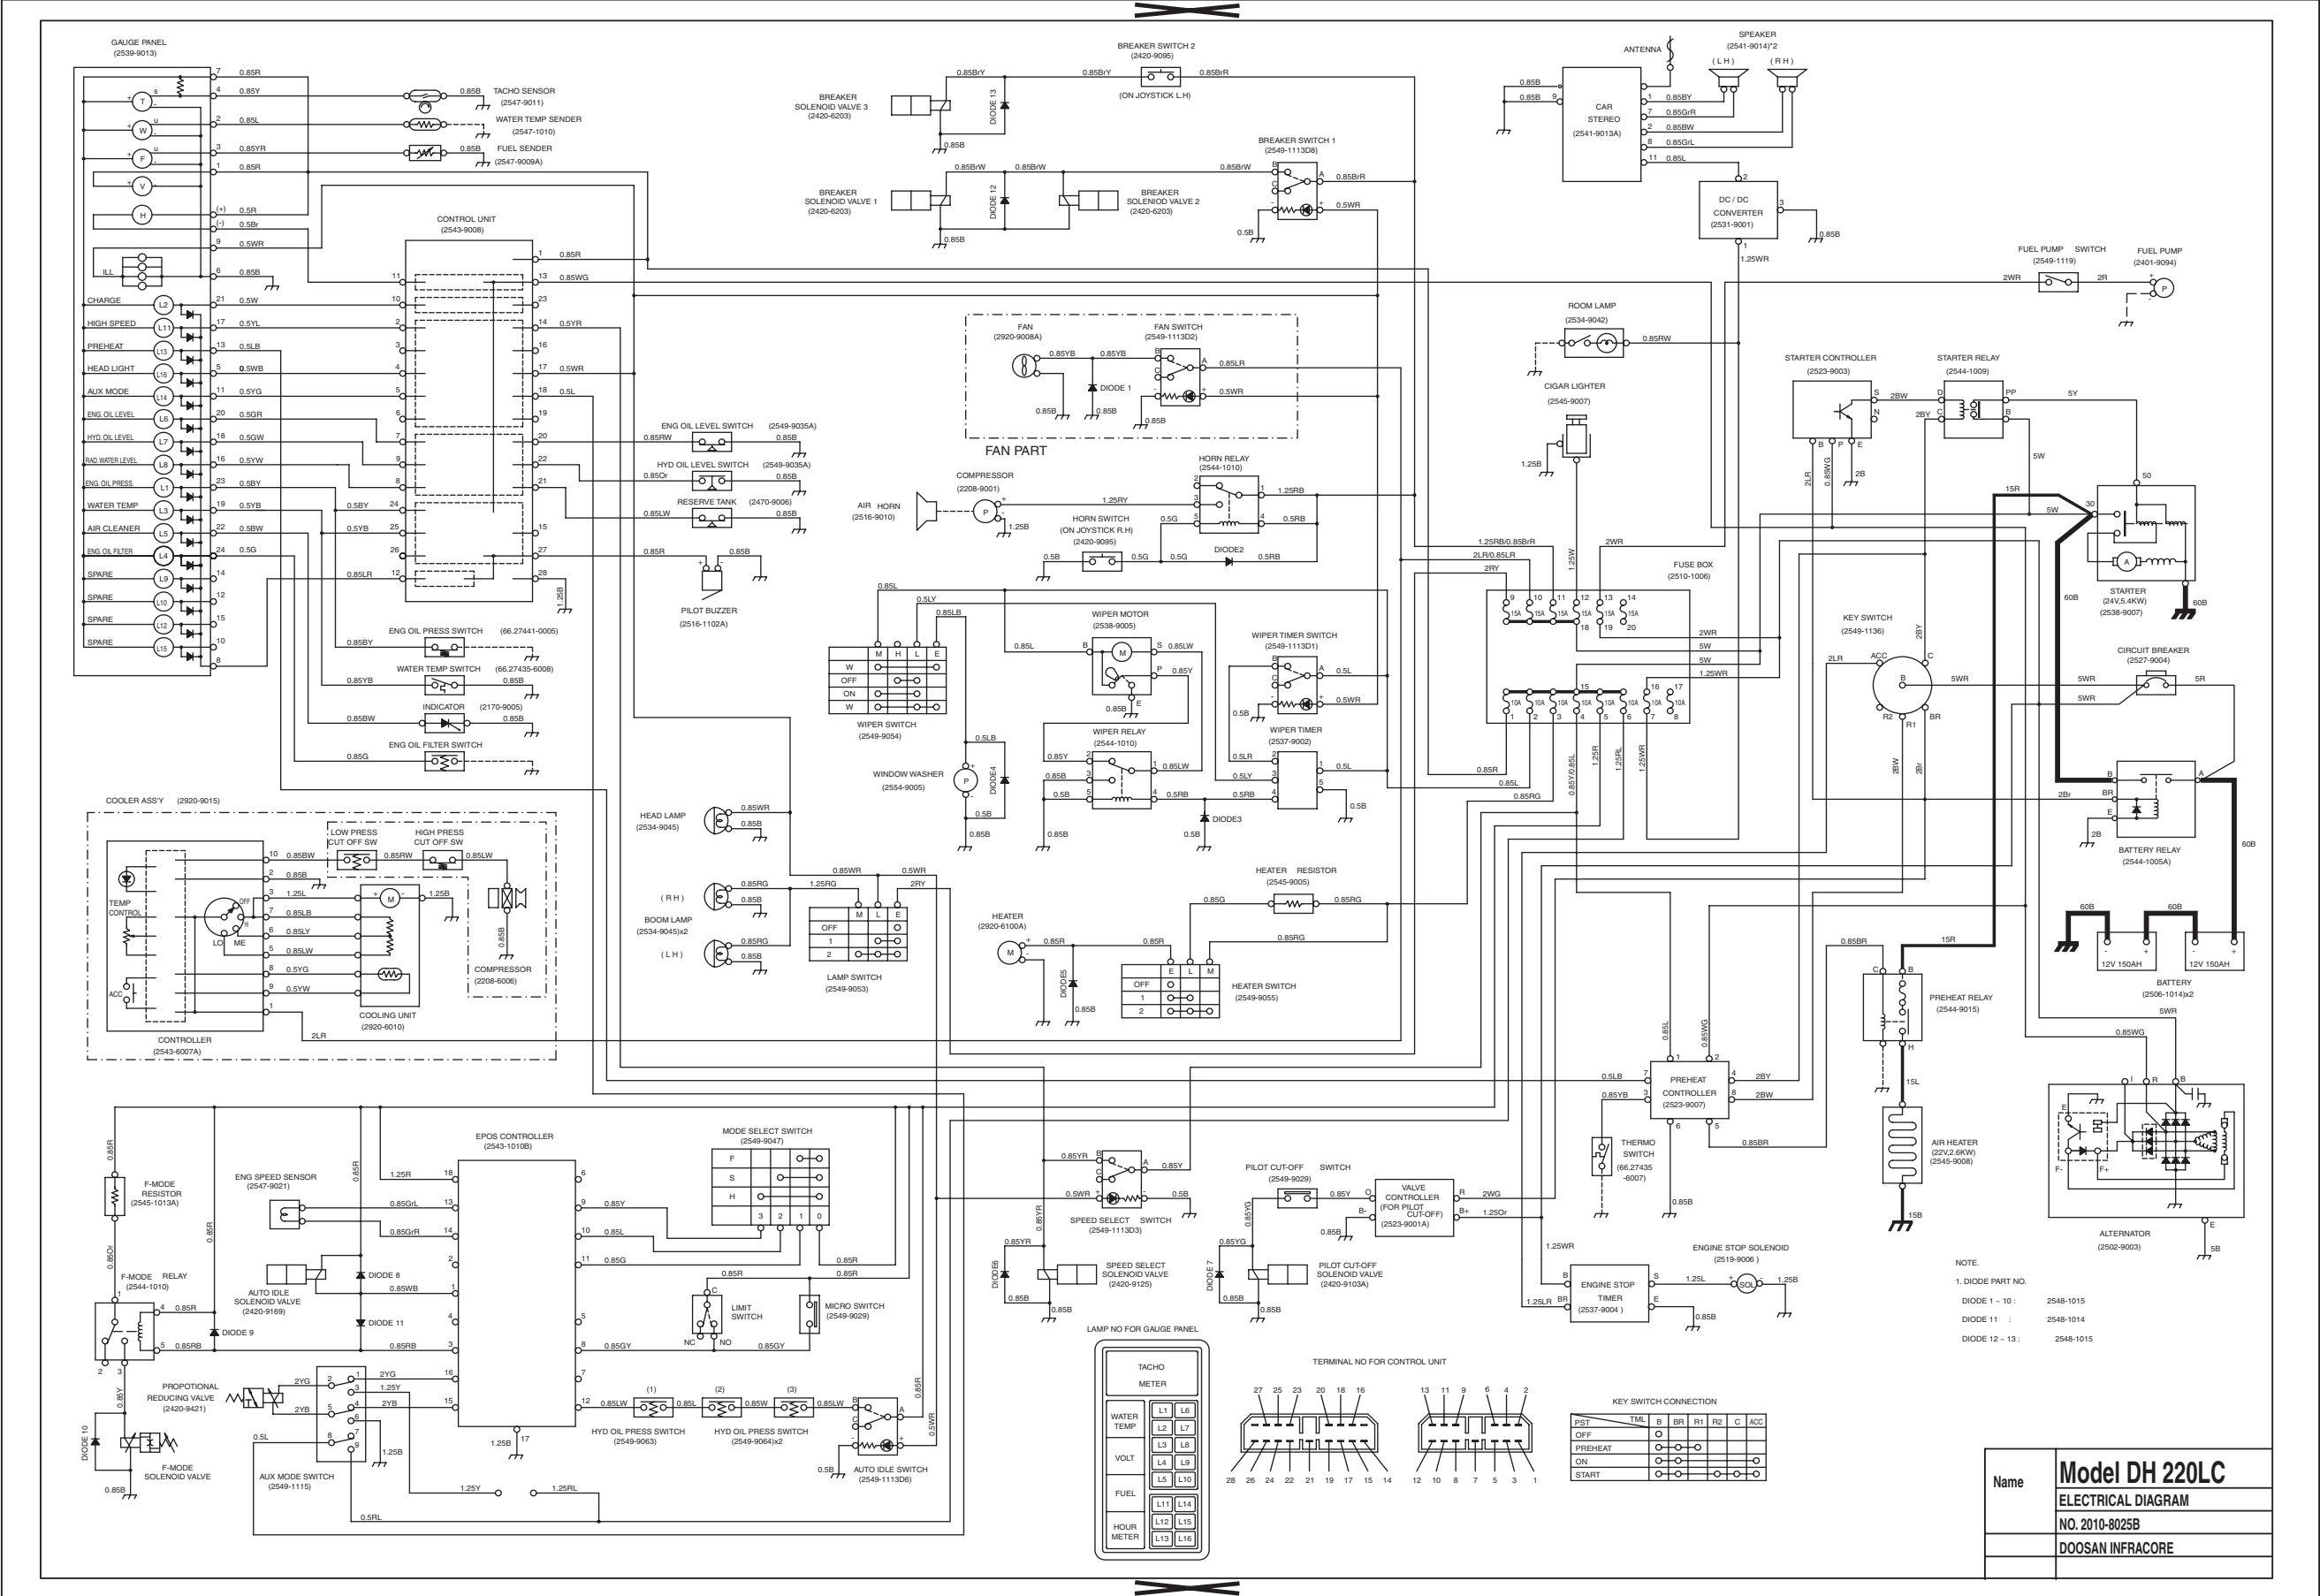


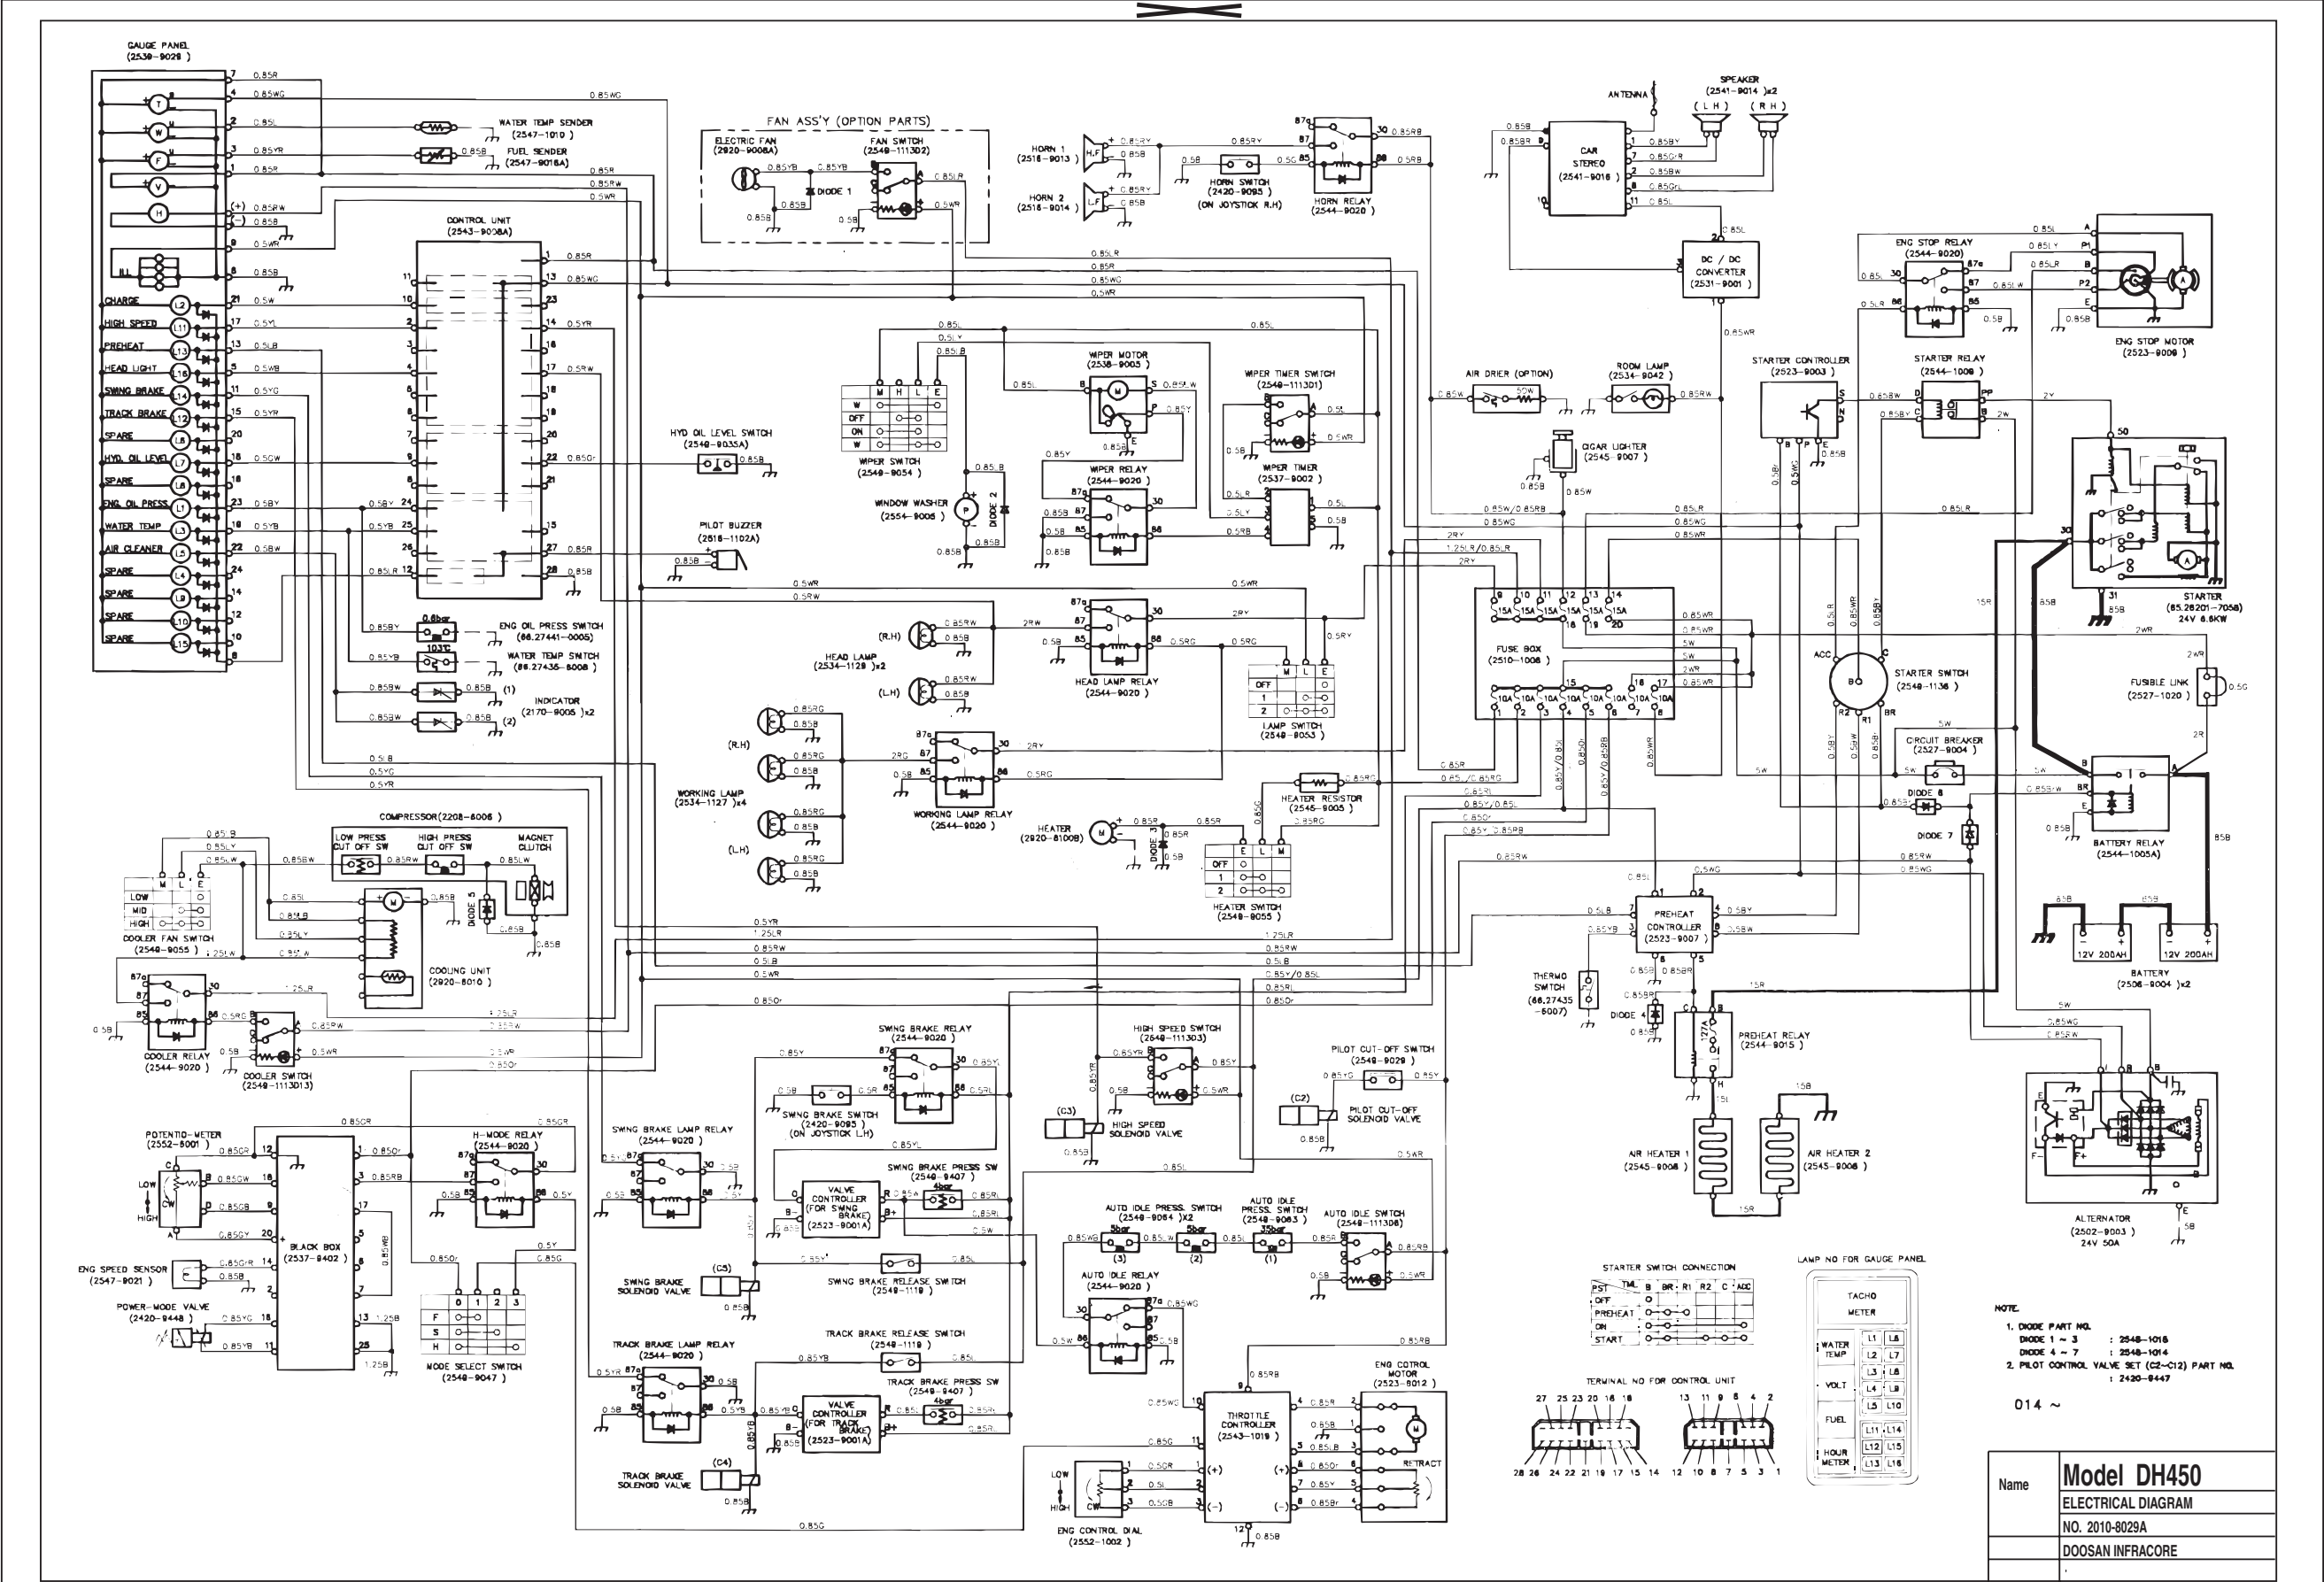

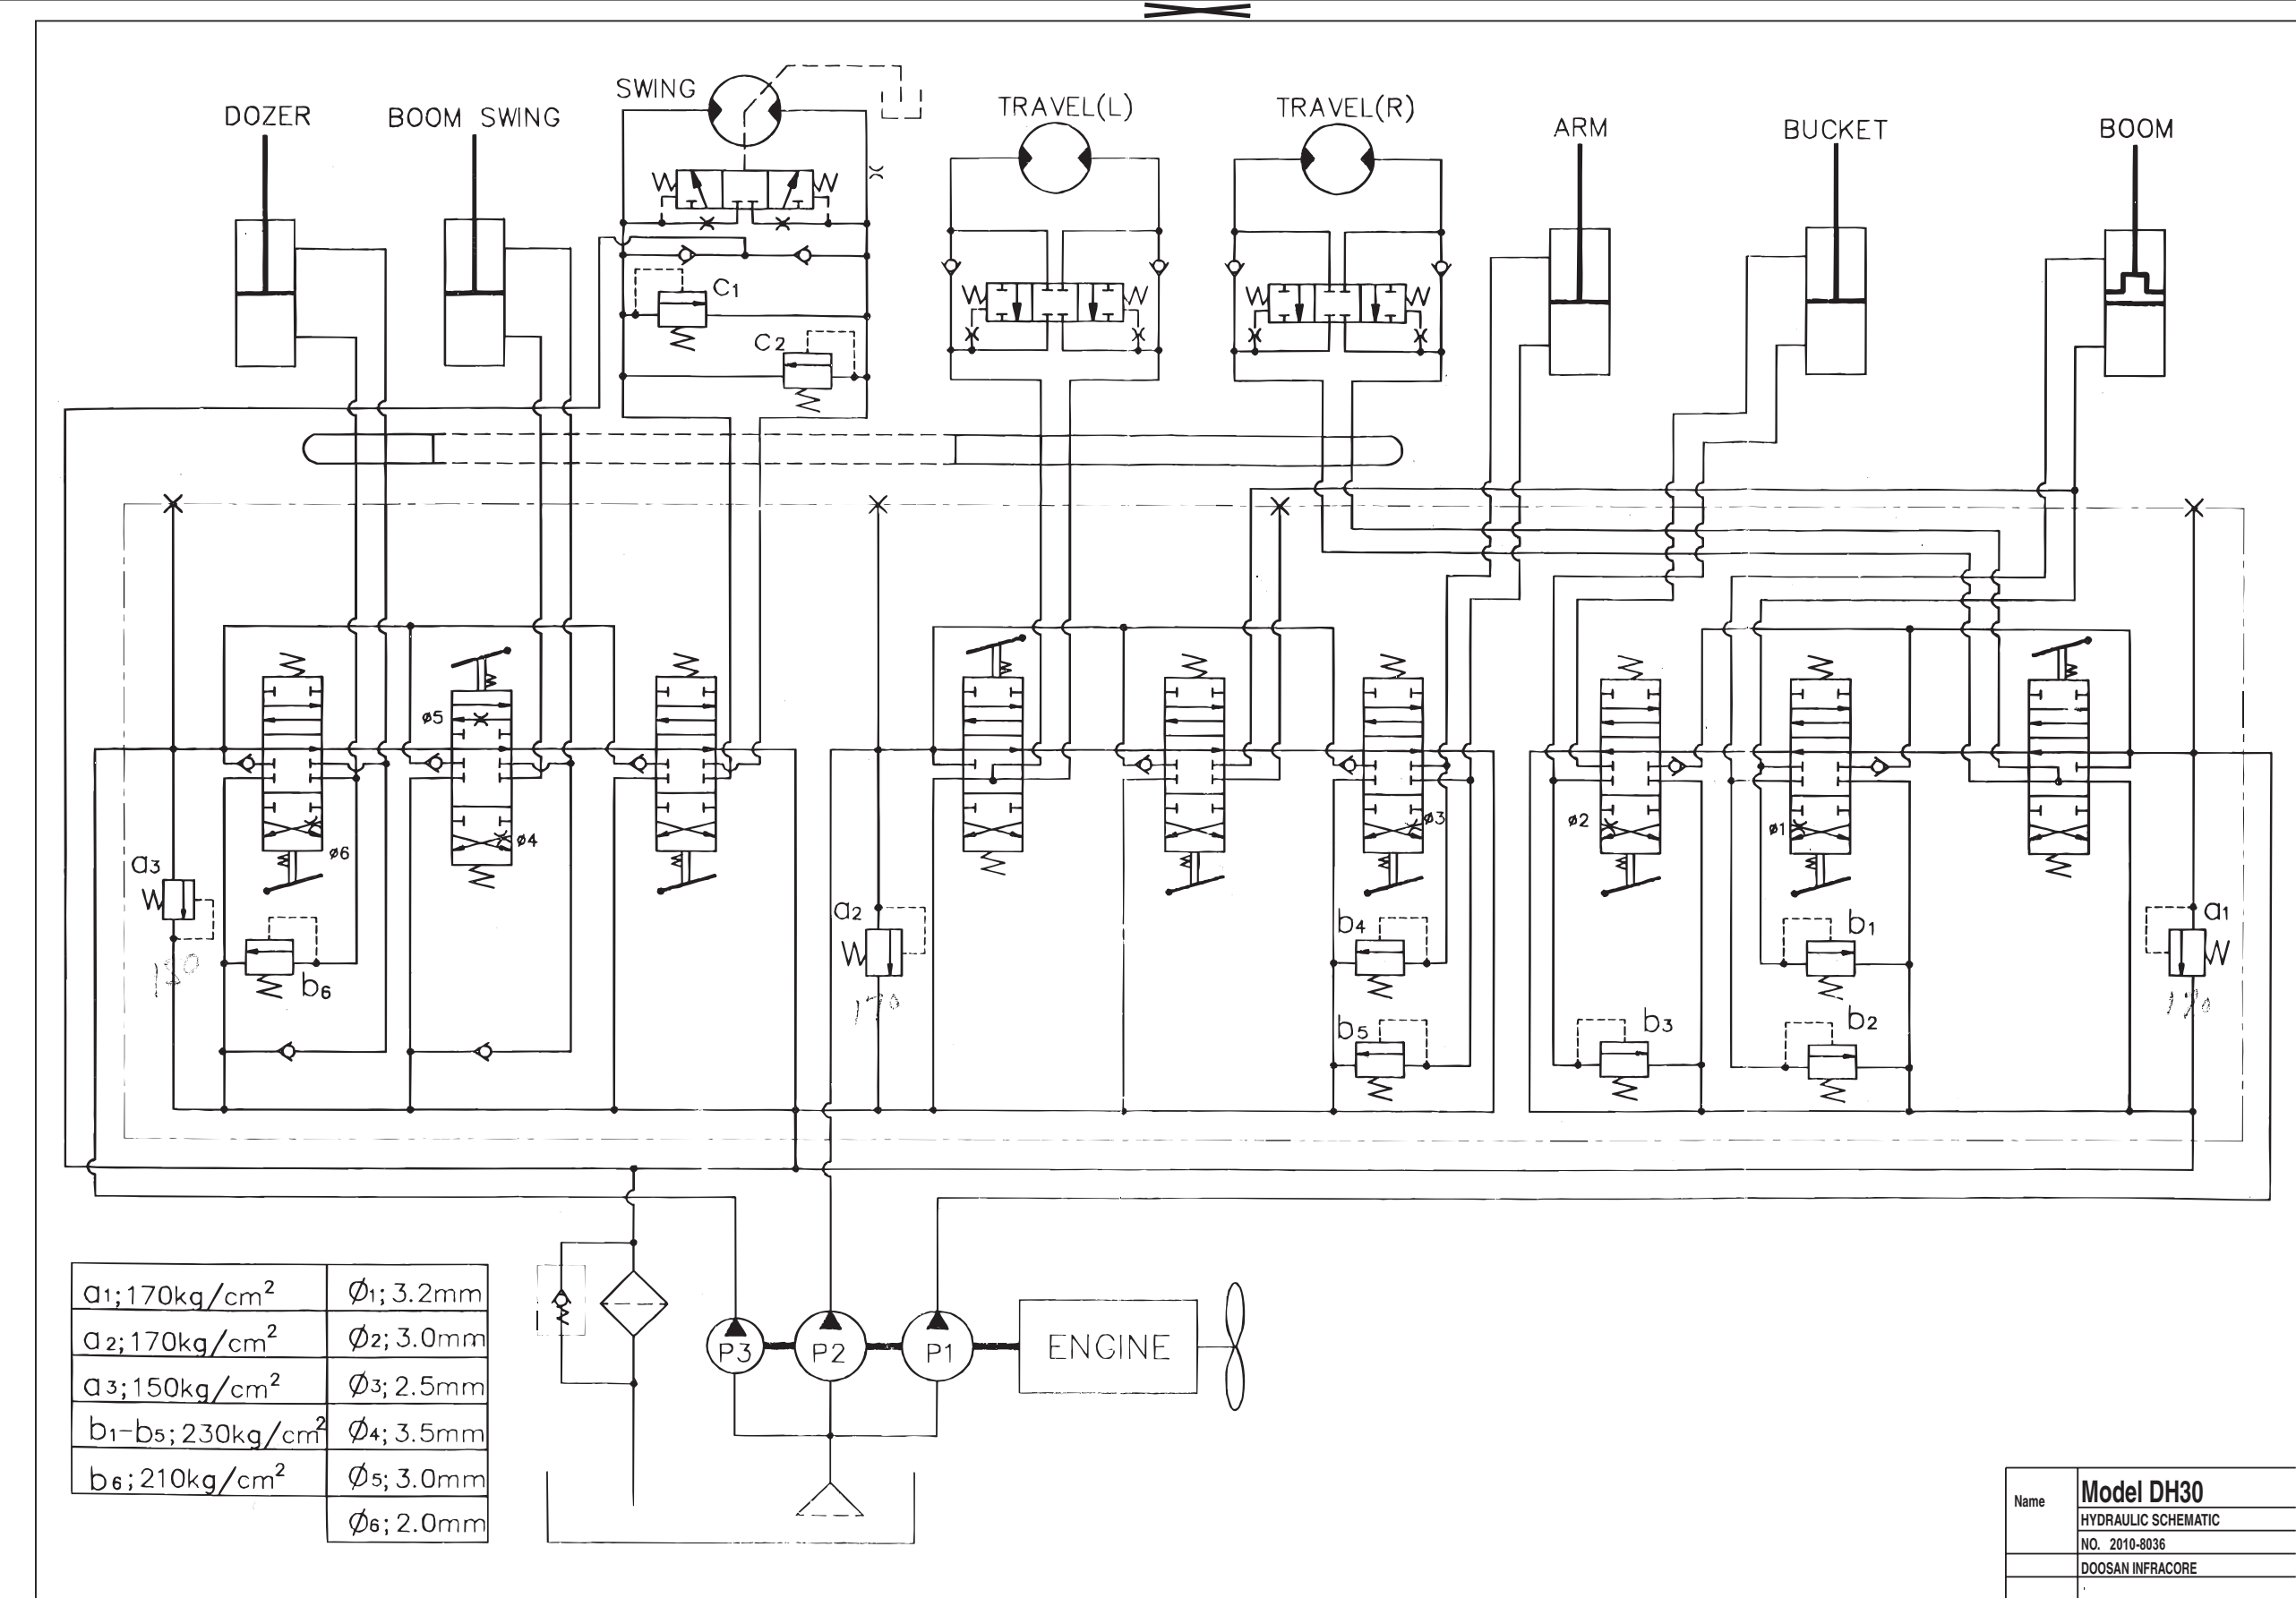



Name	Model DH30
	HYDRAULIC SCHEMATIC
	NO. 2010-8036
	DOOSAN INFRACORE


HAAE2350

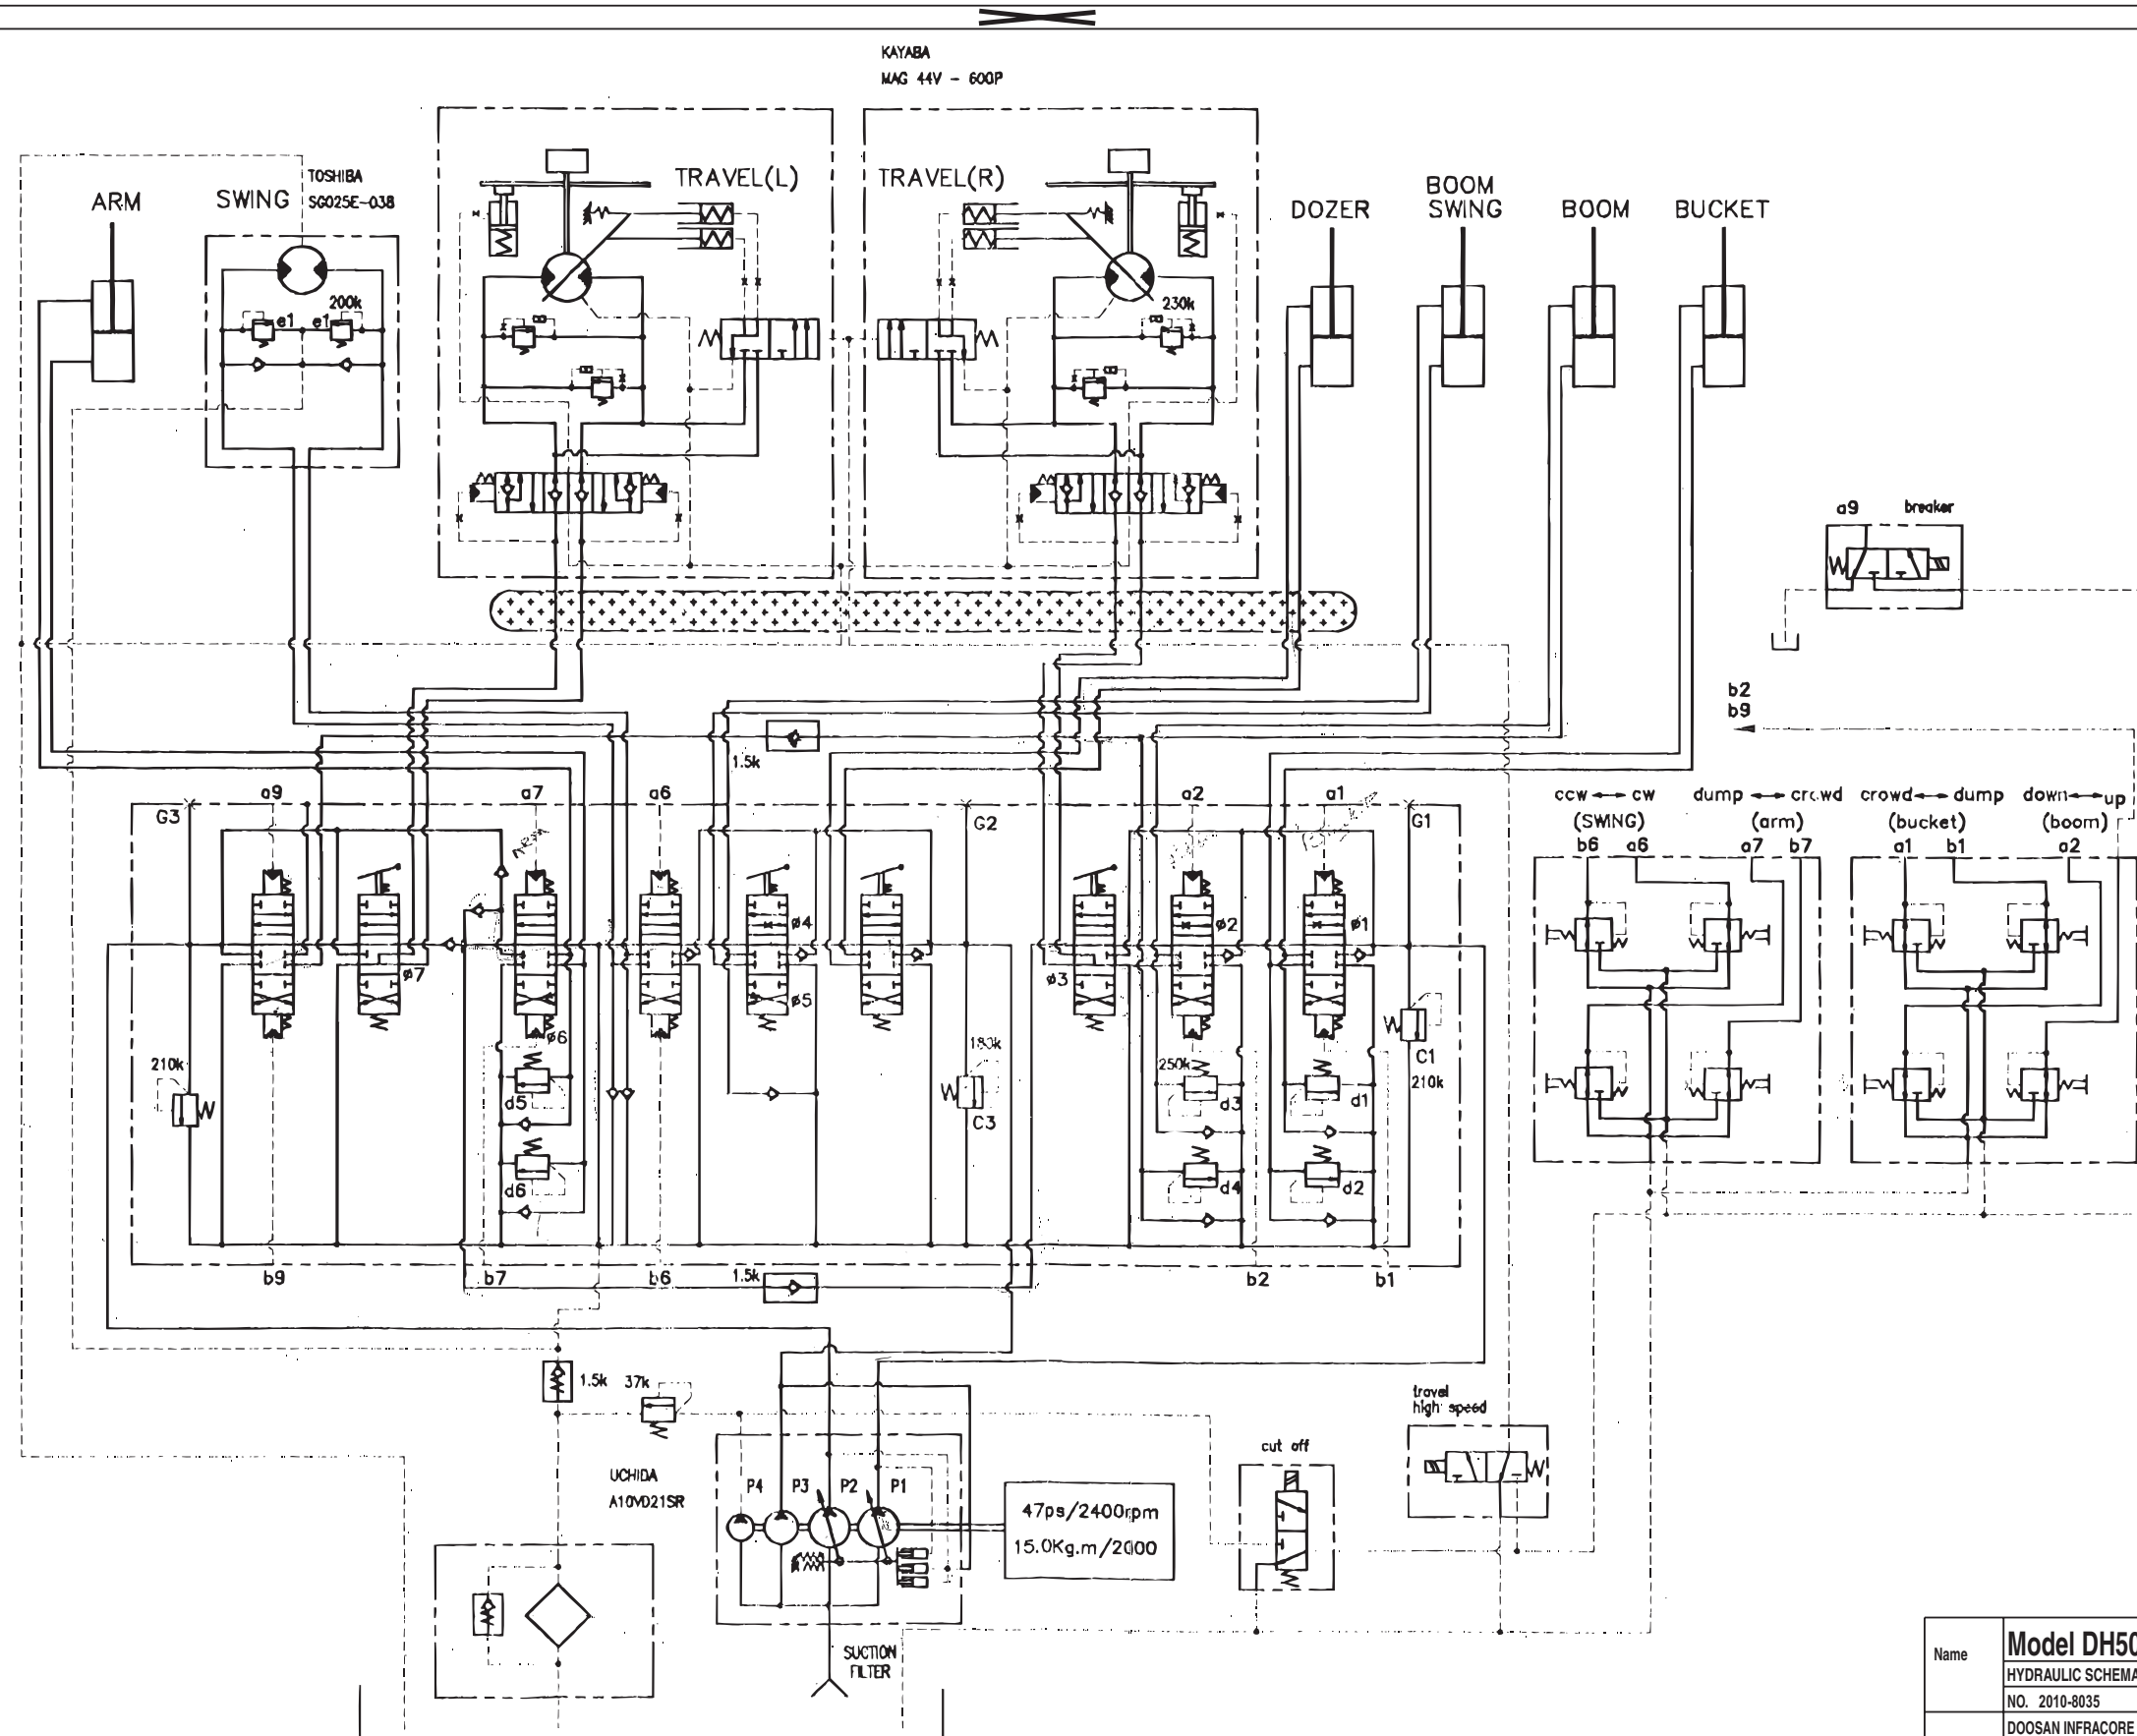

Name	Model DH50
	HYDRAULIC SCHEMATIC
	NO. 2010-8035
	DOOSAN INFRACORE

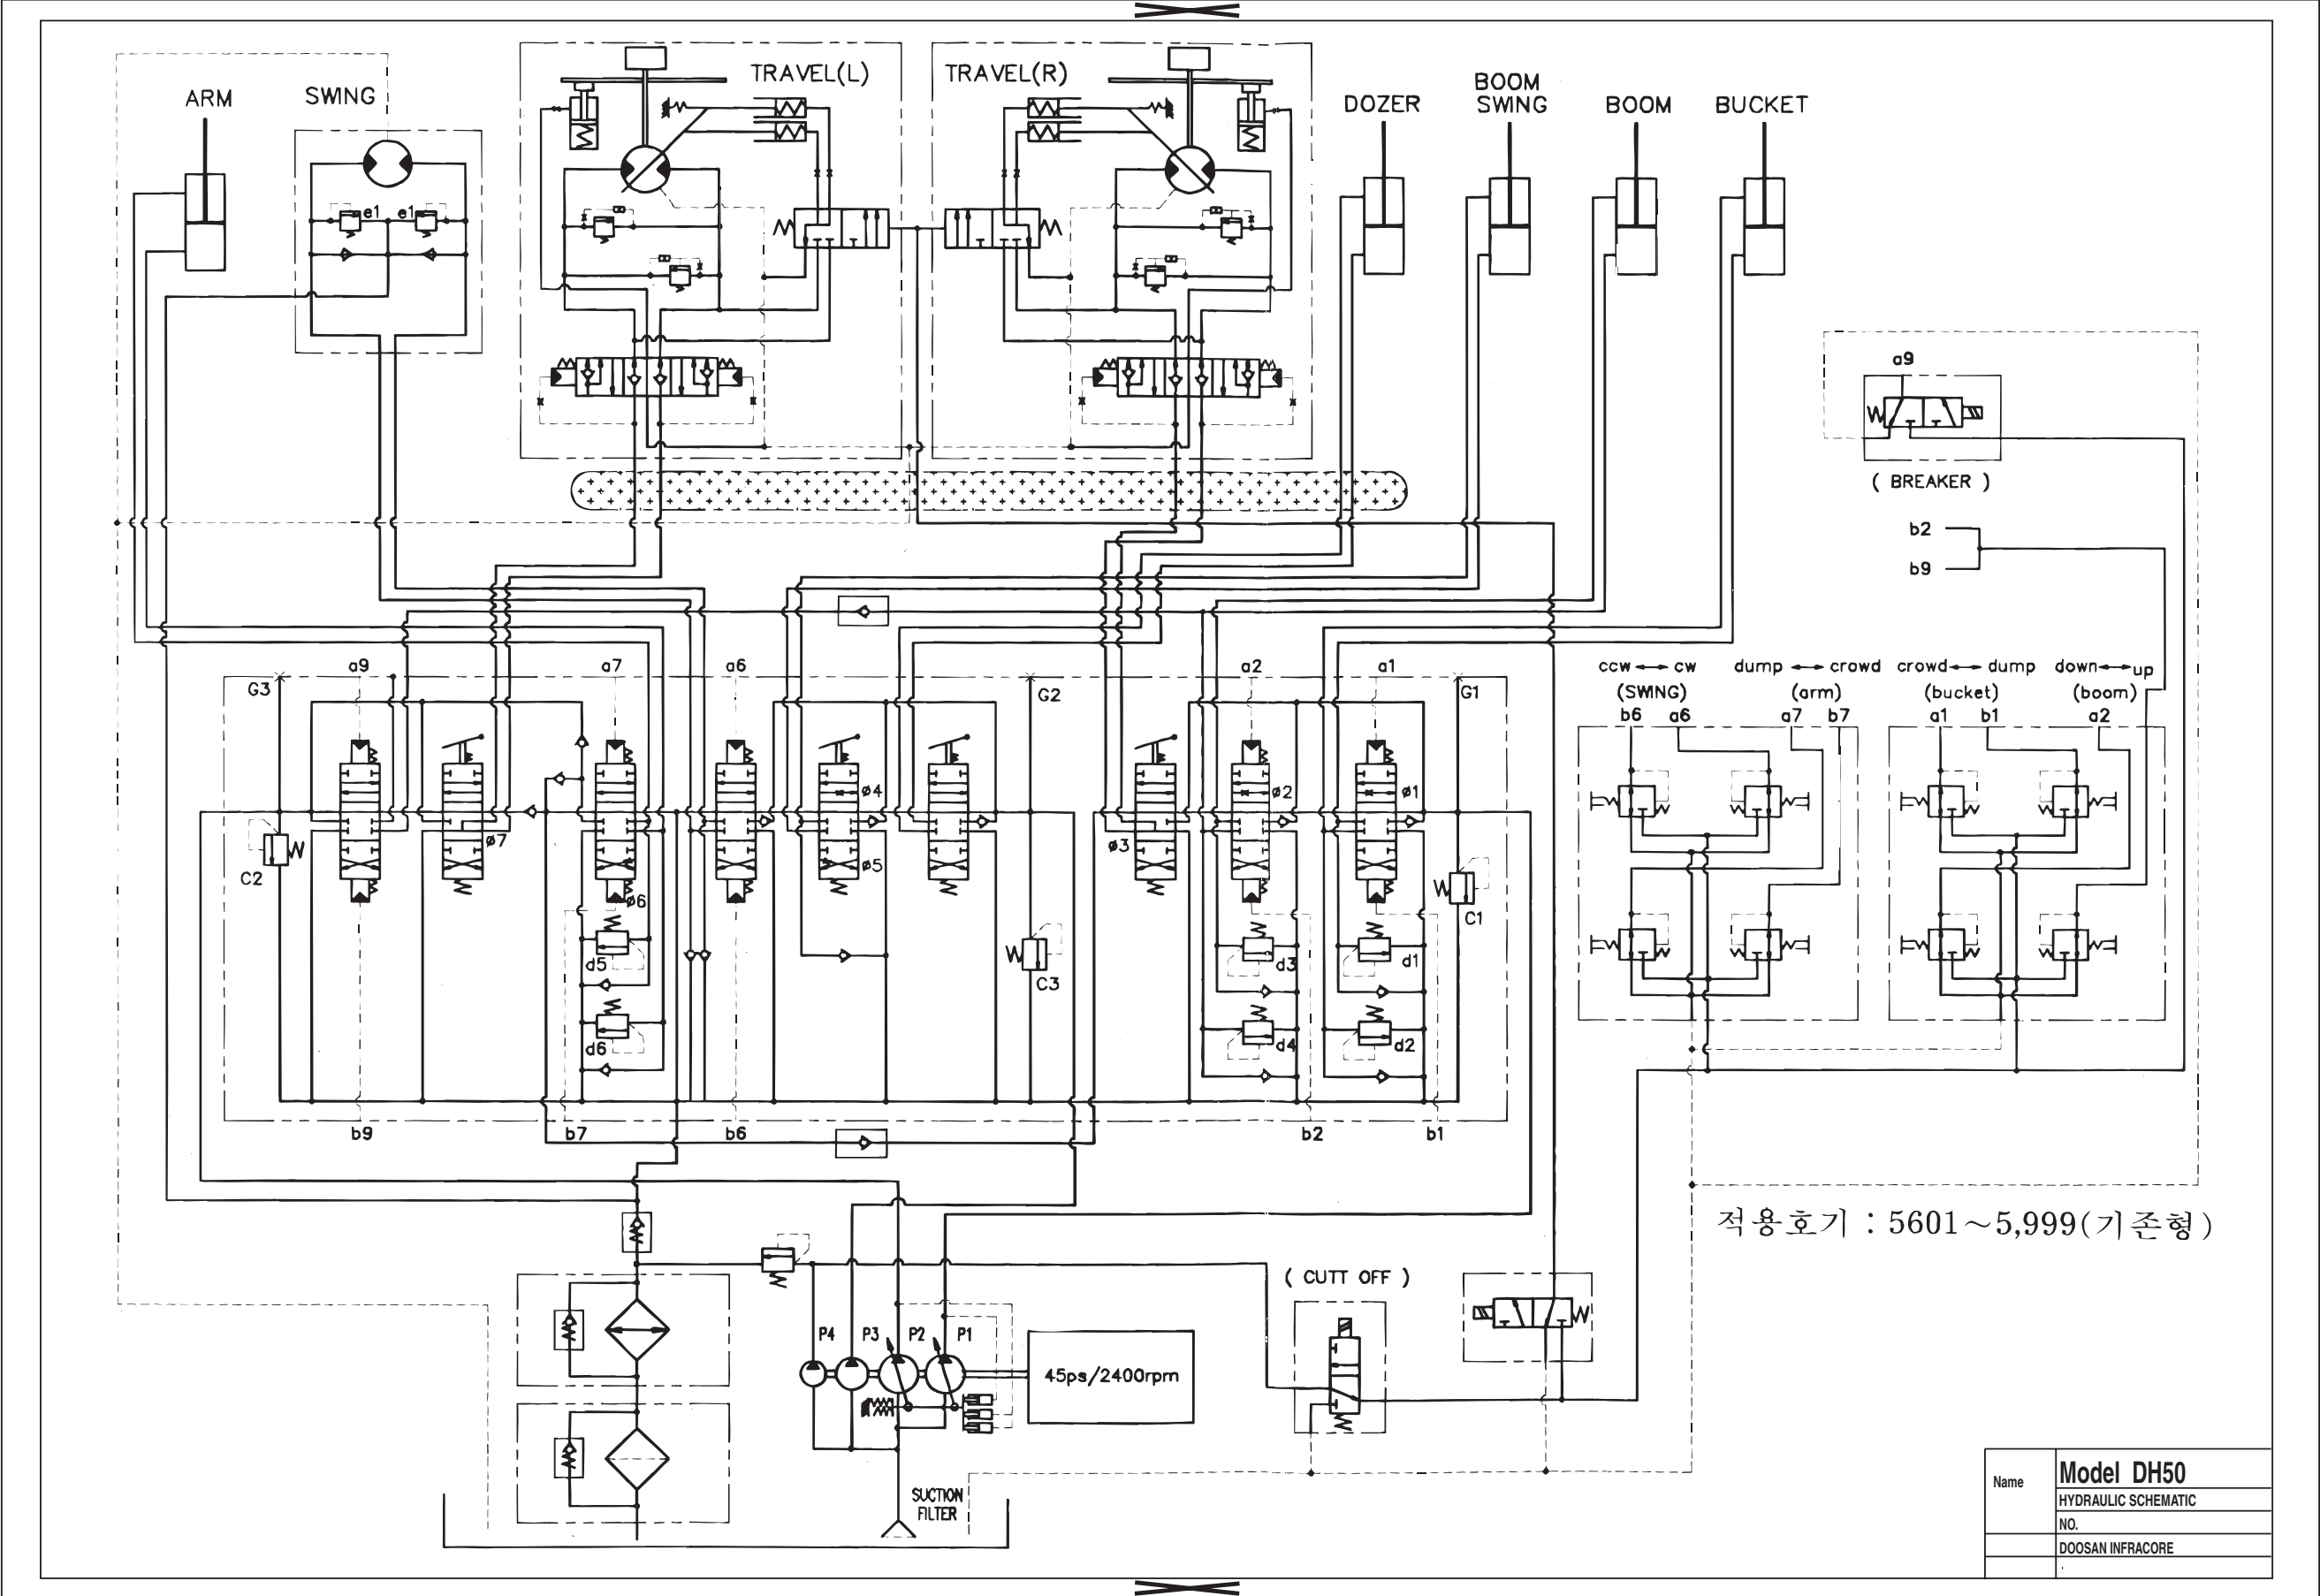


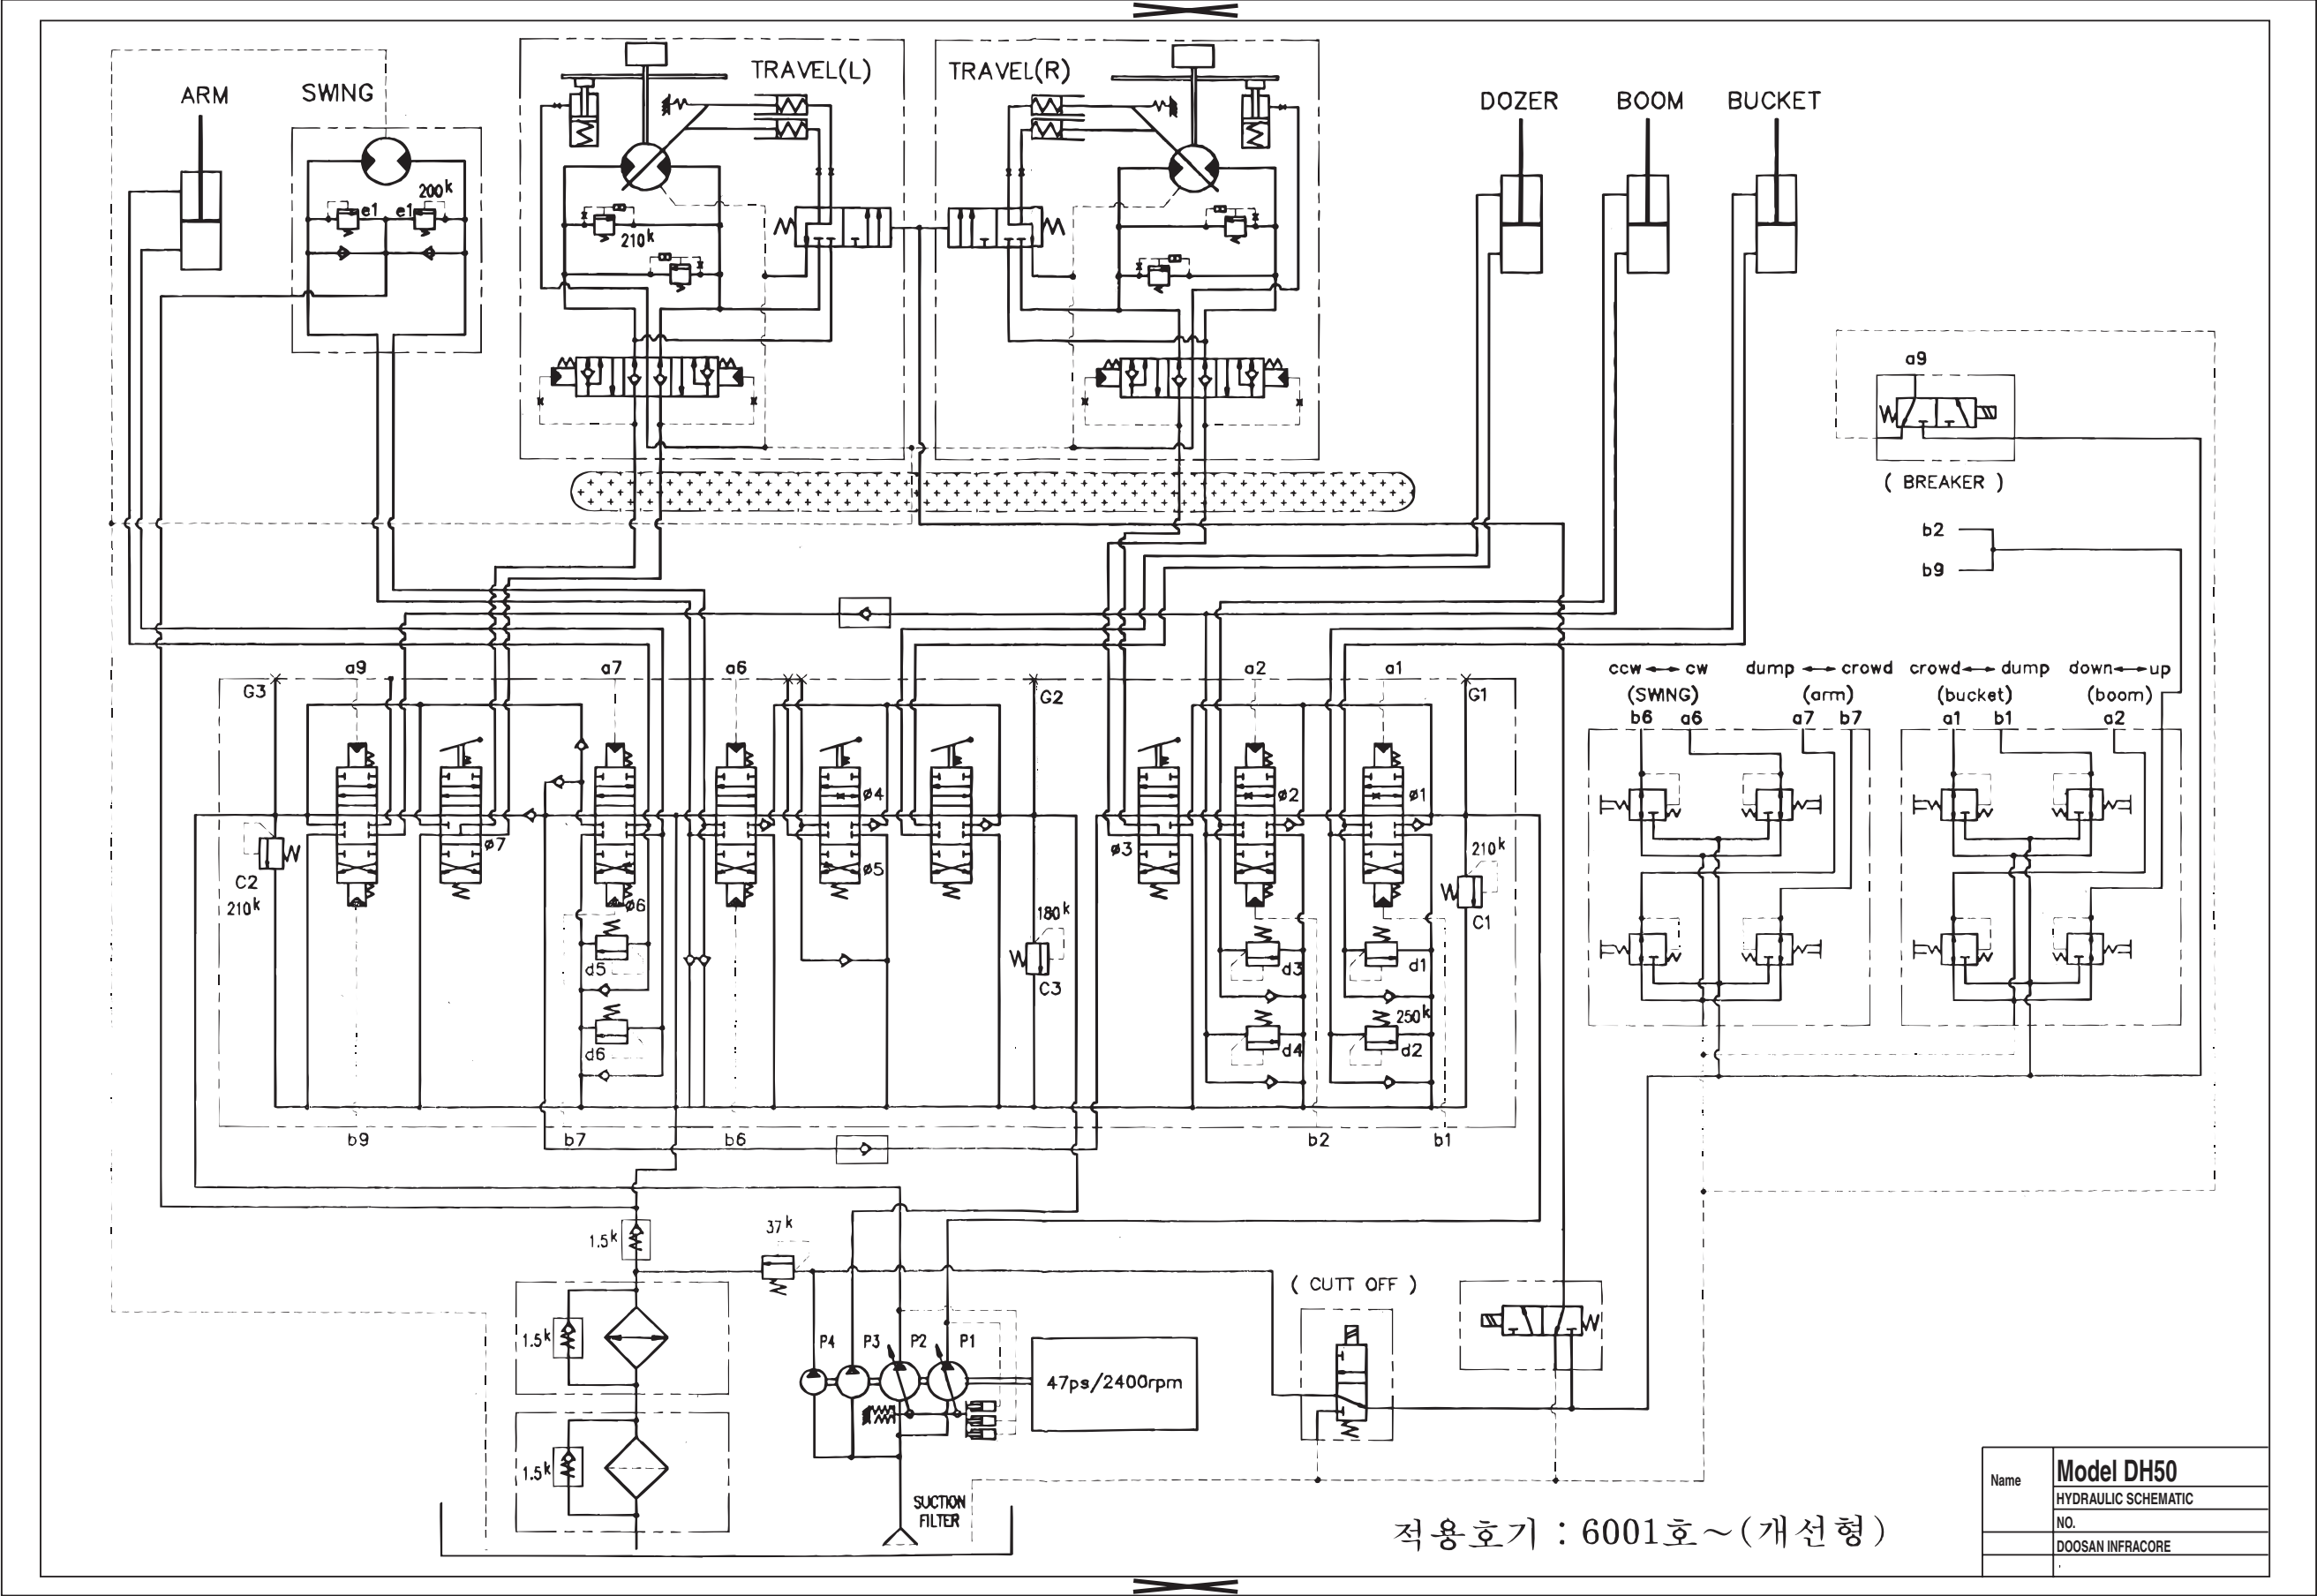

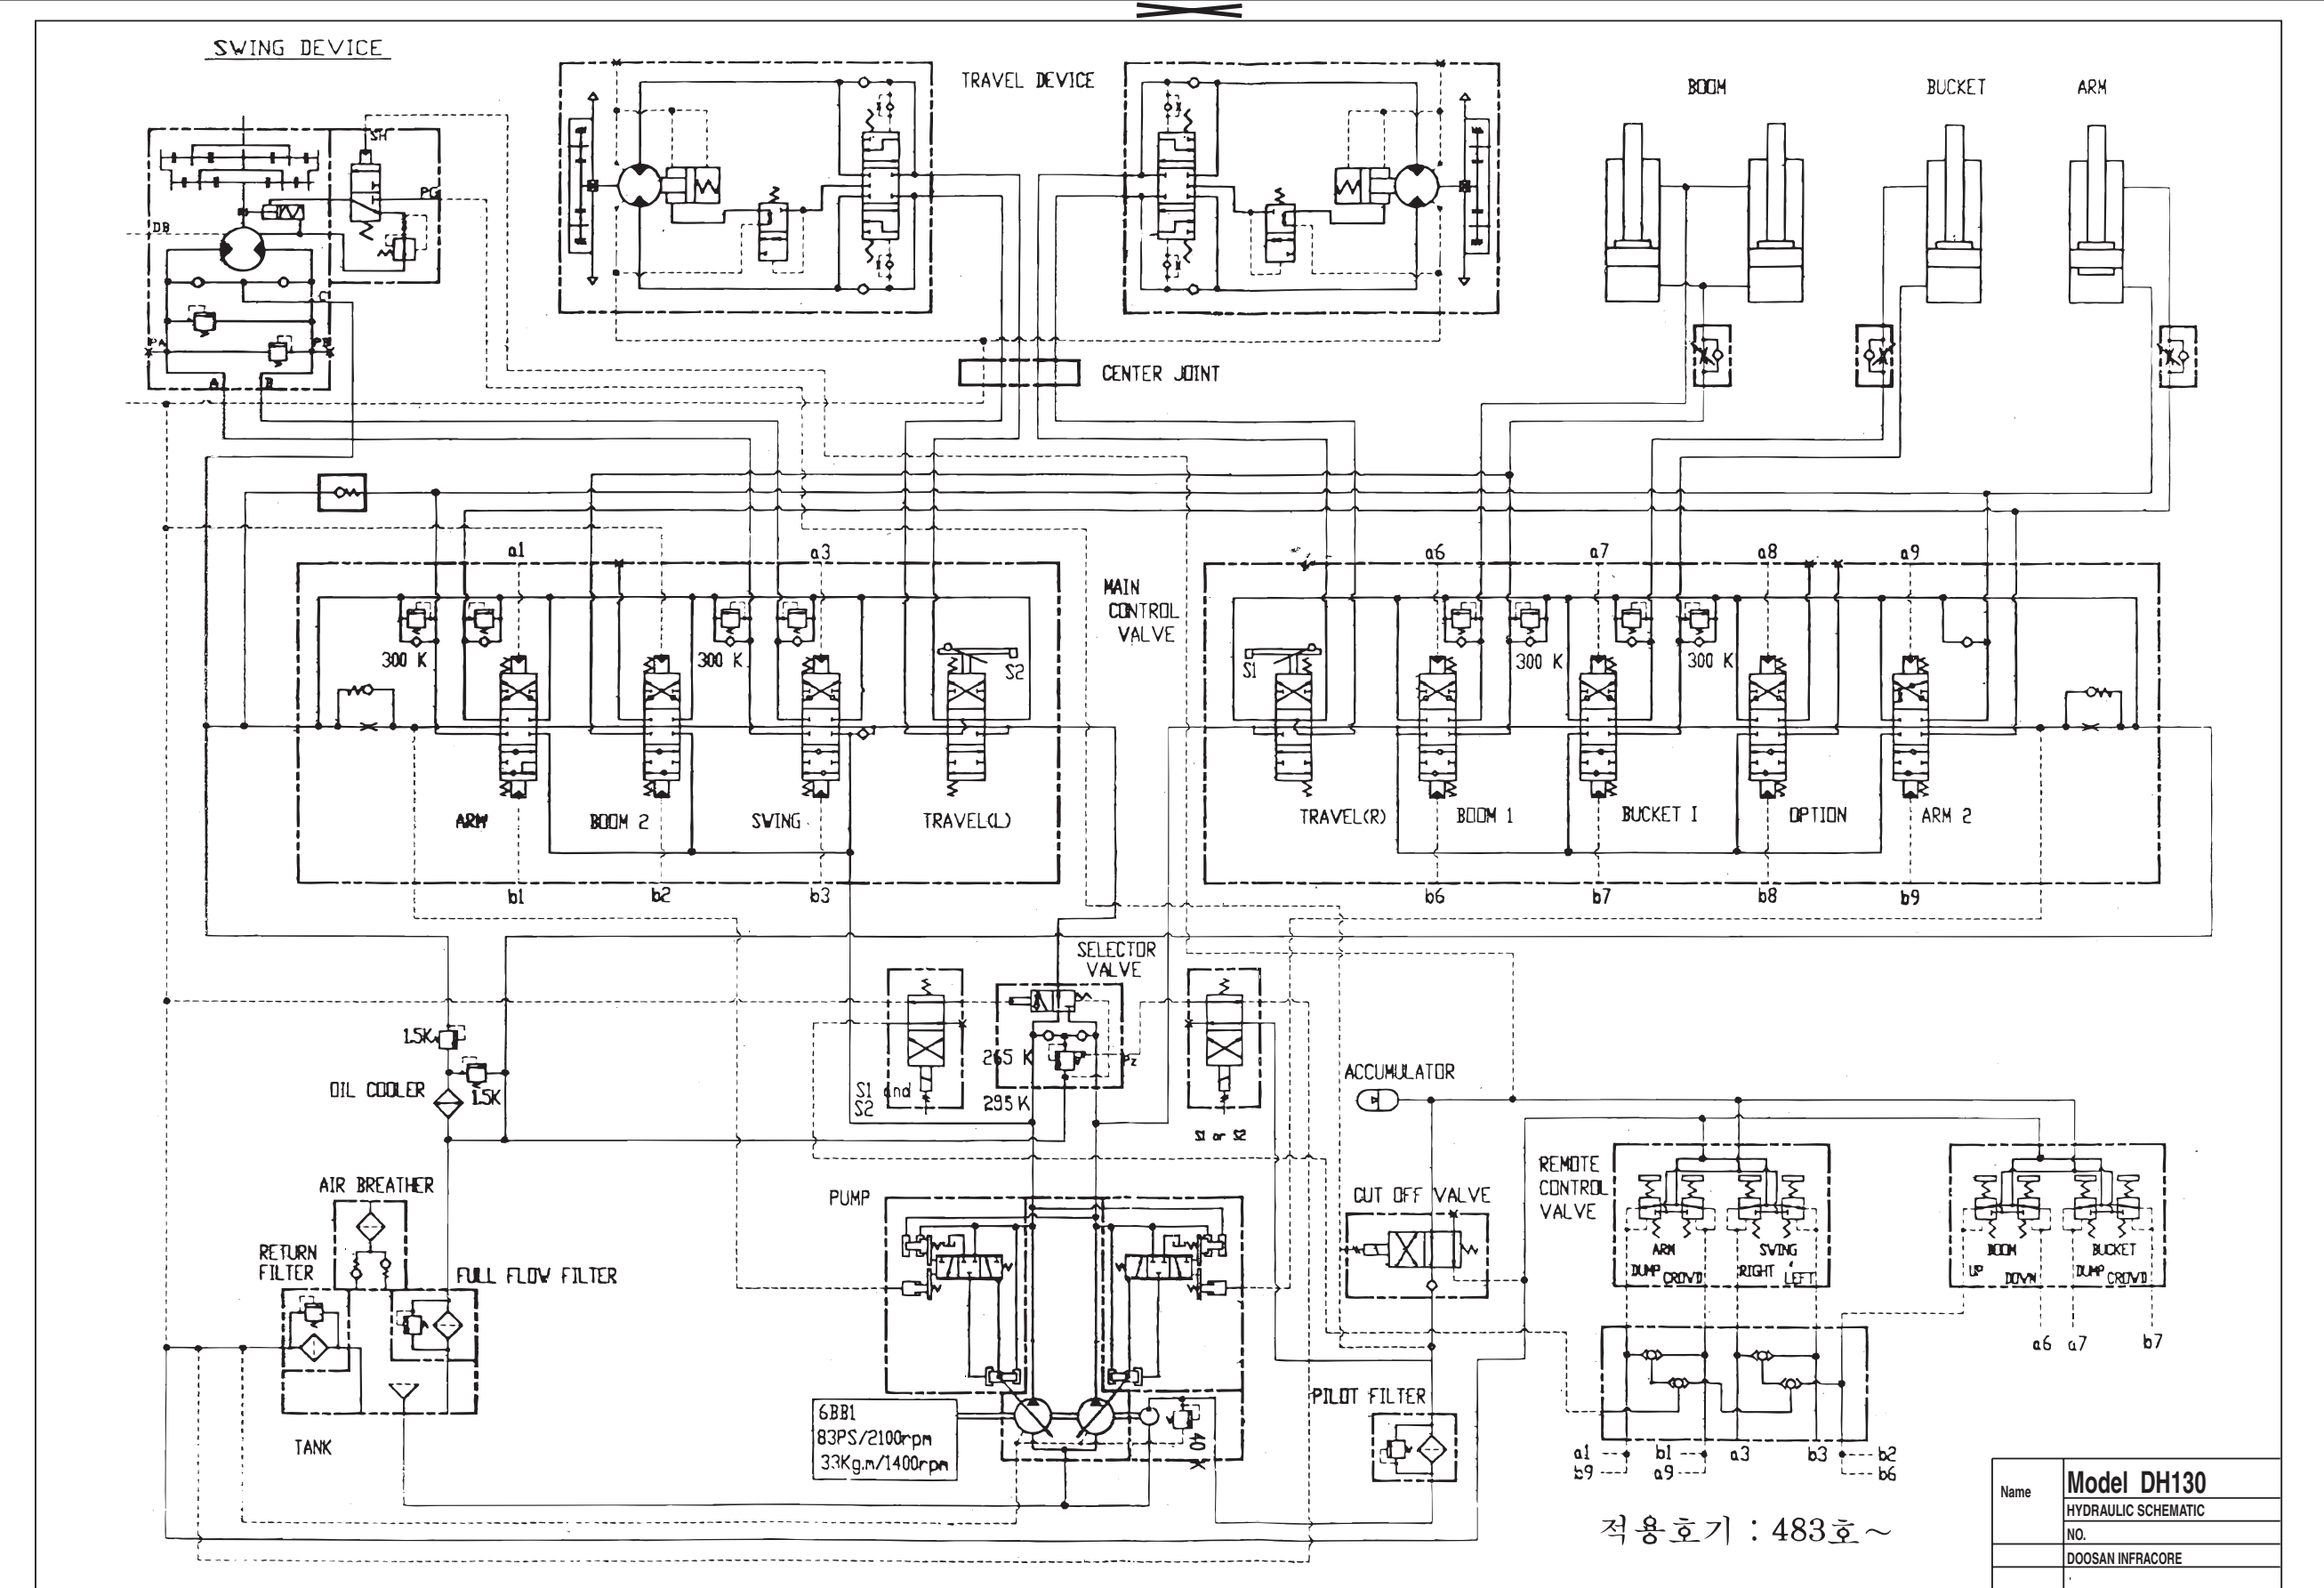


Name	Model DH130
	HYDRAULIC SCHEMATIC
NO.	
	DOOSAN INFRACORE


HAAE2270

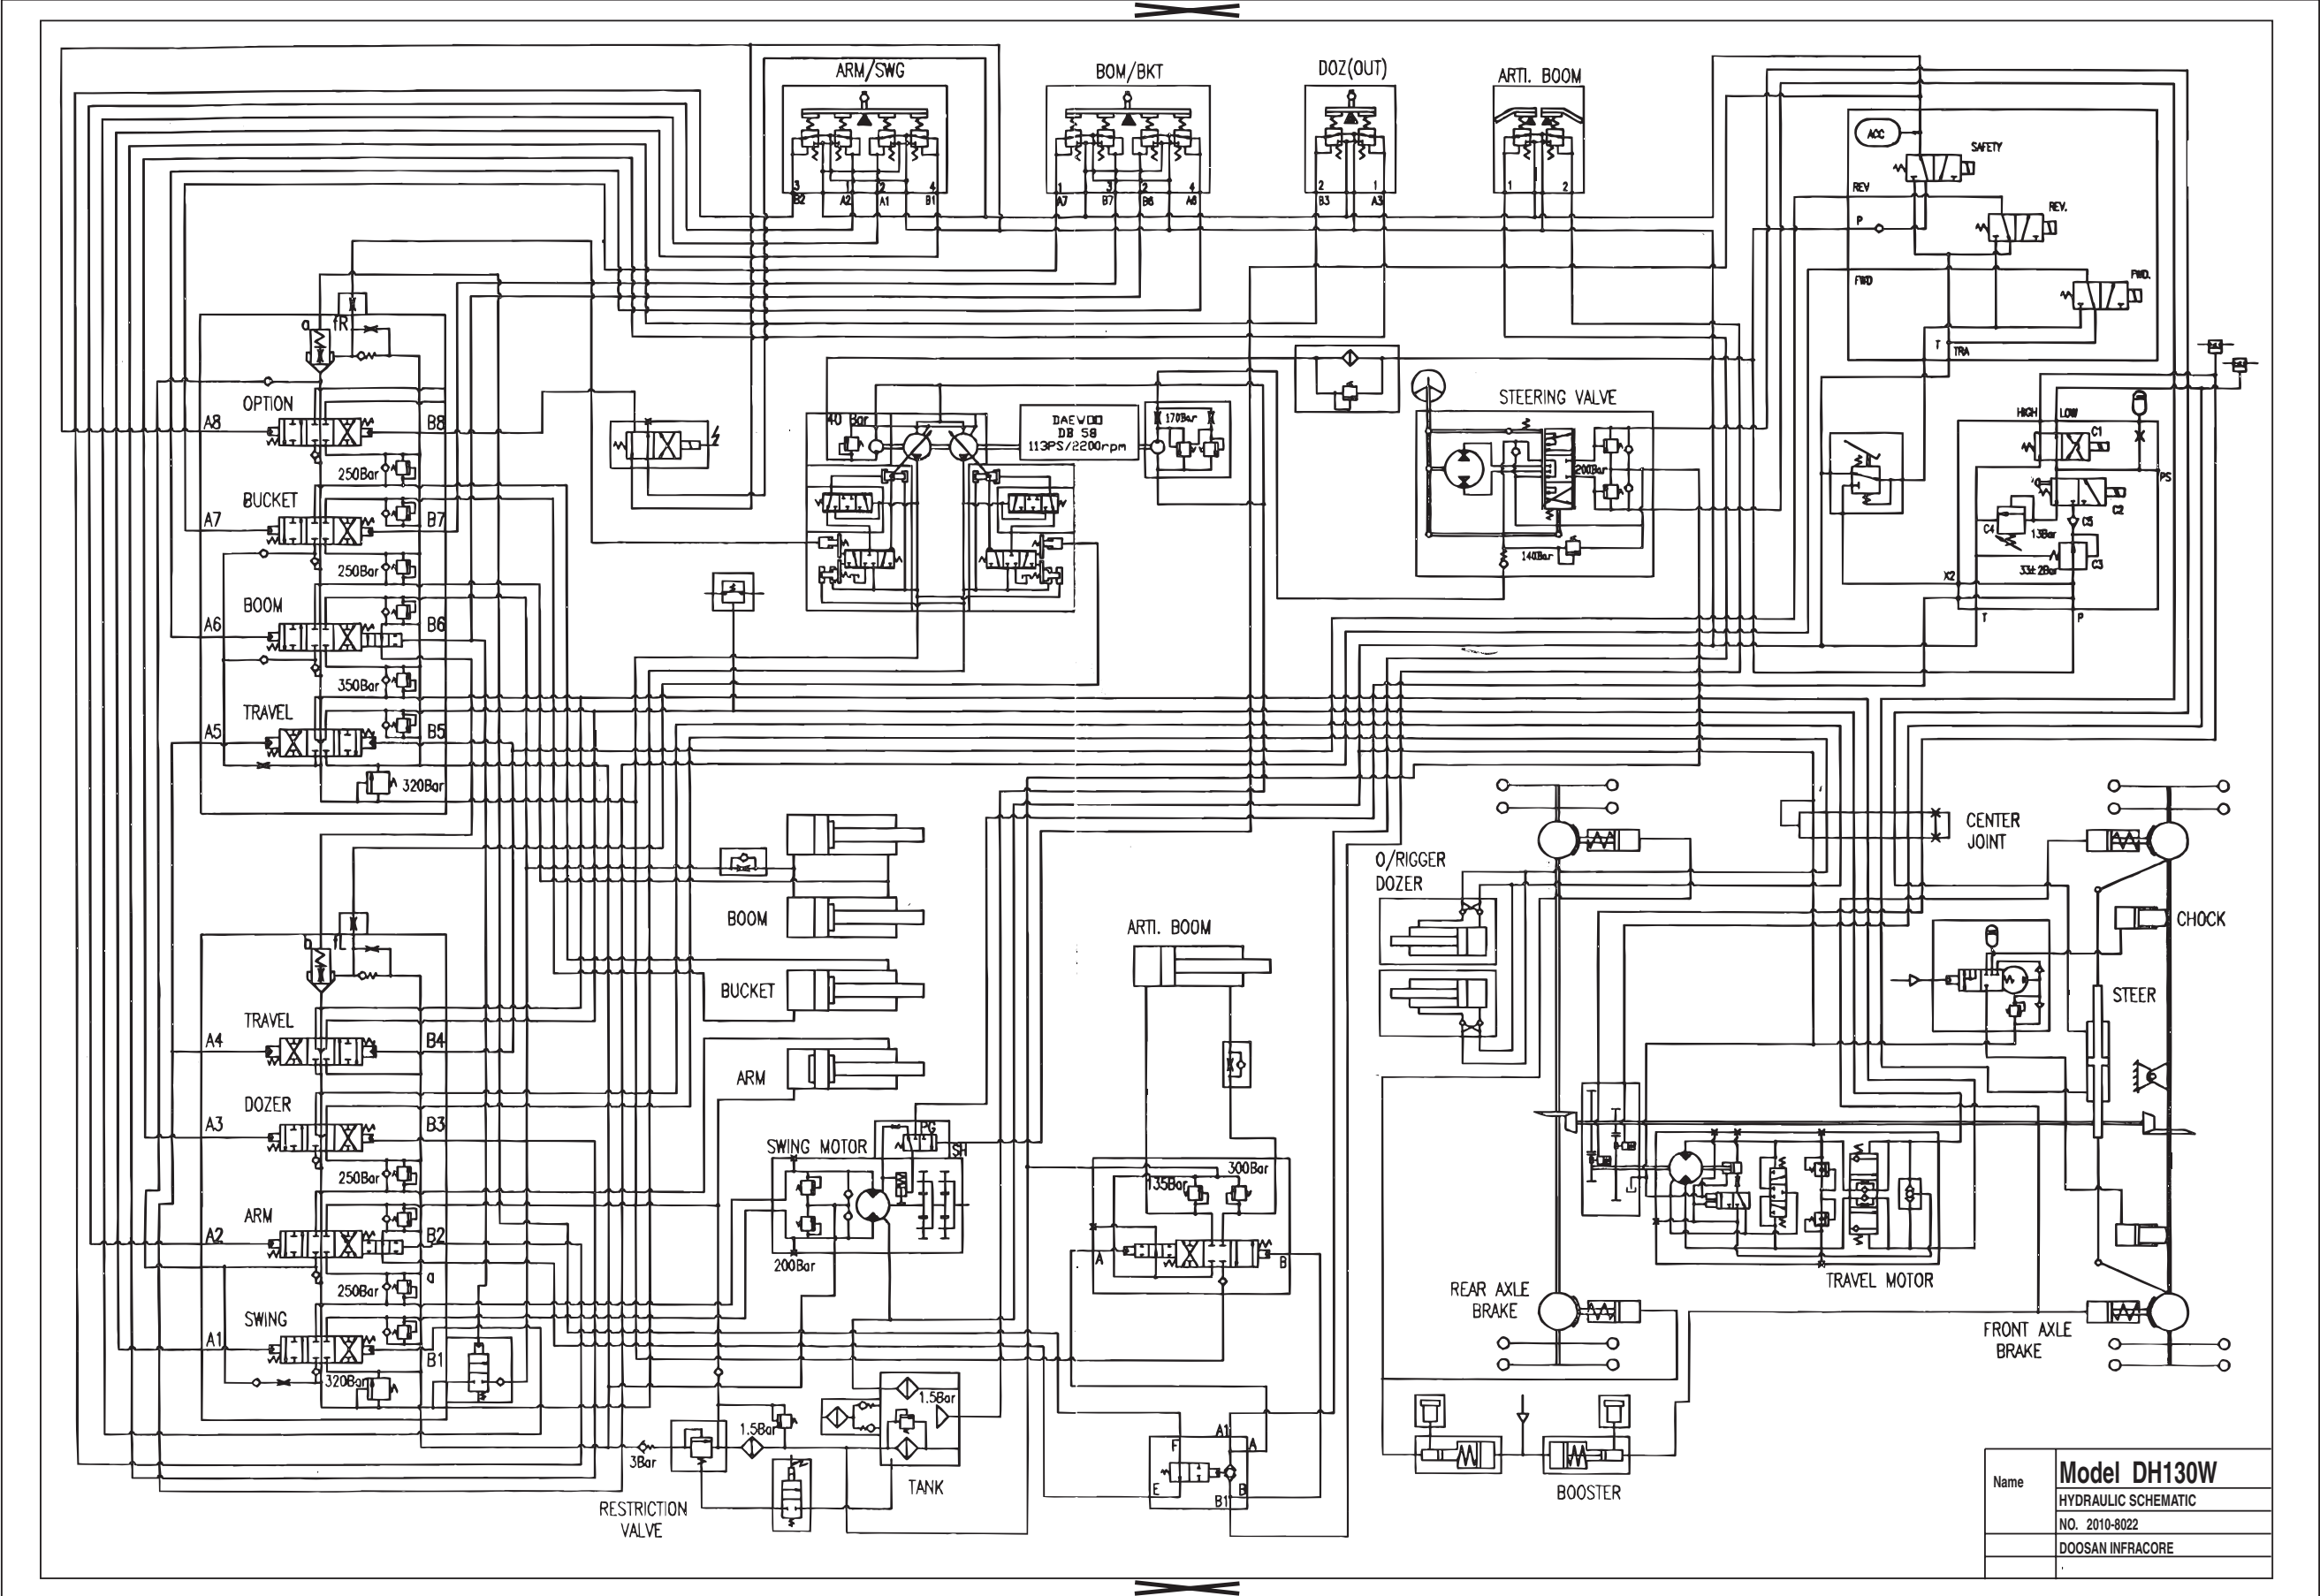


HAAE2370

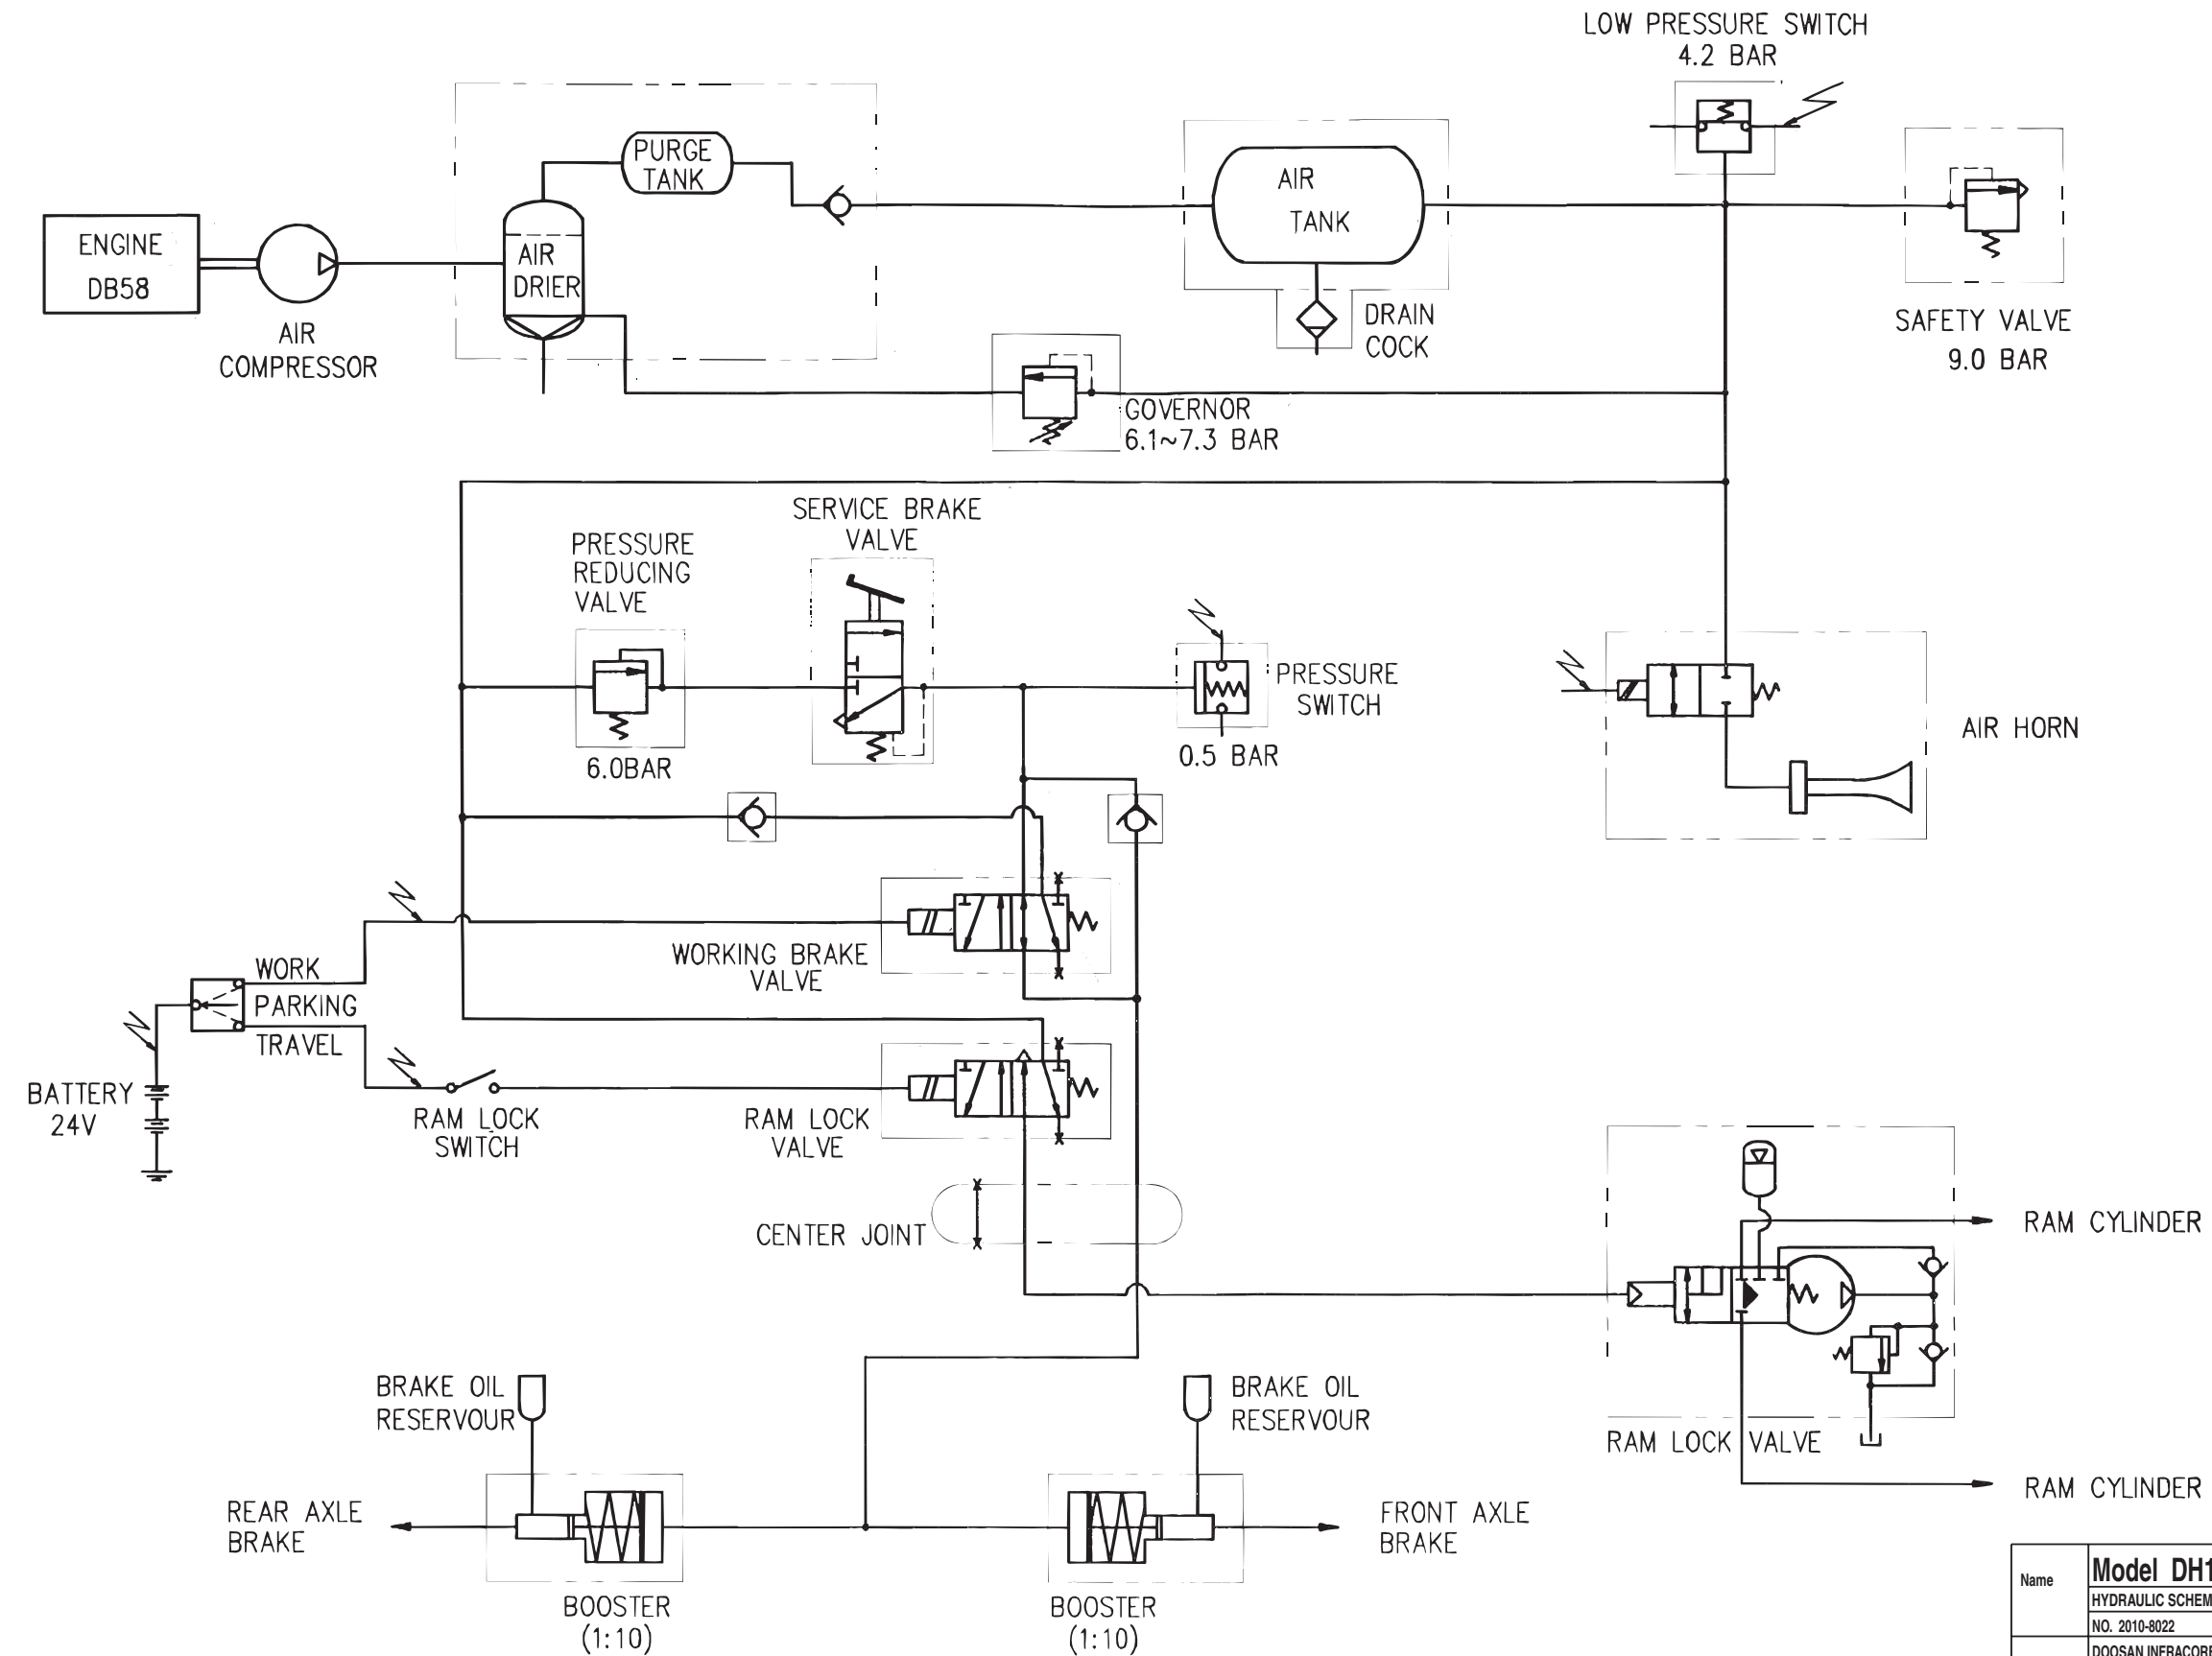


HAAE2170

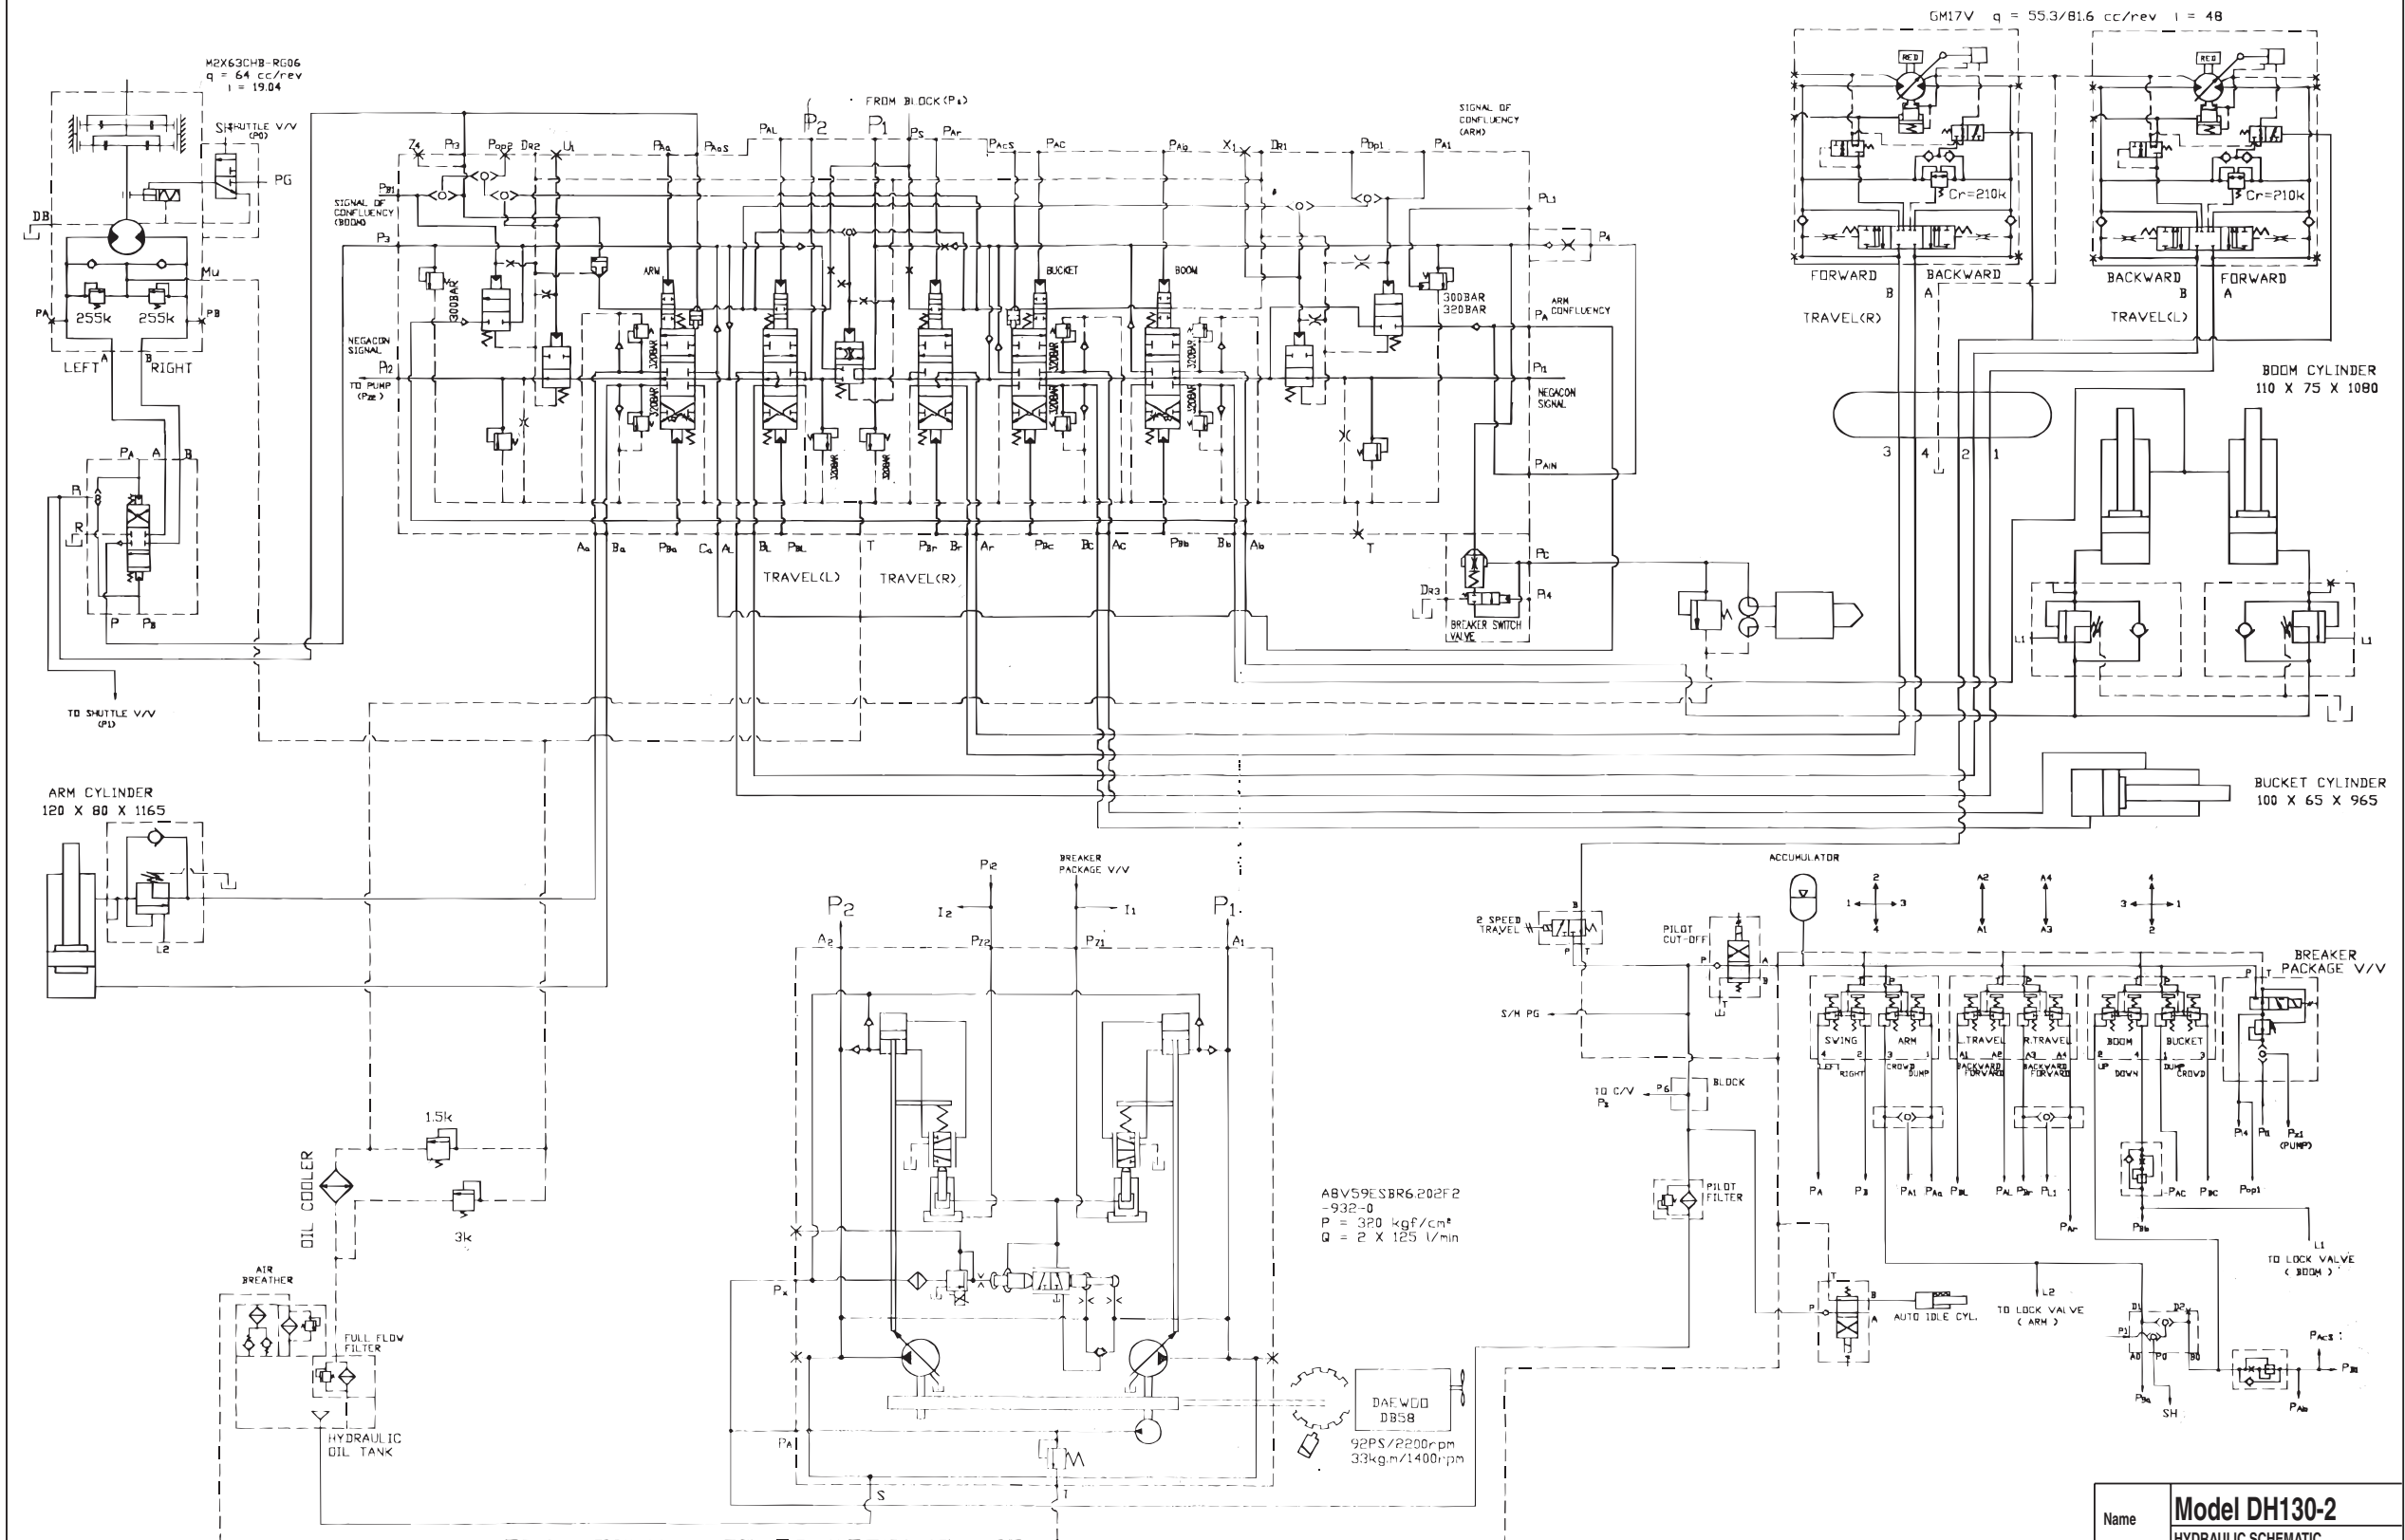


Name	Model DH130-2
	HYDRAULIC SCHEMATIC
	NO. 2010-8026A
	DOOSAN INFRACORE

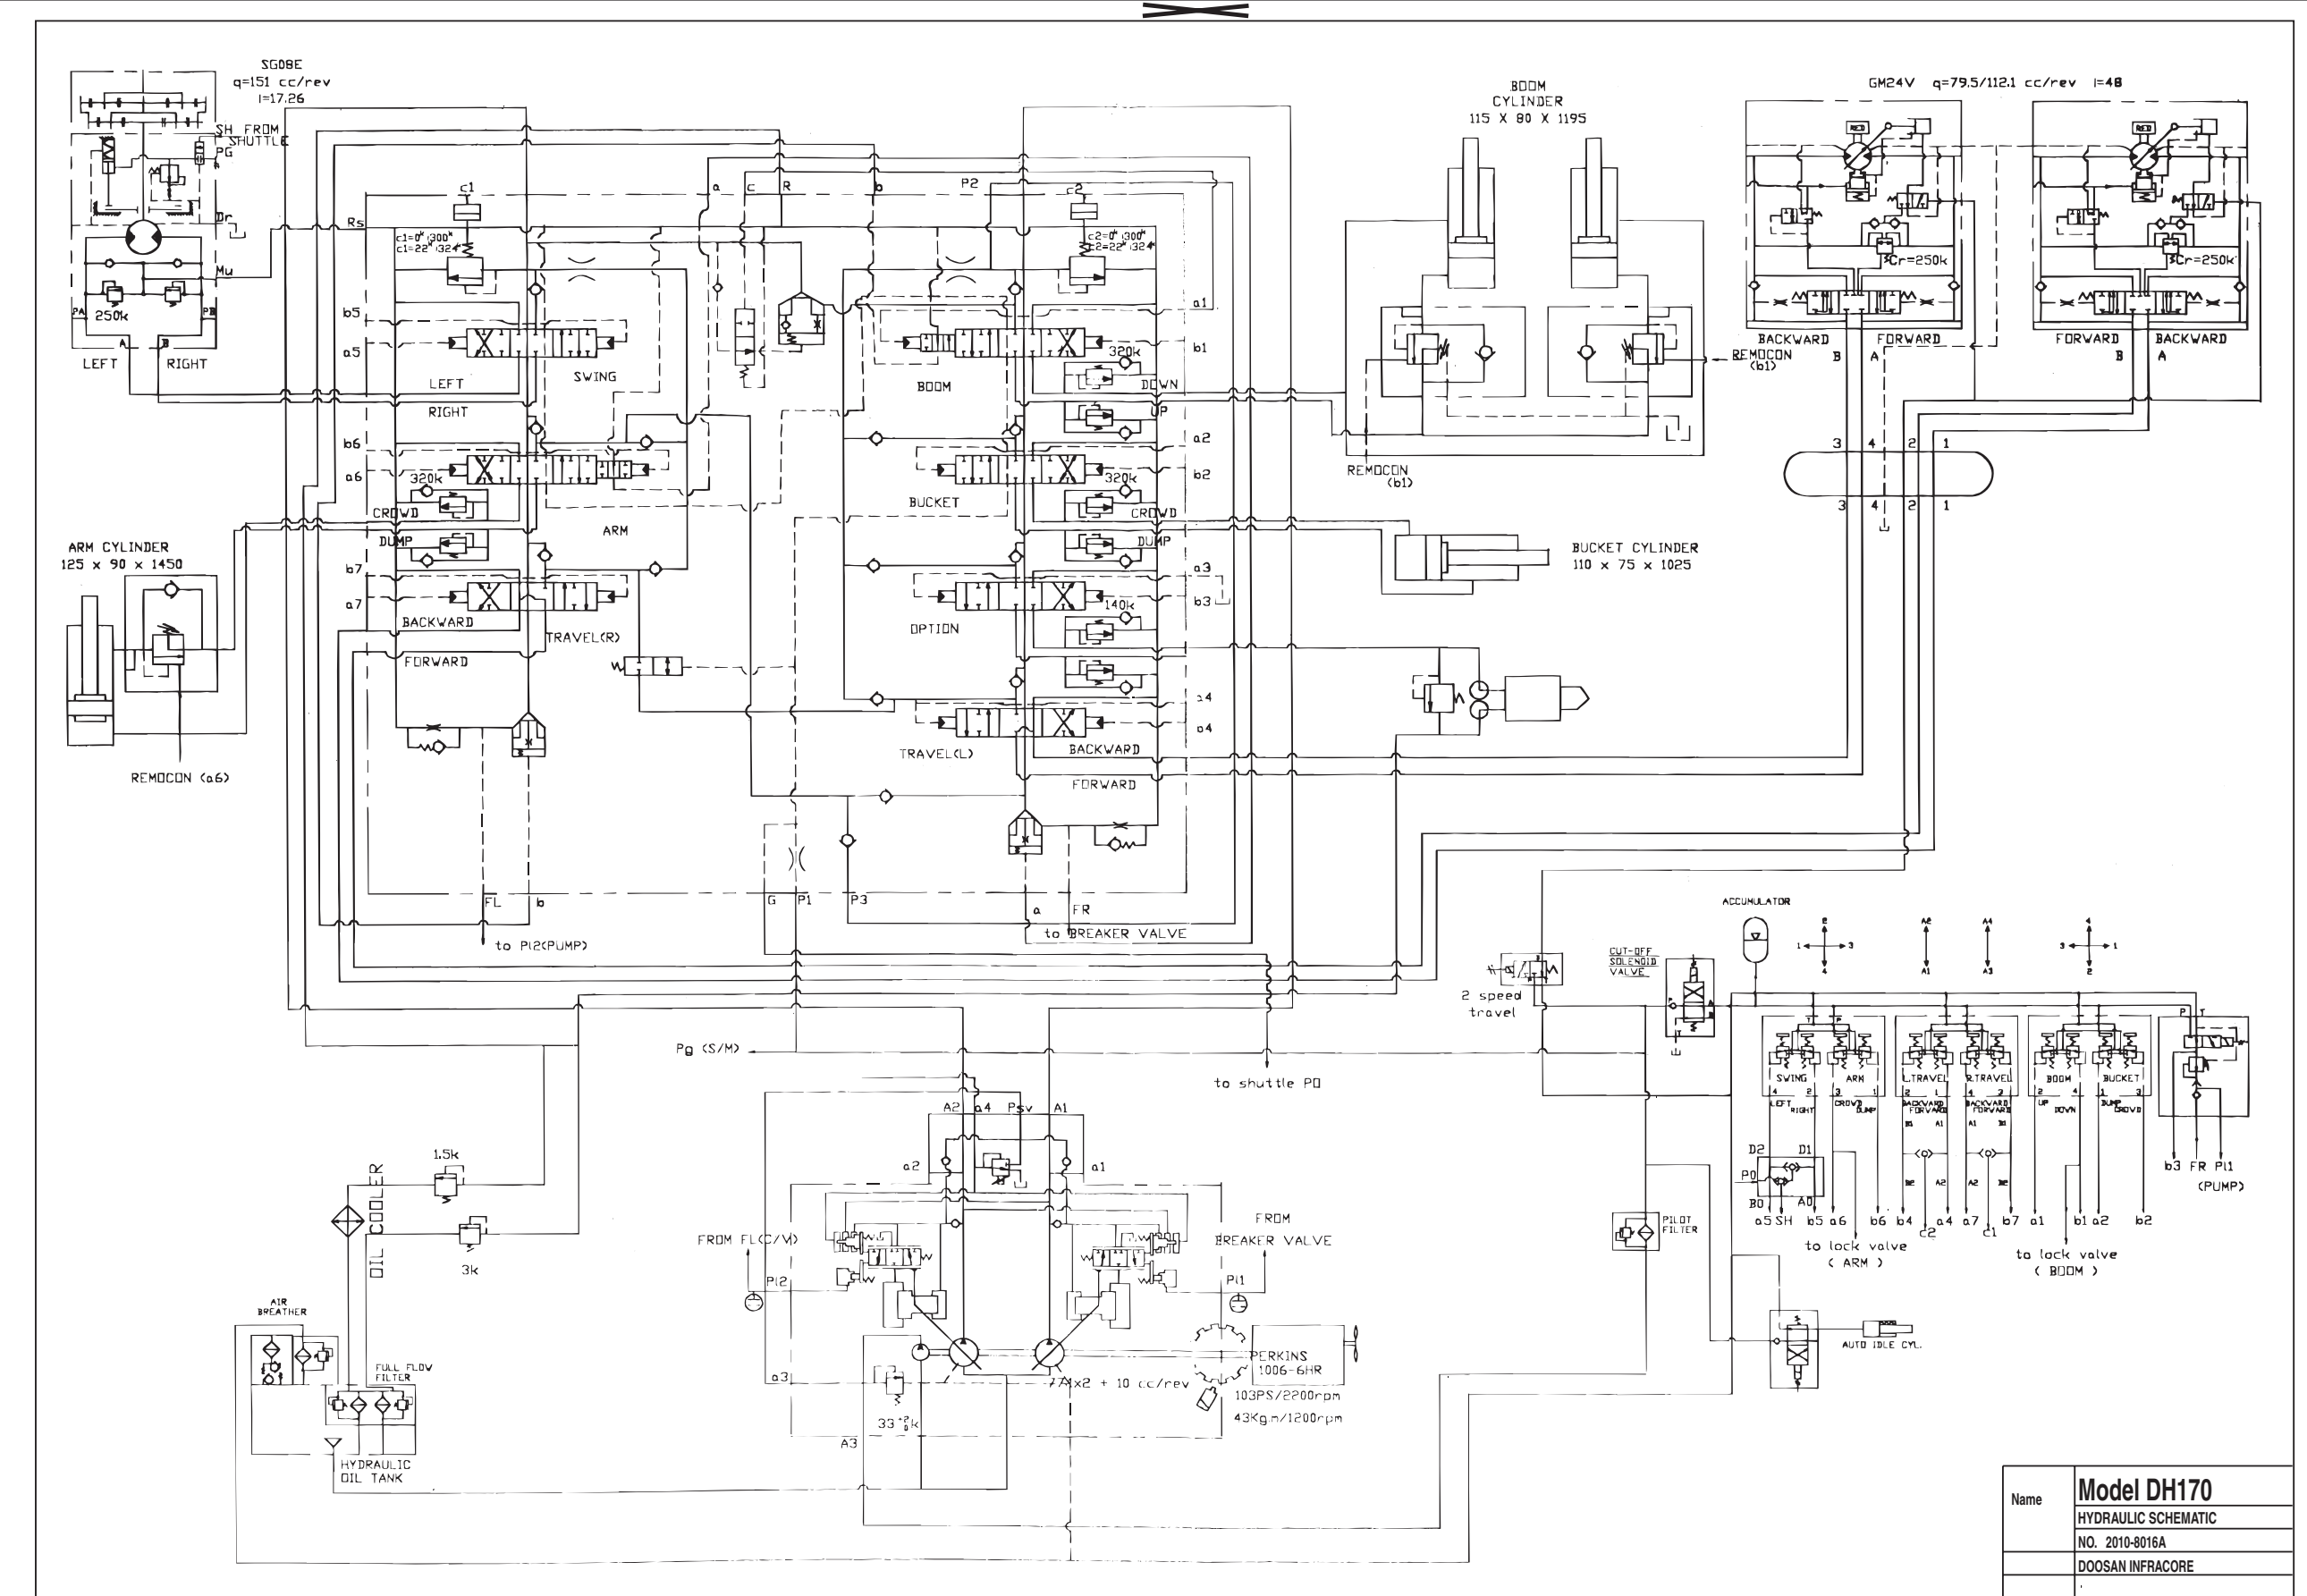


Name	Model DH170
	HYDRAULIC SCHEMATIC
	NO. 2010-8016A
	DOOSAN INFRACORE

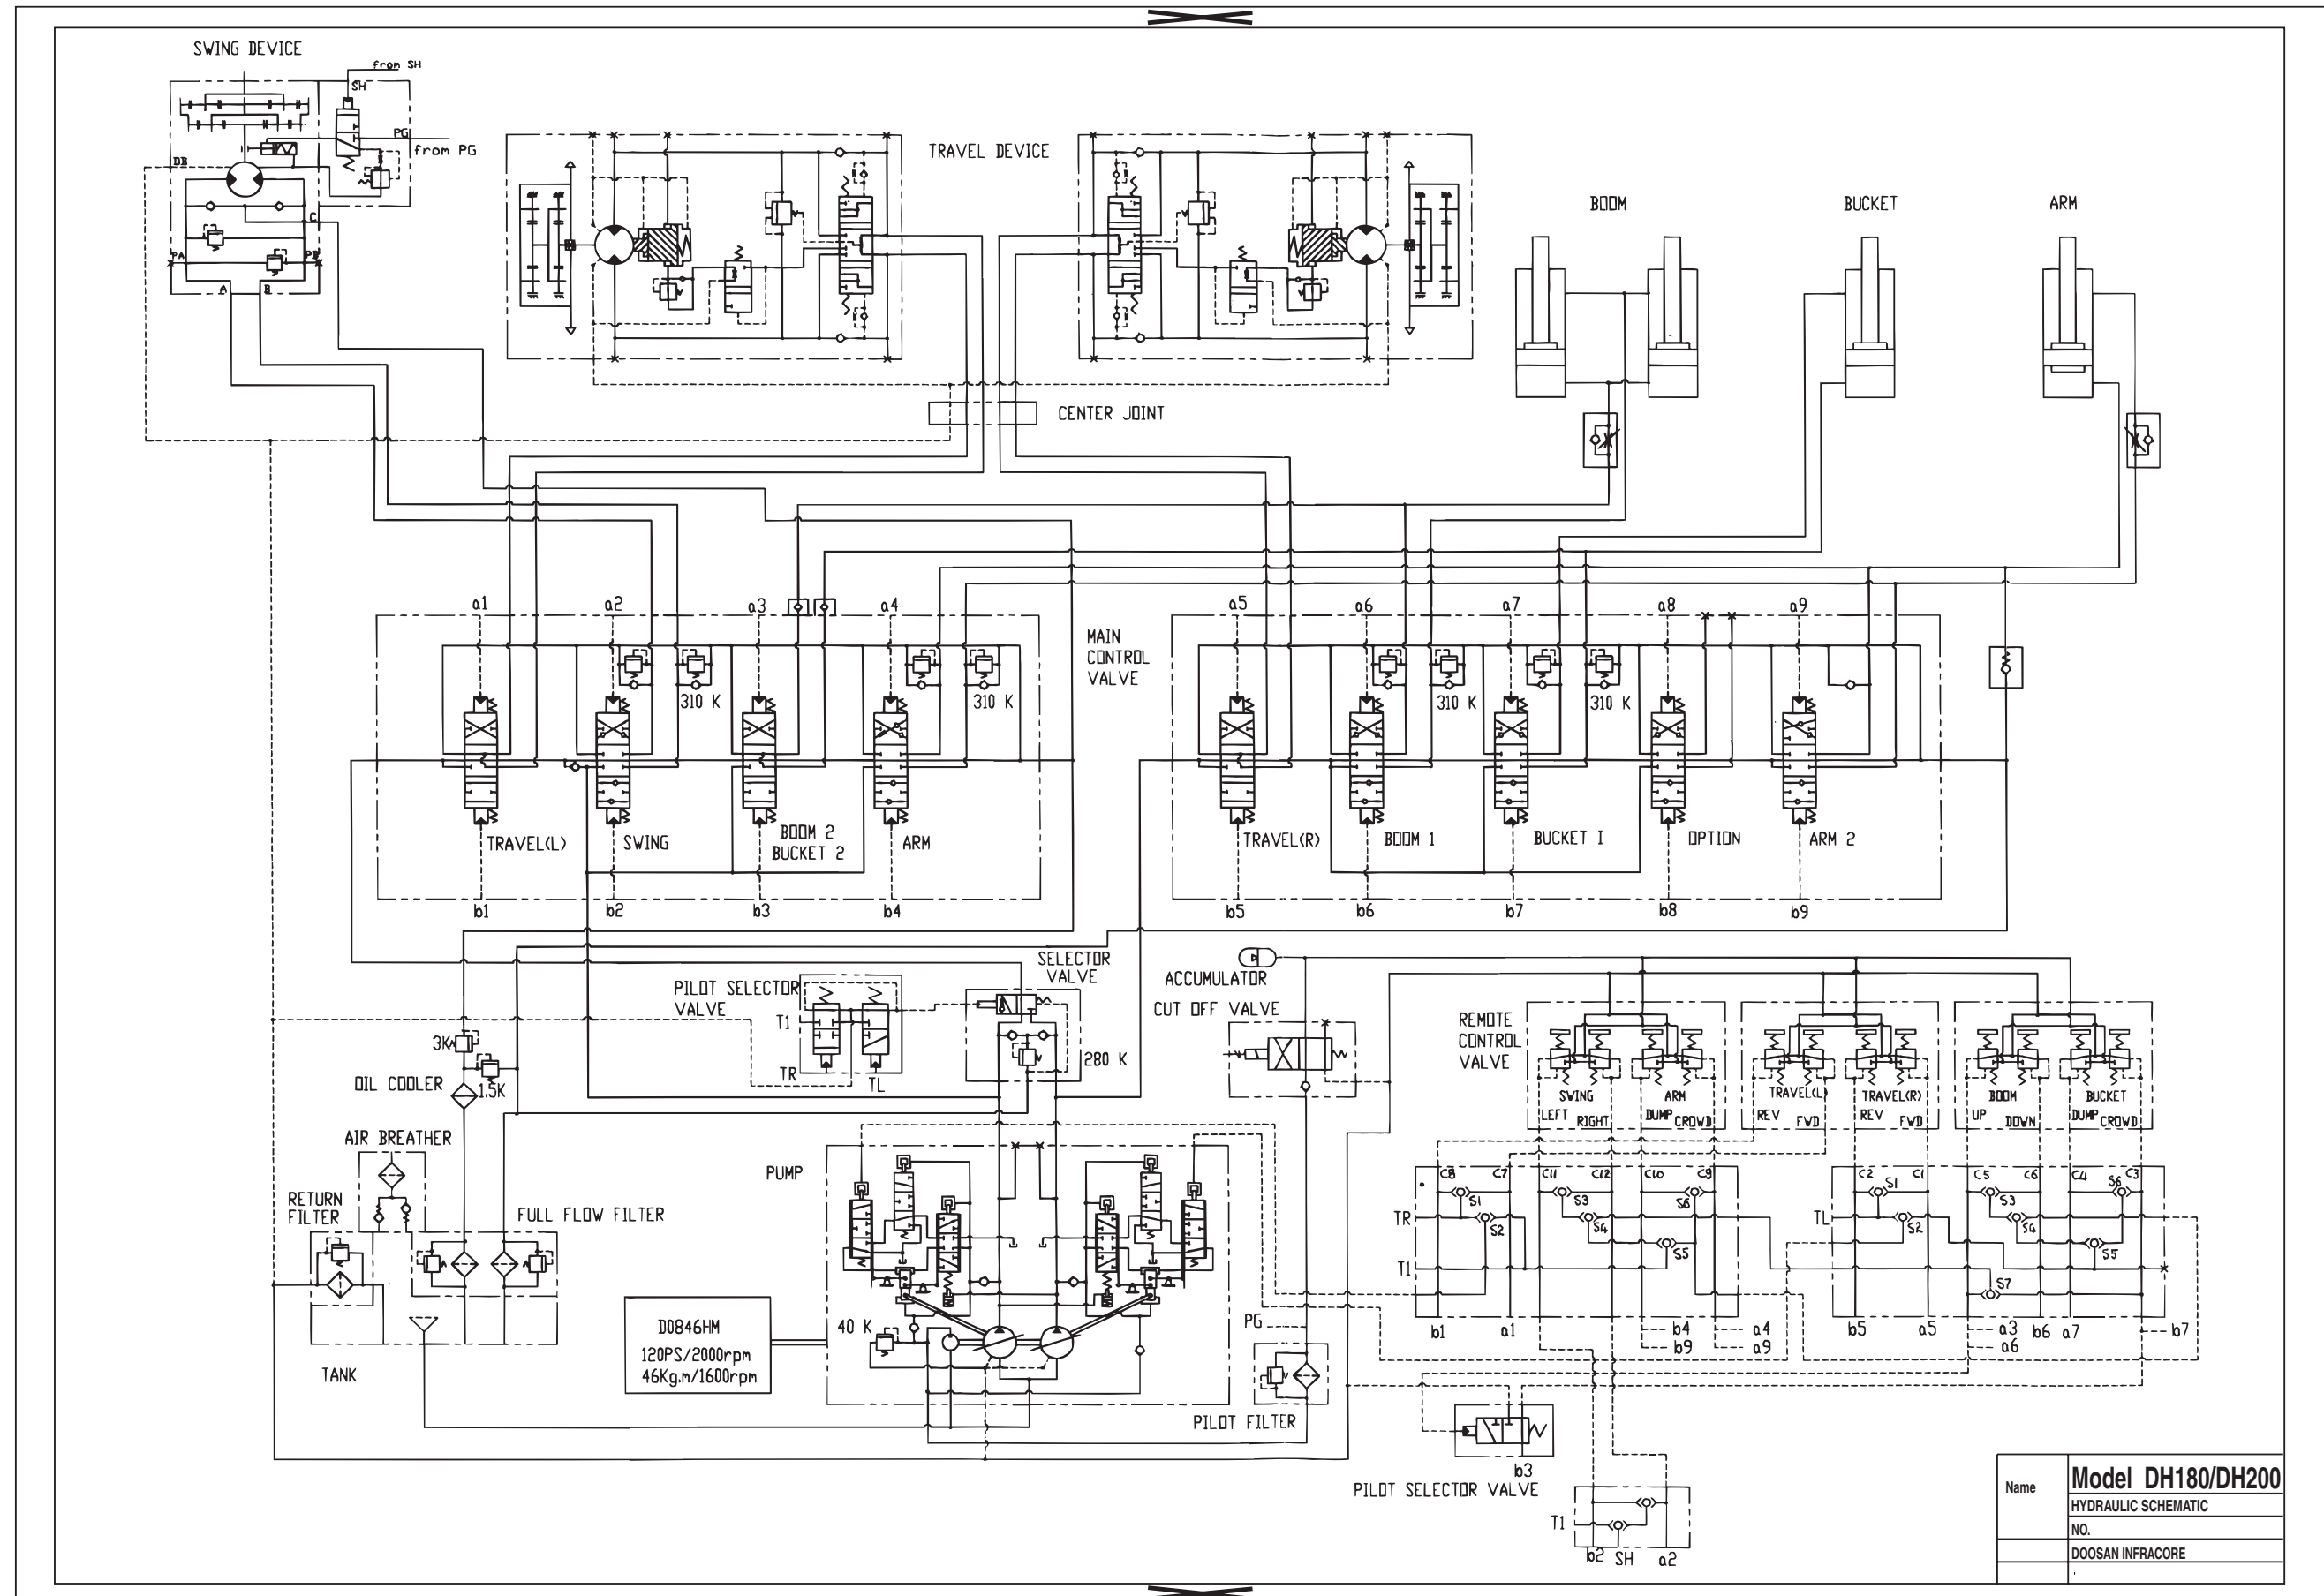

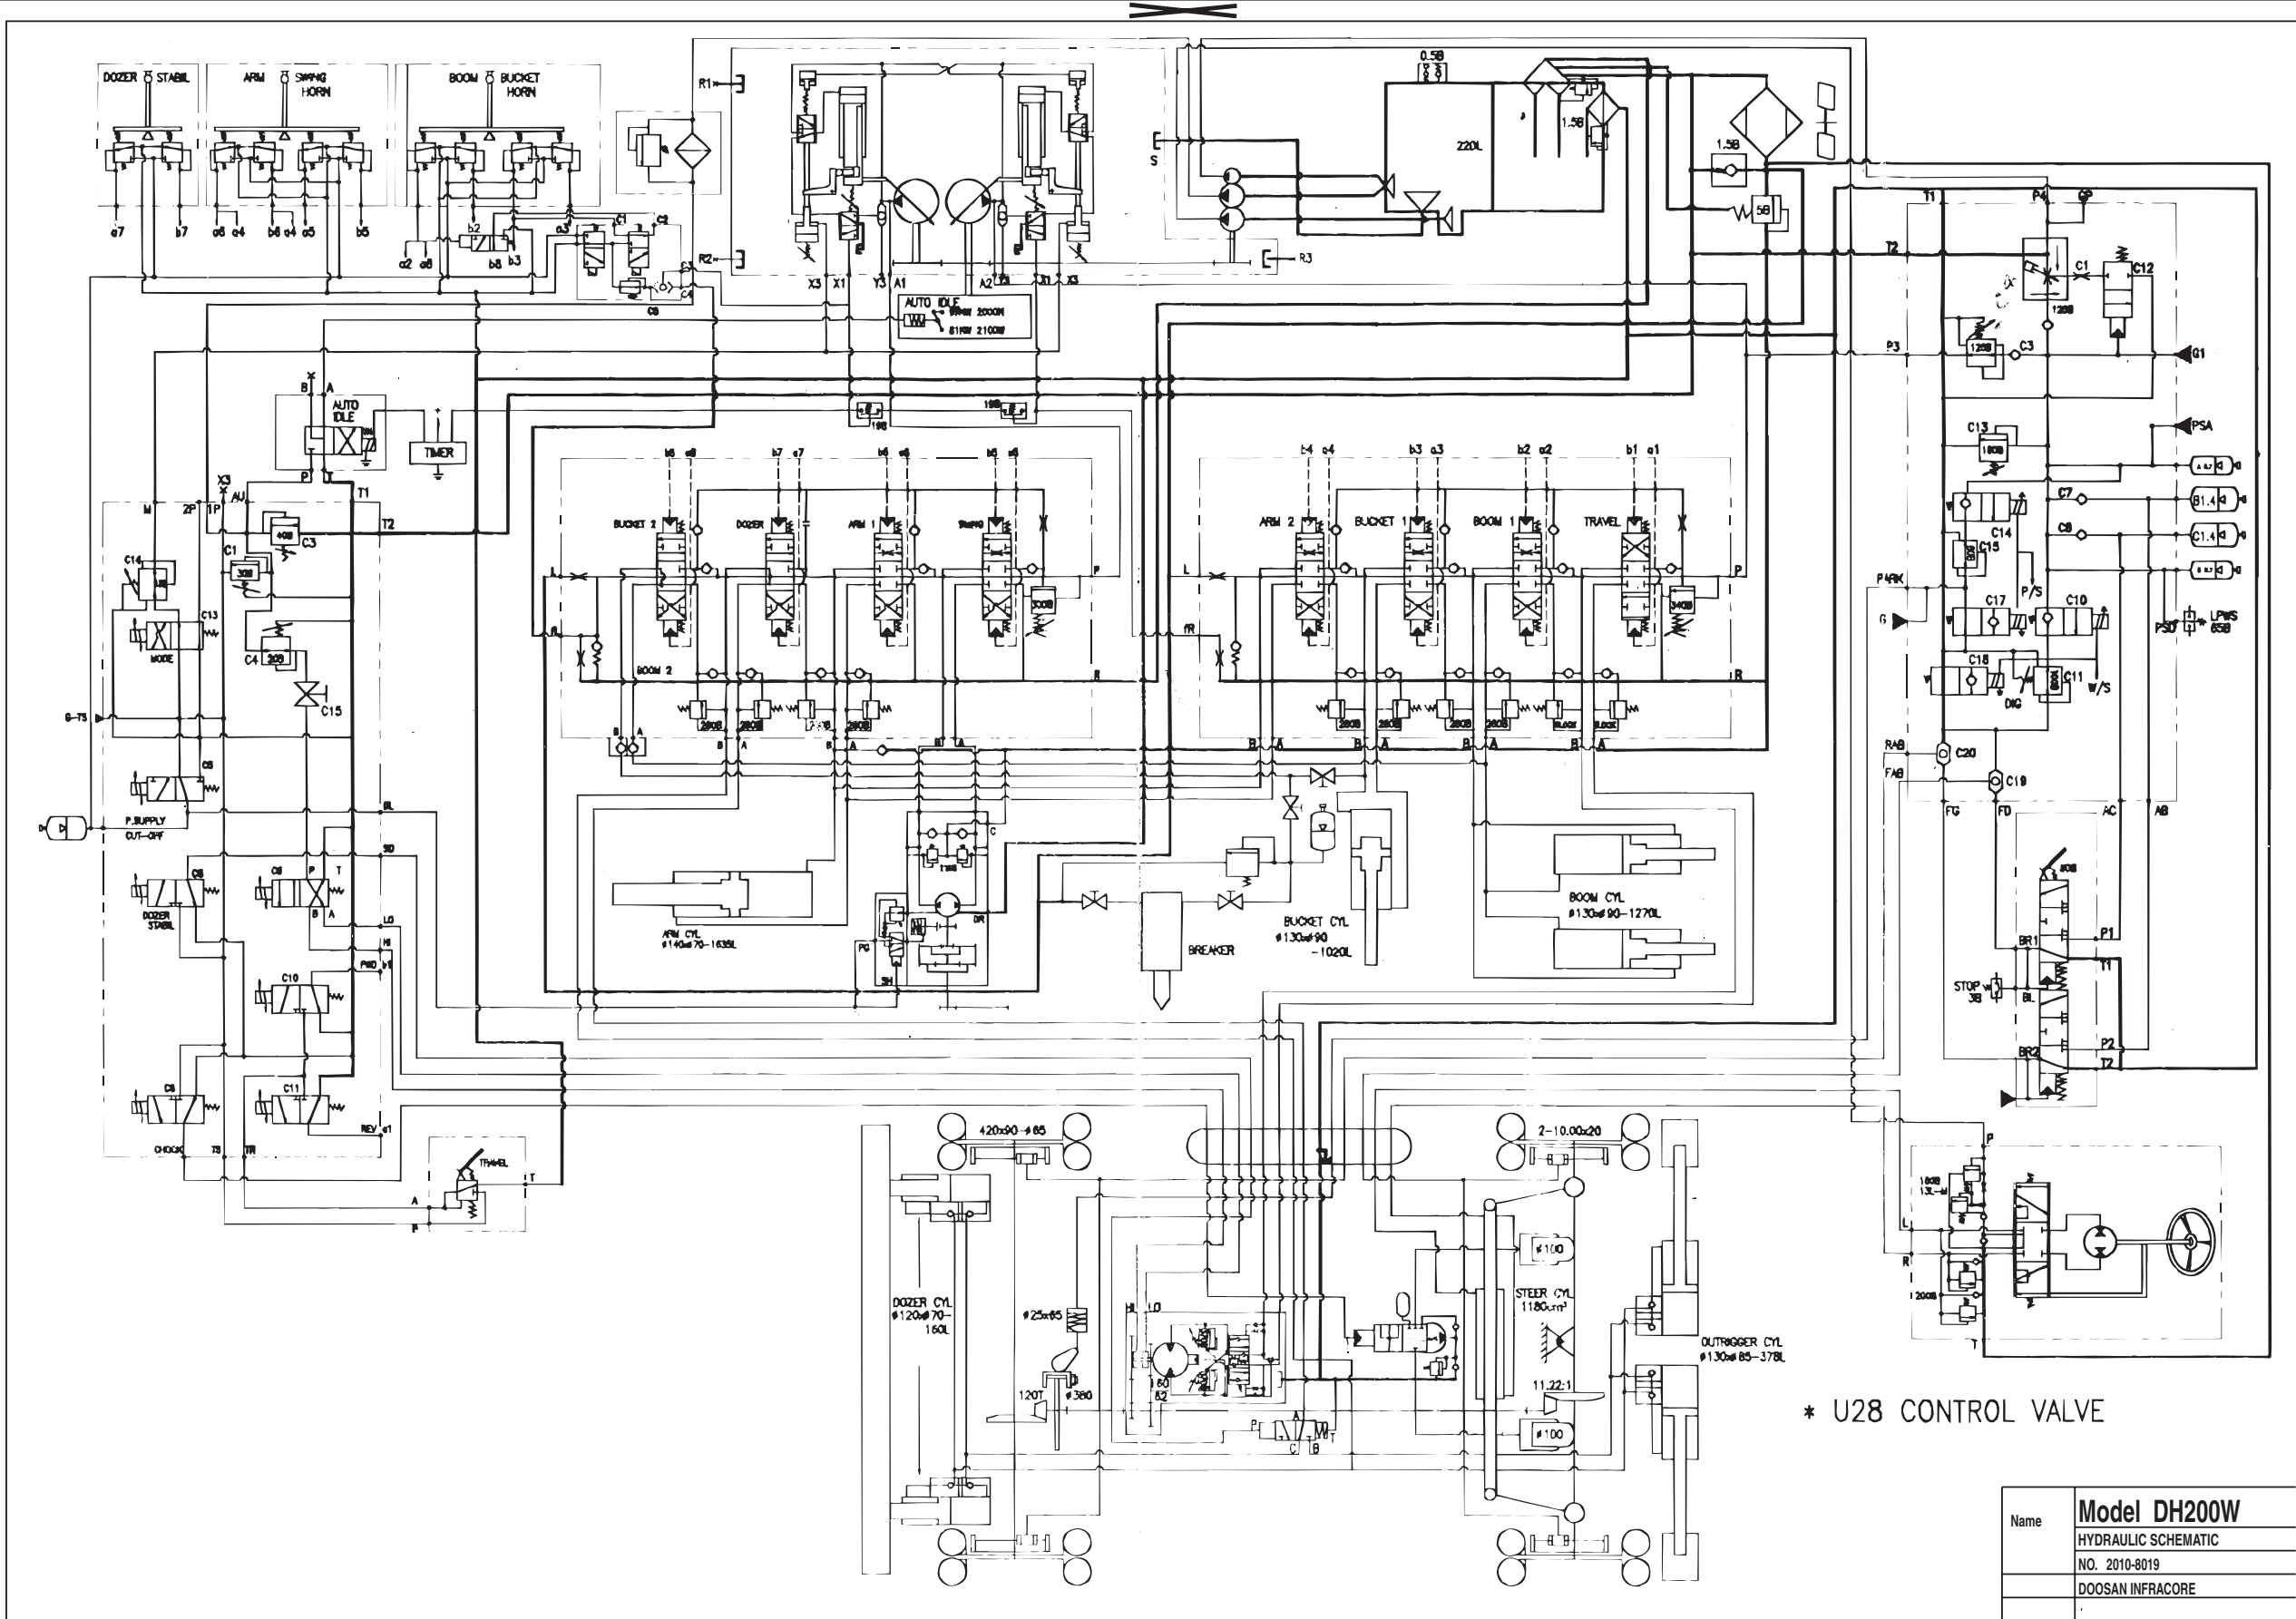


* U28 CONTROL VALVE


Name	Model DH200W
	HYDRAULIC SCHEMATIC
	NO. 2010-8019
	DOOSAN INFRACORE

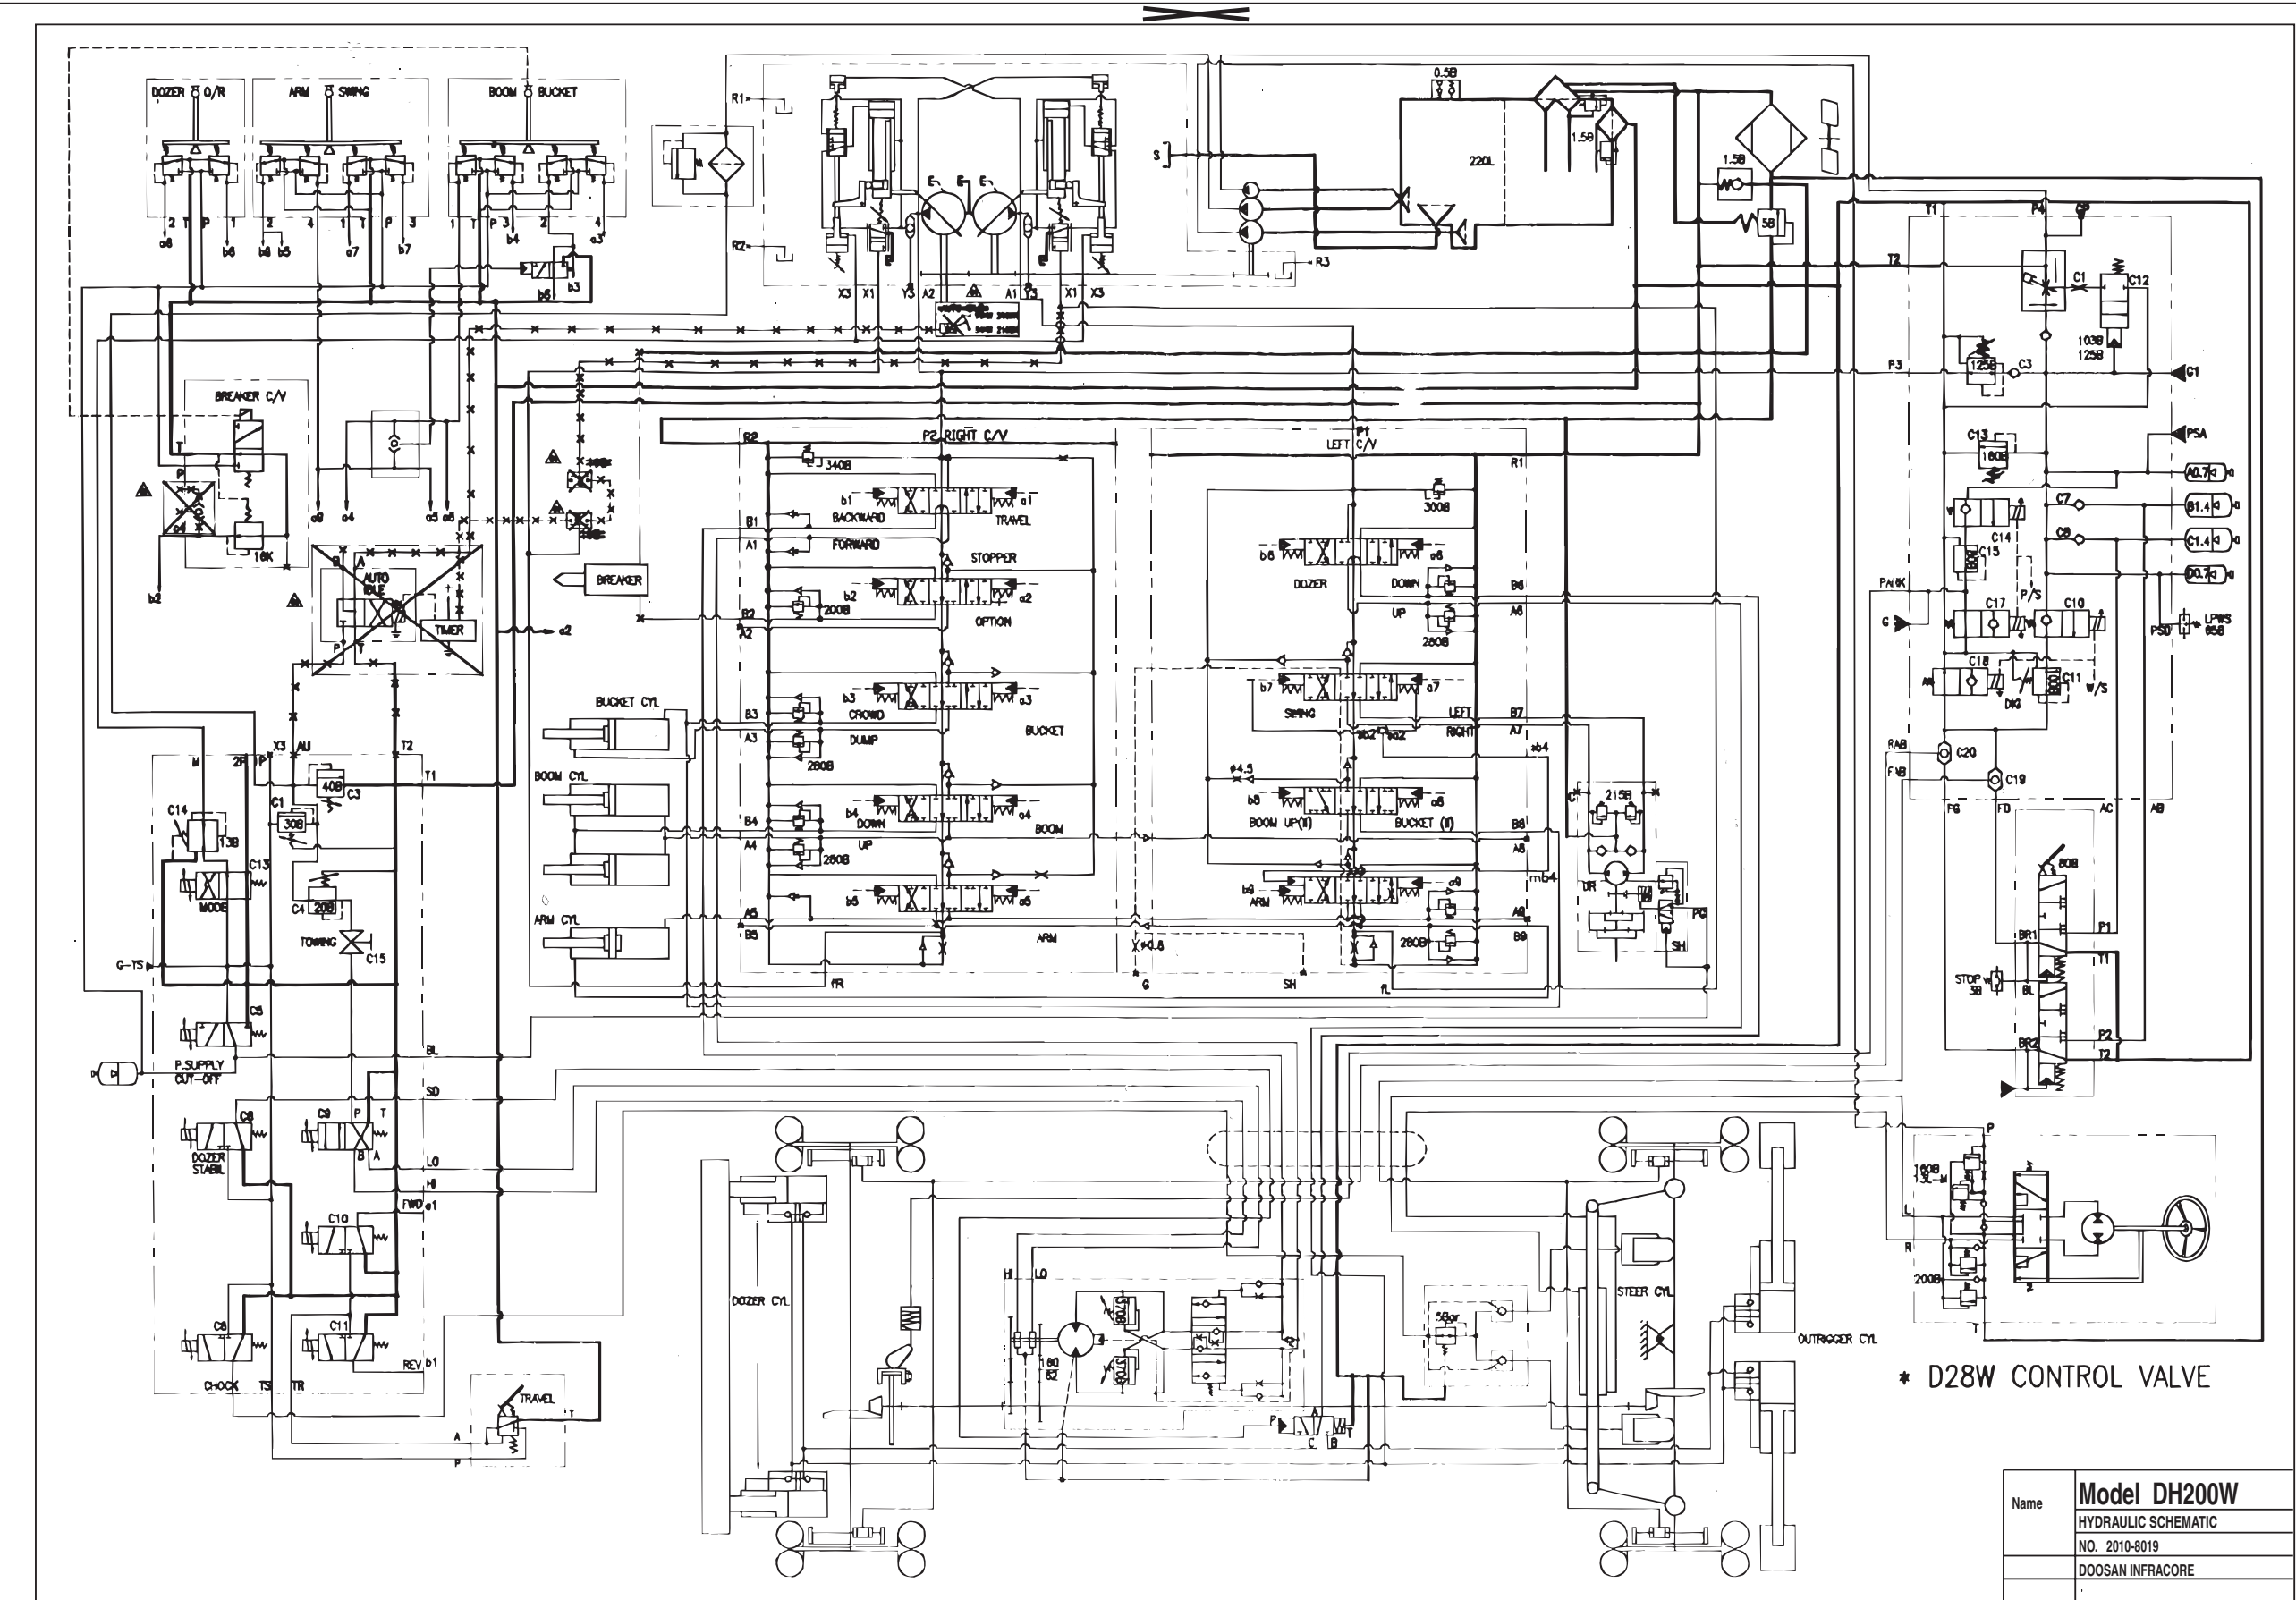


Name	Model DH200W
	HYDRAULIC SCHEMATIC
	NO. 2010-8019
	DOOSAN INFRACORE

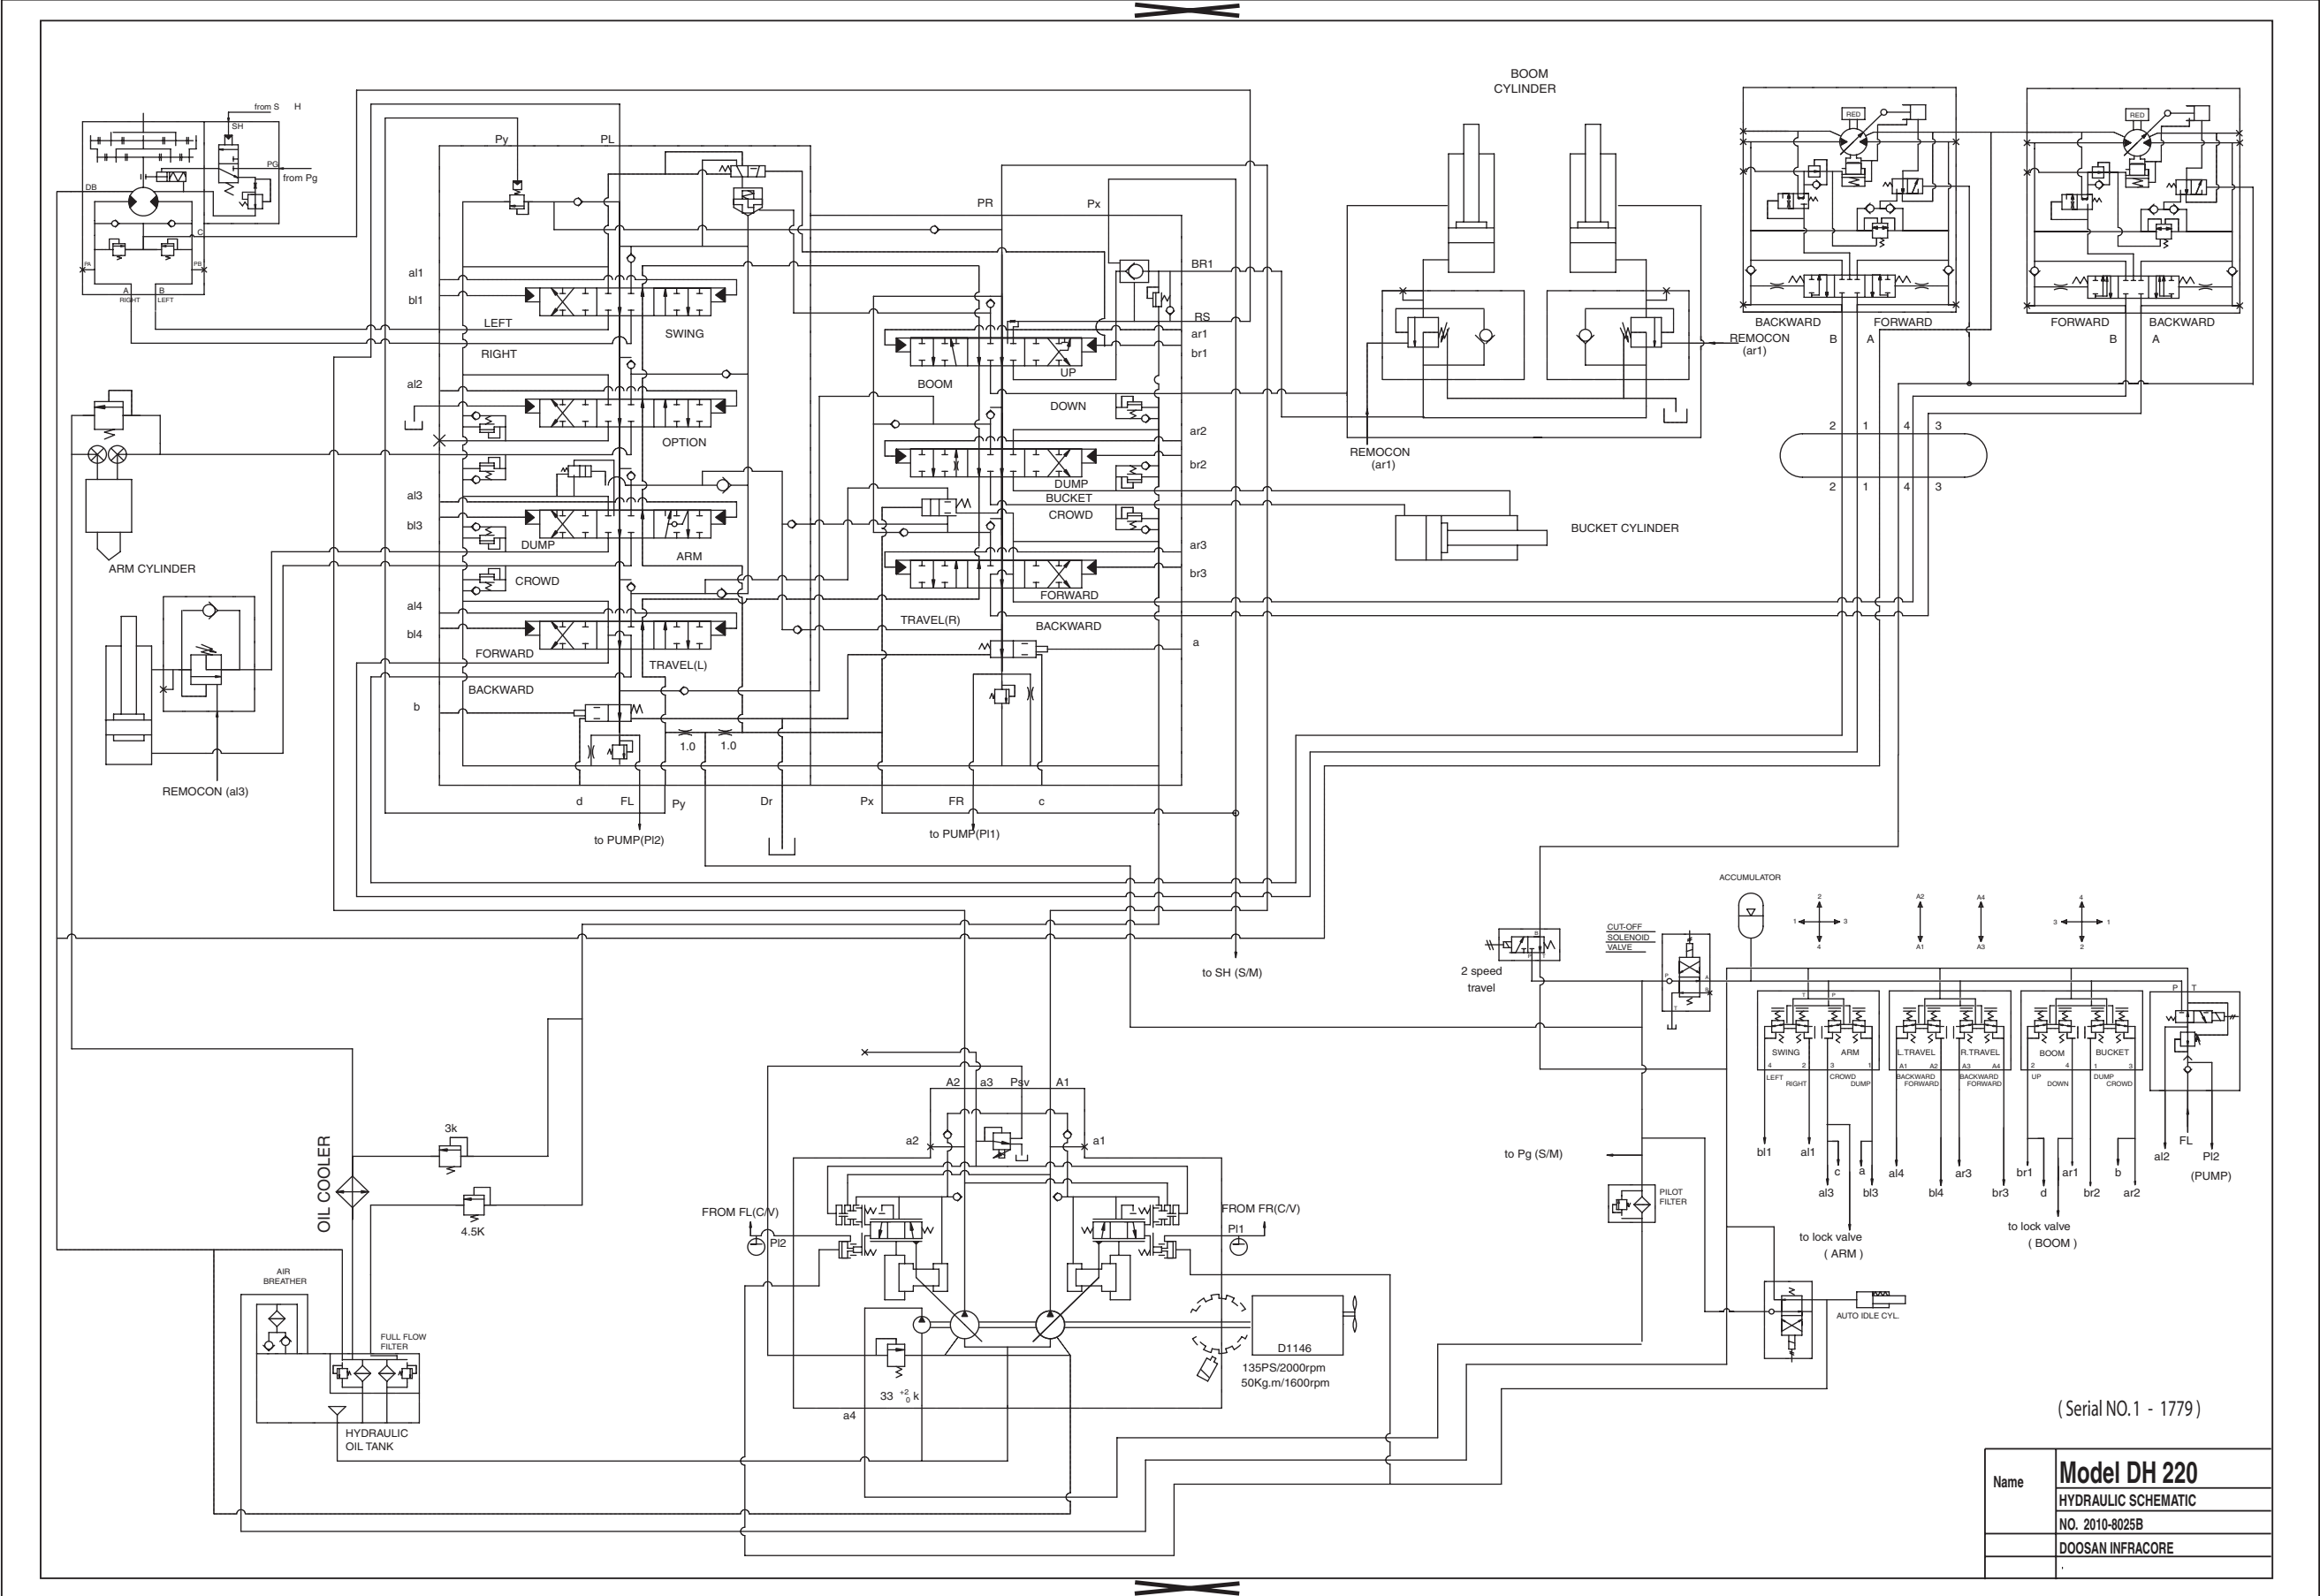



HAAE0910

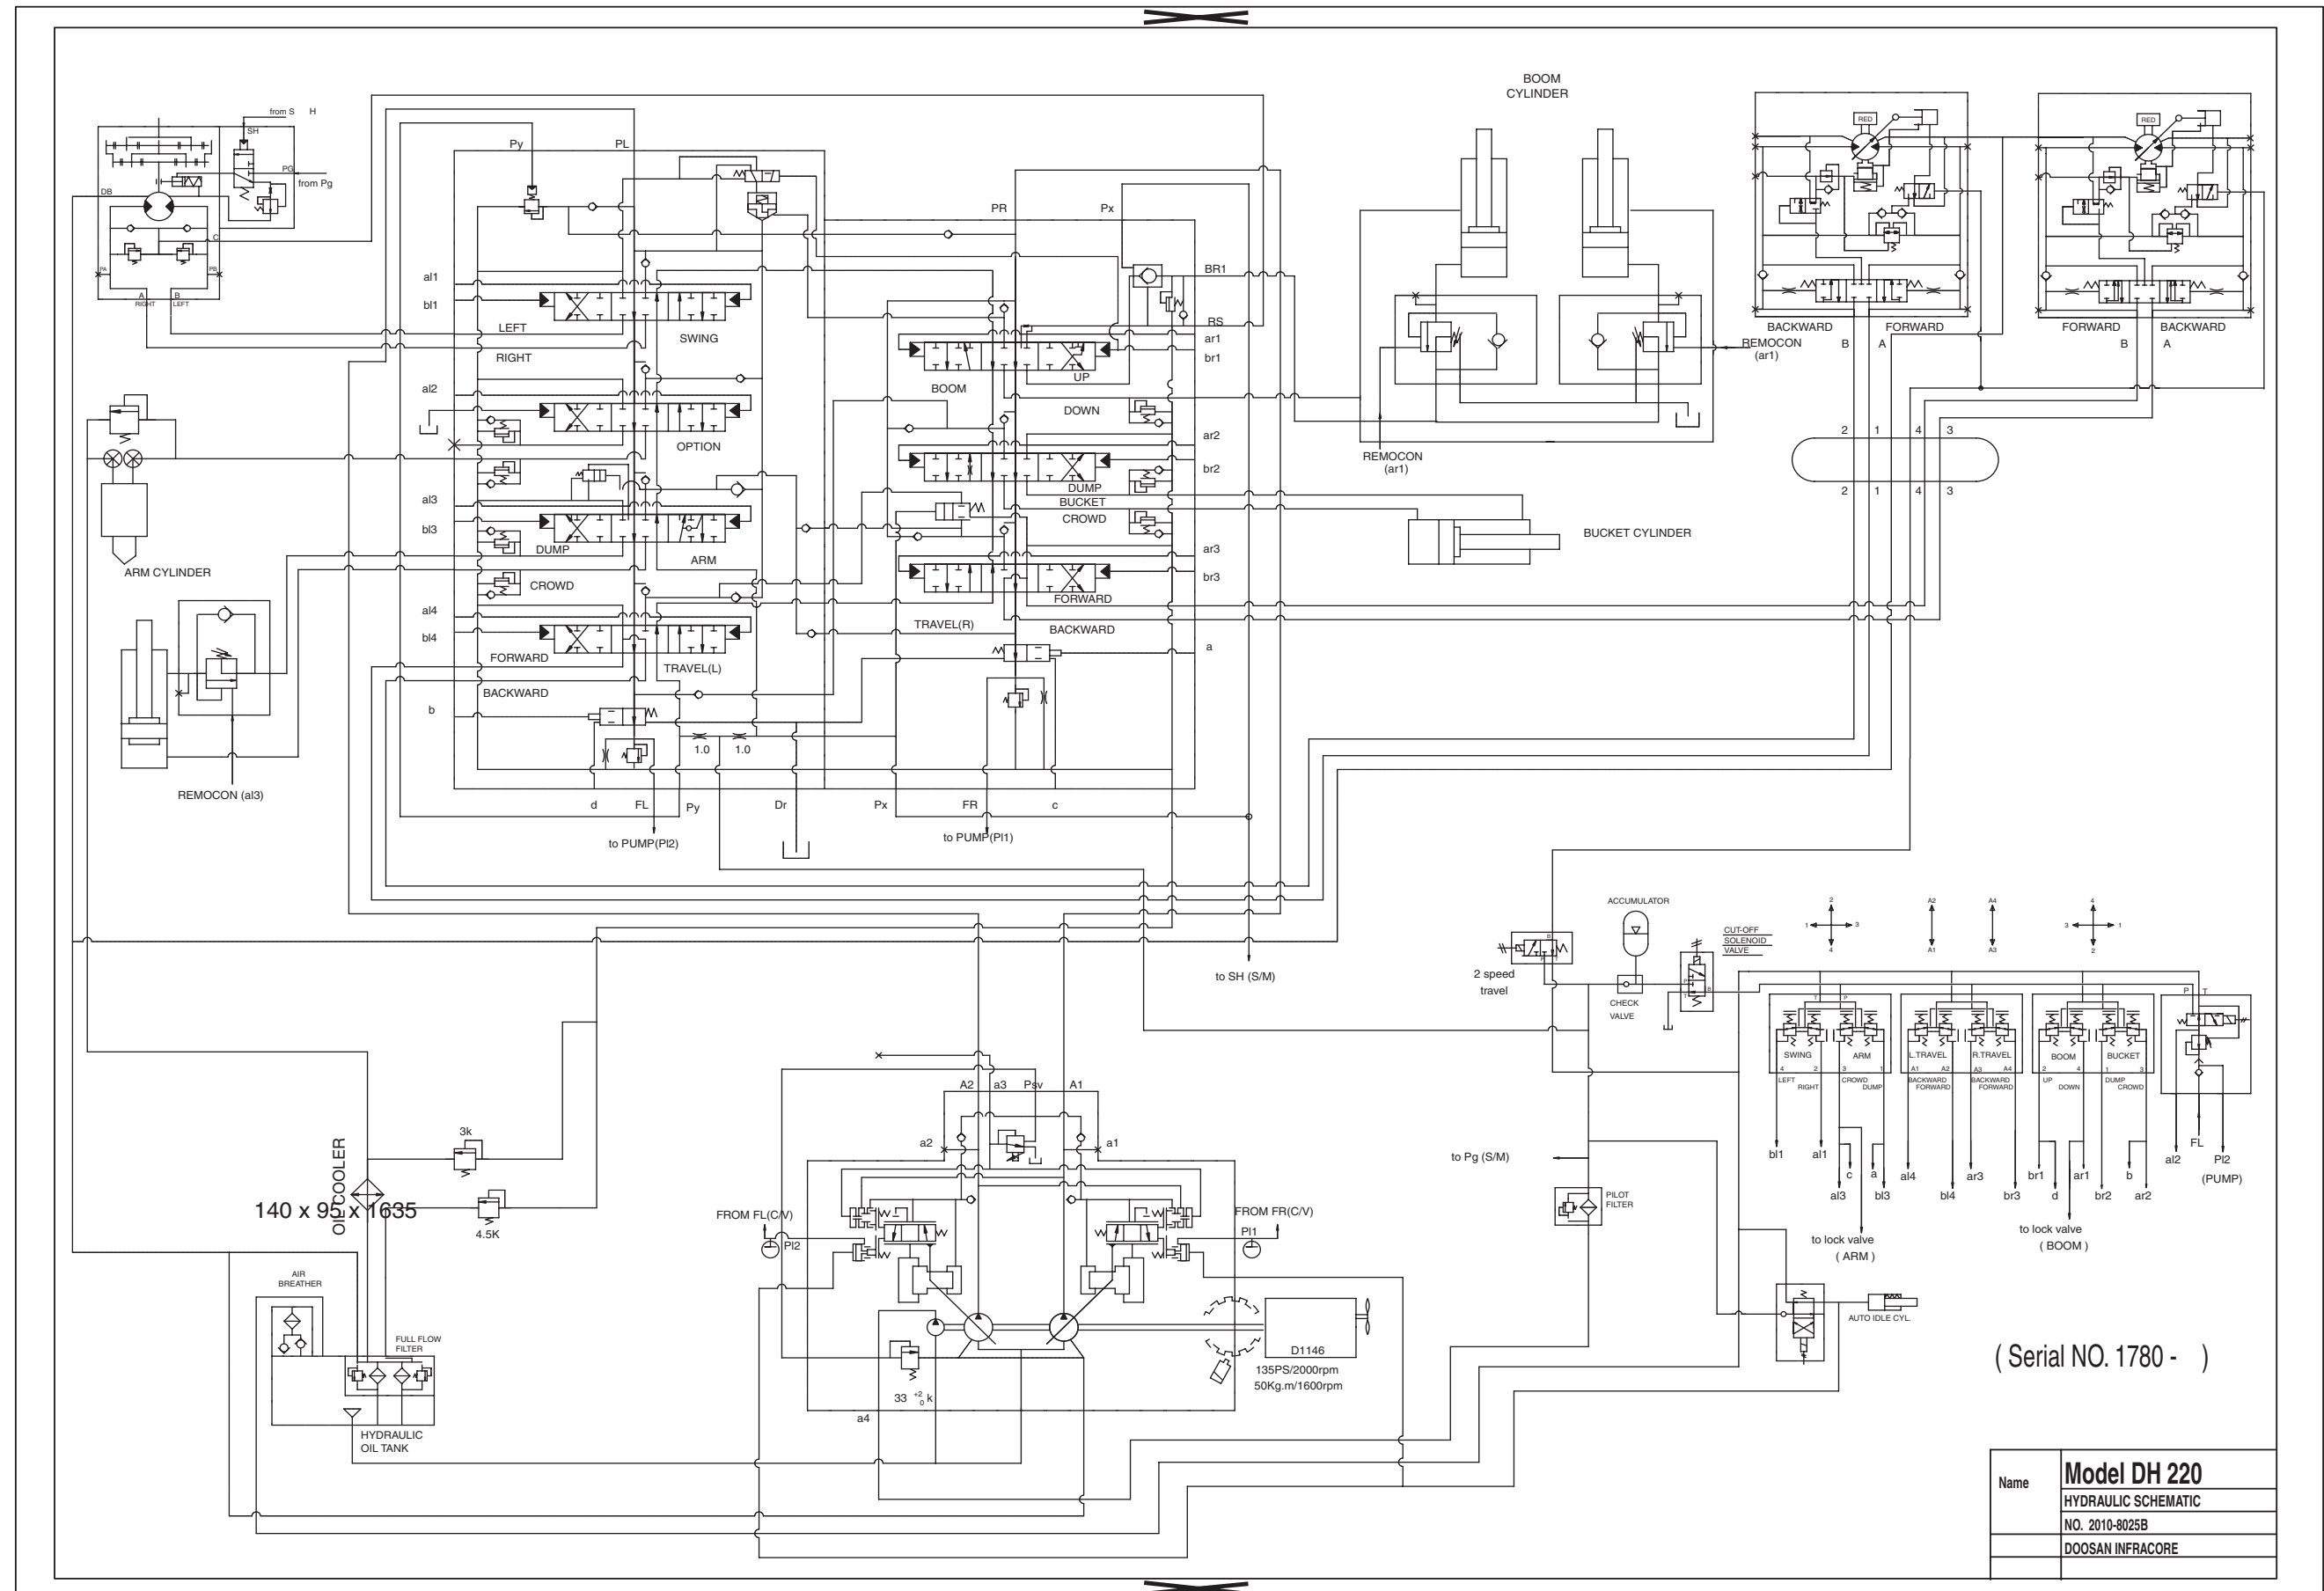

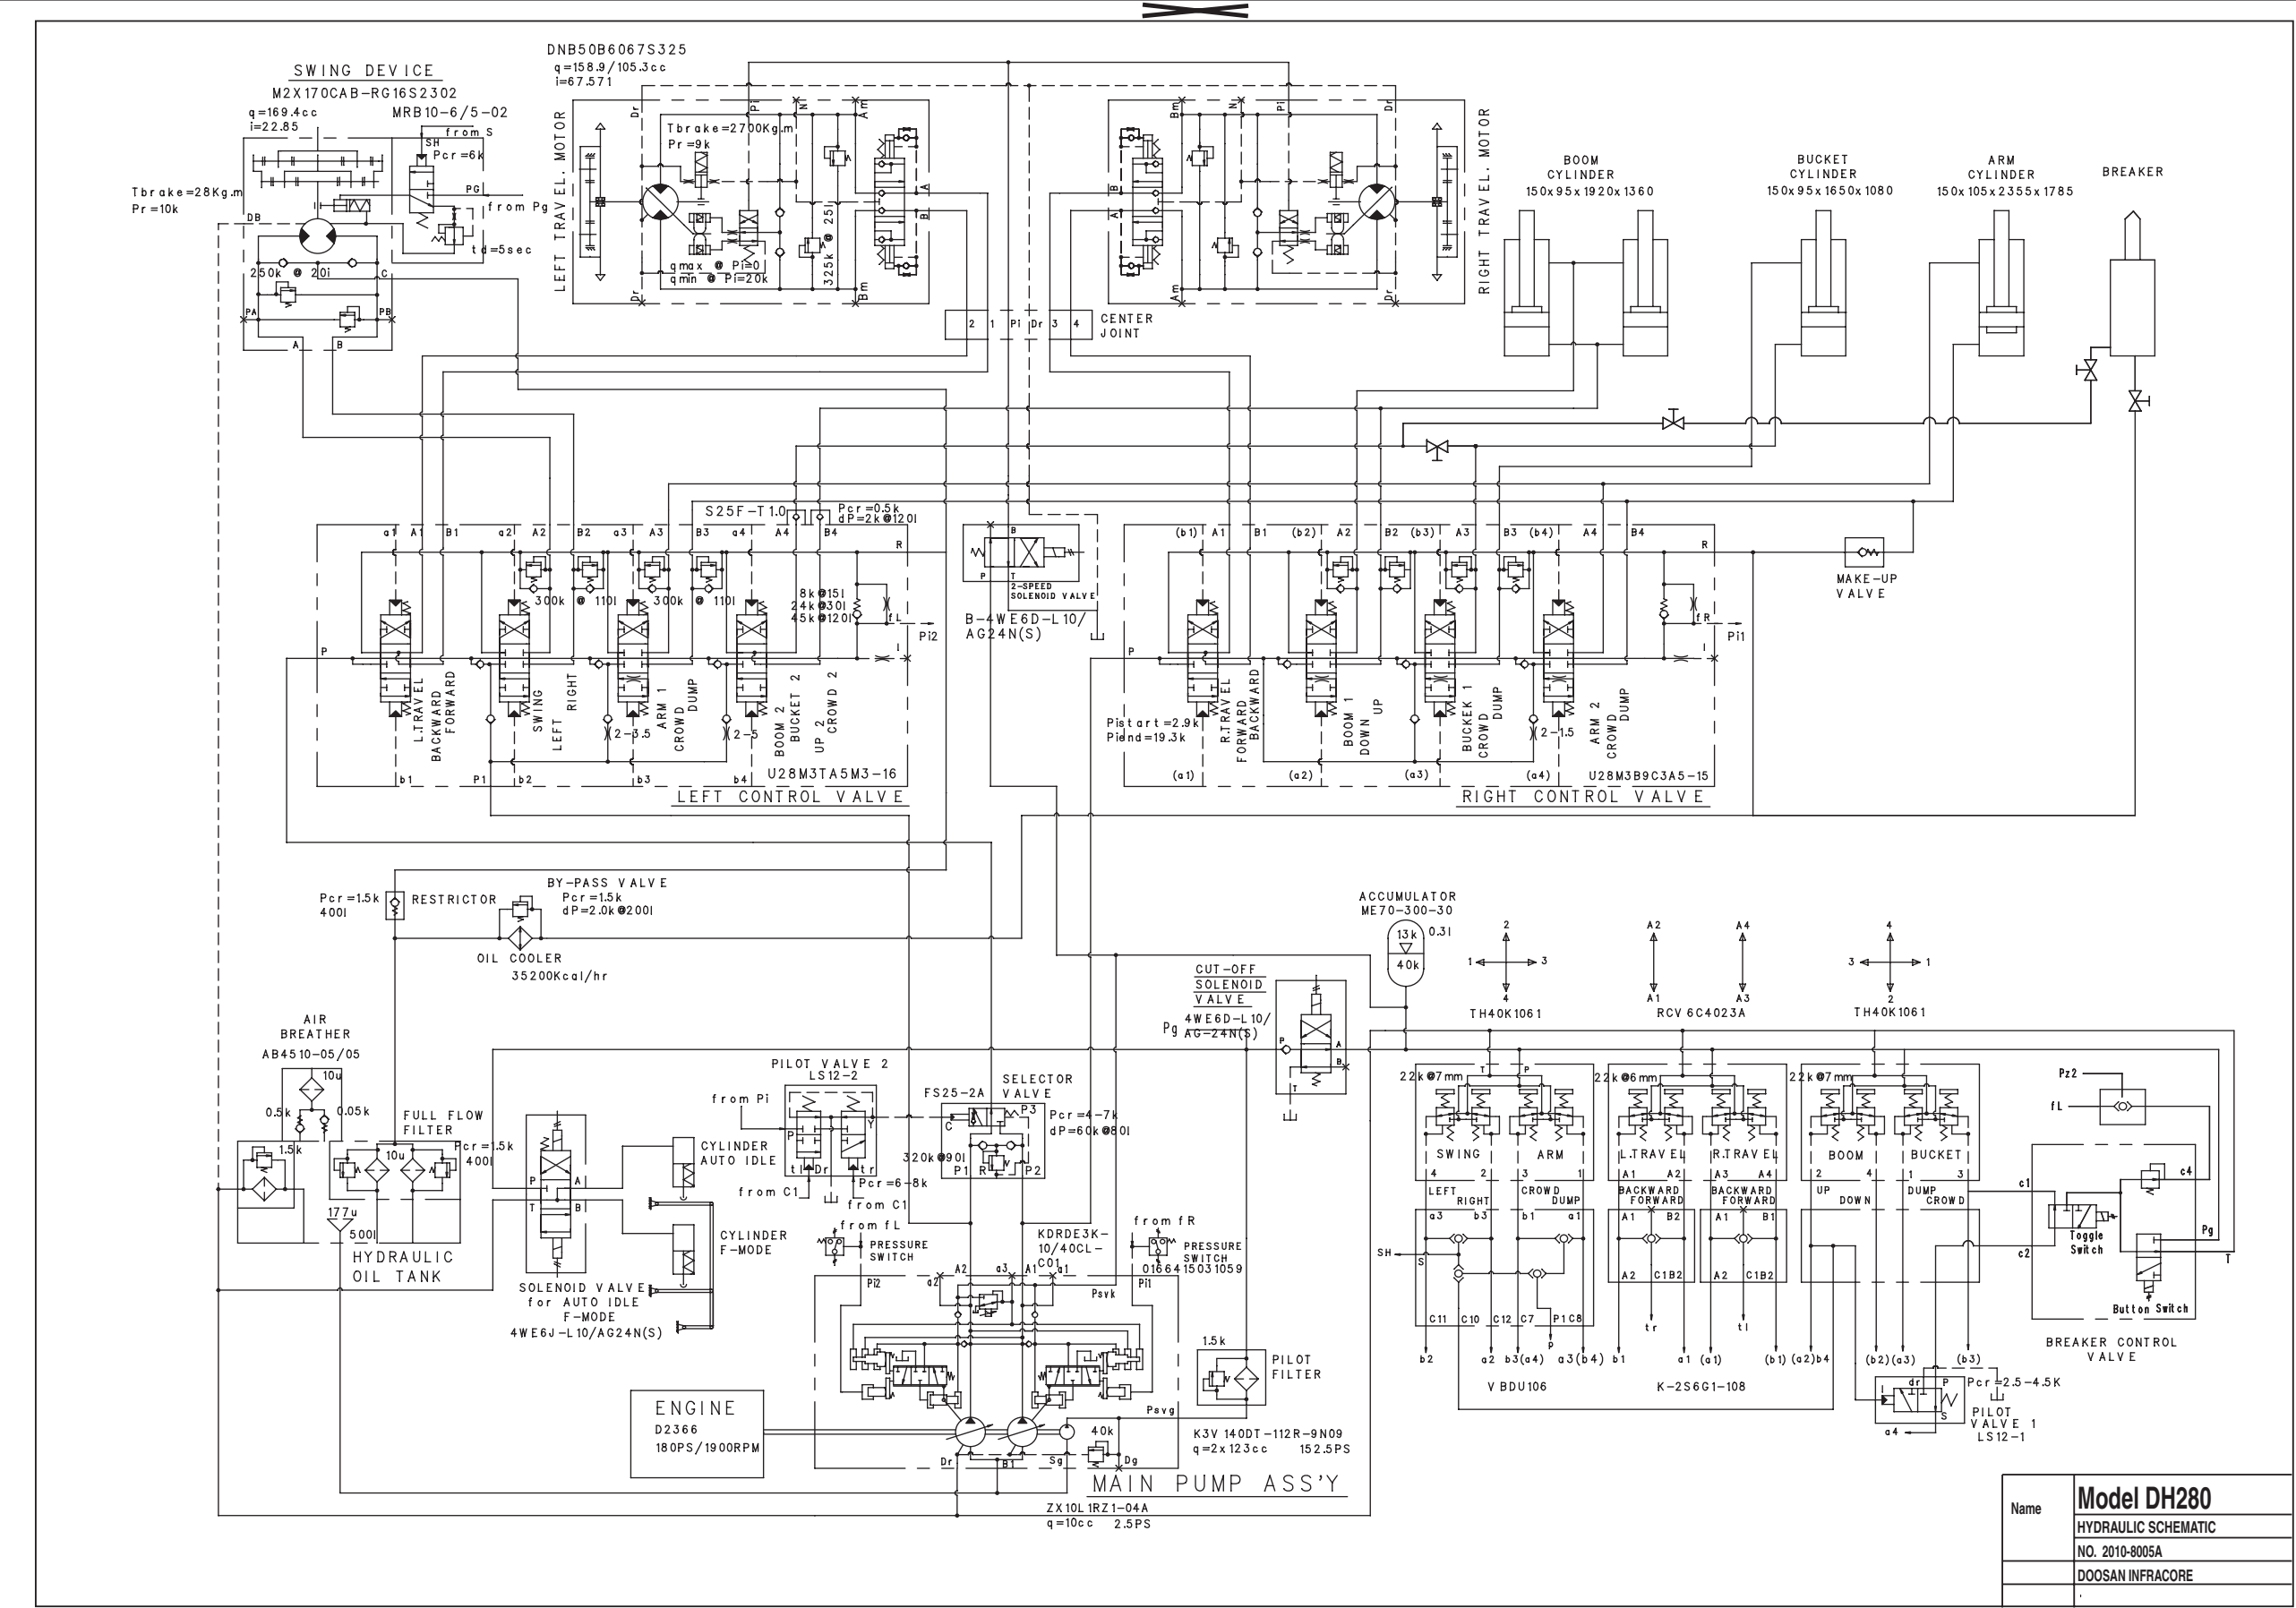

Name	Model DH280
	HYDRAULIC SCHEMATIC
	NO. 2010-8005A
	DOOSAN INFRACORE

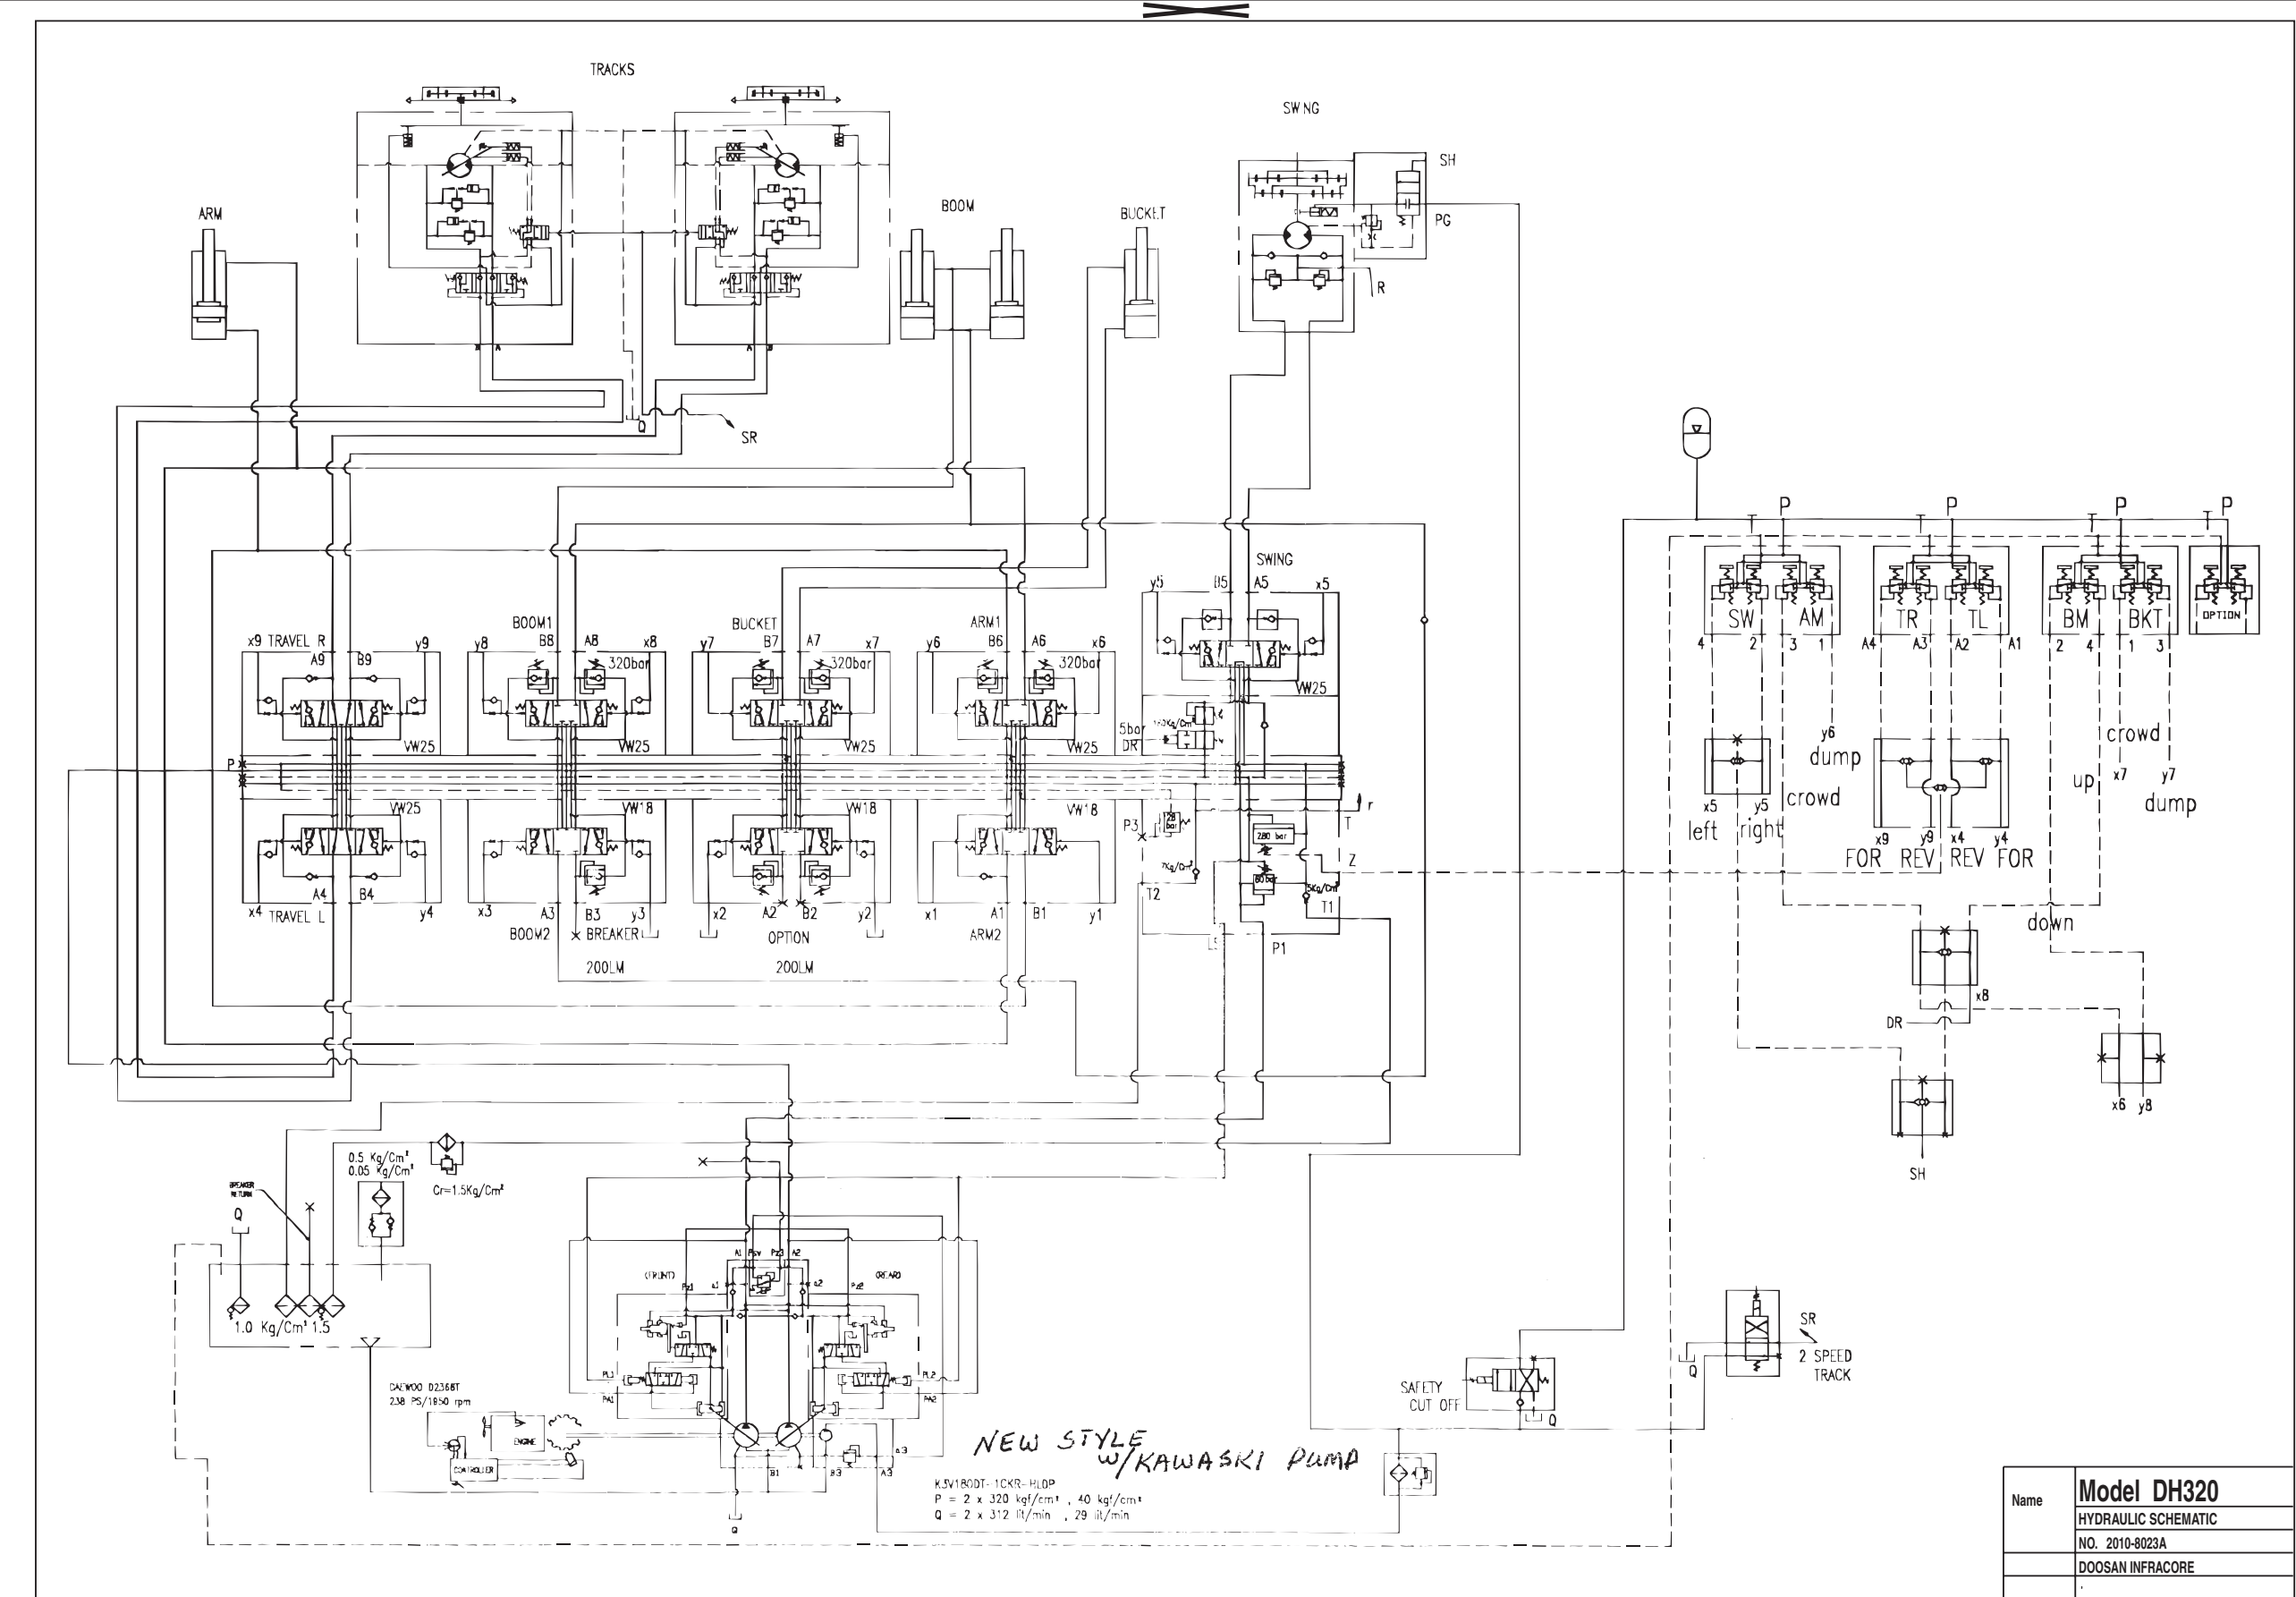

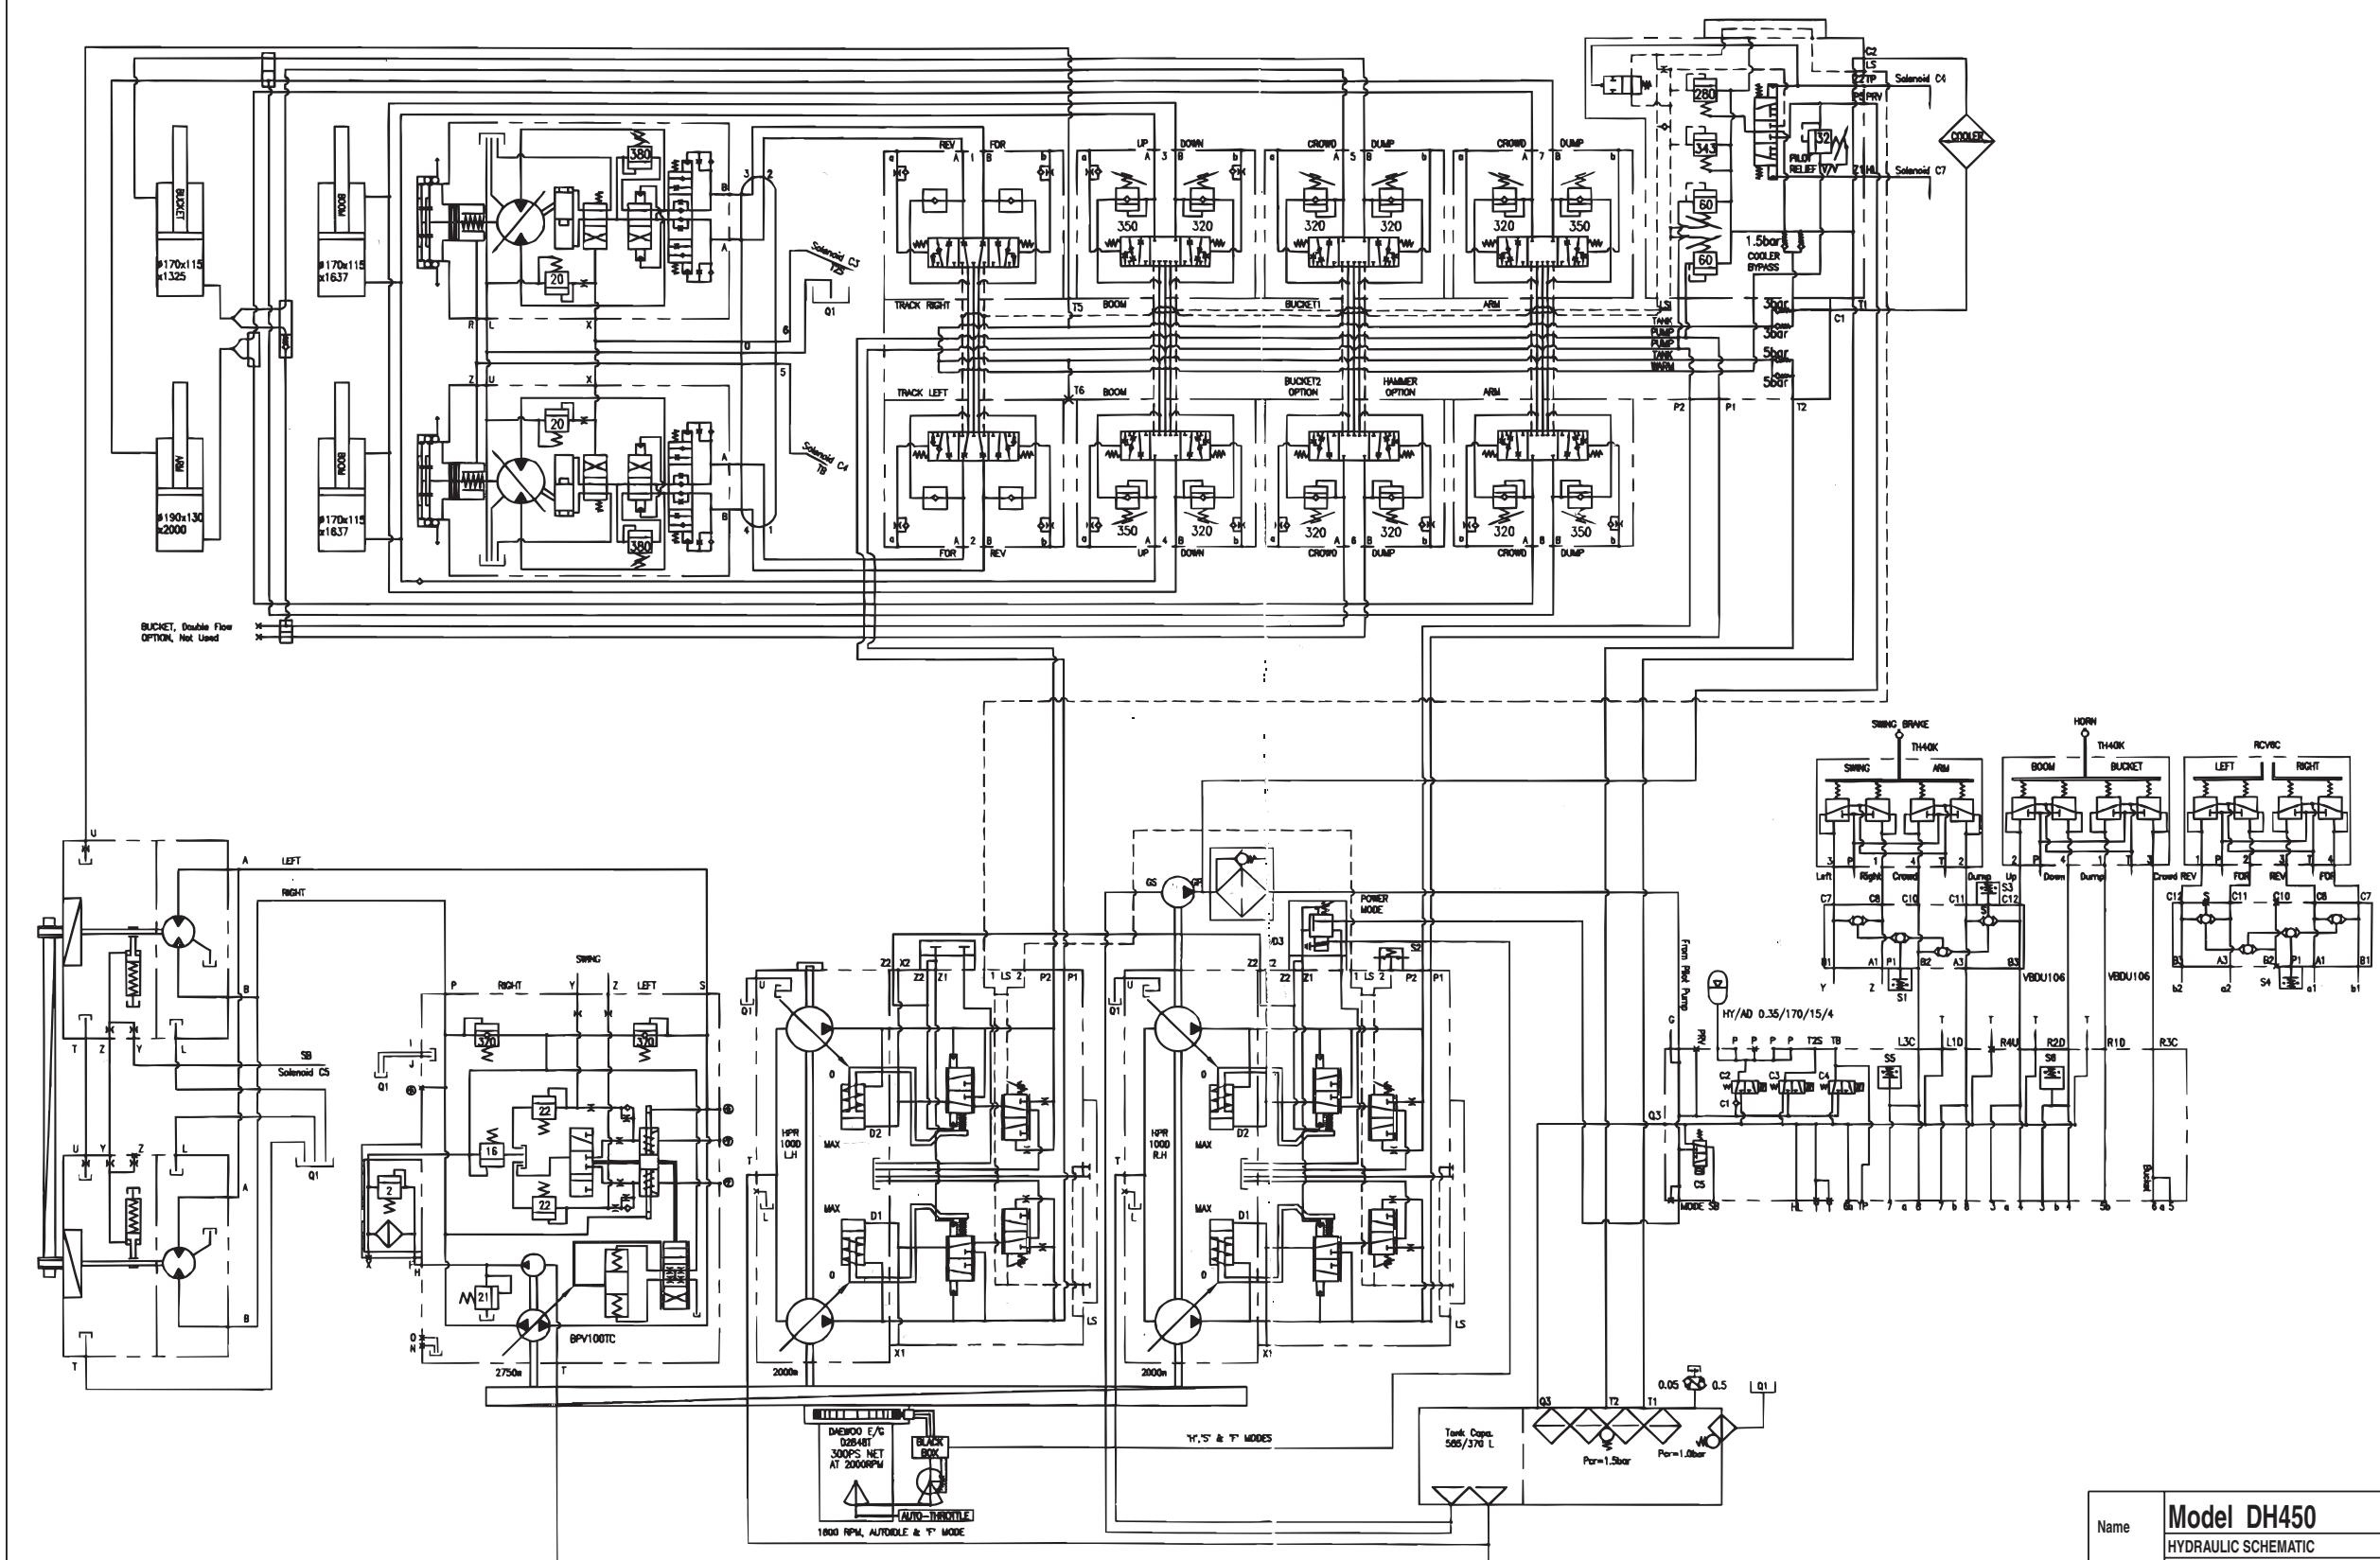

Name	Model DH450
	HYDRAULIC SCHEMATIC
	NO. 2010-8029A
	DOOSAN INFRACORE

TABLE OF CONTENTS

Electrical Circuits

Solar 070-III4

Solar 130LC-III.....5

Solar 130W-III.....6

Solar 170LC-III.....7

Solar 170W-III.....8

Solar 170W-III.....9

Solar 200W-III.....10

Solar 220LC-III.....11

Solar 280LC-III.....12

Solar 330LC-III.....13

Solar 400LC-III.....14

Solar 450-III15

Hydraulic Circuits

Solar 070-III17

Solar 070-III (with Dozer).....18

Solar 130LC-III.....19

Solar 130LC-III.....20

Solar 130LC-III.....21

Solar 130W-III (S/N 0001 thru 1720) with DX22 Control Valve.....22

Solar 130W-III (S/N 0001 thru 0097)23

Solar 130W-III (0098 and Up)24

Solar 170LC-III.....25

Solar 170W-III (Standard)26

Solar 170W-III (Standard)27

Solar 170W-III (Optional)28

Solar 200W-III (with Standard Boom) (S/N 0001 thru 0448)29

Solar 200W-III (with Standard Boom) (S/N 0449 and Up)30

Solar 200W-III (with Articulated Boom) (S/N 0001 thru 0448).....31

Solar 200W-III (with Articulated Boom) (S/N 0449 and Up)32

Solar 220LC-III (S/N 0216 thru 0360).....33

Solar 220LC-III (S/N 0361 thru 1420).....34

Solar 220LC-III (S/N 1421 thru 1880).....35

Solar 220LC-III (S/N 1881 and Up).....36

Solar 280LC-III (S/N 5001 thru 5070).....37

Solar 280LC-III (S/N 5071 thru 5274).....38

Solar 280LC-III (S/N 5275 thru 5674).....39

Solar 280LC-III (S/N 5675 and Up).....40


Solar 330LC-III.....41


Solar 400LC-III.....42


Solar 450-III (S/N 0001 thru 0003)43

Solar 450-III (S/N 0004 thru 0035)44

Solar 450-III (S/N 0036 and Up)45

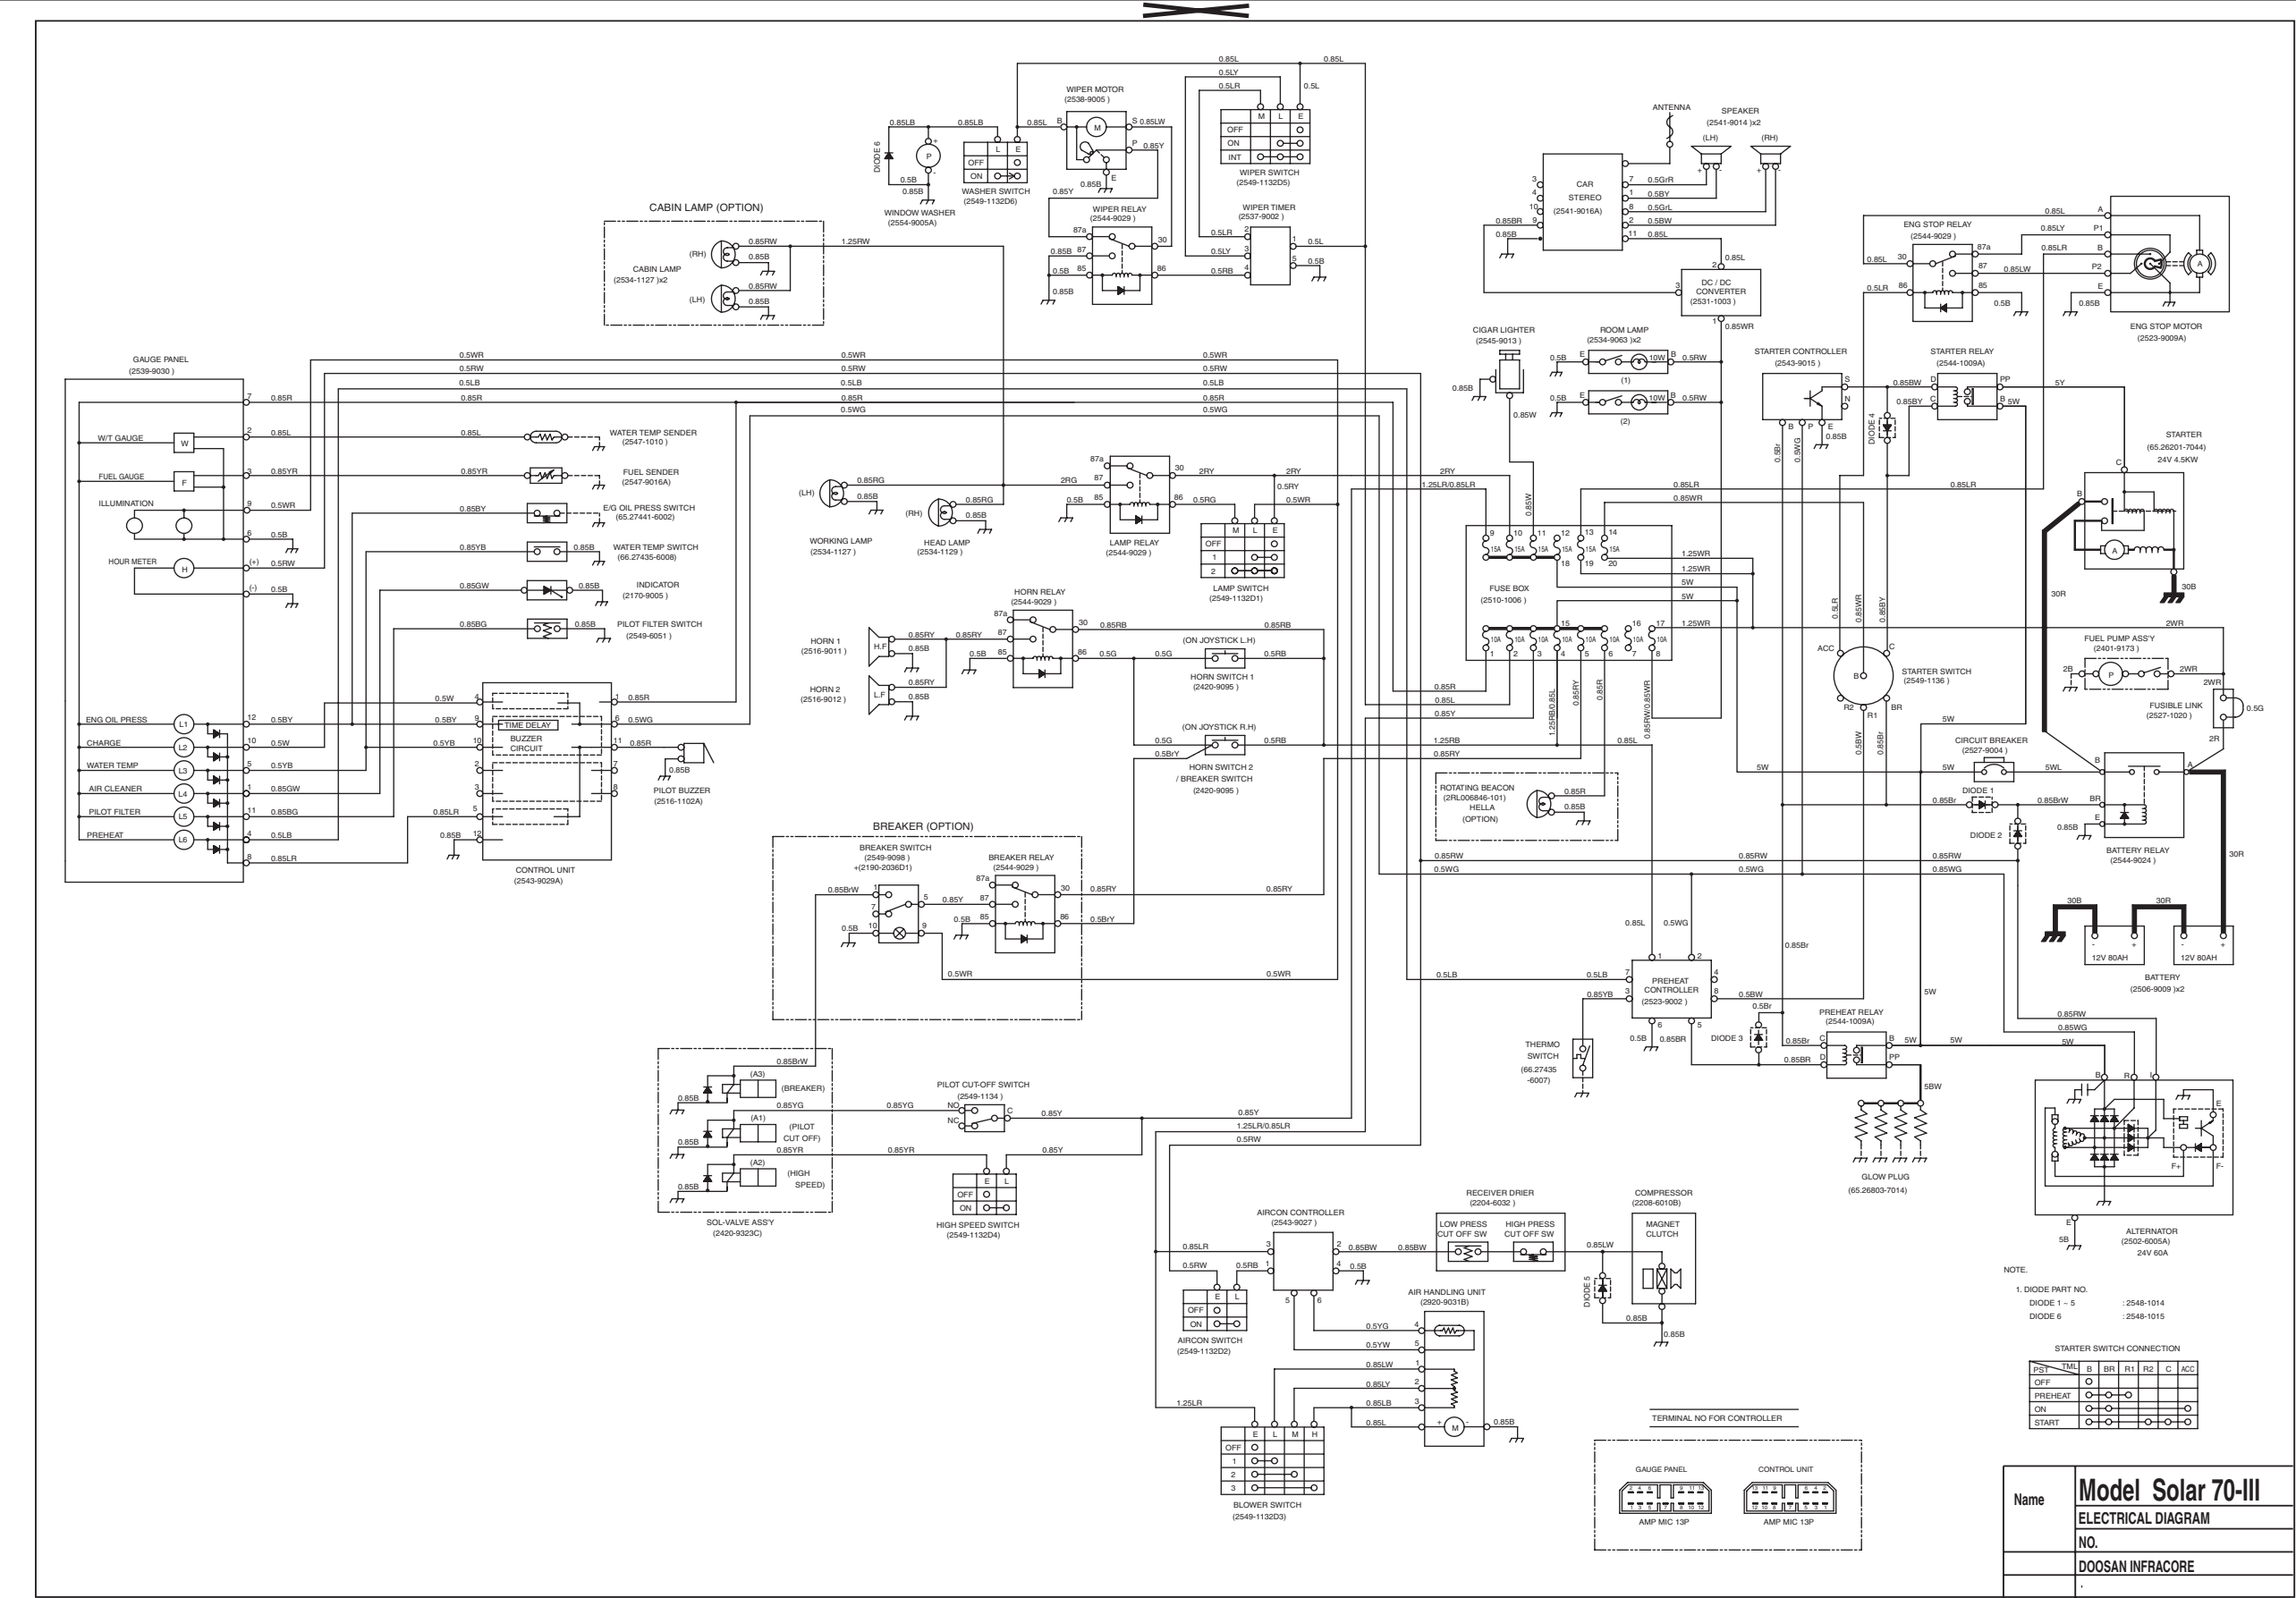

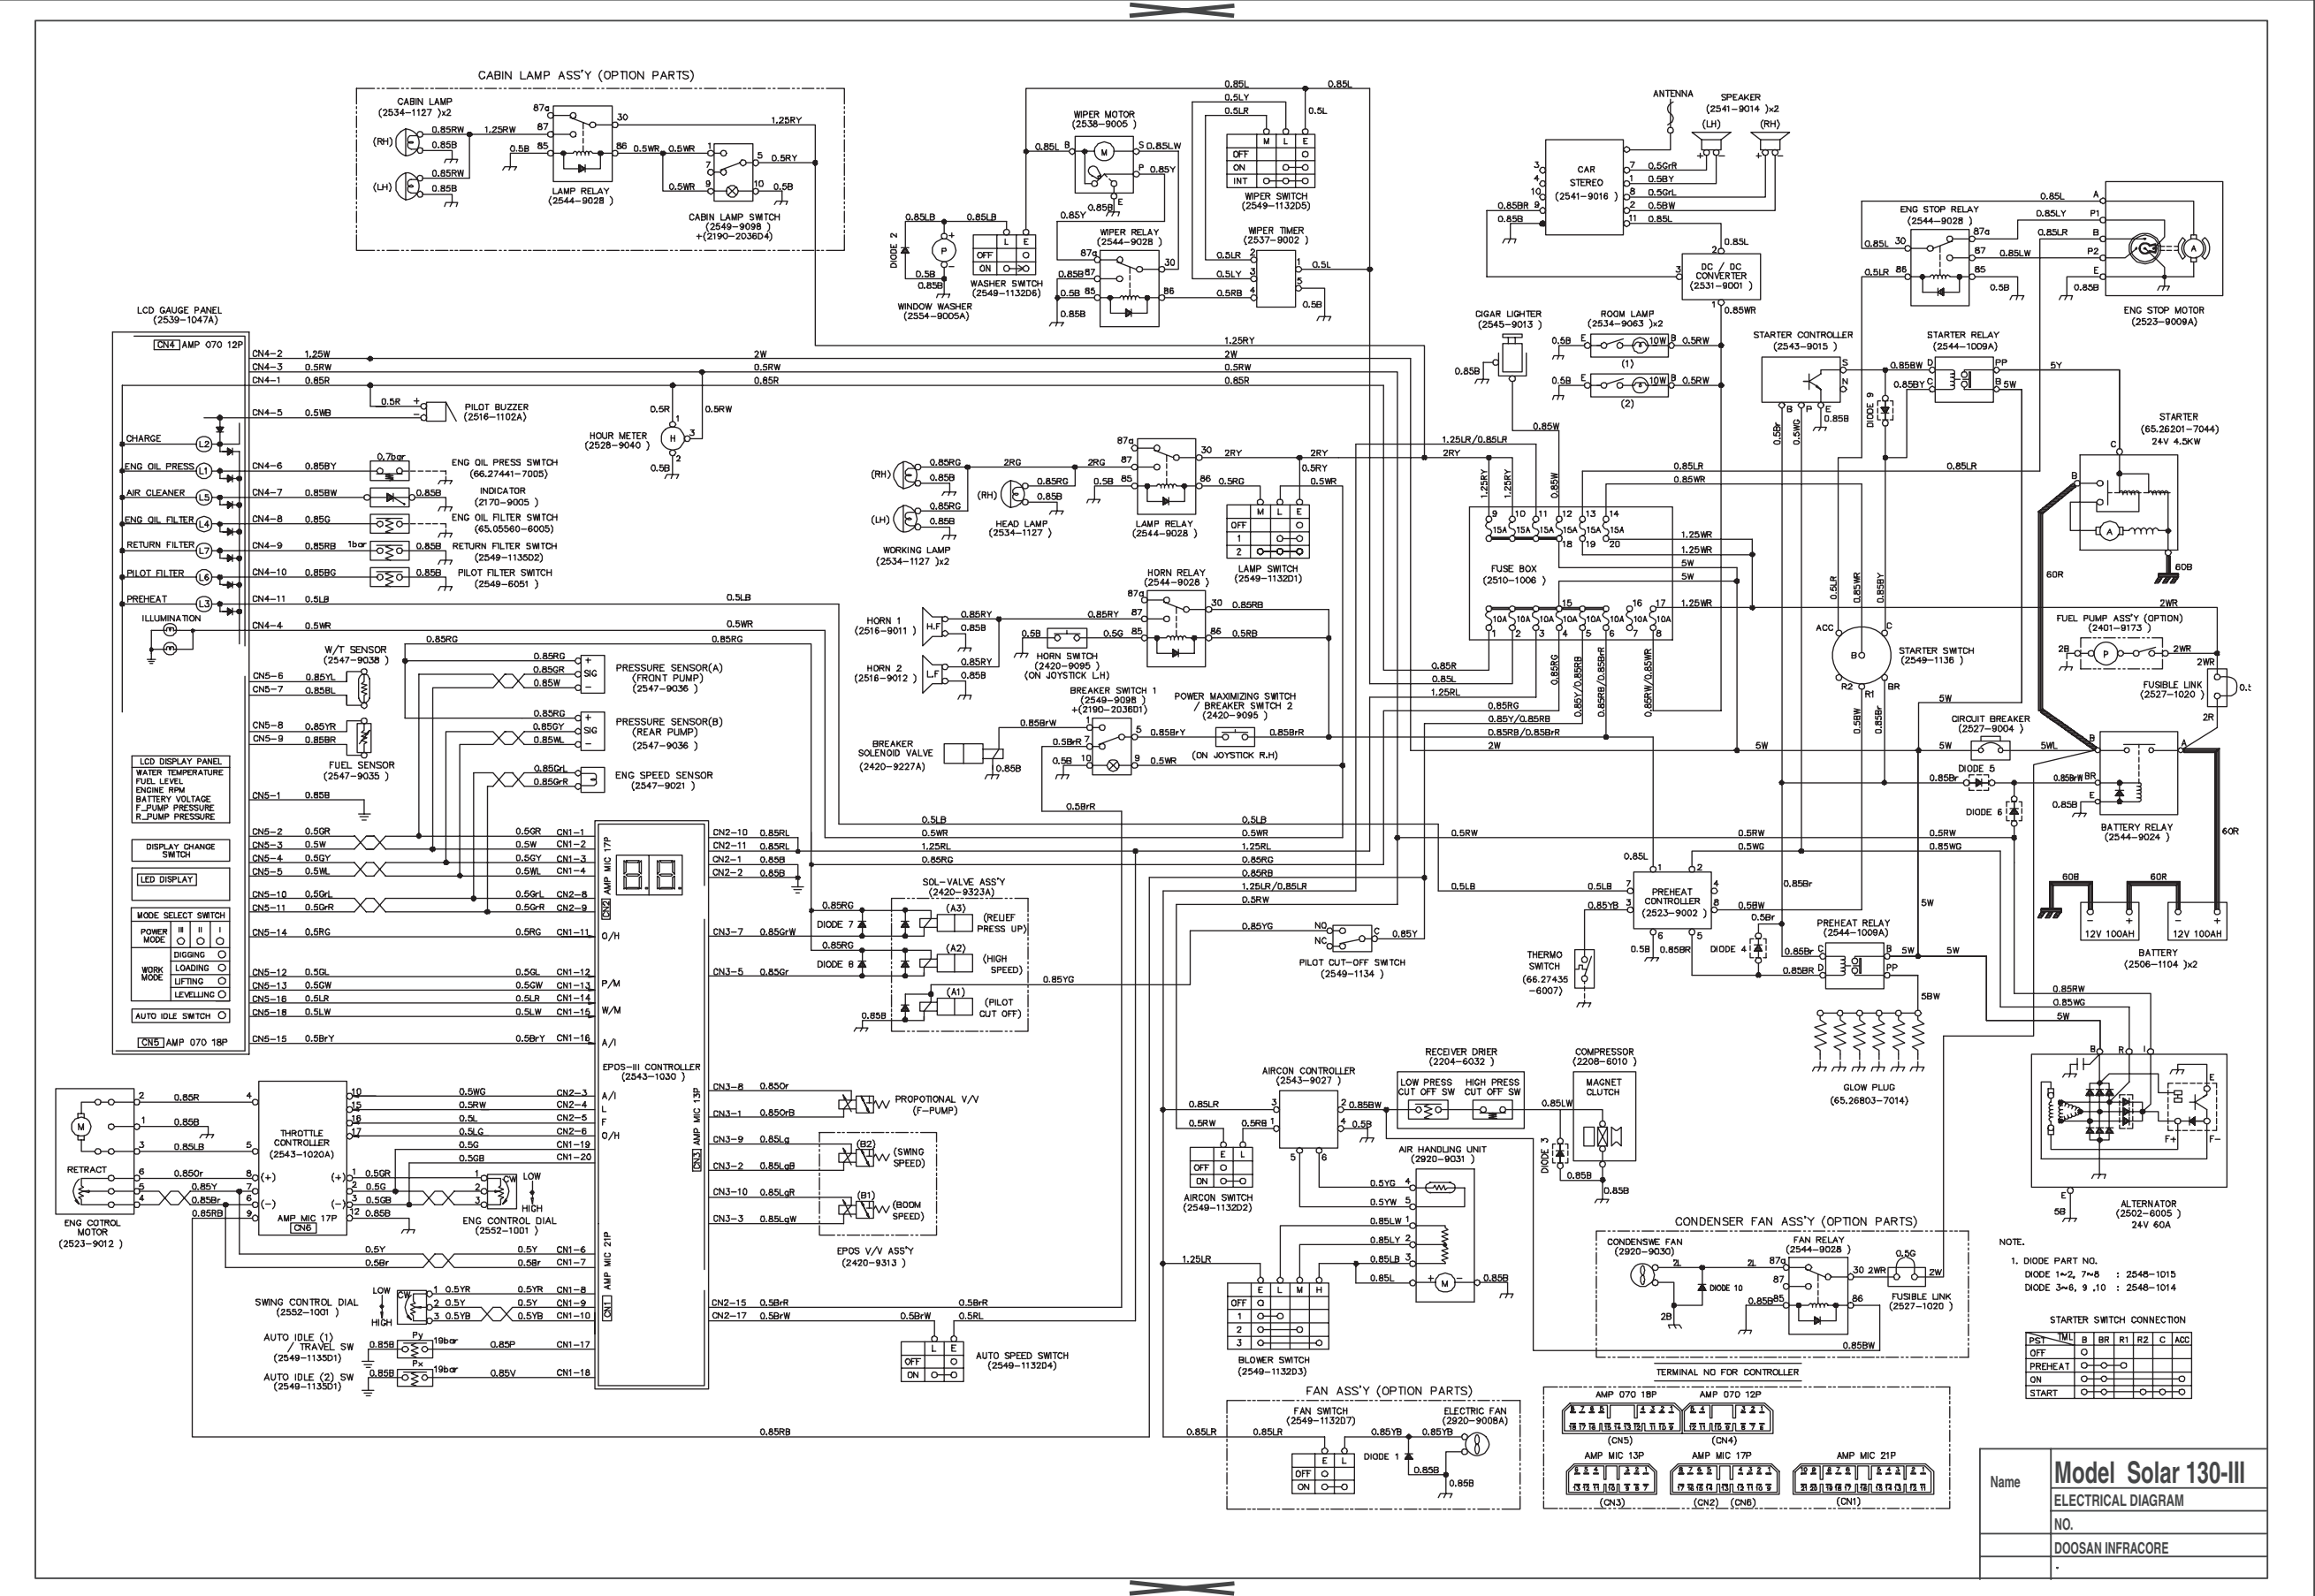

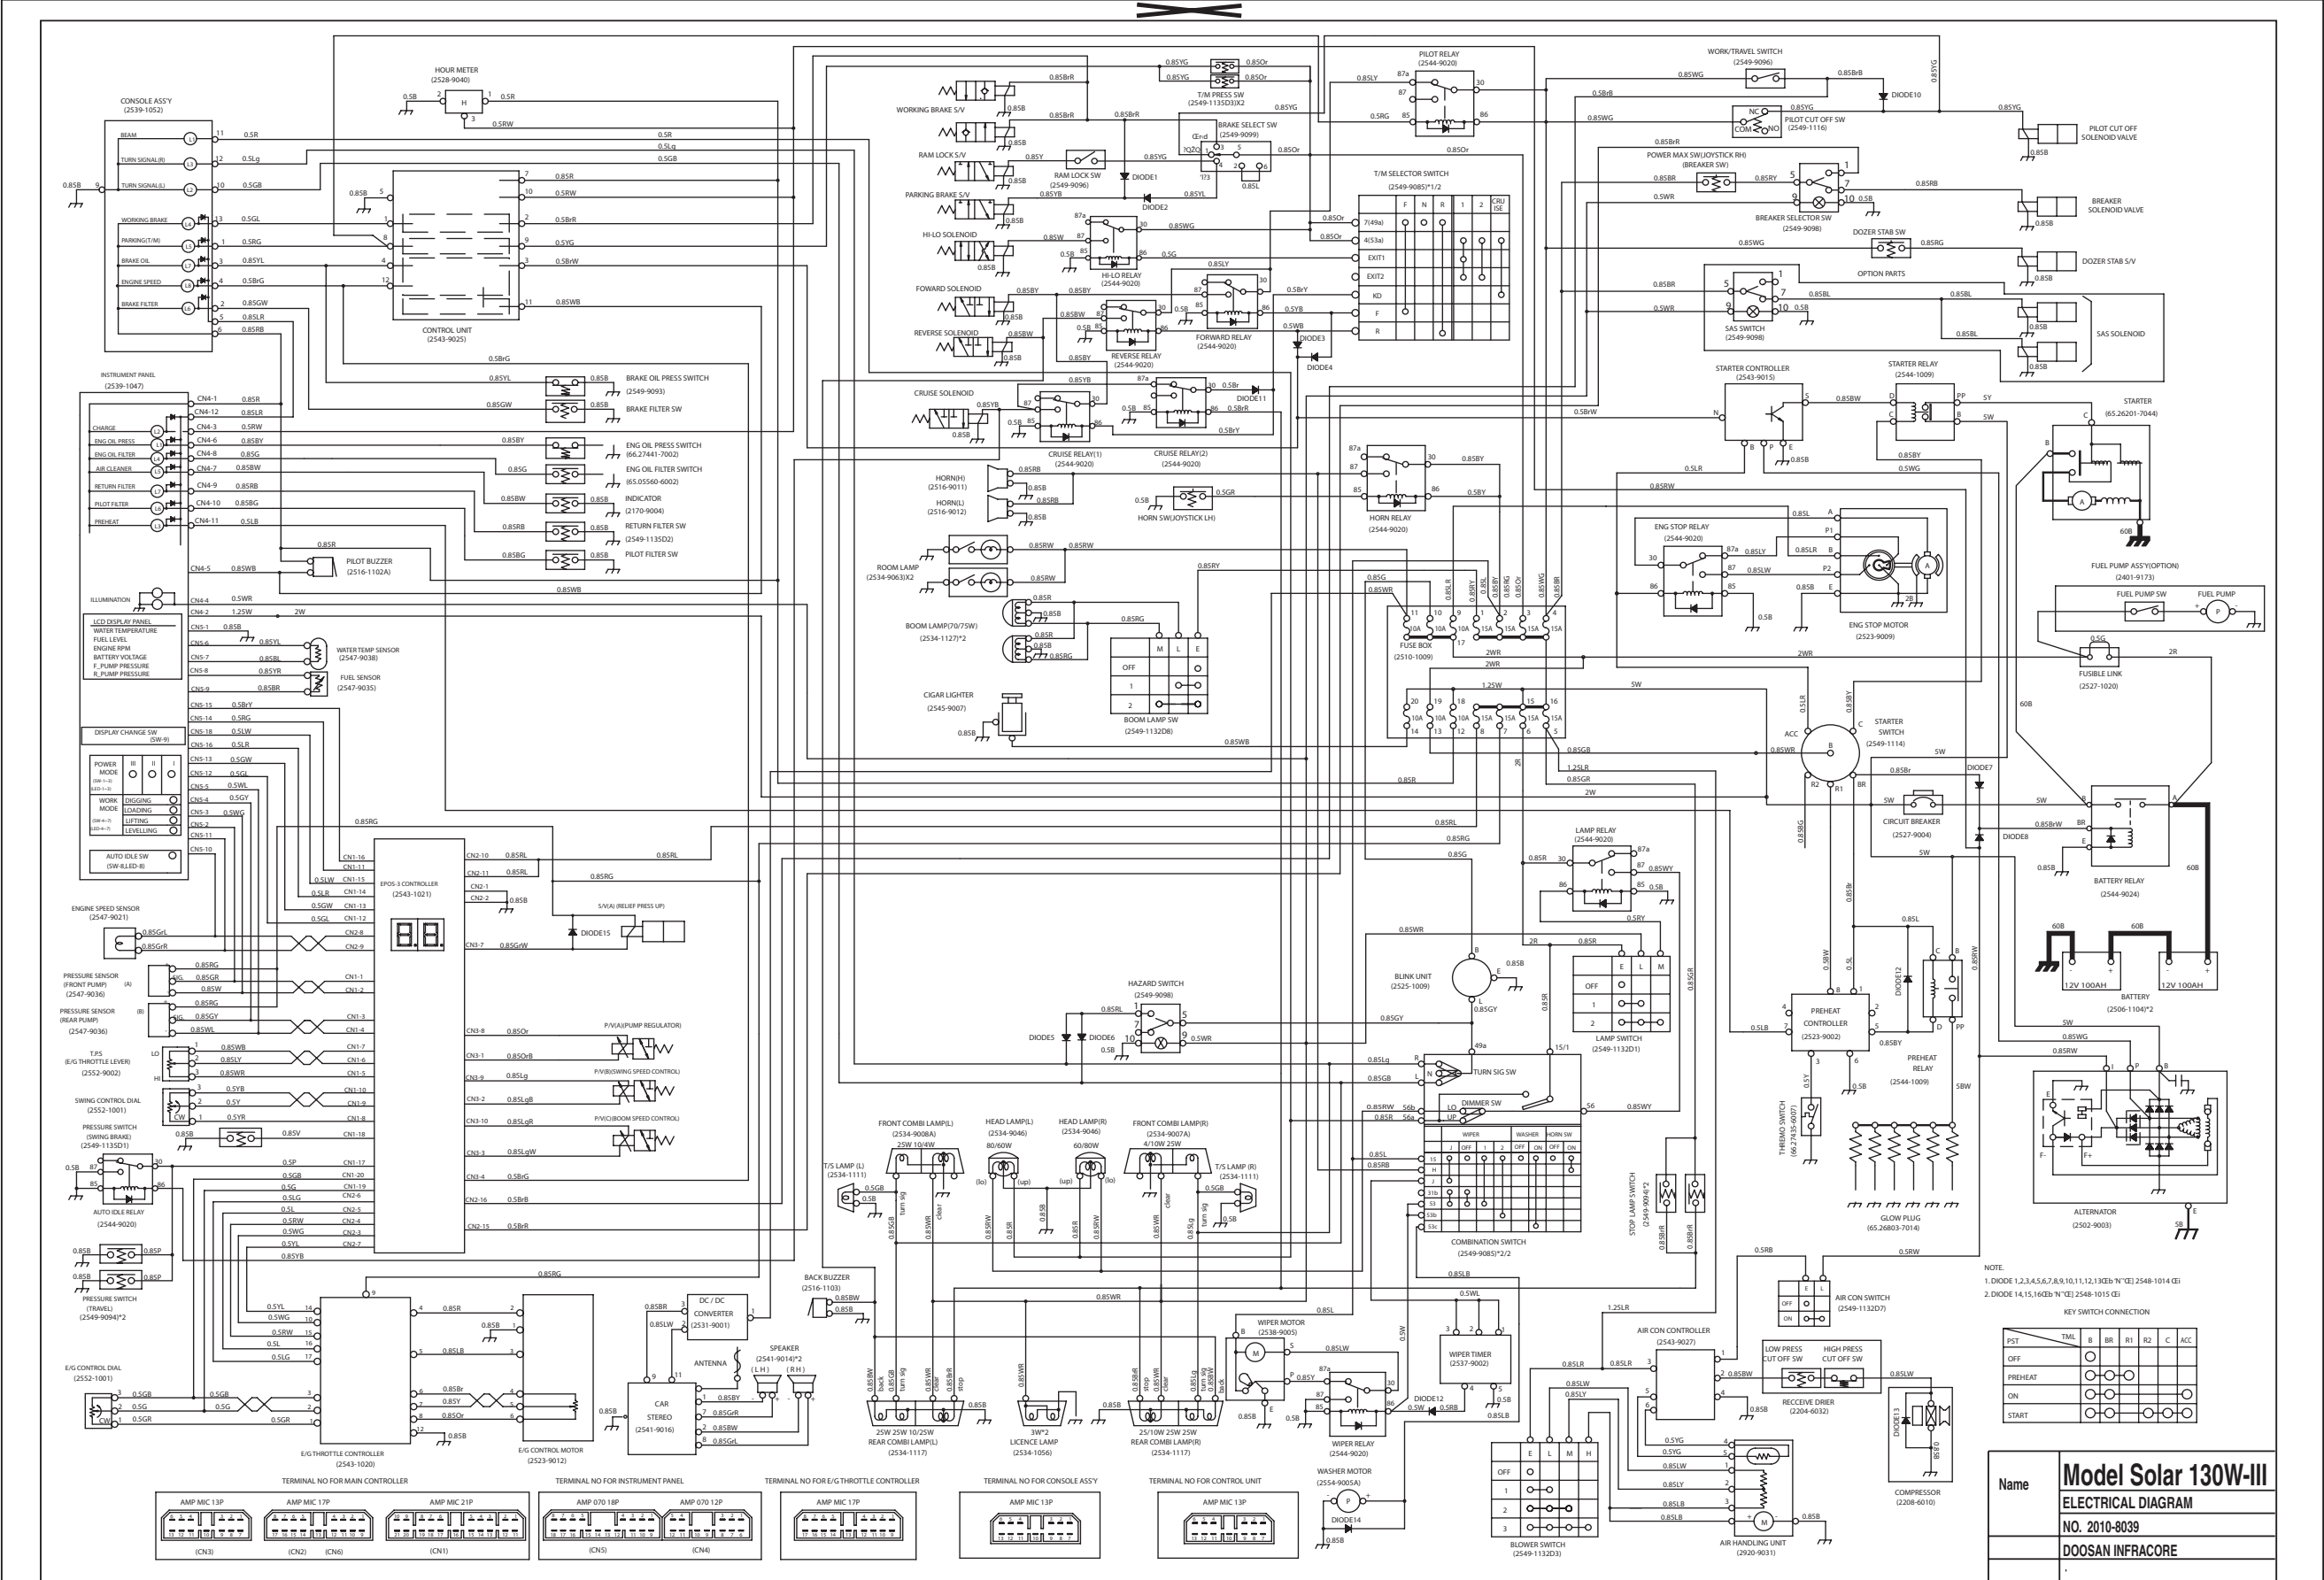


NOTE:


1. DIODE 1,2,3,4,5,6,7,8,9,10,11,12,13CEB "N"CEI 2548-1014 CEI
2. DIODE 14,15,16CEB "N"CEI 2548-1015 CEI


KEY SWITCH CONNECTION


	PST	TML	B	RR	R1	R2	C	ACC
OFF								
PREHEAT								
ON								
START								

Name	Model Solar 130W-III
	ELECTRICAL DIAGRAM
	NO. 2010-8039
	DOOSAN INFRACORE

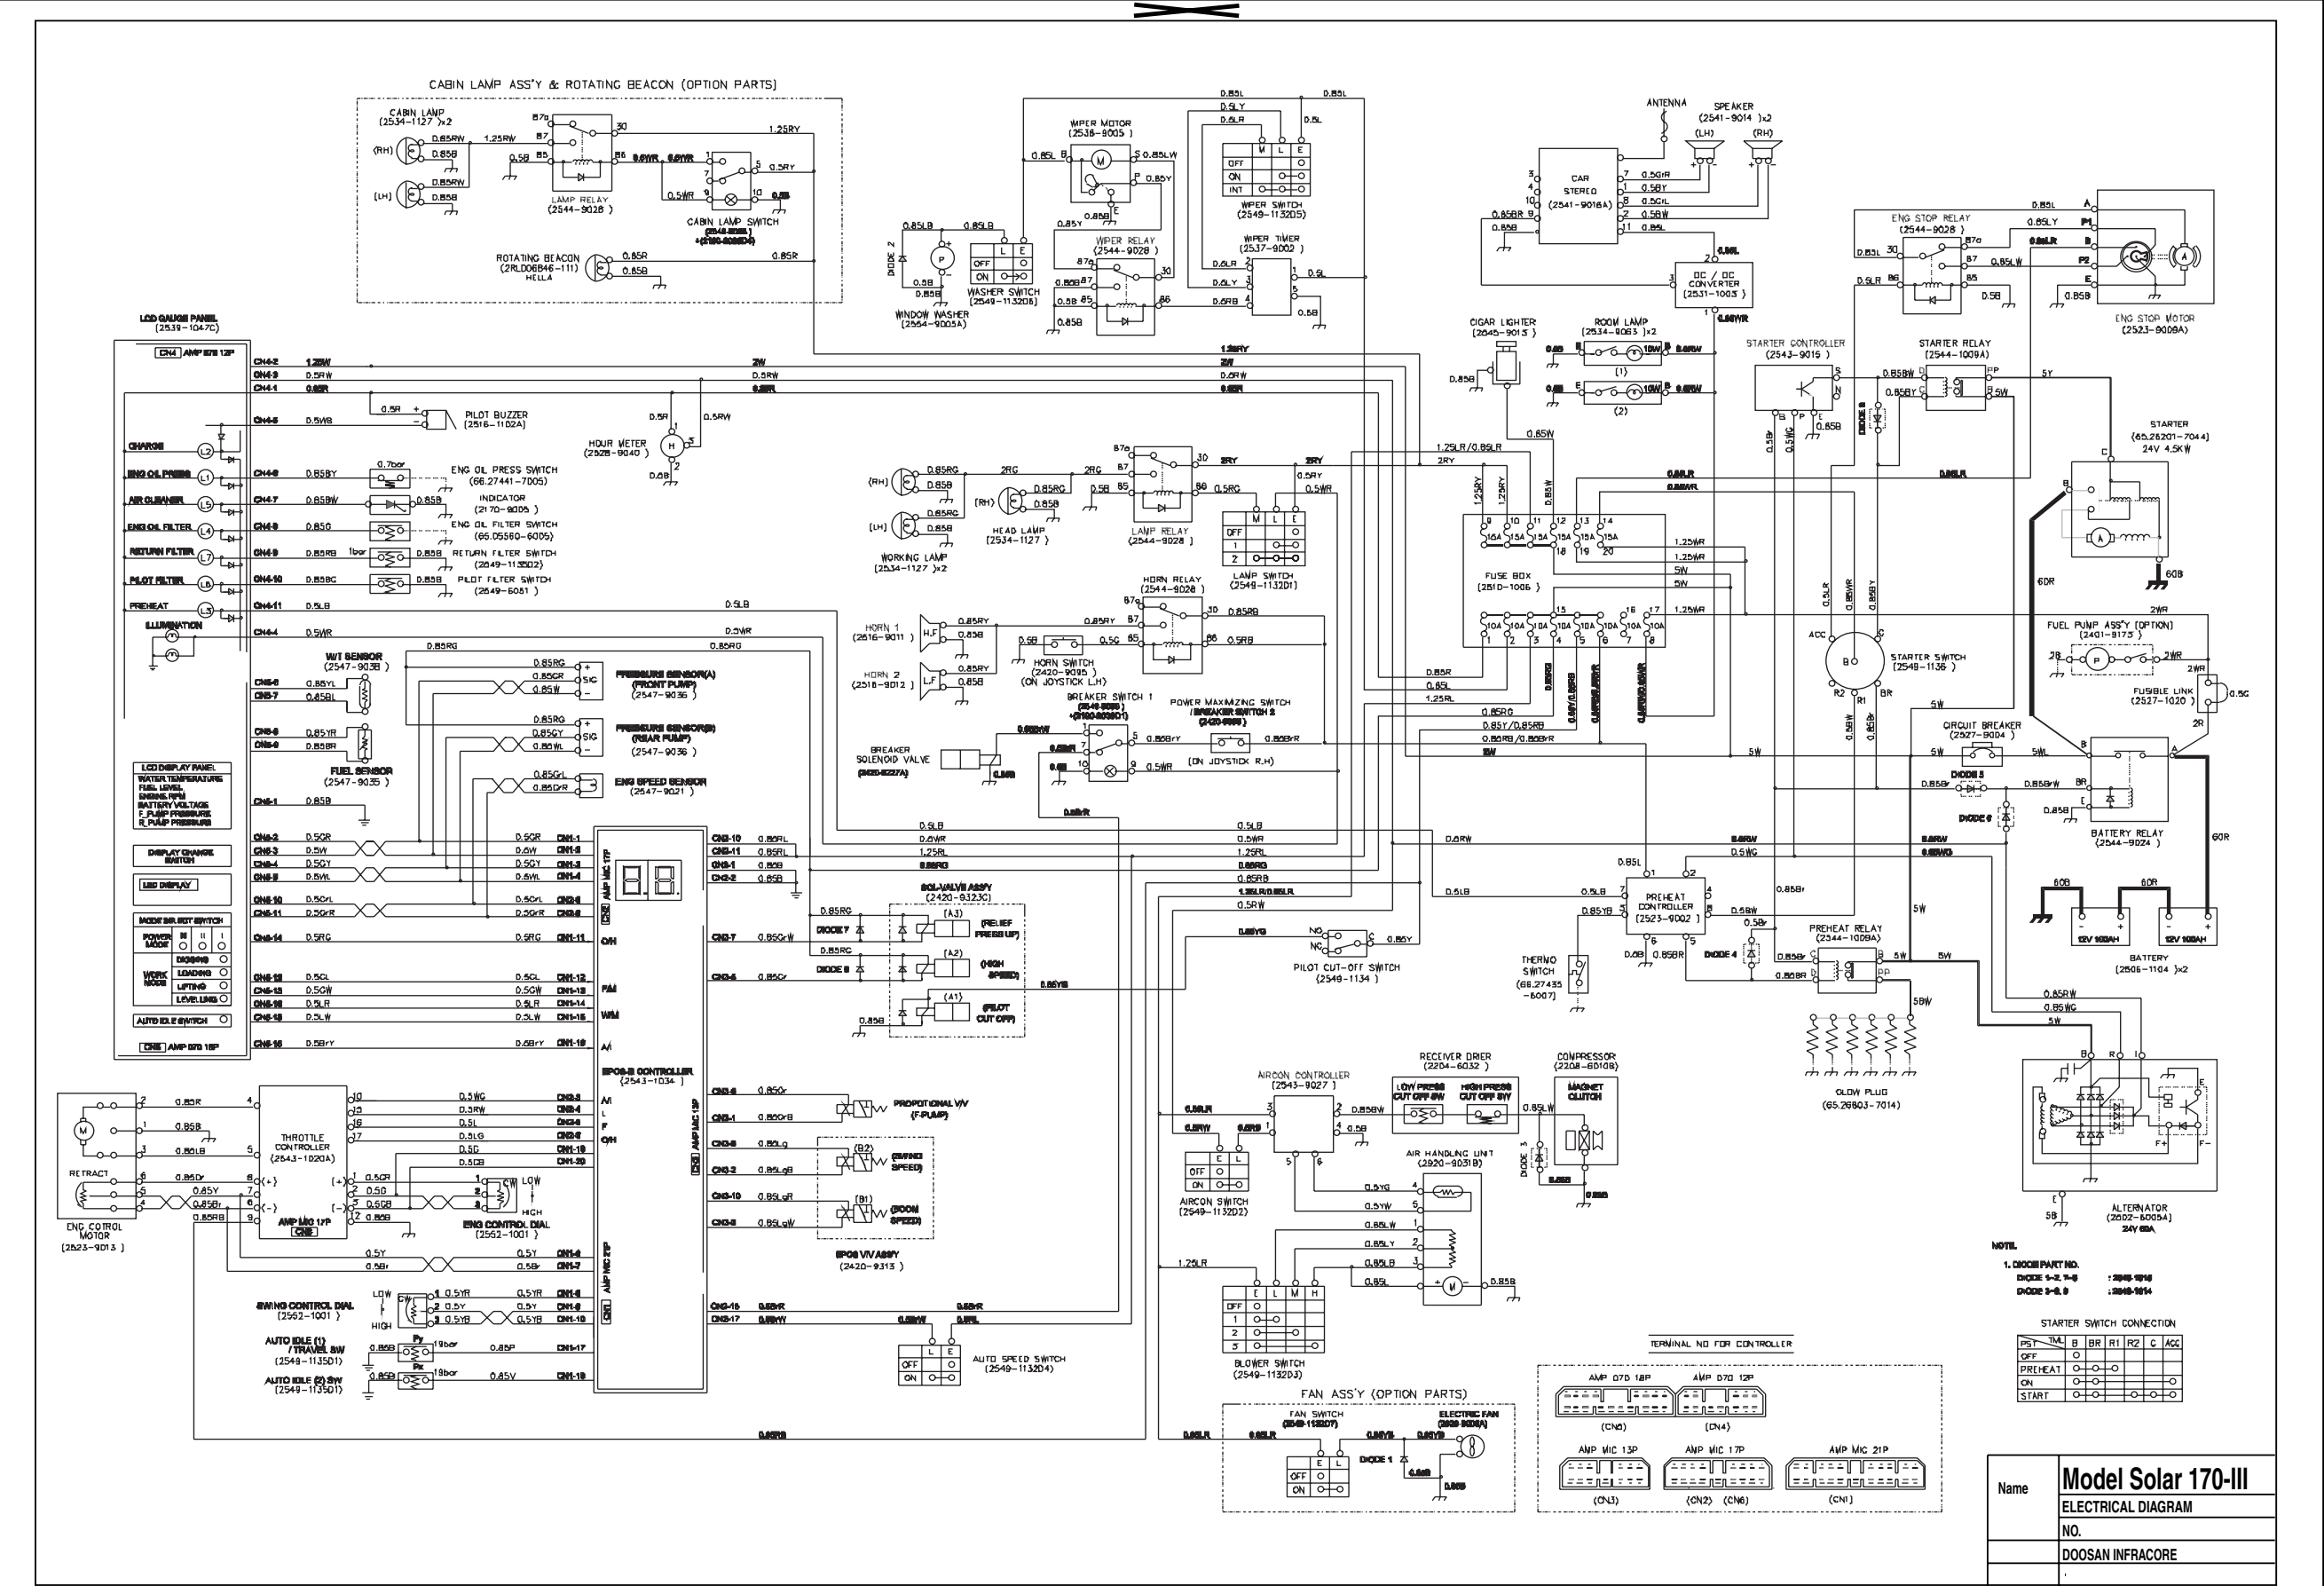


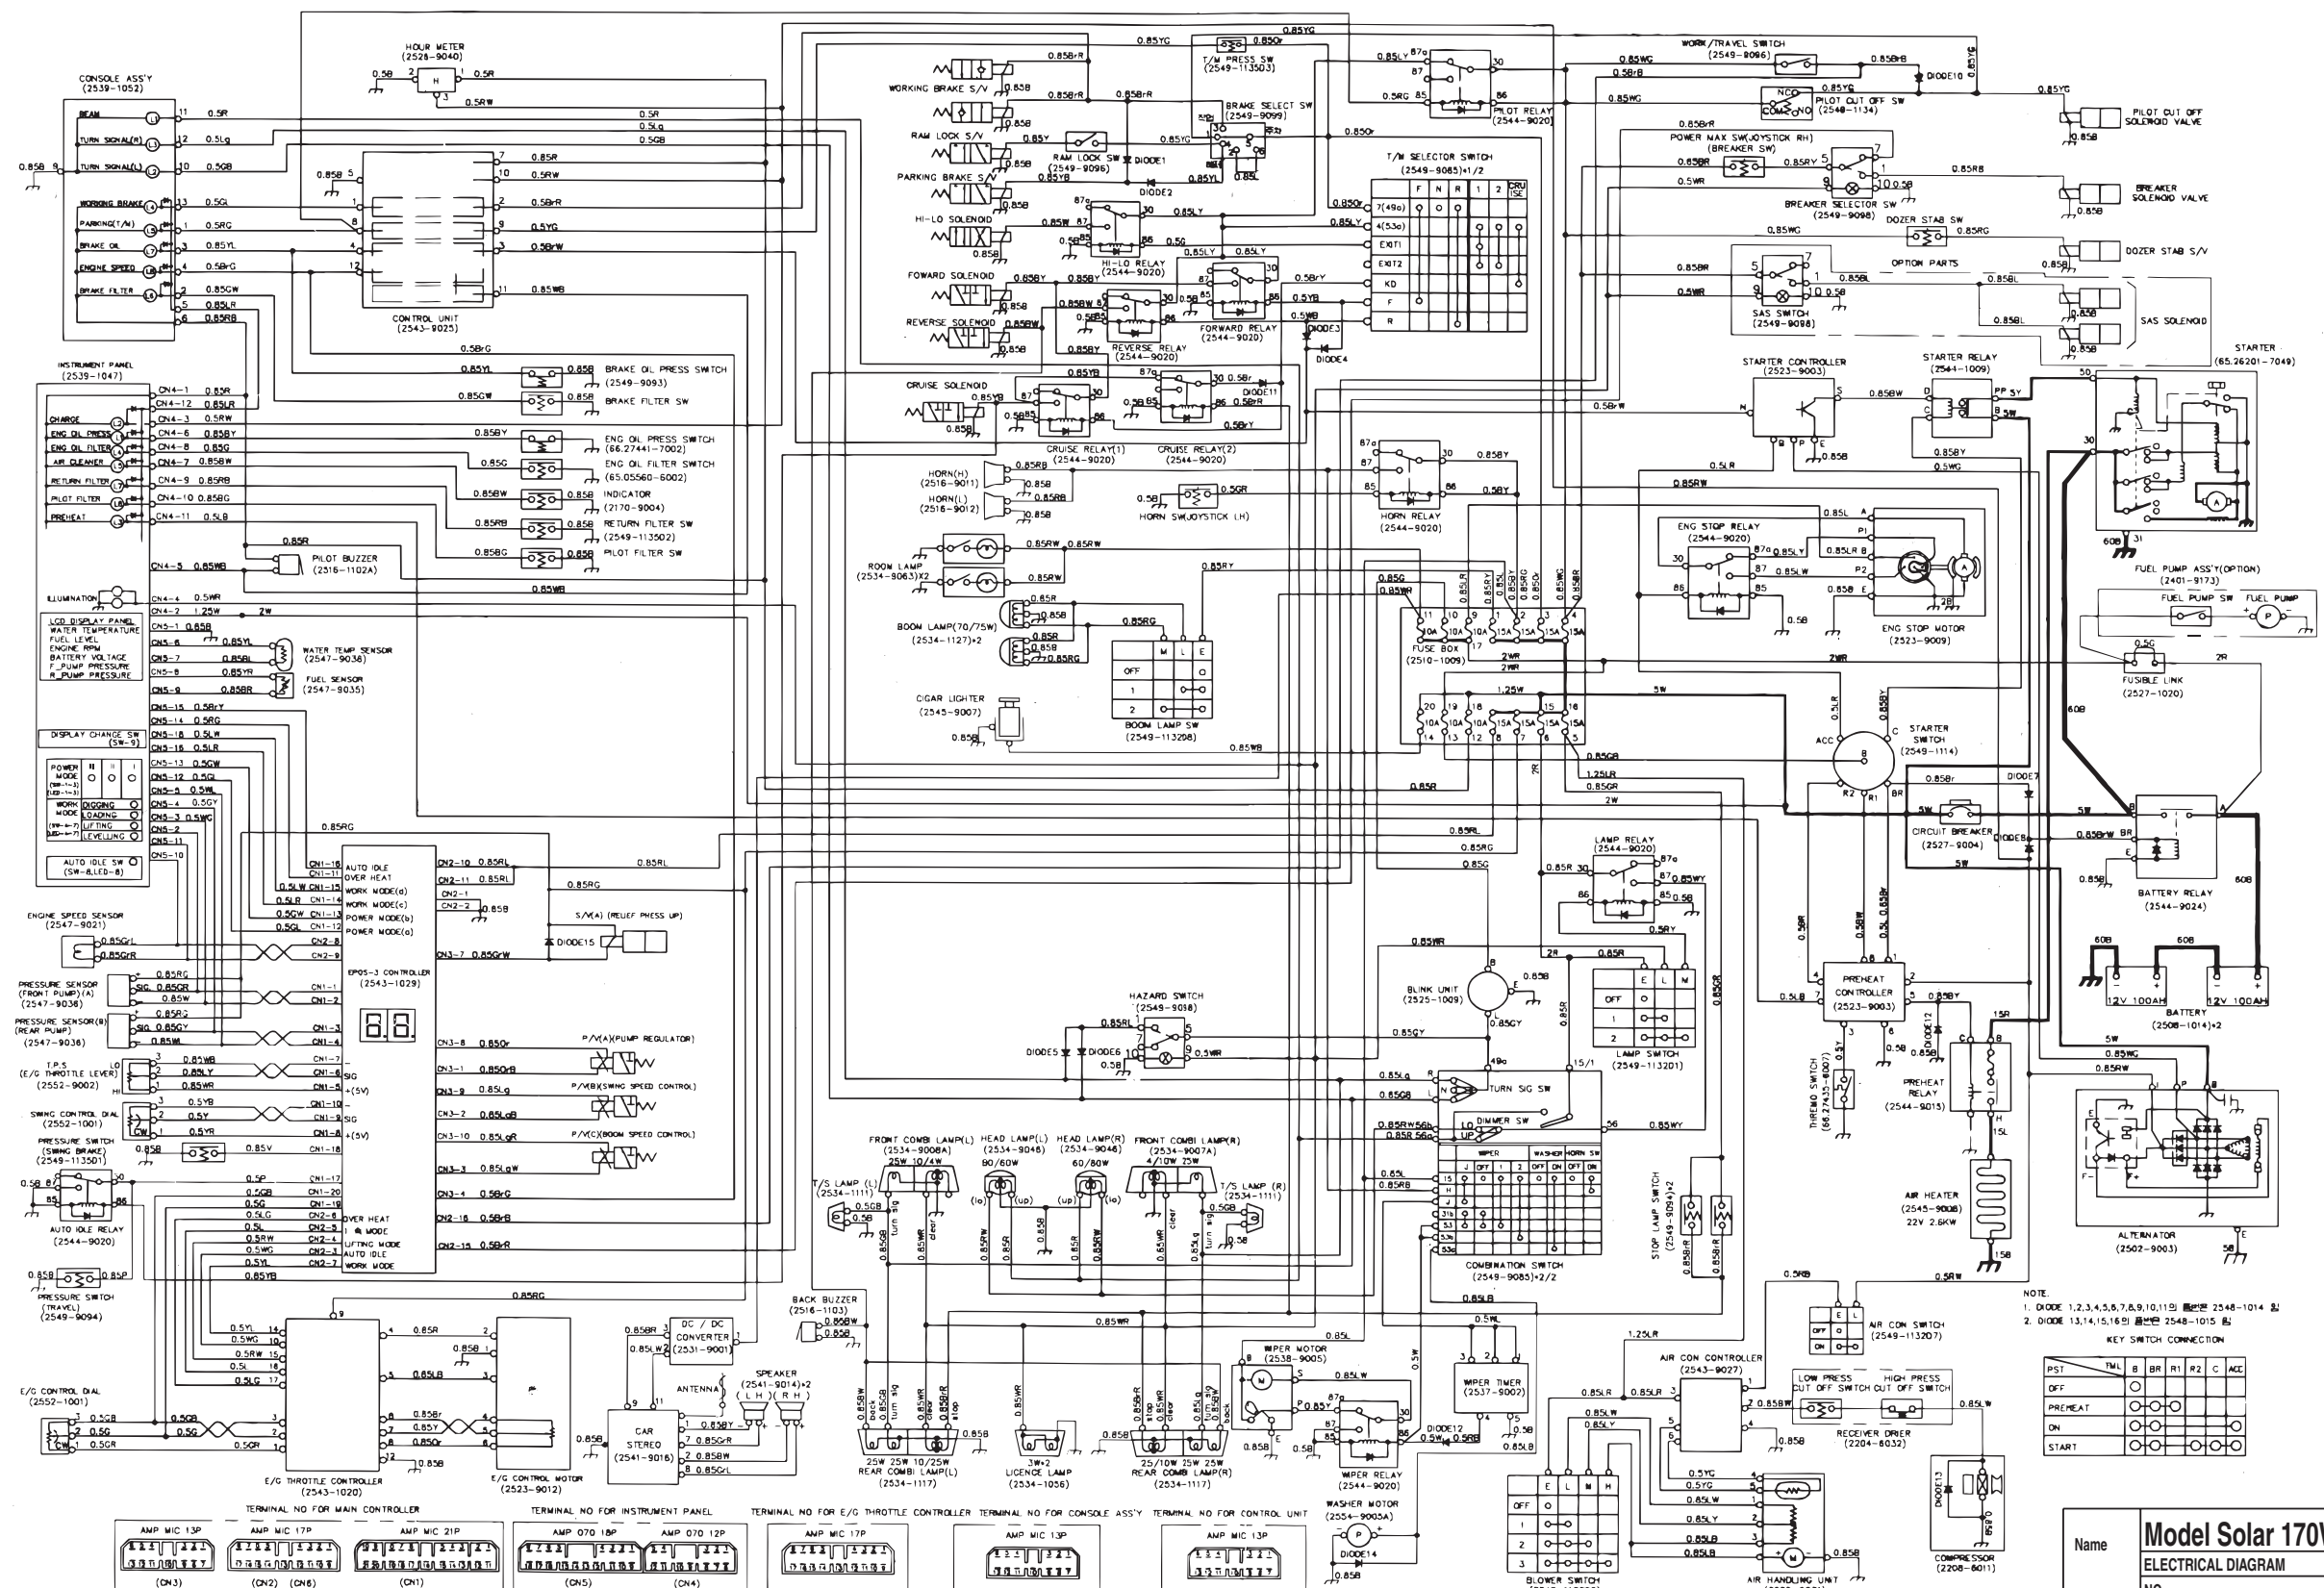


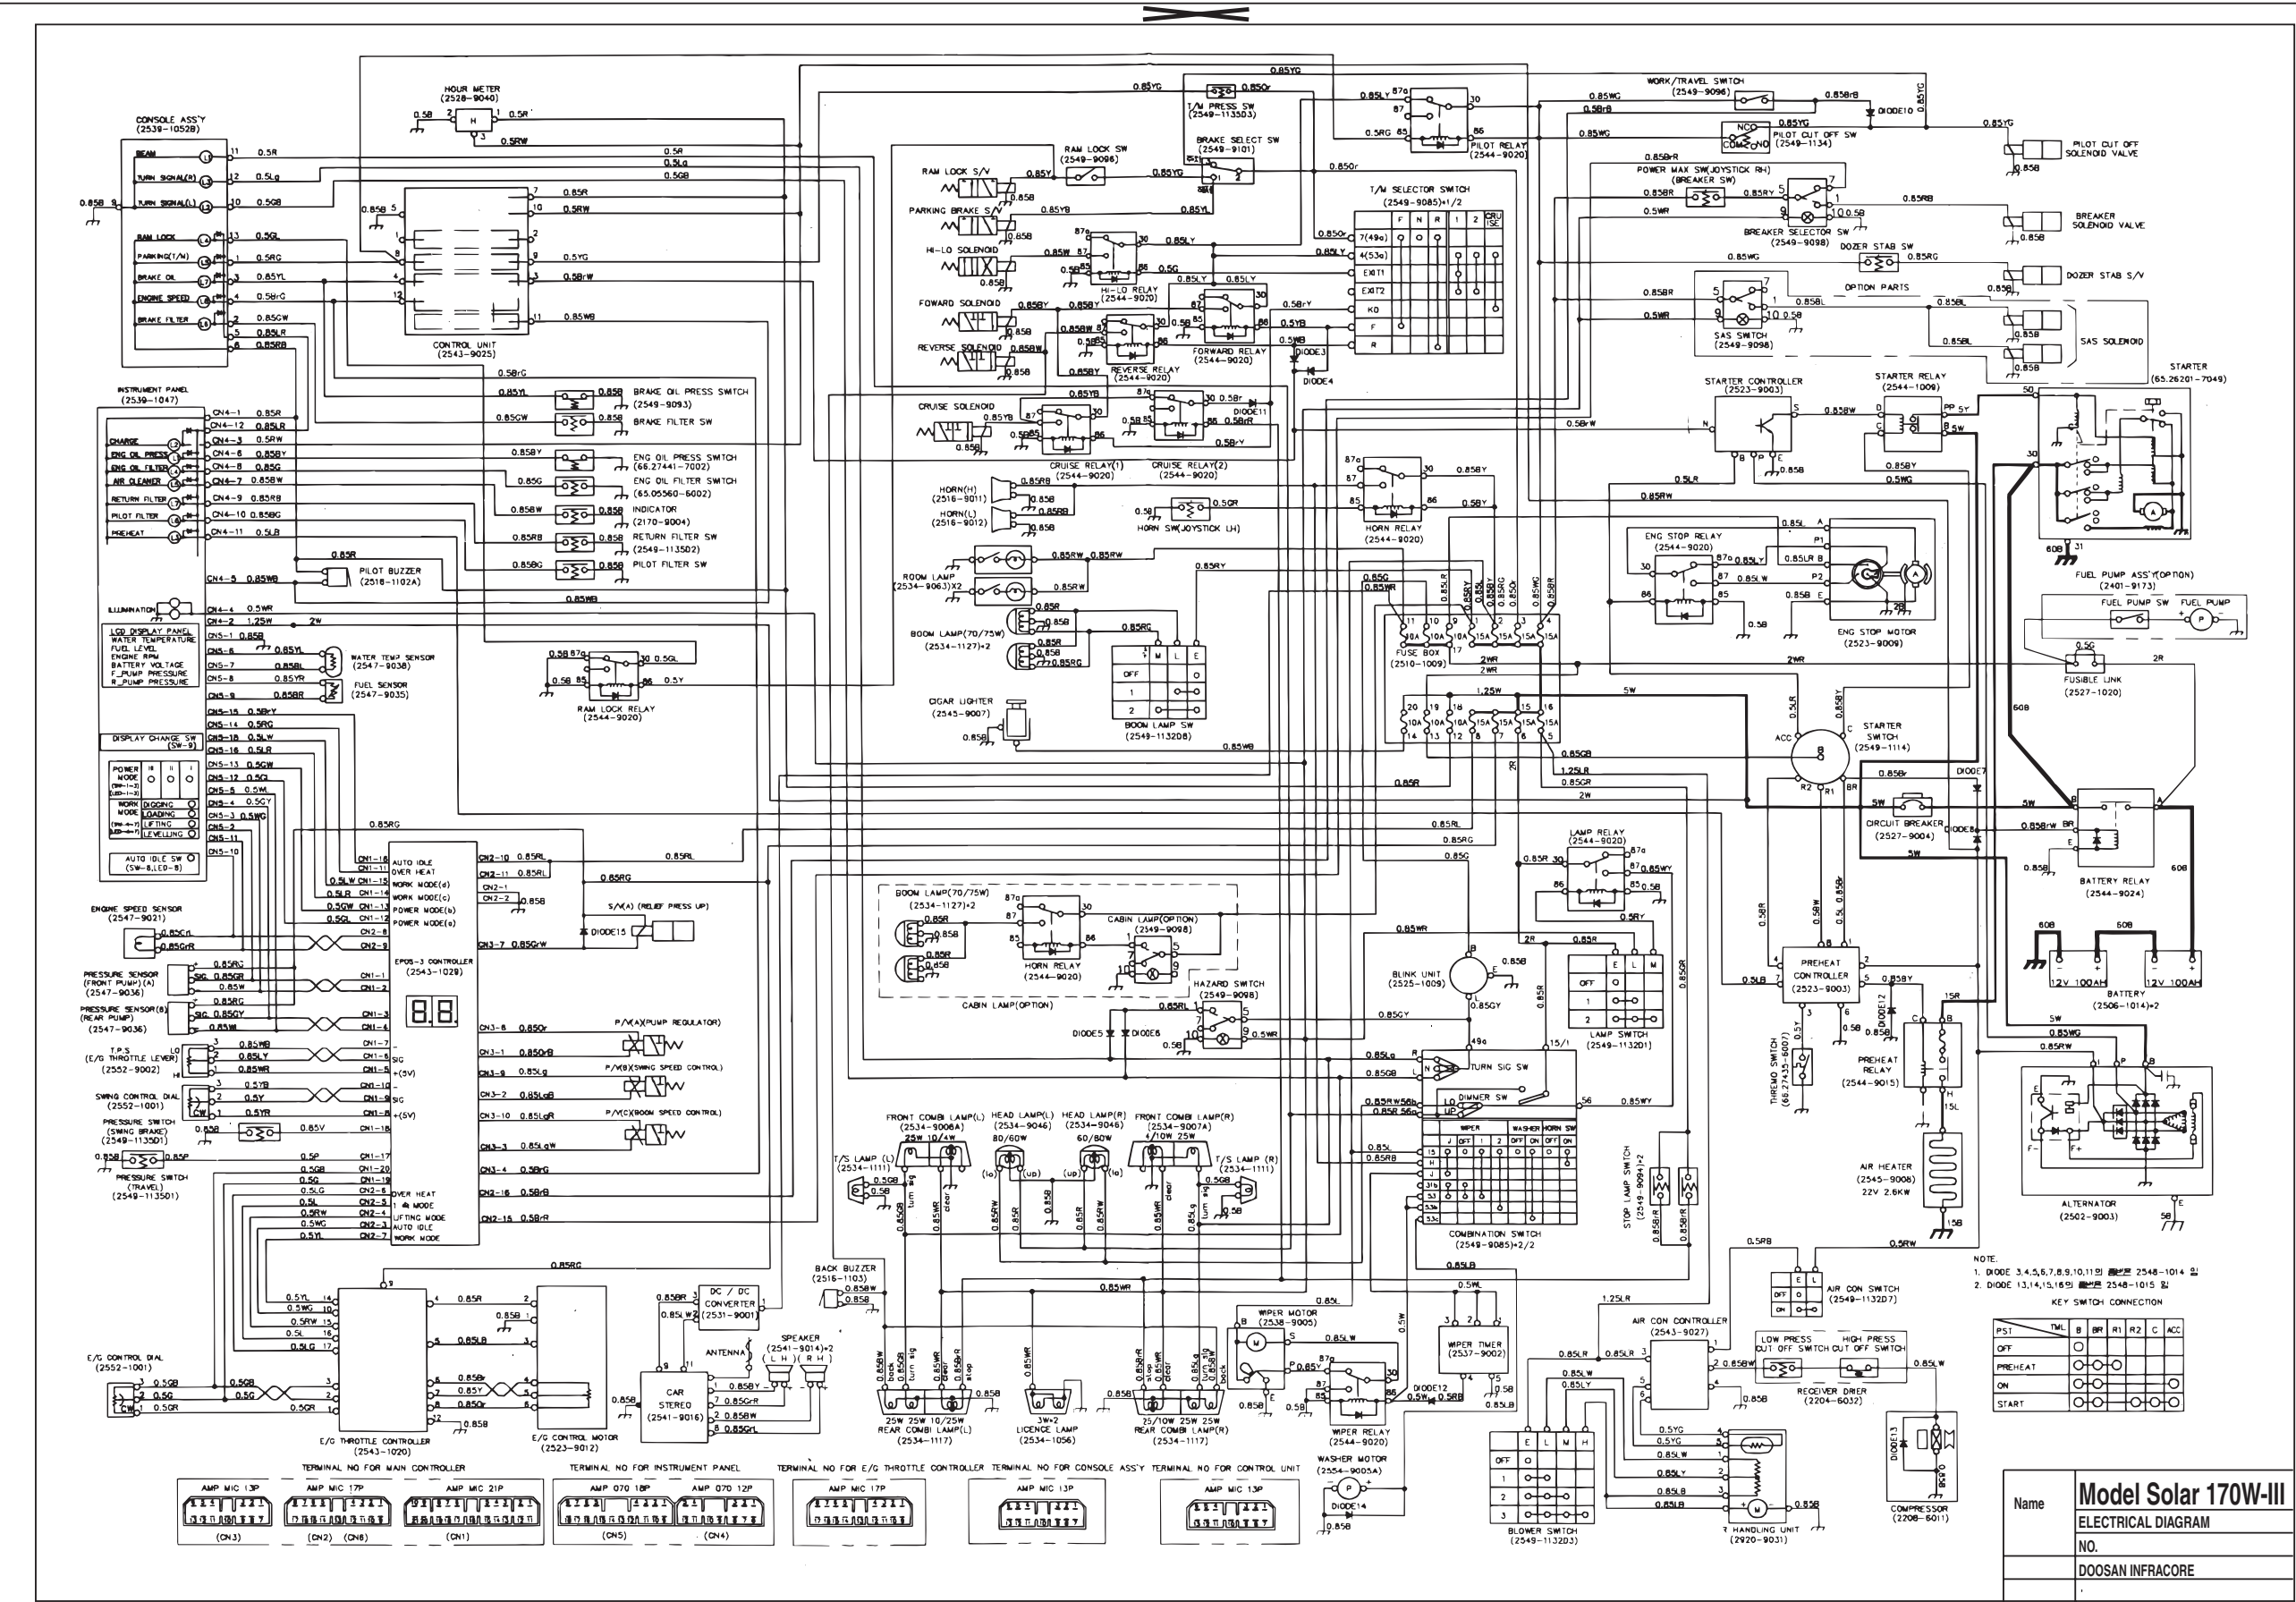

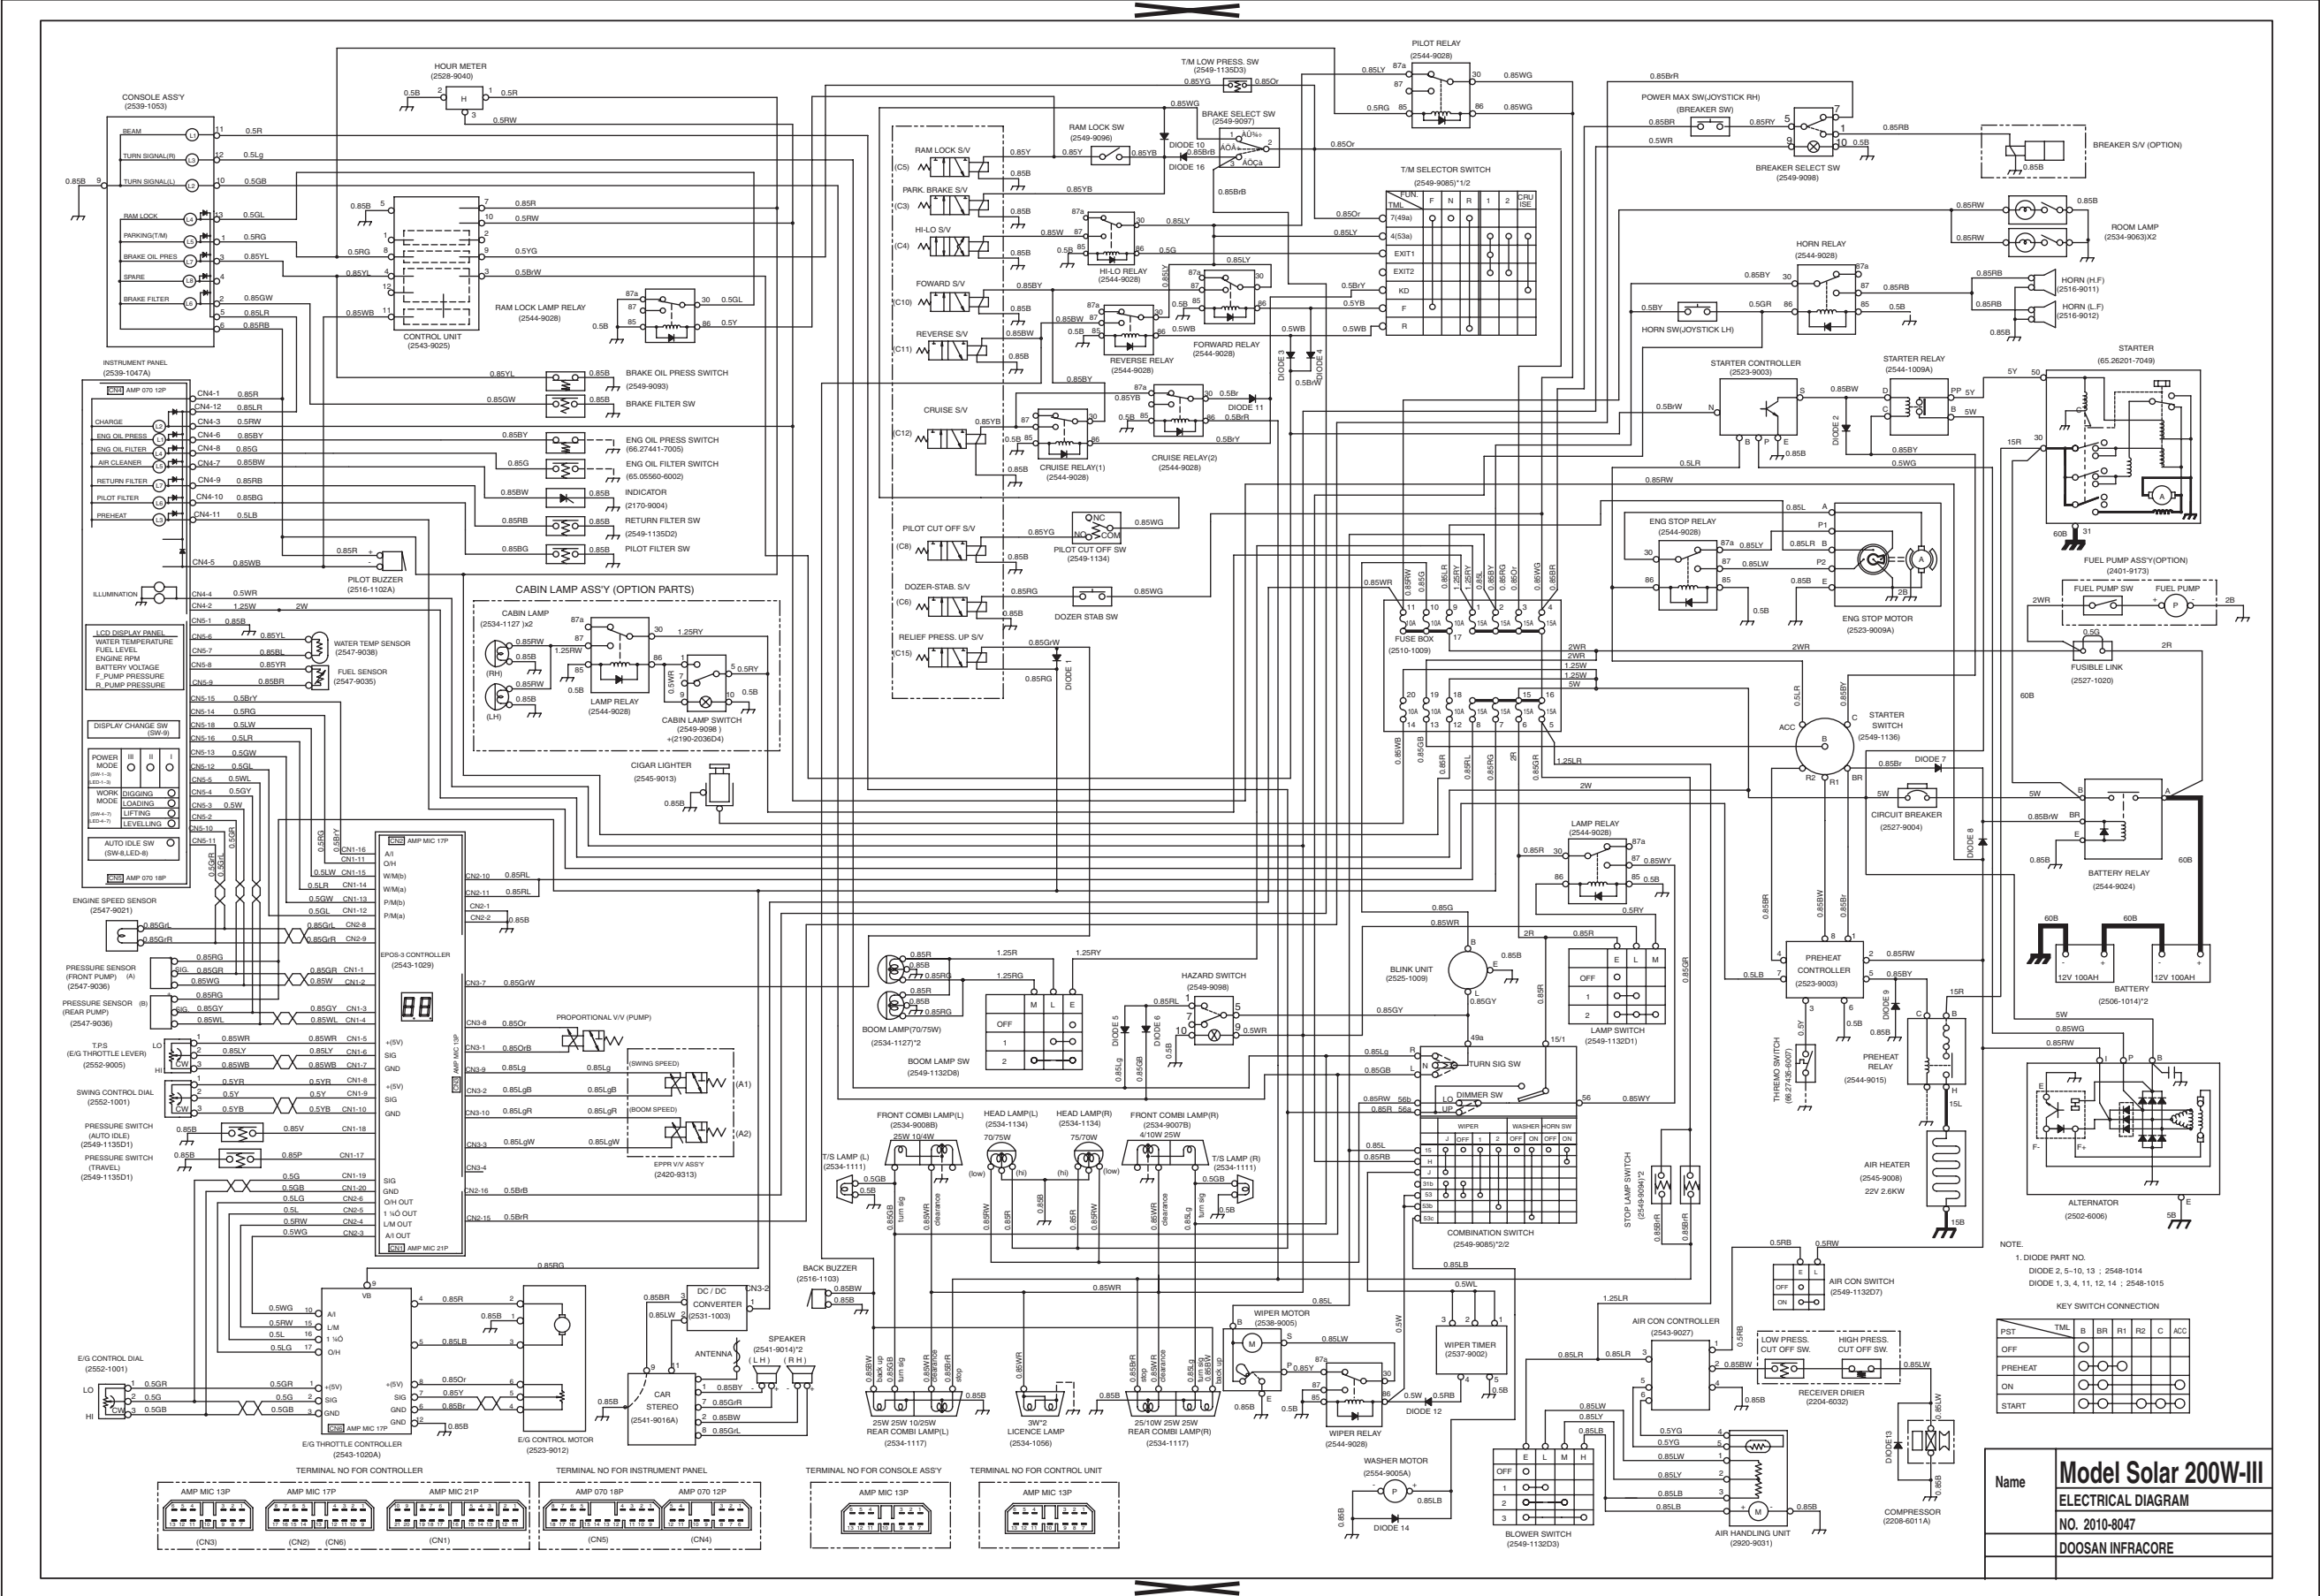



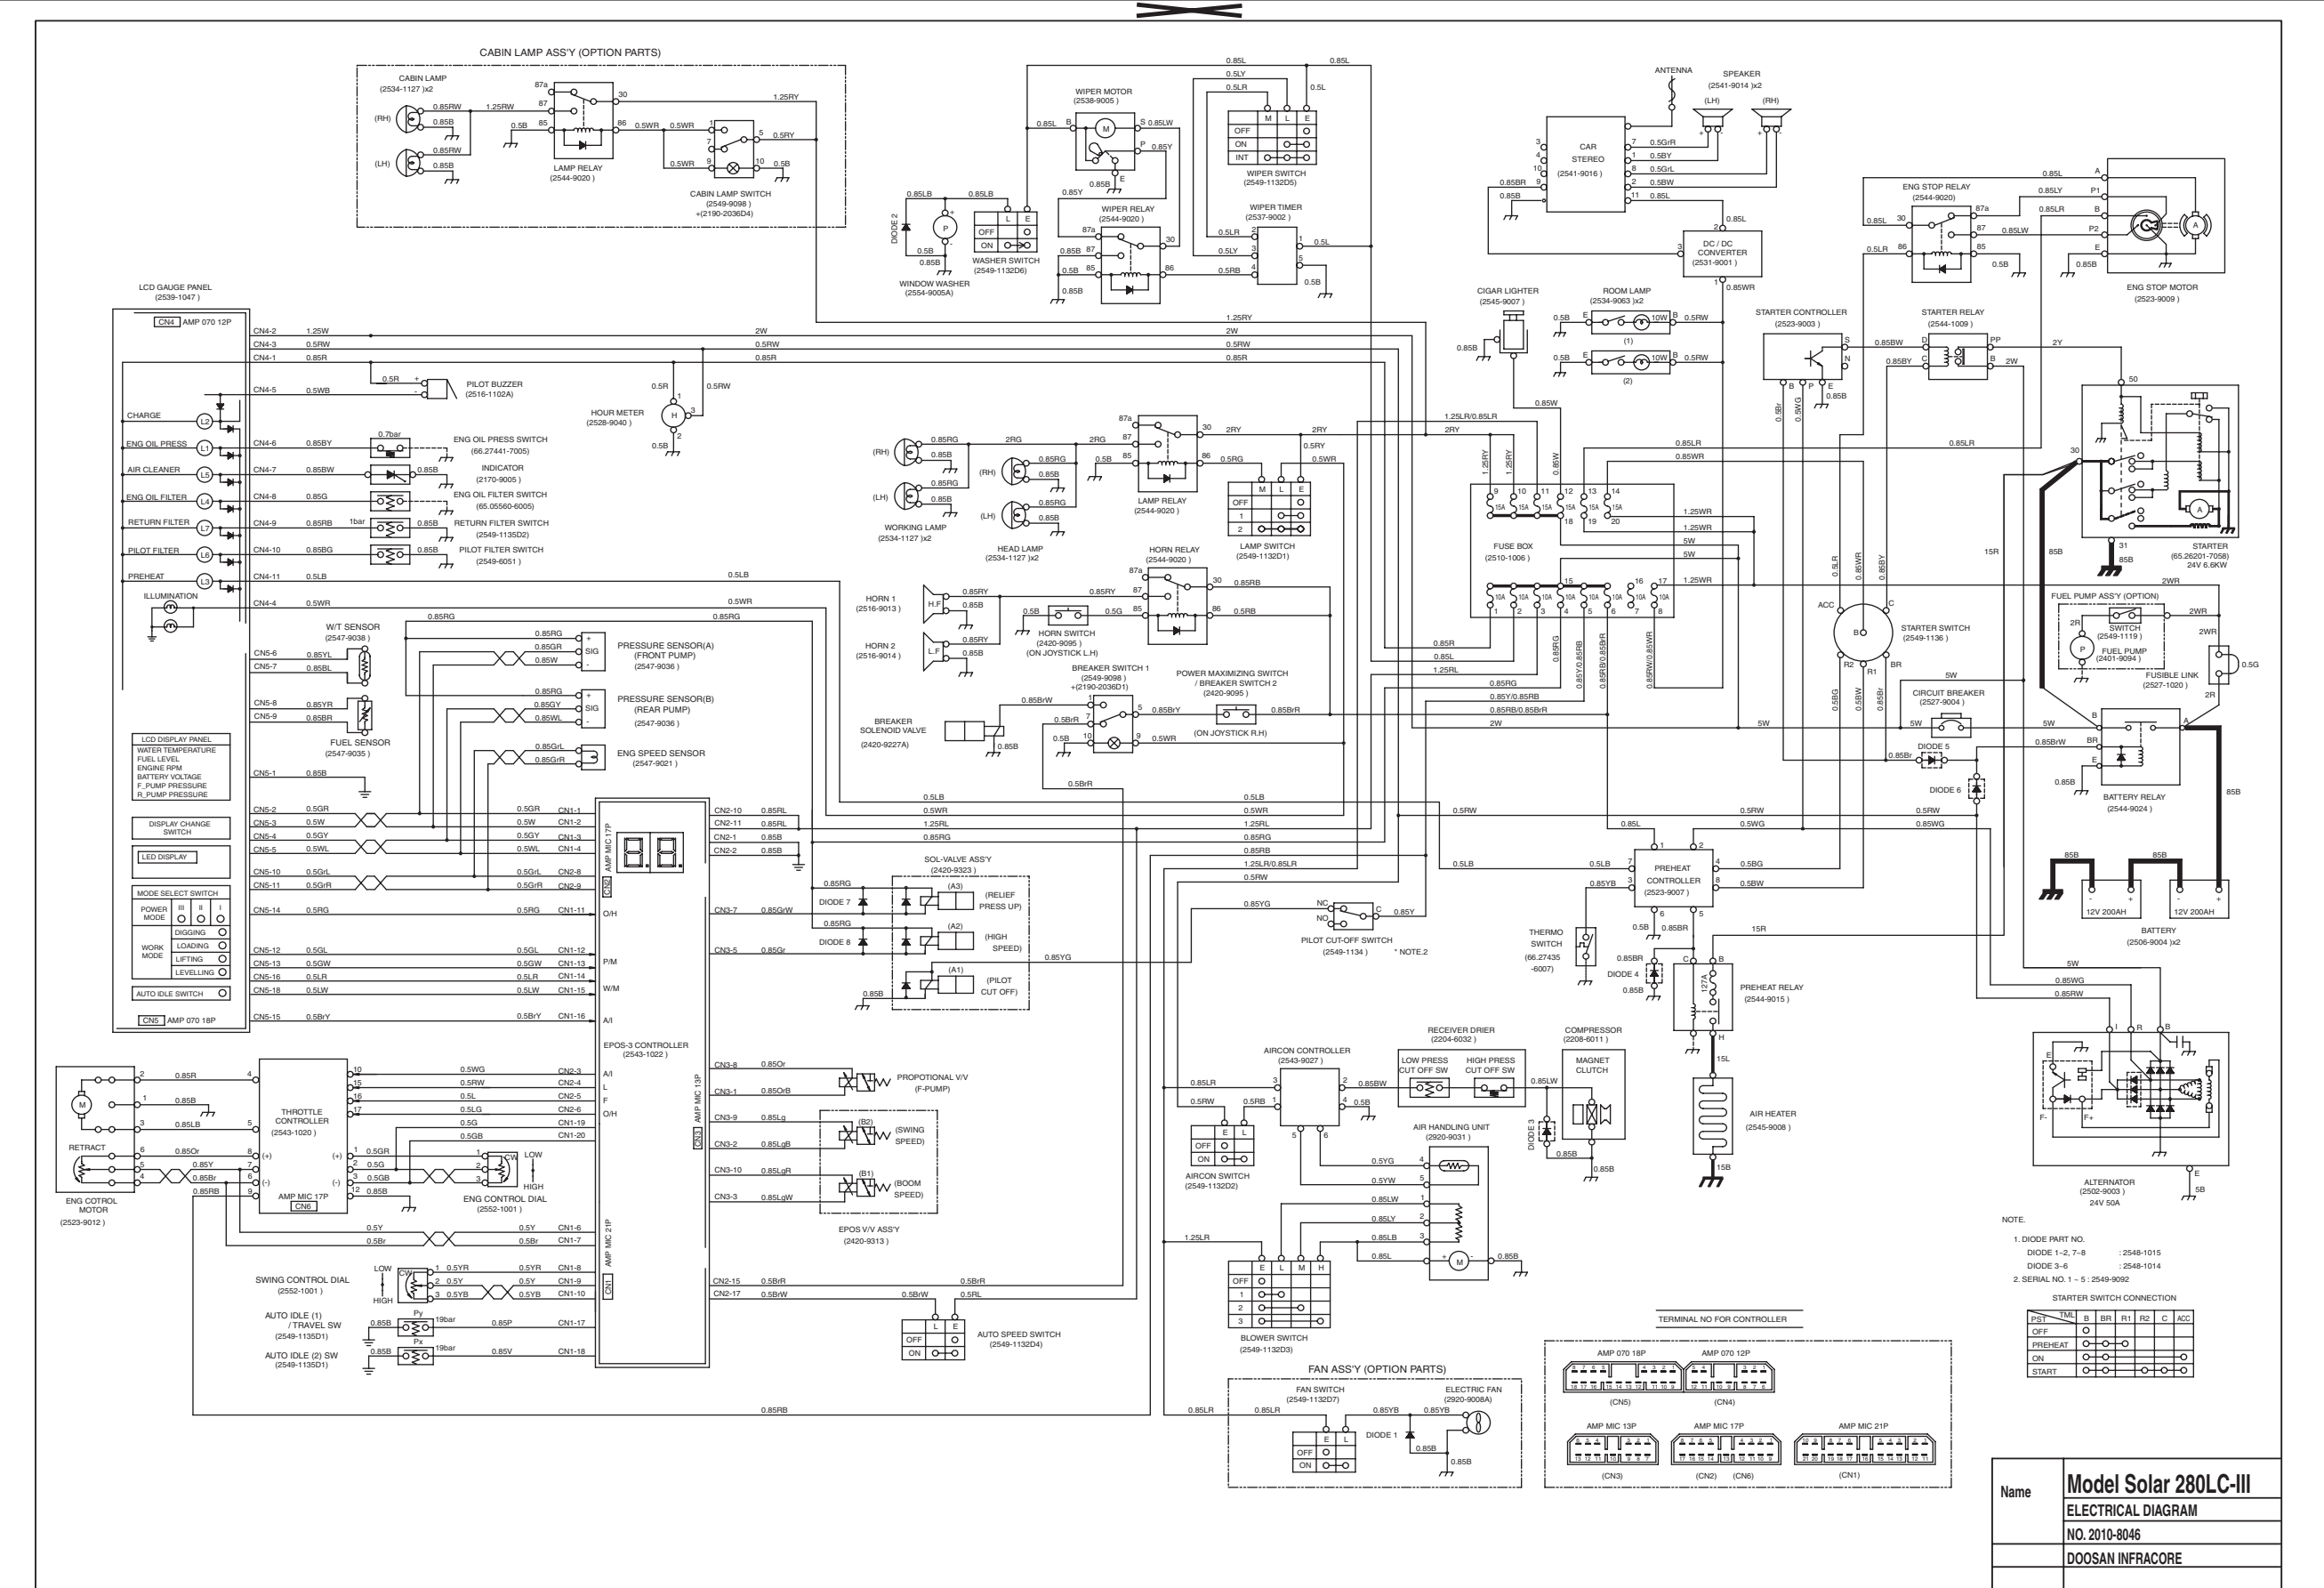

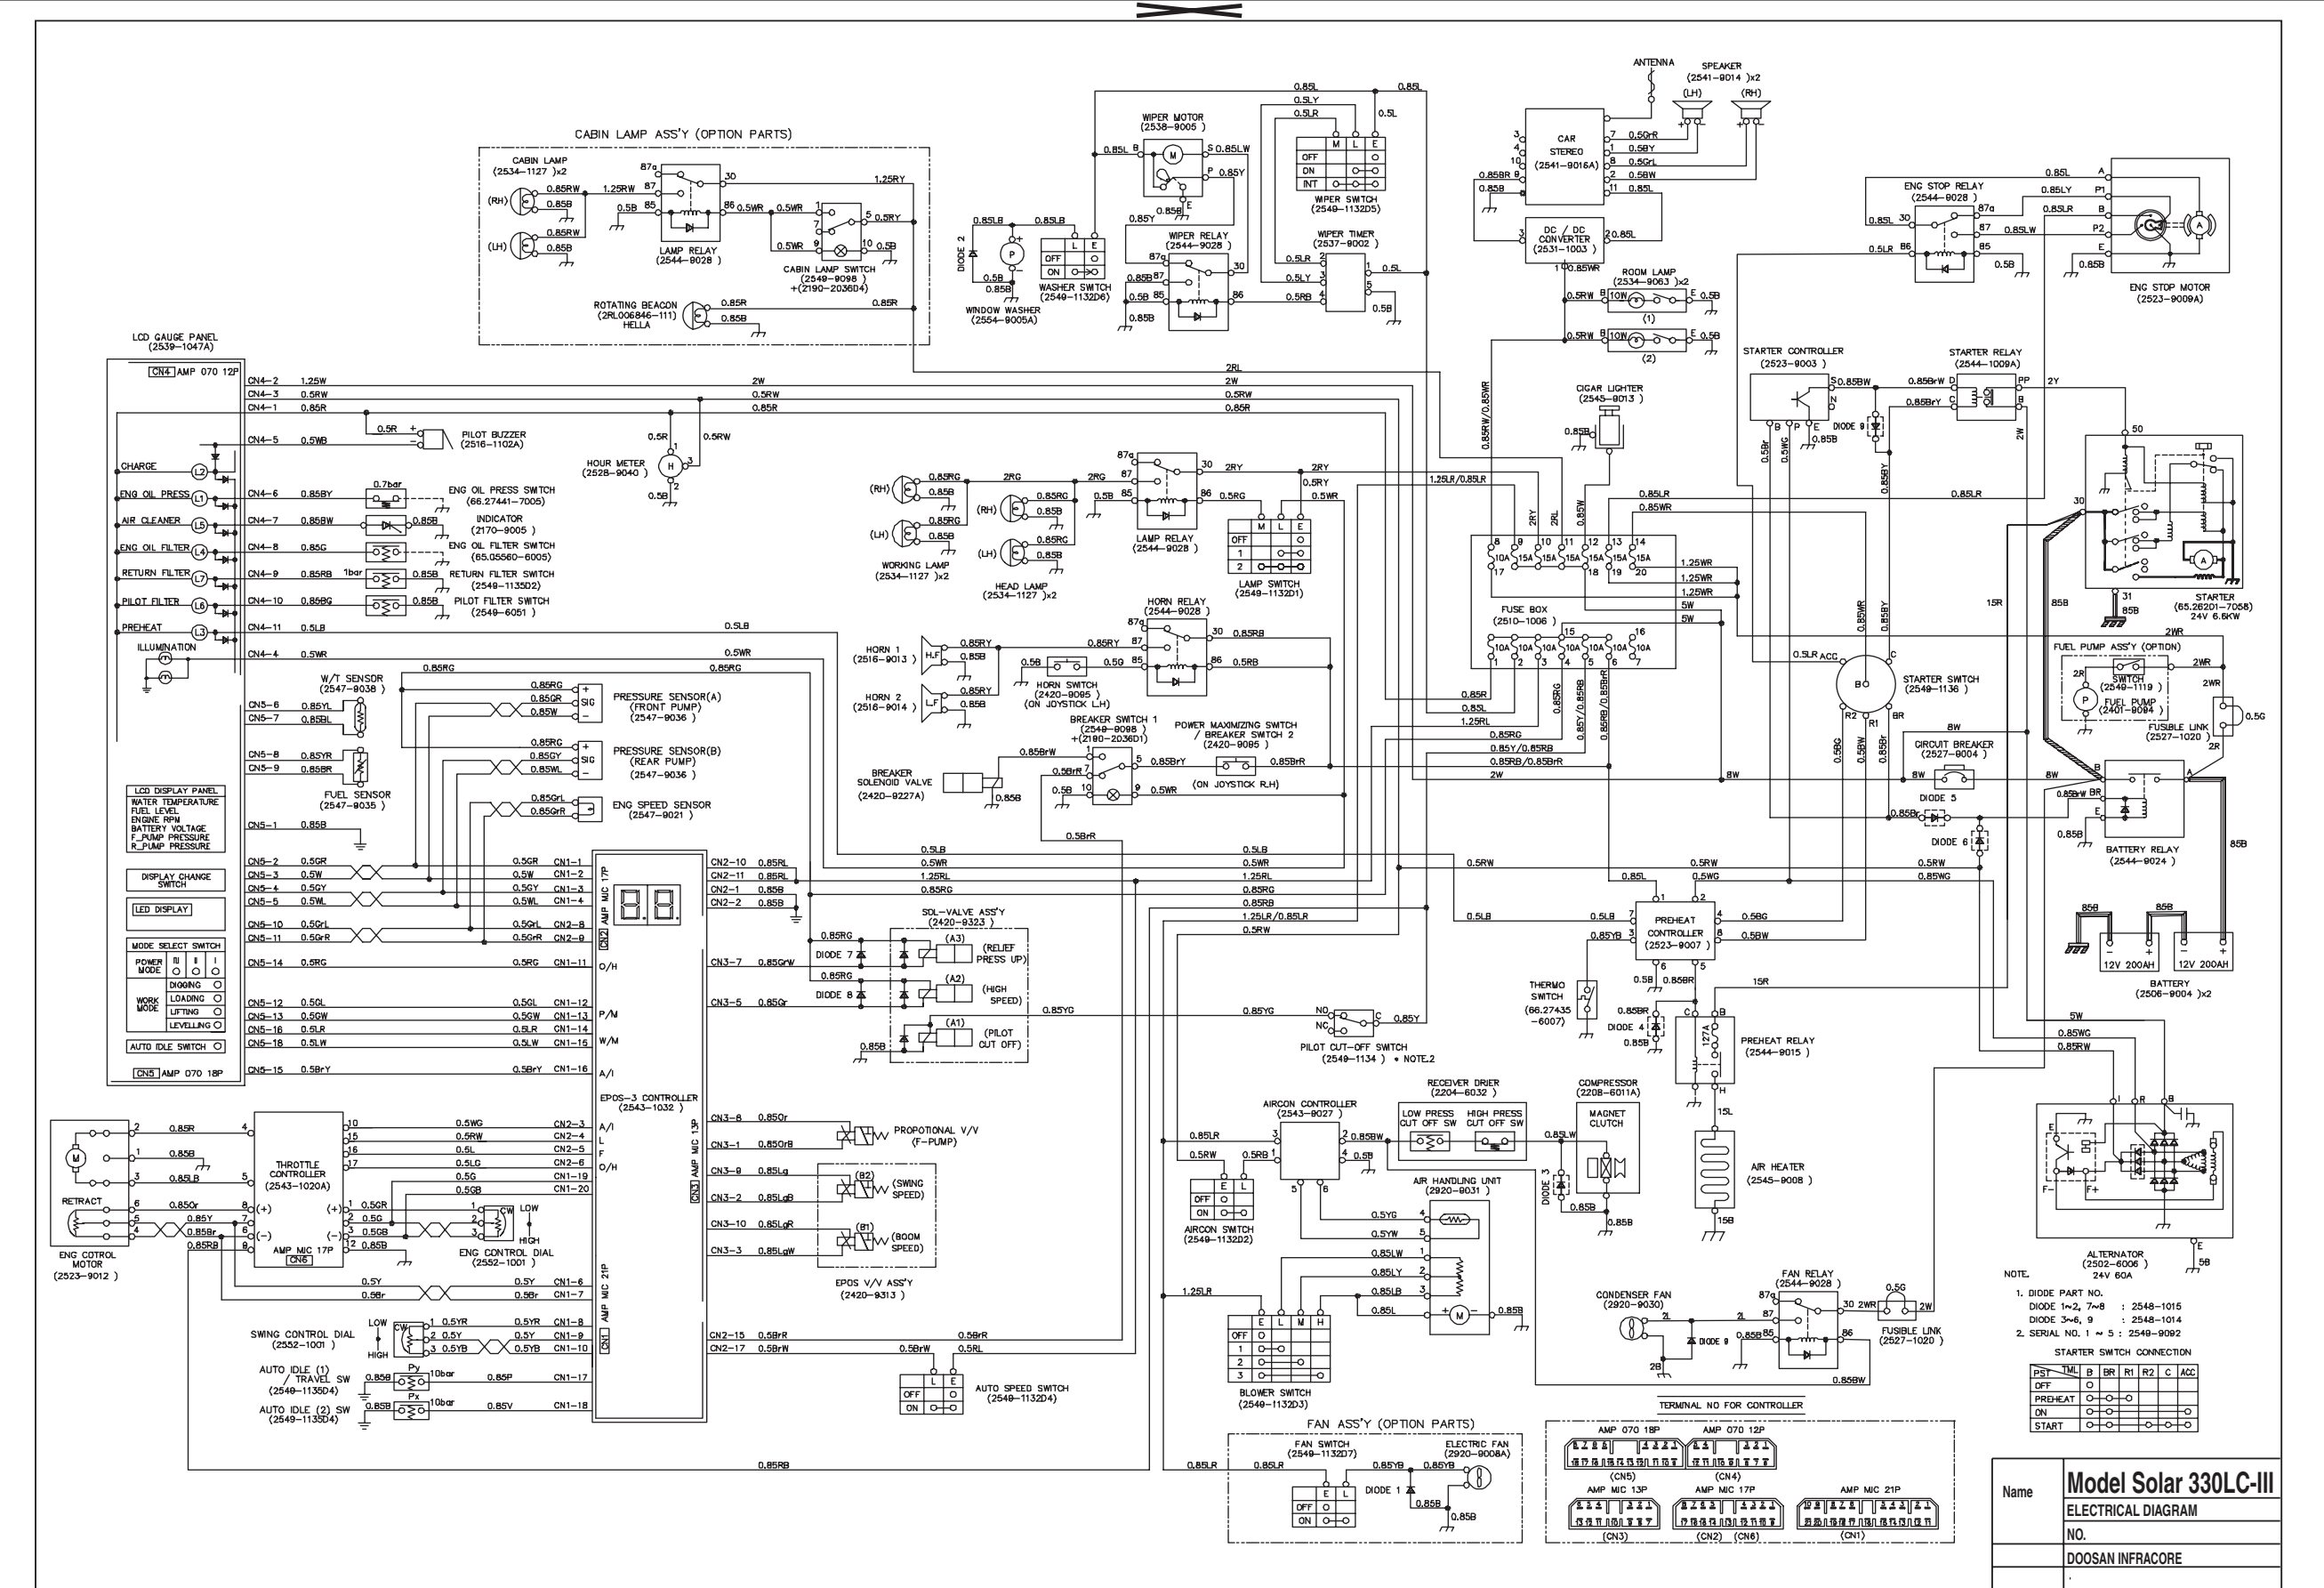

NOTE.

1. DIODE PART NO.
DIODE 1~2, 7~8 : 2548-1015
DIODE 3~6, 9 : 2548-1014
2. SERIAL NO. 1 ~ 5 : 2549-9092

STARTER SWITCH CONNECTION


DIODE	1	2	3	4	5	6	7	8	9
START	ON	ON	ON	ON	ON	ON	ON	ON	ON

Name **Model Solar 330LC-III**


ELECTRICAL DIAGRAM

NO.


DOOSAN INFRACORE

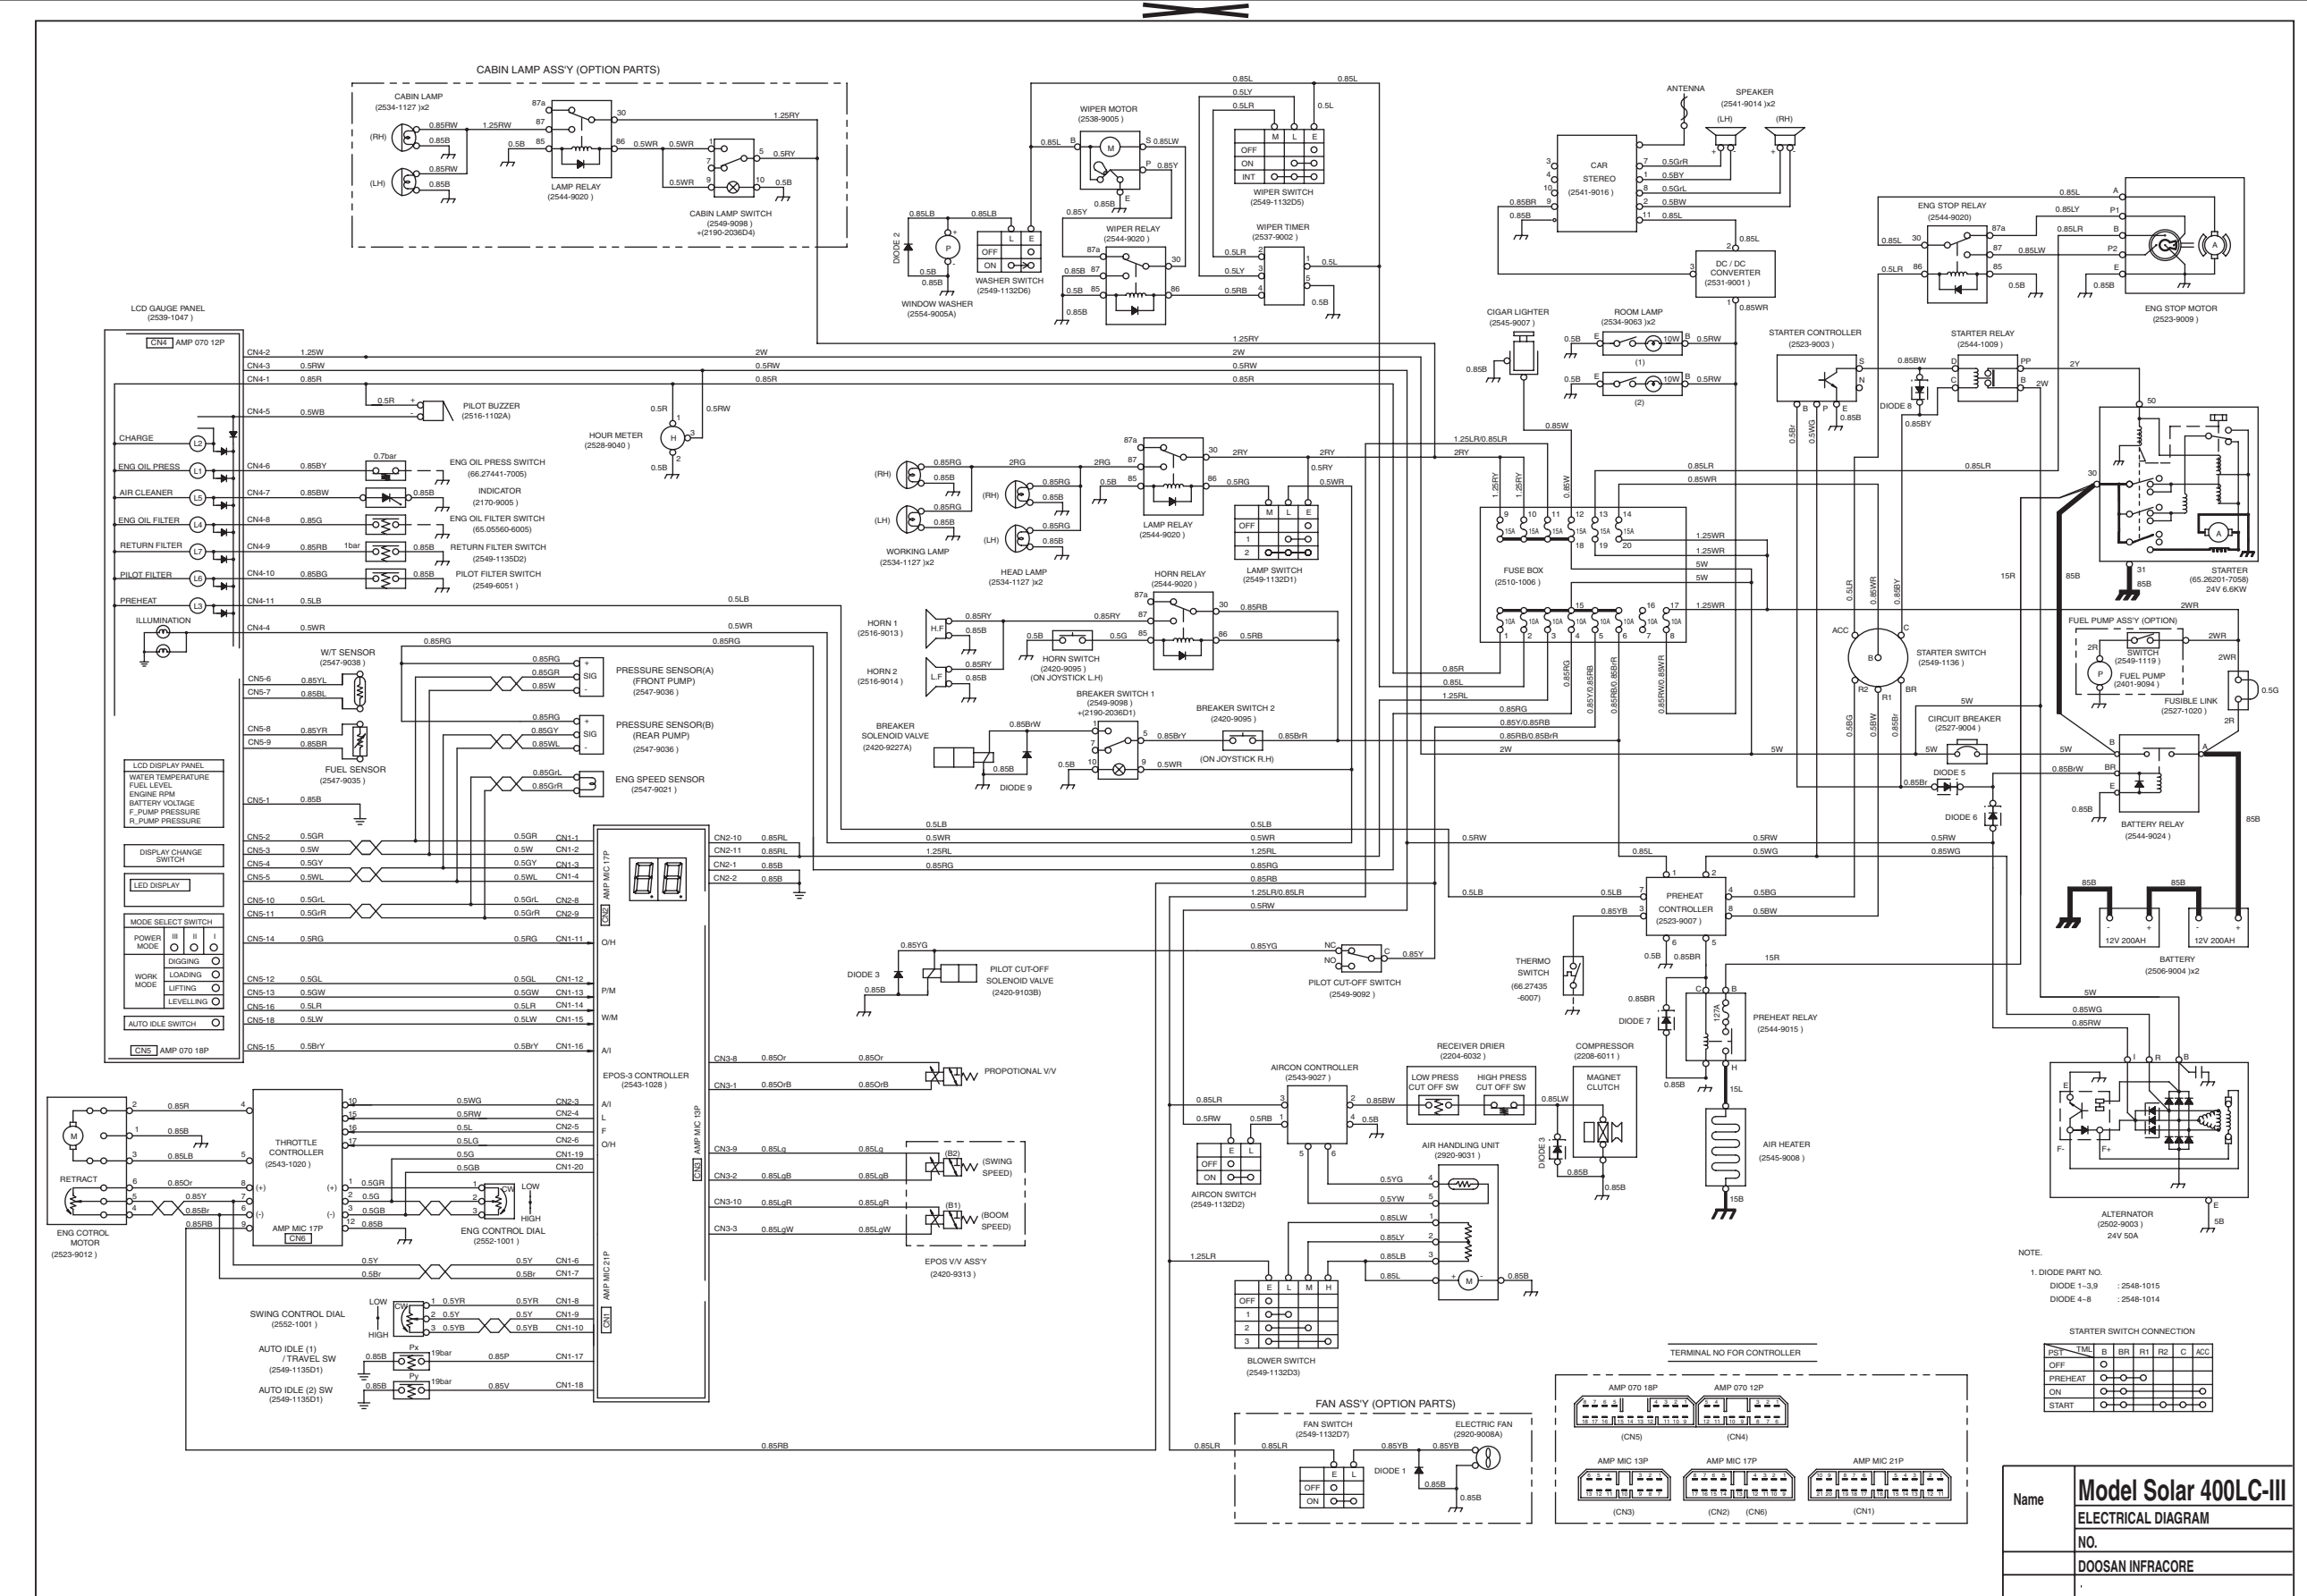




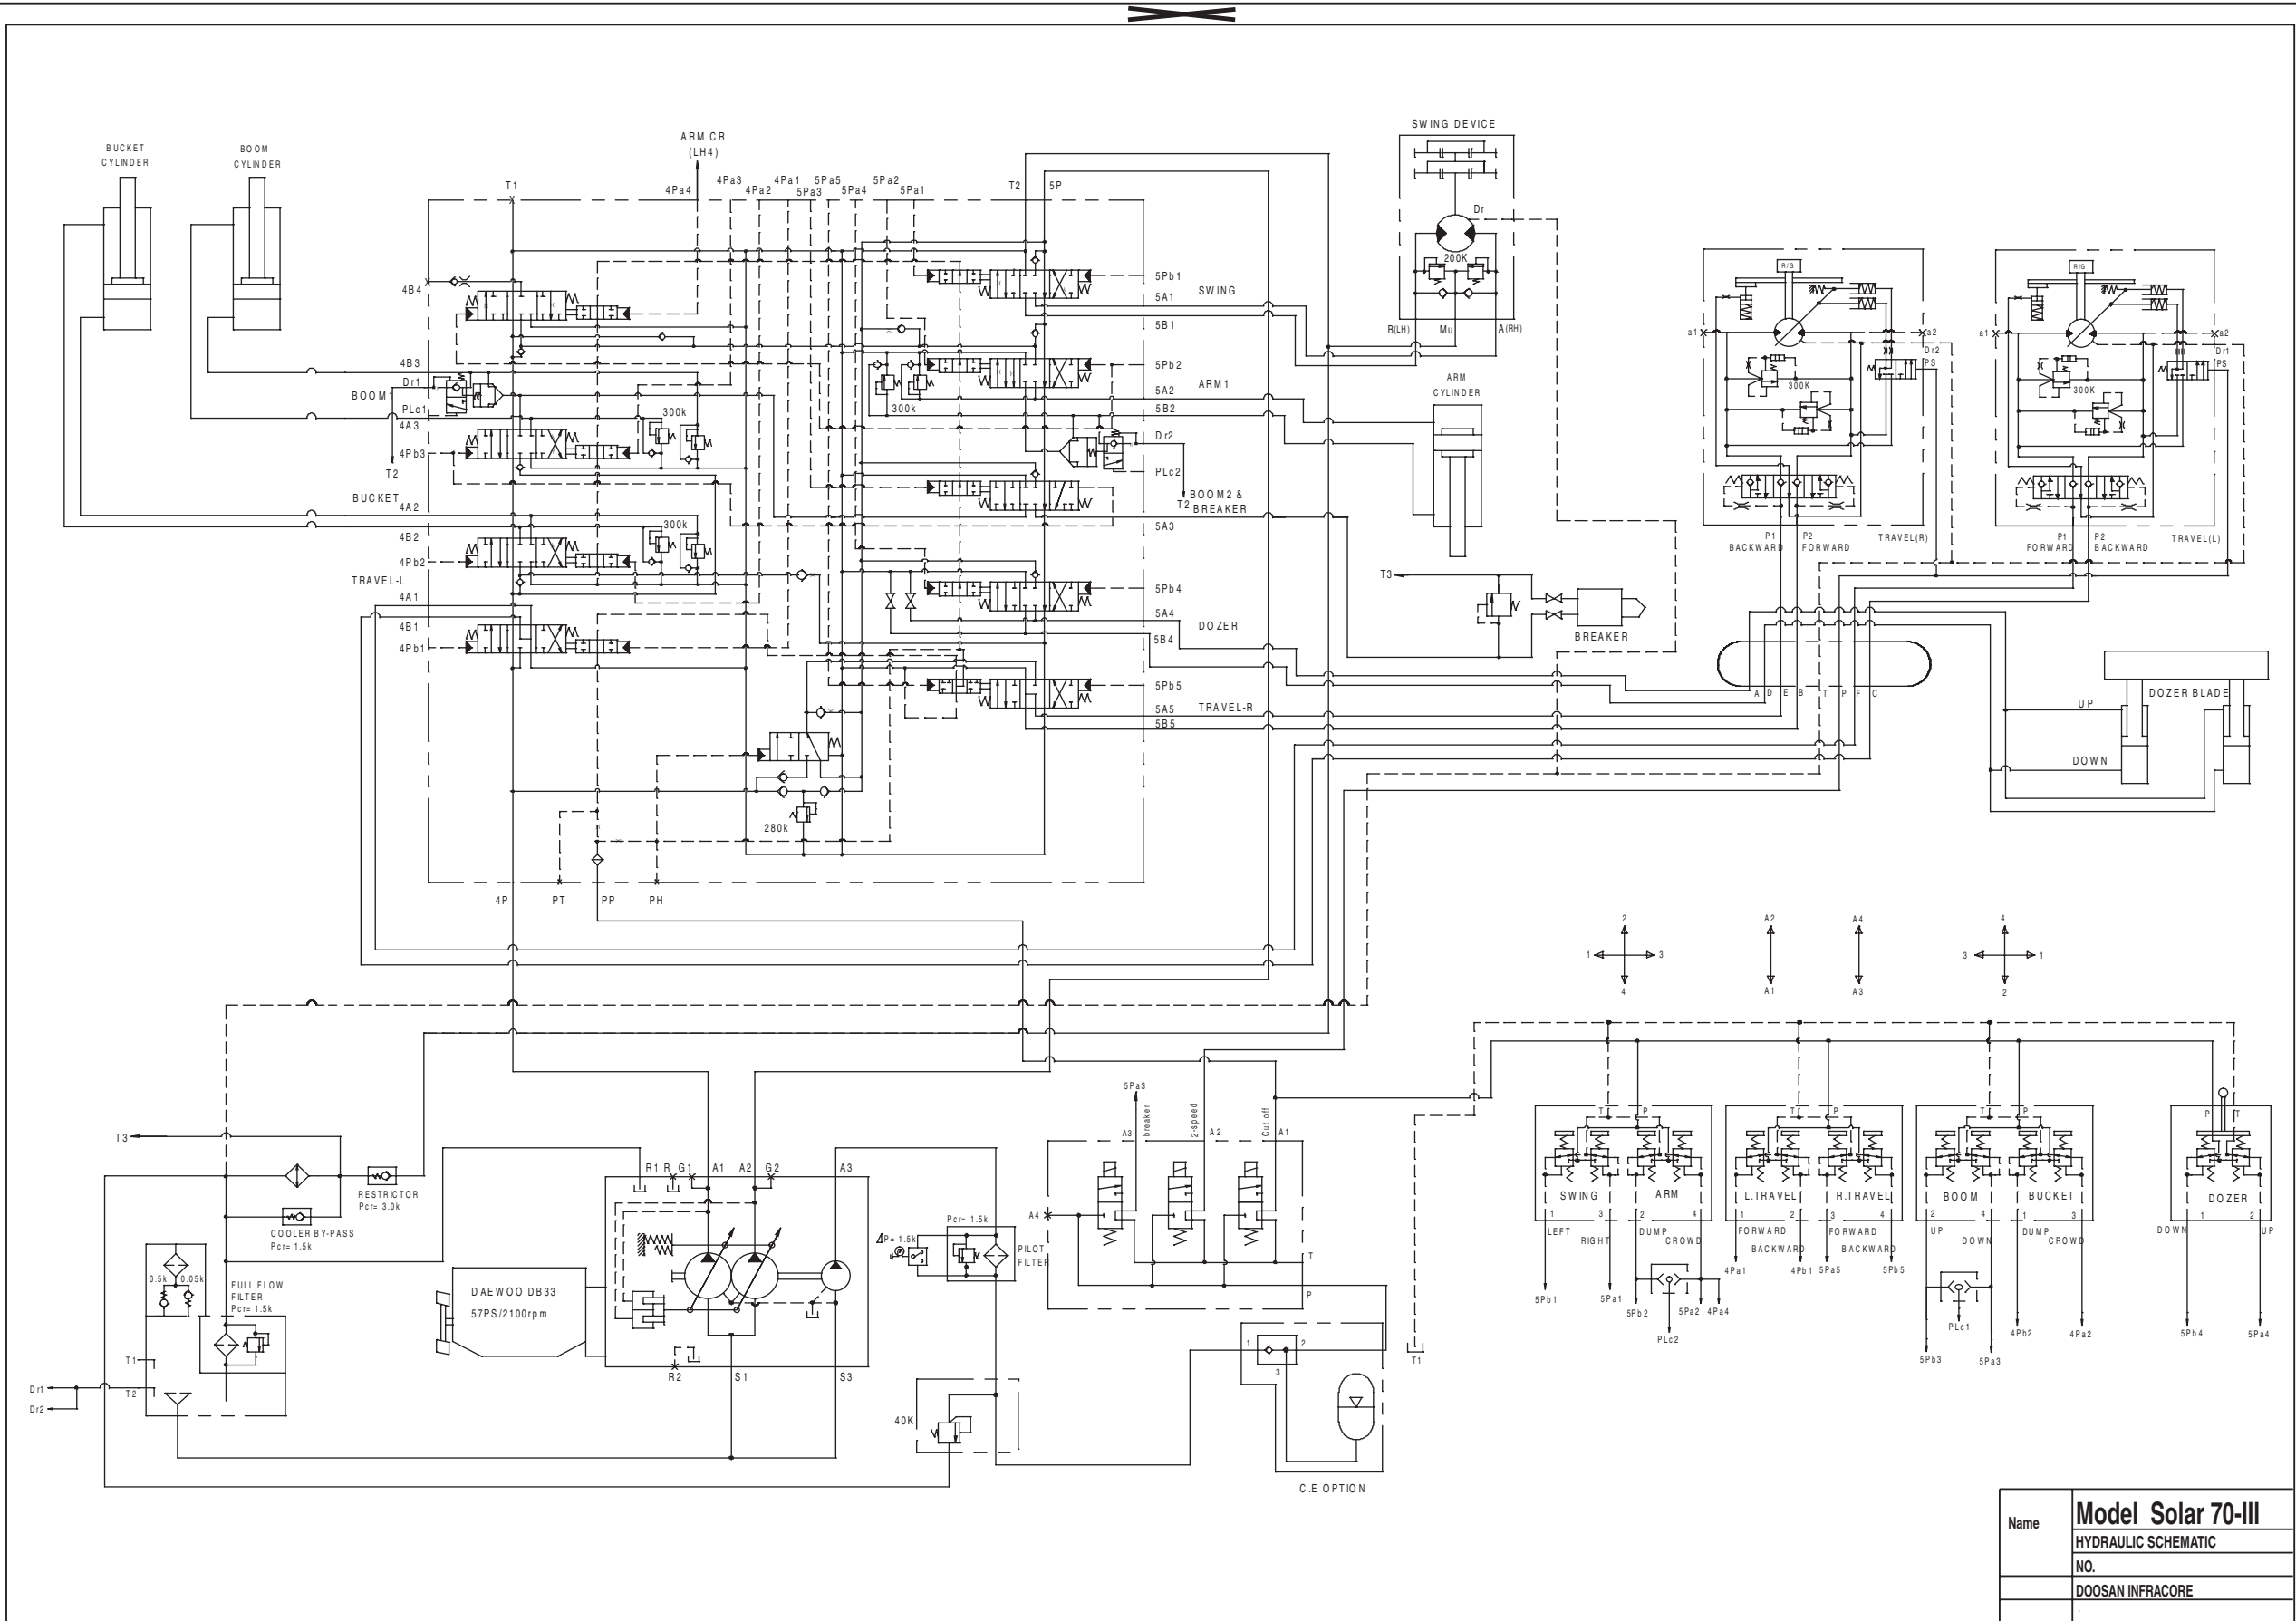


Name	Model Solar 70-III
	HYDRAULIC SCHEMATIC
NO.	
	DOOSAN INFRACORE

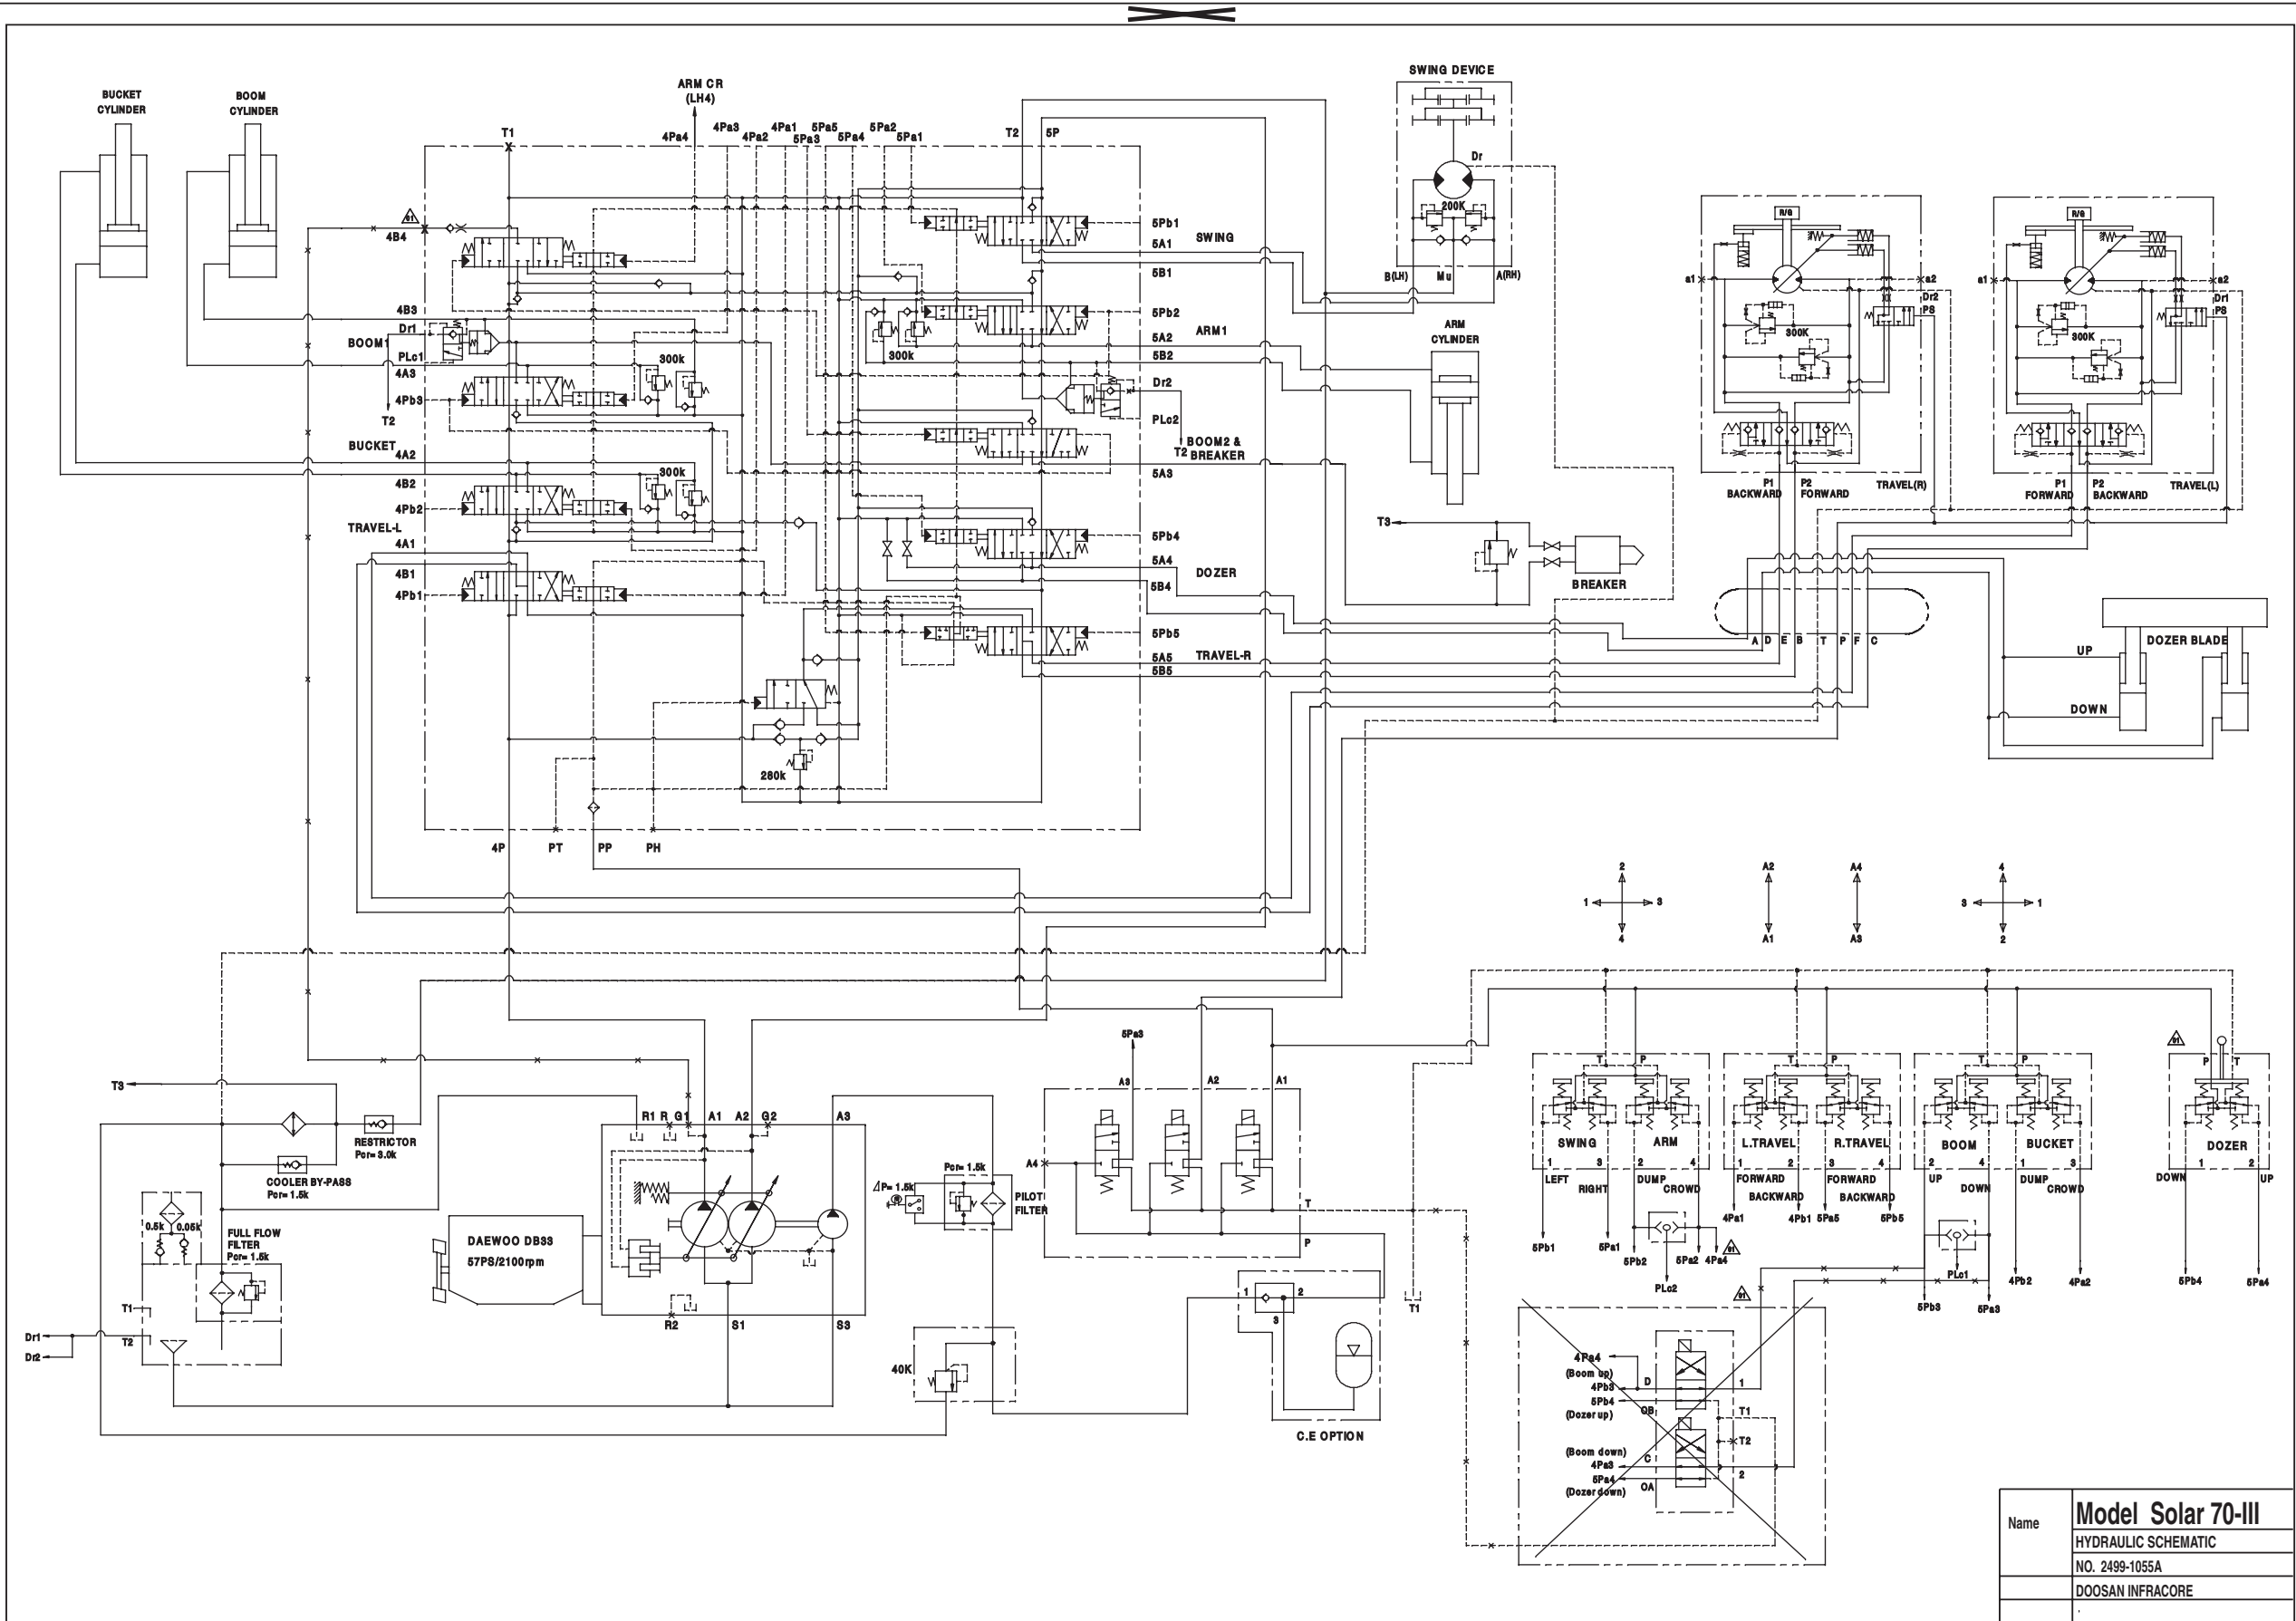


Name	Model Solar 70-III
	HYDRAULIC SCHEMATIC
	NO. 2499-1055A
	DOOSAN INFRACORE

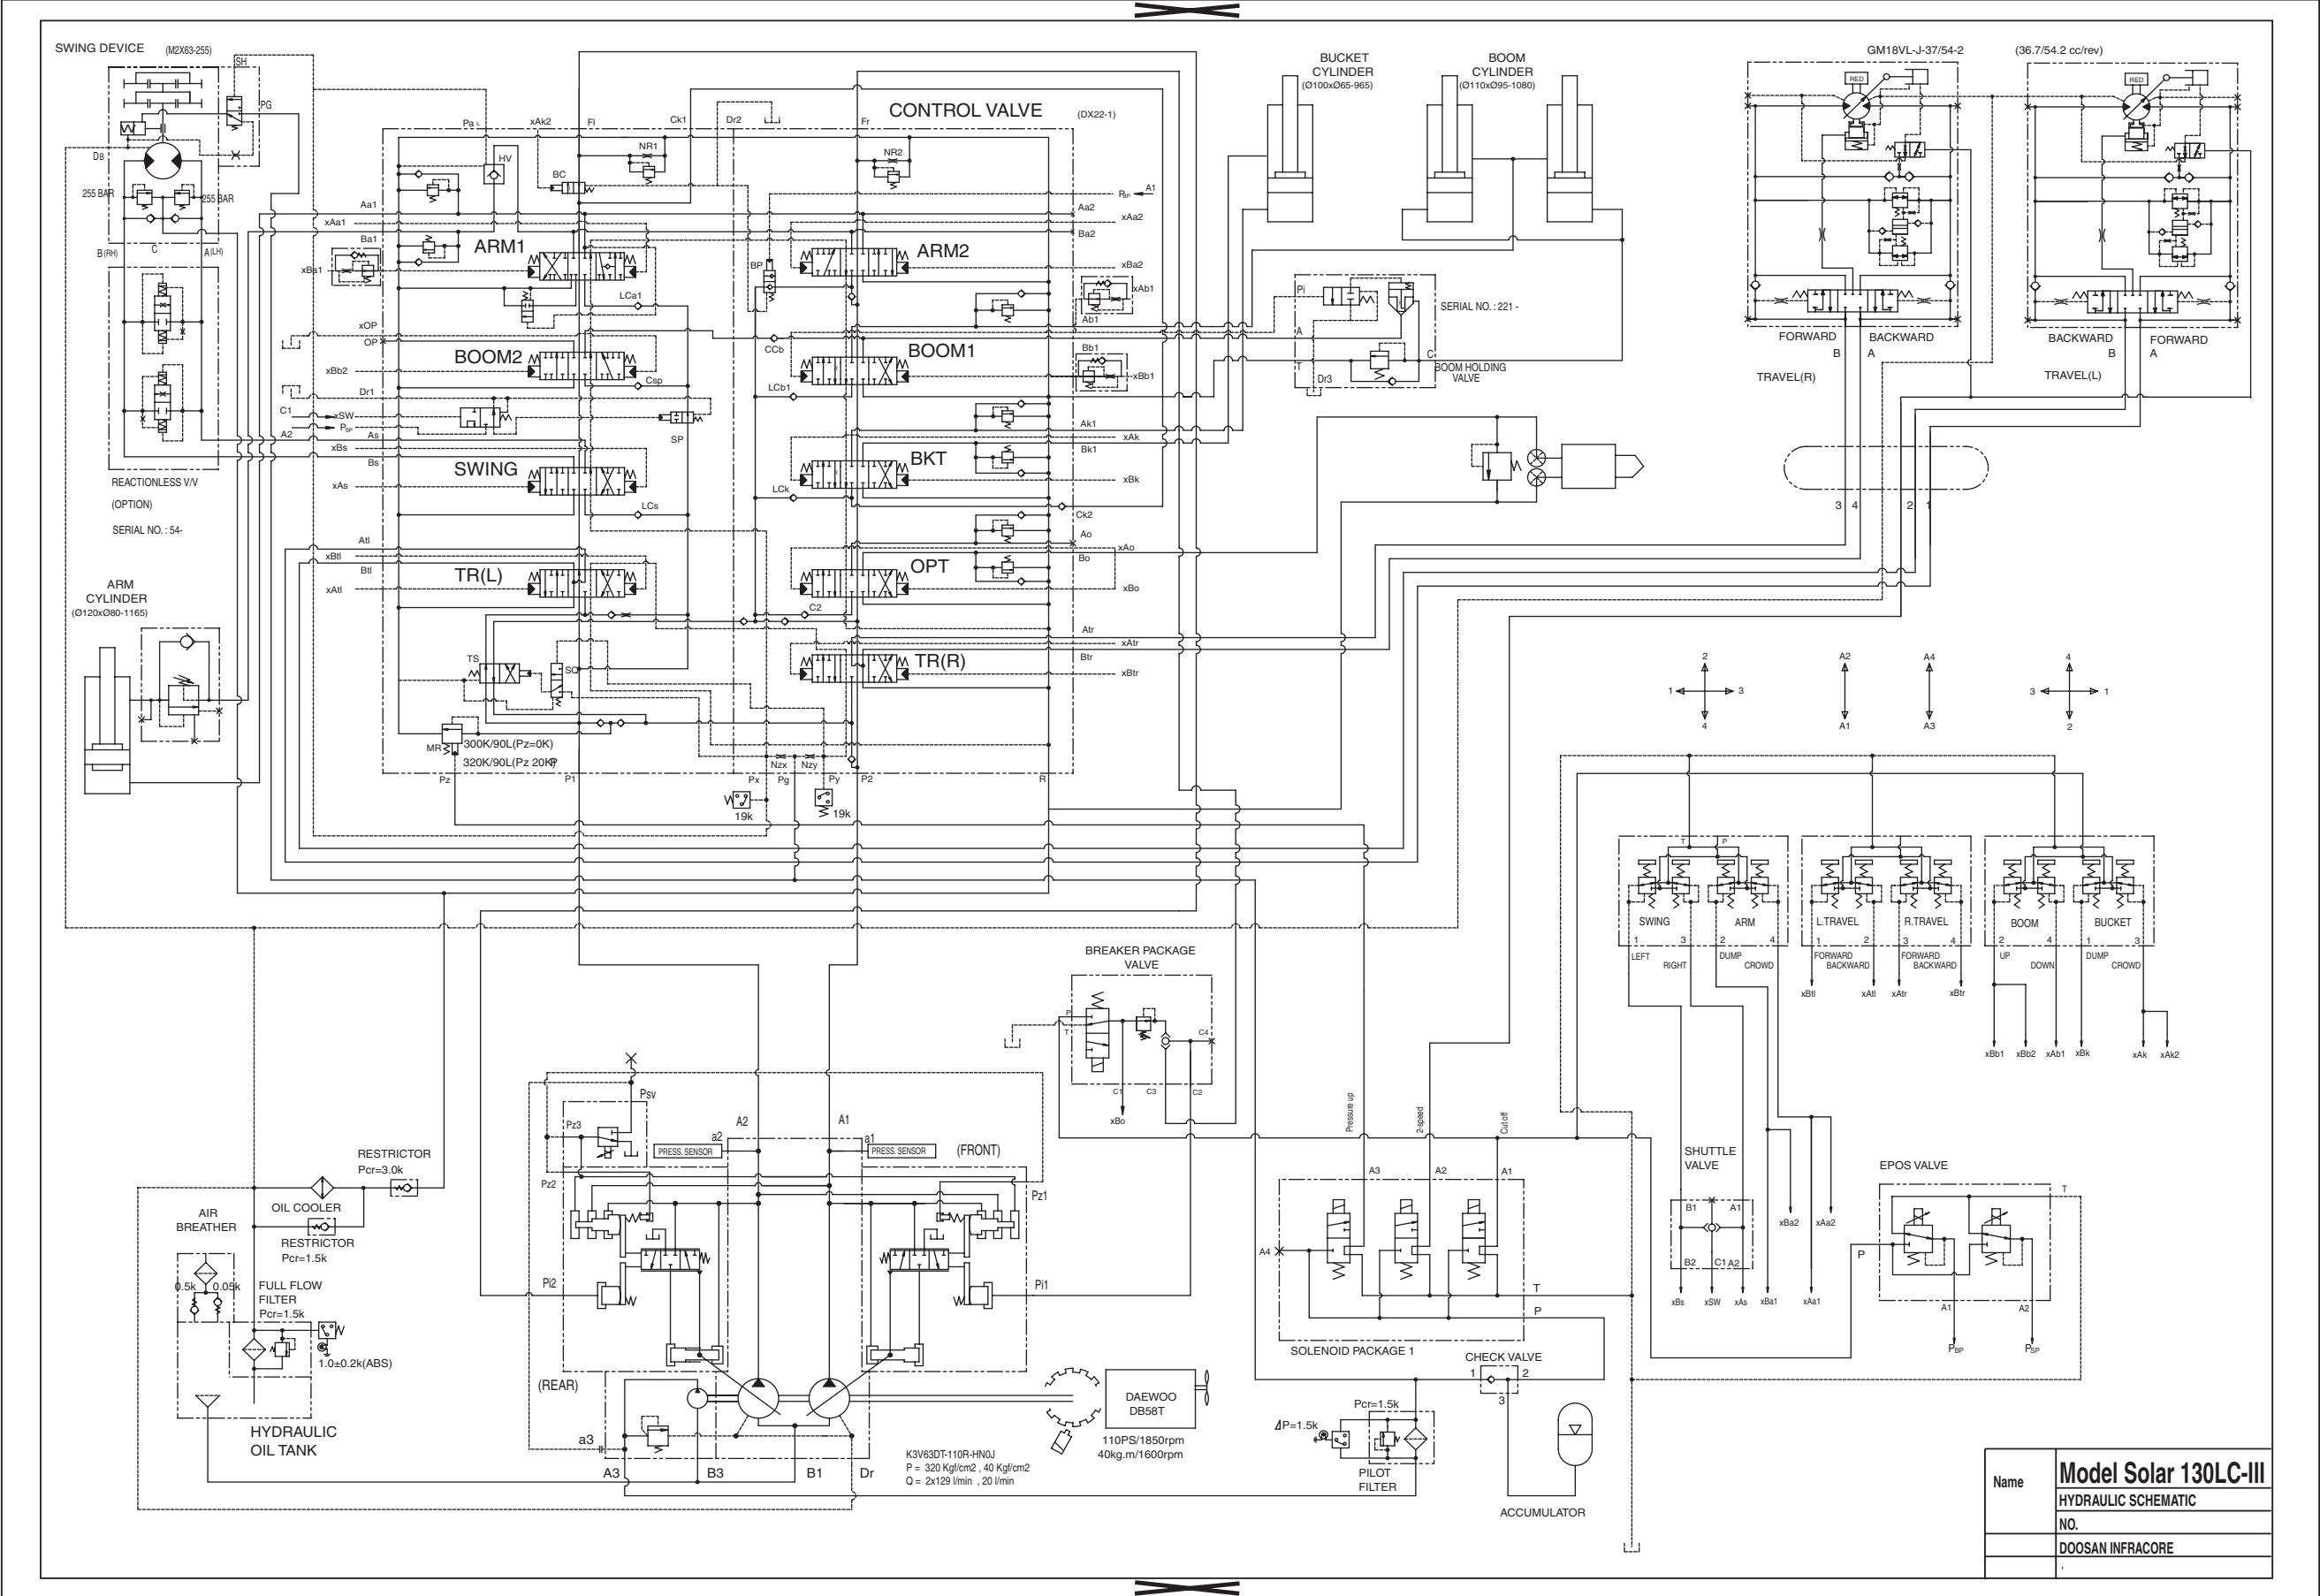

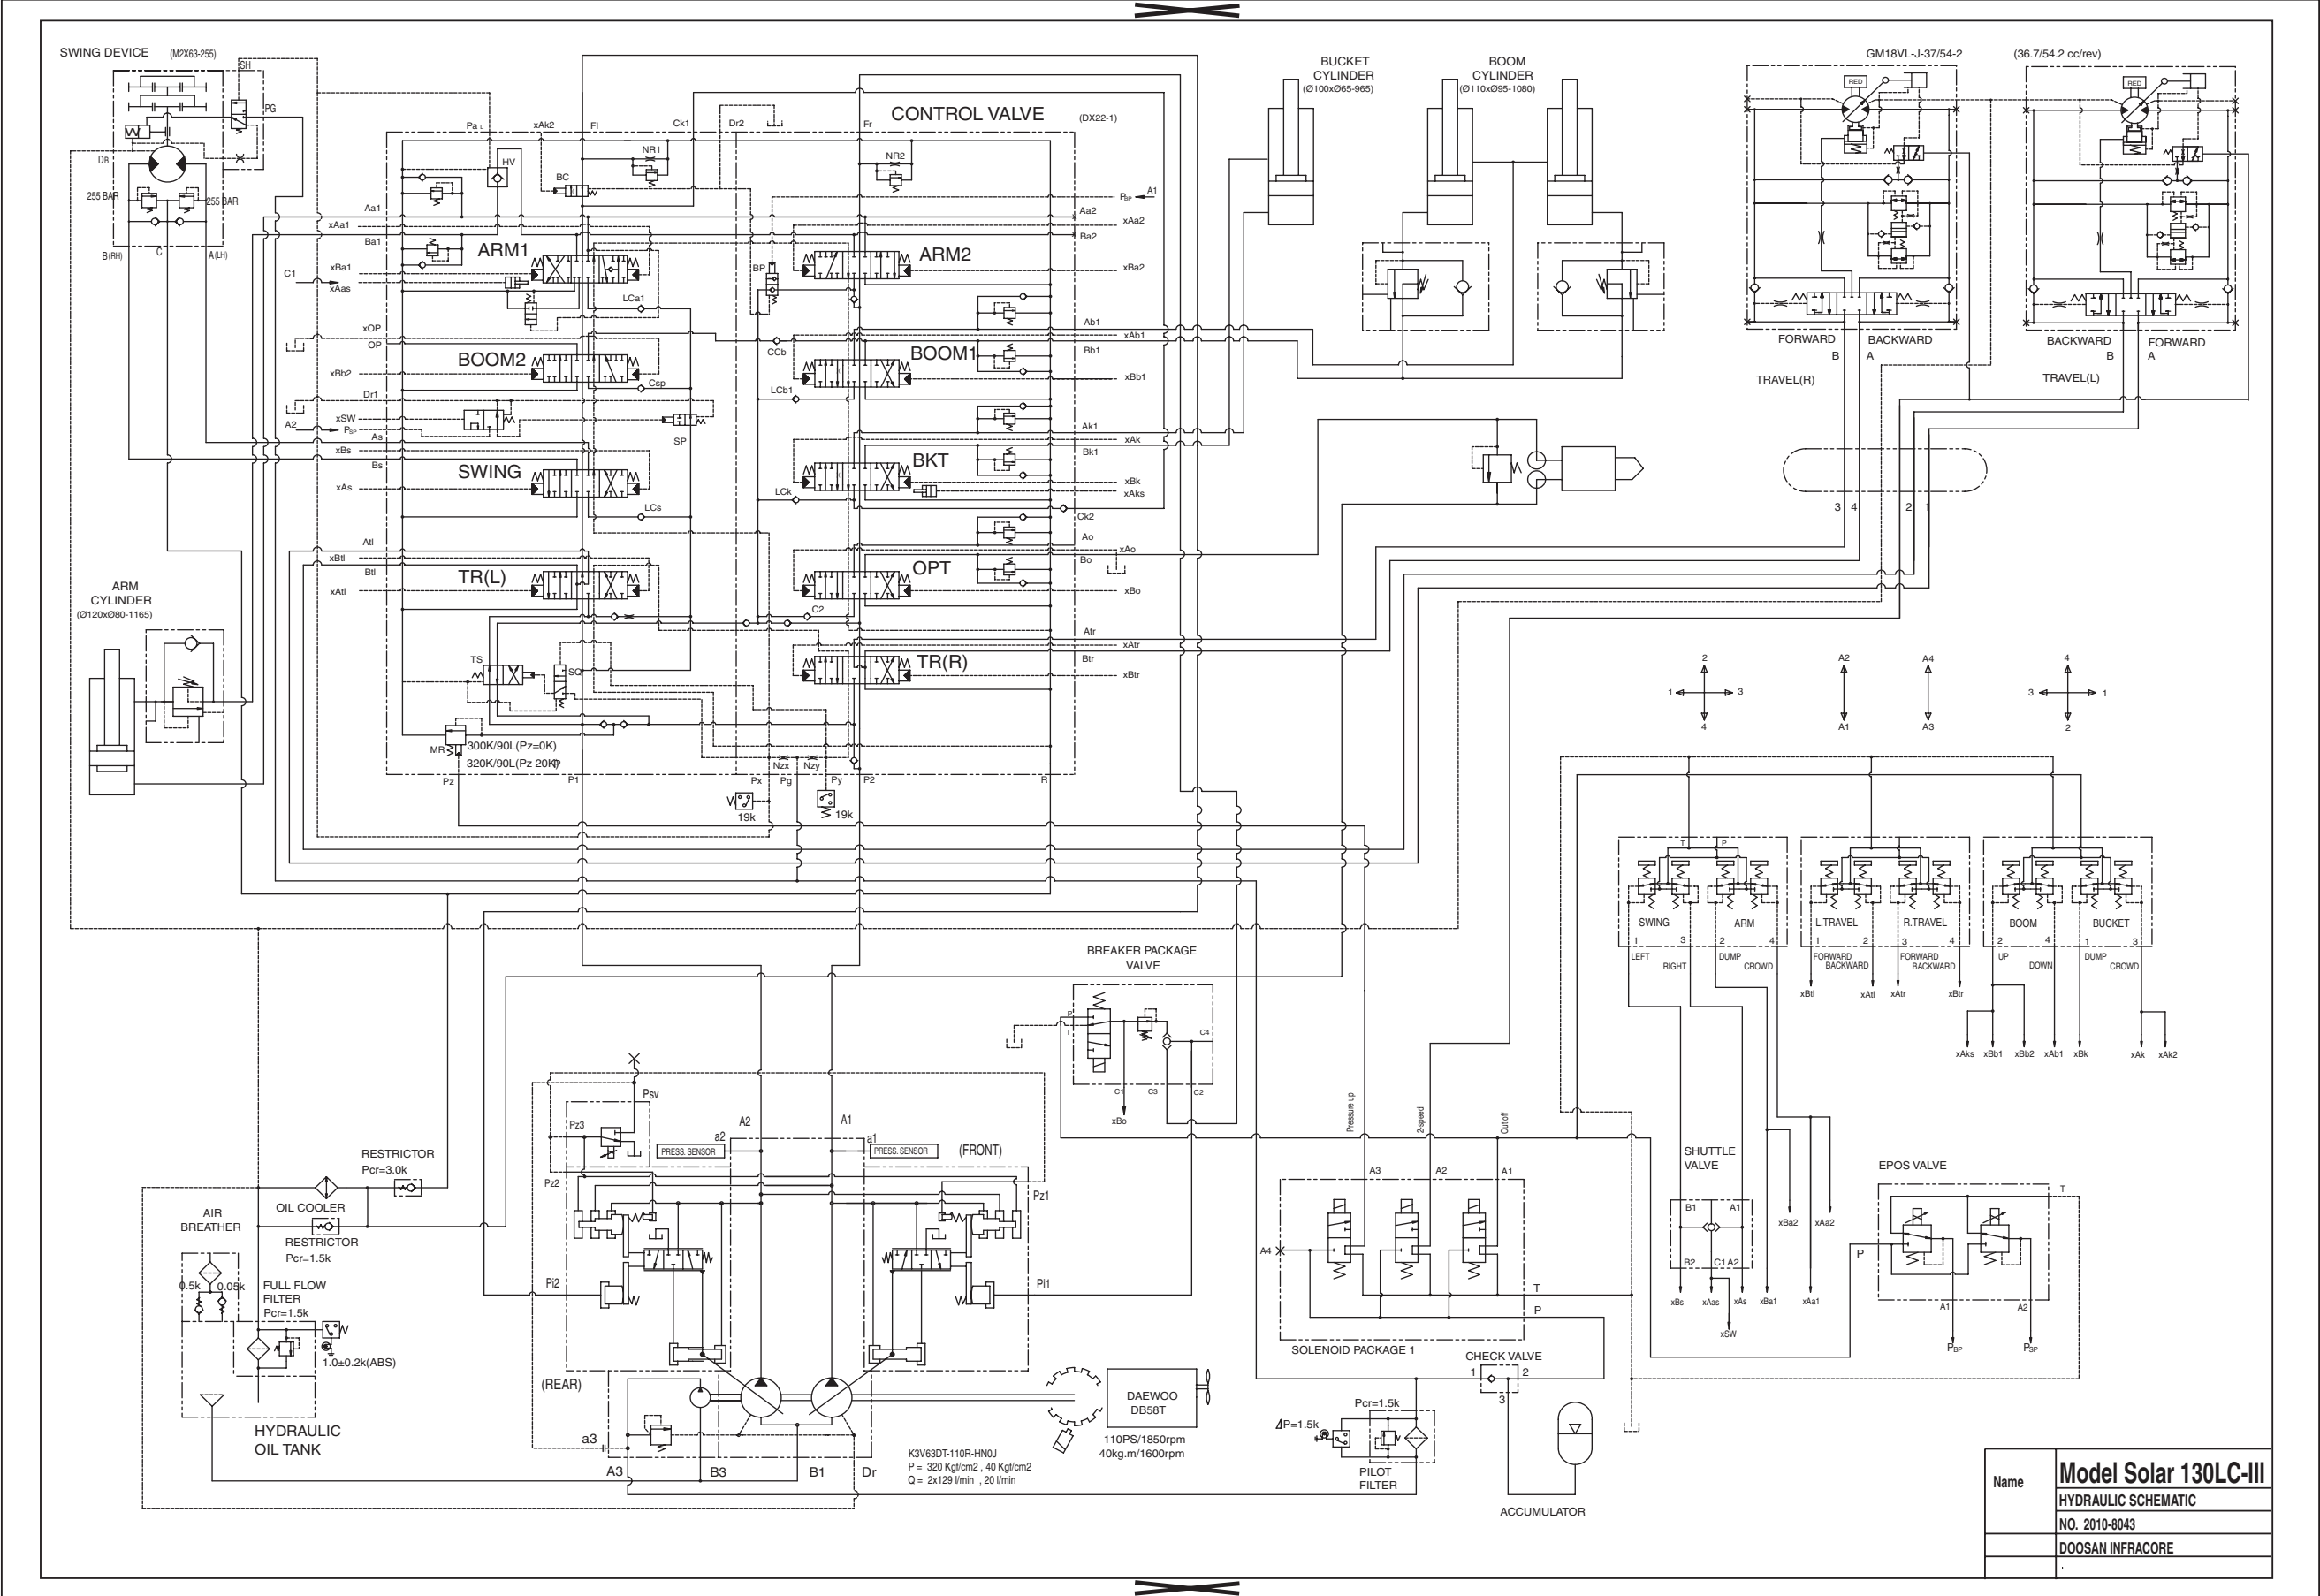


Name	Model Solar 130LC-III
	HYDRAULIC SCHEMATIC
	NO. 2010-8043
	DOOSAN INFRACORE

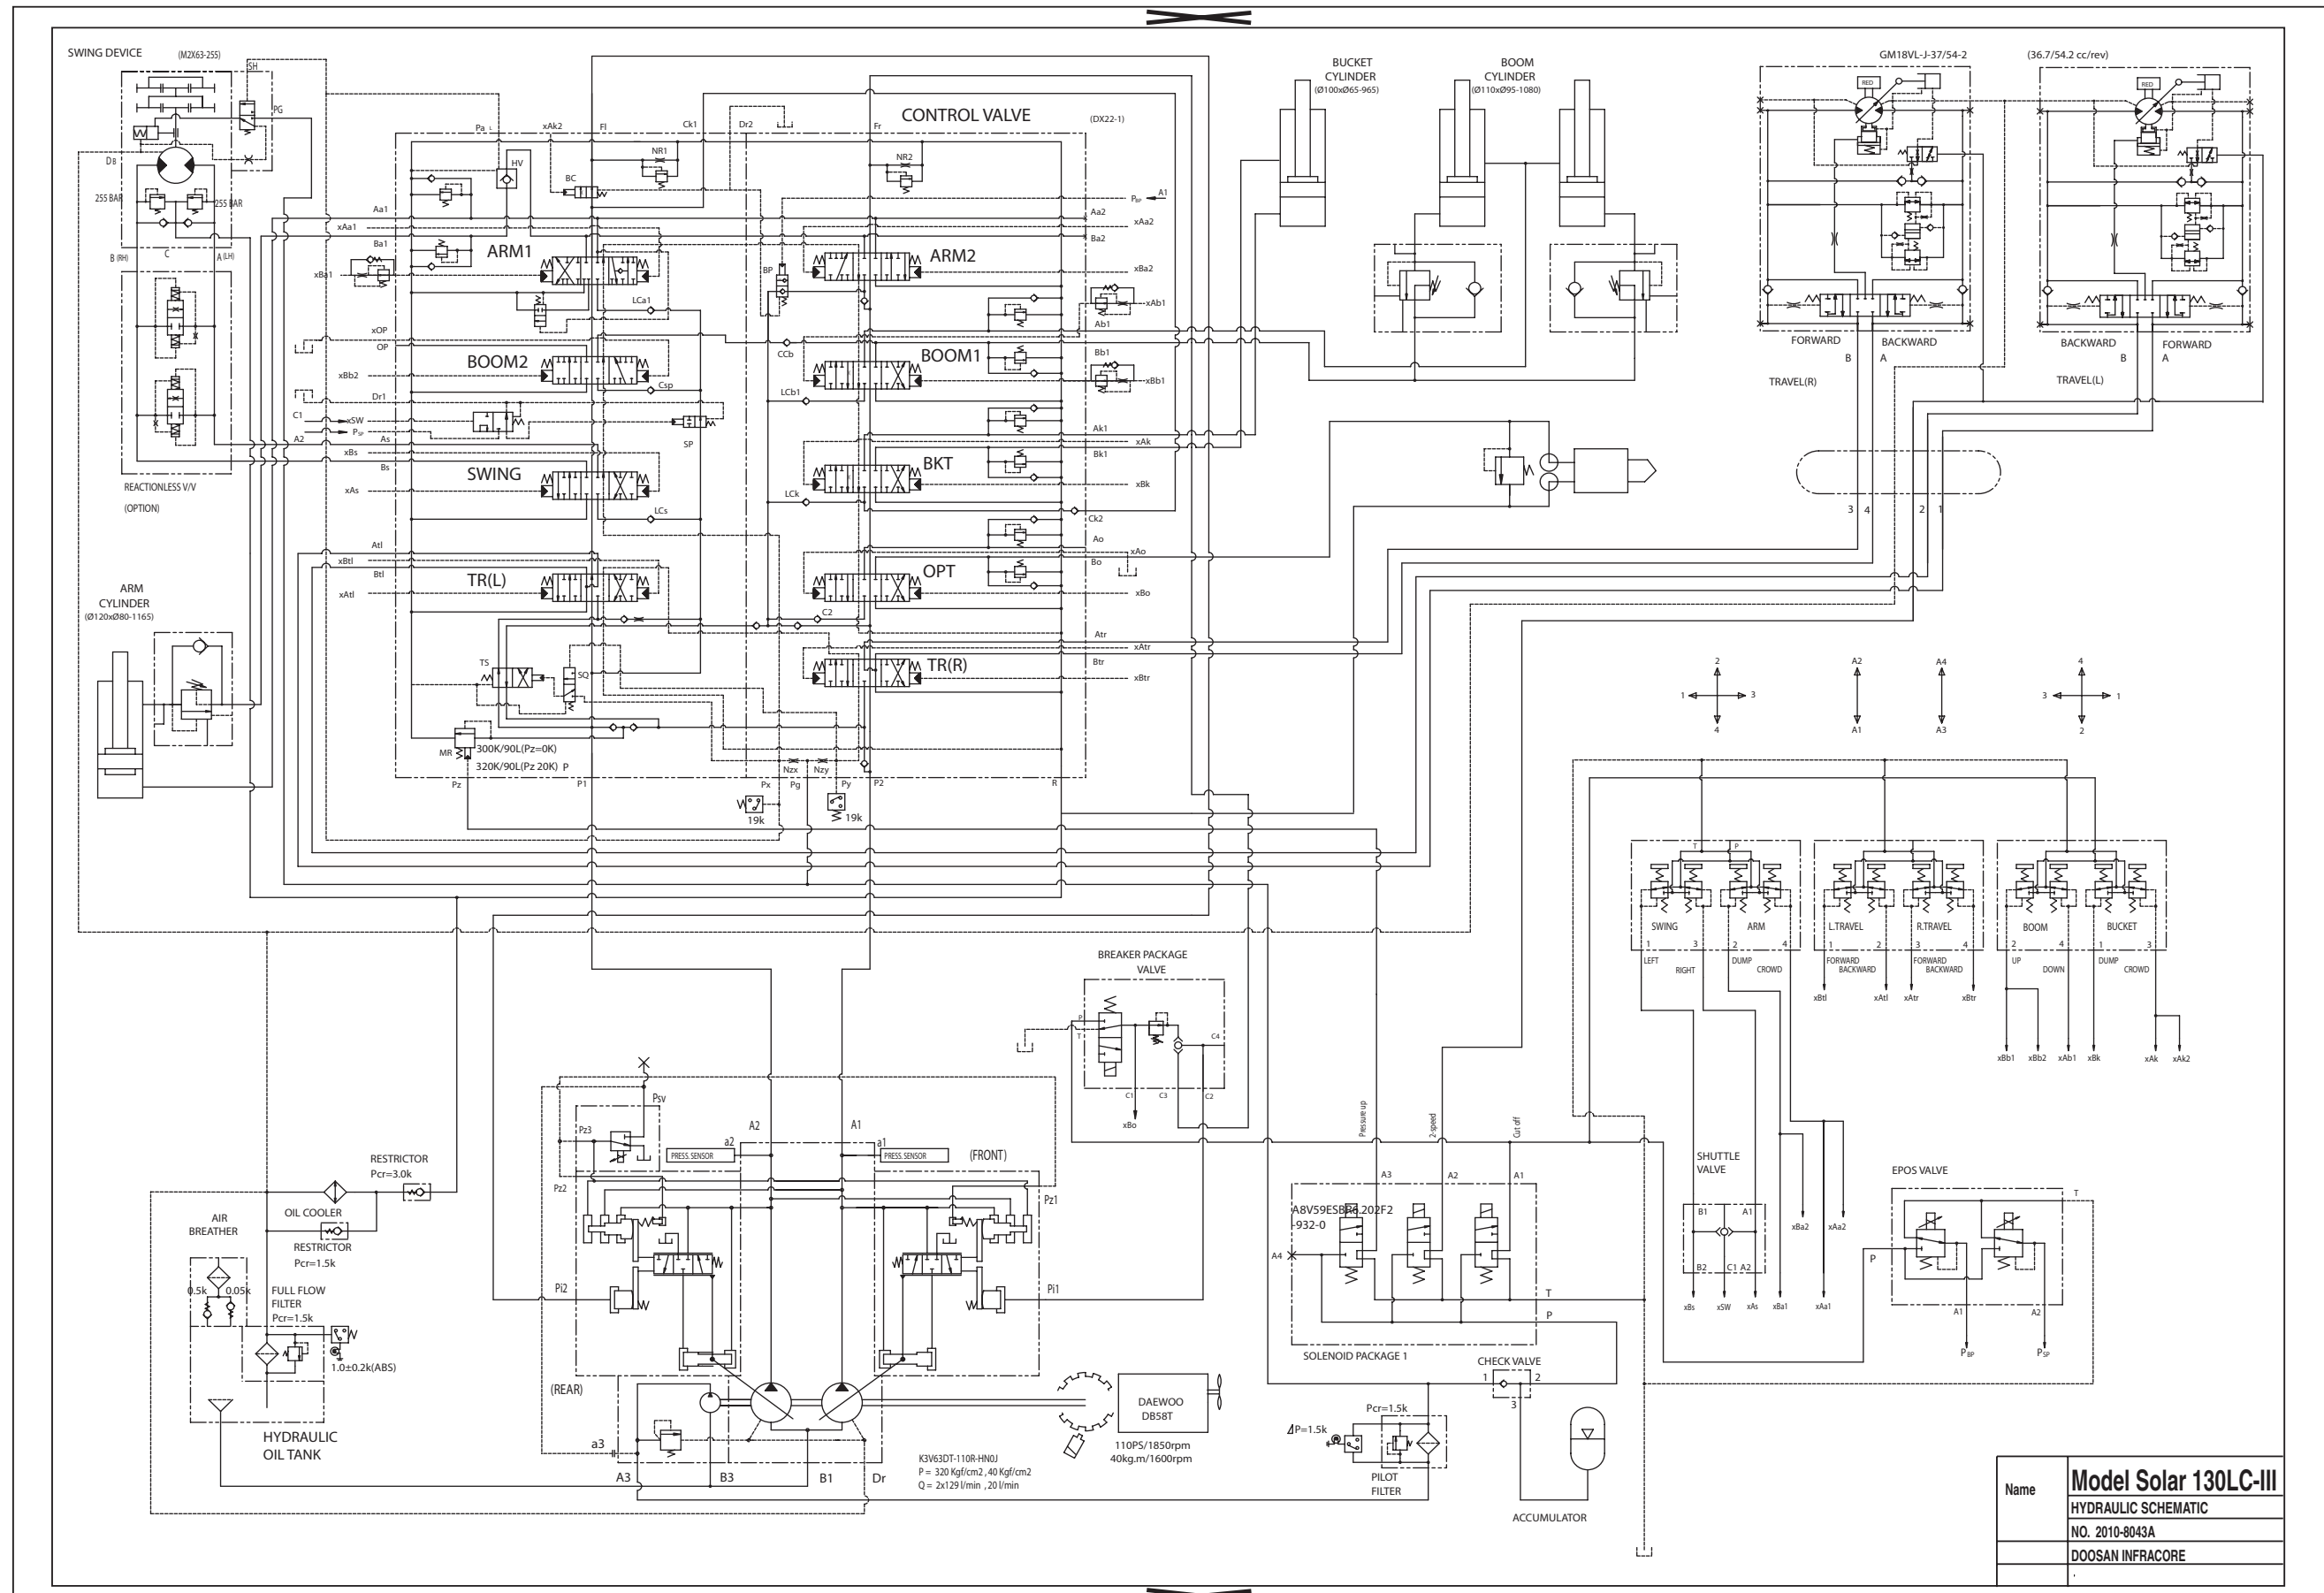



SOLAR 130W-III (S/N 0001 THRU 1720) WITH DX22 CONTROL VALVE


<https://truckmanualshub.com/>

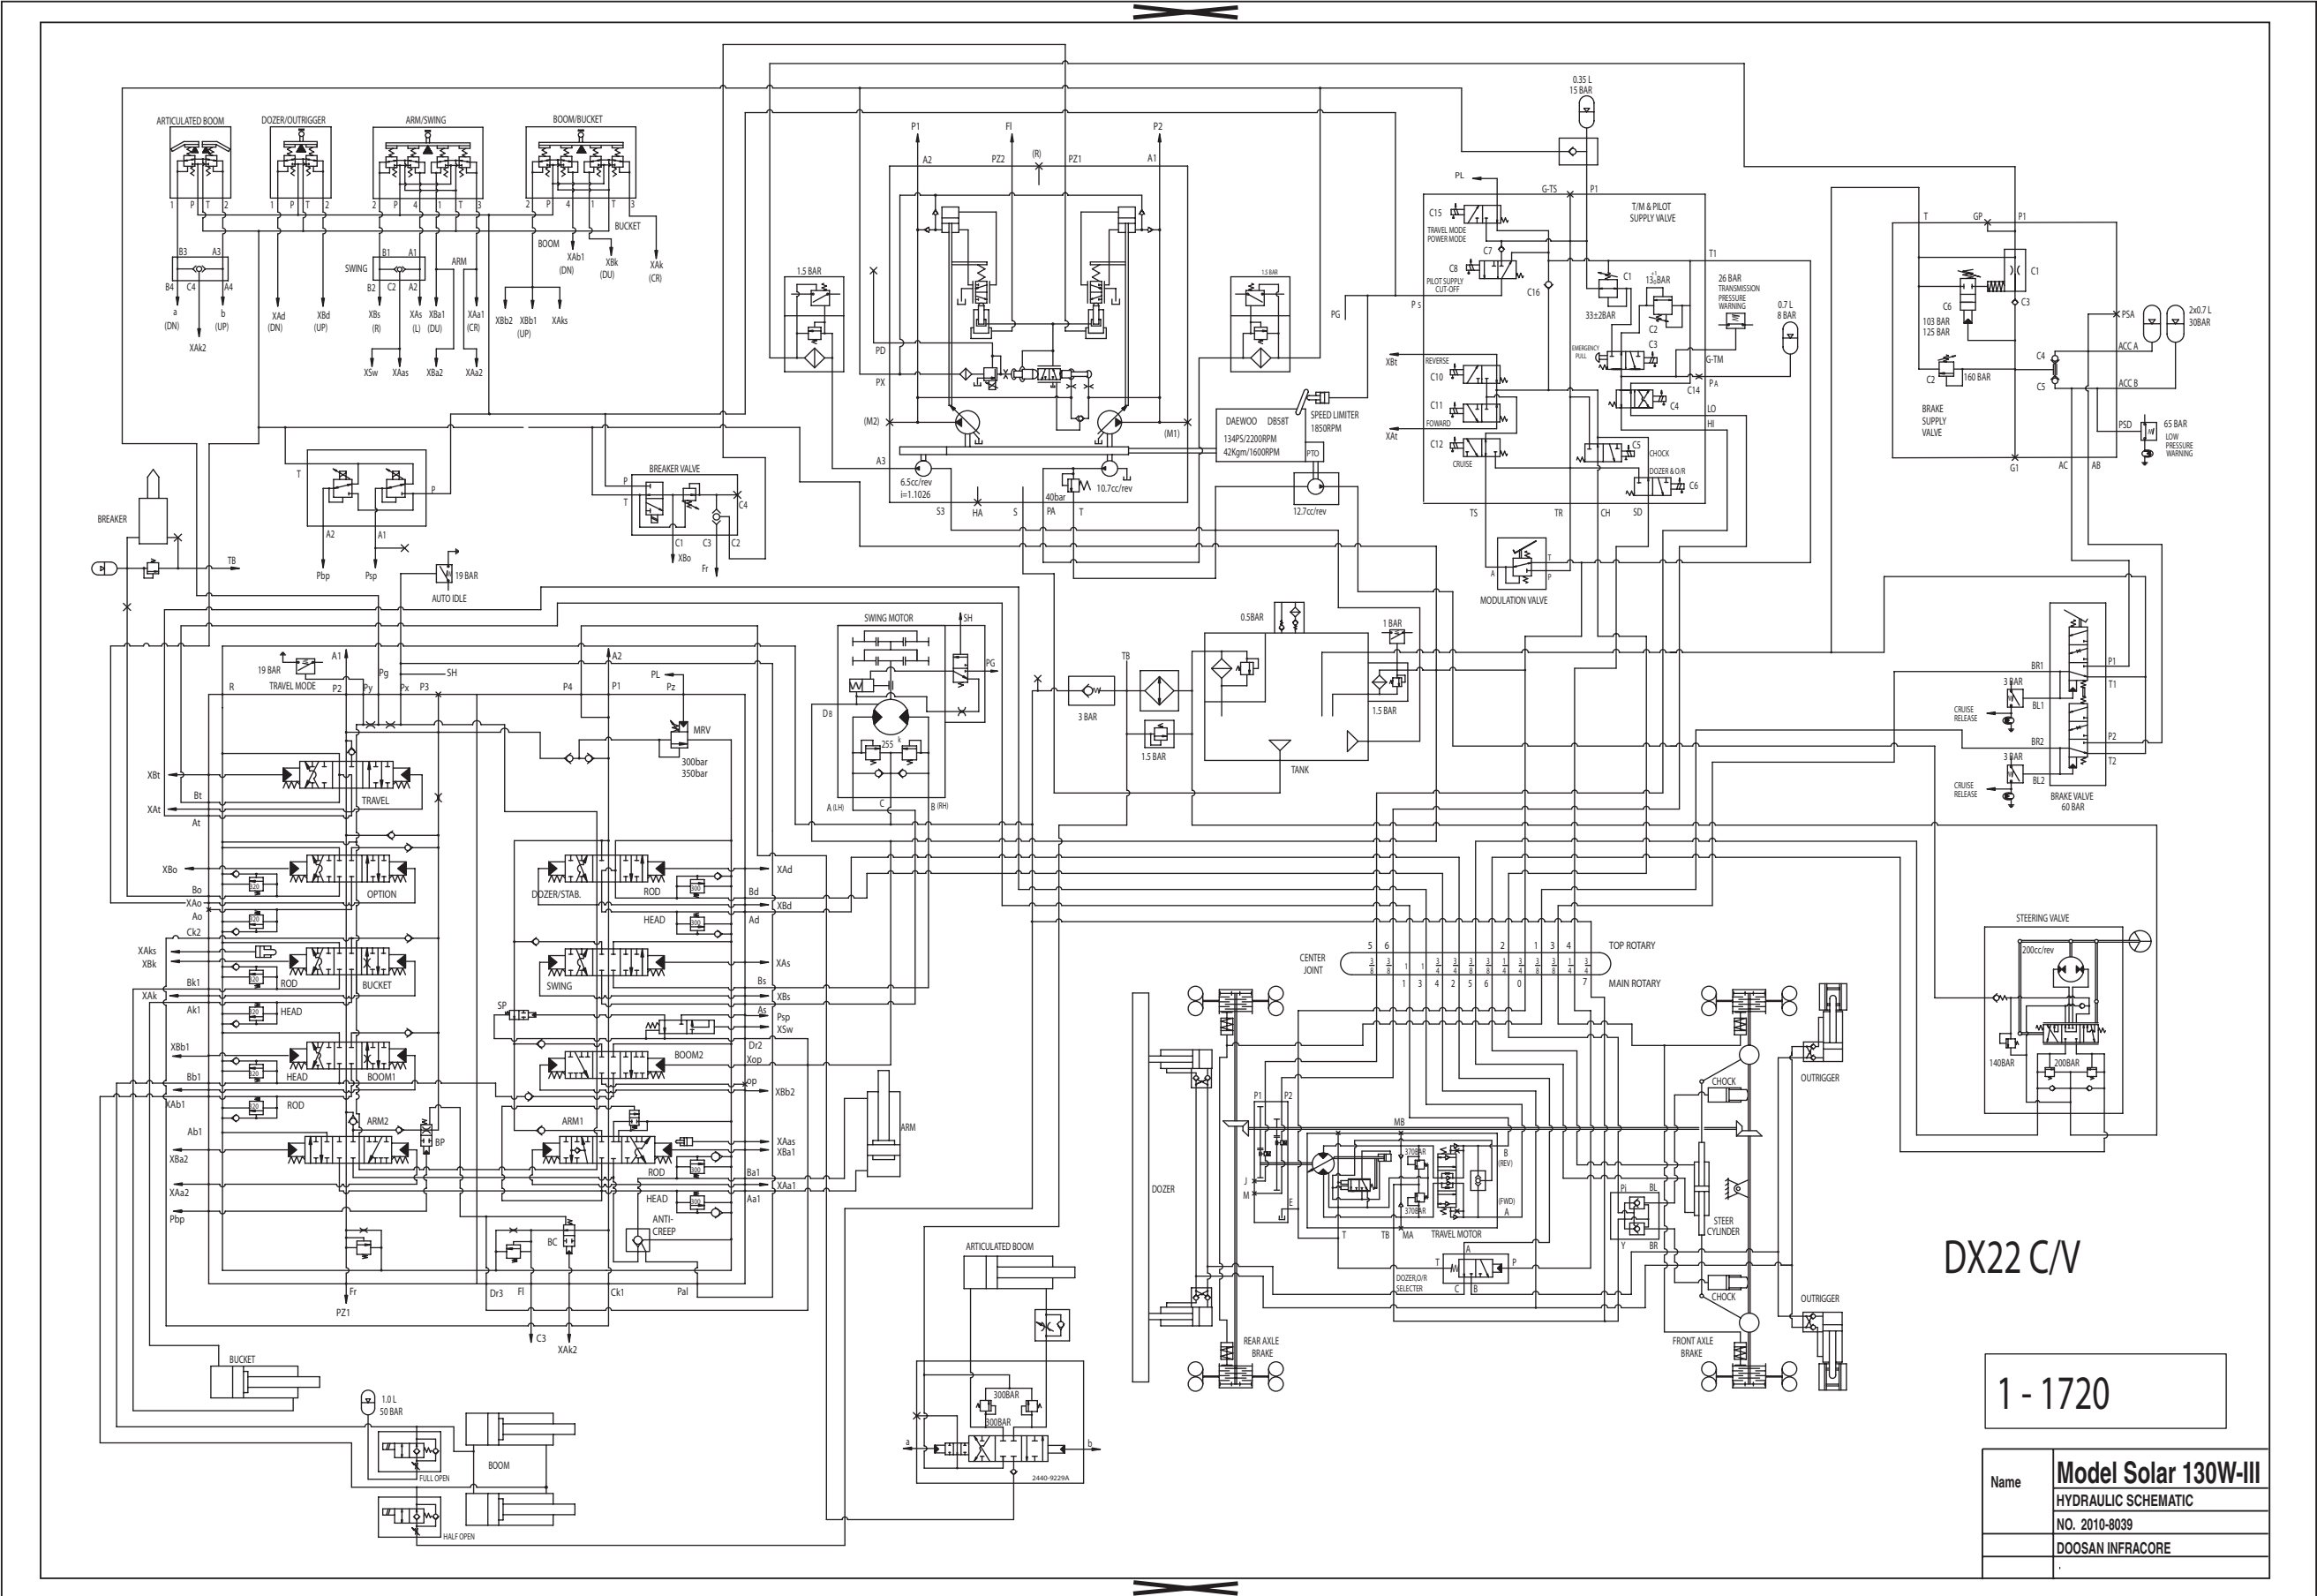


HAAE2060

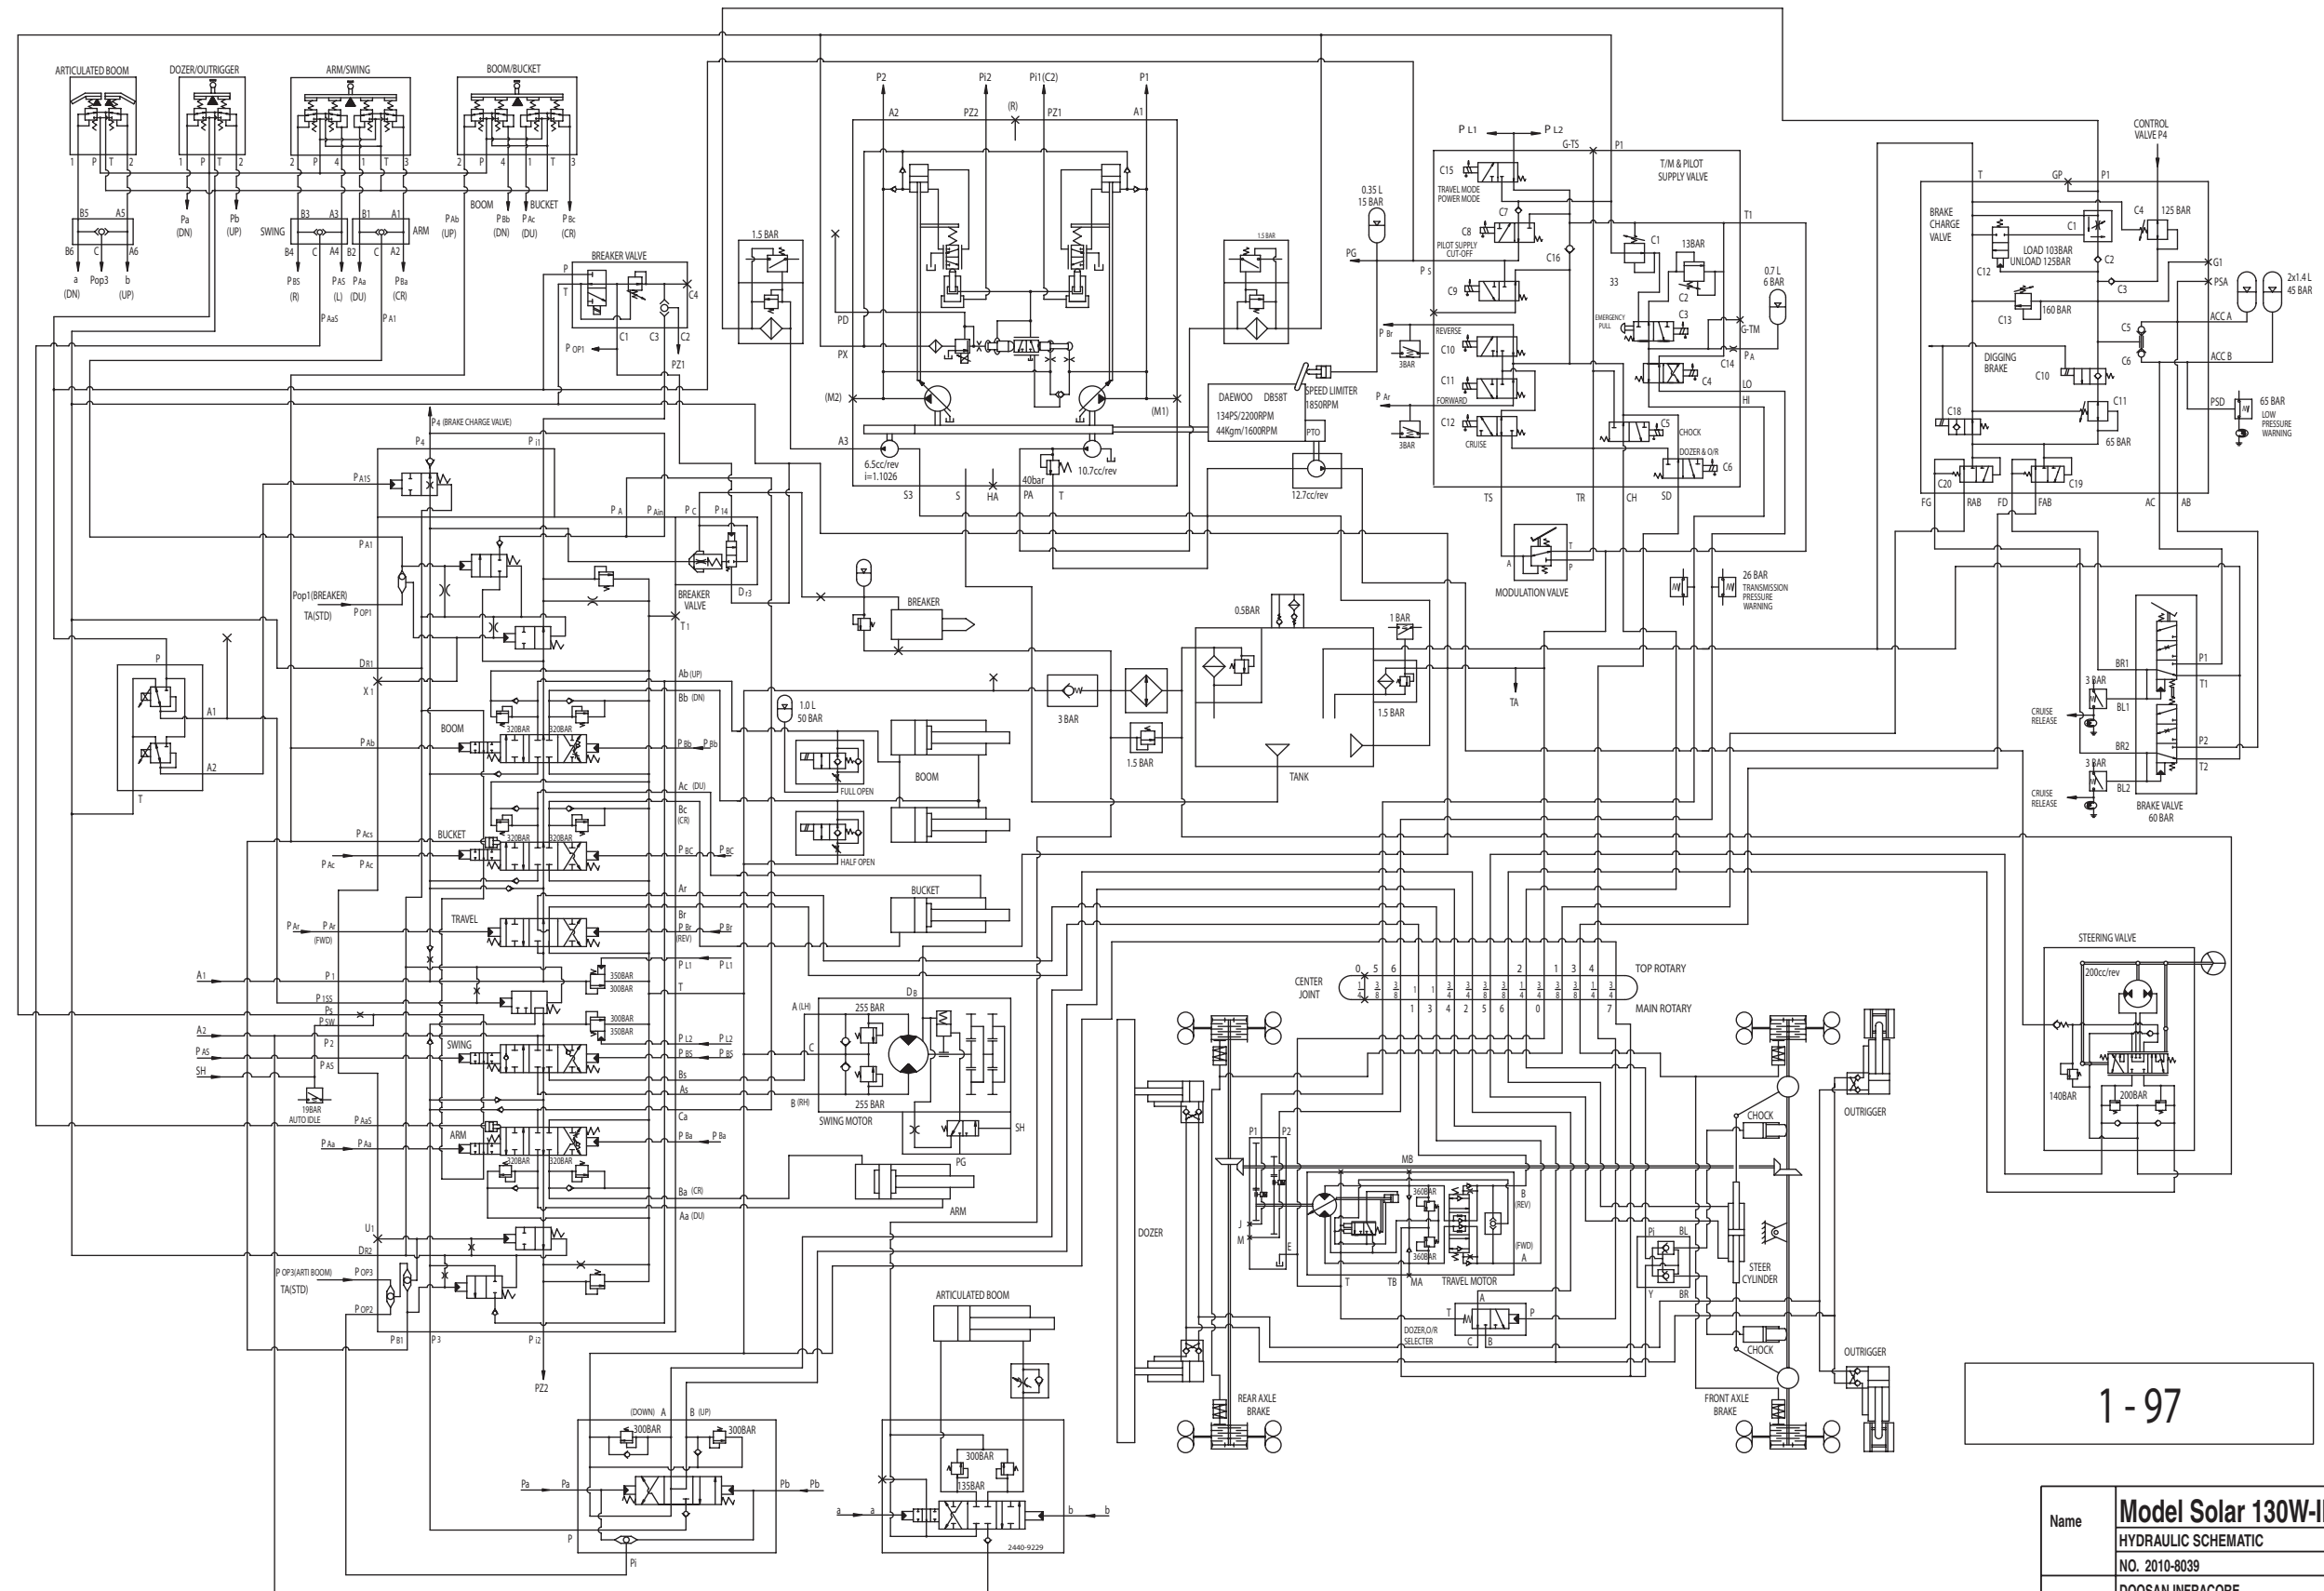

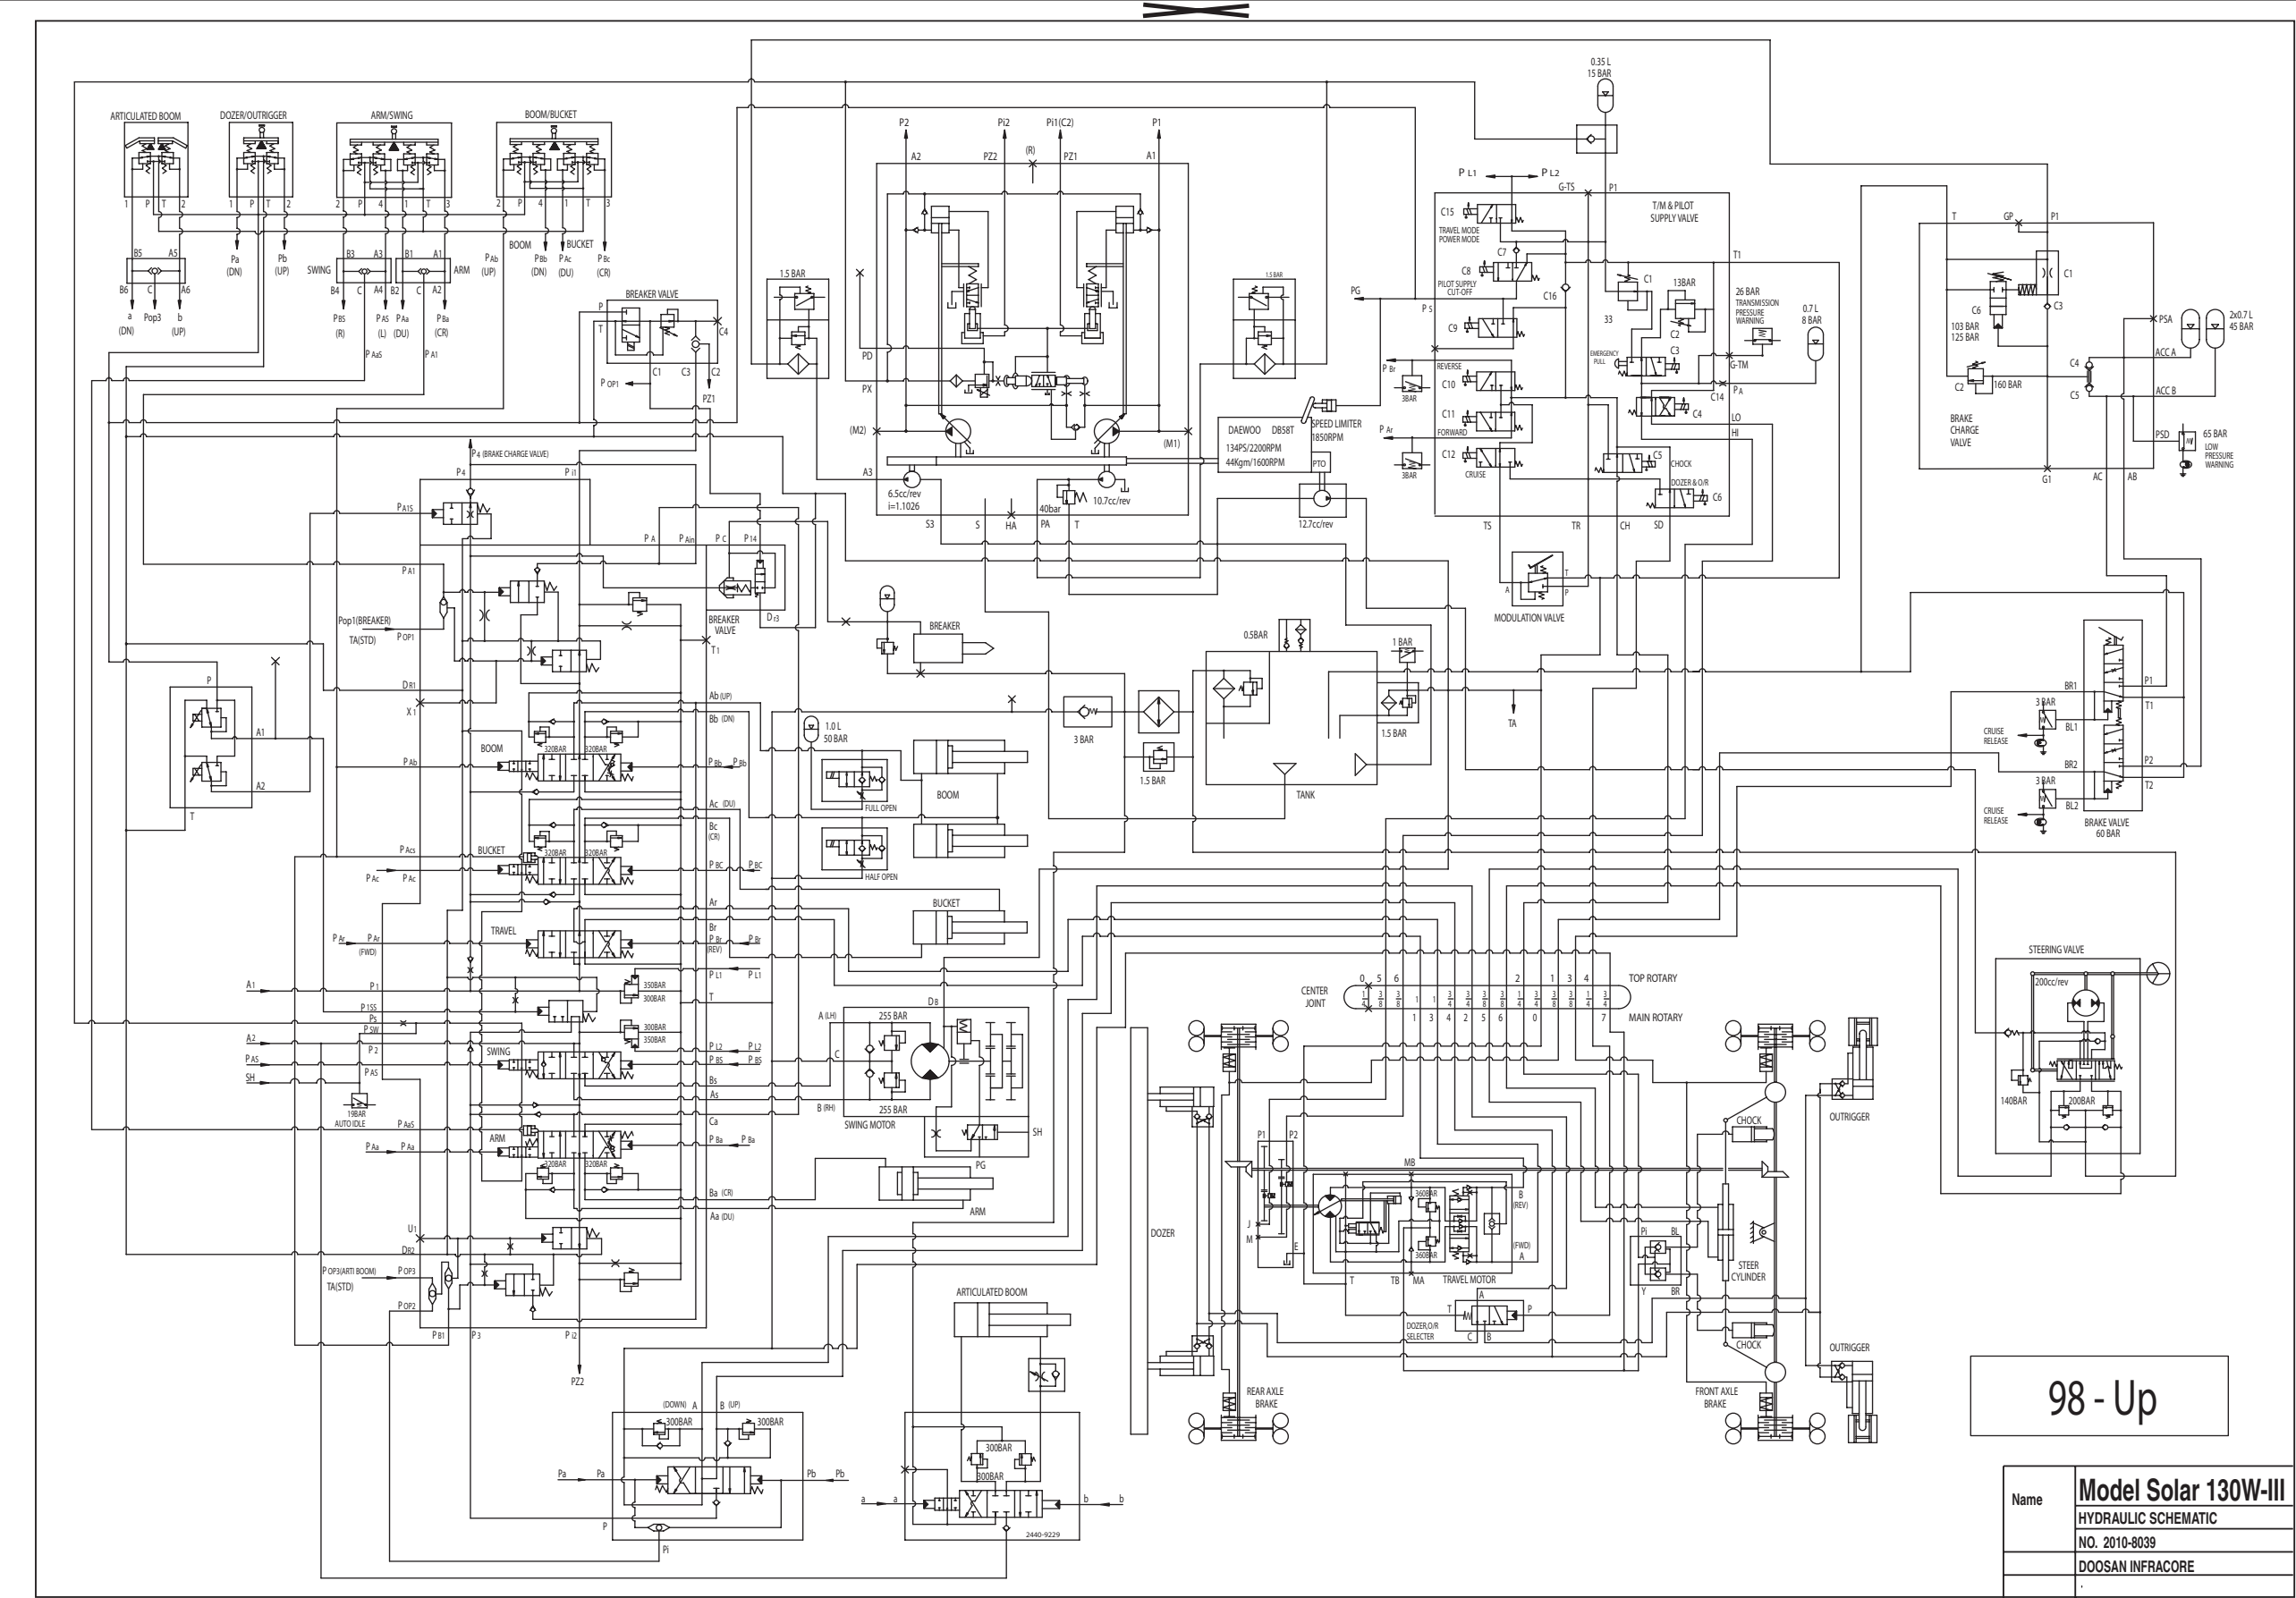

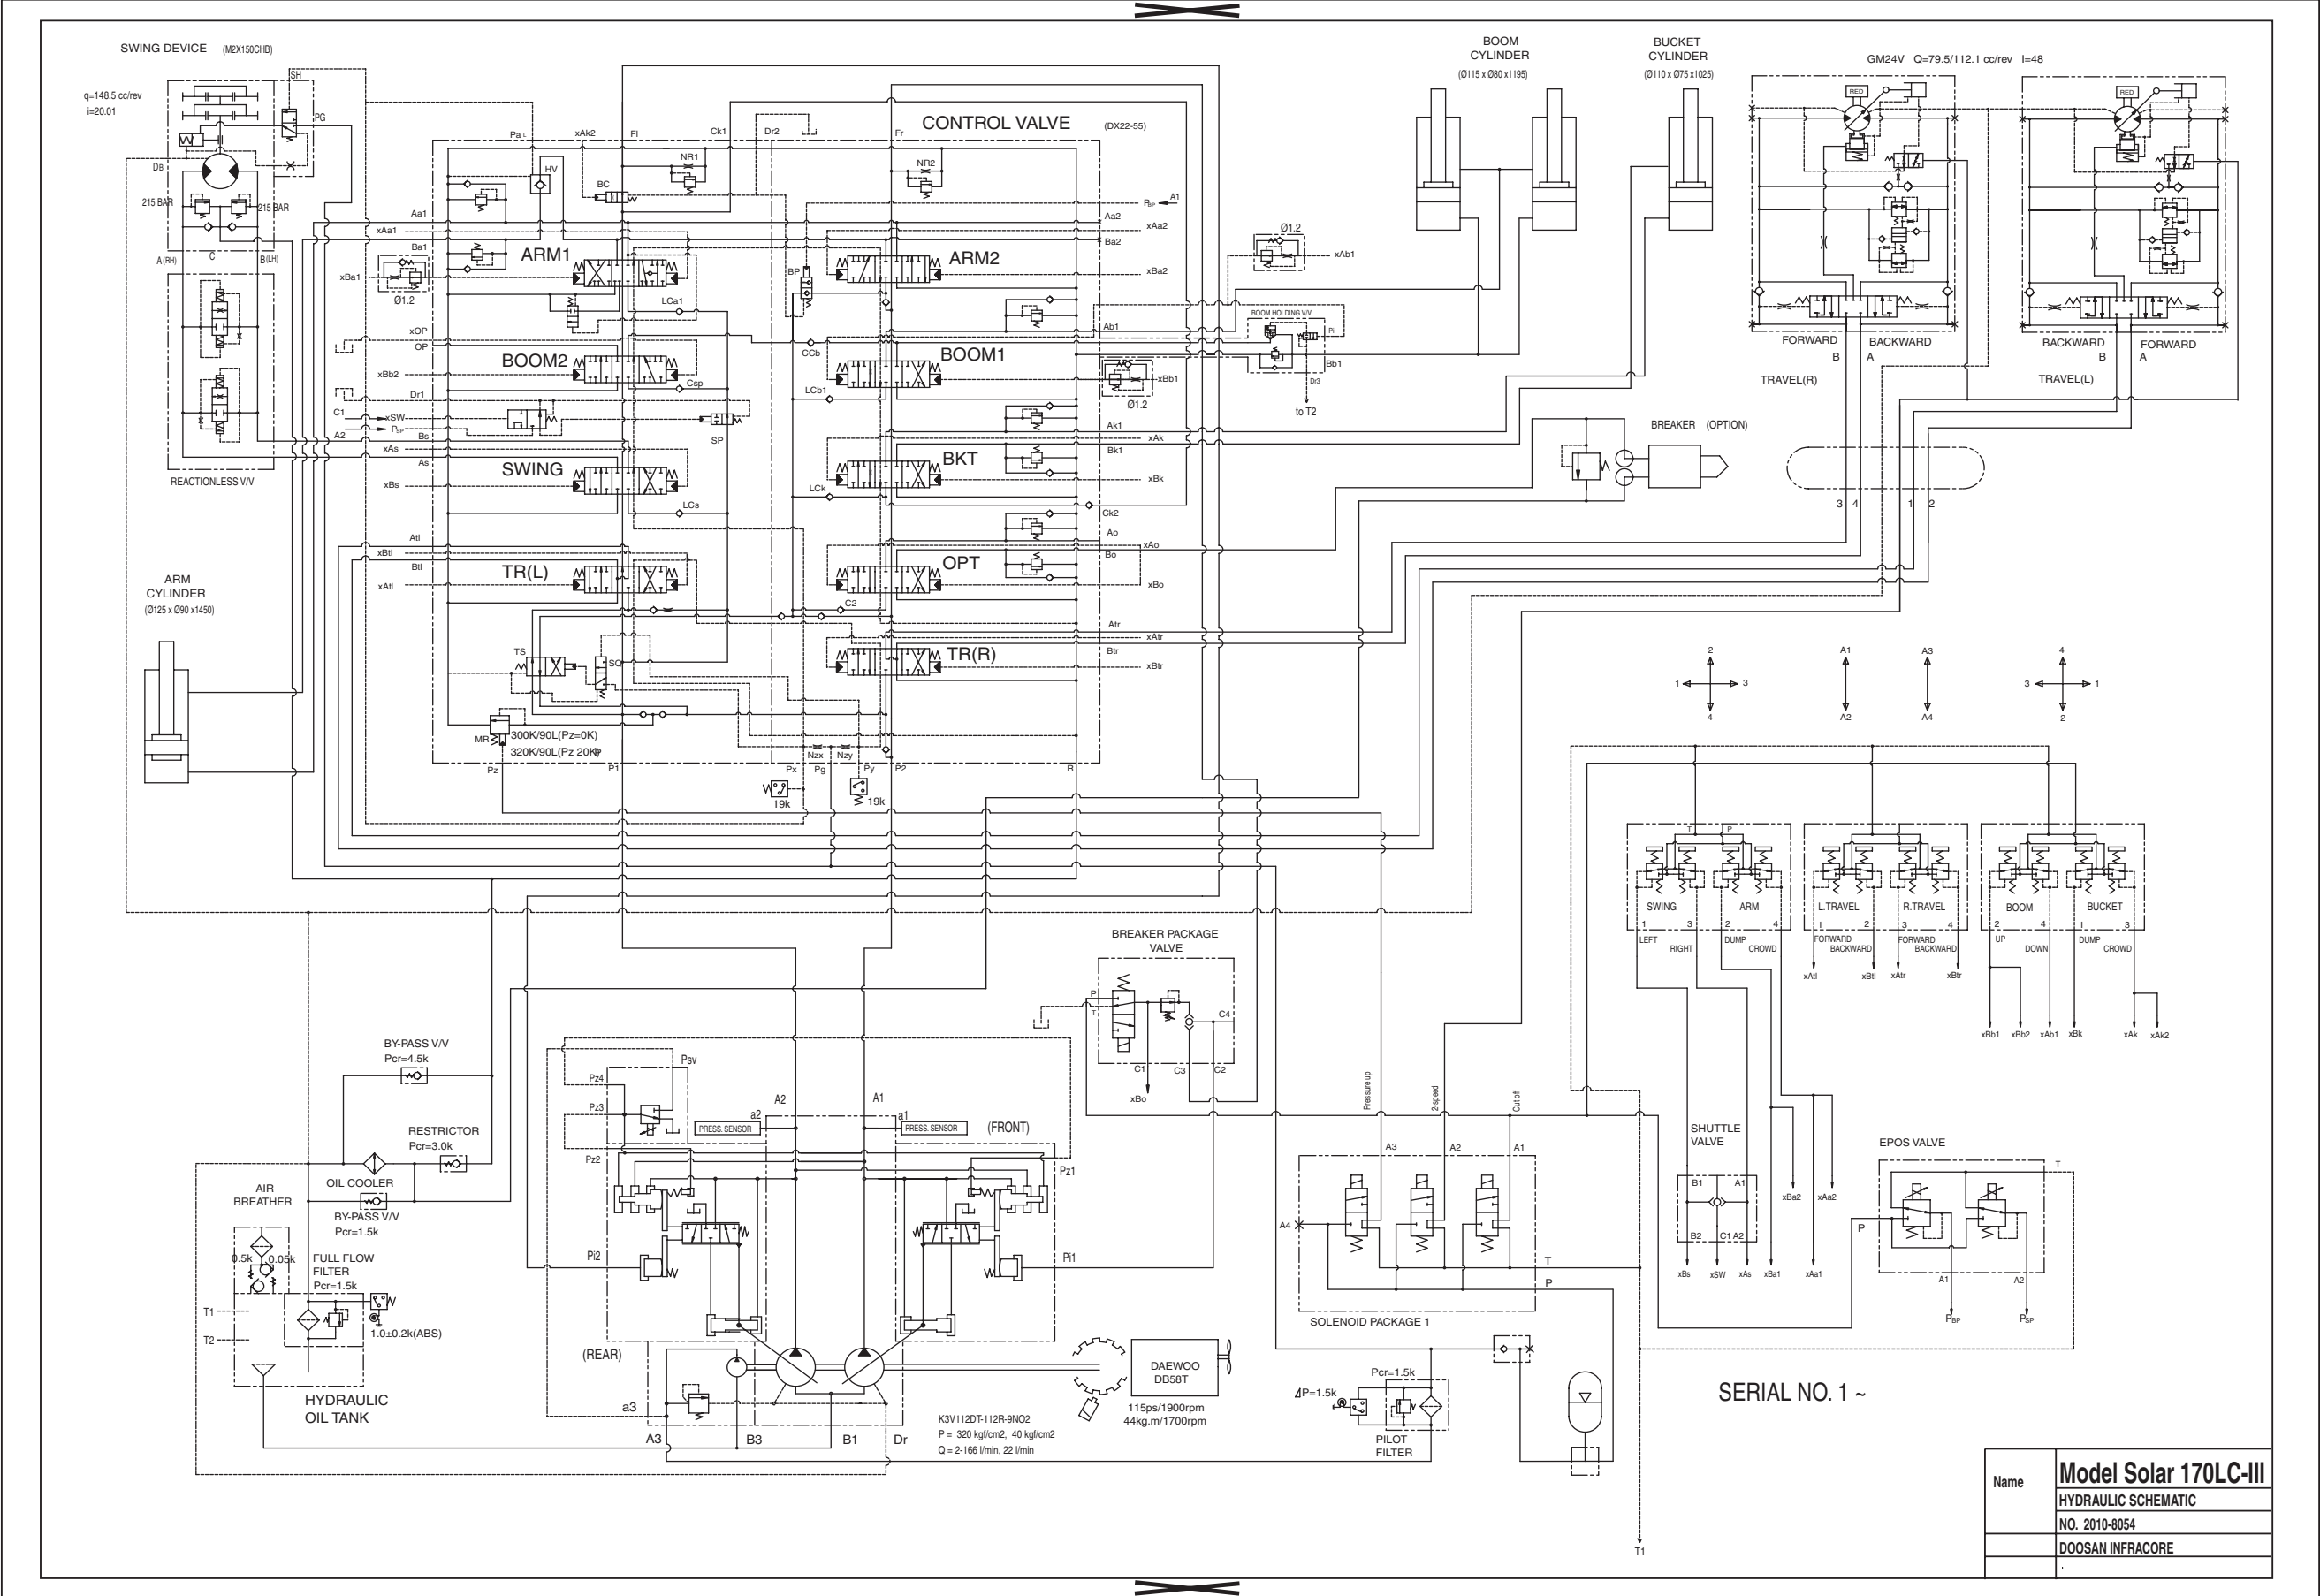

S170W- III (STANDARD)

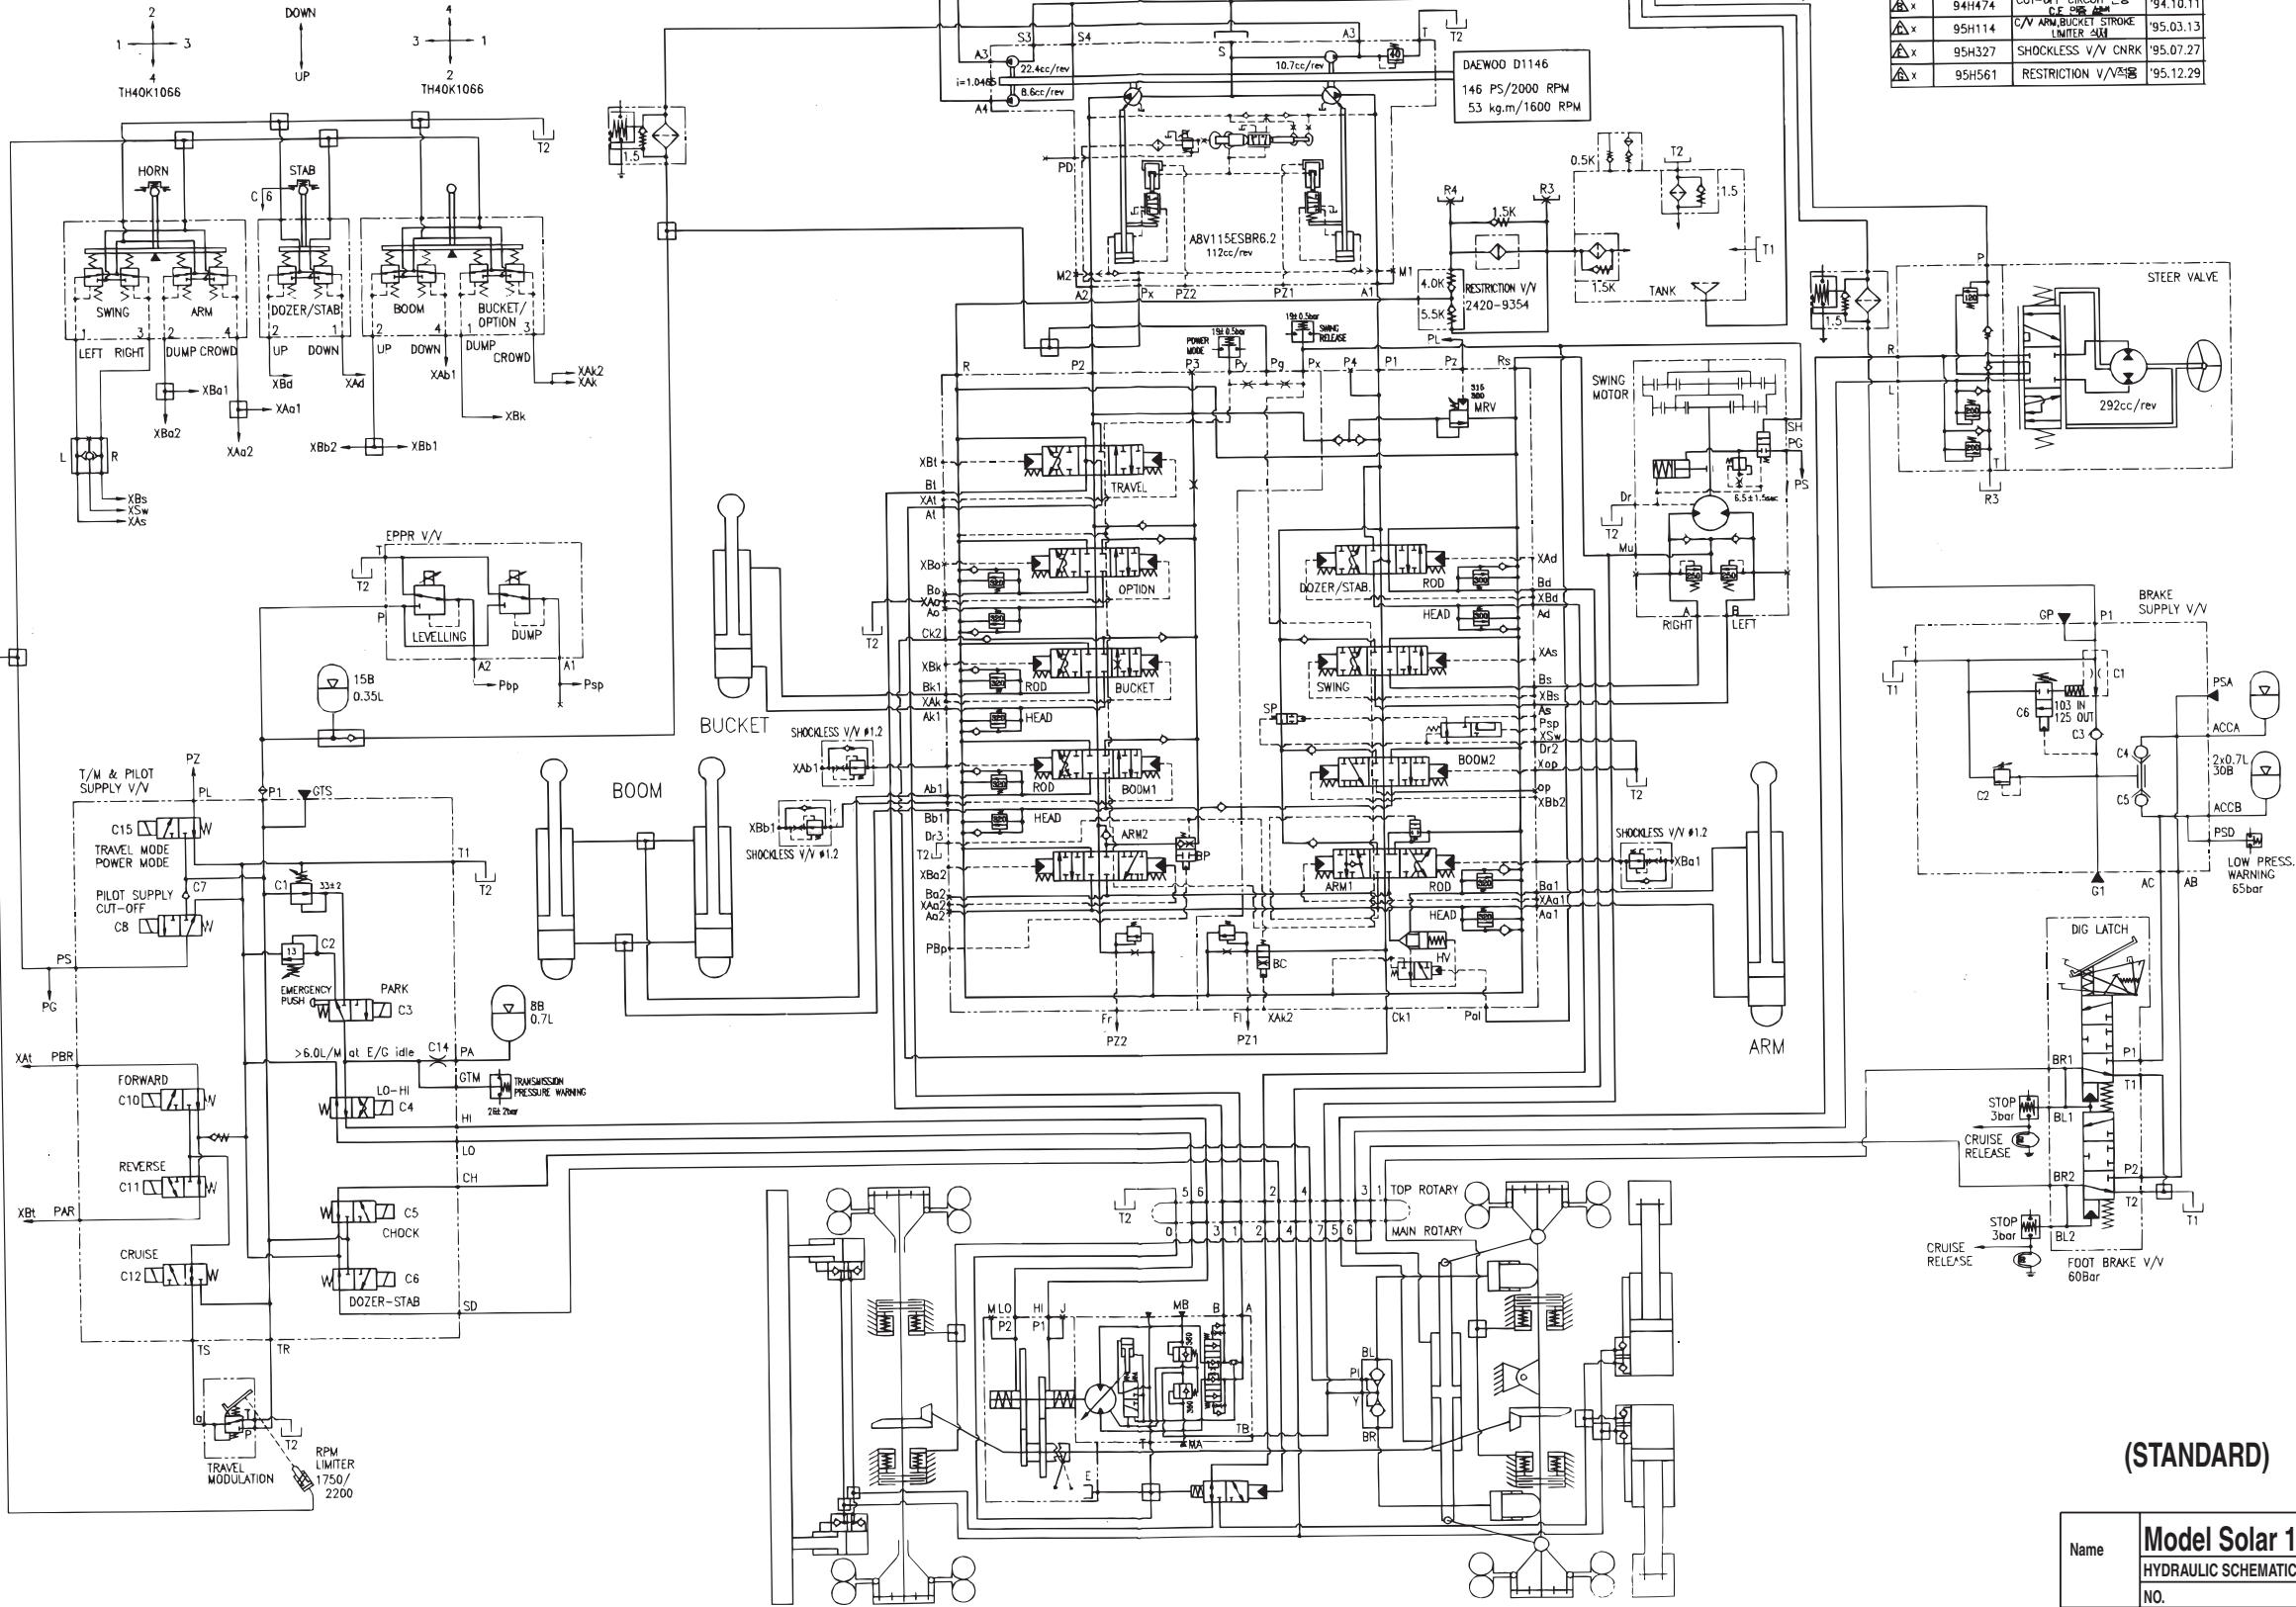


(STANDARD)

Name	Model Solar 170W-III
	HYDRAULIC SCHEMATIC
NO.	
	DOOSAN INFRACORE


HAAE2400

S170W-Ⅲ (STANDARD)

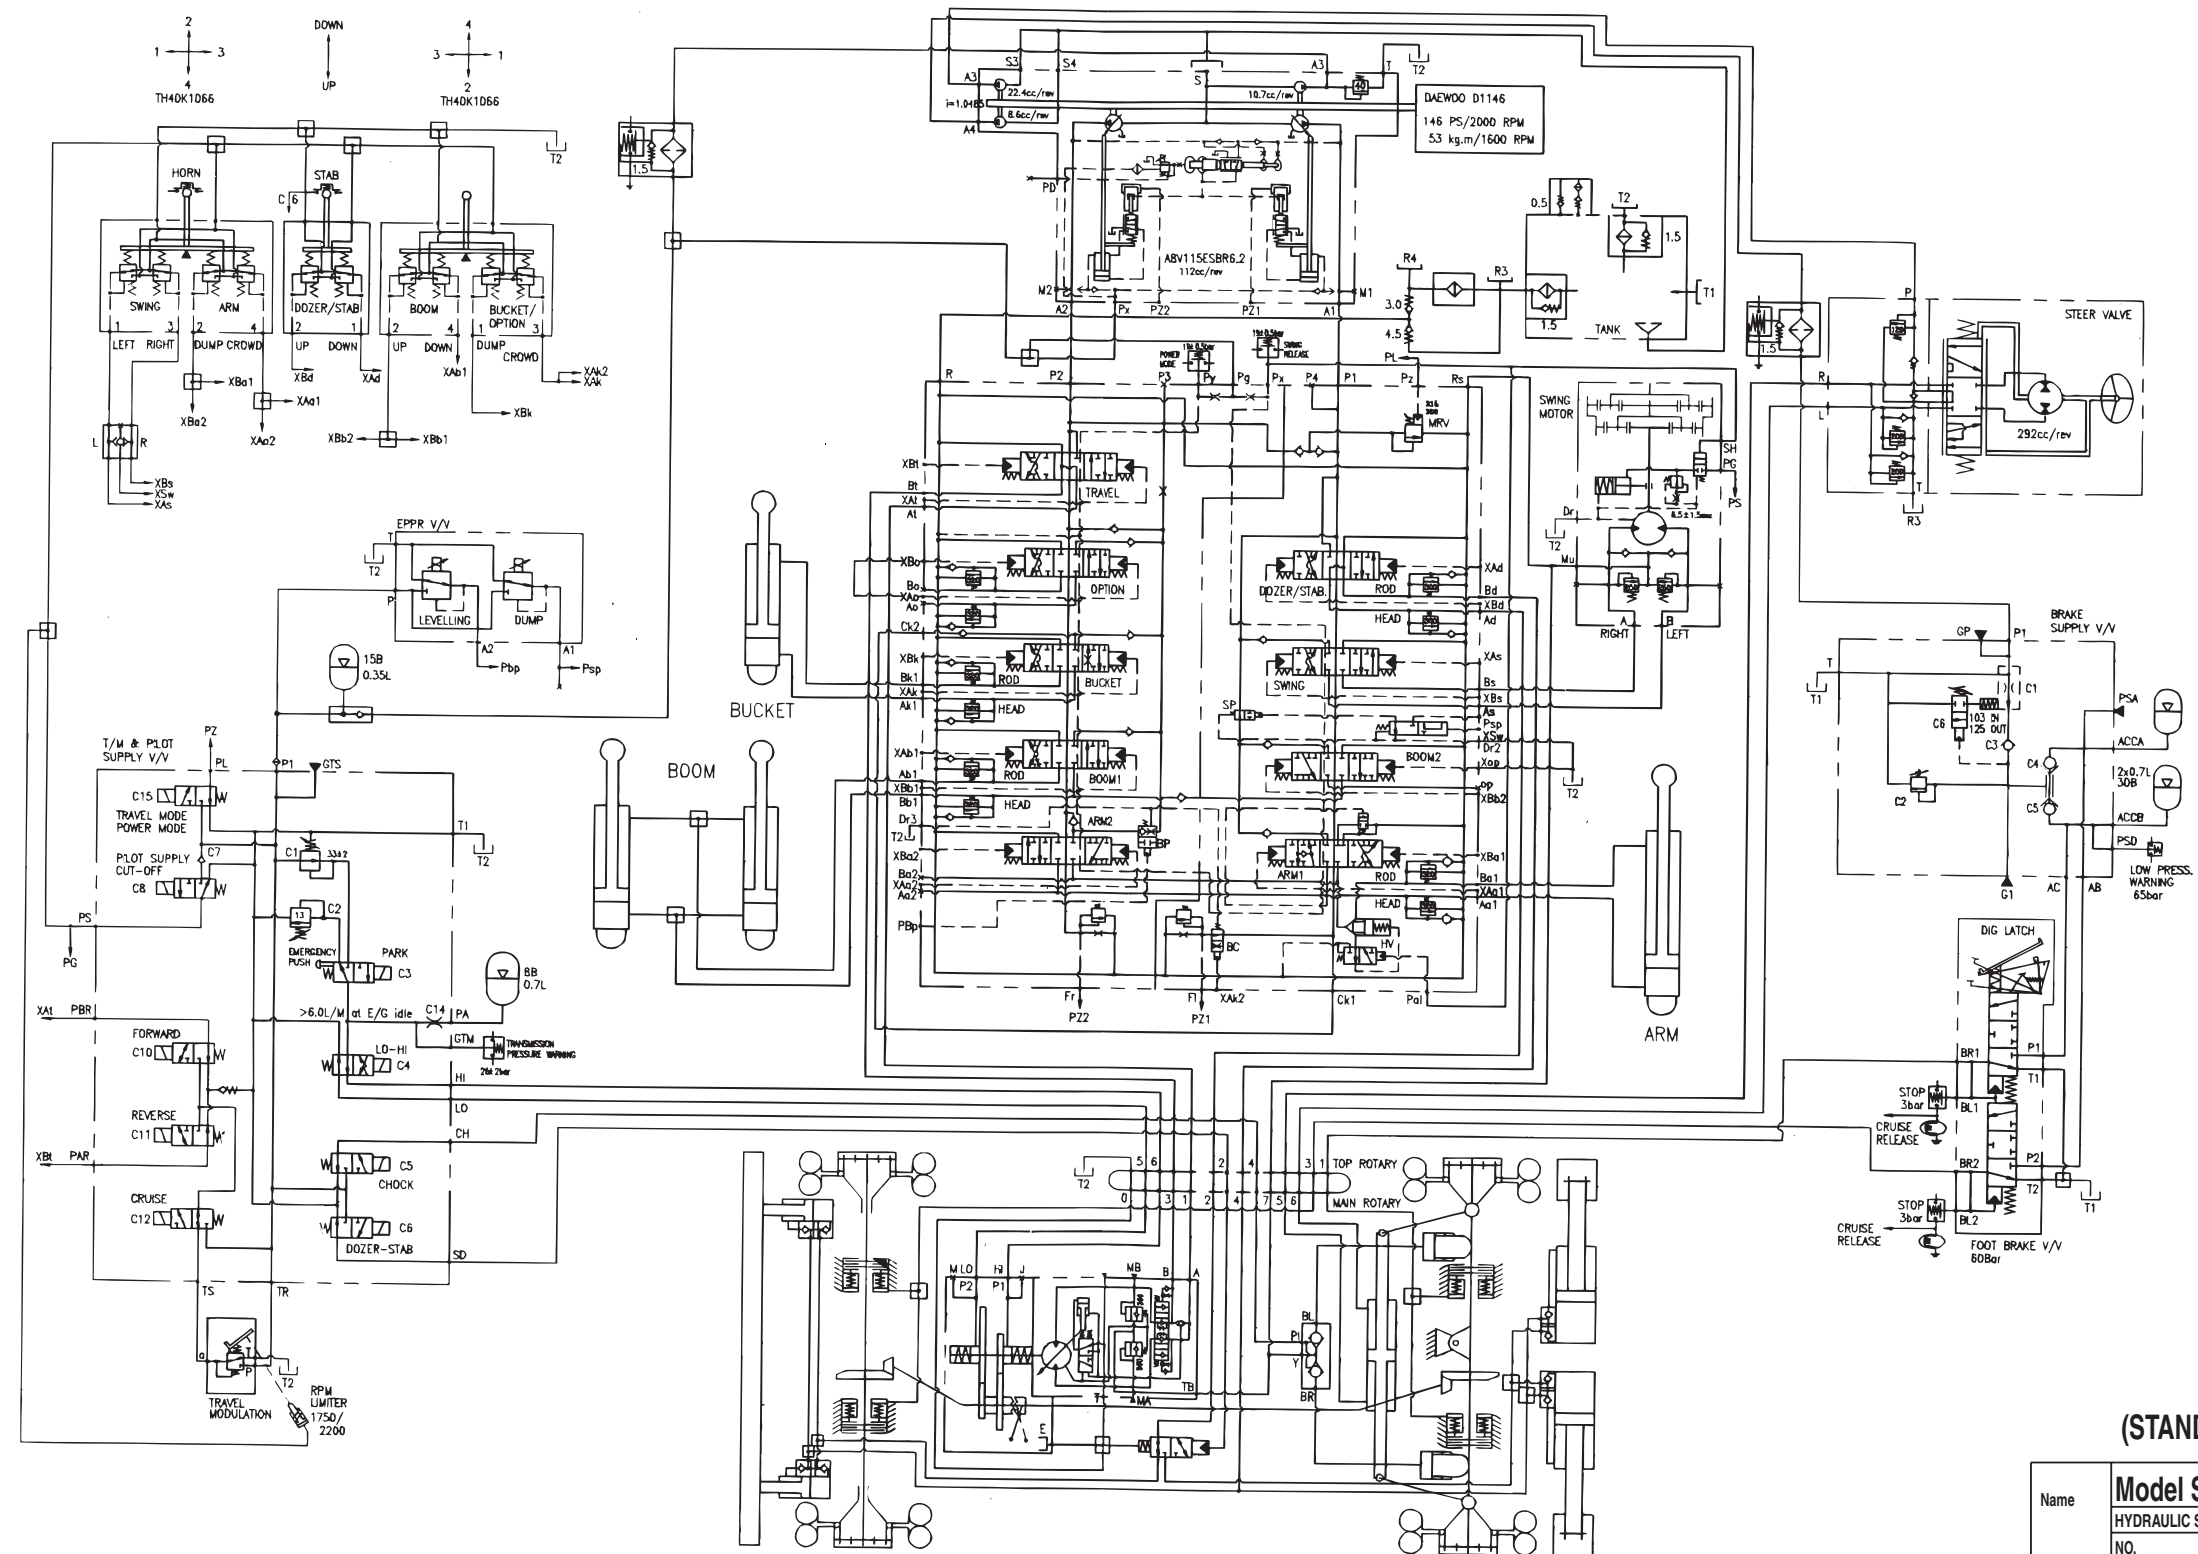


(STANDARD)

Name	Model Solar 170W-III
	HYDRAULIC SCHEMATIC
	NO.
	DOOSAN INFRACORE

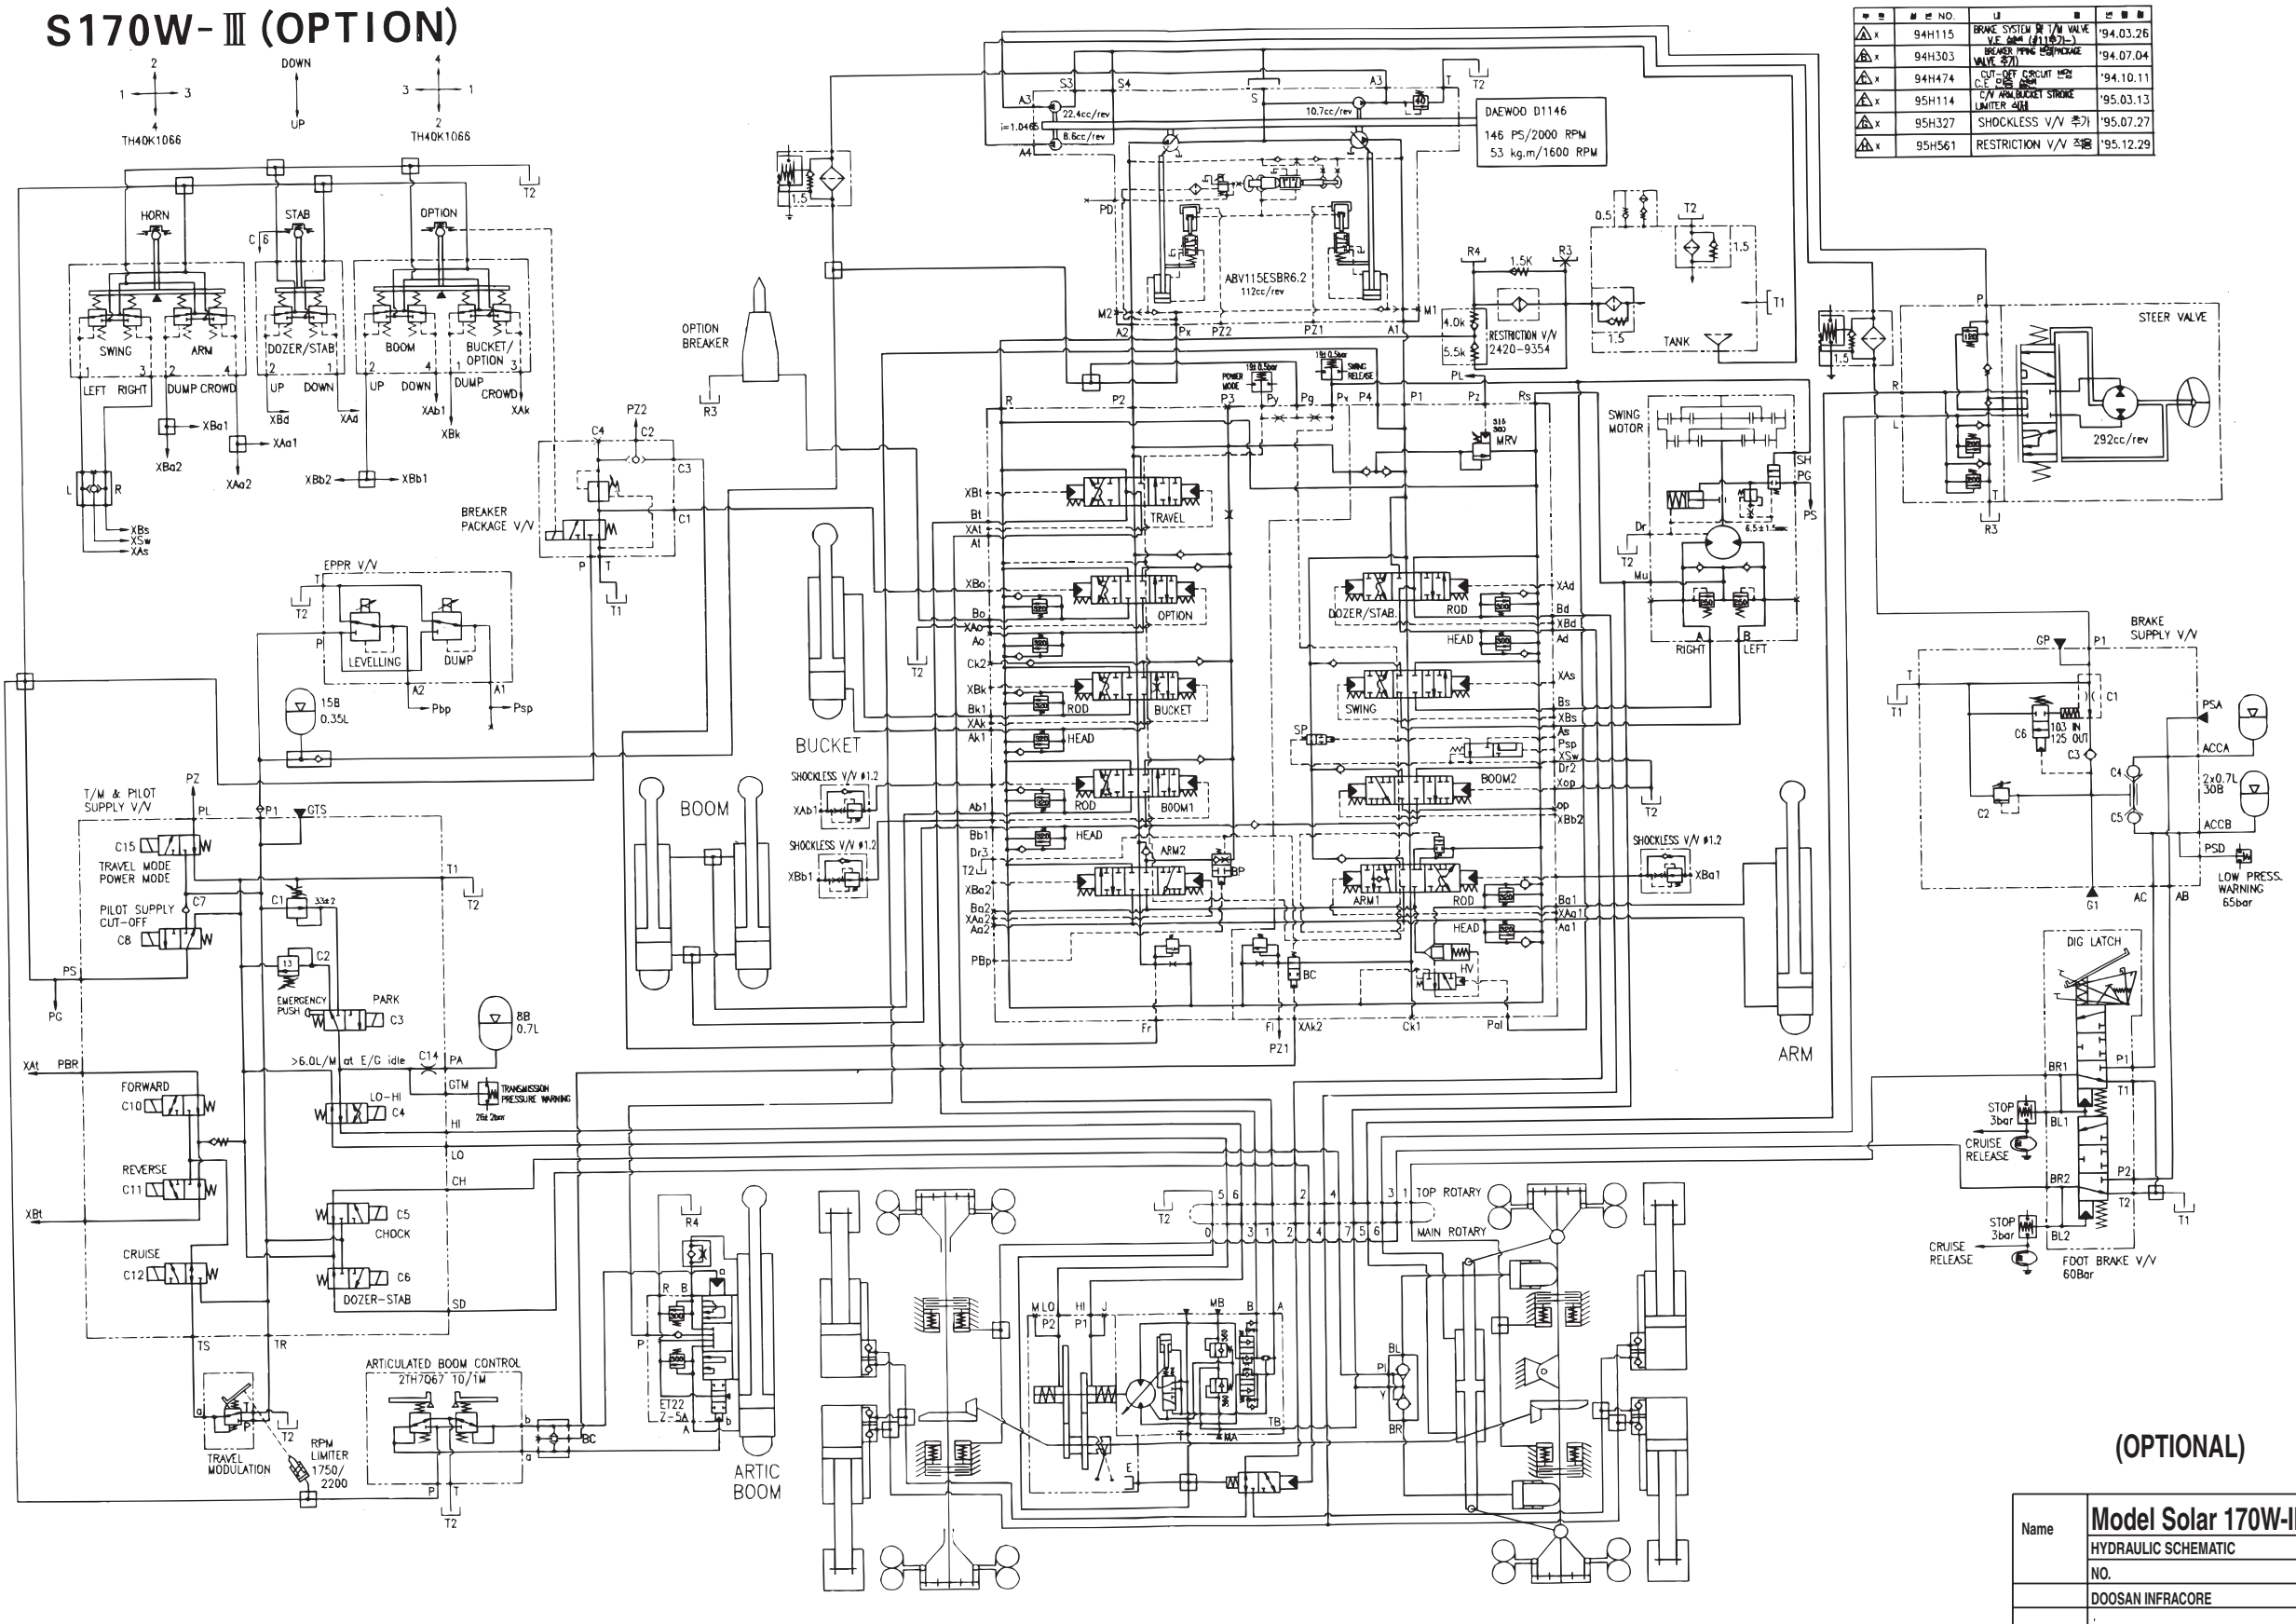




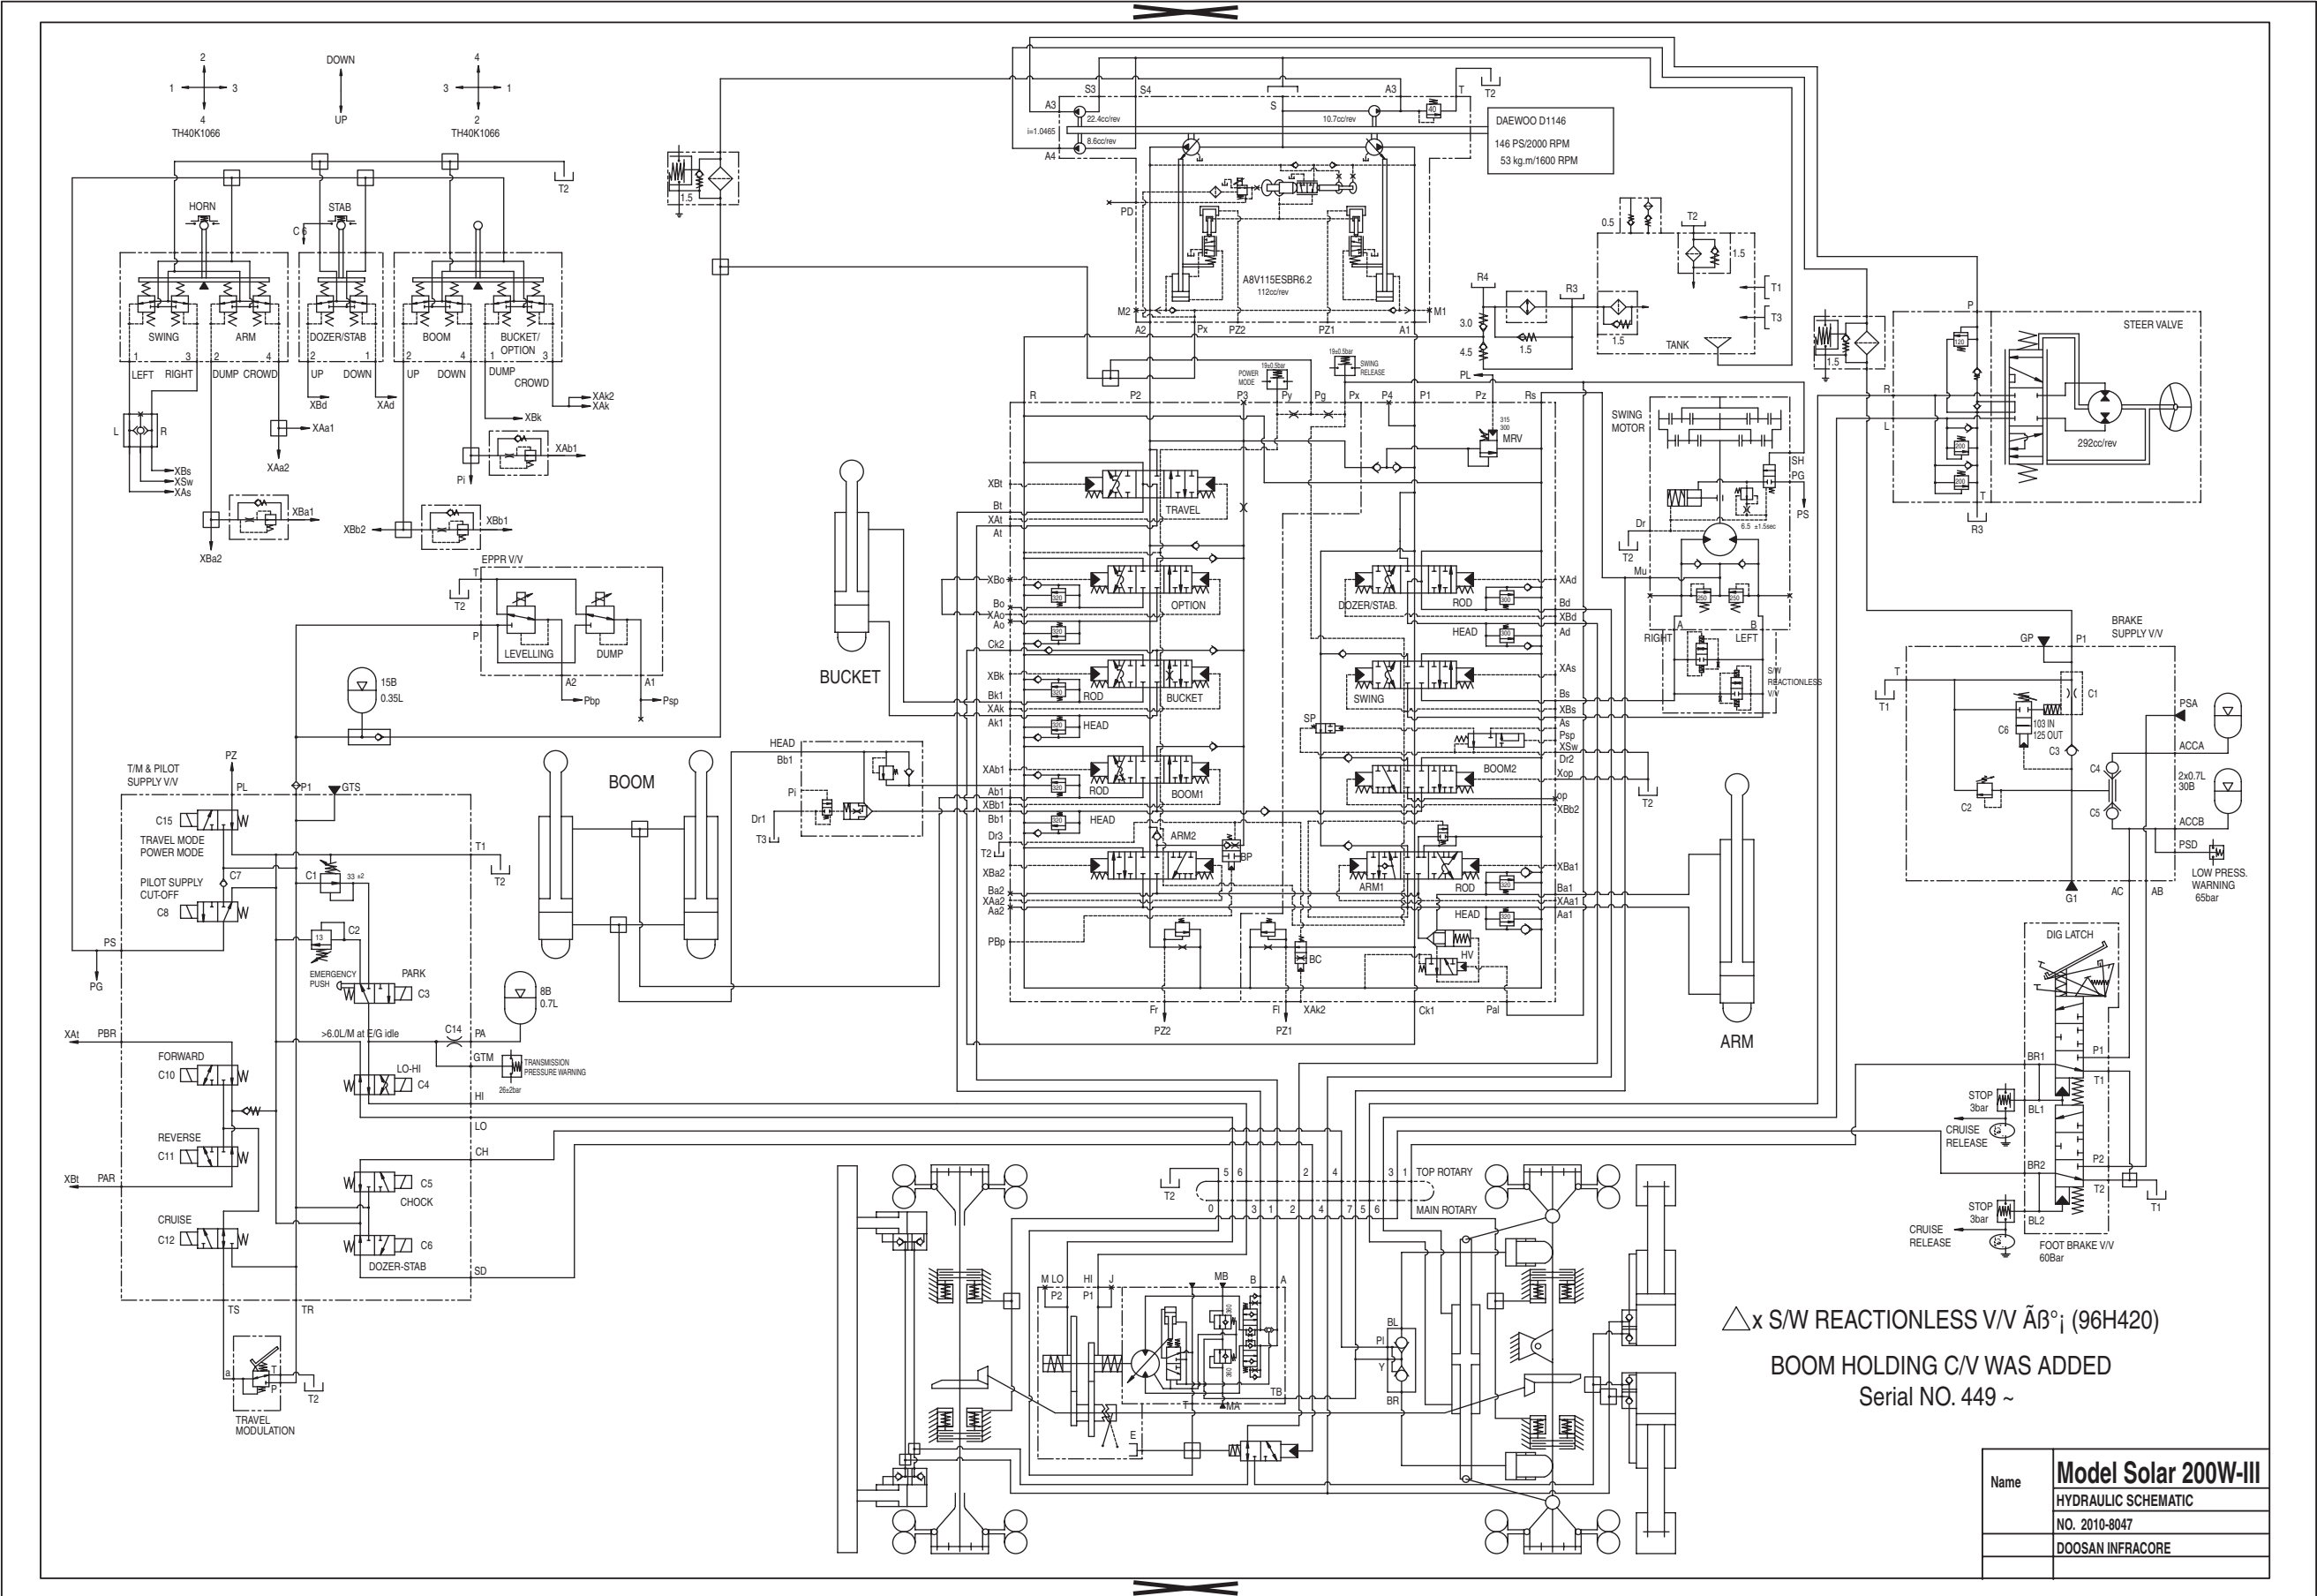

HAAE0970

SOLAR 200W-III (WITH ARTICULATED BOOM) (S/N 0001 THRU 0448)


<https://truckmanualshub.com/>

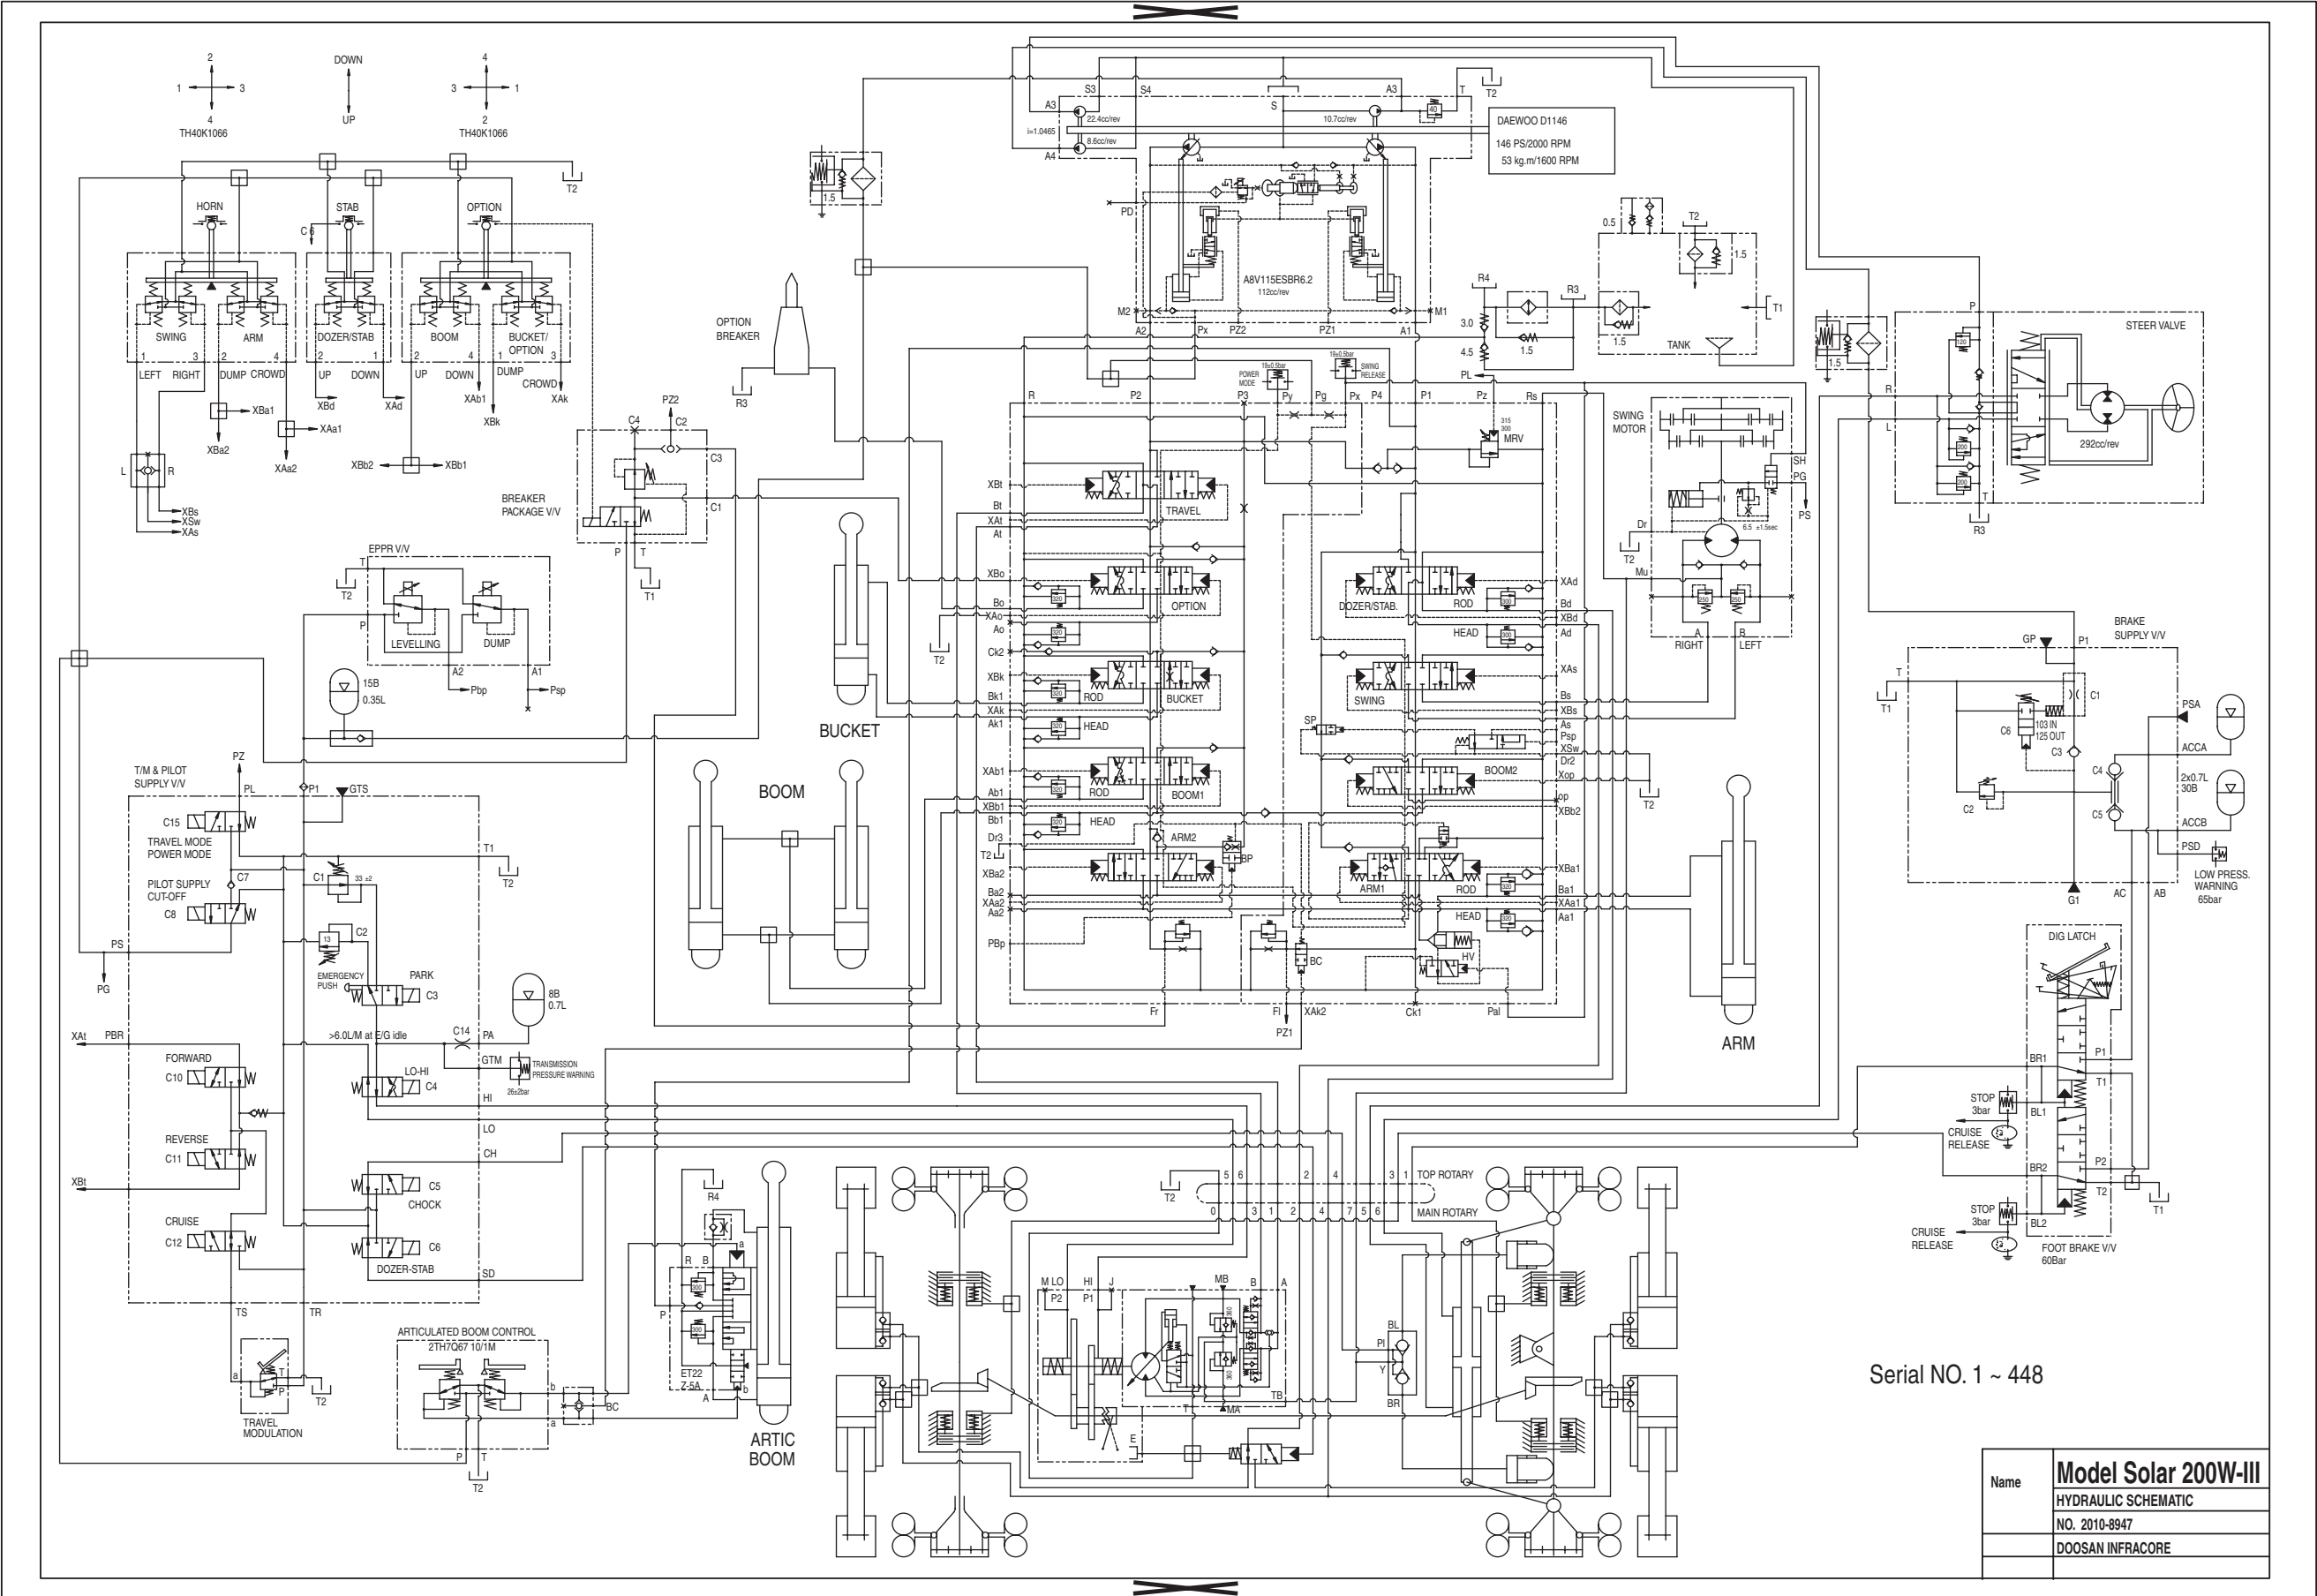



Serial NO. 1 ~ 448

Name	Model Solar 200W-III
	HYDRAULIC SCHEMATIC
	NO. 2010-8947
	DOOSAN INFRACORE


HAAE1000

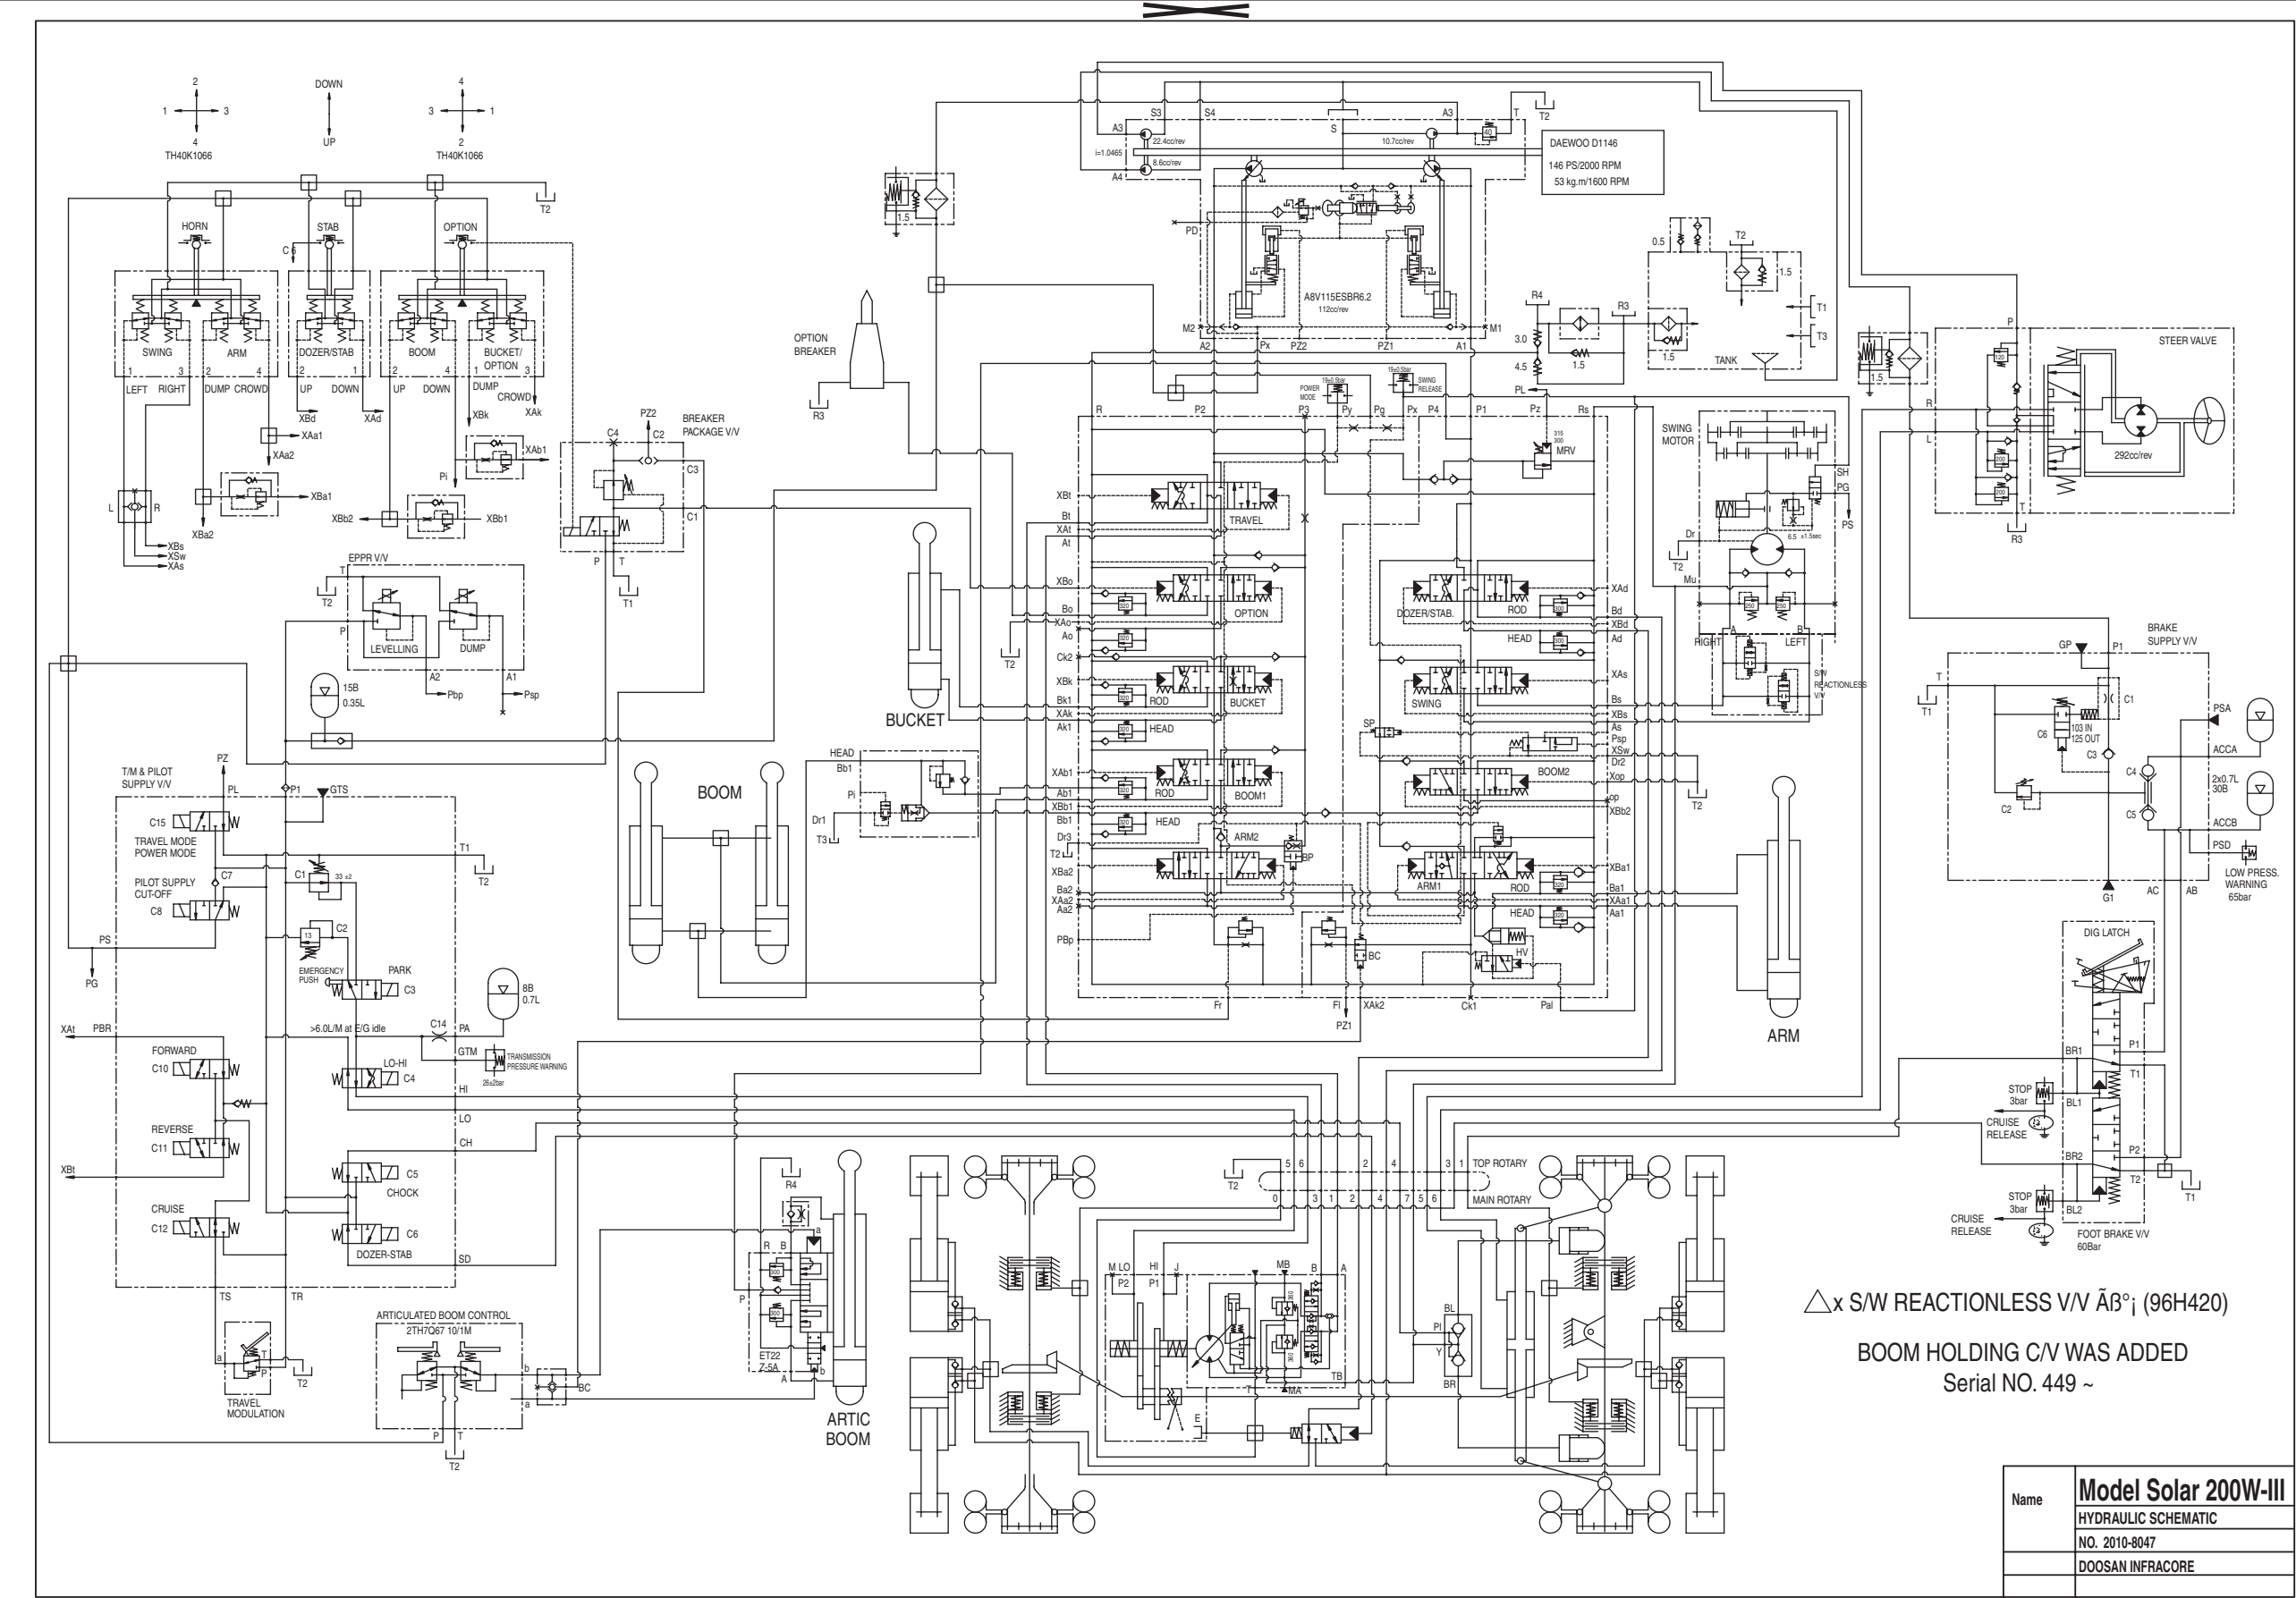


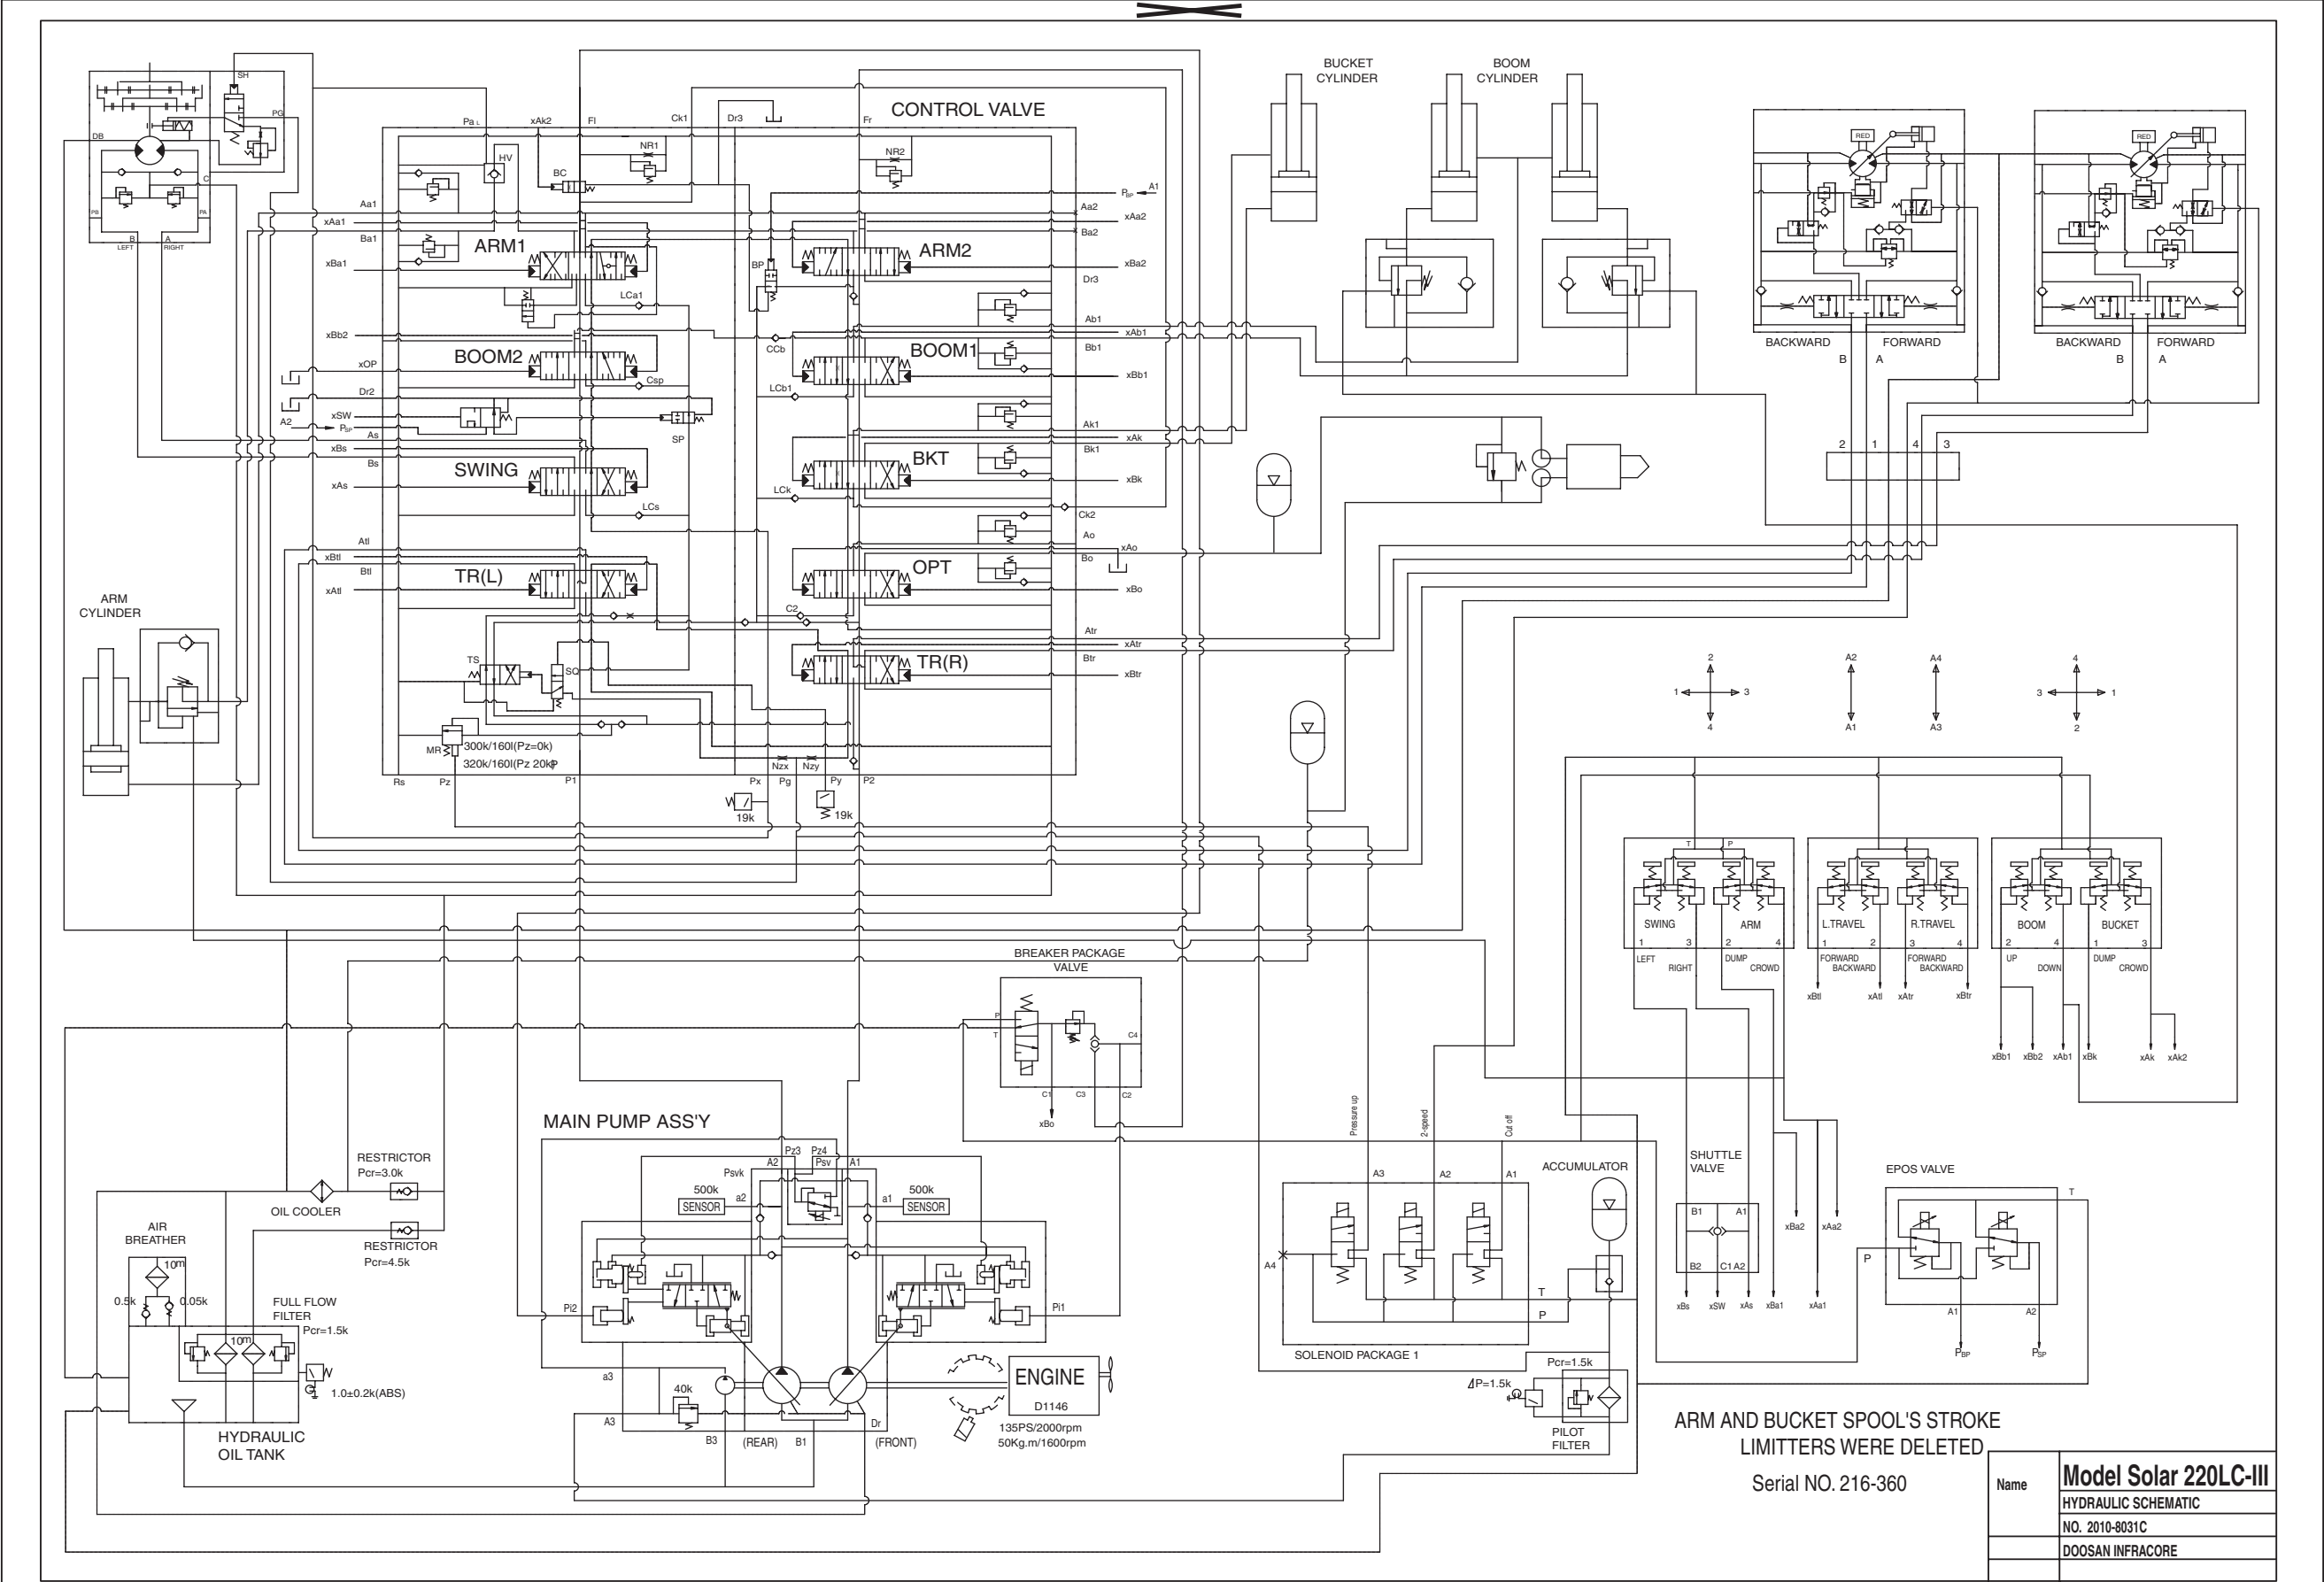

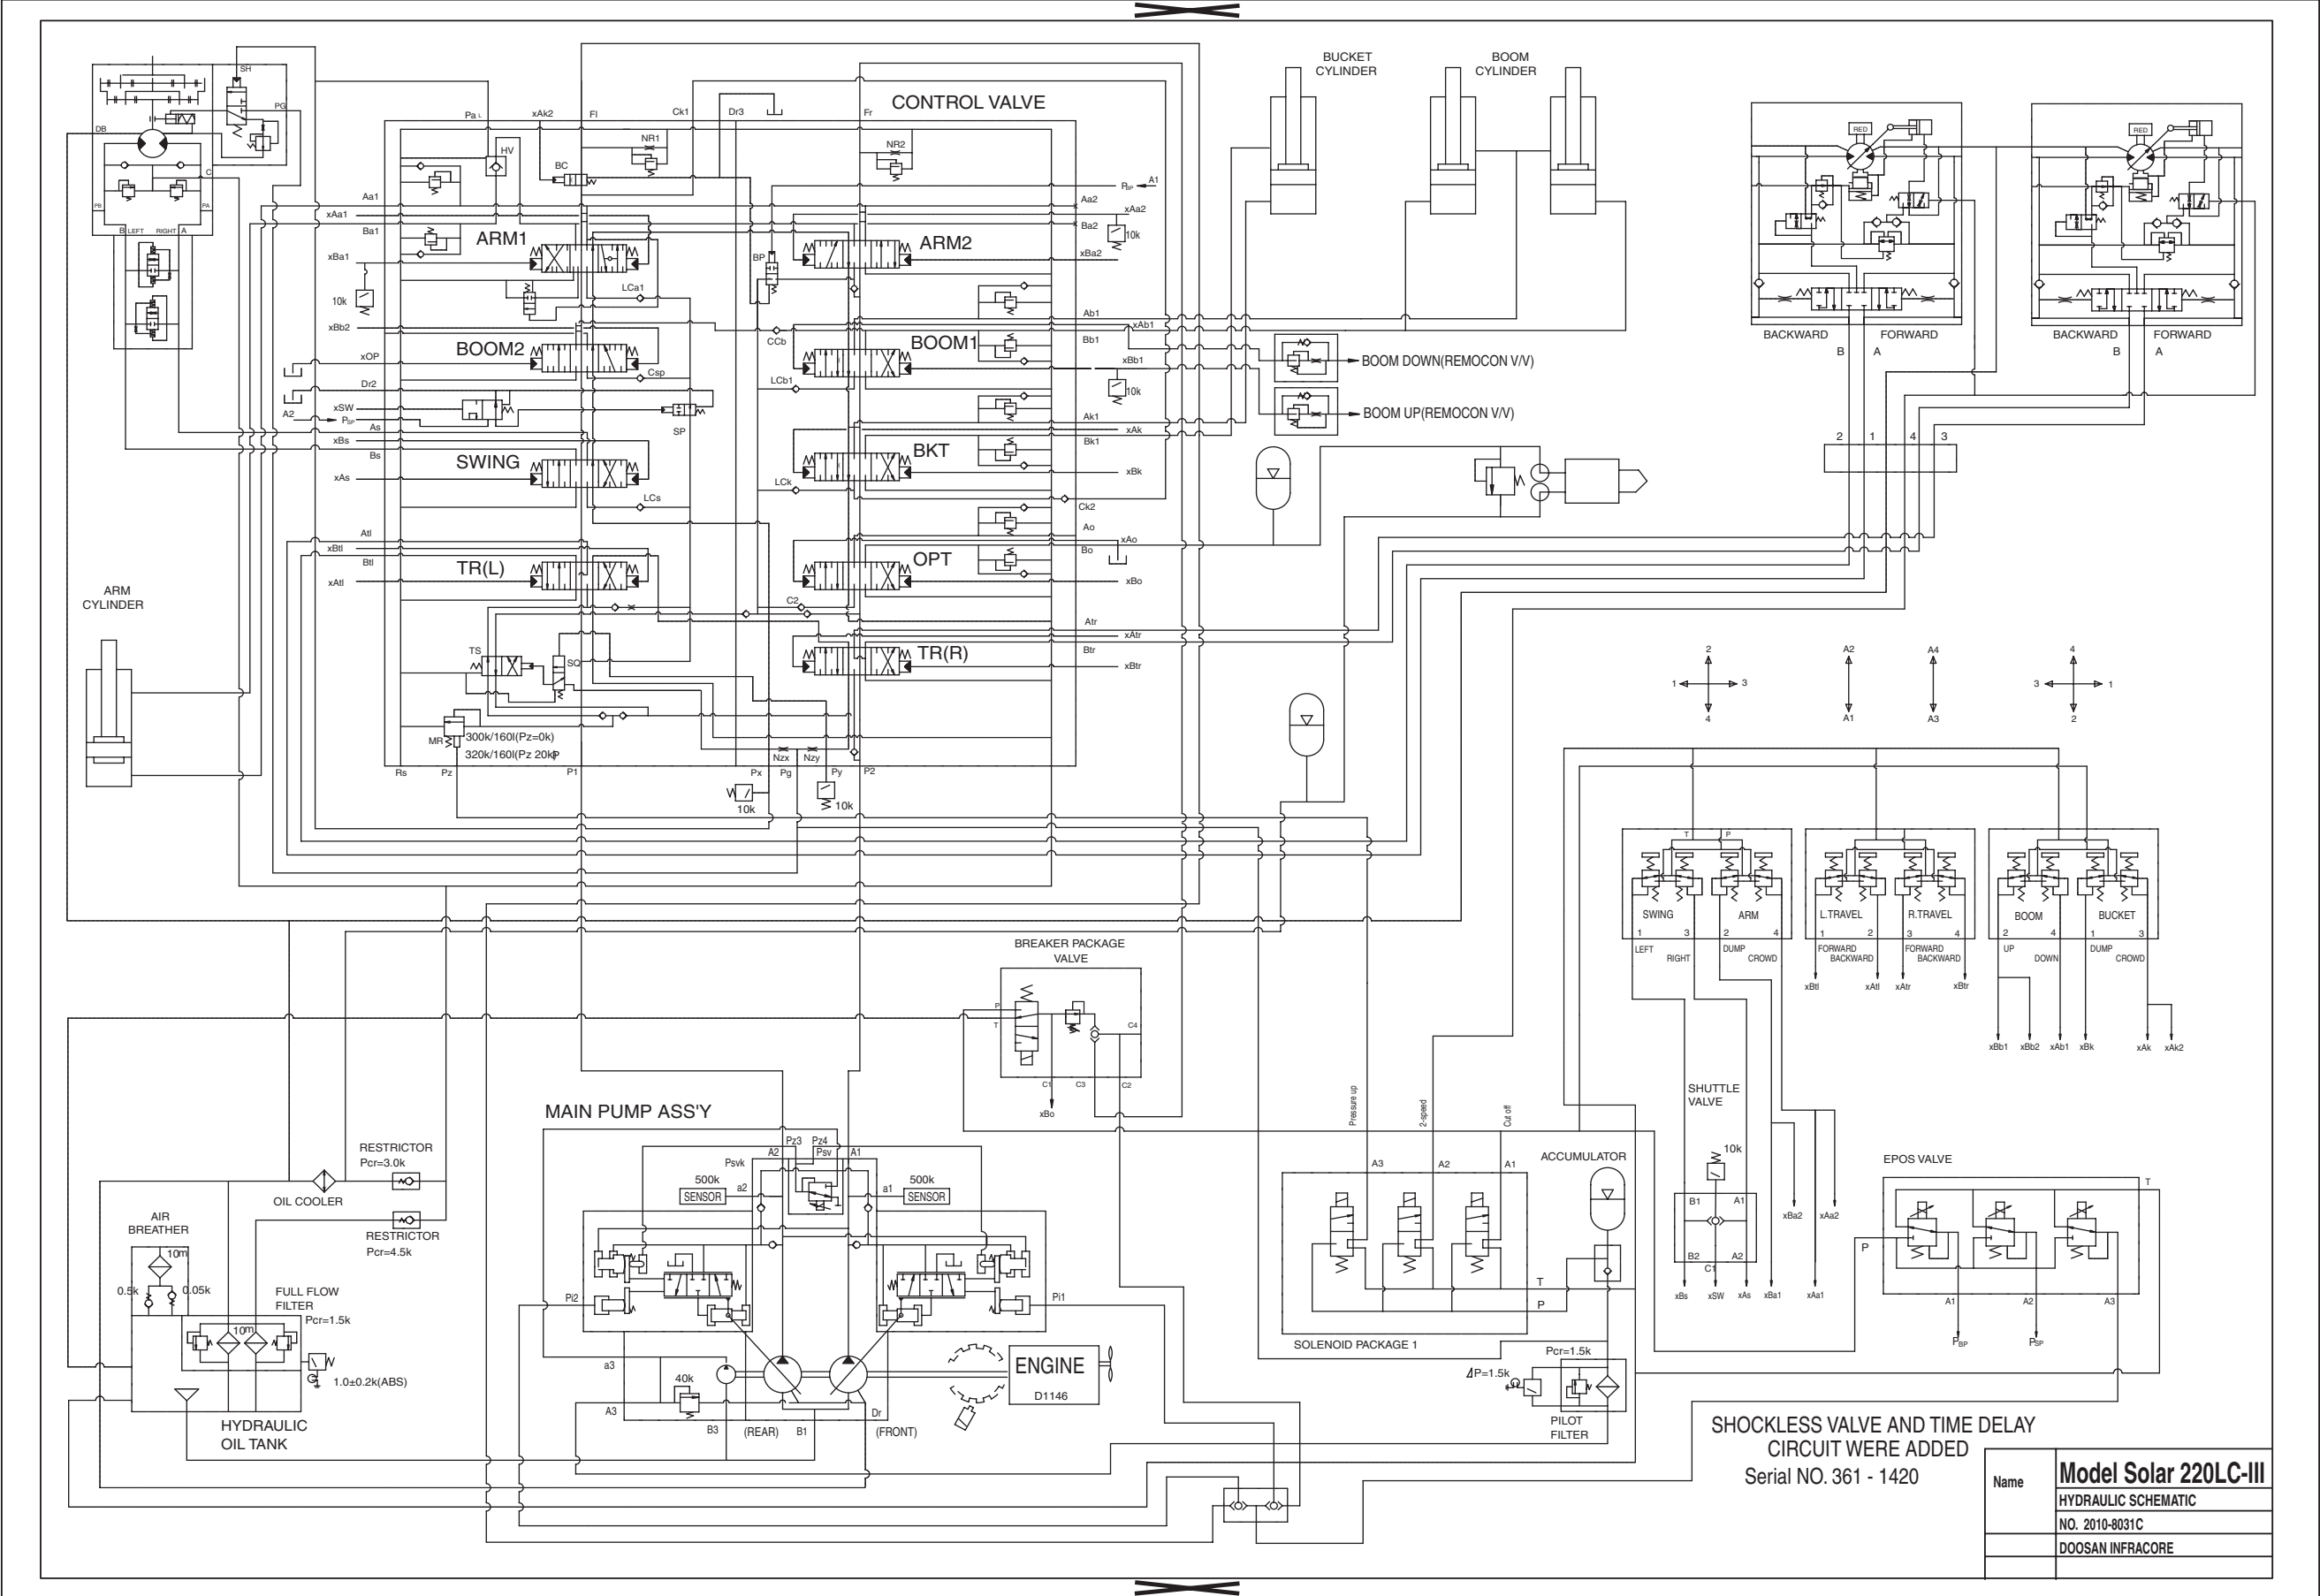



HAAE0820

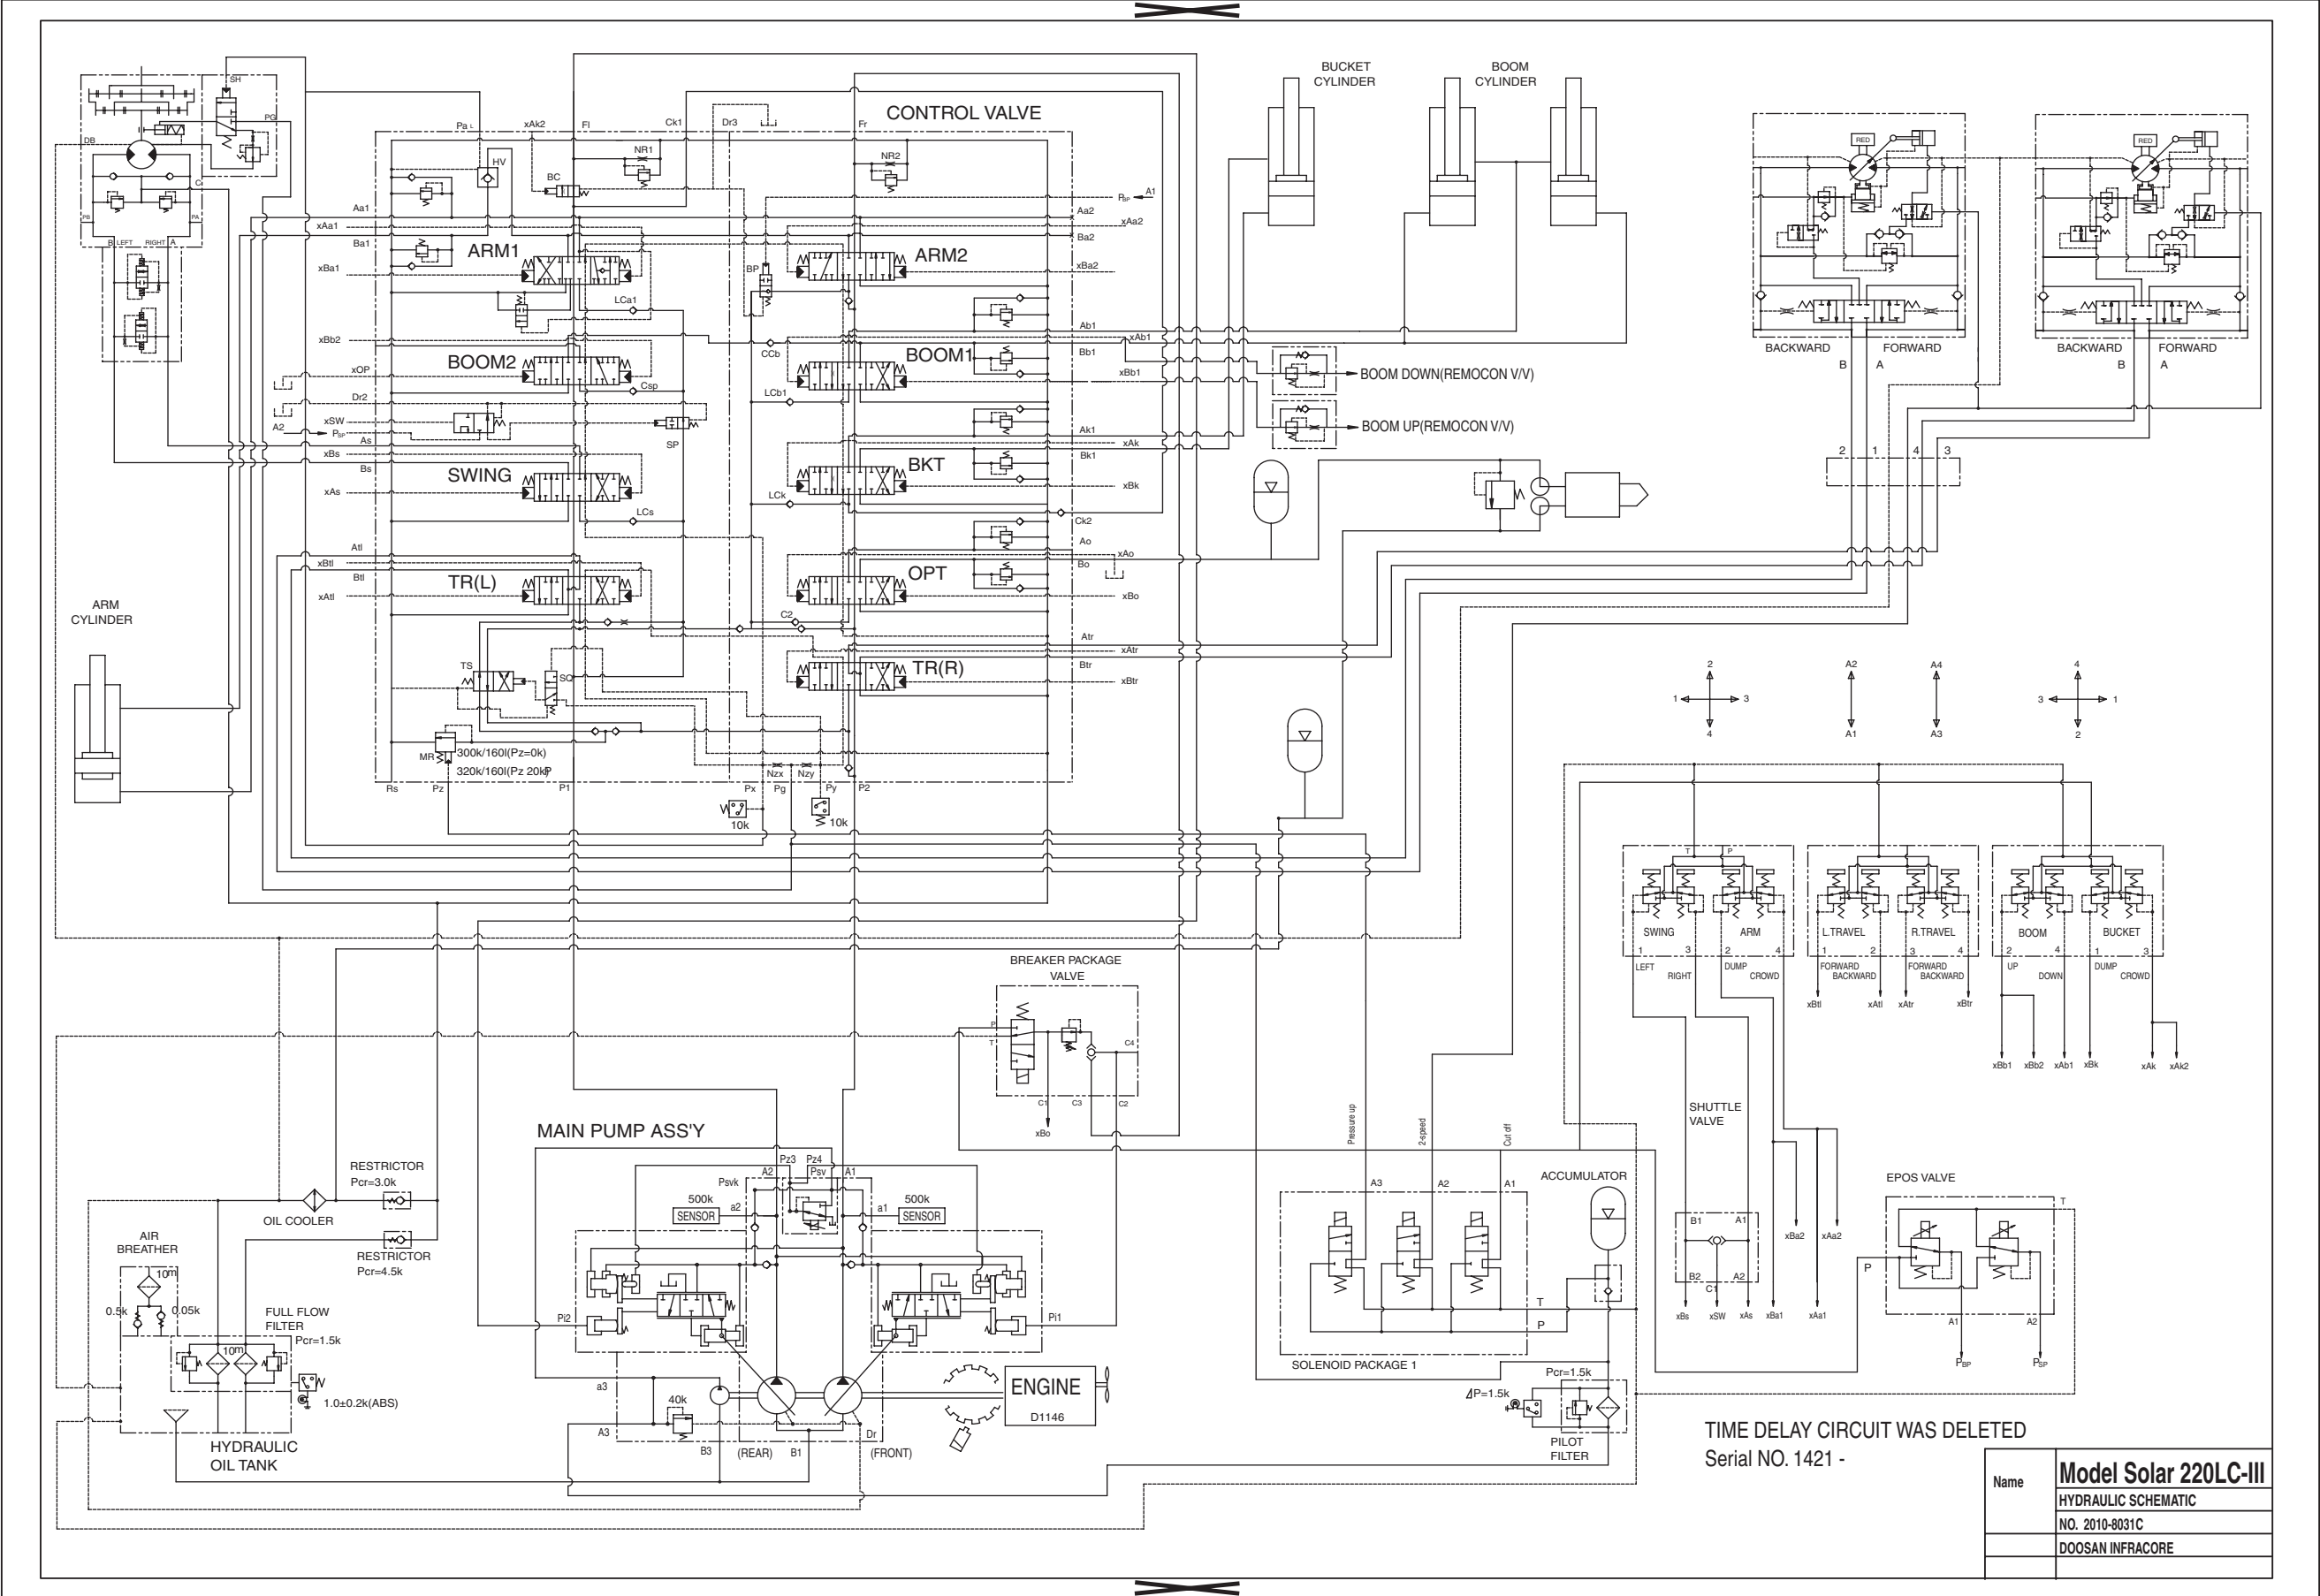

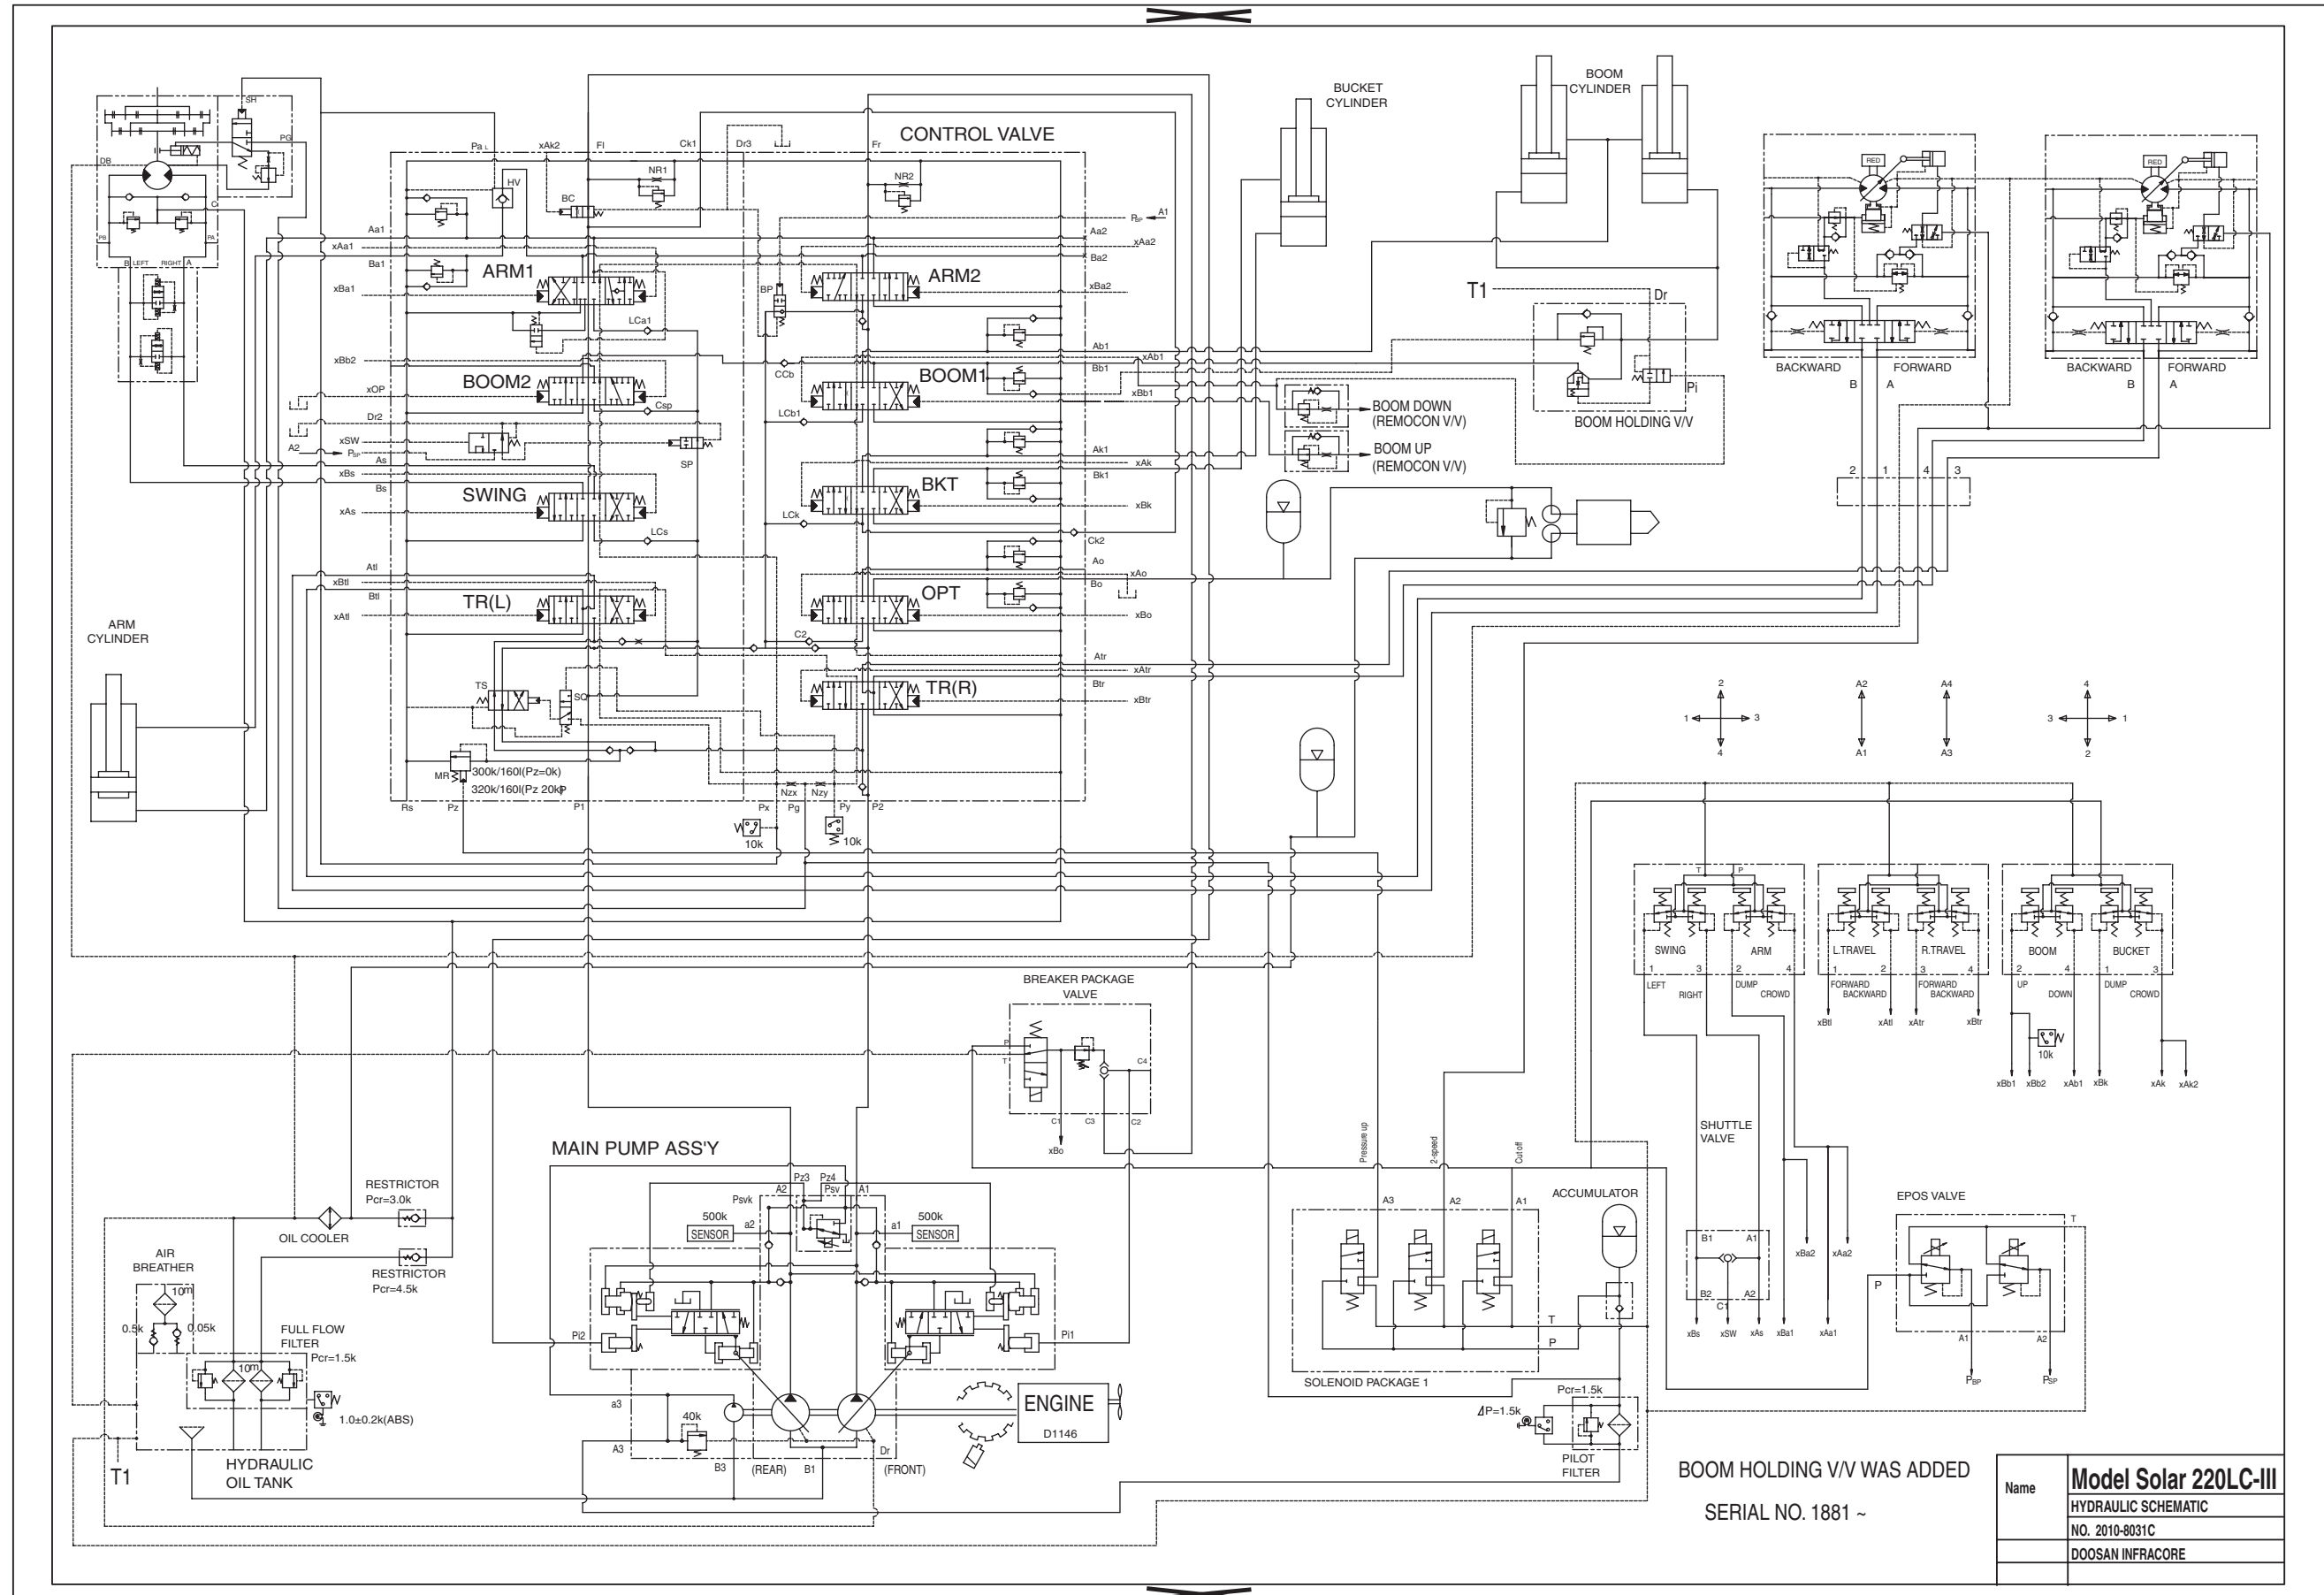



HAAE0830

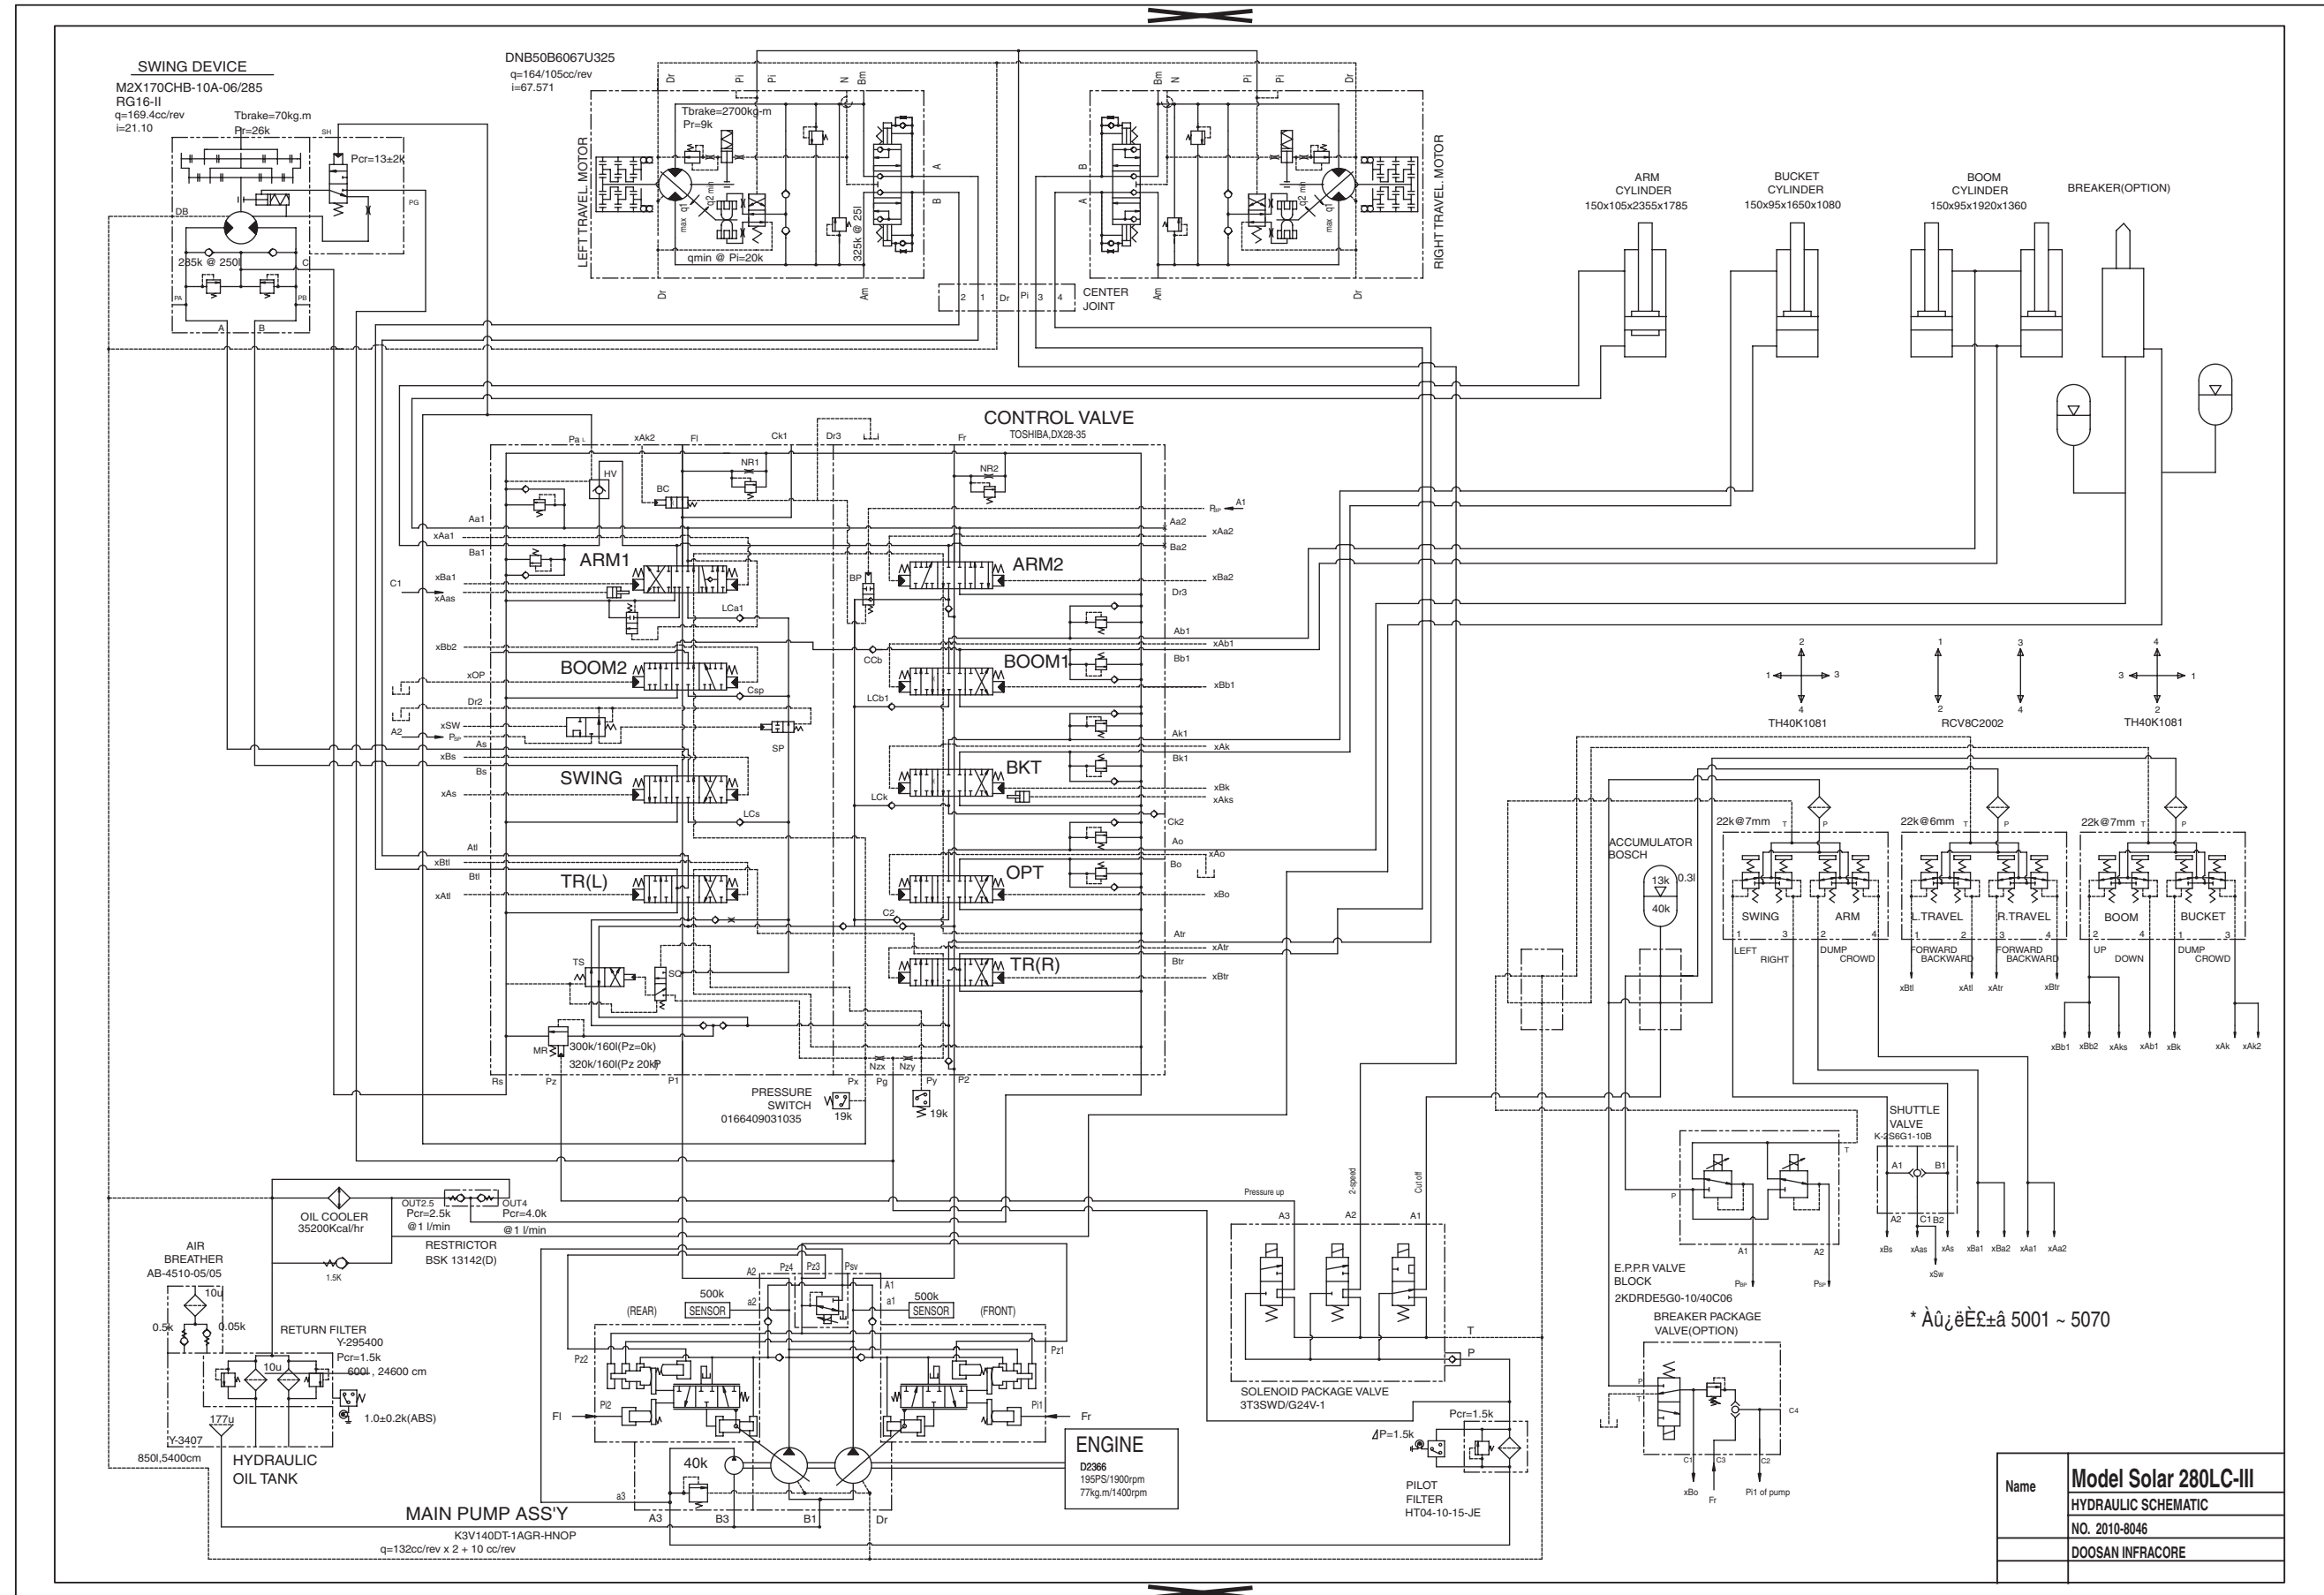


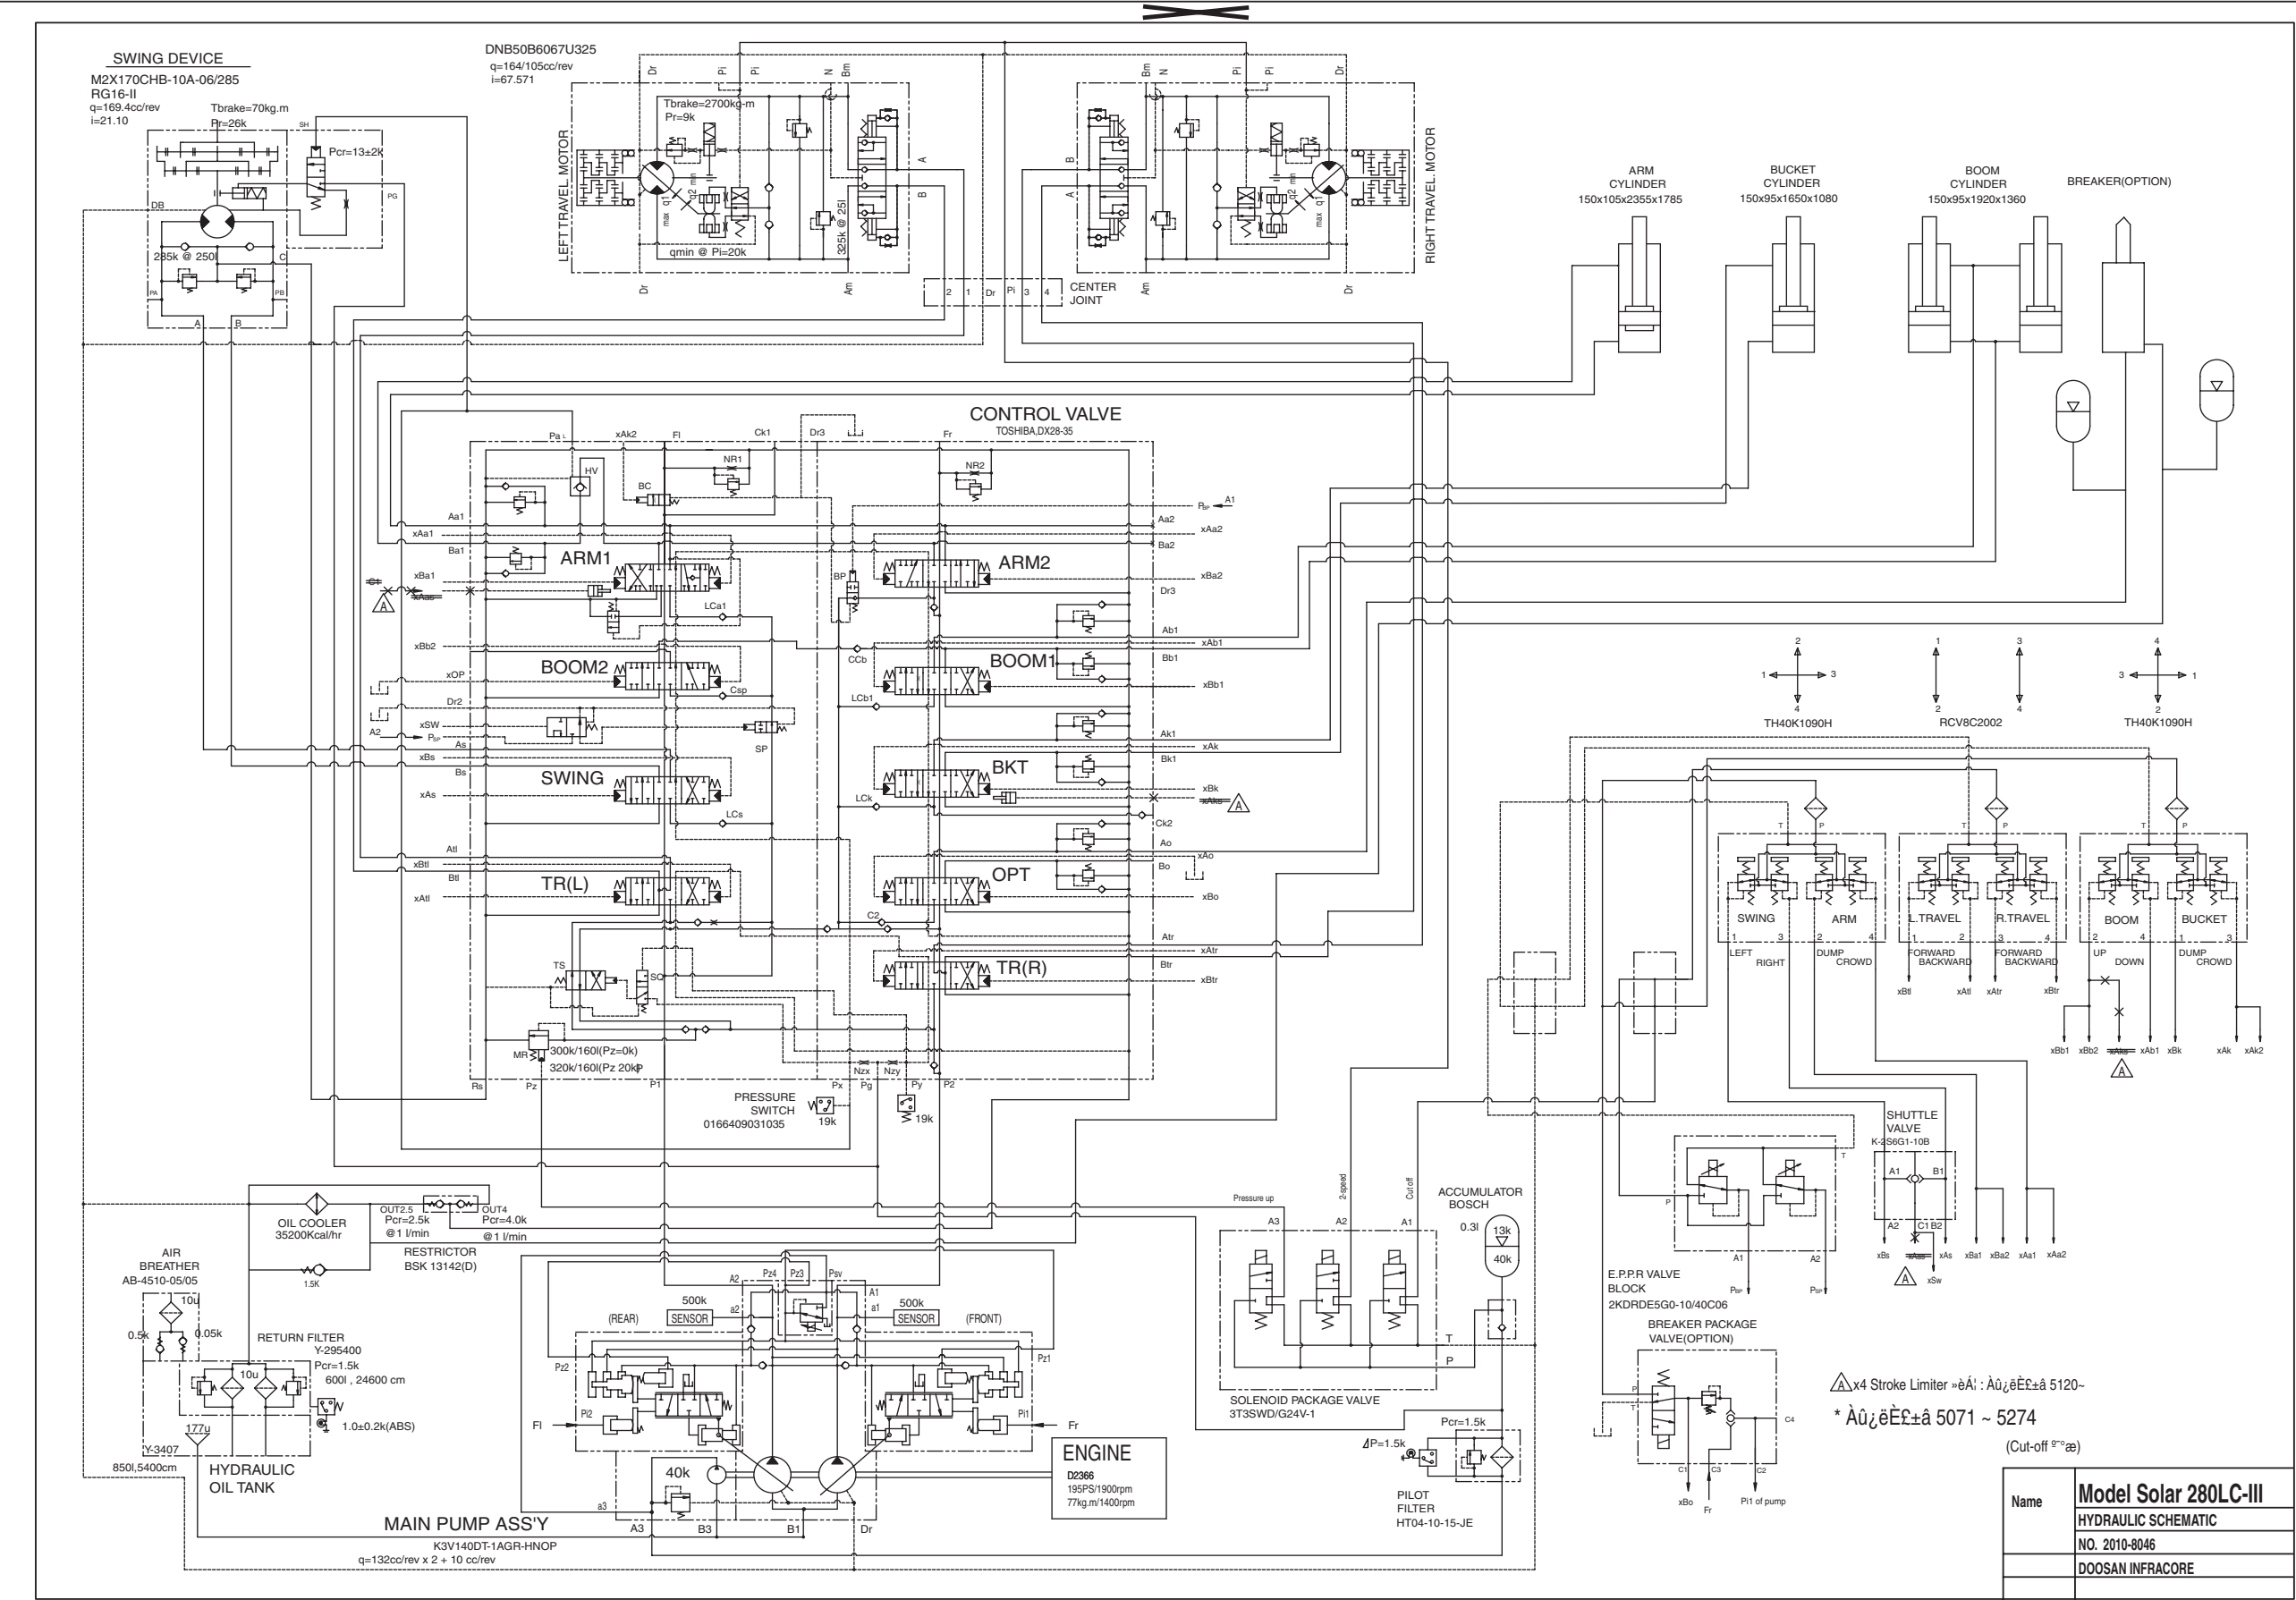


Name	Model Solar 280LC-III
	HYDRAULIC SCHEMATIC
	NO. 2010-8046
	DOOSAN INFRACORE

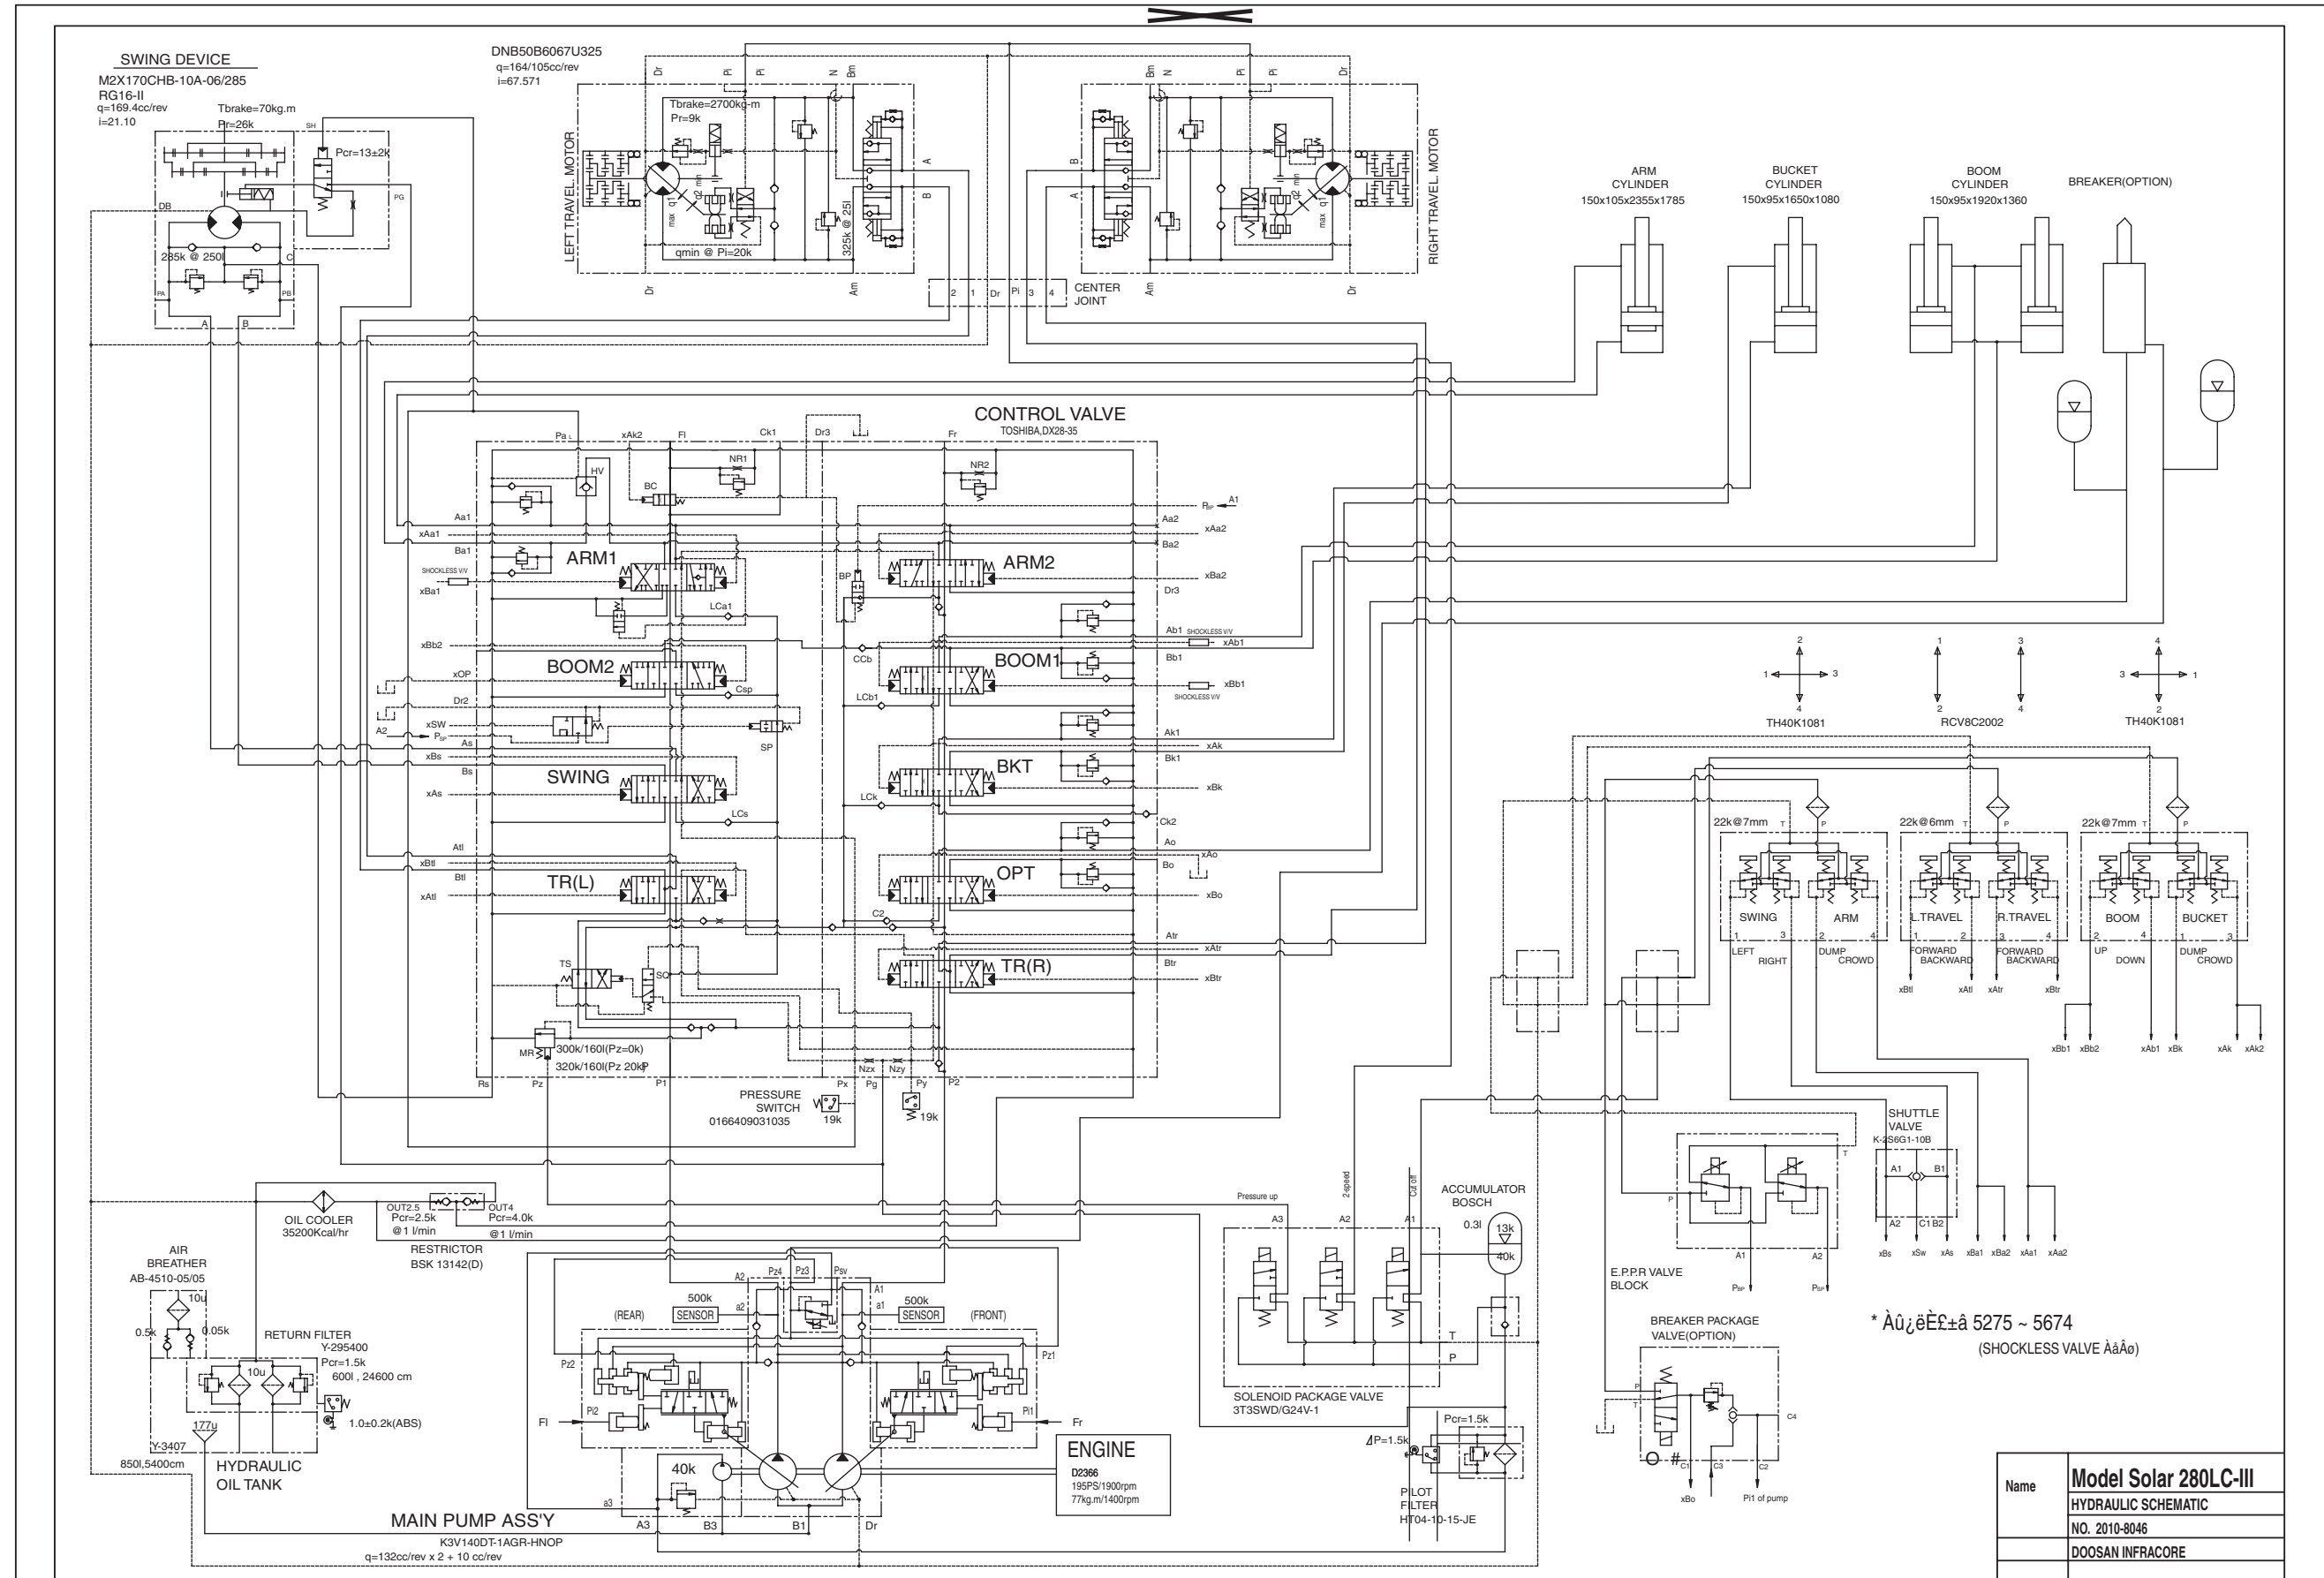


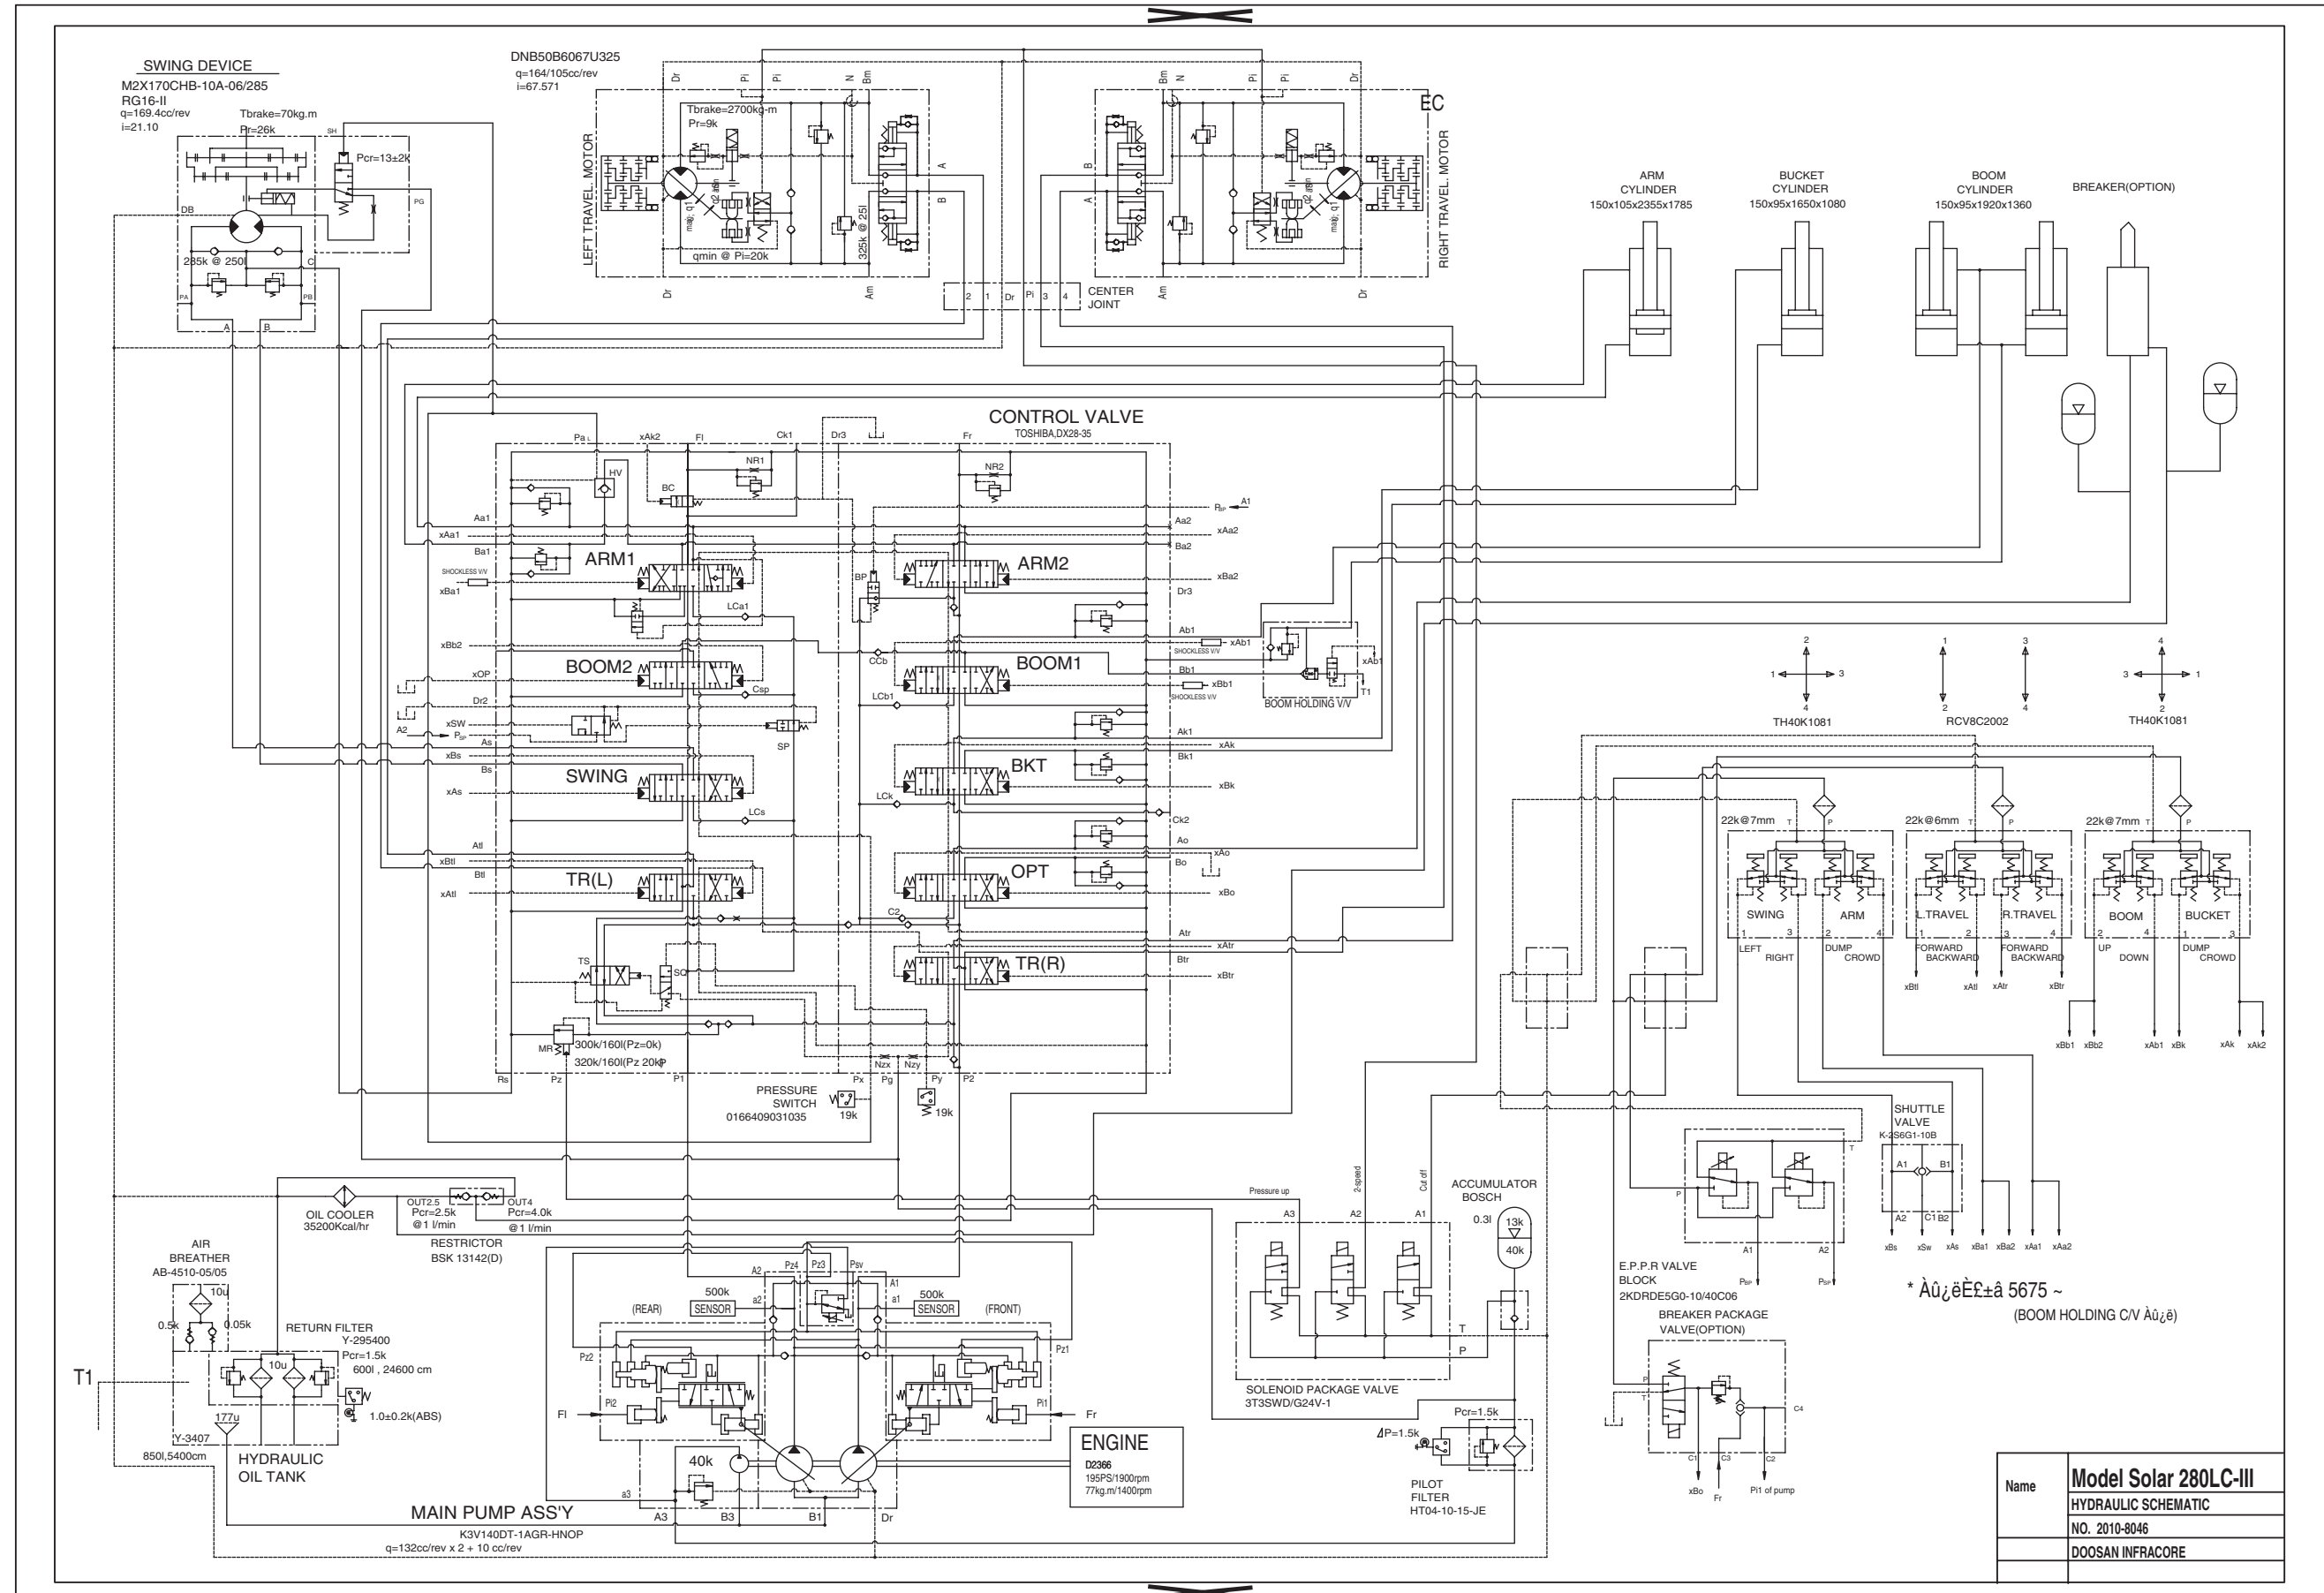


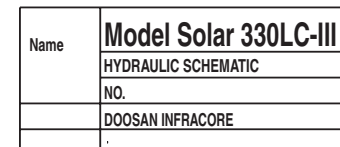

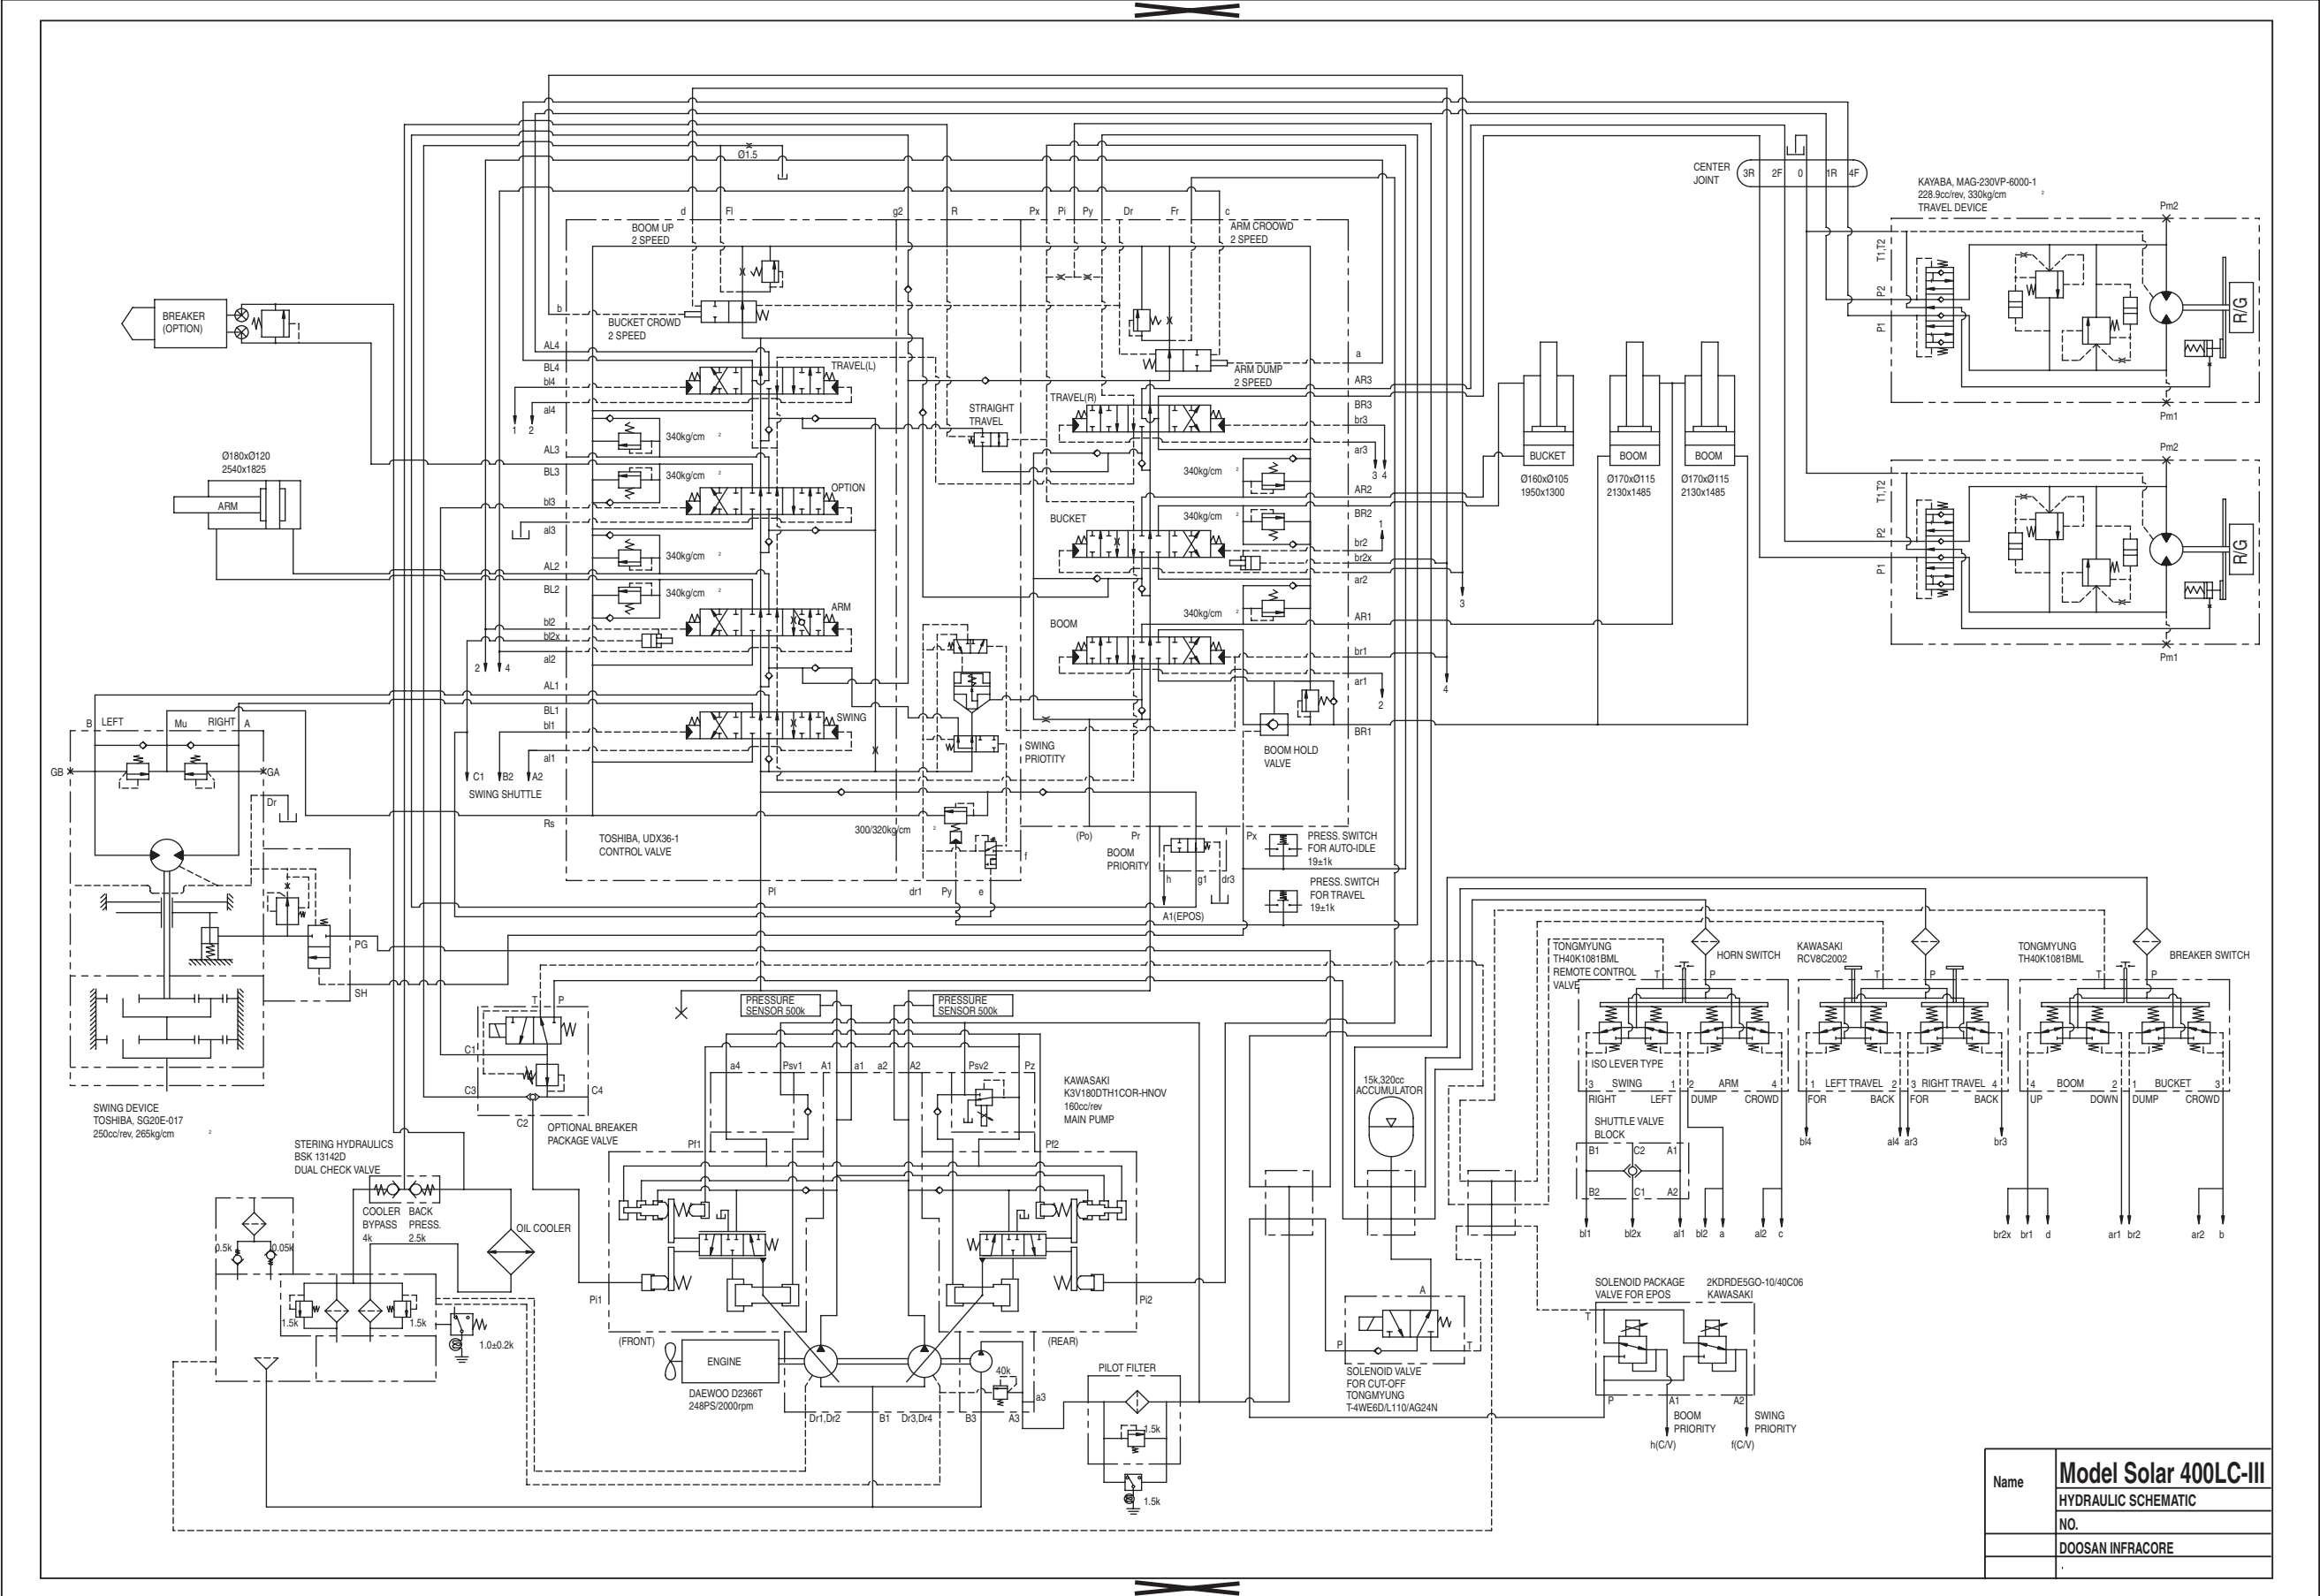


HAAE1540

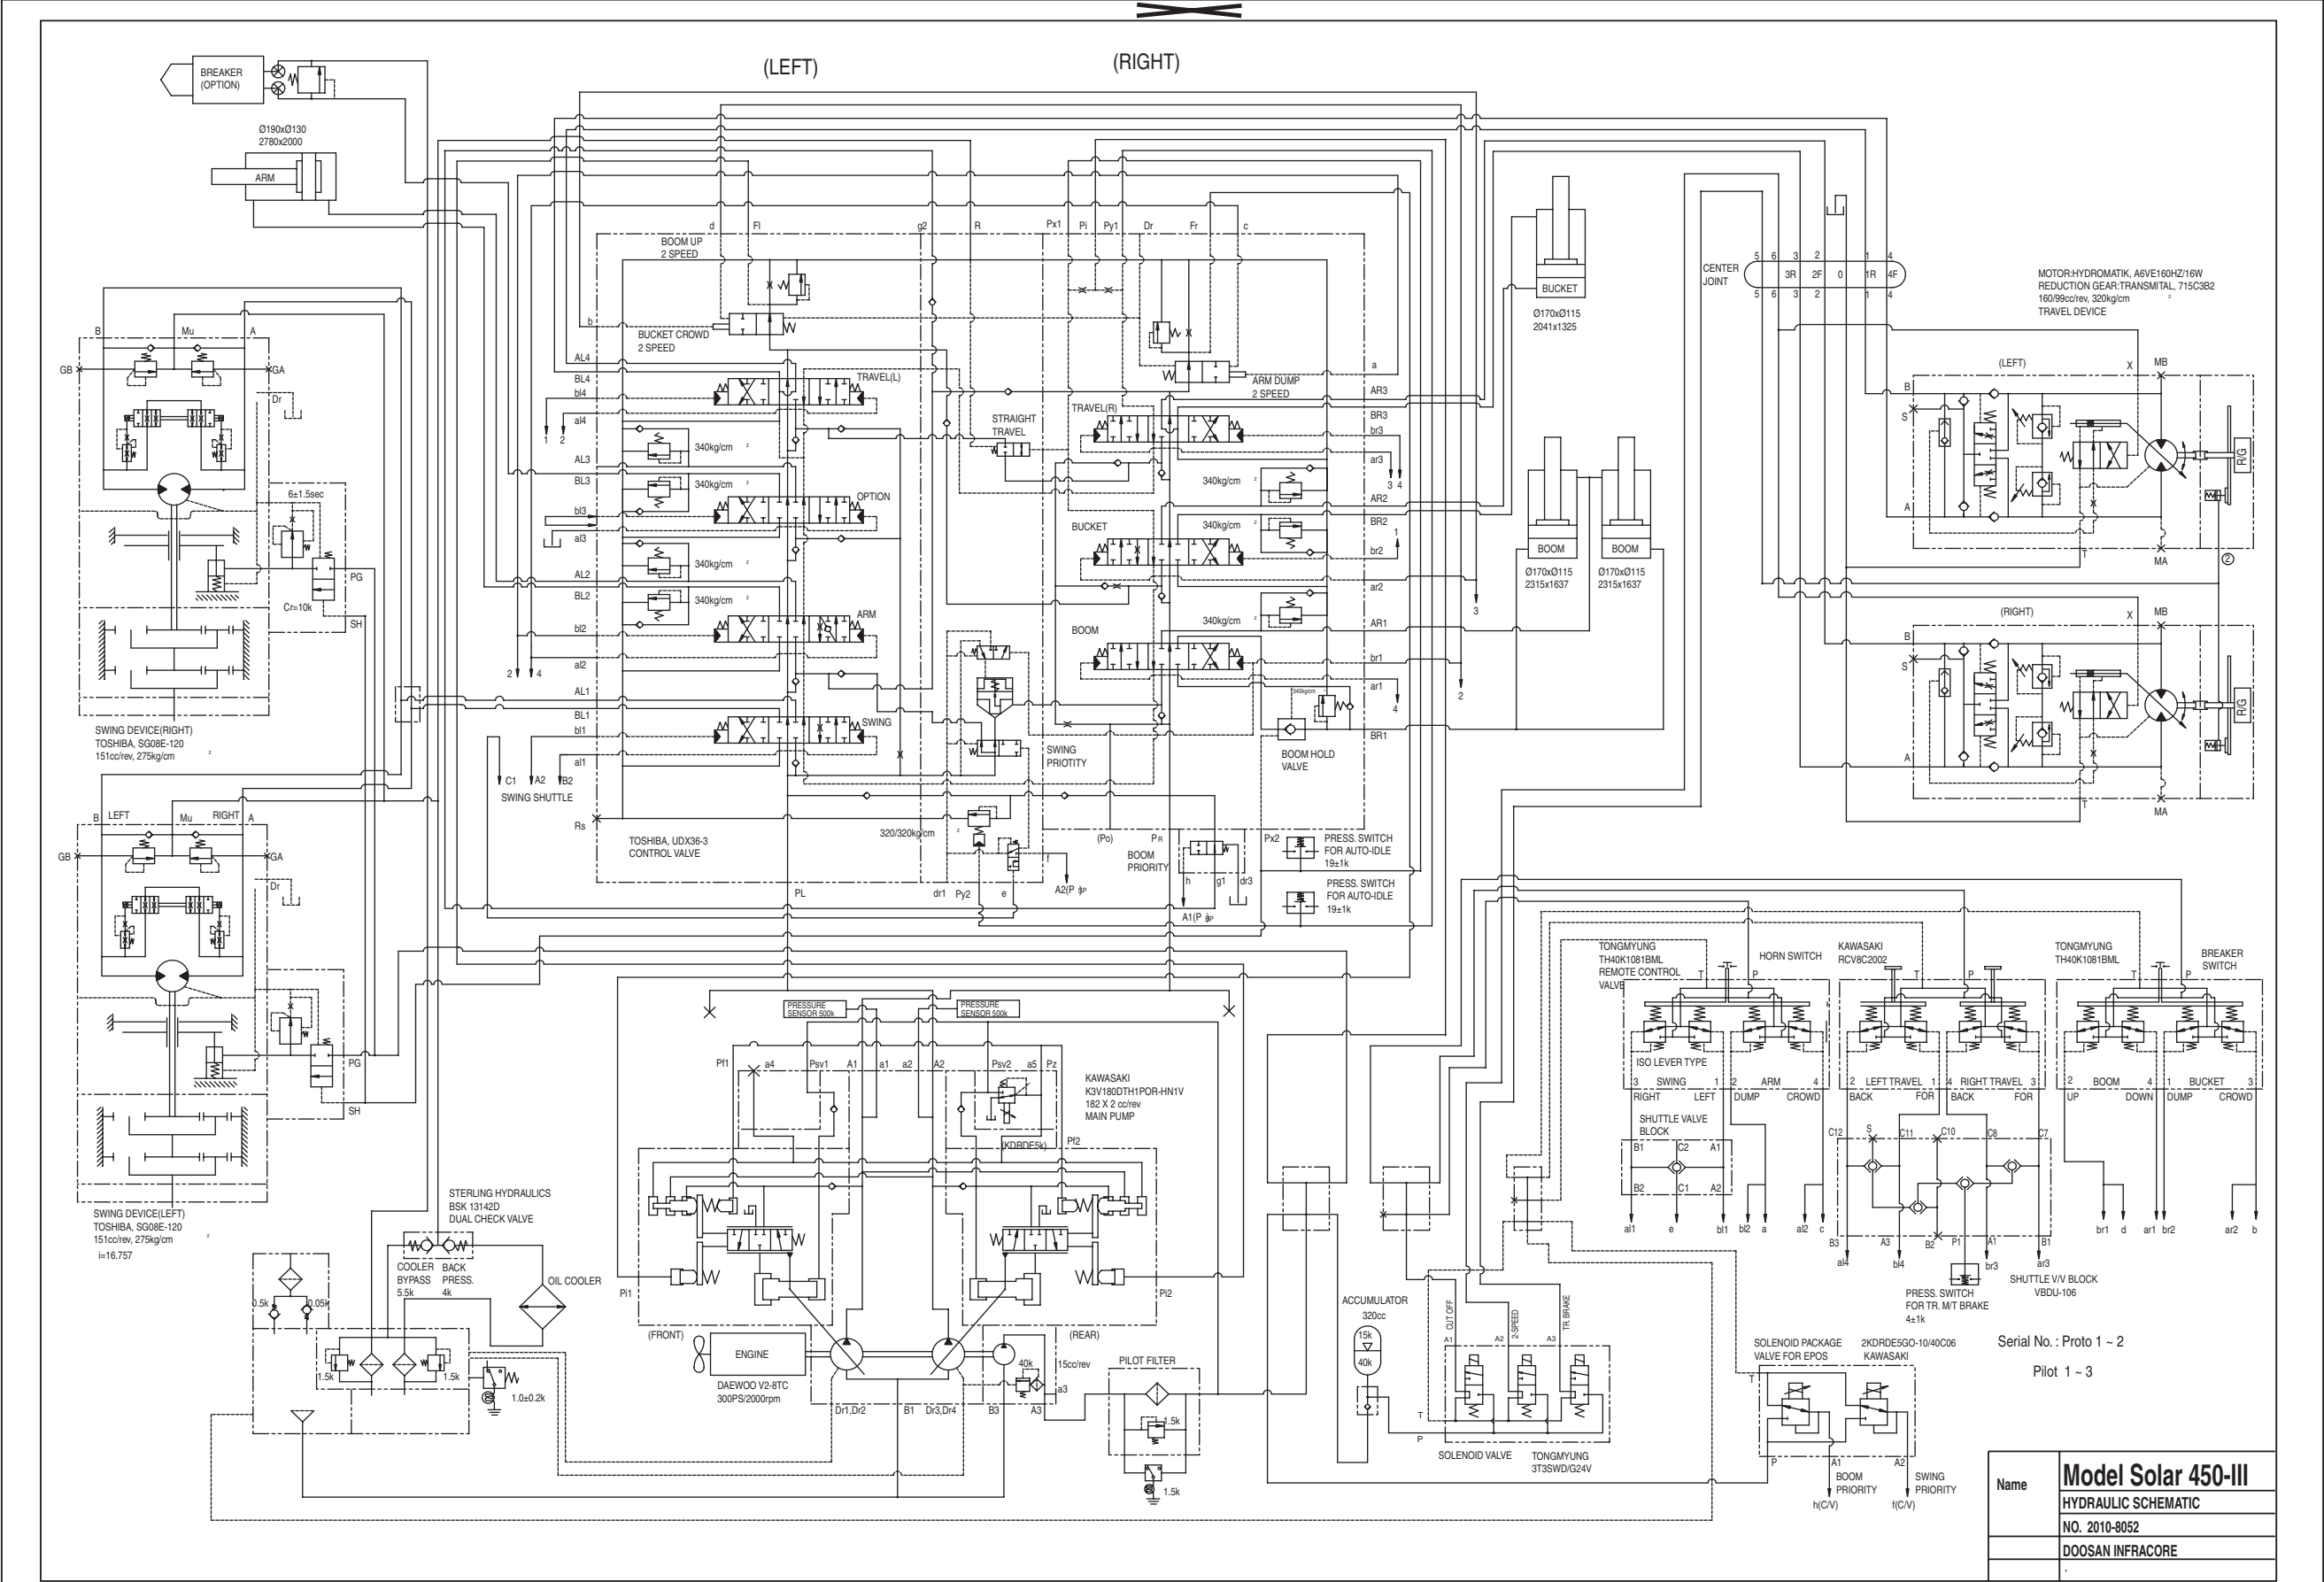

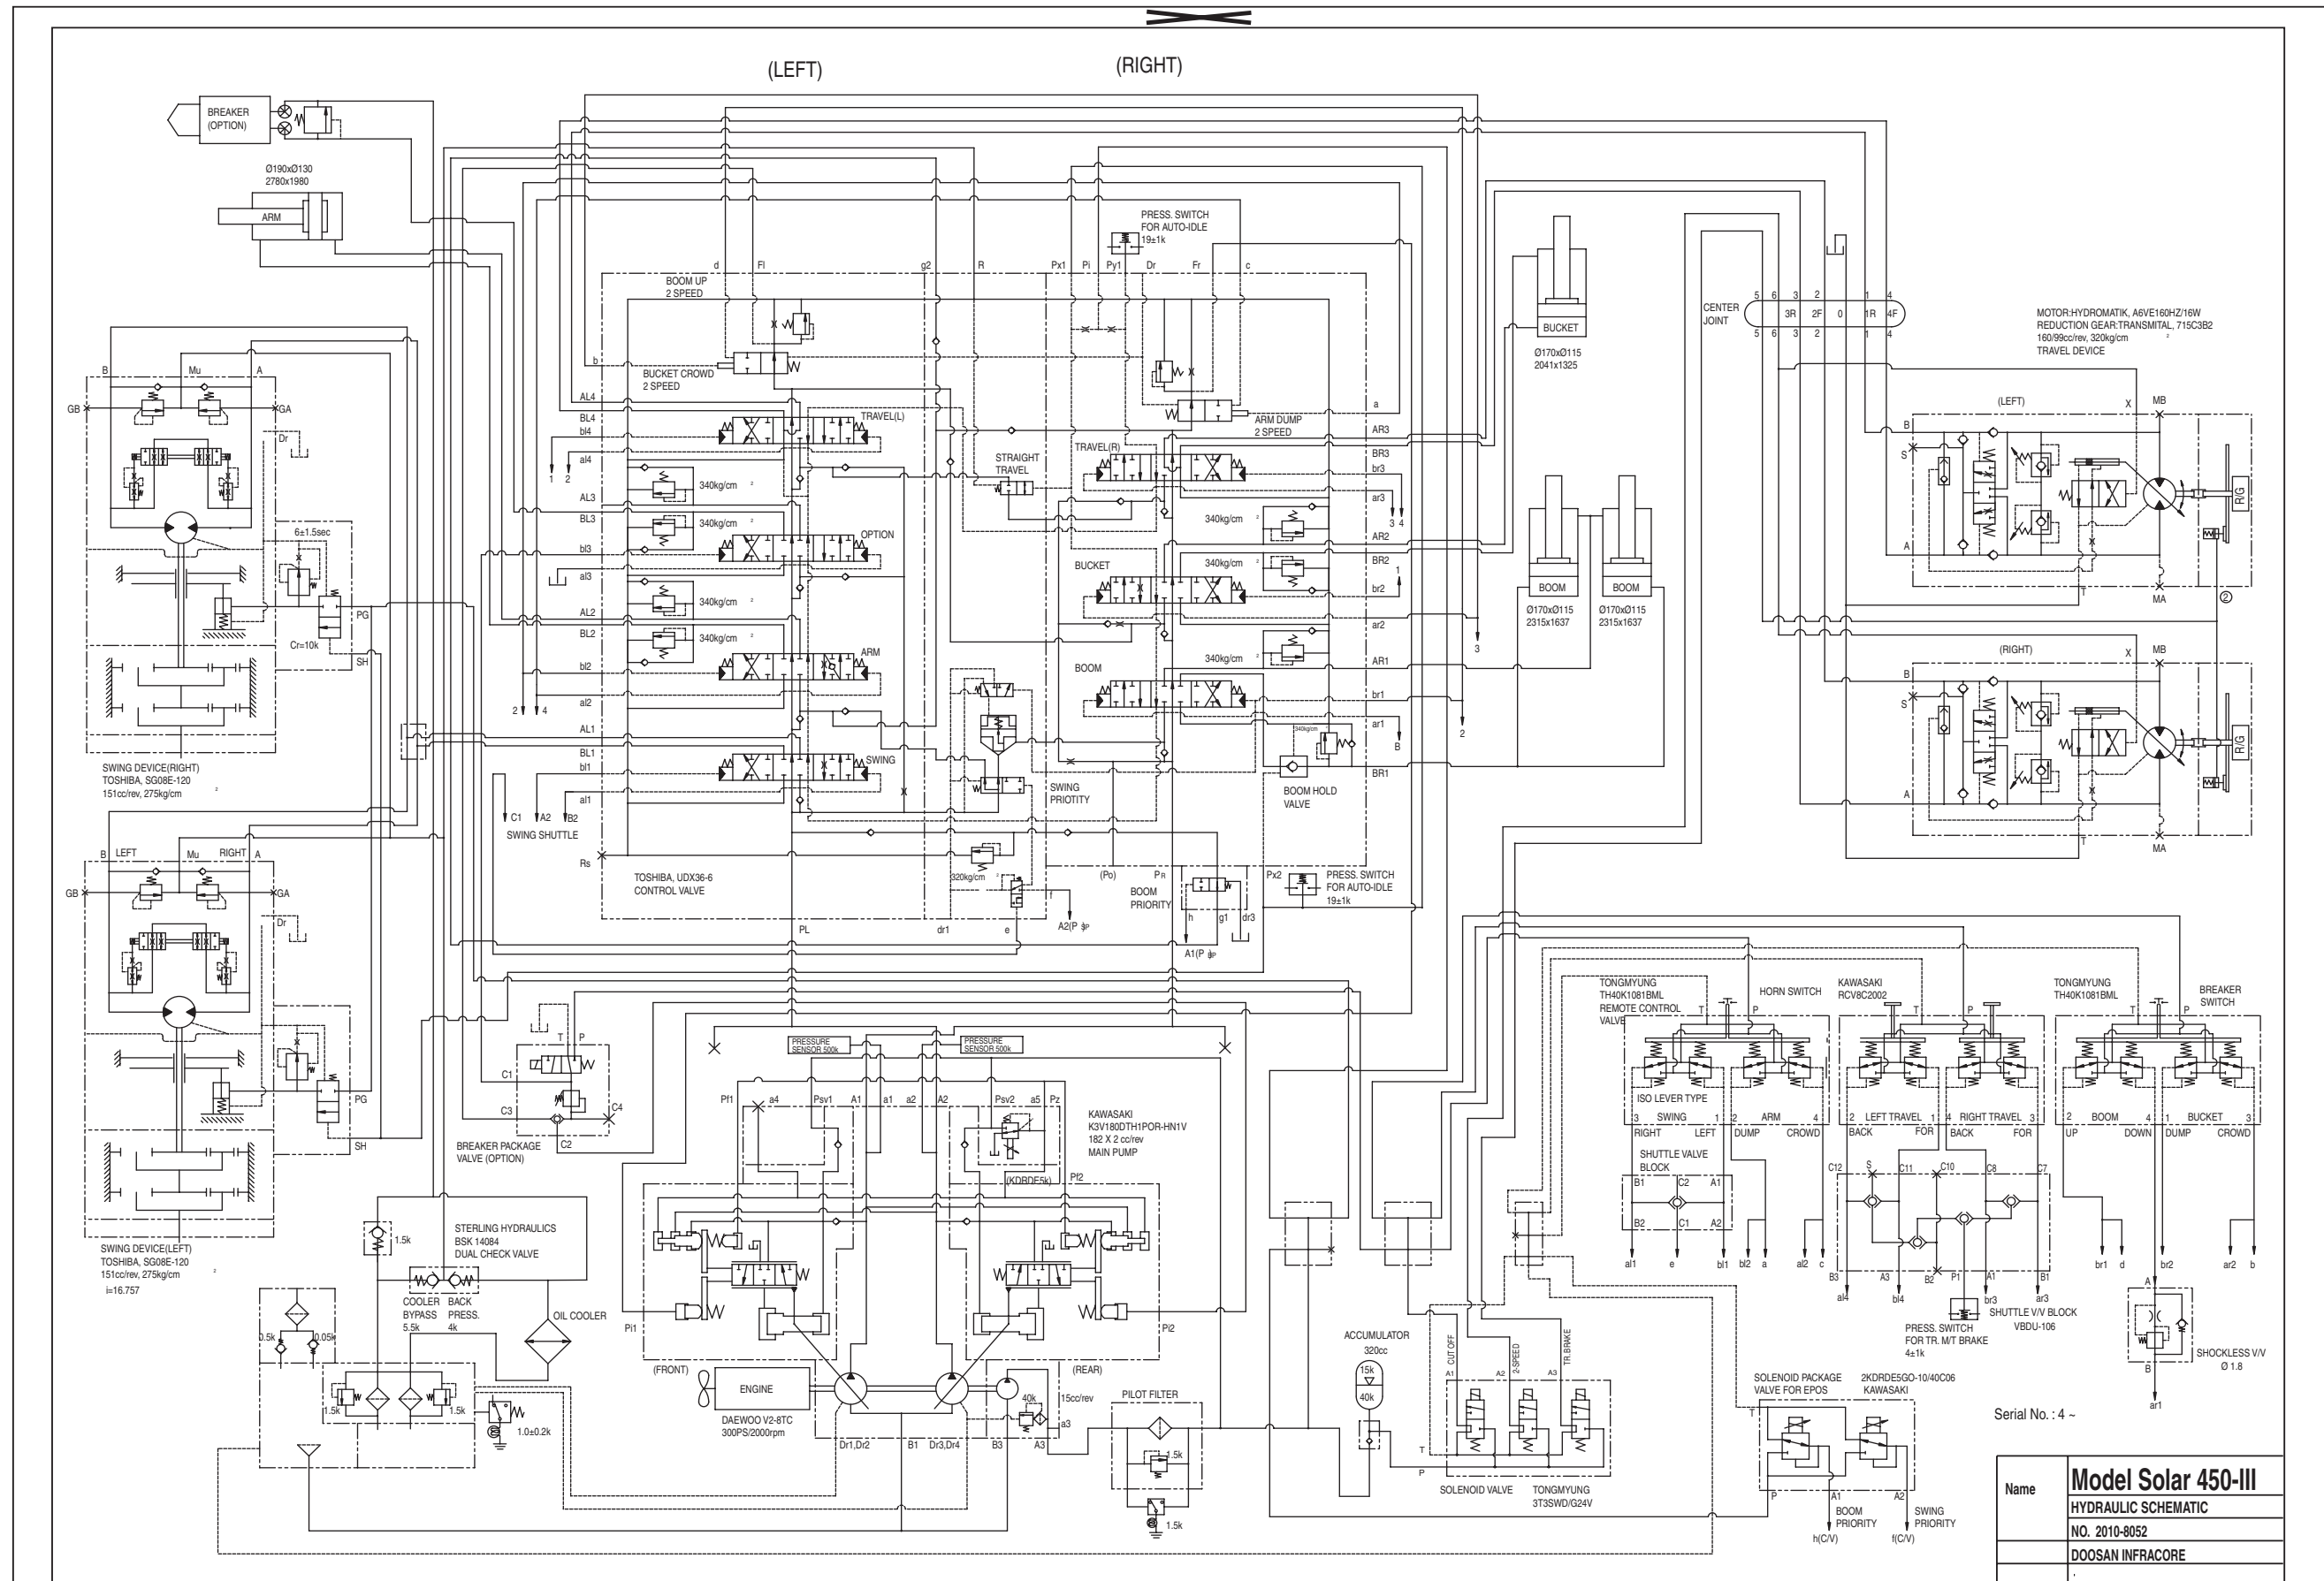

HAAE1590

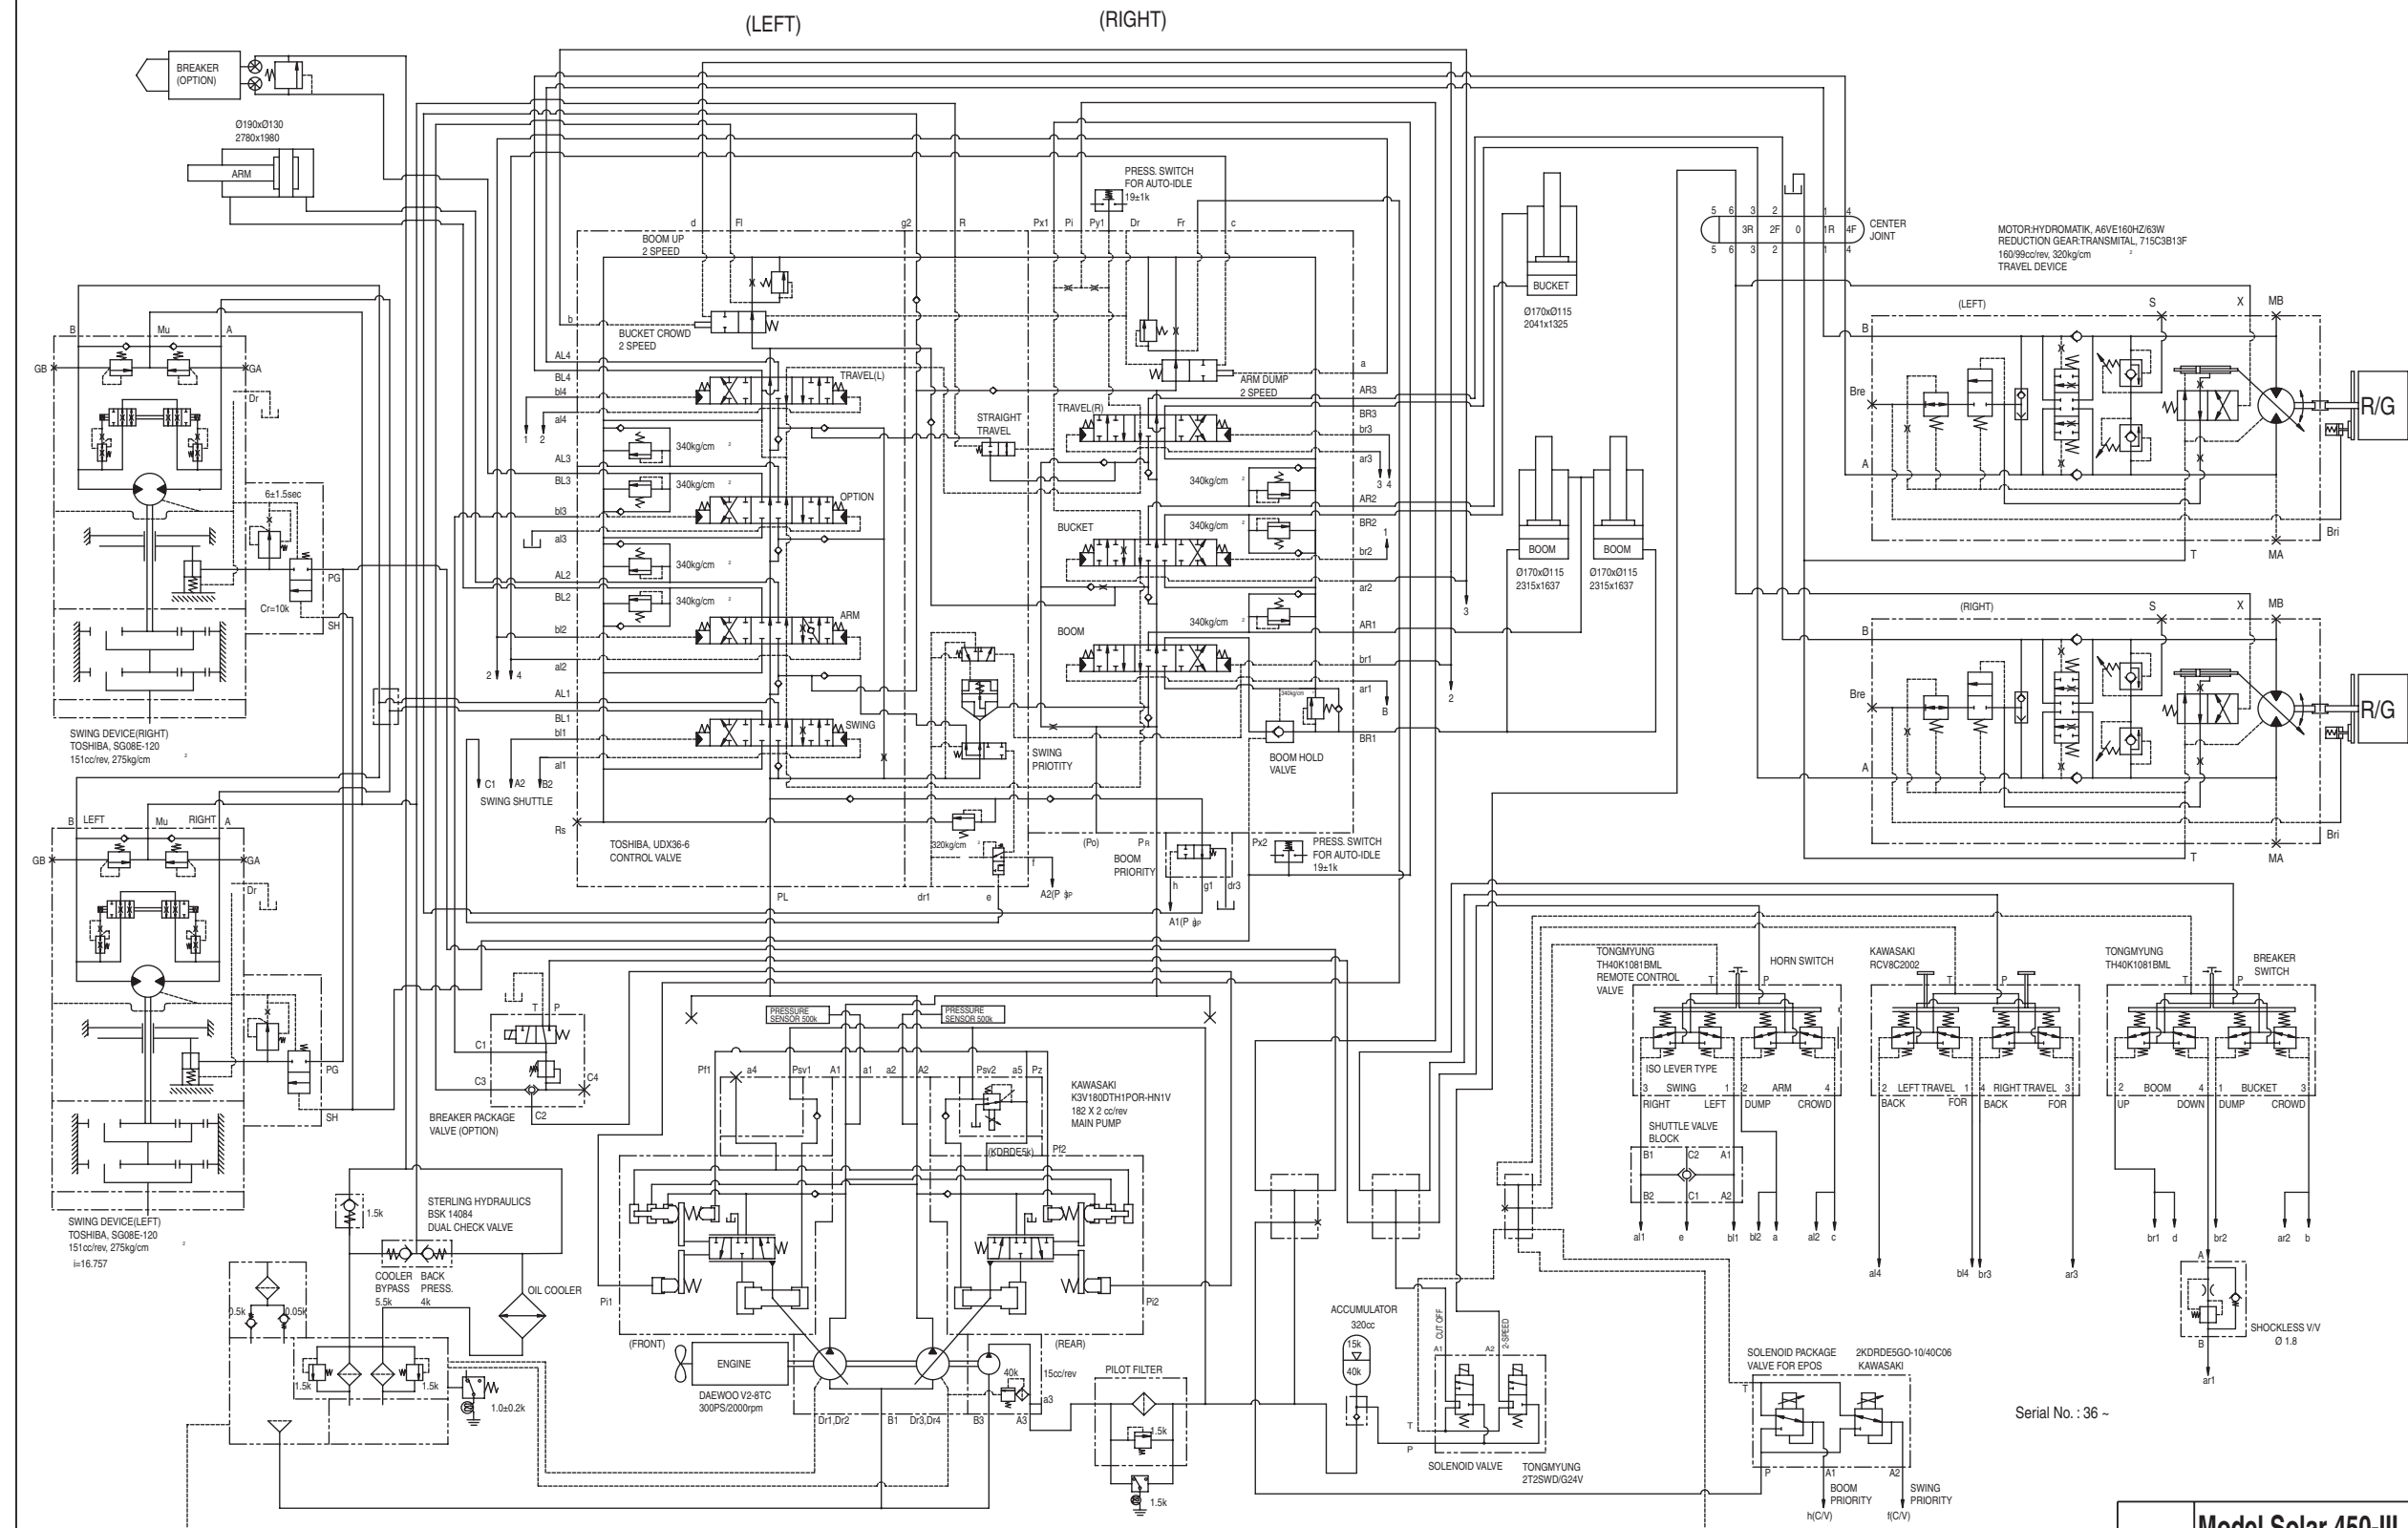

Serial No. : 36 ~

Name	Model Solar 450-III
	HYDRAULIC SCHEMATIC
	NO. 2010-8052
	DOOSAN INFRACORE
	.

TABLE OF CONTENTS

Electrical Circuits

Solar 0105

Solar 0156

Solar 015 PLUS (S/N 1001 thru 1157, 20001 thru 20065)7

Solar 015 PLUS (S/N 20066 thru 30000)8

Solar 015 PLUS / Solar 018-VT (S/N 30001 and Up).....9

Solar 030 / 035 10

Solar 030Plus / 035 11

Solar 055 12

Solar 055-V PLUS (S/N 1001 thru 1200, 31201 thru 32135) 13

Solar 055-V PLUS (S/N 32136 and Up) 14

Solar 055W-V PLUS 15

Solar 075-V (S/N 1001 thru 1153) 16

Solar 075-V (S/N 1154 thru 1645) 17

Solar 75-V (S/N 1646 and Up)..... 18

Solar 130LC-V 19

Solar 130W-V20

Solar 140LC-V (S/N 1001 thru 1094)21

Solar 140LC-V (S/N 1095 and Up)22

Solar 140W-V / 160W-V23

Solar 170LC-V24

Solar 170W-V25

Solar 175LC-V26

Solar 180W-V (S/N 1001 thru 1099).....27

Solar 180W-V (S/N 1100 and Up)28

Solar 200W-V29

Solar 210W-V (S/N 1001 thru 1409).....30

Solar 210W-V (S/N 1410 and Up)31

Solar 220LC-V (S/N 1001 thru 2441)32

Solar 220LC-V (S/N 2442 and Up)33

Solar 220LL34

Solar 225LC-V (S/N 1001 thru 1299)35

Solar 225LC-V (S/N 1300 and Up)36

Solar 225LL37

Solar 225NLC-V (S/N 1001 thru 1103).....38

Solar 225NLC-V (S/N 1104 and Up).....39

Solar 250LC-V40

Solar 255LC-V (S/N 1001 thru 1204)41

Solar 255LC-V (S/N 1205 and Up)42

Solar 290LC-V (S/N 1001 thru 2153)43

Solar 290LC-V (S/N 2154 and Up)44

Solar 290LL45

Solar 300LC-V (S/N 1001 thru 2429)46

Solar 300LC-V (S/N 2430 and Up)47

Solar 300LL (S/N 1001 thru 1003).....48

Solar 300LL (S/N 1004 and Up)49

Solar 330LC-V50

Solar 340LC-V (S/N 1001 thru 1339)51

Solar 340LC-V (S/N 1340 and Up)52

Solar 400LC-V53

Solar 420LC-V (S/N 1001 thru 1162)54

Solar 420LC-V (S/N 1163 and Up)55

Solar 450LC-V56

Solar 470LC-V / 500 LC-V (S/N 1001 thru 1304)57

Solar 470LC-V / 500 LC-V (S/N 1305 and Up)58

Hydraulic Circuits

Solar 01060

Solar 01561

Solar 015 PLUS (S/N 1001 thru 1157, 20001 thru 20065)62

Solar 015 PLUS (S/N 20066 thru 30000)63

Solar 015 PLUS (S/N 30001 and Up)64

Solar 018-VT (S/N 30001 and Up).....65

Solar 030 PLUS66

Solar 03567

Solar 055 (S/N 0001 thru 0525, 10001 thru 11340)68

Solar 055 (S/N 0526 and Up, 11341 and Up)69

Solar 055-V PLUS (S/N 1001 thru 1200, 31201 thru 32135)70

Solar 055-V PLUS (S/N 32136 and Up)71

Solar 055W-V PLUS72

Solar 075-V (Standard) (S/N 1001 thru 1645)73

Solar 075-V (Option) (S/N 1001 thru 1645)74

Solar 75-V (Standard) (S/N 1646 and Up).....75

Solar 75-V (Optional) (S/N 1646 and Up)76

Solar 130LC-V78

Solar 130W-V79

Solar 140LC-V80

Solar 140W-V / 160W-V81

Solar 170LC-V (Old Style Center Joint).....82

Solar 170LC-V (New Style Center Joint)83

Solar 170W-V (with Standard Boom).....84

Solar 170W-V (with Articulated Boom)85

Solar 175LC-V86

Solar 180W-V (with Standard Boom).....87

Solar 180W-V (with Articulated Boom)88

Solar 200W-V89

Solar 210W-V90

Solar 220LC-V91

Solar 220LL92

Solar 225LC-V93

Solar 225LL94

Solar 225NLC-V.....95

Solar 250LC-V96

Solar 255LC-V97

Solar 290LC-V98

Solar 290LL99

Solar 300LC-V100

Solar 300LL (S/N 1001 thru 1003).....101

Solar 300LL (S/N 1004 and Up)102

Solar 330LC-V103

Solar 340LC-V104


Solar 400LC-V105

Solar 420LC-V106

Solar 450LC-V (Pedal Valve with Damper).....107


Solar 450LC-V (with Simplified Swing Brake).....108


Solar 470LC-V / 500LC-V109

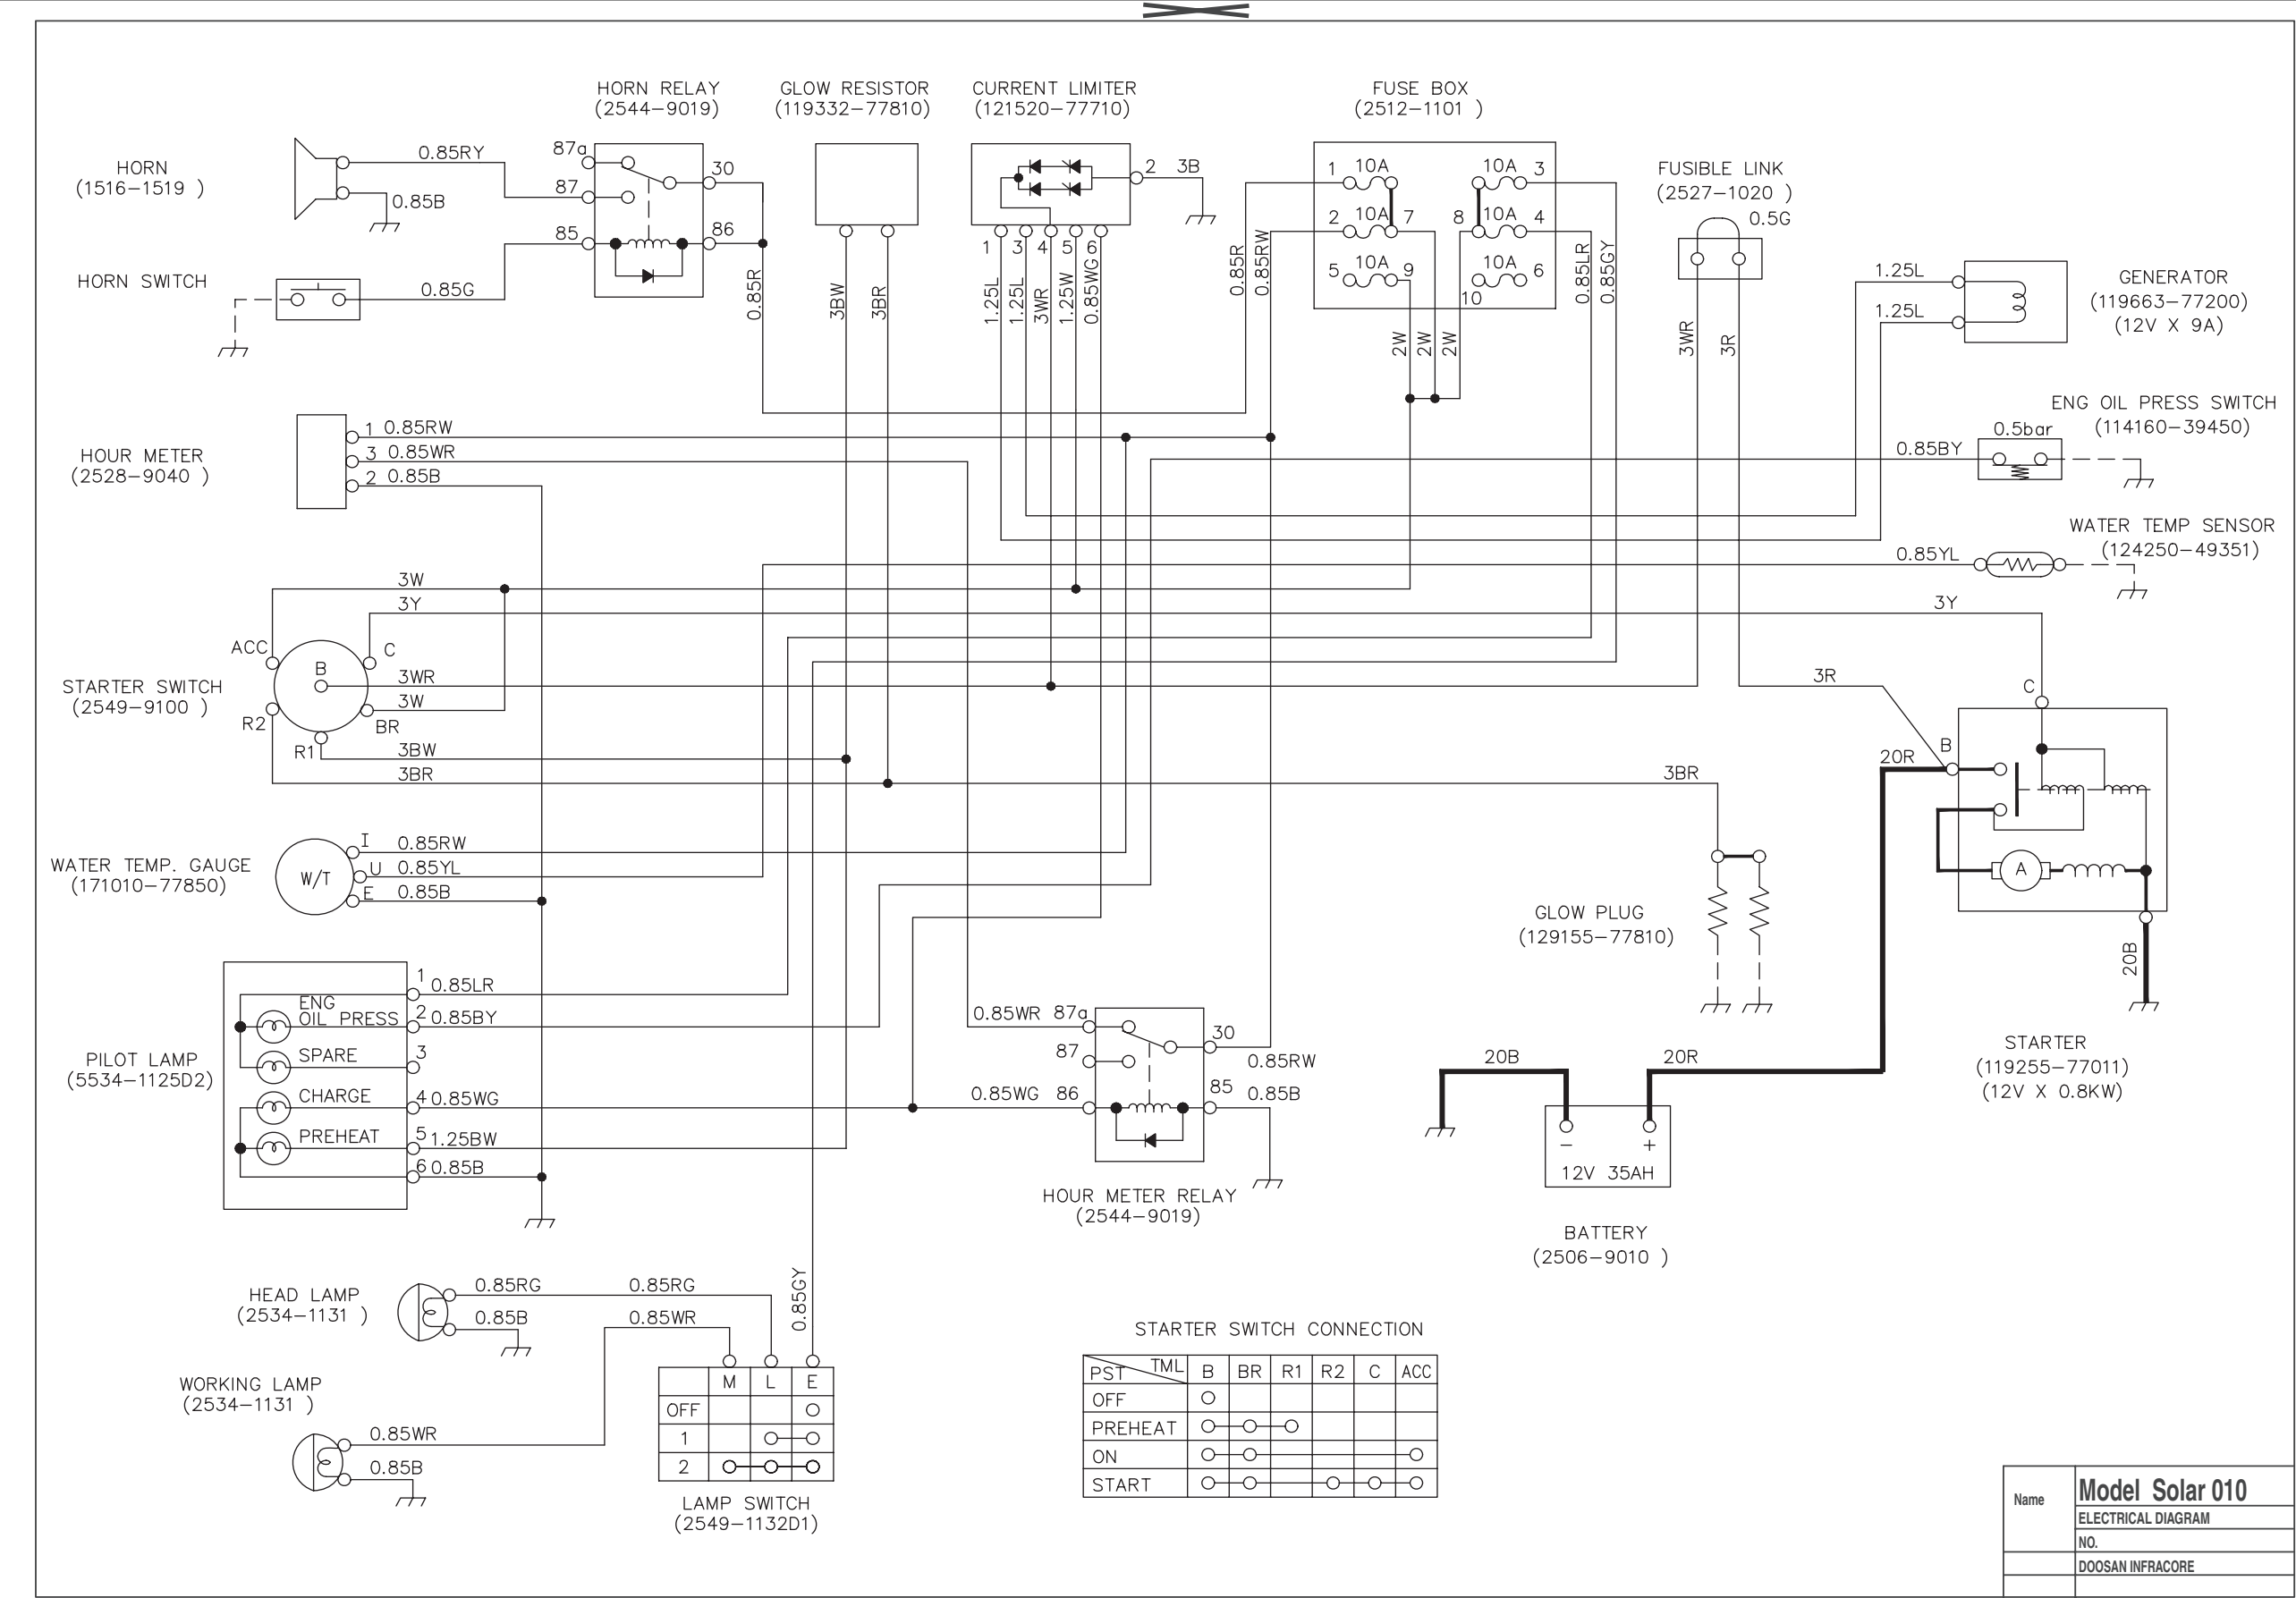


Name	Model Solar 010
	ELECTRICAL DIAGRAM
	NO.
	DOOSAN INFRACORE

HAAE1650

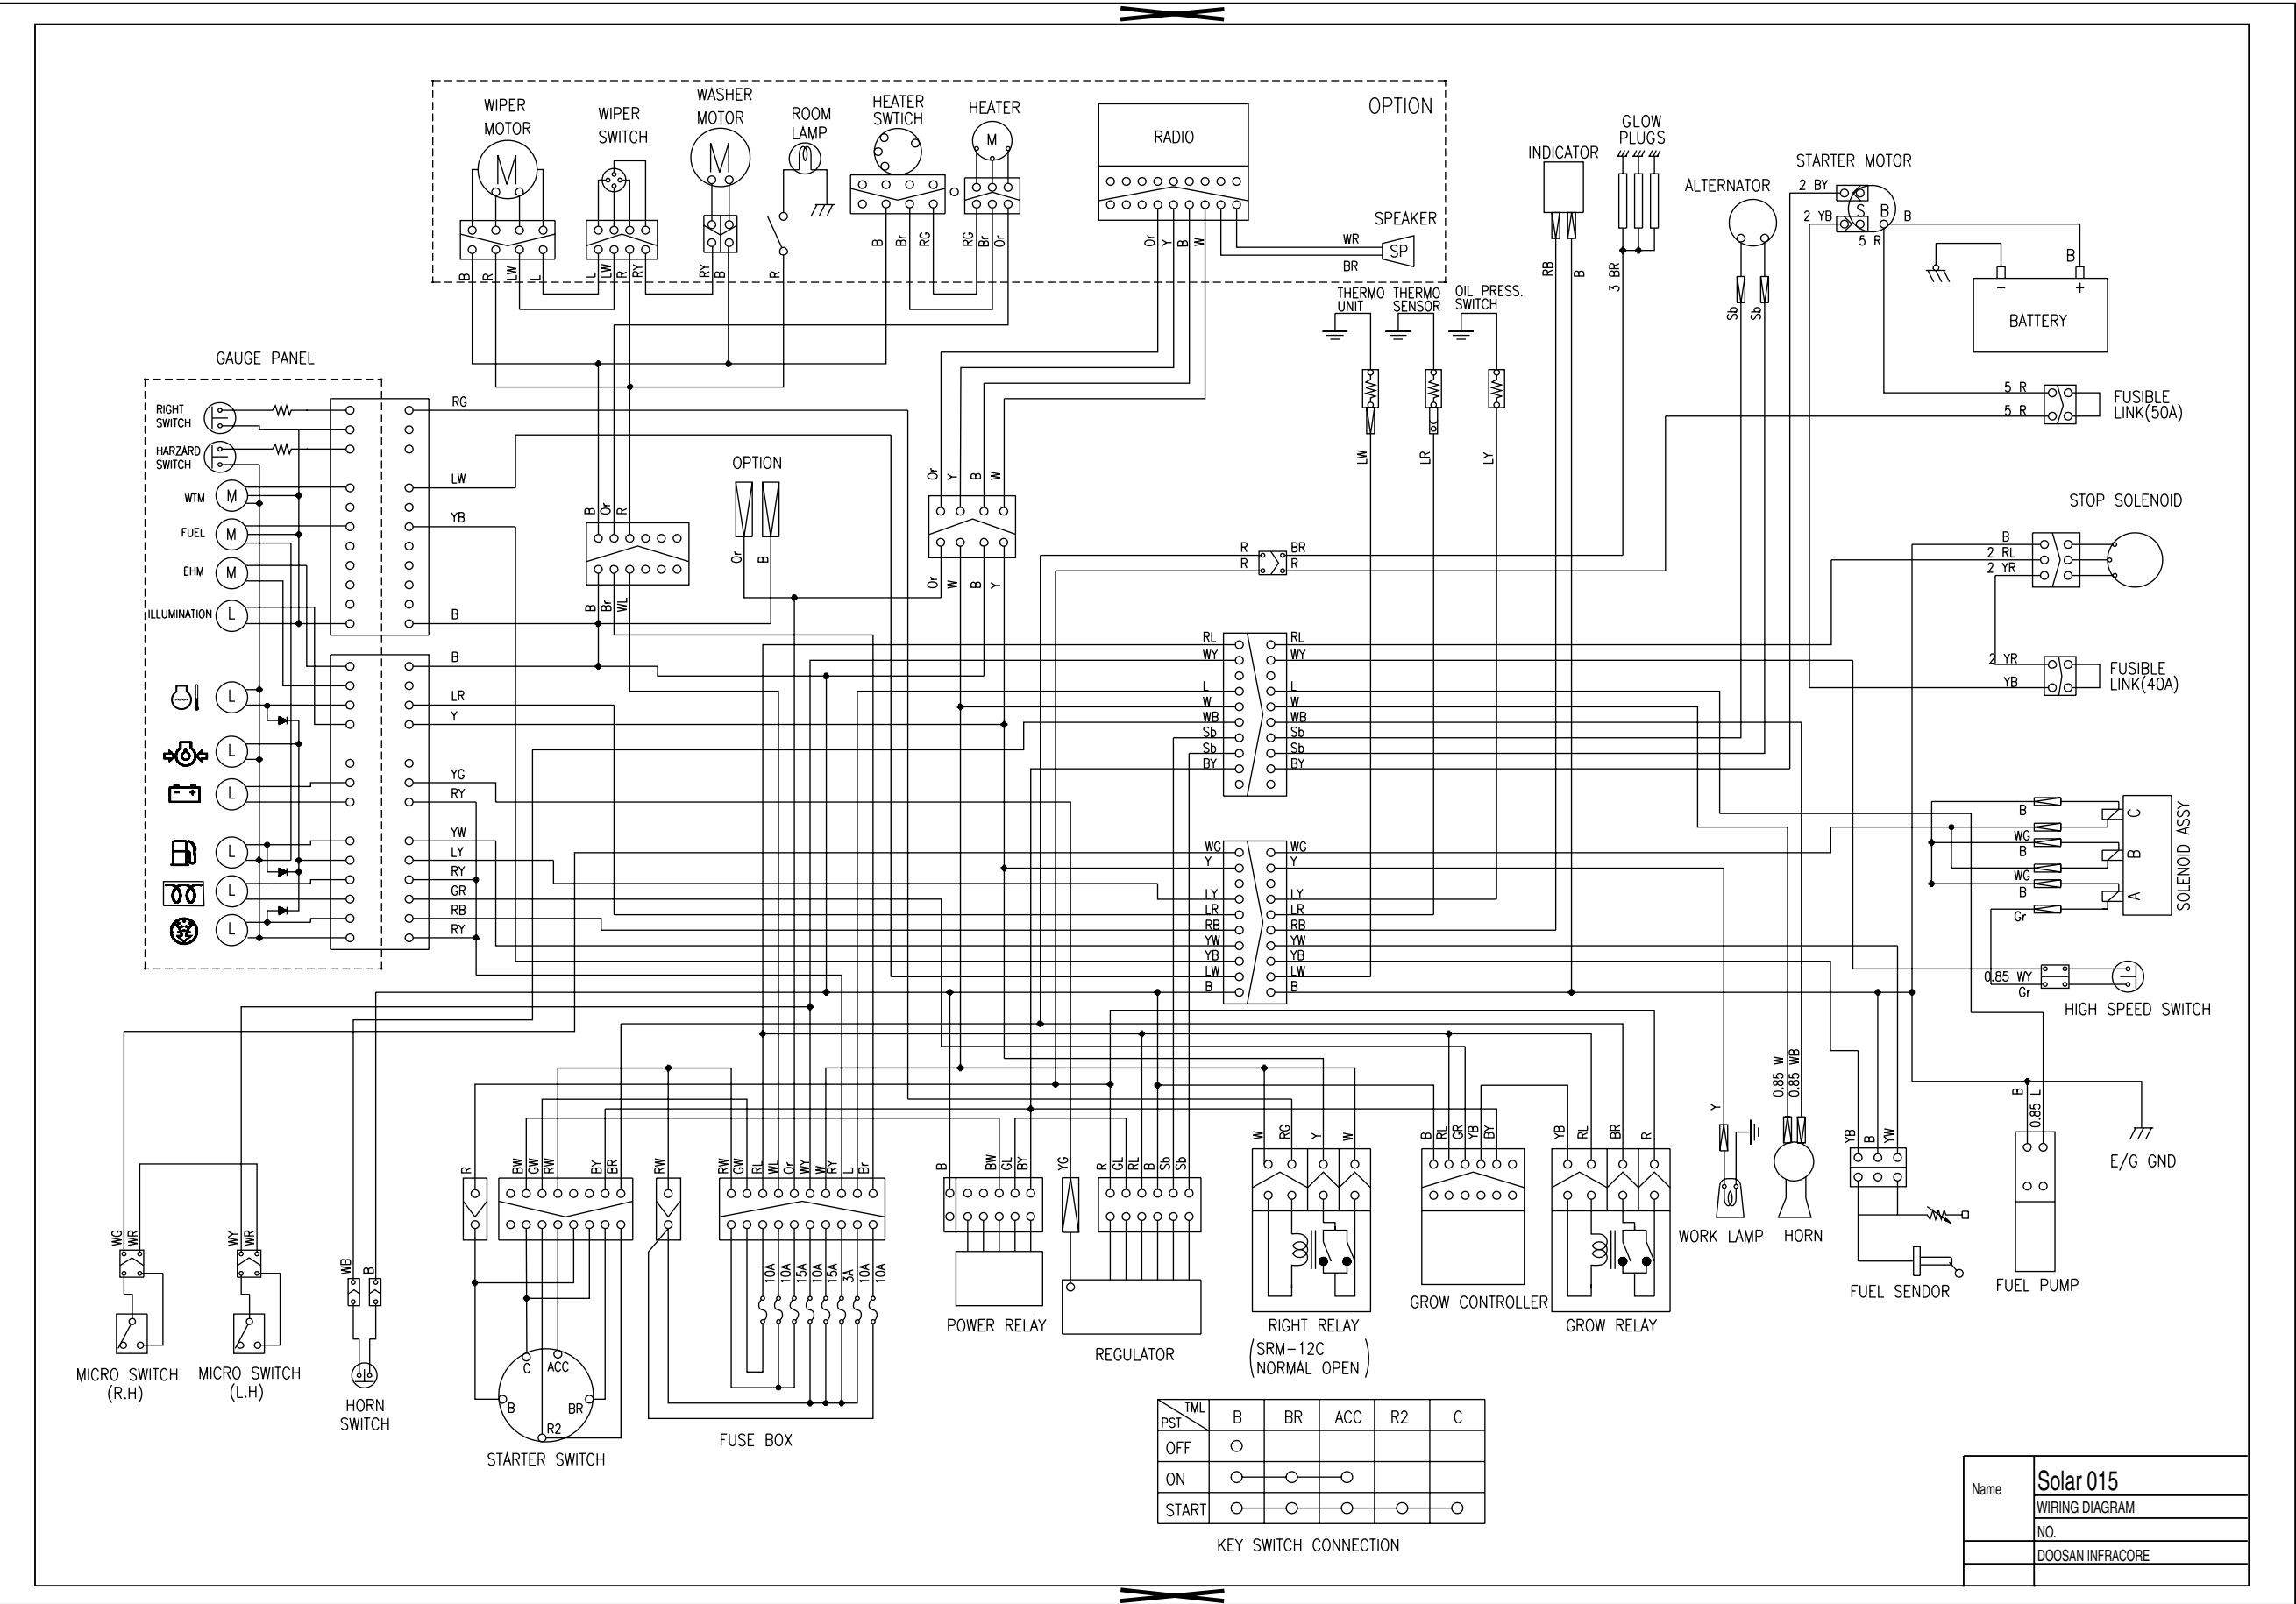

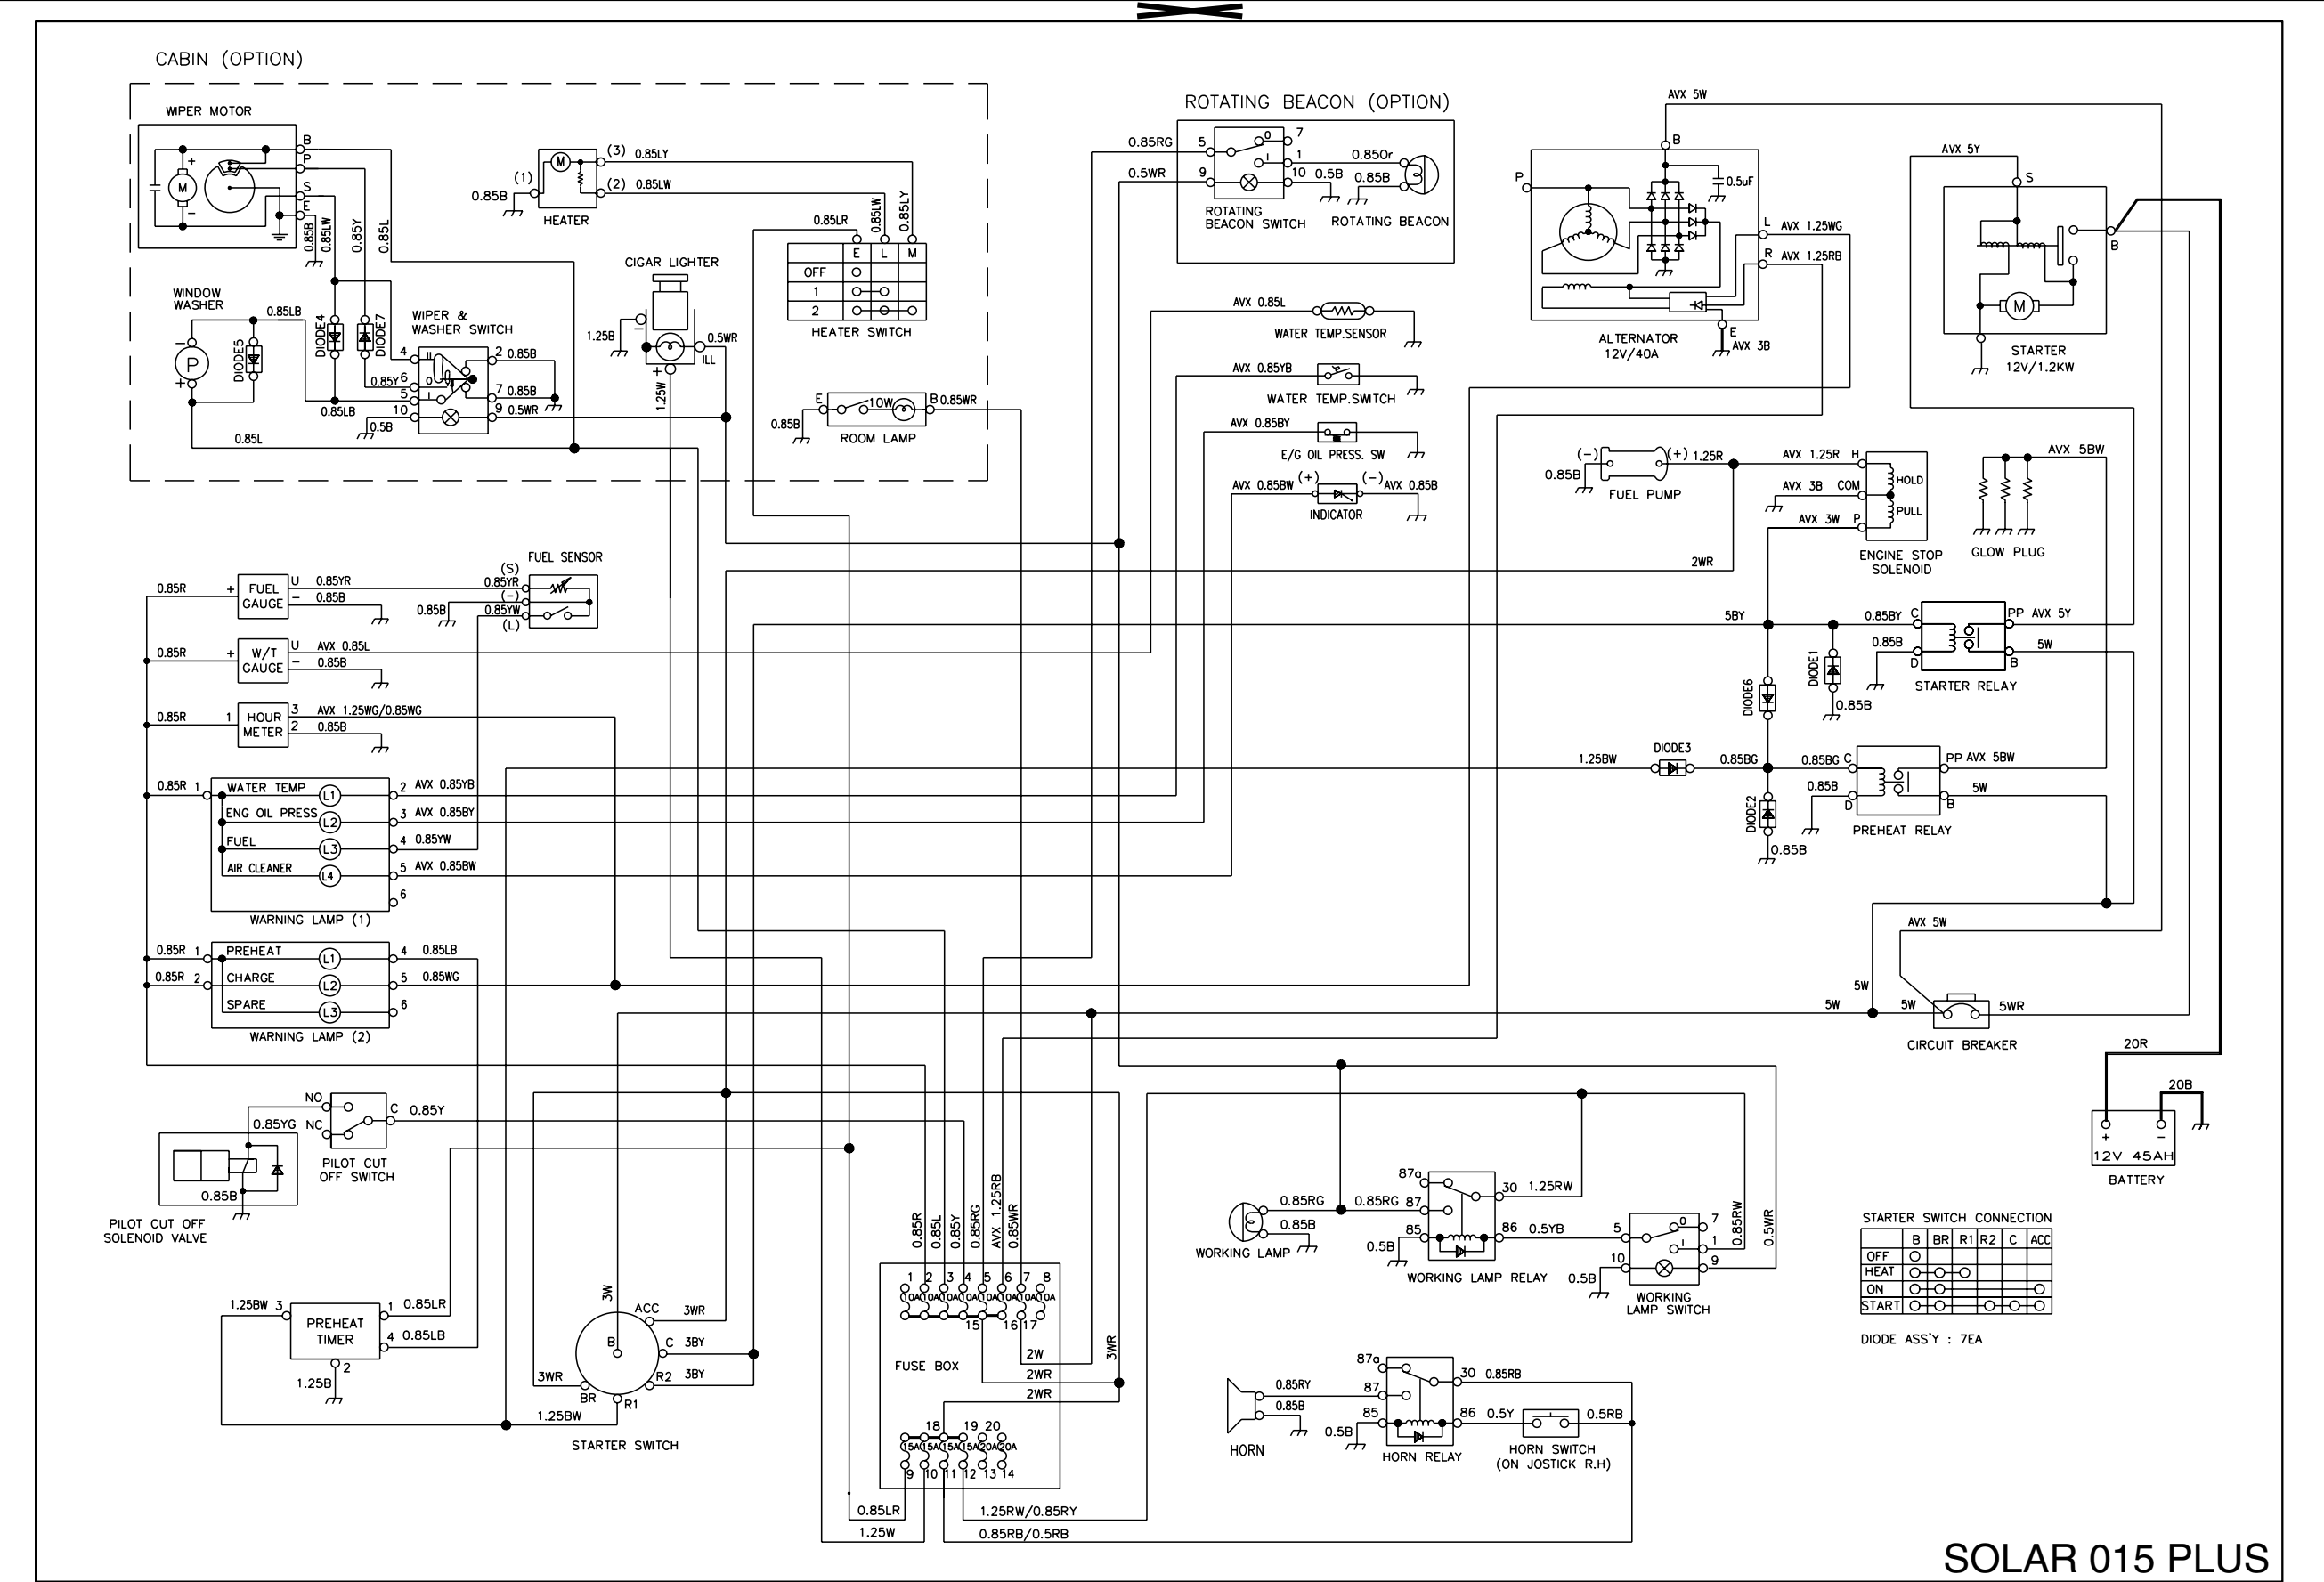

SOLAR 015 PLUS

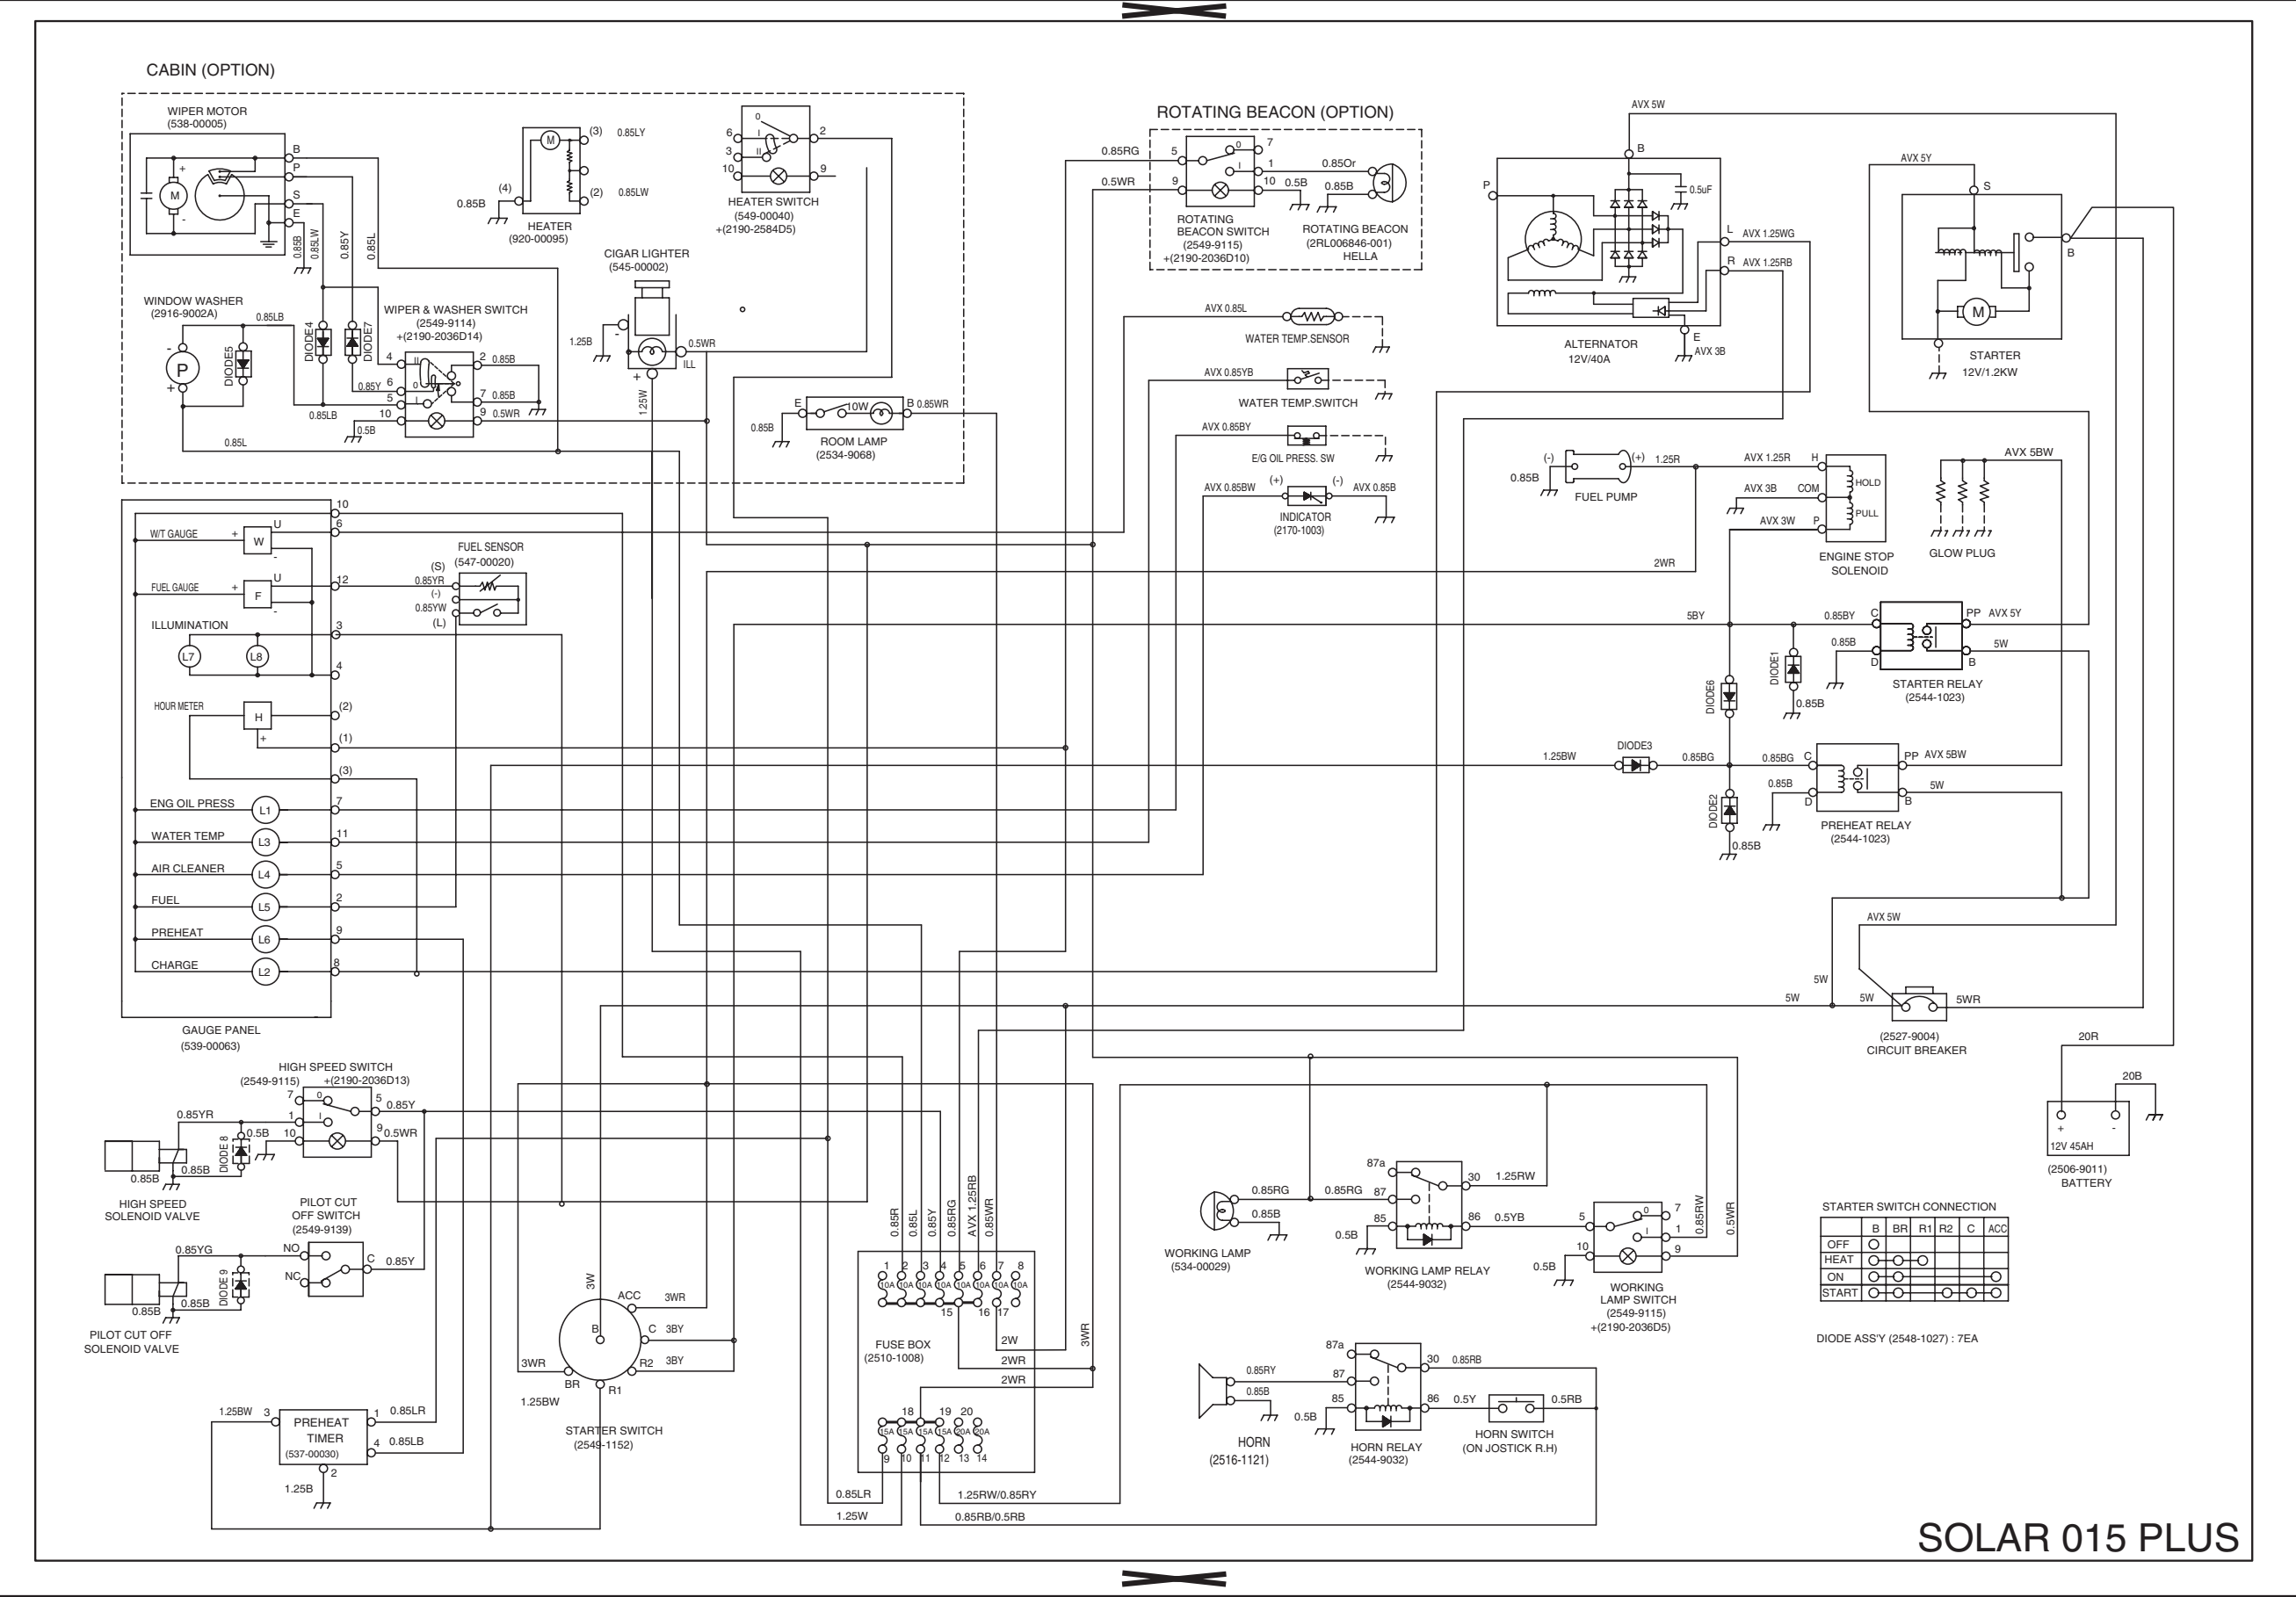


STARTER SWITCH CONNECTION


	B	BR	R1	R2	C	ACC
OFF						
HEAT						
ON						
START						


DIODE ASS'Y (2548-1027) : 7EA


SOLAR 015 PLUS

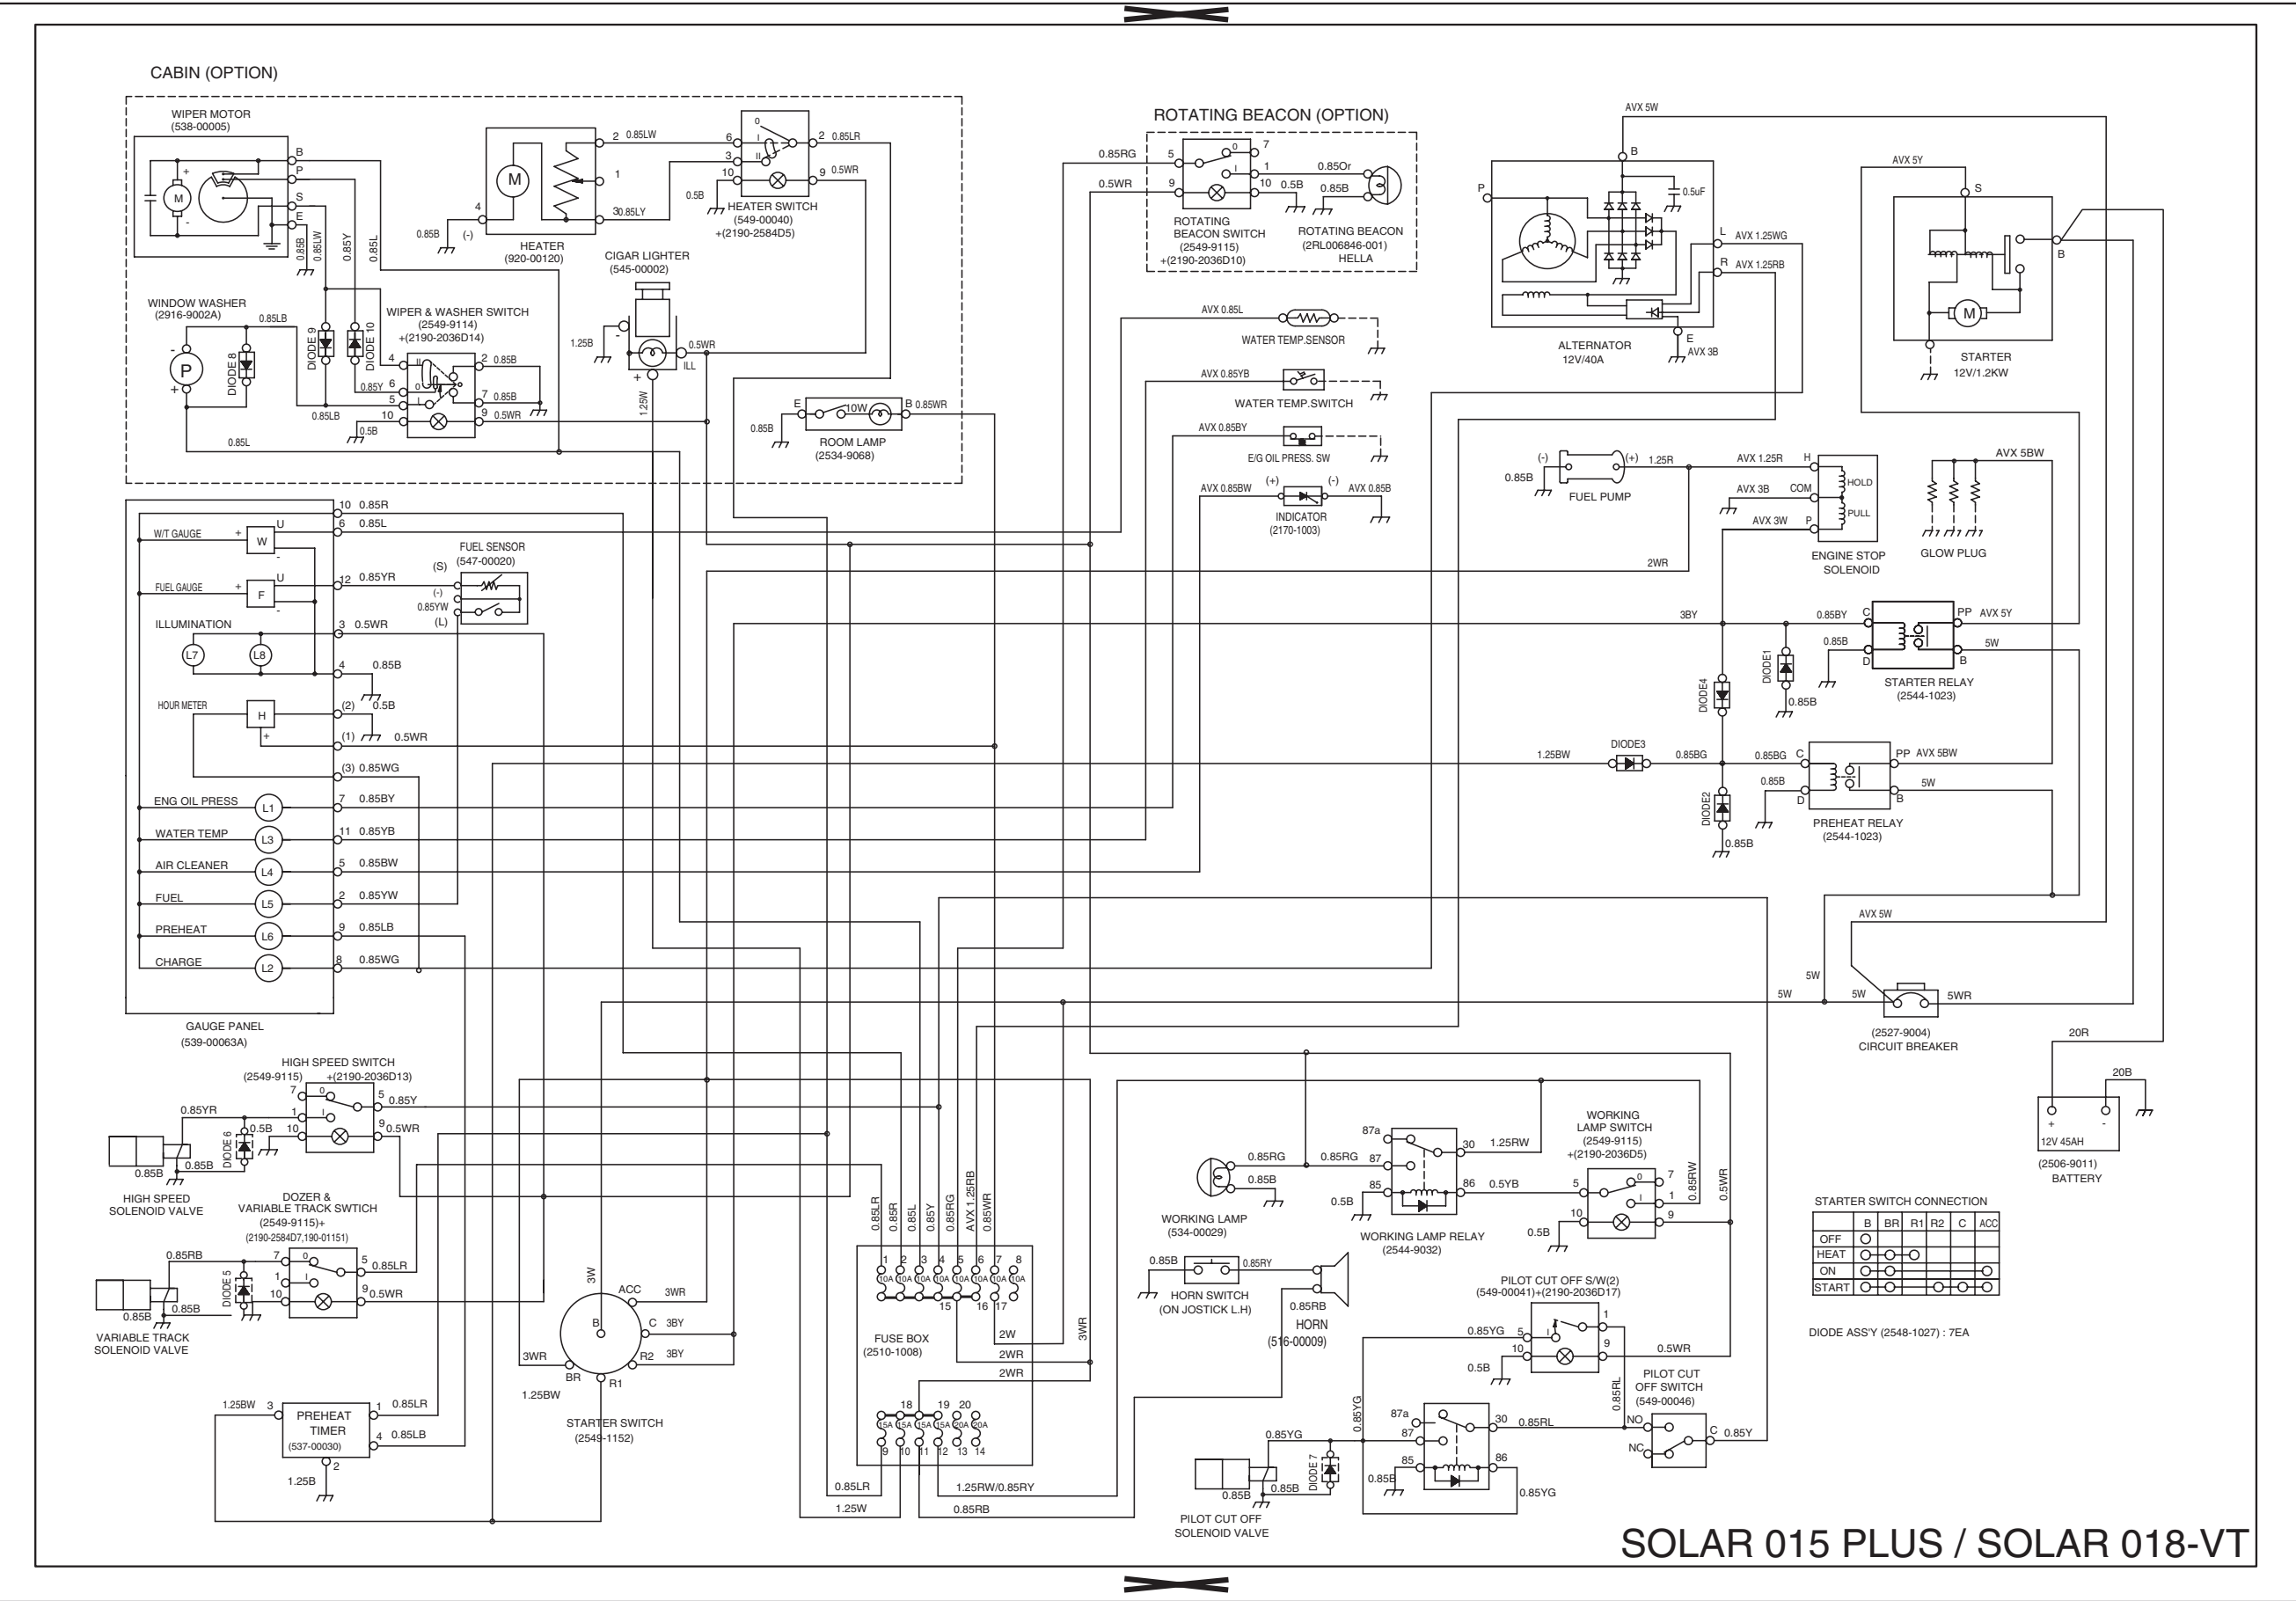


SOLAR 015 PLUS / SOLAR 018-VT

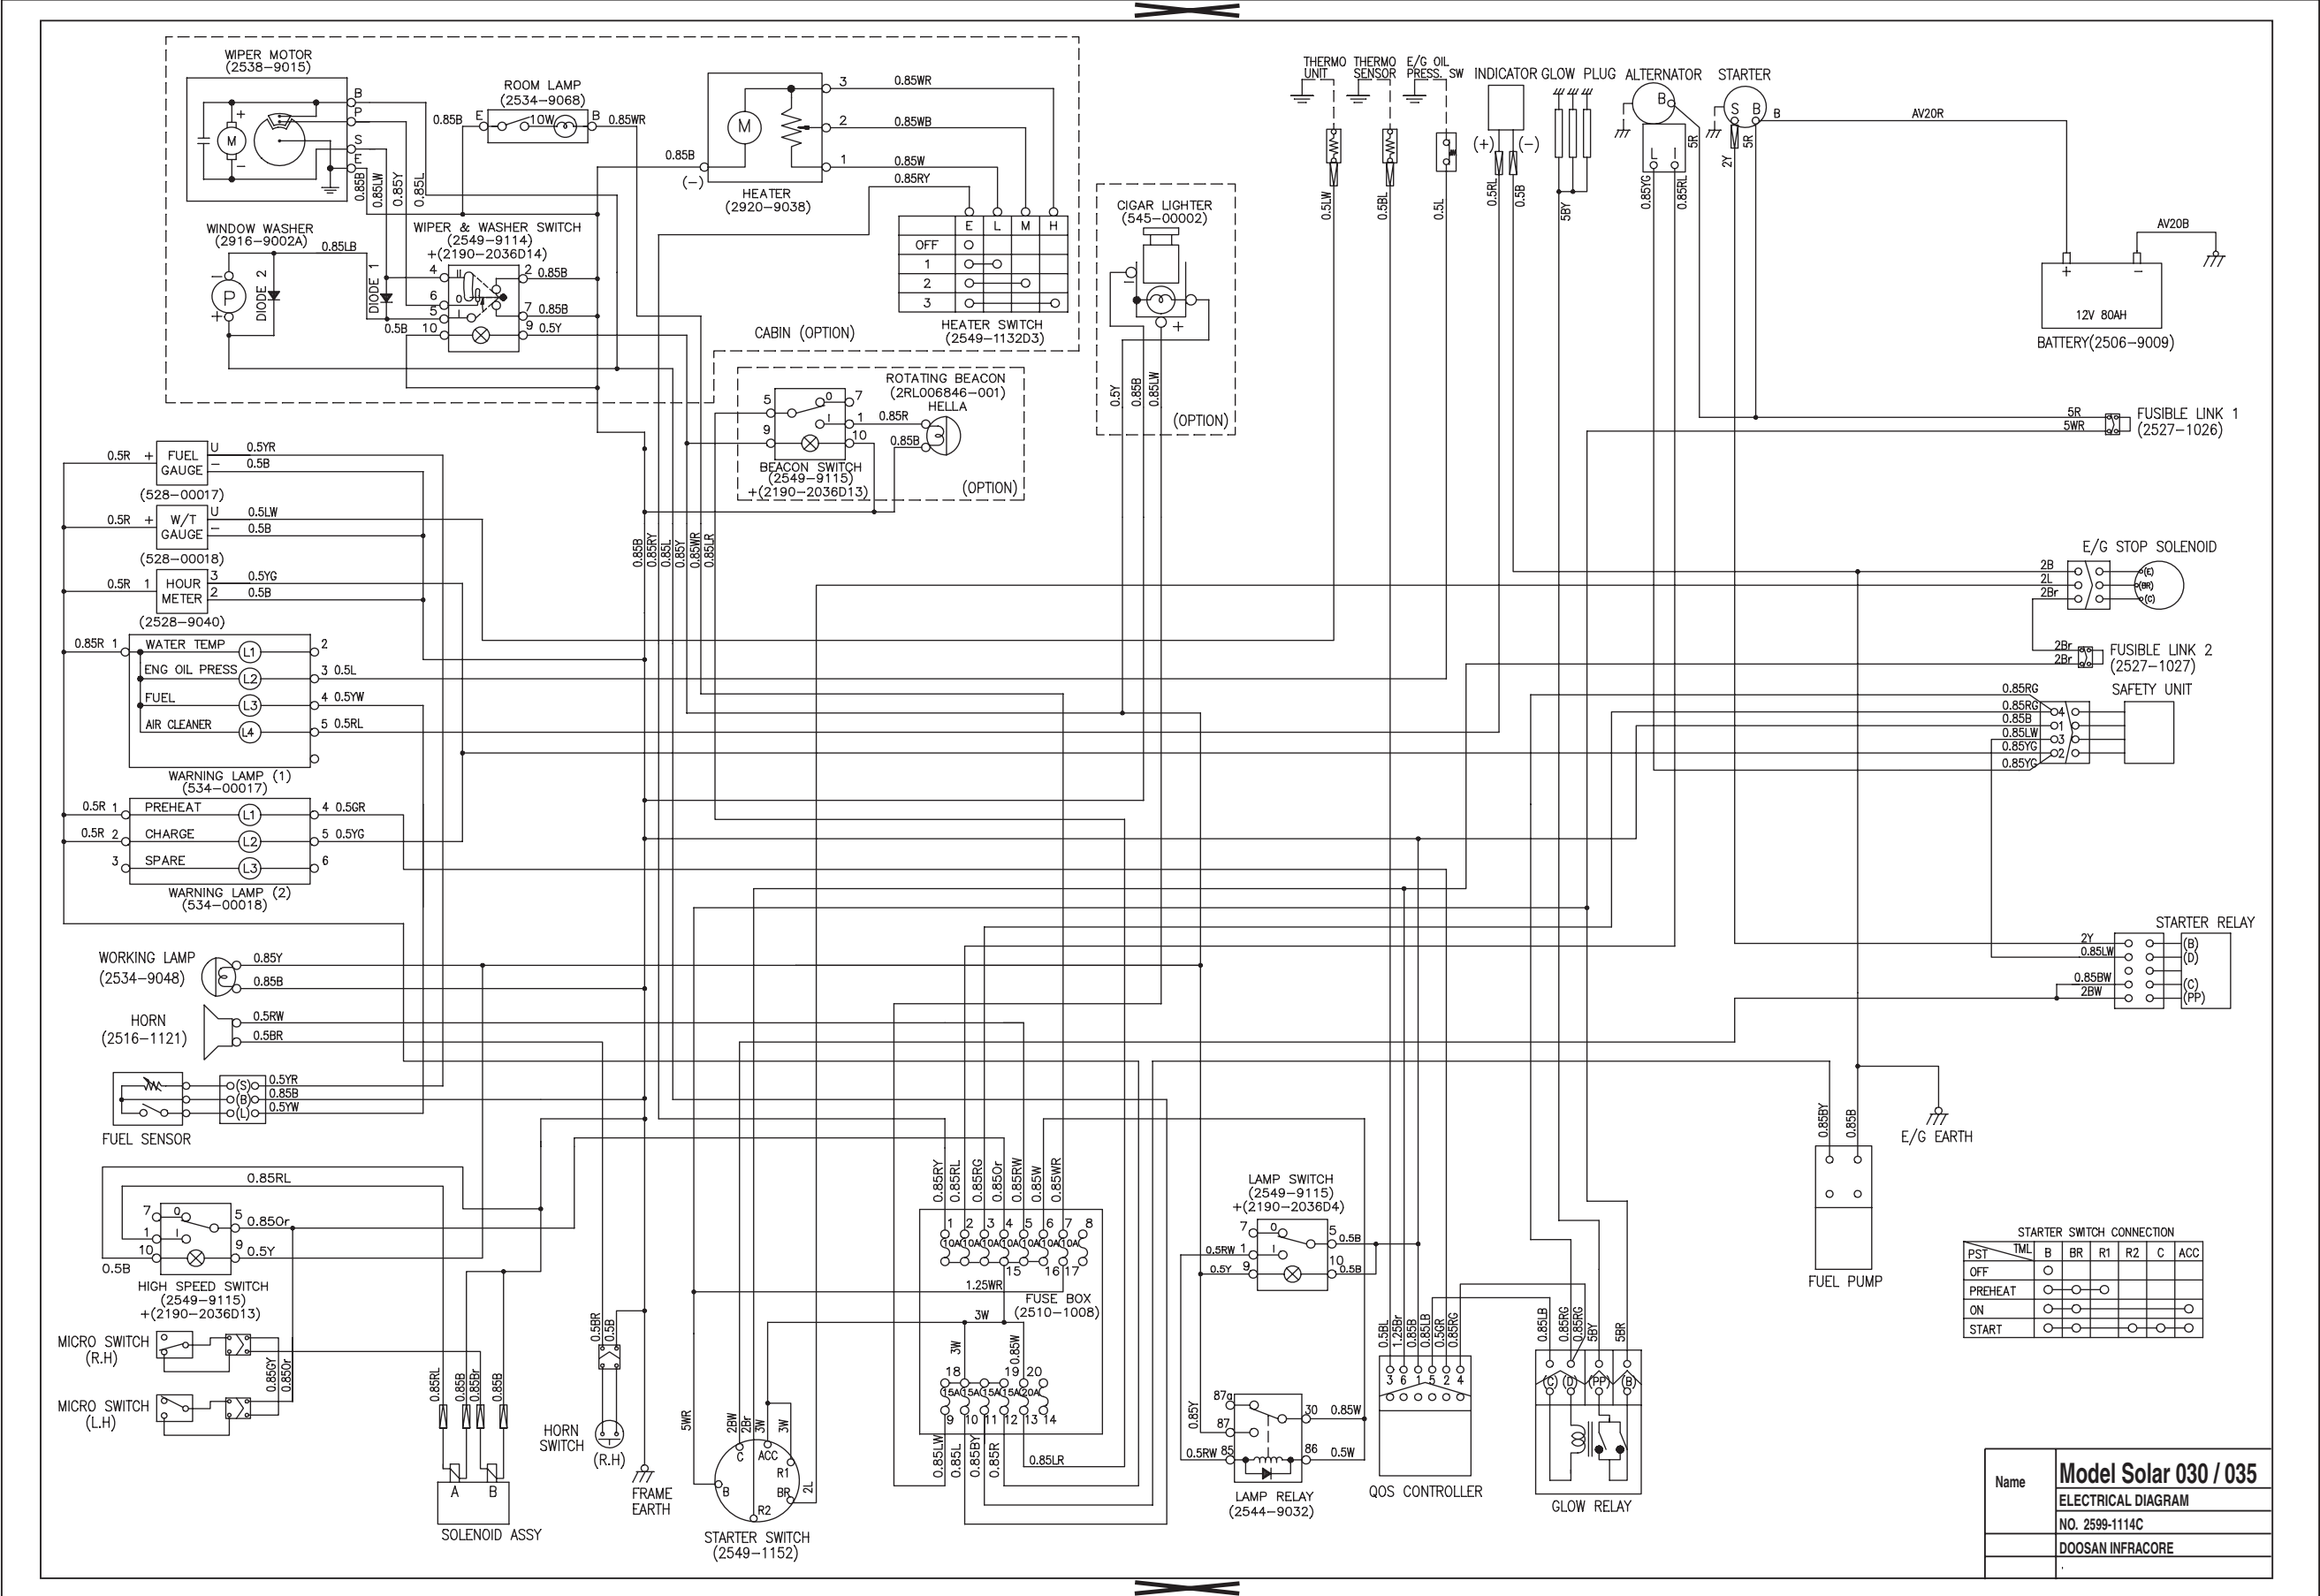


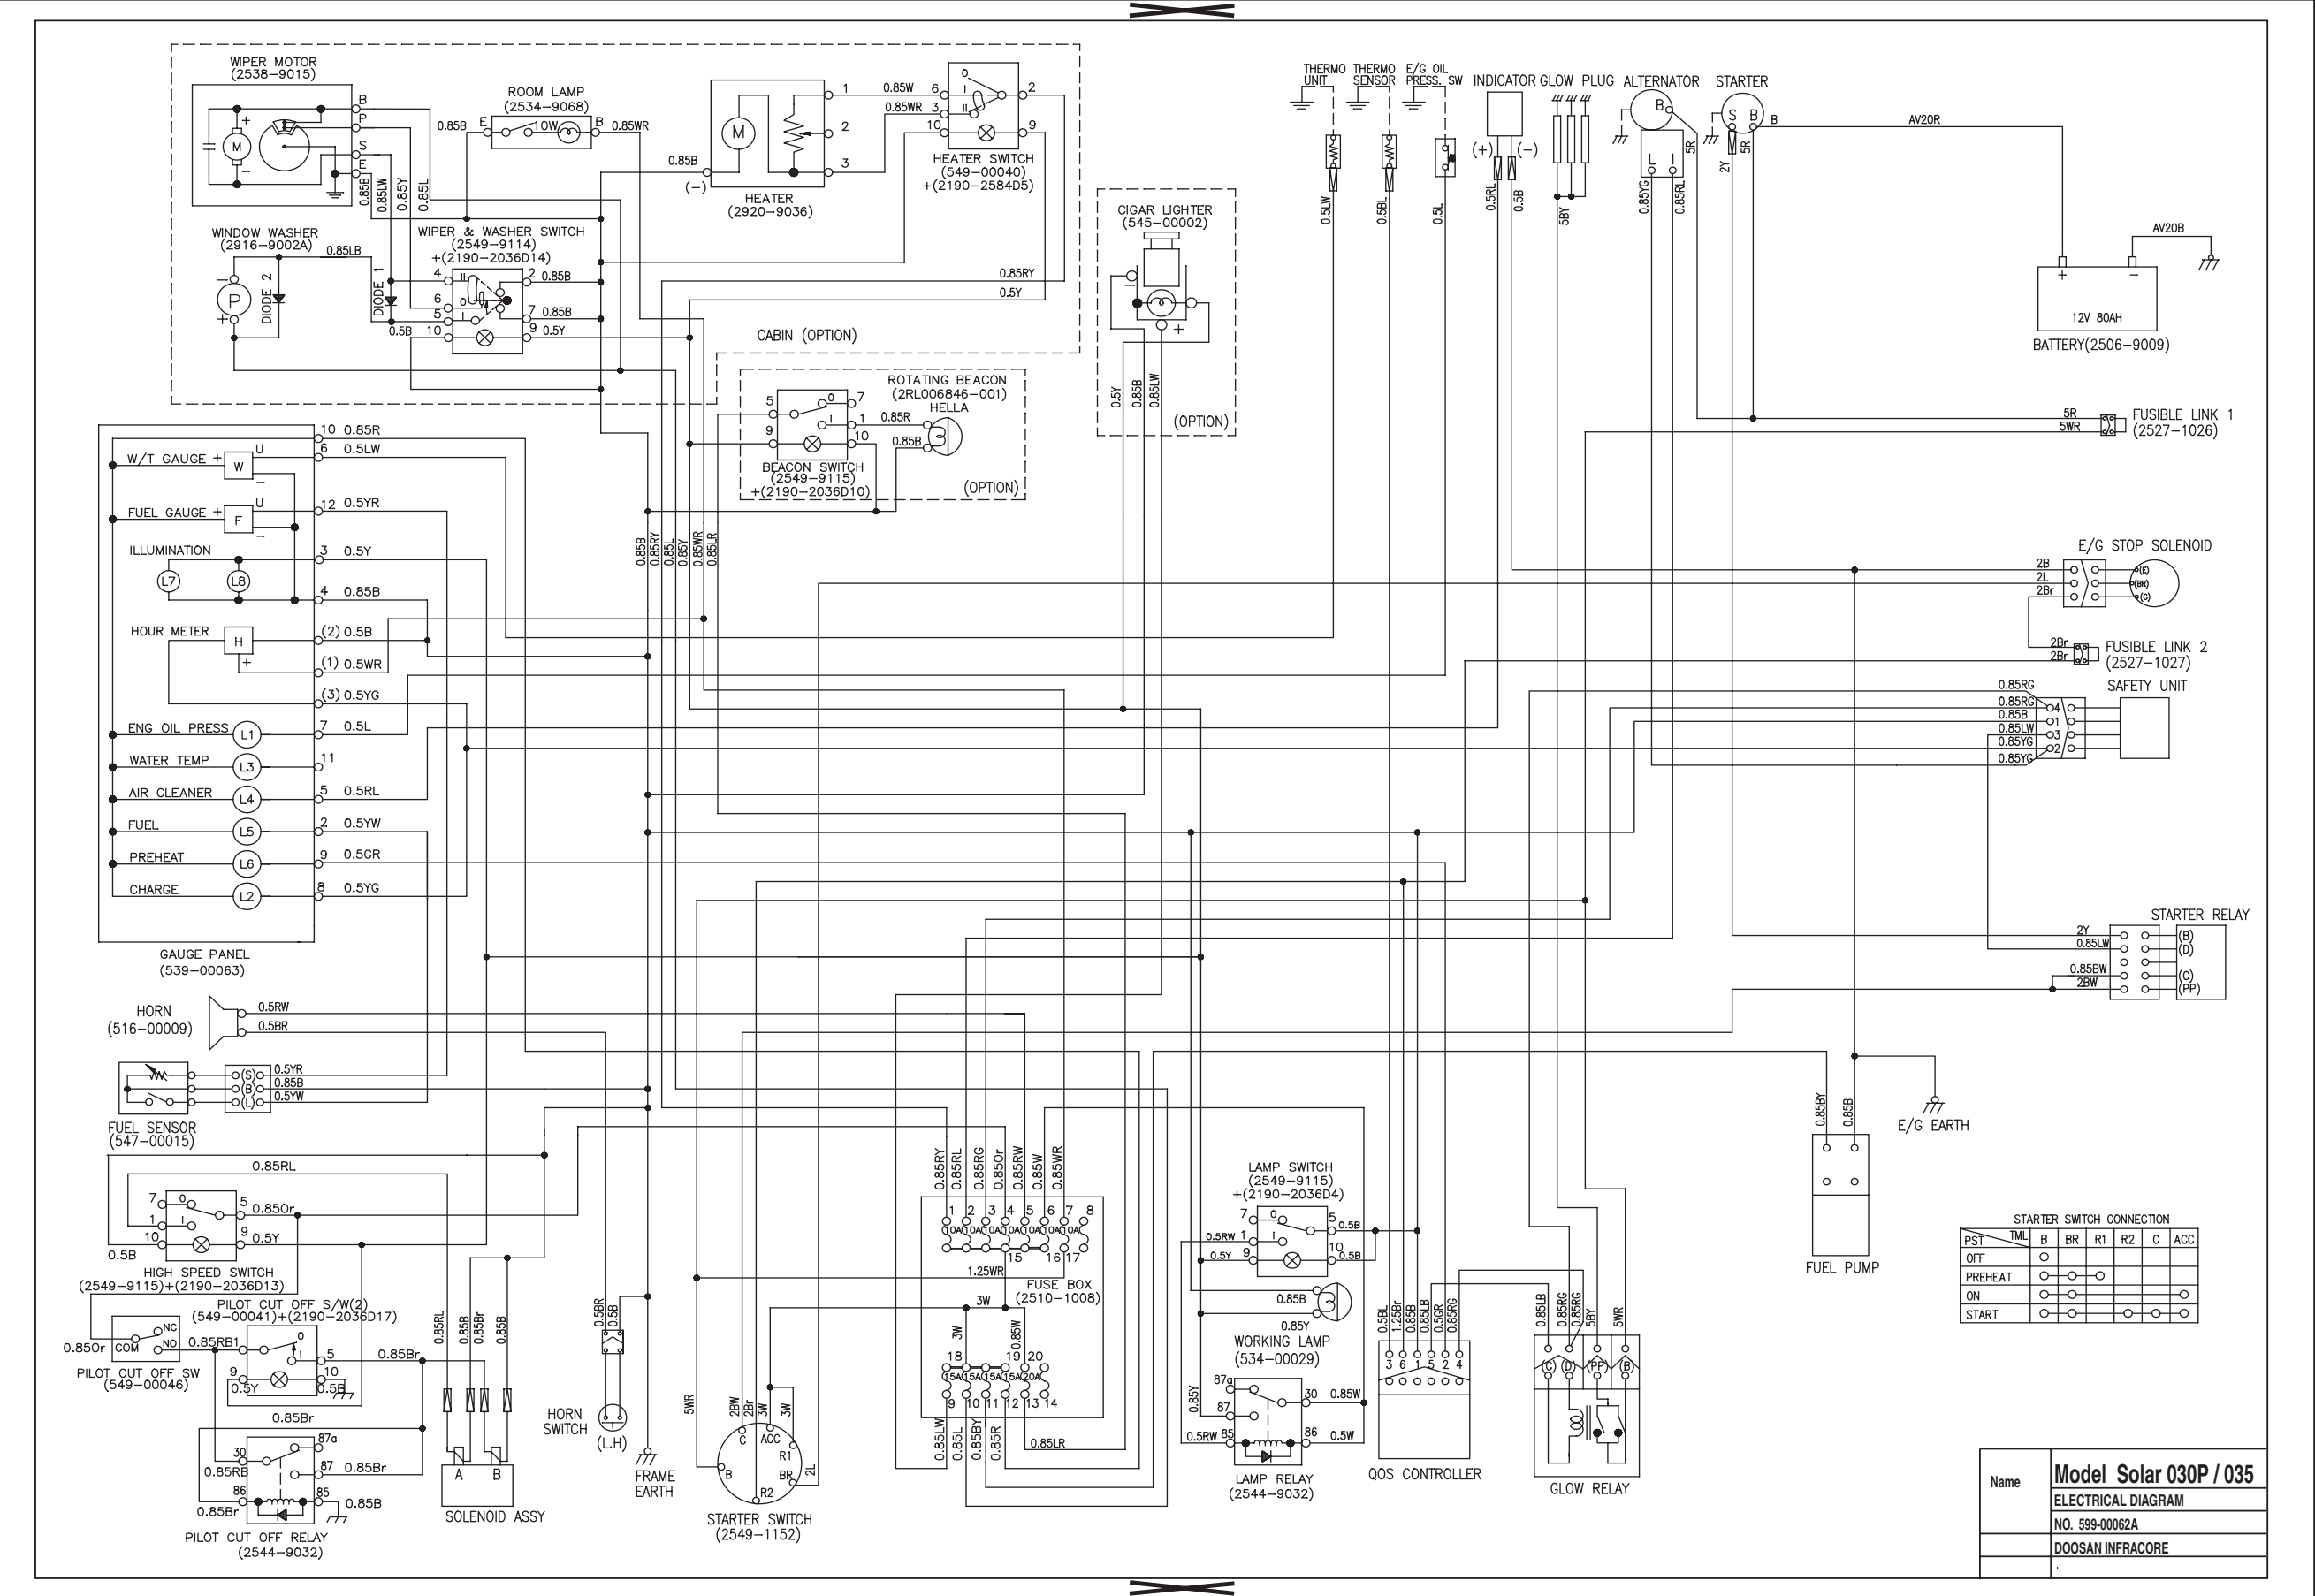

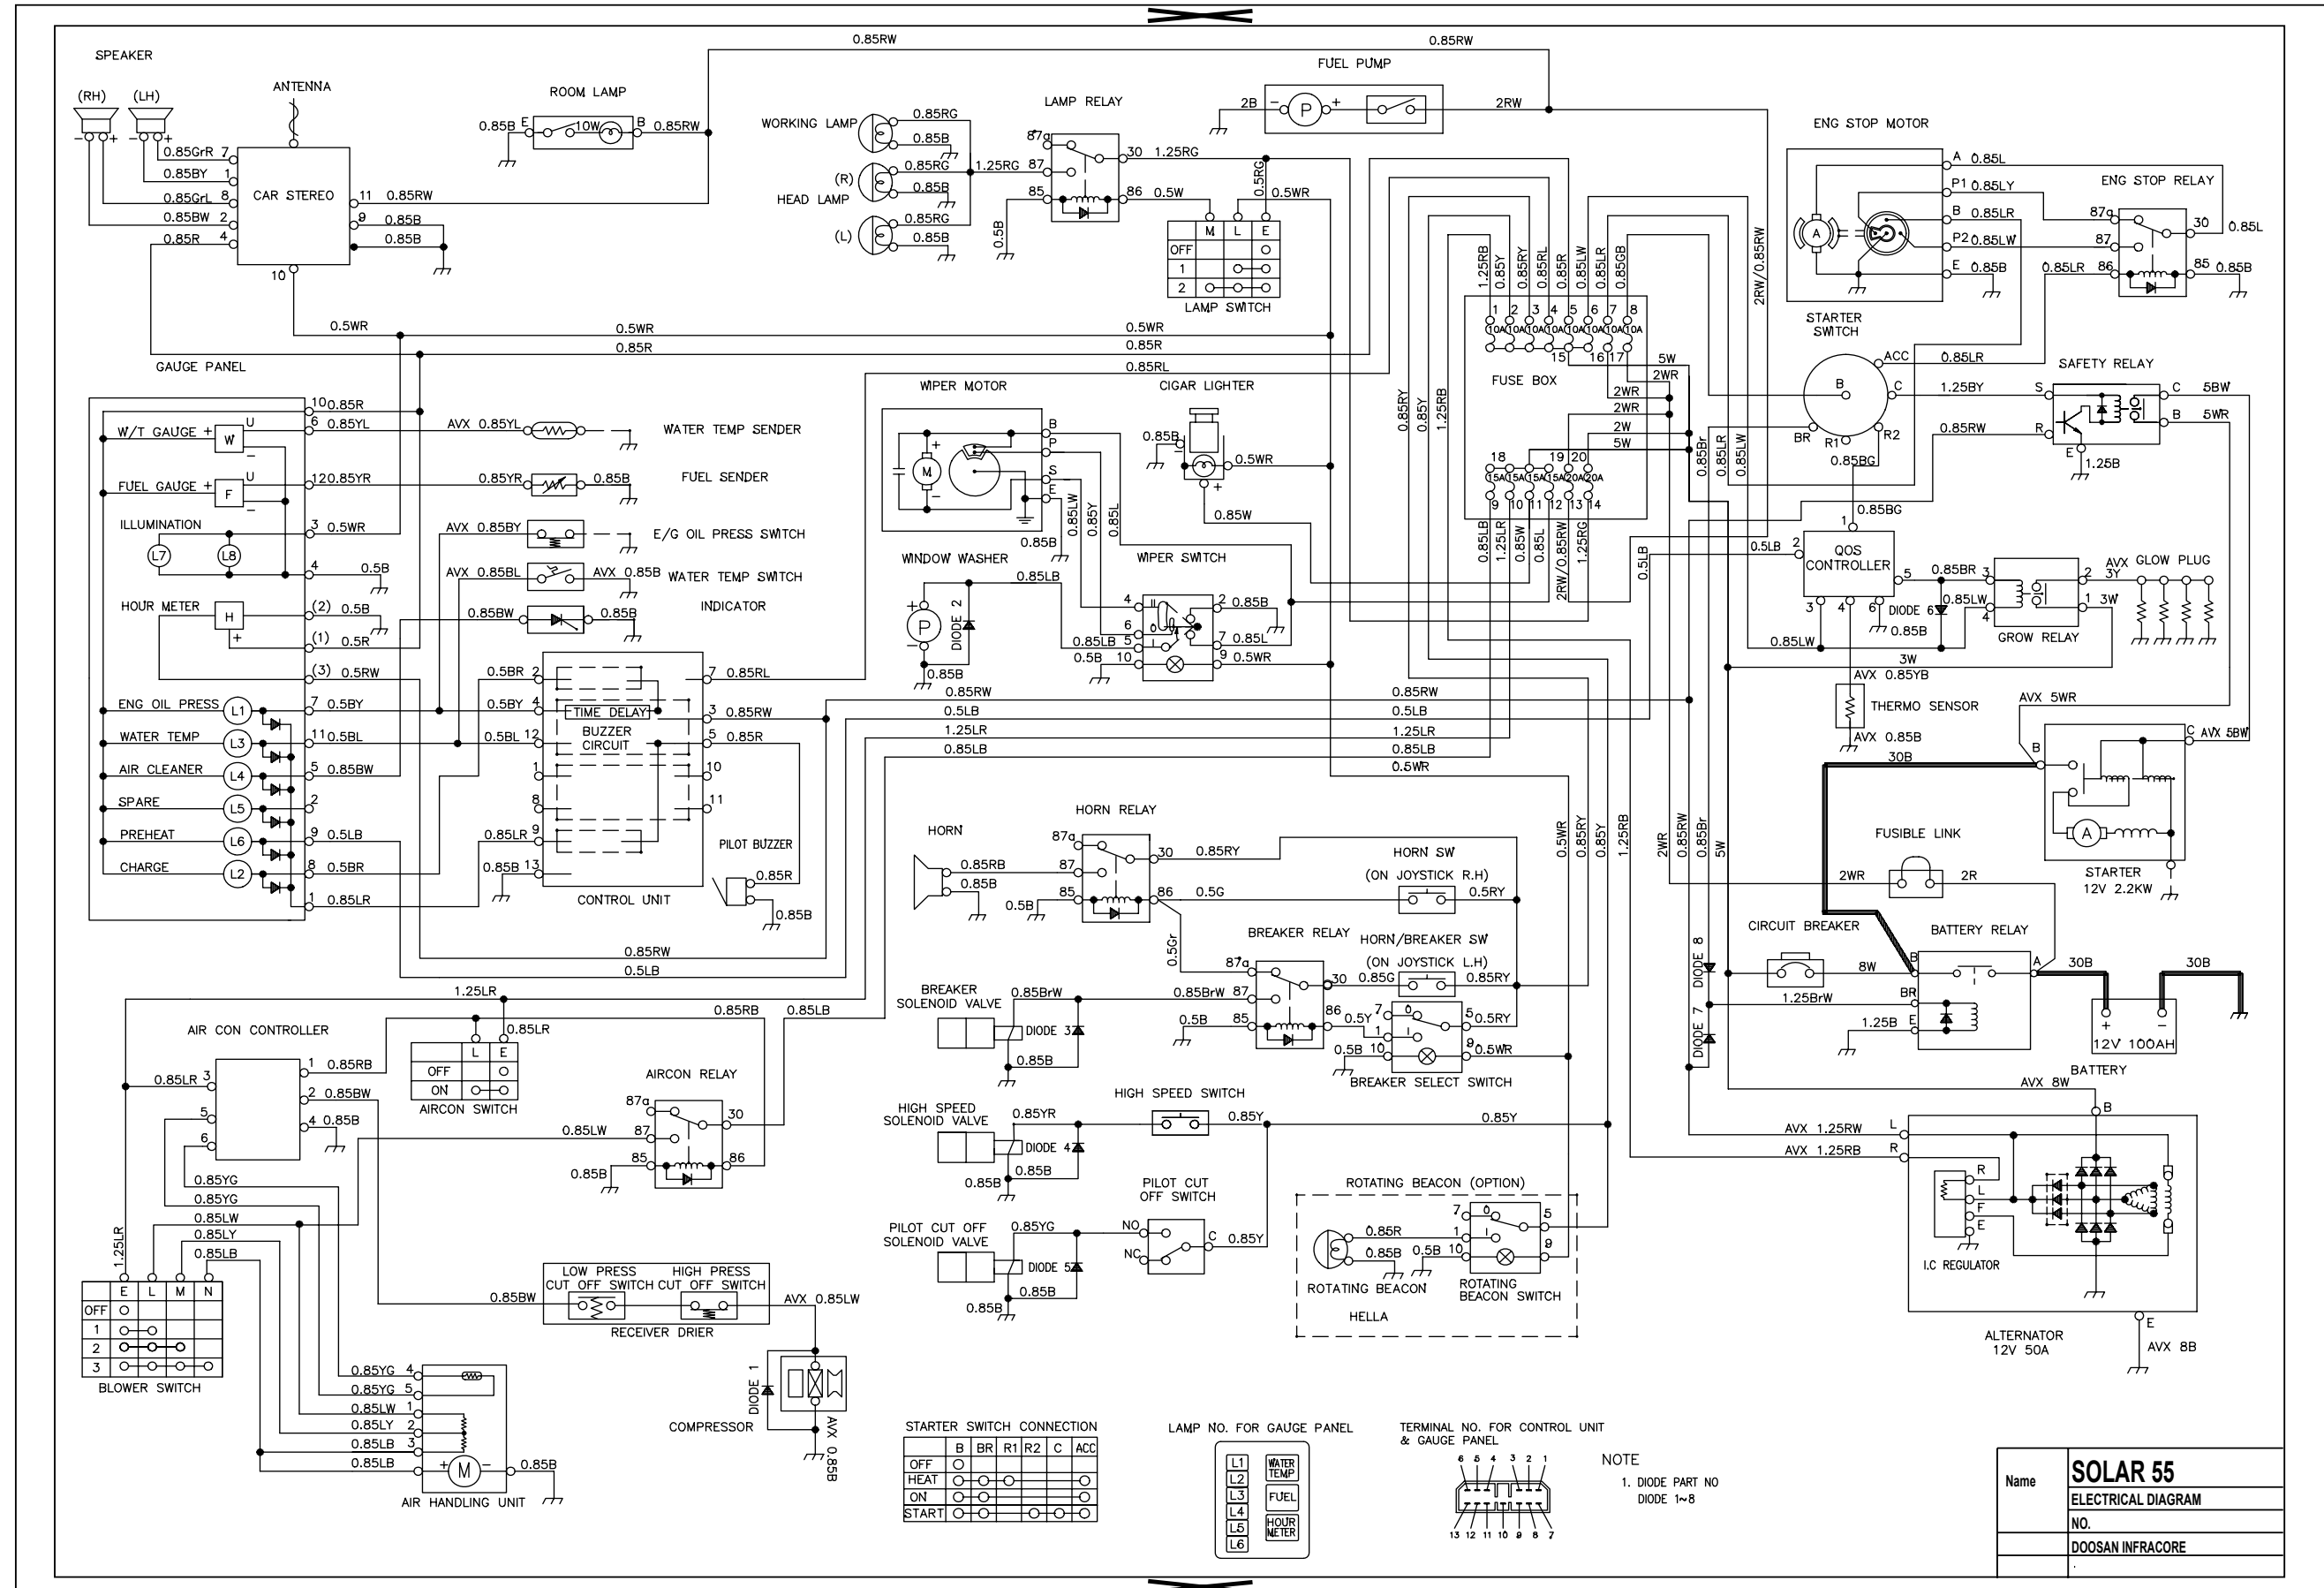


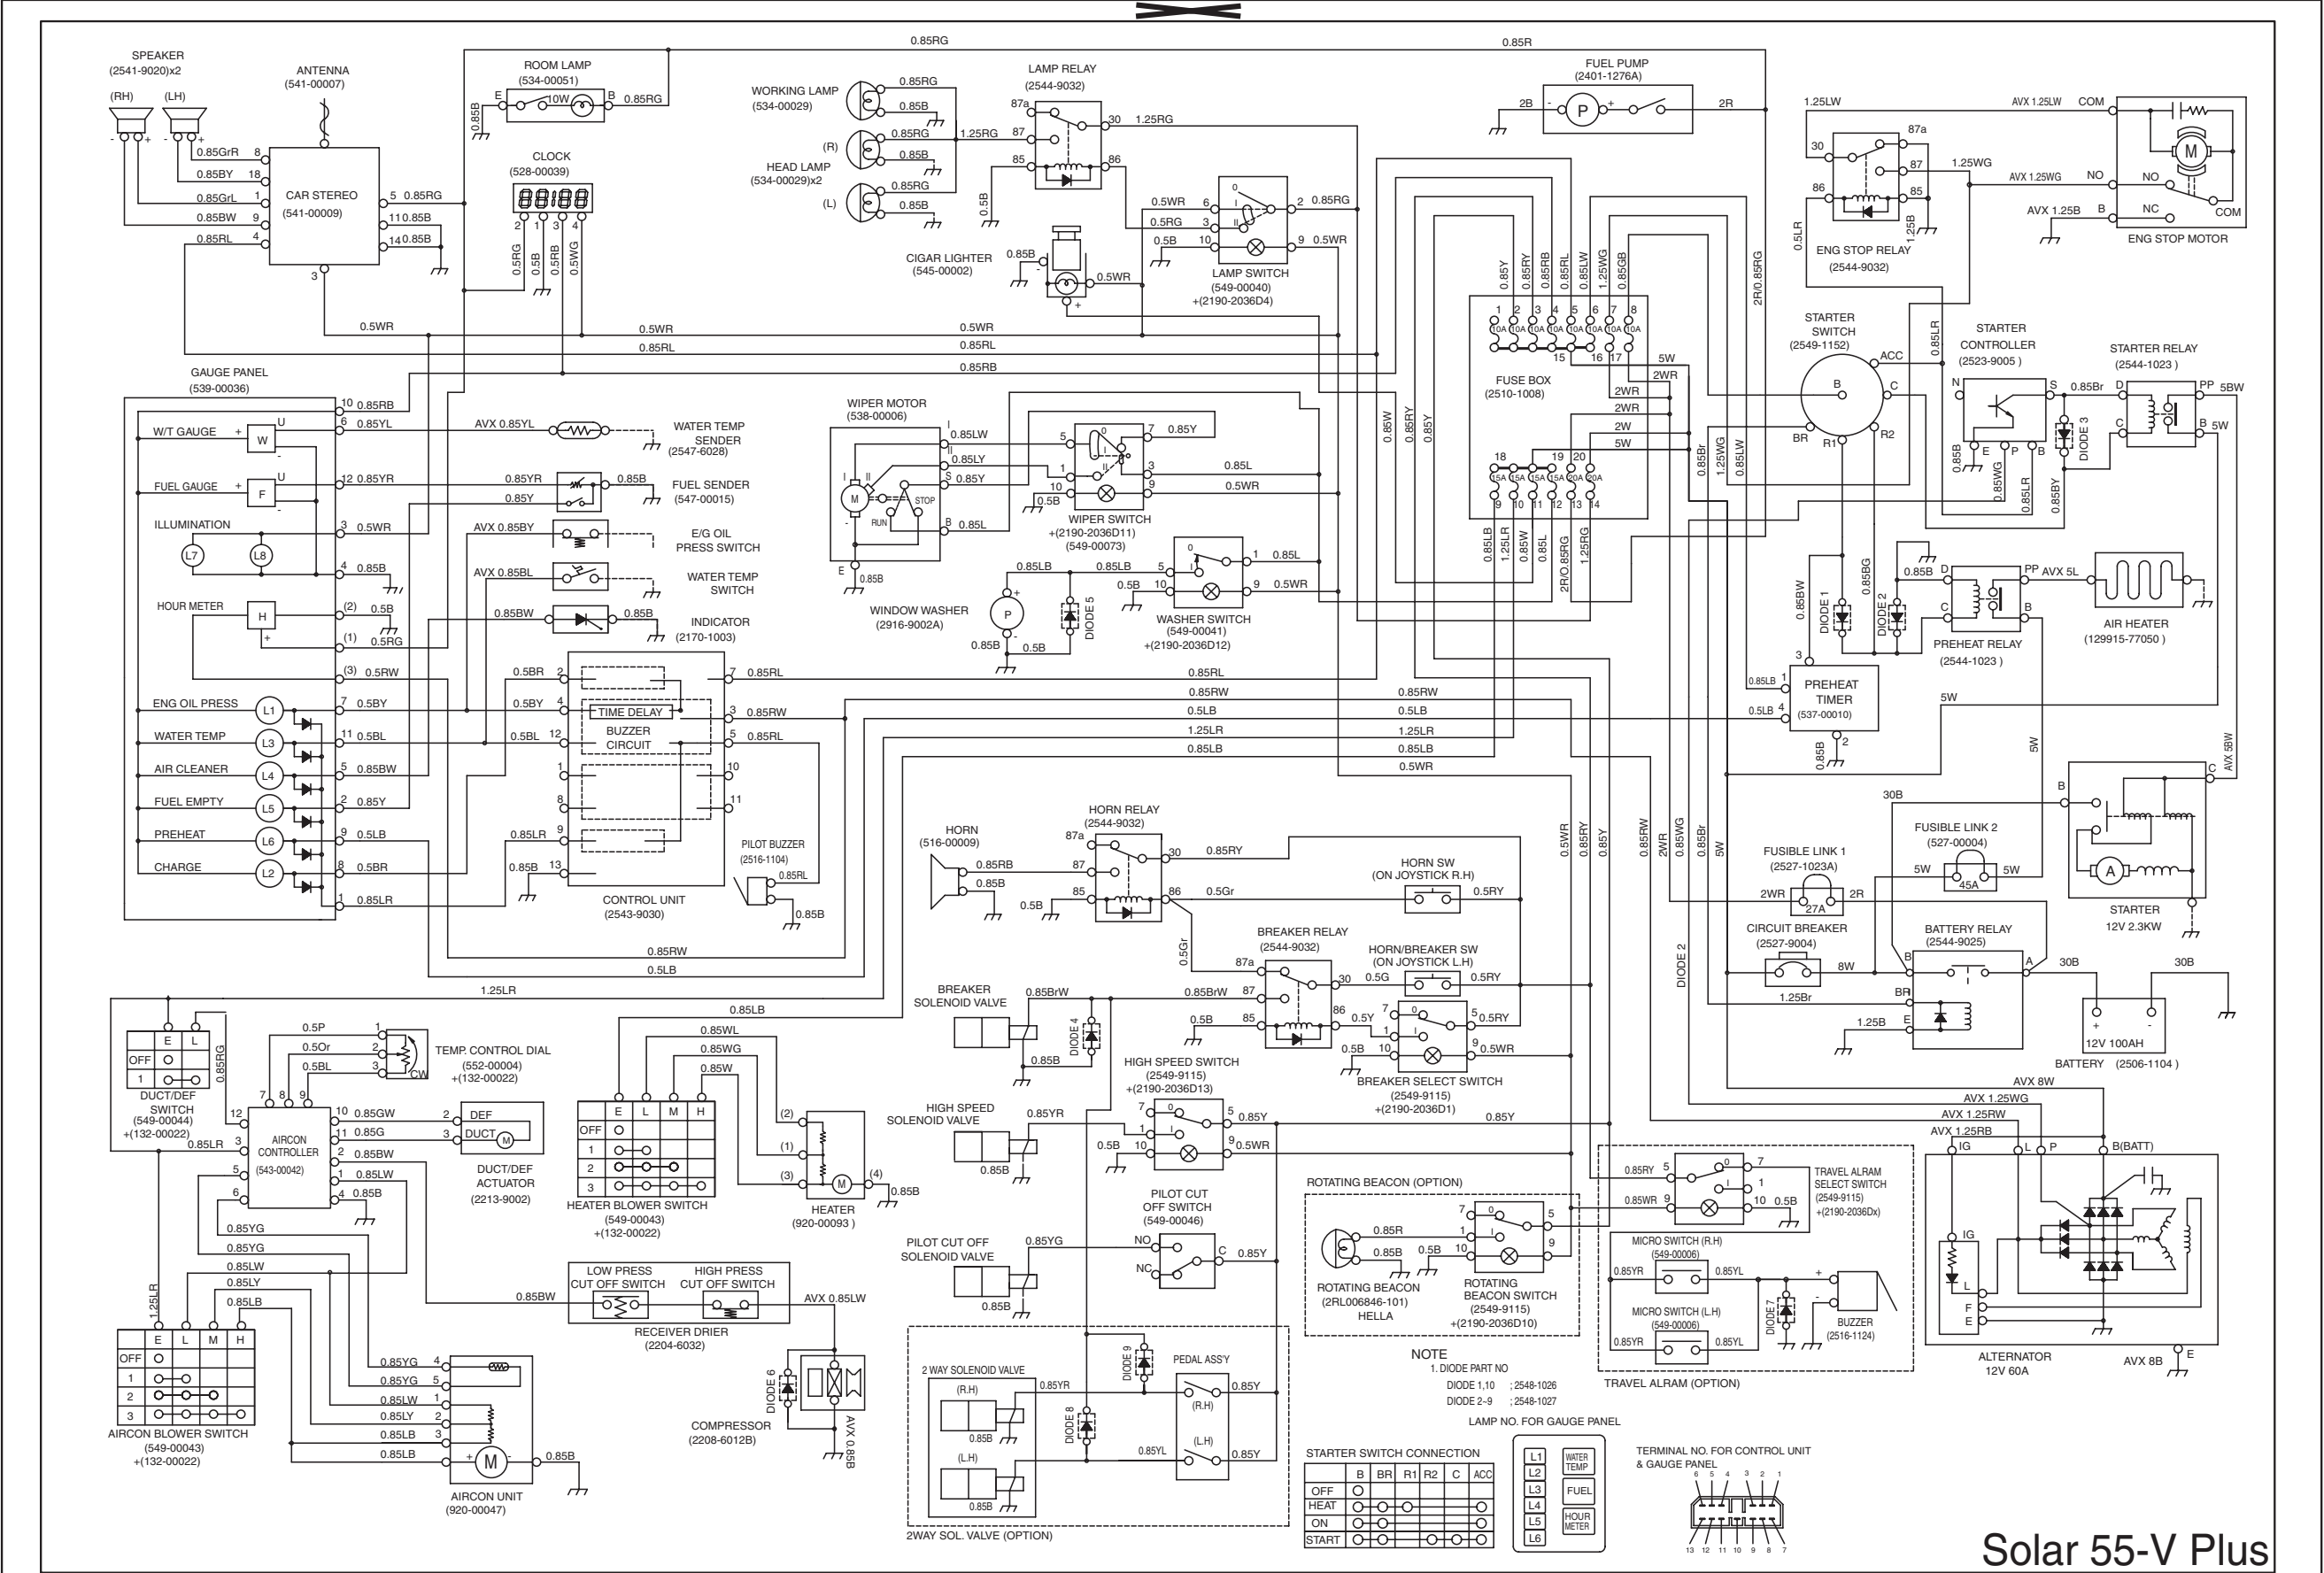


Solar 55-V Plus

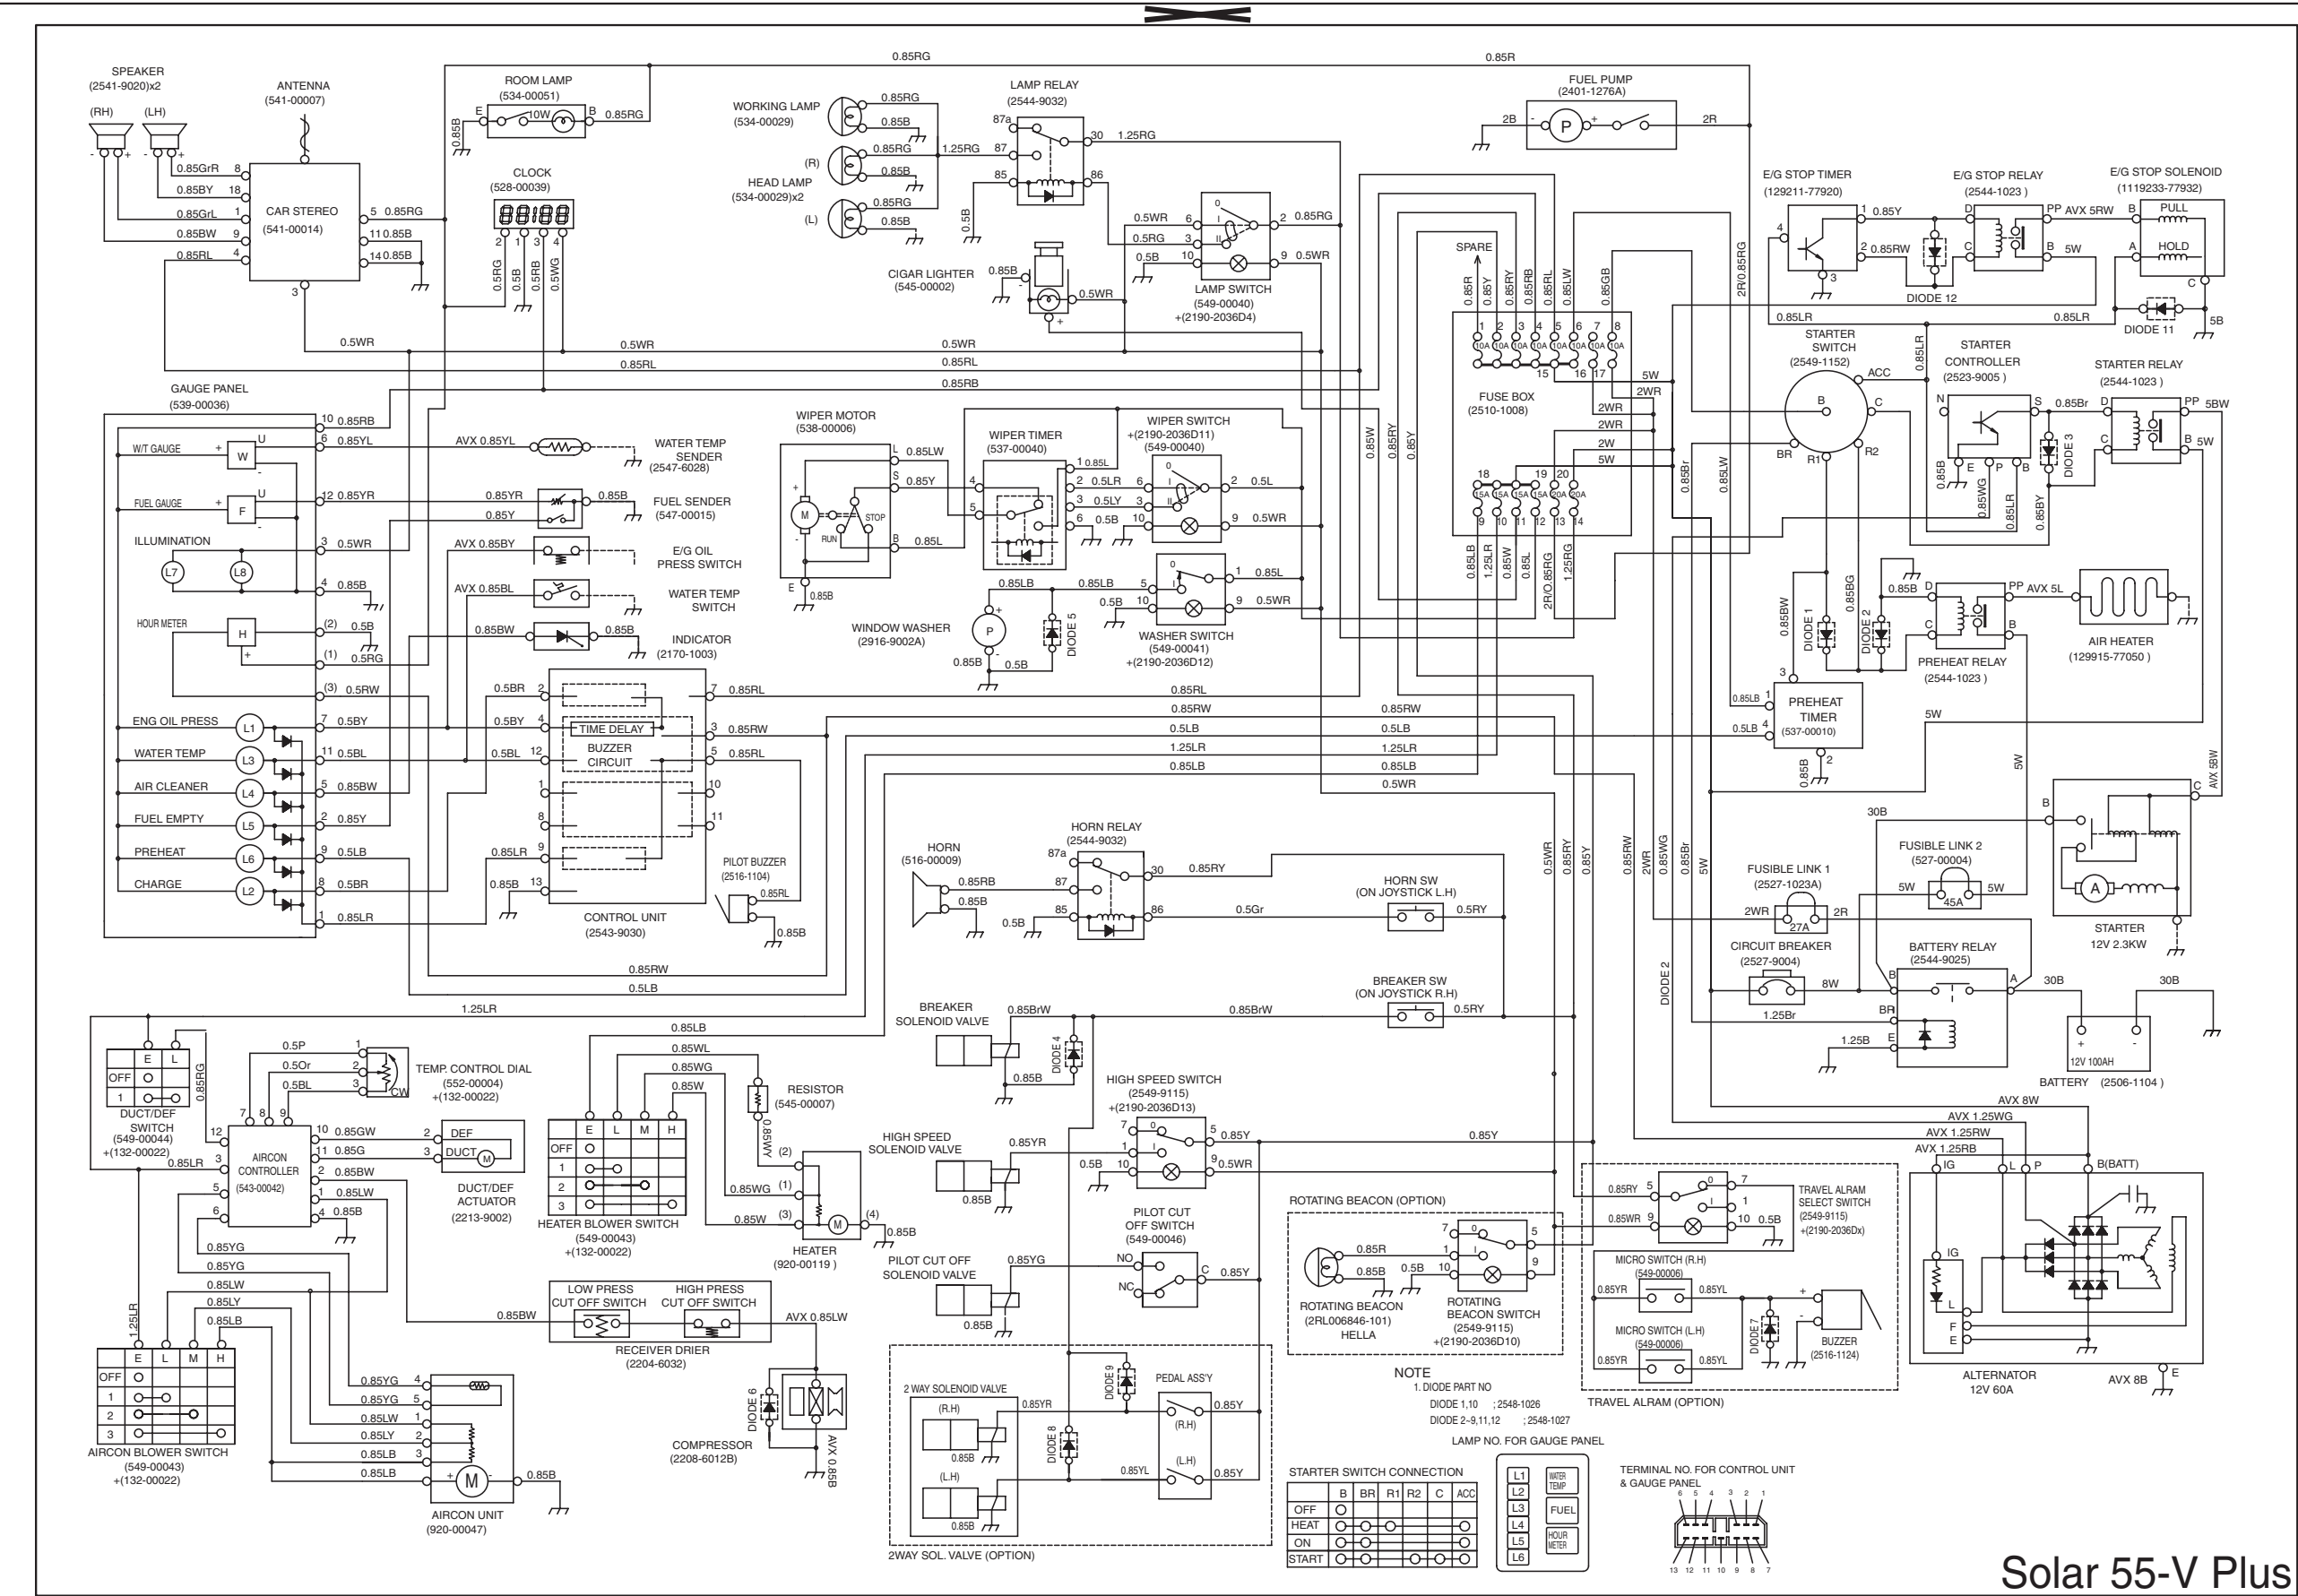


Solar 55-V Plus

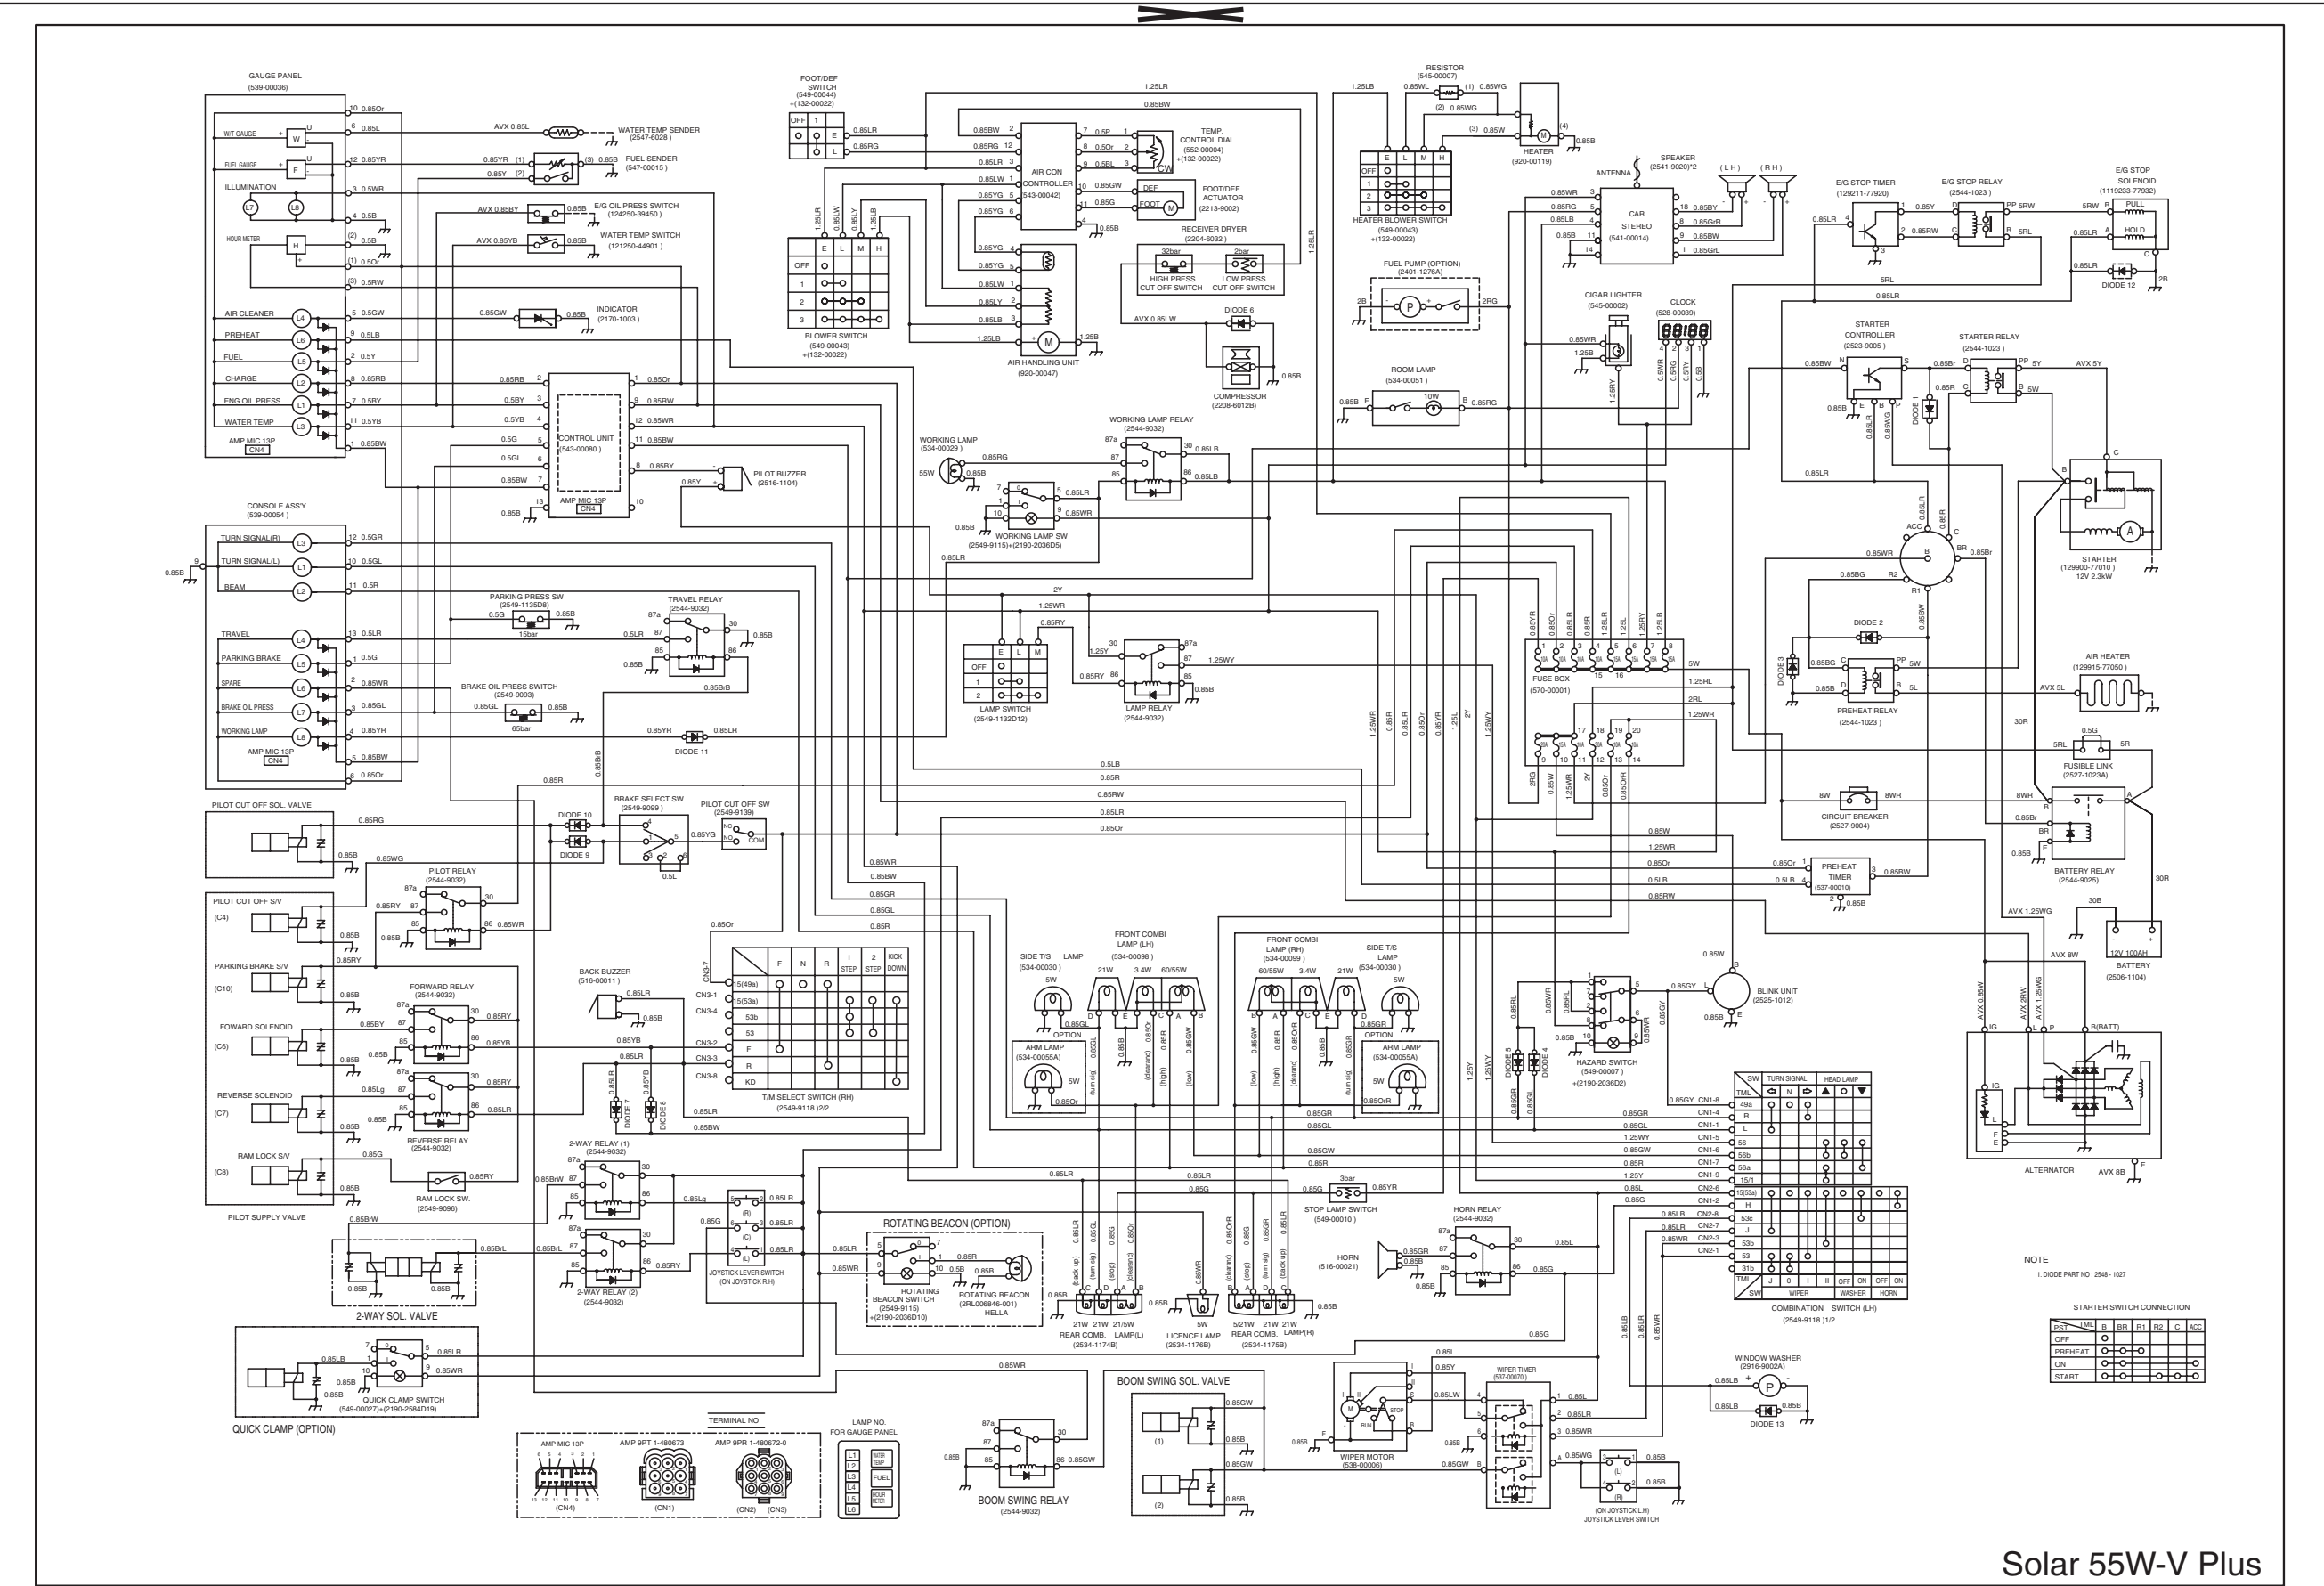


Solar 55W-V Plus

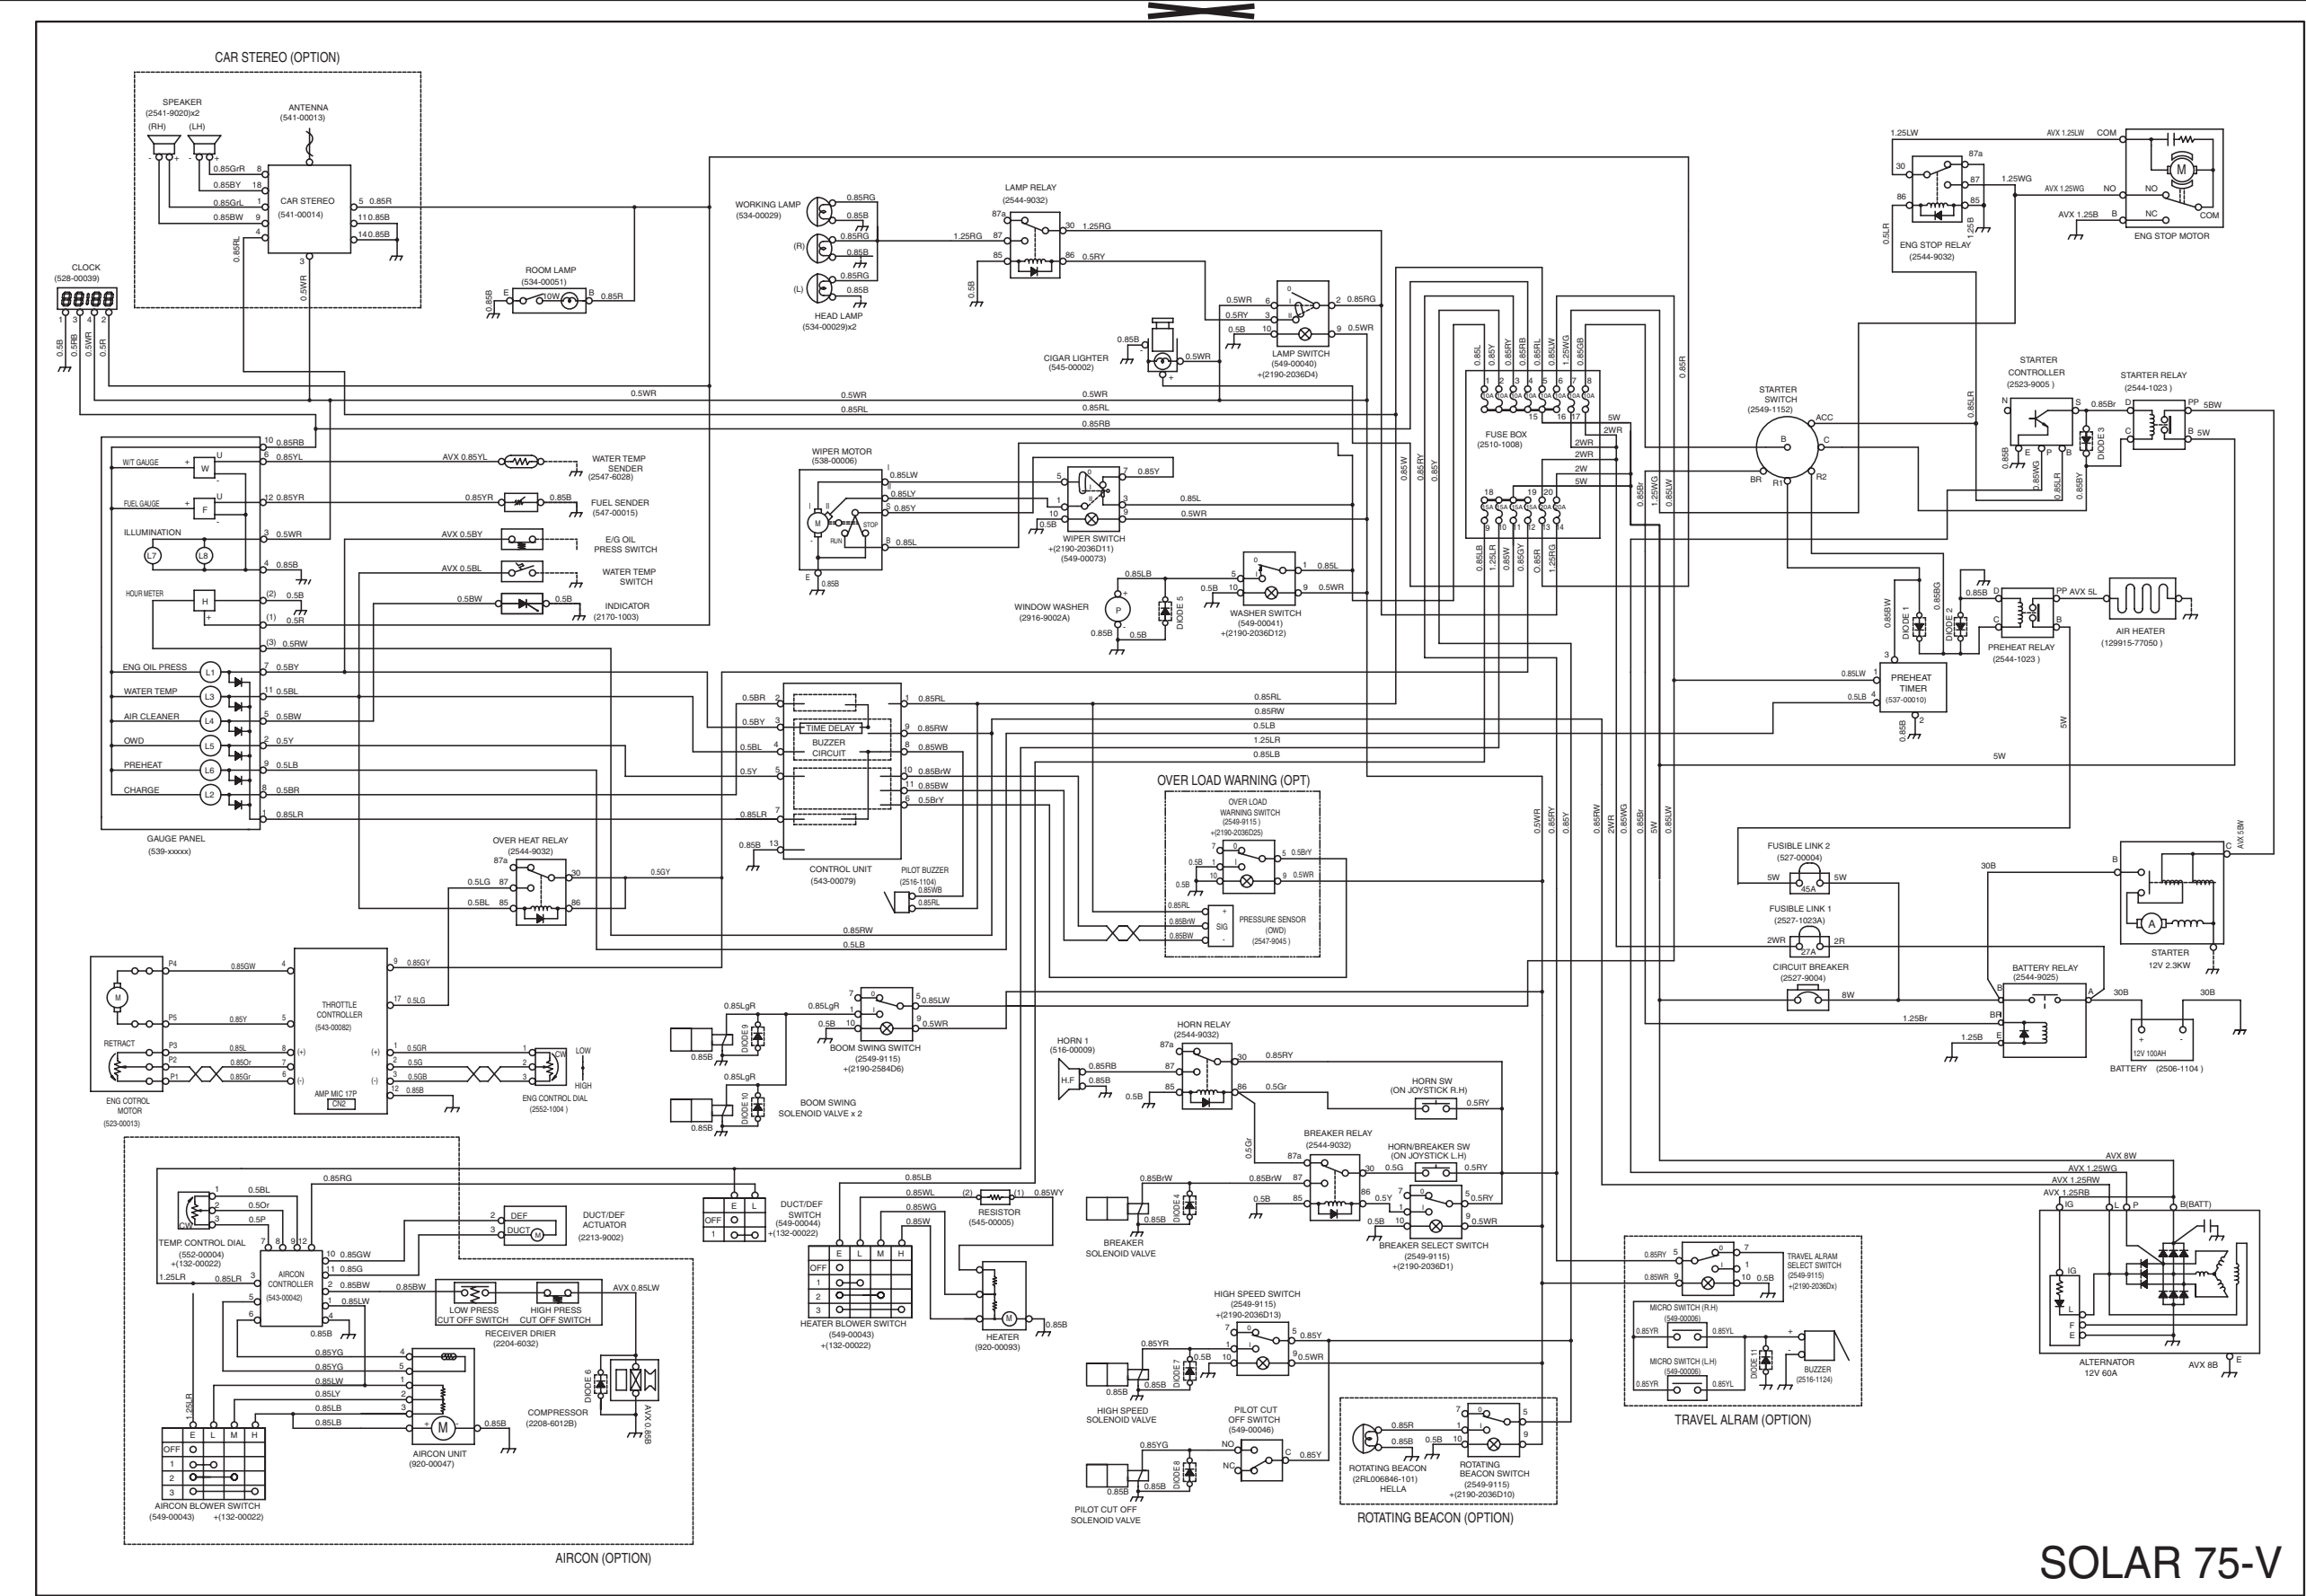


SOLAR 75-V

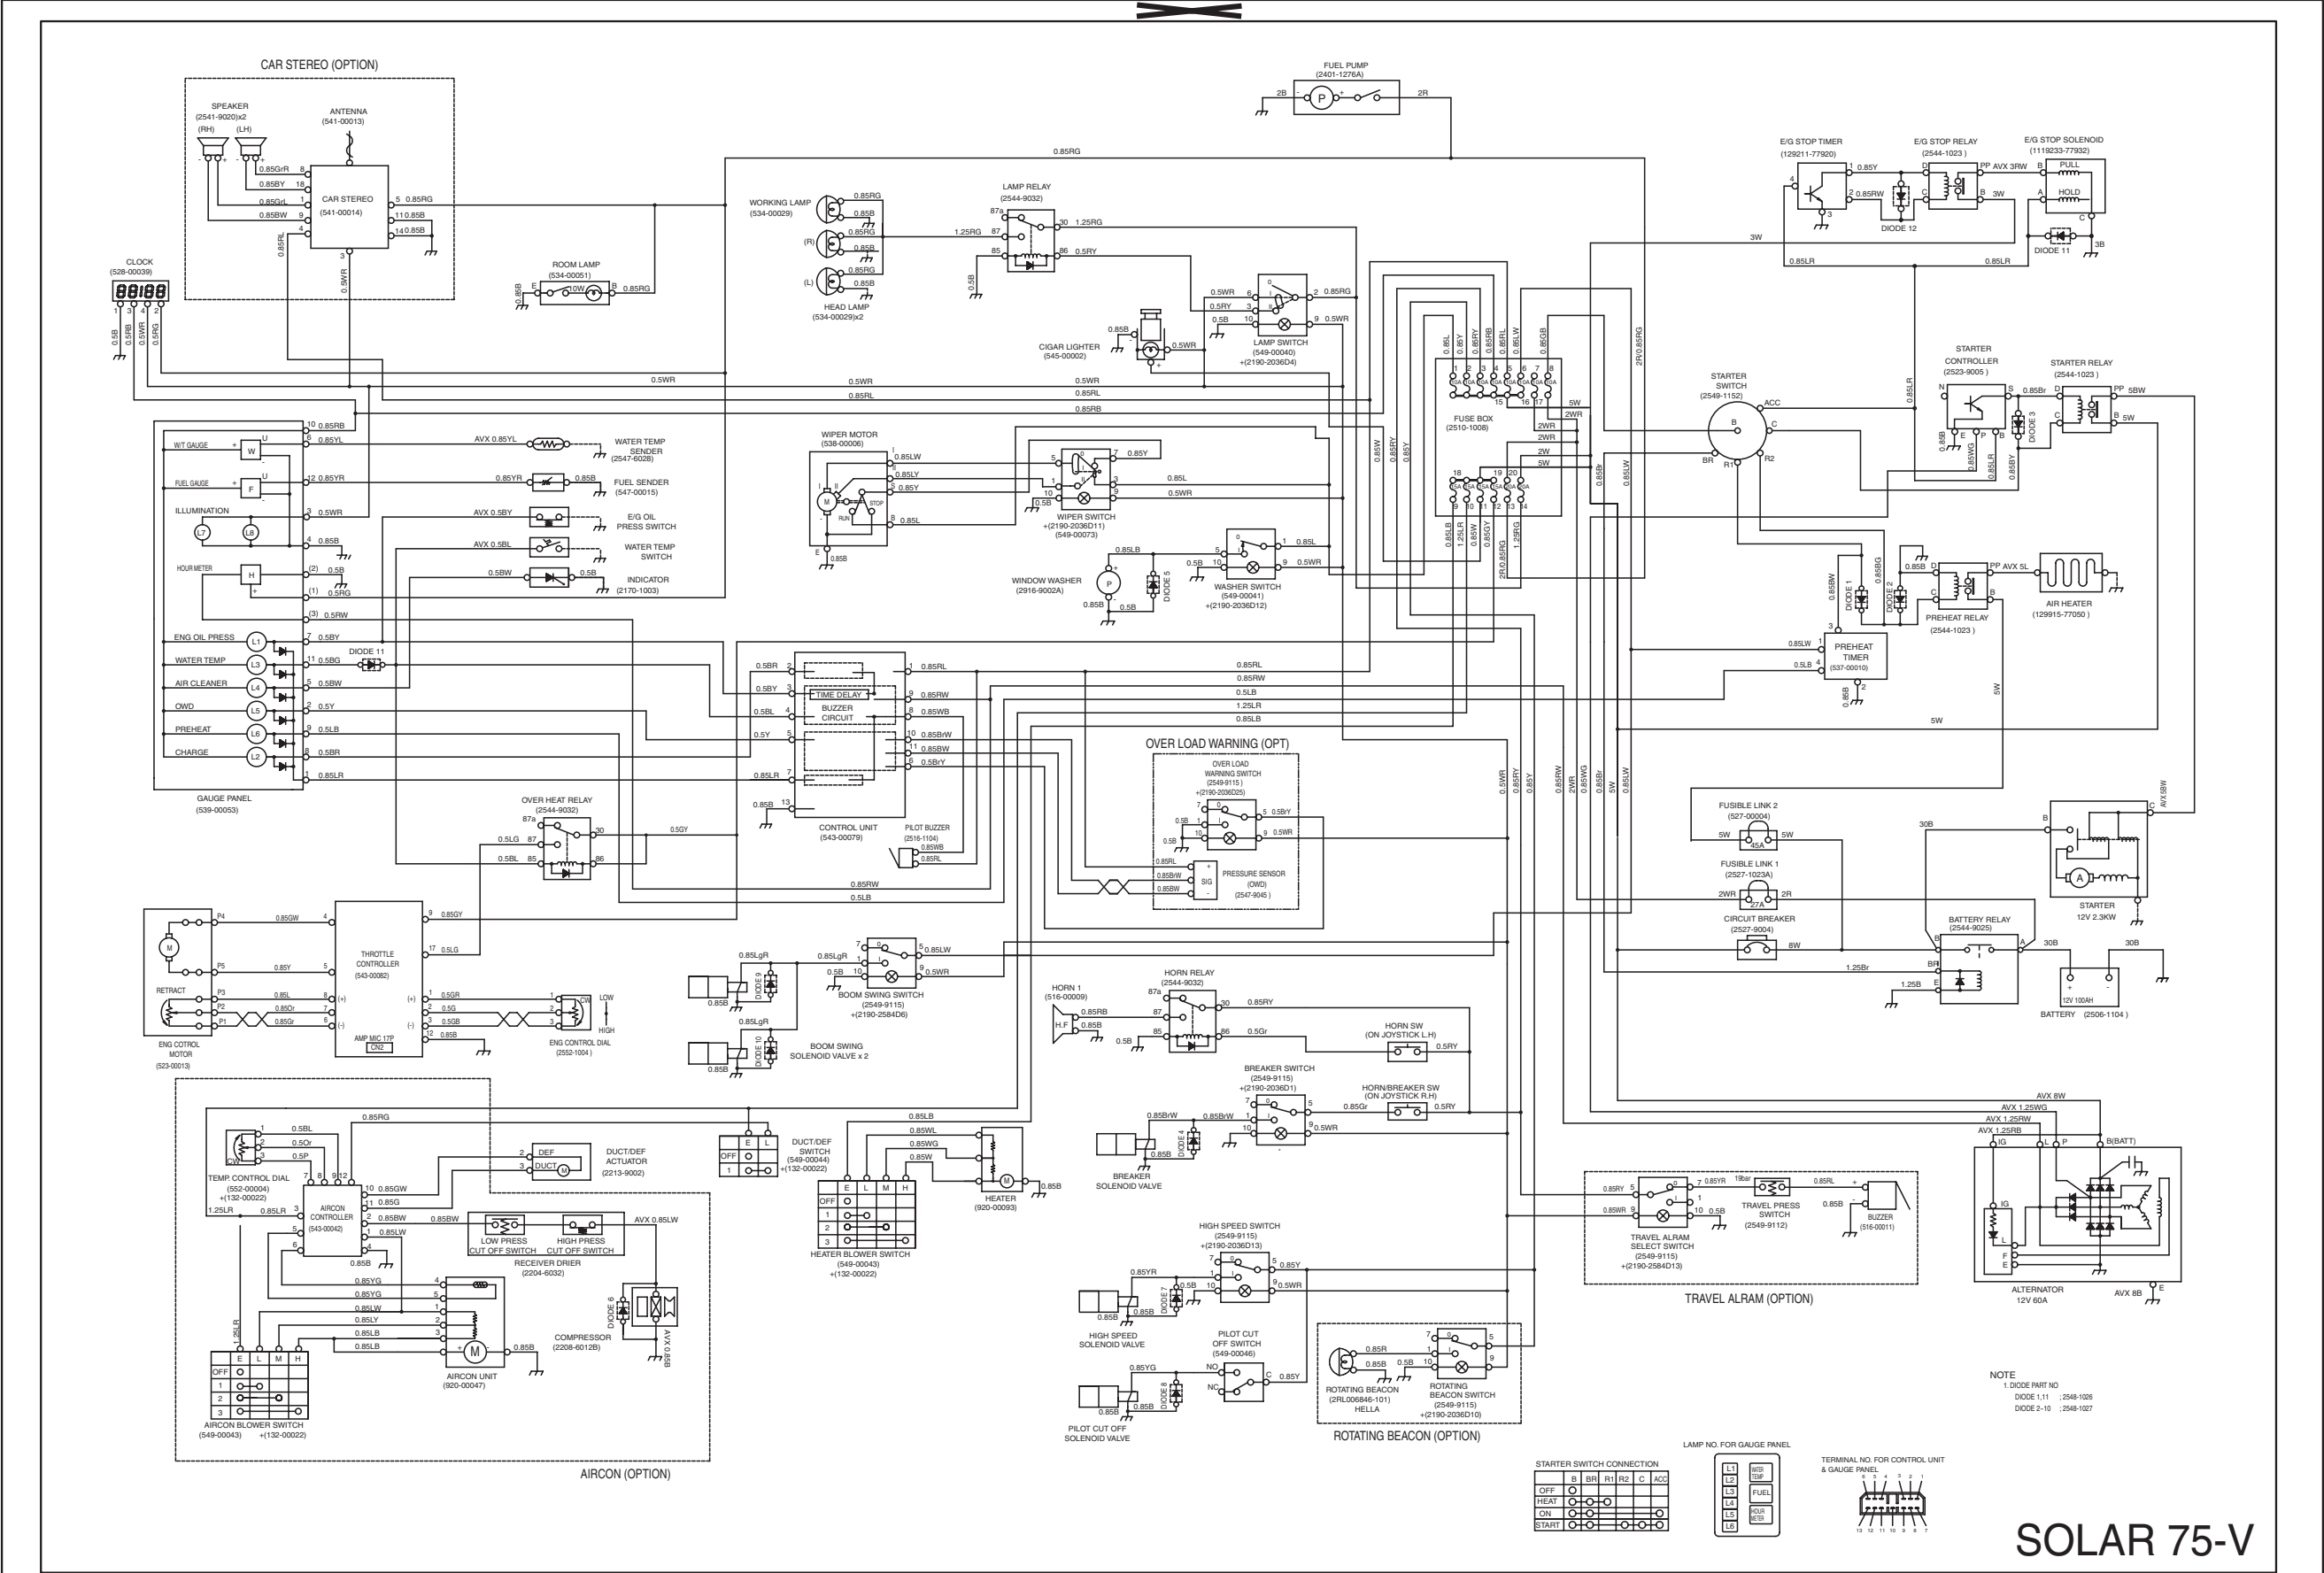

SOLAR 75-V

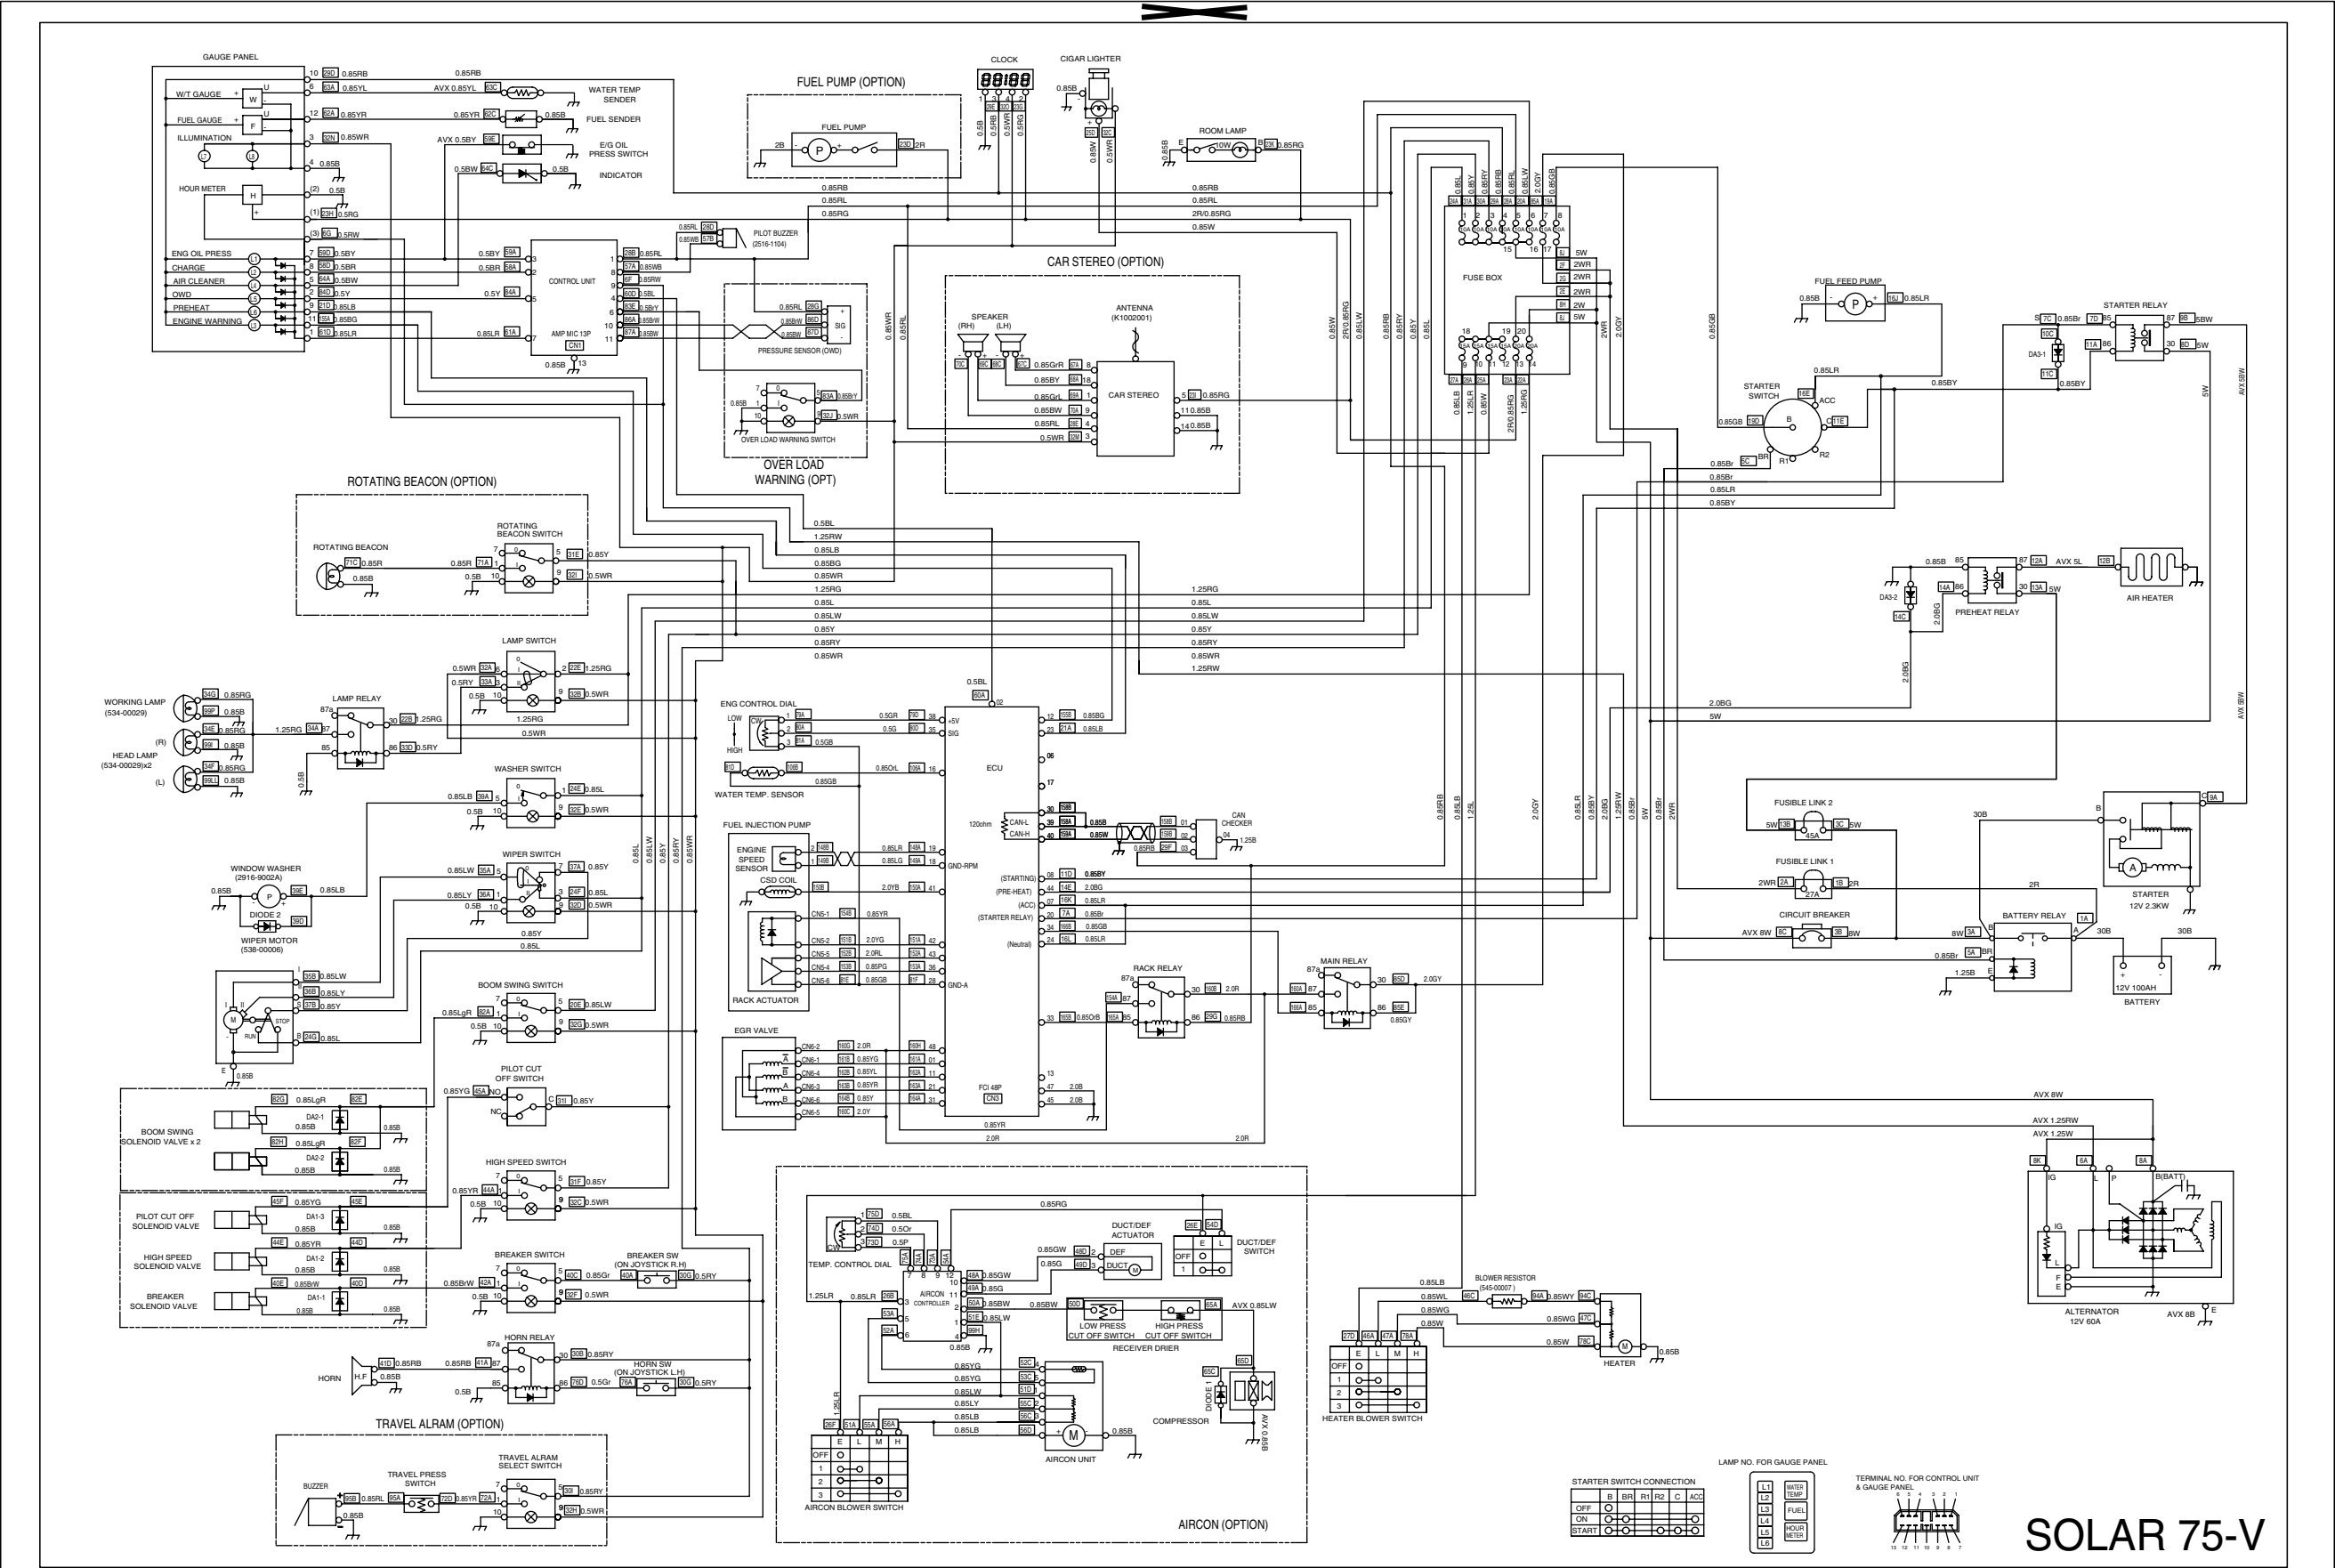

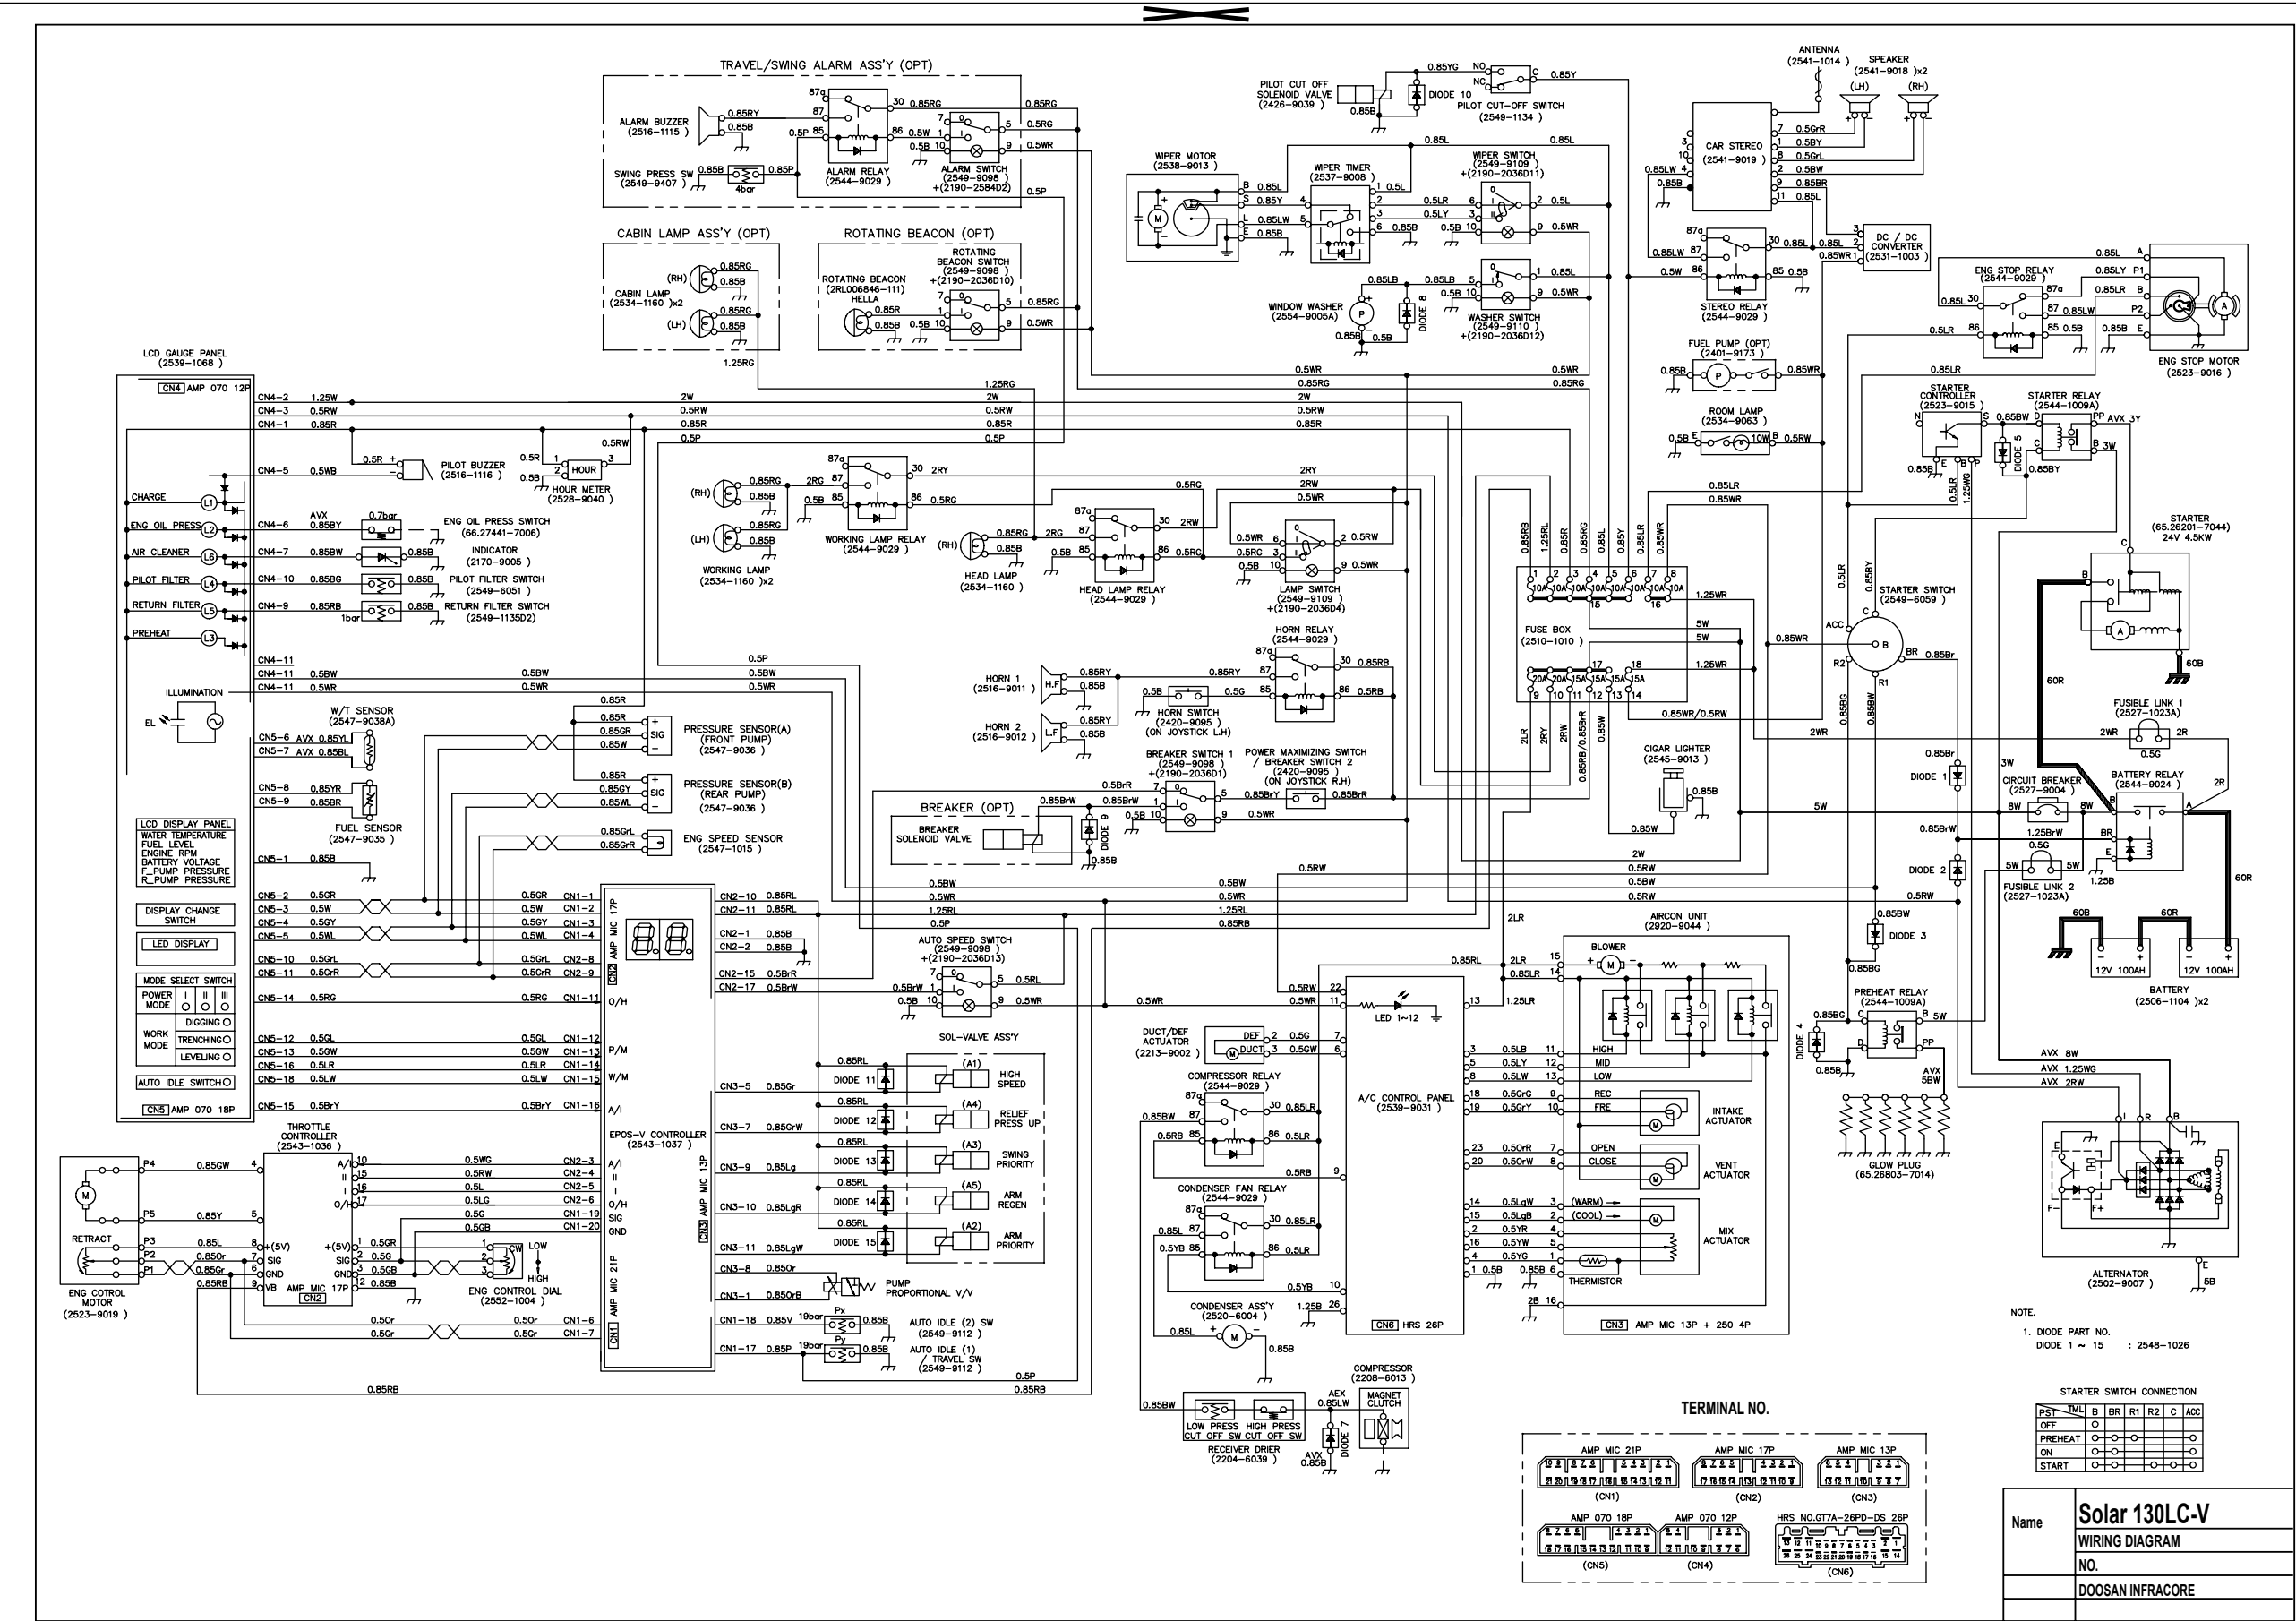

NOTE.
1. DIODE PART NO.
DIODE 1 ~ 15 : 2548-1026

STARTER SWITCH CONNECTION


Wiring	W	R	R1	R2	C	ACC
OFF	○	○	○	○	○	○
PREHEAT	○	○	○	○	○	○
ON	○	○	○	○	○	○
START	○	○	○	○	○	○

Name: **Solar 130LC-V**

WIRING DIAGRAM

NO.

DOOSAN INFRACORE

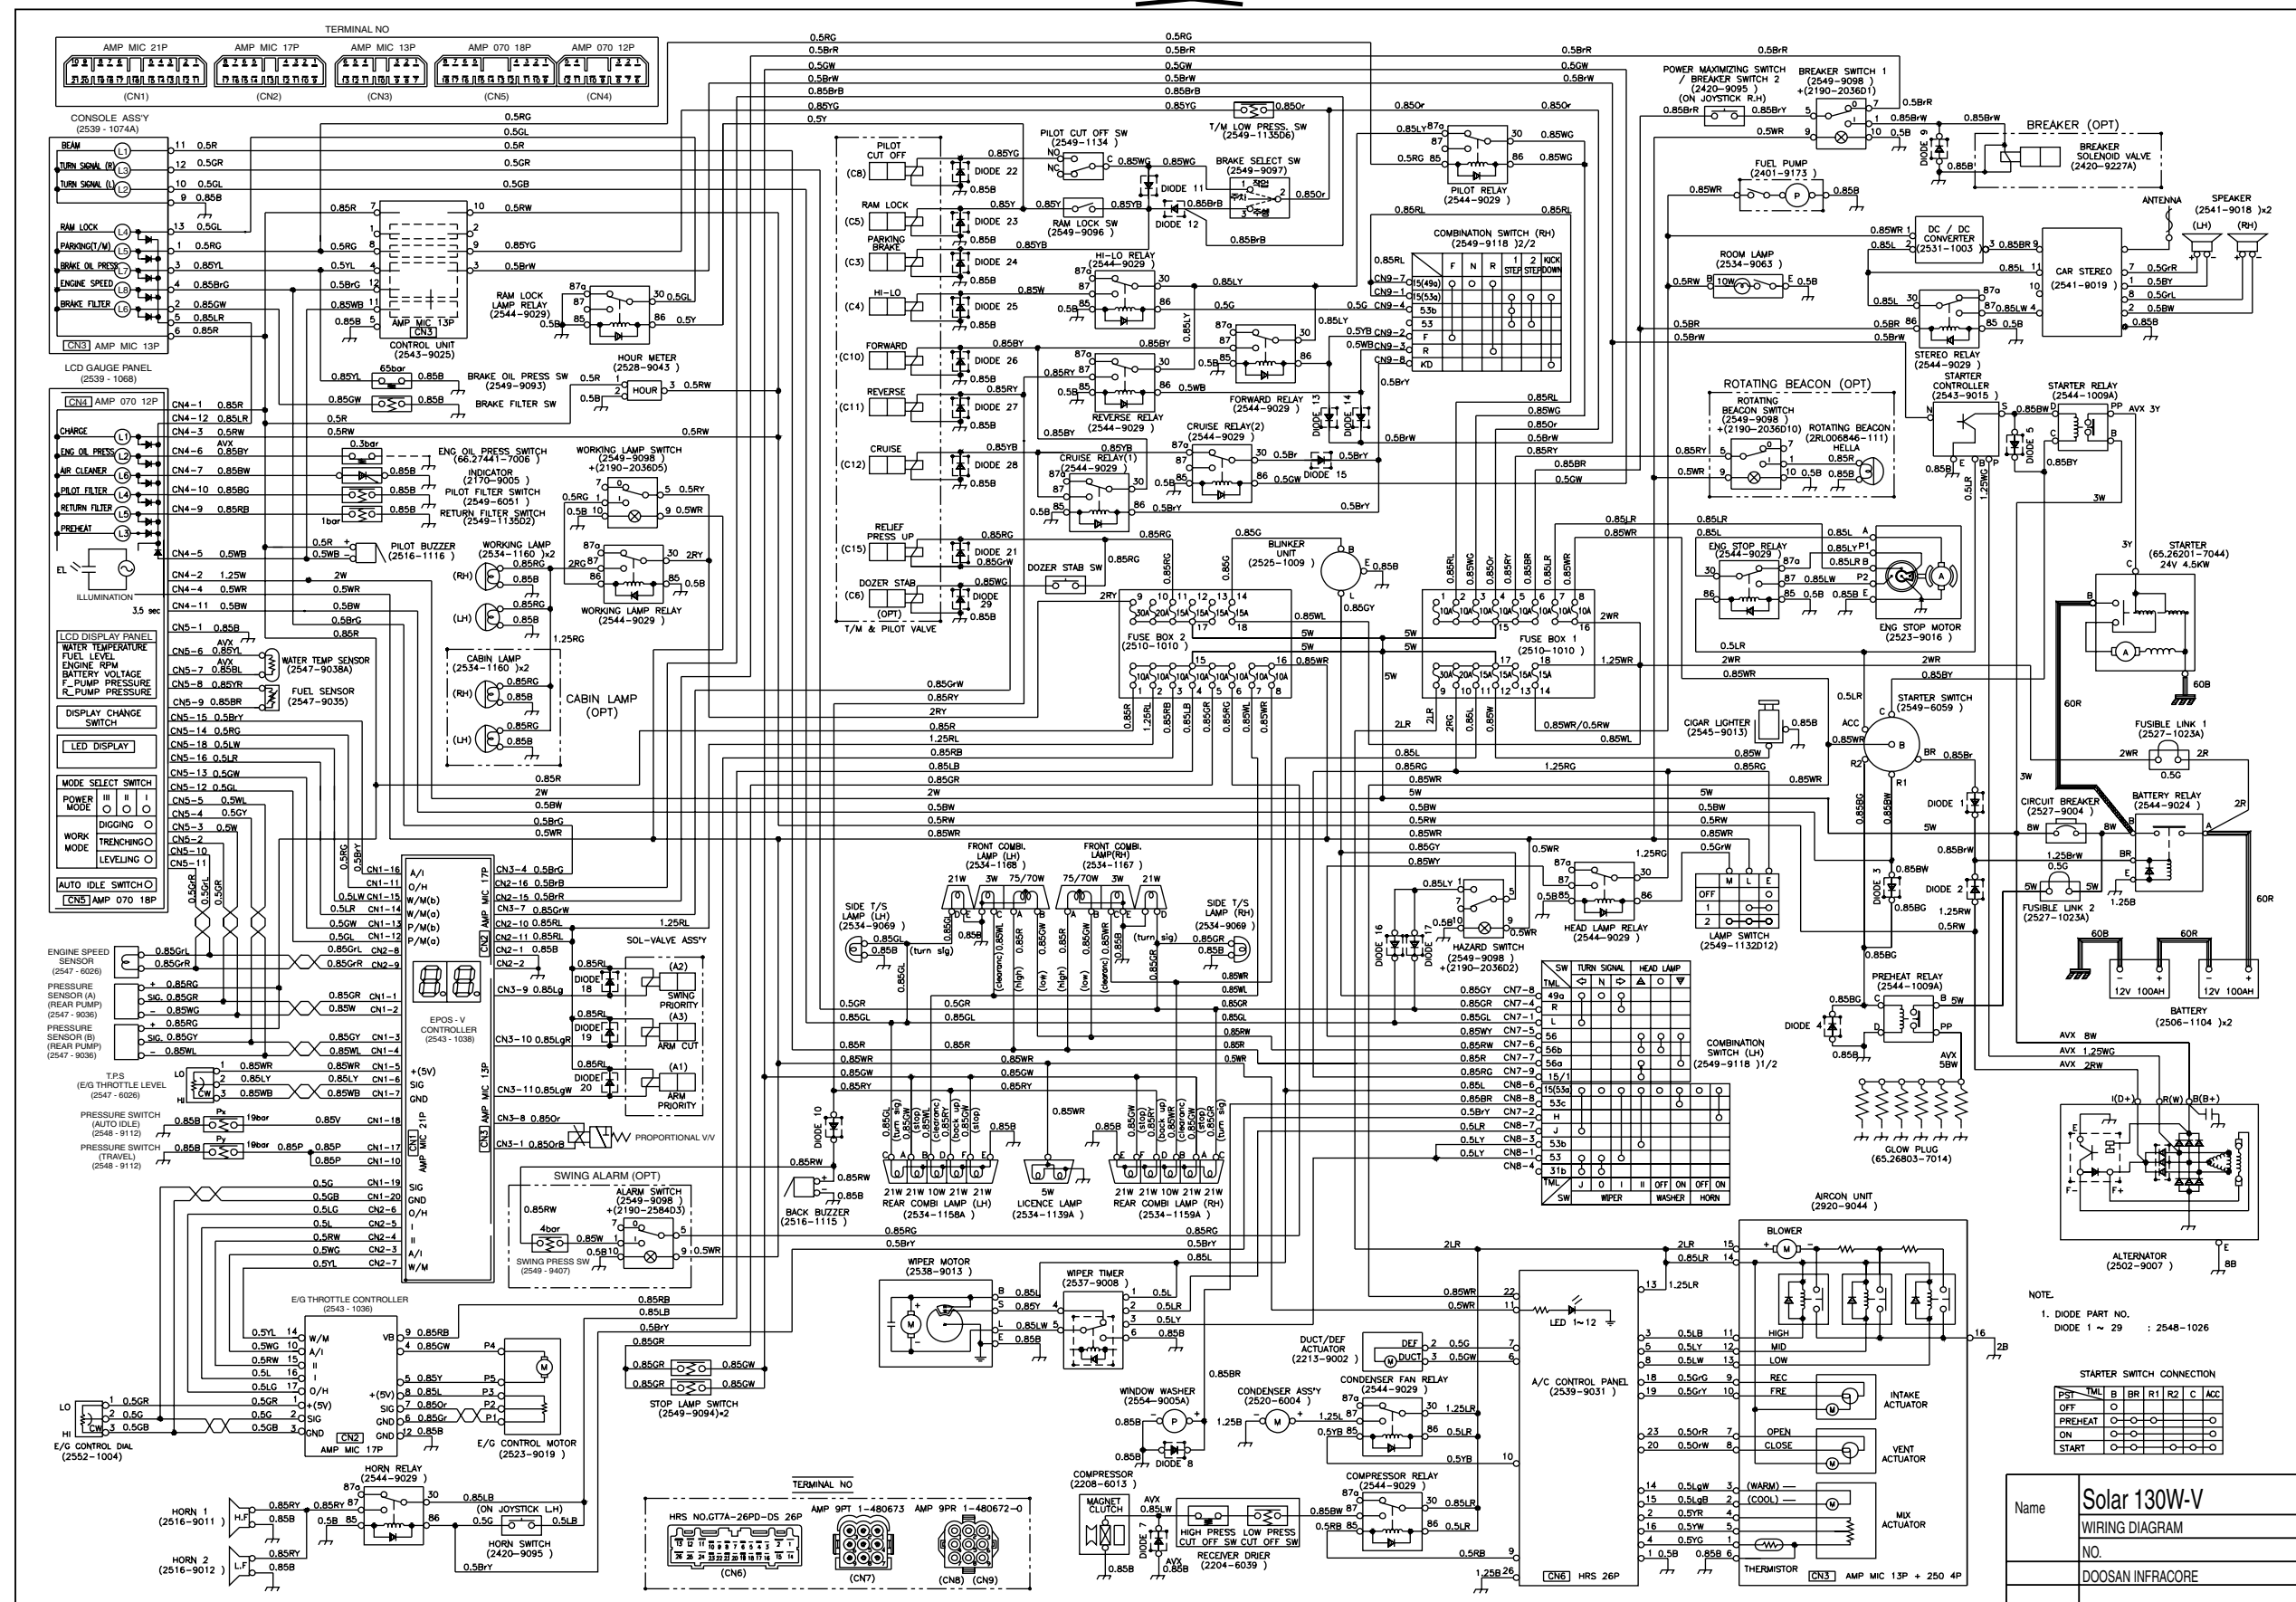


NOTE.


1. DIODE PART NO.
DIODE 1 ~ 29 : 2548-1026


PST	TML	B	BR	R1	R2	C
OFF		○				
PREHEAT		○	○	○		
ON		○	○			
START		○	○		○	○

Name	Solar 130W-V
	WIRING DIAGRAM
	NO.
	DOOSAN INFRACORE

 
Solar 140LC-V




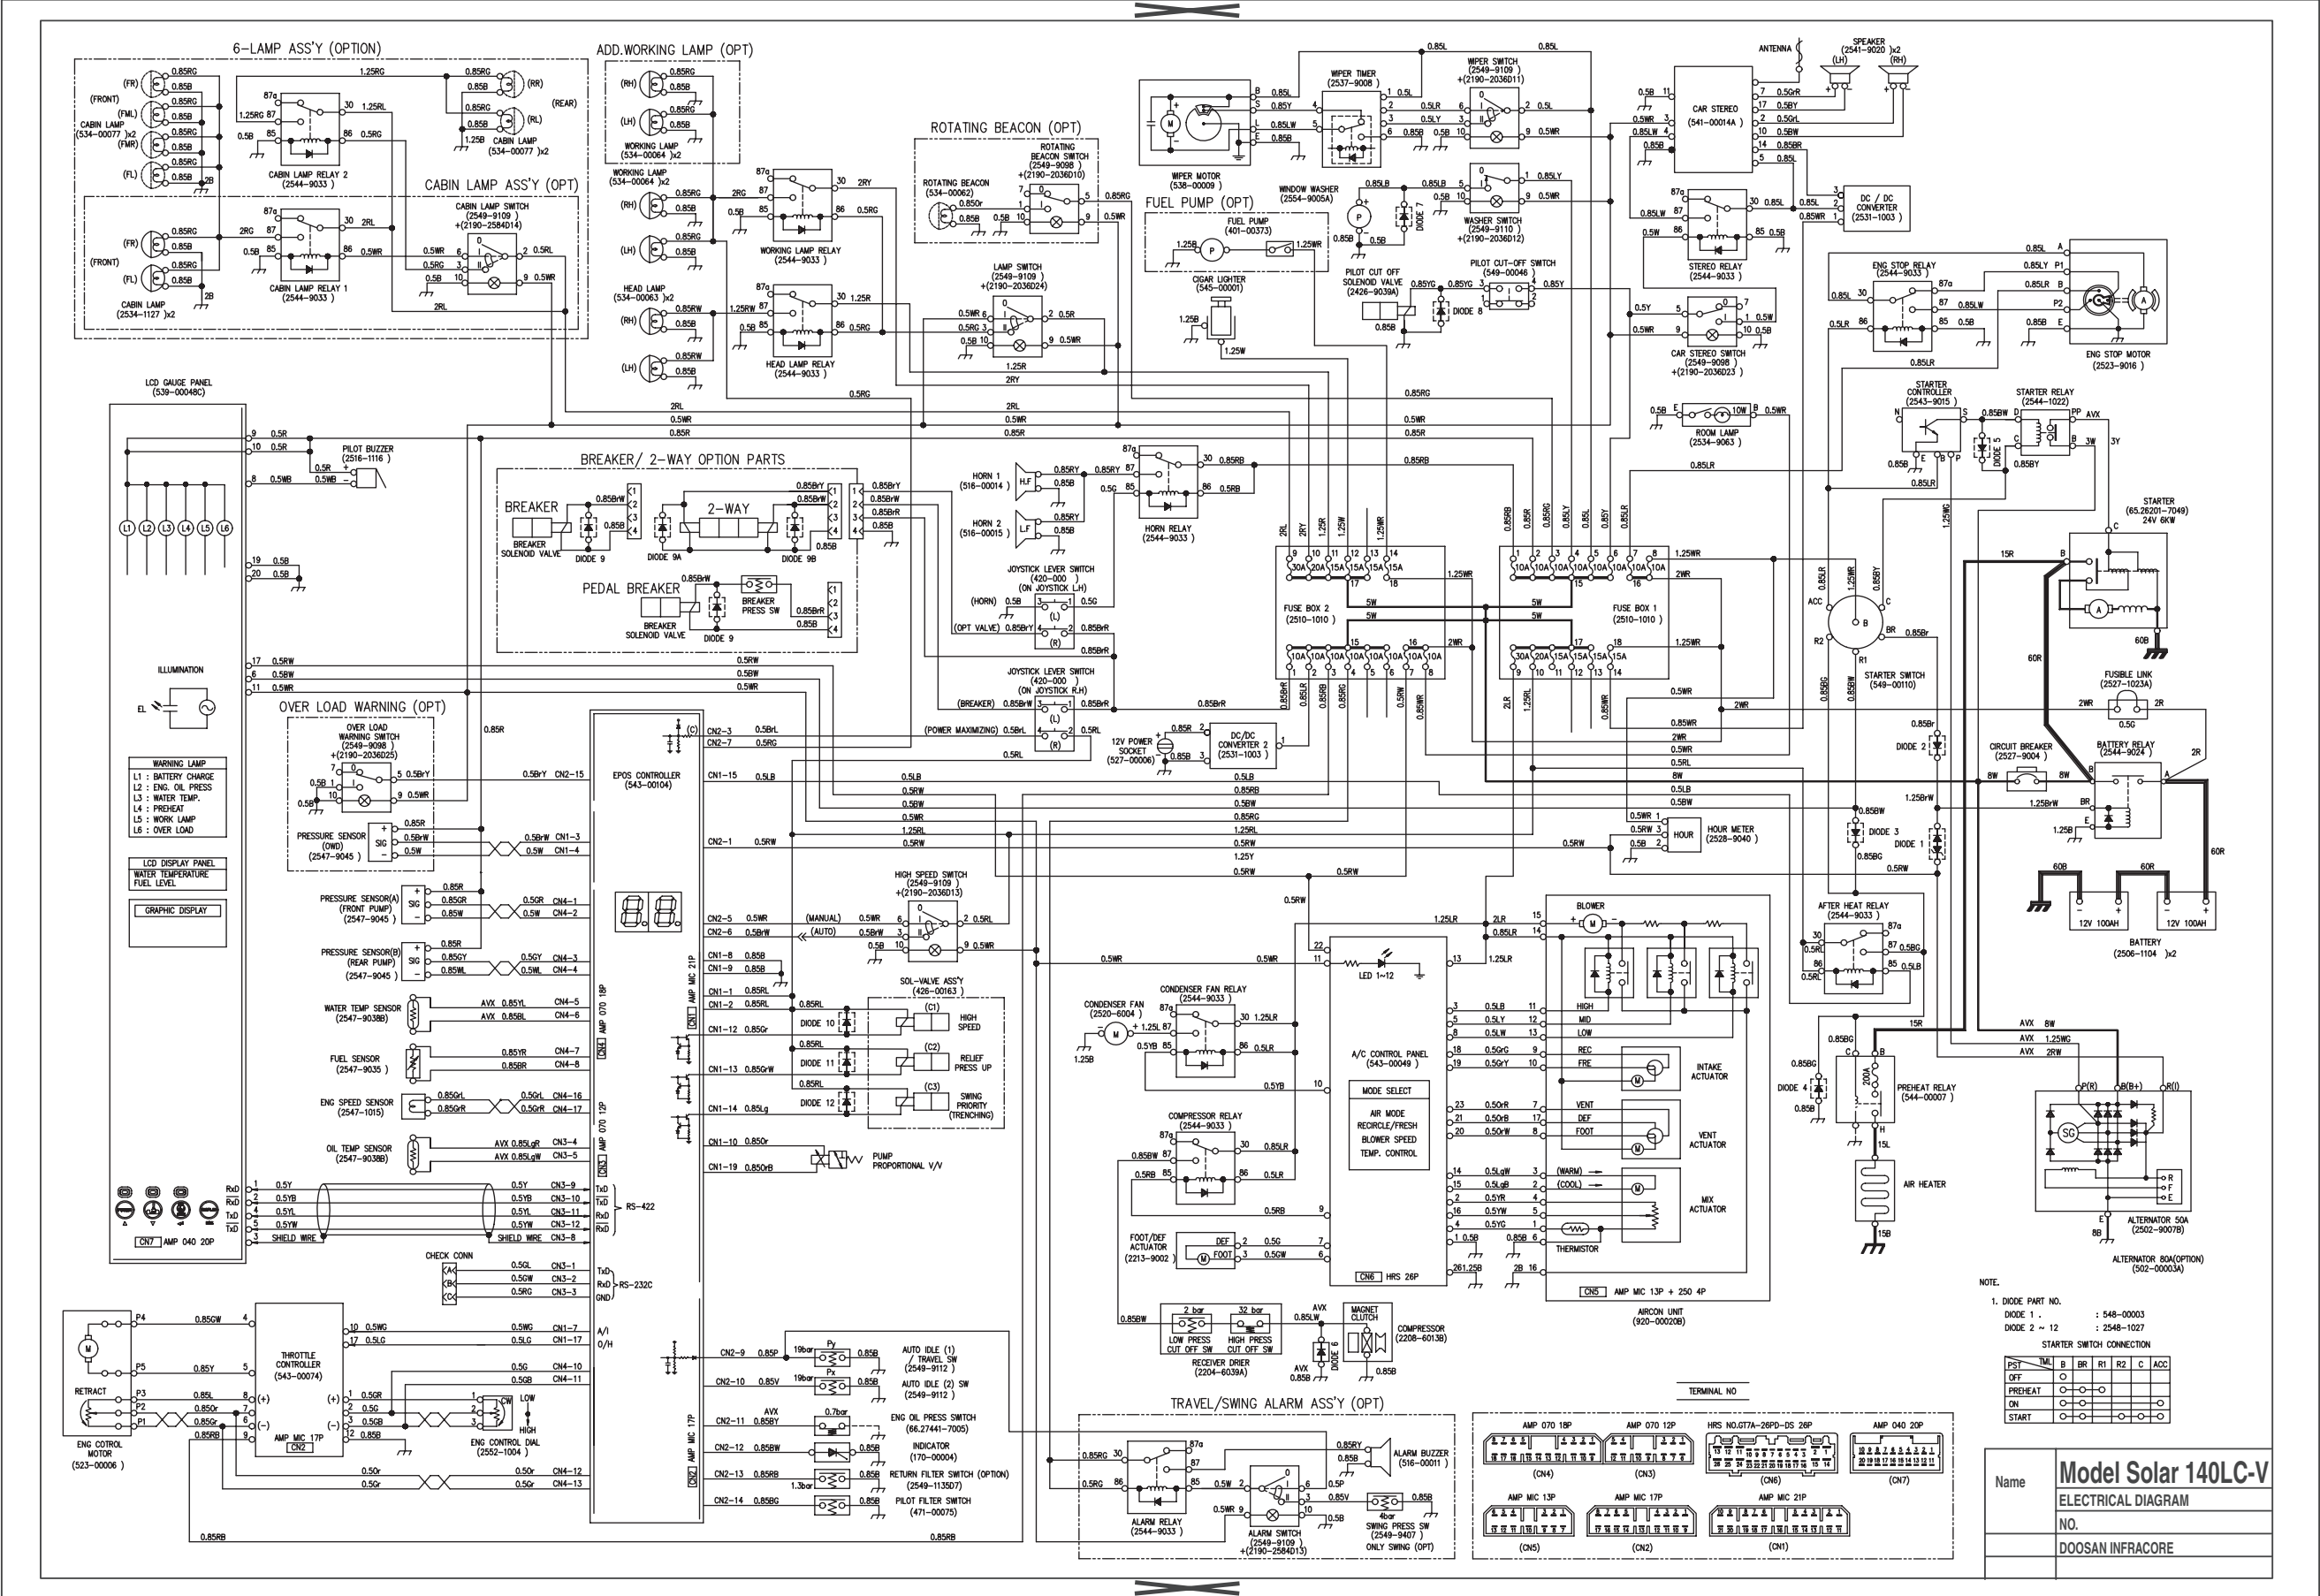


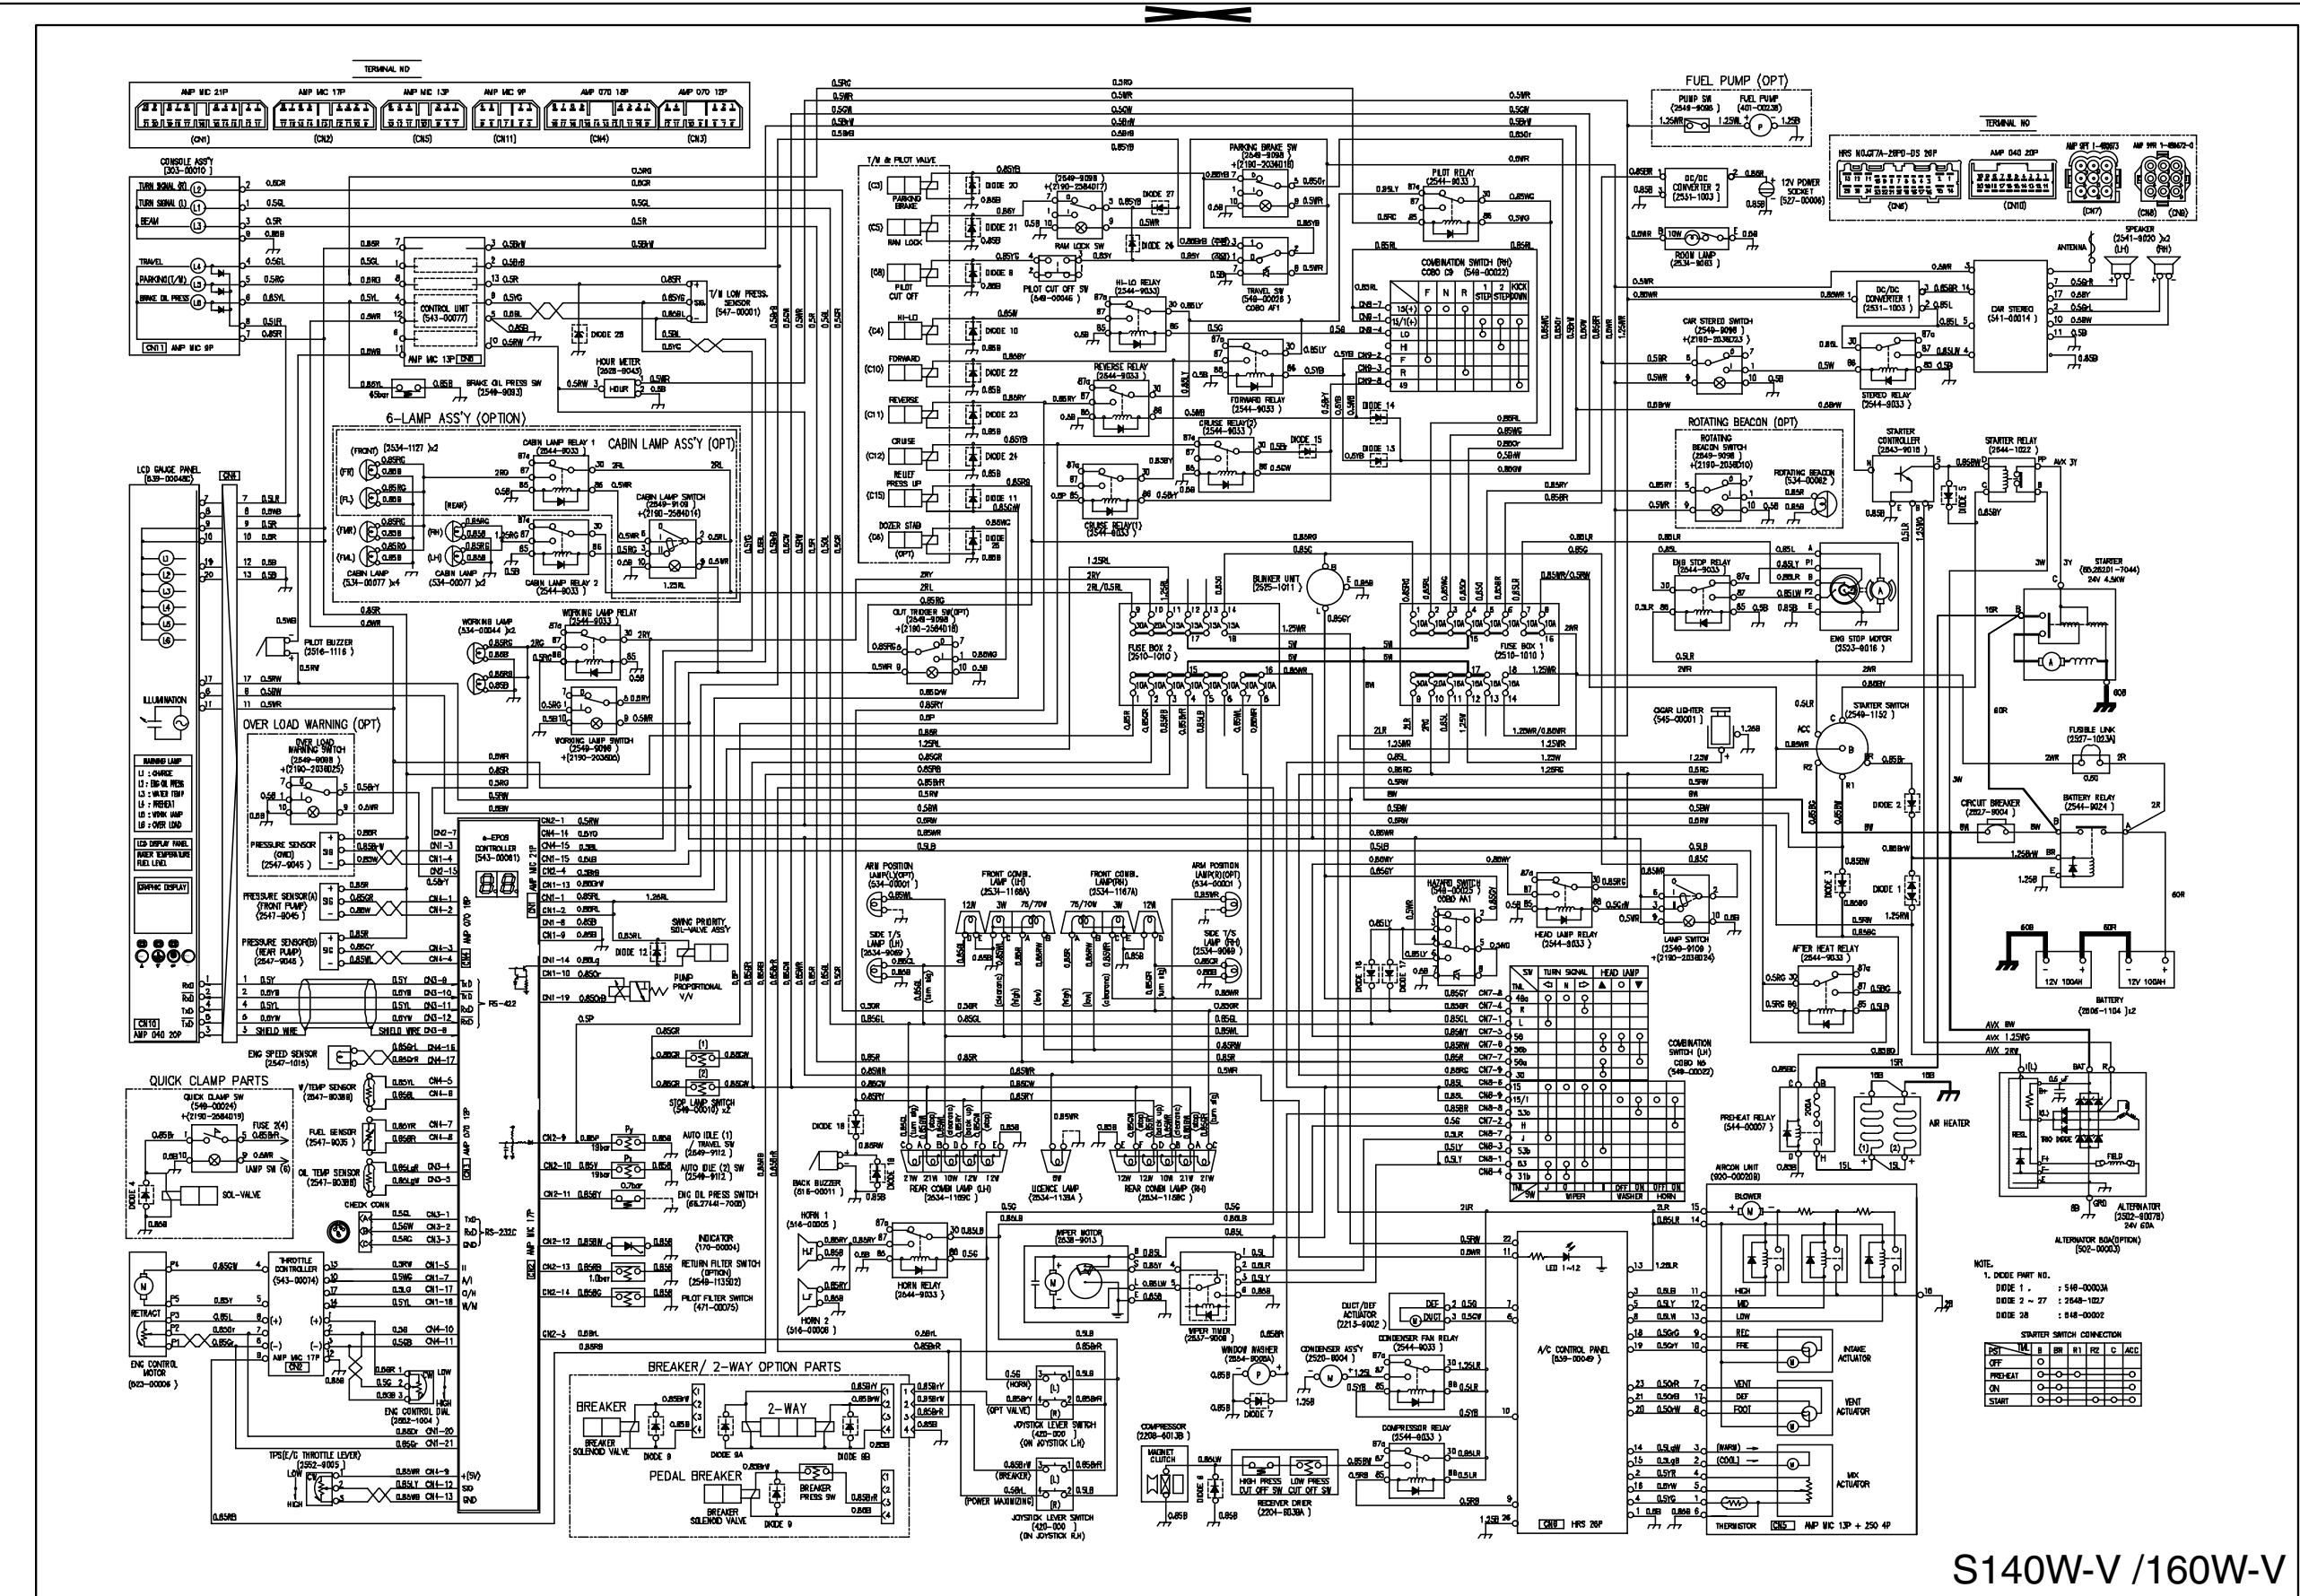

S140W-V /160W-V

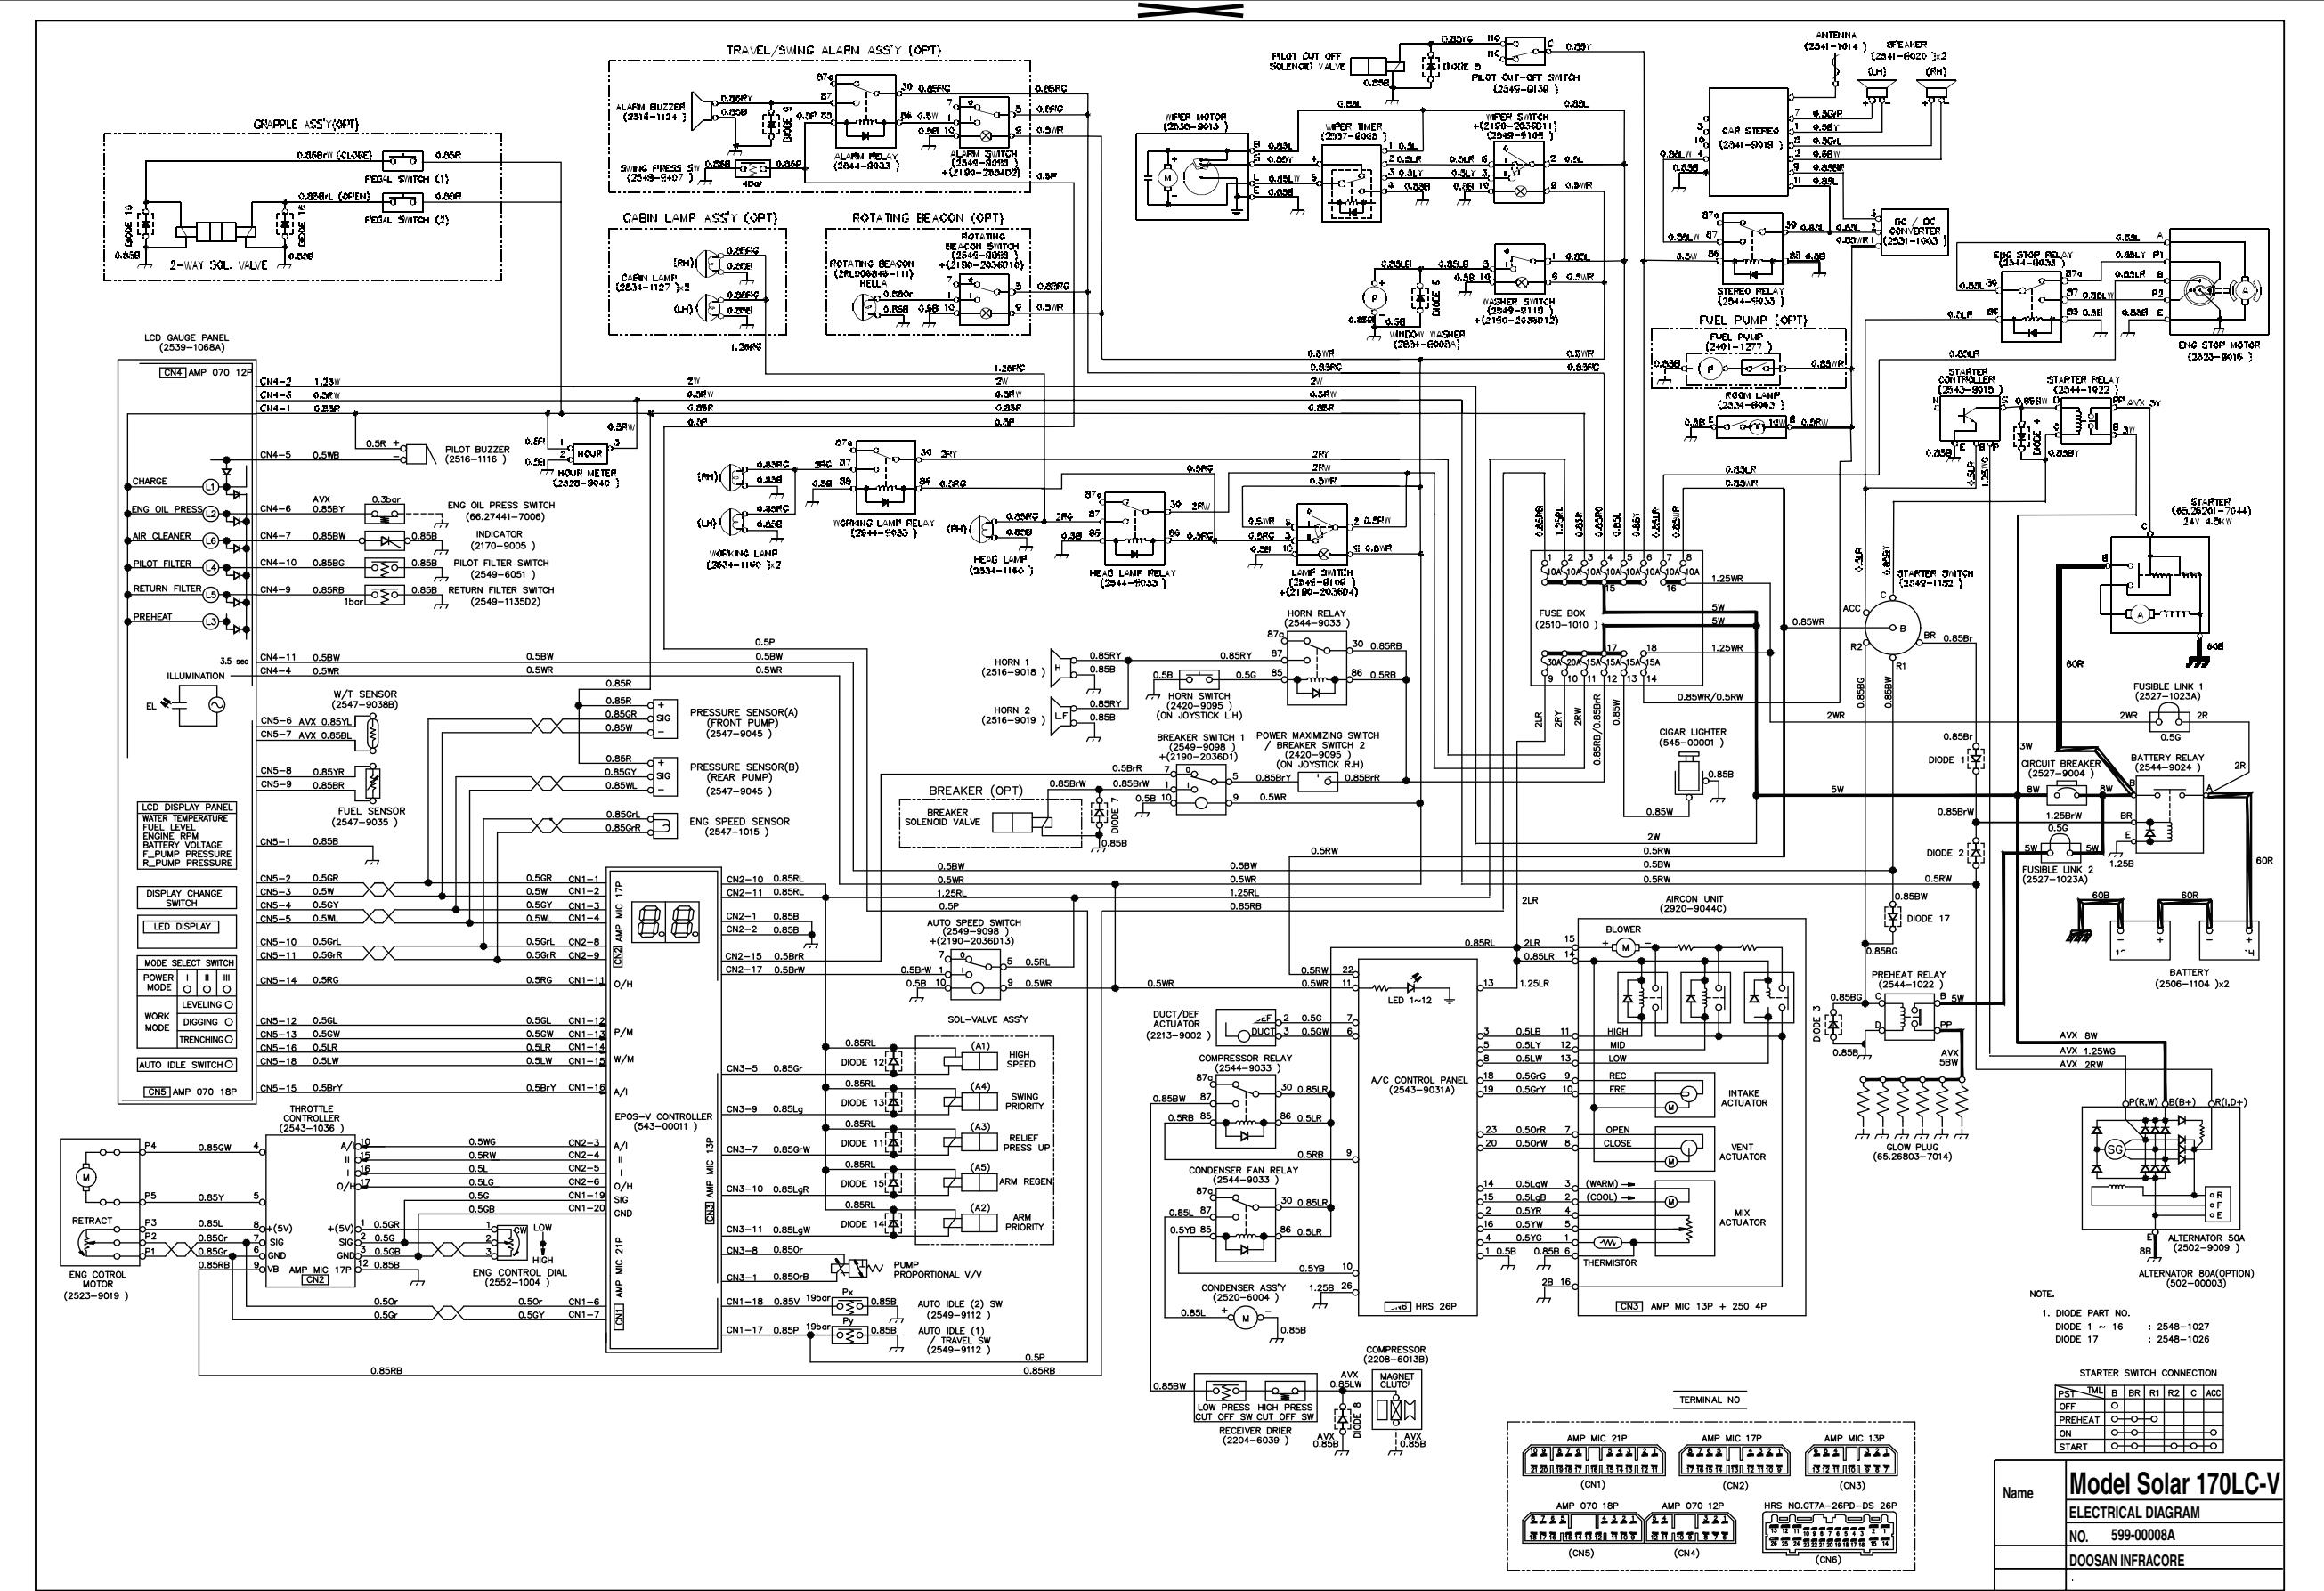


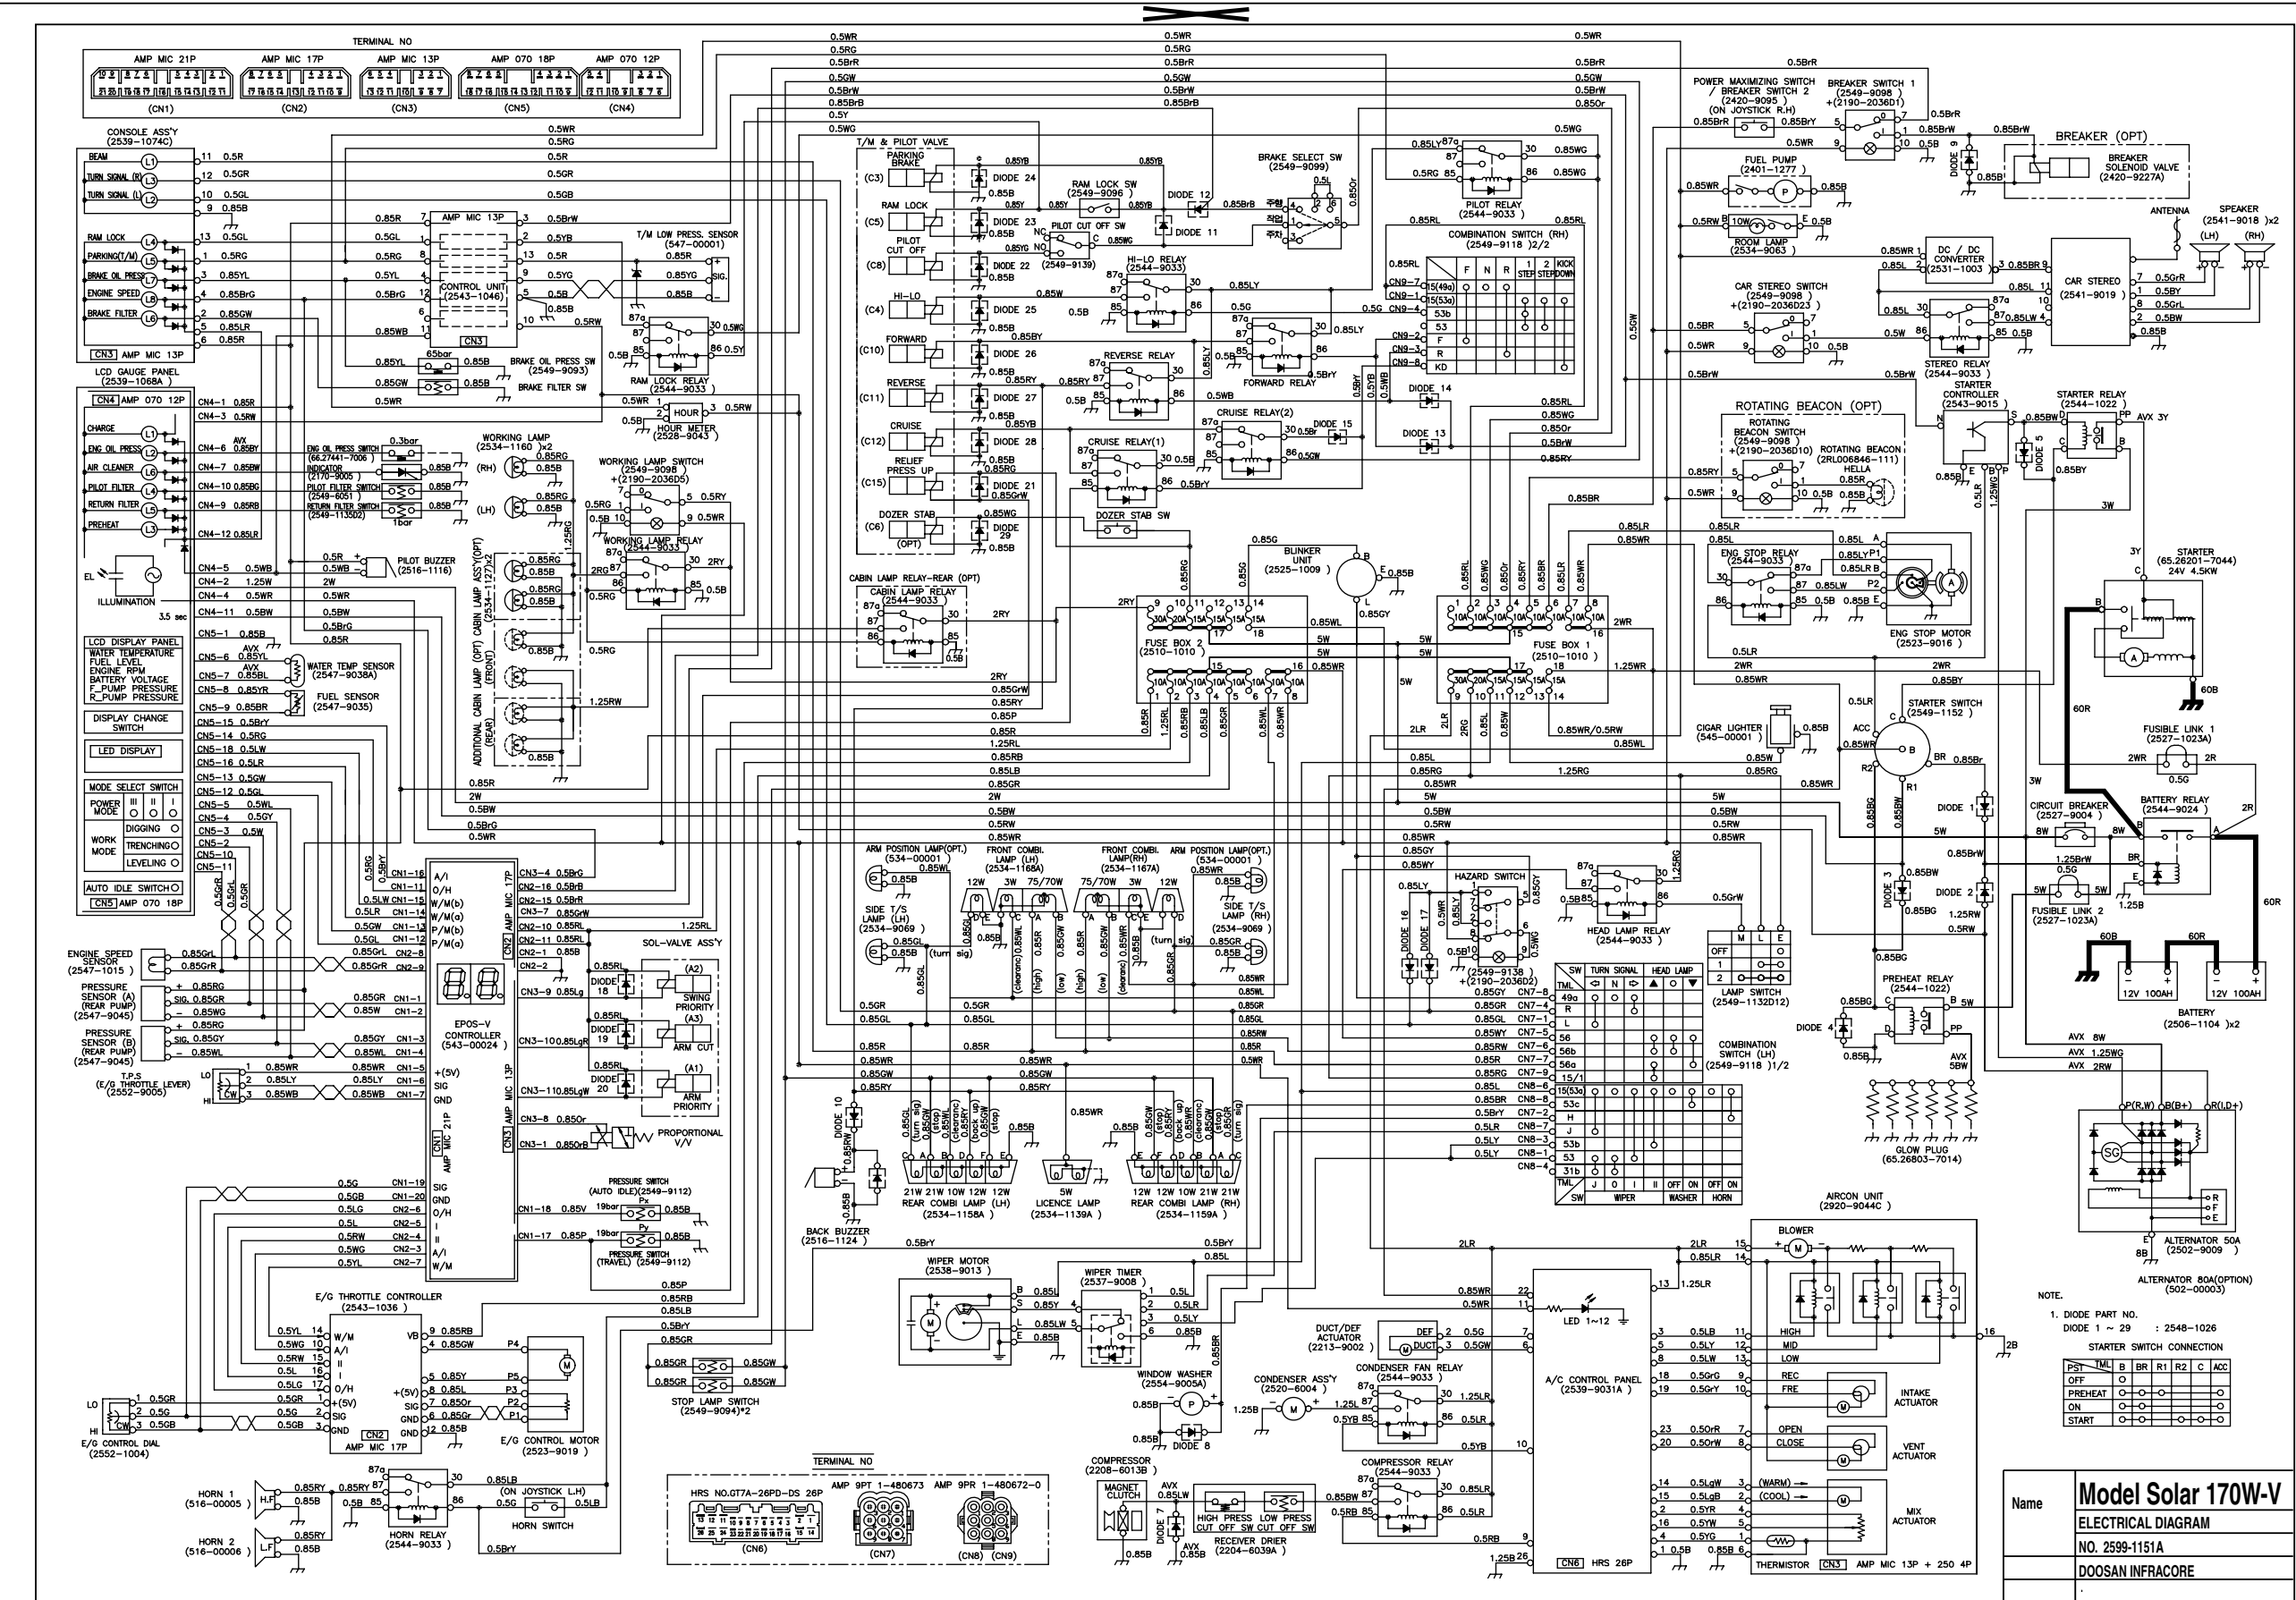

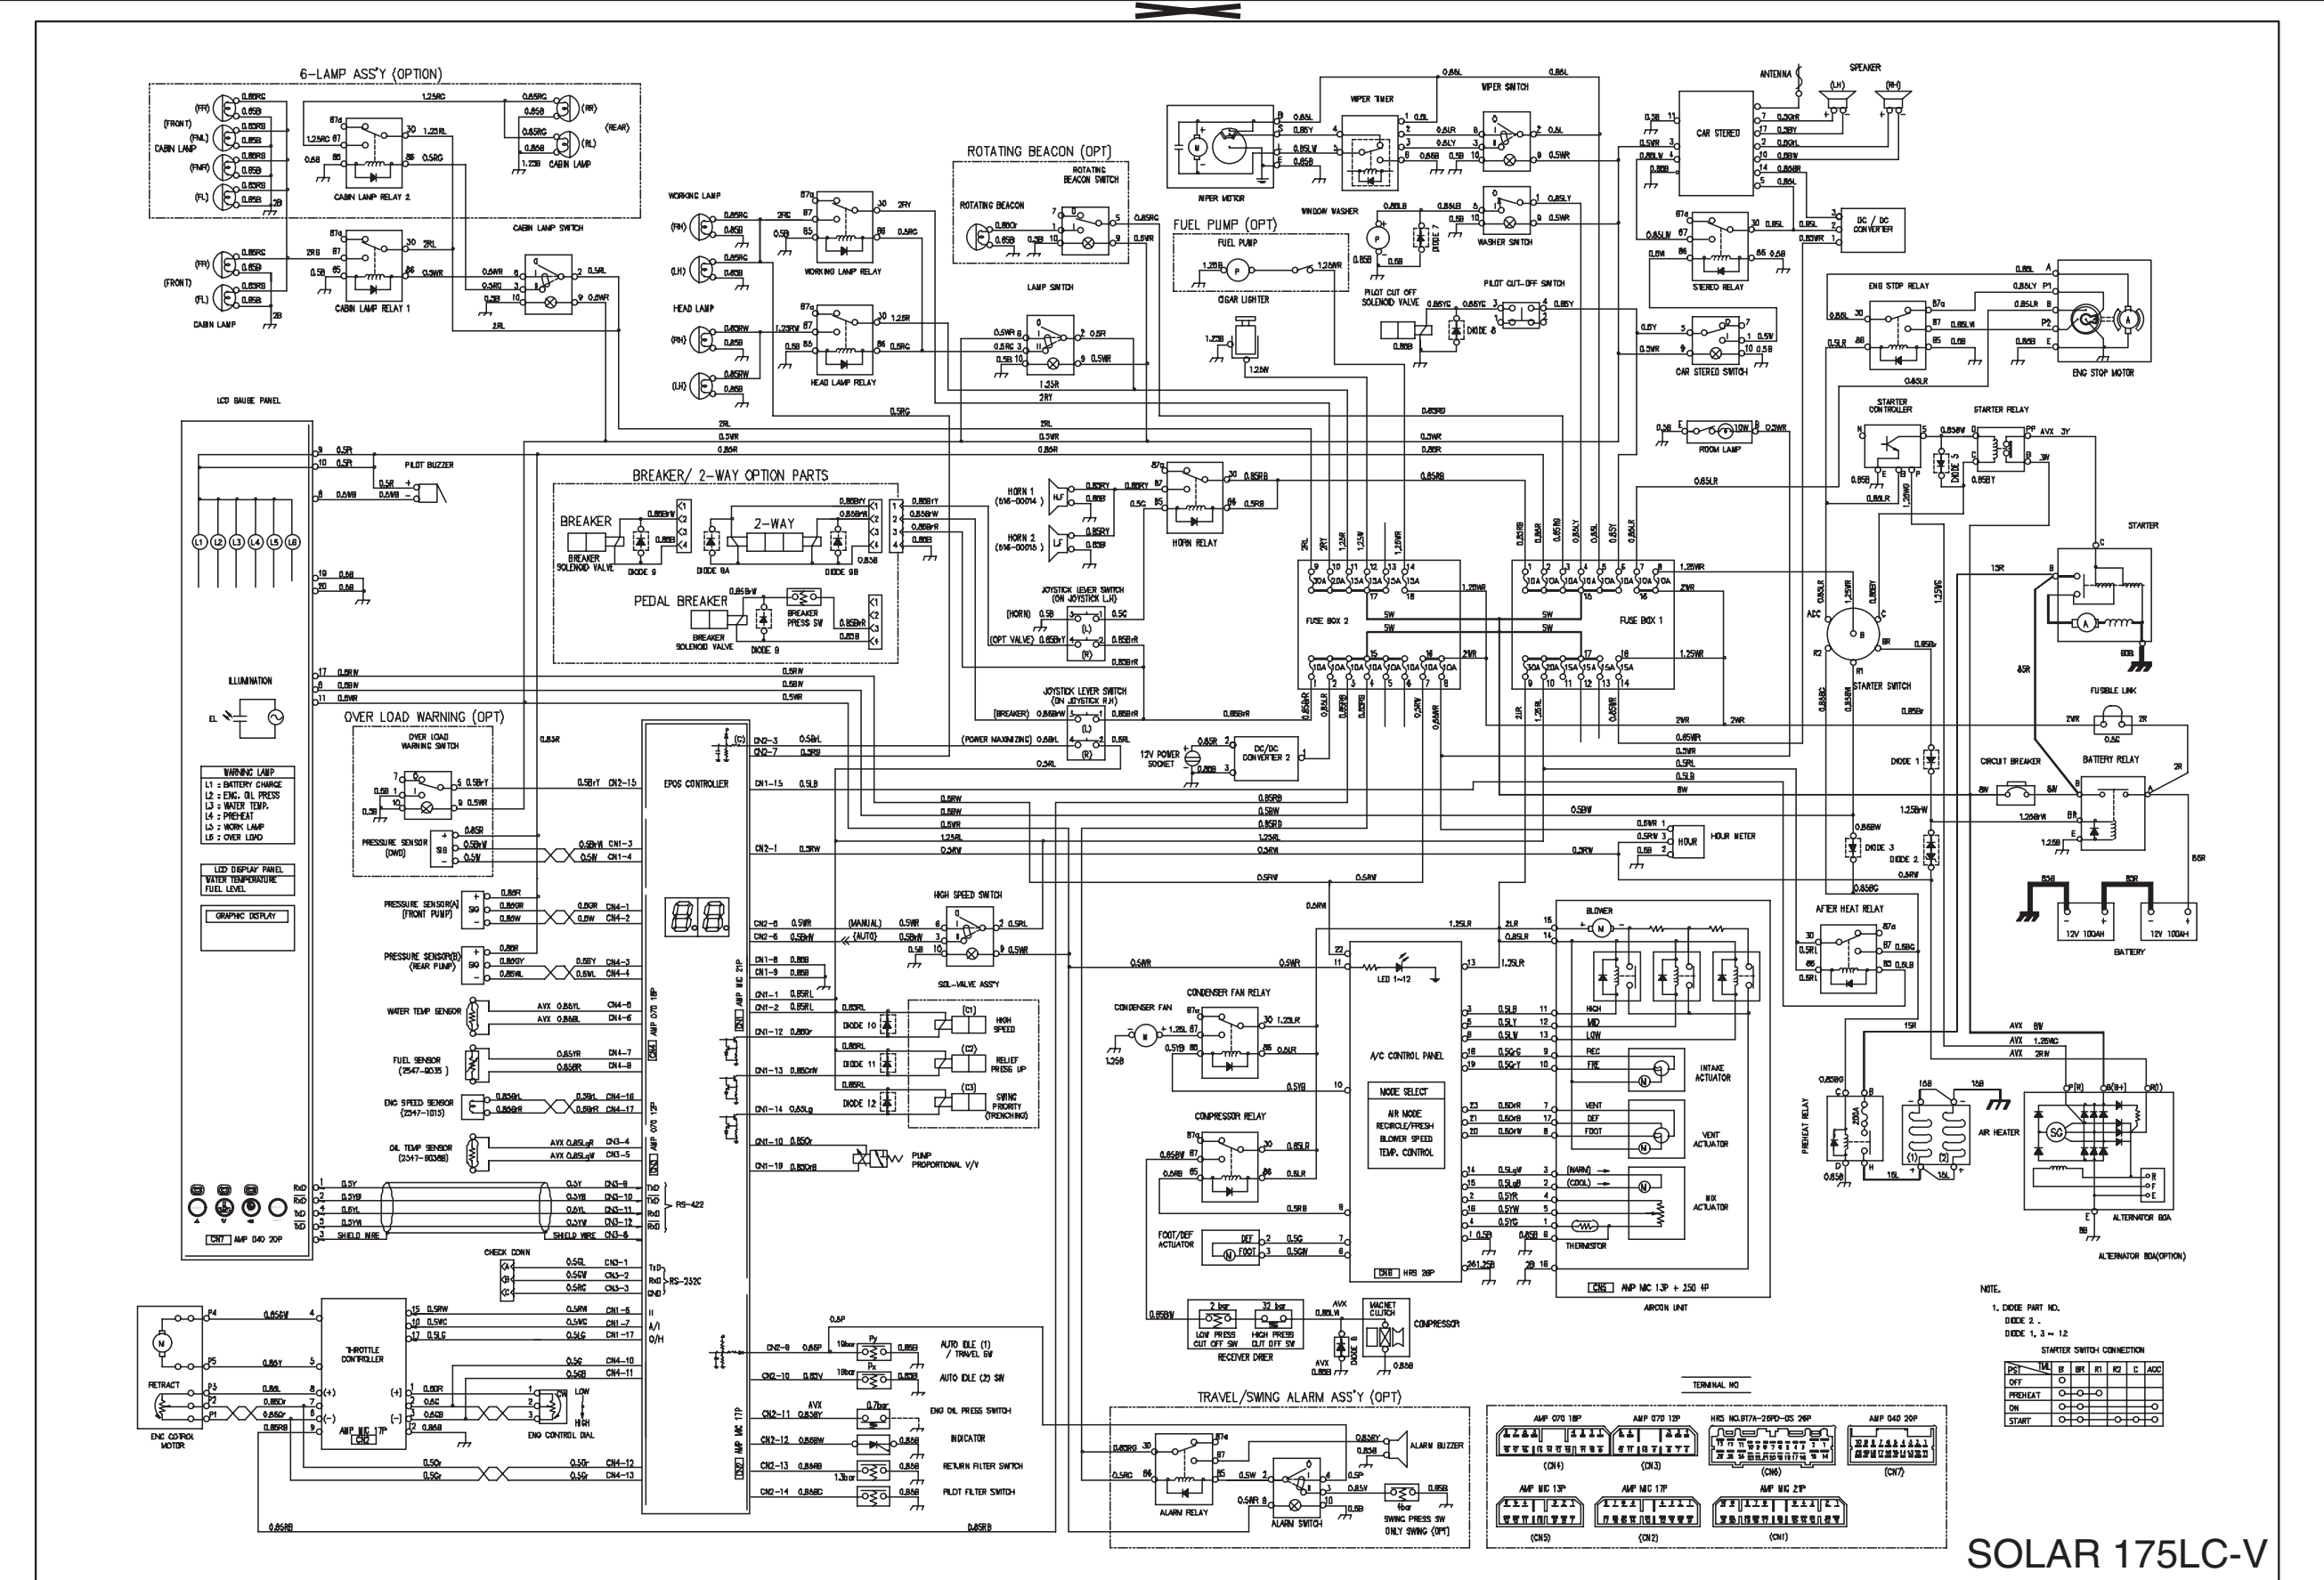

SOLAR 180W-V (S/N 1001 THRU 1099)

<https://truckmanualshub.com/>

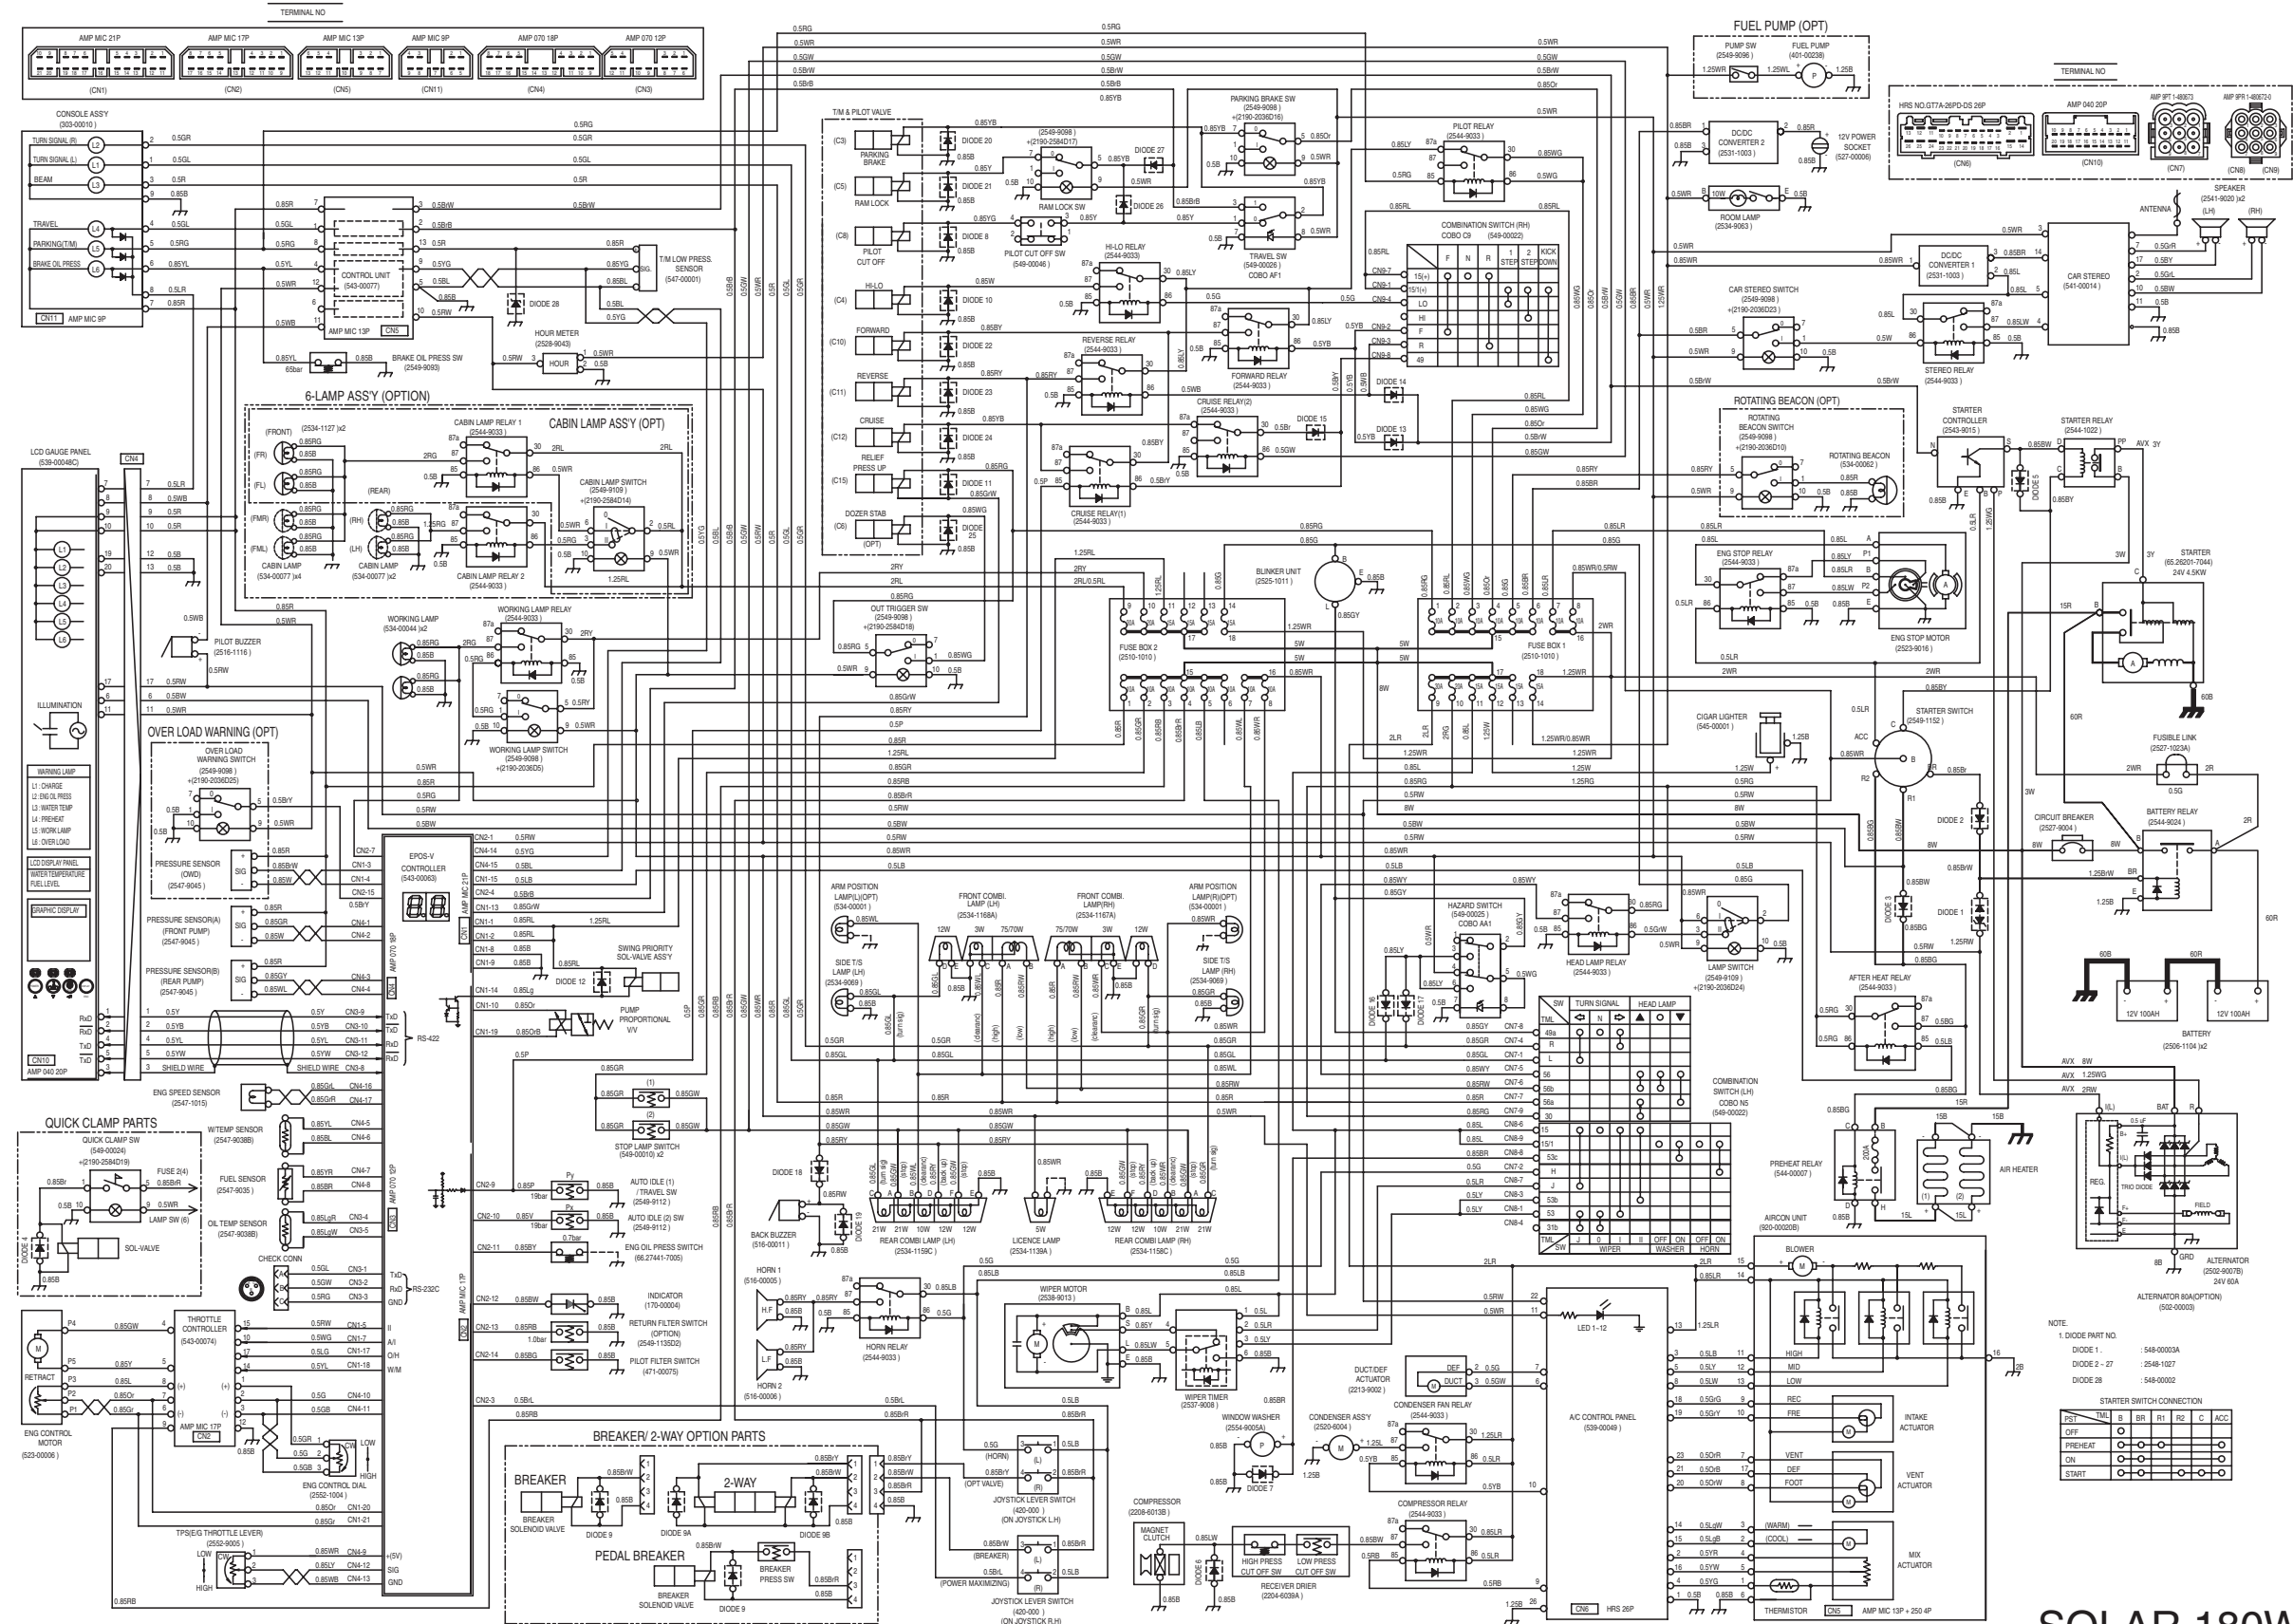

SOLAR 180W-V

BLS1770L

Page 27

PAGE UP

PAGE DOWN

NOTE.

1. DIODE PART NO.

DIODE 1 : 548-00003A


DIODE 2 ~ 27 : 2548-1027


DIODE 28 : 548-00002


STARTER SWITCH CONNECTION

	MC	B	BR	R1	R2	R3	ACC
PT	○						
OFF	○						
PREHEAT	○	○	○	○			○
ON	○	○	○	○			○
START	○	○	○	○			○


Name	Model Solar ELECTRICAL DIAGRAM NO. DOOSAN INFRACORE

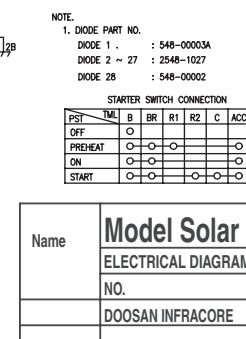


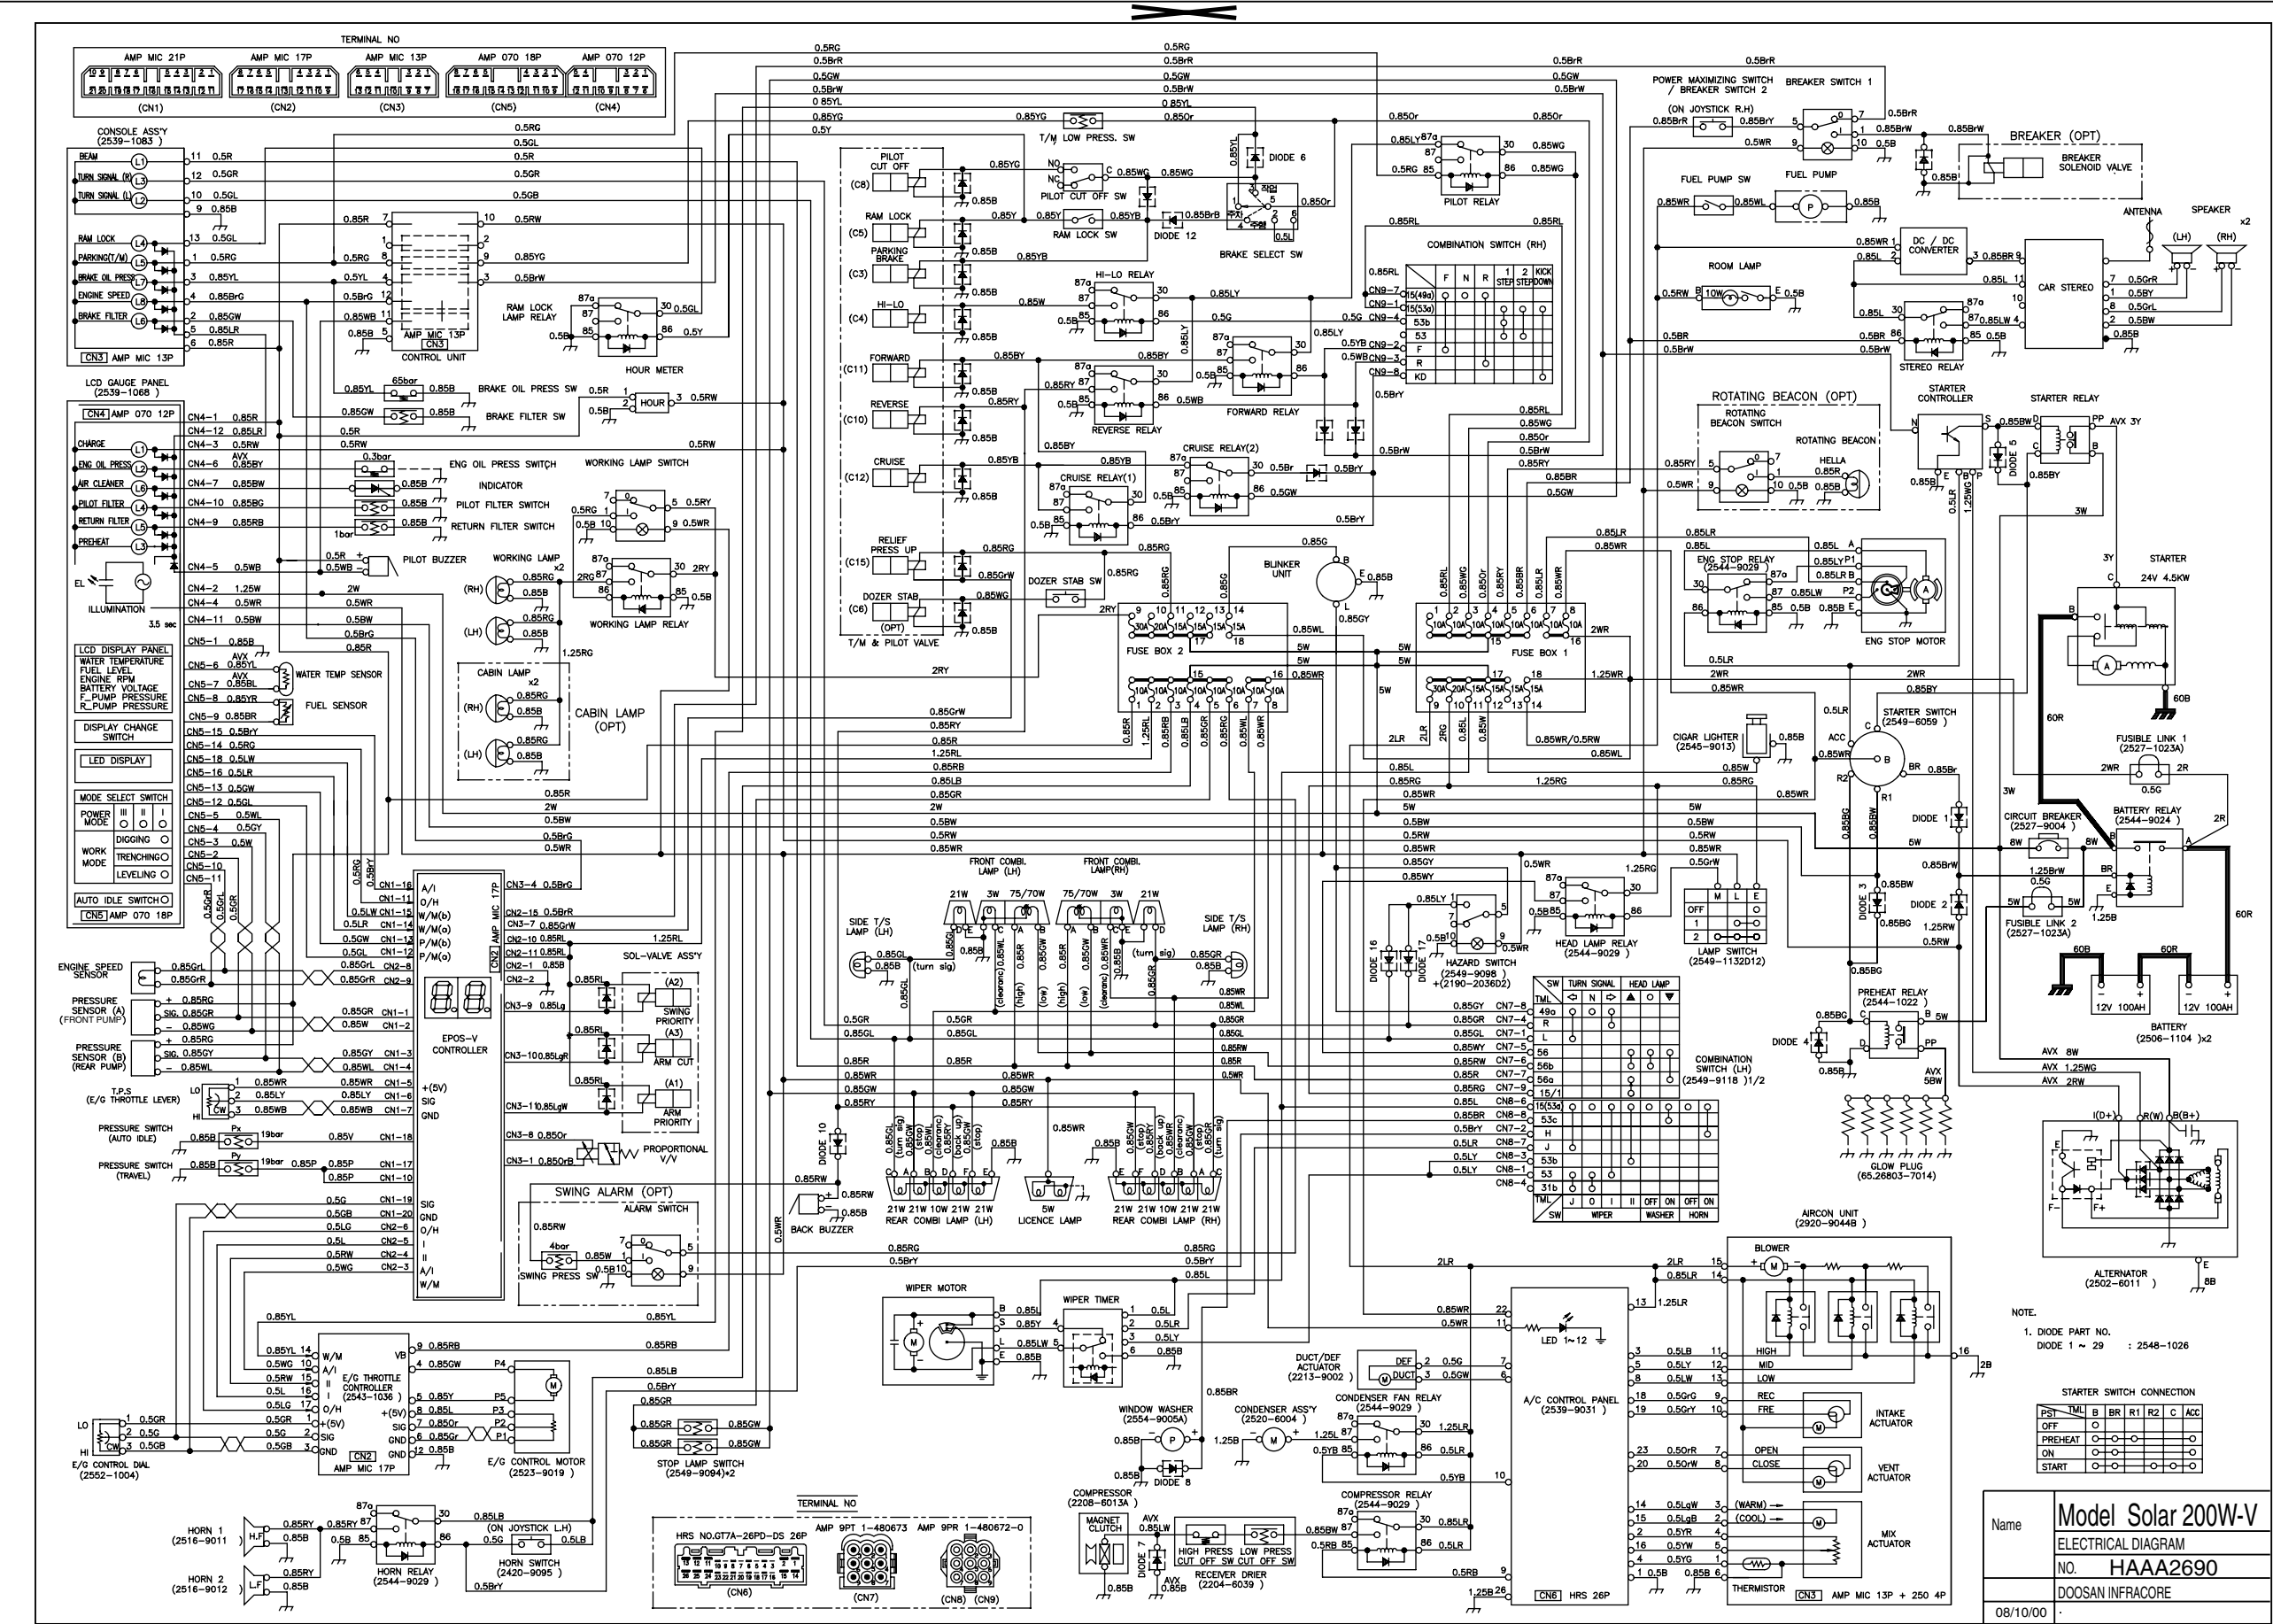


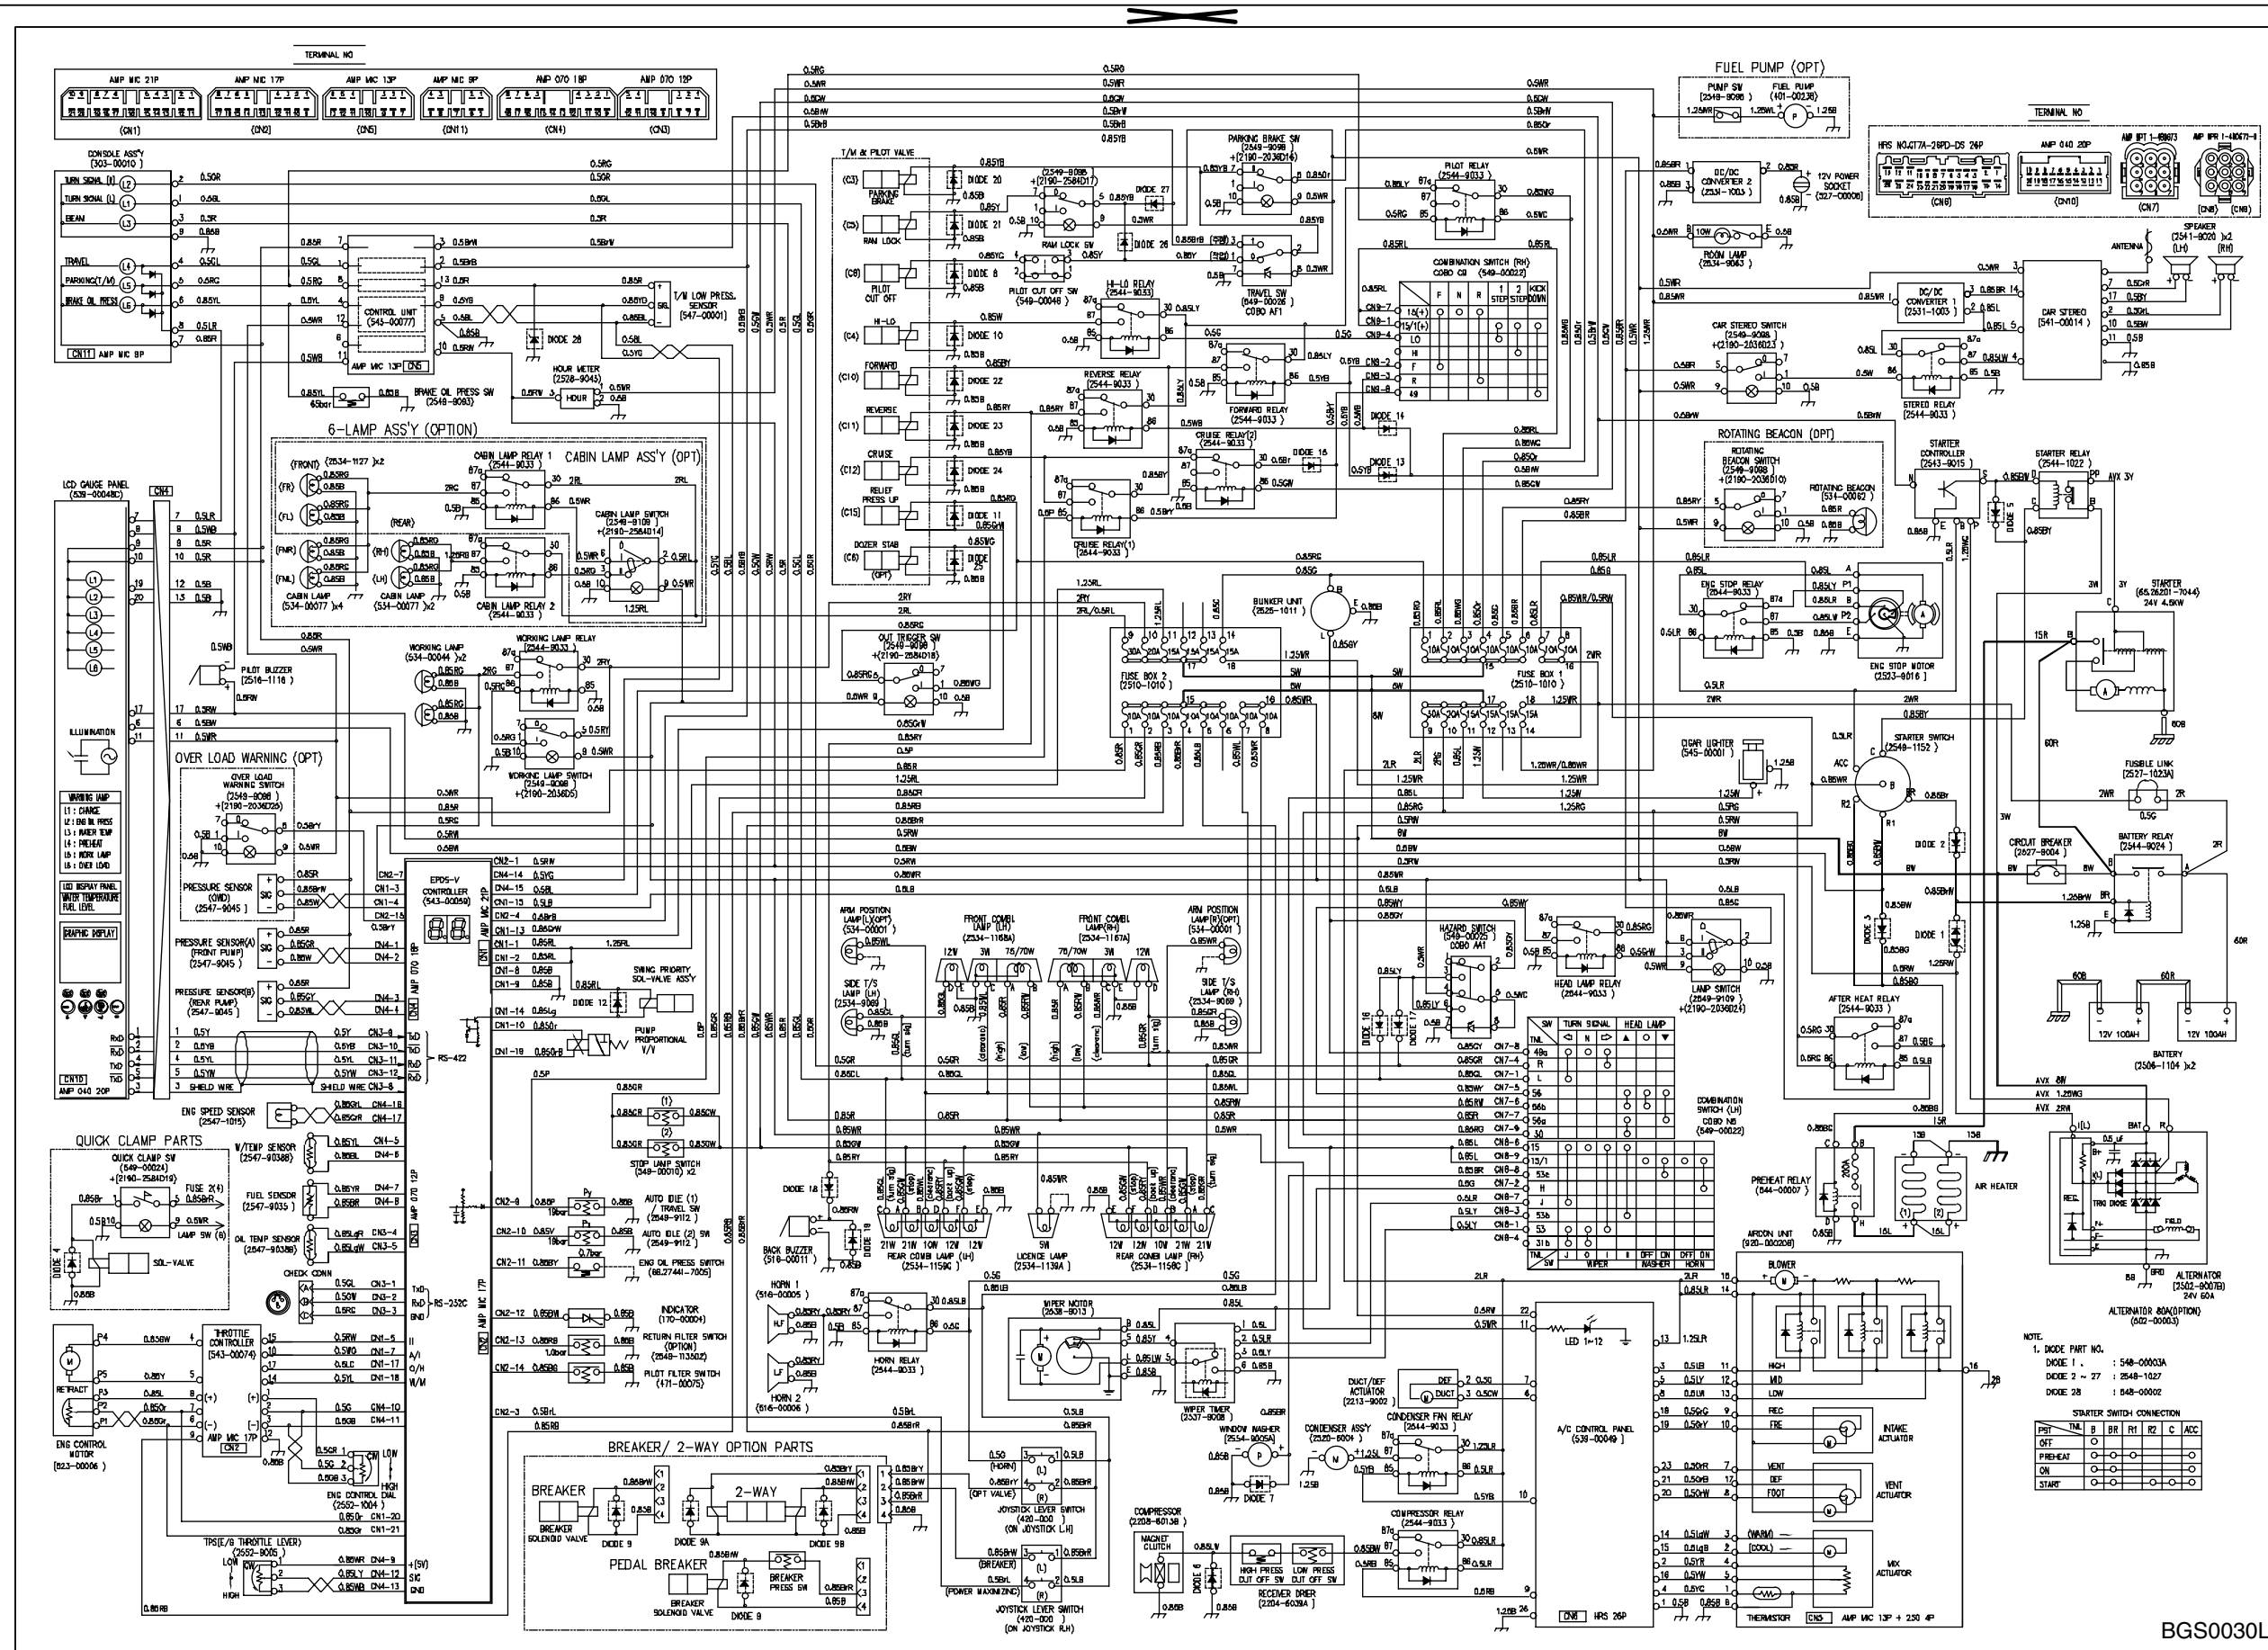

SOLAR 210W-V (S/N 1410 AND UP)

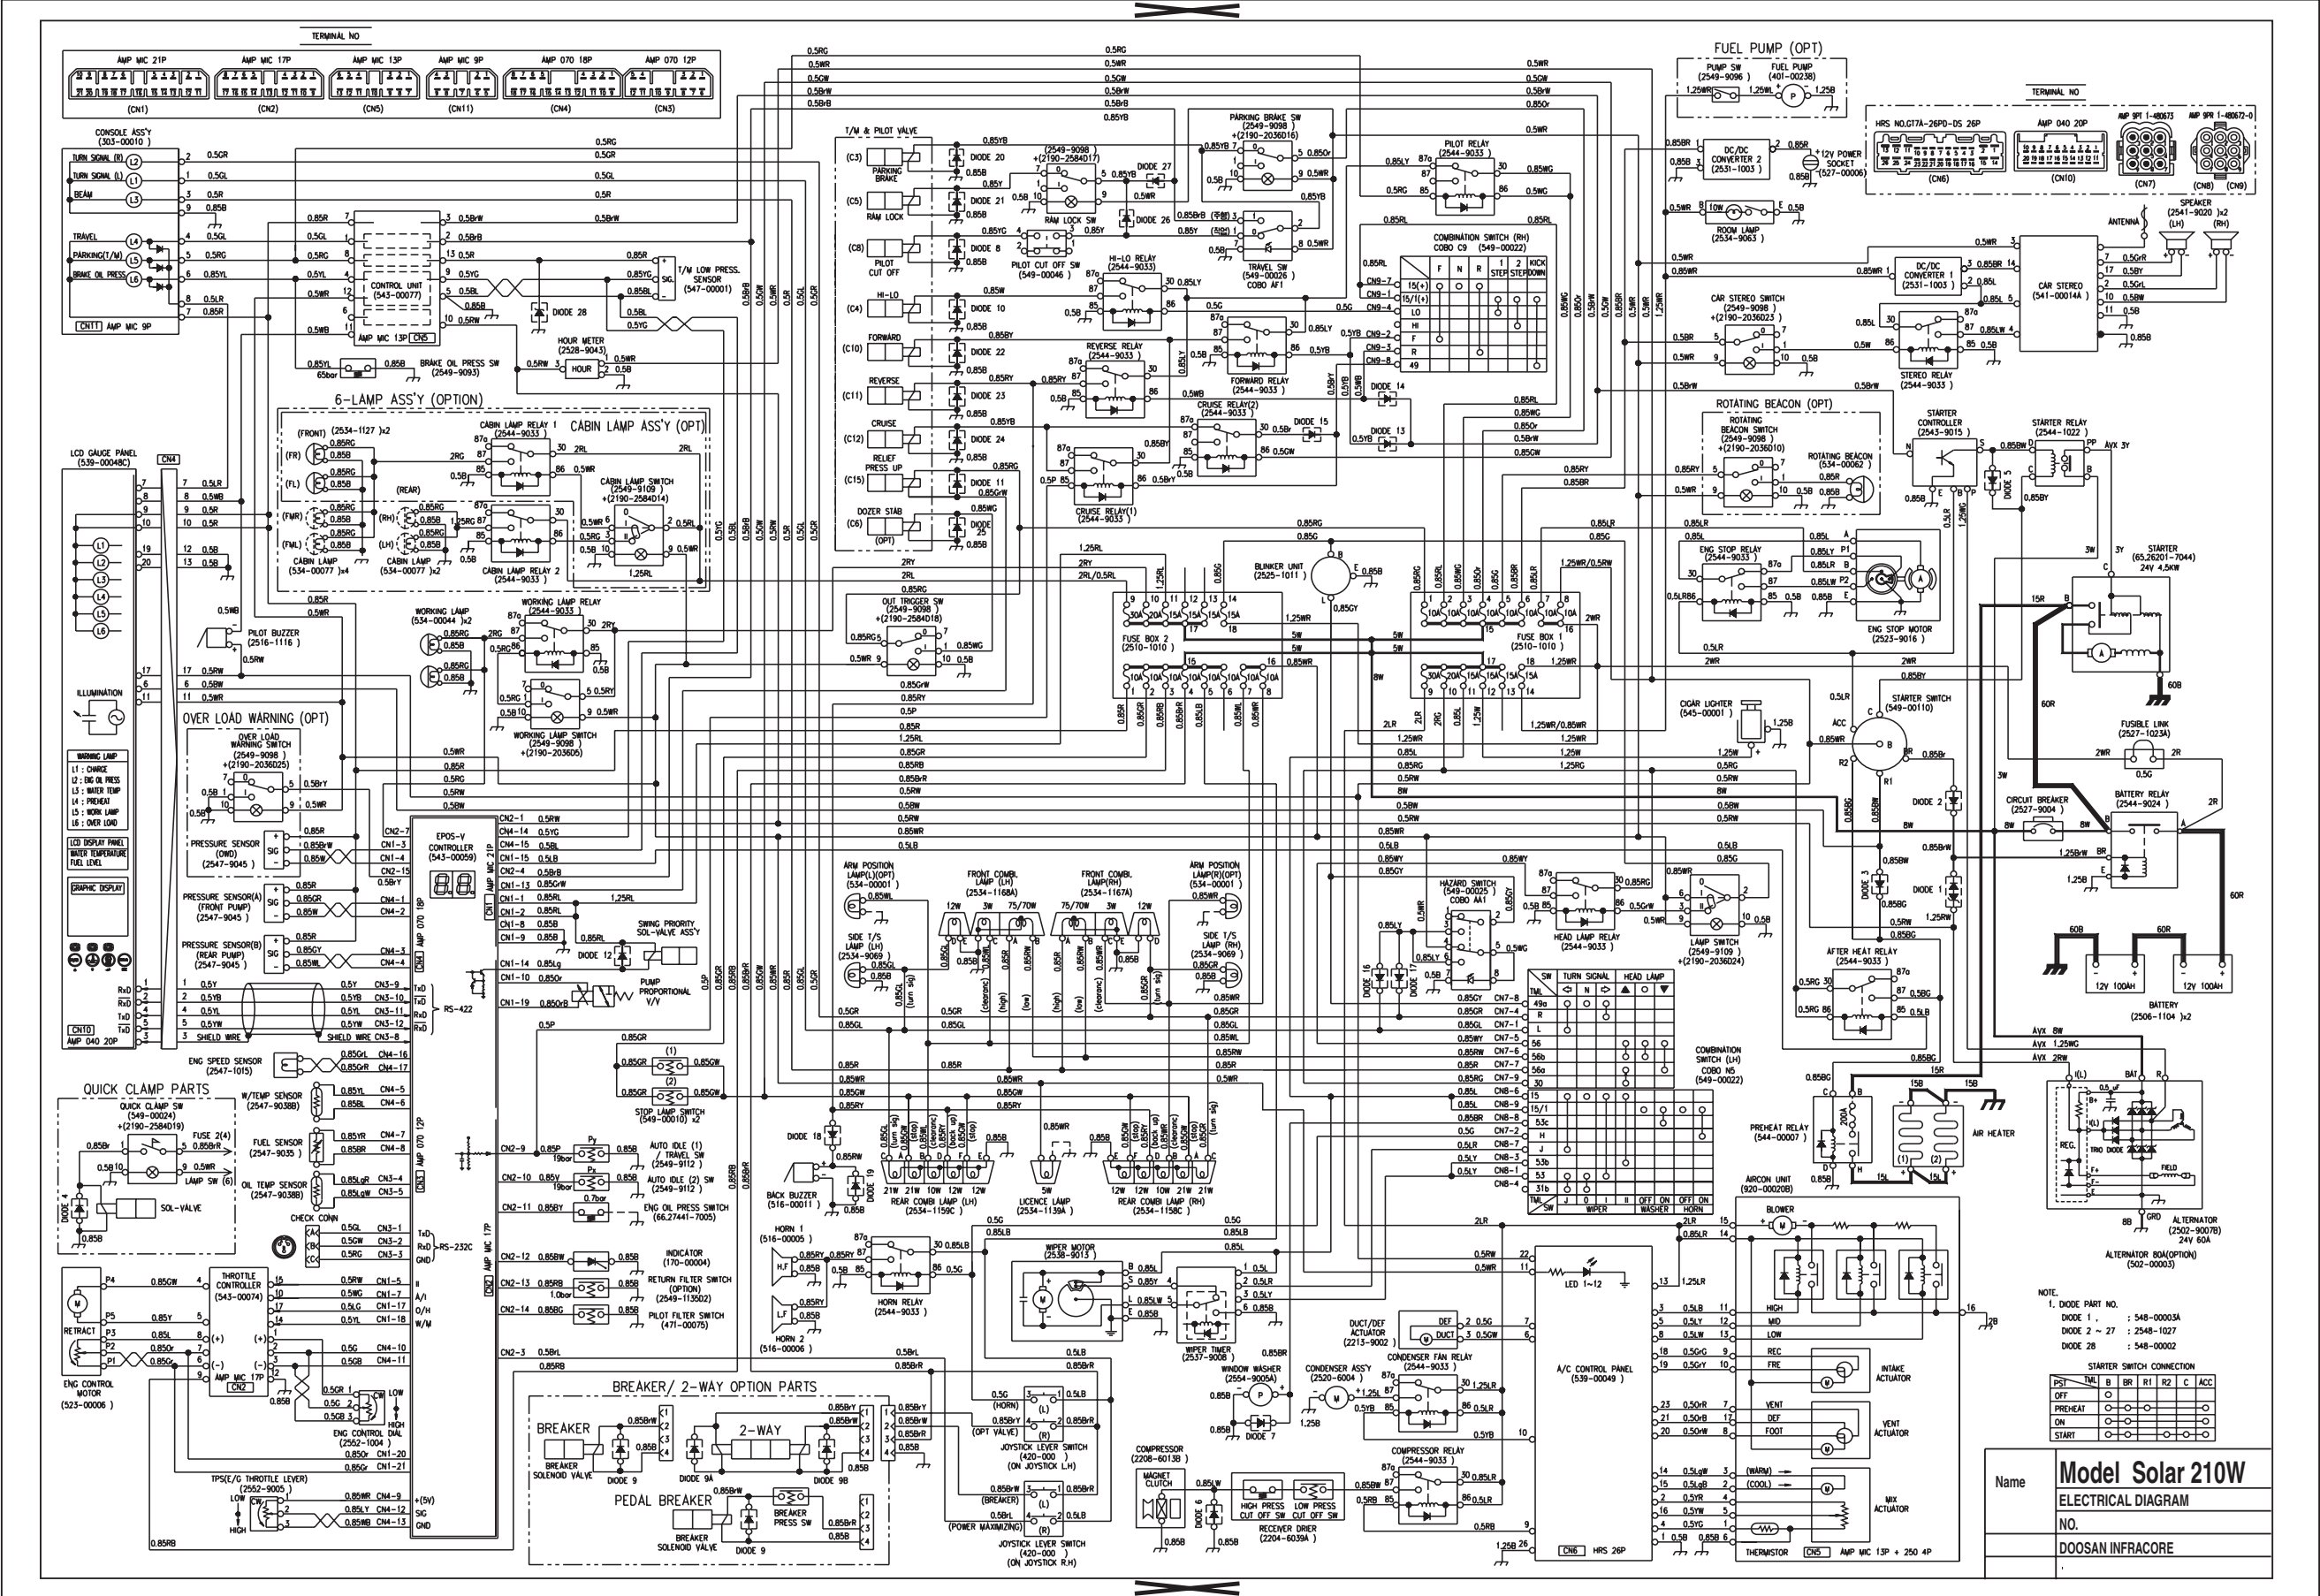

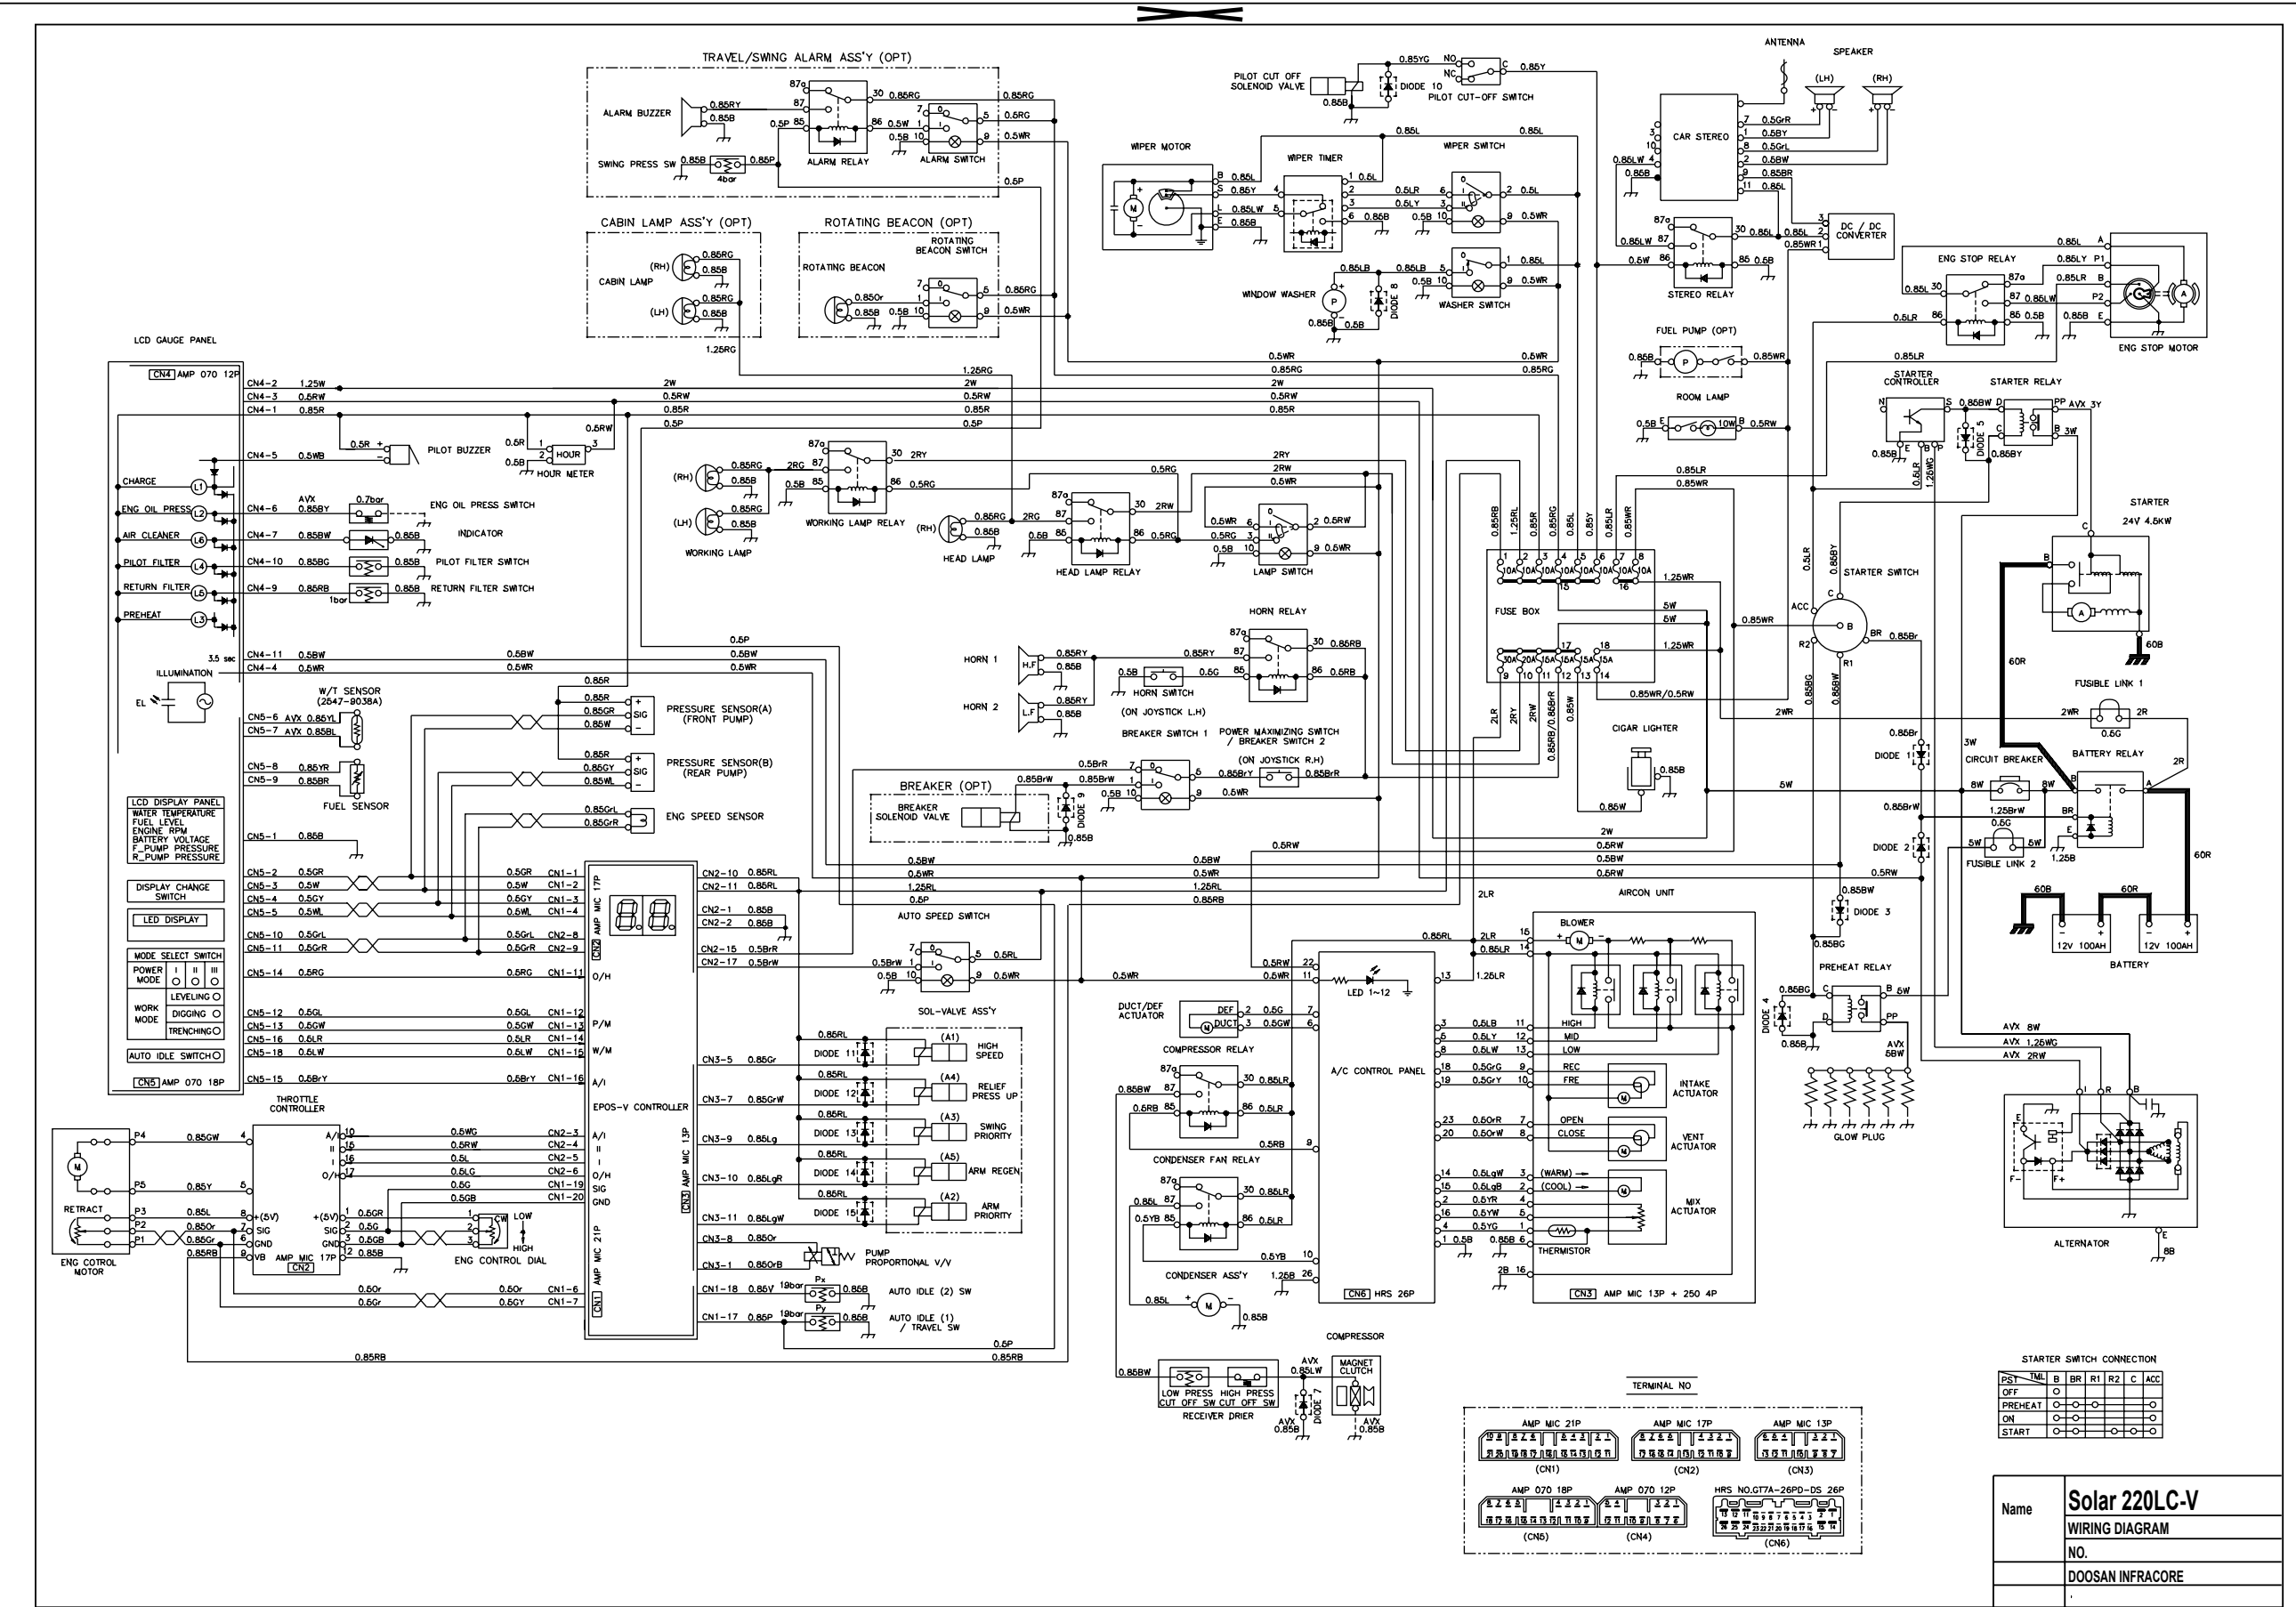


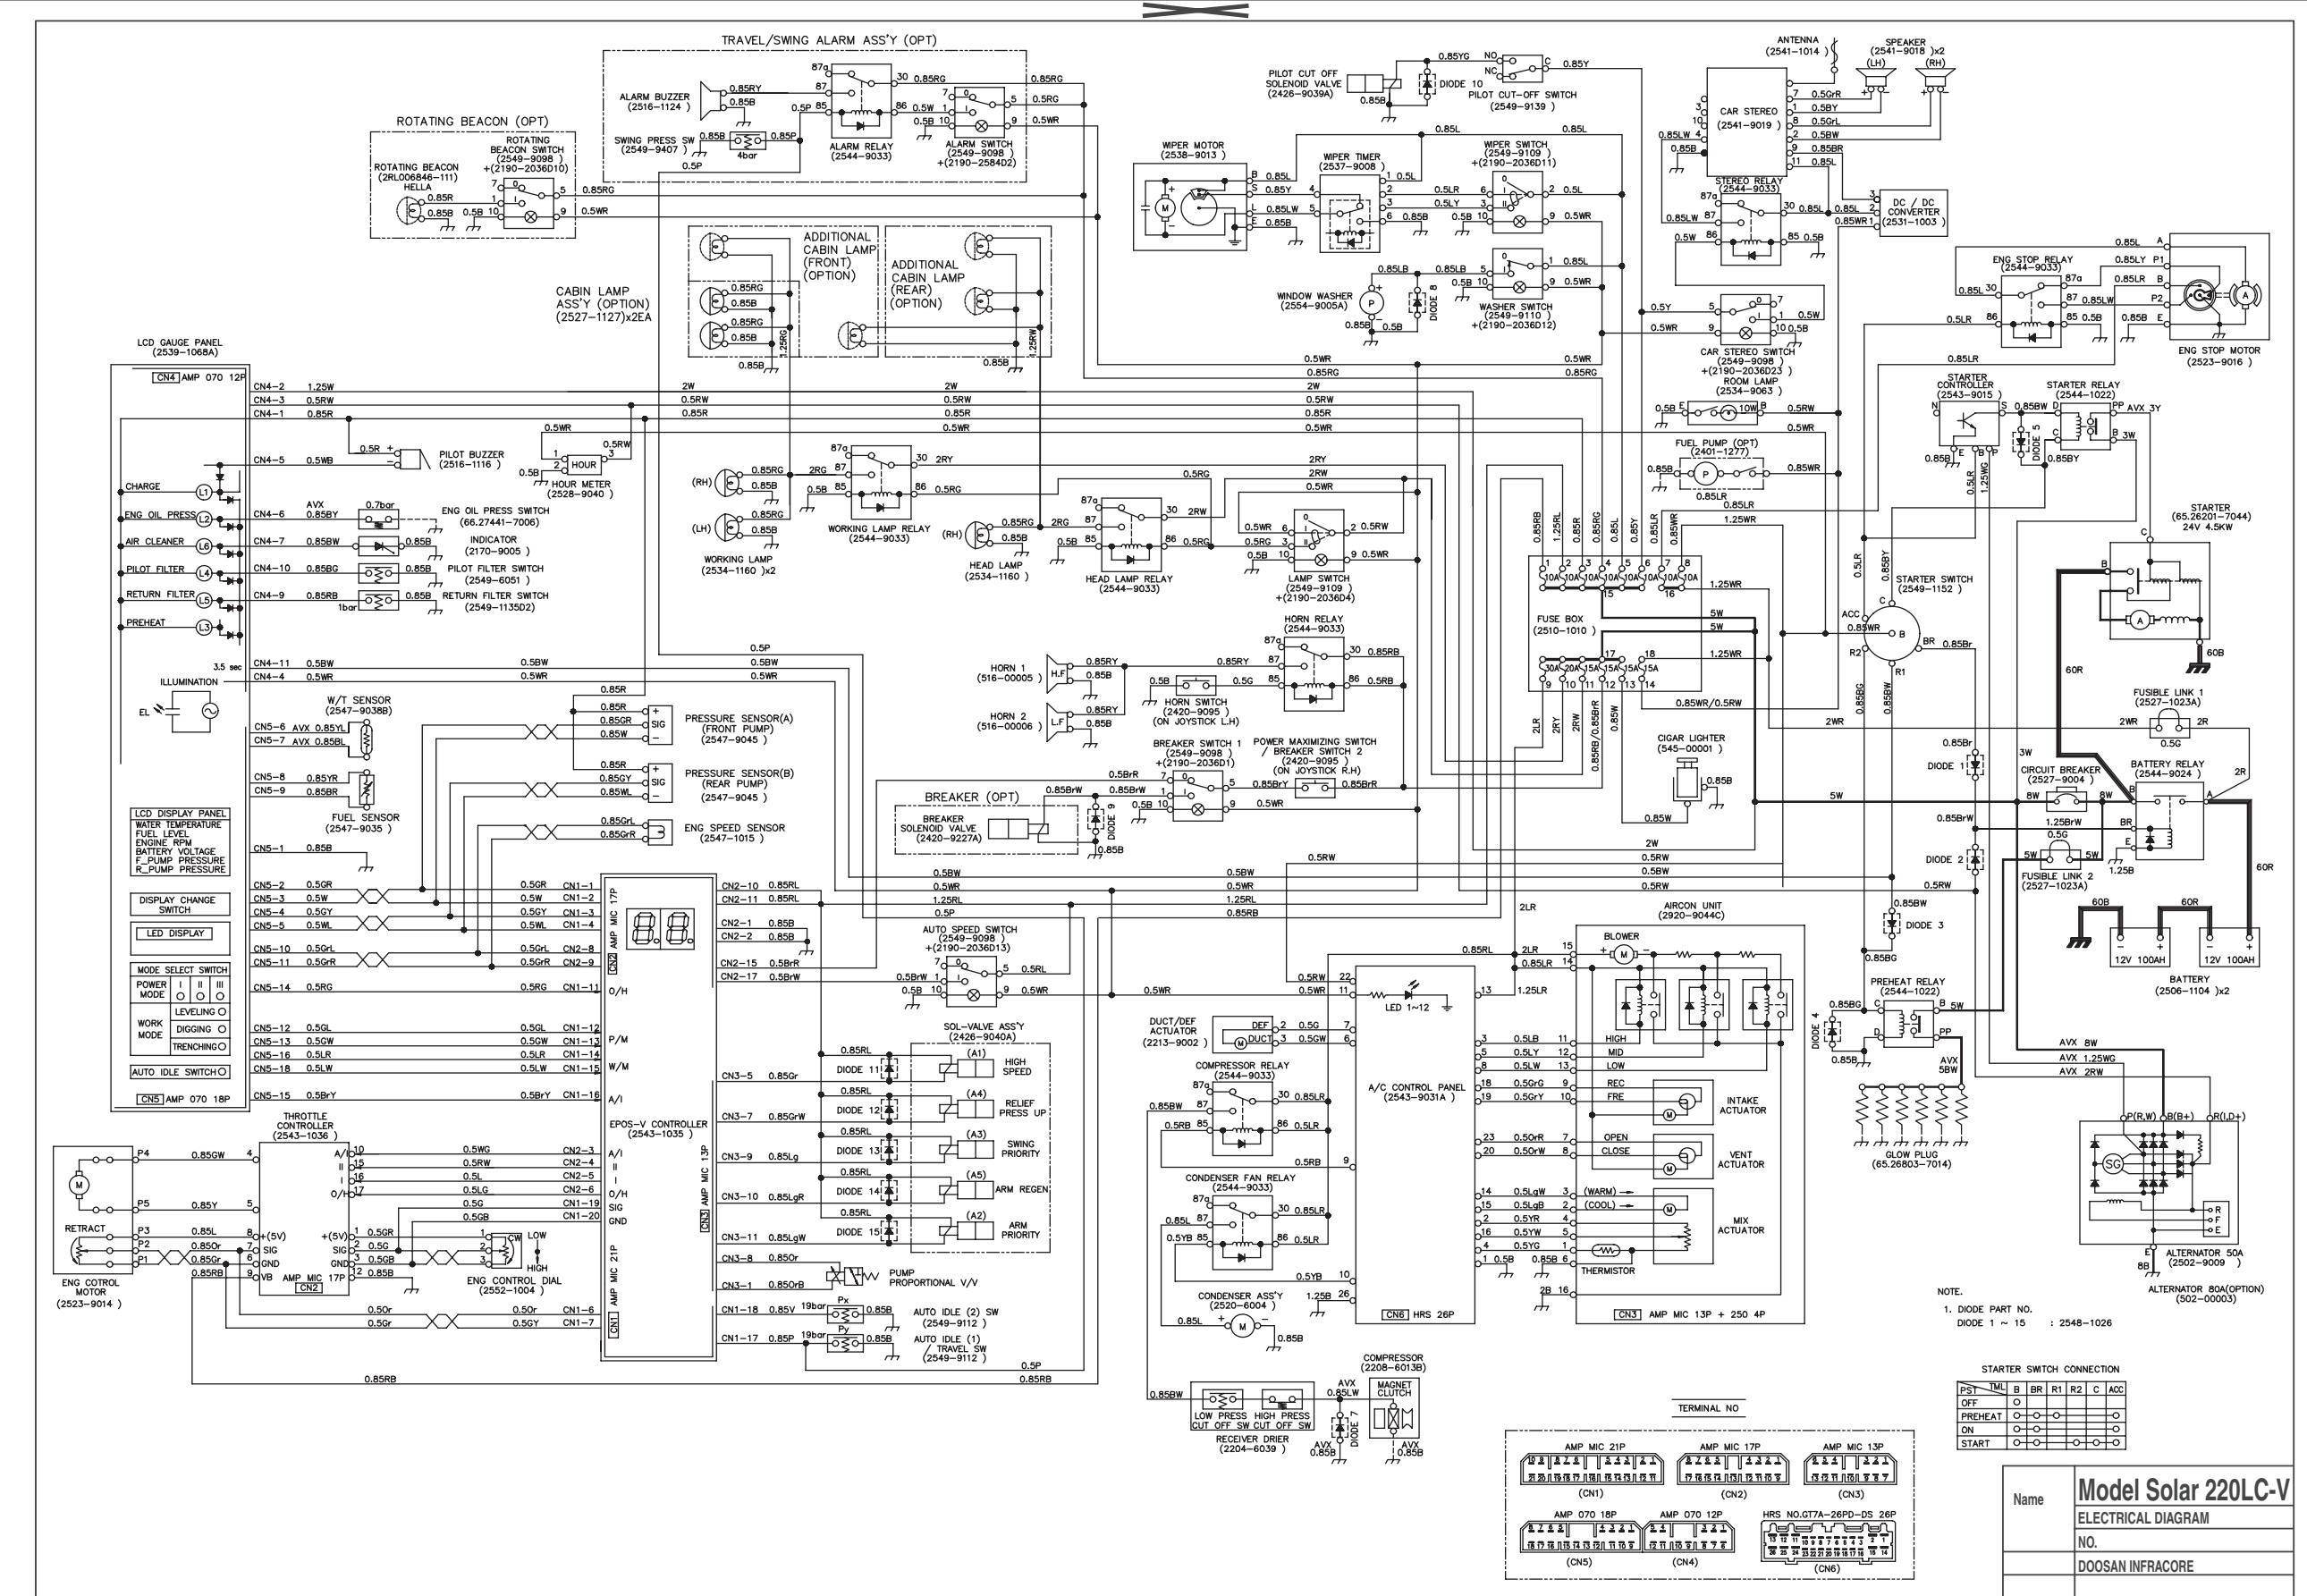

NOTE.
1. DIODE PART NO.
DIODE 1 ~ 15 : 2548-1026

STARTER SWITCH CONNECTION									
PSY	TML	B	BR	R1	R2	C	ACC		
OFF									
PREHEAT									
ON									
START									

Name	Model Solar 220LC-V
	ELECTRICAL DIAGRAM
NO.	
	DOOSAN INFRACORE

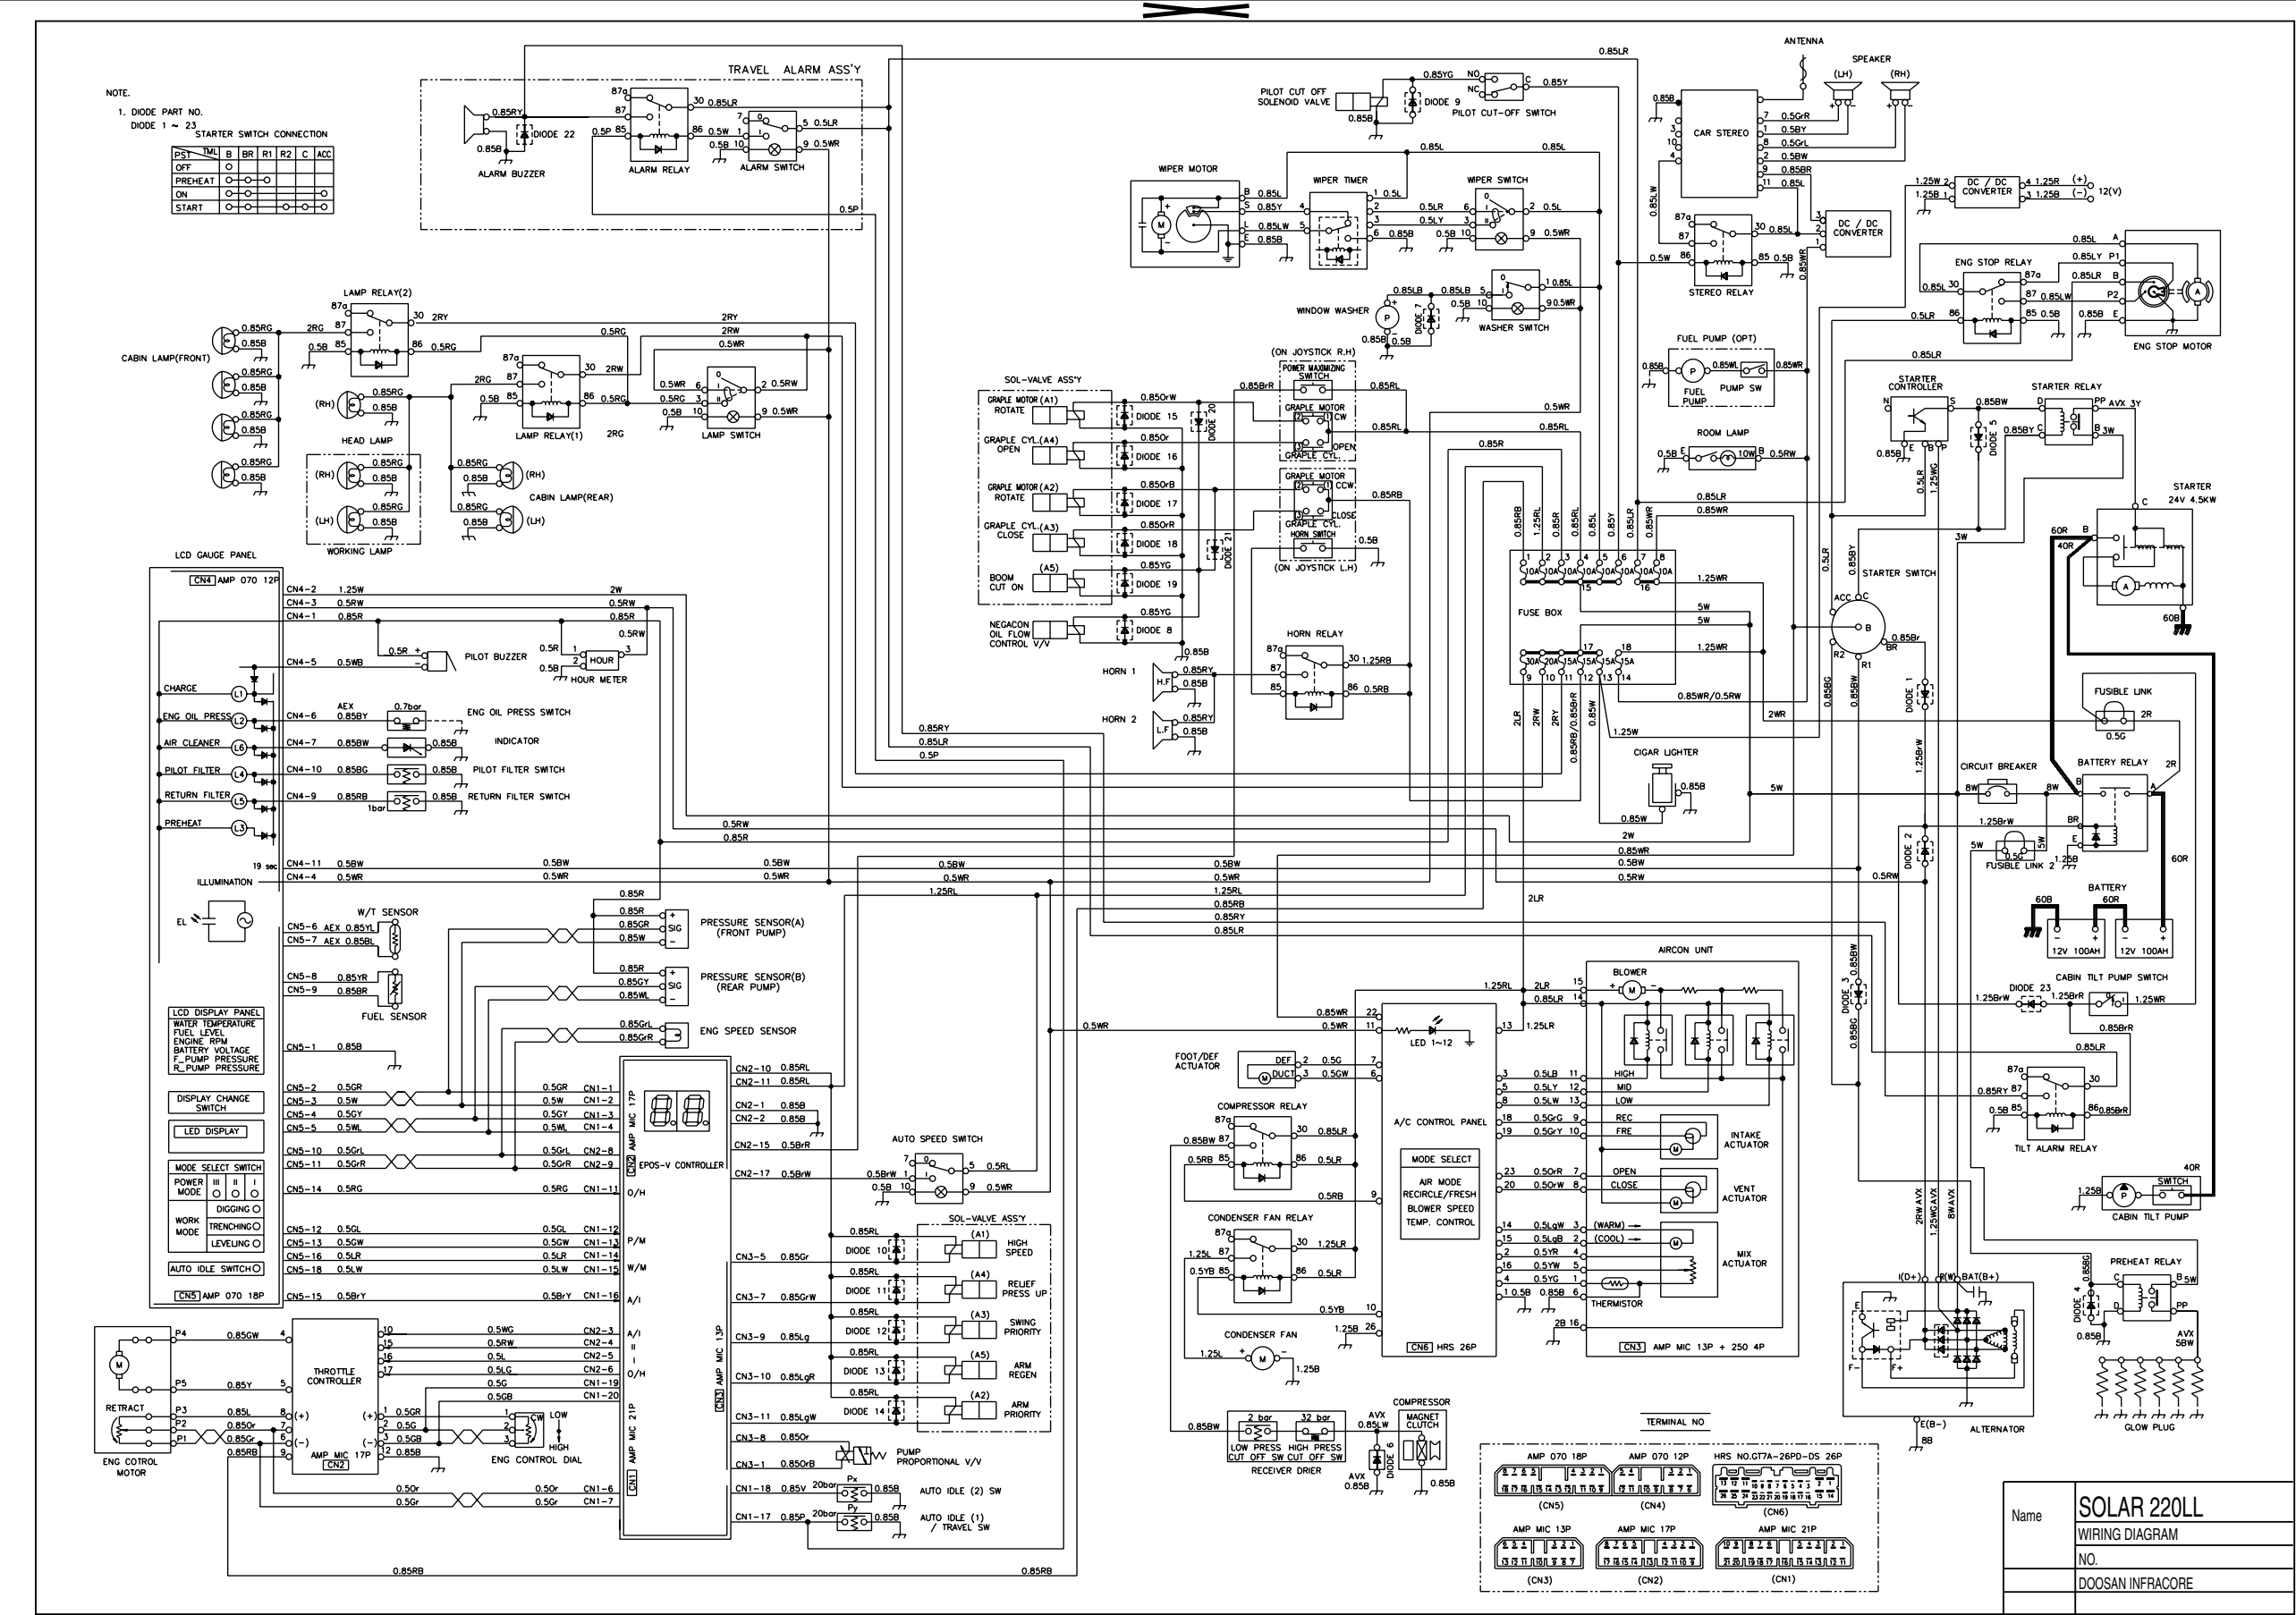

NOTE.

1. DIODE PART NO.


DIODE 2. : 548-00003A

DIODE 1, 3 ~ 12 : 2548-1027

STARTER SWITCH CONNECTION

PST	THL	B	BR	R1	R2	C	ACC
OFF							
PREHEAT		○	○	○			
ON						○	
START		○	○	○	○	○	

Name	Model Solar 22
	ELECTRICAL DIAGRAM
	No. 599-00035
	DOOSAN INFRACORE

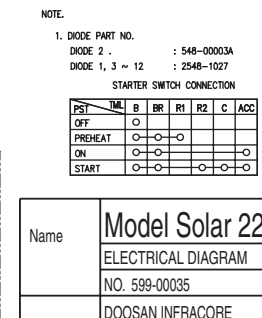

NOTE.

1. DIODE PART NO.


DIODE 2. : 548-00003A


DIODE 1, 3 ~ 12 : 2548-1027


STARTER SWITCH CONNECTION

PST	THL	B	BR	R1	R2	C	ACC
OFF							
PREHEAT		○	○	○			
ON						○	
START		○	○	○	○	○	

Name	Model Solar 22
	ELECTRICAL DIAGRAM
	No. 599-00035
	DOOSAN INFRACORE

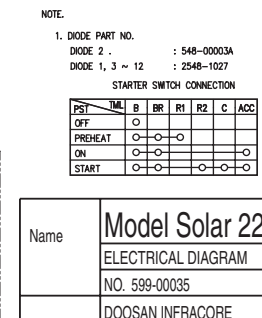


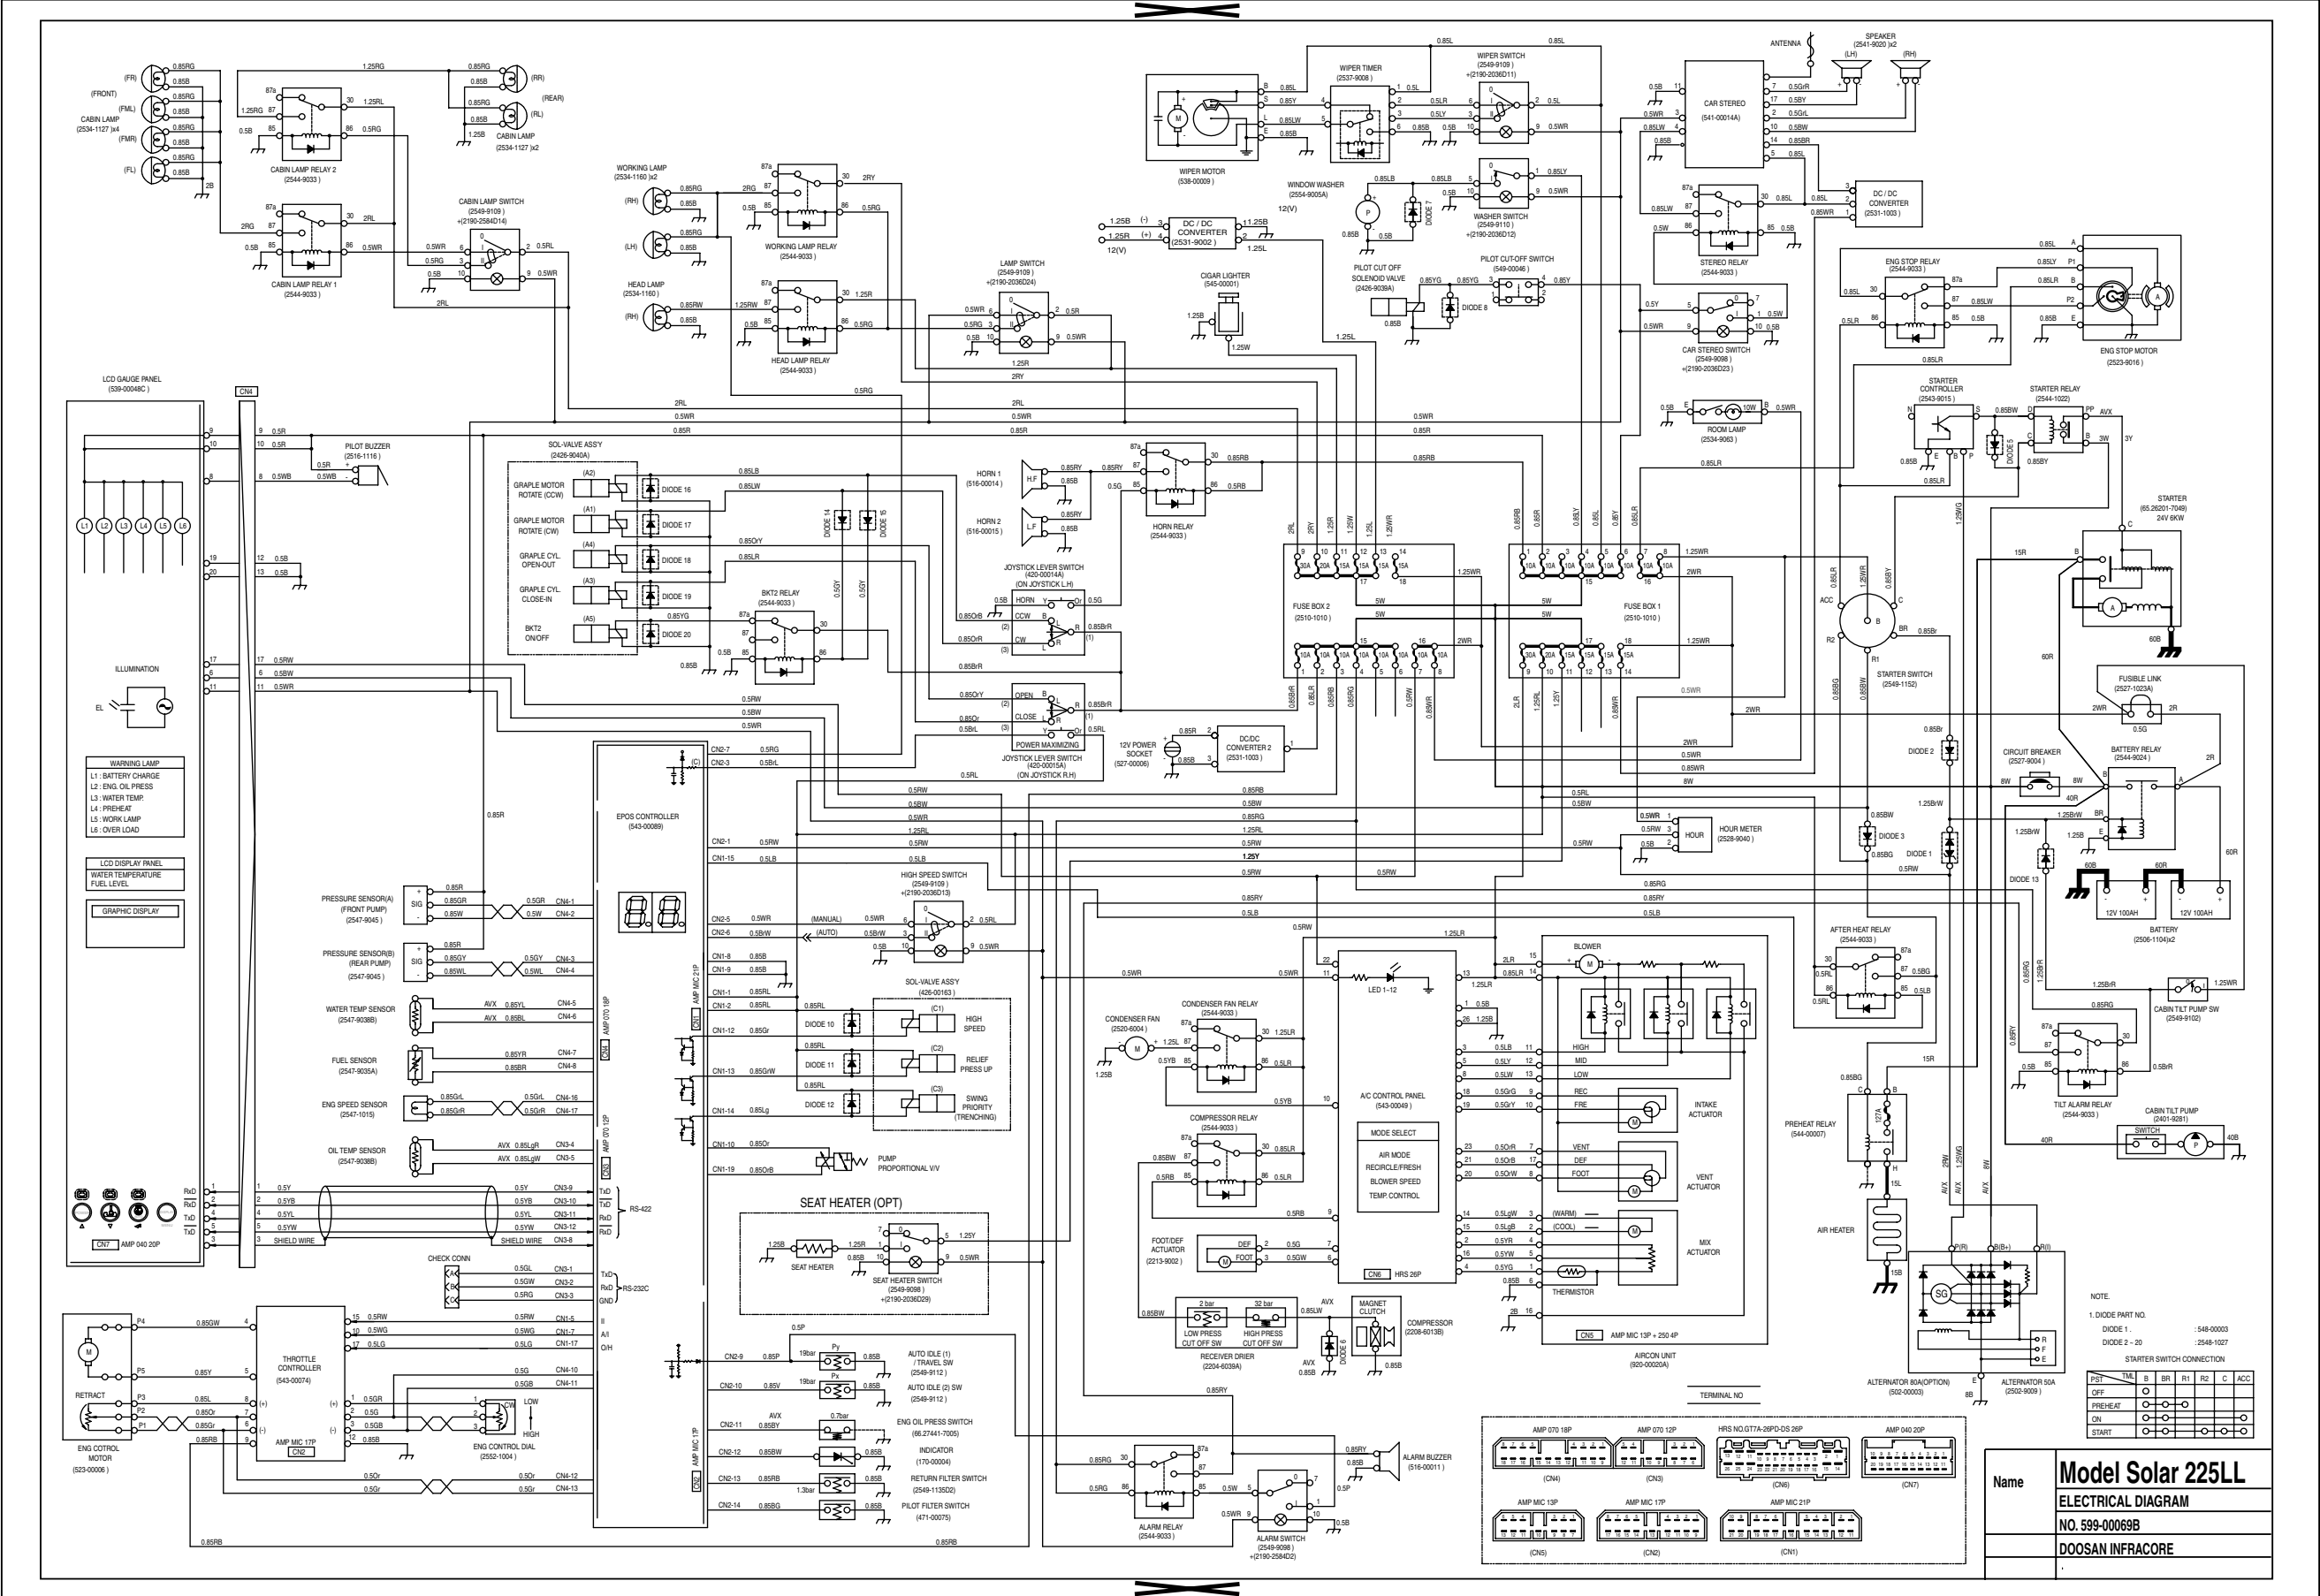


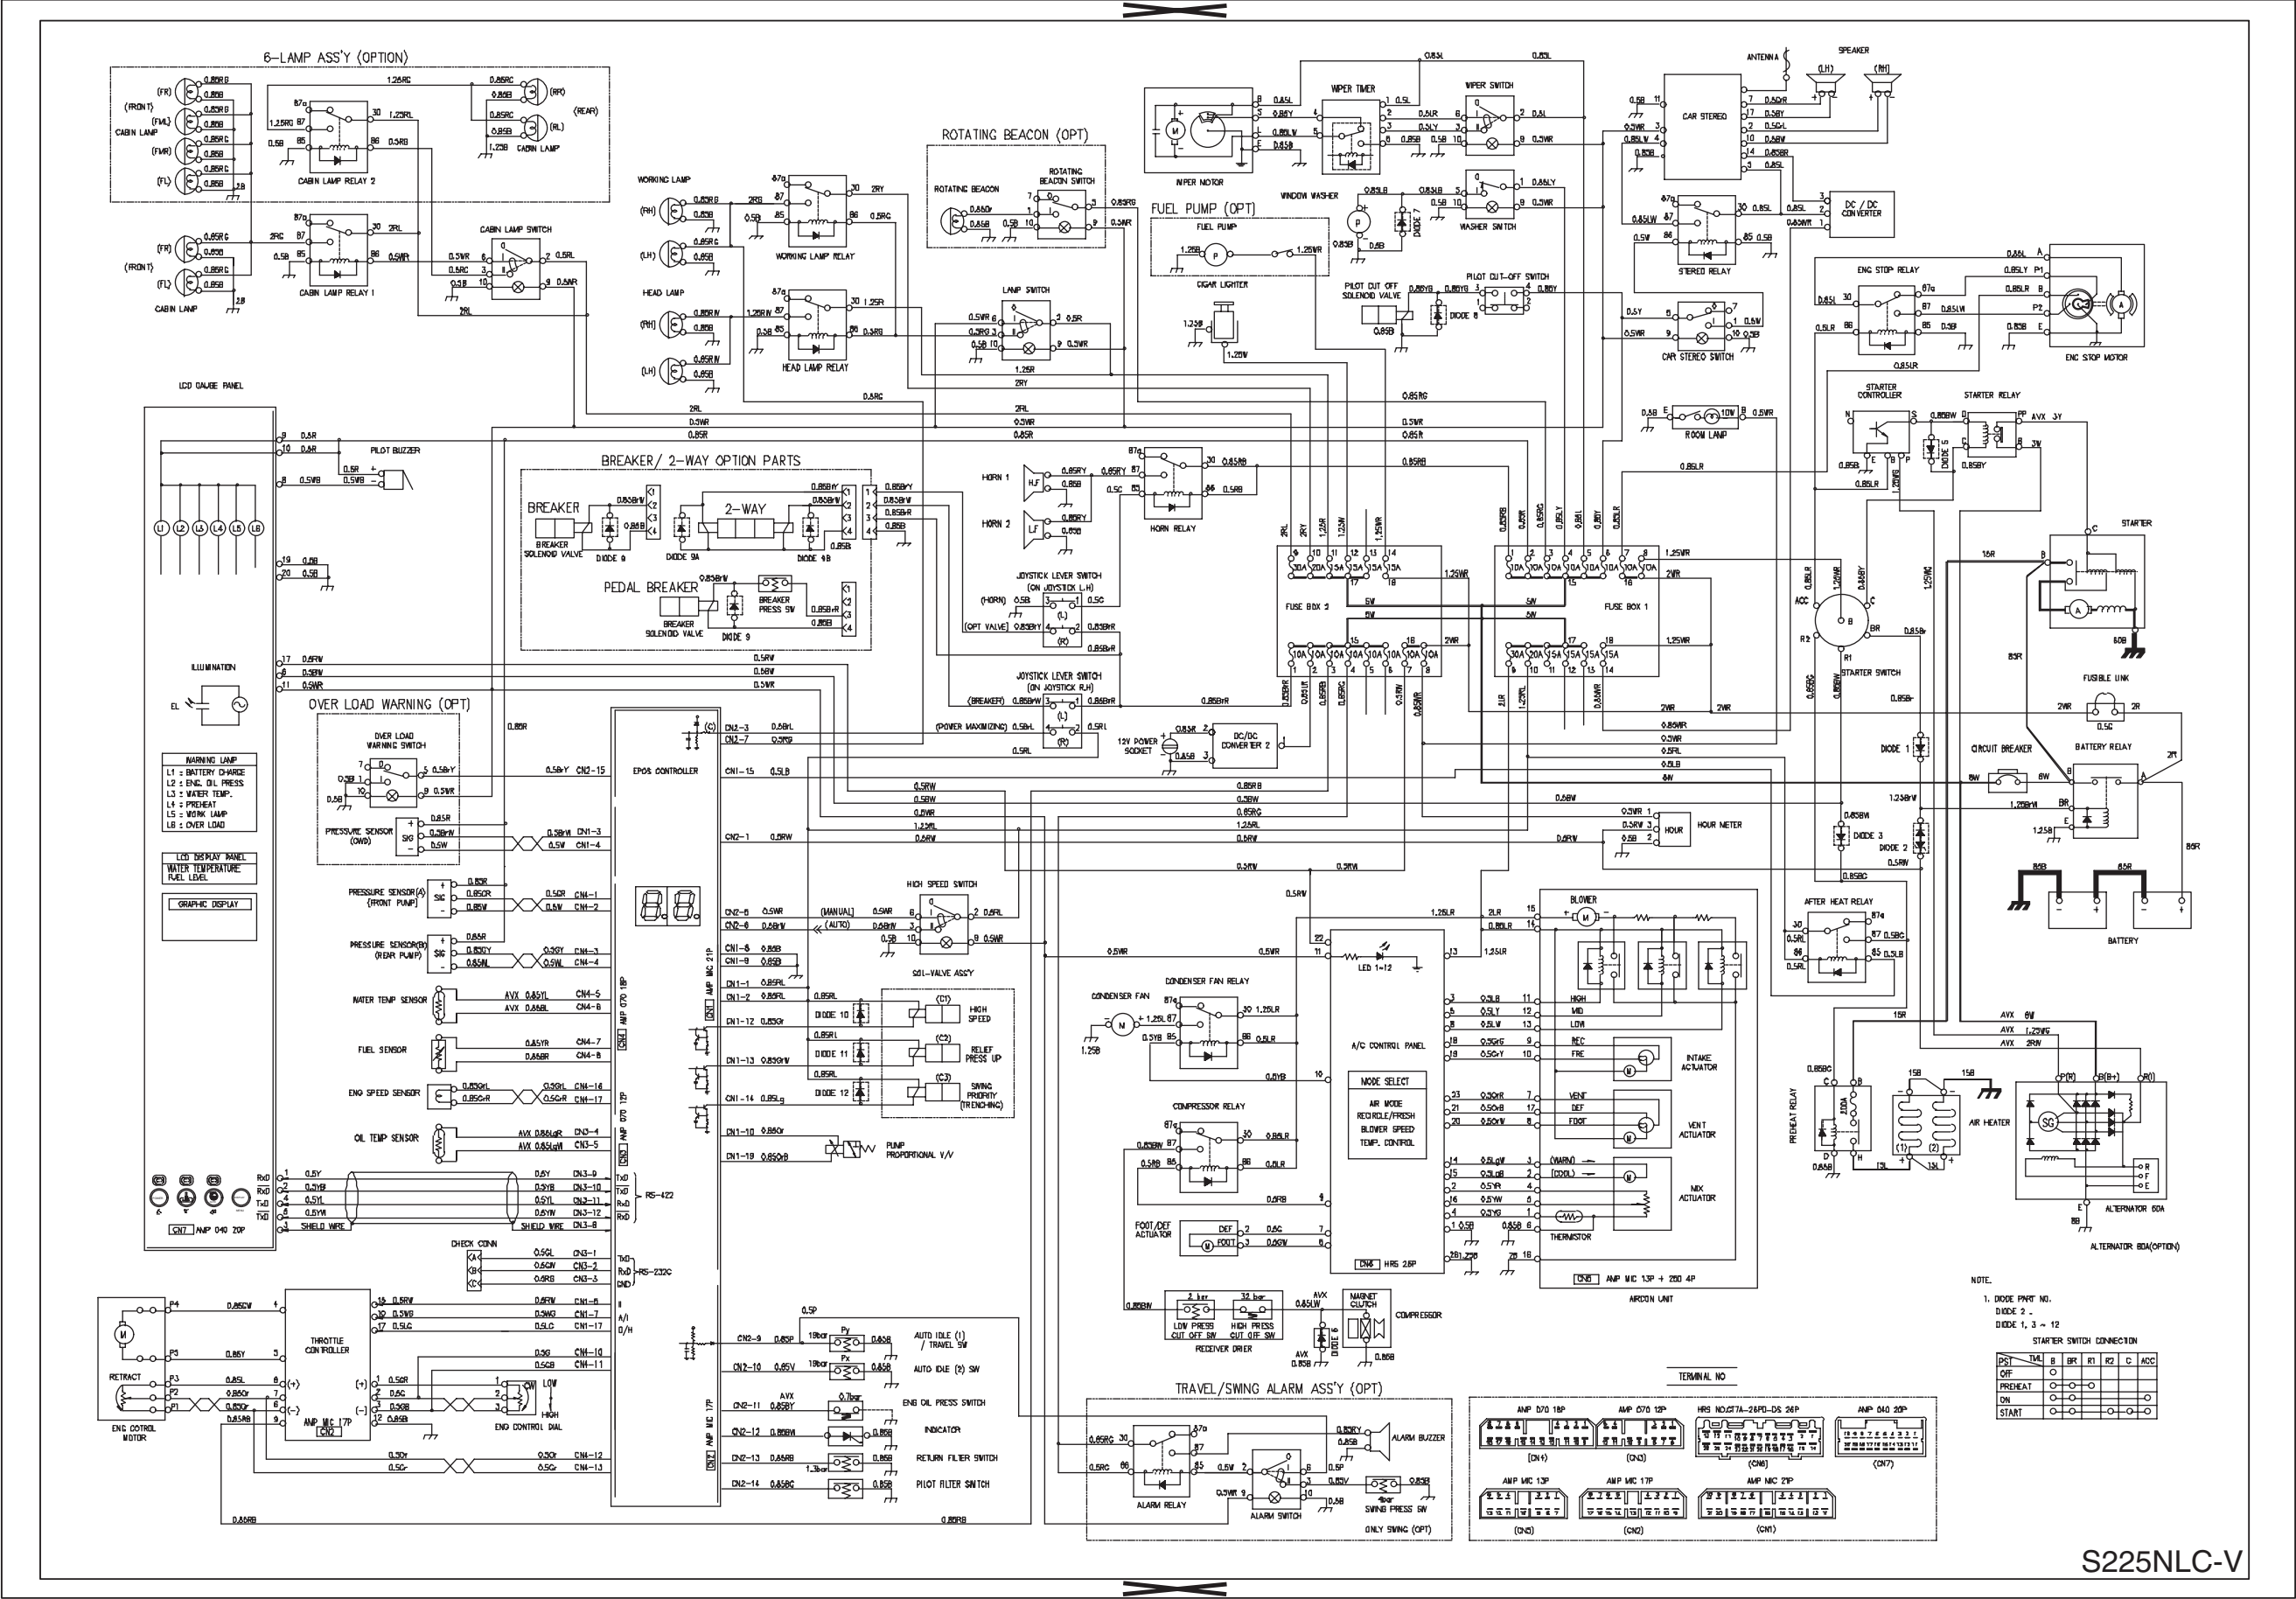

S225NLC-V


BDS0190L

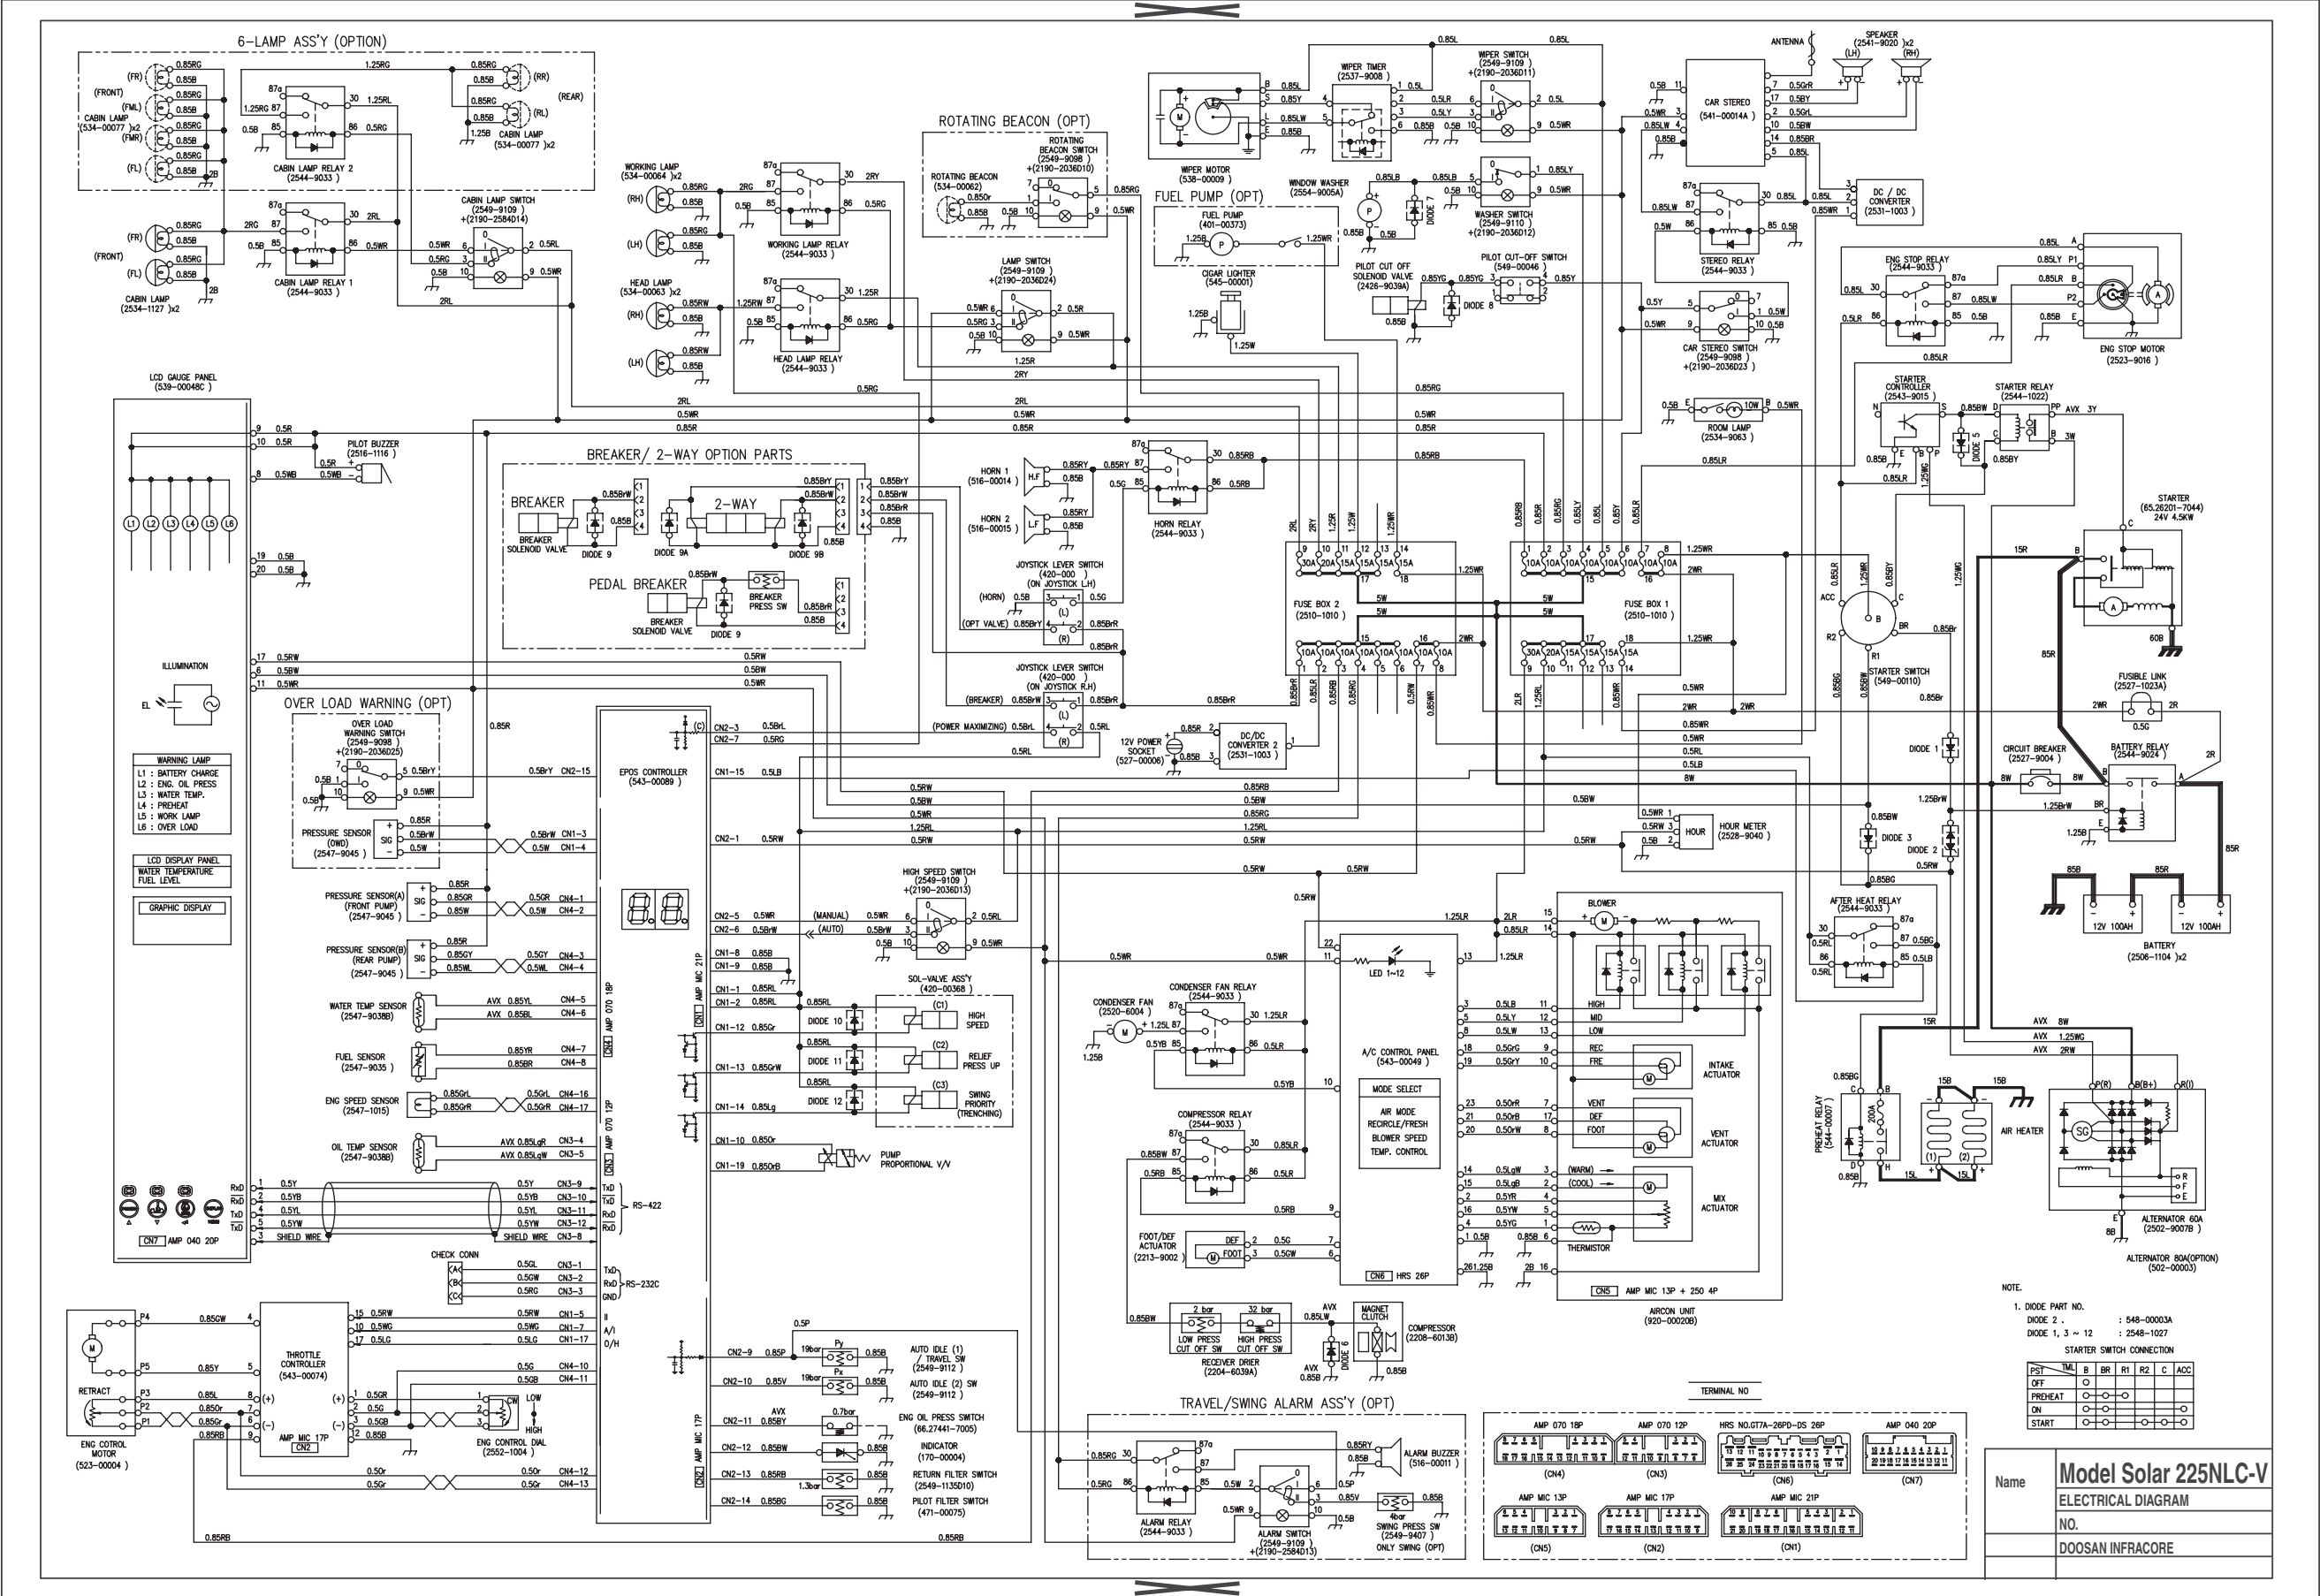

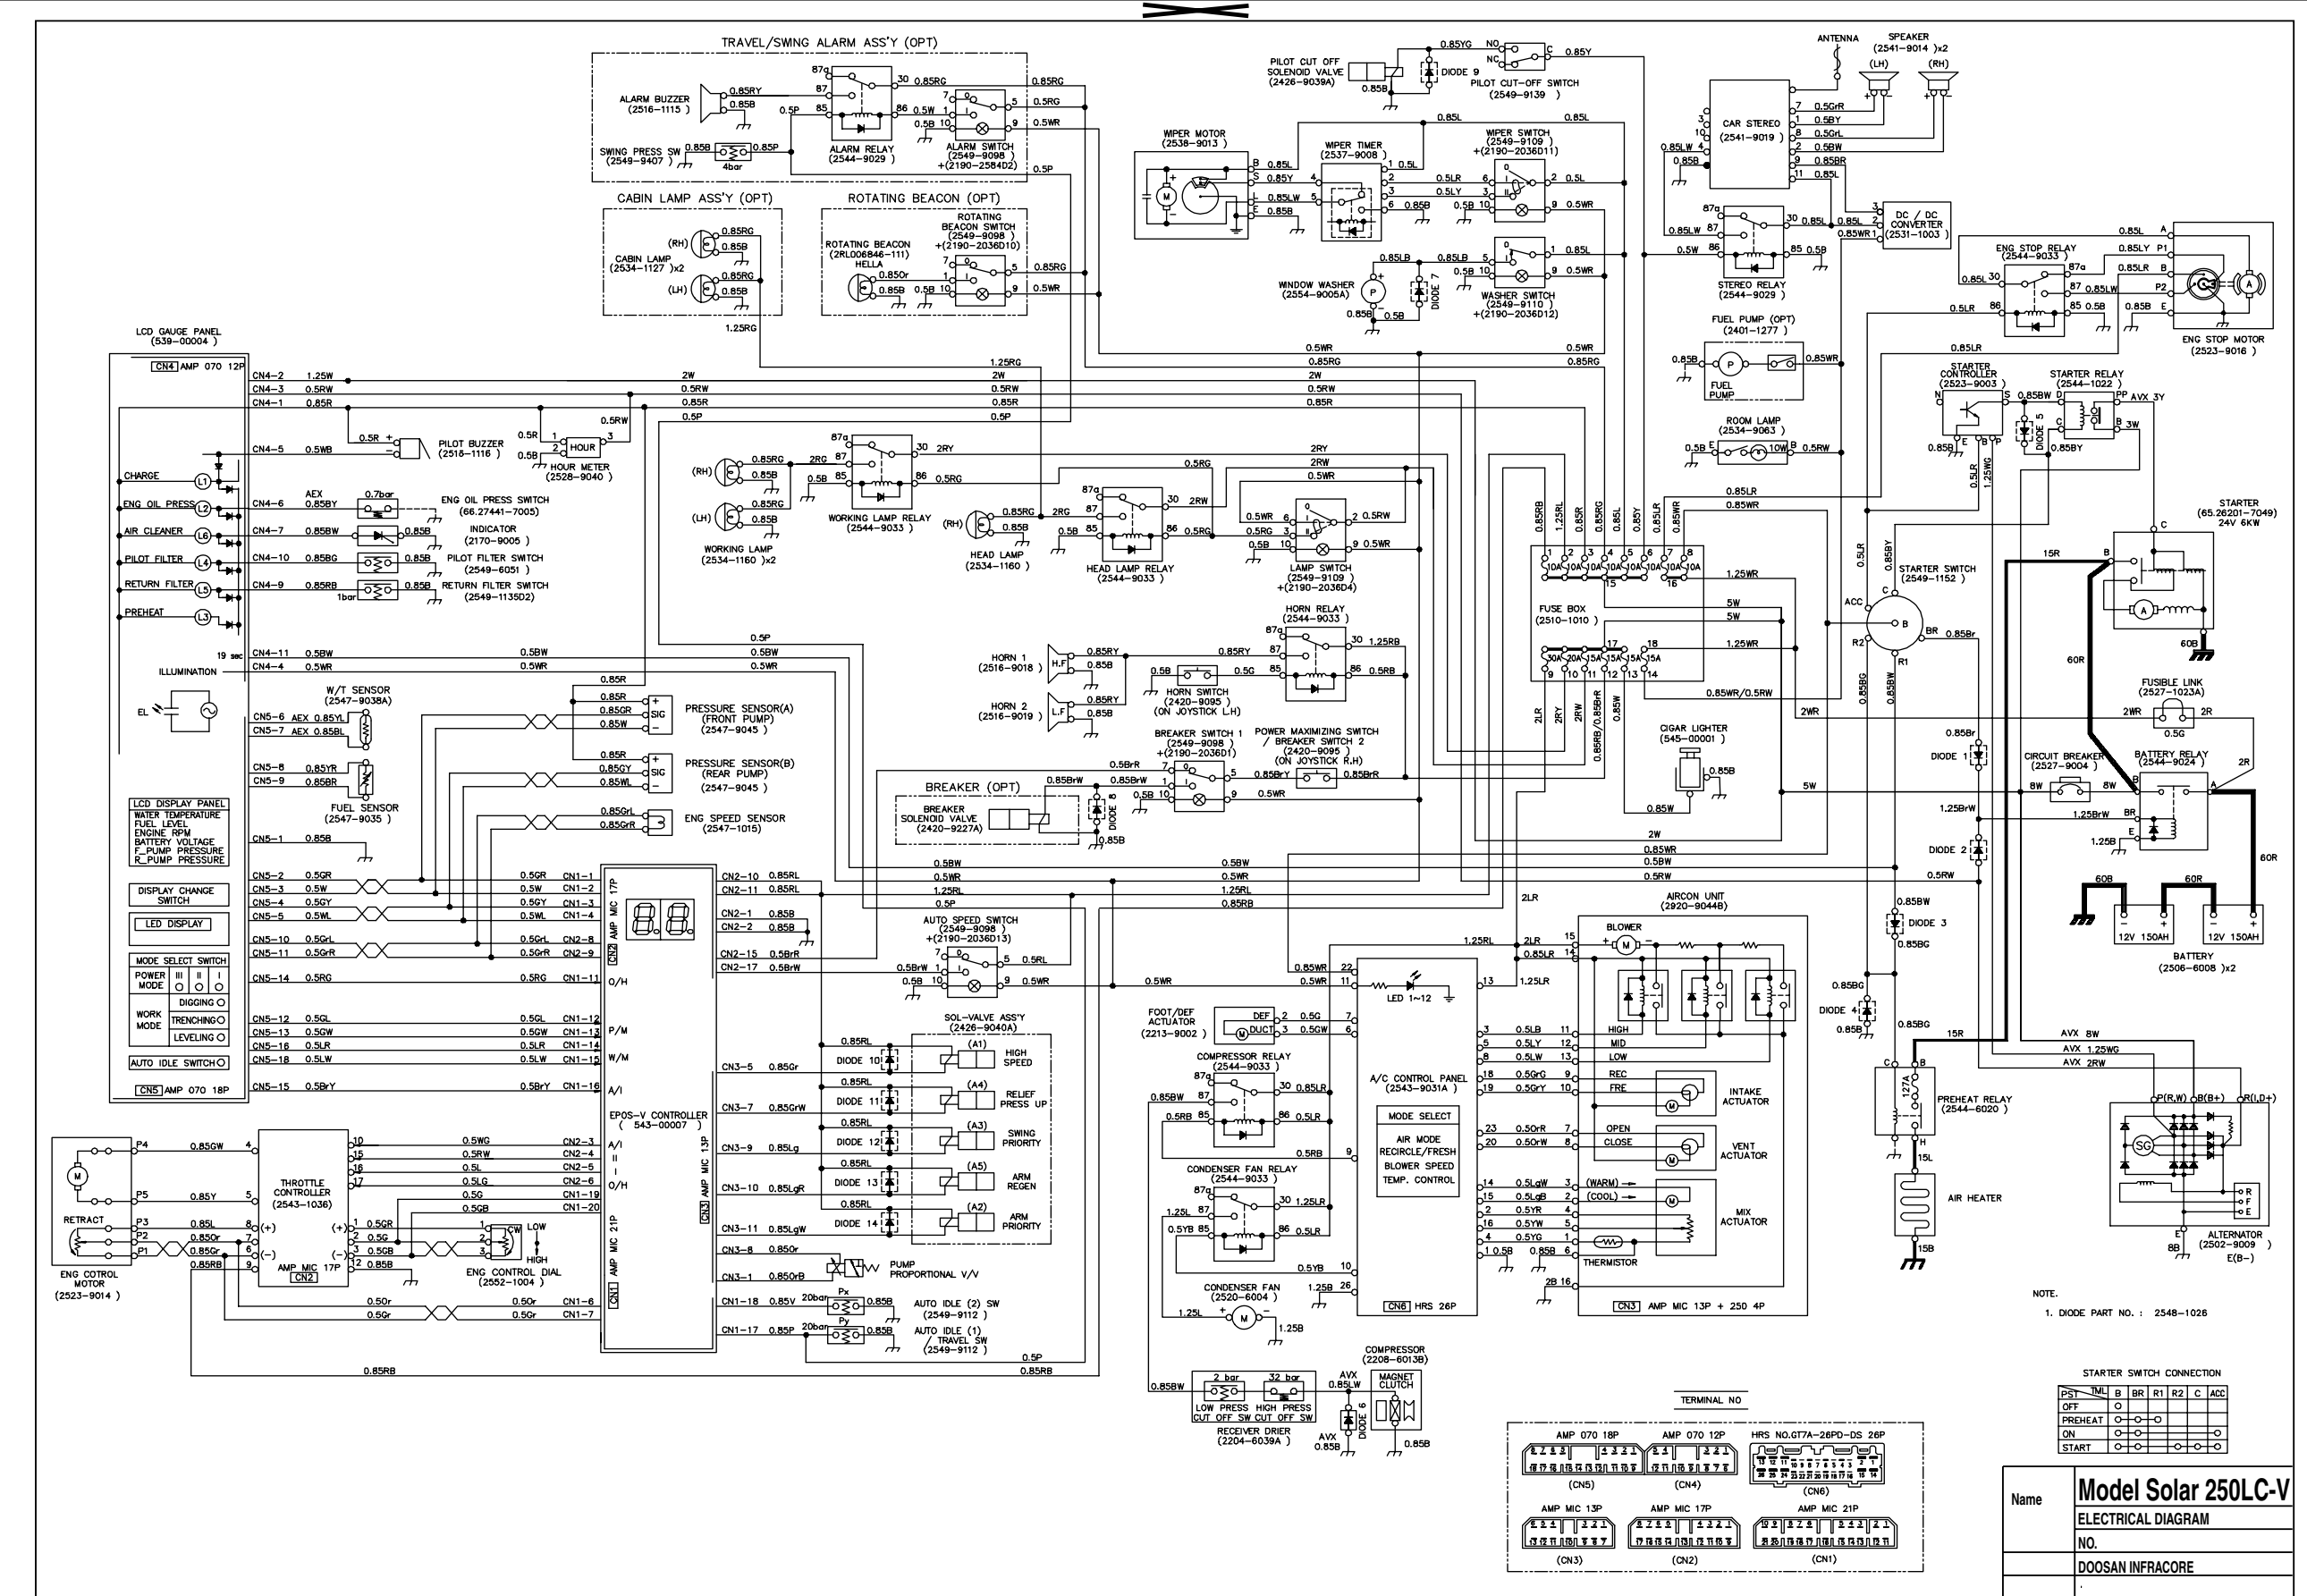


STARTER SWITCH CONNECTION	
PSI	IML
OPT	B
PREHEAT	BR
ON	R1
START	R2
	C
	ACC


Name	Model Solar 250LC-V
	ELECTRICAL DIAGRAM
NO.	
	DOOSAN INFRACORE

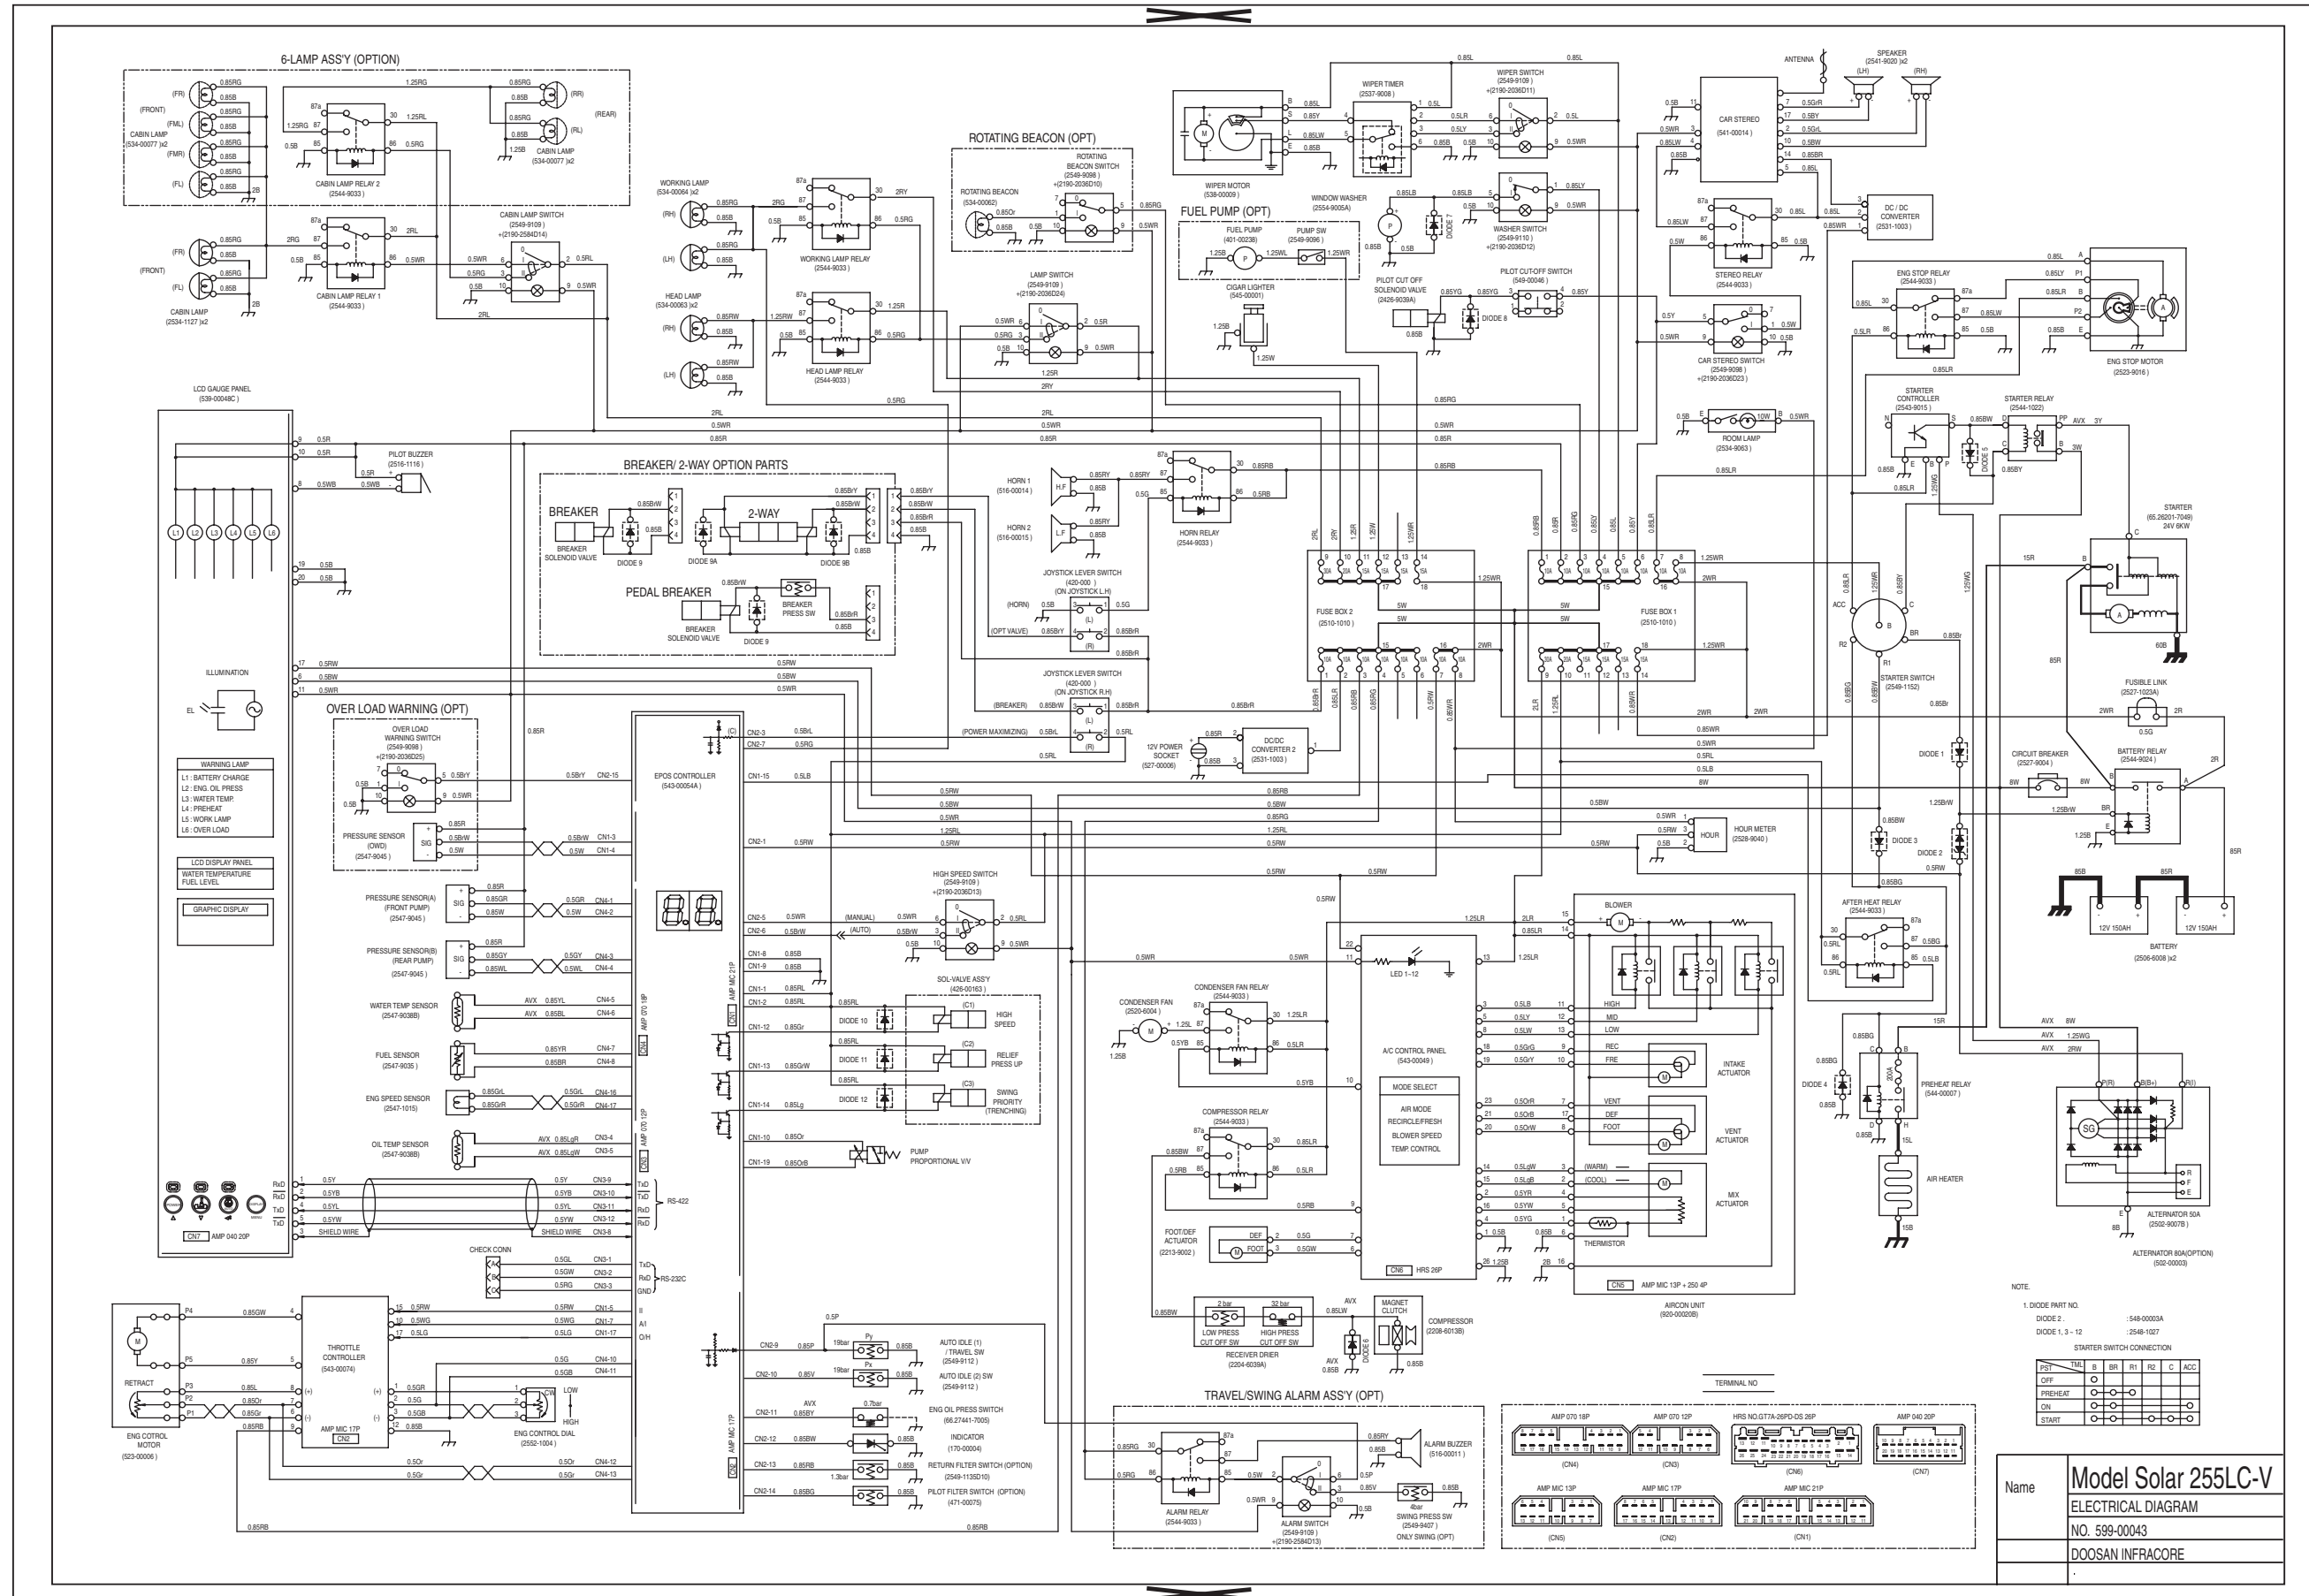



AYS0100L


<https://truckmanualshub.com/>

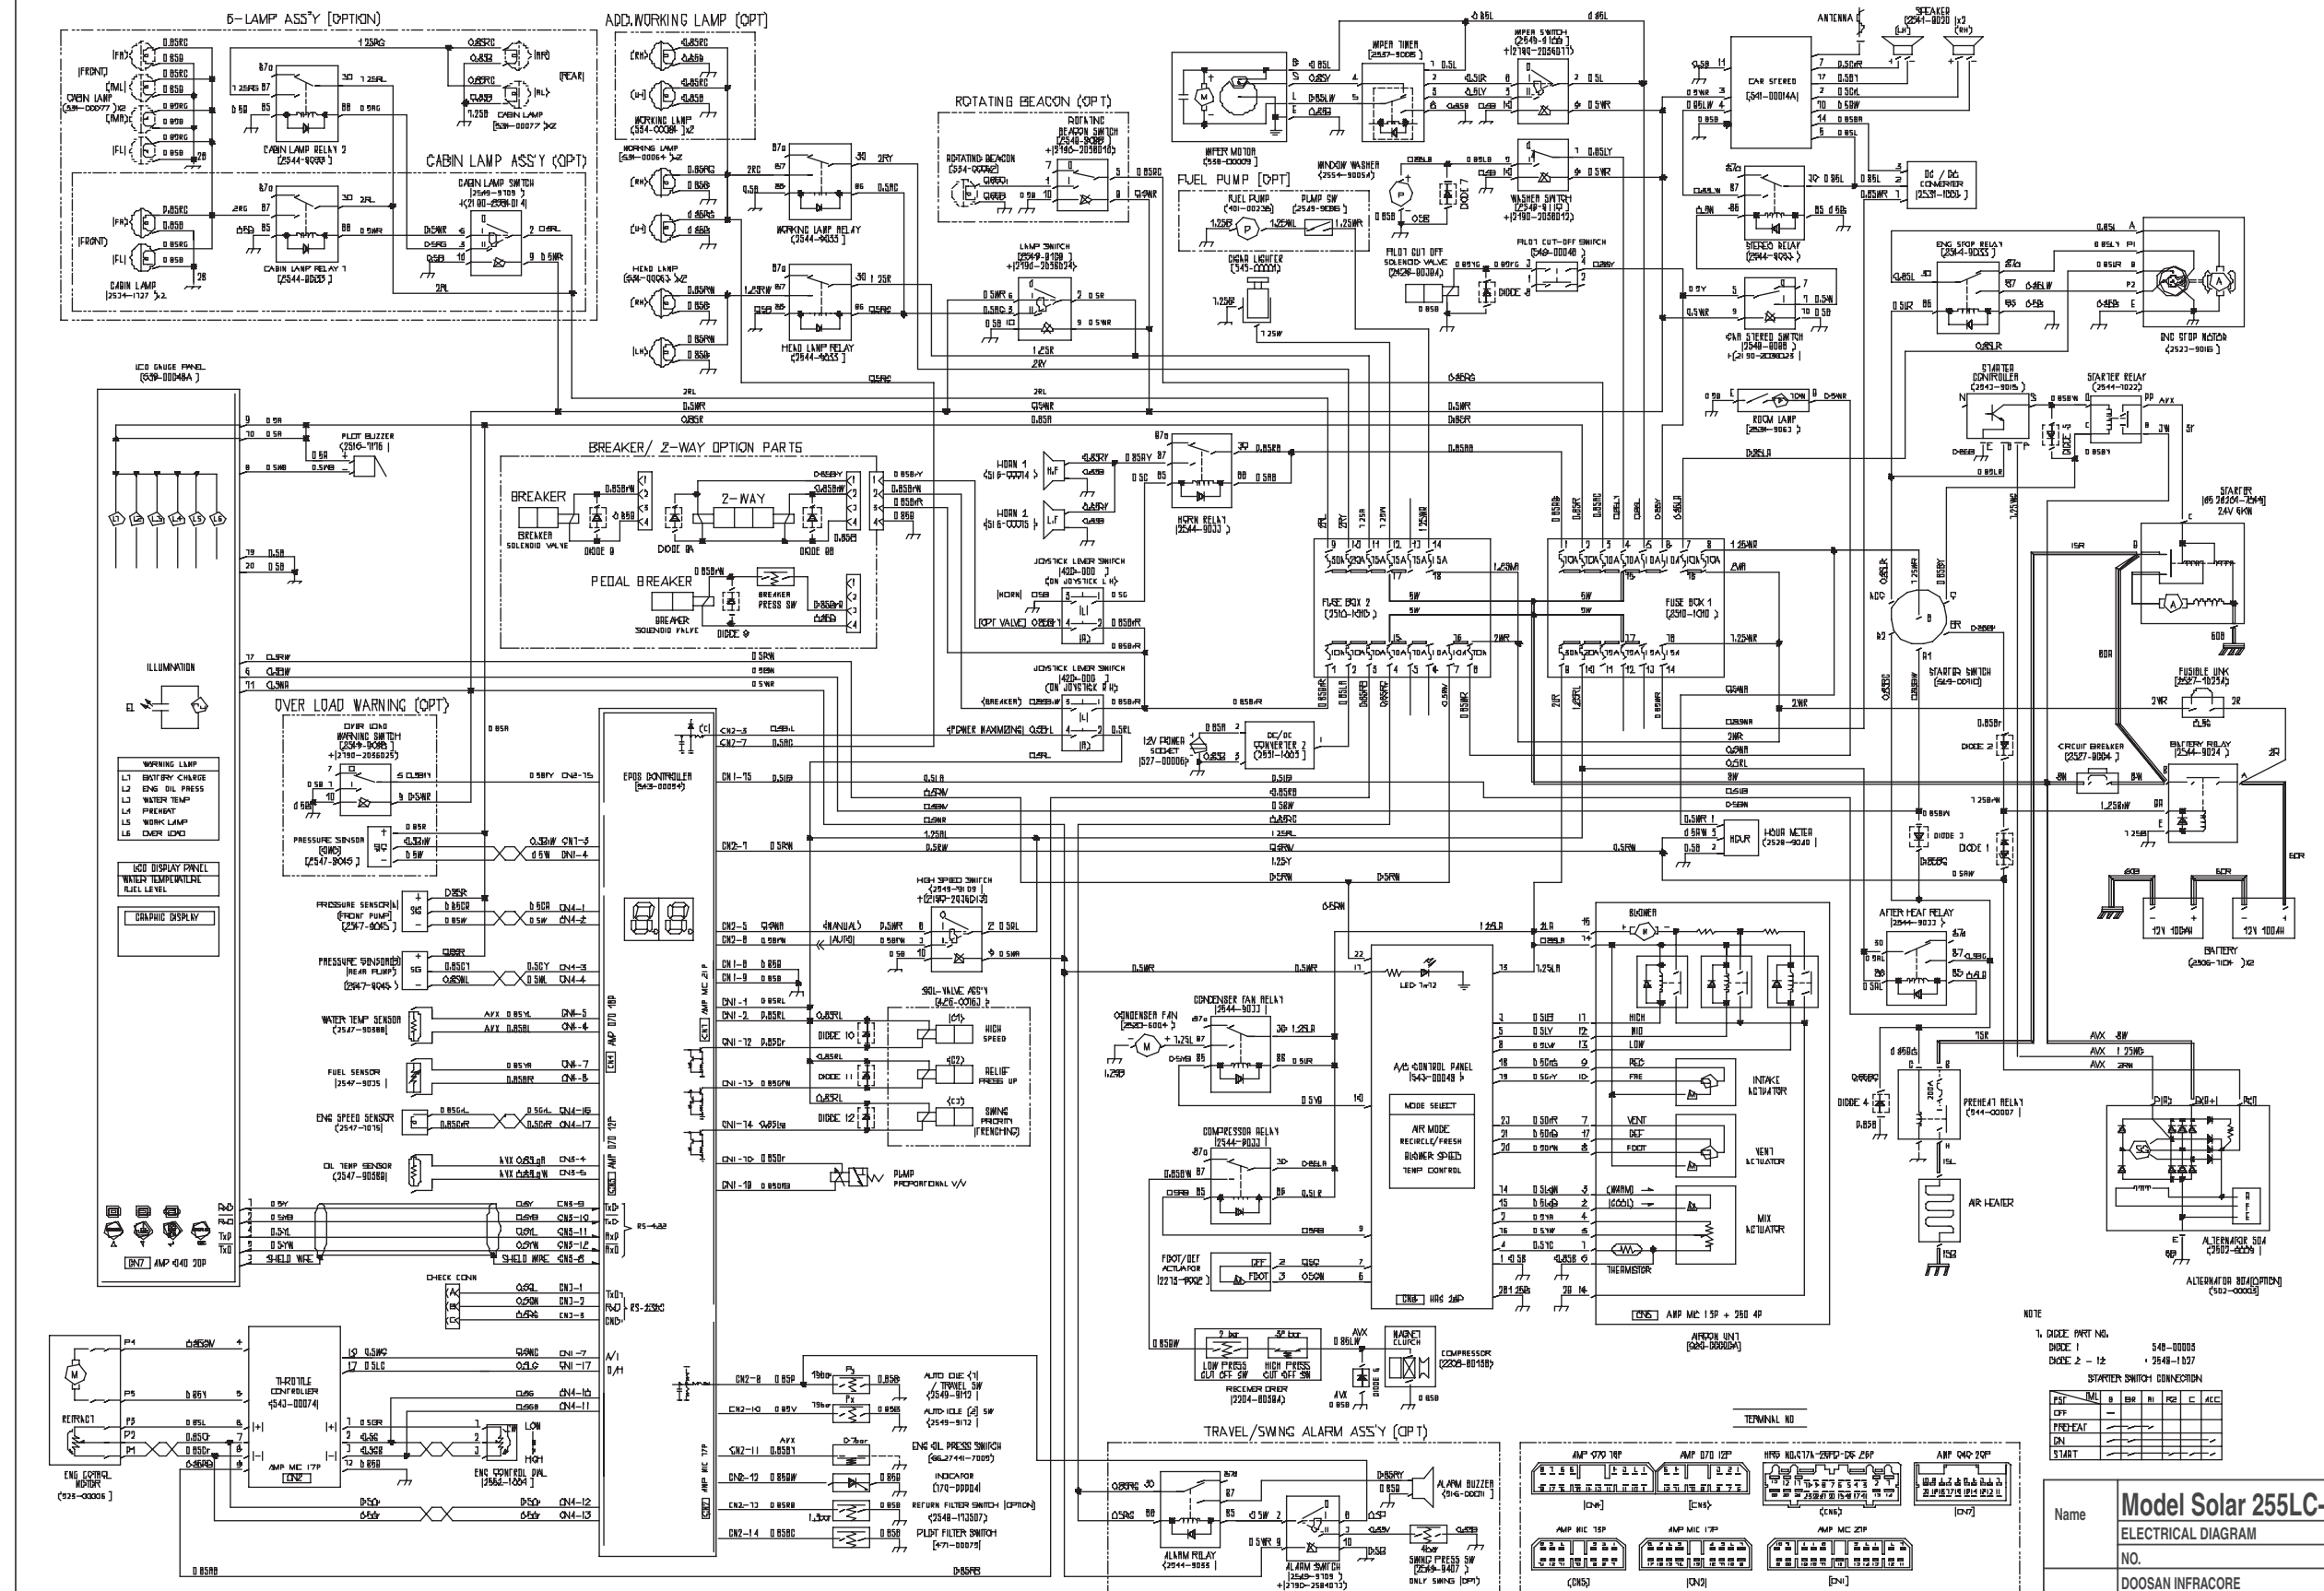

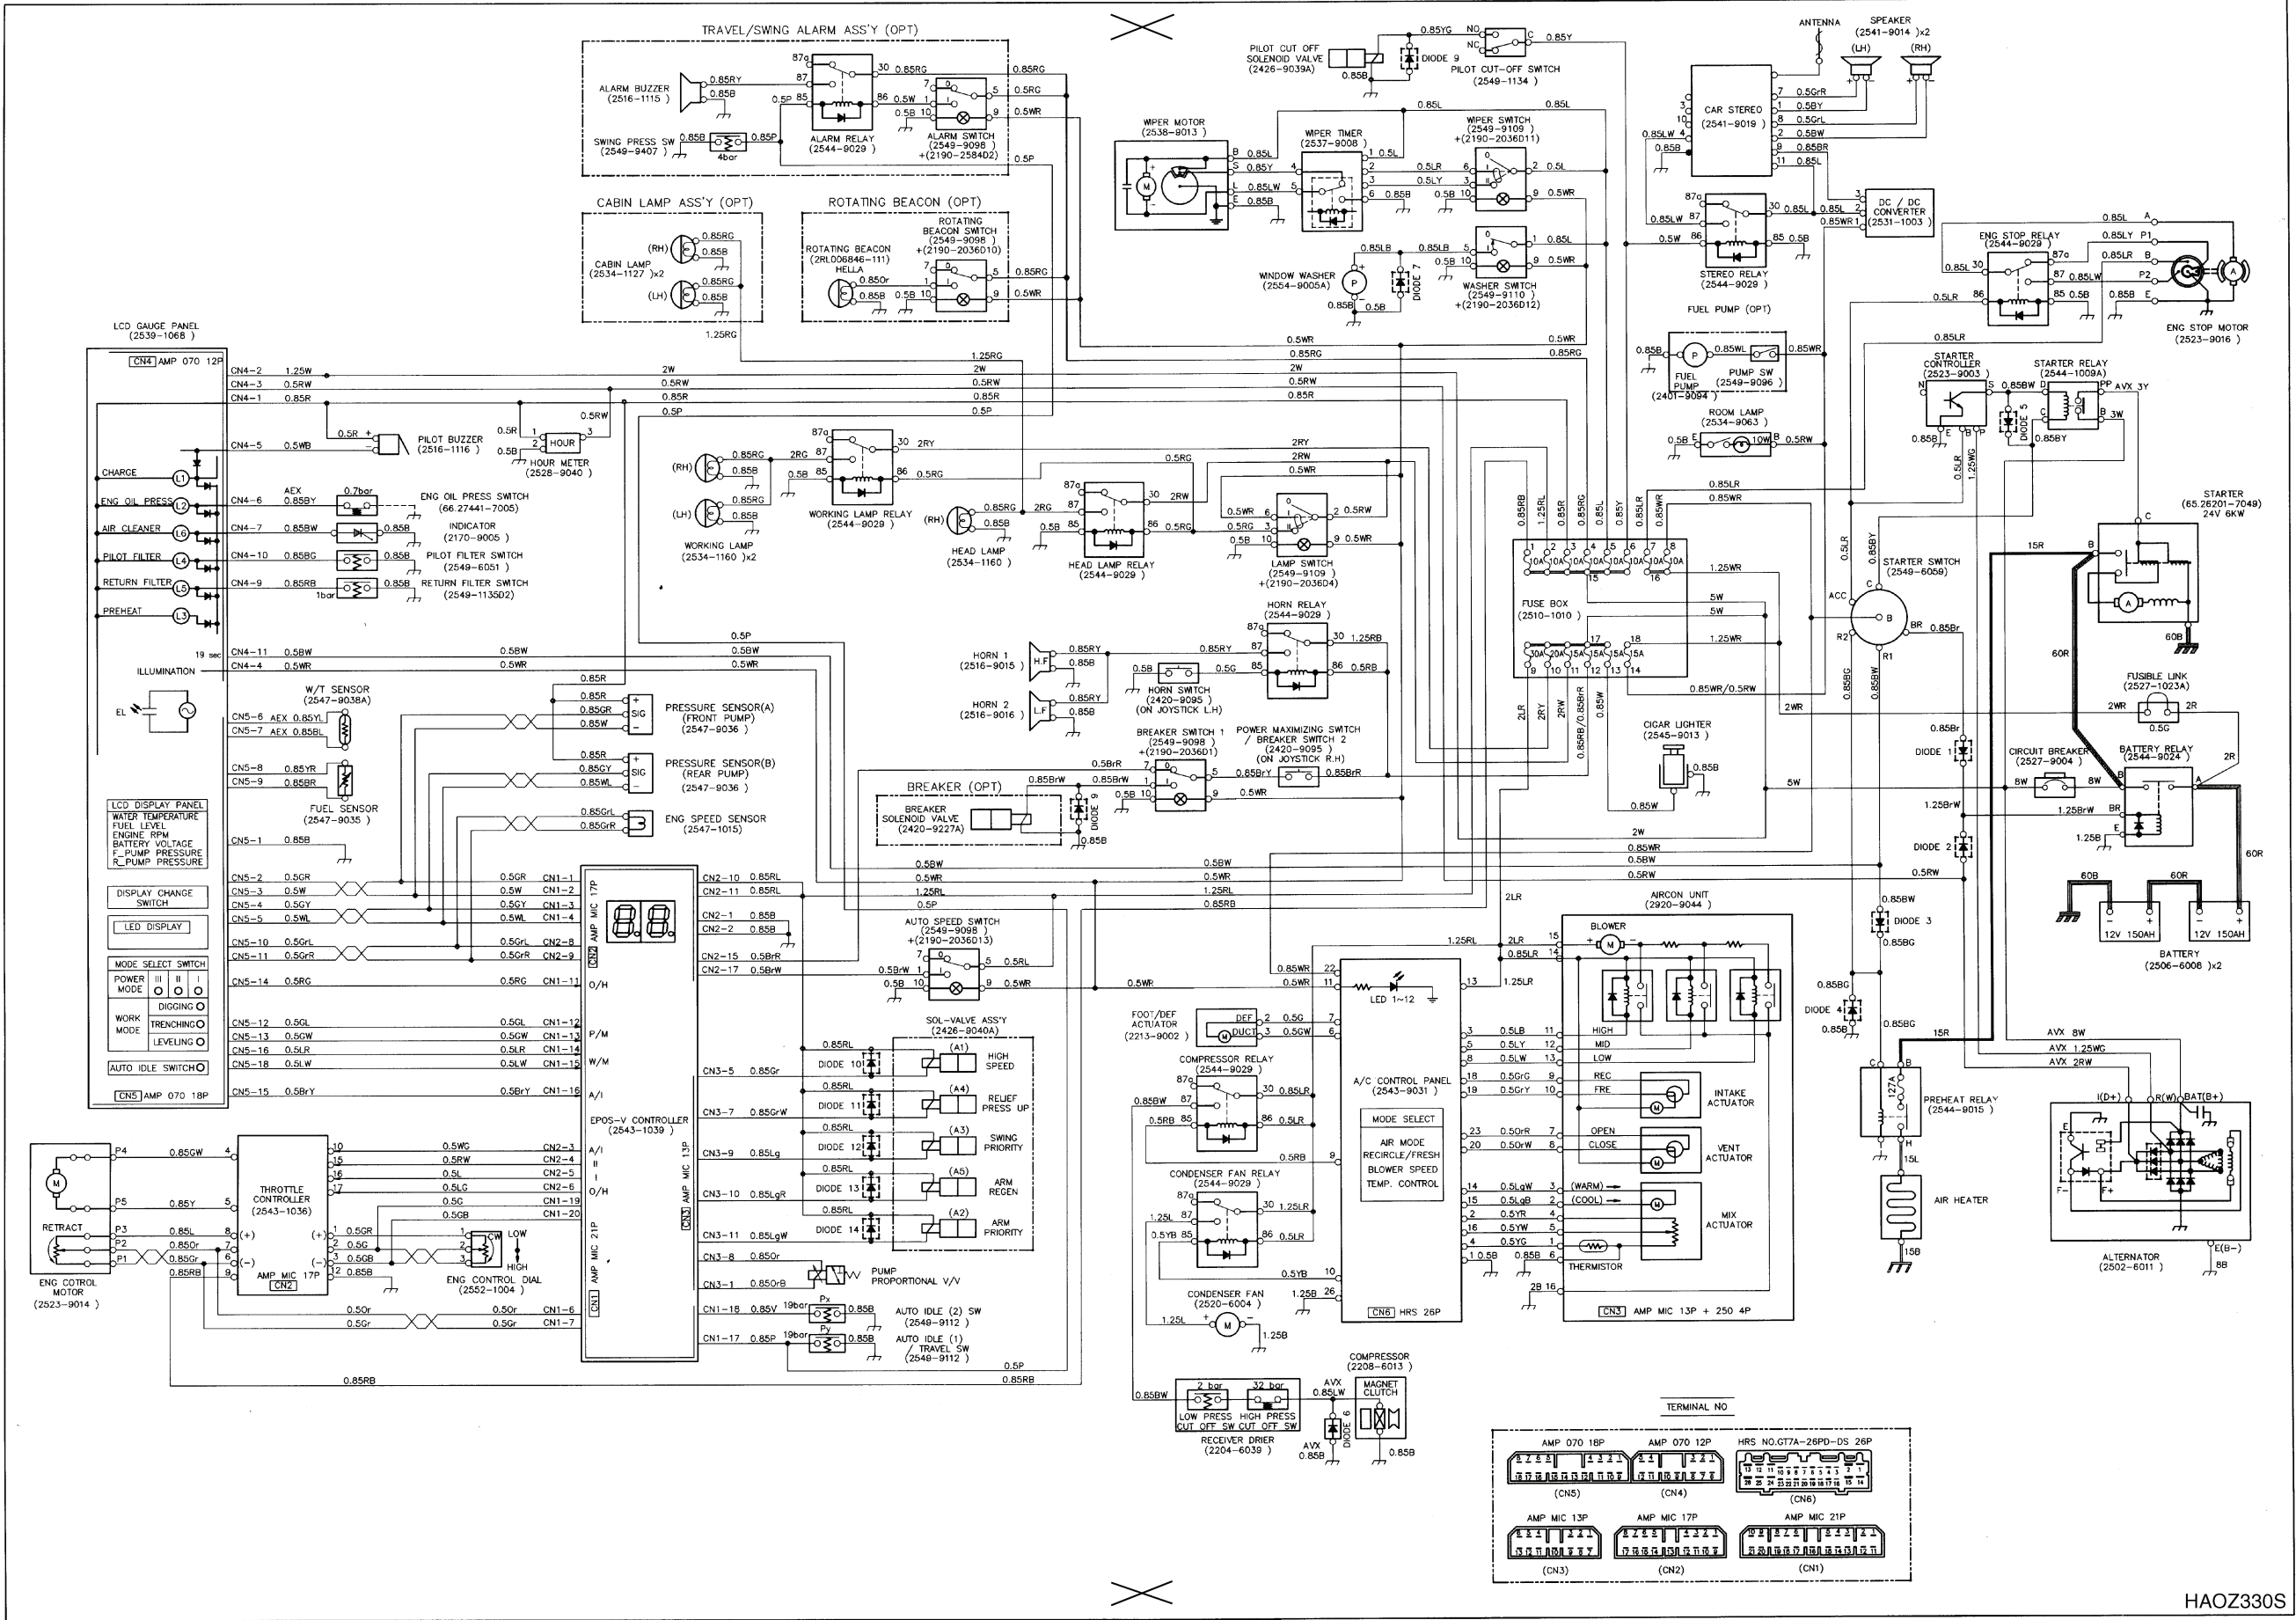

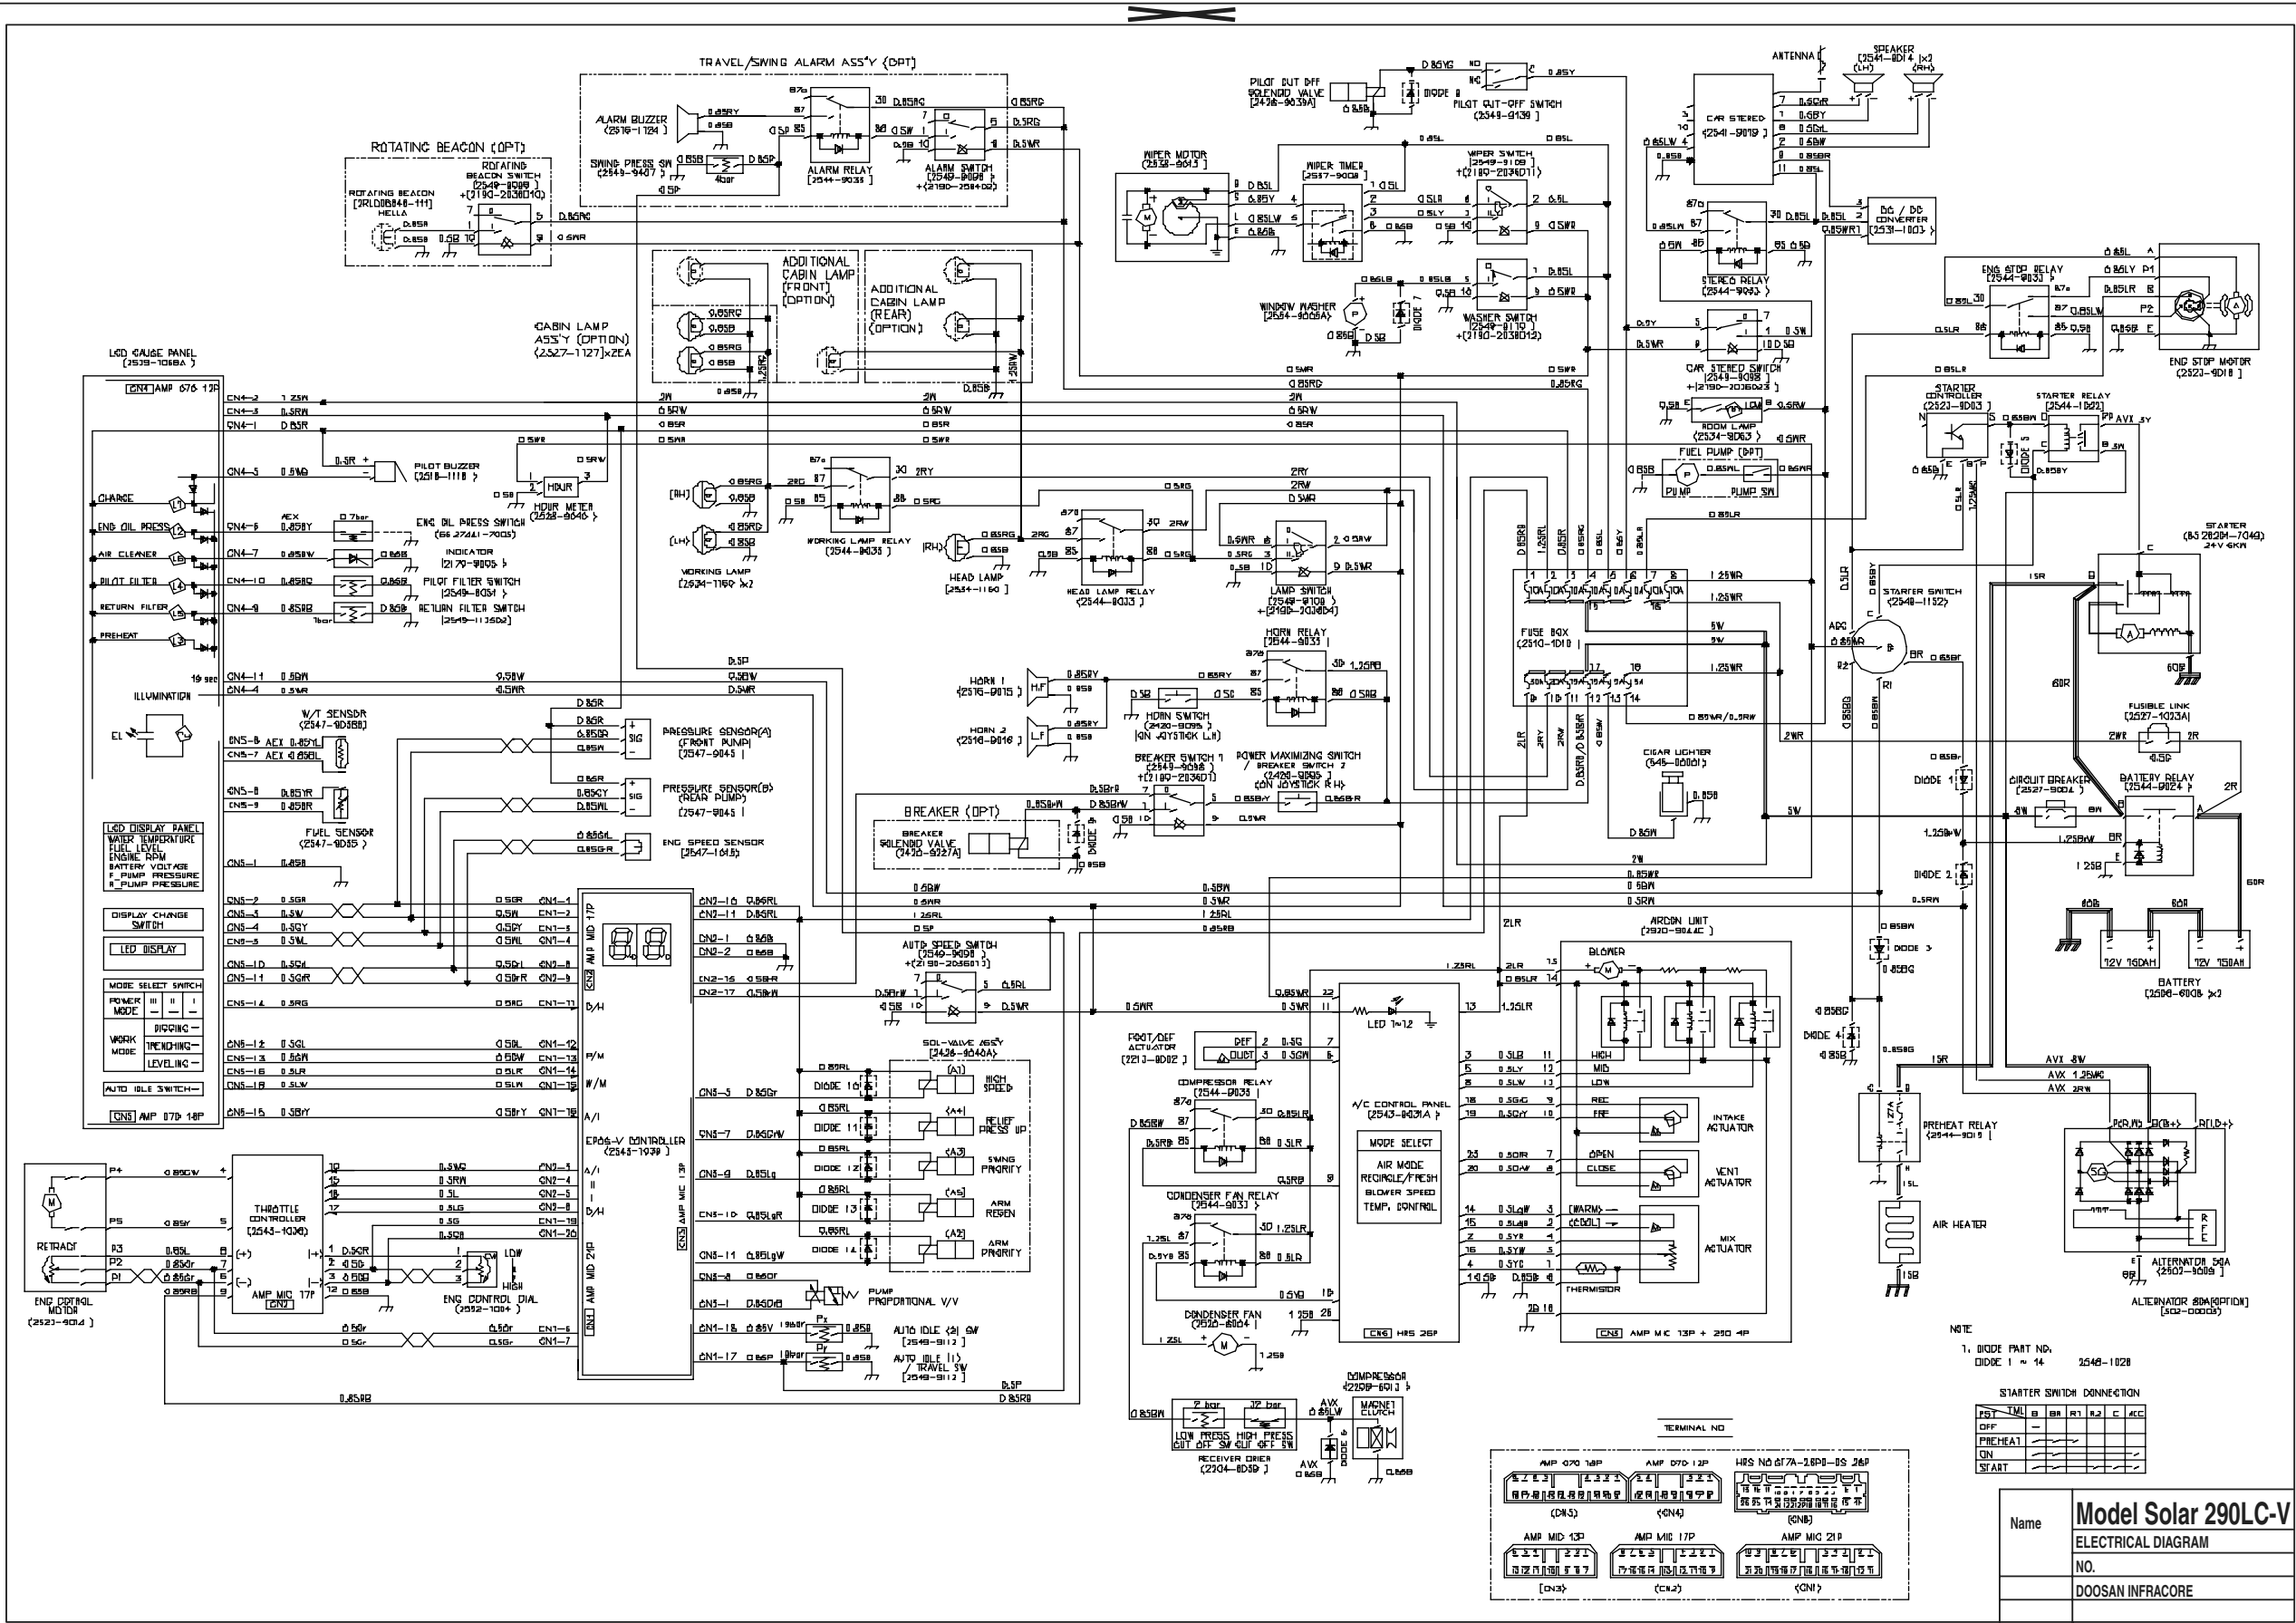

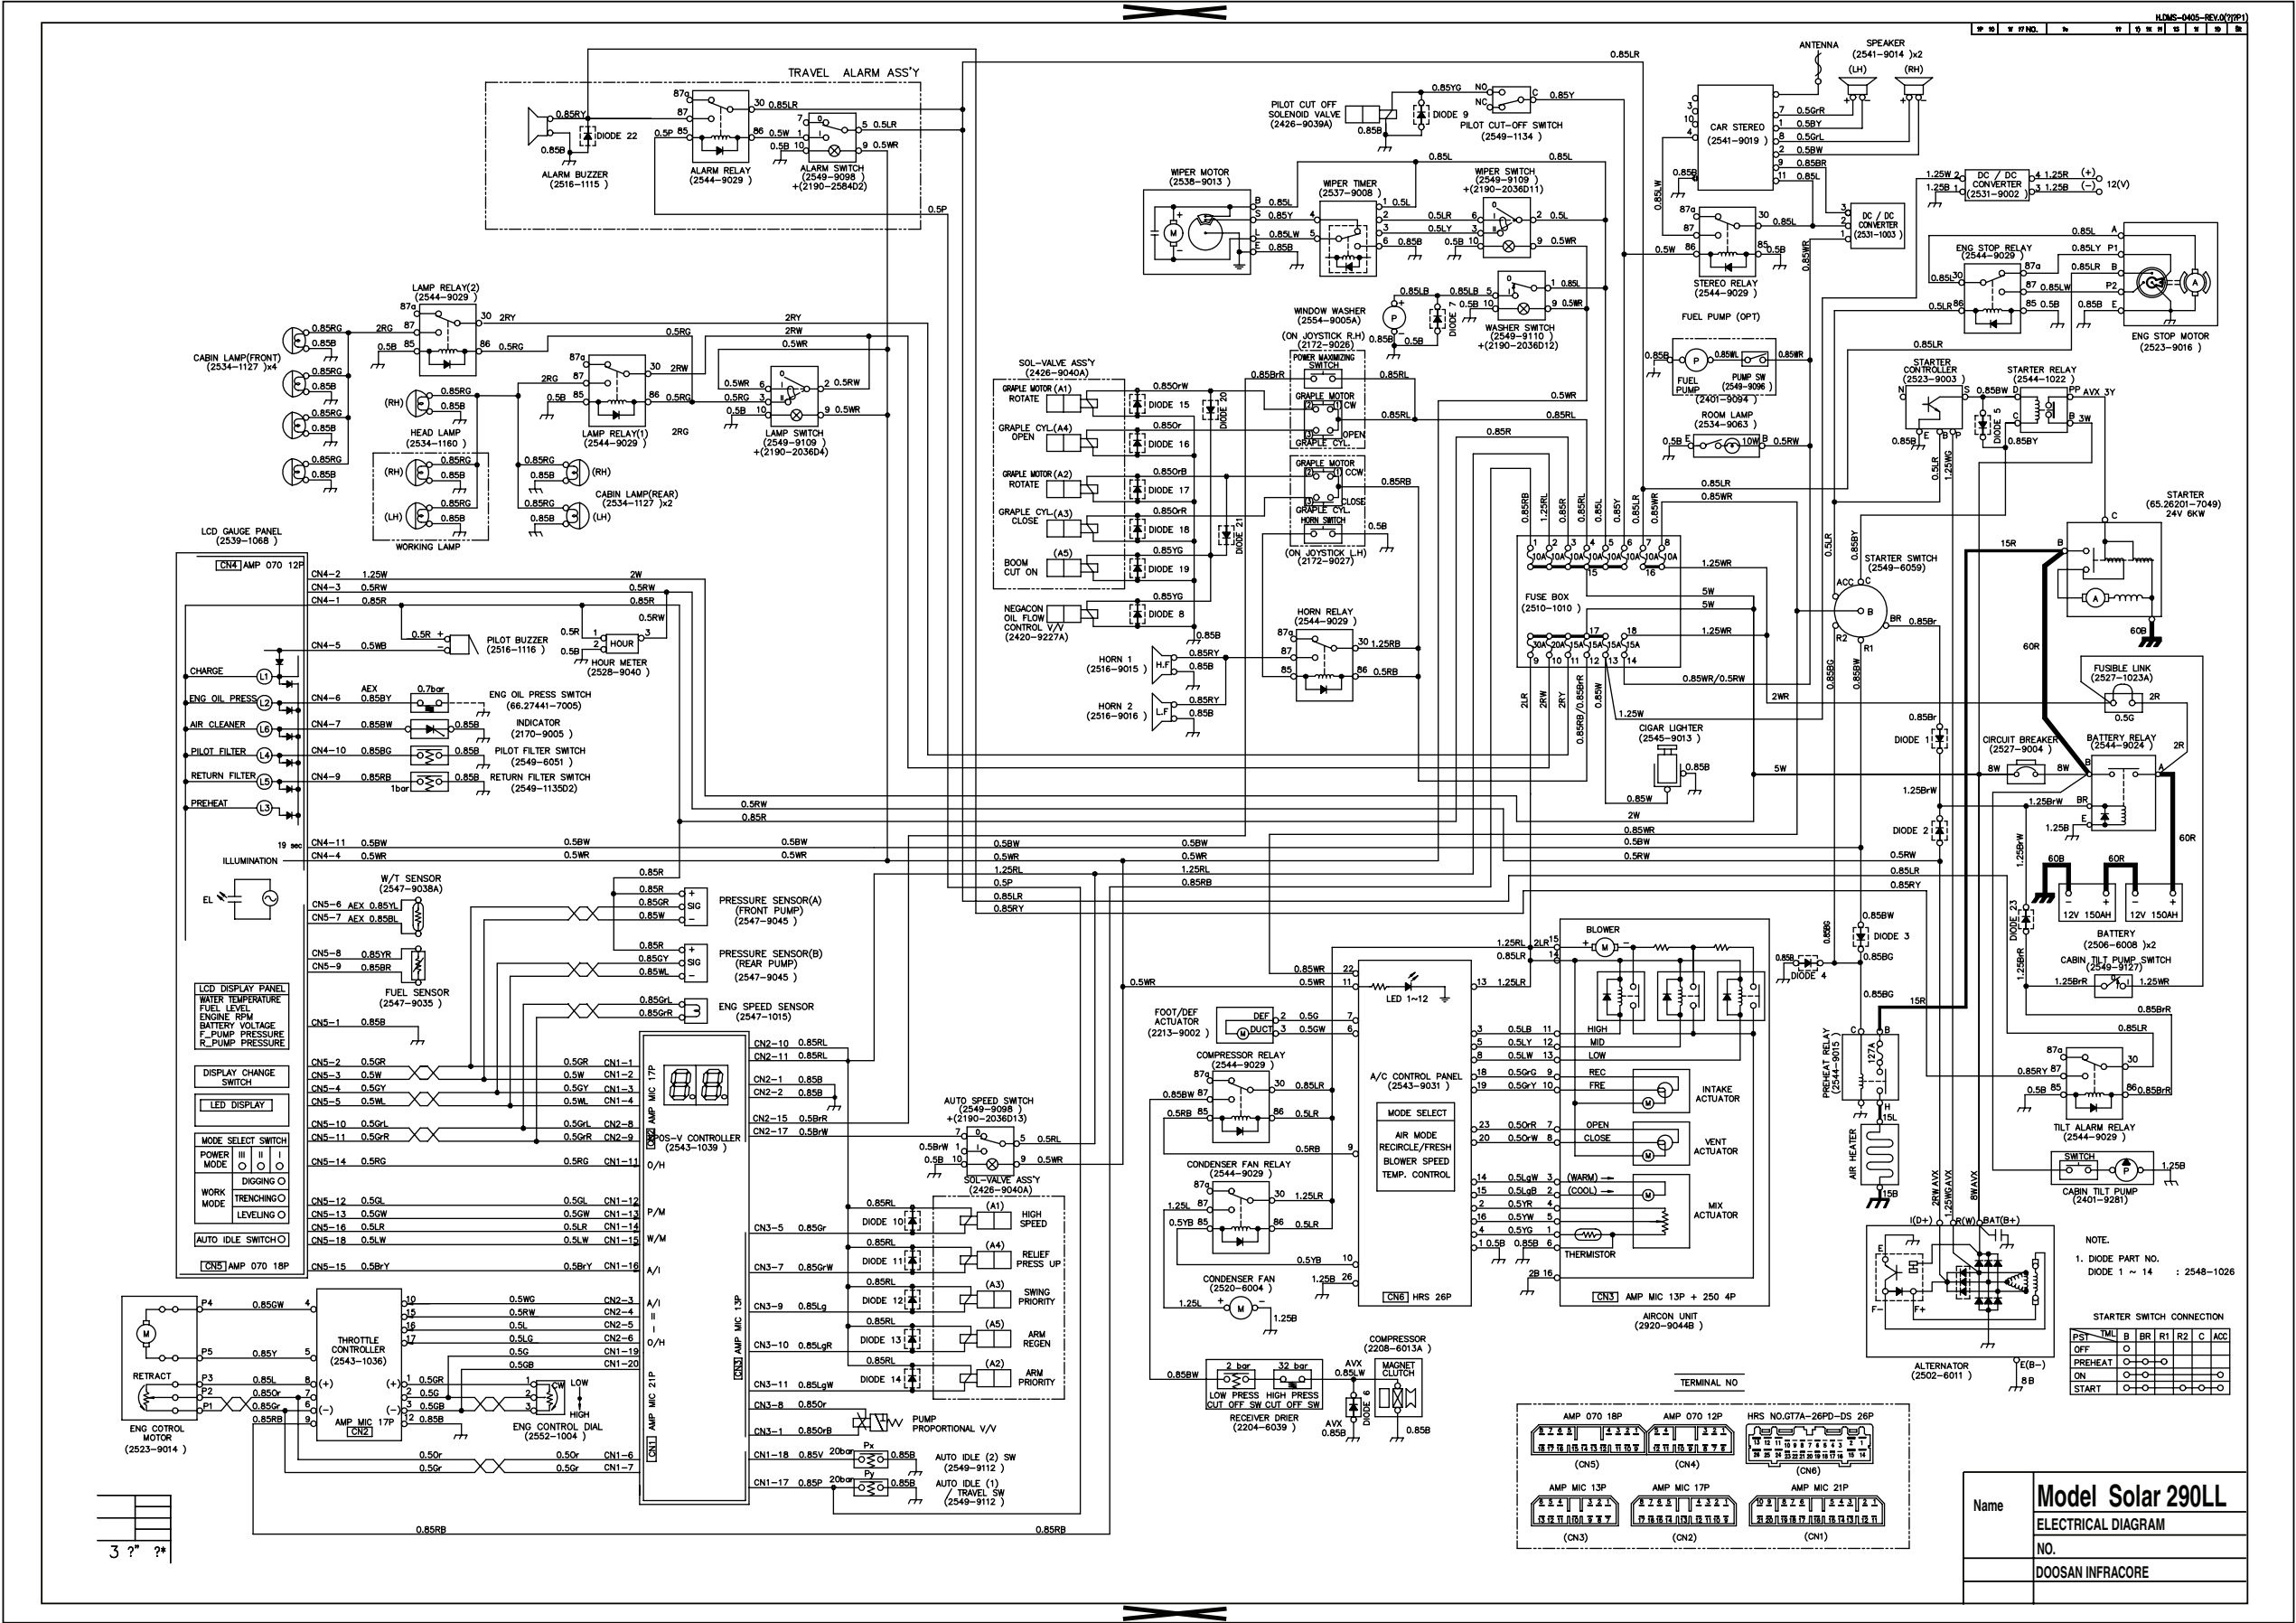

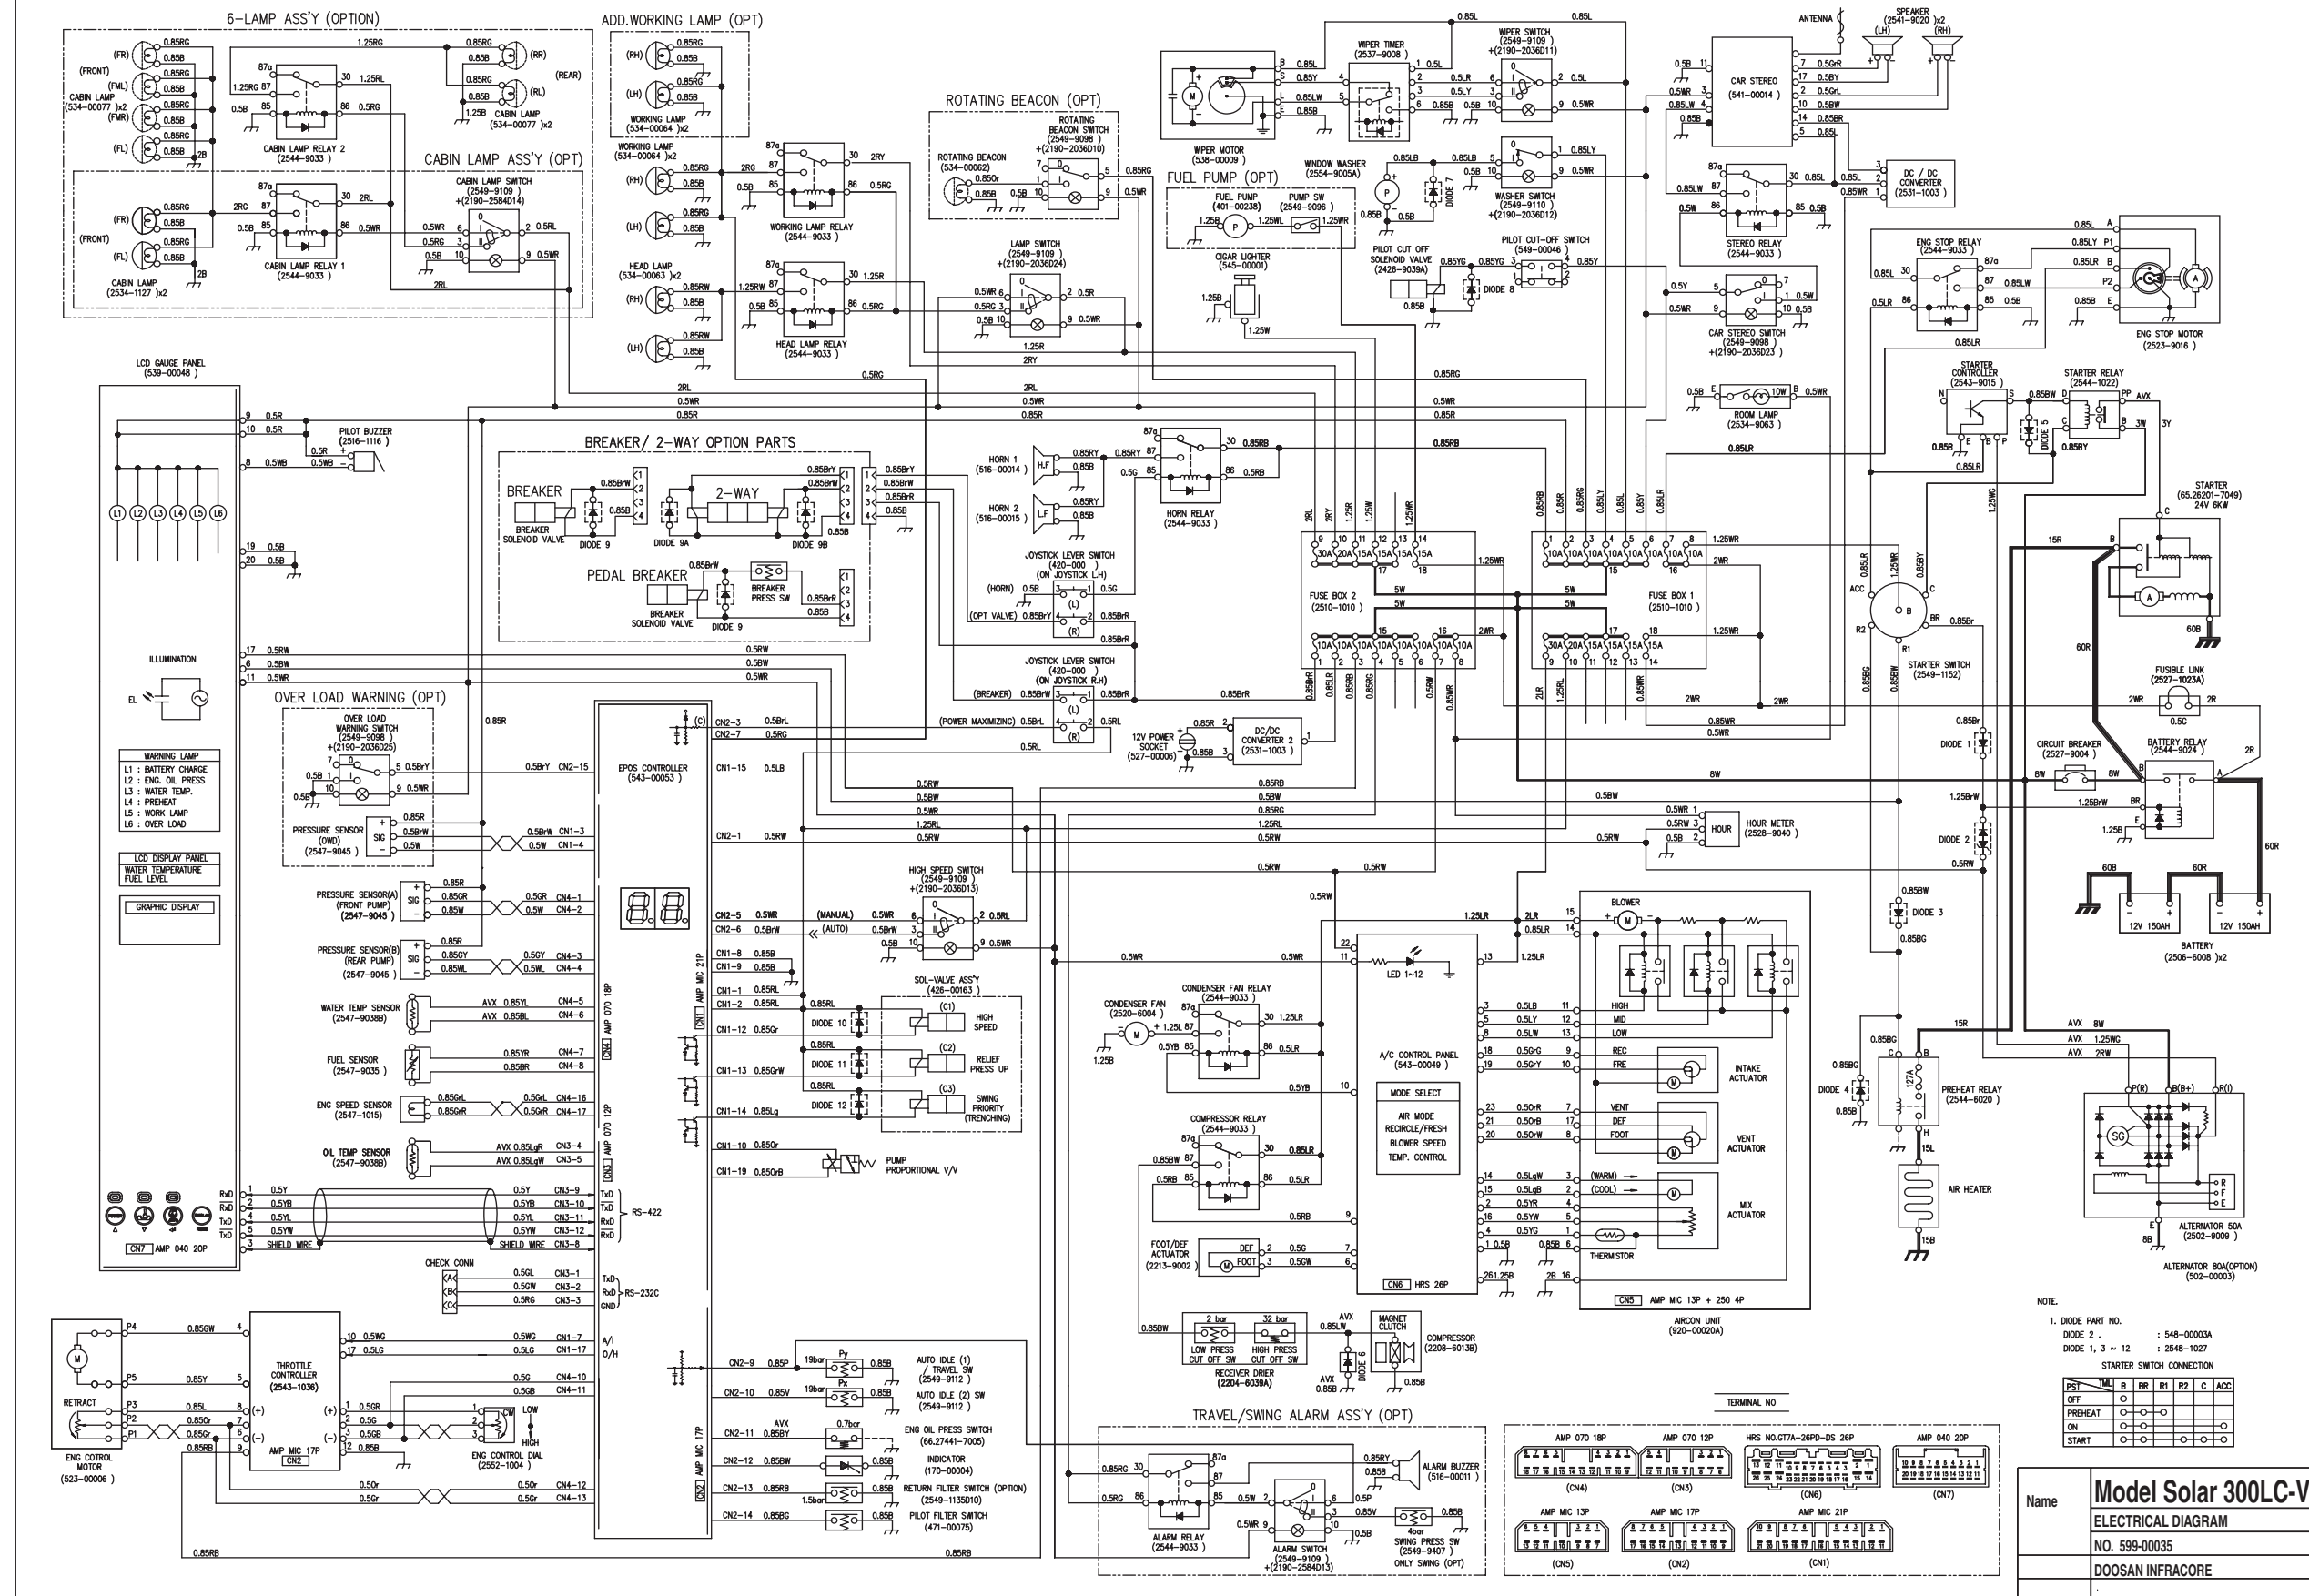

NOTE.

1. DIODE PART NO.


DIODE 2 : 548-00003A


DIODE 1, 3 ~ 12 : 2548-1027

STARTER SWITCH CONNECTION


	IML	B	BR	R1	R2	C	AC
OFF		○					
PREHEAT		○	○	○			
ON		○	○	○			
START		○	○		○	○	○


Name	Model Solar 300LC-V
	ELECTRICAL DIAGRAM
	NO. 599-00035
	DOOSAN INFRACORE

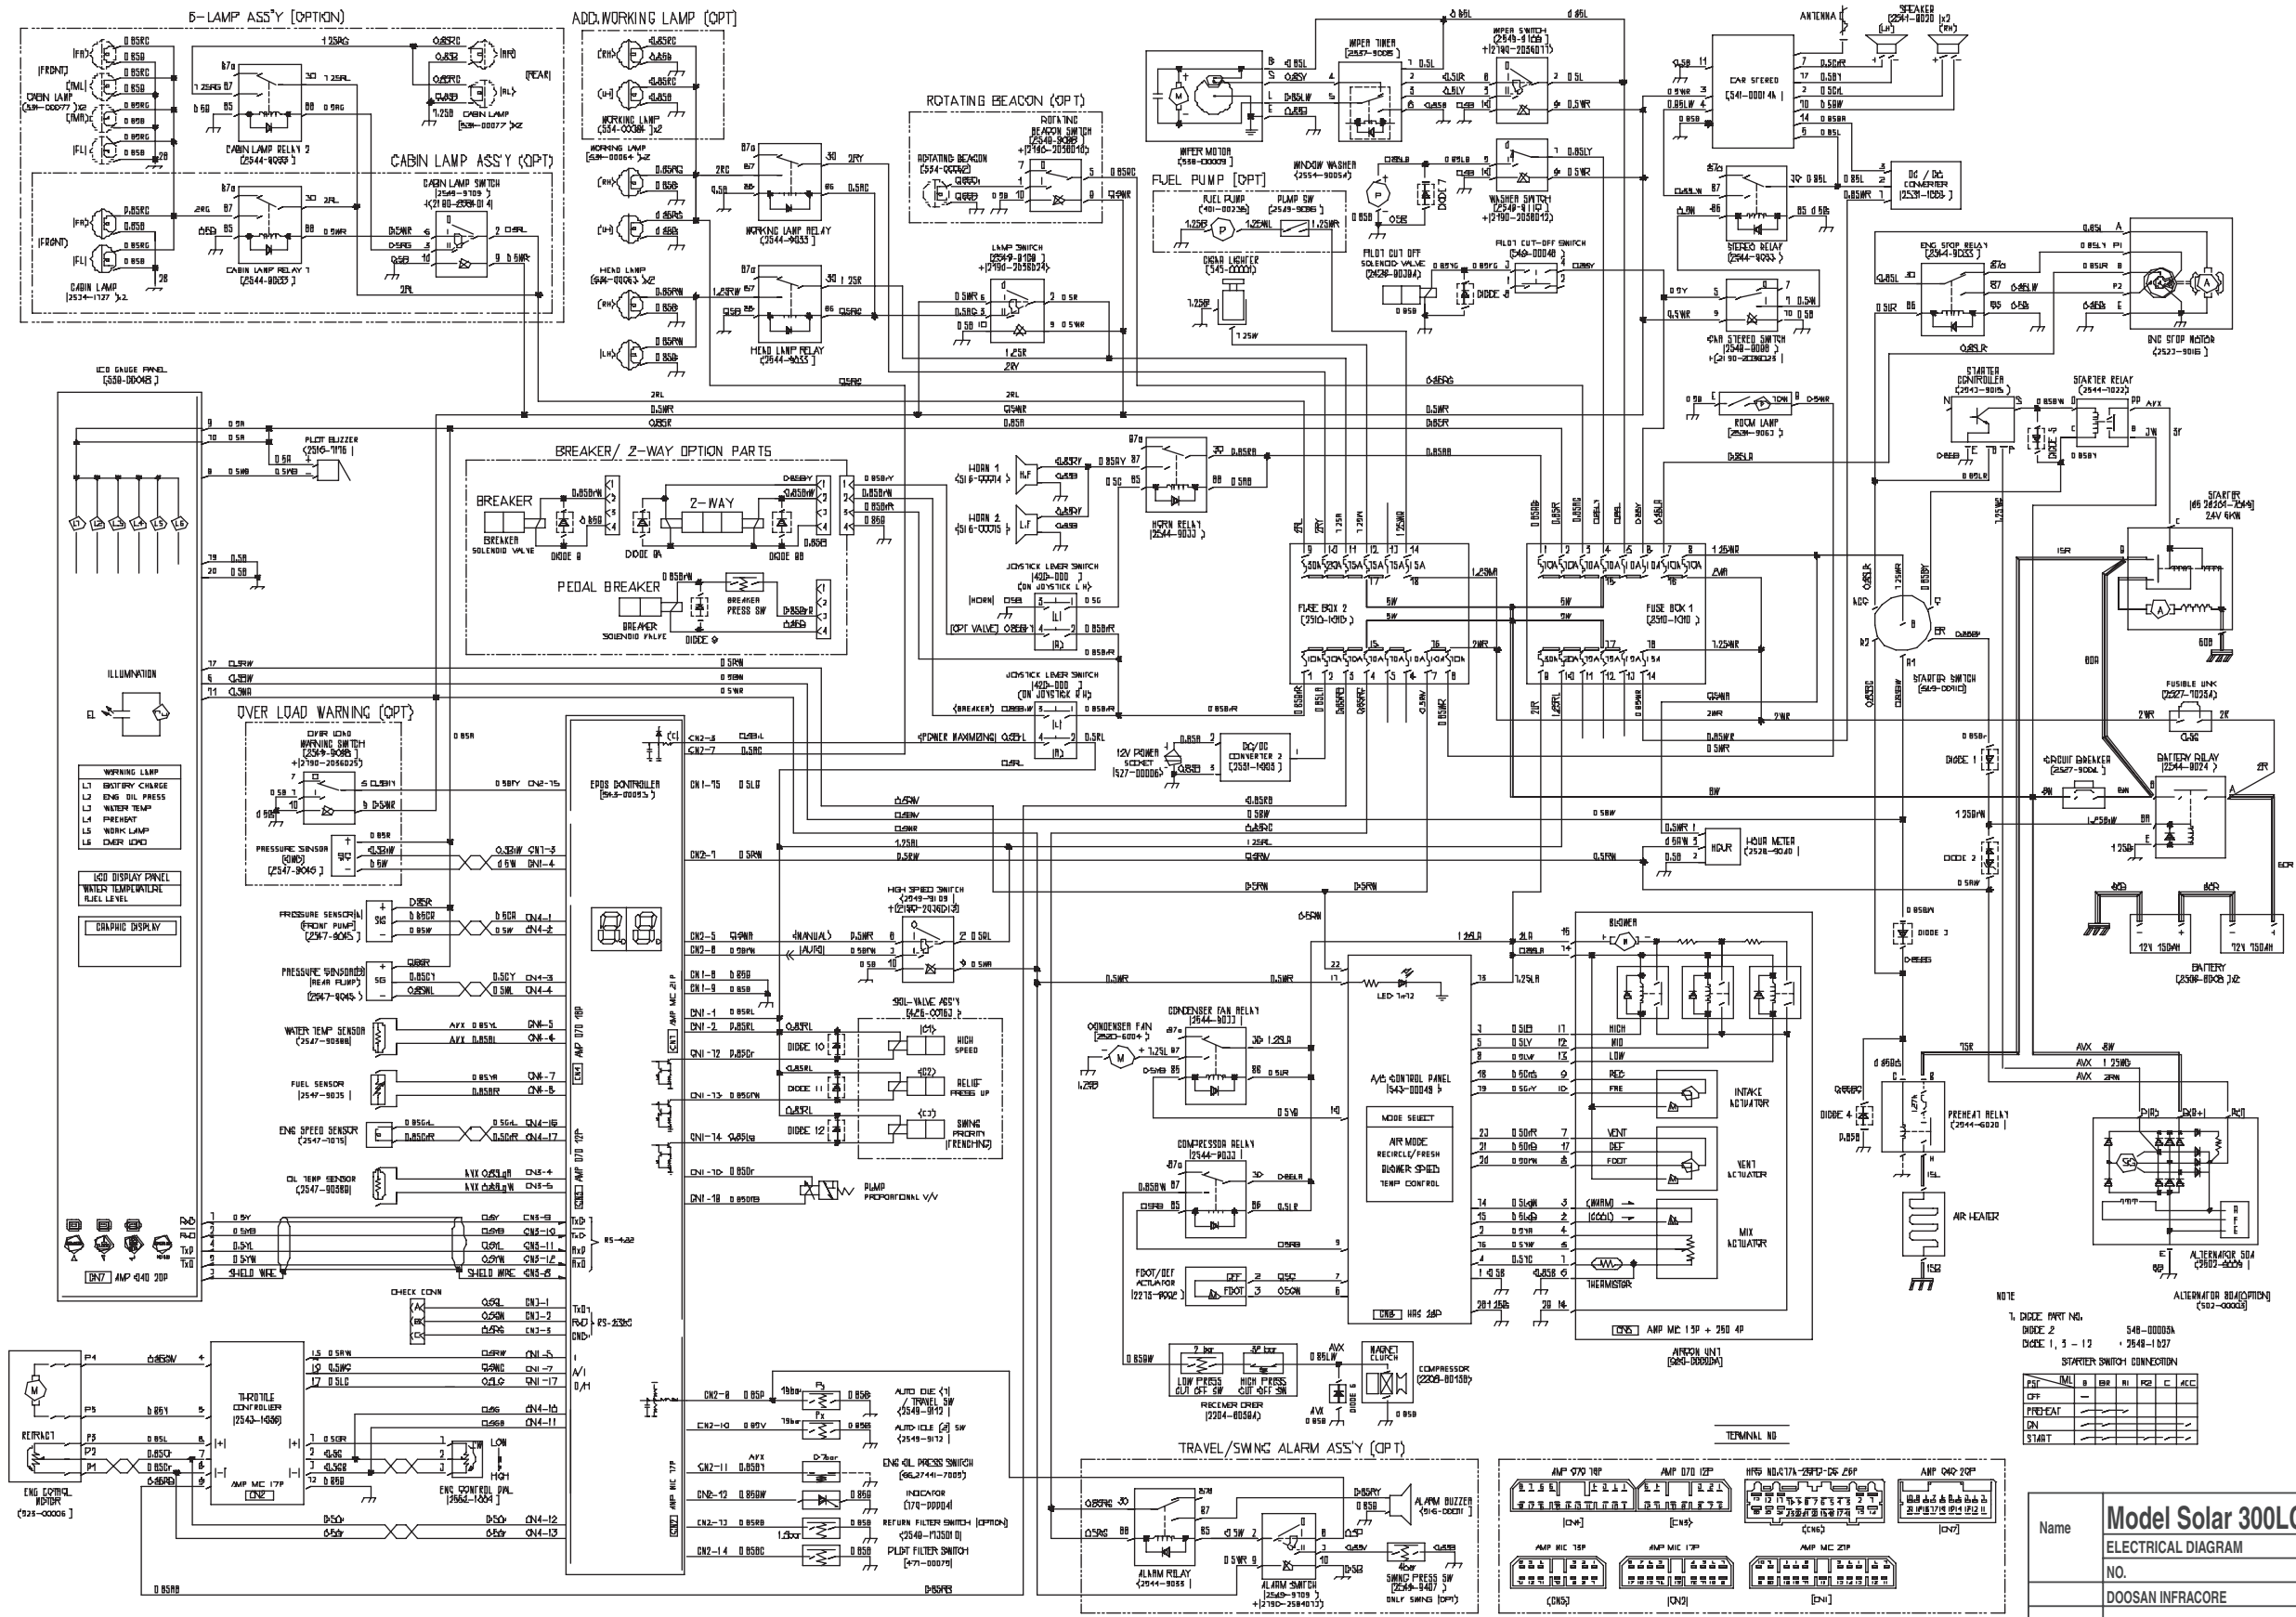

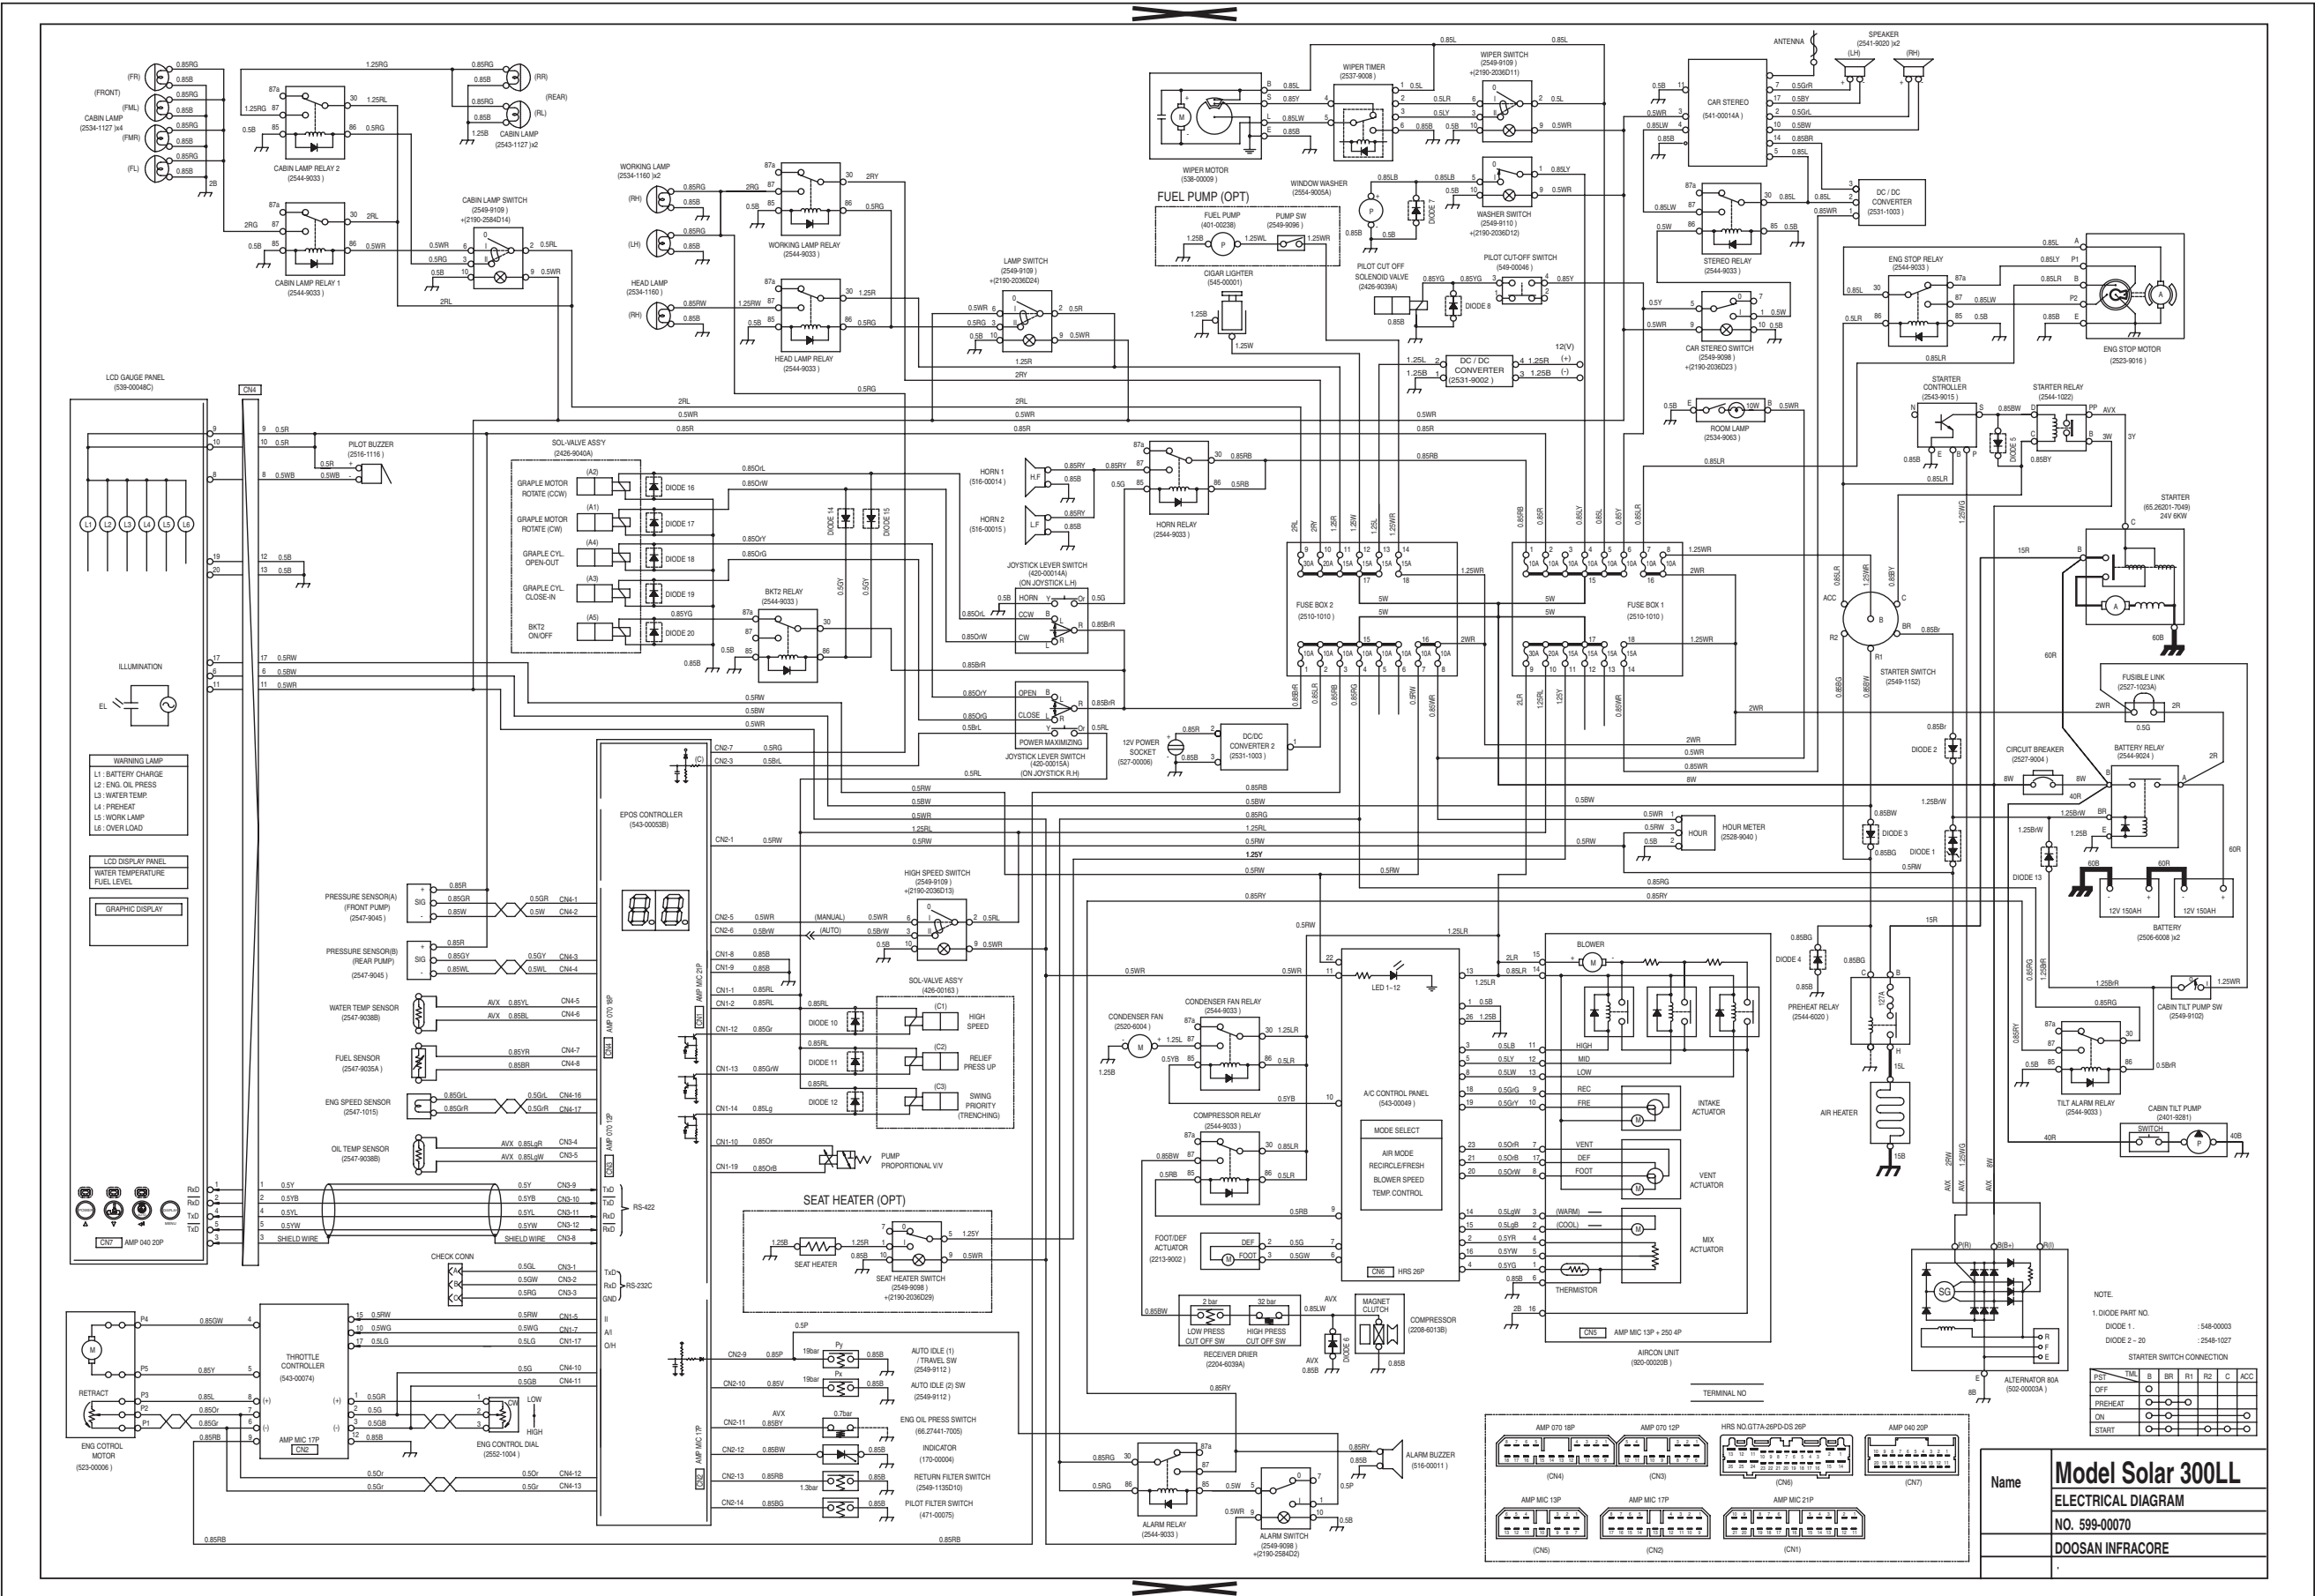



SOLAR 300LL (S/N 1004 AND UP)

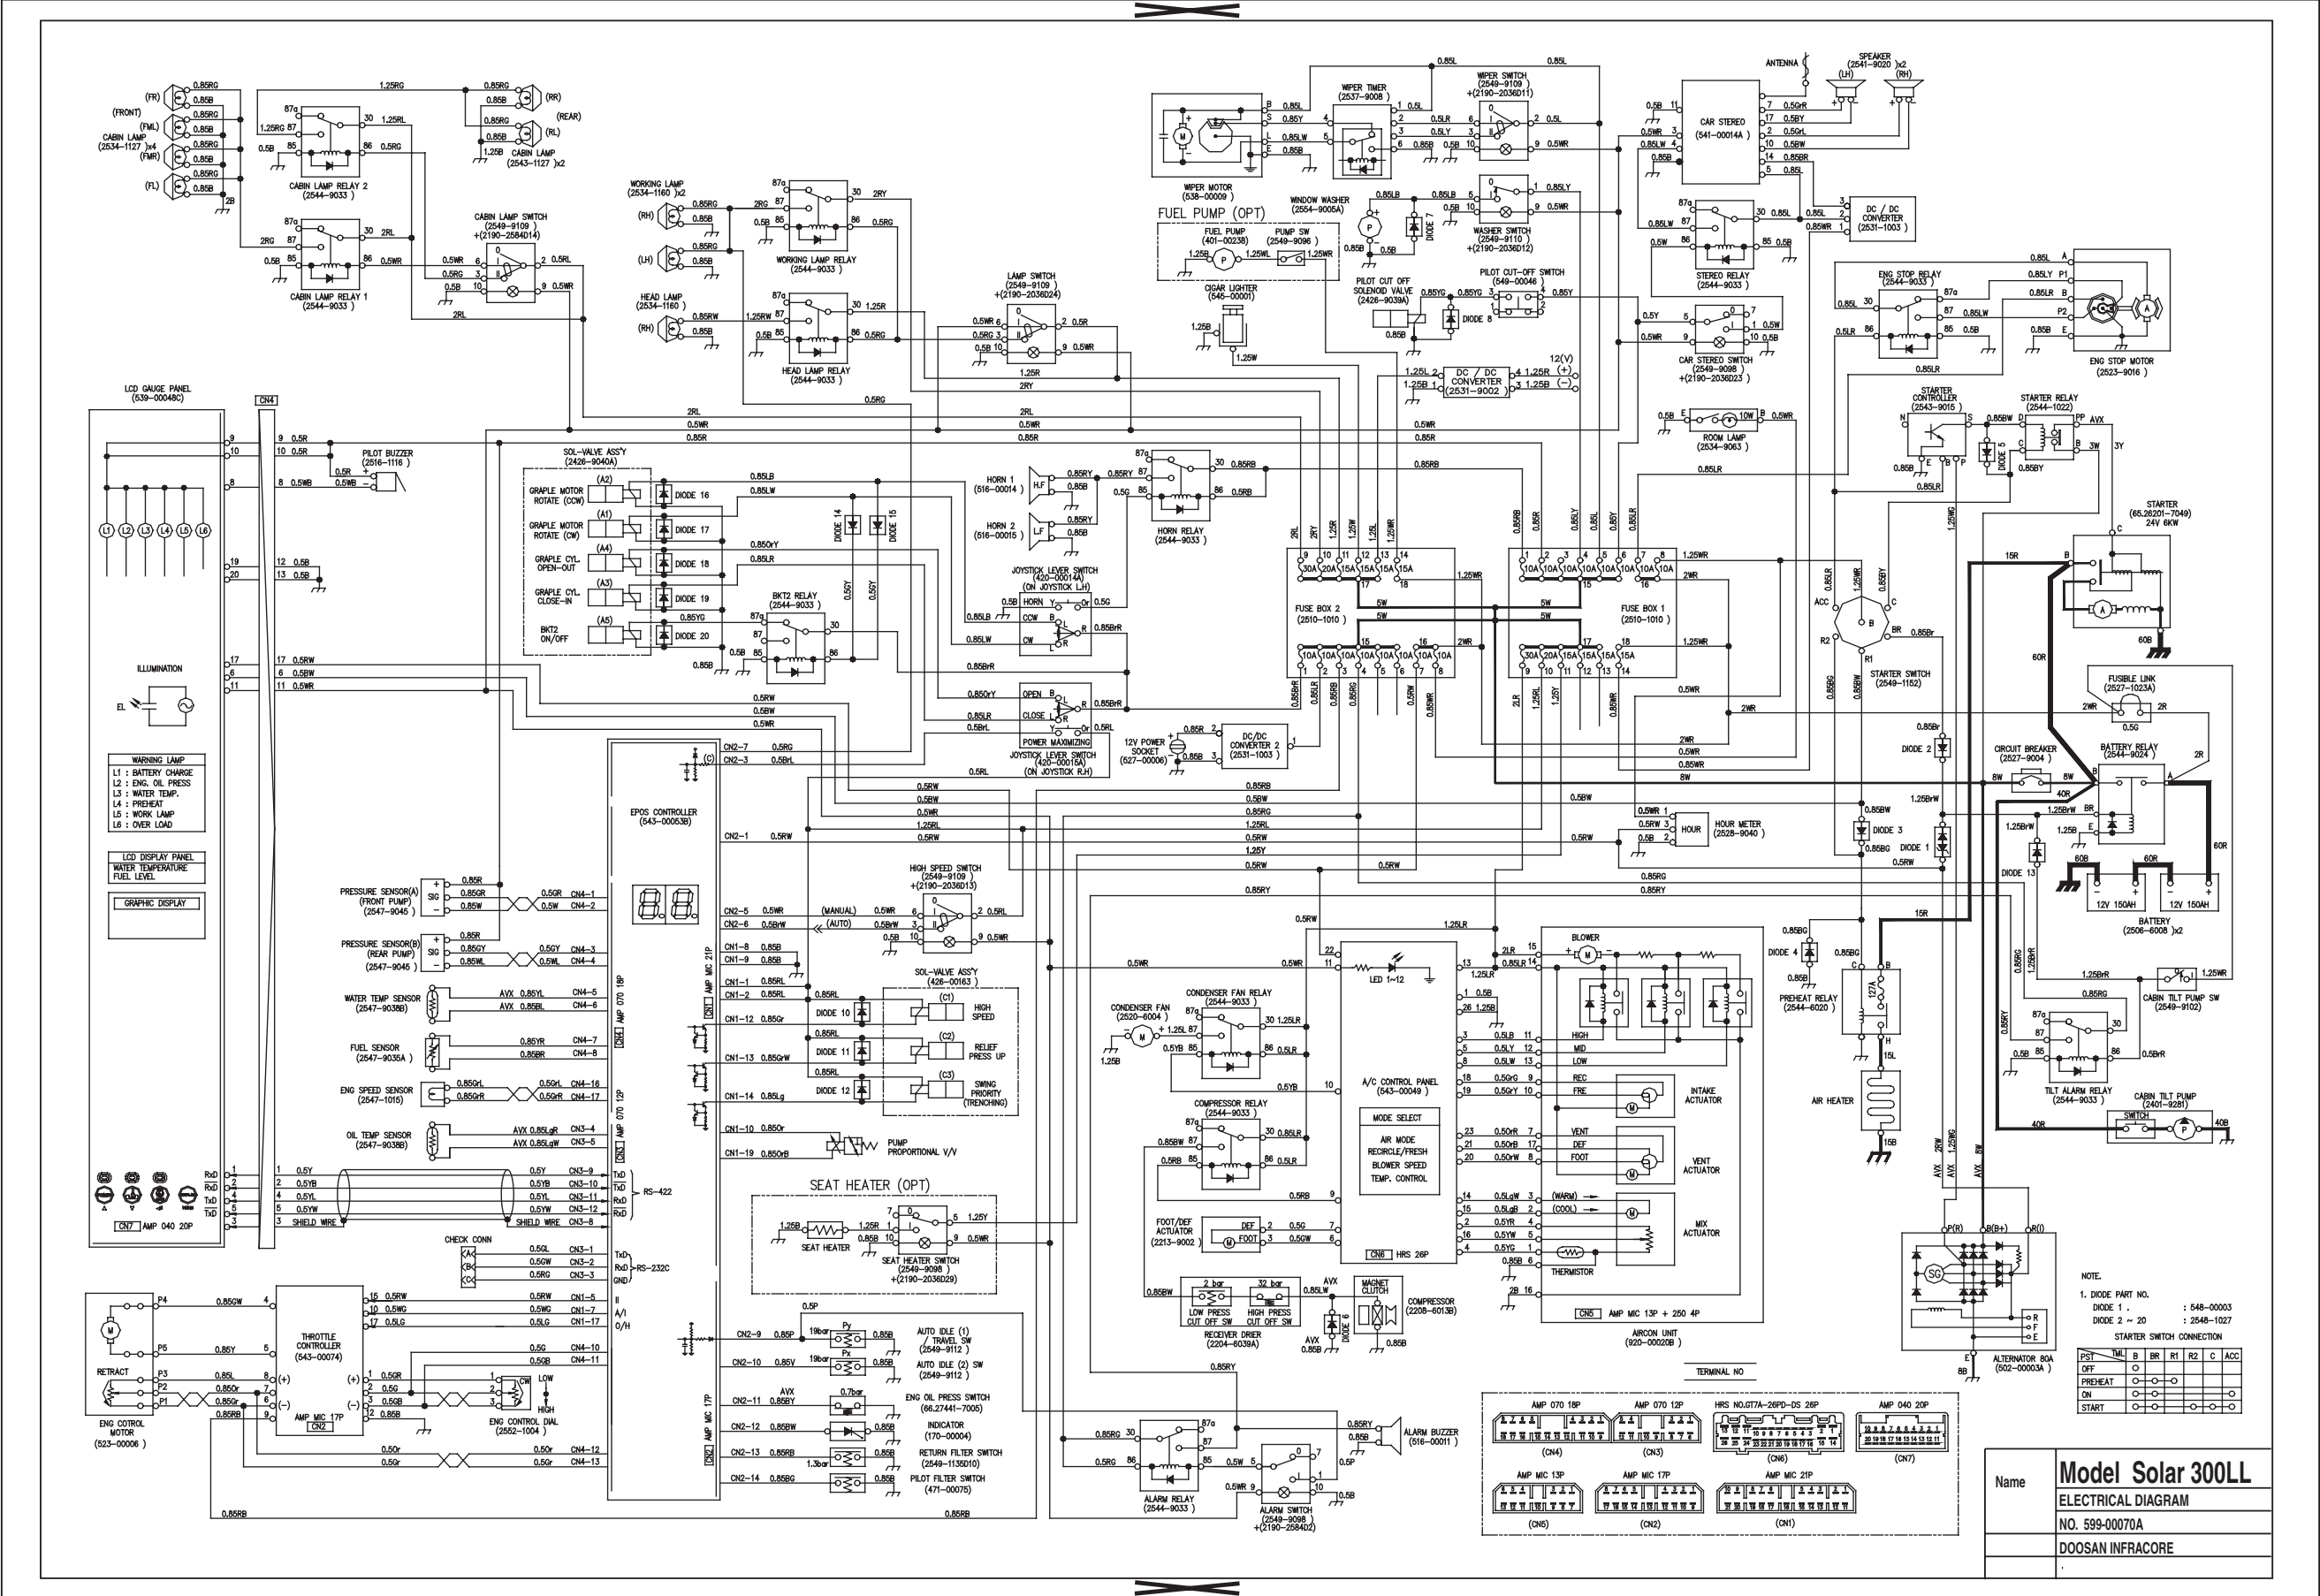


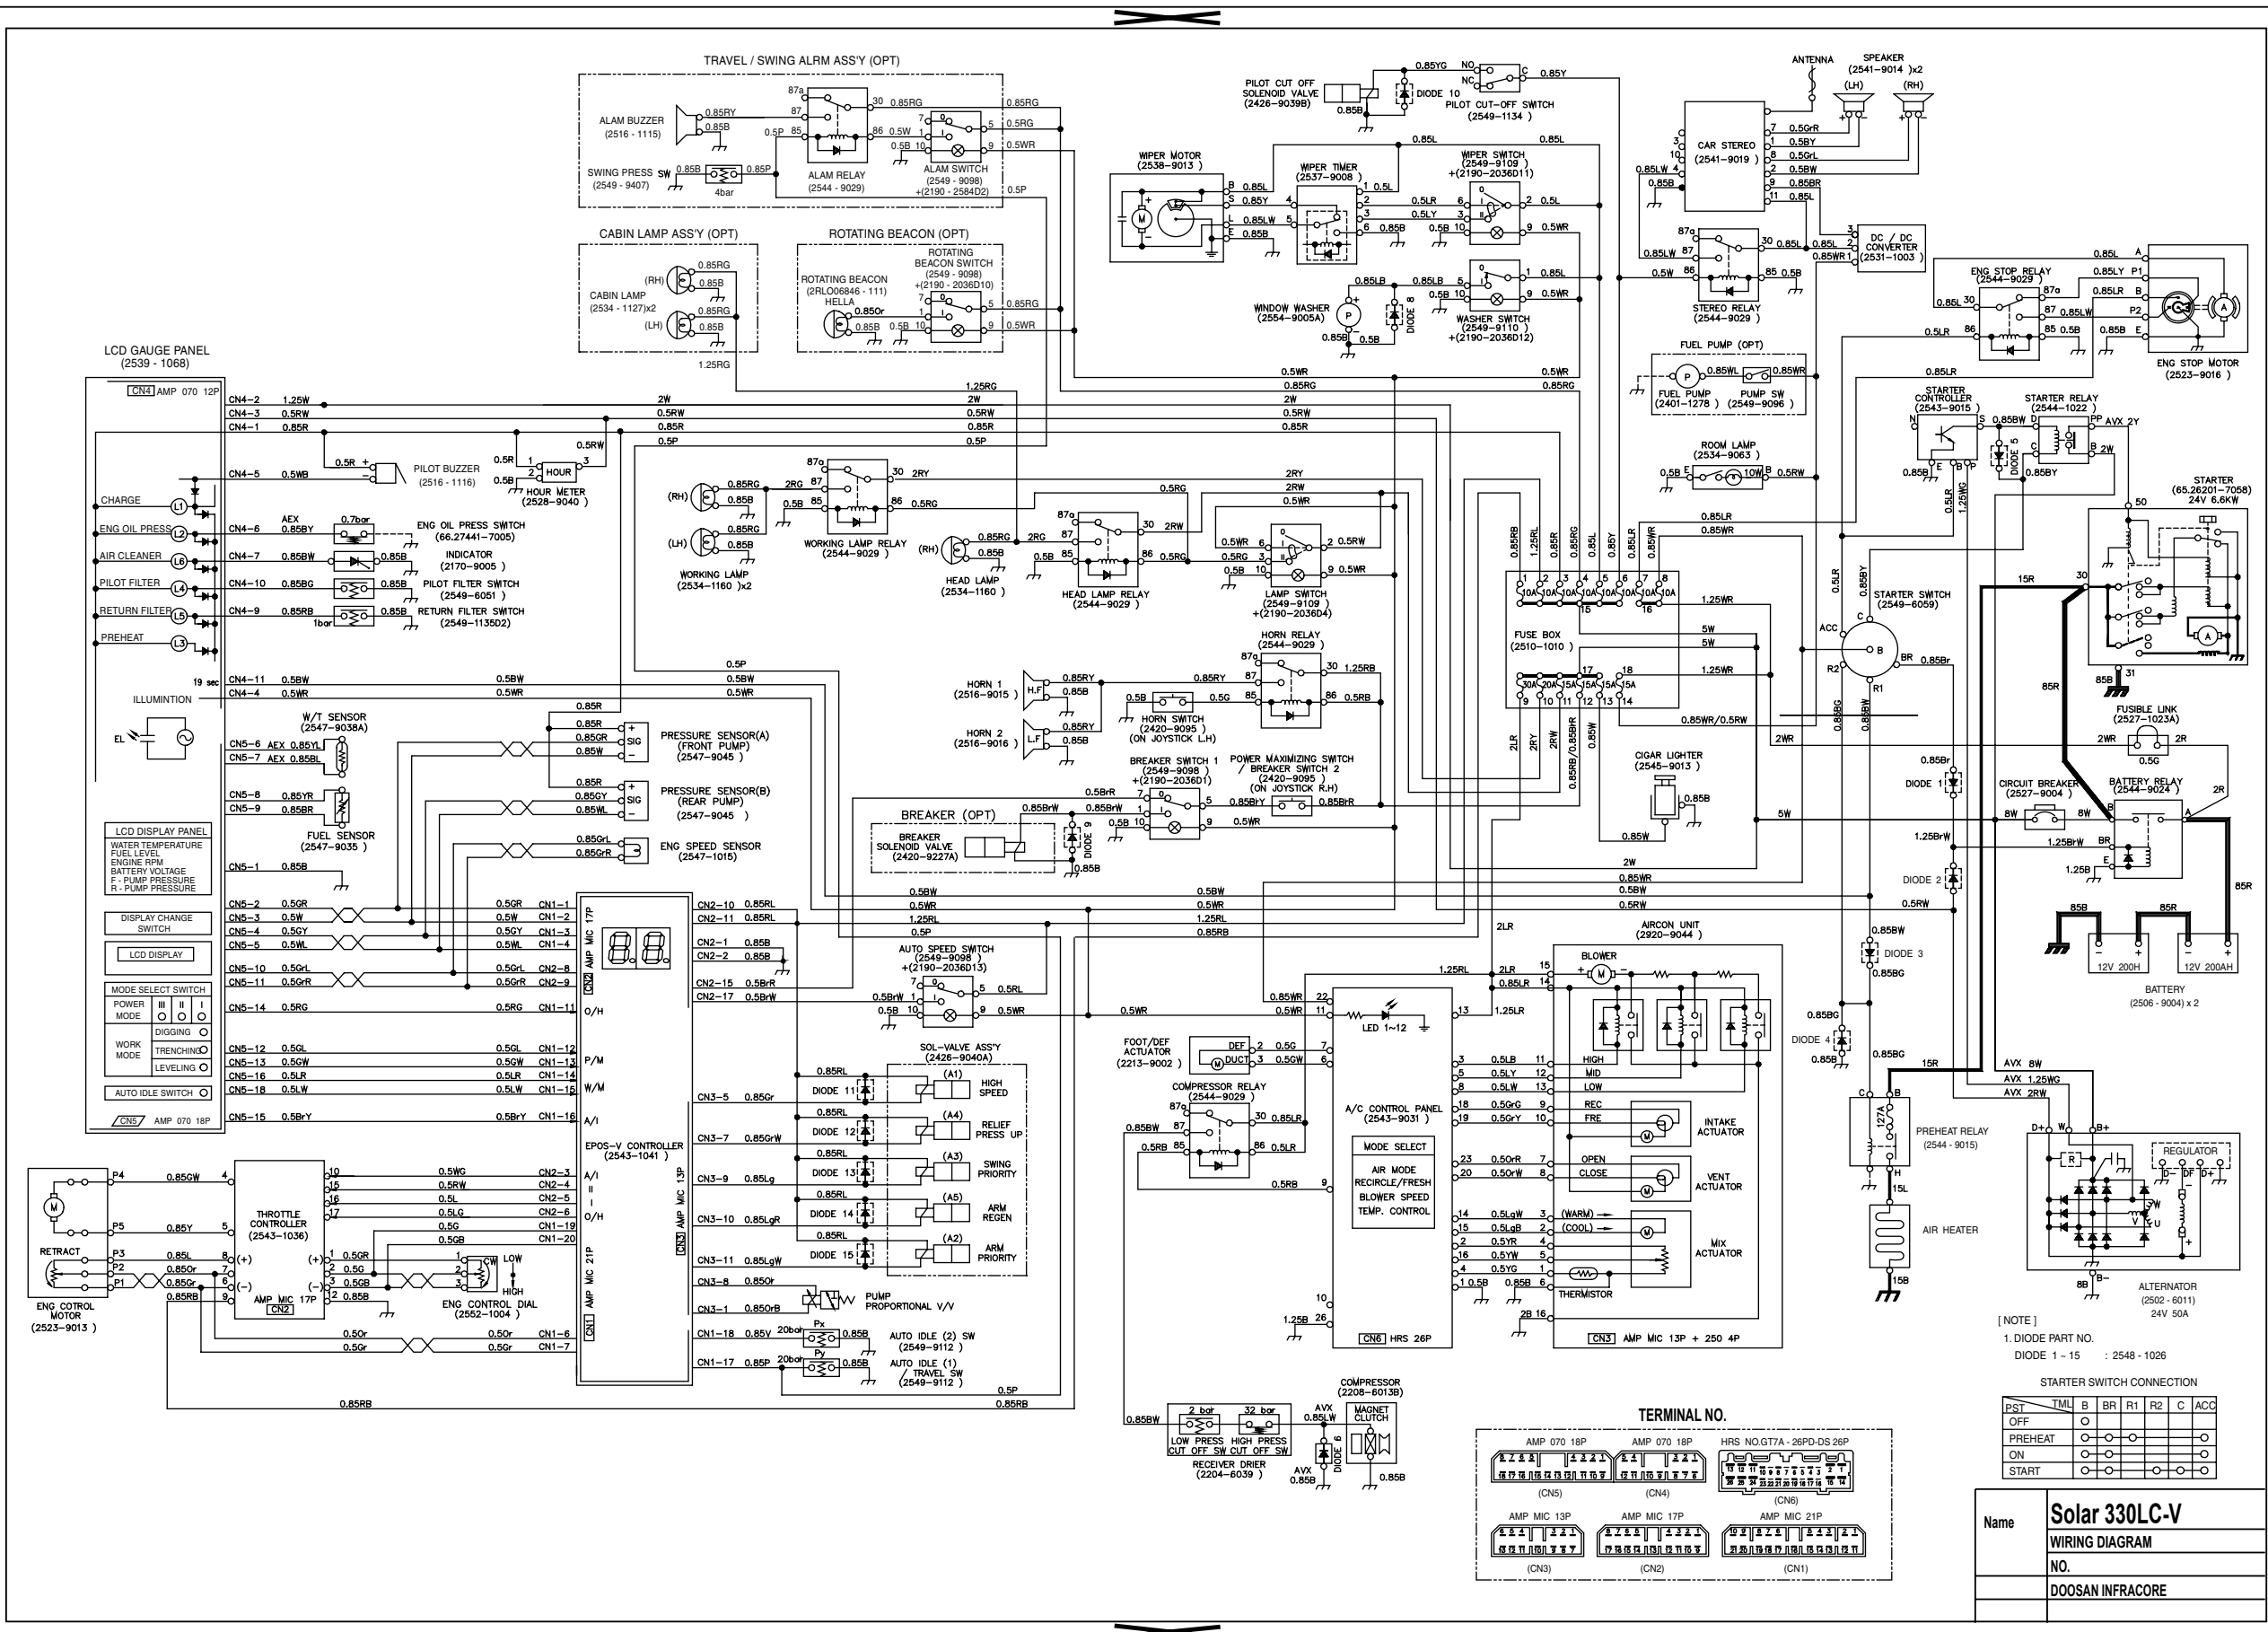


SOLAR 340LC-V (S/N 1001 THRU 1339)

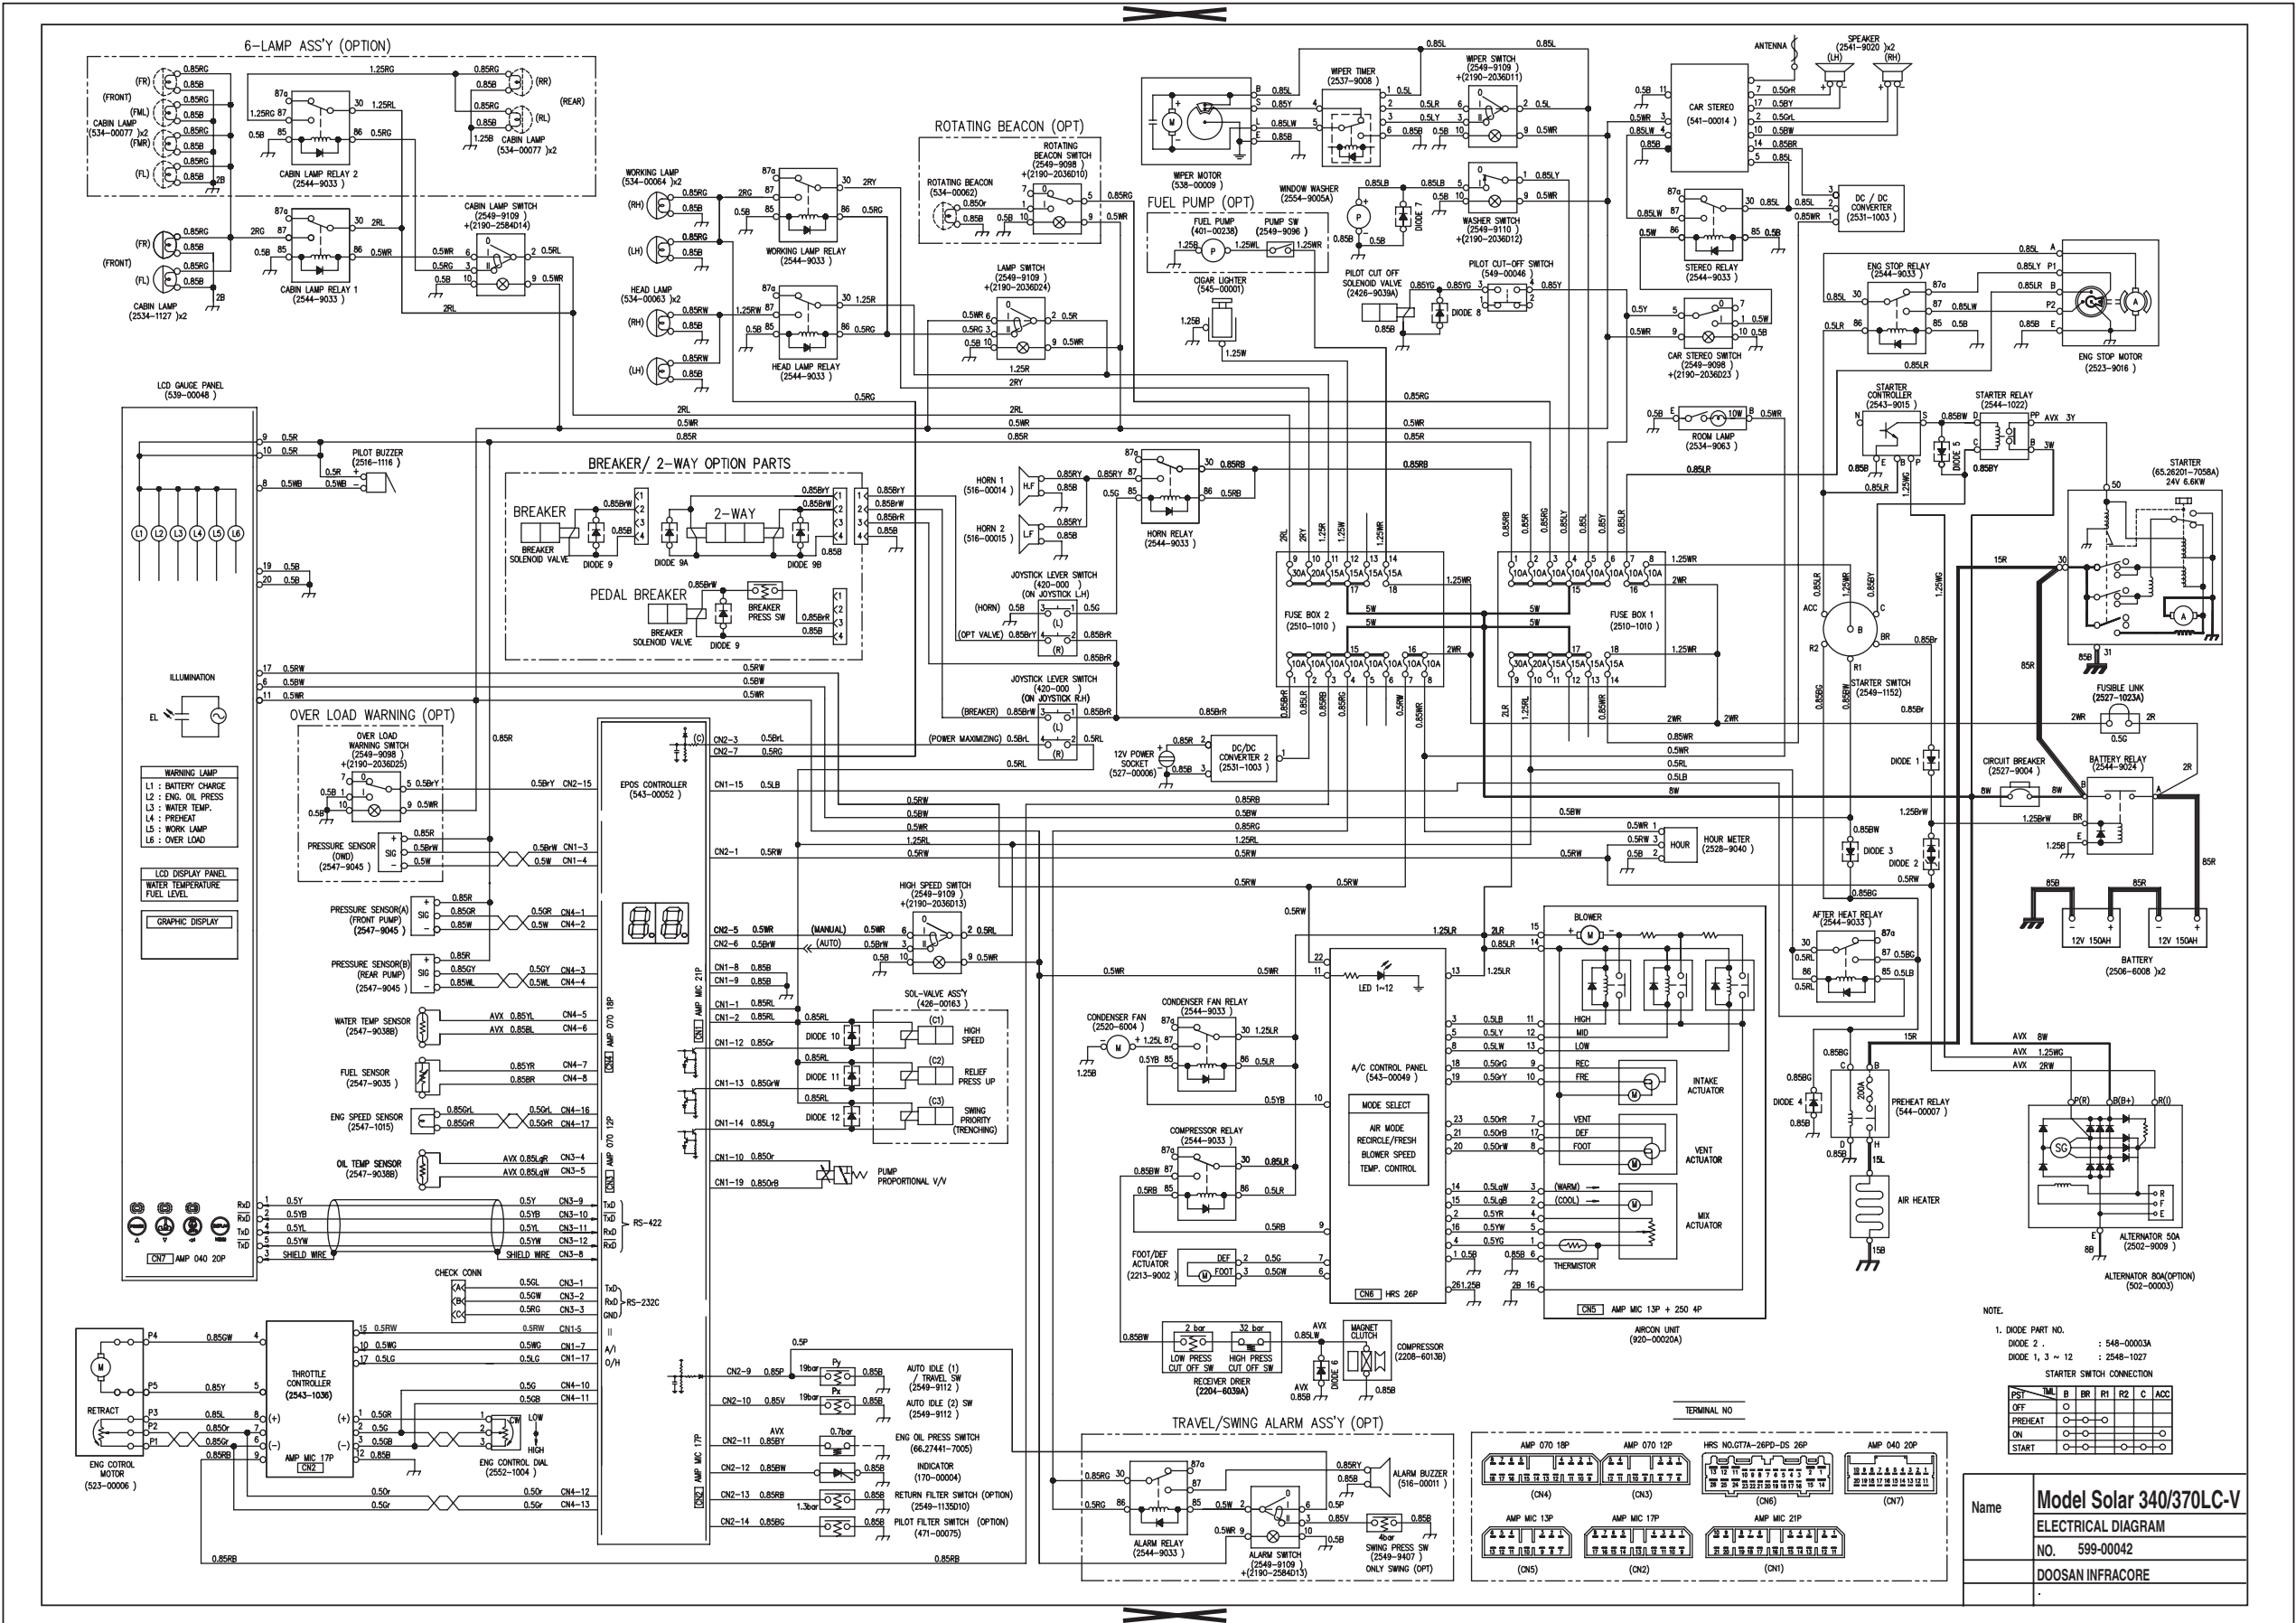

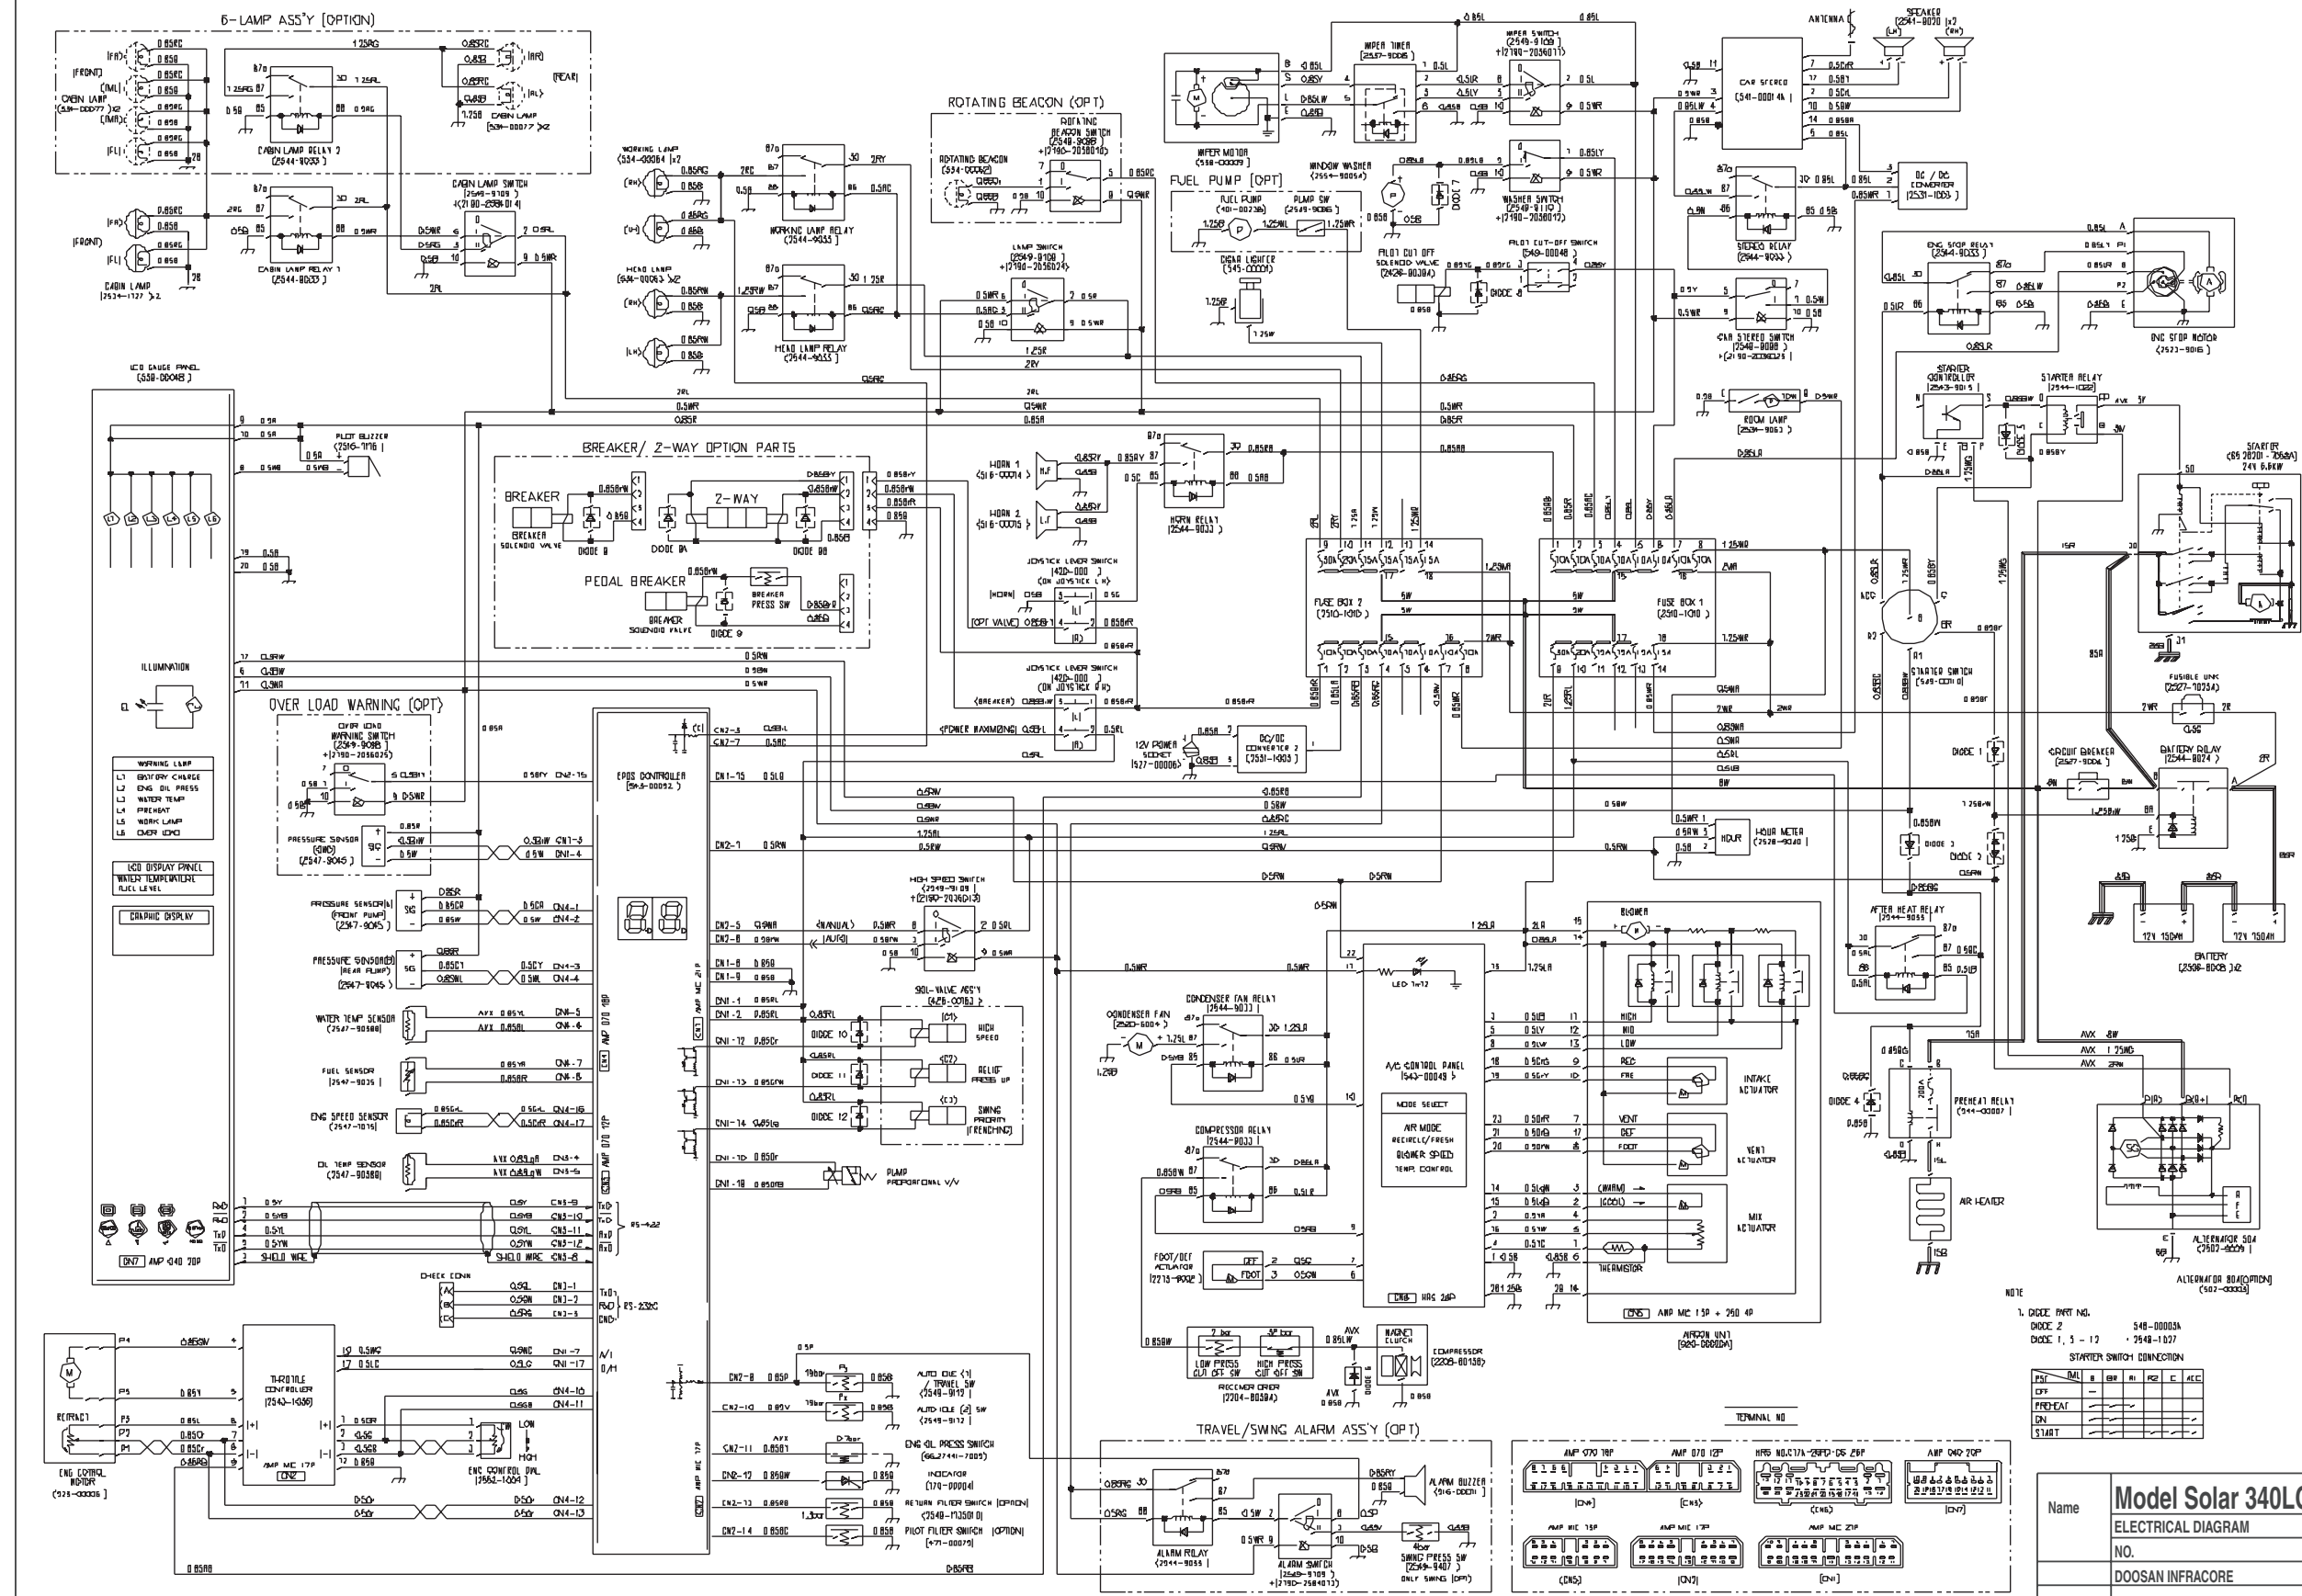

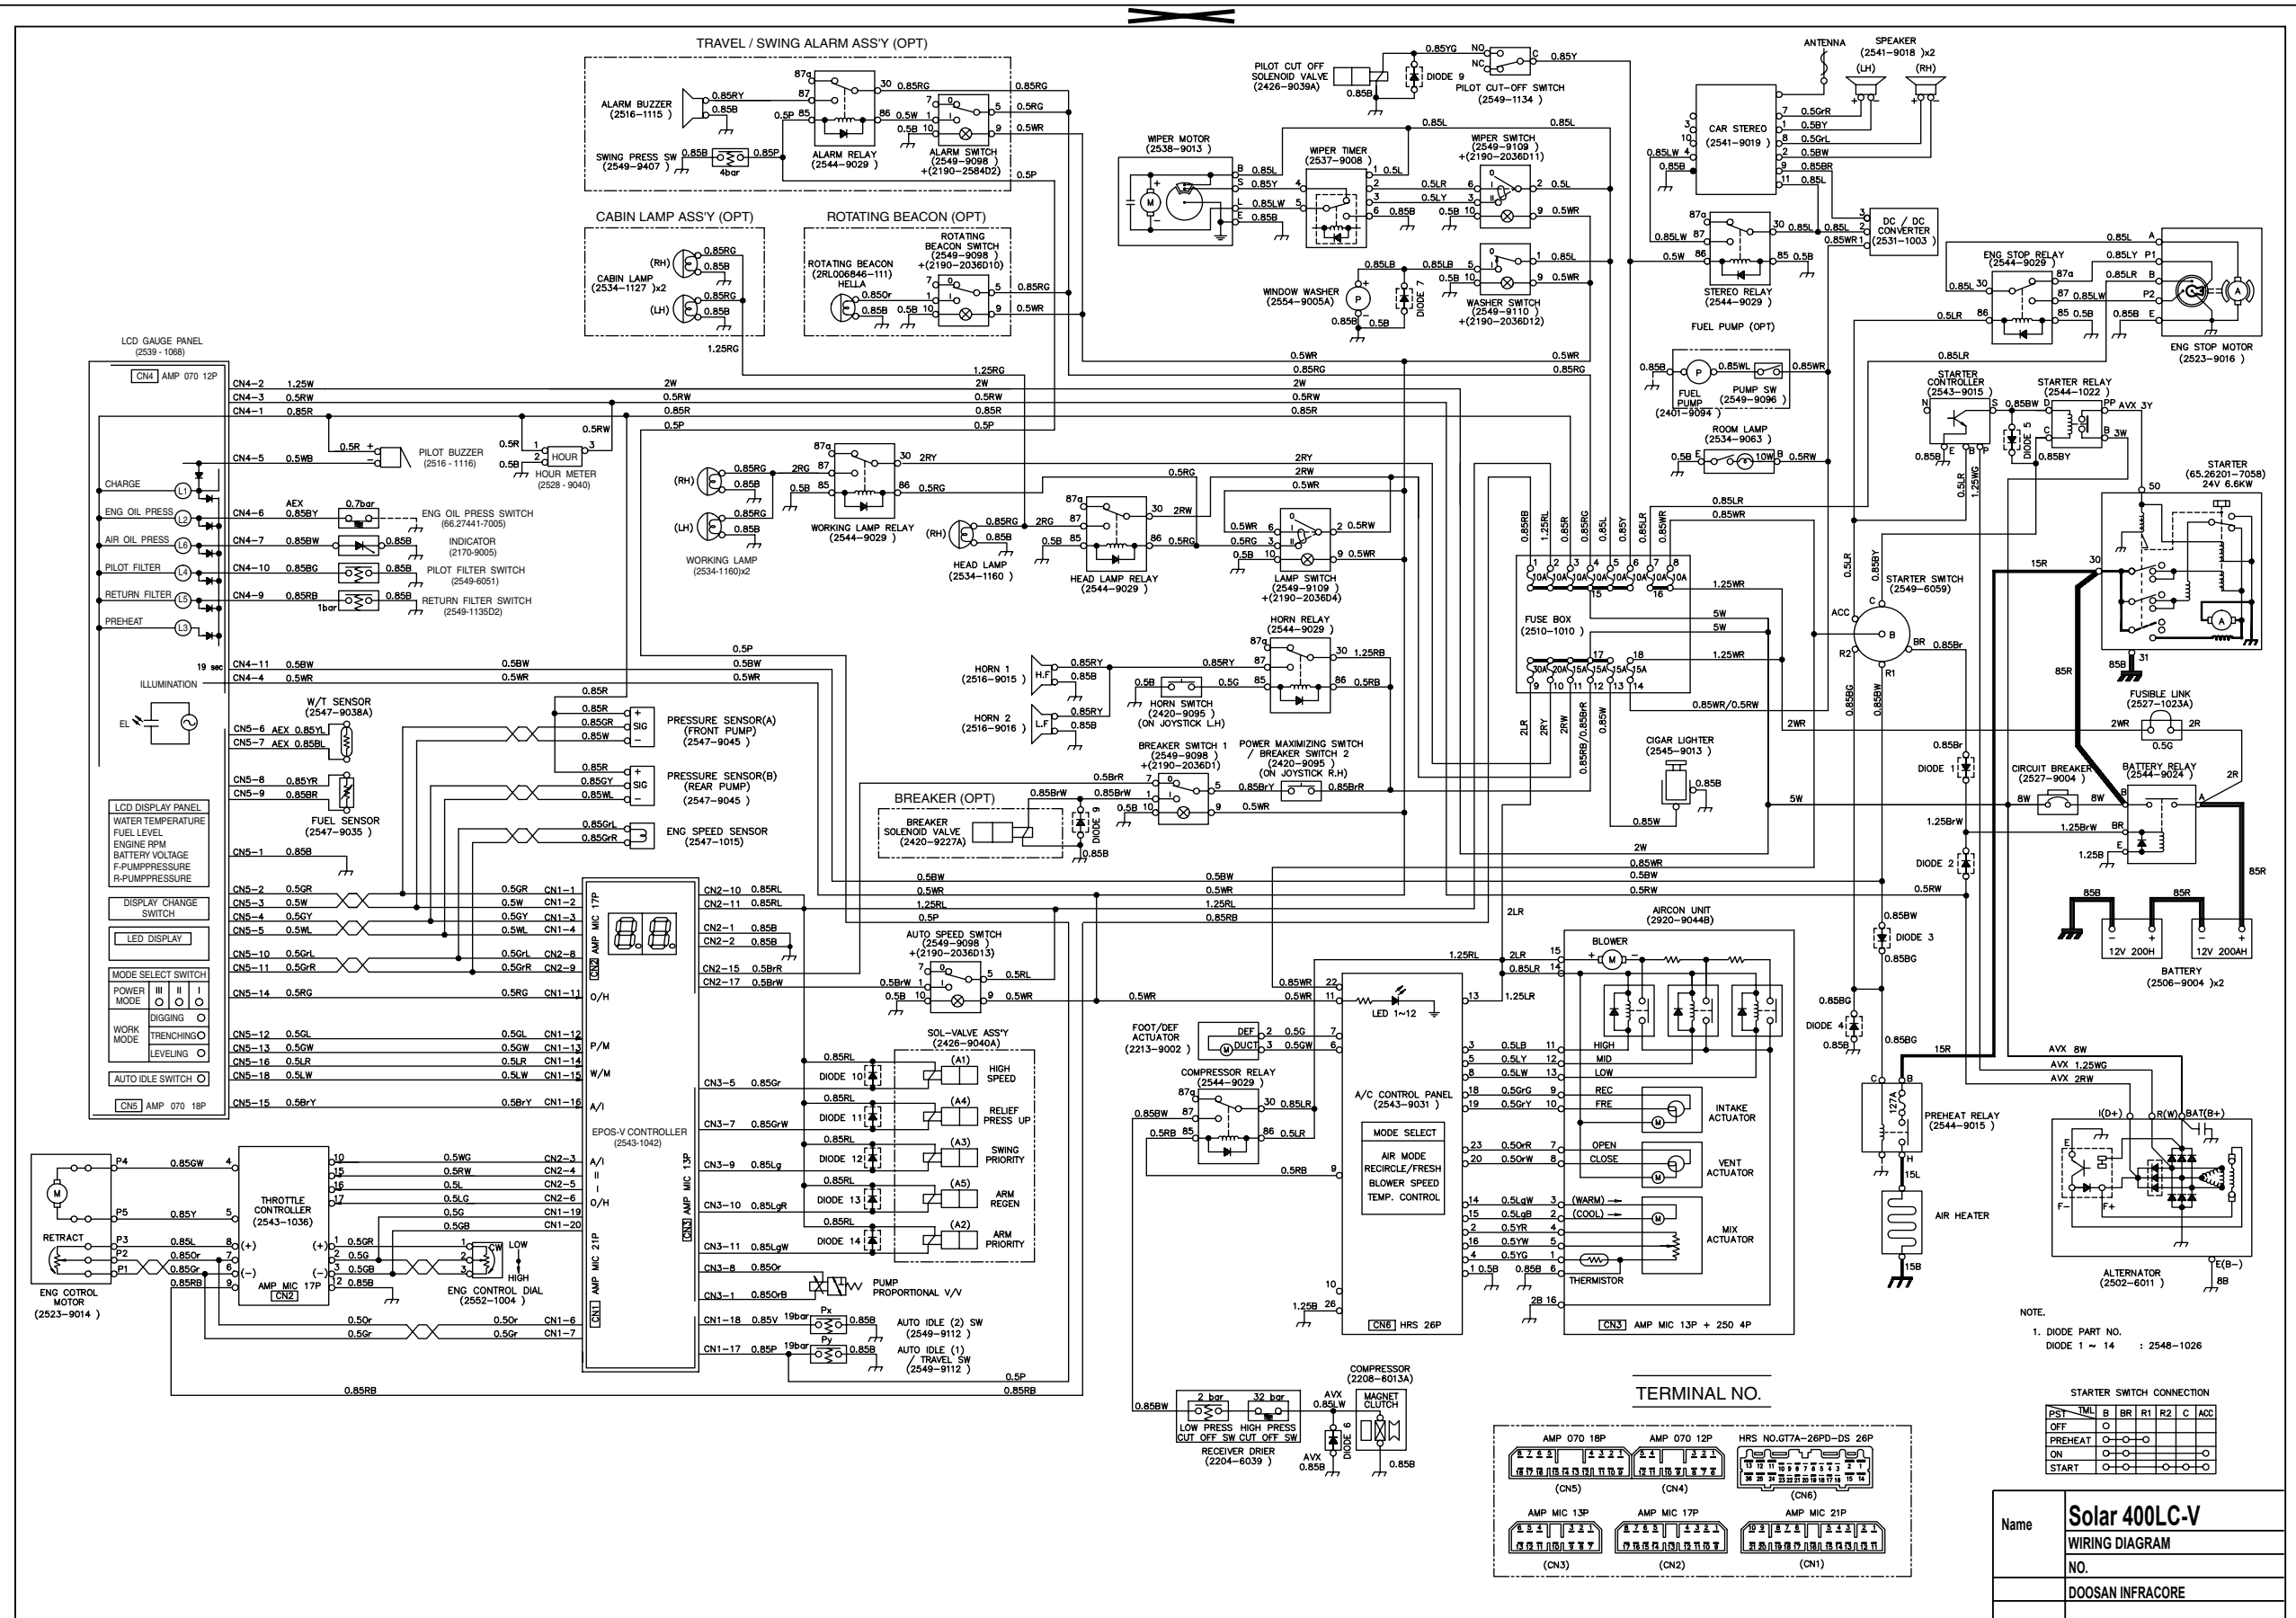

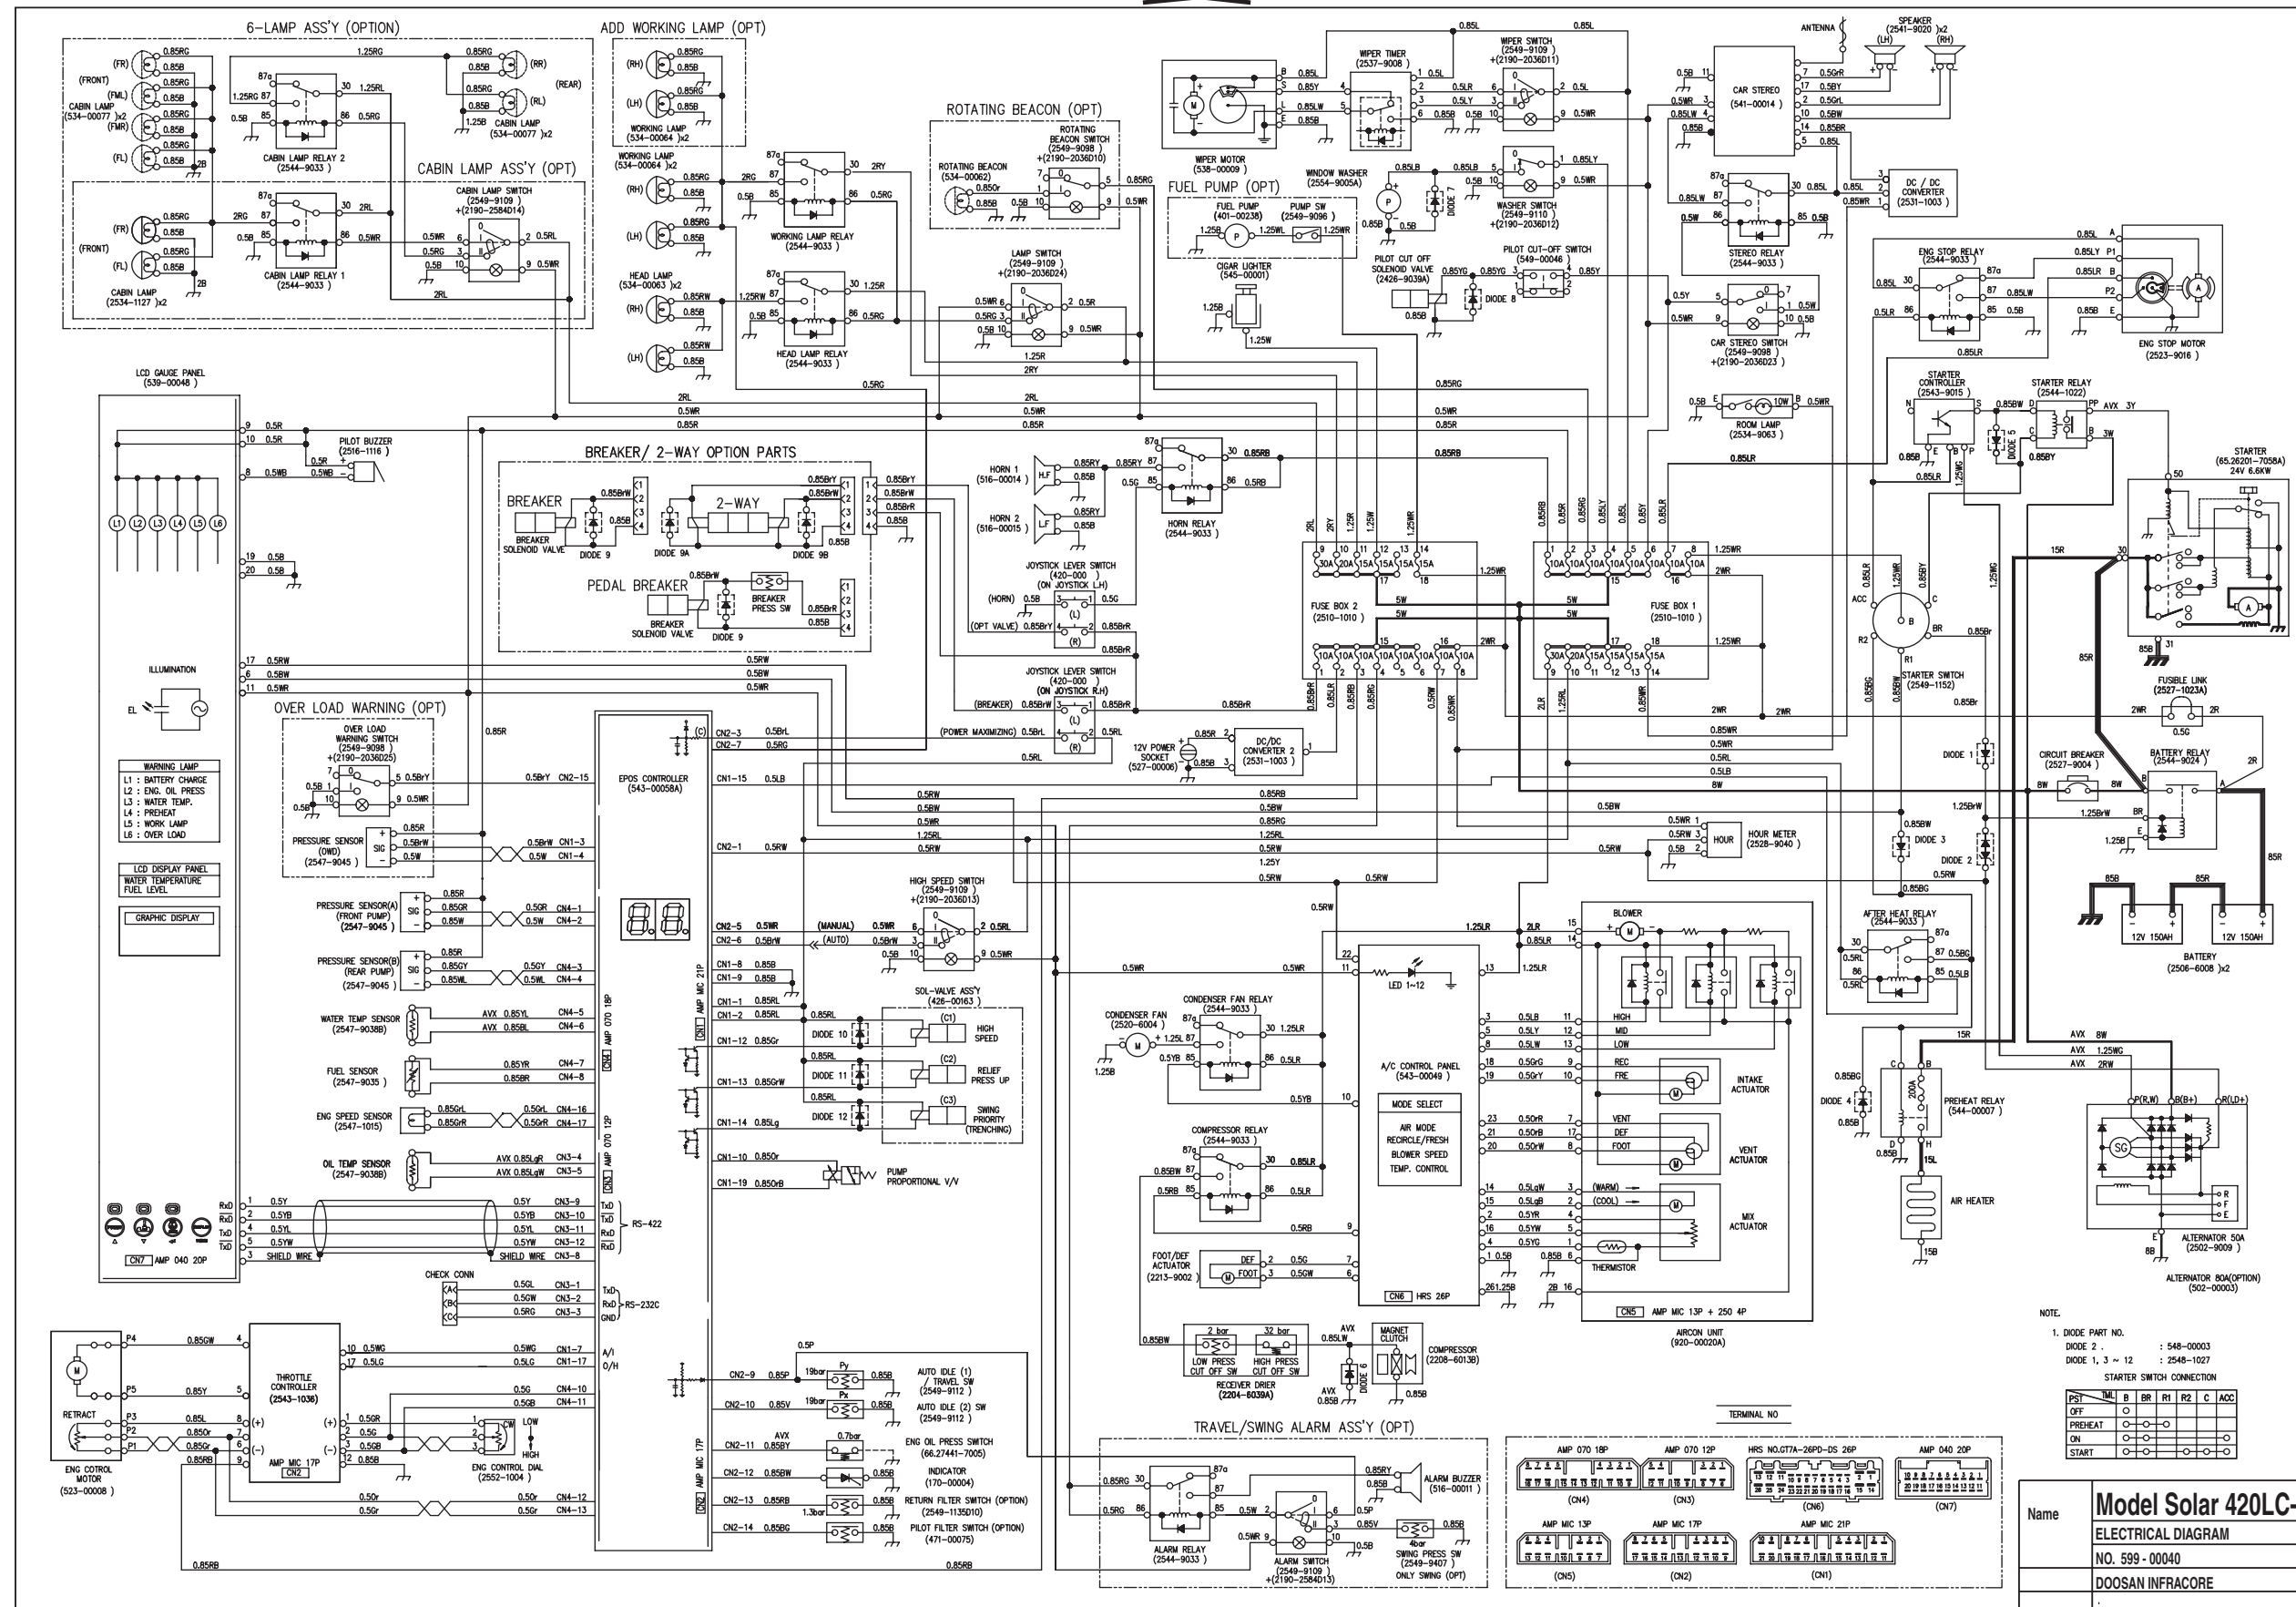


NOTE


1. DIODE PART NO.
DIODE 2 : 548-00003
DIODE 1, 3 ~ 12 : 2548-1027


STARTER SWITCH CONNECTION

PST/TML	B	BR	R1	R2	C
OFF	○				
PREHEAT	○	○	○		
ON	○	○			
START	○	○		○	○

Name	Model Solar 420LC-V
	ELECTRICAL DIAGRAM
	NO. 599 - 00040
	DOOSAN INFRACORE

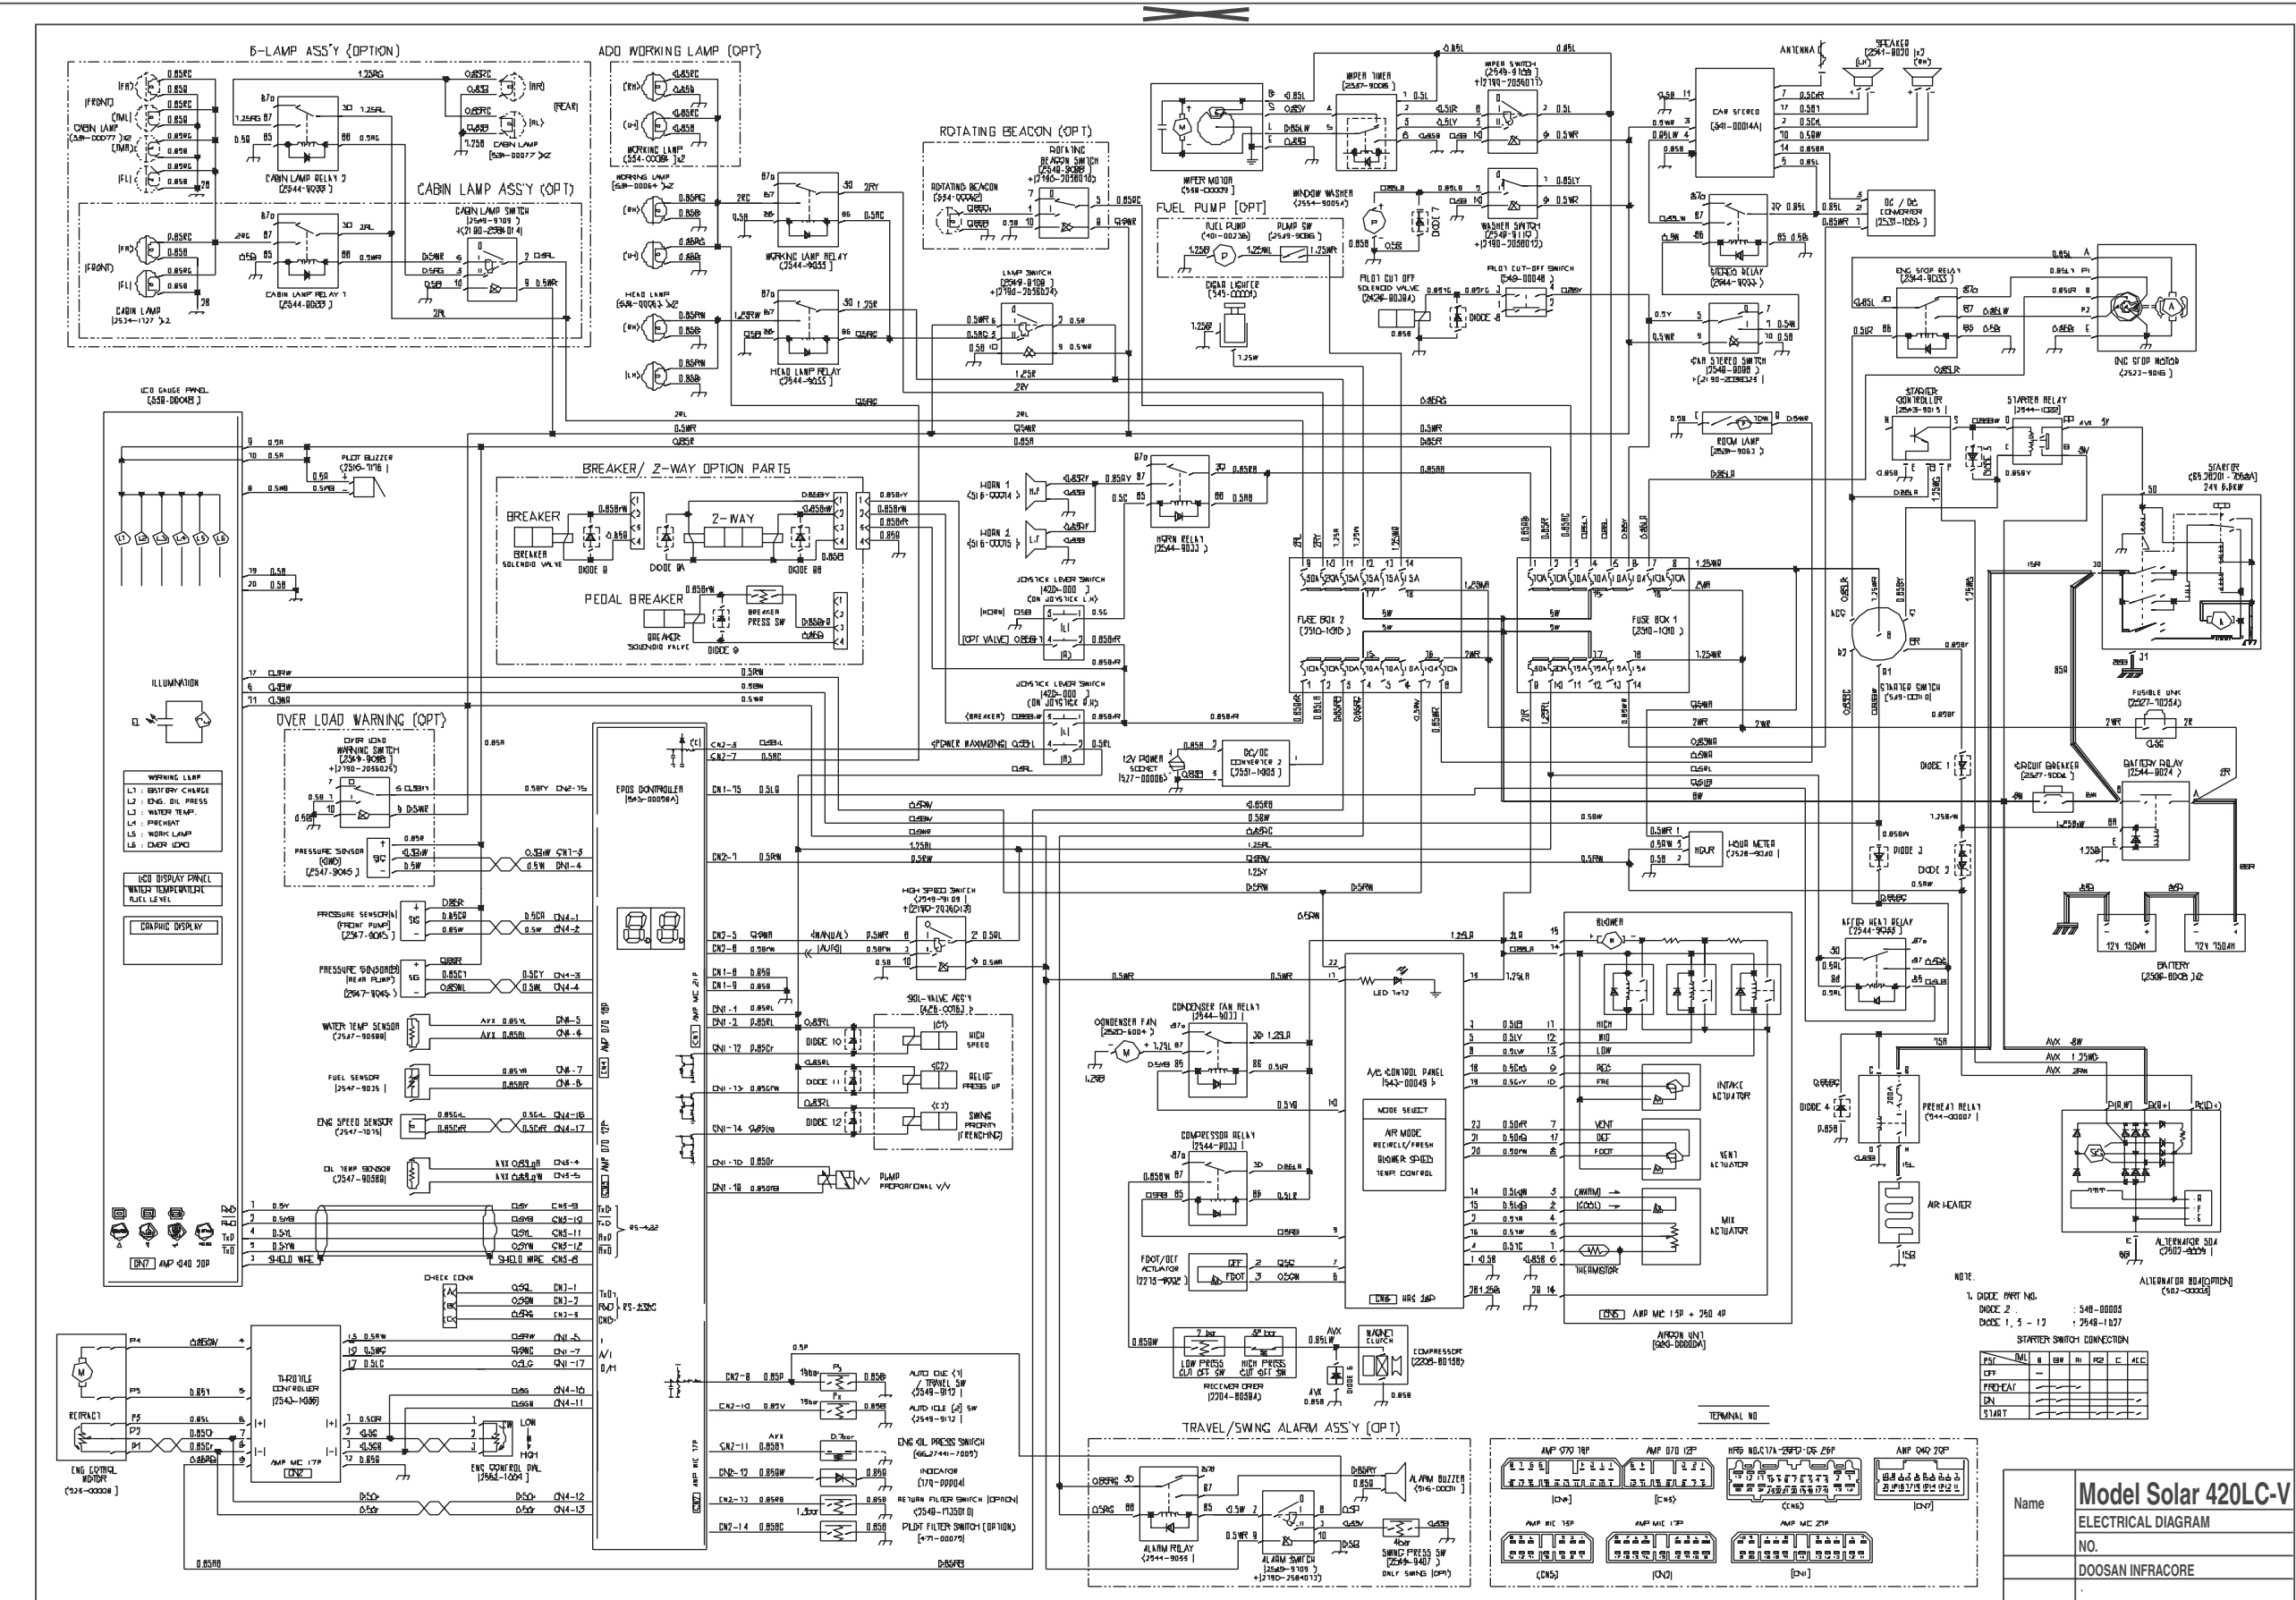

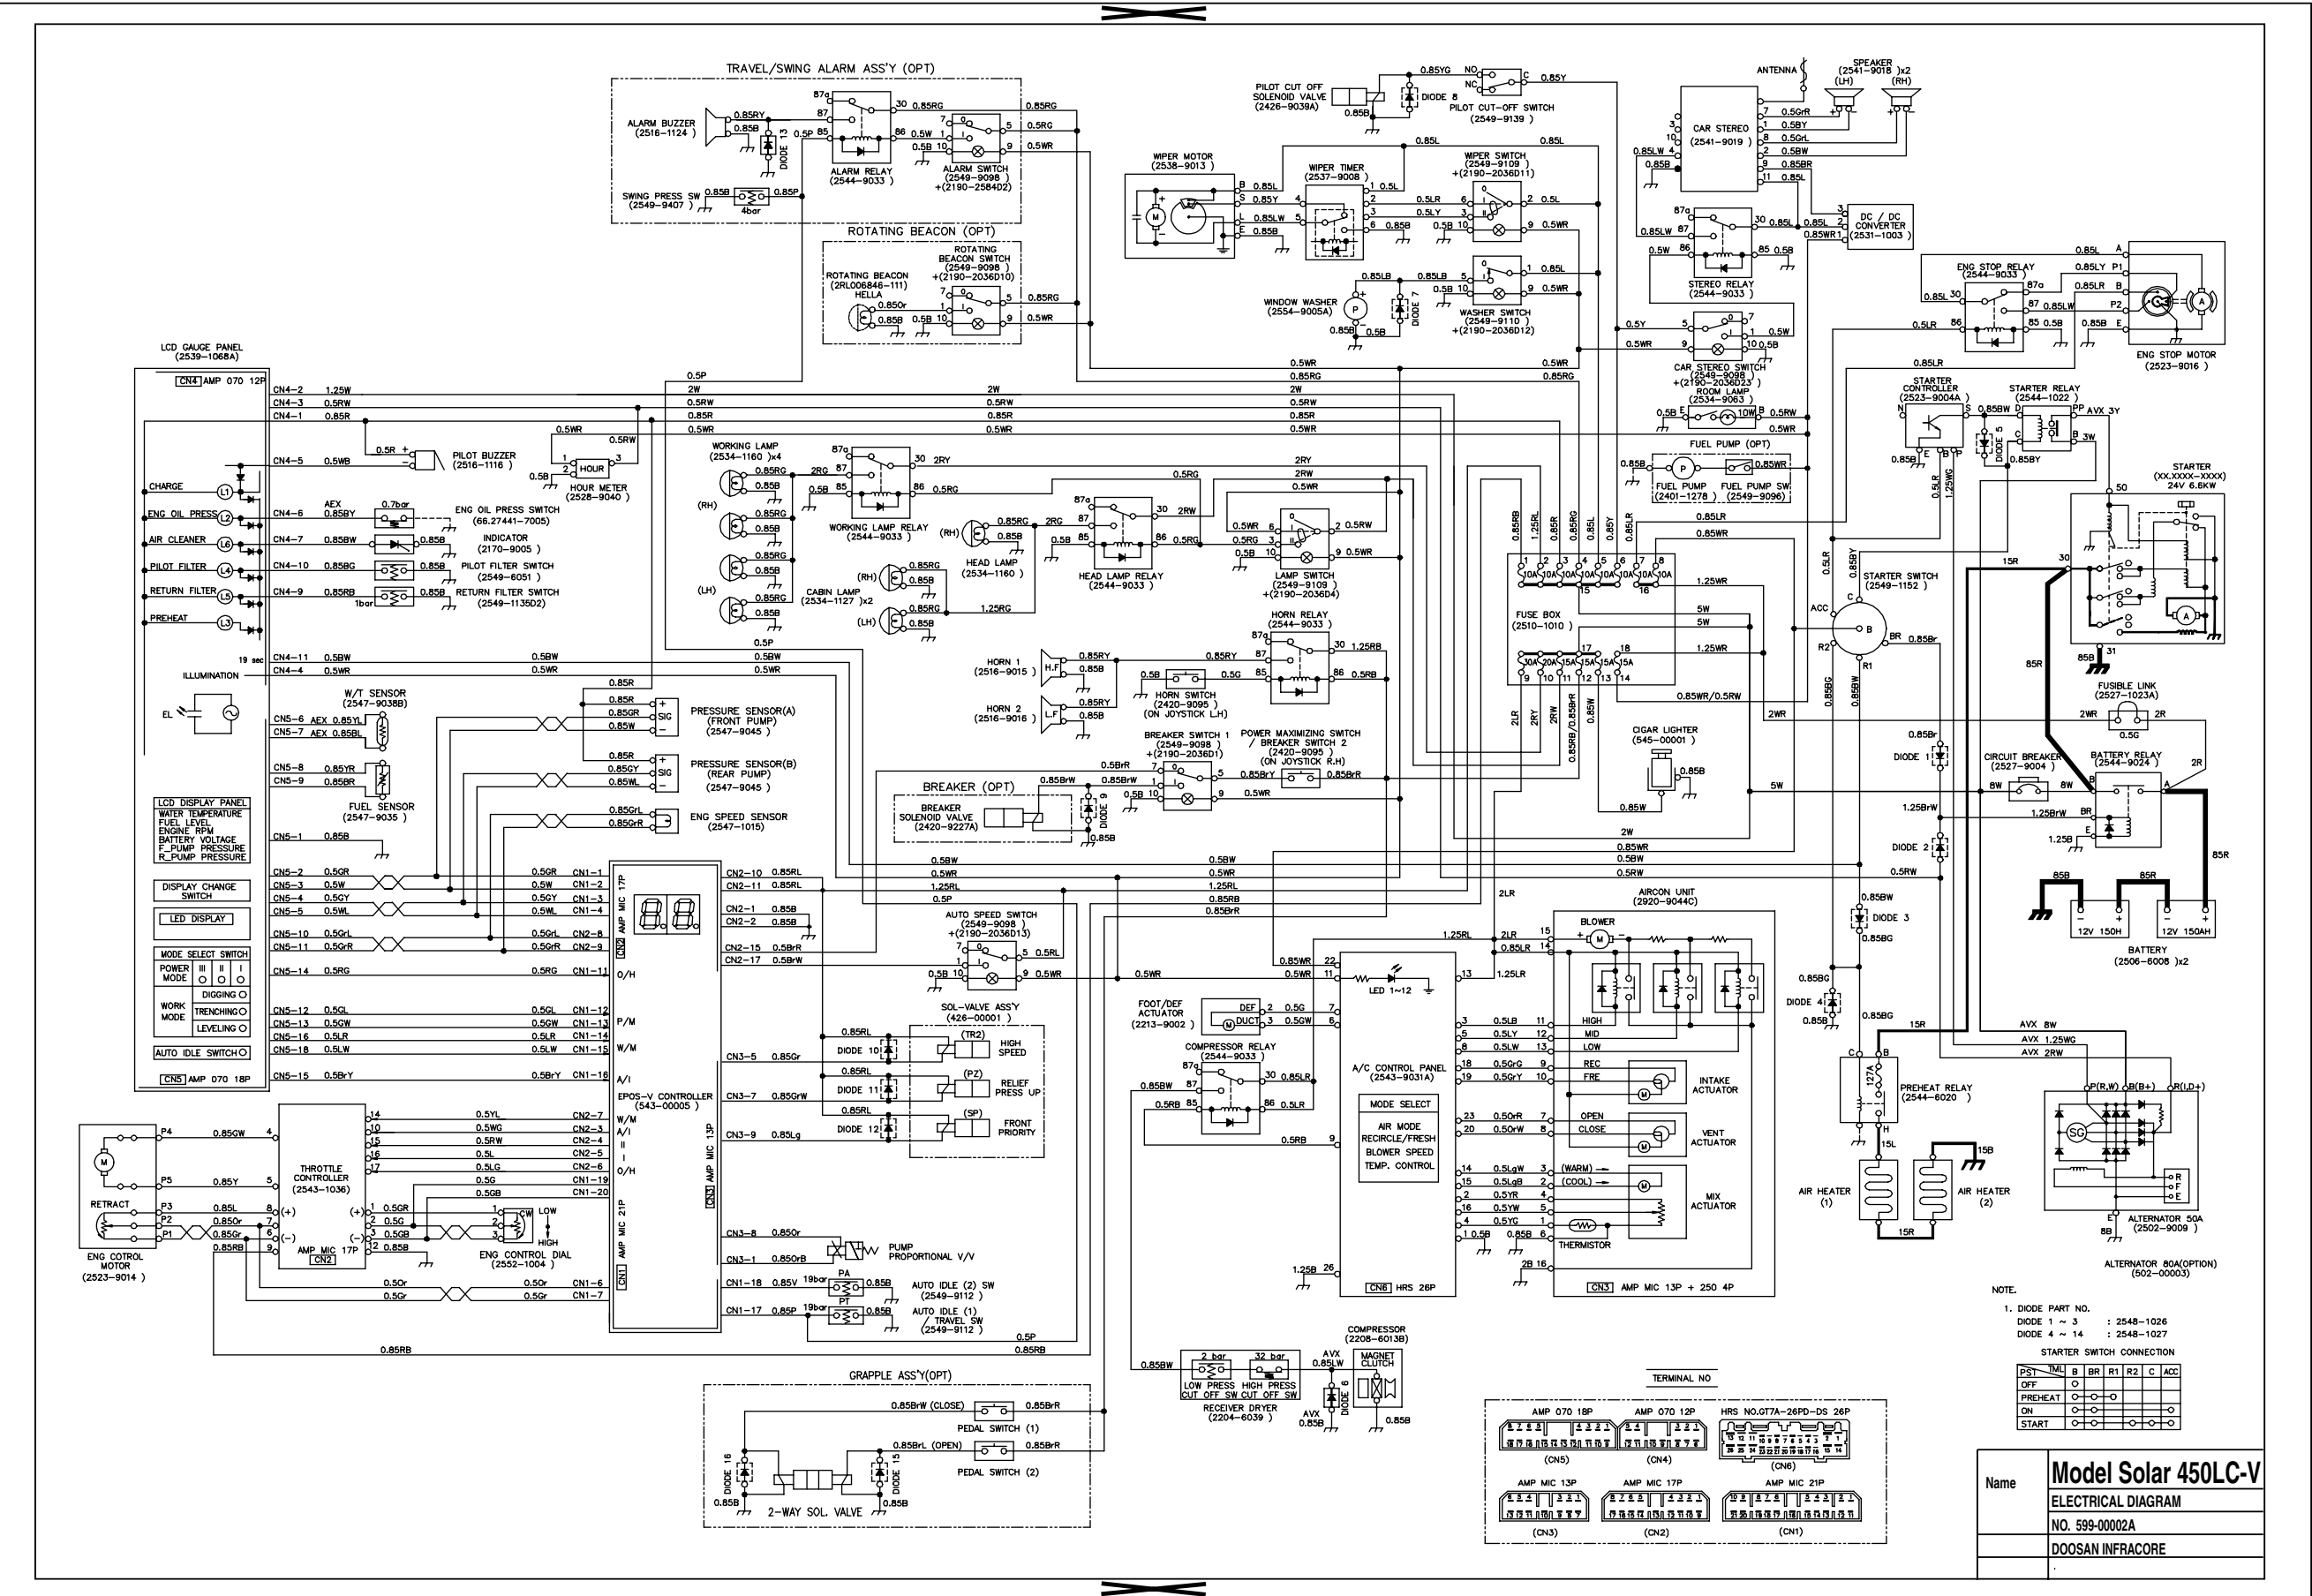


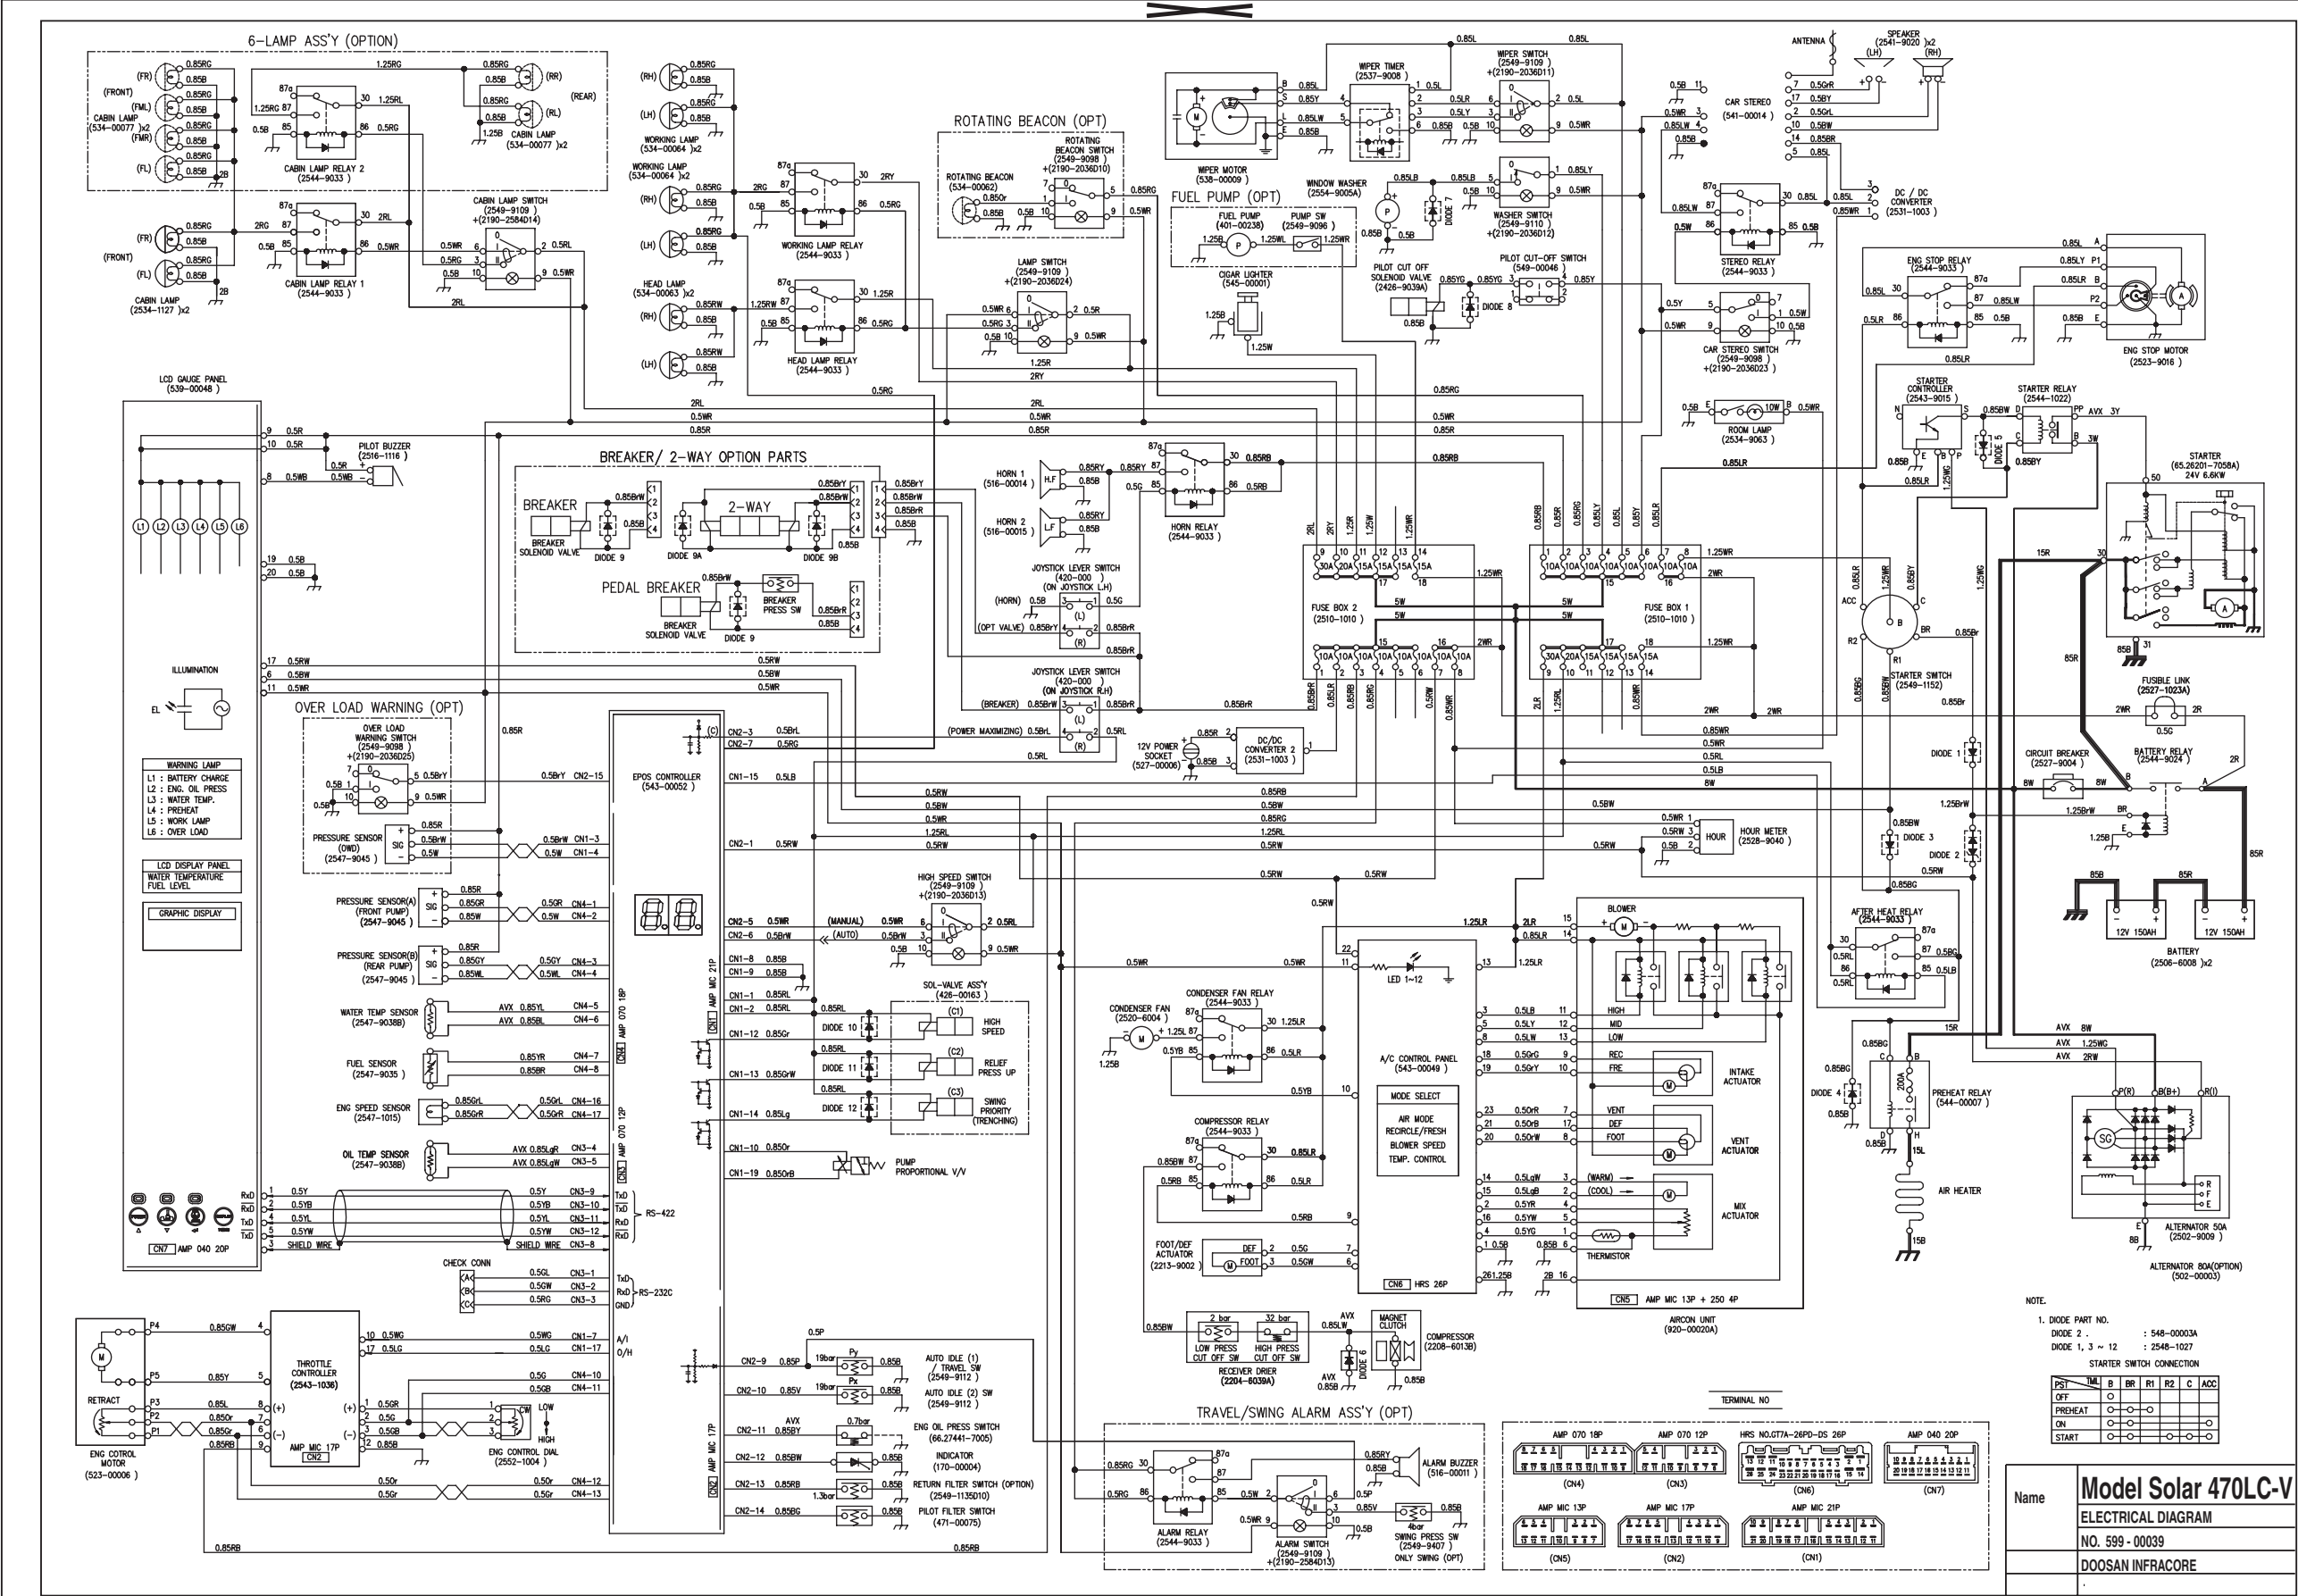

NOTE:
1. DIODE PART NO.
DIODE 2 : 546-0003A
DIODE 1, 3 ~ 12 : 2548-1027
STARTER SWITCH CONNECTION

ST	1	2	3	4	5	6	7	8	9	10	11	12
OFF												
PREHEAT												
ON												
START												

Name: **Model Solar 470LC-V**
ELECTRICAL DIAGRAM
NO. 599-00039
DOOSAN INFRACORE

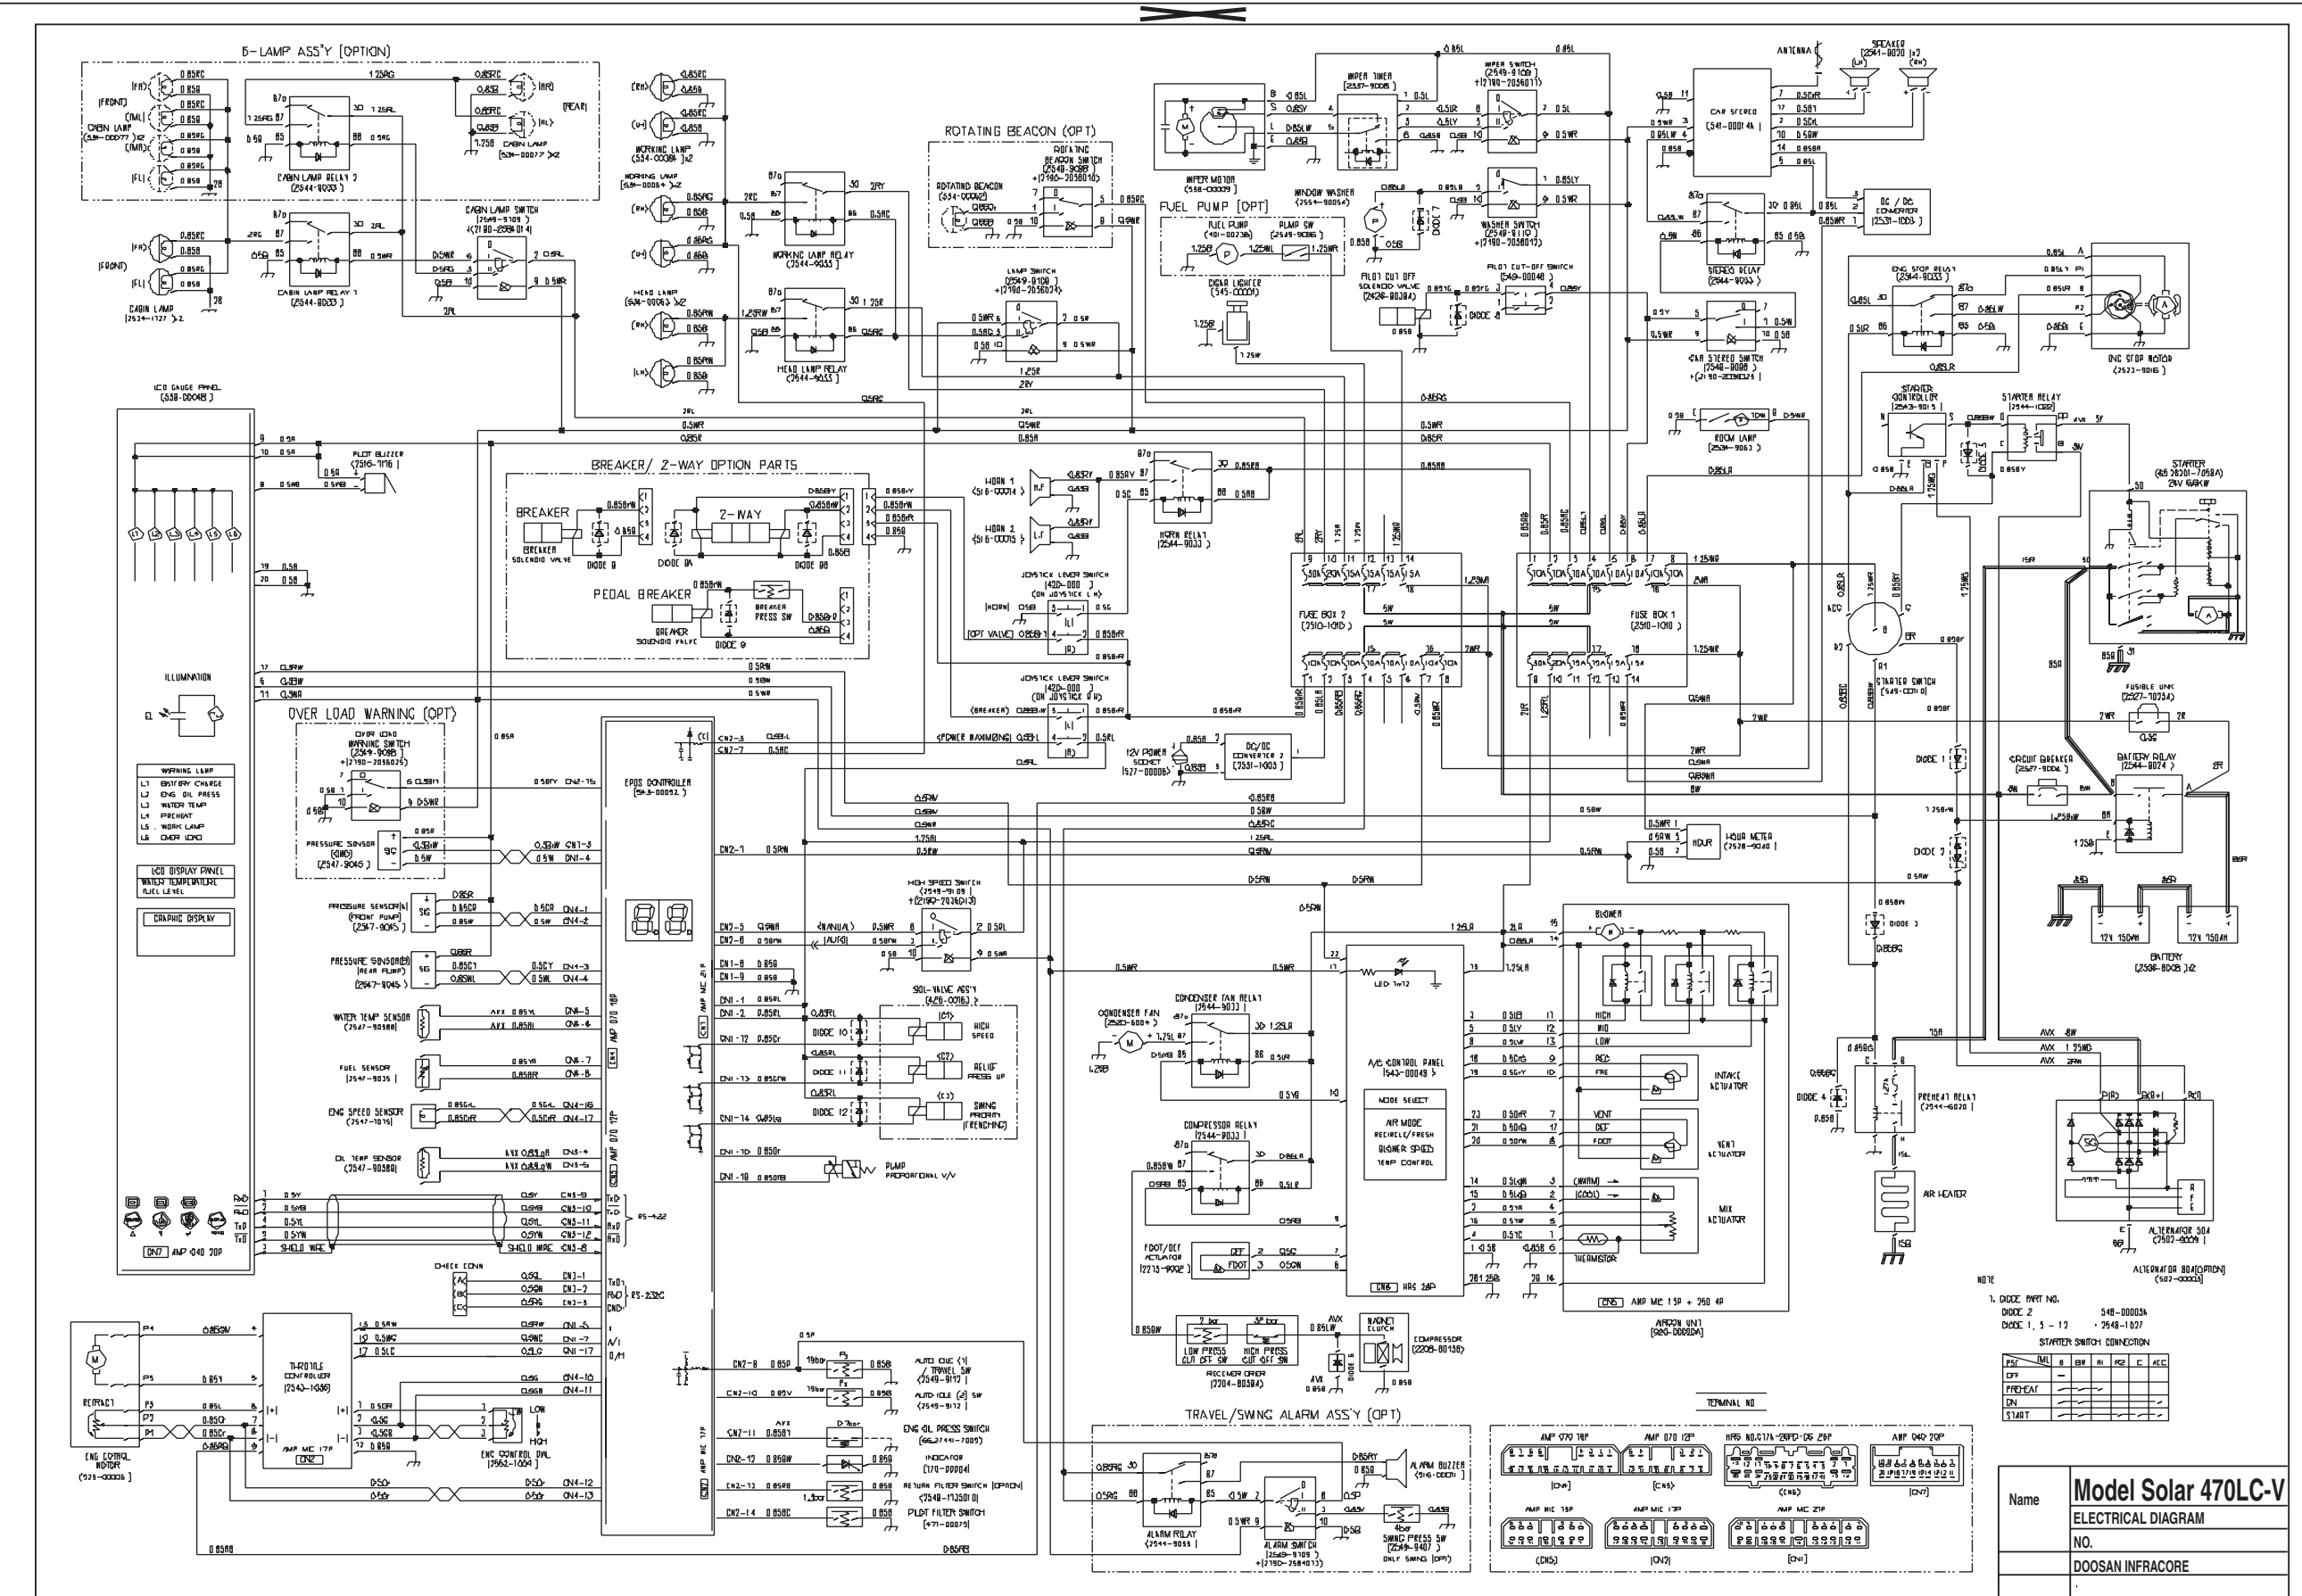


NOTE


1. DIODE PART NO. 540-0000A
DIODE 2 2548-107
STARTER SWITCH CONNECTION


SW	LINE	W	R	Y	B	BL
OFF						
PRE-ENG						
ON						
START						


Name	Model Solar 470LC-V
	ELECTRICAL DIAGRAM
NO.	
	DOOSAN INFRACORE

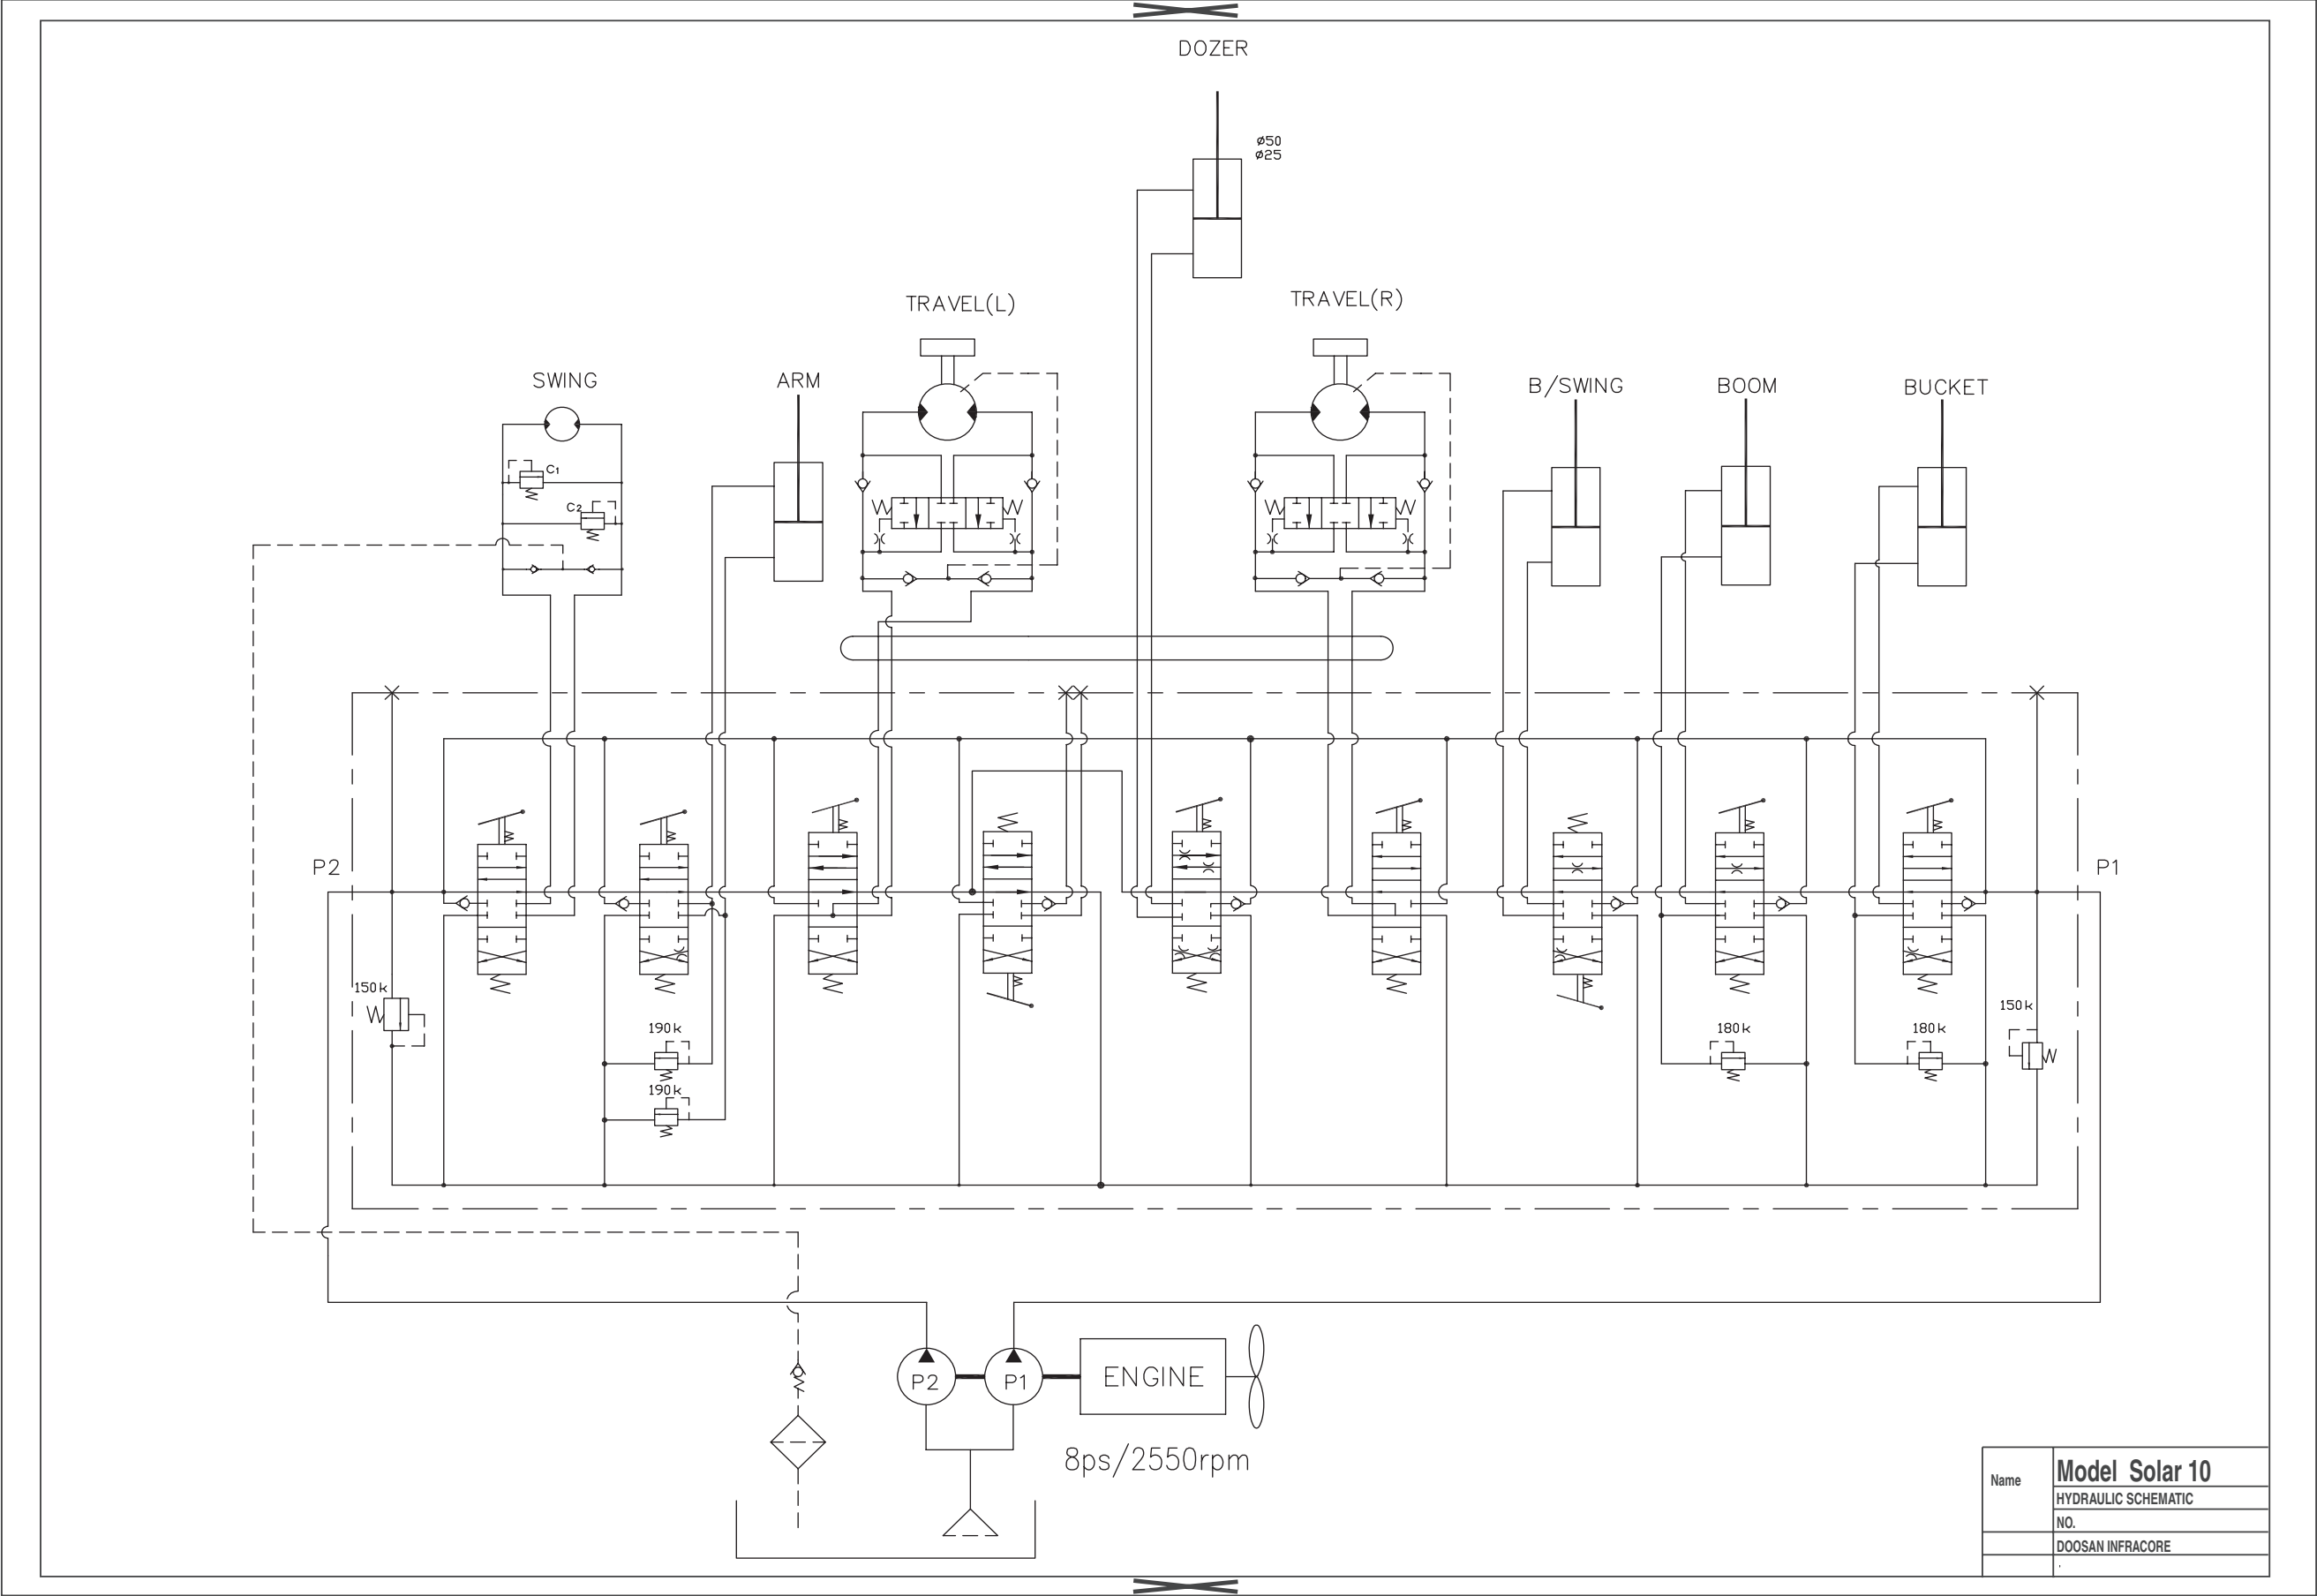



HAAE1790

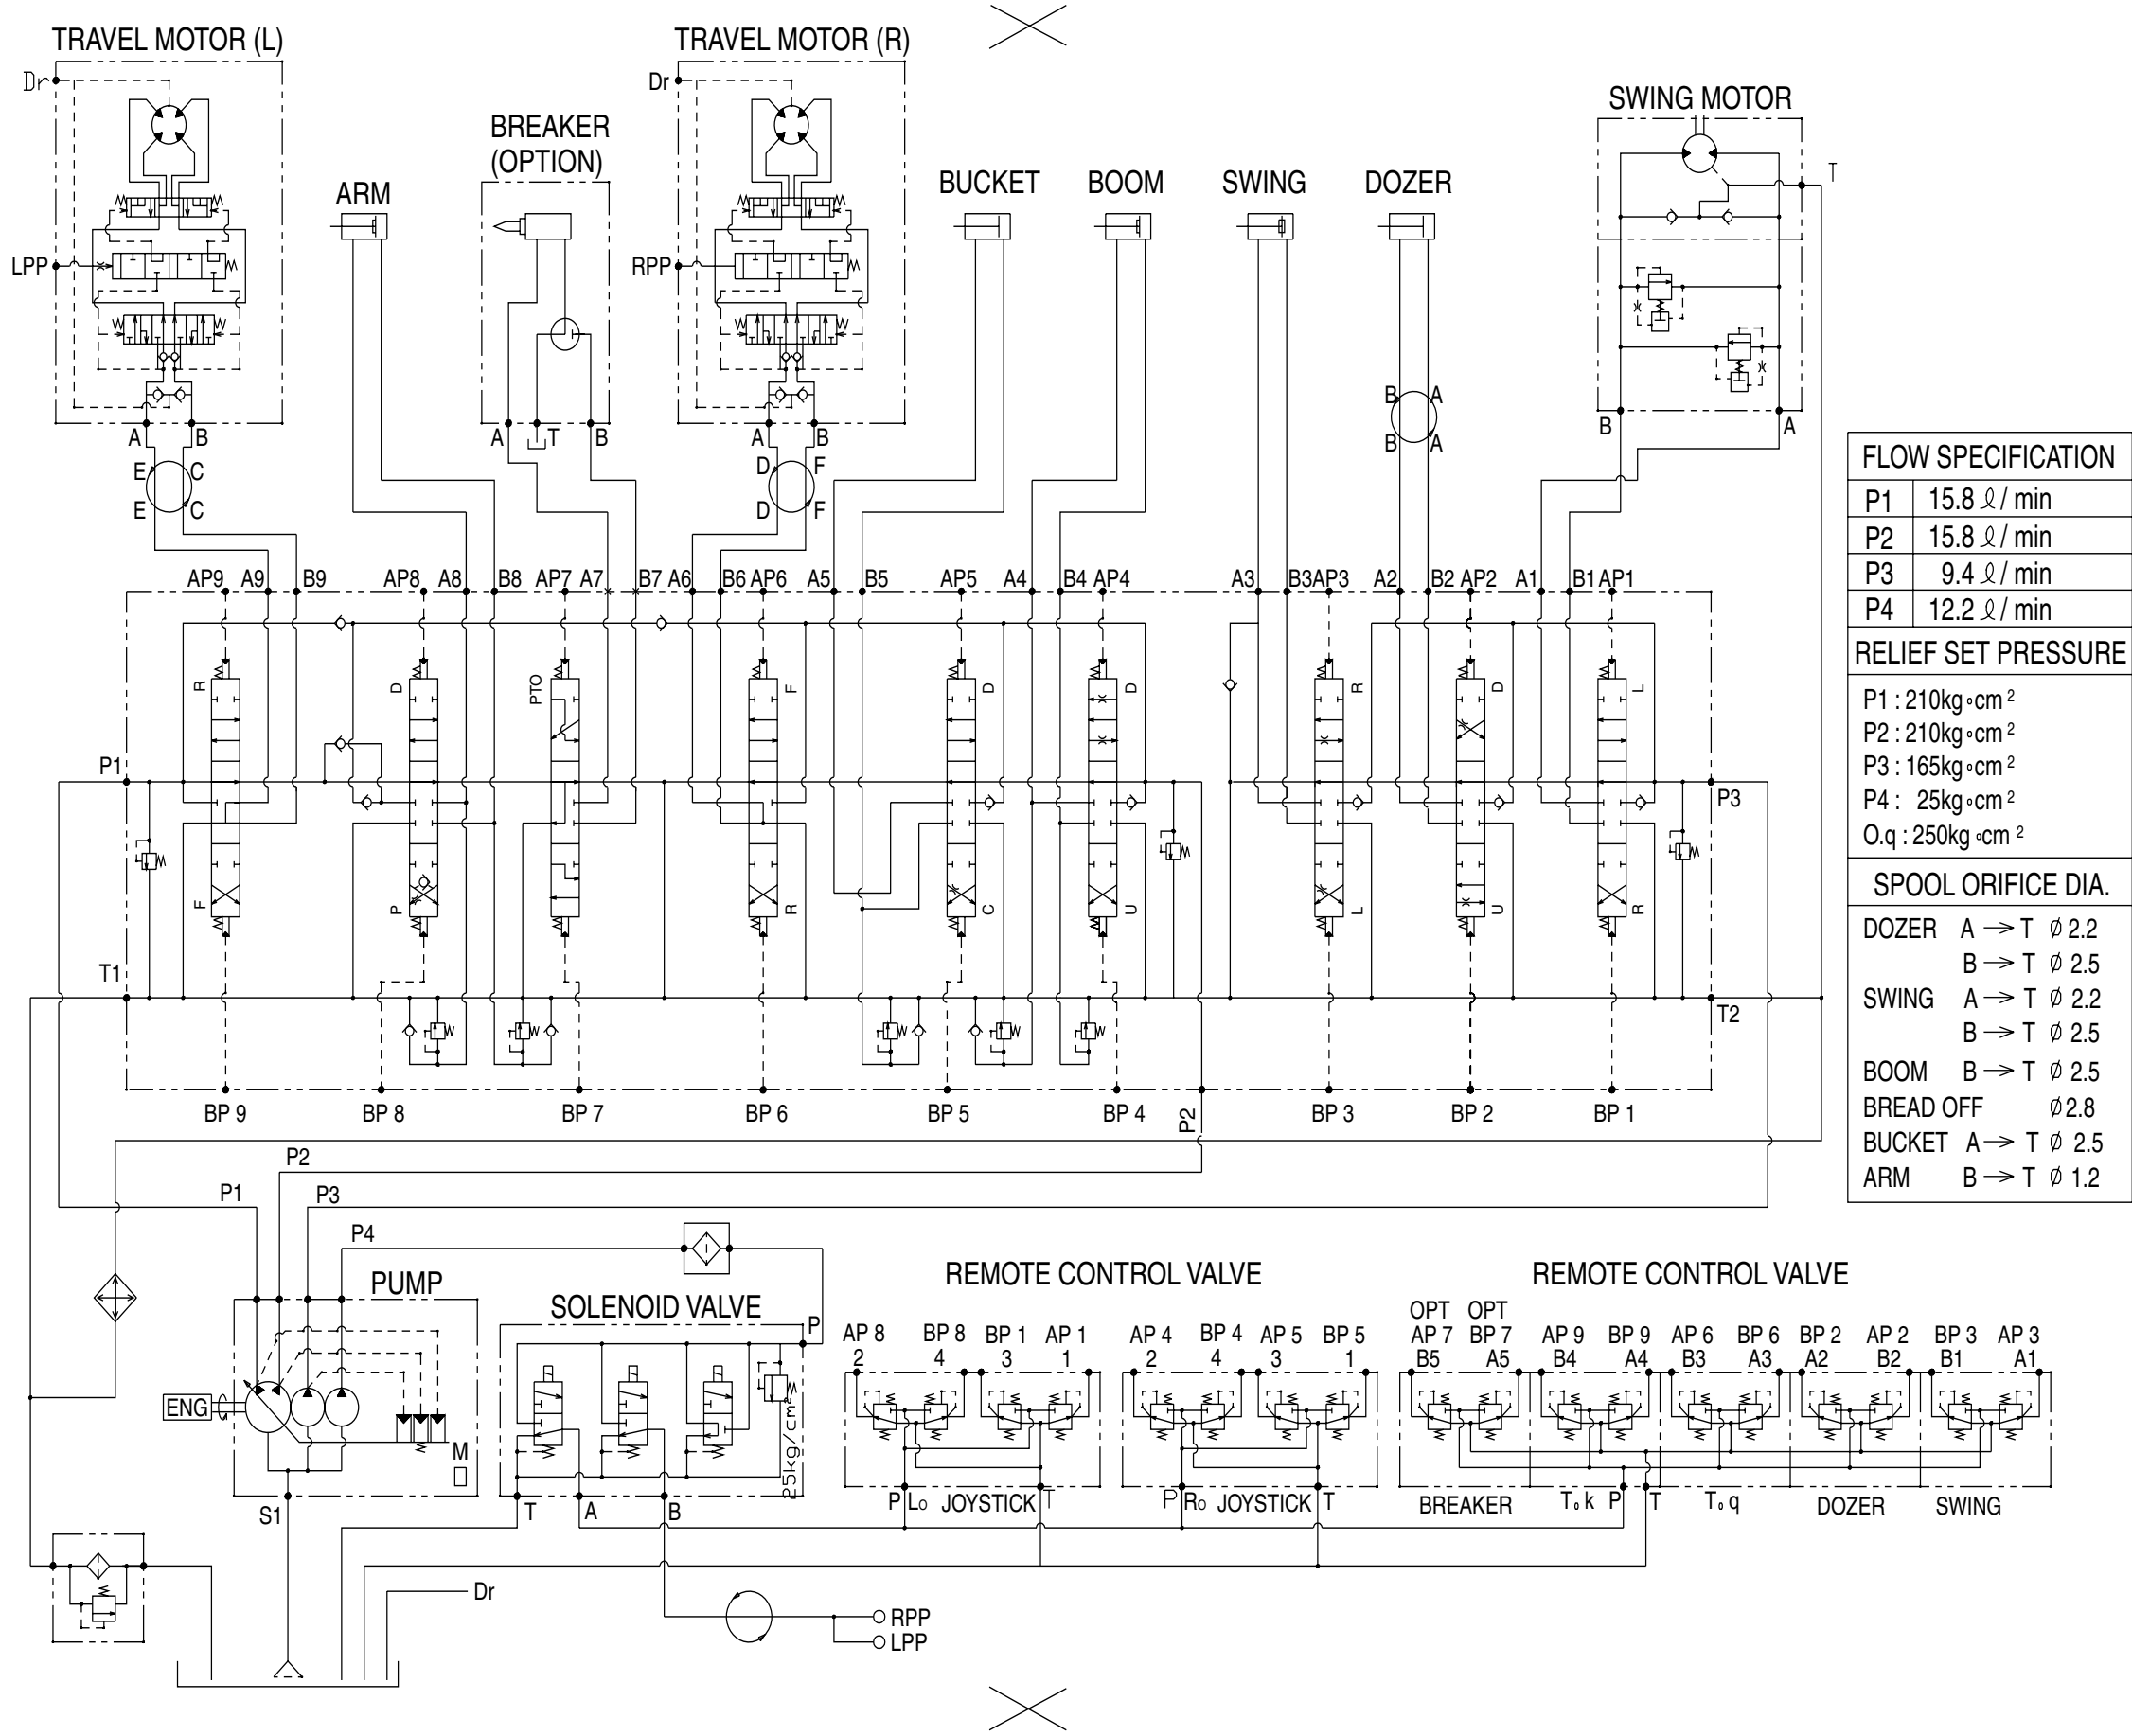

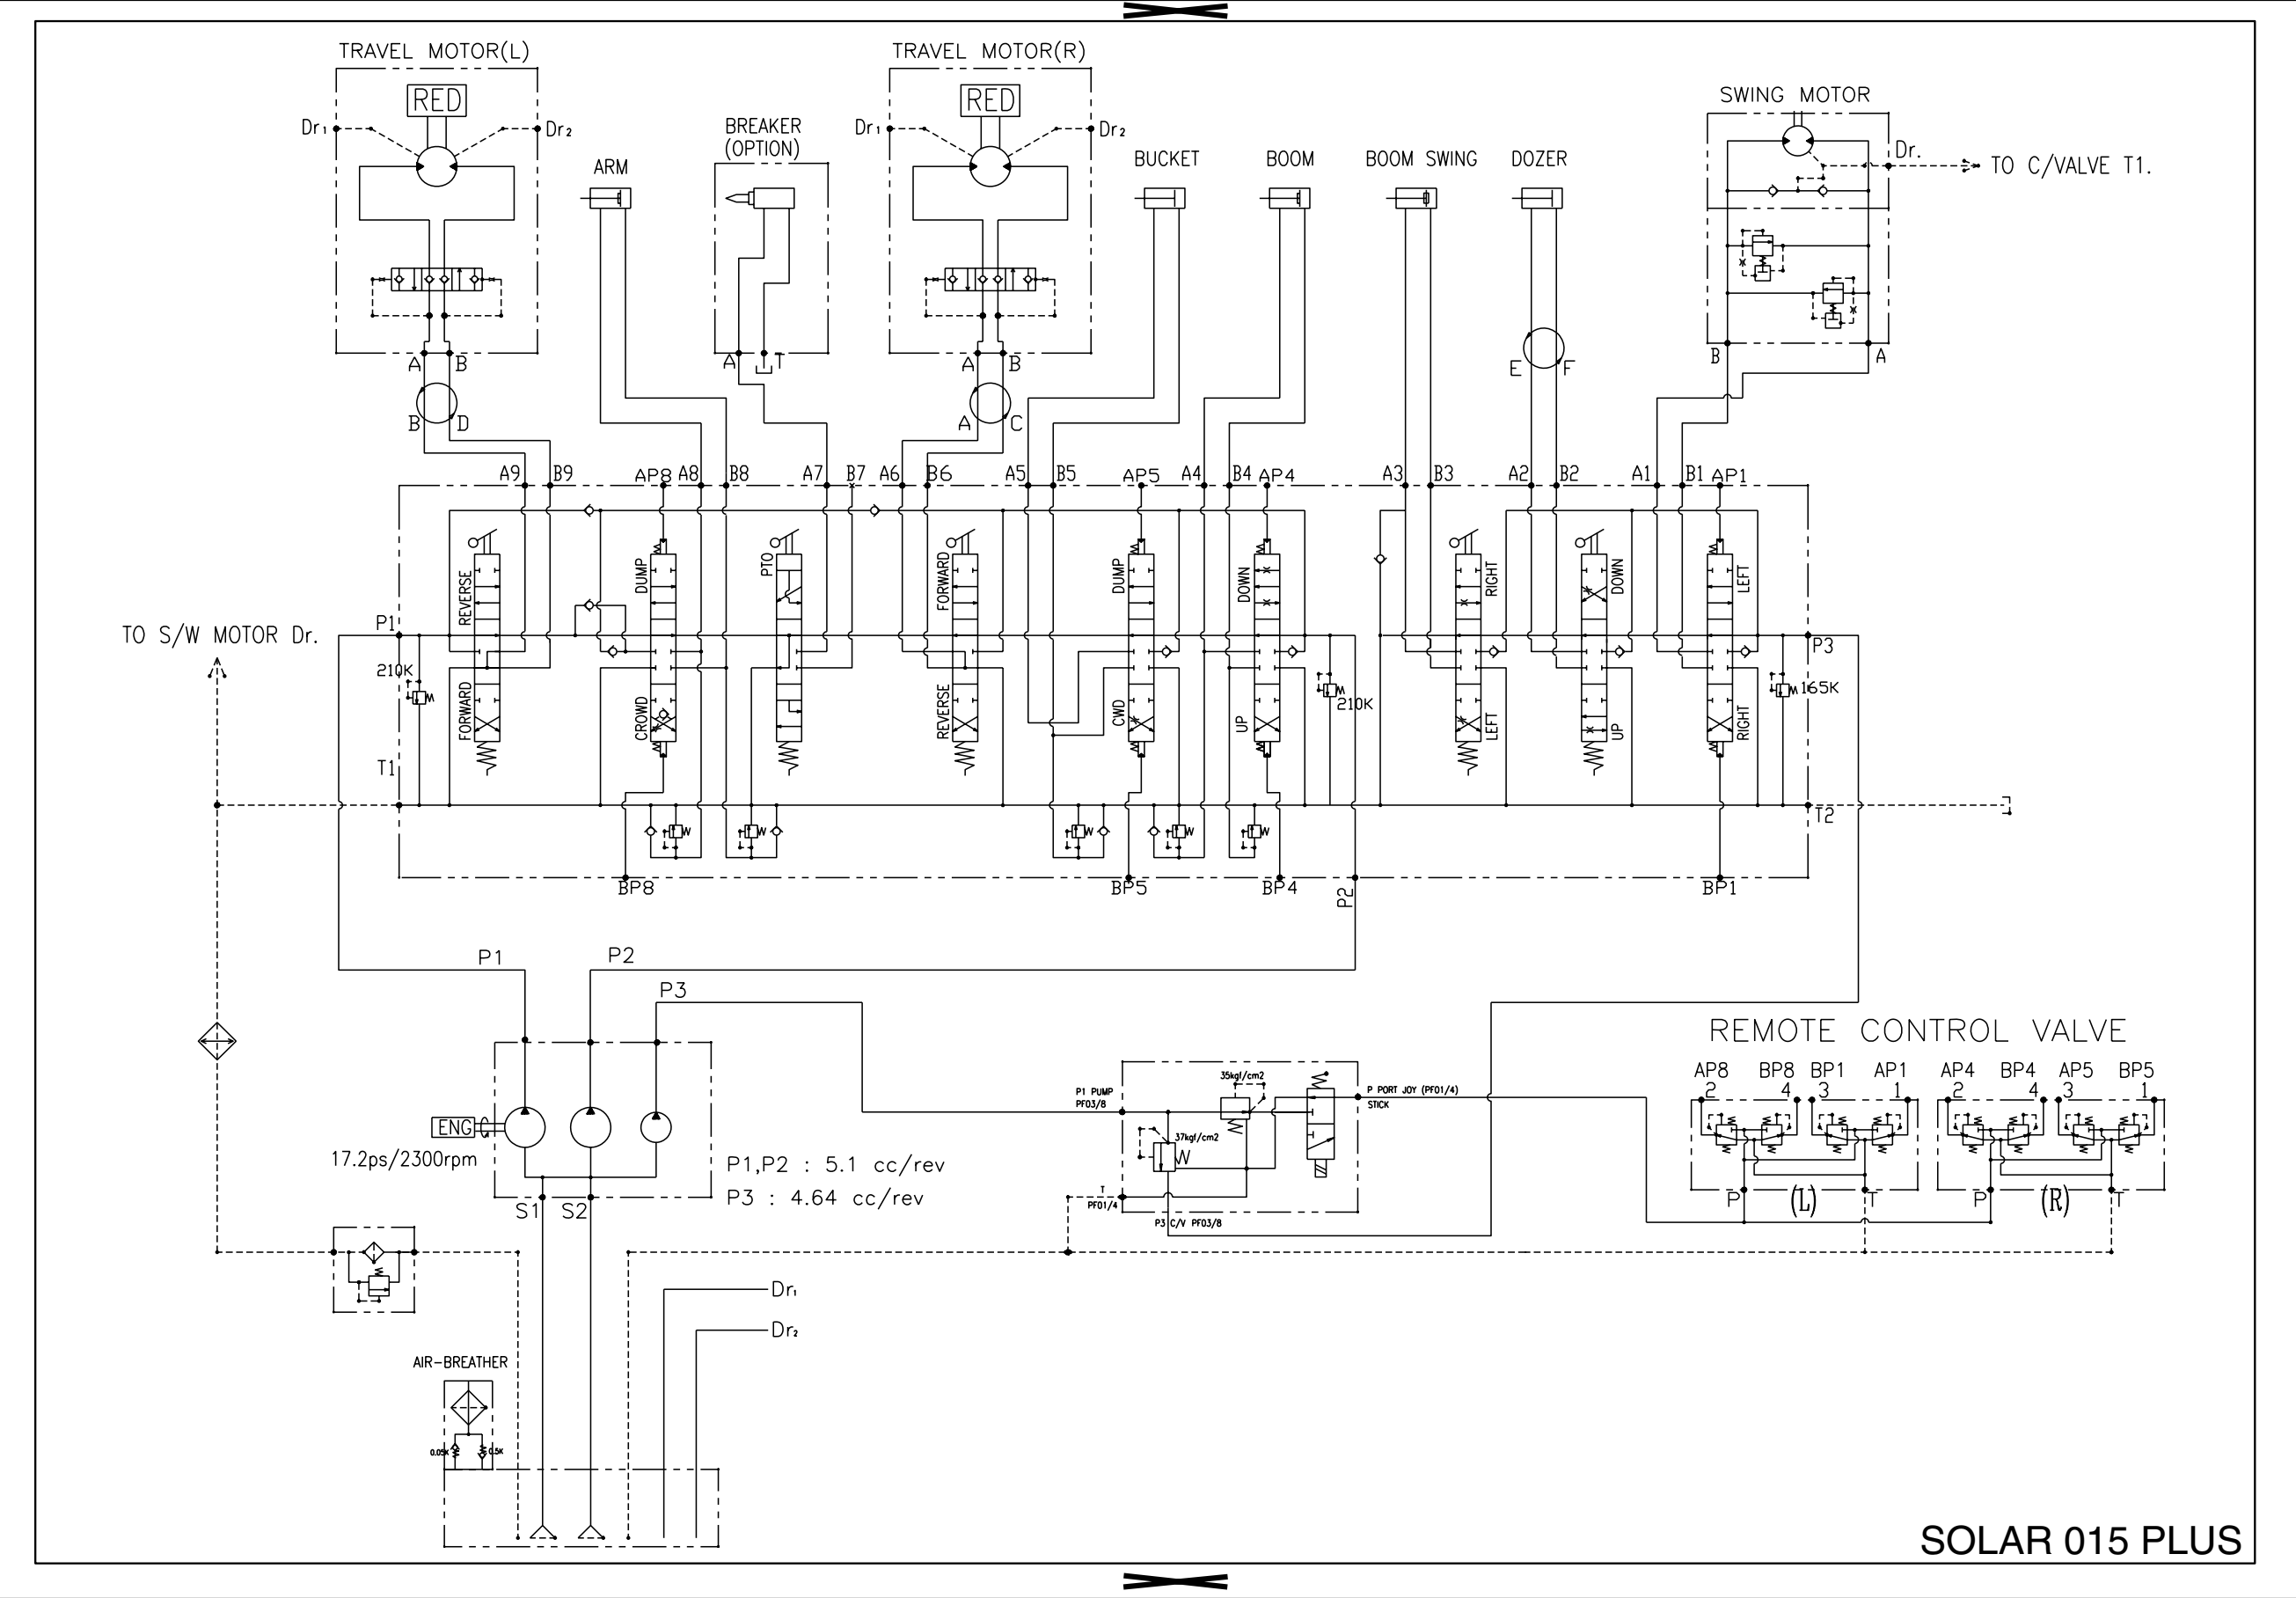


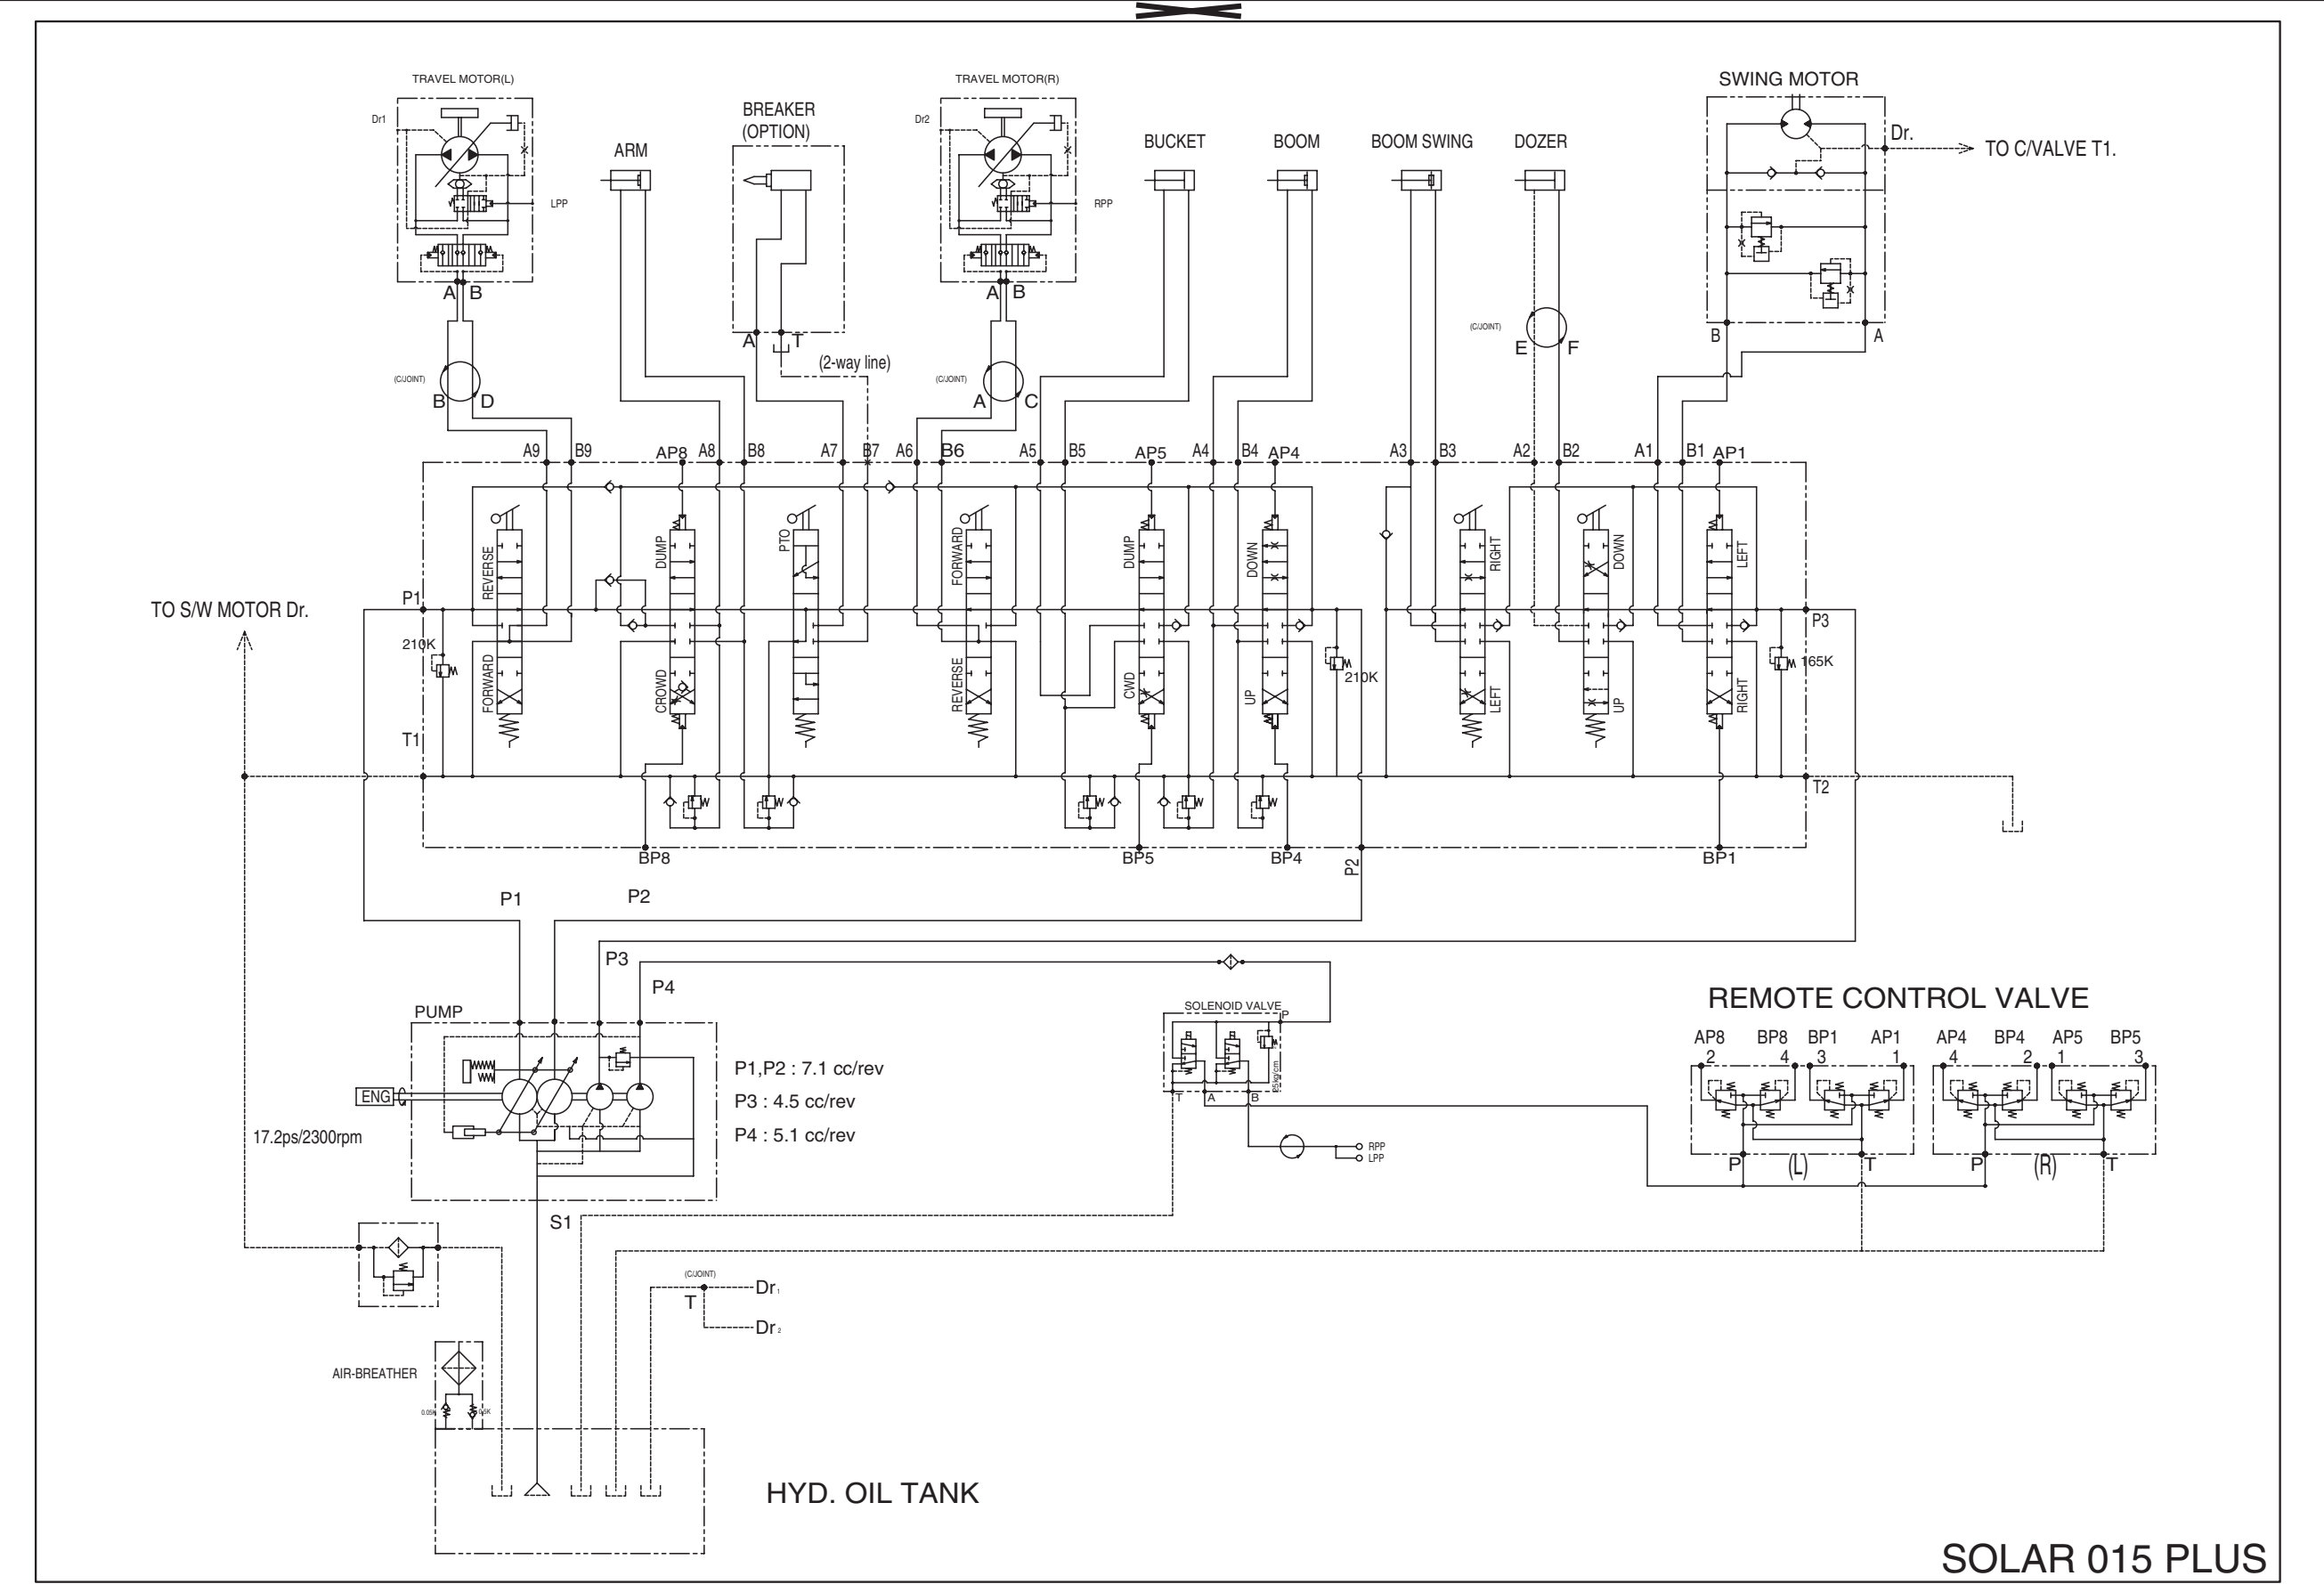

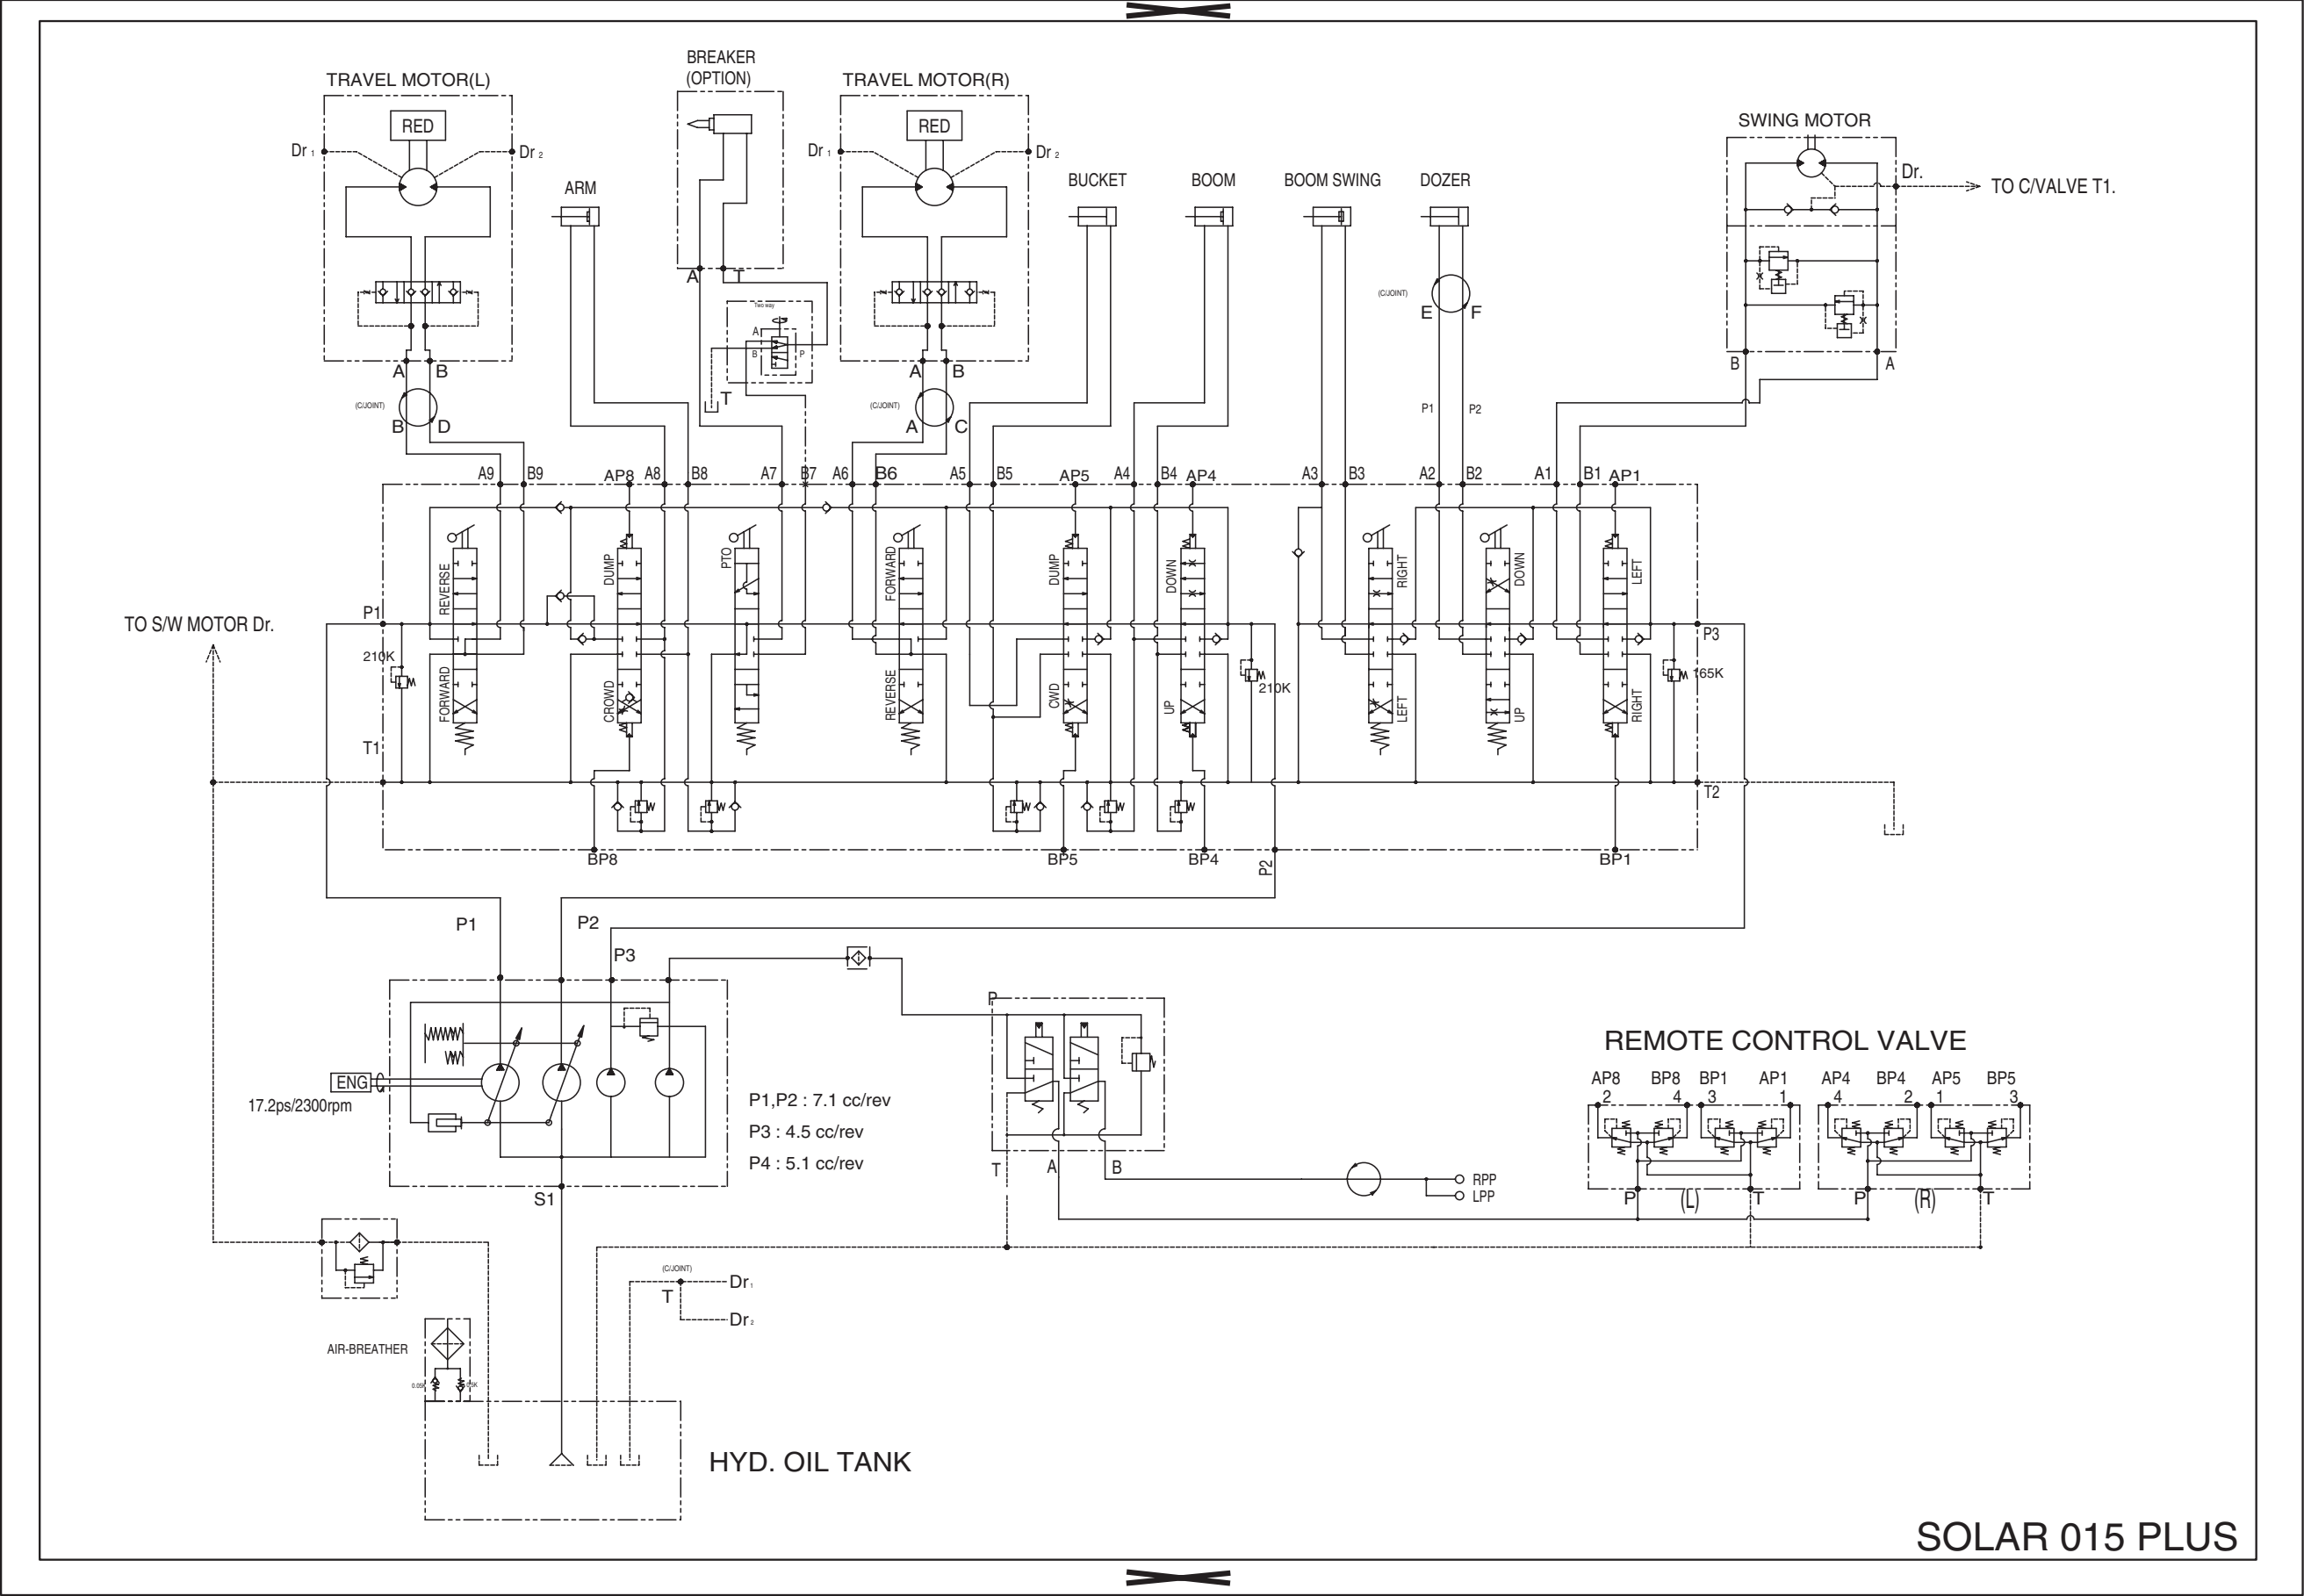

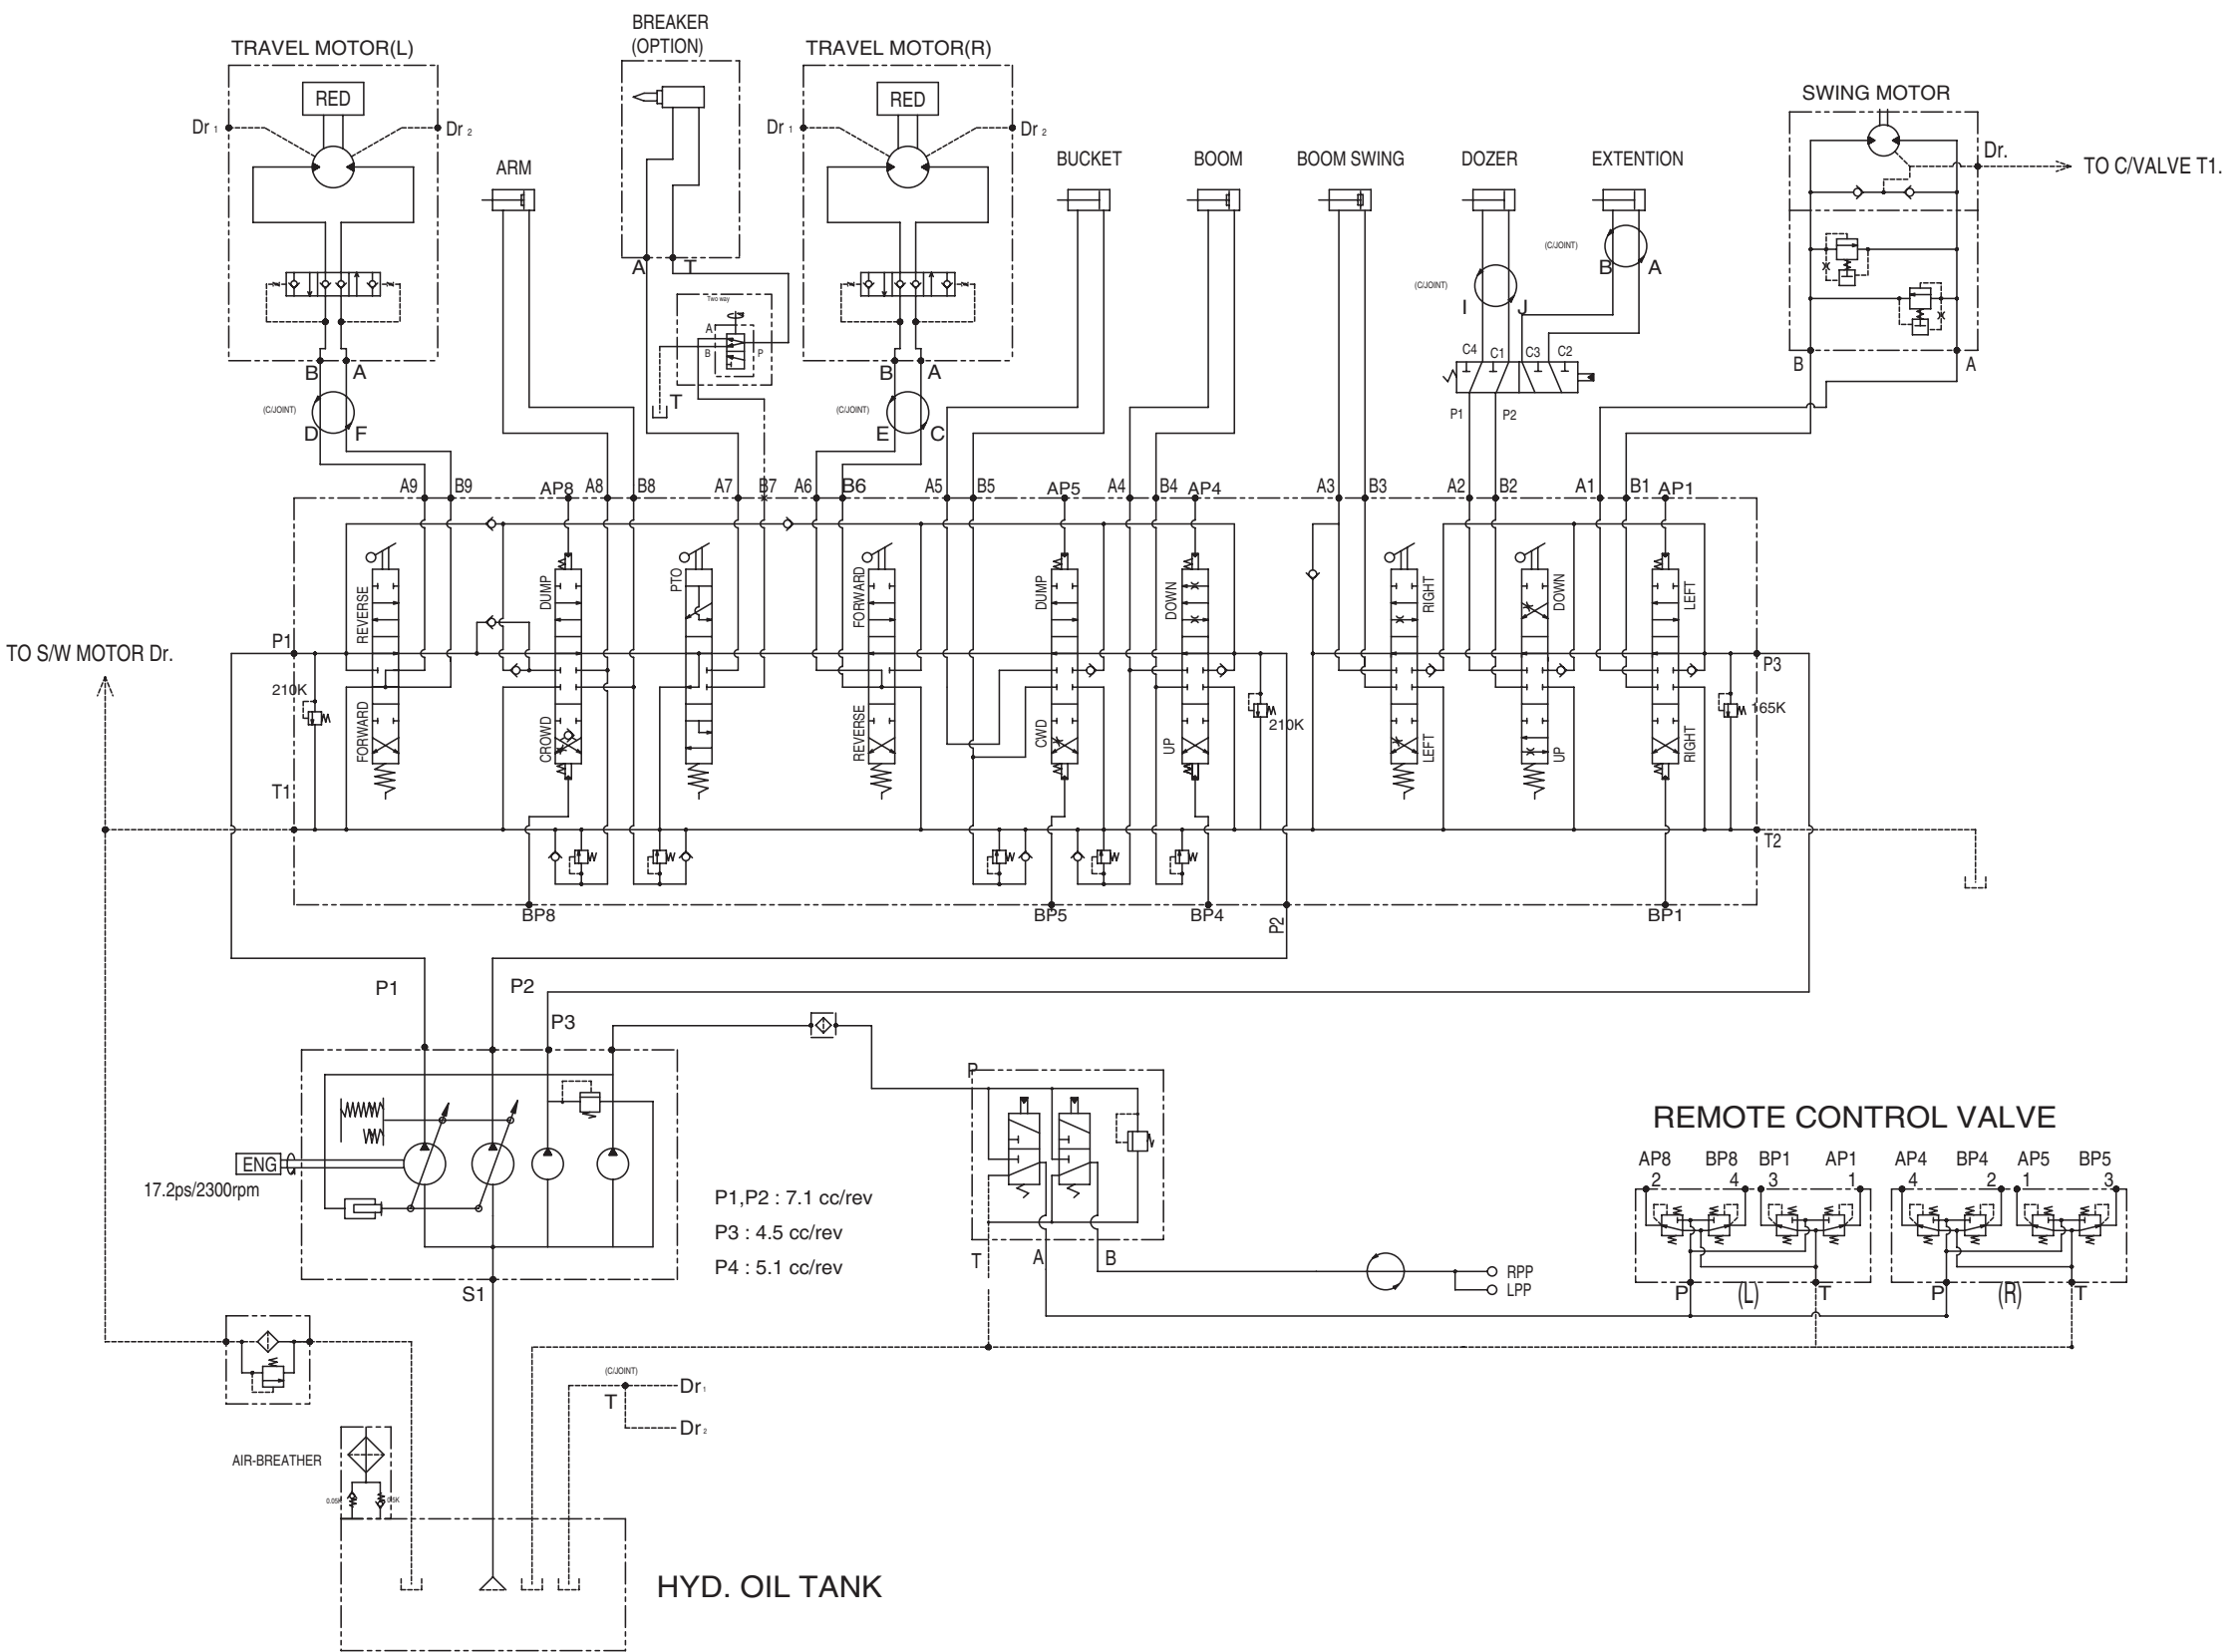


SOLAR 018-VT

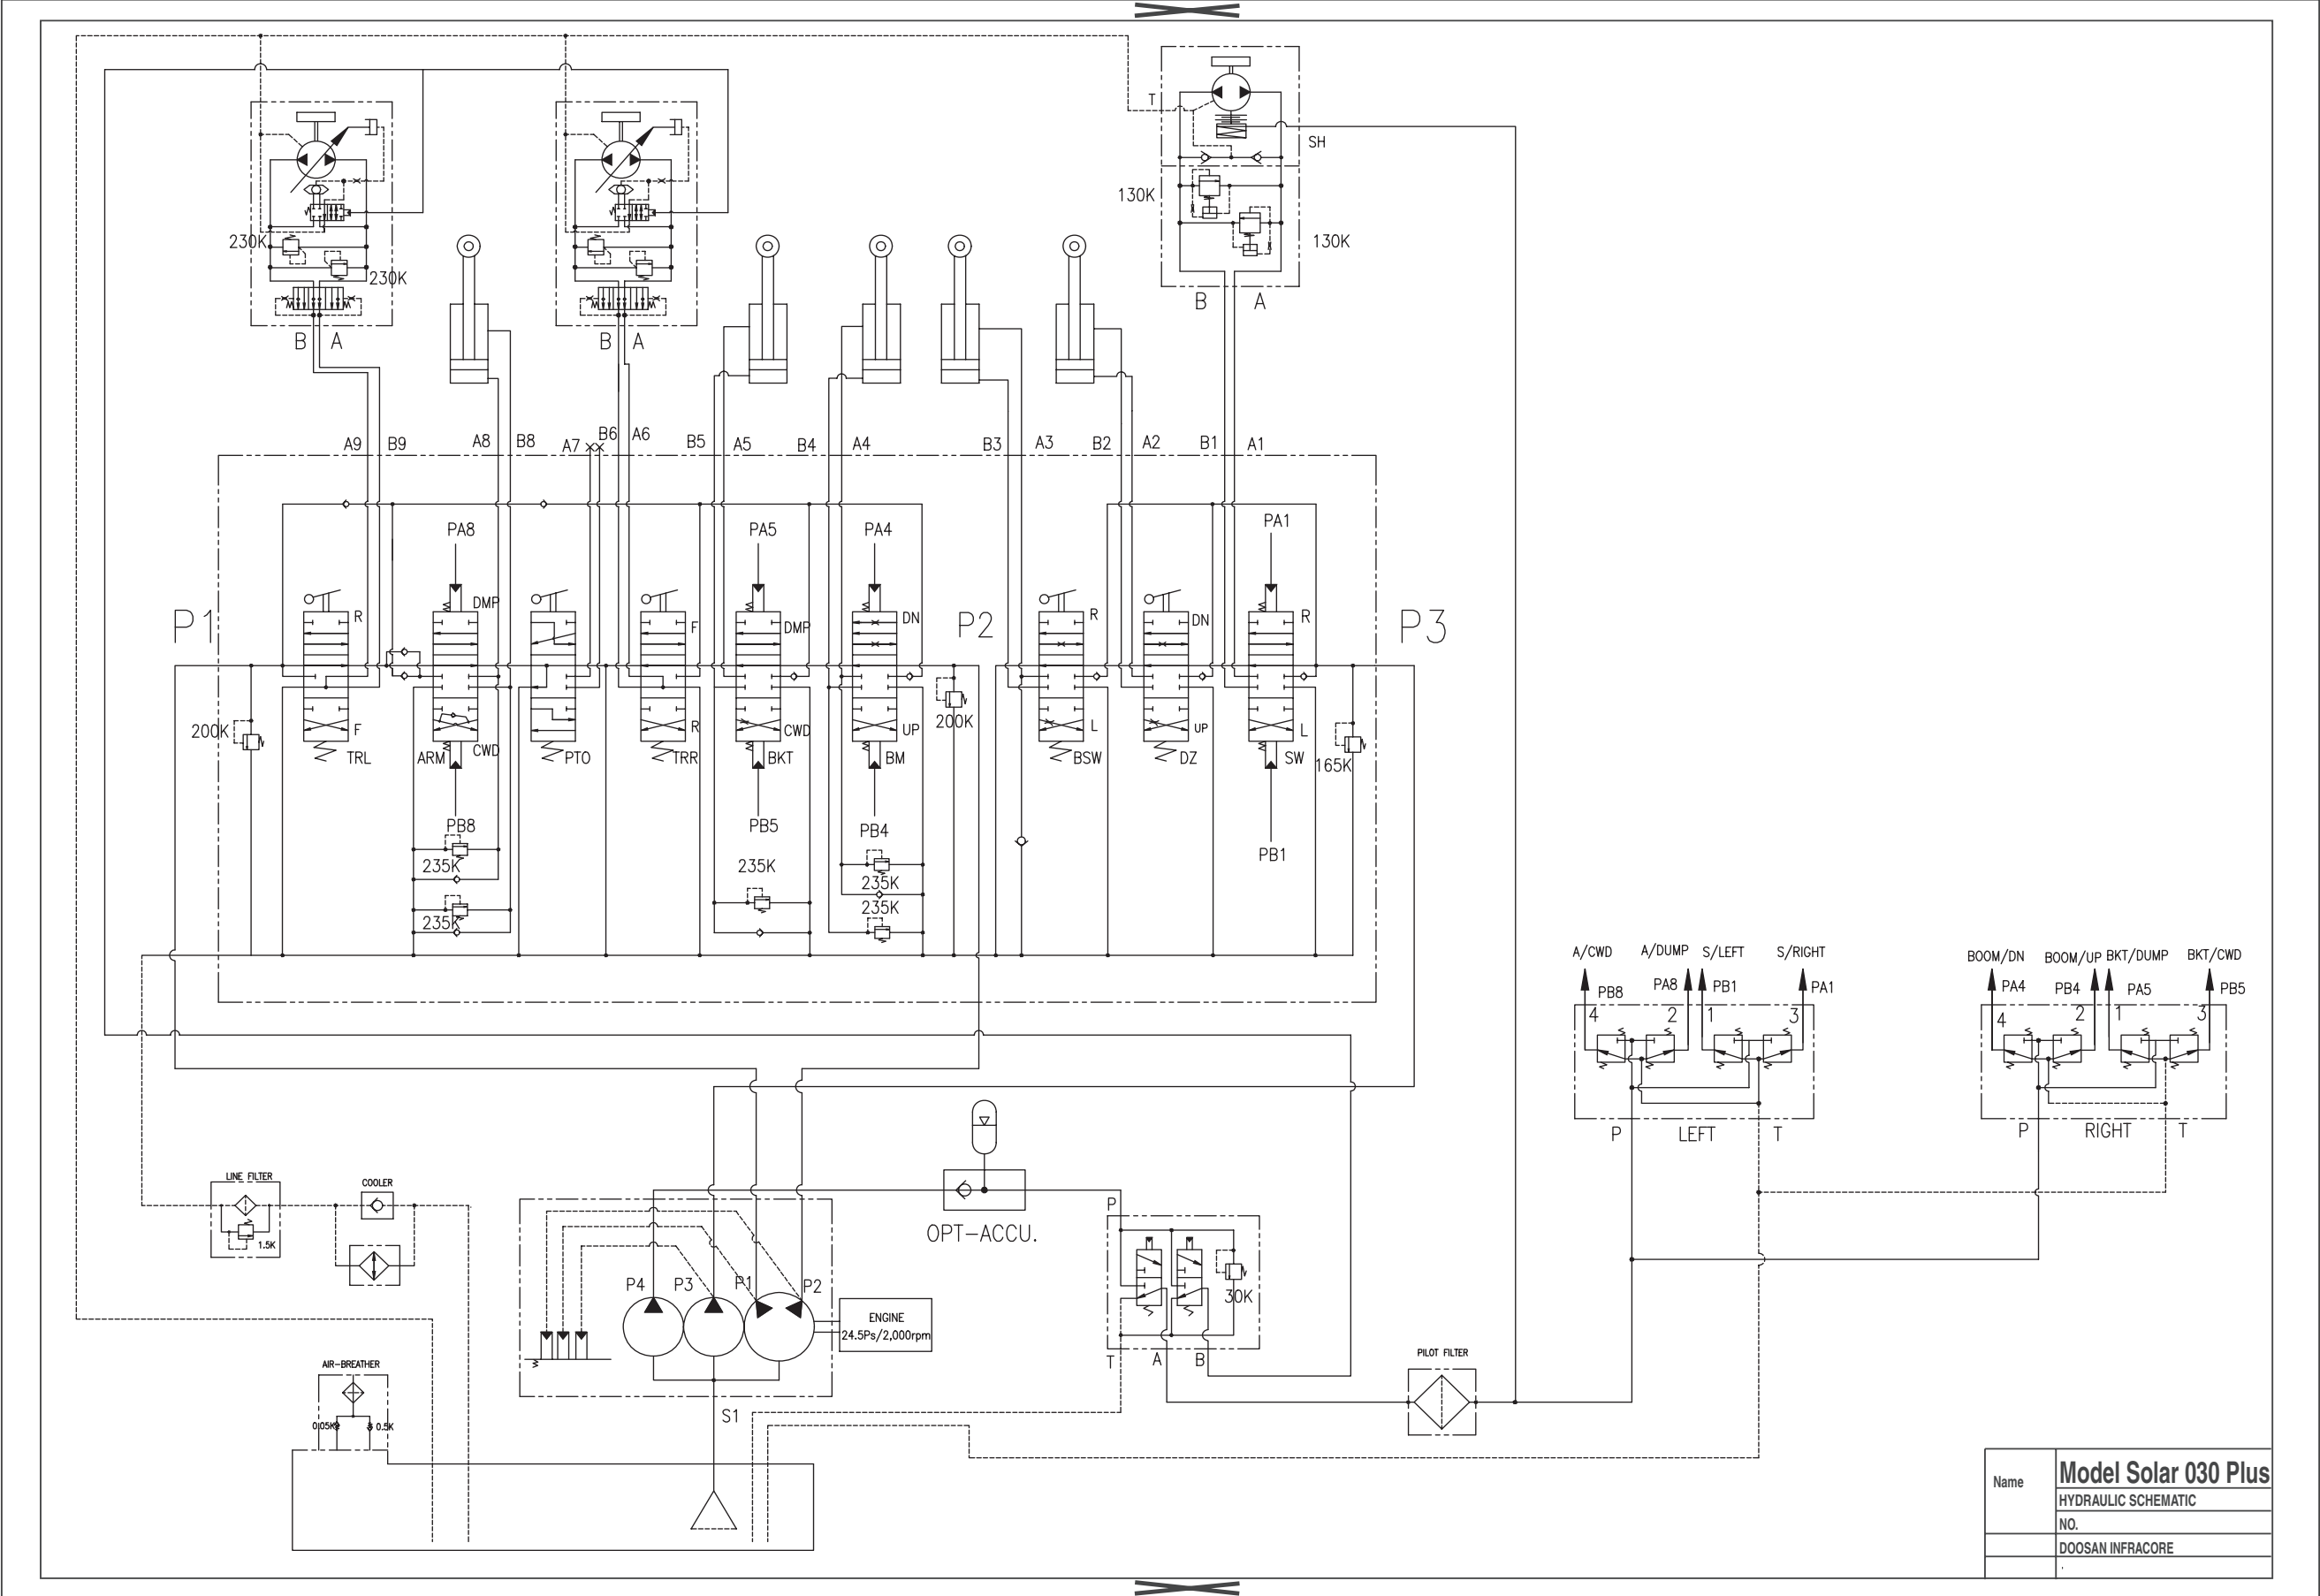

Name	Model Solar 030 Plus
	HYDRAULIC SCHEMATIC
	NO.
	DOOSAN INFRACORE


HAAE1800

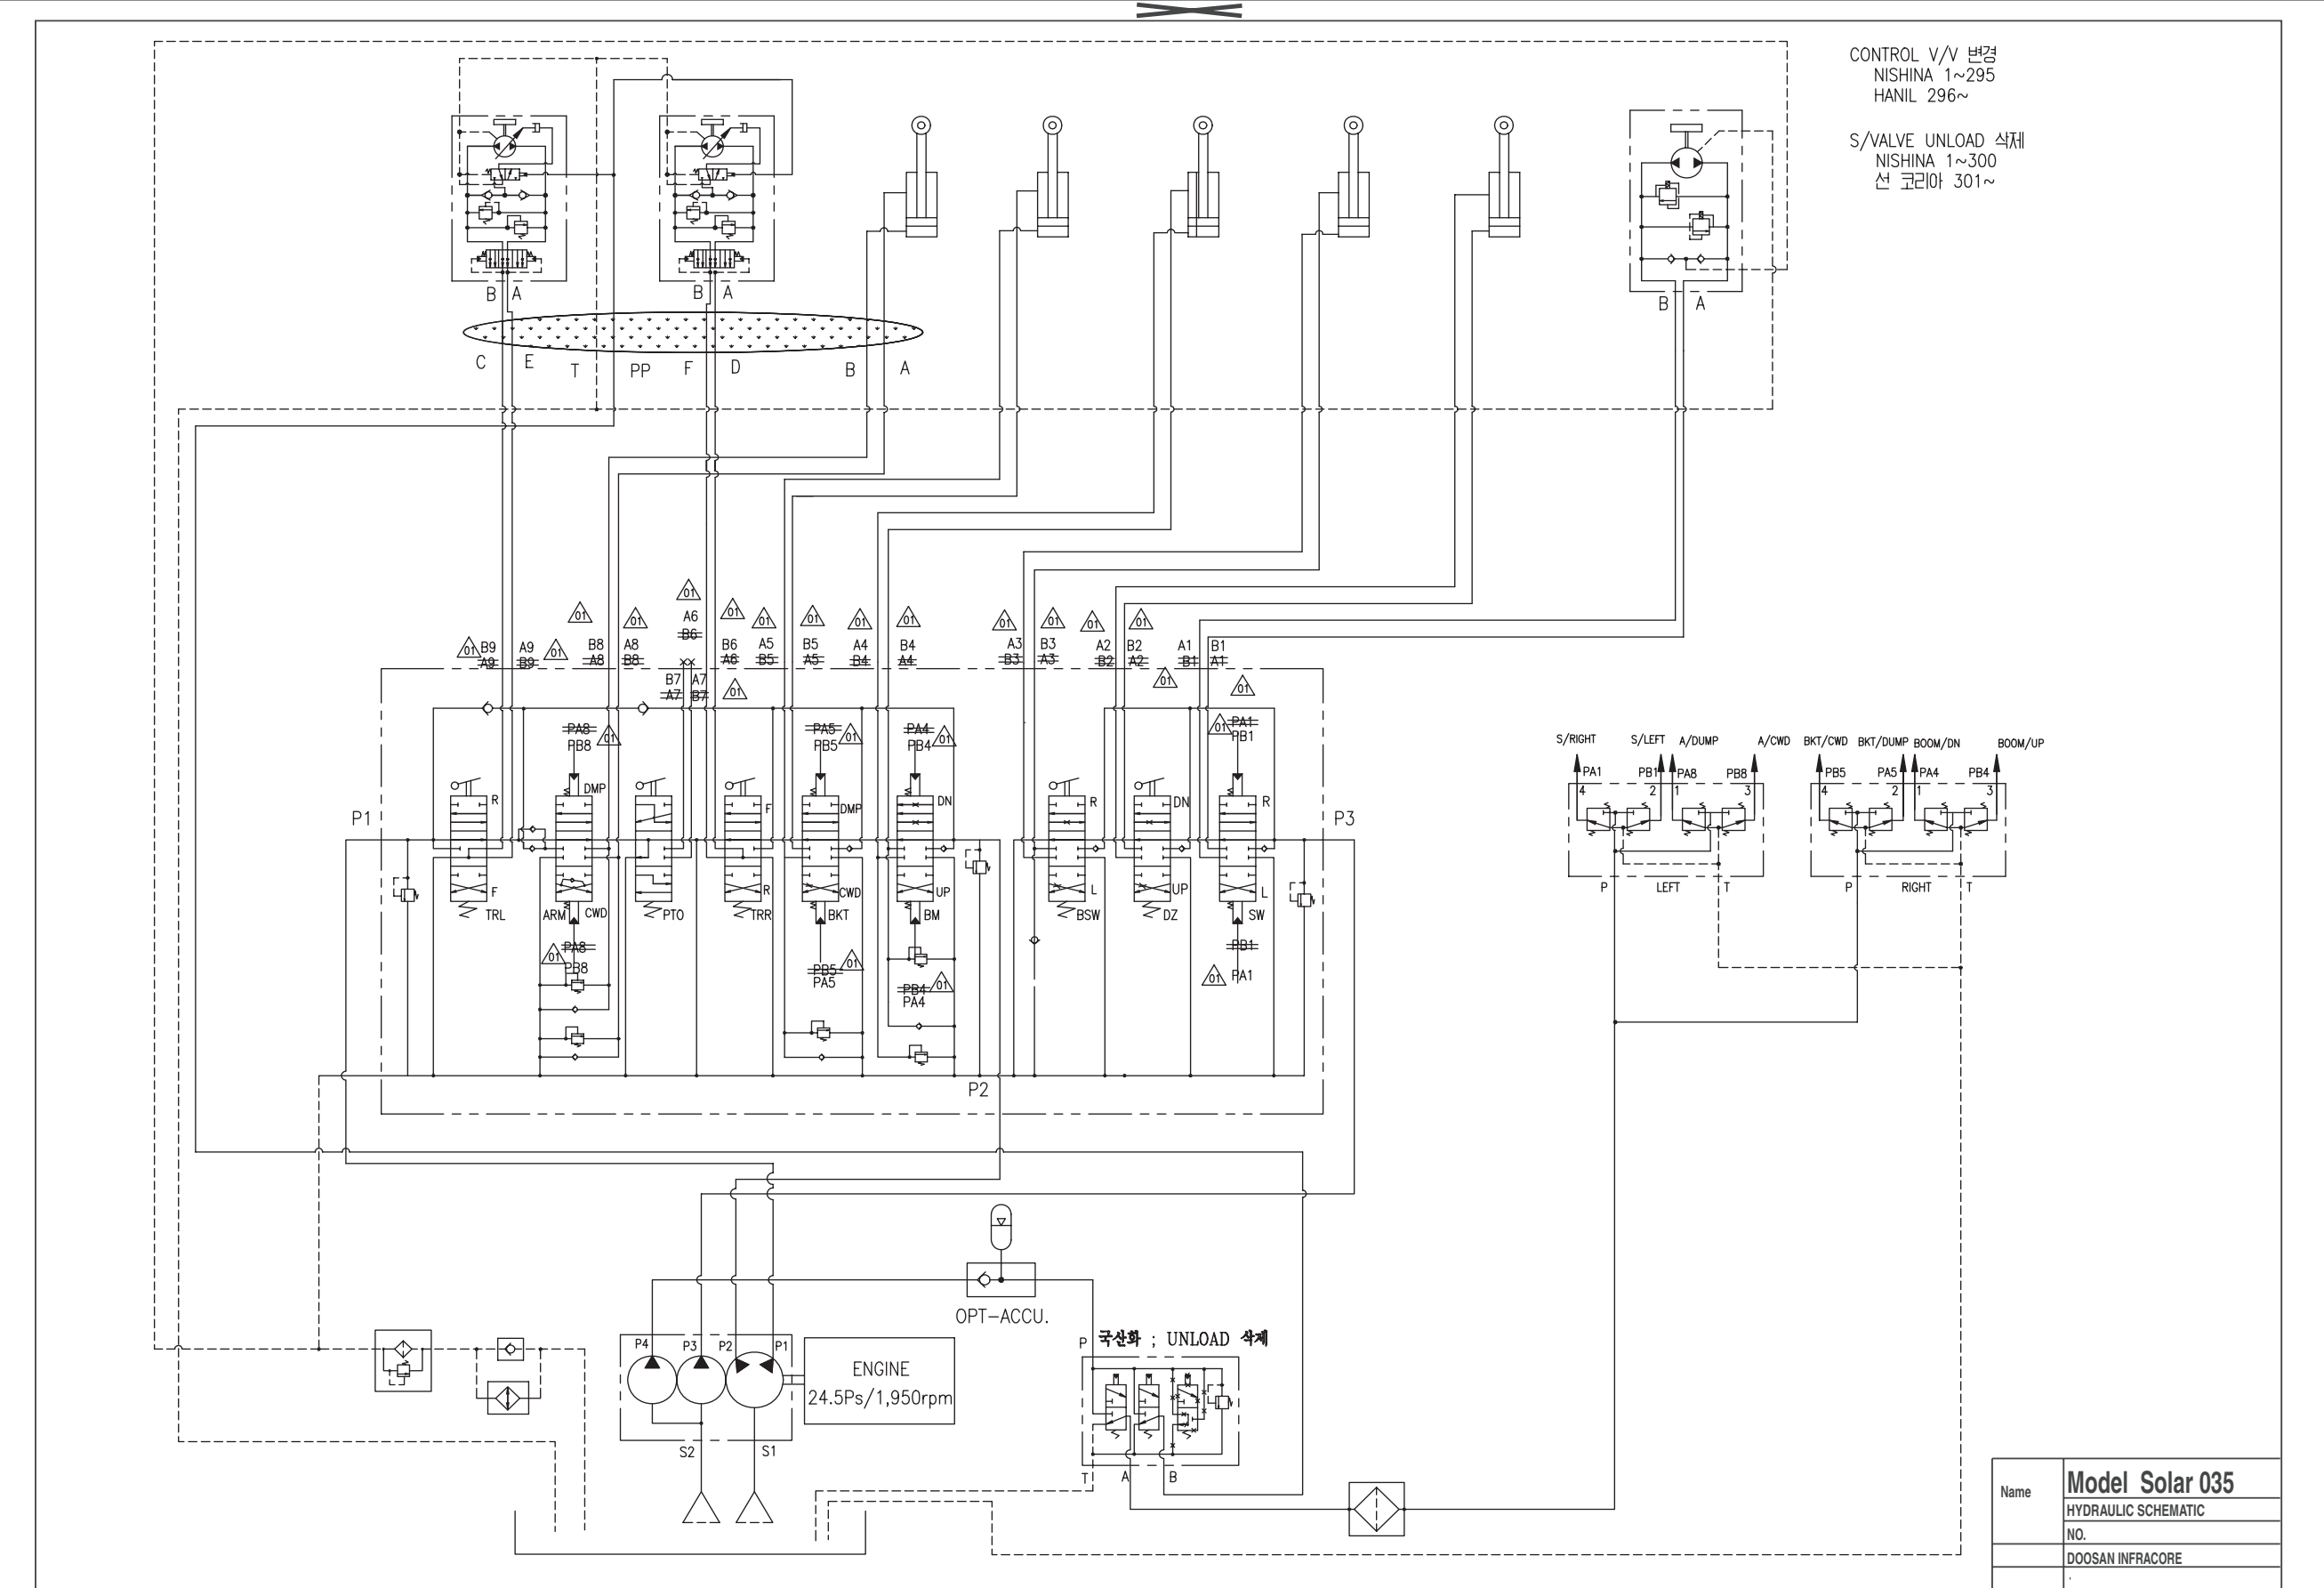


CONTROL V/V 변경
NISHINA 1~295
HANIL 296~

S/VALVE UNLOAD 삭제
NISHINA 1~300
선 코리아 301~


Name	Model Solar 035
	HYDRAULIC SCHEMATIC
NO.	
	DOOSAN INFRACORE

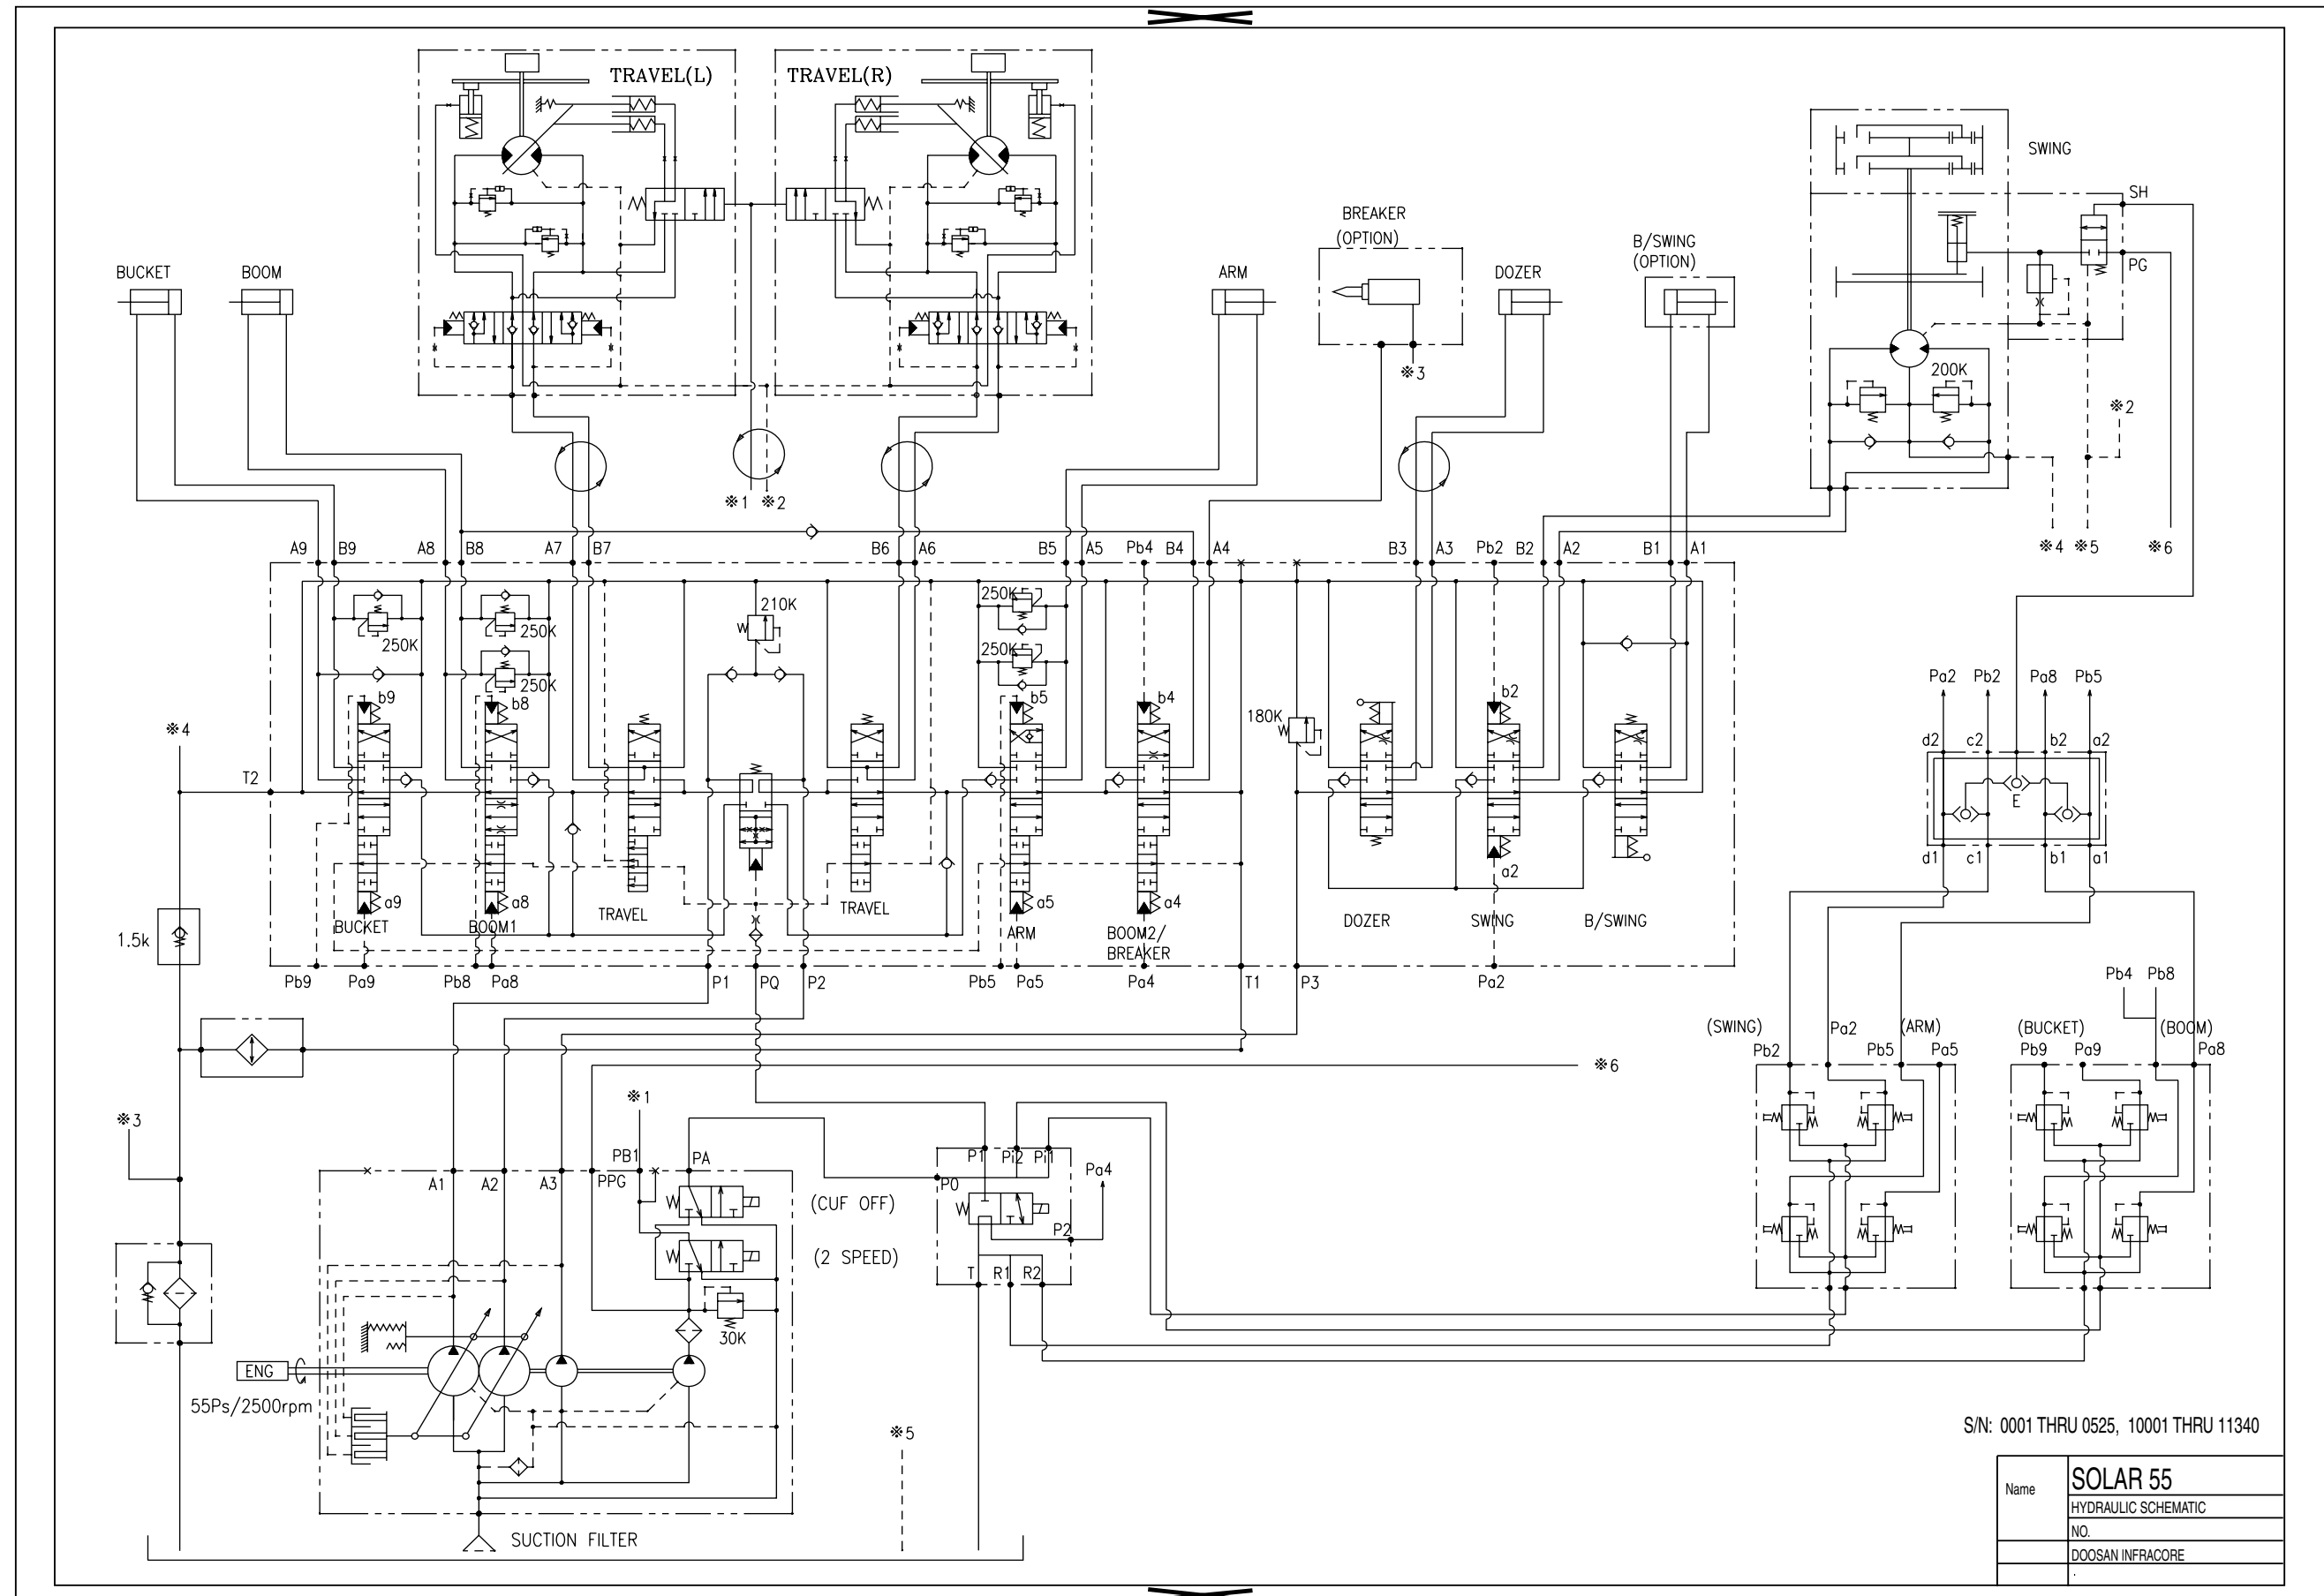

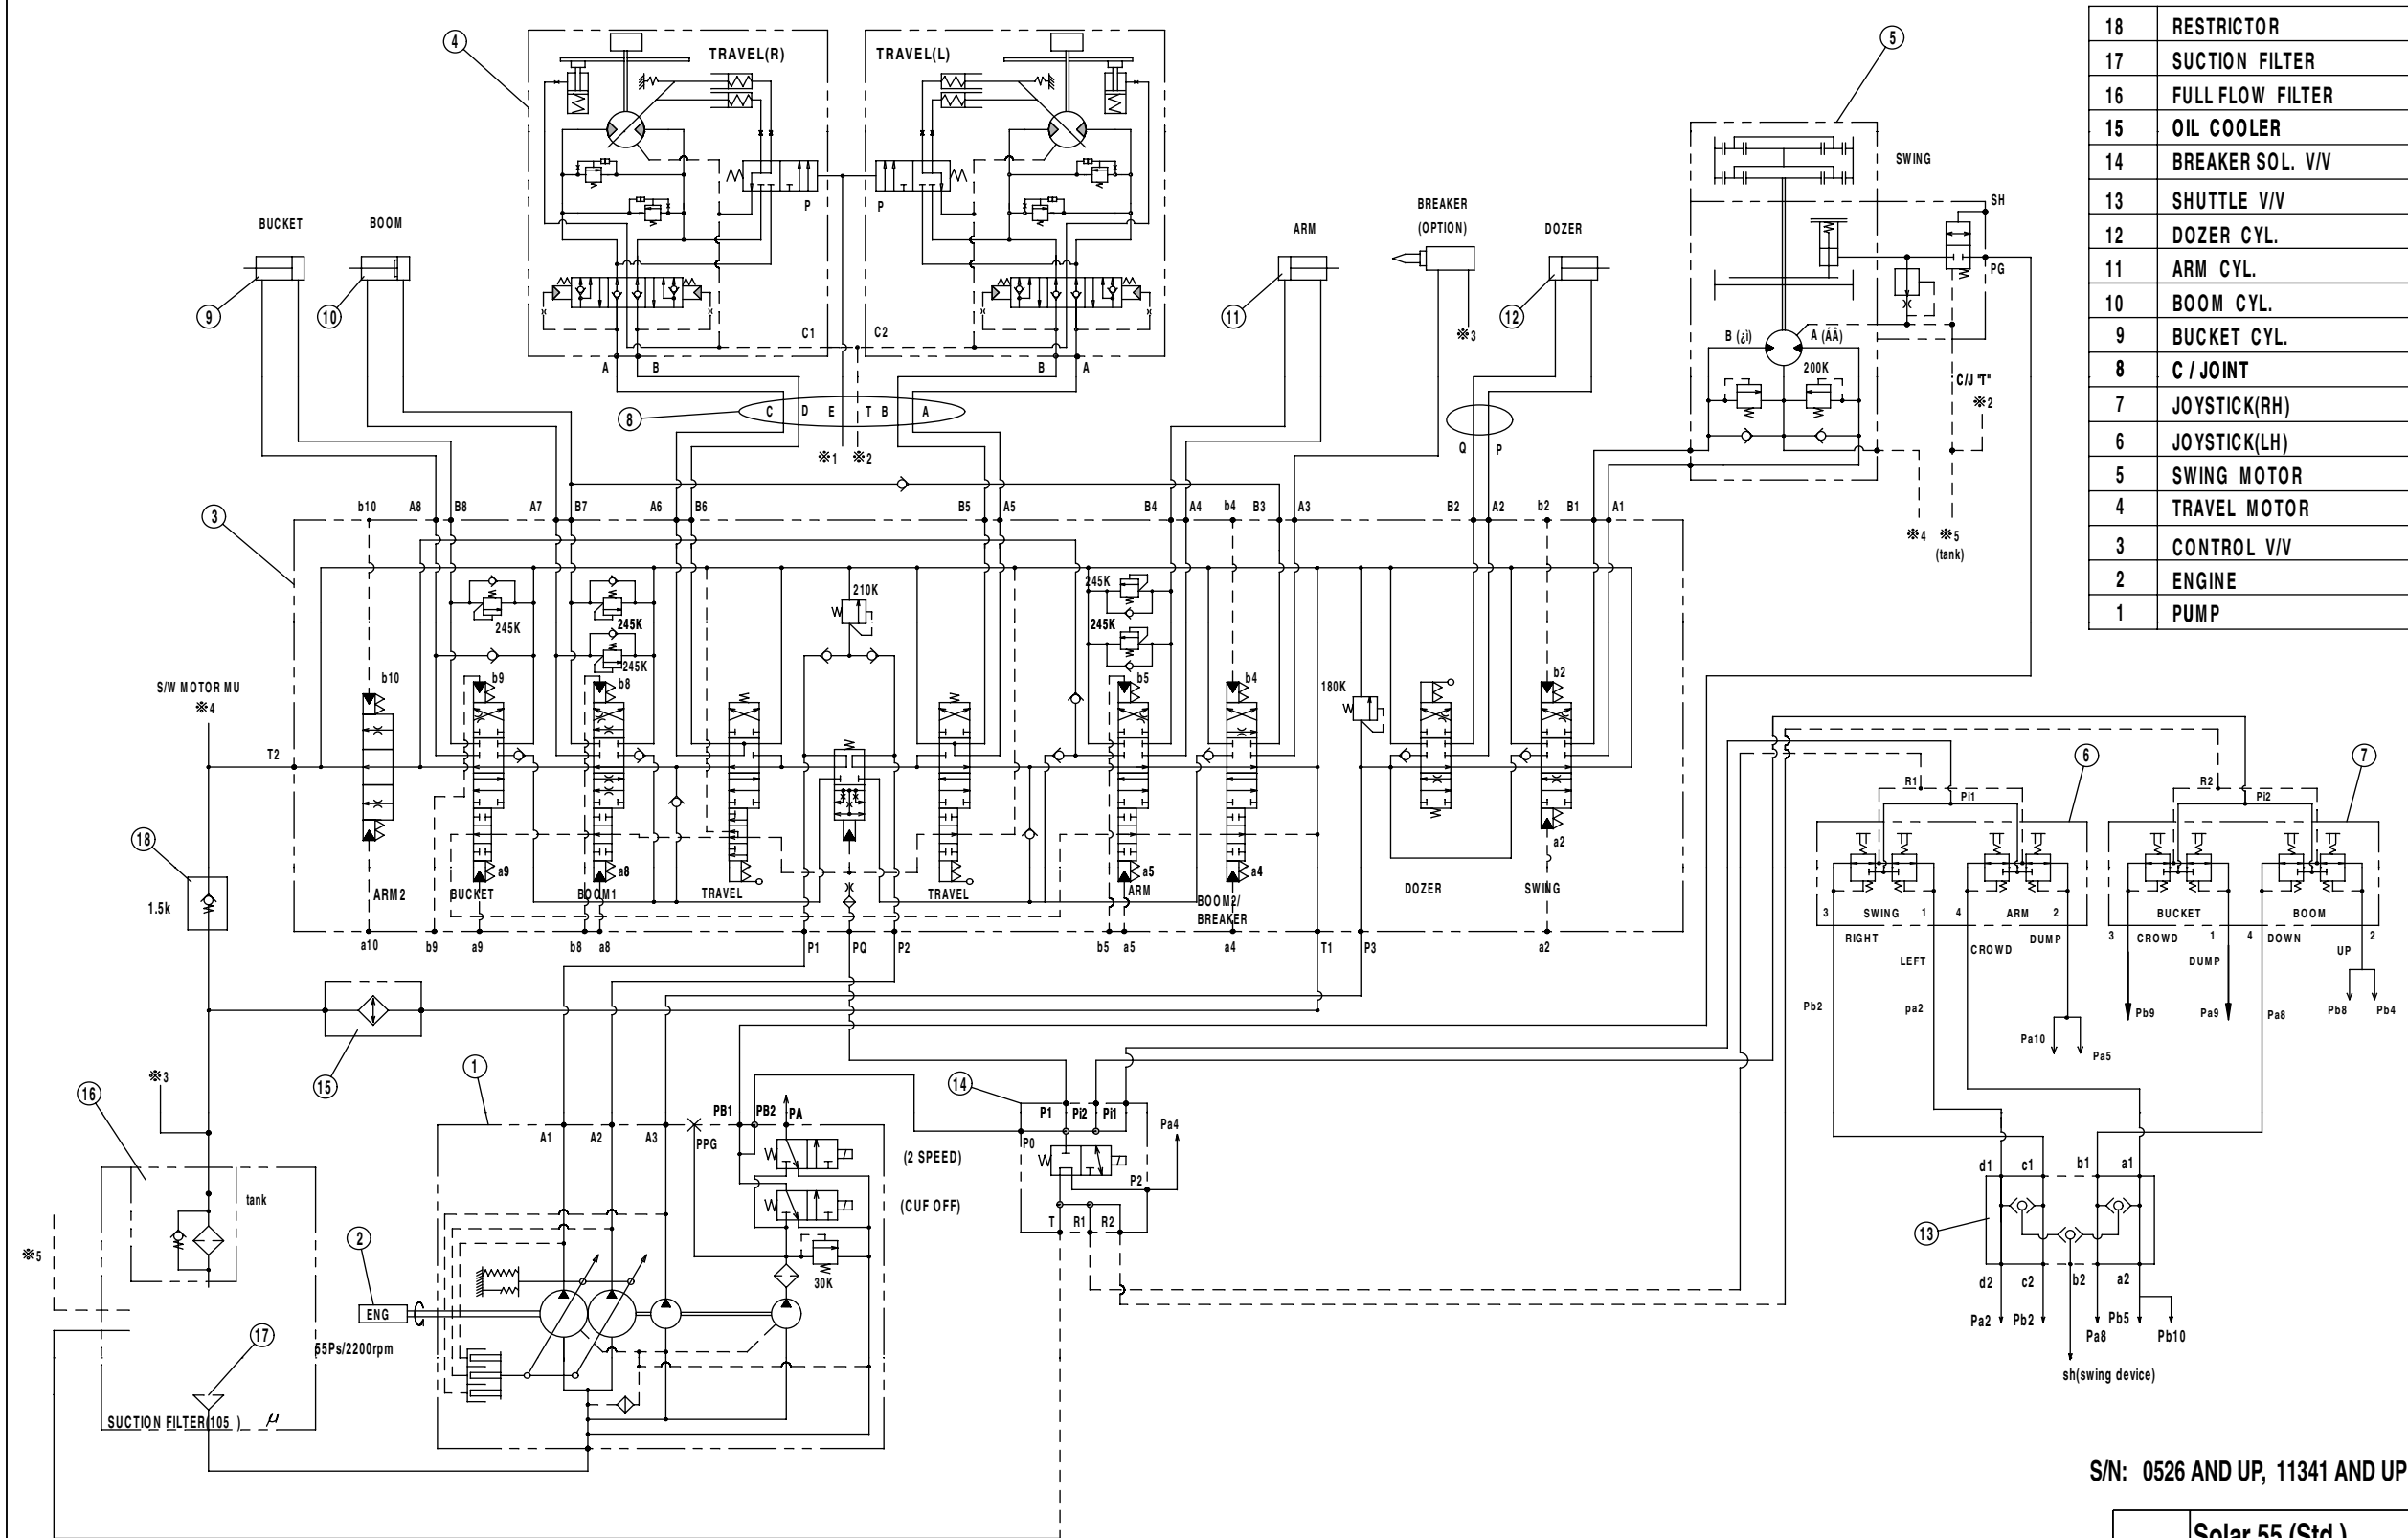


S/N: 0526 AND UP, 11341 AND UP


Name	Solar 55 (Std.)
	HYDRAULIC SCHEMATIC
	NO.
	DOOSAN INFRACORE

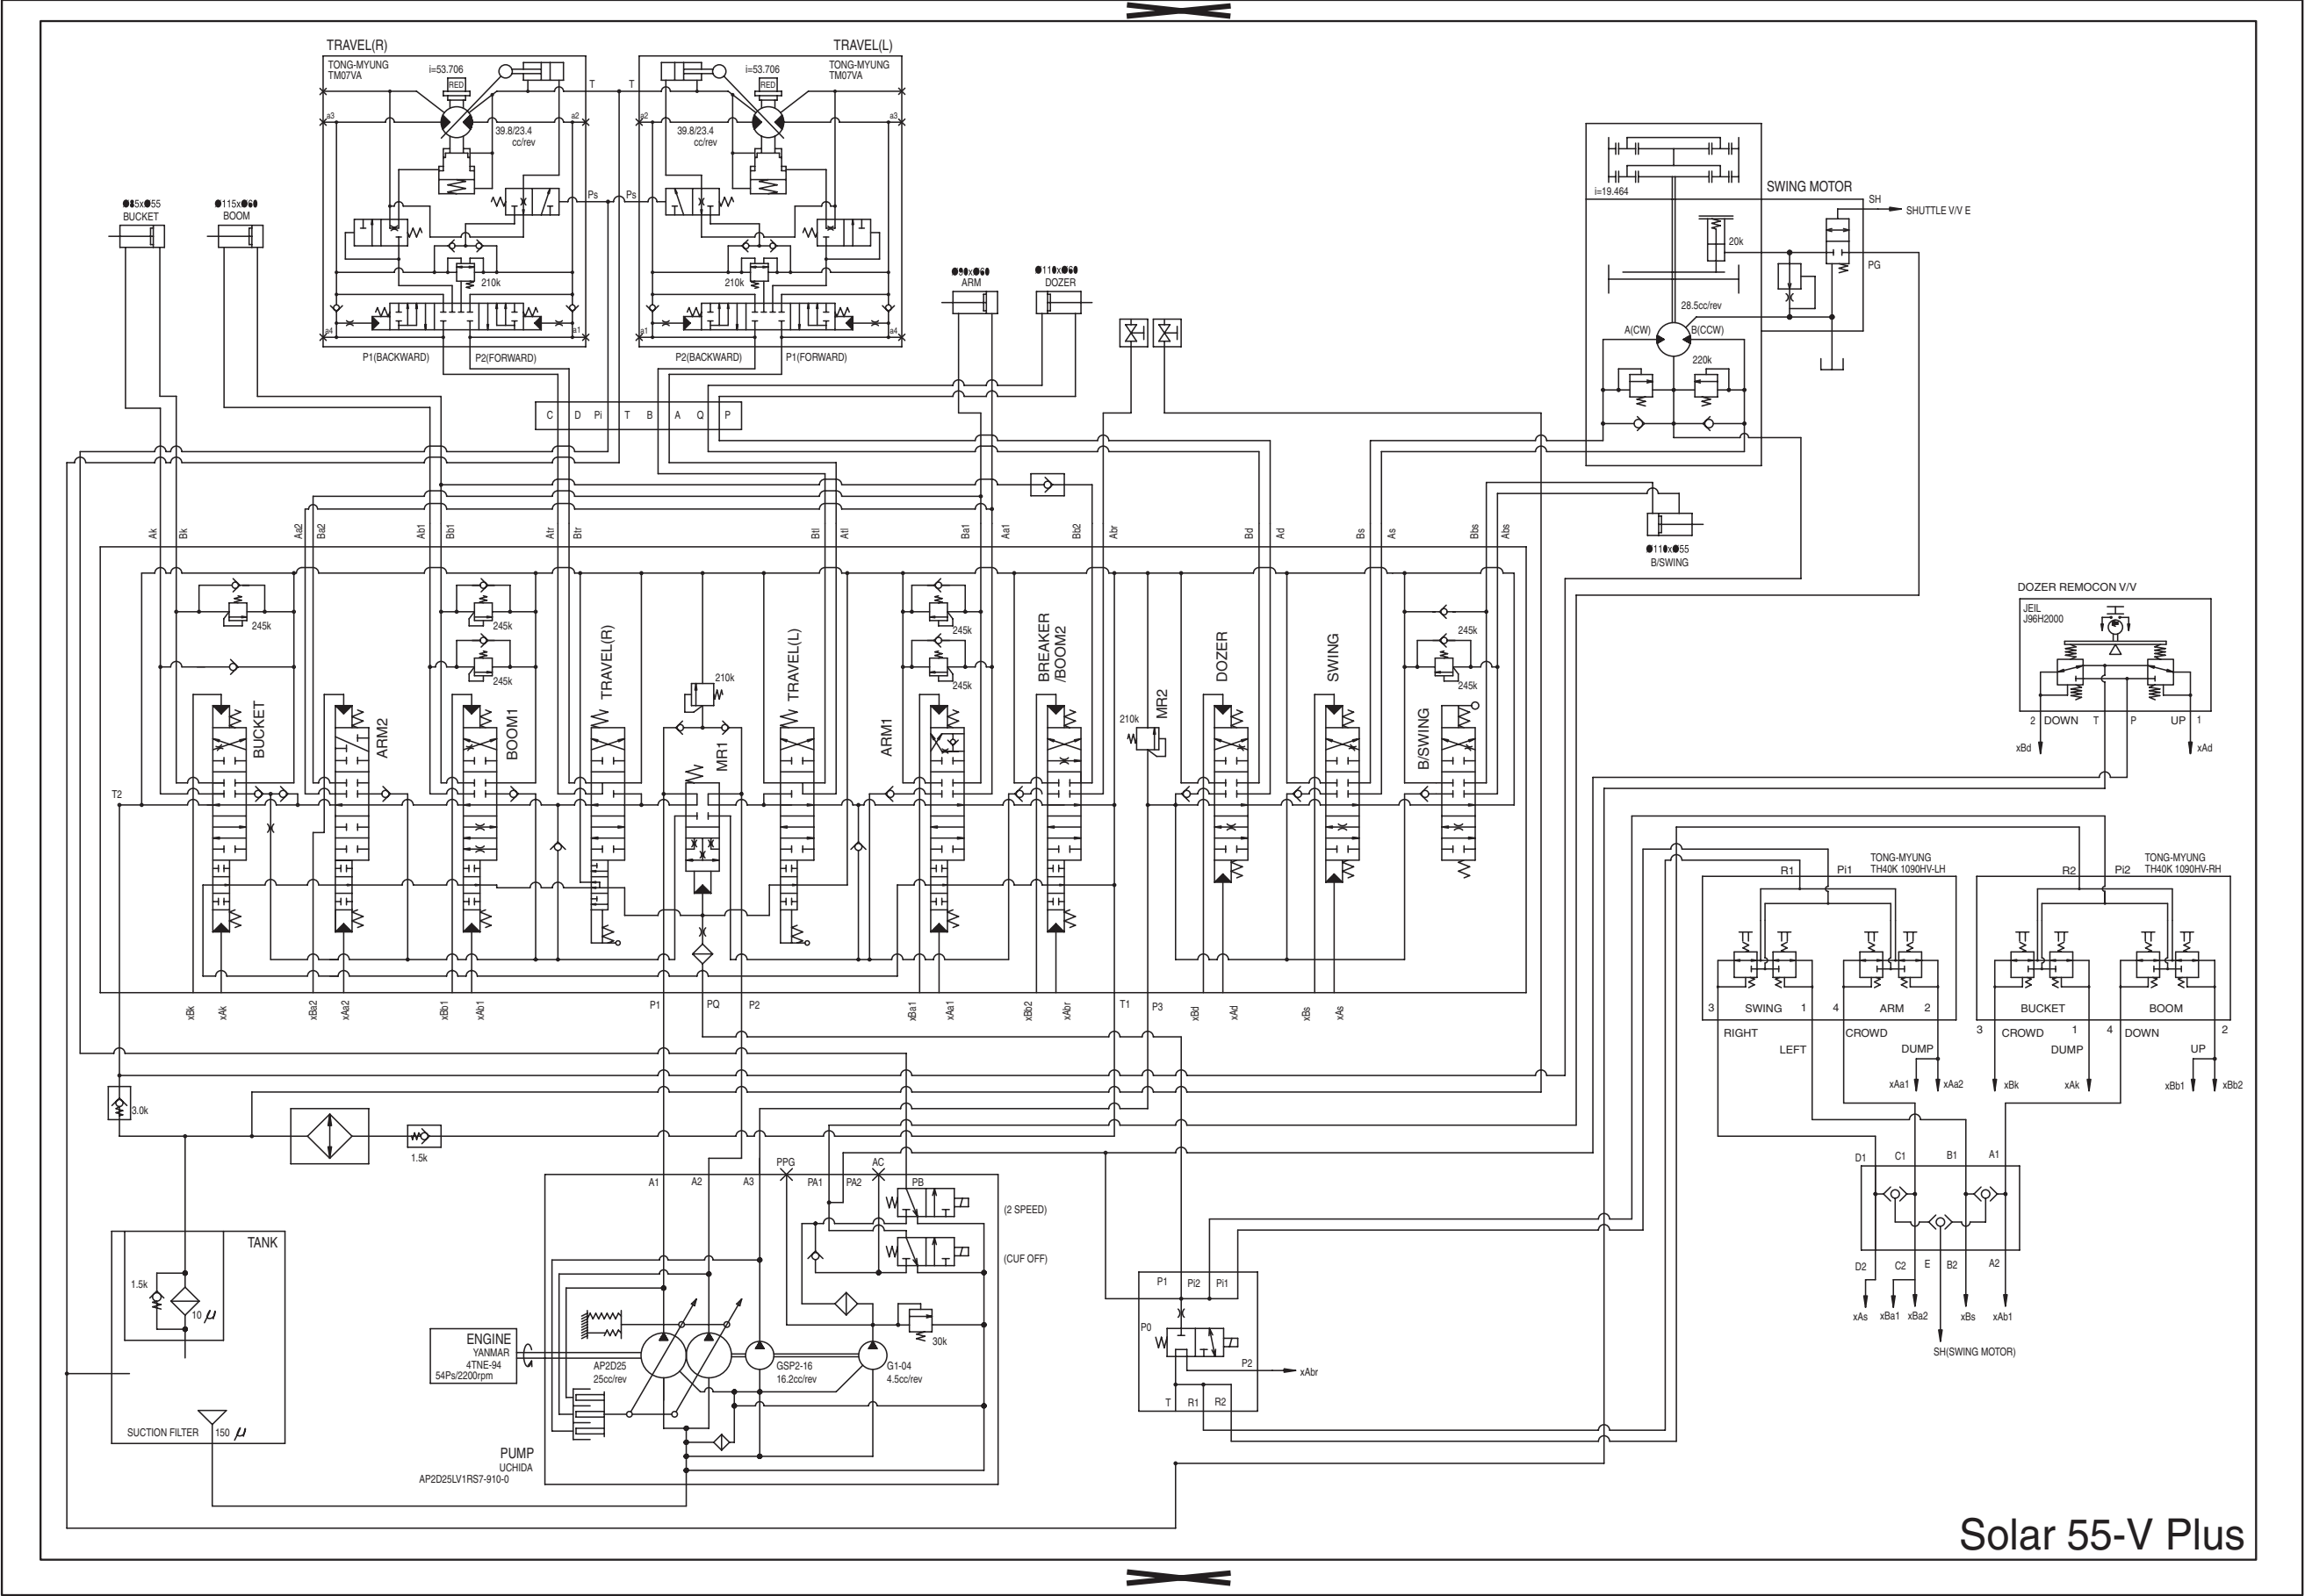


Solar 55-V Plus

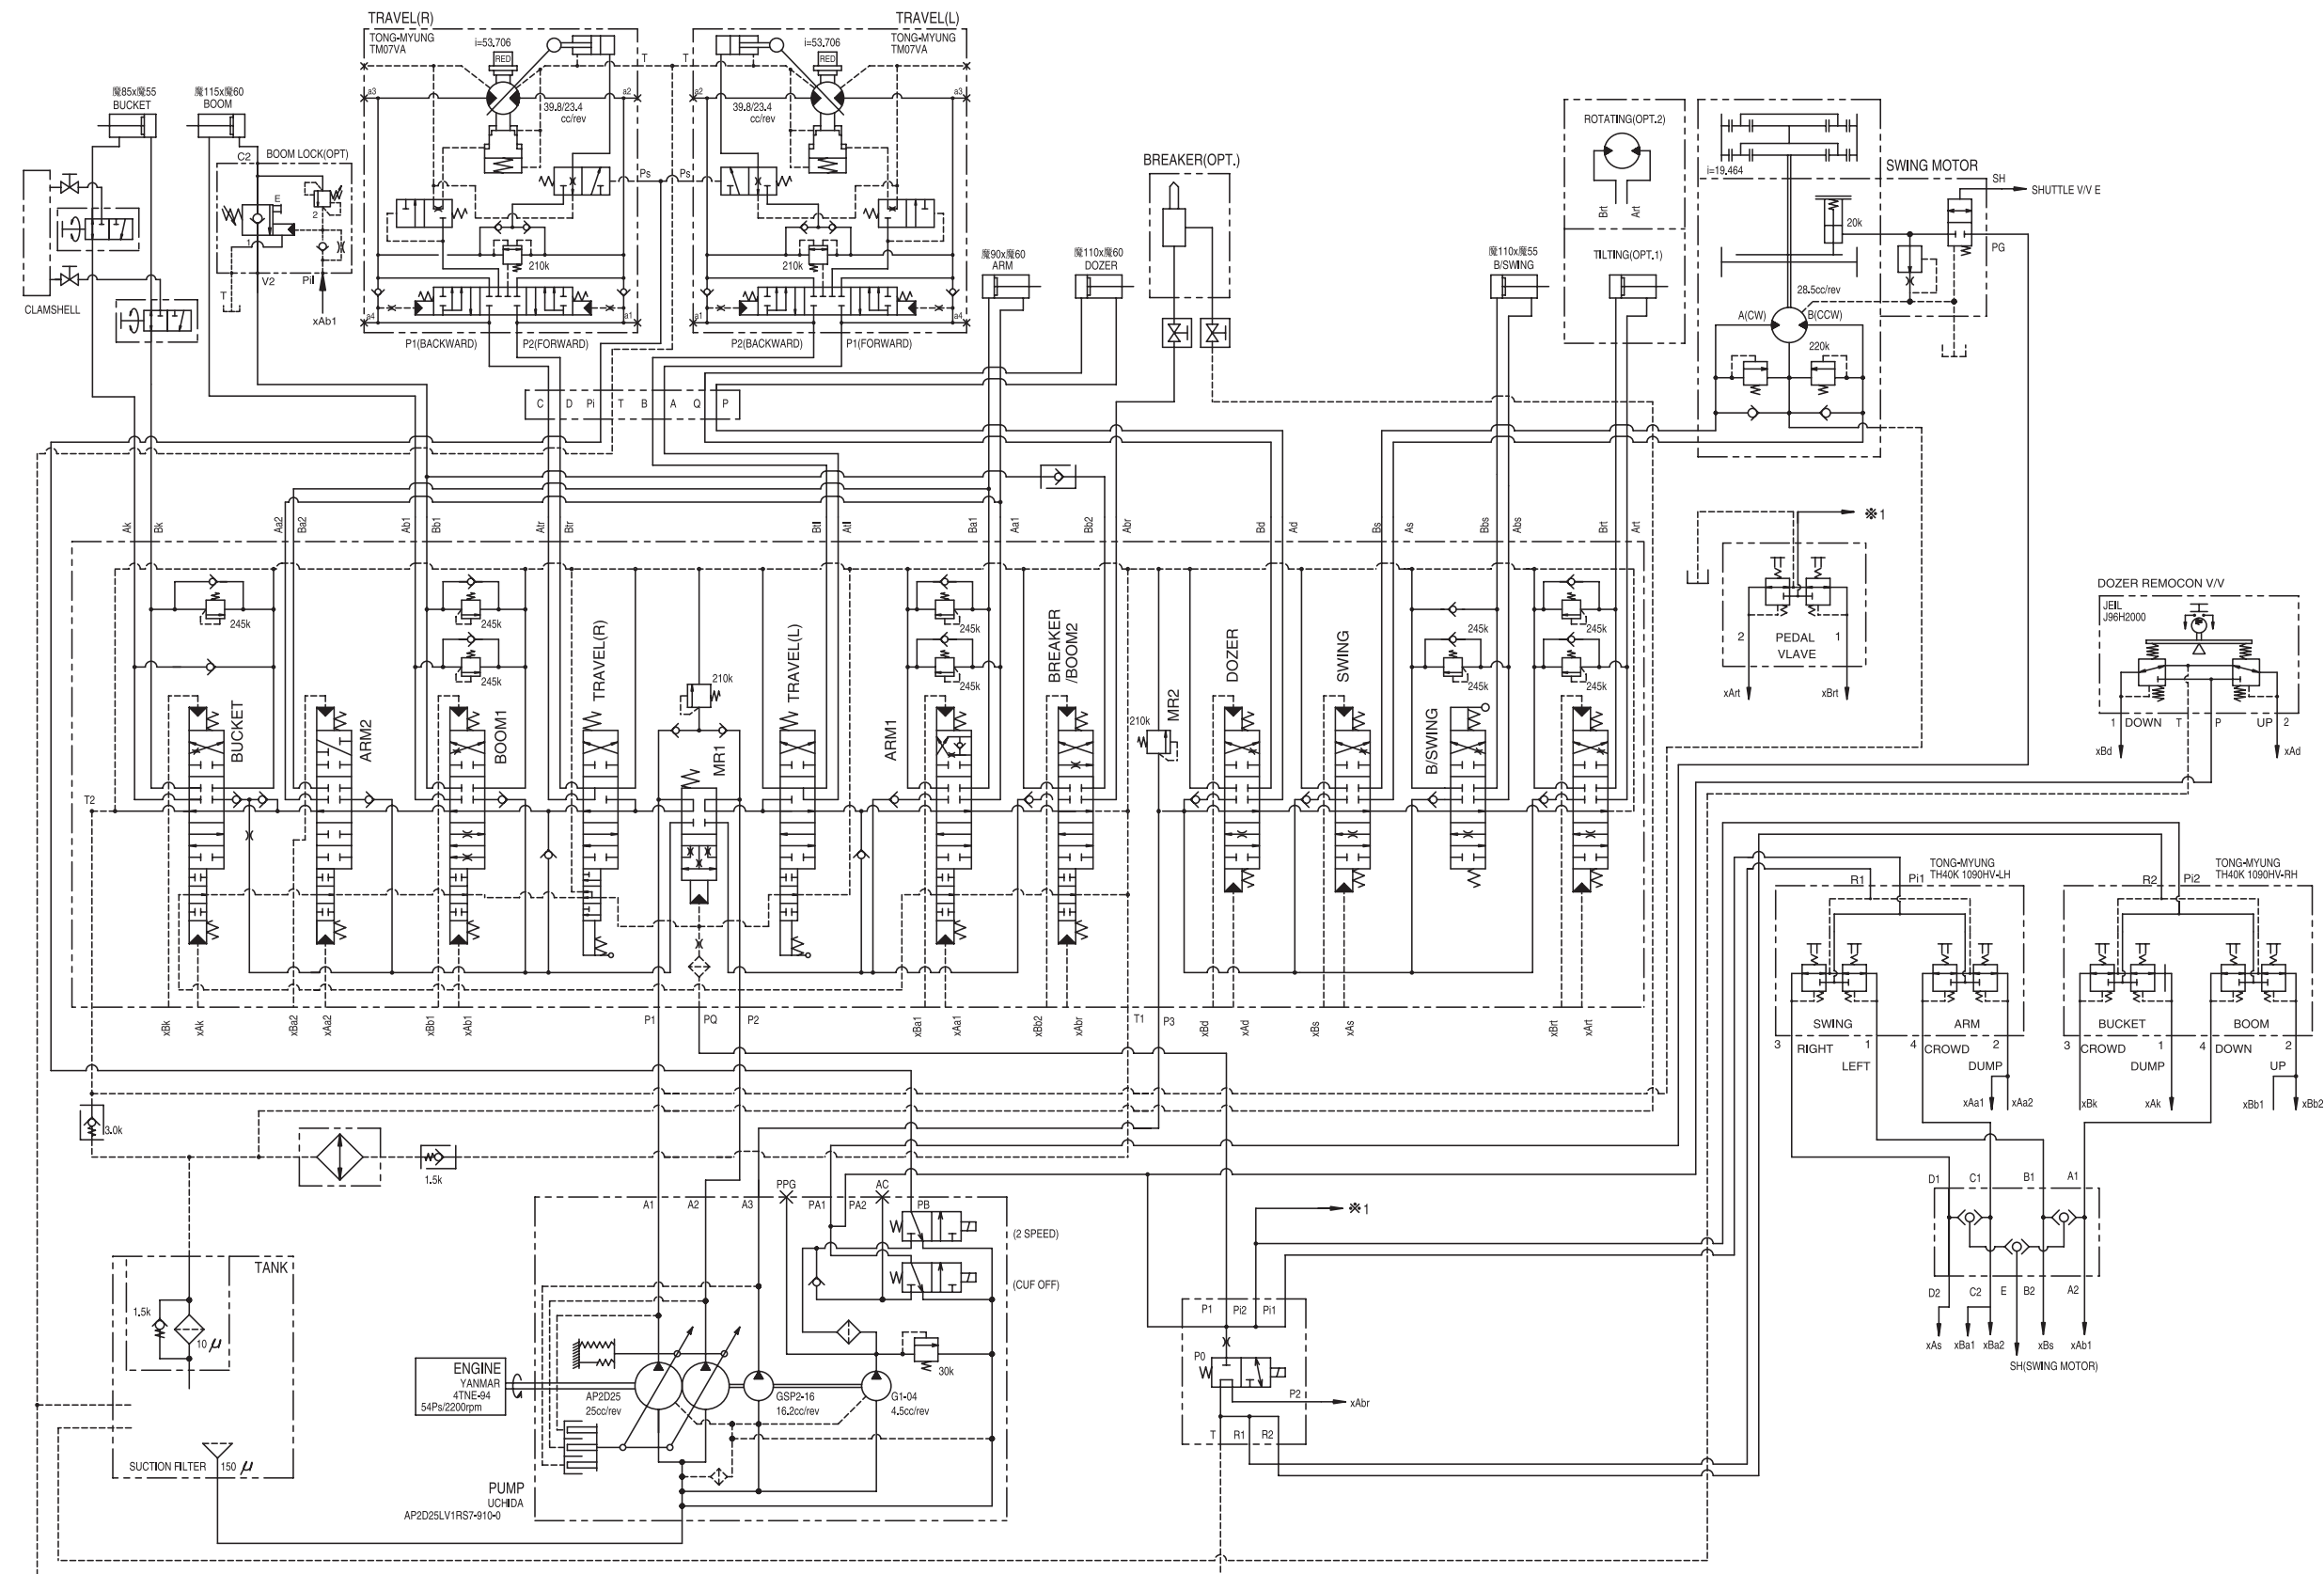


Solar 55-V Plus

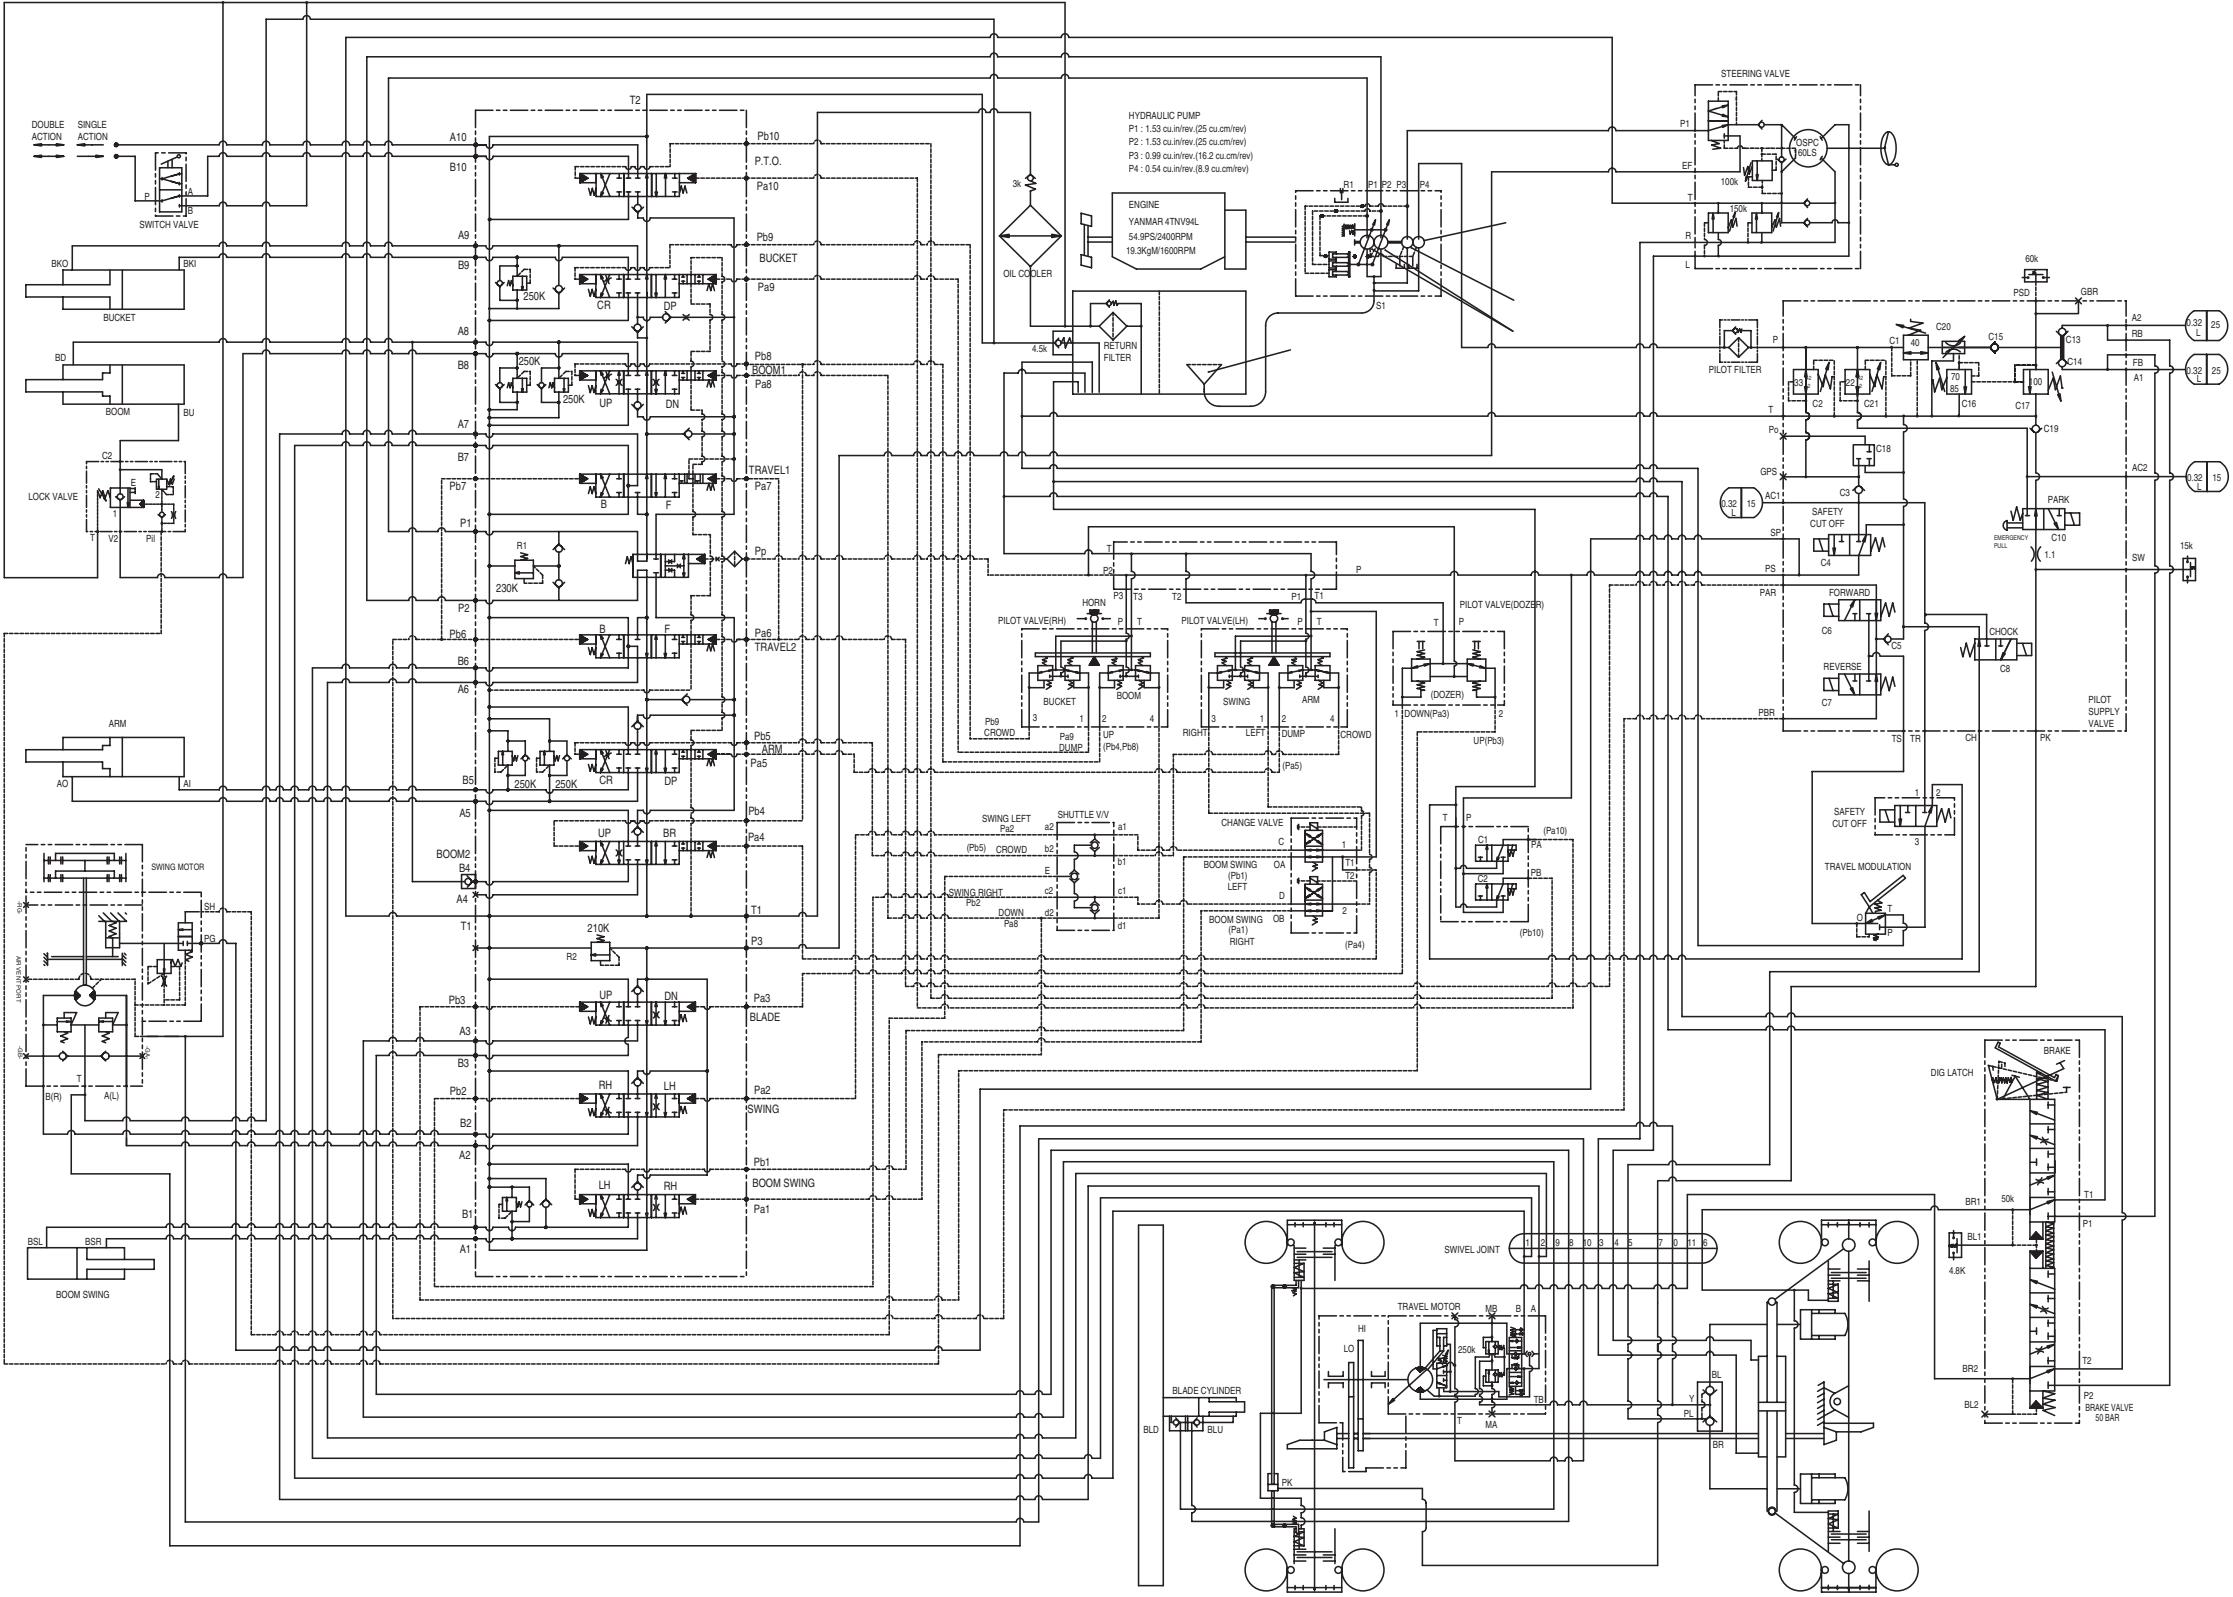


Solar 55W-V Plus

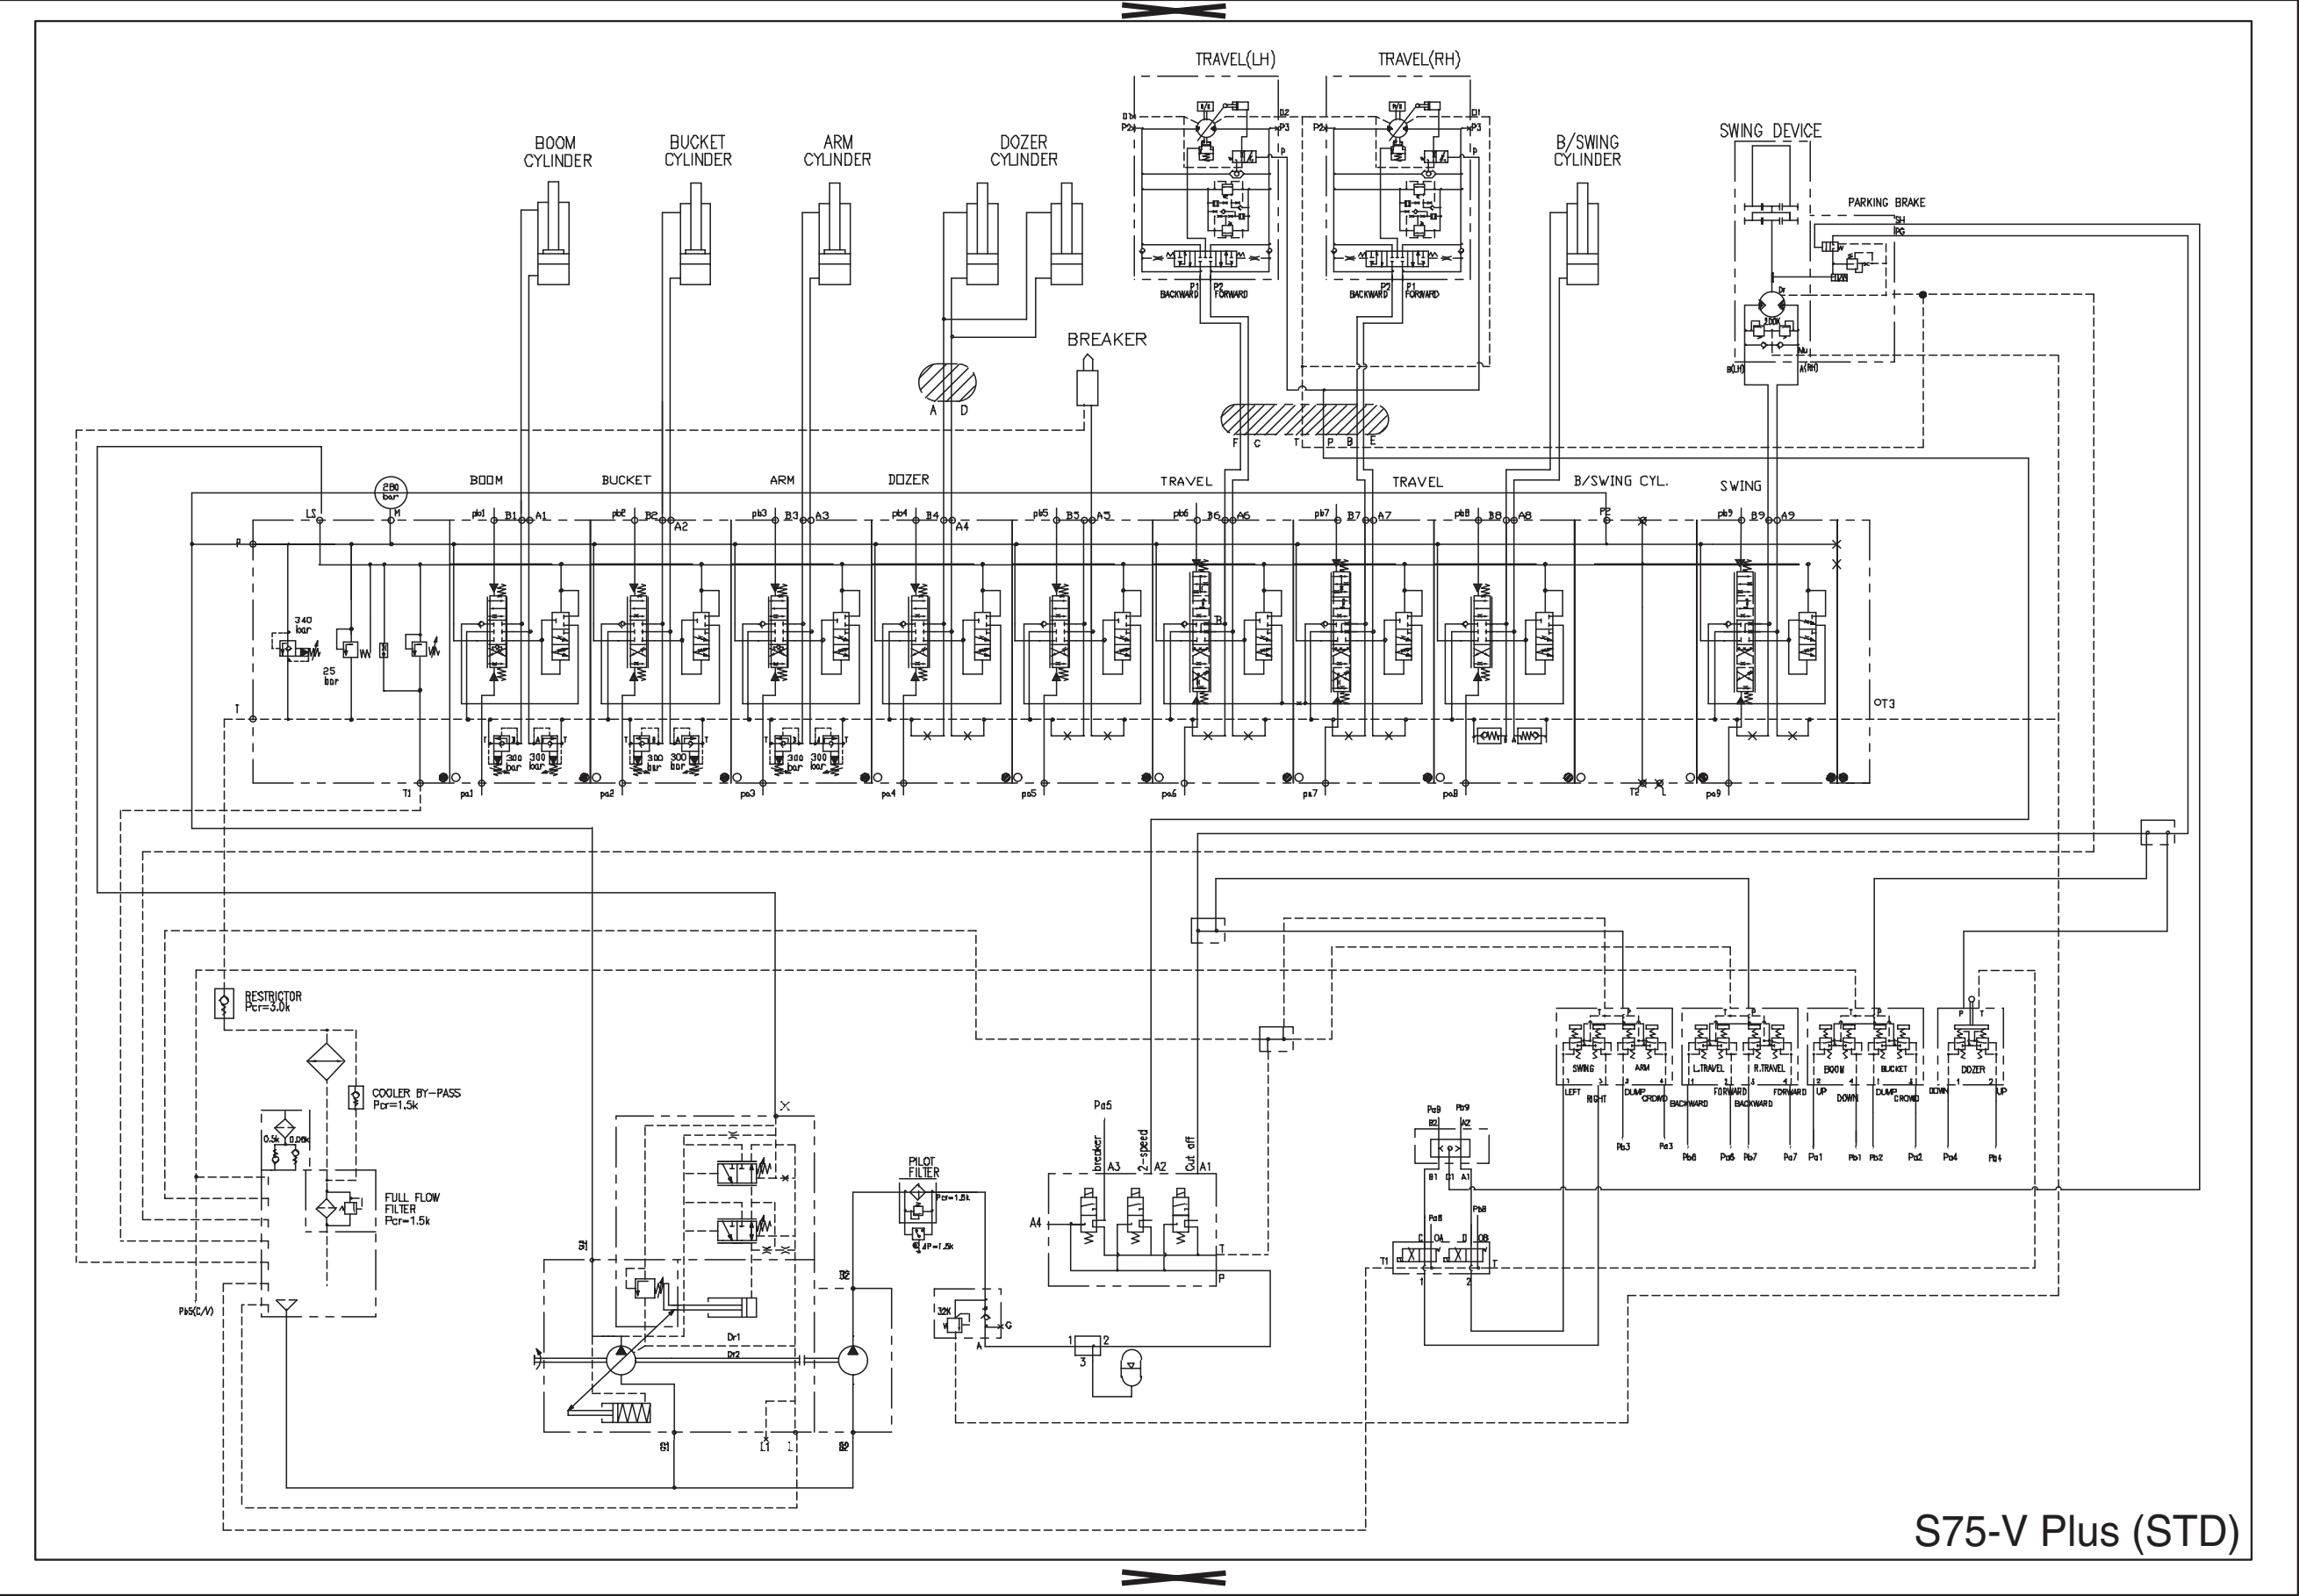


S75-V Plus (STD)

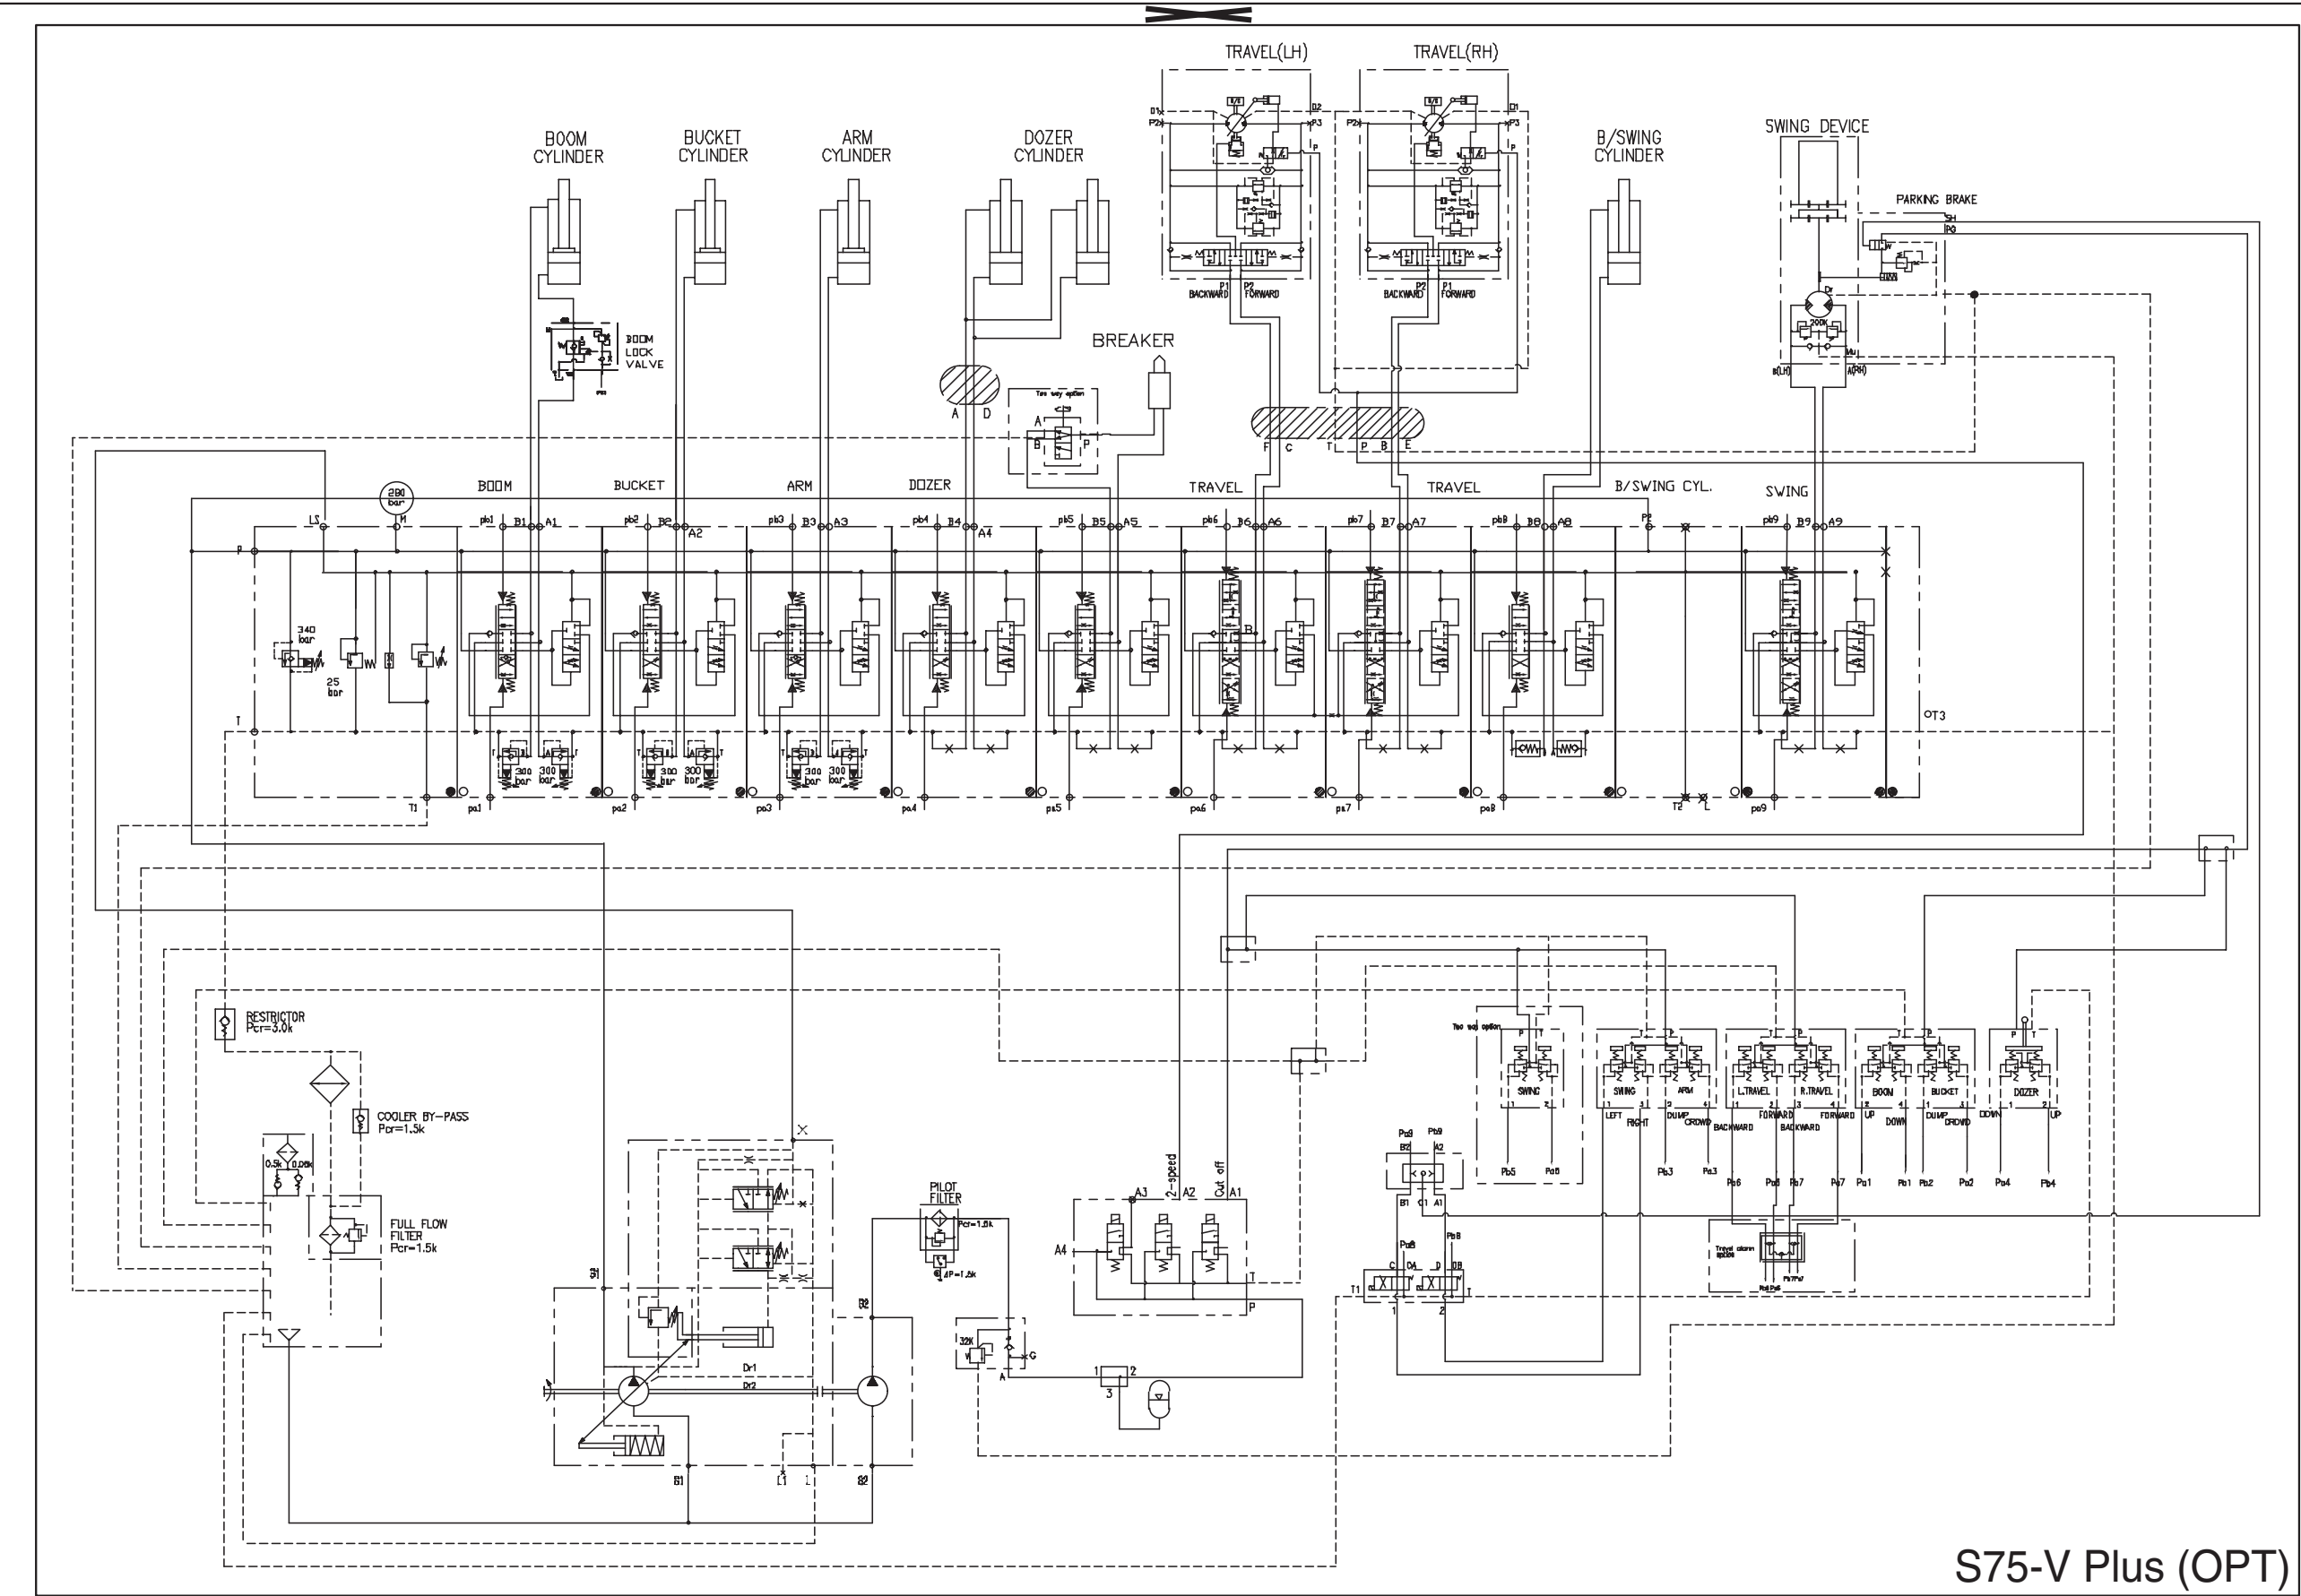


S75-V Plus (OPT)

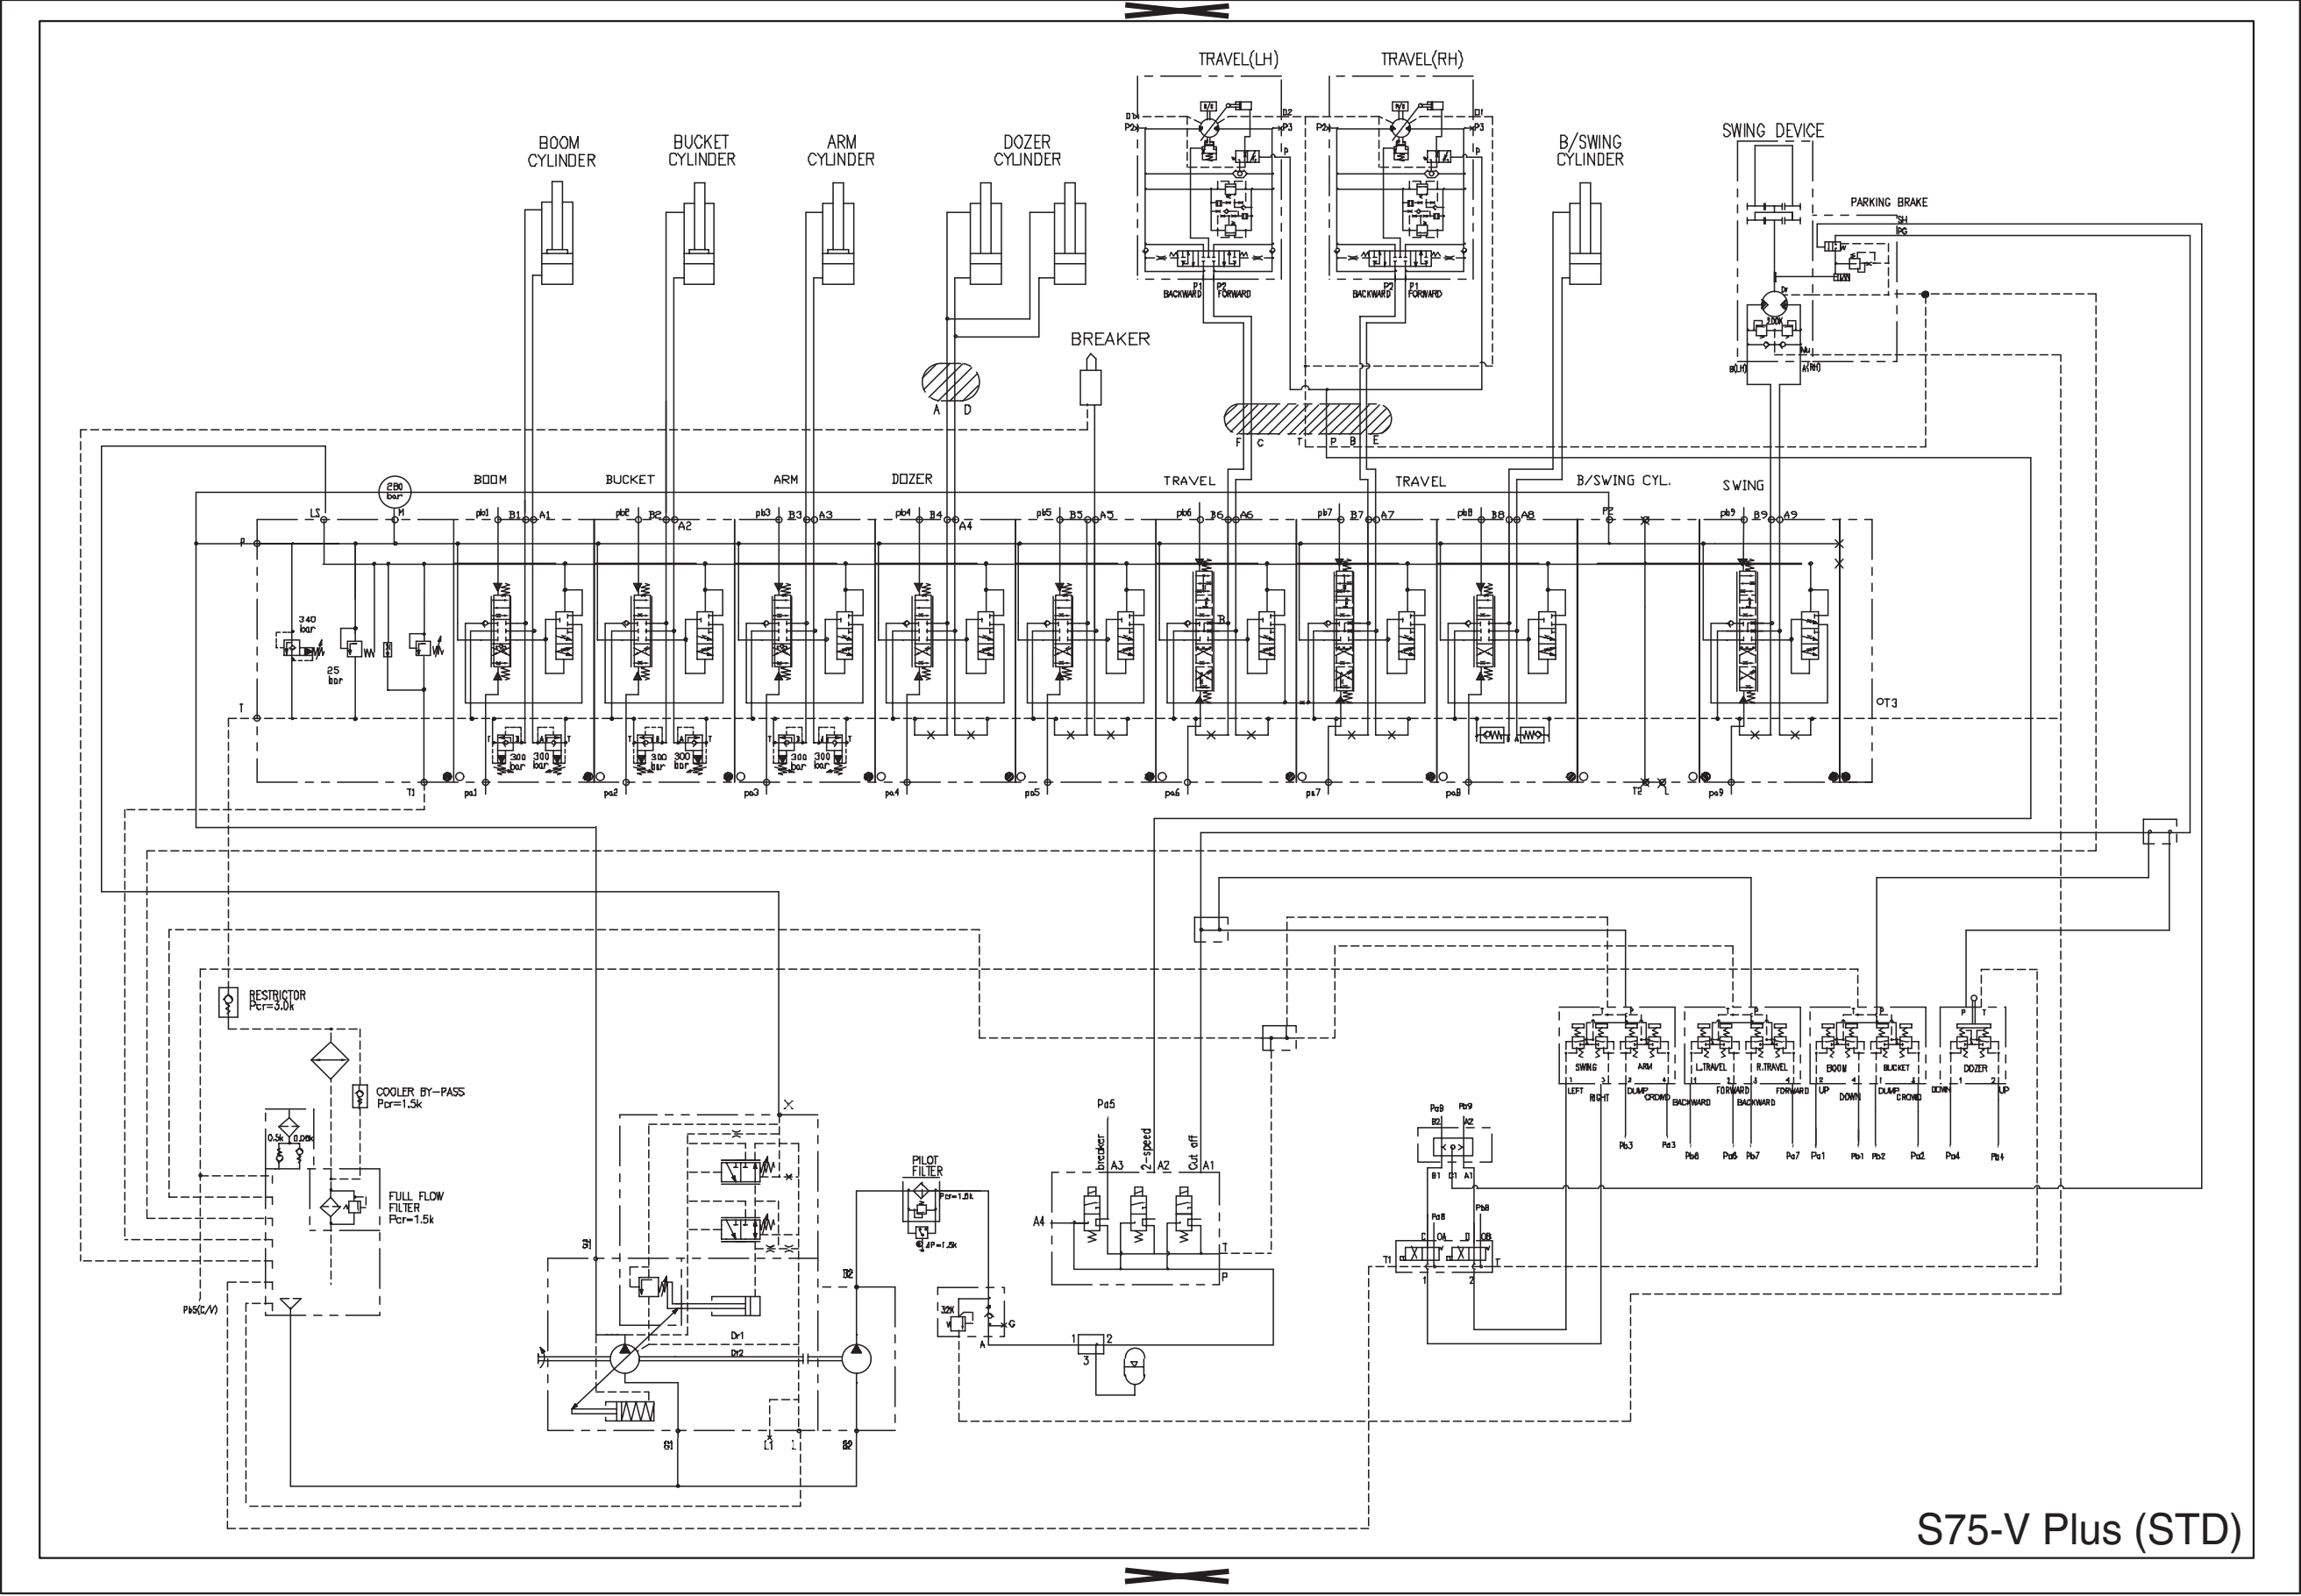


S75-V Plus (STD)

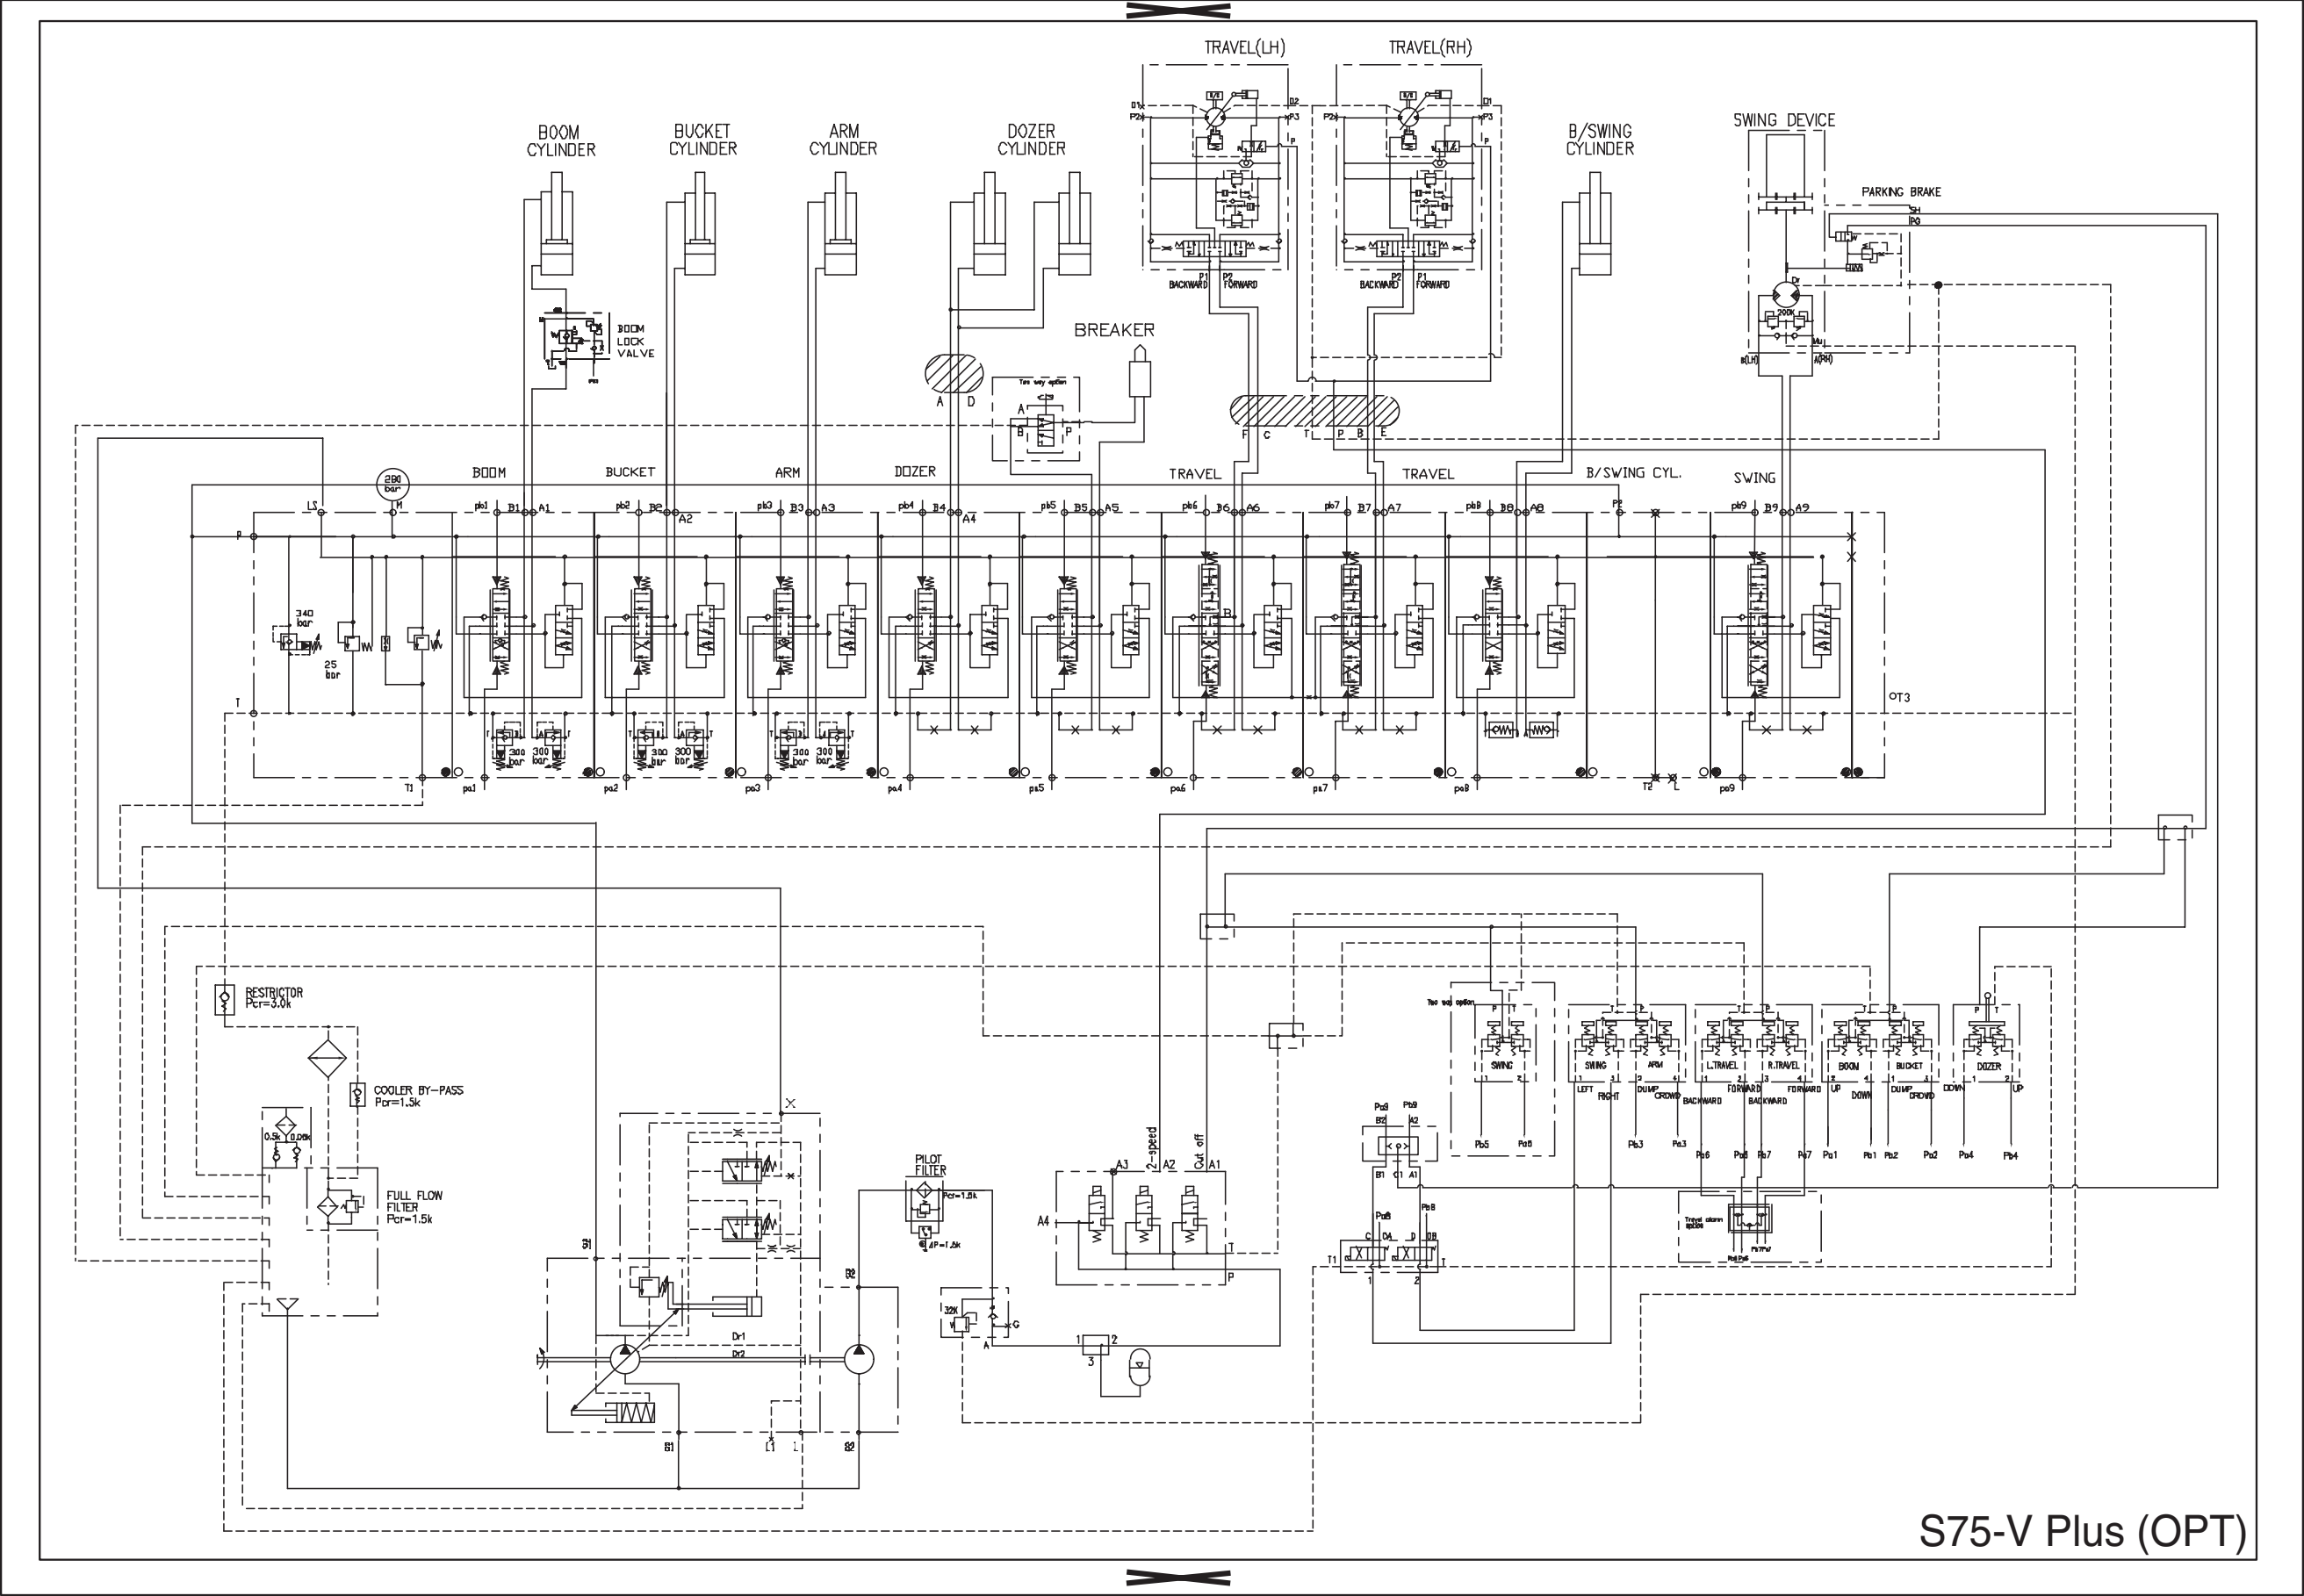


S75-V Plus (OPT)

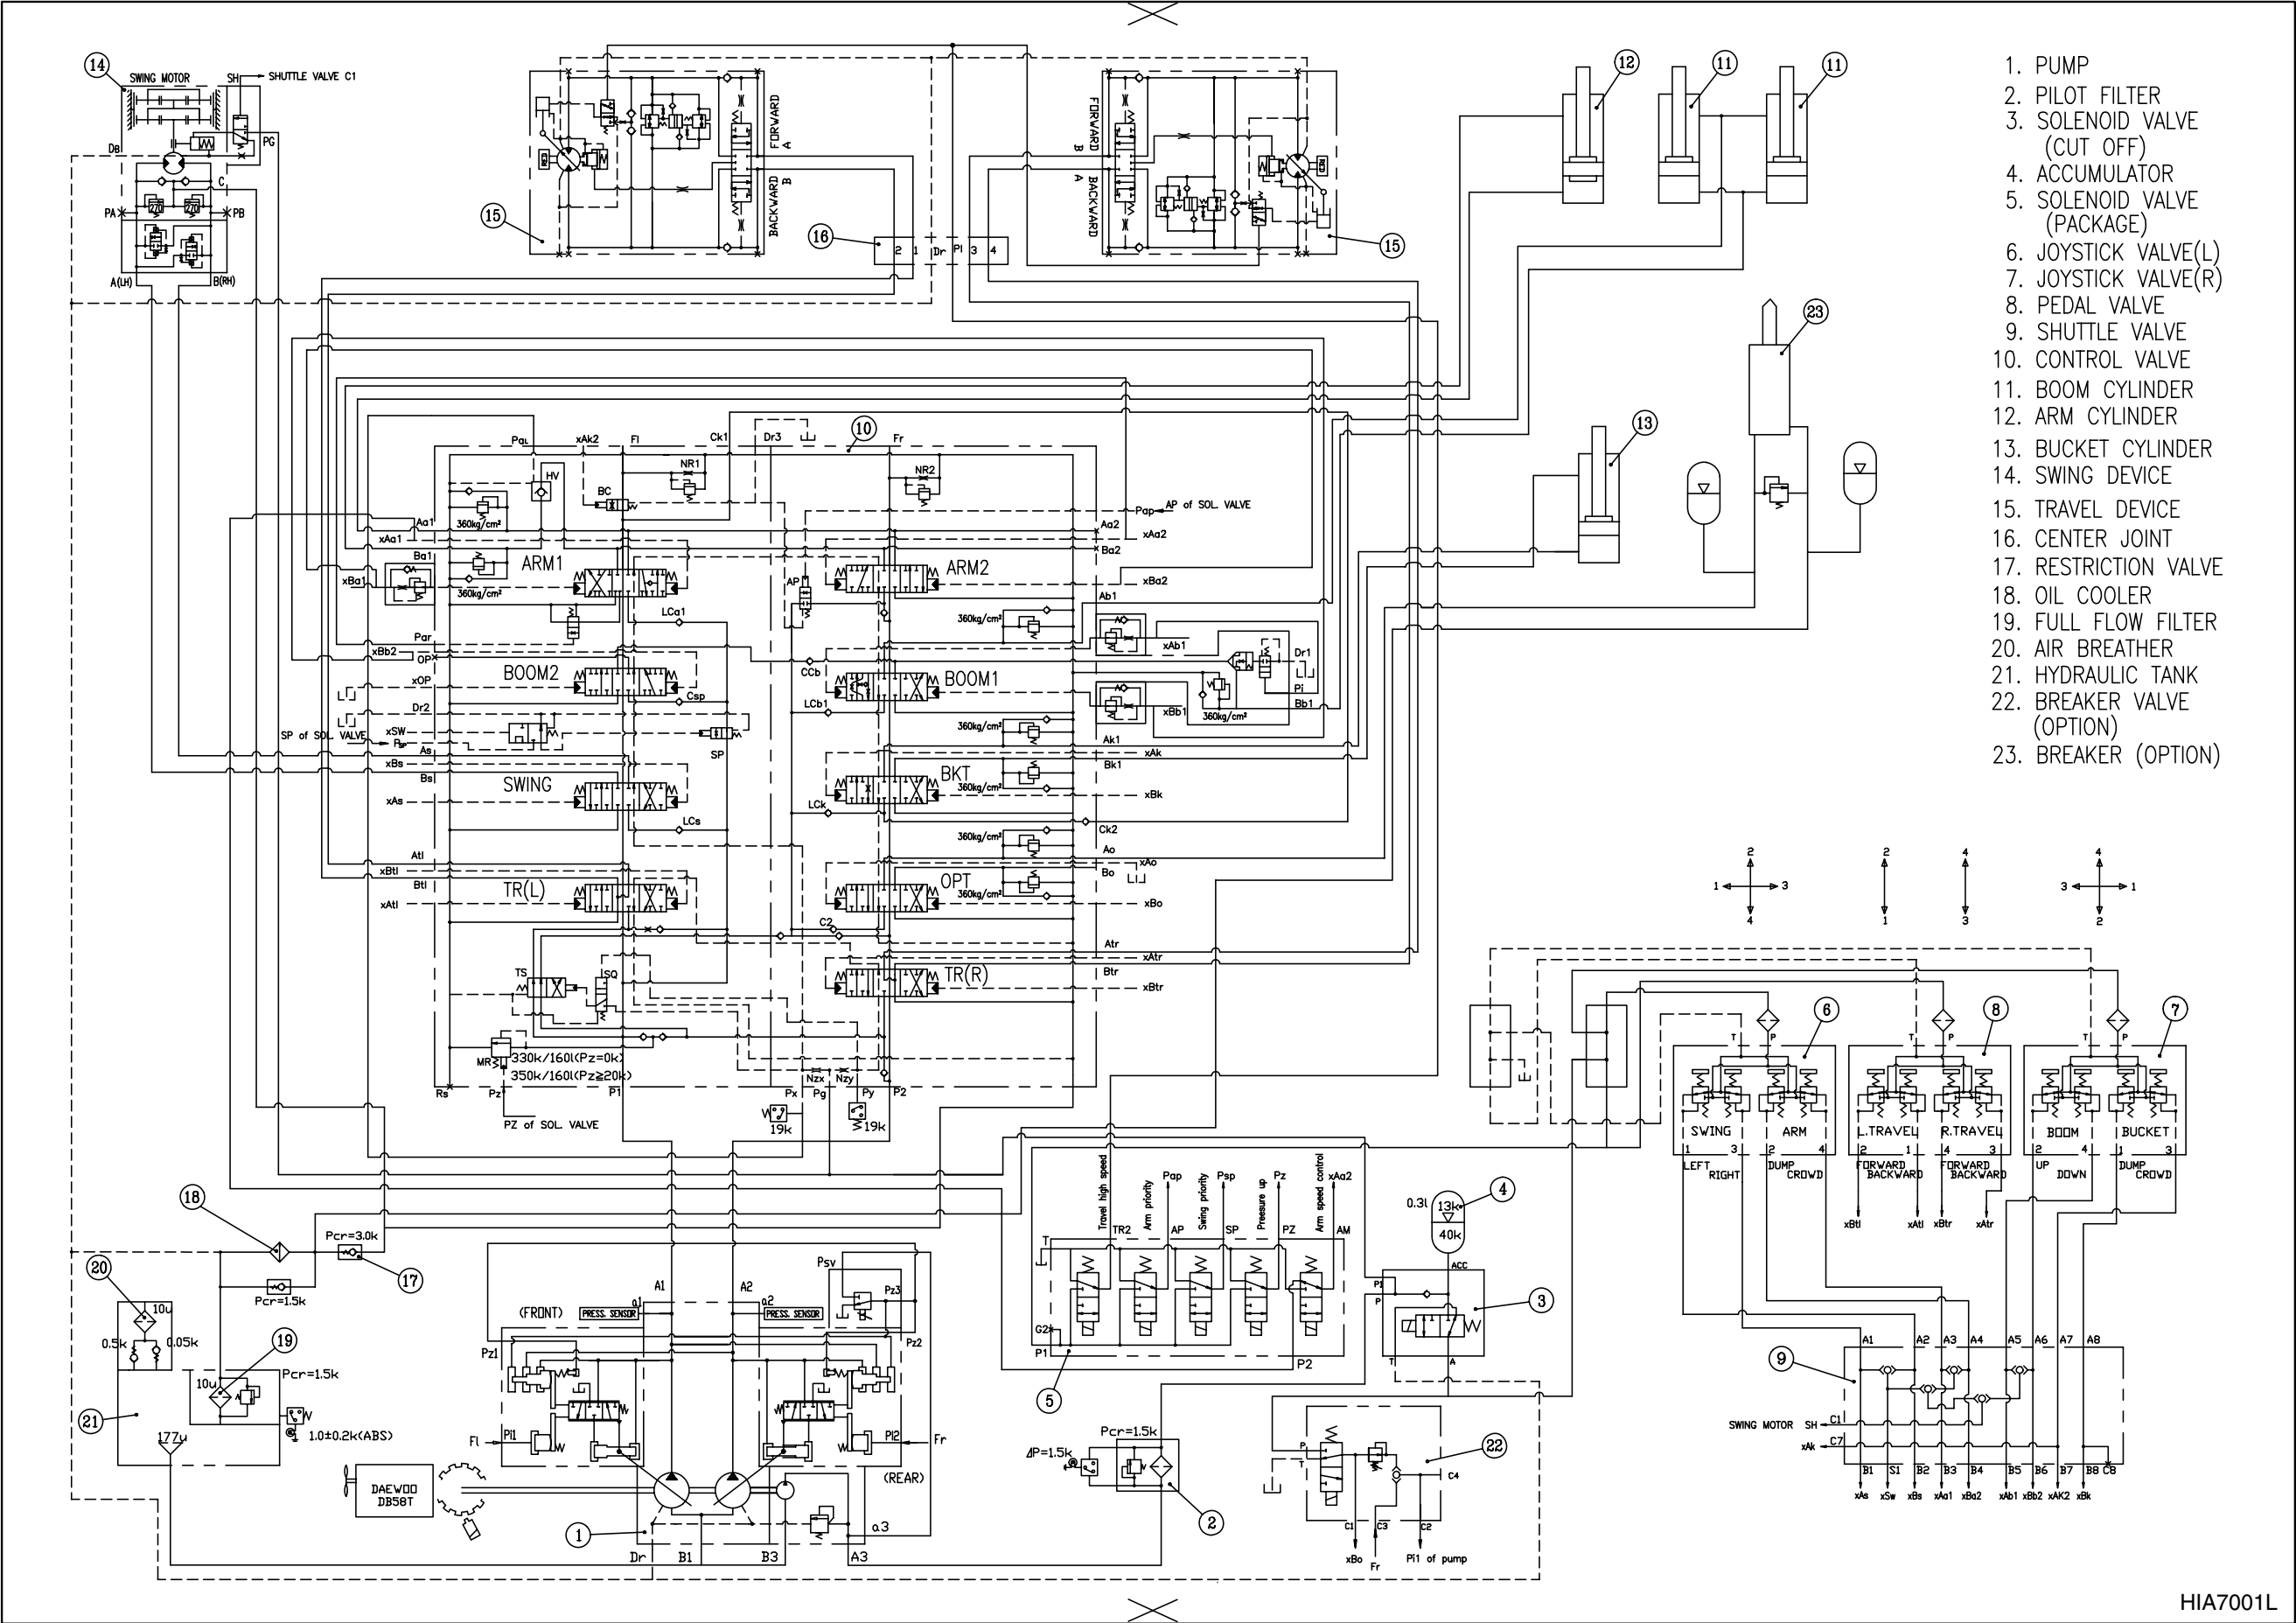


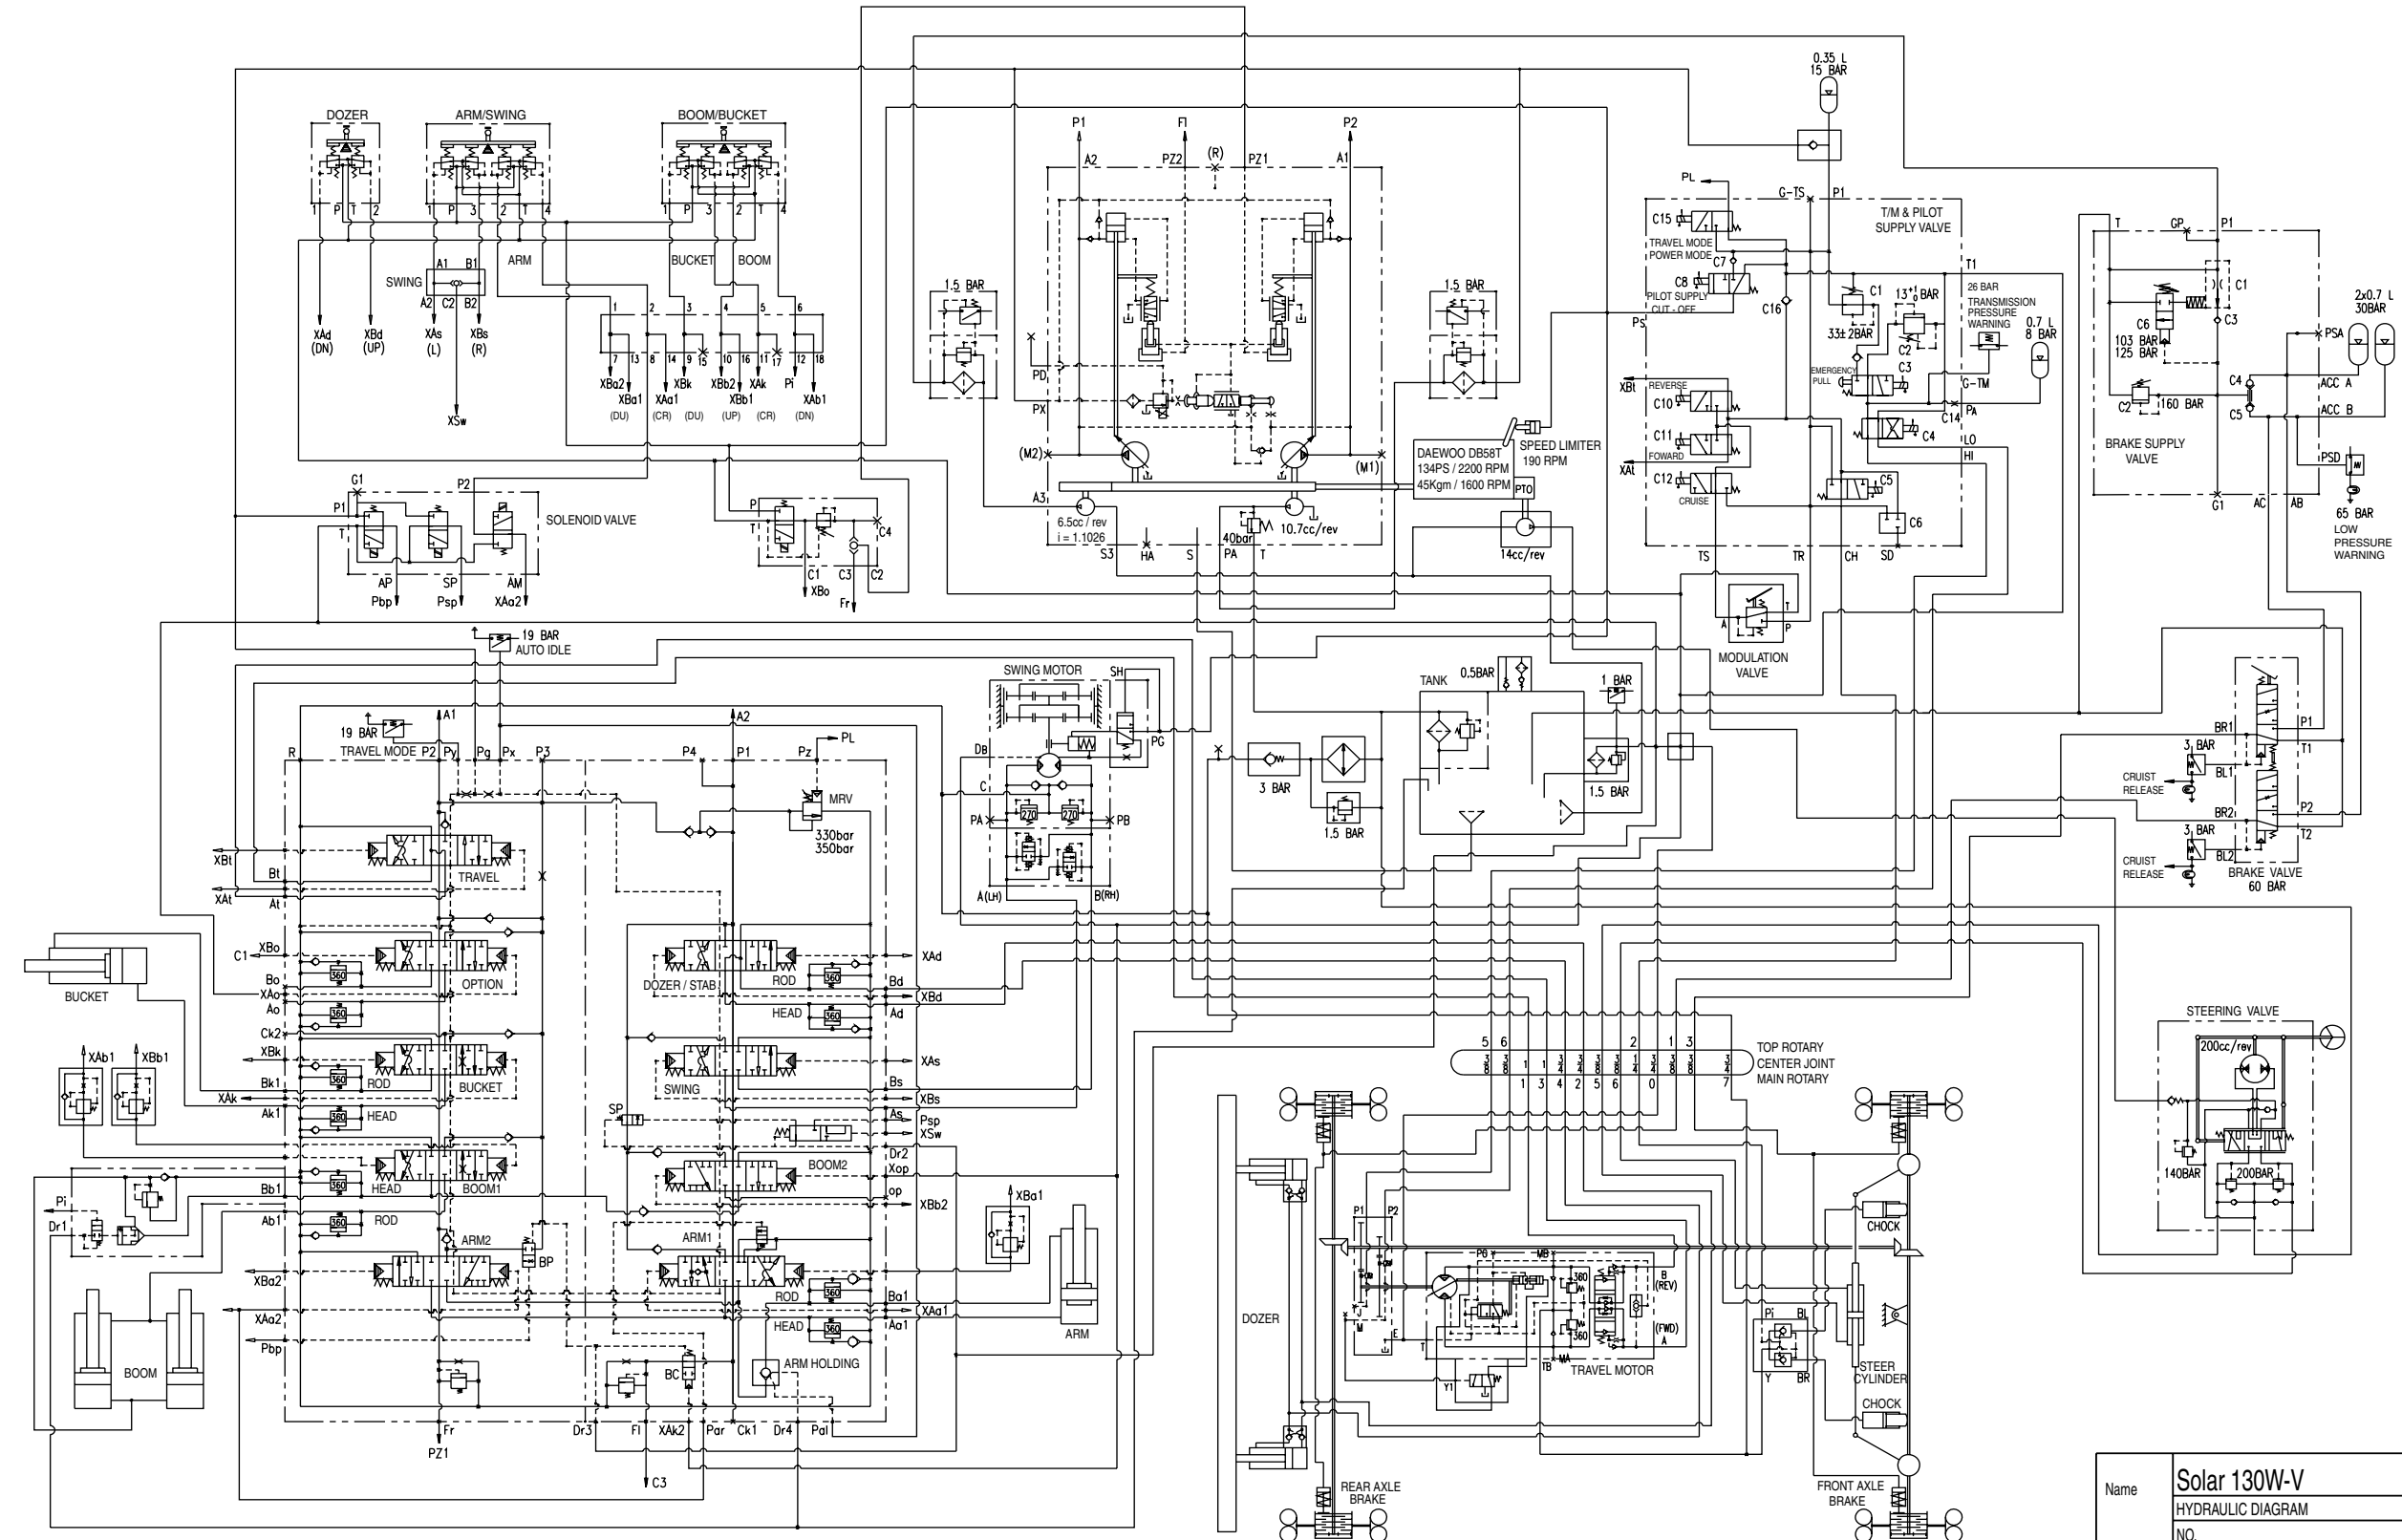


Name	Solar 130W-V
	HYDRAULIC DIAGRAM
	NO.
	DOOSAN INFRACORE

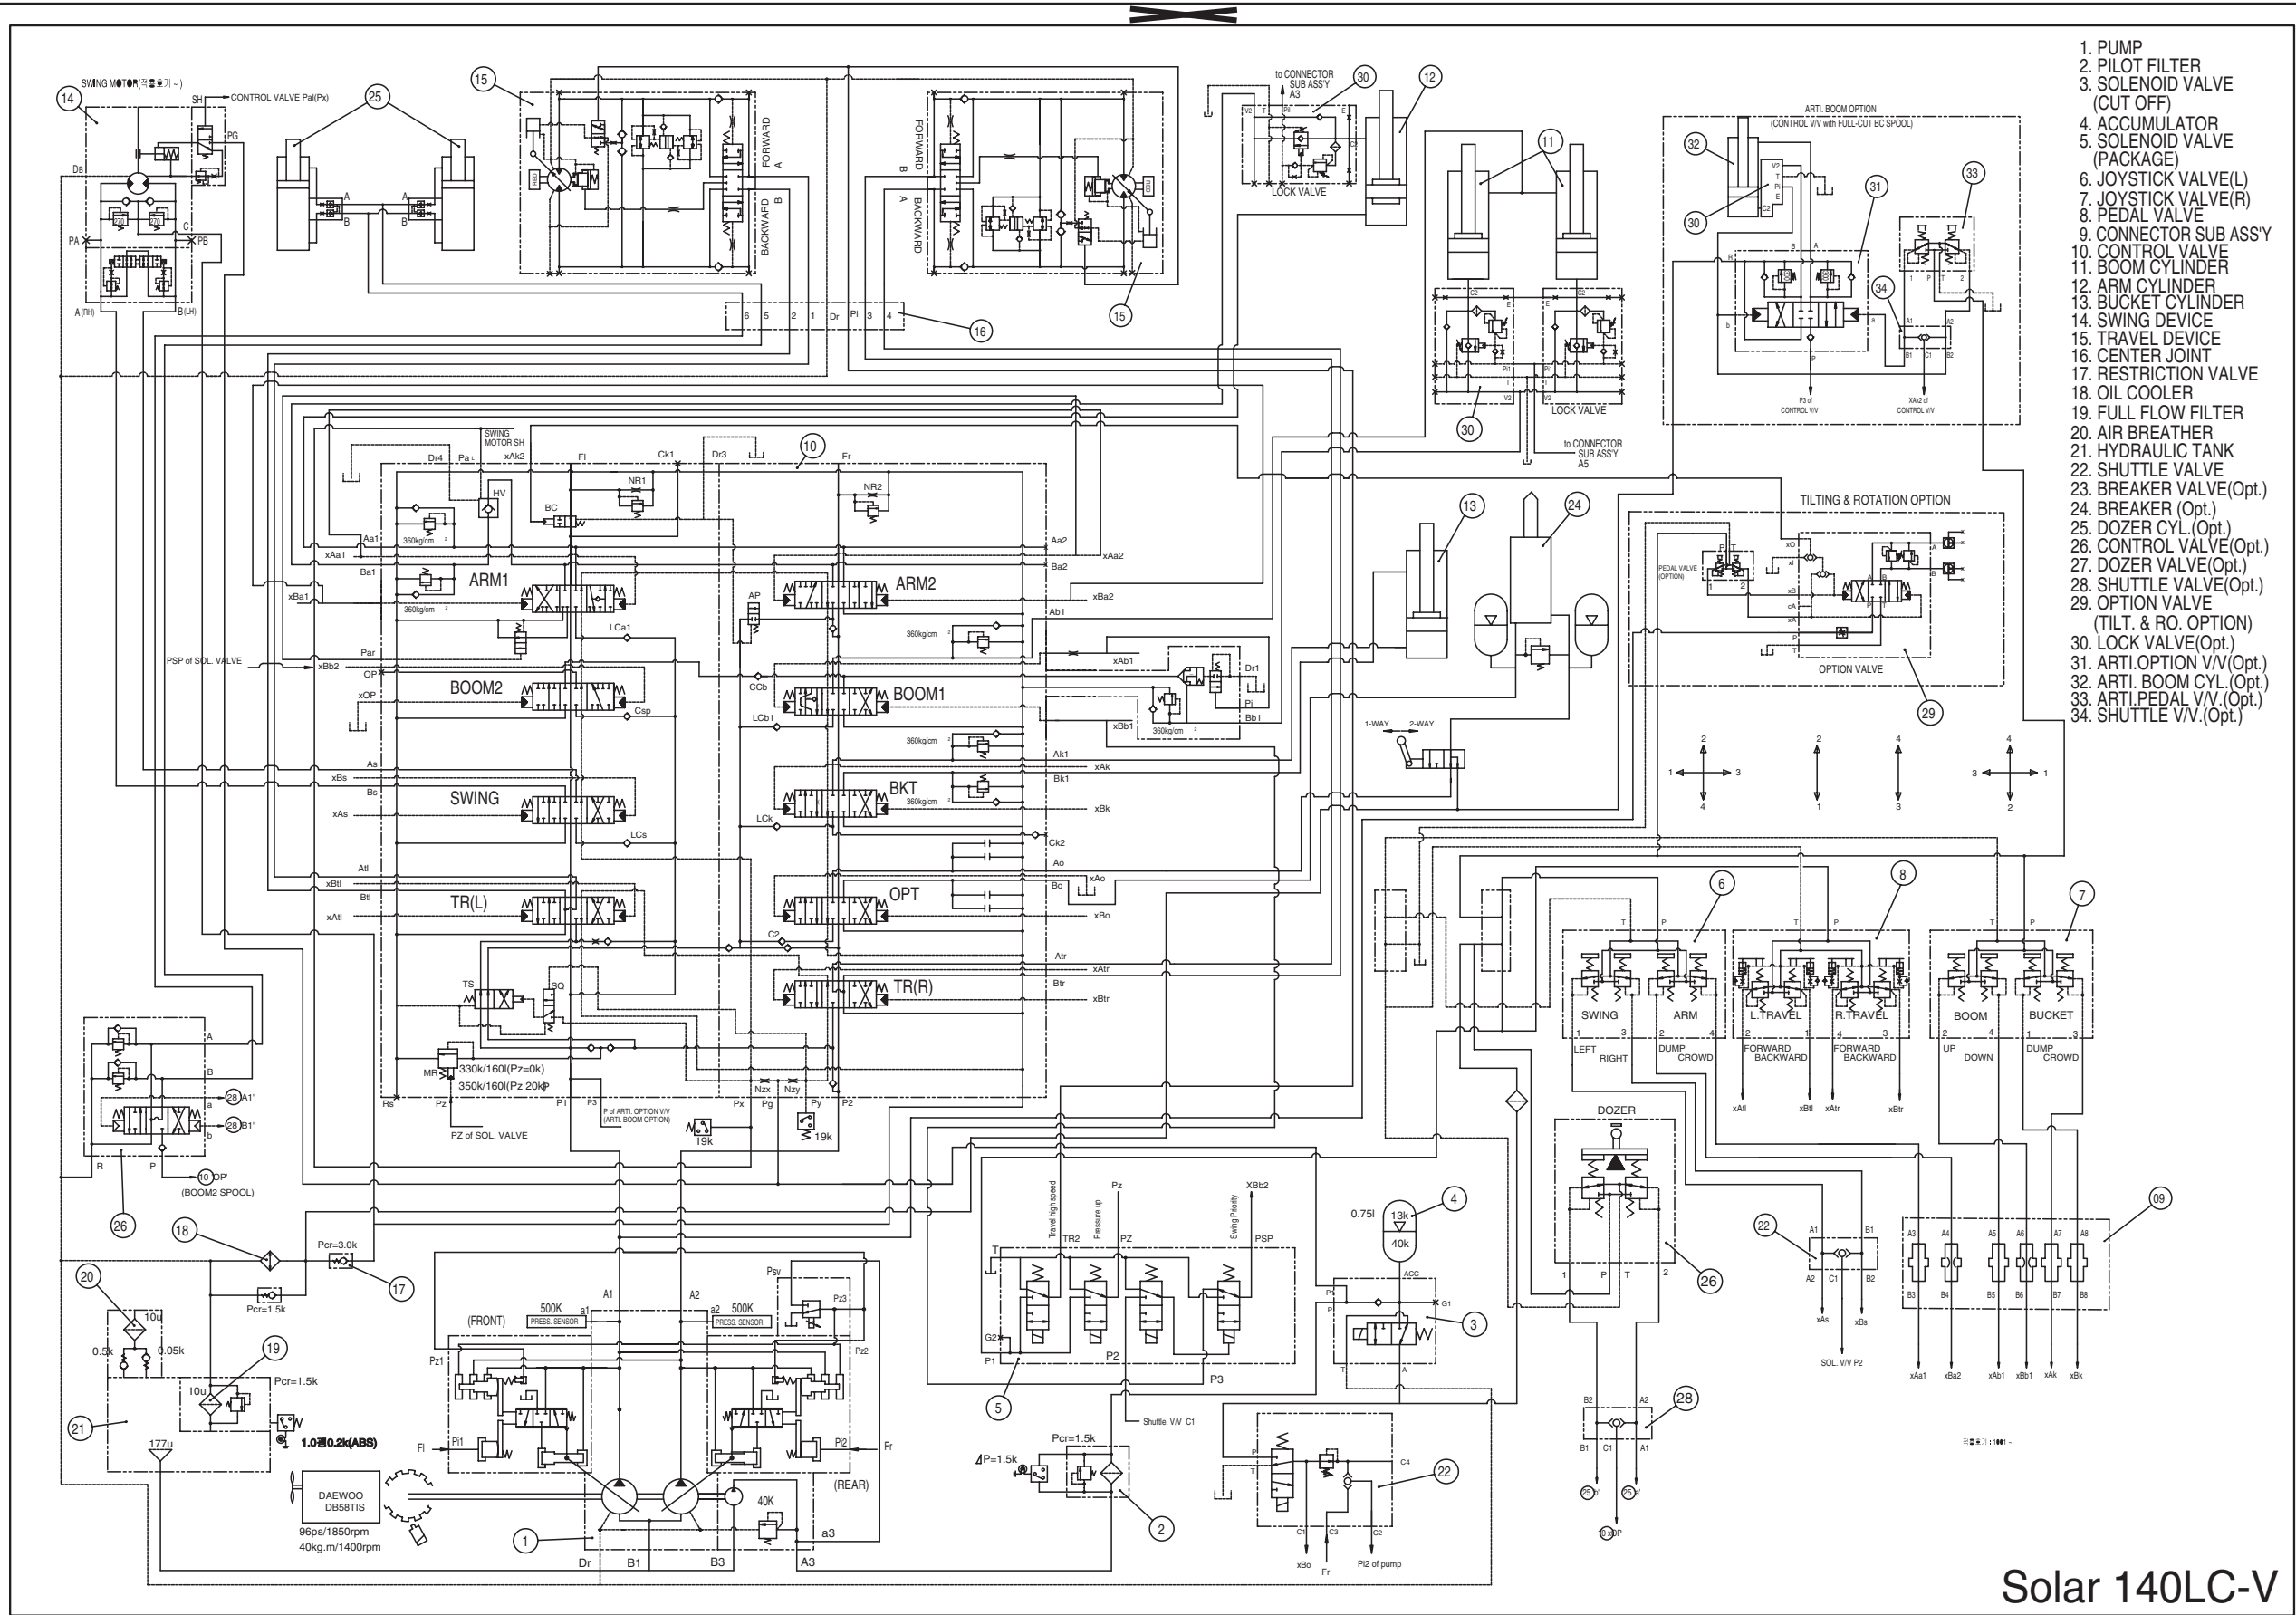



Solar 140LC-V

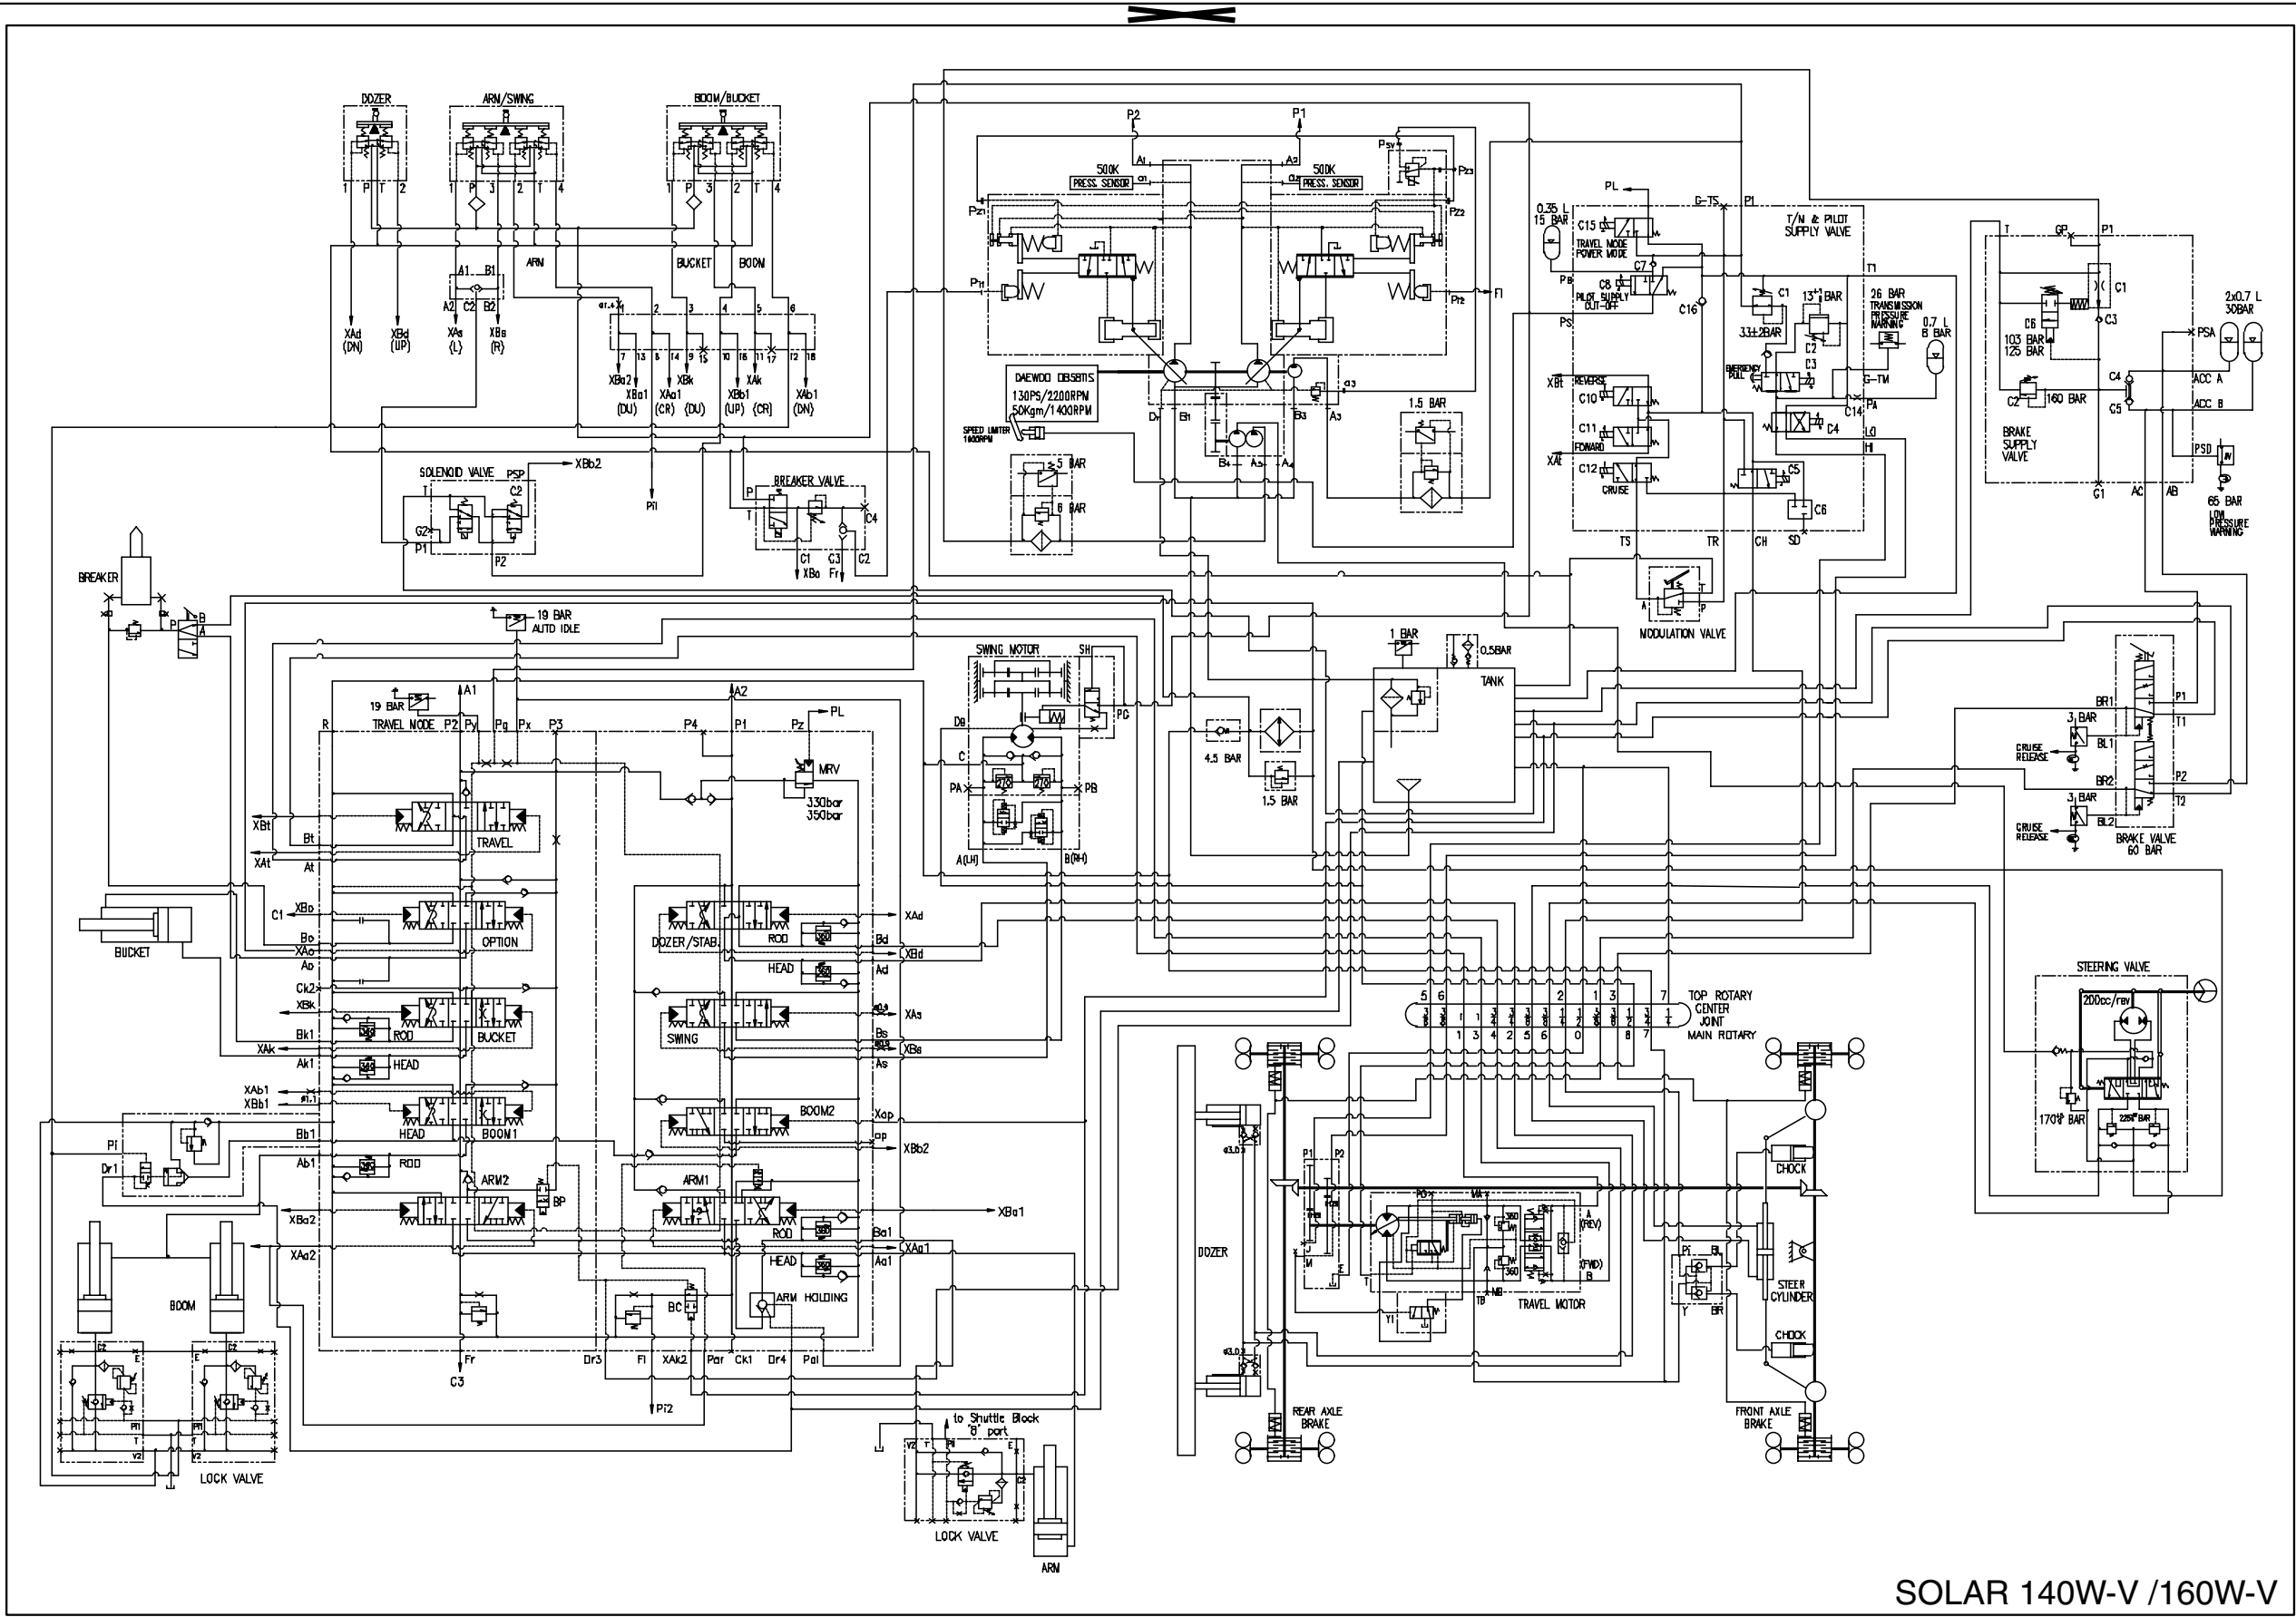

SOLAR 140W-V /160W-V

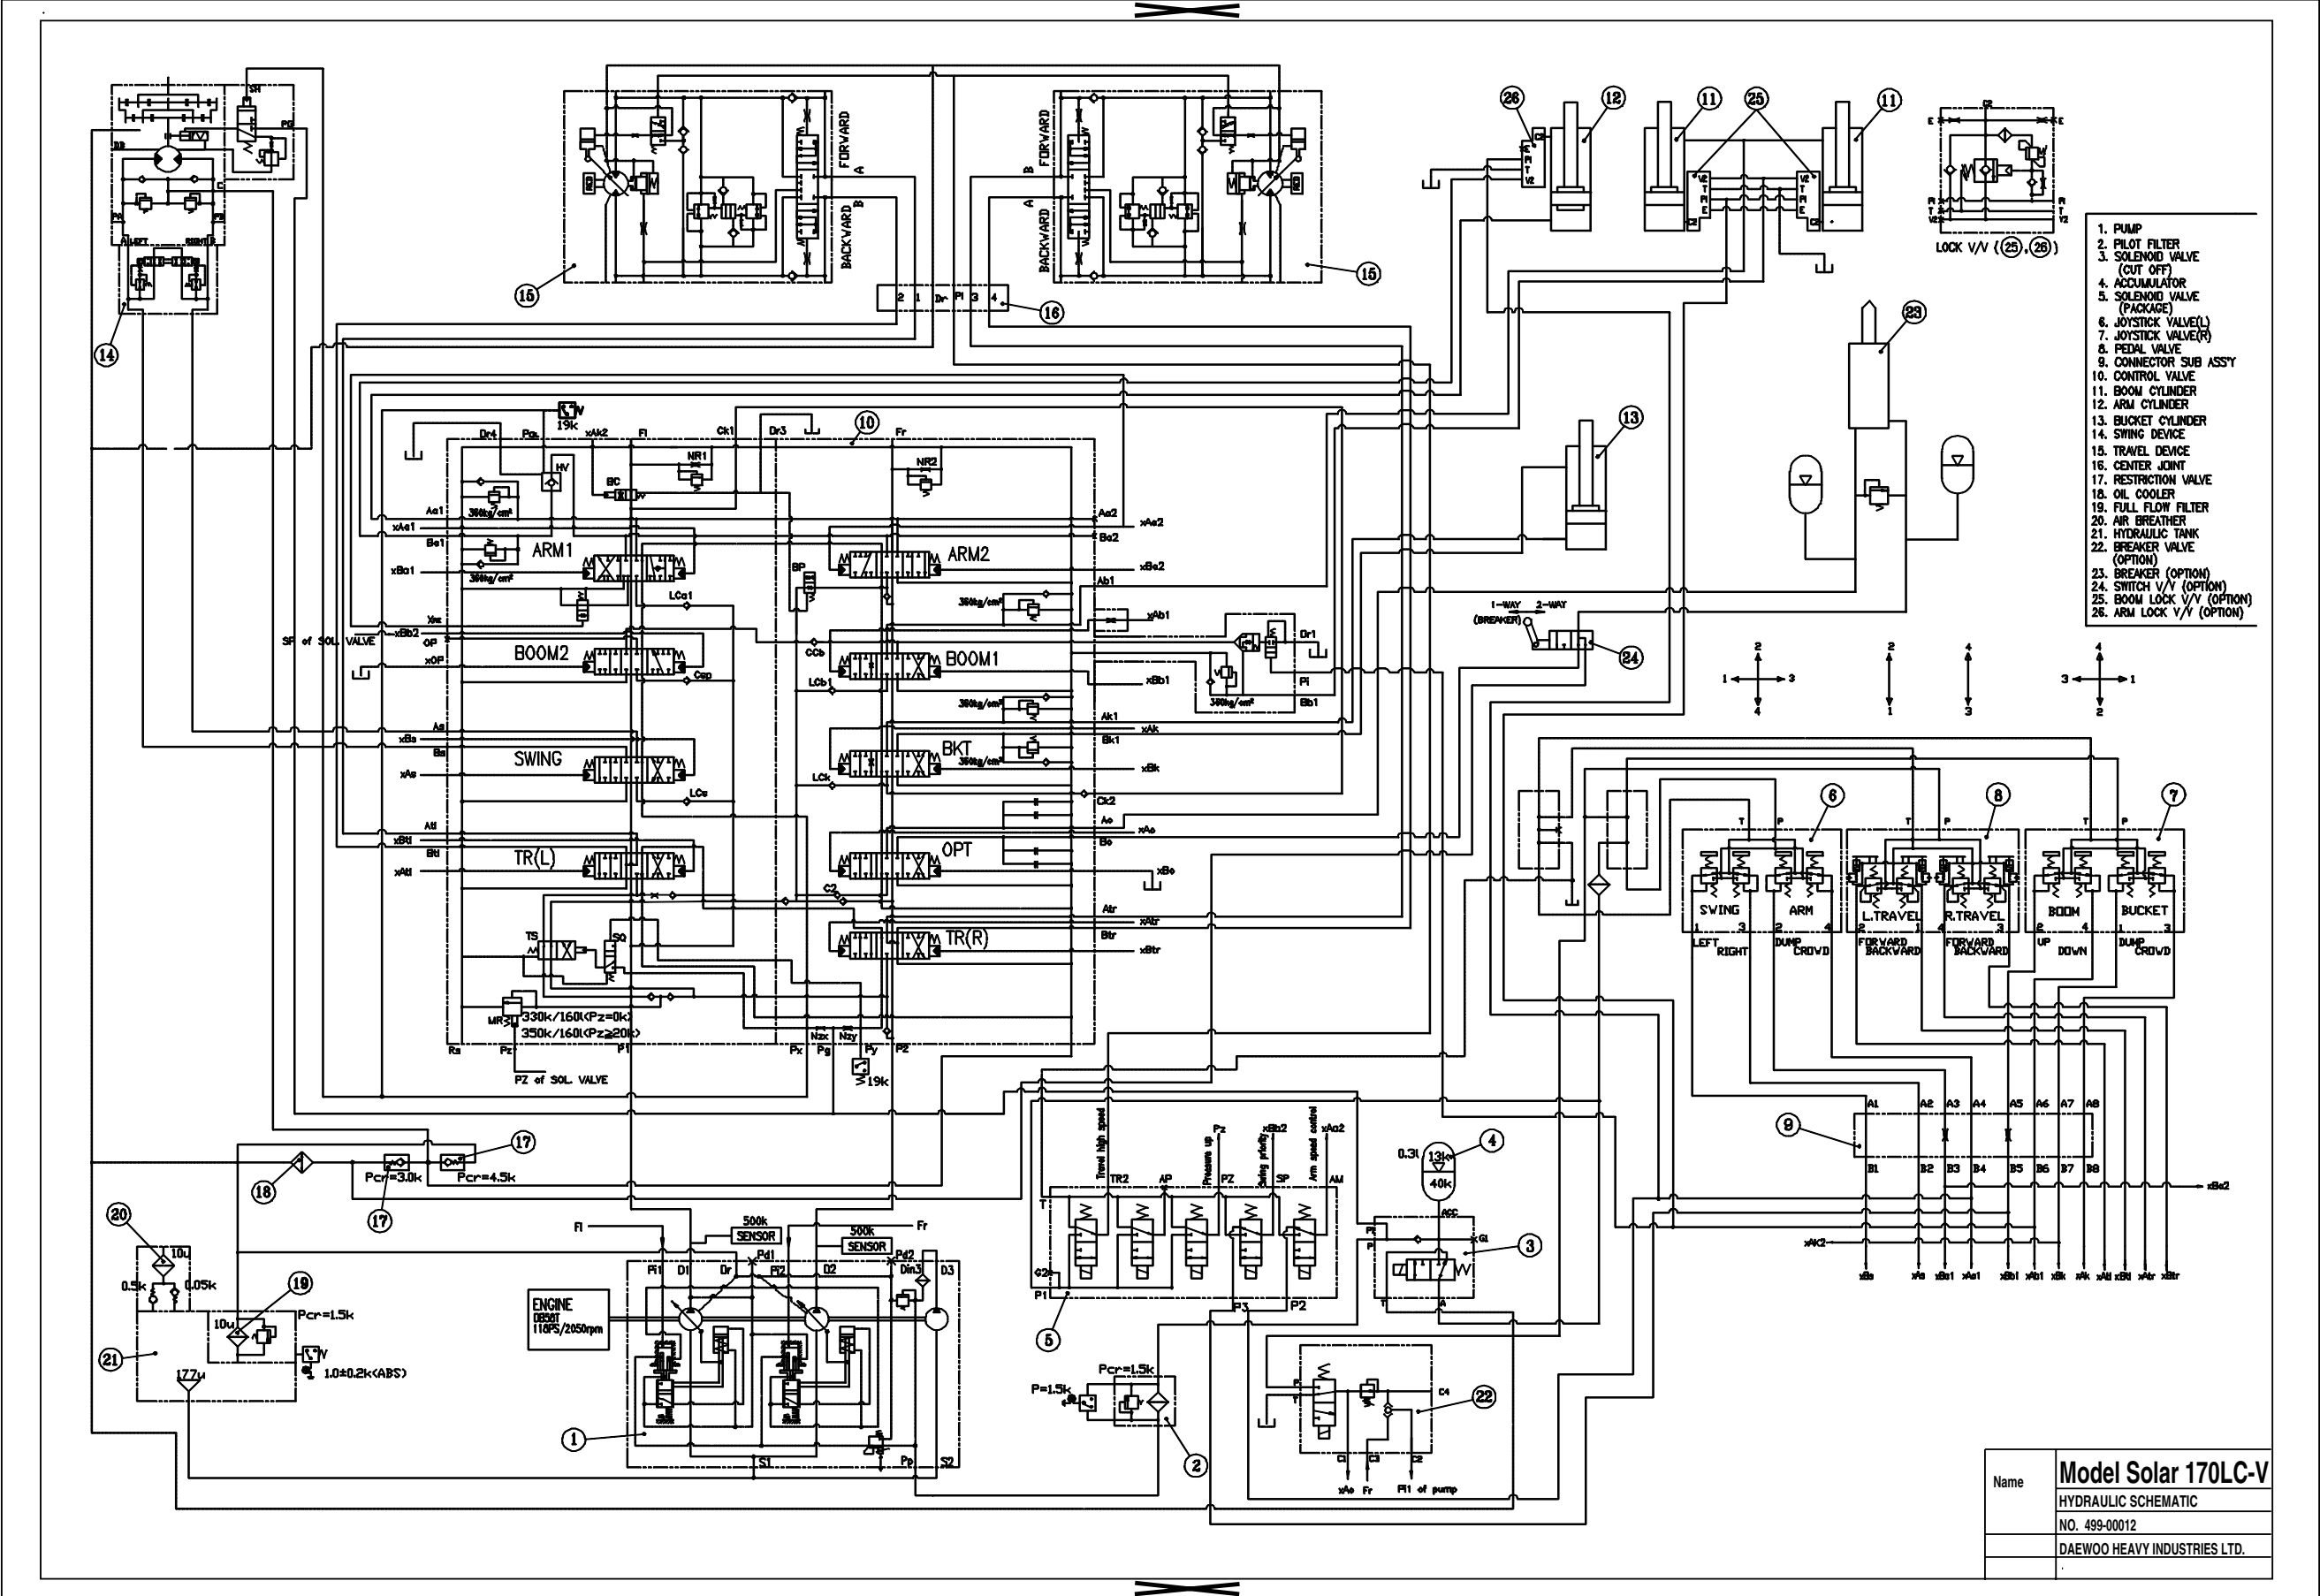


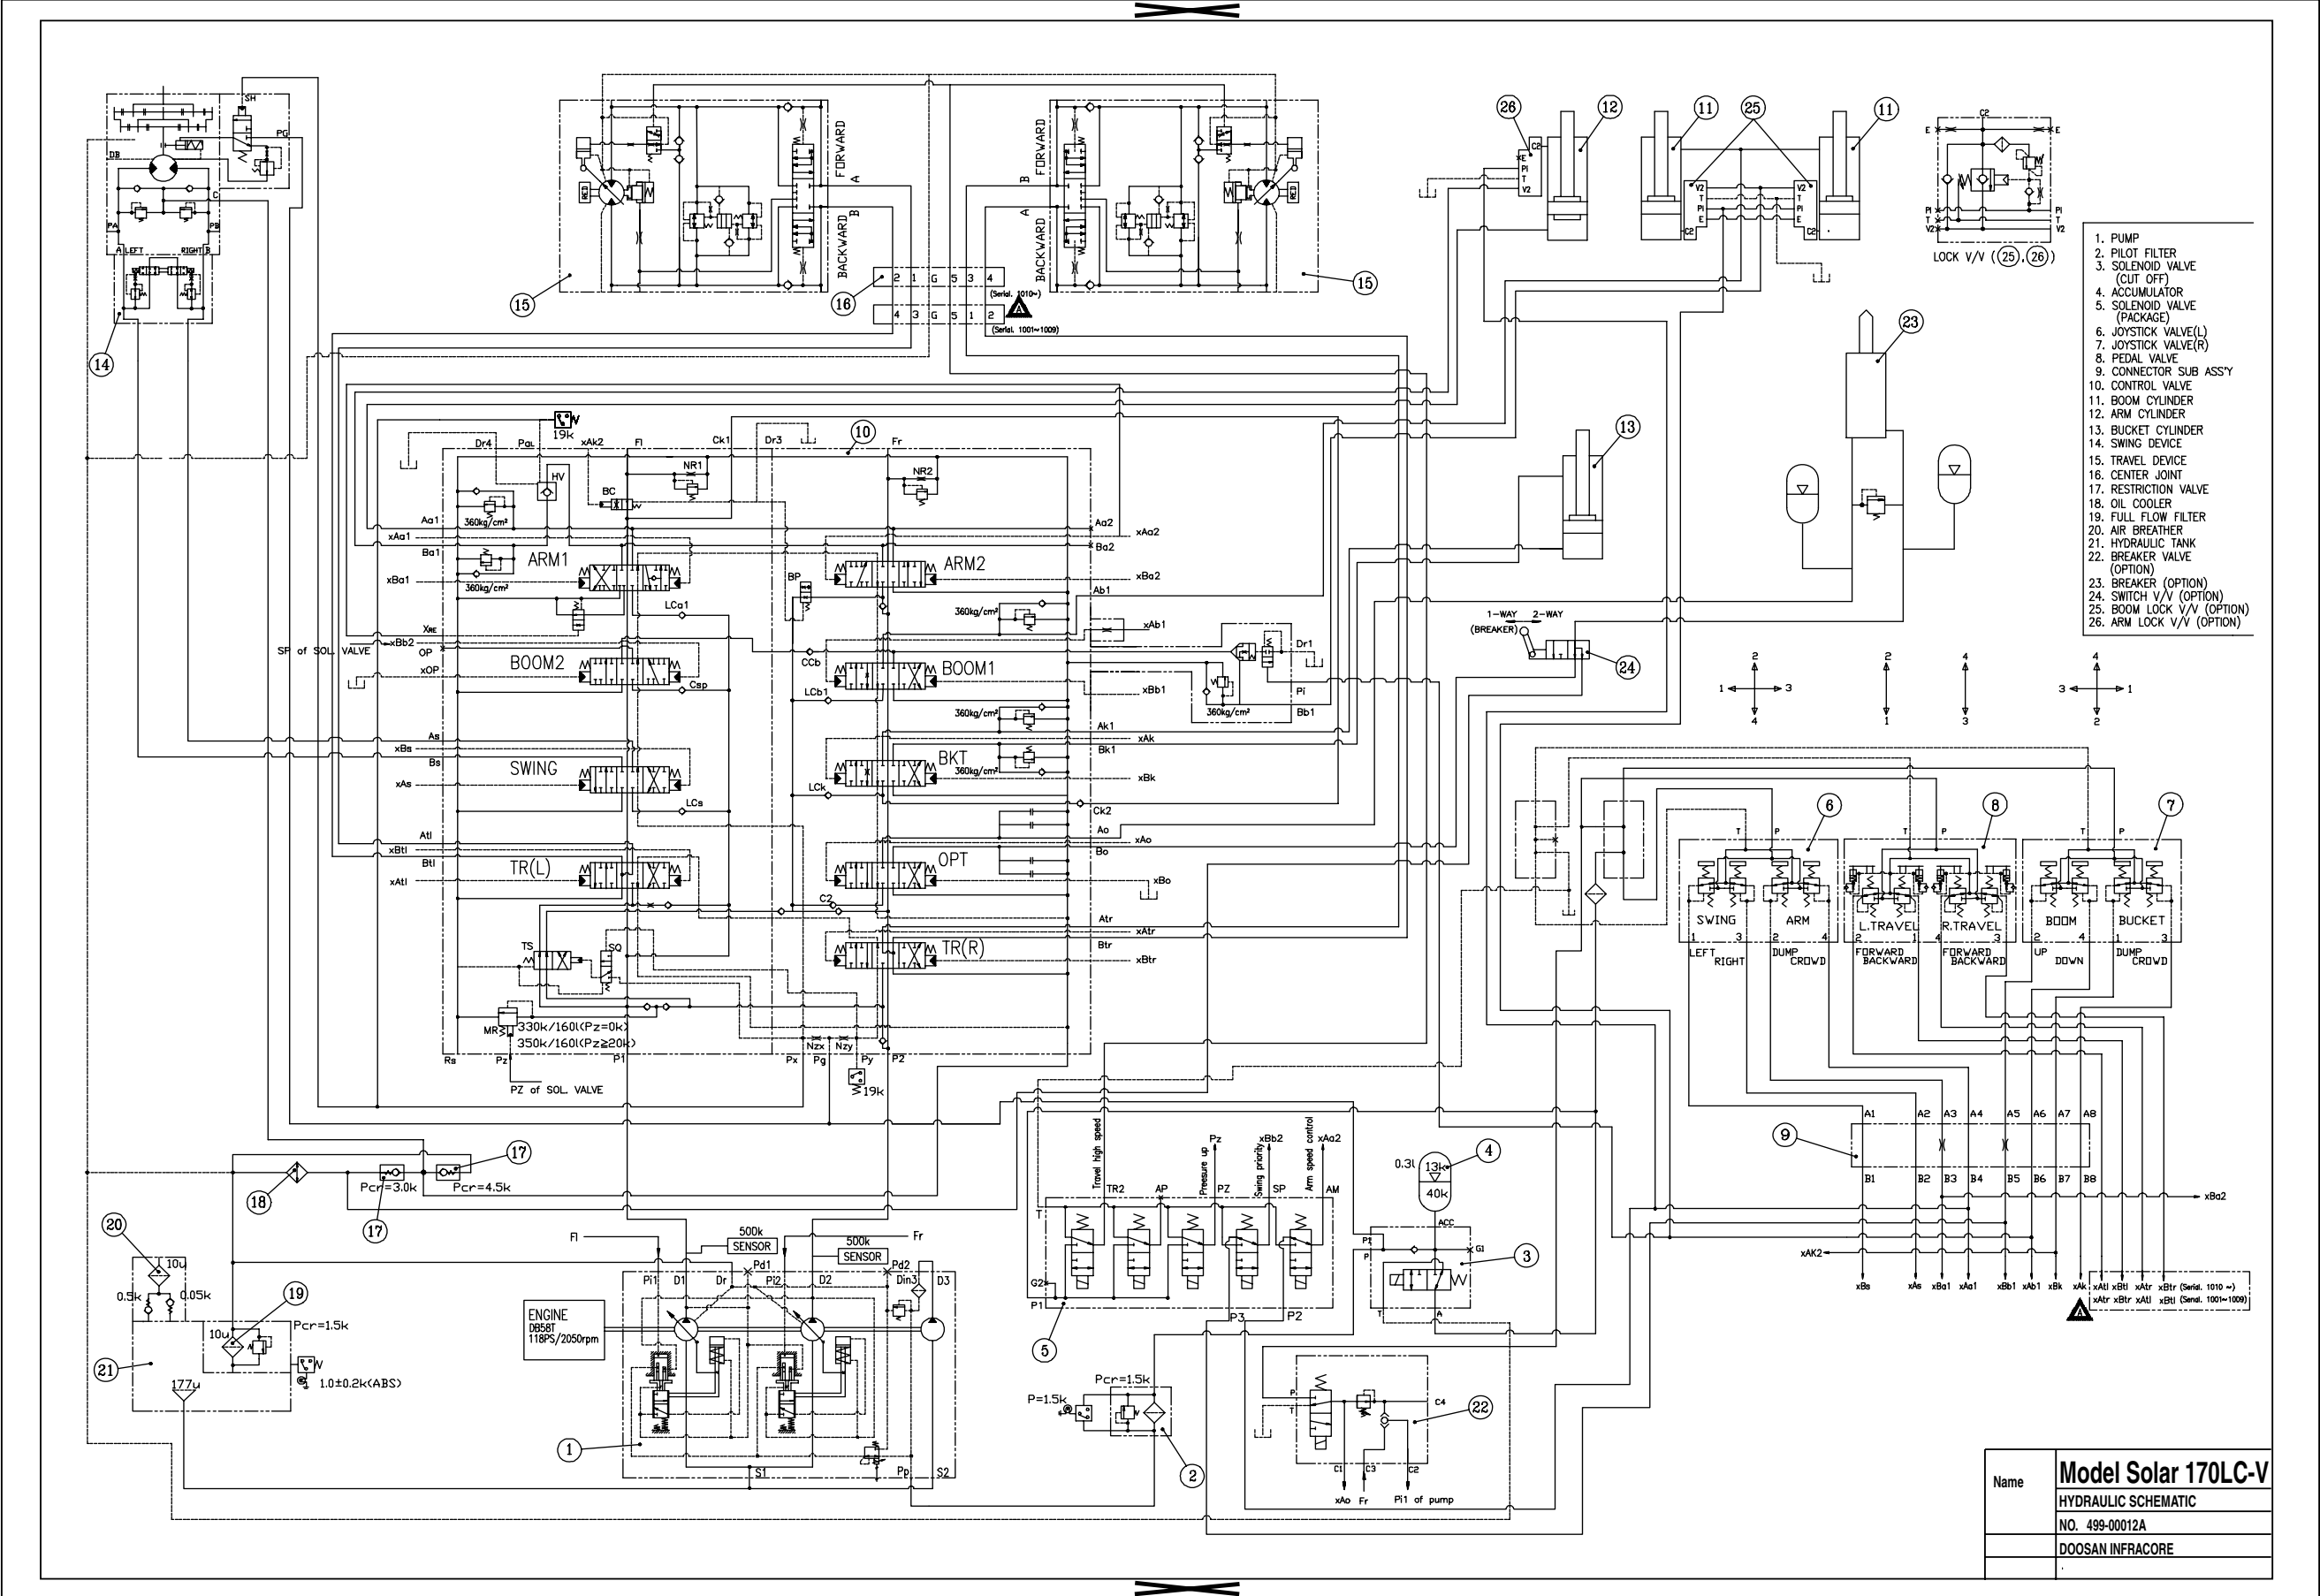

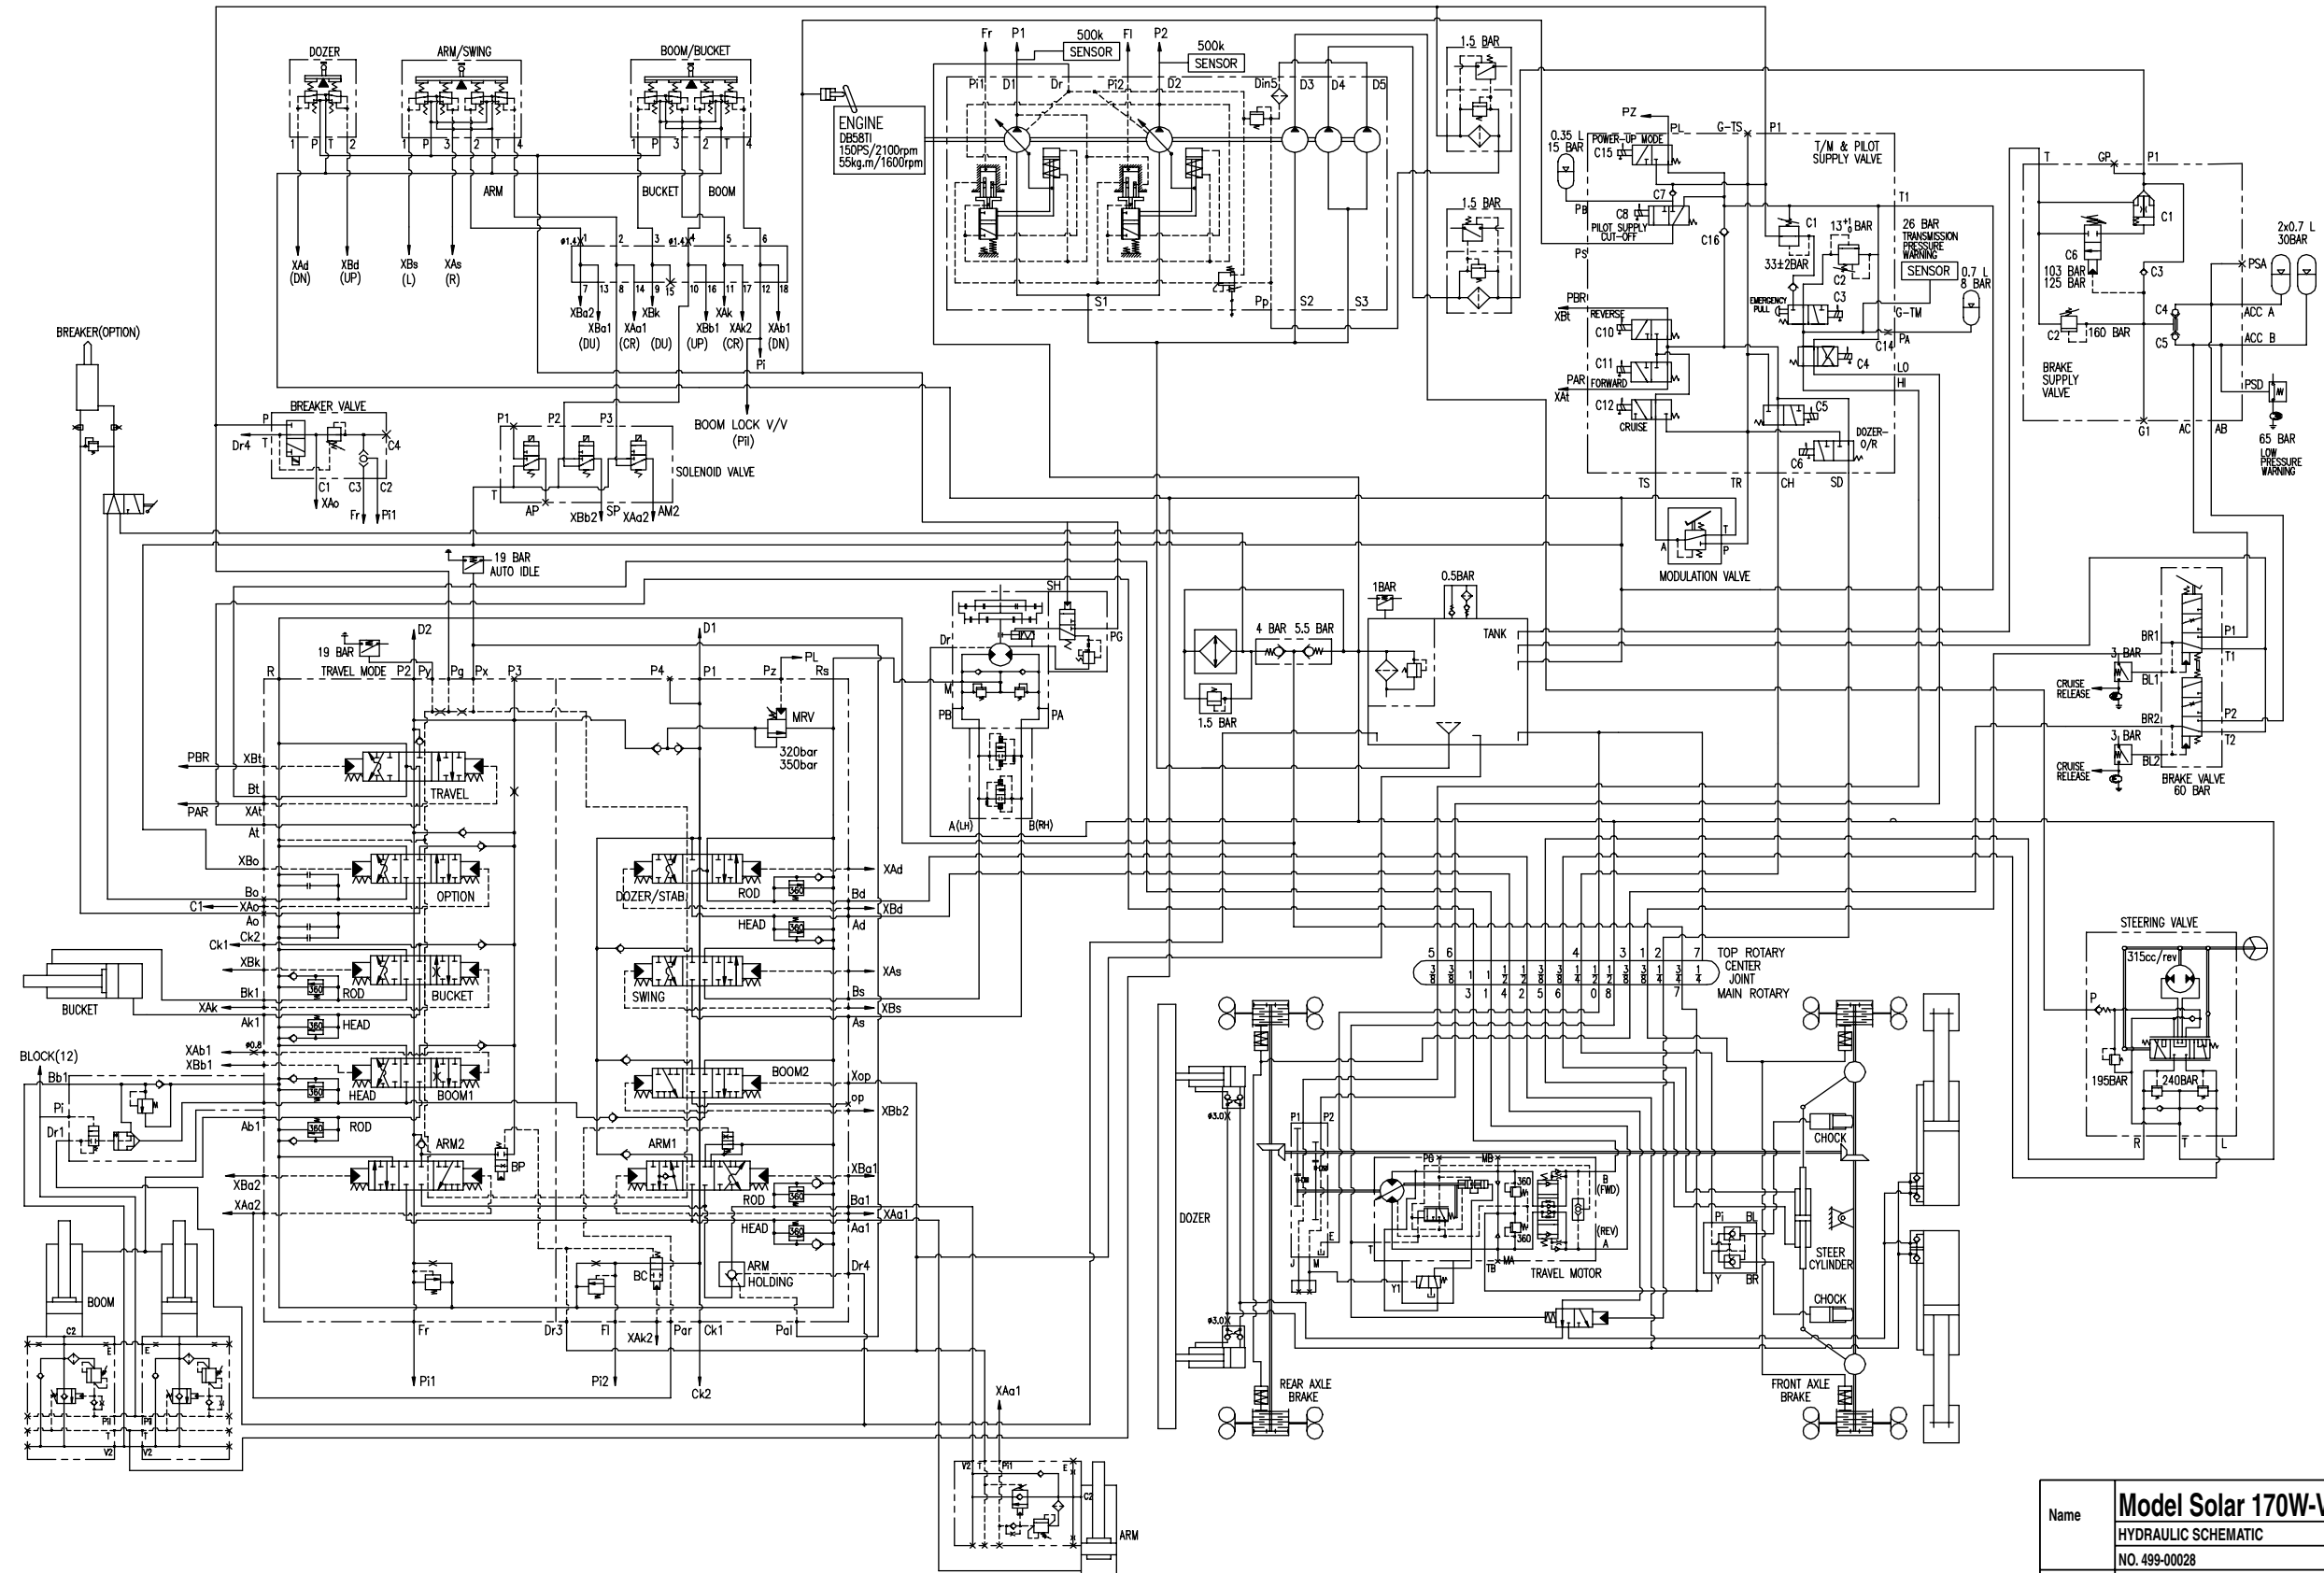


Name	Model Solar 170W-V
	HYDRAULIC SCHEMATIC
	NO. 499-00028
	DOOSAN INFRACORE

HAAA4460

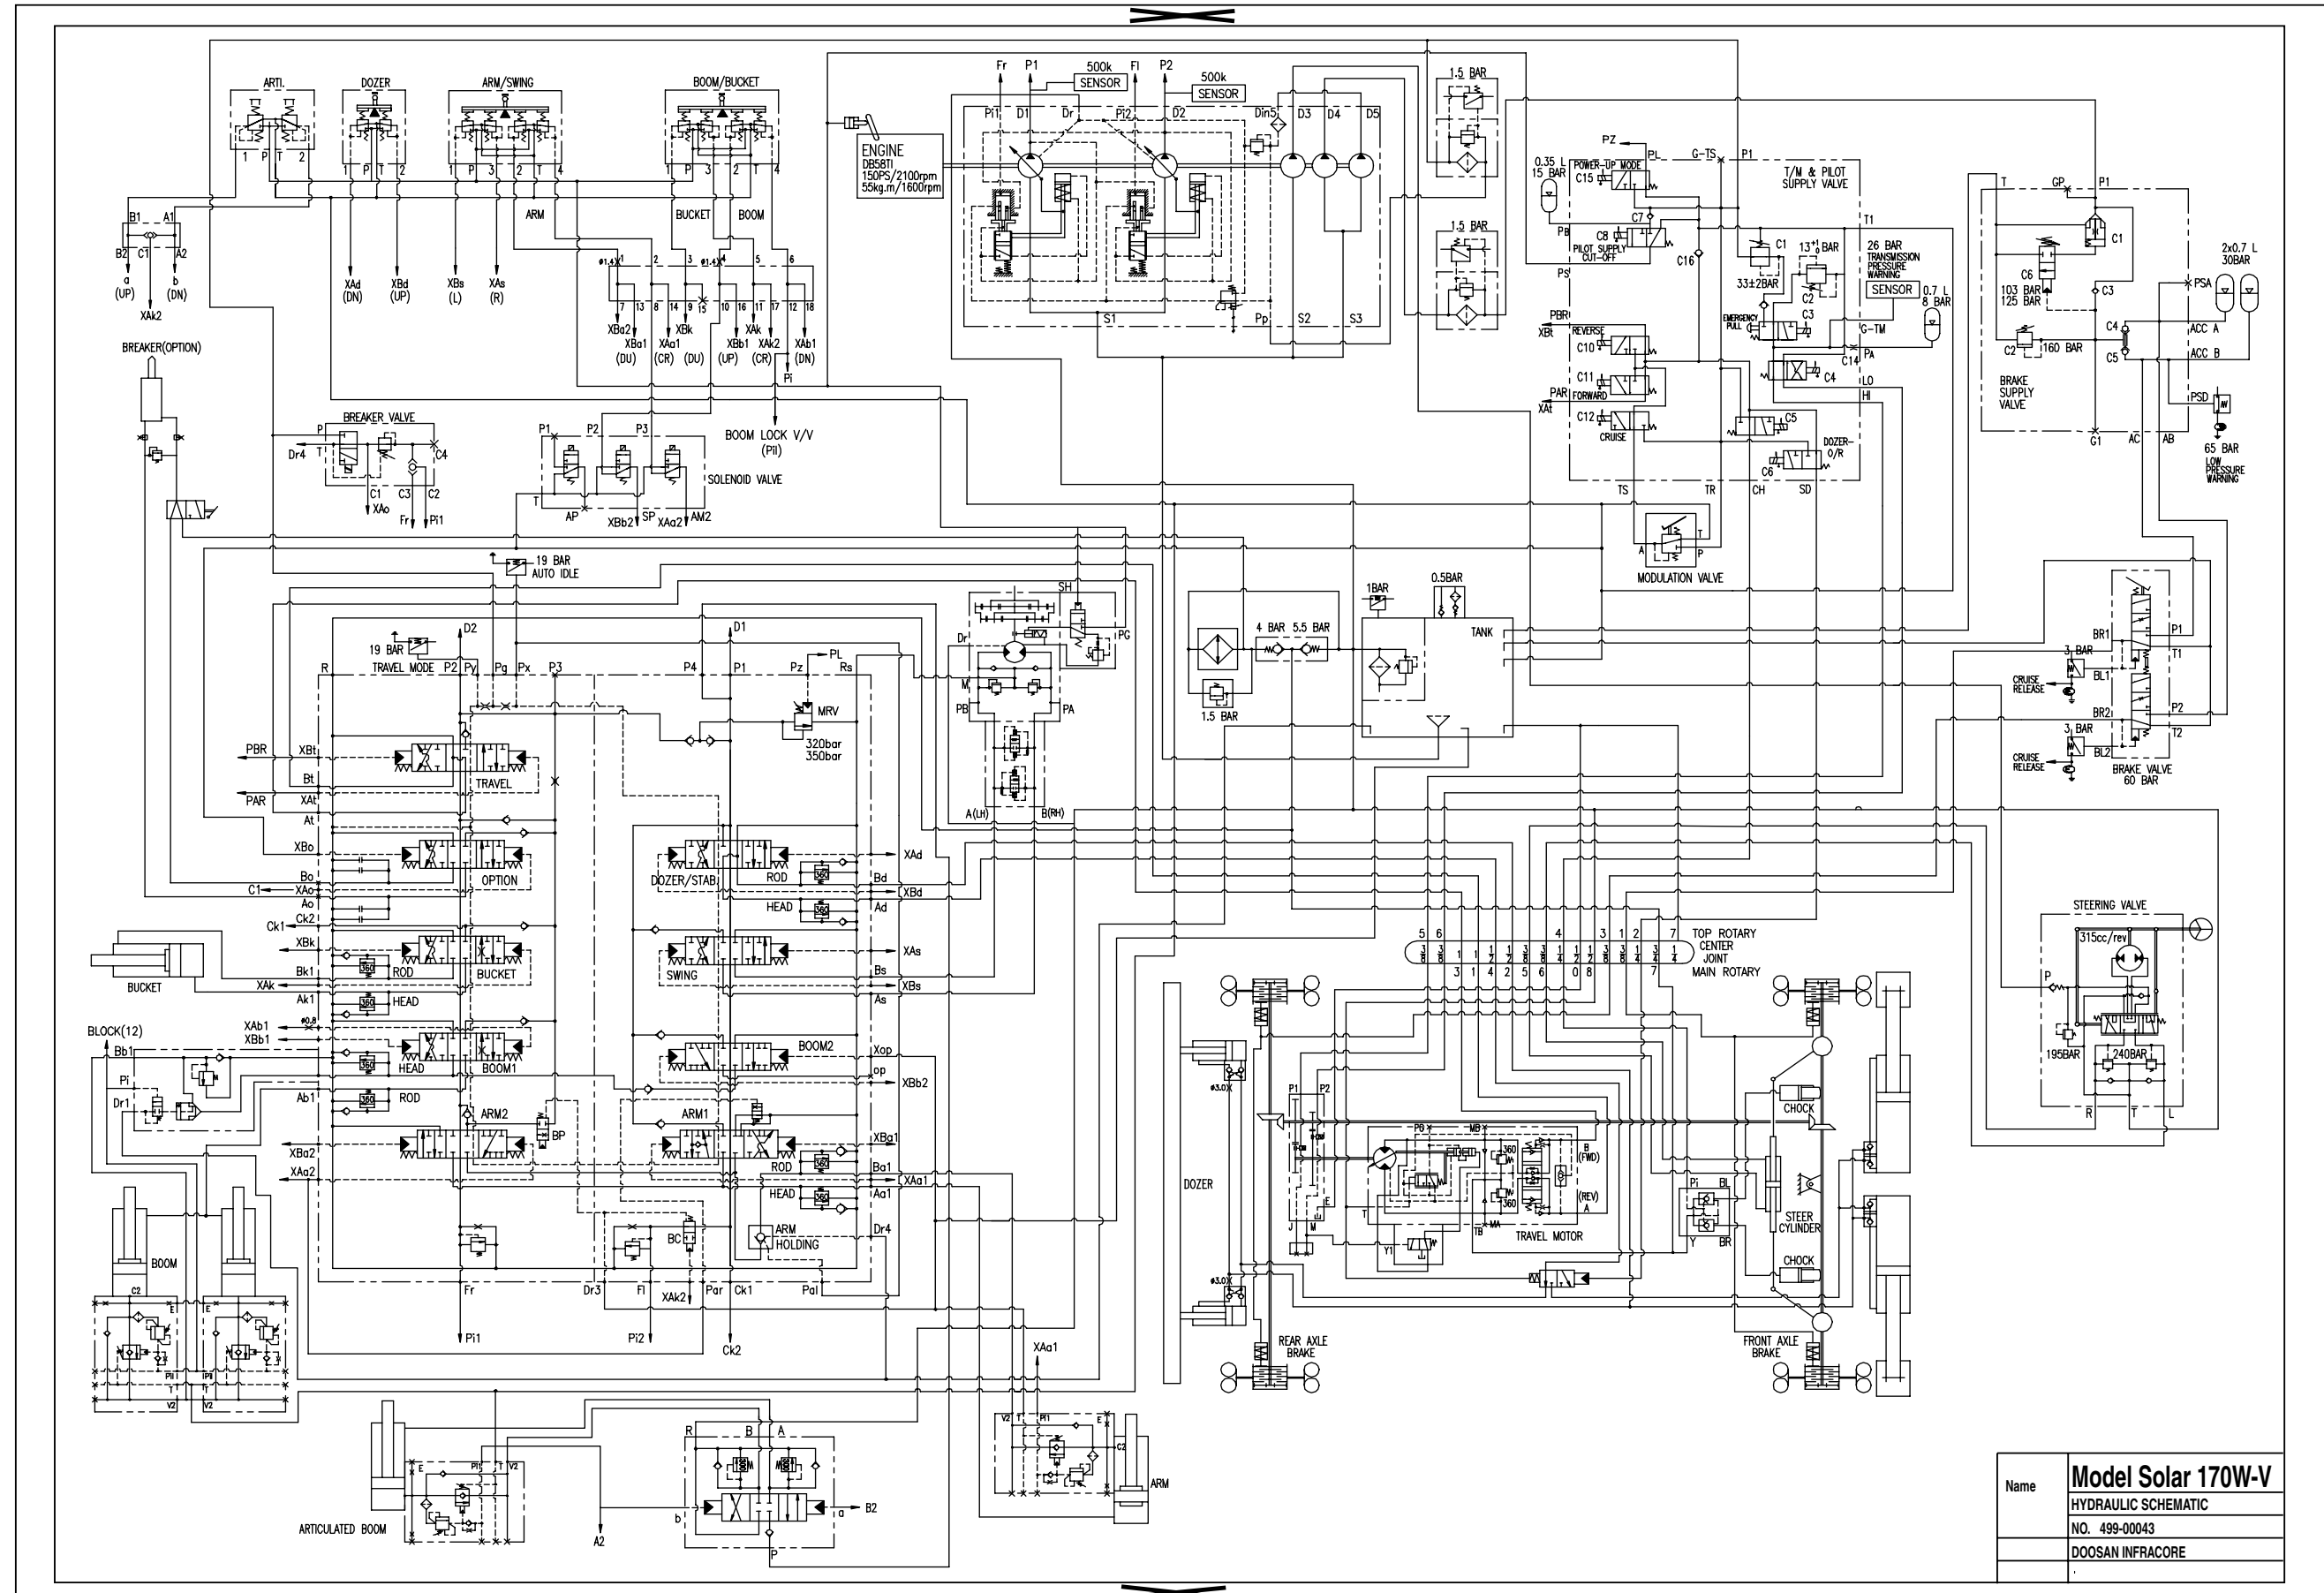


HAAA4470

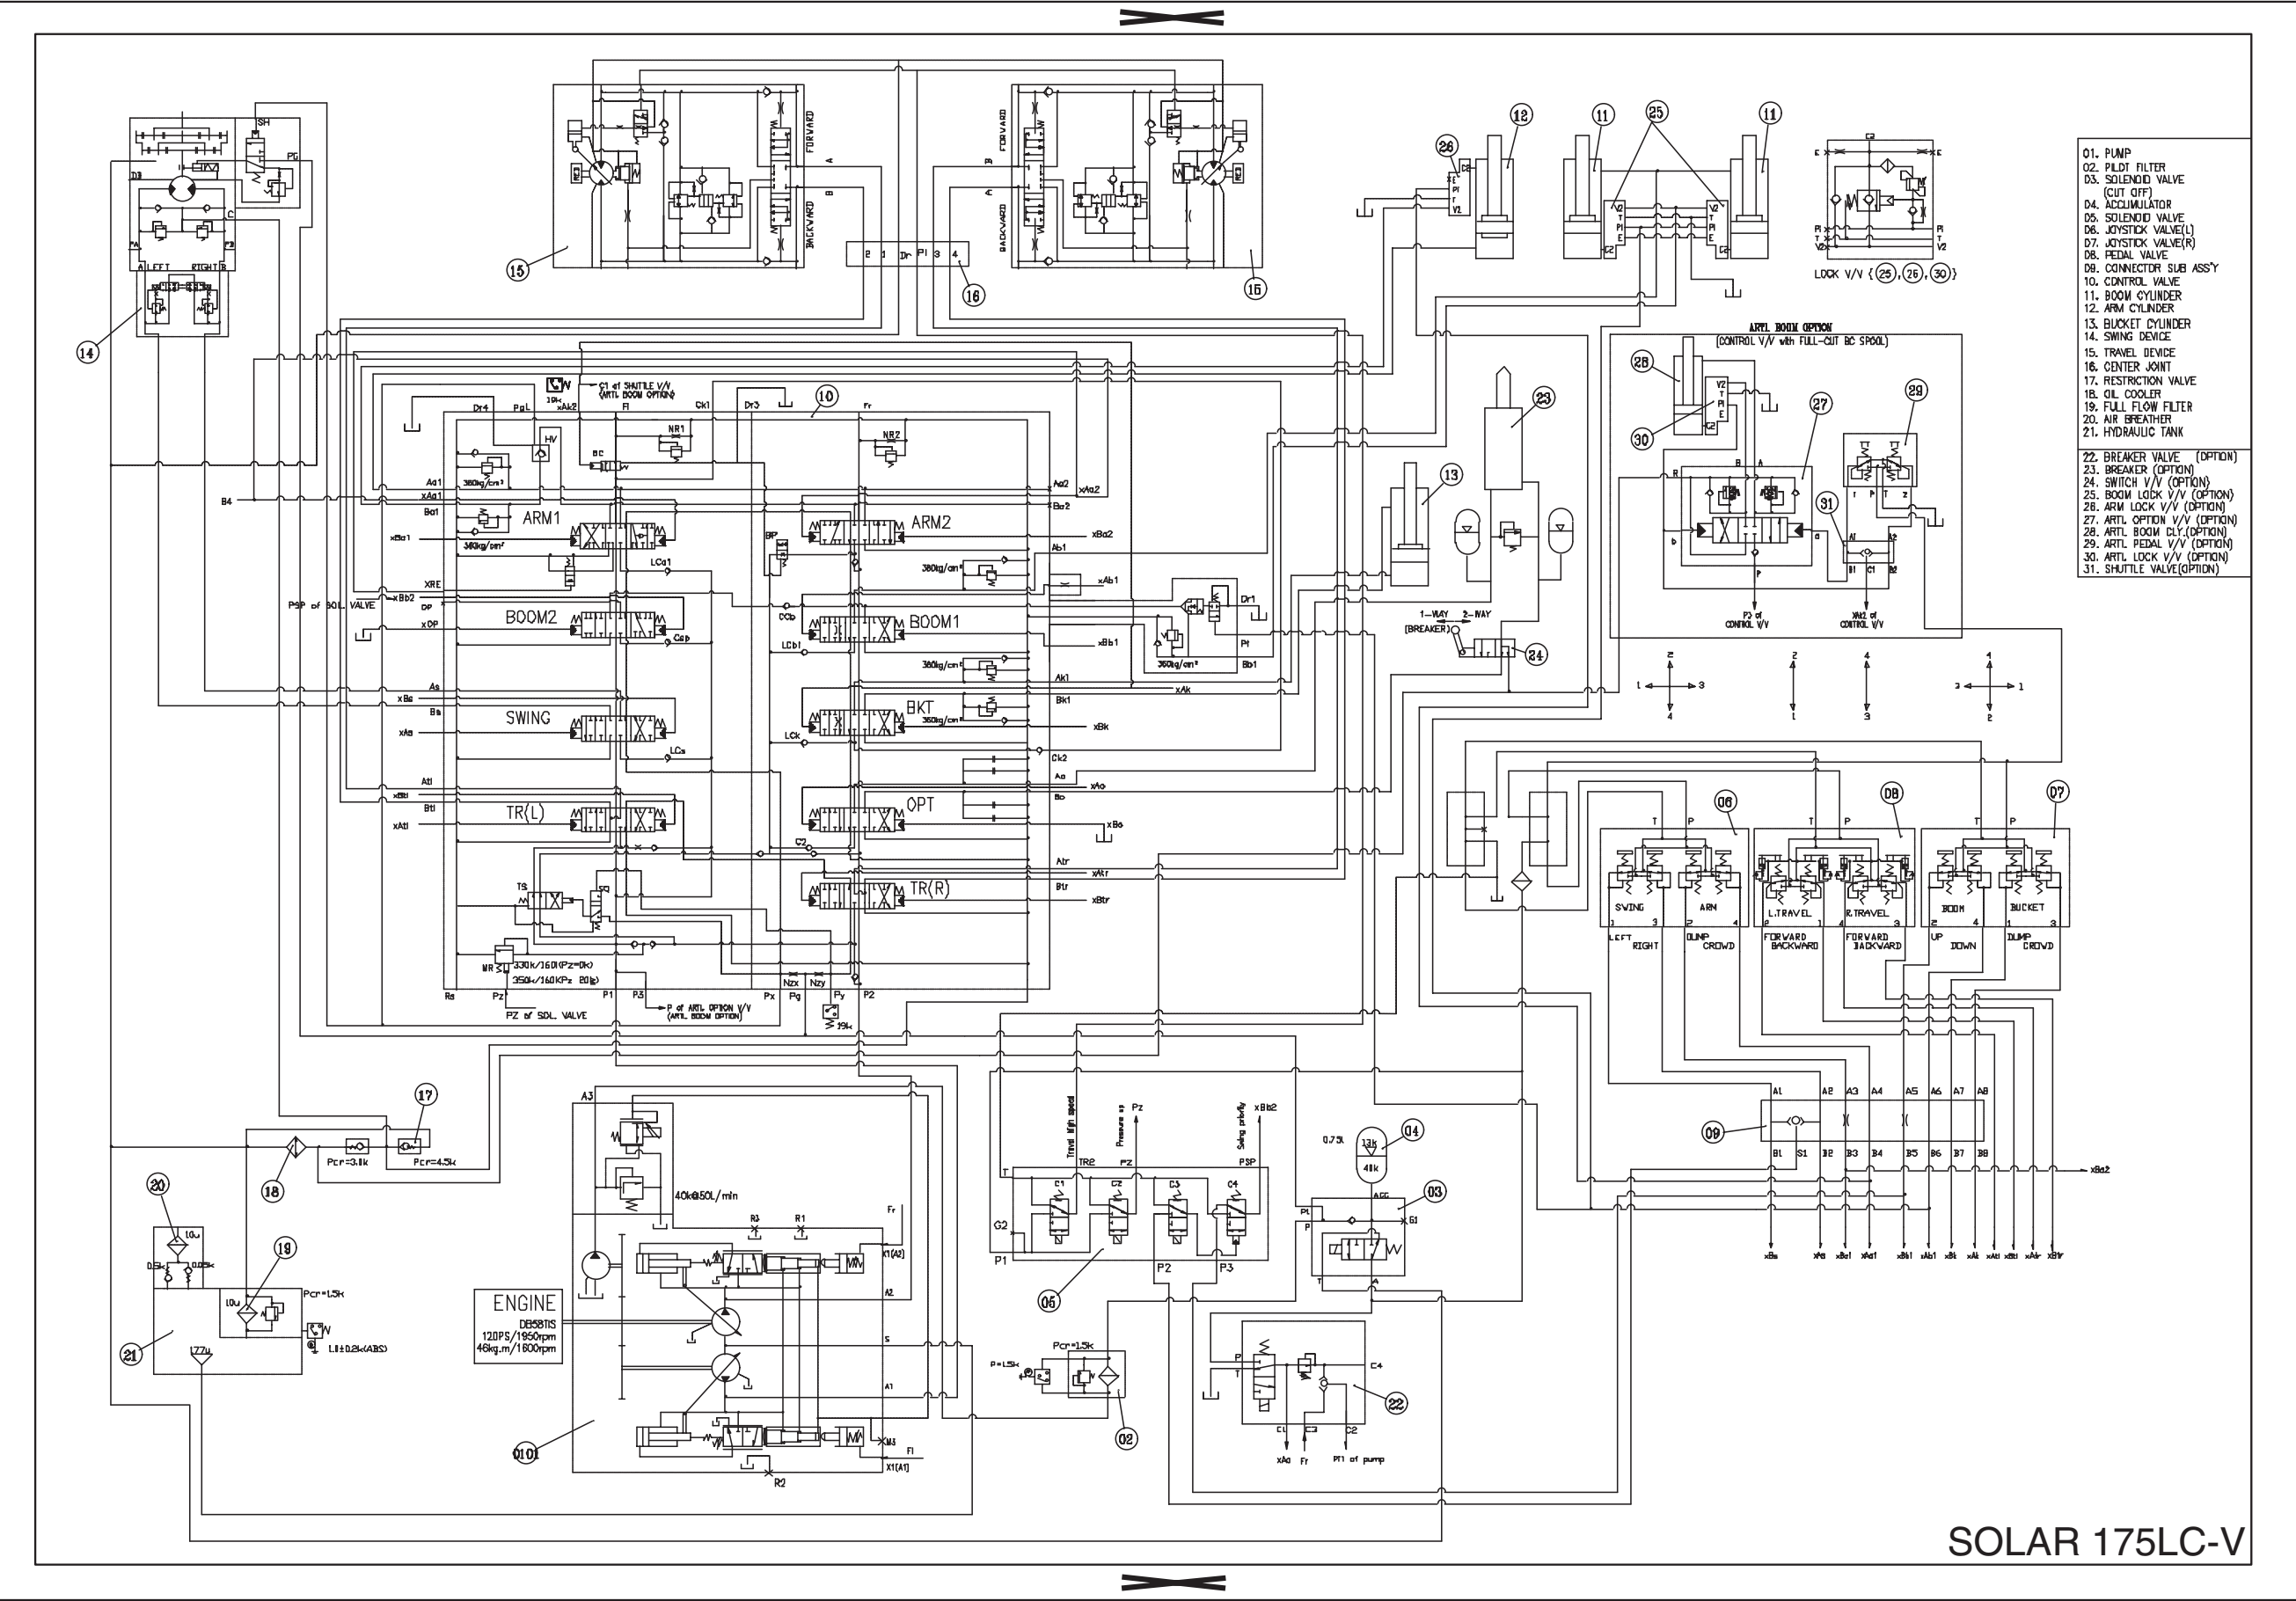


SOLAR 175LC-V

SOLAR 180W-V (WITH STANDARD BOOM)

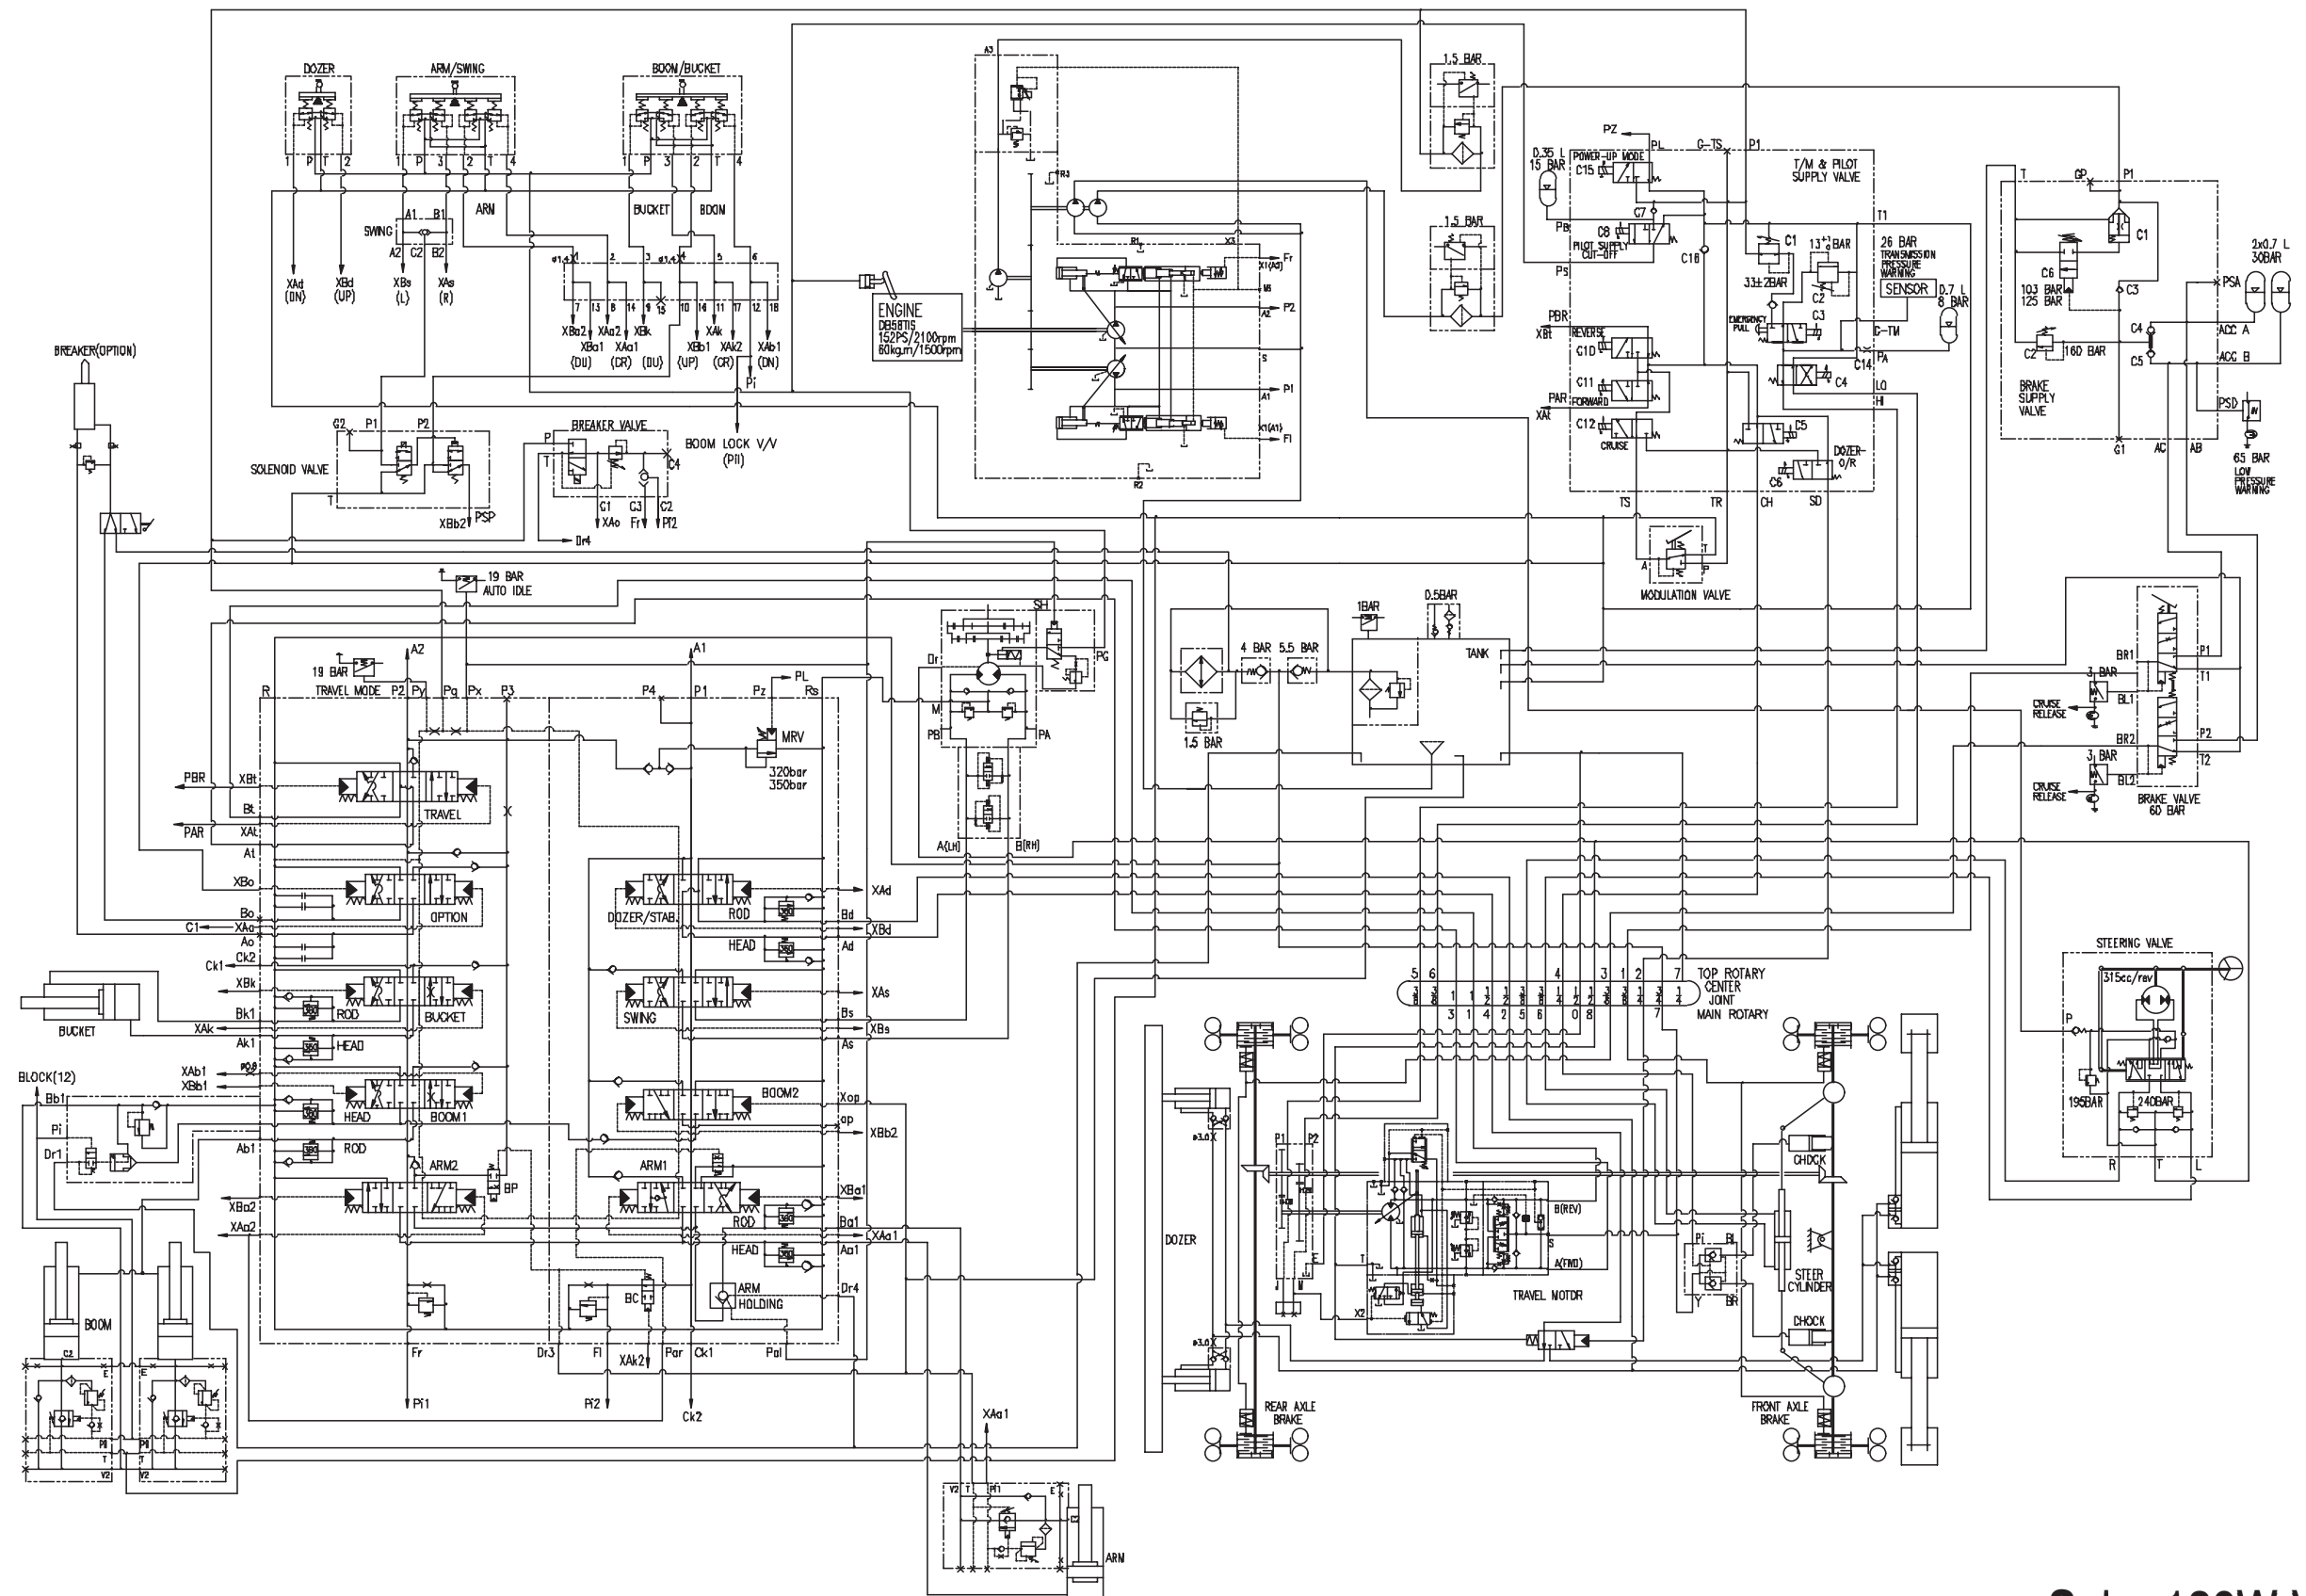


Solar 180W-V


BLS0050L

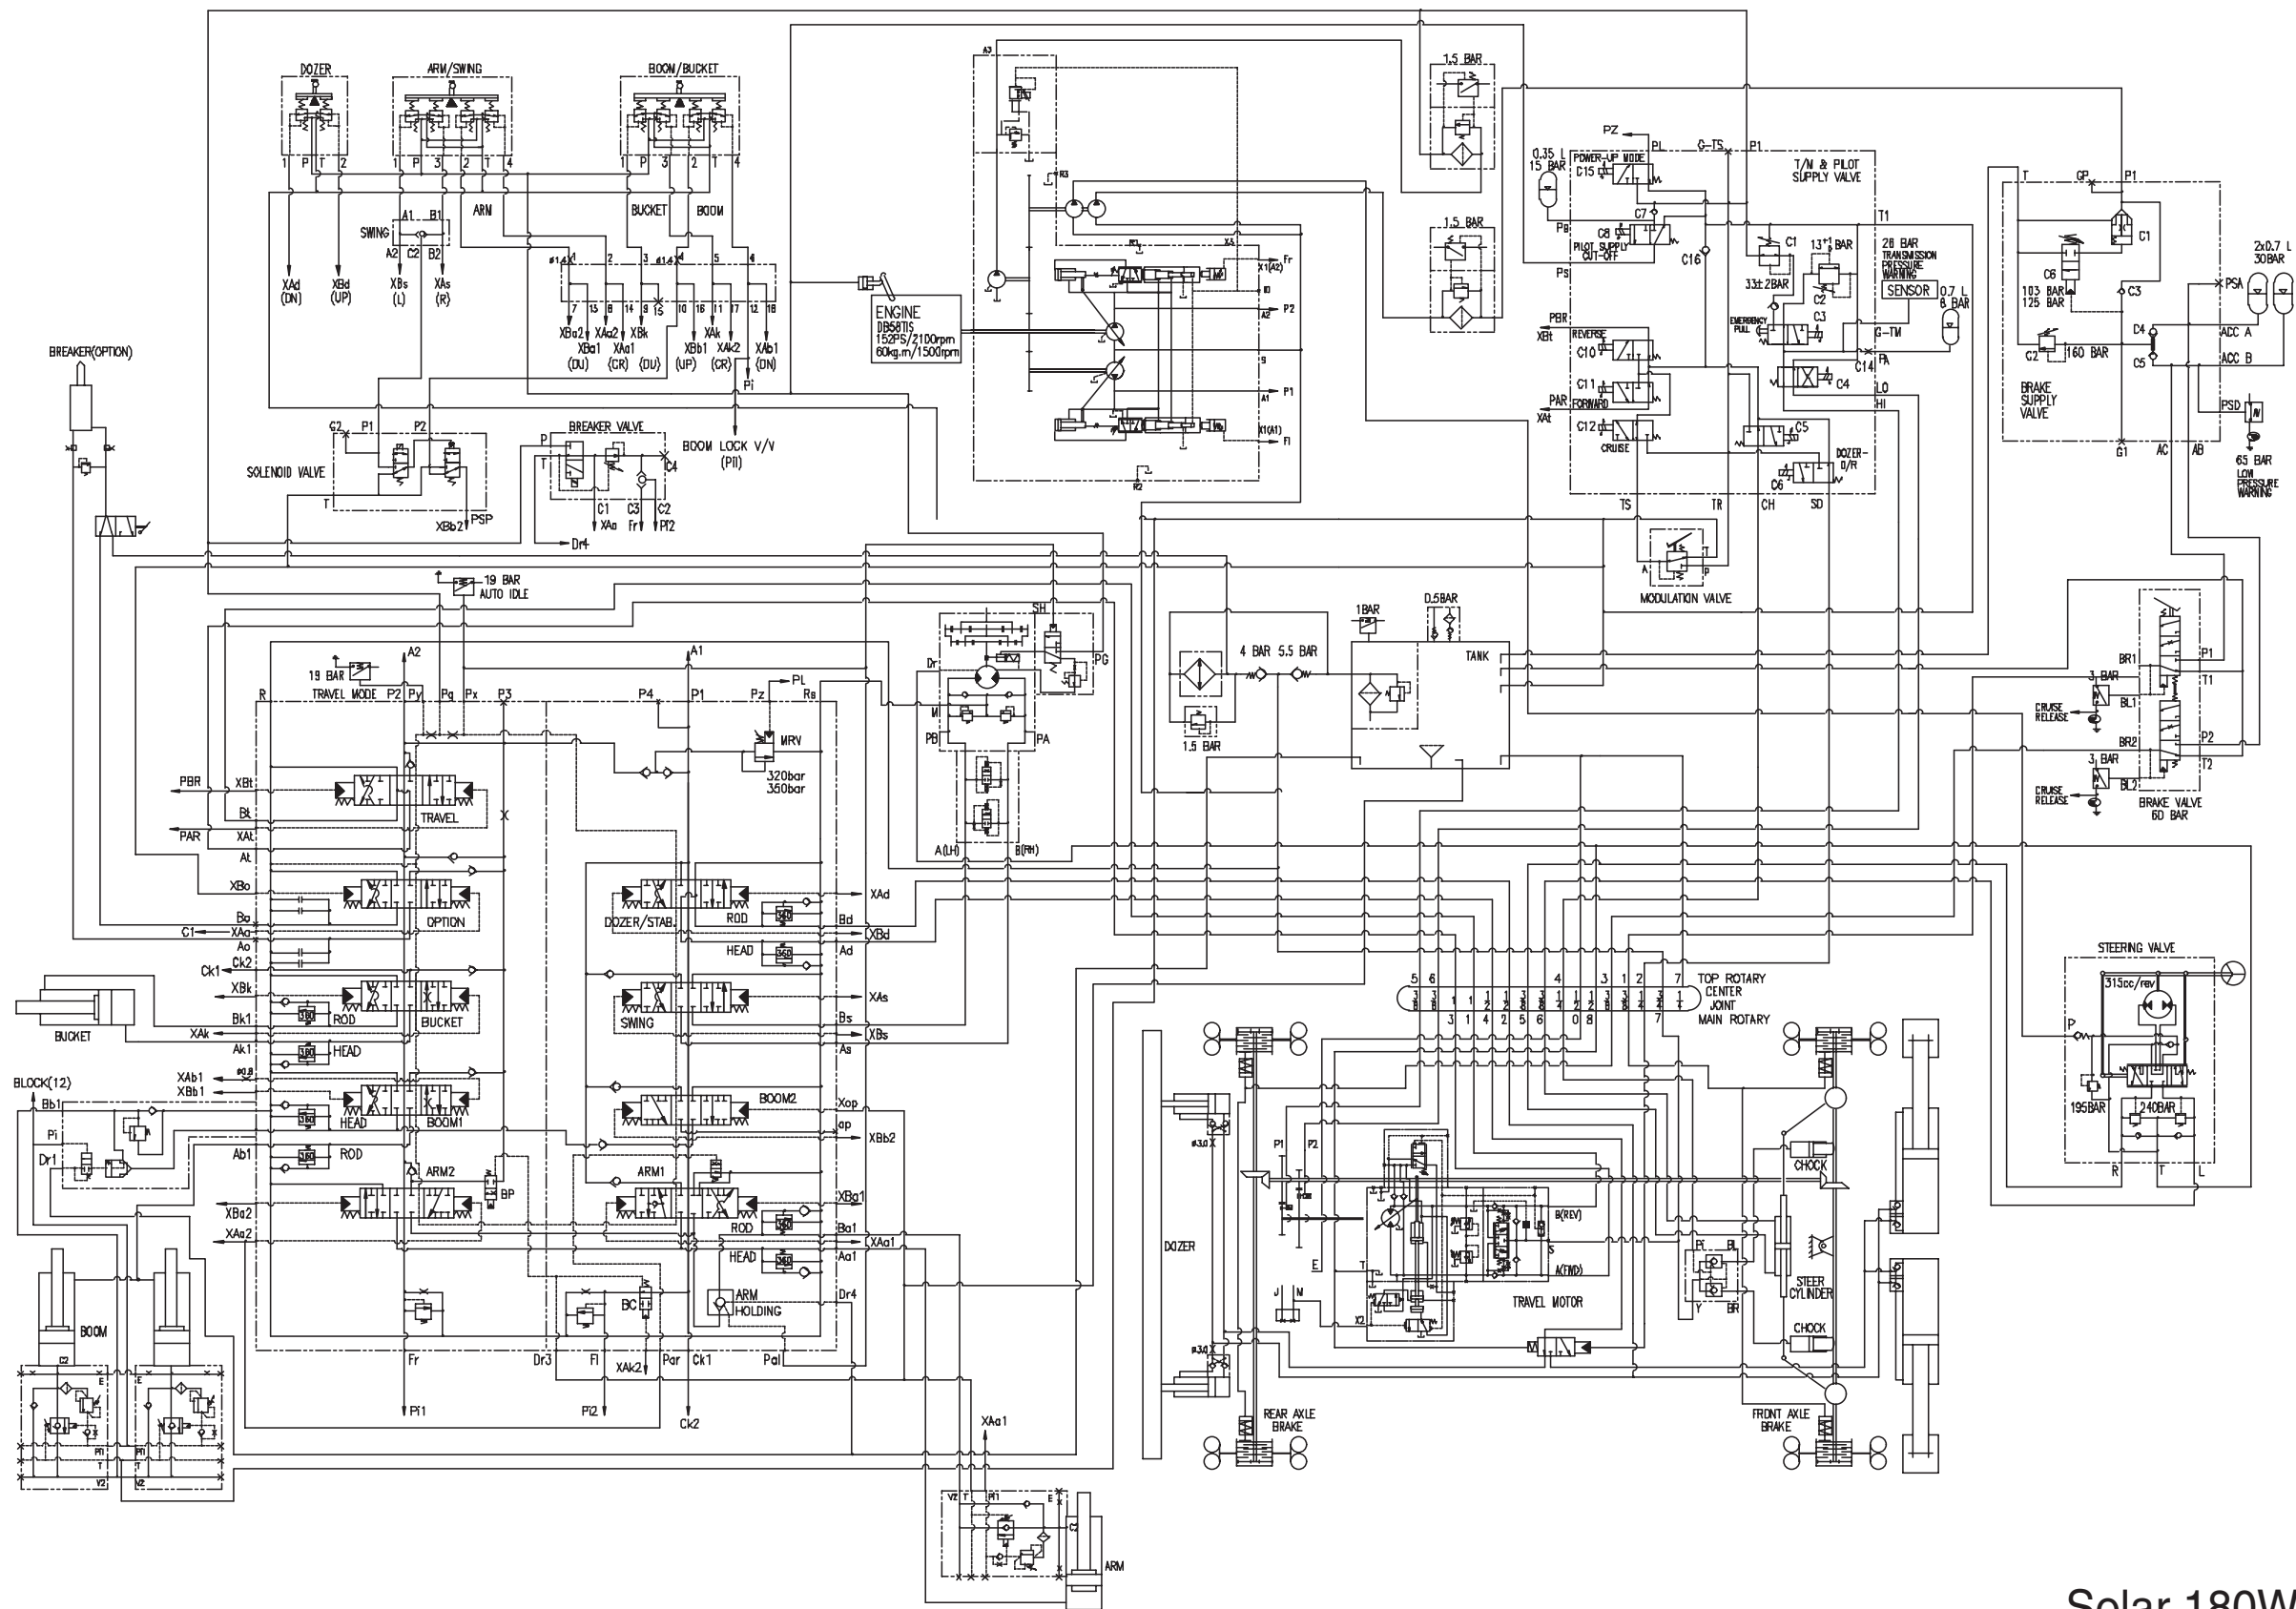


Solar 180W-V

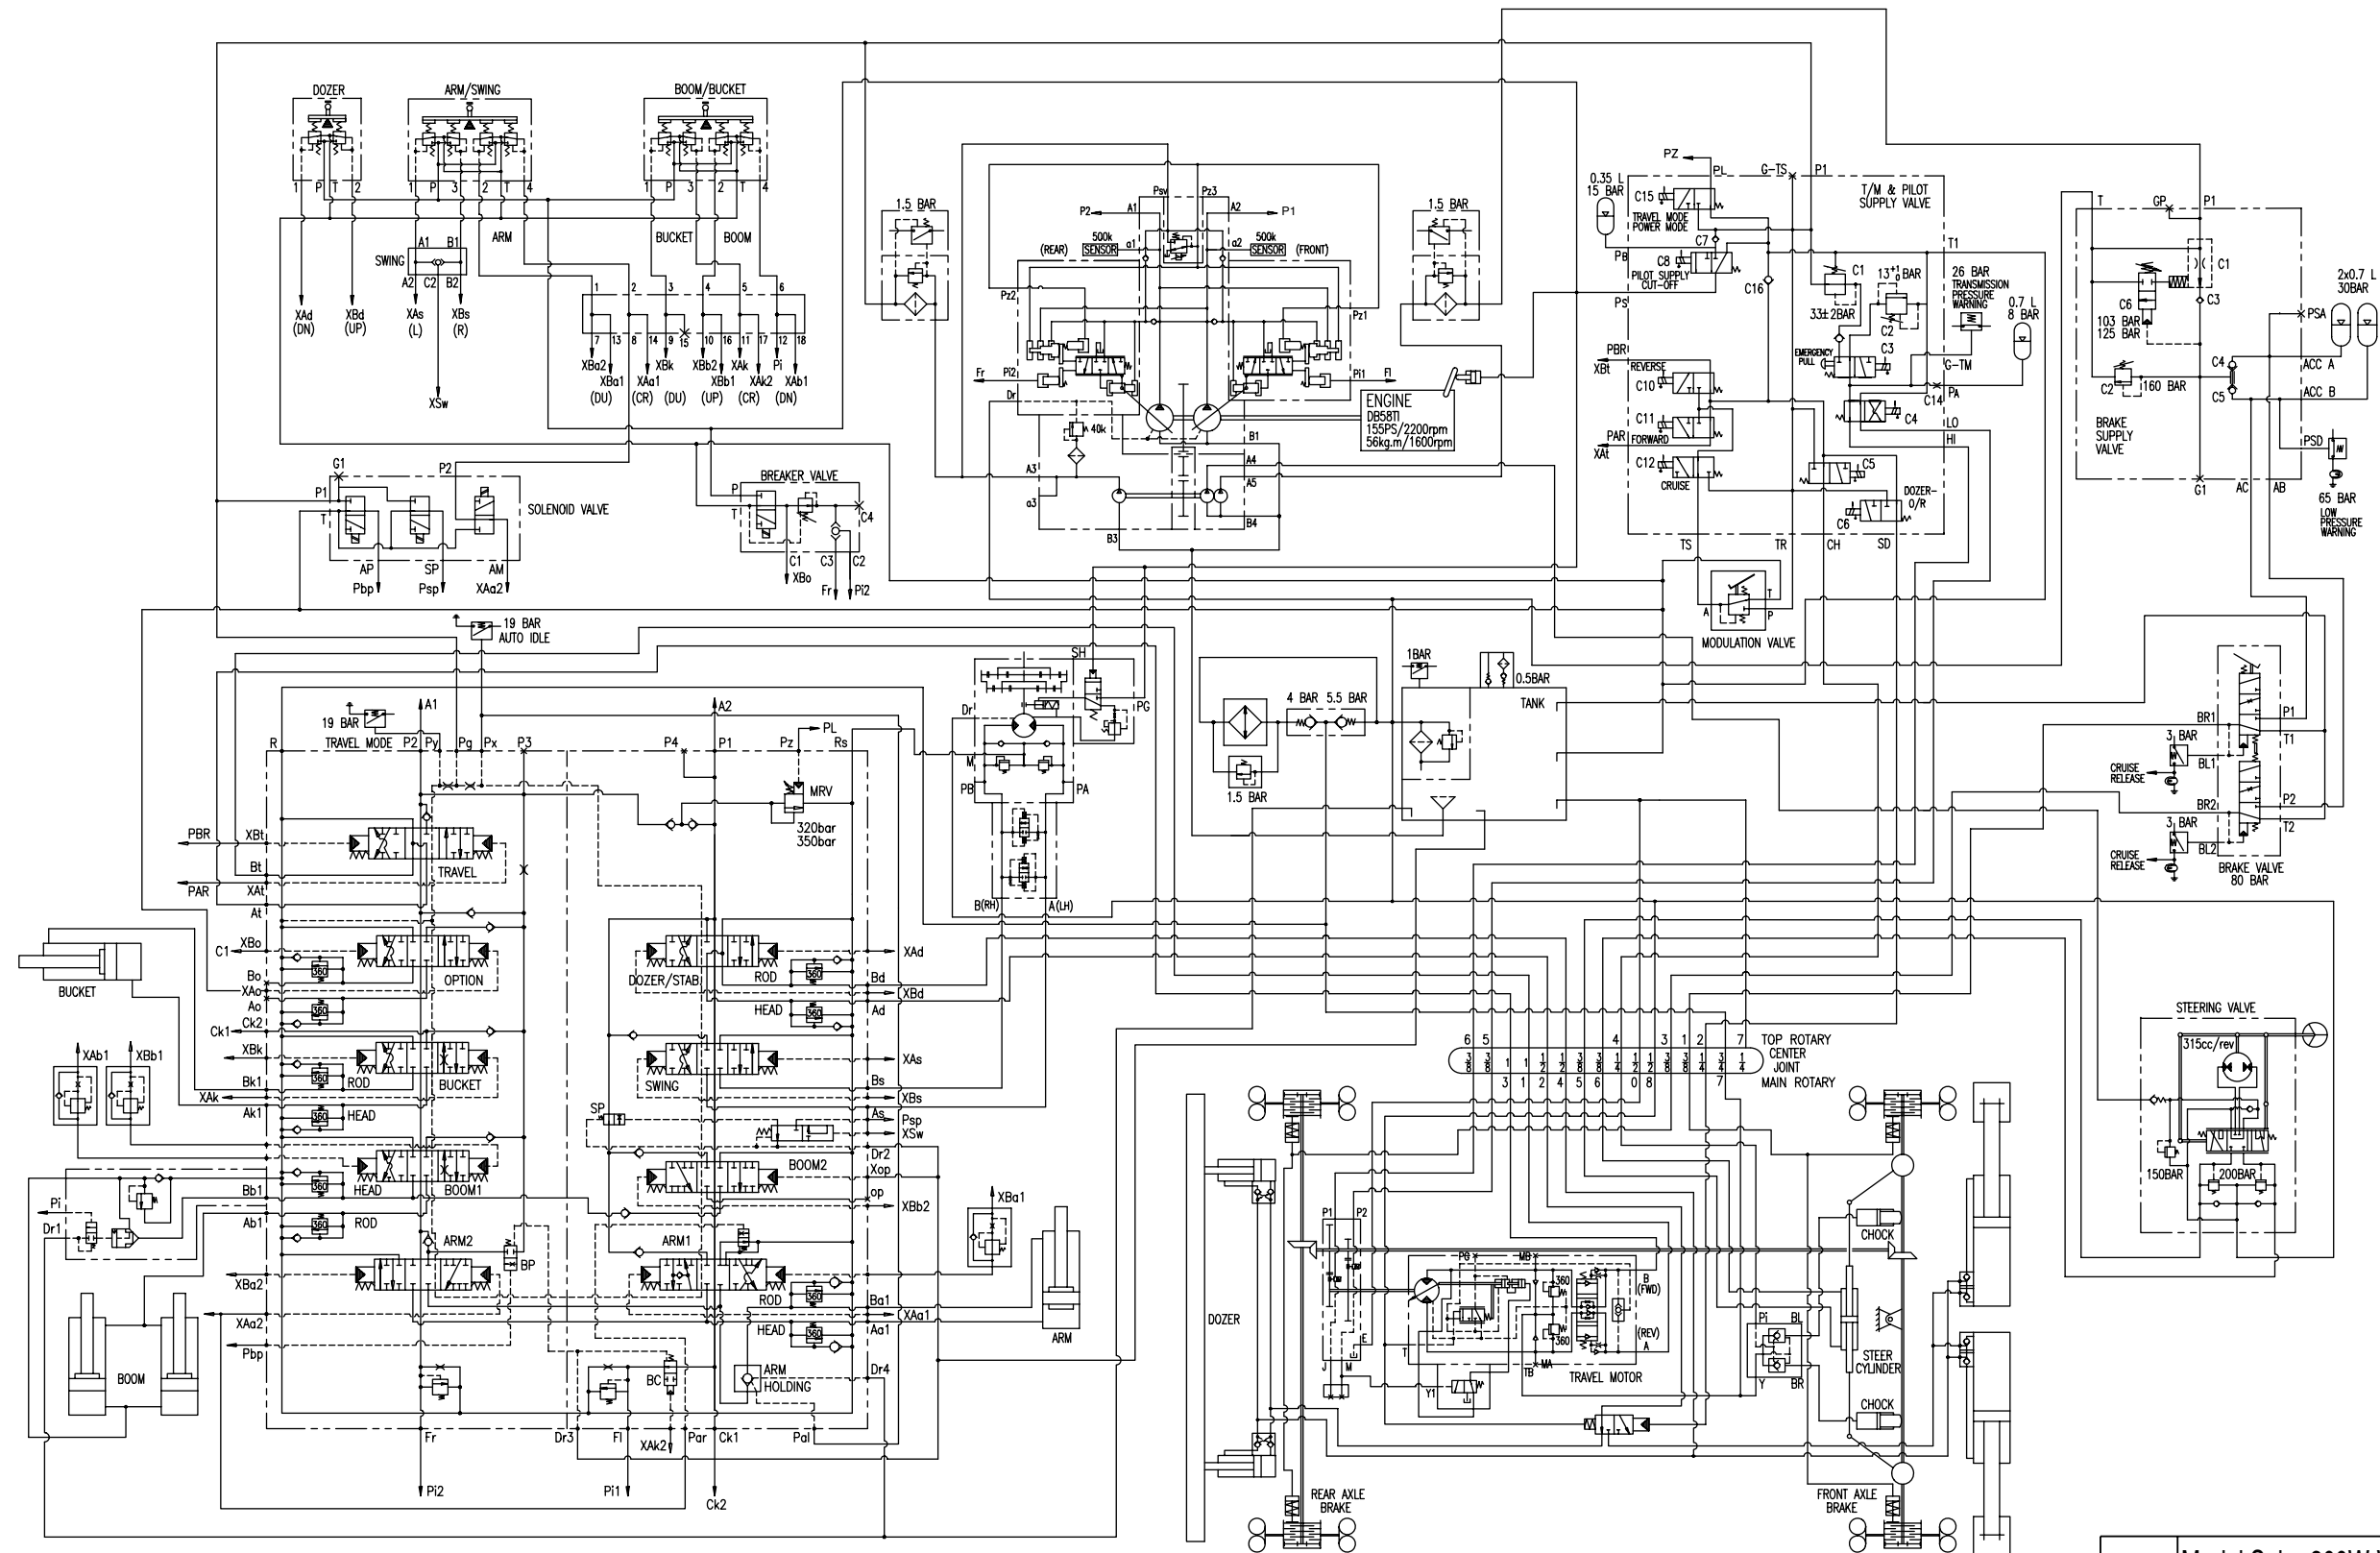


Name	Model Solar 200W-V
	HYDRAULIC SCHEMATIC
	NO. HAAA2680
	DOOSAN INFRACORE
	.

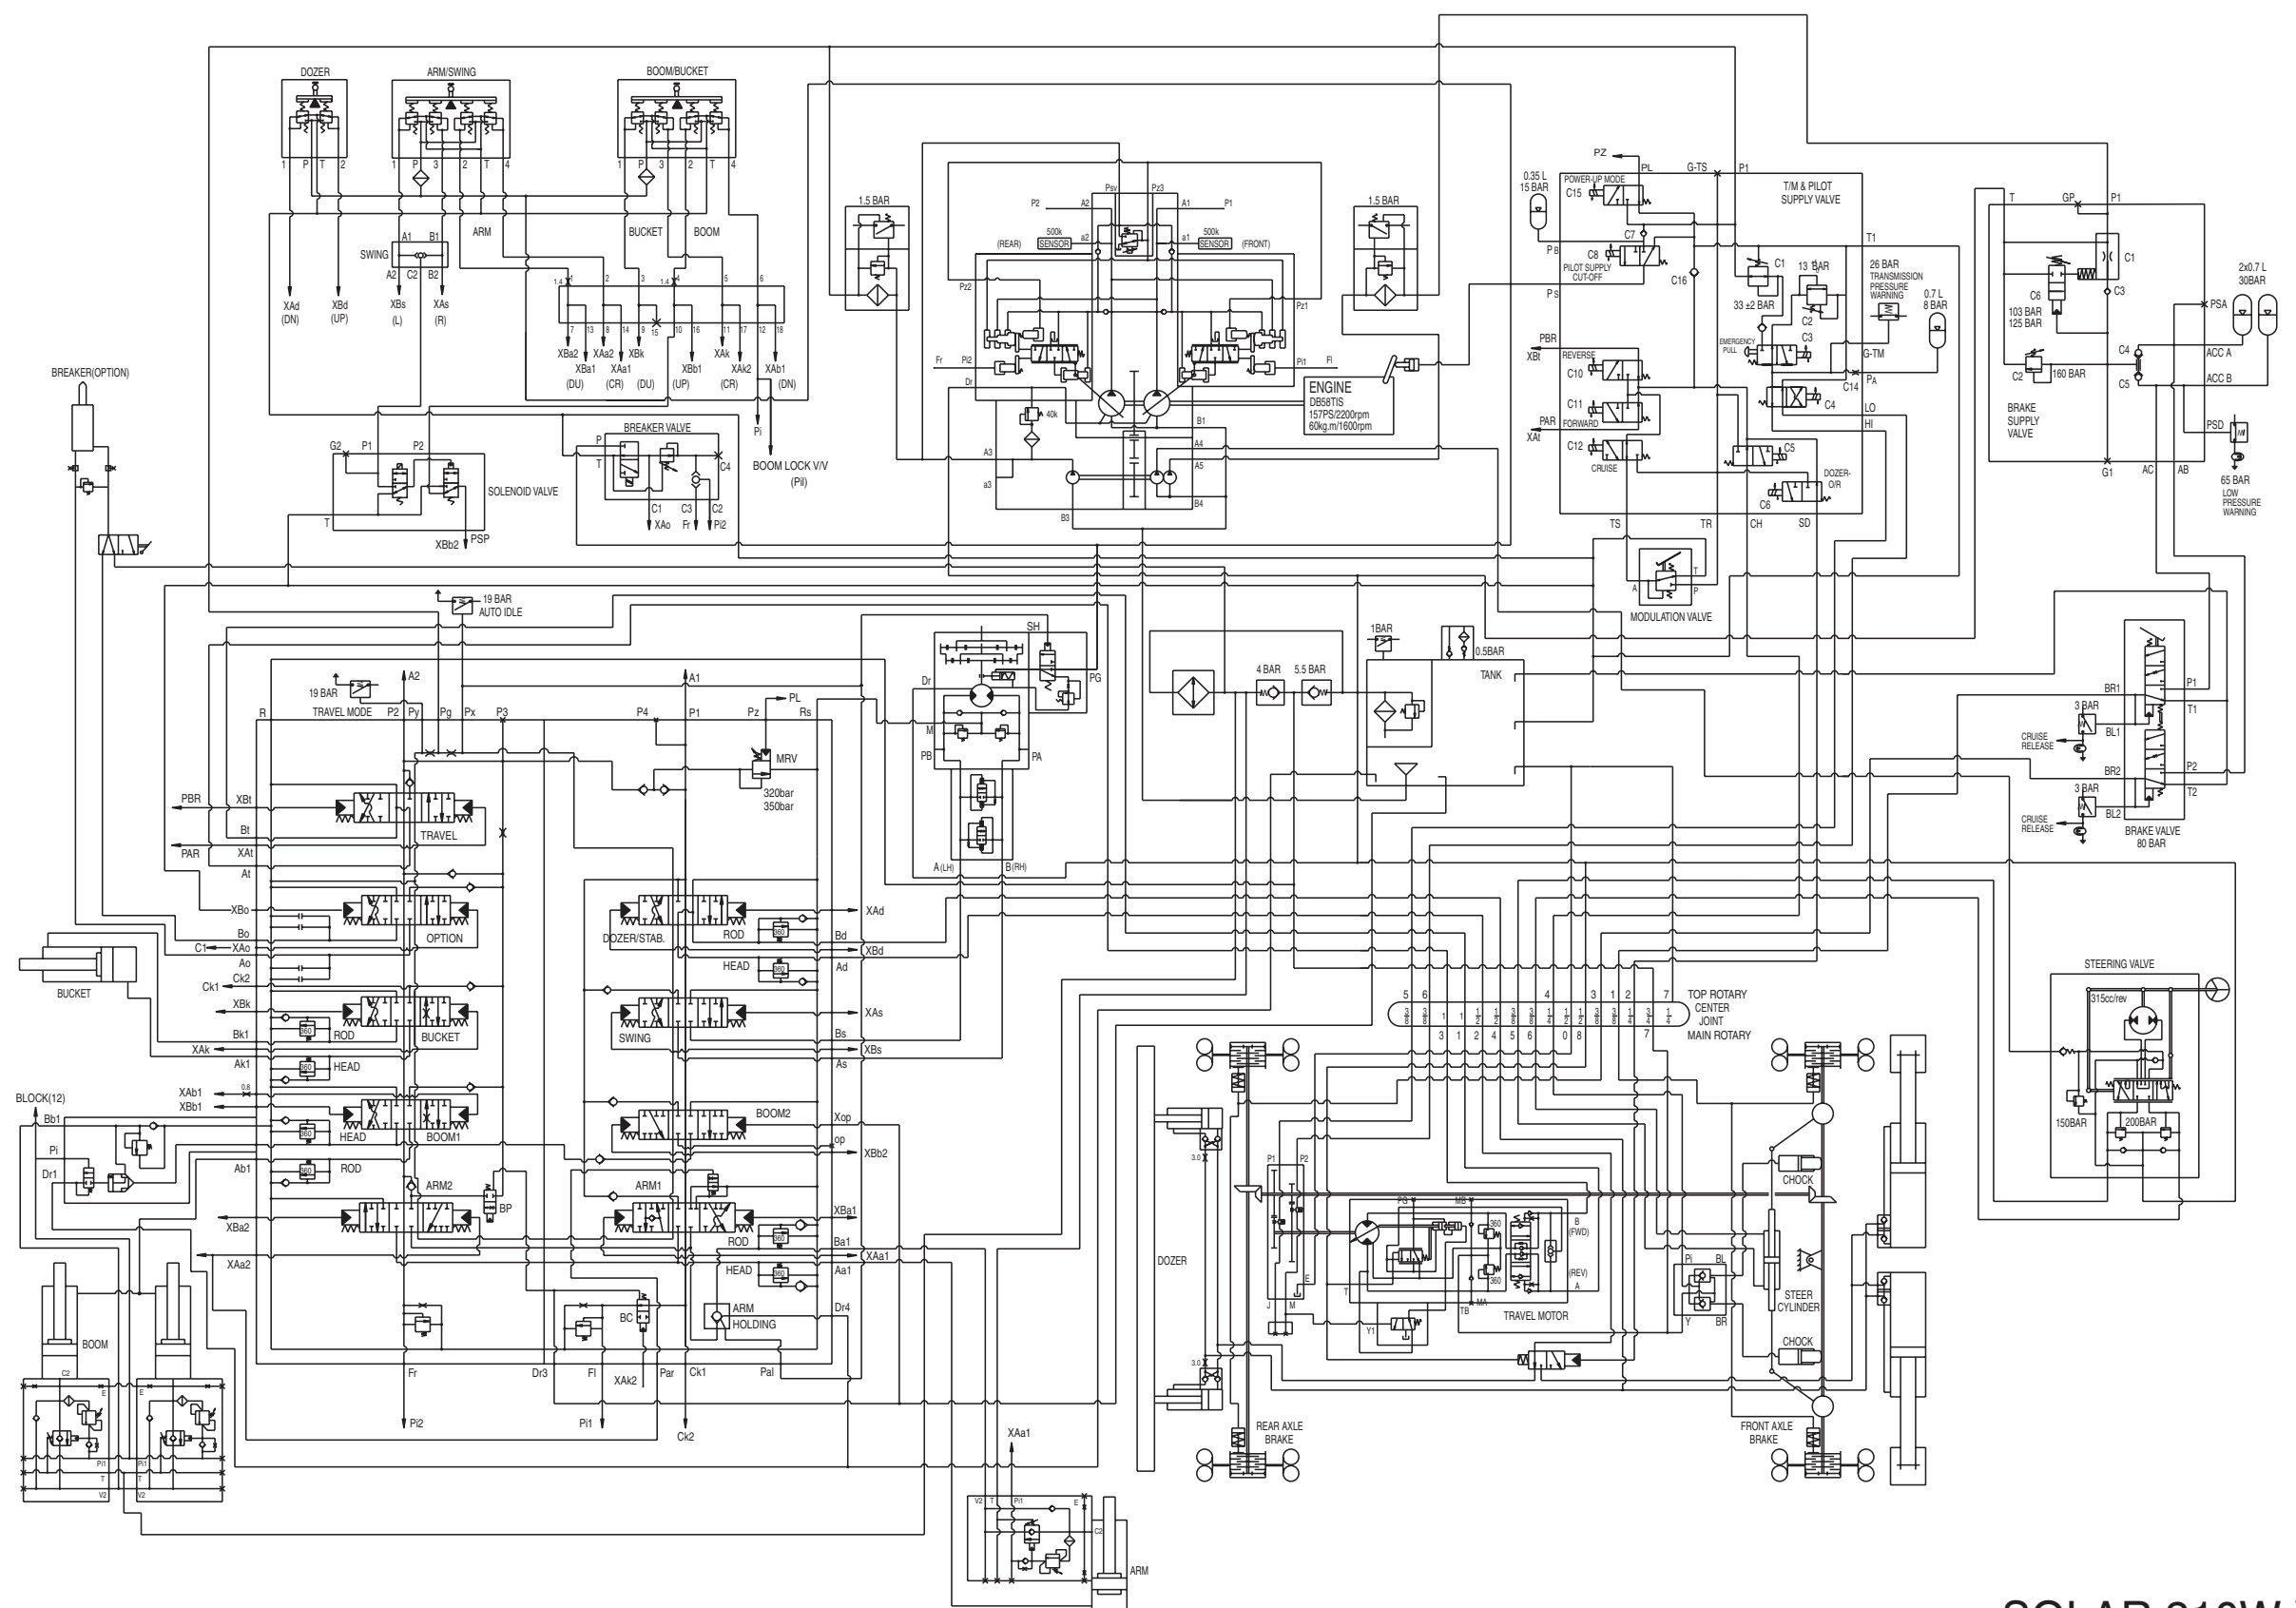


SOLAR 210W-V

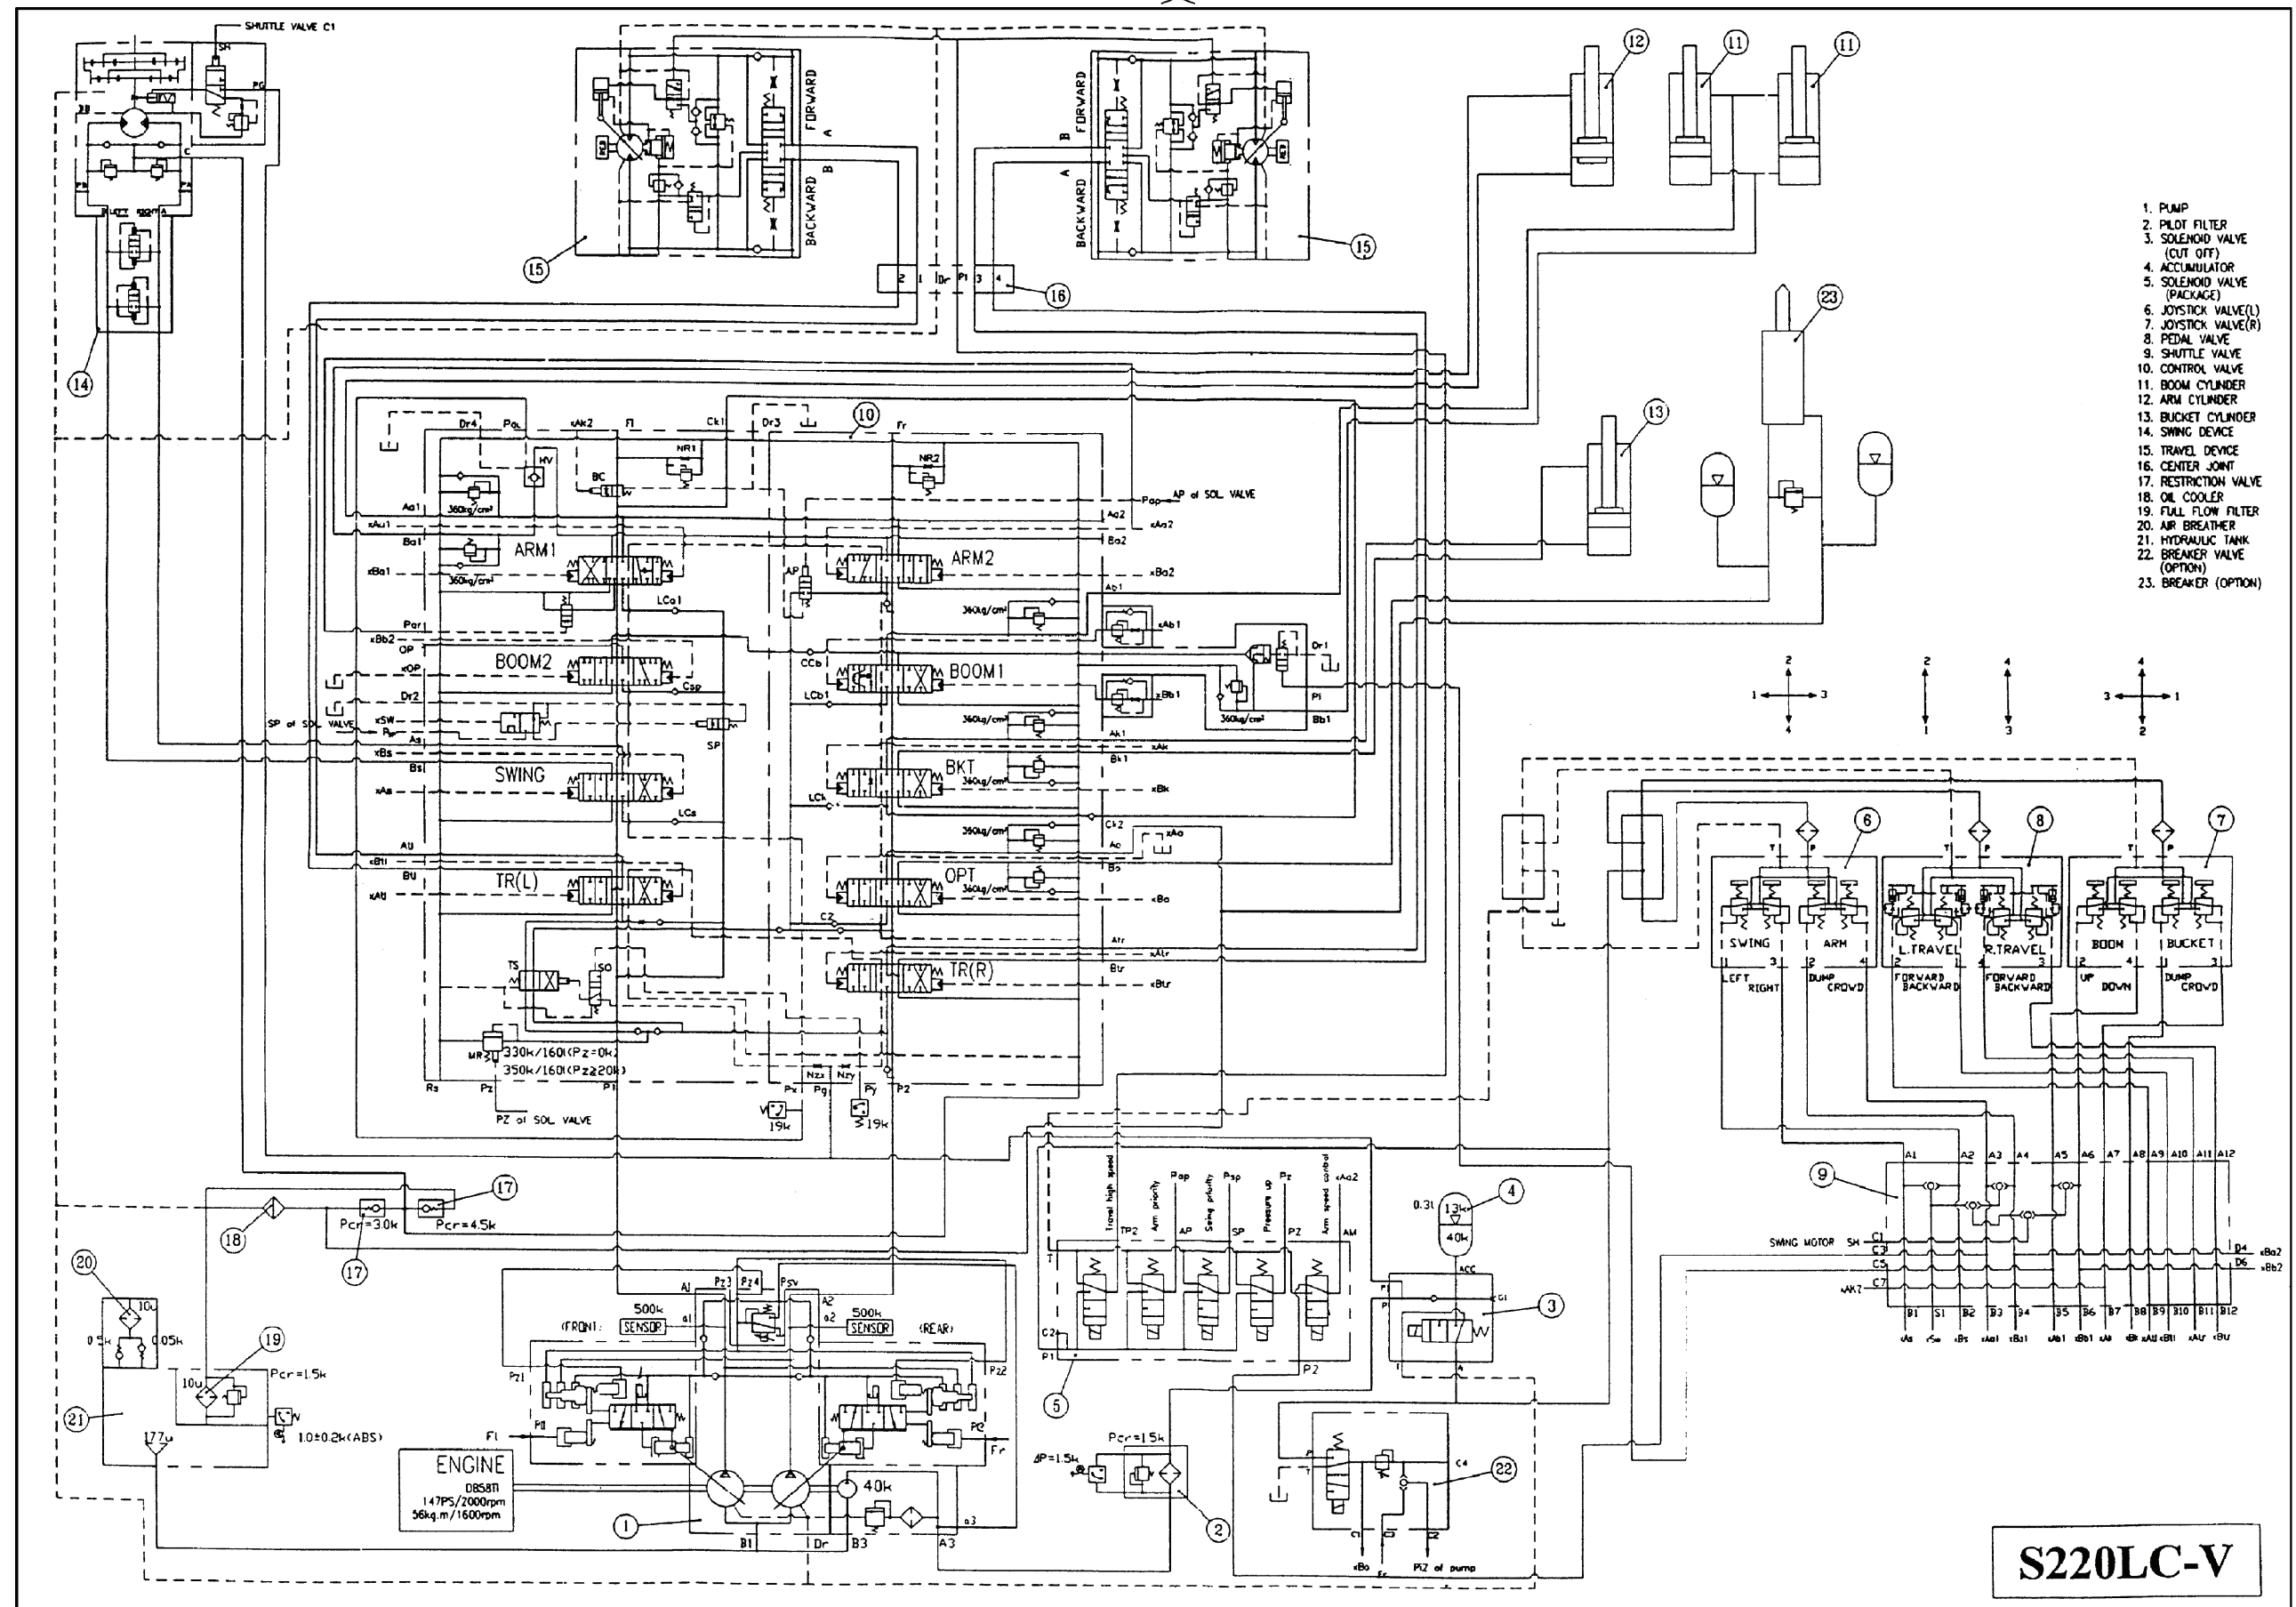


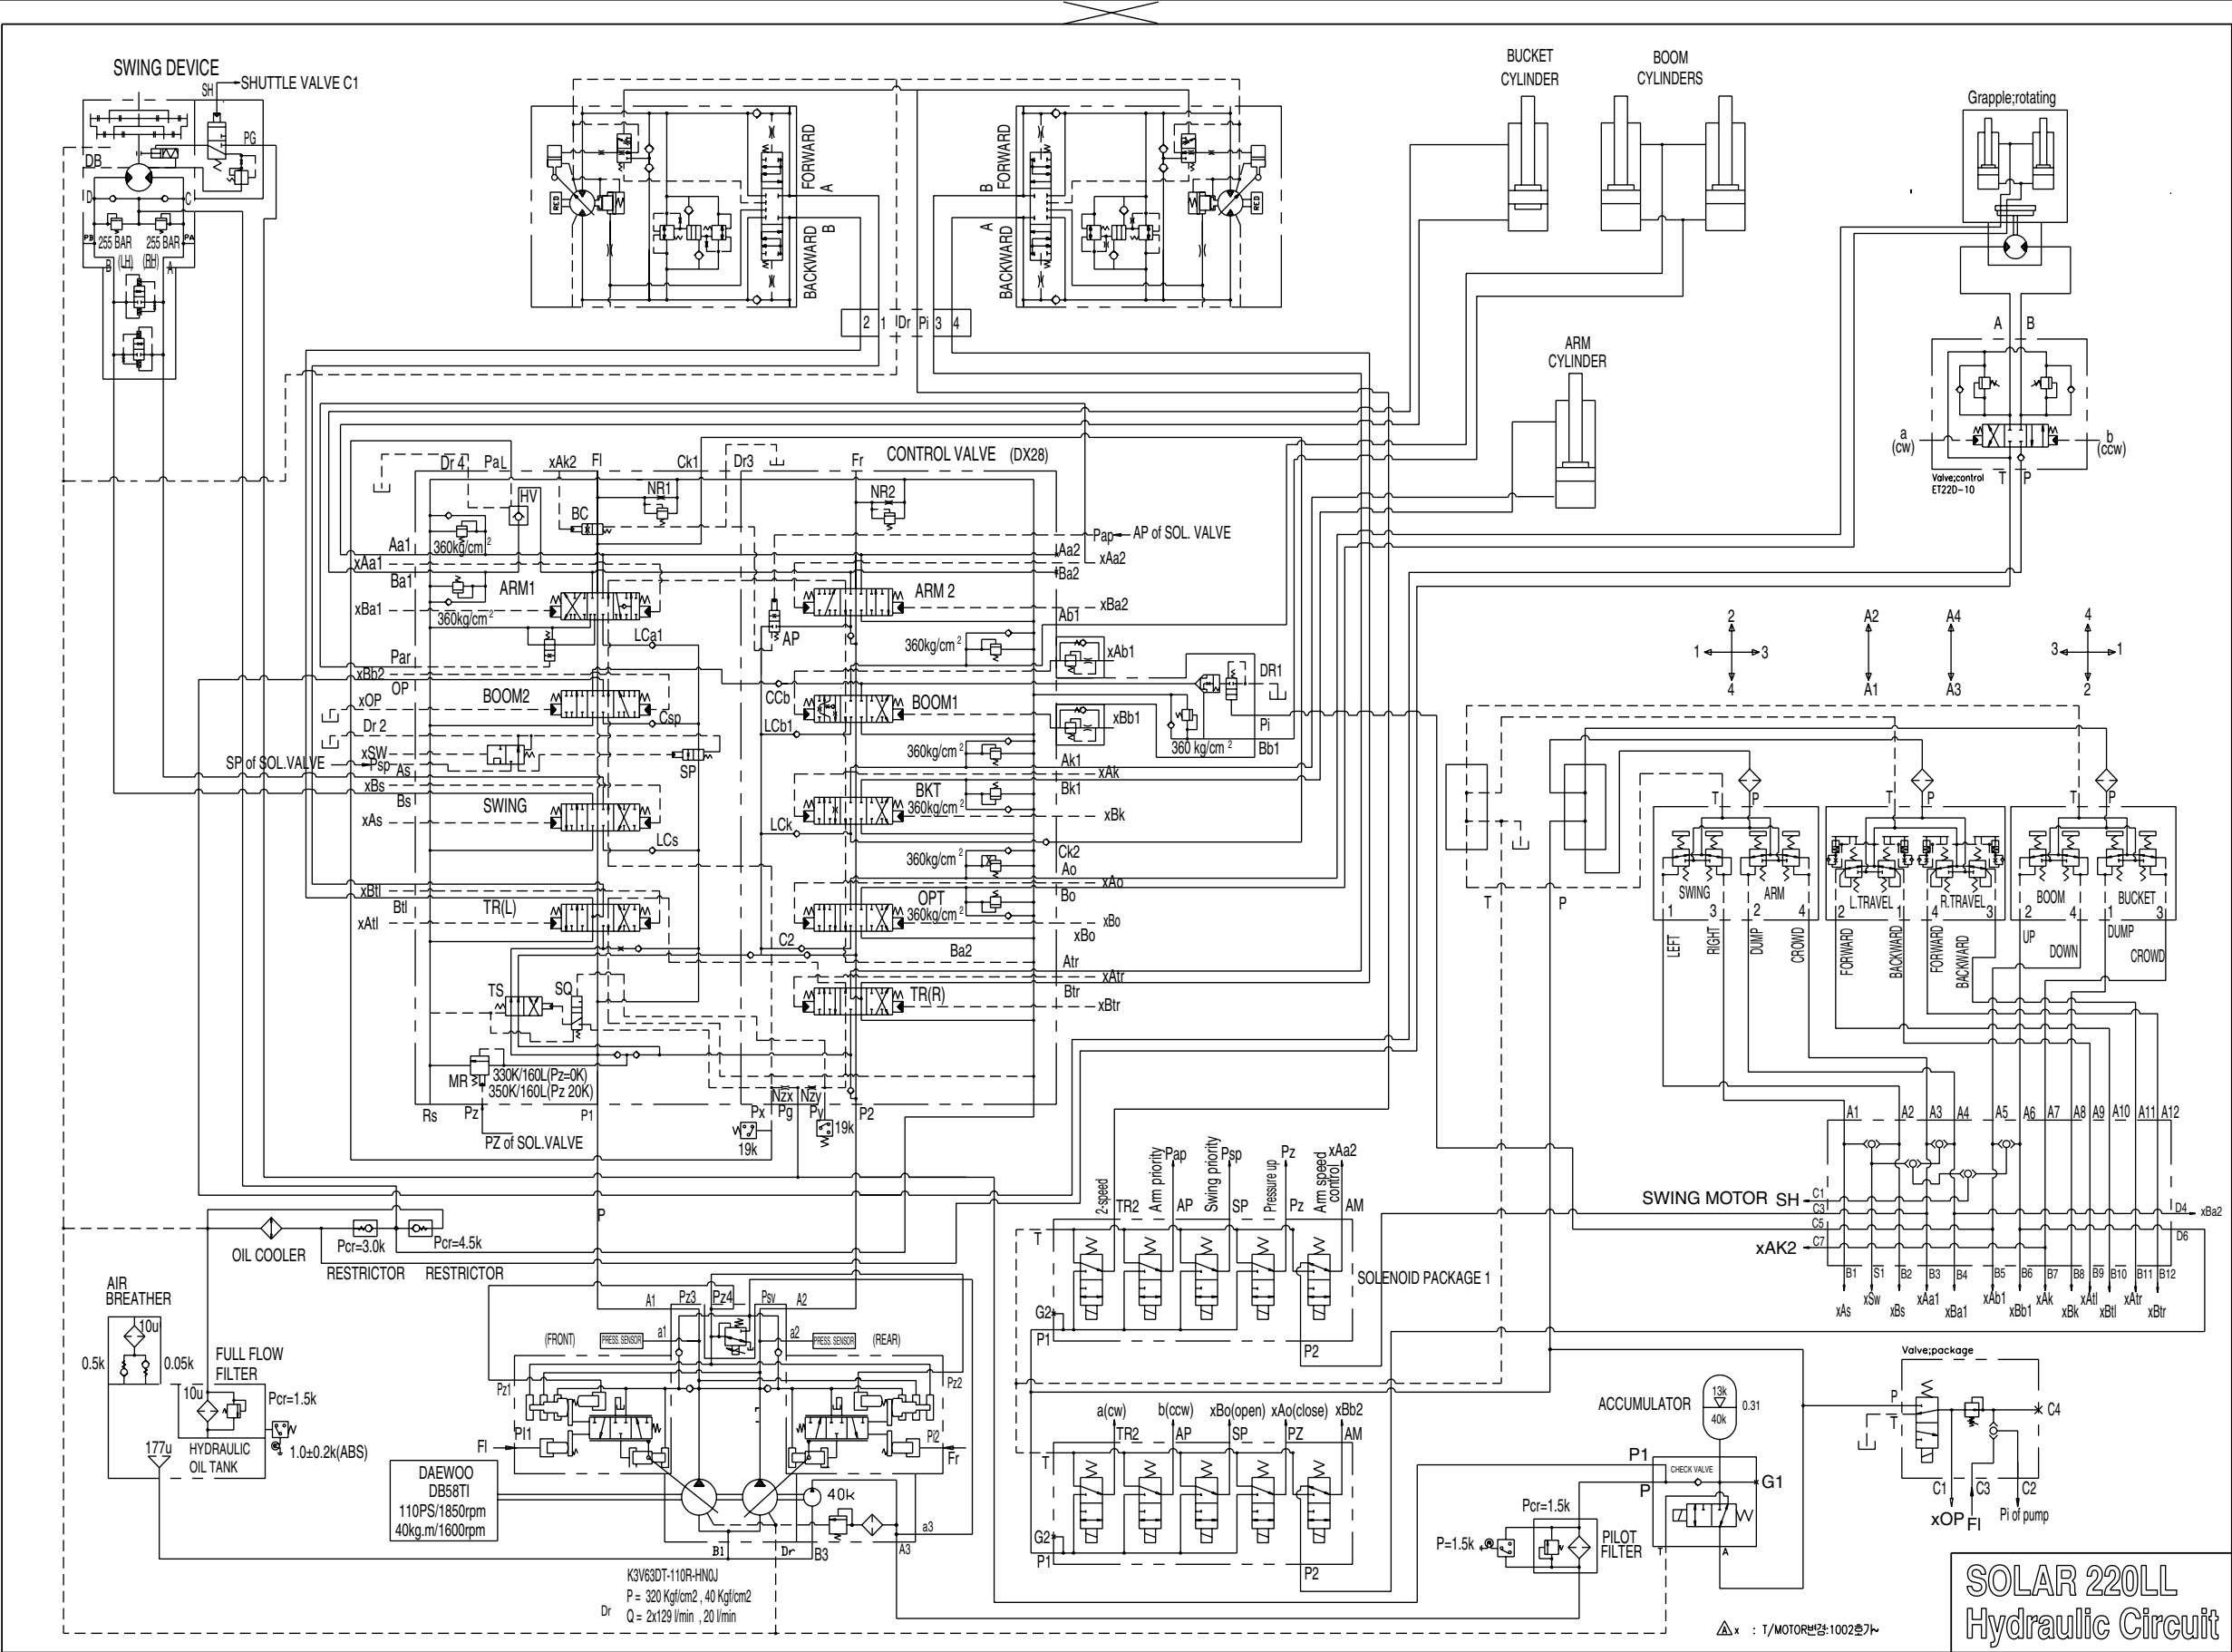


SOLAR 220LL
Hydraulic Circuit


HBOC610S

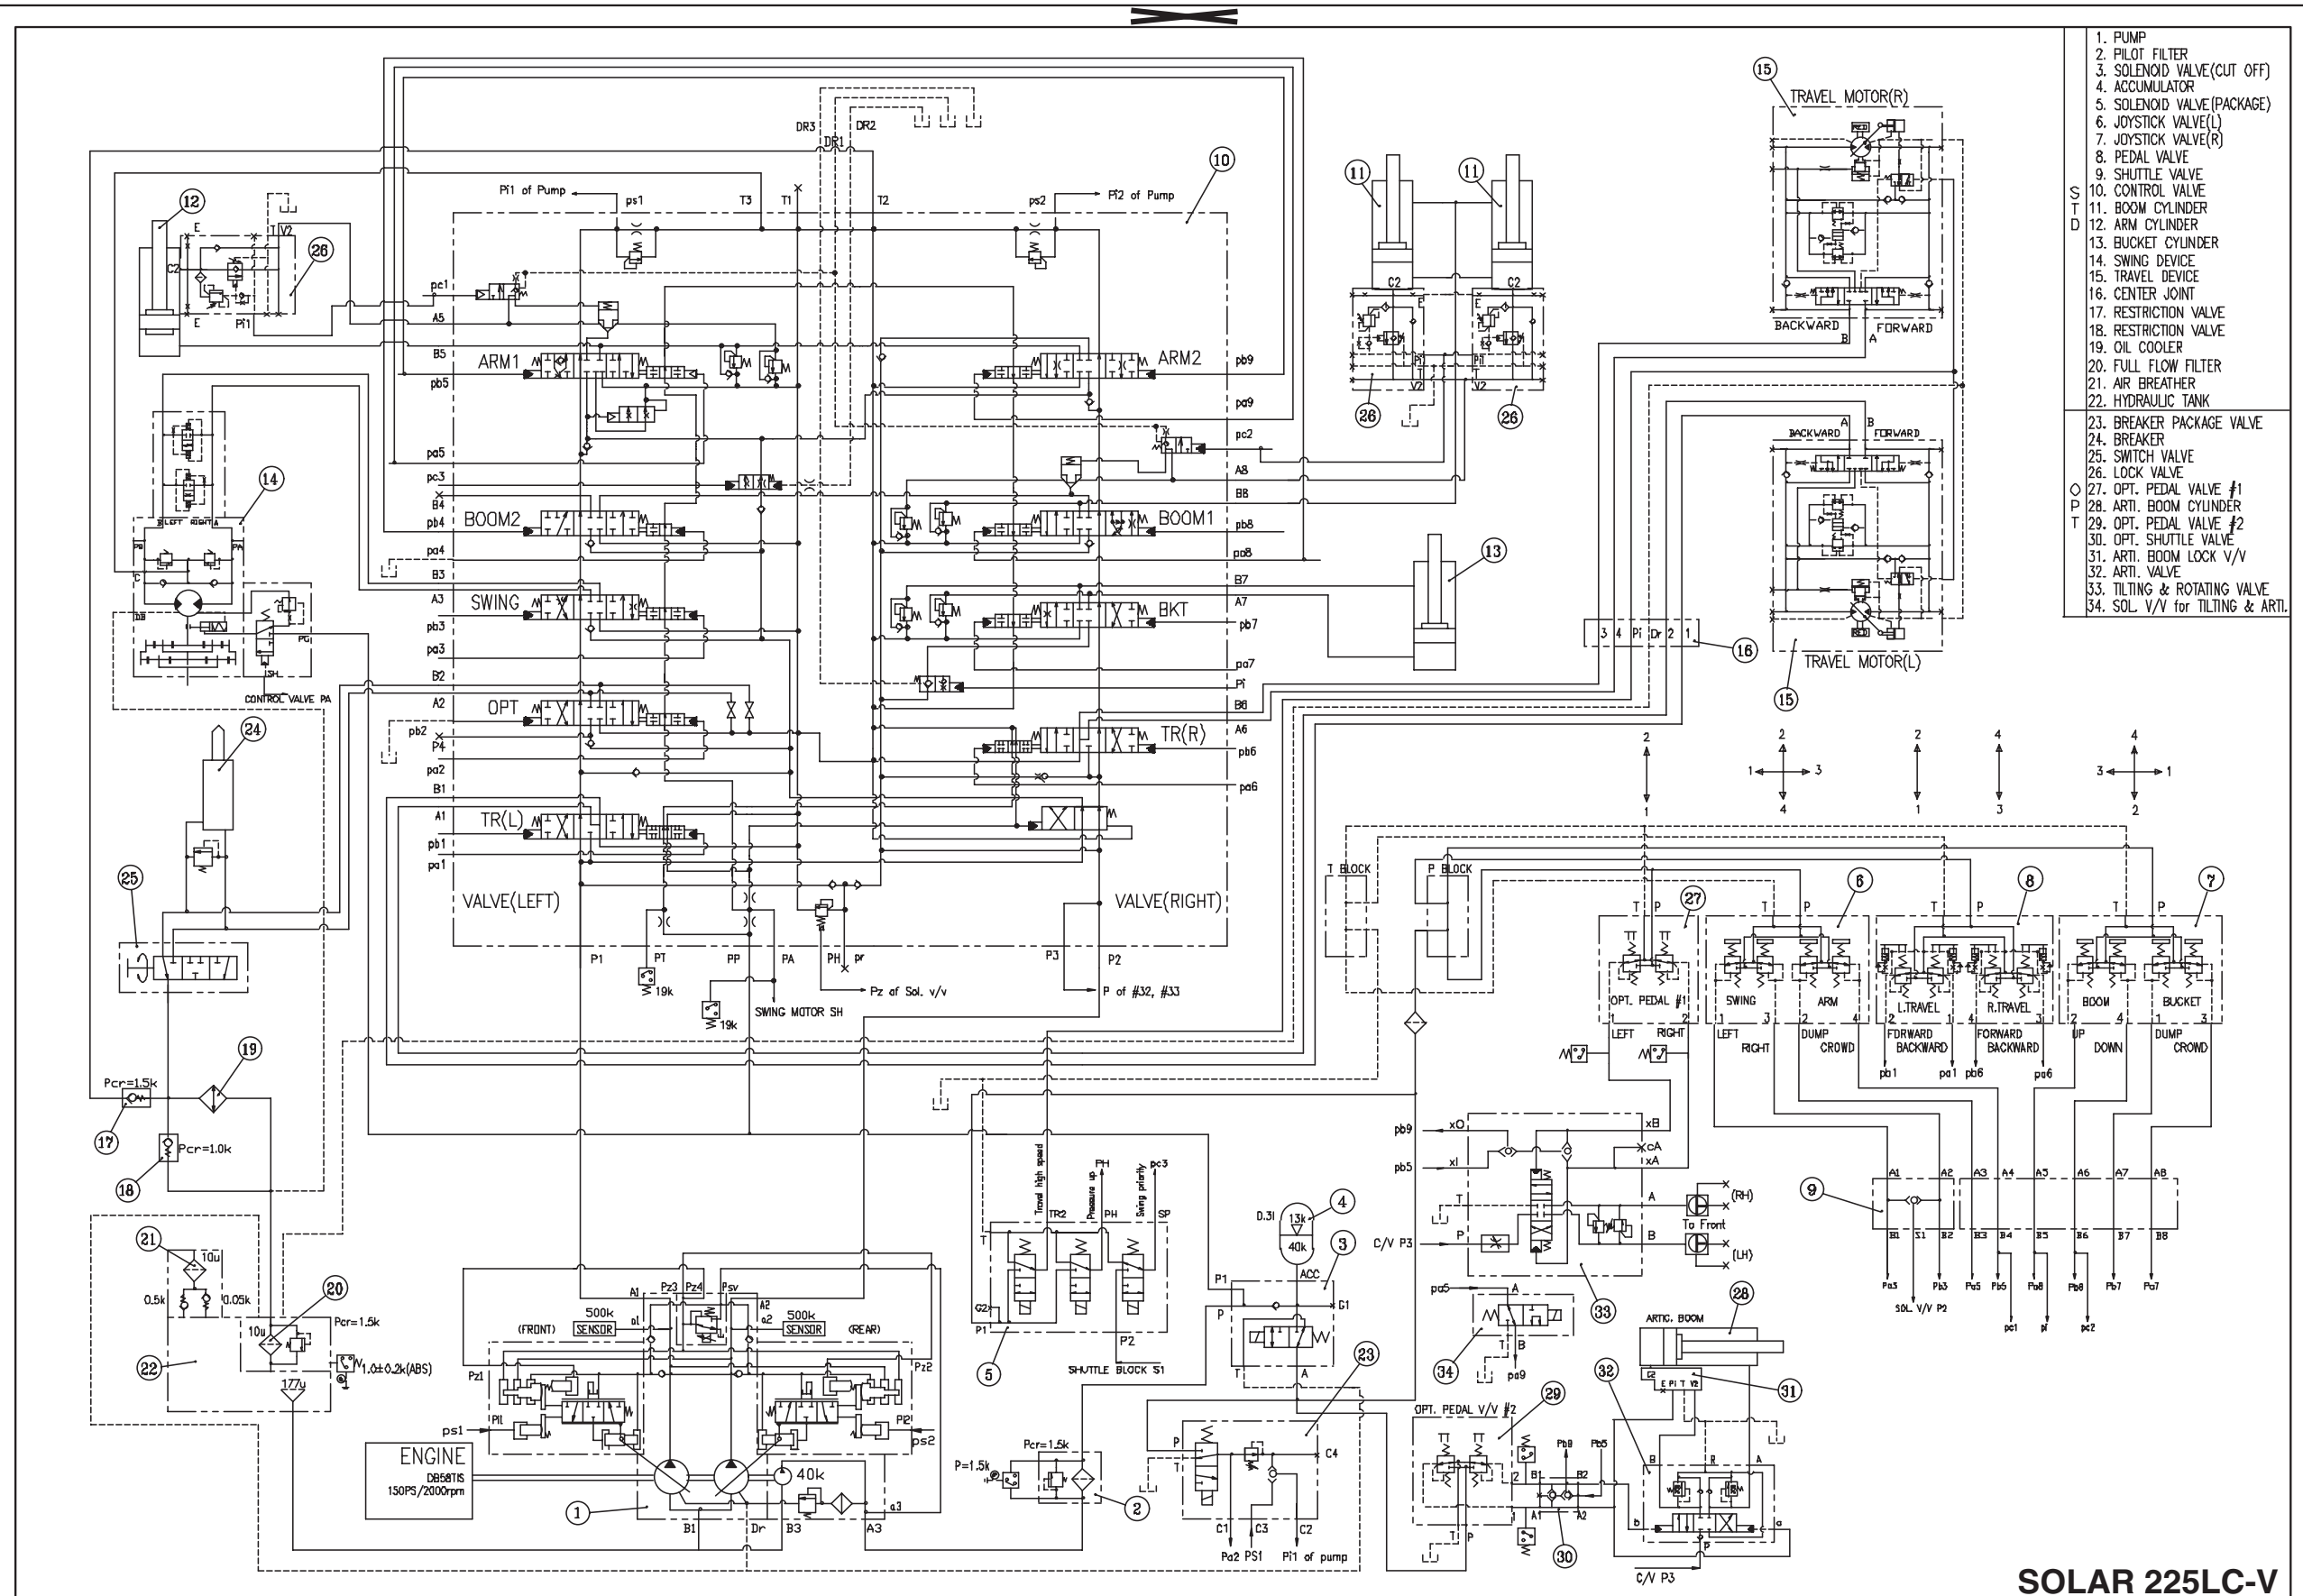

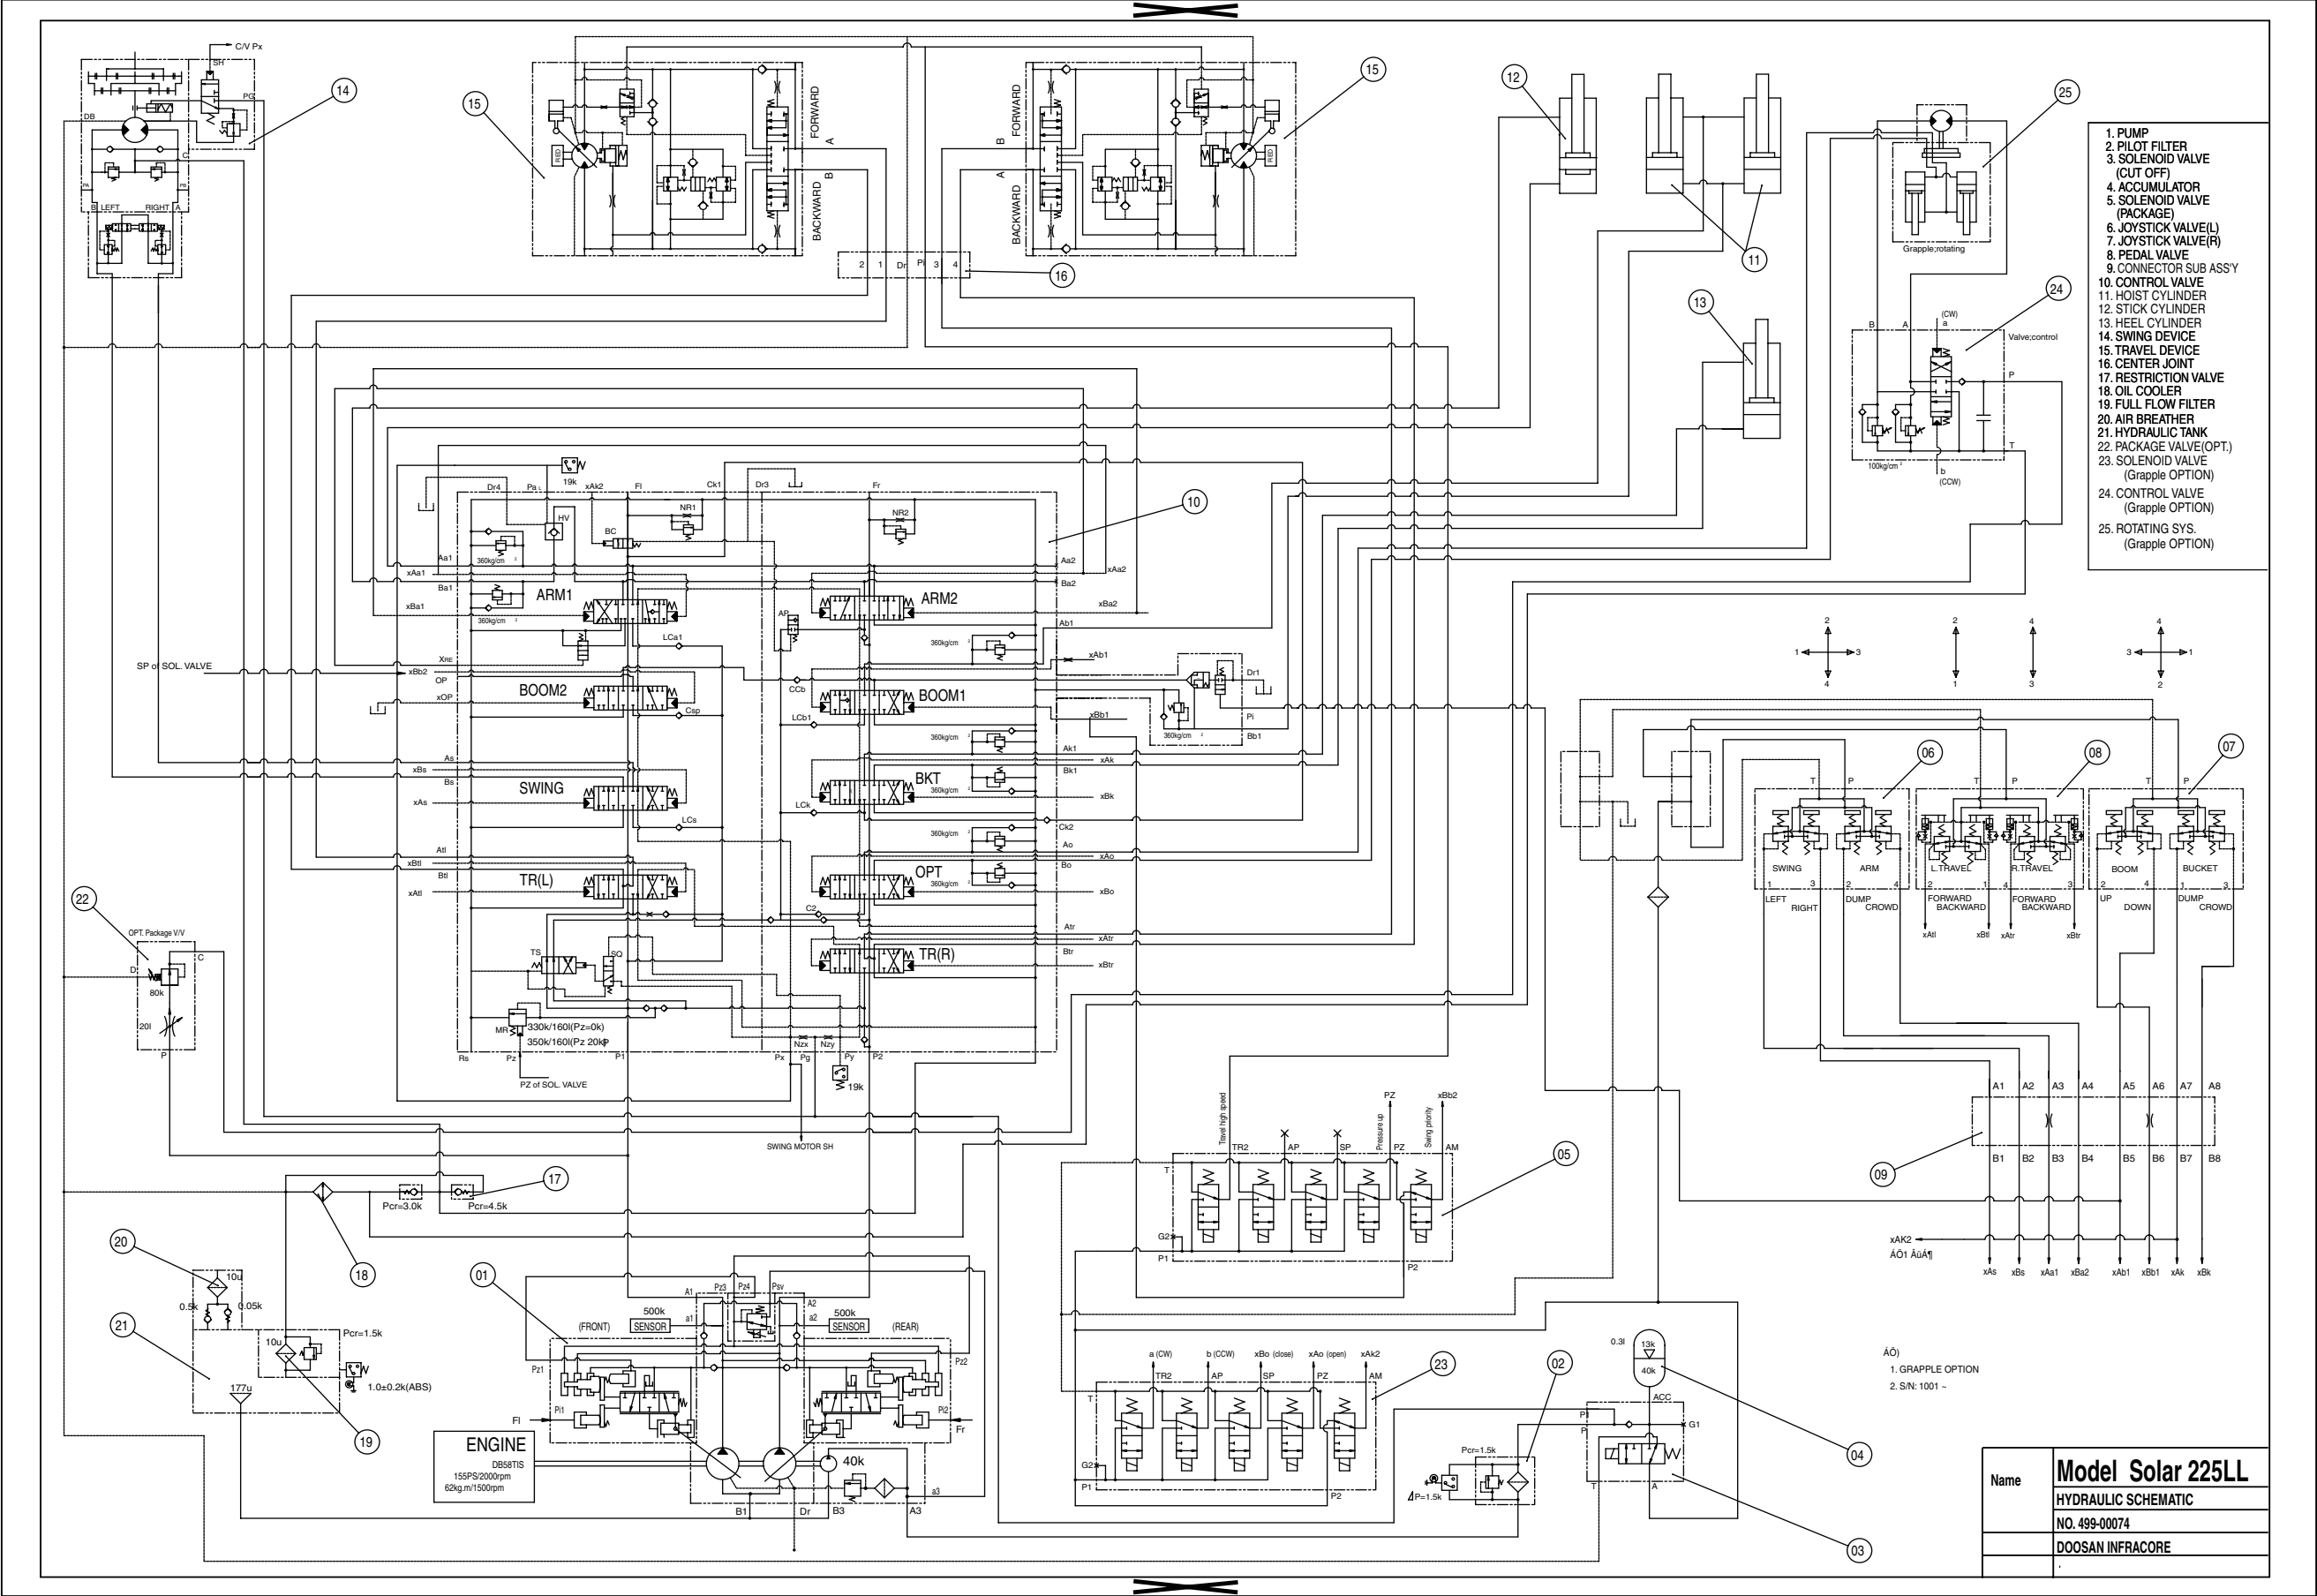


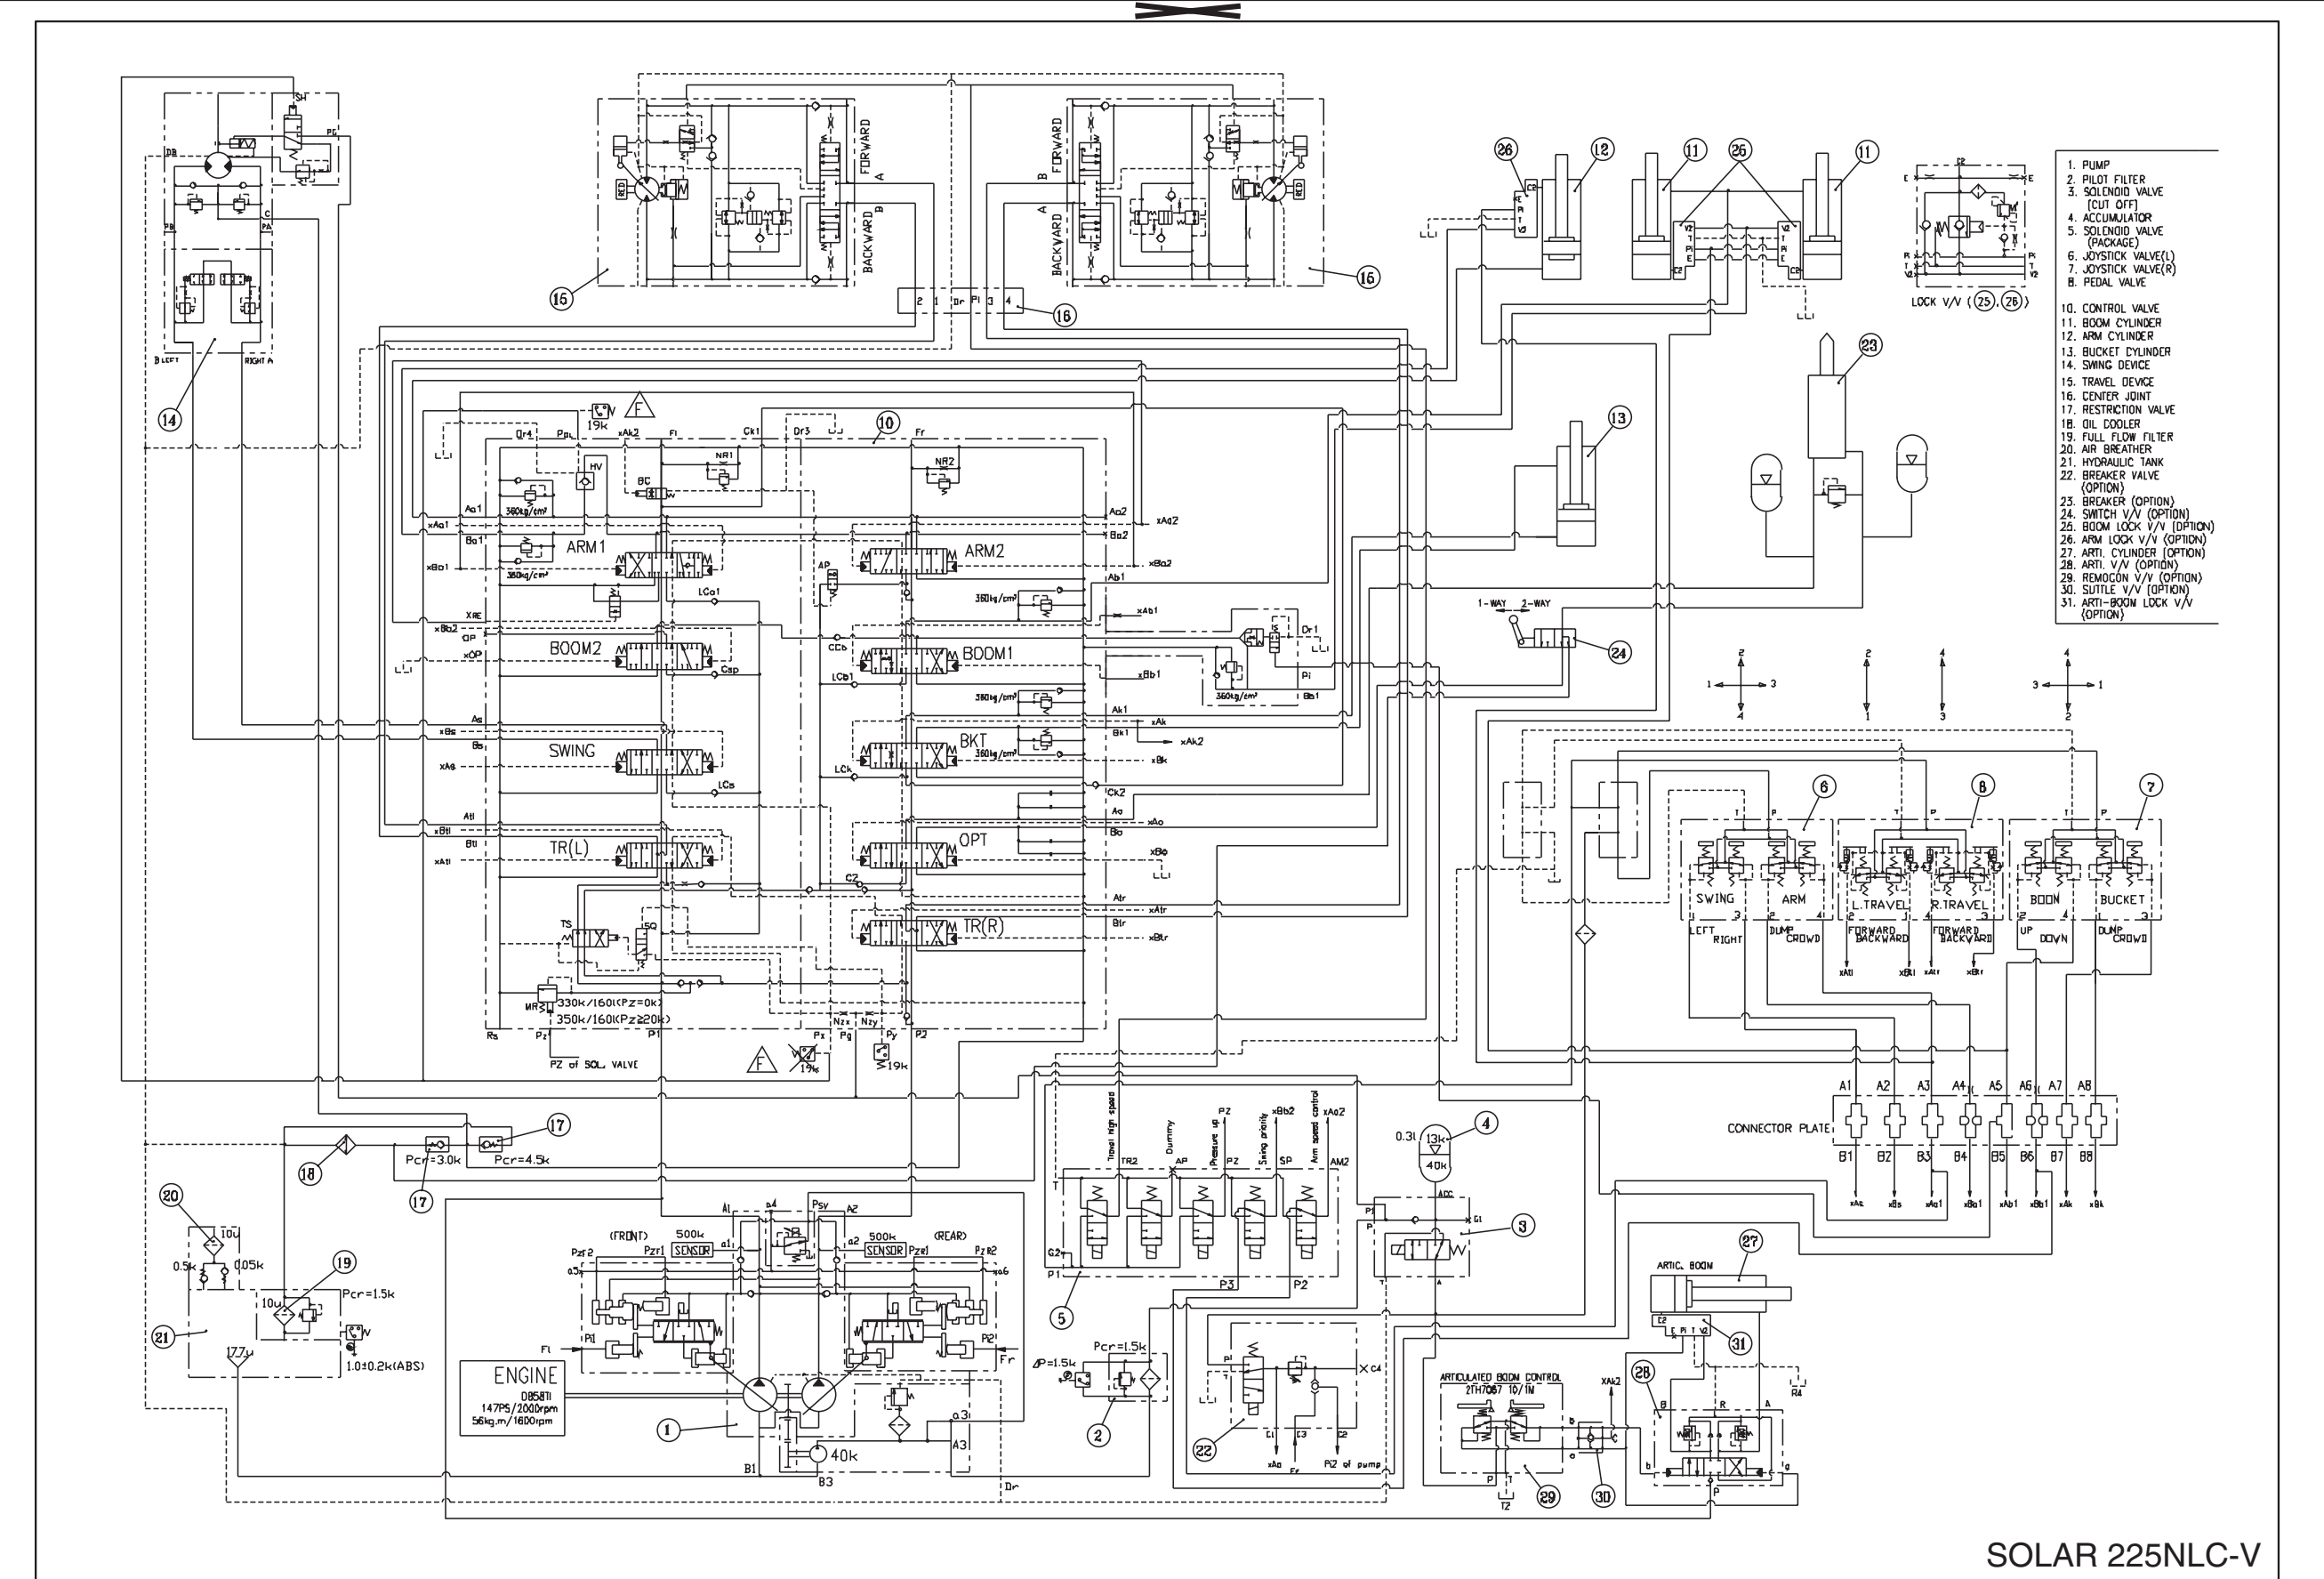



SOLAR 225NLC-V

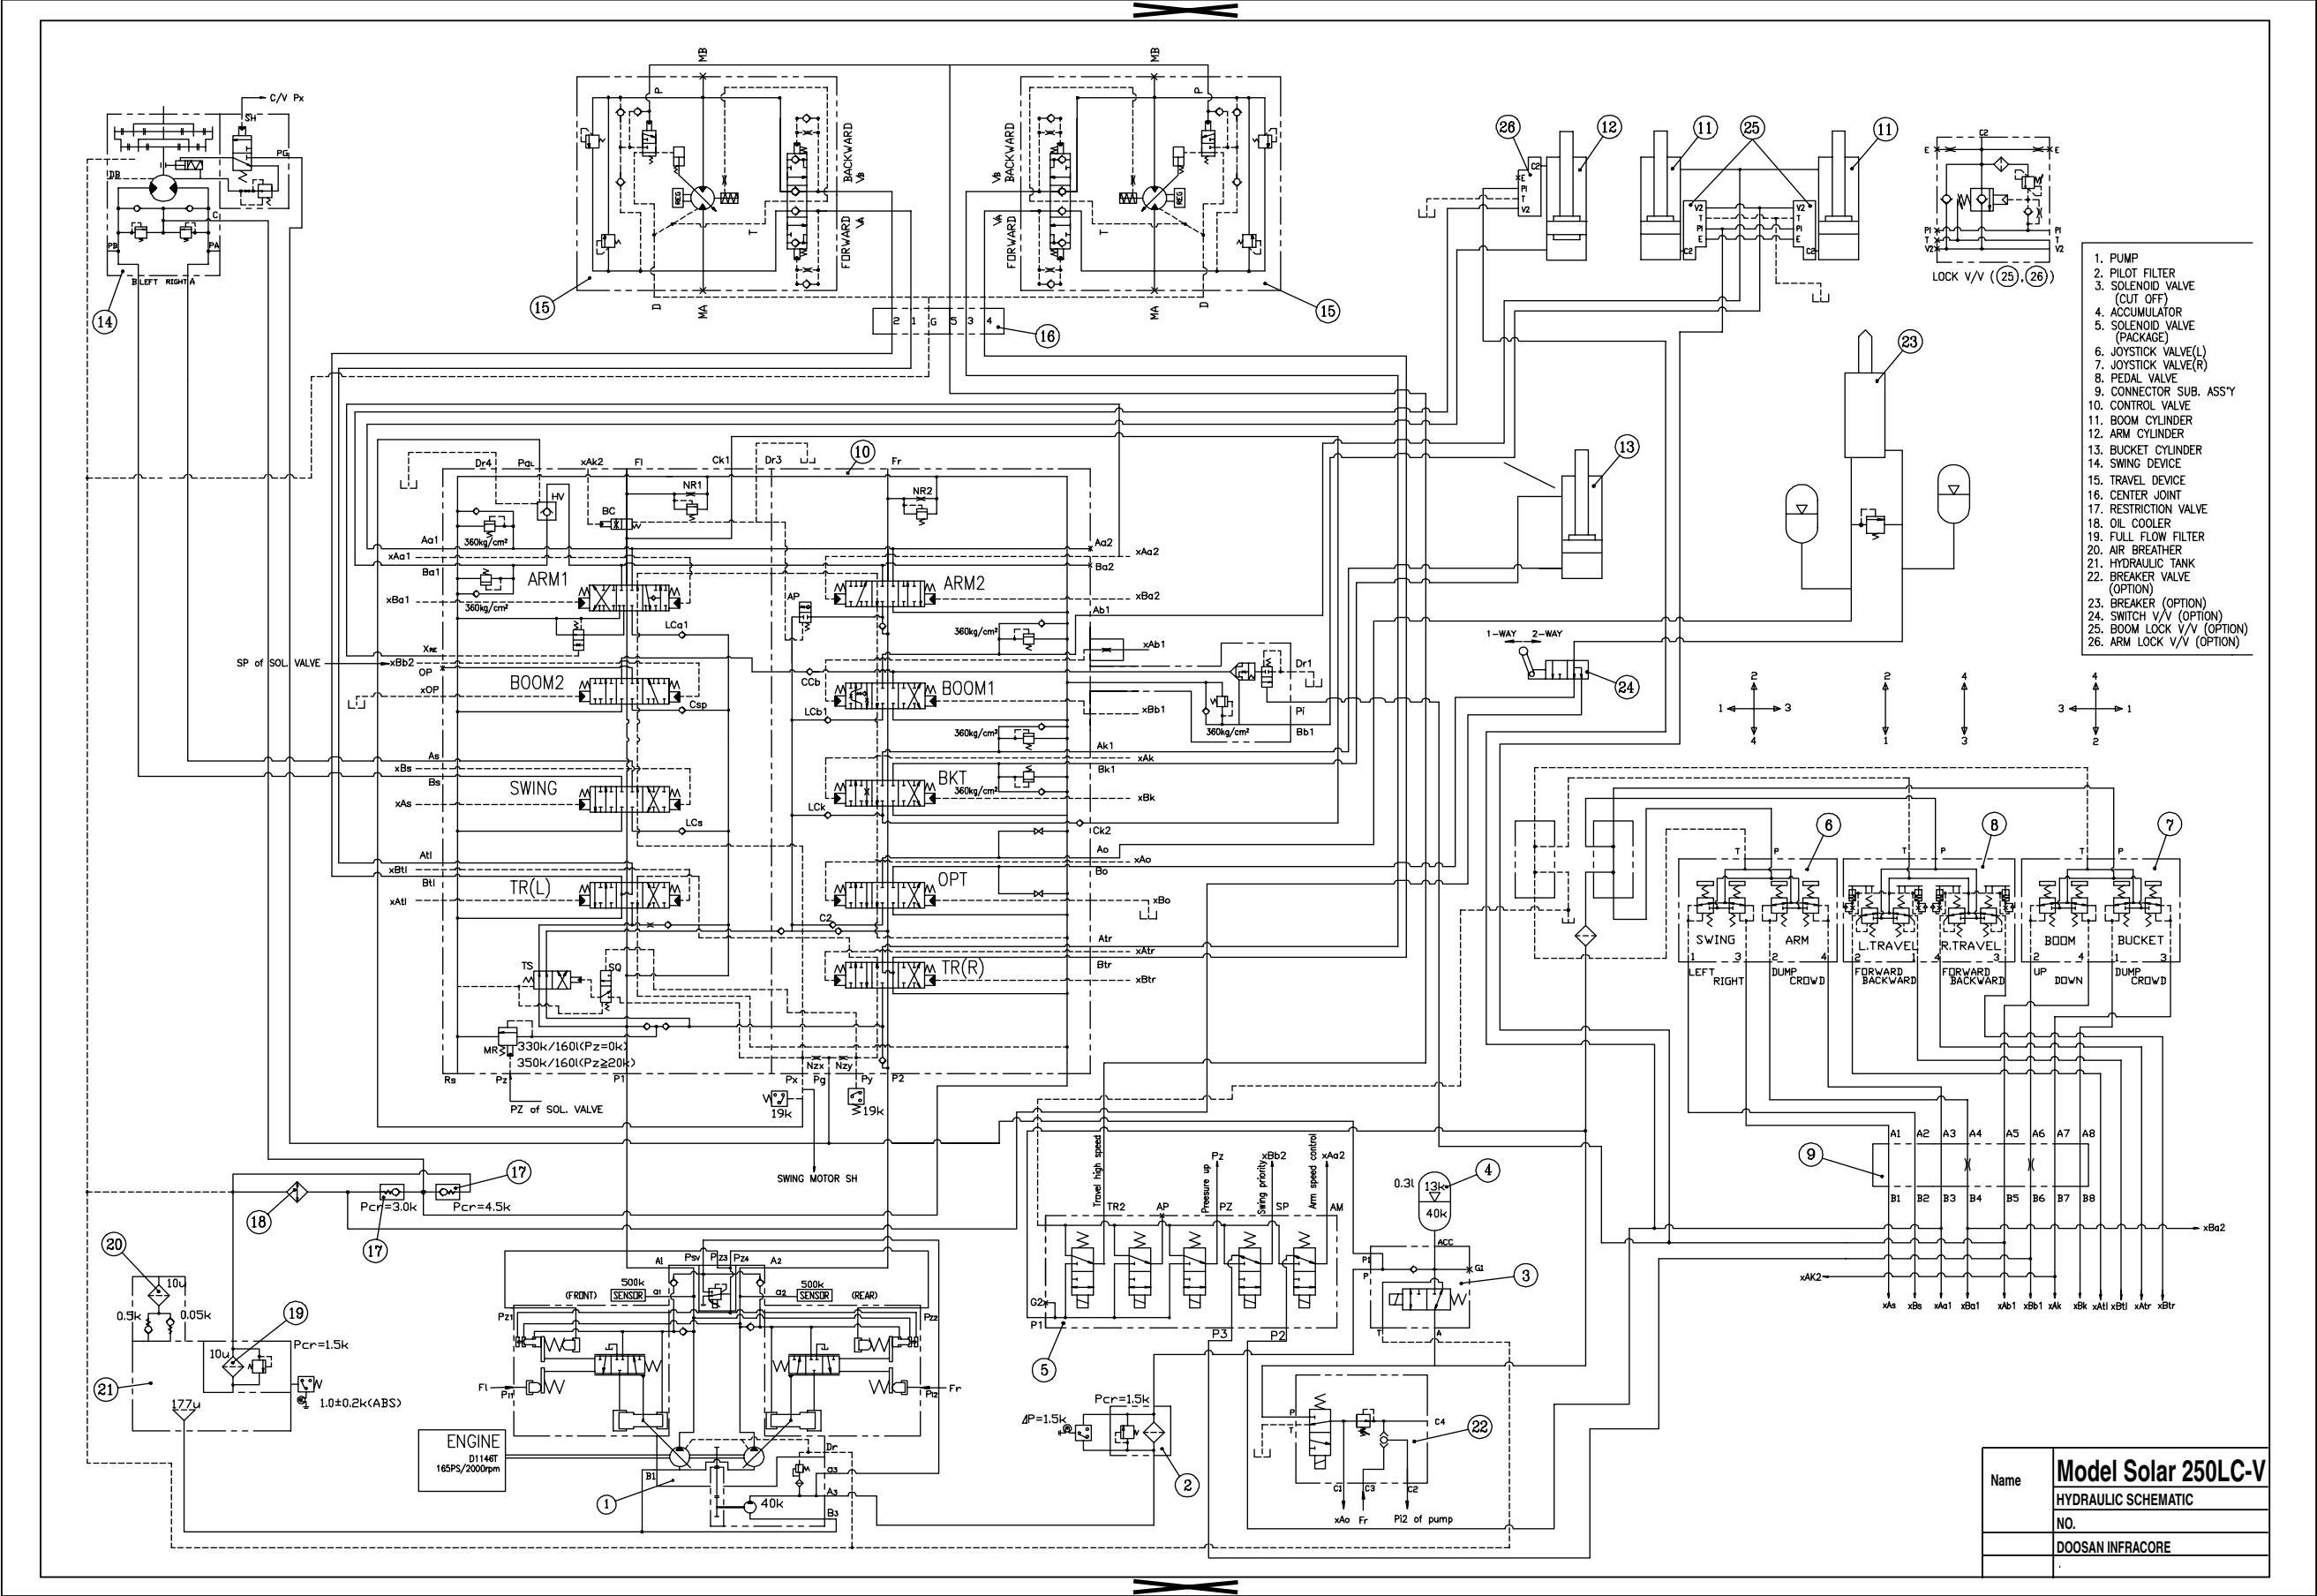


HAAA6400

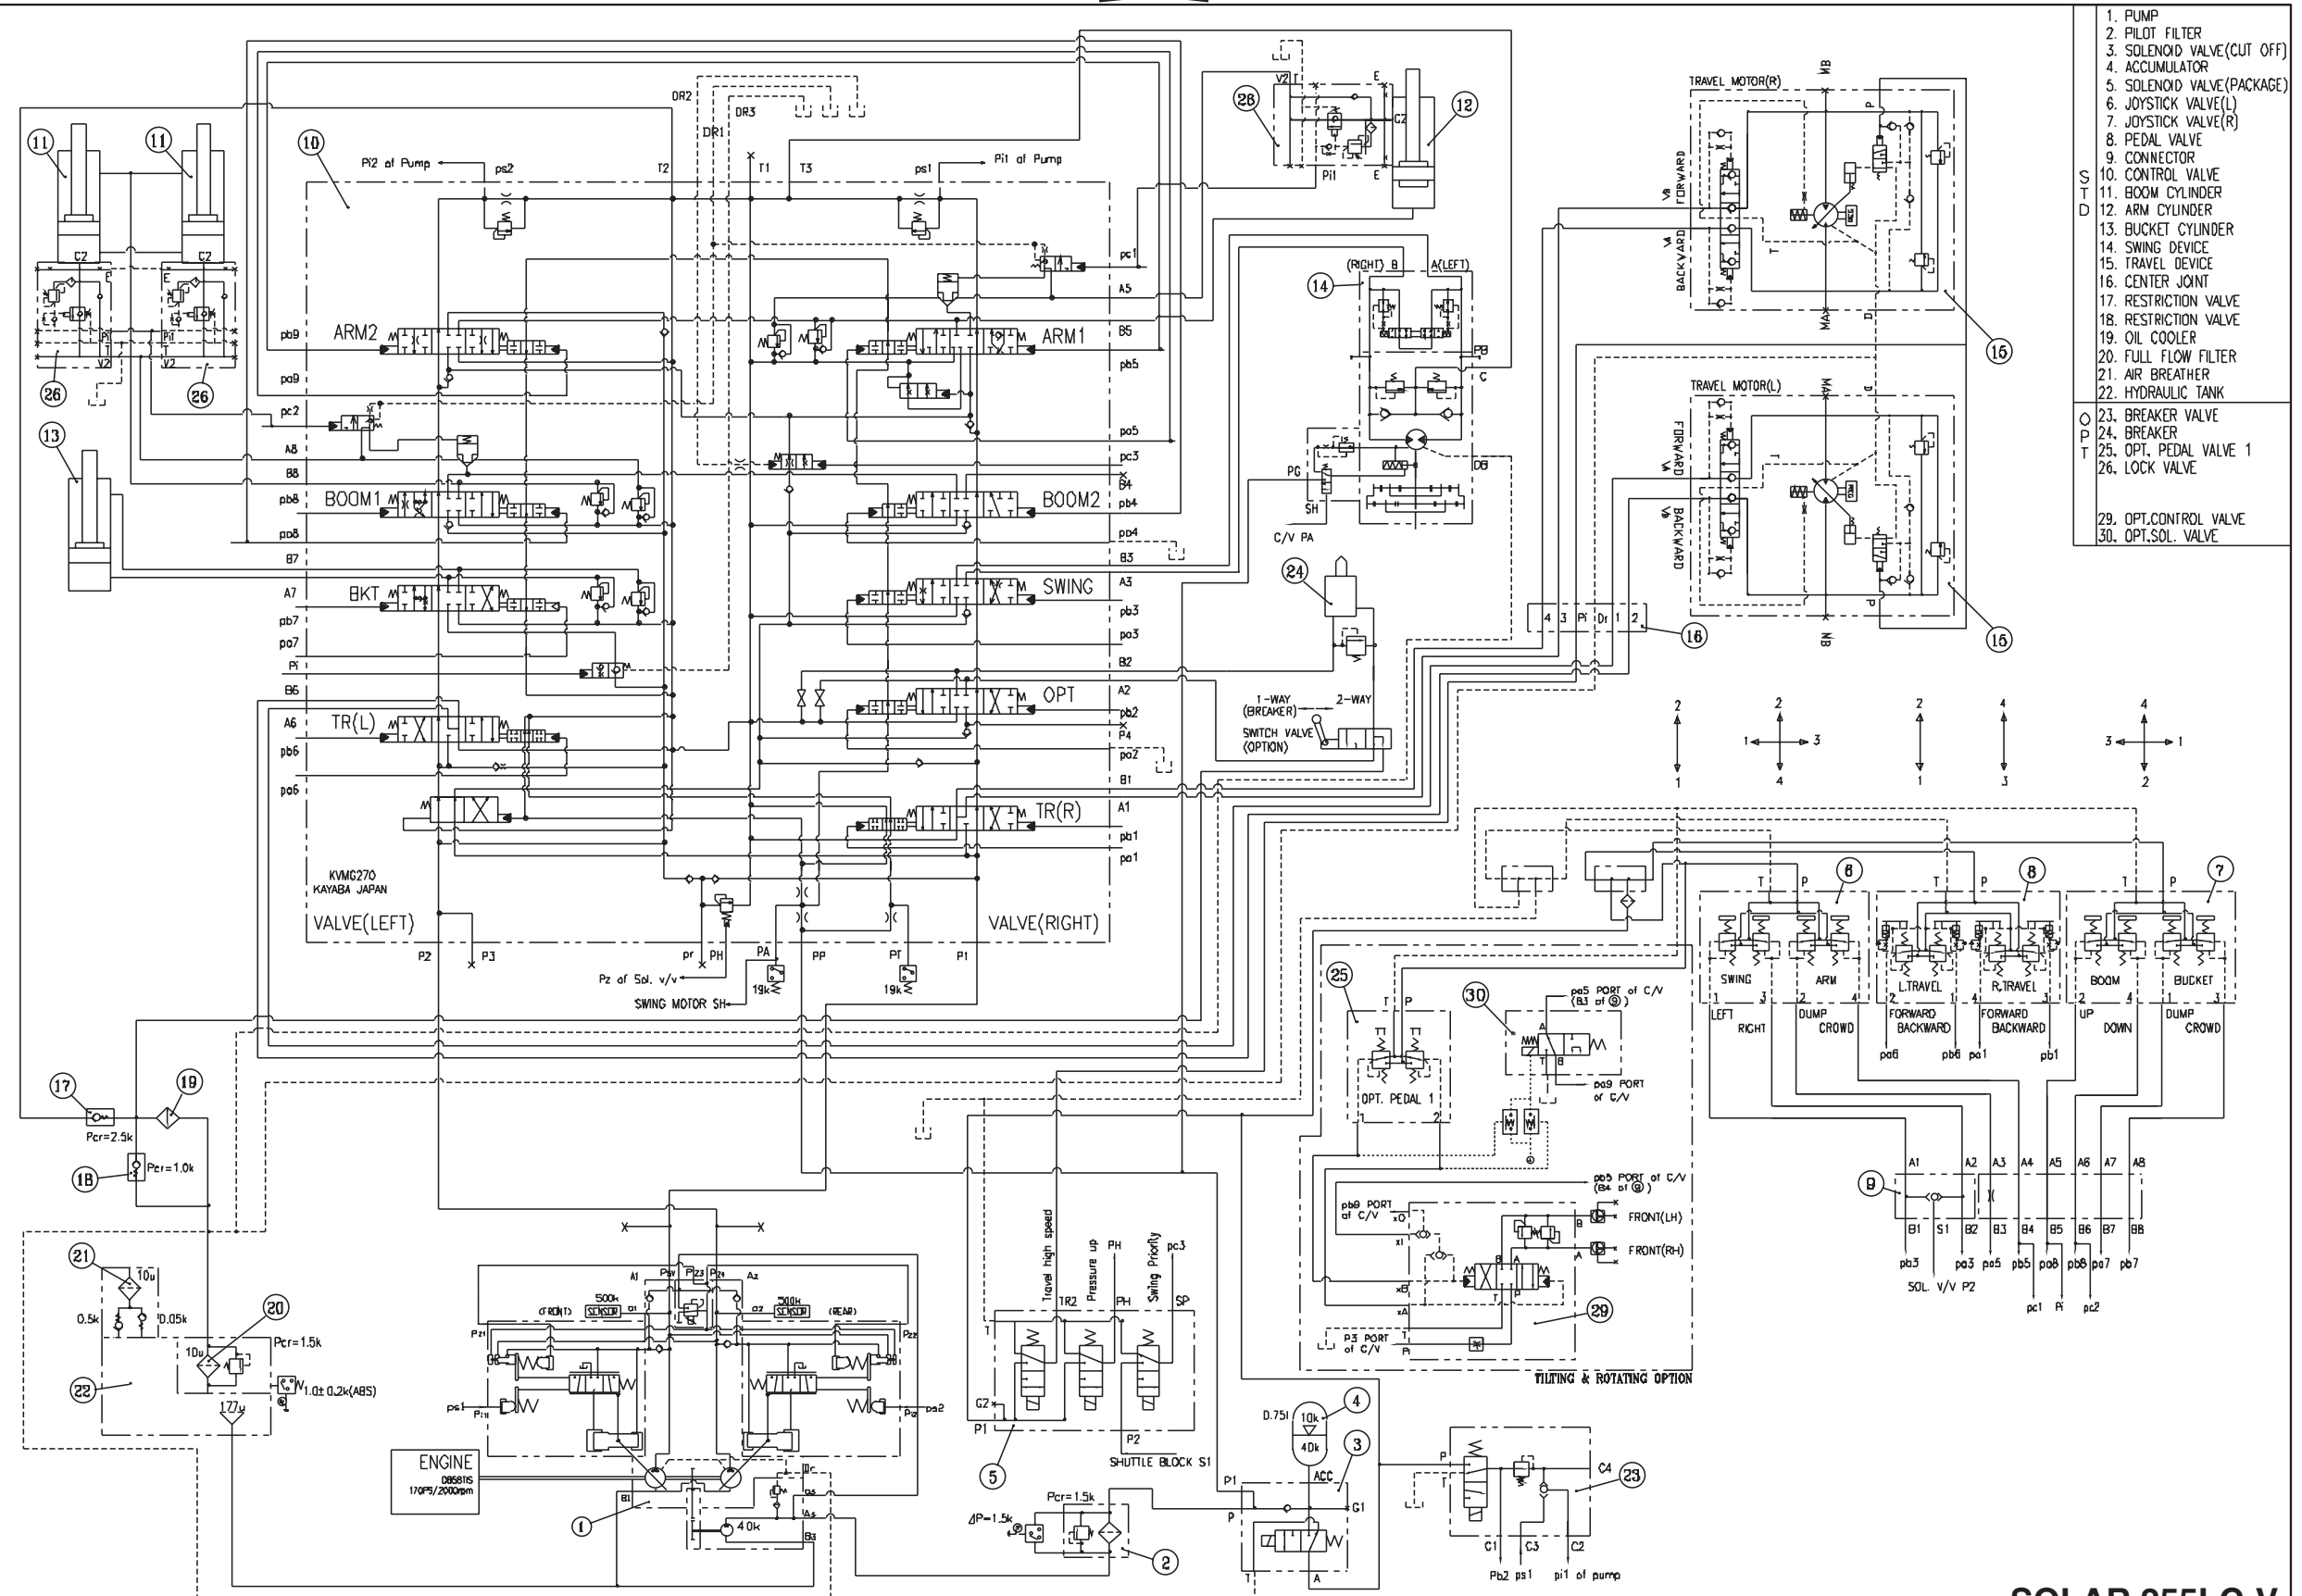
**SOLAR 255LC-V**

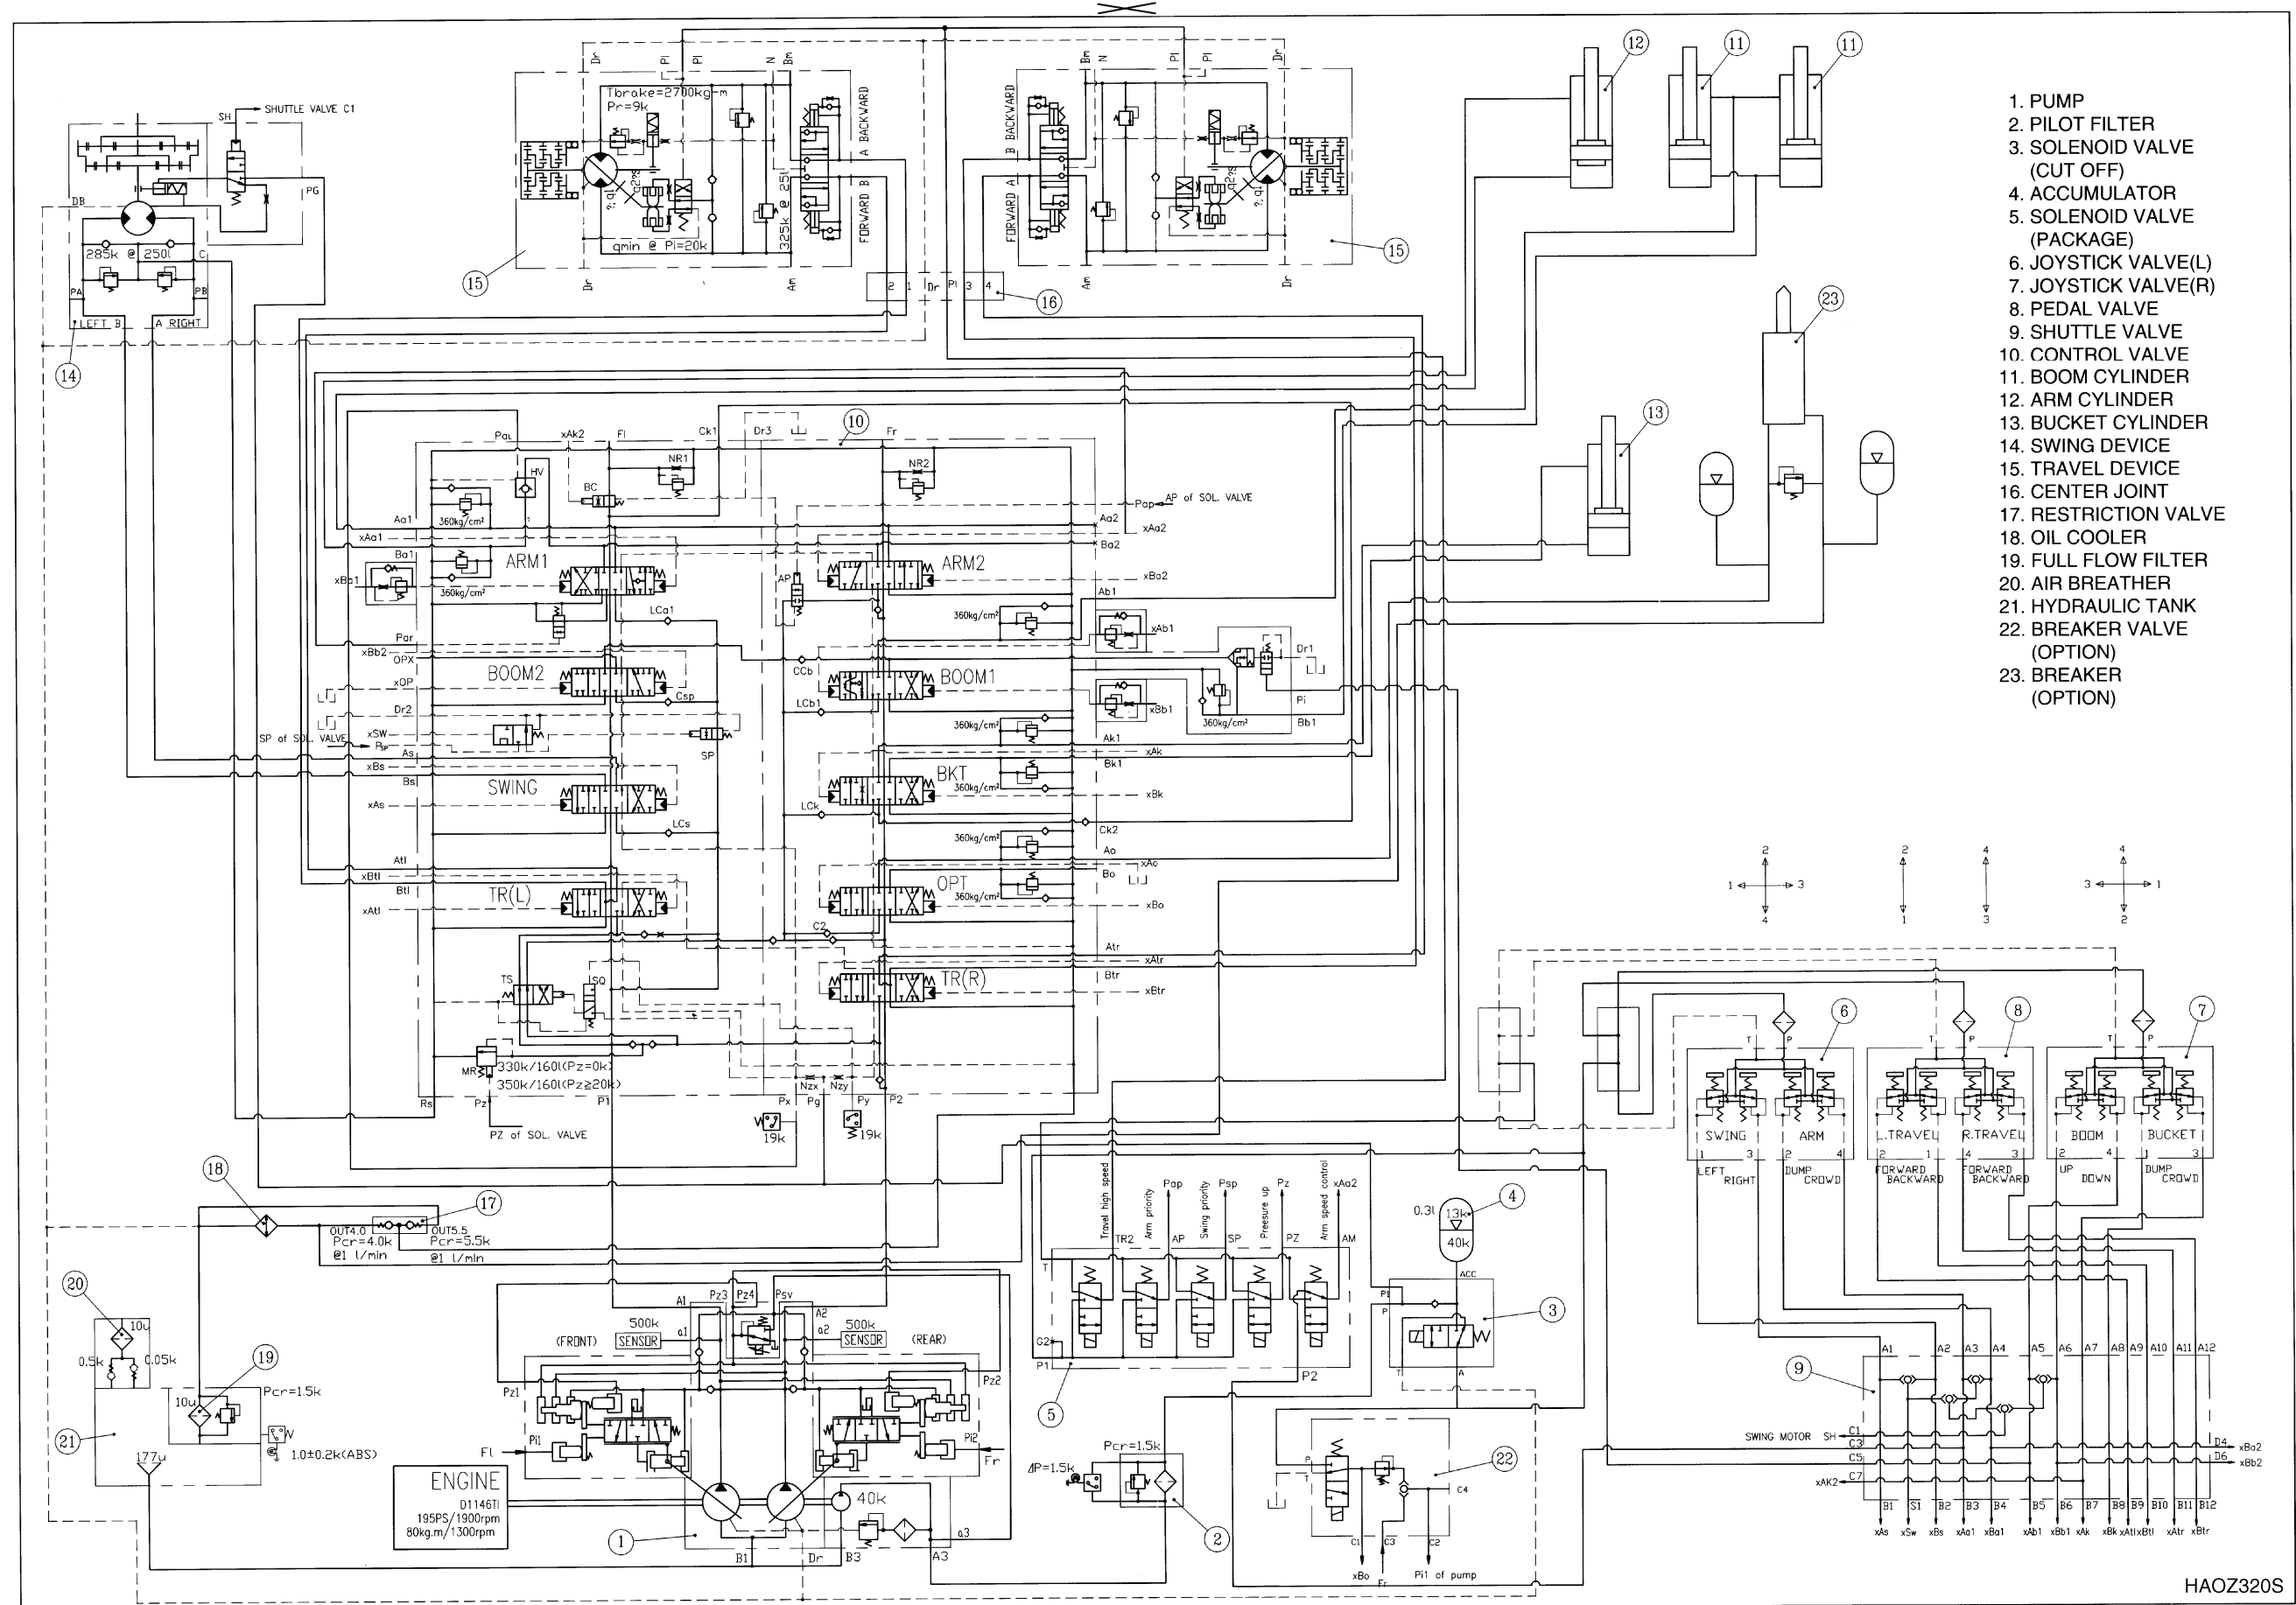


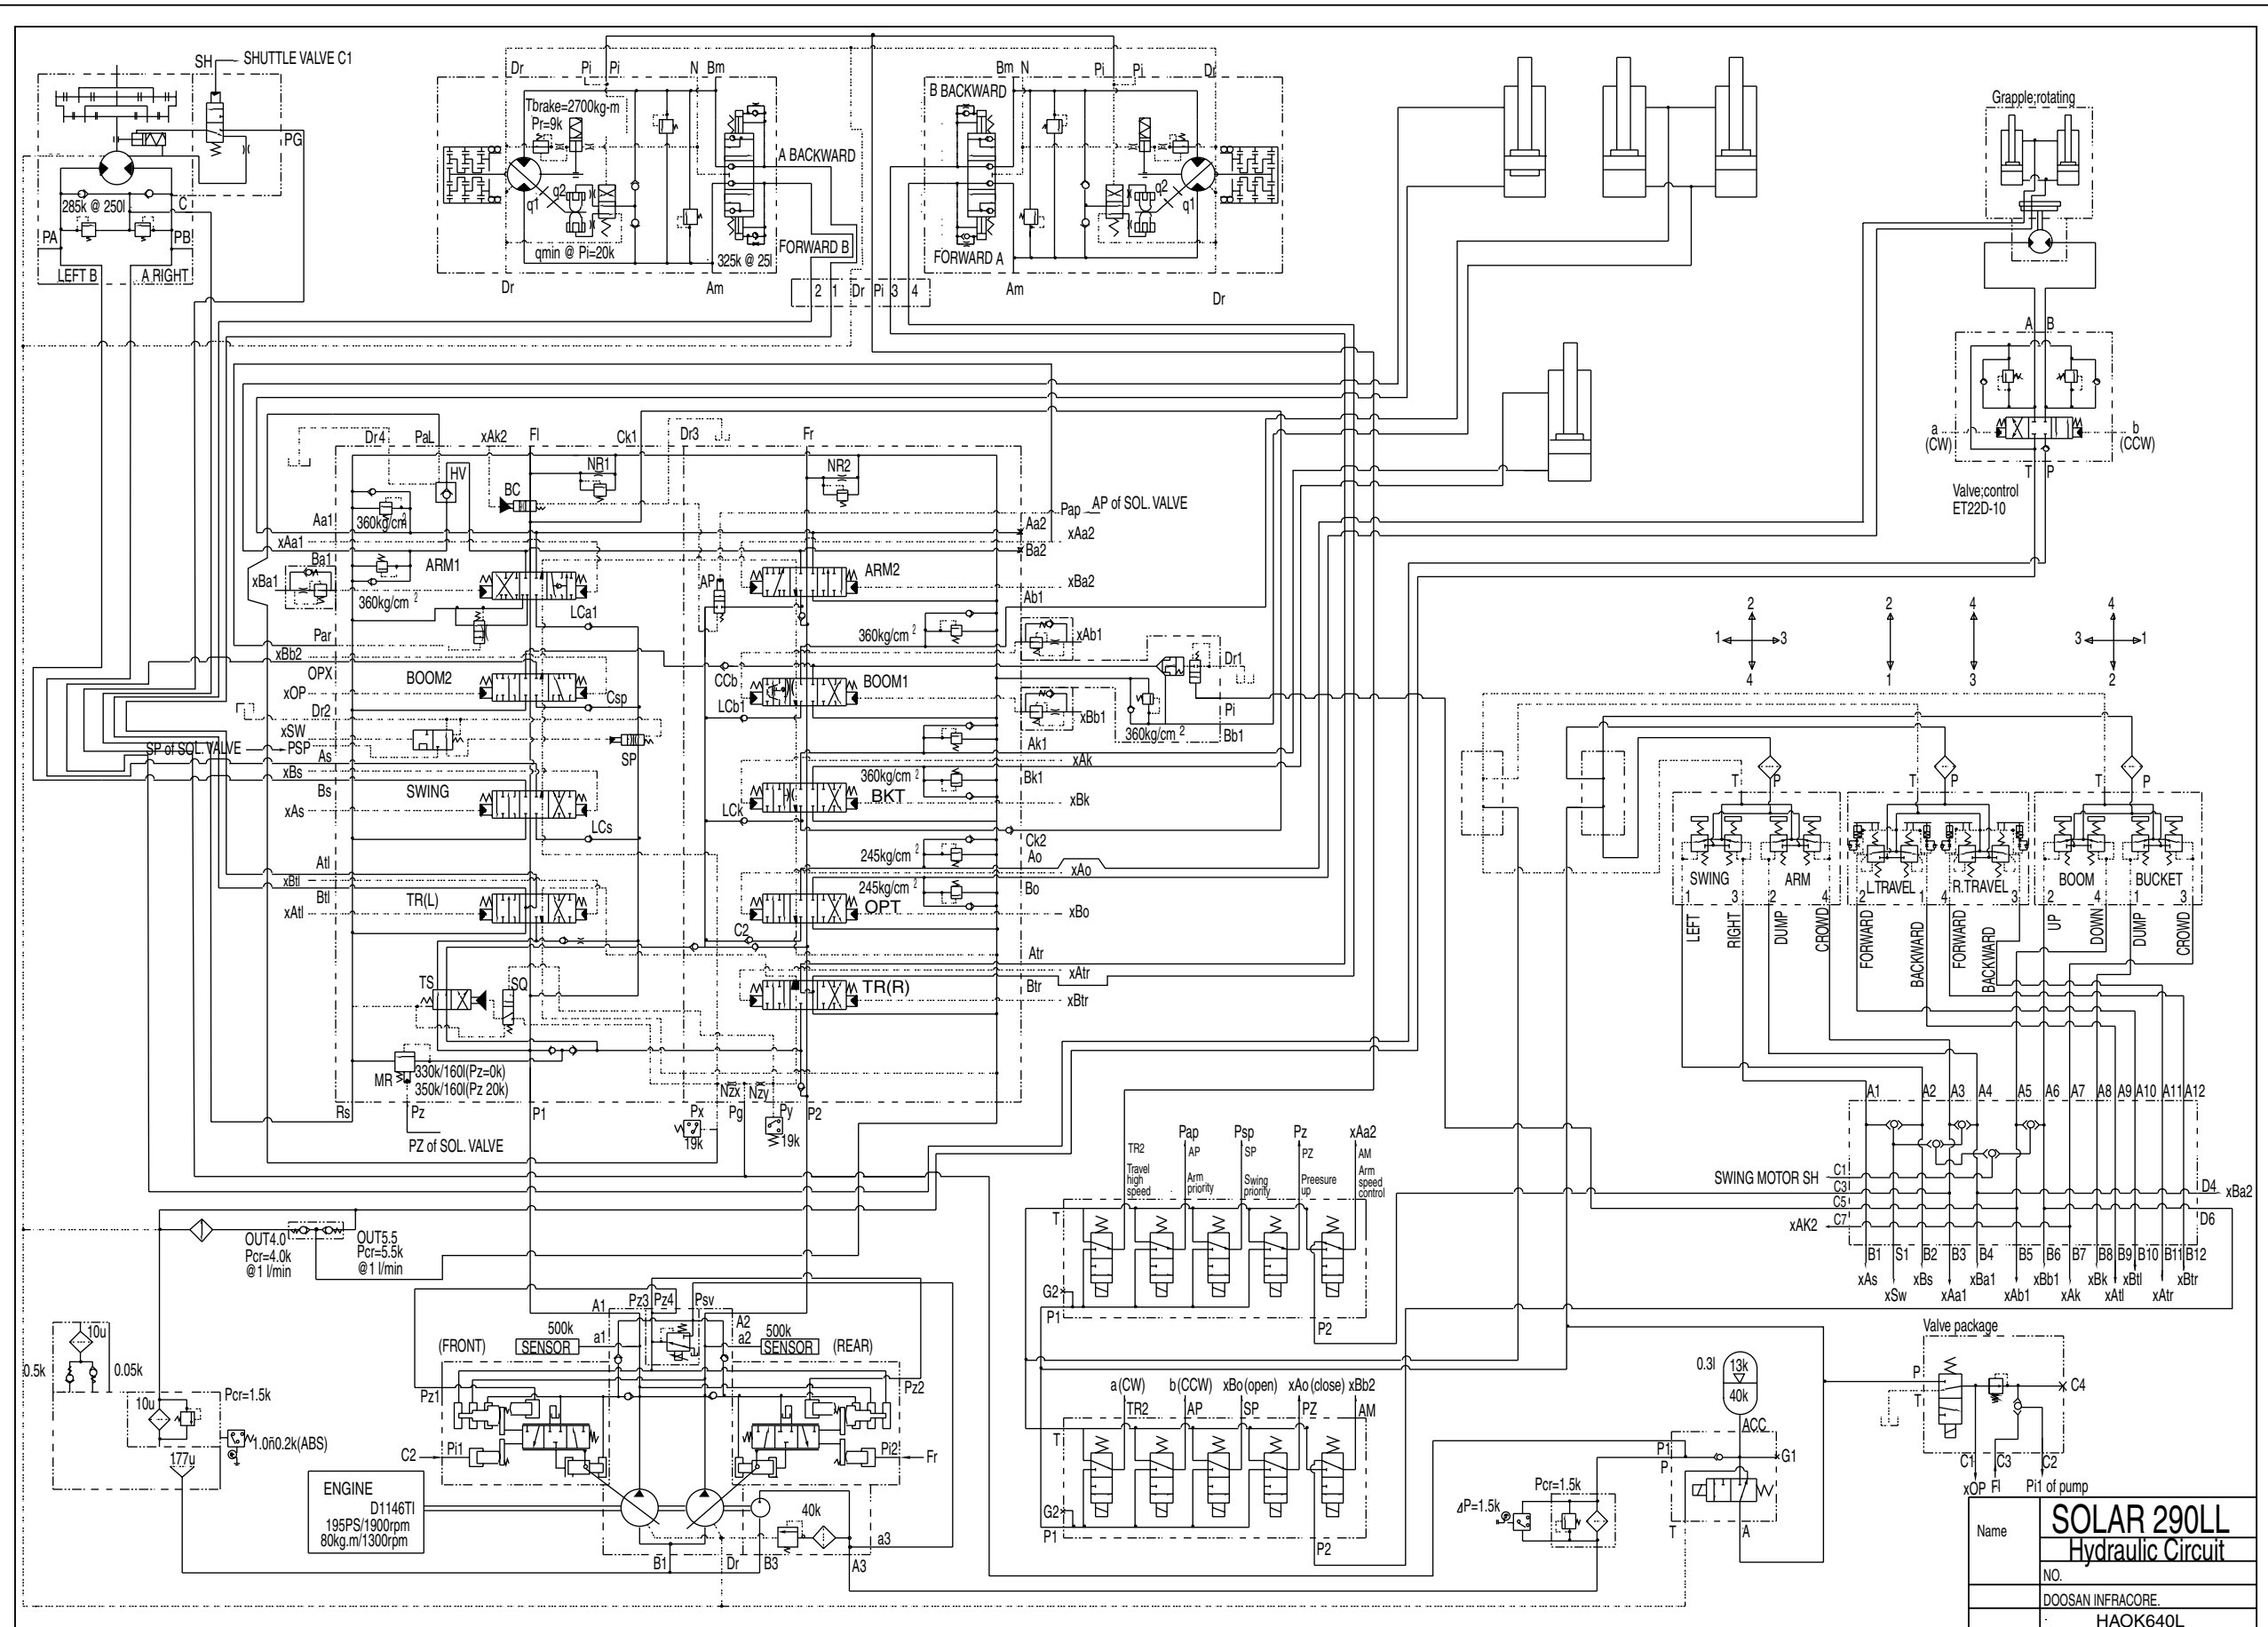


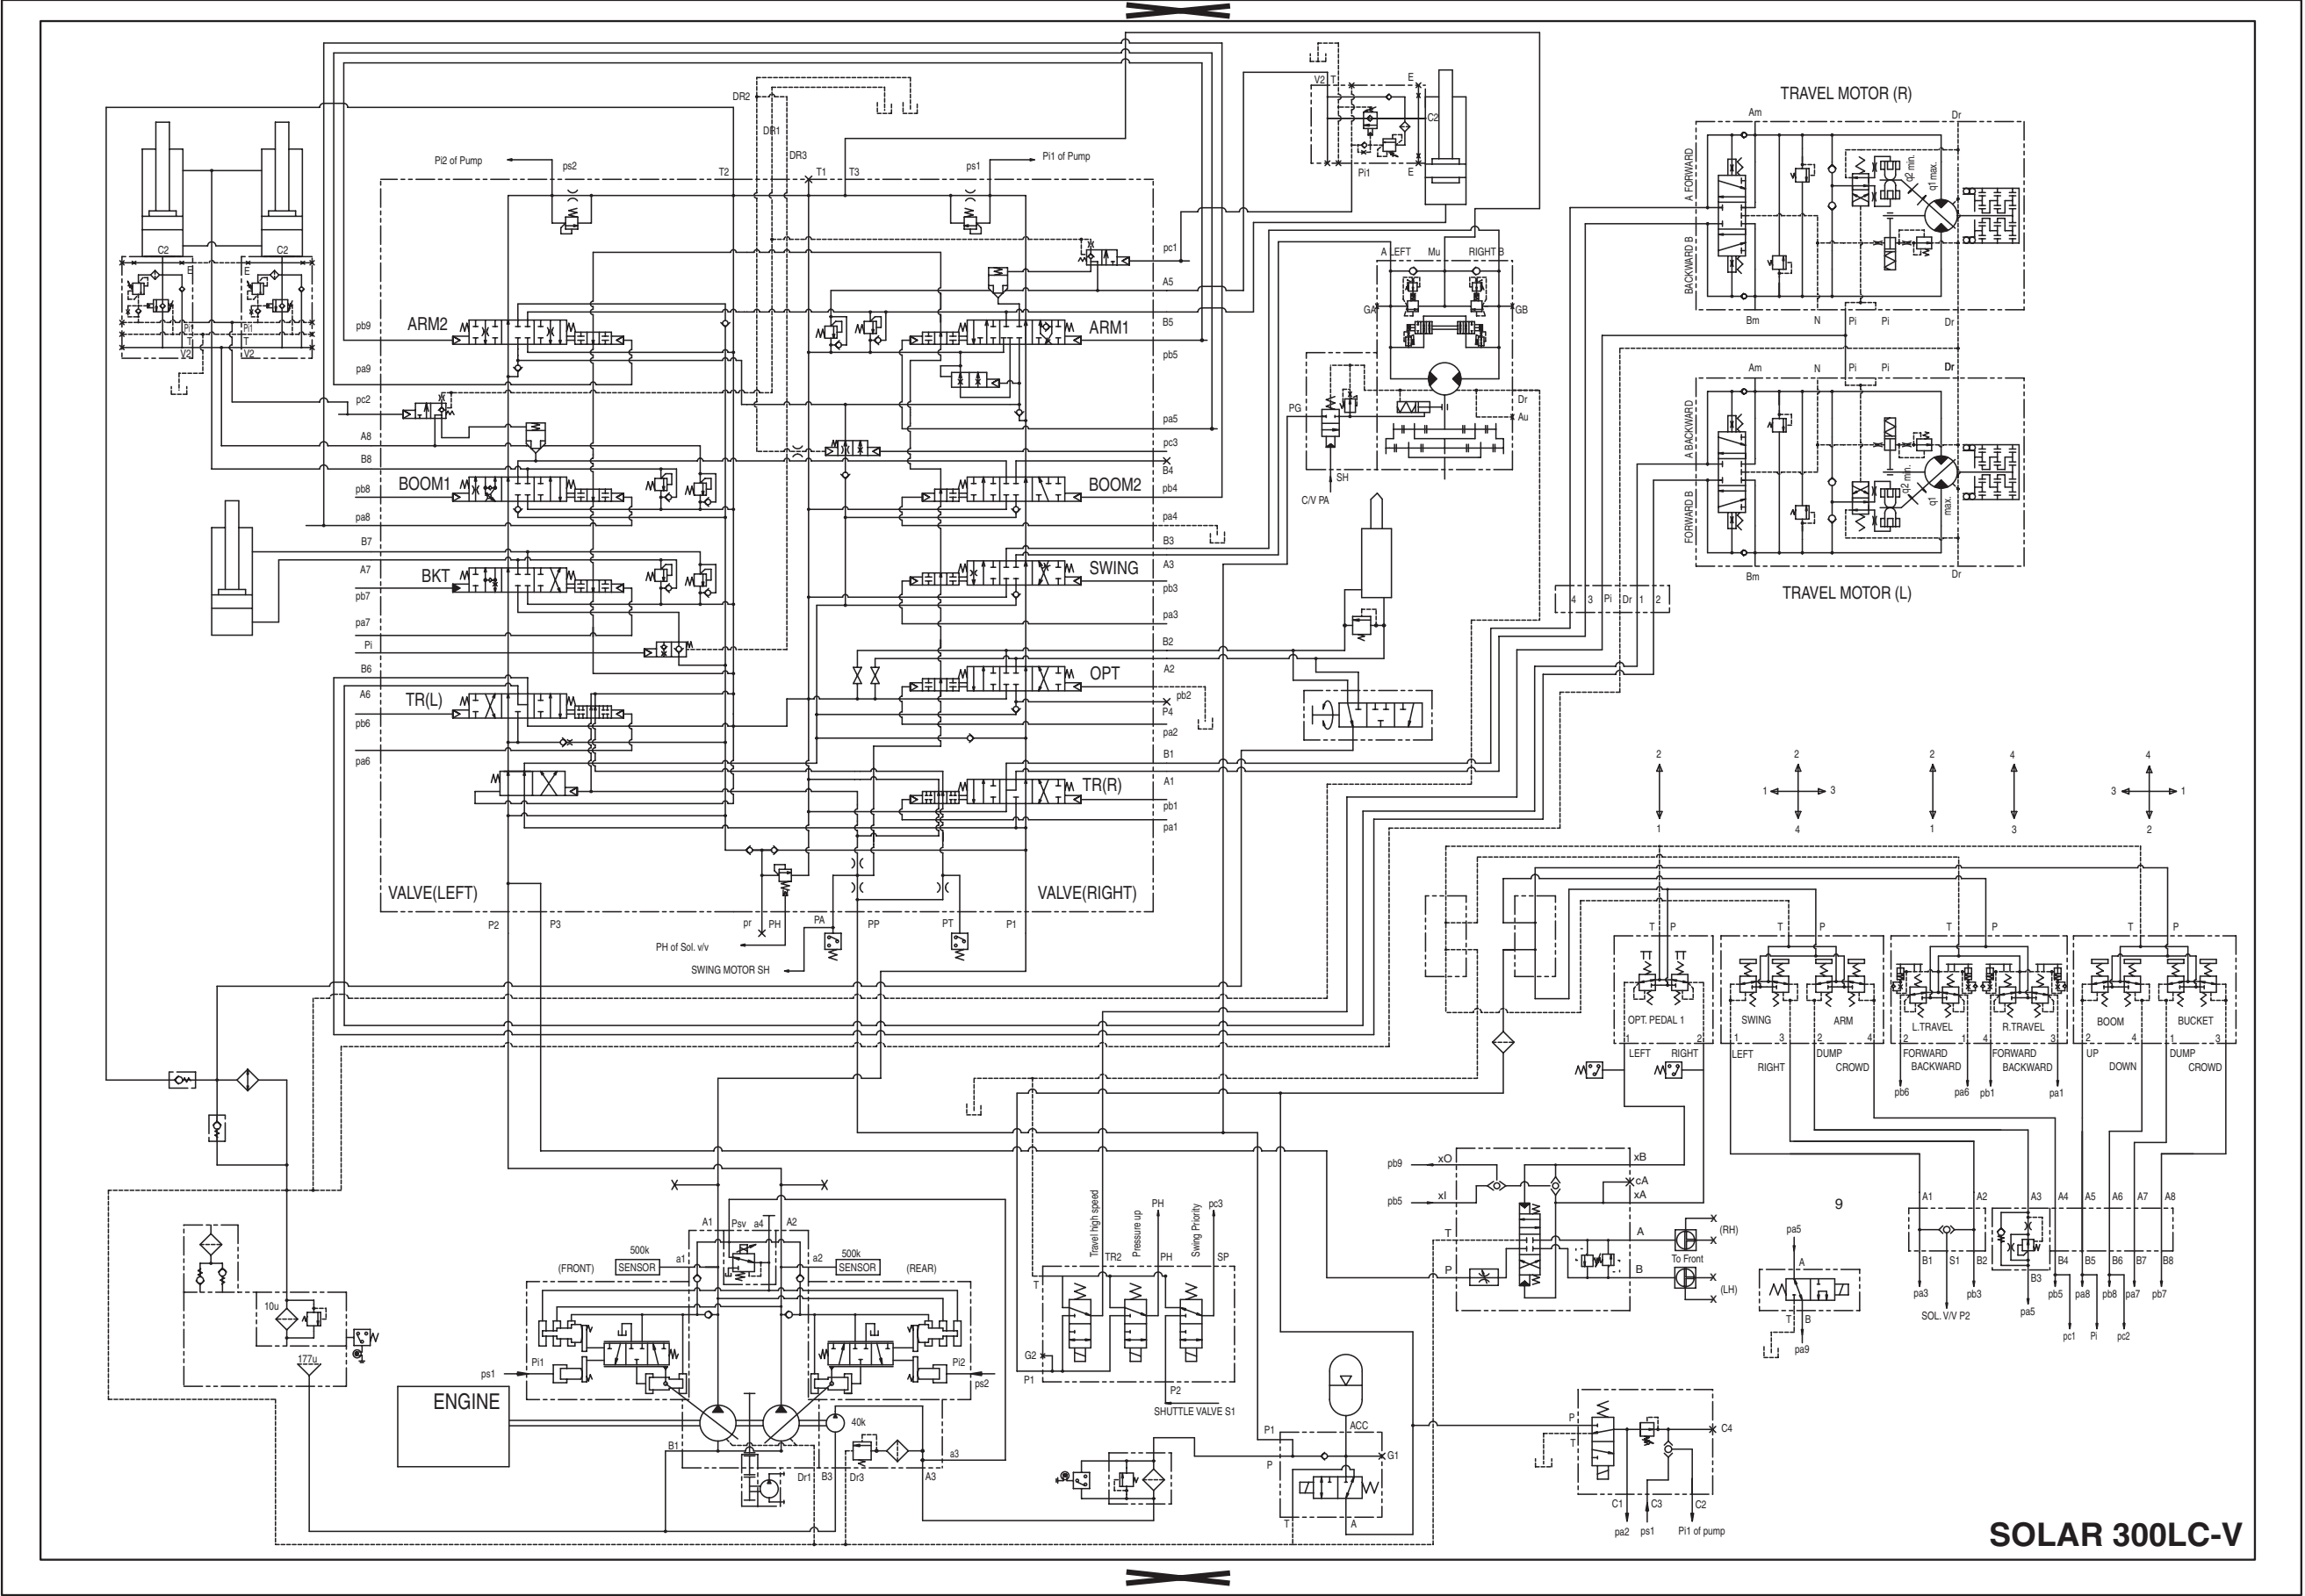


SOLAR 300LC-V

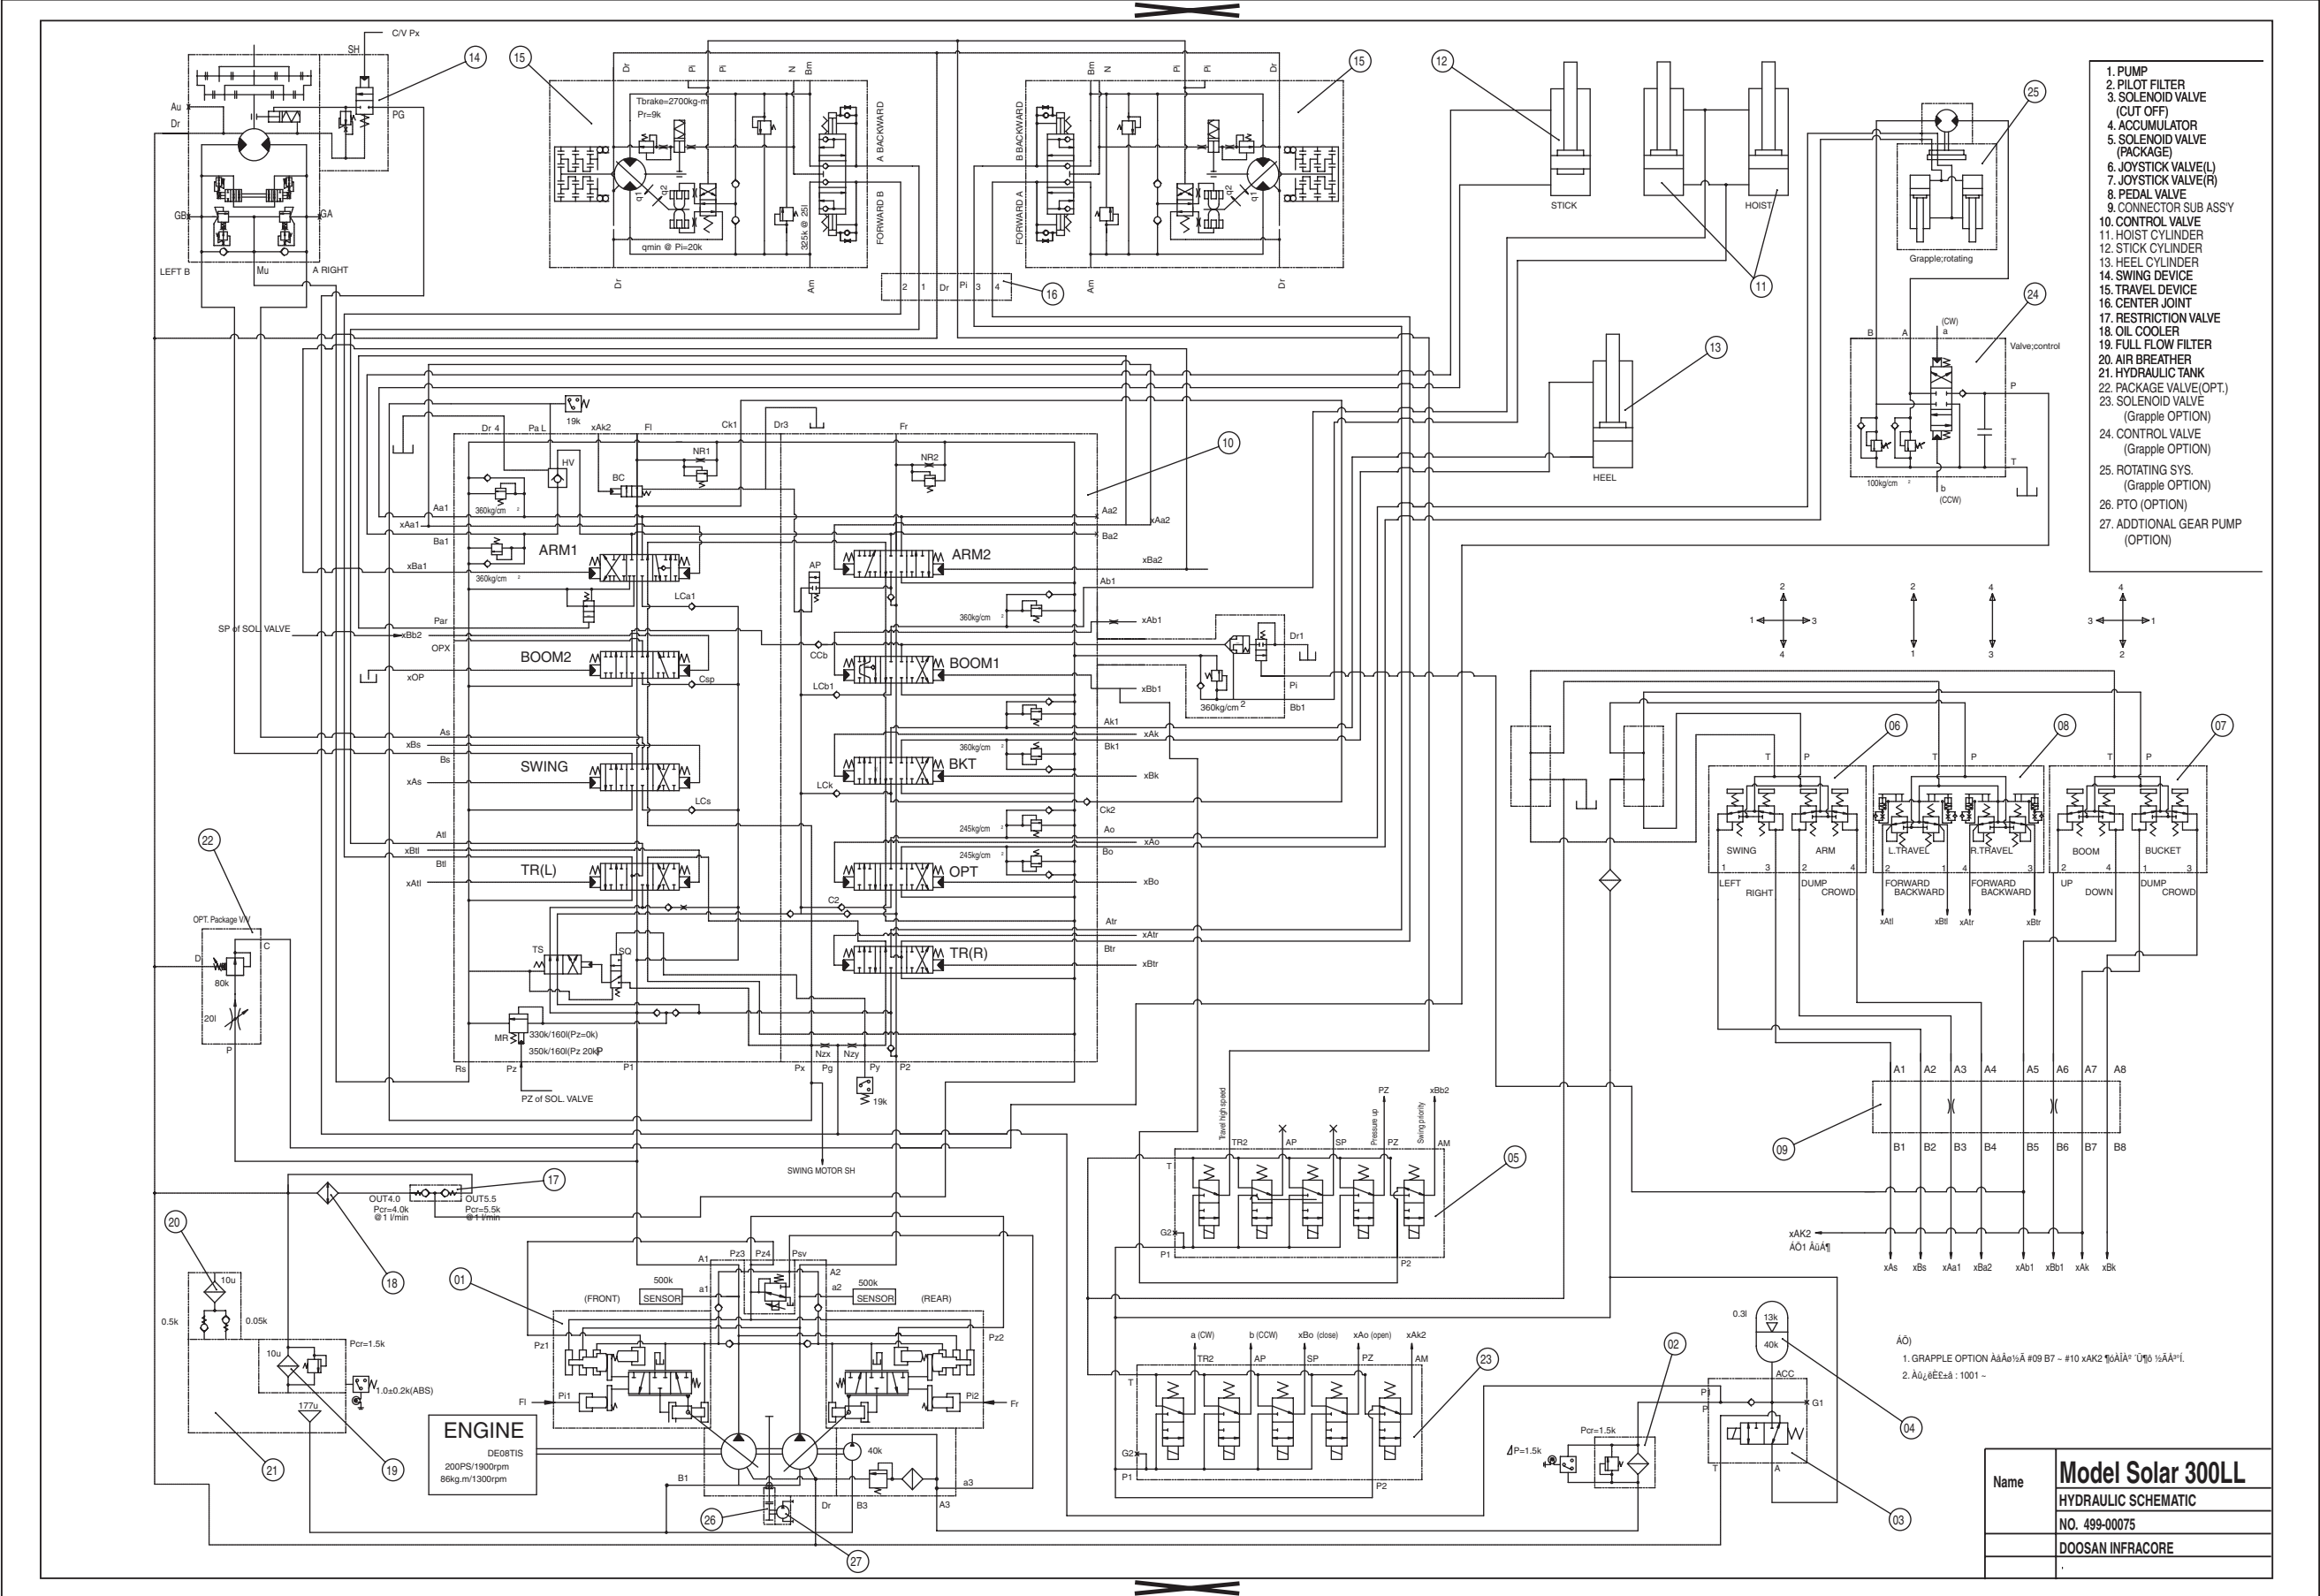

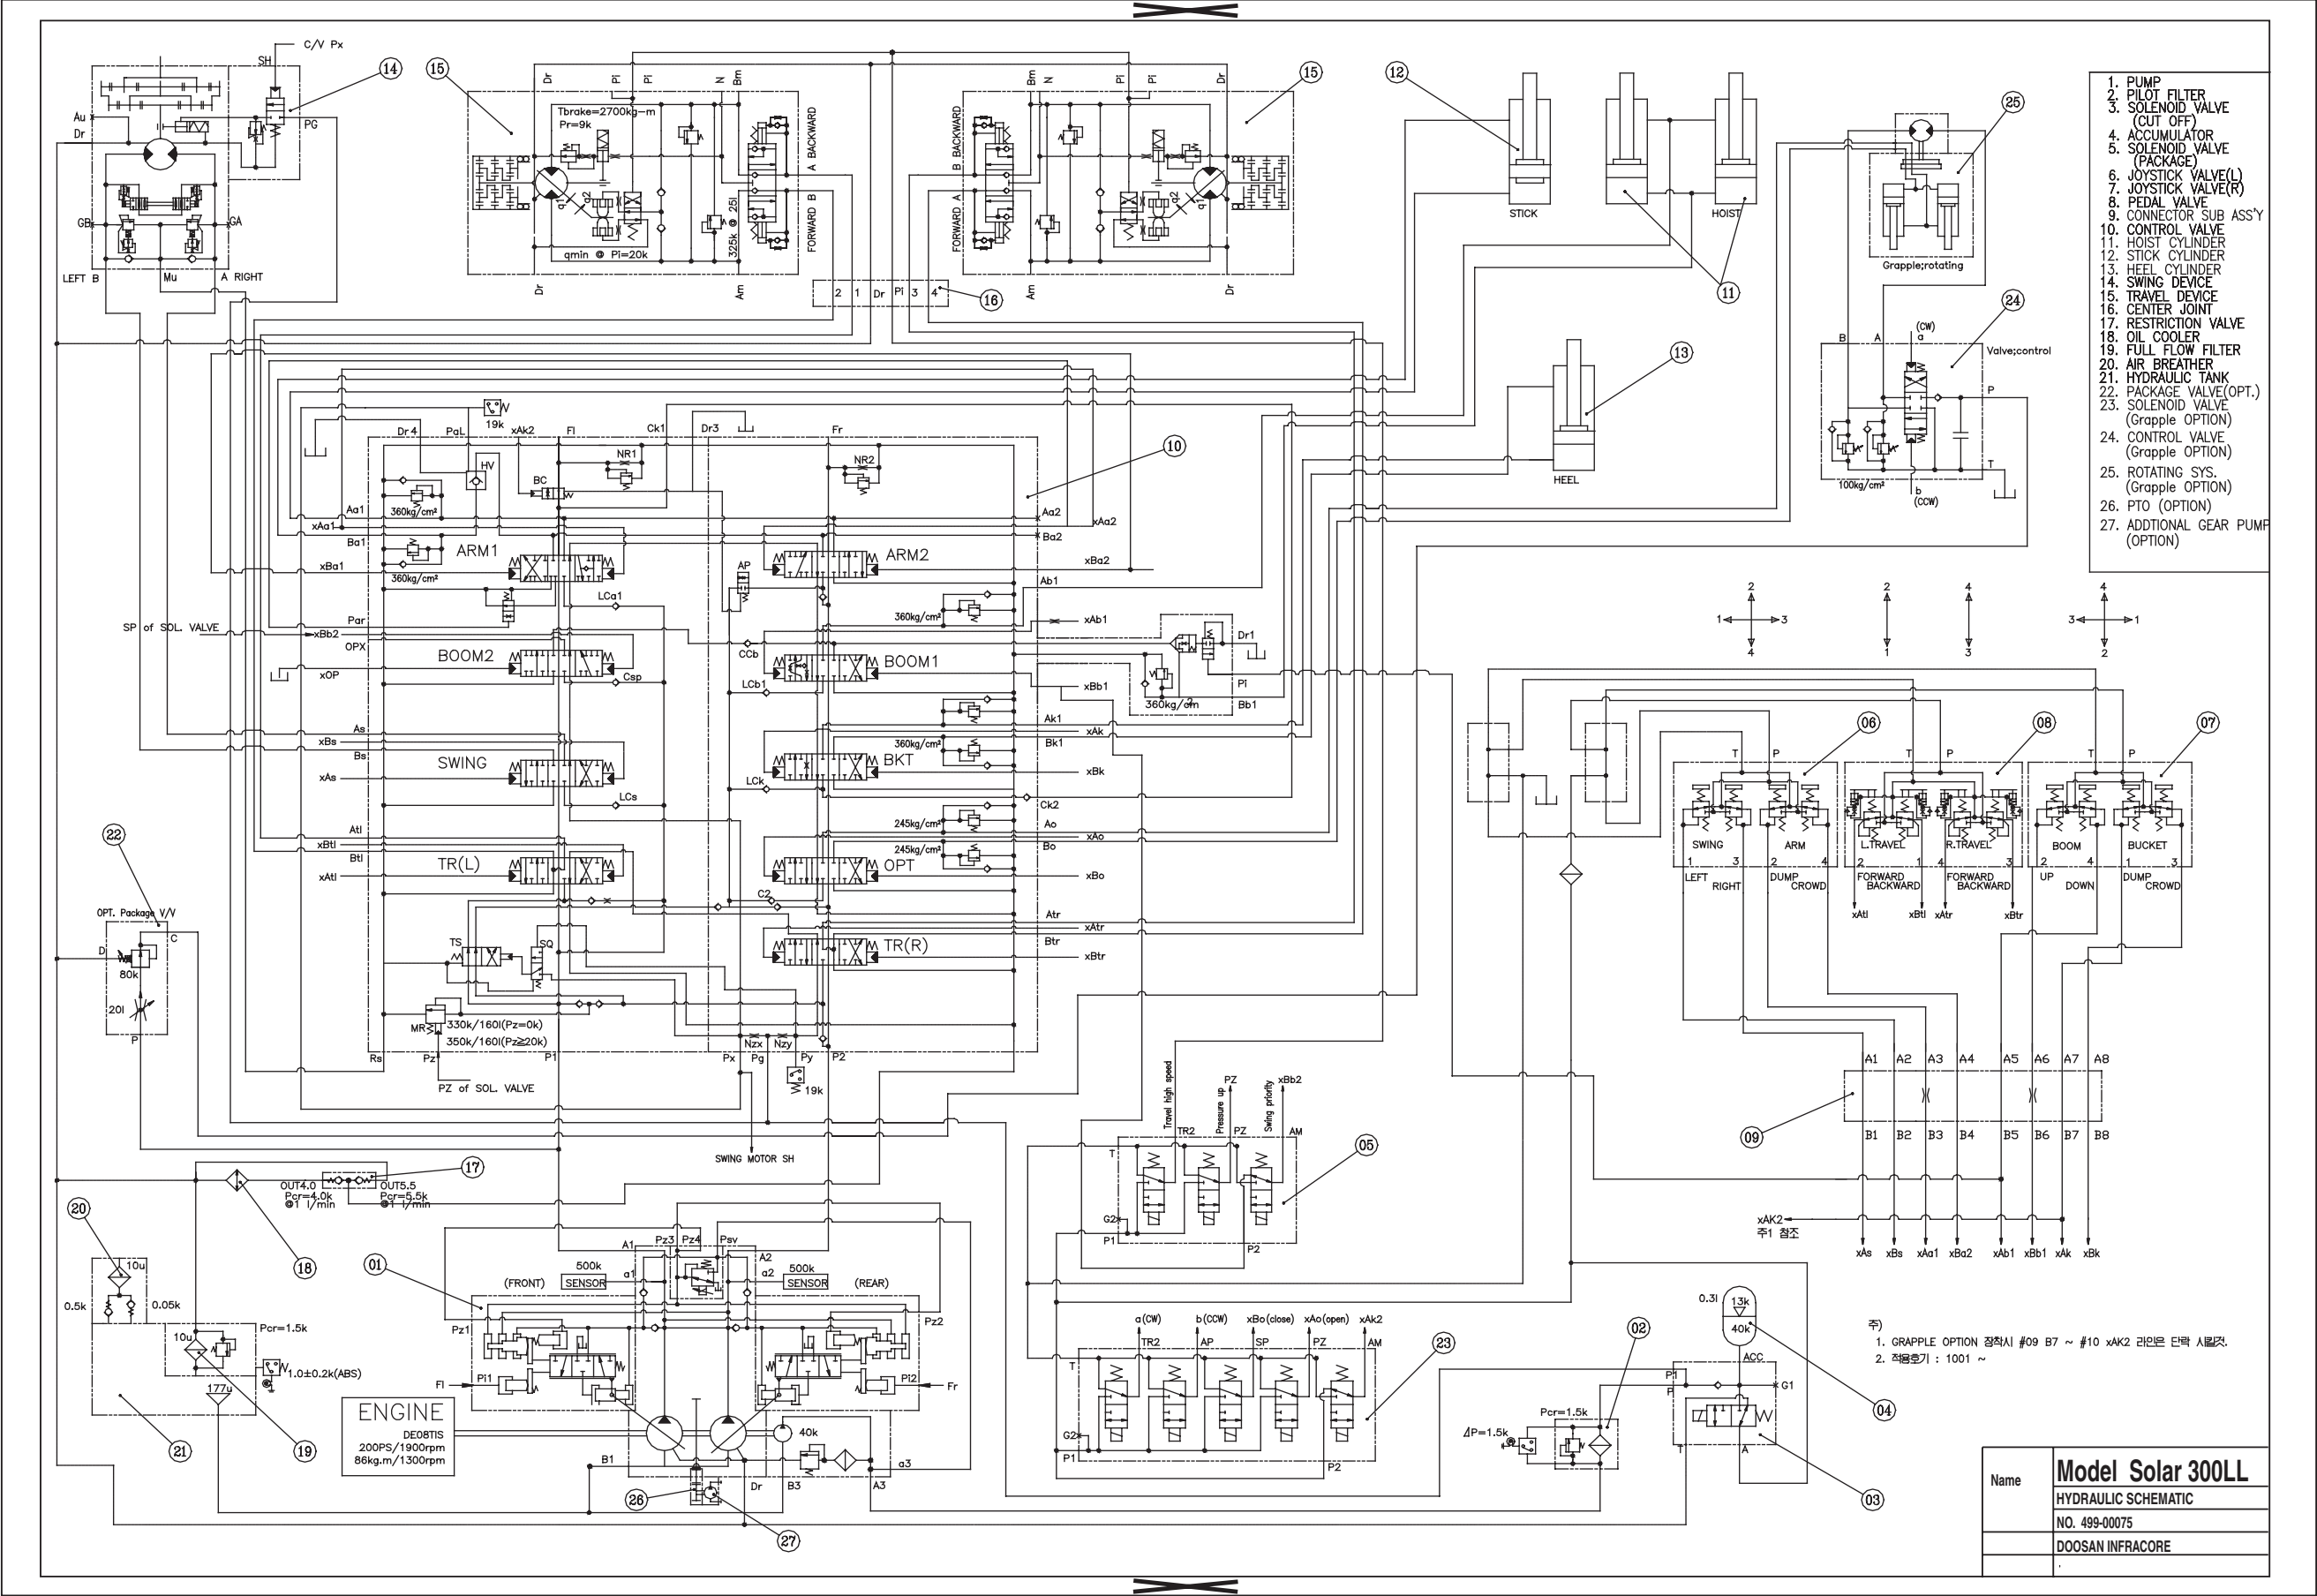


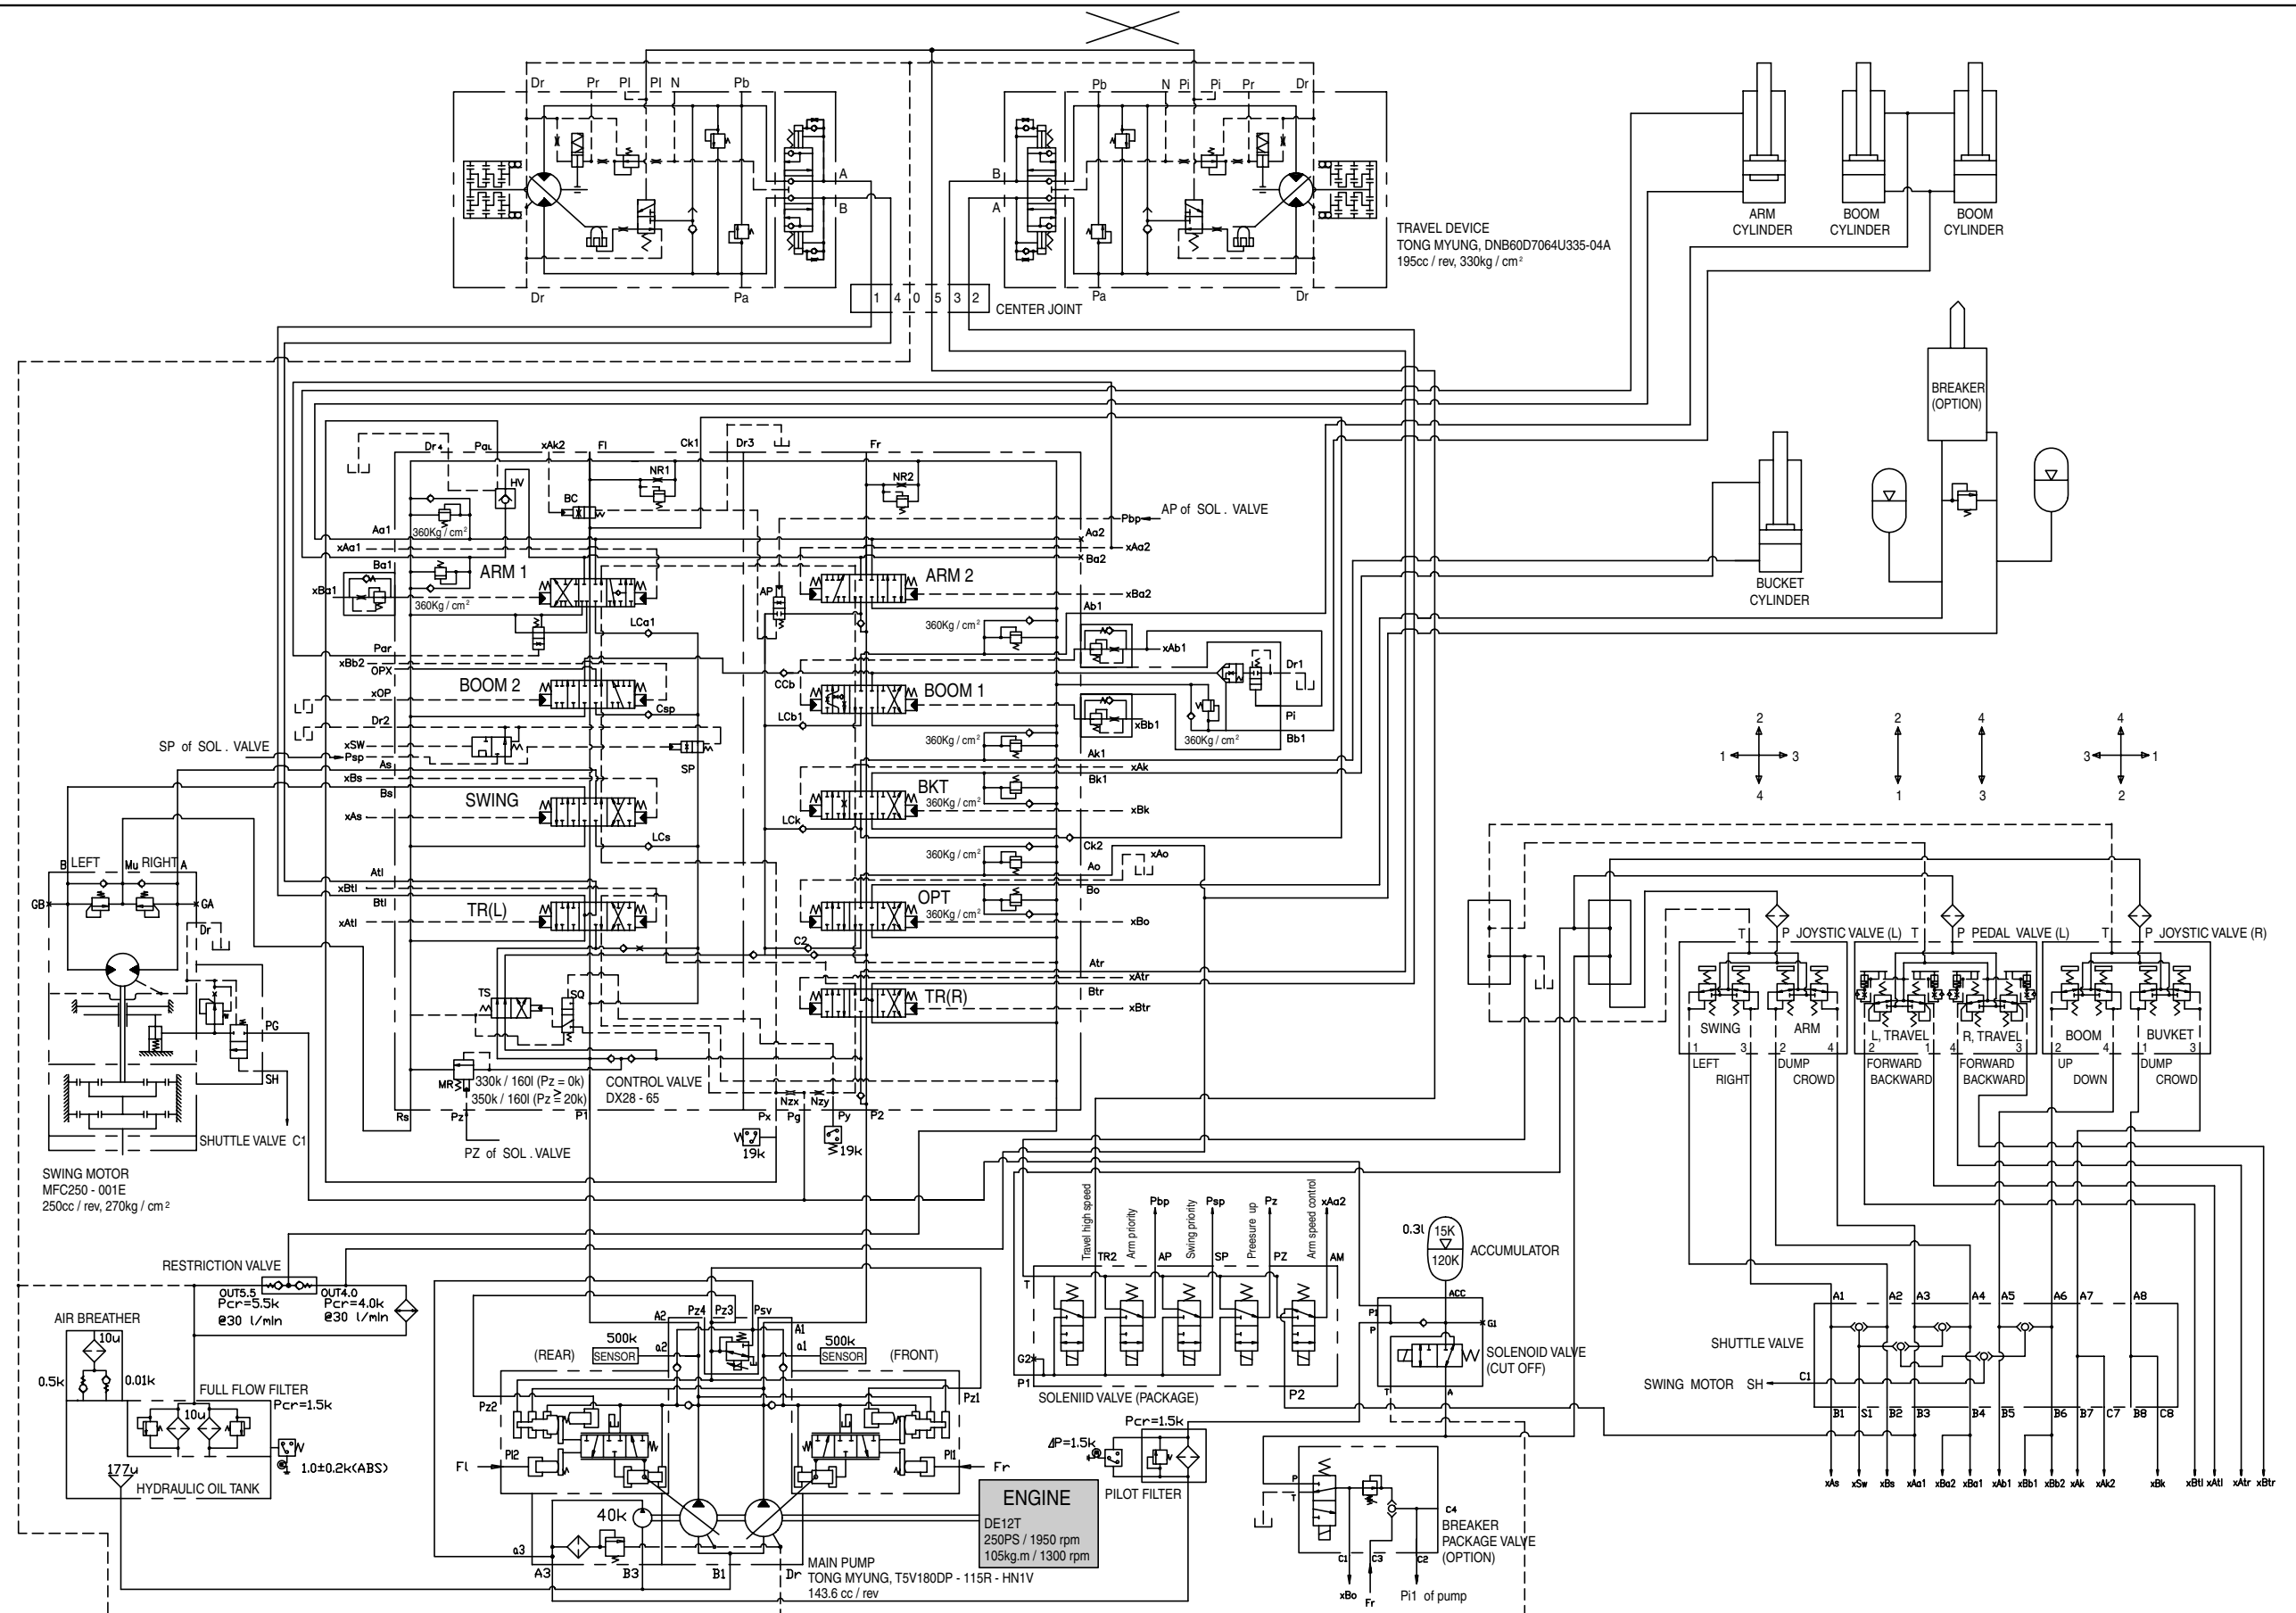



HOA7011L

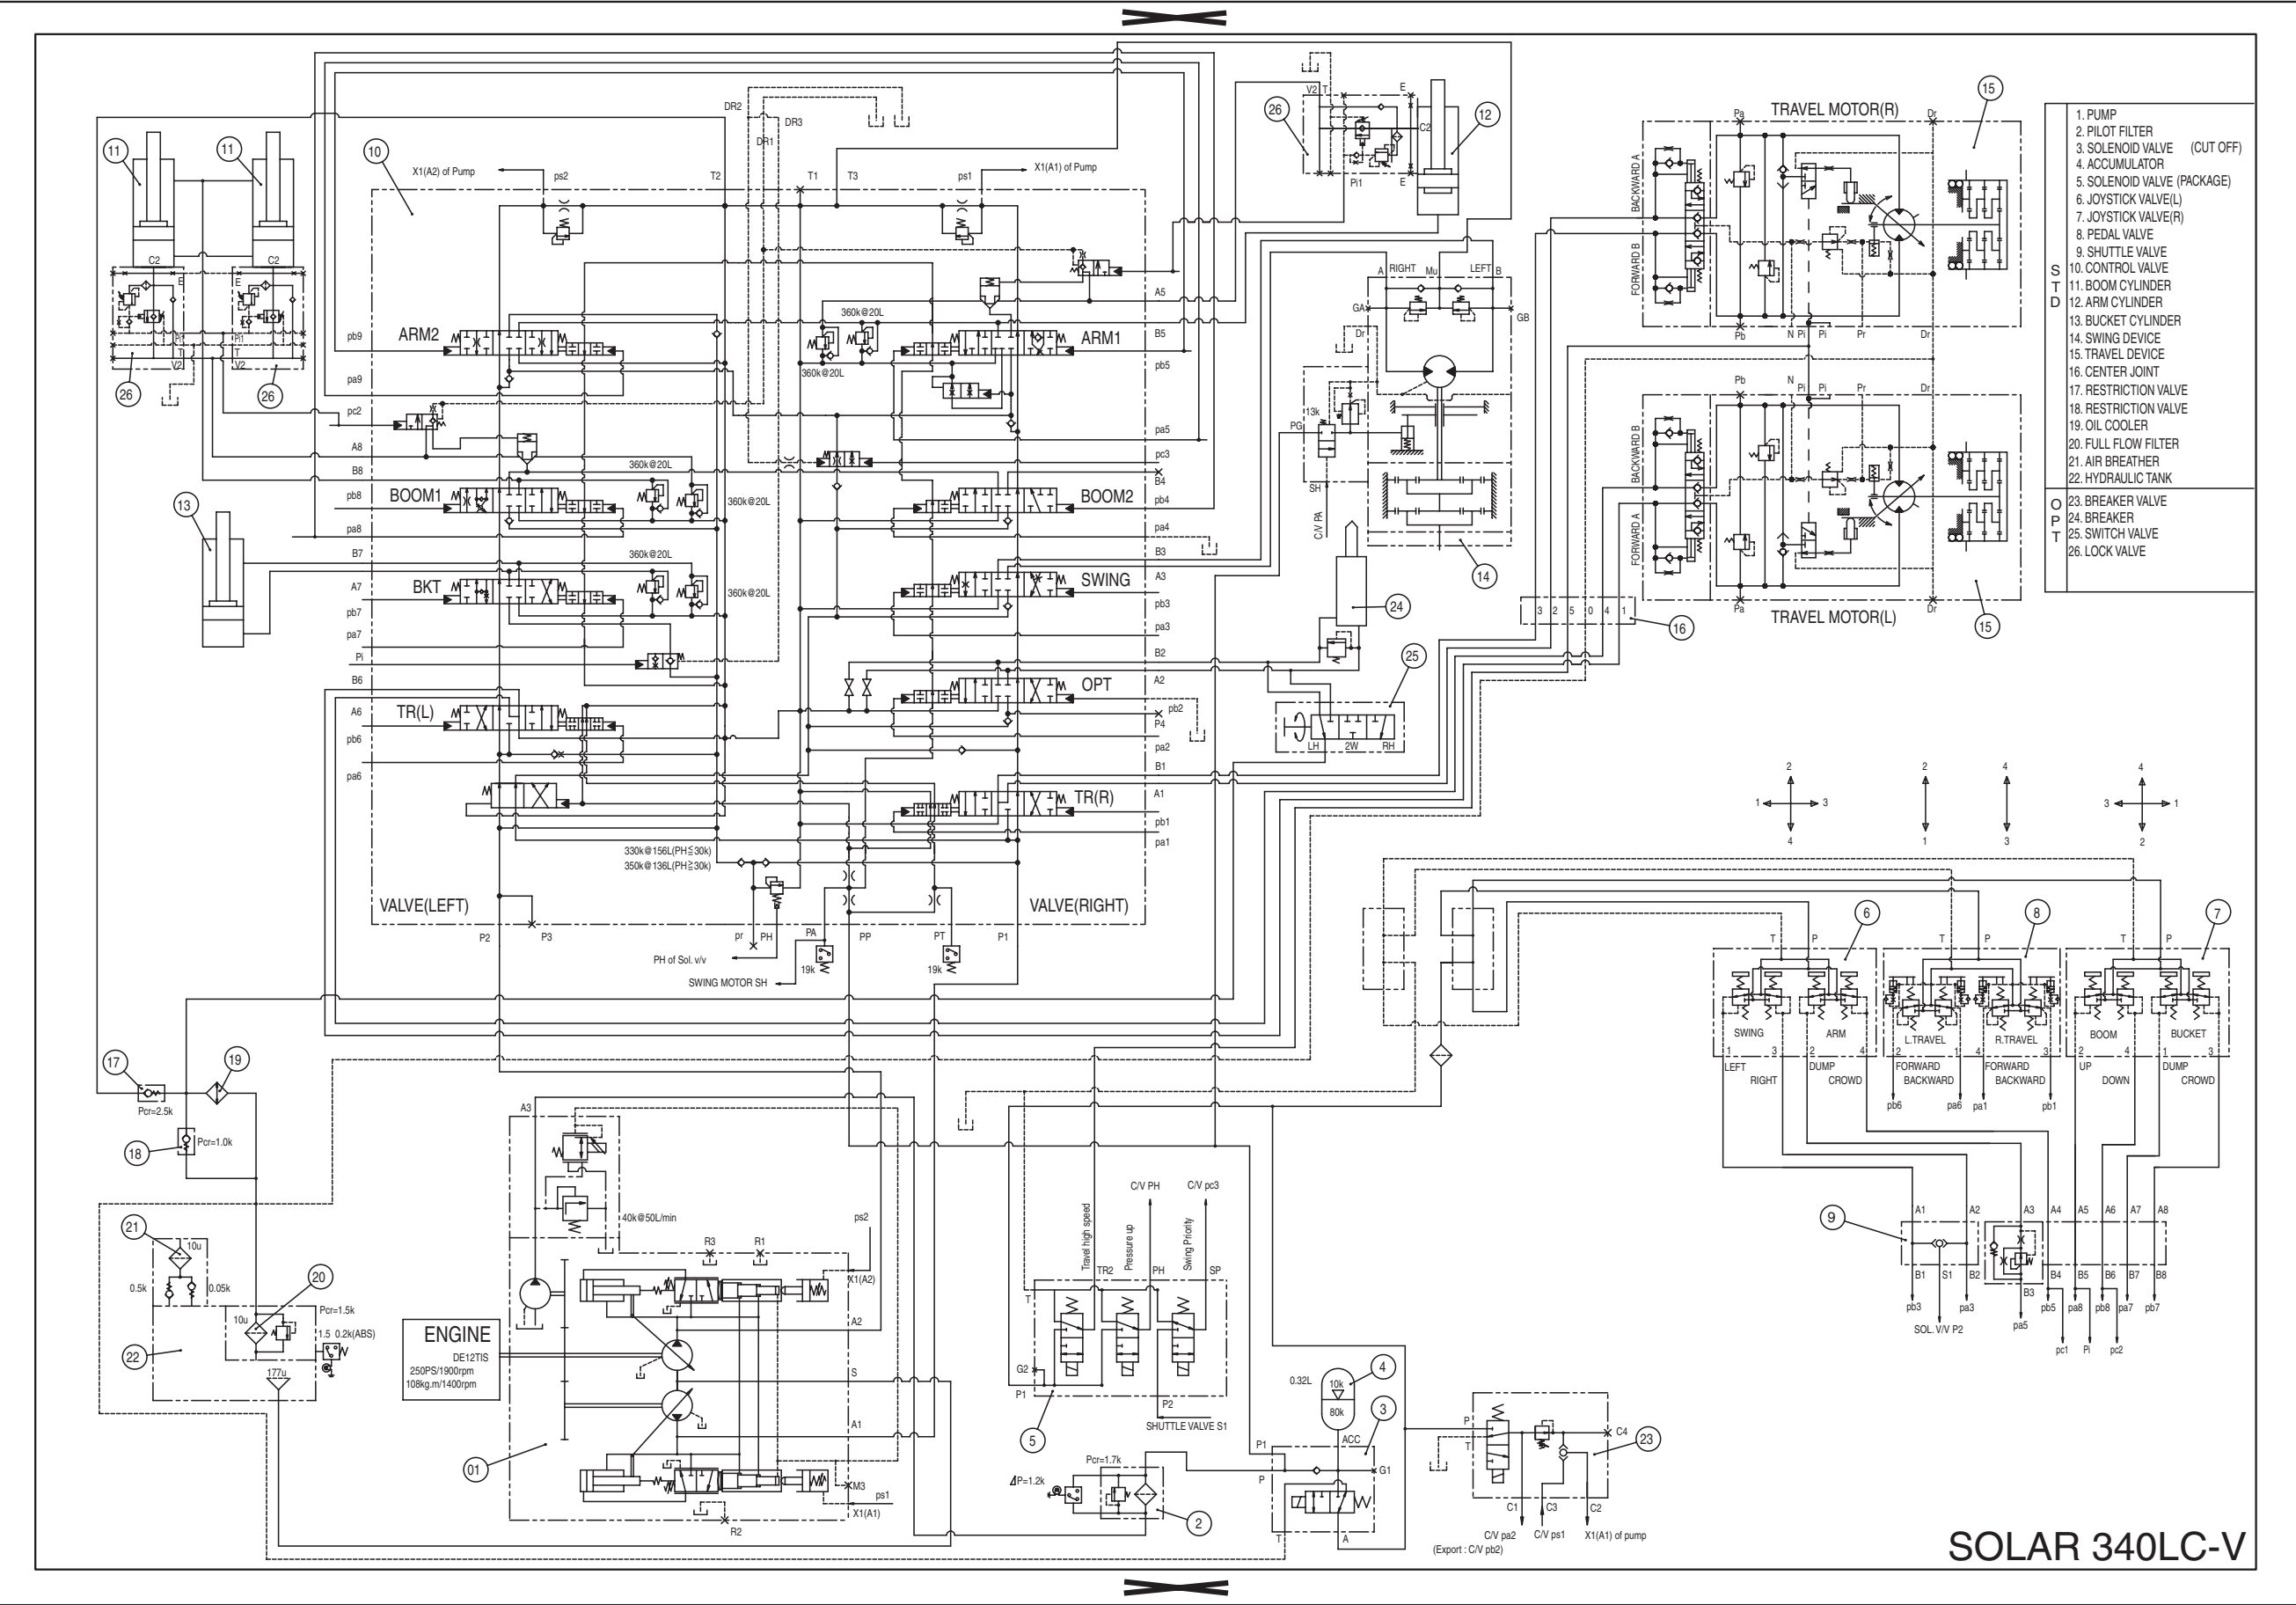


SOLAR 340LC-V

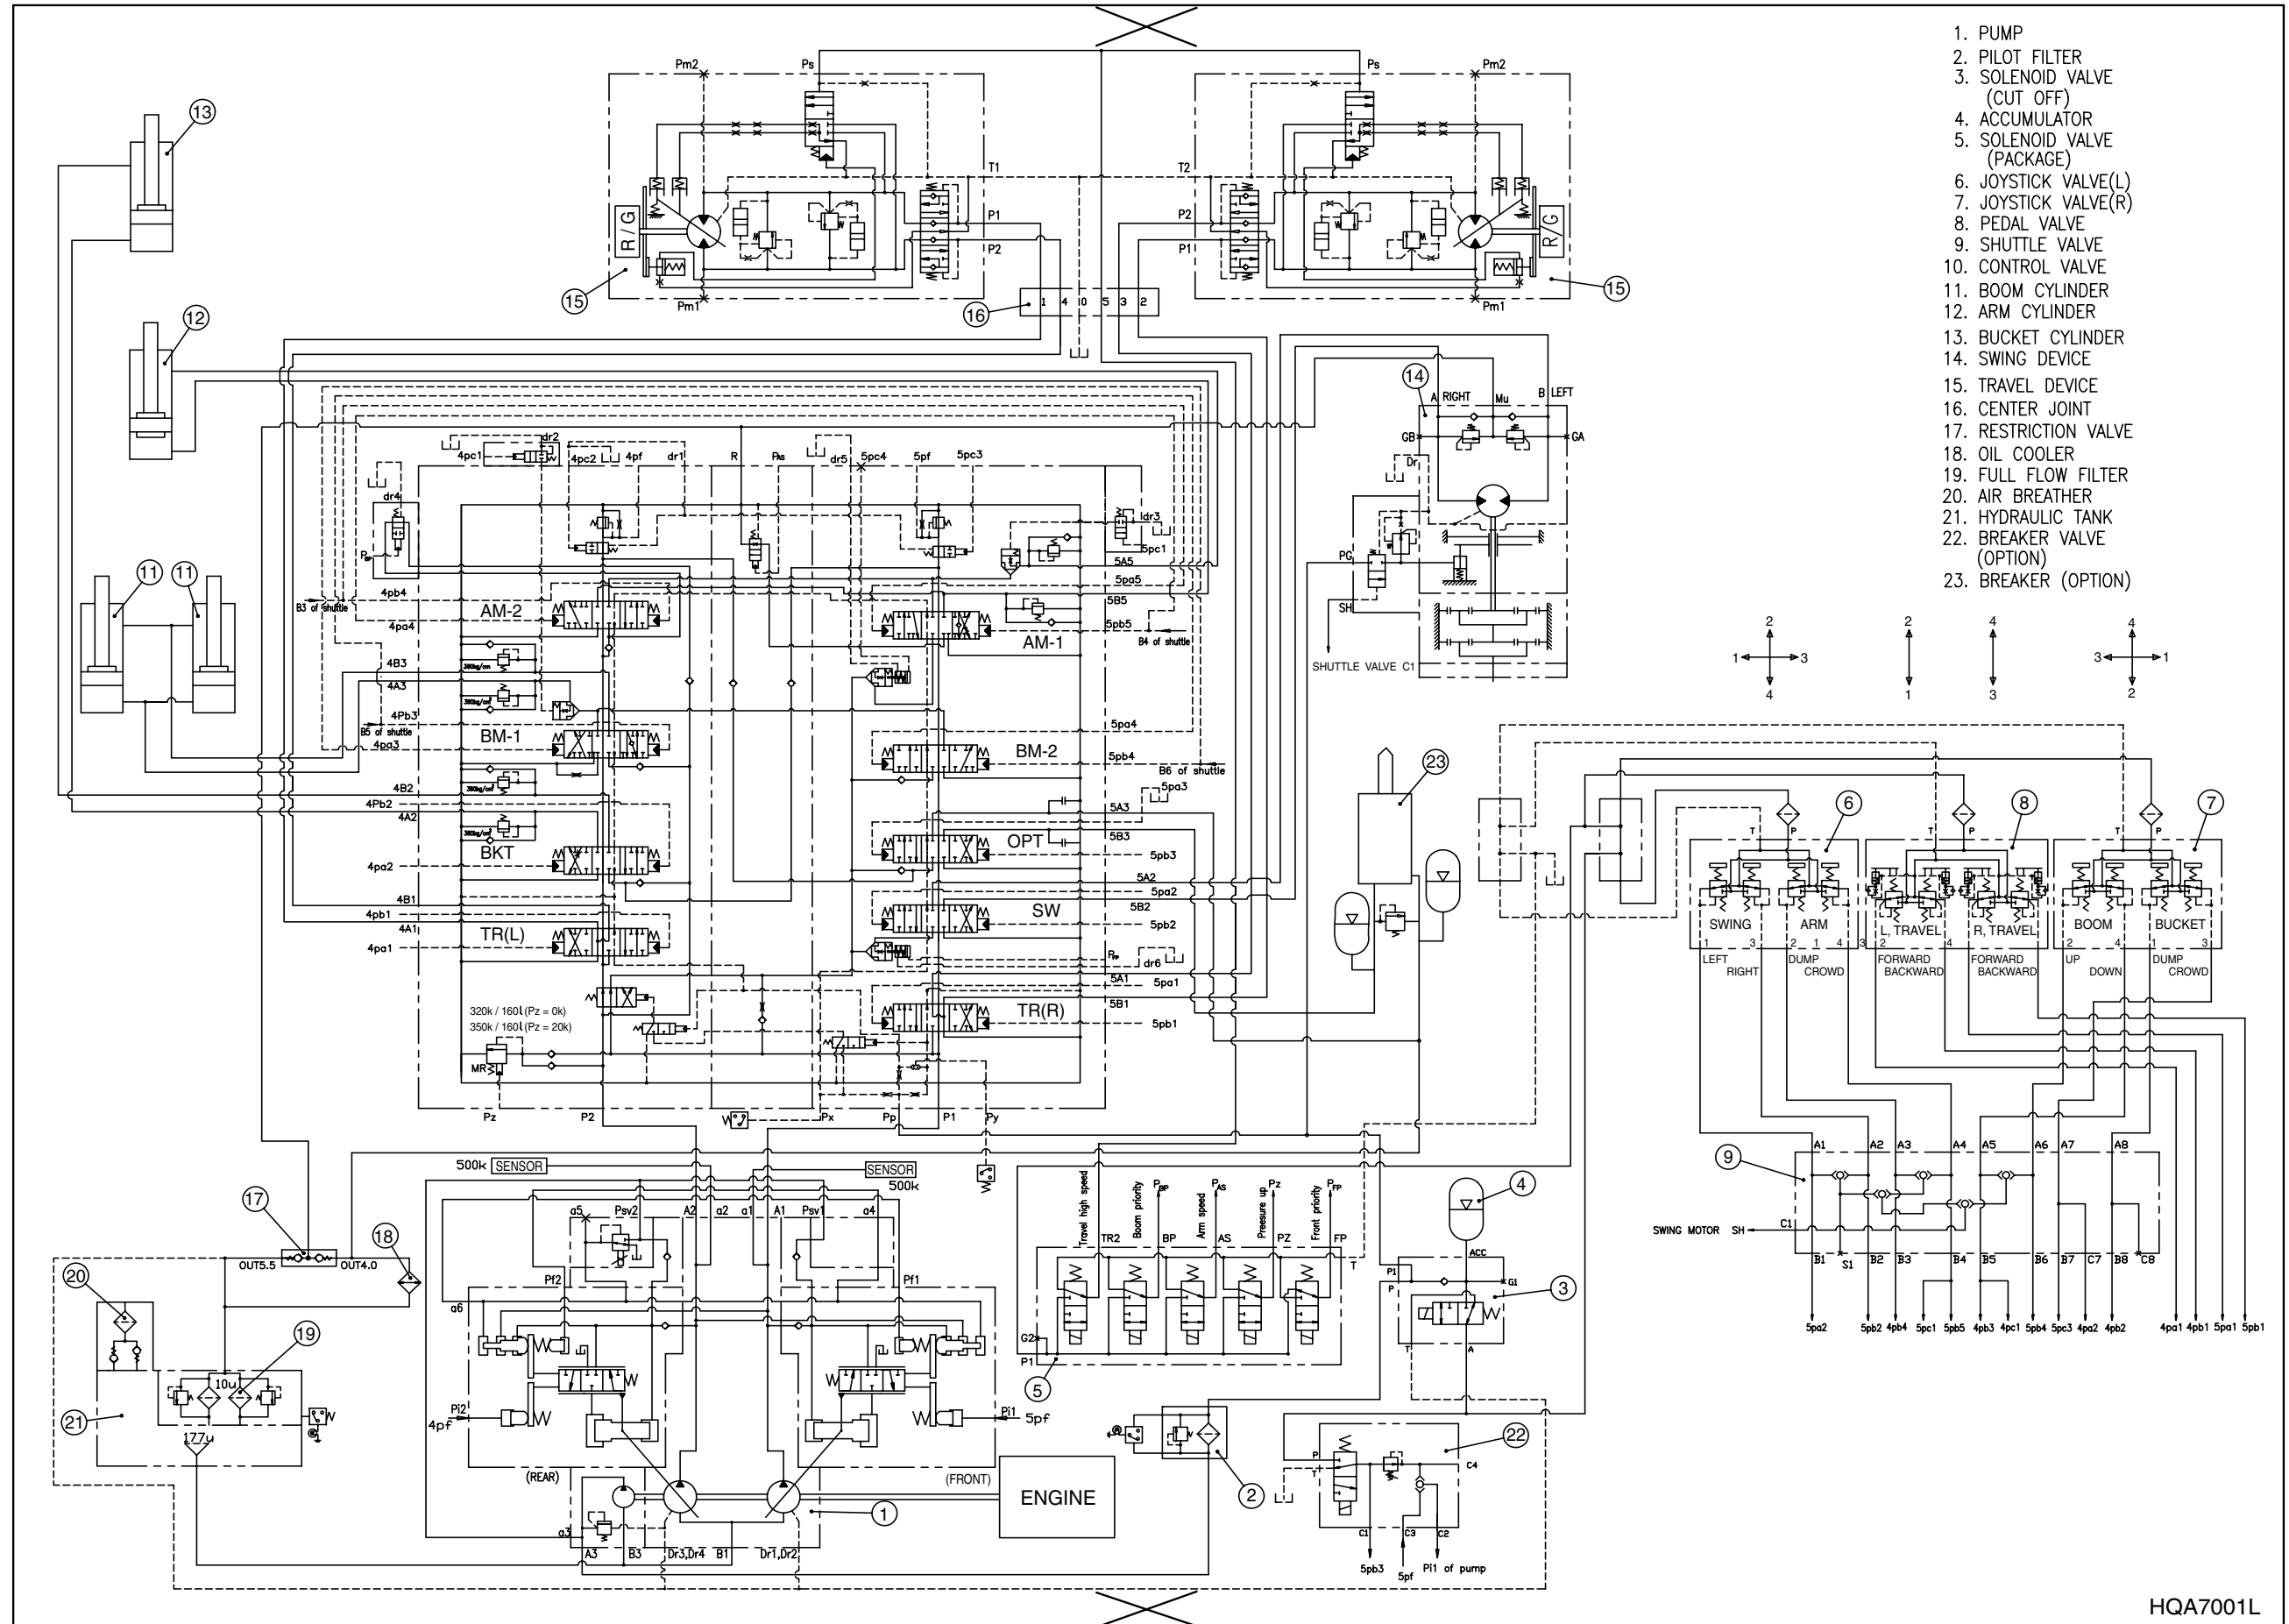

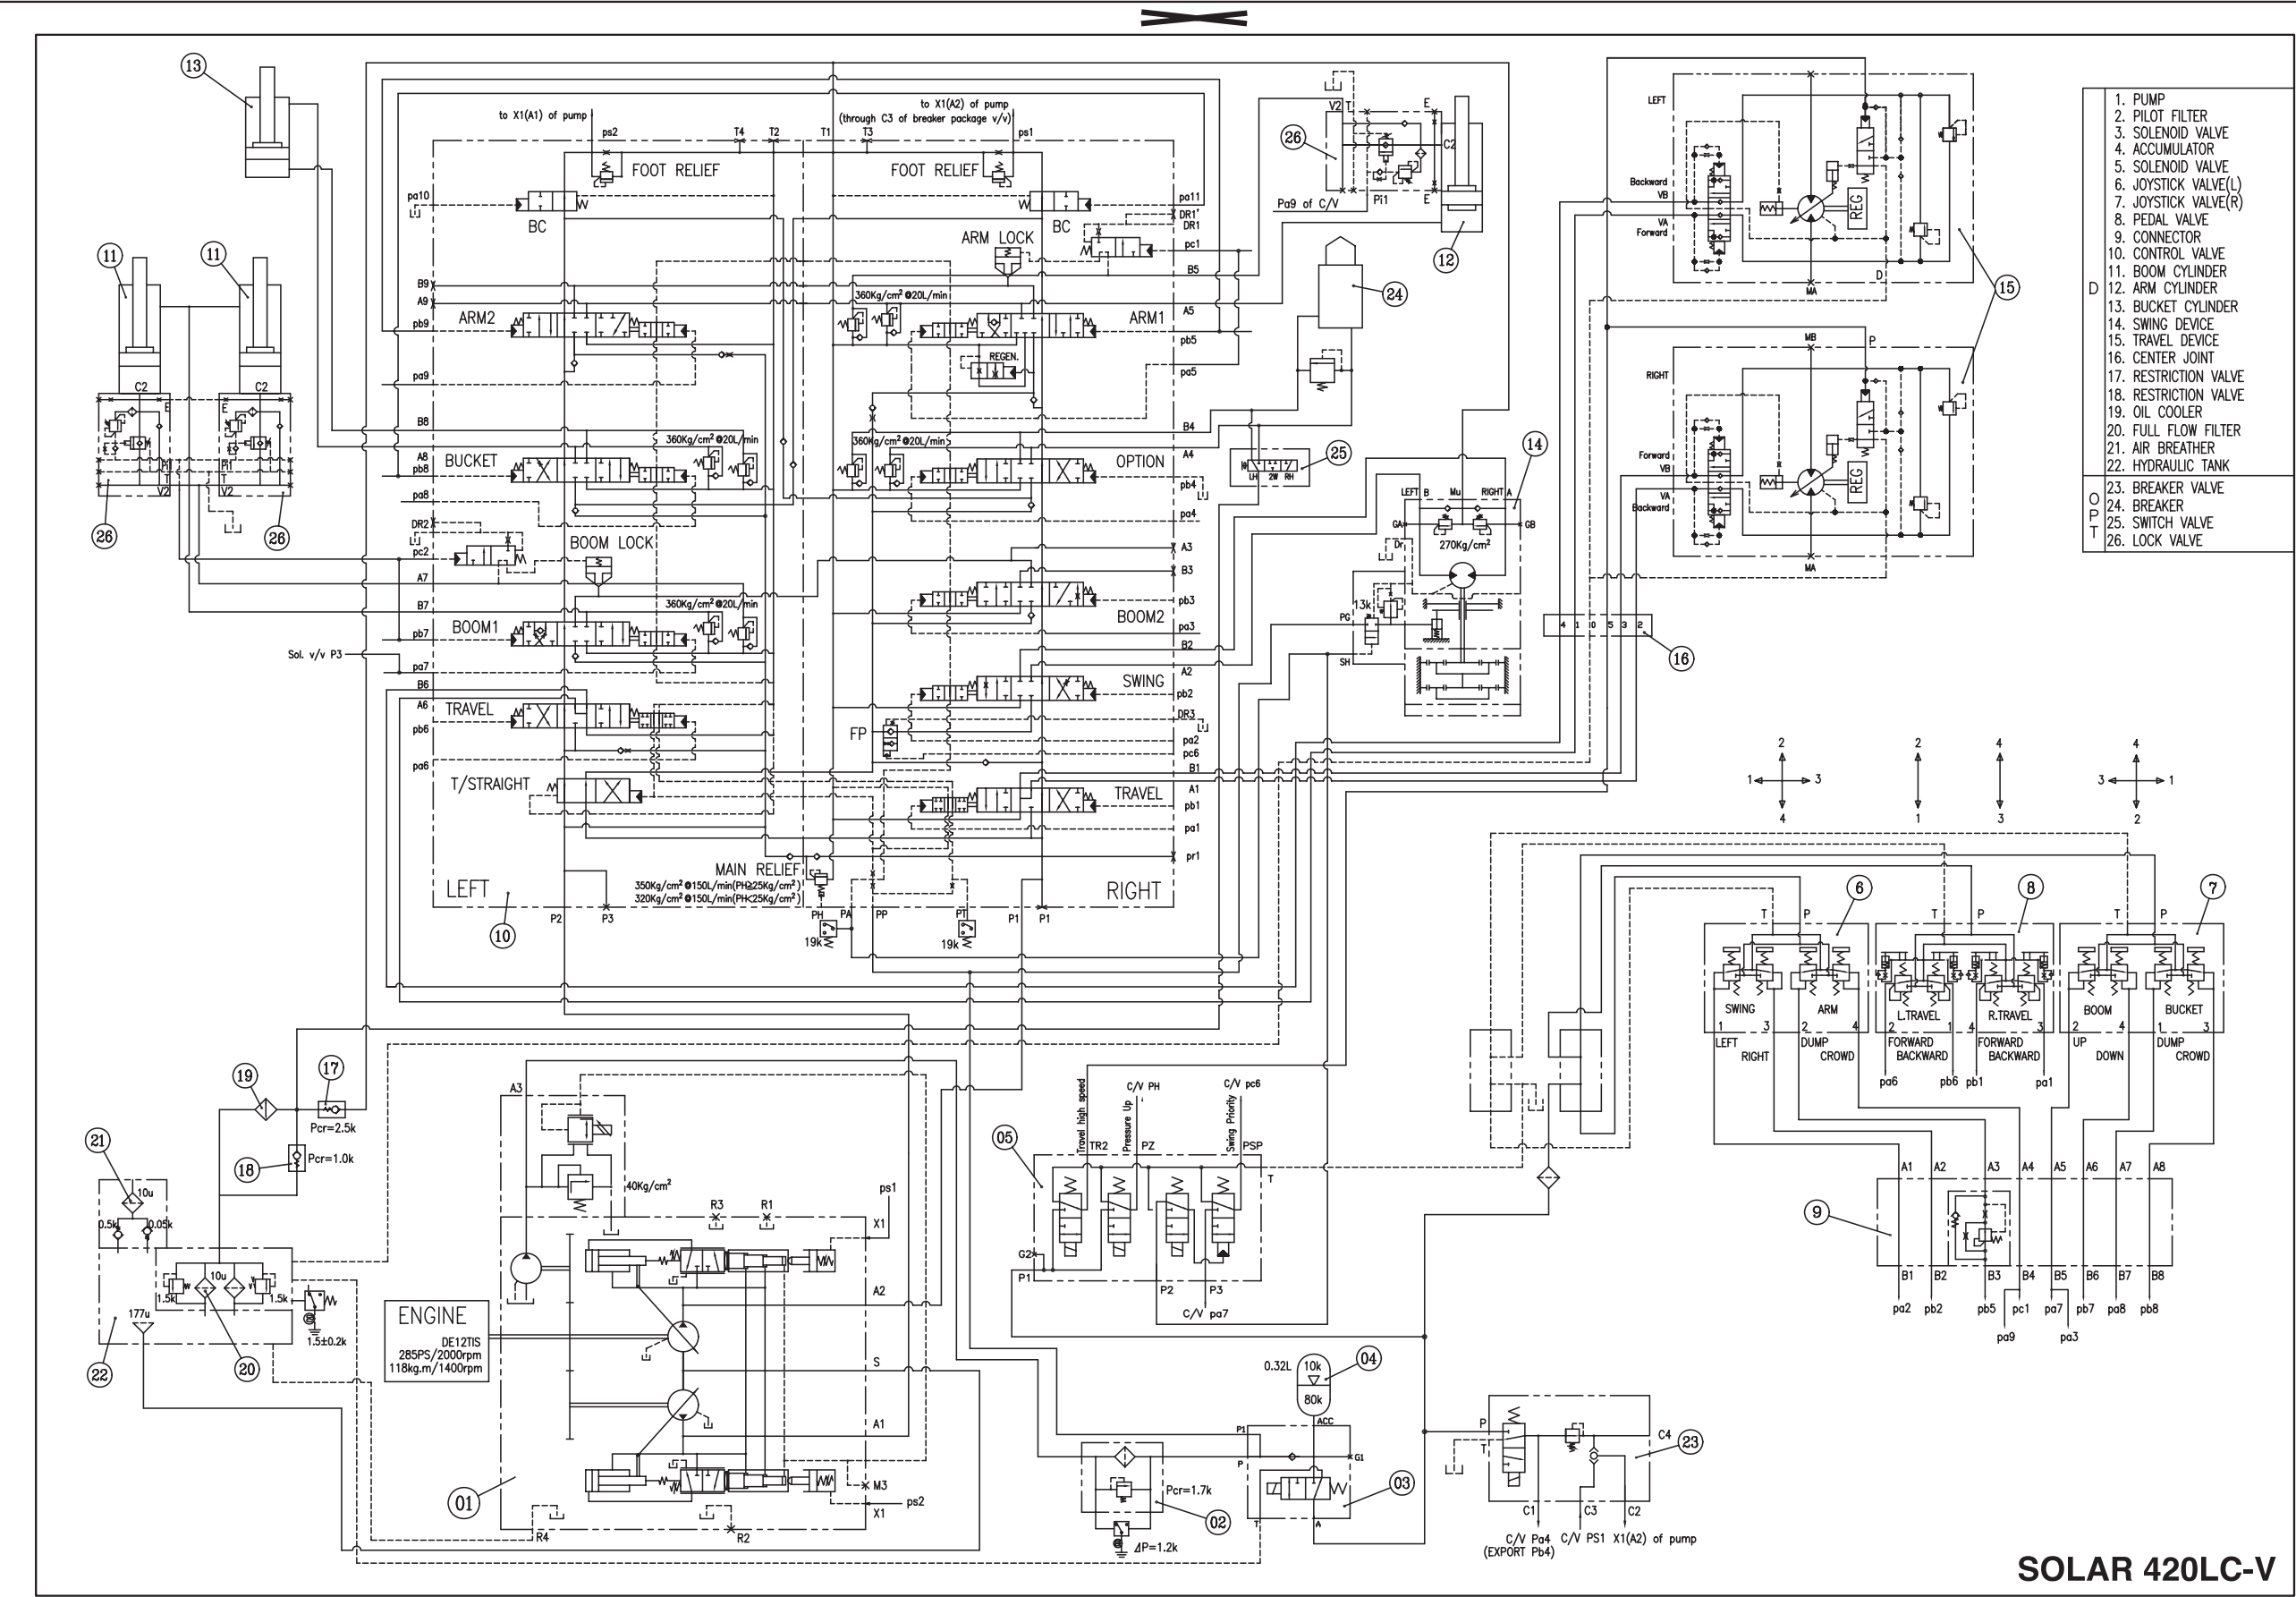

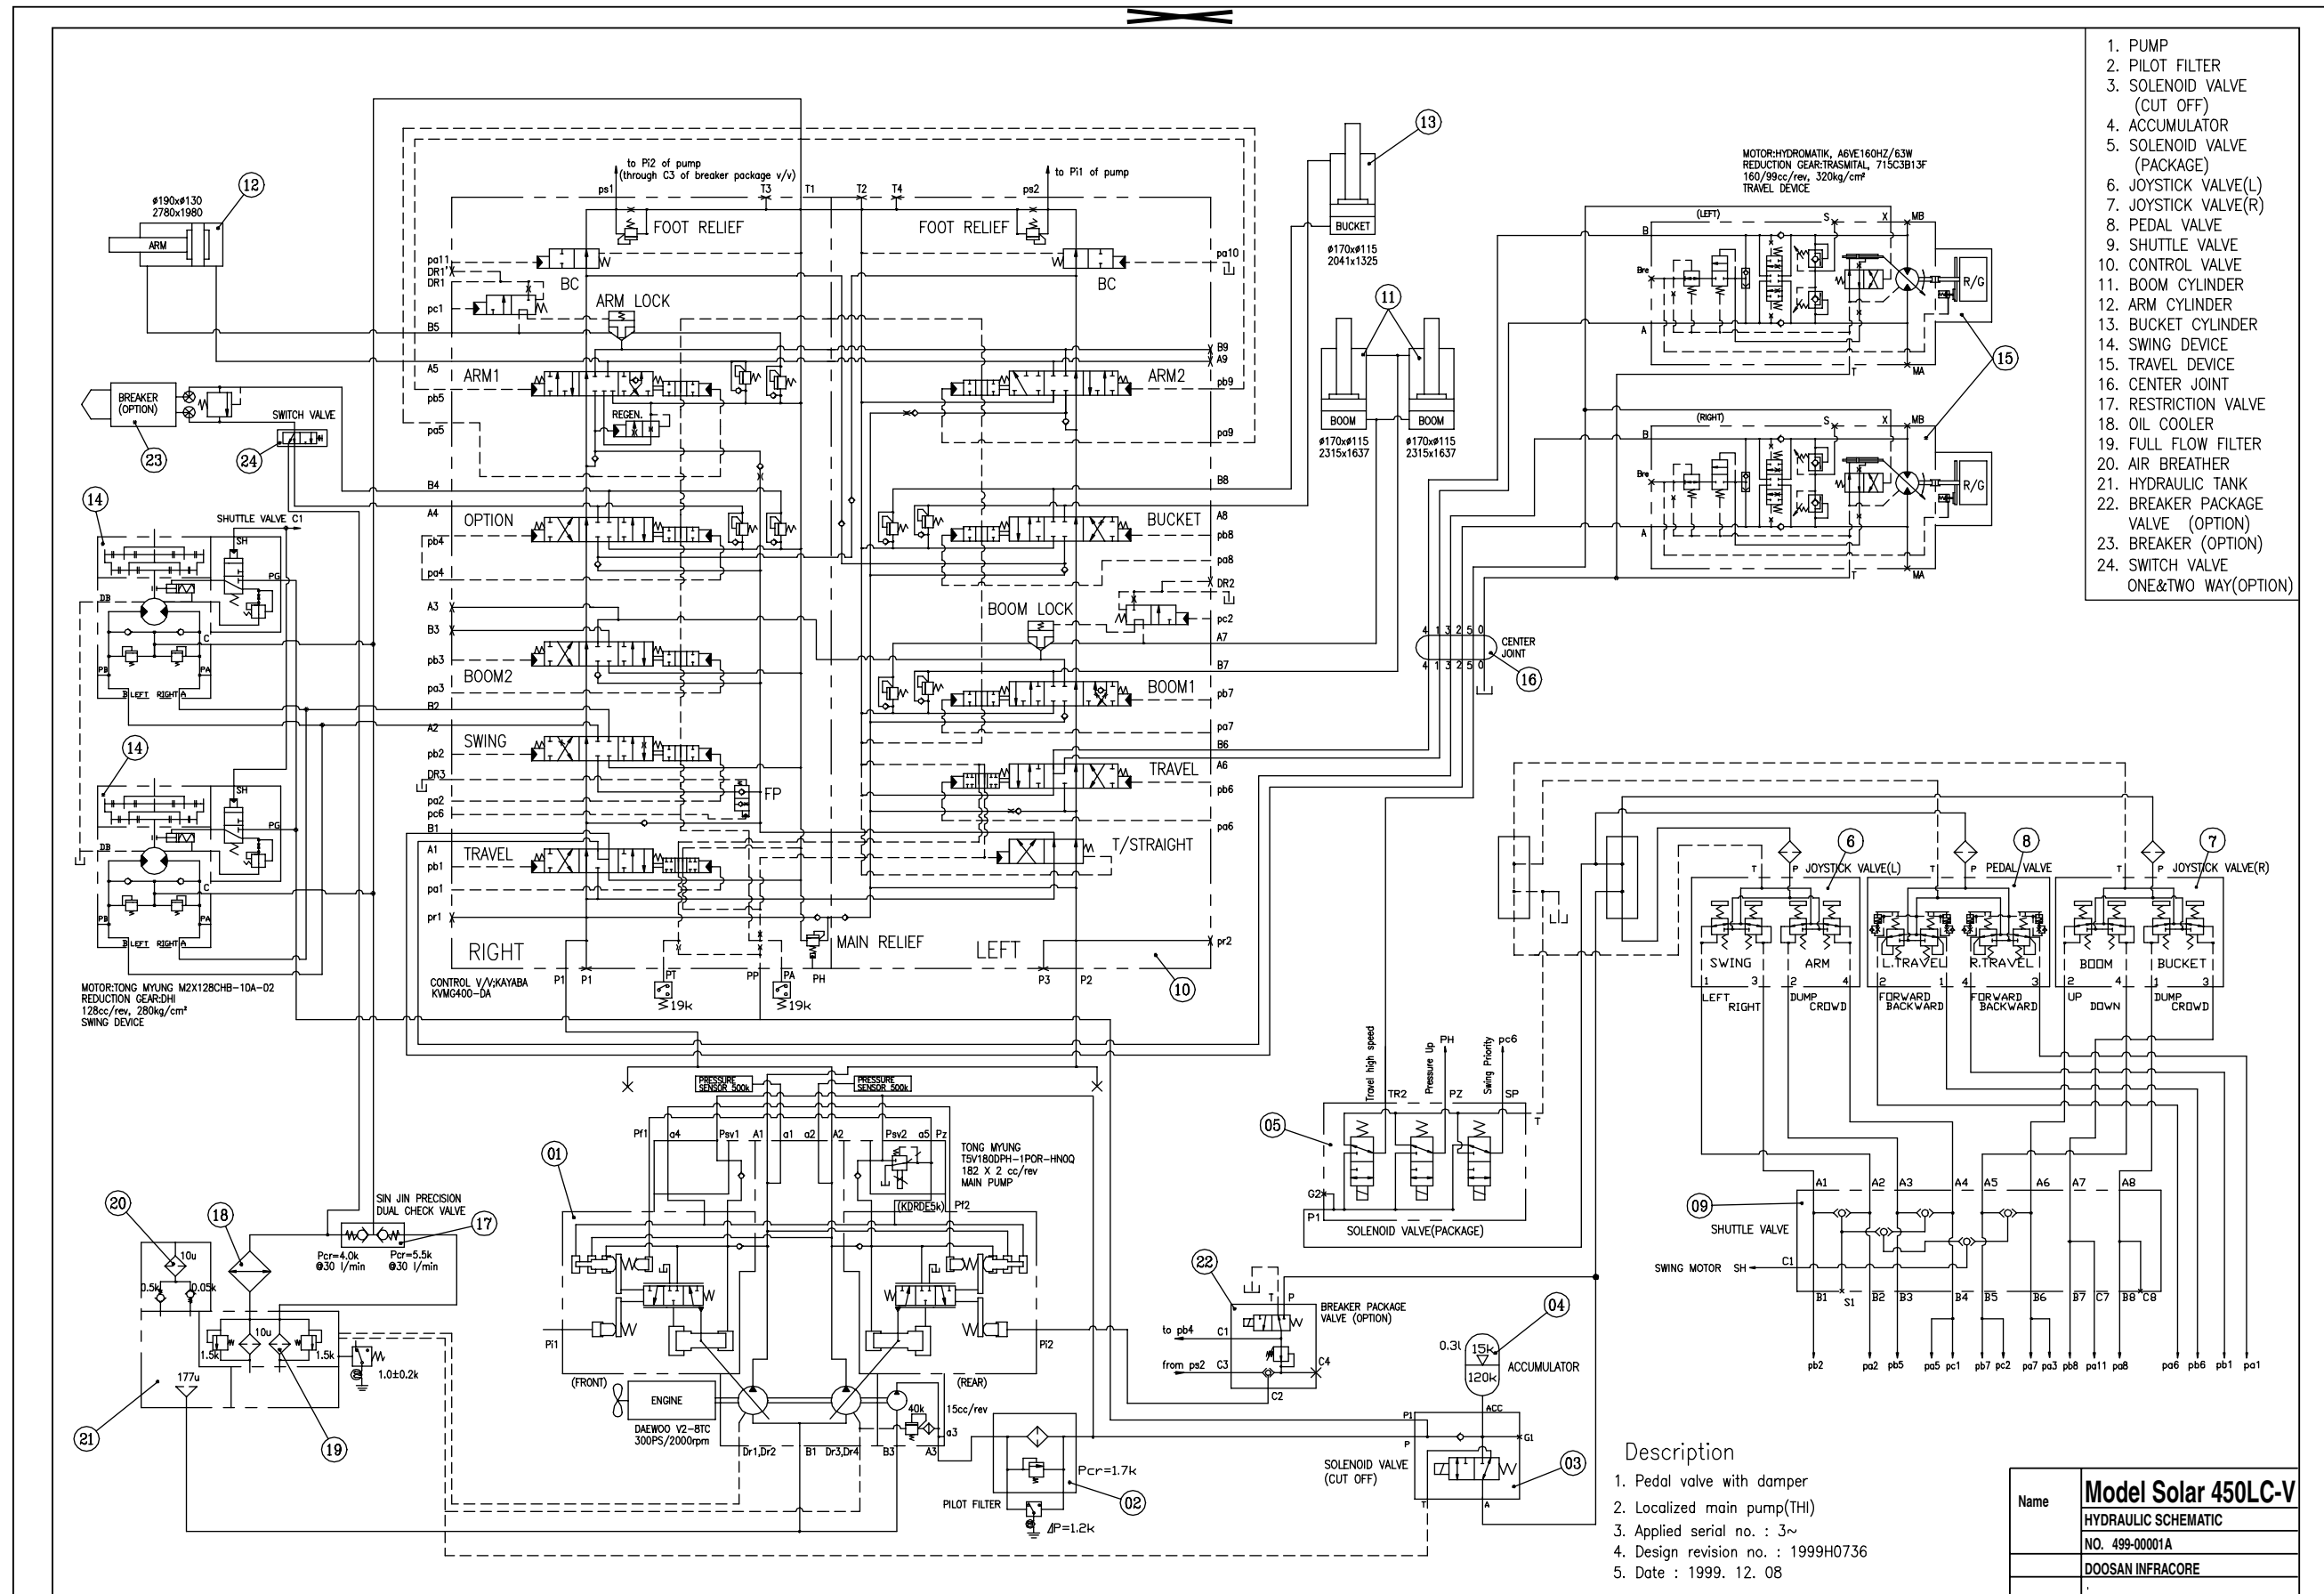

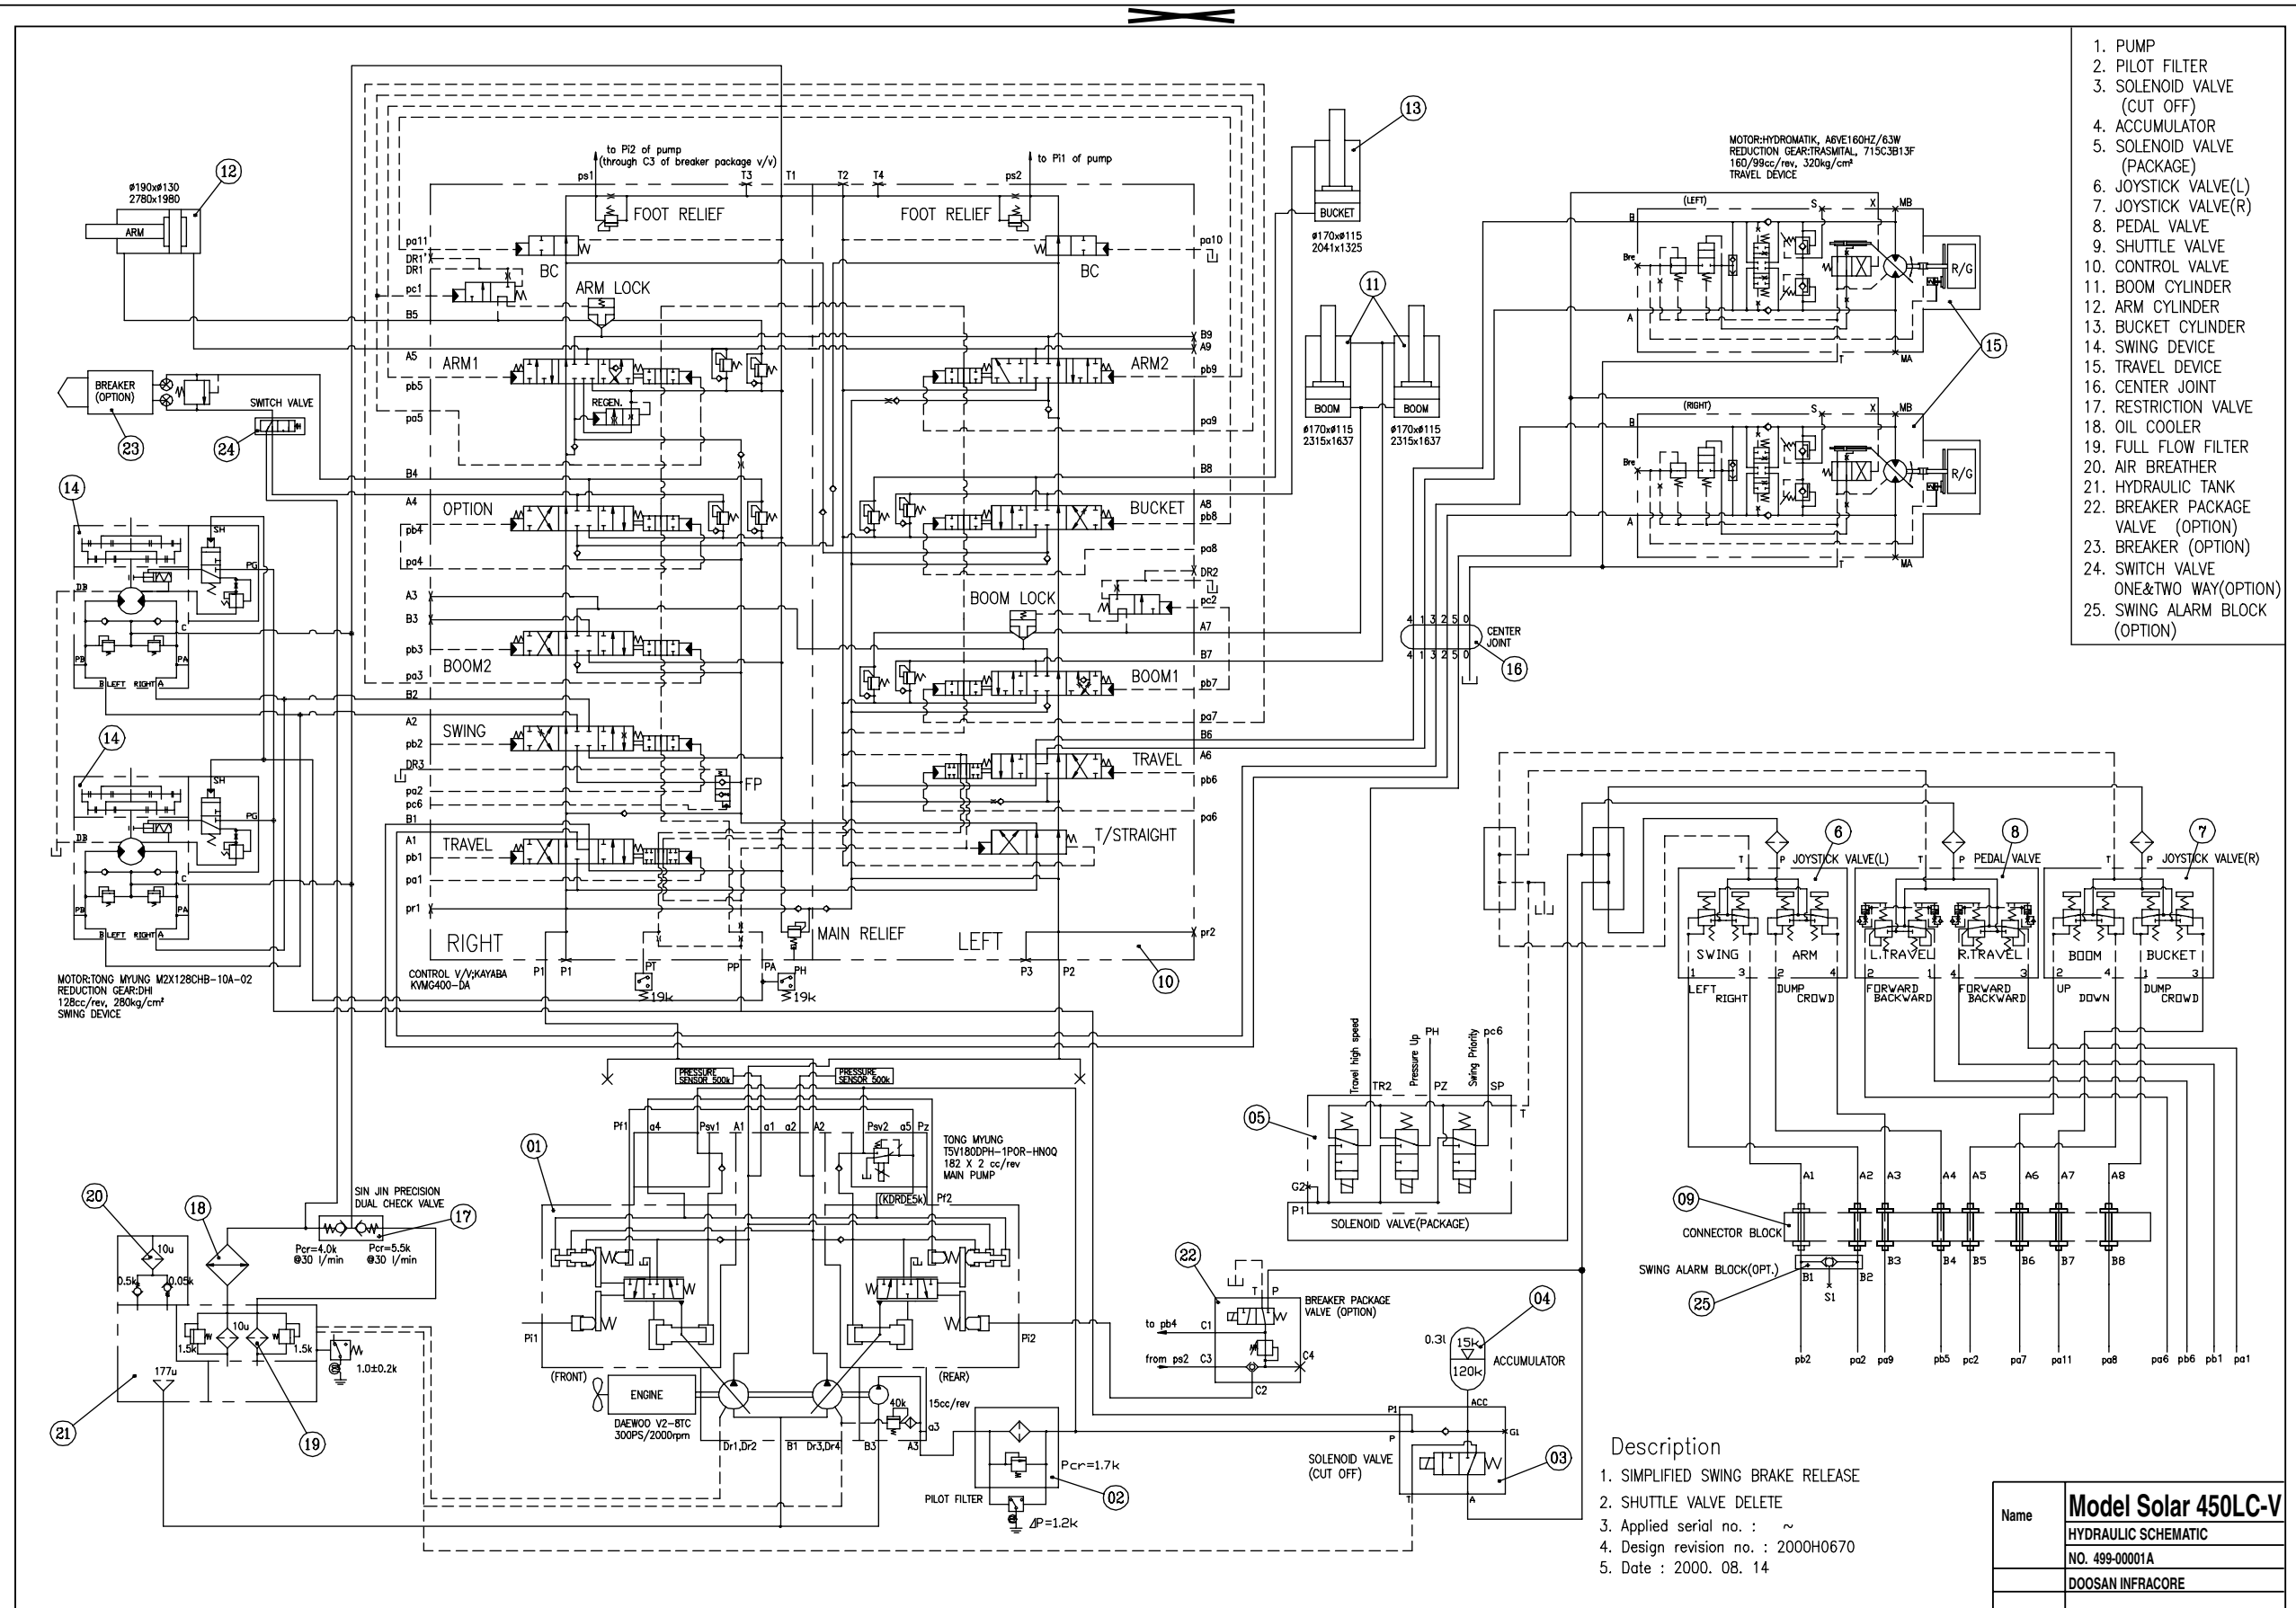

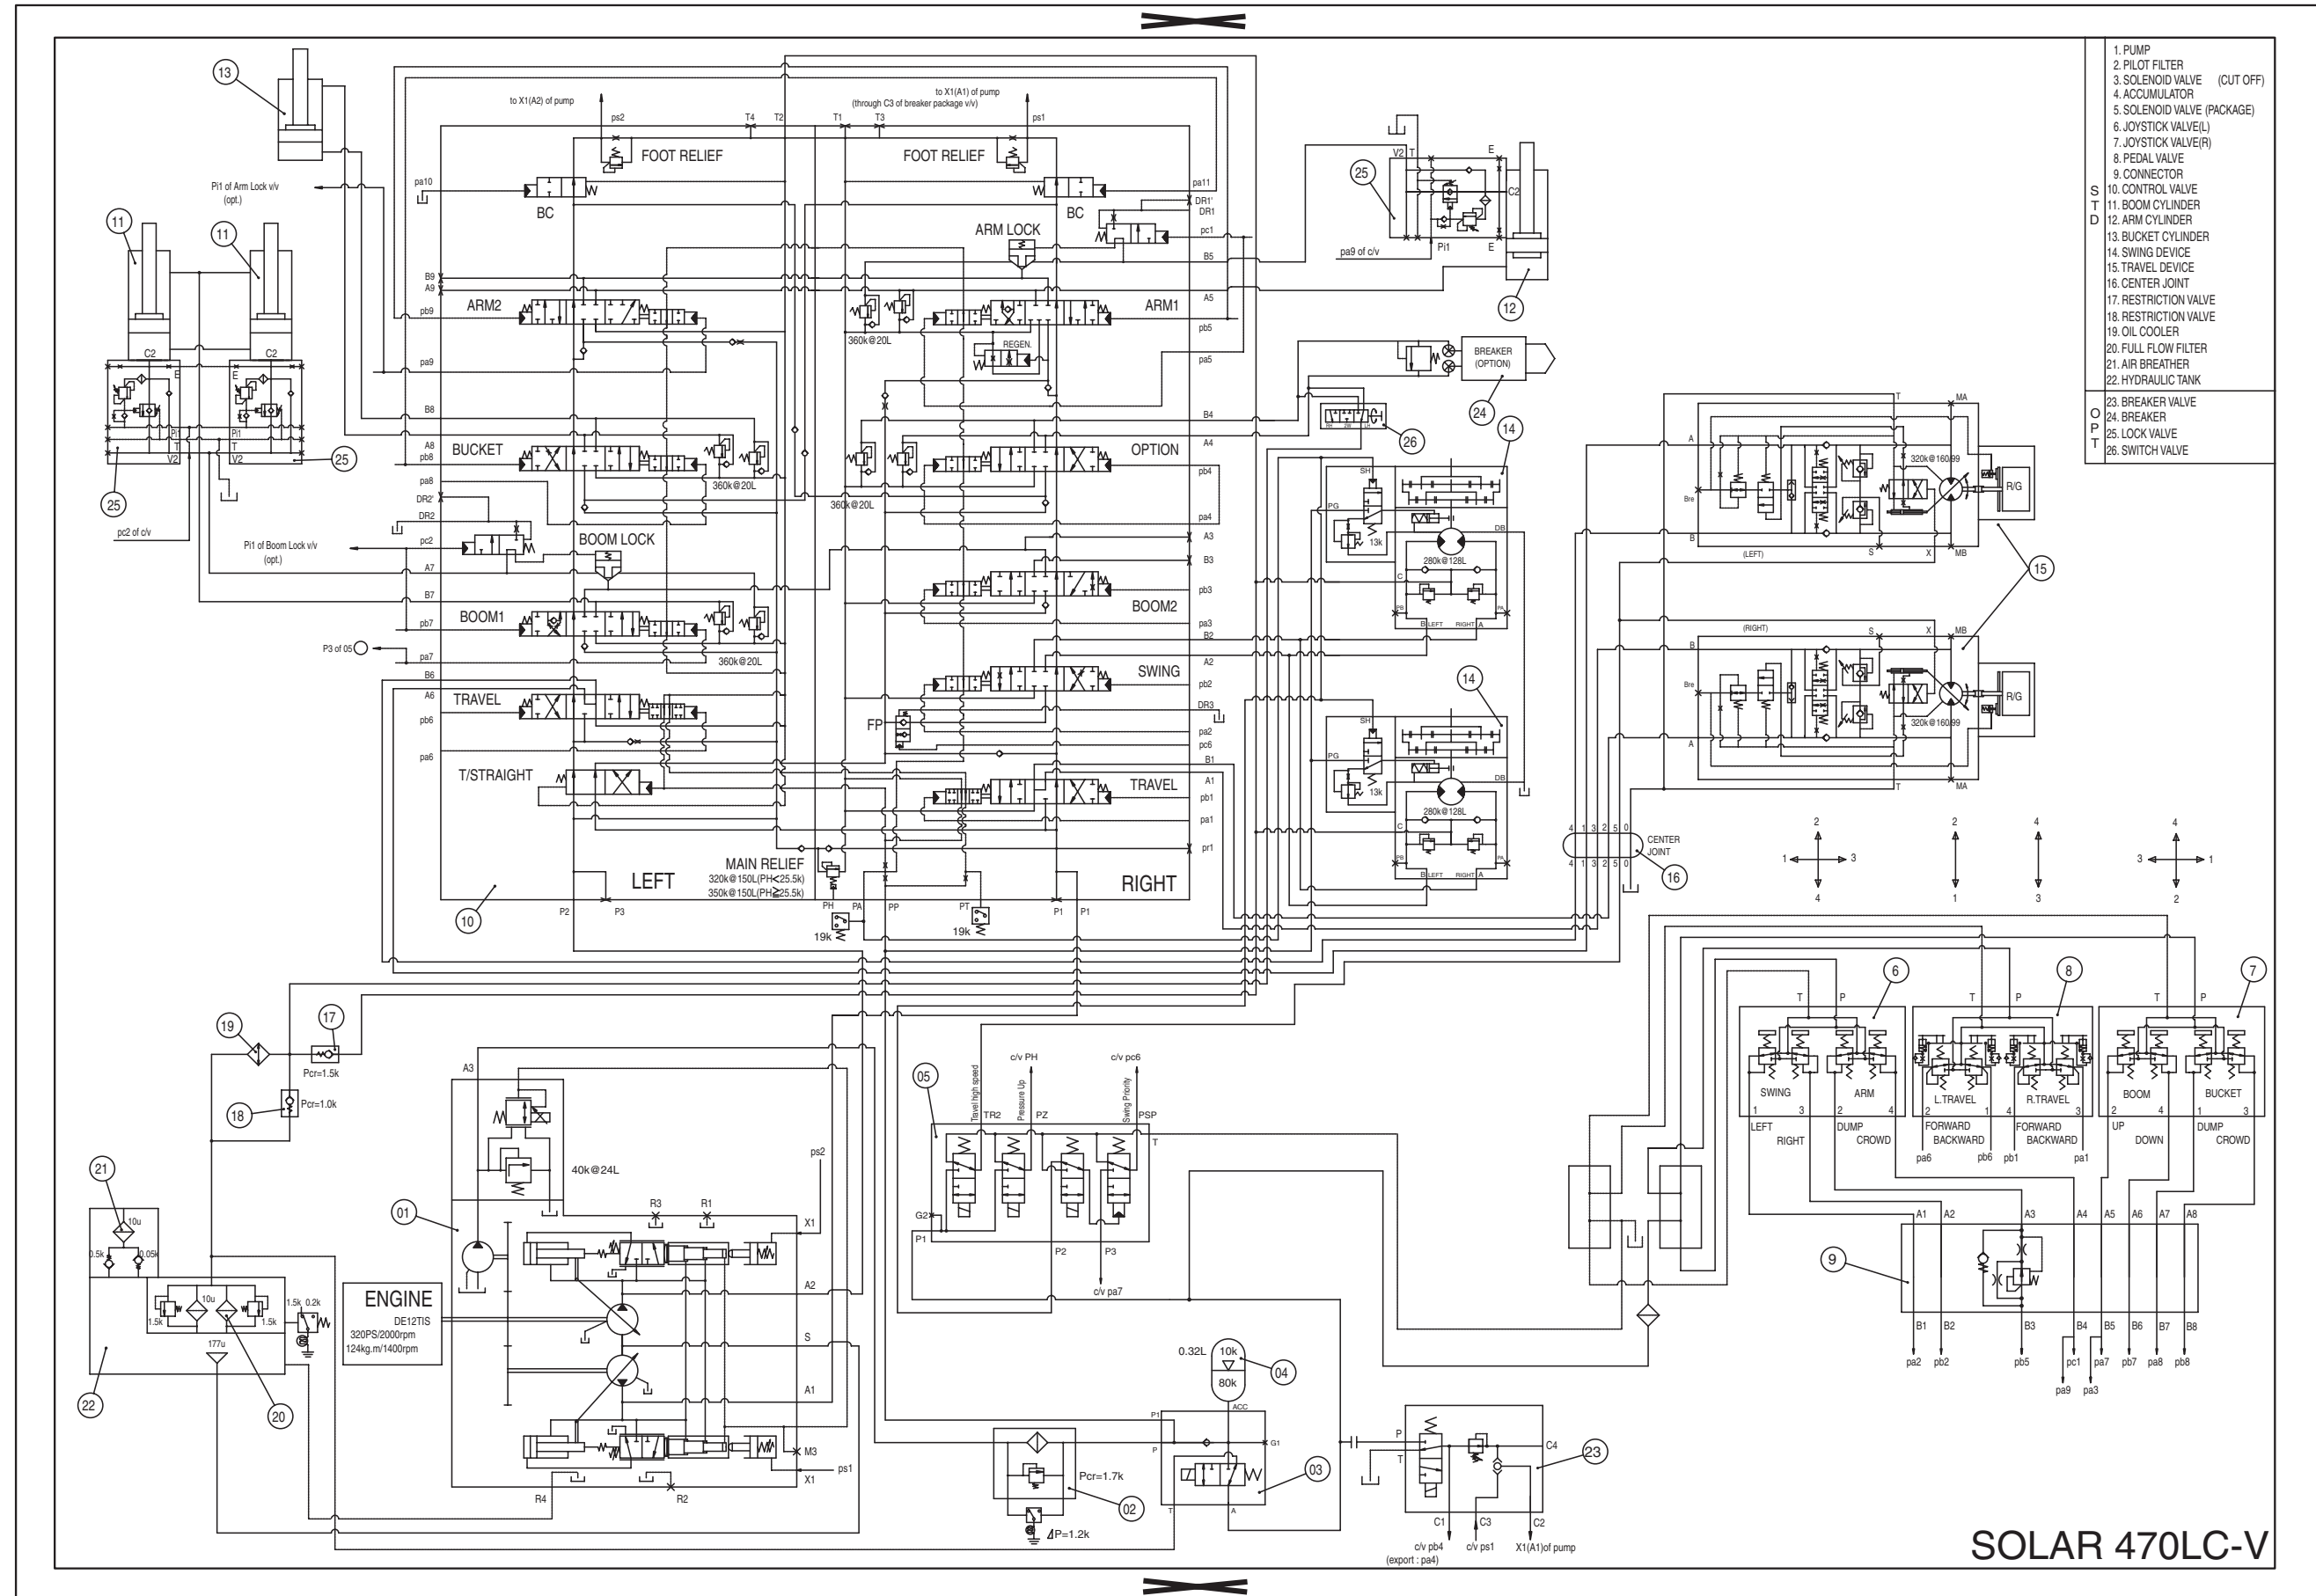


TABLE OF CONTENTS

Electrical Circuits

DX015 / DX018.....4

DX027Z / DX030Z5

DX035Z.....6

DX055.....7

DX055W8

DX055W (Yanmar TNV Engine)9

DX060R10

DX060R (Yanmar TNV Engine)11

DX080R12

DX080R (Yanmar TNV Engine)13

DX140LC14

DX140W / DX160W15

DX180LC16

DX190W17

DX210W18

DX225LC (S/N 5001 thru 5433)19

DX225LC (S/N 5434 and Up)20

DX225NLC.....21

DX255LC22

DX300LL.....23

DX300LC / DX340LC.....24

DX420LC25

DX480LC / DX520LC.....26

Hydraulic Circuits

DX015.....28

DX018.....29

DX027Z.....30

DX030Z.....31

DX035Z.....32

DX055.....33

DX055W34

DX060R35

DX080R36

DX140LC37

DX140W / DX160W38

DX180LC39

DX190W40

DX210W (4-INDI).....41

DX210W (Mono and Articulated).....42

DX225LC (S/N 5001 thru 5433)43

DX225LC (S/N 5434 and Up)44

DX225NLC.....45

DX255LC46

 
DX300LC47


DX300LL.....48


DX340LC49


DX420LC50


DX480LC / DX520LC.....51




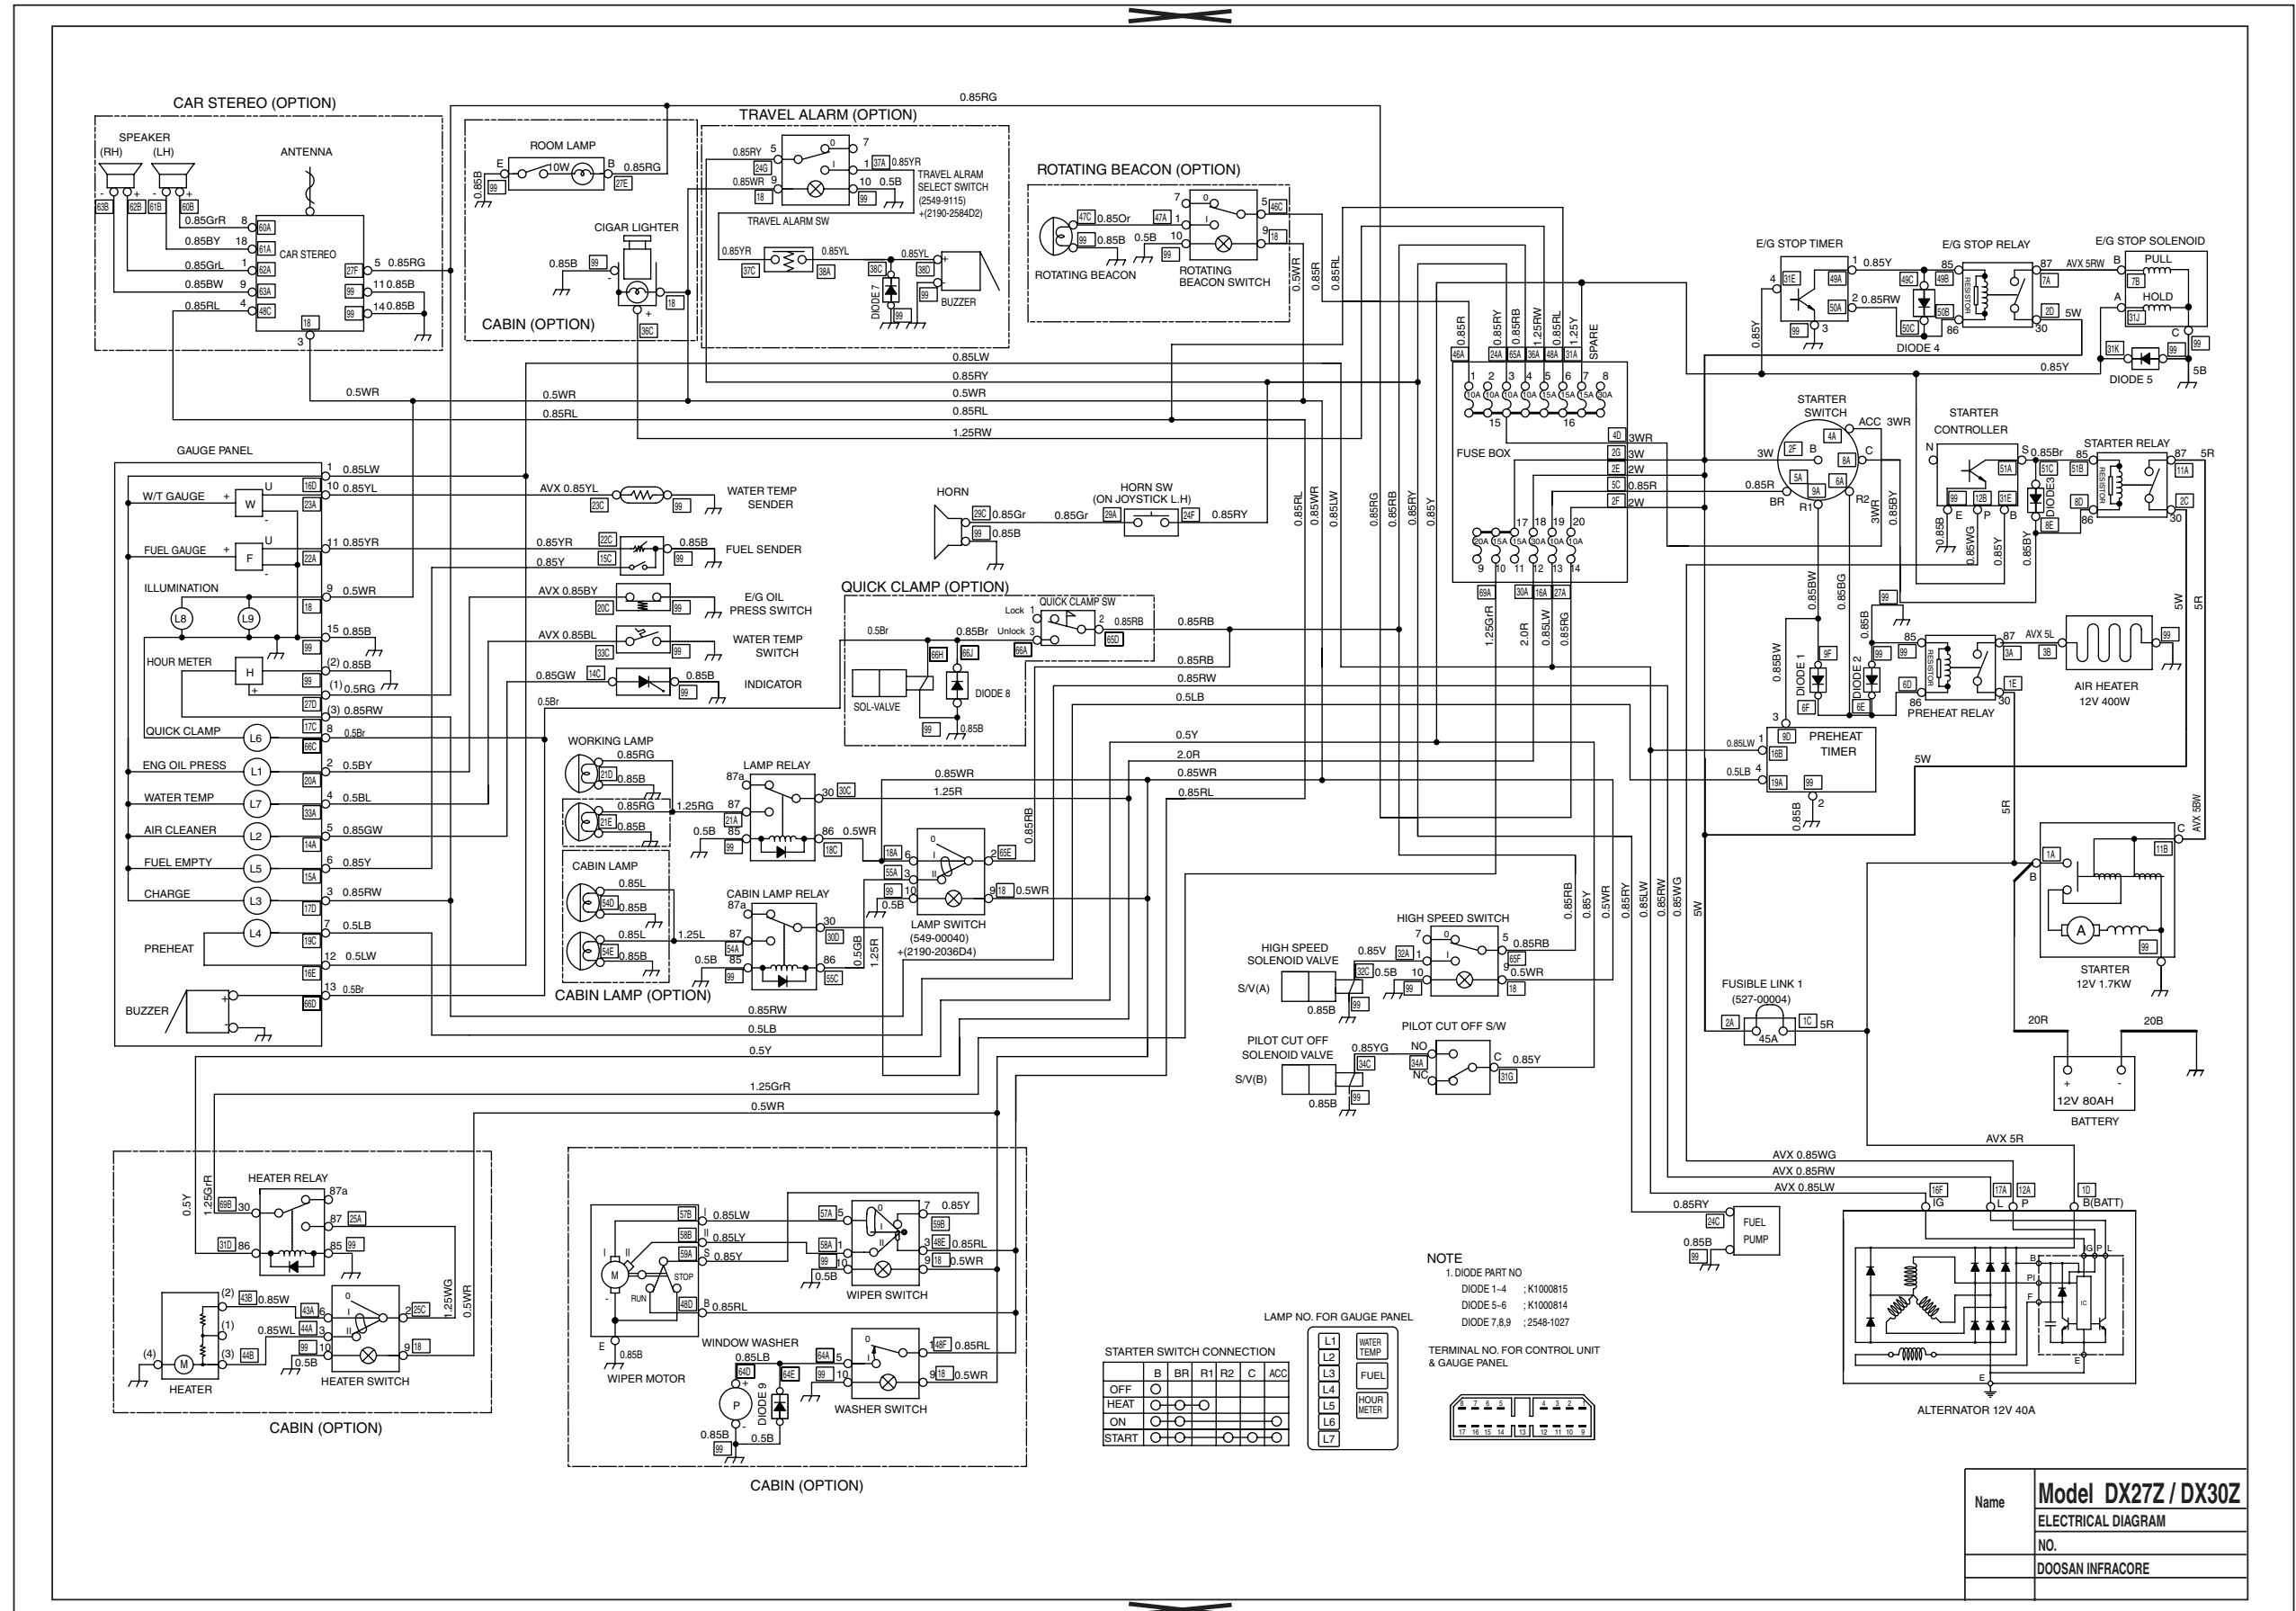

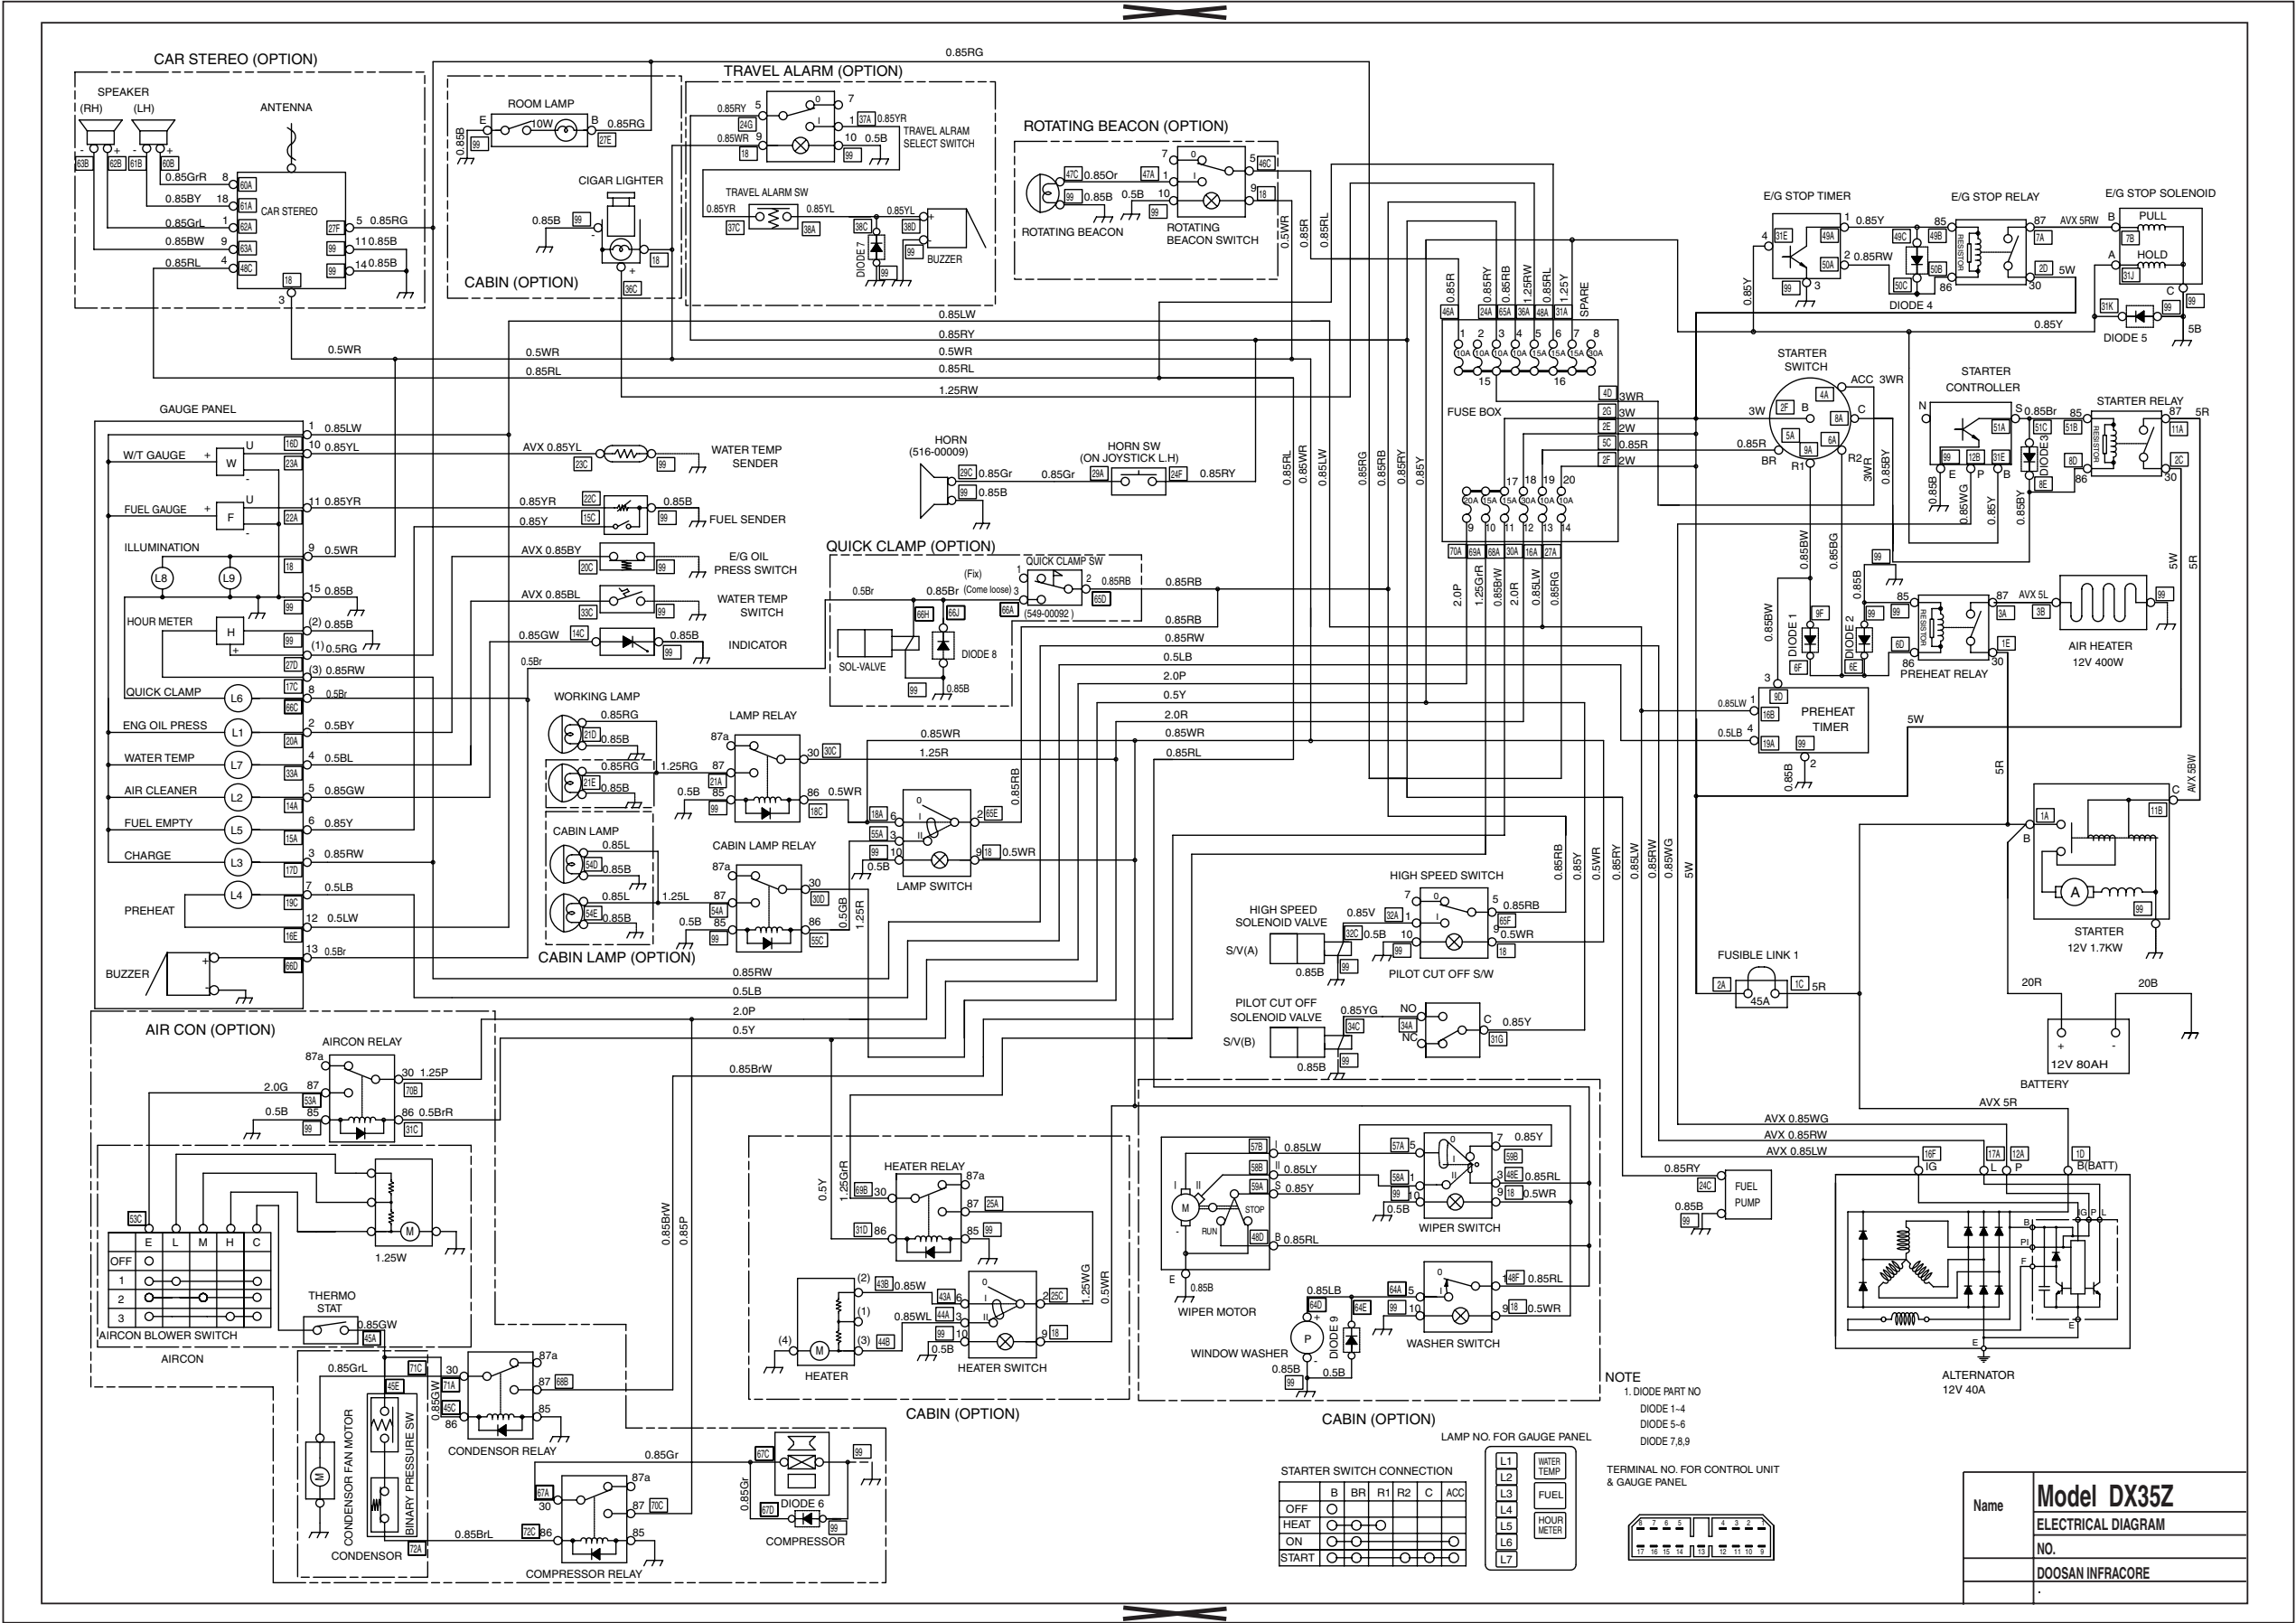

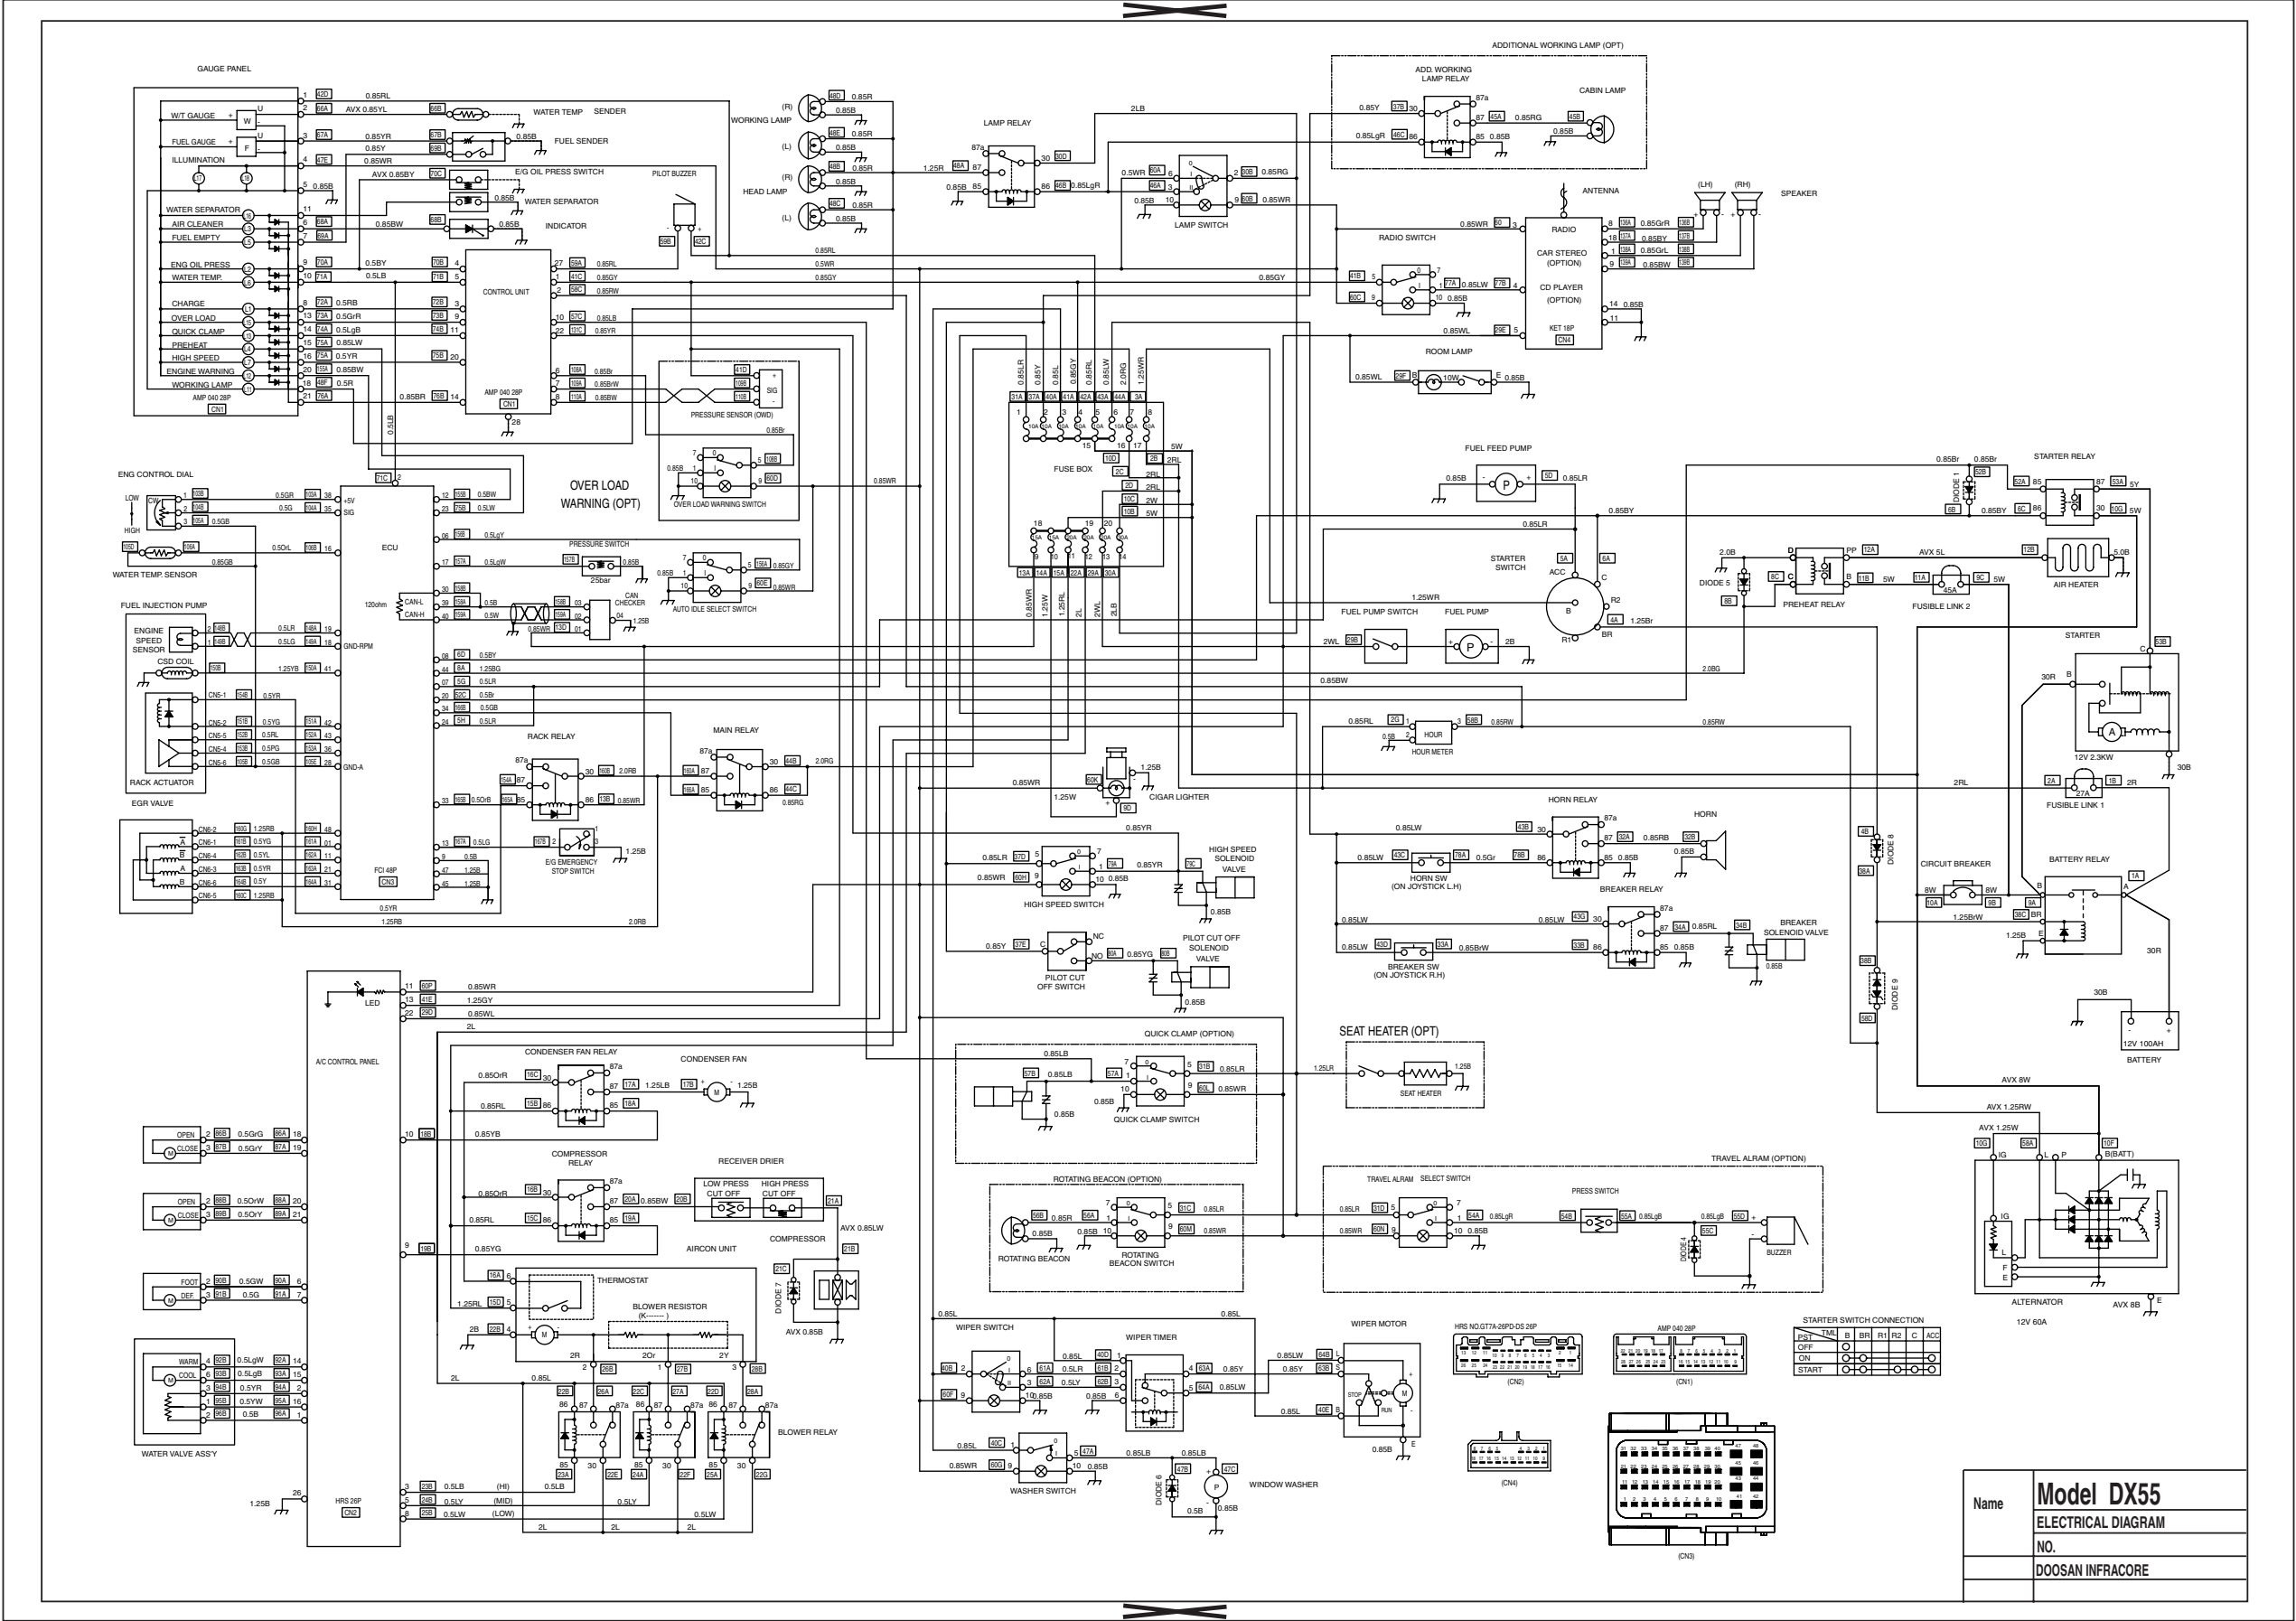

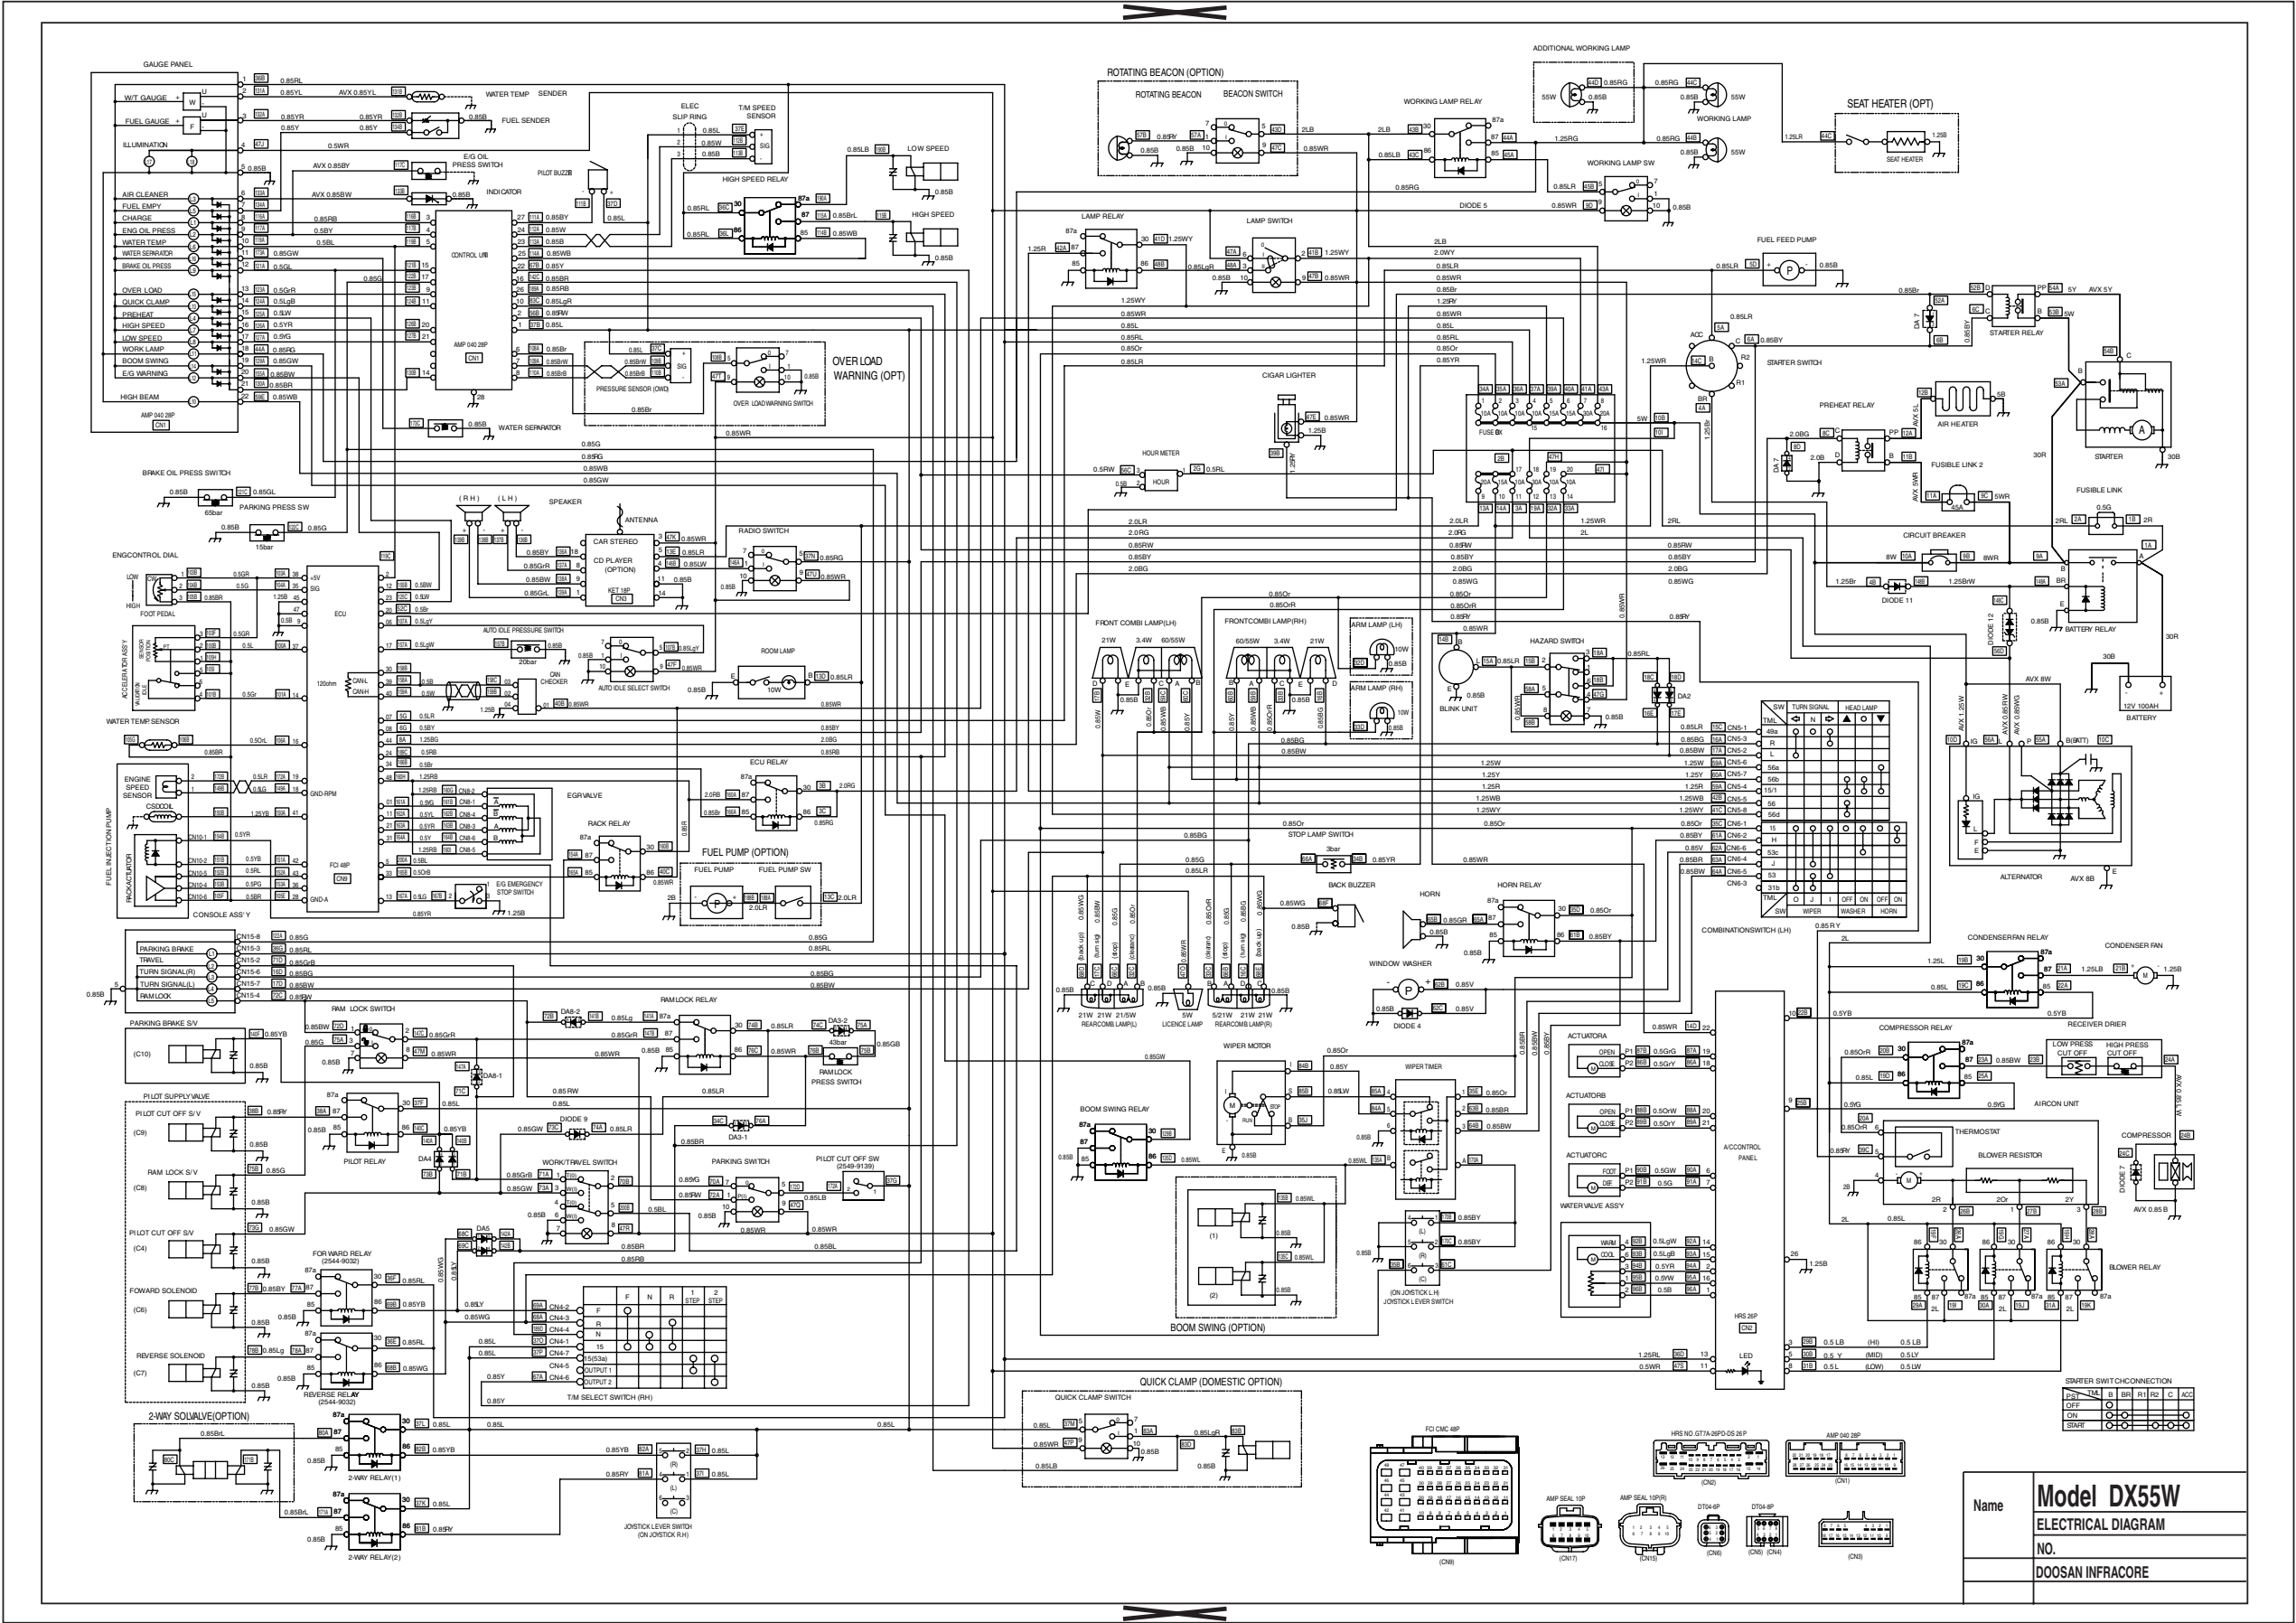


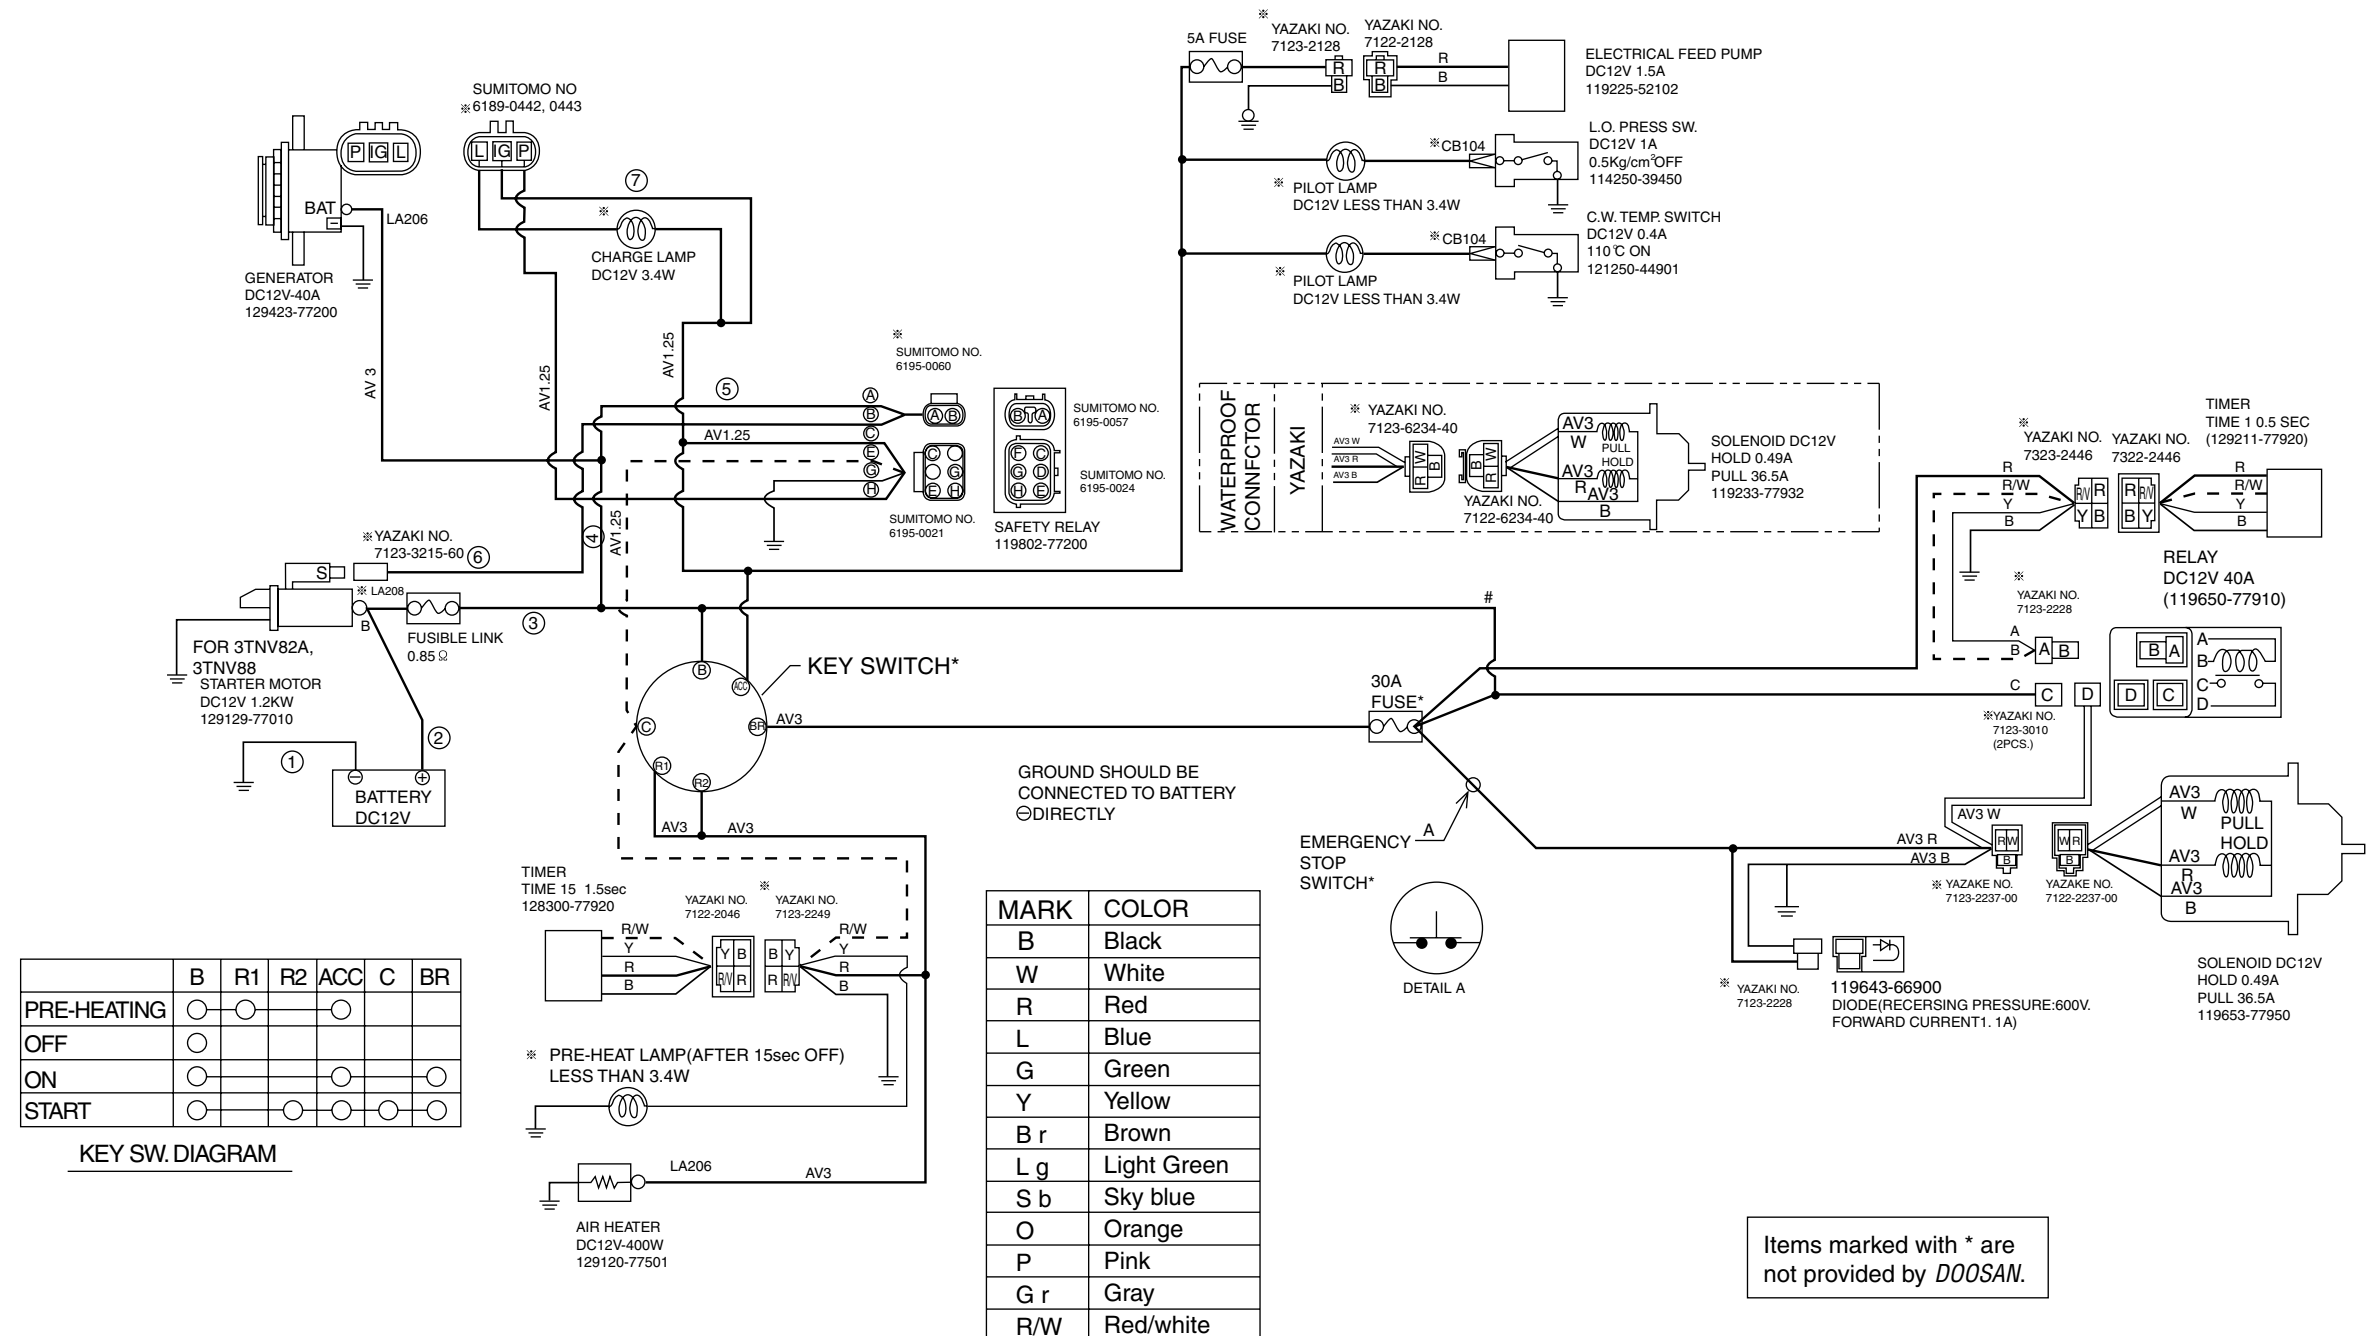


Items marked with * are not provided by *DOOSAN*.

Yanmar TNV Engine


Name	Model DX55W
	ELECTRICAL DIAGRAM
	NO.
	DOOSAN INFRACORE

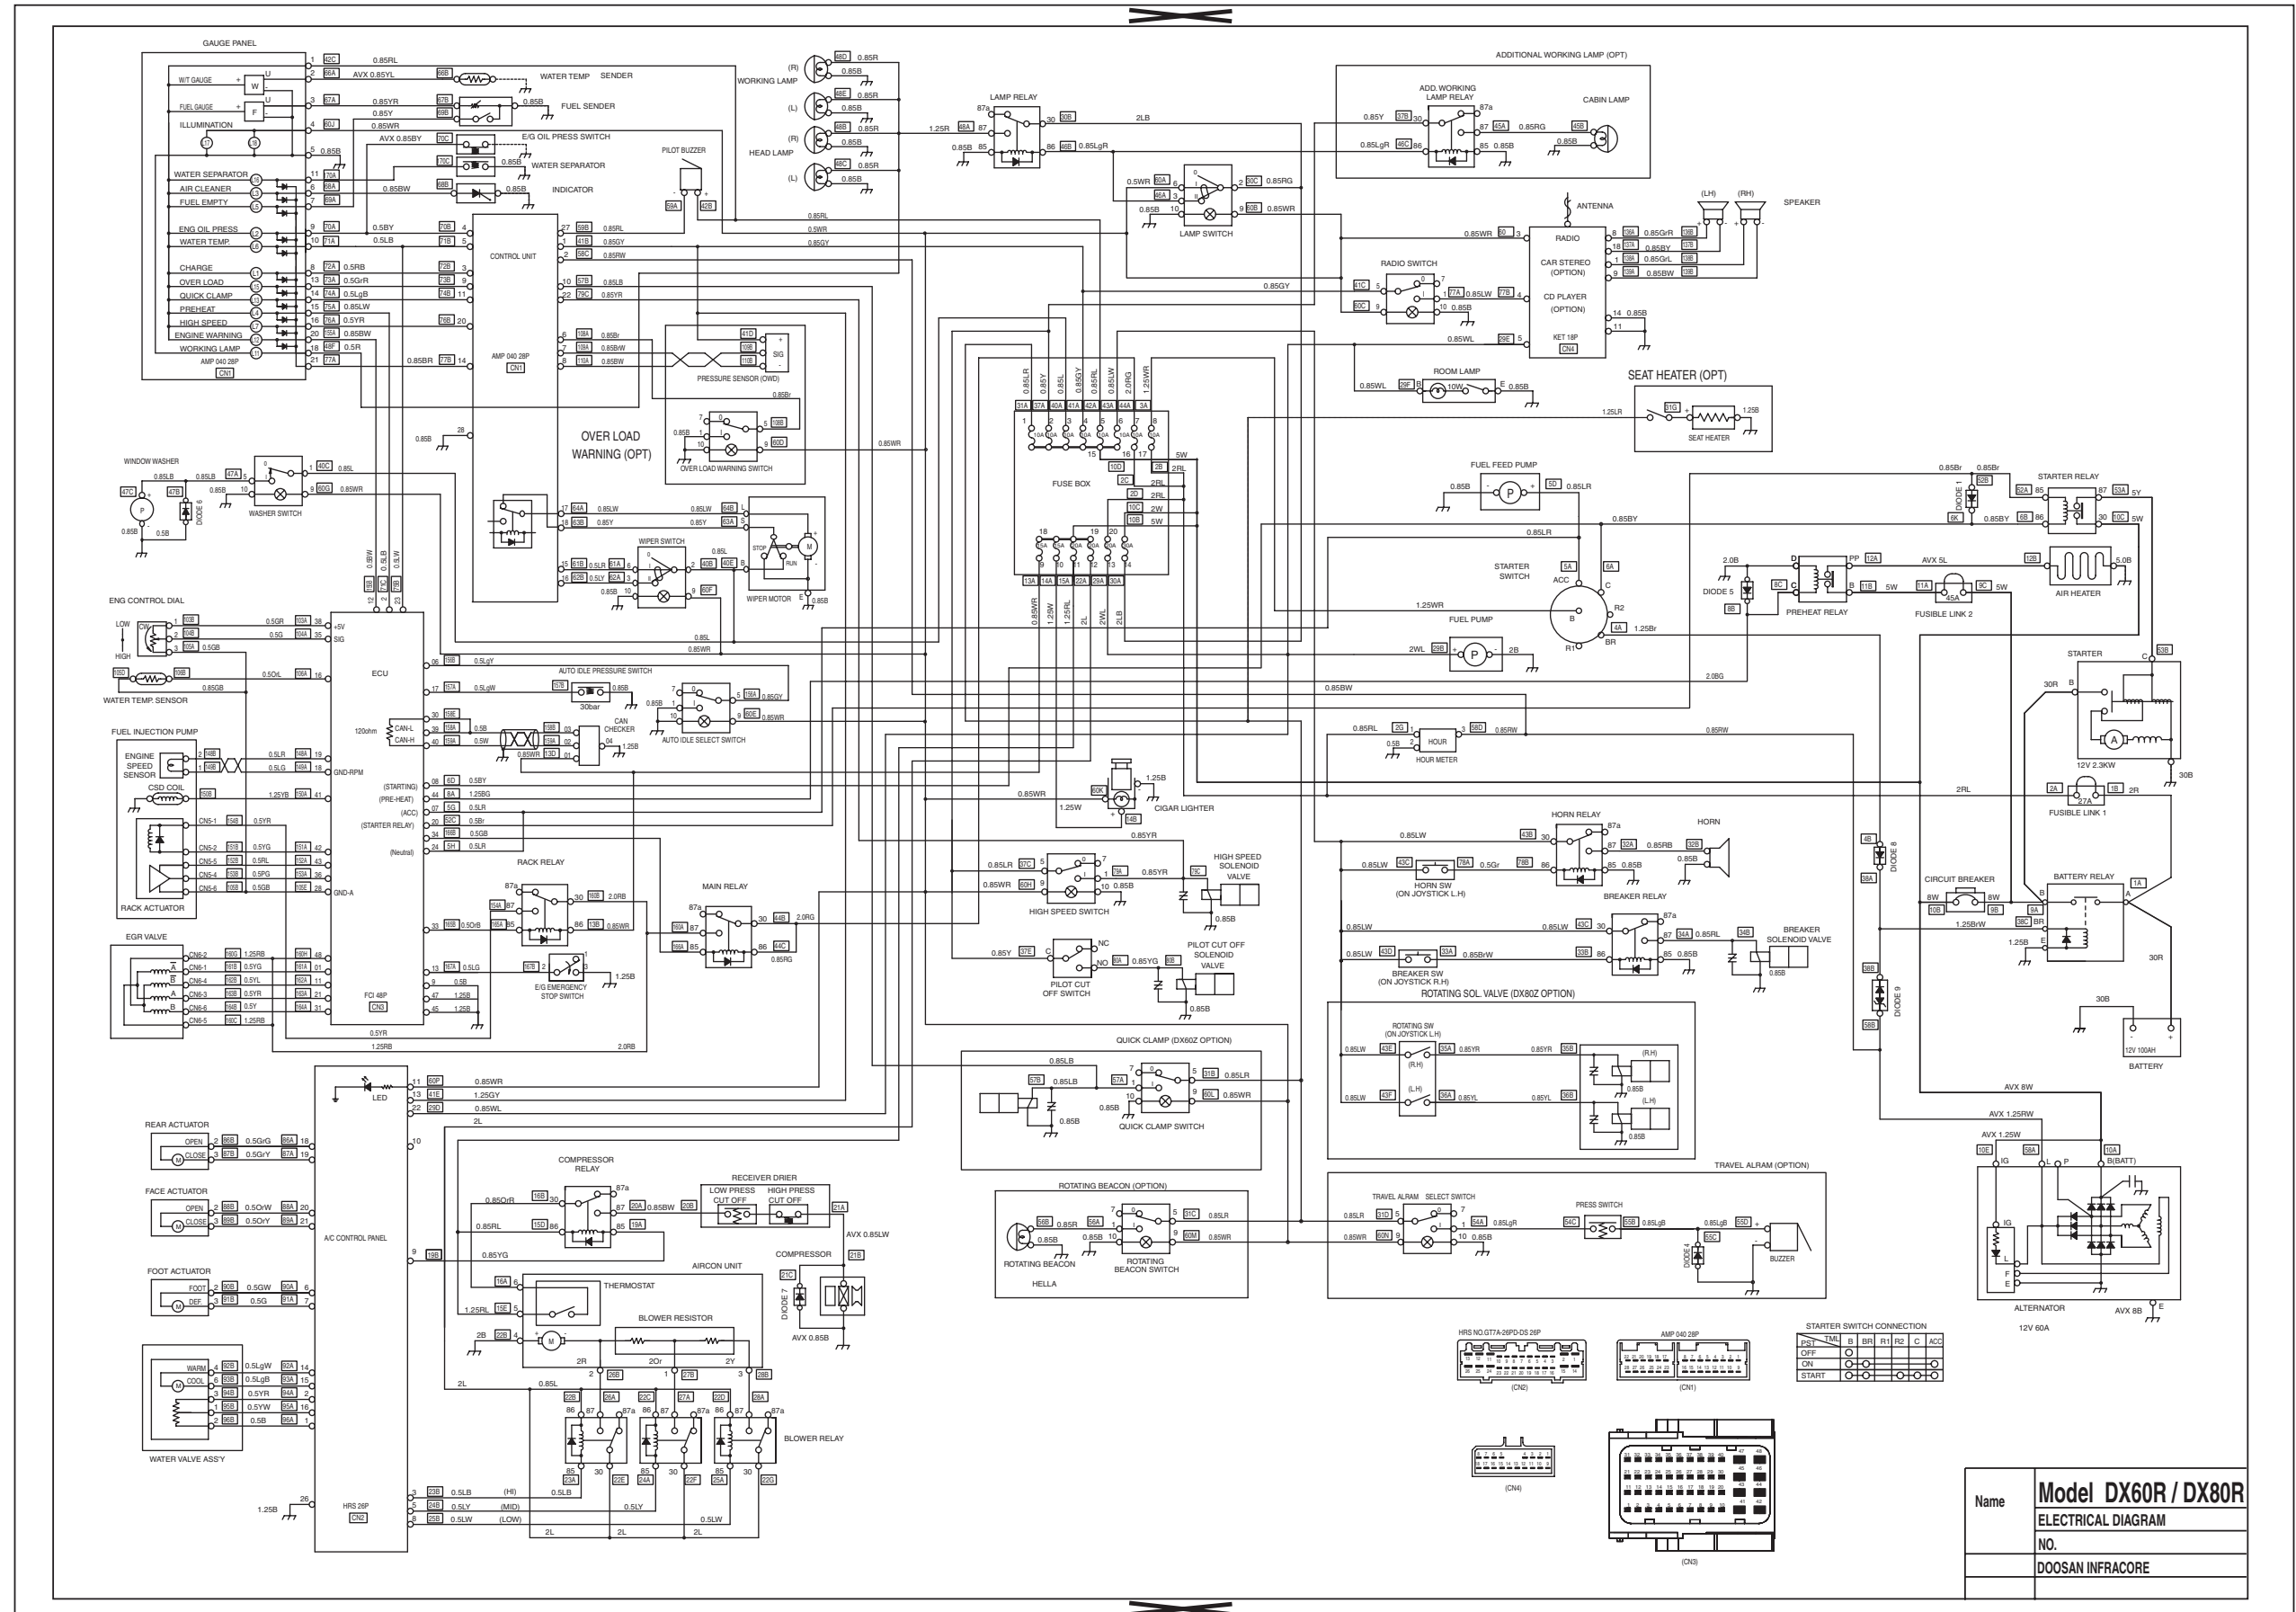


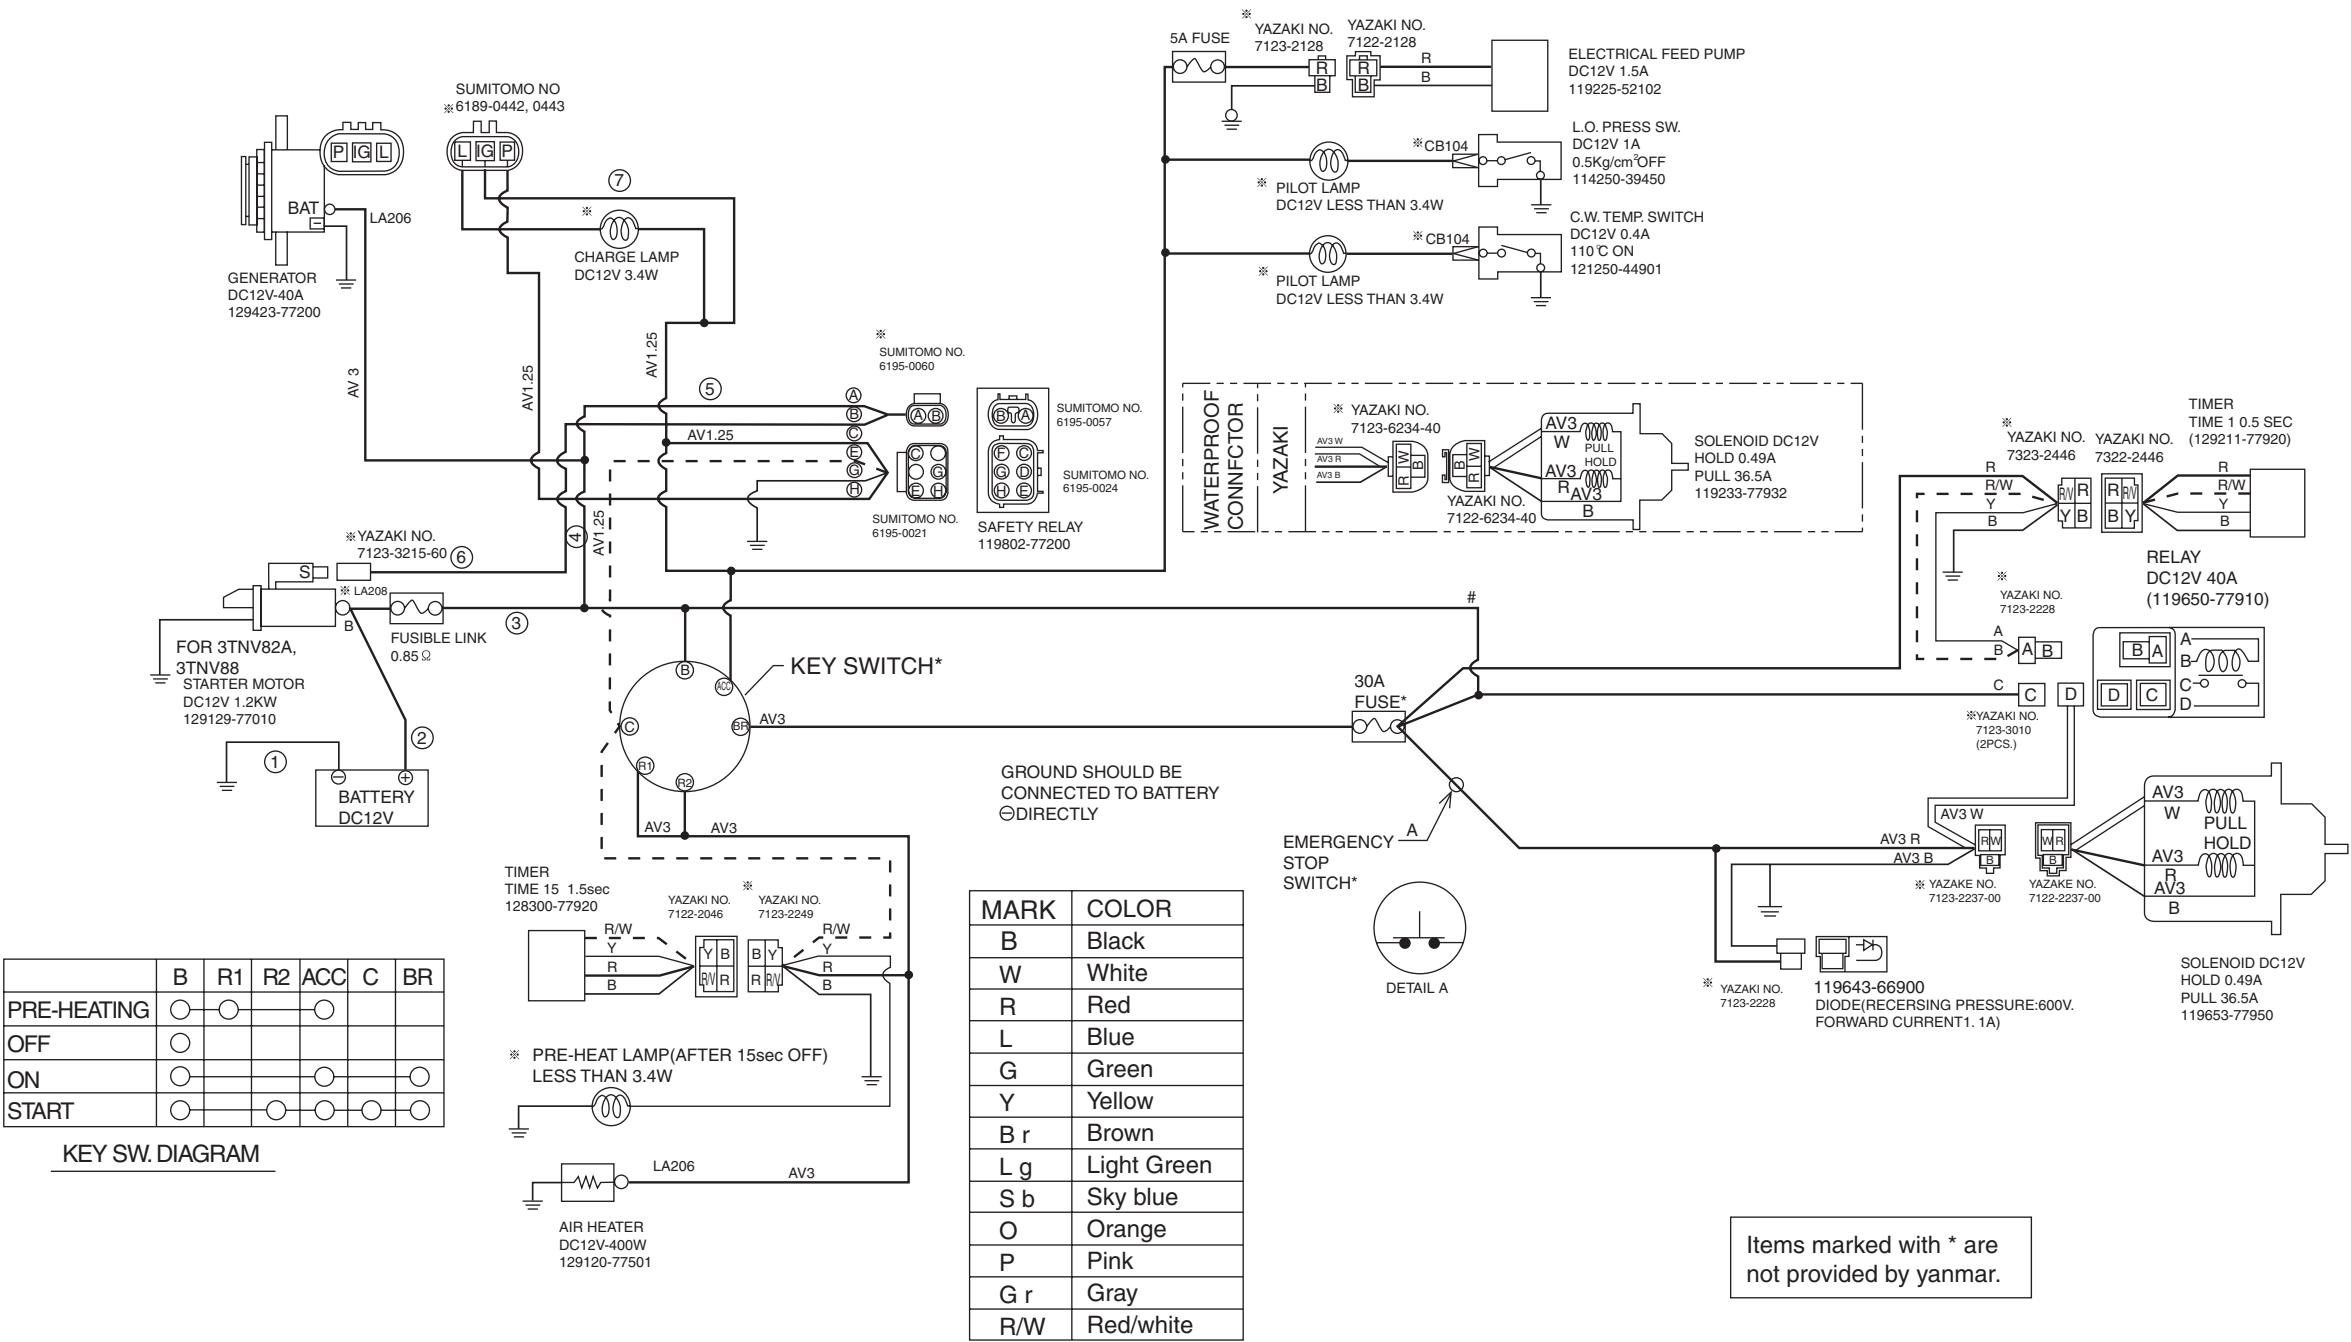

Yanmar TNV Engine

Name	Model DX60R
	ELECTRICAL DIAGRAM
	NO.
	DOOSAN INFRACORE

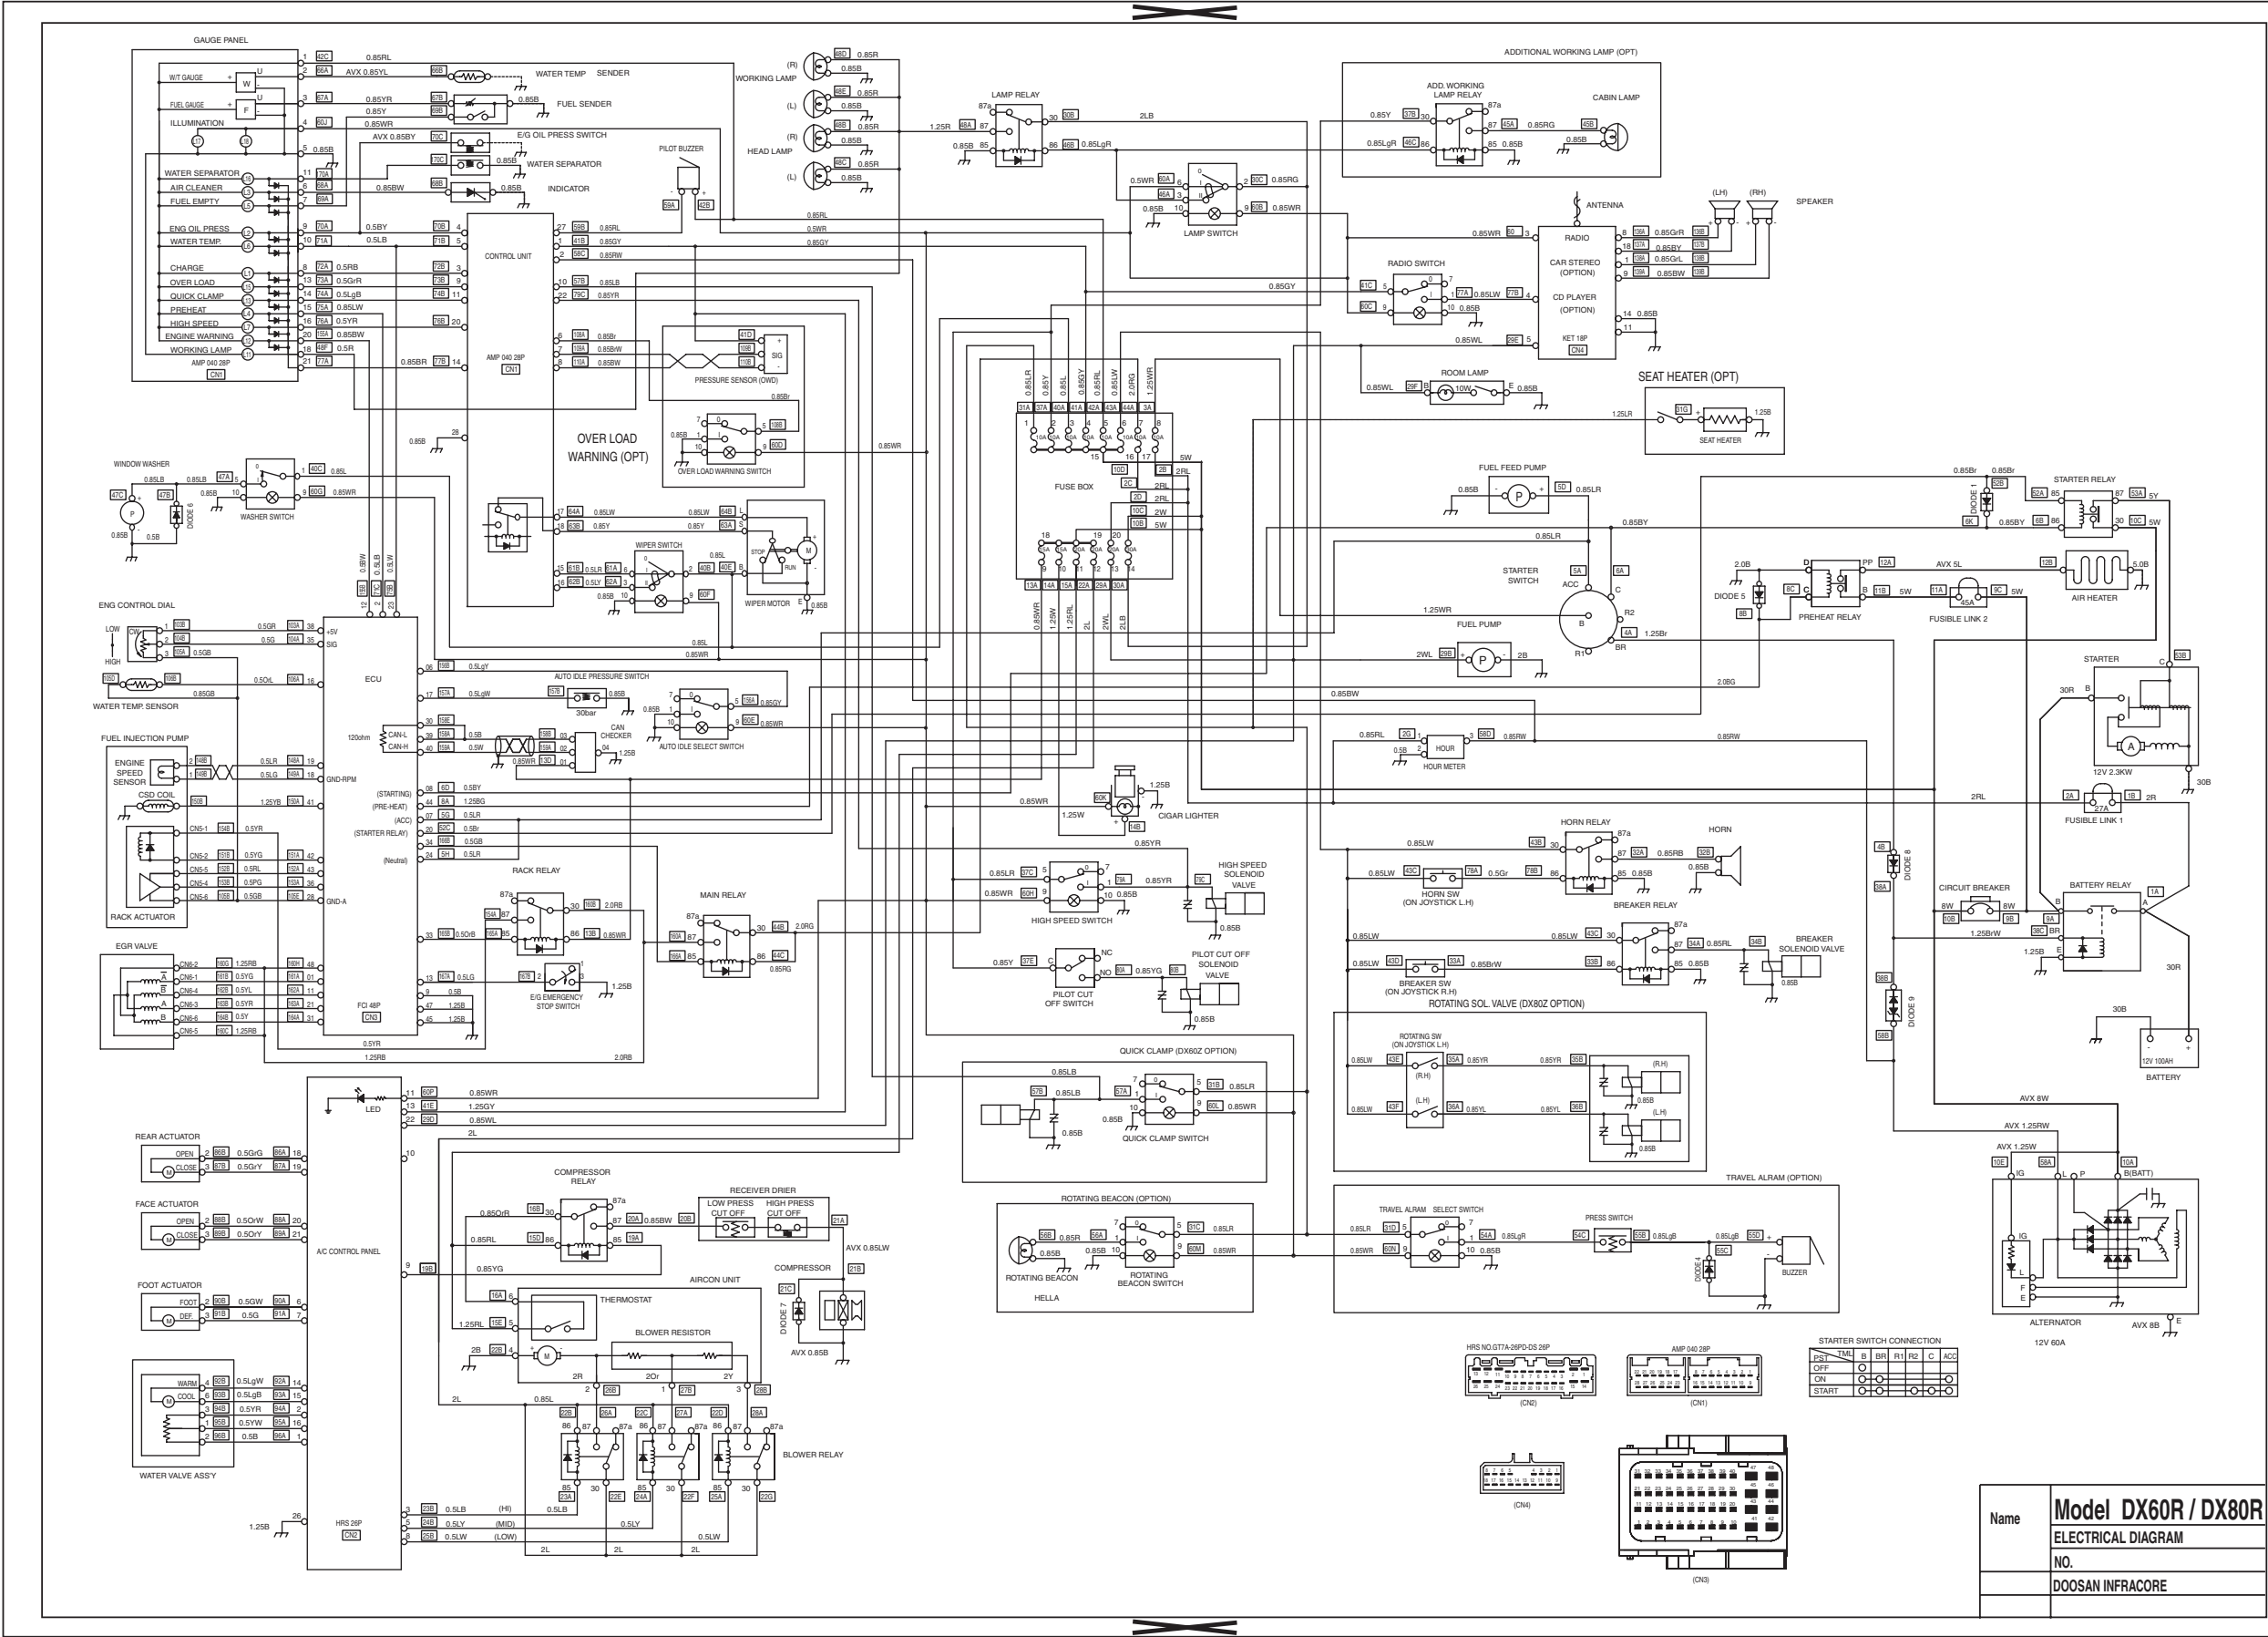


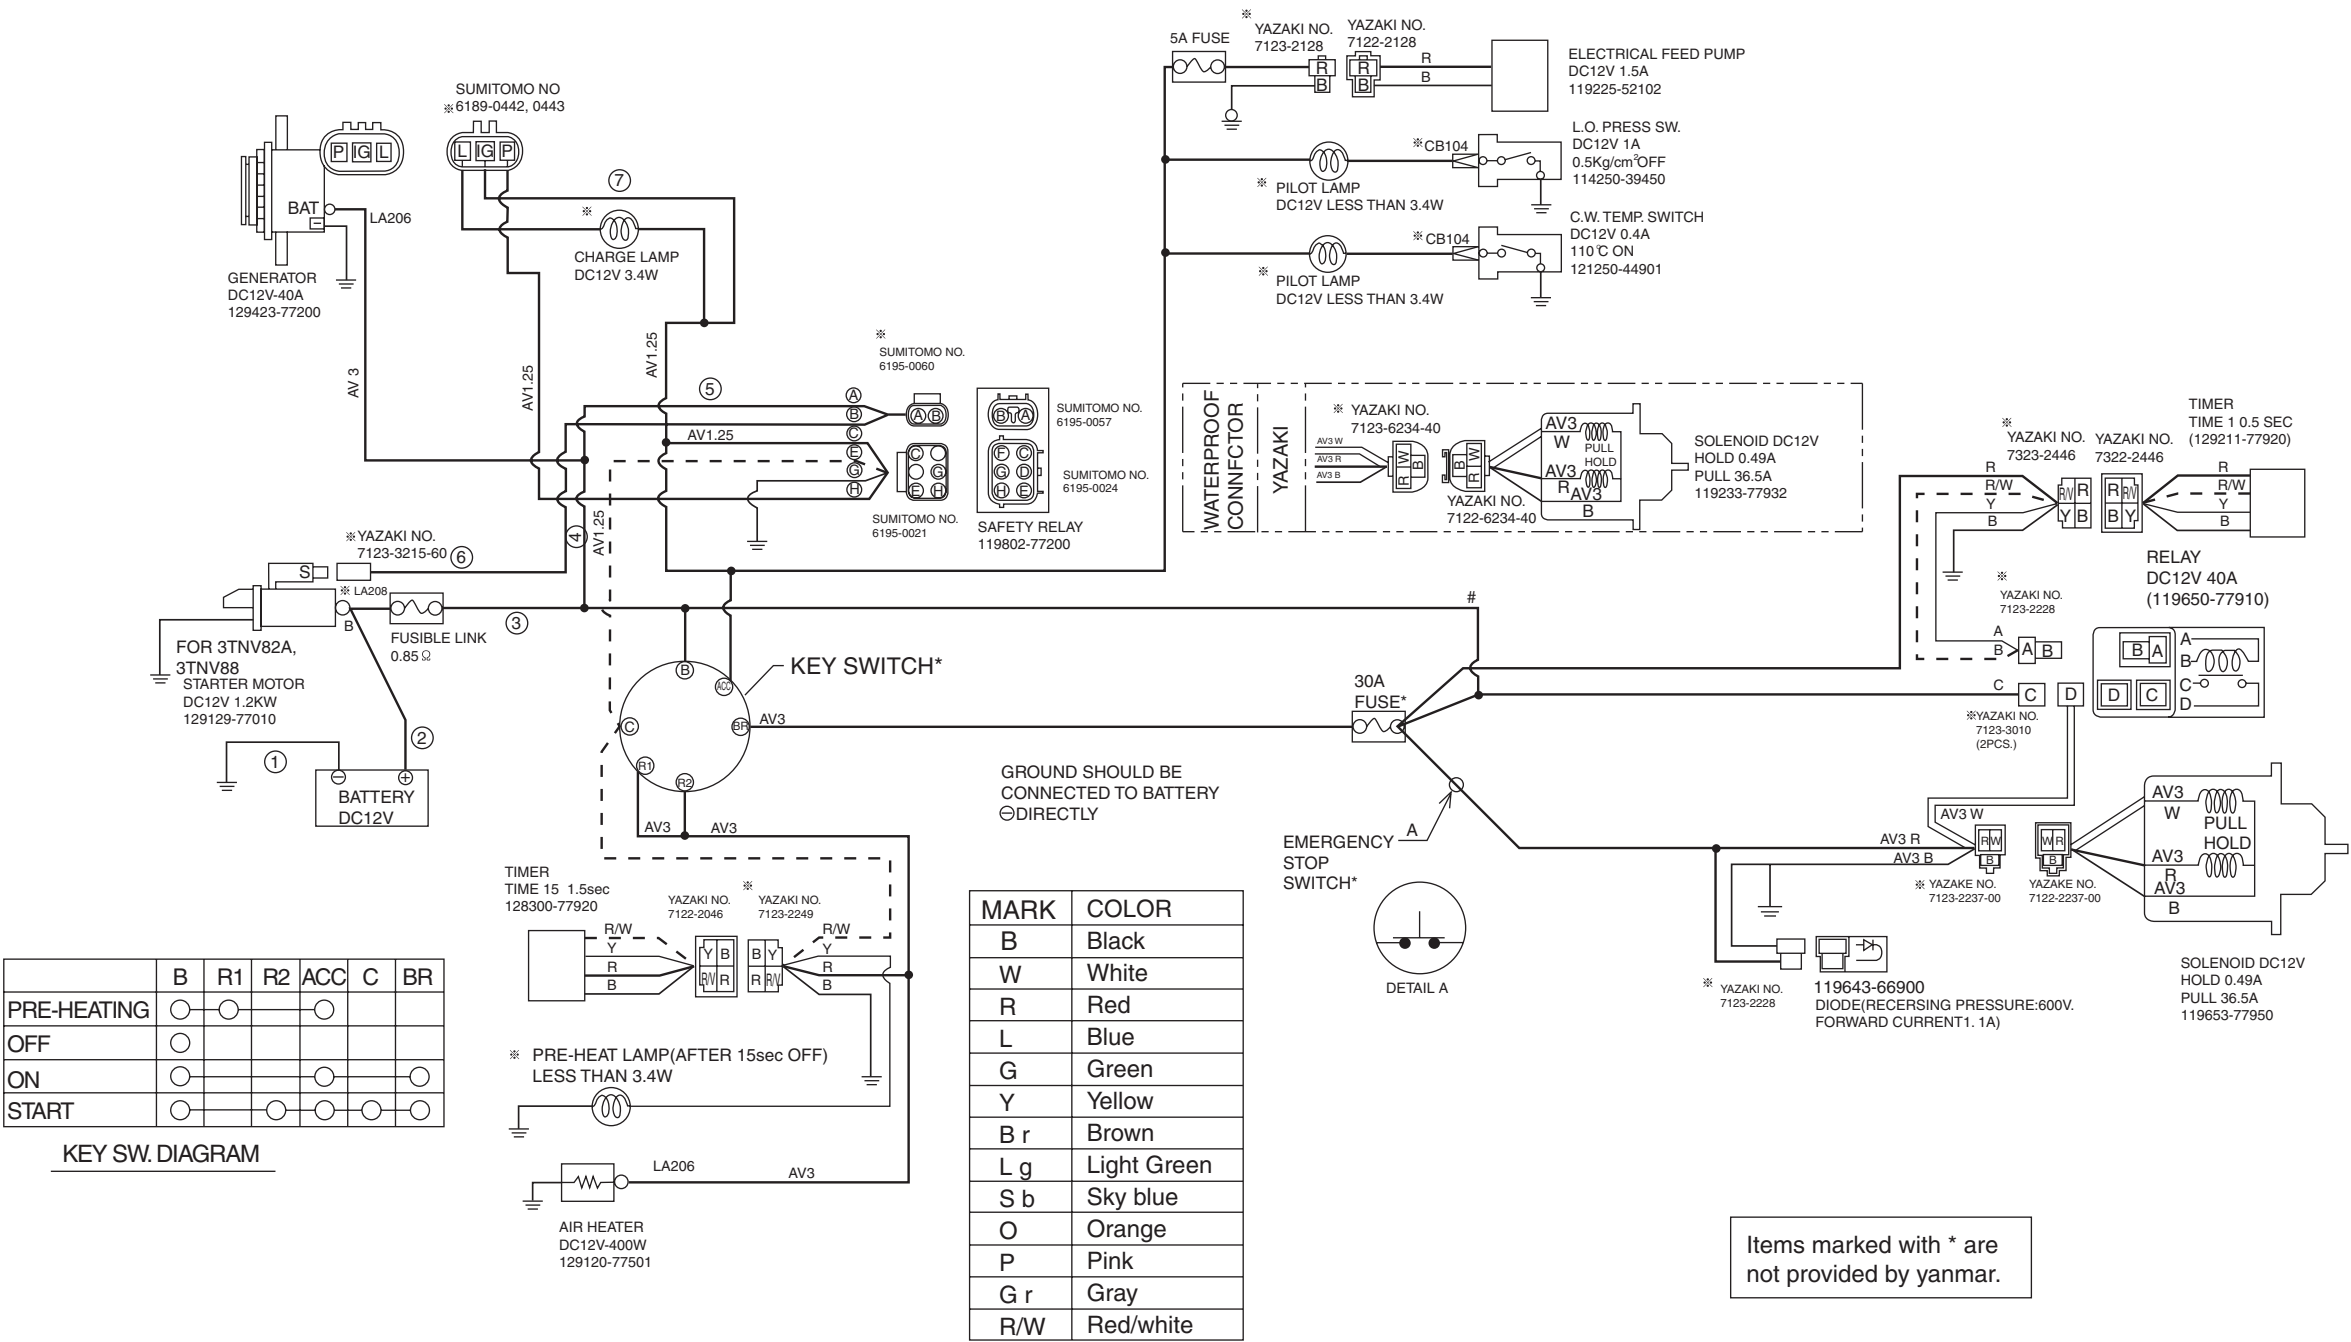



Yanmar TNV Engine	
Name	Model DX60R
	ELECTRICAL DIAGRAM
	NO.
	DOOSAN INFRACORE







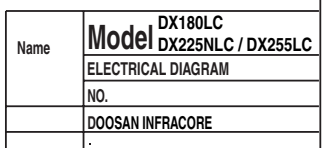


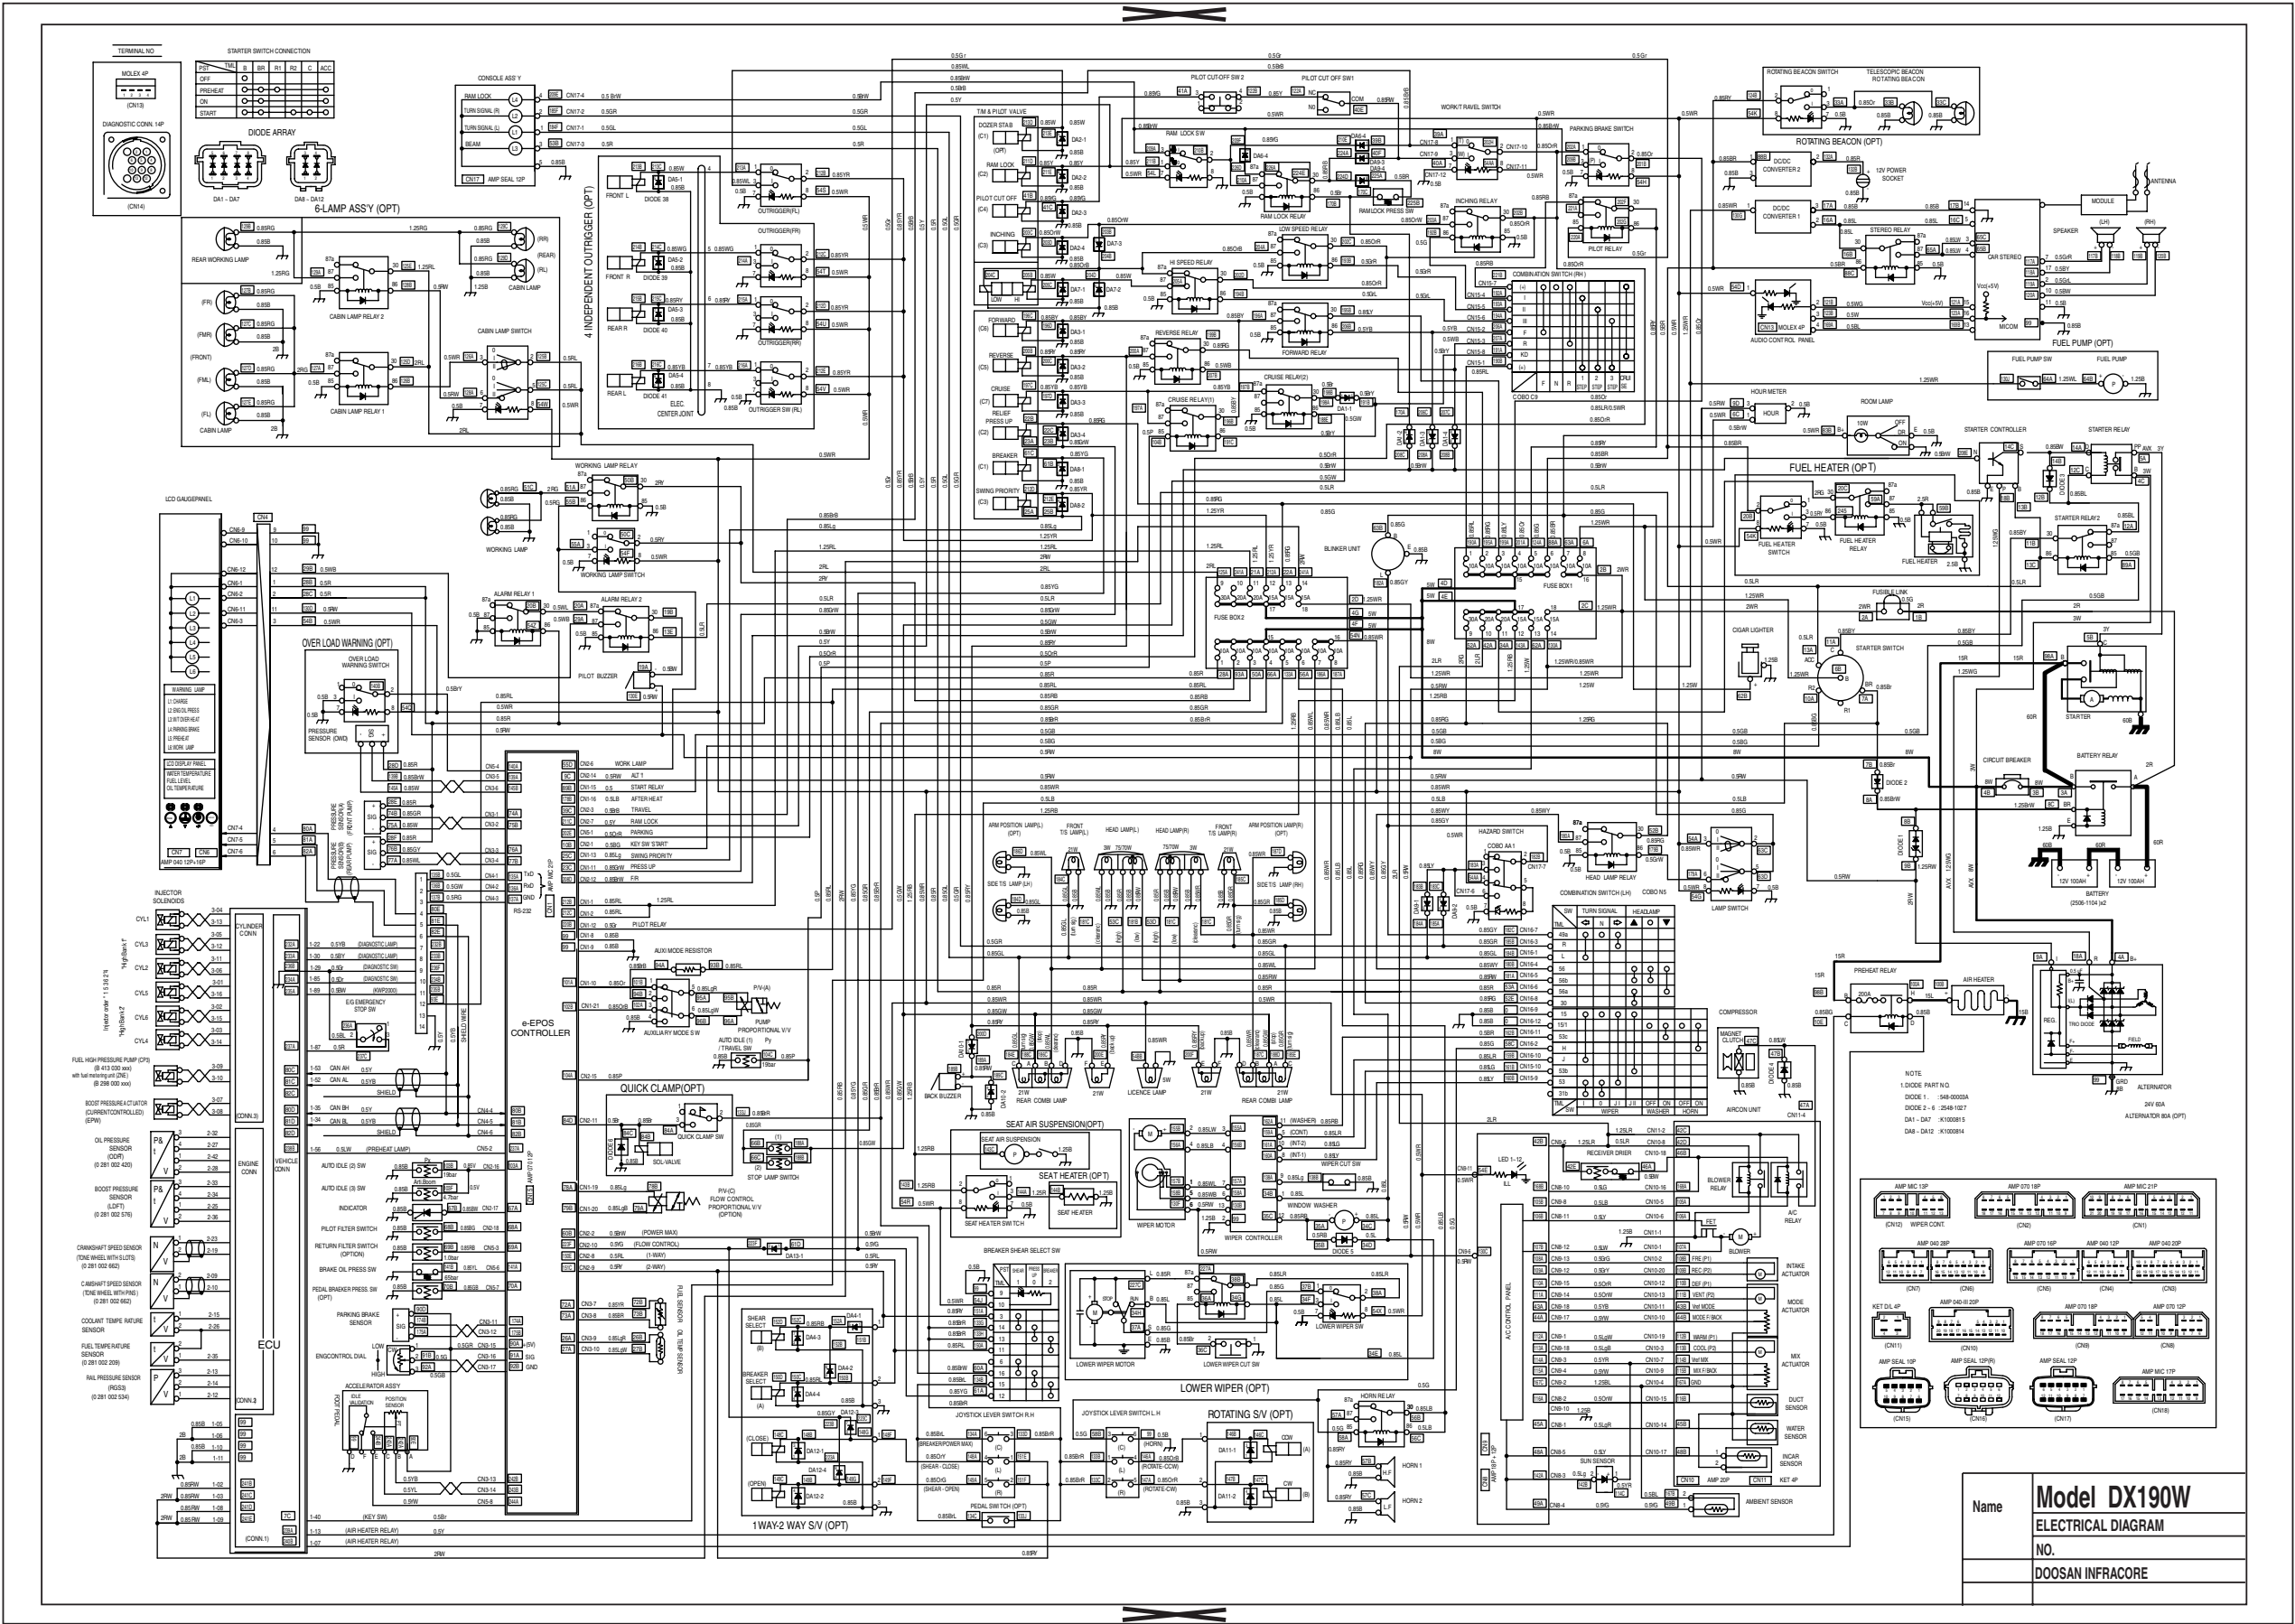


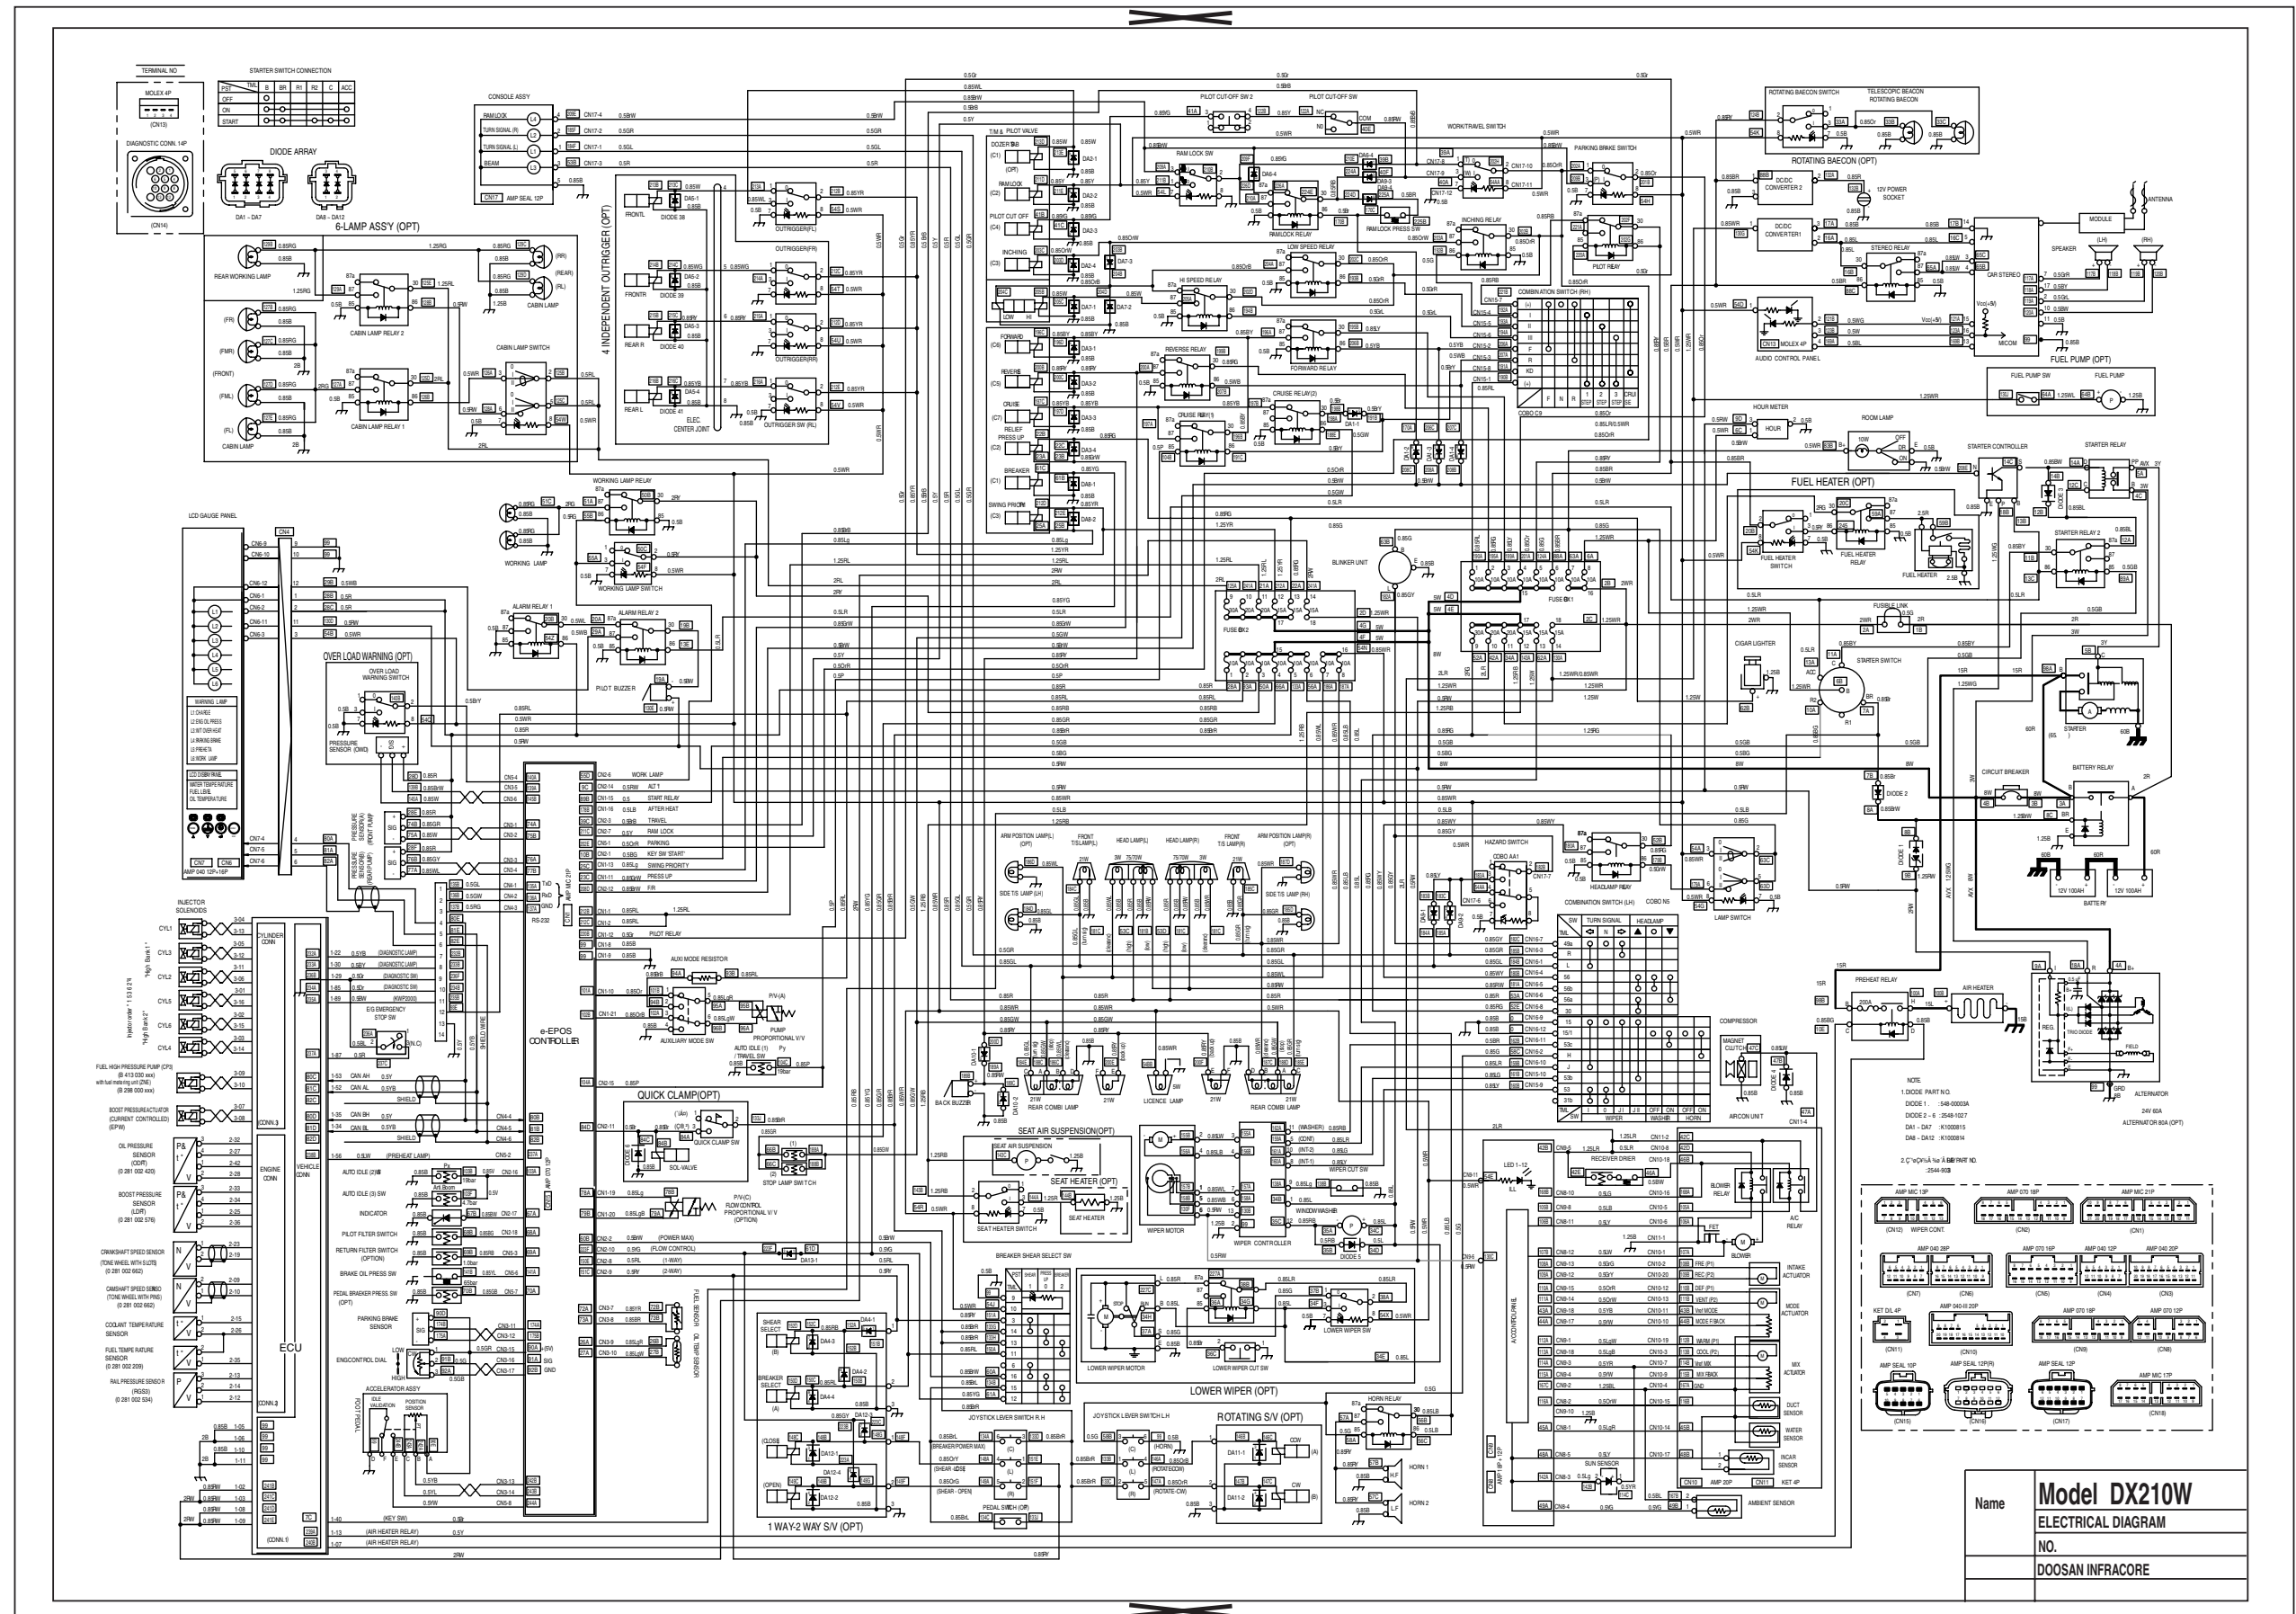


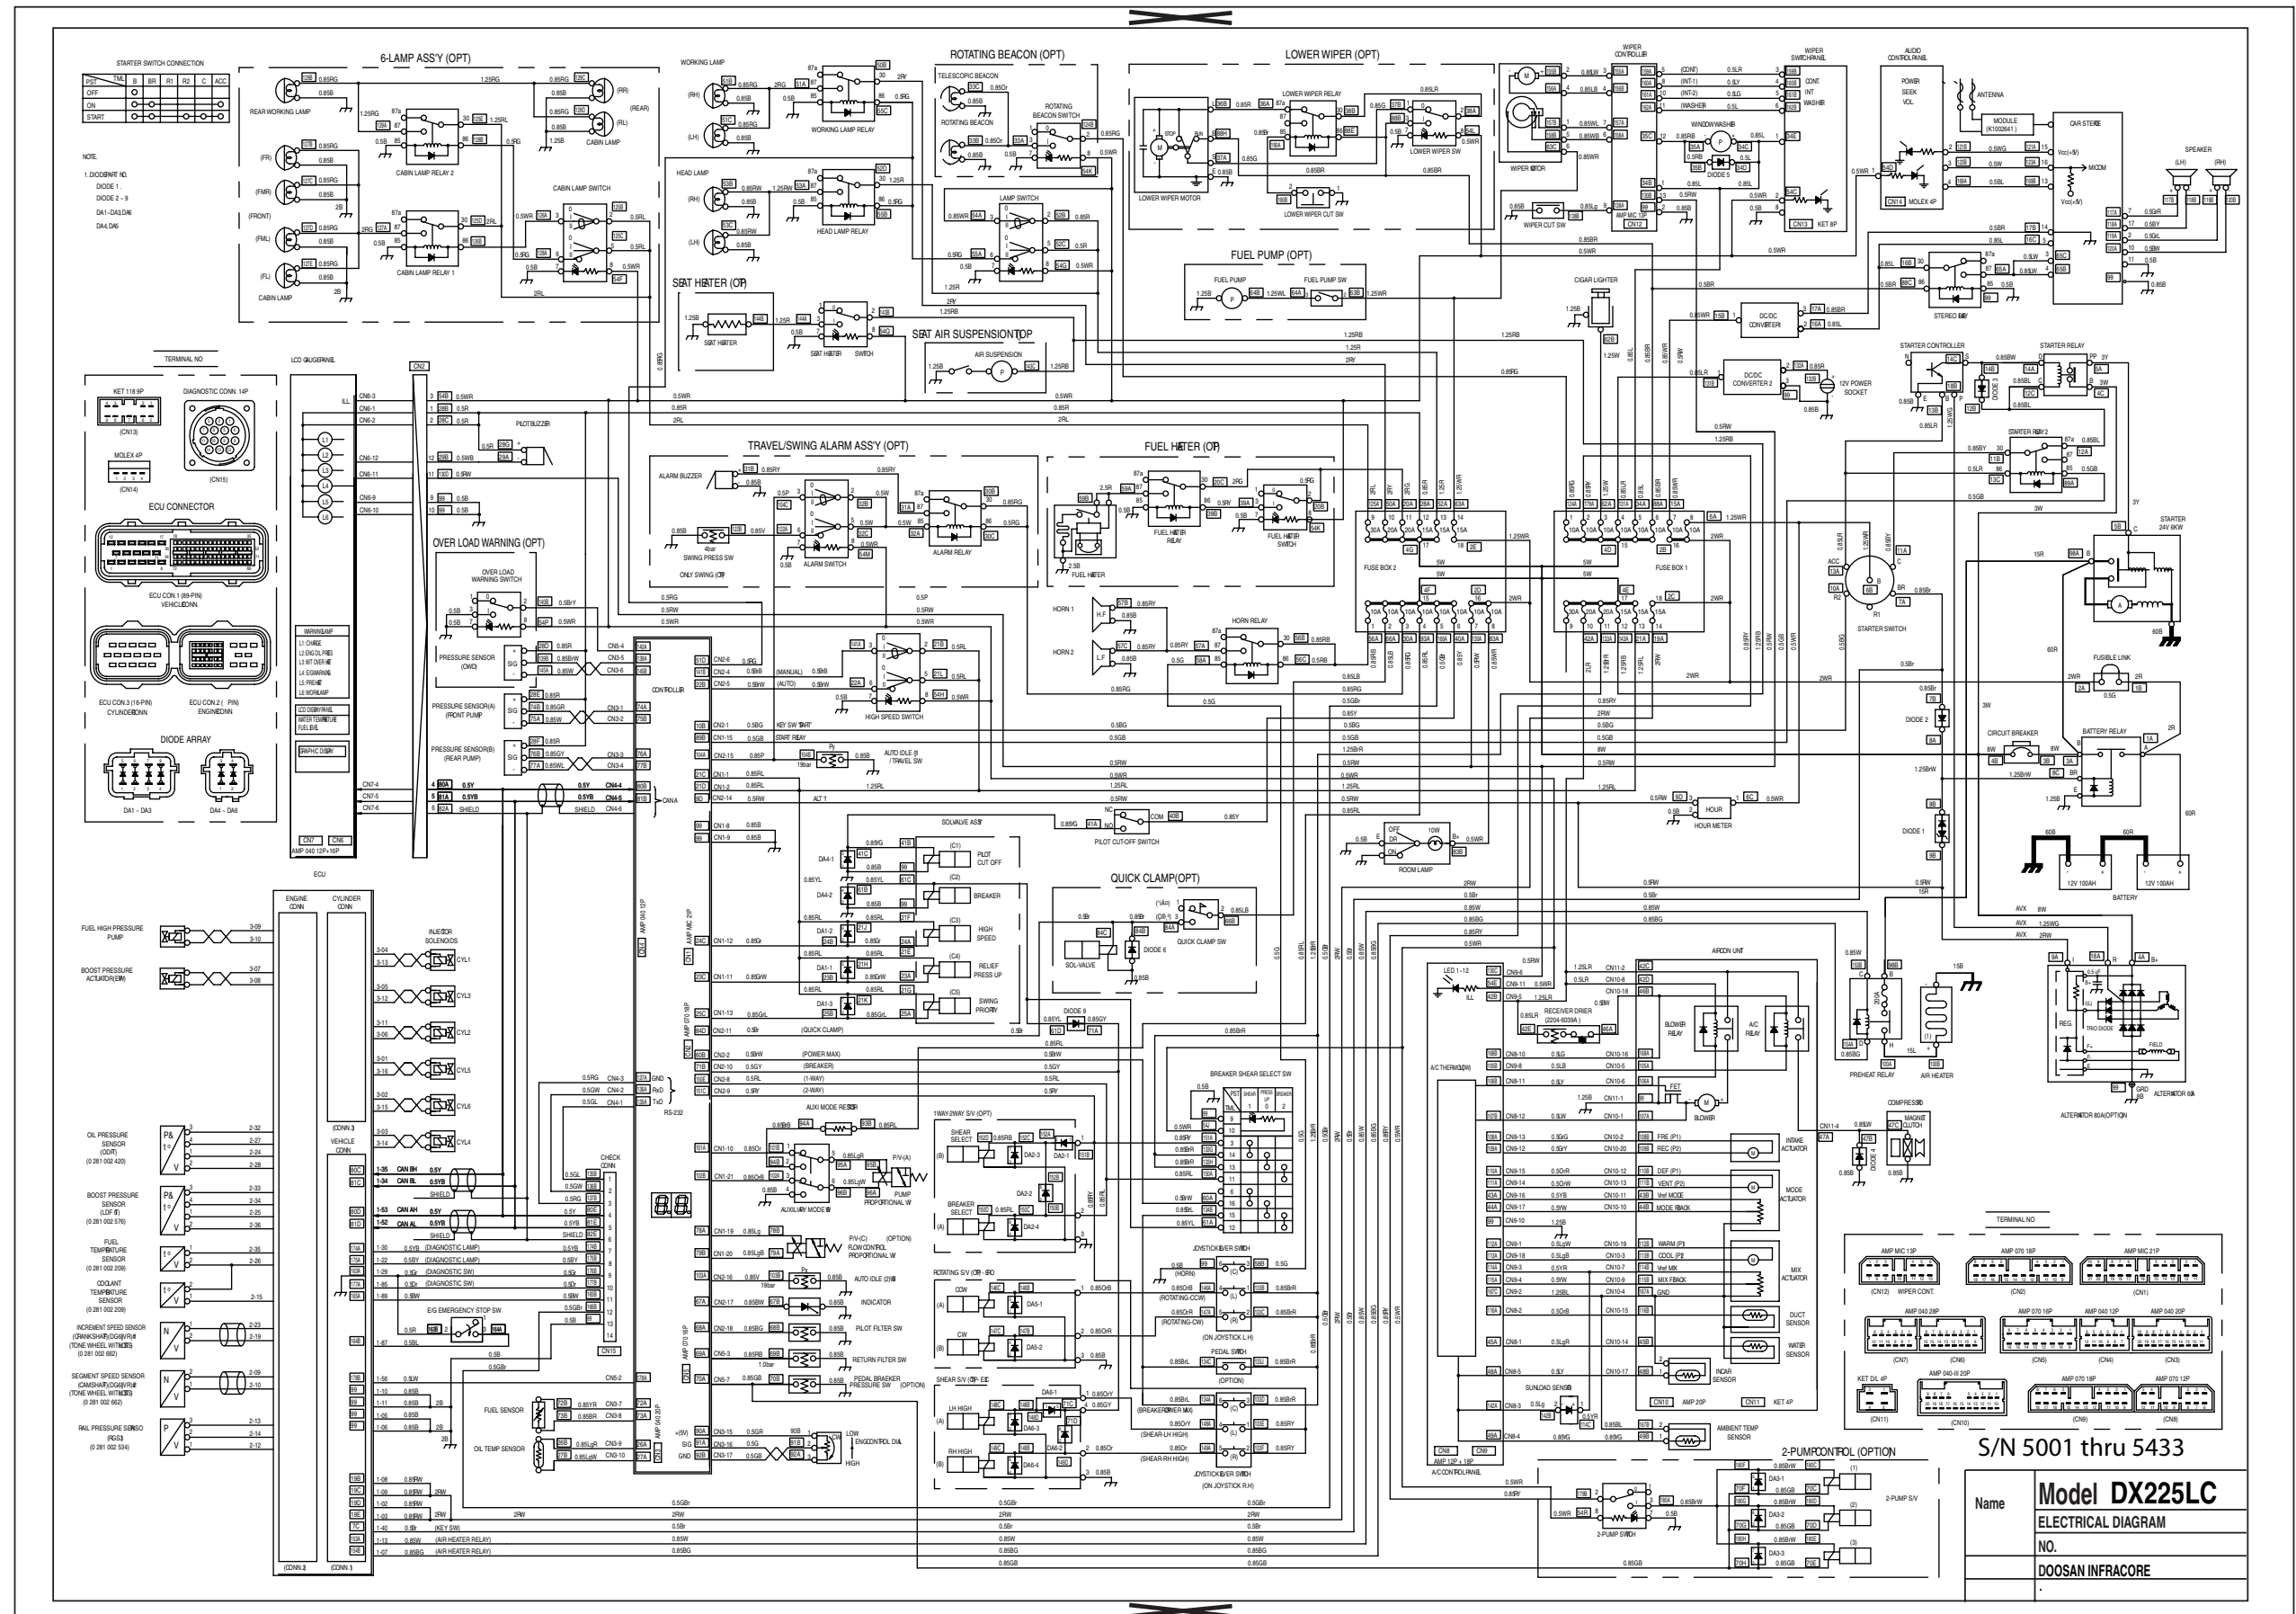


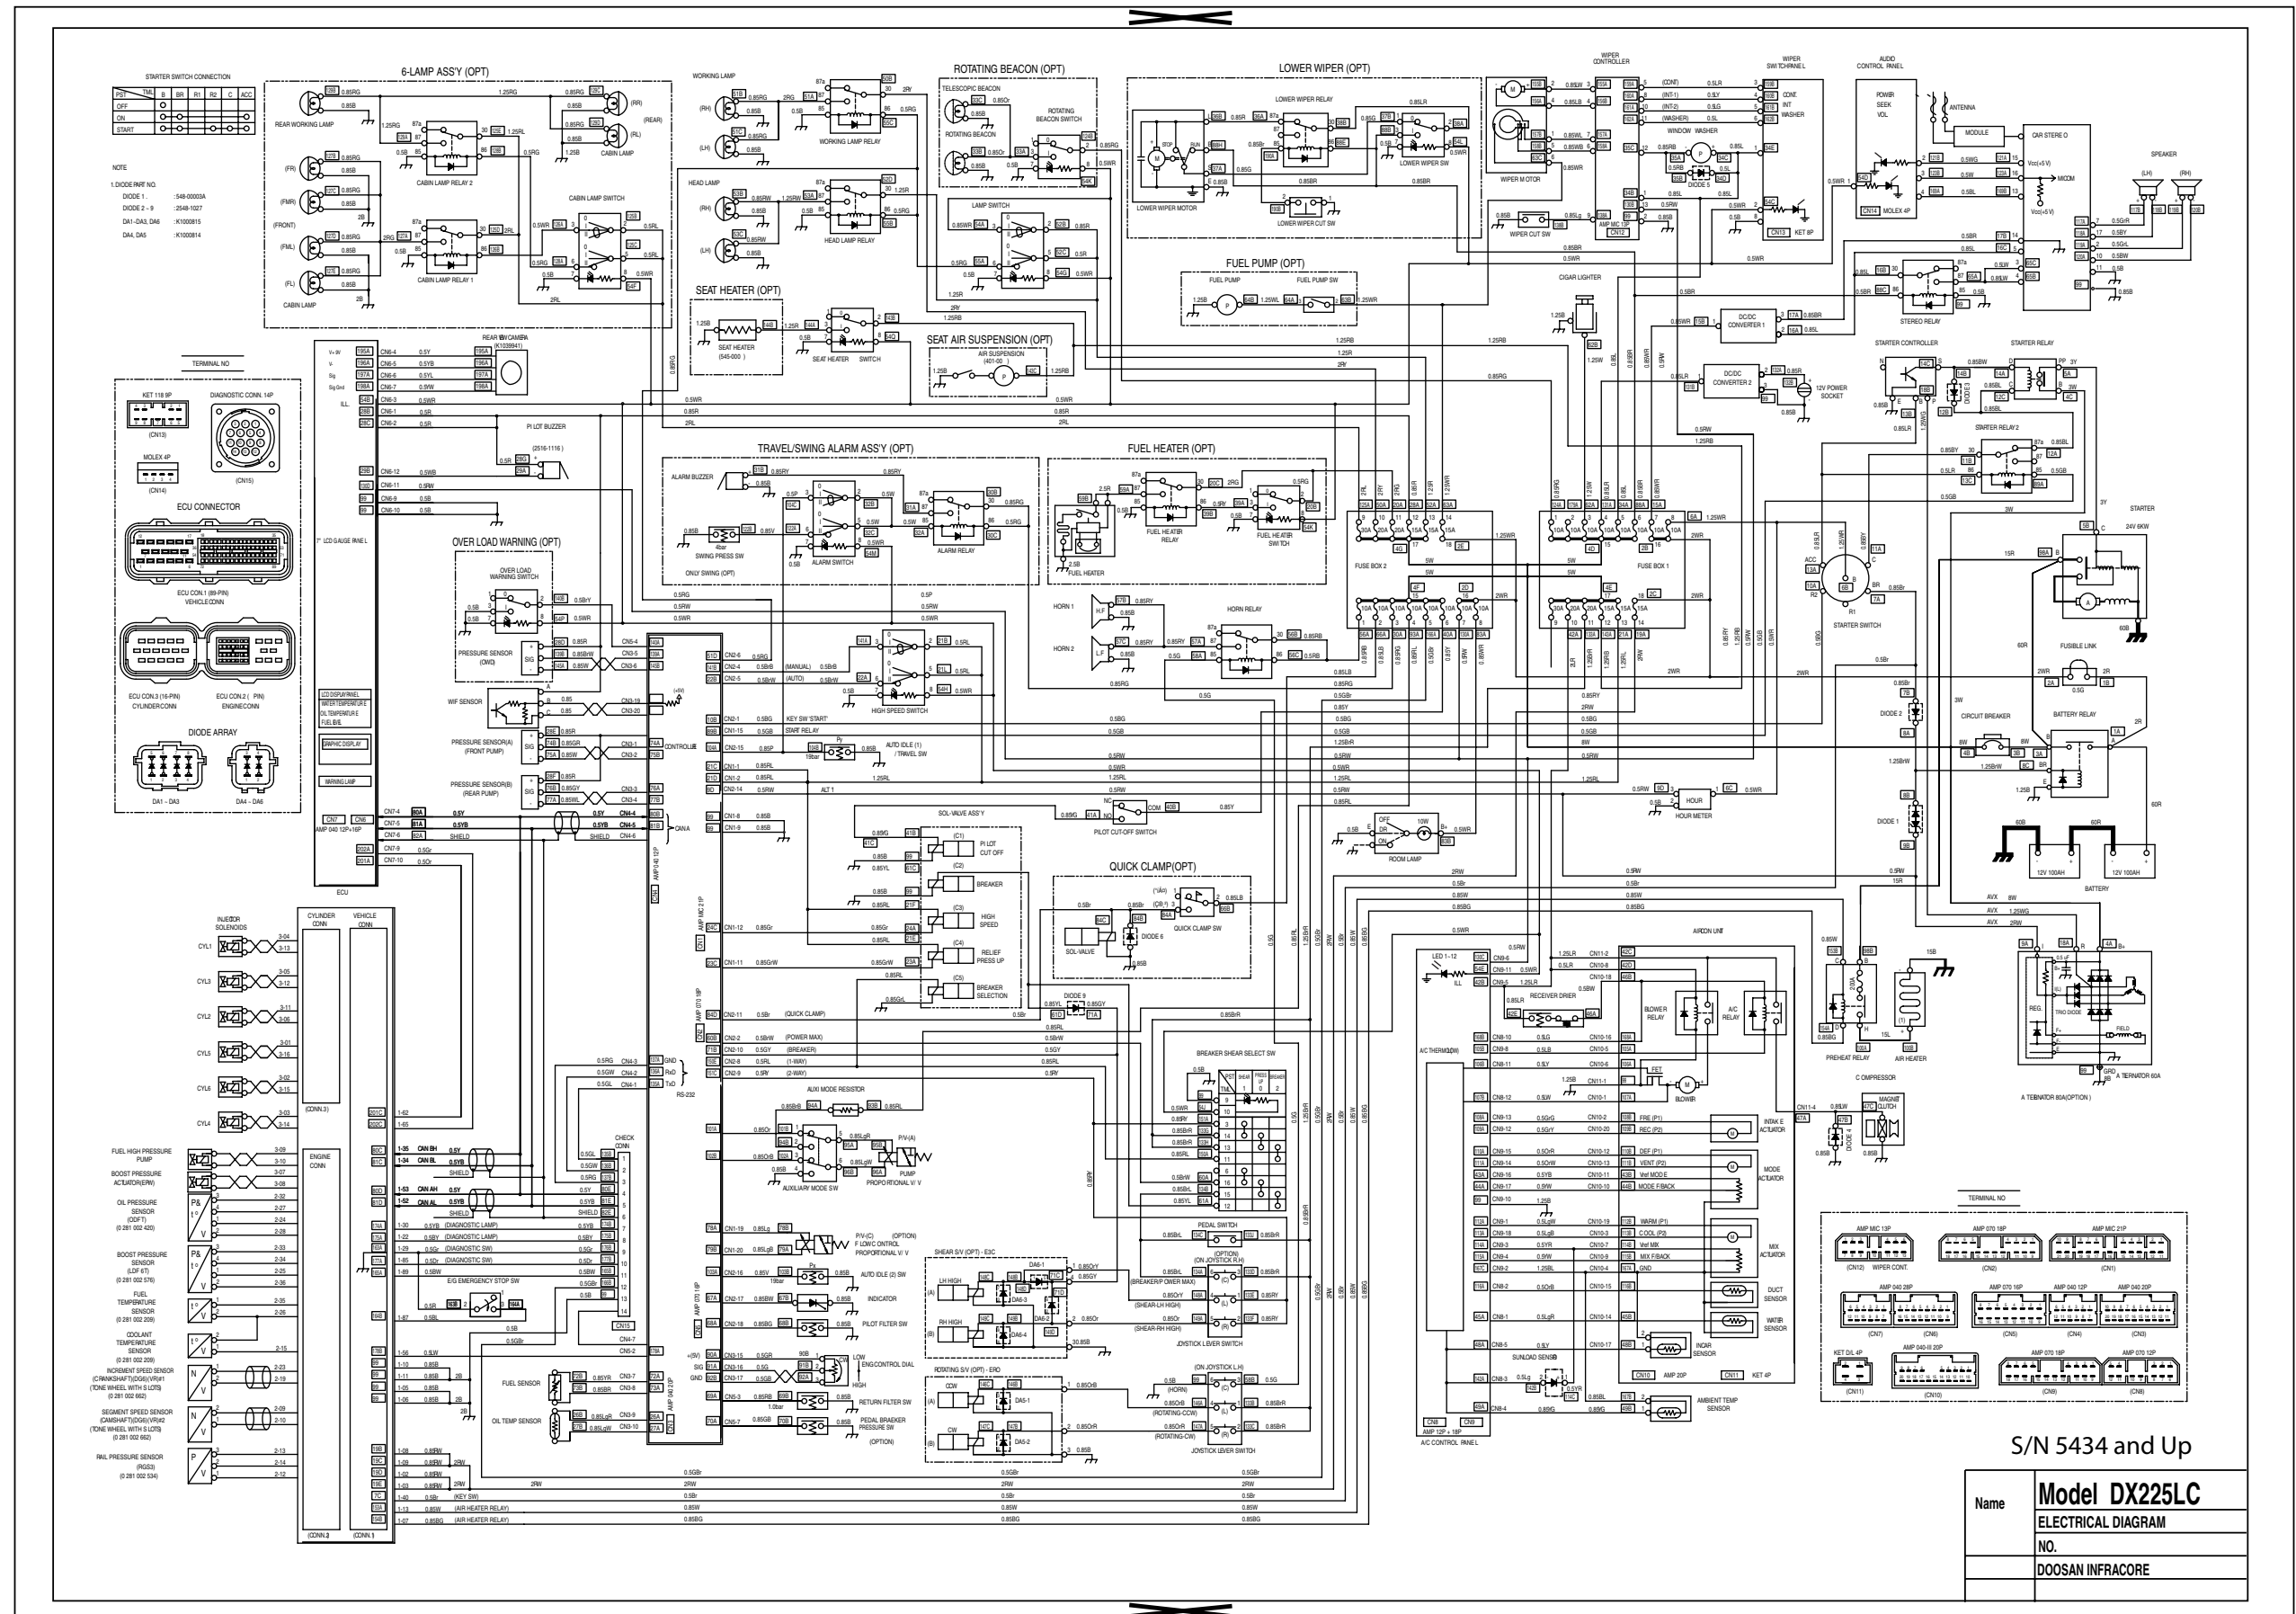


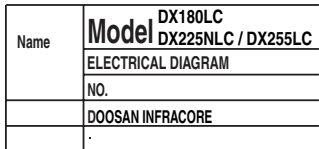


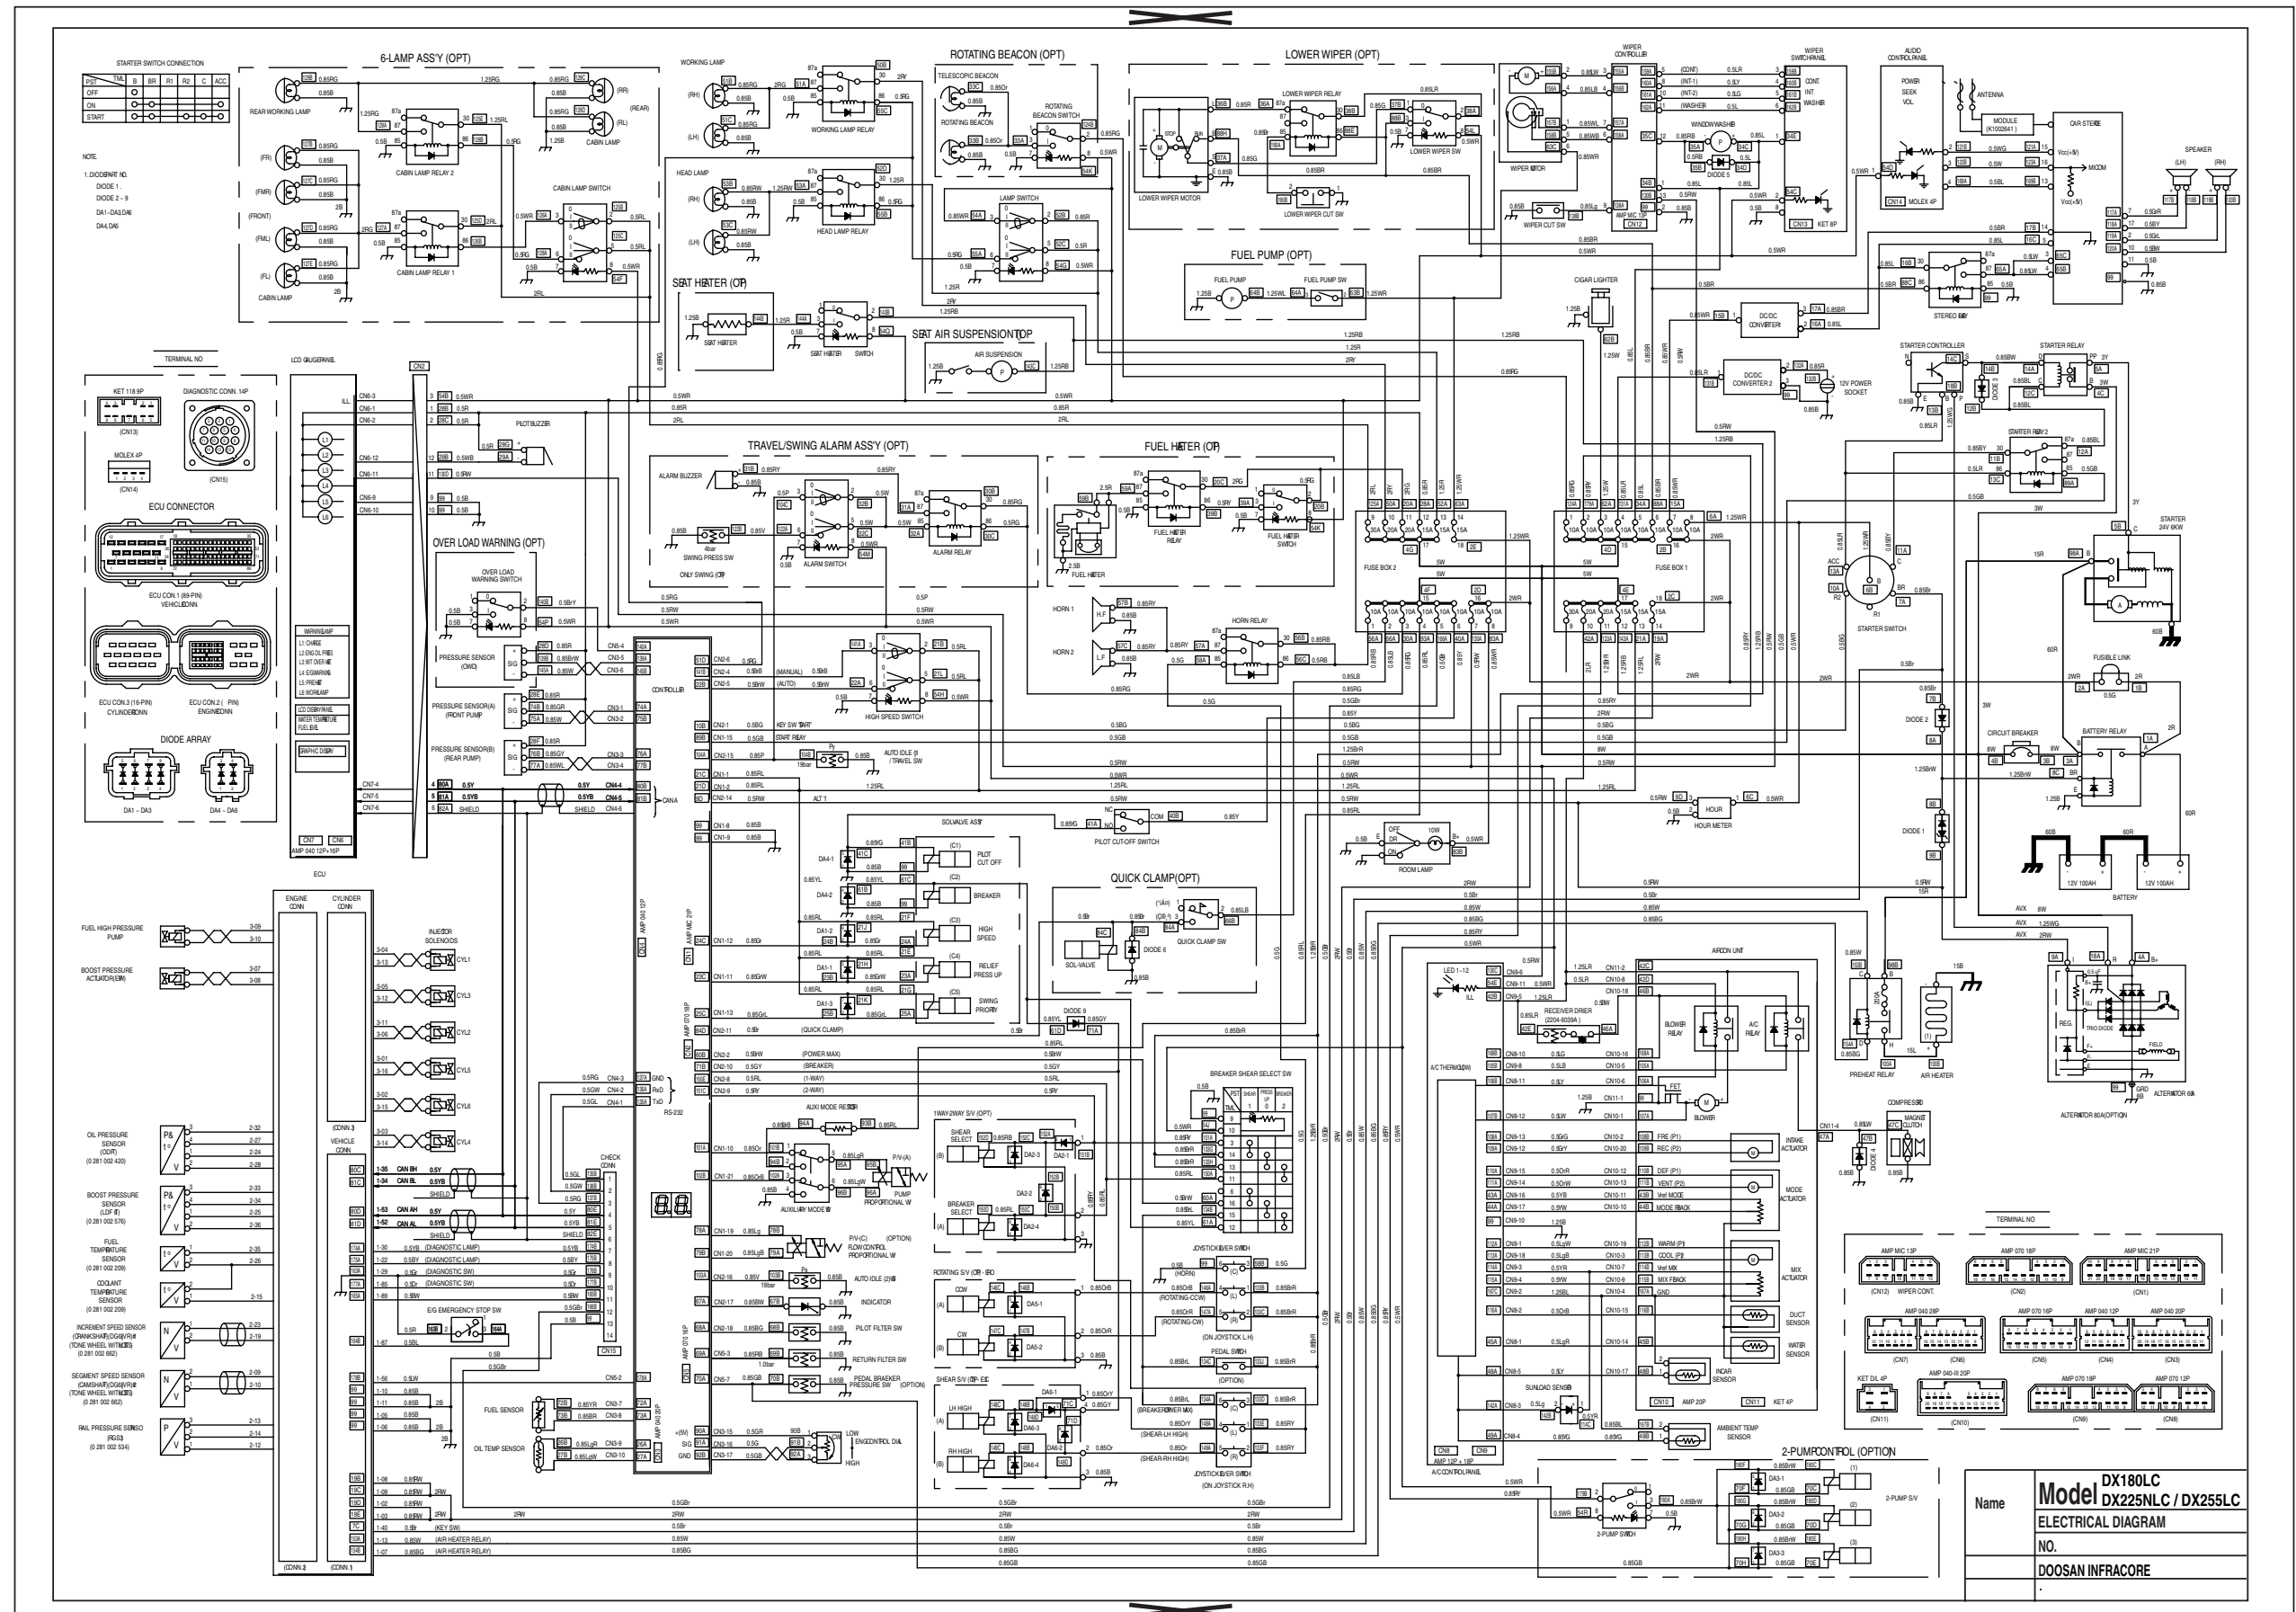


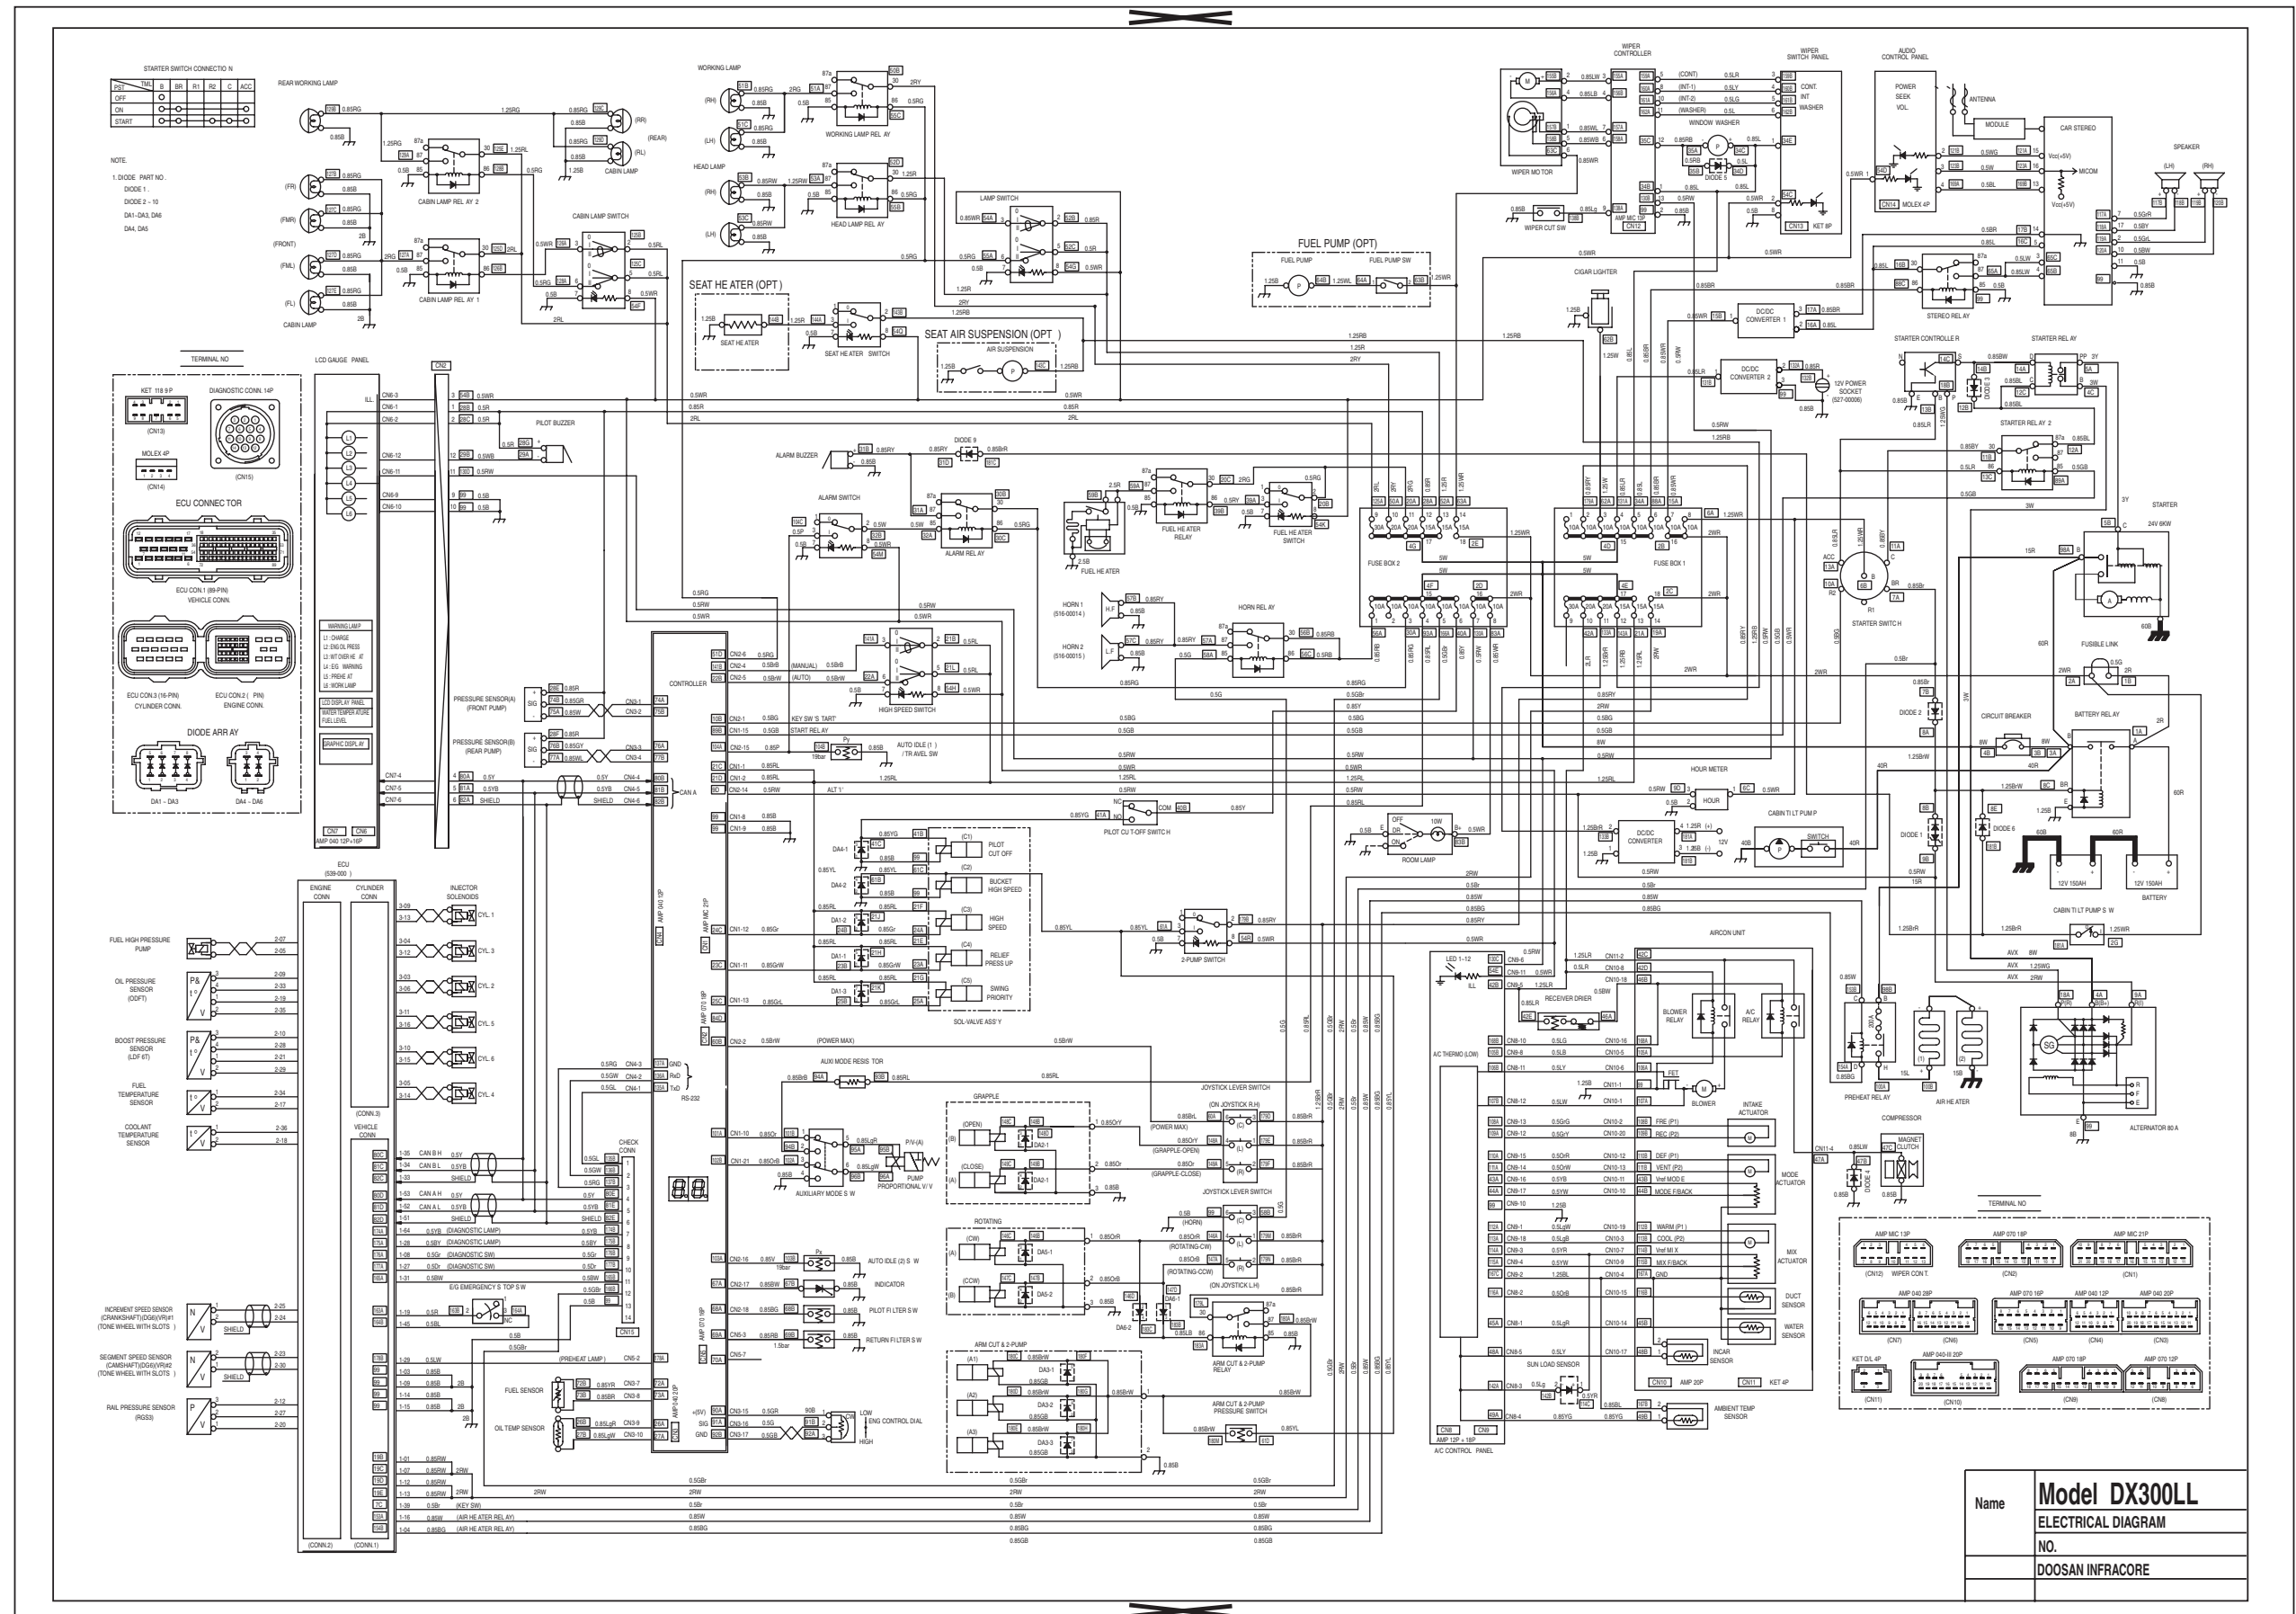


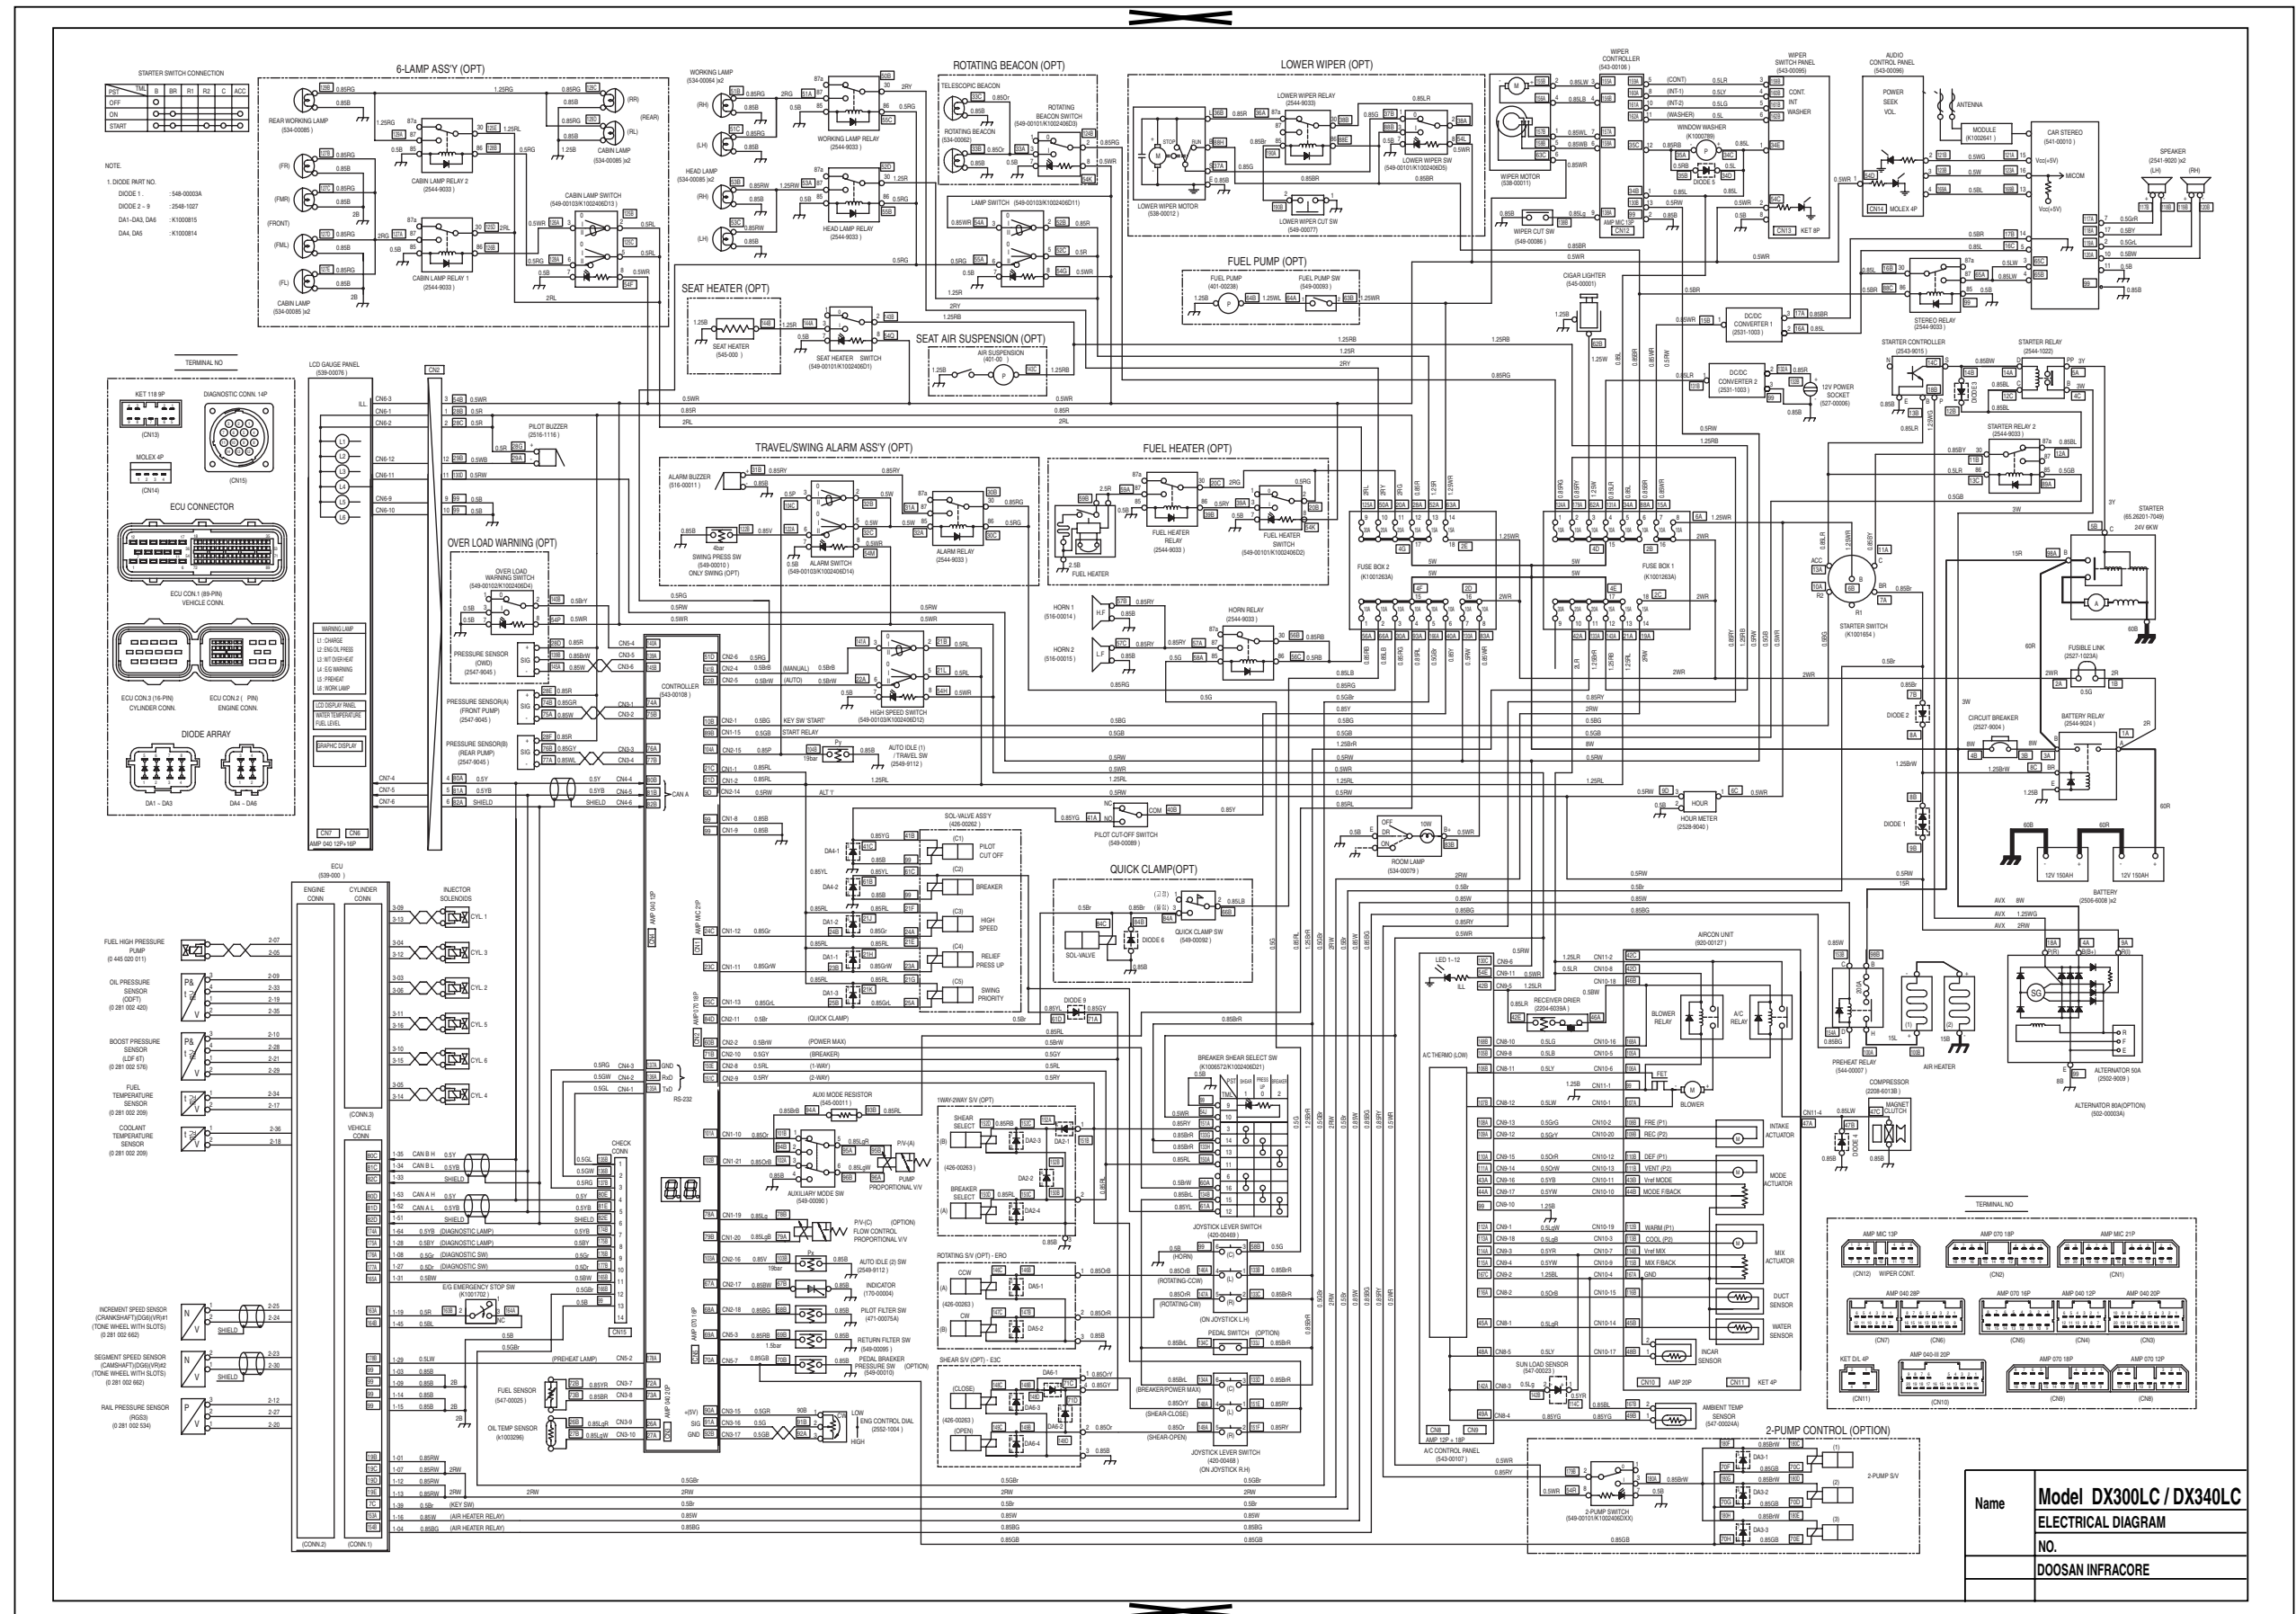

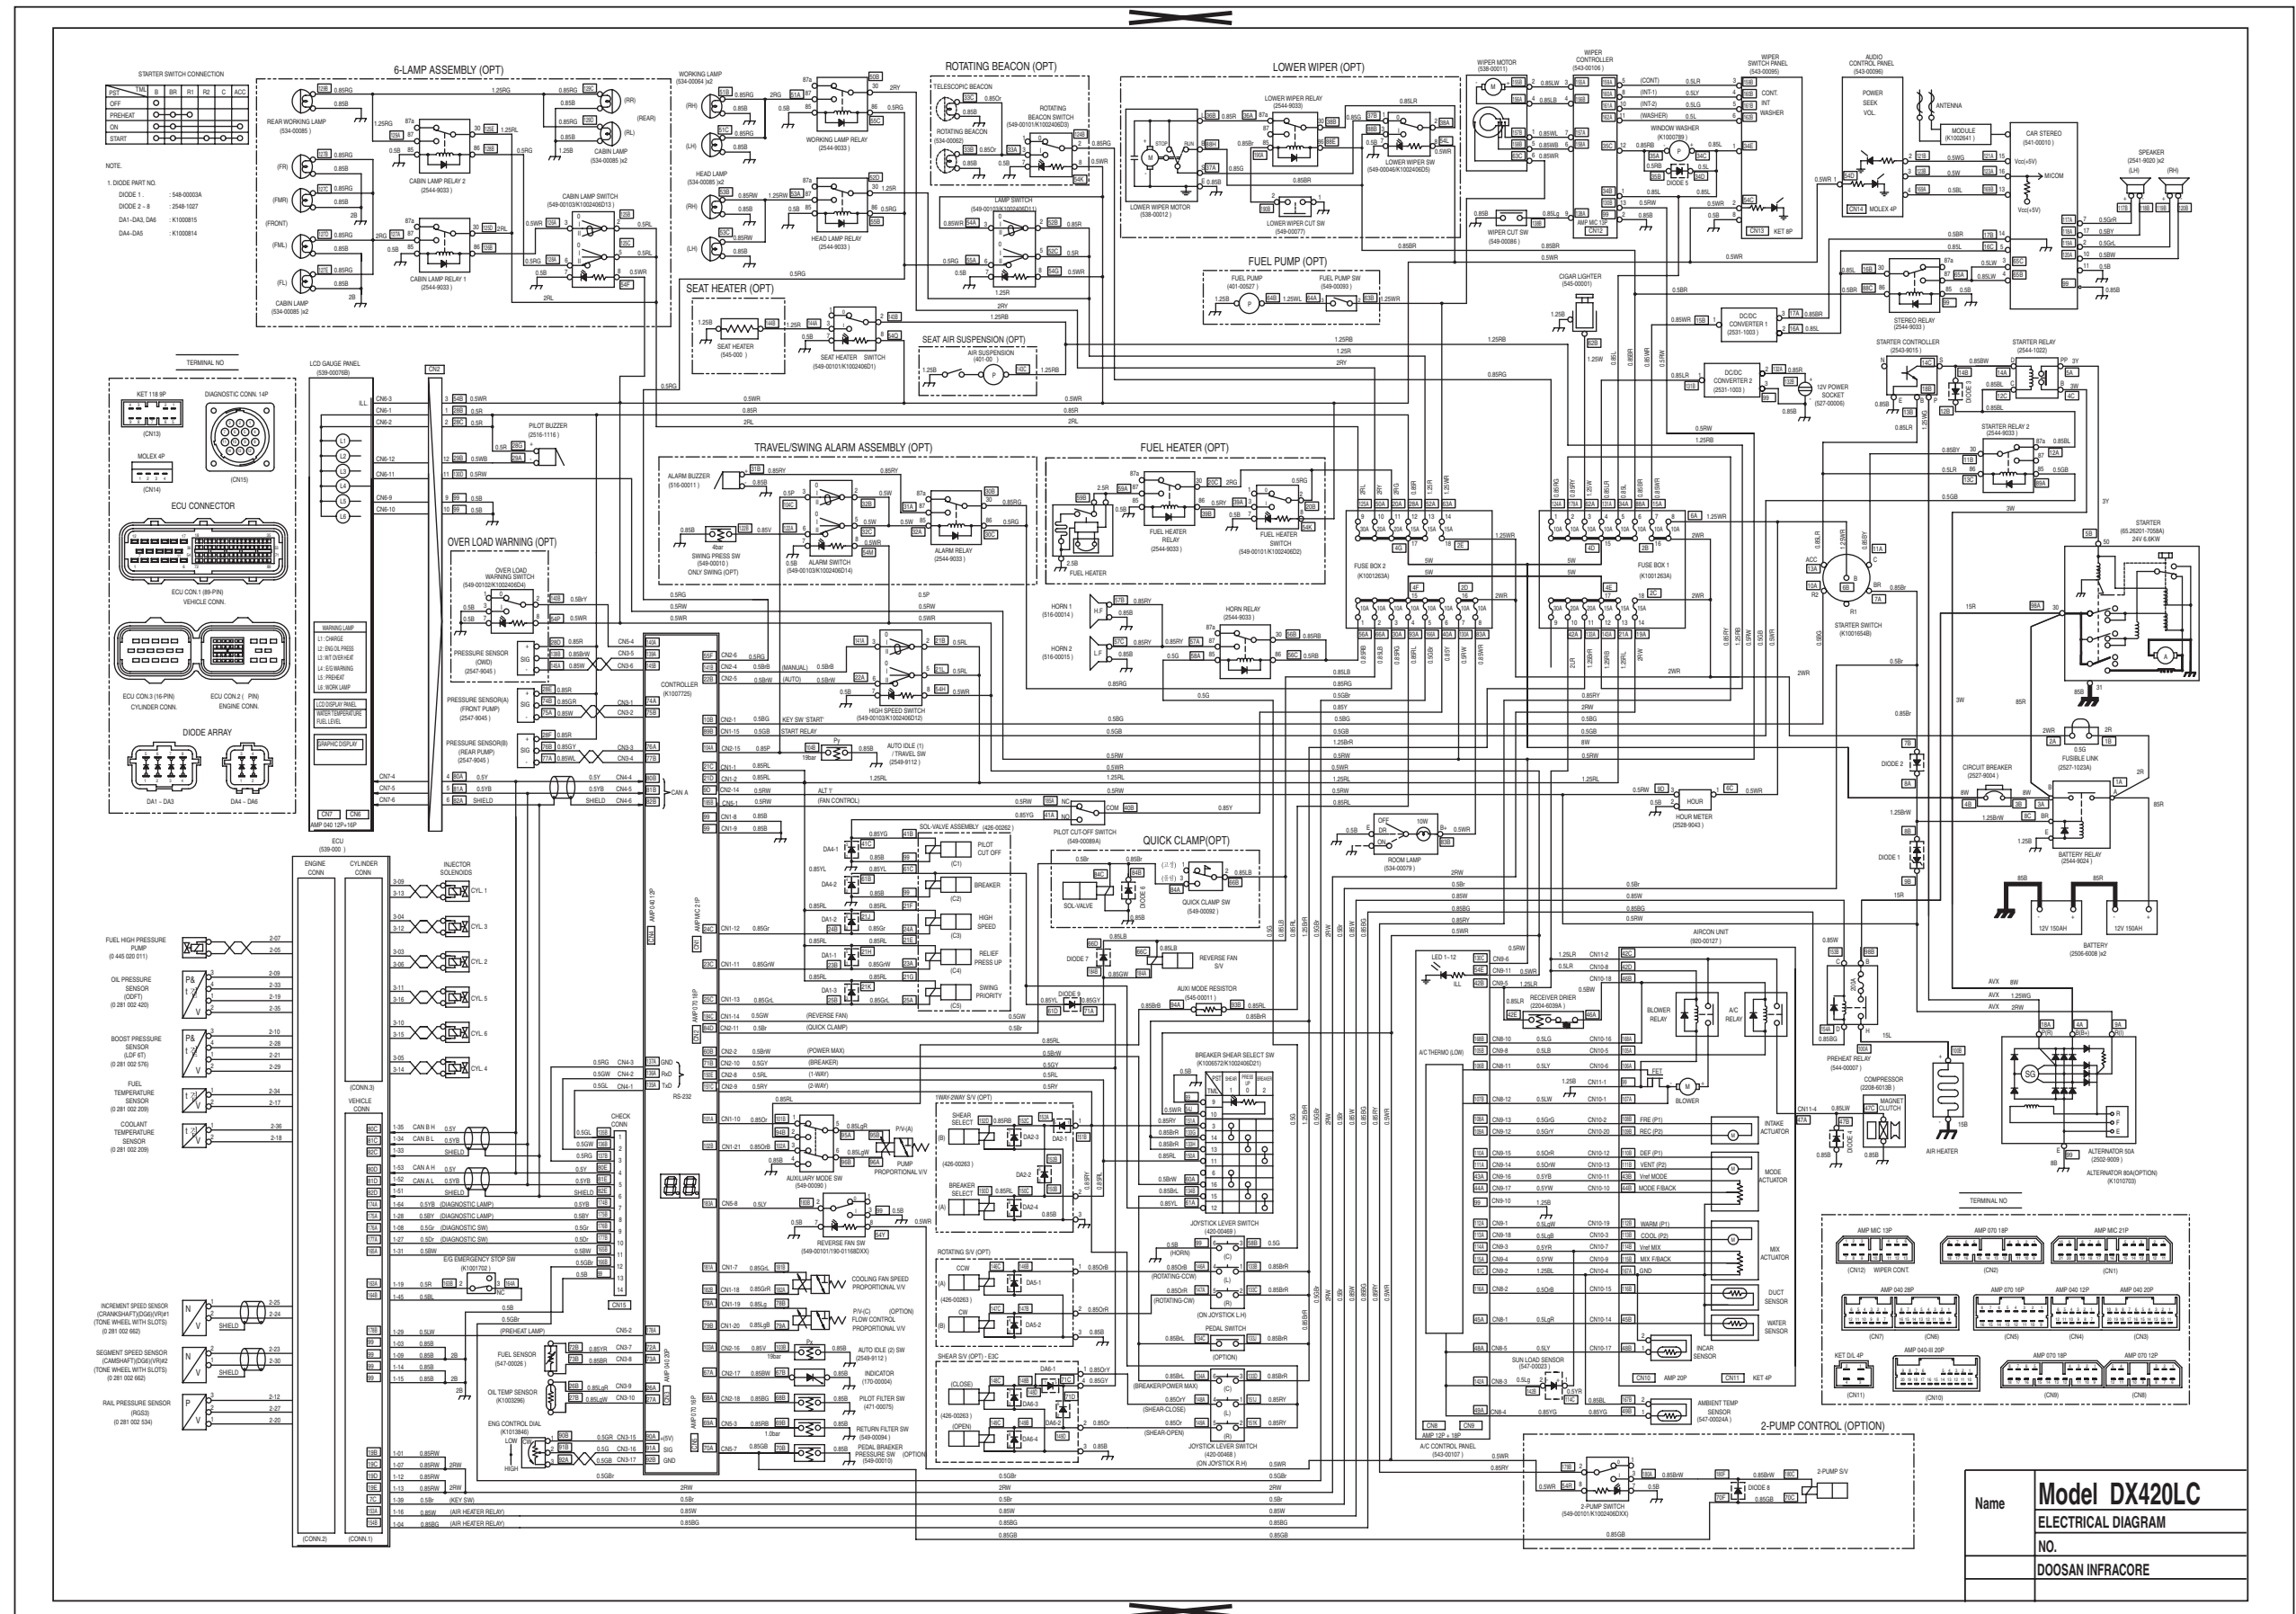


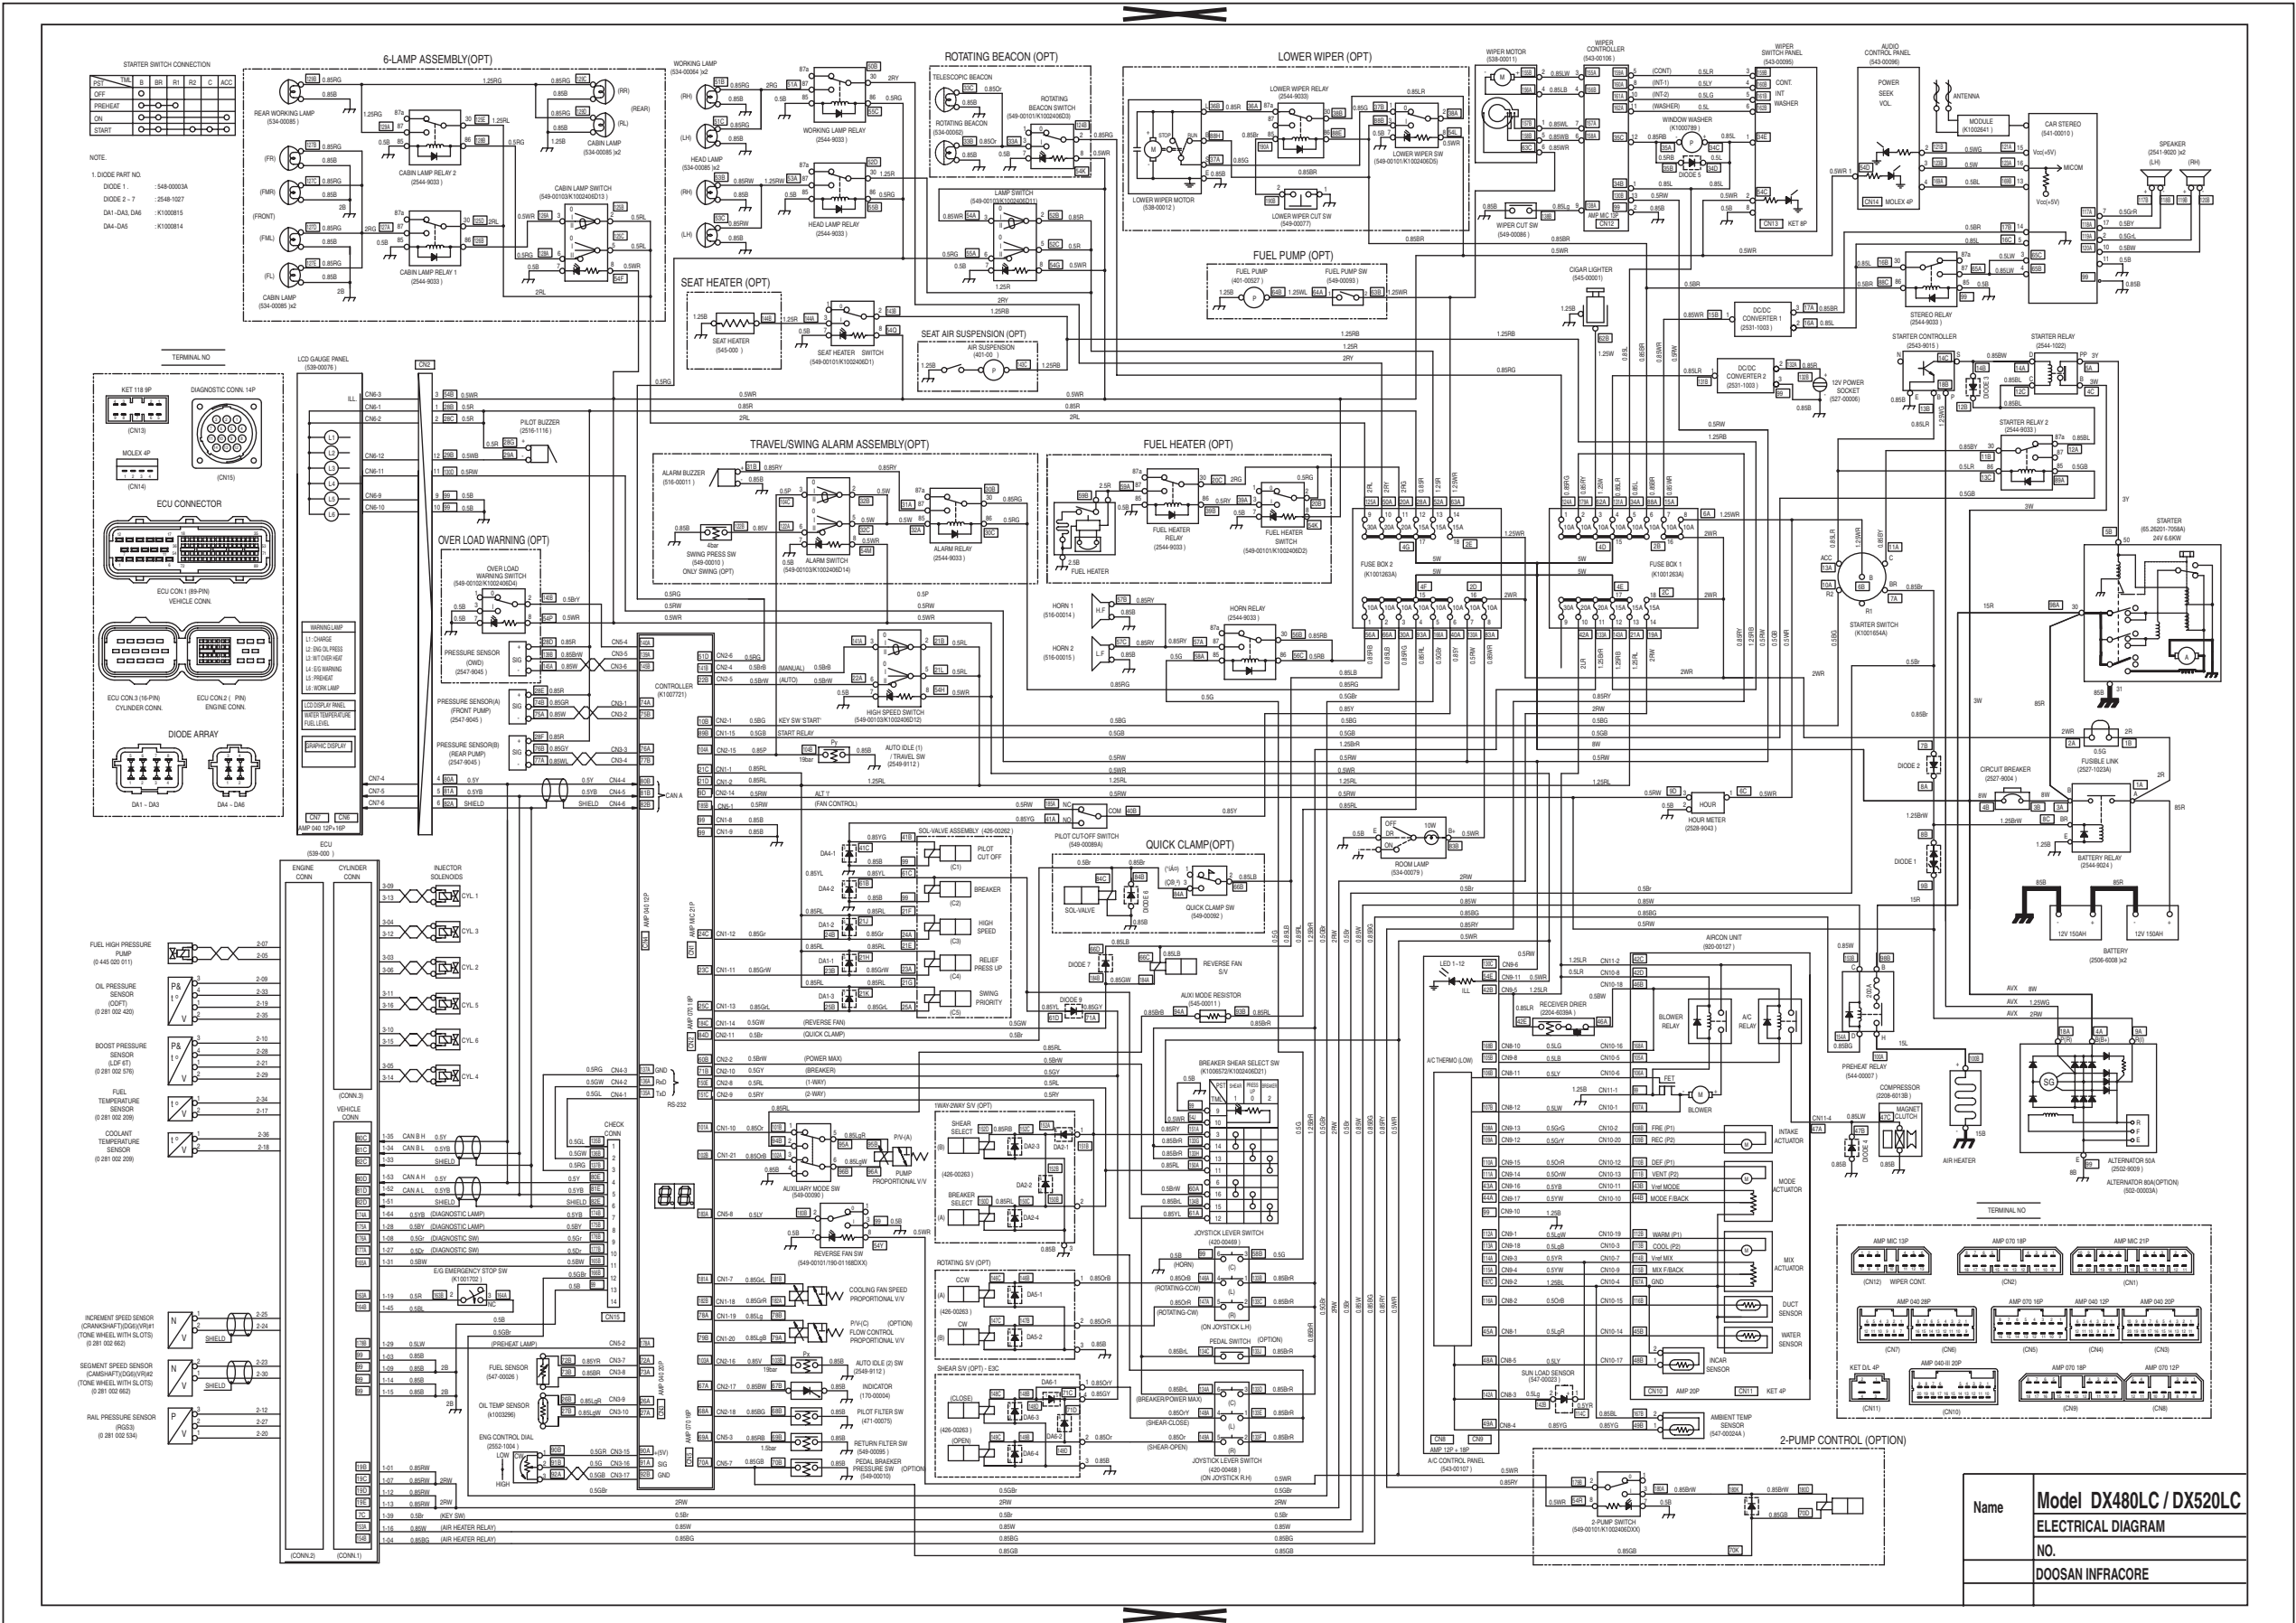


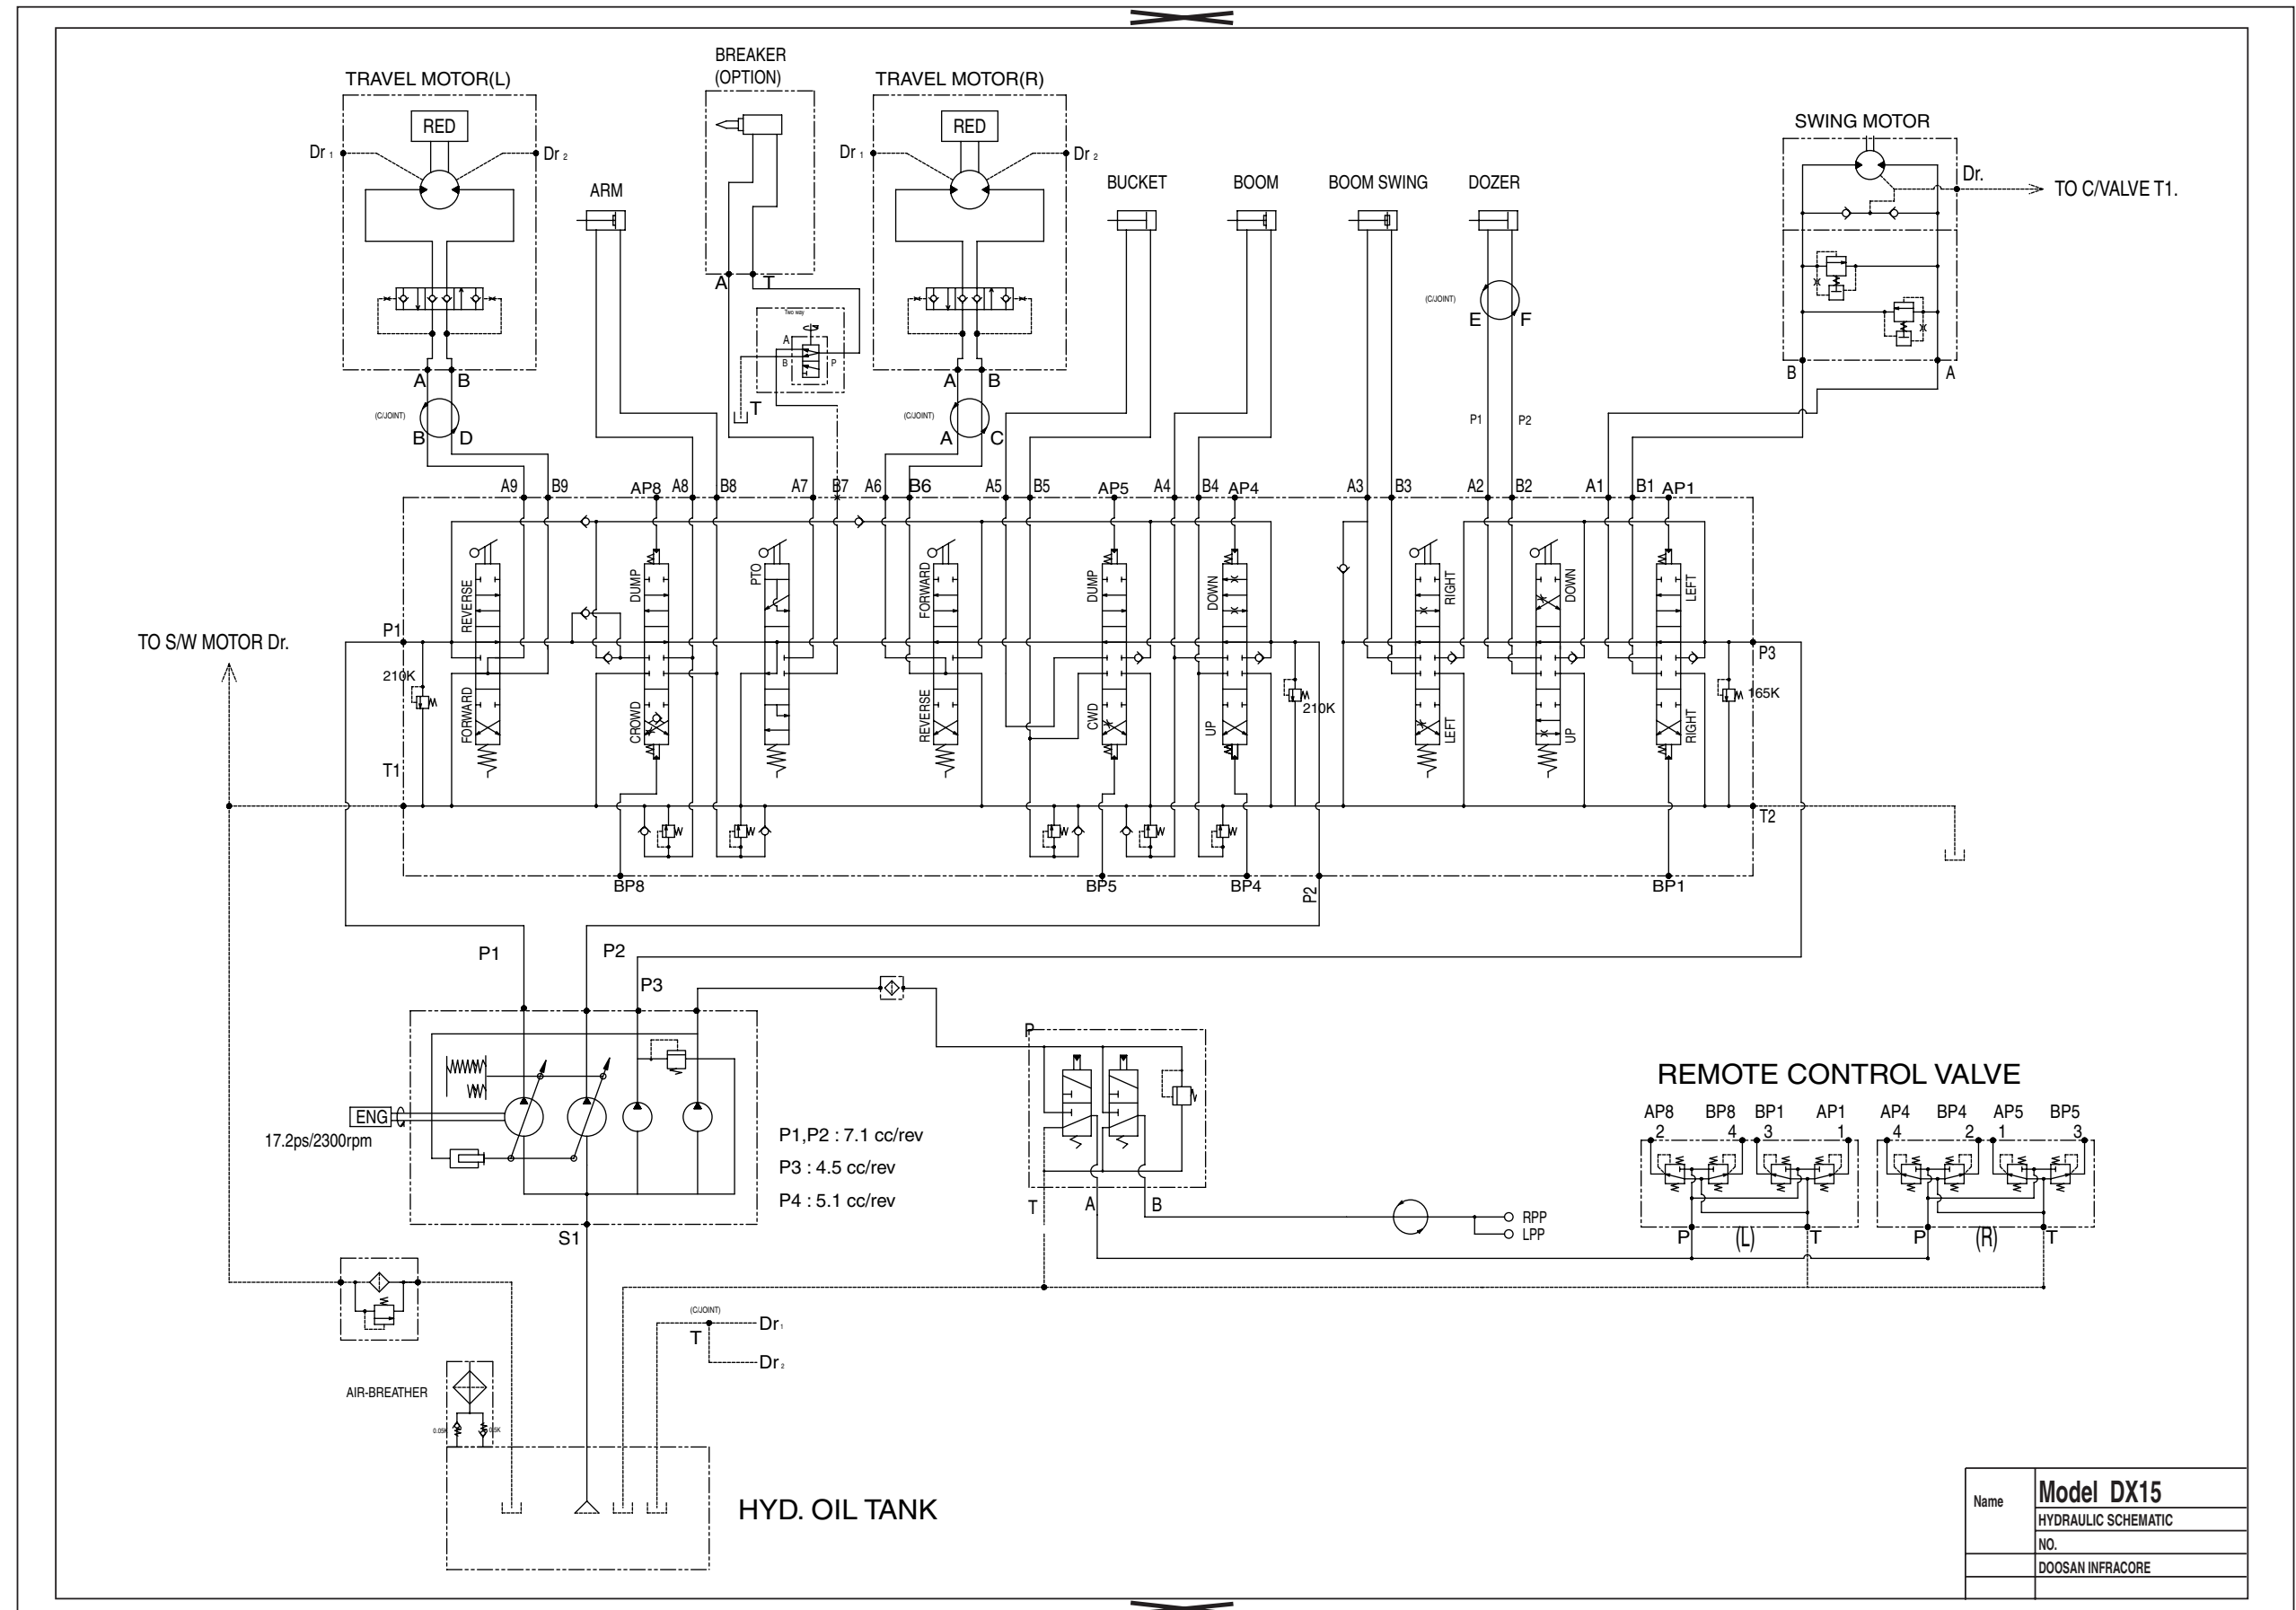


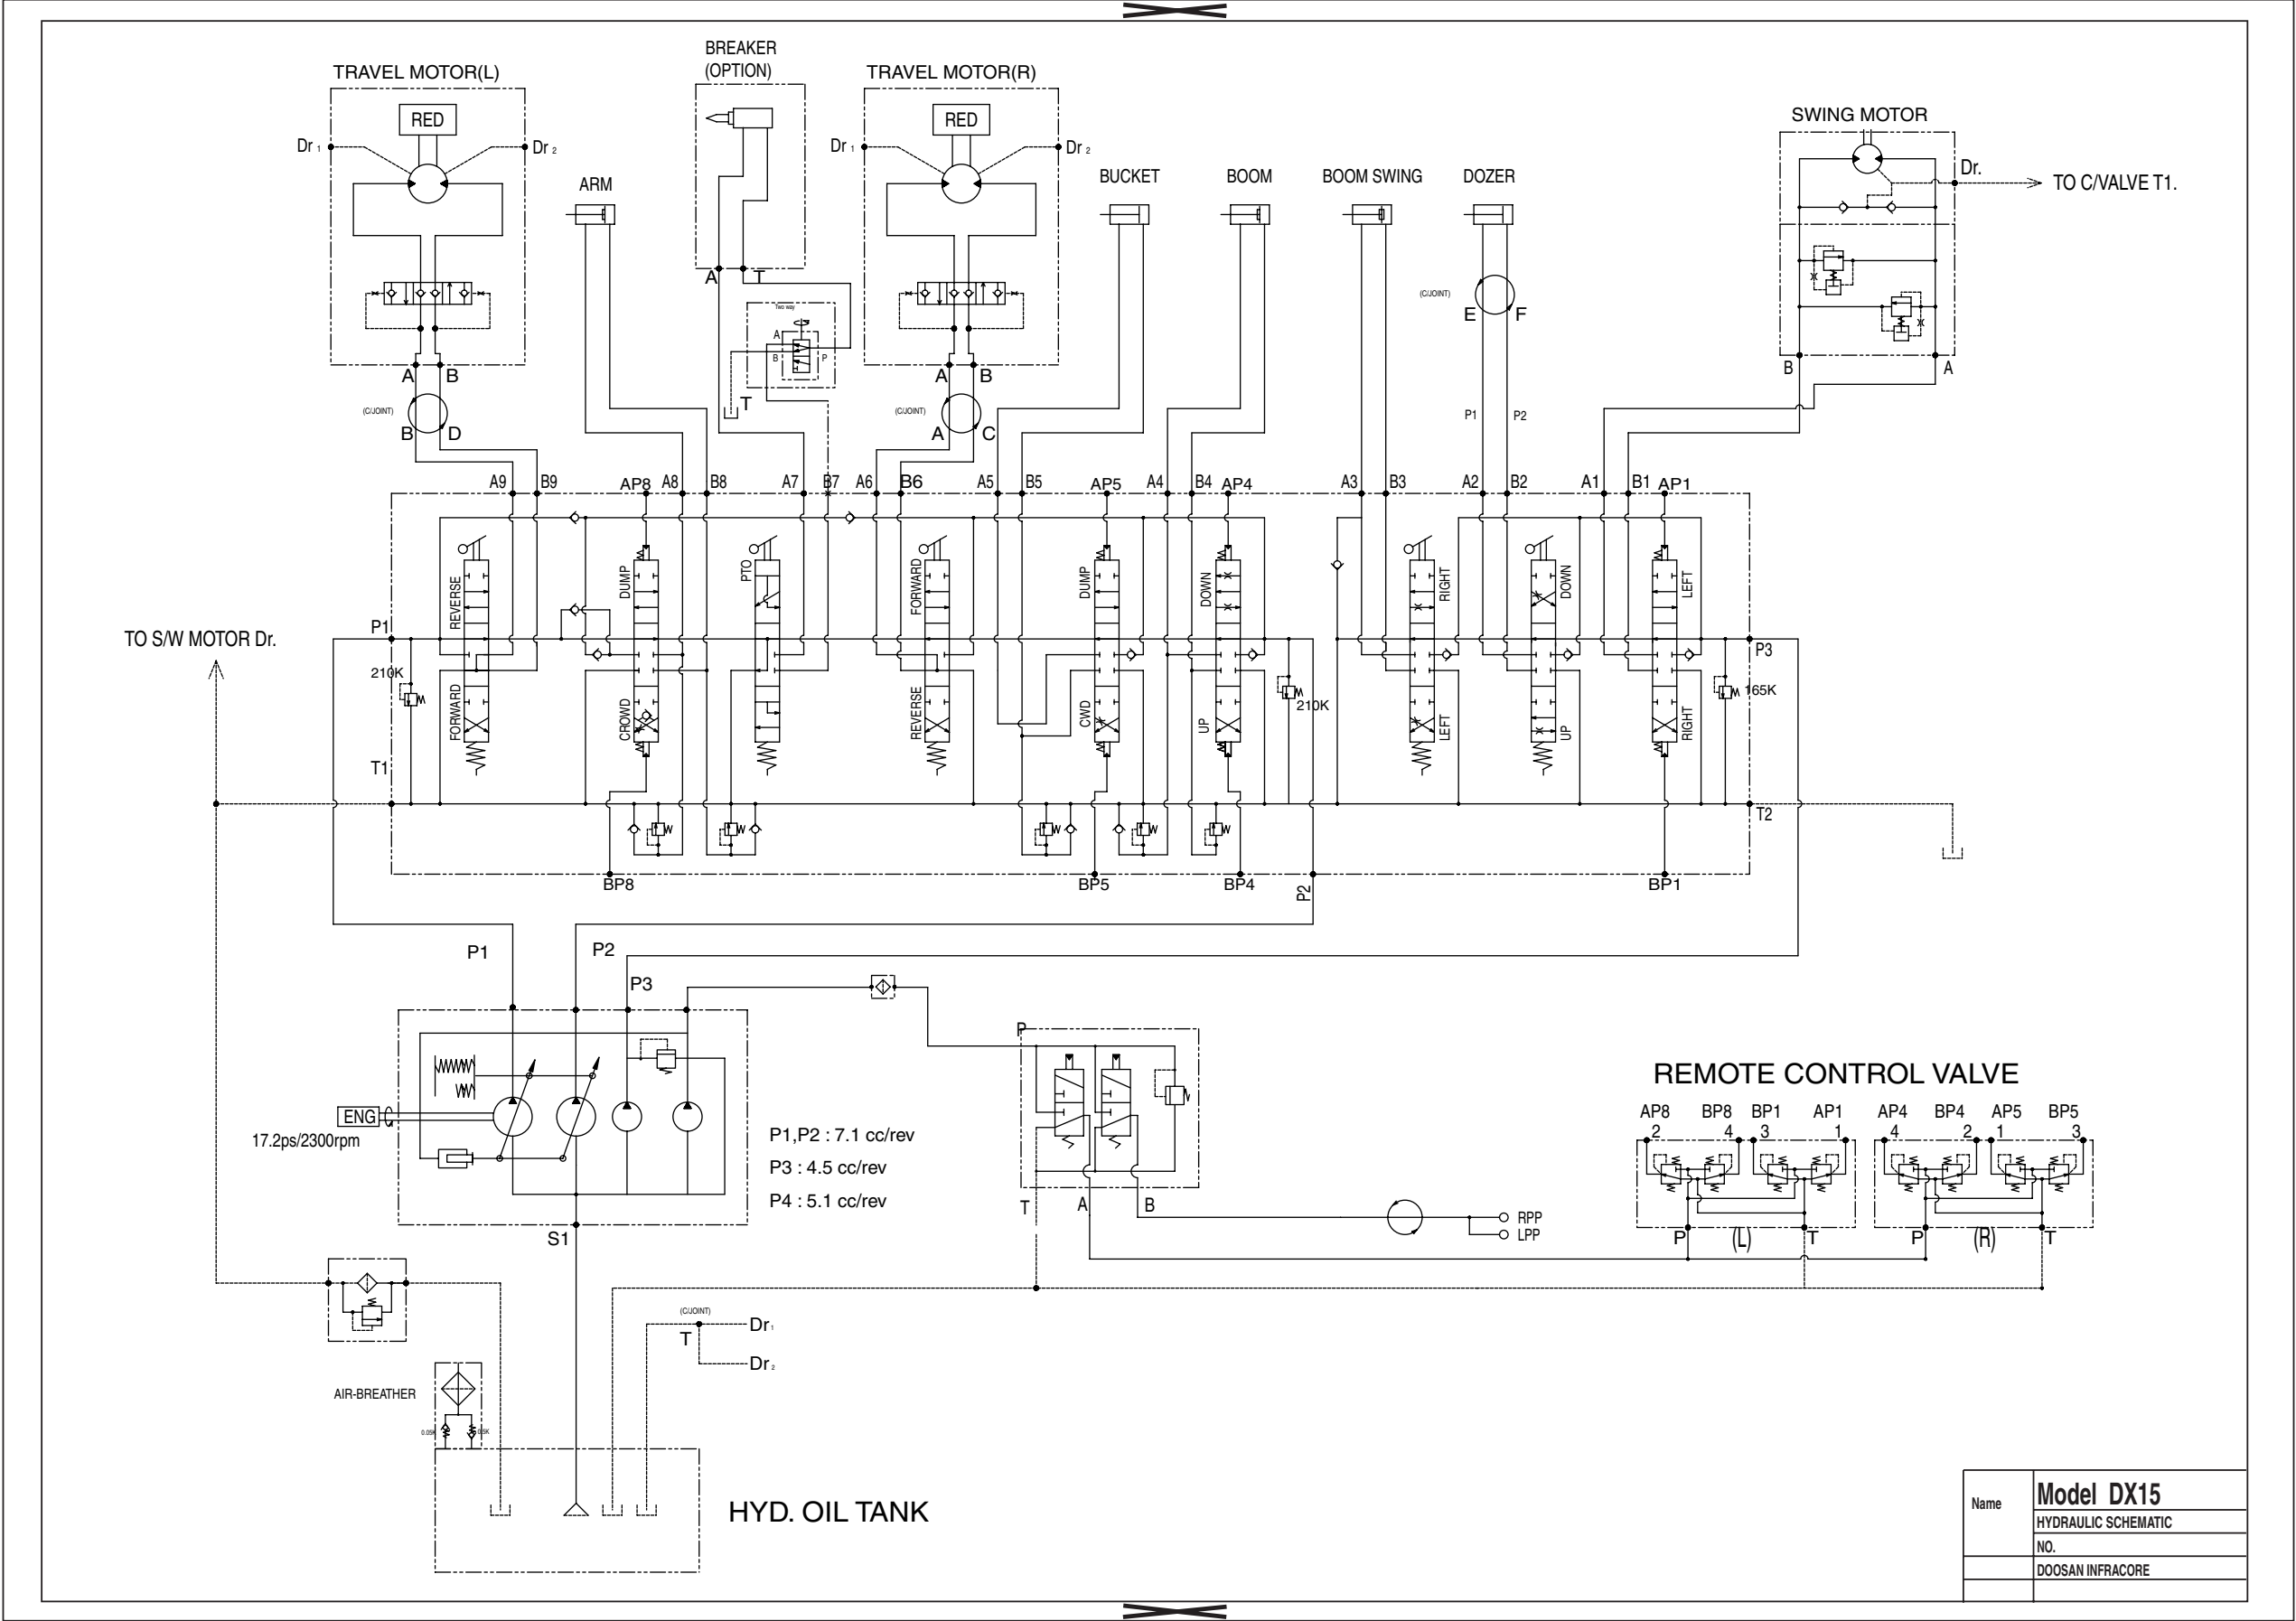



Name	Model DX15
	HYDRAULIC SCHEMATIC
	NO.
	DOOSAN INFRACORE

 


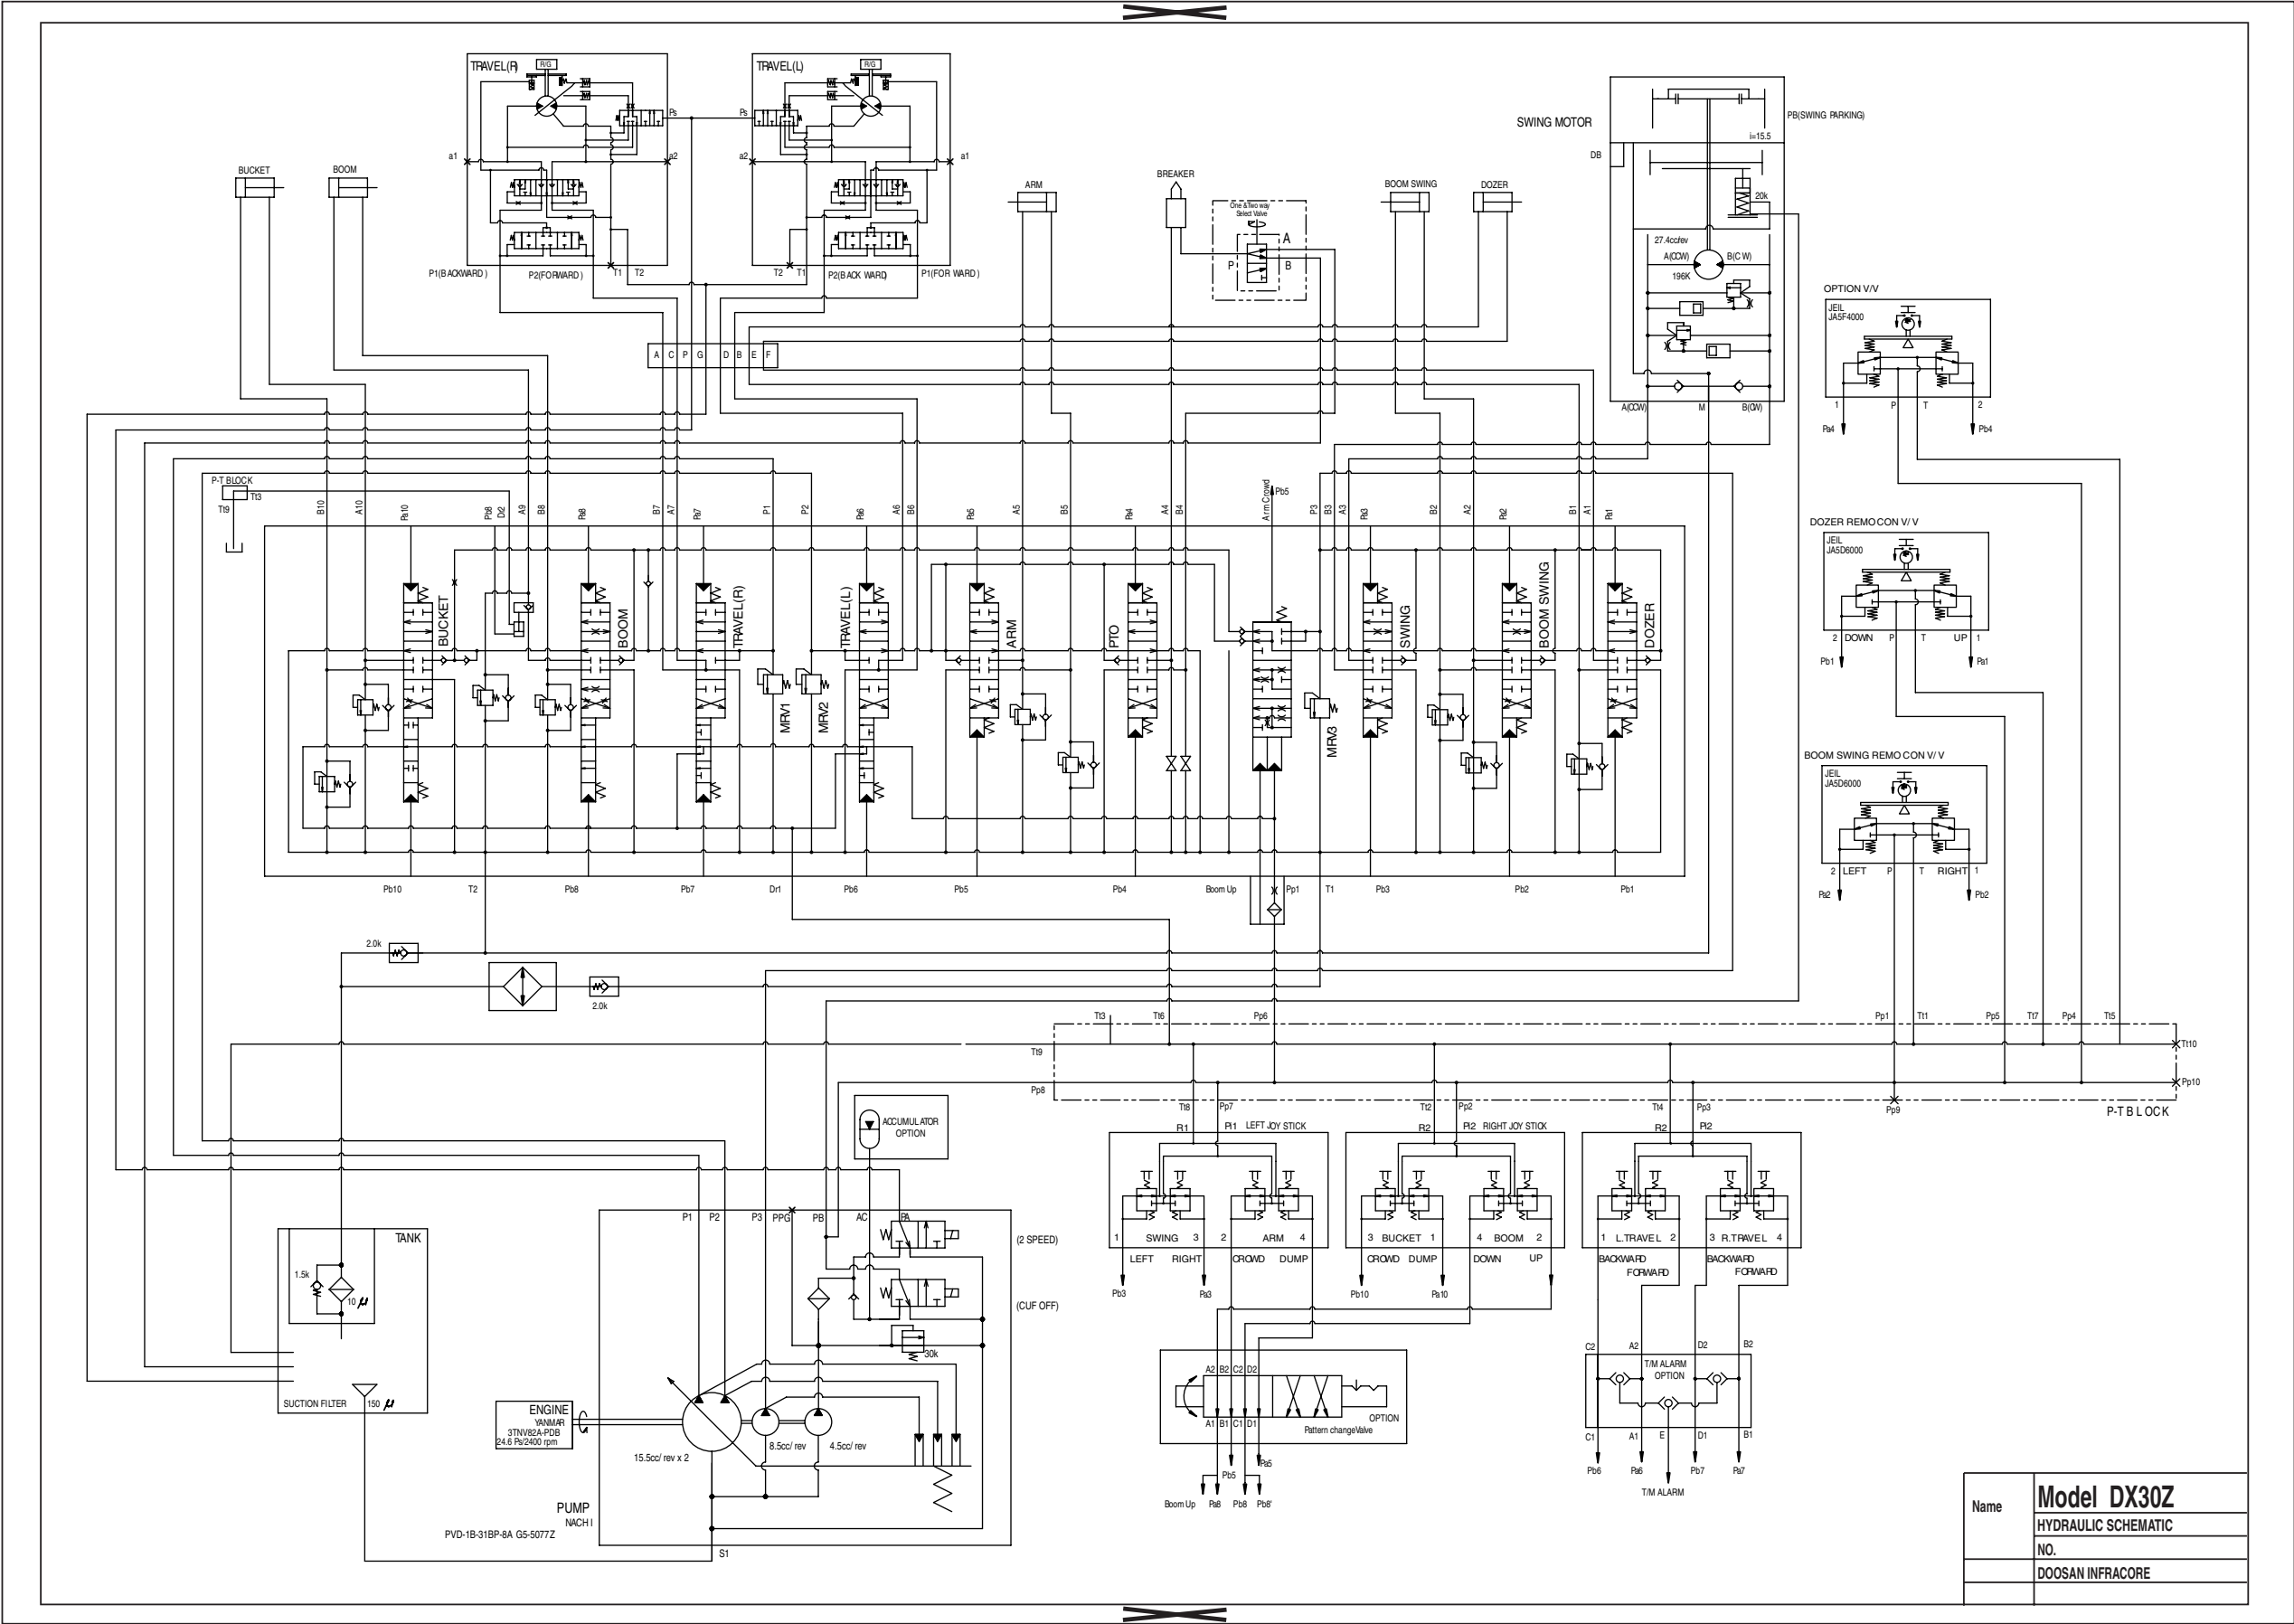


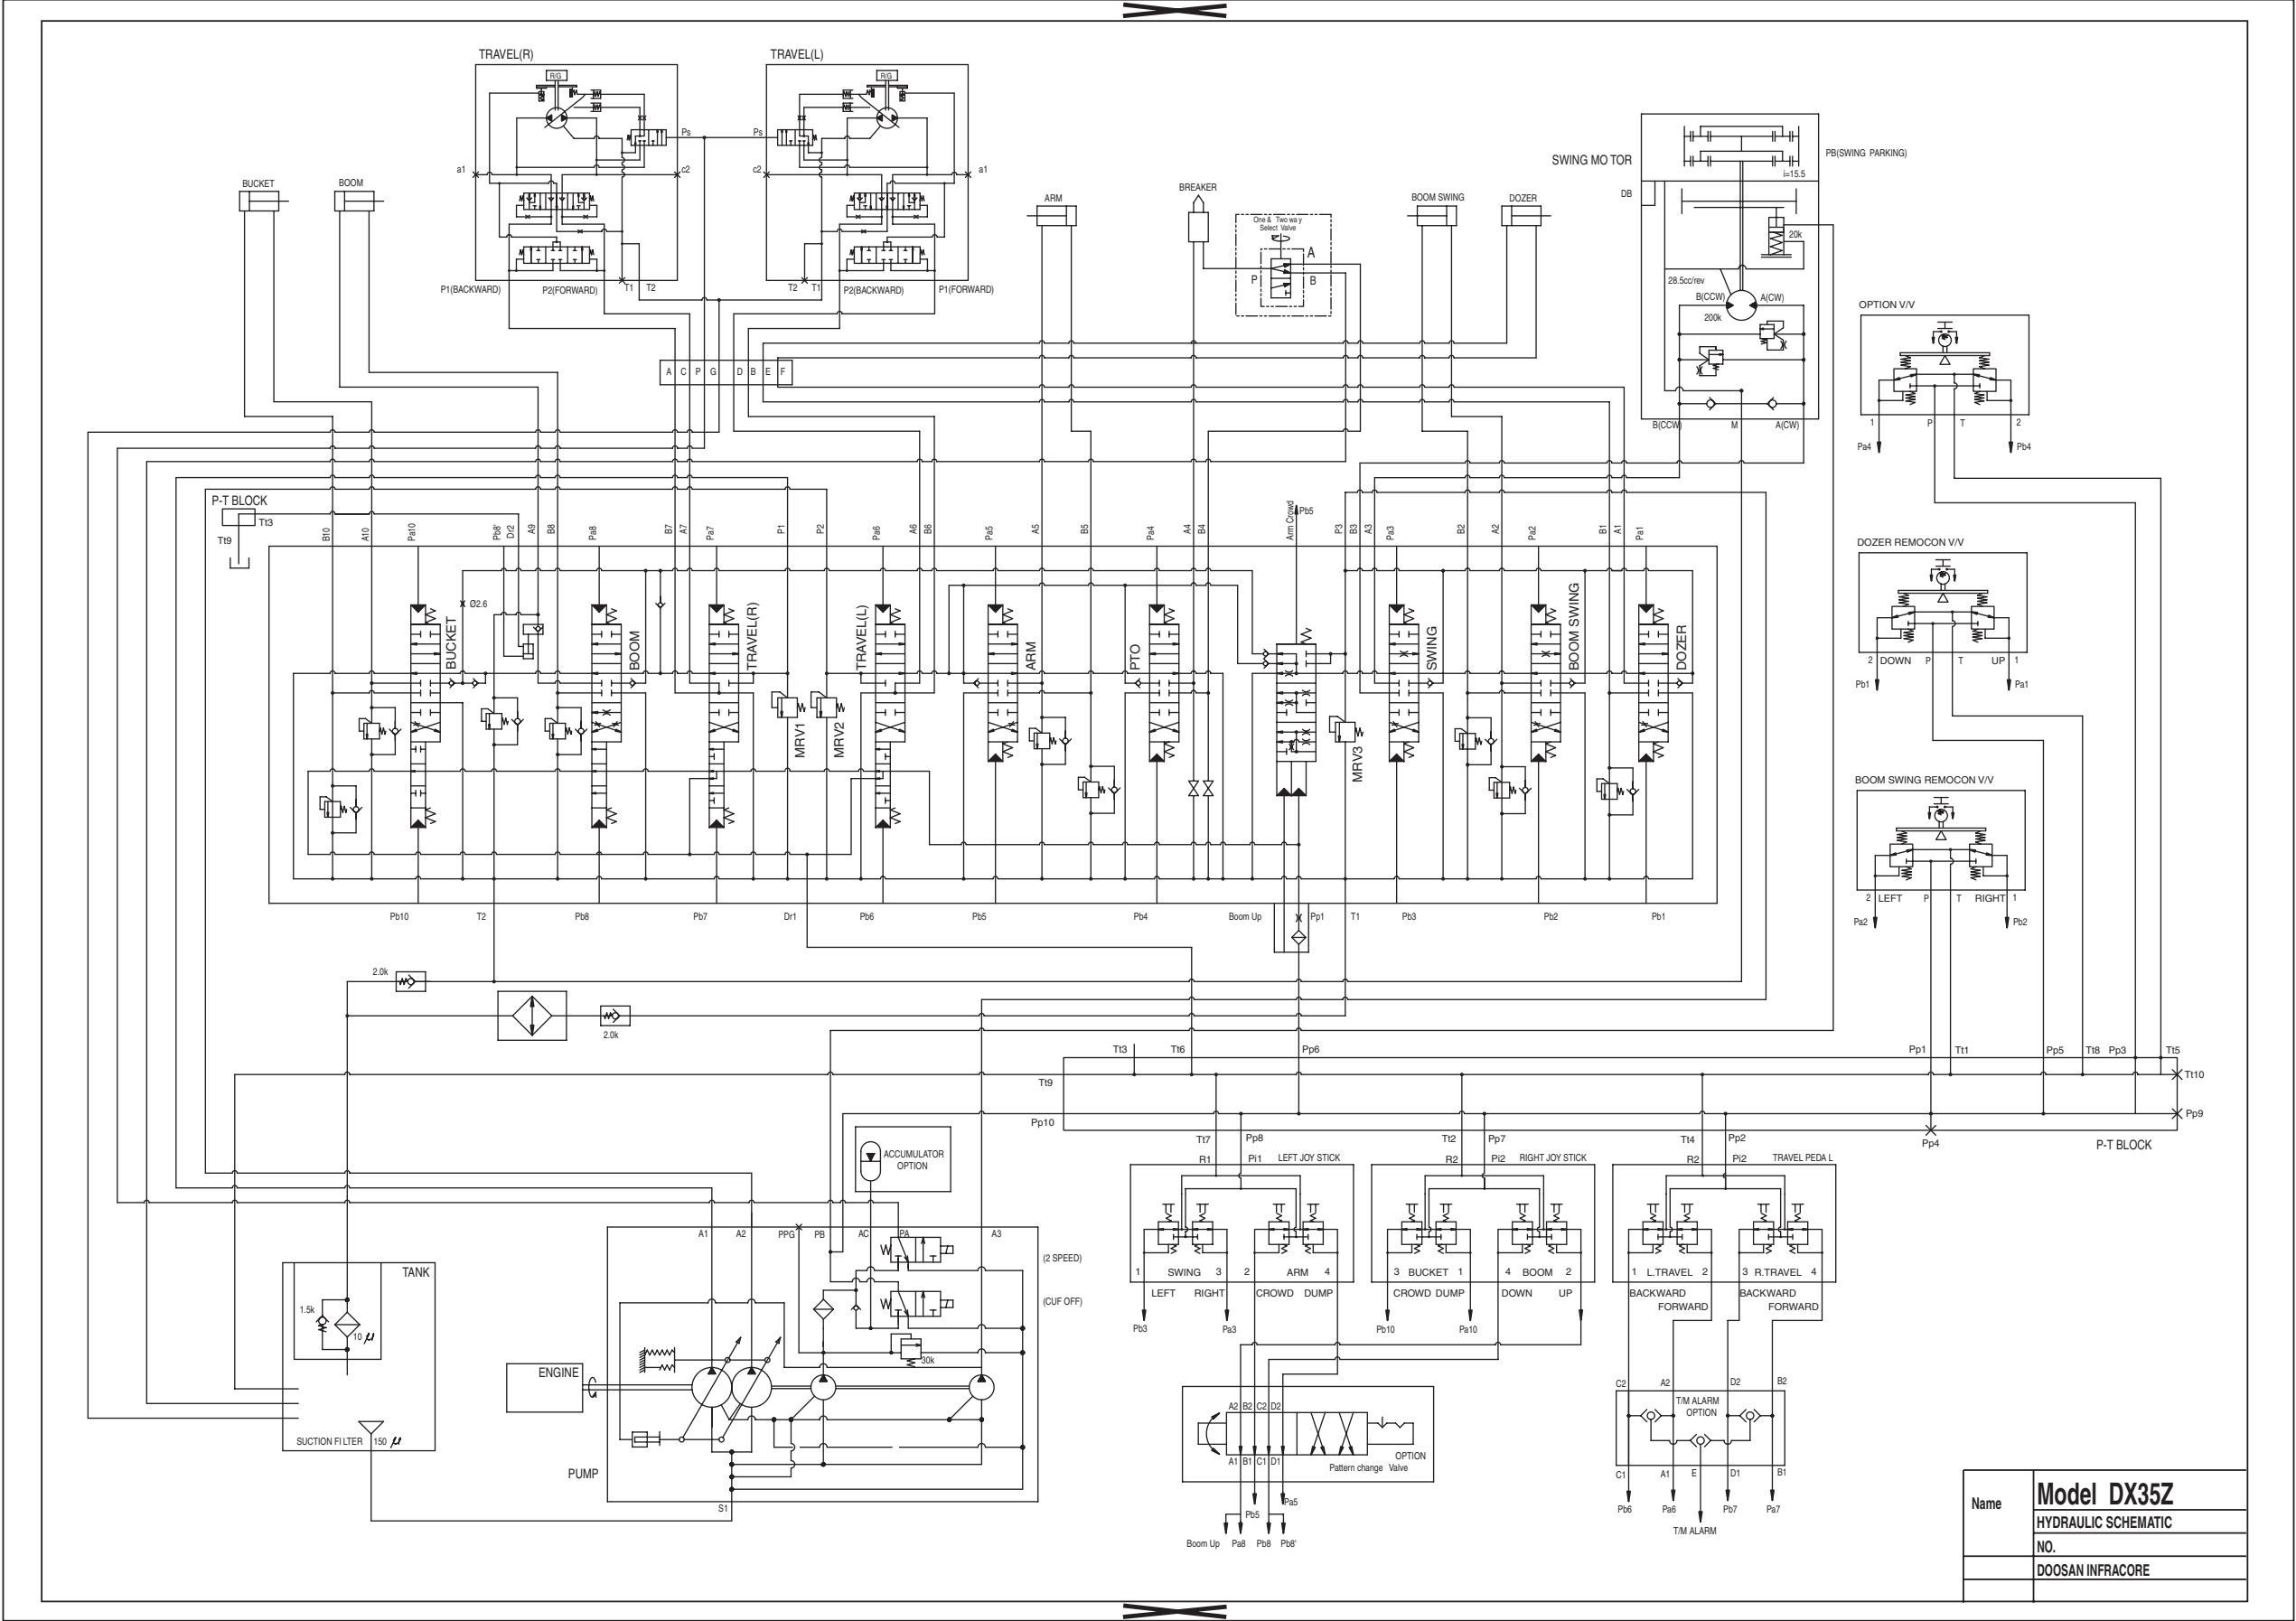


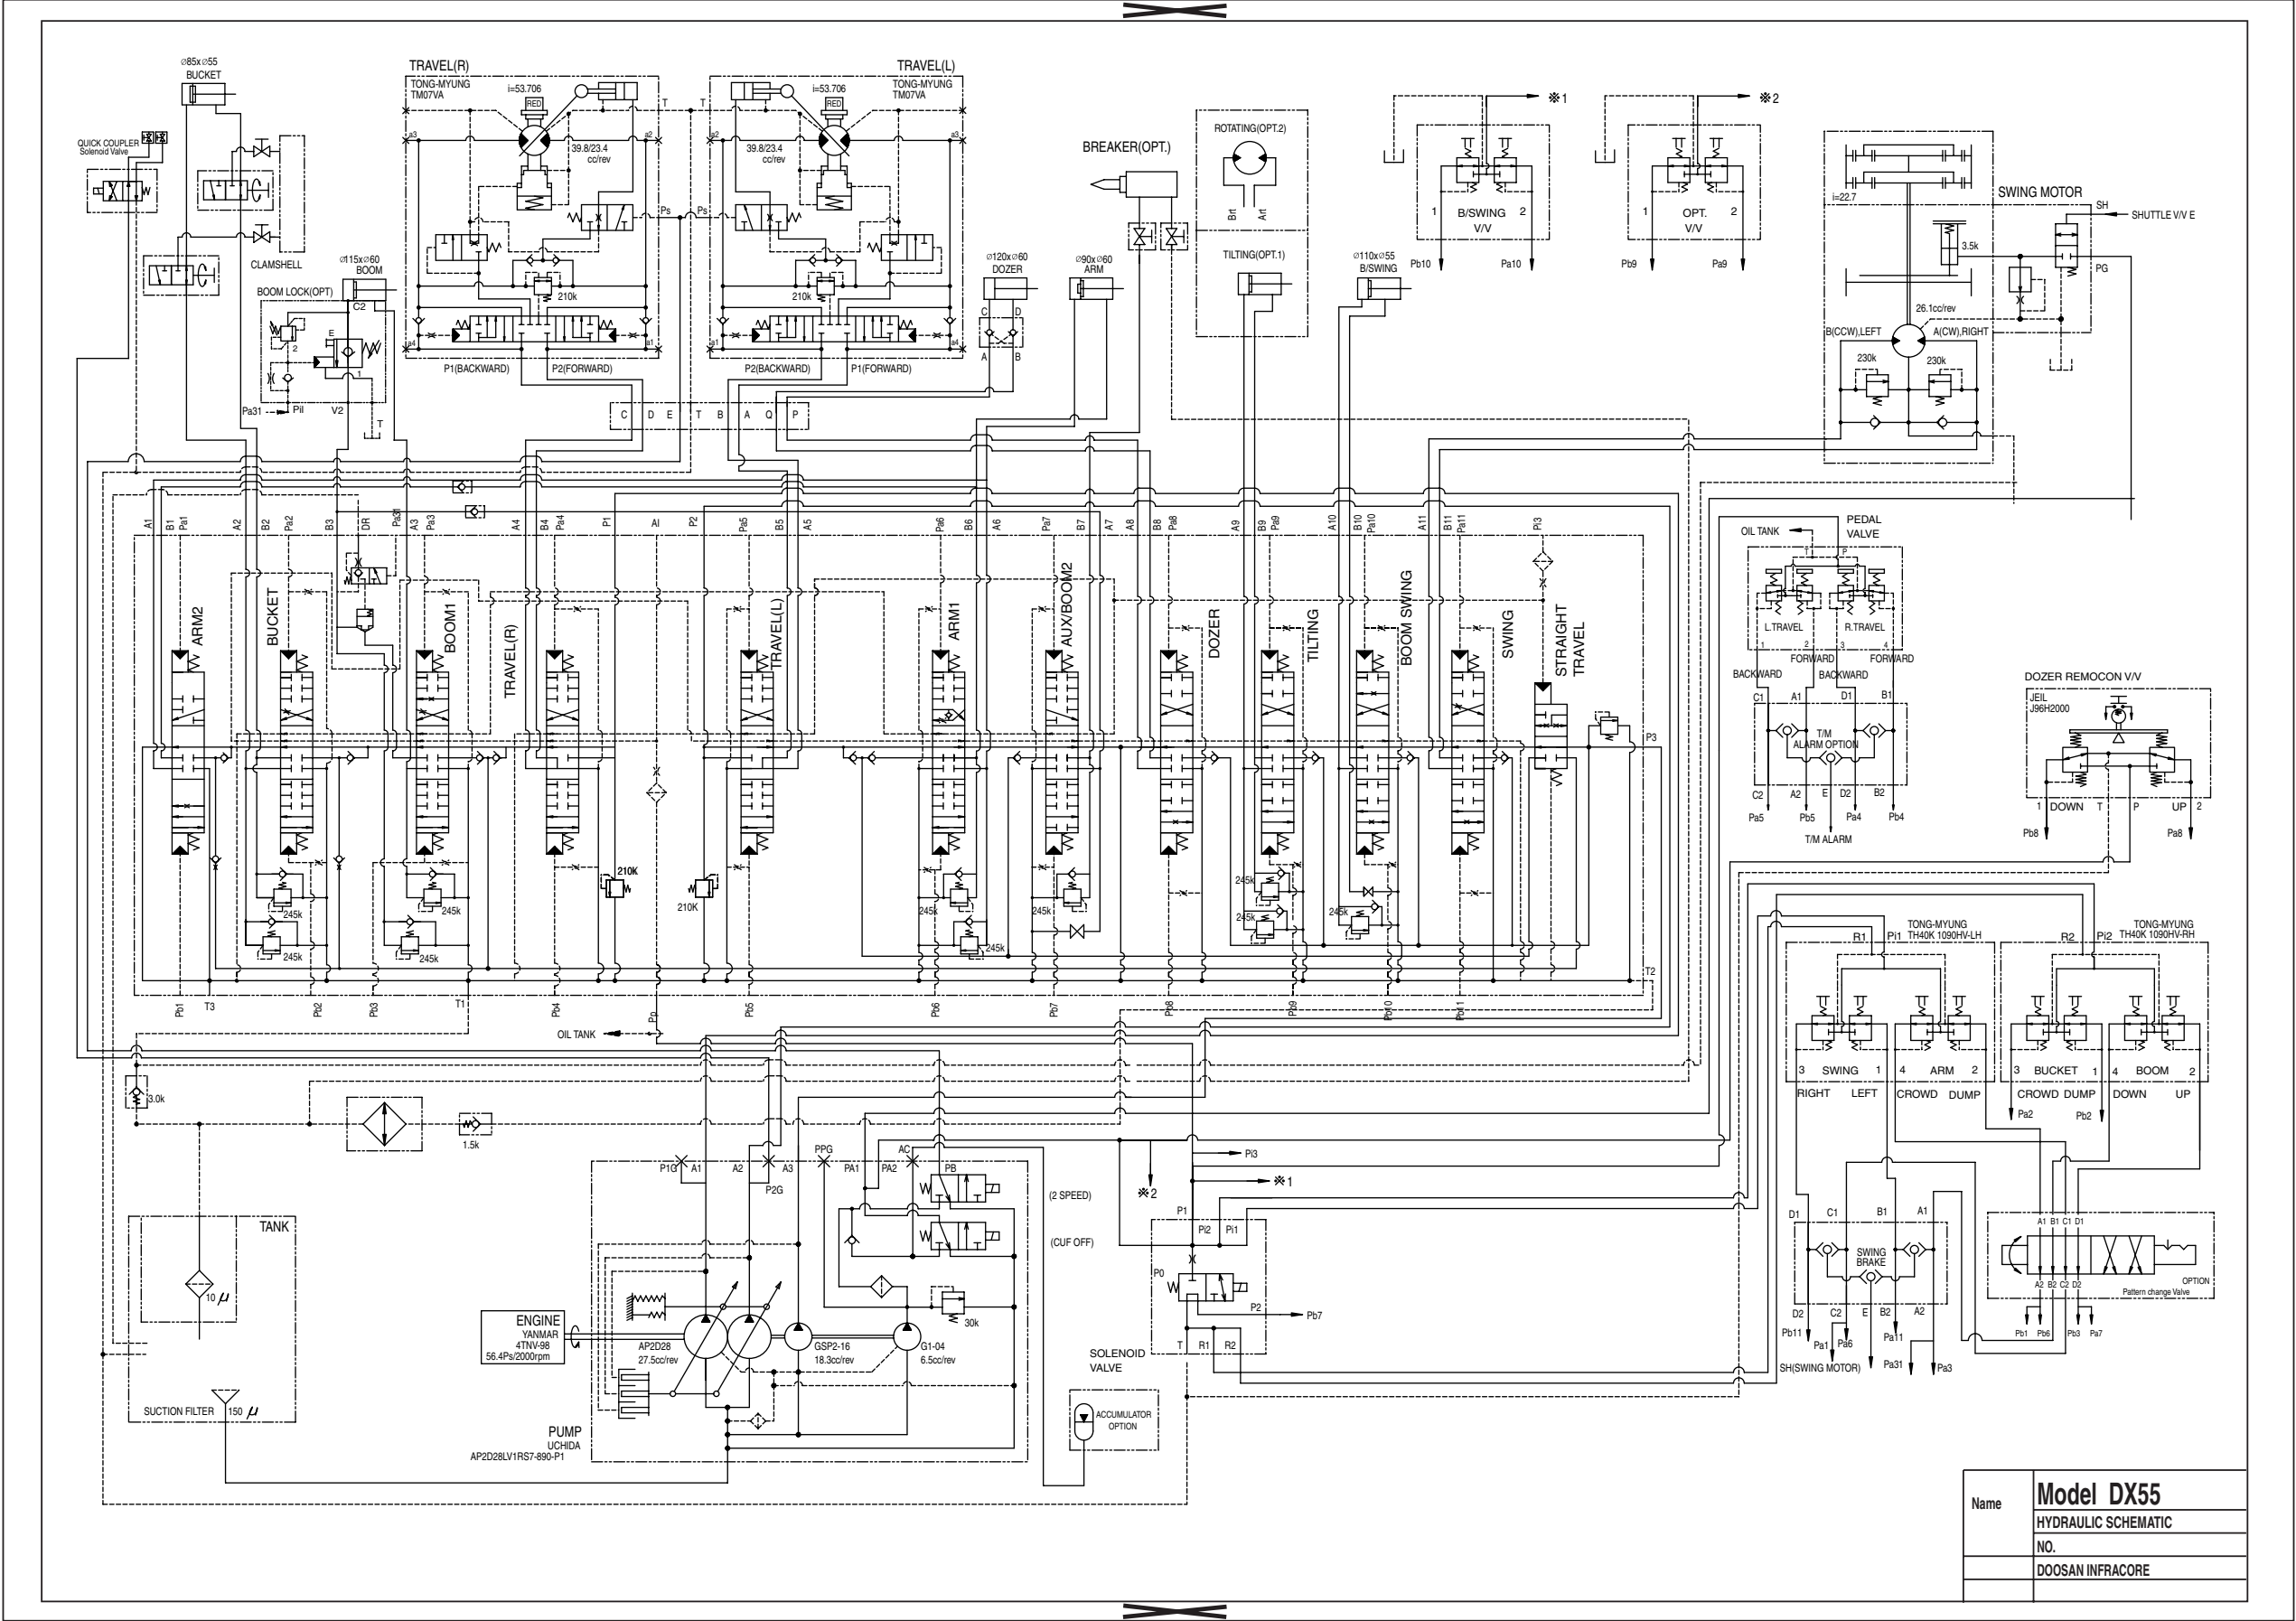

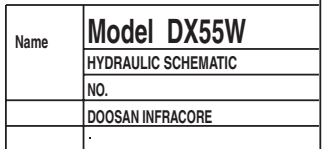


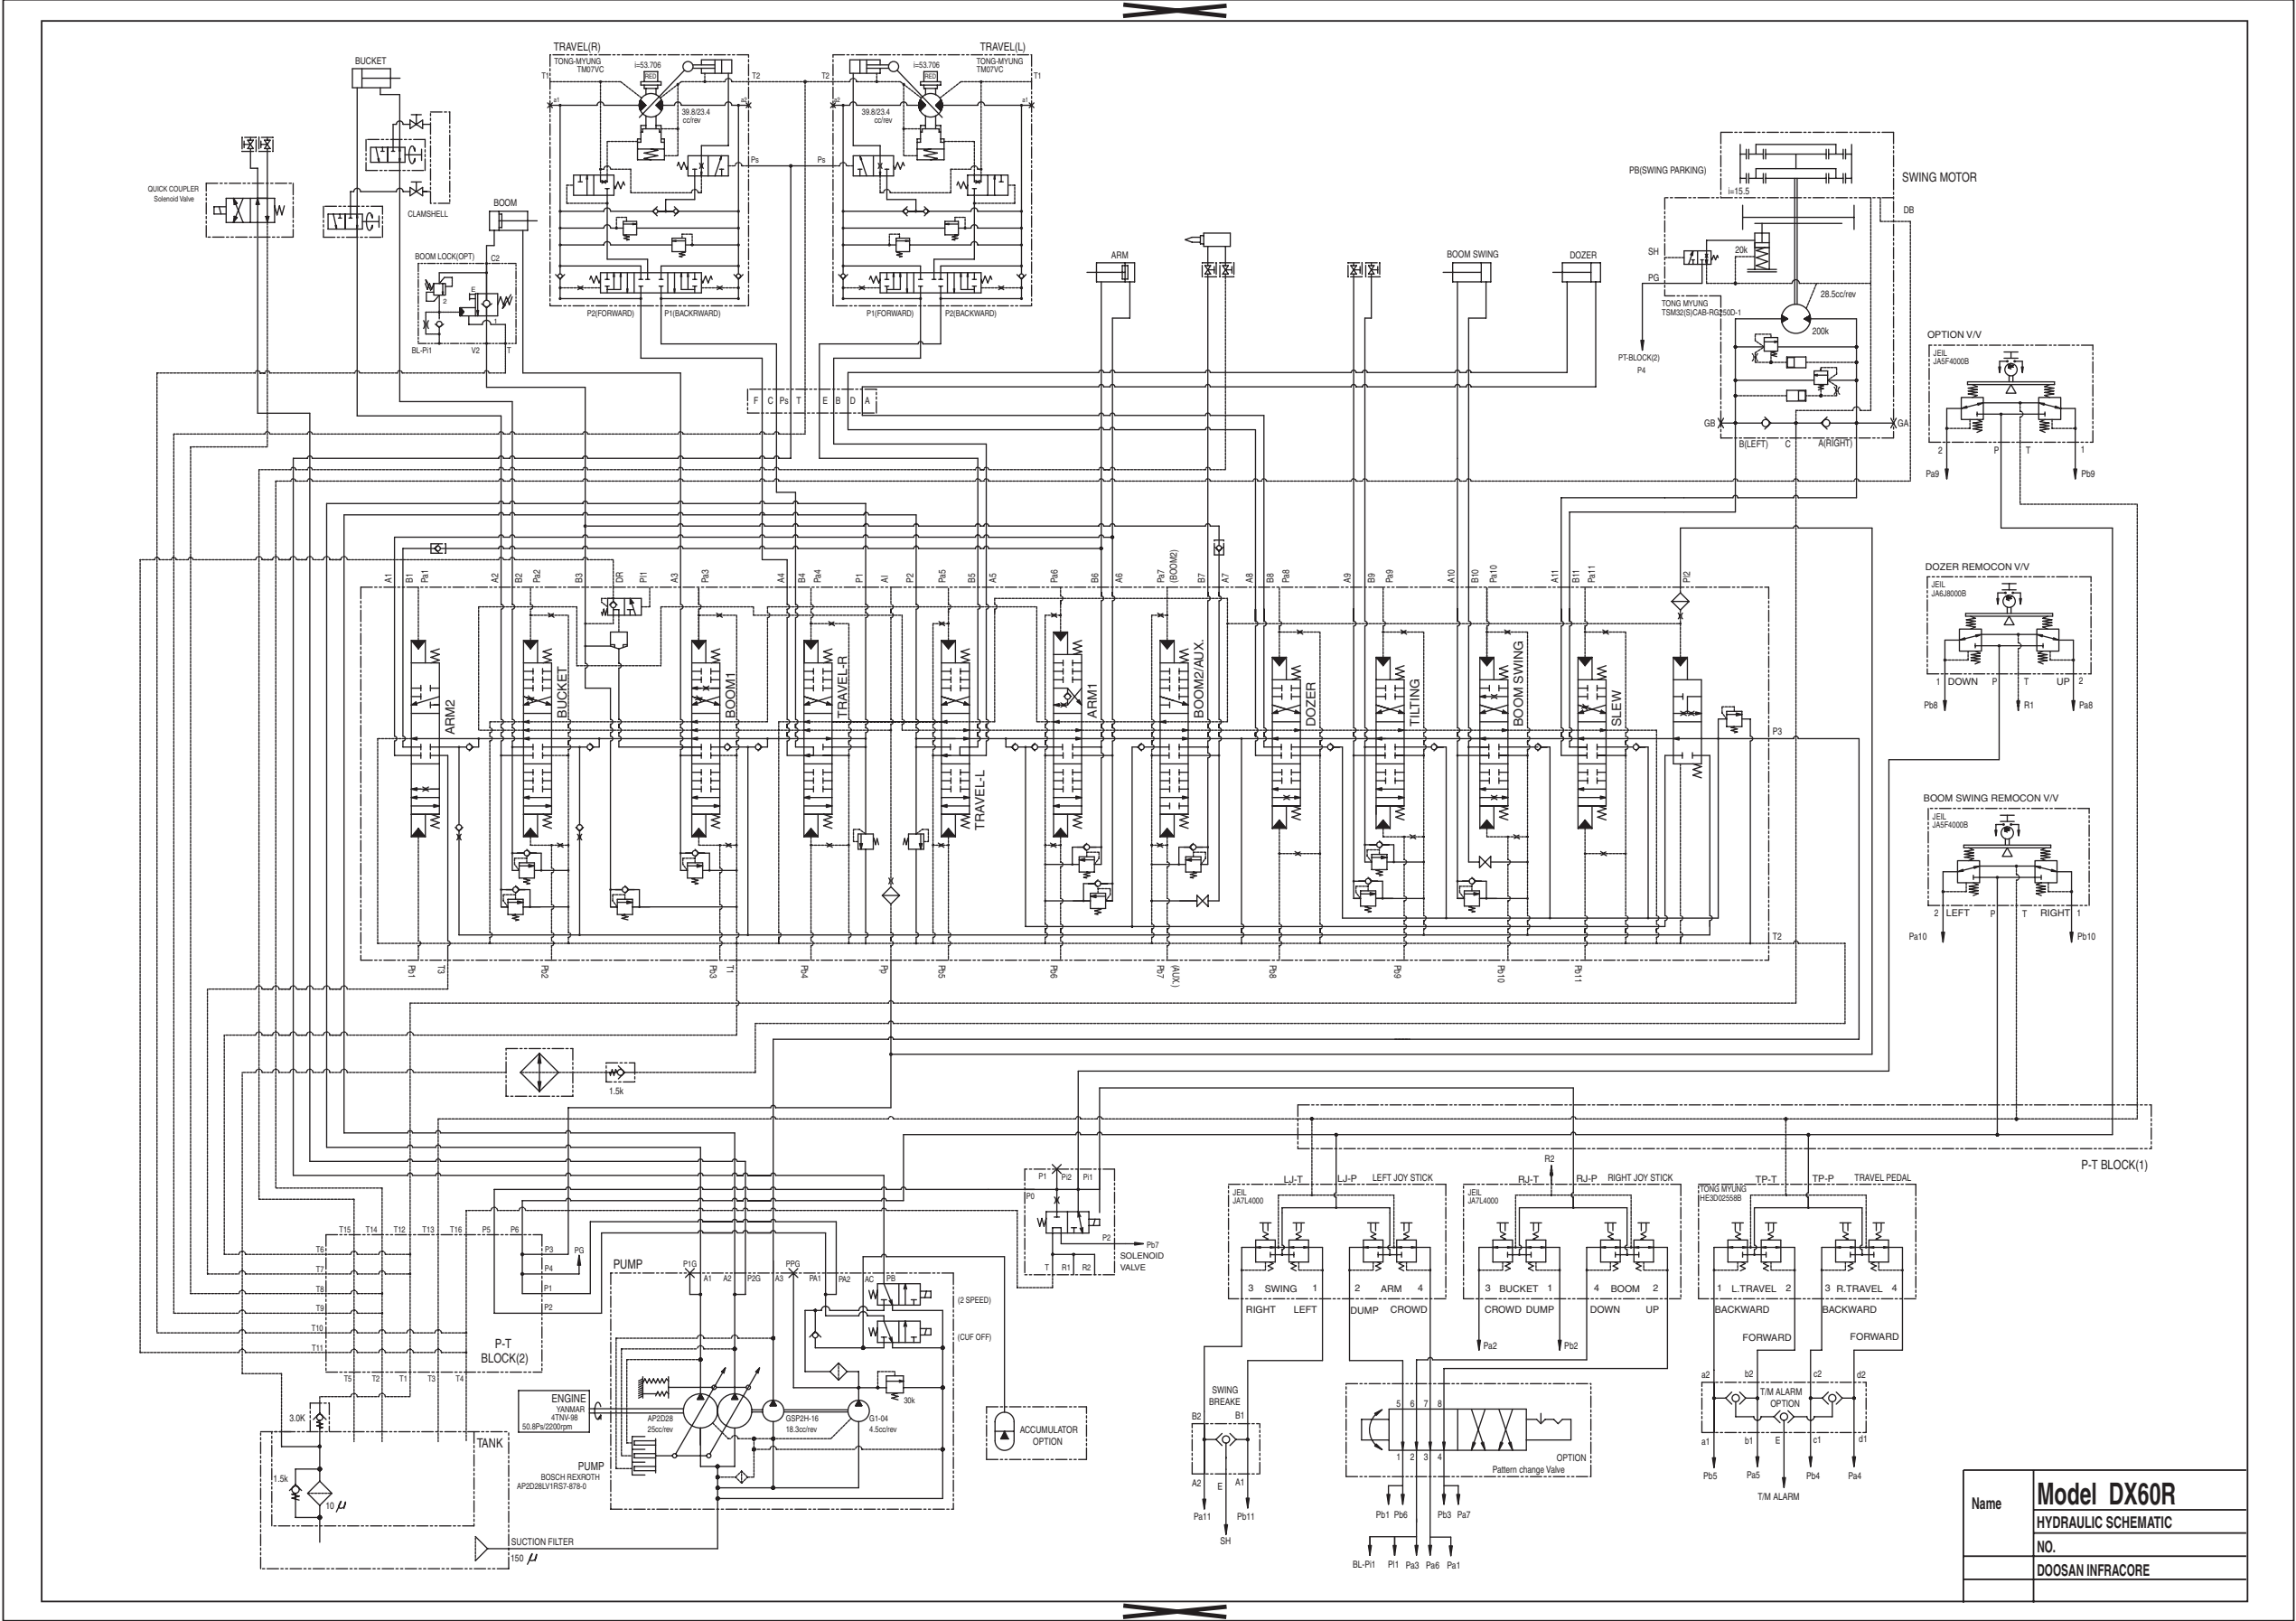

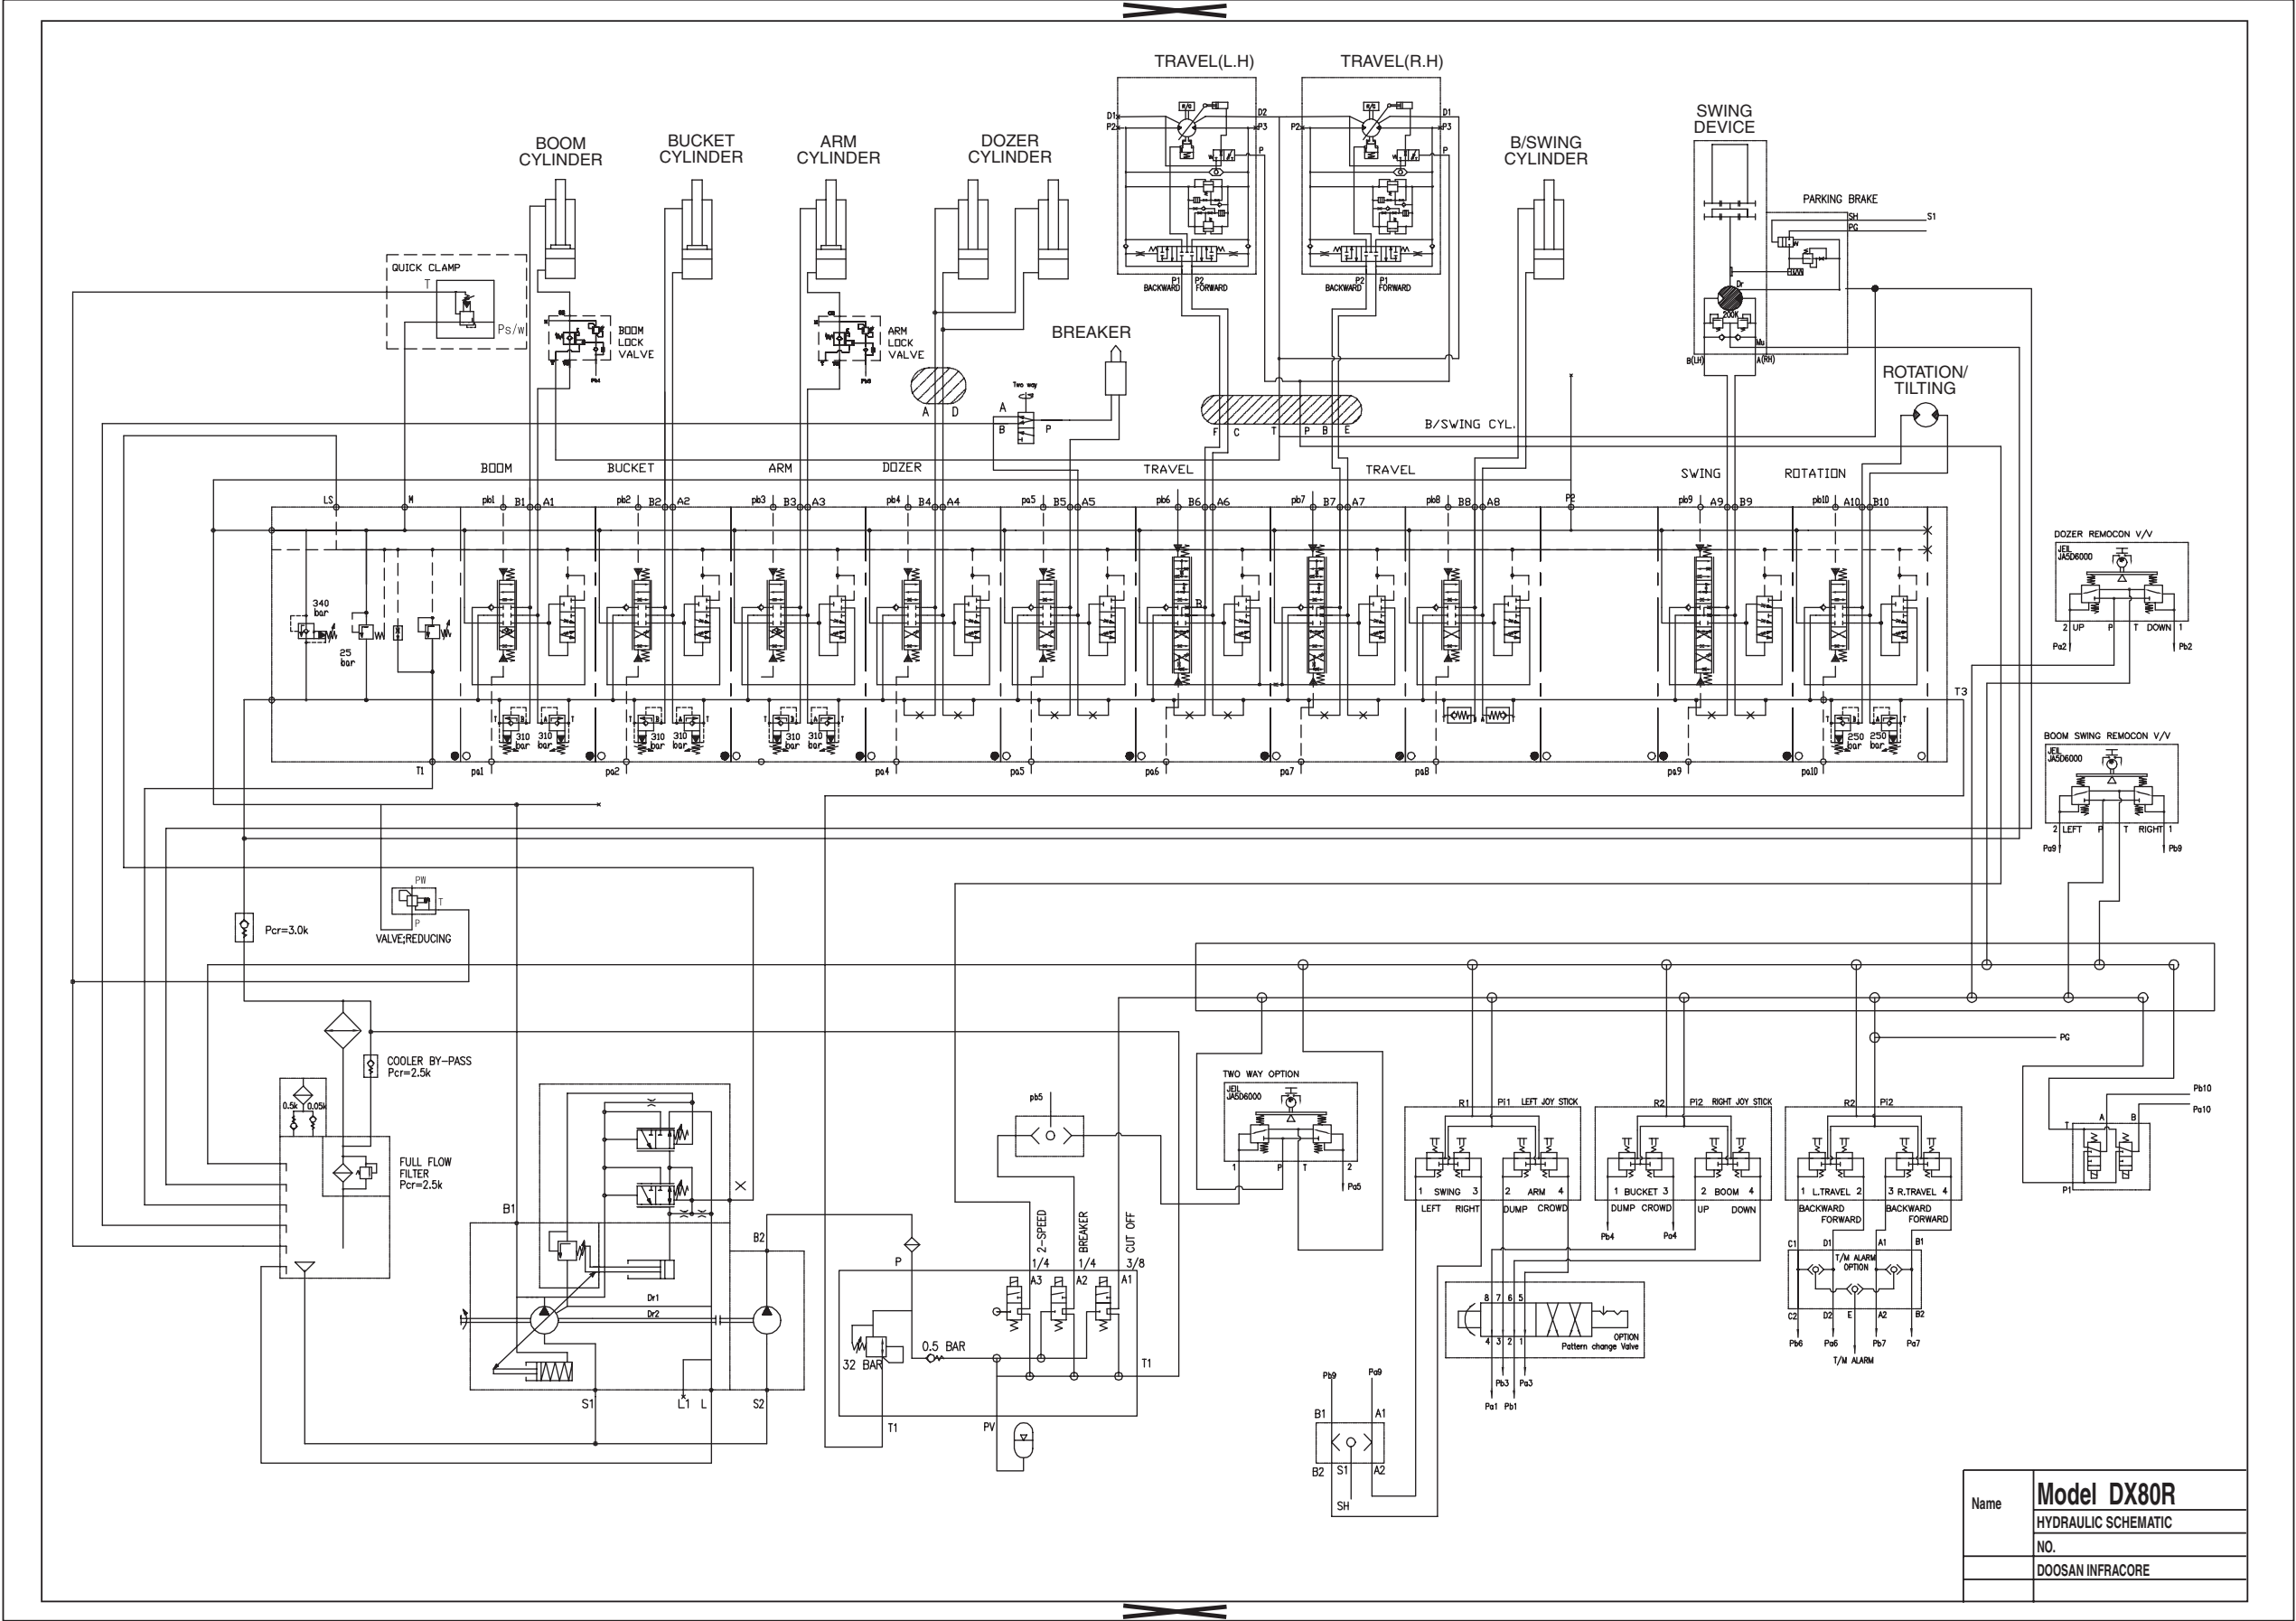


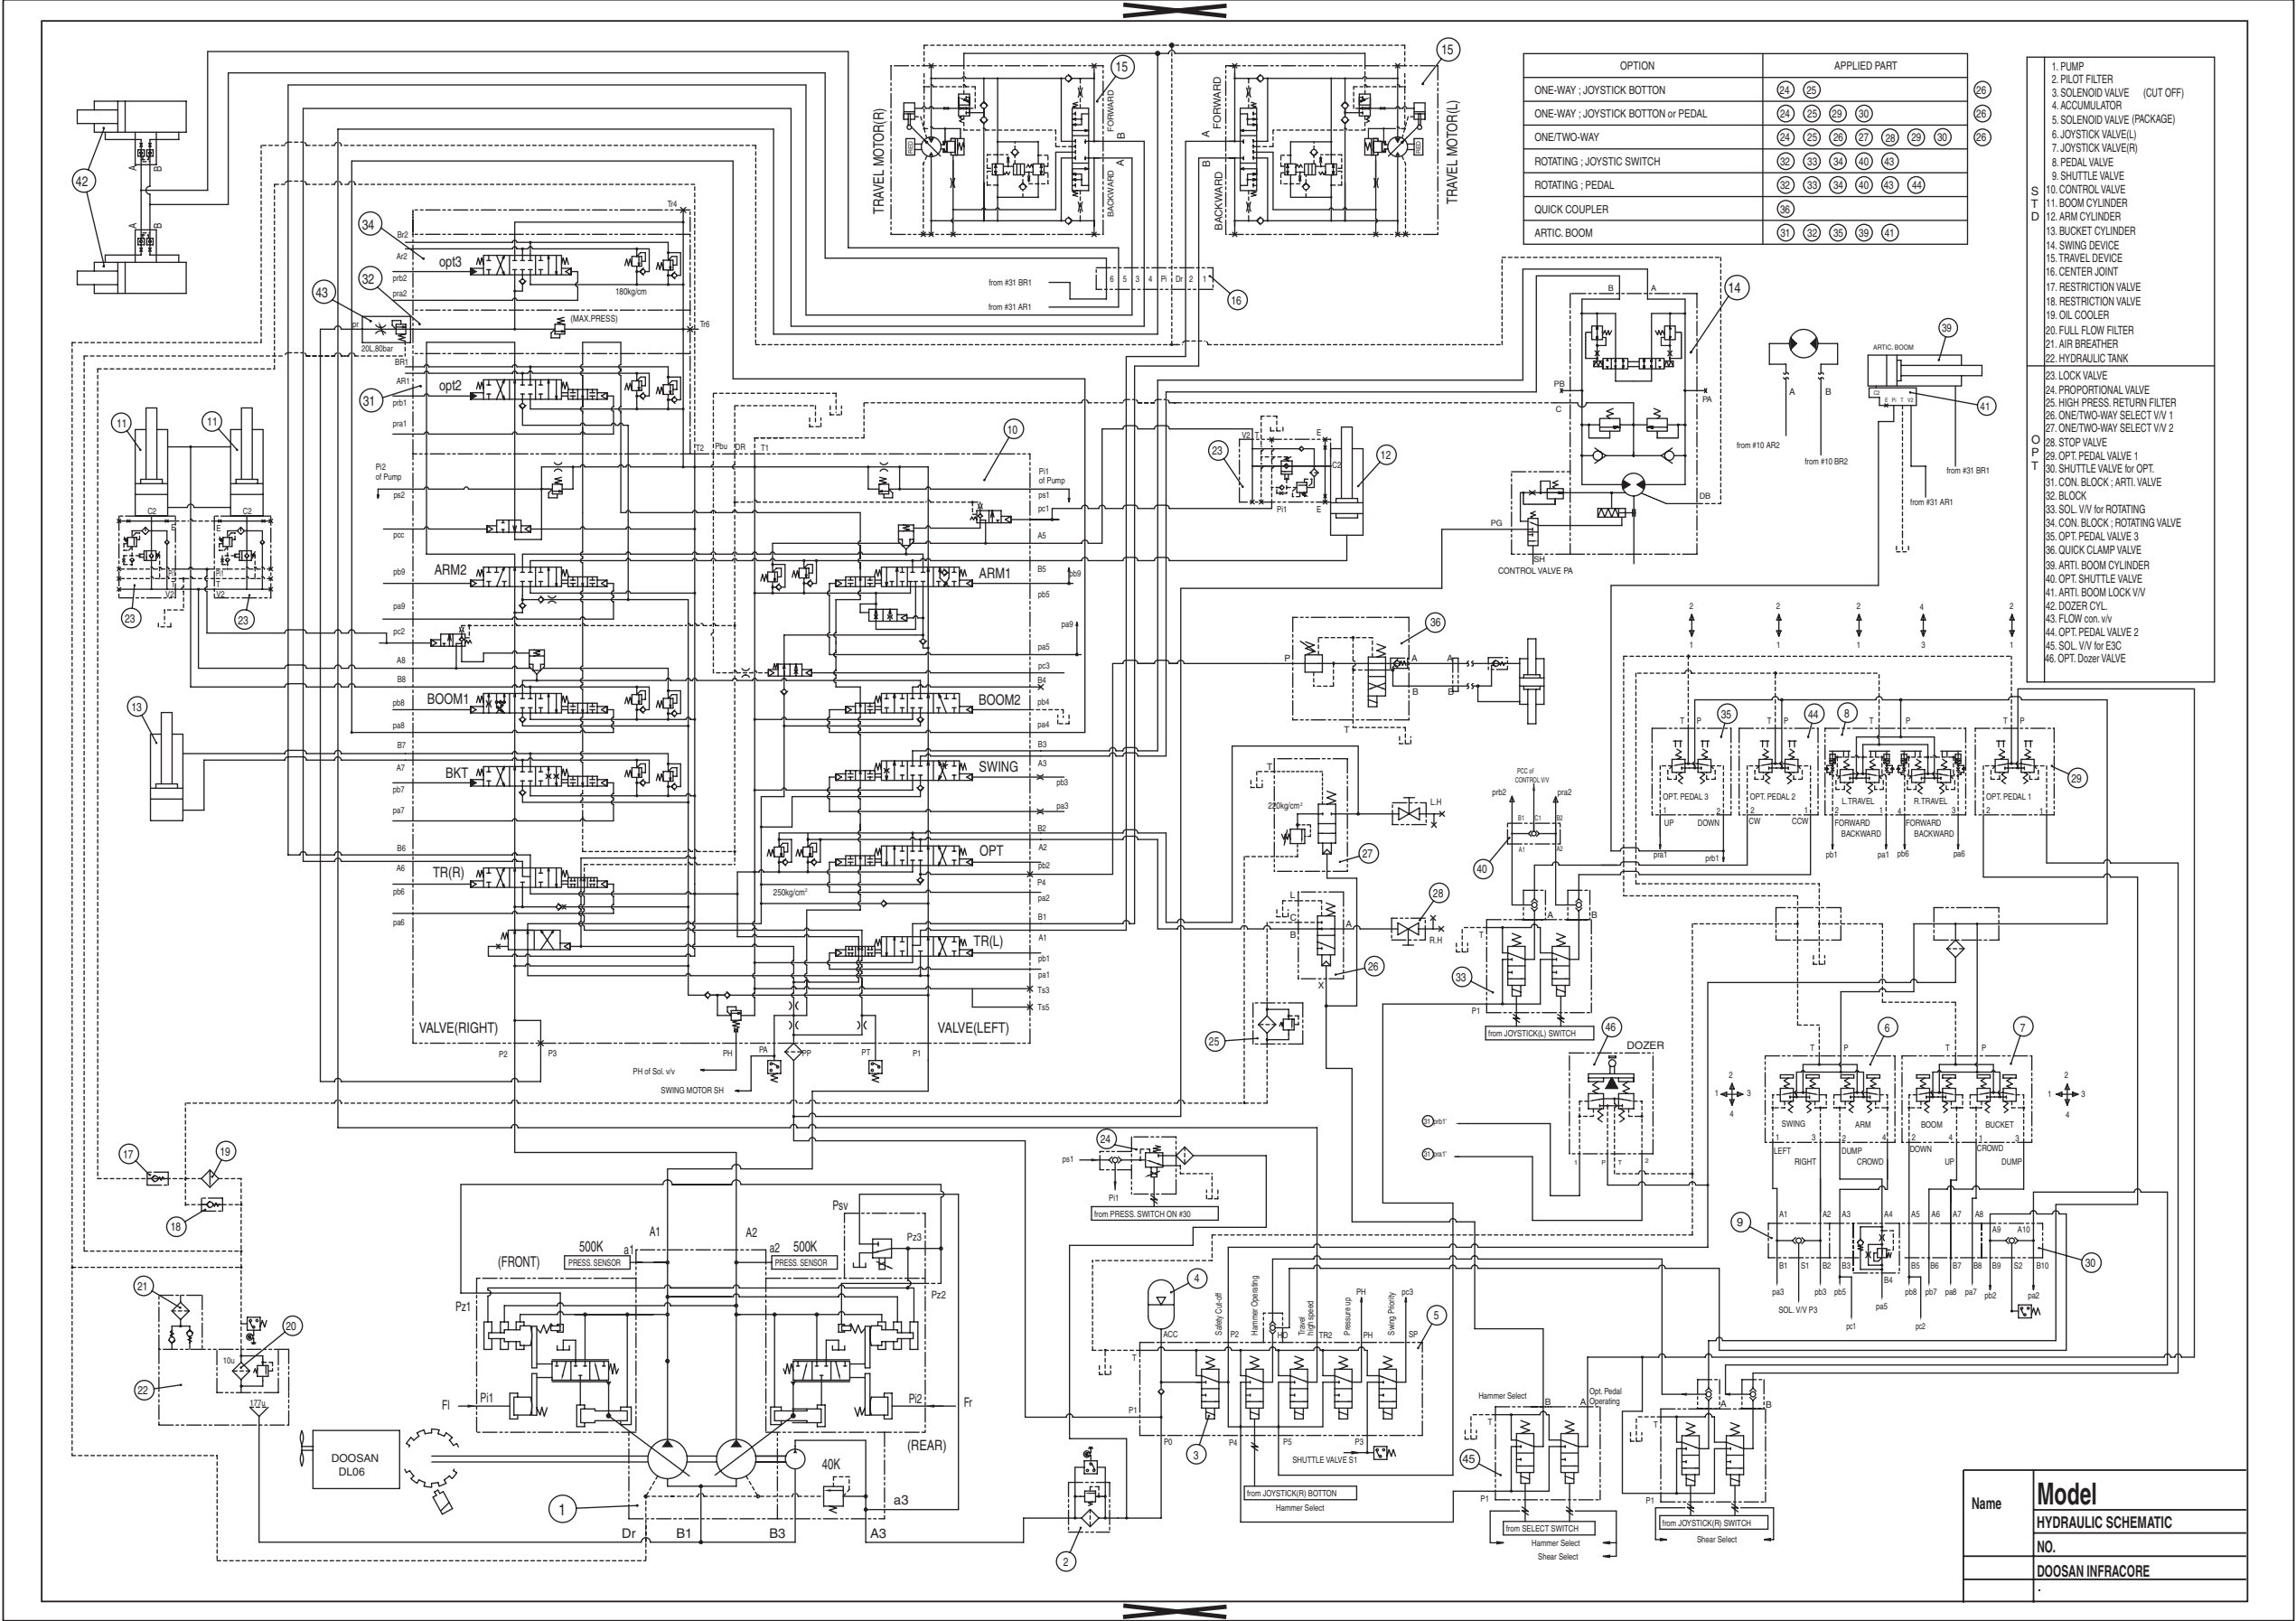


#####

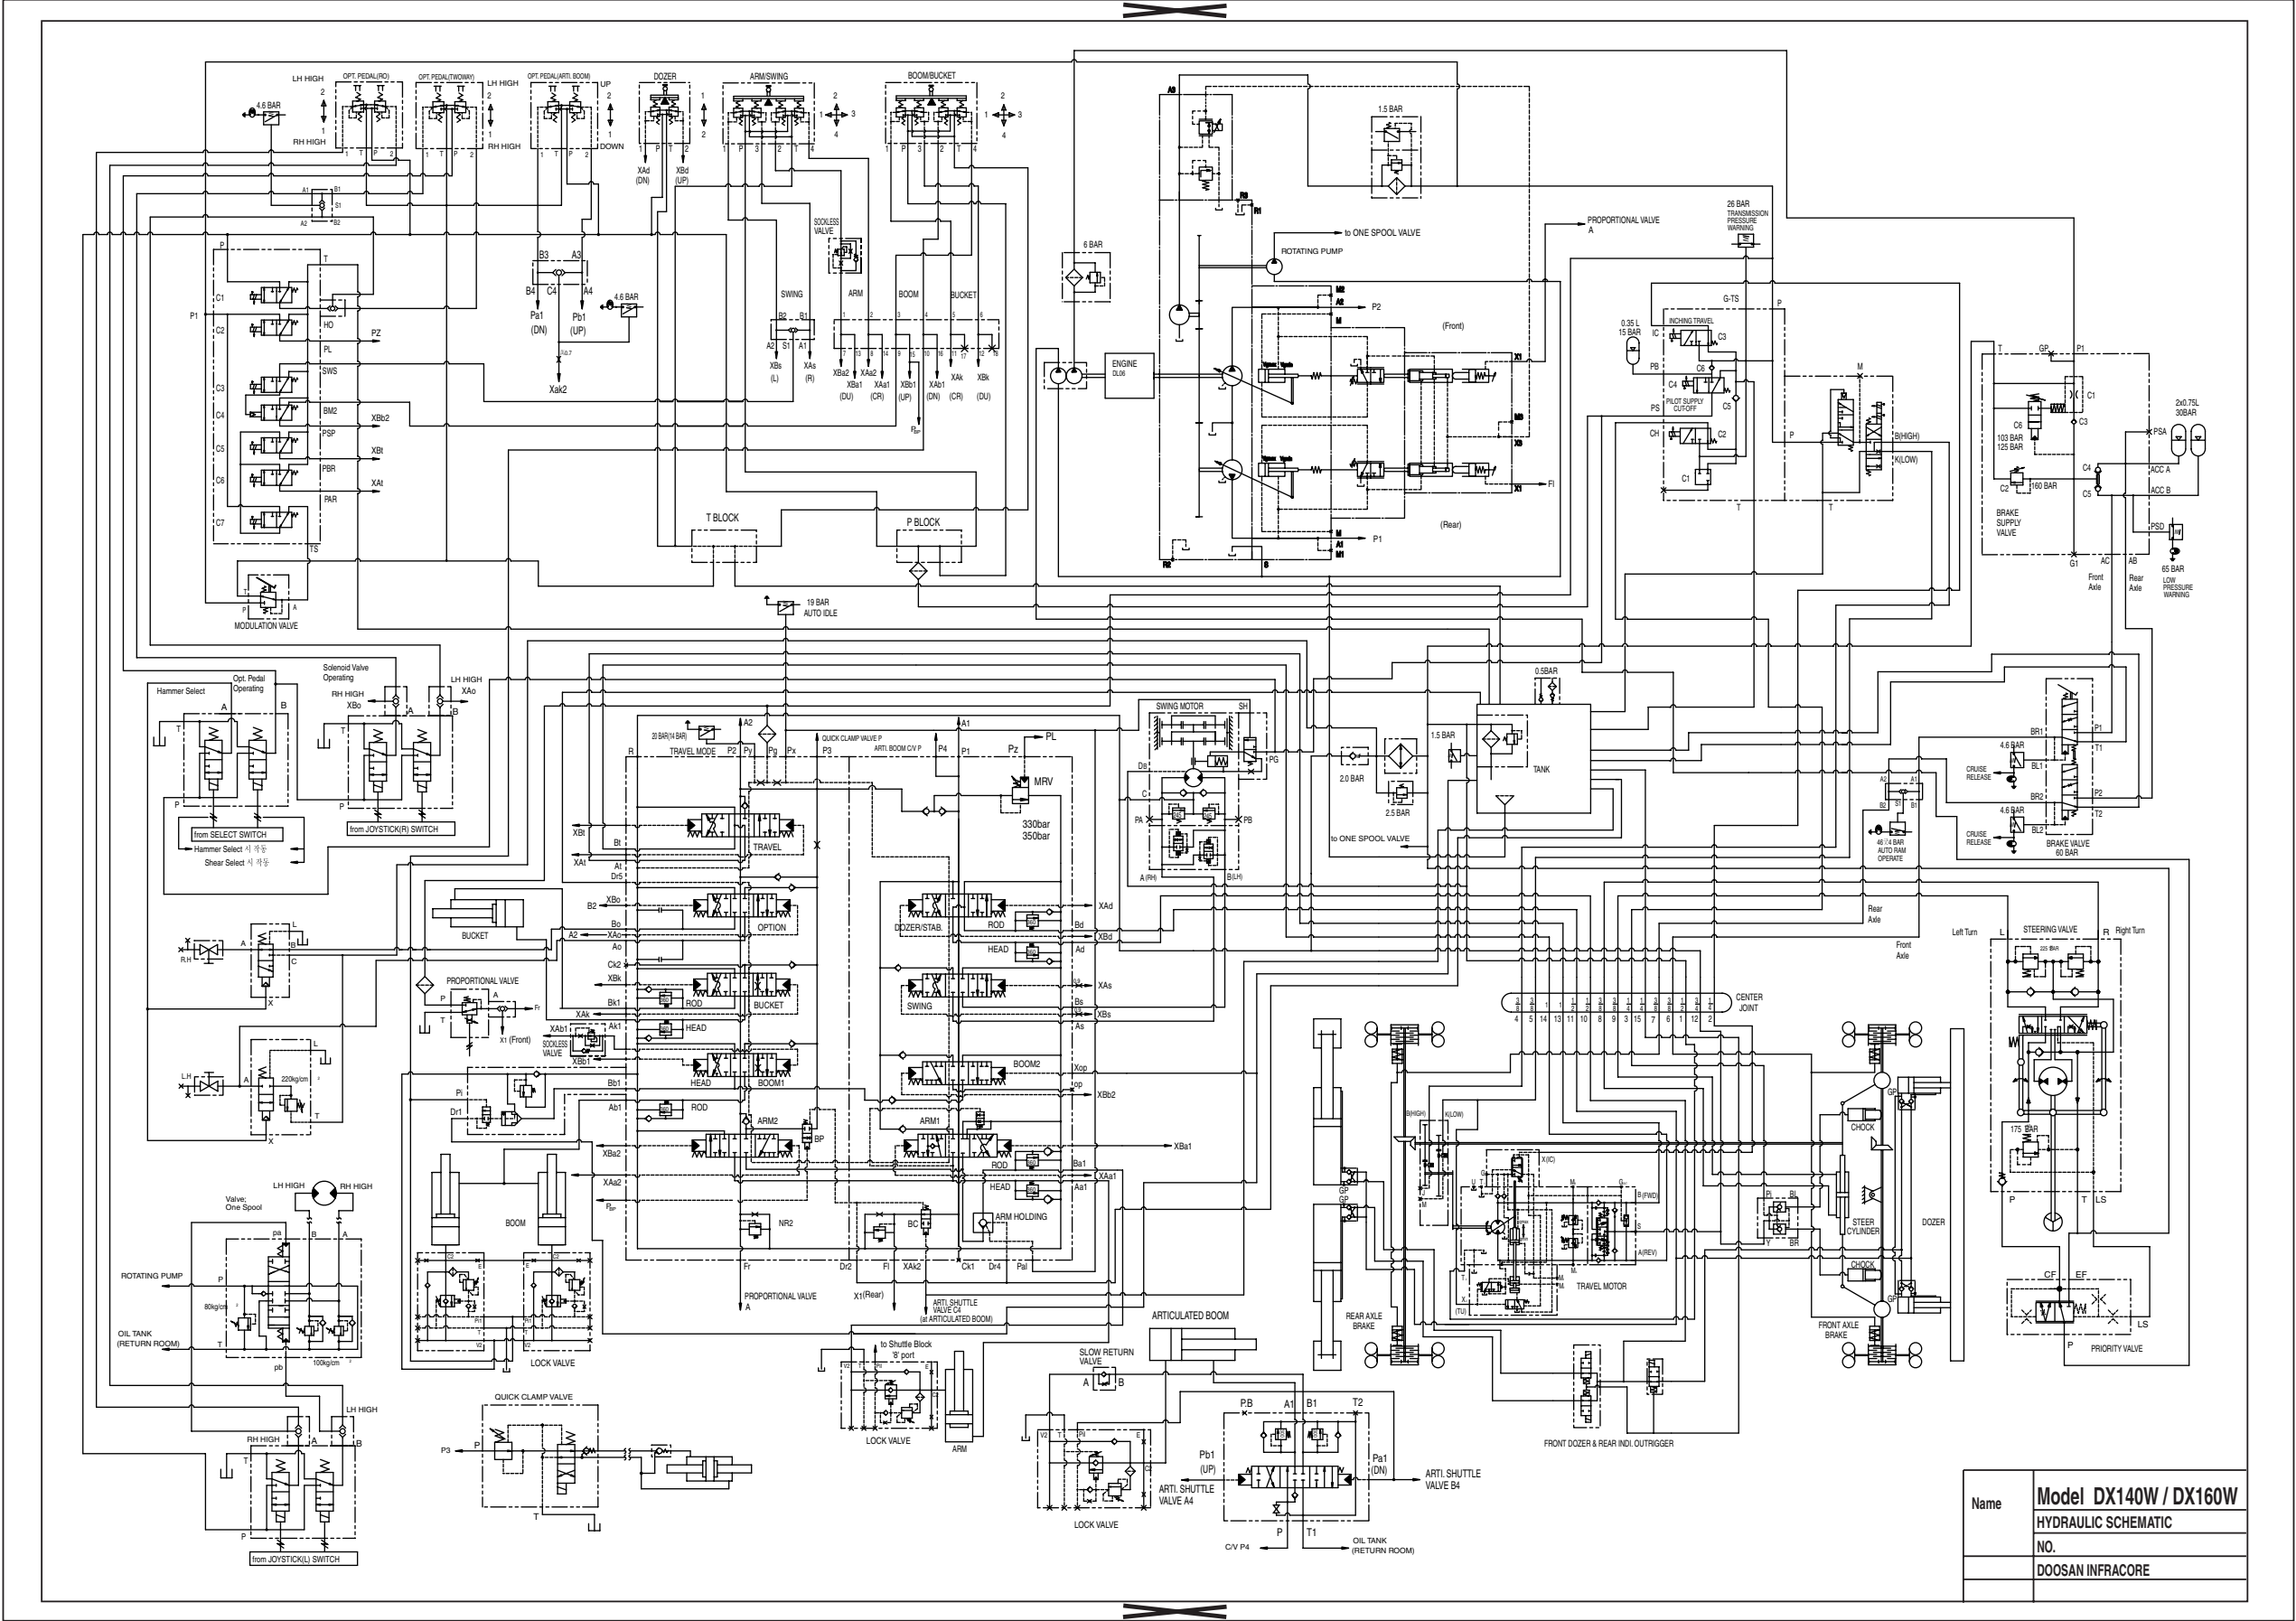


FG009048

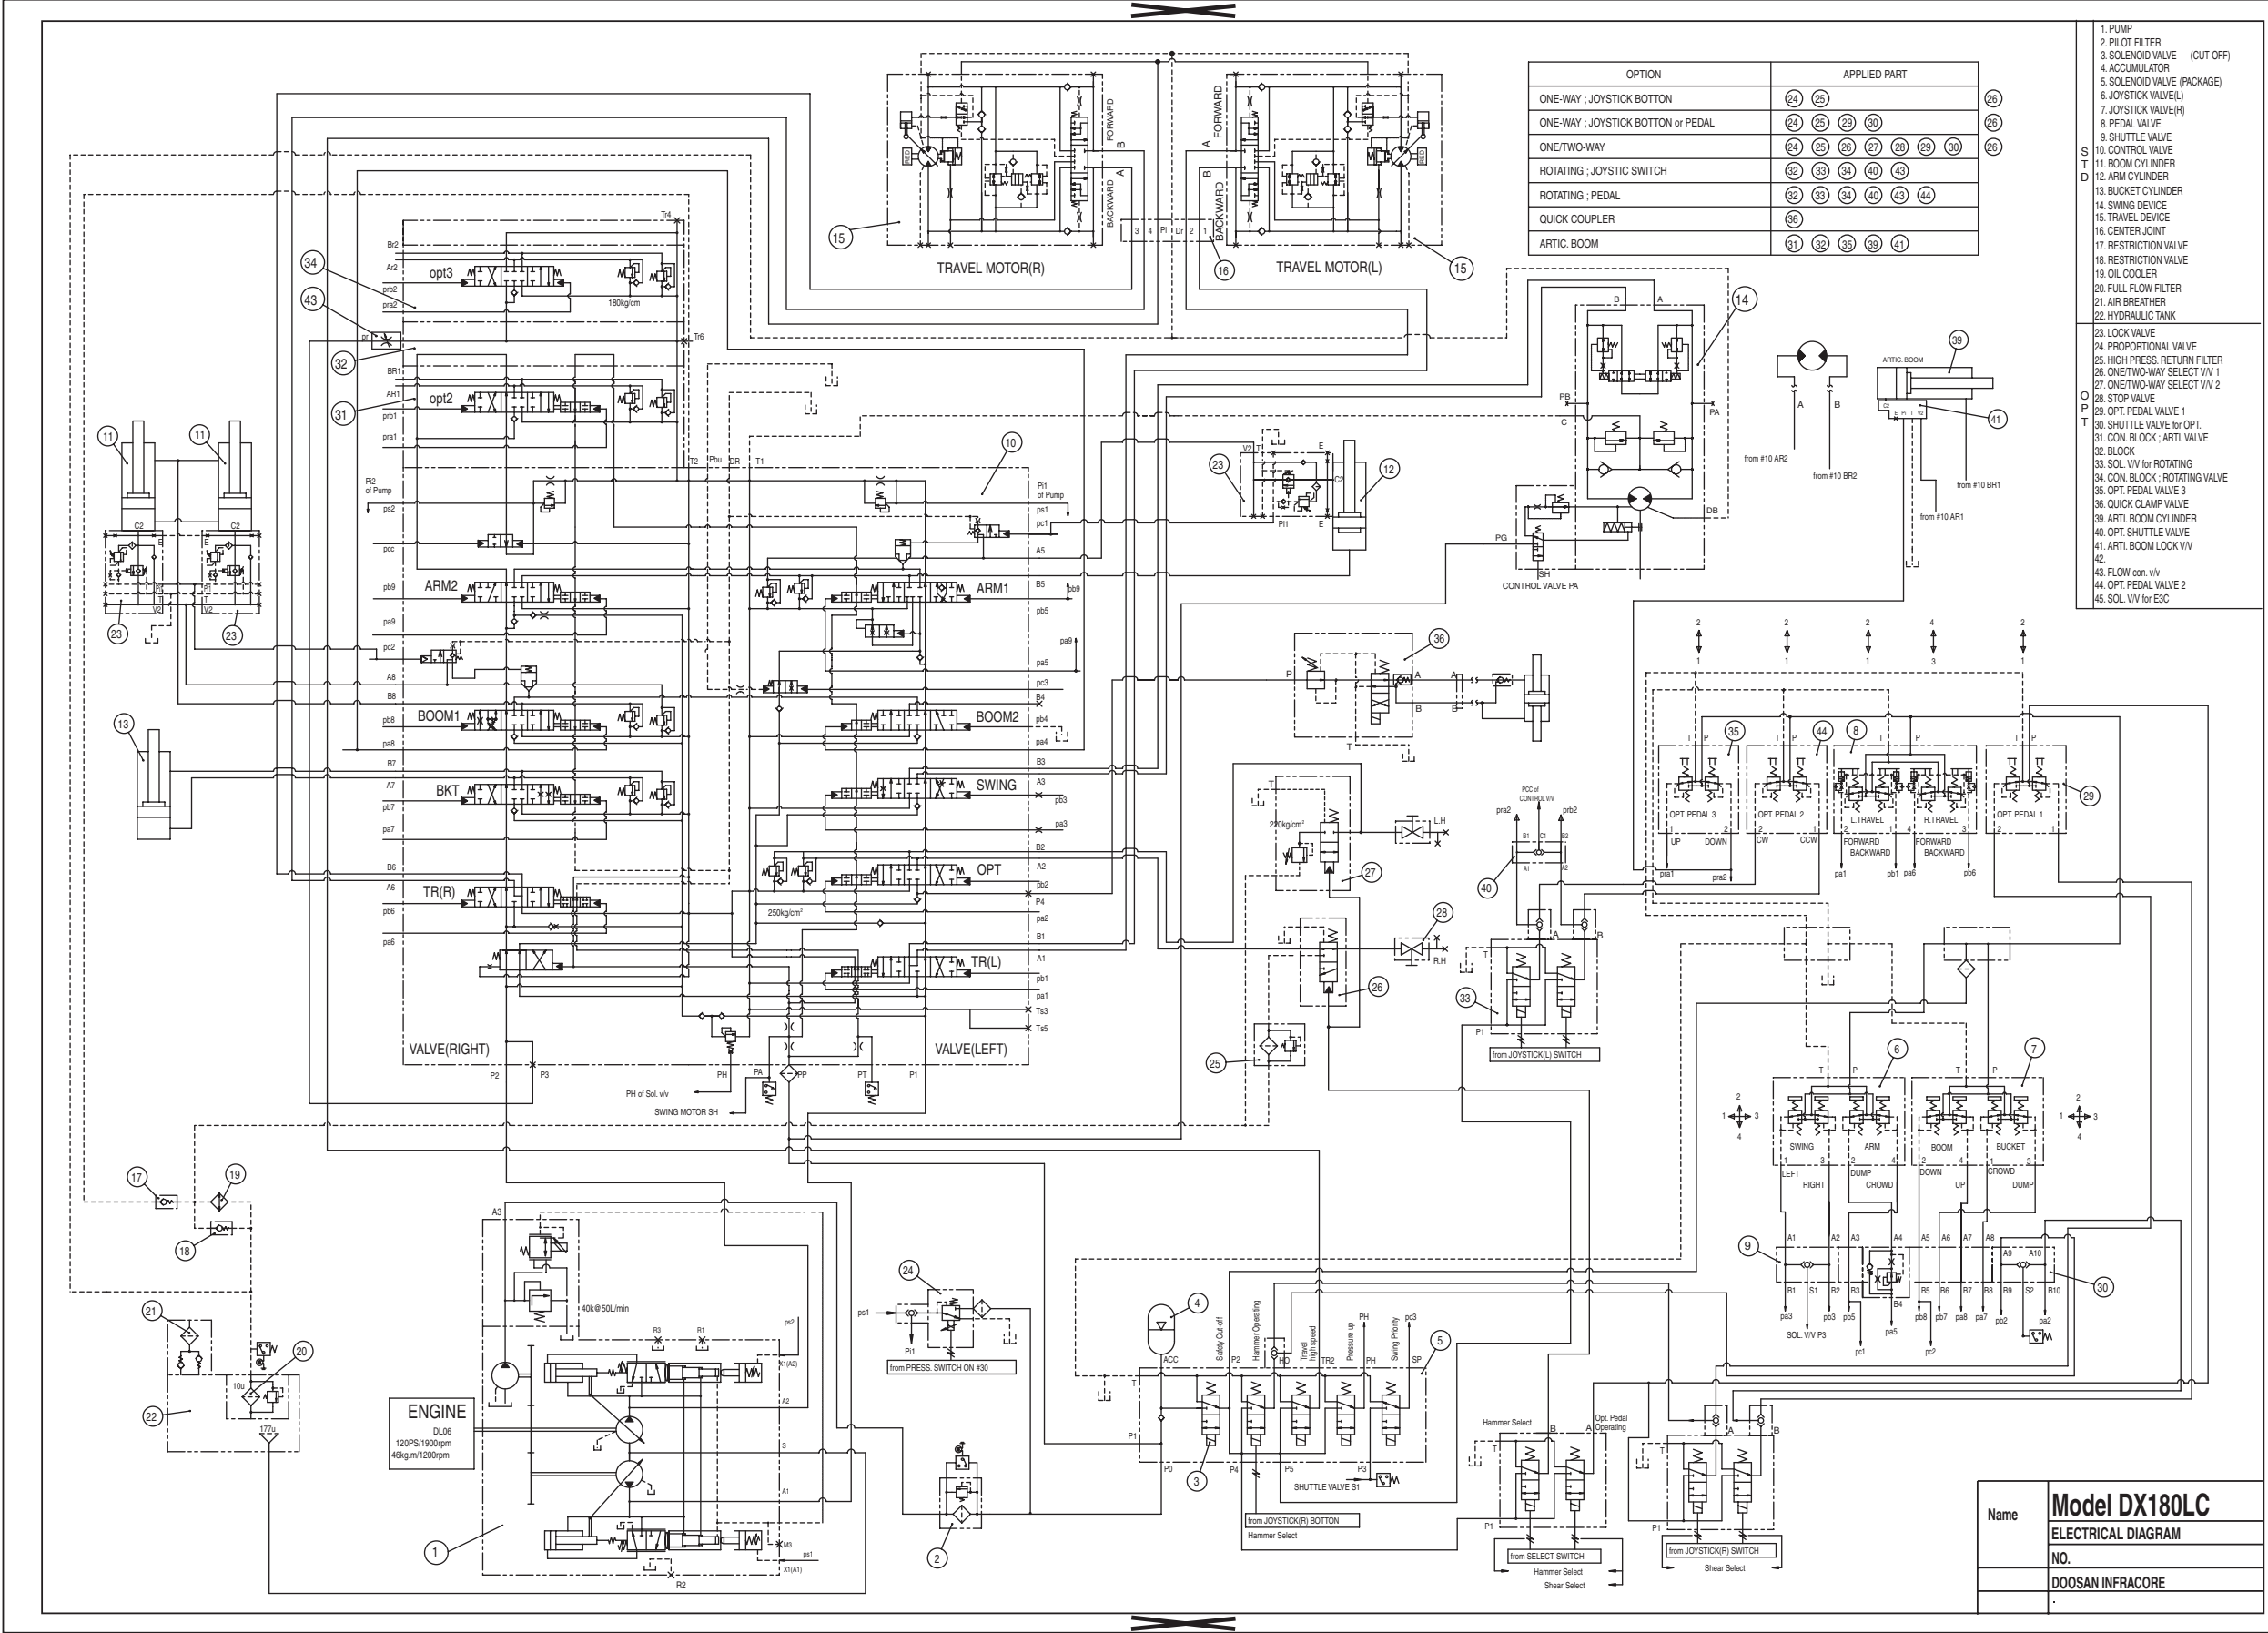


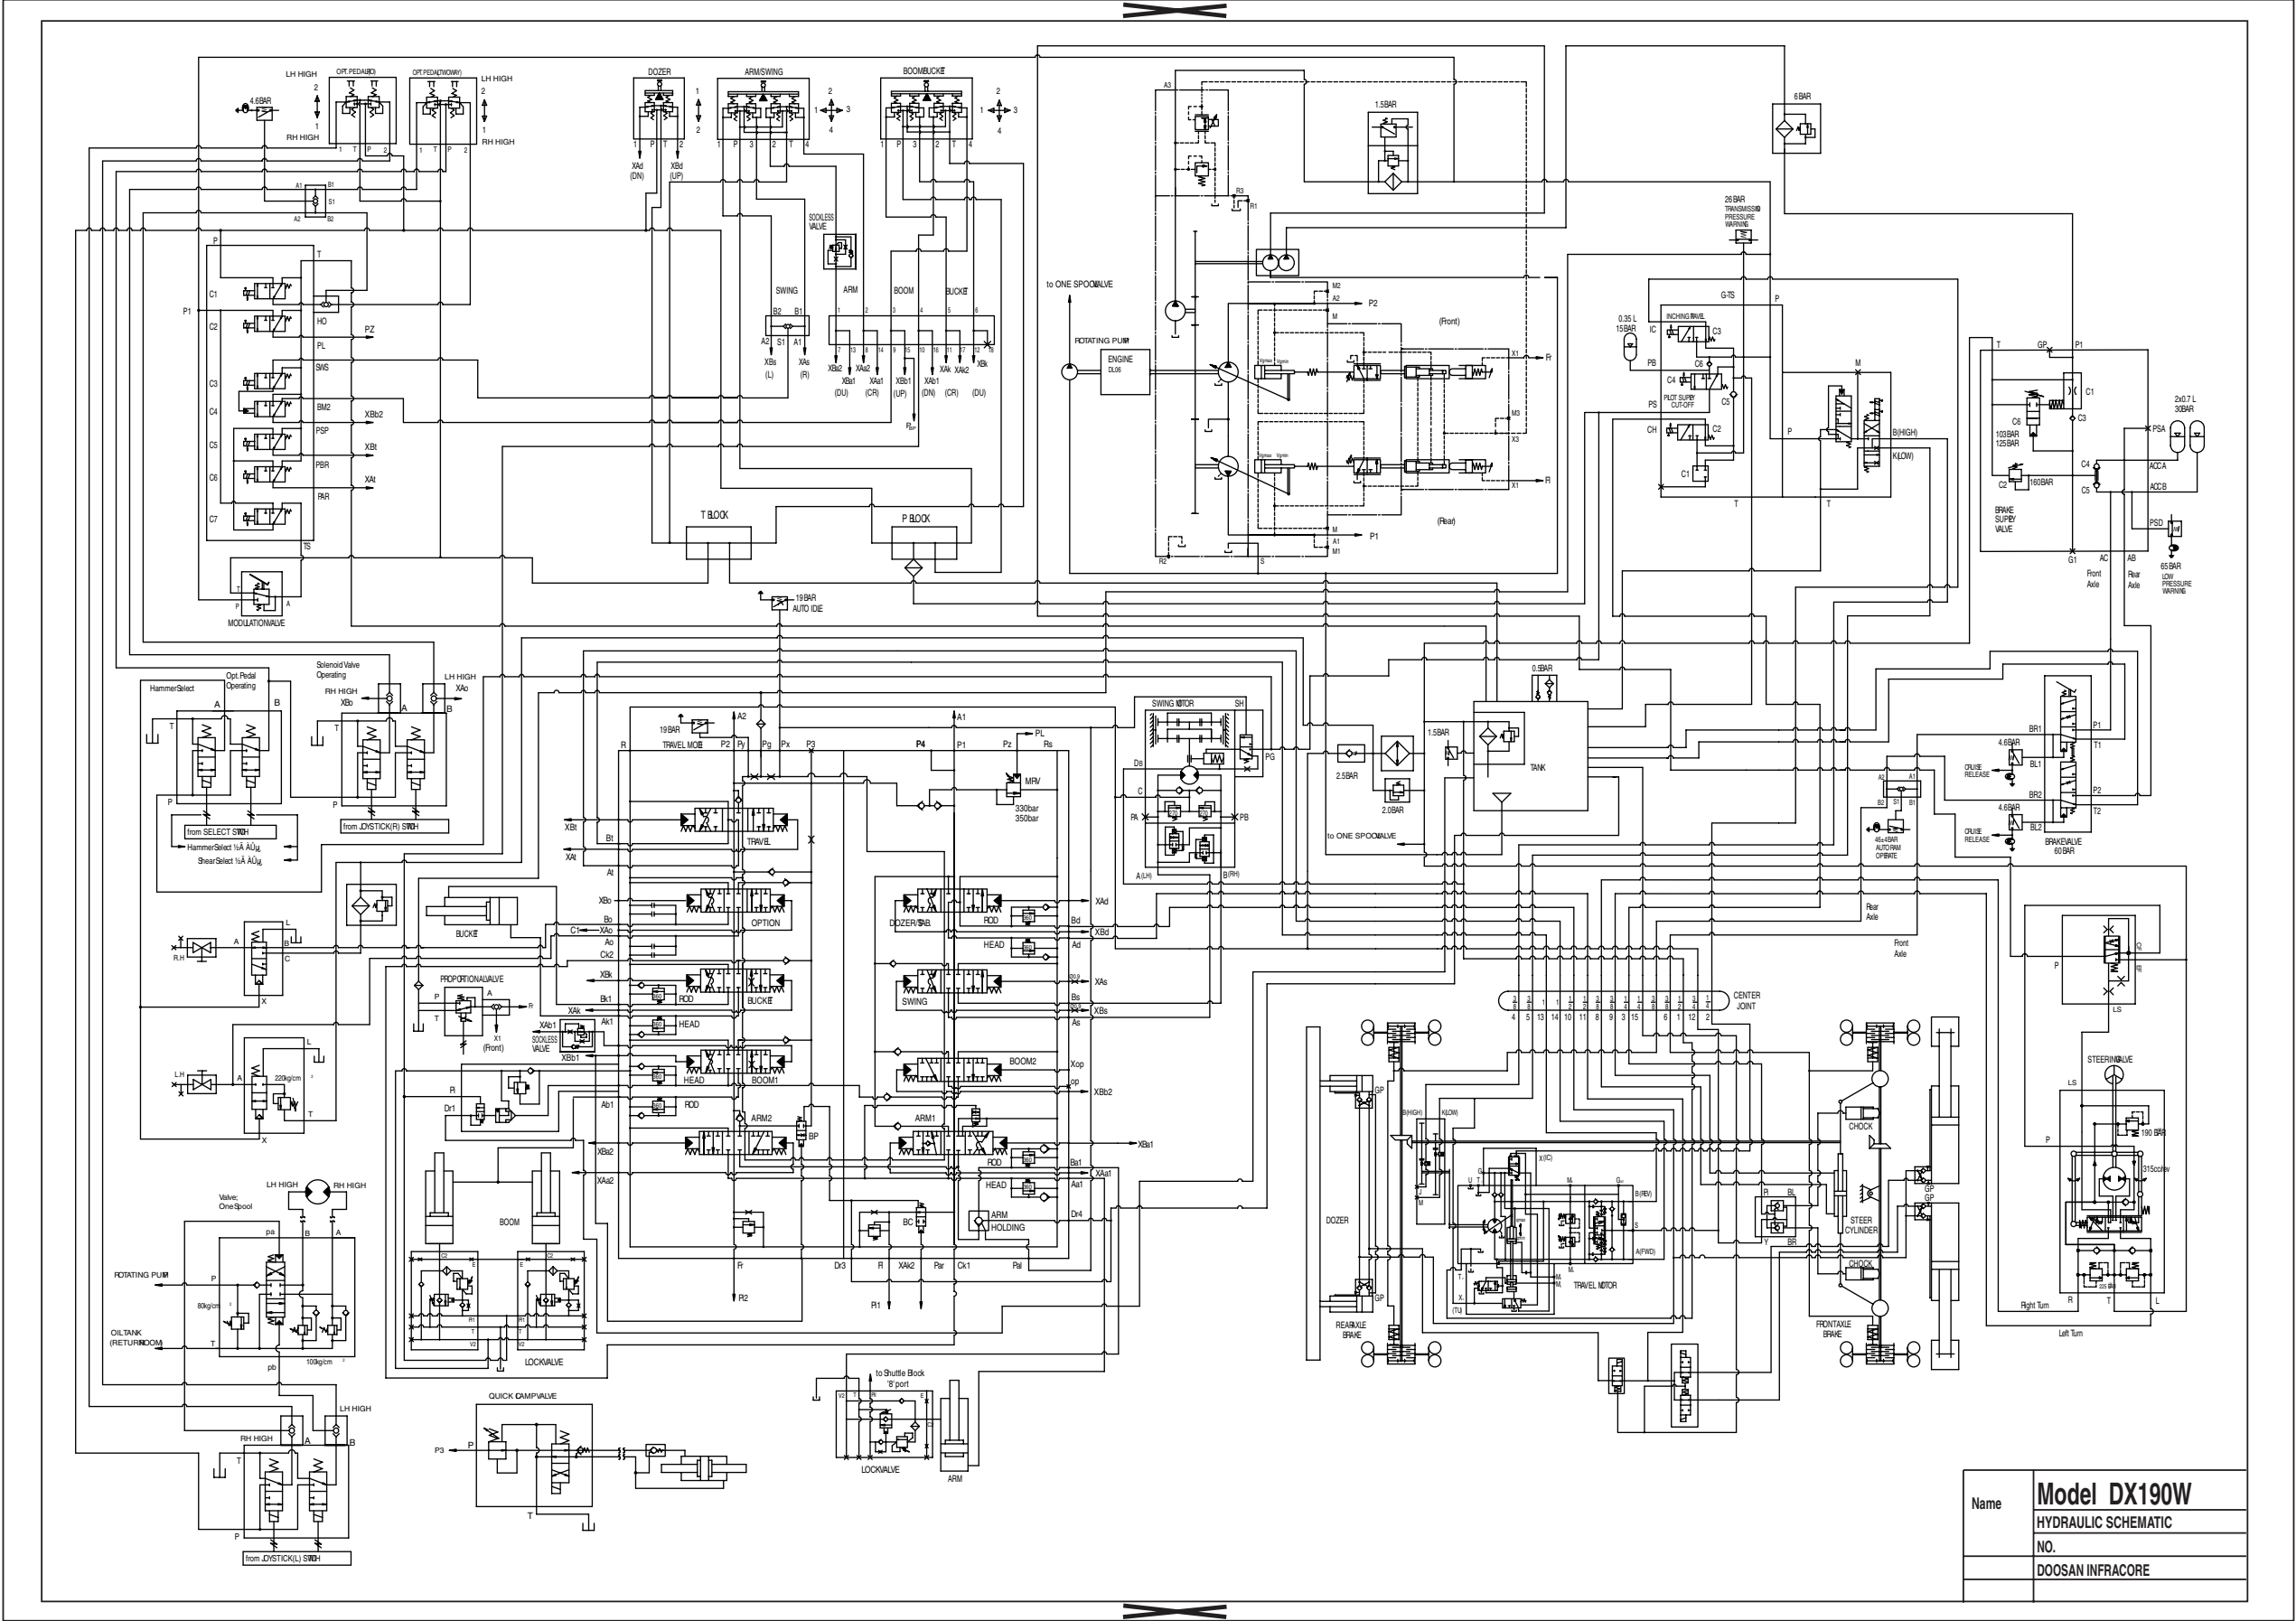


FG009231

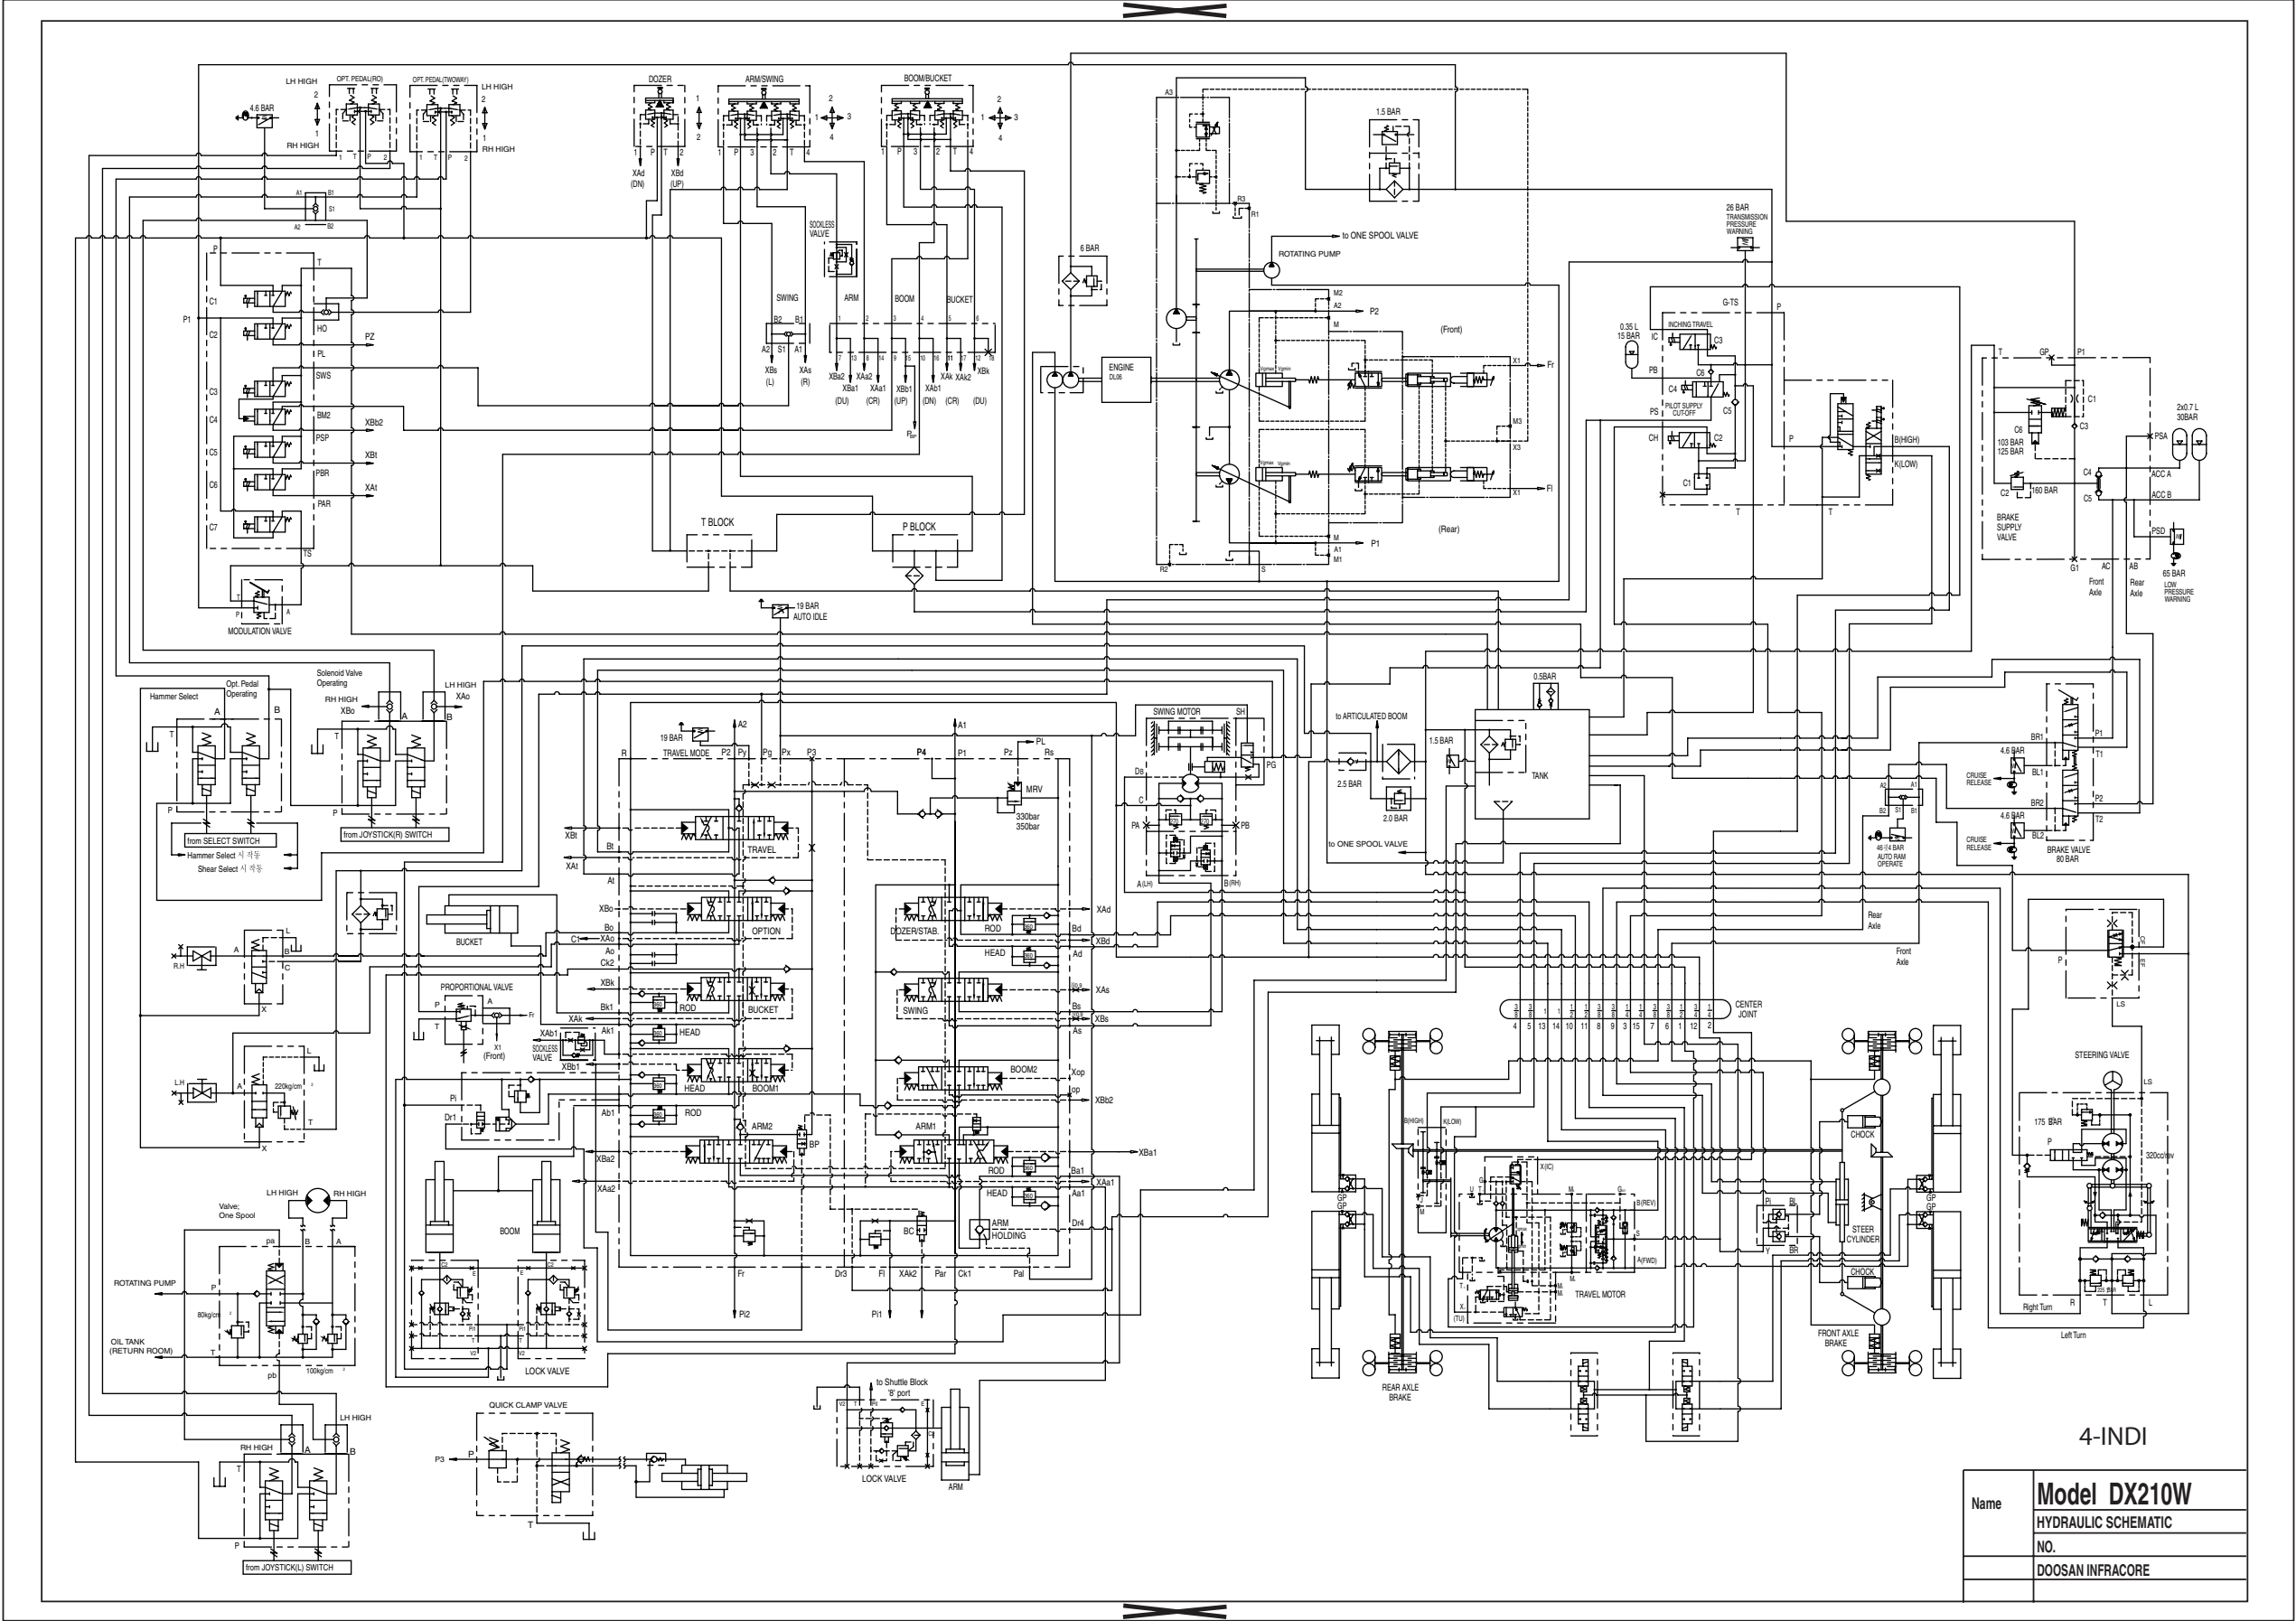



FG008728

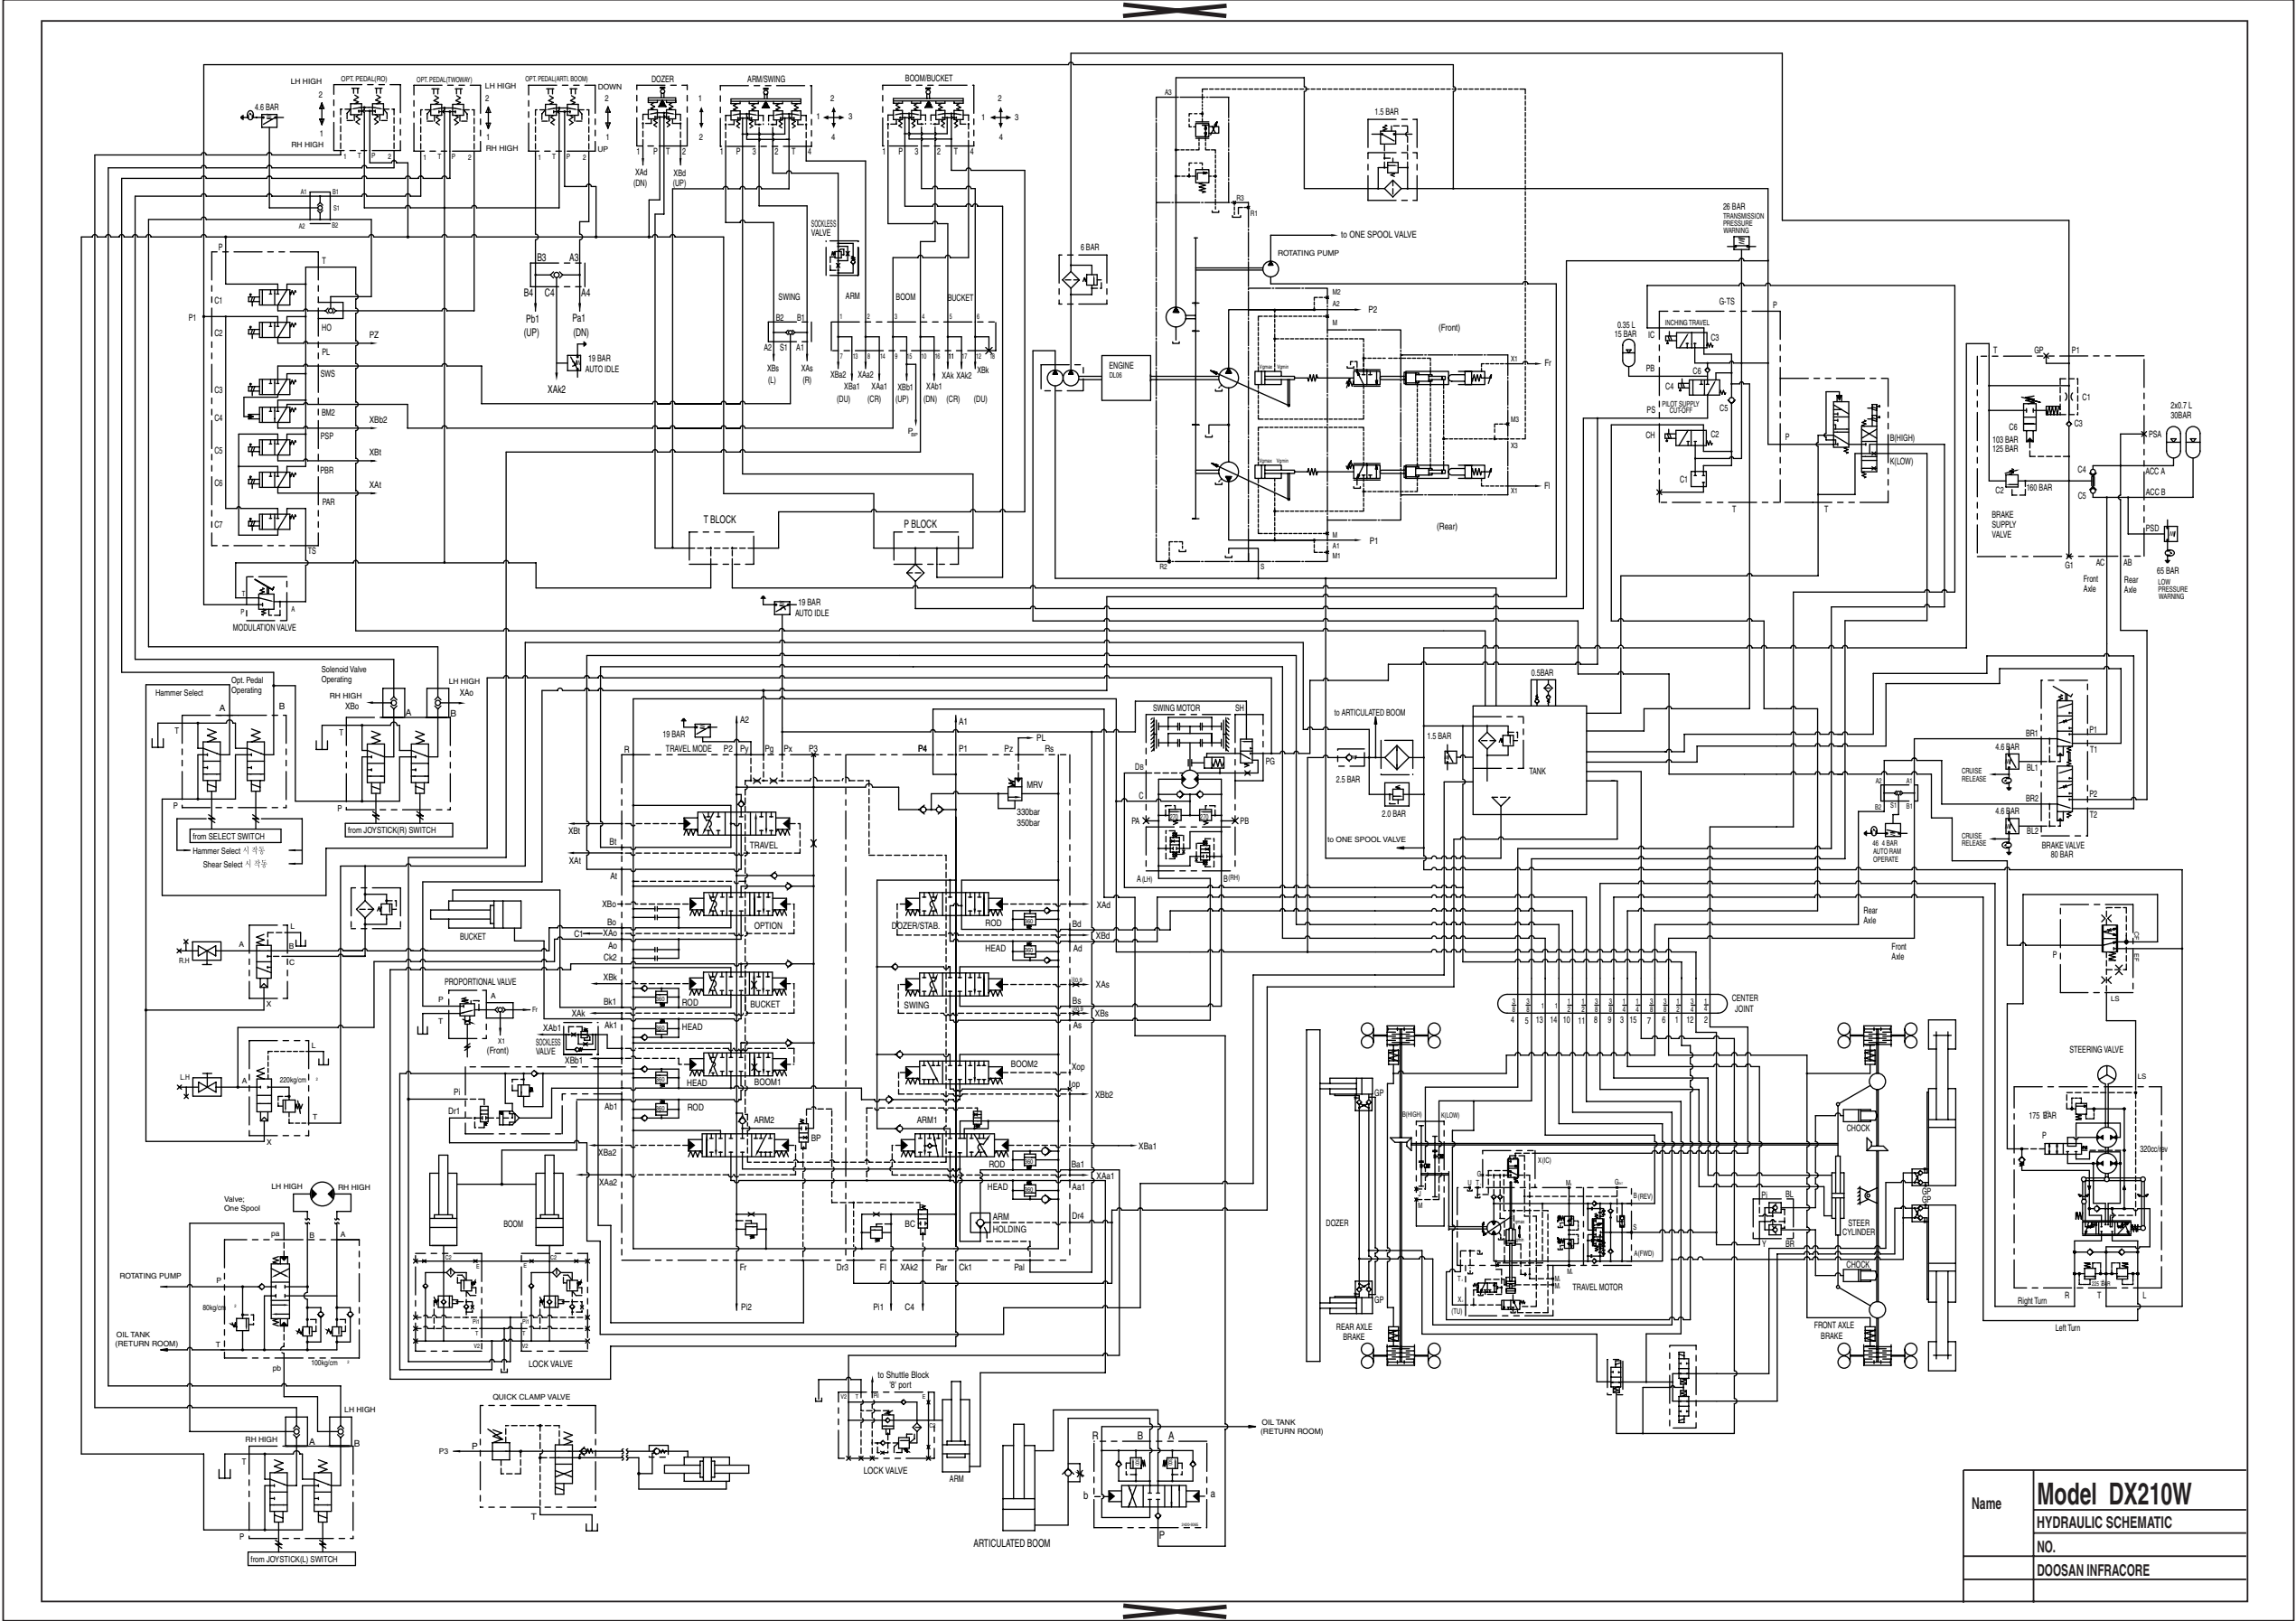



FG008729

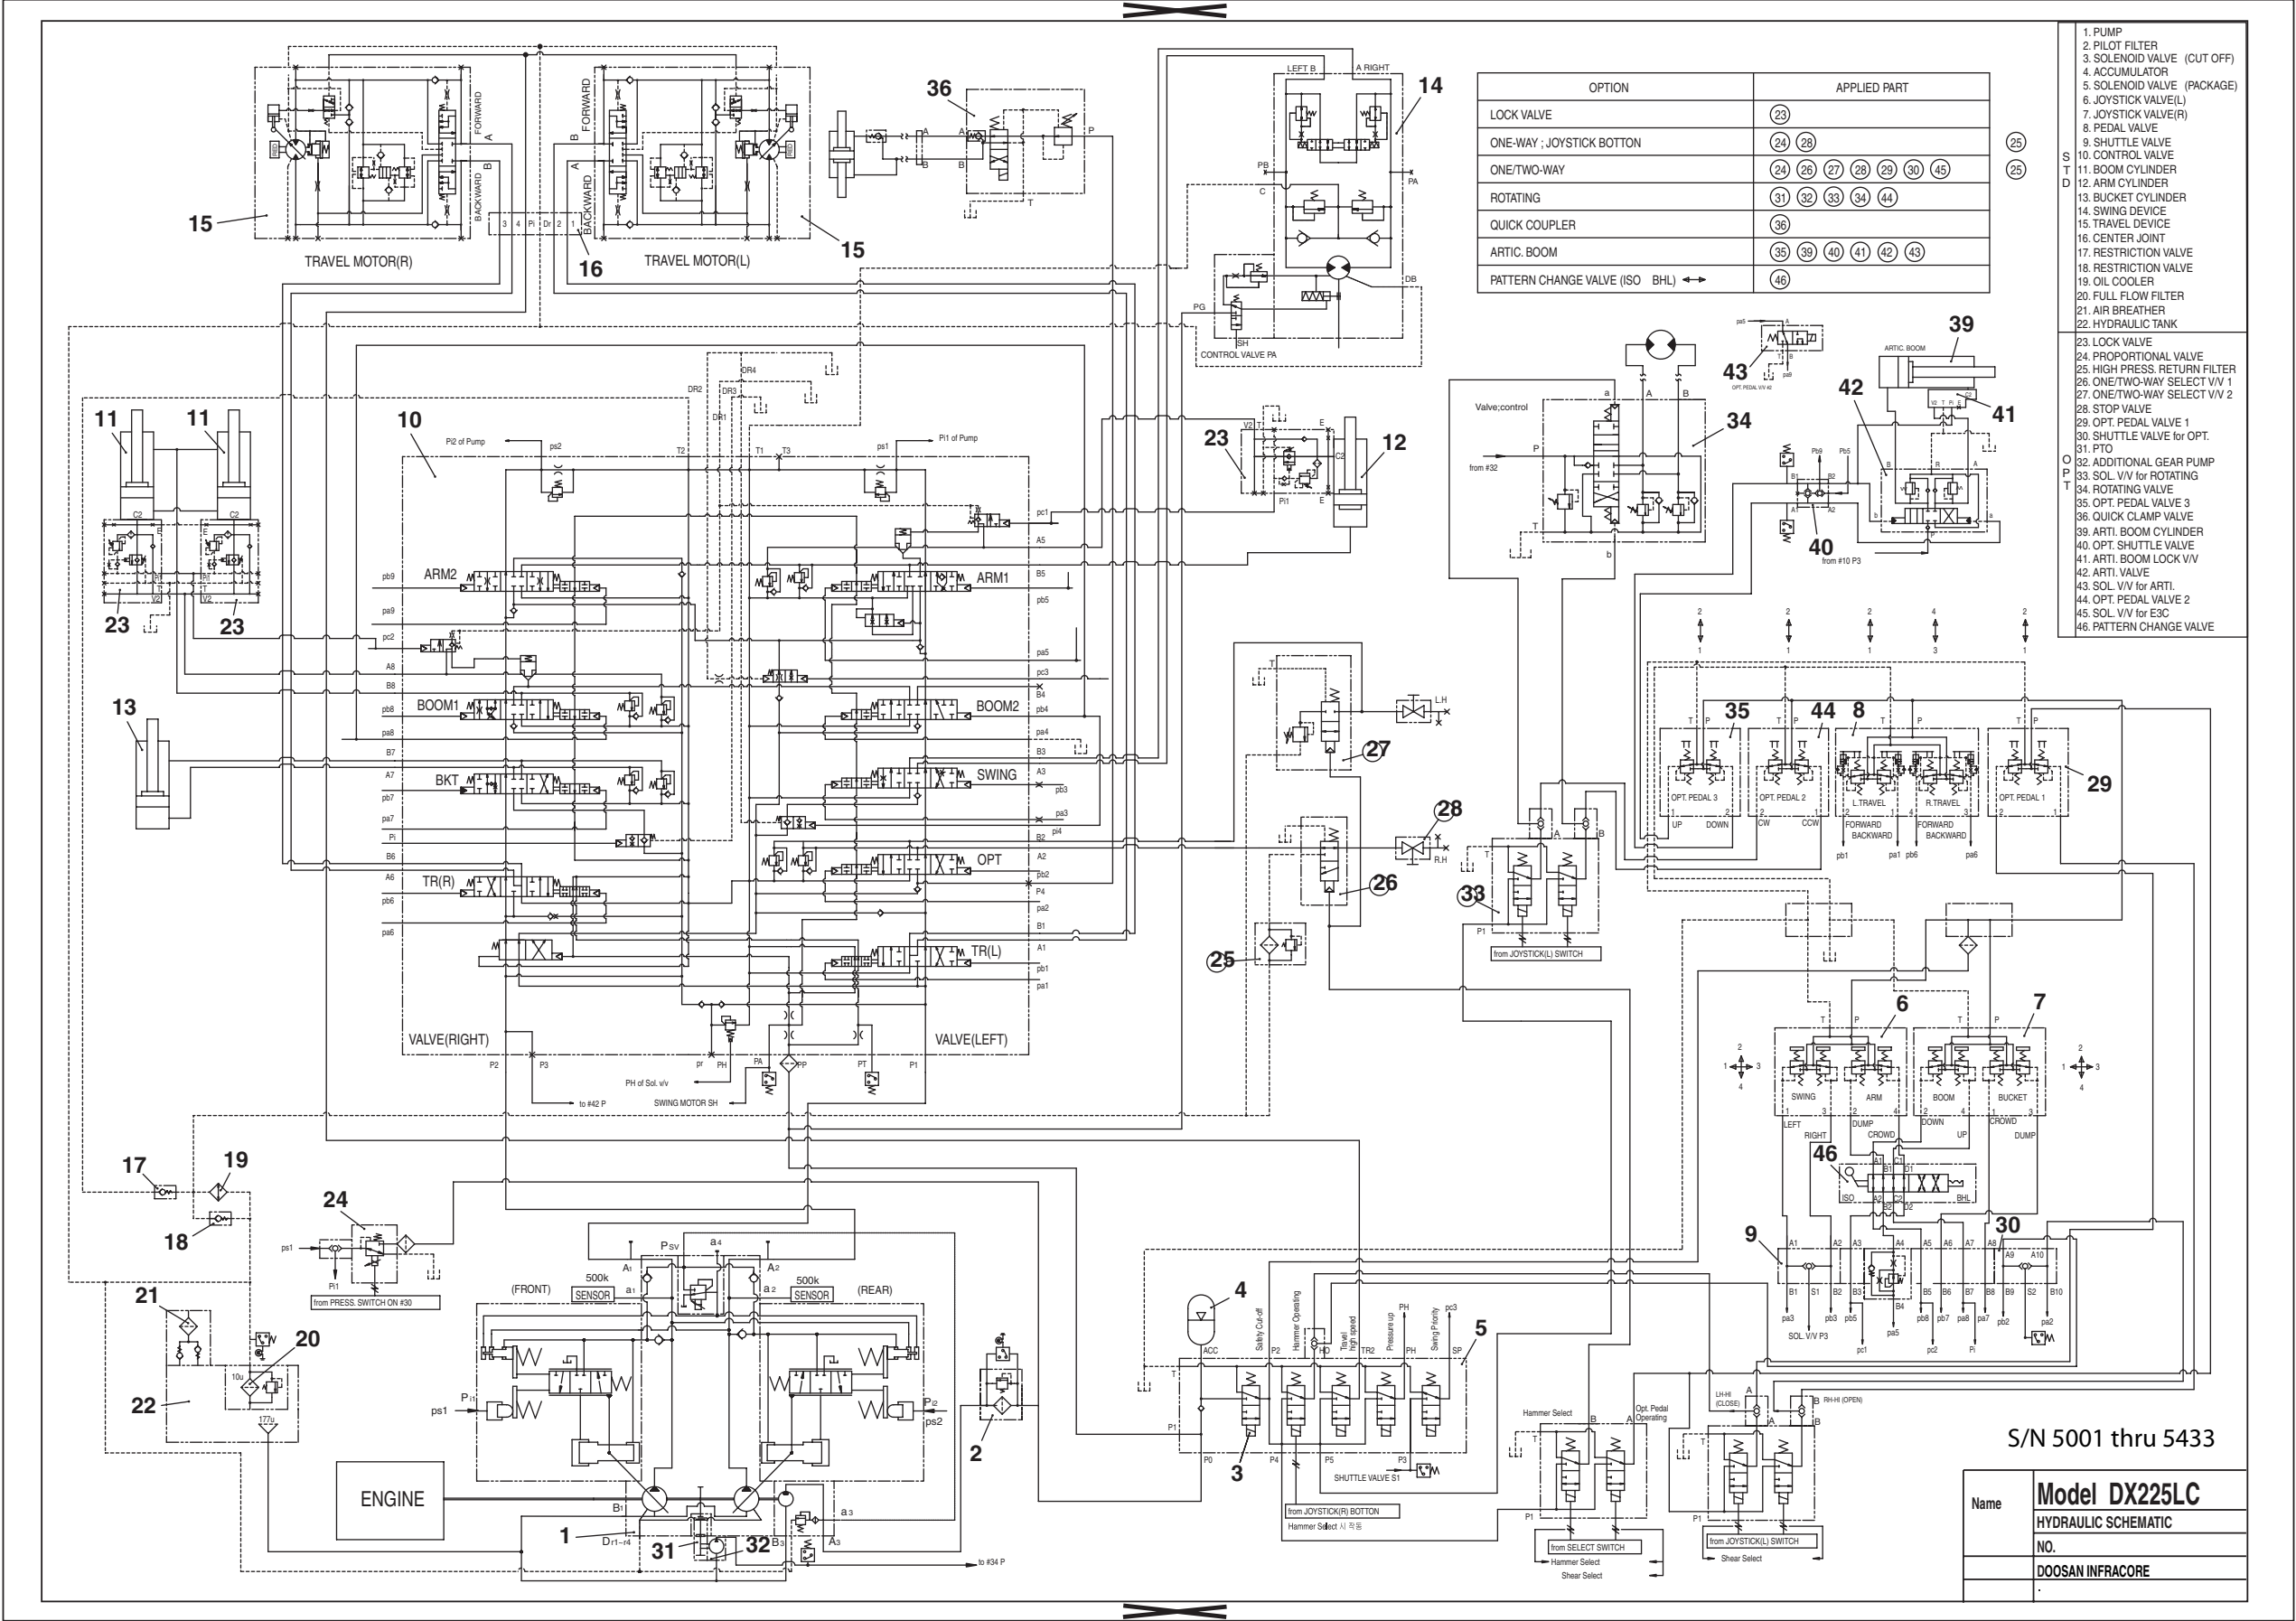


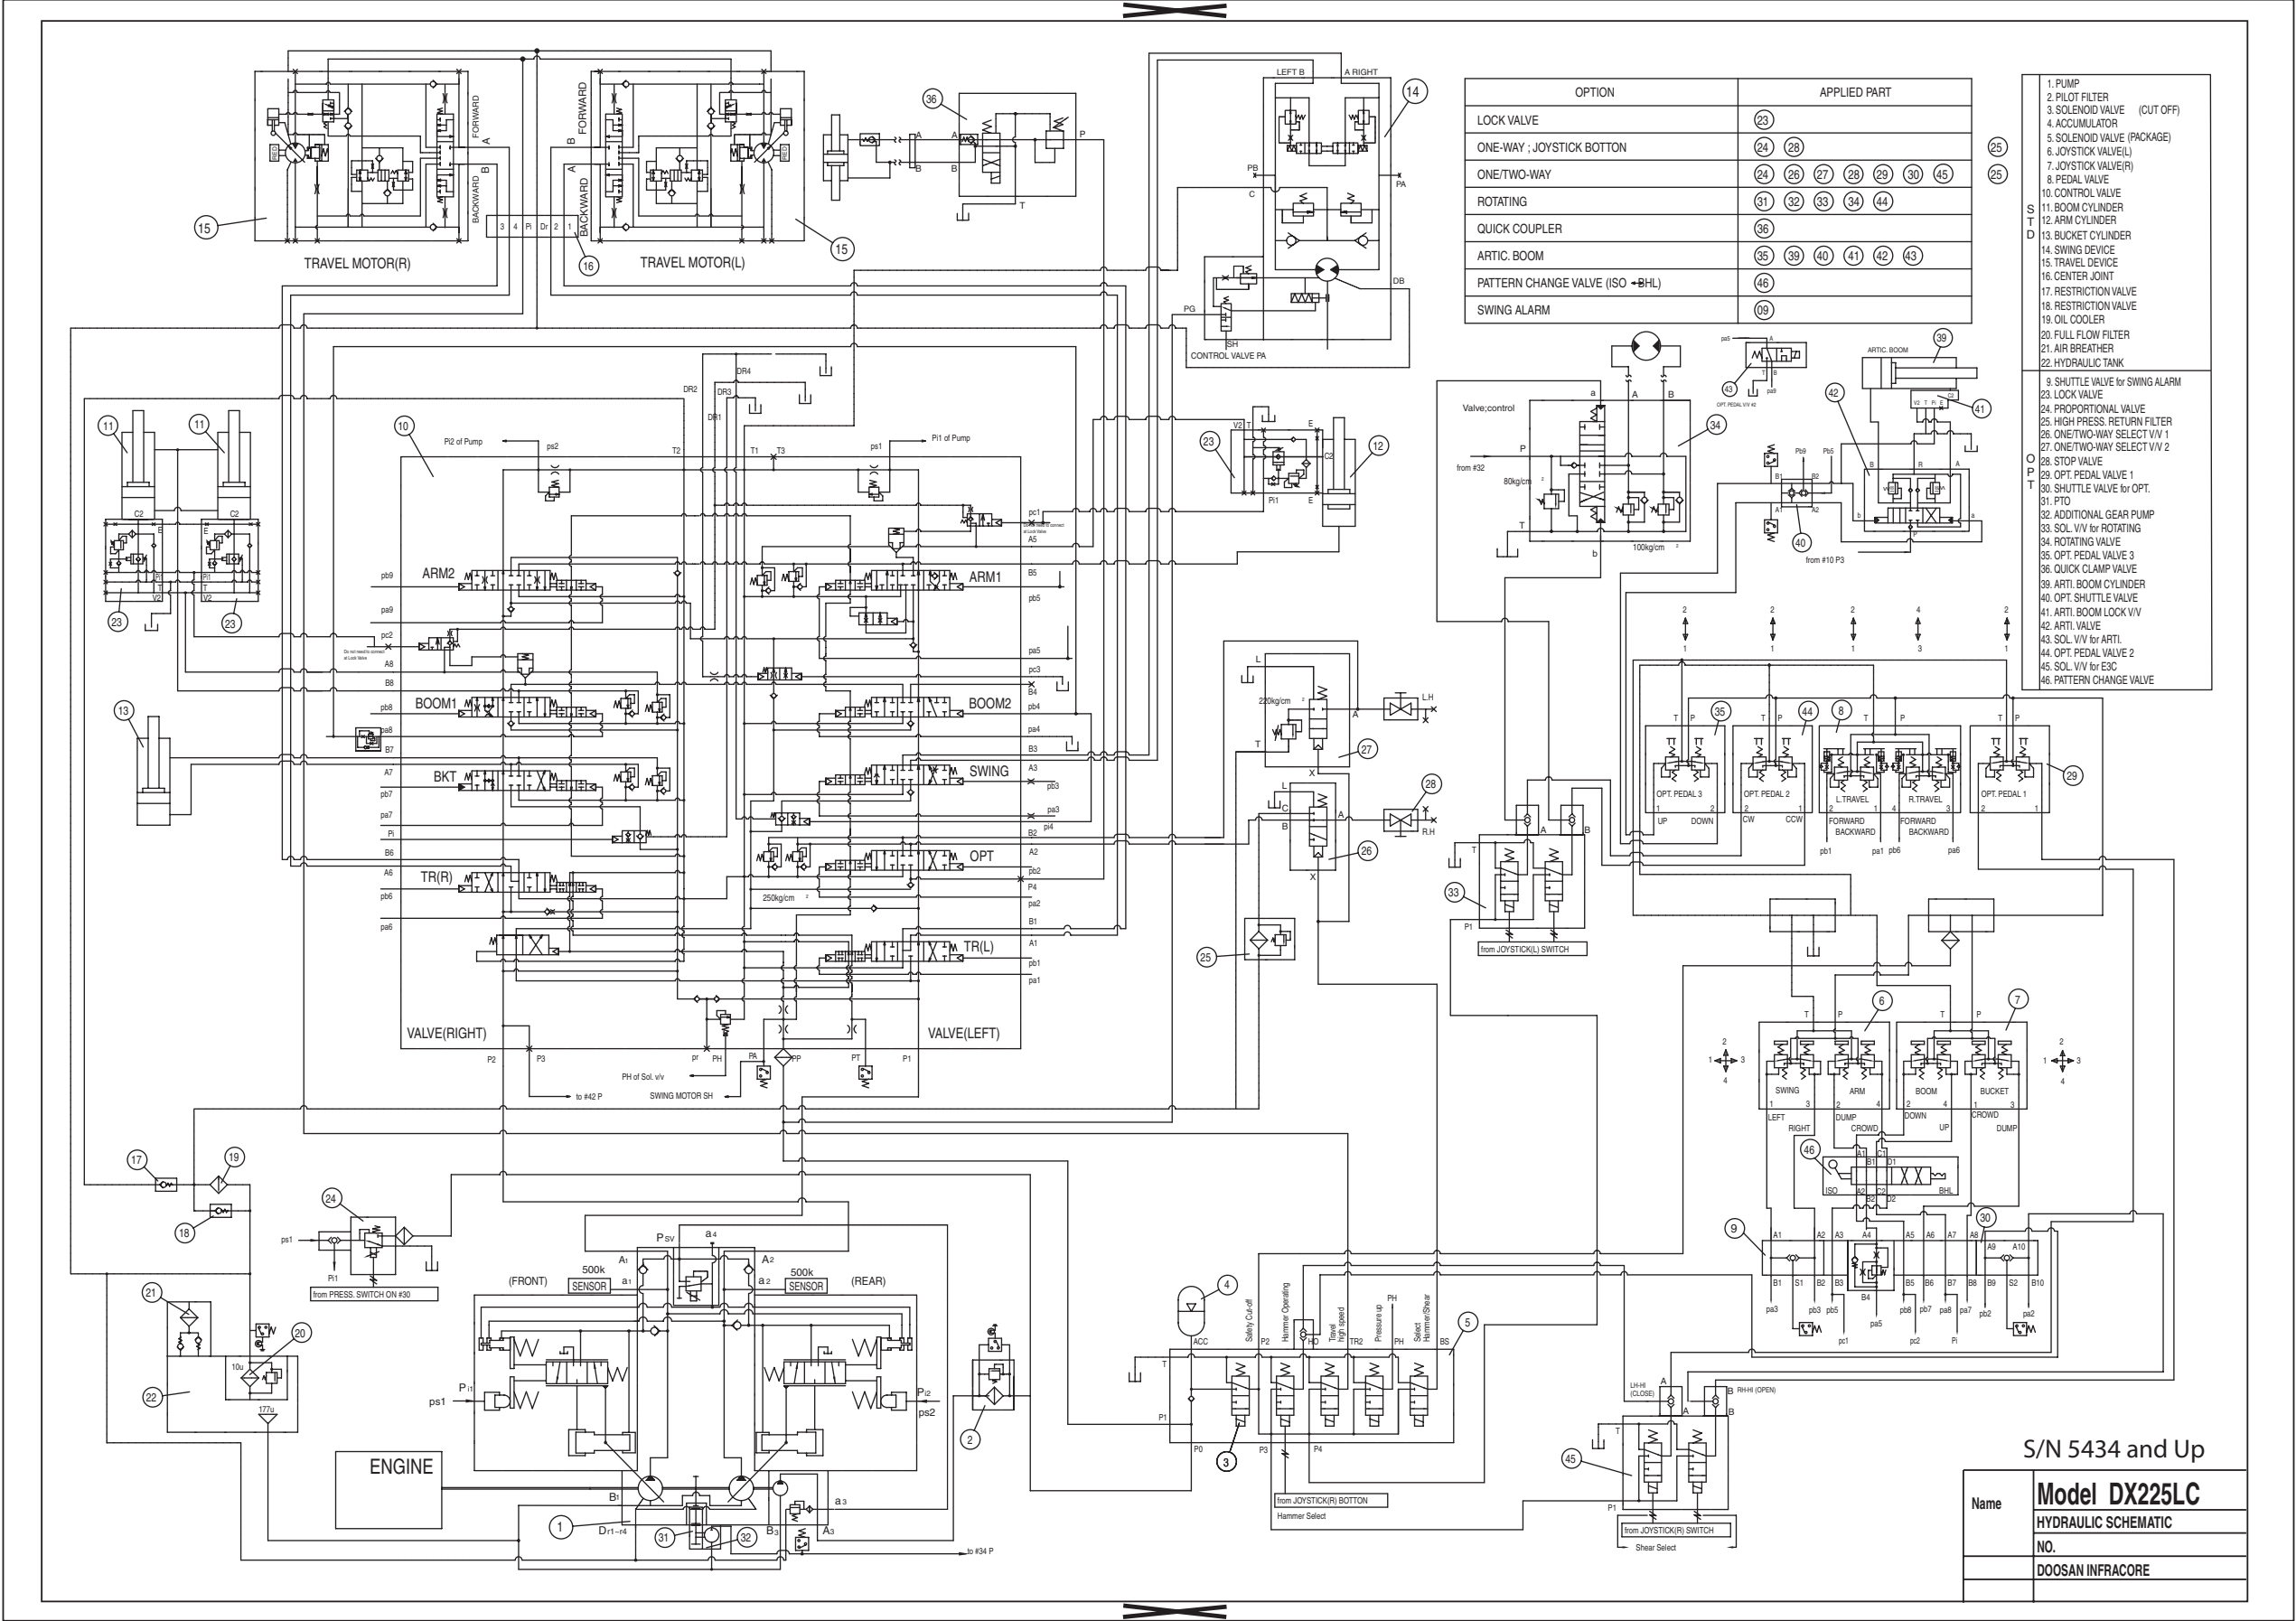


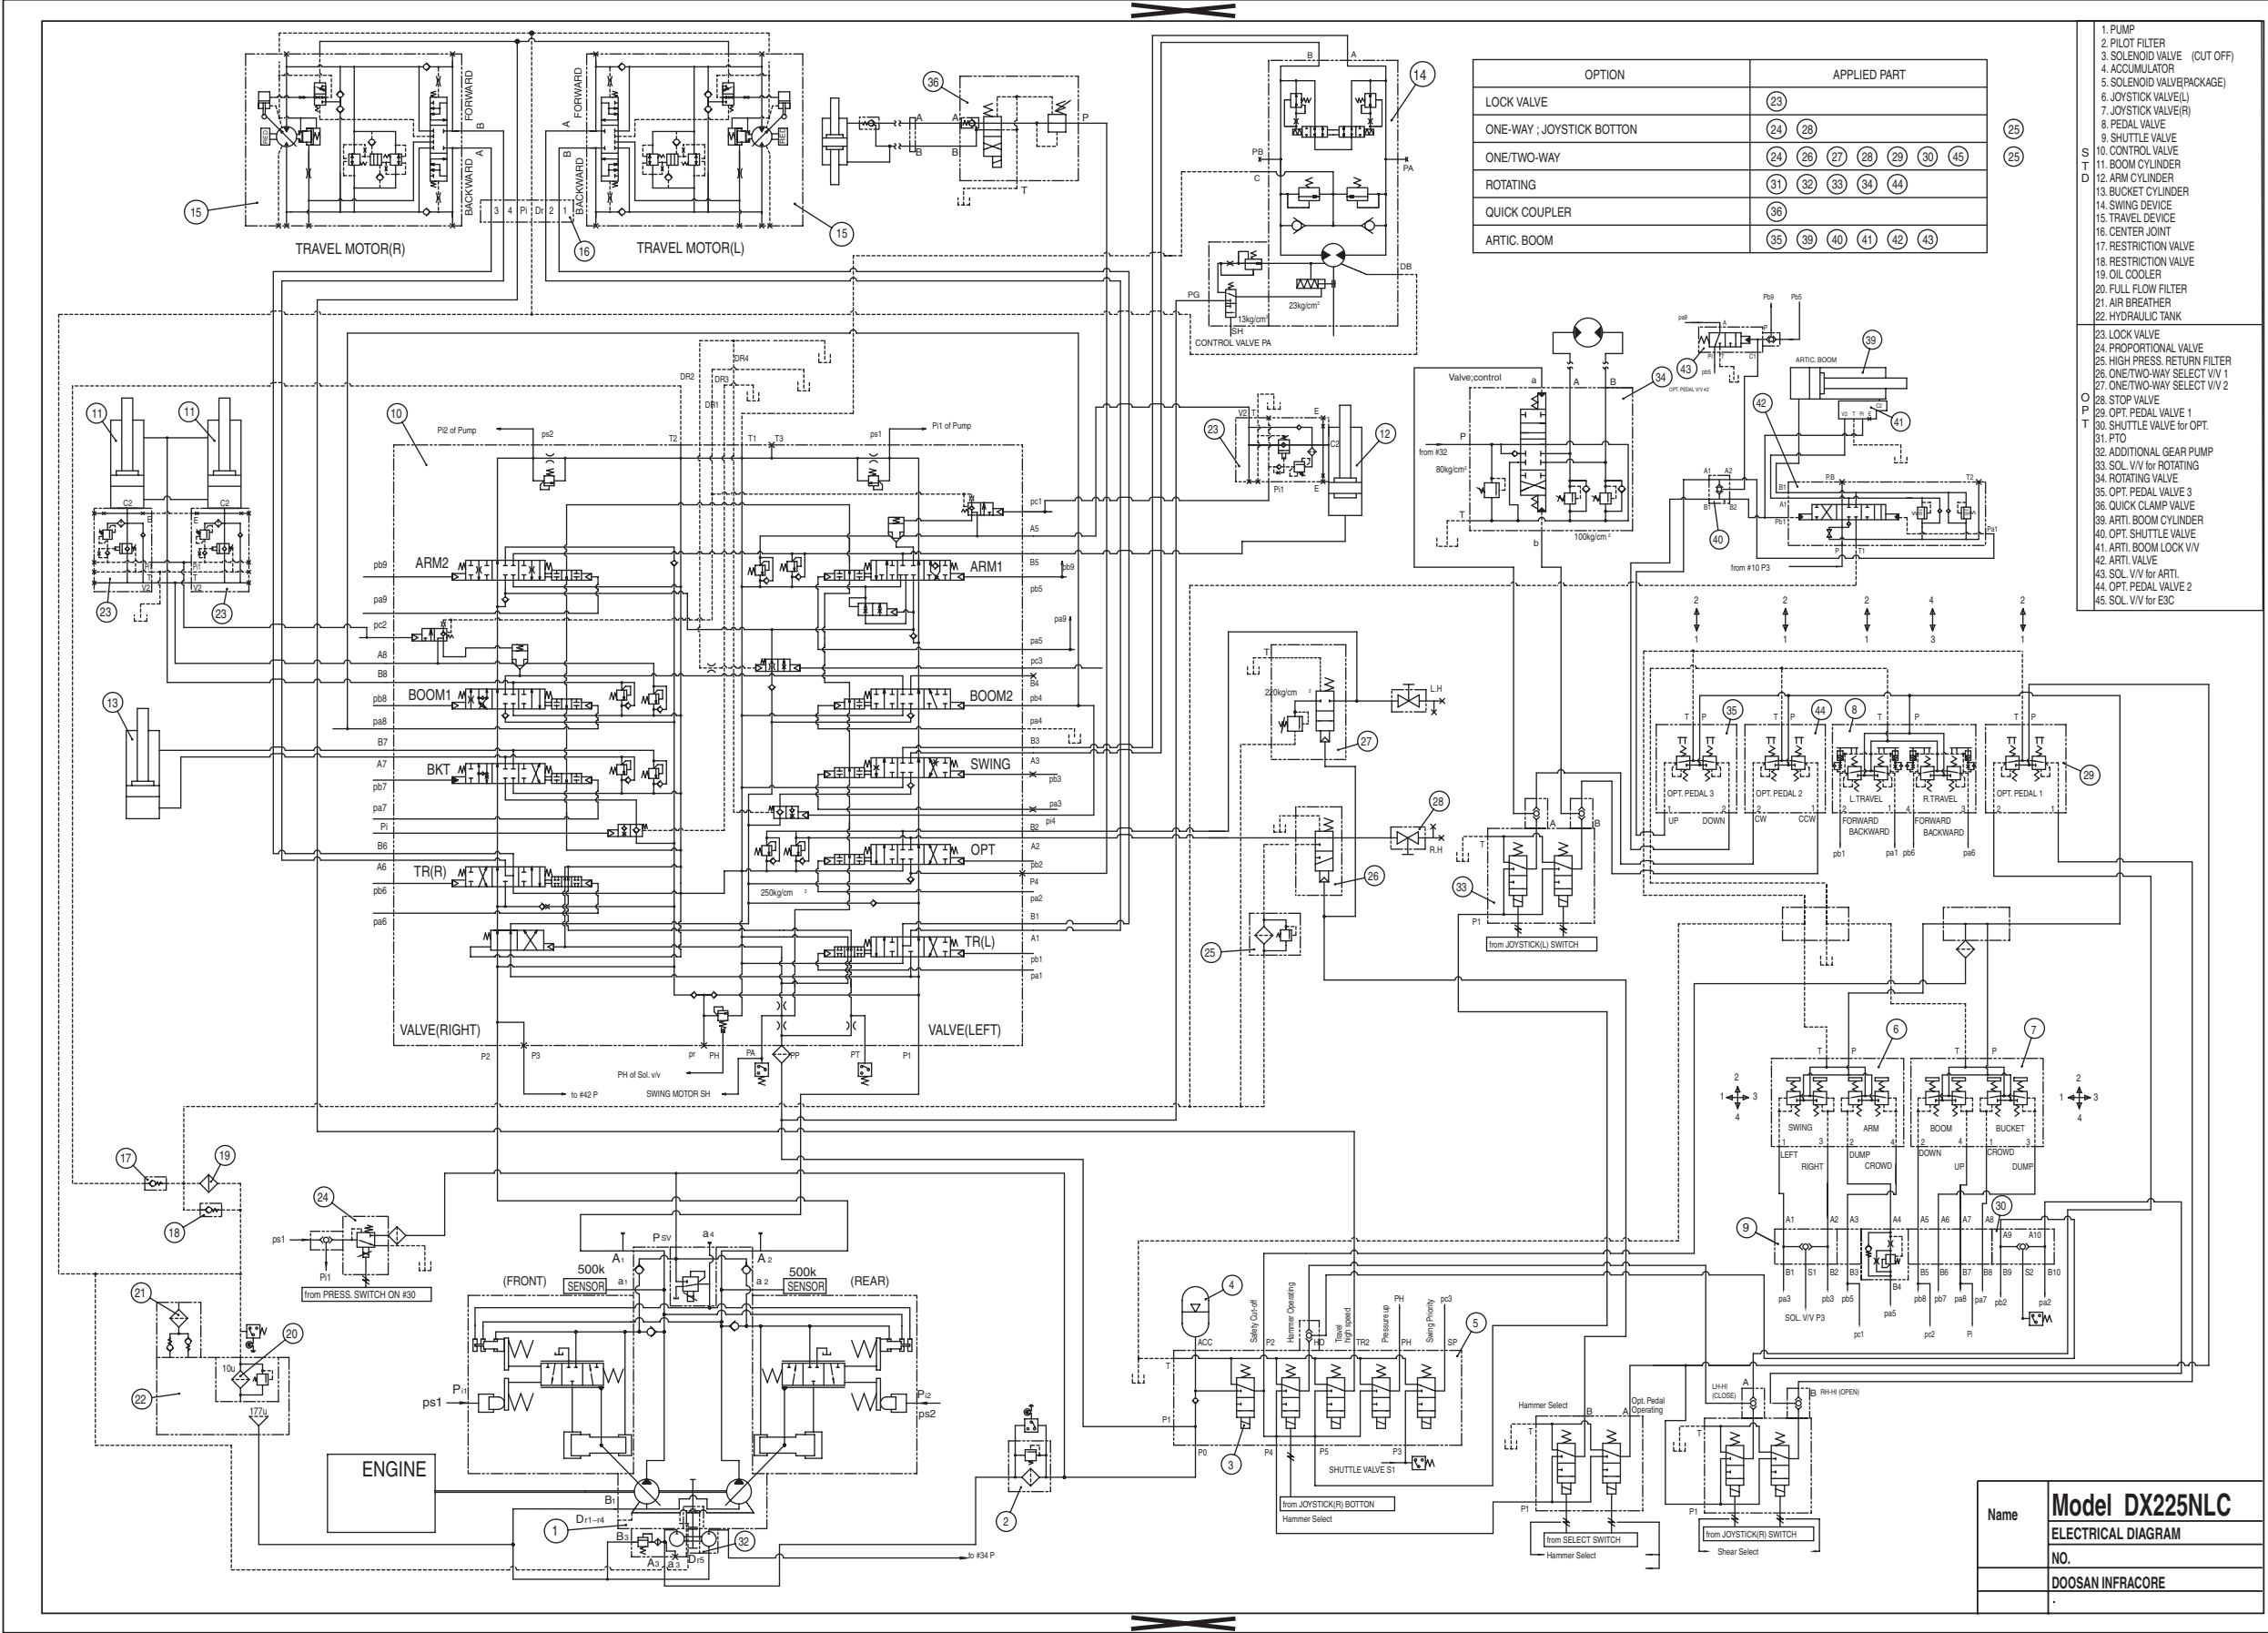


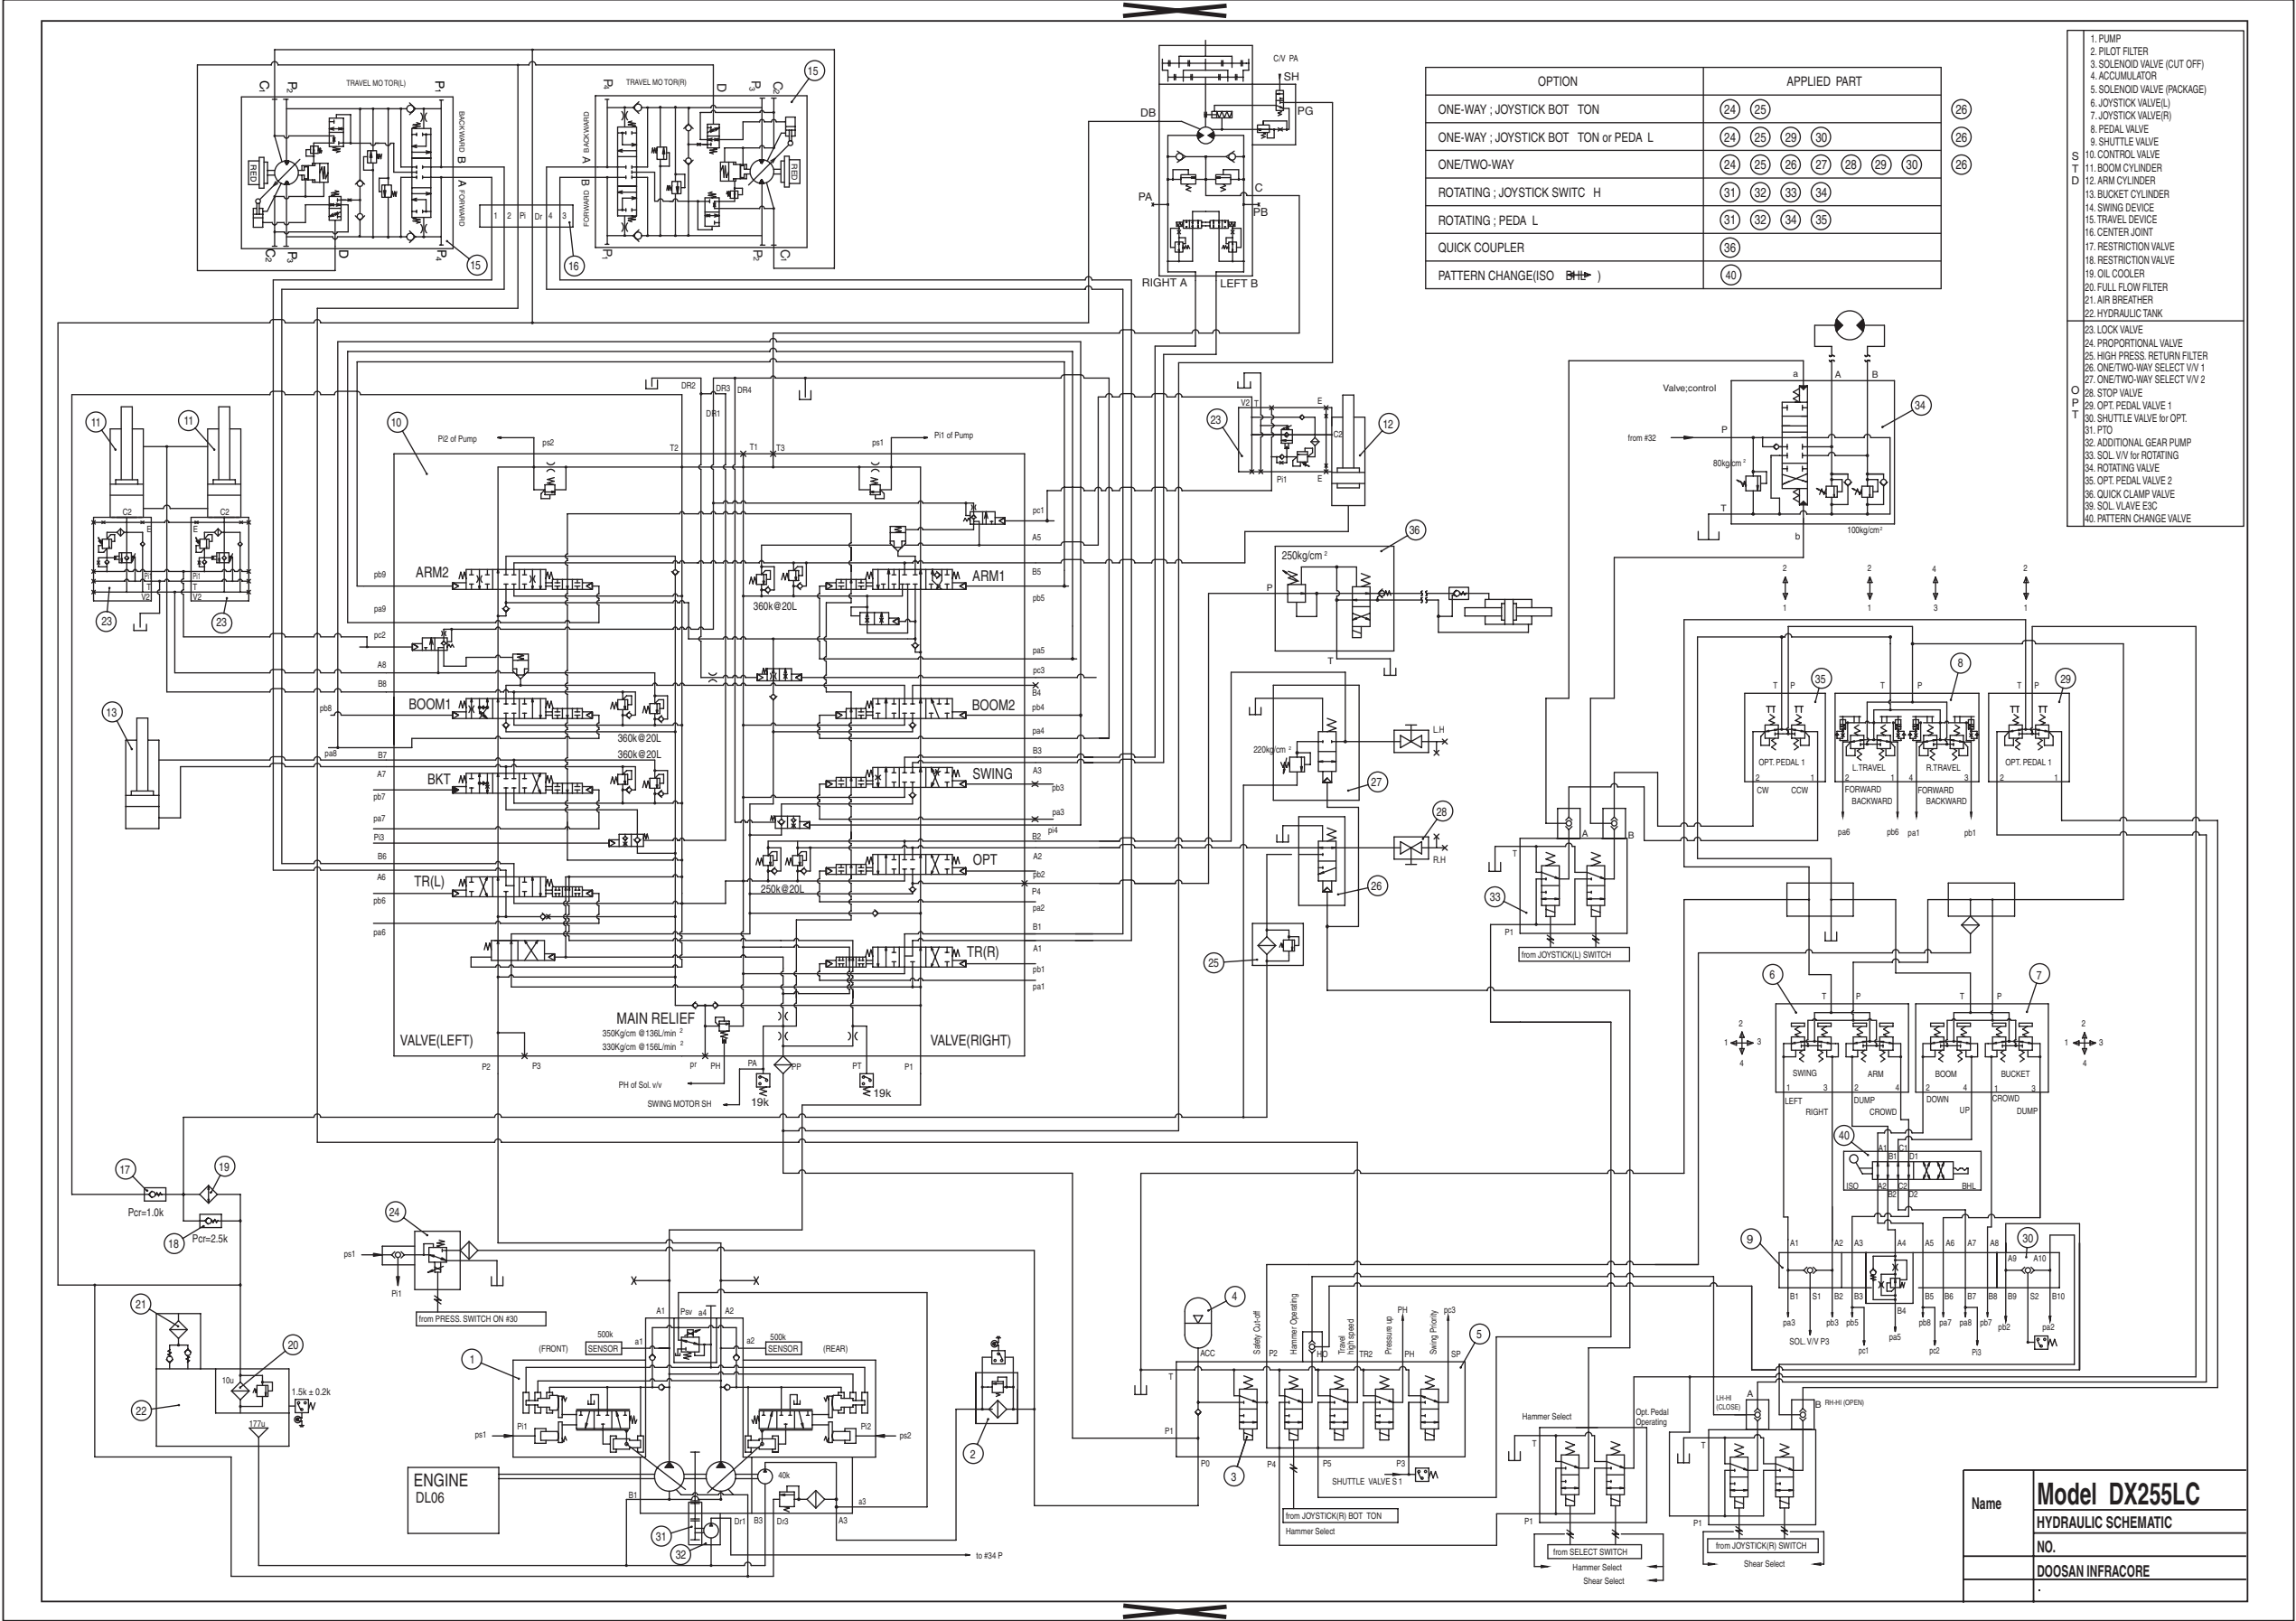

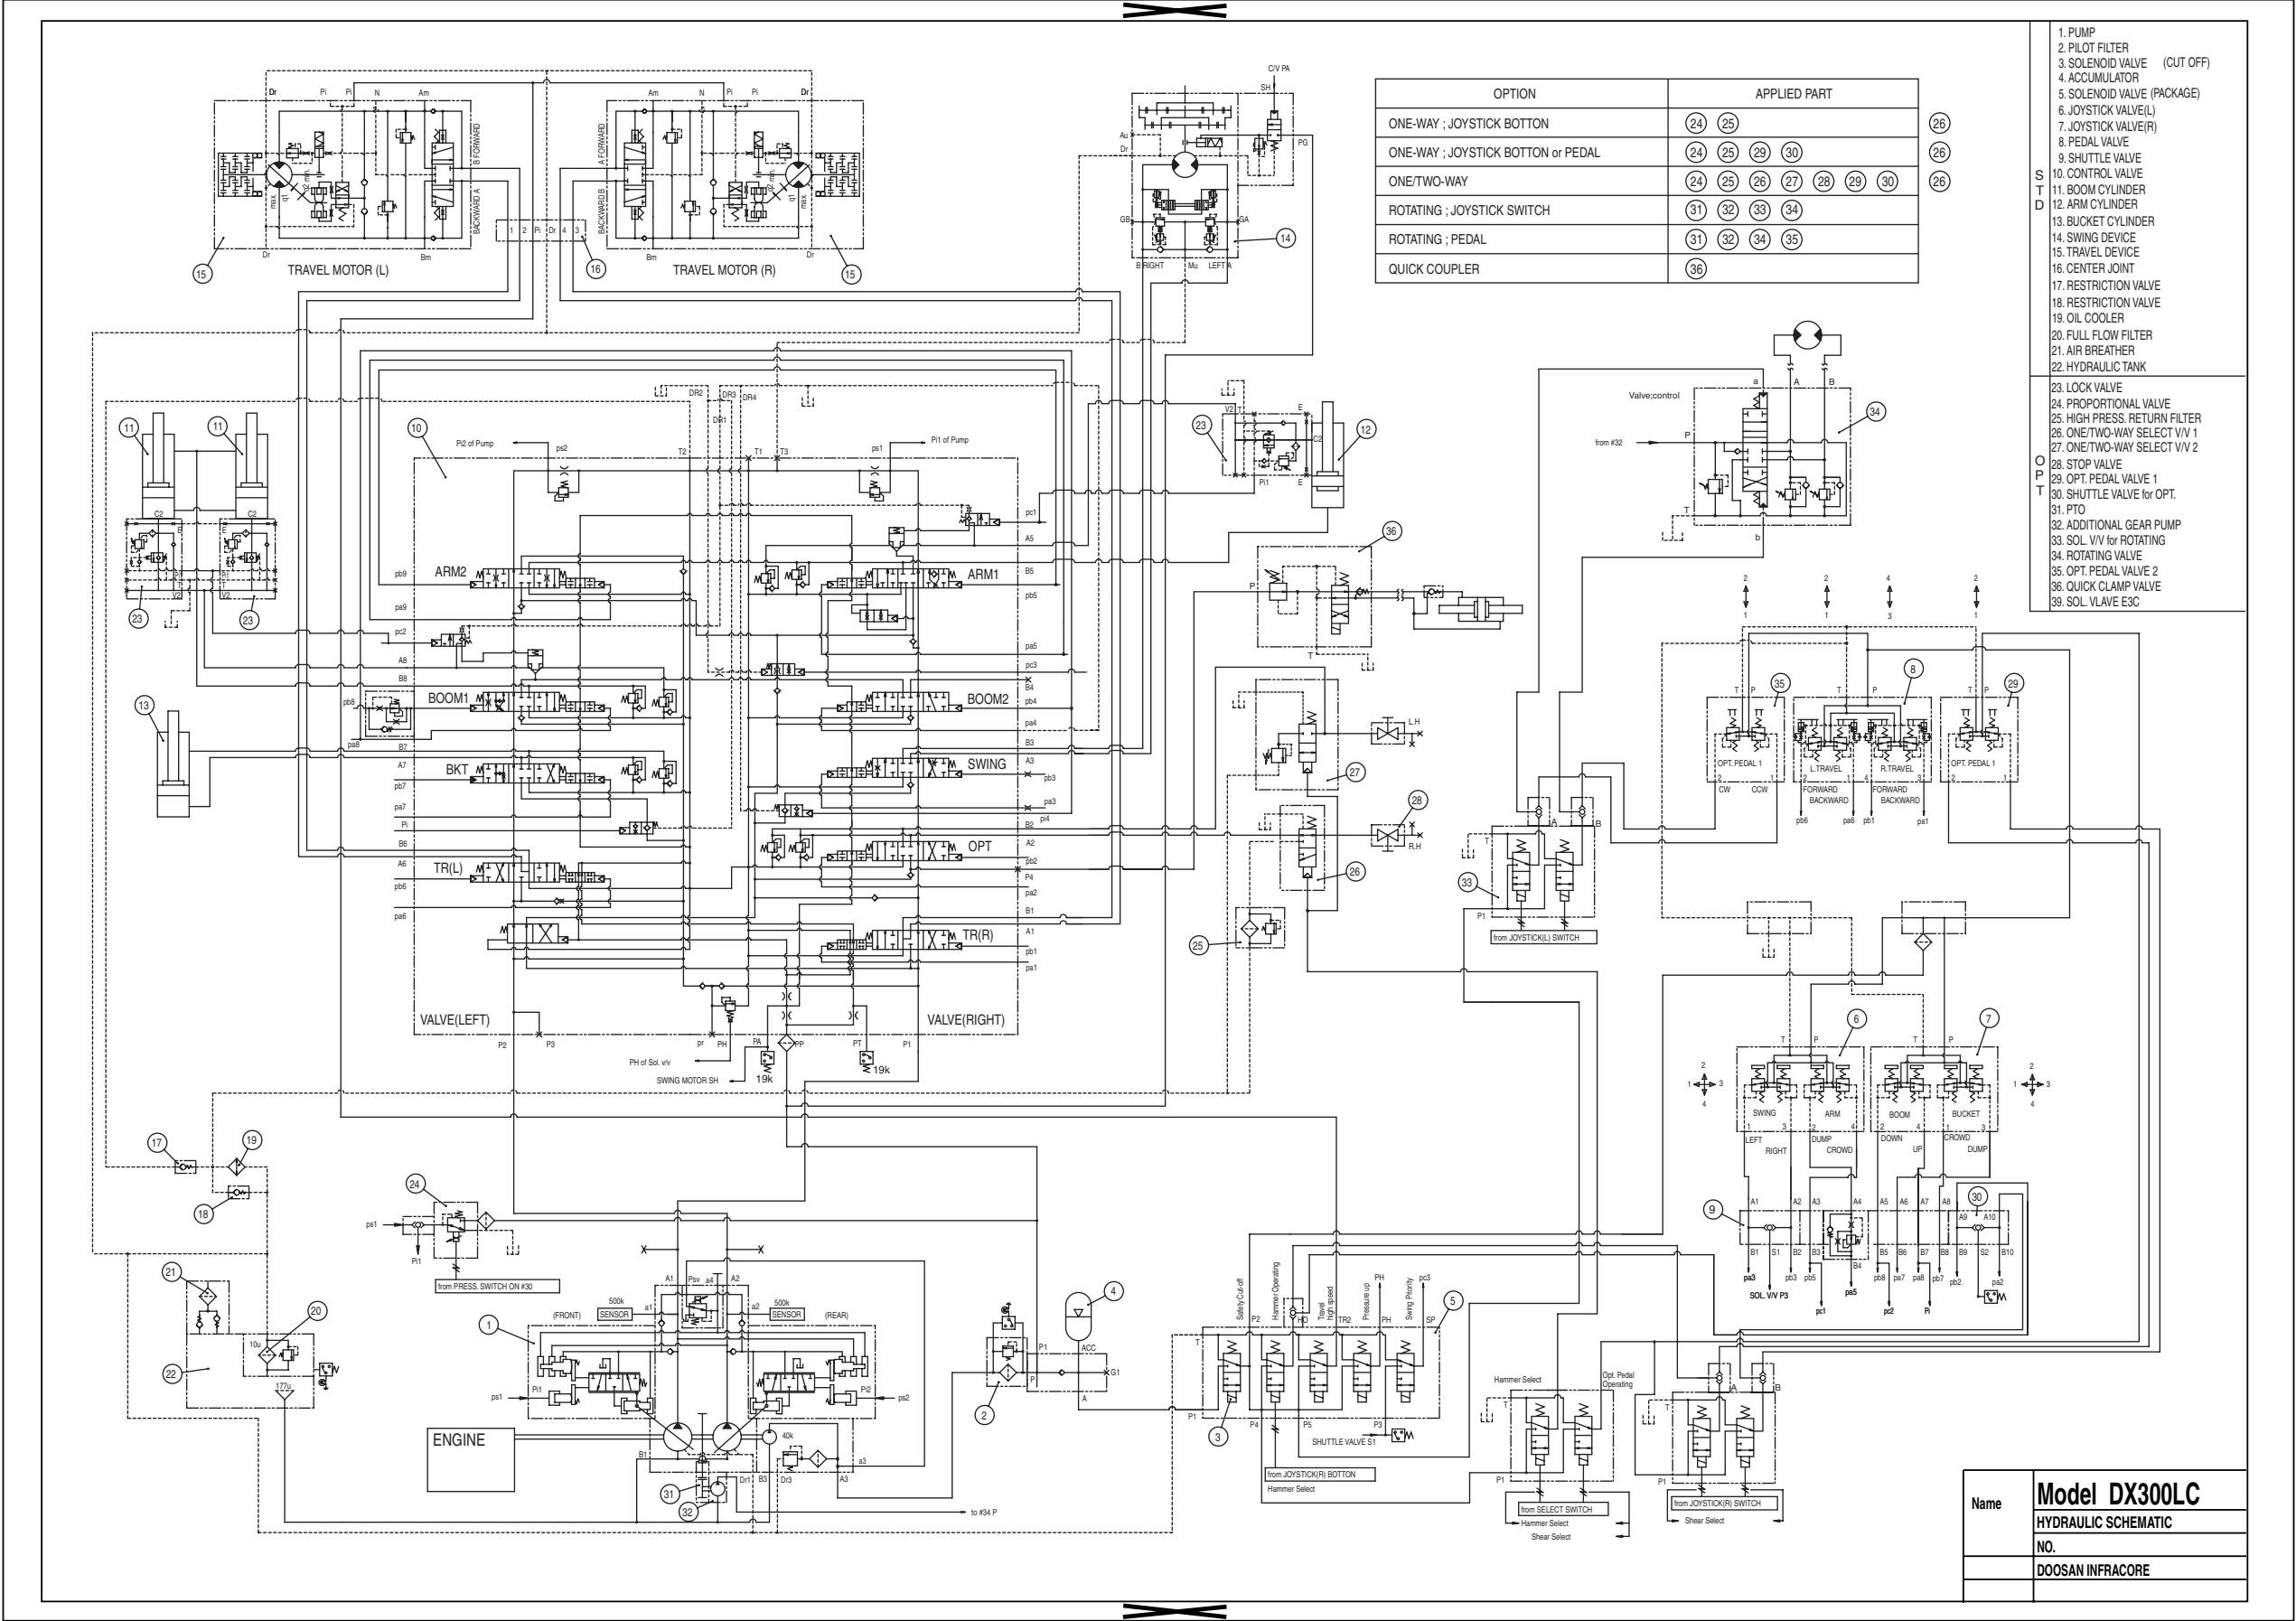


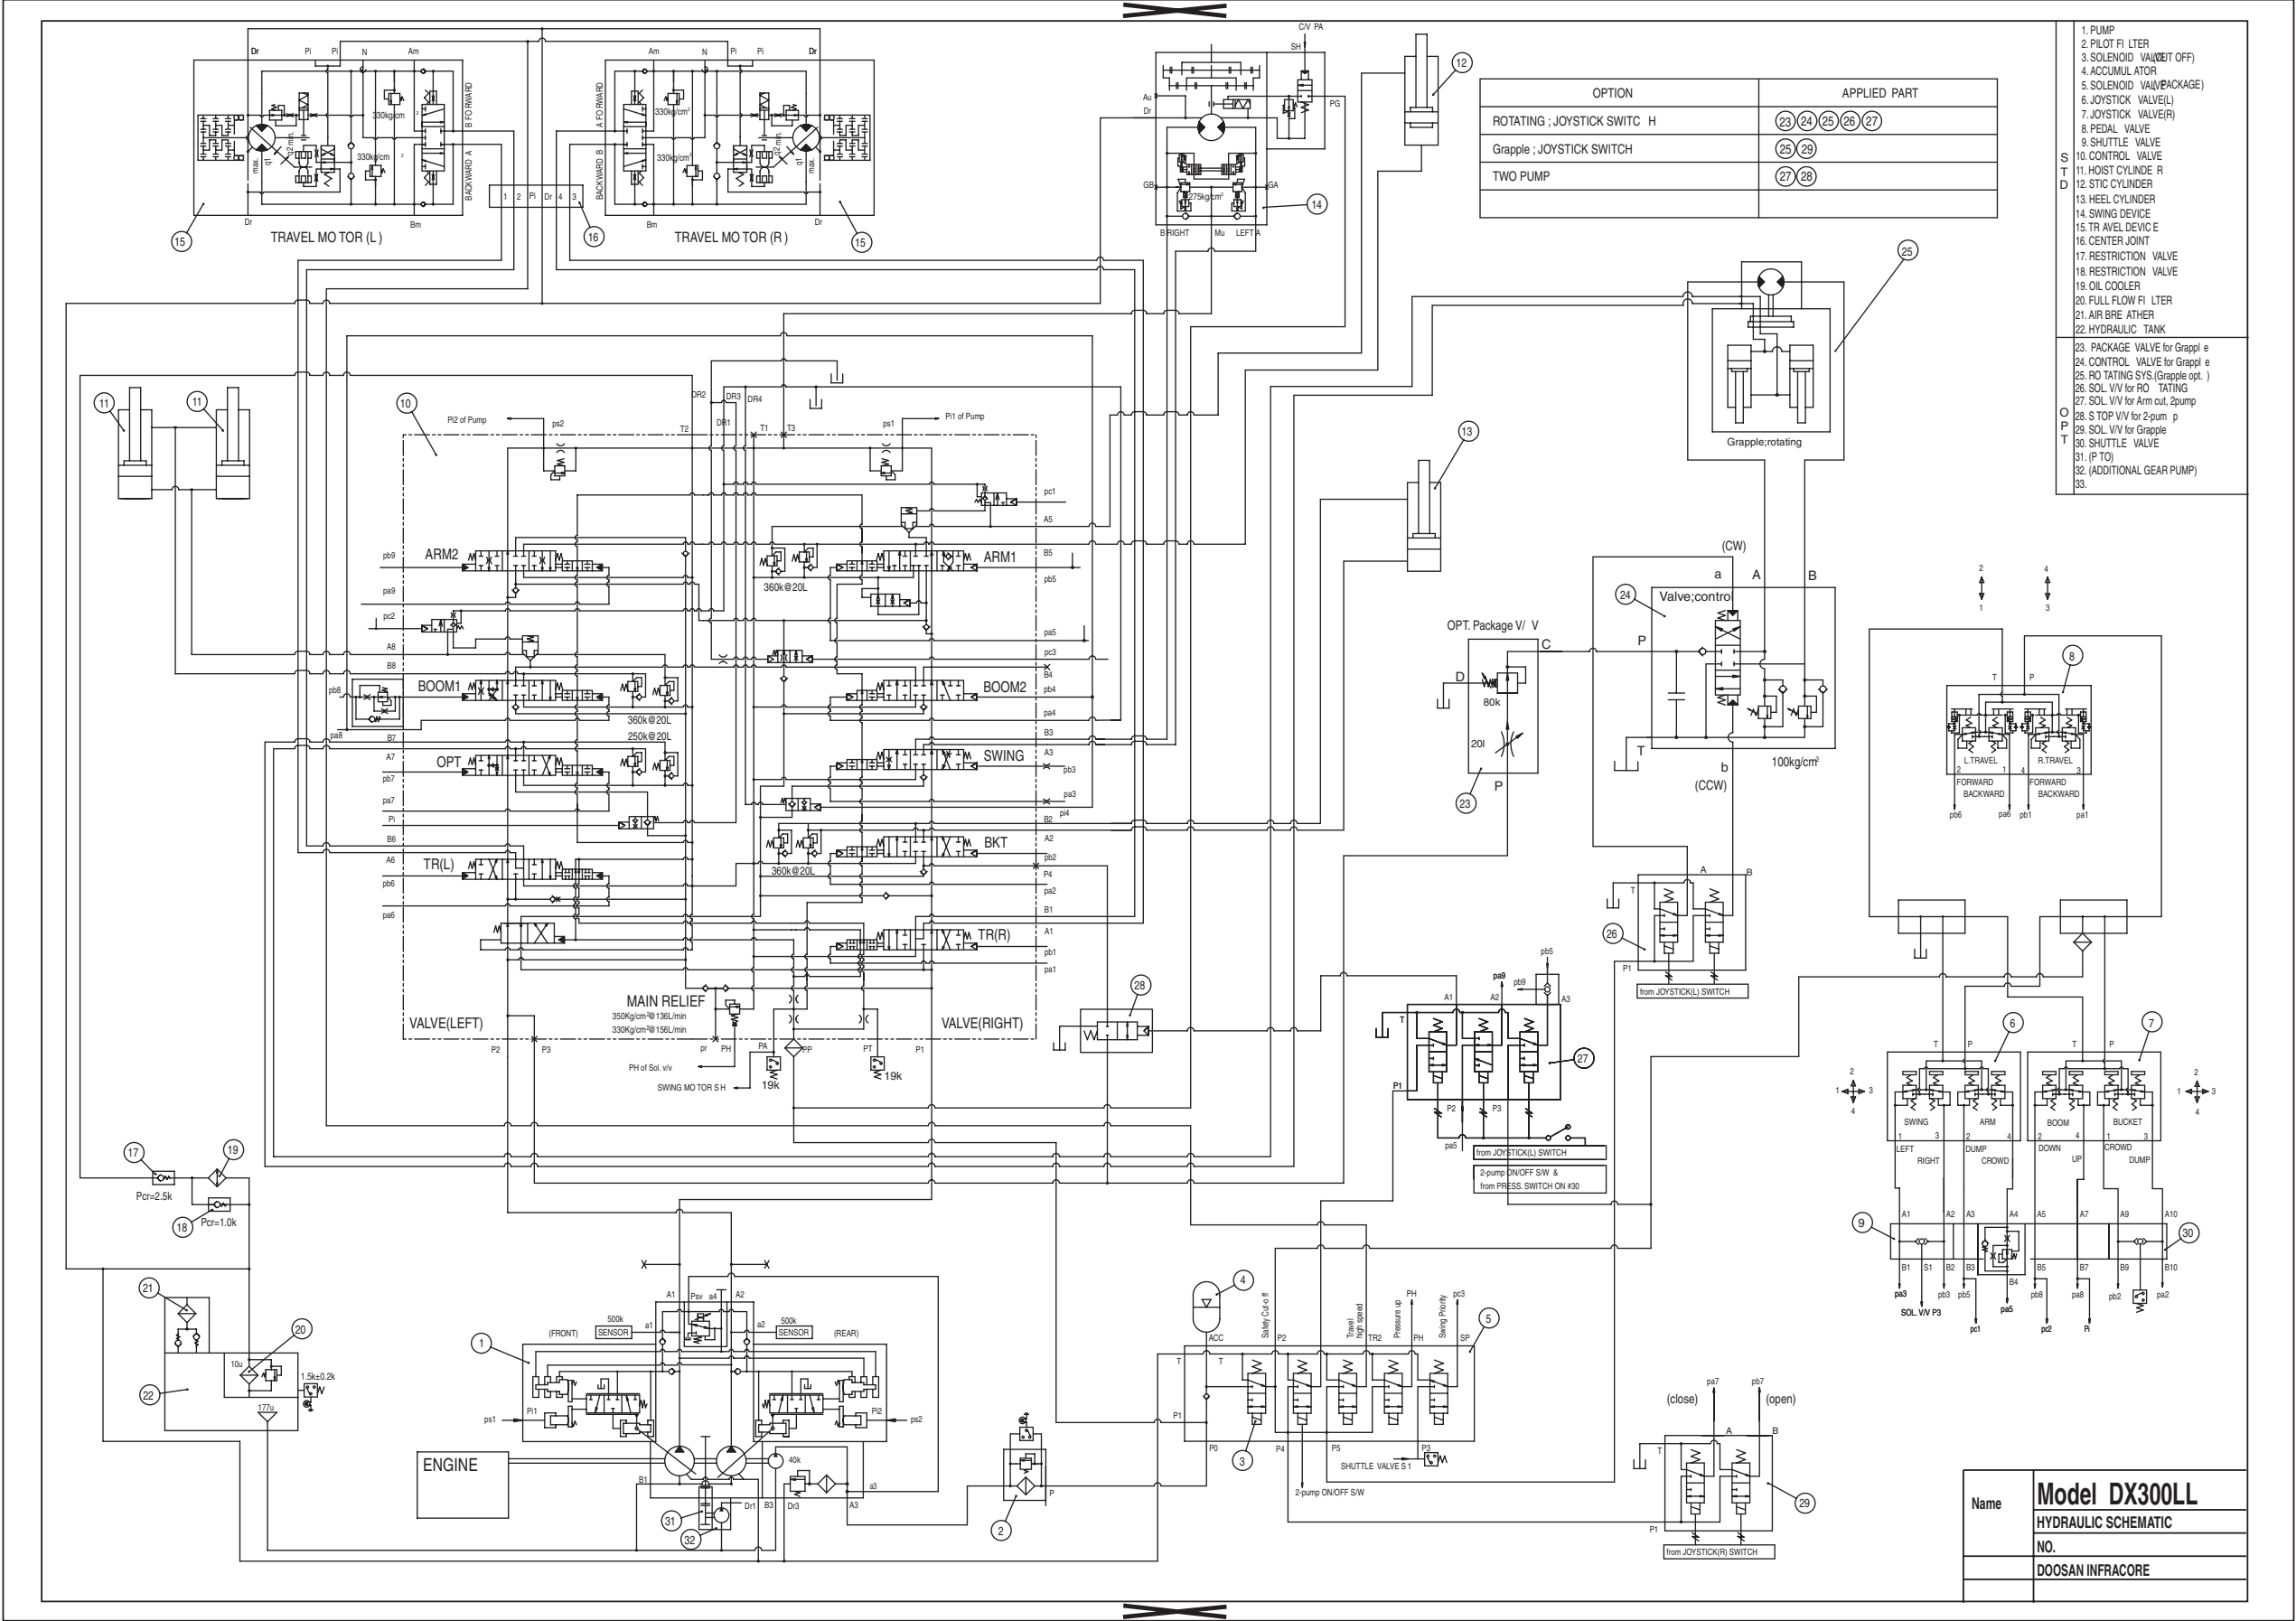

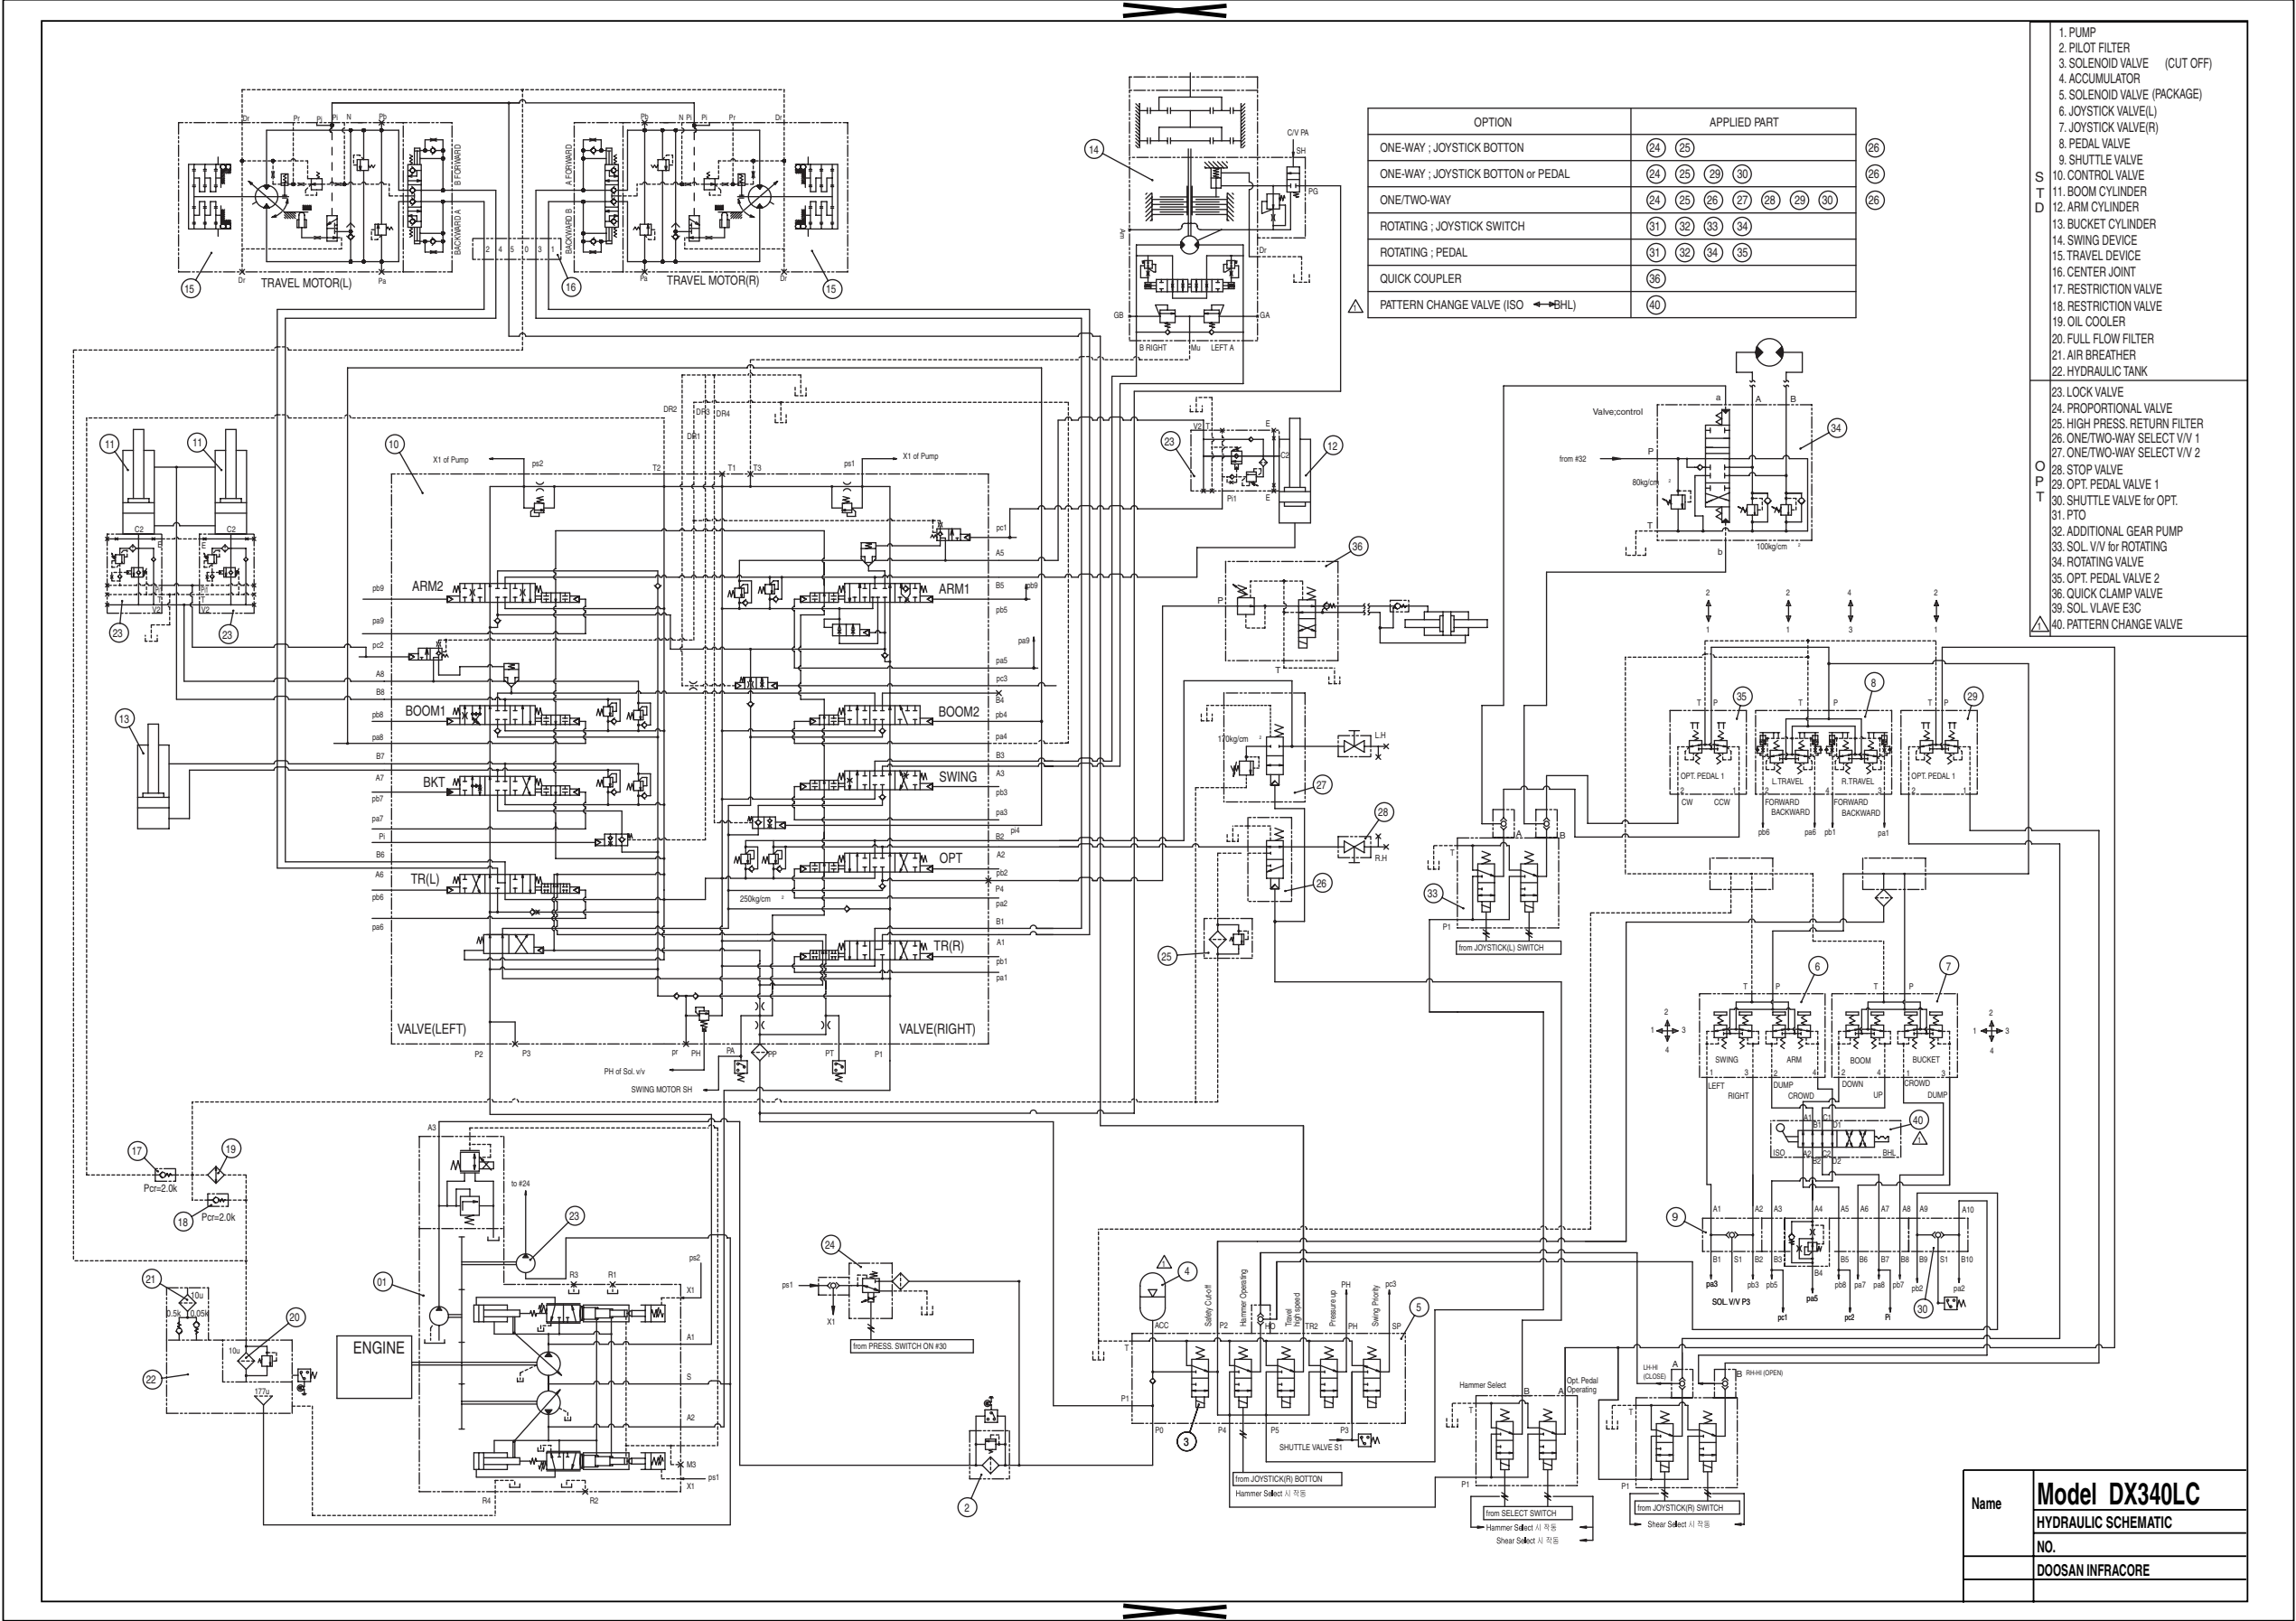

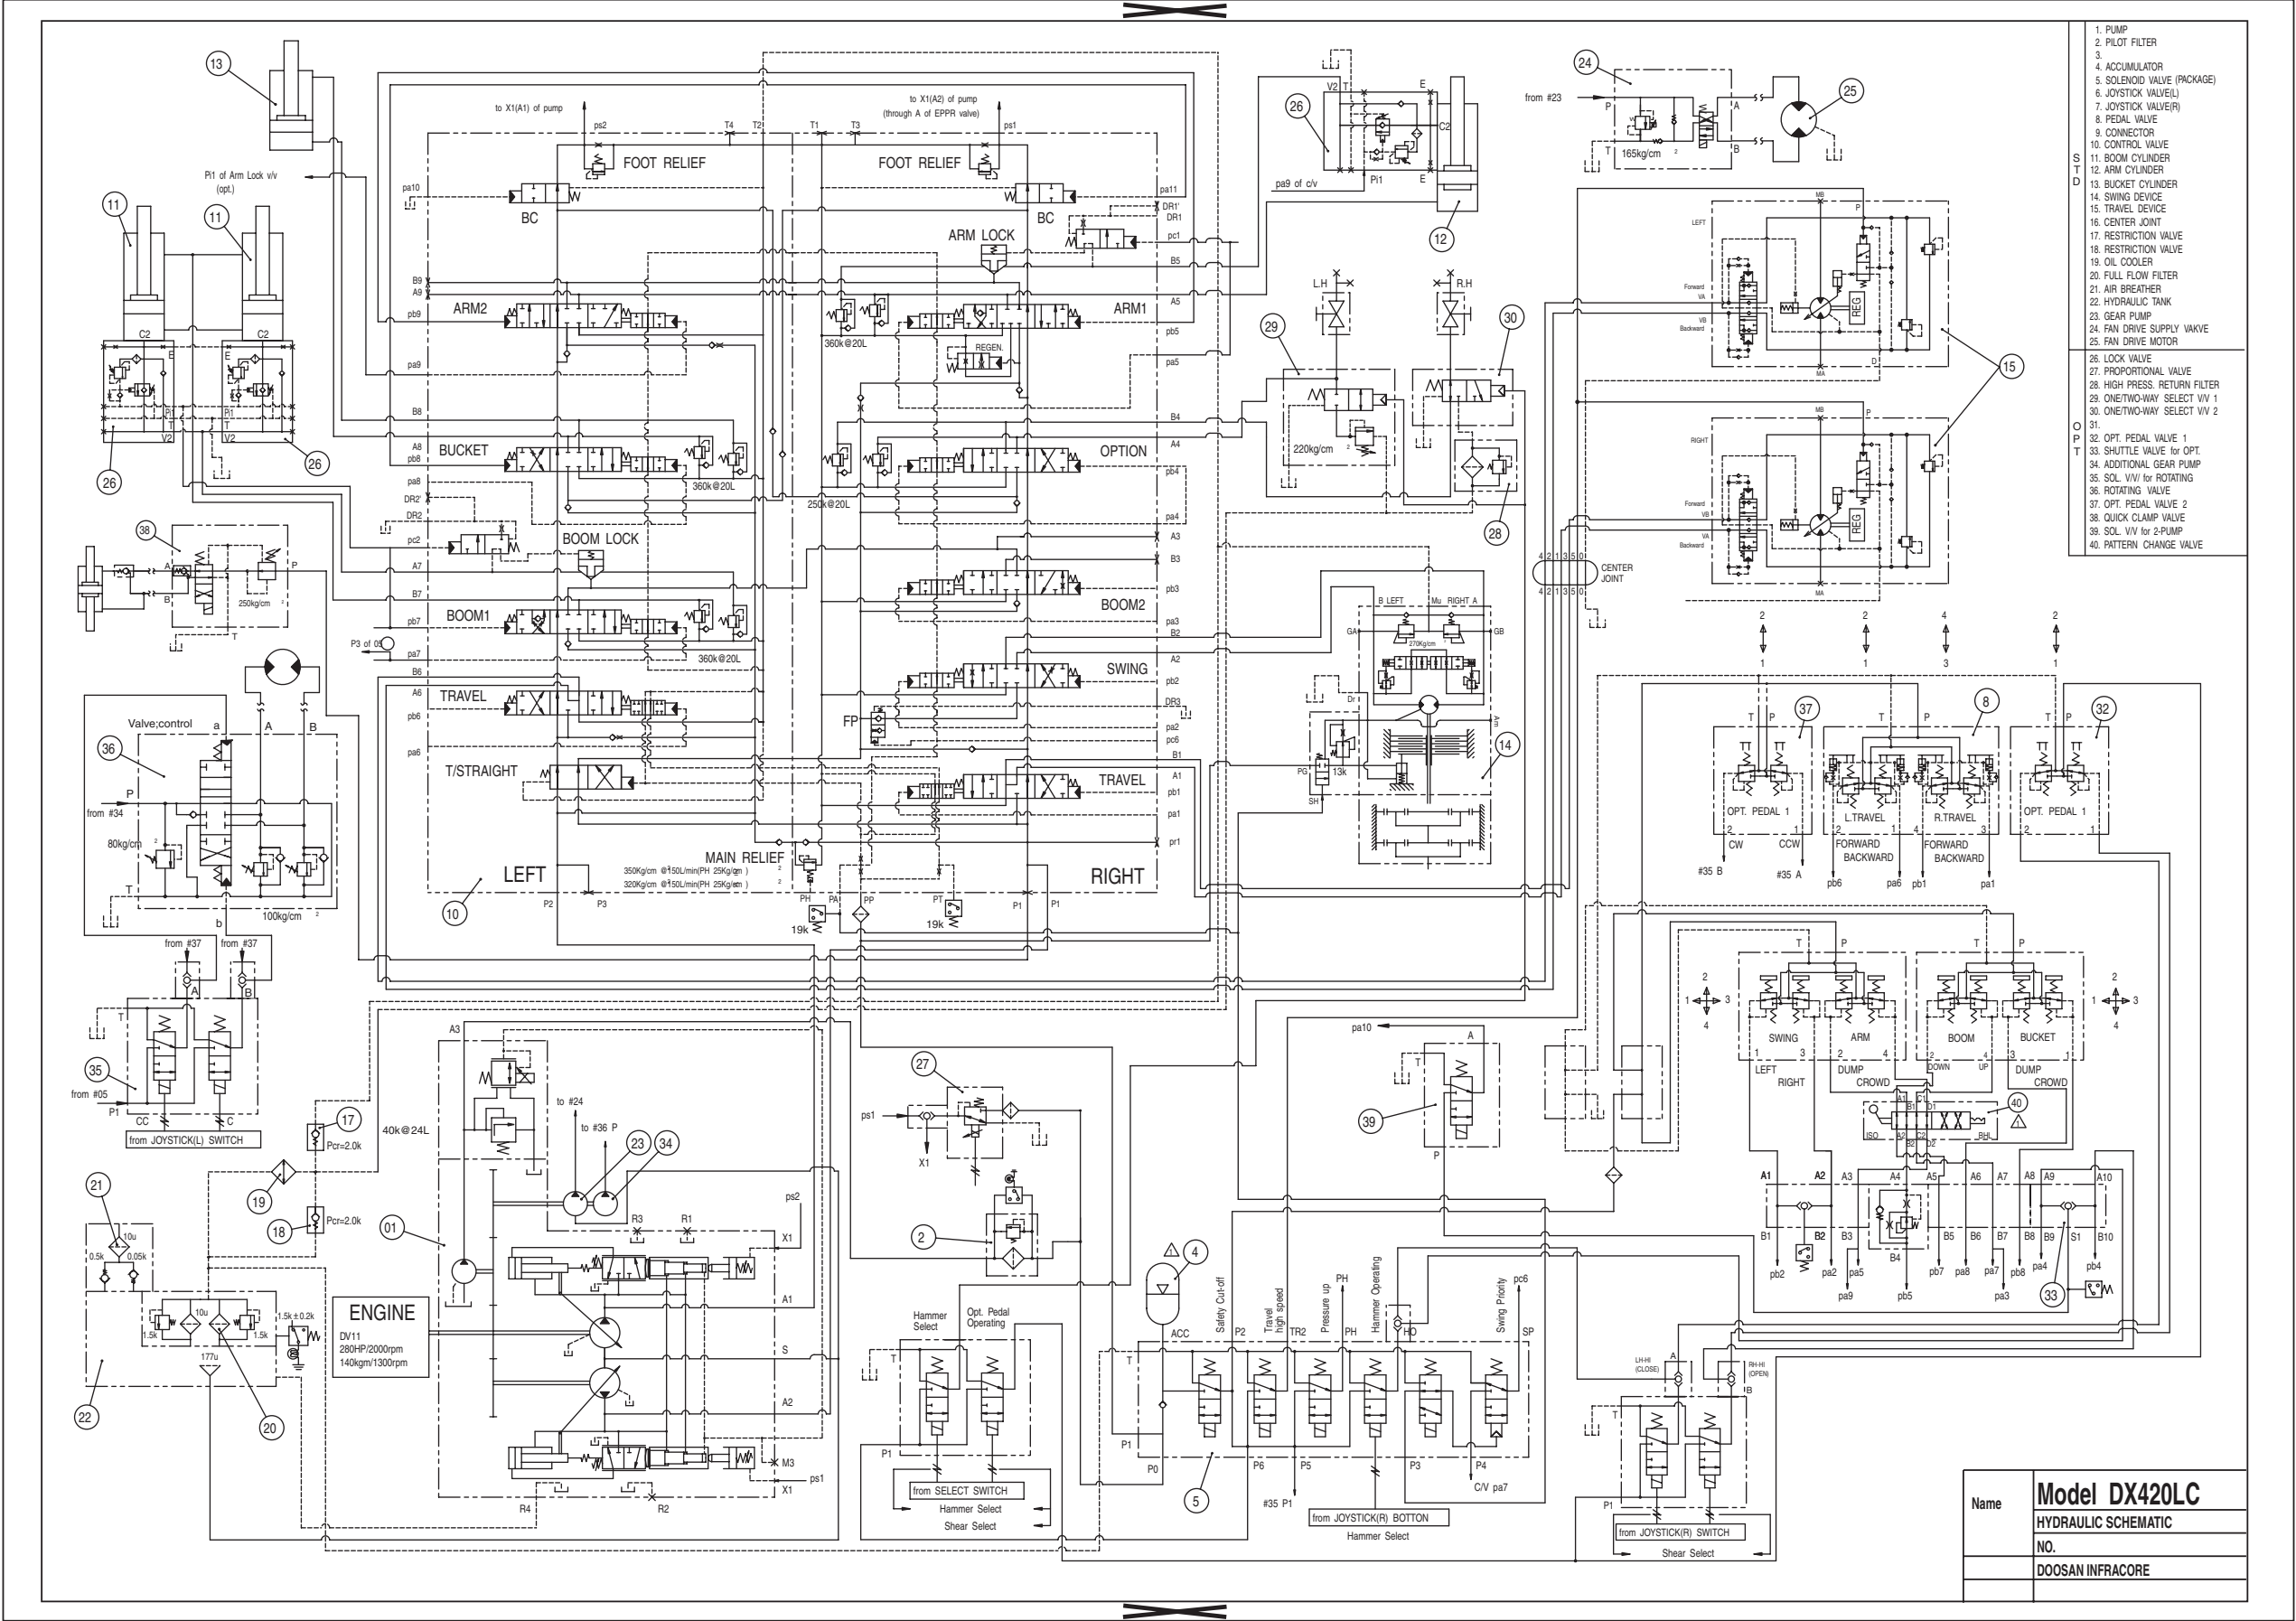

FG005206

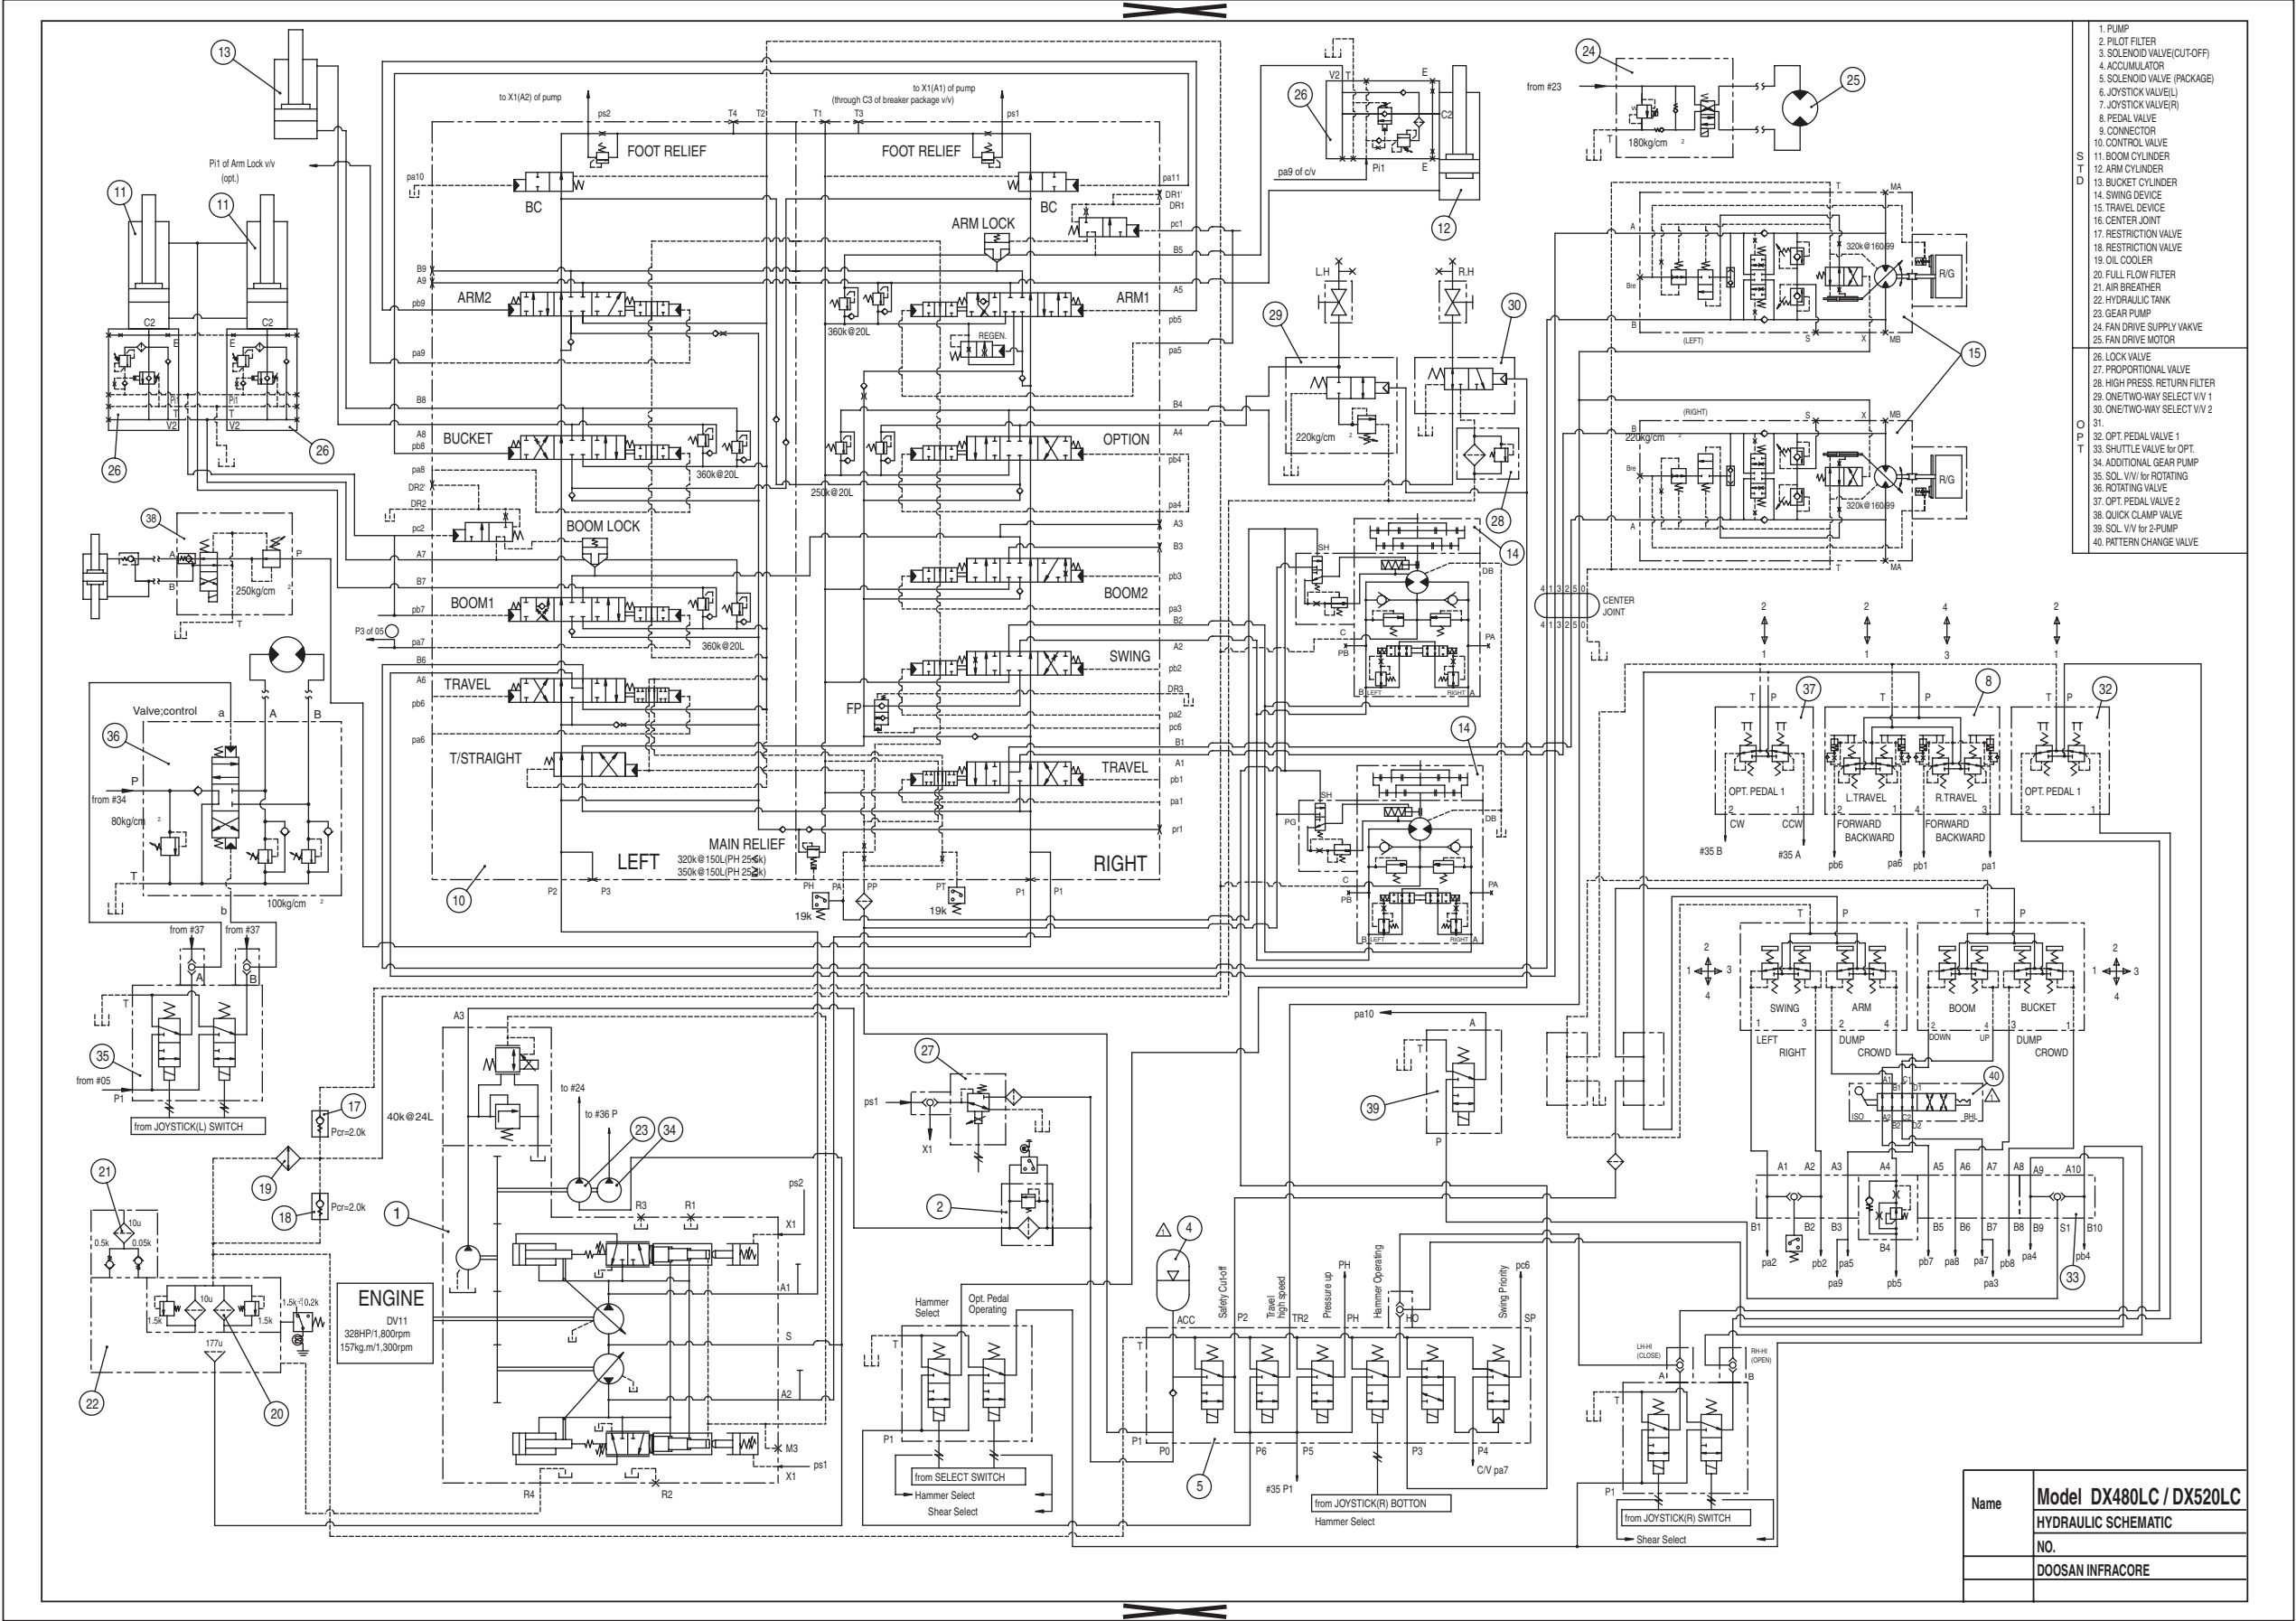

FG004717

TABLE OF CONTENTS

Electrical Circuits

Mega 130.....4

Mega 160 (S/N 0001 thru 1020)5

Mega 160 (w/Aux. Steering) (S/N 0001 thru 1020).....6

Mega 160 (S/N 1021 and Up).....7

Mega 200-III.....8

Mega 200-V (Tier I) (S/N 1001 thru 2000)9

Mega 200-V (Tier II) (S/N 2001 thru 3000)10

Mega 200-V (S/N 3001 and Up)11

Mega 250-III.....12

Mega 250-V (Tier I).....13

Mega 250-V (Tier II).....14

Mega 300-III.....15

Mega 300-V16

Mega 400-III.....17

Mega 400-III PLUS18

Mega 400-V19

Mega 500-V (Tier II).....20

Hydraulic Circuits

Mega 130.....22

Mega 160 (Main) (S/N 0001 thru 1020)23

Mega 160 (Option) (S/N 0001 thru 1020)24

Mega 160 (Main) (S/N 1021 and Up).....25

Mega 160 (with Aux. Steering) (S/N 1021 and Up)26

Mega 200-III.....27

Mega 200-V (Standard) (S/N 1001 thru 3000)28

Mega 200-V (Option) (S/N 1001 thru 3000)29

Mega 200-V (Option) (S/N 3001 and Up)30

Mega 250-III.....31

Mega 250-V (Tier I) S/N 1001 thru 200032

Mega 250-V (Tier II) S/N 2001 thru 300033

Mega 250-V (Tier I) S/N 3001 thru 400034

Mega 250-V (Tier II) S/N 4001 and Up.....35

Mega 250-V (w/EHPS Valve).....36

Mega 300-III.....37

Mega 300-V (Tier I) (S/N 1001 thru 2000).....38

Mega 300-V (Tier II) (S/N 2001 and Up).....39

Mega 300-V (Tier II) (S/N 2001 and Up w/EHPS Valve)40

Mega 400-III.....41

Mega 400-III PLUS42


Mega 400-V (S/N 1001 thru 3000)43


Mega 400-V (S/N 3001 and Up)44

Mega 500-V45


Mega 500-V (Tier II).....46




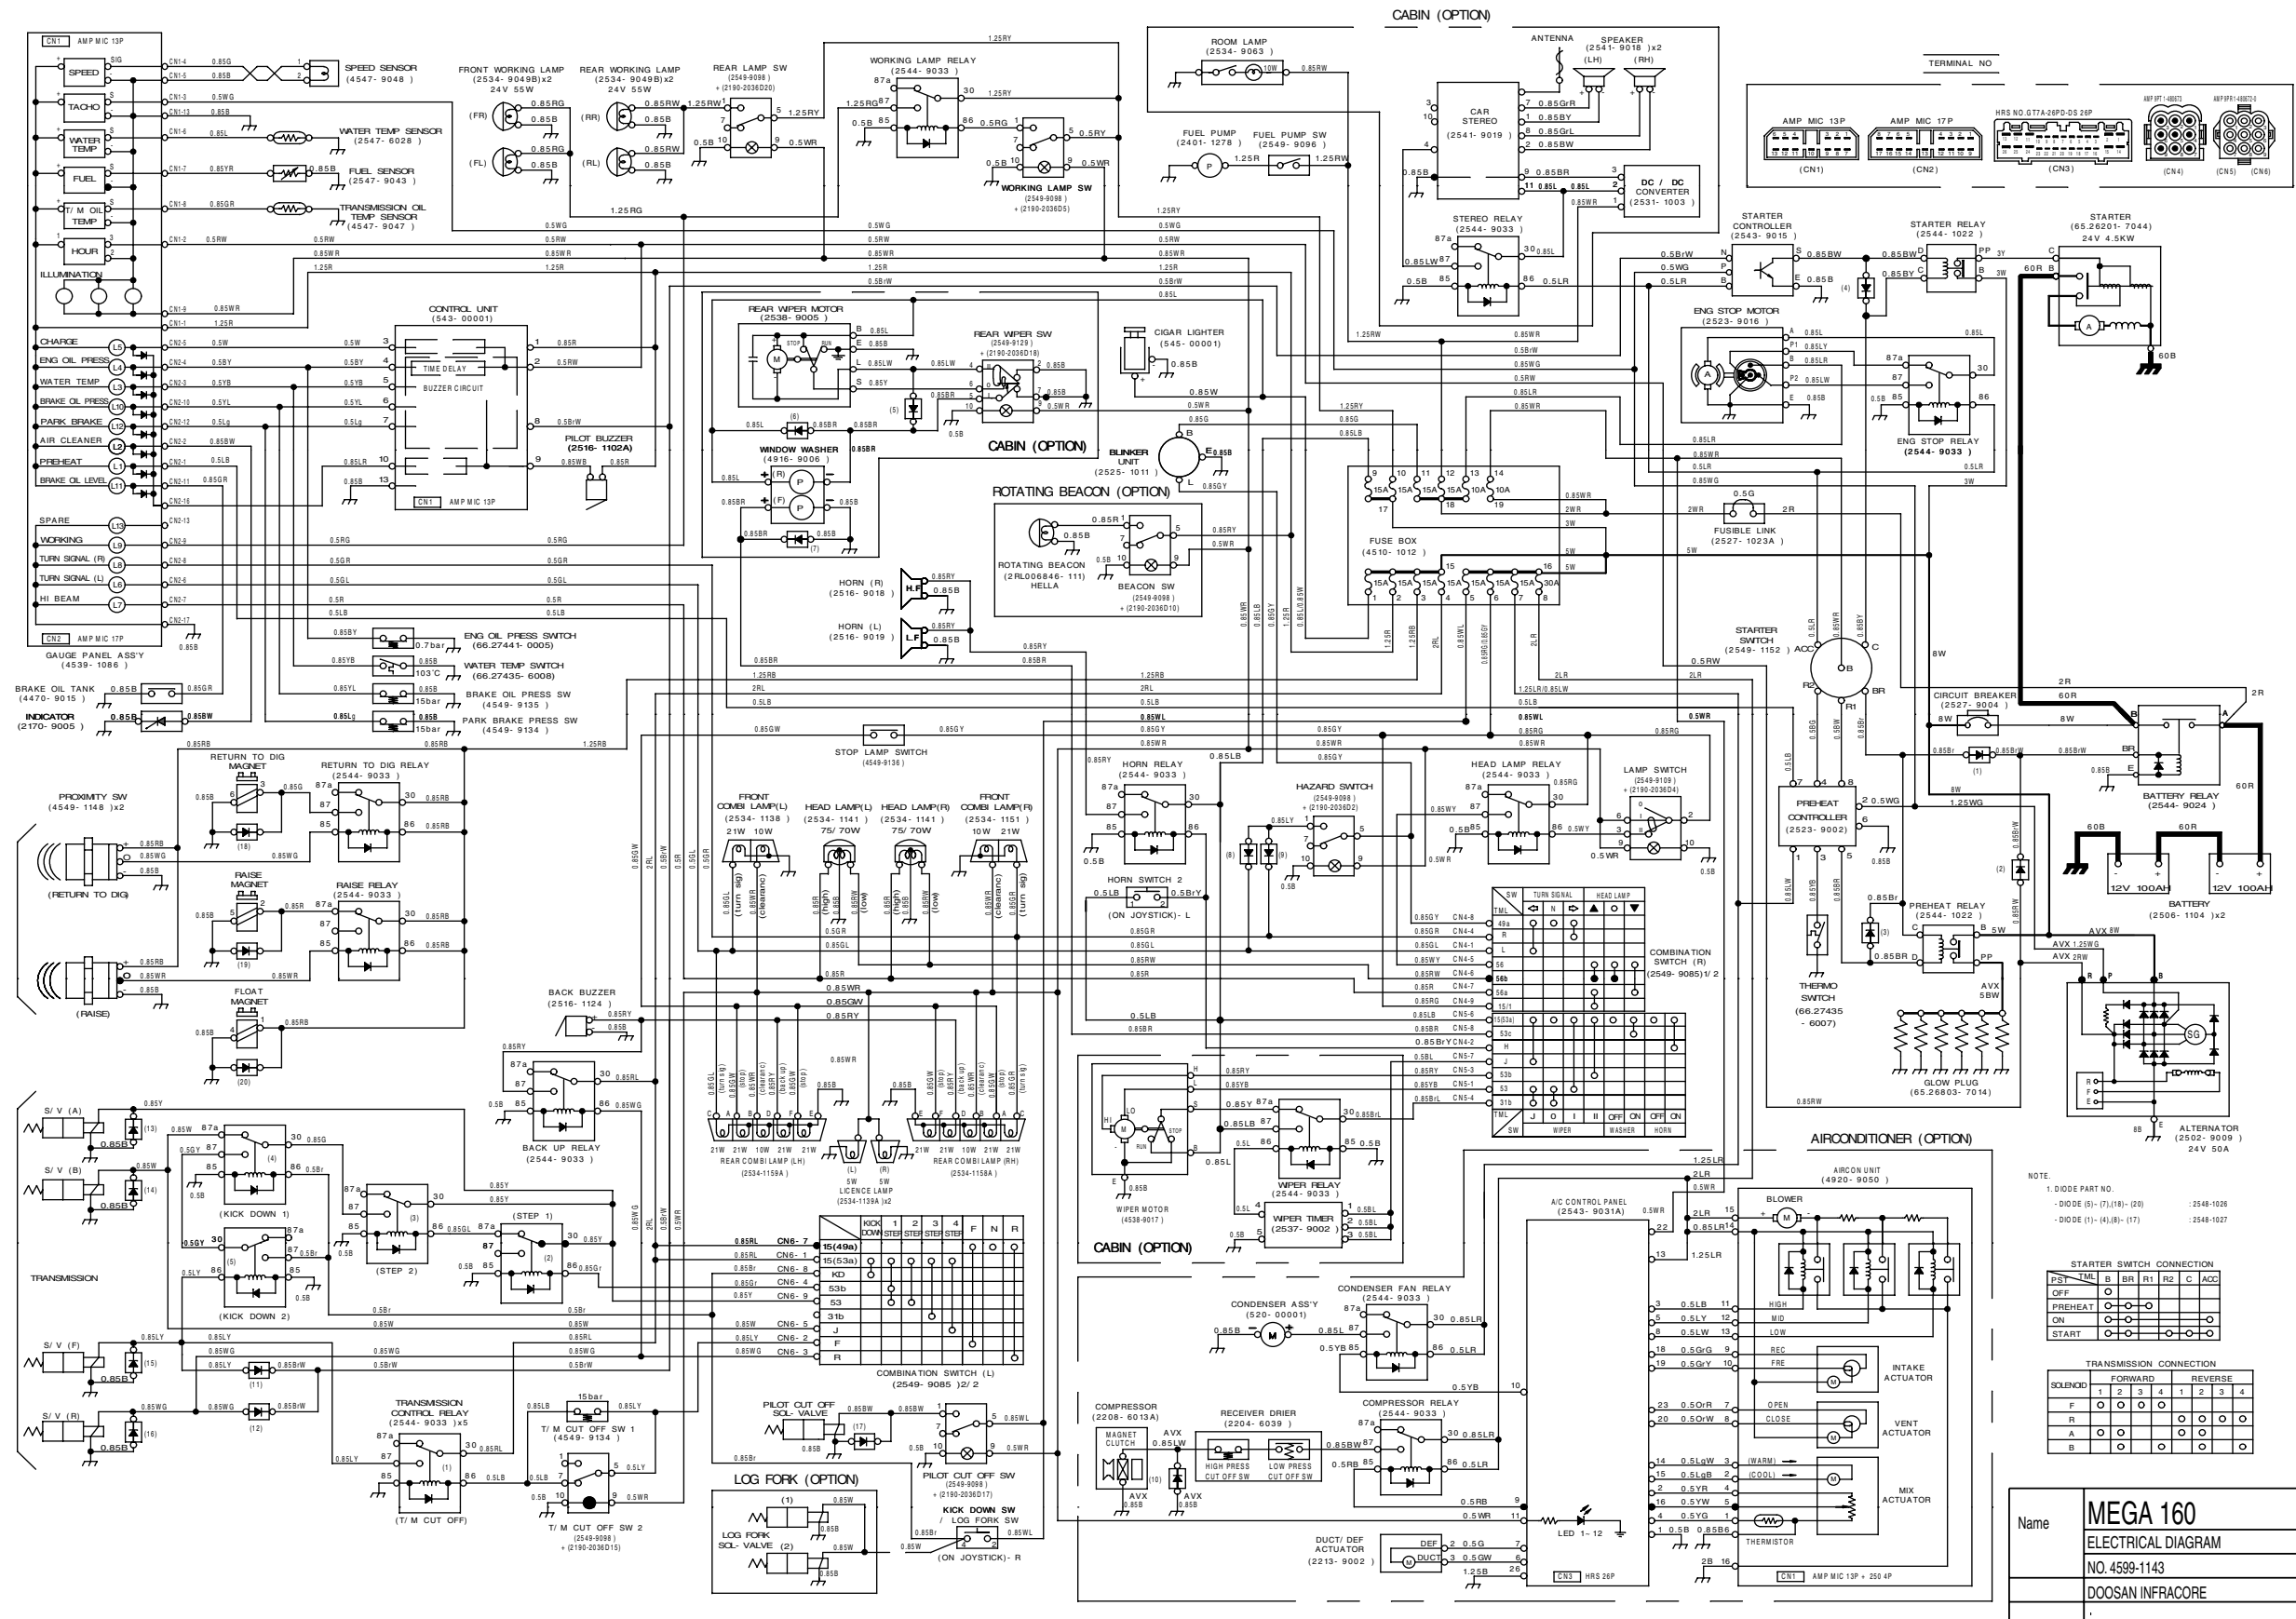

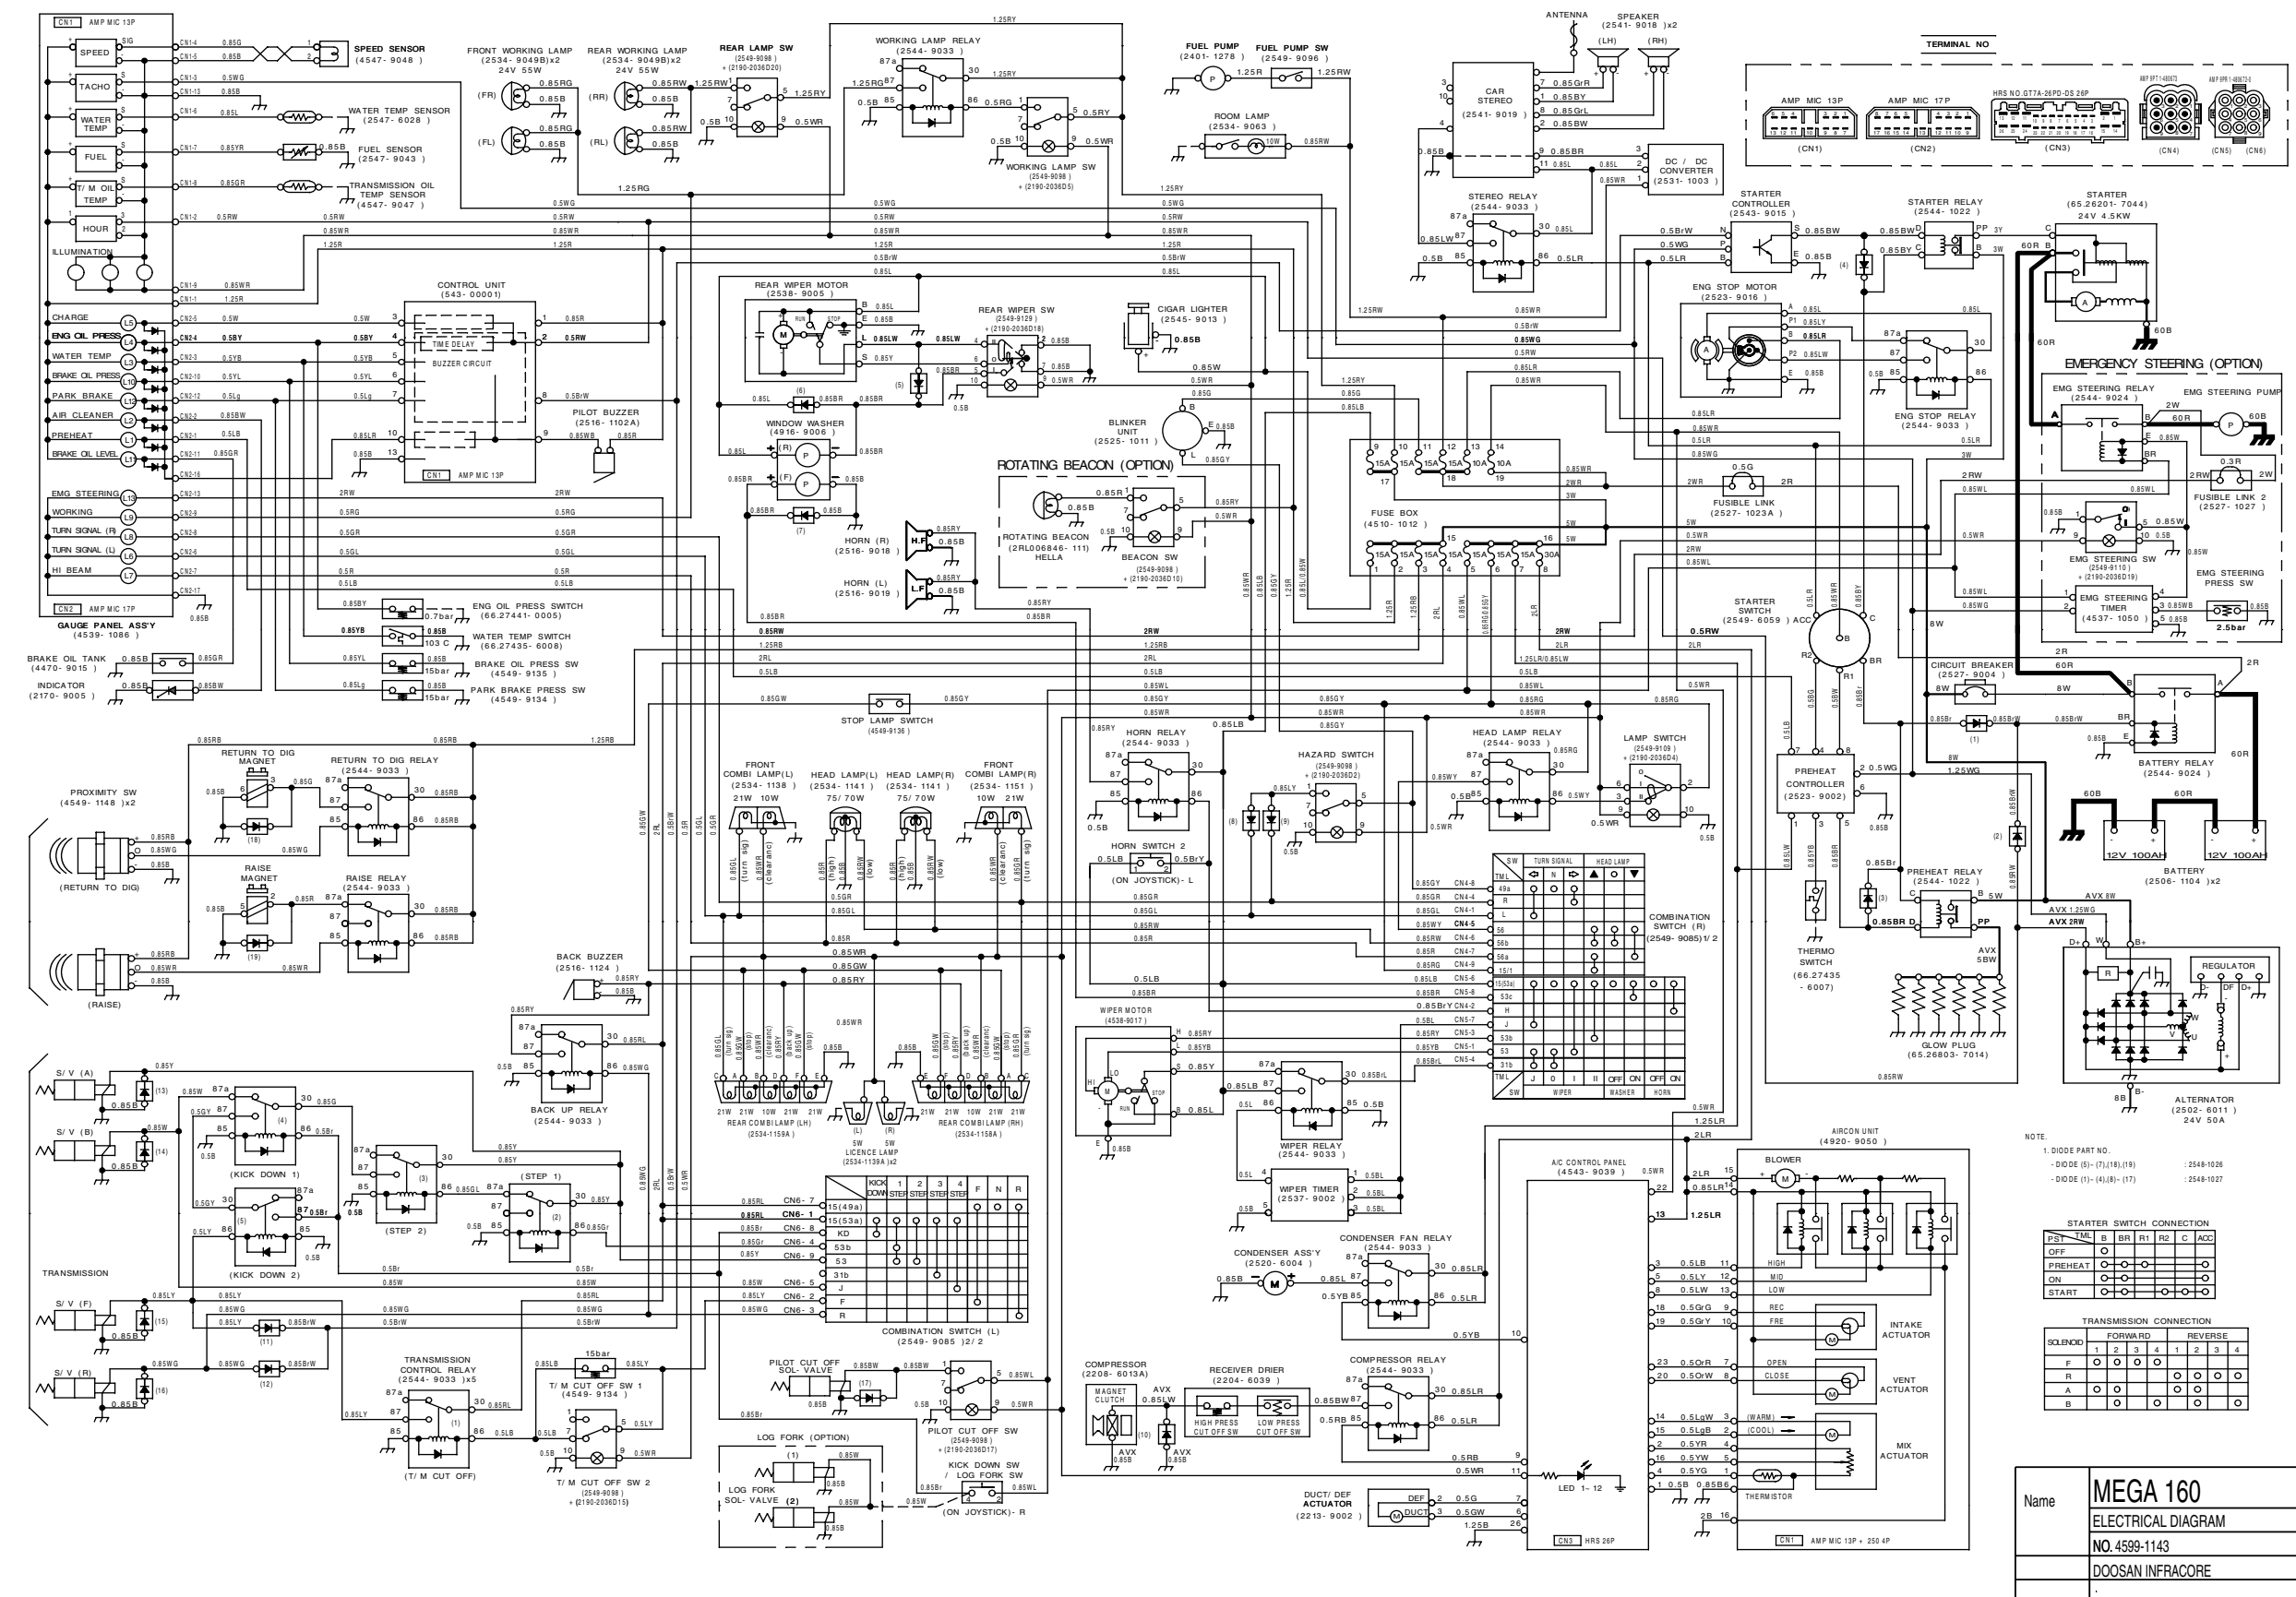


HAAD0030

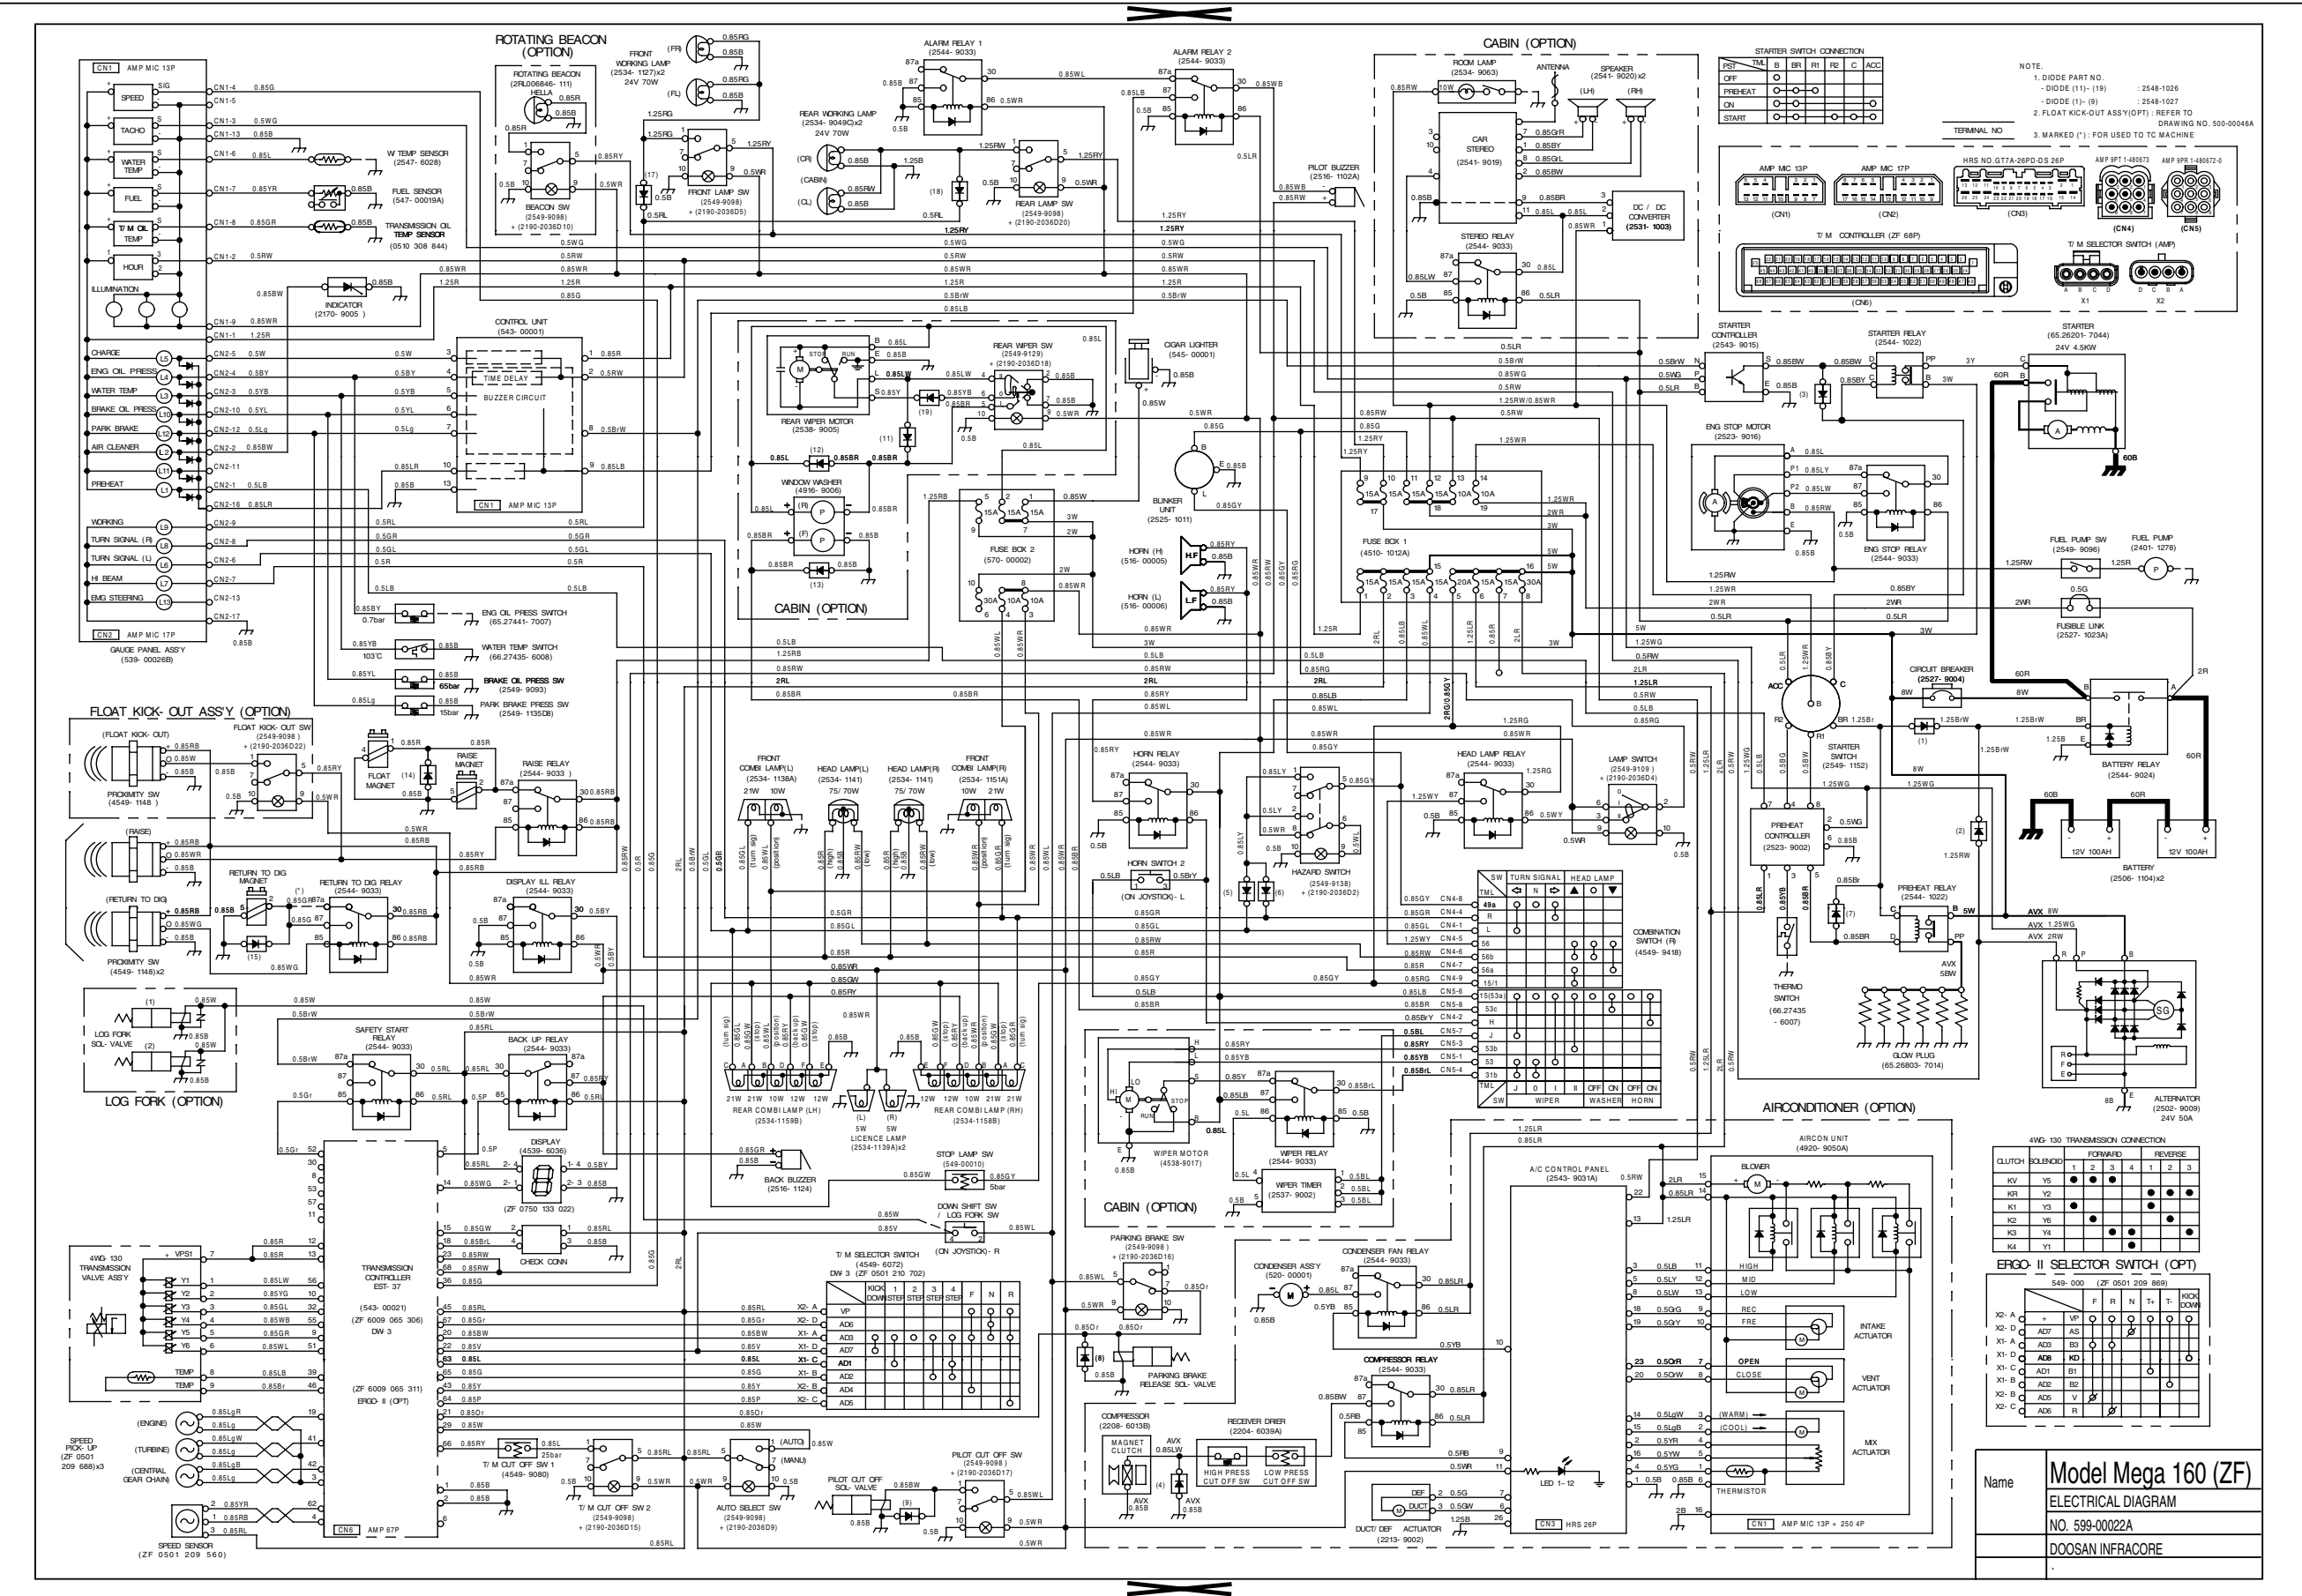

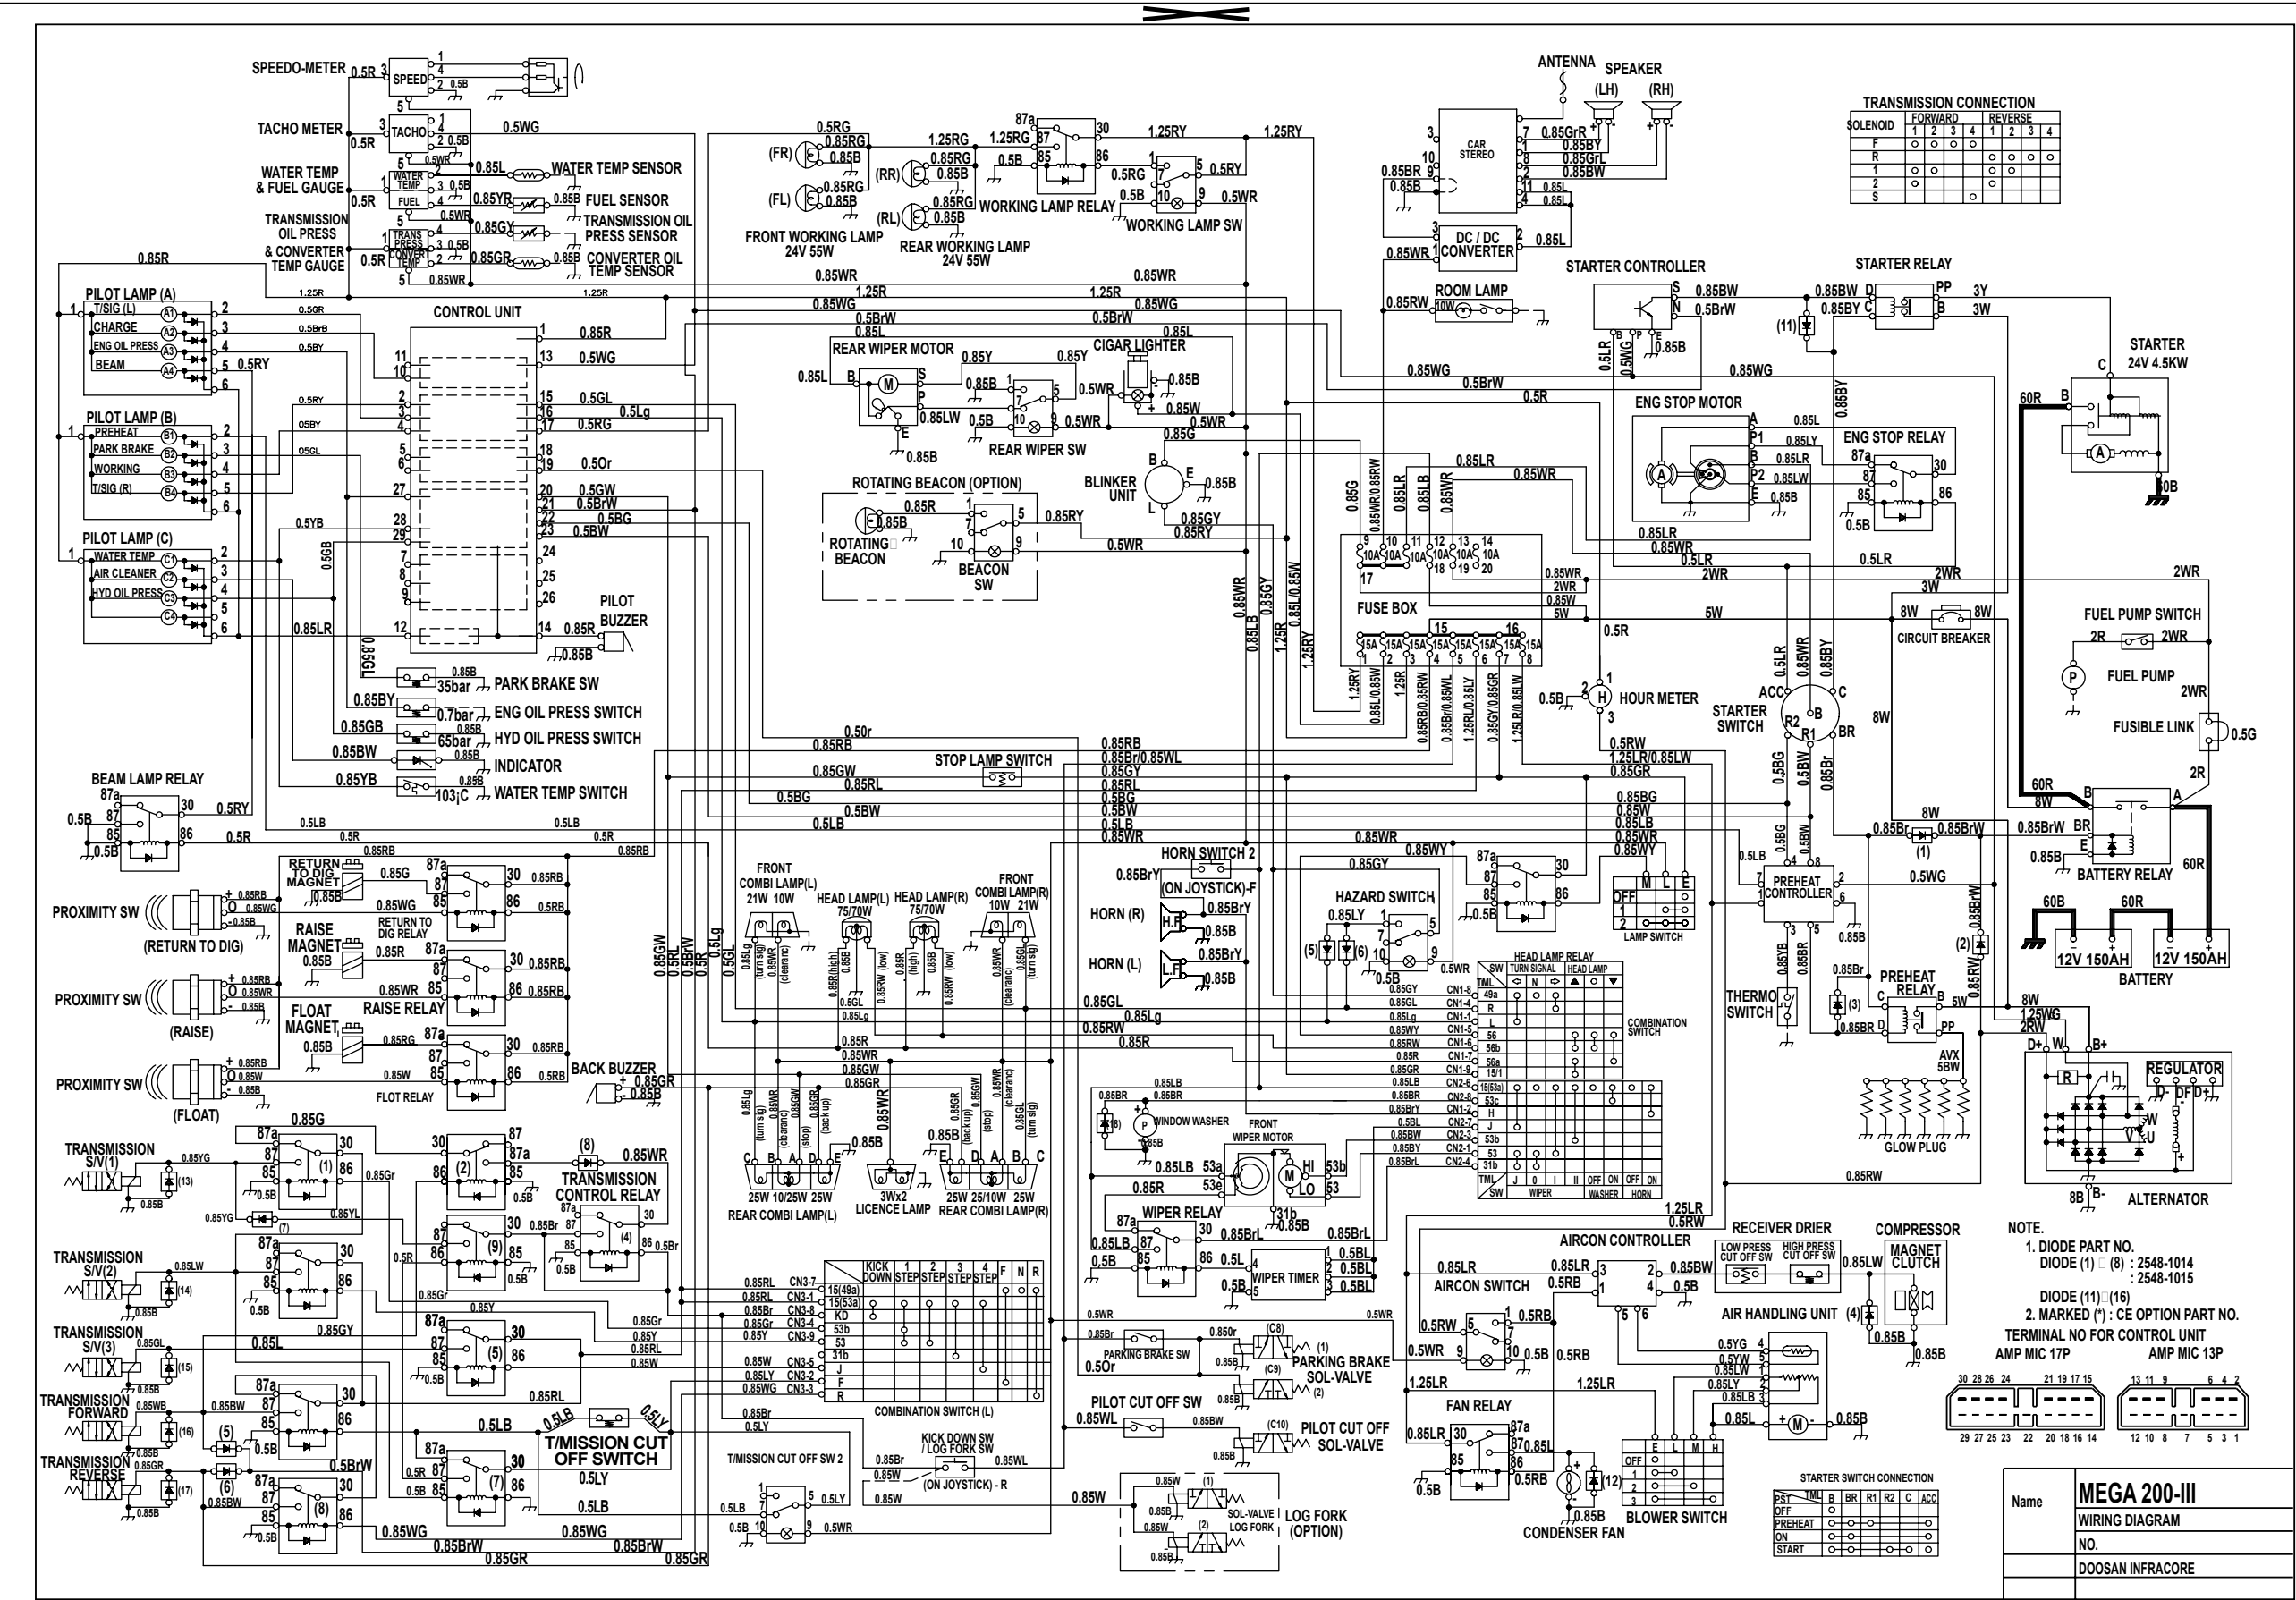

MEGA 200-V (TIER I) (S/N 1001 THRU 2000)


<https://truckmanualshub.com/>

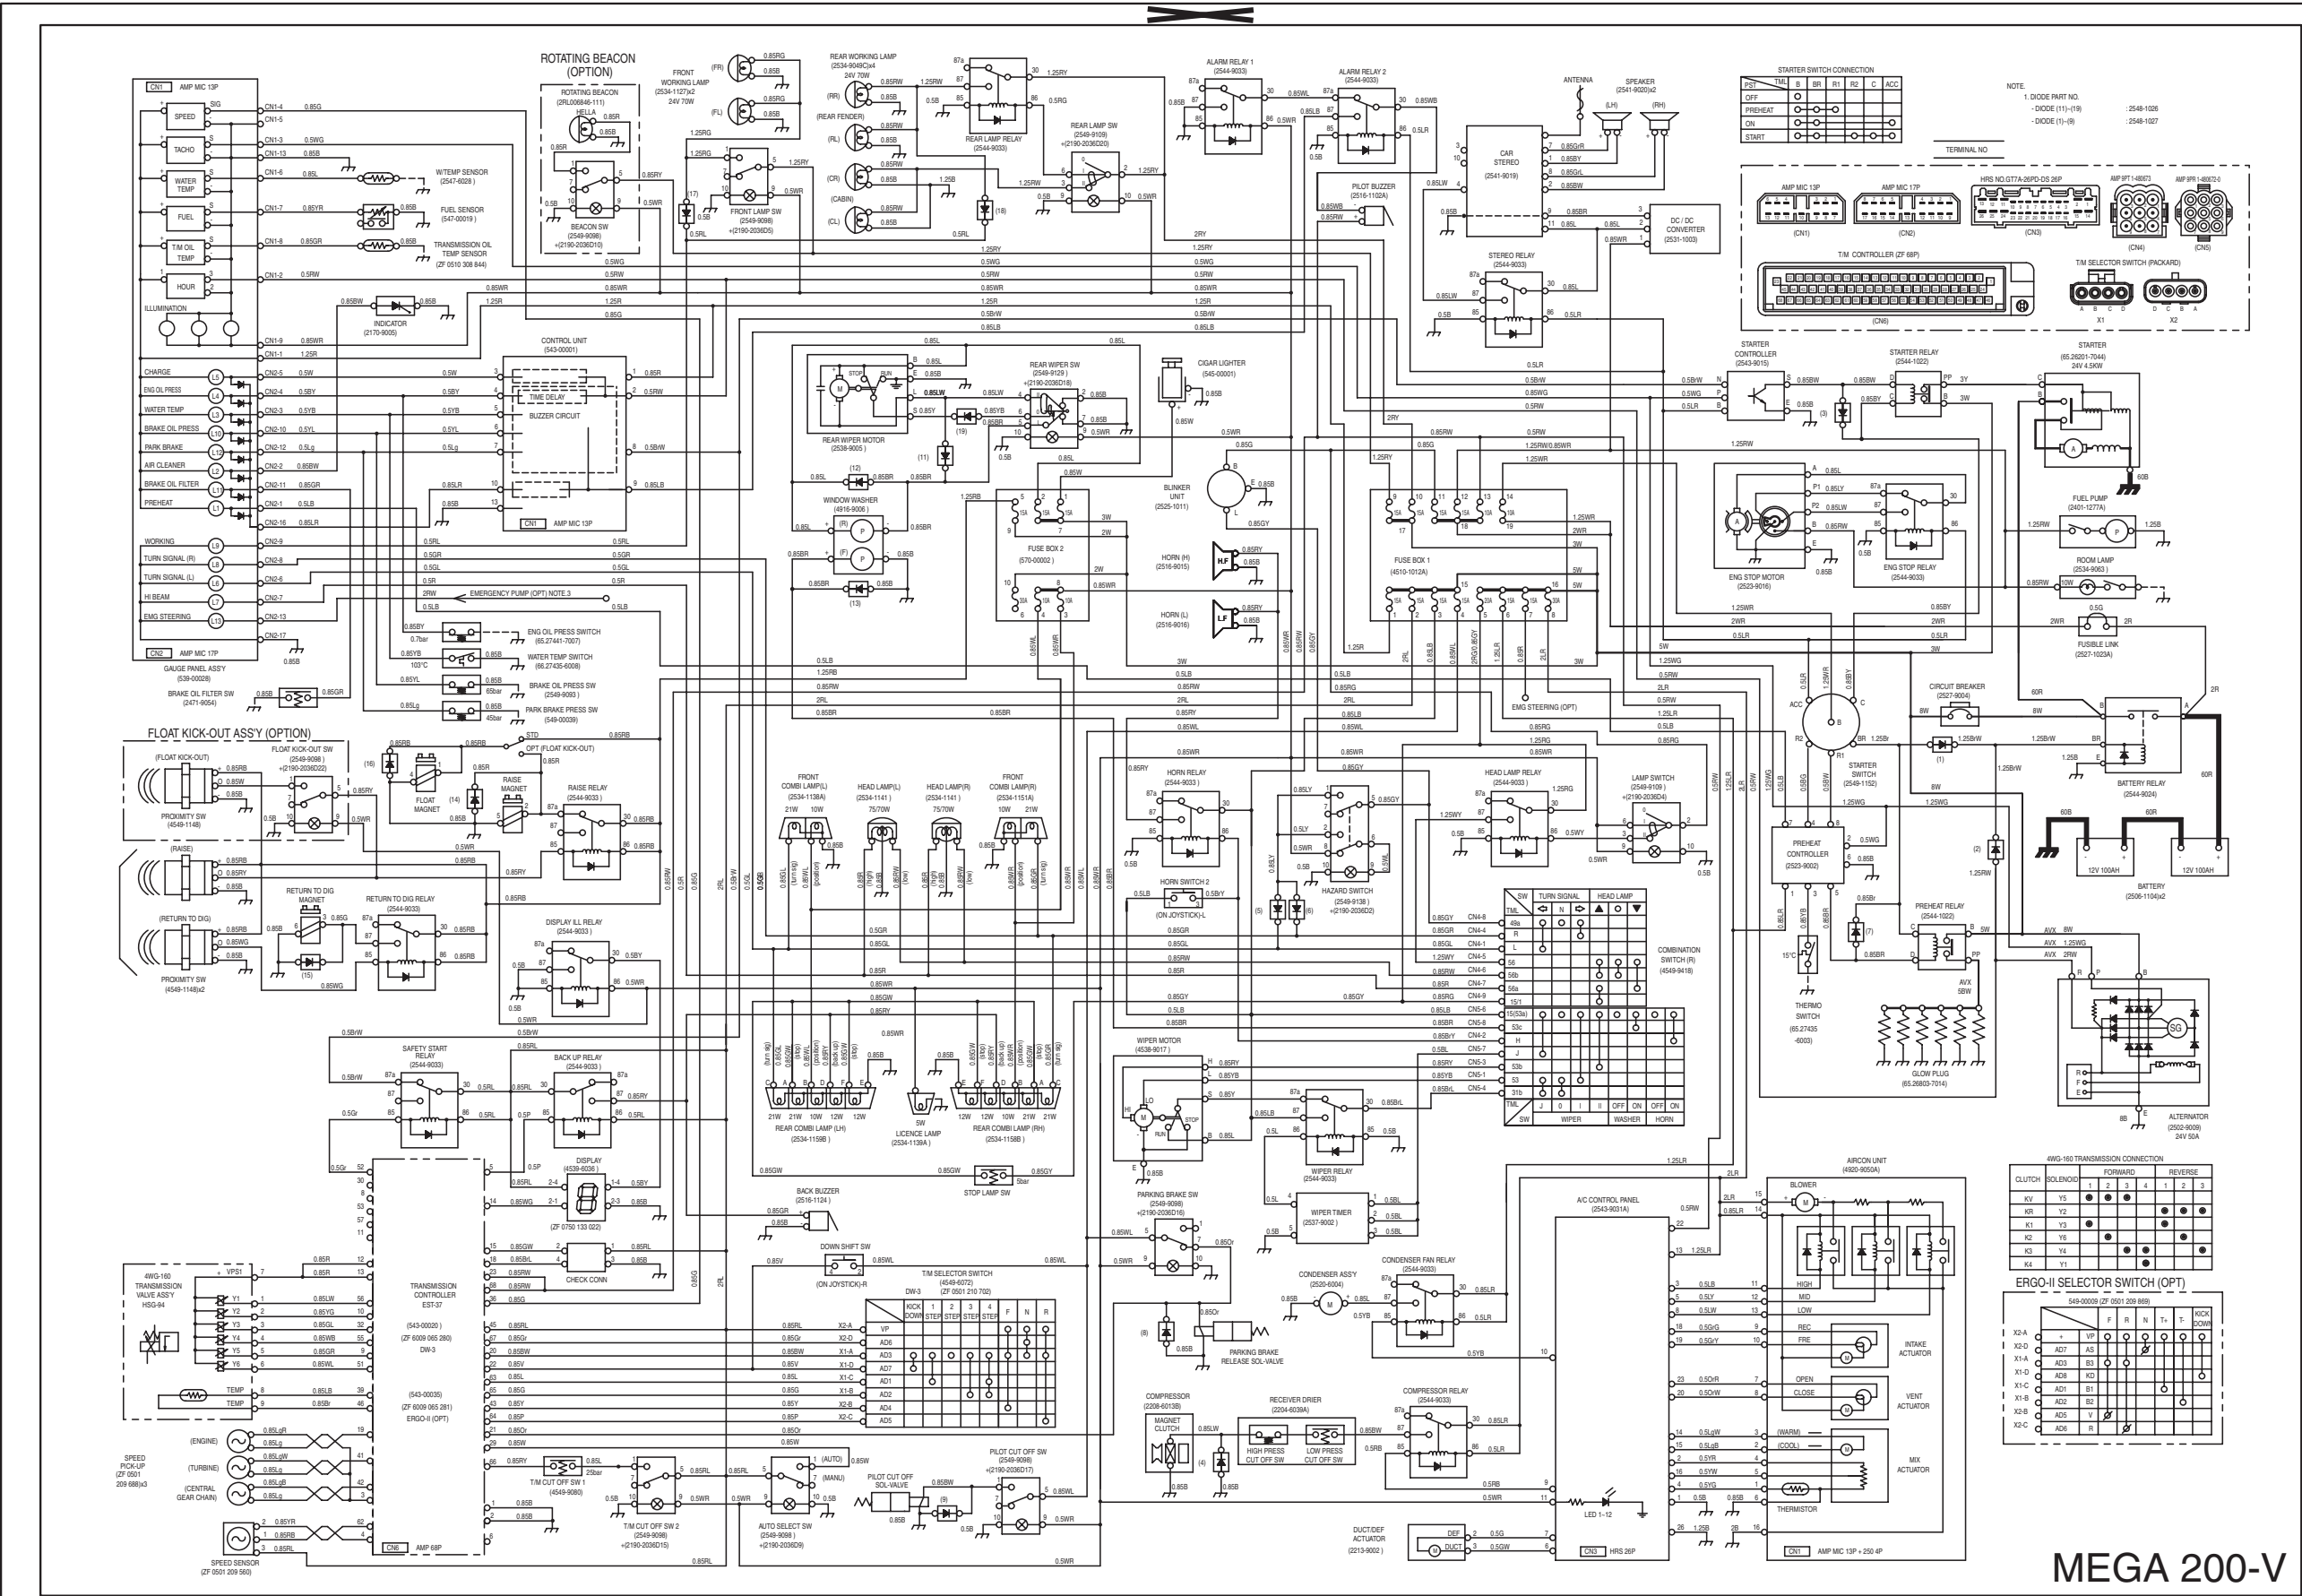


MEGA 200-V


APS0420L

MEGA 200-V (Tier II)

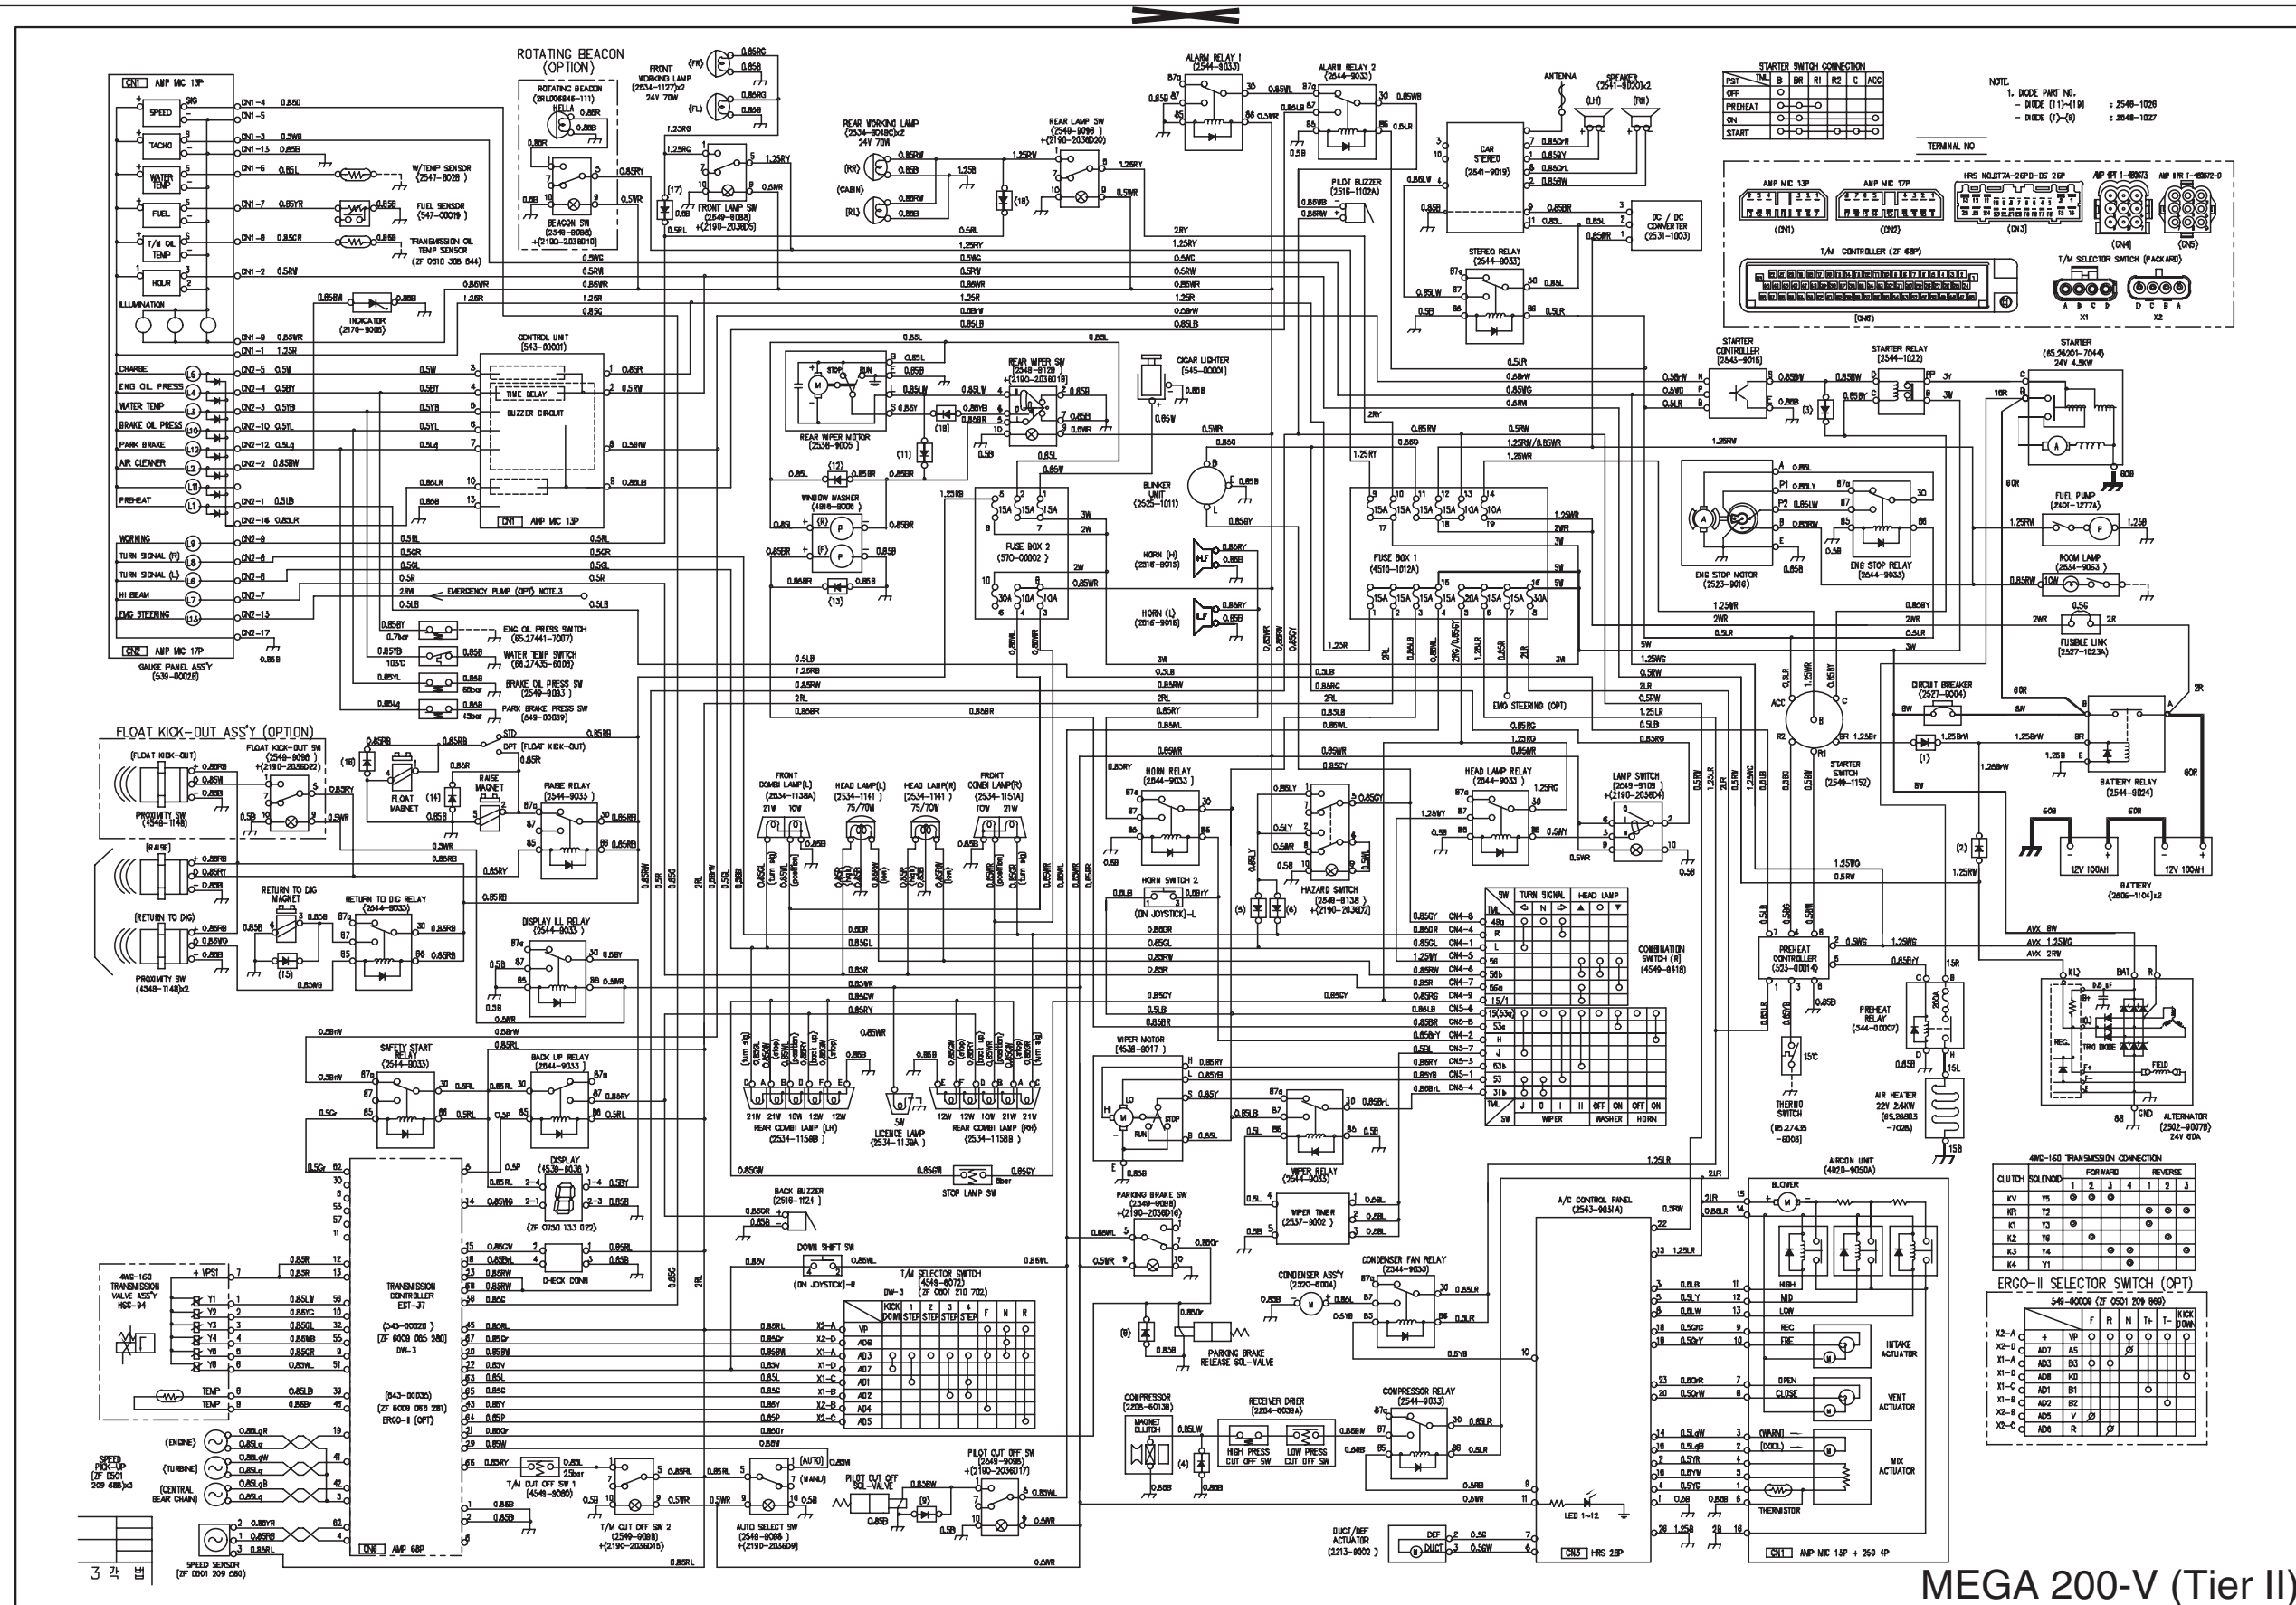


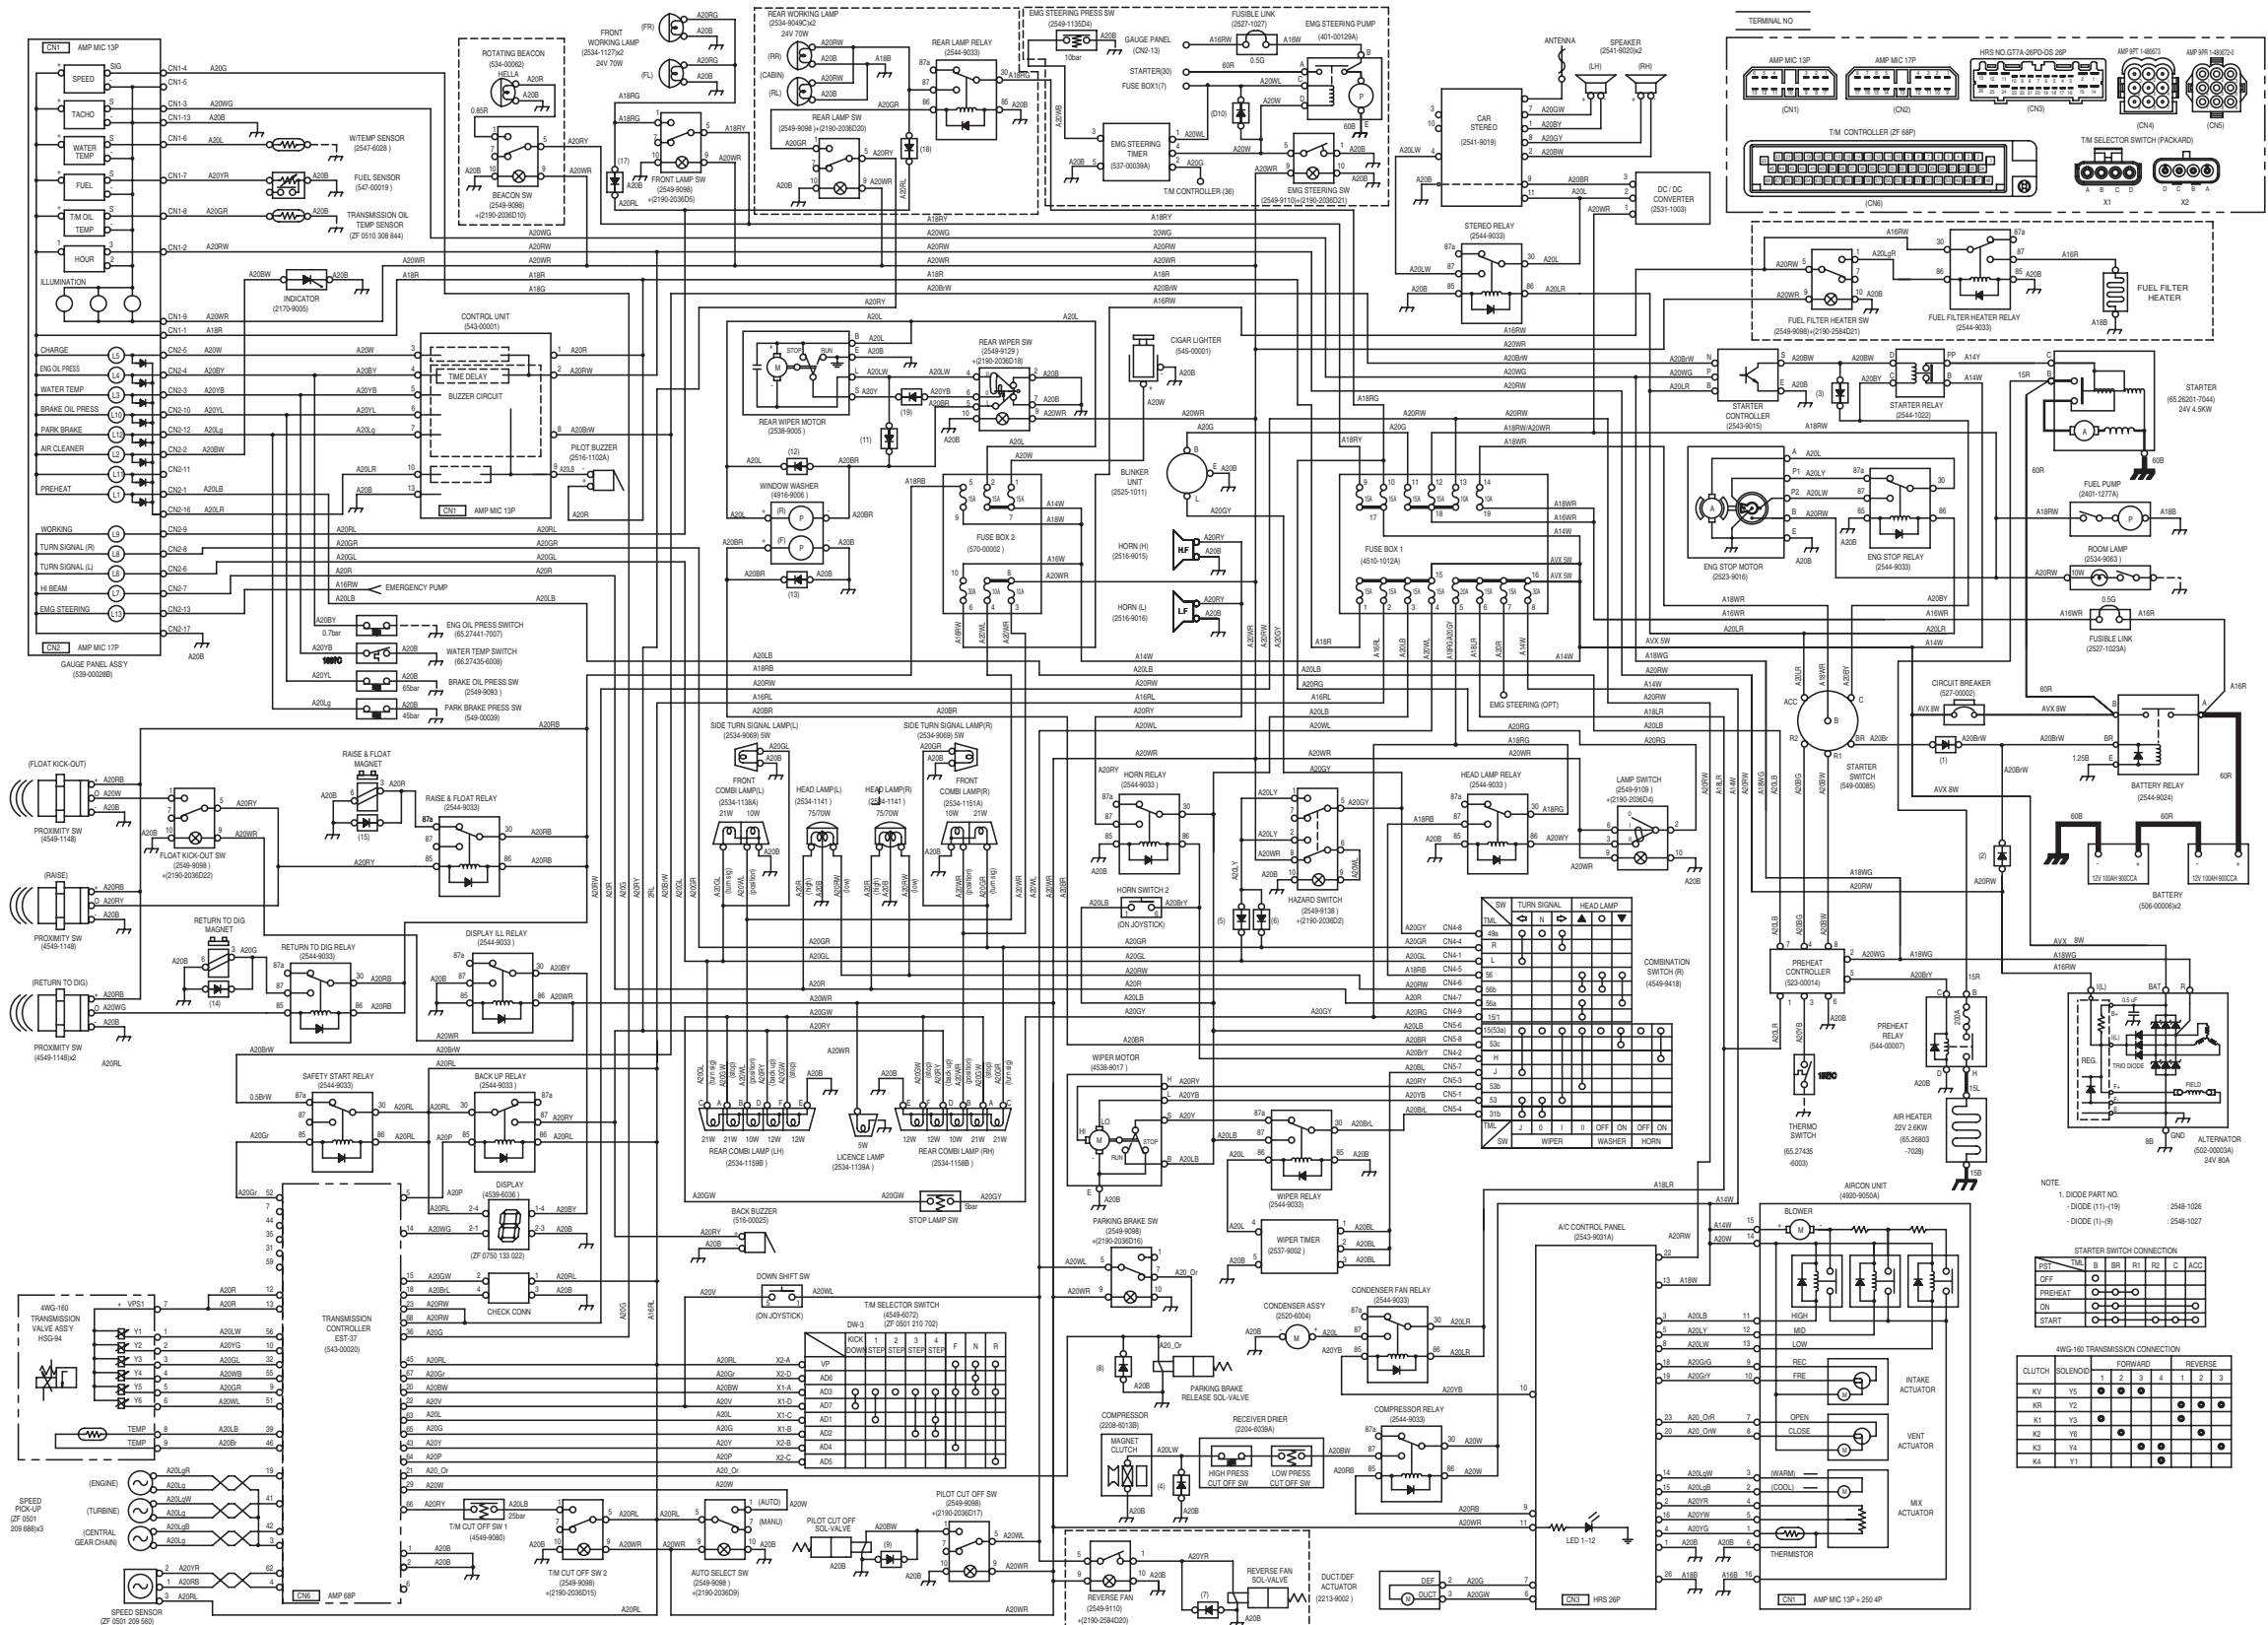


MEGA 200-V

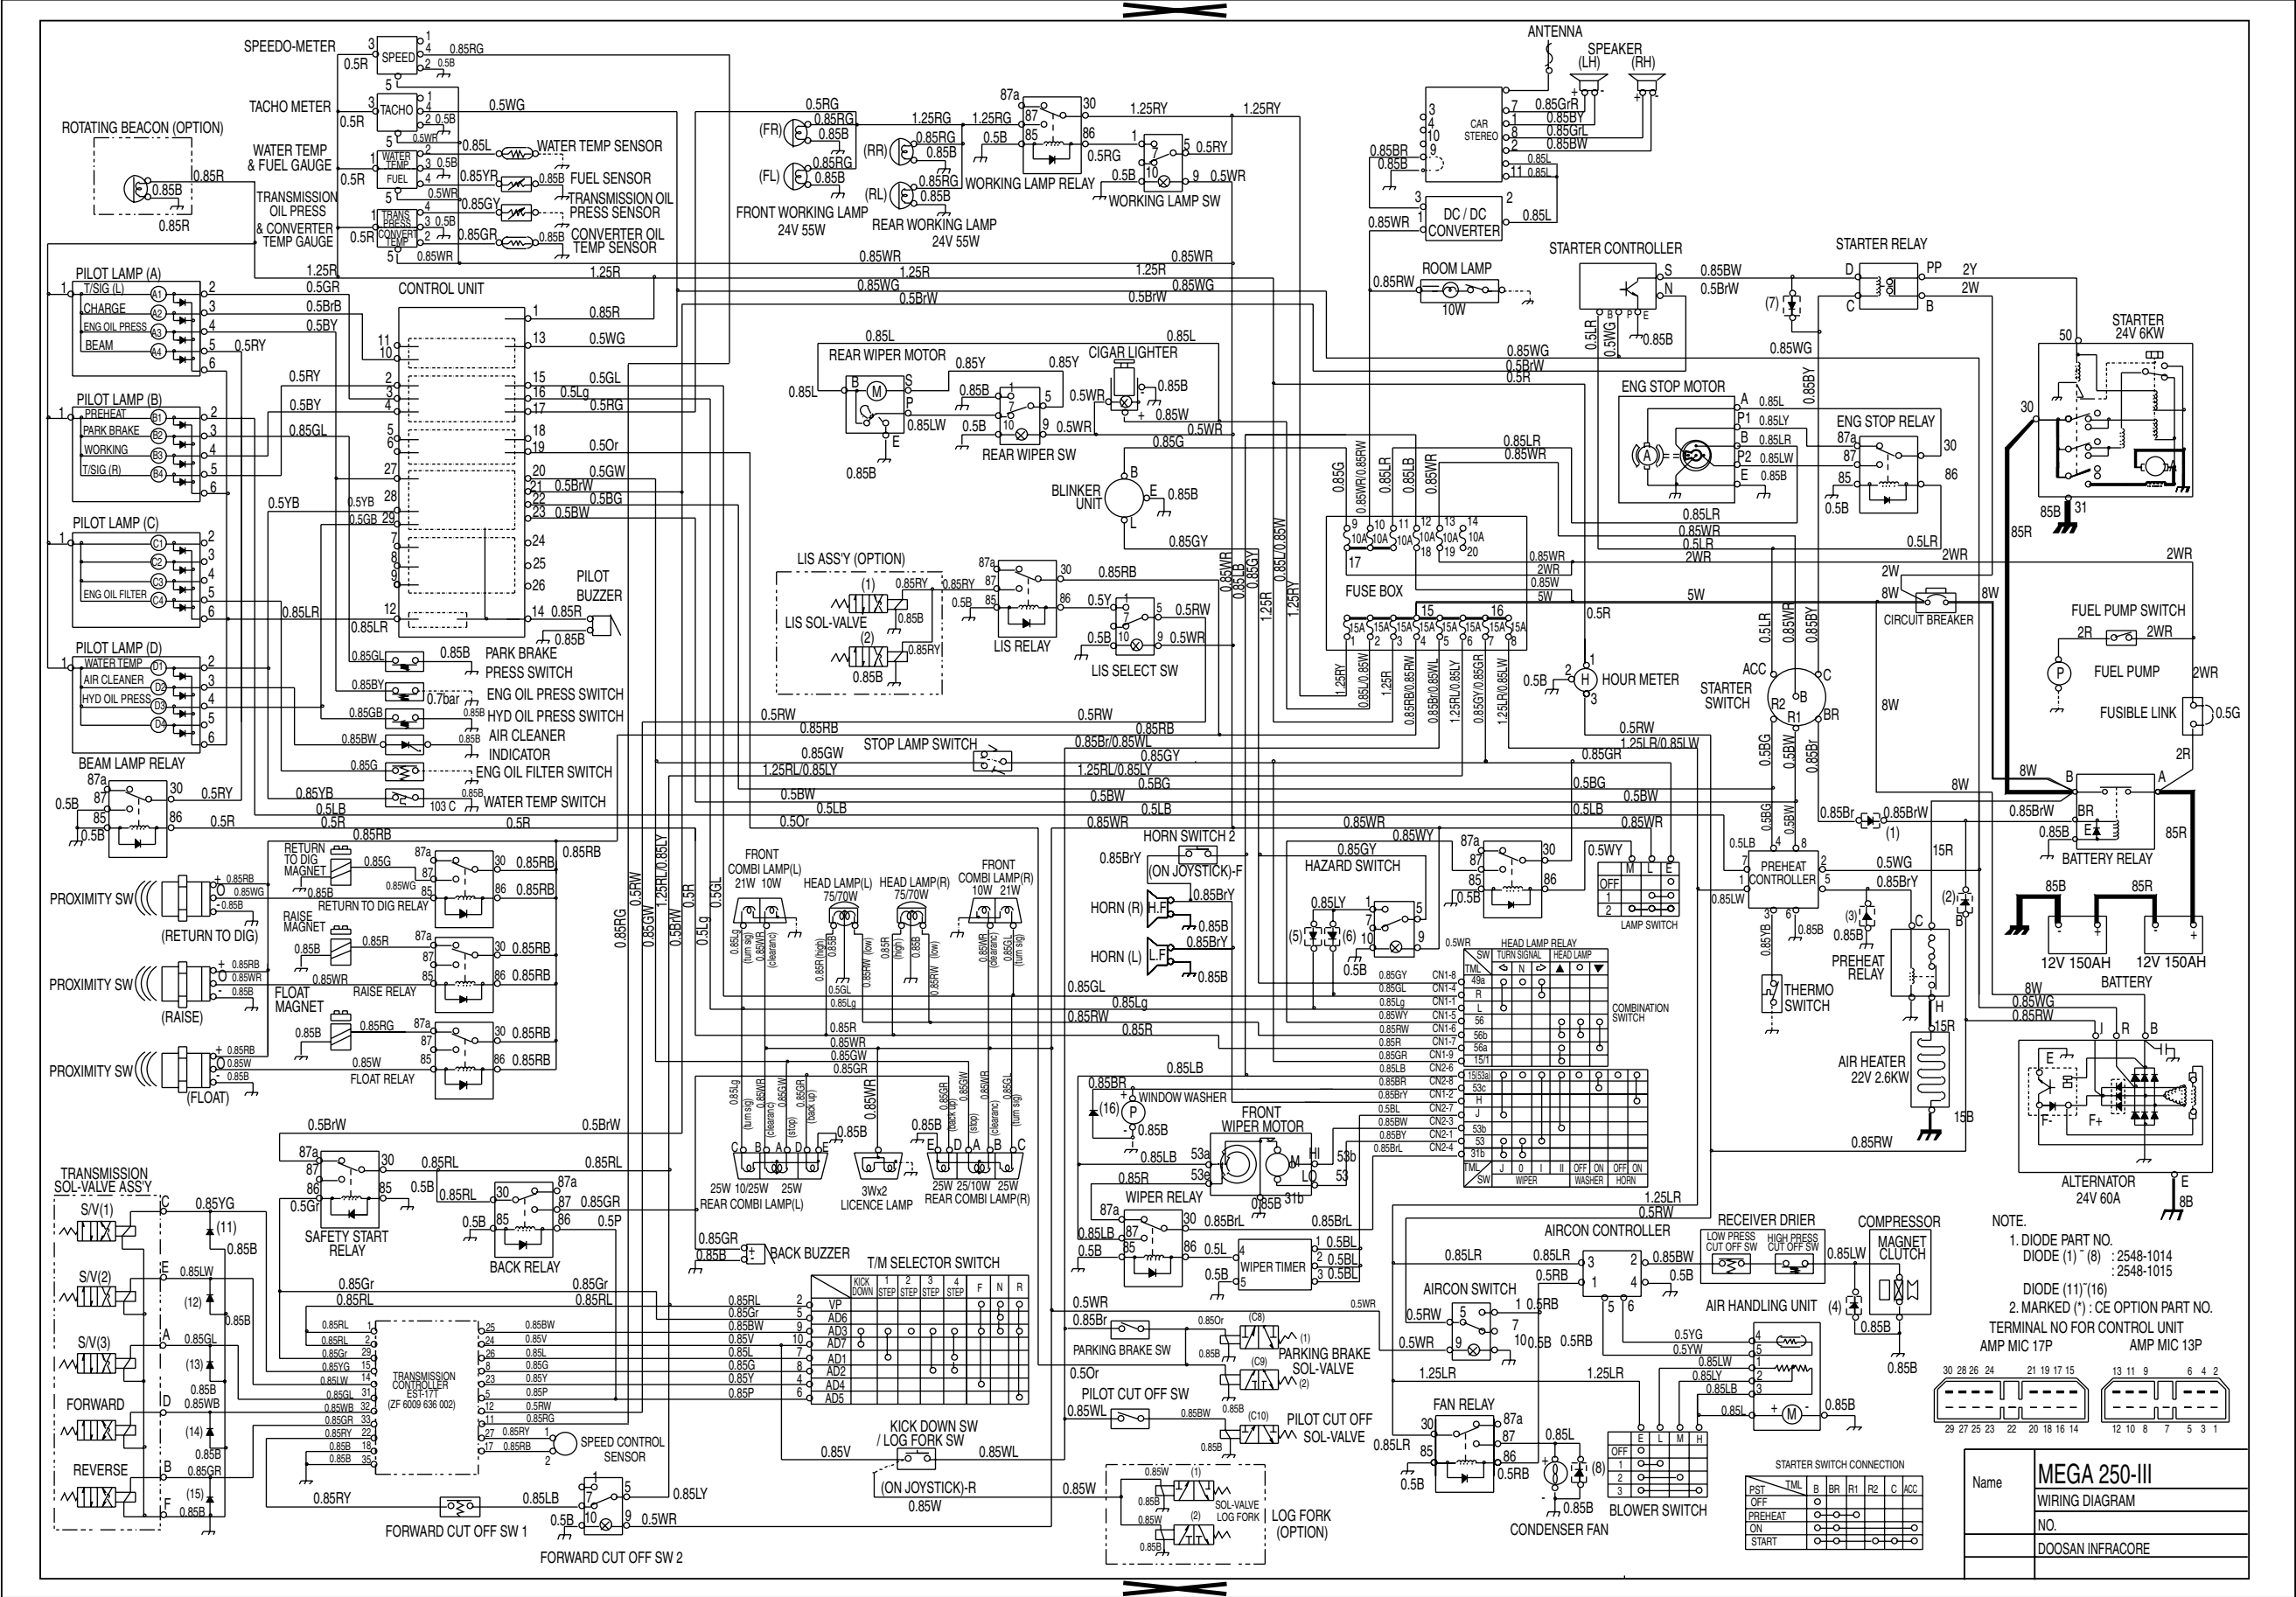

MEGA 250-V (TIER I)

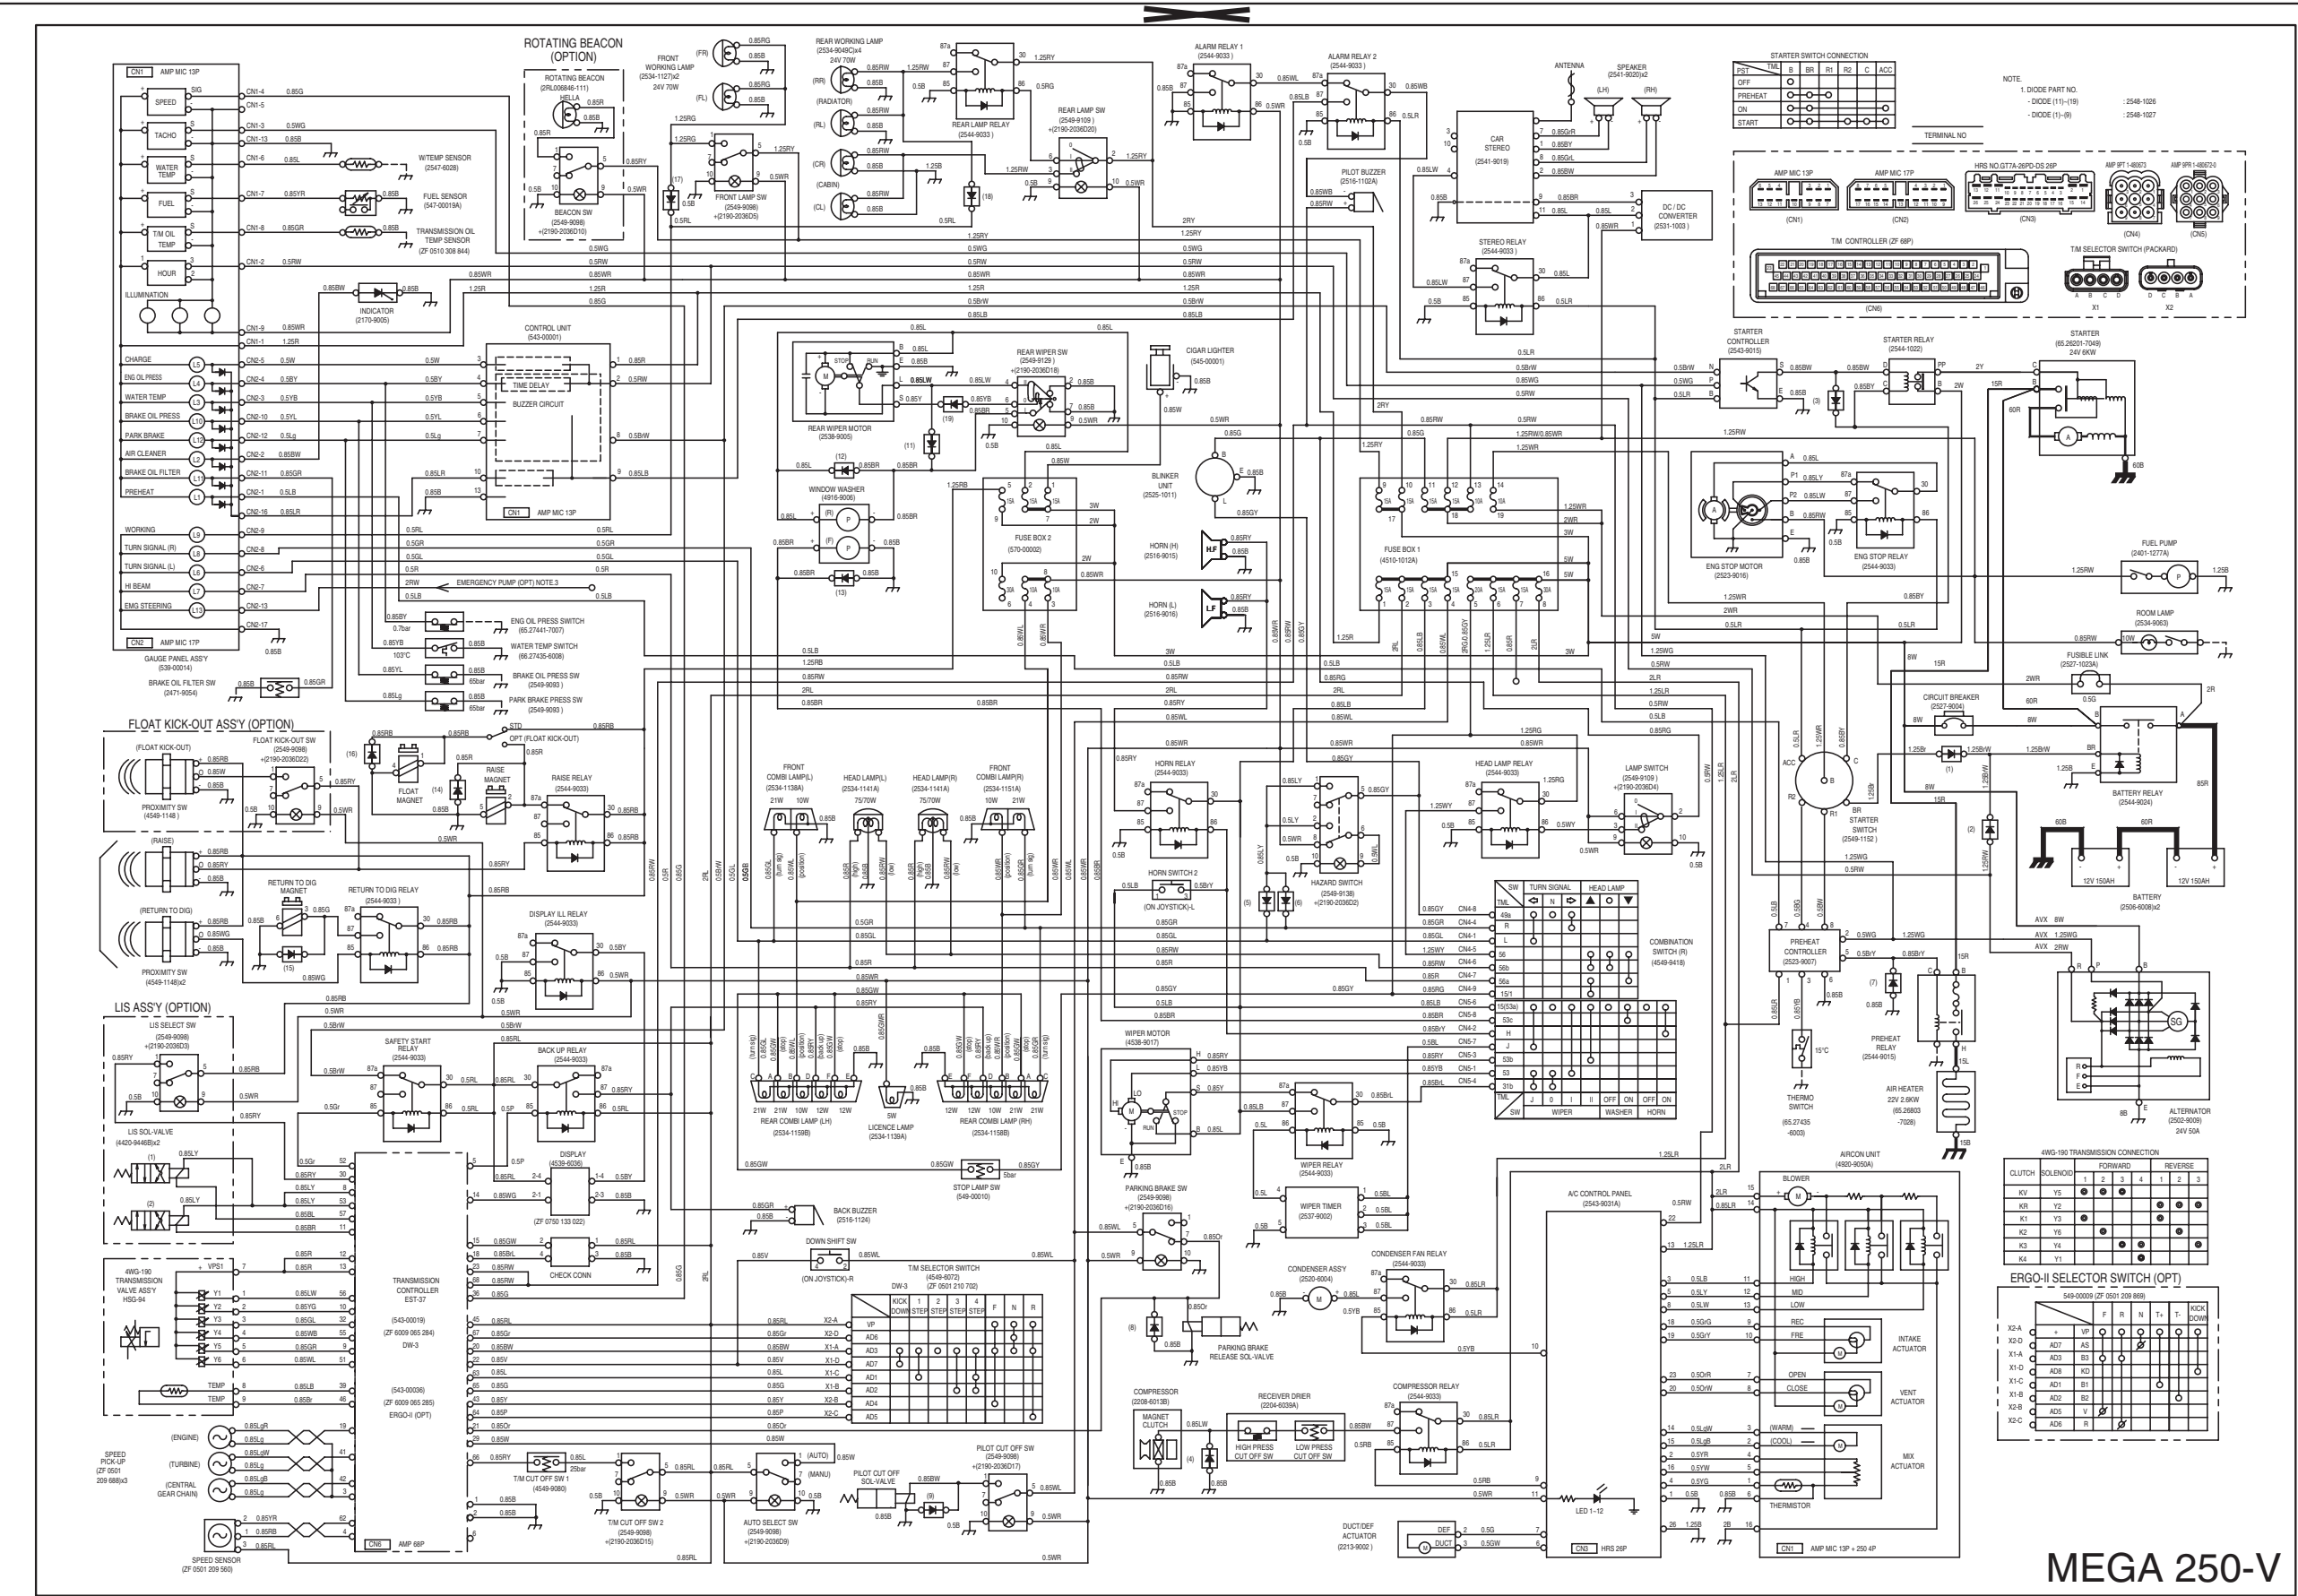



MEGA 250-V (TIER II)

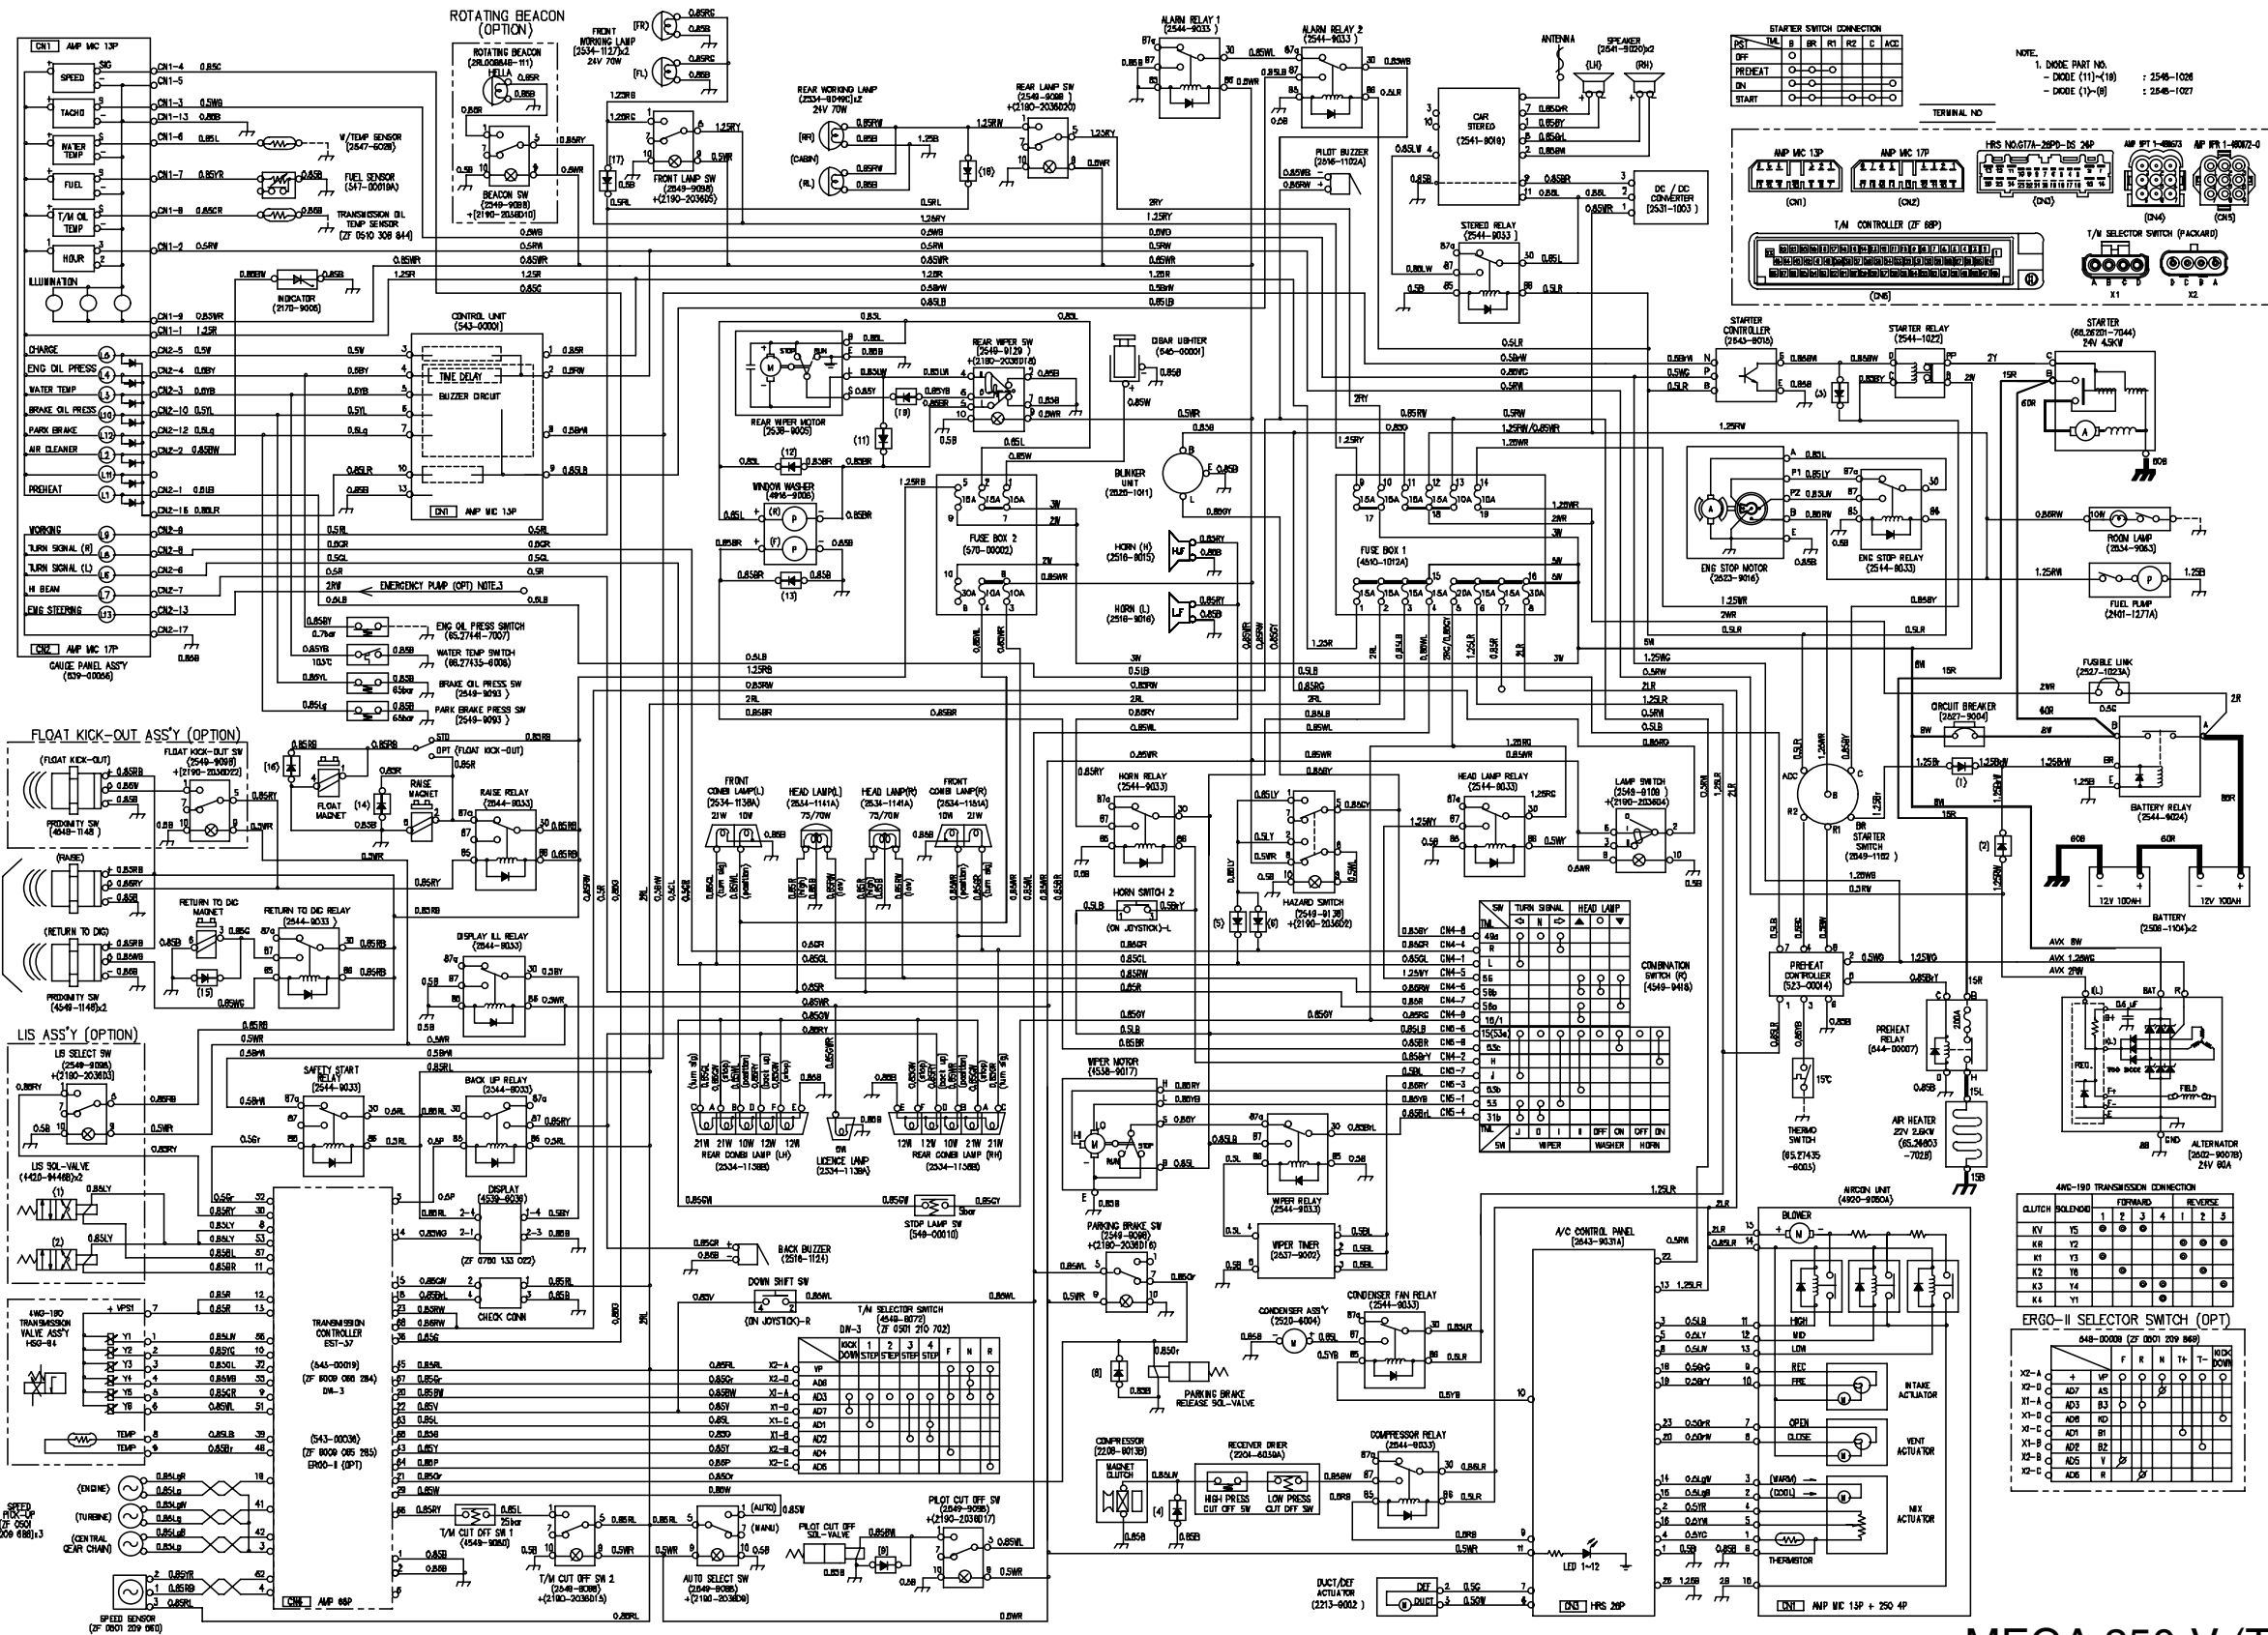


MEGA 250-V (Tier II)



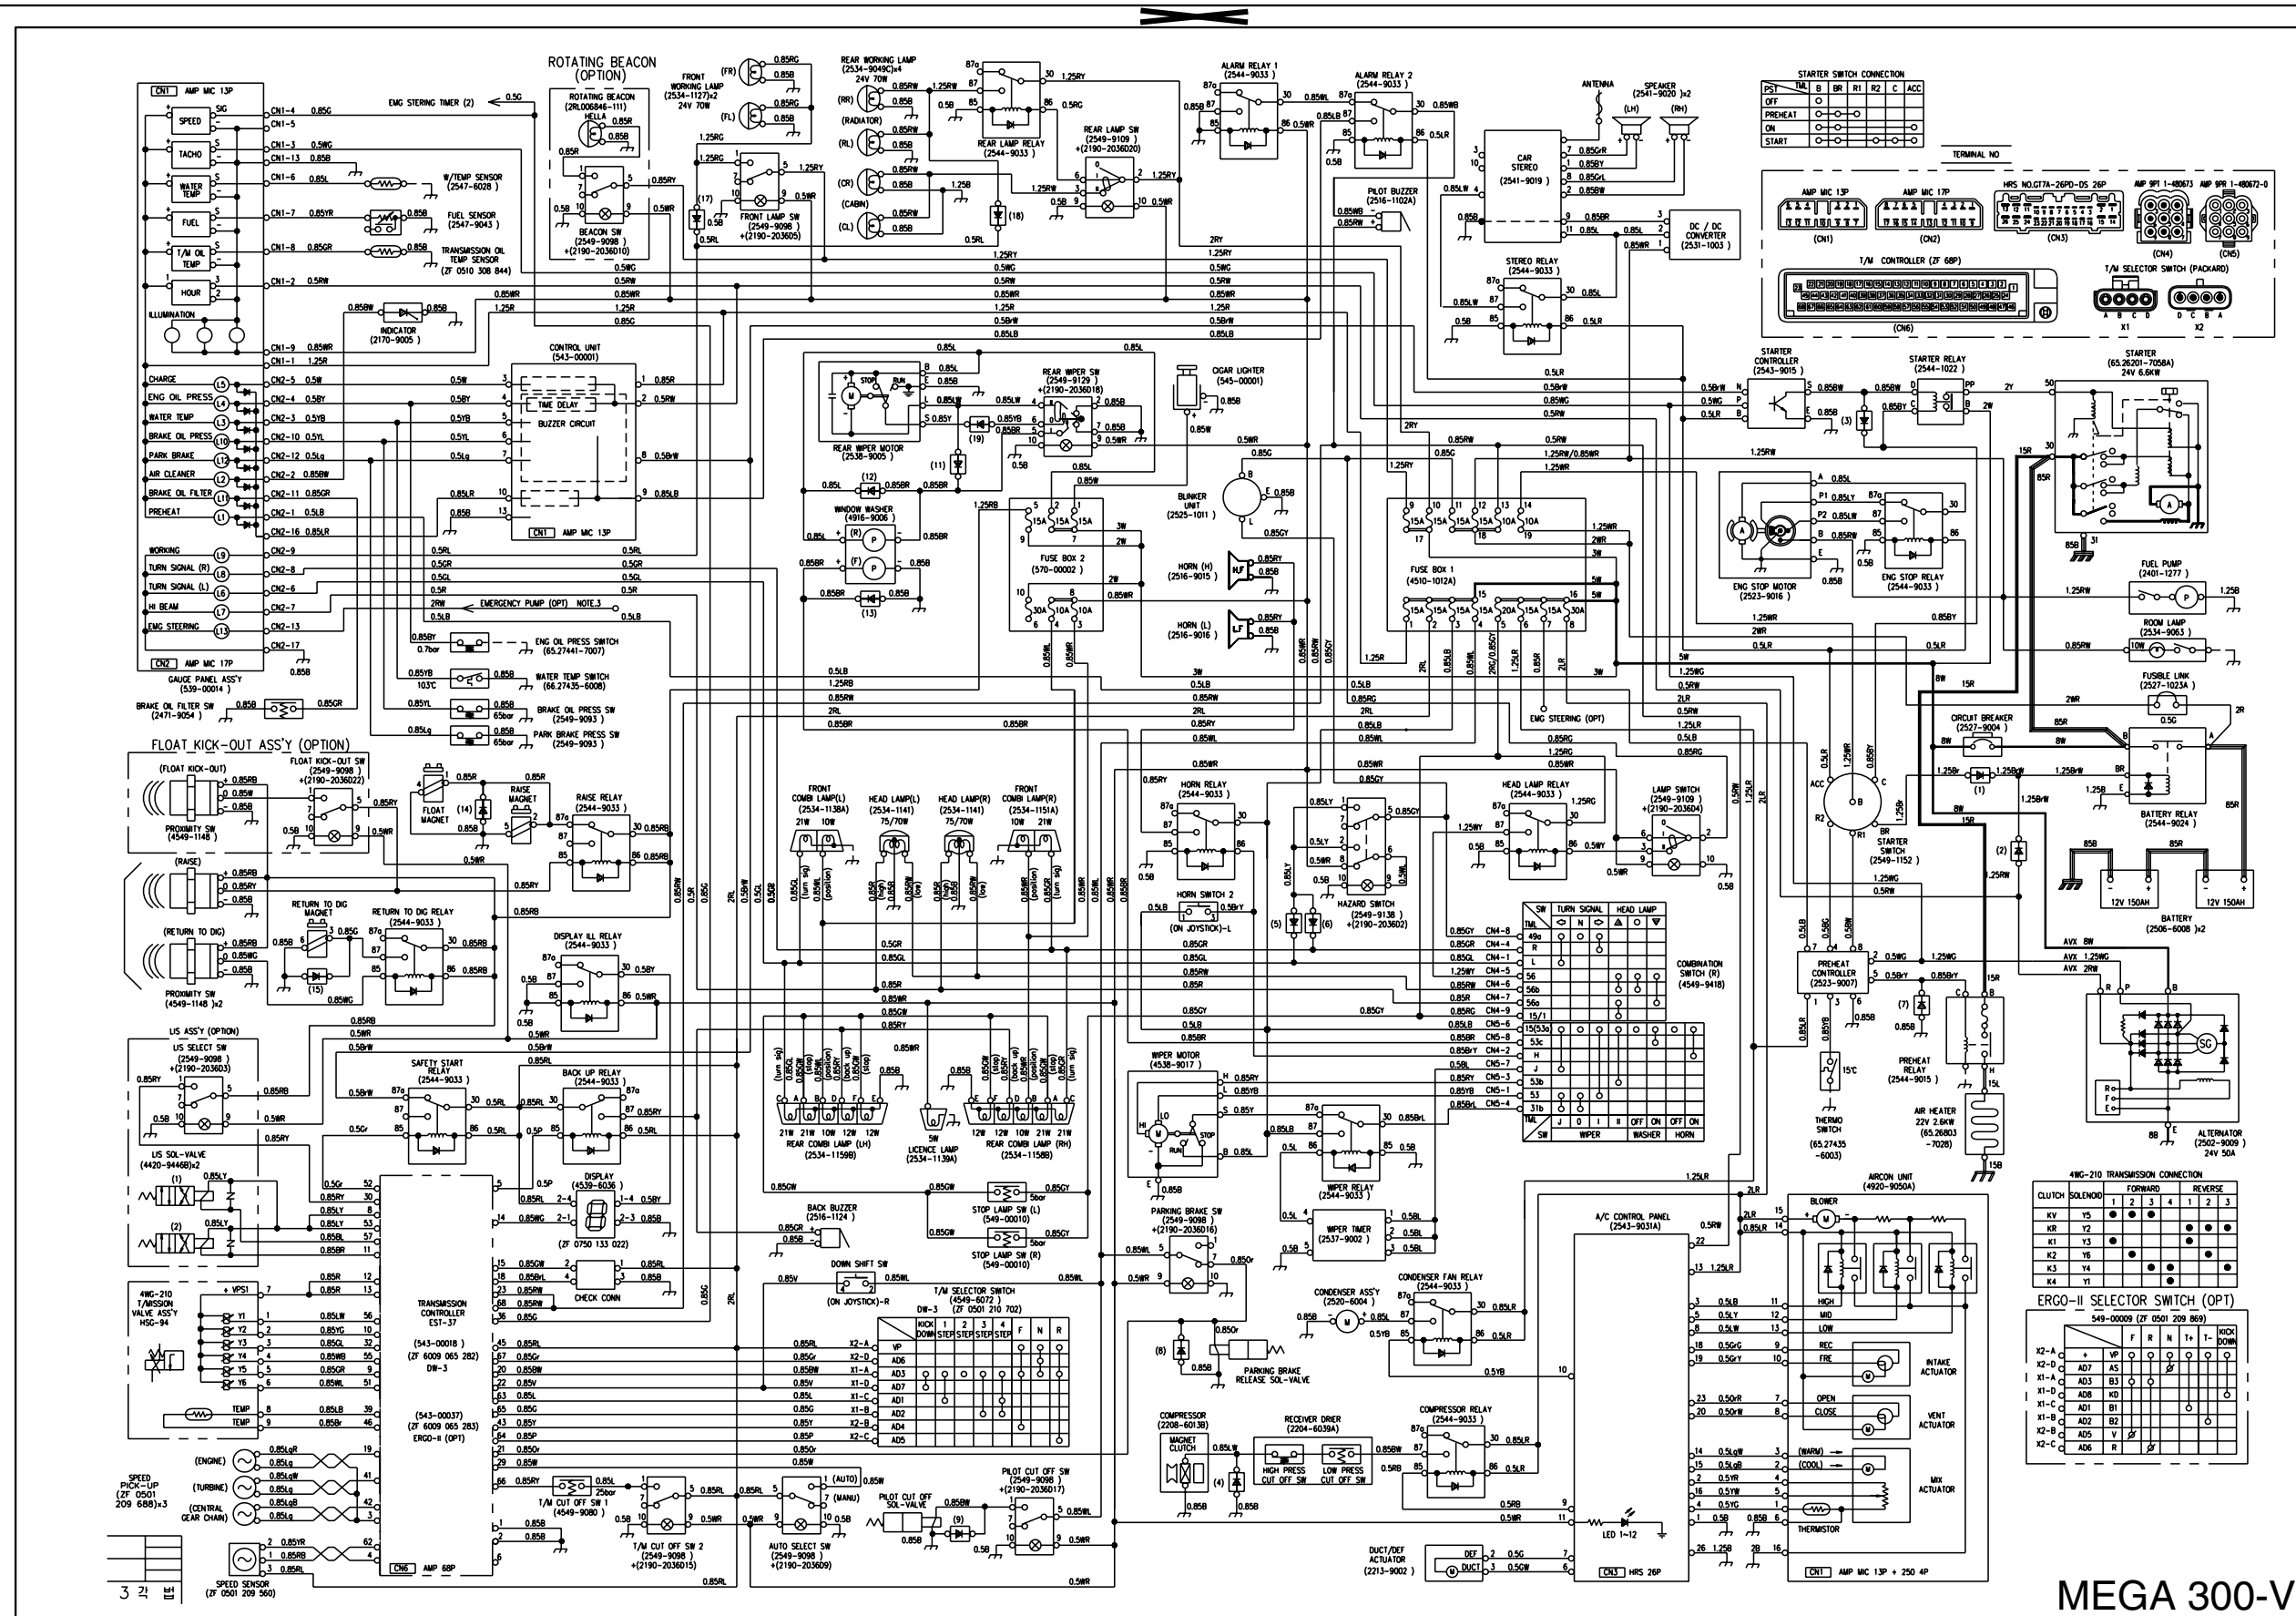

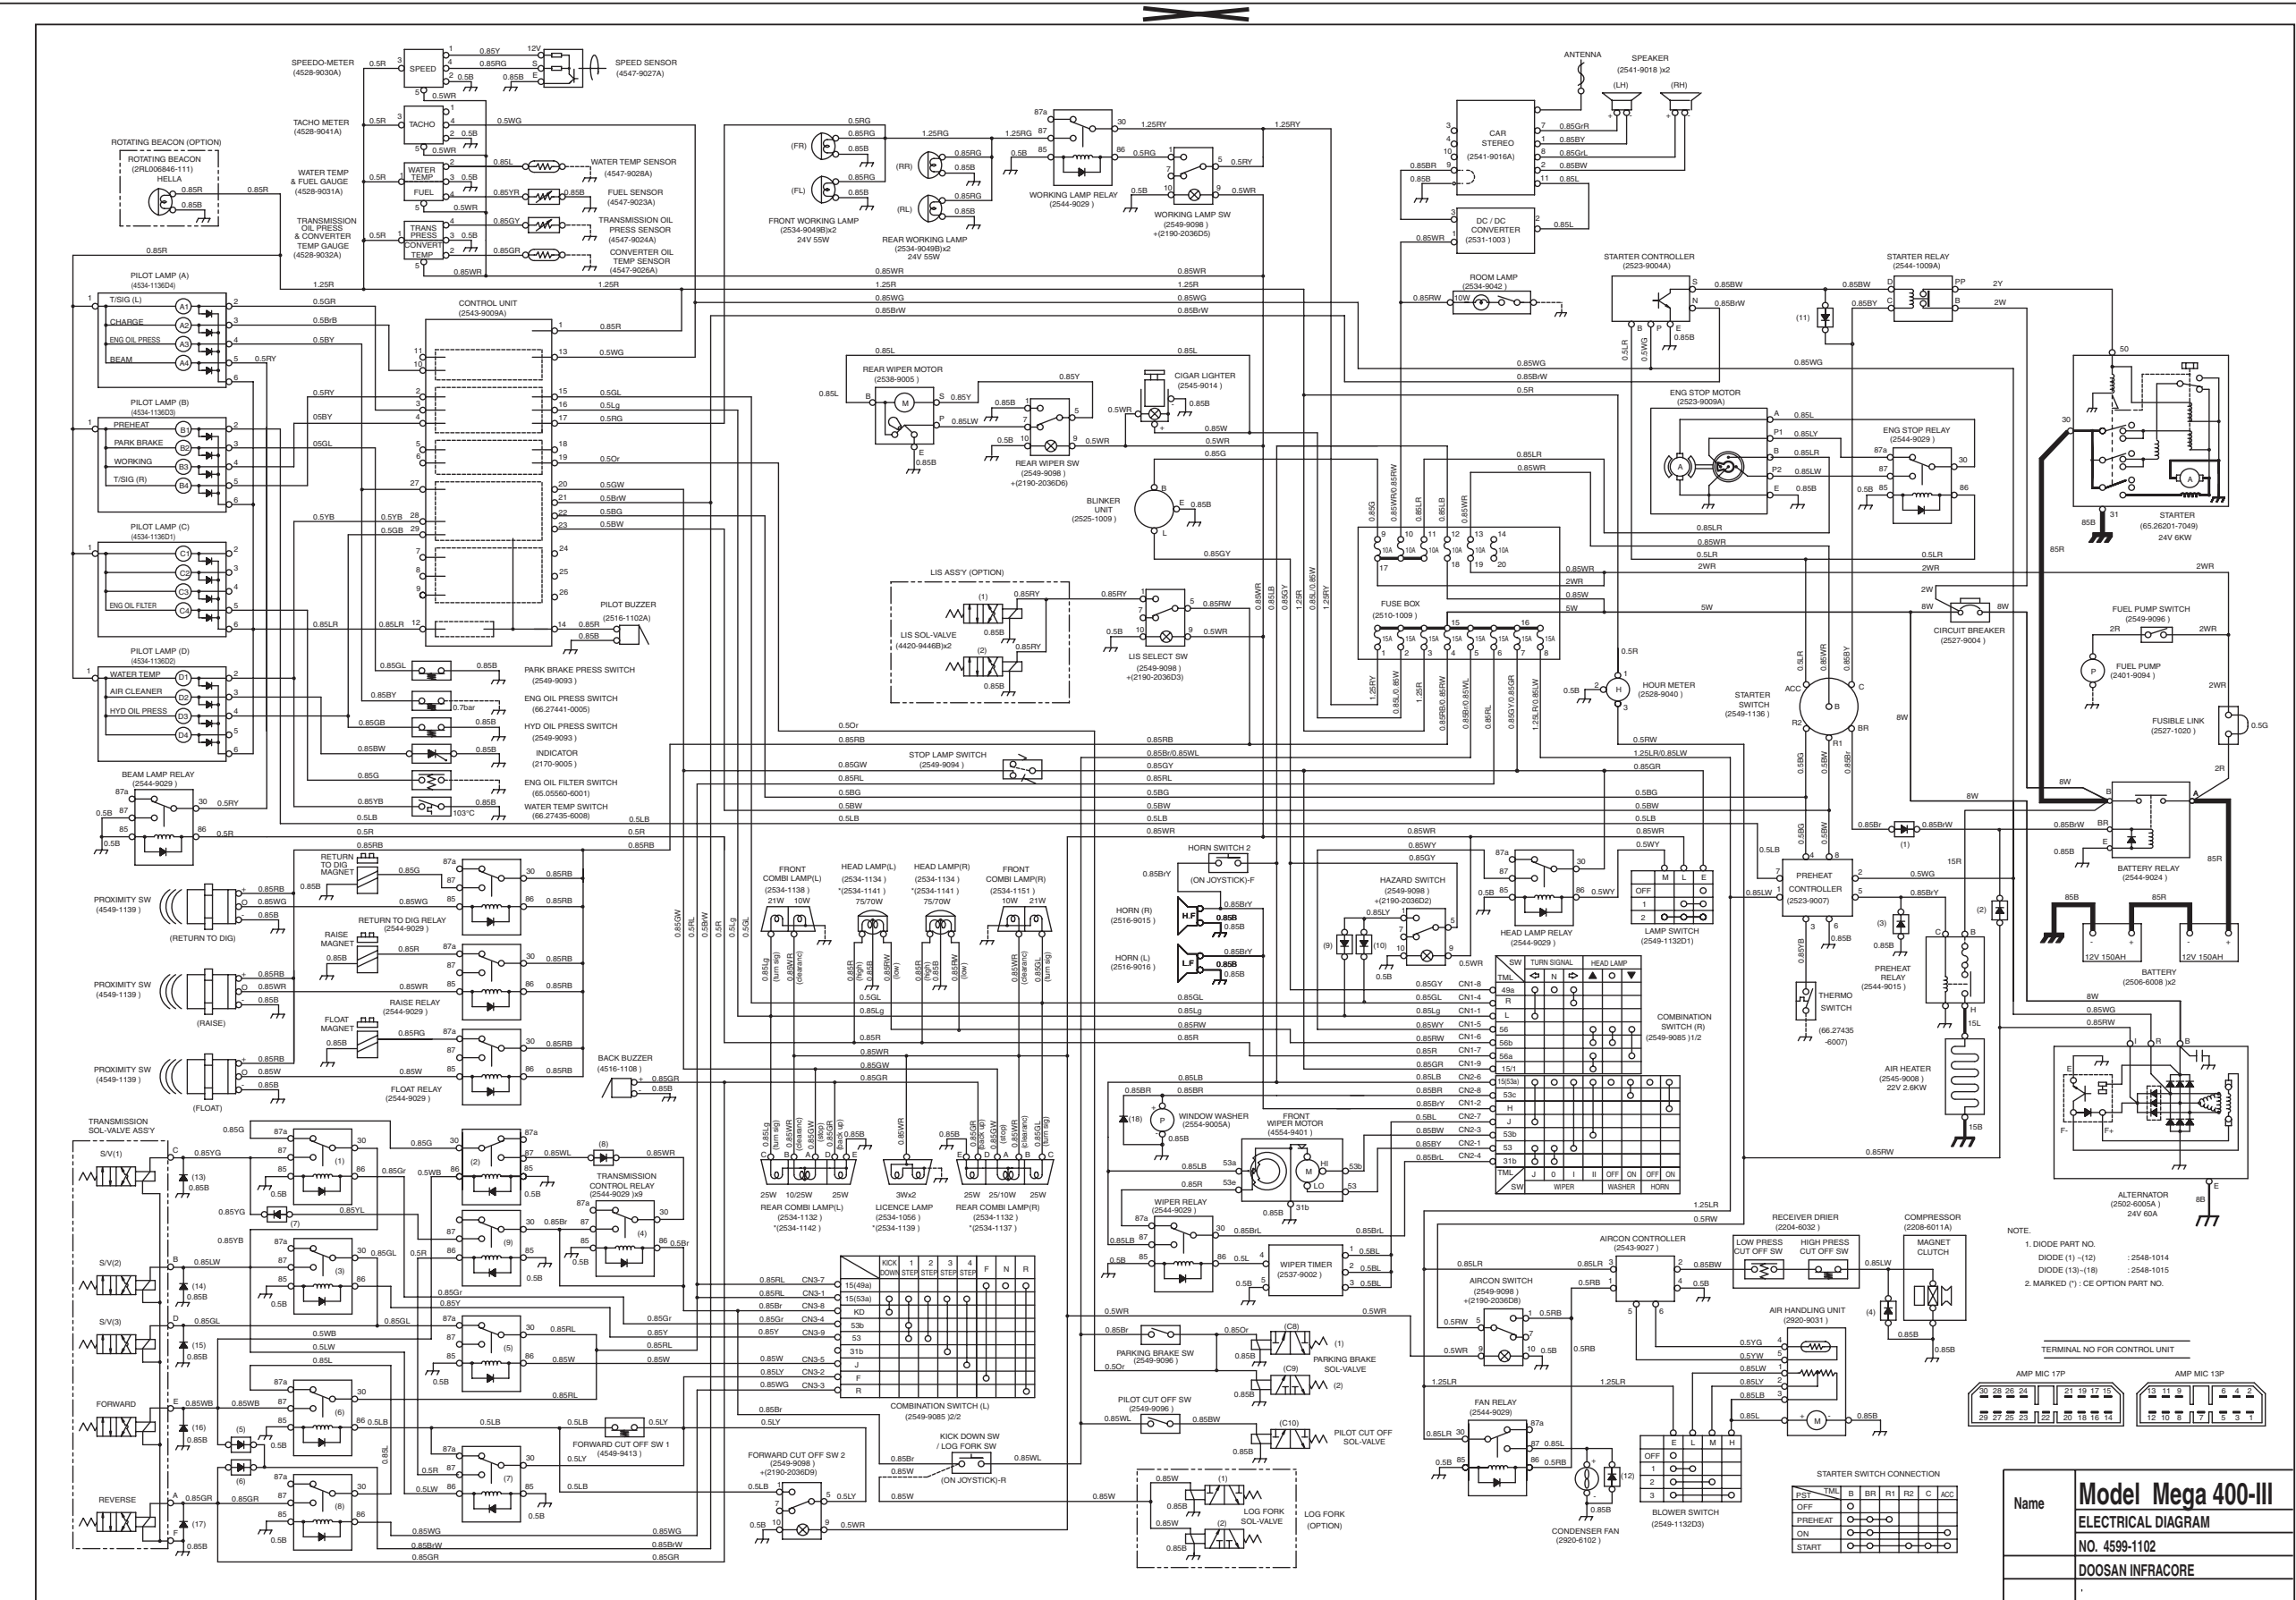


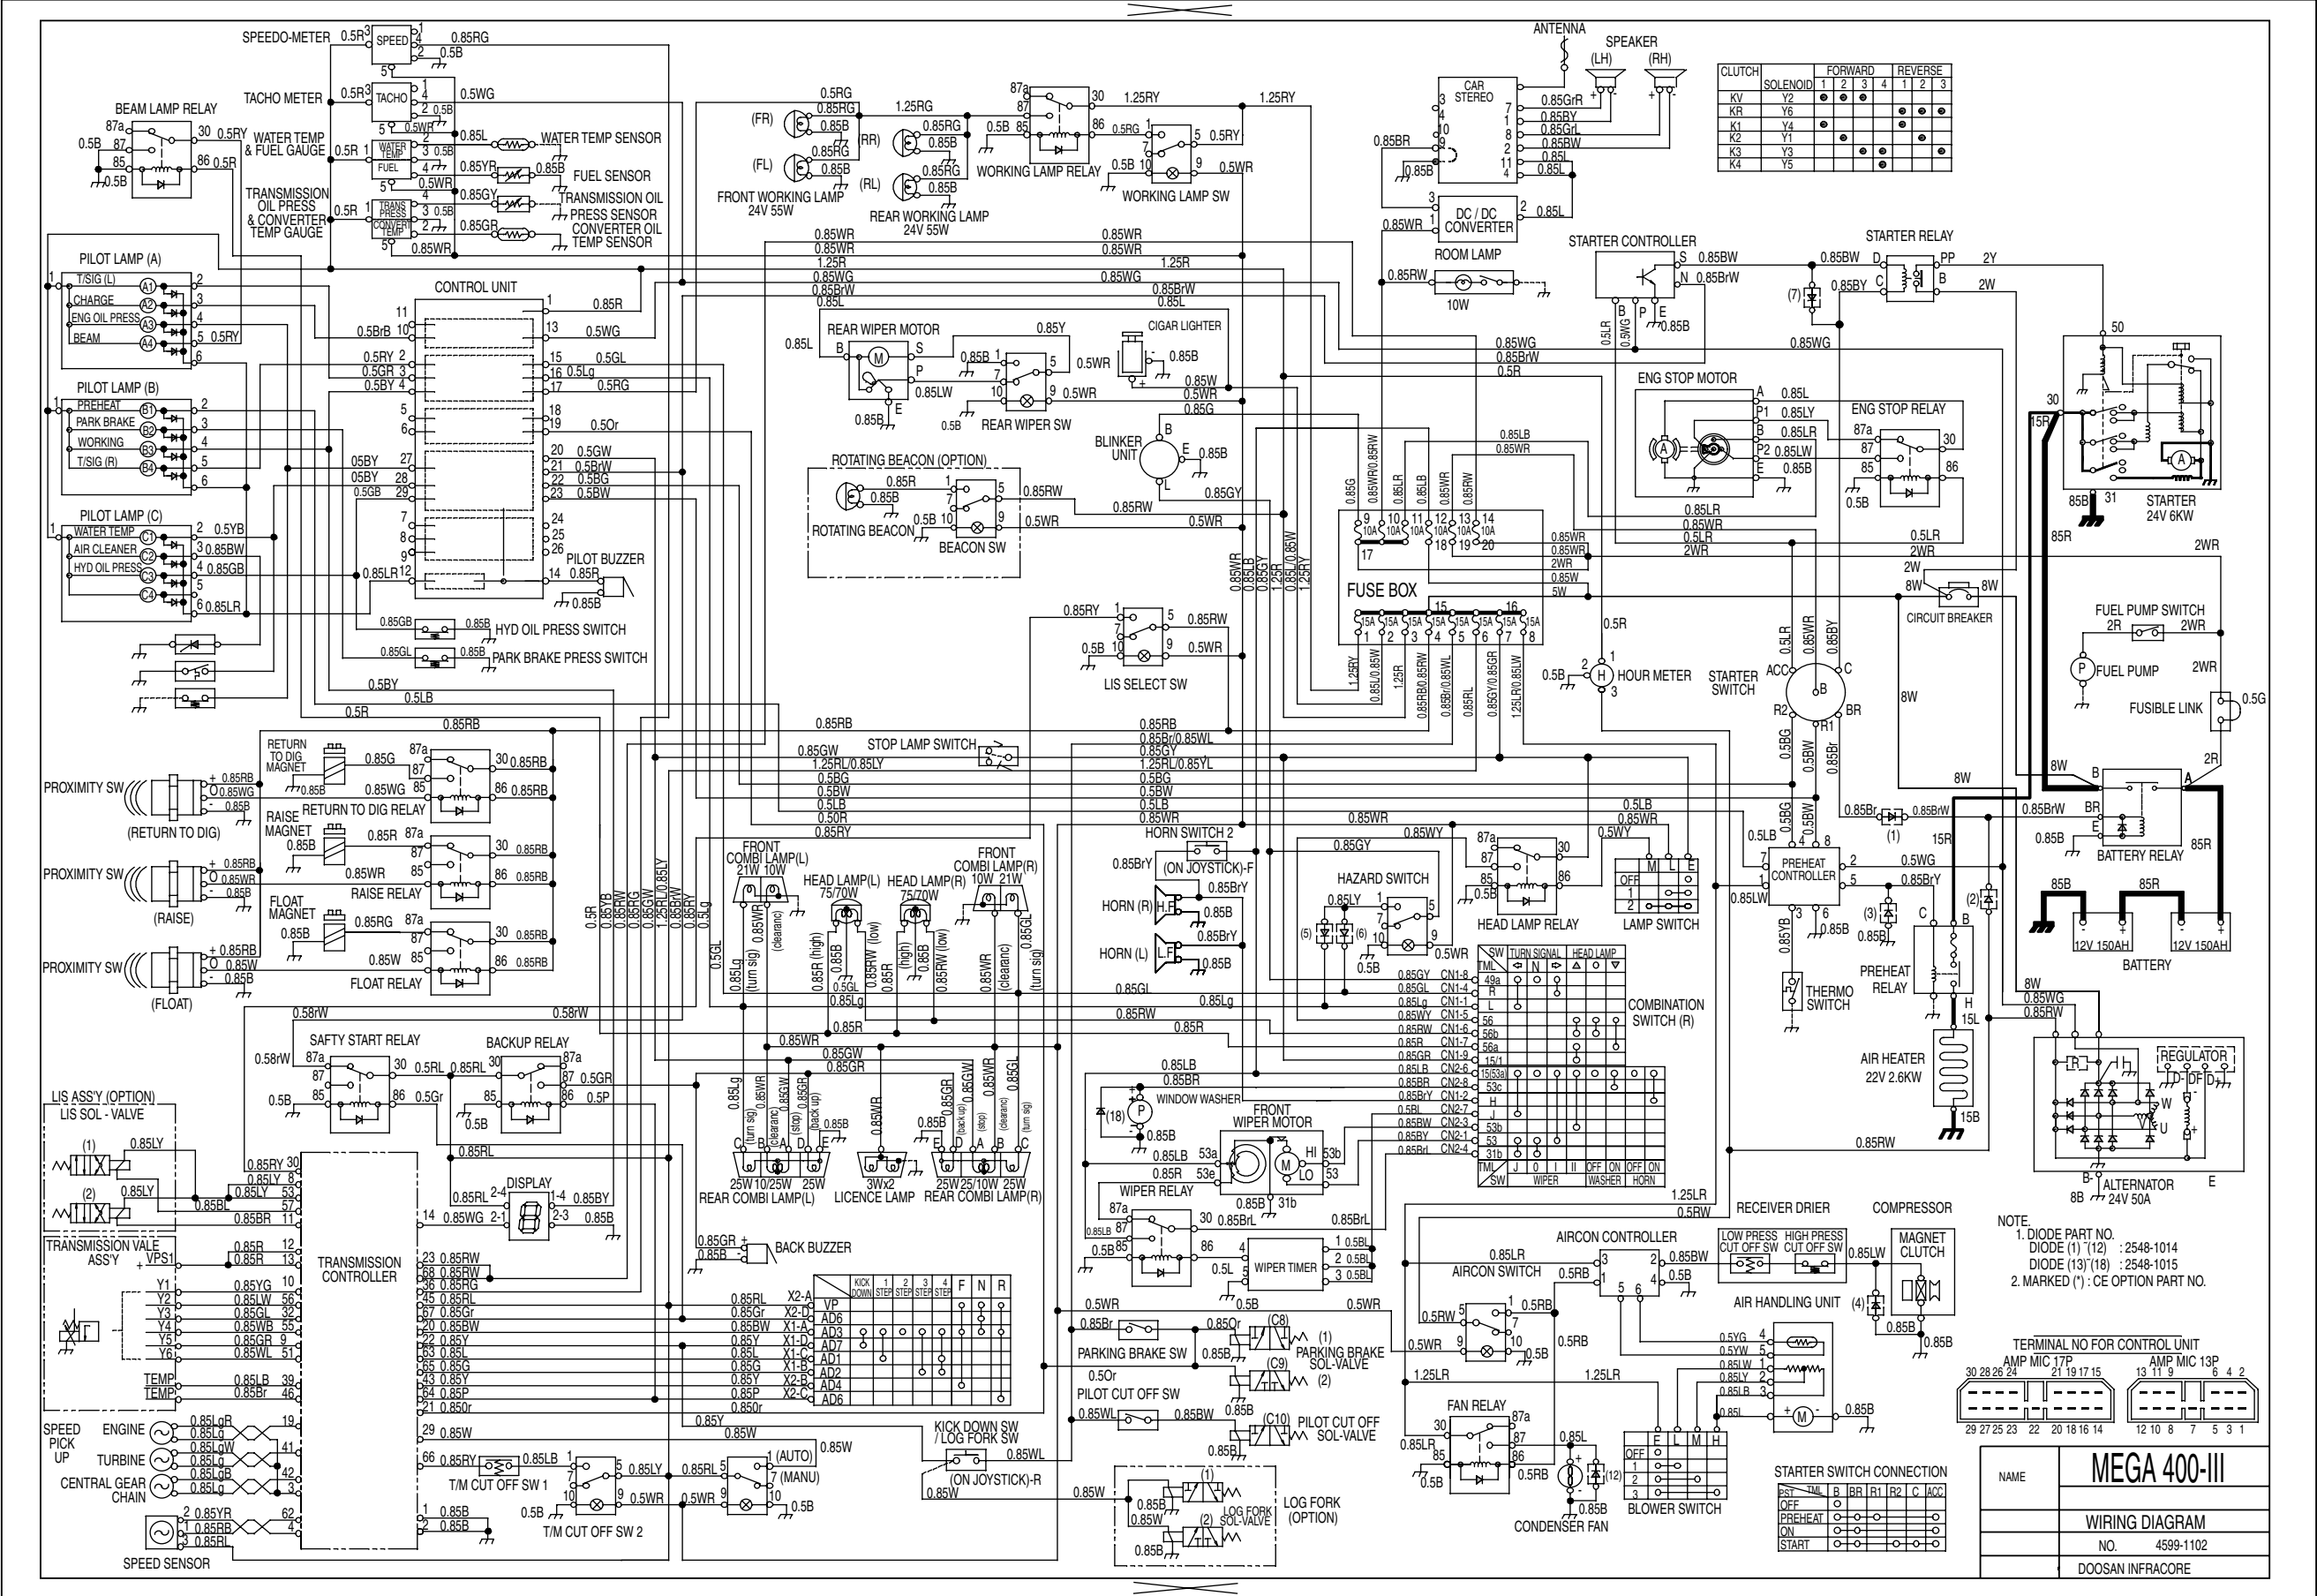


NOTE:
1. DIODE PART NO.
DIODE (1) (12) : 2548-1014
DIODE (13) (18) : 2548-1015
2. MARKED (*) : CE OPTION PART NO.


TERMINAL NO FOR CONTROL UNIT											
AMP MIC 17P	21	19	17	15	13	11	9	7	5	3	1
AMP MIC 13P	6	4	2								


NAME	MEGA 400-III
WIRING DIAGRAM	
NO.	4599-1102
DOOSAN INFRACORE	

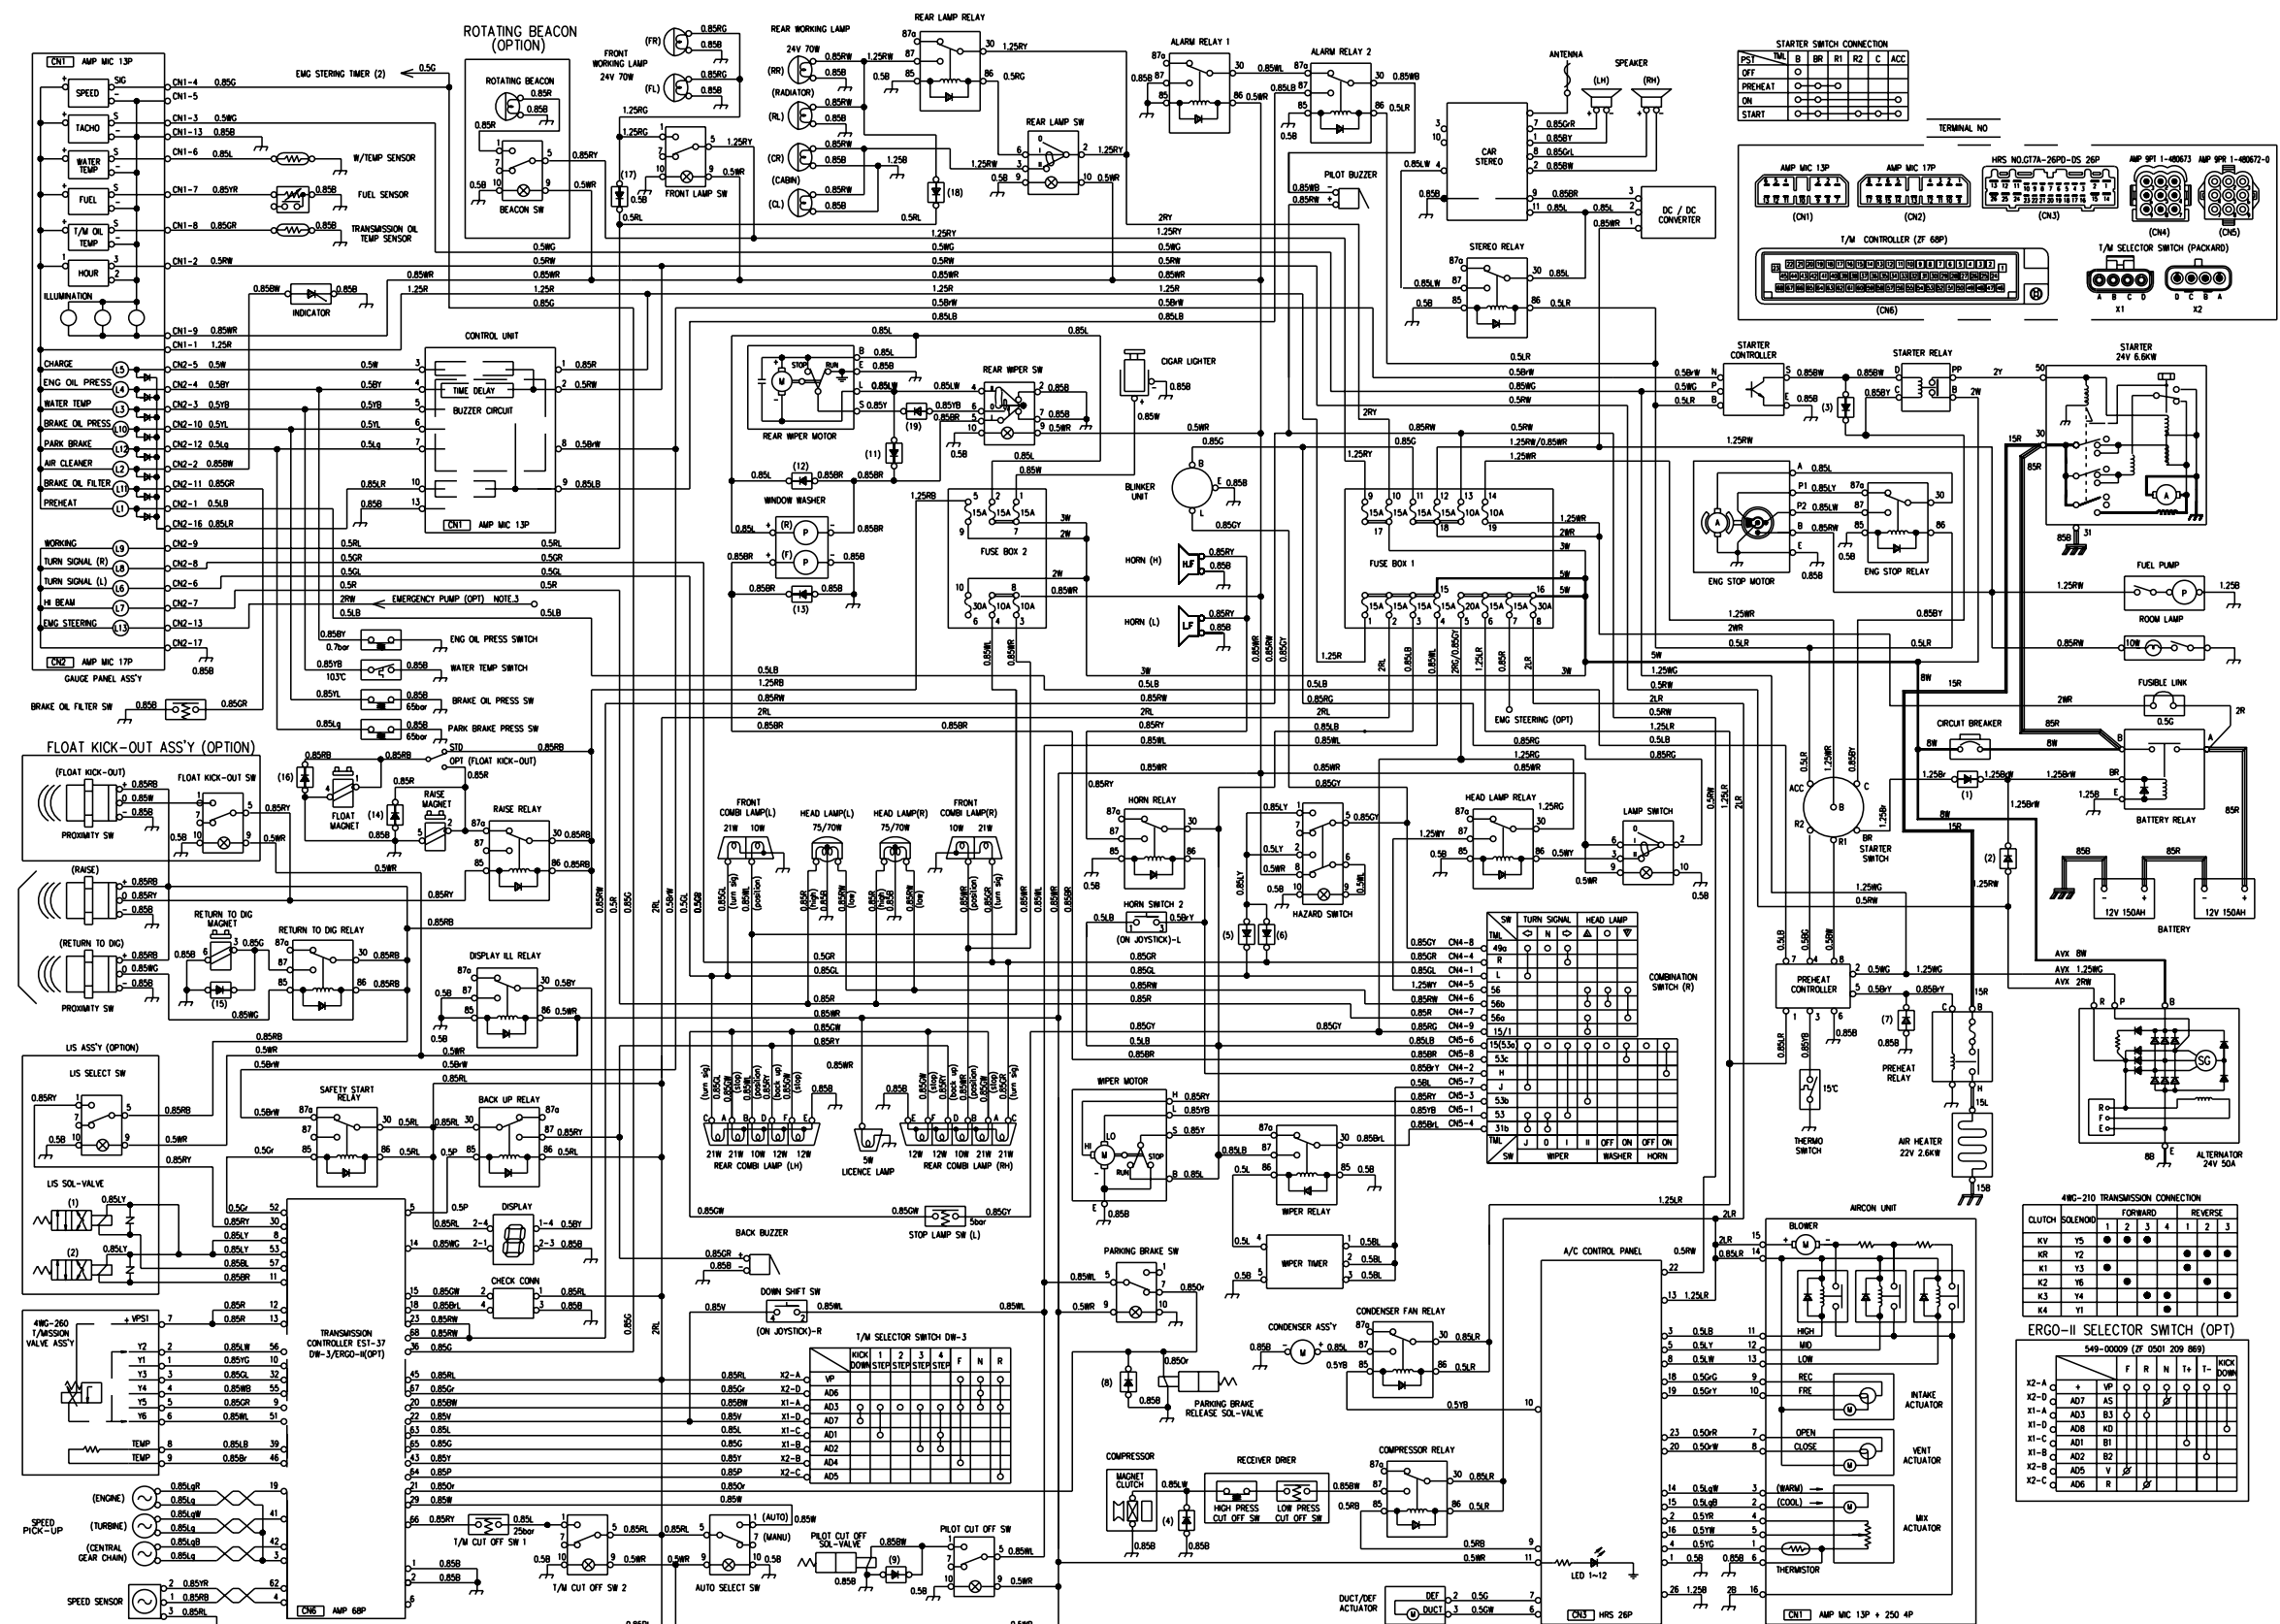


MEGA 400-V

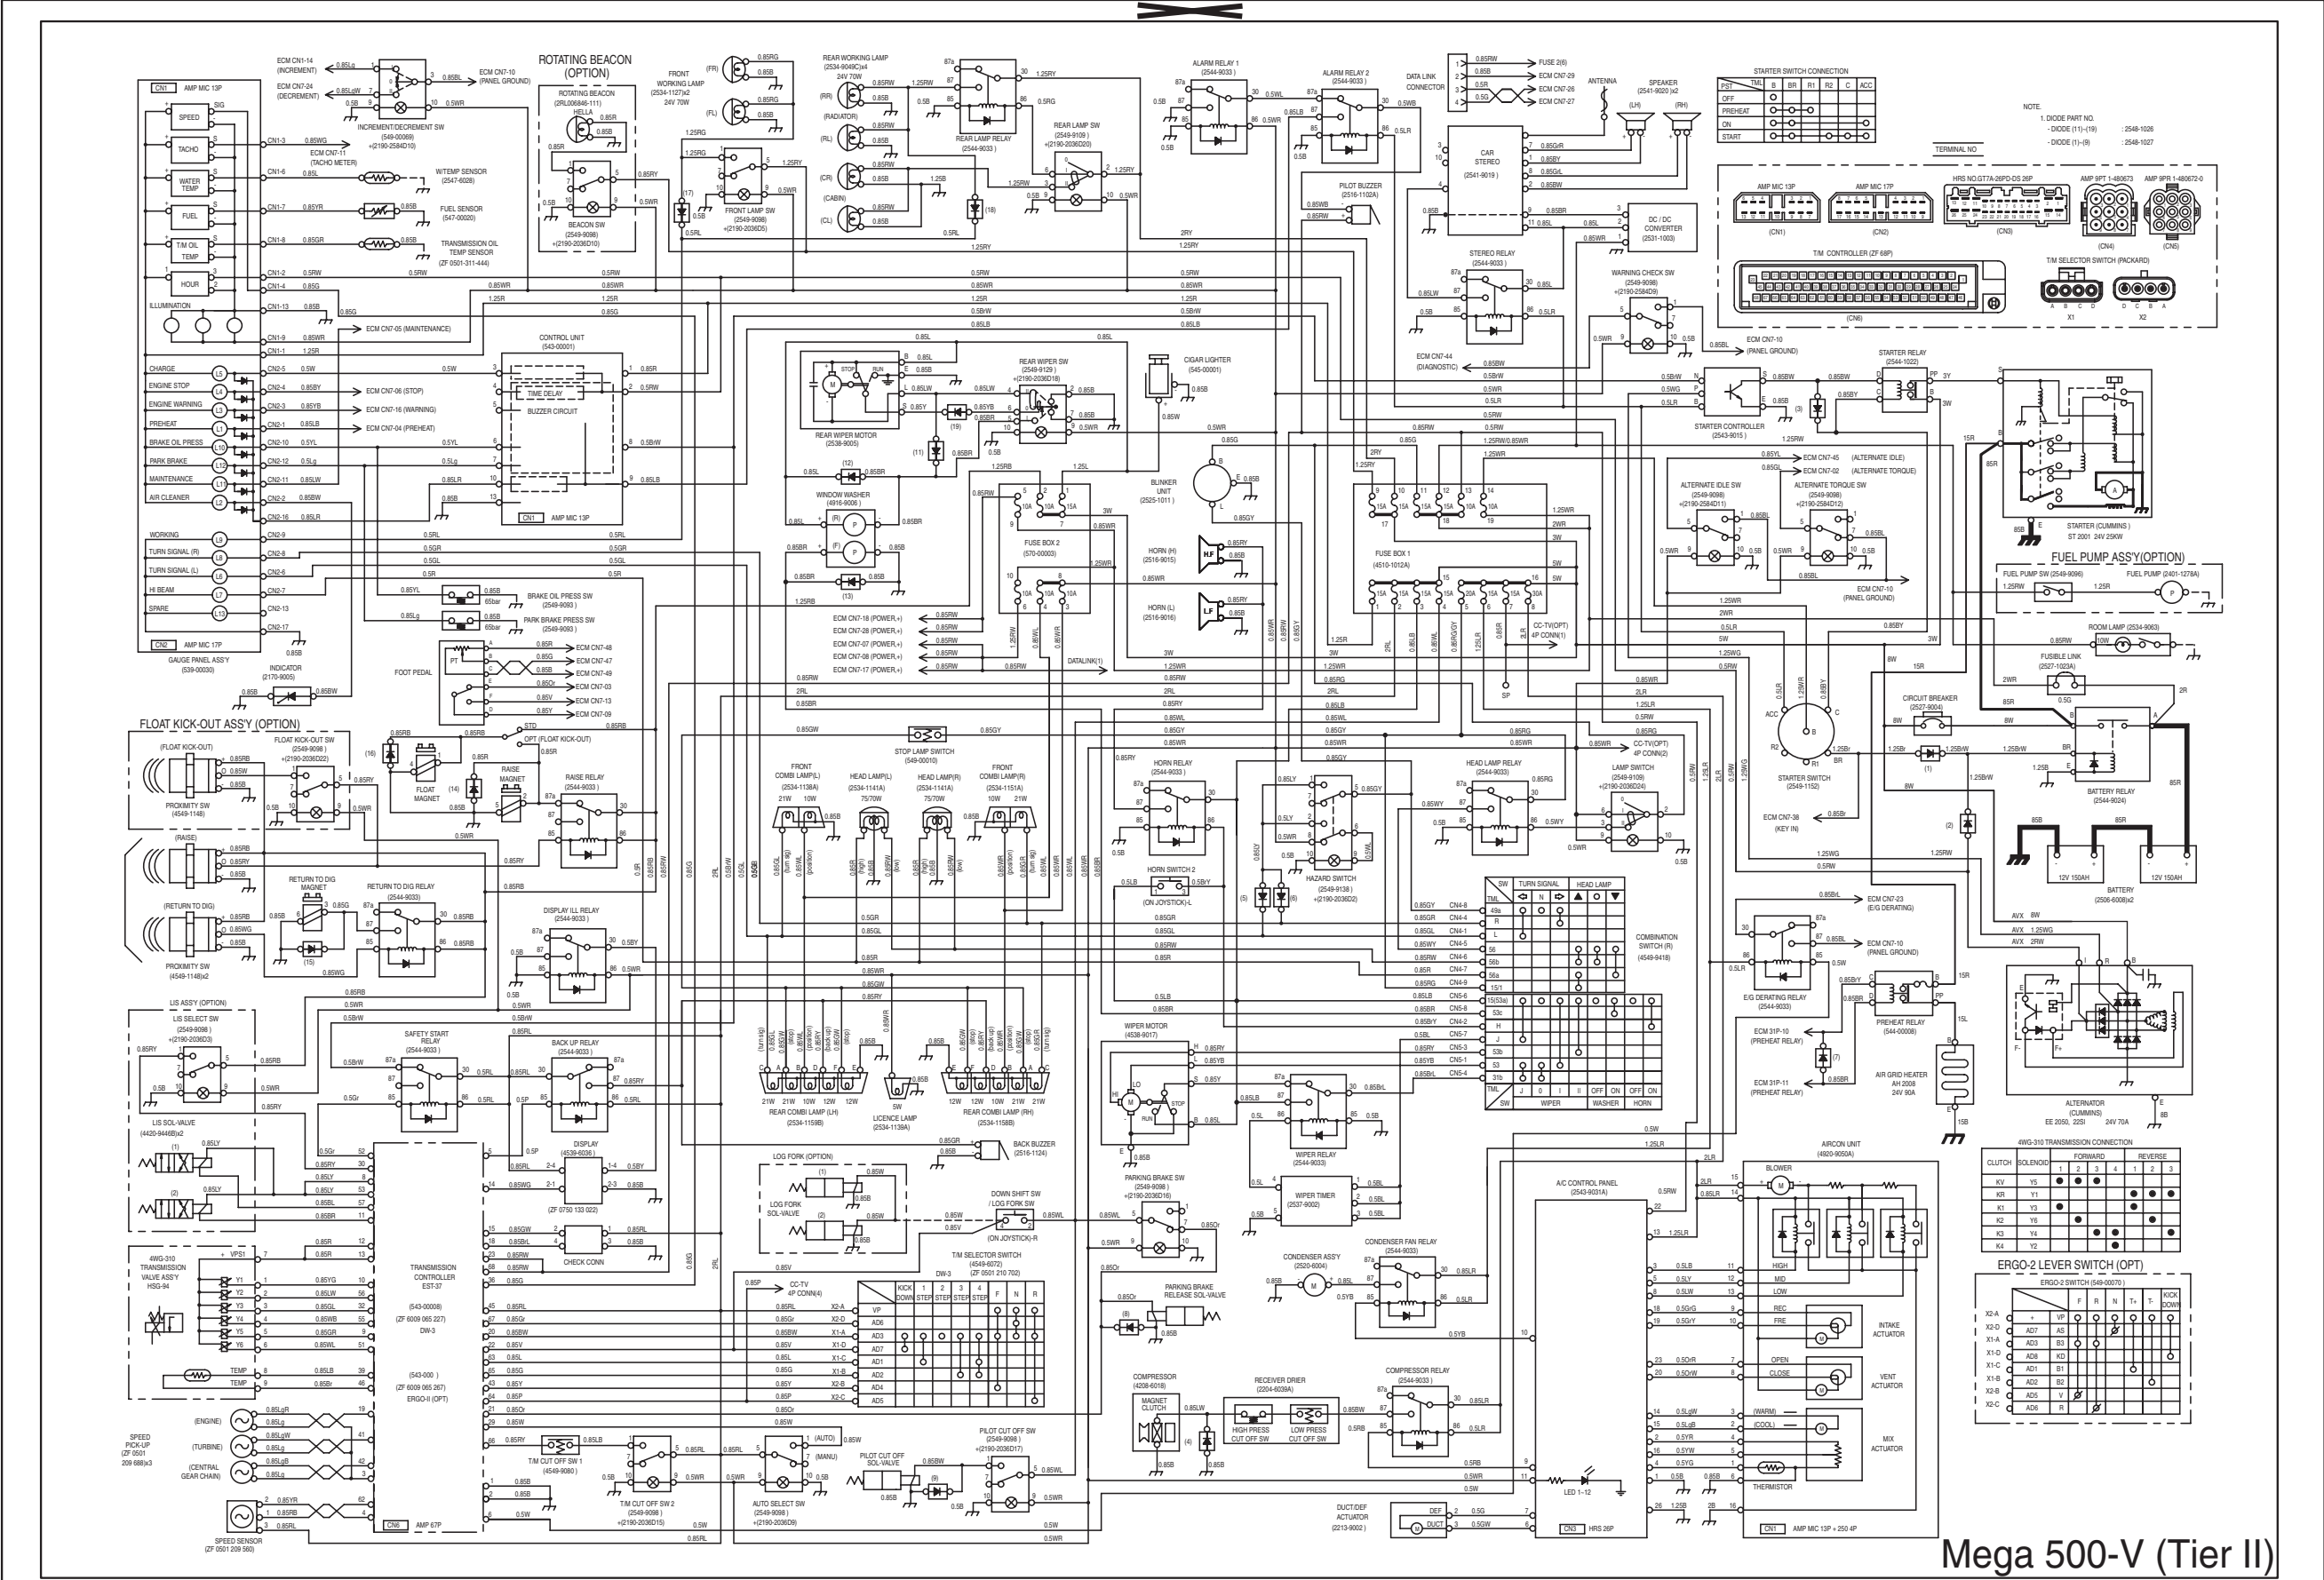

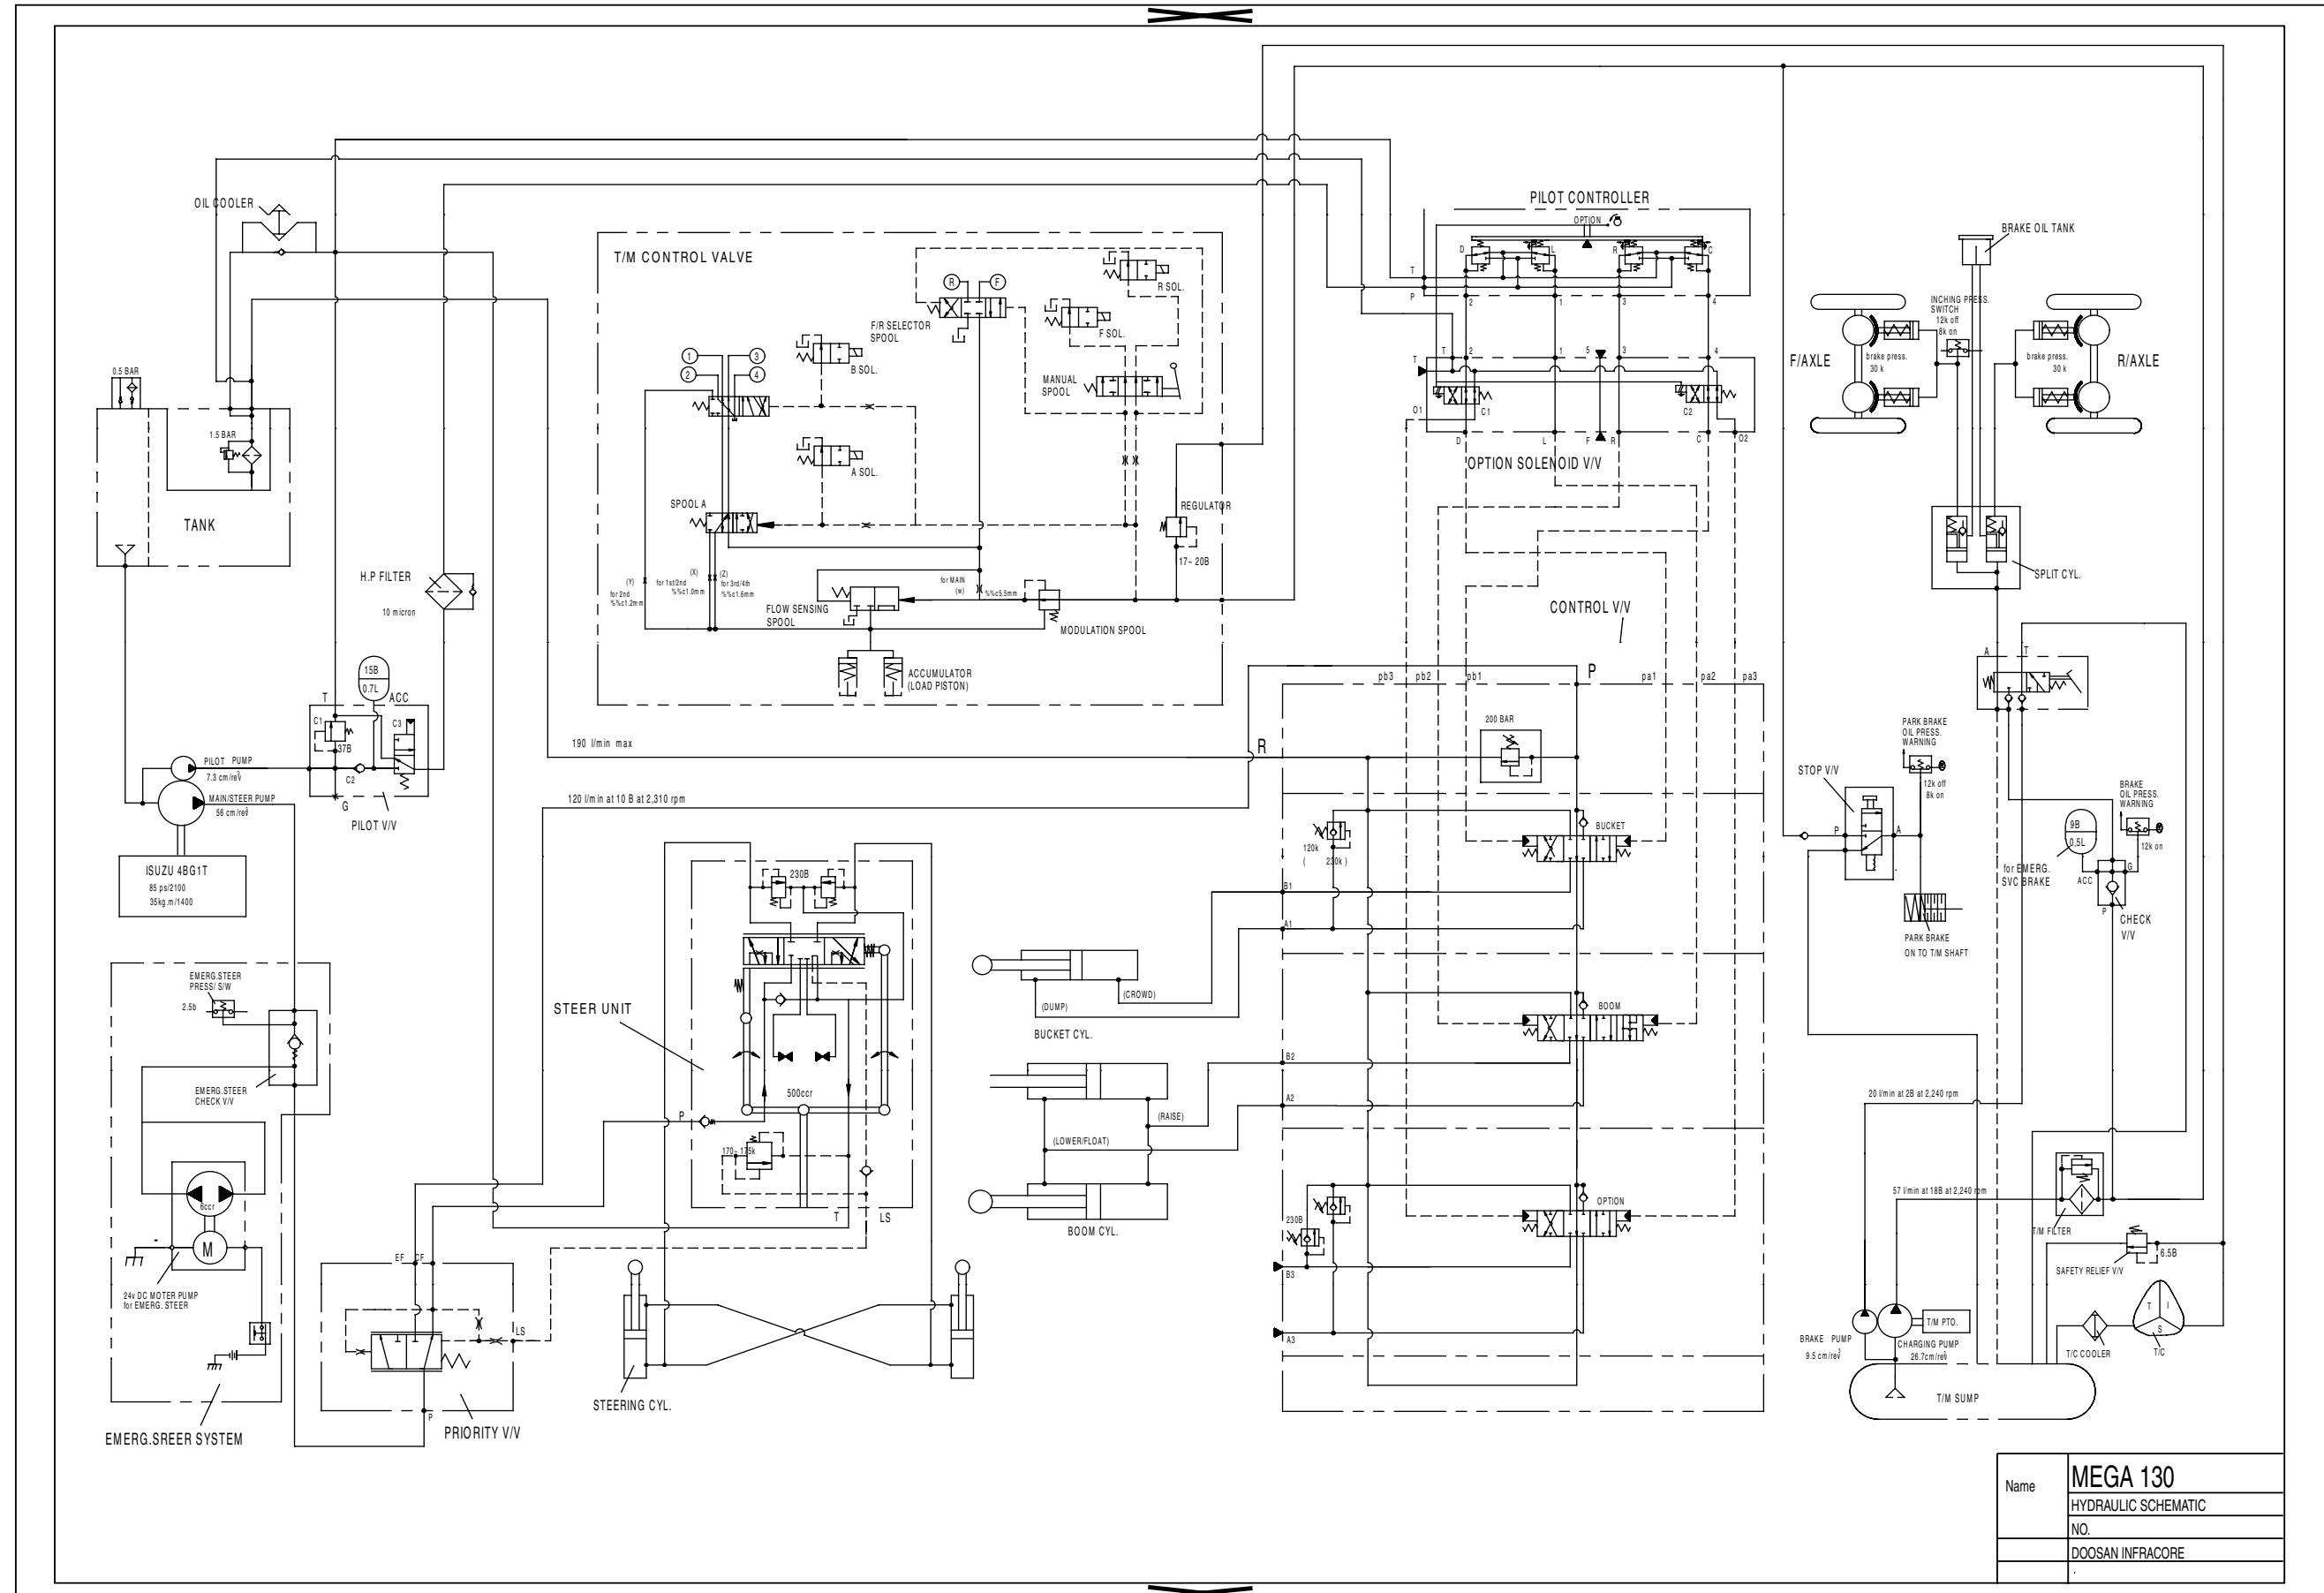


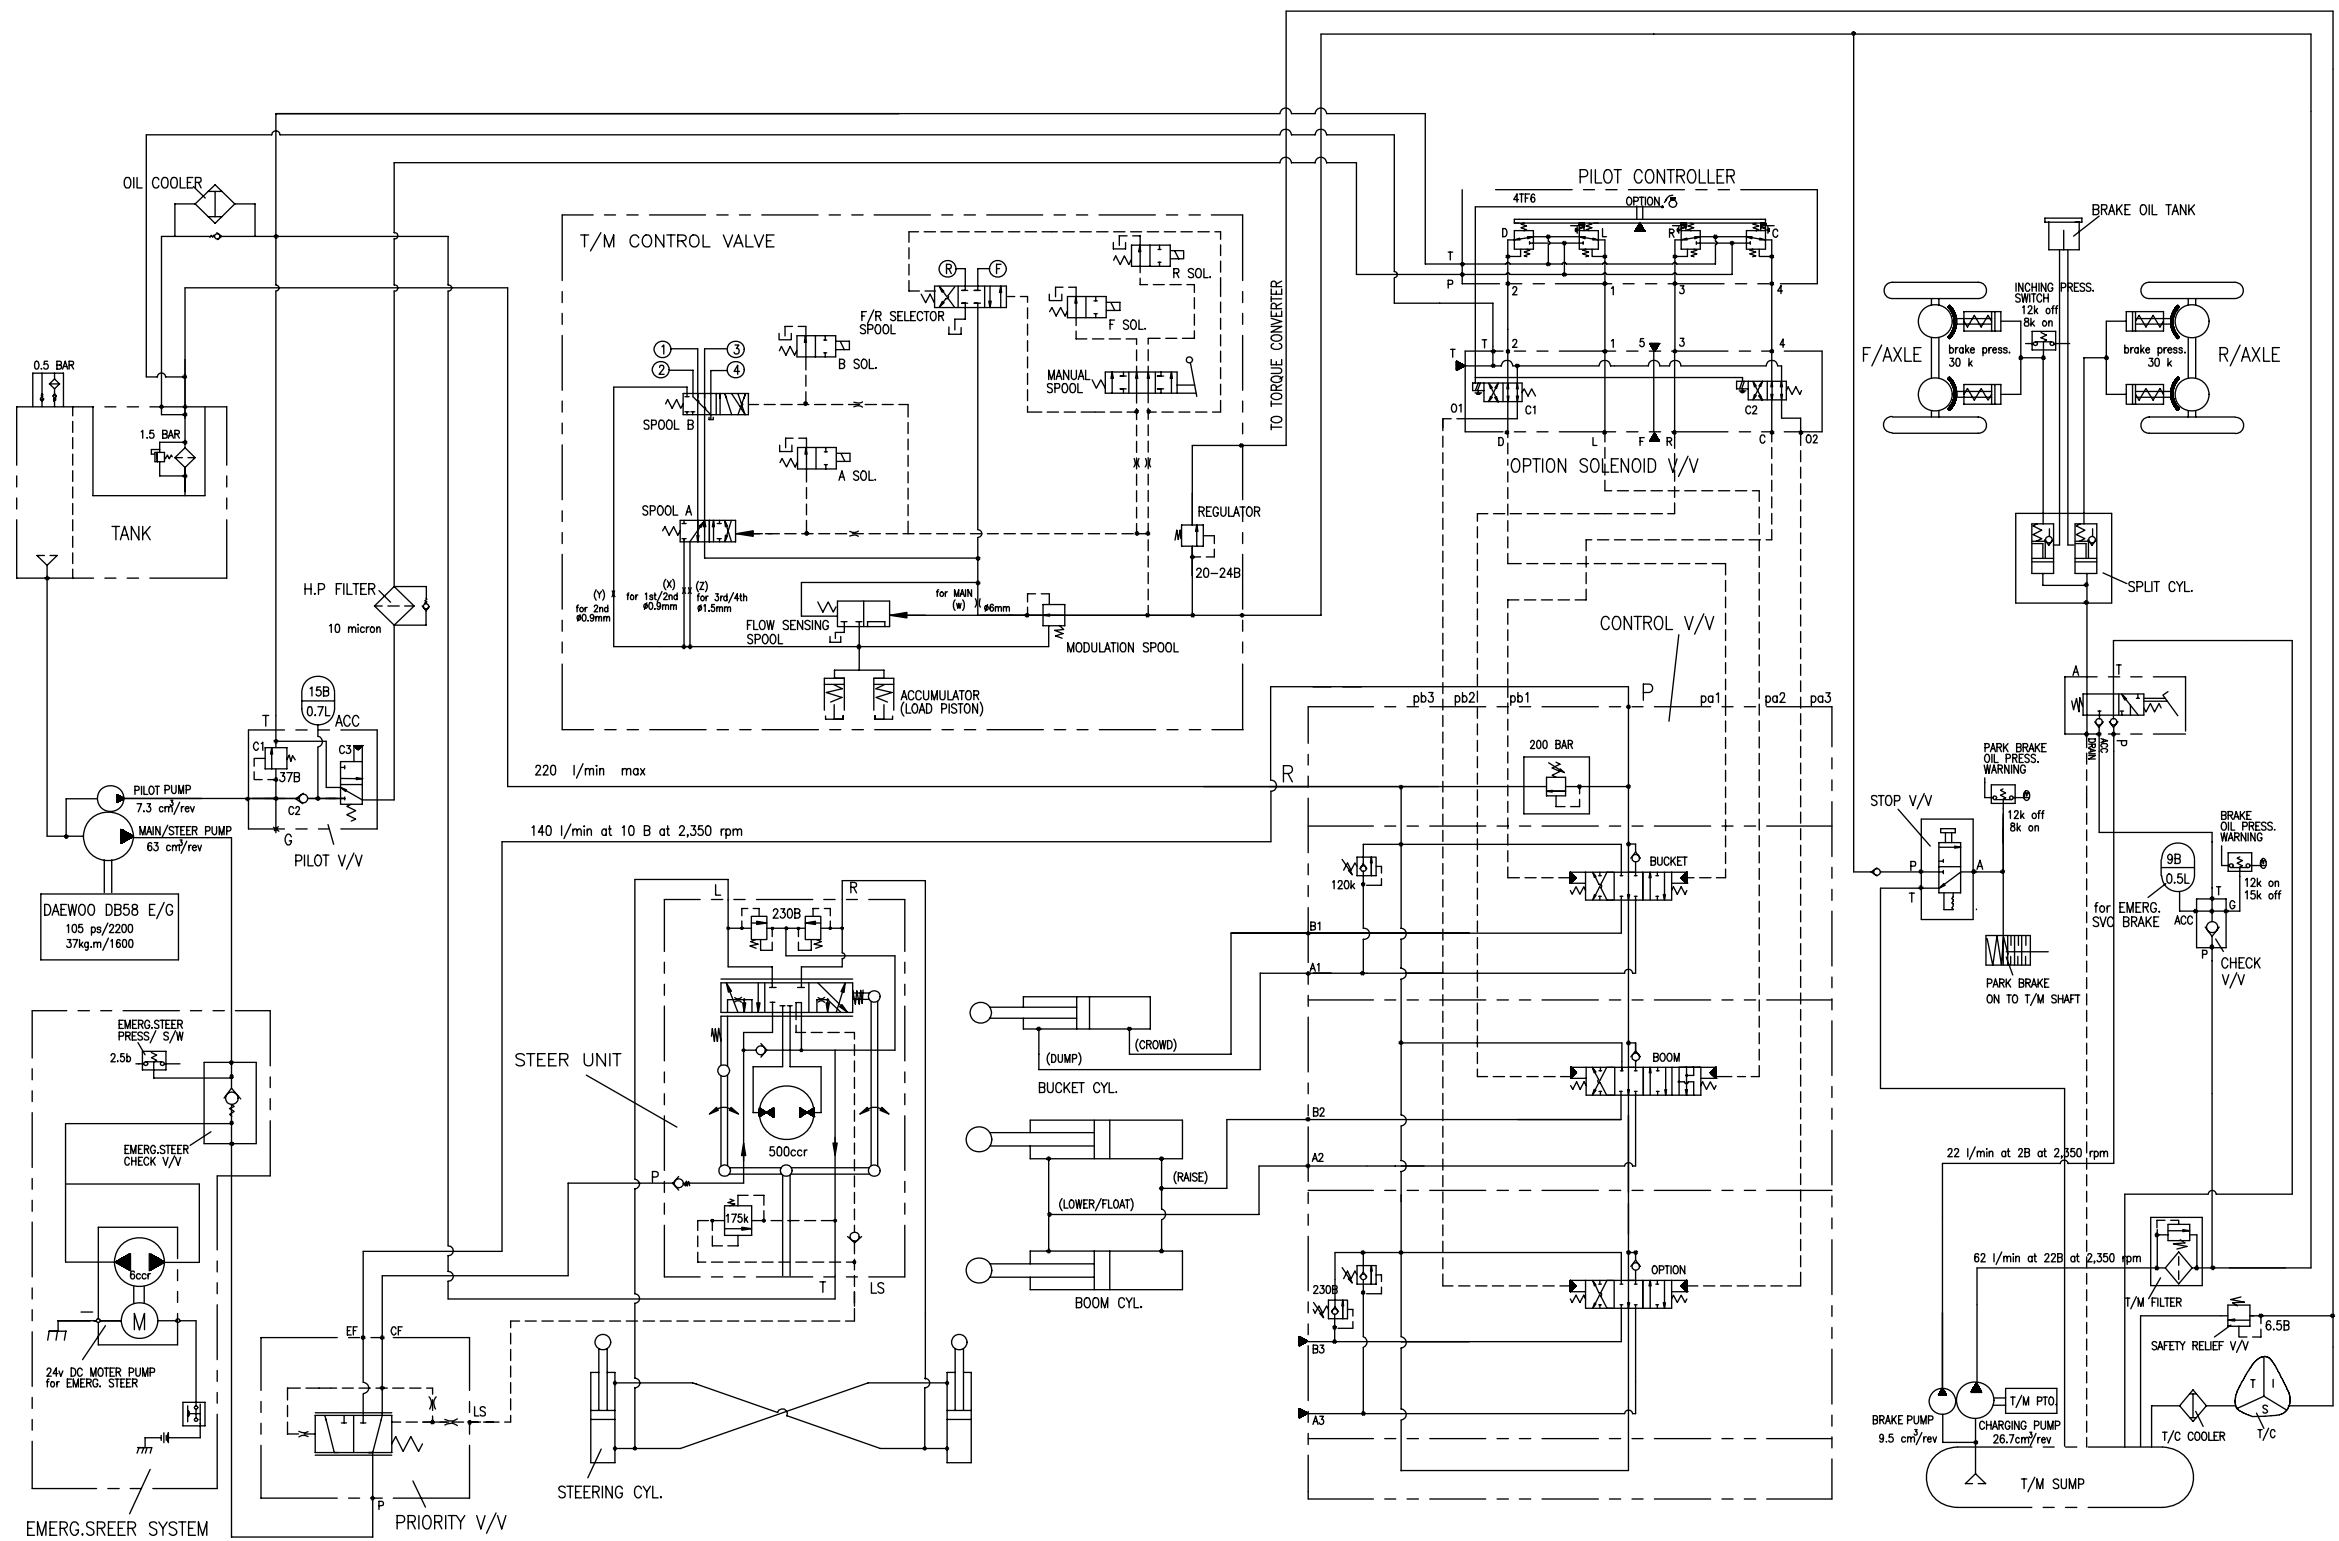



Name	MEGA 160
	HYDRAULIC SCHEMATIC
	NO.
	DOOSAN INFRACORE
	.

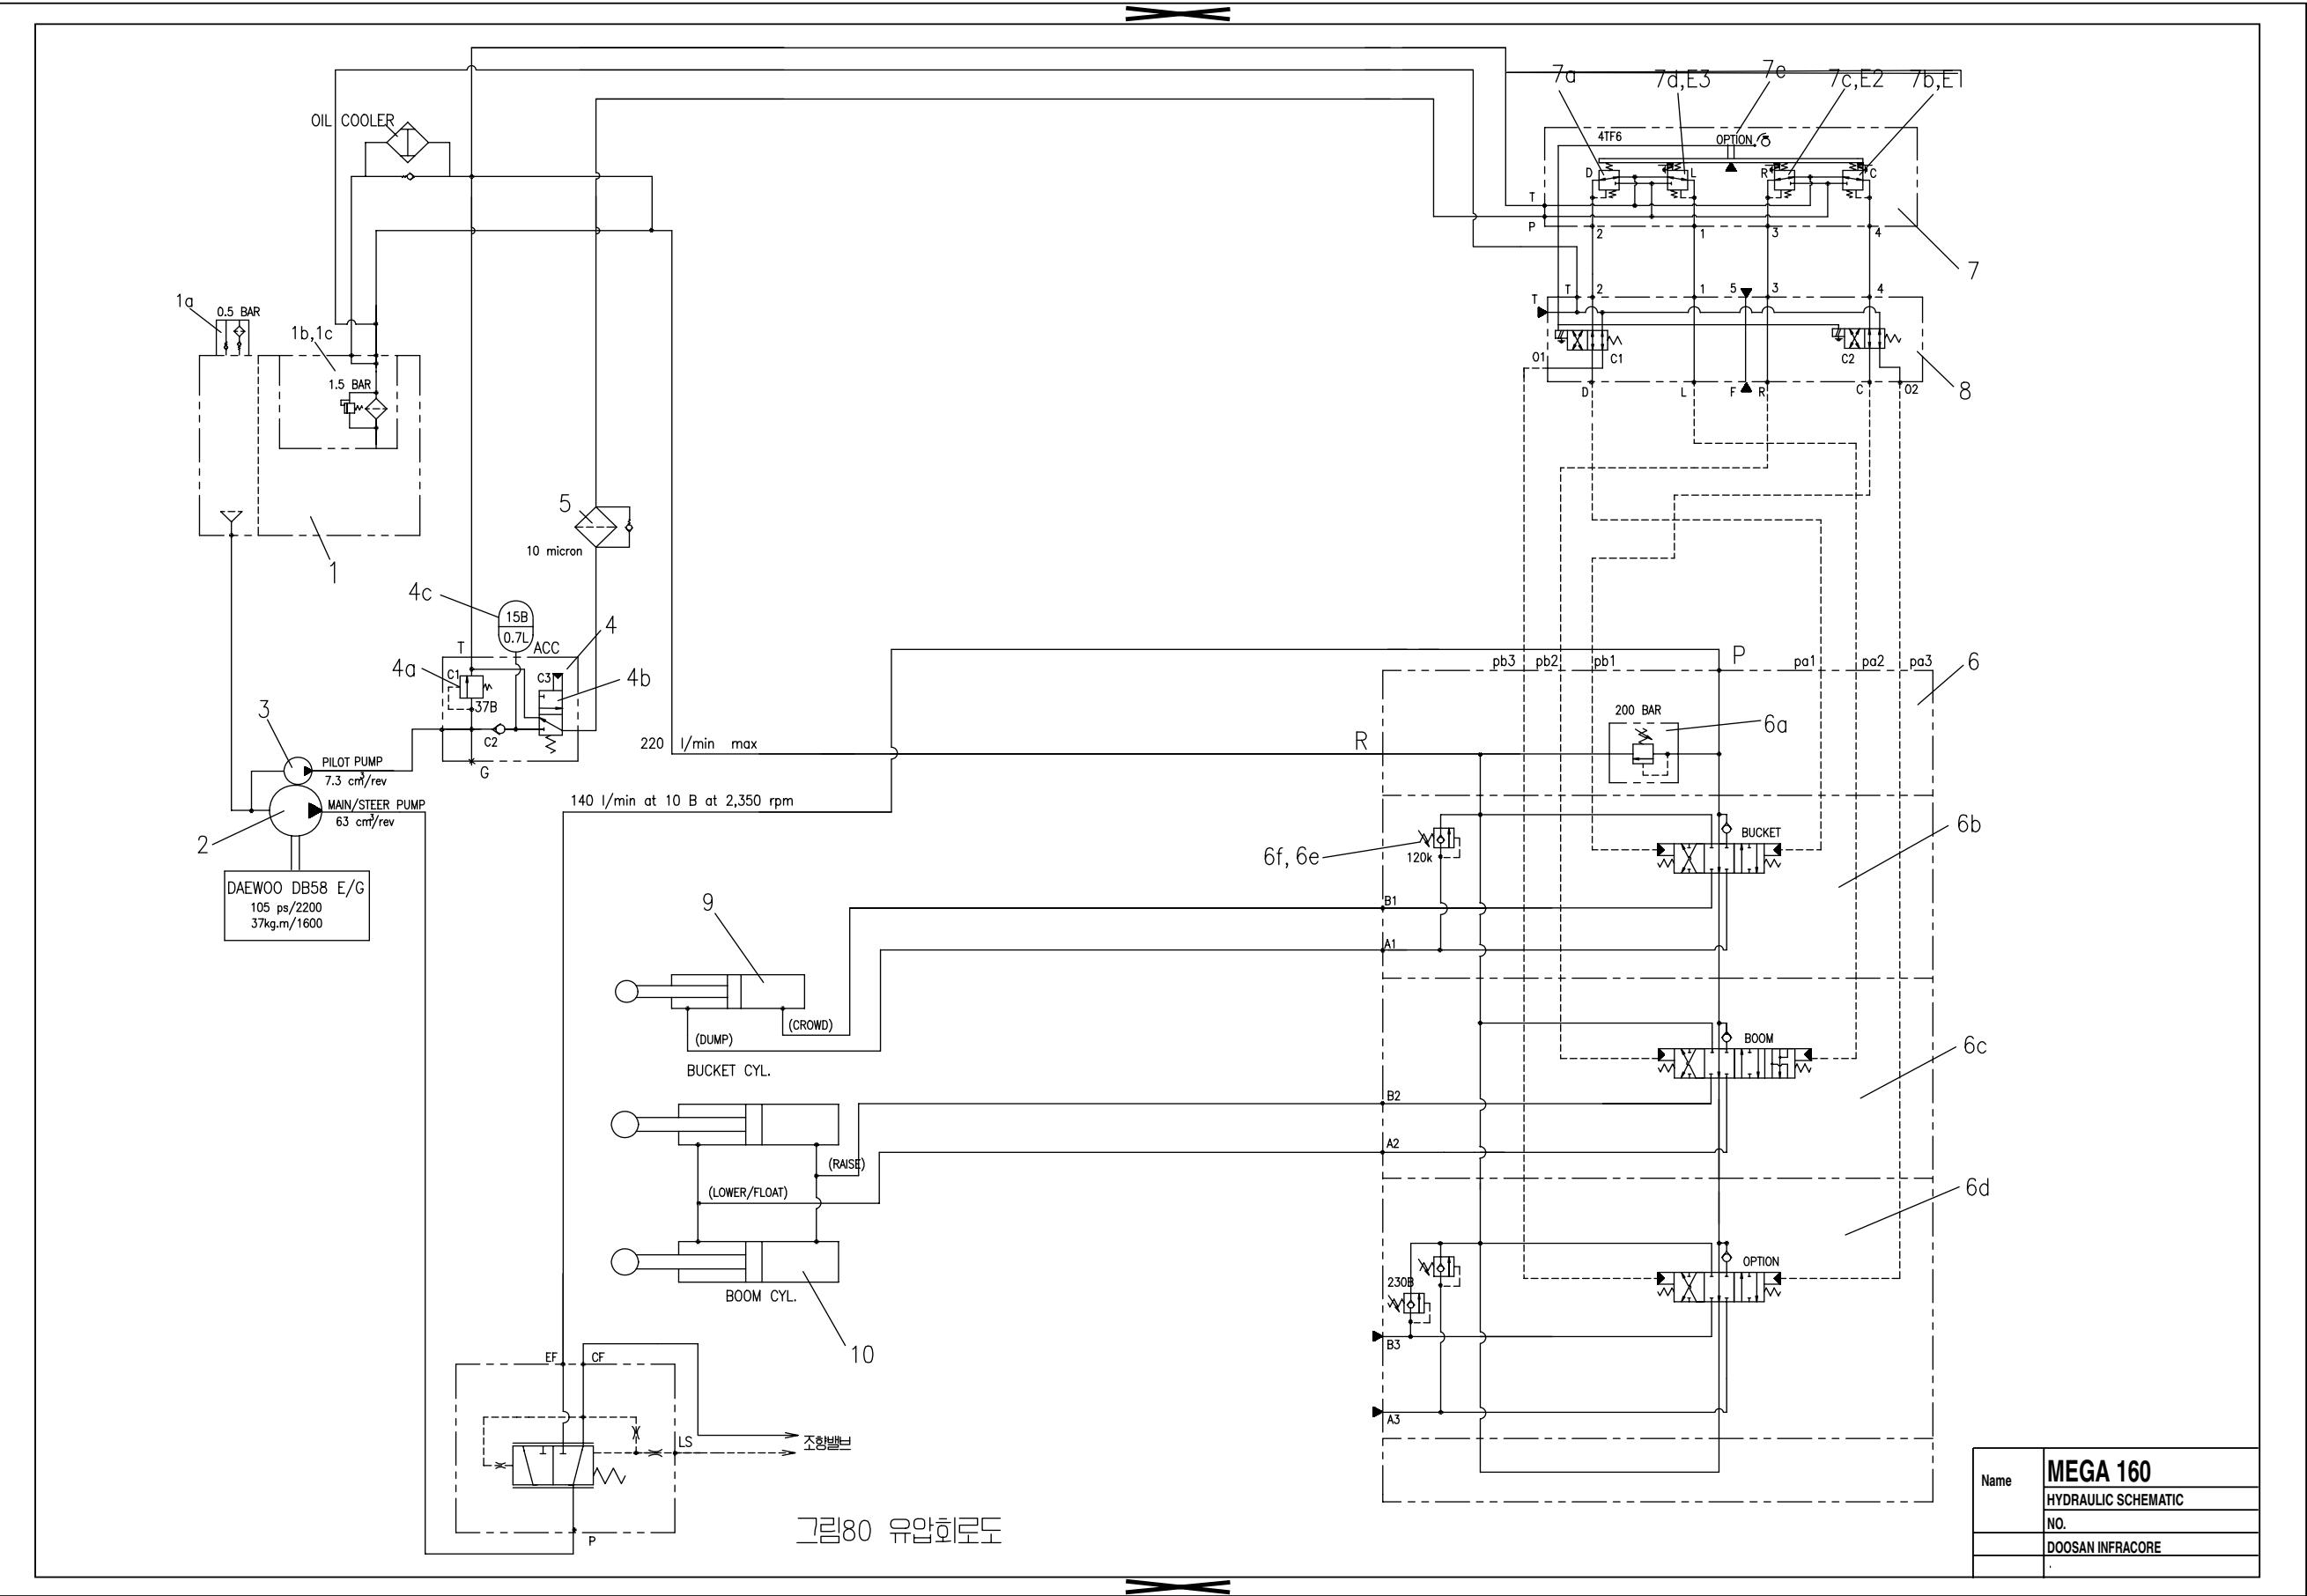

Name	MEGA 160
	HYDRAULIC SCHEMATIC
NO.	
	DOOSAN INFRACORE

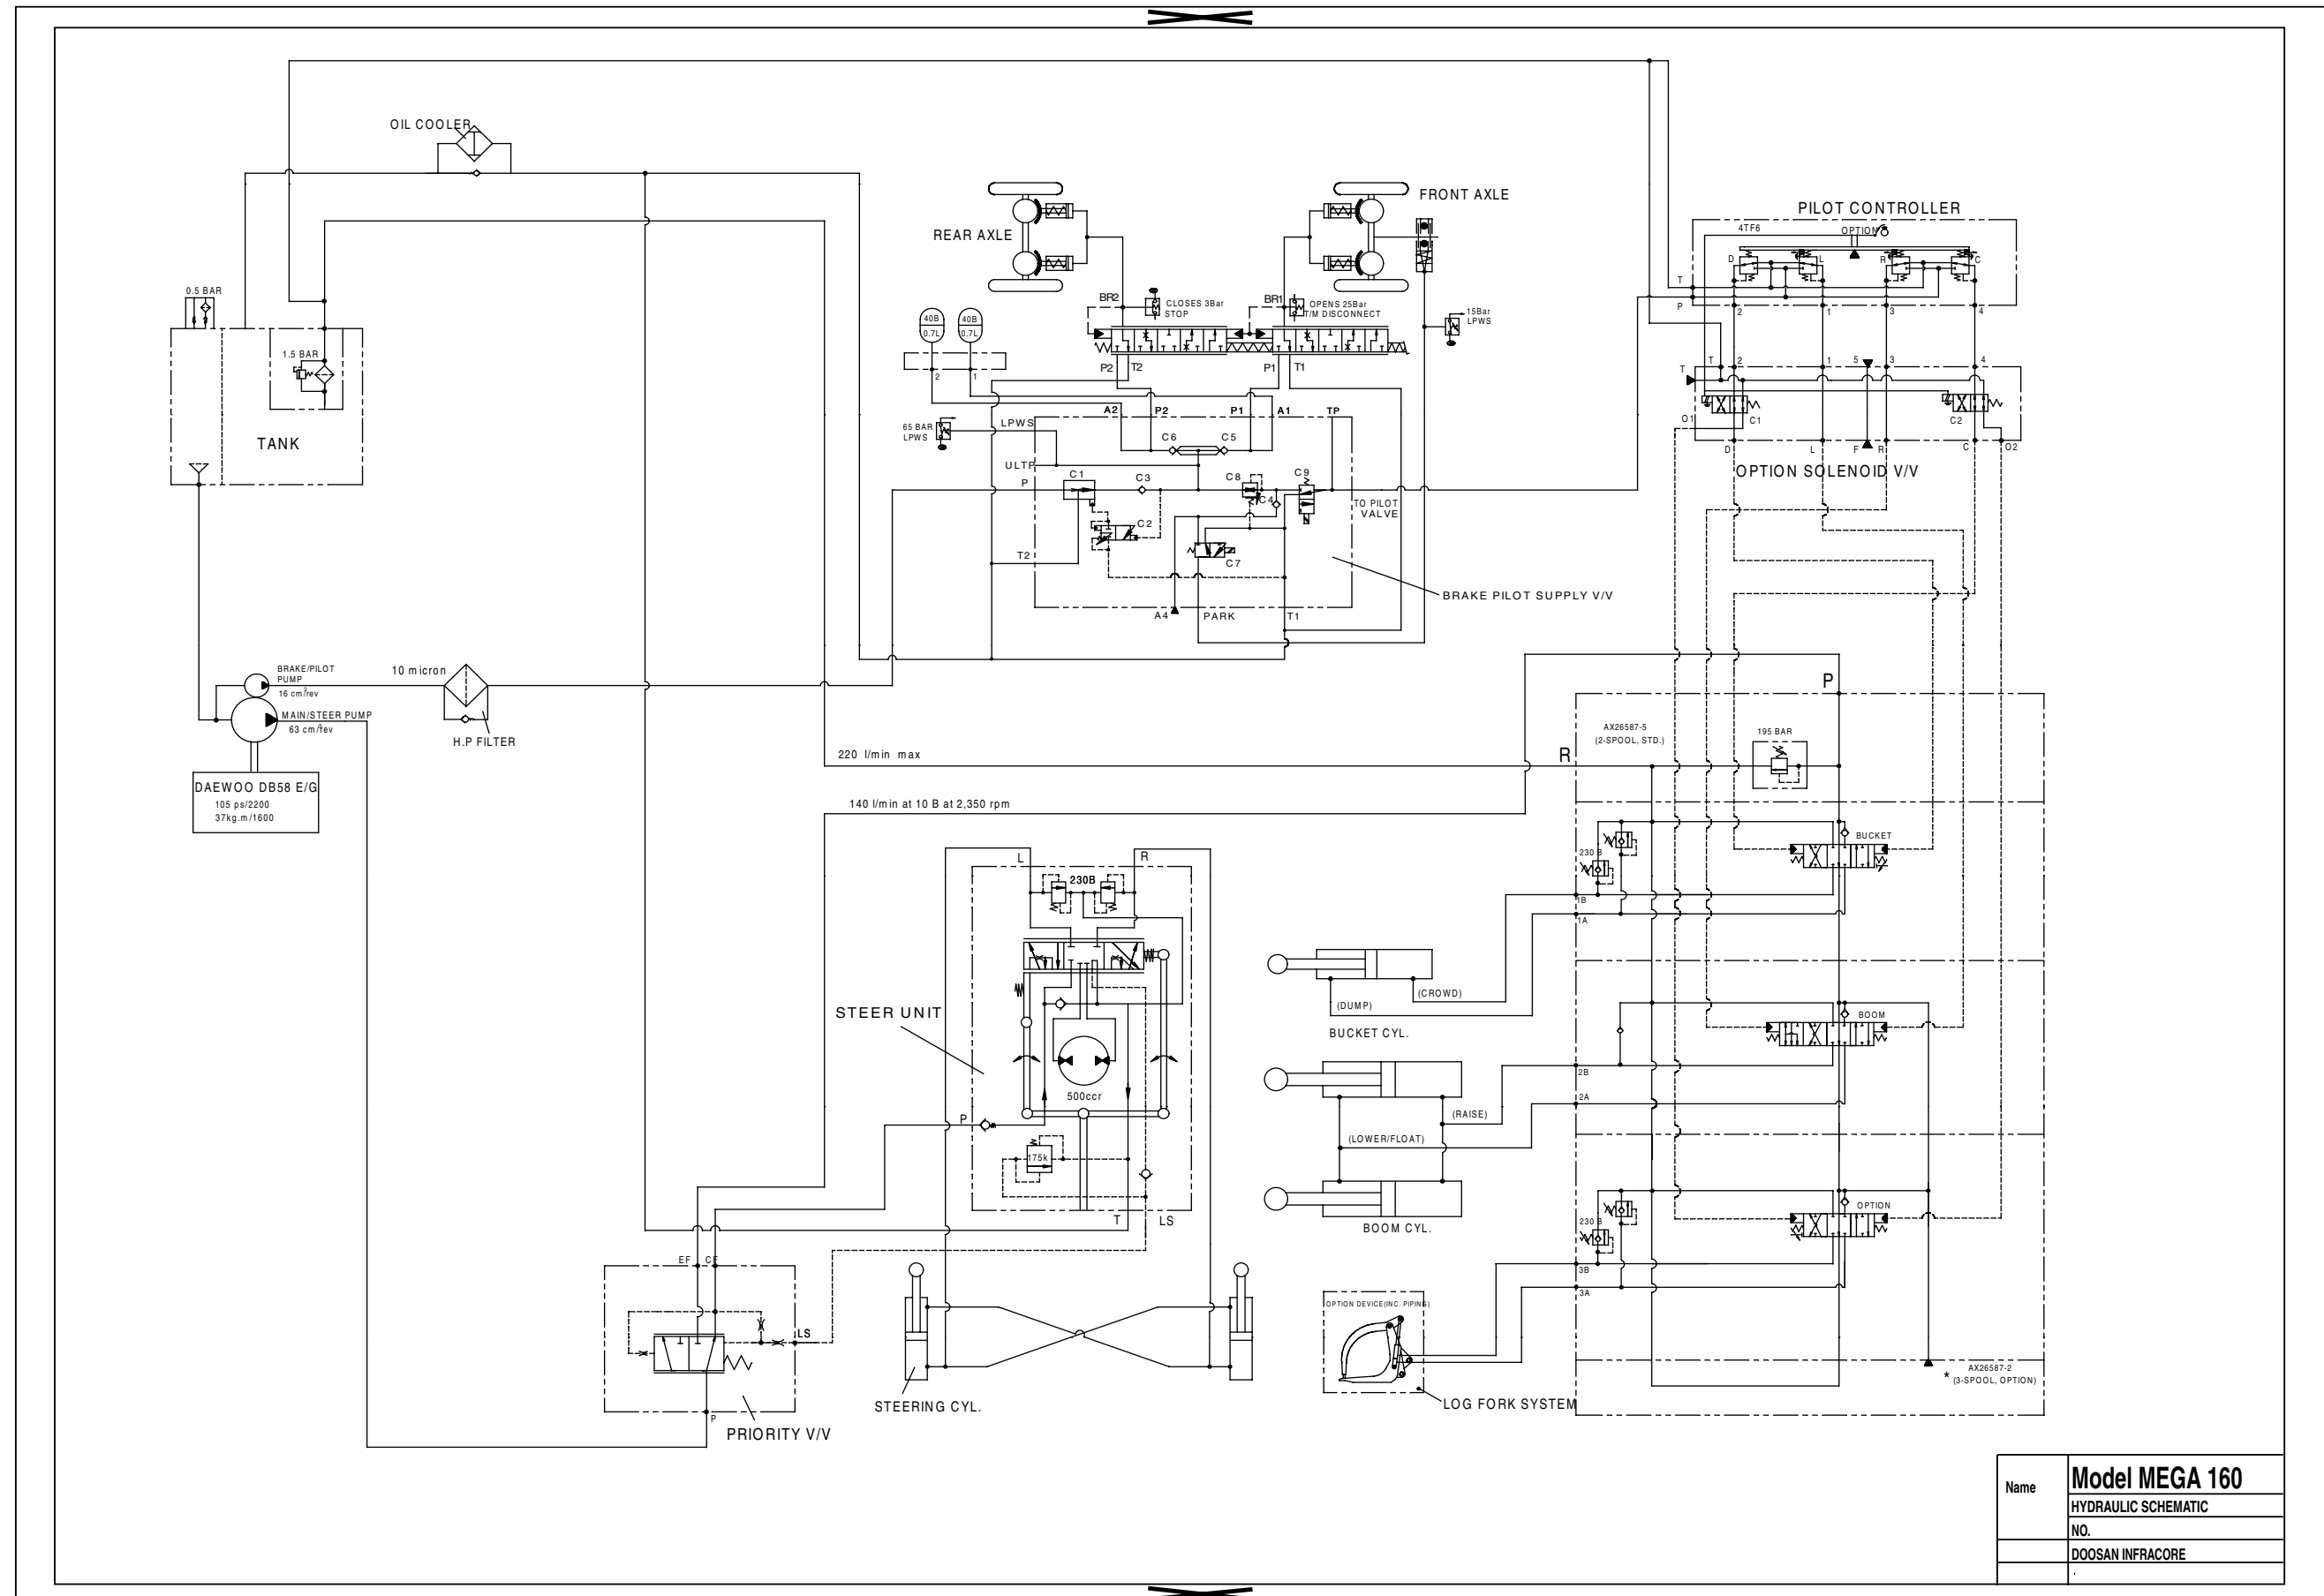


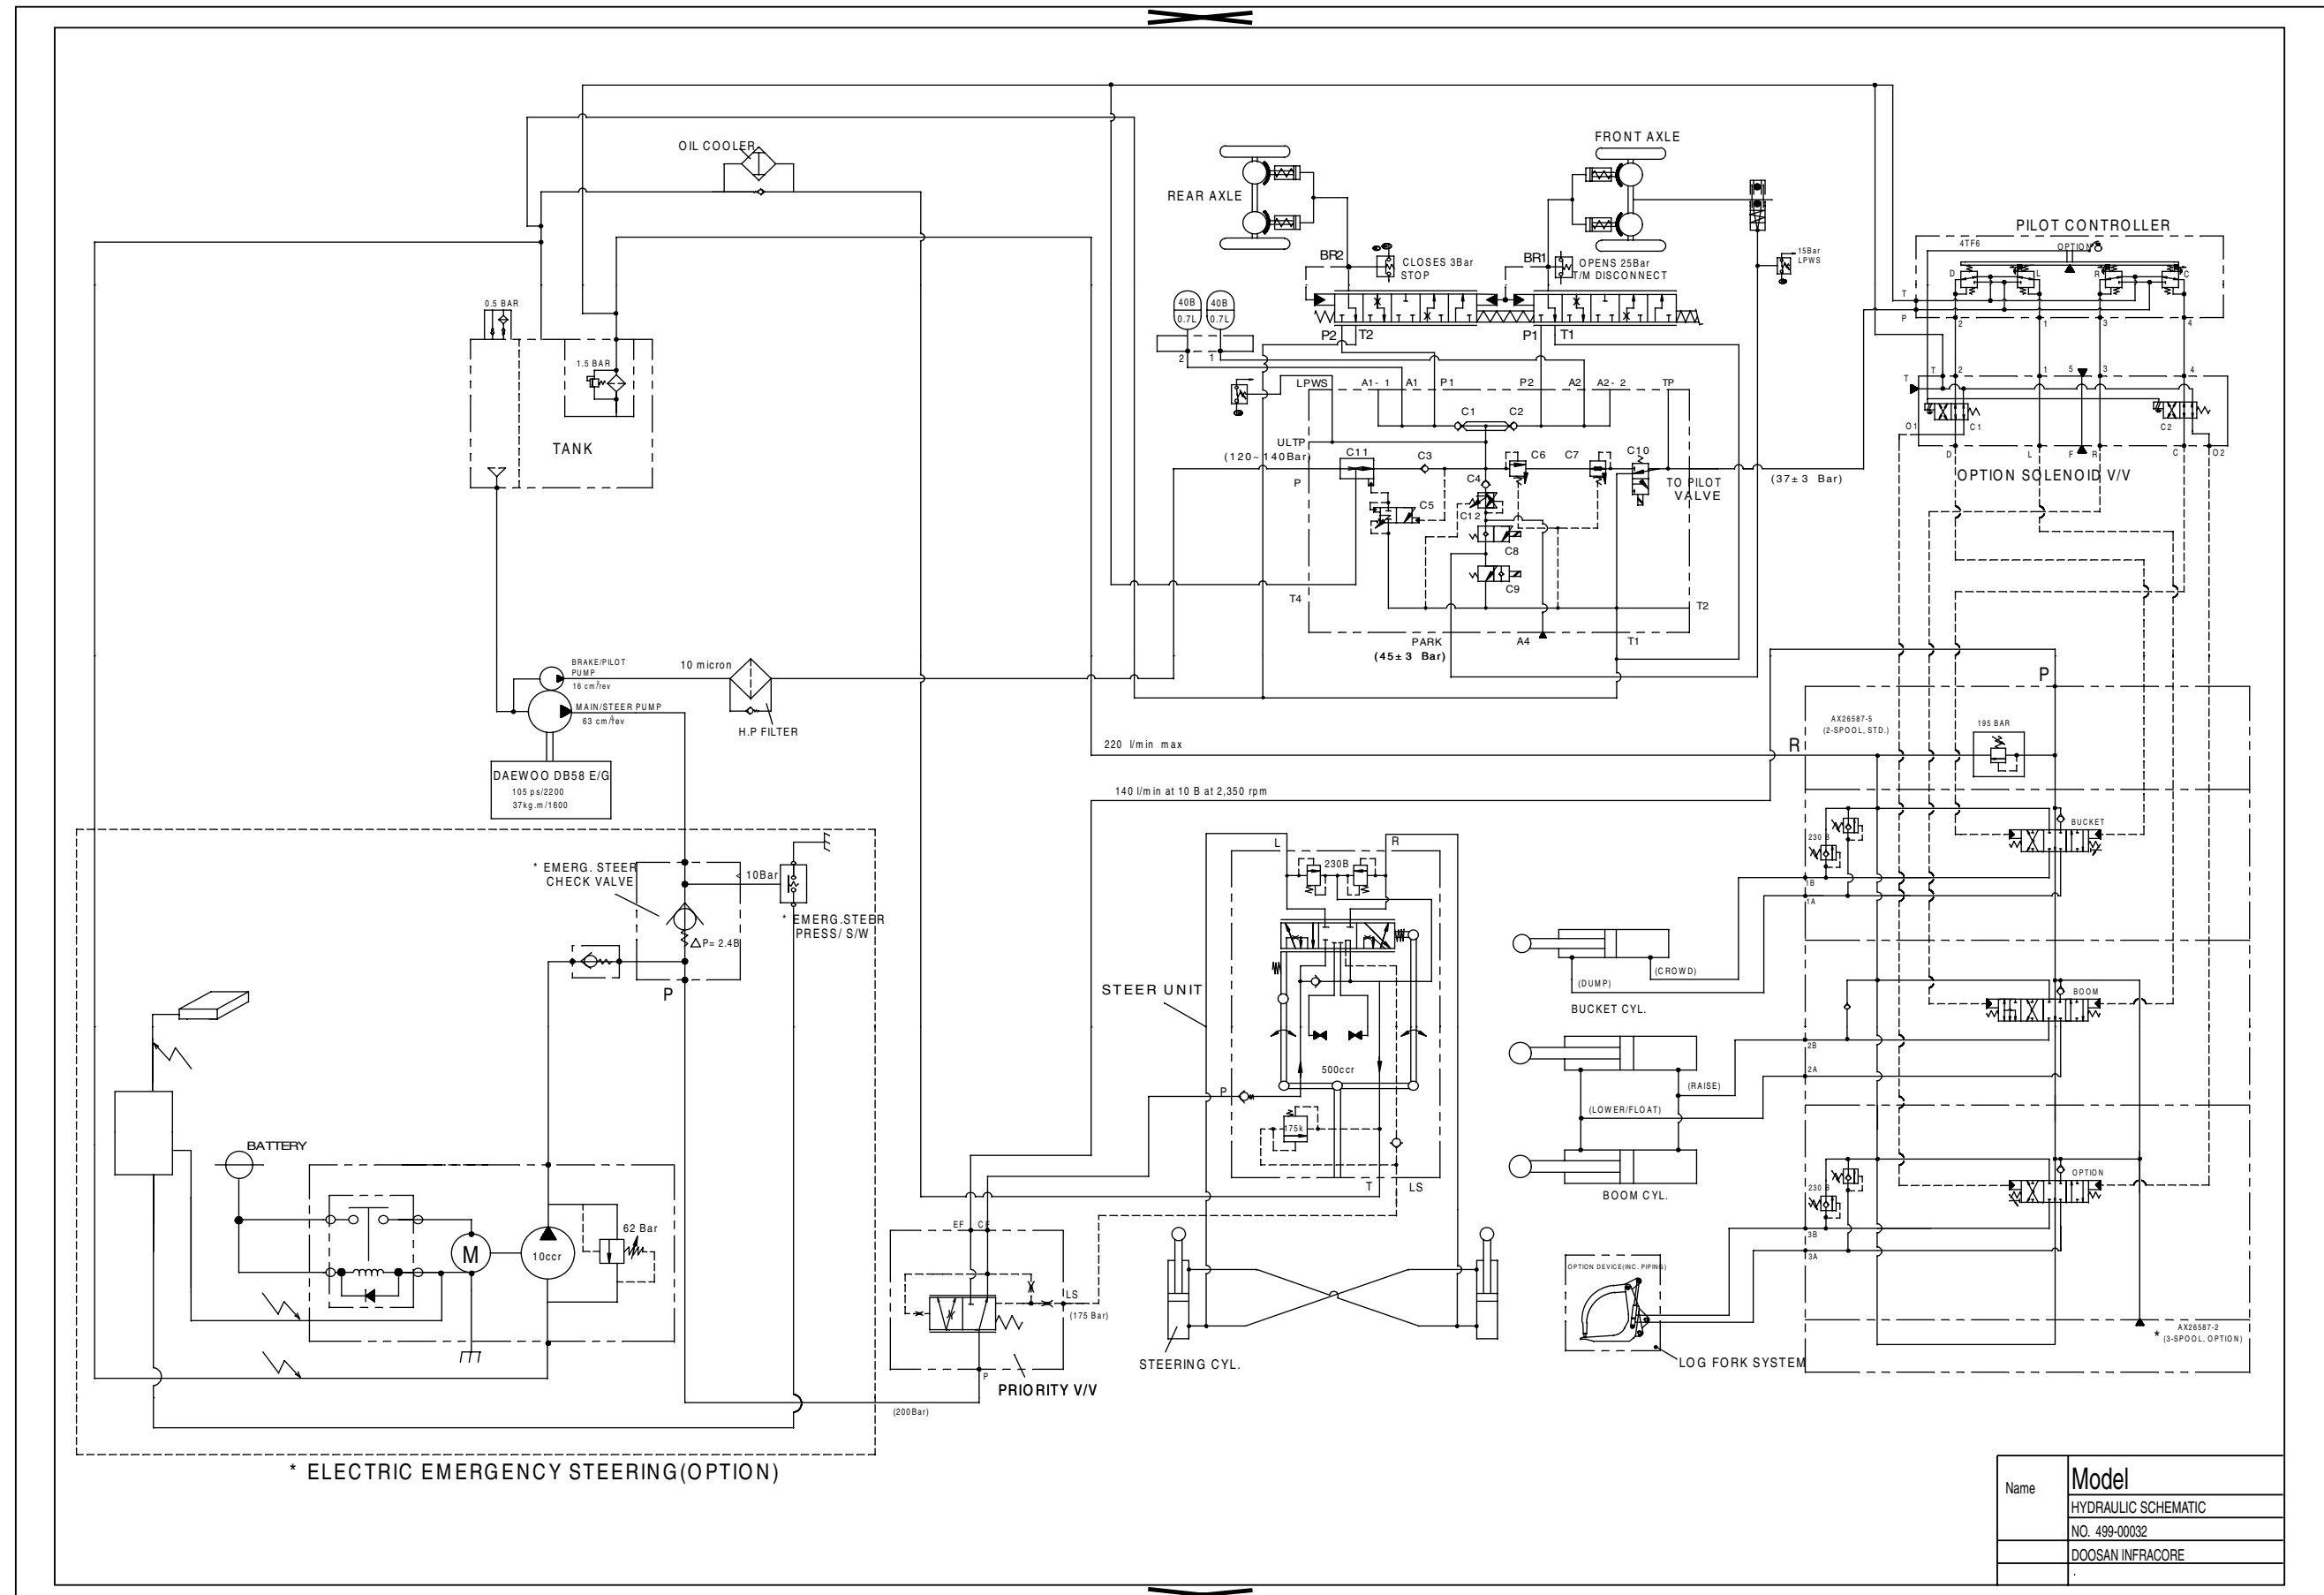

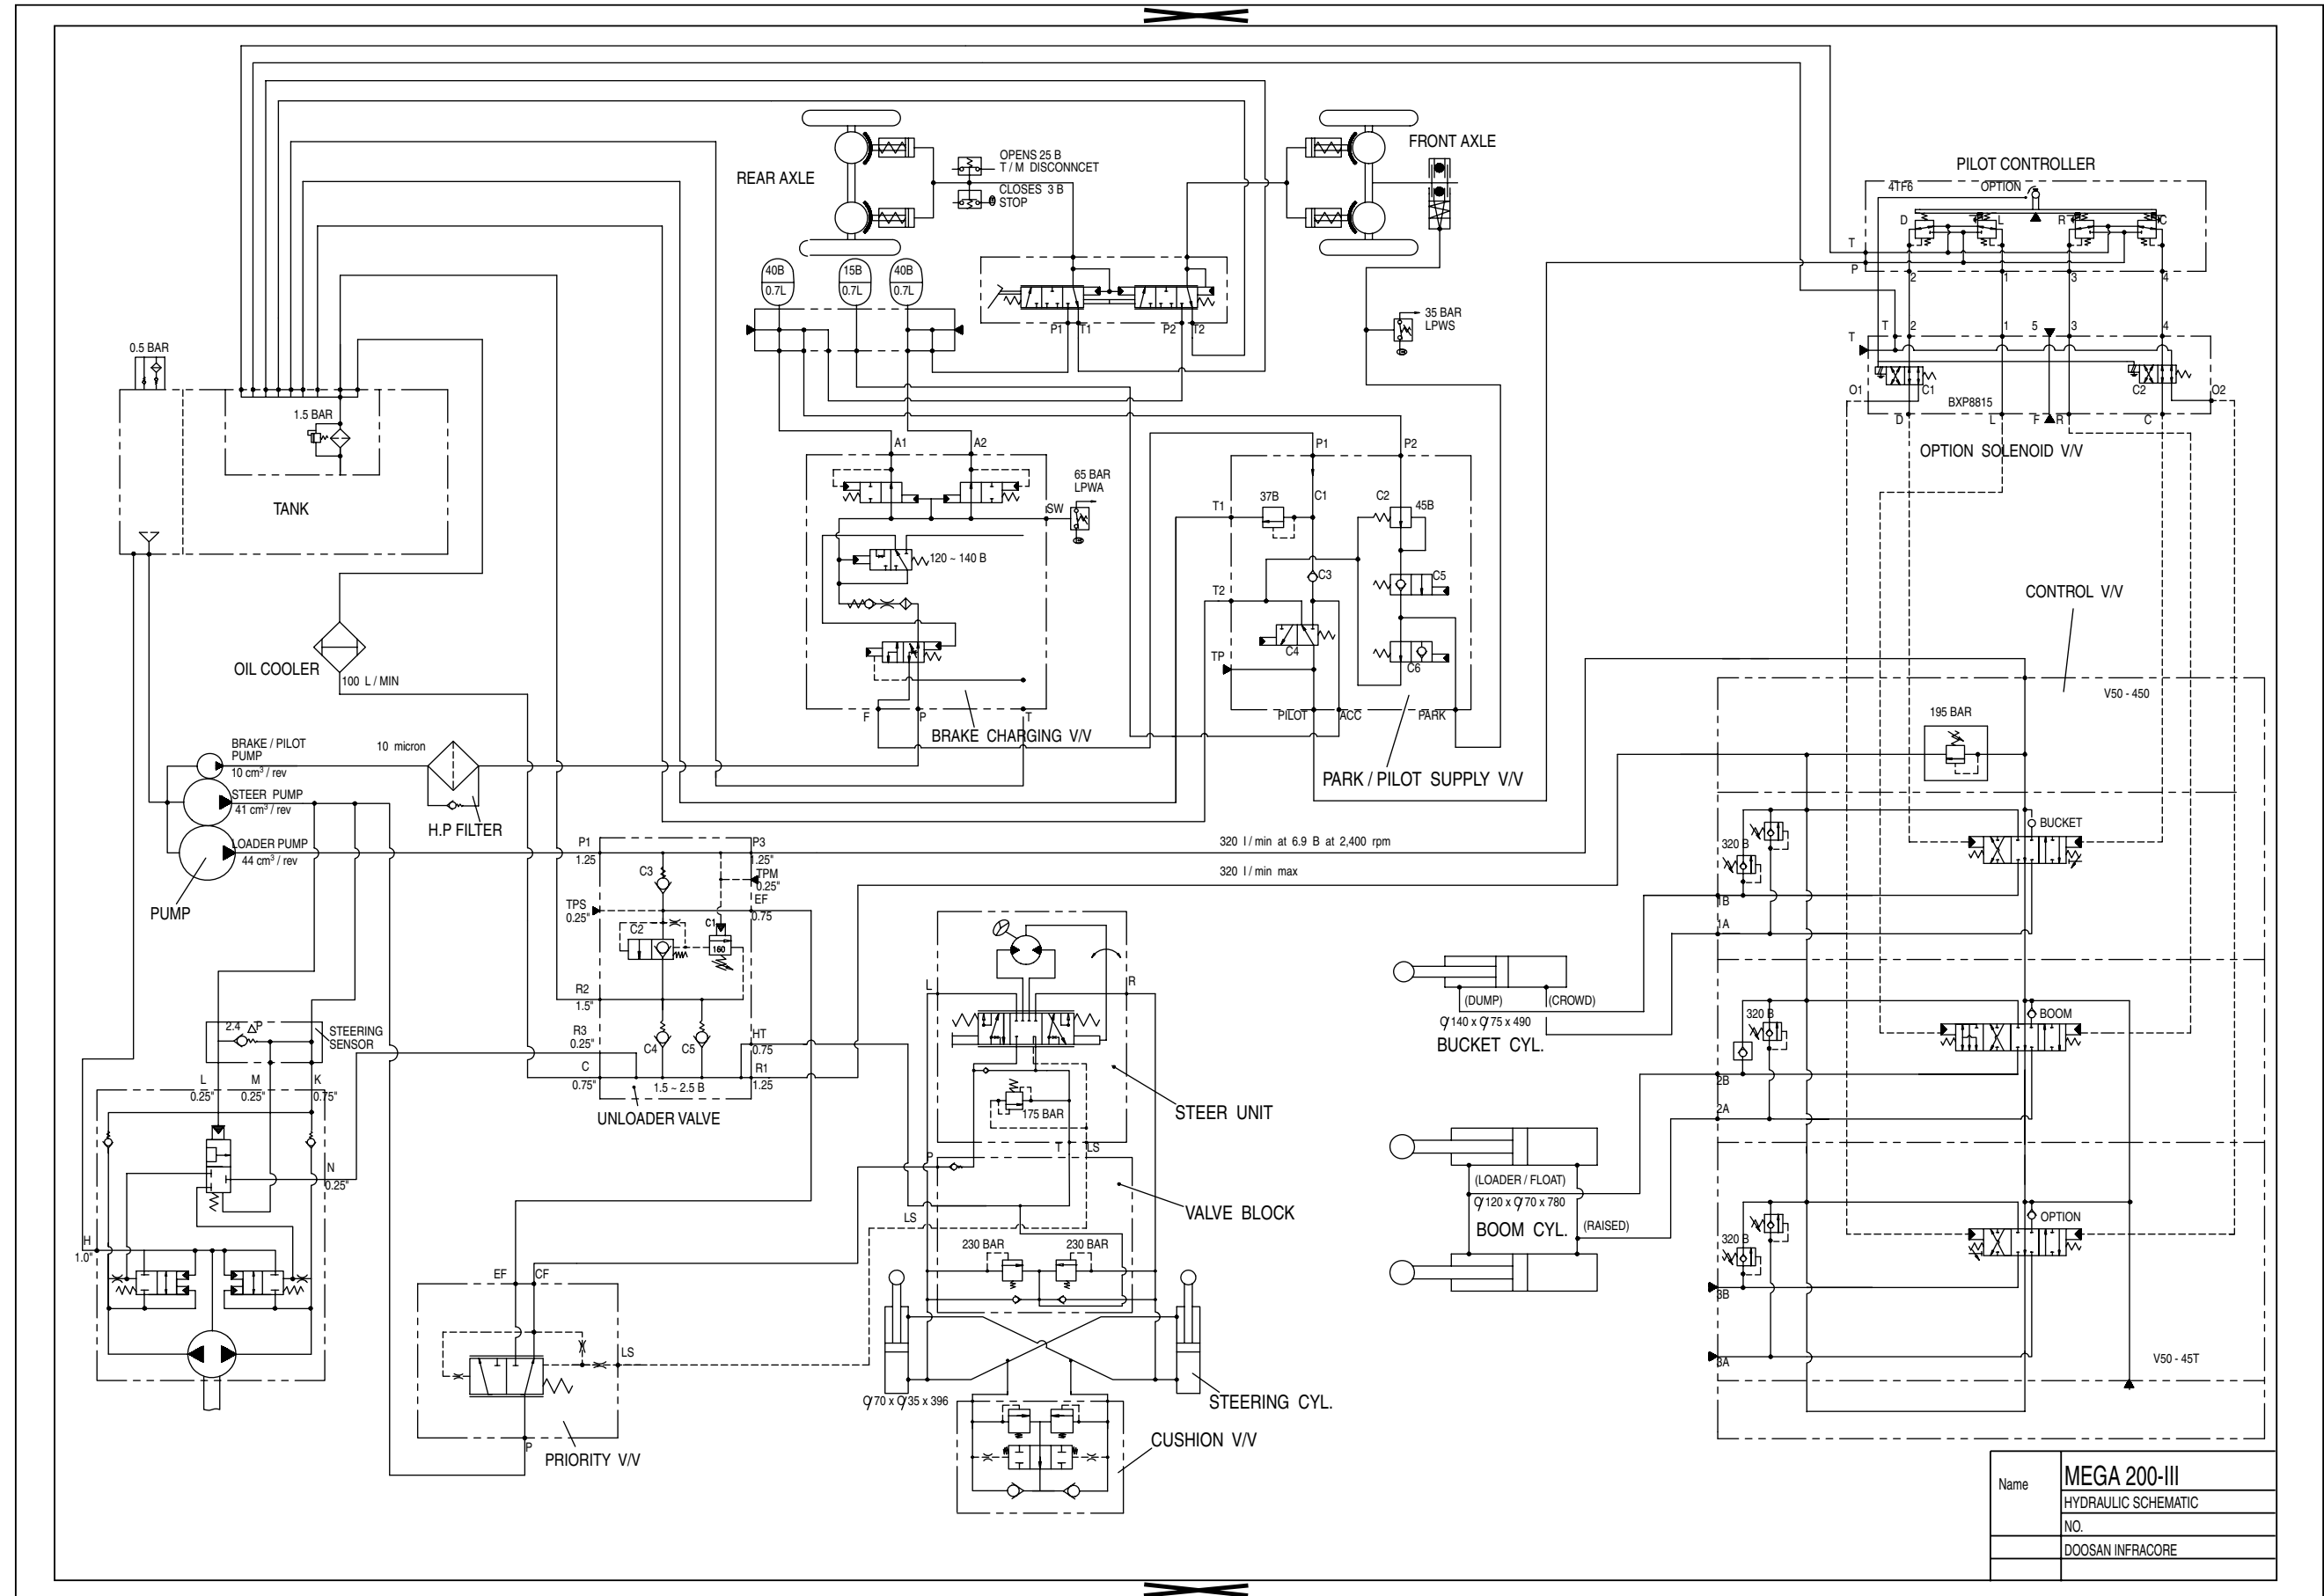


HATF510

Hydraulic Schematic(Standard)

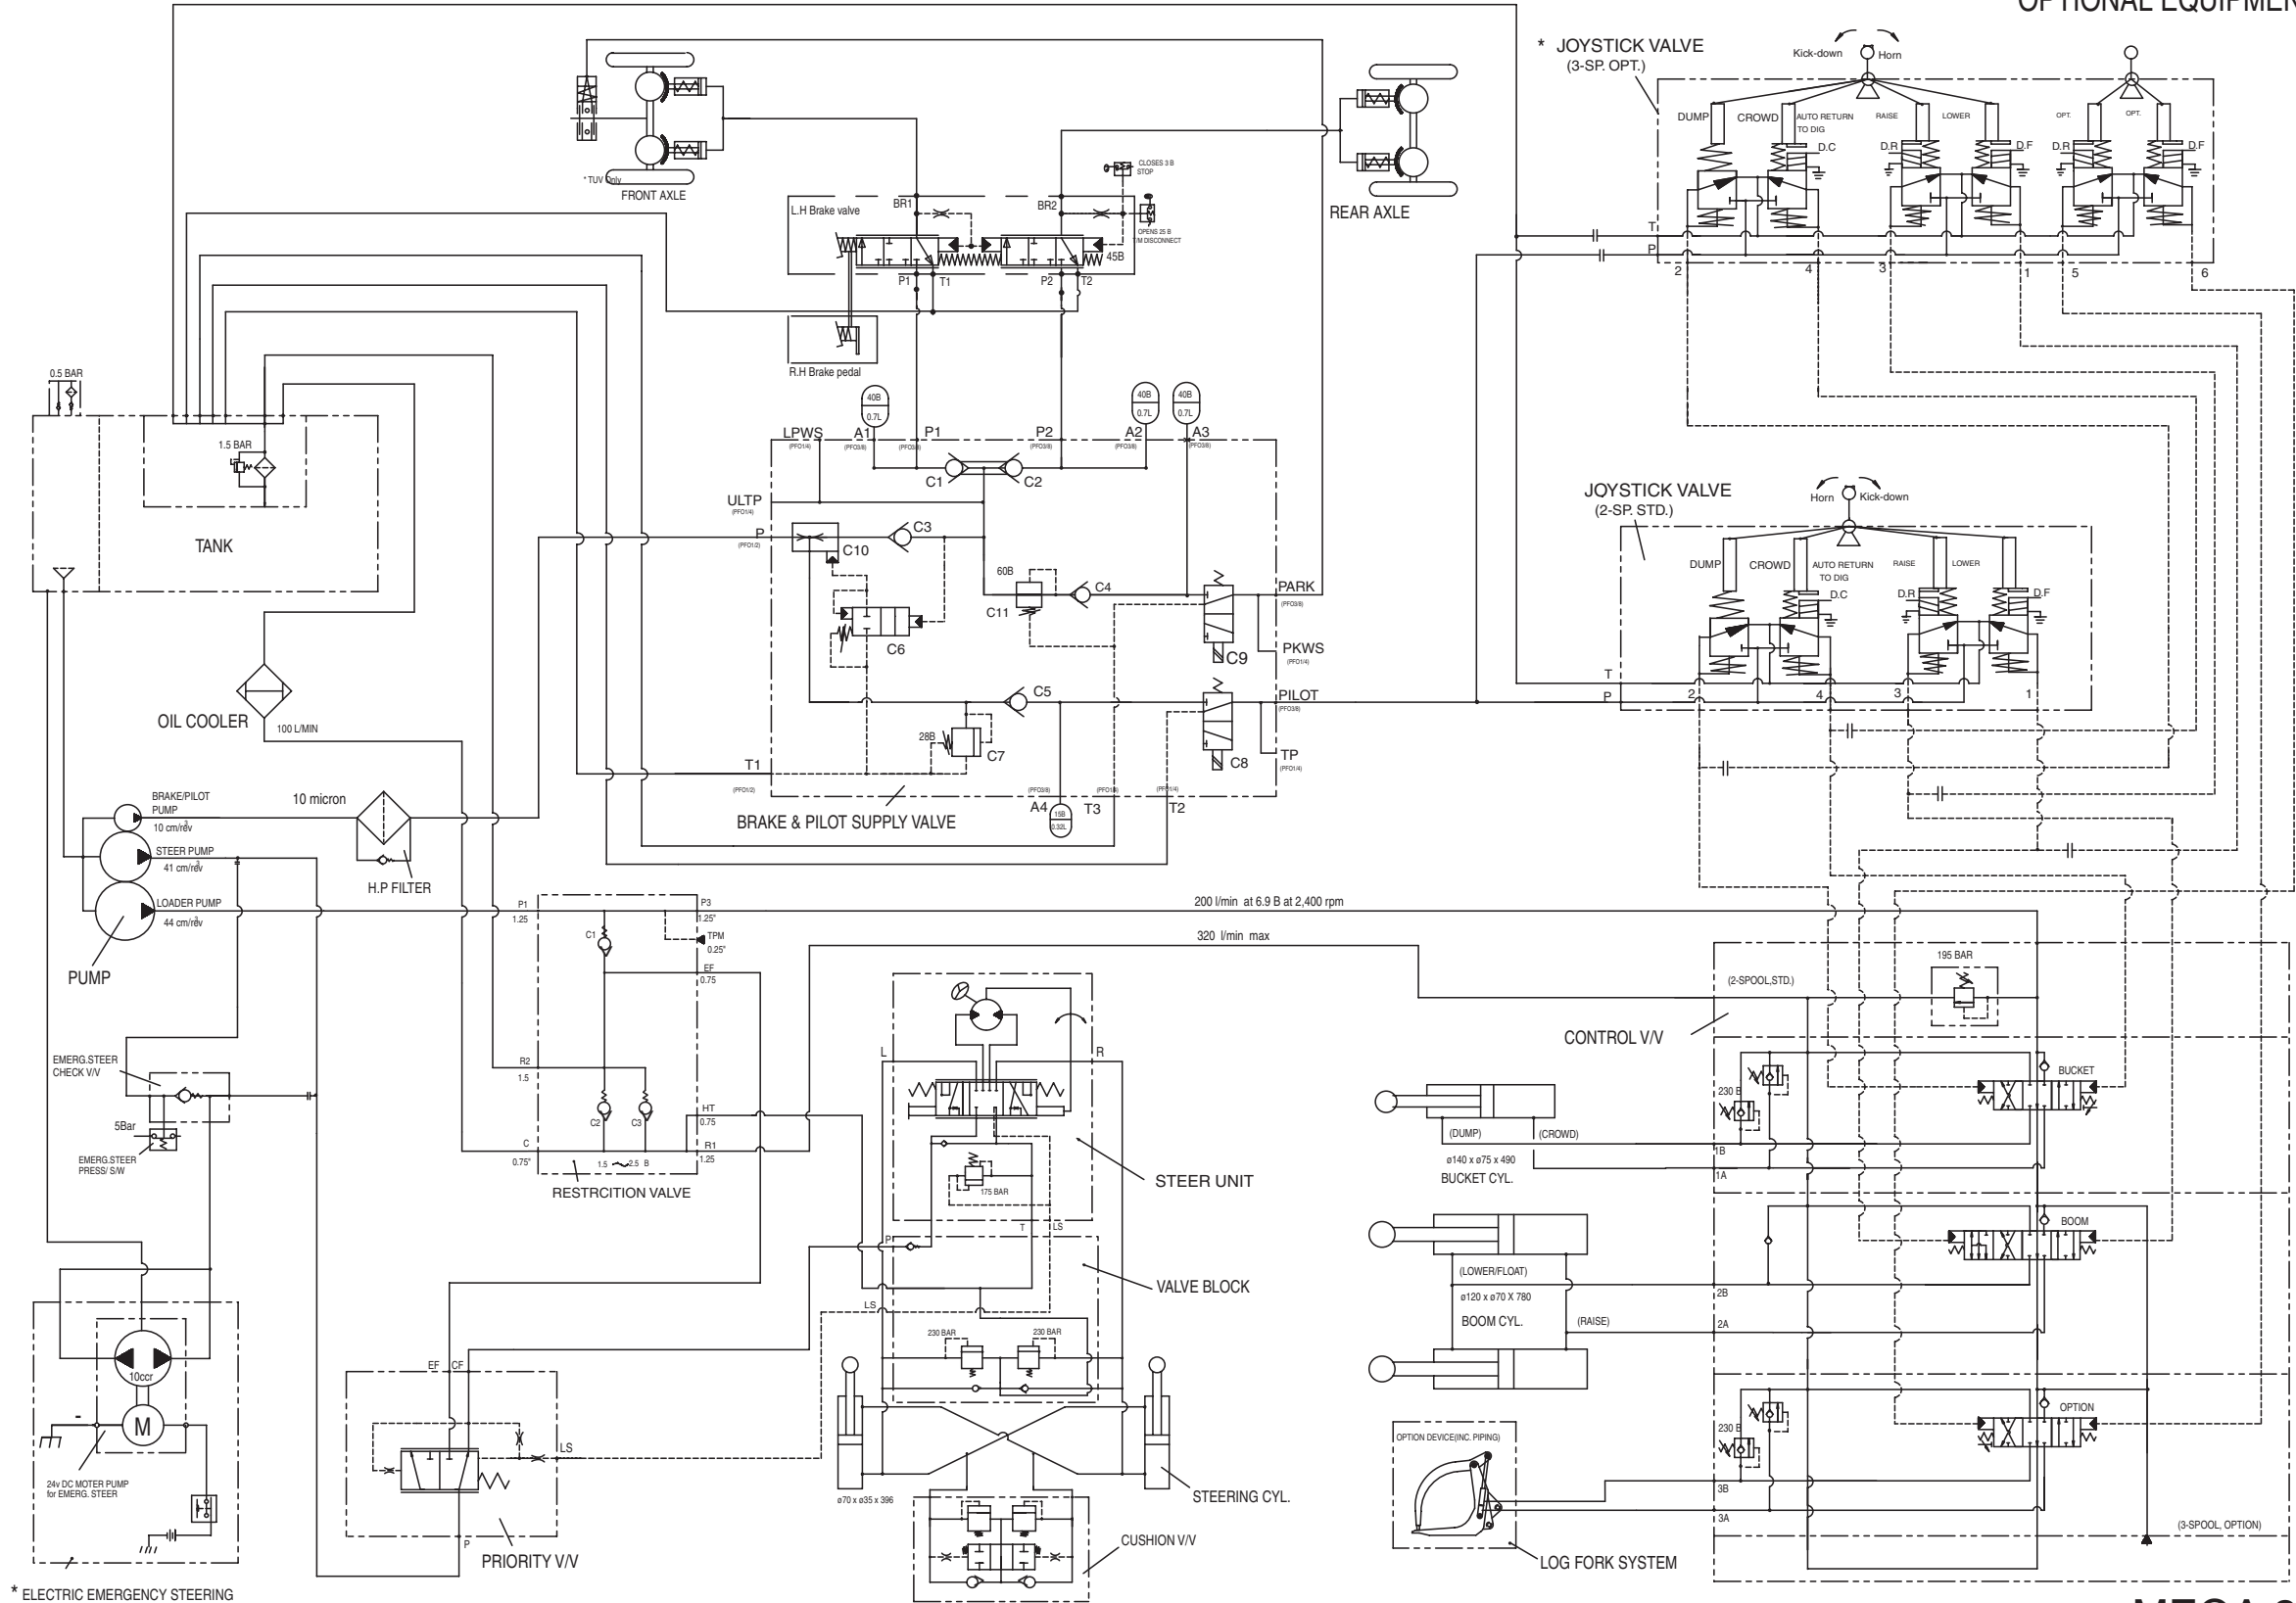


MEGA 200-V


Hydraulic Schematic(Optional)

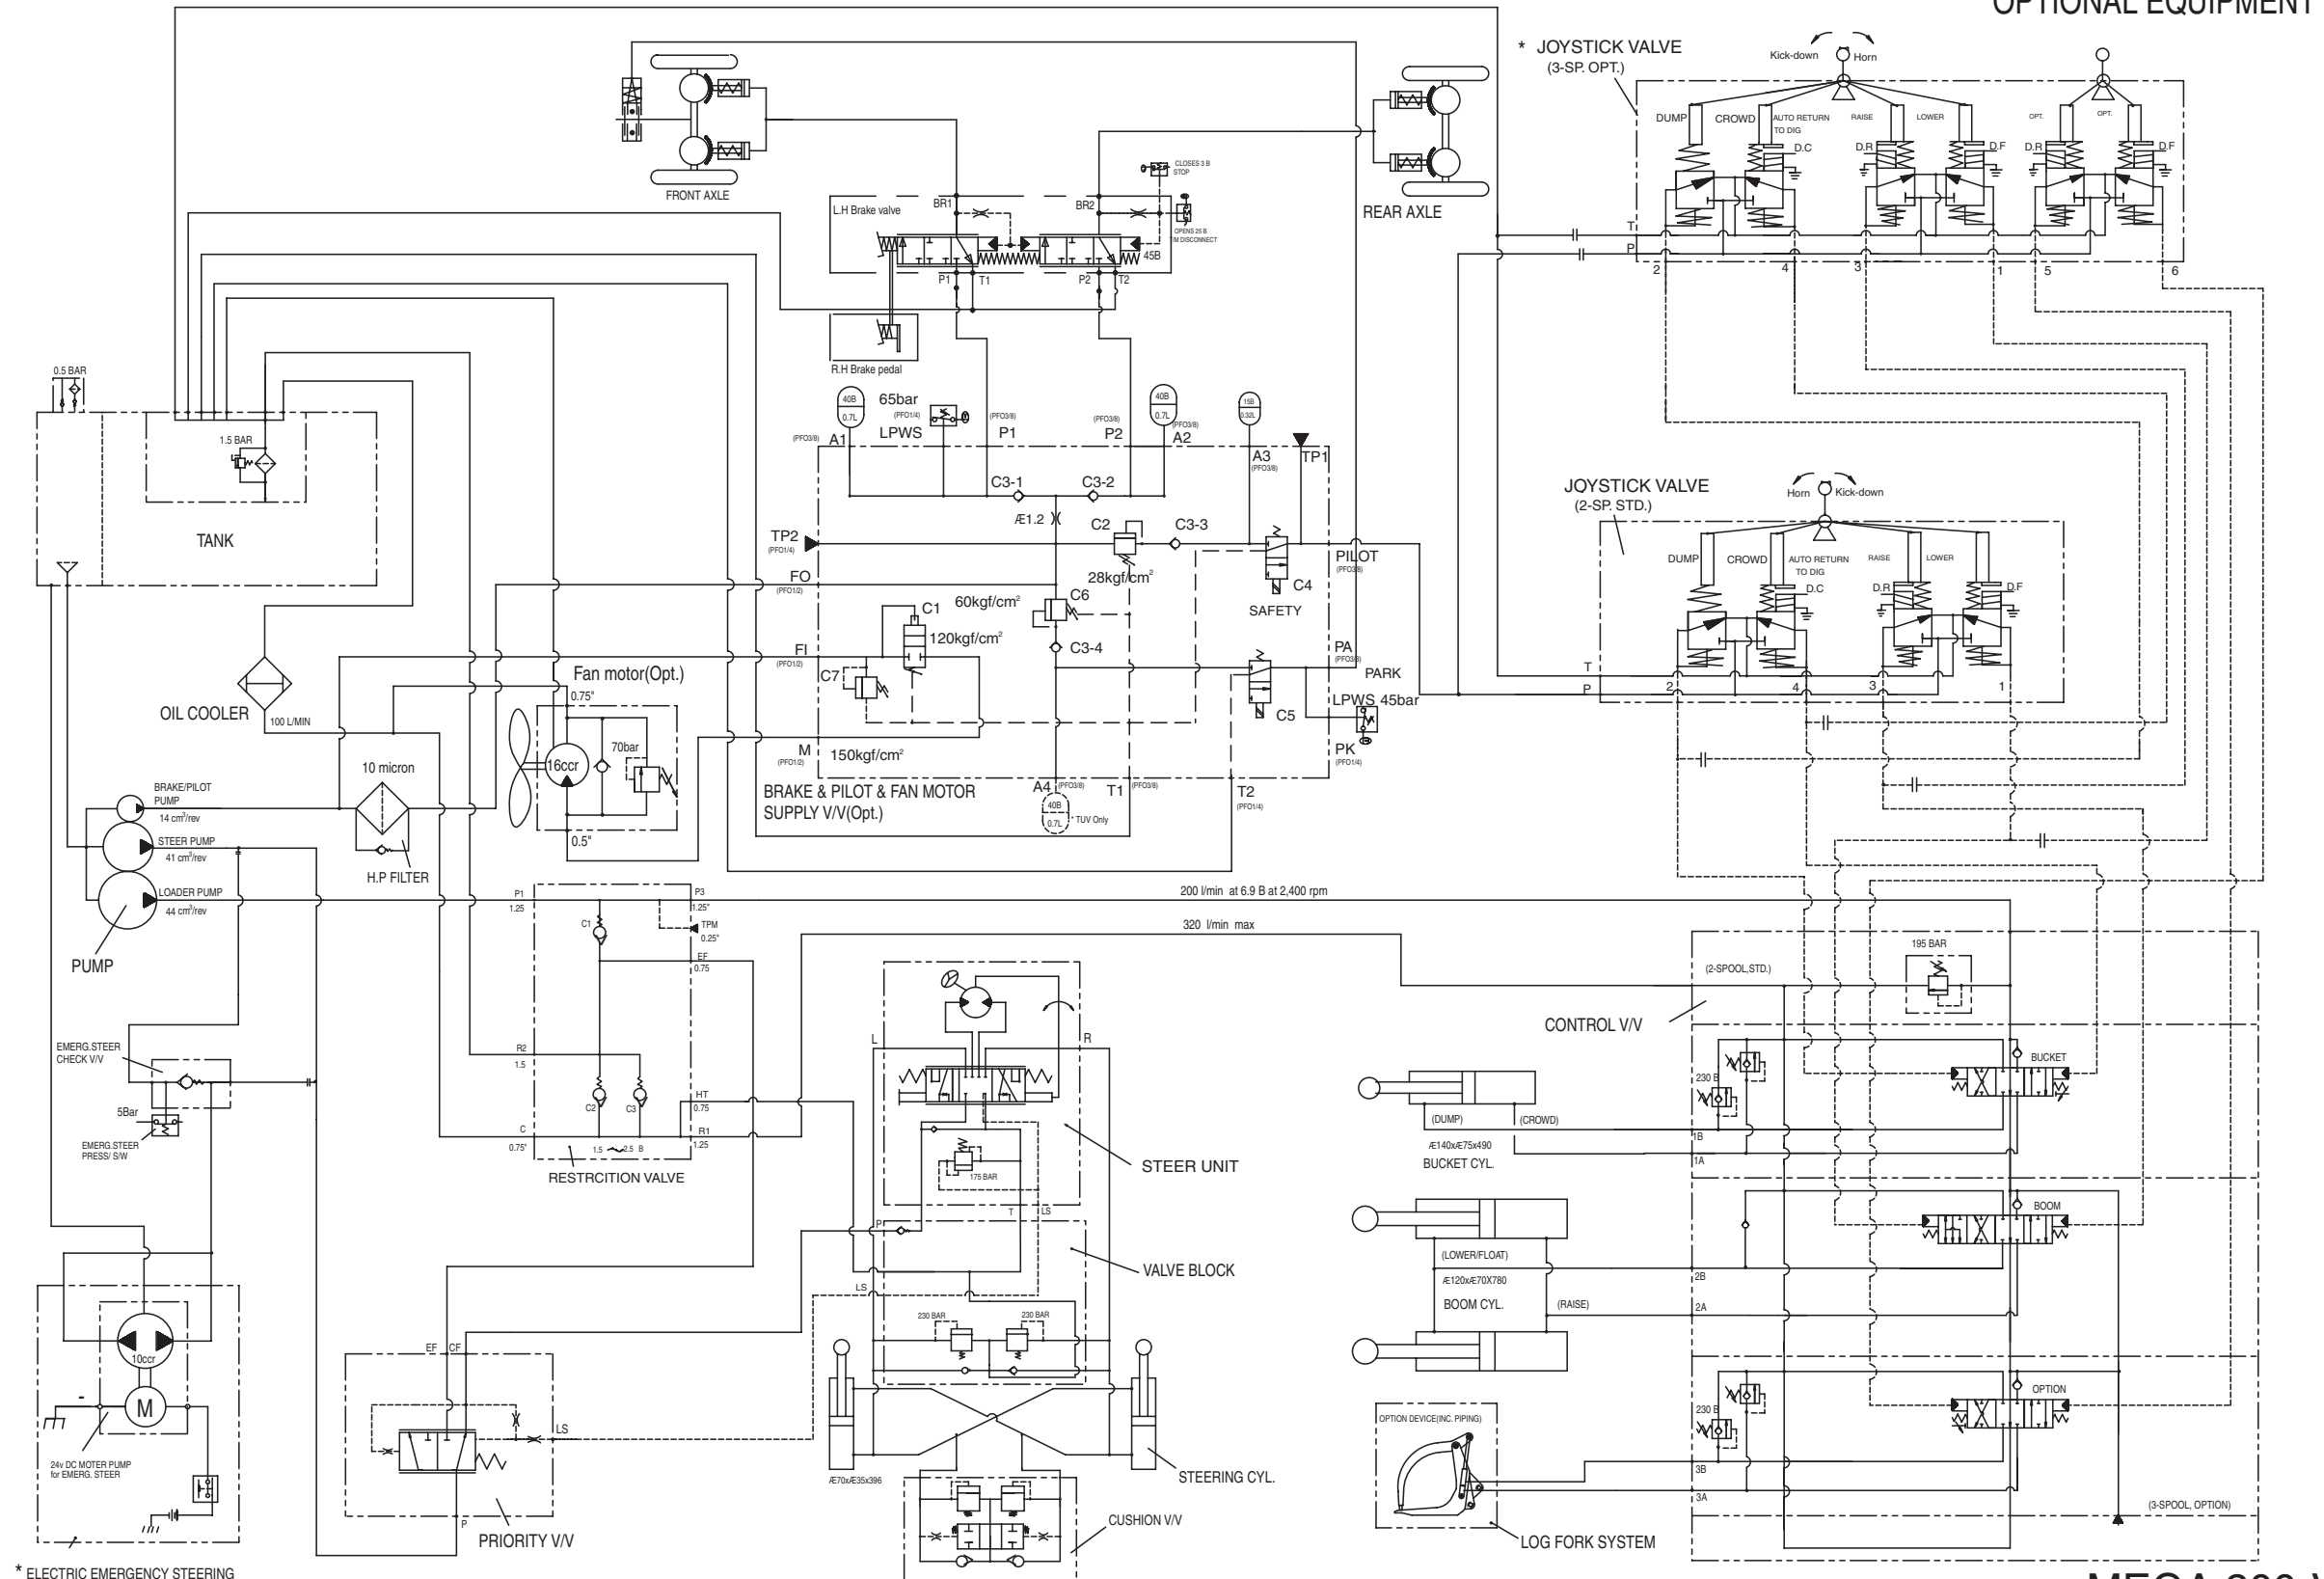


MEGA 200-V

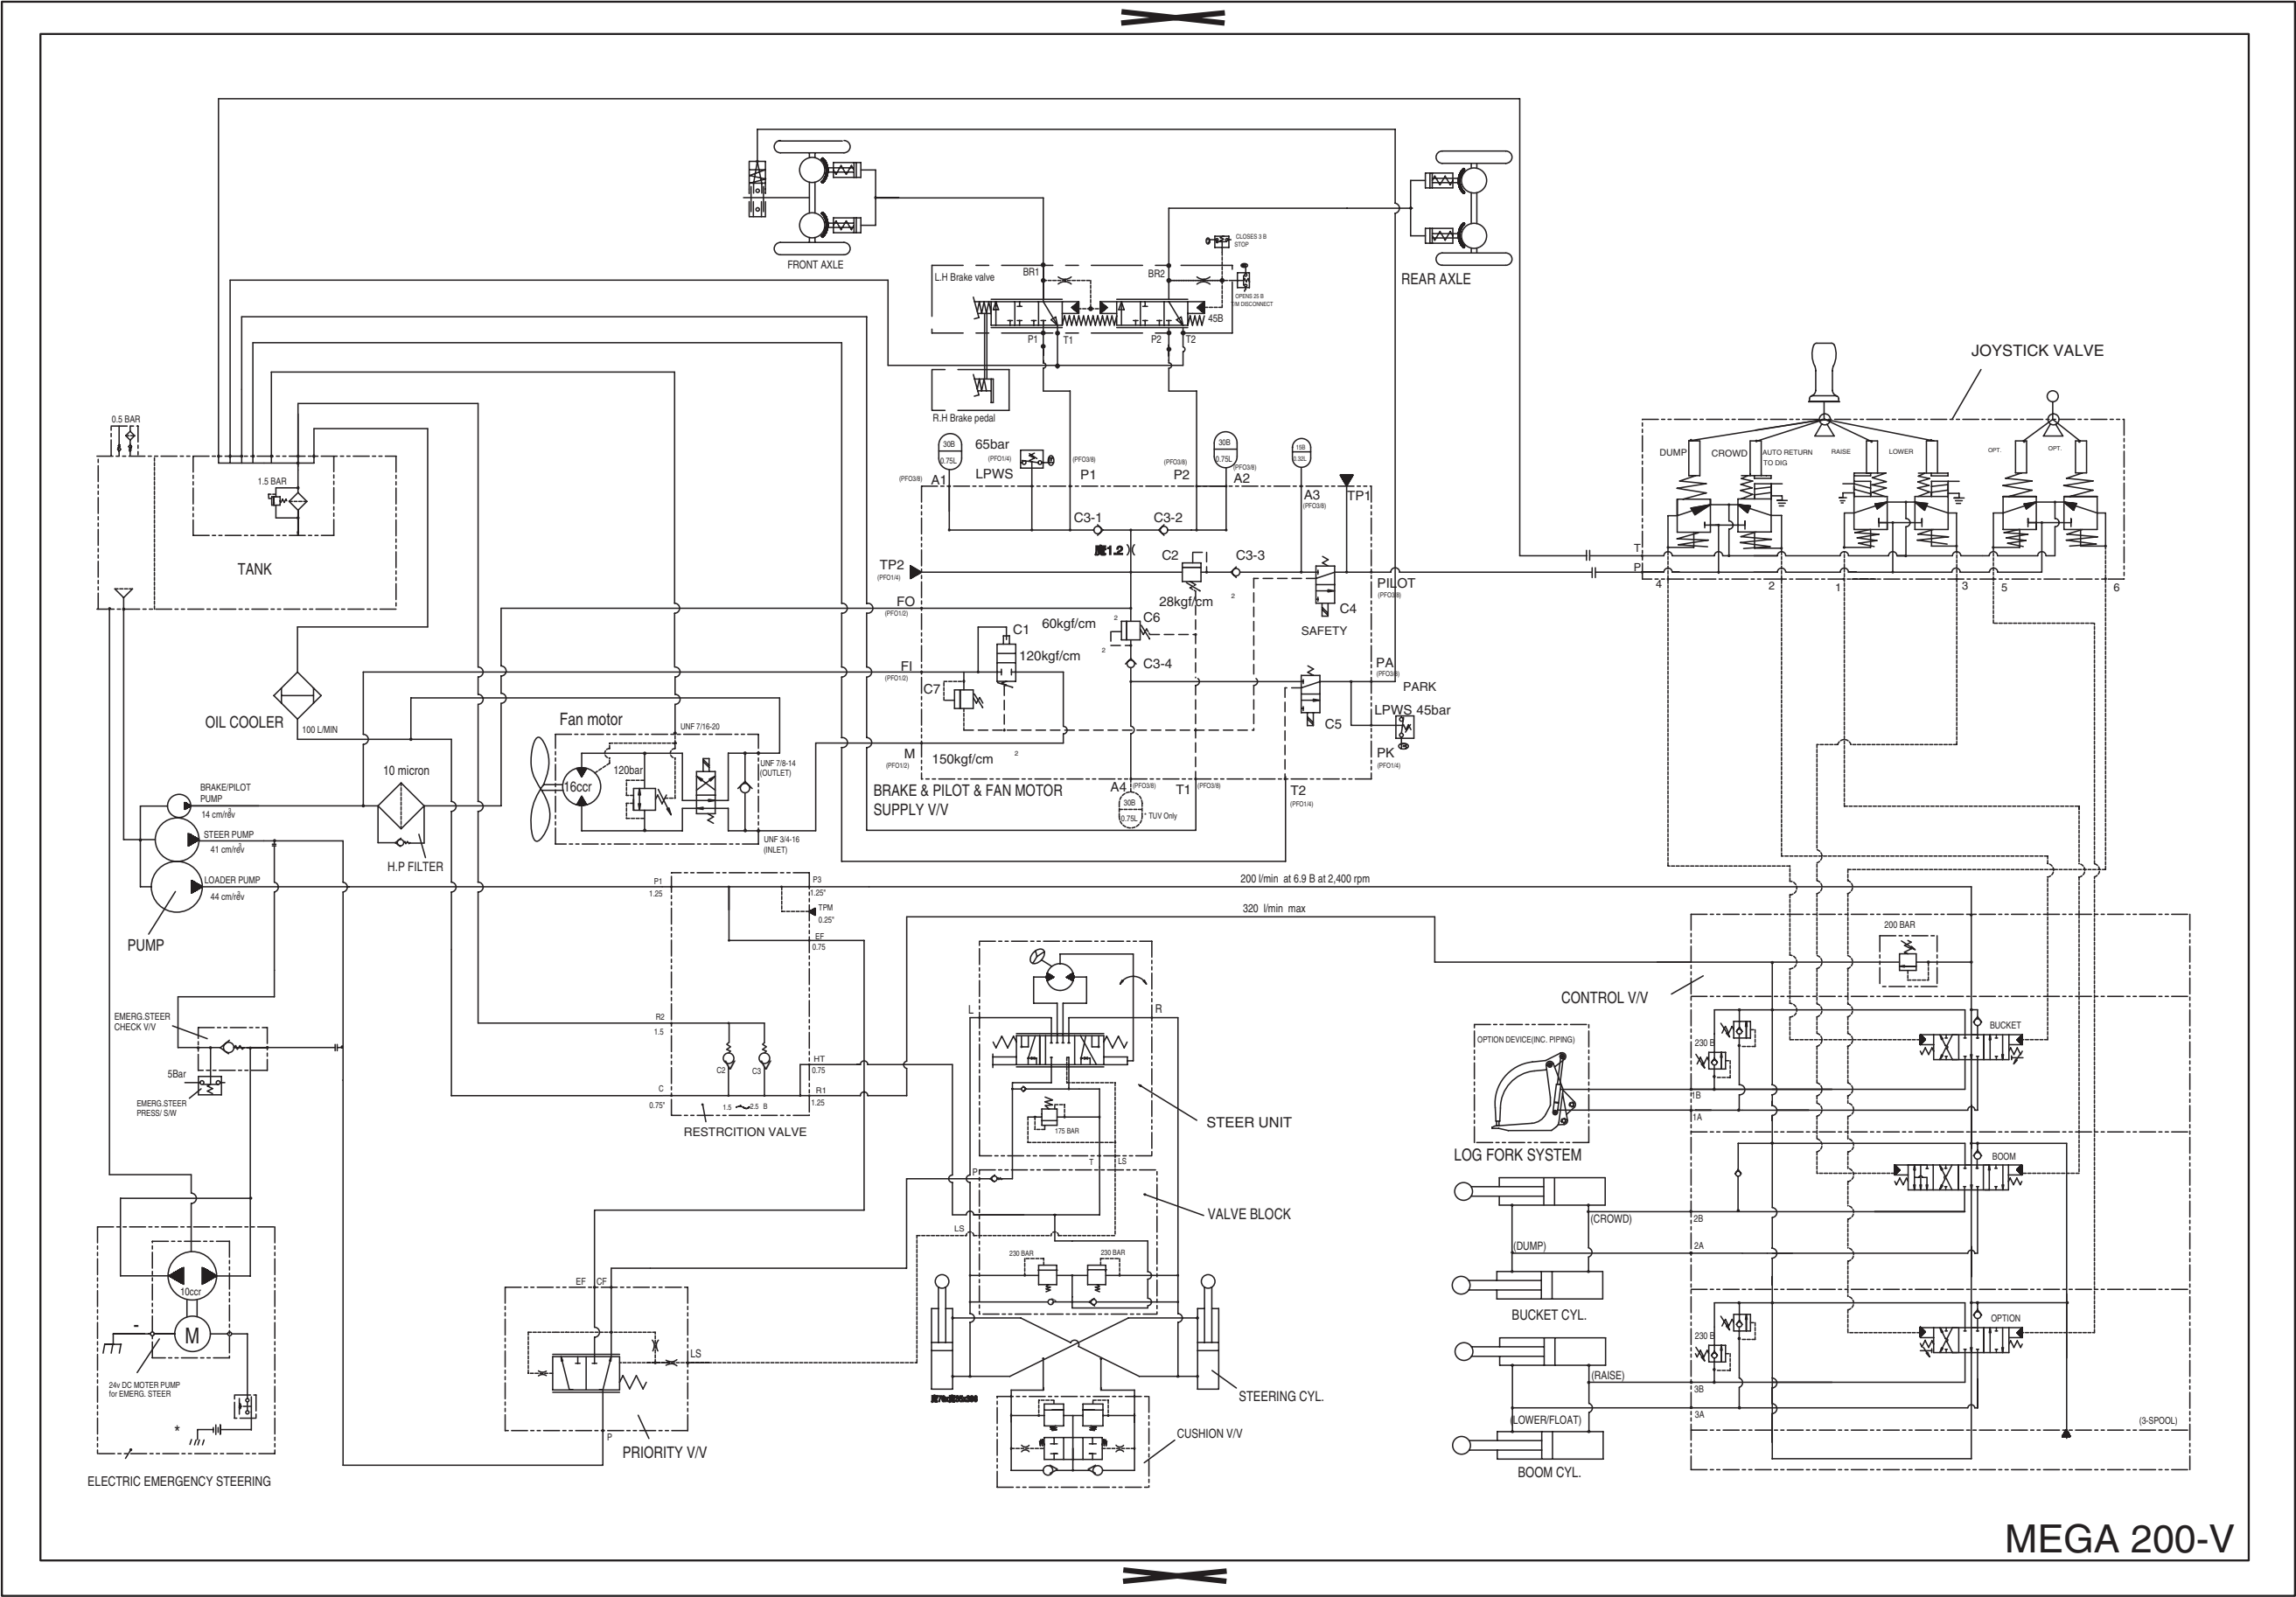


MEGA 200-V

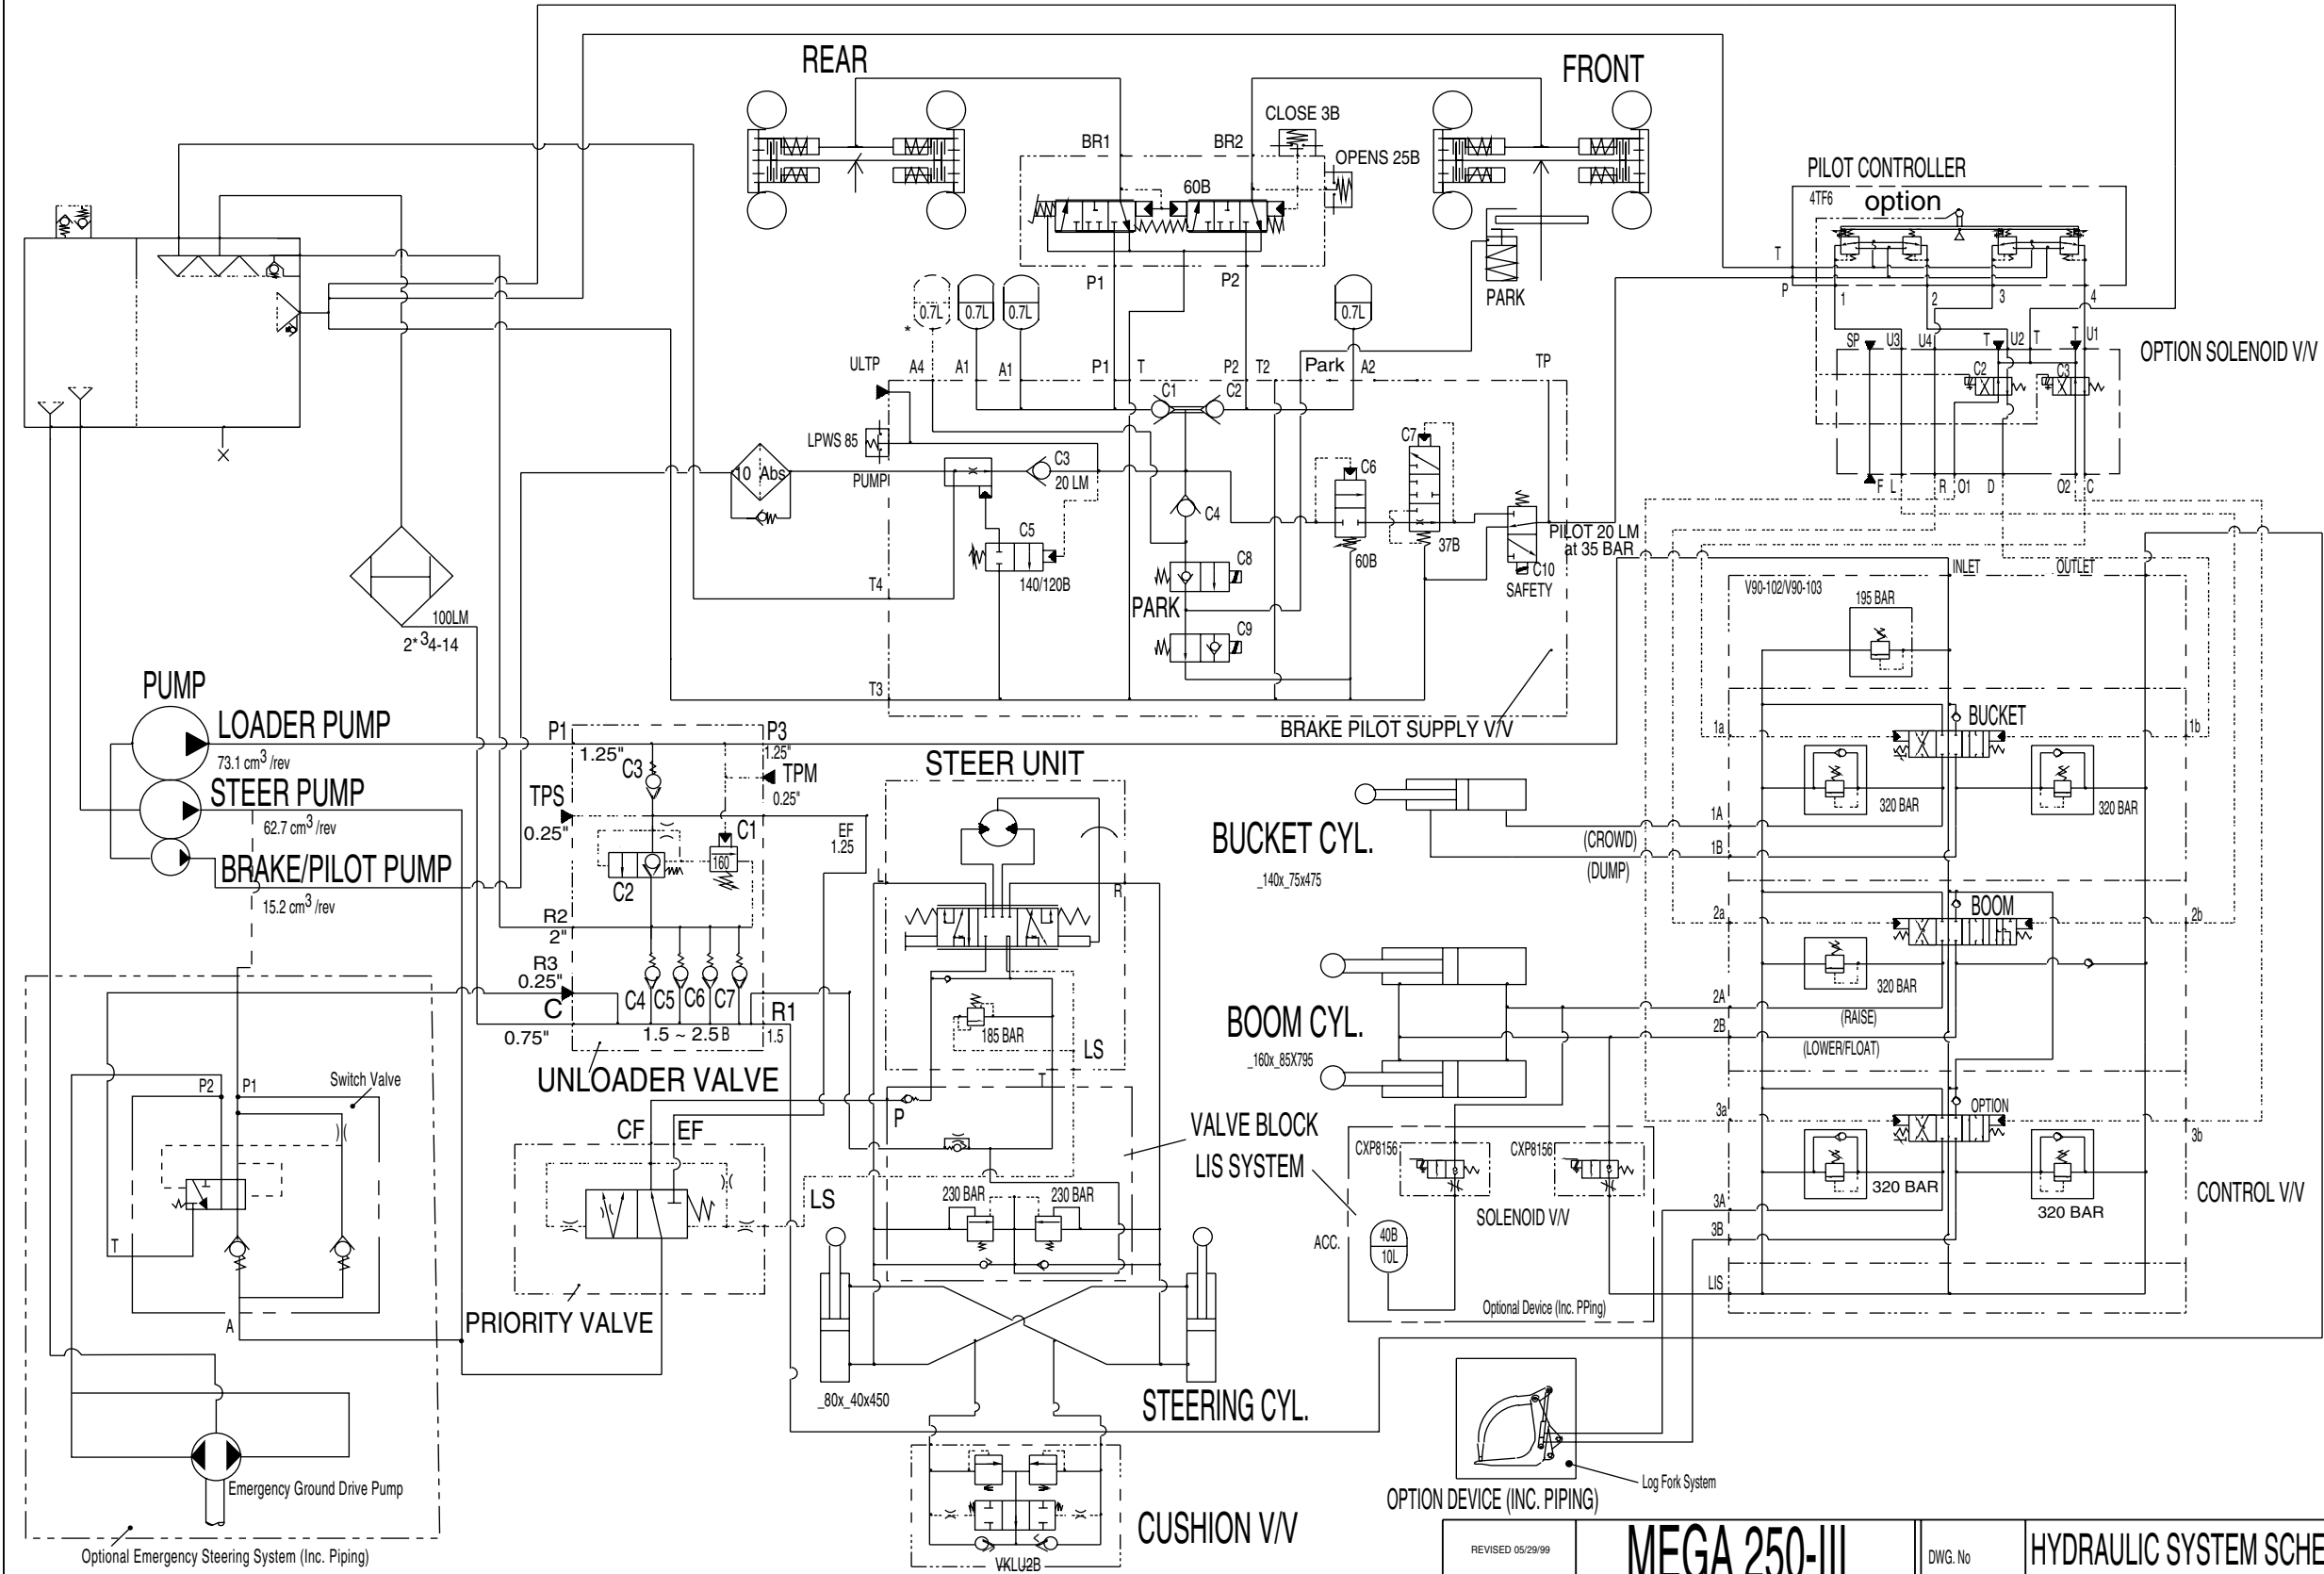

HATF340

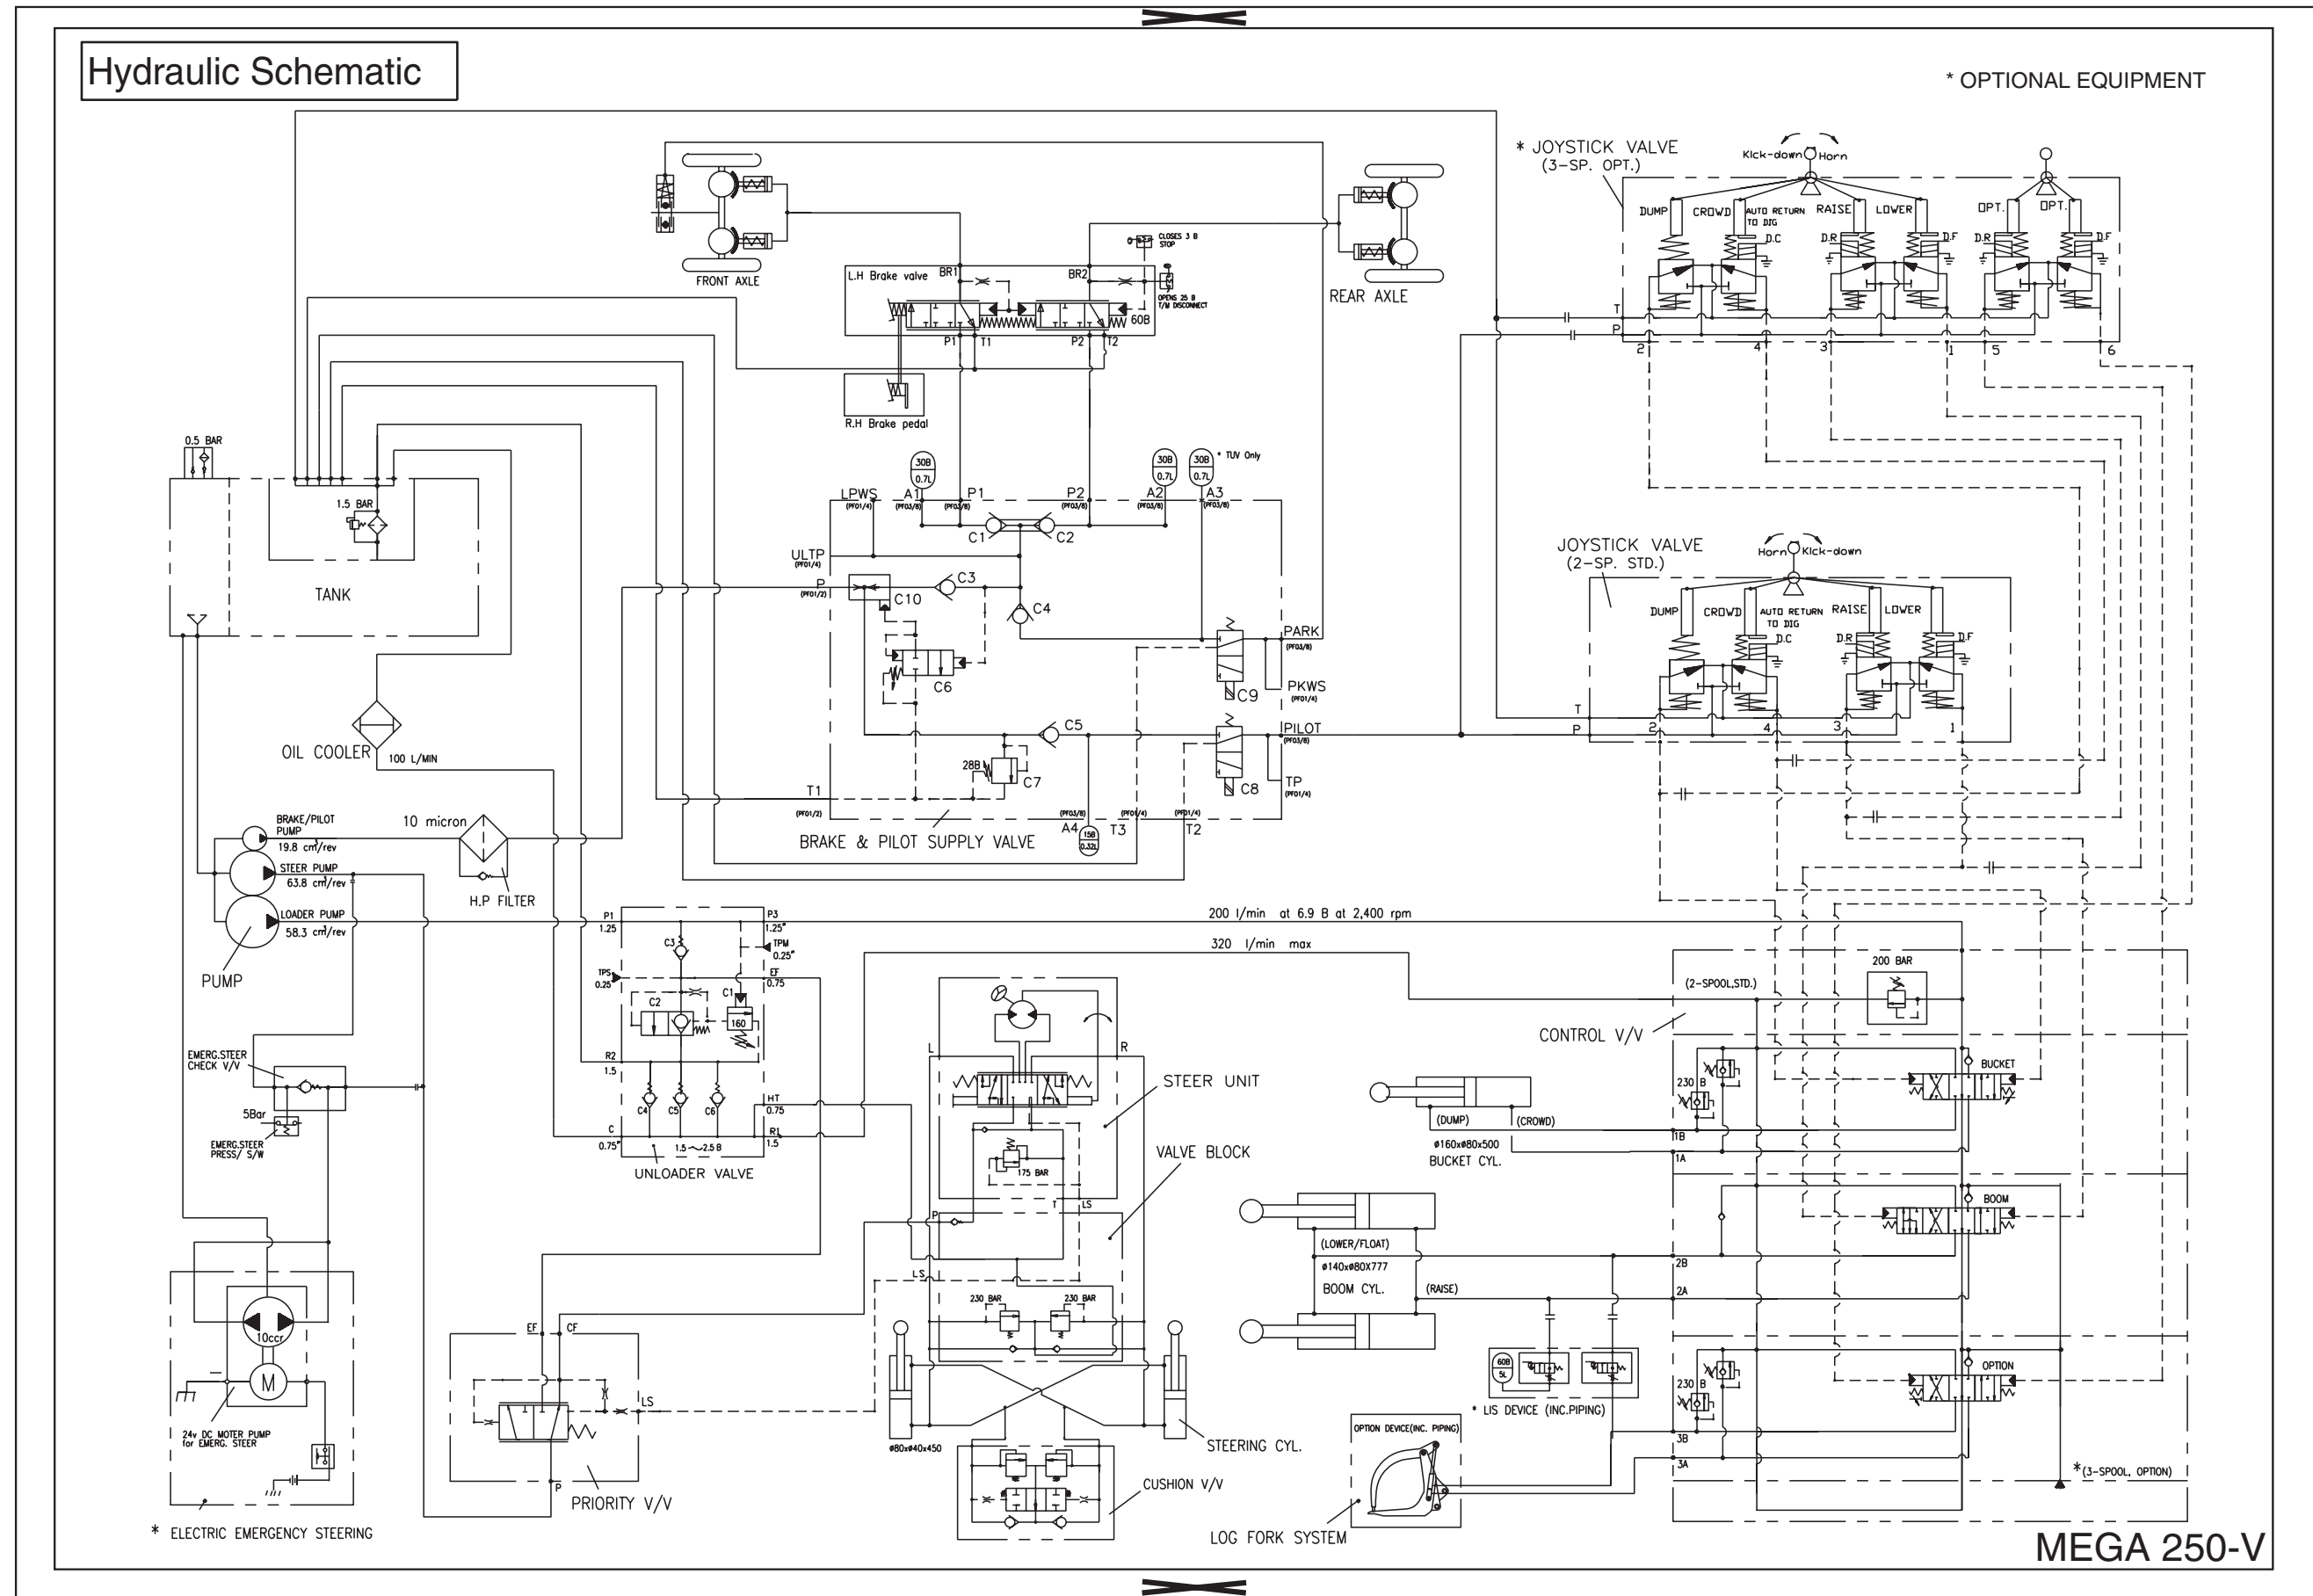

Hydraulic Schematic

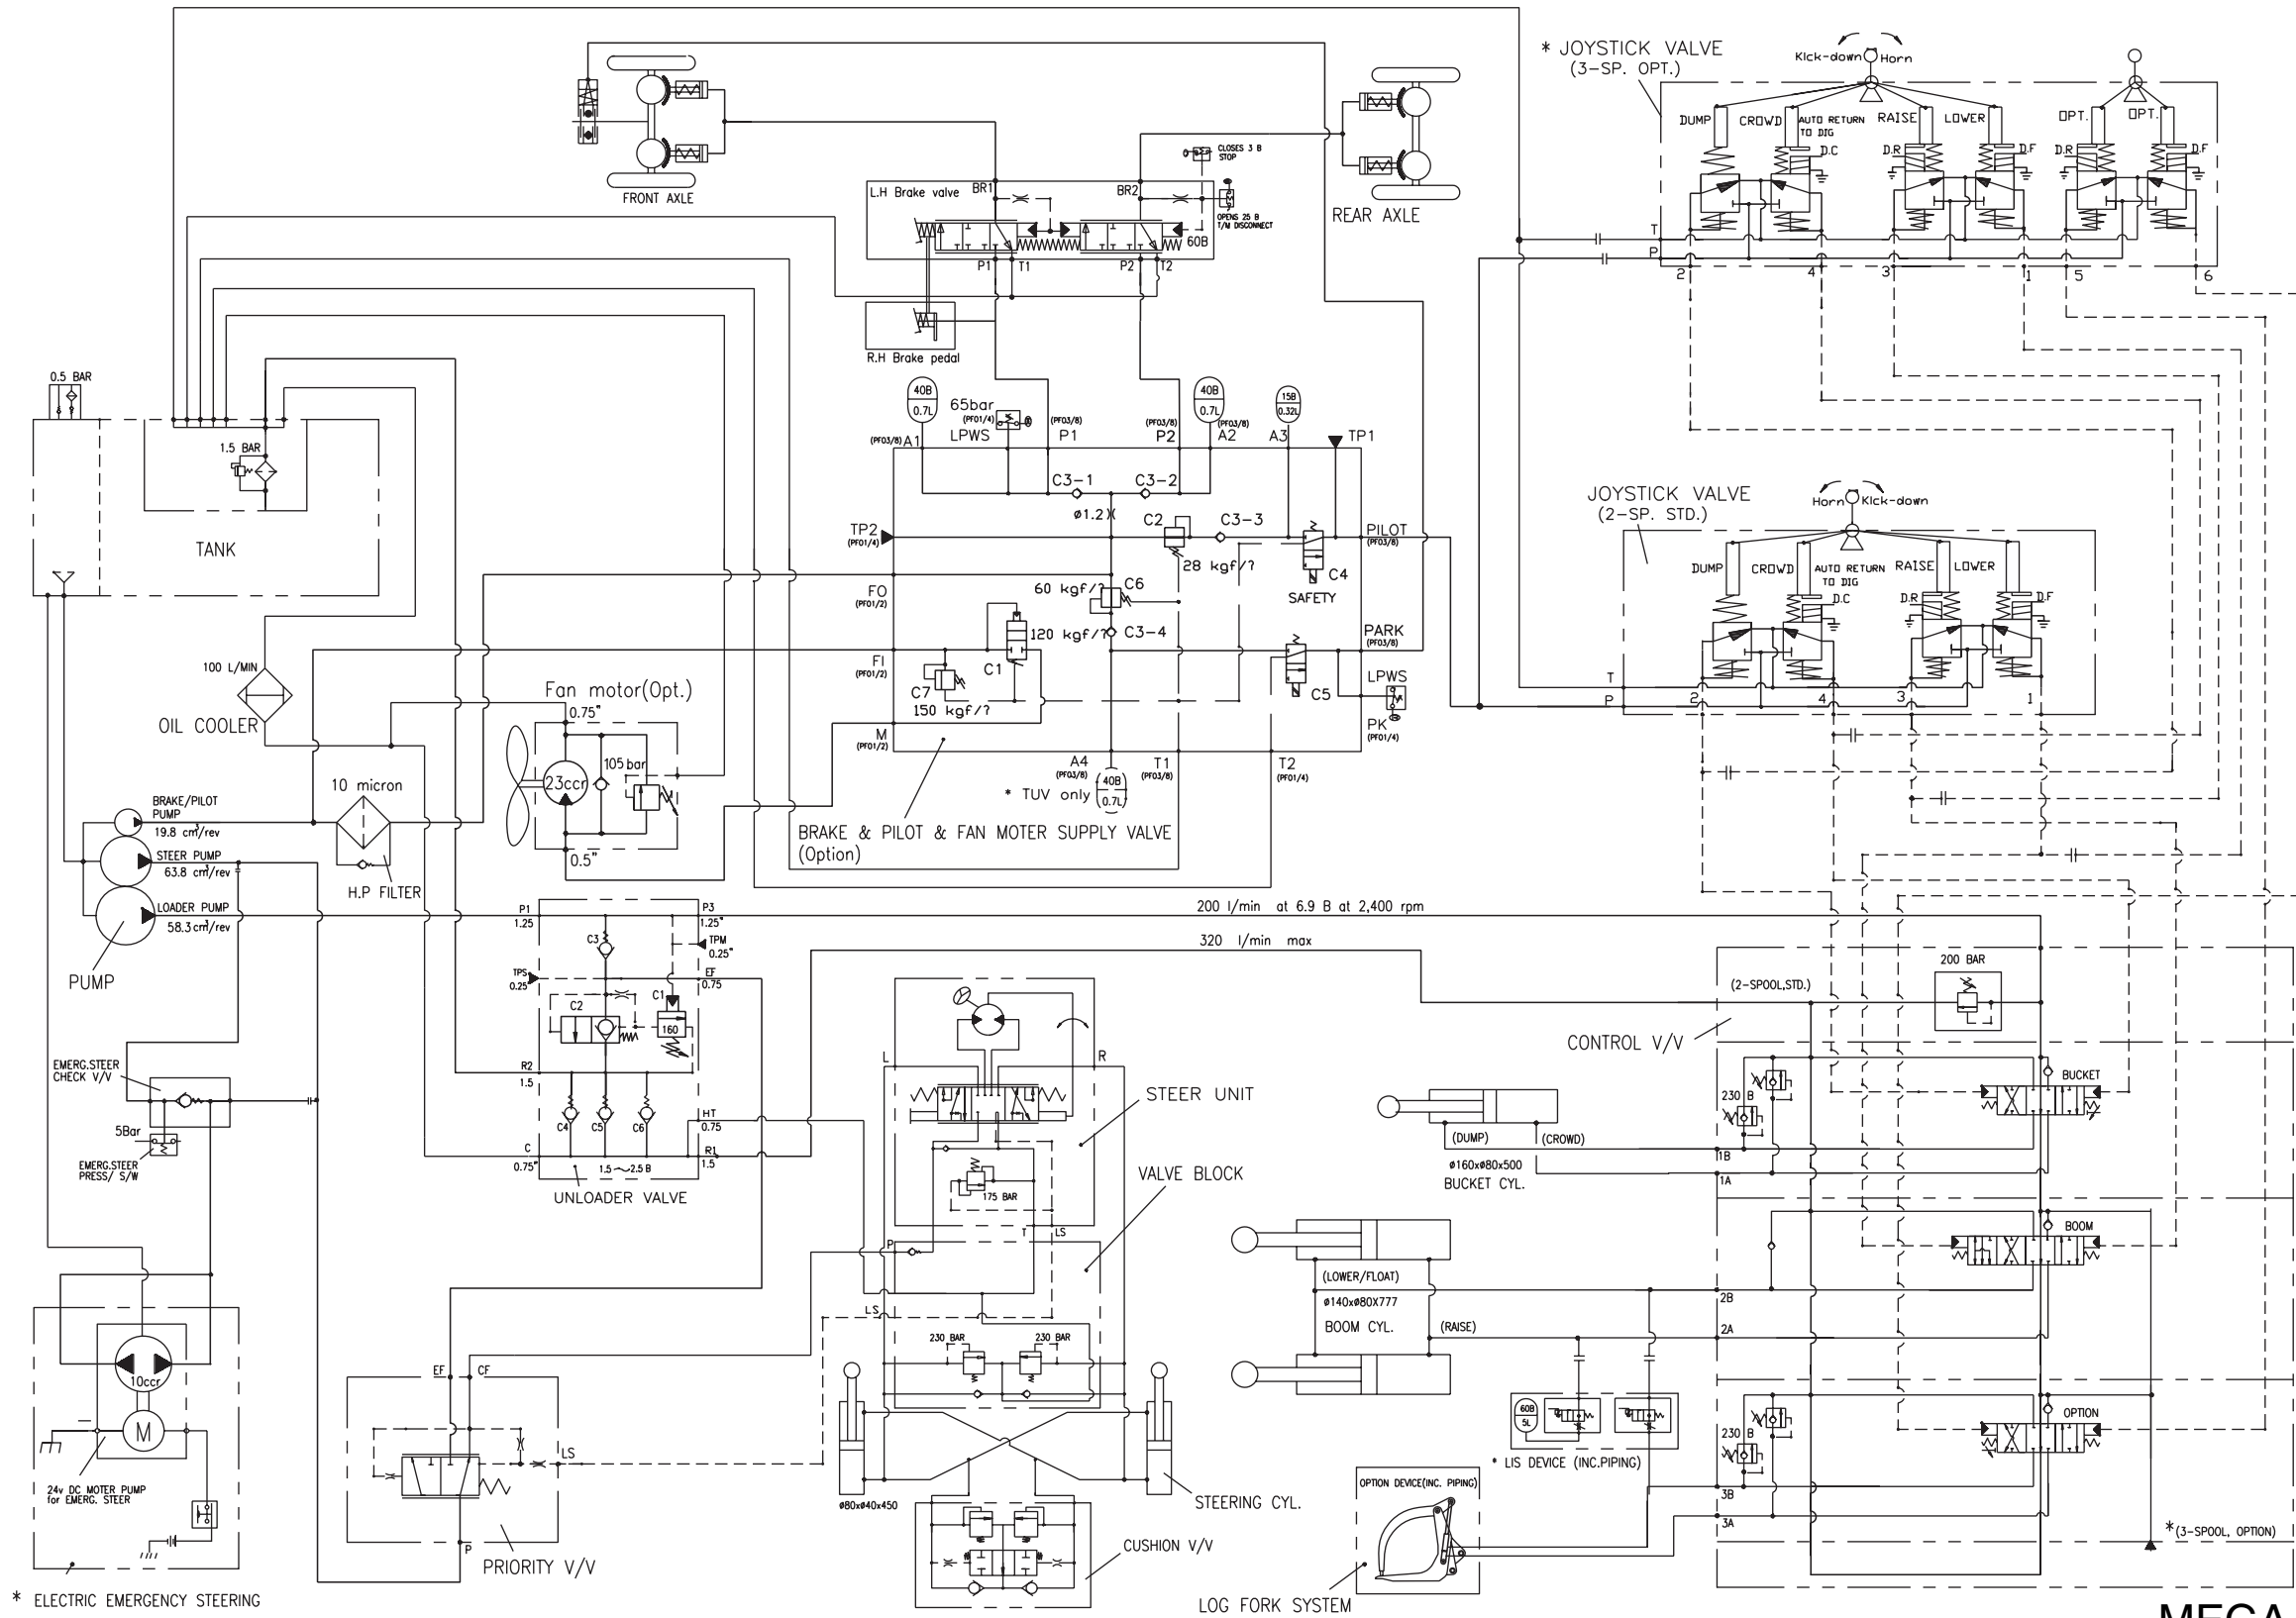

* OPTIONAL EQUIPMENT


* JOYSTICK VALVE
(3-SP. OPT.)

JOYSTICK VALVE
(2-SP. STD.)


CONTROL V/V


* ELECTRIC EMERGENCY STEERING


MEGA 250-V

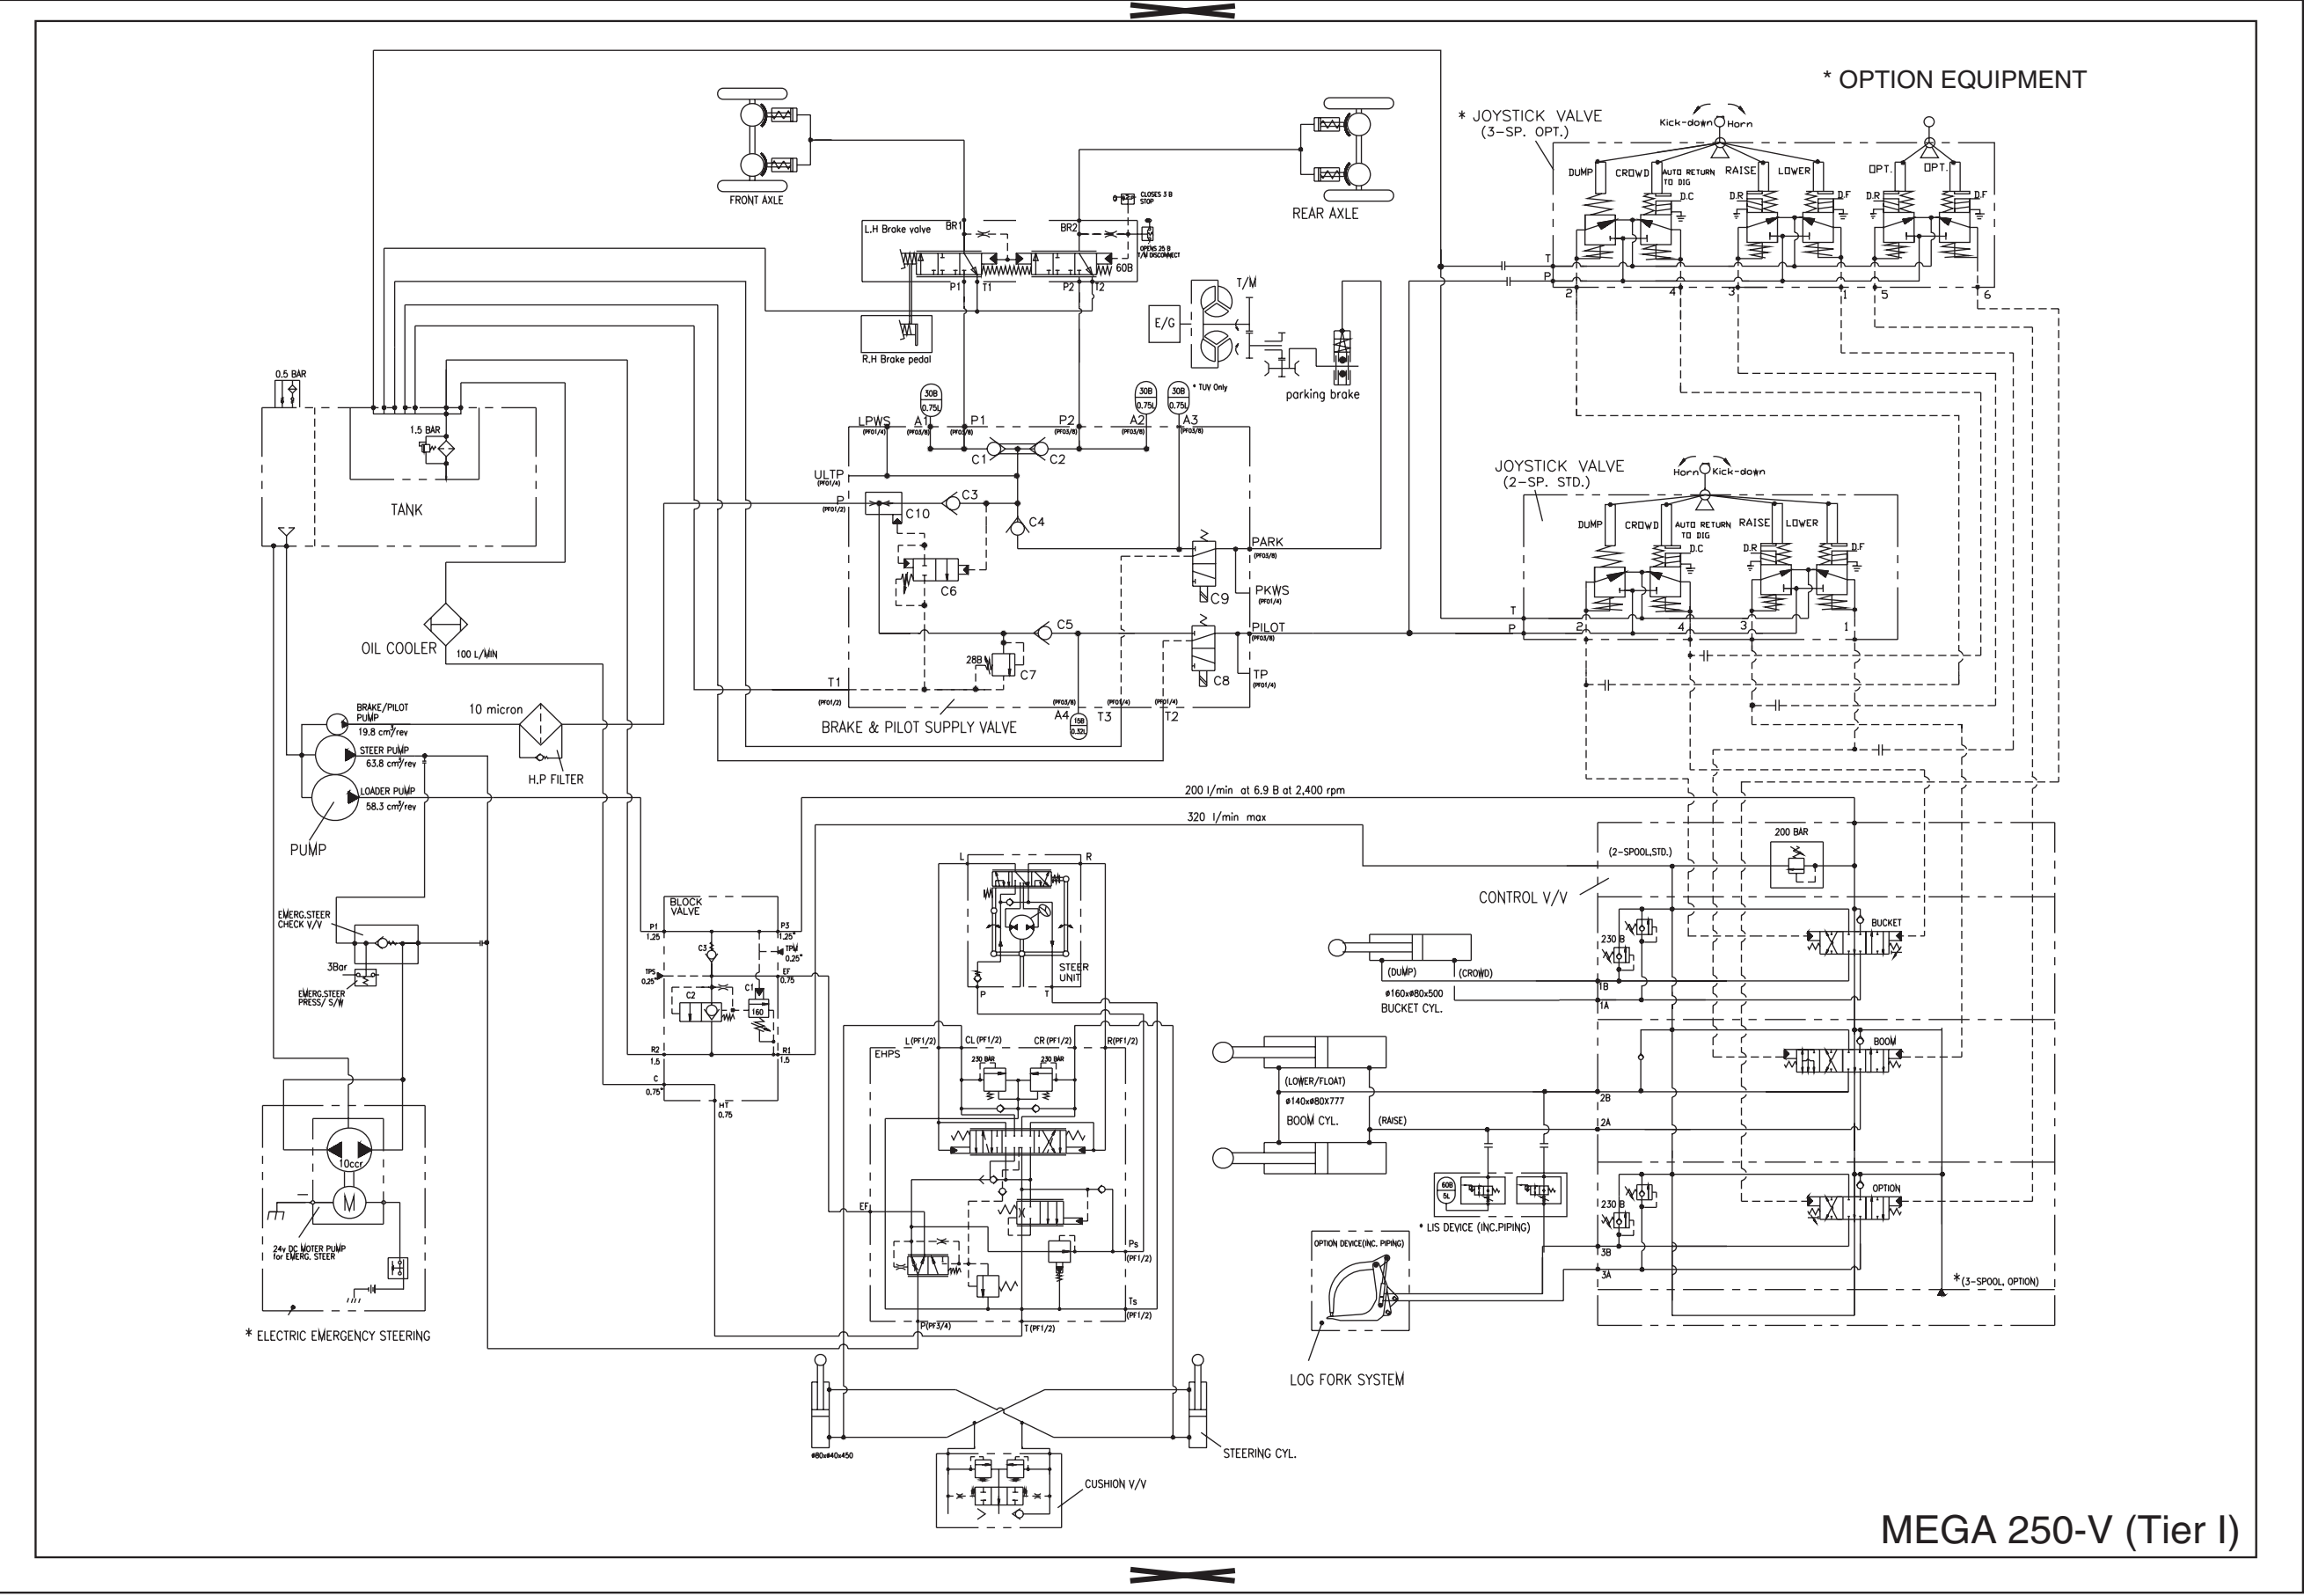


MEGA 250-V (Tier I)

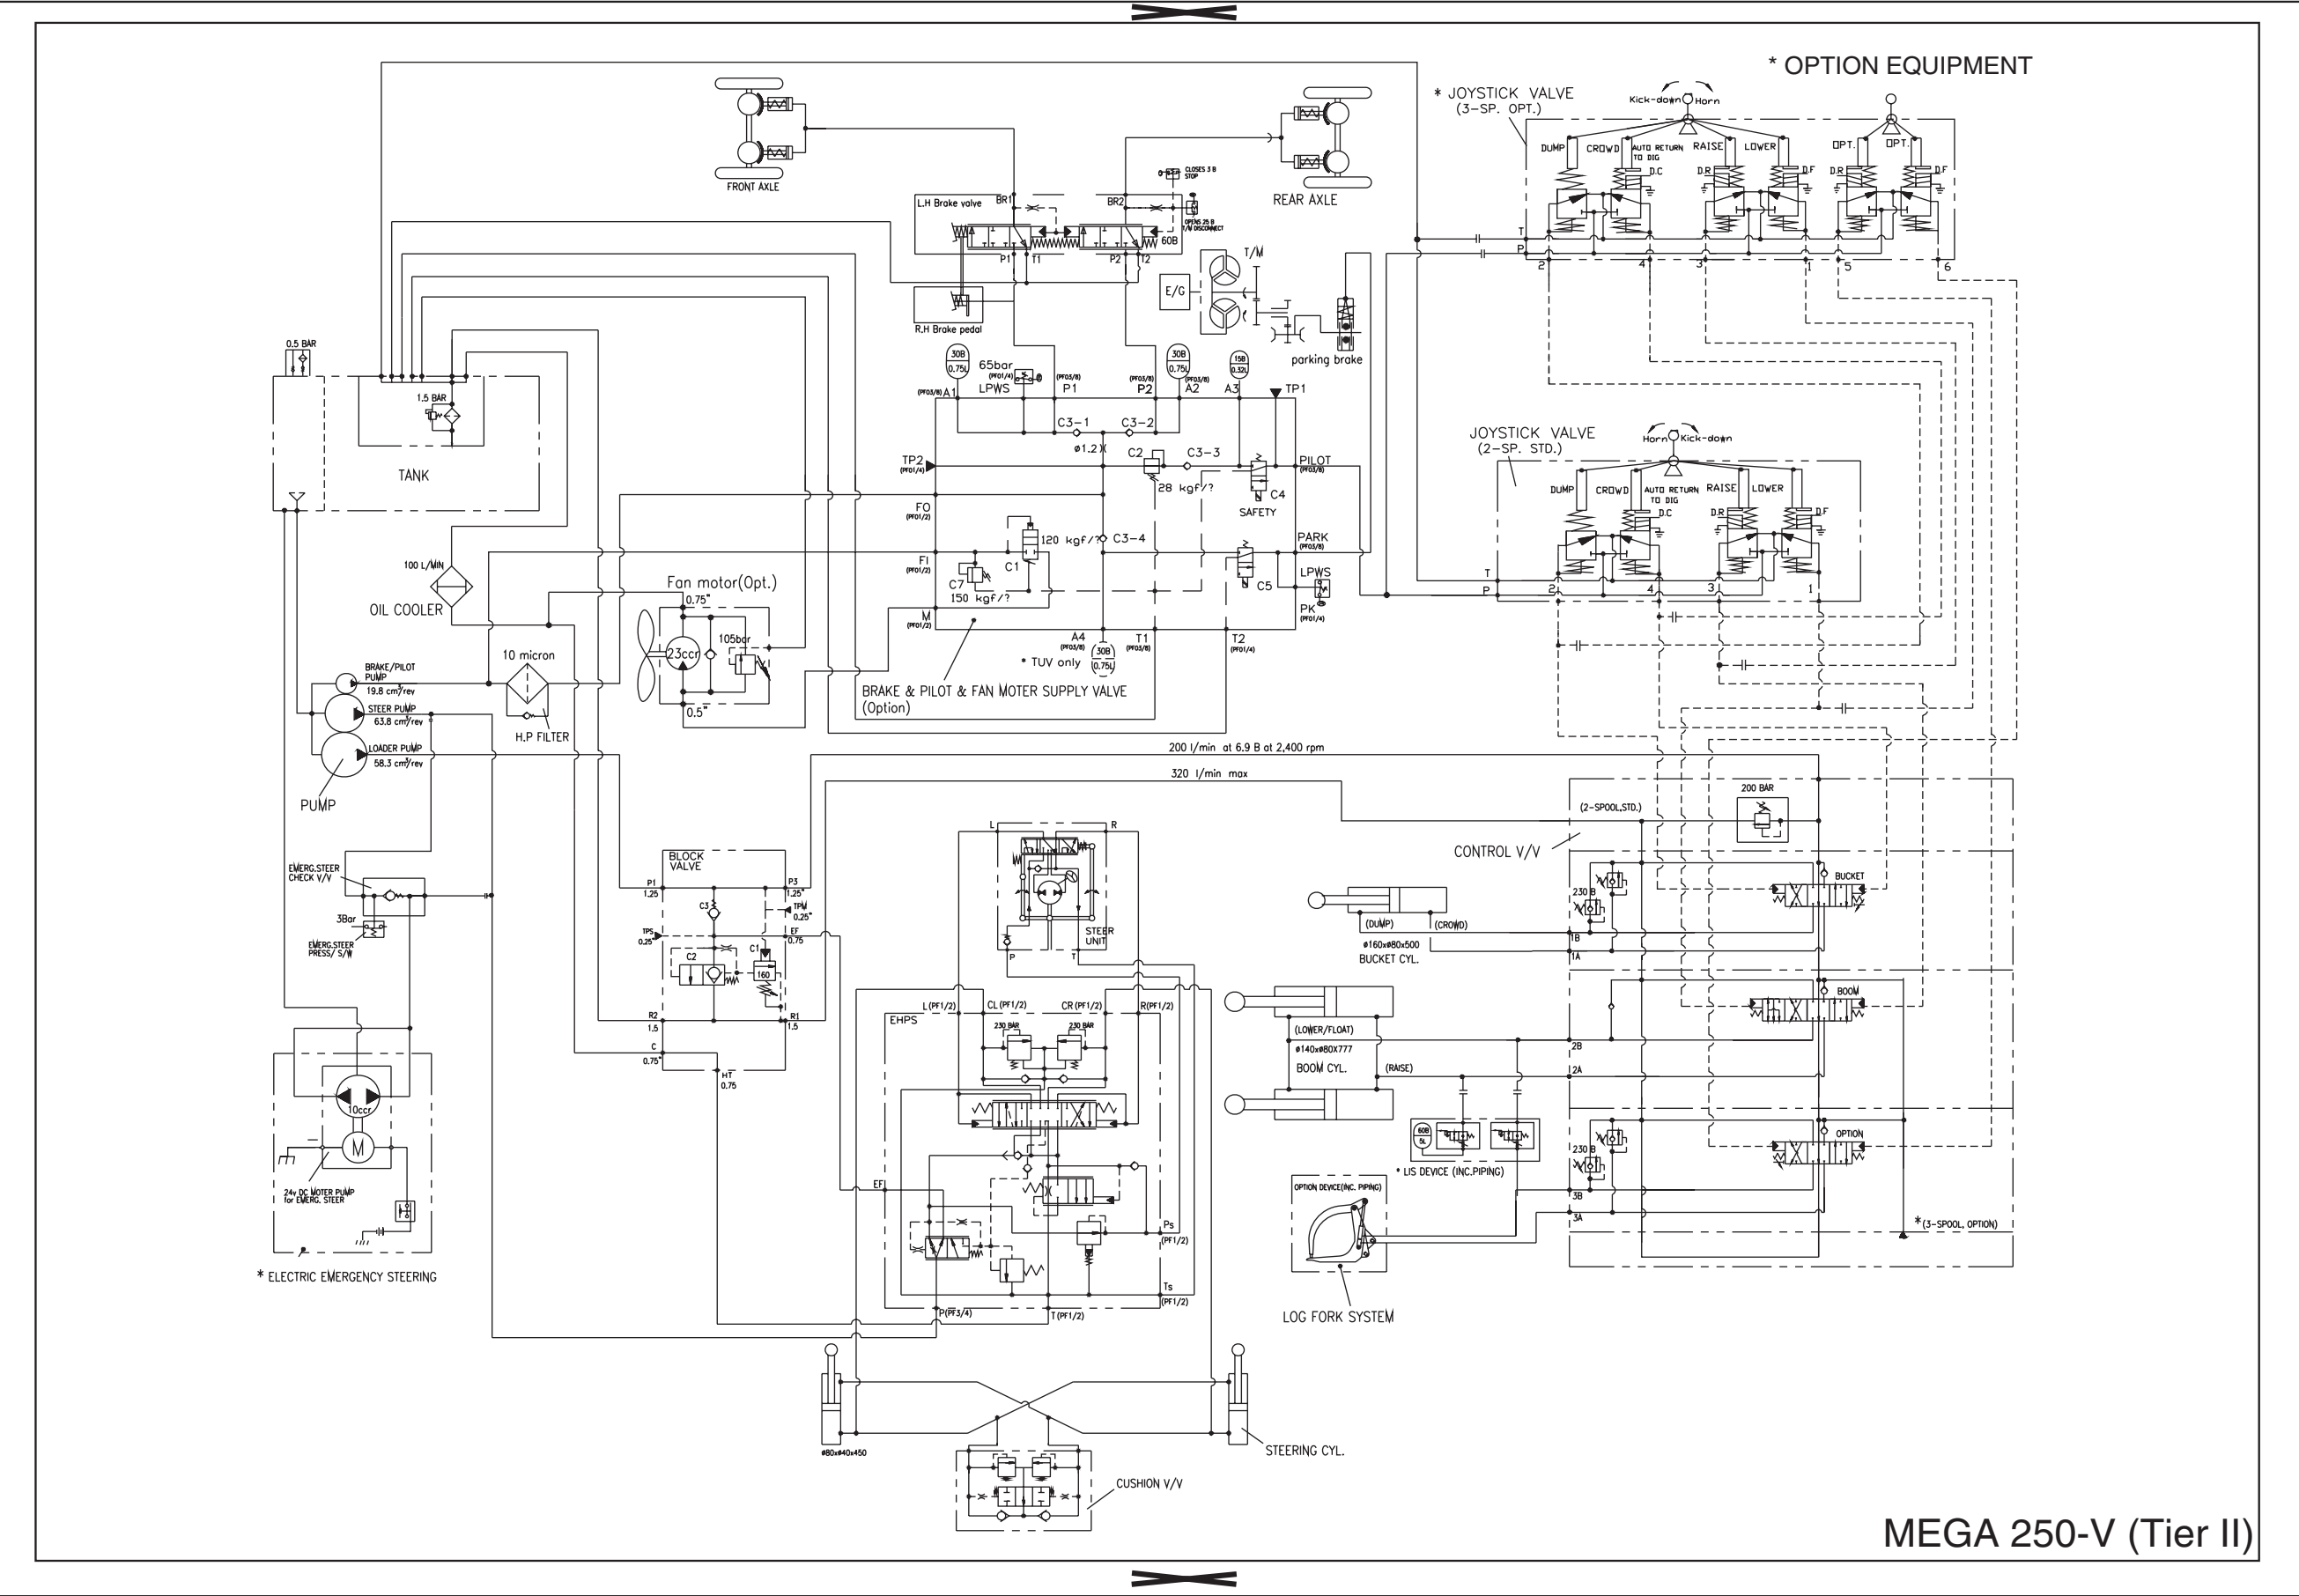


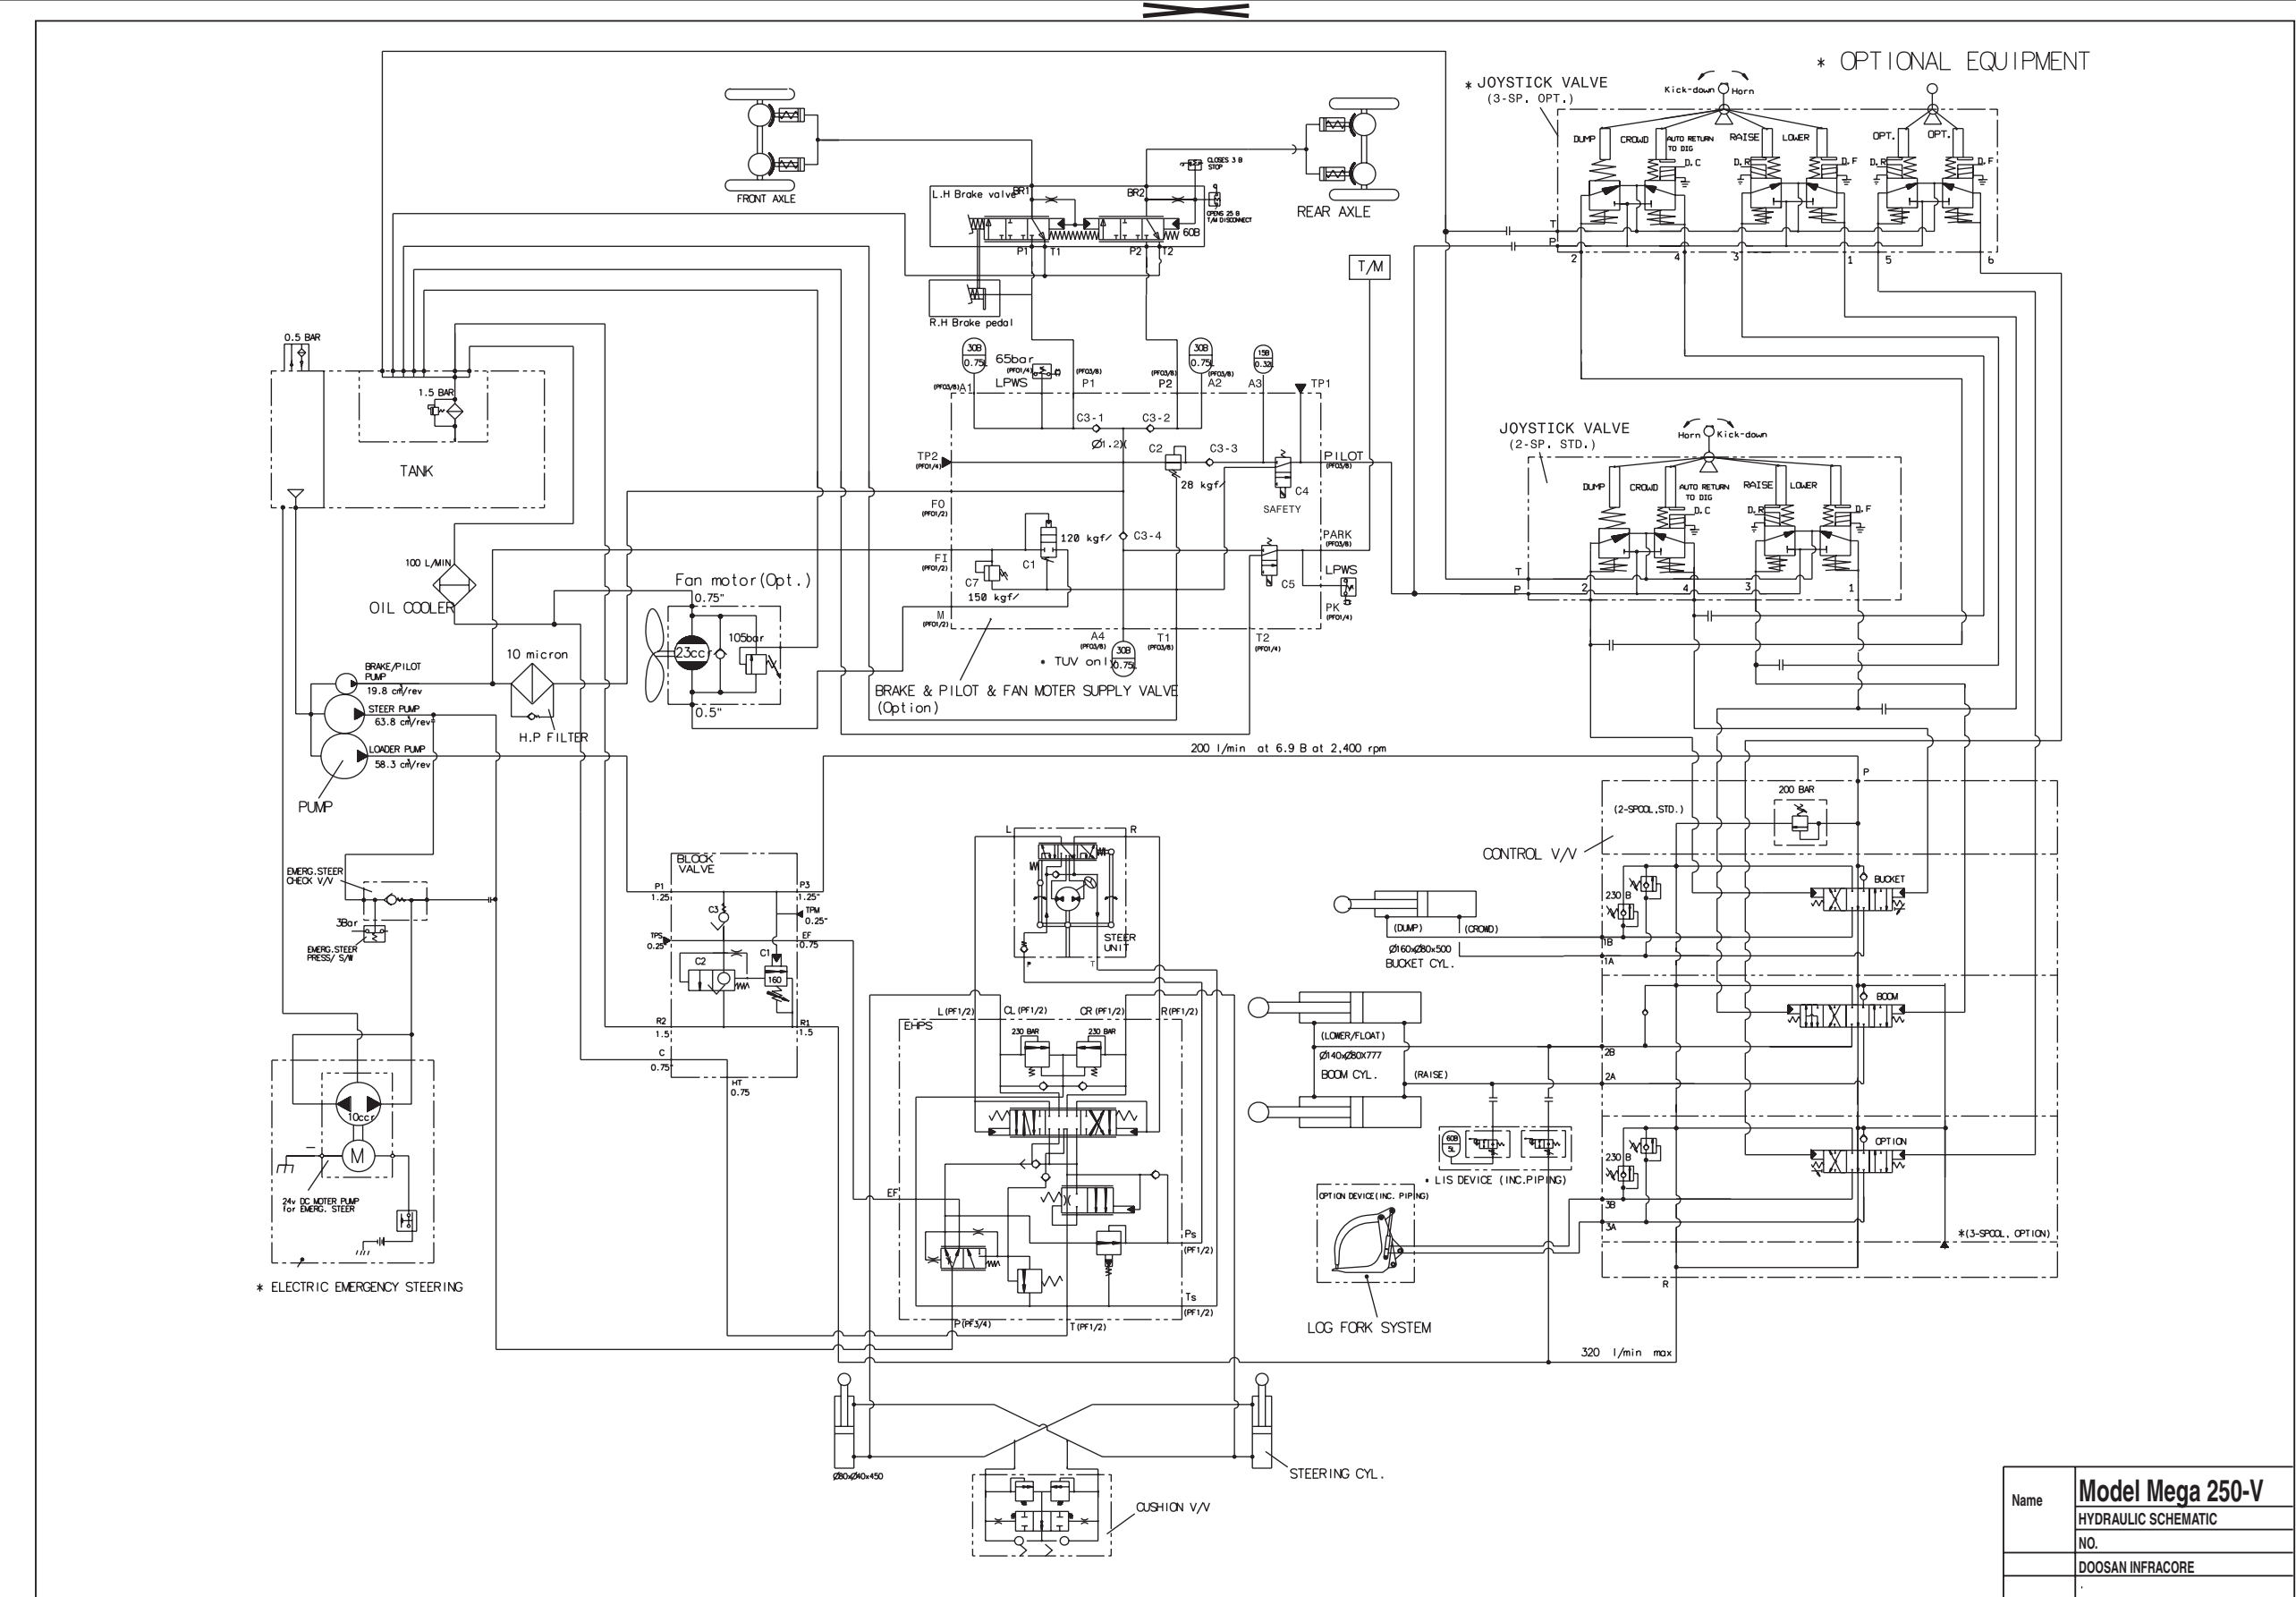

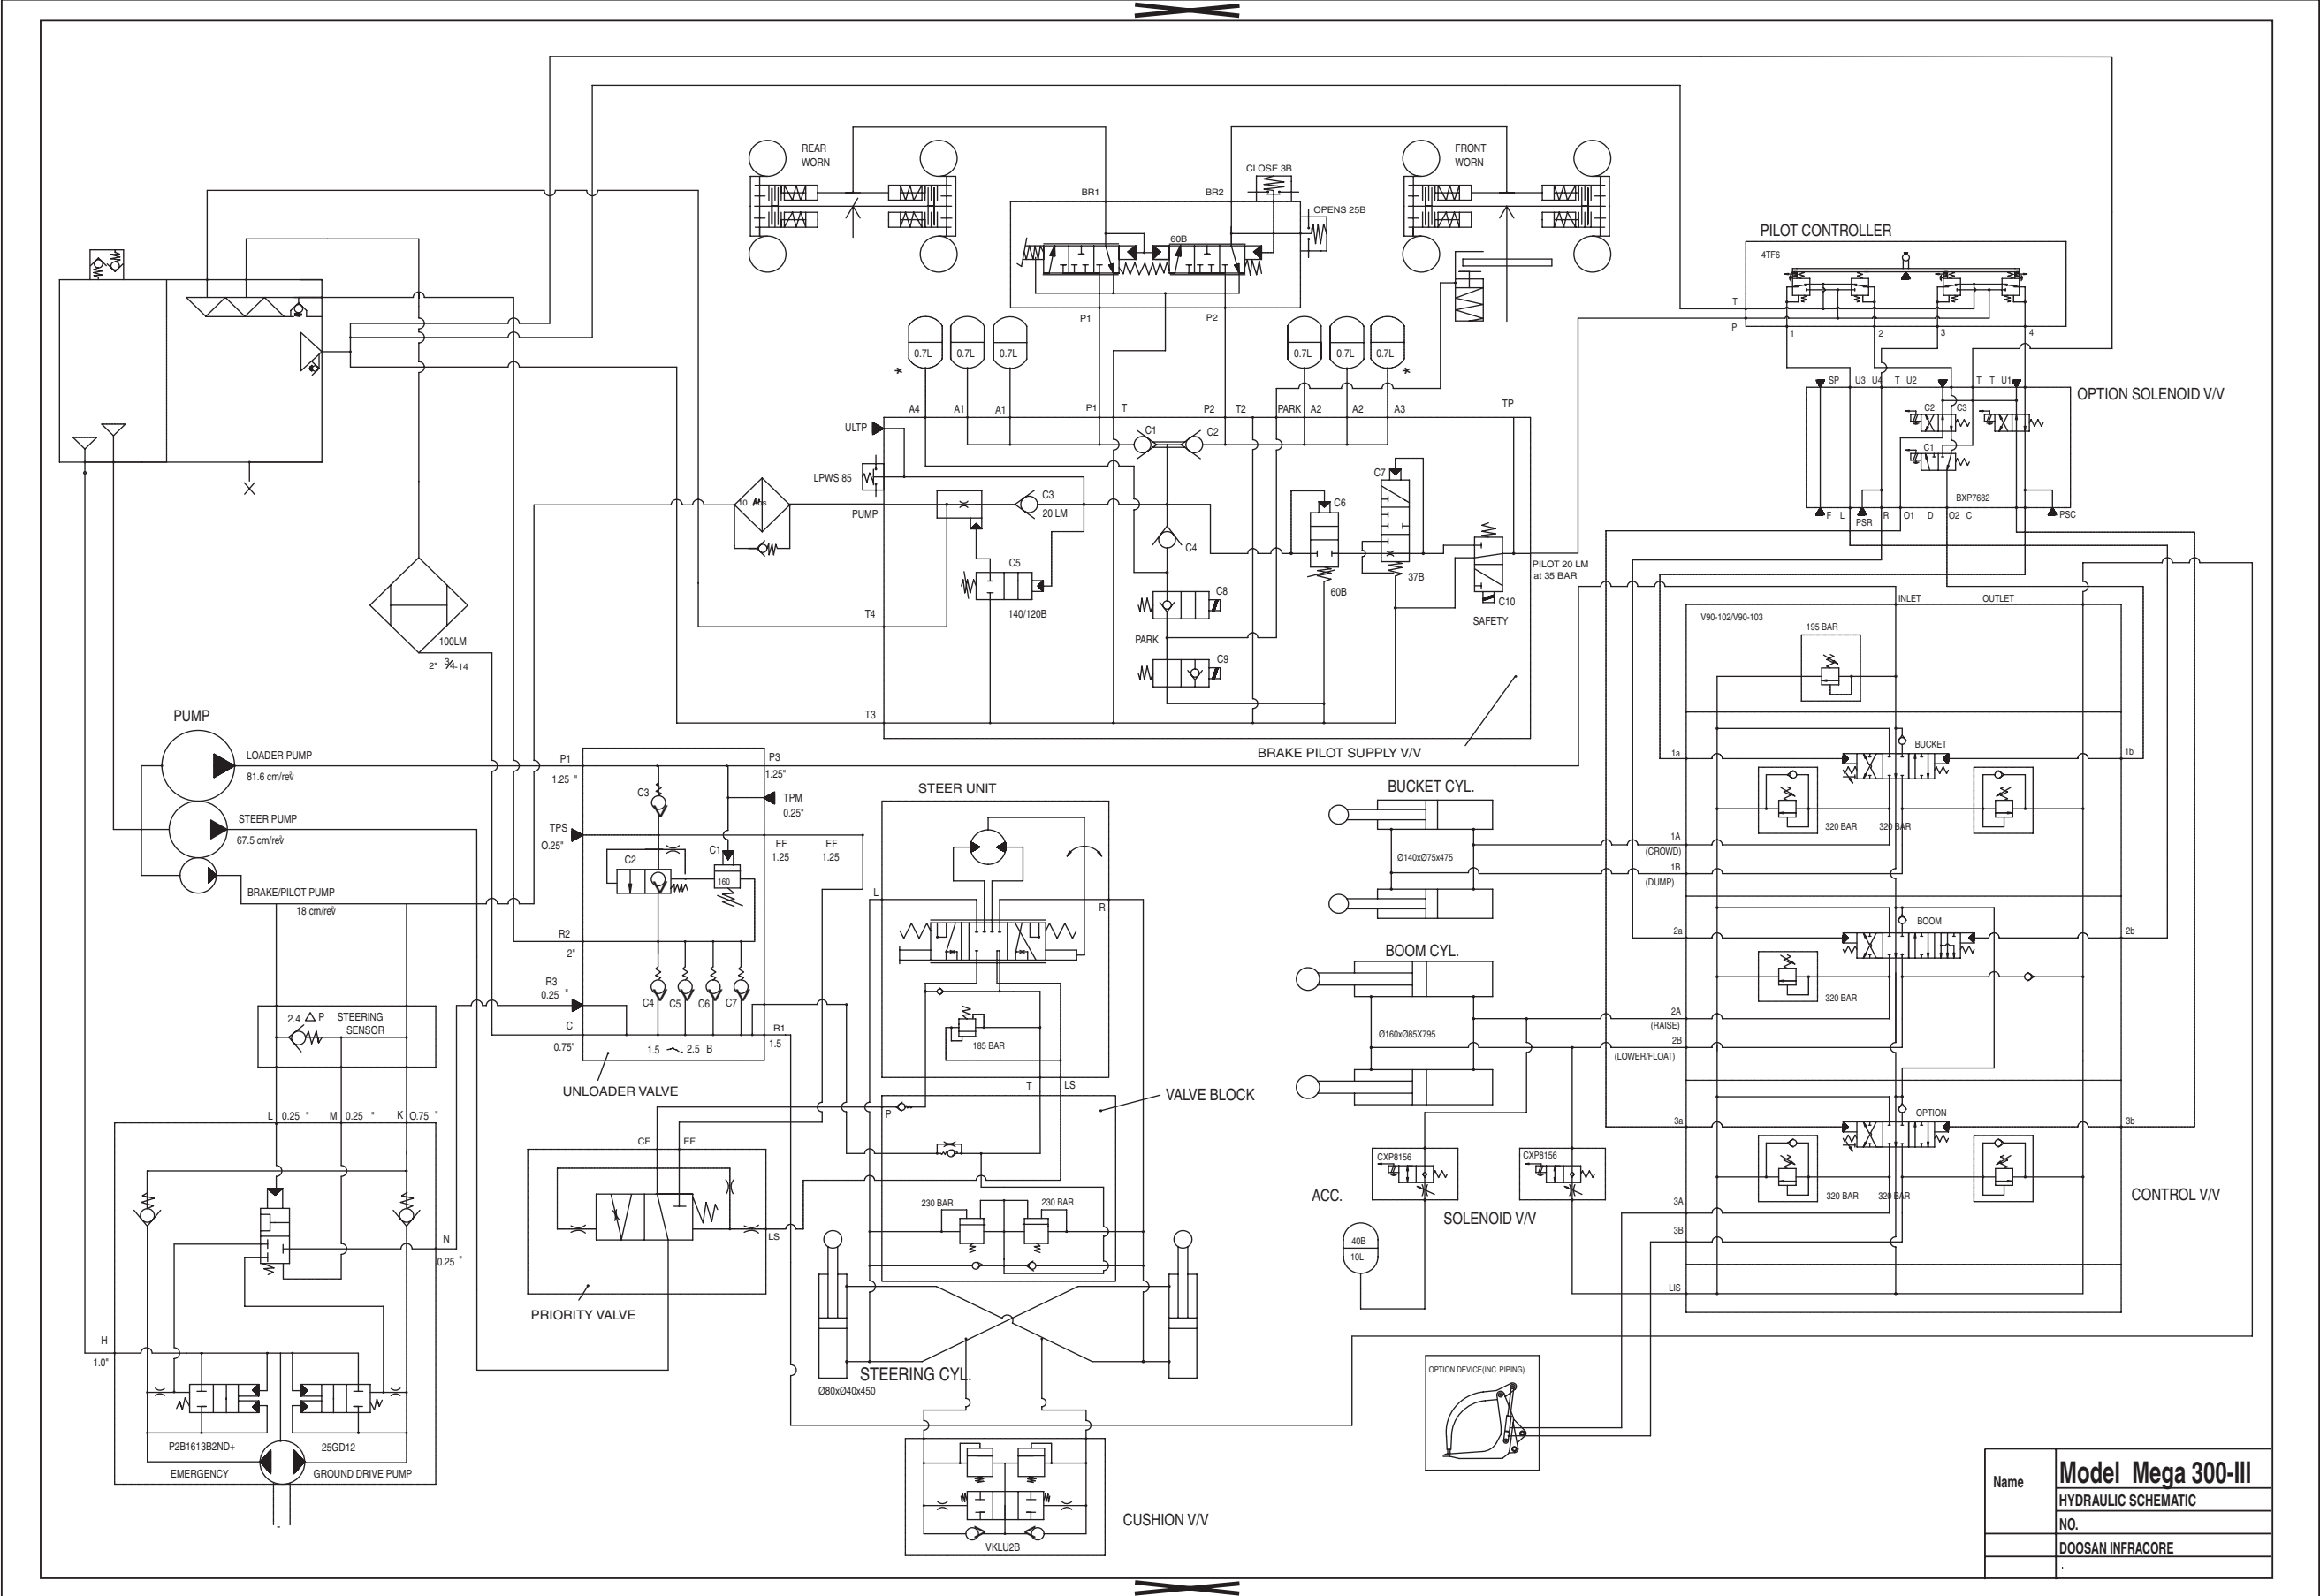


HAAE1450

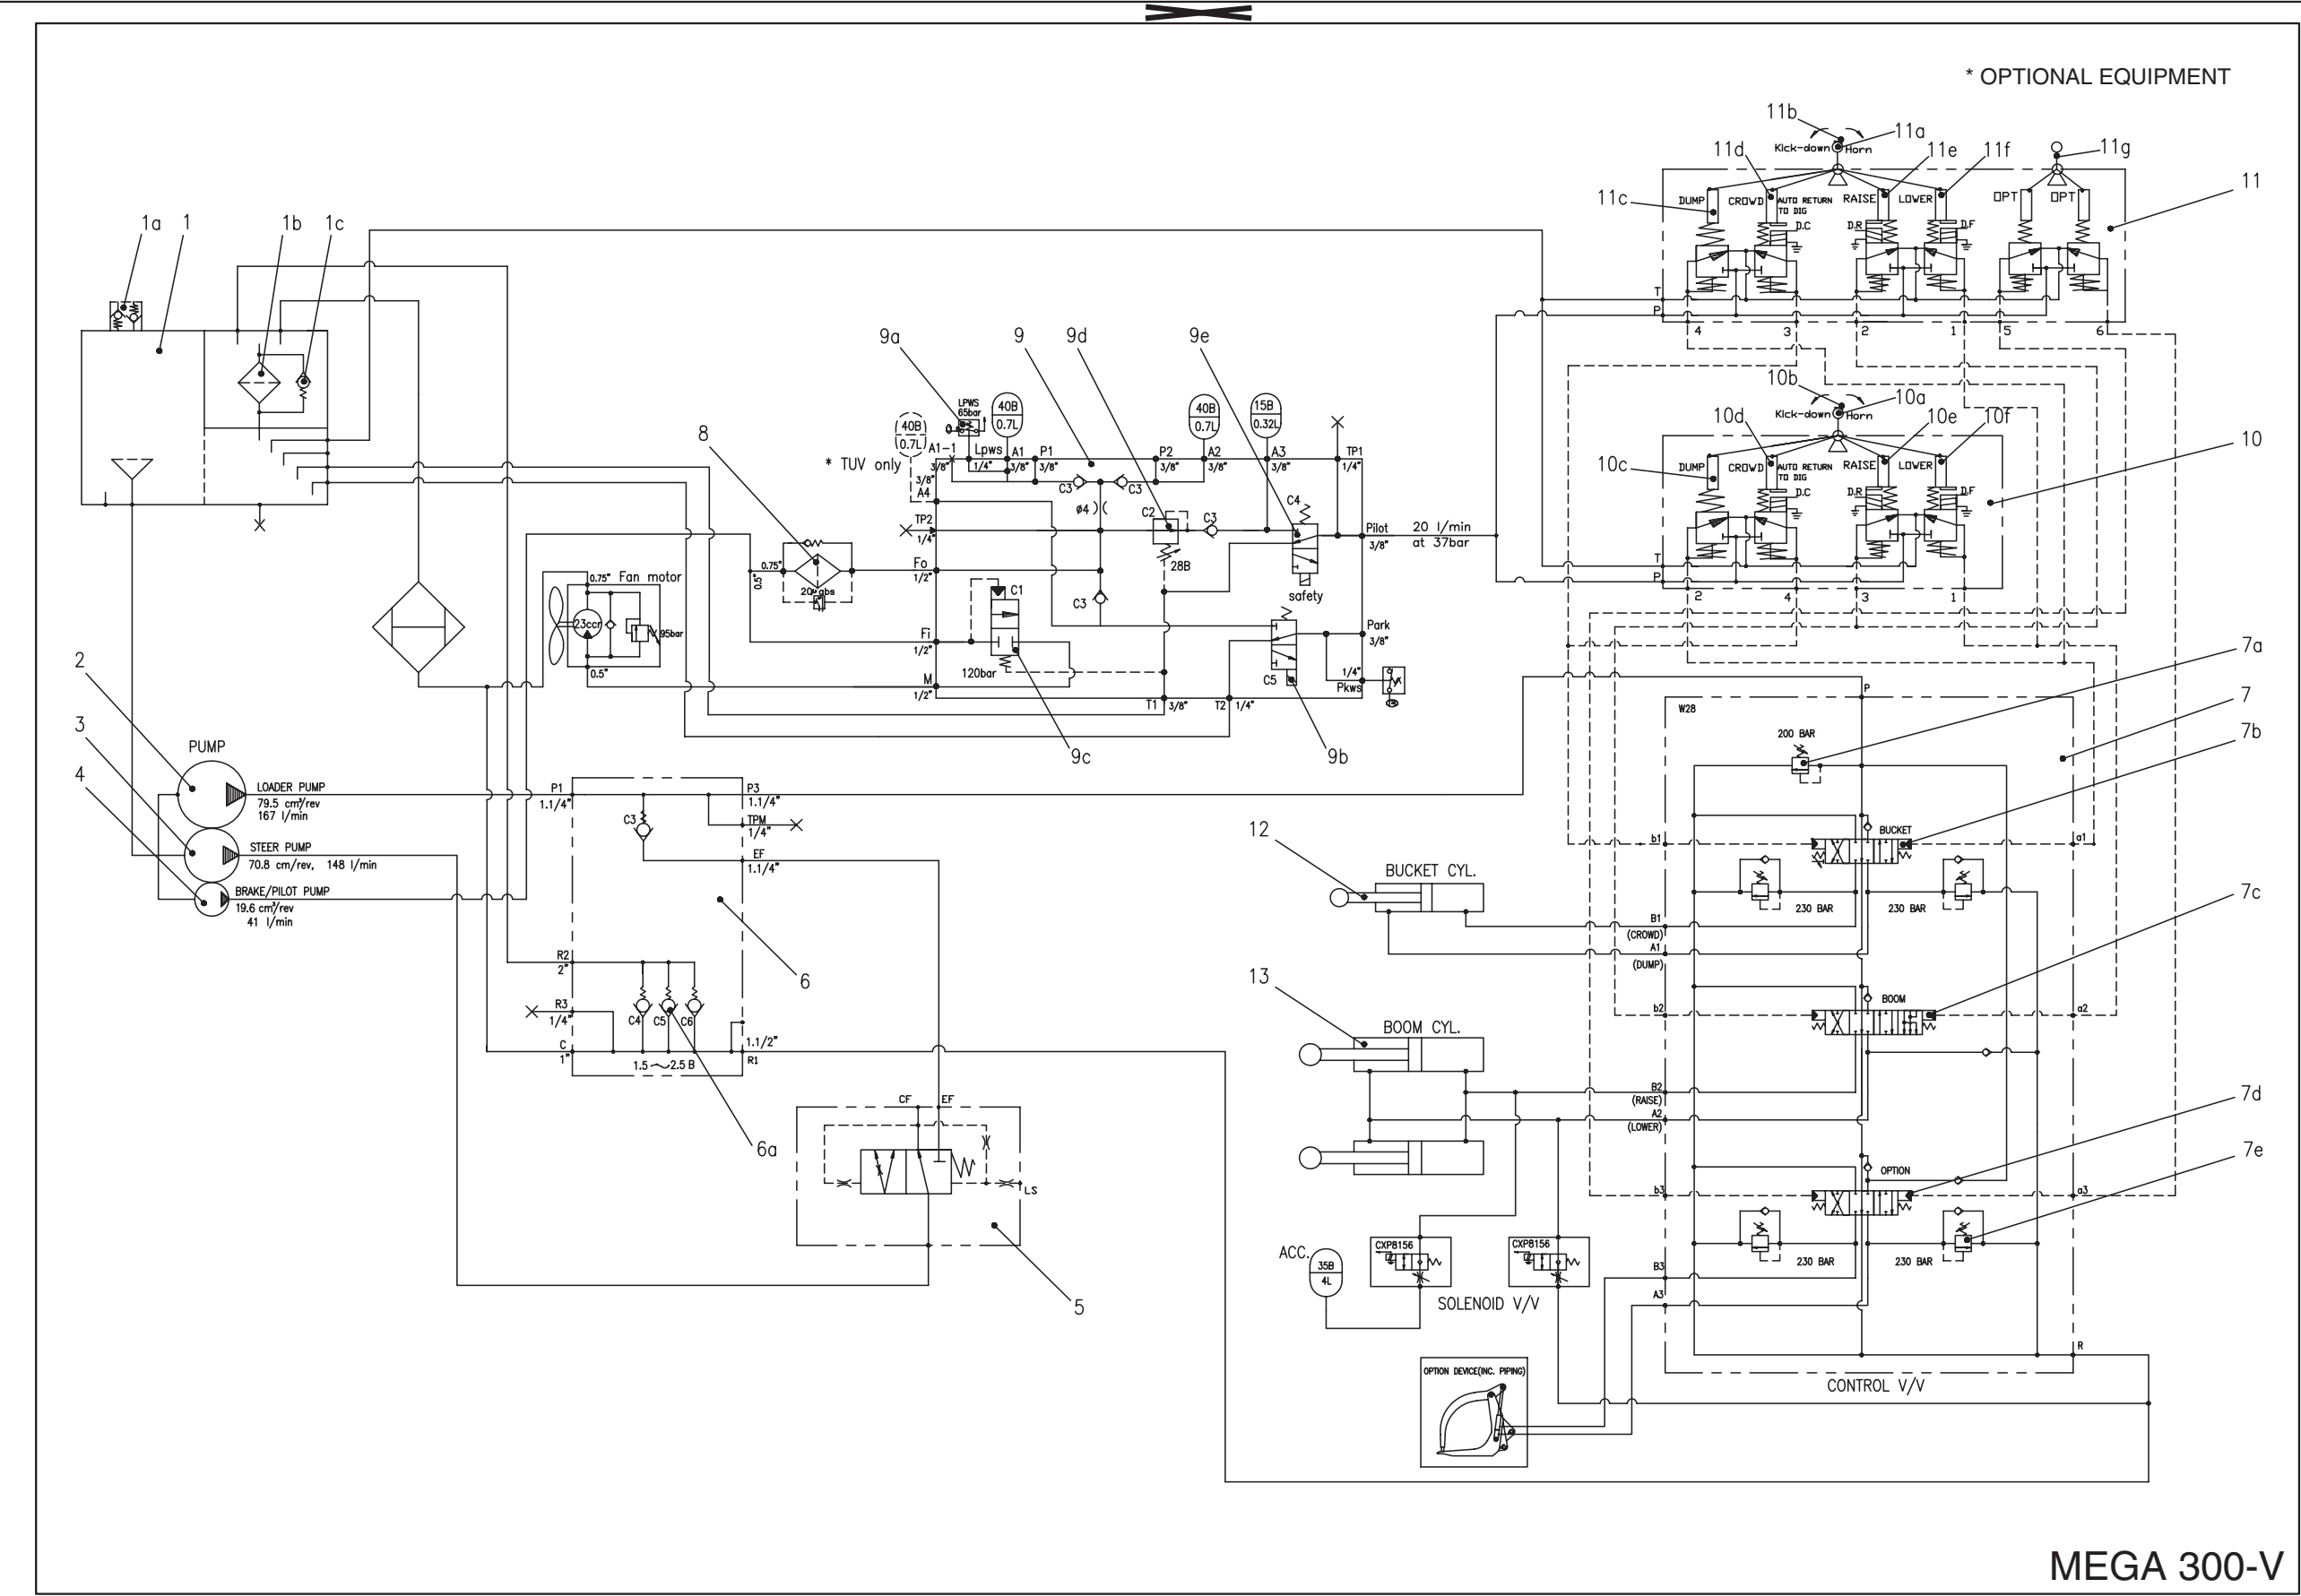


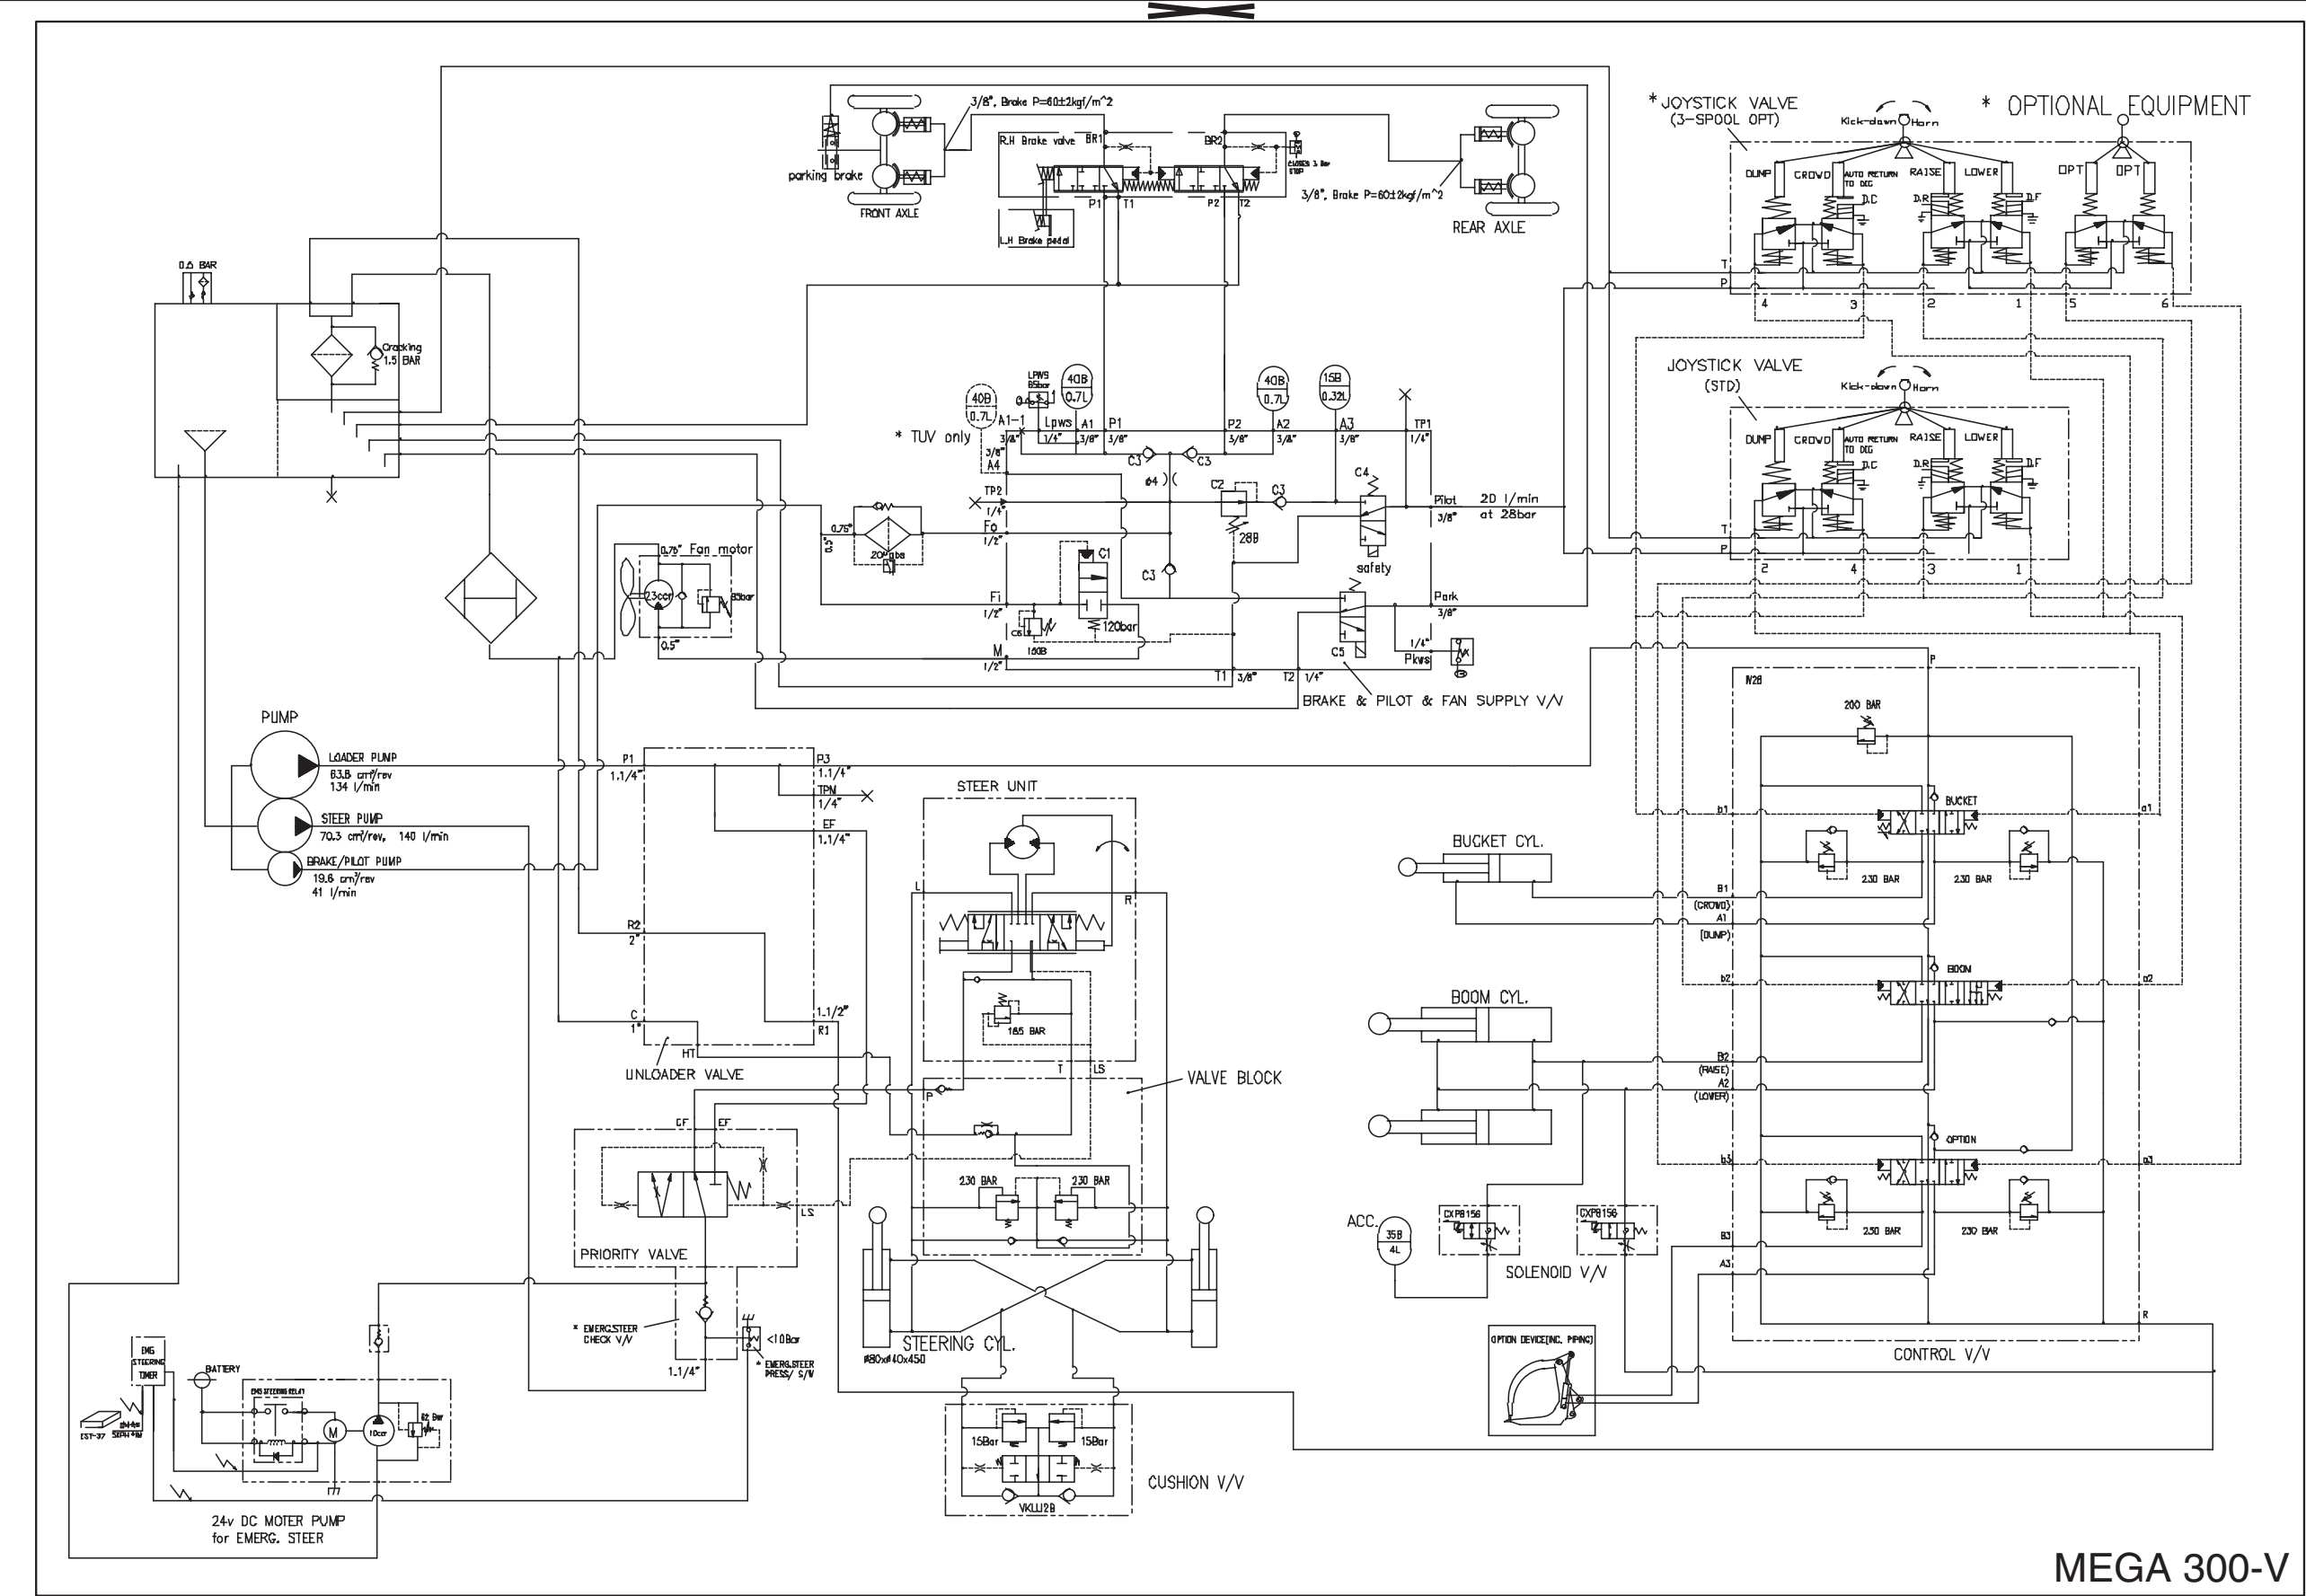


MEGA 300-V

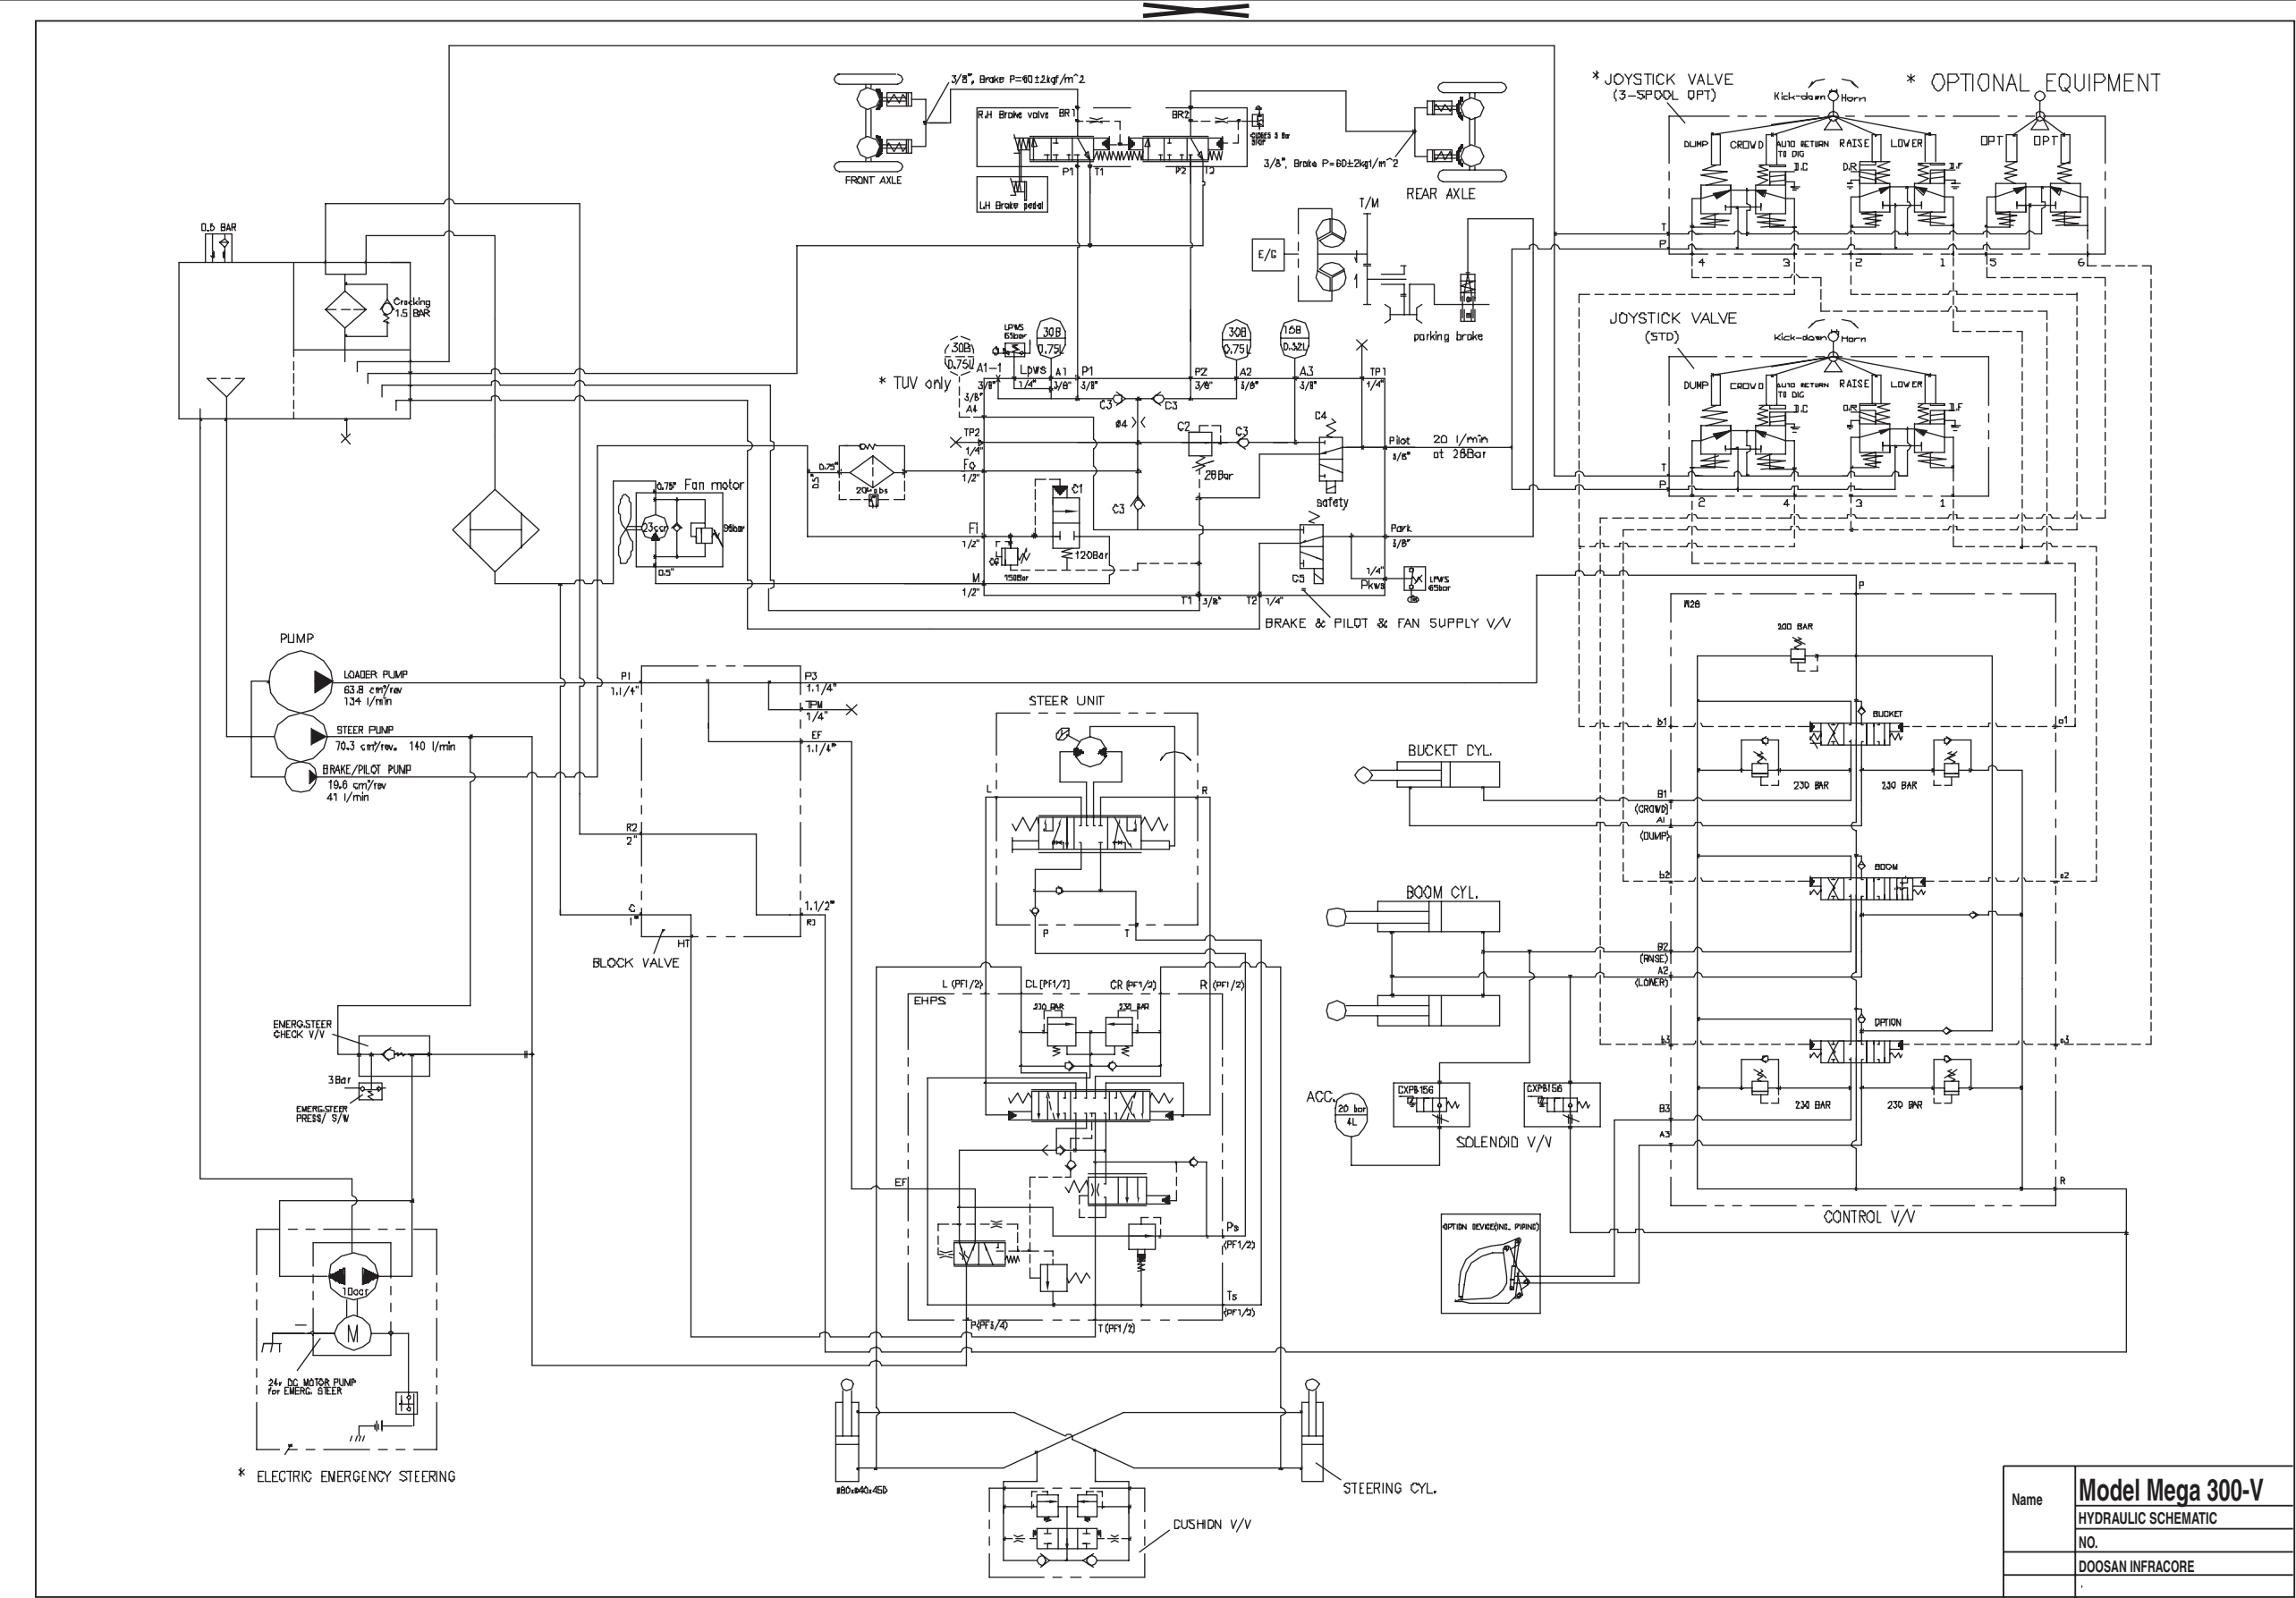


Name	Model Mega 300-V
	HYDRAULIC SCHEMATIC
NO.	
	DOOSAN INFRACORE

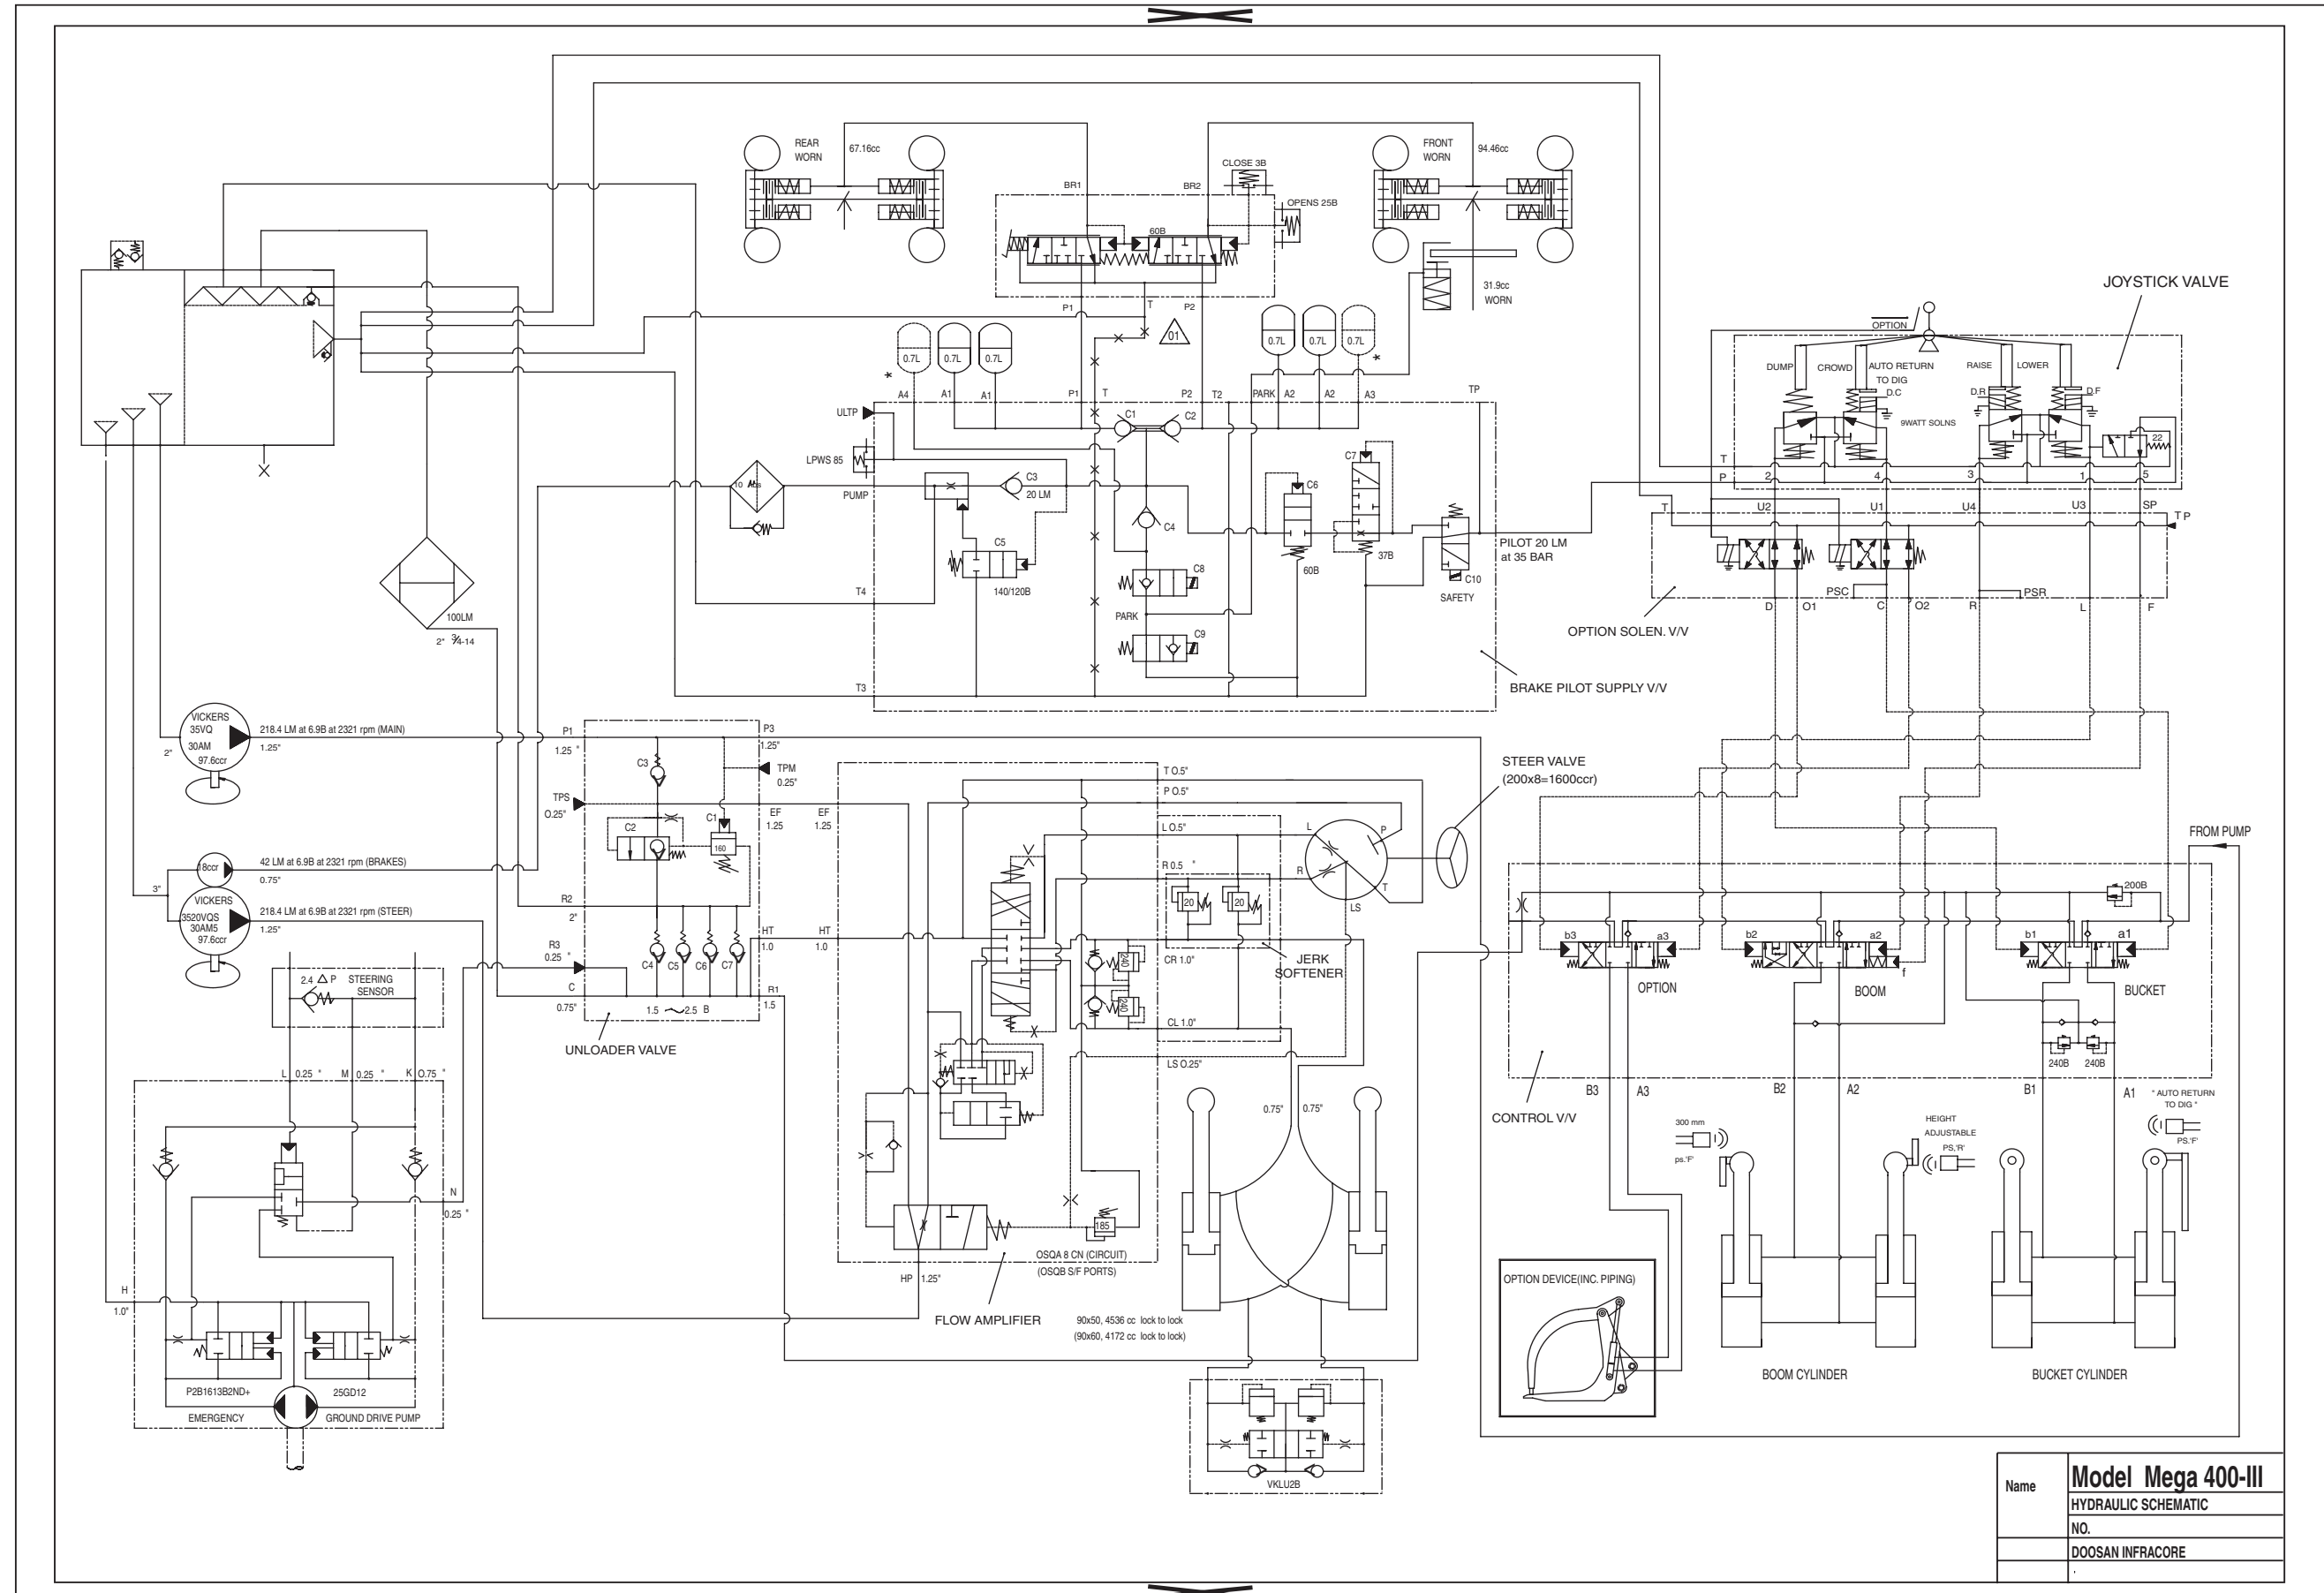


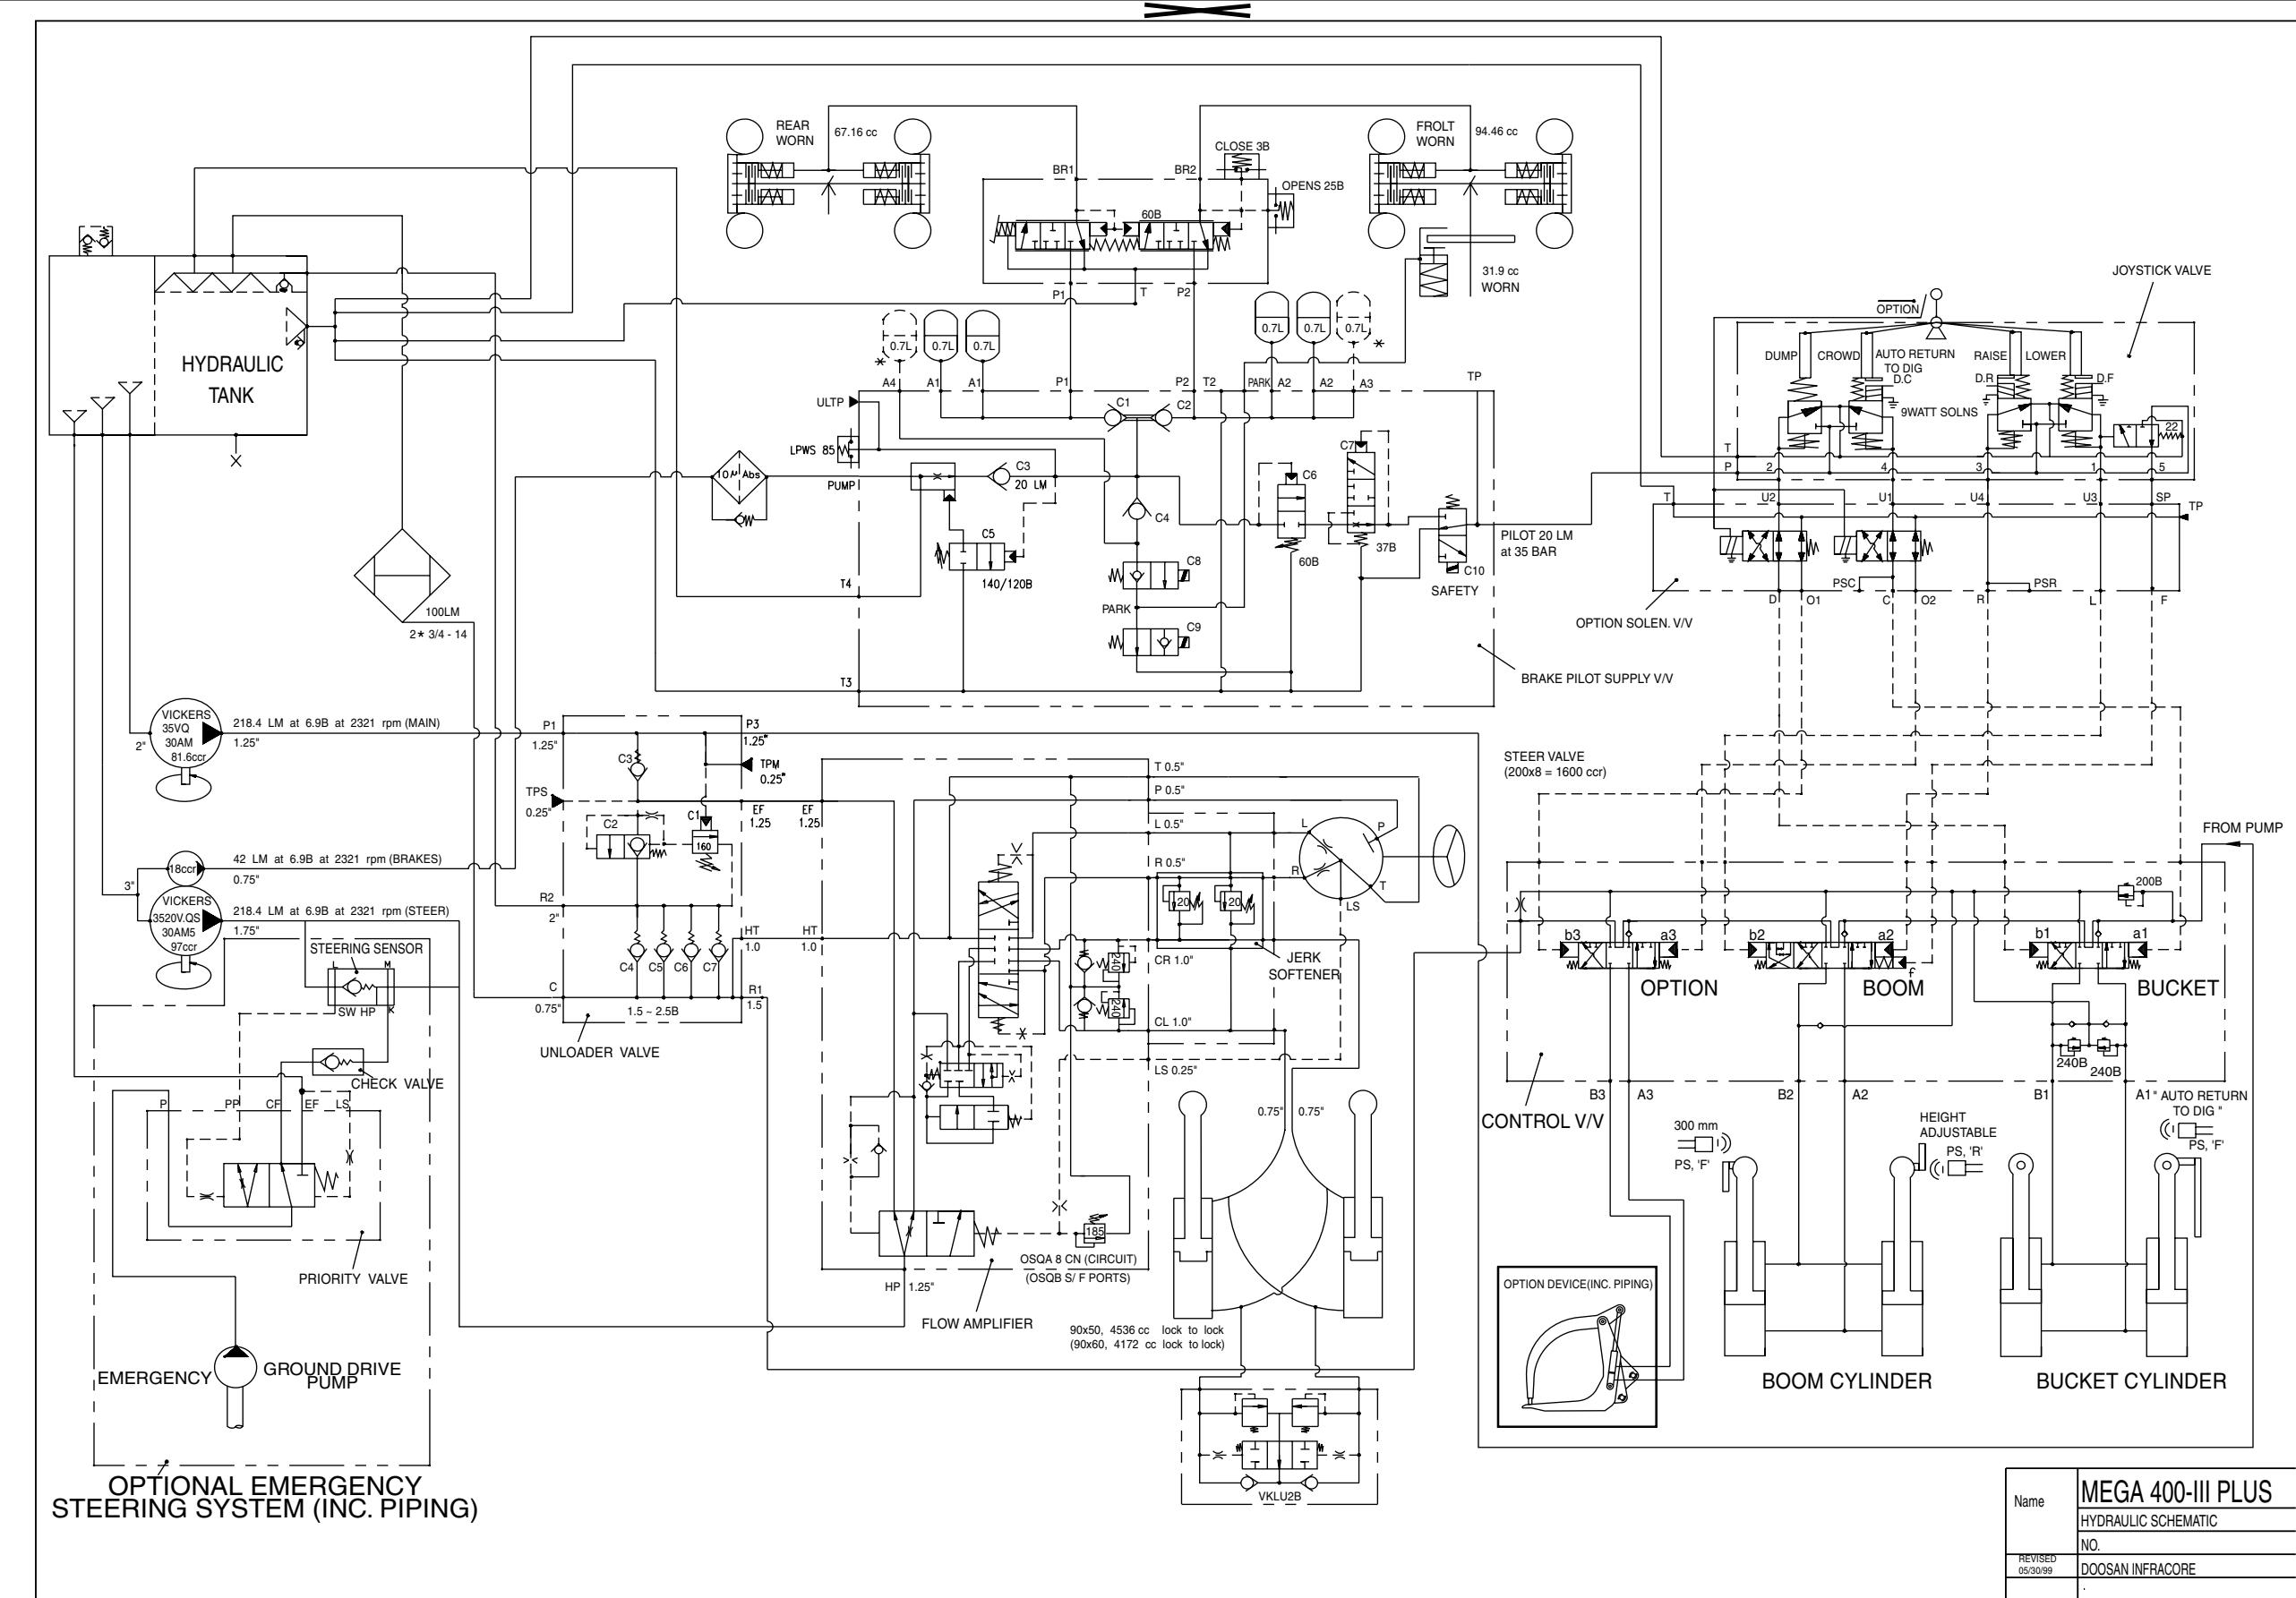


Name	MEGA 400-III PLUS
	HYDRAULIC SCHEMATIC
NO.	
REVISED	DOOSAN INFRACORE
05/30/99	

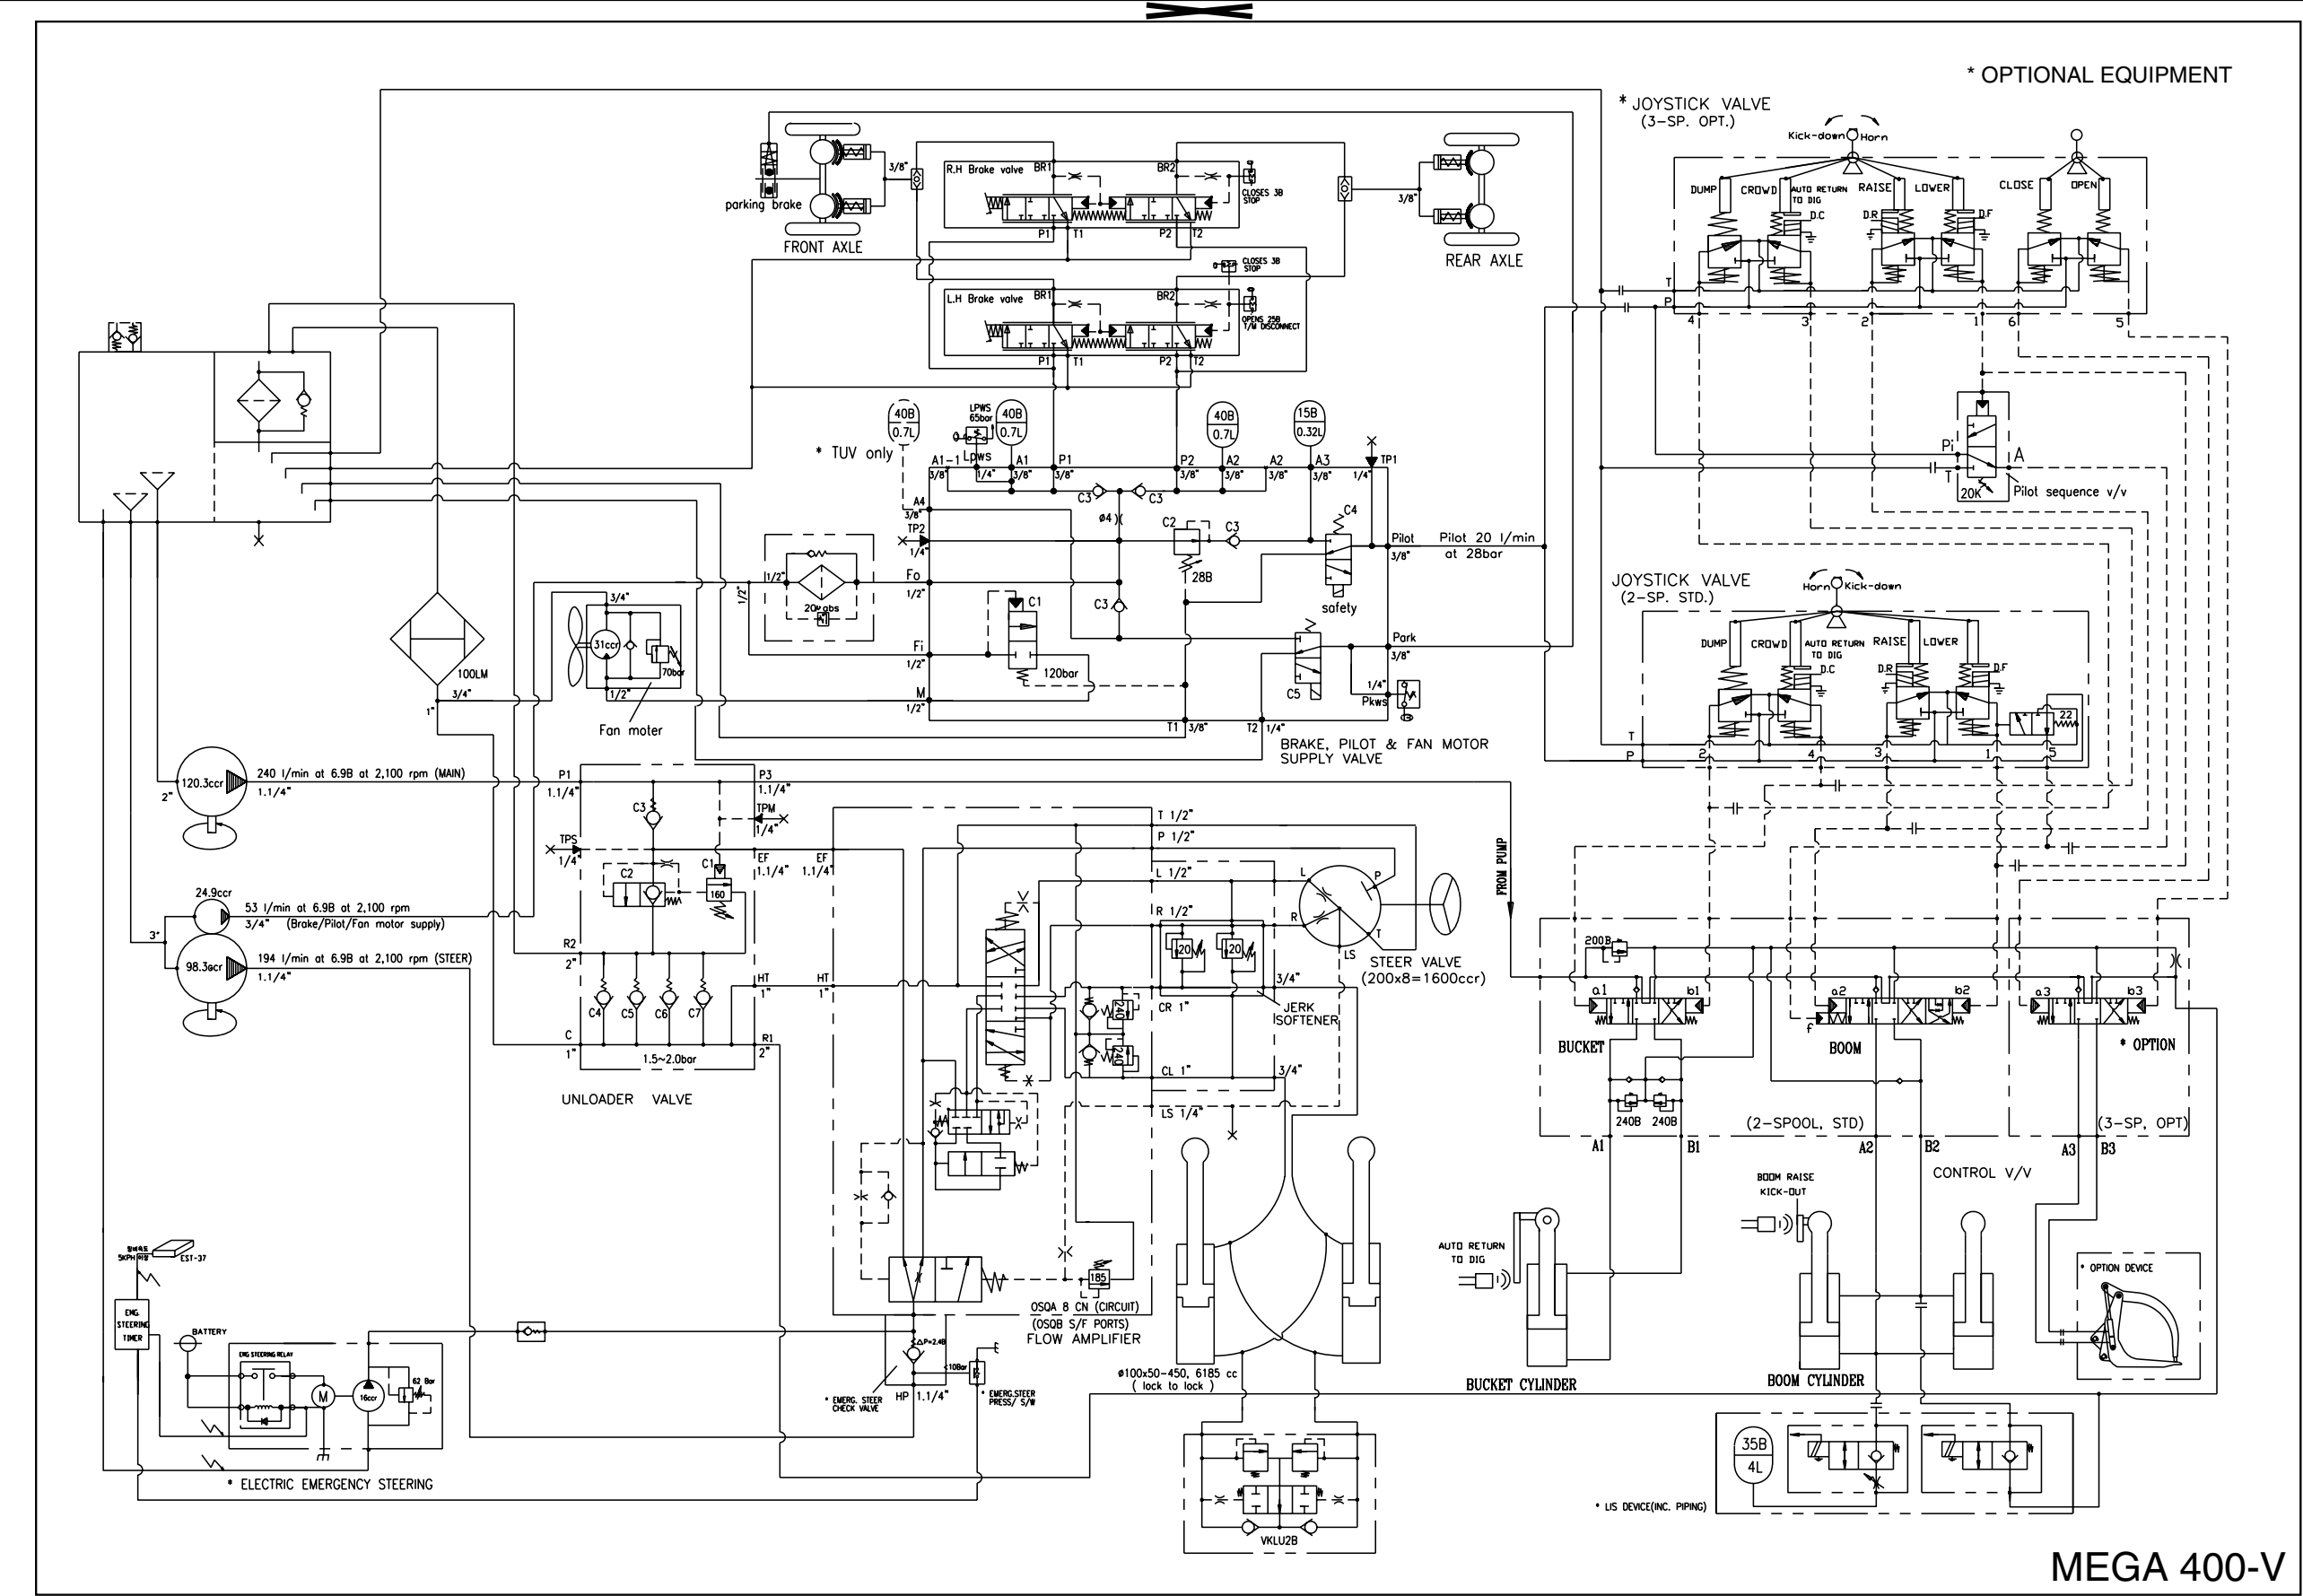

MEGA 400-V

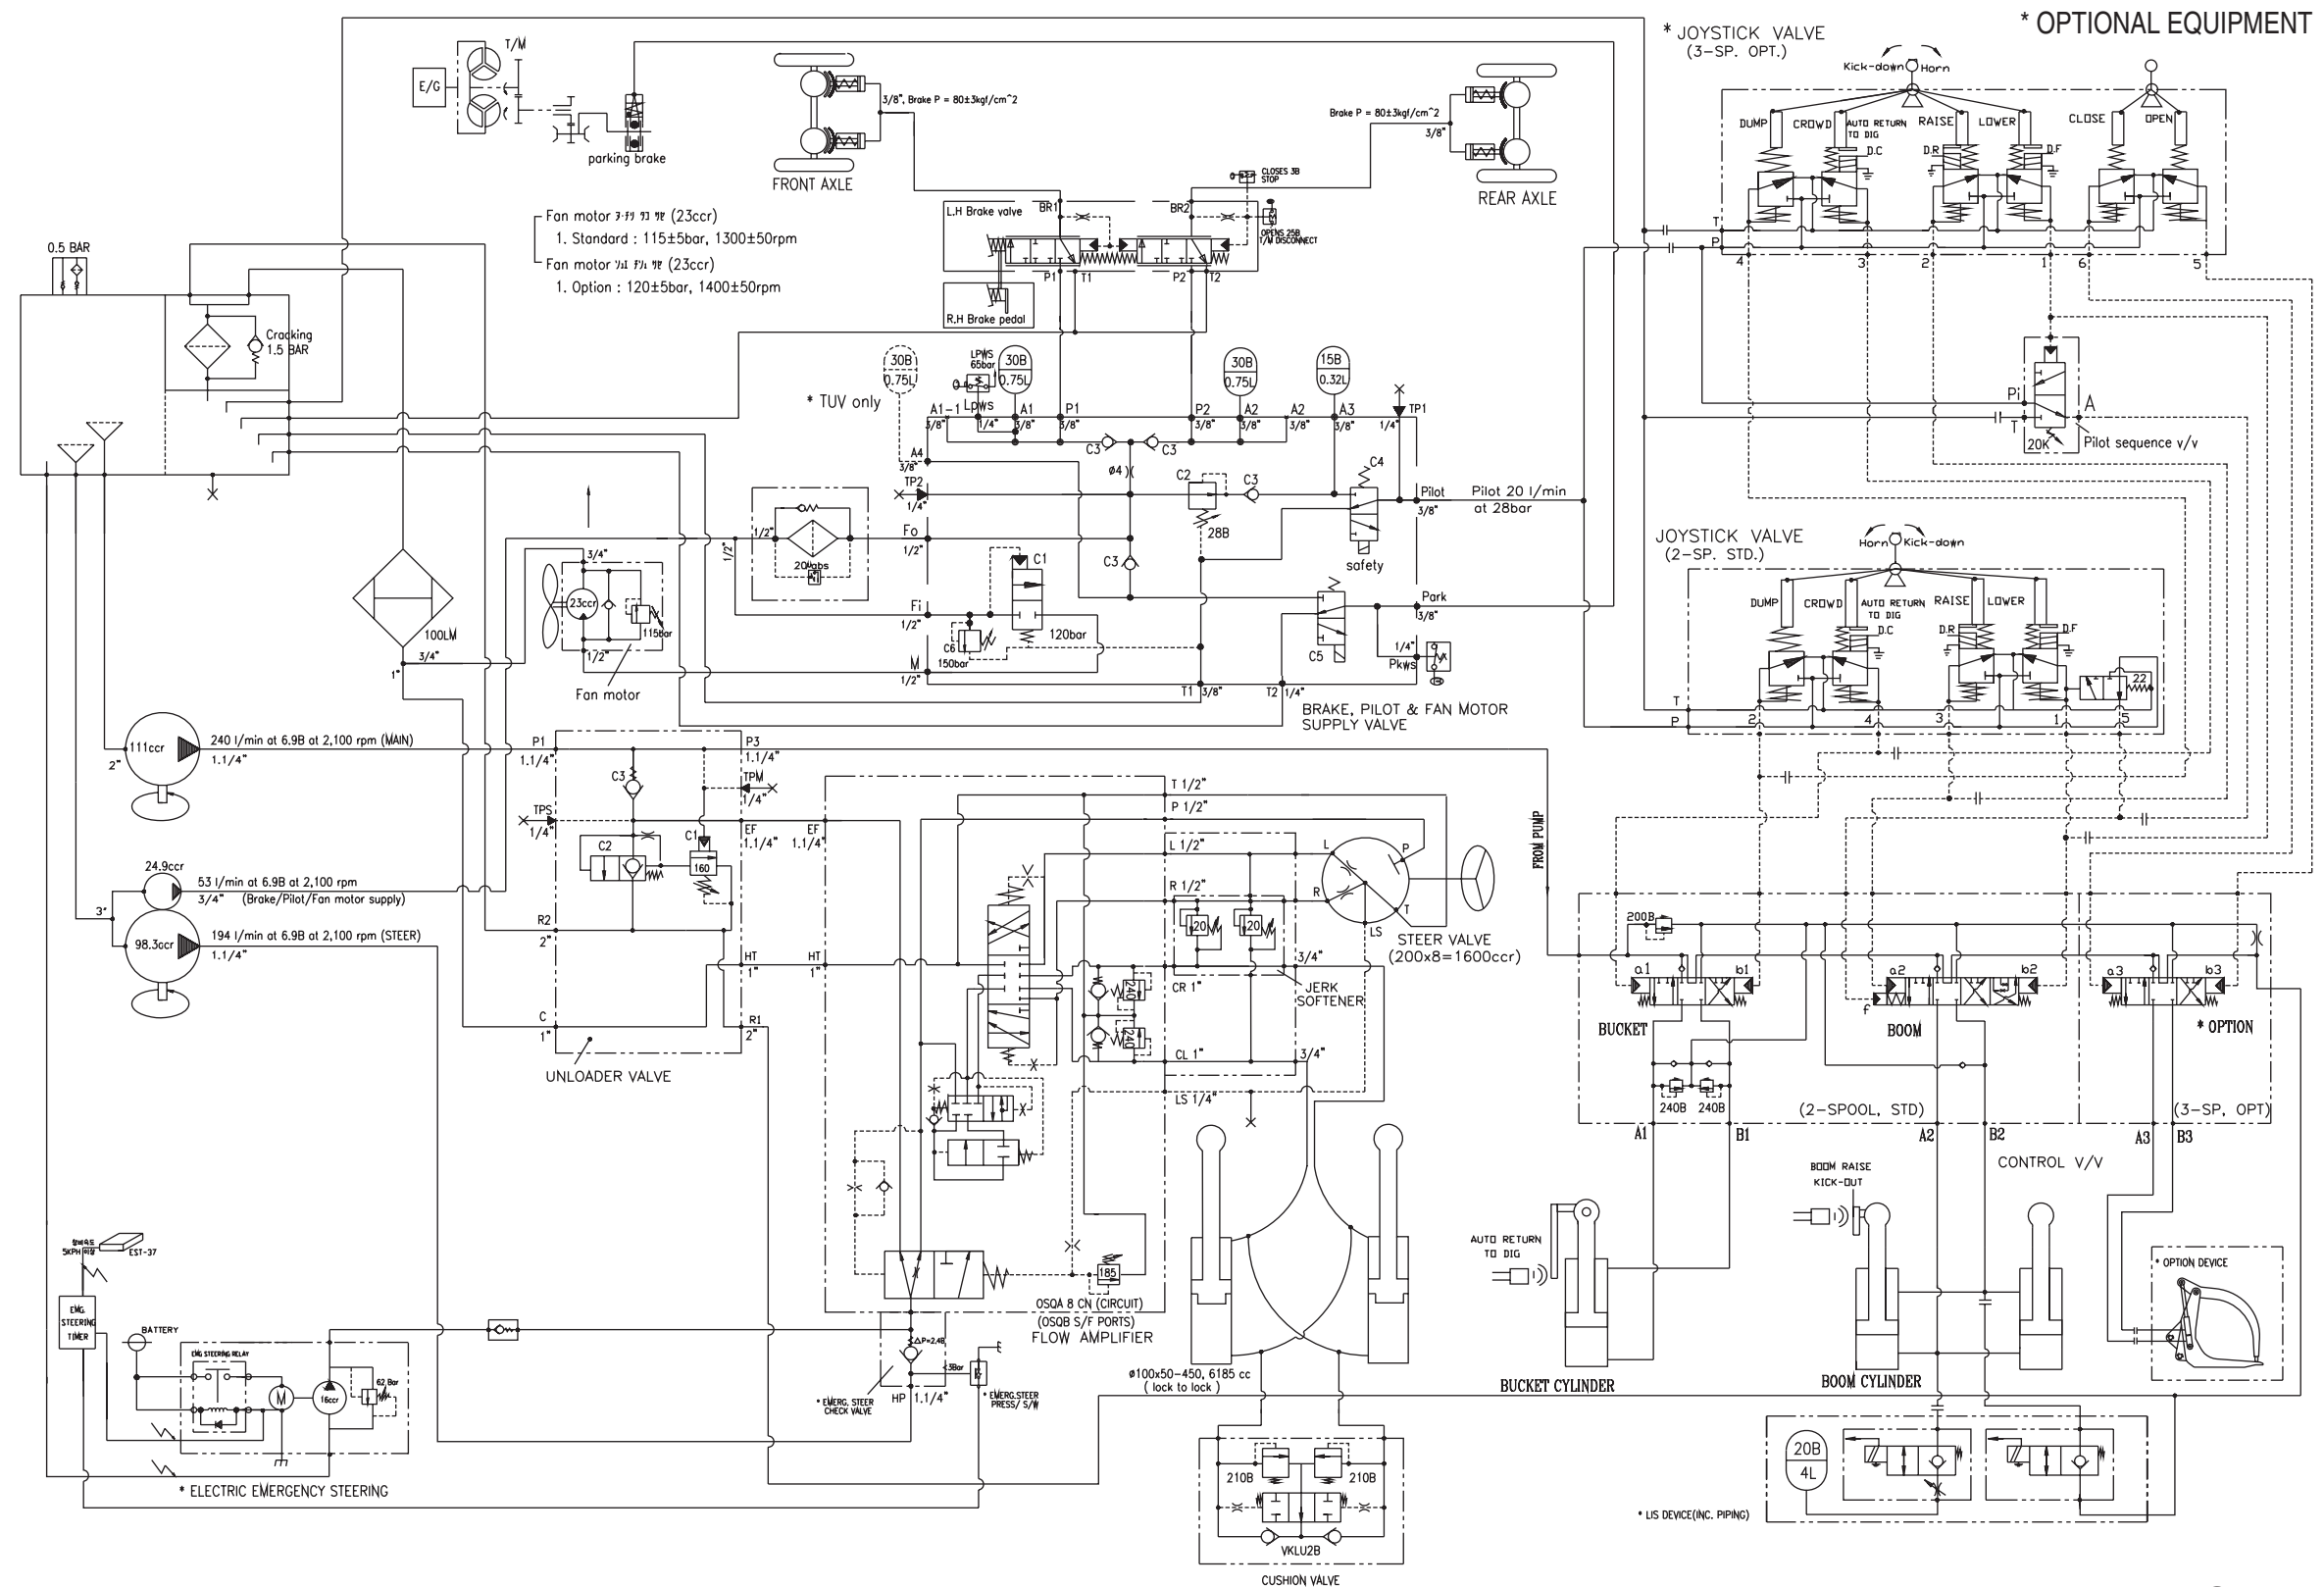

MEGA 400-V

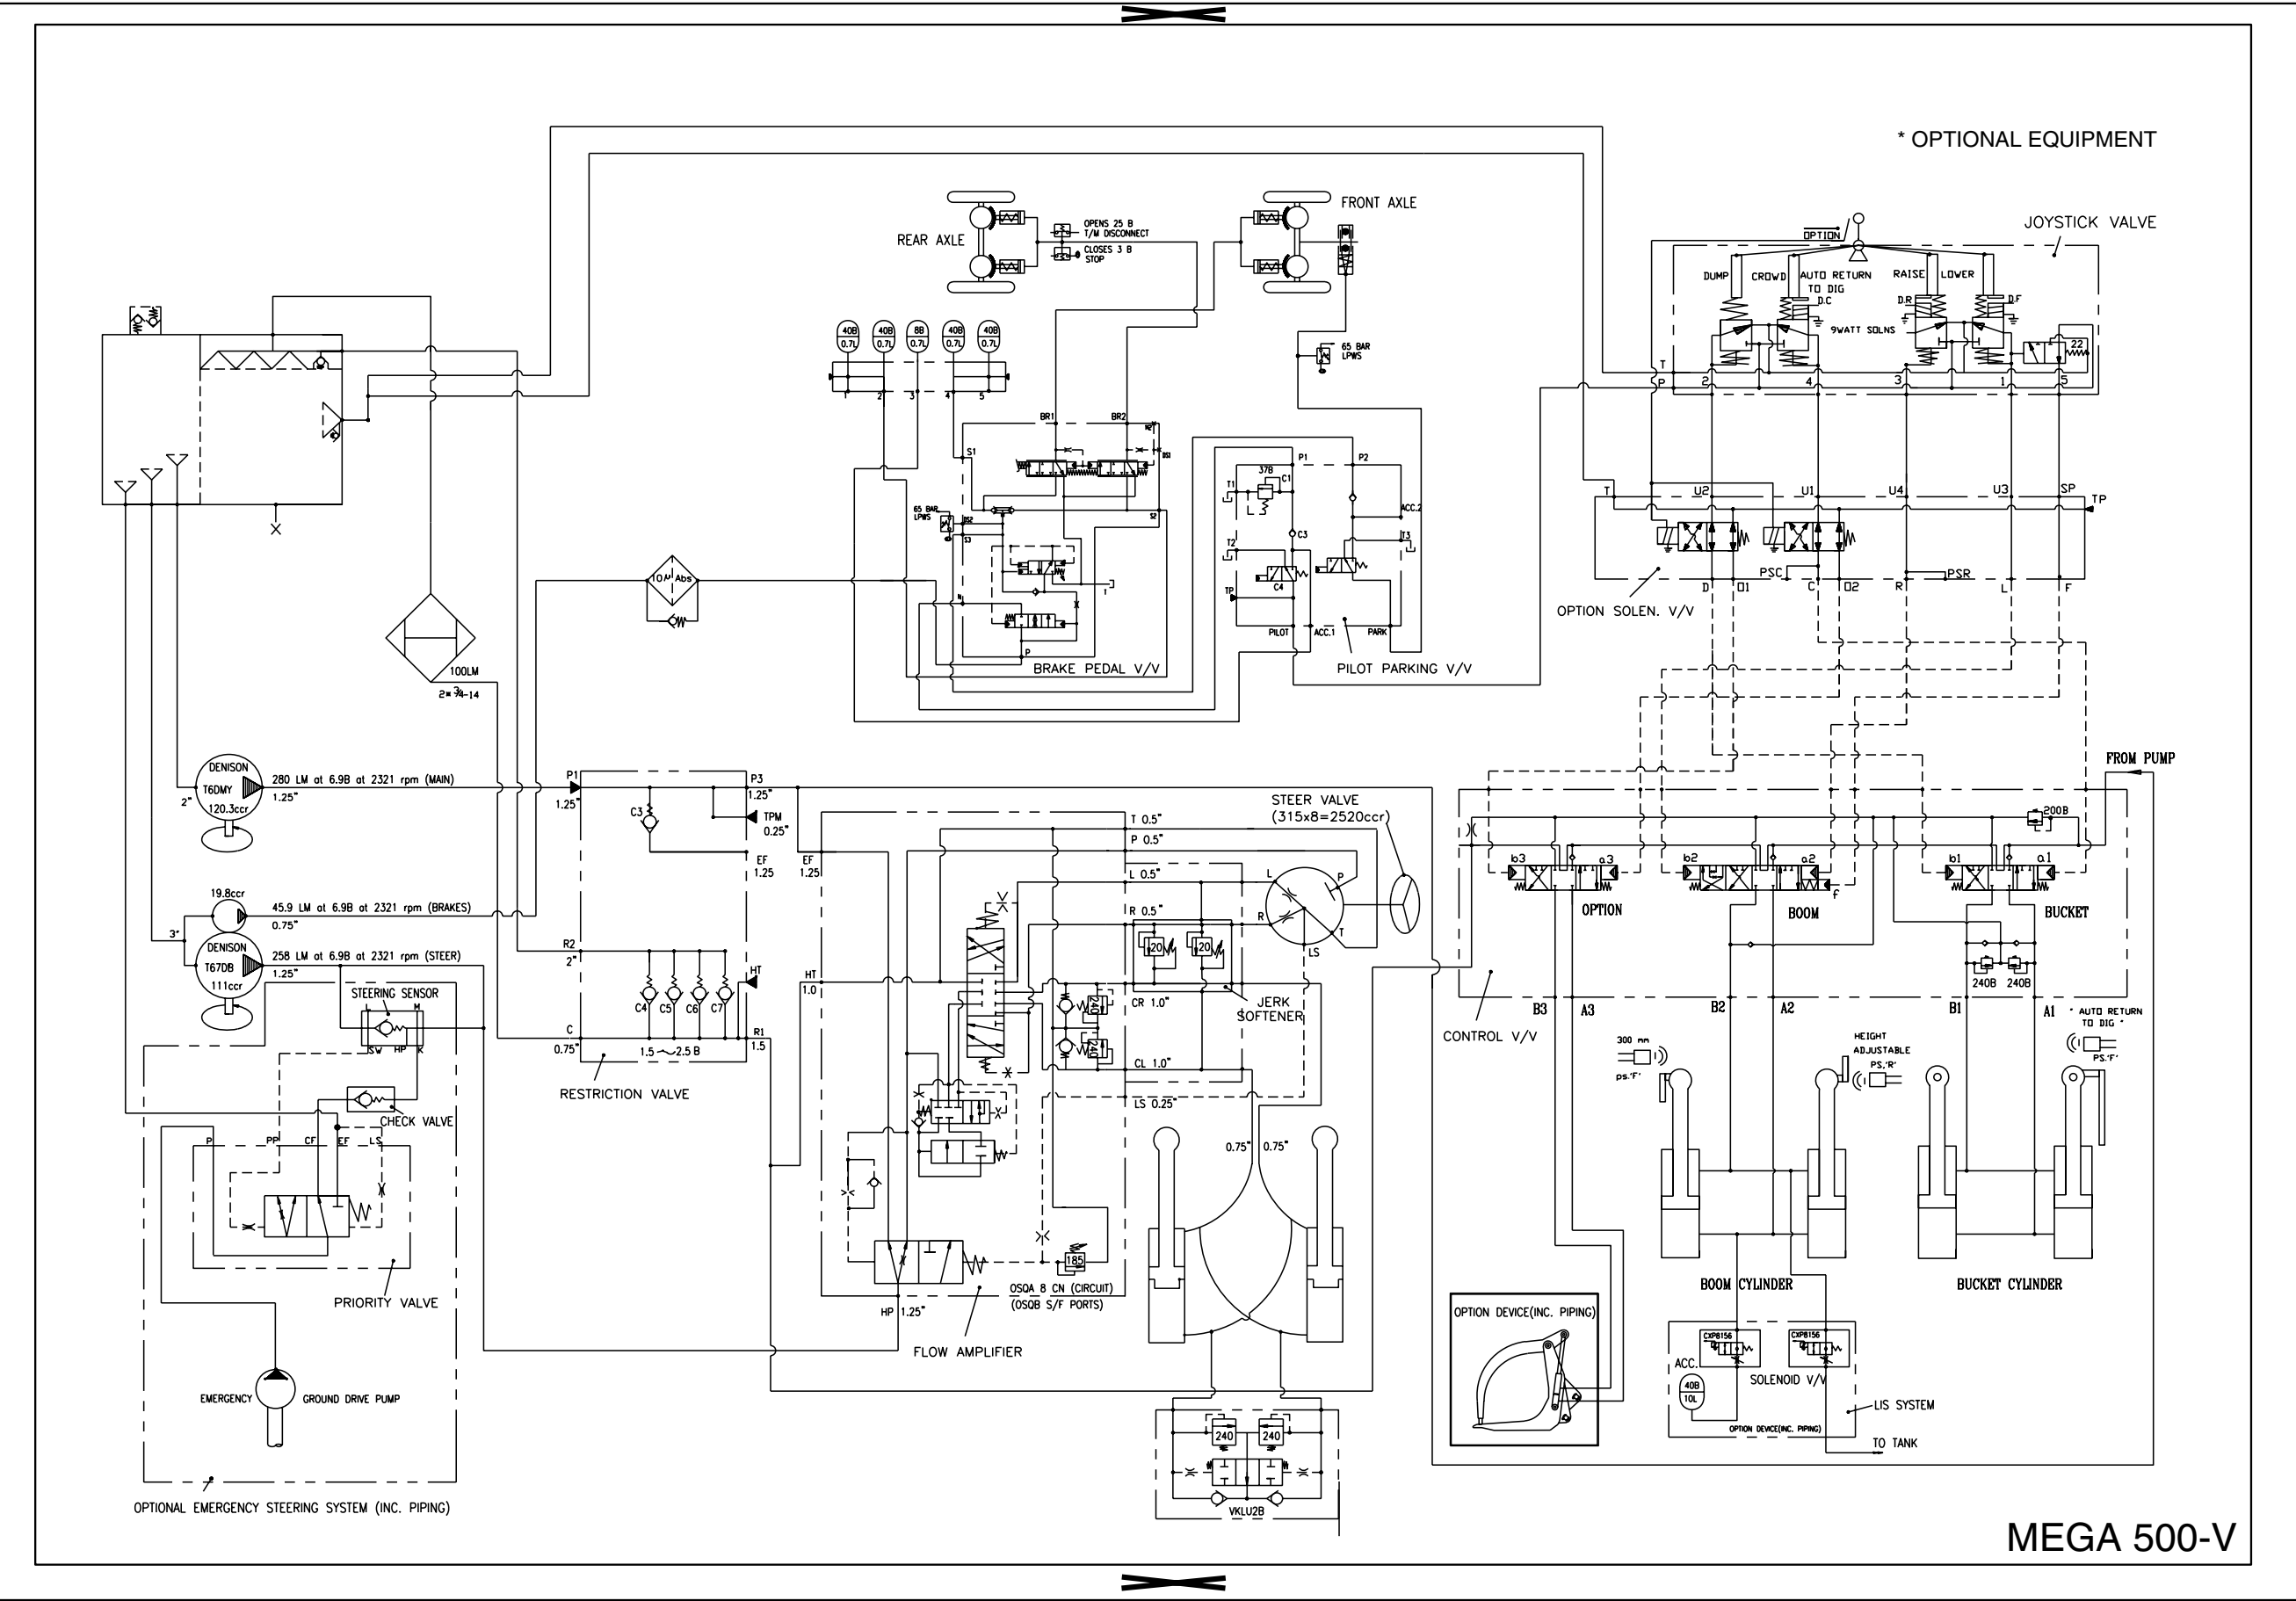

MEGA 500-V

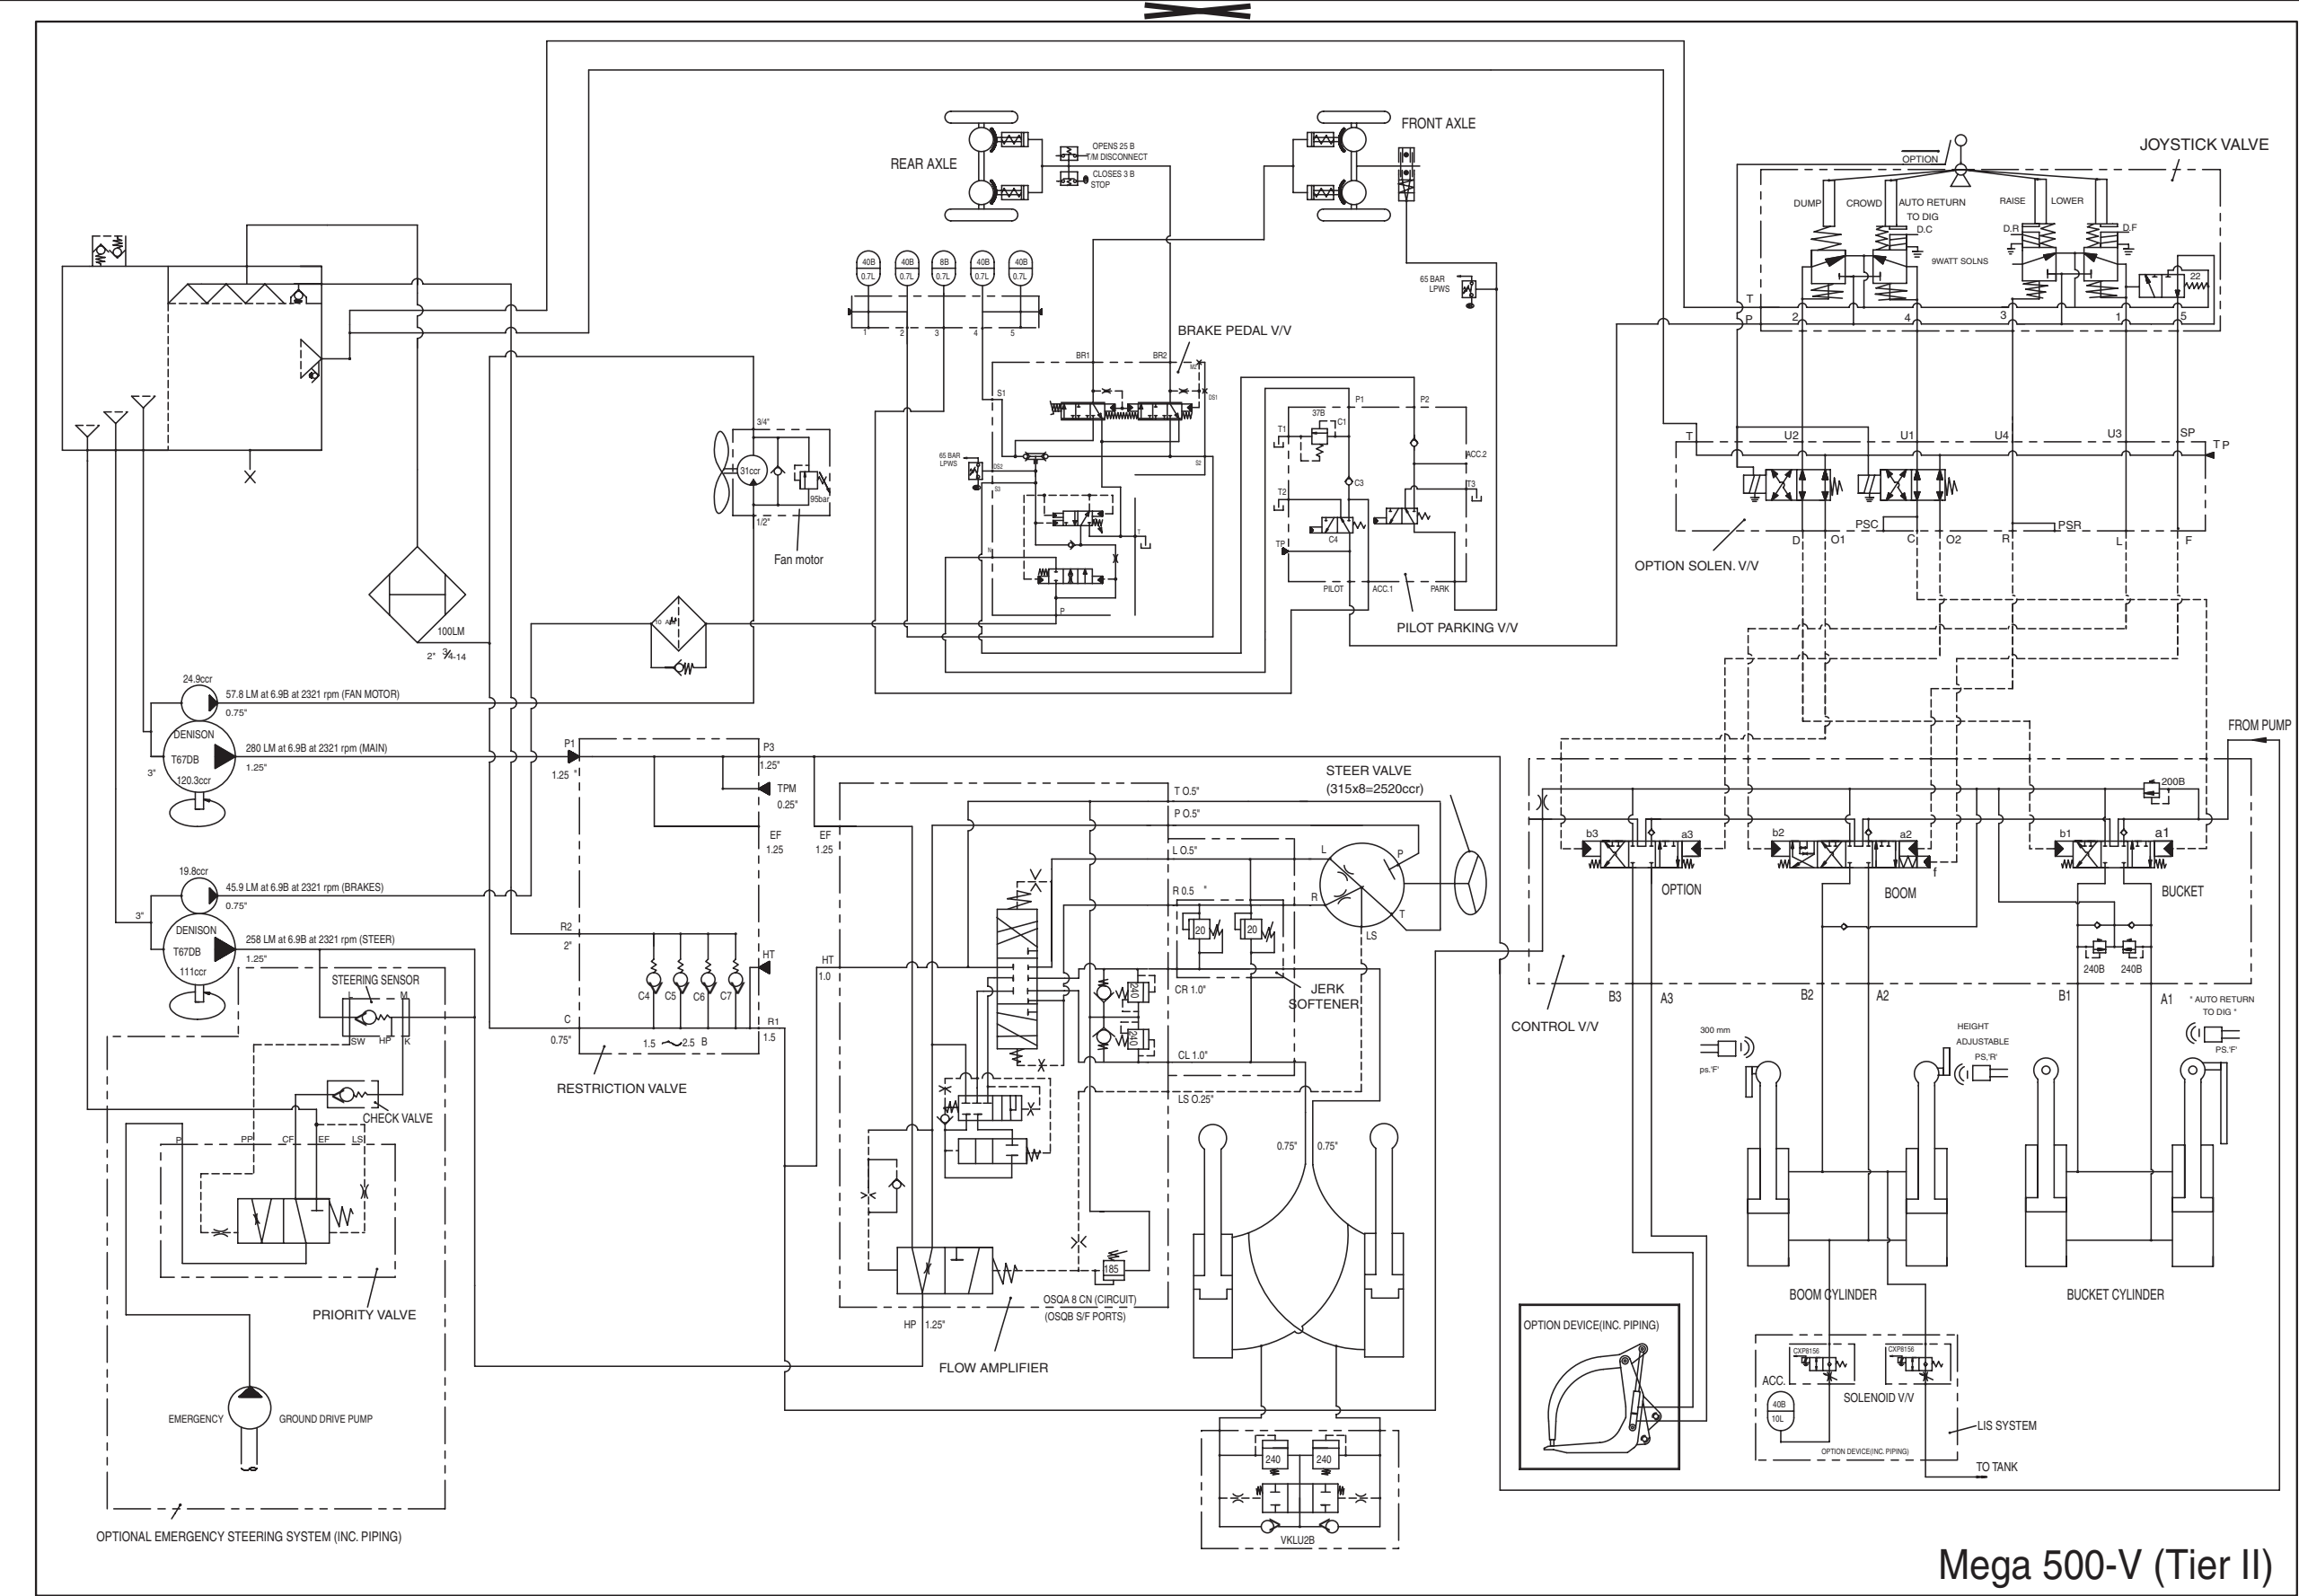


TABLE OF CONTENTS

Electrical Circuits

DL1603

DL200 (S/N 5001 and Up)4

DL200 TONY (S/N 5001 and Up)5

DL250 (S/N 5001 and Up)6

DL300 (S/N 5001 and Up)7

DL400 (S/N 5001 and Up)8

DL4509

DL500 (S/N 5001 and Up)10

Hydraulic Circuits

DL16012

DL200 (S/N 5001 and Up)13

DL200 TONY (S/N 5001 and Up)14

DL250 (S/N 5001 and Up)15

DL250 (S/N 5001 and Up)16


DL300 (S/N 5001 and Up)17


DL400 (S/N 5001 and Up)18

DL45019


DL500 (S/N 5001 and Up)20




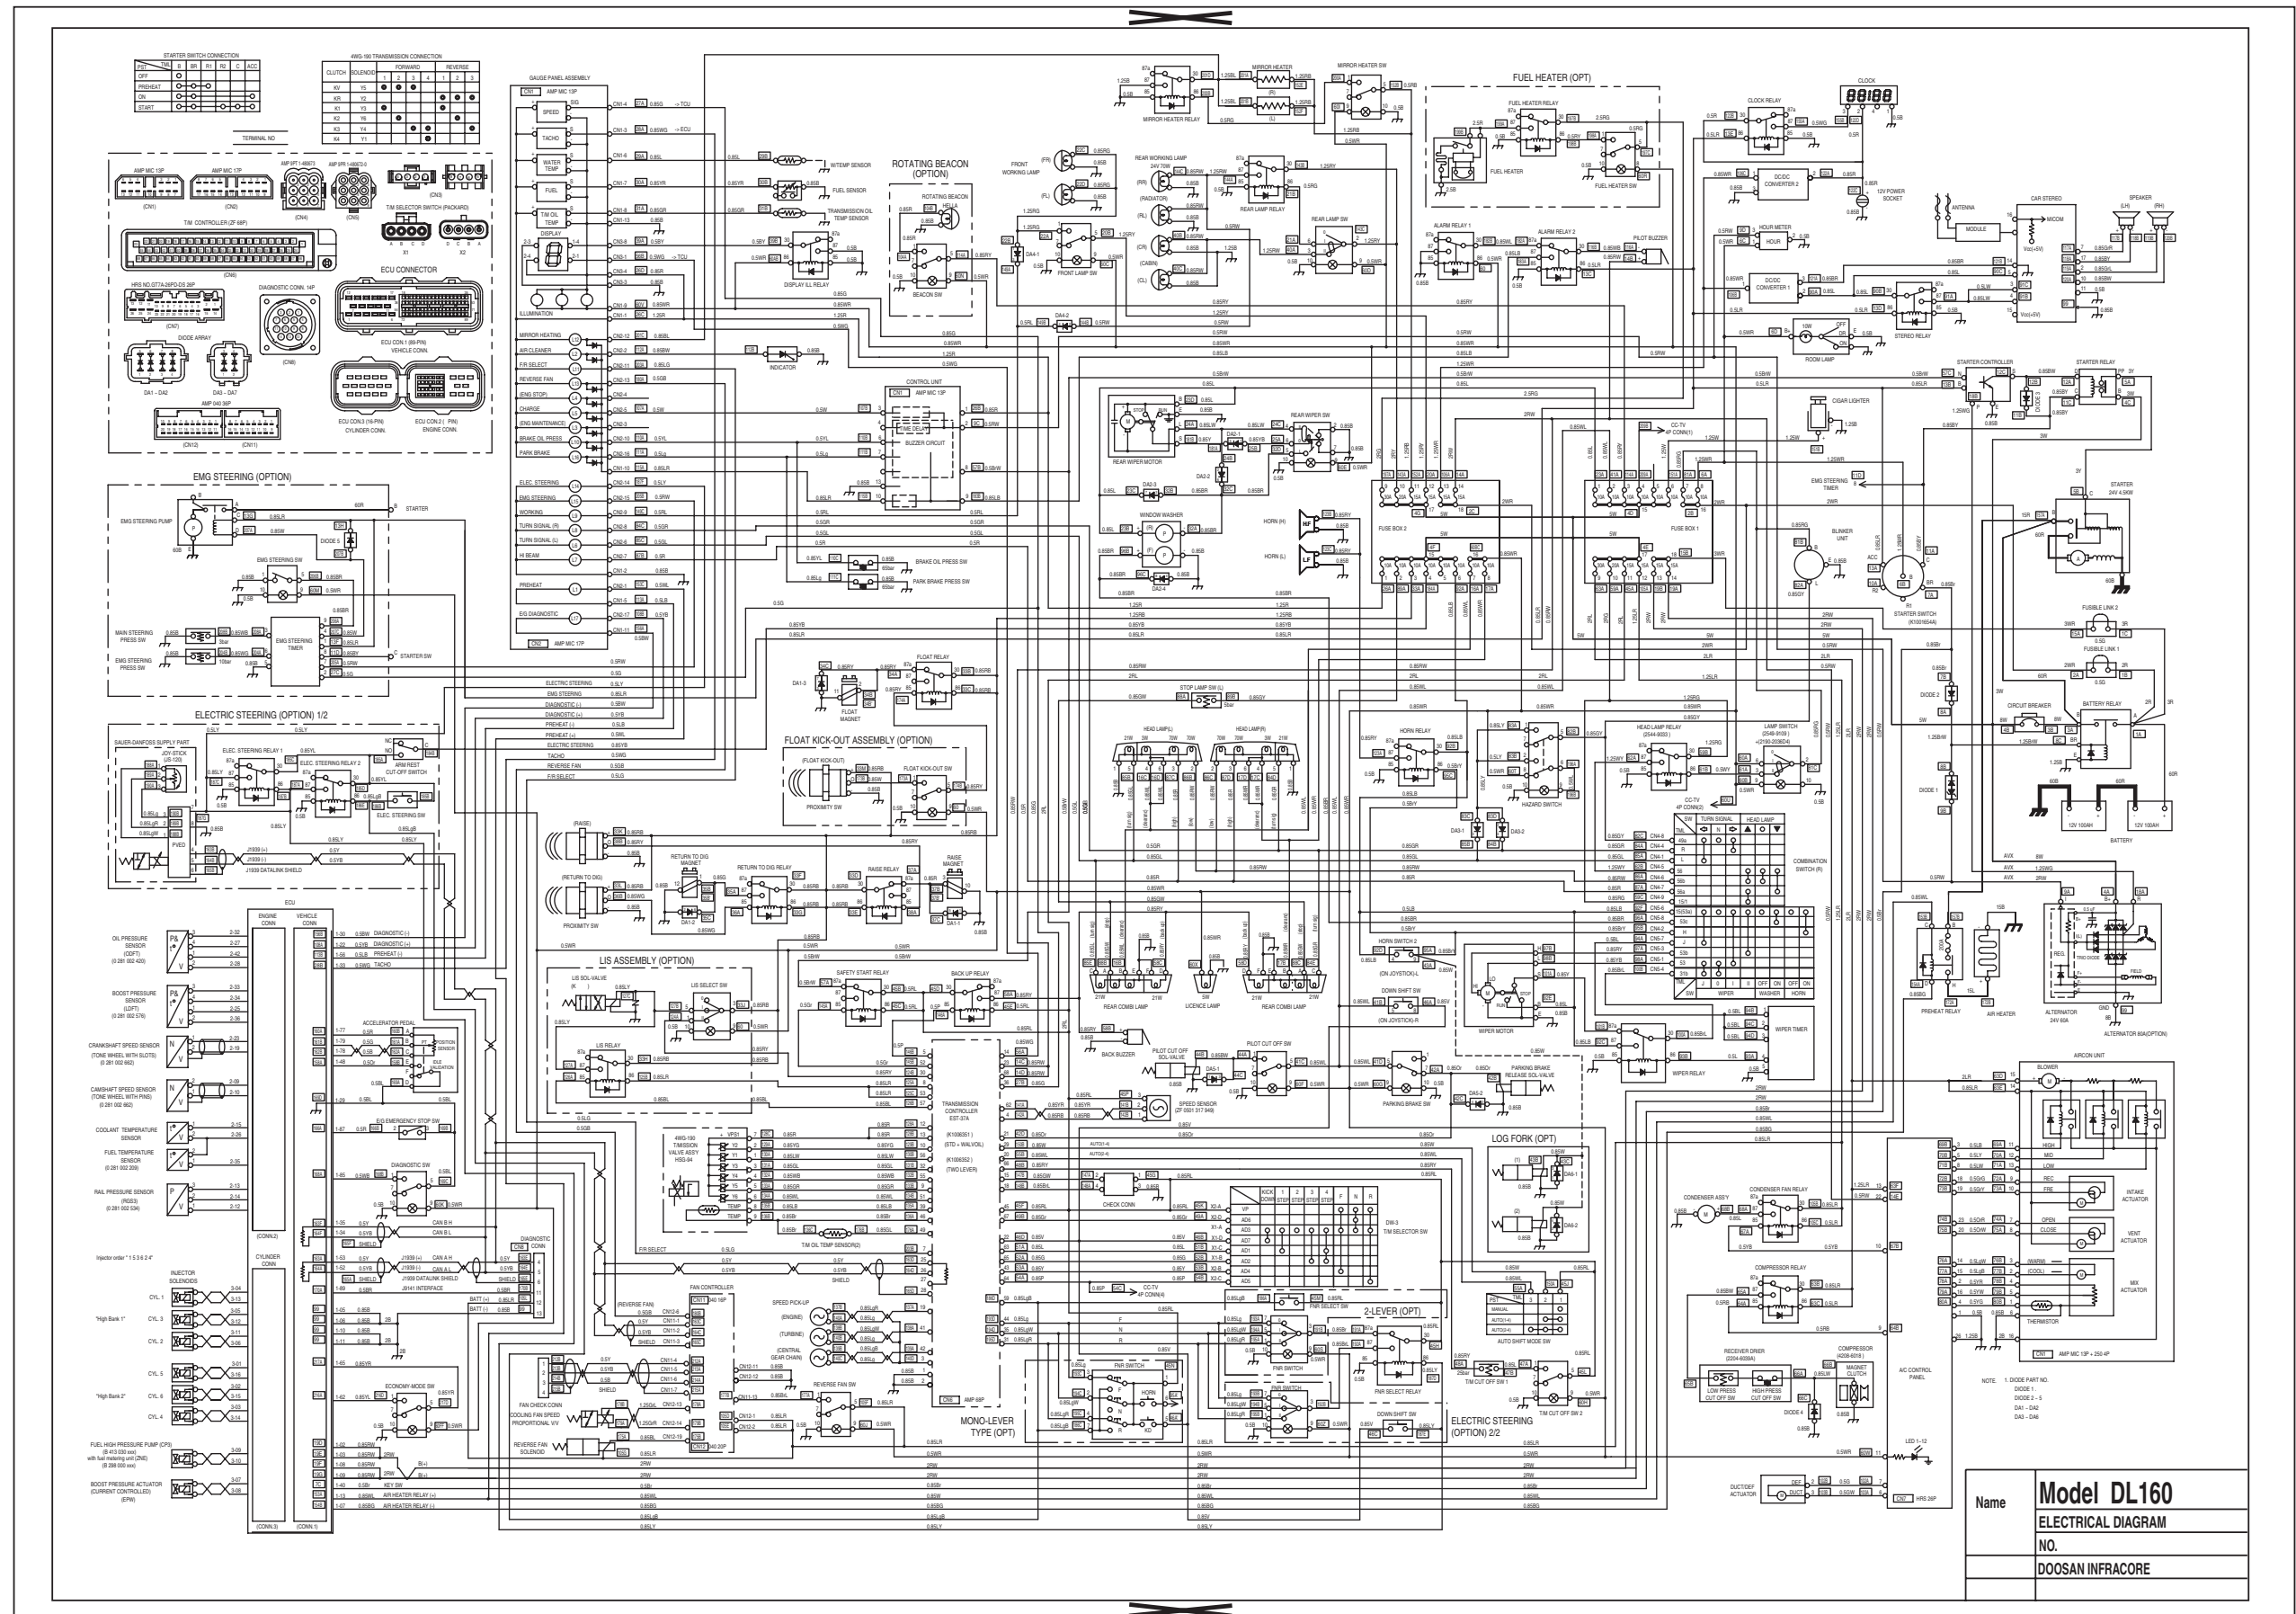

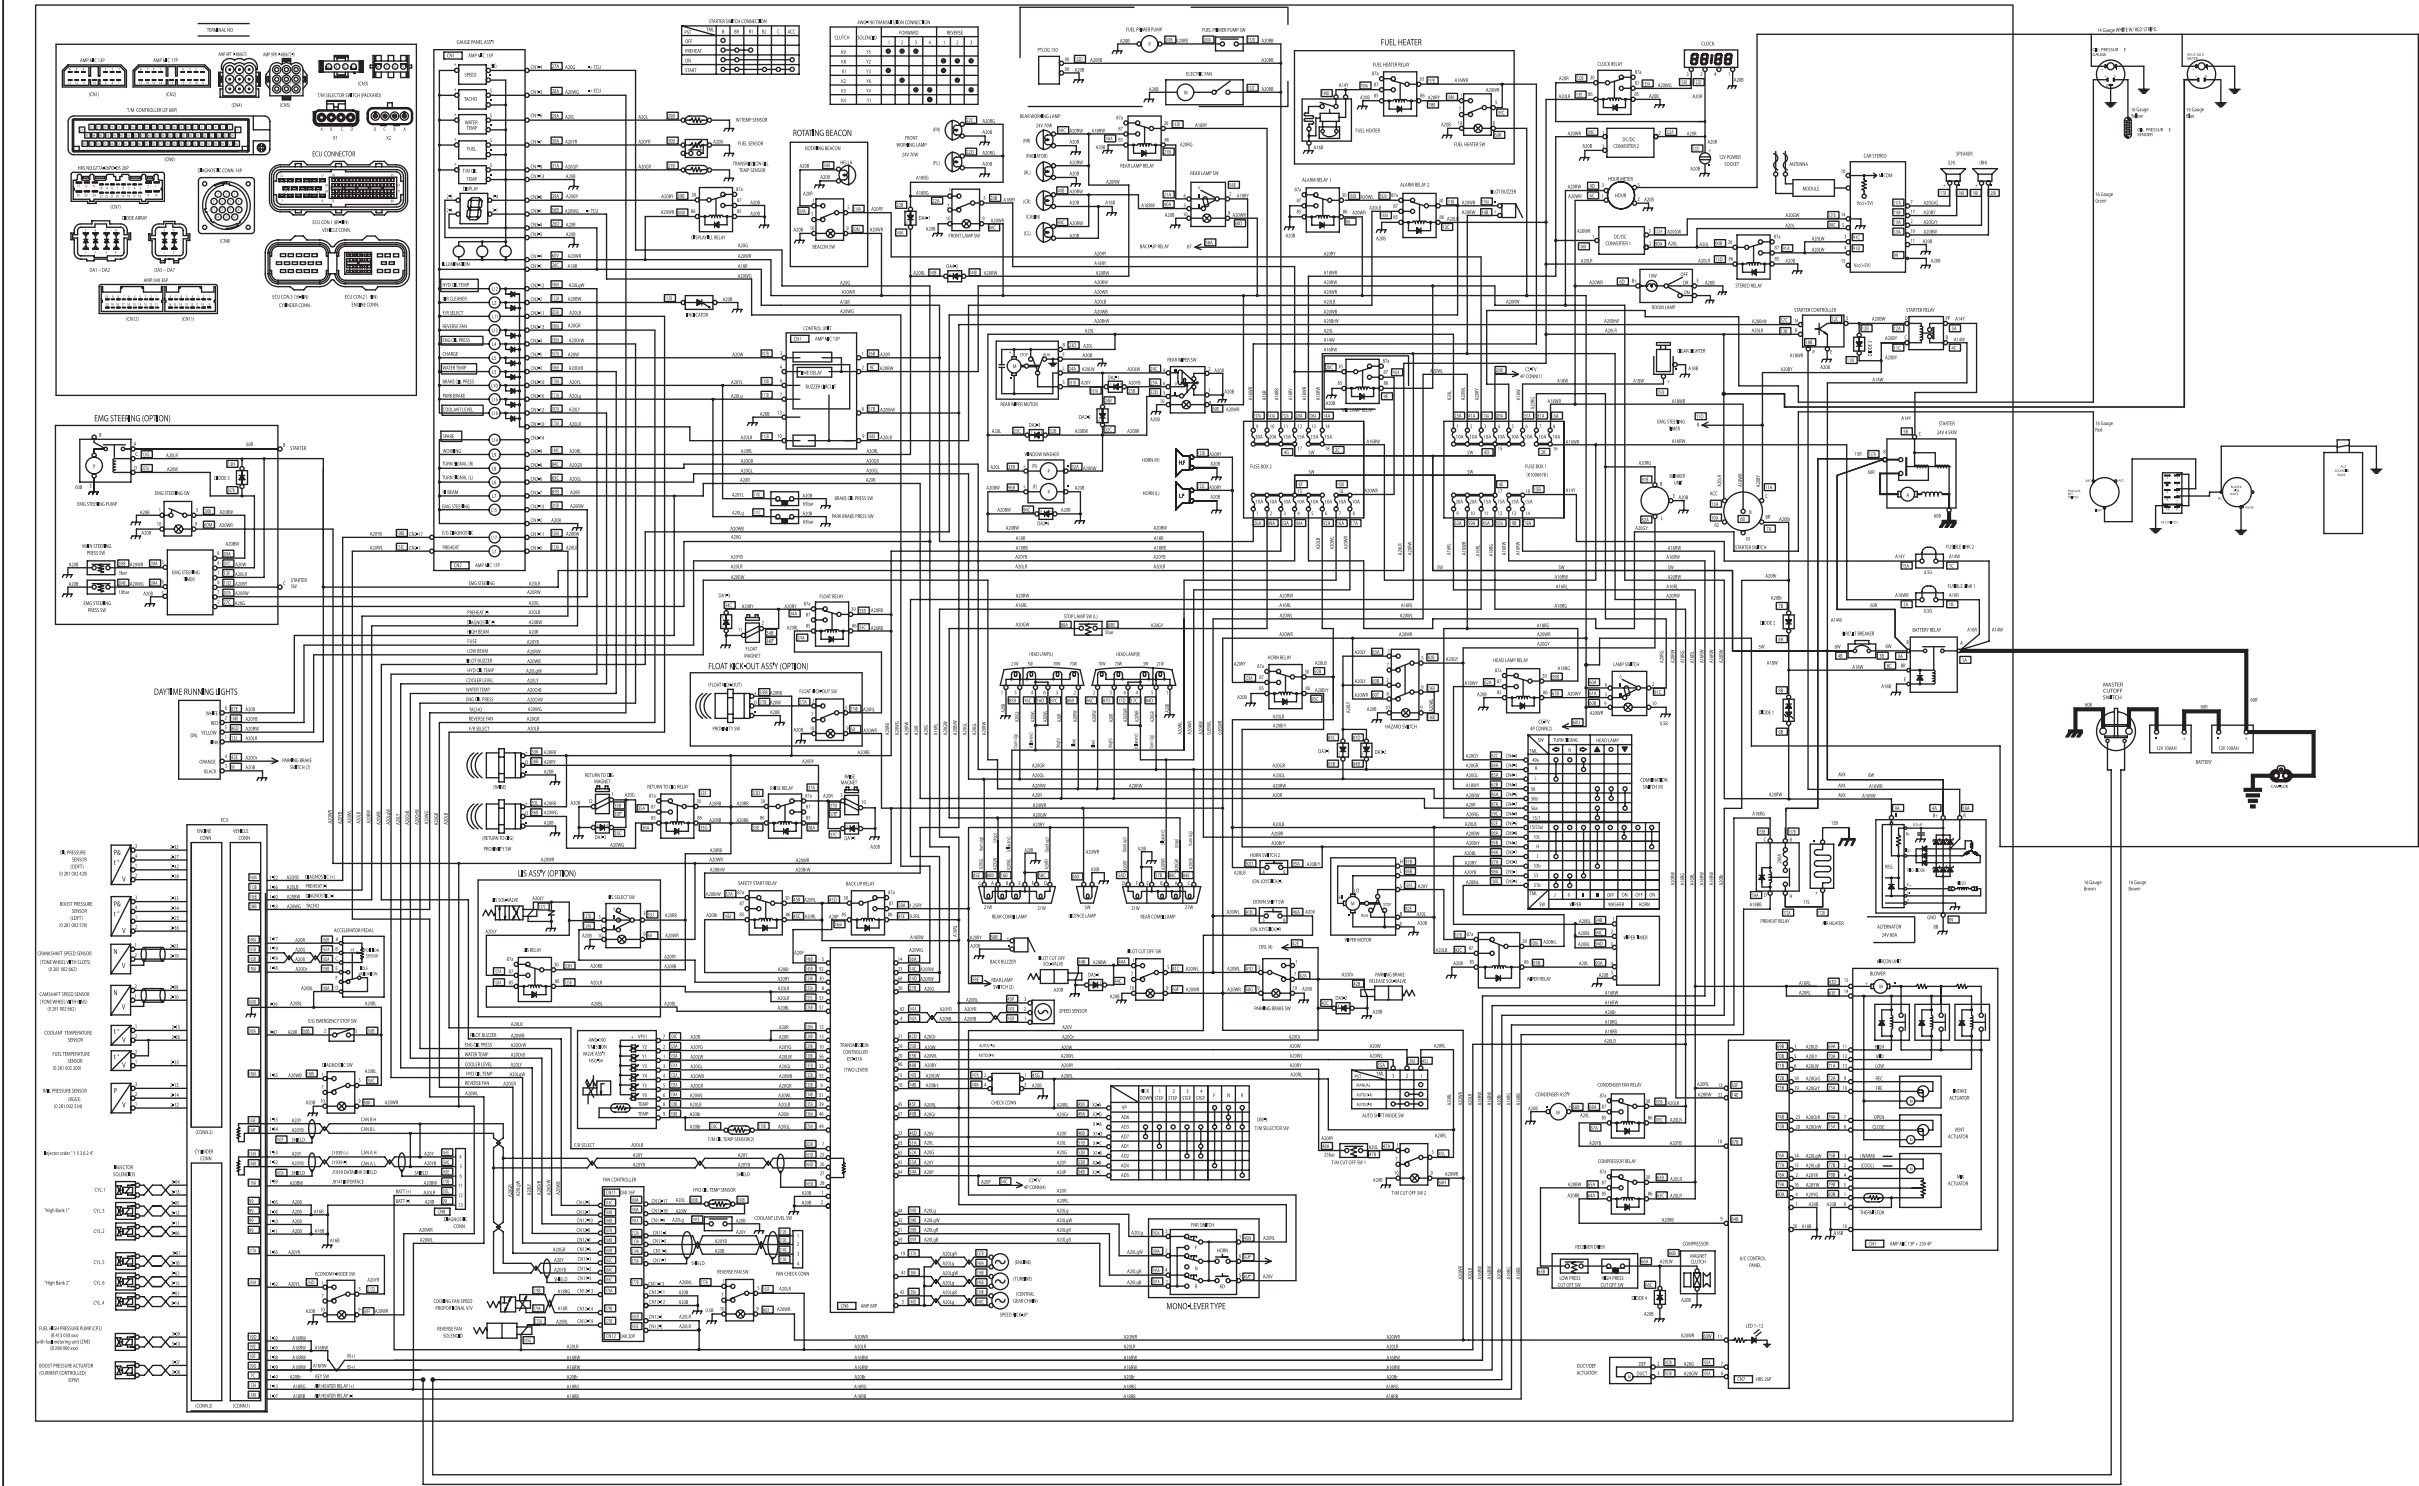


Name	Model DL200 TONY
	ELECTRICAL DIAGRAM
	NO.
	DOOSAN INFRACORE

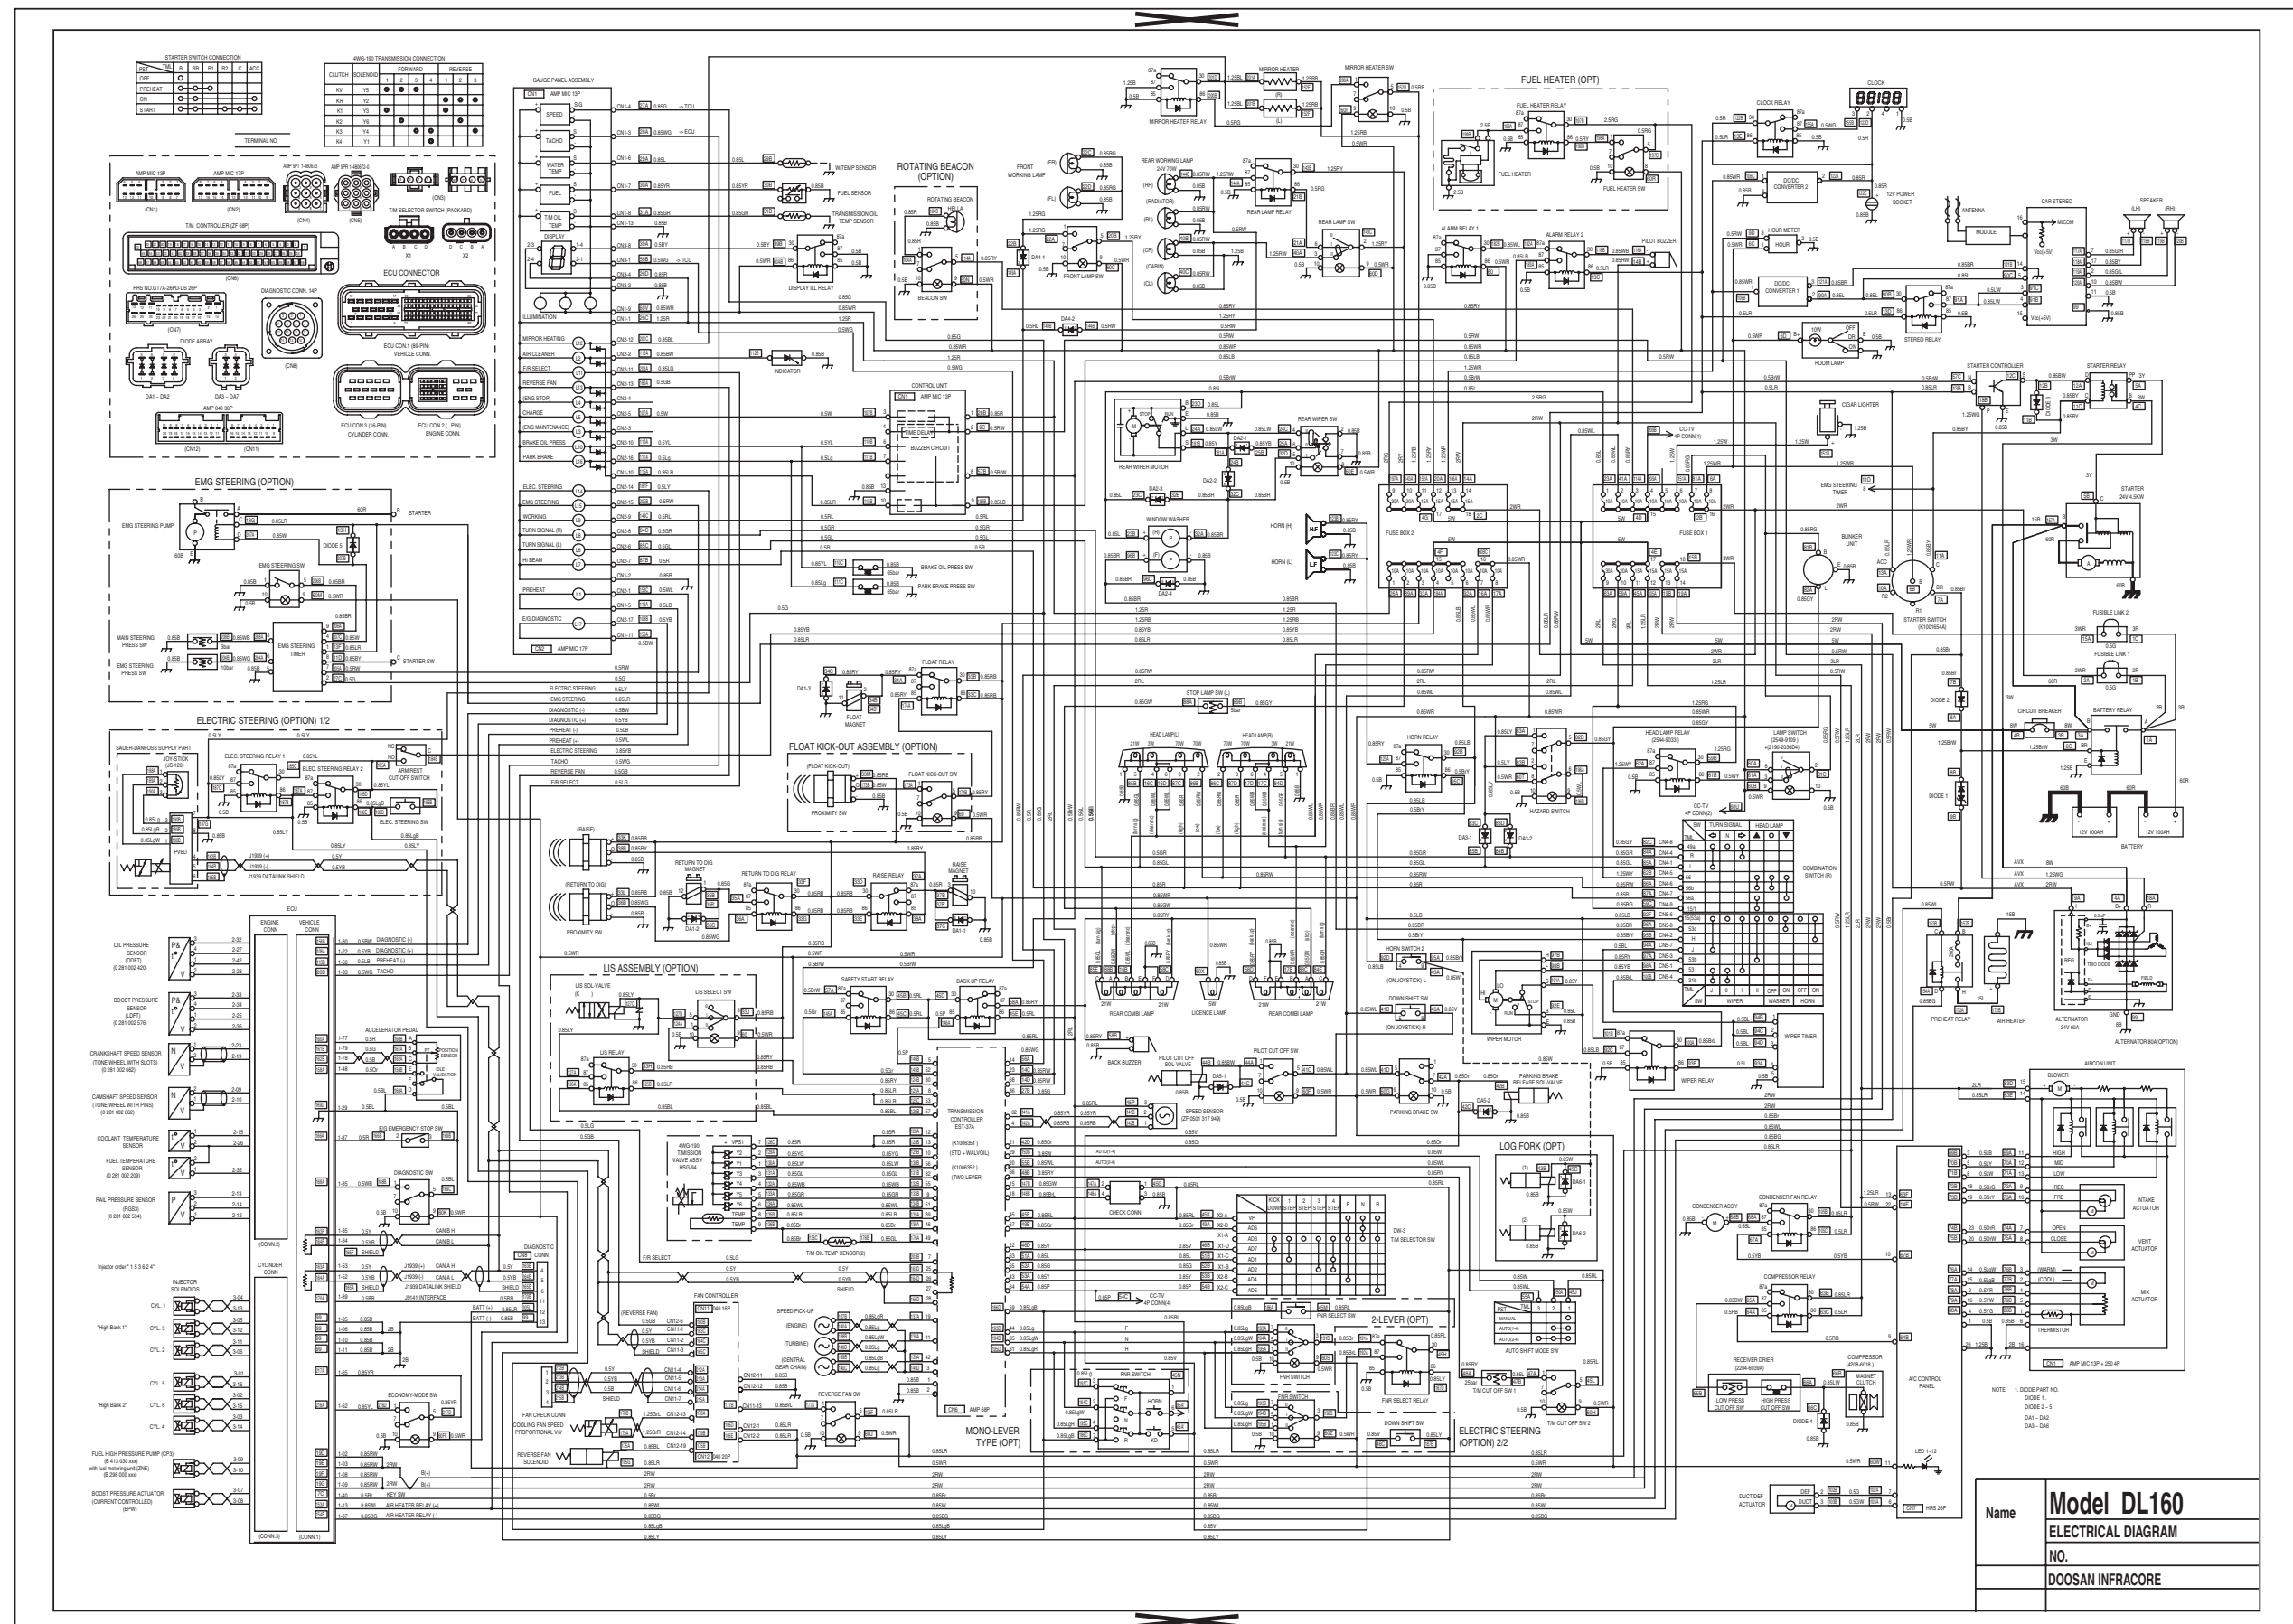

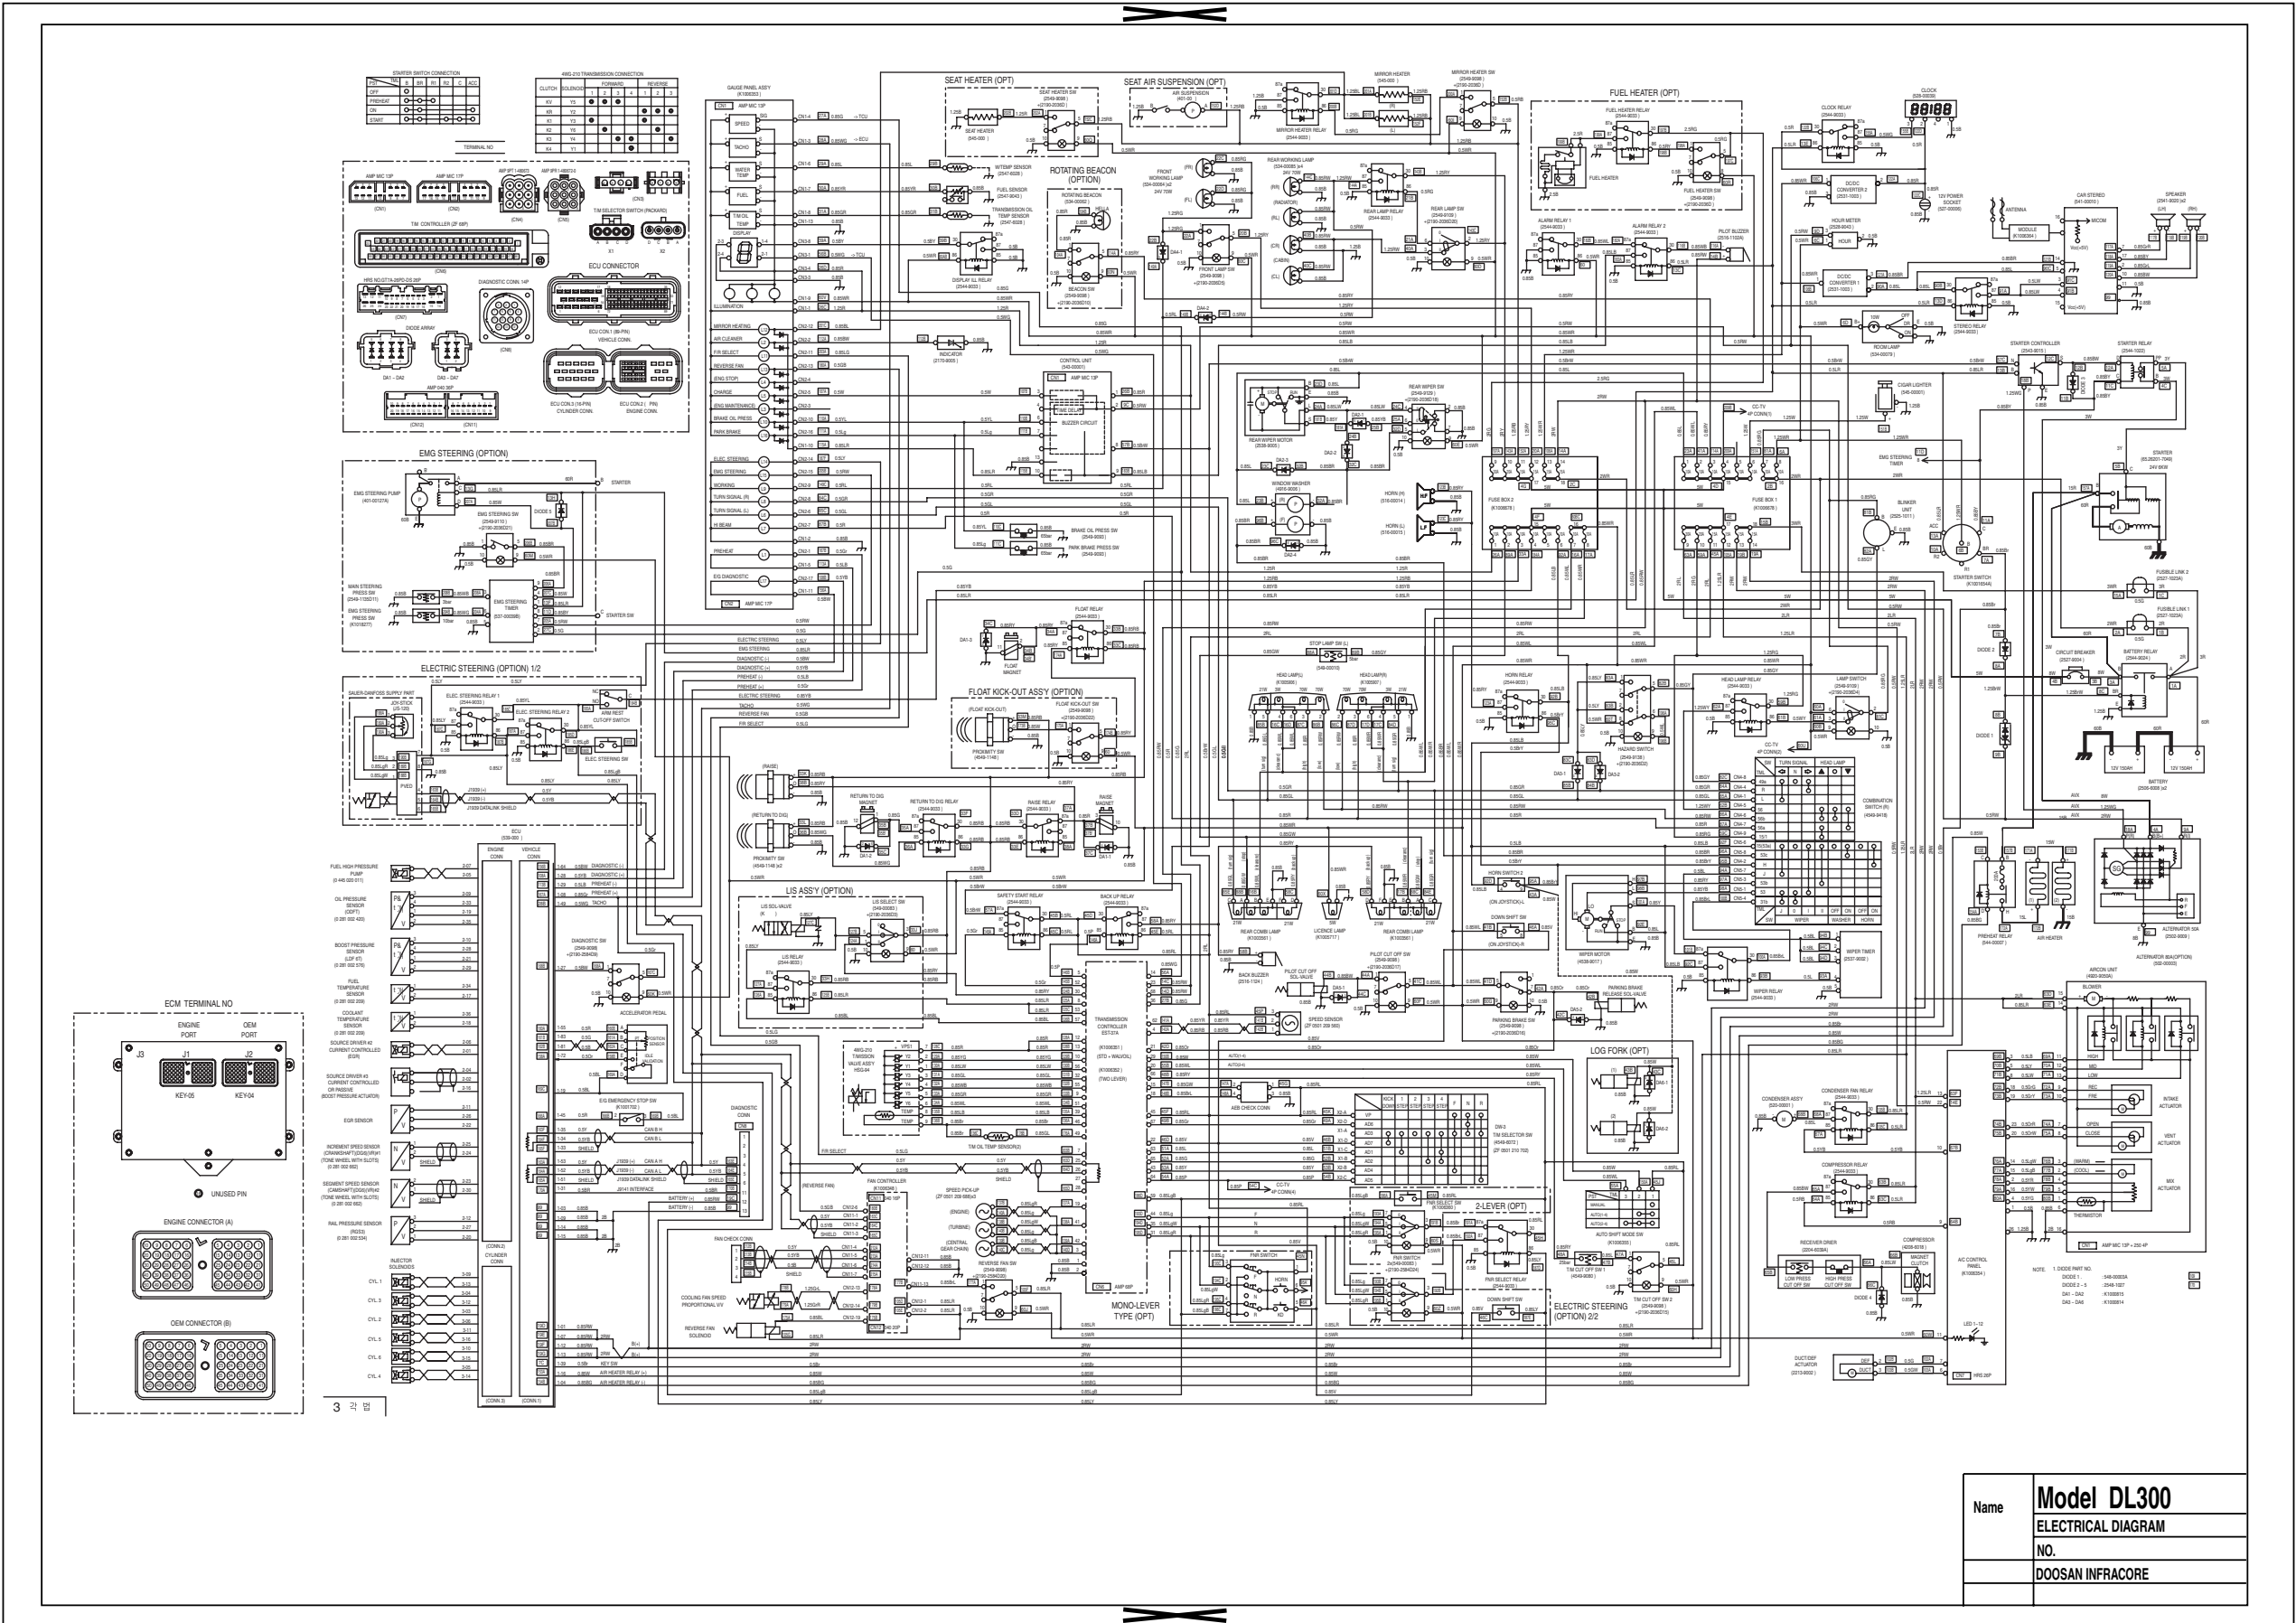


Name	Model DL300
	ELECTRICAL DIAGRAM
	NO.
	DOOSAN INFRACORE

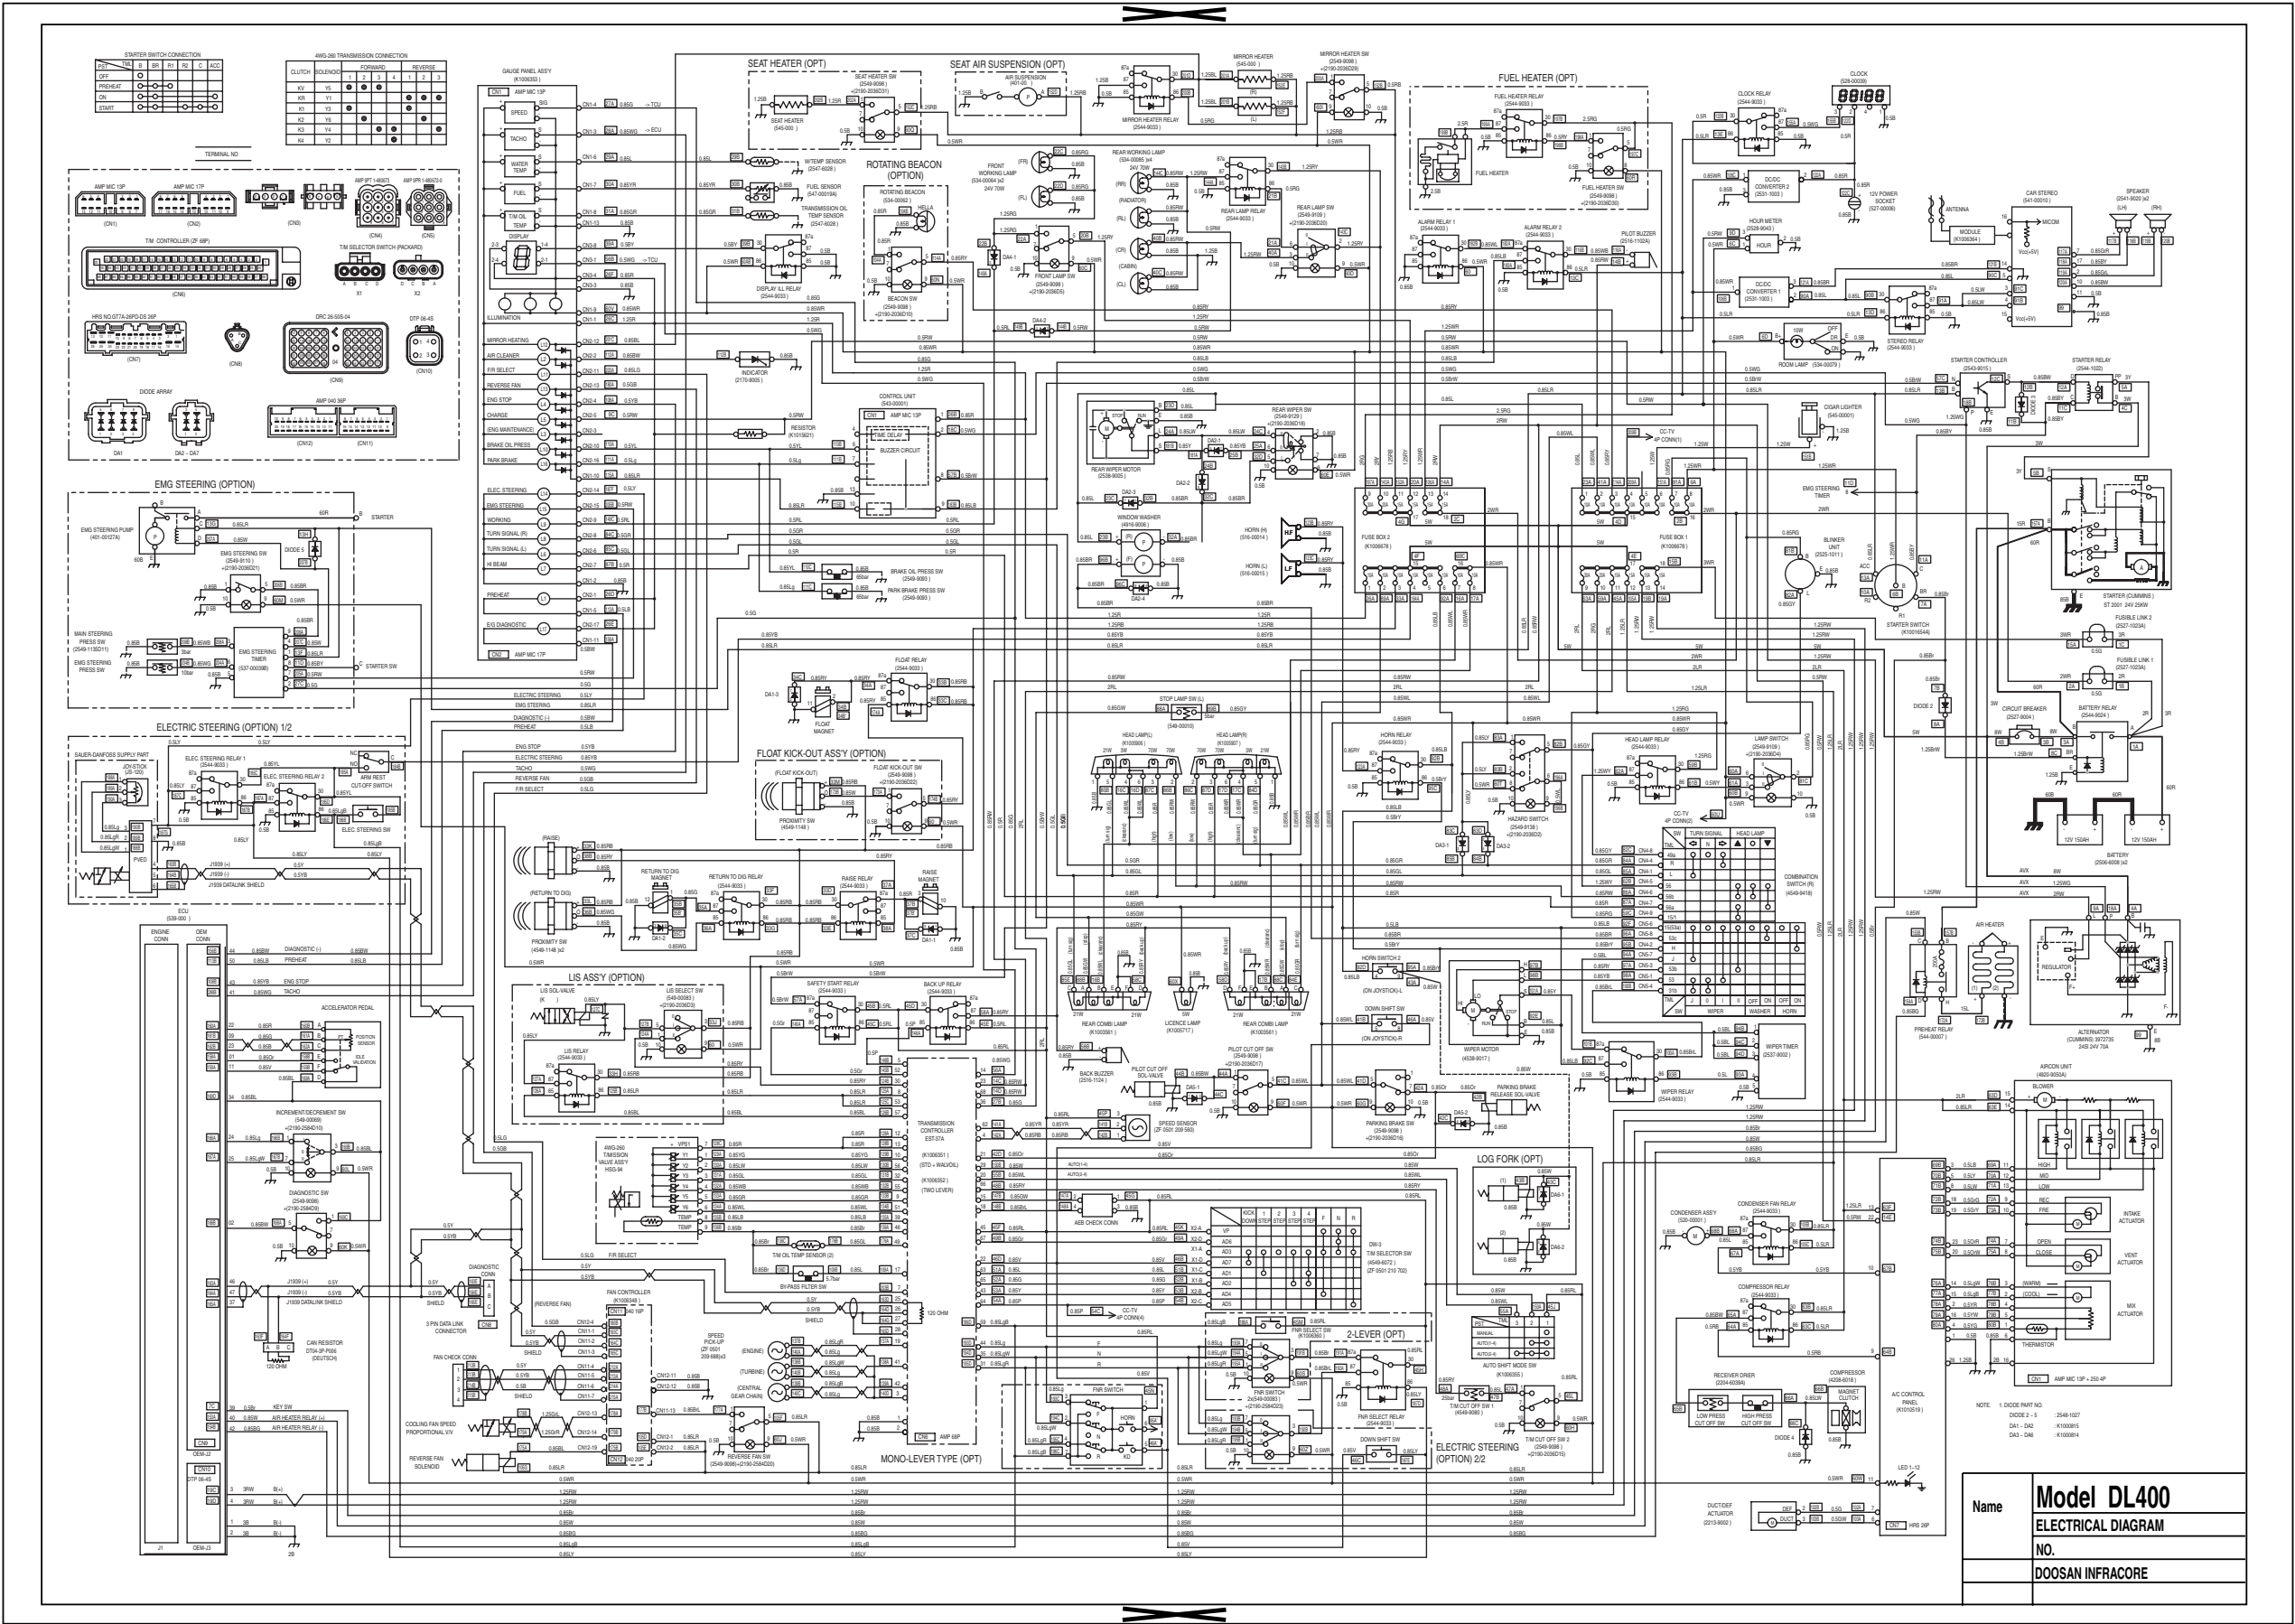




DL500 (S/N 5001 AND UP)


<https://truckmanualshub.com/>

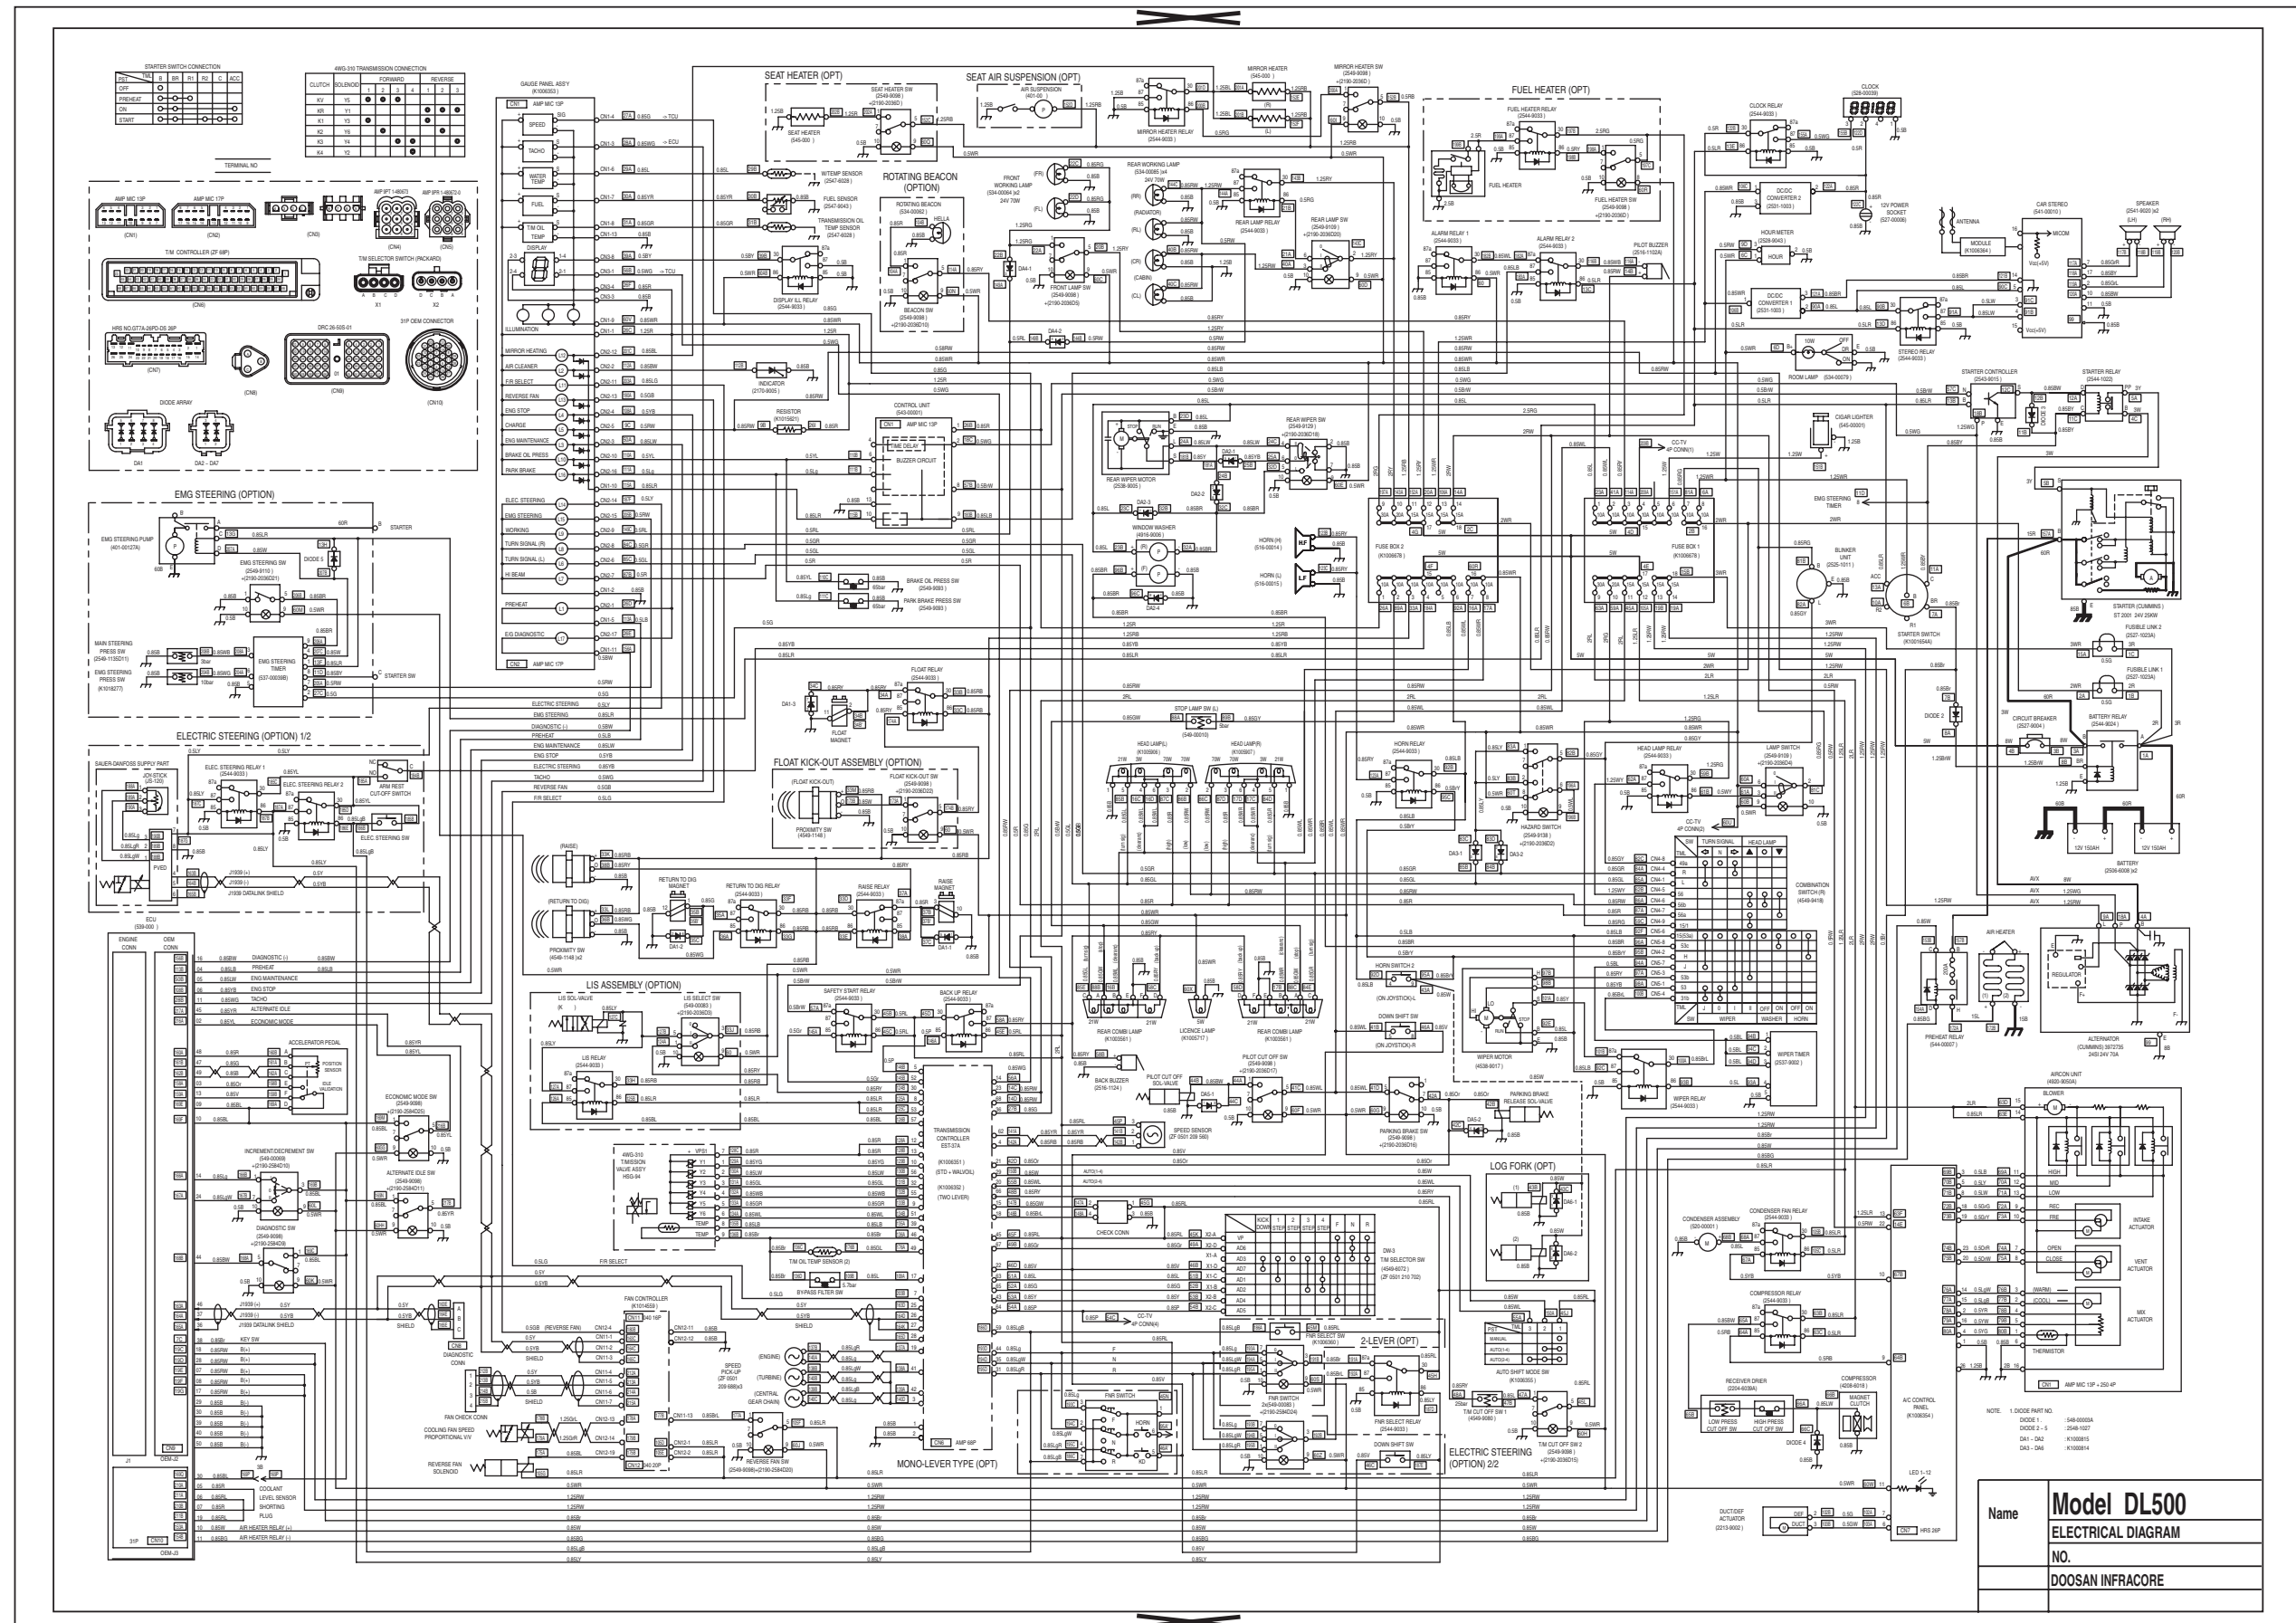


Name	Model DL500
	ELECTRICAL DIAGRAM
	NO.
	DOOSAN INFRACORE


FG005784

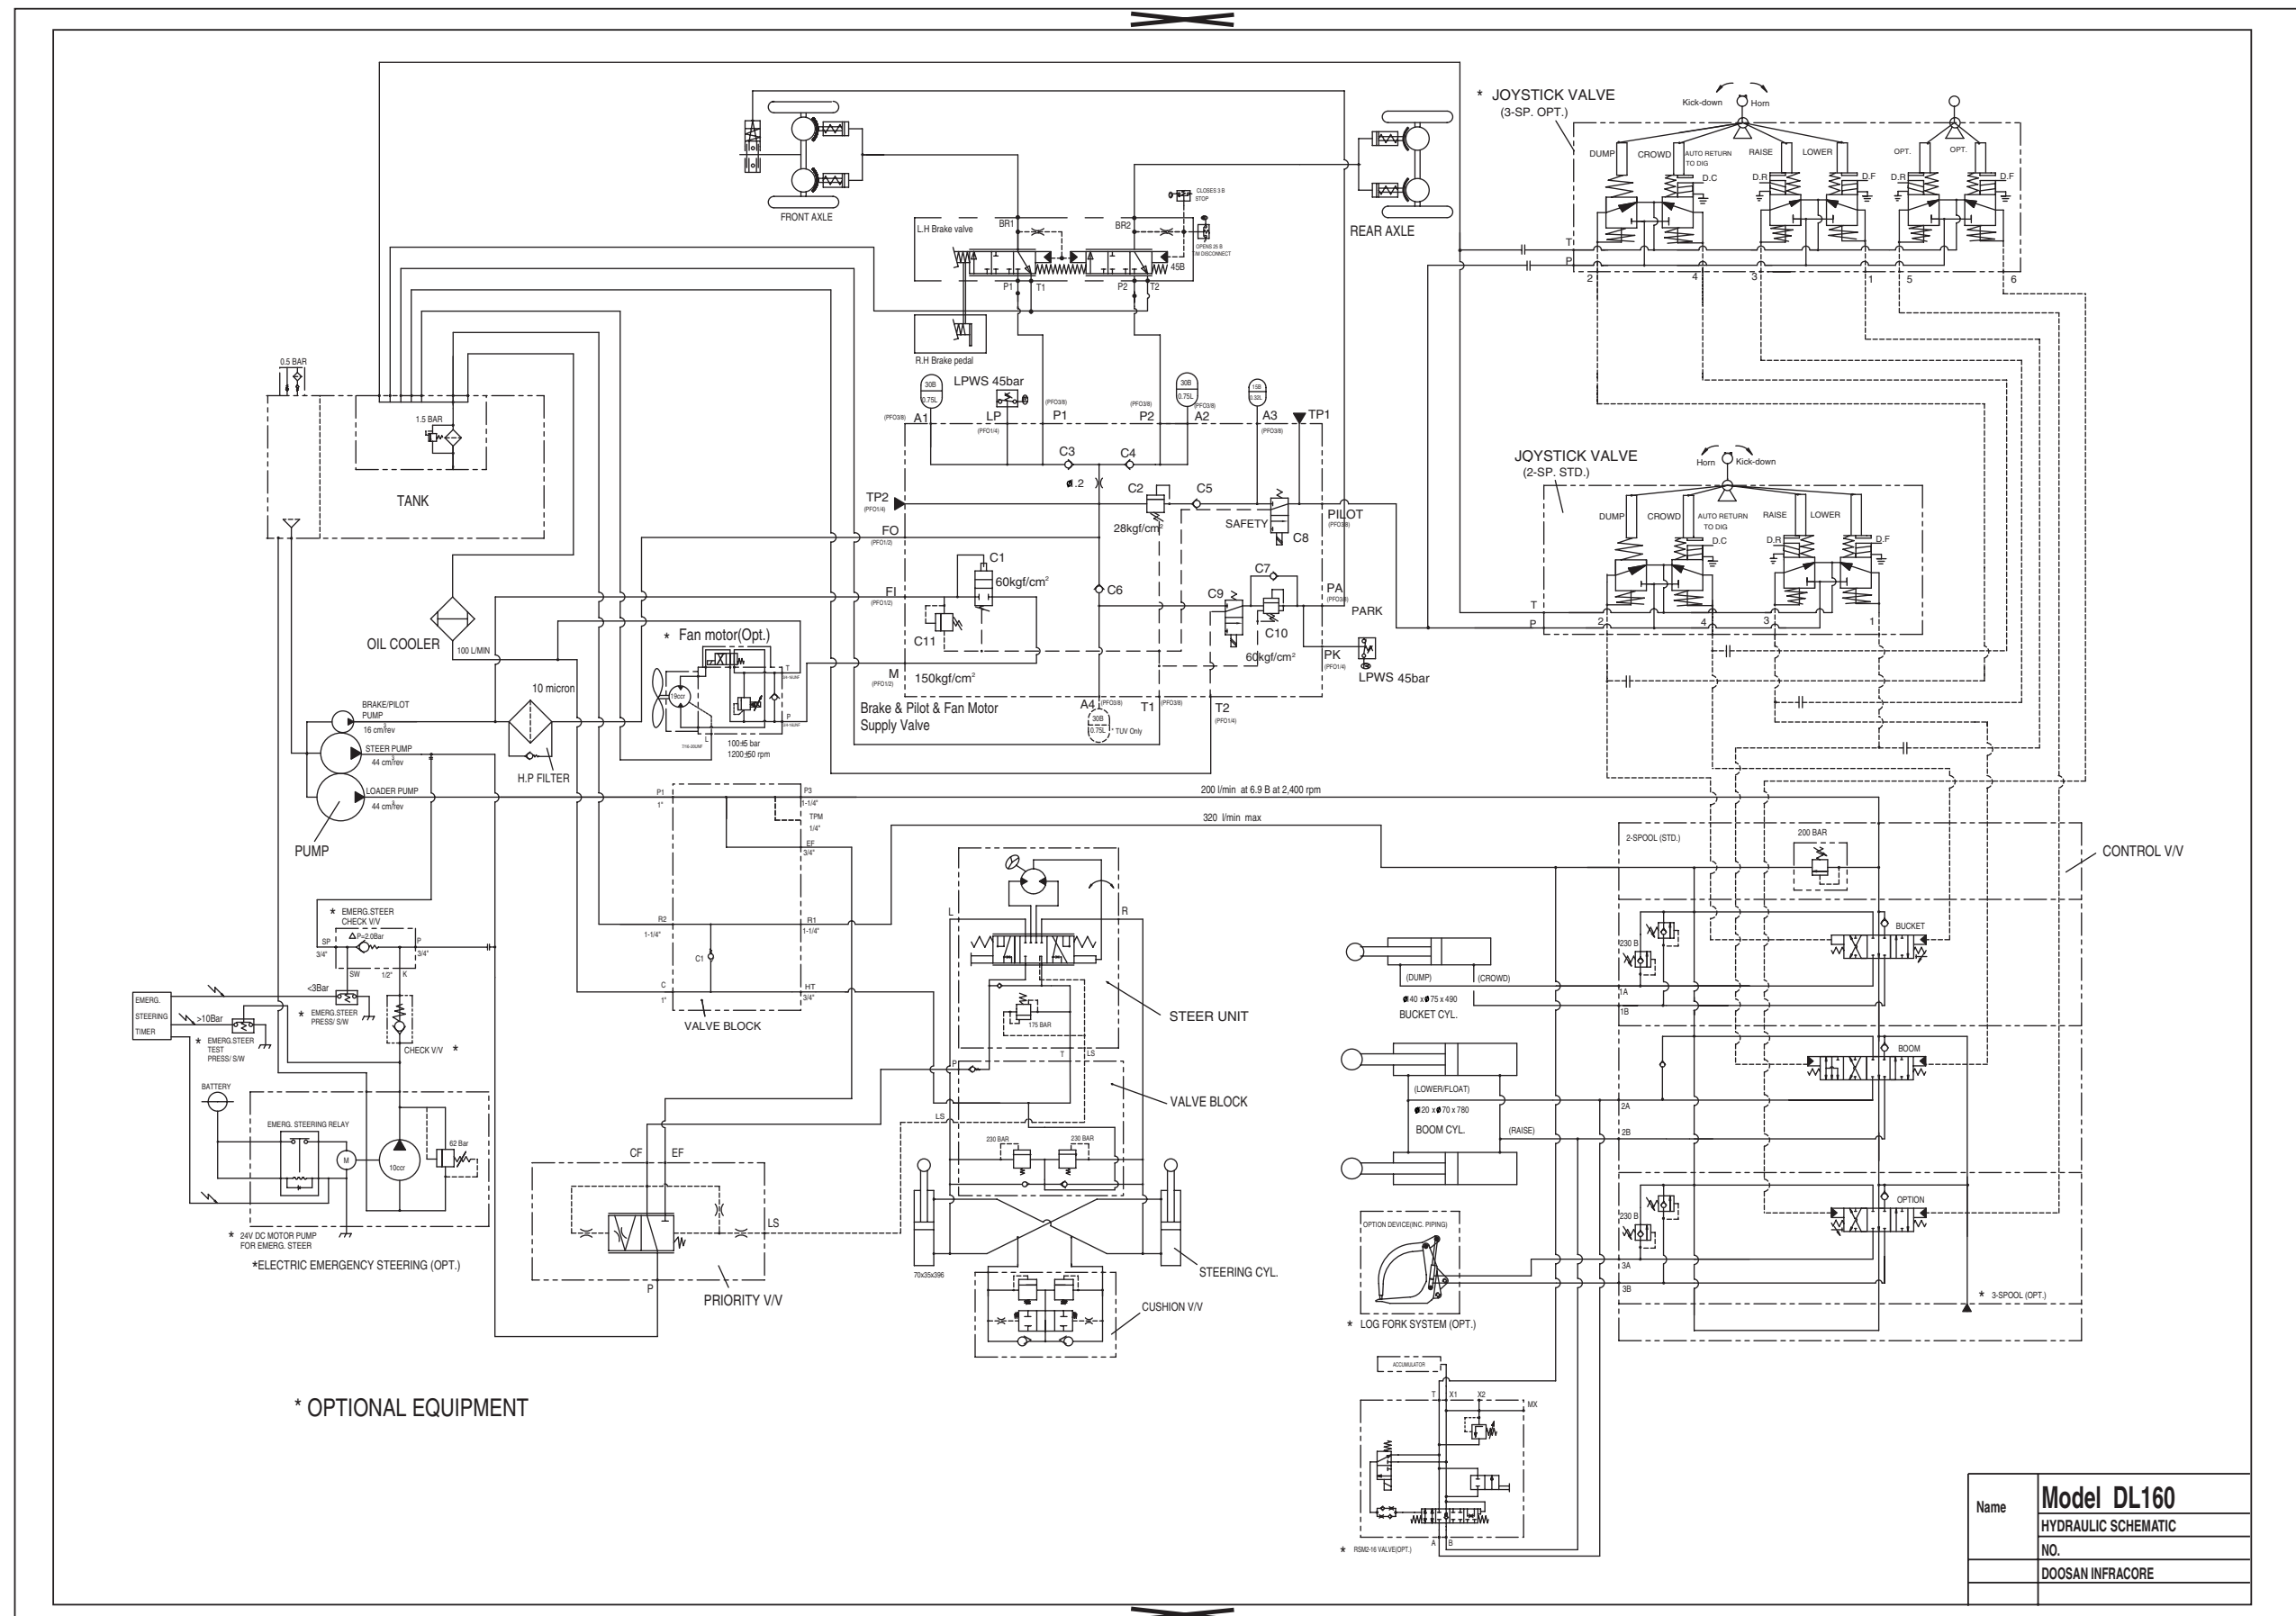


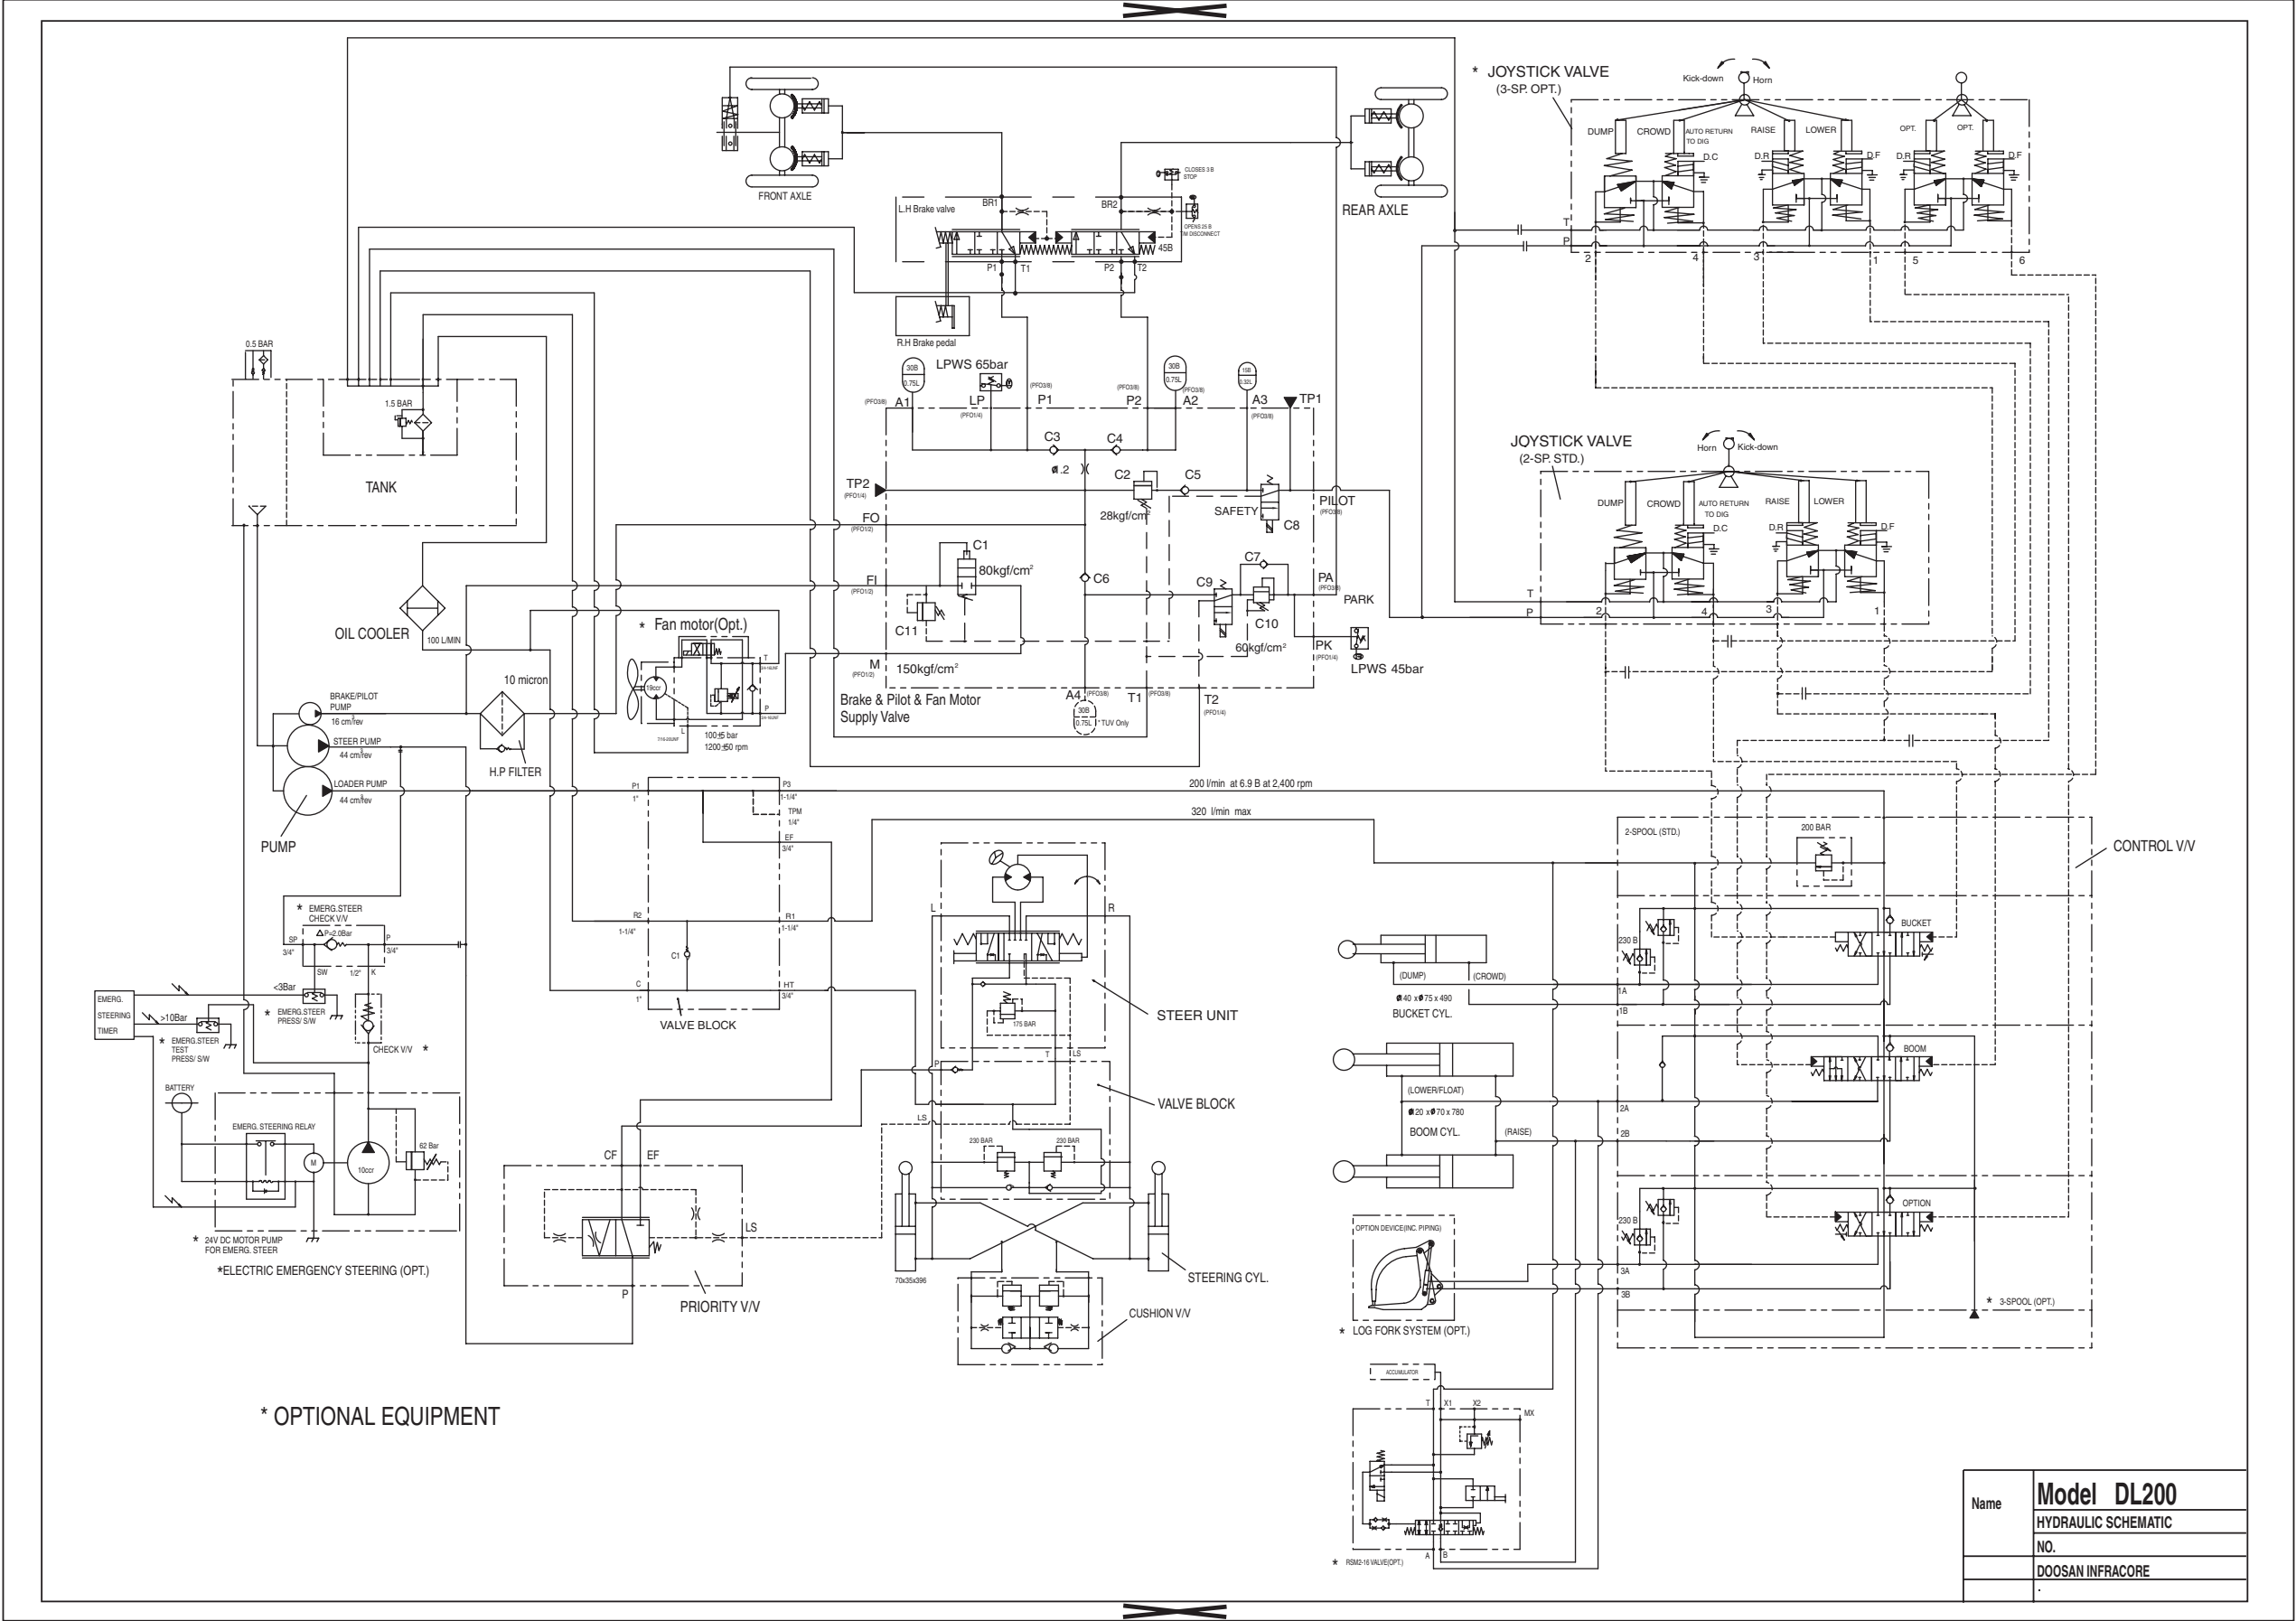


FG008716

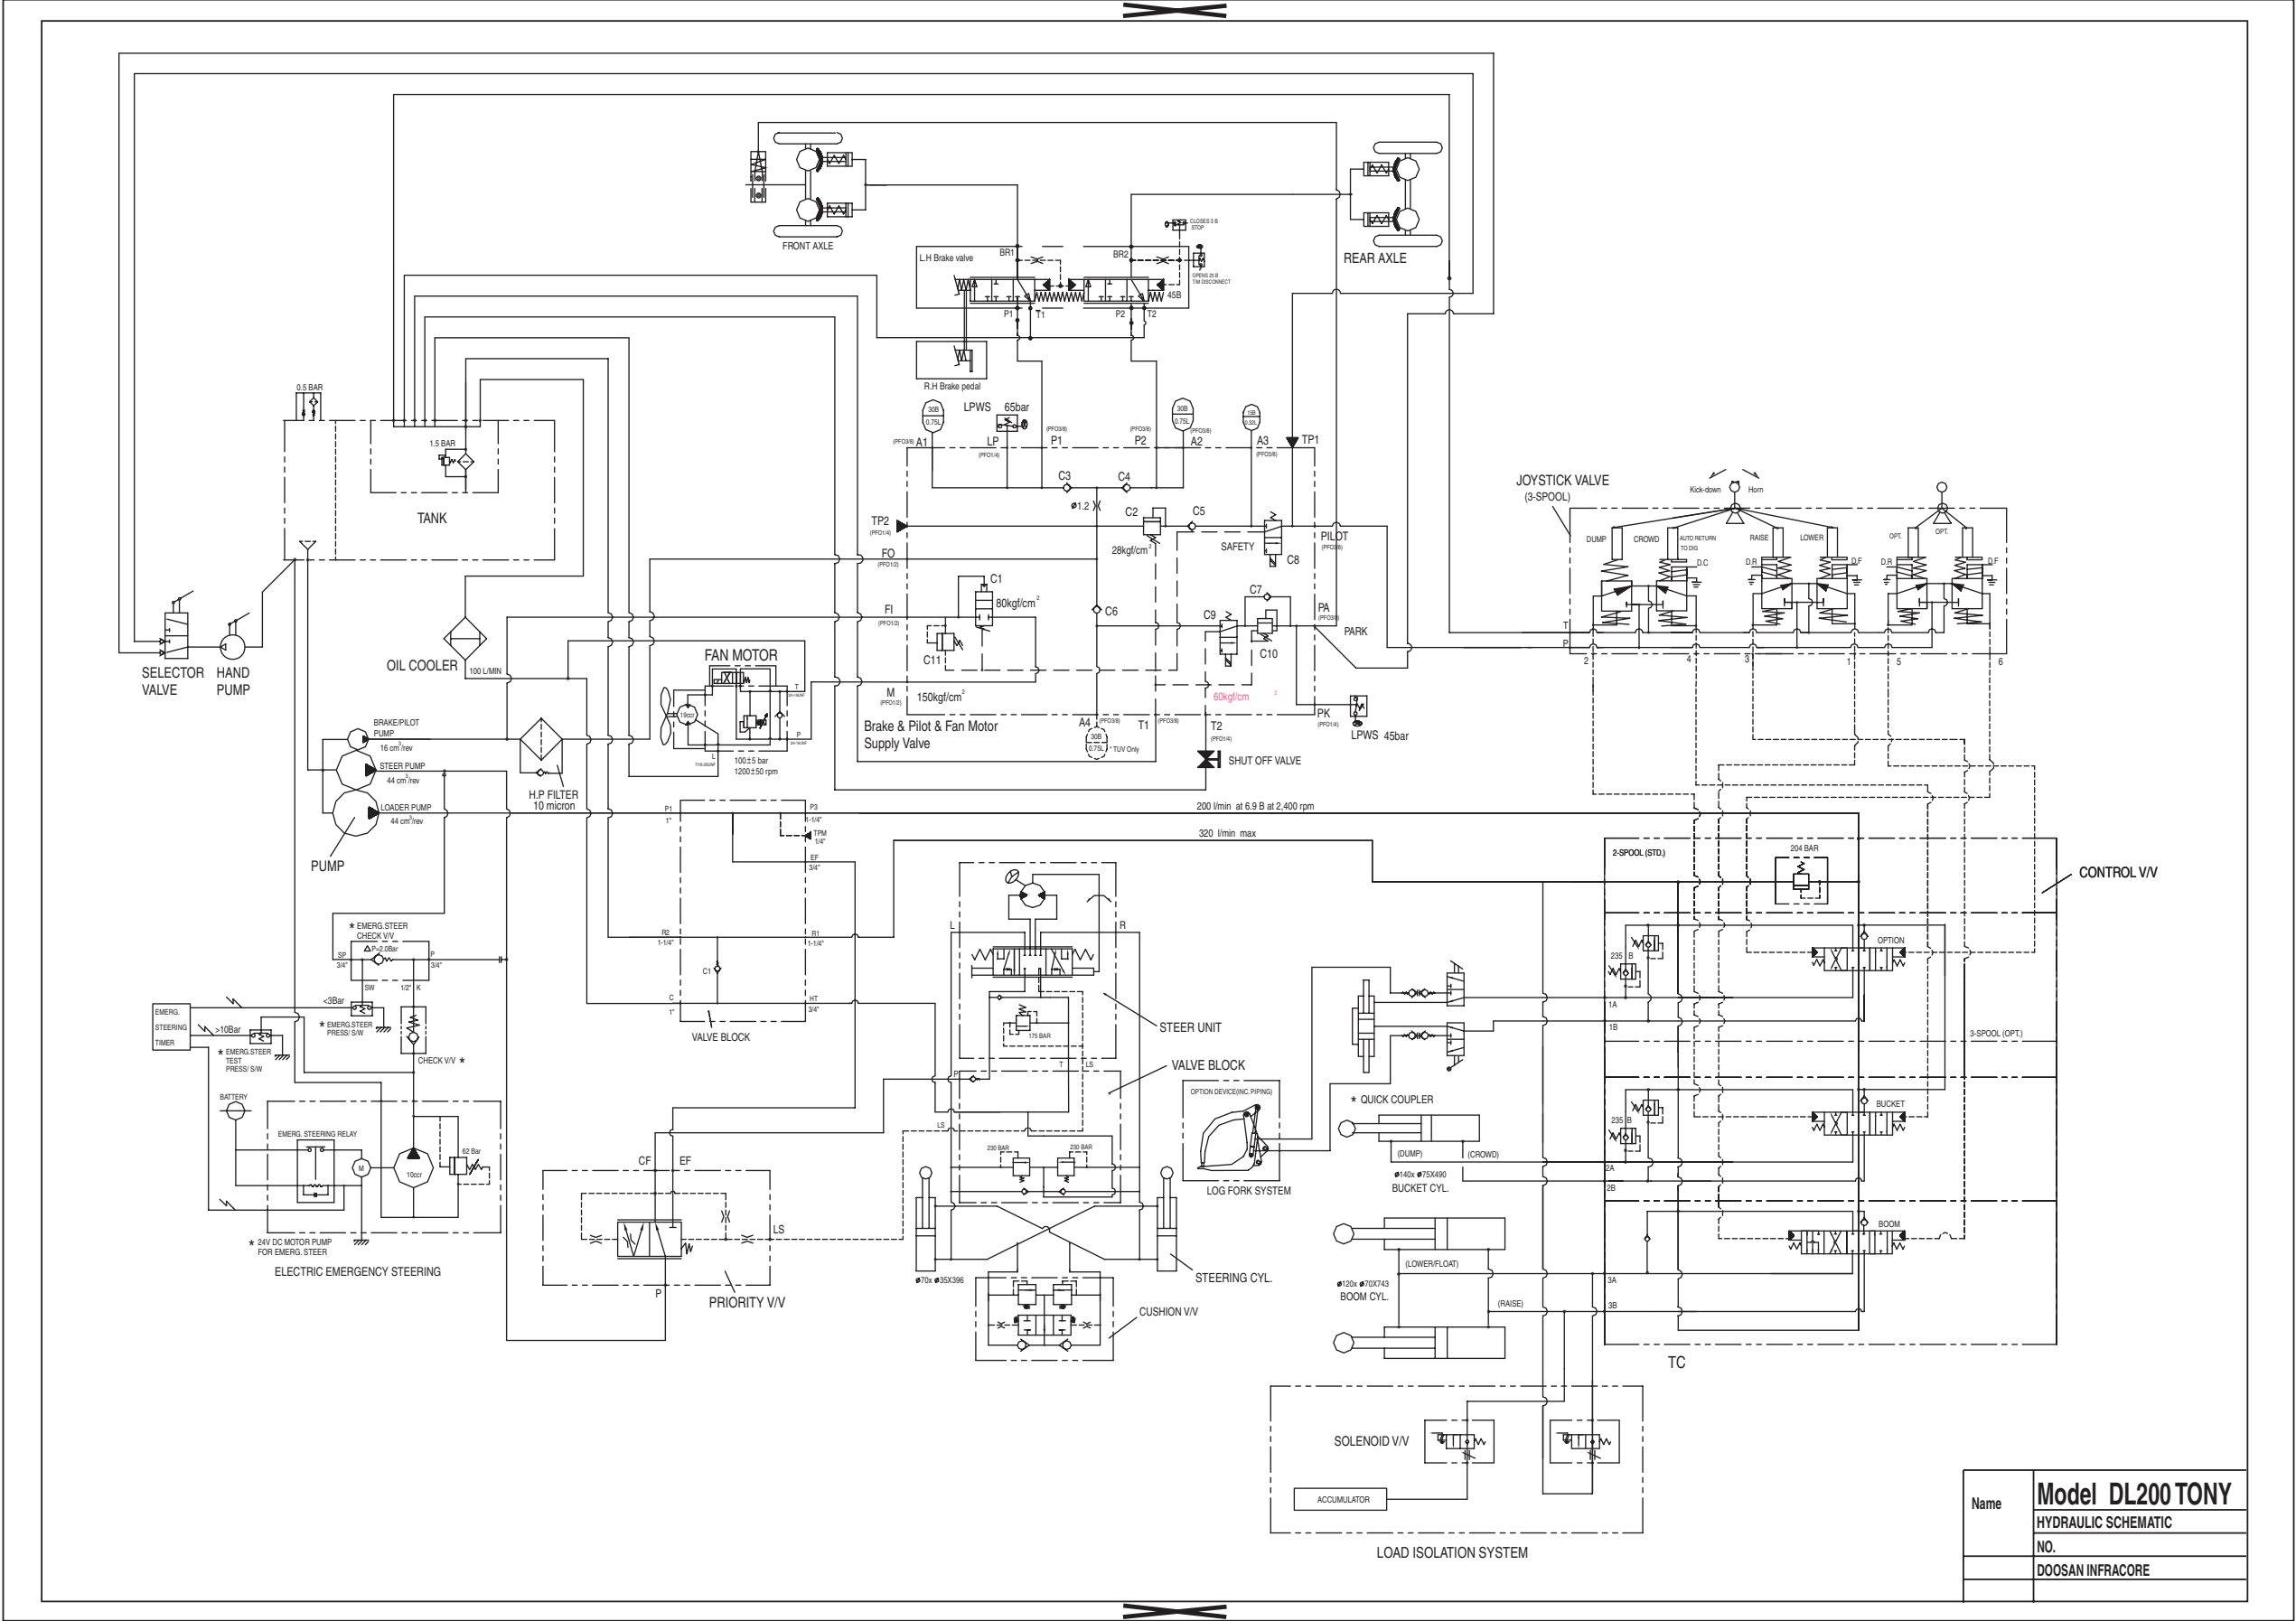


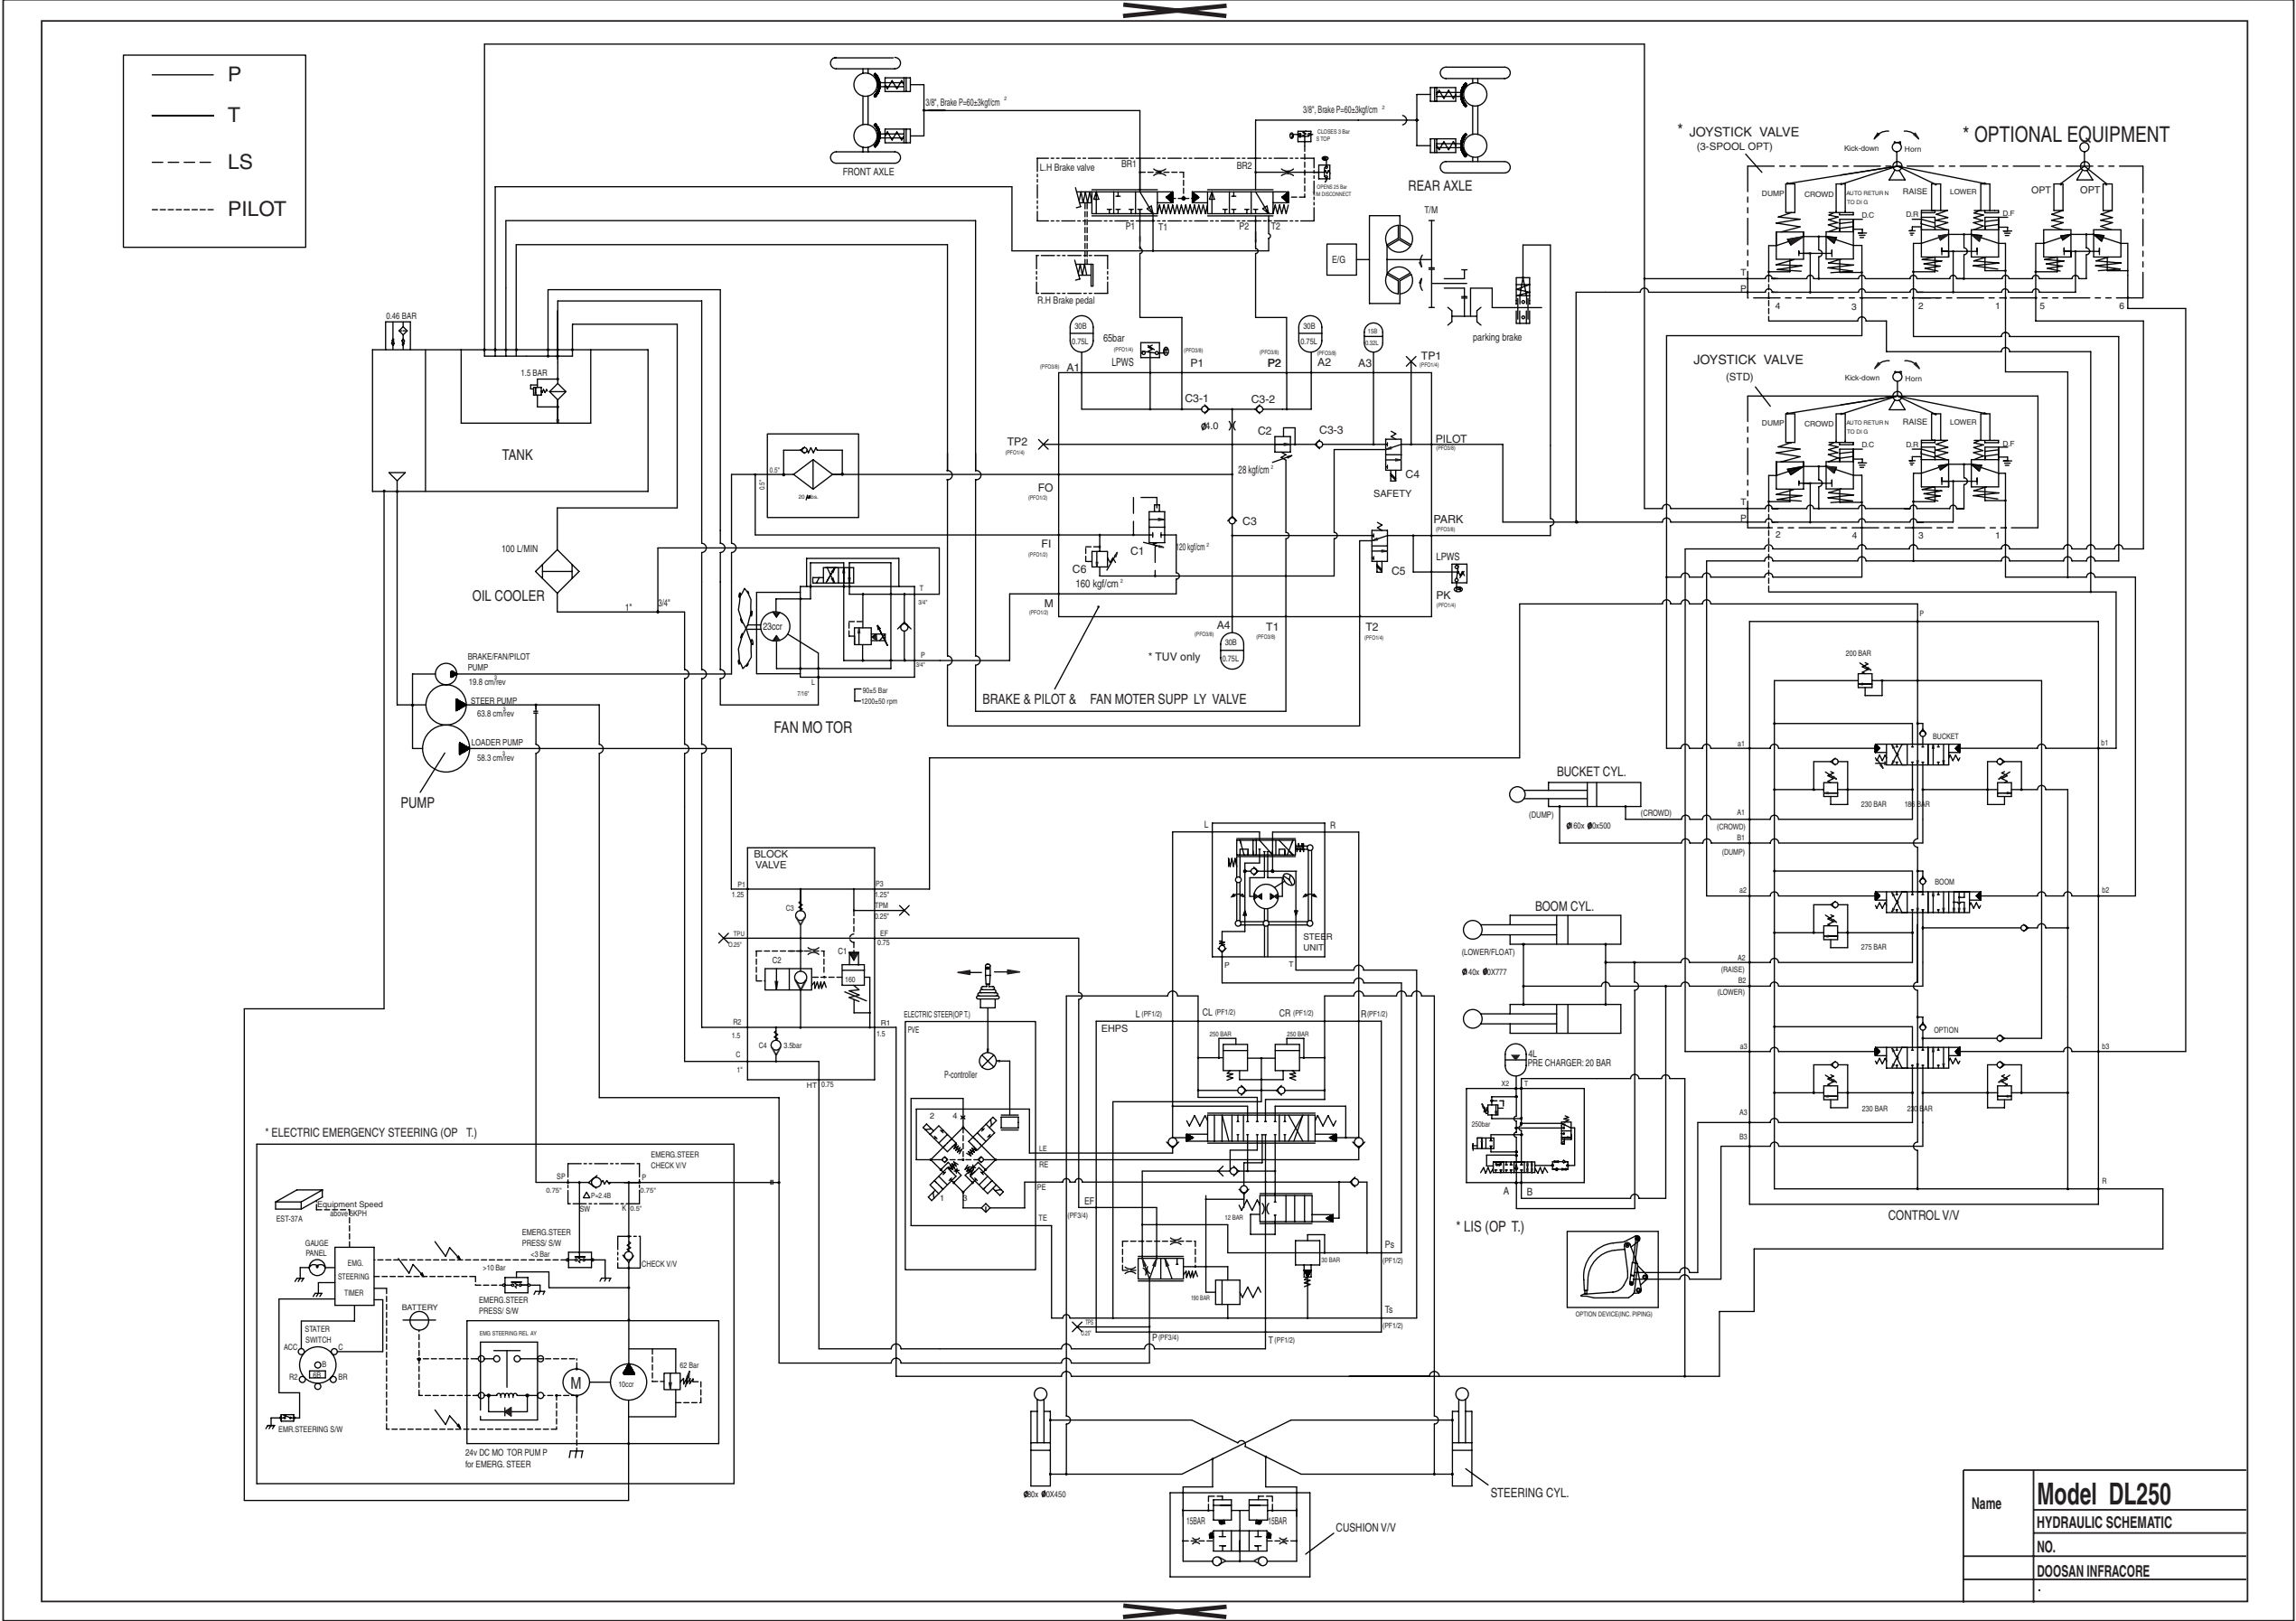


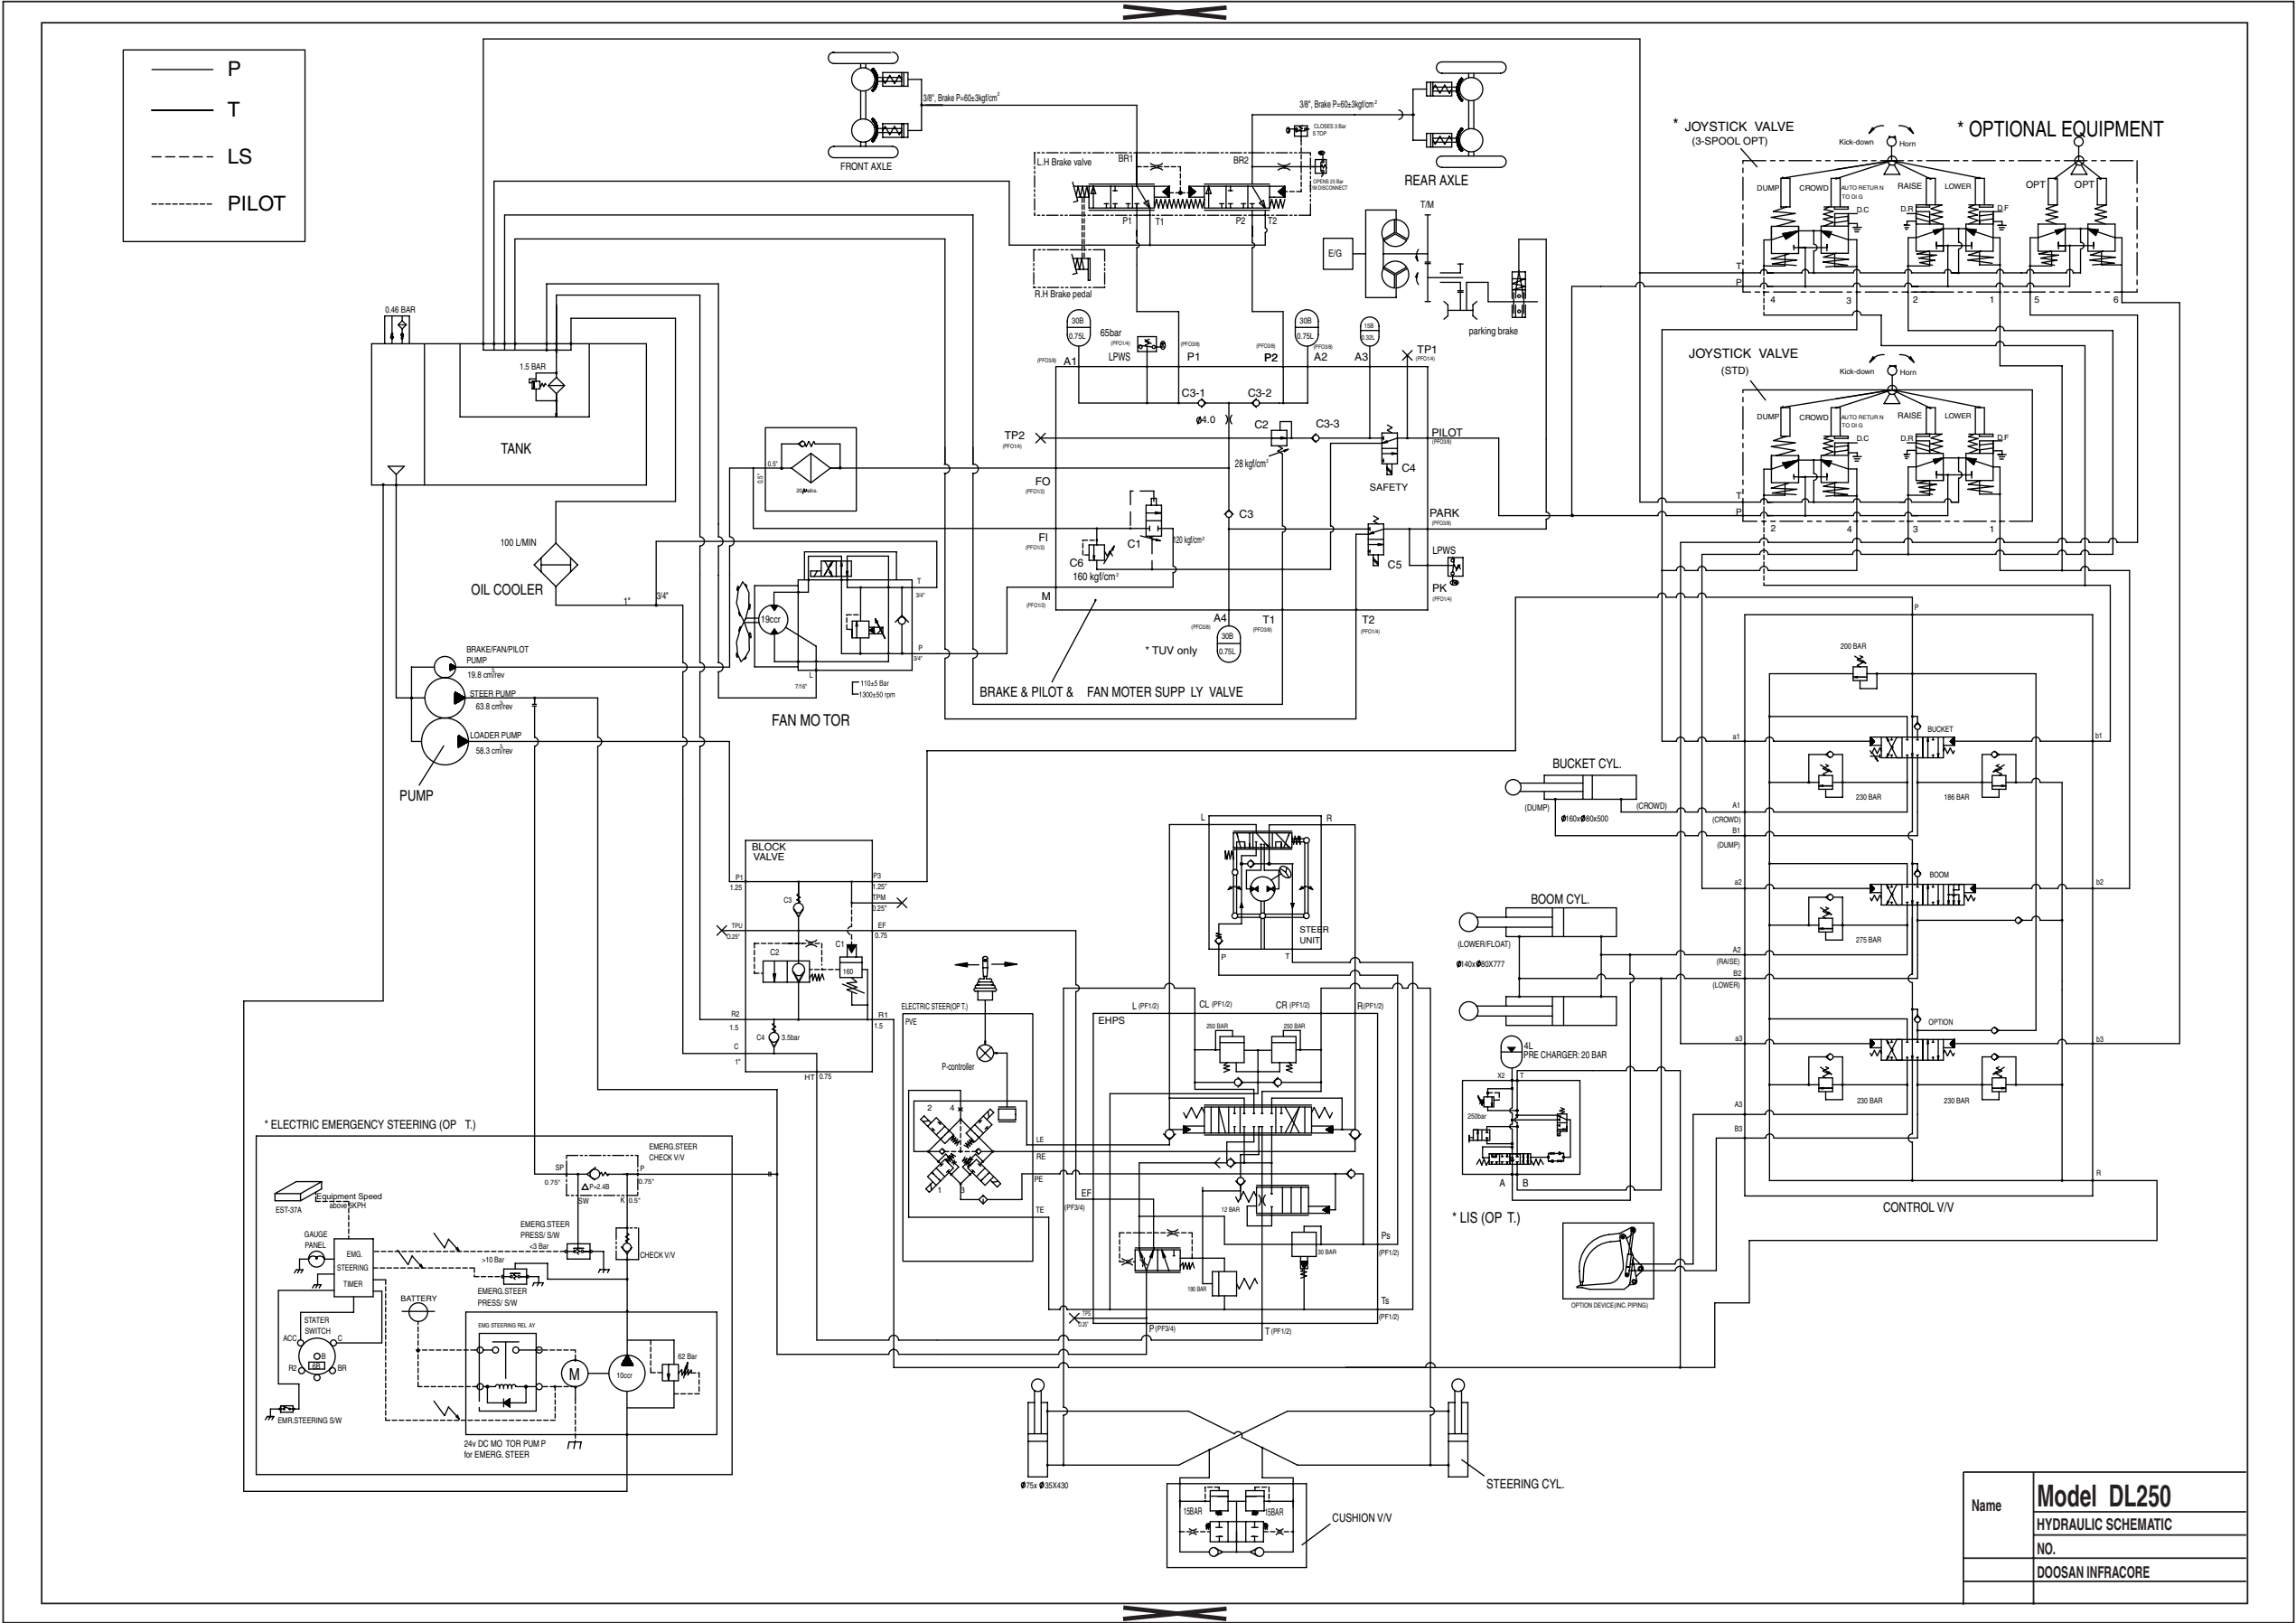

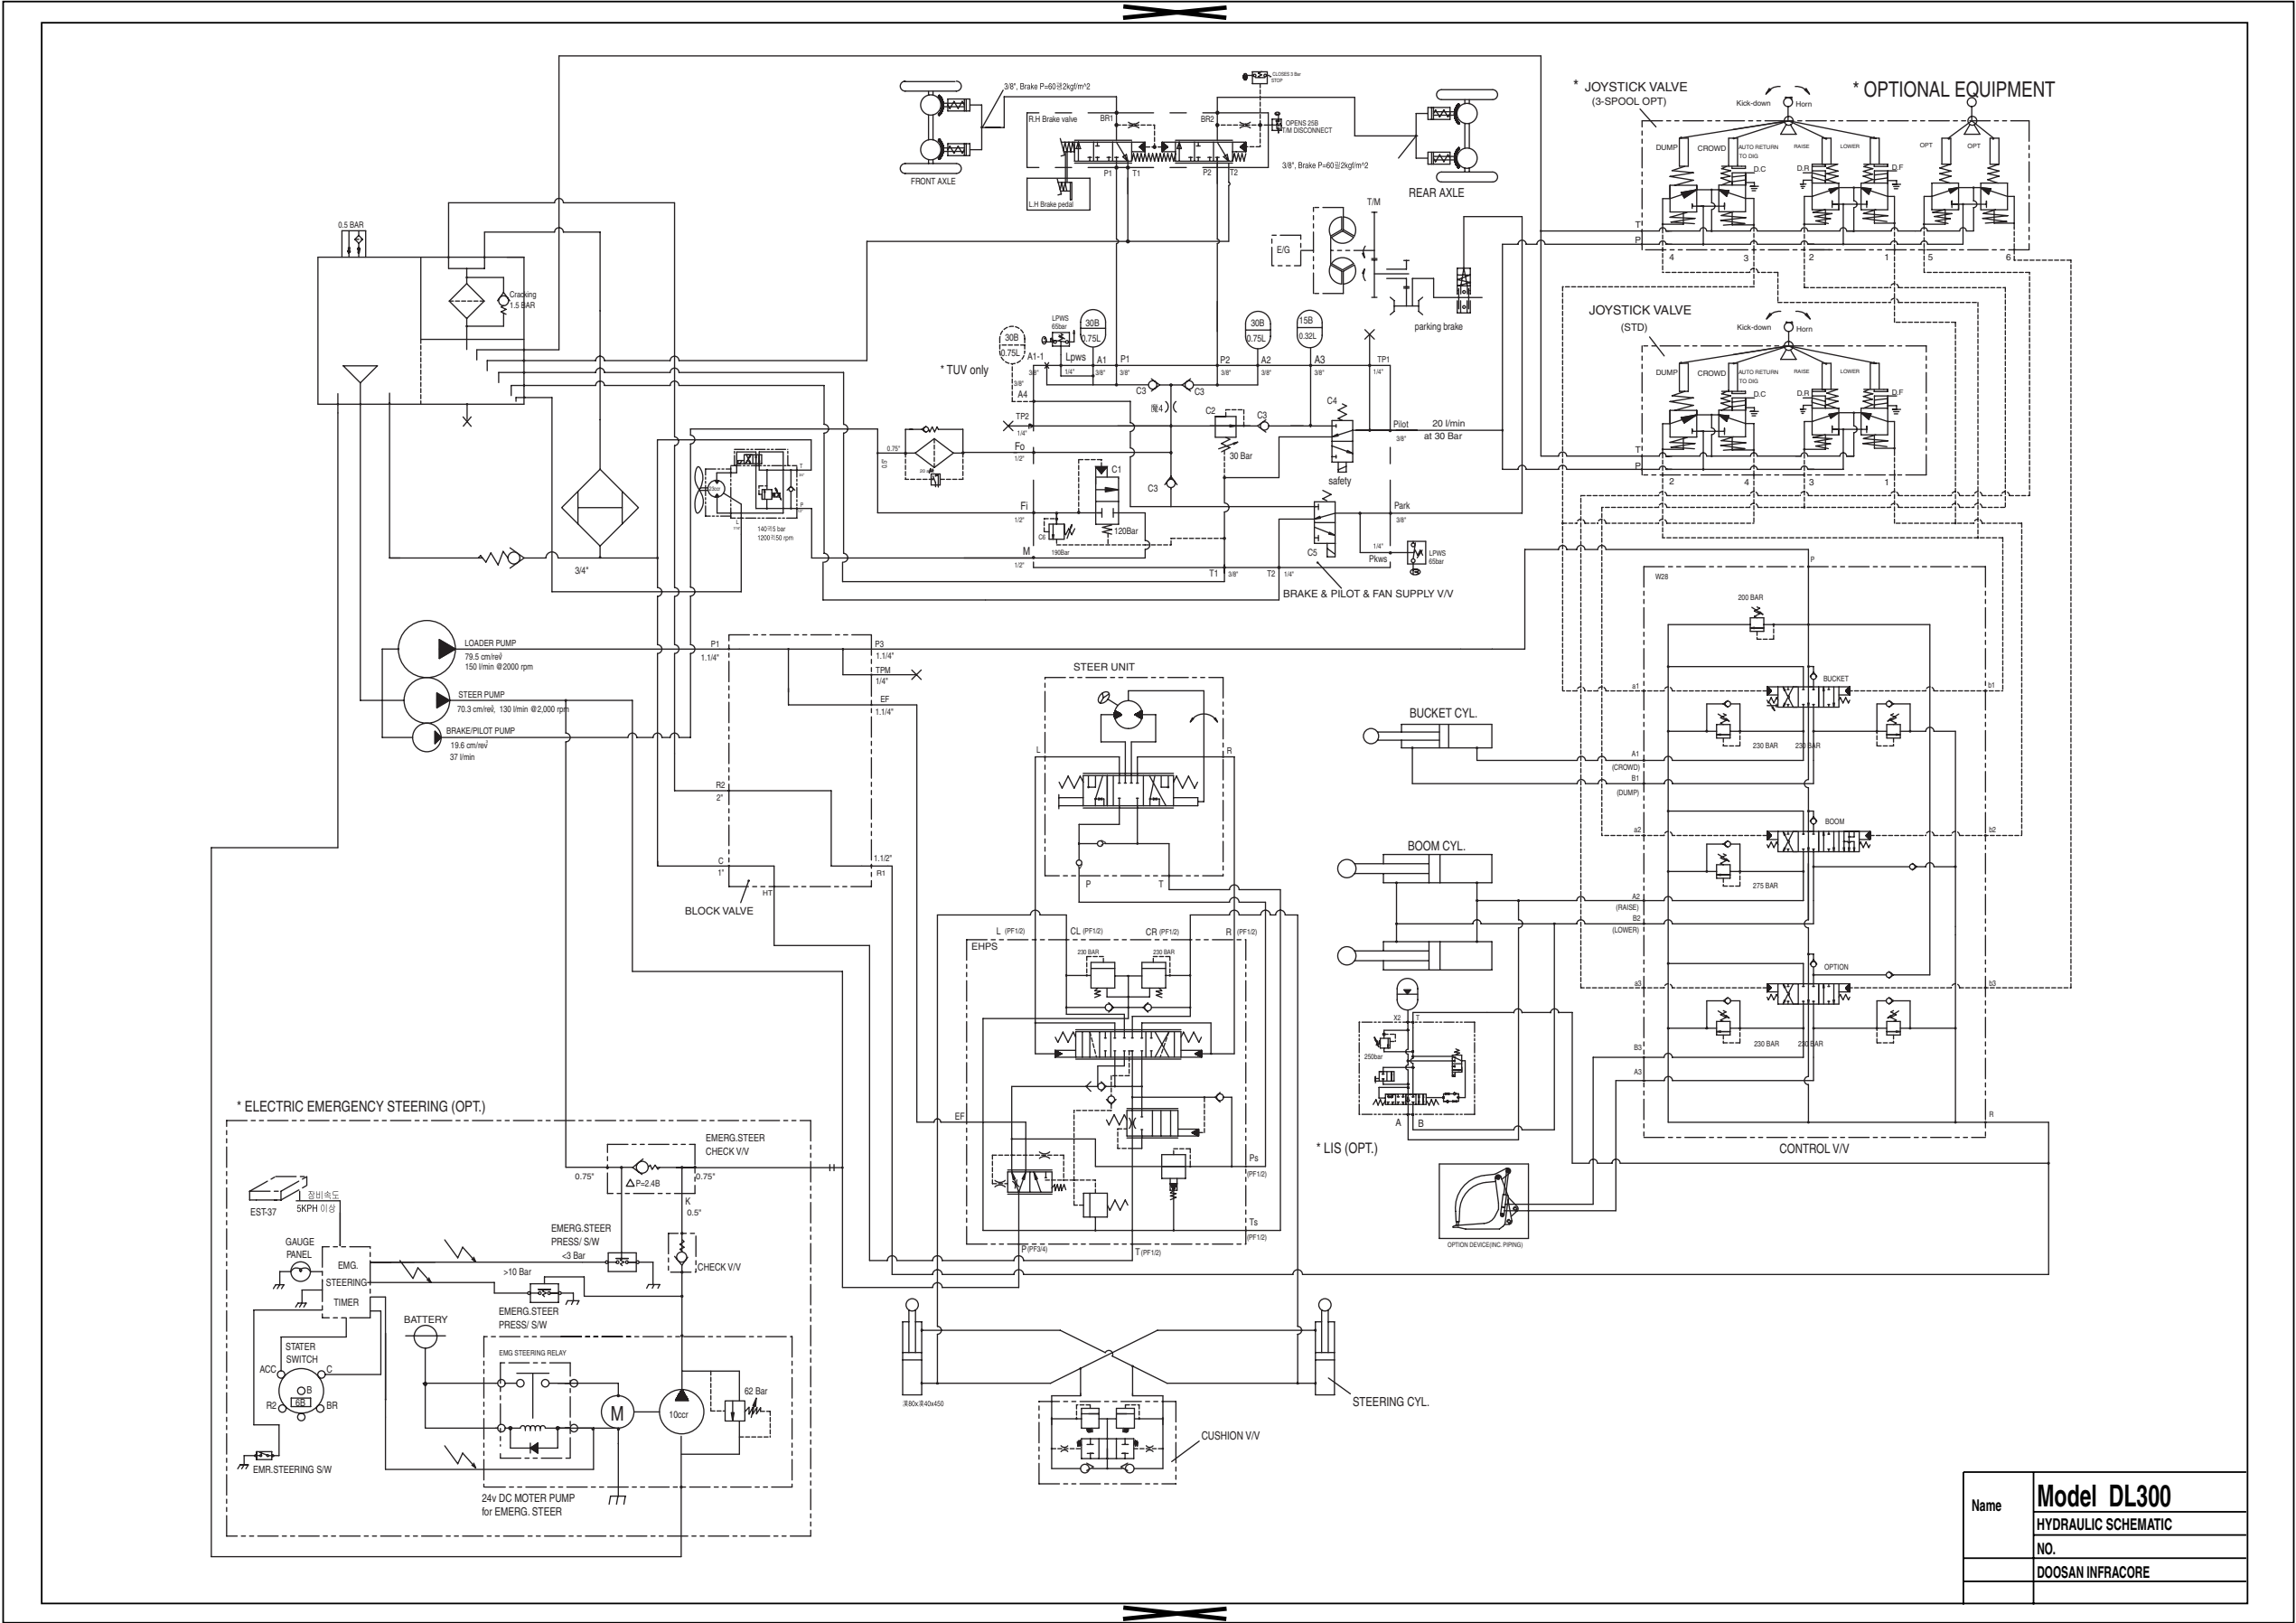

FG004941

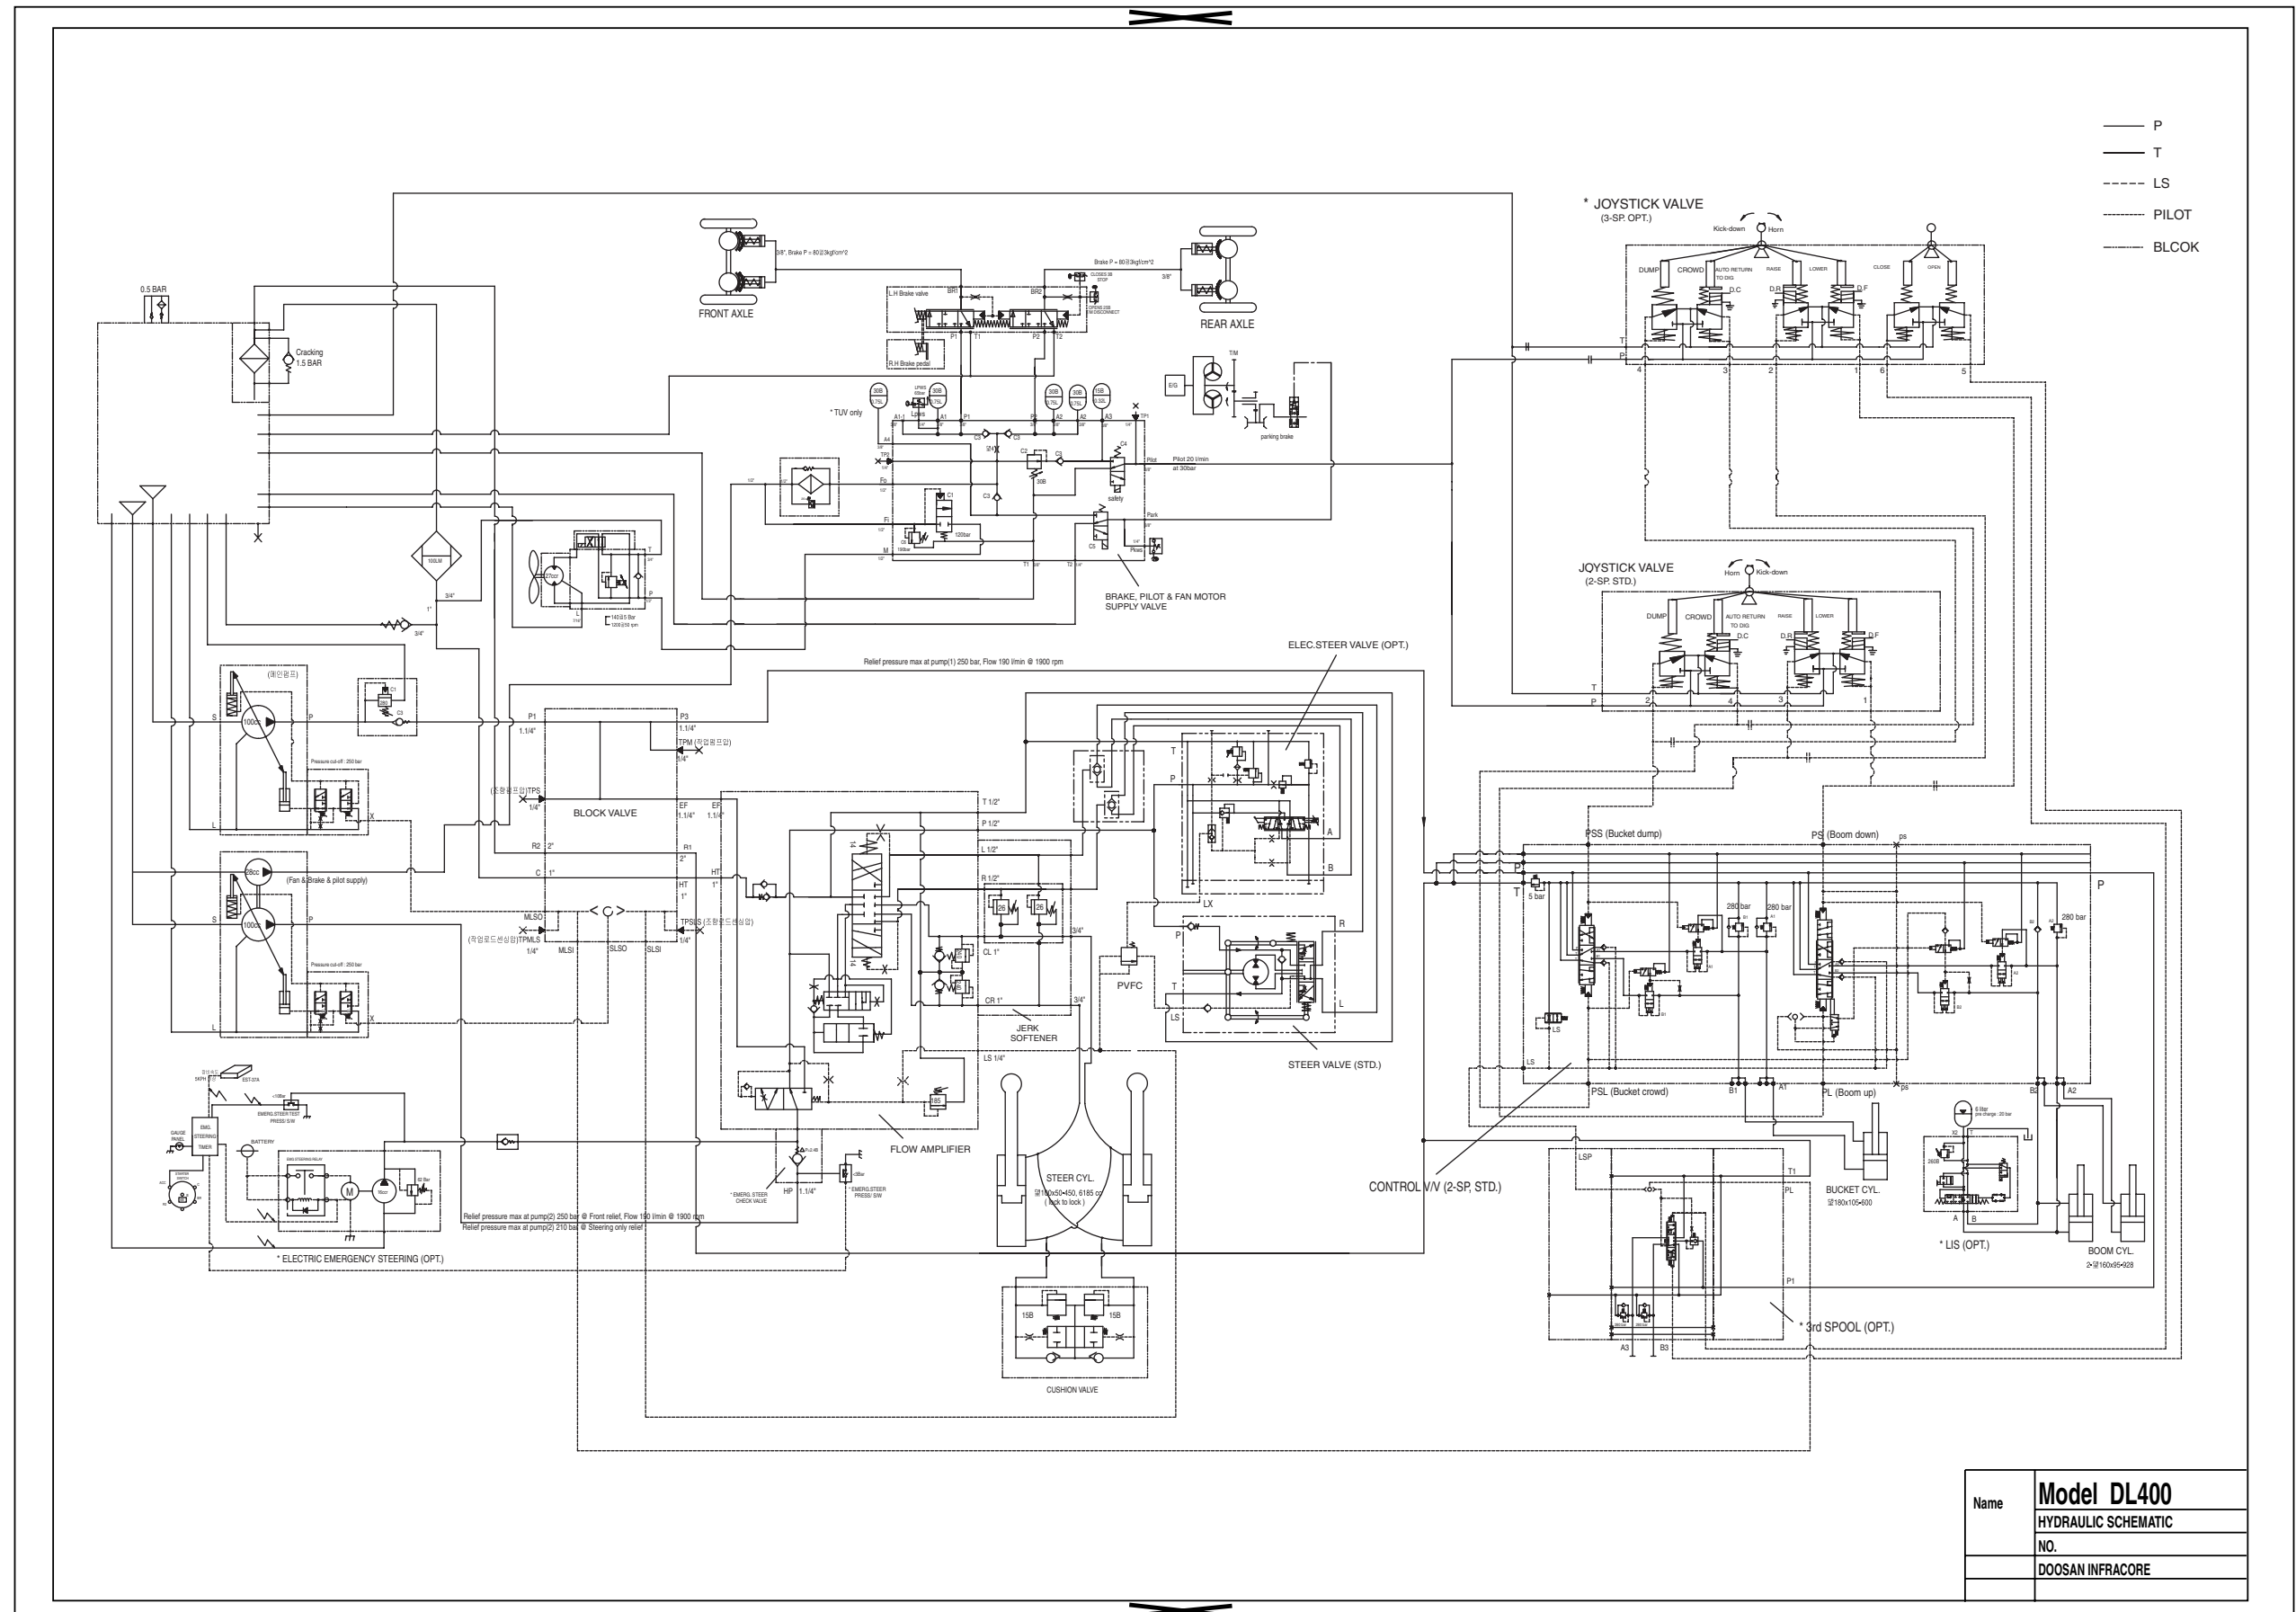

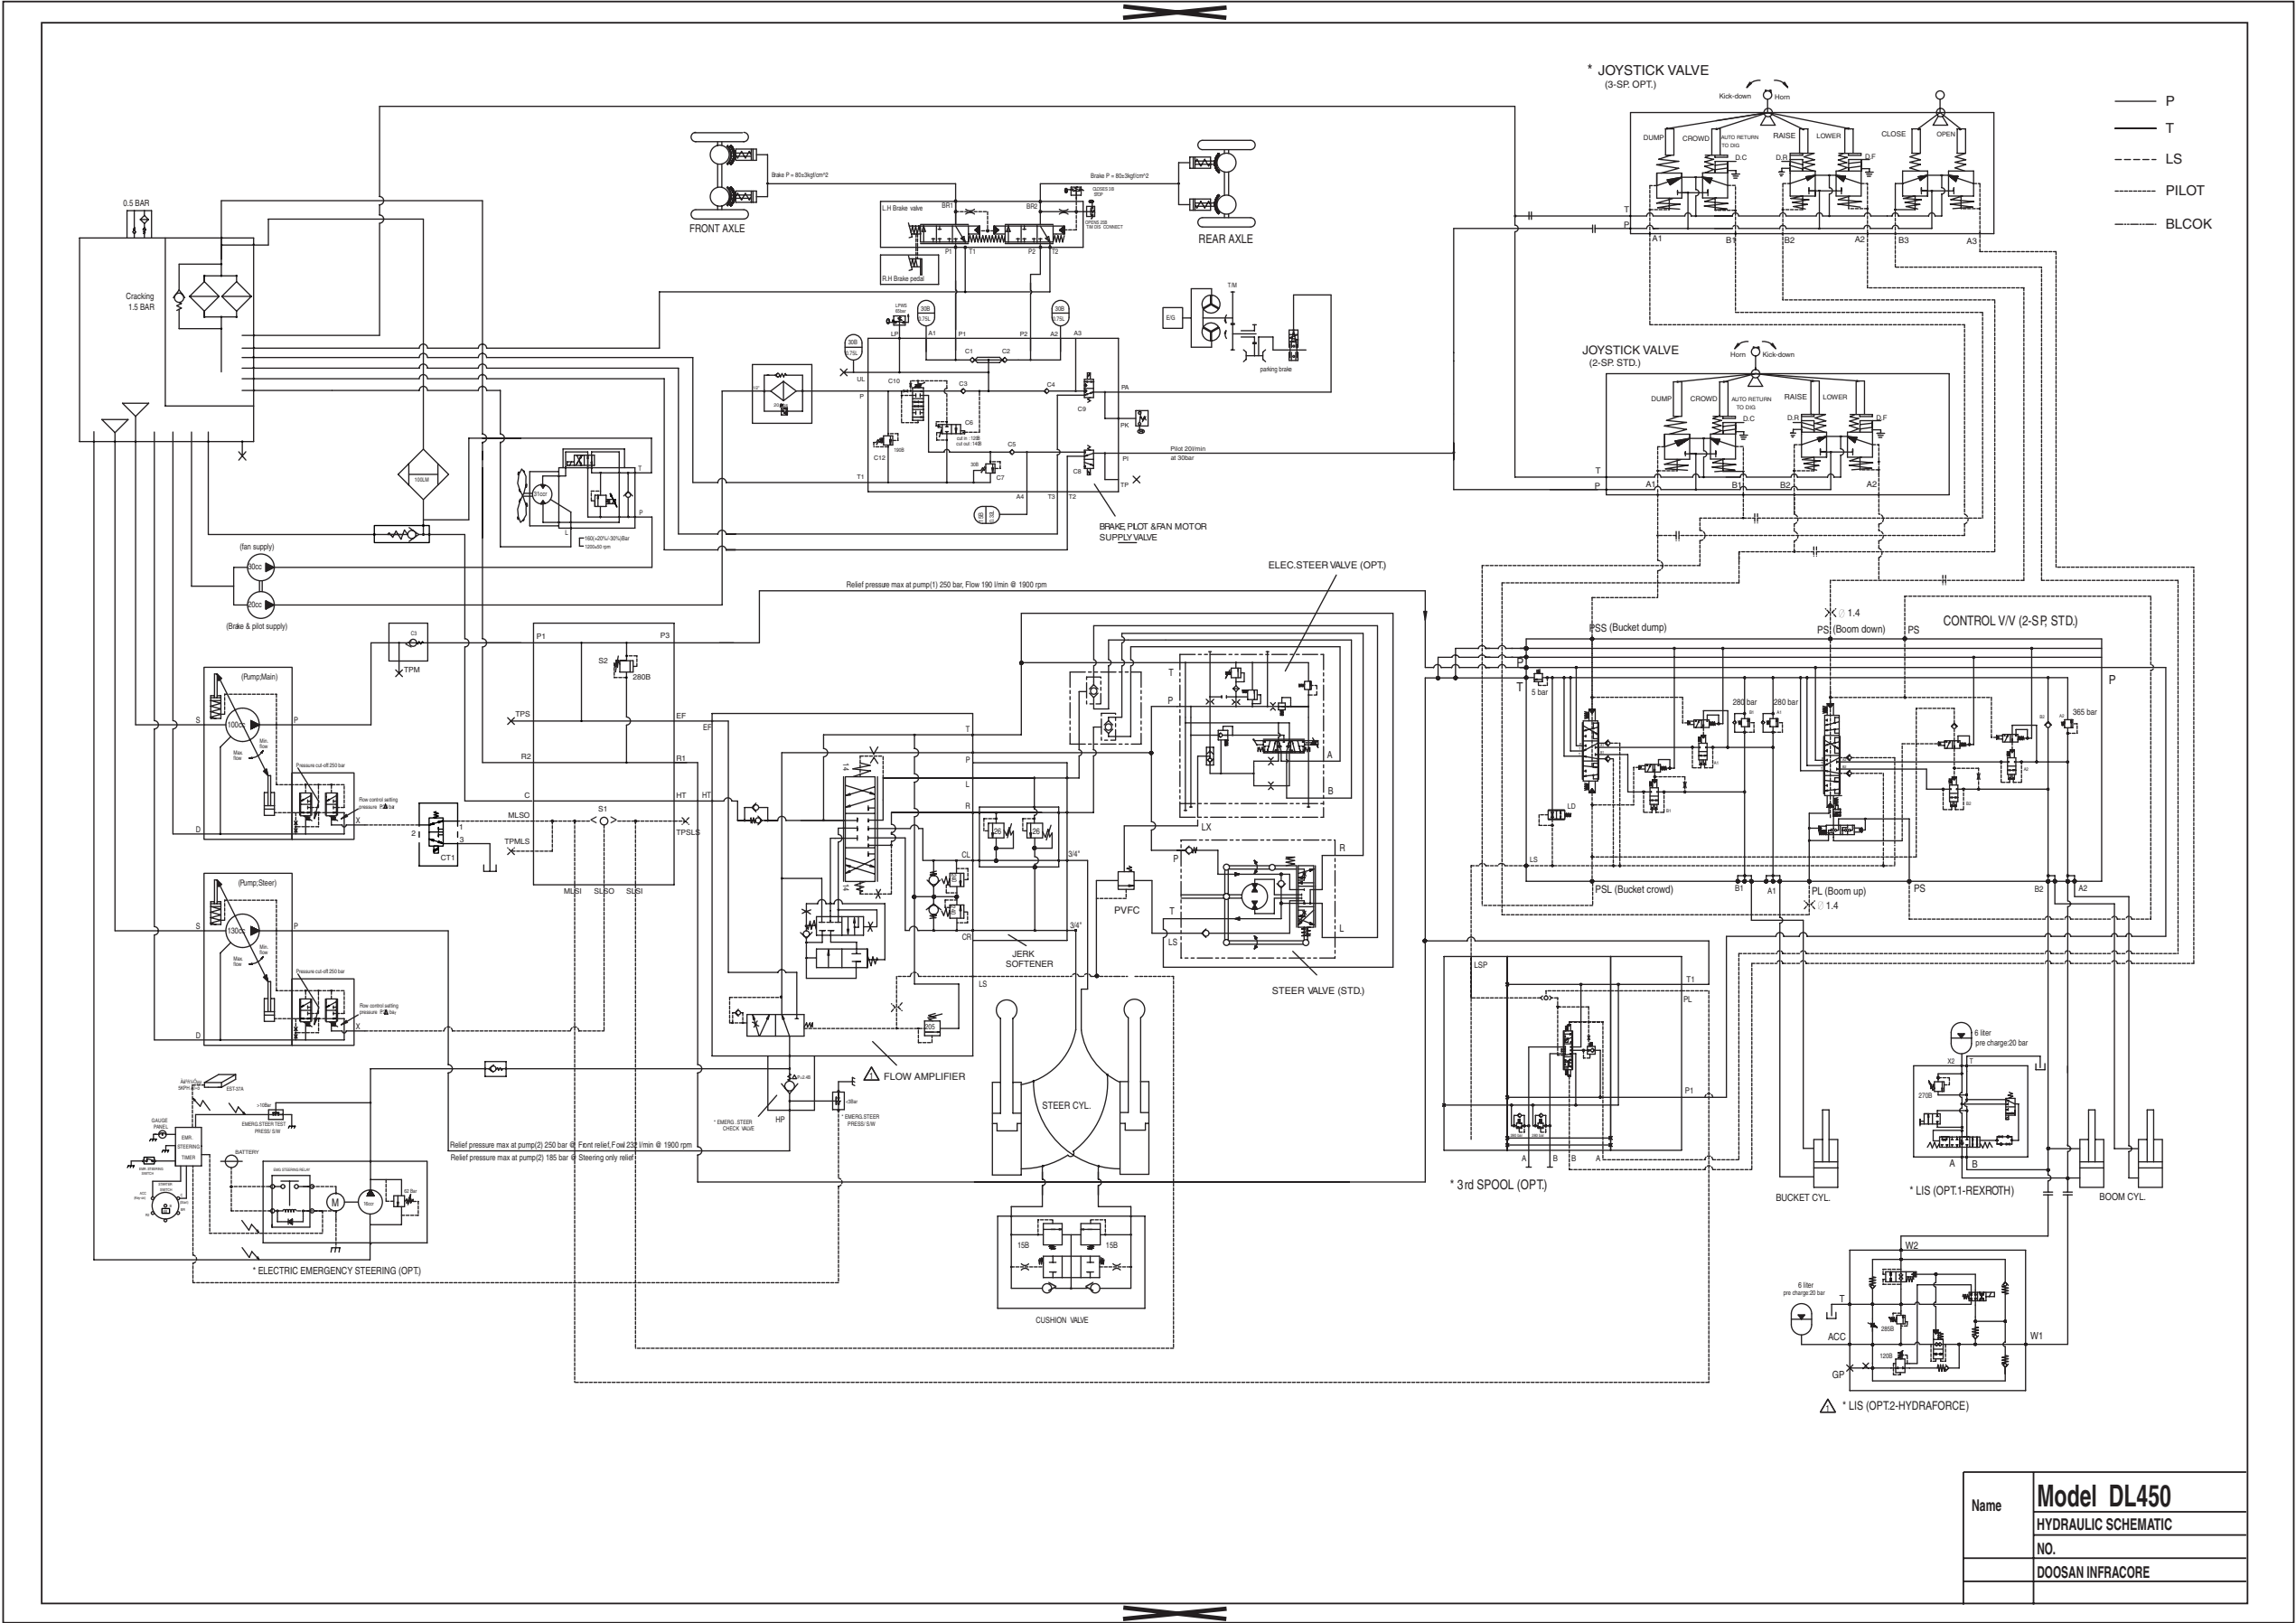

FG013770

