


Operator's Manual

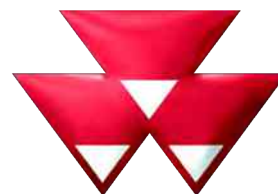

MASSEY FERGUSON

MF 4700 - Operation - Maintenance

MF 4707 MF 4708 MF 4709



Beauvais

AGCO S.A.S. - 41 avenue Blaise Pascal - 60000

Beauvais - France - RC B562 104 539

© AGCO 2017

Original Operator's Manual

January 2017

ACW005123C

English



Foreword

We would like to welcome you to the ever-growing number of people who own a Massey Ferguson tractor; people who appreciate quality. We are proud of every tractor that leaves our factories, each being technically advanced and of a high quality.

This Operator's Manual contains the specifications for your new tractor. Please ensure that all operators read the instructions and follow them carefully. The pages that follow contain vital information on your tractor; please read them carefully.

Your Massey Ferguson dealer will guarantee you quality servicing and will provide you with all the assistance you need. When it comes to servicing, remember that your dealer knows your tractor best and that he wants you to be completely satisfied.

Please leave this Operator's Manual in the tractor if resold. The subsequent owner will need the information it contains.

All information and specifications in this manual are up to date at the time of publication. However, our ongoing policy to improve our products obliges us to reserve the right to make alterations at any time without notice.

Please note that this manual relates to all models and refers to both standard and optional equipment. You may therefore find details relating to equipment that is not fitted on your tractor.

This Operator's Manual complies with Directive 2010/52 EC.

Massey Ferguson

MF 4700 - Operation - Maintenance

1 Tractor identification	11
1.1 Locating serial numbers	13
1.1.1 Locating serial numbers	13
1.2 Tractor identification	14
1.2.1 Your tractor identification details	14
2 Safety instructions and safety points - Warranty	15
2.1 Introduction	17
2.1.1 Introduction - Safety instructions	17
2.2 Safety — Symbols and terms	19
2.2.1 Safety — Symbols and terms	19
2.3 Safety decals and instructions	20
2.3.1 Checking and replacing the safety decals and instructions	20
2.3.2 Presentation and location of the safety decals and instructions	21
2.4 General safety instructions	26
2.4.1 Awareness of the safety instructions and symbols	26
2.4.2 Operator familiarity in the use of the tractor	26
2.4.3 Filling the fuel tank	27
2.4.4 Mounting and dismounting the operator's seat	27
2.4.5 Mandatory procedure before dismounting the tractor	27
2.5 Special instructions	28
2.5.1 Specific recommendations for agricultural and forestry tractors	28
2.6 Special safety instructions for preparing the tractor for use	30
2.6.1 Protective clothing	30
2.6.2 Safety devices and items	30
2.6.3 Checking the tractor	30
2.7 Specific safety instructions for starting the tractor	32
2.7.1 Protection of persons other than the operator	32
2.7.2 Start up safely	32
2.7.3 Checks to be carried out after start-up	33
2.8 Specific safety instructions for using the tractor	34
2.8.1 General instructions	34
2.8.2 Protection of persons other than the operator	35
2.8.3 Overturning	35
2.8.4 Tractor towing	38
2.8.5 Regulatory data on maximum permitted trailed weights	38
2.8.6 Road use	39
2.8.7 Park brake	40
2.8.8 Power take-off	40
2.8.9 Implements	41
2.8.10 Front-end loader	44
2.9 Specific safety instructions for servicing the tractor	45
2.9.1 Pollution warning to observe when servicing the tractor	45
2.9.2 General instructions	45
2.9.3 Handling instructions	46
2.9.4 Special instructions for cleaning the tractor	47
2.10 Protective structures	48
2.10.1 Protective structures: use and accreditation	48
2.10.2 ROPS (Roll Over Protective Structure)	48
2.10.3 Seat belt	48

2.11 Warranty	49
2.11.1 General	49
2.11.2 Pre-delivery inspection and commissioning on the user's premises	49
2.11.3 Warranty procedure	49
2.11.4 Procedure to follow if changing region	49
2.11.5 Servicing during and after the warranty period	50
3 Usage	51
3.1 Operator environment	55
3.1.1 Standard steering console, Footstep tractor	55
3.1.2 Standard steering console, Platform tractor	56
3.1.3 Essential steering console, Platform tractor	57
3.1.4 Instrument panel: Standard option	58
3.1.5 Instrument panel Essential option	61
3.1.6 Control unit	69
3.1.7 Start switch	69
3.1.8 Start switch	69
3.1.9 Pedals	70
3.1.10 Steering wheel	72
3.1.11 Seat	72
3.2 Body	75
3.2.1 Opening the engine cover	75
3.2.2 Tool box	75
3.3 Engine	76
3.3.1 Running-in	76
3.3.2 Start-up	76
3.3.2.1 Starting the engine with preheating on the steering console.	76
3.3.3 Stopping the engine	77
3.3.4 Engine speed	78
3.3.5 Filling with fuel	79
3.4 Transmission	81
3.4.1 8X8 CMS gearbox for Tier 2/Stage II engine	81
3.4.2 8X8 SMS gearbox with mechanical reverse shuttle	82
3.4.3 gearbox	83
3.4.4 12X12 SPS gearbox	85
3.4.5 Clutch function	86
3.4.6 Super creeper gears	88
3.4.7 Tractor towing	89
3.5 Brakes	91
3.5.1 Brake pedals	91
3.5.2 Hydraulic trailer brake	92
3.5.3 Park brake	93
3.6 Steering	94
3.6.1 Steering	94
3.7 Standard linkage console	95
3.7.1 Four-wheel drive front axle	95
3.7.1.1 Control locations	95
3.7.1.2 Operation	95
3.7.1.3 Permissible load on the front axle	96
3.7.2 Differential lock	97
3.7.2.1 Control locations	97
3.7.2.2 Operation	97
3.7.3 Live PTO	98
3.7.3.1 Control locations	98
3.7.3.2 Operation	98
3.7.3.3 Selecting the power take-off speed	99

3.7.3.4	Interchangeable 540 and 1000 rpm PTO	102
3.7.3.5	GSPTO	102
3.7.3.6	Economy PTO	103
3.7.3.7	Power take-off protection	103
3.7.3.8	Coupling to the PTO shaft	105
3.7.4	Linkage	105
3.7.4.1	Control locations	105
3.7.4.2	Operation	105
3.7.4.3	Rear linkage external controls	108
3.8	Electronic linkage console	109
3.8.1	Four-wheel drive front axle	109
3.8.1.1	Control locations	109
3.8.1.2	Operation	109
3.8.1.3	Permissible load on the front axle	110
3.8.2	Differential lock	111
3.8.2.1	Control locations	111
3.8.2.2	Operation	111
3.8.3	Live PTO	112
3.8.3.1	Control locations	112
3.8.3.2	Operation	112
3.8.3.3	Selecting the power take-off speed	113
3.8.3.4	Interchangeable 540 and 1000 rpm PTO	116
3.8.3.5	GSPTO	116
3.8.3.6	Economy PTO	117
3.8.3.7	Power take-off protection	117
3.8.3.8	Coupling to the PTO shaft	119
3.8.4	Linkage	119
3.8.4.1	Control locations	119
3.8.4.2	Operation	119
3.8.4.3	Rear linkage external controls	124
3.9	Linkage	125
3.9.1	General	125
3.9.2	Three-point linkage	125
3.9.3	Top link	125
3.9.4	Bottom links	127
3.9.5	Adjusting the lift rods	128
3.9.6	Stabilisers	129
3.9.6.1	Stabilizers with manual telescopic adjustment	130
3.9.7	Multi-hole drawbar	132
3.9.8	Swinging drawbar	132
3.9.8.1	Settings	132
3.9.8.2	Hitching an attachment	133
3.9.8.3	Drawbars, ISO standard	133
3.9.8.4	Drawbars, SAE standard	134
3.9.9	Linkage type	135
3.9.9.1	Standard hitch	135
3.9.9.2	Standard hitch with ladder	135
3.9.9.3	Short ladder hitch with high load capacity	140
3.9.9.4	Pick-up hitch	141
3.9.10	Pick-up hitch	142
3.9.10.1	General	142
3.9.10.2	Using the pickup hitch for pulling	142
3.10	Auxiliary hydraulics	144
3.10.1	Types of spool valve	144
3.10.2	Hydraulic spool-valve controls	145
3.11	Wheels and tires	147
3.11.1	Wheel studs	147

3.11.2	Installation points of the axle stands	147
3.11.3	Adjustment of the front track width, 2-wheel drive	147
3.11.3.1	Adjustment of position 1 of the axle	148
3.11.3.2	Adjustment of position 2 of the axle	149
3.11.3.3	Adjustment of position 3 of the axle	150
3.11.3.4	Adjustment of position 4 of the axle	151
3.11.3.5	Adjustment of position 5 of the axle	152
3.11.4	Adjustment of the front track width, 4-wheel drive	153
3.11.5	Adjusting the rear wheel track width	154
3.11.6	Adjusting the 4WD front axle stops	156
3.11.7	Tires	156
3.11.8	Tire pressures	157
3.11.9	Radial loads and standard inflation pressures	158
3.11.10	Ballasting the tractor	160
3.11.11	Liquid ballasting	161
3.12	Additional weight	163
3.12.1	Additional weight	163
4	Maintenance	165
4.1	Service Guide	167
4.1.1	Service Guide	167
4.2	ROPS (Roll Over Protective Structure)	170
4.2.1	Attaching the ROPS	170
4.2.2	Reducing the height of the ROPS	170
4.3	Engine	171
4.3.1	Recommended products	171
4.3.2	3-cylinder engine AGCO Power Tier 2	172
4.3.3	4-cylinder engine AGCO Power Tier 2	172
4.3.4	3-cylinder AGCO Power Tier 4i/Stage IIIB engine engine	173
4.3.5	Engine oil level check	173
4.3.6	Draining the engine oil	174
4.3.7	Replacing the engine oil filter	174
4.3.8	Breather system	175
4.3.9	Fuel system: fuel prefilter	176
4.3.9.1	Draining the water	176
4.3.9.2	Replacing the filter element	177
4.3.10	Fuel filter fuel system	178
4.3.11	Fuel system: Fuel tank	179
4.3.12	Fuel system: bleeding	179
4.3.13	Fuel system: injection pump, regulator and injectors	179
4.3.14	Air filter	179
4.3.15	Cooling system, engine with expansion tank	180
4.3.15.1	Checking the level and quality of the coolant	180
4.3.15.2	Filling to top up the coolant level	181
4.3.15.3	Draining the cooling system	181
4.3.15.4	Cleaning the radiator	182
4.3.16	Check and replace the main fan/alternator belt	182
4.3.16.1	Procedure for tensioning the Poly-V main belt for the AGCO Power engine	183
4.3.17	Fuel quality requirements	183
4.3.17.1	Biodiesel blends	184
4.3.18	Fuel: Safety instructions and storage	185
4.4	Transmission	188
4.4.1	Recommended products	188
4.4.2	Checking the hydraulic system level	188
4.4.3	Draining the hydraulic system	189
4.4.4	Replacing the filter and strainer	190



4.4.4.1 Replacing the strainer	190
4.4.4.2 Replacing the high-pressure filter	190
4.4.5 Transmission oil cooler	191
4.4.6 Clutch	191
4.4.7 Lubricating the rear axle shaft bearings	192
4.5 Brakes	193
4.5.1 Mechanically controlled brakes	193
4.5.2 Hydraulically controlled brakes	193
4.6 Front axle and steering	195
4.6.1 Recommended products	195
4.6.2 Two-wheel drive front axle: lubrication	195
4.6.3 Two-wheel drive front axle and four-wheel drive front axle: Check the wheel alignment	196
4.6.4 Four-wheel drive front axle: checking the oil level in the final drives	197
4.6.5 Four-wheel drive front axle: draining the oil in the final drives	197
4.6.6 Four-wheel drive front axle: Checking the front axle beam oil level	197
4.6.7 Four-wheel drive front axle: draining the oil from the front axle beam	198
4.6.8 Four-wheel drive front axle: lubrication	199
4.6.9 Adjusting the front axle oscillation	200
4.7 Linkage	201
4.7.1 Recommended products	201
4.7.2 Three-point linkage: lubrication	201
4.8 Electrical equipment	202
4.8.1 Batteries	202
4.8.2 Alternator	202
4.8.3 Power socket (ISO)	203
4.8.4 Power socket (ASAE)	204
4.8.5 Accessories sockets (ISO)	204
4.8.6 Accessories sockets (ASAE)	205
4.8.7 Adjusting the headlights	205
4.8.8 Main fuse boxes	206
4.8.8.1 AGCO Power Tier 2/Stage II engine - Mechanical reverse shuttle/Main fuse box	206
4.8.8.2 AGCO Power Tier 2/Stage II engine - PowerShuttle/Main fuse box	209
4.8.8.3 AGCO Power Tier 4i/Stage IIIB engine (EEC) - Mechanical reverse shuttle/Main fuse box	213
4.8.8.4 AGCO Power Tier 4i/Stage IIIB engine (EEC) - PowerShuttle/Main fuse box	216
4.8.9 Additional fuse boxes	220
4.8.9.1 AGCO Power Tier 2/Stage II engine - Mechanical reverse shuttle/Additional fuse box	220
4.8.9.2 AGCO Power Tier 2/Stage II engine - PowerShuttle/Additional fuse box	220
4.8.9.3 AGCO Power Tier 4i/Stage IIIB engine (EEC)	222
4.8.9.4 AGCO Power Tier 4i/Stage IIIB engine (EEC) - PowerShuttle/Additional fuse box	222
4.8.10 Fuse boxes on the side of the battery	223
4.8.10.1 AGCO Power Tier 2/Stage II engine - Fuse box on the side of the battery	223
4.8.10.2 AGCO Power Tier 4i/Stage IIIB engine (EEC) - Main fuse box on the side of the battery	225
4.8.11 Battery isolator	228
4.9 Pressure washing	230
4.9.1 Pressure washing	230
4.10 Storing your tractor	231
4.10.1 Storing your tractor	231
4.11 Faults and solutions	232
4.11.1 General table of faults	232

4.11.2	Indicator light panel	234
4.11.3	Error codes	237
4.11.4	Engine error codes - AGCO Power	242
5	Technical specifications	259
5.1	General specifications	261
5.1.1	Model MF 4707	261
5.1.2	Model MF 4708	262
5.1.3	Model MF 4709	264
5.2	Operator environment	266
5.2.1	Noise levels (dBA) at operator's ears: Tier 4i/Stage IIIB engine engine	266
5.2.2	Level of vibration of the operator's seat	266
5.3	Engine	267
5.3.1	Specifications: Tier 2/Stage II engine	267
5.3.2	Specifications: Tier 4i/Stage IIIB engine	267
5.3.3	Fuel system and air filter	268
5.3.4	Cooling	268
5.3.5	Tightening torques	268
5.4	Transmission	269
5.4.1	Forward speed at 2200 rpm with 8x8 gearbox and 16.9x34 tires - 30 km/h option for Tier 2/Stage II engine tractors	269
5.4.2	Forward speed at 2200 rpm with a 12x12 gearbox and 16.9x34 tires - 30 km/h pour les tracteurs Tier 2/Stage II engine option	269
5.4.3	Forward speed at 2200 rpm with 12x12 gearbox and 16.9x34 tires - option 40 km/h pour les tracteurs Tier 4i/Stage IIIB engine	269
5.4.4	Gearbox	270
5.4.5	Final drives	270
5.4.6	Rear differential lock	270
5.5	Brakes	271
5.5.1	Brake technical specifications	271
5.6	Front axle and steering	272
5.6.1	Two-wheel drive front axle	272
5.6.2	Four-wheel drive front axle	272
5.6.3	Steering	272
5.6.4	Tightening torques	272
5.7	Power take-off	273
5.7.1	Specifications	273
5.7.2	Tightening torques	273
5.8	Hydraulic linkage	274
5.8.1	Rear linkage	274
5.9	Auxiliary hydraulics (according to specification or country)	275
5.9.1	Standard hydraulic flow rate	275
5.10	Electrical equipment	276
5.10.1	Electrical equipment technical specifications	276
5.11	Wheels and tires	277
5.11.1	Wheels	277
5.11.2	Tires	277
5.11.3	Tires compatible with MF 4700 tractors	286
5.11.4	Tightening torques	293
5.12	Capacities and dimensions	294
5.12.1	Capacities	294
5.12.2	Dimensions and weights	296
5.12.3	Attachment points for 3-cylinder engines	298
5.12.4	Attachment points for 4-cylinder engines for MF 4708 tractors with Tier 2/Stage II engine	300

1. Tractor identification

1.1 Locating serial numbers	13
1.1.1 Locating serial numbers	13
1.2 Tractor identification	14
1.2.1 Your tractor identification details	14

1.1 Locating serial numbers

1.1.1 Locating serial numbers

IMPORTANT: Tell your dealer or agent the tractor serial number.

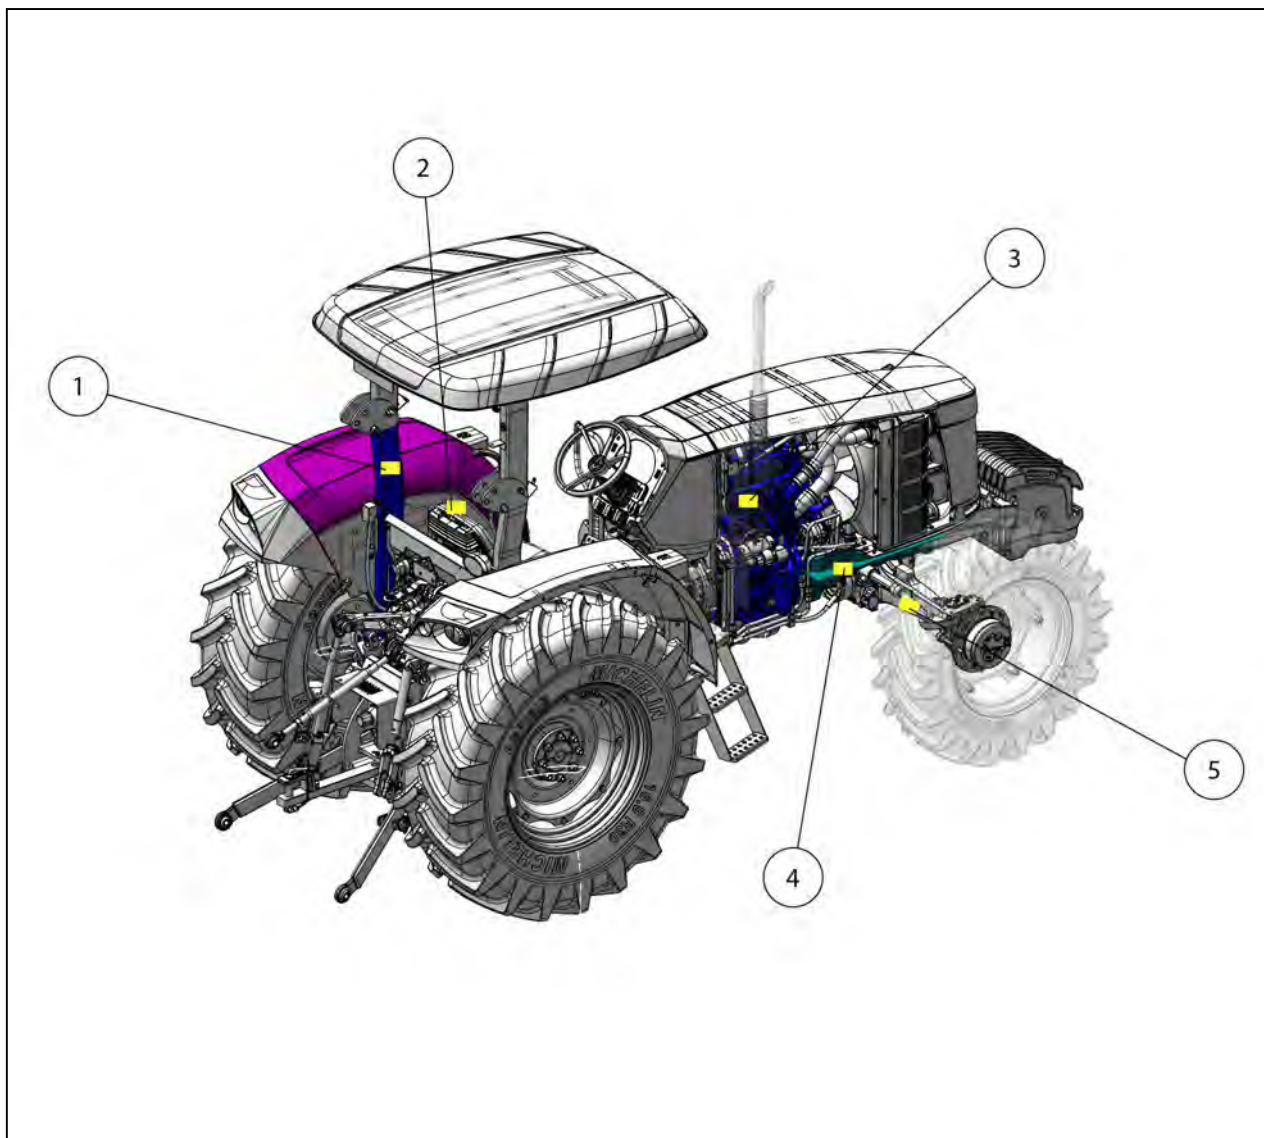


Fig. 1

- (1) ROPS serial number
- (2) Name plate
- (3) Engine serial number

- (4) Chassis serial number
- (5) Front axle serial number

1.2 Tractor identification

Model: _____

Serial number: _____

Engine serial number: _____

Owner's name: _____

Street: _____

Postcode: _____

Town: _____

County: _____

Country: _____

Dealer code: _____

Tractor received from (tick one of the following):

☐ Factory ☐ Other dealer (transfer)

Notes: _____

2. Safety instructions and safety points - Warranty

2.1 Introduction	17
2.1.1 Introduction - Safety instructions	17
2.2 Safety — Symbols and terms	19
2.2.1 Safety — Symbols and terms	19
2.3 Safety decals and instructions	20
2.3.1 Checking and replacing the safety decals and instructions	20
2.3.2 Presentation and location of the safety decals and instructions	21
2.4 General safety instructions	26
2.4.1 Awareness of the safety instructions and symbols	26
2.4.2 Operator familiarity in the use of the tractor	26
2.4.3 Filling the fuel tank	27
2.4.4 Mounting and dismounting the operator's seat	27
2.4.5 Mandatory procedure before dismounting the tractor	27
2.5 Special instructions	28
2.5.1 Specific recommendations for agricultural and forestry tractors	28
2.6 Special safety instructions for preparing the tractor for use	30
2.6.1 Protective clothing	30
2.6.2 Safety devices and items	30
2.6.3 Checking the tractor	30
2.7 Specific safety instructions for starting the tractor	32
2.7.1 Protection of persons other than the operator	32
2.7.2 Start up safely	32
2.7.3 Checks to be carried out after start-up	33
2.8 Specific safety instructions for using the tractor	34
2.8.1 General instructions	34
2.8.2 Protection of persons other than the operator	35
2.8.3 Overturning	35
2.8.4 Tractor towing	38
2.8.5 Regulatory data on maximum permitted trailed weights	38
2.8.6 Road use	39
2.8.7 Park brake	40
2.8.8 Power take-off	40
2.8.9 Implements	41
2.8.10 Front-end loader	44
2.9 Specific safety instructions for servicing the tractor	45
2.9.1 Pollution warning to observe when servicing the tractor	45
2.9.2 General instructions	45
2.9.3 Handling instructions	46
2.9.4 Special instructions for cleaning the tractor	47
2.10 Protective structures	48
2.10.1 Protective structures: use and accreditation	48
2.10.2 ROPS (Roll Over Protective Structure)	48
2.10.3 Seat belt	48
2.11 Warranty	49
2.11.1 General	49
2.11.2 Pre-delivery inspection and commissioning on the user's premises	49
2.11.3 Warranty procedure	49

Table of contents

2.11.4 Procedure to follow if changing region	49
2.11.5 Servicing during and after the warranty period	50

2.1 Introduction

2.1.1 Introduction - Safety instructions

Operator's Manual

IMPORTANT: *This manual must always be kept with the tractor. For extra copies, contact your Massey Ferguson dealer.*

NOTE: *This manual is for all users of Massey Ferguson tractors. The availability of the attachments indicated, on the basic tractor or as accessories, may vary according to the region in which the tractor is used. To find out which attachments are available in a region, contact a Massey Ferguson dealer.*

This manual enables the owner and the operator to operate the tractor appropriately under normal conditions of use. Providing they follow the instructions carefully, the tractor will give many years of service in the Massey Ferguson tradition.

During commissioning of the equipment by the Massey Ferguson dealer on the user's premises, the user must ensure that the operating and servicing instructions are properly understood. If the user has any doubt regarding the operation or servicing of the tractor, the Massey Ferguson dealer should always be contacted. It is essential that these instructions are understood and followed.

This manual covers all operating and safety instructions relevant to the Massey Ferguson tractor. For implements and accessories that may be installed at the time of the tractor's delivery or later, the user must refer to the Operator's Manuals relating to these implements and accessories.

This chapter supplements any safety instructions given in other chapters of this manual. It lists safety-related situations that may be encountered during the normal operating and servicing of the tractor with the purpose of enabling the user to work in complete safety.

Depending on the implements and accessories used, and the working conditions on-site or in the servicing area, additional precautions should be followed. Massey Ferguson cannot exercise direct control over the commissioning, operation, inspection, lubrication or servicing of the tractor. Consequently, Massey Ferguson cannot be held responsible if the user fails to take appropriate safety precautions for the implements and accessories used, or for the working conditions on-site or in the servicing area.



WARNING:

It is your responsibility to read and understand the instructions that appear in this chapter before using the tractor. They must be followed by the user.

Servicing, spare parts, accessories and conditions of use

The user must perform daily servicing on the tractor and keep a logbook of operating hours.

Only genuine Massey Ferguson replacement parts should be used when the need arises. Massey Ferguson dealers supply these genuine parts. Contact your dealer if you require any advice on their installation and use. Massey Ferguson cannot be held responsible if the owner uses parts other than the genuine parts sold by Massey Ferguson dealers. Similarly, only accessories specifically adapted to the tractor should be used.

This tractor is designed for normal farming activities only. Use of the tractor for any other activity, particularly forestry work, is considered to be contrary to normal use of the tractor.

If the tractor is to be used in abnormal conditions that could cause damage to it, such as in deep water or in paddy fields, consult a Massey Ferguson dealer to obtain special instructions.

IMPORTANT: *Massey Ferguson under no circumstances covers damage caused by the failure to observe the conditions of use, servicing and repair for its tractors. There is thus no justification for a warranty claim if the user fails to observe the recommendations for use, servicing and repair in this manual.*

IMPORTANT: *Massey Ferguson accepts no responsibility in the event of damage to equipment or personal injury resulting from the failure to observe the conditions of use, servicing and repair for its tractors.*

2. Safety instructions and safety points - Warranty

Always consult a Massey Ferguson dealer:

- For any advice regarding the conditions of use, servicing and repair for the tractor
- If there is any doubt regarding the safety instructions to be observed when using the tractor
- For any adjustments that may be necessary
- To order genuine spare parts
- In the event of after-sales problems
- If you have any questions relating to the tractor, genuine parts or implements and accessories that can be adapted for the tractor.

2.2 Safety — Symbols and terms

2.2.1 Safety — Symbols and terms

Signal



This safety alert symbol means **CAUTION! BE ALERT! YOUR SAFETY DEPENDS ON IT!**

The safety alert symbol identifies important safety notices on machines, safety signs, in instruction books or elsewhere. When you see this symbol, be alert to the risk of injury or death. Follow the instructions in the safety notice.

SAFETY is paramount! Why?

- ACCIDENTS DISABLE AND KILL
- ACCIDENTS ARE COSTLY
- ACCIDENTS CAN BE AVOIDED

Terms

The terms **DANGER**, **WARNING** and **CAUTION** are used with the safety alert symbol. It is essential to learn how to recognize these safety messages and to follow the recommended safety measures and instructions.



DANGER:

indicates an imminently hazardous situation which, if not avoided, will result in DEATH or VERY SERIOUS INJURY.



WARNING:

indicates a potentially hazardous situation which, if not avoided, could result in DEATH or SERIOUS INJURY.



CAUTION:

indicates a potentially hazardous situation which, if not avoided, may result in MINOR or MODERATE INJURY.

The terms **IMPORTANT** and **NOTE** are not directly related to personal safety, but are used to provide additional information and advice on the operation or maintenance of equipment.

IMPORTANT: *identifies specific instructions or procedures which, if not strictly applied, could damage or destroy the tractor, its equipment or the surrounding area.*

NOTE: *identifies points of particular interest for the most effective and suitable operation or repair.*

2.3 Safety decals and instructions

2.3.1 Checking and replacing the safety decals and instructions



WARNING:

Never remove or obscure the safety decals and instructions.

Replace any safety decals and instructions that are illegible or missing. Replacement decals are available from the dealer in the event of loss or damage. If a second-hand tractor has been purchased, check that all safety and instruction decals are correct, legible and in the correct location: To do this, refer to the section on the presentation and location of decals.

2.3.2 Presentation and location of the safety decals and instructions

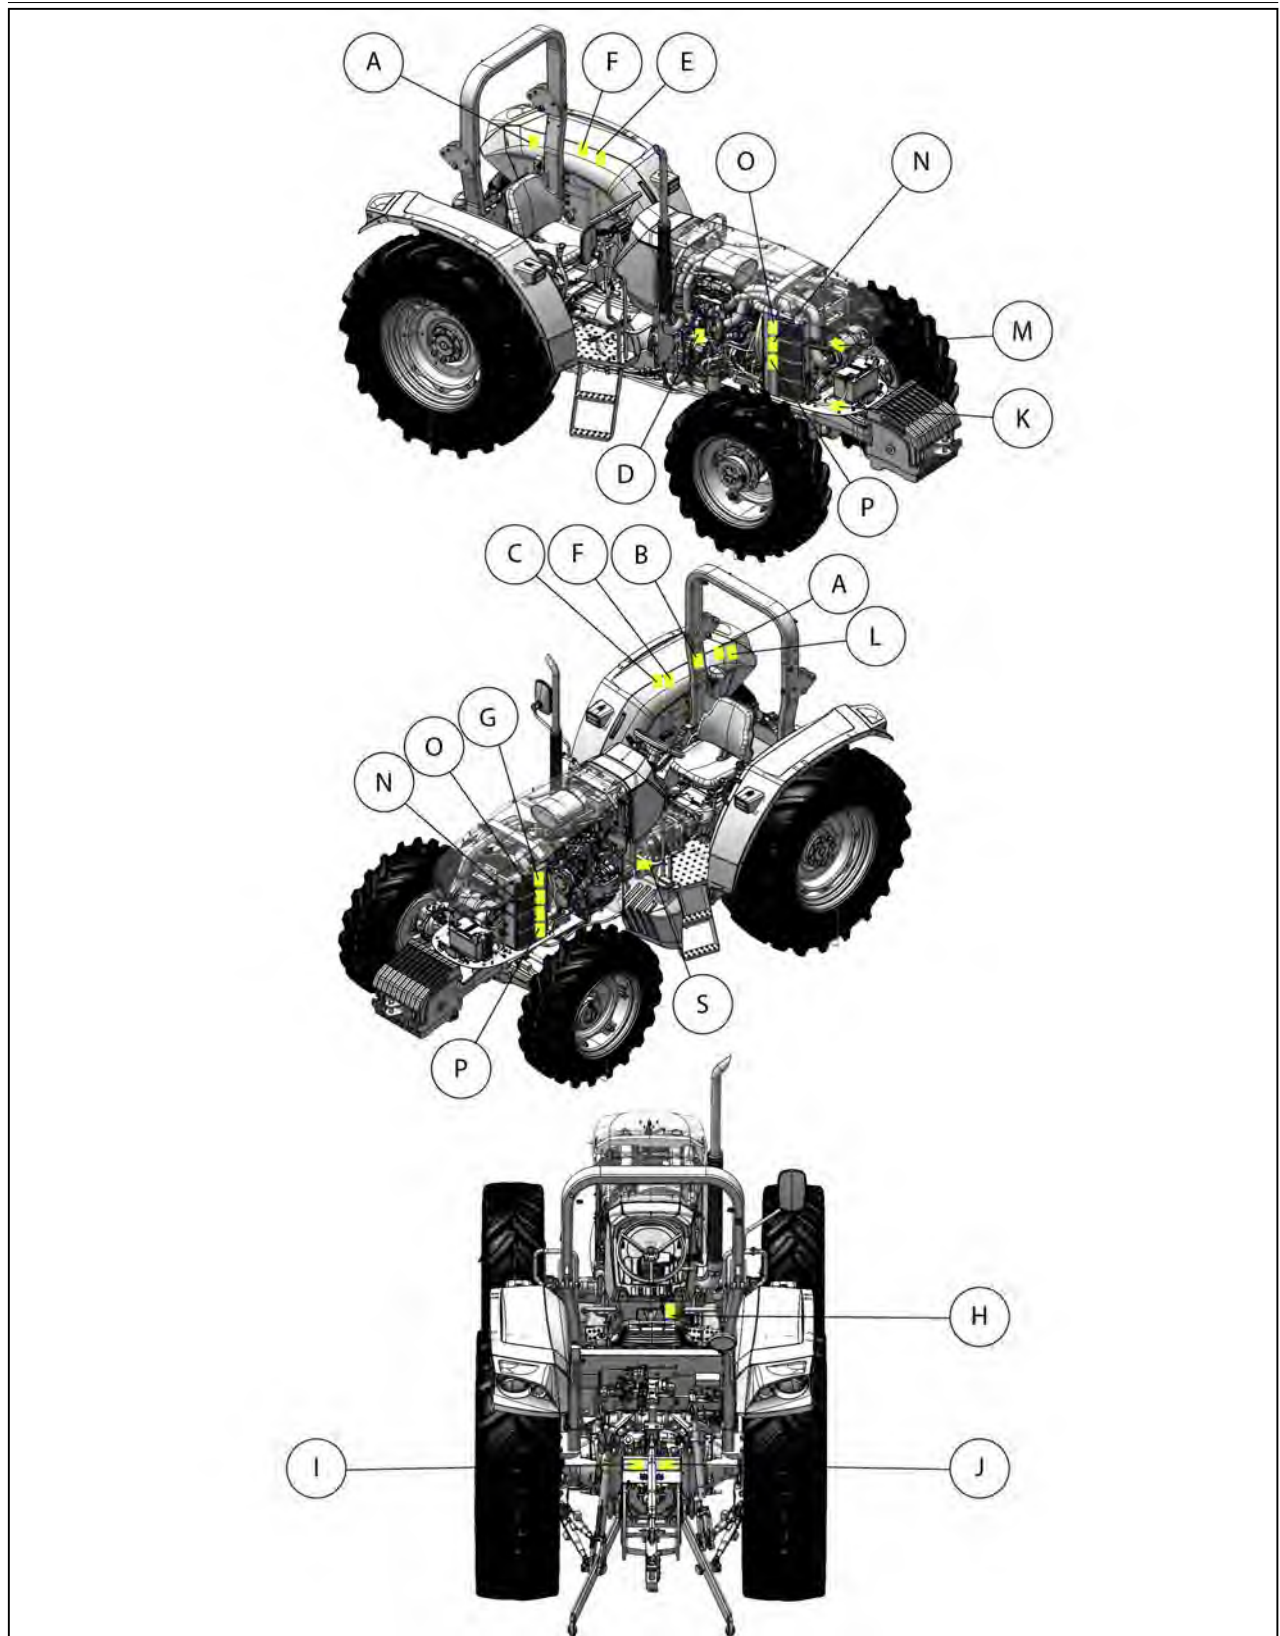
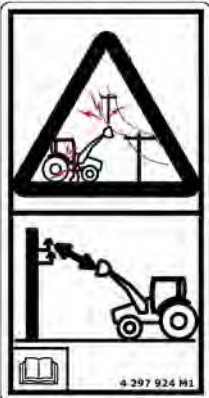
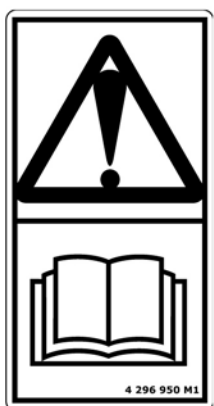




Fig. 1

2. Safety instructions and safety points - Warranty

	• 4392020M1 ((A)) • WARNING: Crushing hazard between tractor and implement. Stand outside of tractor tire when using external controls for 3-point linkage. Do not stand between tractor and implement.
	• 4296960M1 ((B)) • WARNING: Falling or crushing hazard if the tractor overturns Keep seat belt fastened snugly when operating, do not jump if tractor starts to tip.
	• 4297924M1 ((C)) • DANGER: Electrocution hazard Tractors with a front loader: Exercise extreme caution to avoid coming into contact with power lines. To avoid personal injury, read the Operator's Manual for safety information and operating instructions before operating the tractor.
	• 4296981M2 ((D)) • DANGER: Runaway machine and runover hazards Only start the engine when seated in the seat with the PTO disengaged and the transmission in the neutral position. DO NOT short across starter terminals to start engine.

	• 4296946M1 ((E)) • WARNING: Runaway machine and runover hazards Shut off engine and remove key before performing maintenance or repair work.
	• 4296962M1 ((F)) • DANGER: Falling and crushing hazard. To avoid personal injury, read the Operator's Manual for safety information and operating instructions before operating the tractor. Do not sit on the tractor fenders.
	• 4375885M1 ((G)) • WARNING: Risk of burning Keep away from hot engine components when engine has been running. Shut off engine, remove key and wait for system to cool before performing maintenance or repair work. Refer to the instructions in the technical manual when removing and reconditioning.
	• 4296950M1 ((H)) • WARNING: To avoid personal injury, read the Operator's Manual for safety information and operating instructions before operating the tractor.

2. Safety instructions and safety points - Warranty

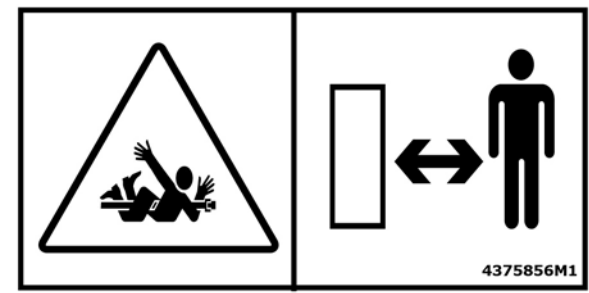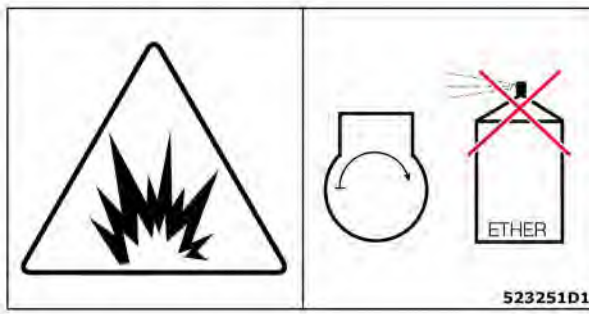	• 4375856M1 ((I)) • DANGER: Entanglement hazard PTO shaft. Stand clear of rotating shafts. Keep all driveline, tractor and equipment guards in place during operation.
	• 4297148M1 ((J)) • WARNING: Falling hazard Do not step on PTO shield.
	((K)) Not used
	((L)) Not used
	• 523251D1 ((M)) • WARNING: Explosion hazard. Never use starter fluid or aerosol sprays.

 4 296 944 M1	• 4296944M1 ((N)) • WARNING: Entanglement hazard in belt drives Keep hands clear of rotating parts and belts while engine is running. Shut off engine and remove key before performing maintenance or repair work. Refer to the instructions in the technical manual when removing and reconditioning.
 4 296 971 M1	• 4296971M1 ((O)) • WARNING: Shearing hazard – engine fan. Keep your hands away from the fan and the belts when the engine is running. Shut off engine and remove key before performing maintenance or repair work. Refer to the instructions in the technical manual when removing and reconditioning.
 4 296 967 M1	• 4296967M1 ((P)) • WARNING: Burn hazard – hot surfaces. Keep away from hot engine components when engine has been running. Wait for system to cool before performing maintenance or repair work.
 S ≤ 20 mg / Kg ULTRA LOW SULFUR FUEL ONLY ACW0769200	• ACW0769200 ((S)) • WARNING: Only use diesel fuel with very low sulfur content: S ≤ 20 mg/kg. To avoid personal injury, read the Operator's Manual for safety information and operating instructions before operating the tractor.

2.4 General safety instructions

2.4.1 Awareness of the safety instructions and symbols

The operator must observe the safety instructions in order to ensure his/her own safety and the safety of other persons. Before using the tractor, familiarize yourself with:

- The instructions in this manual
- All of the safety decals and instructions on the tractor
- All the usual protective measures that should be taken when working



WARNING:

In some of the illustrations in this manual, the safety panels and guards are removed for reasons of clarity. Never use the tractor if these parts are not in place. If some of these parts have been removed for repair purposes, they must be refitted before use.

2.4.2 Operator familiarity in the use of the tractor



WARNING:

The operator must not drink alcohol or take any medication that leads to a loss of concentration or coordination. If taking medication, whether prescribed or not, always seek medical advice with regard to your ability to operate machinery safely.



Fig. 2

- Conditions for use of the tractor:
 - to be familiar with operating an agricultural tractor
 - to be trained in the operation of the tractor
 - to have read and understood this entire manual. Always consult the dealer if there is any doubt or lack of understanding
 - find out about the rules and safety regulations applicable to the work you are doing. Some regulations specify that no one under the age of 16 may operate power machinery, for example. This includes tractors. It is your responsibility to know what these regulations are and to observe them in the operating area or situation. These rules include, but are not limited to, the safety instructions relating to the correct operation of the tractor as described in this manual.
- Do not allow children or unqualified persons to operate the tractor.
- Do not allow children to use the instructor seat.
- The instructor seat is only intended for short periods of use.



WARNING:

In poor conditions, slow down and be extra careful, and engage 4-wheel drive if fitted.

It is important to have good knowledge of the operation of the tractor as well as all of its accessories and attached implements.

Remember that rain, snow, ice, loose gravel or soft ground can change the performance of the tractor.

2.4.3 Filling the fuel tank



WARNING:

- Always switch off the engine before filling up.
- Do not smoke while refuelling the tractor. Keep away from naked flames.
- Proceed with care to prevent any splashes.

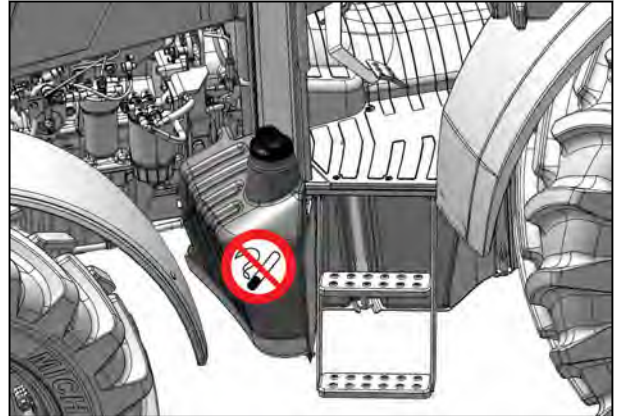


Fig. 3

2.4.4 Mounting and dismounting the operator's seat

- Always use three-point contact with the tractor and face the tractor when mounting and dismounting the operator's seat. (Three-point contact means that both hands and one foot or one hand and both feet are in contact with the tractor at all times when getting on and off).
- Clean your shoes and wipe your hands before getting in the tractor.
- Use handrails, grab handles, ladders or steps (if fitted) when getting on and off.
- Do not use the control levers as a handhold.
- Do not step on pedals when getting in and out.
- Never attempt to mount or dismount a moving tractor.
- Never jump off a tractor when it is running except in an emergency.

2.4.5 Mandatory procedure before dismounting the tractor

Before getting out of the operator's seat, observe this procedure:

Procedure

1. Apply the parking brake in order to immobilize the tractor.
2. Place the reverse shuttle lever in the neutral position.
3. Disengage the rear PTO.
4. Lower the implements to the ground.
5. Stop the engine as per chapter Operation, Engine: Stopping the engine.
Make sure that the engine is not idling.
6. Remove the ignition key.

2.5 Special instructions

2.5.1 Specific recommendations for agricultural and forestry tractors

Hot surfaces

Be careful of surfaces which may be hot, in particular engine and hydraulics components, during operation and services.

FOPS (Falling Object Protection Structure)

- Alternative 1 (no FOPS available): Protection against falling objects is not provided, unless clearly specified otherwise.
- Alternative 2 (optional FOPS fitted): Protection against falling objects is provided under OECD-code 10 (Energy level 1365 J). If a higher protection level is necessary, additional safety equipment must be installed on the tractor (no original equipment available).

OPS (Operator Protection Structure)

- Alternative 1 (no OPS available): Protection against penetrating objects is not provided, unless clearly specified otherwise.
- Alternative 2 (optional OPS fitted): Protection against penetrating objects is provided under ISO 8084 (Machinery for forestry). Before operating, check if protection is adapted to your work conditions.

Dangerous substances for tractors with ROPS

NOTE:

A mark indicating the ROPS' level of protection against hazardous substances is located on the ROPS.

IMPORTANT:

Always wear personal protective equipment when handling the filters.

- Tractor without cab: Protection against hazardous substances (agricultural chemicals etc.) in the form of dust, aerosols and fumes is not provided. These tractors are not intended for spraying pesticides without additional protection. Personal protective equipment must be used according to the chemical manufacturer's recommendations.

Dangerous substances for tractors with a cab

NOTE:

A mark indicating the cab's level of protection against hazardous substances is located on the front left-hand pillar inside the cab. For platform tractors, this mark is displayed on the arch.

IMPORTANT:

Always wear personal protective equipment when handling the filters.

- Alternative 1 (less cab or cab under category 1): Protection against hazardous substances (agricultural chemicals etc.) in the form of dust, aerosols and fumes is not provided. Tractors equipped with a cab are not intended for spraying pesticides without additional protection. Personal protective equipment must be used according to the chemical manufacturer's recommendations.



- Alternative 2 (cab under category 2): Protection against hazardous substances (agricultural chemicals etc.) in the form of aerosols and fumes is not provided. Tractors equipped with a cab are not intended for spraying pesticides without additional protection. Personal protective equipment must be used according to the chemical manufacturer's recommendations.

Protection against dust (category 2 of standard EN15695-1:2009) is provided under the following conditions:

- all roof hatch, cab doors and cab windows are closed
 - cab ventilation is running
 - air filter is clean and is serviced under maintenance interval (refer to service guide). When replacing the filter, only a filter certified for at least category 2 cabs is permitted. Activated carbon filters do not improve the cab's level of protection. Always refer to the user instructions provided with the filter.
- Alternative 3 (cab under category 4): The cab is equipped with protection against hazardous substances (agricultural chemicals etc.) in the form of dust, aerosols and fumes. For pesticide spraying, tractors equipped with a cab must also have a specially designed filter for category 4 cabs.

This protection (category 4 of standard EN 15695-1:2009) is provided under the following conditions:

- all roof hatch, cab doors and cab windows are closed
- cab ventilation is running
- air filter is clean and is serviced under maintenance interval (refer to service guide).

Given the risk associated with contaminants entering the cab when opening the door to enter or exit the vehicle, this protection is designed to supplement, but not replace, the use of personal protective equipment when working in an environment with aerosols and/or fumes, such as pesticides. Personal protective equipment must be used according to the chemical manufacturer's recommendations.

When replacing the filter, only a filter certified for at least category 4 cabs is permitted.

Always refer to the user instructions provided with the filter. Once spraying operations are complete, return the special filter to its case and replace it with a standard anti-dust filter.

2.6 Special safety instructions for preparing the tractor for use

2.6.1 Protective clothing

Wear all the protective clothing and equipment with which you are provided or which is appropriate for certain working conditions.

For example, you may need:

- A safety helmet
- Safety glasses
- A protective mask
- Ear protection
- A respirator or filter mask
- Inclement weather clothing
- Reflective clothing
- Gloves suitable for the work to be carried out
- Safety footwear



Fig. 4



DANGER:

Do not wear loose clothing, jewelry or other items and tie up long hair which could catch on controls or other parts of the tractor.

2.6.2 Safety devices and items

Ensure that all safety devices and items are in good condition and are installed in accordance with the specifications.



WARNING:

The location of all these safety devices and items must be known and their use mastered. Never take off, remove or disconnect these safety devices and items.

Standard safety devices and items according to country regulations

- ROPS (Roll Over Protective Structure)
- Seat belt
- Power take-off guard
- SMV warning triangle
- Signaling lights
- Safety signs
- Fire extinguisher
- First aid kit



WARNING:

Also make sure you know the emergency numbers.



Fig. 5

Additional devices and items

Depending on the work to be carried out, other safety devices and items may be required; for example, guards or additional lights and signs.

2.6.3 Checking the tractor

Check the tractor and ensure that all systems are in good operational condition before beginning the working day. Pay particular attention to the points mentioned below.

This as a preview PDF file from **best-manuals.com**



Download full PDF manual at **best-manuals.com**