



Robex 260LC-9S

CRAWLER EXCAVATOR



SERVICE MANUAL

FOREWORD	9
1. Structure	9
2. How To Read The Service Manual	10
3. Conversion Table	11
SECTION 1 GENERAL	17
Group 1 Safety	18
Group 2 Specifications	27
1. Major Component	27
2. Specifications	28
3. Working Range	31
4. Weight	33
5. Lifting Capacities	35
6. Bucket Selection Guide	38
7. Undercarriage	40
8. Specifications For Major Components	42
9. Recommended Oils	45
SECTION 2 STRUCTURE AND FUNCTION	46
Group 1 Pump Device	47
1. Structure	47
2. Function	53
Group 2 Main Control Valve	66
1. Structure	66
2. Hydraulic Circuit	72
3. Function	73
Group 3 Swing Device	101
1. Structure	101
2. Function	104
Group 4 Travel Device	112
1. Construction	112
Group 5 Rcv Lever	122
1. Structure	122
2. Functions	125
Group 6 Rcv Pedal	129
1. Structure	129
2. Function	131
SECTION 3 HYDRAULIC SYSTEM	135
Group 1 Hydraulic Circuit (cluster Type 1)	136
Hydraulic Circuit (cluster Type 2)	137
Group 2 Main Circuit	138
1. Suction And Delivery Circuit	138

2. Return Circuit	139
3. Drain Circuit.	140
Group 3 Pilot Circuit	141
1. Suction, Delivery And Return Circuit	142
2. Safety Solenoid Valve (safety Lever)	143
3. Boom Priority System.	144
4. Travel Speed Control System	145
5. Main Relief Pressure Change Circuit	146
6. Arm Regeneration Cut System (cluster Type 1)	147
7. Swing Parking Brake Release	148
8. Swing Priority System.	149
Group 4 Single Operation	150
1. Boom Up Operation.	150
2. Boom Down Operation	151
3. Arm In Operation.	152
4. Arm Out Operation	153
5. Bucket In Operation	154
6. Bucket Out Operation.	155
7. Swing Operation	156
8. Travel Forward And Reverse Operation	158
Group 5 Combined Operation	160
1. Outline	160
2. Combined Swing And Boom Up Operation.	161
3. Combined Swing And Arm Operation	162
4. Combined Swing And Bucket Operation.	163
5. Combined Swing And Travel Operation	164
6. Combined Boom And Travel Operation	165
7. Combined Arm And Travel Operation	166
8. Combined Bucket And Travel Operation.	167
SECTION 4 ELECTRICAL SYSTEM	168
Group 1 Component Location	169
1. Location 1.	169
2. Location 2.	170
Memorandum.	175
1. Power Circuit (cluster Type 1)	176
2. Starting Circuit (cluster Type 1)	180
3. Charging Circuit (cluster Type 1)	184
4. Head And Work Light Circuit (cluster Type 1)	188
5. Beacon Lamp And Cab Light Circuit (cluster Type 1)	192
6. Wiper And Washer Circuit (cluster Type 1).	196
Group 3 Electrical Component Specification.	206
Group 4 Connectors	214
1. Connector Destination	214

2. Connection Table For Connectors	218
--	-----

SECTION 5 MECHATRONICS SYSTEM 237

Group 1 Outline (cluster Type 1)	238
Outline (cluster Type 2)	240
Group 2 Mode Selection System (cluster Type 1)	242
1. Power Mode Selection System	242
2. Work Mode Selection System	243
3. User Mode Selection System	244
Mode Selection System (cluster Type 2)	245
1. Power Mode Selection System	245
2. Work Mode Selection System	246
3. User Mode Selection System	247
Group 3 Automatic Deceleration System (cluster Type 1)	248
1. When Auto Idle Pilot Lamp On 2. When Auto Idle Pilot Lamp Off	248
Automatic Deceleration System (cluster Type 2)	249
1. When Auto Idle Pilot Lamp On 2. When Auto Idle Pilot Lamp Off	249
Group 4 Power Boost System (cluster Type 1)	250
Power Boost System (cluster Type 2)	251
Group 5 Travel Speed Control System (cluster Type 1)	252
Travel Speed Control System (cluster Type 2)	253
Group 6 Automatic Warming Up System (cluster Type 1)	254
Automatic Warming Up System (cluster Type 2)	255
Group 7 Engine Overheat Prevention System (cluster Type 1)	256
Engine Overheat Prevention System (cluster Type 2)	257
Group 8 Variable Power Control System (cluster Type 1)	258
Group 9 Attachment Flow Control System (cluster Type 1)	259
Group 10 Anti-restart System	260
1. Anti-restart Function	260
Group 11 Self-diagnostic System (cluster Type 1)	261
3. Machine Error Codes Table	262
Self-diagnostic System (cluster Type 2)	265
3. Error Codes Table	266
Group 12 Engine Control System	268
1. Mcu (machine Control Unit) 2. Mcu Assembly	268
3. Exchange Method Of The Rom In The Cluster (type 2)	269
Group 13 Eppr Valve (cluster Type 1)	270
1. Pump Eppr Valve.	270
Eppr Valve (cluster Type 2)	271
1. Pump Eppr Valve.	271
2. Boom Priority Eppr Valve (cluster Type 1,2)	274
Group 14 Monitoring System (cluster Type 1)	276

1. Outline	276
2. Cluster	276
3. Cluster Connector	278
Monitoring System (cluster Type 2).	299
1. Outline Monitoring System Consists Of The Monitor Part And Switch Part. The Monitor Part Gives Warnings When Any Abnormality.	299
Group 15 Fuel Warmer System	308
1. Specification.	308
2. Operation	308
3. Electric Circuit	308
SECTION 6 TROUBLESHOOTING.	309
Group 1 Before Troubleshooting.	310
1. Introduction	310
2. Diagnosing Procedure	311
Group 2 Hydraulic And Mechanical System	313
1. Introduction	313
2. Drive System	314
3. Hydraulic System.	316
4. Swing System	318
5. Travel System	322
6. Attachment System.	327
Group 3 Electrical System (cluster Type 1)	333
1. When Starting Switch Is Turned On, Monitor Panel Display Does Not Appear.	333
3. Battery Charging Warning Lamp Lights Up(starting Switch : On)	335
4. When Coolant Overheat Warning Lamp Lights Up (engine Is Started).	336
5. When Air Cleaner Warning Lamp Lights Up (engine Is Started).	337
6. When Engine Oil Pressure Warning Lamp Lights Up (engine Is Started).	338
7. When Hydraulic Oil Temperature Warning Lamp Lights Up (engine Is Started)	339
8. When Coolant Temperature Gauge Does Not Operate (hcespn 304, Fmi 3 Or 4)	340
9. When Fuel Gauge Does Not Operate(hcespn 301, Fmi 3 Or 4).	341
10. When Safety Solenoid Does Not Operate.	342
11. When Travel Speed 1, 2 Does Not Operate (hcespn 167, Fmi 5 Or 6)	343
12. When Engine Does Not Start (Lights Up Condition)	344
13. When Starting Switch On Does Not Operate	345
14. When Starting Switch Is Turned On, Wiper Motor Does Not Operate	346
15. When Starting Switch Is Turned On, Head Lamp Does Not Lights Up.	347
16. When Starting Switch Is Turned On, Work Lamp Does Not Lights Up.	348
Group 3 Electrical System (cluster Type 2)	349
1. When Starting Switch Is Turned On, Monitor Panel Display Does Not Appear.	349

2. Communication Error Flashes On The Cluster	350
3. Battery Charging Warning Lamp Lights Up(starting Switch : On)	351
4. When Coolant Overheat Warning Lamp Lights Up(engine Is Started)	352
5. When Air Cleaner Warning Lamp Lights Up(engine Is Started)	353
6. When Engine Oil Pressure Warning Lamp Lights Up(engine Is Started)	354
7. When Hydraulic Oil Temperature Warning Lamp Lights Up(engine Is Started)	355
8. When Coolant Temperature Gauge Does Not Operate	356
9. When Fuel Gauge Does Not Operate(check Warning Lamp On/off)	357
10. When Safety Solenoid Does Not Operate.	358
11. When Travel Speed 1, 2 Does Not Operate.	359
12. When Engine Does Not Start (Lights Up Condition)	360
13. When Starting Switch On Does Not Operate	361
14. When Starting Switch Is Turned On, Wiper Motor Does Not Operate	362
15. When Starting Switch Is Turned On, Head Lamp Does Not Lights Up.	363
16. When Starting Switch Is Turned On, Work Lamp Does Not Lights Up.	364
Group 4 Mechatronics System (cluster Type 1)	365
1. All Actuators Speed Are Slow	365
2. Engine Stall	367
3. Malfunction Of Cluster Or Mode Selection System	369
4. Malfunction Of Accel Dial	370
5. Auto Decel System Does Not Work.	372
6. Malfunction Of Pump 1 Pressure Sensor	374
7. Malfunction Of Pump 2 Pressure Sensor	376
8. Malfunction Of Pump 3 Pressure Sensor	378
9. Malfunction Of Swing Pressure Sensor	380
10. Malfunction Of Boom Up Pressure Sensor	382
11. Malfunction Of Power Max	384
12. Malfunction Of Boom Priority Eppr Valve	386
13. Malfunction Of Arm Regeneration Solenoid	387
Mechatronics System (cluster Type 2)	389
1. All Actuators Speed Are Slow	389
2. Engine Stall	391
3. Malfunction Of Cluster Or Mode Selection System	393
4. Malfunction Of Accel Dial	394
5. Auto Decel System Does Not Work.	396
6. Malfunction Of Pump 1 Pressure Sensor	398
7. Malfunction Of Pump 2 Pressure Sensor	400
8. Malfunction Of Pump 3 Pressure Sensor	402
9. Malfunction Of Power Max.	404
10. Malfunction Of Boom Priority Eppr Valve	406
SECTION 7 MAINTENANCE STANDARD	407
Group 1 Operational Performance Test	408
1. Purpose.	408

2. Terminology	409
3. Operation For Performance Tests	410
Group 2 Major Component.	430
1. Main Pump	430
2. Main Control Valve	431
3. Swing Device	432
4. Travel Motor.	433
5. Rcv Lever.	434
6. Rcv Pedal.	435
7. Turning Joint	436
8. Cylinder.	437
Group 3 Track And Work Equipment.	438
1. Track	438
2. Work Equipment	443
SECTION 8 DISASSEMBLY AND ASSEMBLY	444
Group 1 Precautions	445
1. Removal Work	445
2. Install Work	446
3. Completing Work.	447
Group 2 Tightening Torque.	448
1. Major Components	448
2. Torque Chart	449
Group 3 Pump Device	451
1. Removal And Install	451
2. Main Pump (1/2)	453
3. Regulator (1/2).	463
Group 4 Main Control Valve	474
1. Removal And Install Of Motor	474
2. Structure	475
3. Disassembly And Assembly	480
Group 5 Swing Device	495
1. Removal And Install Of Motor	495
2. Disassembly And Assembly Of Swing Motor.	496
3. Removal And Install Of Reduction Gear	509
4. Disassembly And Assembly Of Reduction Gear	510
Group 6 Travel Device	524
1. Removal And Install	524
2. Specification 1)	525
3. Disassembly.	529
4. Reassembly.	540
Group 7 Rcv Lever	555
1. Removal And Install	555
2. Disassembly And Assembly	556

Group 8 Turning Joint	569
1. Removal And Install	569
2. Disassembly And Assembly	570
Group 9 Boom, Arm And Bucket Cylinder	574
1. Removal And Install	574
2. Disassembly And Assembly	580
Group 10 Undercarriage	591
1. Track Link	591
2. Carrier Roller	592
3. Track Roller	593
4. Idler And Recoil Spring	594
Group 11 Work Equipment.	603
1. Structure	603
2. Removal And Install	604
SECTION 9 COMPONENT MOUNTING TORQUE	607
Group 1 Introduction Guide.	608
Group 2 Engine System	609
Group 3 Electric System	611
Group 4 Hydraulic System	613
Group 5 Undercarriage.	616
Group 6 Structure	618
Group 7 Work Equipment	622

FOREWORD

1. STRUCTURE

This service manual has been prepared as an aid to improve the quality of repairs by giving the serviceman an accurate understanding of the product and by showing him the correct way to perform repairs and make judgements. Make sure you understand the contents of this manual and use it to full effect at every opportunity.

This service manual mainly contains the necessary technical information for operations performed in a service workshop.

For ease of understanding, the manual is divided into the following sections.

SECTION 1 GENERAL

This section explains the safety hints and gives the specification of the machine and major components.

SECTION 2 STRUCTURE AND FUNCTION

This section explains the structure and function of each component. It serves not only to give an understanding of the structure, but also serves as reference material for troubleshooting.

SECTION 3 HYDRAULIC SYSTEM

This section explains the hydraulic circuit, single and combined operation.

SECTION 4 ELECTRICAL SYSTEM

This section explains the electrical circuit, monitoring system and each component. It serves not only to give an understanding electrical system, but also serves as reference material for trouble shooting.

SECTION 5 MECHATRONICS SYSTEM

This section explains the computer aided power optimization system and each component.

SECTION 6 TROUBLESHOOTING

This section explains the troubleshooting charts correlating **problems** to **causes**.

SECTION 7 MAINTENANCE STANDARD

This section gives the judgement standards when inspecting disassembled parts.

SECTION 8 DISASSEMBLY AND ASSEMBLY

This section explains the order to be followed when removing, installing, disassembling or assembling each component, as well as precautions to be taken for these operations.

SECTION 9 COMPONENT MOUNTING TORQUE

This section shows bolt specifications and standard torque values needed when mounting components to the machine.

The specifications contained in this shop manual are subject to change at any time and without any advance notice. Contact your HYUNDAI distributor for the latest information.

2. HOW TO READ THE SERVICE MANUAL

Distribution and updating

Any additions, amendments or other changes will be sent to HYUNDAI distributors.

Get the most up-to-date information before you start any work.

Filing method


1. See the page number on the bottom of the page.

File the pages in correct order.

2. Following examples shows how to read the page number.

Example 1

2 - 3

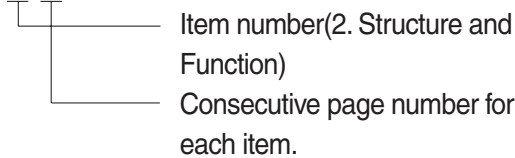

3. Additional pages : Additional pages are indicated by a hyphen(-) and number after the page number. File as in the example.

10 - 4

10 - 4 - 1

10 - 4 - 2

10 - 5

Added pages

Revised edition mark(①②③...)

When a manual is revised, an edition mark is recorded on the bottom outside corner of the pages.

Revisions

Revised pages are shown at the list of revised pages on the between the contents page and section 1 page.

Symbols

So that the shop manual can be of ample practical use, important places for safety and quality are marked with the following symbols.

Symbol	Item	Remarks
	Safety	Special safety precautions are necessary when performing the work.
		Extra special safety precautions are necessary when performing the work because it is under internal pressure.
	Caution	Special technical precautions or other precautions for preserving standards are necessary when performing the work.

3. CONVERSION TABLE

Method of using the Conversion Table

The Conversion Table in this section is provided to enable simple conversion of figures. For details of the method of using the Conversion Table, see the example given below.

Example

1. Method of using the Conversion Table to convert from millimeters to inches

Convert 55mm into inches.

- (1) Locate the number 50 in the vertical column at the left side, take this as (a), then draw a horizontal line from (a).
- (2) Locate the number 5 in the row across the top, take this as (b), then draw a perpendicular line down from (b).
- (3) Take the point where the two lines cross as (c). This point (c) gives the value when converting from millimeters to inches. Therefore, 55mm = 2.165 inches.

2. Convert 550mm into inches.

- (1) The number 550 does not appear in the table, so divide by 10 (Move the decimal point one place to the left) to convert it to 55mm.
- (2) Carry out the same procedure as above to convert 55mm to 2.165 inches.
- (3) The original value (550mm) was divided by 10, so multiply 2.165 inches by 10 (Move the decimal point one place to the right) to return to the original value.
This gives 550mm = 21.65 inches.

Millimeters to inches

(b)

1mm = 0.03937 in

	0	1	2	3	4	5	6	7	8	9
0		0.039	0.079	0.118	0.157	0.197	0.236	0.276	0.315	0.354
10	0.394	0.433	0.472	0.512	0.551	0.591	0.630	0.669	0.709	0.748
20	0.787	0.827	0.866	0.906	0.945	0.984	1.024	1.063	1.102	1.142
30	1.181	1.220	1.260	1.299	1.339	1.378	1.417	1.457	1.496	1.536
40	1.575	1.614	1.654	1.693	1.732	1.772	1.811	1.850	1.890	1.929
(a) 50	1.969	2.008	2.047	2.087	2.126	(c) 2.165	2.205	2.244	2.283	2.323
60	2.362	2.402	2.441	2.480	2.520	2.559	2.598	2.638	2.677	2.717
70	2.756	2.795	2.835	2.874	2.913	2.953	2.992	3.032	3.071	3.110
80	3.150	3.189	3.228	3.268	3.307	3.346	3.386	3.425	3.465	3.504
90	3.543	3.583	3.622	3.661	3.701	3.740	3.780	3.819	3.858	3.898

Millimeters to inches

1mm = 0.03937in

	0	1	2	3	4	5	6	7	8	9
0		0.039	0.079	0.118	0.157	0.197	0.236	0.276	0.315	0.354
10	0.394	0.433	0.472	0.512	0.551	0.591	0.630	0.669	0.709	0.748
20	0.787	0.827	0.866	0.906	0.945	0.984	1.024	1.063	1.102	1.142
30	1.181	1.220	1.260	1.299	1.339	1.378	1.417	1.457	1.496	1.536
40	1.575	1.614	1.654	1.693	1.732	1.772	1.811	1.850	1.890	1.929
50	1.969	2.008	2.047	2.087	2.126	2.165	2.205	2.244	2.283	2.323
60	2.362	2.402	2.441	2.480	2.520	2.559	2.598	2.638	2.677	2.717
70	2.756	2.795	2.835	2.874	2.913	2.953	2.992	3.032	3.071	3.110
80	3.150	3.189	3.228	3.268	3.307	3.346	3.386	3.425	3.465	3.504
90	3.543	3.583	3.622	3.661	3.701	3.740	3.780	3.819	3.858	3.898

Kilogram to Pound

1kg = 2.2046lb

	0	1	2	3	4	5	6	7	8	9
0		2.20	4.41	6.61	8.82	11.02	13.23	15.43	17.64	19.84
10	22.05	24.25	26.46	28.66	30.86	33.07	35.27	37.48	39.68	41.89
20	44.09	46.30	48.50	50.71	51.91	55.12	57.32	59.5	61.73	63.93
30	66.14	68.34	70.55	72.75	74.96	77.16	79.37	81.57	83.78	85.98
40	88.18	90.39	92.59	94.80	97.00	99.21	101.41	103.62	105.82	108.03
50	110.23	112.44	114.64	116.85	119.05	121.25	123.46	125.66	127.87	130.07
60	132.28	134.48	136.69	138.89	141.10	143.30	145.51	147.71	149.91	152.12
70	154.32	156.53	158.73	160.94	163.14	165.35	167.55	169.76	171.96	174.17
80	176.37	178.57	180.78	182.98	185.19	187.39	189.60	191.80	194.01	196.21
90	198.42	200.62	202.83	205.03	207.24	209.44	211.64	213.85	216.05	218.26

Liter to U.S. Gallon

1 ℓ = 0.2642 U.S.Gal

	0	1	2	3	4	5	6	7	8	9
0		0.264	0.528	0.793	1.057	1.321	1.585	1.849	2.113	2.378
10	2.642	2.906	3.170	3.434	3.698	3.963	4.227	4.491	4.755	5.019
20	5.283	5.548	5.812	6.076	6.340	6.604	6.869	7.133	7.397	7.661
30	7.925	8.189	8.454	8.718	8.982	9.246	9.510	9.774	10.039	10.303
40	10.567	10.831	11.095	11.359	11.624	11.888	12.152	12.416	12.680	12.944
50	13.209	13.473	13.737	14.001	14.265	14.529	14.795	15.058	15.322	15.586
60	15.850	16.115	16.379	16.643	16.907	17.171	17.435	17.700	17.964	18.228
70	18.492	18.756	19.020	19.285	19.549	19.813	20.077	20.341	20.605	20.870
80	21.134	21.398	21.662	21.926	22.190	22.455	22.719	22.983	23.247	23.511
90	23.775	24.040	24.304	24.568	24.832	25.096	25.631	25.625	25.889	26.153

Liter to U.K. Gallon

1 ℓ = 0.21997 U.K.Gal

	0	1	2	3	4	5	6	7	8	9
0		0.220	0.440	0.660	0.880	1.100	1.320	1.540	1.760	1.980
10	2.200	2.420	2.640	2.860	3.080	3.300	3.520	3.740	3.950	4.179
20	4.399	4.619	4.839	5.059	5.279	5.499	5.719	5.939	6.159	6.379
30	6.599	6.819	7.039	7.259	7.479	7.699	7.919	8.139	8.359	8.579
40	8.799	9.019	9.239	9.459	9.679	9.899	10.119	10.339	10.559	10.778
50	10.998	11.281	11.438	11.658	11.878	12.098	12.318	12.528	12.758	12.978
60	13.198	13.418	13.638	13.858	14.078	14.298	14.518	14.738	14.958	15.178
70	15.398	15.618	15.838	16.058	16.278	16.498	16.718	16.938	17.158	17.378
80	17.598	17.818	18.037	18.257	18.477	18.697	18.917	19.137	19.357	19.577
90	19.797	20.017	20.237	20.457	20.677	20.897	21.117	21.337	21.557	21.777

kgf · m to lbf · ft

1 kgf · m = 7.233 lbf · ft

	0	1	2	3	4	5	6	7	8	9
		7.2	14.5	21.7	28.9	36.2	43.4	50.6	57.9	65.1
10	72.3	79.6	86.8	94.0	101.3	108.5	115.7	123.0	130.2	137.4
20	144.7	151.9	159.1	166.4	173.6	180.8	188.1	195.3	202.5	209.8
30	217.0	224.2	231.5	238.7	245.9	253.2	260.4	267.6	274.9	282.1
40	289.3	296.6	303.8	311.0	318.3	325.5	332.7	340.0	347.2	354.4
50	361.7	368.9	376.1	383.4	390.6	397.8	405.1	412.3	419.5	426.8
60	434.0	441.2	448.5	455.7	462.9	470.2	477.4	484.6	491.8	499.1
70	506.3	513.5	520.8	528.0	535.2	542.5	549.7	556.9	564.2	571.4
80	578.6	585.9	593.1	600.3	607.6	614.8	622.0	629.3	636.5	643.7
90	651.0	658.2	665.4	672.7	679.9	687.1	694.4	701.6	708.8	716.1
100	723.3	730.5	737.8	745.0	752.2	759.5	766.7	773.9	781.2	788.4
110	795.6	802.9	810.1	817.3	824.6	831.8	839.0	846.3	853.5	860.7
120	868.0	875.2	882.4	889.7	896.9	904.1	911.4	918.6	925.8	933.1
130	940.3	947.5	954.8	962.0	969.2	976.5	983.7	990.9	998.2	10005.4
140	1012.6	1019.9	1027.1	1034.3	1041.5	1048.8	1056.0	1063.2	1070.5	1077.7
150	1084.9	1092.2	1099.4	1106.6	1113.9	1121.1	1128.3	1135.6	1142.8	1150.0
160	1157.3	1164.5	1171.7	1179.0	1186.2	1193.4	1200.7	1207.9	1215.1	1222.4
170	1129.6	1236.8	1244.1	1251.3	1258.5	1265.8	1273.0	1280.1	1287.5	1294.7
180	1301.9	1309.2	1316.4	1323.6	1330.9	1338.1	1345.3	1352.6	1359.8	1367.0
190	1374.3	1381.5	1388.7	1396.0	1403.2	1410.4	1417.7	1424.9	1432.1	1439.4

kgf/cm² to lbf/in²

1 kgf / cm² = 14.2233 lbf / in²

	0	1	2	3	4	5	6	7	8	9
		14.2	28.4	42.7	56.9	71.1	85.3	99.6	113.8	128.0
10	142.2	156.5	170.7	184.9	199.1	213.4	227.6	241.8	256.0	270.2
20	284.5	298.7	312.9	327.1	341.4	355.6	369.8	384.0	398.3	412.5
30	426.7	440.9	455.1	469.4	483.6	497.8	512.0	526.3	540.5	554.7
40	568.9	583.2	597.4	611.6	625.8	640.1	654.3	668.5	682.7	696.9
50	711.2	725.4	739.6	753.8	768.1	782.3	796.5	810.7	825.0	839.2
60	853.4	867.6	881.8	896.1	910.3	924.5	938.7	953.0	967.2	981.4
70	995.6	1010	1024	1038	1053	1067	1081	1095	1109	1124
80	1138	1152	1166	1181	1195	1209	1223	1237	1252	1266
90	1280	1294	1309	1323	1337	1351	1365	1380	1394	1408
100	1422	1437	1451	1465	1479	1493	1508	1522	1536	1550
110	1565	1579	1593	1607	1621	1636	1650	1664	1678	1693
120	1707	1721	1735	1749	1764	1778	1792	1806	1821	1835
130	1849	2863	1877	1892	1906	1920	1934	1949	1963	1977
140	1991	2005	2020	2034	2048	2062	2077	2091	2105	2119
150	2134	2148	2162	2176	2190	2205	2219	2233	2247	2262
160	2276	2290	2304	2318	2333	2347	2361	2375	2389	2404
170	2418	2432	2446	2460	2475	2489	2503	2518	2532	2546
180	2560	2574	2589	5603	2617	2631	2646	2660	2674	2688
200	2845	2859	2873	2887	2901	2916	2930	2944	2958	2973
210	2987	3001	3015	3030	3044	3058	3072	3086	3101	3115
220	3129	3143	3158	3172	3186	3200	3214	3229	3243	3257
230	3271	3286	3300	3314	3328	3343	3357	3371	3385	3399
240	3414	3428	3442	3456	3470	3485	3499	3513	3527	3542

TEMPERATURE

Fahrenheit-Centigrade Conversion.

A simple way to convert a fahrenheit temperature reading into a centigrade temperature reading or vice verse is to enter the accompanying table in the center or boldface column of figures.

These figures refer to the temperature in either Fahrenheit or Centigrade degrees.

If it is desired to convert from Fahrenheit to Centigrade degrees, consider the center column as a table of Fahrenheit temperatures and read the corresponding Centigrade temperature in the column at the left.

If it is desired to convert from Centigrade to Fahrenheit degrees, consider the center column as a table of Centigrade values, and read the corresponding Fahrenheit temperature on the right.

°C		°F	°C		°F	°C		°F	°C		°F
-40.4	-40	-40.0	-11.7	11	51.8	7.8	46	114.8	27.2	81	117.8
-37.2	-35	-31.0	-11.1	12	53.6	8.3	47	116.6	27.8	82	179.6
-34.4	-30	-22.0	-10.6	13	55.4	8.9	48	118.4	28.3	83	181.4
-31.7	-25	-13.0	-10.0	14	57.2	9.4	49	120.2	28.9	84	183.2
-28.9	-20	-4.0	-9.4	15	59.0	10.0	50	122.0	29.4	85	185.0
-28.3	-19	-2.2	-8.9	16	60.8	10.6	51	123.8	30.0	86	186.8
-27.8	-18	-0.4	-8.3	17	62.6	11.1	52	125.6	30.6	87	188.6
-27.2	-17	1.4	-7.8	18	64.4	11.7	53	127.4	31.1	88	190.4
-26.7	-16	3.2	-6.7	20	68.0	12.8	55	131.0	32.2	90	194.0
-26.1	-15	5.0	-6.7	20	68.0	12.8	55	131.0	32.2	90	194.0
-25.6	-14	6.8	-6.1	21	69.8	13.3	56	132.8	32.8	91	195.8
-25.0	-13	8.6	-5.6	22	71.6	13.9	57	134.6	33.3	92	197.6
-24.4	-12	10.4	-5.0	23	73.4	14.4	58	136.4	33.9	93	199.4
-23.9	-11	12.2	-4.4	24	75.2	15.0	59	138.2	34.4	94	201.2
-23.3	-10	14.0	-3.9	25	77.0	15.6	60	140.0	35.0	95	203.0
-22.8	-9	15.8	-3.3	26	78.8	16.1	61	141.8	35.6	96	204.8
-22.2	-8	17.6	-2.8	27	80.6	16.7	62	143.6	36.1	97	206.6
-21.7	-7	19.4	-2.2	28	82.4	17.2	63	145.4	36.7	98	208.4
-21.1	-6	21.2	-1.7	29	84.2	17.8	64	147.2	37.2	99	210.2
-20.6	-5	23.0	-1.1	35	95.0	21.1	70	158.0	51.7	125	257.0
-20.0	-4	24.8	-0.6	31	87.8	18.9	66	150.8	40.6	105	221.0
-19.4	-3	26.6	0	32	89.6	19.4	67	152.6	43.3	110	230.0
-18.9	-2	28.4	0.6	33	91.4	20.0	68	154.4	46.1	115	239.0
-18.3	-1	30.2	1.1	34	93.2	20.6	69	156.2	48.9	120	248.0
-17.8	0	32.0	1.7	35	95.0	21.1	70	158.0	51.7	125	257.0
-17.2	1	33.8	2.2	36	96.8	21.7	71	159.8	54.4	130	266.0
-16.7	2	35.6	2.8	37	98.6	22.2	72	161.6	57.2	135	275.0
-16.1	3	37.4	3.3	38	100.4	22.8	73	163.4	60.0	140	284.0
-15.6	4	39.2	3.9	39	102.2	23.3	74	165.2	62.7	145	293.0
-15.0	5	41.0	4.4	40	104.0	23.9	75	167.0	65.6	150	302.0
-14.4	6	42.8	5.0	41	105.8	24.4	76	168.8	68.3	155	311.0
-13.9	7	44.6	5.6	42	107.6	25.0	77	170.6	71.1	160	320.0
-13.3	8	46.4	6.1	43	109.4	25.6	78	172.4	73.9	165	329.0
-12.8	9	48.2	6.7	44	111.2	26.1	79	174.2	76.7	170	338.0
-12.2	10	50.0	7.2	45	113.0	26.7	80	176.0	79.4	172	347.0

SECTION 1 GENERAL

Group 1 Safety Hints	1-1
Group 2 Specifications	1-10

SECTION 1 GENERAL


GROUP 1 SAFETY

FOLLOW SAFE PROCEDURE

Unsafe work practices are dangerous. Understand service procedure before doing work; Do not attempt shortcuts.

WEAR PROTECTIVE CLOTHING


Wear close fitting clothing and safety equipment appropriate to the job.

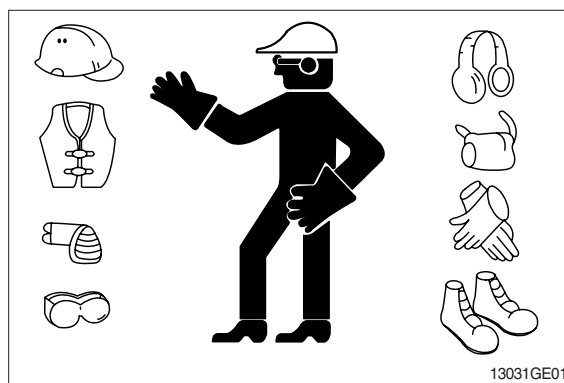

WARN OTHERS OF SERVICE WORK

Unexpected machine movement can cause serious injury.

Before performing any work on the excavator, attach a 「Do Not Operate」 tag on the right side control lever.

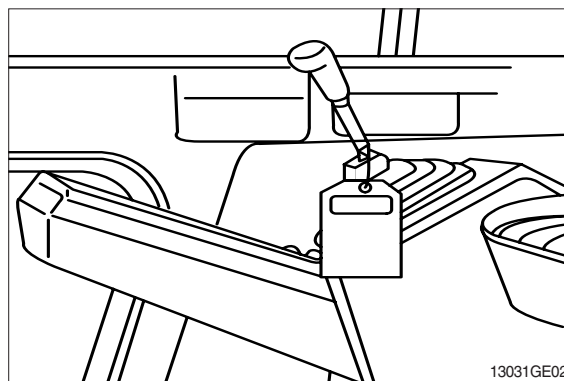


USE HANDHOLDS AND STEPS

Falling is one of the major causes of personal injury.

When you get on and off the machine, always maintain a three point contact with the steps and handrails and face the machine. Do not use any controls as handholds.

Never jump on or off the machine. Never mount or dismount a moving machine.

Be careful of slippery conditions on platforms, steps, and handrails when leaving the machine.

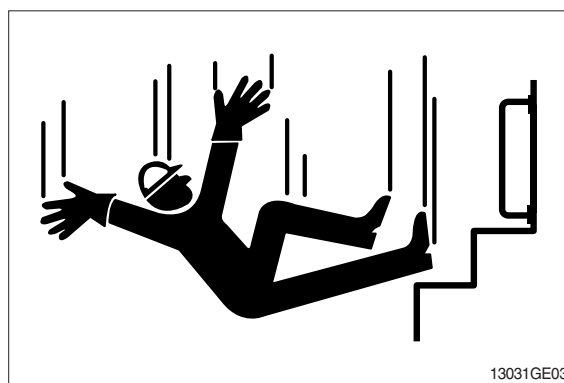


PREPARE FOR EMERGENCIES

Be prepared if a fire starts.


Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

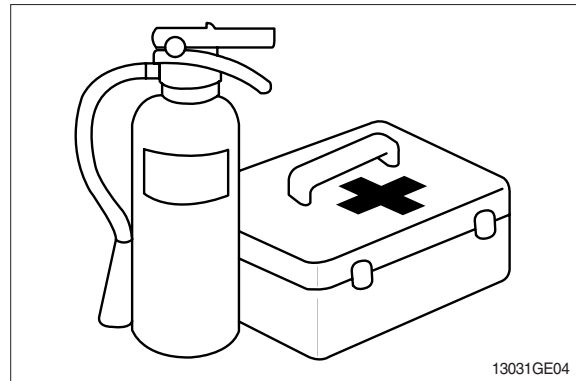

PROTECT AGAINST FLYING DEBRIS


Guard against injury from flying pieces of metal or debris; Wear goggles or safety glasses.

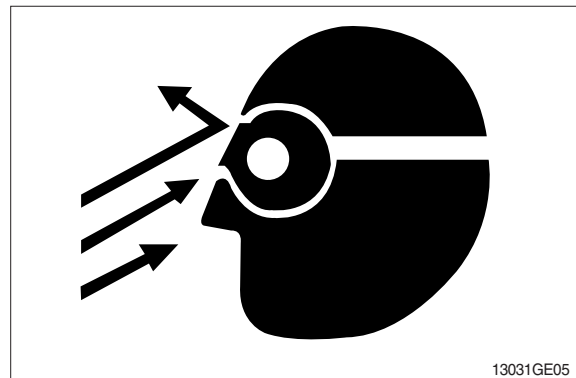

PROTECT AGAINST NOISE

Prolonged exposure to loud noise can cause impairment or loss of hearing.


Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

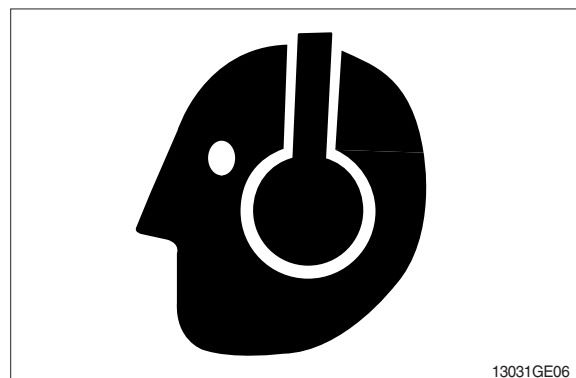

AVOID POWER LINES

Serious injury or death can result from contact with electric lines.


Never move any part of the machine or load closer to electric line than 3m(10ft) plus twice the line insulator length.

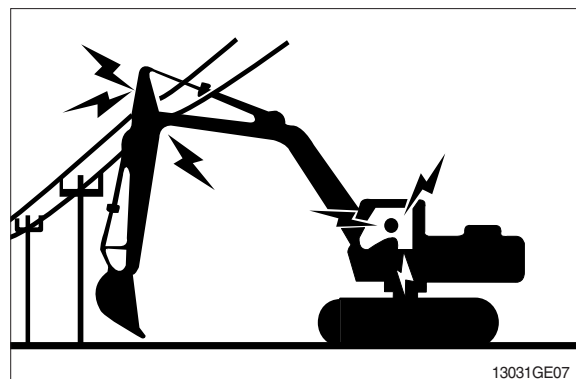

KEEP RIDERS OFF EXCAVATOR

Only allow the operator on the excavator. Keep riders off.

Riders on excavator are subject to injury such as being struck by foreign objects and being thrown off the excavator. Riders also obstruct the operator's view resulting in the excavator being operated in an unsafe manner.

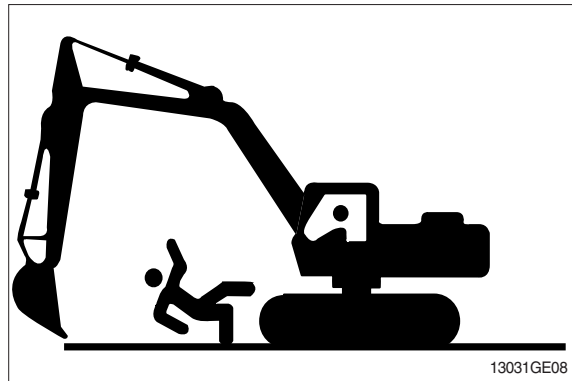


MOVE AND OPERATE MACHINE SAFELY

Bystanders can be run over. Know the location of bystanders before moving, swinging, or operating the machine.

Always keep the travel alarm in working condition. It warns people when the excavator starts to move.

Use a signal person when moving, swinging, or operating the machine in congested areas. Coordinate hand signals before starting the excavator.

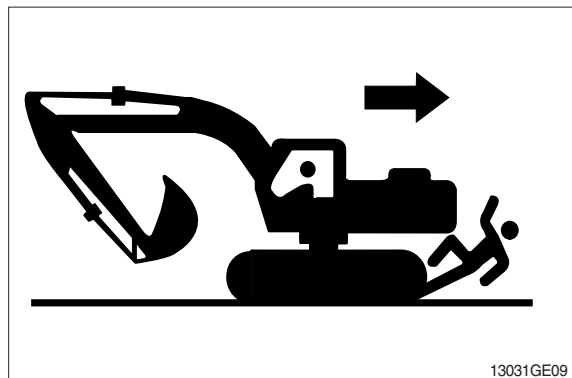

OPERATE ONLY FROM OPERATOR'S SEAT

Avoid possible injury machine damage. Do not start engine by shorting across starter terminals.

NEVER start engine while standing on ground. Start engine only from operator's seat.



PARK MACHINE SAFELY

Before working on the machine:


- Park machine on a level surface.
- Lower bucket to the ground.
- Turn auto idle switch off.
- Run engine at 1/2 speed without load for 2 minutes.
- Turn key switch to OFF to stop engine. Remove key from switch.
- Move pilot control shutoff lever to locked position.
- Allow engine to cool.

SUPPORT MACHINE PROPERLY

Always lower the attachment or implement to the ground before you work on the machine. If you must work on a lifted machine or attachment, securely support the machine or attachment.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load.


Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

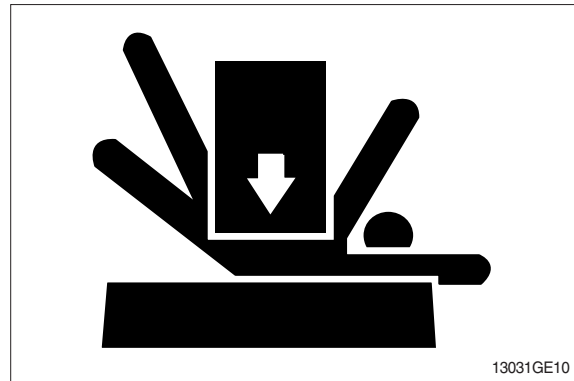

SERVICE COOLING SYSTEM SAFELY


Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands.

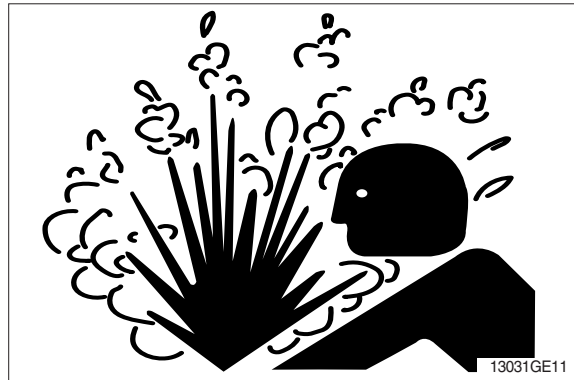

HANDLE FLUIDS SAFELY-AVOID FIRES


Handle fuel with care; It is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks. Always stop engine before refueling machine. Fill fuel tank outdoors.

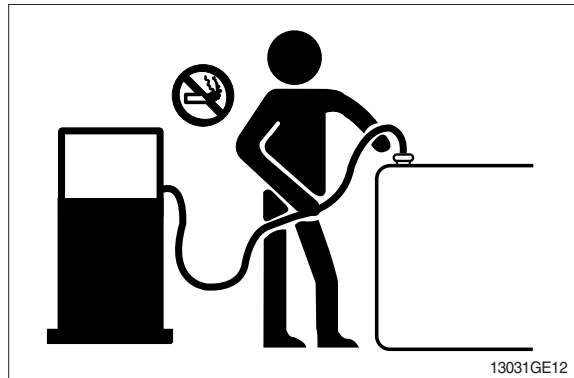

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; They can ignite and burn spontaneously.

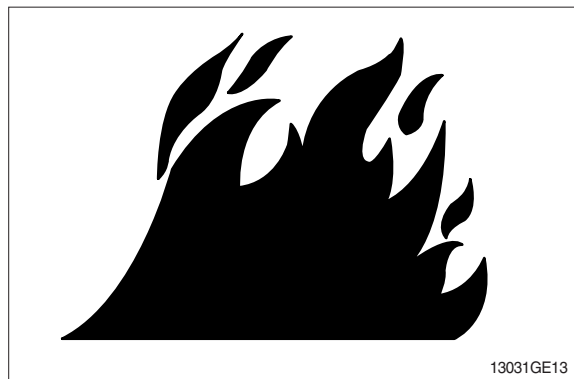

BEWARE OF EXHAUST FUMES

Prevent asphyxiation. Engine exhaust fumes can cause sickness or death.

If you must operate in a building, be positive there is adequate ventilation. Either use an exhaust pipe extension to remove the exhaust fumes or open doors and windows to bring enough outside air into the area.

REMOVE PAINT BEFORE WELDING OR HEATING


Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust.
Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

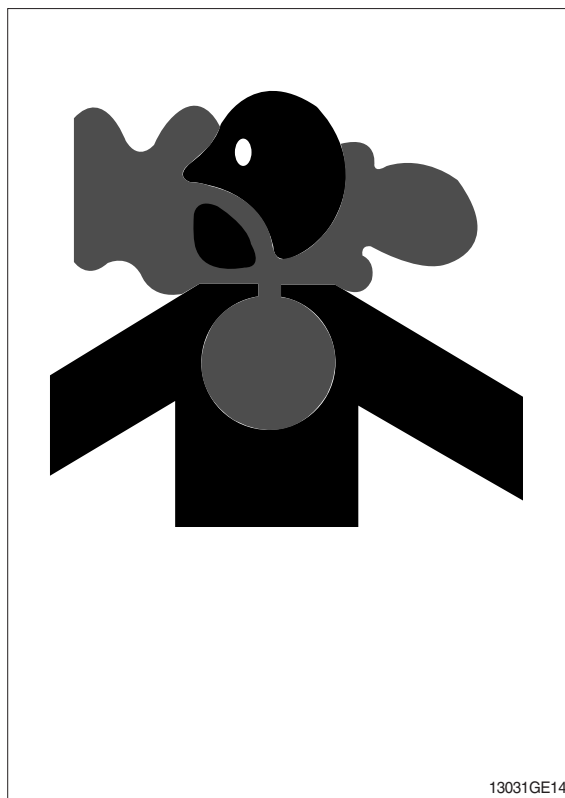

ILLUMINATE WORK AREA SAFELY


Illuminate your work area adequately but safely. Use a portable safety light for working inside or under the machine. Make sure the bulb is enclosed by a wire cage. The hot filament of an accidentally broken bulb can ignite spilled fuel or oil.



SERVICE MACHINE SAFELY

Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.


Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

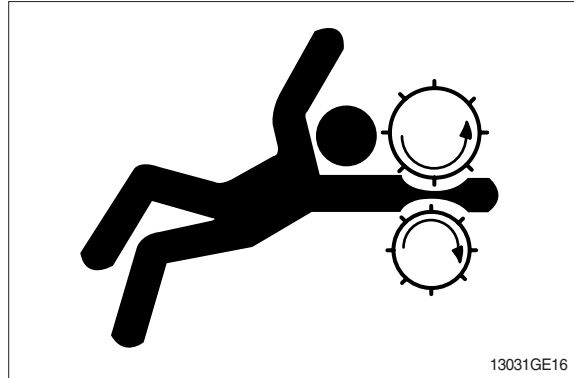

STAY CLEAR OF MOVING PARTS

Entanglements in moving parts can cause serious injury.

To prevent accidents, use care when working around rotating parts.

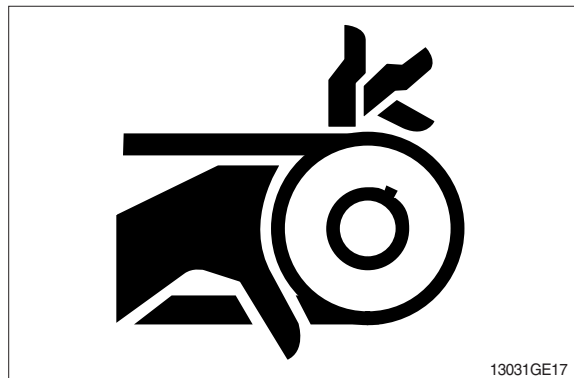


AVOID HIGH PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result.

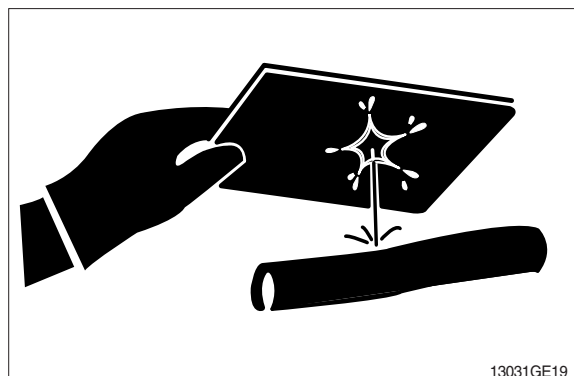

AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials.

Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area. Install fire resisting guards to protect hoses or other materials.



PREVENT BATTERY EXPLOSIONS

Keep sparks, lighted matches, and flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; It may explode. Warm battery to 16°C (60°F).



PREVENT ACID BURNS

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:


1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 10-15 minutes. Get medical attention immediately.

If acid is swallowed:

1. Drink large amounts of water or milk.
2. Then drink milk of magnesia, beaten eggs, or vegetable oil.
3. Get medical attention immediately.

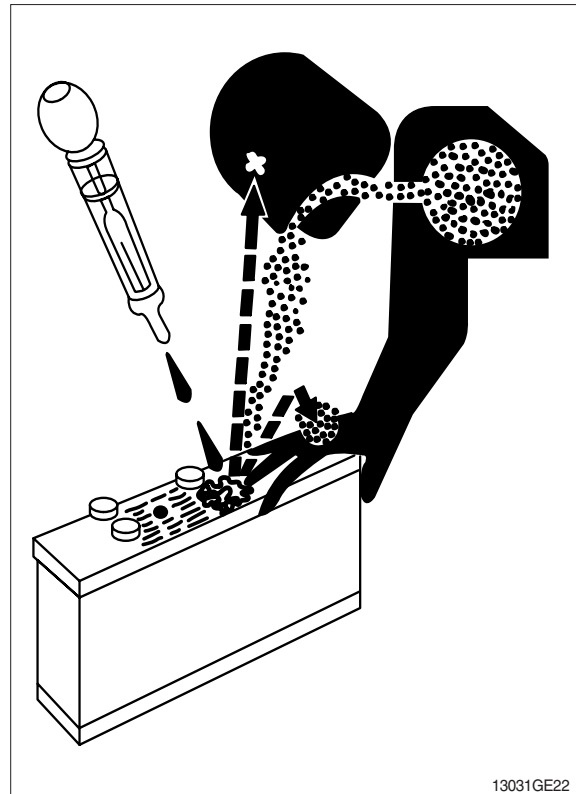


USE TOOLS PROPERLY

Use tools appropriate to the work. Makeshift tools, parts, and procedures can create safety hazards.

Use power tools only to loosen threaded tools and fasteners.

For loosening and tightening hardware, use the correct size tools. DO NOT use U.S. measurement tools on metric fasteners. Avoid bodily injury caused by slipping wrenches.

Use only recommended replacement parts. (See Parts catalogue.)

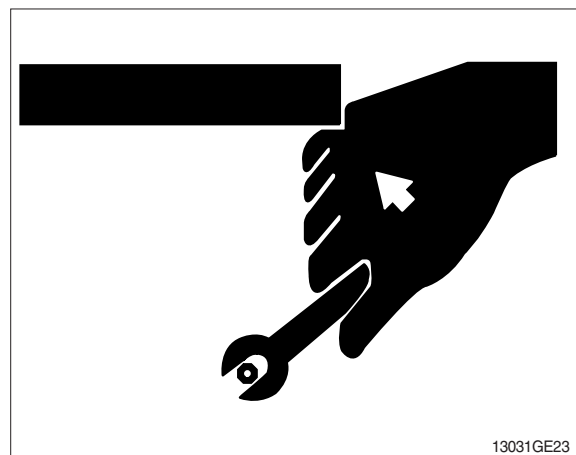


DISPOSE OF FLUIDS PROPERLY

Improperly disposing of fluids can harm the environment and ecology. Before draining any fluids, find out the proper way to dispose of waste from your local environmental agency.


Use proper containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

DO NOT pour oil into the ground, down a drain, or into a stream, pond, or lake. Observe relevant environmental protection regulations when disposing of oil, fuel, coolant, brake fluid, filters, batteries, and other harmful waste.

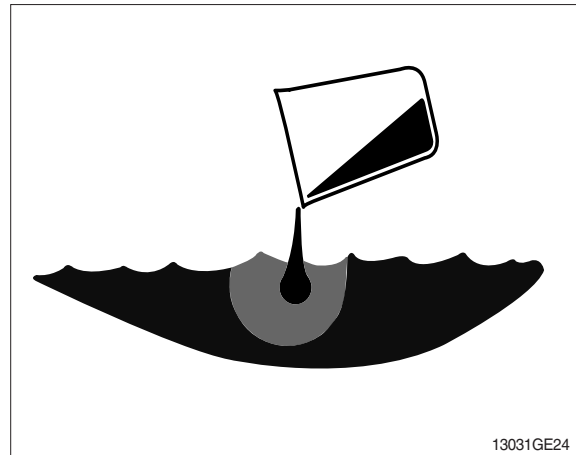

REPLACE SAFETY SIGNS

Replace missing or damaged safety signs. See the machine operator's manual for correct safety sign placement.


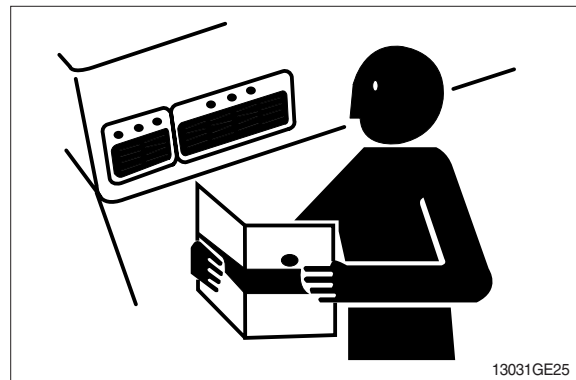


LIVE WITH SAFETY

Before returning machine to customer, make sure machine is functioning properly, especially the safety systems. Install all guards and shields.

GROUP 2 SPECIFICATIONS

1. MAJOR COMPONENT

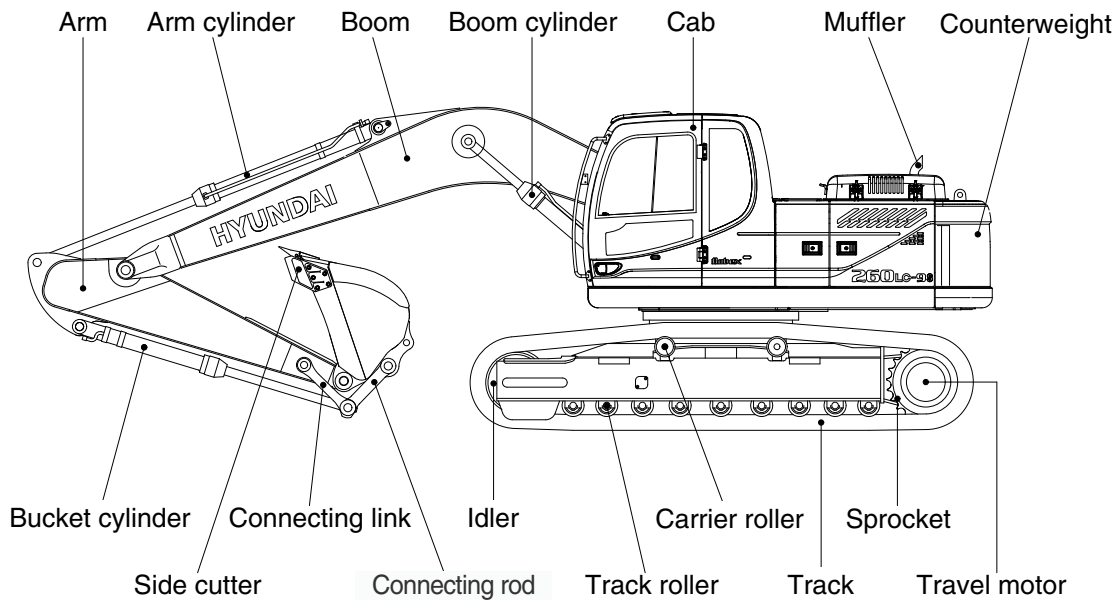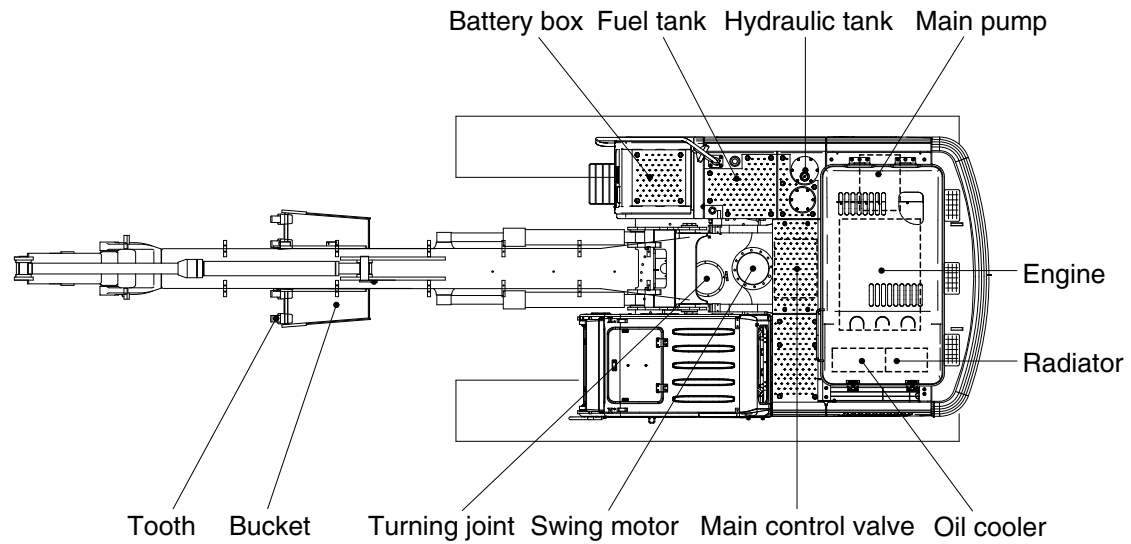


2609S2SP01

2. SPECIFICATIONS

1) R260LC-9S

· 5.85 m (19' 2") BOOM and 3.05 m (10' 0") ARM

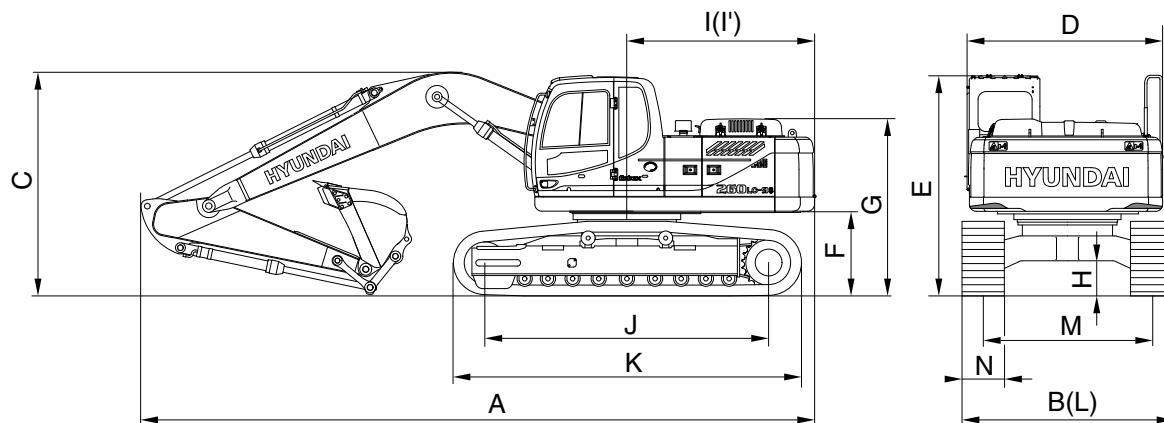


2609S2SP02

Description		Unit	Specification
Operating weight		kg (lb)	25200 (55560)
Bucket capacity (SAE heaped), standard		m³ (yd³)	1.08 (1.41)
Overall length	A	mm (ft-in)	9920 (32' 7")
Overall width, with 600mm shoe	B		3180 (10' 5")
Overall height	C		3220 (10' 7")
Superstructure width	D		2840 (9' 4")
Overall height of cab	E		2990 (9' 10")
Ground clearance of counterweight	F		1115 (3' 8")
Engine cover height	G		2427 (8' 0")
Minimum ground clearance	H		480 (1' 7")
Rear-end distance	I		2870 (9' 5")
Rear-end swing radius	I'		2975 (9' 9")
Distance between tumblers	J		3830 (12' 7")
Undercarriage length	K		4640 (15' 3")
Undercarriage width	L		3180 (10' 5")
Track gauge	M		2580 (8' 6")
Track shoe width, standard	N		600 (24")
Travel speed (low/high)		km/hr (mph)	3.4/5.5 (2.1/3.4)
Swing speed		rpm	12.5
Gradeability		Degree (%)	35 (70)
Ground pressure (600 mm shoe)		kgf/cm² (psi)	0.51 (7.25)
Max traction force		kg (lb)	21600 (47600)

2) R260NLC-9S

· 5.85 m (19' 2") BOOM and 3.05 m (10' 0") ARM

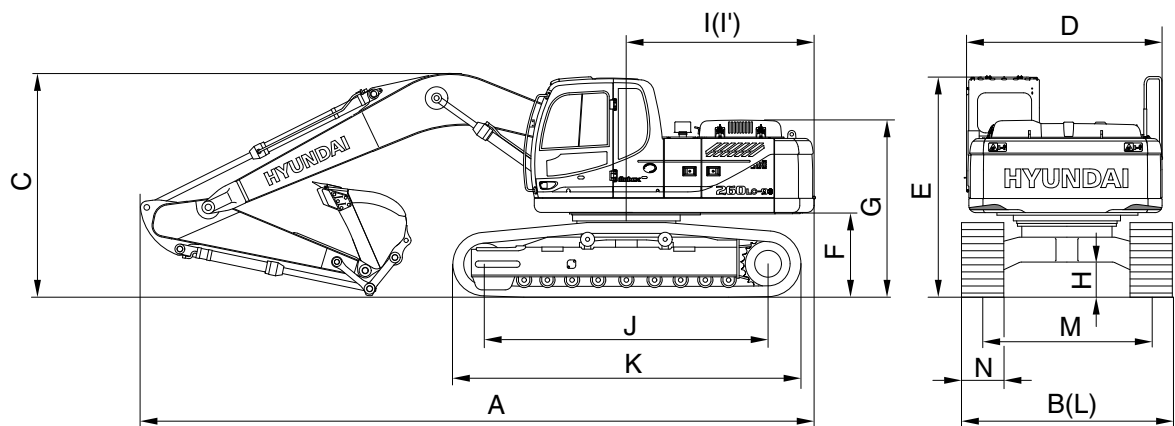


2609S2SP04

Description		Unit	Specification
Operating weight		kg (lb)	25100 (55300)
Bucket capacity (SAE heaped), standard		m ³ (yd ³)	1.08 (1.41)
Overall length	A	mm (ft-in)	9920 (32' 7")
Overall width, with 600 mm shoe	B		2980 (9' 9")
Overall height	C		3220 (10' 7")
Superstructure width	D		2840 (9' 4")
Overall height of cab	E		2990 (9' 10")
Ground clearance of counterweight	F		1115 (3' 8")
Engine cover height	G		2427 (8' 0")
Minimum ground clearance	H		480 (1' 7")
Rear-end distance	I		2870 (9' 5")
Rear-end swing radius	I'		2975 (9' 9")
Distance between tumblers	J		3830 (12' 7")
Undercarriage length	K		4640 (15' 3")
Undercarriage width	L		2980 (9' 9")
Track gauge	M		2380 (7' 10")
Track shoe width, standard	N		600 (24")
Travel speed (low/high)		km/hr (mph)	3.4/5.5 (2.1/3.4)
Swing speed		rpm	12.5
Gradeability		Degree (%)	35 (70)
Ground pressure (600 mm shoe)		kgf/cm ² (psi)	0.51 (7.25)
Max traction force		kg (lb)	21600 (47600)

3) R260LC-9S HIGH WALKER

· 5.85 m (19' 2") BOOM and 3.05 m (10' 0") ARM

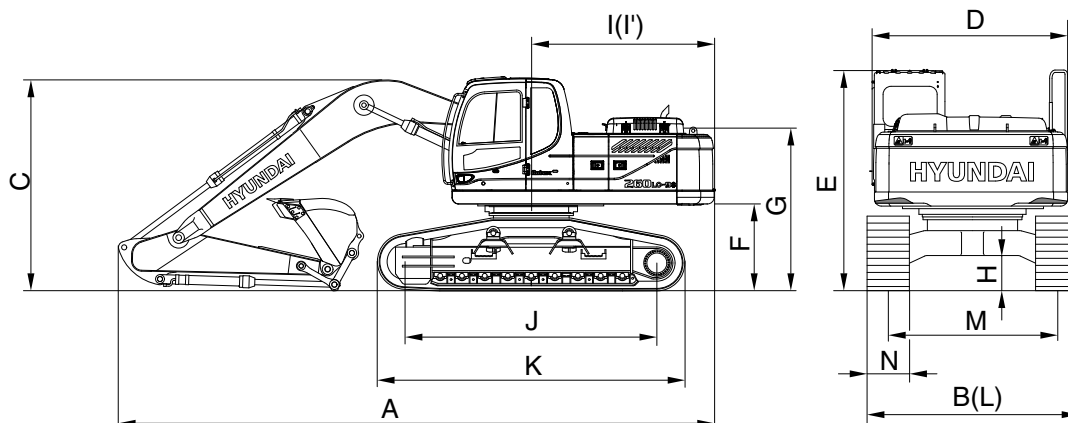


2609S2SP05

Description		Unit	Specification
Operating weight		kg (lb)	27450 (60520)
Bucket capacity (SAE heaped), standard		m ³ (yd ³)	1.08 (1.41)
Overall length	A	mm (ft-in)	9760 (32' 0")
Overall width, with 600 mm shoe	B		3390 (11' 1")
Overall height	C		3240 (10' 8")
Superstructure width	D		2840 (9' 4")
Overall height of cab	E		3345 (11' 0")
Ground clearance of counterweight	F		1470 (4' 10")
Engine cover height	G		2782 (9' 2")
Minimum ground clearance	H		765 (2' 6")
Rear-end distance	I		2975 (9' 9")
Rear-end swing radius	I'		2870 (9' 5")
Distance between tumblers	J		4030 (13' 3")
Undercarriage length	K		4940 (16' 2")
Undercarriage width	L		3390 (11' 1")
Track gauge	M		2790 (9' 2")
Track shoe width, standard	N		600 (24")
Travel speed (low/high)		km/hr (mph)	3.4/5.5 (2.1/3.4)
Swing speed		rpm	12.5
Gradeability		Degree (%)	35 (70)
Ground pressure (600 mm shoe)		kgf/cm ² (psi)	0.53 (7.54)
Max traction force		kg (lb)	21600 (47600)

3. WORKING RANGE

1) R260LC-9S, R260NLC-9S [5.85 m (19' 2") BOOM]

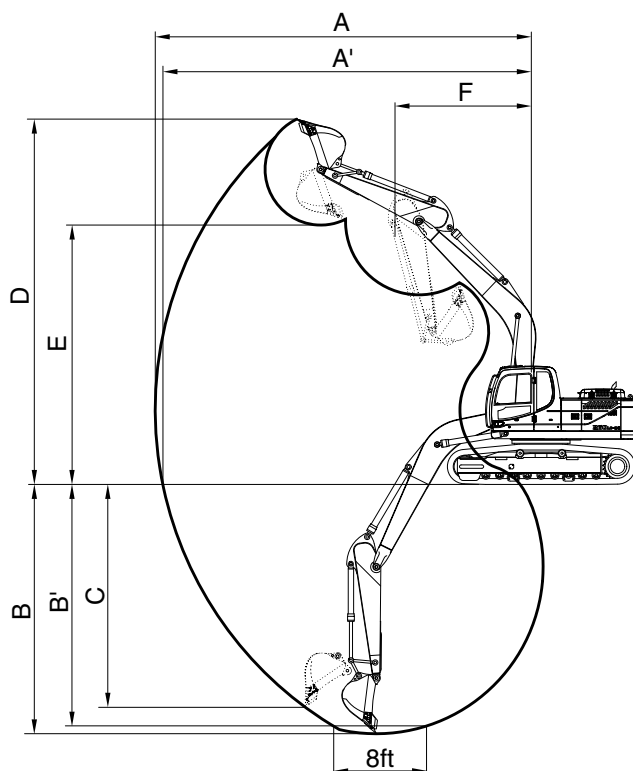


2609S2SP03

Description		2.10m (6' 11") Arm	2.50m (8' 2") Arm	3.05m (10' 0") Arm	3.60m (11' 10") Arm
Max digging reach	A	9550 mm (31' 4")	9870 mm (32' 5")	10360 mm (34' 0")	10870 mm (35' 8")
Max digging reach on ground	A'	9360 mm (30' 9")	9680 mm (31' 9")	10190 mm (33' 5")	10700 mm (35' 1")
Max digging depth	B	6050 mm (19' 10")	6450 mm (21' 2")	7000 mm (23' 0")	7550 mm (24' 9")
Max digging depth (8 ft level)	B'	5840 mm (19' 2")	6260 mm (20' 6")	6830 mm (22' 5")	7400 mm (24' 3")
Max vertical wall digging depth	C	5480 mm (18' 0")	5640 mm (18' 6")	6150 mm (20' 2")	6830 mm (22' 5")
Max digging height	D	9450 mm (31' 0")	9460 mm (31' 0")	9670 mm (31' 9")	9920 mm (32' 7")
Max dumping height	E	6360 mm (20' 10")	6420 mm (21' 1")	6630 mm (21' 9")	6860 mm (22' 6")
Min swing radius	F	4420 mm (14' 6")	4200 mm (13' 9")	3980 mm (13' 1")	3900 mm (12' 10")
Bucket digging force	SAE	156.9 [171.2] kN	156.9 [171.2] kN	156.9 [171.2] kN	156.9 [171.2] kN
		16000 [17450] kgf	16000 [17450] kgf	16000 [17450] kgf	16000 [17450] kgf
		35270 [38480] lbf	35270 [38480] lbf	35270 [38480] lbf	35270 [38480] lbf
	ISO	178.5 [194.7] kN	178.5 [194.7] kN	178.5 [194.7] kN	178.5 [194.7] kN
		18200 [19850] kgf	18200 [19850] kgf	18200 [19850] kgf	18200 [19850] kgf
		40120 [43770] lbf	40120 [43770] lbf	40120 [43770] lbf	40120 [43770] lbf
Arm digging force	SAE	134.4 [145.9] kN	130.4 [142.3] kN	114.7 [125.2] kN	114.7 [125.1] kN
		13700 [14870] kgf	13300 [14510] kgf	11700 [12760] kgf	10600 [11560] kgf
		30200 [32790] lbf	29320 [31990] lbf	25790 [28130] lbf	23370 [25490] lbf
	ISO	139.3 [151.2] kN	134.4 [146.6] kN	118.7 [129.4] kN	107.9 [117.7] kN
		14200 [15420] kgf	13700 [14950] kgf	12100 [13200] kgf	11000 [12000] kgf
		31310 [33990] lbf	30200 [32950] lbf	26680 [29110] lbf	24250 [26450] lbf

[] : Power boost

2) R260LC-9S HIGH WALKER [5.85 m (19' 2") BOOM]

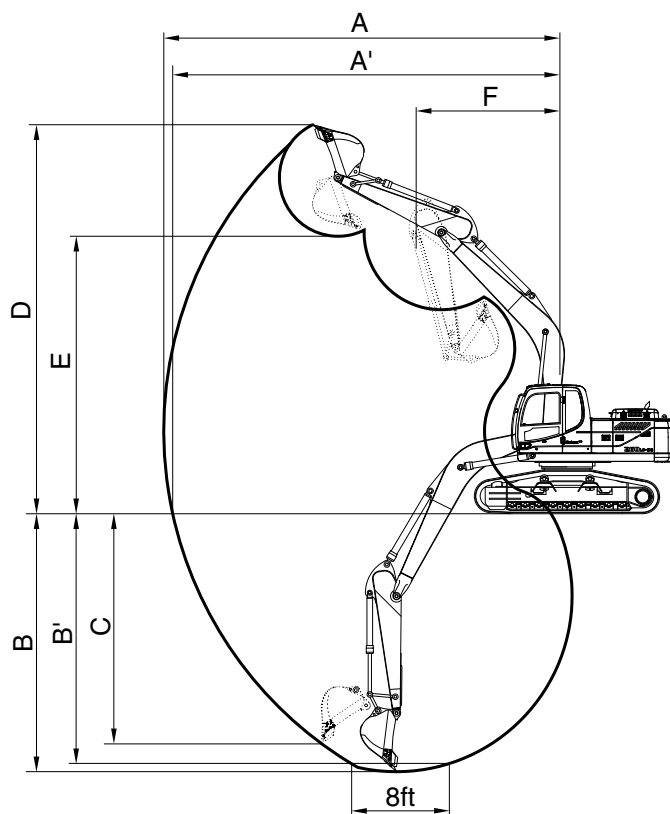

2609S2SP09

Description		2.10m (6' 11") Arm	2.50m (8' 2") Arm	3.05m (10' 0") Arm	3.60m (11' 10") Arm
Max digging reach	A	9550 mm (31' 4")	9870 mm (32' 5")	10360 mm (34' 0")	10870 mm (35' 8")
Max digging reach on ground	A'	9280 mm (30' 5")	9160 mm (31' 6")	10110 mm (33' 2")	10360 mm (34' 11")
Max digging depth	B	5680 mm (18' 8")	6080 mm (19' 11")	6630 mm (21' 9")	7180 mm (23' 7")
Max digging depth (8 ft level)	B'	5470 mm (17' 11")	5890 mm (19' 4")	6460 mm (21' 2")	7030 mm (23' 1")
Max vertical wall digging depth	C	5120 mm (16' 10")	5300 mm (17' 5")	5790 mm (19' 0")	6470 mm (21' 3")
Max digging height	D	9820 mm (32' 3")	9840 mm (32' 3")	10040 mm (32' 11")	10280 mm (33' 9")
Max dumping height	E	6730 mm (22' 1")	6790 mm (22' 3")	7000 mm (23' 0")	7220 mm (23' 8")
Min swing radius	F	4140 mm (13' 7")	4030 mm (13' 3")	3940 mm (12' 11")	3900 mm (12' 10")
Bucket digging force	SAE	156.9 [171.2] kN	156.9 [171.2] kN	156.9 [171.2] kN	156.9 [171.2] kN
		16000 [17450] kgf	16000 [17450] kgf	16000 [17450] kgf	16000 [17450] kgf
		35270 [38480] lbf	35270 [38480] lbf	35270 [38480] lbf	35270 [38480] lbf
	ISO	178.5 [194.7] kN	178.5 [194.7] kN	178.5 [194.7] kN	178.5 [194.7] kN
		18200 [19850] kgf	18200 [19850] kgf	18200 [19850] kgf	18200 [19850] kgf
		40120 [43770] lbf	40120 [43770] lbf	40120 [43770] lbf	40120 [43770] lbf
Arm crowd force	SAE	134.4 [145.9] kN	130.4 [142.3] kN	114.7 [125.2] kN	114.7 [125.1] kN
		13700 [14870] kgf	13300 [14510] kgf	11700 [12760] kgf	10600 [11560] kgf
		30200 [32790] lbf	29320 [31990] lbf	25790 [28130] lbf	23370 [25490] lbf
	ISO	139.3 [151.2] kN	134.4 [146.6] kN	118.7 [129.4] kN	107.9 [117.7] kN
		14200 [15420] kgf	13700 [14950] kgf	12100 [13200] kgf	11000 [12000] kgf
		31310 [33990] lbf	30200 [32950] lbf	26680 [29110] lbf	24250 [26450] lbf

[] : Power boost

4. WEIGHT

1) R260LC-9S, R260NLC-9S,

Item	R260LC-9S		R260NLC-9S	
	kg	lb	kg	lb
Upperstructure assembly	10500	23150	←	←
Main frame weld assembly	2360	5200	←	←
Engine assembly	530	1170	←	←
Main pump assembly	136	300	←	←
Main control valve assembly	220	485	←	←
Swing motor assembly	345	760	←	←
Hydraulic oil tank assembly	220	485	←	←
Fuel tank assembly	200	440	←	←
Counterweight	4600	10140	←	←
Cab assembly	440	970	←	←
Lower chassis assembly	9750	21500	9810	21630
Track frame weld assembly	3070	6770	2980	6570
Swing bearing	280	800	←	←
Travel motor assembly	276	608	←	←
Turning joint	53	117	←	←
Track recoil spring	140	309	←	←
Idler	160	353	←	←
Carrier roller	20	45	←	←
Track roller	40	88	←	←
Track-chain assembly (600 mm standard triple grouser shoe)	1500	3310	←	←
Front attachment assembly (5.85 m boom, 3.05 m arm, 1.08 m³ SAE heaped bucket)	4950	10910	←	←
5.85 m boom assembly	1940	4280	←	←
3.05 m arm assembly	1020	2250	←	←
1.08 m³ SAE heaped bucket	910	2010	←	←
Boom cylinder assembly	240	530	←	←
Arm cylinder assembly	340	750	←	←
Bucket cylinder assembly	220	490	←	←
Bucket control rod assembly	110	240	←	←

2) R260LC-9S HIGH WALKER

Item	R260LC-9S HIGH WALKER	
	kg	lb
Upperstructure assembly	10500	23150
Main frame weld assembly	2360	5200
Engine assembly	530	1170
Main pump assembly	136	300
Main control valve assembly	220	485
Swing motor assembly	345	760
Hydraulic oil tank assembly	220	485
Fuel tank assembly	200	440
Counterweight	4600	10140
Cab assembly	440	970
Lower chassis assembly	12000	26460
Track frame weld assembly	5280	11640
Swing bearing	360	800
Travel motor assembly	276	608
Turning joint	53	117
Track recoil spring	200	440
Idler	250	550
Carrier roller	55	120
Track roller	55	120
Track-chain assembly (600 mm standard triple grouser shoe)	1860	4100
Front attachment assembly (5.85 m boom, 3.05 m arm, 1.08 m³ SAE heaped bucket)	4950	10910
5.85 m boom assembly	1940	4280
3.05 m arm assembly	1020	2250
1.08 m³ SAE heaped bucket	910	2010
Boom cylinder assembly	240	530
Arm cylinder assembly	340	750
Bucket cylinder assembly	220	490
Bucket control rod assembly	110	240

5. LIFTING CAPACITIES

1) R260LC-9S

(1) 5.85 m (19' 2") boom, 3.05 m (10' 0") arm equipped with 1.08 m³ (SAE heaped) bucket and 600 mm (24") triple grouser shoe.

Load point height		Load radius										At max. reach		
		1.5 m (5 ft)		3.0 m (10 ft)		4.5 m (15 ft)		6.0 m (20ft)		7.5 m (25ft)		Capacity		Reach
														m (ft)
6.0 m (20 ft)	kg lb									*3700 *8160	*3700 *8160	4400 9700	2660 5860	9.22 (30.2)
4.5 m (15 ft)	kg lb							*5350 *11790	*5350 *11790	*5060 *11160	3830 8440	3880 8550	2280 5030	9.74 (32.0)
3.0 m (10 ft)	kg lb			*13640 *30070	*13640 *30070	*8400 *18520	*8400 *18520	*6540 *14420	5360 11820	*5660 *12480	3620 7980	3630 8000	2090 4610	9.98 (32.7)
1.5 m (5 ft)	kg lb			*9450 *20830	*9450 *20830	*10870 *23960	7800 17200	*7820 *17240	4950 10910	5750 12680	3400 7500	3580 7890	2040 4500	9.95 (32.6)
Ground Line	kg lb			*10570 *23300	*10570 *23300	*12490 *27540	7280 16050	8010 17660	4640 10230	5560 12260	3230 7120	3730 8220	2130 4700	9.65 (31.7)
-1.5 m (-5 ft)	kg lb	*9940 *21910	*9940 *21910	*13870 *30580	*13870 *30580	12930 28510	7090 15630	7830 17260	4480 9880	5460 12040	3140 6920	4150 9150	2390 5270	9.05 (29.7)
-3.0 m (-10 ft)	kg lb	*13540 *29850	*13540 *29850	*18430 *40630	14860 32760	*12780 *28180	7110 15670	7820 17240	4470 9850			5080 11200	2980 6570	8.06 (26.4)
-4.5 m (-15 ft)	kg lb	*17830 *39310	*17830 *39310	*16580 *36550	15340 33820	*11360 *25040	7340 16180	8020 17680	4640 10230			*5940 *13100	4480 9880	6.48 (21.3)

- Note
1. Lifting capacity are based on SAE J1097 and ISO 10567.
 2. Lifting capacity of the ROBEX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.
 3. The load point is a hook (standard equipment) located on the back of the bucket.
 4. *indicates load limited by hydraulic capacity.

2) R260NLC-9S

(1) 5.85 m (19' 2") boom, 3.05 m (10' 0") arm equipped with 1.08 m³ (SAE heaped) bucket and 600 mm (24") triple grouser shoe.

Load point height		Load radius										At max. reach		
		1.5 m (5 ft)		3.0 m (10 ft)		4.5 m (15 ft)		6.0 m (20ft)		7.5 m (25ft)		Capacity		Reach
														m (ft)
6.0 m (20 ft)	kg lb									*3700 *8160	3570 7870	4380 9660	2370 5220	9.22 (30.2)
4.5 m (15 ft)	kg lb							*5350 *11790	5230 11530	*5060 *11160	3440 7580	3860 8510	2020 4450	9.74 (32.0)
3.0 m (10 ft)	kg lb			*13640 *30070	*13640 *30070	*8400 *18520	7780 17150	*6540 *14420	4830 10650	*5660 *12480	3240 7140	3610 7960	1840 4060	9.98 (32.7)
1.5 m (5 ft)	kg lb			*9450 *20830	*9450 *20830	*10870 *23960	6940 15300	*7820 *17240	4420 9740	5720 12610	3030 6680	3560 7850	1790 3950	9.95 (32.6)
Ground Line	kg lb			*10570 *23300	*10570 *23300	*12490 *27540	6430 14180	7980 17590	4120 9080	5530 12190	2850 6280	3710 8180	1860 4100	9.65 (31.7)
-1.5 m (-5 ft)	kg lb	*9940 *21910	*9940 *21910	*13870 *30580	12620 27820	12870 28370	6250 13780	7790 17170	3960 8730	5430 11970	2760 6080	4130 9110	2100 4630	9.05 (29.7)
-3.0 m (-10 ft)	kg lb	*13540 *29850	*13540 *29850	*18430 *40630	12840 28310	*12780 *28180	6270 13820	7780 17150	3950 8710			5060 11160	2640 5820	8.06 (26.4)
-4.5 m (-15 ft)	kg lb	*17830 *39310	*17830 *39310	*16580 *36550	13290 29300	*11360 *25040	6490 14310	7980 17590	4120 9080			*5940 *13100	4010 8840	6.48 (21.3)

- Note
1. Lifting capacity are based on SAE J1097 and ISO 10567.
 2. Lifting capacity of the ROBEX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.
 3. The load point is a hook located on the back of the bucket.
 4. * indicates load limited by hydraulic capacity.

3) R260LC-9S HIGH WALKER





(1) 5.85 m (19' 2") boom, 3.05 m (10' 0") arm equipped with 1.08 m³ (SAE heaped) bucket and 600 mm (24") triple grouser shoe.

Load point height		Load radius										At max. reach		
		1.5 m (5 ft)		3.0 m (10 ft)		4.5 m (15 ft)		6.0 m (20ft)		7.5 m (25ft)		Capacity		Reach
														m (ft)
6.0 m (20 ft)	kg lb									*4140 *9130	*4140 *9130	*4510 *9940	3190 7030	9.37 (30.7)
4.5 m (15 ft)	kg lb							*5610 *12370	*5610 *12370	*5180 *11420	4650 10250	4590 10120	2830 6240	9.82 (32.2)
3.0 m (10 ft)	kg lb			*15320 *33770	*15320 *33770	*9030 *19910	*9030 *19910	*6850 *15100	6450 14220	*5830 *12850	4430 9770	4370 9630	2660 5860	9.99 (32.8)
1.5 m (5 ft)	kg lb			*9310 *20530	*9310 *20530	*11350 *25020	9510 20970	*8090 *17840	6050 13340	*6510 *14350	4220 9300	4380 9660	2650 5840	9.90 (32.5)
Ground Line	kg lb	*7350 *16200	*7350 *16200	*11240 *24780	*11240 *24780	*12710 *28020	9060 19970	*9010 *19860	5760 12700	6680 14730	4060 8950	4620 10190	2800 6170	9.53 (31.3)
-1.5 m (-5 ft)	kg lb	*10760 *23720	*10760 *23720	*14820 *32670	*14820 *32670	*13100 *28880	8920 19670	*9410 *20750	5640 12430	6610 14570	3990 8800	5220 11510	3180 7010	8.85 (29.0)
-3.0 m (-10 ft)	kg lb	*14470 *31900	*14470 *31900	*18710 *41250	*18710 *41250	*12560 *27690	9000 19840	*9310 *20130	5660 12480			*6000 *13230	4040 8910	7.76 (25.5)
-4.5 m (-15 ft)	kg lb			*15670 *34550	*15670 *34550	*10780 *23770	9290 20480							

- Note
1. Lifting capacity are based on SAE J1097 and ISO 10567.
 2. Lifting capacity of the ROBEX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.
 3. The load point is a hook located on the back of the bucket.
 4. *indicates load limited by hydraulic capacity.

6. BUCKET SELECTION GUIDE

  1) GENERAL BUCKET

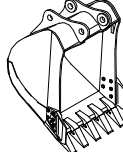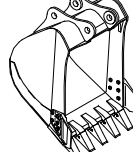			
0.60 m ³ SAE 0.79 m ³ SAE heaped bucket	1.03 m ³ SAE heaped bucket	1.08 m ³ SAE heaped bucket	1.27 m ³ SAE 1.50 m ³ SAE heaped bucket





Capacity		Width		Weight	Recommendation			
					5.85m (19' 2") boom			
SAE heaped	CECE heaped	Without side cutter	With side cutter		2.1m arm (6' 11")	2.5m arm (8' 2")	3.05m arm (10' 0")	3.6m arm (11' 10")
0.60 m ³ (0.78 yd ³)	0.55 m ³ (0.72 yd ³)	760 mm (29.9")	880 mm (34.6")	720 kg (1590 lb)				
0.79 m ³ (1.03 yd ³)	0.70 m ³ (0.92 yd ³)	890 mm (35.0")	1010 mm (39.8")	790 kg (1740 lb)				
1.03 m ³ (1.35 yd ³)	0.90 m ³ (1.18 yd ³)	1090 mm (42.9")	1210 mm (47.6")	890 kg (1960 lb)				
1.08 m ³ (1.41 yd ³)	0.95 m ³ (1.24 yd ³)	1130 mm (44.5")	1250 mm (49.2")	910 kg (2010 lb)				
1.27 m ³ (1.66 yd ³)	1.10 m ³ (1.44 yd ³)	1290 mm (50.8")	1410 mm (55.5")	1010 kg (2230 lb)				
1.50 m ³ (1.96 yd ³)	1.30 m ³ (1.70 yd ³)	1490 mm (58.7")	1610 mm (63.4")	1080 kg (2380 lb)				

 Applicable for materials with density of 2000 kgf/m³ (3370 lbf/yd³) or less

 Applicable for materials with density of 1600 kgf/m³ (2700 lbf/yd³) or less

 Applicable for materials with density of 1100 kgf/m³ (1850 lbf/yd³) or less

2) ROCK AND HEAVY DUTY BUCKET

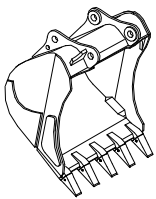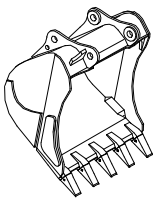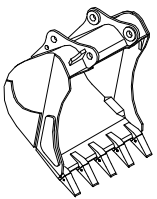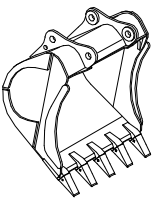			
◆1.07m ³ SAE ◆1.15m ³ SAE heaped bucket	◆1.27m ³ SAE heaped bucket	◆1.46m ³ SAE heaped bucket	◎1.16m ³ SAE heaped bucket

Capacity		Width		Weight	Recommendation			
					5.85 m (19' 2") boom			
SAE heaped	CECE heaped	Without side cutter	With side cutter		2.1 m arm (6' 11")	2.5 m arm (8' 2")	3.05 m arm (10' 0")	3.6 m arm (11' 10")
◆1.07 m ³ (1.40 yd ³)	0.95 m ³ (1.24 yd ³)	1150 mm (45.3")	-	1120 kg (2470 lb)				
◆1.15 m ³ (1.50 yd ³)	1.00 m ³ (1.31 yd ³)	1210 mm (47.6")	-	1160 kg (2560 lb)				
◆1.27 m ³ (1.66 yd ³)	1.10 m ³ (1.44 yd ³)	1310 mm (51.6")	-	1240 kg (2730 lb)				
◆1.46 m ³ (1.91 yd ³)	1.28 m ³ (1.67 yd ³)	1460 mm (57.5")	-	1320 kg (2910 lb)				
◎1.16 m ³ (1.52 yd ³)	1.00 m ³ (1.31 yd ³)	1340 mm (52.8")	-	1280 kg (2820 lb)				

◆ : Heavy duty bucket ◎: Rock-Heavy duty bucket

 Applicable for materials with density of 2000 kgf/m³ (3370 lbf/yd³) or less

 Applicable for materials with density of 1600 kgf/m³ (2700 lbf/yd³) or less

 
 
 Applicable for materials with density of 1100 kgf/m³ (1850 lbf/yd³) or less

7. UNDERCARRIAGE

1) TRACKS

X-leg type center frame is integrally welded with reinforced box-section track frames. The design includes dry tracks, lubricated rollers, idlers, sprockets, hydraulic track adjusters with shock absorbing springs and assembled track-type tractor shoes with triple grousers.

2) TYPES OF SHOES

Model	Shapes		Triple grouser				Double grouser
							
R260LC-9S	Shoe width	mm (in)	600 (24)	700 (28)	800 (32)	900 (36)	-
	Operating weight	kg (lb)	25200 (55600)	25500 (26200)	25800 (56900)	26100 (57500)	-
	Ground pressure	kgf/cm ² (psi)	0.51 (7.25)	0.44 (6.26)	0.39 (5.55)	0.35 (4.98)	-
	Overall width	mm (ft-in)	3180 (10' 5")	3280 (10' 9")	3380 (11' 1")	3480 (11' 5")	-
R260NLC-9S	Shoe width	mm (in)	600 (24)	-	-	-	-
	Operating weight	kg (lb)	25100 (55300)	-	-	-	-
	Ground pressure	kgf/cm ² (psi)	0.51 (7.25)	-	-	-	-
	Overall width	mm (ft-in)	2980 (9' 9")	-	-	-	-
R260LC-9S HIGH WALKER	Shoe width	mm (in)	600 (24)	700 (28)	800 (32)	-	700 (28)
	Operating weight	kg (lb)	27450 (60520)	28020 (61770)	28400 (62610)	-	28620 (63100)
	Ground pressure	kgf/cm ² (psi)	0.53 (7.54)	0.46 (6.54)	0.41 (5.83)	-	0.47 (6.68)
	Overall width	mm (ft-in)	3180 (10' 5")	3280 (10' 9")	3380 (11' 1")	-	3280 (10' 9")

3) NUMBER OF ROLLERS AND SHOES ON EACH SIDE

Item	Quantity	
	R260LC-9S, R260NLC-9S	R260LC-9S HIGH WALKER
Carrier rollers	2 EA	2 EA
Track rollers	9 EA	9 EA
Track shoes	51 EA	48 EA

This as a preview PDF file from **best-manuals.com**



Download full PDF manual at **best-manuals.com**