

WORKSHOP MANUAL

N SERIES

ISUZU

PubNo. N*R05_05-02-E

N SERIES Workshop Manual

Section No.	Applicable Component	Publication No.	MY	Remarks
0	GENERAL INFORMATION	LGGEN-WE-0552	05	EXP
0	GENERAL INFORMATION	LGGEN-WE-0551EU	05	Europe
1	HEATING AND AIR CONDITIONING	LGHAC-WE-0552	05	
2	FRAME AND CAB	LGFRM-WE-0552	05	
3	STEERING, SUSPENSION, WHEELS AND TIRES	LGSTG-WE-0552	05	
4	PROPELLER SHAFT AND AXLE	LGPRO-WE-0552	05	
5	BRAKES	LGBRA-WE-0552	05	
5A4	ABS/ASR	LGBRK-WE-0551	05	
5A5	HSA (HILL START AID)	LGHSA-WE-0551	05	
6	ENGINE 4H SERIES	LG4H-WE-0552	05	
6	ENGINE 4J SERIES	LG4J-WE-0552	05	
6	ENGINE 4HK1-TC SERIES	LG4HK-WE-0551	05	
6E	ENGINE CONTROL SYSTEM (4JH1)	4JHED-WE-0551N	05	
6E	ENGINE CONTROL SYSTEM (4HK1)	4HKED-WE-0551N	05	
7	MANUAL TRANSMISSION AND CLUTCH MSB SERIES	LGMSB-WE-0552	05	
7	MANUAL TRANSMISSION AND CLUTCH MYY SERIES	LGMYT-WE-0552	05	
7	MANUAL TRANSMISSION AND CLUTCH MZZ SERIES	LGMZZ-WE-0552	05	
7	TRANSMISSION/TRANSAXLE	LGSMT-WE-0551	05	
8	CAB AND CHASSIS ELECTRICAL (LEFT HAND DRIVE MODEL)	LGCEL-WE-0552LH	05	Europe/EXP/Taiwan
8	CAB AND CHASSIS ELECTRICAL (RIGHT HAND DRIVE MODEL)	LGCEL-WE-0552RH	05	Europe/EXP/Australia/HK
9	SEAT BELT, SRS AIRBAG	LGSRS-WE-0551	05	
PTO	POWER TAKE OFF	LGPTO-WE-0552	05	