

# **WORKSHOP MANUAL**

**N-SERIES**

## **STEERING, SUSPENSION, WHEELS AND TIRES**

**SECTION 3**

# **ISUZU**

**ISUZU**



International Service & Parts  
*Tokyo, Japan*

---

## **NOTICE**

**Before using this Workshop Manual to assist you in performing vehicle service and maintenance operations, it is recommended that you carefully read and thoroughly understand the information contained in Section-0A under the headings “GENERAL REPAIR INSTRUCTIONS” and “HOW TO USE THIS MANUAL”.**

**All material contained in this Manual is based on latest product information available at the time of publication.**

**All rights are reserved to make changes at any time without prior notice.**

**Applicable Model:**

---

**N-Series**

---

**This manual is applicable to 2005 year model.**

---

**THIS MANUAL INCLUDES THE FOLLOWING SECTIONS:**

| <b>SECTION No.</b> | <b>CONTENTS</b>            |
|--------------------|----------------------------|
| <b>00</b>          | <b>SERVICE INFORMATION</b> |
| <b>3A</b>          | <b>FRONT END ALIGNMENT</b> |
| <b>3B1</b>         | <b>POWER STEERING</b>      |
| <b>3B2</b>         | <b>MANUAL STEERING</b>     |
| <b>3B3</b>         | <b>STEERING LINKAGE</b>    |
| <b>3B4</b>         | <b>STEERING COLUMN</b>     |
| <b>3C</b>          | <b>FRONT SUSPENSION</b>    |
| <b>3D</b>          | <b>REAR SUSPENSION</b>     |
| <b>3E</b>          | <b>WHEELS AND TIRES</b>    |