

WORKSHOP MANUAL

N-SERIES

ENGINE 4H SERIES

SECTION 6

ISUZU

ISUZU



International Service & Parts
Tokyo, Japan

NOTICE

Before using this Workshop Manual to assist you in performing vehicle service and maintenance operations, it is recommended that you carefully read and thoroughly understand the information contained in Section-0A under the headings “GENERAL REPAIR INSTRUCTIONS” and “HOW TO USE THIS MANUAL”.

All material contained in this Manual is based on latest product information available at the time of publication.

All rights are reserved to make changes at any time without prior notice.

Applicable Model:

N-Series

This manual is applicable to 2005 year model.

THIS MANUAL INCLUDES THE FOLLOWING SECTIONS:

SECTION No.	CONTENTS
00	SERVICE INFORMATION
6A	ENGINE MECHANICAL
6A3	ENGINE (4HF1 / 4HF1-2 / 4HE1-TC / 4HG1 / 4HG1-T)
6B	ENGINE COOLING
6C	FUEL SYSTEM
6D	ENGINE ELECTRICAL
6E	EMISSION AND ELECTRICAL DIAGNOSIS
6F	EXHAUST
6G	TURBOCHARGER