

WORKSHOP MANUAL

N-SERIES

ENGINE 4J SERIES

SECTION 6

ISUZU

ISUZU



International Service & Parts
Tokyo, Japan

NOTICE

Before using this Workshop Manual to assist you in performing vehicle service and maintenance operations, it is recommended that you carefully read and thoroughly understand the information contained in Section-0A under the headings “GENERAL REPAIR INSTRUCTIONS” and “HOW TO USE THIS MANUAL”.

All material contained in this Manual is based on latest product information available at the time of publication.

All rights are reserved to make changes at any time without prior notice.

Applicable Model:

N-Series

This manual is applicable to 2005 year model.

THIS MANUAL INCLUDES THE FOLLOWING SECTIONS:

SECTION No.	CONTENTS
00	SERVICE INFORMATION
6A	GENERAL ENGINE MECHANICAL
6A1	4JB1/4JB1-TC/4JG2/4JH1-TC - ENGINE
6B	ENGINE COOLING
6C	ENGINE FUEL
6D	ENGINE ELECTRICAL
6E	EXHAUST GAS RECIRCULATION (EGR) SYSTEM
6F	ENGINE EXHAUST
6G	TURBOCHARGER