

Aquila Trucks Centres

TRAKKER EURO 4/5

REPAIR MANUAL

MECHANICAL

ELECTRIC/ELECTRONIC

IVECO

Aquila Trucks Centres

"This document provides data, characteristics, instructions and methodology to perform repair interventions on the vehicle and its components.

Anyhow, this document is addressed to qualified and specialised personnel. Iveco commercial and assistance network personnel as well as all Iveco authorised points of assistance are specifically qualified and equipped to perform the repair interventions that are indicated in this document.

Before performing any intervention, check to have available the document relating to the vehicle model on which the intervention is being performed and also make sure that all accident prevention devices, such as, as a rough guide, goggles, helmet, gloves, shoes, as well as work tooling, lifting and transport tooling, etc., are available and efficient, and further make sure that the vehicle is put such a way that an intervention can be made in safety conditions.

Making interventions strictly observing the indications given here, as well as using specific tooling indicated, assures a correct repair intervention, execution timing observance and operators' safety.

Each repair intervention must be finalised to the recovery of functionality, efficiency and safety conditions that are provided by Iveco.

Each intervention, on the vehicle, that is finalised to a modification, alteration or else, which is not authorised by Iveco, involves the exclusion of any responsibility for Iveco, and, in particular, where the vehicle is covered by a guarantee, each such intervention involves an immediate lapse of the guarantee.

Responsibility for Iveco in repair intervention execution is excluded.

Iveco is available to provide all clarifications necessary to make interventions, as well as to provide indications in cases and situations not included in this document.

In the case of a difference between what contained here and what actually found on the vehicle, please contact Iveco network before making any intervention."

Copy, even partial, of text and drawings is forbidden.

Publication Edited by:
IVECO S.p.A.
Customer Service
Lungo Stura Lazio, 15
10156 Torino (TO) - Italy

Print **603.93.641** - 2nd Ed. 2006

Produced by:



B.U. TECHNICAL PUBLISHING
Iveco Technical Publications
Lungo Stura Lazio, 15
10156 Torino (TO) - Italy

Aquila Trucks Centres

PRELIMINARY REMARKS

Manuals for repairs are split into Sections, each one of which is marked by a numeral; the contents of these sections are indicated in the general table of contents.

Each section is generally dedicated to a main Unit (e.g.: engine, gearbox, electric system, etc.).

Sections with mechanical contents include technical data, tightening torque collections, tool lists, connections – disconnections of units to/from the vehicle, overhauls at the bench and relating troubleshooting.

On the electric/electronic system section there are the descriptions of the electric network and vehicle electronic systems, electric schemes, components electric characteristics, components codes and troubleshooting relating to the central units specific of the electric system.

The manual uses proper symbols in its descriptions; the purpose of these symbols is to classify contained information. In particular, there have been defined a set of symbols to classify warnings and a set for assistance operations.

SYMBOLS - WARNINGS



Danger for persons

Missing or incomplete observance of these prescriptions can cause serious danger for persons' safety.



Danger of serious damage for the vehicle

Partial or complete non observance of these prescriptions can cause serious damages to the vehicle and sometimes guarantee lapse too.



General danger

It includes the dangers of above described signals.



Environment protection

It indicates correct behaviour in order that vehicle use is environmentally friendly as much as possible.

NOTE It indicates an additional explanation for a piece of information.

Aquila Trucks Centres

SYMBOLS - ASSISTANCE OPERATIONS

 
	Removal Disconnection		Intake
	Refitting Connection		Exhaust
	Removal Disassembly		Operation
	Fitting in place Assembly		Compression ratio
	Tighten to torque		Tolerance Weight difference
	Tighten to torque + angle value		Rolling torque
	Press or caulk		Rotation
	Regulation Adjustment		Angle Angular value
	Visual inspection Fitting position check		Preload
	Measurement Value to find Check		Number of revolutions
	Equipment		Temperature
	Surface for machining Machine finish		Pressure
	Interference Strained assembly		Oversized Higher than... Maximum, peak
	Thickness Clearance		Undersized Less than... Minimum
	Lubrication Damp Grease		Selection Classes Oversizing
	Sealant Adhesive		Temperature < 0 °C Cold Winter
	Air bleeding		Temperature > 0 °C Hot Summer
	Replacement Original spare parts		

Aquila Trucks Centres

PRODUCT CODE

Each title or subtitle concerning operations being performed is preceded by a six-figure number named PRODUCT CODE. This number represents the PRODUCT CODE referred to by the repair operation contained in both REPAIR TIMES and TROUBLE CODE document.


As a quick reference there are shown below the guide lines to read this code (see Repair Timing, too).



The first and second figures identify the PRODUCT within motor vehicle.

Example :


Product	50	=	Vehicle chassis;
Product	52	=	Axes;
Product	53	=	Transmission;
Product	76	=	Electric ssystem.

 

The third and fourth figures identify the UNIT within the PRODUCT.

Example :

Product	50	=	Vehicle chassis;
Unit	01	=	Chassis;
Unit	02	=	Bumpers;
Unit	03	=	Alternator.

 

The fifth and sixth figures exactly identify the SUB-ASSEMBLY and Component of a Unit within a PRODUCT.

Example :

Product	50	=	Vehicle chassis;
Unit	01	=	Chassis;
Sub-assembly	40	=	Chassis cross members;
Sub-assembly	13	=	Rotor.

Aquila Trucks Centres

GENERAL WARNINGS



Warnings shown cannot be representative of all danger situations possibly occurring. Therefore, it is suggested to contact immediate superiors where a danger situation occurs which is not described.

Use both specific and general-purpose toolings according to the prescriptions contained in respective use and maintenance handbooks. Check use state and suitability of tools not subjected to regular check.

The manual handling of loads must be assessed in advance because it also depends, besides weight, on its size and on the path.

Handling by mechanical means must be with hoisters proper as for weight as well as for shape and volume. Hoisters, ropes and hooks used must contain clear indications on maximum carrying capacity acceptable. The use of said means is compulsorily permitted to authorised personnel only. Stay duly clear of the load, and, anyhow, never under it.

In disassembling operations, always observe provided prescriptions; prevent mechanical parts being taken out from accidentally striking workshop personnel.

Workshop jobs performed in pairs must always be performed in maximum safety; avoid operations which could be dangerous for the co-operator because of lack of visibility or of his/her not correct position.

Keep personnel not authorised to operations clear of working area.

Learn operation and safety knowledge necessary relating to the vehicle prior to each intervention on it. Scrupulously observe all safety warnings on the vehicle. Apply suitable signals for the vehicles being repaired. Once the repair intervention has been completed, before starting up the vehicle, perform all checks indicated on paragraph "Controls care of user" of Use and Maintenance handbook.

In lack of visibility in operating from the vehicle, charge a person on the ground with assistance. Do not leave unmanned a vehicle in motion during repair interventions.

Keep the vehicle stationary by proper chocks.

In the case of an intervention on a vehicle lifted from the ground, check the vehicle to be quite steady on special support stands and, in the case of lifting by means of a lift, check manual/automatic safeties to be activated.

When it is necessary to perform an intervention on methane-fed vehicles, observe the indications contained inside the document, as well as all specific safety regulations provided.

Only remove radiator cap when the engine is cold by cautiously unscrewing it in order to let system residual pressure out.

Inflammable fuel and all inflammable fluids and liquids must be handled with care, according to what contained on harmful materials 12-point cards. Refuelling must be performed outdoors with the engine off, avoiding lit cigarettes, free flames or sparks in order to prevent sudden fires/bursts. Adequately store inflammable, corrosive and polluting fluids and liquids according to what provided by regulations in force. Compulsorily avoid to use food containers to store harmful liquids. Avoid to drill or bore pressurised containers, and throw cloths impregnated with inflammable substances into suitable containers.

Worn out, damaged or consumable parts must be replaced by Iveco original spares.

During workshop activity, always keep the work place clean; timely clear or clean floors from accidental liquid or oil spots. Electric sockets and electric equipment necessary to perform repair interventions must meet safety rules.

For every intervention on vehicle hydraulic, pneumatic, conditioning and AIR - BAG systems, scrupulously observe indications specified in relating manual sections.

Aquila Trucks Centres

GENERAL WARNINGS



Put on, where required by the intervention, garments and protections provided in accident prevention rules; contact with moving parts can cause serious injuries. Use suitable, preferably tight-fitted garments, and avoid to use jewels, scarves, etc.

Do not leave the engine in motion at workshop locations not provided with a pipe to scavenge exhaust gas outside.

Avoid to breathe fumes coming from heating or from paint welding because they can cause damages to health; operate outdoors or in suitably ventilated areas. Put on proper inspirator if paint powder is present.

Avoid contact with hot water or steam coming from the engine, radiator and pipings because they could cause serious burns. Avoid direct contact with liquids and fluids present in vehicle systems; where an accidental contact has occurred, refer to 12-point cards for provisions to make.



Clean units or assemblies detached from the vehicle and carefully check their integrity before overhaul. Tidy up detached or disassembled parts with their securing elements (screws, nuts, etc.) into special containers.

Check for the integrity of the parts which prevent screws from being unscrewed: broken washers, dowels, clips, etc. Self-locking nuts with an insert made of nylon must always be replaced.

Avoid contact of rubber parts with diesel oil, petrol or other not compatible substances.

Before washing under pressure mechanical parts, protect electric connectors, and central units, if present.

Tightening screws and nuts must always be according to prescriptions; IVECO commercial and assistance network is available to give all clarifications necessary to perform repair interventions not provided in this document.

Before welding:

- Disconnect all electronic central units, take power cable off battery positive terminal (connect it to chassis bonding) and detach connectors.
- Remove paint by using proper solvents or paint removers and clean relevant surfaces with soap and water.
- Await about 15 minutes before welding.
- Equip with suitable fire resistant protections to protect hoses or other components where fluids or other materials flow which may catch fire easily on welding.

Should the vehicle be subjected to temperatures exceeding 80°C (dryer ovens), disassemble drive electronic central units.



The disposal of all liquids and fluids must be performed with full observance of specific rules in force.

Aquila Trucks Centres

GENERAL WARNINGS ON THE ELECTRIC SYSTEM



If an intervention has to be made on the electric/electronic system, disconnect batteries from the system; in this case, always disconnect, as a first one, the chassis bonding cable from batteries negative terminal.

Before connecting the batteries to the system, make sure that the system is well isolated.

Disconnect the external recharging apparatus from the public utility network before taking apparatus pins off battery terminals.

Do not cause sparks to be generated in checking if the circuit is energised.

Do not use a test lamp in checking circuit continuity, but only use proper control apparatuses.

Make sure that the electronic devices wiring harnesses (length, lead type, location, strapping, connection to screening braiding, bonding, etc.) comply with IVECO system and are carefully recovered after repair or maintenance interventions.

Measurements in drive electronic central units, plugged connections and electric connections to components can only be made on proper testing lines with special plugs and plug bushes. Never use improper means like wires, screwdrivers, clips and the like in order to avoid the danger of causing a short circuit, as well as of damaging plugged connections, which would later cause contact problems.

Before replacing an electronic control unit, verify the wiring. If necessary, contact the local T.H.D. (Technical Help Desk) for an authorization or a recommendation on the possible interventions before replacing.



To start up the engine, do not use fast chargers. Start up must only be performed with either separate batteries or special truck.

A wrong polarisation of supply voltage in drive electronic central units (for instance, a wrong polarisation of batteries) can cause them to be destroyed.

Disconnect the batteries from the system during their recharging with an external apparatus.

On connecting, only screw up connector (temperature sensors, pressure sensors etc.) nuts at prescribed tightening torque.

Before disconnecting the junction connector from an electronic central unit, isolate the system.

Do not directly supply electronic central units servo components at nominal vehicle voltage.

Cables must be arranged such as to result to be parallel to reference plane, i.e. as close as possible to chassis/body structure.

Once the intervention on the electric system has been completed, recover connectors and wiring harnesses according to original arrangement.

Key memorisation procedures are influenced by electromagnetic jamming (mobile phones, etc.). Therefore, during key memorisation:

- 1 Pay attention that jamming sources are not present in the cab or near the keys.
- 2 Keys not inserted in the panel must be at least 1 meter away.

NOTE


Connectors present must be seen from cable side. Connectors views contained in the manual are representative of cable side.

Aquila Trucks Centres



In order to prevent damage or short-circuiting of the on-board electronic control units, the following operations must be always carried out before starting any welding operation on the chassis.

- If electric welding has to be done on the vehicle,

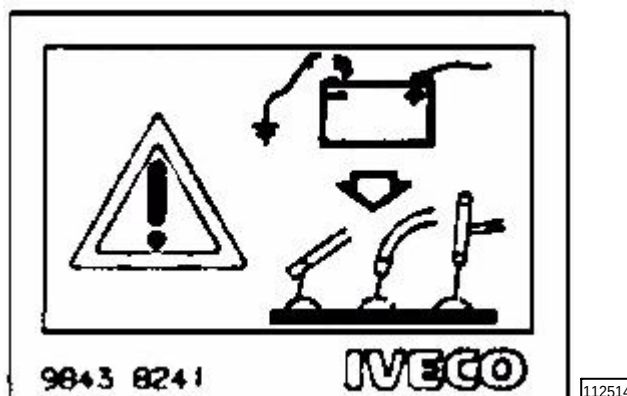

isolate the electric system as follows:

- disconnect the power lead from the battery positive terminal and connect it to the chassis earth;
 - disconnect the power lead from the battery negative terminal;
 - disconnect the electronic control unit connectors, taking care to avoid touching the control unit connector pins.
- Moreover:
 - should it be necessary to carry out welding operations close to the control unit, remove it from its location.
 - whenever possible, earth the welding machine directly to the piece that has to be welded.



In the case of vehicles equipped with a DTCO digital tachograph, do not disconnect the battery leads and then connect them by jumpers to reset the electronic systems.

This operation should be avoided, as it could cause permanent damage to the DTCO tachograph CARD or other on-board electronic systems.

To reset the electronic system without running risks, disconnect the vehicle battery and wait for 10 minutes.



It is strictly forbidden to carry out any modifications or connections to the electronic control unit wiring; in particular, the line interconnecting data between the control units (CAN line) must be considered as untouchable.

Diagnostic and maintenance operations can only be carried out by authorised personnel with IVECO approved equipment.

Aquila Trucks Centres


Bonding and screening

Negative leads connected to a system bonded point must be both as short and possible and "star"-connected to each other, trying then to have their centering tidily and properly made (Figure 1, re. M).

Further, following warnings are to be compulsorily observed for electronic components:


- Electronic central units must be connected to system bonding when they are provided with a metallic shell.
- Electronic central units negative cables must be connected both to a system bonding point such as the dashboard opening bonding (avoiding "serial" or "chain" connections), and to battery negative terminal.
- Analog bonding (sensors), although not connected to battery negative system/terminal bonding, must have optimal isolation. Consequently, particularly considered must be parasitic resistances in lugs: oxidising, clinching defects, etc.
- Screened circuits braiding must only electrically contact the end towards the central unit entered by the signal (Figure 2).
- If junction connectors are present, unscreened section d, near them, must be as short as possible (Figure 2).
- Cables must be arranged such as to result to be parallel to reference plane, i.e. as close as possible to chassis/body structure.

Figure 1

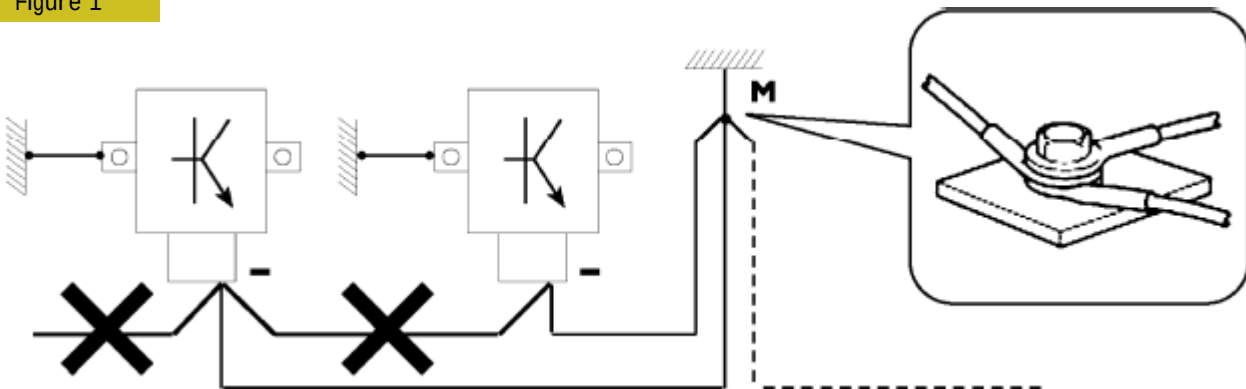

1. NEGATIVE CABLES "STAR" CONNECTION TO SYSTEM BONDING M

Figure 2

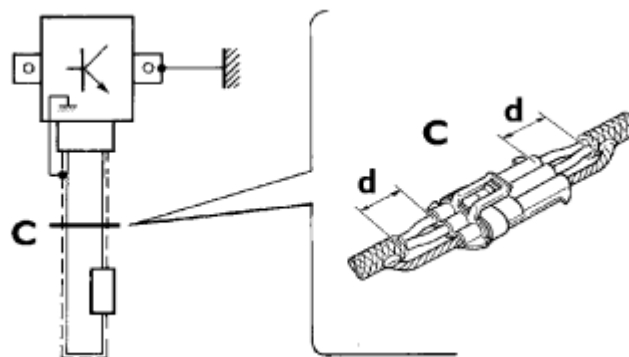

2. SCREENING THROUGH METALLIC BRAIDING OF A CABLE TO AN ELECTRONIC COMPONENT – C. CONNECTOR
d. DISTANCE ! 0

88039

Aquila Trucks Centres

OPTIONAL ELECTRICAL AND MECHANICAL PARTS INSTALLATIONS

Accessories mounting, additions and modifications on the vehicle are to be performed complying with IVECO mounting instructions (specific document "Instructions for transformation and preparation" is available at Assistance Network workshops). It is reminded that, especially about the electric system, several electric sockets are provided for as series (or optional) sockets in order to simplify and normalise the electrical intervention that is care of preparation personnel.

For any exception to mounting instructions, IVECO's authorisation is necessary.

Lack of observance of above described prescriptions involves guarantee lapse.



It is absolutely forbidden to make modifications or connections to electric central units wiring harnesses; in particular, the data interconnection line between central units (CAN line) is to be considered inviolable.

CONVERSIONS BETWEEN THE MAIN UNITS OF MEASUREMENT OF THE INTERNATIONAL SYSTEM AND MOST USED DERIVED QUANTITIES

Power

1 kW	=	1.36 metric HP
1 kW	=	1.34 HP
1 metric HP	=	0.736 kW
1 metric HP	=	0.986 HP
1 HP	=	0.746 kW
1 HP	=	1.014 metric HP

Torque

1 Nm	=	0.1019 kgm
1 kgm	=	9.81 Nm

Revolutions per time unit

1 rad/s	=	1 rpm x 0.1046
1 rpm	=	1 rad/s x 9.5602

Pressure

1 bar	=	1.02 kg/cm ²
1 kg/cm ²	=	0.981 bar
1 bar	=	10 ⁵ Pa

Where accuracy is not particularly needed:

- Nm unit is for the sake of simplicity converted into kgm according to ratio 10:1

1 kgm	=	10 Nm;
-------	---	--------

- bar unit is for the sake of simplicity converted into kg/cm² according to ratio 1:1

1 kg/cm ²	=	1 bar.
----------------------	---	--------

Temperature

0° C	=	32° F
1° C	=	(1 x 1.8 + 32) ° F

Aquila Trucks Centres

Aquila Trucks Centres

TRAKKER EURO 4/5

Print 603.93.641 – 2nd edition

Base - November 2006

UPDATE DATA

Section	Description	Page	Revision date
1	General	3, 5, 10÷17, 19, 20	June 2007
2	Engine	8, 22, 24, 52, 57, 73, 86, 89, 91, 97 128, 143, 144, 147, 168, 171, 174, 175, 180, 197, 203, 211, 214, 219, 222, 282	June 2007
3	Clutch	2, 18, 19, 20, 21	June 2007
4	Gearboxes	13,14, 16/1÷16/6, 18, 18/1÷18/2, 20, 20/1÷20/6, 22/1÷22/30, 23, 26÷46, 46/1÷46/32, 47÷54, 54/1÷54/4, 56/1÷56/32	June 2007
6	Transfer box TC 1800-TC 2200	6, 8, 10÷12, 15, 24	June 2007
8	Axles	58, 59, 63, 66, 79, 80, 82÷86, 88, 90, 91, 92, 93, 96, 136, 162	June 2007
13	Pneumatic system - Brakes	1, 21/1÷21/2, 81	June 2007
15	Programmed maintenance	5÷33	June 2007
16	ElectricElectronic system	2, 6÷10, 89, 121/1÷121/4, 134/1÷134/8, 139÷143, 154, 156÷161, 193, 198, 237, 258, 275, 284, 287	June 2007

Aquila Trucks Centres

Aquila Trucks Centres

INDEX OF SECTIONS

	Section
General	1
Engines	2
Clutch	3
Gearboxes	4
Power take-off	5
Transfer box TC 1800-TC 2200	6
Propeller shafts	7
Axles	8
Front axles	9
Suspensions	10
Wheels and tyres	11
Steering	12
Pneumatic system - Brakes	13
Bodywork and Chassis frame	14
Programmed maintenance	15
Electric/electronic system	16

Aquila Trucks Centres

Aquila Trucks Centres

SECTION 1

General

	Page
VEHICLE IDENTIFICATION DATA	3
- Vehicle Identification Plate	4
- Production Identification Plate	4
COMMERCIAL CODING	5
P.I.C. NUMBER CODING	6
VEHICLE CONFIGURATION	10
COMPOSITION OF THE MODELS	11
FILLING FLUIDS	18
- International specifications of lubricants and fluids	20

Aquila Trucks Centres


Aquila Trucks Centres

VEHICLE IDENTIFICATION DATA

The type and number of engine, type and number of chassis and manufacturer's plate comprise the vehicle identification data.

Figure 1**Manufacturer's plate**

To identify the vehicle in accordance with the E.E.C. directive (under the front radiator cowling).

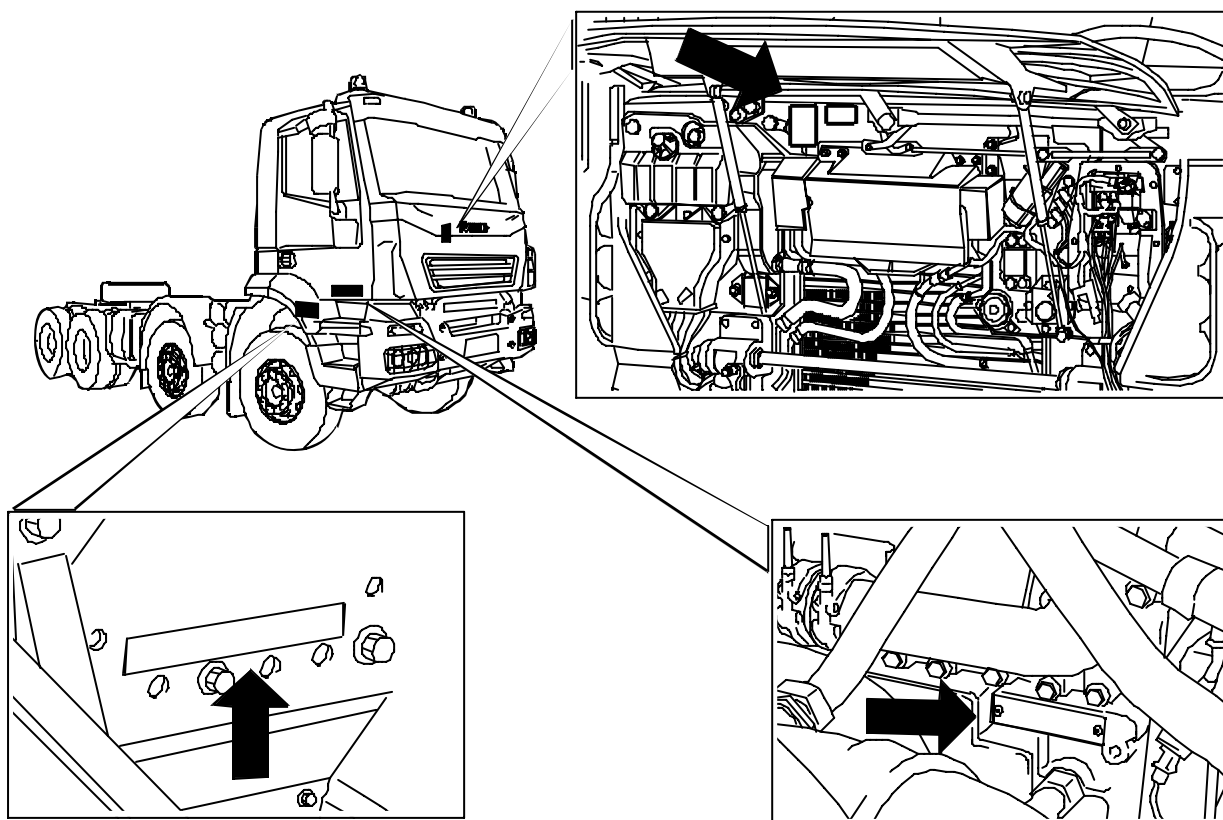**Chassis frame**

Punching (front on right side member of chassis frame).

Engine

Plate on the left rear side of the crankcase

98878

Aquila Trucks Centres

Vehicle Identification Plate

Plate legend

- a) Type-approval number marking (if applicable).
- b) Vehicle identification code number (V.I.N.).
- c) Total tractor weight.
- d) Total weight of tractor + trailer (if applicable).
- e) Permissible weight limit on 1st axle.
- f) Permissible weight limit on 2nd axle (if applicable).
- g) Permissible weight limit on 3rd axle.
- h) Permissible weight limit on 4th axle (if applicable).
- i) Specific identification of type.
- l) Wheelbase in mm.
- m) Engine type.
- n) Engine power.
- o) No. of axles.
- p) Place of manufacture.

Production Identification Plate

This plate shows the P.I.C. (production identification code number), which is needed when referring to the spare parts catalogue (electronic and/or Cd catalogue).

The P.I.C. is also given on the vehicle warranty card.

Note: When consulting the catalogues, use only the first 8 digits of the product identification code number.

Figure 2


a) IVECO MAGIRUS AG		o)	
b)			
c)		Kg	
d)		Kg	
e) 1-		Kg	
f) 2-		Kg	
g) 3-		Kg	
h) 4-		Kg	
i) Type		N° of axles	
l) Wheelbase		Corrected absorption value	
m) Engine type	n) Engine power KW		
p) Made in		IVECO	

Unit No
Part No
Serial No
P.I.C. No
Made in Germany -Iveco Magirus AG
9843 8247

Permissible grade of smoke

Aquila Trucks Centres

COMMERCIAL CODING

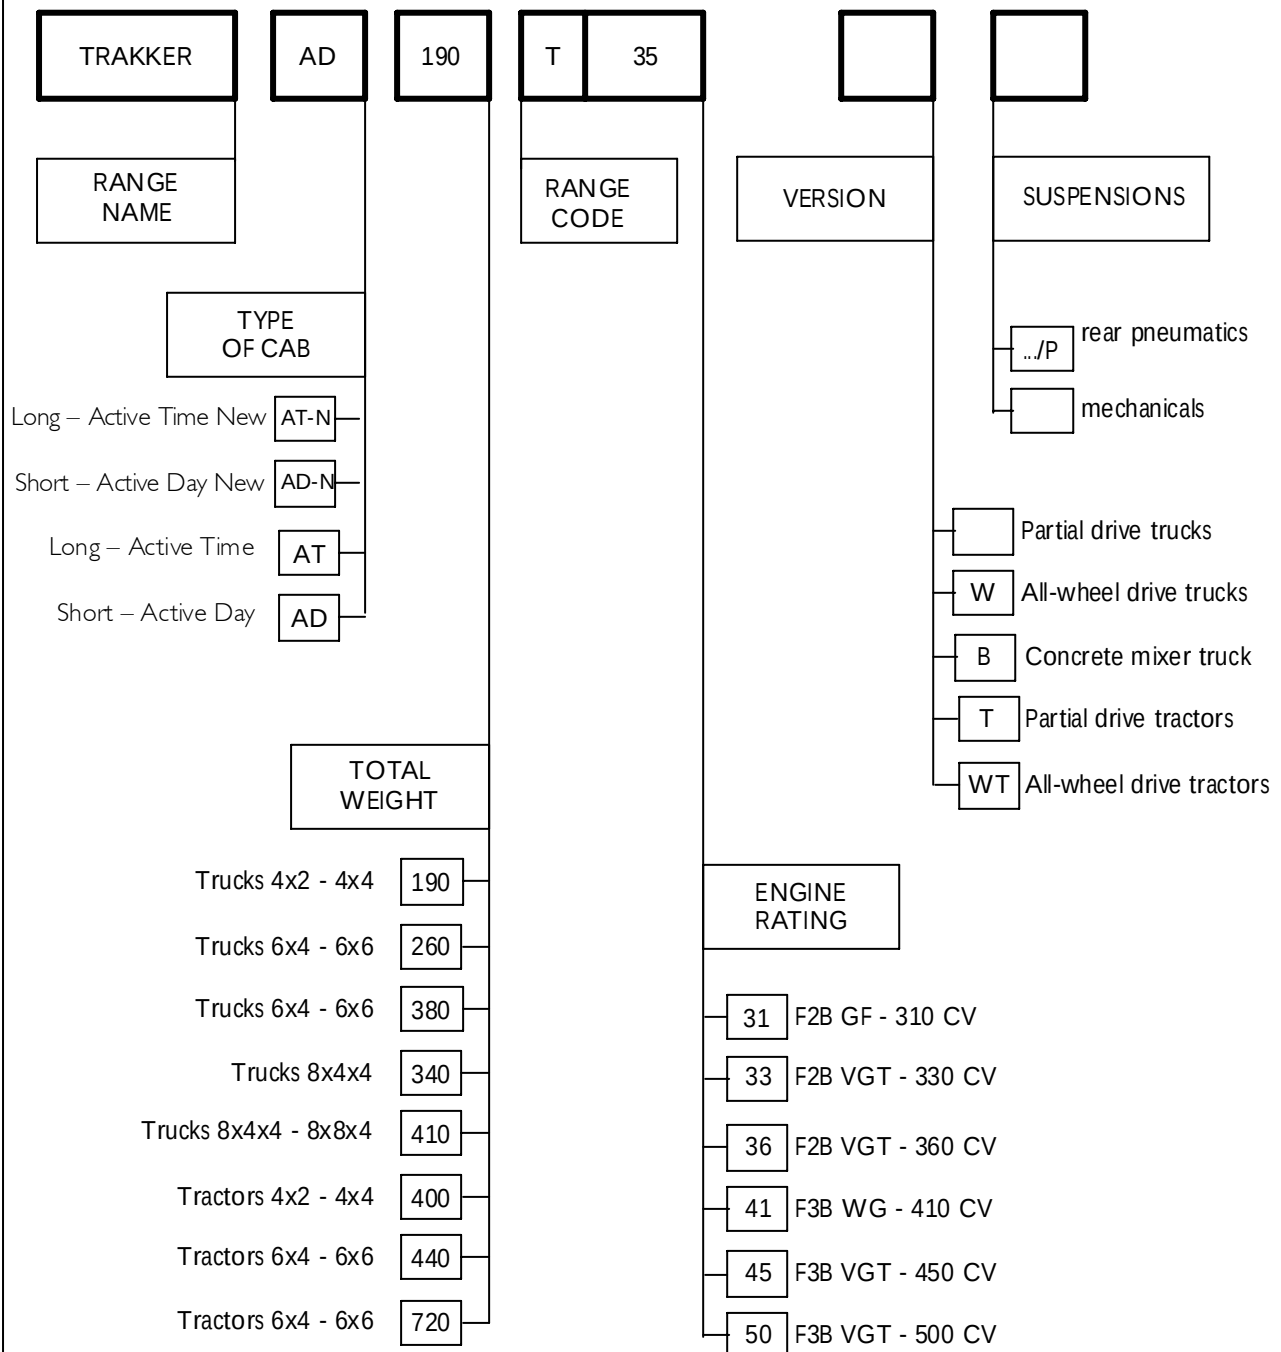

Aquila Trucks Centres

P.I.C. NUMBER CODING

HABITABILITY

➡ AD

➡ AT

AXLE CONFIGURATION - TOTAL EARTH MASS

➡ Chassis cab 4x2 (18-20 ton)

➡ Tractor 4x2 (18-20 ton)

➡ Chassis cab 6x4 - 8 mm (26 ton)

➡ Chassis cab 6x4 - 10 mm (33 ton)

➡ Tractor 6x4 - 8 mm (26 ton)

➡ Tractor 6x4 - 10 mm (33 ton)

➡ Chassis cab 8x4 - 8 mm (32 ton)

➡ Chassis cab 8x4 - 10 mm (32-40 ton)

➡ Chassis cab 4x4 (18-20 ton)

➡ Tractor 4x4 (18-20 ton)

➡ Chassis cab 6x6 - 8 mm (26 ton)

➡ Chassis cab 6x6 - 10 mm (33 ton)

➡ Tractor 6x6 - 10 mm (33 ton)

➡ Chassis cab 8x8 - 10 mm (32-40 ton)

ENGINE

➡ 310

➡ 330

➡ 360


➡ 410

➡ 450


➡ 500

➡ 560

Aquila Trucks Centres

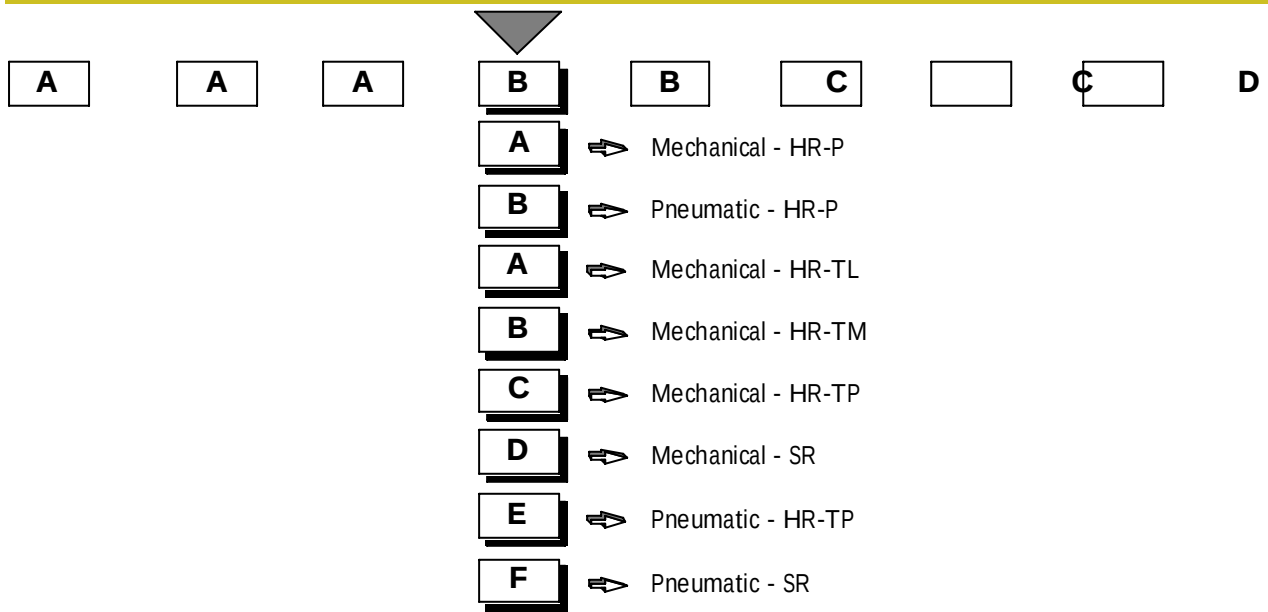TYPE OF REAR AXLE – TYPE OF SUSPENSION

H.R. = Double reduction rear axle
 S.R. = Simple reduction rear axle
 T.L. = Light tandem rear axle
 T.M. = Medium tandem rear axle
 T.P. = Heavy tandem rear axle

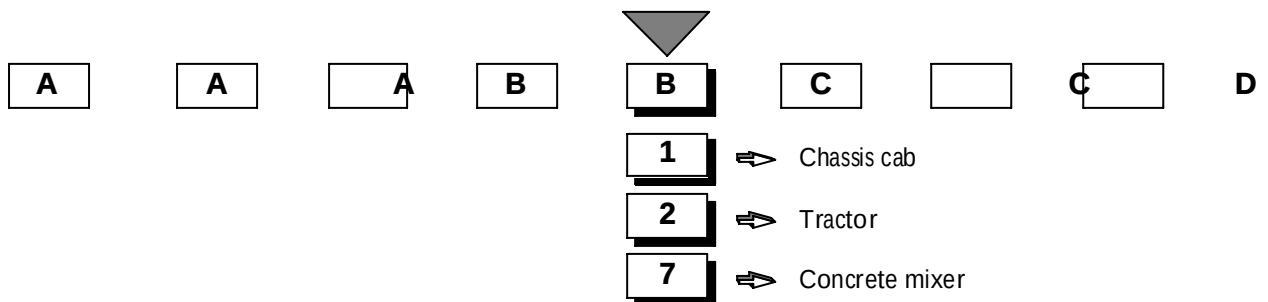VERSION

Aquila Trucks Centres

WHEELBASE



A **A** **A** **B** **B** **C** **C** **D**

VERSION WHEELBASE VERSION WHEELBASE VERSION WHEELBASE VERSION WHEELBASE

C 4 x 2 C 6 x 6	3500	C 8 x 4	4250	C/T 6 x 4	3200		1		
				C 8 x 8 C 8 x 4	4750	C 6 x 4 C 6 x 6	3500		2
C 6 x 6 C 6 x 4	3800	T 4 x 4 T 4 x 2	3800	C 4 x 2 C 4 x 4	3800	C 8 x 4 C 8 x 8	5020		3
				C 8 x 4	5820	C 4 x 2 C 4 x 4 C 6 x 4	4200		4
C 4 x 2 C 6 x 4	4200			C 4 x 2 C 4 x 4 C 6 x 4	4500		5		
C 6 x 4	4800						6		
C 4 x 2 C 6 x 4	5100						7		

C = Chassis cabs
T = Tractors



Aquila Trucks Centres

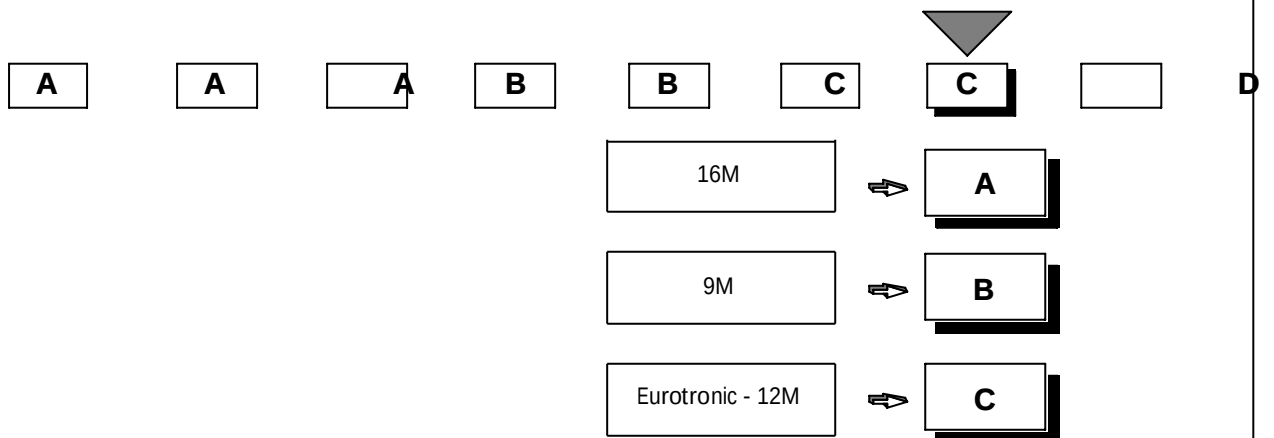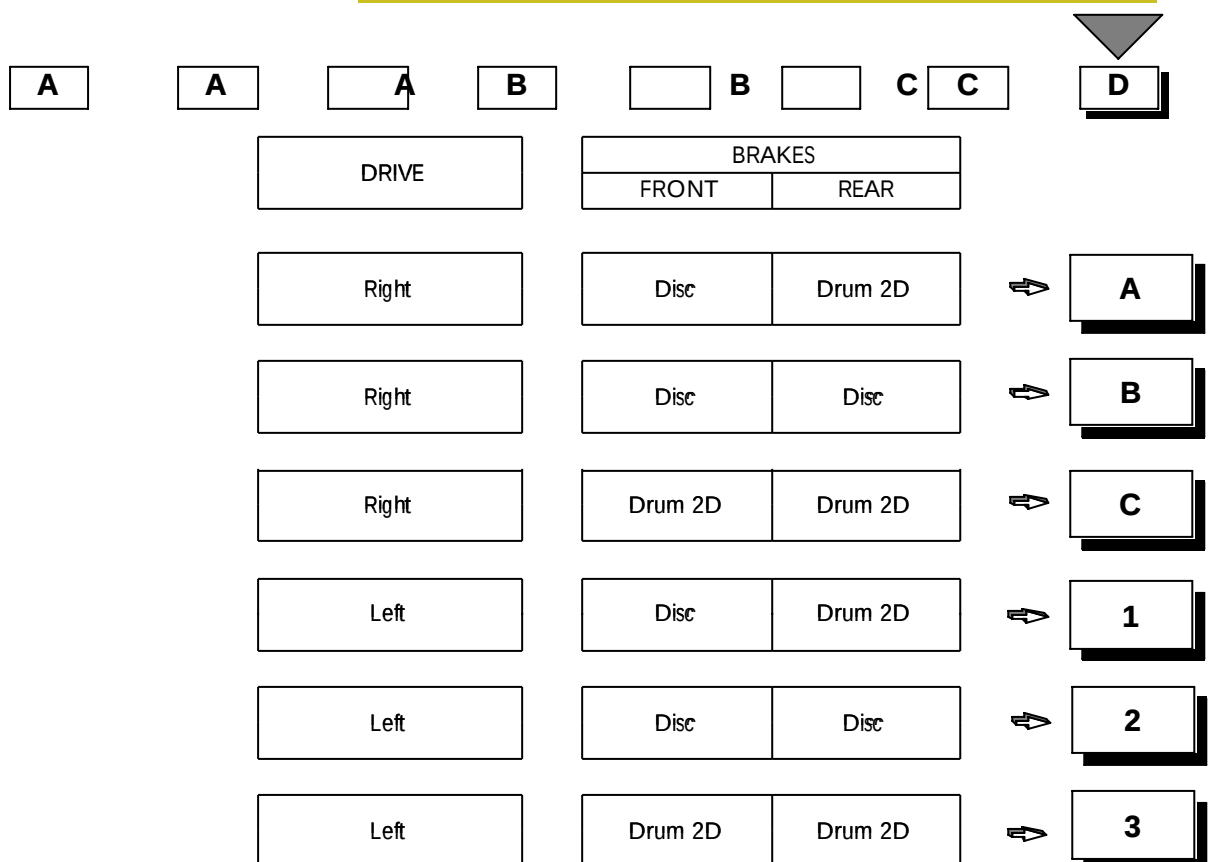GEAR SHIFTS**DRIVE - BRAKE COMBINATION**

Aquila Trucks Centres

VEHICLE CONFIGURATION

Figure 3


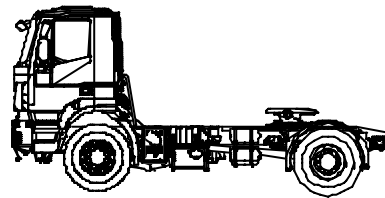
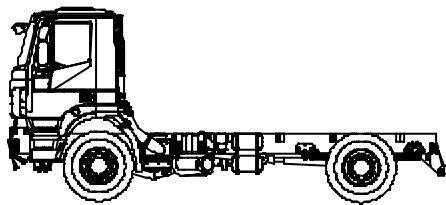


119160

4x2 = Vehicles with two axles with rear driving axle.

4x4 = Vehicles with two axles with front and rear driving axle.



Figure 4

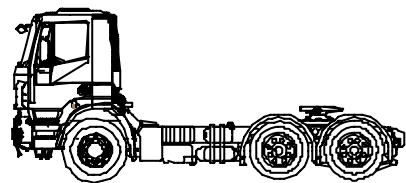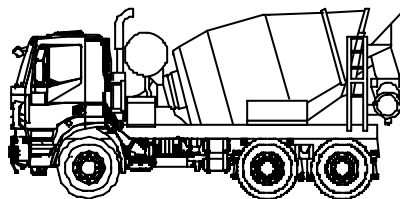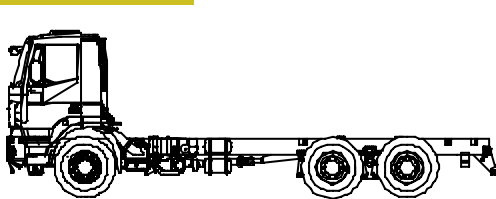

119161

6x4 = Vehicles with three axles with two rear driving axles (in Tandem).



Figure 5

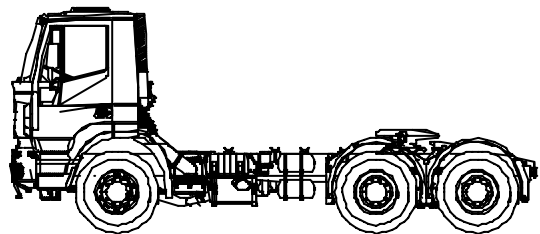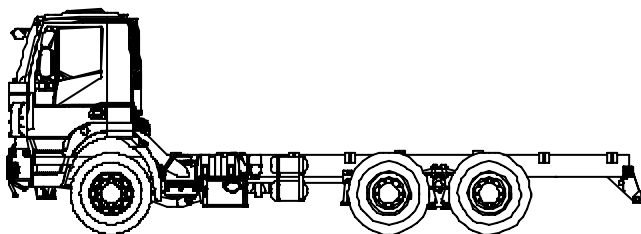

119162

6x6 = Vehicles with three axles with front axle and two rear driving axles (in Tandem).

Figure 6

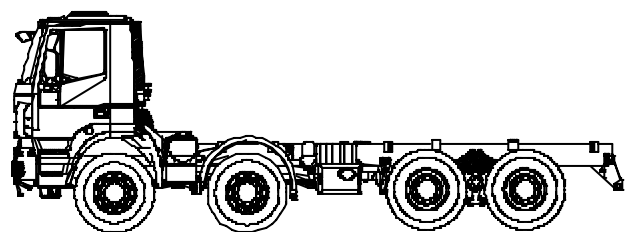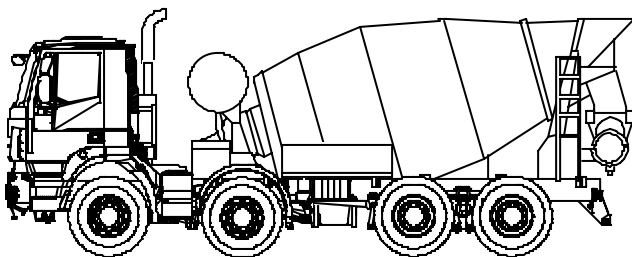

119163

8x4x4 = Vehicles with four axles: first and second steering axles, third and fourth driving axles (in Tandem)

8x8x4 = Vehicles with four driving axles with first and second steering axles and two rear axles (in Tandem)

Aquila Trucks Centres

COMPOSITION OF THE MODELS

GROUPS/CABIN		MODELS 4x2											
		190 T 31	190 T 33	190 T 36	190 T 41	190 T 45	400 T 36 T	400 T 41 T	400 T 41 T/P	400 T 45 T	400 T 45 T/P	400 T 50 T	400 T 50 T/P
	F2BE3681C (310 CV)	•											
	F2BE3681B (330 CV)		•										
	F2BE3681A (360 CV)			•			•						
	F3BE3681D (410 CV)				•			•	•				
	F3BE3681C (450 CV)					•				•	•		
	F3BE3681B (500 CV)											•	•
	Pushing one-disc 17"	•	•										
	Pulling one-disc 17"			•	•	•	•	•	•	•	•	•	•
	9S 1310 TO	•	•										
	16S 1620 TD		•	•			•						
	16S 2220 TO				•	•		•	•	•	•		
	16S 2520 TO											•	•
	12 AS 1930 TD						•						
	12 AS 2330 TO							•	•	•	•	•	•
	5886/D :	•	•	•	•	•	•	•	•	•	•	•	•
	451391/2D J	•	•	•	•	•	•	•	•	•	•	•	•
	ZF 8098	•	•	•	•	•	•	•	•	•	•	•	•
	Front mechanic	•	•	•	•	•	•	•	•	•	•	•	•
	Rear mechanic	•	•	•	•	•	•		•		•		
	Rear air								•		•		•
	Cabin type	AT/AD		•	•	•	•	•	•	•	•	•	•
		AT-N/AD-N	•	•	•	•	•	•	•	•	•	•	•

:

 
 With disc brakes

J

 With Duo Duplex drum brakes

Aquila Trucks Centres

COMPOSITION OF THE MODELS

GROUPS/CABIN		MODELS 4x4									
		190 T 31 W	190 T 31 W/P	190 T 33 W	190 T 33 W/P	190 T 36 W	190 T 36 W/P	190 T 41 W	190 T 45 W	400 T 41 W/T	400 T 45 W/T
	F2BE3681C (310 CV)	•	•								
	F2BE3681B (330 CV)			•	•						
	F2BE3681A (360 CV)					•	•				
	F3BE3681D (410 CV)							•		•	
	F3BE3681C (450 CV)								•		•
	Pushing one-disc 17"	f	f	f	f						
	Pulling one-disc 17"			•	•	•	•	•	•	•	•
	9S 1310 TO	•	•	•	•						
	16S 1620 TD			•	•	•	•				
	16S 2220 TO							•	•	•	•
	12AS 1420 TD *			•	•						
	12AS 1930 TD					•	•				
	12AS 2330 TO							•	•	•	•
	T C 1800	•	•	•	•	•	•				
	T C 2200							•	•	•	•
 FRONT	5985/2D J	•	•	•	•	•	•	•	•	•	•
 REAR	451391/2D J	•	•	•	•	•	•	•	•	•	•
	ZF 8098	•	•	•	•	•	•	•	•	•	•
	Front mechanic	•	•	•	•	•	•	•	•	•	•
	Rear mechanic	•		•		•		•	•	•	•
	Posteriori pneumatiche		•		•		•				
	Cabin type	AT/AD									
		AT-N/AD-N									

J Drum brakes Duo Duplex
 f Only for 9S1310TO gearboxes
 * Available only without Intarder

Aquila Trucks Centres

COMPOSITION OF THE MODELS



GROUPS/CABIN		MODELS 6x4															
		260 T 33	260 T 33 B	260 T 33 B/P	260 T 36	260 T 36 B	260 T 36 B/P	260 T 41	260 T 41/P	260 T 45	260 T 45/P	260 T 50	260 T 50/P	380 T 36	380 T 36 B	380 T 41	380 T 41 B
	F2BE3681B (330 CV)	*	*	*													
	F2BE3681A (360 CV)				*	*	*							*	*		
	F3BE3681D (410 CV)							*	*							*	*
	F3BE3681C (450 CV)									*	*					*	*
	F3BE3681B (500 CV)										*	*					*
	Pushing one-disc 17"	▽	▽	▽													
	Pulling one-disc 17"	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*
	9S 1310 TO	*	*	*													
	16S 1620 TD	*			*	*	*							*	*		
	16S 2220 TO							*	*	*	*				*	*	*
	16S 2520 TO								*	*	*	*					*
	12AS 1420 TD Y	*	*	*													
	12AS 1930 TD				*	*	*							*	*		
	12AS 2330 TO							*	*	*	*	*	*		*	*	*
	5886/D :	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*
	INTERMEDIATE 452146/2D J	*	*		*	*											
	REAR 452146/2D J	*	*		*	*											
	INTERMEDIATE 453291/2D J							*	*	*	*	*	*	*	*	*	*
	REAR 453291/2D J							*	*	*	*	*	*	*	*	*	*
	INTERMEDIATE 452191/2D J							*	*	*	*	*	*	*	*	*	*
	REAR 452191/2D J							*	*	*	*	*	*	*	*	*	*
	INTERMEDIATE MT 23-155/2D J																
	REAR MT 23-155/2D J																
	ZF 8098	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*
	Front mechanic	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*
	Rear mechanic	*	*		*		*	*		*	*	*	*	*	*	*	*
	Rear air			*		*			*		*	*	*			*	*
	Cabin type	AT/AD	*	h	h	*	h	h	*	*	*	*	*	*	h	*	h
		AT-N/AD-N	*	h	h	*	h	h	*	*	*	*	*	*	h	*	h

- : With disc brakes
- J With Duo Duplex drum brakes
- ◆ Only on vehicles with right-hand steering
- ▽ Only for 9S 1310 TO gearboxes
- Y Available only without Intarder
- j Cabin type AD or AD-N

(continue)

Aquila Trucks Centres

  
COMPOSITION OF THE MODELS

GROUPS/CABIN		MODELS 6x4									
		440 T 41 T	440 T 41 T/P	440 T 45 T	440 T 45 T/P	440 T 50 T	440 T 50 T/P	720 T 41 T	720 T 41 T/P	720 T 45 T	720 T 45 T/P
	F3BE3681D (410 CV)	•	•					•	•		
	F3BE3681C (450 CV)			•	•					•	•
	F3BE3681B (500 CV)					•	•				•
	Pulling one-disc 17"	•	•	•	•	•	•	•	•	•	•
	16S 2220 TO	•	•	•	•			•	•	•	•
	16S 2520 TO					•	•				•
	12AS 2330 TO	•	•	•	•	•	•	•	•	•	•
	12AS 2530 TO										
	5886/D :	•	•	•	•	•	•	•	•	•	•
	INTERMEDIATE 452191/2D J	•		•	•						
	REAR 452191/2D J	•		•	•						
	INTERMEDIATE 453291/2D J		•	•		•	•	•	•	•	•
	REAR 453291/2D J		•	•		•	•	•	•	•	•
	ZF 8098	•	•	•	•	•	•	•	•	•	•
	Front mechanic	•	•	•	•	•	•	•	•	•	•
	Rear mechanic	•		•		•		•		•	
	Rear air		•		•		•		•		•
	Cabin type	AT/AD	•	•	•	•	•	•	•	•	•
		AT-N/AD-N	•	•	•	•	•	•	•	•	•

: With disc brakes
 J With Duo Duplex drum brakes

Aquila Trucks Centres

 COMPOSITION OF THE MODELS

GROUPS/CABIN		MODELS 6x6							
		260 T 36 W	260 T 41 W	260 T 45 W	380 T 36 W	380 T 41 W	380 T 45 W	720 T 41 WT	720 T 45 WT
	F2BE3681A (360 CV)	•			•				
	F3BE3681D (410 CV)		•			•		•	
	F3BE3681C (450 CV)			•			•		•
	Pulling one-disc 17"	•	•	•	•	•	•	•	•
	16S 1620 TD	•			•				
	16S 2220 TO		•	•		•	•	•	•
	12AS 1930 TD	•			•				
	12 AS 2330 TO		•	•		•	•	•	•
	T C 1800	•			•				
	T C 2200		•	•		•	•	•	•
FRONT 	5985/2D J	•	•	•	•	•	•	•	•
TANDEM 	INTERMEDIATE 452191/2D J	•	•	•					
	REAR 452191/2D J	•	•	•					
	INTERMEDIATE 453291/2D J				•	•	•	•	•
	REAR 453291/2D J				•	•	•	•	•
	ZF 8098	•	•	•	•	•	•	•	•
	Front mechanic	•	•	•	•	•	•	•	•
	Rear mechanic	•	•	•	•	•	•	•	•
	Cabin type	AT/AD	•	•	•	•	•	•	•
		AT-N/AD-N	•	•	•	•	•	•	•

J With Duo Duplex drum brakes

Aquila Trucks Centres


COMPOSITION OF THE MODELS

GROUPS/CABIN			MODELS 8x4																			
			340 T 36	340 T 36/P	340 T 36 B	340 T 36 B/P	340 T 41	340 T 41/P	340 T 41 B	340 T 41 B/P	340 T 45	340 T 45 B	340 T 45/P	410 T 36	410 T 41	410 T 41 B	410 T 41/P	410 T 45	410 T 45 B	410 T 45/P	410 T 50	410 T 50/P
	F2BE3681A (360 CV)		*	*	*	*							*									
	F3BE3681D (410 CV)						*	*	*	*				*	*	*						
	F3BE3681C (450 CV)										*	*	*					*	*	*		
	F3BE3681B (500 CV)																				*	*
	Pulling one-disc 17"		*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*
	16S 1620 TD		*	*	*	*							*									
	16S 2220 TO						*	*	*	*	*	*		*	*	*	*	*	*	*		
	16S 2520 TO																				*	*
	12 AS 1930 TD		*	*	*	*							*									
	12 AS 2330 TO						*	*	*	*	*	*	*		*	*	*	*	*	*	*	*
	1° 5886/D :		*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*
	2° 5886/D :		*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*
	INTERMEDIATE 452146/2D J		*		*																	
	REAR 452146/2D J		*		*																	
	INTERMEDIATE 453291/2D J							*				*	*	*	*	*	*	*	*	*	*	*
	REAR 453291/2D J							*				*	*	*	*	*	*	*	*	*	*	*
	INTERMEDIATE 452191/2D J						*		*		*	*										
	REAR 452191/2D J						*		*		*	*										
	INTERMEDIATE MT 23 - 155/2D J																					
	REAR MT 23 - 155/2D J																					
	INTERMEDIATE MT 23 - 155/D :		◆	◆		*	◆	◆		*	◆		◆									
REAR MT 23 - 155/D :		◆	◆		*	◆	◆		*	◆		◆										
	ZF 8099		*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*
	Front mechanic		*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*
	Rear mechanic		*		*		*		*		*	*		*	*	*		*	*		*	
	Posteriori pneumatiche			*		*		*		*		*				*			*		*	*
	Cabin type	AT/AD	*	*	h	*	h	*	h	h	*	h	*	*	h	*	*	h	*	*	*	*
		AT-N/AD-N	*	*	h	*	h	*	h	h	*	h	*	*	*	h	*	*	h	*	*	*

- : With disc brakes
 J With Duo Duplex drum brakes
 ◆ Only on vehicles with right-hand steering

Aquila Trucks Centres

 COMPOSITION OF THE MODELS

MODELS 8x8		410 T 45W
GROUPS/CABIN		
	F3BE3681C (450 CV)	•
	Pulling one-disc 17"	•
	16S 2220 TO	•
	12 AS 2330 TO	•
	TC 2200	•
	FRONT 5985/2D J	•
	INTERMEDIATE 5985/2D J	•
	INTERMEDIATE 453291/2D J	•
	REAR 453291/2D J	•
	ZF 8099	•
	Front mechanic	•
	Rear mechanic	•
	Cabin type	AD
		AD-N
J With Duo-Duplex drum brakes		

Aquila Trucks Centres

FILLING FLUIDS

LUBRICANTS RECOMMENDED BY IVECO		PARTS TO BE FILLED UP		Quantity	
				Liters	Kg
	Urania FE 5W30 ¹ Urania LD7		Engine F2B		
			Total capacity 1st filling:	28	25.2
			Capacity:		
			- engine sump min level	12.5	11.2
			- engine sump max level	23	21
			- circulating quantity not returning to sump	5	4.5
	Urania FE 5W30 ¹ Urania LD7		Engine F3B		
			Total capacity 1 st filling	35	31.5
			Capacity:		
			- engine sump at minimum level	20	18
			- engine sump at maximum level	28	25.2
			- quantity in circulation that does not return to sump	7	6.3
	Tutela Truck FE - gear Tutela ZC 90		Gearbox		
			ZF 9S 1310 TO*	8.5	7.6
			ZF 9S 1311 TO*	21	18.9
			ZF 16S 1620 TD*	11	9.9
			ZF 16S 1621 TD*	18.5	16.6
			ZF 16 S 2220 TO/2520 TO*	13	11.7
			ZF 16 S 2221 TO/2521 TO*	21.5	19.3
			ZF 12 AS 1420 TD*	11	9.9
			ZF 12 AS 1930 TD/2330 TO*	12	10.8
	Tutela ZC 90 Tutela GI/A for arctic climate		* Quantity 1 st filling		
			Transfer box TC 1800 (32180)	6.5	5.5
			TC 2200 (32220)	6.5	5.5

(1) IVECO recommends using these oils for better fuel economy. IVECO supplies each new vehicle ready filled with this type of lubricant Also designed for cold climates (minimum temperature down to -30°).

Aquila Trucks Centres

FILLING FLUIDS

LUBRICANTS RECOMMENDED BY IVECO		PARTS TO BE FILLED UP	Quantity		
			Liters	Kg	
 Tutela W140/M-DA Tutela W90/M-DA ¹		Axle 5886/D (for each hub)	0.35	0.32	
		 Front axle 5985/2D	5	4.5	
		 Front axle wheels reduction unit 5985/2D	0.75	0.68	
		Rear axle 451391/2D	16	14.5	
		Axle in tandem 453291/2D:			
		- (intermediate + transm.)	27	24.3	
		- rear	16	14.5	
		Axle in tandem 452191/2D:			
		- (intermediate + transm.)	27	24.3	
		- rear	16	14.5	
		Axle in tandem 452146/2D:			
		- (intermediate + transm.)	13	11.7	
		- rear	11.5	10.5	
 Tutela GI/A		Axle in tandem MT 23-155:			
		- (intermediate + transm.)	20	18	
		- rear	18.5	16.6	
 Tutela GI/A		Power steering	2.7*	2.4	
			13.5**	12	
 Tutela TRUCK DOT SPECIAL		Clutch circuit (excluding vehicles with Euro Tronic gearbox)	0.5	0.45	
 Water+Parafu ¹¹		Cooling system			
		Engine F2B	Total capacity *	~34	30.6
		Engine F2B with Intarder	Total capacity *	~50	45
		Engine F3B	Total capacity *	~44	39.6
		Engine F3B with Intarder	Total capacity *	~64	58
 Tutela LHM		* = Protective anti-freeze (concentration 50% freezing point -35°C)			
		Cab tilting system	0.6	0.54	
		* = Protective anti-freeze (concentration 50% freezing point -35°C)			
(1) Specific for cold climates					

Aquila Trucks Centres

International specifications of lubricants and fluids		FL Products
Engine oil		
Meets the specifications:		
ACEA E4 with a totally synthetic base	SAE 5W 30	URANIA FE 5W 30 (1)
IVECO Standard 18-1804		
ACEA E7 with a mineral base	SAE 15W 40	Urania LD7
IVECO Standard 18-1804 T2E7		
Oil for total power takeoff (Multi-power)		
Containing non-EP anti-wear additives		
Complies with the following specification:		
API GL5 with a mineral base	SAE 80W90	Tutela ZC 90
IVECO Standard 18-1807		
Oil for differential gear and wheel hubs		
Meets the specifications:		
API GL5 with a mineral base	SAE 85W 140	Tutela W140/M-DA (hot or mild climates)
API GL5 with a mineral base	SAE 80W 90	Tutela W90/M-DA (cold climates)
IVECO Standard 18-1805		
Oil for mechanical gearboxes		
Containing non-EP anti-wear additives		
Meets the specifications:		
API GL4 with a totally synthetic base	SAE 75W 80	Tutela Truck FE-Gear (1)
API GL3 with a mineral base	SAE 80W 90	Tutela ZC 90
IVECO Standard 18-1807		
Oil for hydrostatic transmission and power steering oil		
A.T.F. DEXRON II D		Tutela GI/A
A.T.F. DEXRON III		Tutela A.T.F. 90
Grease for general use		
with base of lithium soap, consistency N.L.G.I. no. 2		
IVECO Standard 18-1810		Tutela MR 2
Grease for bearings and wheel hubs		
with base of lithium soap, consistency N.L.G.I. no. 3		
IVECO Standard 18-1810		Tutela MR 3
Fluid for hydraulic brakes and clutch control		
complies with standards: N.H.T.S.A. N. 116 ISO 4925 -Std. SAE J 1703		
CUNA NC 956-01 - IVECO STANDARD 18 - 1820		Tutela TRUCK DOT SPECIAL
Mineral oil for hydraulic circuits		
complies with standards: IVECO STANDARD 18-1823		
		Tutela LHM
Windshield washer liquid,		
mixture of alcohols, water and surface tensioners		
CUNA NC 956-11		Tutela Professional SC 35
Grease for centralised lubrication systems		
with base of lithium soap (synthetic base), N.L.G.I. no. 2.		
Operating temperatures: -30 °C to +140 °C		Tutela COMAR 2
Mineral oil for hydraulic circuits		
complies with standard: IVECO STANDARD 18-1830		
to be used diluted with water at 50%		Parafllu ¹¹
(1) IVECO recommends using this type of oils to obtain benefits in terms of "fuel economy". The new vehicle is already equipped by IVECO with this type of lubricants (also adequate for cold climate min. temperature up to -30°C).		
These quantities are not determinant. The exact check to be done when checking levels.		

Aquila Trucks Centres

SECTION 2

Engines

	Page
- F2B Engine	3÷122
- F3B Engine	123÷246
- Hydrocar pressure take-off on timing system (P.T.O. - Optional)	247÷250
- Denox 2 system	251÷258
- Diagnosis	259÷292

Aquila Trucks Centres

Aquila Trucks Centres

F2B Engine

	Page
VIEWS OF THE ENGINE	8
MAIN DATA	12
ASSEMBLY CLEARANCE DATA	15
TIGHTENING TORQUES	22
TOOLS	29
ENGINE REMOVAL - REFITTING	39
- Removal	39
- Refitting	40
- Filling the cooling system	41
- Bleeding air from the fuel system	42
- Checks and tests	42
ELECTRO-MAGNETIC FAN DRIVE REPLACEMENT ..	43
- Removal	43
- Refitting	44
DISASSEMBLING THE ENGINE	47
REPAIR OPERATIONS	54
CYLINDER BLOCK	54
- Checks and measurements	54
CYLINDER LINERS	55
- Replacing cylinder liners	56
- Removal	56
- Fitting and checking protrusion	56
CRANKSHAFT	57
- Measuring main journals and crank pins	58
PRELIMINARY MEASUREMENT OF MAIN AND BIG END BEARING SHELL SELECTION DATA	59
- Replacing the valve drive gear and the oil pump drive gear	66
- Checking main journal installation clearance ...	66
- Checking crankshaft end float	67
PISTON-CONNECTING ROD ASSEMBLY	68
- Removal	68
- Measuring the diameter of the pistons	69

Aquila Trucks Centres

	Page		Page
- Conditions for correct gudgeon pin-piston coupling	69	- Removal	82
- Piston rings	70	- Assembly	82
CONNECTING ROD	71	VALVE SPRINGS	83
- Checking connecting rod squareness	72	- Fitting the valves and oil seal ring	83
- Fitting the connecting rod-piston assembly	72	ROCKER SHAFT	84
- Fitting the piston rings	72	- Shaft	84
- Fitting the connecting rod-piston assembly into the cylinder liners	73	- Rocker	84
- Piston protrusion check	73	ASSEMBLING THE ENGINE	85
- Checking assembly clearance of big end pins ..	74	DIAGRAM SHOWING THE LOWER CRANKCASE FIXING SCREWS TIGHTENING ORDER	87
CYLINDER HEAD	74	- Fitting the connecting rod-piston assembly into the cylinder liners	88
- Dismounting the valves	74	FLYWHEEL	91
- Checking the planarity of the head on the cylinder block	74	- Fitting flywheel	91
VALVE	75	- Fitting camshaft	92
- Removing dust and checking the valves	75	- Fitting pump-injectors	93
VALVE GUIDES	75	- Fitting rocker-arm shaft assembly	93
- Replacing of valve guides	76	- Camshaft timing	94
- Replacing - Reaming the valve seats	76	- Phonic wheel timing	96
REPLACING INJECTOR HOLDERS	76	- Intake and exhaust rocker clearance adjustment and pre-loading of rockers controlling pump injectors	97
- Removal	76	ENGINE COMPLETION	98
- Checking protrusion of injectors	78	LUBRICATION	101
TIMING GEAR	79	- Oil pump	103
- Camshaft drive	79	- Safety relief valve	103
- Intermediate gear pin	79	- Oil overpressure valve	104
- Idler gear	79	- Heat exchanger	104
- Twin idler gear	79	- By-pass valve	105
- Replacing the bushings	79	- Thermostatic valve	105
- Camshaft	80	- Engine oil filters	105
- Checking cam lift and pin alignment	80		
- Bushes	81		
- Replacing camshaft bushes using beater 99360487	82		


Page

Base - November 2006

Aquila Trucks Centres

Aquila Trucks Centres

Figure 1

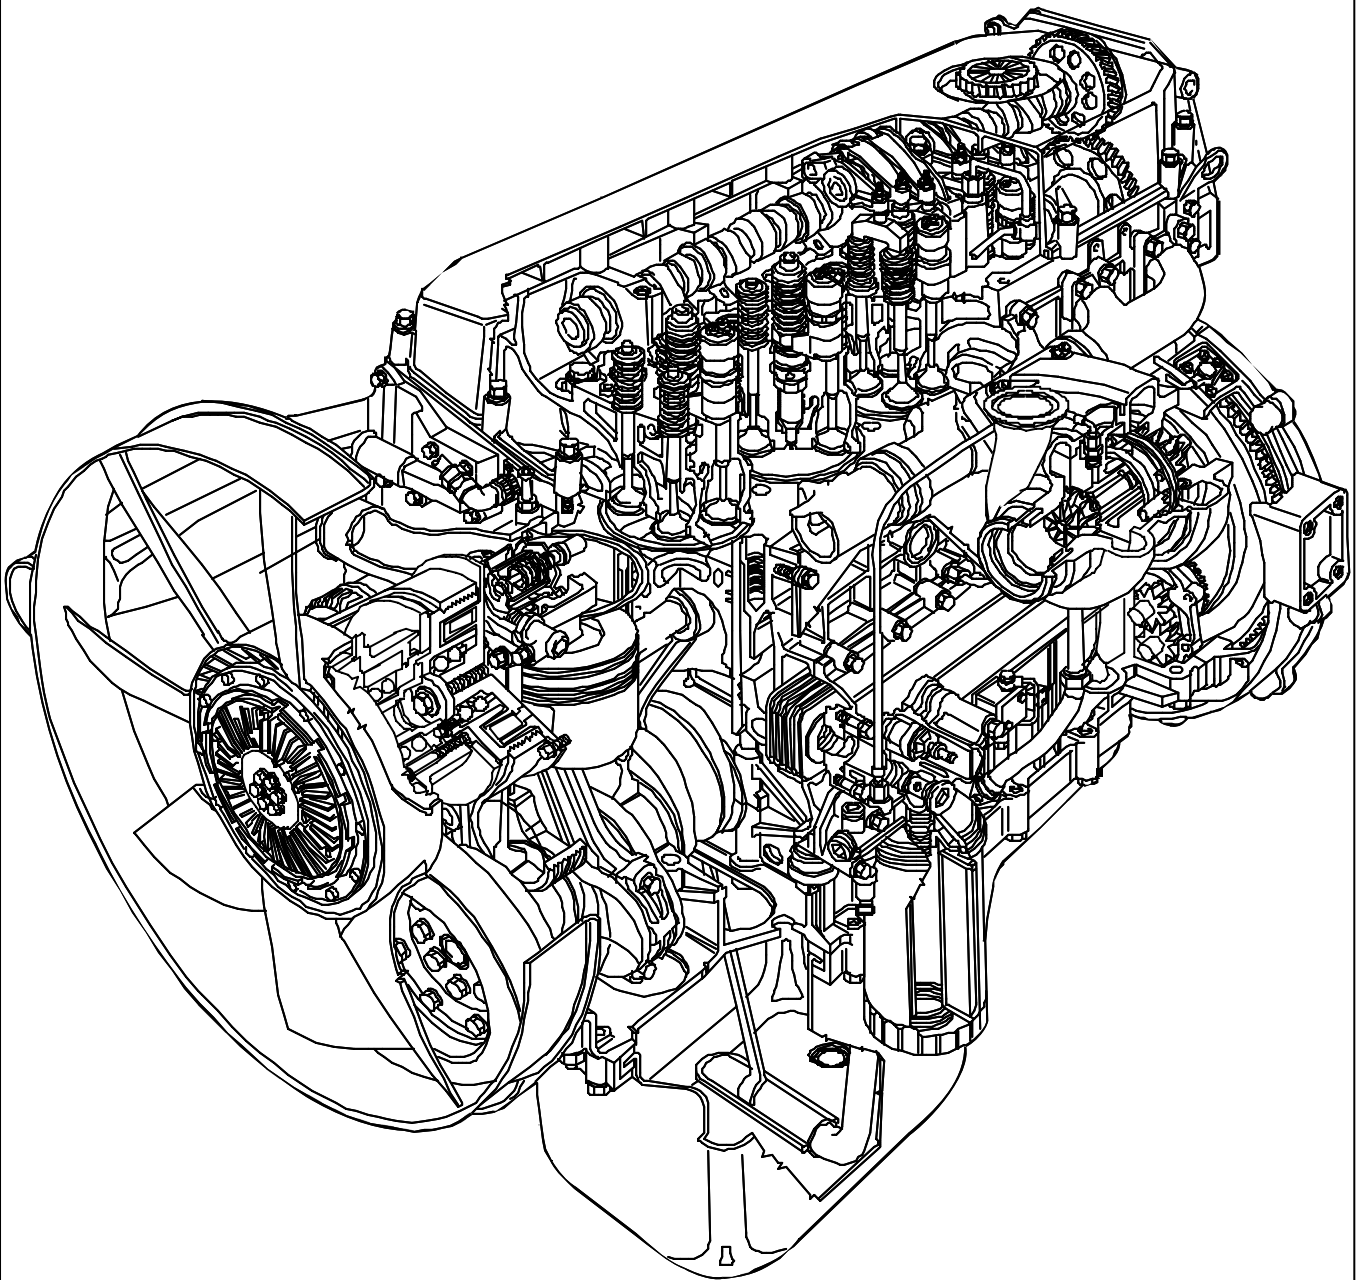


78840

F2B ENGINE

Aquila Trucks Centres


VIEWS OF THE ENGINE

ENGINE

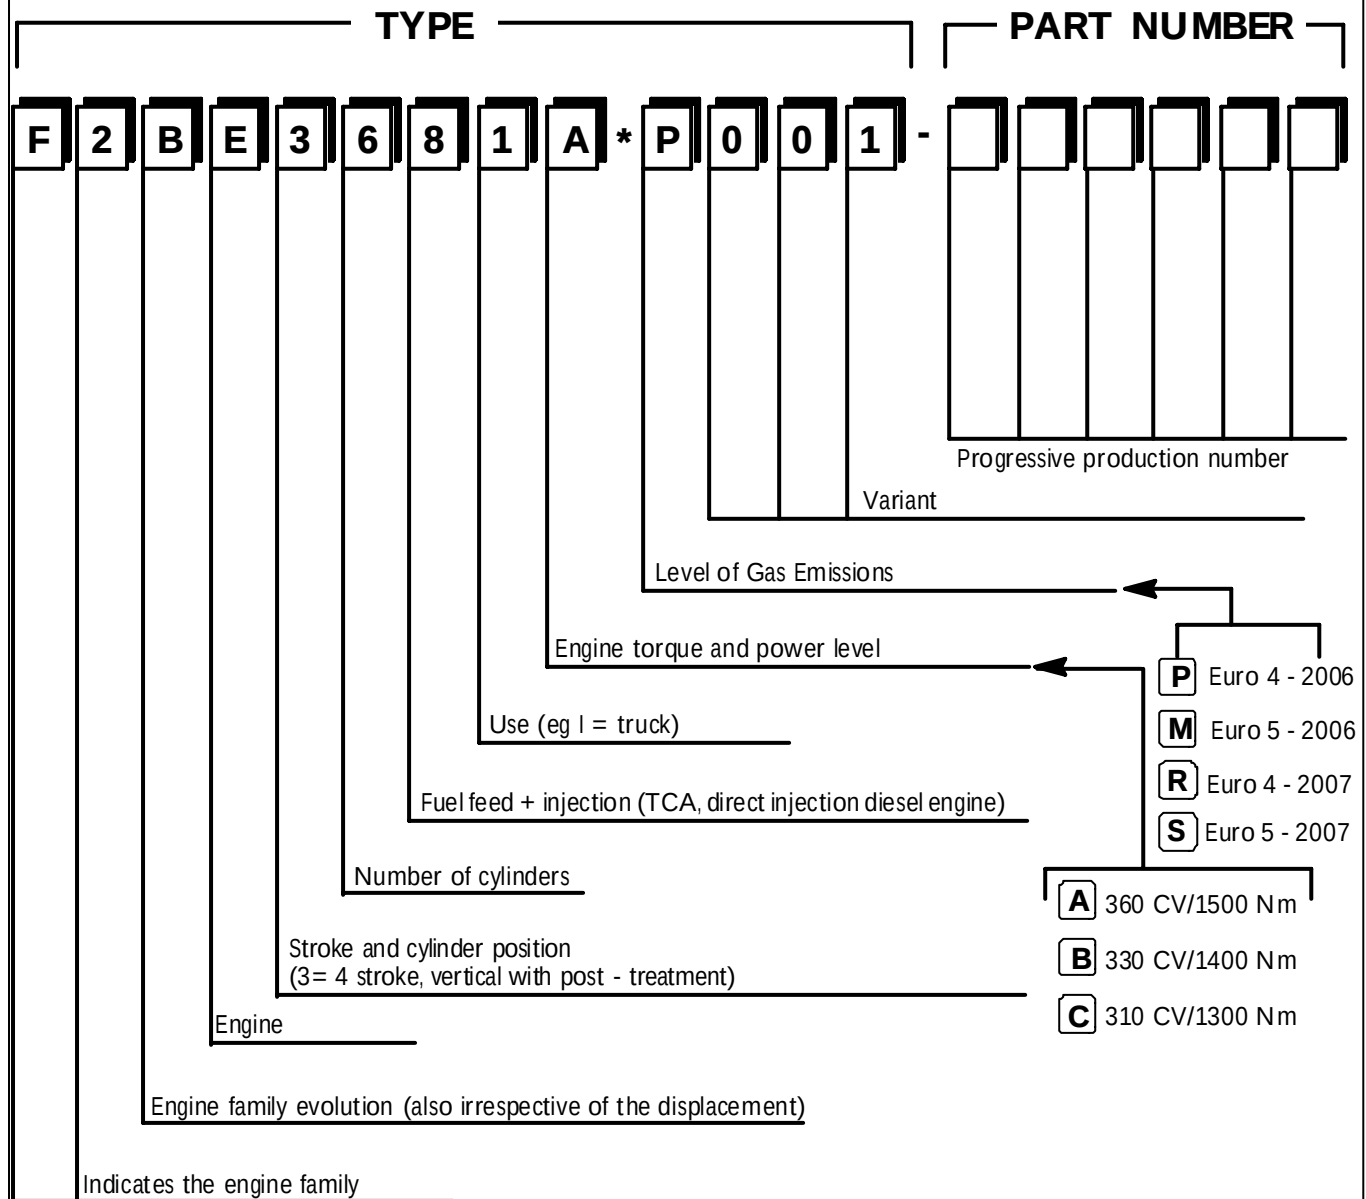

Aquila Trucks Centres

Figure 2

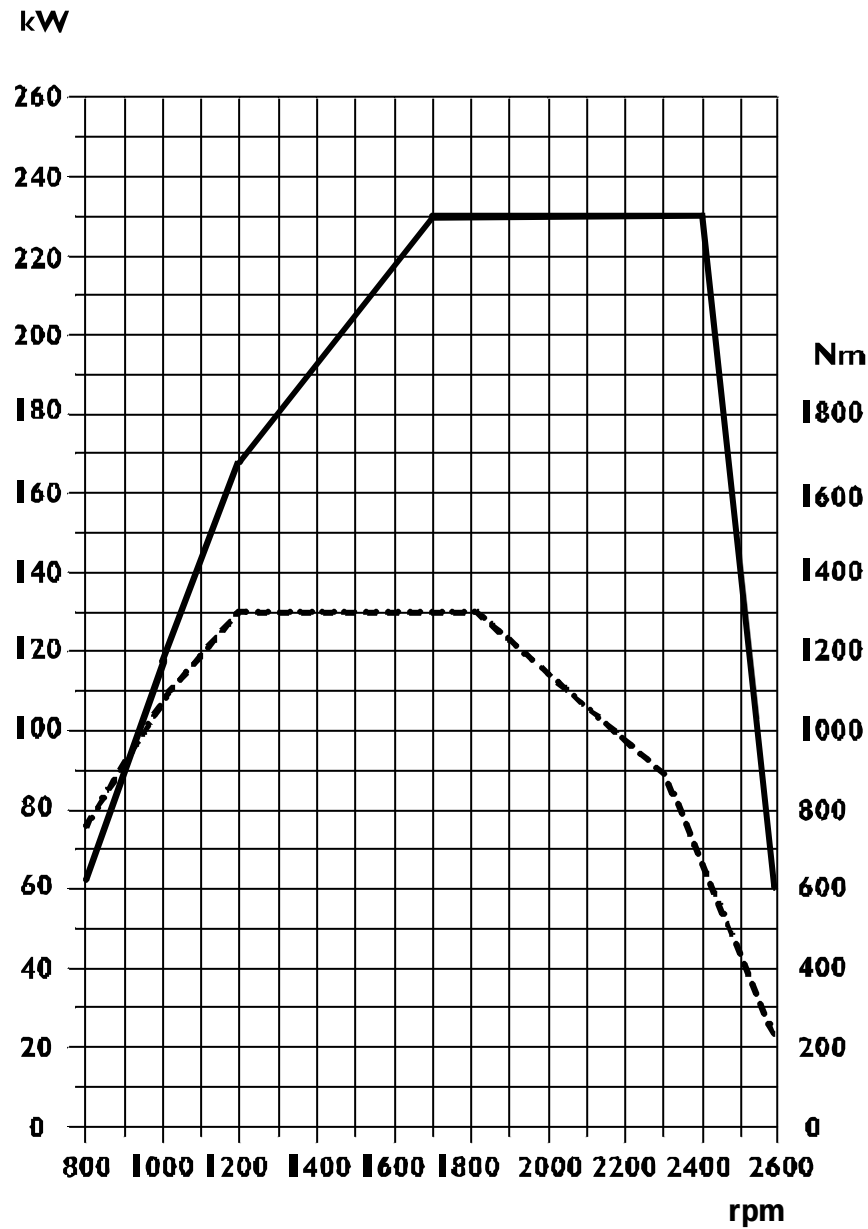

108514

F2BE3681C: POWER-TORQUE CURVES

Max OUTPUT 230 kW

310 HP

2400 rpm


Max TORQUE 1300 Nm

132 kgm

1200 to 1675 rpm

Aquila Trucks Centres

Figure 3

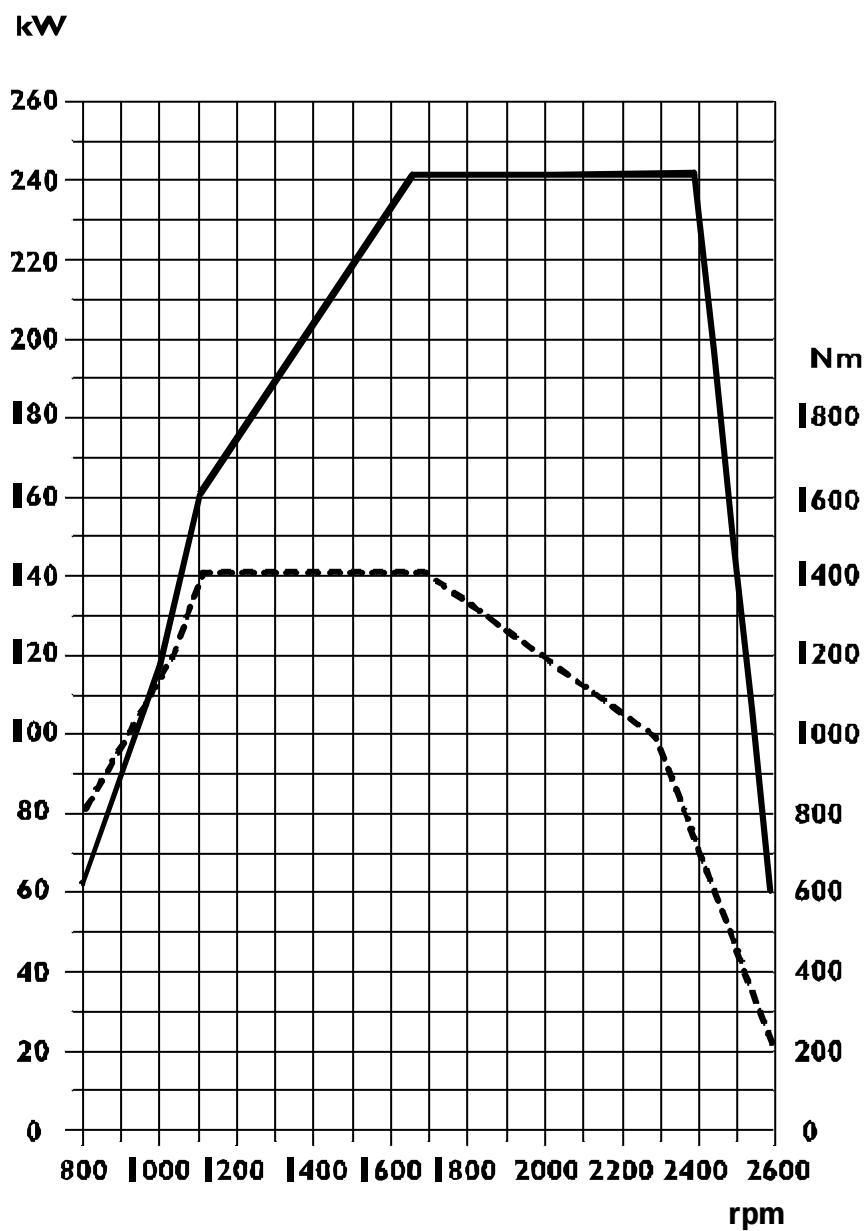

108515

F2BE3681B: POWER-TORQUE CURVES

Max OUTPUT 245 kW

330 HP

2400 rpm


Max TORQUE 1400 Nm

143 kgm

1080 to 1655 rpm

Aquila Trucks Centres

Figure 4

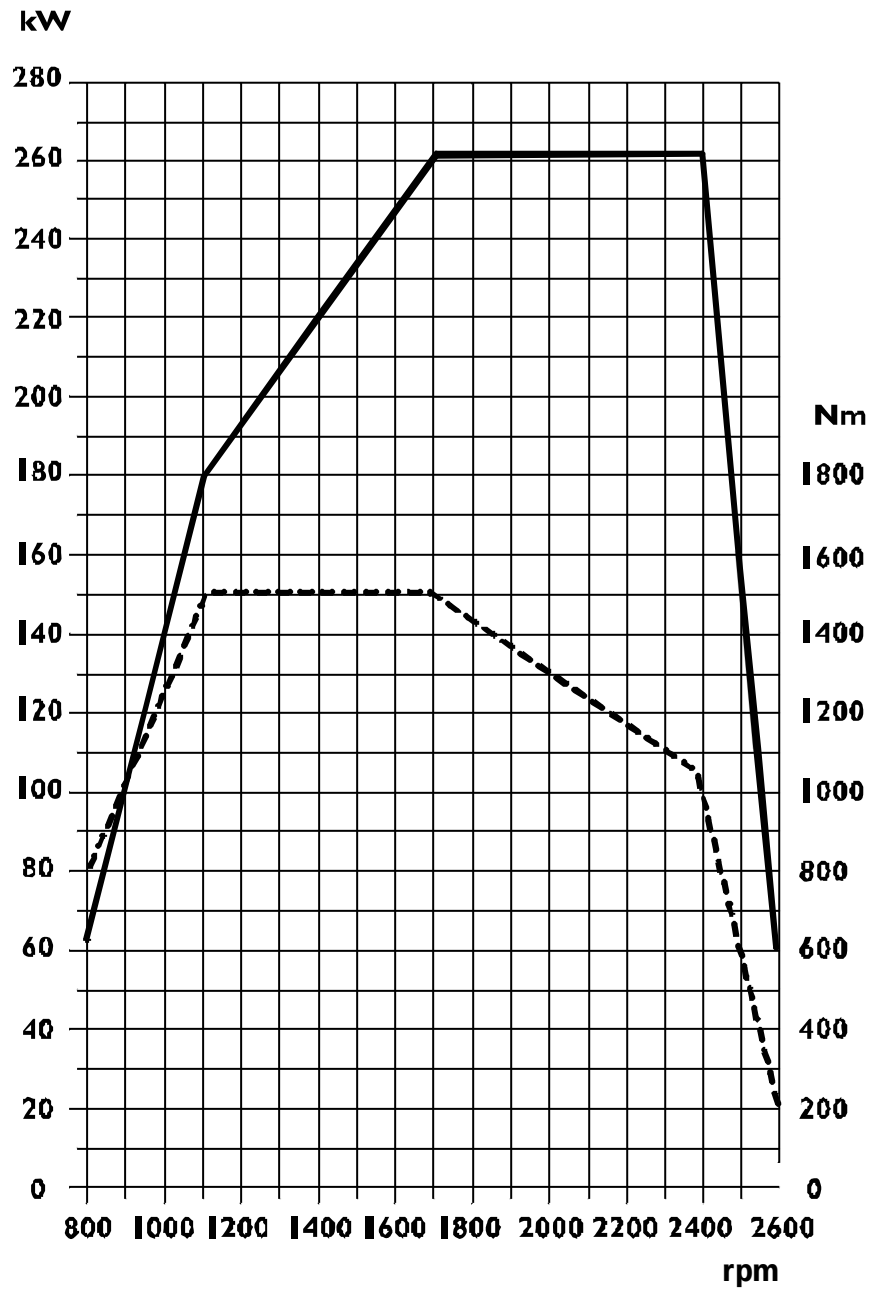

108516

F2BE3681A: POWER-TORQUE CURVES

Max OUTPUT 265 kW

360 HP

2400 rpm

 
 
 
Max TORQUE 1500 Nm

153 kgm








1200 to 1685 rpm

Aquila Trucks Centres



MAIN DATA

	Type	F2BE3681C	F2BE3681B	F2BE3681A
	Cycle	4-stroke Diesel engine		
	Fuel feed	Turbocharged with aftercooler		
	Injection	Direct		
	No of cylinders	6 in line		
	Bore mm	115		
	Stroke mm	125		
	➤➤➤ Total displacement cm ³	7790		
	Compression ratio	16 ± 0.8		
	Max. output kW (HP)	230 (310)	245 (330)	265 (360)
	rpm	2400	2400	2400
	Max. torque Nm (kgm)	1300 (132)	1400 (143)	1500 (153)
	rpm	1200÷1675	1080÷1655	1200÷1685
	Engine idling speed no load rpm	600 ± 50		
	Maximum engine speed no load rpm	2660 ± 50		

    Aquila Trucks Centres

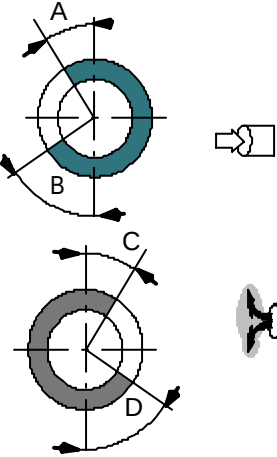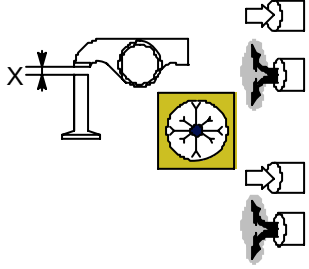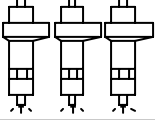	Type	F2B
 VALVE TIMING opens before T.D.C. A closes after B.D.C. B opens before B.D.C. D closes after T.D.C. C		17° 31° 48° 9°
 For timing check Running X X	mm mm mm mm	— — 0.35 to 0.45 0.35 to 0.45
	FEED	Through fuel pump - Filters
	Injection type Bosch	With electronically regulated injectors UIN2 pump injectors controlled by overhead camshaft
	Nozzle type	—
	Injection order	1 - 4 - 2 - 6 - 3 - 5
	Injection pressure bar	1600






 
 
Aquila Trucks Centres

	Type	F2BE3681C	F2BE3681B	F2BE3681A
	SUPERCHARGING Turbocharger type:	Fixed geometry HOLSET HX 40	Variable geometry HOLSET HE 431 V	
	LUBRICATION Oil pressure, engine hot (100 °C ± 5 °C): at idling speed bar at maximum speed bar	Forced by gear pump, overpressure valve, oil filter 1.5 5		
COOLING		By centrifugal pump, thermostat, electro-magnetizing fan, radiator and heat exchanger		
Water pump control		By belt		
Thermostat: starts to open: fully open:		N. 1 ~85 °C —		
 Urania FE 5W30 Urania LD7	OIL FILLING Total capacity at 1st filling liters kg	28 25.2		
	Capacity: - engine sump min level liters kg	12.5 11.2		
	- engine sump max level liters kg	23 21		
	- quantity in circulation that does not flow back to the engine sump liters kg	5 4.5		
	- quantity contained in the cartridge filter (which has to be added to the cartridge filter refill) liters kg	2.5 2.3		




Urania FE 5W30
Urania LD7

Aquila Trucks Centres

  ASSEMBLY CLEARANCE DATA




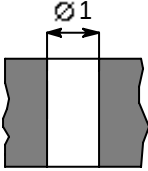
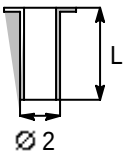
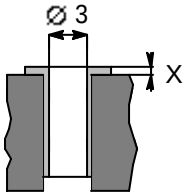
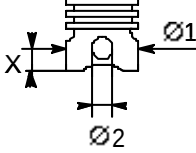
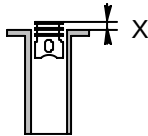

 Type	F2B
CYLINDER BLOCK AND CRANK MECHANISM COMPONENTS	mm
 Cylinder liner bore $\varnothing 1$ { upper lower	130.200 to 130.225 128.510 to 128.535
 Cylinder liners: outer diameter: $\varnothing 2$ { upper lower length L	130.161 to 130.186 128.475 to 128.500
 Cylinder liner - crankcase bore upper lower	0.014 to 0.064 0.010 to 0.060
  > Outside diameter $\varnothing 2$	-
 Cylinder liner $\varnothing 3$ A* inside diameter $\varnothing 3$ B* Protrusion X** * Available dia. class ** Under a load of 6000 kg	115.000 to 115.012 115.010 to 115.022 0.035 to 0.065
 Pistons: measuring point X outside diameter $\varnothing 1$ A* outside diameter $\varnothing 1$ B** outside diameter $\varnothing 2$ * Class A pistons supplied as spares. ** Class B pistons are fitted in production only and are not supplied as spares.	18 114.871 to 114.883 114.881 to 114.893 46.010 to 46.018
 Piston - cylinder liner	0.117 to 0.141
  < Piston diameter $\varnothing 1$	-
 Pistons protrusion X	0.32 to 0.69
 Gudgeon pin $\varnothing 3$	45.994 to 46.000
 Gudgeon pin - pin housing	0.010 to 0.024

  Aquila Trucks Centres

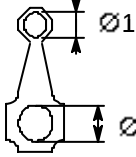	Type	F2B	
		mm	
		FEDERAL MOGUL J	MAHLE PISTON Y
	X1* X2 X3 *measured on $\varnothing$ of 111 mm	1.583 (rated) 1.554 to 1.574 4.02 to 4.04	1.583 to 1.613 1.550 to 1.570
	S1 S2 S3 D Measured at 2 mm from the $\varnothing$ outside Piston rings: Compression ring S1* Scraper ring S2 Slotted oil scraper ring S3	1.429 to 2.463 1.47 to 1.50 3.970 to 3.990	
	1 2 J 2 Y 3 Piston rings - grooves	0.247 to 0.311 0.054 to 0.104 0.050 to 0.100 0.030 to 0.070	0.111 to 0.175
	 Piston rings	-	
	X1 X2 X3 Piston ring end gap in cylinder liners: X1 X2 X3	0.30 to 0.40 0.55 to 0.70 0.35 to 0.65	
	Small end bush housing $\varnothing 1$ Big end bearing housing $\varnothing 2$ Selection classes $\varnothing$ 1 2 3	Rated value 49.975 to 50.000 77.000 to 77.030 77.000 to 77.010 77.011 to 77.020 77.021 to 77.030	
	Small end bush diameter outside $\varnothing 4$ inside $\varnothing 3$ Big end bearing shell S Red Green Yellow	50.055 to 50.080 46.015 to 46.030 2.000 to 2.010 2.011 to 2.020 2.021 to 2.030	
	Small end bush - housing	0.055 to 0.105	
	Piston pin - bush	0.015 to 0.036	
	 Big end bearing shells	0.127 - 0.254 - 0.508	
	Connecting rod weight Class A B C	g. 2865 to 2895 g. 28961 to 2925 g. 2926 to 2955	

* Factory-assembled only, and not provided with a spare part

  

 




Aquila Trucks Centres

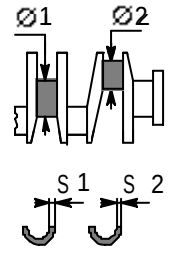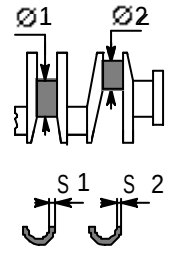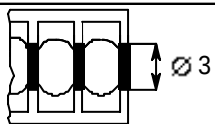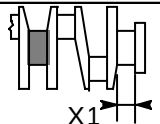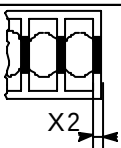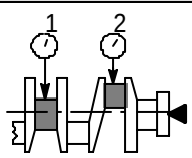	Type	F2B	
		mm	
	Measuring point X	125	
	Max. connecting rod axis misalignment tolerance //	0.08	
	Main journals $\varnothing 1$	Rated value	82.910 to 82.940
	Selection class $\begin{cases} 1 \\ 2 \\ 3 \end{cases}$		82.910 to 82.919 82.920 to 82.929 82.930 to 82.940
	Crankpins $\varnothing 2$	Rated value	72.915 to 72.945
	Selection class $\begin{cases} 1 \\ 2 \\ 3 \end{cases}$		72.915 to 72.924 72.925 to 72.934 72.935 to 72.945
	Main bearing shells S1		
	Red Green Yellow D		3.000 to 3.010 3.011 to 3.020 3.021 to 3.030
	Big end bearing shells S2		
	Red Green Yellow D		2.000 to 2.010 2.011 to 2.020 2.021 to 2.030
	Main bearing housings $\varnothing 3$	Rated value	89.000 to 89.030
	Selection class $\begin{cases} 1 \\ 2 \\ 3 \end{cases}$		89.000 to 89.009 89.010 to 89.019 89.020 to 89.030
	Bearing shells - f main journals	0.040 $\div$ 0.098 * - 0.040 $\div$ 0.110 **	
	Bearing shells - f big ends	0.035 $\div$ 0.093 * - 0.035 $\div$ 0.083**	
	Main bearing shells	0.127 - 0.254 - 0.508	
	Big end bearing shells	0.127 - 0.254 - 0.508	
	Main journal, thrust bearing X1	39.96 to 40.00	
	Main bearing housing, thrust bearing X2	32.94 to 32.99	
	Thrust washer halves X3	3.38 to 3.43	
	Crankshaft shoulder	0.11 to 0.30	
	Parallel $\begin{cases} // \\ \odot \end{cases}$ 1 - 2	0.010	
	Concentric $\begin{cases} // \\ \odot \end{cases}$ 1 - 2	0.040	










D Only mounted in production and not provided with spares

f Spares provided: : * = standard spares - 0.127; ** = 0.254 - 0.508





 






Aquila Trucks Centres

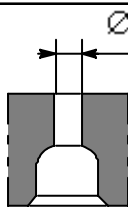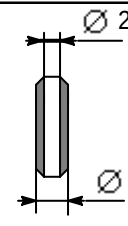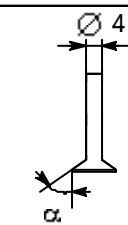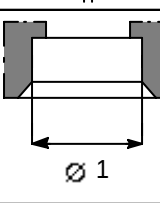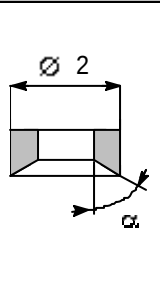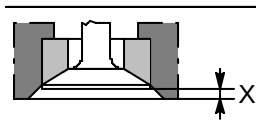	Type	F2B
CYLINDER HEADS - VALVE TRAIN		mm
	Valve guide housings in cylinder head Ø 1	12.980 to 12.997
	Valve guide Ø 2 Ø 3	8.023 to 8.038 13.012 to 13.025
	Valve guides - housings in the cylinder head	0.015 to 0.045
	Valve guide	0.2 to 0.4
	Valves: Ø 4 α Ø 4 α	7.970 to 7.985 $60^{\circ} 30' \pm 7' 30''$ 7.970 to 7.985 $45^{\circ} +15' -0''$
	Valve stem and its guide	0.038 to 0.068
	Housing in head for valve seat Ø 1 Ø 1	41.985 to 42.020 40.985 to 41.020
	Outside diameter of valve seat; angle of valve seat in cylinder head: Ø 2 α Ø 2 α	42.060 to 42.075 $60^{\circ} - 30'$ 41.060 to 41.075 $45^{\circ} - 30'$
	Recessing of valve X	0.5 to 0.8 1.6 to 1.9
	Between valve seat and head	0.040 to 0.090

  
Aquila Trucks Centres

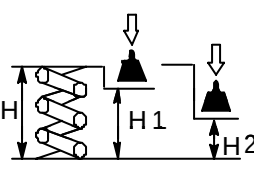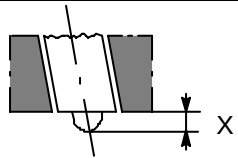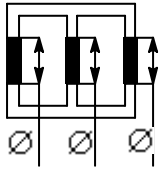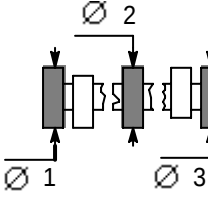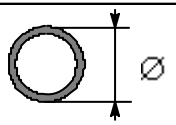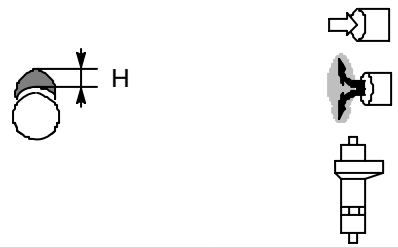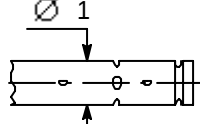	Type	F2B
		mm
 Valve outside spring height: free height H under a load of: 540 ± 27N H1 966 ± 48N H2		66 49 .5 37 .5
 Injector protrusion X		0.7
 Camshaft bush housing fitted in the cylinder head: 1 ⇒ 7 Ø		80.000 to 80.030
 Camshaft journal diameter: 1 ⇒ 7 Ø		75.924 to 75.940
 Camshaft bushing outer diameter: Ø		80.090 to 80.115
 Camshaft bushing inner diameter: Ø1 ⇒ 6 Ø7		75.990 to 76.045 76.008 to 76.063
 Bushings and housings in engine block		0.060 to 0.115
 Bushings and journals		0.050 to 0.121
Cam lift: 		8.07 7.63 8.828
 Rocker shaft Ø 1		37.984 to 38.000

         Aquila Trucks Centres

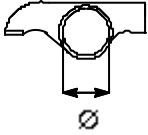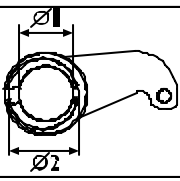 Type	F2B
	mm
Bushing housing in rocker arms   	41.000 to 41.016 53.000 to 53.019 42.000 to 42.016
Bushing outer diameter for rocker arms:   	41.097 to 41.135 53.105 to 53.156 42.066 to 42.091
Bushing inner diameter for rocker arms:   	38.025 to 38.041 50.025 to 50.041 38.015 to 38.071
Between bushings and housings   	0.081 to 0.135 0.086 to 0.156 0.050 to 0.091
Between rocker arms and shaft   	0.025 to 0.057 0.015 to 0.087
 Engine brake control lever Eccentric pin outer diameter $\varnothing 2$ Rocker arms shaft seat $\varnothing 1$	49.984 $\div$ 50.000 38.025 $\div$ 38.041

 Aquila Trucks Centres

	Type	F2BE3681C	F2BE3681B	F2BE3681A
		mm		
	Rocker arms and engine brake control lever pin	0.025 to 0.068		
	Rocker arm shaft and seat on engine brake control lever	0.025 to 0.057		
TURBOCHARGER				
Type		Fixed geometry HOLSET HX 40	Variable geometry HOLSET HE 431 V	
End float		0.025 to 0.127	0.025 to	0.127
Radial play		0.330 to 0.508	0.254 to	0.356

Aquila Trucks Centres

TIGHTENING TORQUES

PART			TORQUE	
			Nm	kgm
Lower crankcase fastening screws to cylinder block (see Figure 5) ♦				
Outer screws	First stage : pre-tightening	M 10x1.25	25	2.5
Inner screws	Second stage : pre-tightening	M 16x2	140	14
Inner screws	Third stage : angle closing	M 16x2		60 °
Inner screws	Fourth stage : angle closing	M 16x2		60 °
Outer screws	Fifth stage : angle closing	M 10x1.5		90 °
Pipe union for piston cooling nozzle			35 ± 2	3.5 ± 0.2
Intercooler fastening screws to cylinder block ♦ (see Figure 10)				
pre-tightening			11.5 ± 3.5	1.15 ± 0.35
tightening			19 ± 3	1.9 ± 0.3
Plug			125 ± 15	12.5 ± 1.5
Spacer and oil sump fastening screws (see Figure 11)			41.5 ± 3.5	4.1 ± 0.3
Gearcase fastening screws to cylinder block:				
		M10x1.25	41.5 ± 3.5	4.1 ± 0.3
		M12x1.75	63 ± 7	6.3 ± 0.7
		M8x1.25	23.5 ± 1.5	2.3 ± 1.5
Cylinder head fastening screw: (see Figure 6) ♦				
First stage	pre -tightening		50	5
Second stage	pre -tightening		100	10
Third stage	angle closing			90 °
Fourth stage	angle closing			75 °
Rocker arm shaft fastening screw ♦				
First stage	pre -tightening		40	4
Second stage	pre -tightening			60 °
Locknut for rocker arm adjusting screw ♦			39 ± 5	3.9 ± 5
Screws for injector fastening brackets ♦			36 ± 1.5	3.65 ± 0.2
Shoulder plate fastening screws to head ♦			20 ± 2	2 ± 0.2
Engine support bracket fastening screws to cylinder head			74 ± 8	7.4 ± 0.8
Gear fastening screws to camshaft: ♦				
First stage	pre -tightening		50	5
Second stage	pre -tightening			50 °
Phonic wheel fastening screws to distribution gear			8.5 ± 1.5	0.8 ± 0.1
Exhaust pipe fastening screws ♦ (see Figure 8)				
pre-tightening			30 ± 3	3 ± 0.3
tightening			60 ± 3	6 ± 0.3
Engine brake actuator cylinder fastening screws			19 ± 3	1.9 ± 0.3
Connecting rod cap fastening screws: ♦				
First stage	pre -tightening		50	5
Second stage	pre -tightening			40 °
Engine flywheel fastening screws: ♦ M16x1.5x58				
First stage	pre -tightening		100	10
Second stage	pre -tightening			60 °
Engine flywheel spacer mount screws: ♦ M16x1.5x110:				
First stage	pre -tightening		100	10
Second stage	pre -tightening			120 °
Flywheel pulley fastening screws to crankshaft: ♦				
First stage	pre -tightening		70	7
Second stage	pre -tightening			50 °
♦ Lubricate with oil MOLYKOTE before assembly				
• Lubricate with graphitized oil before assembly				

Aquila Trucks Centres

PART	TORQUE	
	Nm	kgm
Damper flywheel fastening screws: ♦	115 ± 15	11.5 ± 1.5
Idler gear pin fastening screws: ♦		
First stage pre -tightening	30	3
Second stage angle closing		90°
Idle gear link rod fastening screw	24.5 ± 2.5	2.4 ± 0.2
Oil pump fastening screw	24.5 ± 2.5	2.4 ± 0.2
Oil pump suction rose fastening screw	24.5 ± 2.5	2.4 ± 0.2
Front cover fastening screw to cylinder block ♦	19 ± 3	1.9 ± 0.3
Control unit fastening screw to cylinder block ♦	19 ± 3	1.9 ± 0.3
Supply pump fastening screw to gearcase ♦	19 ± 3	1.9 ± 0.3
Fuel filter support fastening screw to cylinder head ♦	24.5 ± 2.5	2.4 ± 0.2
Screw securing the engine support to the wheelcase ♦		
First stage pre -tightening	100	10
Second stage angle closing		60°
Turbo-compressor fastening screws and nuts • (see Figure 10)		
pre-tightening	35 ± 5	3.5 ± 0.5
tightening	46 ± 2	4.6 ± 0.2
Water pump fastening screw to cylinder block	24.5 ± 2.5	2.4 ± 0.2
Pulley fastening screw to hub	55 ± 5	5.5 ± 0.5
Rocker arm cover fastening screws (see Figure 12)	8.5 ± 1.5	0.8 ± 0.1
Thermostat box fastening screws to cylinder head	24.5 ± 2.5	2.4 ± 0.2
Automatic tightener fastening screws to cylinder block	45 ± 5	4.5 ± 0.5
Fixed tightener fastening screws to cylinder block	105 ± 5	10.5 ± 0.5
Fan support fastening screws to cylinder block	24.5 ± 2.5	2.4 ± 0.2
Starter fastening screws	44 ± 4	4 ± 0.4
Air heater on cylinder head	50 ± 5	5 ± 0.5
Air compressor fastening screw to cylinder head	74 ± 8	7.4 ± 0.8
Air compressor control gear fastening nut	170	17 ± 1
Hydraulic power steering pump gear fastening nut	46.5 ± 4.5	4.6 ± 0.4
Air conditioner compressor fastening screw to support	24.5 ± 2.5	2.4 ± 0.2
Air conditioner compressor support fastening screw to cylinder block	44 ± 4	4.4 ± 0.4
Alternator support fastening screw to cylinder block	44 ± 4	4.4 ± 0.4
Alternator bracket fastening screw to cylinder block	24.5 ± 2.5	2.4 ± 0.2
Water pipe unions	35	3.5
Water temperature sensor	32.5 ± 2.5	3.2 ± 0.2
♦ Lubricate with oil MOLYKOTE before assembly		
• Lubricate with graphitized oil before assembly		


Aquila Trucks Centres

PART	TORQUE	
	Nm	kgm
Engine brake solenoid valve fastening screws	32.5 ± 2.5	3.2 ± 0.2
Flywheel rev sensor fastening screw	8 ± 2	0.8 ± 0.2
Camshaft rev sensor fastening screw	8 ± 2	0.8 ± 0.2
P.D.E solenoid connector fastening screw	1.62 ± 0.3	0.1 ± 0.3
Overboost pressure sensor fastening screw	8 ± 2	0.8 ± 0.2
Absolute pressure sensor fastening screw	22.5 ± 2.5	2.2 ± 0.2
P.W.M. control valve fastening screw/nut	8 ± 2	0.8 ± 0.2
Fuel/coolant temperature sensor	35	3.5
Coolant temperature indicator	23.5 ± 2.5	2.3 ± 0.2
Filter clogging sensor	10	1
Oil temperature switch	25 ± 1	2.5 ± 0.1
Oil pressure sensor	25 ± 1	2.5 ± 0.1
Oil clogging sensor	55 ± 5	5.5 ± 0.5
Electric wire fastening screw	8 ± 2	0.8 ± 0.2
Heater fastening screw	16 ± 1	1.6 ± 0.1
Power unit		
M14x70/80 screw securing front and rear elastic blocks to chassis	192.5 ± 19.5	19.2 ± 1.9
M16x130 screw securing front and rear elastic blocks to engine	278 ± 28	27.8 ± 2.8
M18x62 flanged HEX screw for front engine block		
Pre-tightening 1 st step	120	12
Angle closing 2 nd step		45°
M14x60 socket cheese-head TC screw for front engine block		
Pre-tightening 1 st step	60	6
Angle closing 2 nd step		45°
Flanged HEX screw for rear engine block		
Pre-tightening 1 st step	100	10
Angle closing 2 nd step		60°

Aquila Trucks Centres

LOWER CRANKCASE FIXING SCREWS TIGHTENING SEQUENCE

Figure 5

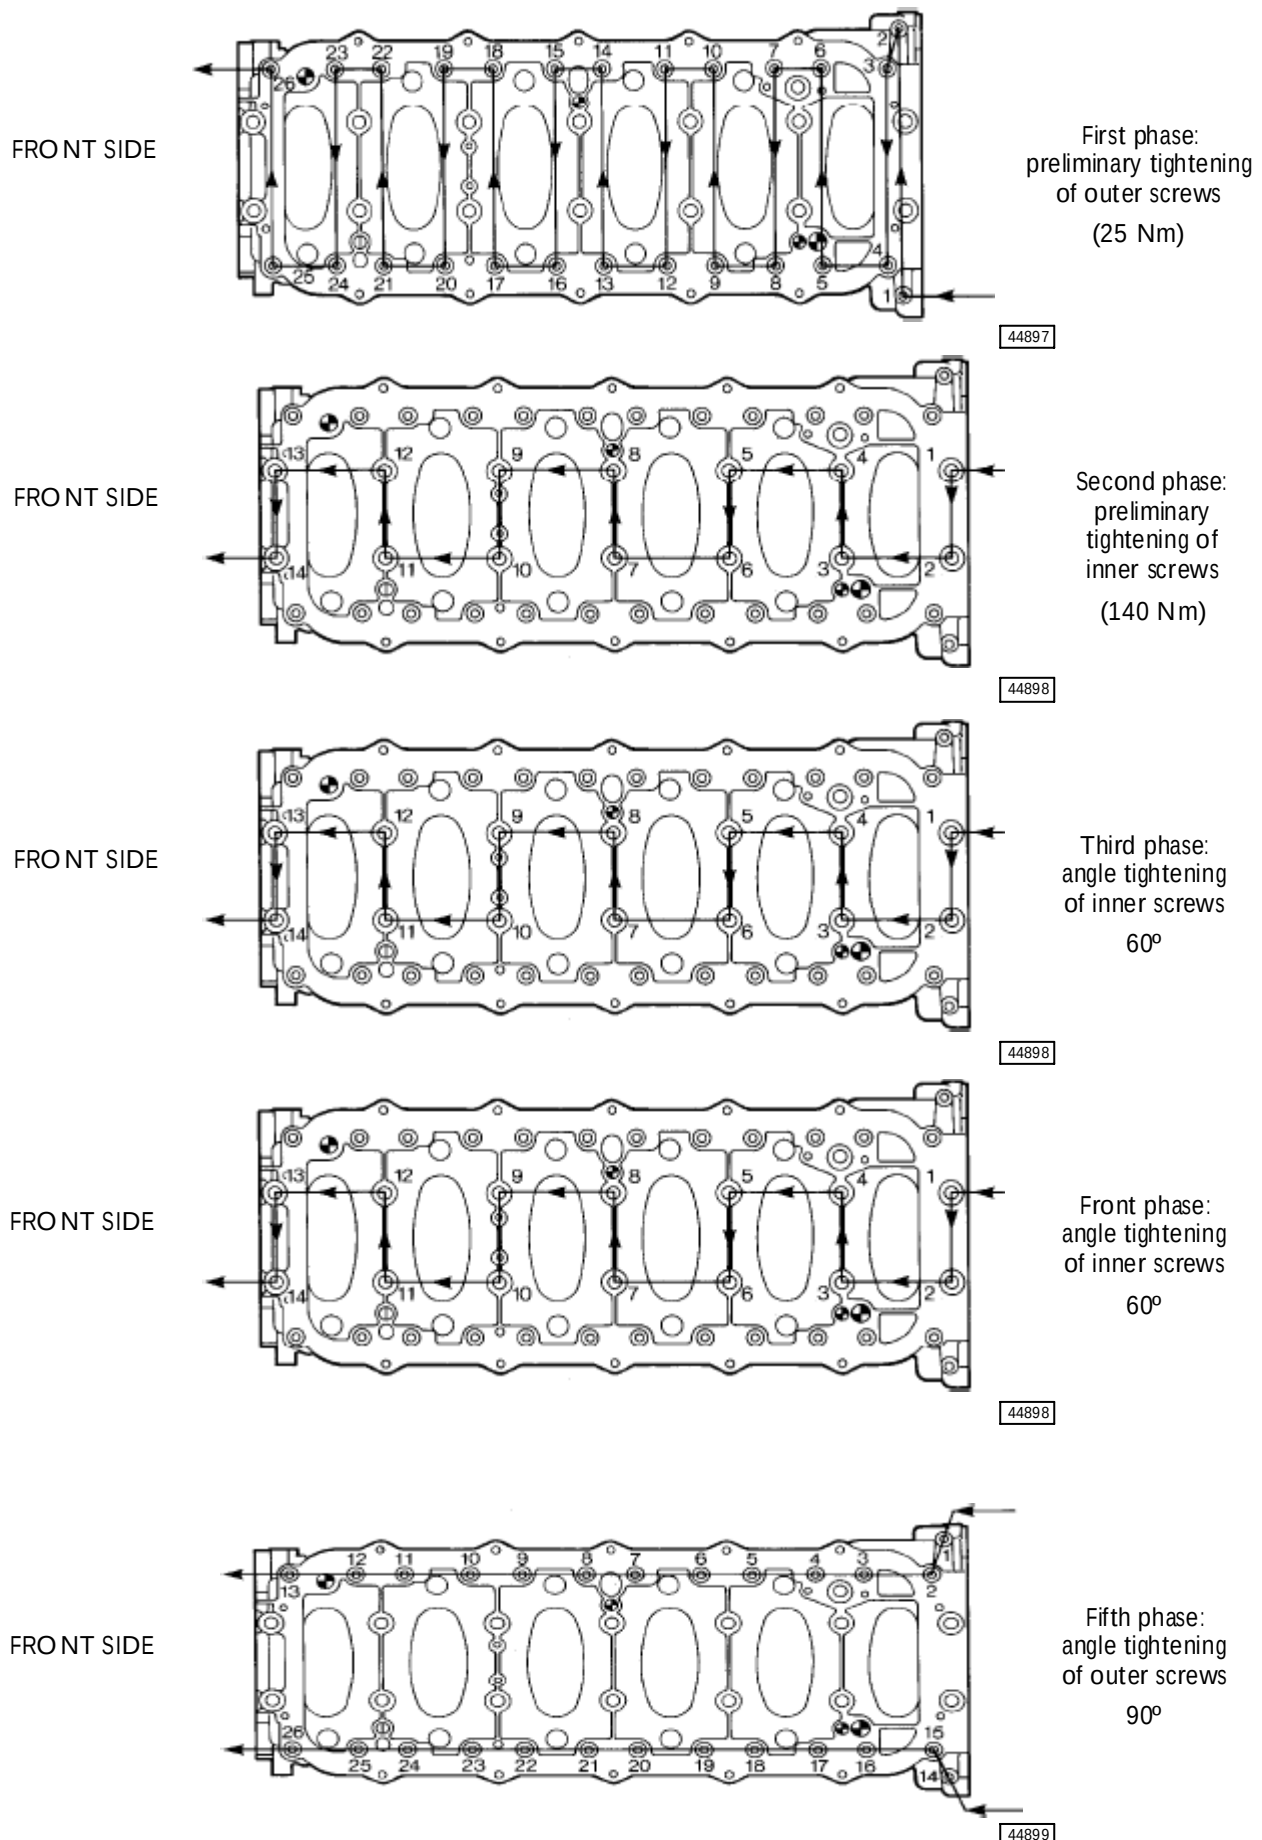

Aquila Trucks Centres


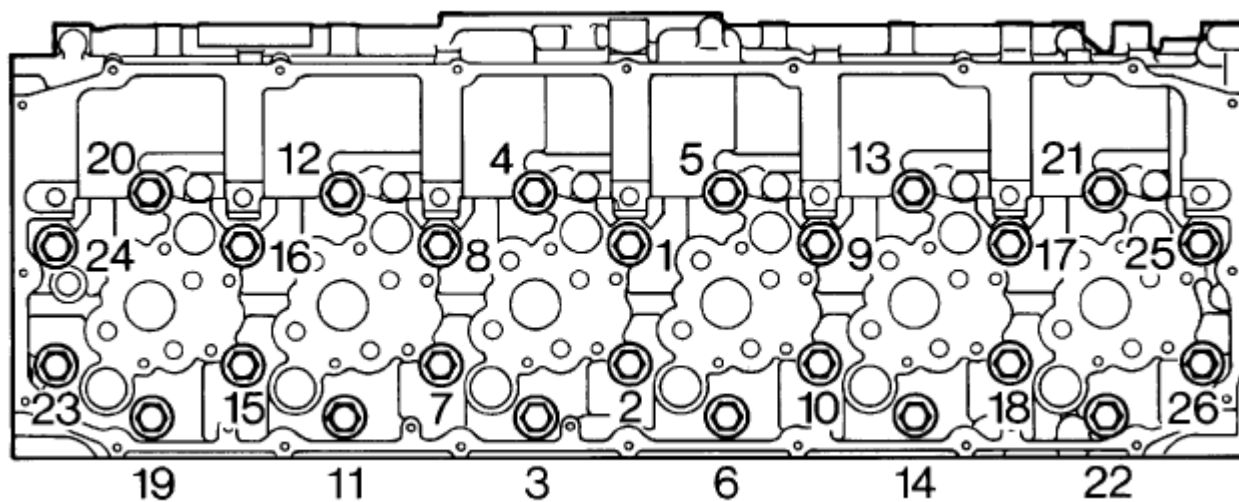
**DIAGRAM OF CYLINDER HEAD FIXING SCREWS TIGHTENING SEQUENCE**


Figure 7

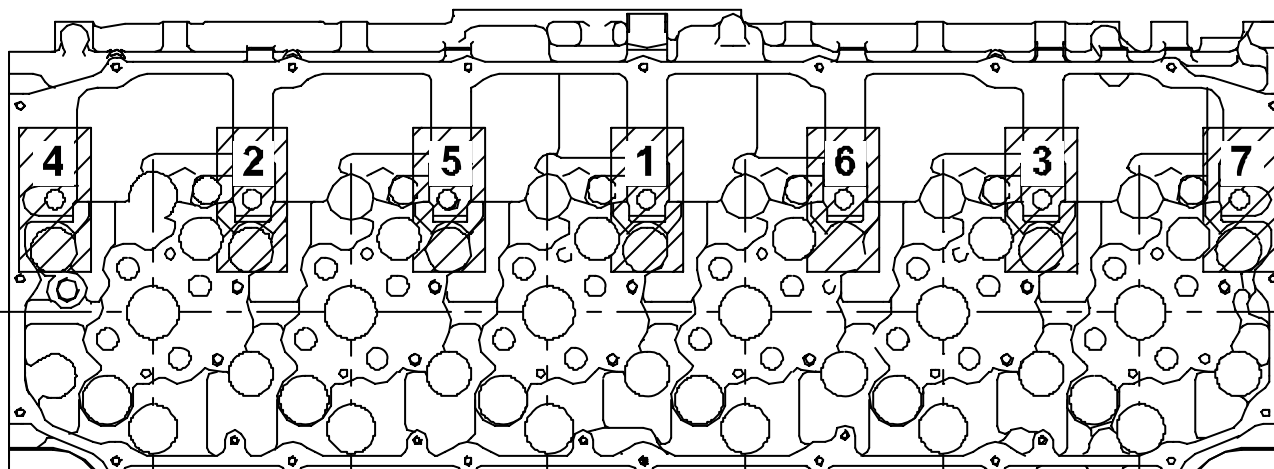

70567A

DIAGRAM OF ROCKER SHAFT FIXING SCREWS TIGHTENING SEQUENCE

Figure 8

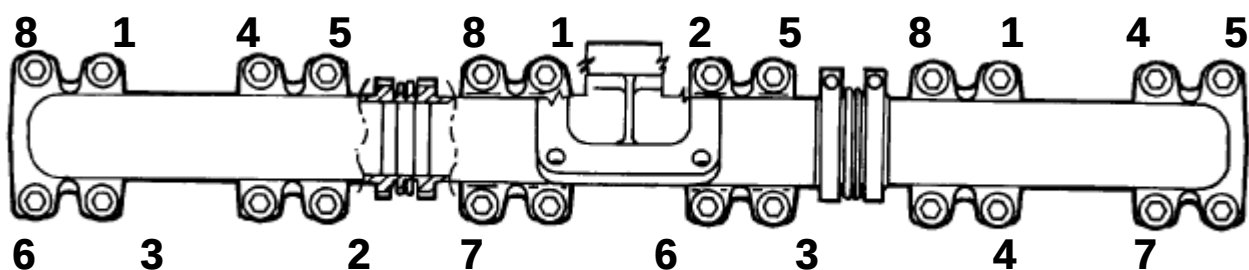


140309

DIAGRAM OF EXHAUST MANIFOLD FIXING SCREWS TIGHTENING SEQUENCE

Aquila Trucks Centres

Figure 9

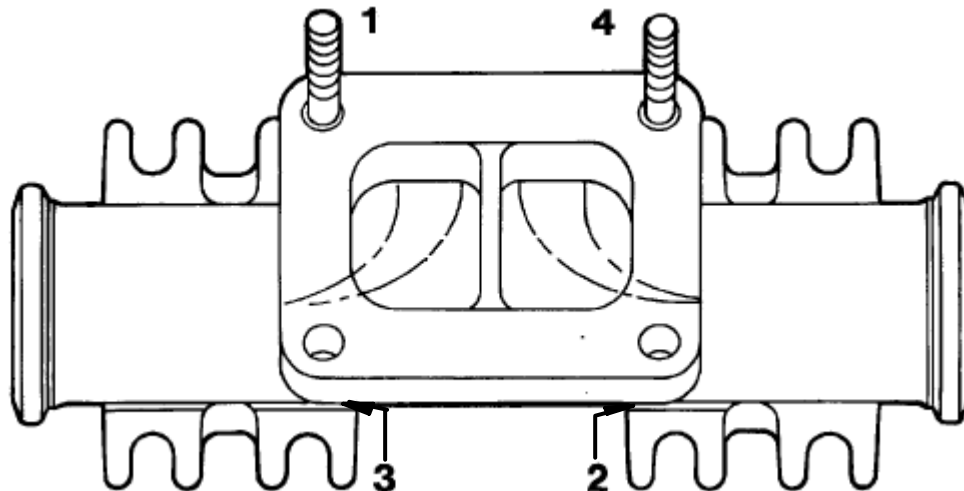


45360

DIAGRAM OF TURBOCHARGER FIXING SCREWS AND NUTS TIGHTENING SEQUENCE

SEQUENCE: Preliminary tightening 4 - 3 - 1 - 2
 Tightening 1 - 4 - 2 - 3


Figure 10

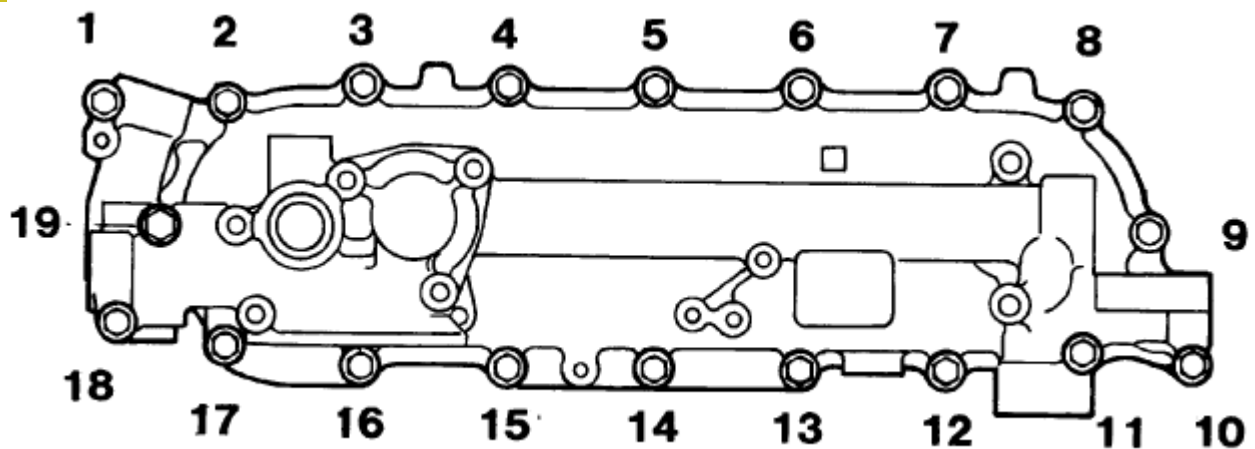

5361

DIAGRAM OF HEAT EXCHANGER FIXING SCREWS TIGHTENING SEQUENCE

Figure 11

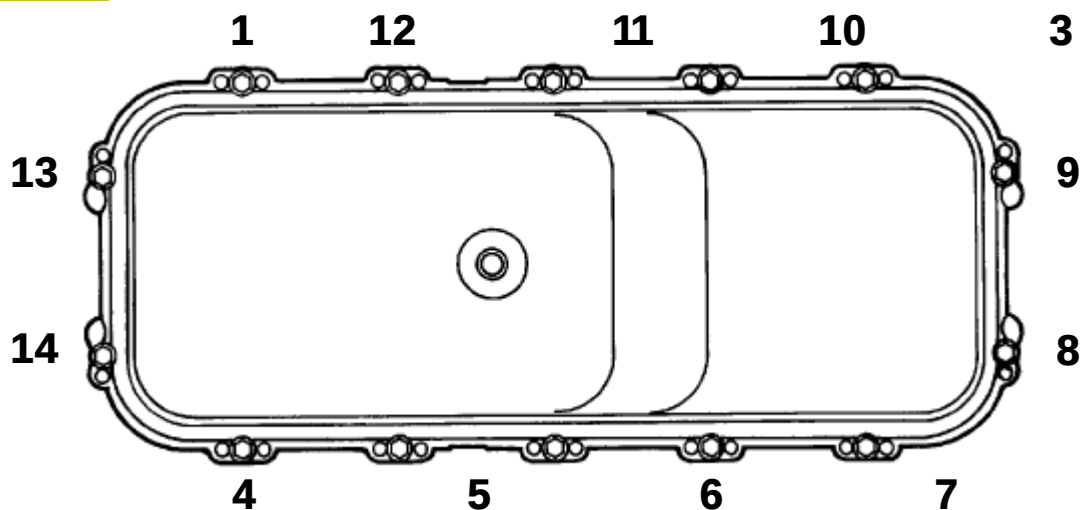


45362

DIAGRAM OF OIL SUMP FIXING SCREWS TIGHTENING SEQUENCE

Aquila Trucks Centres

Figure 12





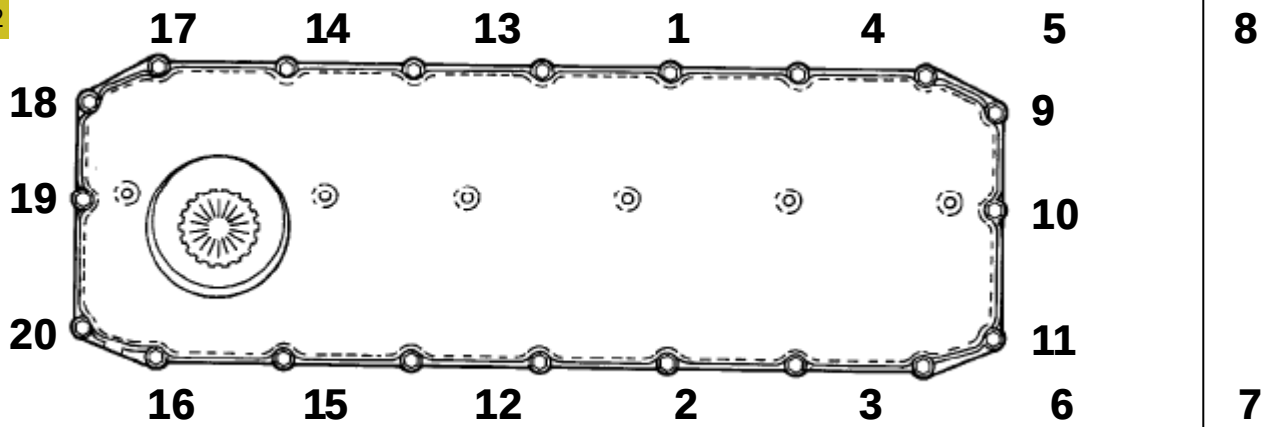


45363

DIAGRAM OF ROCKER COVER FIXING SCREWS TIGHTENING SEQUENCE






Aquila Trucks Centres

TOOLS

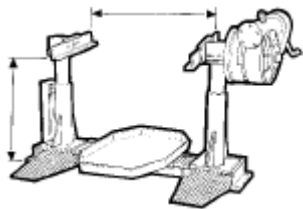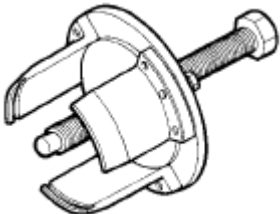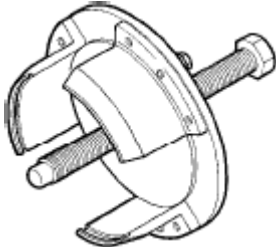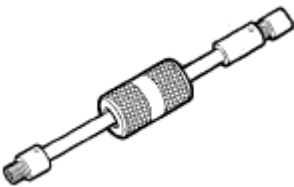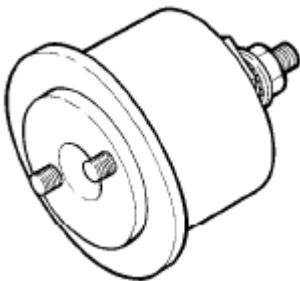TOOL NO.	DESCRIPTION
99322230	 Rotary telescopic stand
99340051	 Extractor for crankshaft front gasket
99340052	 Extractor for crankshaft rear gasket
99340205	 Puller with slide-hammer
99342149	 Extractor for injector-holder
99346245	 Tool to install the crankshaft front gasket





Aquila Trucks Centres

TOOLS

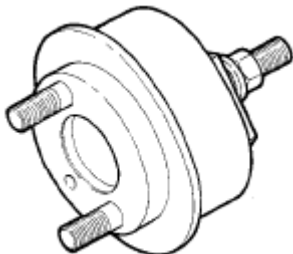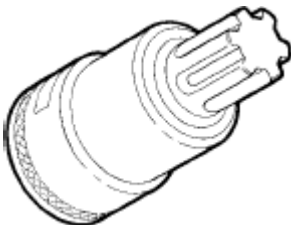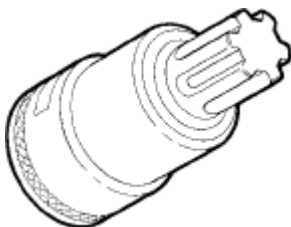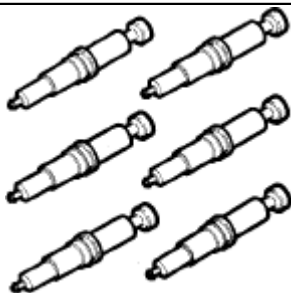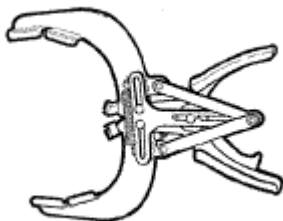TOOL NO.	DESCRIPTION	
99346246		Tool to install the crankshaft rear gasket
99348004		Universal extractor for 5 to 70 mm internal components
99350072		Box wrench for transmission gear support fixing screws
99350074		Box wrench for block junction bolts to the lower crankcase
99360177		Injector housing plug
99360184		Tool for removing and refitting piston rings (105-160 mm)







Aquila Trucks Centres

TOOLS

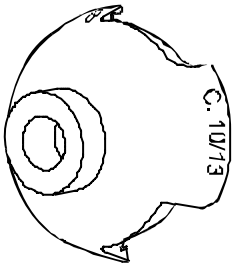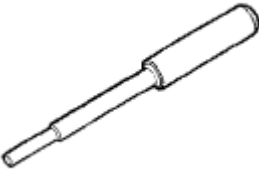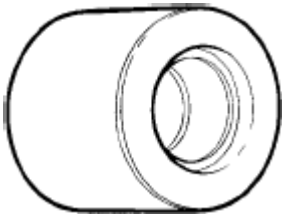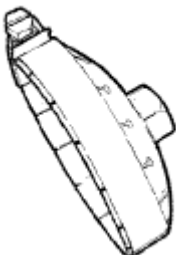TOOL NO.	DESCRIPTION	
99360192		Elastic belt assembling tool
99360264		Tool to take down-fit engine valves
99360288		Tool to remove valve guide
99360292		Tool to install gasket on valve guide
99360294		Tool to drive valve guide (use with 99360288)
99360314		Tool to remove cartridge filters





Aquila Trucks Centres

TOOLS

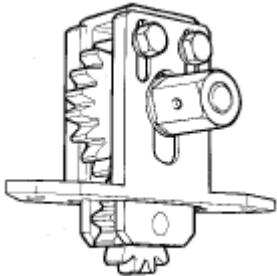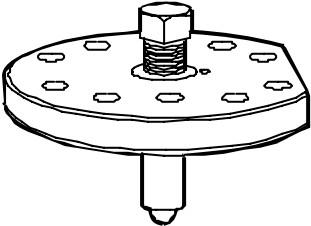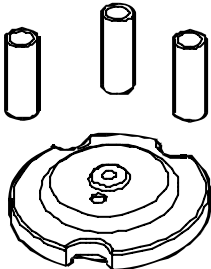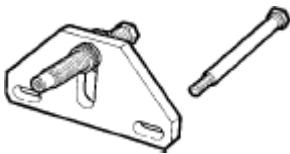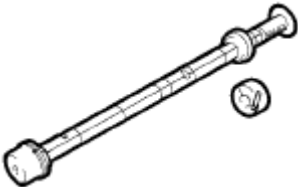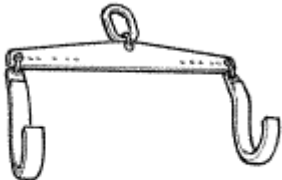TOOL NO.	DESCRIPTION	
99360321		Tool to rotate engine flywheel
99360334		Tool for checking cylinder liners protrusion
99360335		Cylinder liners compression cap (to be used with 99360334)
99360351		Tool to stop engine flywheel
99360487		Tool to take down and fit camshaft bushes
99360500		Tool to lift crankshaft






Aquila Trucks Centres

TOOLS

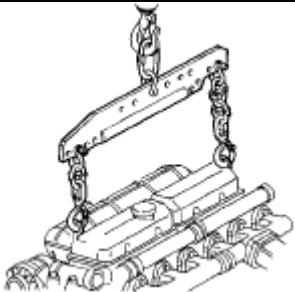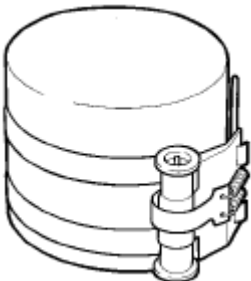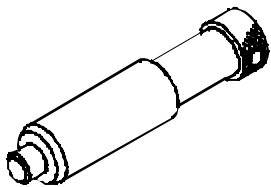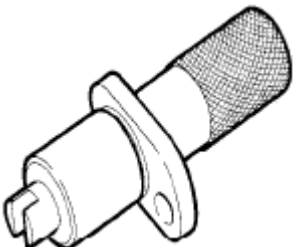TOOL NO.	DESCRIPTION
99360551	 Bracket to take down and fit engine flywheel
99360558	 Tool to lift and transport rocker shaft
99360585	 Tool for lifting and handling engine
99360605	 Belt to insert piston in cylinder liner (60 - 125 mm)
99360612	 Tool for positioning engine T.D.C.
99360613	 Tool for timing of phonic wheel on timing gear






Aquila Trucks Centres

TOOLS

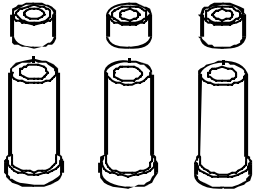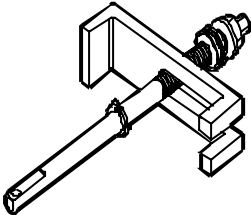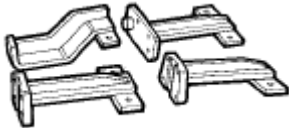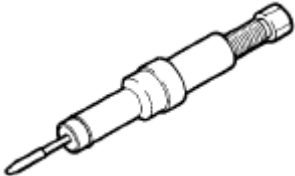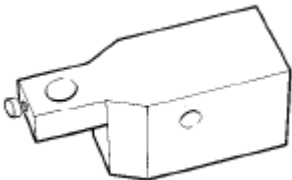TOOL NO.	DESCRIPTION	
99360703		Tool to stop cylinder liners
99360706		Tool to extract cylinder liners
99360724		Ring (115 mm) (use with 99360706)
99361035		Brackets fixing the engine to rotary stand 99322230
99365054		Tool for injector holder heading
99370415		Tool to detect cylinder liner protrusion (use with 99395603)





Aquila Trucks Centres

TOOLS

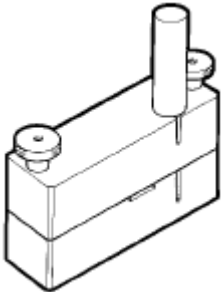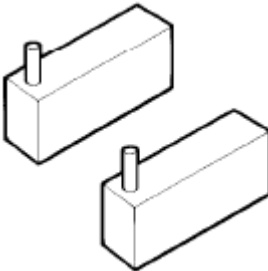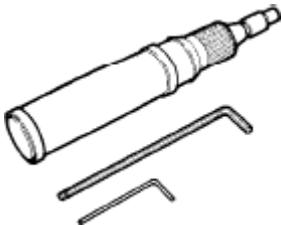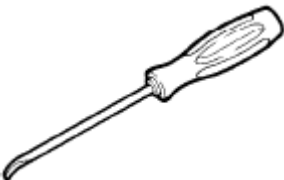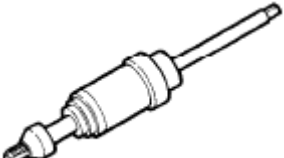TOOL NO.	DESCRIPTION	
99378100		Tool for printing engine identification plates (to be used with special punches)
99378130		Punches for printing engine identification plates (consisting of: 99378101 (A) - 99378102 (B) - 99378103 (C) - 99378104 (D) - 99378105 (E) - 99378106 (F) - 99378107 (G) - 99378108 (V))
99389834		Torque screwdriver to calibrate screws for injector solenoid valve
99390310		Valve guide sleeker
99390772		Tool to remove residues from injector holder
99390804		Tool to thread injector holders to be extracted


Aquila Trucks Centres

TOOLS

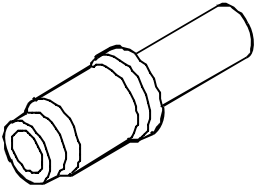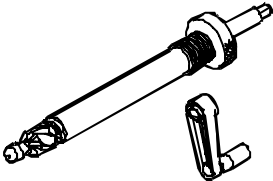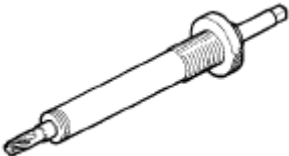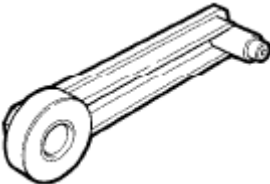TOOL NO.	DESCRIPTION	
99394014		Guide bush (to be used with 99394041 or 99394043)
99394041		Cutter to rectify injector holder housing (to be used with 99394014)
99394043		Reamer to rectify injector holder lower side (to be used with 99394014)
99395215		Gauge for centre distance check between camshaft and idle gear
99395216		Measuring pair for angular tightening with 1/2" and 3/4" square couplings
99395603		Dial gauge (0 - 5 mm)

Aquila Trucks Centres

TOOLS

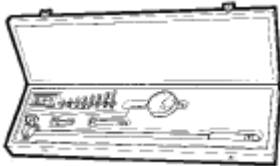TOOL NO.	DESCRIPTION	
99395687		Reaming gauge (50-178 mm)
99396033		Centering ring of crankshaft front cap

Aquila Trucks Centres

Aquila Trucks Centres

540110 ENGINE REMOVAL - REFITTING

Removal

Figure 13


NOTE If washing the engine bay, adequately protect the electric/electronic components and their connections.



Deactivate the batteries by disconnecting the electric wires or opening the current main switch, lift the cowling and tilt cab.
Disconnect the transmission, as described in section 4.

Operations to be carried out in the lower side:

- drain the coolant in a proper container, by removing the radiator drain plug (12);
- remove the piping (11) between the radiator and the water pump;
- drain power steering oil in a proper container, by disconnecting delivery and return lines (20 and 18);
- disconnect pipings (13 and 14) from the water pump fitting;
- disconnect connector (15) from the electronic control unit as follows:
 - A**, lift the safety lever
 - B**, shift the connector by disconnecting it from the control unit
 - C**, lift the connector by releasing the pawl;
- Disconnect electric connections (1 - 4 - 5) from the engine, then release the cable from the straps used for fastening to the intake manifold;
- disconnect the electrical cables from the starter motor (16) and the ground cable (17);
- disconnect pipe (19) from air compressor;
- disconnect the sleeve (6) connecting aftercooler radiator-intake manifold;
- remove water pipe (2) between radiator and thermostat assembly;
- disconnect fuel delivery and return pipings (21);
- if present, remove the pipe support bracket (10) fastening screws to the engine block;
- remove screws (9) (where available), then remove air-conditioning compressor (8) from its support;
- without disconnecting the compressor pipes and to prevent draining the climate control system, fasten the compressor to the vehicle so that it does not interfere with the engine removal.

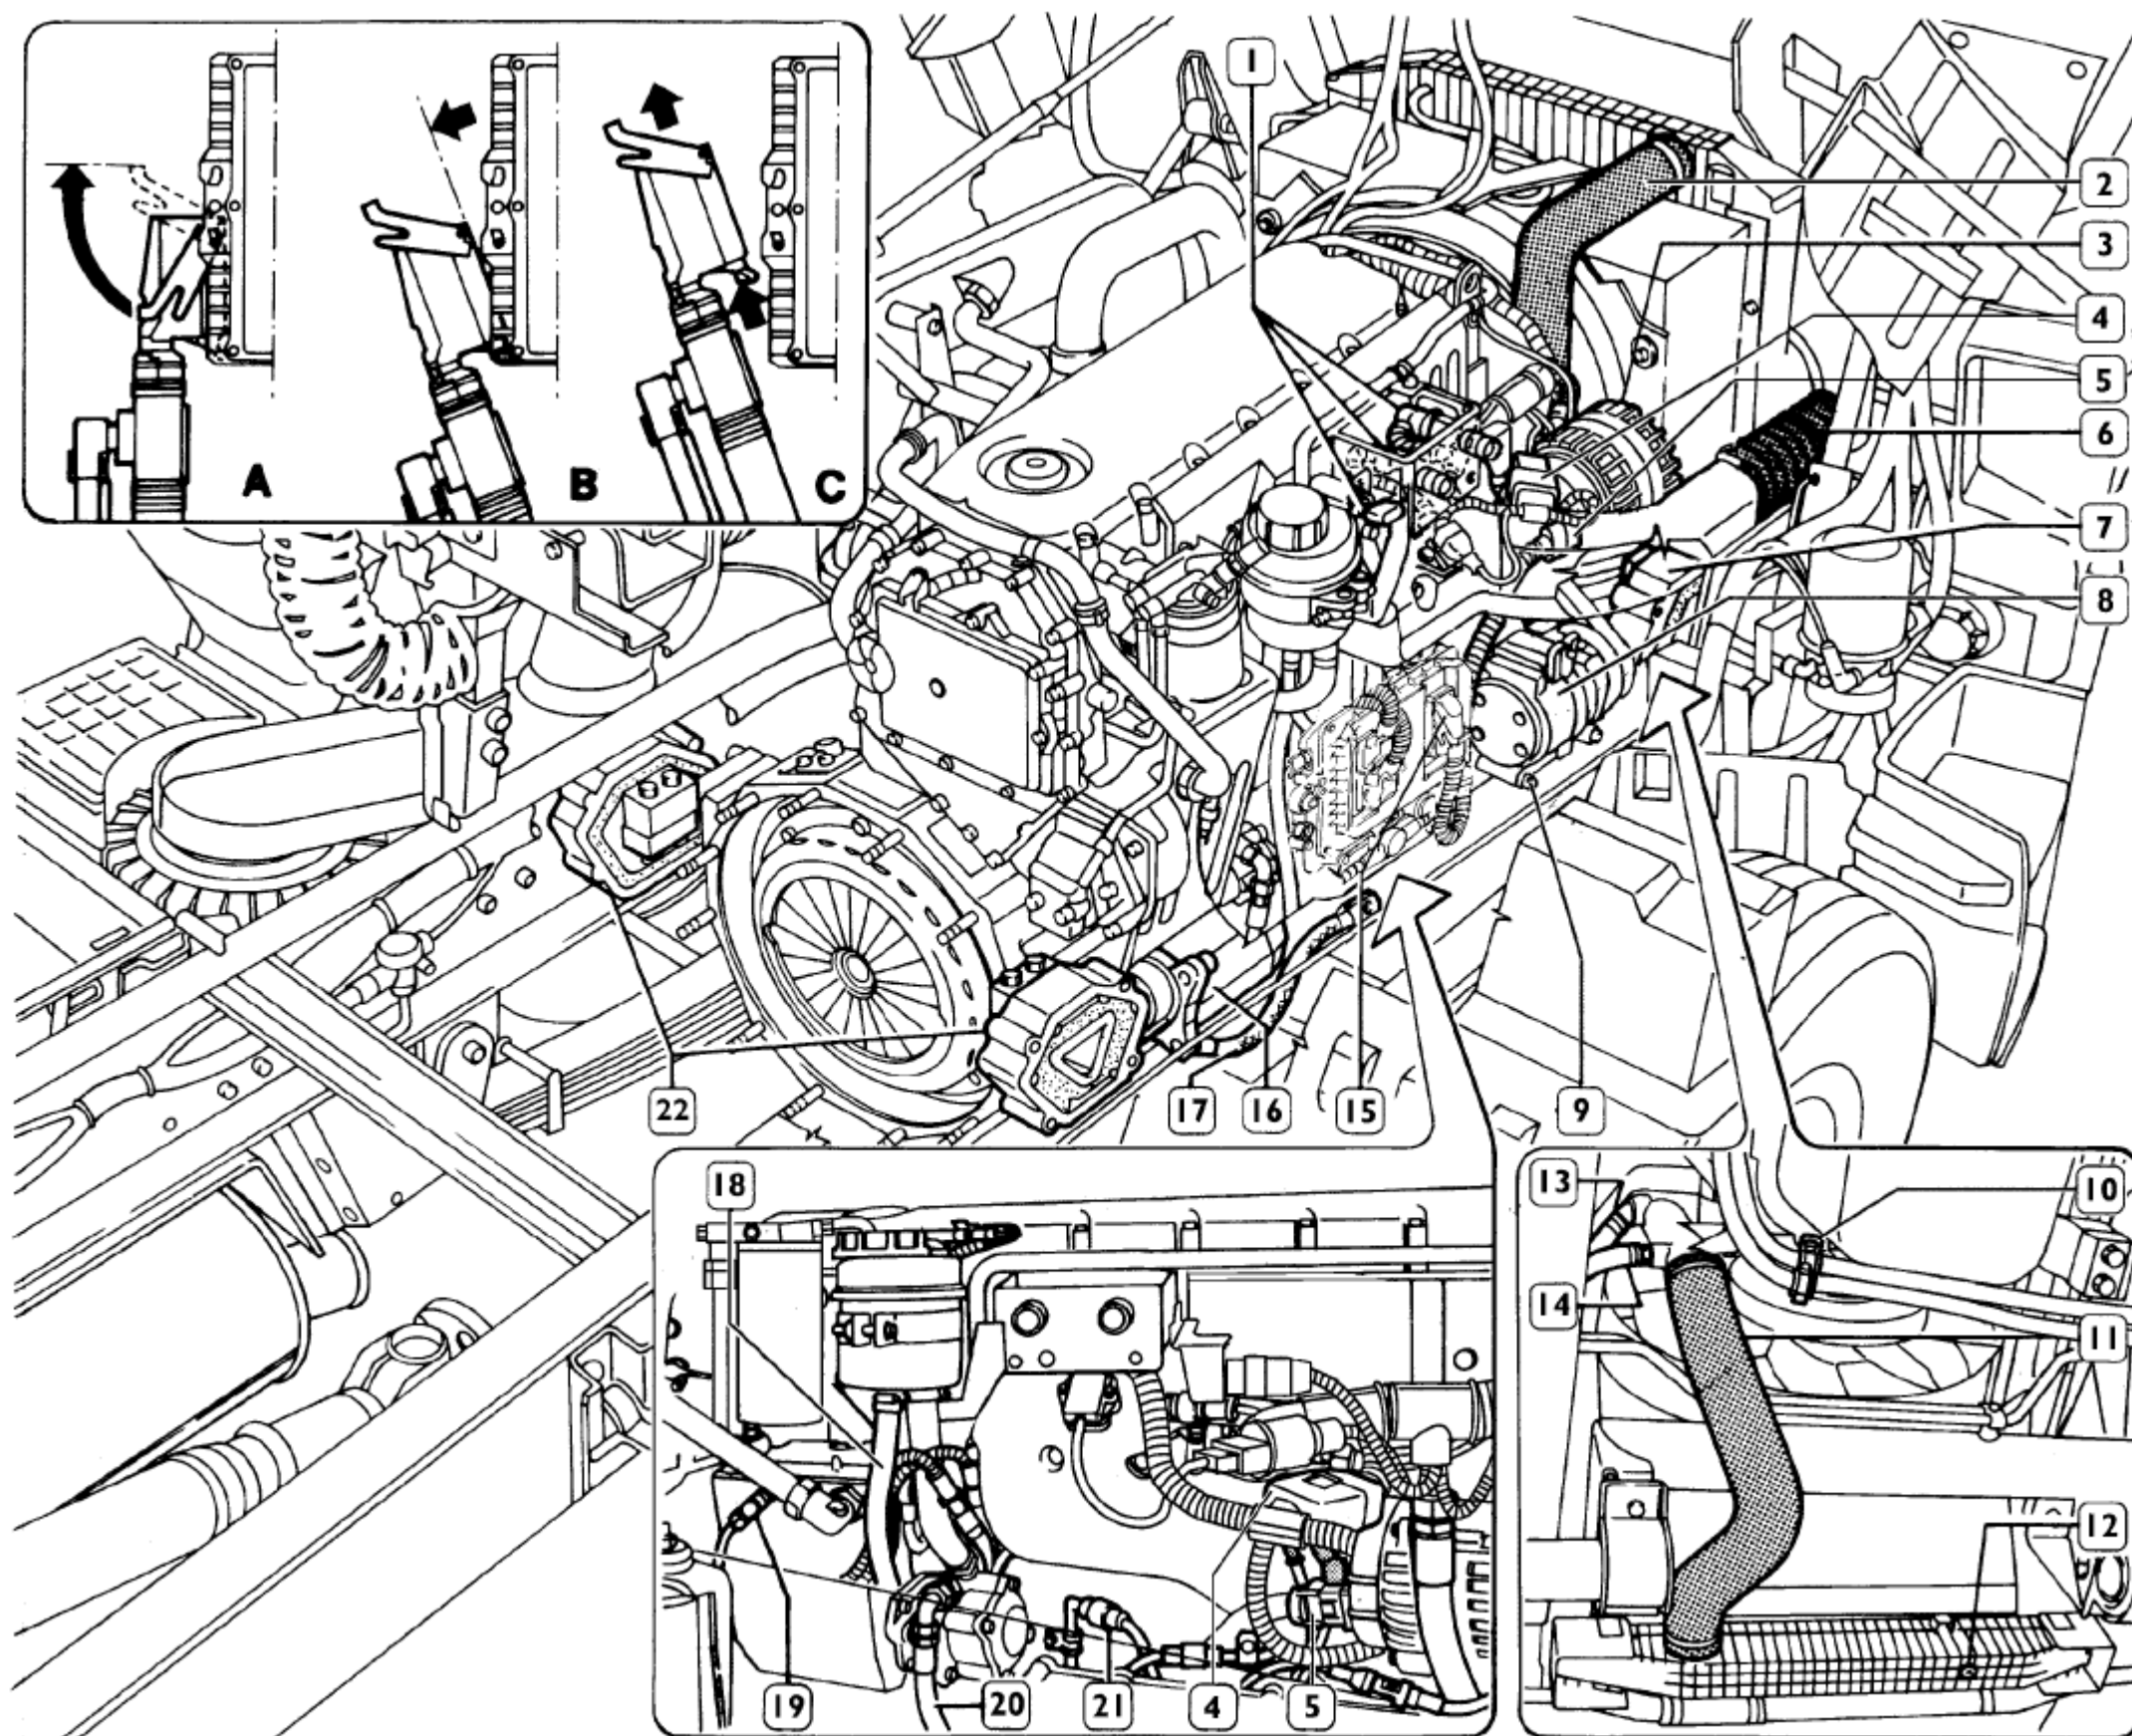

Aquila Trucks Centres

- disconnect water pipings (7 and 8) from thermostat unit (9) (see Detail A);
- if present, remove the pipe fastening screw (1) to the conveyor (3);
- if present, remove the screws and (12) detach the heat guard (11);
- remove the screws (4) and disconnect the pipe (3) from the support bracket (5);
- disconnect the air pipe (6); connection – drier compressor (A.P.U.);
- disconnect sleeve (2) connecting outlet piping (3) between the turbocharger and the aftercooler radiator;
- disconnect the sleeve (13) connecting air filter pipings and turbocharger manifold;
- disconnect exhaust piping (14);
- if the vehicle is fitted with mechanical transmission, remove the support (18) together with the engine gear control lever (19);
- only vehicles with short cab: remove sound-proof guard (16), bolts (15), and then take off cab suspension crossbar (17);

Use a lifting device and spinter bar 99360595 (hooked to the engine brackets) to stretch the chains. Loosen the screws fastening the engine brackets to elastic supports (10 – 7 and 22, Figure 252) on the chassis.

- Slowly raise the engine from its compartment by taking it backwards so that the fan is released from the air conveyor compartment (20) on the radiator.
- Operate the screws to remove the fan from the hub. Remove the engine completely without interfering with the remaining fixed parts on the chassis, in particular the wiring interfering with the rear right engine support.

Refitting



Reverse the order of detachment operations, taking great care when fitting the assembly into the engine compartment and following the advice below:


- check that the exhaust piping is not worn or about to deteriorate; replace, if necessary;
- tighten the screws and/or nuts to the prescribed torque;

NOTE Tighten the nuts fastening the electric cables to the starting motor terminals, by applying the torque values below:

- nut M10 x 1.5 (terminal 30):
17.6 ÷ 24.5 Nm (1.8-2.5 Kgm);
- nut M5 x 0.8 (terminal 50):
2.6 ÷ 4.6 Nm (0.27-0.47 Kgm);

- fill the cooling system with suitable coolant, then blow air off the cooling system as described in the relevant chapter;
- blow air off the fuel system as described in the relevant chapter (operation 542011);

Figure 14

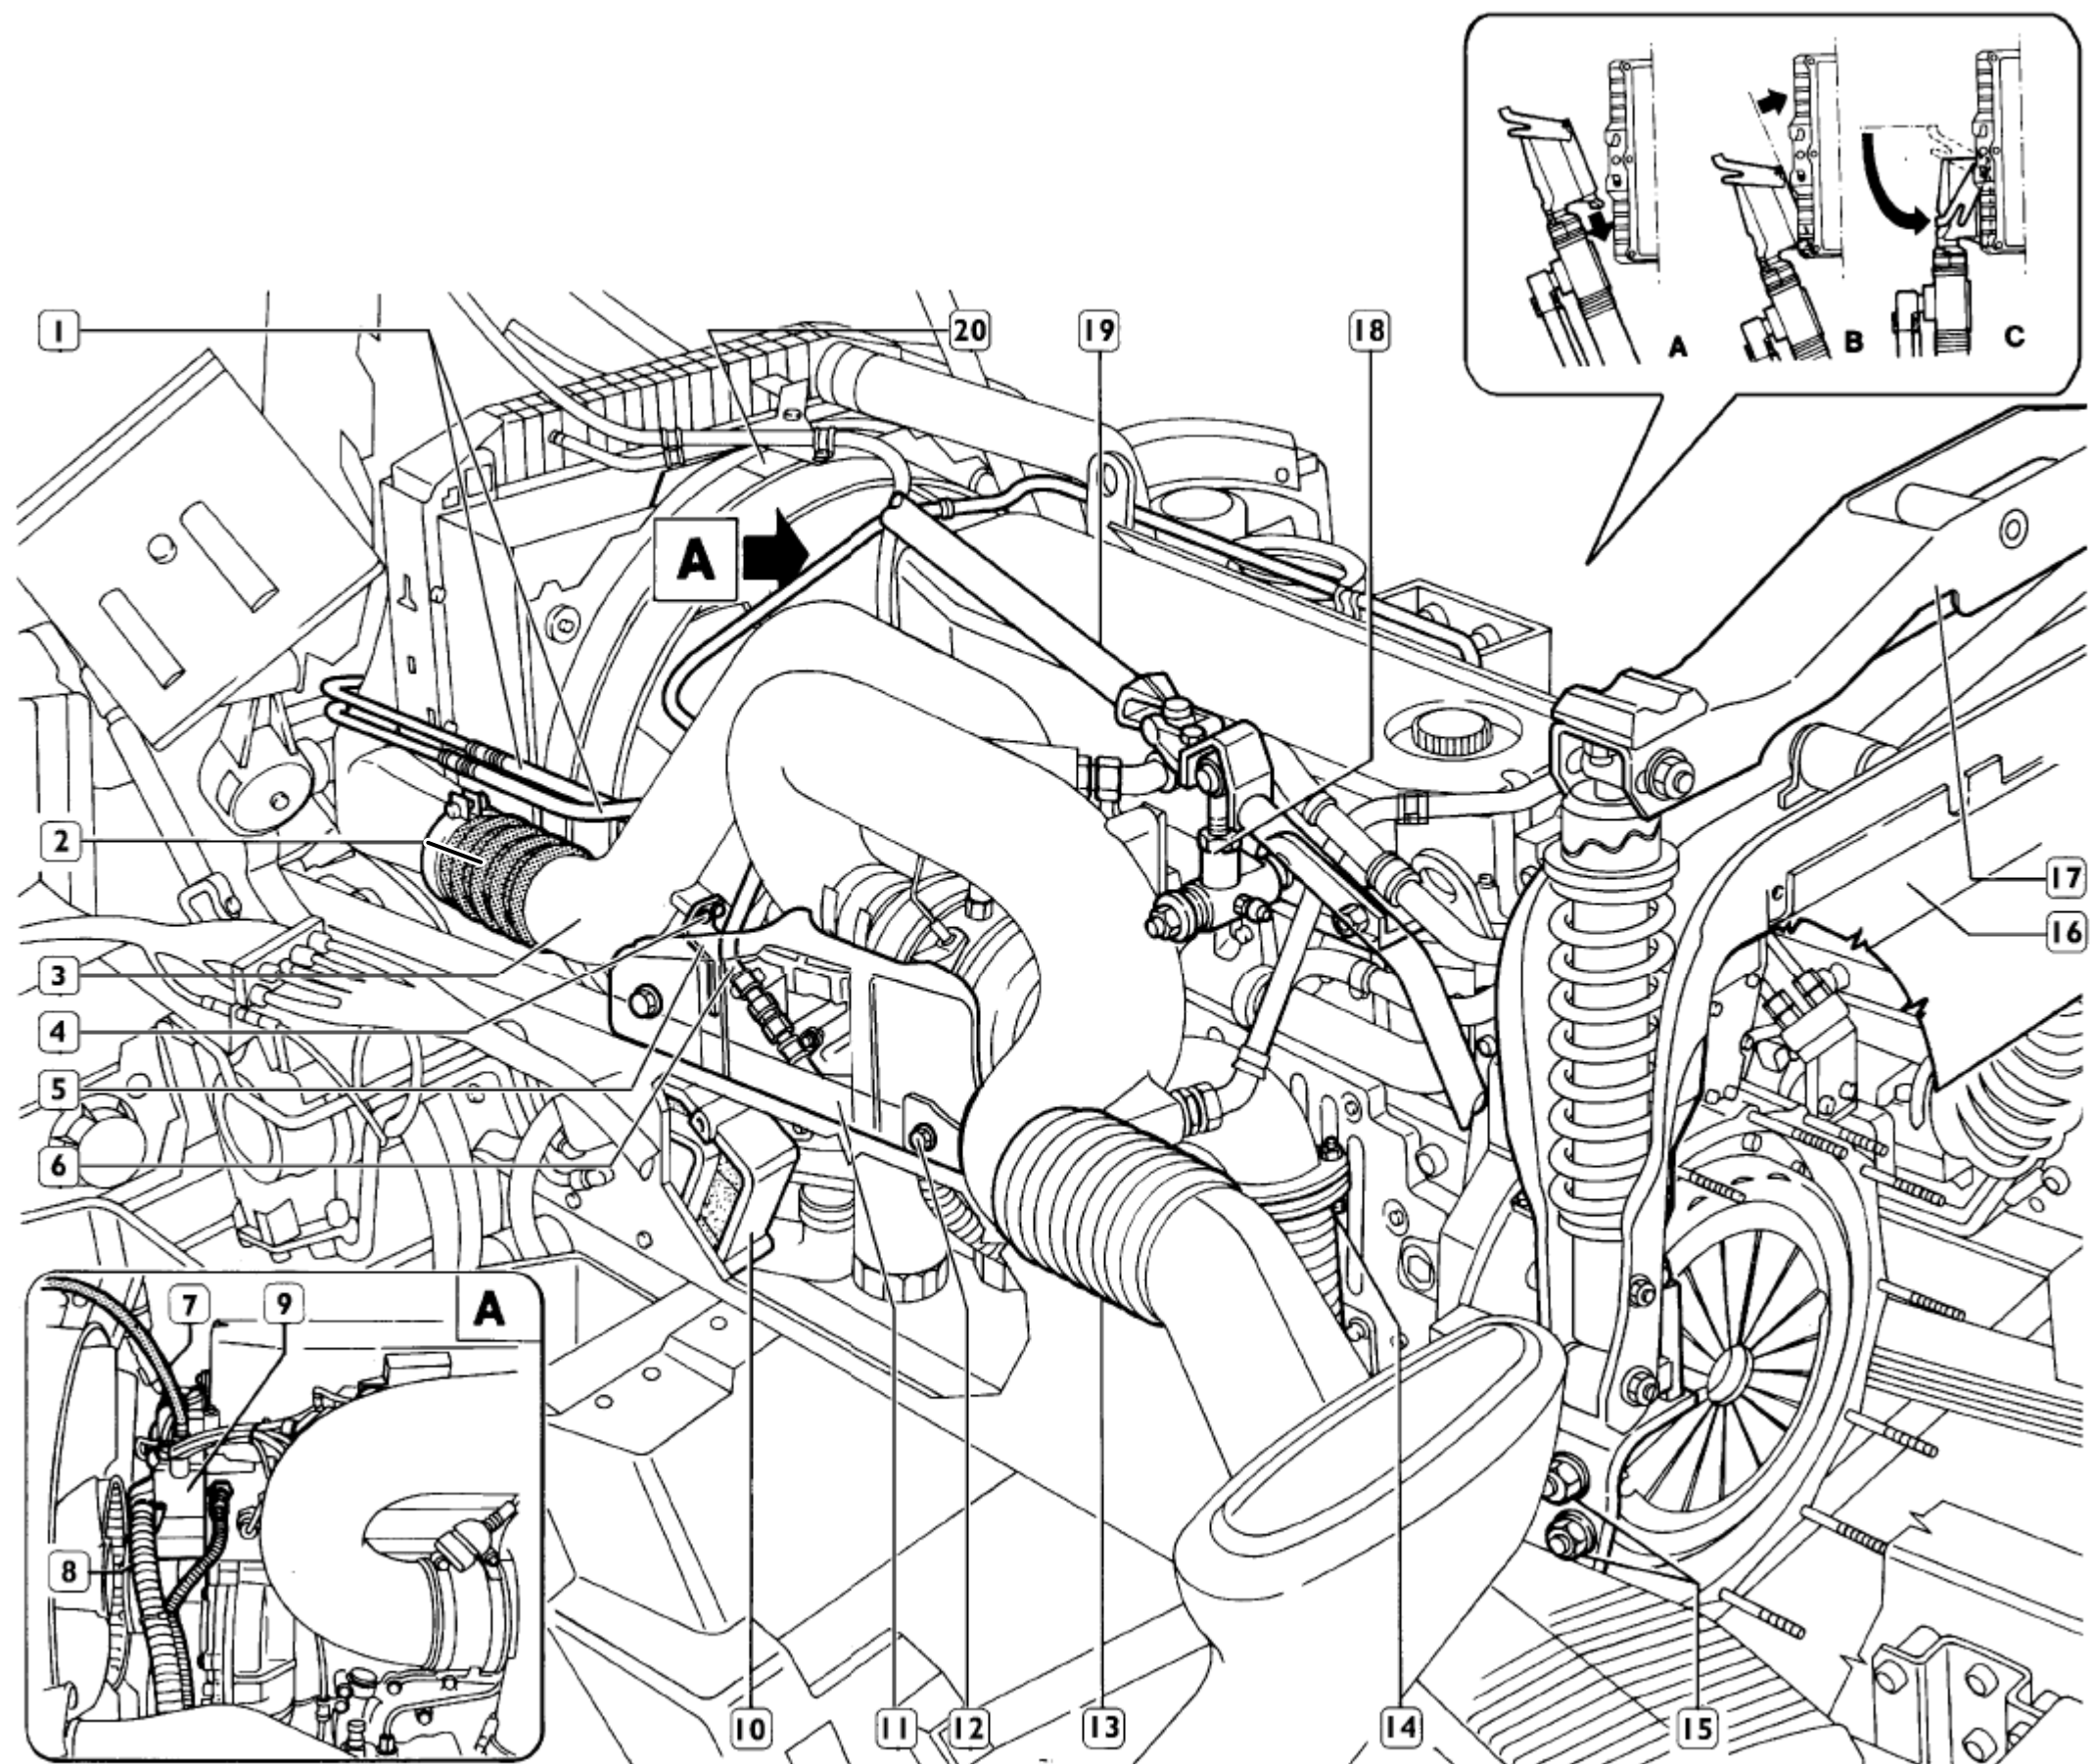

Aquila Trucks Centres

Filling the cooling system

Preliminary operations

For vehicles equipped with just the standard cab heating system or manual air-conditioning:

- Fully open the coolant cock on the instrument panel.

For vehicles equipped with the automatic air-conditioning system:

- Set the temperature control in the cab on the HI position.

For vehicles equipped with an additional heater:


- The heater must not be turned on.

Operations

Place a sheet of cardboard between the coolant radiator and the intercooler radiator in order to shorten the time it takes to reach the engine's working temperature (approx. 90°C).

Filling the system

Figure 15

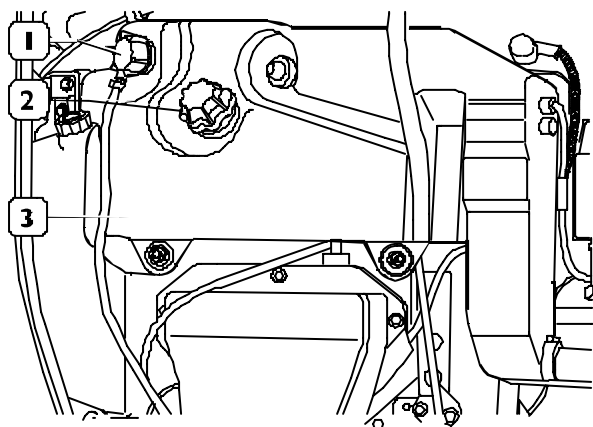

87198

NOTE GENERAL WARNINGS

Filling must be done with the engine cold.

The cap (1) must not be removed for any reasons whatsoever.

To prevent pockets of air forming in the system, the fluid has to be transferred slowly (approximate flow rate 8 litres/min).

For vehicles equipped with an additional heater: the percentage of glycols in the coolant must be no greater than 50%.

After conscientiously following the above warnings, proceed as follows:

- Remove the cap (2) from the expansion tub (3).
- Pour the coolant into the expansion tub (3) till it is quite full.



Bleeding air from the system

NOTE For vehicles equipped with an additional heater:

- Turn on the heater.

- Start the engine and keep the speed just above idling for 5 min.

NOTE If the tub empties completely during these first few minutes, stop the engine and top it up at a slower rate than before. Restart the engine.

- After 5 min. running, top up the level of fluid in the expansion tub, if necessary.

- Close the expansion tub filler with the cap (2). Take the engine up to top speed so that the coolant quickly reaches the temperature of full thermostat opening (approx. 90°C) and keep it in this state until all the air is bled out of the system. This is checked by seeing there is no foam or air bubbles in the tub.

The longest time it takes to bleed the air from the system completely is approximately 15 minutes from the moment when the thermostat opens (opening starts 85±2°C).

NOTE Do not take the filler cap off the expansion tub until the fluid in the system has cooled completely. Any topping up must only be done with the engine cold.


This is to avoid:

- 1 - Operator burns.
- 2 - Damage to the engine since cooling system pressurization is only created with the fluid heating from the condition of the engine cold.

Aquila Trucks Centres

542011 Bleeding air from the fuel system

Figure 16

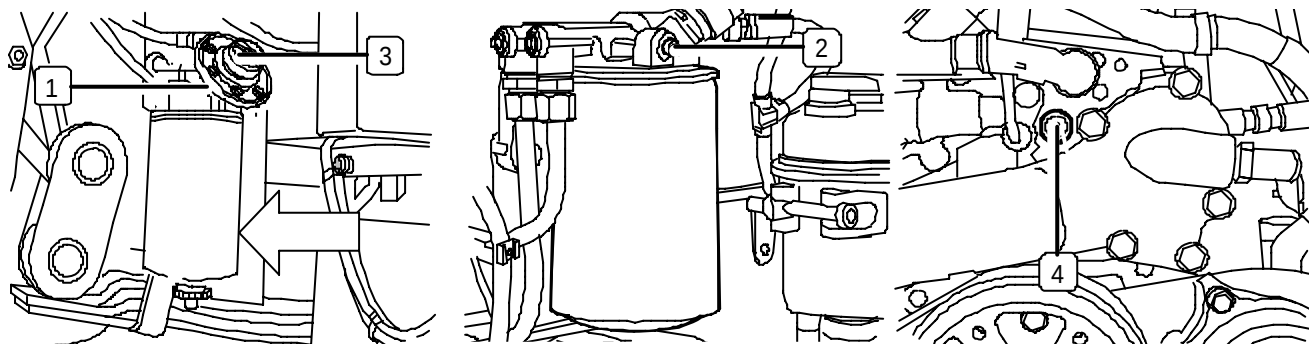

NOTE Before bleeding the fuel system connect proper pipes to the bleeding screws located on prefilter support, filter and cylinder head front part, in order to recover fuel in suitable containers during this operation.

In particular, never allow that the fuel, coming out of the cylinder head draining screw, stains the control belts of the fan, the water pump, the alternator and the conditioner compressor, thus damaging them.

- Bleed screw (1) on the pre-filter mounting.
- Bleed screw (2) on the filter mounting.
- Bleed screw (4) on the front of the cylinder head.
- Work the pump (3) on the pre-filter mounting till fuel with no air bubbles in it comes out of the screw (1); close the screw.
- Repeat this step for screw (2).
- Repeat this step for screw (4).

Checks and tests


Start the engine, leave it running at just a little faster than idling speed and wait for the temperature of the coolant to reach the level to open the thermostat. Then, check that:

- No water leaks from the connecting sleeves of the pipes in the engine cooling and cab heating circuits, tightening the collars further if this is necessary.
- No oil leaks from between the cover and the cylinder head, between the oil sump and the crankcase, between the oil filter and its seat, between the heat exchanger and the crankcase, or between the various pipes in the lubrication circuit.
- No air leaks from the pipes connected to the pneumatic components involved in removal.
- The indicator lights on the instrument panel and the devices disconnected when removing the engine all work properly.

Aquila Trucks Centres

543422 ELECTRO-MAGNETIC FAN DRIVE REPLACEMENT**Removal**

Figure 17

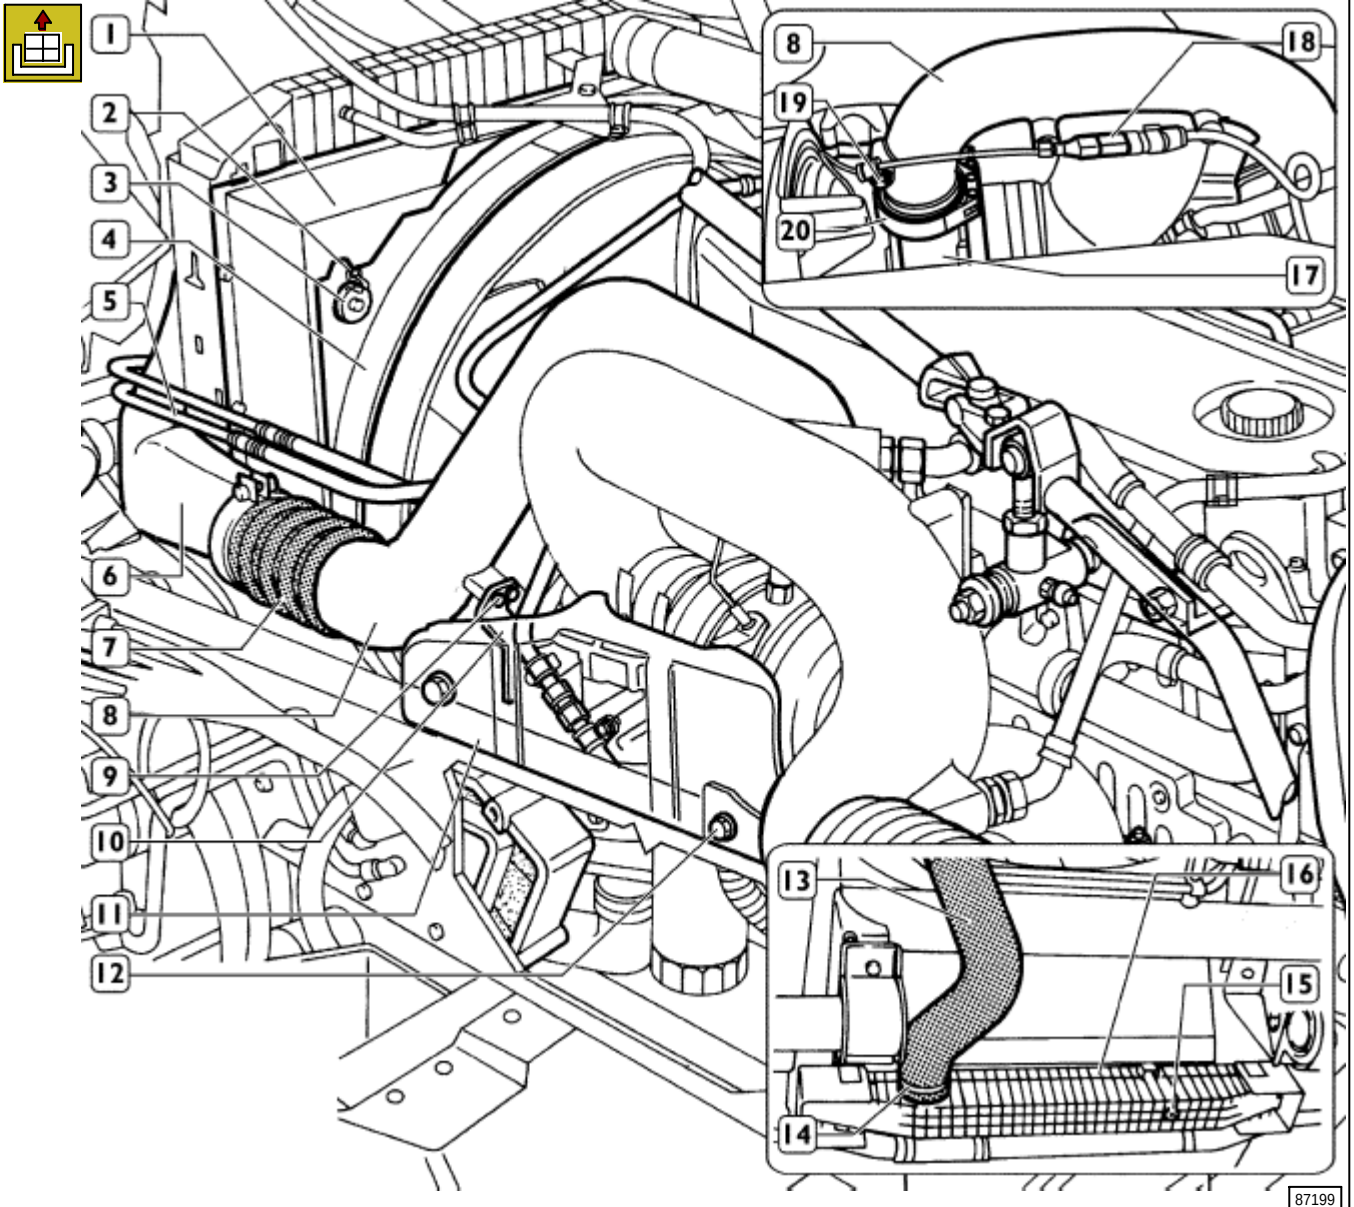

87199

To cut off the batteries, remove the electric wires or open the main switch.

Remove the bumper fastening screws.

Move the bumper away from its respective supporting brackets, then place it, without subjecting the electric cables and the headlamp wiper pipe (if any) under tension, on a suitable stand so as to subsequently allow the cab to be tilted.

Lift the radiator grill, then tilt the cab.

Go under the vehicle and remove the plug (15) from the radiator (16) and drain the coolant fluid in the appropriate container.

Remove the clip (14) and disconnect the radiator (16) sleeve (13).

On the engine compartment left-hand side, remove the screws (12) and the heat guard (11). Take off the screws and disconnect the air conveyor (8) climate control pipes (5).

Slacken the sleeve fastening clamp (7) from the intercooler (6) radiator.

Remove the air conveyor (8) fastening screws (9) to the support bracket (10).

Remove the screw (19) and detach the electric wire (18) from the air conveyor (8).

Remove the clamp (20) and detach the air conveyor (8) together with the sleeve (7) from the turbocharger (17) and from the intercooler radiator (6).


Drive in the suitable self-threading screw in the pin hole (3) taking care to partially take off and finally remove with a screwdriver the upper clip (2) fastening the fan air conveyor (4) to radiator guard (1).

Remove the lower clip in the same way.

Remove the two radiator support fastening screws to the chassis.

Aquila Trucks Centres

Figure 18

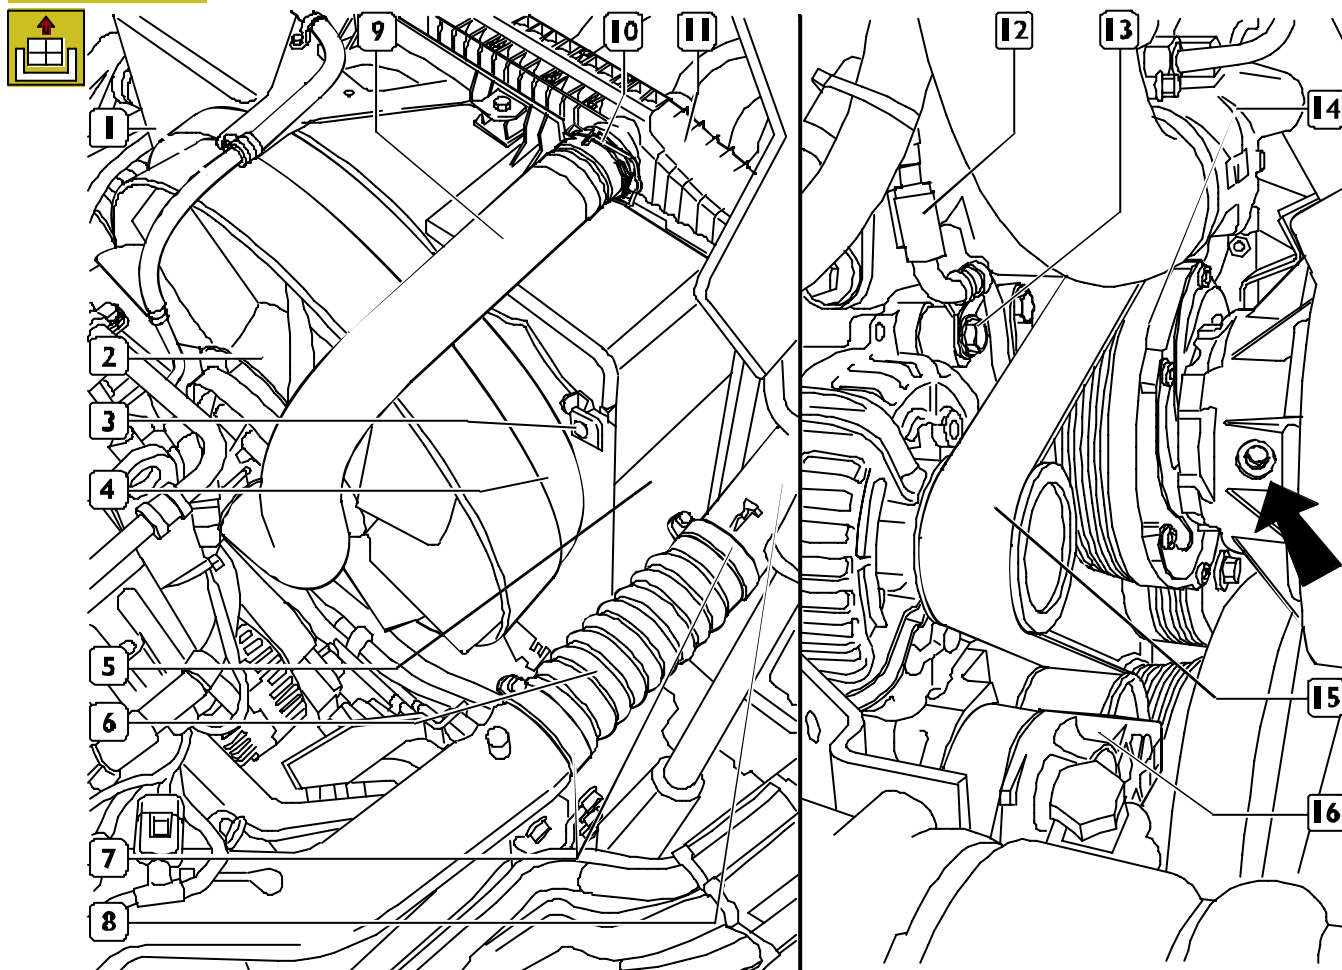

87200

On the right-hand side

Disconnect the pipe (1) from the thermostat.

Remove clip (10), then disconnect sleeve (9) from radiator (11).

Slacken the clamps (7) and remove the sleeve (6)

Remove the upper and lower clip (3) as described for the left-hand side.

Remove the radiator fastening screws to the chassis and move the radiator unit forwards.

Remove the fan (2) fastening screws to the electro-magnetic joint (14).

Remove the fan (2) together with the air conveyor (4).

Release, by acting on automatic stretcher (16), belt (15) tension, then remove the belt from the pulleys.

Disconnect the electric connection (12) of the electro-magnetic joint (14).

Remove the screws (13) and the electro-magnetic joint (14) from the engine.

Refitting




To refit the electro-magnetic fan drive, reverse the removal procedure and attain to the following rules:

- check the control belt (15) conditions; replace it if damaged or worn out;
- tighten the screws and/or nuts to the prescribed torque;
- fill the cooling system with the prescribed fluid, then blow air off the cooling system as described in the respective chapter;

NOTE The electro-magnetic joint is fitted with two threaded holes (→) at 180° one from the other. In the event of fault, lock the joint control driving in a M8x16 mm screw in these holes. In this way it is possible to take the vehicle to the closest dealership.

Aquila Trucks Centres

Figure 19

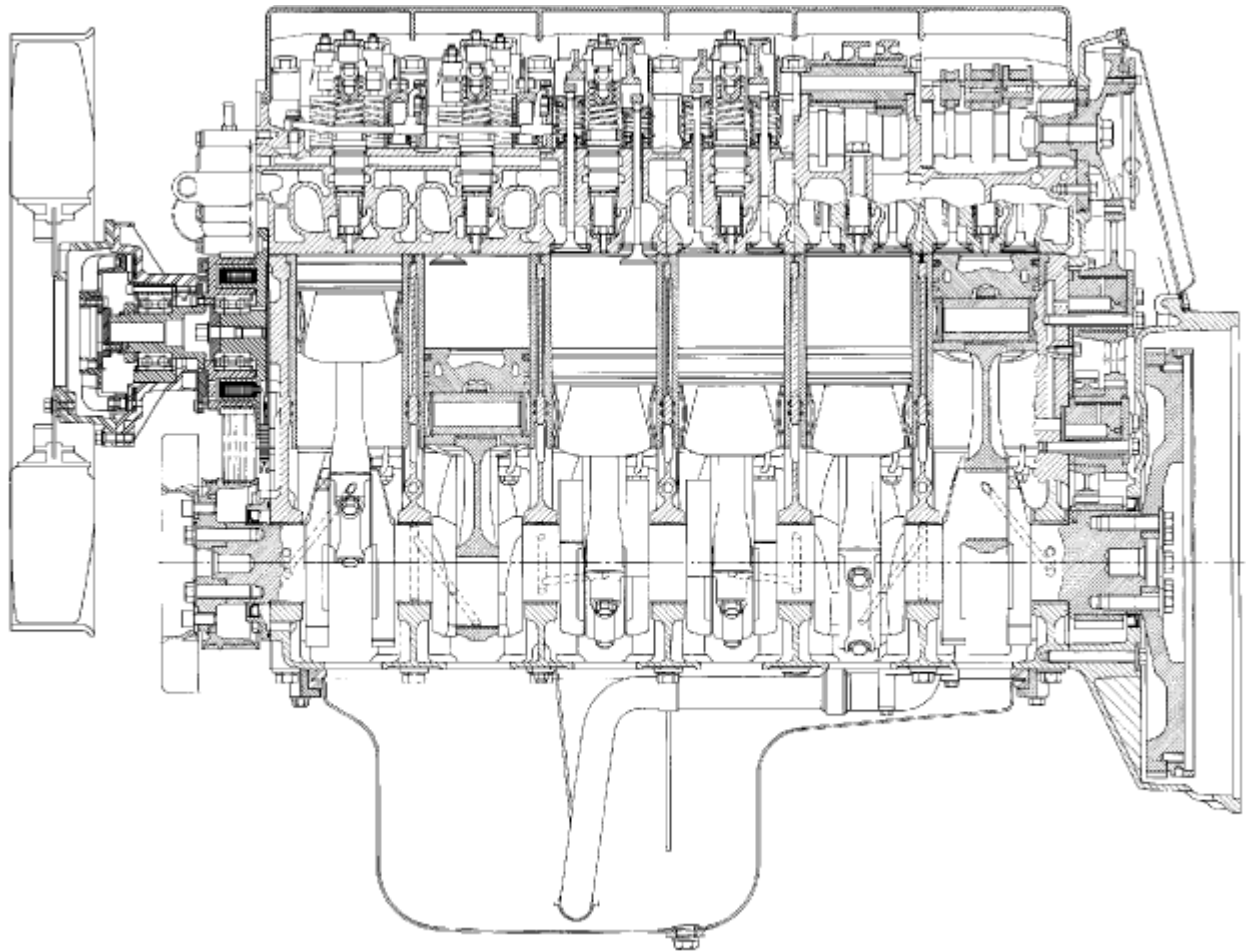


78839

ENGINE - LONGITUDINAL SECTION

Aquila Trucks Centres

Figure 20

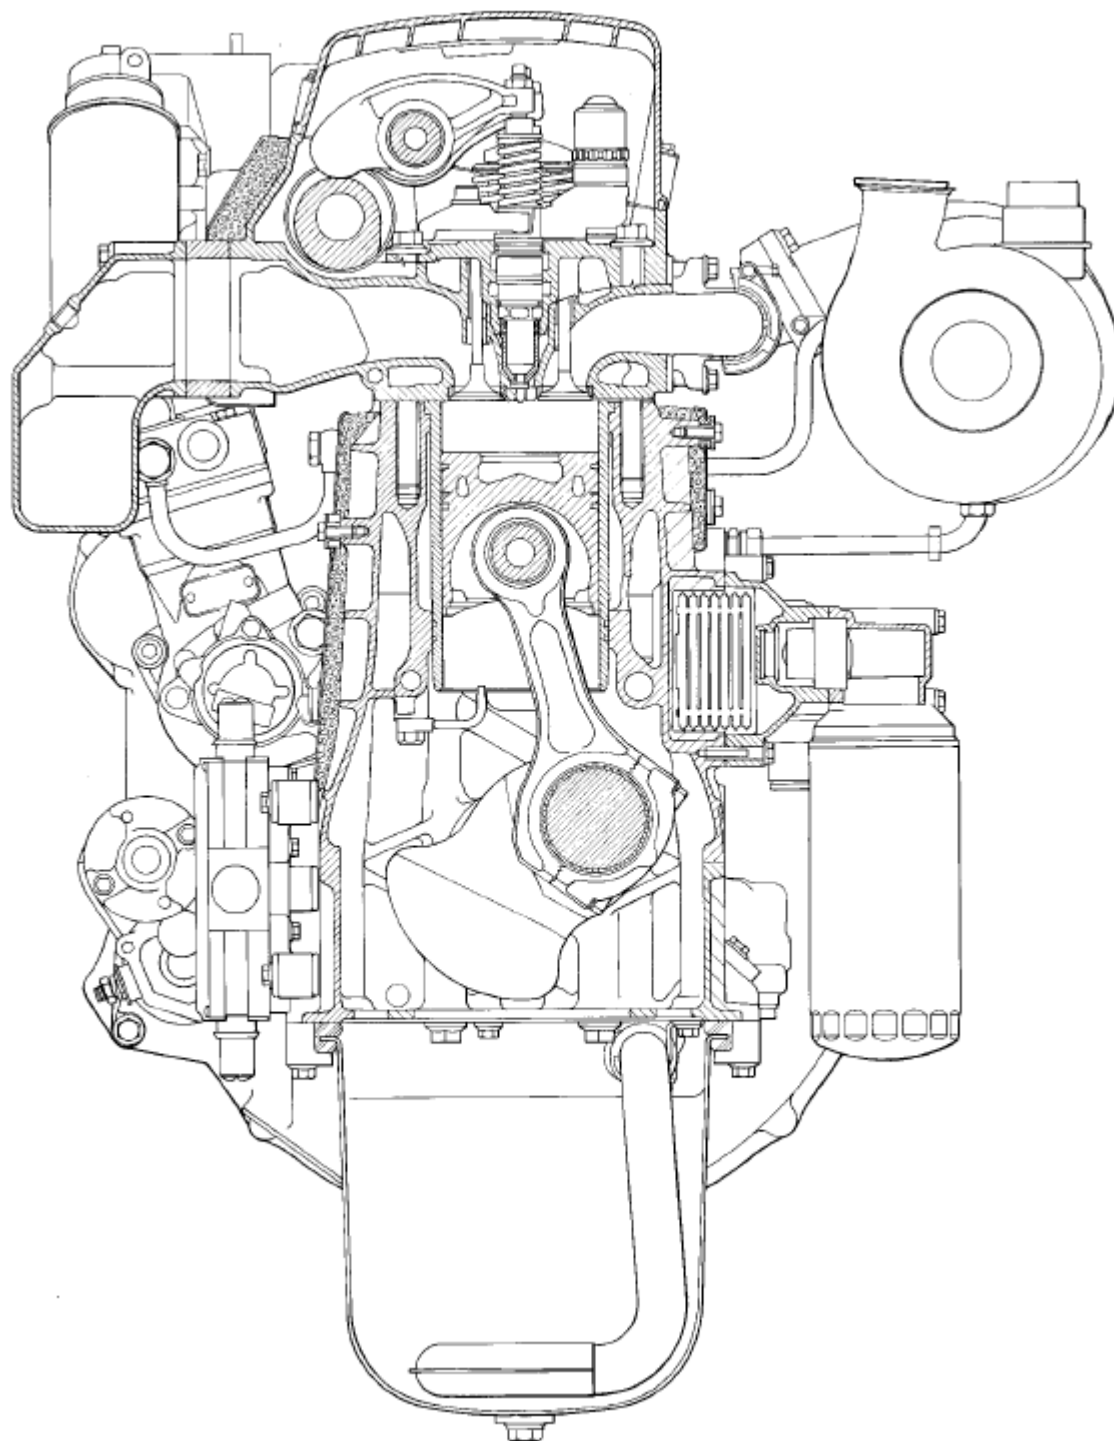


ENGINE - CROSS SECTION

78841

Aquila Trucks Centres

540110 DISASSEMBLING THE ENGINE

Figure 21

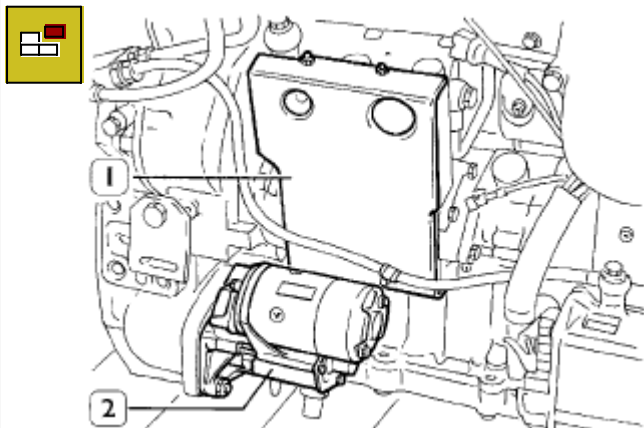


47562

Before dismantling the engine on the rotary stand 99322230, remove the following components:

- starter (2)
- turbocharger soundproofing shield (1)


Figure 22

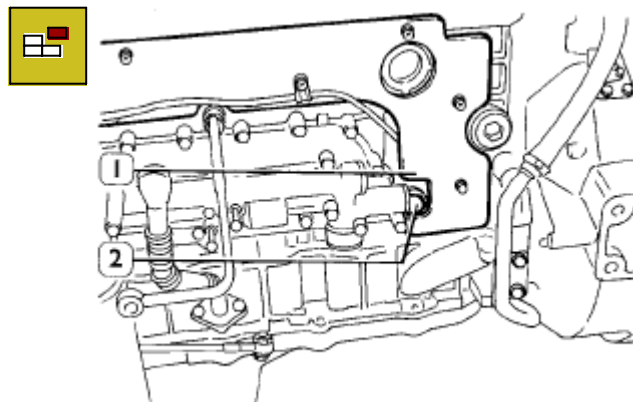

47563

Remove the soundproofing shield (1) and plug (2)

Figure 23

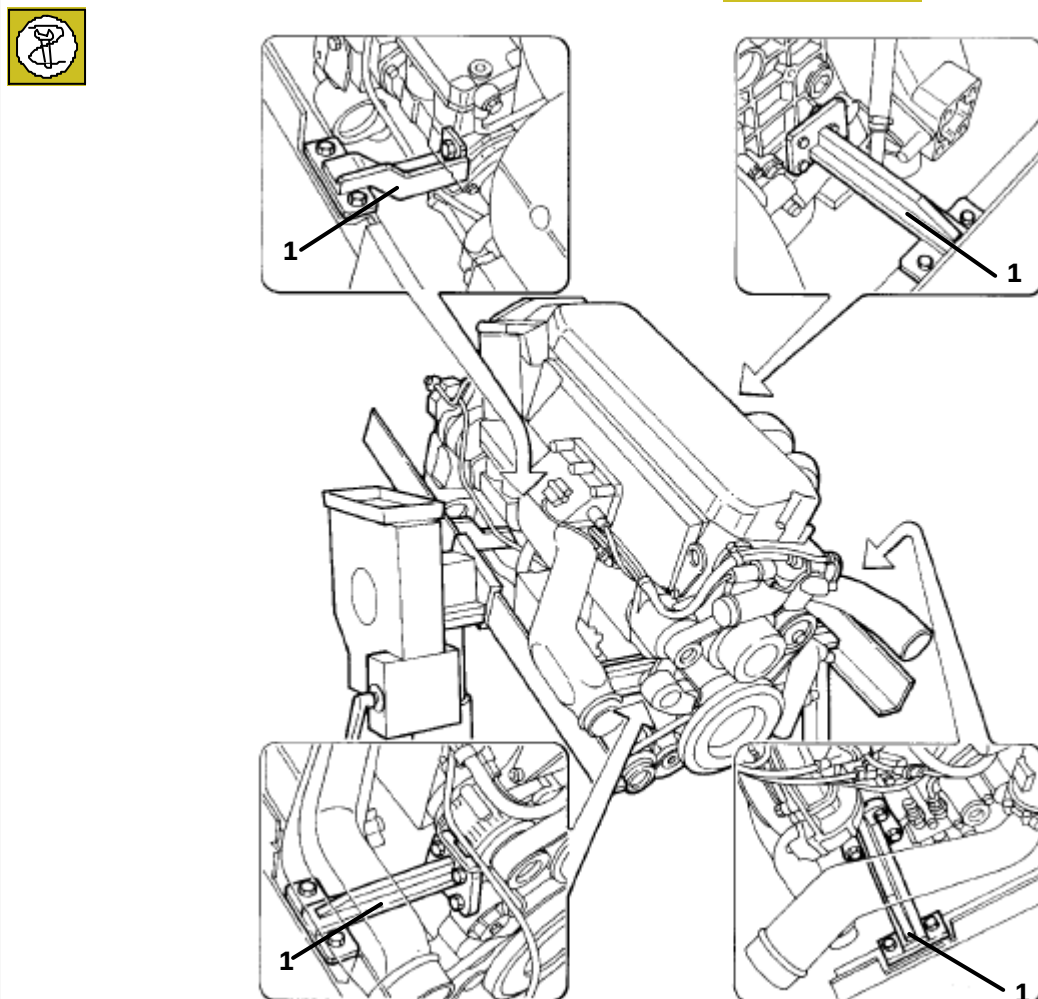


47601

Fix the engine to the rotary stand 99322230, by means of brackets 99361035 (1), remove the fan.

Aquila Trucks Centres


Figure 24

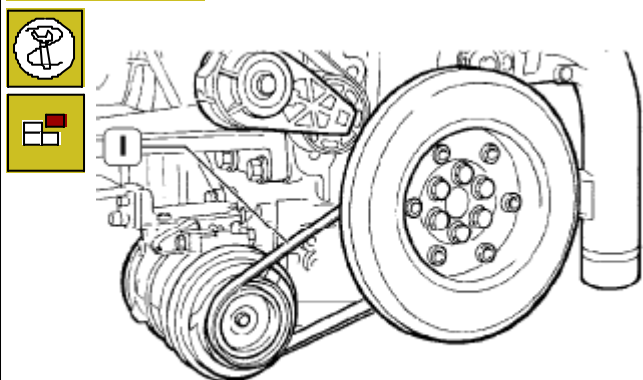

112330

Cut the belt (1), as it must not be used again.

Figure 26

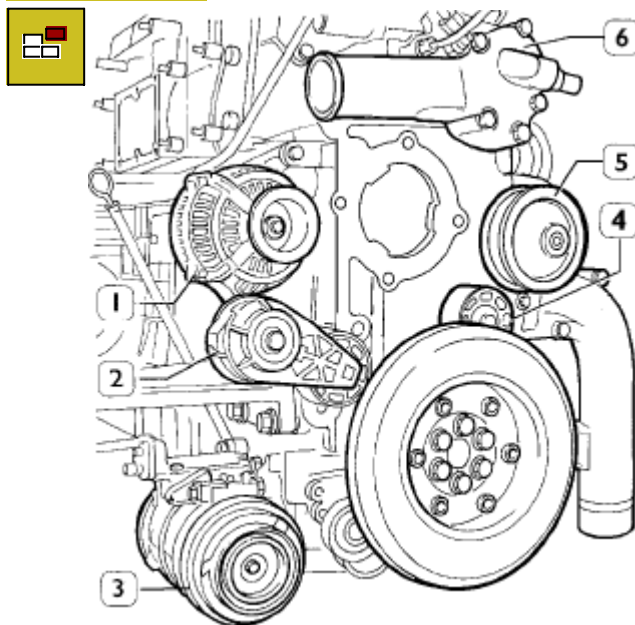

87202


Remove the following components:

- alternator (1);
- belt tightener support (2);
- if present, air conditioner compressor (3);
- water pump (5) and pipe;
- fixed backstand (4).

Only models equipped without Intarder

- thermostat unit (6).

Figure 25

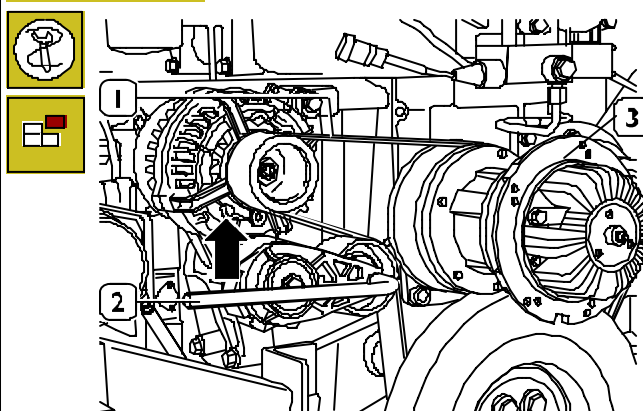


73579

Using an appropriate tool (2), operate in the direction of the arrow, and remove the belt (1) driving the water pump, alternator and fan.

Take out the screws and remove the electromagnetic coupling (3).

Figure 27

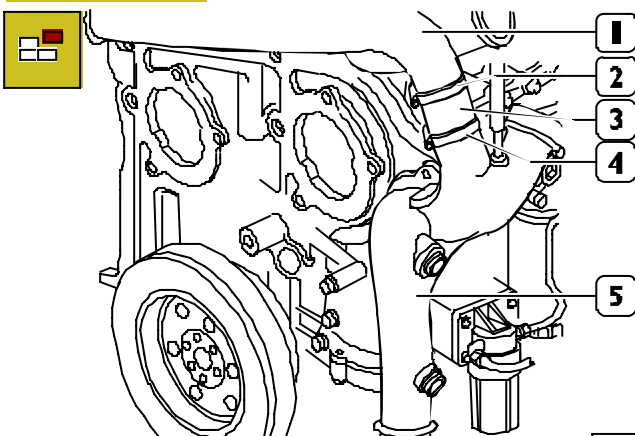

87203


Only models equipped with Intarder

Loosen straps (2 and 4), then remove pipe (1) from the cylinder head and pipe (3).

Remove the fastening screws, then take off thermostat unit (5).

Aquila Trucks Centres


Figure 28

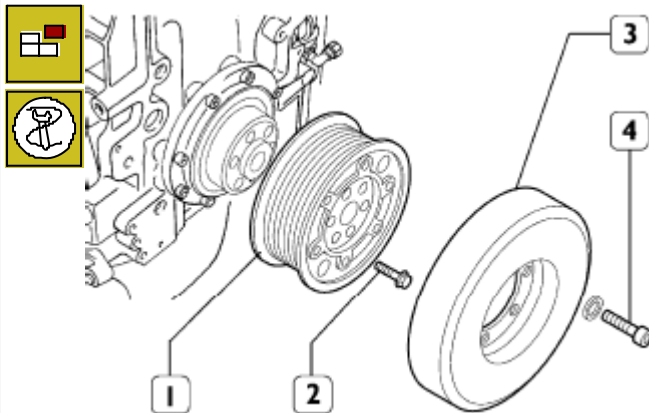

87204


Block the flywheel rotation with tool 99360351.
Remove screws (4), then disassemble damper (3).
Remove the screws (2) and the pulley (1).

Figure 29

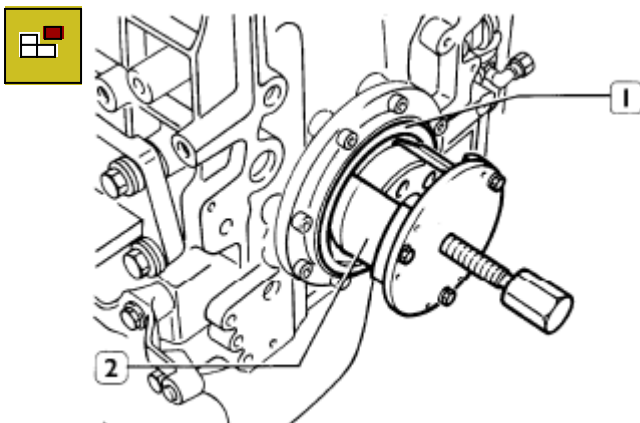

Install extractor 99340051 (2) and remove the seal gaskets (1). Unscrew the screws and remove the cover.
Disconnect all electric connections and sensors.


Figure 30

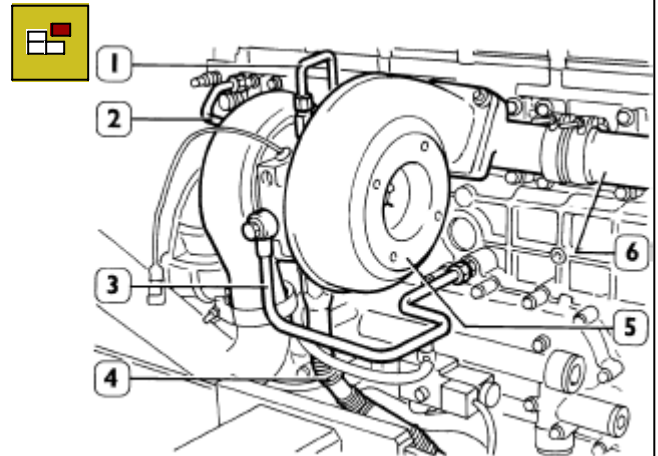

47566

Remove the following components: oil supply lines (1); water cooling supply lines (3); water discharge lines (2); oil return lines (4); turbocharger (5); exhaust manifold (6).


Figure 31

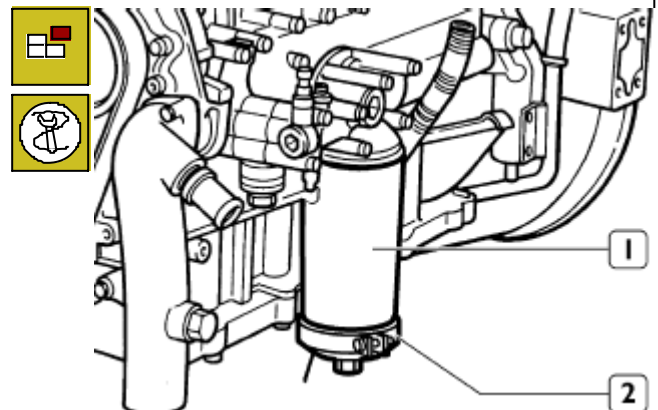

87205

Unscrew the oil filter (1) by tool 99360314 (2).

Figure 32

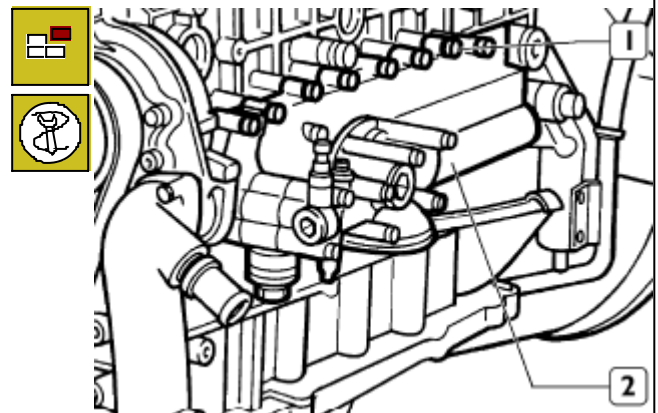


87206

Unscrew the screws (1) and remove the entire heat exchanger (2).

Aquila Trucks Centres


Figure 33

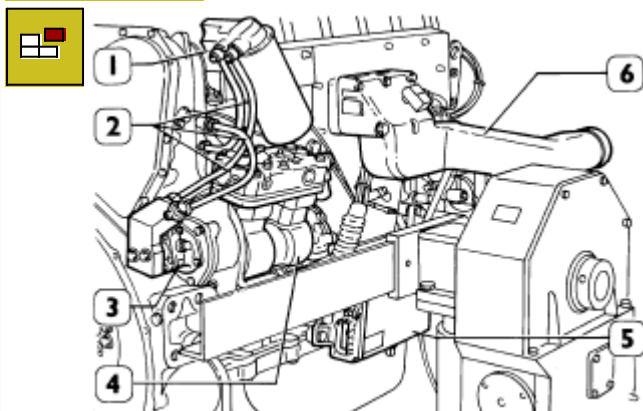

47587

Remove the following components: inlet manifold (6); support for fuel filter (1); fuel lines (2); fuel pump (3); compressor (4); control unit (5).

Figure 34

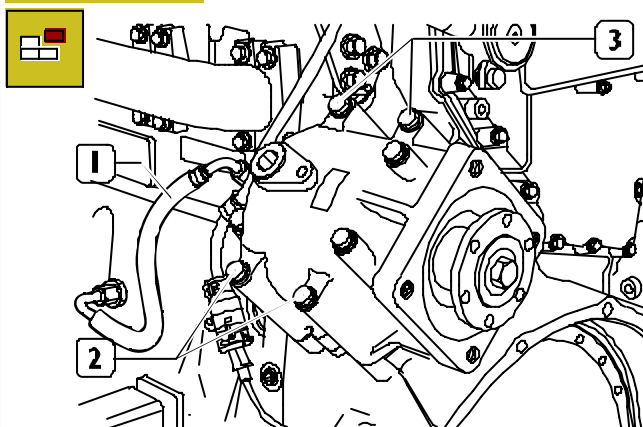


70708

To remove the P.T.O. (if applicable):

- Disconnect the oil pipe (1).
- Unscrew the 4 screws (2) and (3).


Figure 35

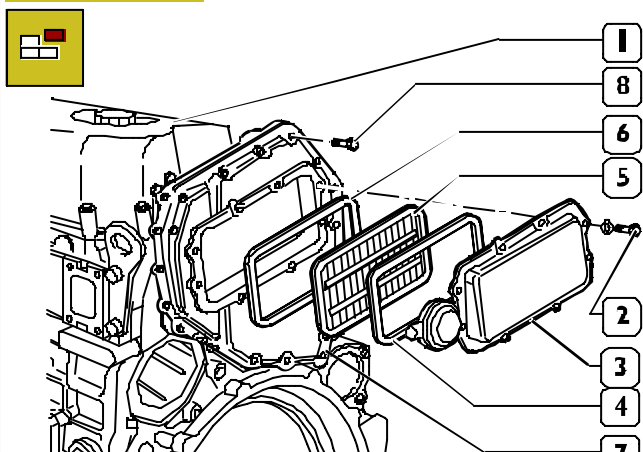

84377

Remove the rocker arm cover (1), take off the screws (2) and remove: the cover (3), the filter (5) and the gaskets (4 and 6). Take off the screws (8) and remove the blow-by case (7).


Figure 36

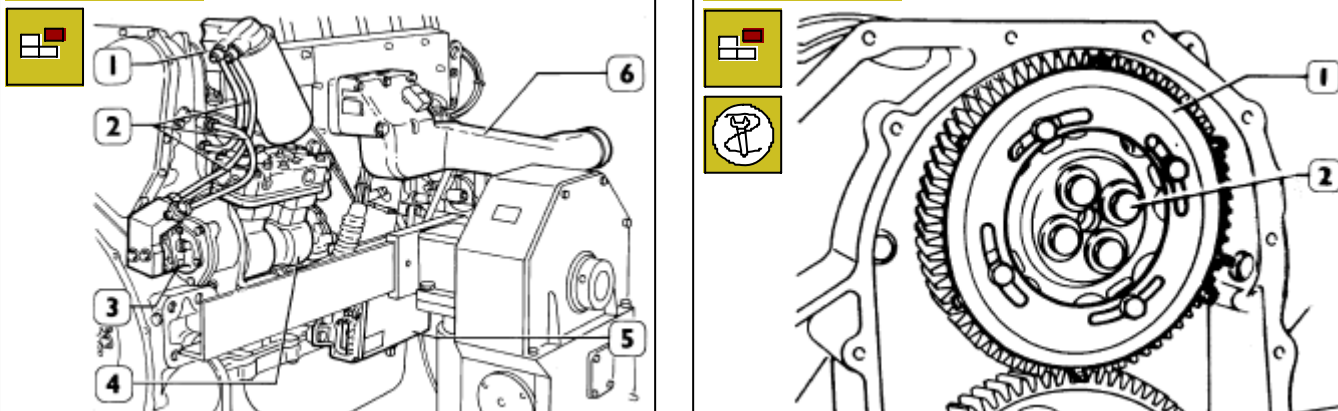

45661

Unscrew the screws (2), by using the proper wrench and remove the gear (1) with the phonic wheel.


Figure 37

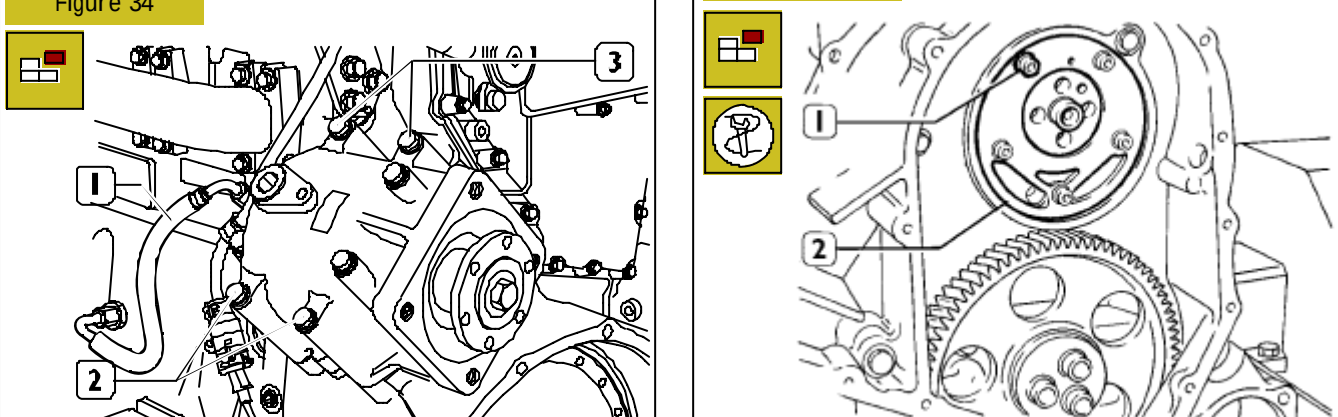

86289

Unscrew the screws (1); tighten a screw in a reaction hole and remove the shoulder plate (2), remove the sheet gasket.

Figure 38

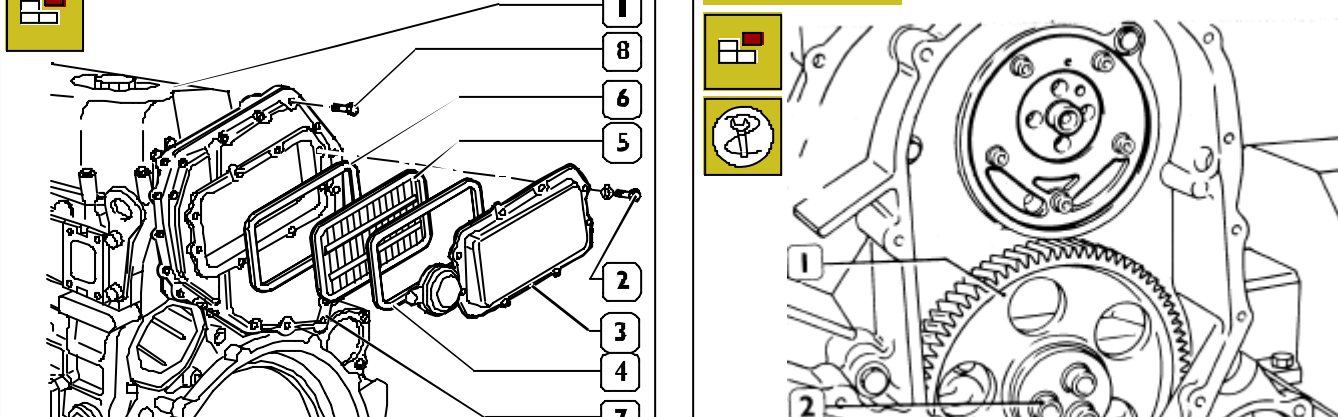


47568

By means of a properly splined wrench, untighten screws (2) and remove the transmission gear (1)

Aquila Trucks Centres


Figure 39

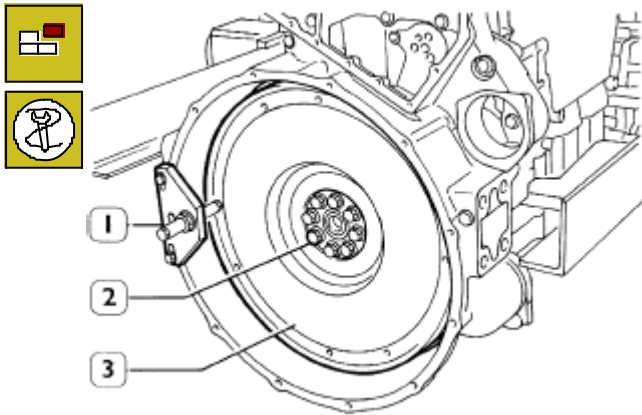

47568

Stop the flywheel (3) rotation by means of tool 99360351 (1),
untighten the fixing screws (2) and remove the flywheel.


Figure 40

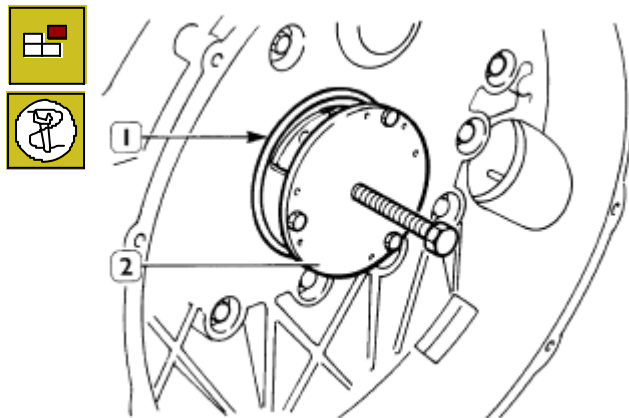

45259

Apply extractor 99340052 (2) and pull out the seal gasket (1).


Figure 41

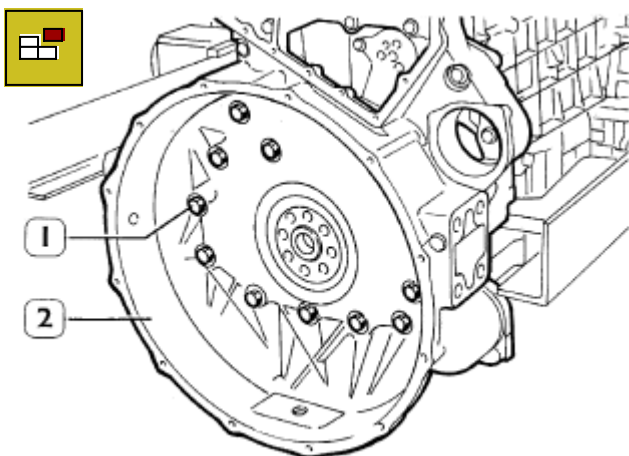

7

Untighten the screws (1) and take down the gear housing (2).


Figure 42

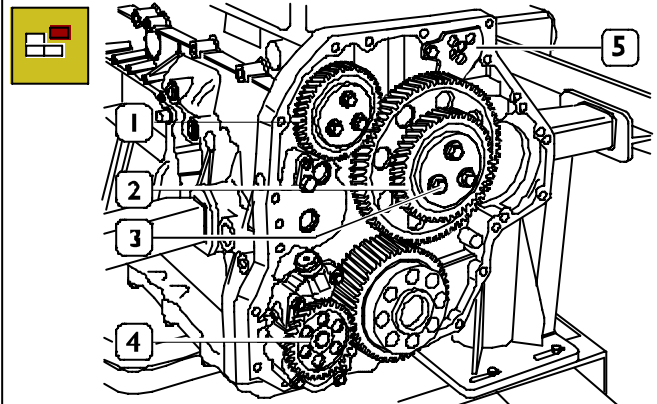

106219

Remove power take-off control gear (1), if any.
Remove screws (3) and dismount double gear (2).
Remove securing screw and dismount articulated rod (5).
Dismount oil pump (4).


Figure 43

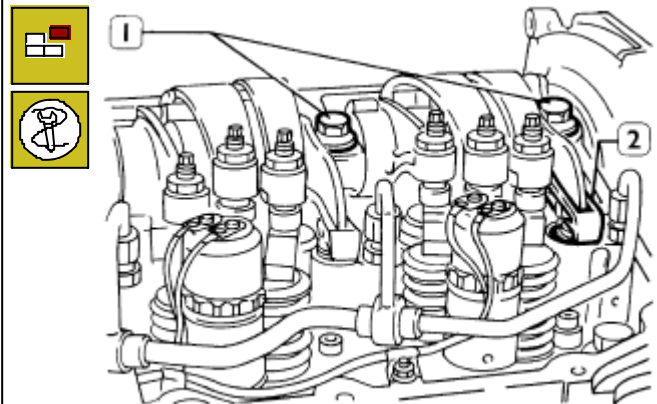

45259

- Remove the check springs (2) of the exhaust brake lever;
- Untighten the fixing screws (1) of rocker arm shaft.

Figure 44

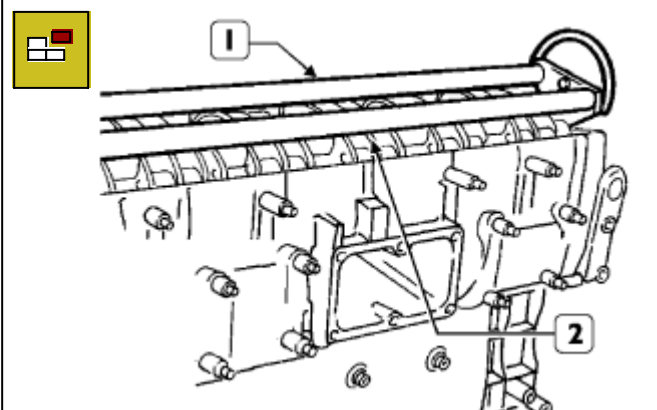


116190

- Apply tool 99360553 (1) to the rocker holder shaft (2) and remove the shaft (2) from the cylinder head.

Aquila Trucks Centres


Figure 45

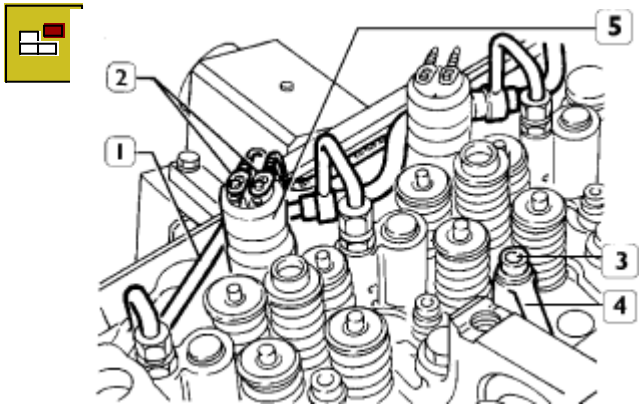

116232

- Remove the piping (1) for exhaust brake pins;
- Untighten screws and remove electric connections (2) from solenoid valves;
- Untighten fixing screws (3) of injector brackets (4).
- Remove injectors (5).
- Install plugs 99360177 instead of injectors.

Figure 46

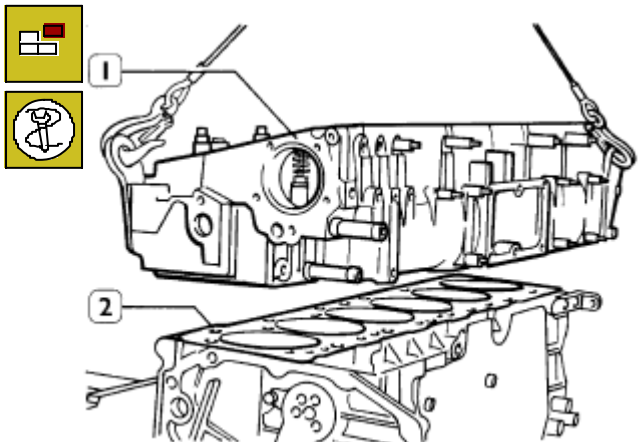


45266

Remove the camshaft and the fixing screws on cylinder heads

- By means of wire ropes, lift the cylinder head (1) and remove seals (2).

NOTE The cylinder head mount screws must be replaced at each removal operation.


Figure 47

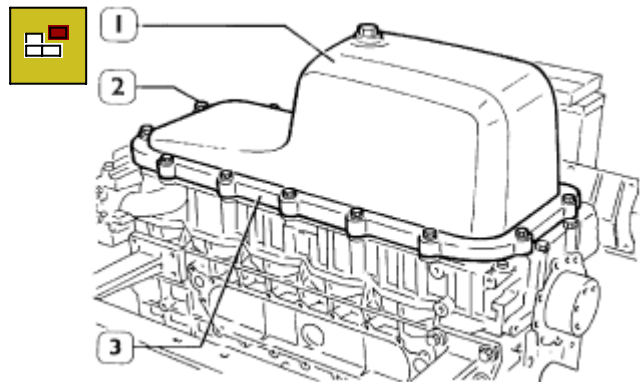

47573

Untighten screws (2) and remove the engine oil sump (1) with frame (3) and seal .


Figure 48

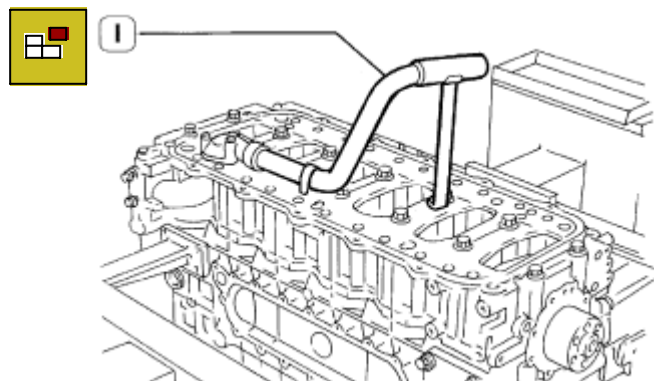

47572

Untighten screws and remove suction rose (1).

Figure 49

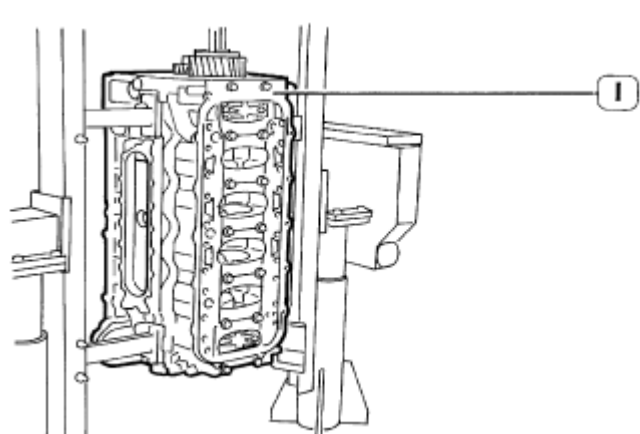


47574

Rotate the block (1) to the vertical position.

Aquila Trucks Centres


Figure 50

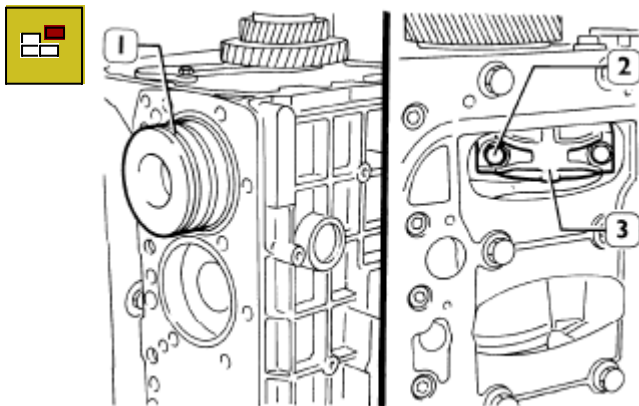

47575

Untighten screws (2) fixing the connecting rod cap (3) and remove it. Remove the connecting rod-piston assembly from the upper side. Repeat these operations for the other pistons.


Figure 51

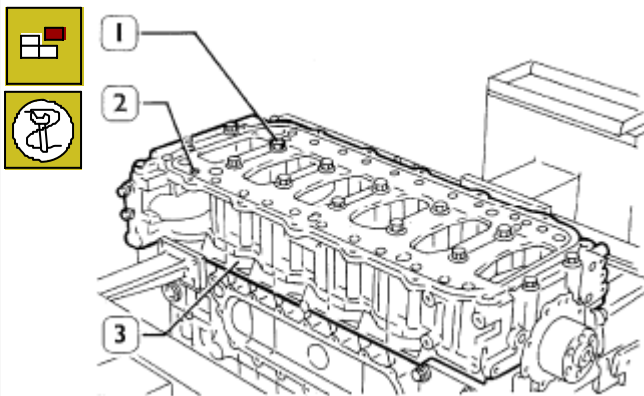

47576

By means of proper and splined wrenches, untighten the screws (1) and (2) and remove the lower crankcase (3).


Figure 52

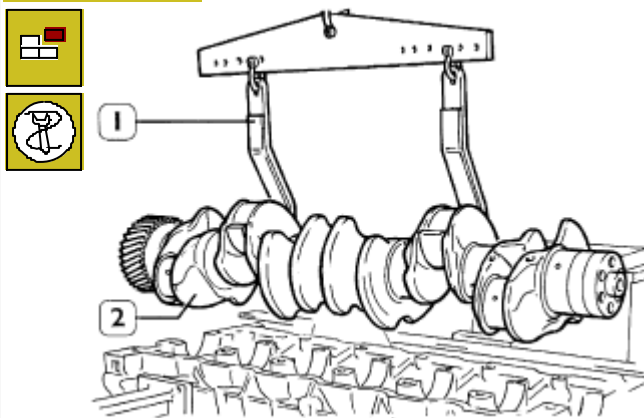

47570

Remove the crankshaft (2) with tool 99360500 (1).

Figure 53

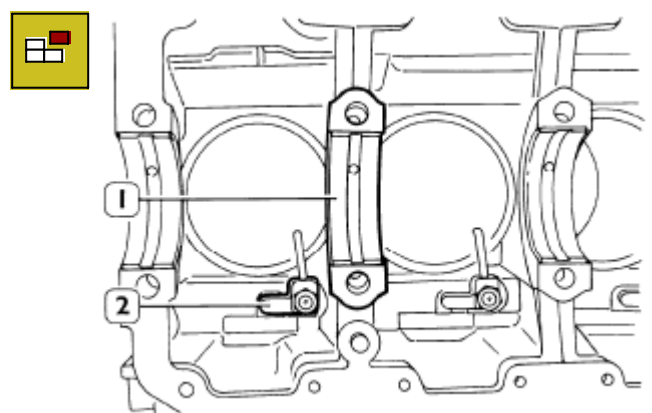

47571

Remove the crankshaft half-bearings (1), untighten the screws and remove oil spray nozzles (2). Take down cylinder liners as specified in the relative paragraph on page 56.


NOTE After disassembling the engine, thoroughly clean disassembled parts and check their integrity. Instructions for main checks and measures are given in the following pages, in order to determine whether the parts can be re-used.

Aquila Trucks Centres

REPAIR OPERATIONS

540410 CYLINDER BLOCK
540420 Checks and measurements

Figure 54 (Demonstration)

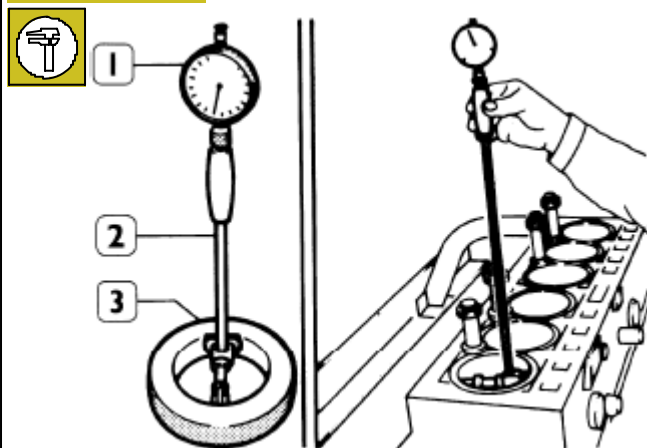


34994

Internal diameter of the cylinder liners is checked for ovalization, taper and wear, using a bore dial (1) centesimal gauge 99395687 (2) previously reset to ring gauge (3), diameter 115 mm.

NOTE If a 115 ring gauge is not available use a micrometer caliper.

Figure 55

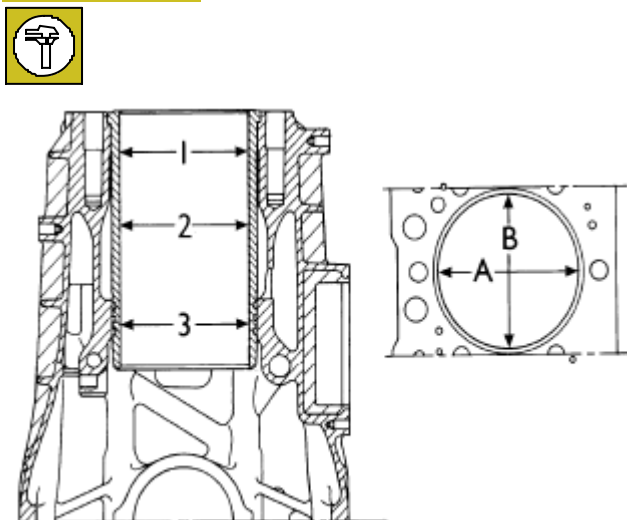


47439

- 1 = 1st measuring
 2 = 2nd measuring
 3 = 3rd measuring

Carry out measurements on each cylinder liner at three different levels and on two (A-B) surfaces, to one another perpendicular, as shown in Figure.

Figure 56

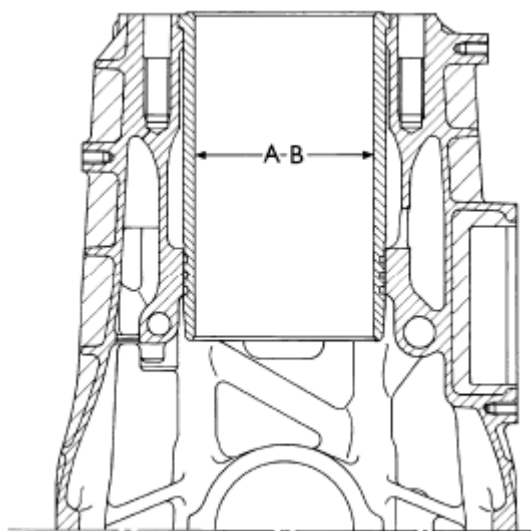

47440


- A = Selection class $\varnothing$ 115 to 115.012 mm
 B = Selection class $\varnothing$ 115.010 to 115.022 mm

In case of maximum wear max 0.150 mm or maximum ovalization max 0.100 mm compared to the values indicated in the figure, the liners must be replaced as they cannot be ground, lapped or trued.

NOTE

Cylinder liners are equipped with spare parts with "A" selection class.

Figure 57

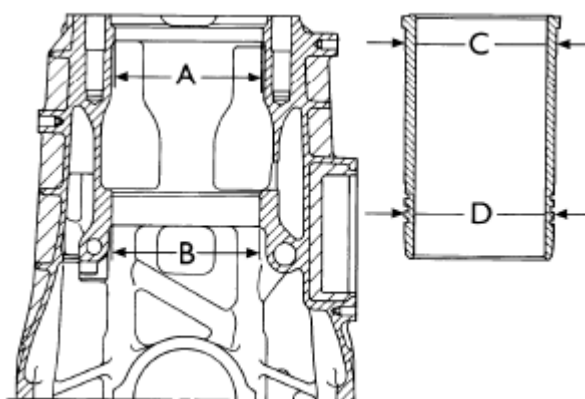

47441

- A = $\varnothing$ 130.200 to 130.225 mm
 B = $\varnothing$ 128.510 to 128.535 mm
 C = $\varnothing$ 130.161 to 130.186 mm
 D = $\varnothing$ 128.475 to 128.500 mm


The figure shows the outer diameters of the cylinder liners and the relative seat inner diameters.

The cylinder liners can be extracted and installed several times in different seats, if necessary.

Aquila Trucks Centres


CYLINDER LINERS

Figure 58

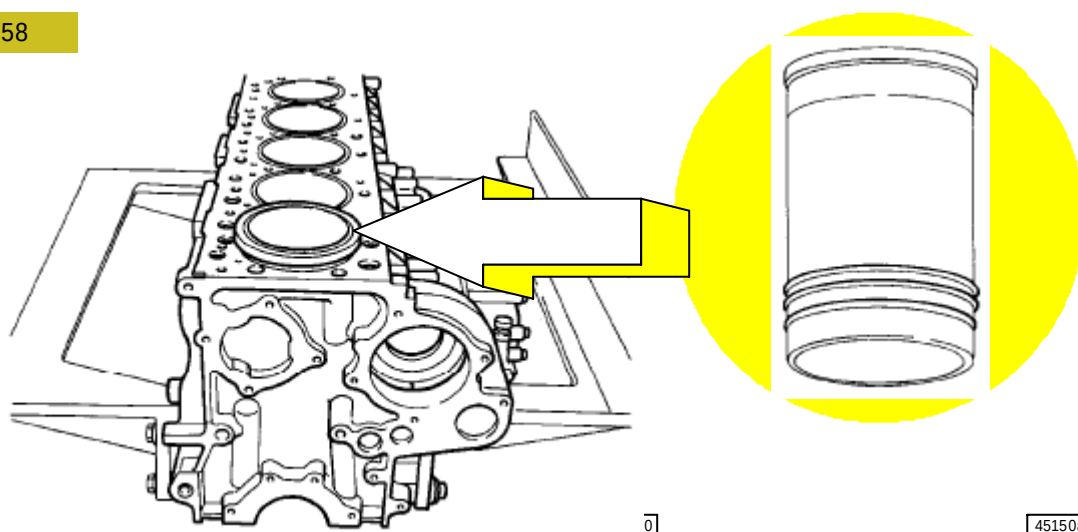

BLOCK WITH CYLINDER LINERS

Figure 59

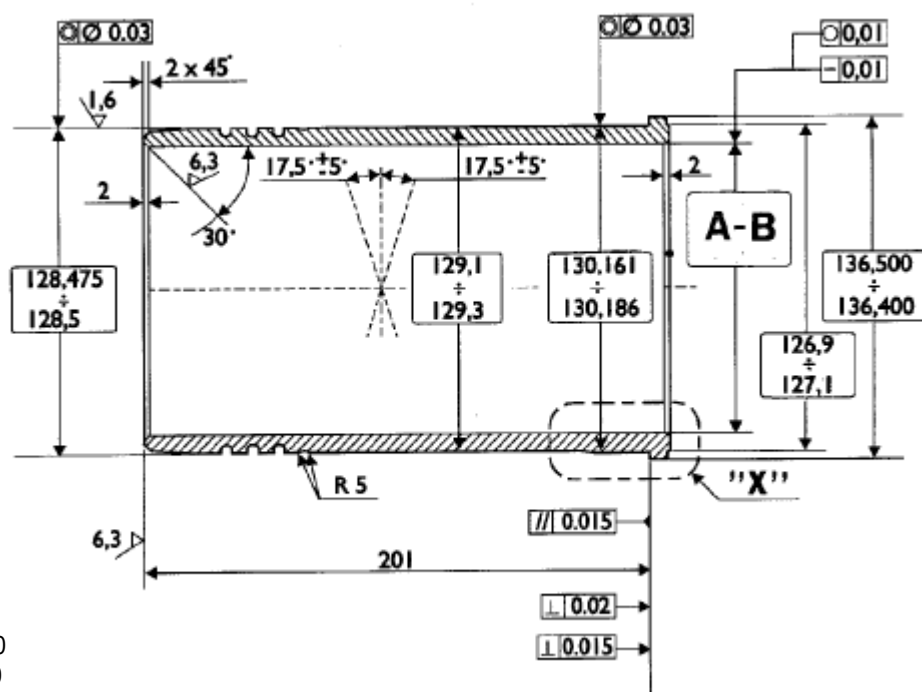


Selection class

$\left\{ \begin{array}{l} A \text{ mm } 115.000 \\ B \text{ mm } 115.010 \end{array} \right.$

CYLINDER LINERS MAIN DATA

Figure 60

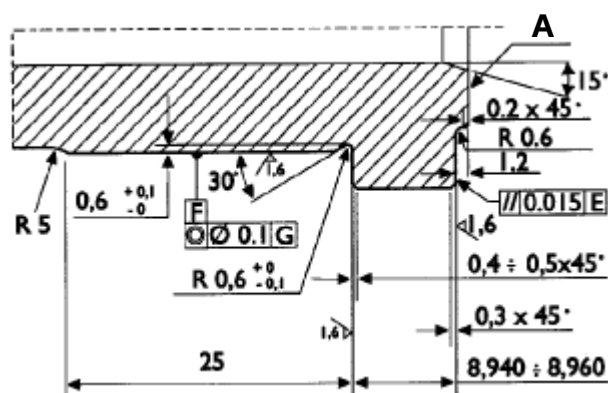


DETAIL "X"

"A" = Selection class marking area

Aquila Trucks Centres

540420 Replacing cylinder liners
Removal

Figure 61

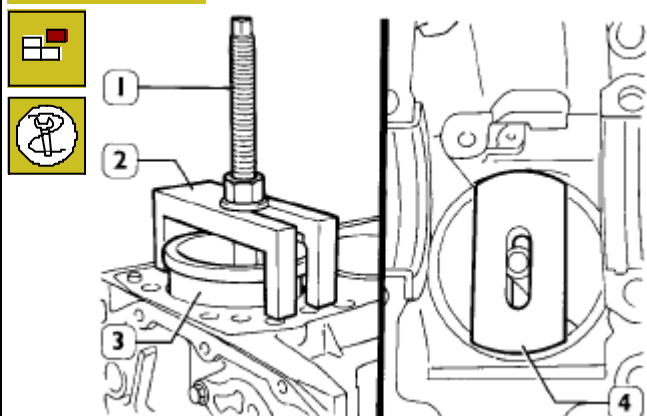


Place details 99360706 (1 and 2) and plate 99360724 (4) as shown in the figure, by making sure that the plate (4) is properly placed on the cylinder liners.

Tighten the screw nut (1) and remove the cylinder liner (3) from the block.

Fitting and checking protrusion

Figure 62

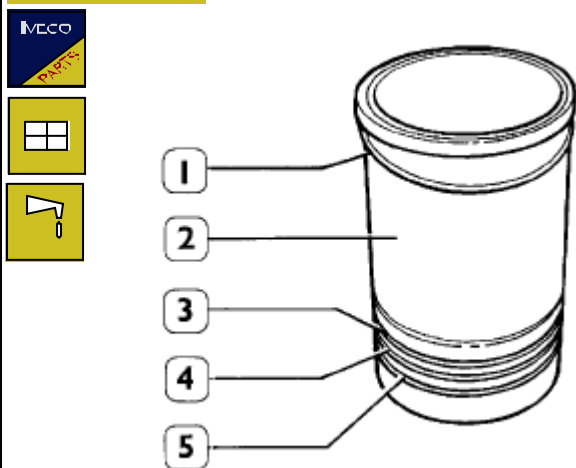


Always replace water sealing rings (3, 4 and 5). Install the adjustment ring (1) on the cylinder liner (2); lubricate lower part of liner and install it in the cylinder unit using the proper tool.

NOTE

The adjustment ring (1) is supplied as spare parts in the following thicknesses: 0.08 mm - 0.10 mm - 0.12 mm.


Figure 63

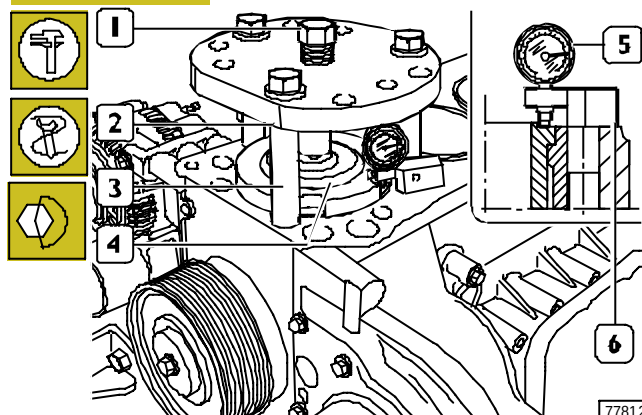

Check cylinder barrel protrusion with tool 99360334 (1-2-3-4) and tighten screw (1) to 170 Nm.

With dial gauge 99395603 (5) placed on base 99370415 (6). Measure the cylinder barrel protrusion compared to the cylinder head supporting plane, it must be 0.035 to 0.065 mm (Figure 64); otherwise replace the adjusting ring (1, Figure 62) fitted with spare parts having different thickness.


Figure 64

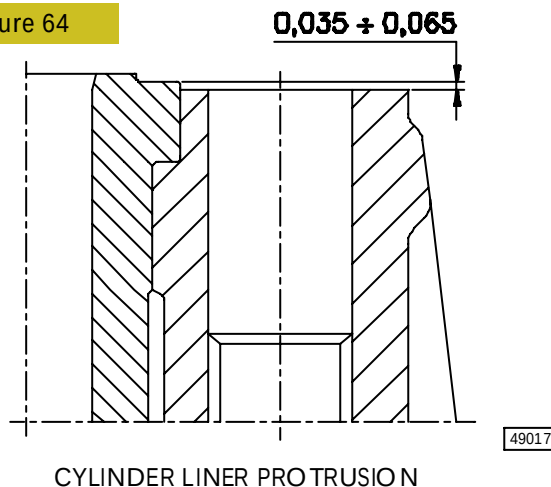

CYLINDER LINER PROTRUSION

Figure 65

(Demonstration)

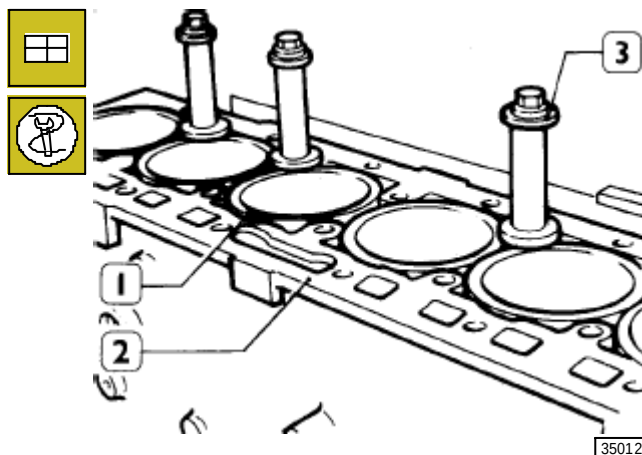


When the installation is completed, block the cylinder liners (1) to the block (2) with studs 99360703 (3).

Aquila Trucks Centres

5408 CRANKSHAFT

Figure 66

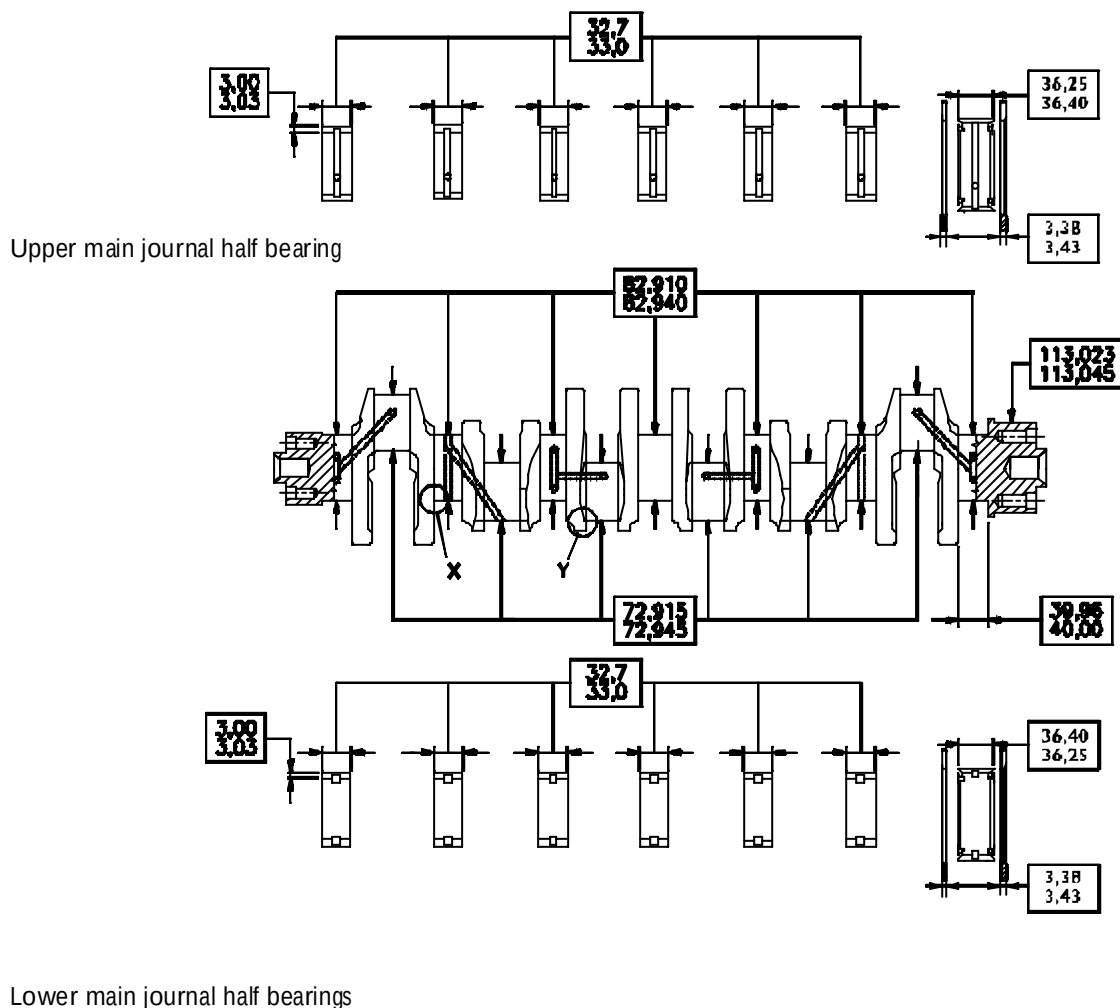


116410

MAIN DATA FOR THE CRANK SHAFT PINS AND THE HALF BEARINGS

Check the condition of the journals and the big end pins; there must no be signs of scoring, ovalization or excessive wear.
The data given refer to the normal diameter of the pins.


Figure 67

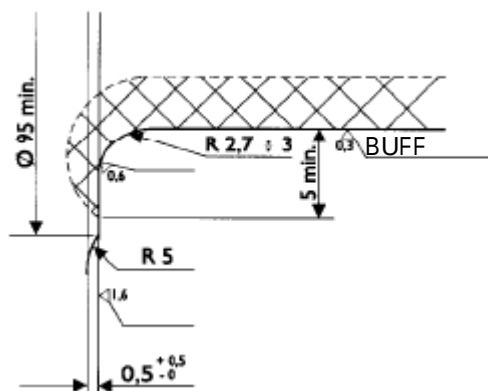

47537

X. Detail of main journals connections

Figure 68

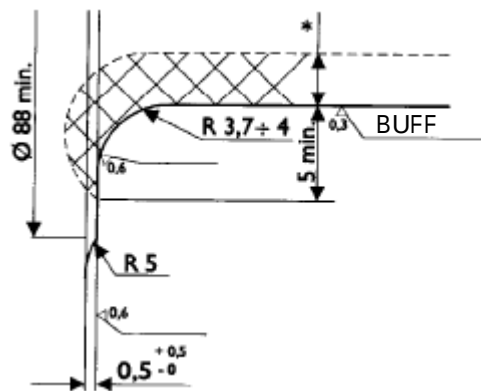

47538


Y. Detail of crank pins connections

Aquila Trucks Centres

540812 Measuring main journals and crank pins

Before grinding the crank pins using a micrometer (1), measure the main journals and the crank pins (2) and decide, on the basis of the undersizing of the bearings, the final diameter to which the pins are to be ground.


Figure 69

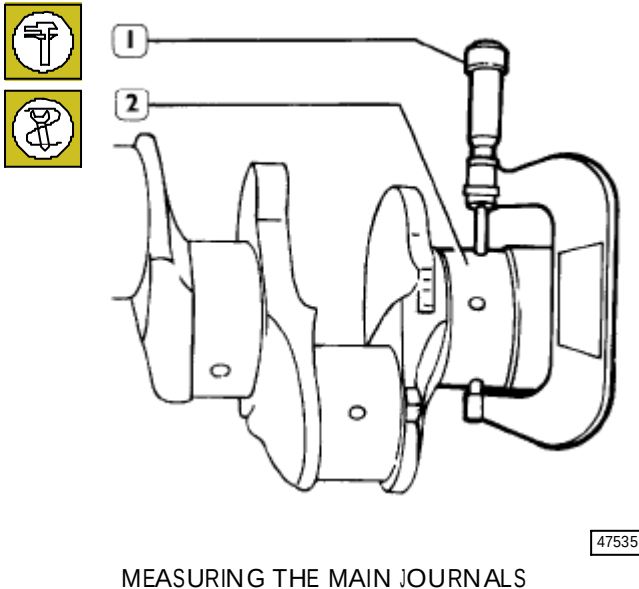

MEASURING THE MAIN JOURNALS

NOTE It is advisable to enter the values found in a table (Figure 71).

Figure 70

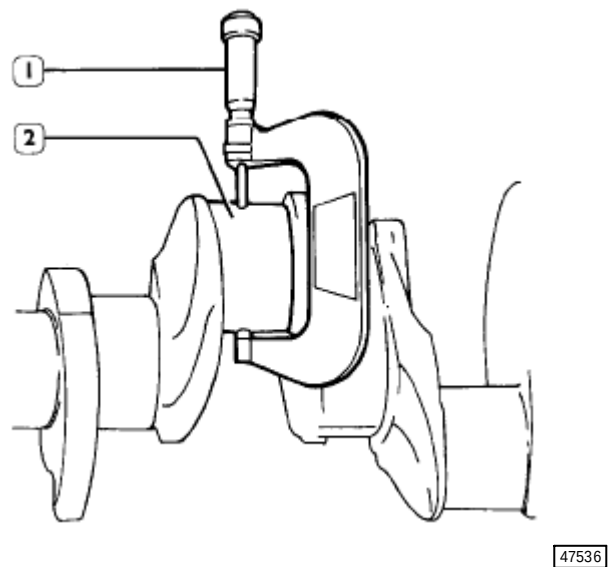

MEASURING CRANK PINS


During grinding, pay attention to journal and crank pins values specified in figures 68 and 69.

NOTE All journals and crank pins must also be ground to the same undersizing class, in order to avoid any alteration to shaft balance.

Figure 71

Fill in this table with the measurements of the main journals and the crank pins.

MAIN JOURNALS

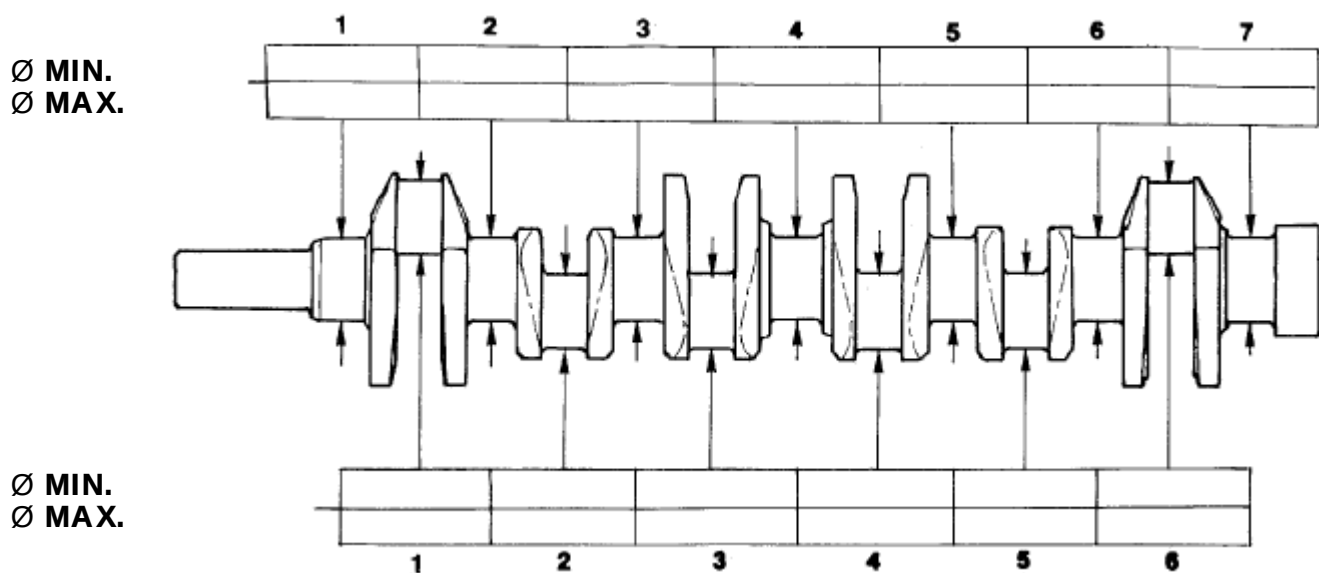

CRANK PINS

Aquila Trucks Centres

PRELIMINARY MEASUREMENT OF MAIN AND BIG END BEARING SHELL SELECTION DATA

For each of the journals of the crankshaft, it is necessary to carry out the following operations:

MAIN JOURNALS:

- Determine the class of diameter of the seat in the crankcase.
- Determine the class of diameter of the main journal.
- Select the class of the bearing shells to mount.

CRANKPINS:


- Determine the class of diameter of the seat in the connecting rod.
- Determine the class of diameter of the crankpin.
- Select the class of the bearing shells to mount.

DEFINING THE CLASS OF DIAMETER OF THE SEATS FOR BEARING SHELLS ON THE CRANKCASE


On the front of the crankcase, two sets of numbers are marked in the position shown (Figure 72 at top).

- The first set of digits (four) is the coupling number of the crankcase with its base.
- The following seven digits, taken singly, are the class of diameter of each of the seats referred to (Figure 72 at bottom).
- Each of these digits may be **1, 2 or 3**.

Figure 72

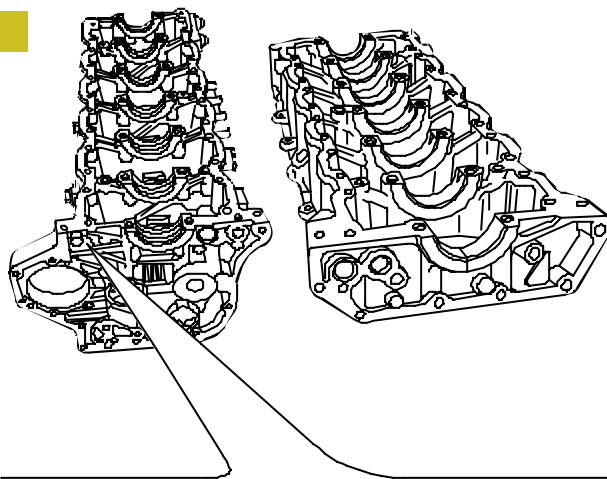

CLASS	MAIN BEARING HOUSING NOMINAL DIAMETER
1	89.000 to 89.009
2	89.010 to 89.019
3	89.020 to 89.030

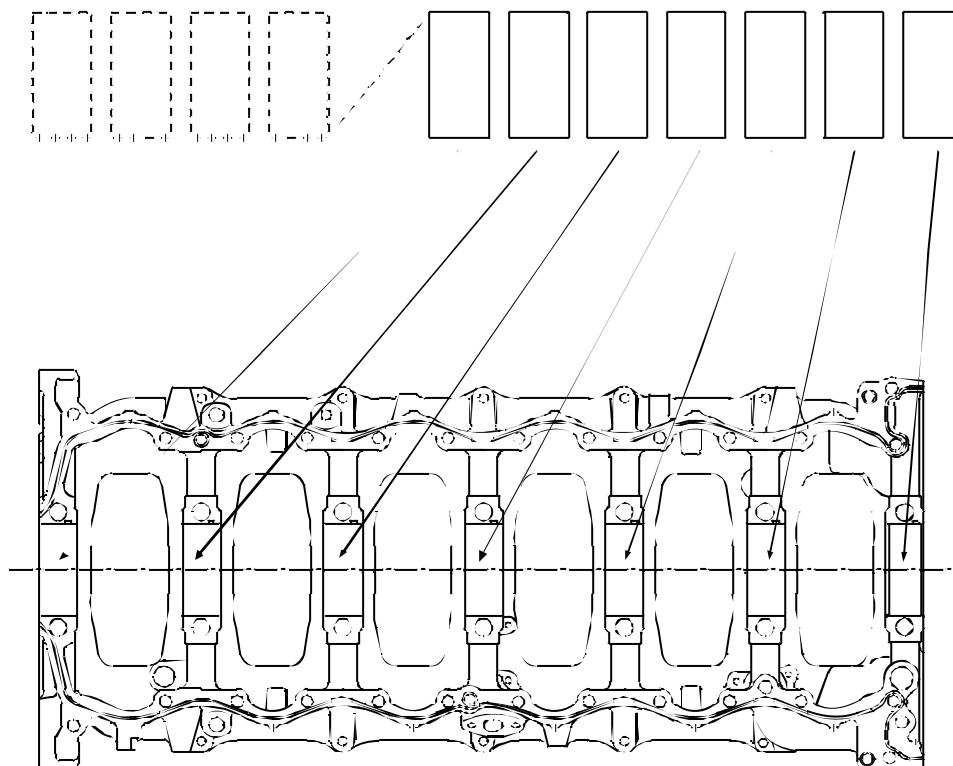

Aquila Trucks Centres

Selecting the main and big end bearing shells


NOTE To obtain the required assembly clearances, the main and big end bearing shells need to be selected as described hereunder.


This operation makes it possible to identify the most suitable bearing shells for each of the journals (the bearing shells, if necessary, can have different classes from one journal to another).


Depending on the thickness, the bearing shells are selected in classes of tolerance marked by a coloured sign (red-green – red/black – green/black).

The following tables give the specifications of the main and big end bearing shells available as spares in the standard sizes (STD) and in the permissible oversizes (+0.127, +0.254, +0.508).

Figure 73

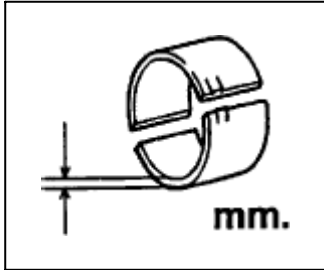	STD	+0.127	+0.254	+0.508	
red	2.000 to 2.010		2.127 to 2.137	2.254 to 2.264	
red/black		2.063 to 2.073			
green	2.011 to 2.020		2.138 to 2.147	2.265 to 2.274	
green/black		2.074 to 2.083			
yellow*	2.021 to 2.030				
yellow/black*		2.084 to 2.093			

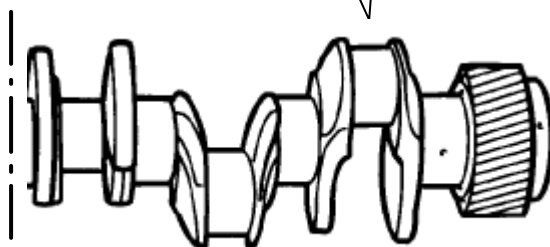

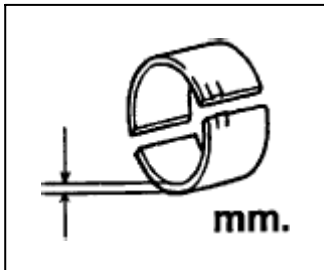	STD	+0.127	+0.254	+0.508	
red	3.000 to 3.010		3.127 to 3.137	3.254 to 3.264	
red/black		3.063 to 3.073			
green	3.011 to 3.020				
green/black		3.074 to 3.083			
yellow*	3.021 to 3.030				
yellow/black*		3.084 to 3.093			

* Fitted in production only and not supplied as spares

Aquila Trucks Centres


DEFINING THE CLASS OF DIAMETER OF THE MAIN JOURNALS AND CRANKPINS (Journals with nominal diameter)

Main journals and crankpins: determining the class of diameter of the journals.

Three sets of numbers are marked on the crankshaft in the position shown by the arrow (Figure 74 at top):

- The first number, of five digits, is the part number of the shaft.
- Under this number, on the left, a set of six digits refers to the crankpins and is preceded by a single digit showing the status of the journals (1 = STD, 2 = -0.127), the other six digits, taken singly, give the class of diameter of each of the crankpins they refer to (Figure 74 at top).
- The set of seven digits, on the right, refers to the main journals and is preceded by a single digit: the single digit shows the status of the journals (1 = STD, 2 = -0.127), the other seven digits, taken singly, give the class of diameter of each of the main journals they refer to (Figure 74 at bottom).

Figure 74

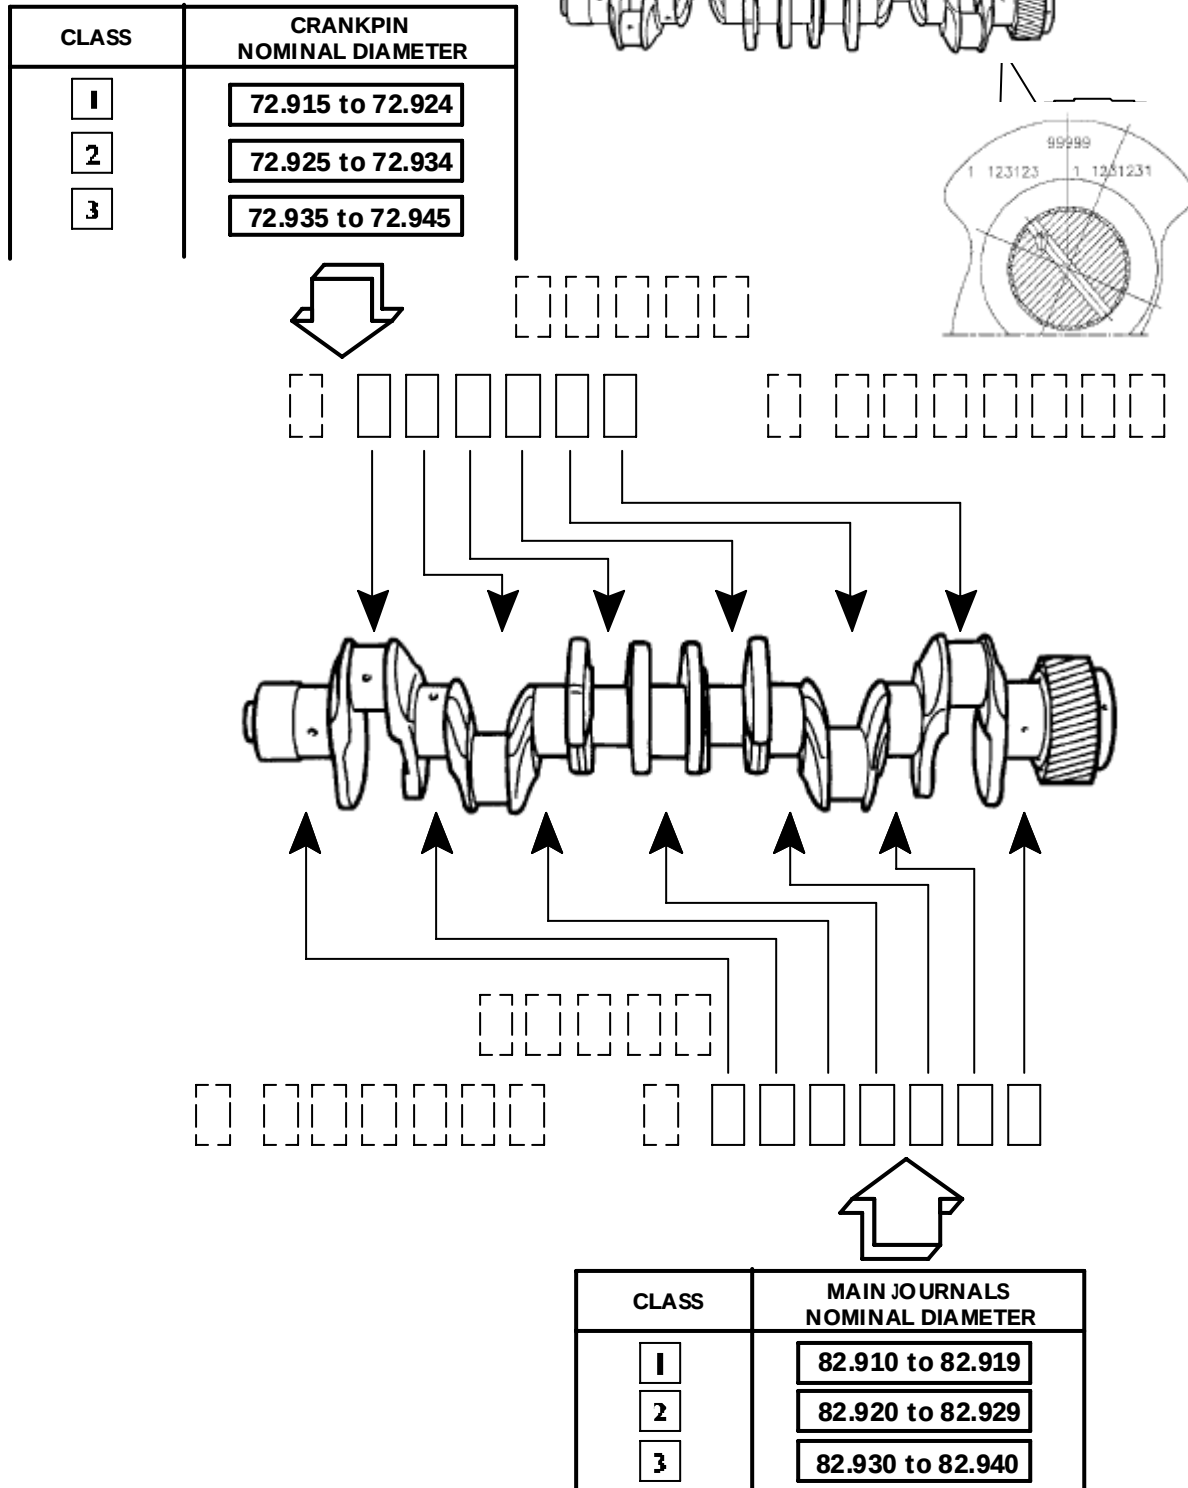


Aquila Trucks Centres

Selection of main half-bearings (nominal diameter pins)

After detecting, for each journal, the necessary data on block and crankshaft, select the type of half-bearings to be used, in compliance with the following table:

Figure 75

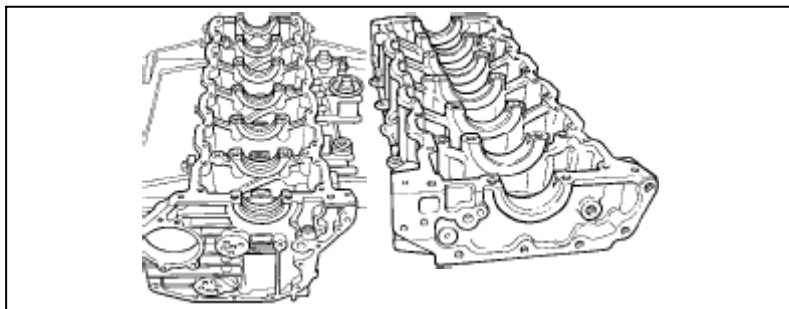STD.**1****2****3****1**

green

green

green

green

green

green

2

red

green

green

red

green

green

3

red


red

red

red

red

red

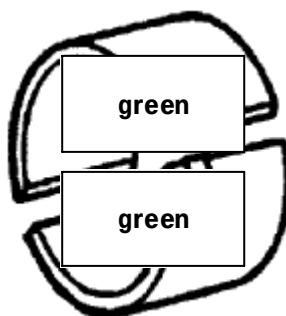

Aquila Trucks Centres

Selection of main half-bearings (rectified pins)


If the journals have been rectified, the procedure described cannot be applied.

In this case, make sure that the new diameter of the journals is as specified on the table and install the only half-bearing type required for this undersizing.

Figure 76

red/black =
mm 3.063 to 3.073

green/black =
mm 3.073 to 3.084

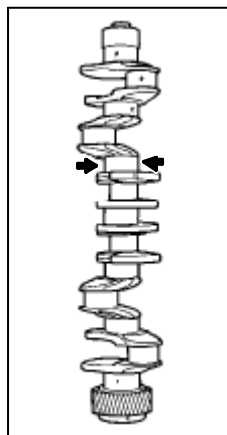-0.127

82.784
82.793

1

green/black

green/black

82.794
82.803

2

red/black


red/black

82.804
82.814

3

red/black

red/black

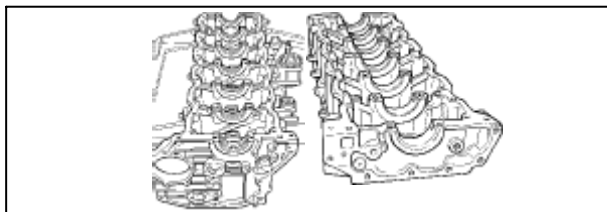**1****2****3**

green/black

green/black

green/black

green/black

green/black

green/black

green /black

green/black

red/black


red/black

red/black

red/black

-0.254

red =
mm 3.127 to 3.137

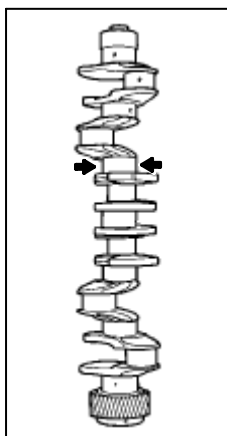

82,666
82,686

1**2****3**

red


red

red


red

red

red

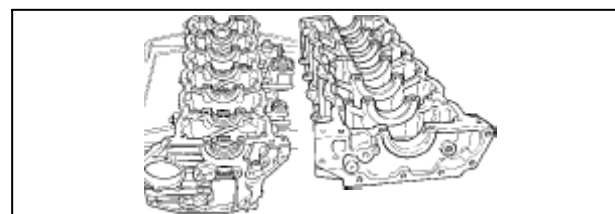**-0.508**

red =
mm 3.254 to 3.264

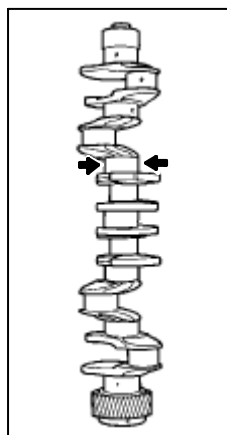

82.412
82.432

1**2****3**

red


red

red

red

red

red

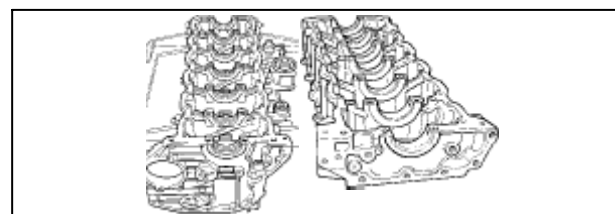

Aquila Trucks Centres

SELECTING THE BIG END BEARING SHELLS
(JOURNALS WITH NOMINAL DIAMETER)

There are three markings on the body of the connecting rod in the position shown in the view from "A":

- 1 Letter indicating the class of weight:
 - A = 2865 to 2895 g.
 - B = 2896 to 2925 g.
 - C = 2926 to 2955 g.
- 2 Number indicating the selection of the diameter of the big end bearing seat:
 - 1 = 77.000 to 77.010 mm
 - 2 = 77.011 to 77.020 mm
 - 3 = 77.021 to 77.030 mm
- 3 Numbers identifying the cap-connecting rod coupling.

The number, indicating the class of diameter of the bearing shell seat may be **1, 2** or **3**.

Determine the type of big end bearing to fit on each journal by following the indications in the table (Figure 78).

Figure 77

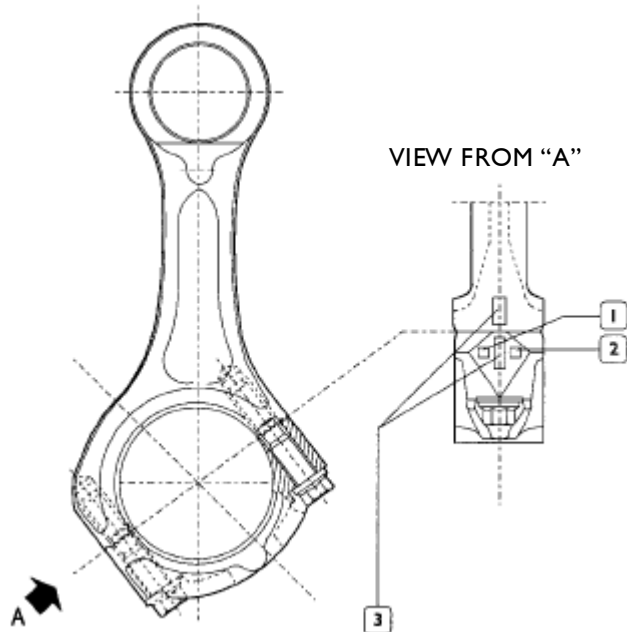
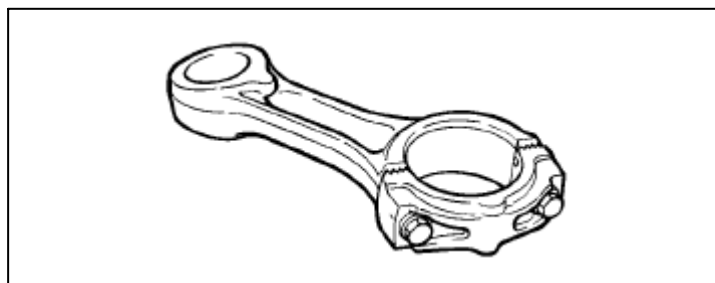


Figure 78

STD.

Class	1	2	3
1	green	green	green
	green	green	green
2	red	green	green
	red	green	green
3	red	red	red
	red	red	red

Aquila Trucks Centres

Selection of connecting rod half-bearings (rectified pins)


If pins have been rectified, the procedure described must be applied.

In this case, (for each undersizing) determine the tolerance field the new big end pins belong to, and install the half-bearings identified according to the relative table.

Figure 79

red/black =
mm 2.074 to 2.083

green/black =
mm 2.063 to 2.073

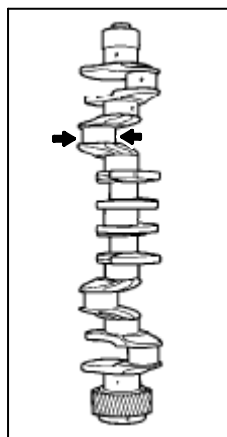-0.127

72.789
72.798

1

green/black

green/black

72.799
72.808

2

red/black

red/black

72.809
72.818

3

red/black

red/black

1**2****3**

green/black

green/black

green/black

green/black

green/black

green/black

green /black


green/black

red/black

red/black

green/black

green/black

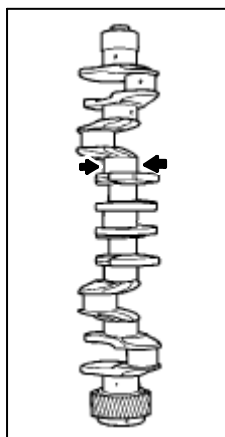**-0.254**

red
mm 2.127 to 2.137
green =
mm 2.138 to 2.147

72.671
72.680

1

red

red

2

green

green

3

green

green

72.681
72.691

red



red

red

red

green

green

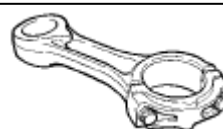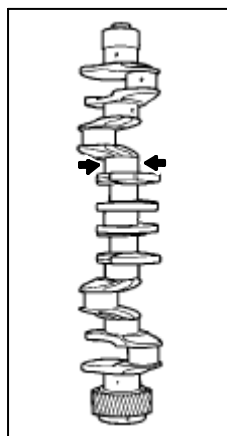**-0.508**

red =
mm 2.254 to 2.264
green =
mm 2.265 to 2.274

72.417
72.426

1

red

red

2

green

green

3

green

green

72.427
72.437

red


red

red

red

green

green

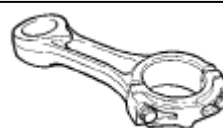


Aquila Trucks Centres

540815 Replacing the valve drive gear and the oil pump drive gear

Check that the teeth of the gears are not damaged or worn, otherwise remove them using the appropriate extractor.

Figure 80

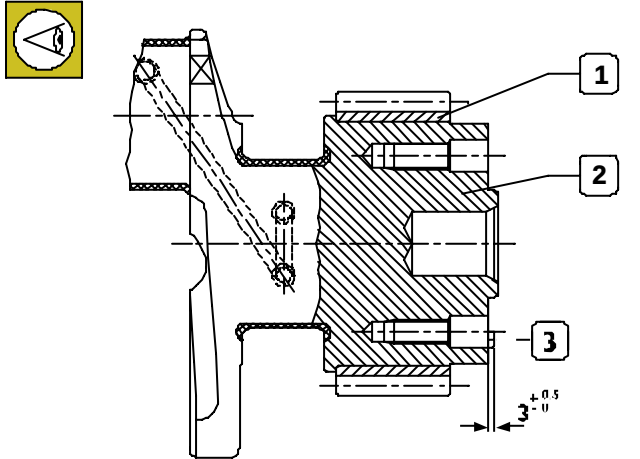

49020


After fitting the gear (1) on the crankshaft (2), heat it for ~15 minutes in an oven at temperature not higher than 180°C.

Let them cool down after the installation.

If changing the pin (3), after fitting it on, check it protrudes from the crankshaft as shown in the figure.

540811 Checking main journal installation clearance

Figure 81

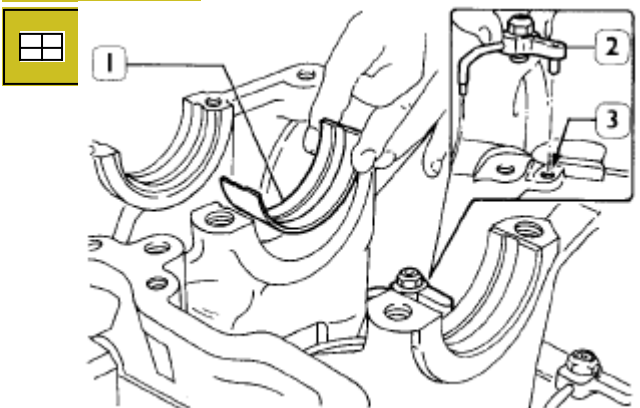


47579

Install the oil spray nozzles (2) and have the dowel coincide with the block hole (3).

Install the half-bearings (1) on the main bearings.


Figure 82

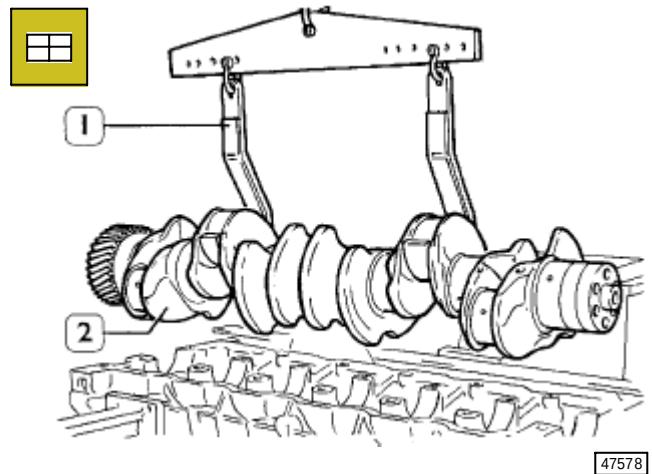

47578

Using the hoist and hook 99360500 (1) mount the crankshaft (2).

Figure 83

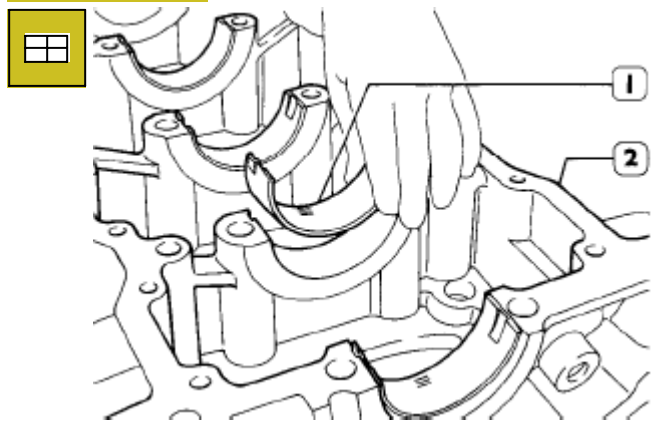


49021

Install the half-bearings (1) on the main bearings in the lower crankcase (2).

Check the installation clearance between the main journals and the relative bearings as follows:

Aquila Trucks Centres


Figure 84

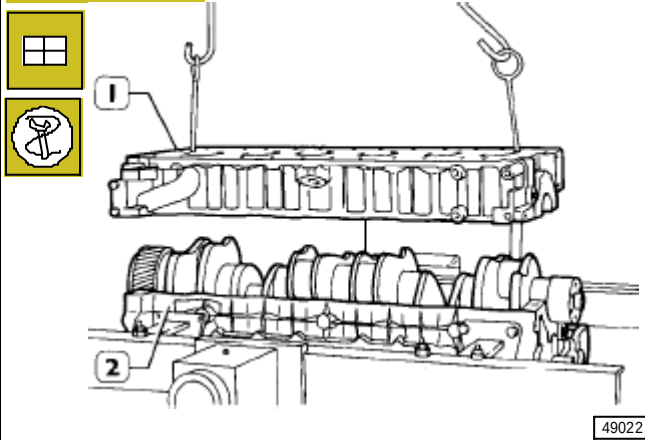

49022

Place a piece of calibrated wire on the journal of the crankshaft (2), parallel to the longitudinal axis; install the lower crankcase (1), by hoist and appropriate hooks.


Figure 85

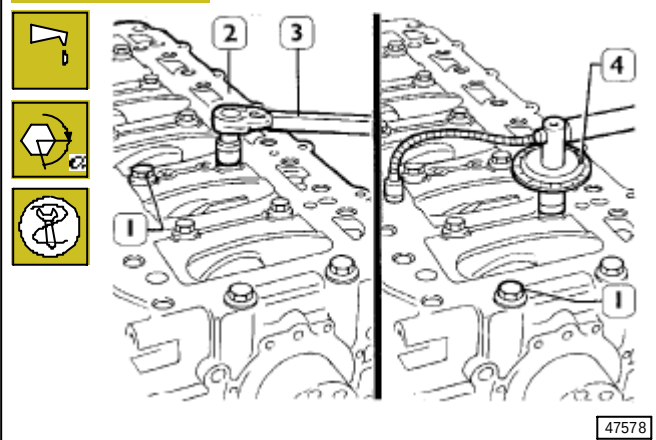

47578

- Lubricate inside screws (1) con UTD oil, and tighten them by torque wrench to 140 Nm torque, thus with 60° angle closing, following the diagram in Figure 86.


Figure 86

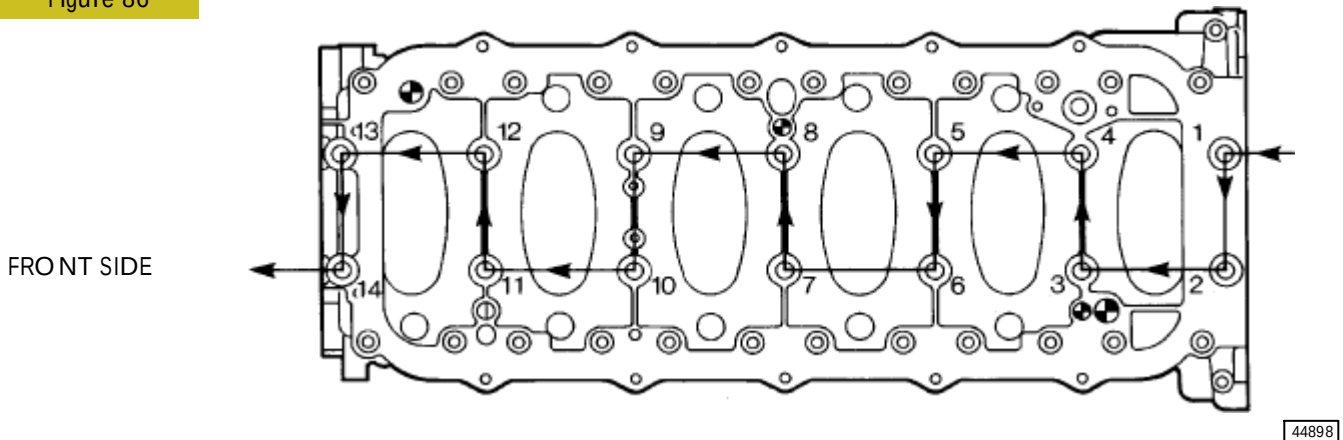

44898

Diagram showing the tightening order of the screws fixing the lower crankcase to the block

Figure 87

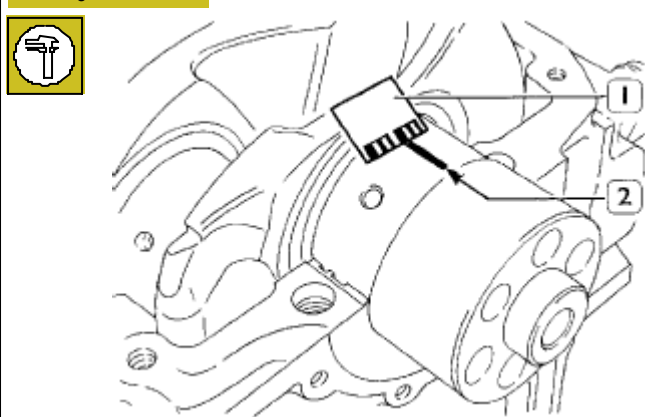


47579

- Remove the lower crankcase

The clearance between the main bearings and the journals is obtained by comparing the calibrated wire length (2) at the maximum deflection point, with the calibrated scale on the coating (1) containing the calibrated wire (1). Numbers shown on the scale specify the clearance in coupling millimeters. If the clearance obtained is different from the clearance required, replace the half-bearings and repeat this check.

Checking crankshaft end float

Figure 88

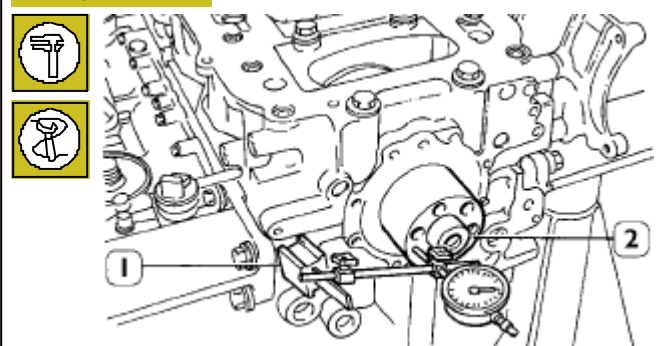


47588

End float is checked by placing a magnetic dial gauge (1) on the crankshaft (2), as shown in the figure. If the value obtained is higher than specified, replace the rear thrust half-bearings and repeat this check.

Aquila Trucks Centres

5408 PISTON-CONNECTING ROD ASSEMBLY

Figure 89

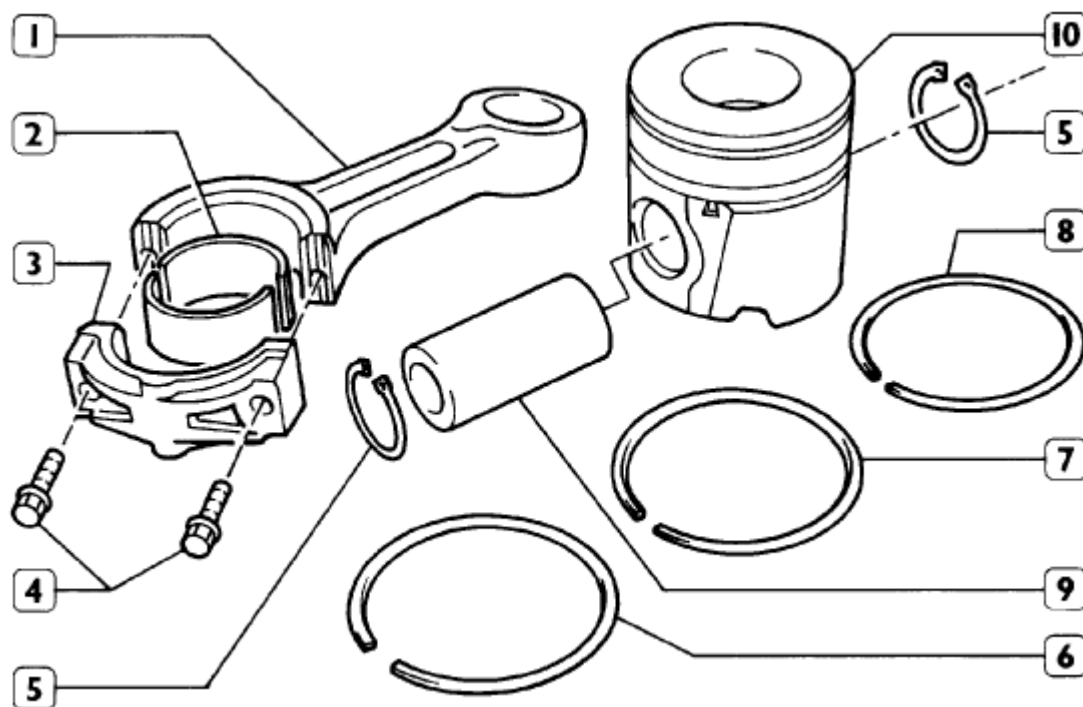

47580


PISTON CONNECTING ROD ASSEMBLY

1. Connecting rod body - 2. Half bearings - 3. Connecting rod cap - 4. Cap fastening screws - 5. Seeger ring - 6. Slotted oil control ring - 7. Scraper ring - 8. Compression ring - 9. Gudgeon pin - 10. Piston

Make sure the piston does not show any trace of seizing, scoring, cracking; replace as necessary.

Removal


Figure 90

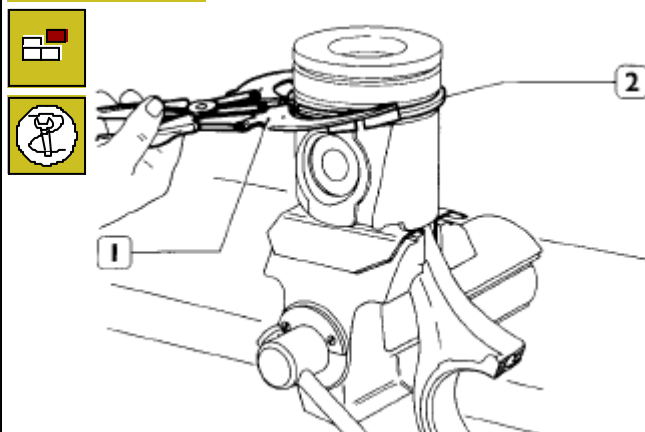

49023

Removal of the piston rings (2) using the pliers 99360184 (1).

Figure 91

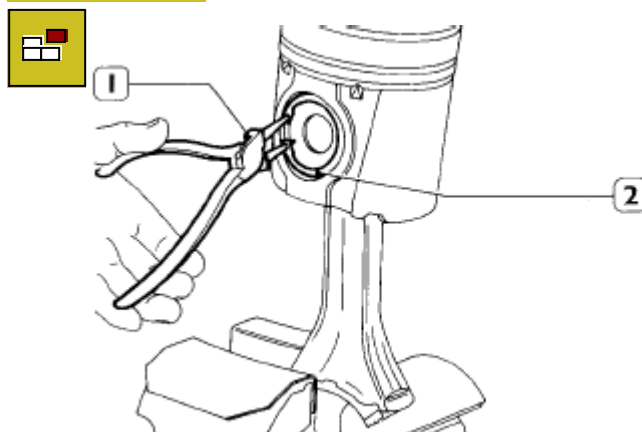


49024

Remove the piston pin seeger rings (2) using the round tipped pliers (1).

Aquila Trucks Centres

Figure 92

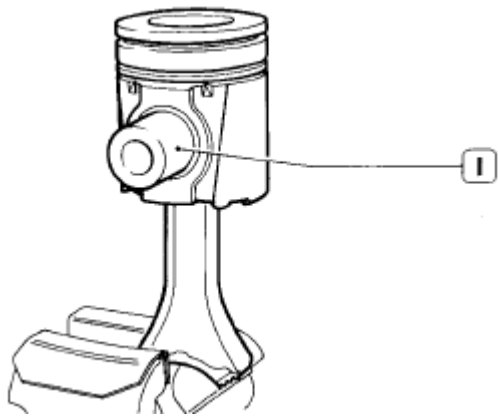


49025

Remove the gudgeon pin (1).
If removal is difficult use the appropriate beater.

Measuring the diameter of the pistons


Figure 93

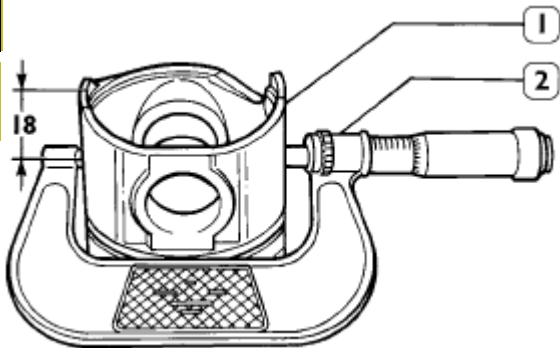

47584

Using a micrometer (2), measure the diameter of the piston (1) to determine the assembly clearance; the diameter should be measured at the specified value.

Figure 94

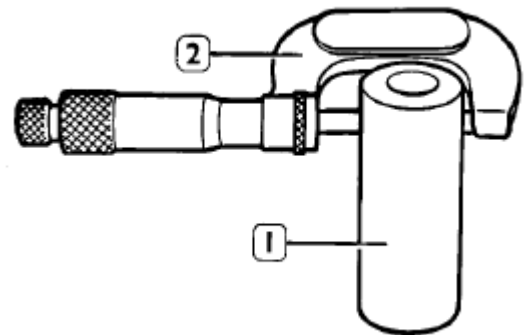

32618

Measuring the gudgeon pin diameter (1) with a micrometer (2).

Conditions for correct gudgeon pin/piston coupling

Figure 95




49026

Lubricate the pin (1) and the relevant housing on the piston hubs with engine oil; piston must be inserted with a slight finger pressure and it should not come out by gravity.

Aquila Trucks Centres

Figure 96

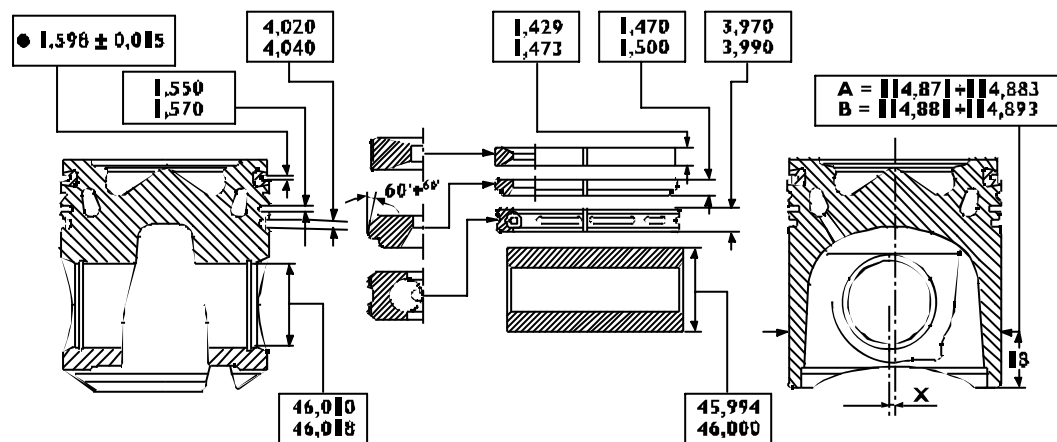

109108


MAIN DATA OF PISTON, RINGS AND PIN

$X = 0,6 \pm 0,15 \text{ mm}$

- The dimension is measured on a $\varnothing 111 \text{ mm}$

540842 Piston rings


Figure 97

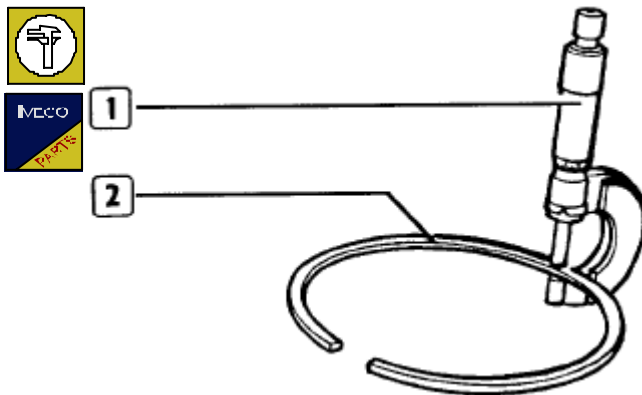

16552

Check the thickness of the piston ring (2) using a micrometer (1).


Figure 98

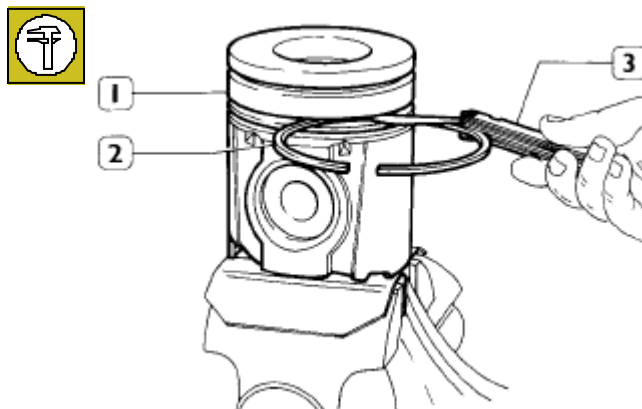

16552

Check the clearance between the rings (2) and the relative piston housings (1) using a filler gauge (3).


Figure 99

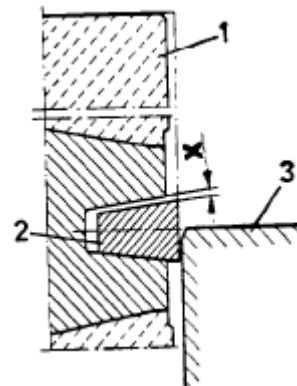

3513

The compression ring (2) of the 1° cavity is trapezoidal. Clearance "X" between the sealing ring and its housing is measured by placing the piston (1) with its ring in the cylinder liner (3), so that the sealing ring is half-projected out of the cylinder liner.

Figure 100

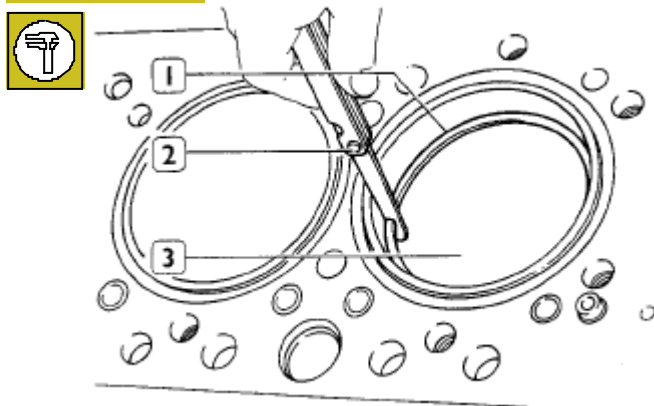

Check the gap between the ends of the sealing rings (1), using a filler gauge (2), entered in the cylinder liner (3). If the distance between ends is lower or higher than the value required, replace the rings.

Aquila Trucks Centres

540830 CONNECTING ROD

Figure 101


Data concerning the class section of connecting rod housing and weight are stamped on the big end.



When installing connecting rods, make sure they all belong to the same weight class.


CONNECTING ROD MARKS

- 1 Letter indicating the weight class:
 - A = 2865 to 2895 g.
 - B = 2896 to 2925 g.
 - C = 2926 to 2955 g.
- 2 Number indicating the selection of diameter for the big end bearing housing:
 - 1 = 77.000 to 77.010 mm
 - 2 = 77.011 to 77.020 mm
 - 3 = 77.021 to 77.030 mm
- 3 Numbers identifying cap-connecting rod coupling

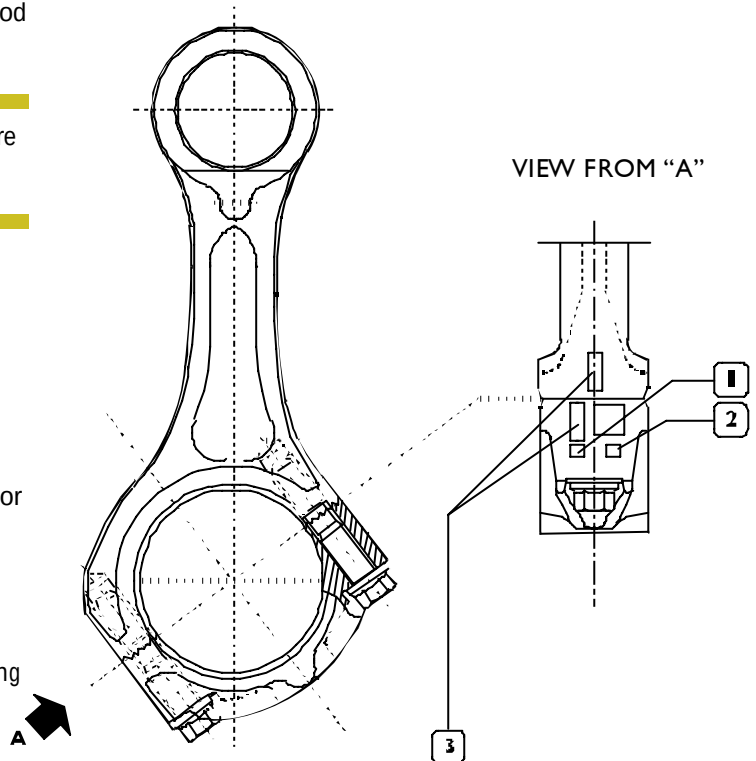

117178

Figure 102

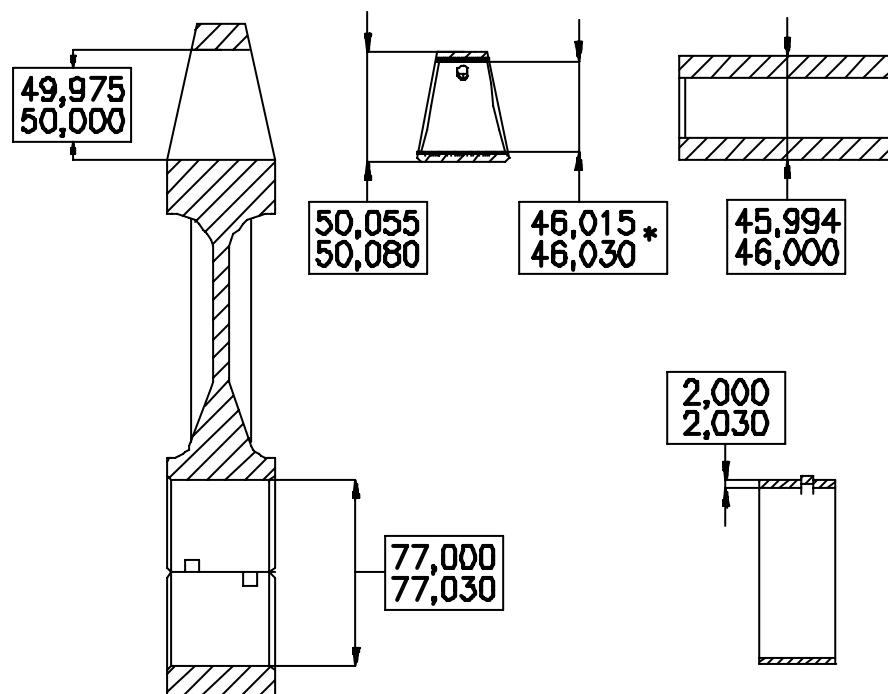

44927


MAIN DATA - BUSH, CONNECTING ROD, PIN AND HALF-BEARINGS

* Values to be obtained after installing the bush

Aquila Trucks Centres

Checking connecting rod squareness

Figure 103 (Demonstration)

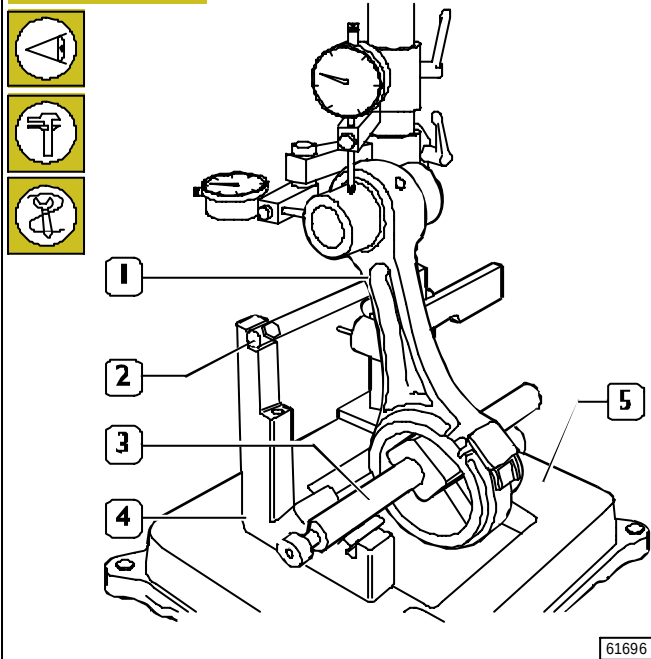


Checking axis alignment

Check the alignment of the axes of the connecting rods (1) using a suitable device (5), proceeding as follows:

- Fit the connecting rod (1) on the spindle of the tool (5) and lock it with the screw (4).
- Set the spindle (3) on the V-prisms, resting the connecting rod (1) on the stop bar (2).

Checking torsion

Figure 104 (Demonstration)

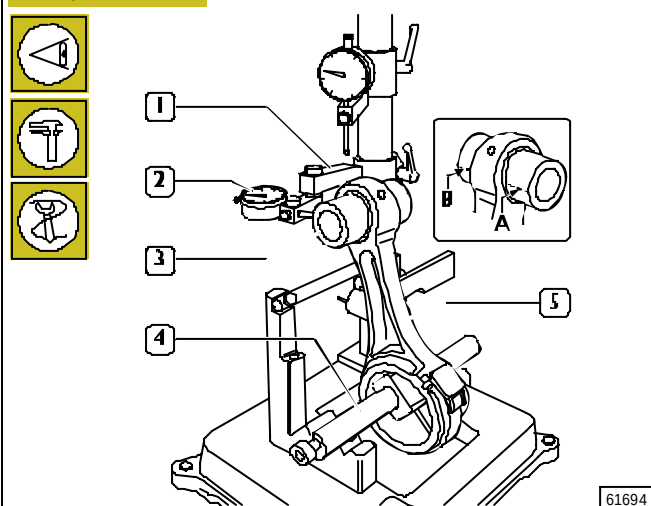


Check the torsion of the connecting rod (5) by comparing two points (A and B) of the pin (3) on the horizontal plane of the axis of the connecting rod.

Position the mount (1) of the dial gauge (2) so that this pre-loads by approx. 0.5 mm on the pin (3) at point A and zero the dial gauge (2). Shift the spindle (4) with the connecting rod (5) and compare any deviation on the opposite side B of the pin (3): the difference between A and B must be no greater than 0.08 mm.

Checking bending

Figure 105 (Demonstration)

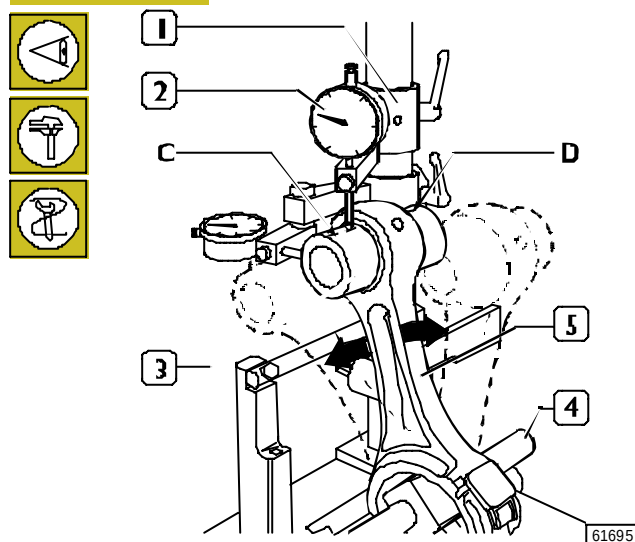

Check the bending of the connecting rod (5) by comparing two points C and D of the pin (3) on the vertical plane of the axis of the connecting rod.

Position the vertical mount (1) of the dial gauge (2) so that this rests on the pin (3) at point C.

Swing the connecting rod backwards and forwards seeking the highest position of the pin and in this condition zero the dial gauge (2).

Shift the spindle (4) with the connecting rod (5) and repeat the check on the highest point on the opposite side D of the pin (3). The difference between point C and point D must be no greater than 0.08 mm.


Fitting the connecting rod - piston assembly

Carry out the steps for removal described on pages 68 and 69 in reverse order.

NOTE The connecting rod screws can be reused as long as the diameter of the thread is not less than 13.4 mm.

Fitting the piston rings

Figure 106

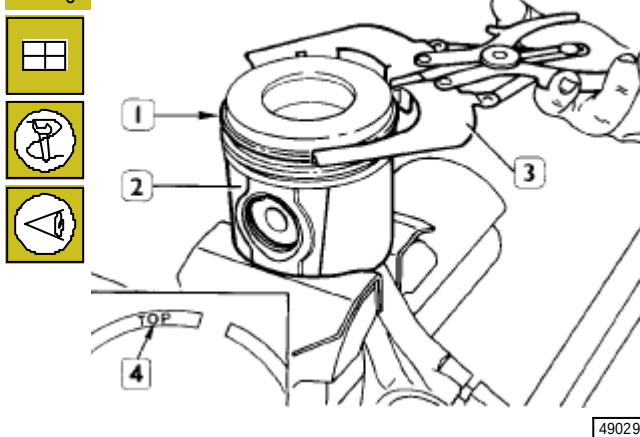


To fit the piston rings (1) on the piston (2) use the pliers 99360184 (3).

The rings need to be mounted with the word "TOP" (4) facing upwards. Direct the ring openings so they are staggered 120° apart.

Aquila Trucks Centres

Fitting the connecting rod-piston assembly into the cylinder liners

Figure 107

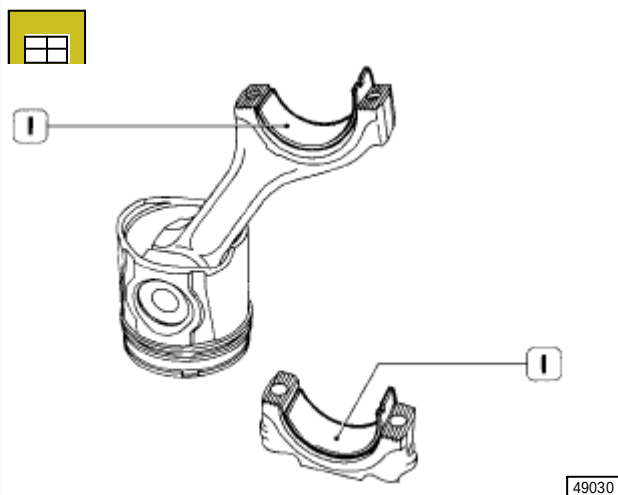

49030

Fit the half-bearings (1), selected as described on pages 59 to 65, both on the connecting rod and on the stand.

NOTE As spares, class A pistons are provided and can be fitted also to cylinder liners belonging to class B.

Fit the connecting rod-piston assemblies (1) into the cylinder liners (2) using band 99360605 (1, Figure 109). Check the following:

- the rings gaps are offset by 120°;

Figure 108


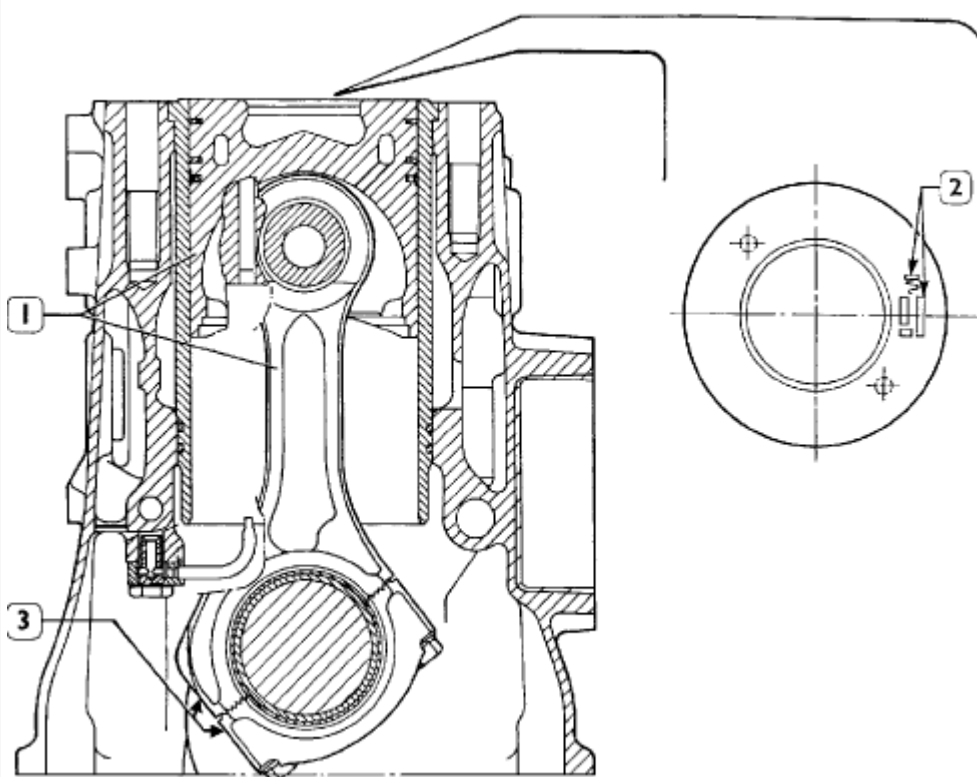


Figure 109



47593

- all pistons belong to the same class, A or B;
- ideogram stamped on the piston crown is placed toward the engine flywheel, or the cavity, on the piston cover, corresponds to the position of the oil spray nozzles.

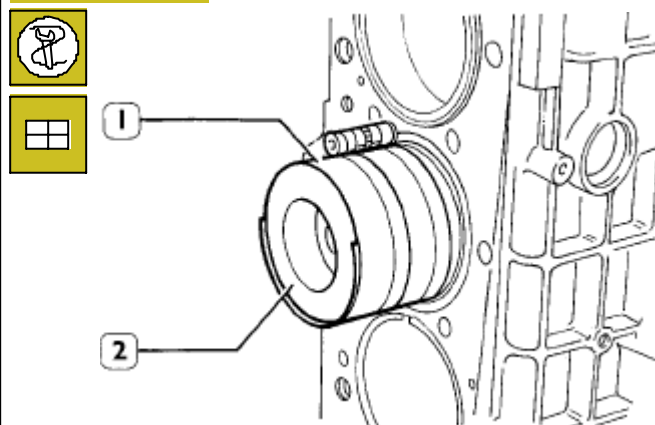

Be very careful that the connecting rod does not strike the cylinder walls.

Piston protrusion check

Once assembly is complete, check piston protrusion from cylinder barrels: it must be 0.32-0.69 mm.

d-piston assembly

n the piston crown of ideogram
assembly position and the

d marking area (see Figure 101).


Aquila Trucks Centres

540831 Checking assembly clearance of big end pins

To check the clearance proceed as follows:

Connect the connecting rods to the relative main journals, place a length of calibrated wire on the latter.

Figure 110

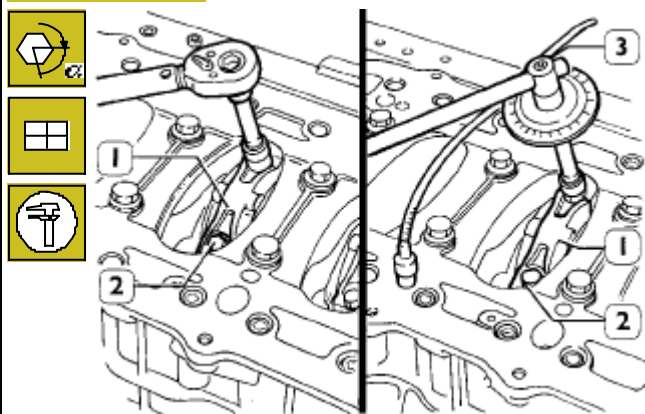

47594

Install the connecting rod caps (1) with half-bearings; tighten the connecting rod cap fixing screws (2) to 50 Nm (5 kgm) torque. By tool 99395216 (3), tighten the screws further at 40° angle.

Remove the caps and check the clearance by comparing the width of the calibrated wire with the scale calibration on the envelope containing the wire.

540610 CYLINDER HEAD

Before dismounting cylinder head, check cylinder head for hydraulic seal by proper tooling; in case of leaks not caused by cup plugs or threaded plugs, replace cylinder head.



When replacing, the cylinder head is supplied as a spare part with a threaded plug, which must be removed during assembly.


NOTE In case of plugs dismounting/replacement, on mounting, apply sealant Loctite 270 on plugs.

Dismounting the valves

NOTE Before dismounting cylinder head valves, number them in view of their remounting in the position observed on dismounting should they not have to be overhauled or replaced.

Intake valves are different from exhaust valves in that they have a notch placed at valve head centre.

Figure 111

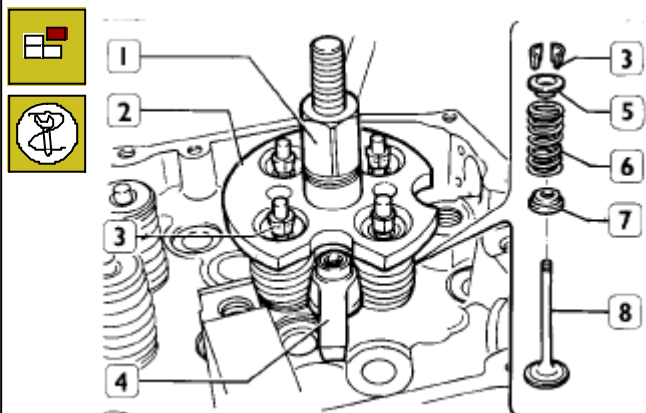


47583

Install and fix tool 99360264 (2) with bracket (4); tighten by lever (1) until cotters are removed (3); remove the tool (2) and the upper plate (5), the spring (6) and the lower plate (7). Repeat the operation on all the valves. Turn the cylinder head upside down and remove the valves (8).

Checking the planarity of the head on the cylinder block

Figure 112

(Demonstration)

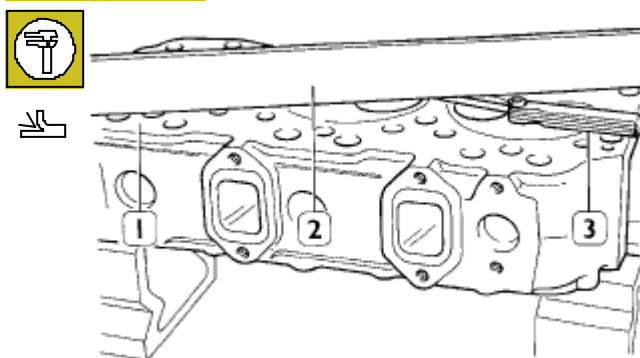

36159

The planarity (1) is checked using a ruler (2) and a feeler gauge (3). If deformations exist, surface the head using proper surface grinder; the maximum amount of material to be removed is 0.2 mm.


NOTE After leveling, make sure that valve sinking and injector protrusion are as described in the relative paragraph.

Aquila Trucks Centres

540622 VALVE


Removing dust and checking the valves

Figure 113

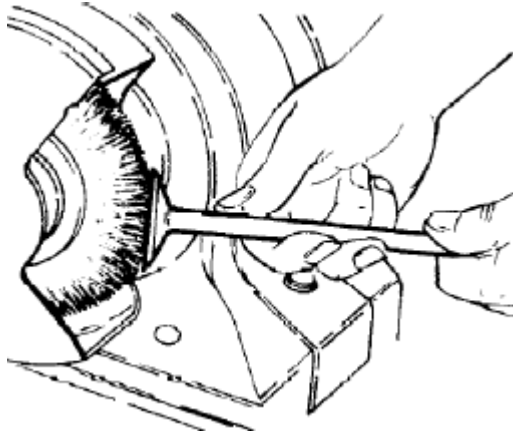

Remove carbon dust using the metal brush supplied. Check that the valves show no signs of seizure or cracking. Check the diameter of the valve stem using a micrometer (see Figure 114) and replace if necessary.

Figure 114

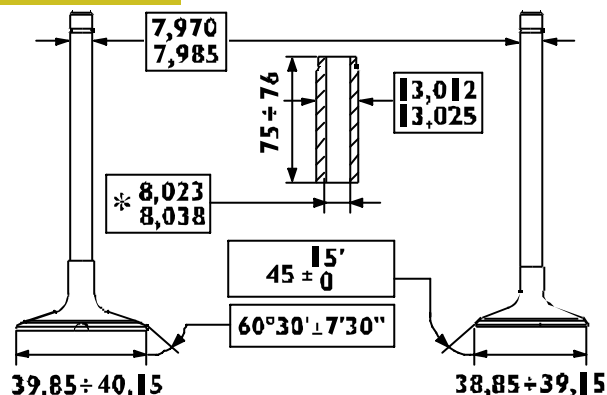

92841


MAIN DATA - VALVES AND VALVE GUIDES

* Values to be obtained after installing the valve guides

Check, by means of a micrometer, that valve stem diameters are as specified; if necessary, grind the valves seat with a grinder, removing the minimum quantity of material.

540667 VALVE GUIDES

Figure 115

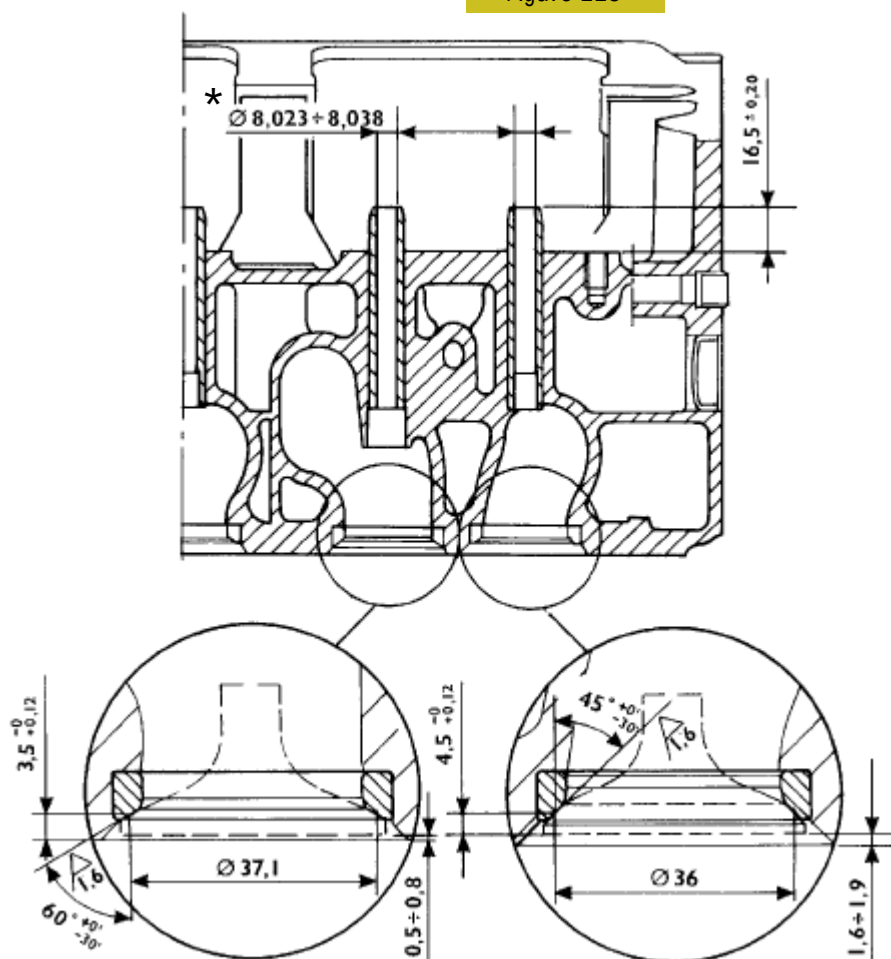

INSTALLATION DIAGRAM FOR VALVE GUIDES AND VALVES

47509

* Values to be obtained after installing the guide valves


Aquila Trucks Centres

540613 REPLACING INJECTOR HOLDERS
Removal**Replacing of valve guides**

Remove valve guides by means of tool 99360288. Install by means of tool 99360288 equipped with part 99360294, which determines the exact installation position of valve guides into the cylinder heads; if they are not available, install the valve guides in the cylinder head so that they project out by mm 16.3 to 16.7 (Figure 114). After installing the valve guides, smooth their holes with sleeker 99390310.

Replacing - Reaming the valve seats

To replace the valve seats, remove them using the appropriate tool.

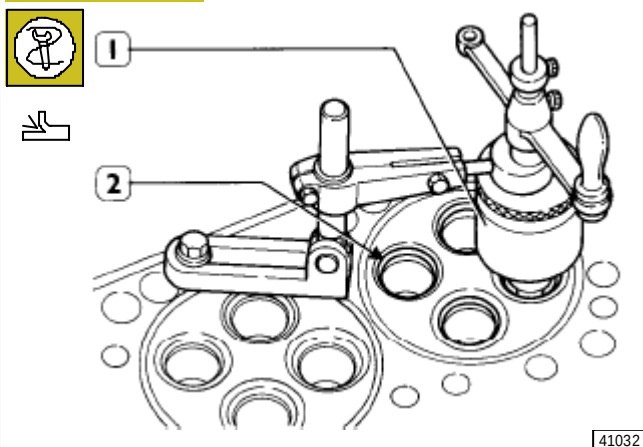
Figure 116 (Demonstration)

Ream the valve seats (2) on cylinder head using a suitable tool (1).

NOTE Valve seats must be reamed whenever valves or valve guides are replaced or ground.

After reaming the valve seats, use tool 99370415, to make sure that the valve position, with respect to the cylinder head surface, is the following:

- -0.5 to -0.8 mm (recessing) of exhaust valves;
- -1.6 to 1.9 mm (recessing) of discharge valves.

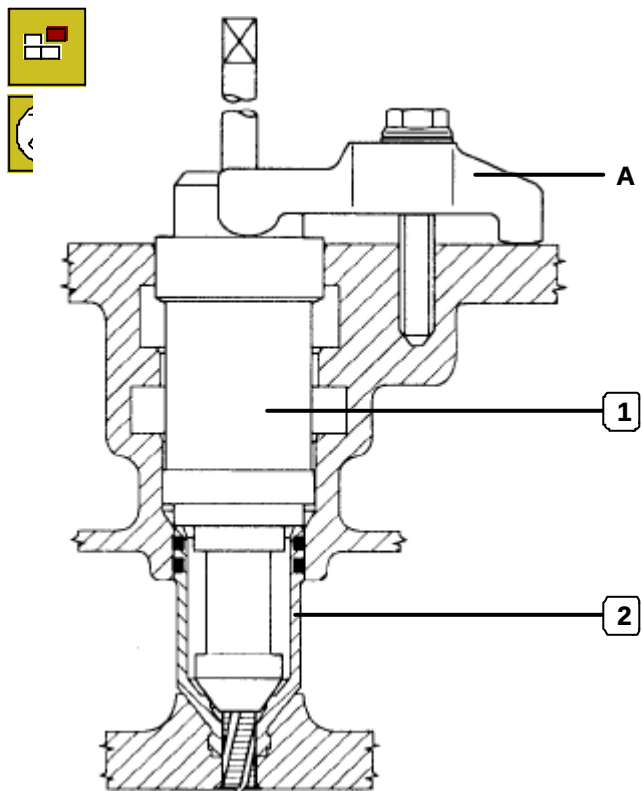Figure 117

45634


To replace the injector holder (2), act as follows:

- thread the holder (2) with tool 99390804 (1).

Carry out operations described in figs. 118-121-122-123 - 124 by fixing tools to the cylinder head by means of bracket A.

Aquila Trucks Centres


Figure 118

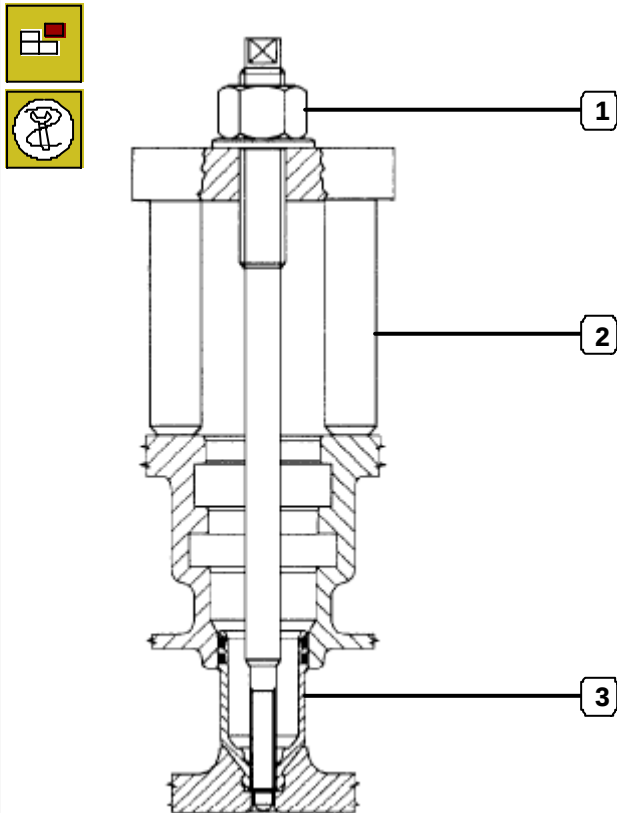

45631

- fasten extractor 99342149 (2) to case (3), by tightening the nut (1), and pull out the case from cylinder head.


Figure 119

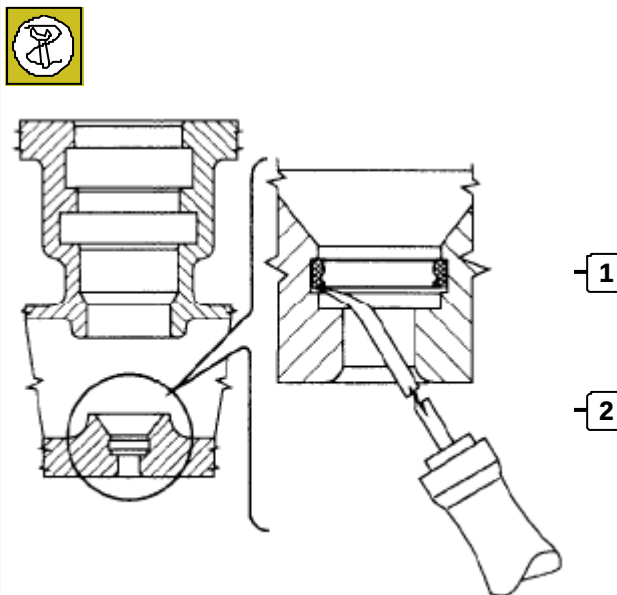

45633

- Remove any residue (1), with tool 99390772 (2), from the cylinder head groove.


Figure 120

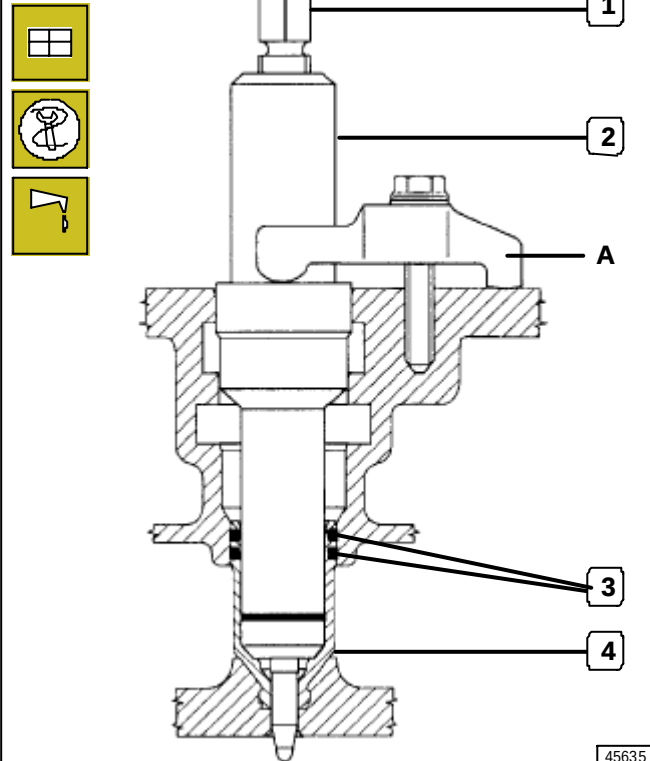

45635

- Lubricate sealing rings (3) and fit them to the case (4); fix tool 99360554 (2) to the cylinder head by means of bracket A, install the new case, tighten the screw (1), upsetting the case lower part.

Figure 121

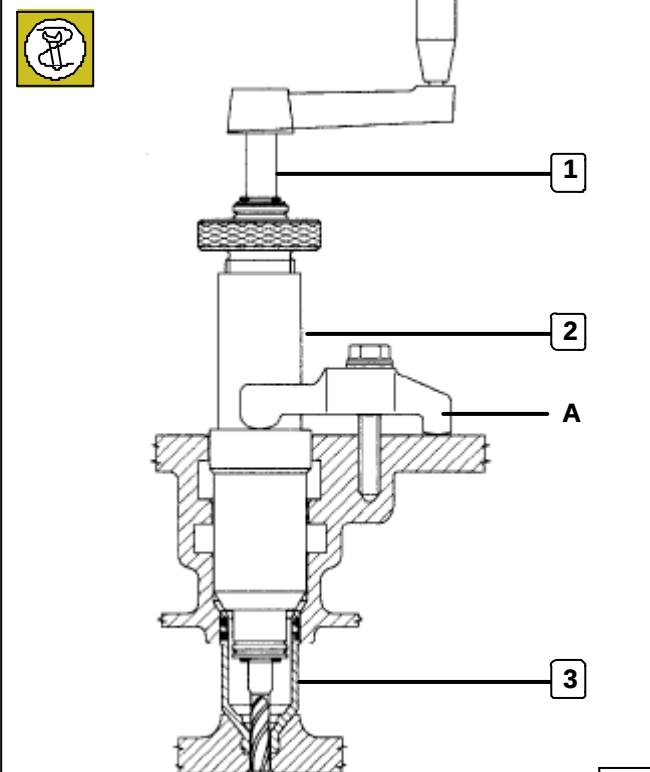


45632

- Adjust the casing hole (3) with borer 99394043 (1) and guide bushing 99394014 (2).

Aquila Trucks Centres

Figure 122

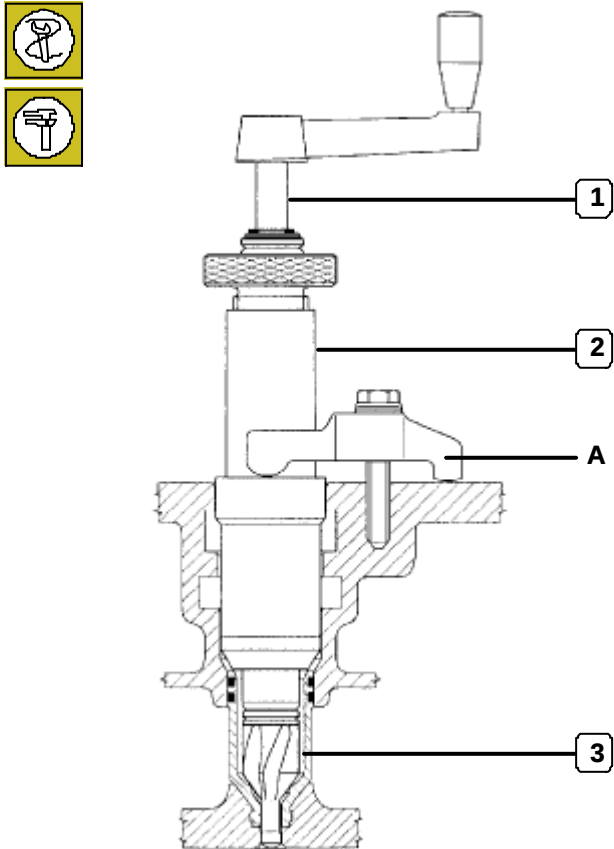


45636

- Through miller 99394041 (1) and bushing 99394014 (2), ream the injector seat in the holder (3), check the injector protrusion from the cylinder head plane which must be 0.7 mm.

Checking protrusion of injectors


Figure 123

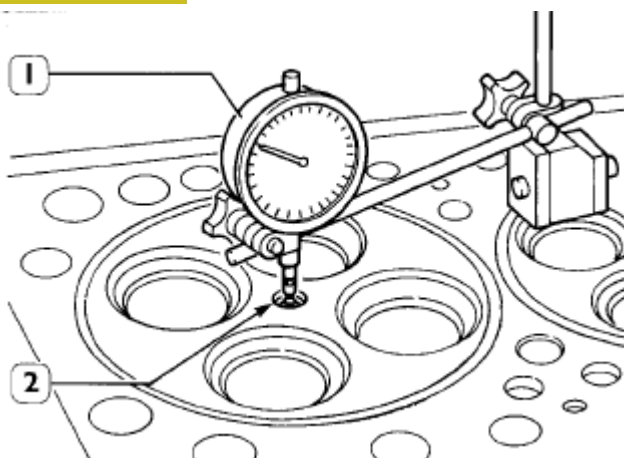

47585

Using dial gauge (1), check the protrusion of the injector (2) which must be 0.7 mm.


Figure 124

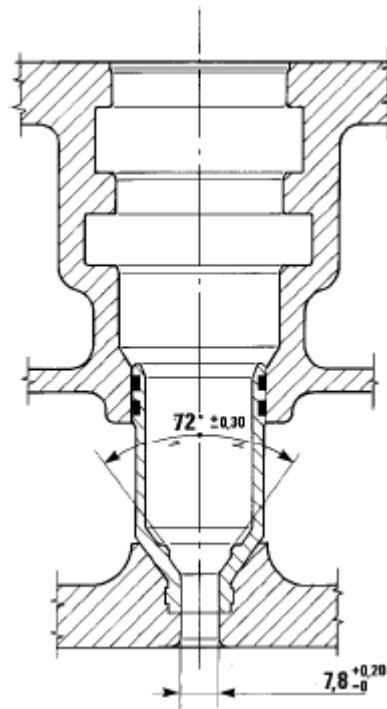

44909


INSTALLATION DIAGRAM FOR
INJECTOR HOLDER

Aquila Trucks Centres

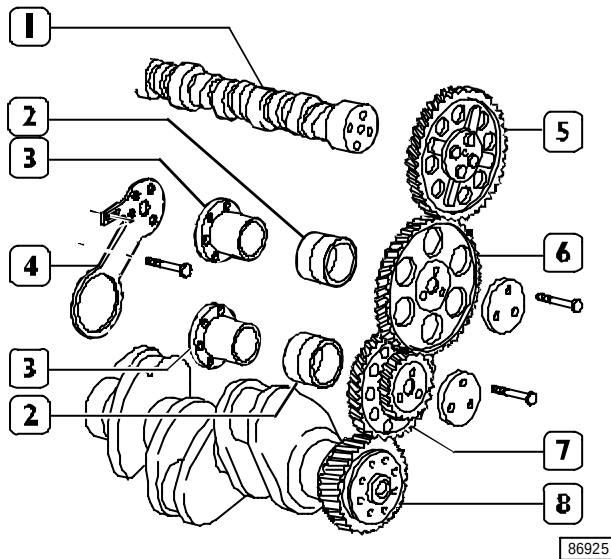5412 TIMING GEAR**Camshaft drive****Figure 125****TIMING CONTROL COMPONENT PARTS**


1. Camshaft - 2. Bushing - 3. Pin - 4. Articulated rod -
5. Camshaft control gear - 6. Idler gear - 7. Twin idler gear
- 8. Drive shaft driving gear.

86925

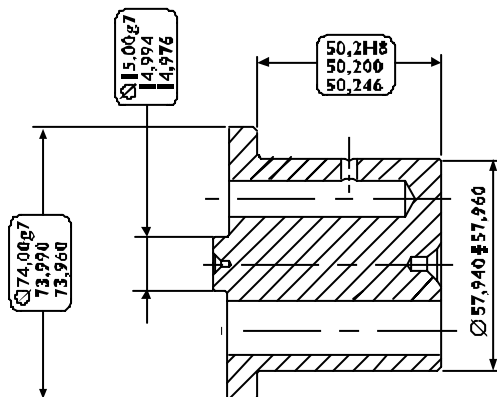
541253 Intermediate gear pin**Figure 126**

86926

Rated assembling play between idler gear bushings and pins:
0.040 ÷ 0.080 mm.

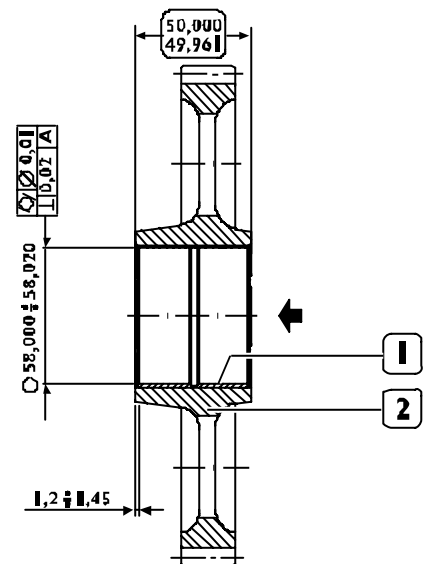541252 Idler gear**Figure 127**

86927

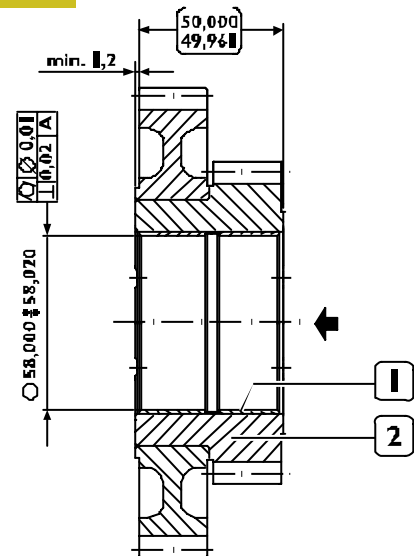541252 Twin idler gear**Figure 128**

86928

541254 Replacing the bushings


Bushings (1, Figures 128 - 129) can be replaced when they are worn. Put up the bushing, then grind it so as to bring it to a dimension of $\varnothing 58.010 \pm 0.10$ mm.

NOTE Bushings must be forced into gears (2, Figures 128 - 129) by following the direction of the arrow: they must be positioned at the level shown in the figures.

Aquila Trucks Centres

541210 Camshaft**541211 Checking cam lift and pin alignment**


Figure 129

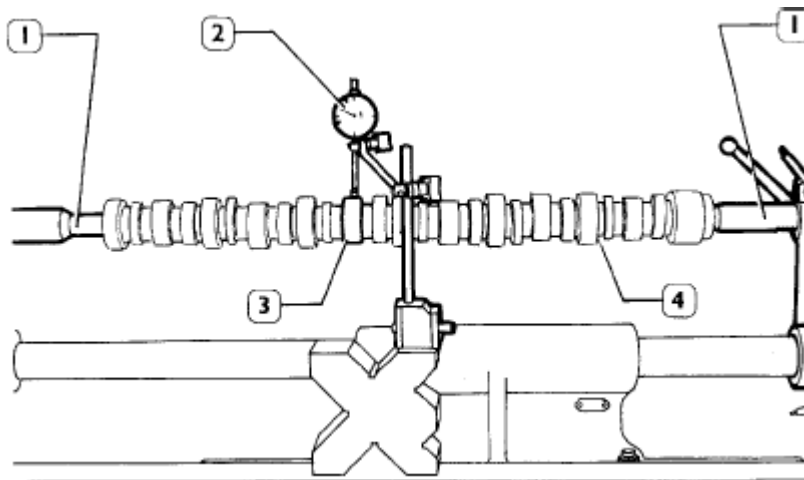

47506

Place the camshaft (4) on the tailstock (1) and check cam lift (3) using a centesimal gauge (2); values are shown in table on page 19.


Figure 130

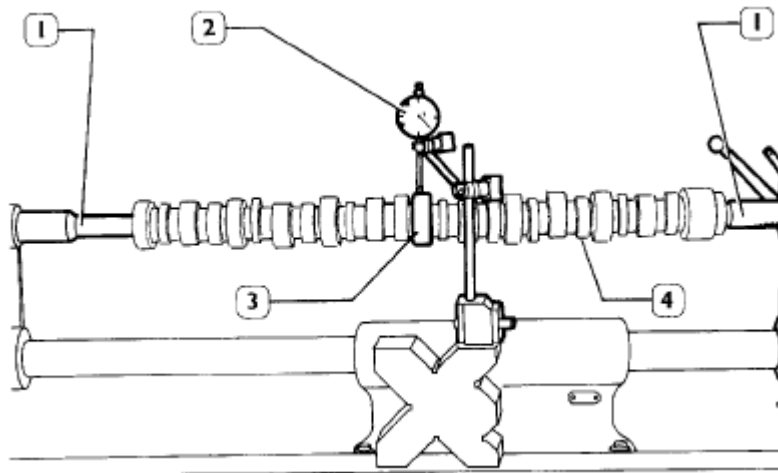

47507

When the camshaft (4) is on the tailstock (1), check alignment of supporting pin (3) using a centesimal gauge (2); it must not exceed 0.030 mm. If misalignment exceeds this value, replace the shaft.

Figure 131

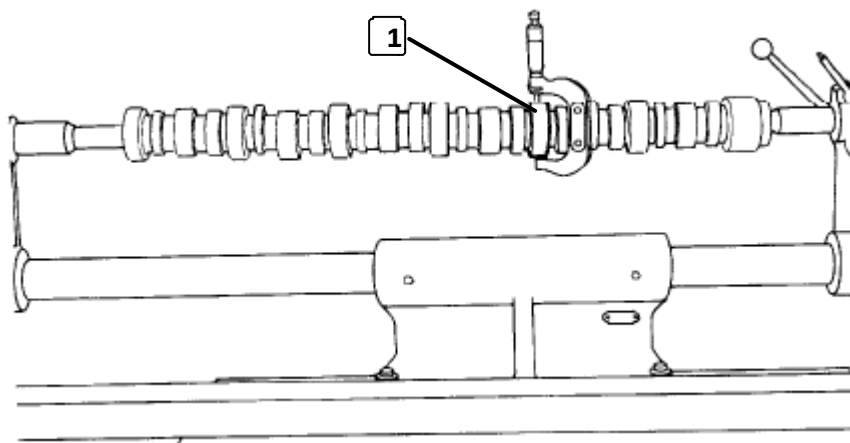

47505

In order to check installation clearance, measure bush inner diameter and camshaft pin (1) diameter; the real clearance is obtained by their difference.

If clearance exceeds 0.150 mm, replace bushes and, if necessary, the camshaft.

Aquila Trucks Centres

Figure 132



47504


MAIN DATA - CAMSHAFT AND TOLERANCES

The surfaces of shaft supporting pin and cams must be extremely smooth; if you see any sign of seizing or scoring, replace the shaft and the relative bushes.

TOLERANCES	TOLERANCE CHARACTERISTIC	SYMBOL
ORIENTATION	Perpendicularity	$\perp$
POSITION	Concentricity or coaxial alignment	$\odot$
OSCILLATION	Circular oscillation	$\nearrow$
IMPORTANCE CLASS ASSIGNED TO PRODUCT CHARACTERISTICS		SYMBOL
CRITICAL		$\oplus$
IMPORTANT		$\ominus$
SECONDARY		$\ominus$

541213 Bushes

Figure 133

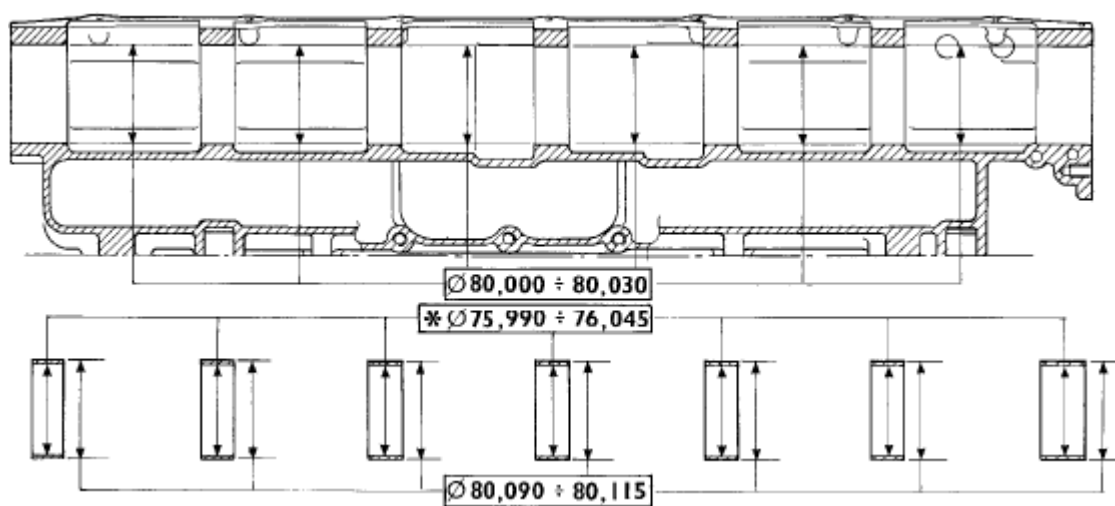

47508

MAIN DATA - CAMSHAFT BUSHES AND RELATIVE BLOCK SEATS

* Bush inner diameter after installation


The bush surfaces must not show any sign of seizing or scoring; if they do replace them.

Measure the bush inner diameters with a baremeter and replace them, if the value measured exceeds the tolerance value. To take down and fit back the bushes, use the proper tool 99360487.

Aquila Trucks Centres

541213 Replacing camshaft bushes using beater 99360487

Figure 134

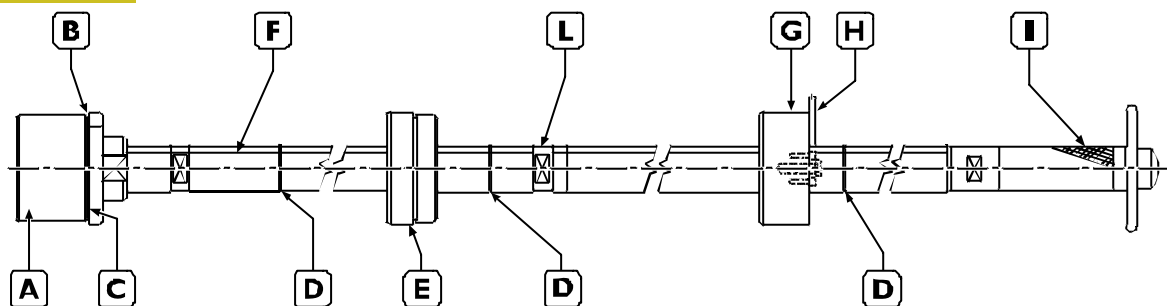


107217

A. Drift with seat for bushings to insert/extract. - B. Grub screw for positioning bushings. - C. Reference mark to insert seventh bushing correctly. - D. Reference mark to insert bushings 1, 2, 3, 4, 5, 6 correctly (red marks). - E. Guide bushing. - F. Guide line. - G. Guide bushing to secure to the seventh bushing mount. - H. Plate fixing yellow bushing to cylinder head. - I. Grip. - L. Extension coupling.

Removal

Figure 135

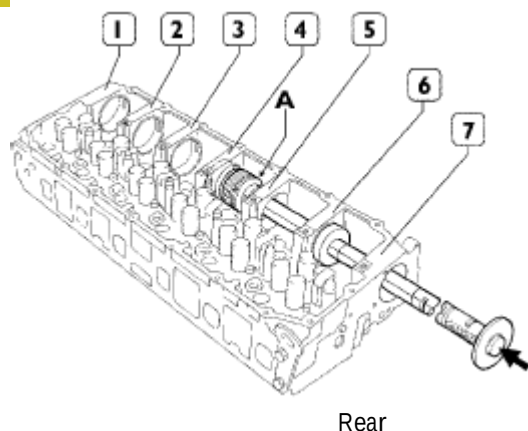


71725

The sequence for removing the bushings is 7, 6, 5, 4, 3, 2, 1. The bushings are extracted from the front of the single seats. Removal does not require the drift extension for bushings 5, 6 and 7 and it is not necessary to use the guide bushing. For bushings 1, 2, 3 and 4 it is necessary to use the extension and the guide bushings. Position the drift accurately during the phase of removal.

- 1 Position the bushing to insert on the drift (A) making the grub screw on it coincide with the seat (B) (Figure 134) on the bushing.
- 2 Position the guide bushing (E) and secure the guide bushing (G) on the seat of the 7th bushing with the plate (H).
- 3 While driving in the bushing, make the reference mark (F) match the mark (M). In this way, when it is driven home, the lubrication hole on the bushing will coincide with the oil pipe in its seat. The bushing is driven home when the 1st red reference mark (D) is flush with the guide bushing (G).

Figure 137

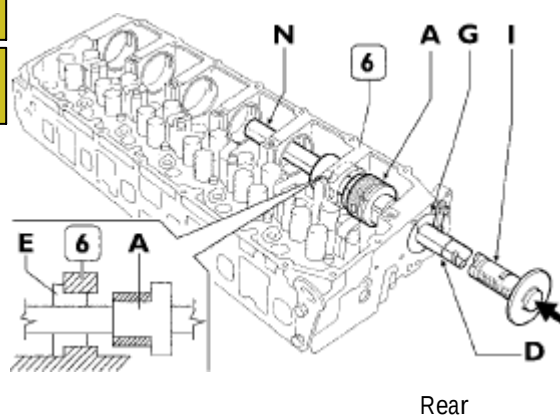



71723

To insert the bushing (6), proceed as follows:

- Unscrew the grip (I) and the extension (N).
- Position the extension (N) and the guide bushing (E) as shown in the figure.
- Repeat steps 1, 2, 3.

Assembly

 Figure 136

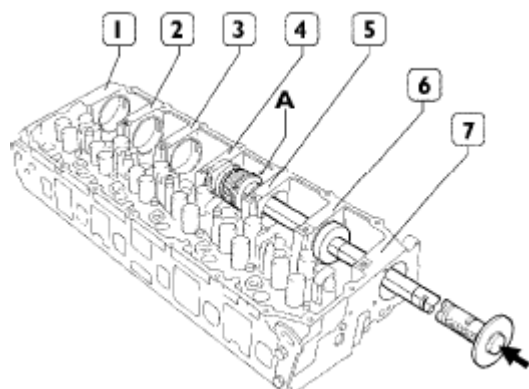


77795

Assemble the drift together with the extension. To insert bushings 1, 2, 3, 4 and 5, proceed as follows:

Aquila Trucks Centres

Figure 138

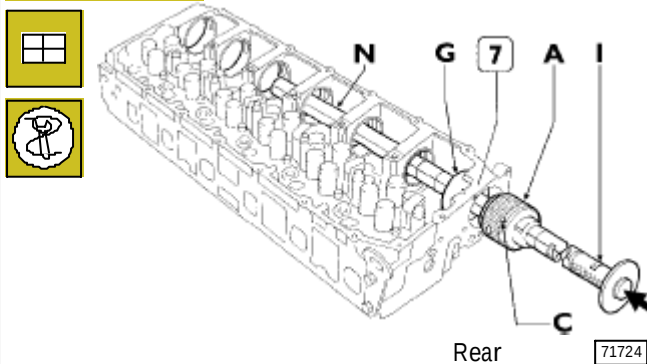


To insert bushing (7), proceed as follows:

- Unscrew the grip (I) and the extension (N).
- Refit the guide (G) from the inside as shown in the figure.
- Position the bushing on the drift (A) and bring it close up to the seat, making the bushing hole match the lubrication hole in the head. Drive it home. The 7th bushing is driven in when the reference mark (C) is flush with the bushing seat.

540665 VALVE SPRINGS


Figure 139 (Demonstration)

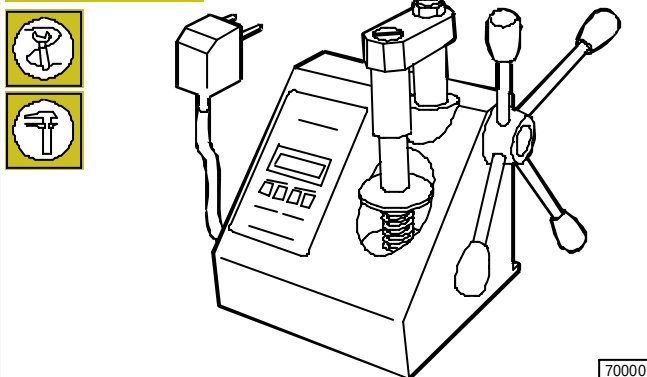

Before assembly, the flexibility of the valve springs has to be checked using a suitable tool.

Compare the load and elastic deformation data with those of the new springs given in the following figure.


Figure 140

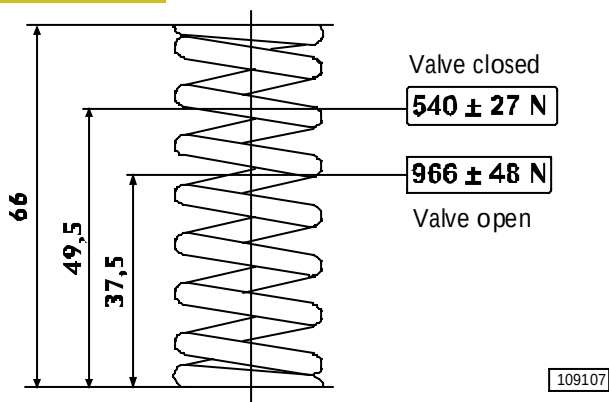

MAIN DATA TO CONTROL EXHAUST AND DISCHARGE VALVE SPRING

Fitting the valves and oil seal ring

Figure 141

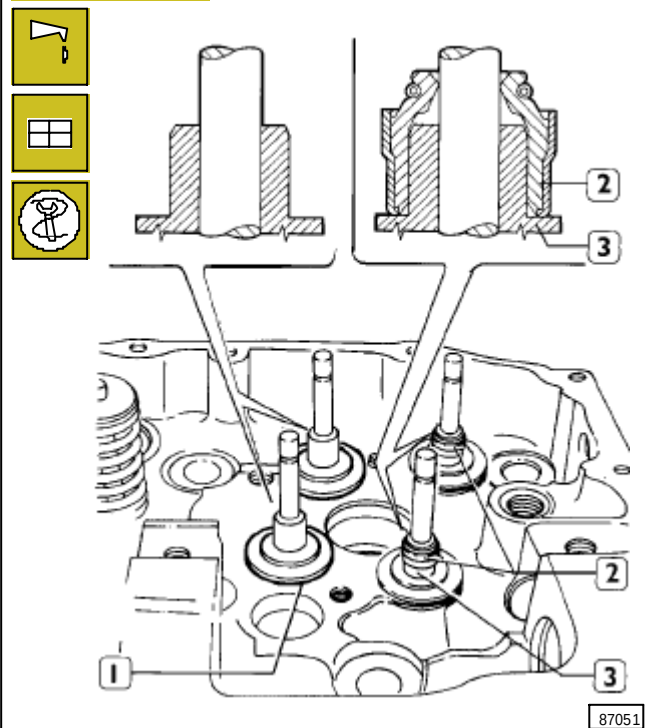


Lubricate the valve stem and insert the valves in the respective valve guides; fit the lower caps (1). Use tool 99360329 to fit the oil seal (2) on the valve guides (3) of the exhaust valves; then, to fit the valves, proceed as follows.

NOTE Should valves not have been overhauled or replaced, remount them according to numbering performed on dismantling.

Intake valves are different from exhaust valves in that they have a notch placed at valve head centre.

Figure 142

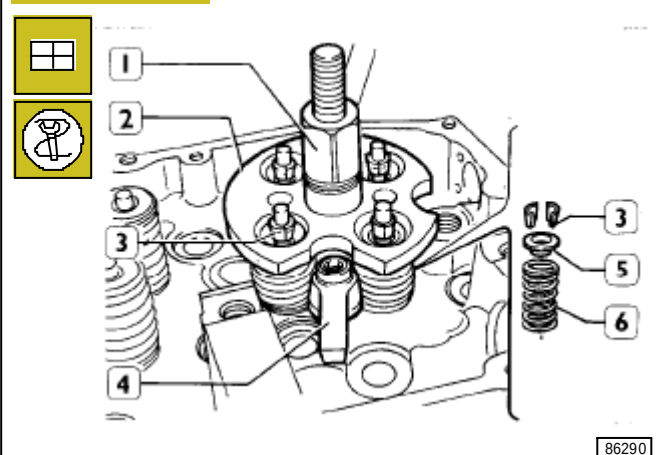


- fit springs (6) and the upper plate (5);
- apply tool 99360264 (2) and block it with bracket (4); tighten the lever (1) until cotters are installed (3), remove tool (2).

Aquila Trucks Centres

5412 ROCKER SHAFT

Figure 143

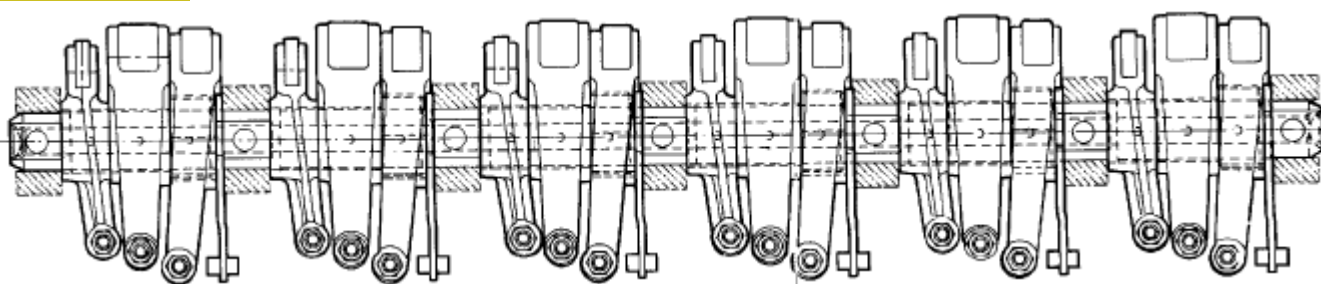

[44925]


The camshaft cams directly control rockers: 6 for injectors and 12 for valves.

Injectors and intake valves control rocker arms are keyed on rocker arms shaft directly. Exhaust intake valves control rocker arms are keyed on rocker arms shaft putting in between the levers with engine brake control eccentric pin.

Rockers slide directly on the cam profiles via rollers. The other end acts on a bar directly supported by the two valves stems. A pad is placed between the rocker adjusting screw and the bar. Two lubrication holes are obtained inside the rockers. The rocker shaft practically covers the whole cylinder head; remove it to have access to all the underlying components.

Shaft

 Figure 144



37,984
38,000


[79171]

MAIN DATA OF THE ROCKER ARM SHAFT

Check that the surface of the shaft shows no scoring or signs of seizure; if it does, replace it.

Rocker


Figure 145

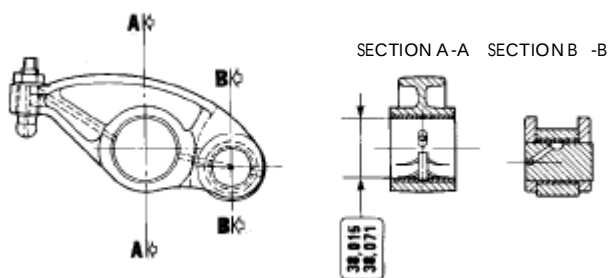

[44914]


PUMP INJECTOR ROCKER

Figure 147

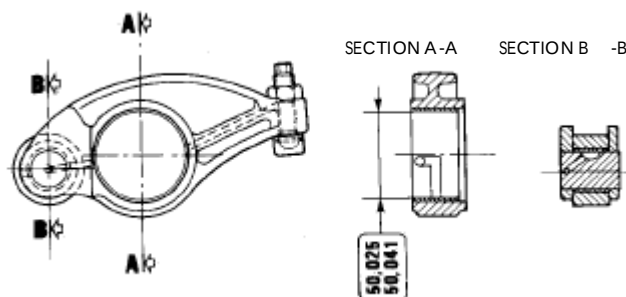


DISCHARGE VALVE ROCKER

Figure 146

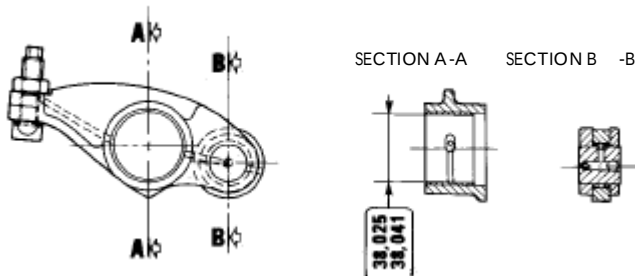

EXHAUST VALVES ROCKER

Figure 148

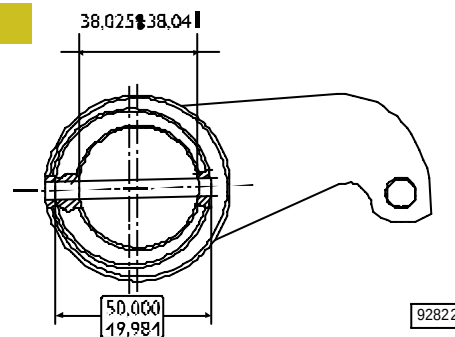LEVER WITH ENGINE BRAKE CONTROL
ECCENTRIC PIN

[92822]

The bush surfaces must not show any trace of scoring or excessive wear; otherwise, replace bushes or the whole rocker.


Aquila Trucks Centres

ASSEMBLING THE ENGINE

Fix the engine block to the stand 99322230 by means of brackets 99361035.

Install the cylinder liners as described in page 56.

Figure 149

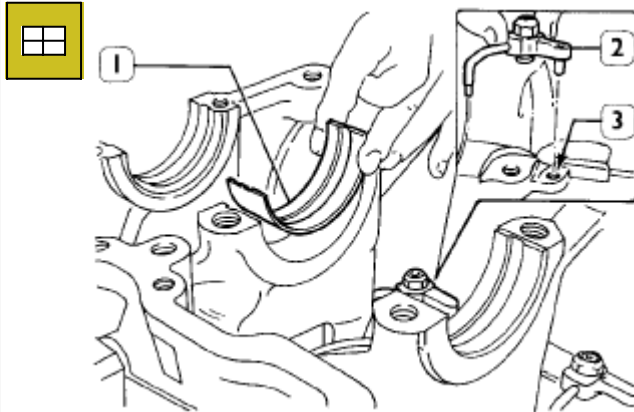


47586

Fit the oil spray nozzles (2), so that the dowel coincides with the block hole (3).

Place the half bearings (1) on the main bearings.


Figure 150

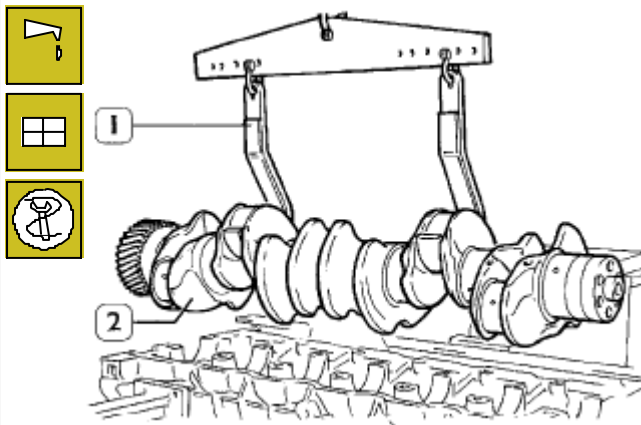

47570

Lubricate the half bearings, then install the crankshaft (2) by means of hoist and hook 99360500 (1).


Figure 151

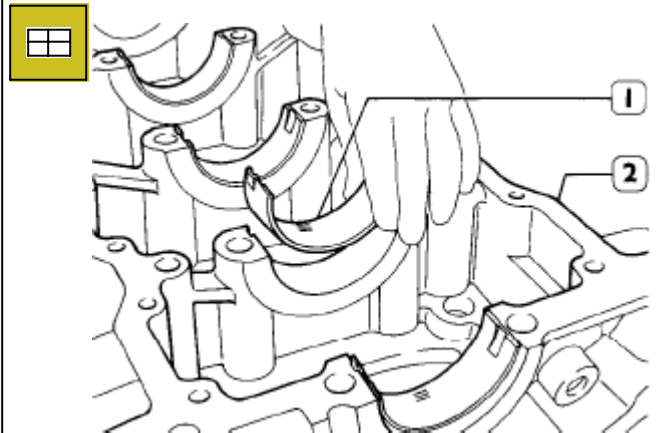

49021

Place the half-bearings (1) on the main bearings in the underblock (2).


Figure 152

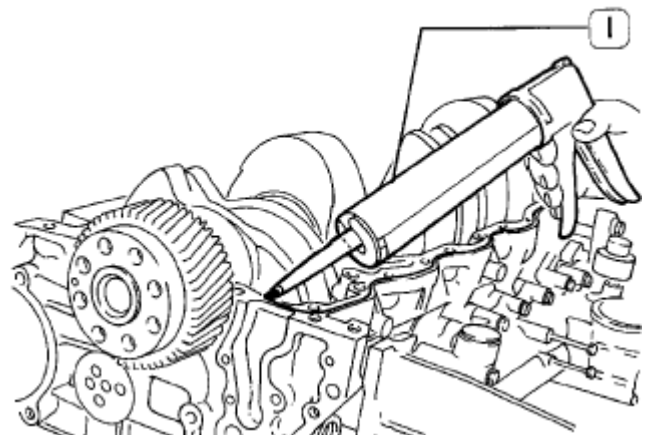

47595

By means of suitable equipment (1) apply silicone LOCTITE 5970 IVECO No. 2995644 to the block, as shown in the figure.

Figure 153

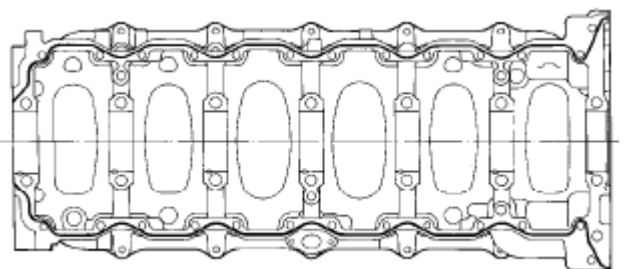


47596

Sealant application diagram

NOTE Fit the lower crankcase underblock within 10' of the application of the sealant.

Aquila Trucks Centres


Figure 154

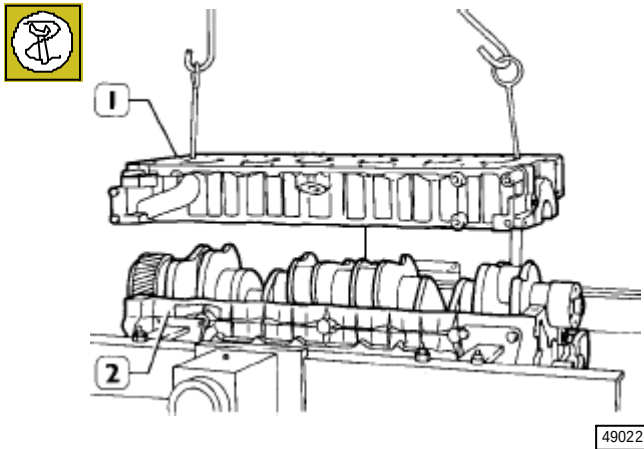

49022

Fit the lower crankcase by means of a suitable hoist and hooks (1).

Figure 155

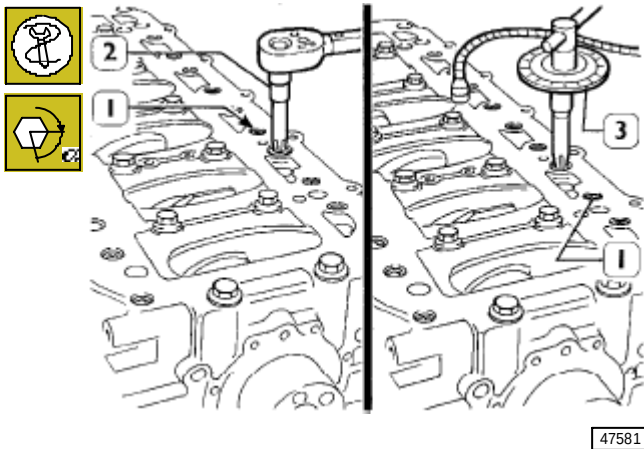


47581

NOTE Use new screws whenever removing the bed-plate.

Fit the lower crankcase and use a torque wrench (2) to tighten the outer screws (1) to 25 Nm according to the diagrams on the following page.

Figure 156

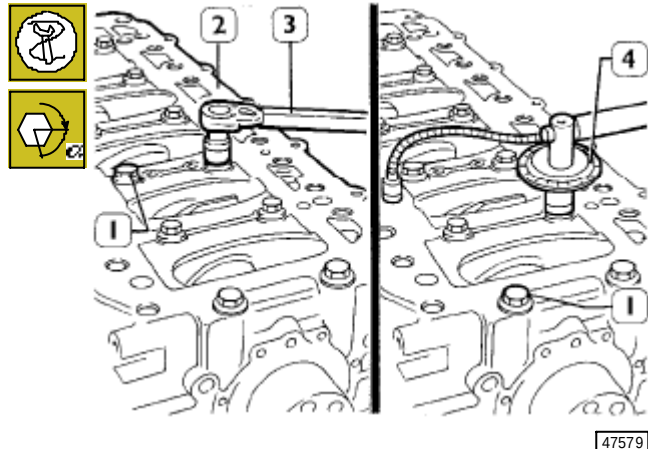


47579

Tighten the inner screws (1) to 140 Nm torque by means of a torque wrench (3), then with two further angular phases $60^\circ + 60^\circ$, using tool 99395216 (4). Tighten again the outer screws (1, Figure 155) with 90° angular closing, using tool 99395215 (3, Figure 155).

Aquila Trucks Centres


DIAGRAM SHOWING THE LOWER CRANKCASE FIXING SCREWS TIGHTENING ORDER

Figure 157

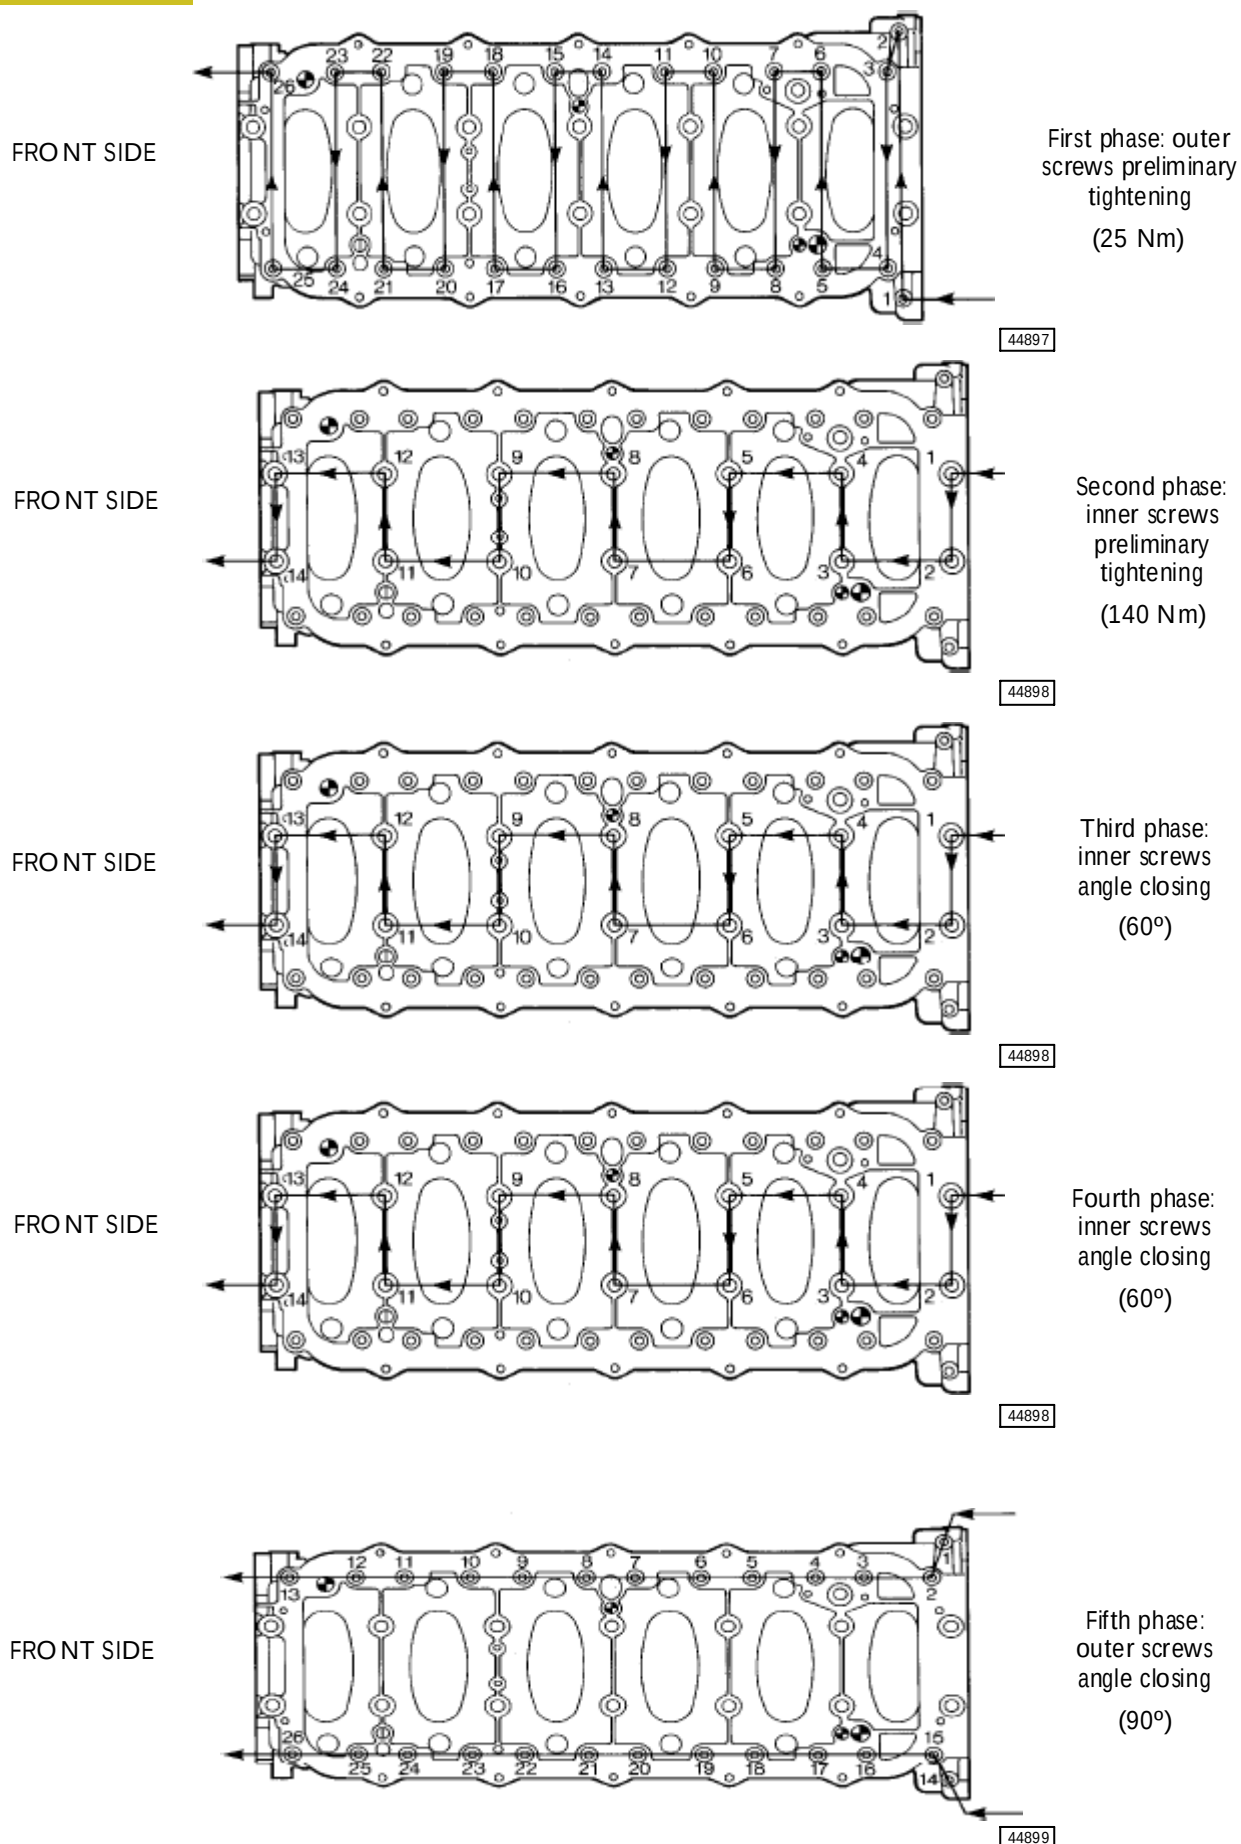

Aquila Trucks Centres

Figure 158

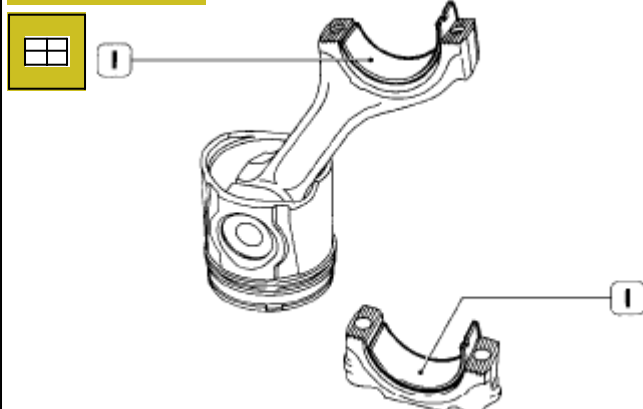

Rotate the cylinder assembly placing it vertically. Lubricate the half-bearings (1) and fit them in the connecting rod and the cap.

NOTE Not finding it necessary to replace the connecting rod bearings, you need to fit them back in exactly the same sequence and position as in removal. If the big end bearings need to be replaced, choose them according to the description given from page 59 to page 65.

Lubricate half bearings (1), then mount them on the connecting rod and cap

NOTE Do not make any adjustment on the bearing shells.

Fitting the connecting rod-piston assembly into the cylinder liners


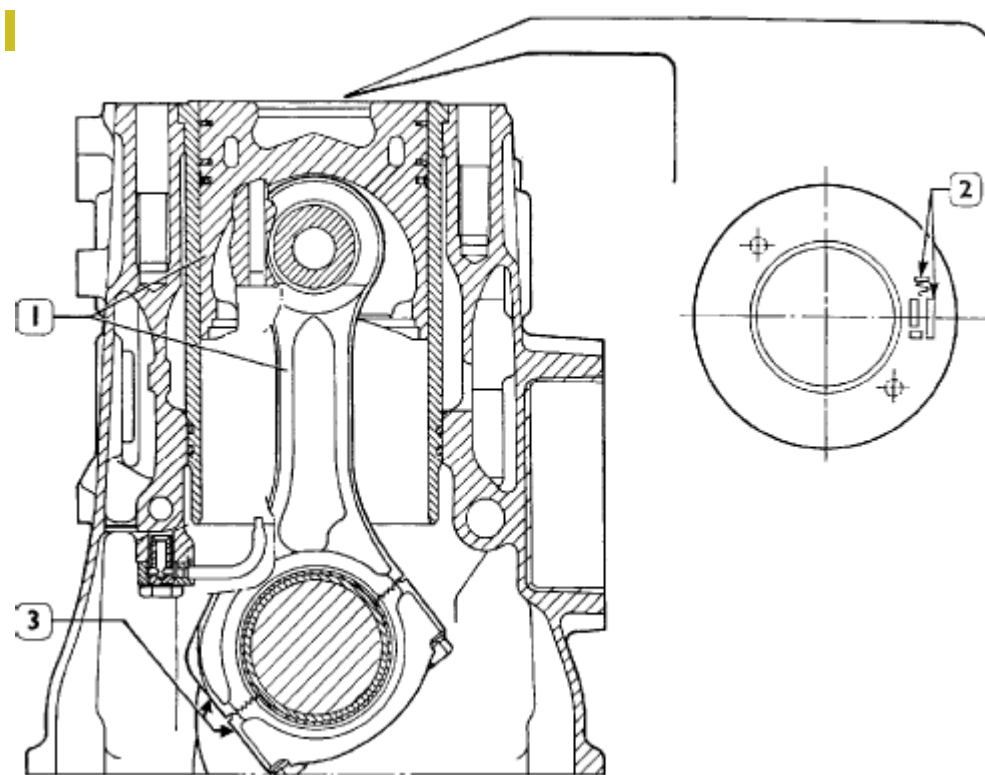


Figure 160

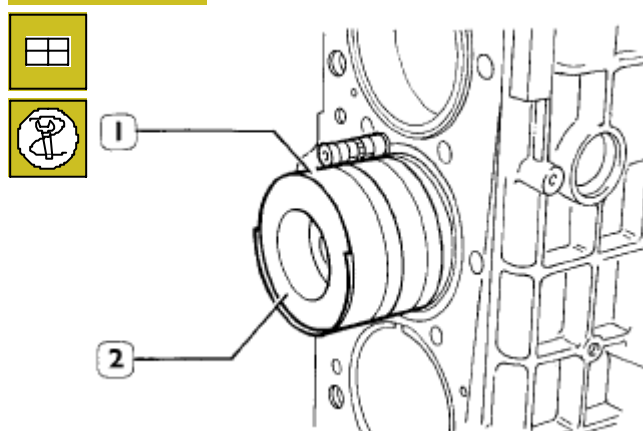

47593

Fit the connecting rod-piston assemblies (2) into the piston liners, using the band 99360605 (1). Check the following:

- the rings gaps are offset by 120°;
- all pistons belong to the same class, A or B;
- ideogram (2, Figure 159), stamped on the piston crown, is placed toward the engine flywheel, or the cavity, on the piston skirt, corresponds to the position of the oil spray nozzles

NOTE The pistons are supplied as spares in class A and can also be fitted in class B cylinder liners.

ing rod-piston assembly


rea of ideogram on the piston

ing rod marking area

61831

Aquila Trucks Centres


Figure 161

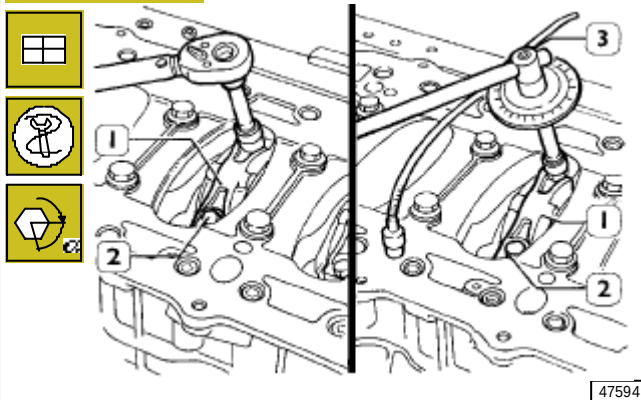

Connect the connecting rods to the relative journals, fit the connection rod caps (1) with half bearings; tighten the fixing screws (2) of the connecting rod caps to 50 Nm torque (5 kgm). Using tool 99395216 (3), further tighten screws with 40° angle.


NOTE Before reusing the screws (2), measure the diameter of the thread; it must be no less than 11.4 mm; if it is, change the screw. Lubricate the thread of the screws with engine oil before assembly.

Figure 162

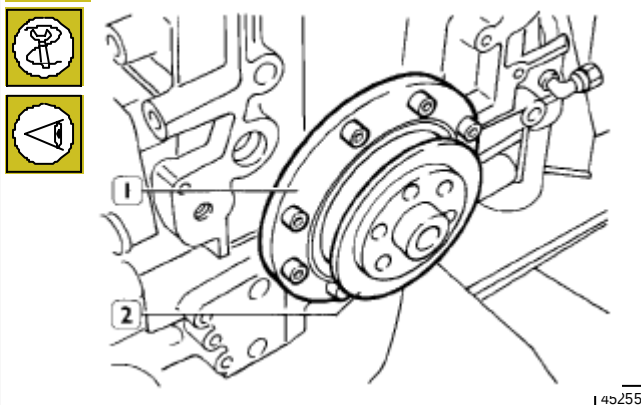


By means of centering ring 99396033 (2), check the exact cover position (1), otherwise act as necessary and tighten the screws.

Figure 163

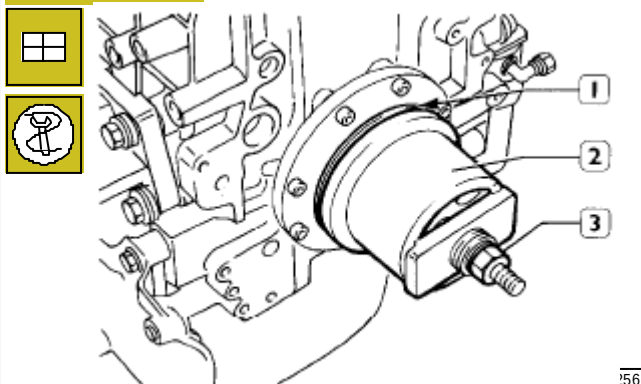

Fit the sealing gasket (1), install the fitting tool 99346245 (2) and drive the sealing gasket (1) by screwing nut (3).

Figure 164

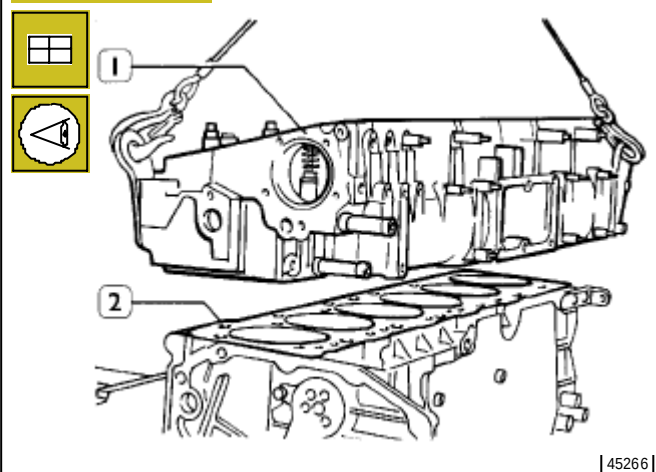

Make sure that pistons 1-6 are exactly at the TDC. Place the gasket (2) on the block. Fit the cylinder head (1) and tighten screws as shown in figs. 166, 167 and 168.

NOTE Use new screws whenever removing the cylinder head.

Figure 165


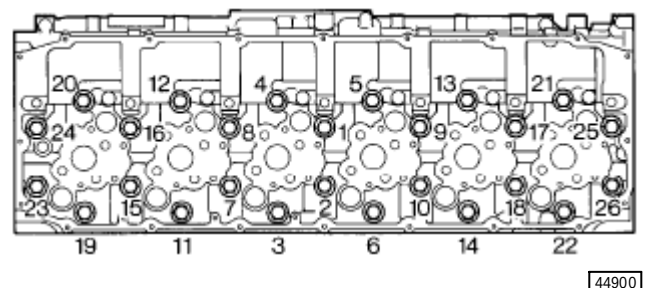


Diagram showing the cylinder head fixing screws tightening order


Figure 166

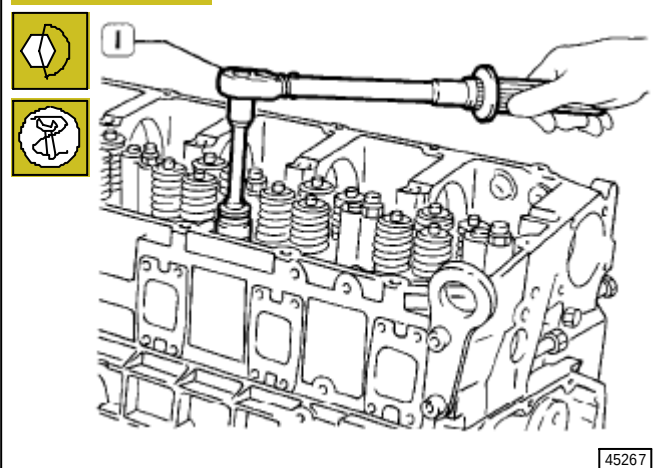

- Preliminary tightening by means of a torque wrench (1):
1st phase: 50 Nm (5 kgm);
2nd phase: 100 Nm (10 kgm)


Aquila Trucks Centres

Figure 167

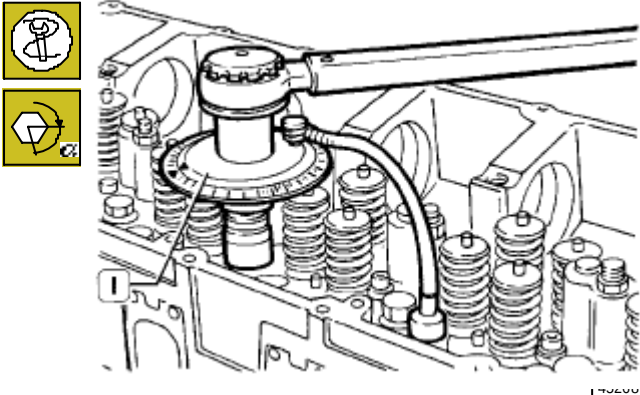


- Angle closing by means of tool 99395216 (1):
3rd phase: 90° angle
4th phase: 75° angle

Figure 168

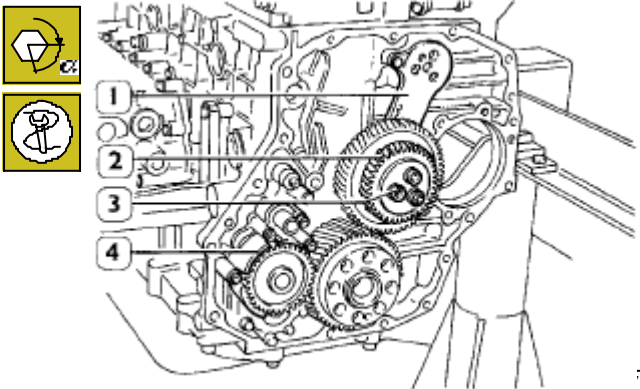

Fit the oil pump (4), intermediate gears (2) with rod (1) and tighten screws (3) in two phases:
preliminary tightening 30 Nm
angle closing 90°

Figure 169

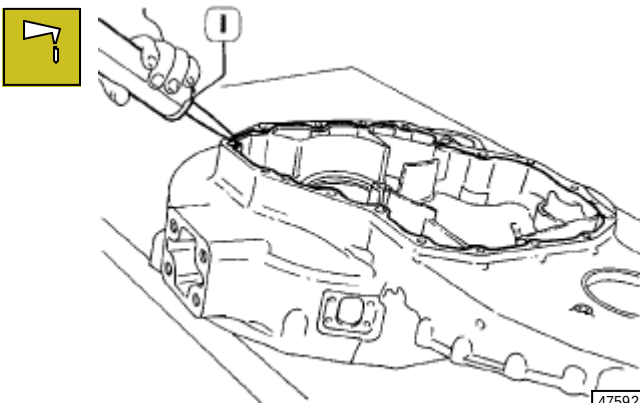


Apply sealant LOCTITE 5970 IVECO No. 2995644 to the gear housing using the proper equipment (1).

The sealer string (1) diameter is to be $1,5 \pm_{0,2}^{0,5}$

NOTE Install the gear housing within 10' of the application of the sealant.

Tighten the screws shown in the figure by means of a torque wrench, in compliance with the following order and tightening torque:

Figure 1

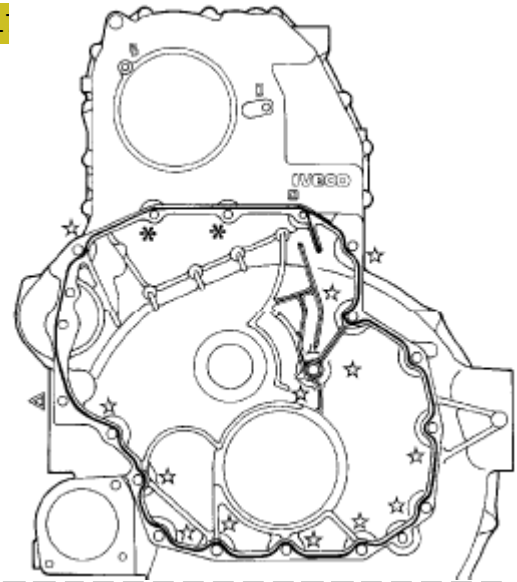


Engines without power take-off

47598

- ☆ no. 13 screws M12 x 1.75 x 80 tightening torque 63 Nm
- ⋮ no. 3 screws M10 x 1.5 x 35 tightening torque 42 Nm
- no. 1 screw M10 x 1.5 x 100 tightening torque 42 Nm
- △ no. 1 screw M10 x 1.5 x 180 tightening torque 42 Nm
- ▭ no. 2 screws M18 x 1.25 x 125 tightening torque 24 Nm

Figure 171

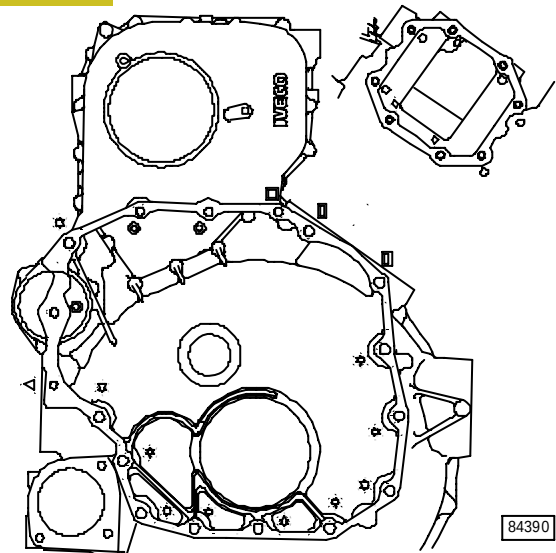


84390

Engines with power take-off

- ☆ no. 10 screws M12 x 1.75 x 80 tightening torque 63 Nm
- ⋮ no. 3 screws M10 x 1.5 x 35 tightening torque 42 Nm
- no. 1 screw M10 x 1.5 x 170 tightening torque 42 Nm
- △ no. 1 screw M10 x 1.5 x 180 tightening torque 42 Nm
- ▭ no. 2 screws M12 x 1.75 x 125 tightening torque 63 Nm
- d no. 8 screw M10 x 1.5 x 120
- ◇ no. 2 screw M10 x 1.5 x 120 (apply to the thread LOCTITE 275)

Aquila Trucks Centres

Figure 172

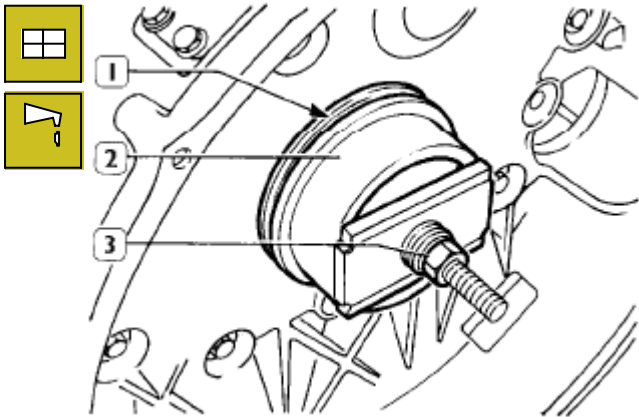

Fit the sealing gasket (1), install the fitting tool 99346246 (2) and drive the sealing gasket by screwing the nut (3).

45258


540850 FLYWHEEL

NOTE If the teeth of the ring gear mounted on the flywheel, for starting the engine, are very damaged, replace the ring gear. It must be fitted after heating the ring gear to a temperature of approx. 200°C.

Fitting flywheel

NOTE The crankshaft has a locating peg that has to couple with the relevant seat on the engine flywheel.


Figure 173

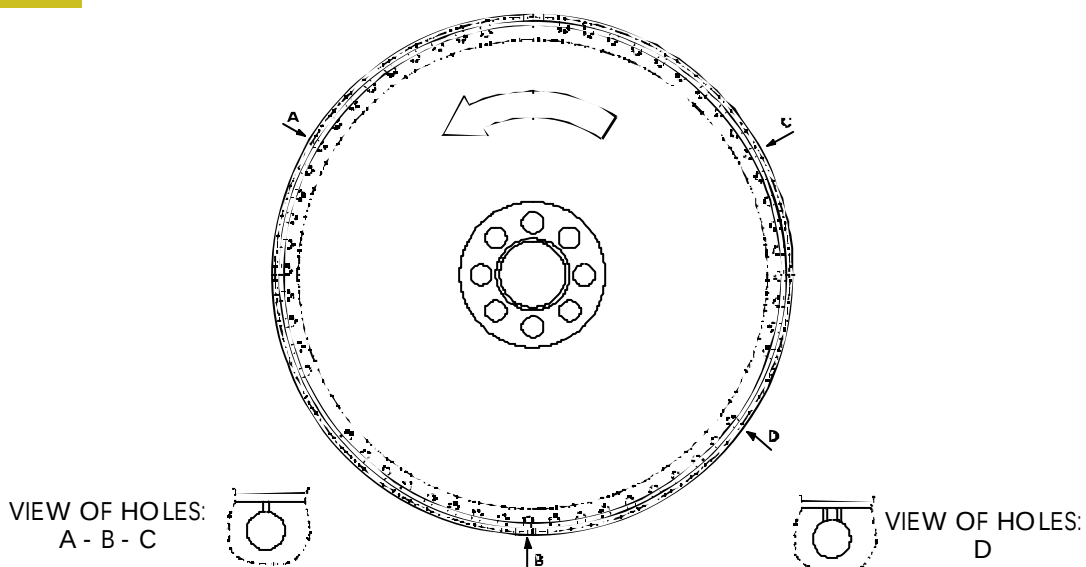**DETAIL OF PUNCH MARKS ON ENGINE FLYWHEEL FOR PISTON POSITIONS**

A. Hole on flywheel with one reference mark, corresponding to the TDC of pistons 3-4. - B. Hole on flywheel with one reference mark, corresponding to the TDC of pistons 1-6. - C. Hole on flywheel with one reference mark, corresponding to the TDC of pistons 2-5. - D. Hole on flywheel with two reference marks, position corresponding to 54°.

60668


Figure 174

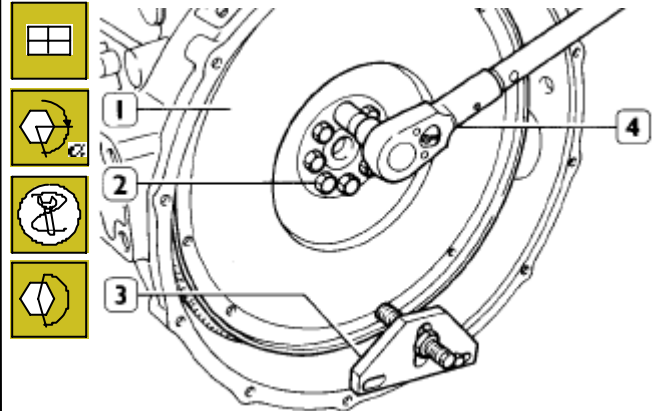

Position the flywheel (1) on the crankshaft, lubricate the thread of the screws (2) with engine oil and screw them down. Lock rotation with tool 99360351 (3). Lock the screws (2) in two phases.

First phase: pre-tightening with torque wrench (4) to a torque of 100 Nm (10 kgm).

Figure 175

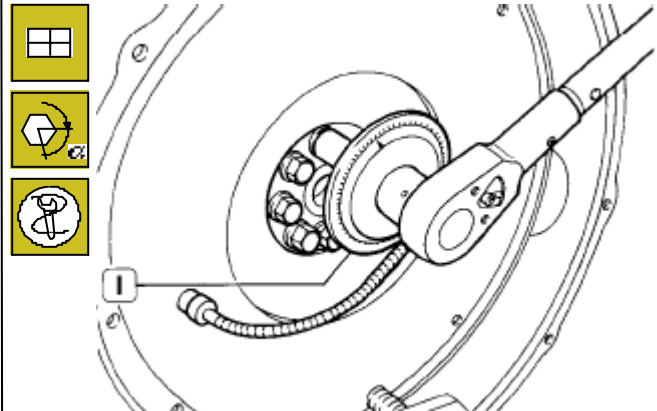


Second phase: closing to angle of 60° with tool 99395216 (1).

Aquila Trucks Centres

Fitting camshaft

Figure 176

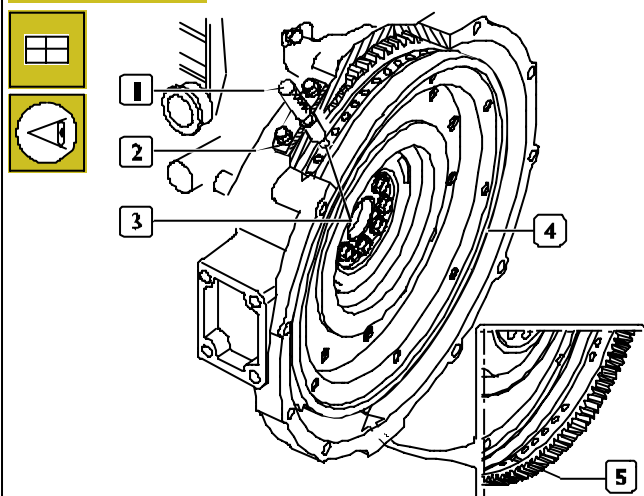

72436

Position the crankshaft with the pistons 1 and 6 at the top dead centre (T.D.C.).


This situation occurs when:

1. The hole with reference mark (5) of the engine flywheel (4) can be seen through the inspection window.
2. The tool 99360612 (1), through the seat (2) of the engine speed sensor, enters the hole (3) in the engine flywheel (4).

If this condition does not occur, turn the engine flywheel (4) appropriately.

Remove the tool 99360612 (1).

Figure 177

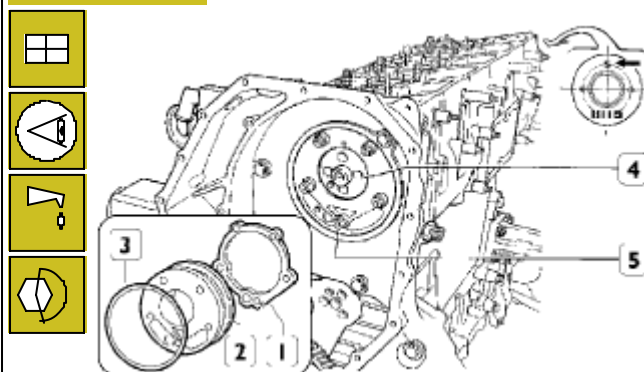


73843

Fit the camshaft (4), positioning it observing the reference marks (→) as shown in the figure.

Lubricate the seal (3) and fit it on the shoulder plate (2). Mount the shoulder plate (2) with the sheet metal gasket (1) and tighten the screws (5) to the required torque.


Figure 178

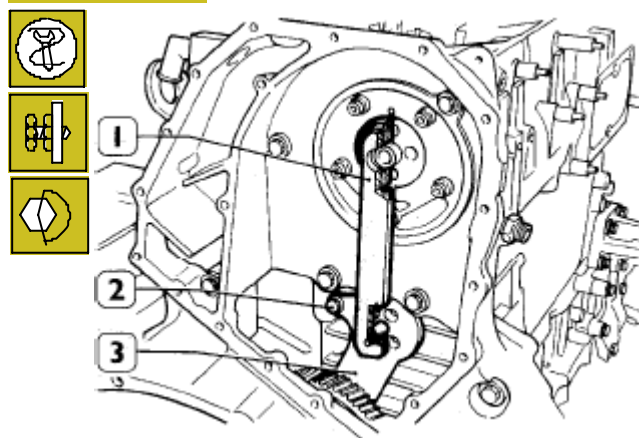

45376

- Apply gauge 99395215 (1), check and record the position of the rod (3) for the gear, tighten the screw (2) to the prescribed torque.

Figure 179

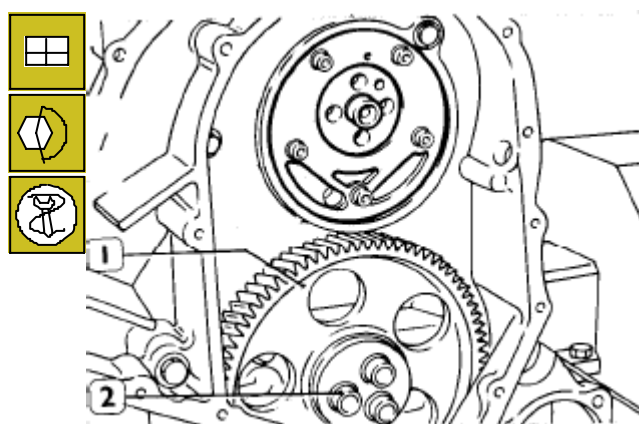


45269

- Remove the gear (1) and tighten screws (2) by means of proper wrench, to the prescribed torque.

NOTE Replace the idle gear bushing (1) when wear is detected. After installing the bushing, adjust it to $\varnothing 58.010 \pm 0.10$ mm.

Aquila Trucks Centres

Figure 180

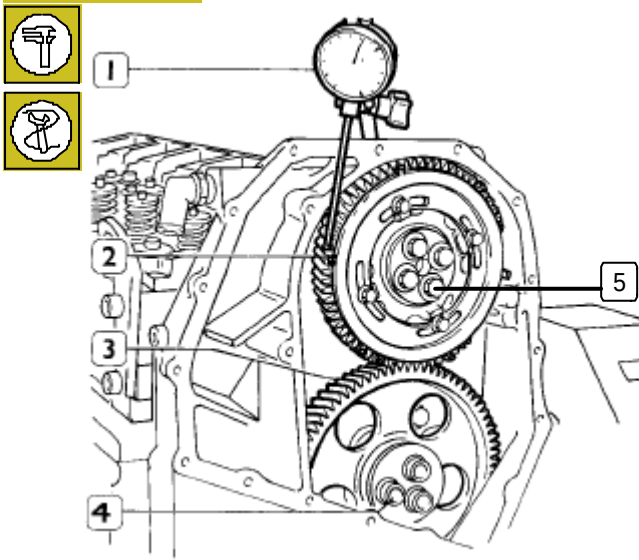


Position the gear (2) on the camshaft so that the 4 slots are centred with the holes for fixing the camshaft, without fully locking the screws (5).

Using the dial gauge with a magnetic base (1), check that the clearance between the gears (2 and 3) is 0.073 – 0.195 mm; if this is not so, adjust the clearance as follows:

- Loosen the screws (4) fixing the idle gear (3).
- Loosen the screw (2, Figure 178) fixing the link rod. Shift the link rod (3, Figure 178) to obtain the required clearance.
- Lock the screw (2, Figure 178) fixing the link rod and screws (4) fixing the idle gear to the required torque.

Fitting pump-injectors


Figure 181

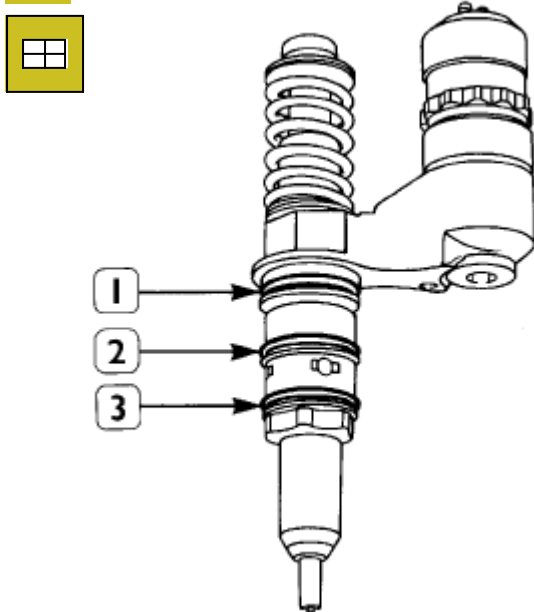

Fit the seals (1) (2) (3) on the injectors.

44908

Figure 182

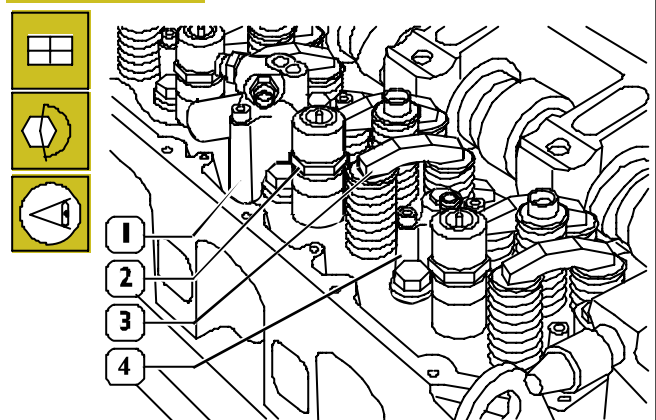

71775


Mount:

- The injectors (2) and, using a torque wrench, lock the bracket fixing screws to a torque of 36,5 Nm.
- The exhaust brake cylinders (1) and (4) and, using a torque wrench, fix them to a torque of 19 Nm.
- The crosspieces (3) on the valve stem, all with the largest hole on the same side.

Fitting rocker-arm shaft assembly

Figure 183

NOTE Before refitting the rocker-arm shaft assembly, make sure that all the adjustment screws have been fully unscrewed.

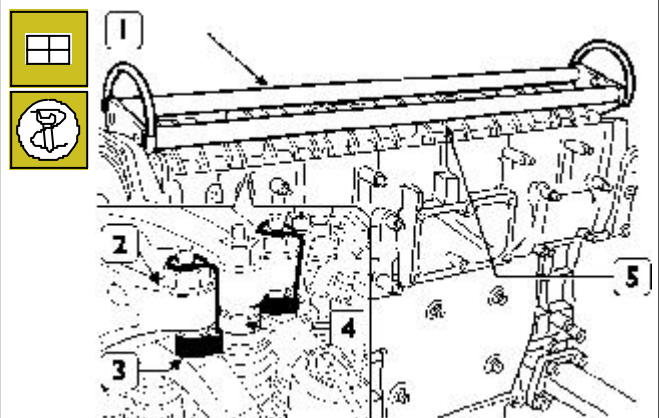


73533

Using tool 99360144 (3), fasten the blocks (4) to the rocker arms (2).

Apply the tool 99360558 (1) to the rocker arm shaft (5) and mount the shaft on the cylinder head.

Aquila Trucks Centres

Figure 184

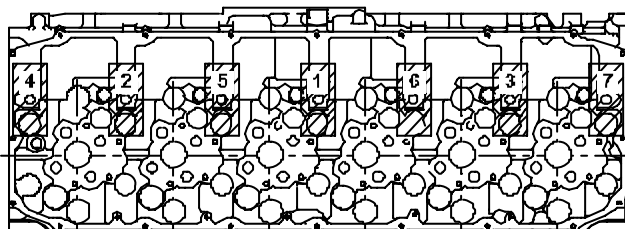


70567A

SCHEME OF SCREW TIGHTENING SEQUENCE
SECURING ROCKER ARMS

Screw screws (1 - 2 - 3) until rocker arms are brought to contact relating seats on cylinder head, tighten the screws according to sequence indicated in figure operating in two steps as indicated in successive figure.

Figure 185

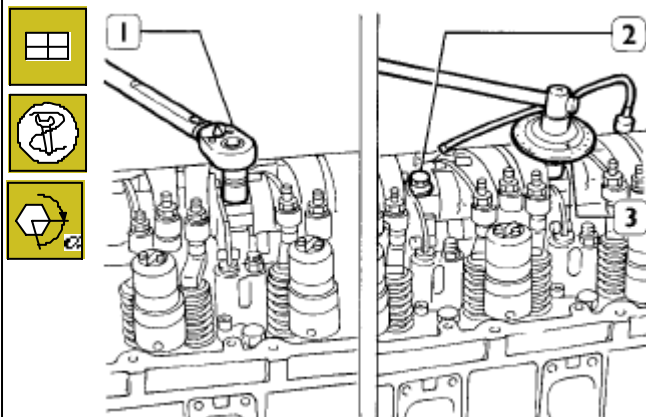


45261

Lock the screws (2) fixing the rocker-arm shaft as follows:

- 1st phase: tightening to a torque of 40 Nm (4 kgm) with the torque wrench (1).
- 2nd phase: closing with an angle of 60° using the tool 99395216 (3).


Figure 186

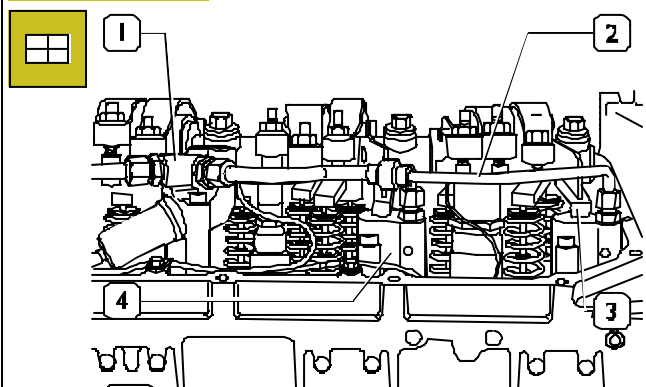

60574

- Mount the engine brake lever retaining springs (3).
- Connect the pipe (2) to the engine brake cylinders (4) and to the cylinder with the engine brake solenoid valve (1).

Figure 187

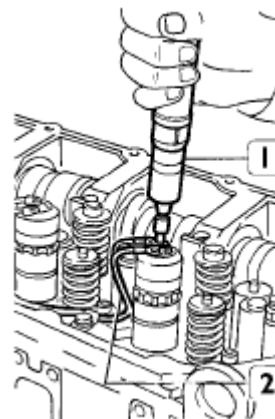


71777

Mount the electric wiring (2), securing it on the electro-injectors with a torque screwdriver (1) to a torque of 1.36 - 1.92 Nm.

Camshaft timing

Figure 188

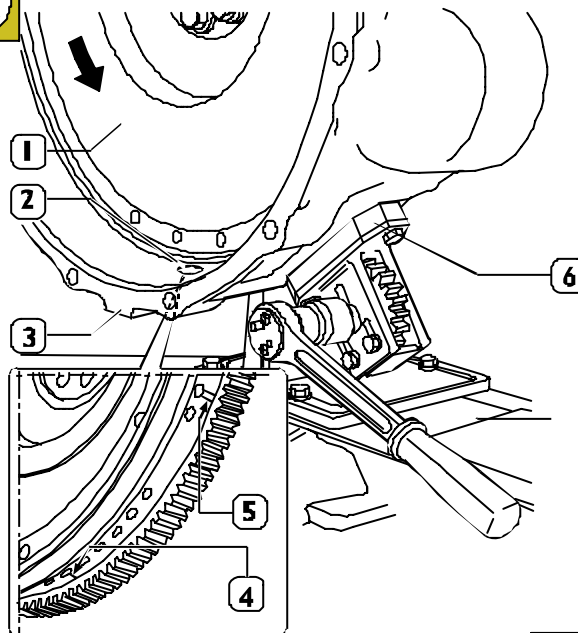

71776


Apply the tool 99360321 (6) to the gear housing (3).

NOTE The arrow shows the direction of rotation of the engine when running.

Using the above-mentioned tool, turn the engine flywheel (1) in the direction of rotation of the engine so as to take the piston of cylinder n.o.1 to approximately the T.D.C. in the phase of combustion. This condition occurs when the hole with one reference mark (4), after the hole with two reference marks (5) on the engine flywheel (1), can be seen through the inspection window (2).

Aquila Trucks Centres

Figure 189

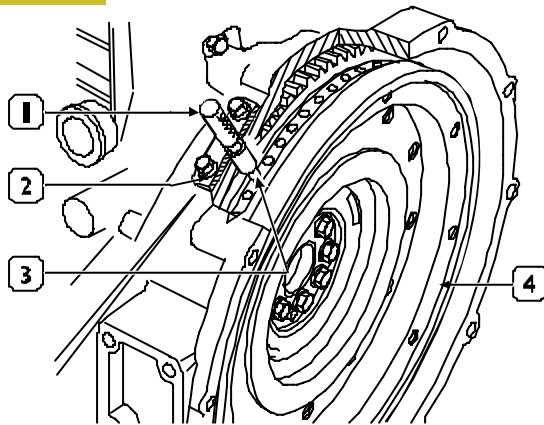


The exact position of piston no.1 at the T.D.C. is obtained when in the above-described conditions the tool 99360612 (1) goes through the seat (2) of the engine speed sensor into the hole (3) in the engine flywheel (4).

If this is not the case, turn and adjust the engine flywheel (4) appropriately.

Remove the tool 99360612 (1).

Figure 190

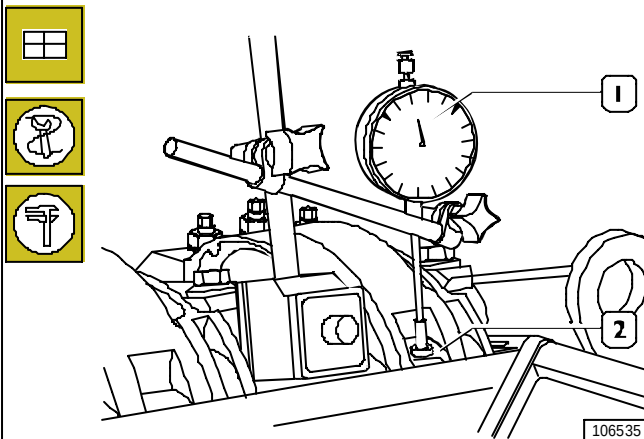

Set the dial gauge with the magnetic stand (1) with the rod (flat based) on the roller (2) of the rocker arm that governs the injector of cylinder no.1 and pre-load it by 6 mm.


NOTE During the measurement, the dial gauge rod must always be at right angles to the engine centre line and NOT to the head surface.

With tool 99360321 (6, Figure 188), turn the crankshaft clockwise until the pointer of the dial gauge reaches the minimum value beyond which it can no longer fall.

Reset the dial gauge.

Turn the engine flywheel anticlockwise until the dial gauge gives a reading for the lift of the cam of the camshaft of 4.90 ± 0.05 mm.


Figure 191

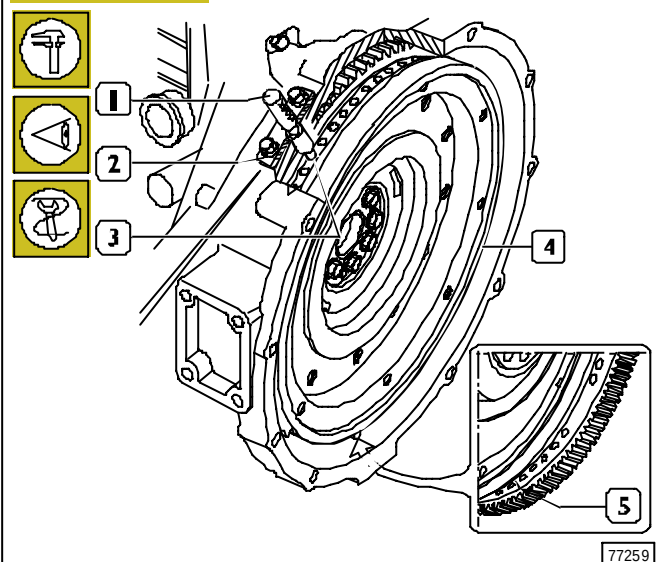

The camshaft is in step if at the cam lift values of 4.90 ± 0.05 mm there are the following conditions:

- 1) The hole marked with a notch (5) can be seen through the inspection window
- 2) The tool 99360612 (1) through the seat (2) of the engine speed sensor goes into the hole (3) in the engine flywheel (4).

Figure 192

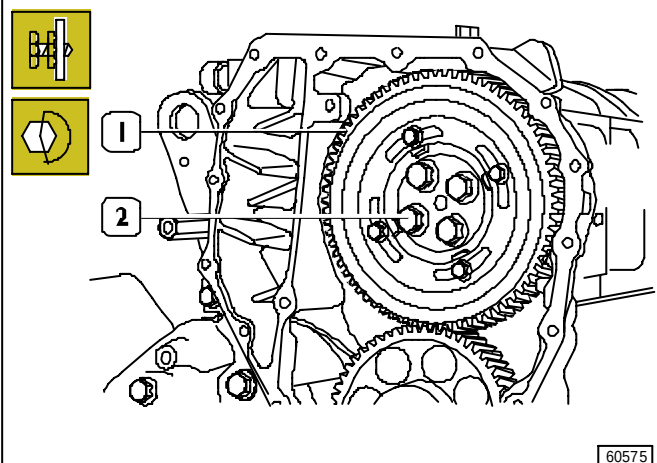


If you do not obtain the conditions illustrated in Figure 191 and described in points 1 and 2, proceed as follows:

- 1) Loosen the screws (2) securing the gear (1) to the camshaft and utilize the slots (1, Figure 193) on the gear (2, Figure 193).
- 2) Turn the engine flywheel appropriately so as to bring about the conditions described in points 1 and 2 Figure 191, it being understood that the cam lift must not change at all.
- 3) Lock the screws (2) and repeat the check as described above.
- 4) Tighten the screws (2) to the required torque.

Aquila Trucks Centres


Figure 193

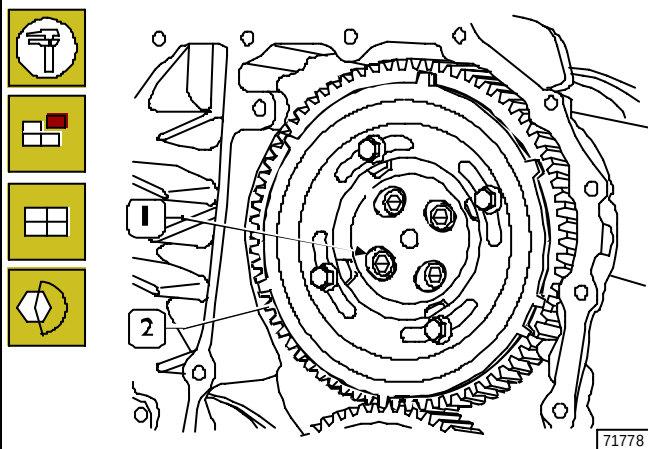

When it is not possible to adjust advance through the slots (1) and the camshaft turns because integral with the gear (2); thus the cam lift reference value varies and it is necessary to proceed in the following way:

- 1) Fasten the screws (2, Figure 192) and rotate the engine flywheel clockwise by $\sim 1/2$ turn;
- 2) Turn the engine flywheel anticlockwise until the dial gauge gives a reading of the lift of the cam of the camshaft of 4.90 ± 0.05 mm
- 3) Take out the screws (2, Figure 192) and remove the gear (2) from the camshaft.

Figure 194

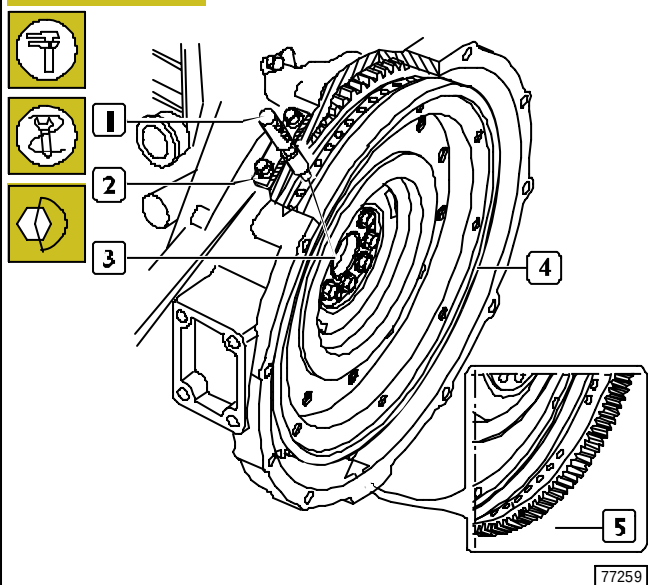

Turn the flywheel (4) again to bring about the following conditions:



- Notch (5) visible through the lower inspection window;
- The tool 99360612 (1) inserted in the hole (3) in the engine flywheel (4) through the seat (2) of the engine speed sensor.

Mount the gear (2, Figure 193) with the 4 slots (1, Figure 193) centred with the fixing holes of the camshaft, locking the relevant screws to the required tightening torque. Check the timing of the shaft by first turning the flywheel clockwise to discharge the cam completely and then turn the flywheel anticlockwise until the dial gauge gives a reading of: 4.90 ± 0.05 mm

Check the timing conditions described in Figure 191.

Phonic wheel timing

Figure 195

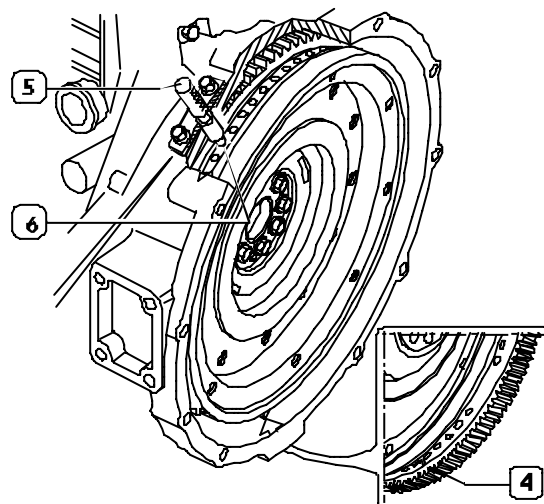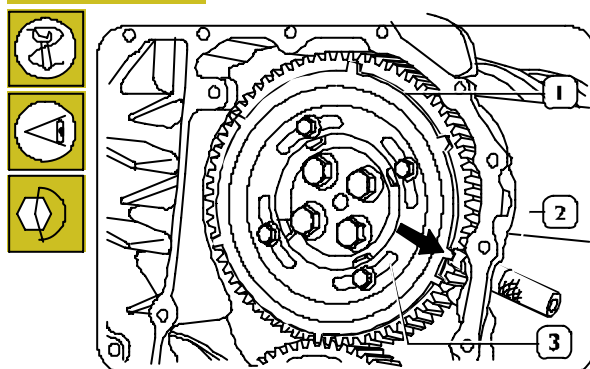


Turn the output shaft bringing cylinder piston 1 at compression stage to TDC.; turn the flywheel by about $1/4$ turn in opposite direction than normal direction of rotation. Turn the flywheel again according to normal direction of rotation until the hole marked with the double notch (4) can be seen through the inspection hole set under the flywheel housing. Fit tool 99360612 (5) into the flywheel sensor seat (6).

Fit tool 99360613 (2), through the timing sensor seat, on the tooth (1) obtained on the phonic wheel. Should tool (2) fitting be difficult, slacken screws (3) and direct the phonic wheel (1) properly to position the tool (2) on the tooth. Tighten the screws (3).

Aquila Trucks Centres

Intake and exhaust rocker clearance adjustment and pre-loading of rockers controlling pump injectors

Figure 196

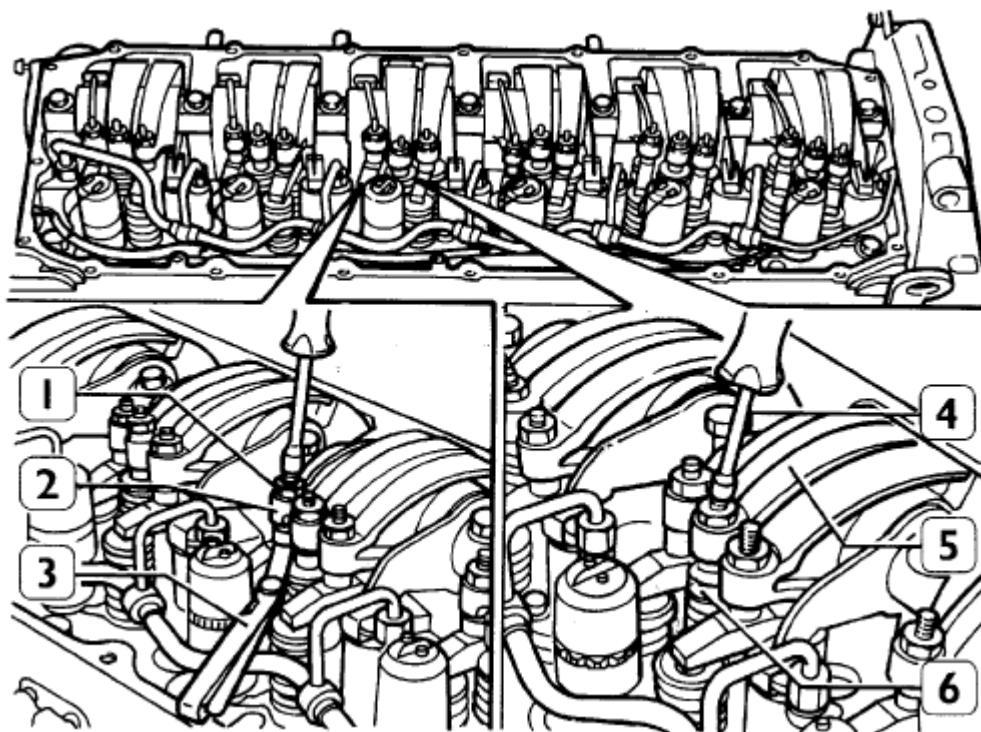

44936A

ADJUSTMENT OF INTAKE, EXHAUST AND INJECTION ROCKERS

Adjustment of clearances between rockers and valve studs and preloading of pump injector rockers should be carried out with extreme care.

Take the cylinder where clearance must be adjusted to the bursting phase; its valves are closed while balancing the symmetric cylinder valves.

Symmetric cylinders are 1-6, 2-5 and 3-4.

In order to properly operate, follow these instructions and data specified on the table.

Adjustment of clearance between the rockers and rods controlling intake and exhaust valves:

- Use a polygonal wrench to slacken the locking nut (1) of the rocker arm adjusting screw (2).
- Insert the strip of feeler gauge (3) corresponding to the working clearance (page 13);
- Tighten or untighten the adjustment screw with the appropriate wrench;
- Make sure that the gauge blade (3) can slide with a slight friction;
- Lock the nut (1), by blocking the adjustment screw.

Pre-loading of rockers controlling pump injectors:

- Using a polygonal wrench, loosen the nut locking the rocker adjustment screw (5) controlling the pump injector (6);

- Using an appropriate wrench (4), loosen the adjustment screw until the pumping element is at the end-of-stroke;
- Tighten the adjustment screw, with a dynamometric wrench, to 5 Nm tightening torque (0.5 kgm);
- Untighten the adjustment screw by 1/2 to 3/4 rotation;
- Lock nut at prescribed torque.


FIRING ORDER 1-4-2-6-3-5

Clockwise start-up and rotation	Balancing cylinder valve no.	Adjusting clearance of cylinder valve no.	Adjusting pre-loading of cylinder injector no.
1 and 6 at P.M.S.	6	1	5
120°	3	4	1
120°	5	2	4
120°	1	6	2
120°	4	3	6
120°	2	5	3

NOTE In order to carry out operations above correctly, perform sequence indicated in table, checking, at each rotation phase, that position correct using pin 99360612 to be inserted in hole identified by a notch on flywheel, corresponding to the position of pistons (see detail fig. 173).

Aquila Trucks Centres

Figure 197

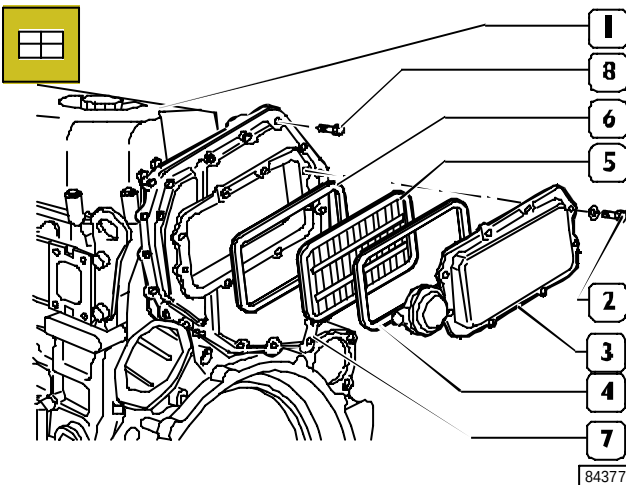


Fit the rocker cover (1).
Fit the blow-by case (7) and its gasket and then tighten the screws (8) to the prescribed torque.
Install the filter (5) and the gaskets (4 and 6).

NOTE The filter (5) operation is unidirectional, therefore it must be assembled with the two sight supports as illustrated in the figure.

Thoroughly clean cover (3) drain hole and suction ducts.
Fit the cover (3) and tighten the fastening screws (2) to the prescribed torque.

NOTE Apply silicone LOCTITE 5970 IVECO No. 29955644 on the blow-by case (7) surface of engines fitted with P.T.O. according to the procedure described in the following figure.


Figure 198

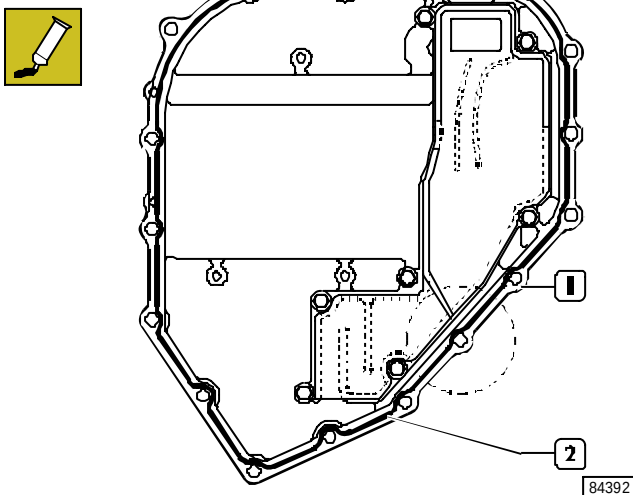

Apply silicone LOCTITE 5970 IVECO No. 29955644 on the blow-by case and form a string (2) of $\varnothing 1.5 \pm \begin{smallmatrix} 0.05 \\ 0.02 \end{smallmatrix}$ as shown in the figure.

NOTE Fit the blow-by case (1) within 10' from sealer application.

Figure 199

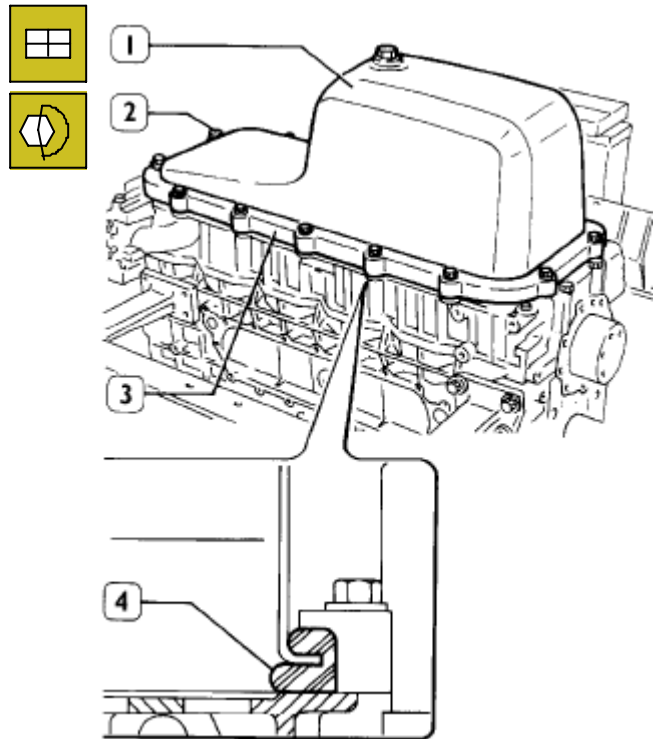

Rotate the engine, then fit the oil suction strainer.
Place gasket (4) on oil sump (1), then position frame (3) and fit the sump onto the engine base by tightening screws (2) to the specified torque.

ENGINE COMPLETION

Make the engine complete by either fitting or disconnecting the items below:


- power take-off (P.T.O.), if any, and its respective pipes;
- air compressor complete with power steering pump;
- fuel pump;
- full fuel filter support and pipes;
- EDC control unit;
- intake manifold;
- preheating resistor;
- heat exchanger;
- oil filter (lubricate the gasket);
- exhaust manifold;
- turboblower and its respective water and oil pipes;
- damper flywheel and pulley;
- thermostat unit;
- belt stretcher, water pump and alternator;
- electromagnetic joint;
- drive belt;
- belt stretcher (if any), air-conditioner compressor;
- drive belt;
- oil level dipstick;
- electric connections and sensors.

NOTE The fittings of the cooling water and lubricating oil pipes of the turbocharger have to be tightened to a torque of:

- 35 $\pm$ 5 Nm, water pipe fittings;
- 55 $\pm$ 5 Nm, oil pipe female fitting;
- 20-25 Nm, oil pipe male fitting.

Aquila Trucks Centres


Figure 200

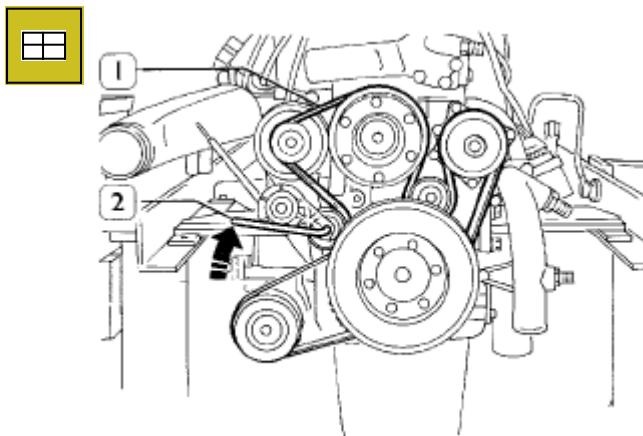

To fit the belt (1) use appropriate equipment (2) to adjust the belt tensioner in the direction indicated by the arrow.

NOTE Automatic tensioners do not require further adjustments after the installation.


Figure 201

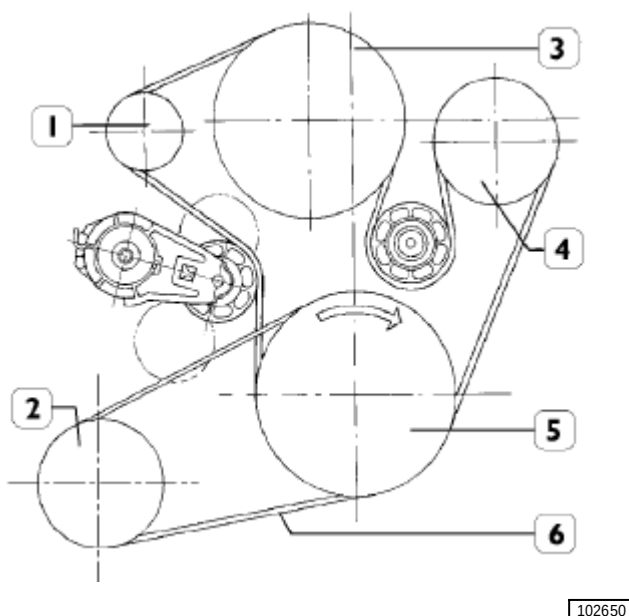

COMPRESSOR CONTROL BELT ASSEMBLY DIAGRAM

1. Alternator - 2. Air conditioner compressor -
3. Electromagnetic joint; 4. Water pump -
5. Crankshaft - 6. Spring belt

Figure 202

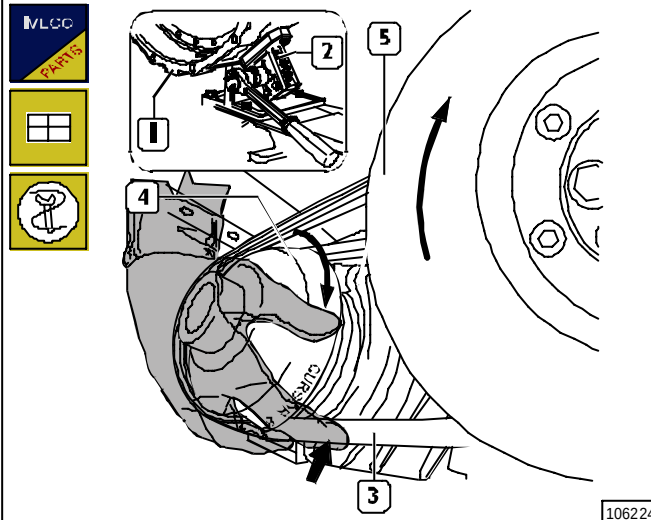

NOTE To fit the elastic belt commanding the climate control compressor, you must use tool number 99360192 (4). Any other method might cause tension that would be harmful to the elastic belt itself.

Apply tool 99360321 (2) to gears box (1). Mount spring belt (3) on driving shaft pulley, mount chock 99360192 (4) on compressor pulley (5) for climate control system. Position spring belt (3) in the opening of tool 99360192 marked with "cursor 8". By tool 99360321, rotate driving shaft (6) according to the direction of the arrow (→) until spring belt (5) is correctly positioned on compressor pulley (3).

NOTE While operating, keep tool 99360192 (4) in contact to pulley (3) and at the same time guide spring belt (5) in order to prevent it from twisting.

NOTE Spring belt must be replaced by a new one after every dismounting operation.

- Supply engine with oil provided quantity.
- Dismount engine from stand and mount starter.

Mount:

- sound deadening guard;
- pipes.

Aquila Trucks Centres

Aquila Trucks Centres


5430 LUBRICATION

Engine lubrication is obtained with a gear pump driven by the crankshaft via gears.

A heat exchanger governs the temperature of the lubricating oil.

The oil filter, signalling sensors and safety valves are installed in the intercooler.

Figure 203

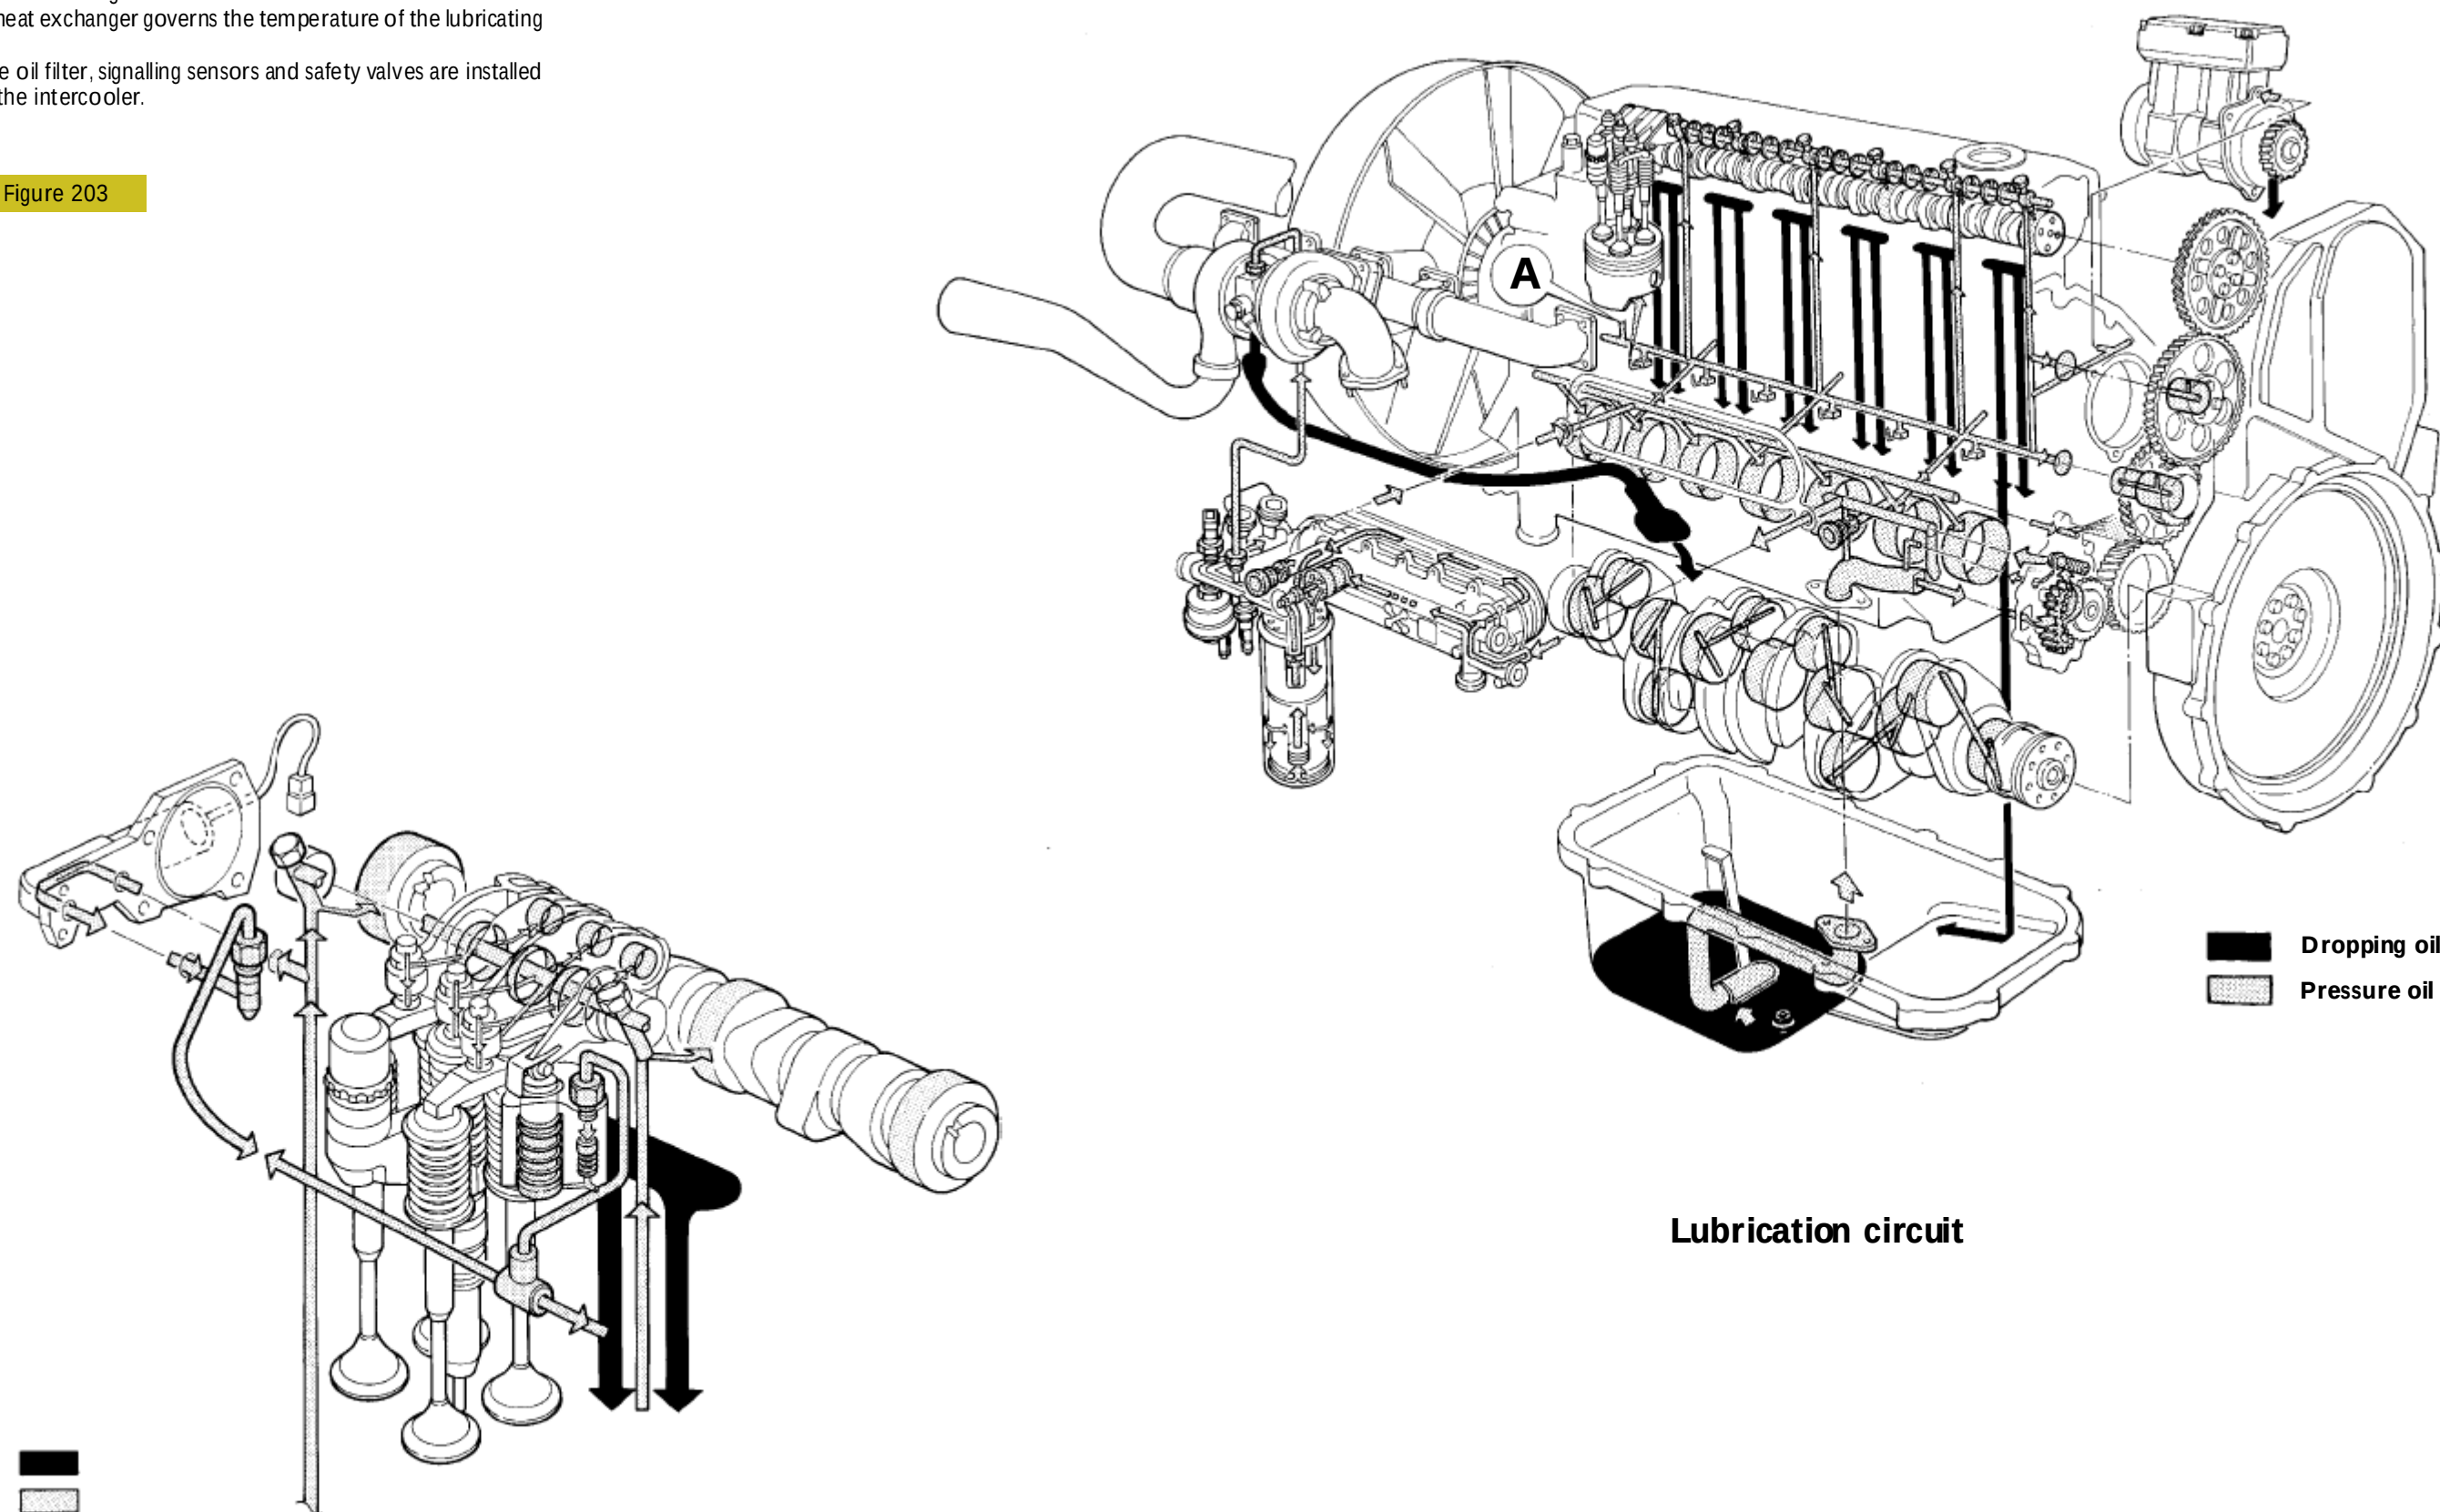


Aquila Trucks Centres

Aquila Trucks Centres

543010 Oil pump

Figure 204

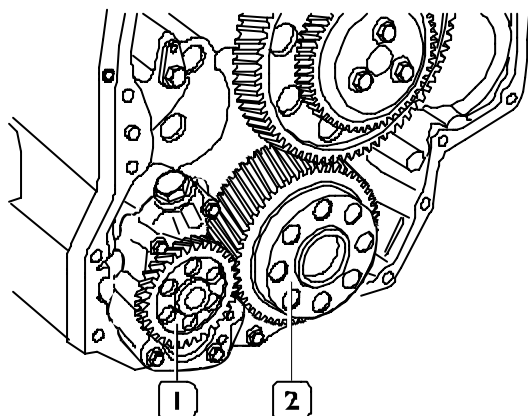


60560

The oil pump (1) cannot be overhauled. On finding any damage, replace the oil pump assembly.

See under the relevant heading for replacing the gear (2) of the crankshaft.

Safety relief valve



Figure 206

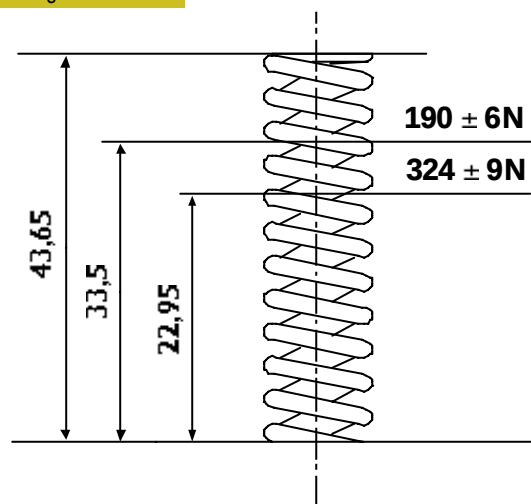

77820

MAIN DATA TO CHECK THE SAFETY RELIEF
VALVE SPRING

Figure 205

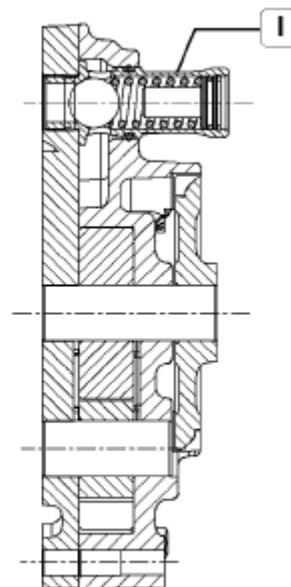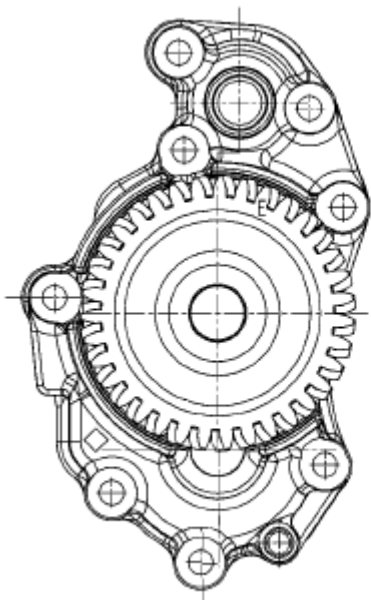

112327


OIL PUMP CROSS-SECTION

I. Safety relief valve – Start of opening pressure 10.1 ± 0.1 bars

Aquila Trucks Centres


Oil overpressure valve

Figure 207

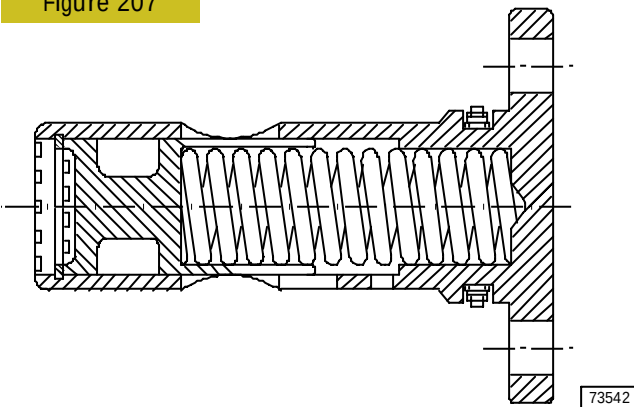

The oil overpressure valve is located on the left-hand side of the crankcase.
Start of opening pressure 5 bars.


Figure 208

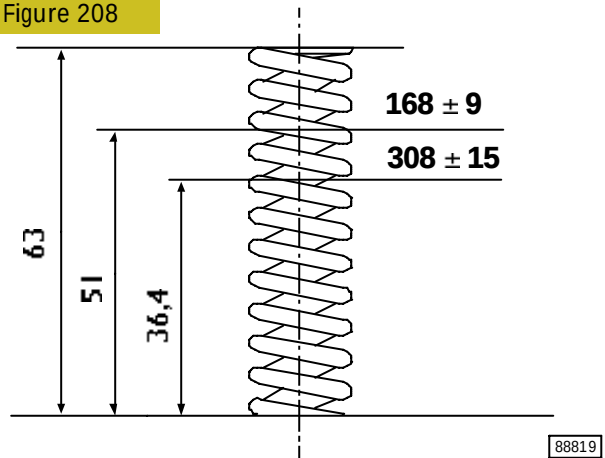

MAIN DATA TO CHECK THE OIL OVERPRESSURE
VALVE SPRING

543110 Heat exchanger

Figure 209

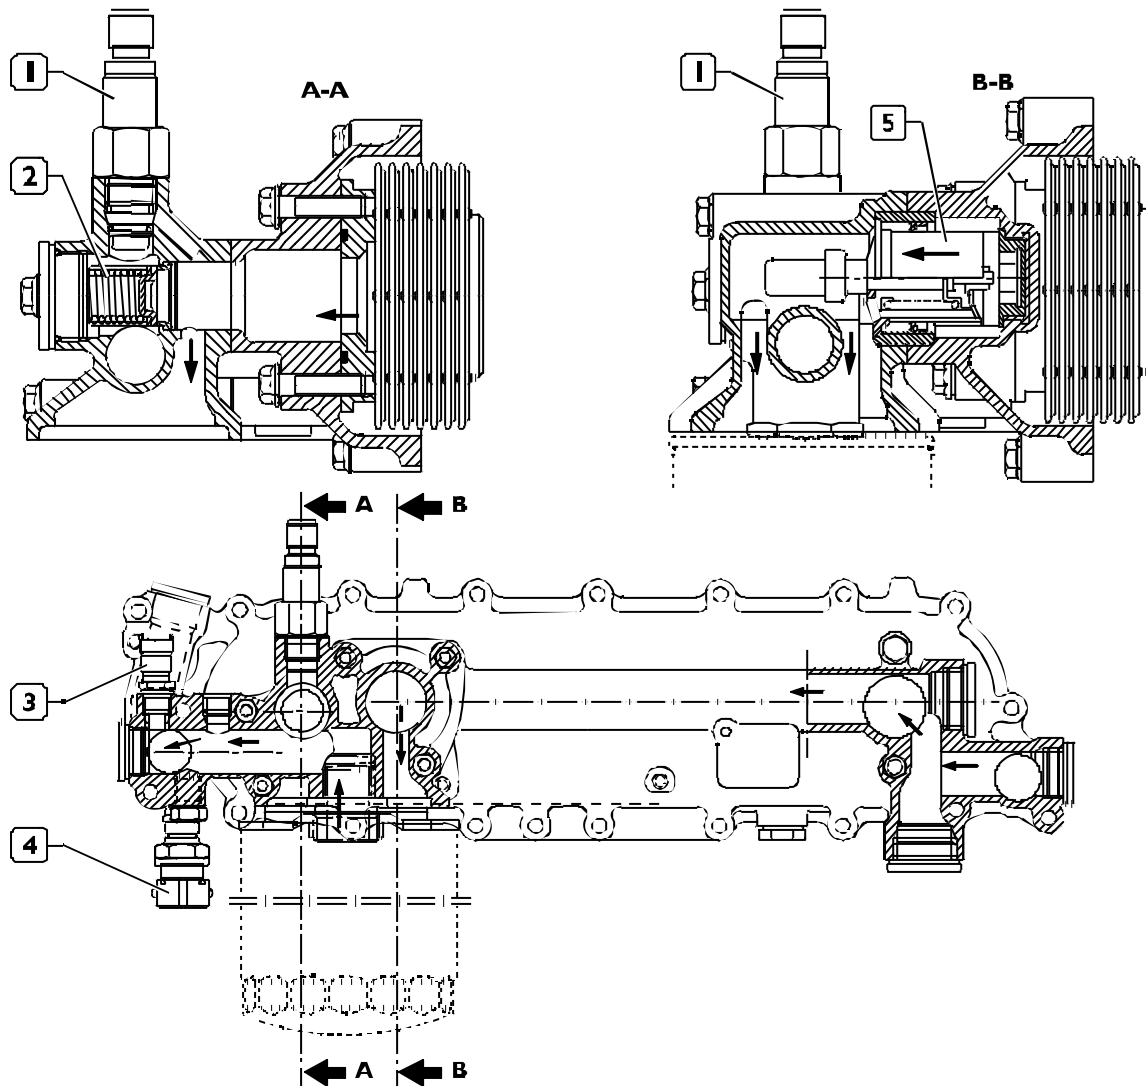


HEAT EXCHANGER

The following elements are fitted on the intercooler: 1. Transmitter for low pressure warning lamp - 2. By-pass valve - 3. Oil temperature sensor - 4. Oil pressure sensor for single gauge - 5. Heat valve. Number of intercooler elements: 7

Aquila Trucks Centres

By-pass valve


Figure 210

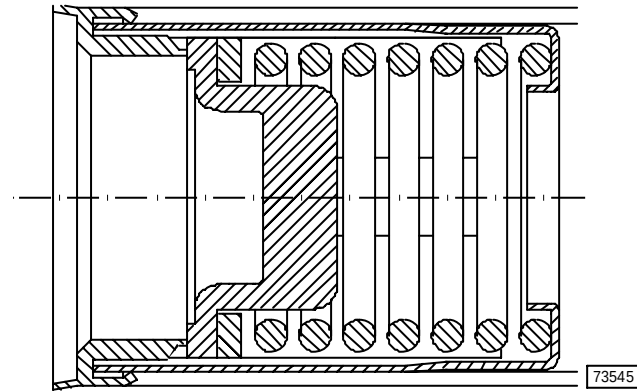

The valve quickly opens at a pressure of: 3 bars.

Thermostatic valve

Figure 211

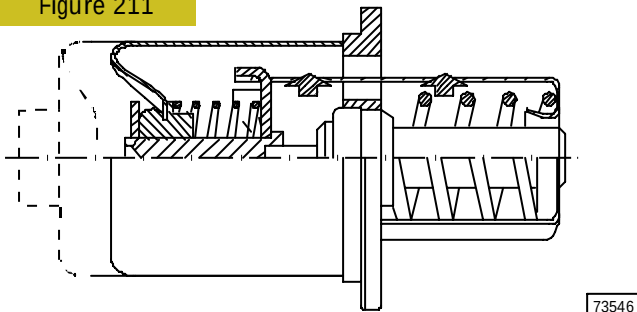

Start of opening:


- travel 0.1 mm at a temperature of $82 \pm 2^\circ\text{C}$.

End of opening:

- travel 8 mm at a temperature of 97°C .

Engine oil filters

Figure 212

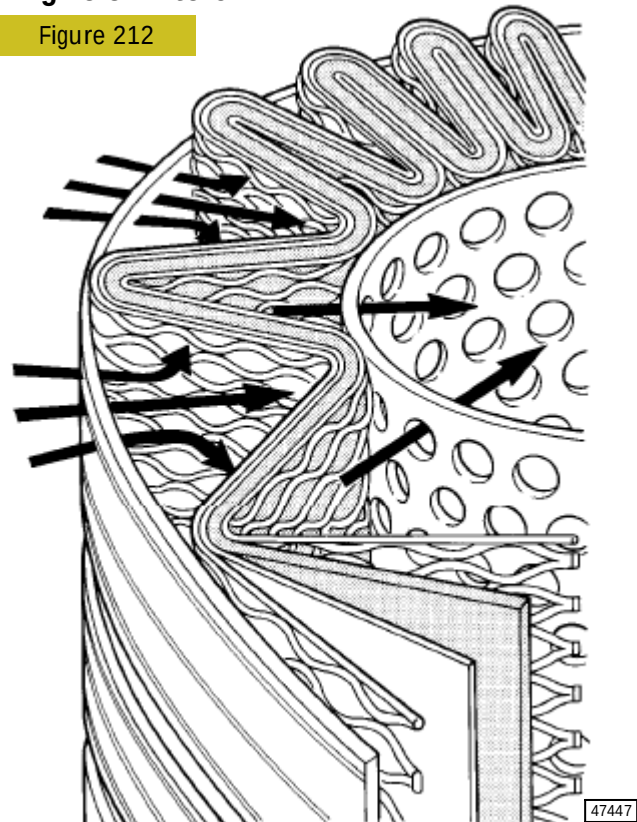

This is a new generation of filters that permit much more thorough filtration as they are able to hold back a greater amount of particles of smaller dimensions than those held back by conventional filters with a paper filtering element.

These high-filtration devices, to date used only in industrial processes, make it possible to:

- reduce the wear of engine components over time;
- maintain the performance/specifications of the oil and thereby lengthen the time intervals between changes.

External spiral winding

The filtering elements are closely wound by a spiral so that each fold is firmly anchored to the spiral with respect to the others. This produces a uniform use of the element even in the worst conditions such as cold starting with fluids with a high viscosity and peaks of flow. In addition, it ensures uniform distribution of the flow over the entire length of the filtering element, with consequent optimization of the loss of load and of its working life.

Mount upstream

To optimize flow distribution and the rigidity of the filtering element, this has an exclusive mount composed of a strong mesh made of nylon and an extremely strong synthetic material.

Filtering element

Composed of inert inorganic fibres bound with an exclusive resin to a structure with graded holes, the element is manufactured exclusively to precise procedures and strict quality control.

Mount downstream

A mount for the filtering element and a strong nylon mesh make it even stronger, which is especially helpful during cold starts and long periods of use. The performance of the filter remains constant and reliable throughout its working life and from one element to another, irrespective of the changes in working conditions.

Structural parts

The o-rings equipping the filtering element ensure a perfect seal between it and the container, eliminating by-pass risks and keeping filter performance constant. Strong corrosion-proof bottoms and a sturdy internal metal core complete the structure of the filtering element.


When mounting the filters, keep to the following rules:

- Oil and fit new seals.
- Screw down the filters to bring the seals into contact with the supporting bases.
- Tighten the filter to a torque of $35 \pm 40 \text{ Nm}$.

Aquila Trucks Centres

Valve integrated in piston cooling nozzle

Figure 213

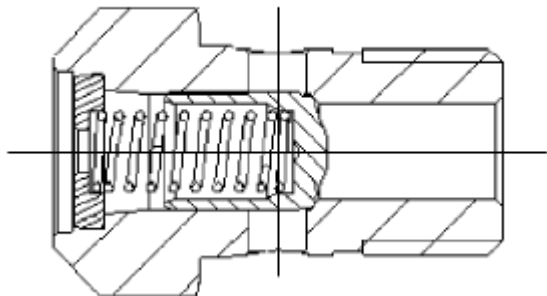

109080

The valve allows oil to enter only above the threshold pressure of 1.7 ± 0.2 bar. This permits filling the circuit and therefore lubricating the most stressed parts even when working at lower pressures.

5432 COOLING
Description

The engine cooling system works with forced circulation inside closed circuit and can be connected to an additional heater (if any) and to the intarder intercooler. It consists mainly of the following components:

- an expansion reservoir whose plug (1) incorporates two valves – discharge and charge – controlling the system pressure.
- a coolant level sensor placed at the bottom of the expansion reservoir with two coupling points.
Right drive vehicles:
D coupling point for sensor S1 6.2 litres
D coupling point for sensor S2 3.7 litres
Left drive vehicles:
D coupling point for sensor S1 6 litres
D coupling point for sensor S2 3.7 litres
- an engine cooling unit to dissipate the heat taken by the coolant from the engine through the intercooler.
- a heat exchanger to cool down lubrication oil;
- a water pump with centrifugal system incorporated in the cylinder block;
- an electric fan consisting of a 2-speed electro-magnetic joint equipped with a neutral wheel shaft hub fitted with a metal plate moving along the axis and where the fan is installed. It is controlled electronically by the vehicle Multiplex system.
- a 3-way thermostat controlling the coolant circulation.

Operation

The water pump is actuated by the crankshaft through a poli-V belt and sends coolant to the cylinder block, especially to the cylinder head (bigger quantity). When the coolant temperature reaches and overcomes the operating temperature, the thermostat is opened and from here the coolant flows into the radiator and is cooled down by the fan. The pressure inside the system depending on the temperature variation is controlled by the discharge and charge valves incorporated in the expansion reservoir filling plug (1).

The discharge valve has a double function:

- keep the system under light pressure in order to raise the coolant boiling point;
- discharge the pressure surplus in the atmosphere as a result of the coolant high temperature.

The charge valve makes it possible to transfer the coolant from the expansion reservoir to the radiator when a depression is generated inside the system as a result of the coolant volume reduction depending on the fall in the coolant temperature.

Discharge valve opening:


D 1st breather 0.9 ^{+0.2}/_{-0.1} bar

D 2nd breather 1.2 ^{+0.2}/_{-0.1} bar

Charge valve opening -0.03 ⁺⁰/_{-0.02} bar

Cap (1) tightening torque (1) 8 ± 1 Nm


Figure 214

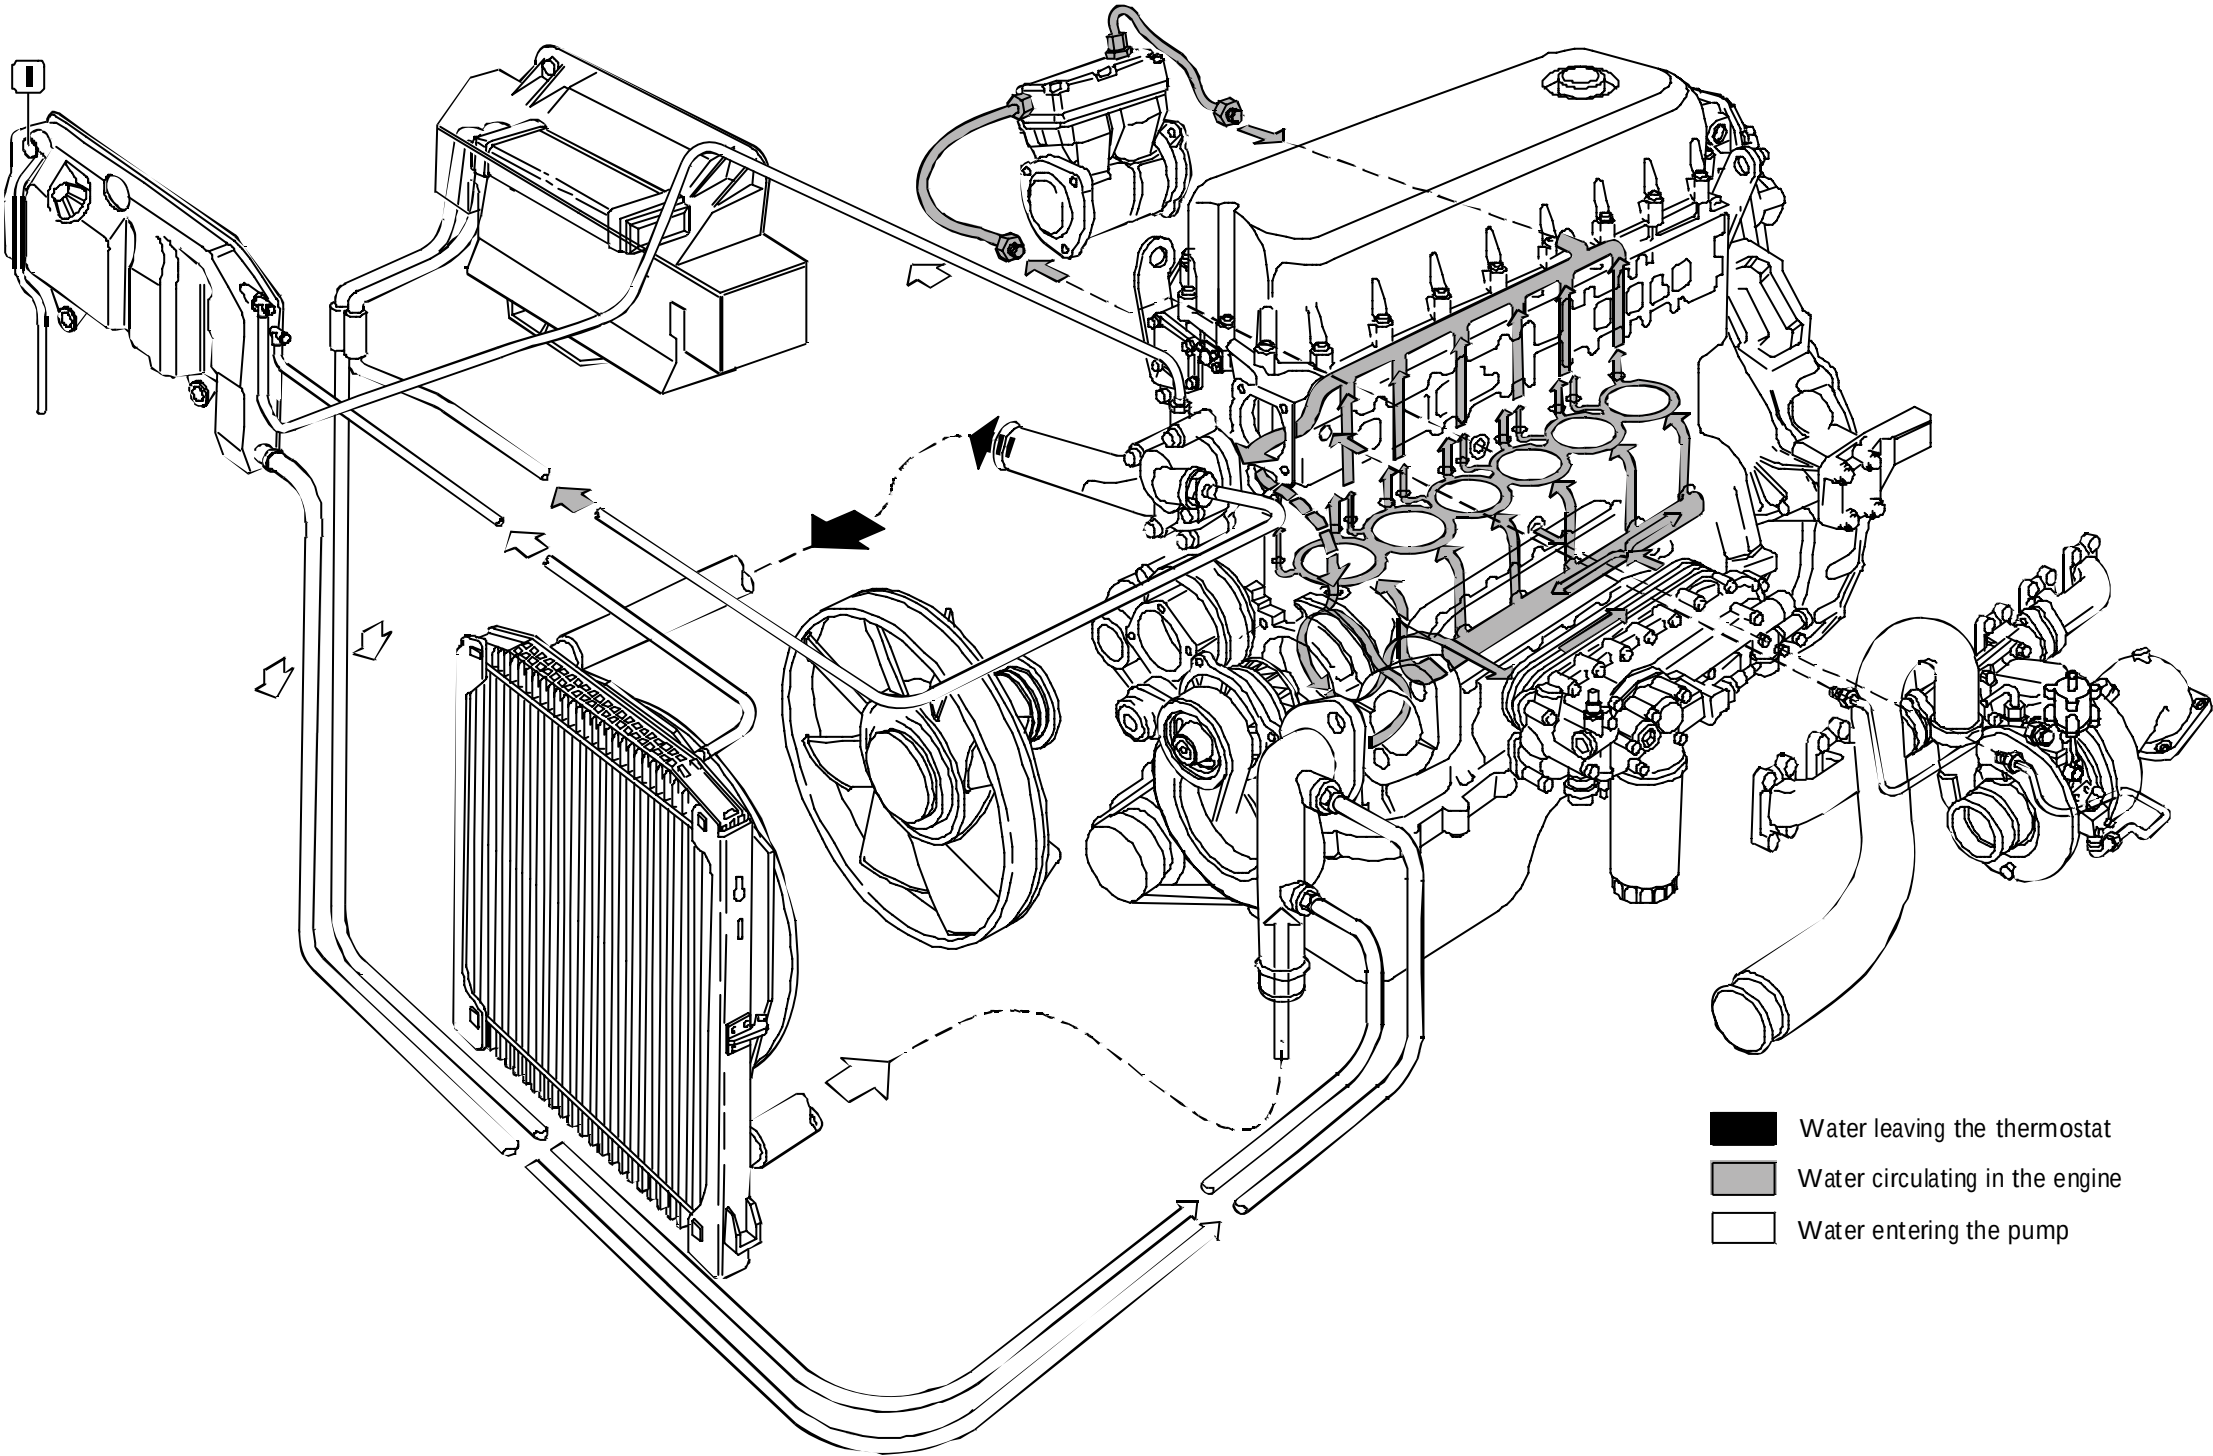

- Water leaving the thermostat
- Water circulating in the engine
- Water entering the pump


COOLING CIRCUIT VERSION WITHOUT INTARDER

Figure 215

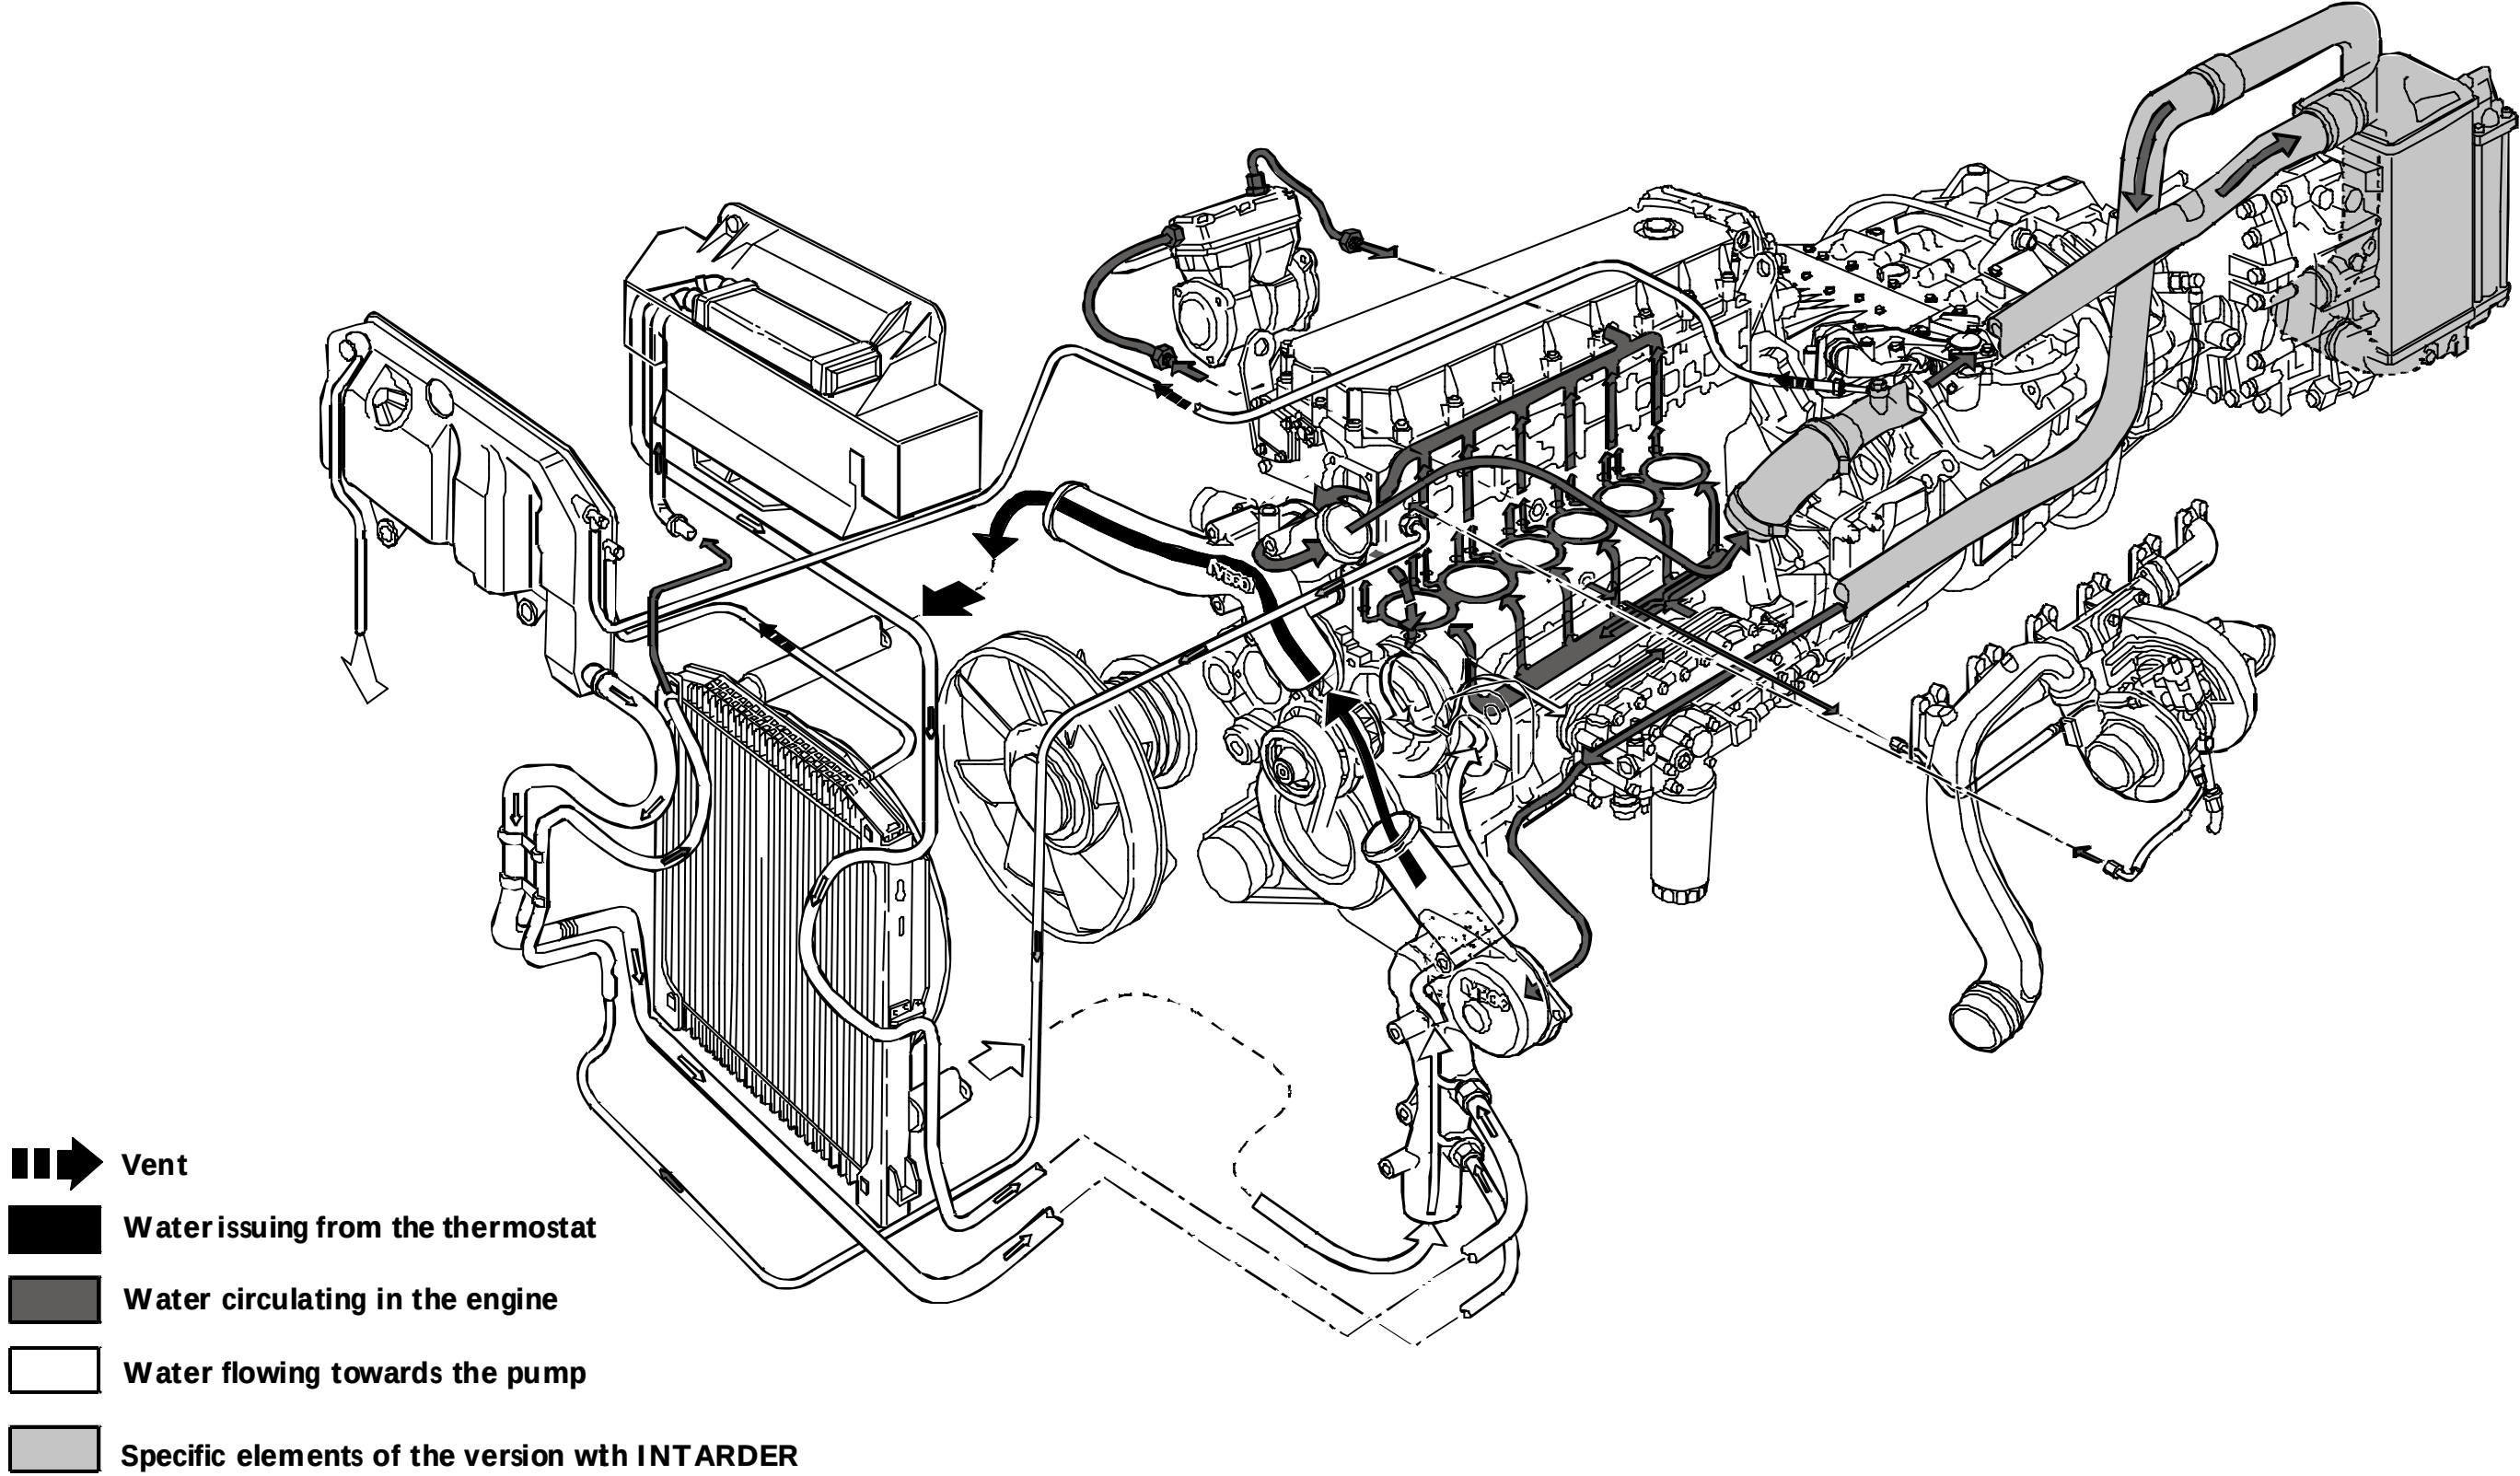

COOLING CIRCUIT VERSION WITH INTARDER

Aquila Trucks Centres

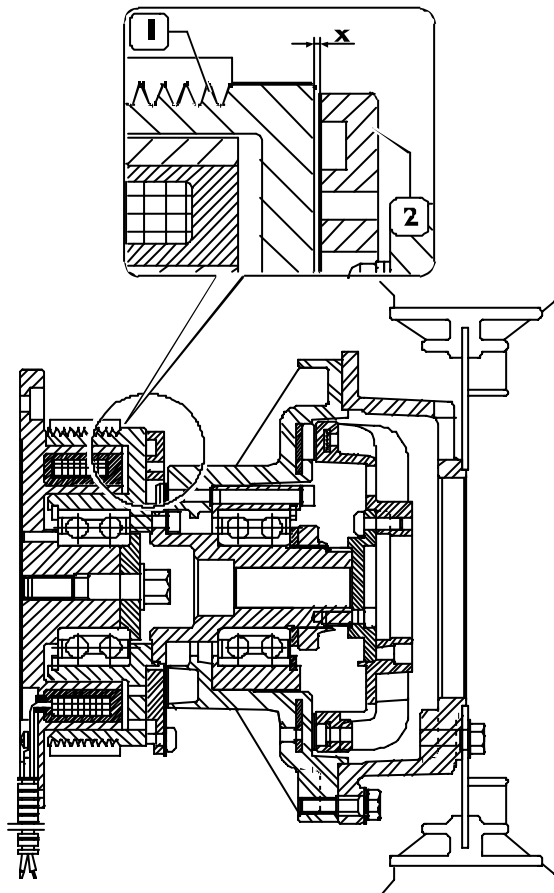543210 Electromagnetic fan drive**Figure 216**

78842

ELECTROMAGNETIC FAN DRIVE SECTION

The electro-magnetic fan drive action depends on:

- the coolant temperature;
- the climate control system fluid pressure (if any);
- the slowing down action of the interarder on (if any).

Coolant temperature for:

- engagement 93 °C
- disengagement 88 °C

With climate control system

Climate control system fluid pressure:

- 2nd speed engagement 22 bar

With interarder

With braking power below 41% of maximum power.

Coolant temperature for:

- 2nd speed engagement 93 °C
- disengagement 88 °C


With braking power over 41% of maximum power:

Coolant temperature for:


- 2nd speed engagement 85 °C
- disengagement 80 °C

Using a feeler gauge, check the gap between the anchor assembly (2) and the pulley (1), it must be no greater than 2.5 mm.

As to the description of the electro-magnetic joint operation and servicing, see the Volume 3.

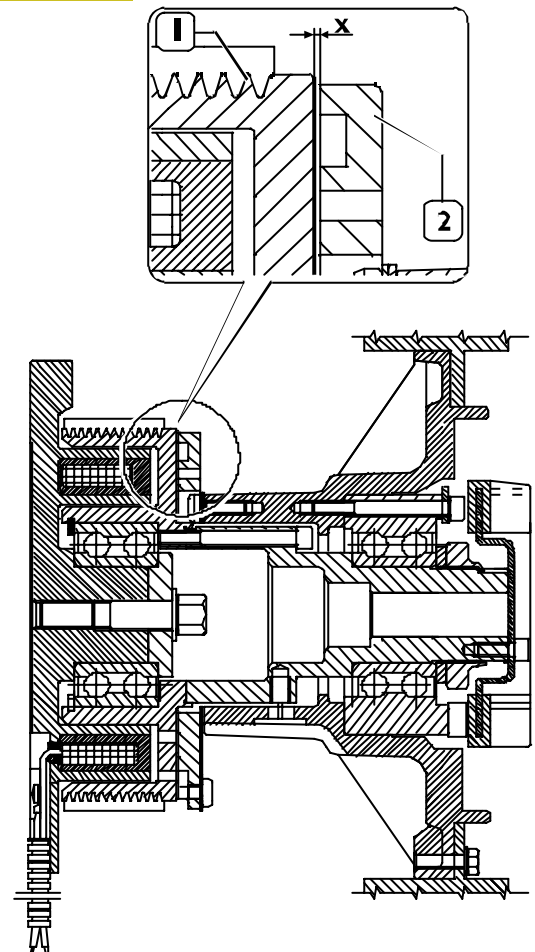Figure 217

92826

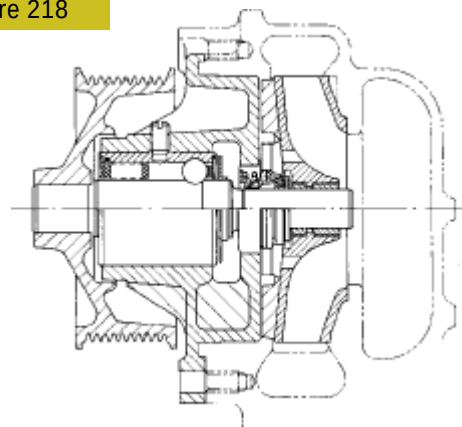ELECTROMAGNETIC FAN DRIVE SECTION**NEW VERSION****543210 Water pump****Figure 218**

44915

WATER PUMP SECTION

The water pump consists of: rotor, seal bearing and control pulley.


NOTE Make sure that the pump casing has no cracking or water leakage; otherwise, replace the entire pump.

Aquila Trucks Centres

543250 Thermostat


THERMOSTAT OPERATION VIEW

Figure 219

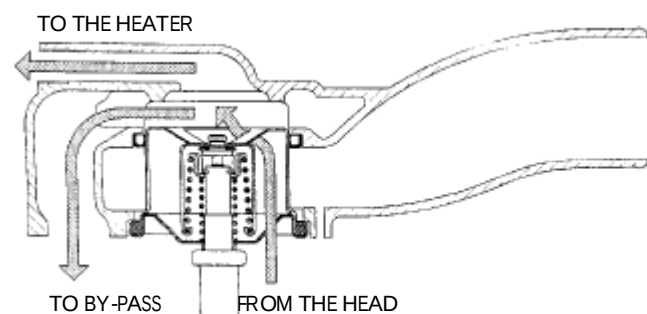

Water circulating in the engine

Figure 220

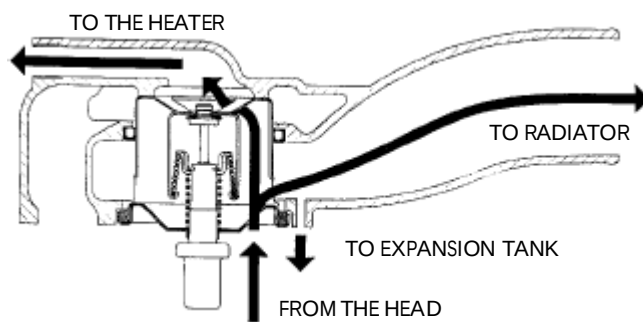

Water issuing from thermostat


Check the thermostat works properly; replace it if in doubt.

Temperature of start of travel $84^{\circ}\text{C} \pm 2^{\circ}\text{C}$.Minimum travel 15 mm at $94^{\circ}\text{C} \pm 2^{\circ}\text{C}$.

Aquila Trucks Centres

VIEWS OF RADIATOR THERMOSTAT OPERATION FOR GEARBOX WITH INTARDER

Figure 221

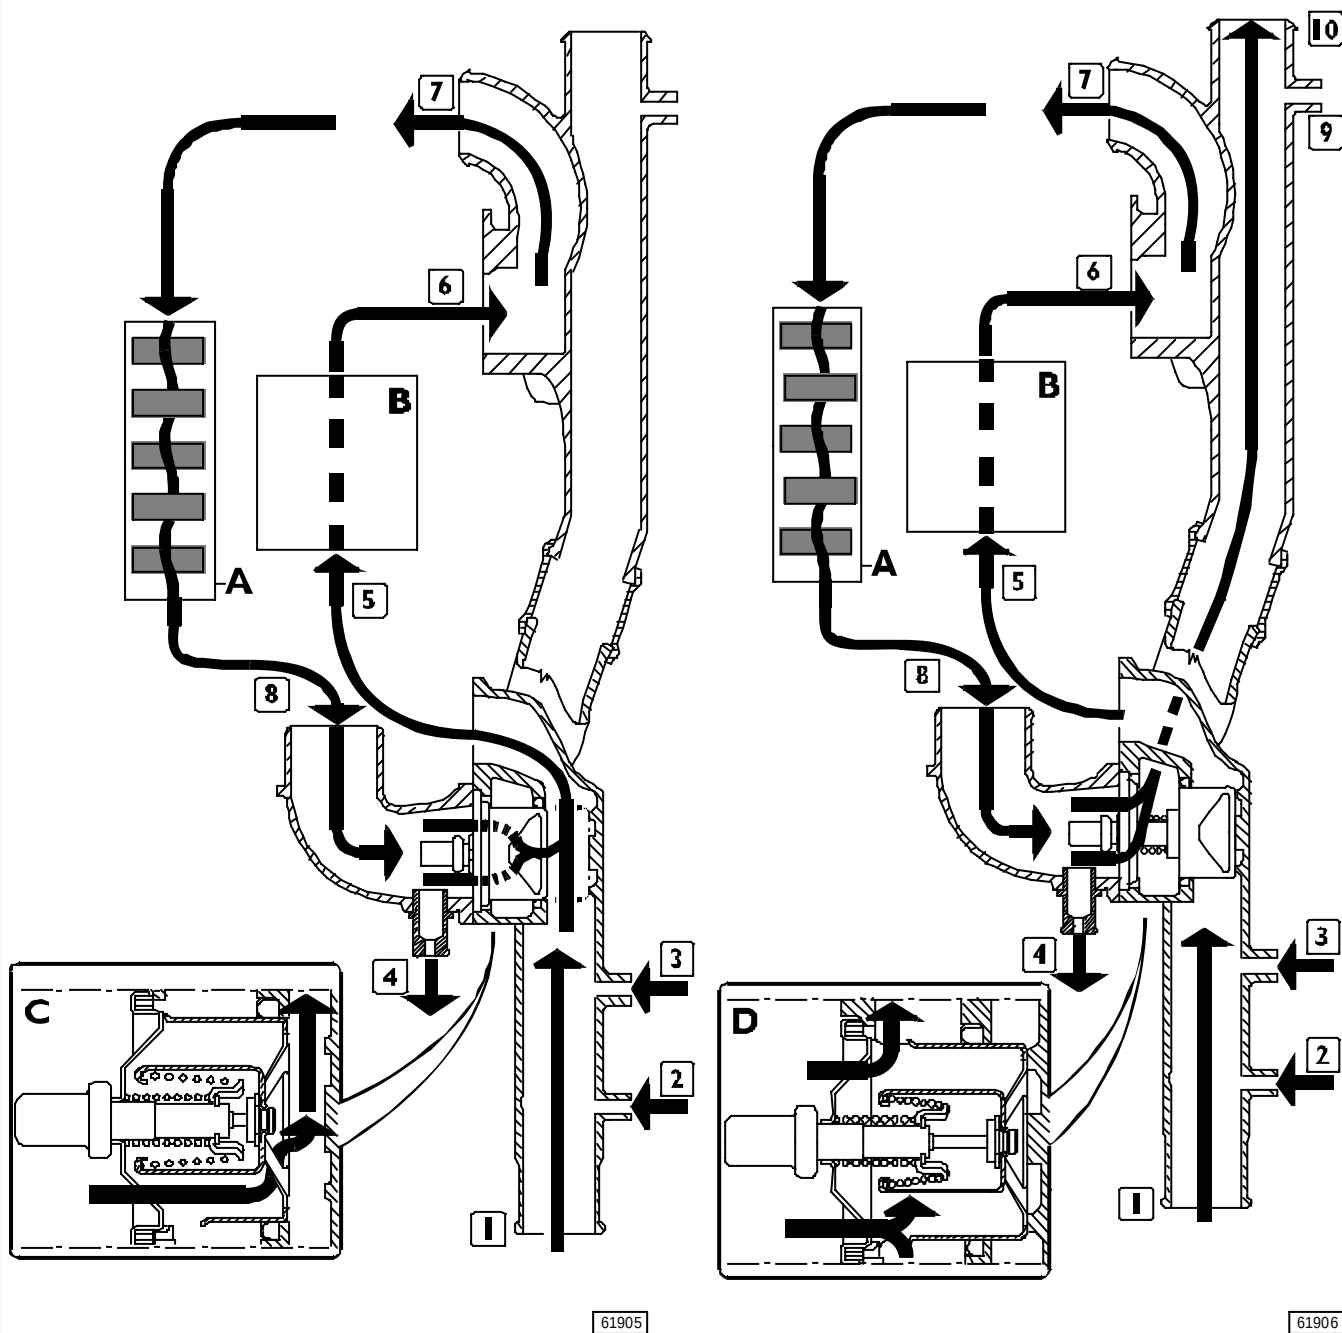

SYSTEM WITH THERMOSTAT OFF

SYSTEM WITH THERMOSTAT ON

A. Gearbox heat exchanger - B. Engine - C. Thermostat closed - D. Thermostat open - 1. Inlet from radiator - 2. Return from cabin heater - 3. Inlet from header tank - 4. Delivery to cabin heater - 5. To engine water pump - 6. Outlet from the head - 7. Delivery to gearbox heat exchanger - 8. Return from heat exchanger to thermostat - 9. Engine re-circulation (breather) to header tank - 10. Delivery to radiator.


Aquila Trucks Centres

5424 TURBOCHARGING

The turbocharging system consists of:

- air filter;
- A turbocharger with fixed geometry (330CV and 360CV engines) or with variable geometry (310CV engines);
- "intercooler" radiator.

Figure 222

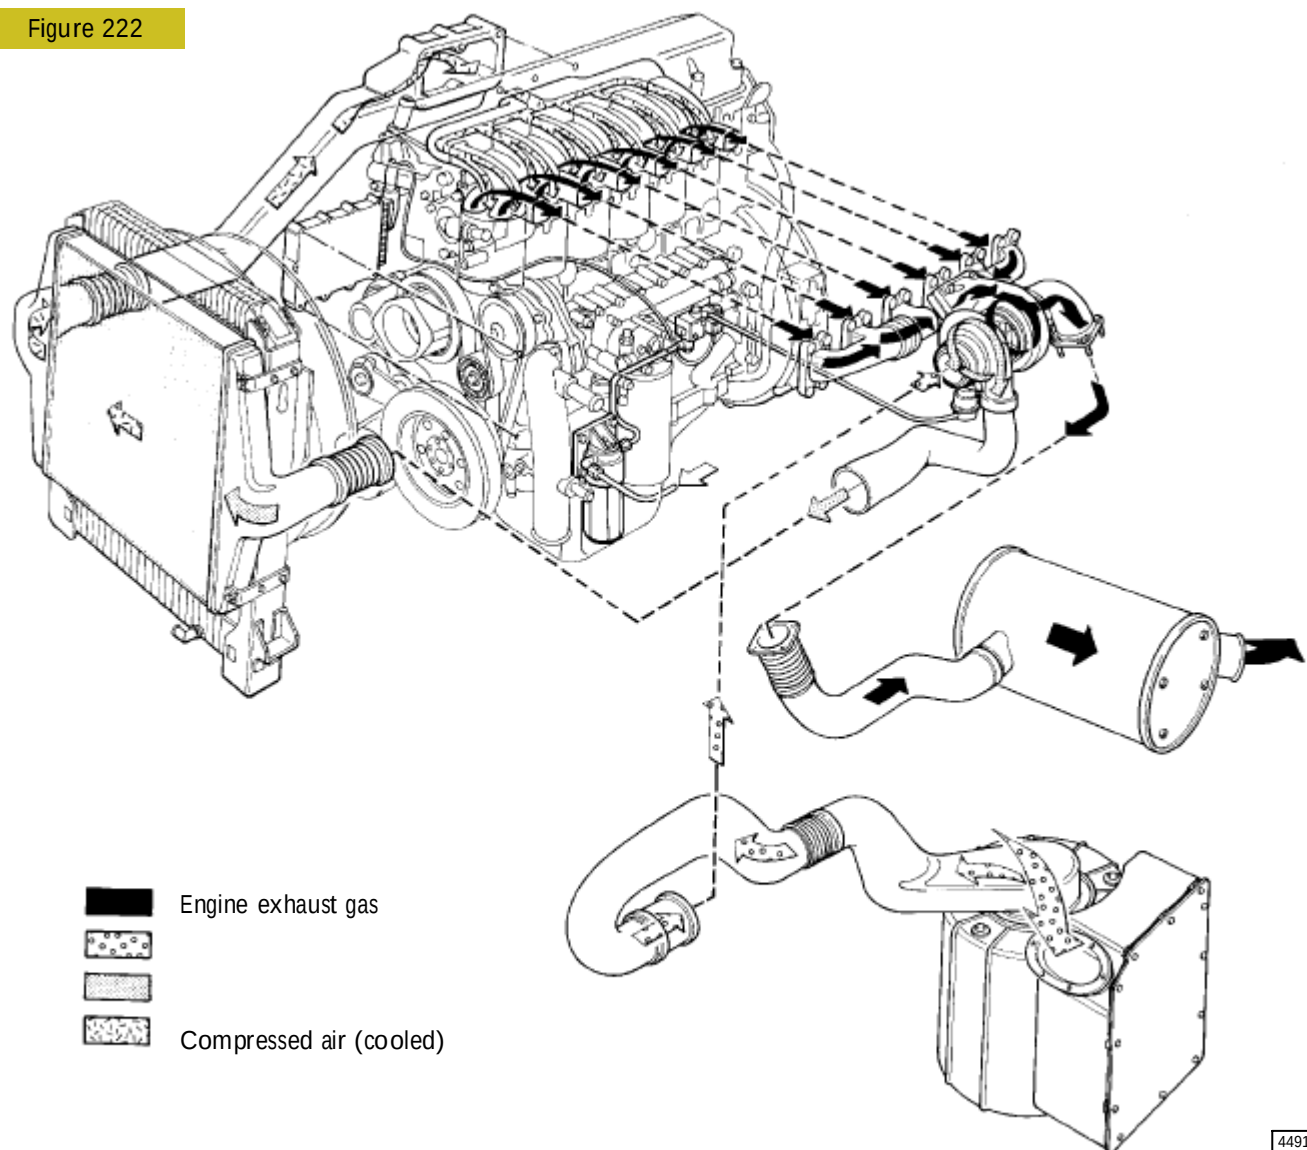

44916

DIAGRAM OF SUPERCHARGING WITH THE VGT TURBOCHARGER

VGT TURBOCHARGER**Operating principle**

The variable geometry turbocharger (VGT) consists of a centrifugal compressor and a turbine, equipped with a mobile device which adjusts the speed by changing the area of the passing section of exhaust gases to the turbine.

Thanks to this solution, gas velocity and turbine speed can be high even when the engine is idling.

If the gas is made to go through a narrow passage, in fact, it flows faster, so that the turbine rotates more quickly.

The movement of the device, choking the exhaust gas flowing section, is carried out by a mechanism, activated by a pneumatic actuator.

This actuator is directly controlled by the electronic control unit by a proportional solenoid valve.

The device is in maximum closing condition at idle speed.


At high engine operating speed, the electronic control system is activated and increases the passing section, in order to allow the in-coming gases to flow without increasing their speed.

A toroidal chamber is obtained during the casting process in the central body for the passage of the coolant.

Aquila Trucks Centres


Actuator

Figure 223

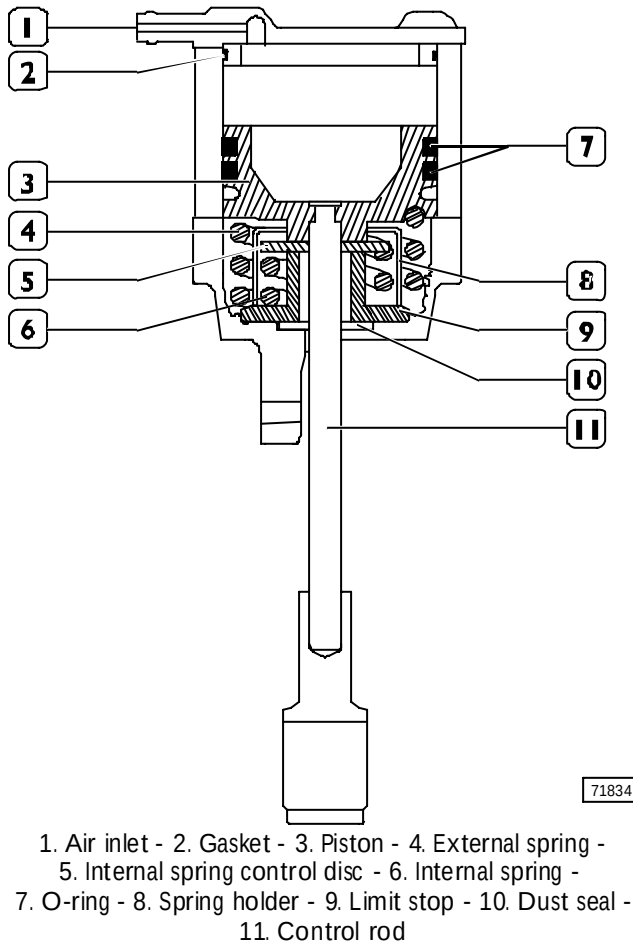

71834

Figure 224

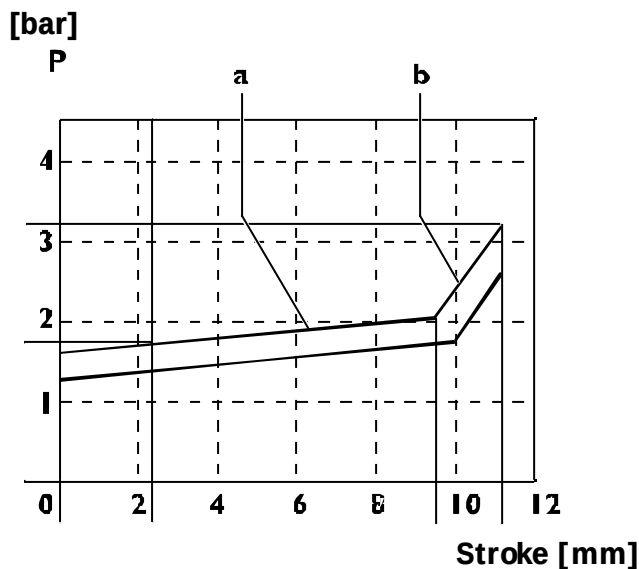

72421

- a Gradient characterized by the effect of the external spring (4, Figure 223).
- b Gradient characterized by the effect of the external (4, Figure 223) and internal (6) springs.

Working principle (See Figure 223)

The actuator piston, connected to the drive rod, is controlled with the compressed air introduced through the air inlet (1) on the top of the actuator.

Modulating the air pressure varies the movement of the piston and turbine control rod. As the piston moves, it progressively compresses the external spring (4) until the base of the piston reaches the disc (5) controlling the internal spring (6).

On further increasing the pressure, the piston, via the disc (5), interferes with the bottom limit stop (10).

Using two springs makes it possible to vary the ratio between the piston stroke and the pressure. Approximately 85% of the stroke of the rod is opposed by the external spring and 15% by the internal one.

Solenoid valve for VGT control

This N.C. proportional solenoid valve is located on the left-hand side of the crankcase under the turbine.

The electronic control unit, via a PWM signal, controls the solenoid valve, governing the supply pressure of the turbine actuator, which, on changing its position, modifies the cross-section of the flow of exhaust gases onto the blades of the impeller and therefore its speed.

The resistance of the coil is approx. 20-30 Ohms.

REPAIRING ACTIONS

NOTE If anomalous engine operation is found, which is due to the boosting system, it is advisable that you check the efficiency of seal gaskets and the fastening of connecting sleeves prior to carrying out the checks on the turboblower. Also check for obstructions in the sucking sleeves, air filter. If the turbocharger damage is due to a lack of lubrication, check that the oil circulation pipes are not damaged. If so, change them or eliminate the cause.

After carrying out the above mentioned checks, check the turbocharger operation with an Engine Test by using IVECO diagnosis equipment (Modus - IT 2000 - E.A.S.Y.) according to the relevant procedure.

NOTE The test must be performed in following conditions:

- engine coolant temperature >50 °C;
- battery up (voltage >22V) for compression test;
- efficient recharging system.


If values beyond tolerance are detected, check the efficiency of:

- shut-off valve;
- pressure sensor;
- engine cable pressure sensor connection (if oxidised, clean with a specific product);
- lack of electrical defects in solenoid valve VGT (continuity connection);
- actuator moved by active diagnosis as described in relating chapter, in case of locking, grease bushing with lubricant Kernite (for high temperatures); if the trouble persists, replace the actuator;
- sliding sleeve: it must slide freely when operated manually. If locked and if the bush check is not sufficient or effective, or no faults are detected in the other points, upon authorization of the "Help Desk" market operator, change the turbocharger according to the standard procedures.

Aquila Trucks Centres

Variable geometry movement control

Figure 225

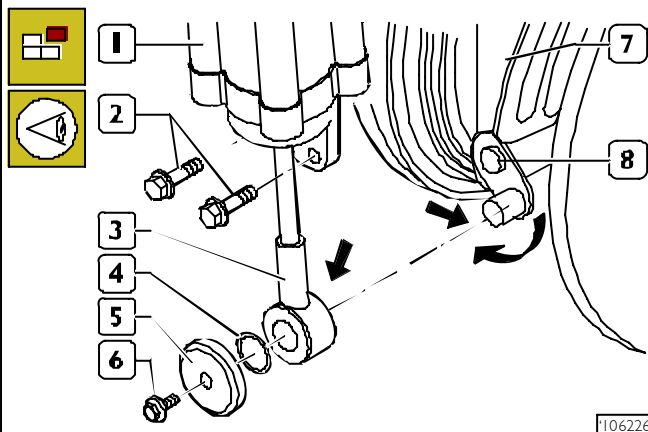

Remove screws (2) and take actuator (1) off turbocompressor (7).

Remove screw (6), underlying disk (5), ring (4) and disconnect tie rod (3) of actuator (1) from the pin of variable geometry driving lever (8).

Accurately clean pin (→) of lever (8) and bushing (→) of tie rod (3) using a cloth made of non abrasive micro fibre.


NOTE Do not use abrasive paper of any kind.

Visually check the conditions of bushing (→) of tie rod (3) and pin (→) of lever (8); where they are found to be worn out, replace actuator (1) or turbocompressor (7).

Check variable geometry inner driving mechanism movement by operating on lever (8); jamming must not occur; otherwise, clean turbine body, as described in relating chapter.

Checking the actuator


Figure 226

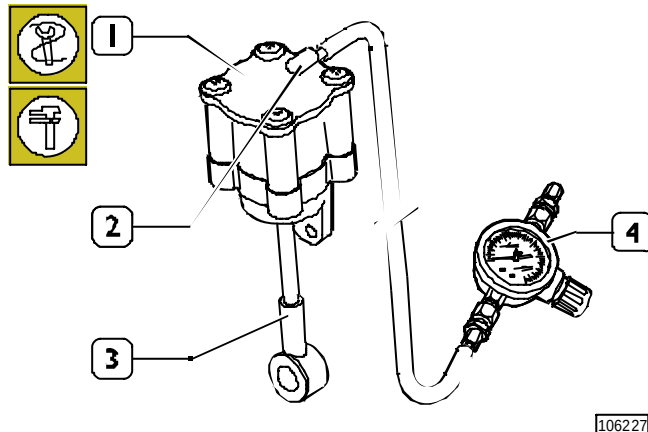

Check actuator efficiency (1) operating as follows.

Apply, to fitting (2) of actuator (1), compressed air feed piping provided with pressure regulator (4). By using the pressure regulator, introduce, into the actuator, compressed air slowly modulating it, from 0 ÷ 3.5 bar; tie rod (3) of actuator (1) must move without jamming; otherwise, replace actuator (1).

Figure 227

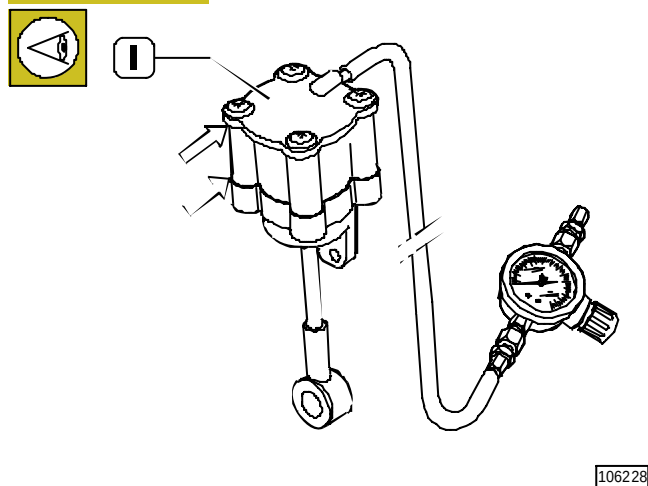


Check for any actuator leaks at indicated points (→) applying, on these points, a solution of suds.

When actuator (1) is fed with compressed air, no bubbles must be found at indicated points (→); otherwise, replace actuator (1).

Aquila Trucks Centres


Figure 228

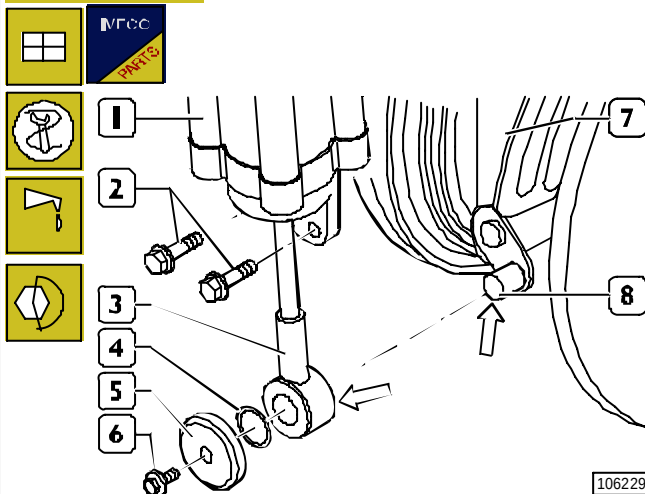

Lubricate bushing (→) of tie rod (3) and pin (→) of lever (8) with lithium-based Castrol LM GREASE type and reconnect actuator (1) to turbocompressor (7) operating as follows. Connect tie rod (3) to lever (8). Mount new ring (4), mount disk (5) and screw up screw (6). Screw up screws (2) securing actuator (1) to turbocompressor (7). Tighten screws (2 and 6) at 25 Nm torque.

Checking actuator travel


Figure 229

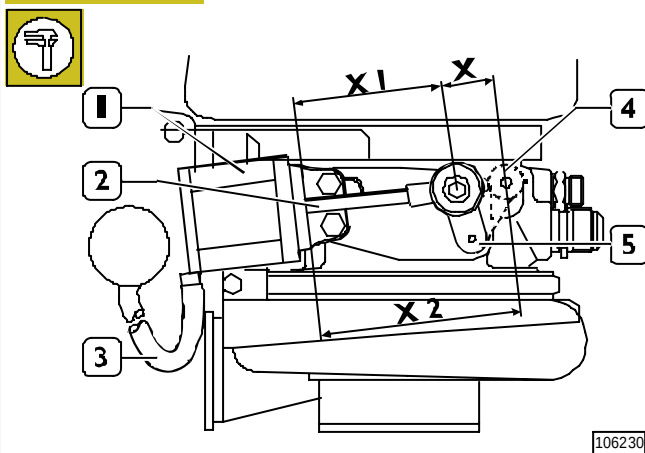

Check travel X of tie rod (2) of actuator (1) operating as follows. Measure distance X1 between actuator (1) and cross-axis of eyelet (4). Apply, to fitting of actuator (1), piping (3) for compressed air feed provided with pressure regulator. By using the pressure regulator, introduce, into actuator (1) compressed air slowly modulating it, from 0 ÷ 3,5 bar, until lever (5) is taken to its end of travel. Measure again the distance between actuator (1) and cross-axis of eyelet (4) dimension X2. Travel X of tie rod (2) of actuator (1) is given by following subtraction $X = X2 - X1$ and must result to be equal to 11.5 ± 0.5 mm.


Cleaning turbine body

Figure 230

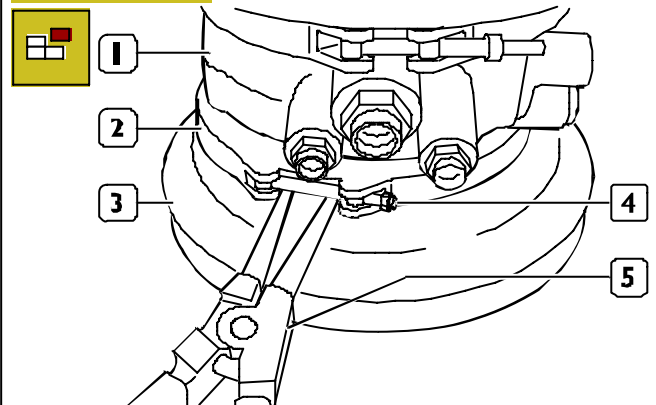

Mark mounting position of clamp (2) on central body (1). On threading and nut (4), apply antioxidant spray lubricant and, operating on nut (4), loosen clamp (2). Slightly rotate clamp (2) using pliers (5). Mark mounting position of turbine body (3) on central body (1).

Figure 231

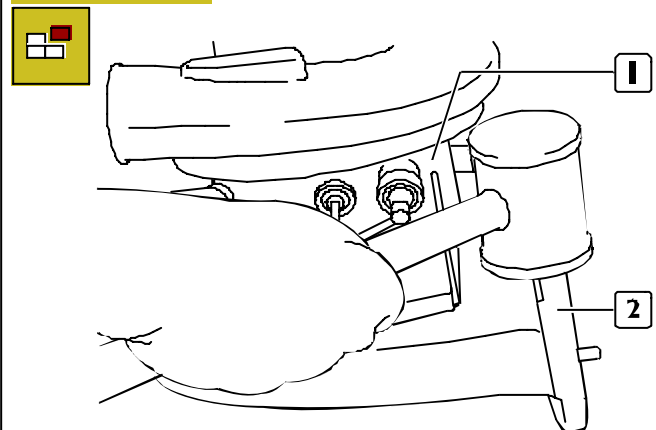


By a copper hammer, beat on two opposite points (~180°) on turbine body (2) to separate turbine body from central body (1).

NOTE In operation, take particular care to avoid damaging turbine rotor.

After dismounting turbine body, check variable geometry movement as described in relating chapter; where improvement in movement is not found with respect to previous check, replace turbocompressor.

Aquila Trucks Centres


Figure 232

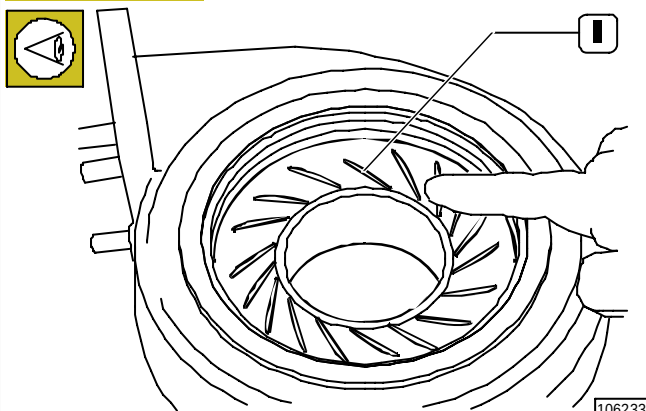

Accurately clean slot ring (1) and area around turbine body from carbonaceous deposits and check that the ring moves freely, otherwise, replace turbocharger.


NOTE Any small cracks between slots and ring can be accepted, because they do not impair turbocharger operation conditions.

Figure 233

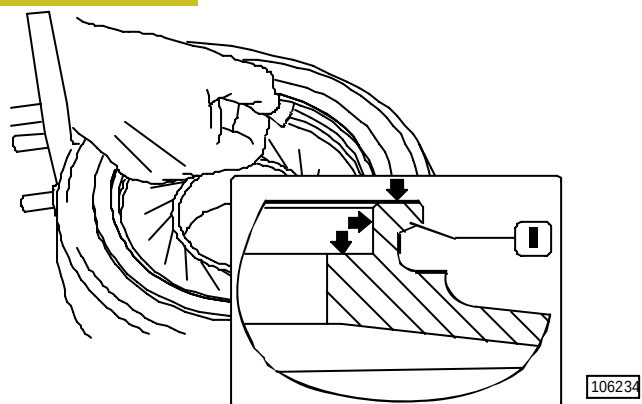


By suitable scraper and abrasive paper, accurately clean surfaces (→) of turbine body (1) from carbonaceous deposits, taking care to avoid damaging the surfaces.

Figure 234

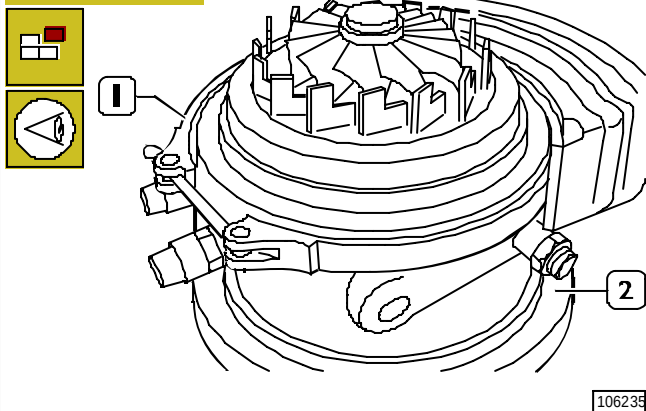


Dismount clamp (1) from central body (2) and check that the clamp does not result to be damaged; otherwise replace the clamp.

Figure 235

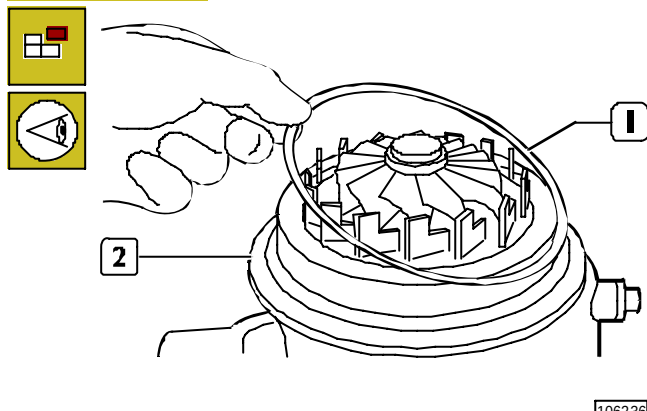

Dismount seal ring (1), external with respect to central body (2).
Accurately clean seal ring (1) and check that the ring does not result to be damaged; otherwise replace the ring.

Figure 236

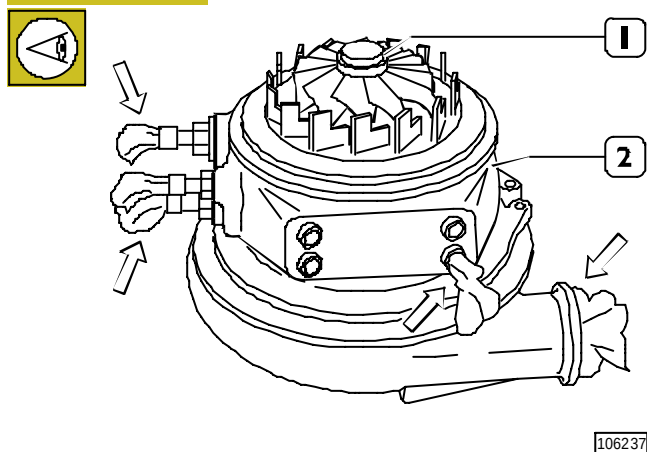

Check turbine rotor (1); there must not be found: carbonaceous deposits, deformation, cracks, blade scoring; also, turbine must turn freely.

By comparator, check clearance of turbine rotor stem (1); clearance must result to be:


- axial clearance: 0.025 ± 0.127 mm
- radial clearance: 0.254 ± 0.356 mm.

Where either clearance values over above ones or any one of above mentioned faults are found, replace turbocharger.

NOTE Before cleaning turbine side central body, properly protect oil, water and air inlets and outlets (→) in order to prevent dirt or foreign bodies from entering turbocharger.

Aquila Trucks Centres

Figure 237

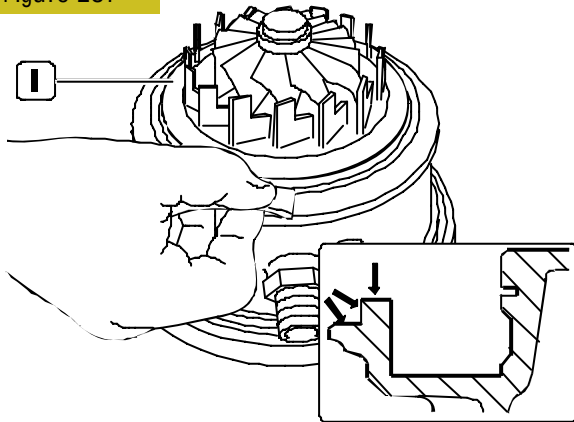

106238


By suitable scraper and abrasive paper, accurately clean surfaces (→) of central body (1) from carbonaceous deposits, taking care to avoid damaging the surfaces and variable geometry ring.

Then, with compressed air, clean variable geometry surfaces and ring from removed residues.

Check again, as described in relating chapters:

- variable geometry movement;
- actuator;
- actuator travel.

Figure 238

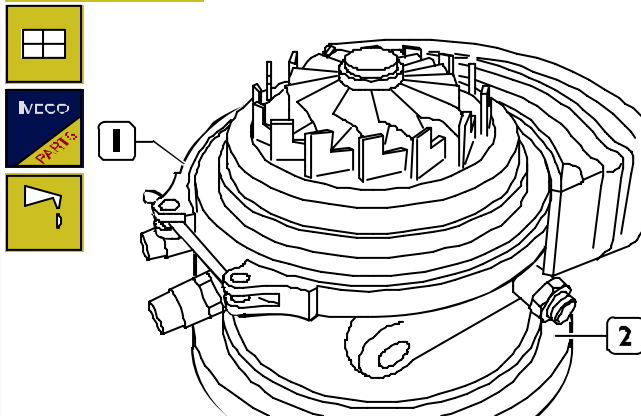


106235

Position clamp (1) on central body (2)

NOTE Should clamp (1) be replaced with an integrated heat guard, a new actuator has to be mounted with an integrated heat guard at the place of existing one.

Position accurately cleaned seal ring on central body. Apply a thin layer of antiscuff paste on cleaned matching surfaces: central body / turbine body.

Figure 239

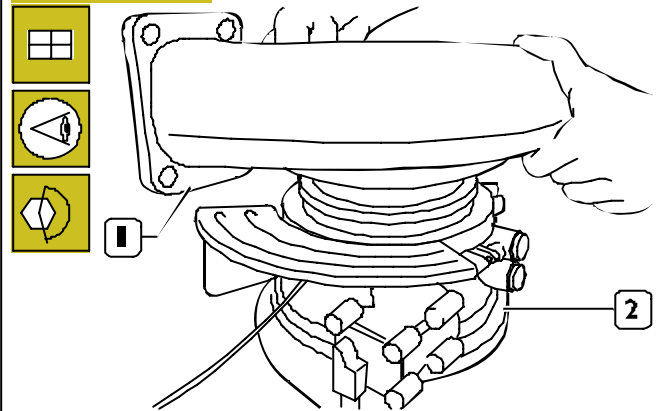

106240

Mount turbine body (1) on central body (2) taking care to avoid damaging turbine rotor and align turbine body variable geometry slot ring. Do not force mounting operation: in case of jamming, it might damage variable geometry with consequent regulation system faulty operation.

Once mounting has been completed, make sure that turbine body results to be matched correctly on central body.

Position turbine body on central body and clamp on central body in such a way that marks, made on dismounting, are matching.

Tighten nut clamping the clamp at 11.3 Nm torque.

Check again, as described in relating chapters:


- actuator;
- actuator travel.

Aquila Trucks Centres

FUEL SYSTEM

Fuel is supplied via a fuel pump, filter and pre-filter, 6 pump-injectors governed by the camshaft via rocker arms and by the electronic control unit.

Figure 240

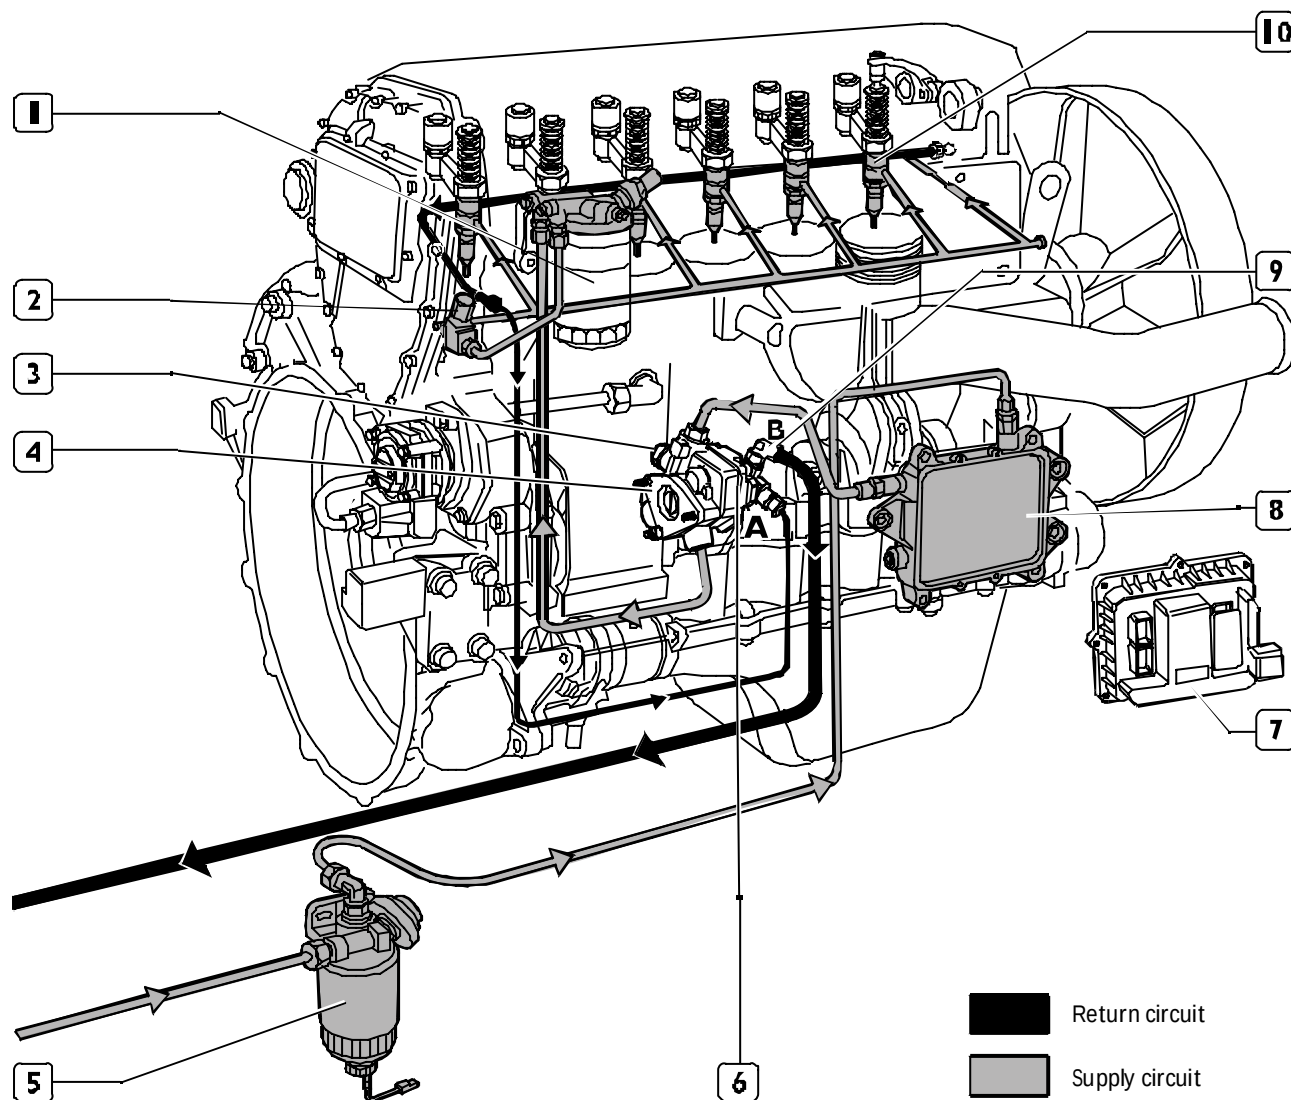

115265

ENGINE FEED SCHEME


1. Fuel filter - 2. Pressure damping device - 3. Pressure control valve (start of opening at 5 bar) - 4. Feed pump - 5. Fuel pre-filter with priming pump - 6. Valve, to recirculate fuel from injectors, integrated in feed pump (start of opening at 3.5 bar) - 7. Central unit - 8. Heat exchanger - 9. One-way valve to return fuel to tank (start of opening at 0.2 bar) - 10. Pump injectors

A. Fuel arriving at injectors - B. Fuel returning to tank

Aquila Trucks Centres

Overpressure valve


Figure 241

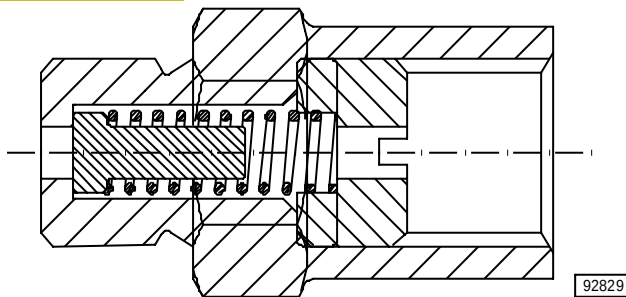

An overpressure valve is a single-acting valve, calibrated to $0.2 \div 0.3$ bar, placed on the piping that returns fuel to tank. The overpressure valve prevents fuel duct in cylinder head from emptying with engine stopped.

Feed pump

Figure 242

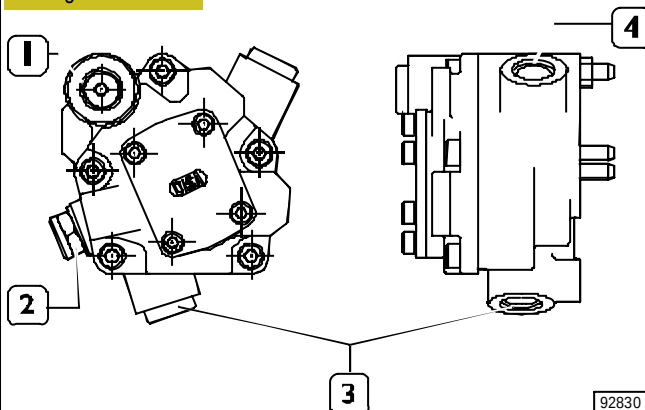

Fuel pump fitted onto the power steering pump
1. Overpressure valve - 2. Delivering fuel to injectors -
3. Sucking in fuel - 4. Pressure control valve


Pump performances					
Pump rotation speed (rpm)		2600	600	170	100
Minimum flow rate (l/h)		310	45	12	
Test conditions	Negative pressure on aspiration (bar)	0.5	0.3	0.3	0.3
	Pressure on delivery (bar)	5	3	0.3	0.3
	Test liquid temperature (°C)	30	30	30	30
	Test liquid	ISO 4113			

Field of use	
Pump rotation speed (rpm)	2600
Overrunning rotation speed (max 5 min) (rpm)	4100 max
Diesel oil temperature (°C)	-25/+80
Filtering rate on aspiration (micron)	30
Negative pressure on aspiration (bar)	0.5 max

Pressure control valve	
Valve calibration	$5 \div 8.8$

Injectors return valve	
Valve calibration	$3.2 \div 3.8$


Figure 243

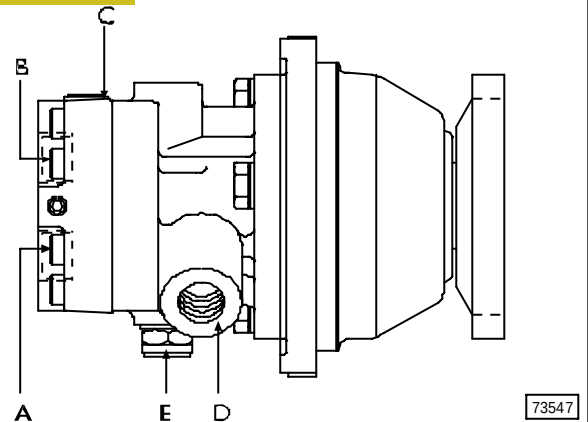

Fuel pump fitted onto the camshaft drive

A. Fuel inlet – B. Fuel delivery – C. By-pass nut –
D. Fuel return from the pump-injectors –
E. Pressure relief valve – Opening pressure: 5-8 bars

Figure 244

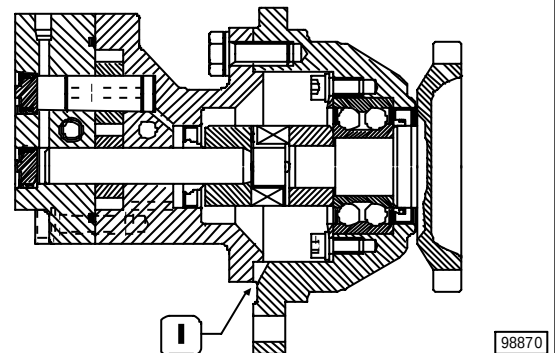

SECTION ON FEED PUMP
1. Oil and fuel leaks indicator

Pump performances					
Pump rotation speed (rpm)		4100	900	250	140
Minimum flow rate (l/h)		310	45	12	6
Test conditions	Negative pressure on aspiration (bar)	0.5	0.3	0.3	0.3
	Pressure on delivery (bar)	5	3	0.3	0.3
	Test liquid temperature (°C)	50	50	50	20
	Test liquid	ISO 4113			

Field of use	
Pump rotation speed (rpm)	4100
Overrunning rotation speed (max 5 min) (rpm)	5800 max
Diesel oil temperature (°C)	-25/+80
Filtering rate on aspiration (micron)	0.5 max
Negative pressure on aspiration (bar)	-25/+120


Pressure control valve	
Valve calibration	$5 \div 5.8$

Injectors return valve	
Valve calibration	$3.4 \div 3.8$

Aquila Trucks Centres

Injector-pump

Figure 245

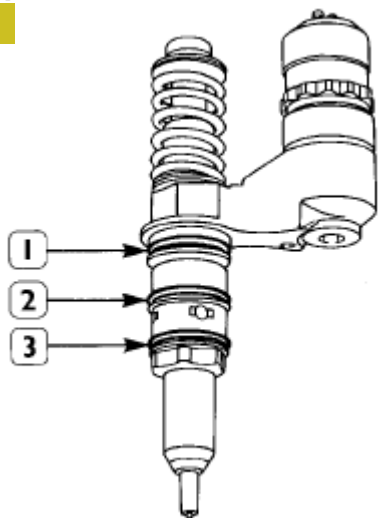

44908

1. Fuel/oil seal – 2. Fuel/diesel seal – 3. Fuel/exhaust gas seal

The injector-pump is composed of: pumping element, nozzle, solenoid valve.

Plunger

The plunger is operated by a rocker arm governed directly by the cam of the camshaft.

The plunger is able to ensure a high delivery pressure. The return stroke is made by means of a return spring.

Nozzle

Garages are authorized to perform fault diagnosis solely on the entire injection system and may not work inside the injector-pump, which must only be replaced.

A specific fault-diagnosis program, included in the control unit, is able to check the operation of each injector (it deactivates one at a time and checks the delivery of the other five).

Fault diagnosis makes it possible to distinguish errors of an electrical origin from ones of a mechanical/hydraulic origin. It indicates broken pump-injectors.

It is therefore necessary to interpret all the control unit error messages correctly.

Any defects in the injectors are to be resolved by replacing them.

Solenoid valve

The solenoid, which is energized at each active phase of the cycle, via a signal from the control unit, controls a slide valve that shuts off the plunger delivery pipe.

When the solenoid is not energized, the valve is open, the fuel is pumped but it flows back into the return pipe with the normal transfer pressure of approximately 5 bars.

When the solenoid is energized, the valve shuts and the fuel, not being able to flow back into the return pipe, is pumped into the nozzle at high pressure, causing the needle to lift.

The amount of fuel injected depends on the length of time the slide valve is closed and therefore on the time for which the solenoid is energized.

The solenoid valve is joined to the injector body and cannot be removed.

On the top there are two screws securing the electrical wiring from the control unit.


To ensure signal transmission, tighten the screws with a torque wrench to a torque of 1.36 – 1.92 Nm (0.136 – 0.192 kgm).

775010 Replacing injectors-pump

Injectors have to be replaced with great care (for their removal see the description on pages 51 and 52, for fitting them see the description on pages 93 and 94).

NOTE If this job is done with the engine on the vehicle, before removing the injectors-pump drain off the fuel contained in the pipes in the cylinder head by unscrewing the delivery and return fittings on the cylinder head.

Figure 246

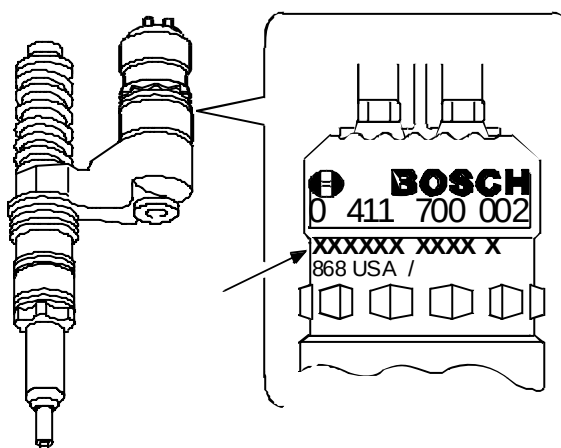

87060


For each replaced injector, connect to MODUS or IT2000 station or to E.A.S.Y: then, when required by the program, enter the code, that is stamped on the injector (→), for reprogramming the central unit.

NOTE When checking the clearance of the rocker arms, it is important to check the injector-pump pre-load.

Aquila Trucks Centres

Injector Phases

Figure 247

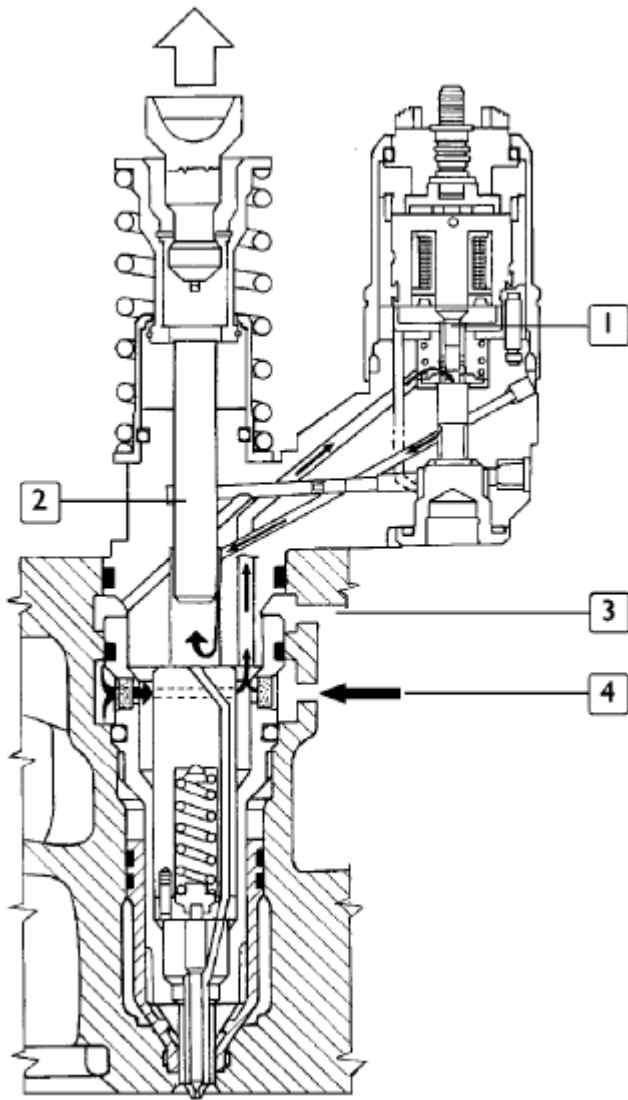


60669

1. Fuel valve - 2. Plunger - 3. Fuel outlet -
4. Filling and backflow passage

Filling phase

During the filling phase the plunger (2) runs up to the top position.
After passing the highest point of the cam, the rocker arm roller comes near the base ring of the cam.
The fuel valve (1) is open and fuel can flow into the injector via the bottom passage (4) of the cylinder head.
Filling continues until the plunger reaches its top limit.

Figure 248

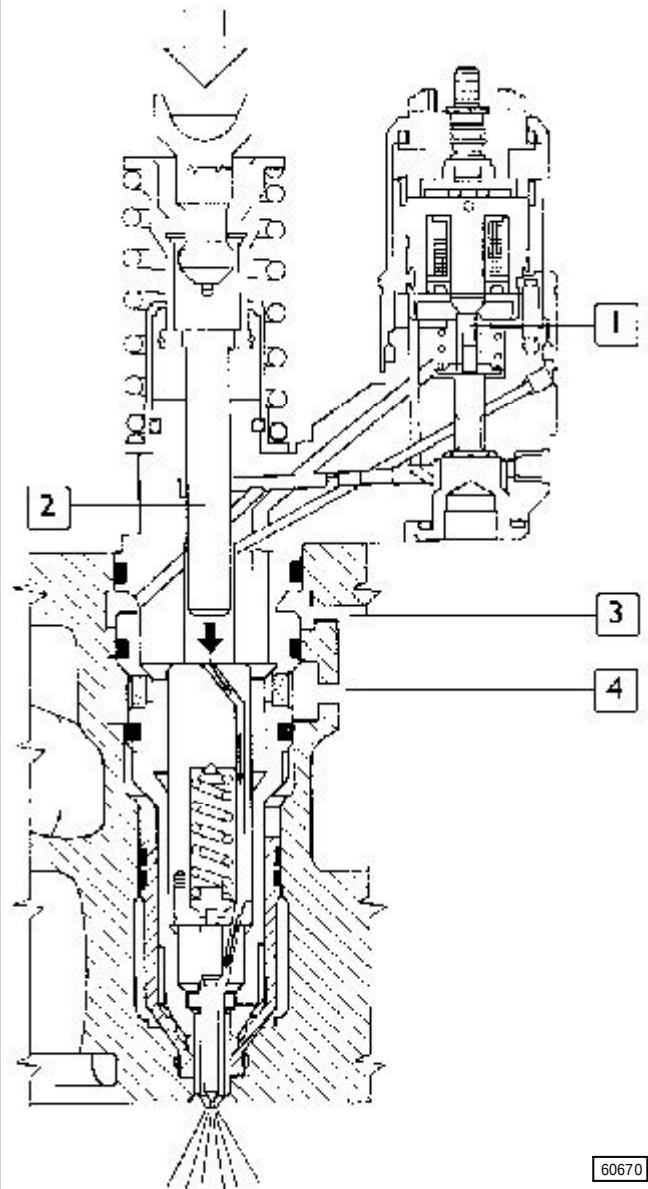

60670

1. Fuel valve - 2. Plunger - 3. Fuel outlet -
4. Filling and backflow passage

Begin of injection


The injection phase begins when, at a certain point in the down phase of the plunger, the solenoid valve gets energized and the fuel valve (1) shuts.

The moment delivery begins, appropriately calculated by the electronic control unit, depends on the working conditions of the engine.

The cam continues with the rocker arm to push the plunger (2) and the injection phase continues as long as the fuel valve (1) stays shut.

Aquila Trucks Centres

Figure 249

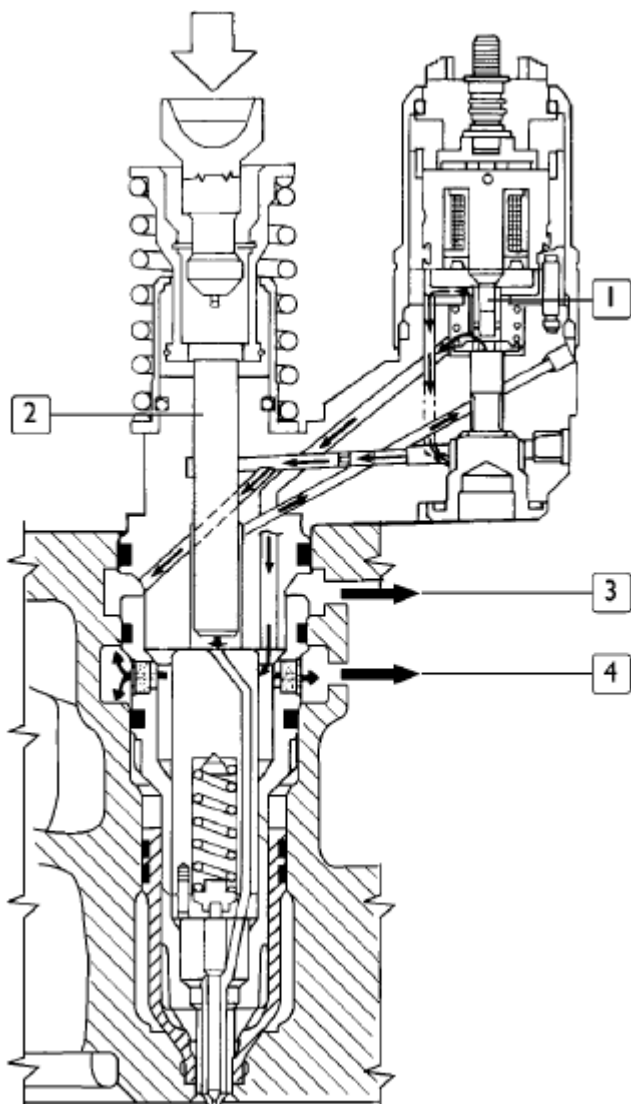

60671

1. Fuel valve - 2. Plunger - 3. Fuel outlet -
4. Filling and backflow passage

End of injection

Injection ceases when the fuel valve (1) opens, at a certain point in the down stroke of the plunger, after the solenoid valve gets de-energized.

The fuel flows back through the open valve (1), the injector holes and the passage (4) into the cylinder head.

The time for which the solenoid valve stays energized, appropriately calculated by the electronic control unit, is the duration of injection (delivery) and it depends on the working conditions of the engine.

Aquila Trucks Centres

	Page
VIEWS OF THE ENGINE	125
TECHNICAL DESCRIPTION	128
CHARACTERISTIC CURVES	129
MAIN DATA	132
ASSEMBLY DATA - CLEARANCE	135
TIGHTENING TORQUE	142
DIAGRAMS OF TIGHTENING SEQUENCE OF MAIN ENGINE COMPONENTS	145
TOOLS	149
ENGINE REMOVAL-REFITTING	159
- Removal	159
- Refitting	162
- Filling the cooling system	163
- Bleeding air from the fuel system	164
- Checks and tests	164
ELECTRO-MAGNETIC FAN DRIVE REPLACEMENT	165
- Removal	165
- Refitting	166
DISASSEMBLY OF THE ENGINE	169
REPAIRS	177
CYLINDER BLOCK	177
- Checks and measurements	177
- Cylinder liners	178
- Replacing the cylinder liners	179
- Crankshaft	180
- Measuring the main journals and crankpins ...	181
- Preliminary measurement of data to select main bearing and big end bearing shells	182
- Selecting the main bearing and big end bearing shells	183
- Replacing the timing gear and oil pump drive	189
- Checking main journal assembly clearance	189
- Checking crankshaft end float	190
- Connecting rod piston assembly	191

F3B Engine

	Page
- Piston rings	193
- Connecting rod	194
- Bushings	195
- Checking connecting rods squareness	195
- Mounting the connecting rod – piston assembly	196
- Mounting the piston rings	196
- Fitting the big end bearing shells	196
- Fitting connecting rod - piston assemblies in the cylinder liners	197
- Checking piston protrusion	197
- Checking crankpin assembly clearance	198
CYLINDER HEAD	198
- Disassembly the valves	198
- Checking head bearing surface on cylinder block	198
- Valves	199
- Valve seats	199
- Checking clearance between valve-stem and associated valve guide	200
- Valve guides	200
- Replacing injector holders	200
- Checking injector protrusion	202
TIMING GEAR	203
- Camshaft drive	203
- Idler gear pin	203
- Idler gear	203
- Twin intermediate gear pin	203
- Twin idler gear	203
- Replacing the bushings	203
- Timing system	204
- Checking cam lift and pin alignment	204
- Bushings	205
- Valve springs	207
ROCKER SHAFT	208
- Shaft	209
- Rocker arms	209


Aquila Trucks Centres

	Page		Page
ENGINE ASSEMBLY	210	- Description	233
- Fitting connecting rod - piston assemblies in cylinder liners	213	- Operation	233
- Fitting the cylinder head	214	- Electromagnetic fan drive	235
- Fitting flywheel box housing	215	- Water pump	235
ENGINE FLYWHEEL	216	- Thermostat	235
- Fitting engine flywheel	216	- View of thermostat operation for versions with Intarder	236
- Fitting camshaft	217	TURBOCHARGING	237
- Fitting pump-injectors	218	- Turbocharger HOLSET HE 551 V	237
- Fitting rocker-arm shaft assembly	218	- Actuator	238
- Camshaft timing	219	- Solenoid valve for VGT control	238
- Phonic wheel timing	221	REPAIR	238
- Adjust intake and exhaust rocker arm clearance, and pump injector preload	222	- Variable geometry movement control	239
- Completing Engine Assembly	223	- Checking the actuator	239
LUBRICATION	227	- Checking actuator travel	240
- Oil pump	229	- Cleaning turbine body	240
- Safety relief valve	229	- Turbocharger HOLSET HX 50W	243
- Oil overpressure valve	230	REPAIRS	243
- Heat exchanger	230	WASTEGATE	243
- By-pass valve	231	FUEL SYSTEM	245
- Thermostatic valve	231	- Overpressure valve	246
- Engine oil filters	231	- Feed pump	246
- Valve integrated in piston cooling nozzle	232	- Injector-pump	246
COOLING	233	- Pressure damper	246

Aquila Trucks Centres

VIEWS OF THE ENGINE


Figure 1

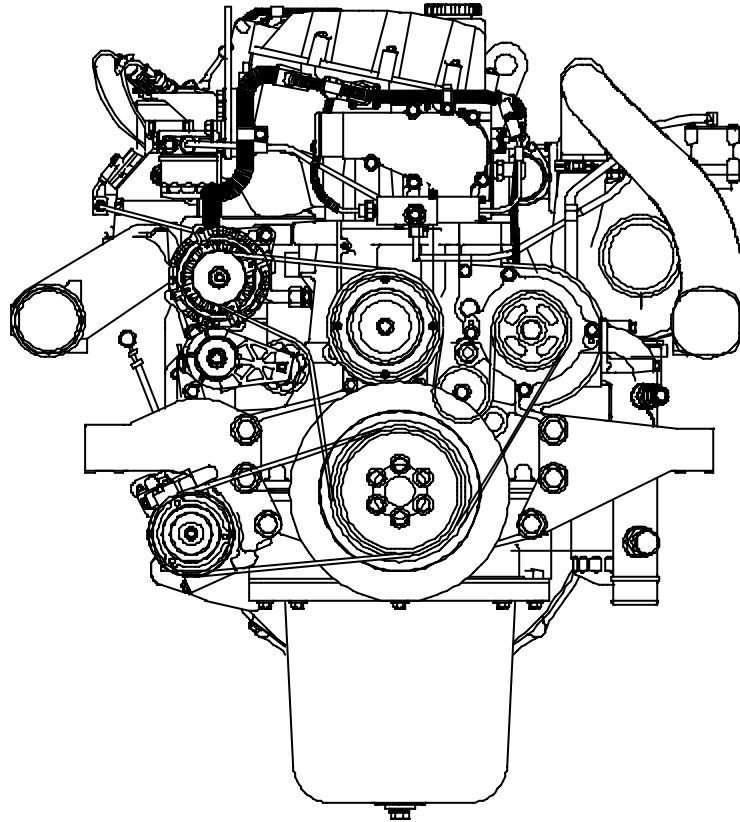

106682

FRONT VIEW OF ENGINE

Figure 2

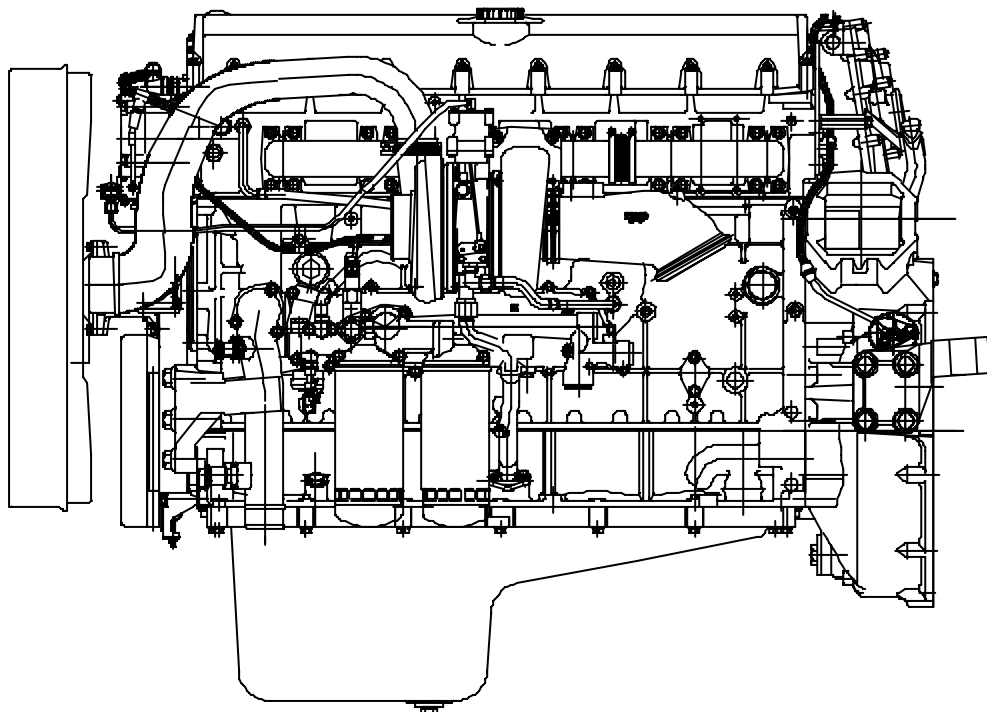


71695

LEFT SIDE VIEW OF ENGINE

Aquila Trucks Centres


Figure 3

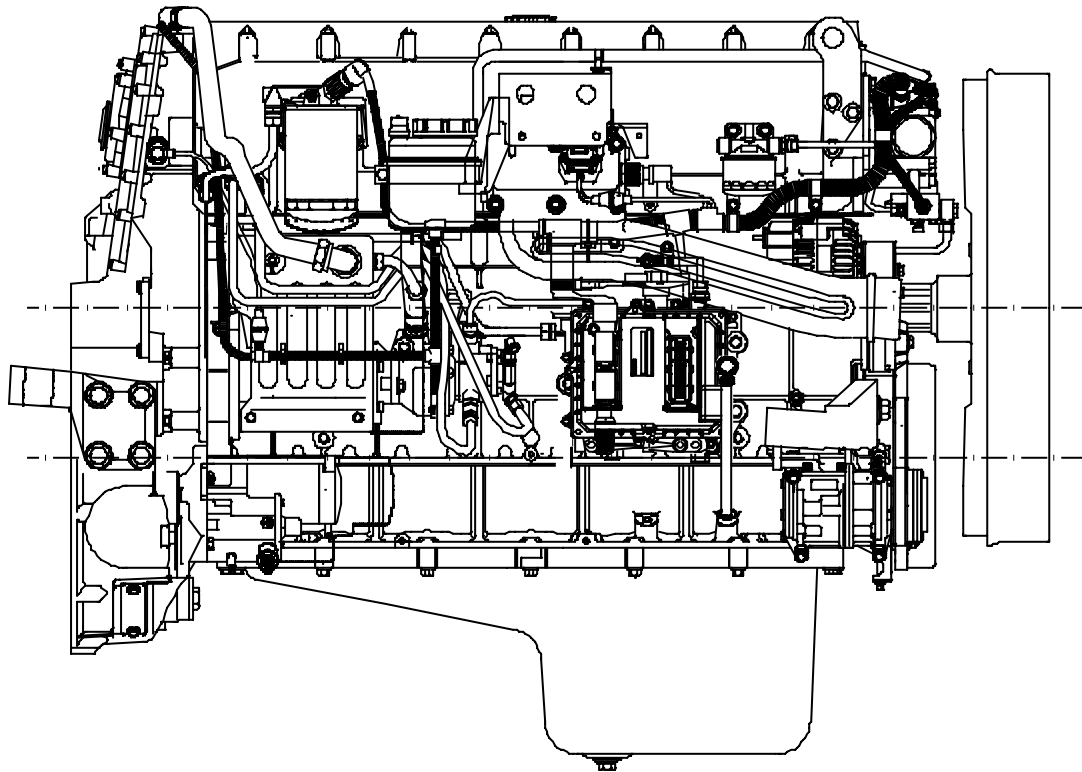

112172

RIGHT SIDE VIEW OF ENGINE

Figure 4

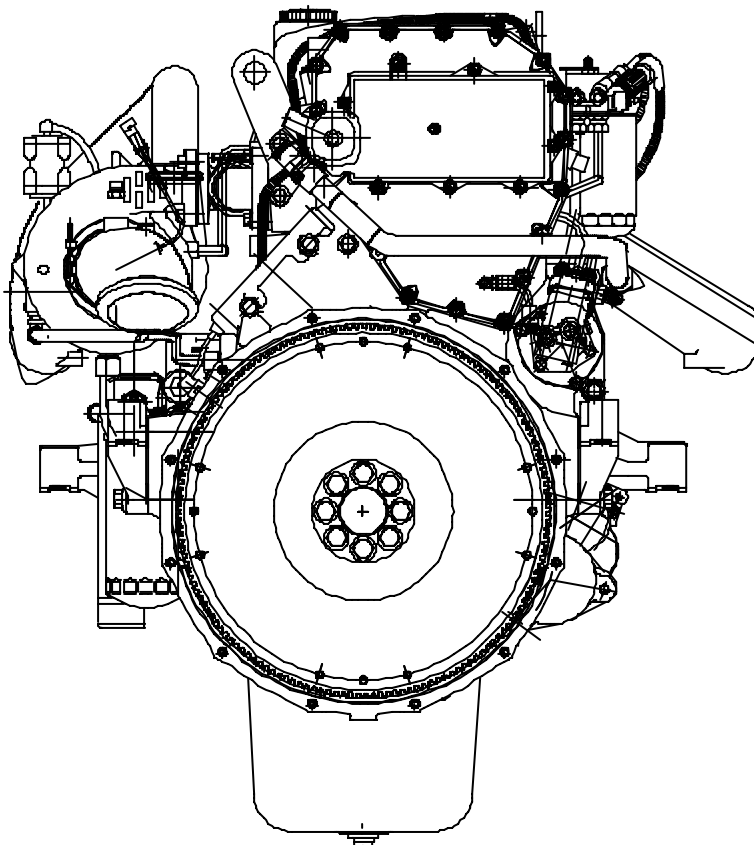


71694

REAR VIEW OF ENGINE

Aquila Trucks Centres

Figure 5

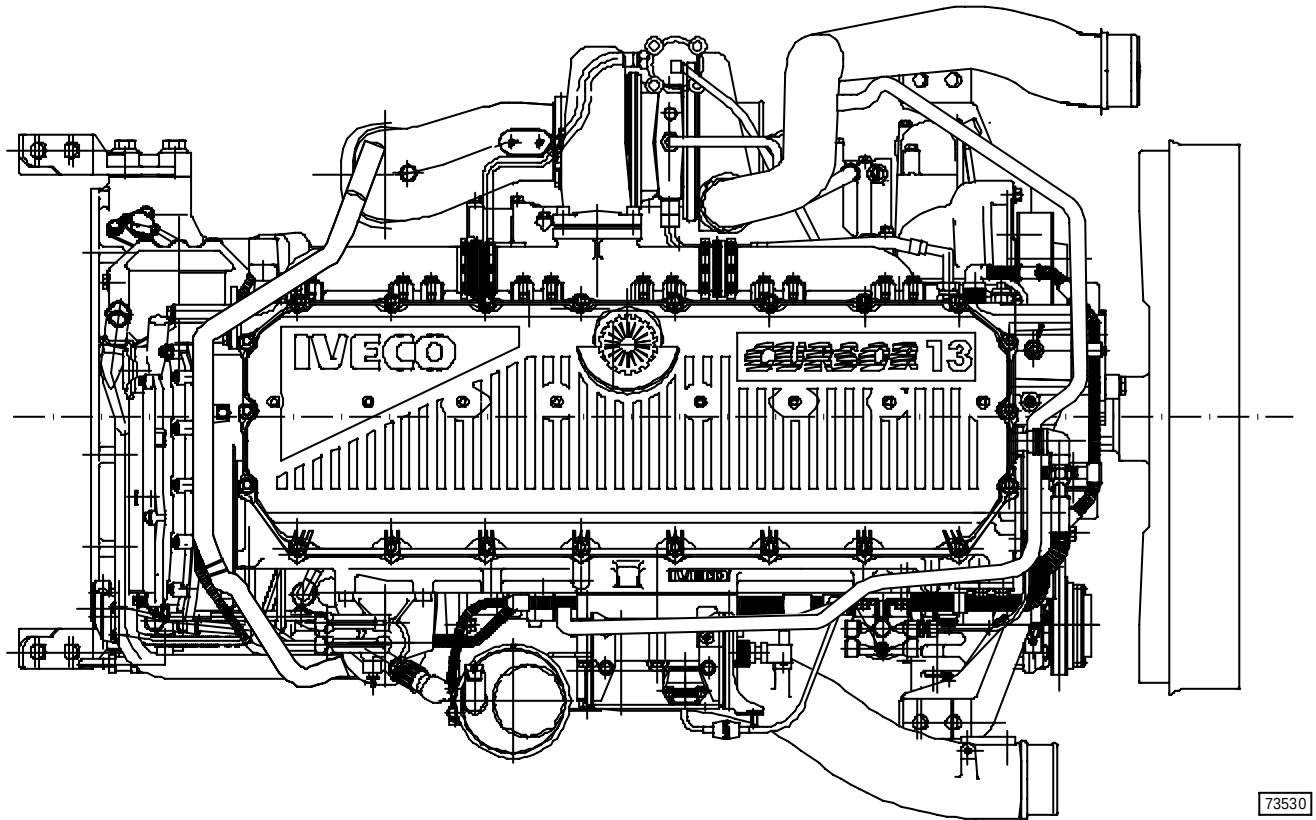


73530

TOP VIEW OF ENGINE

Aquila Trucks Centres

TECHNICAL DESCRIPTION


ENGINE

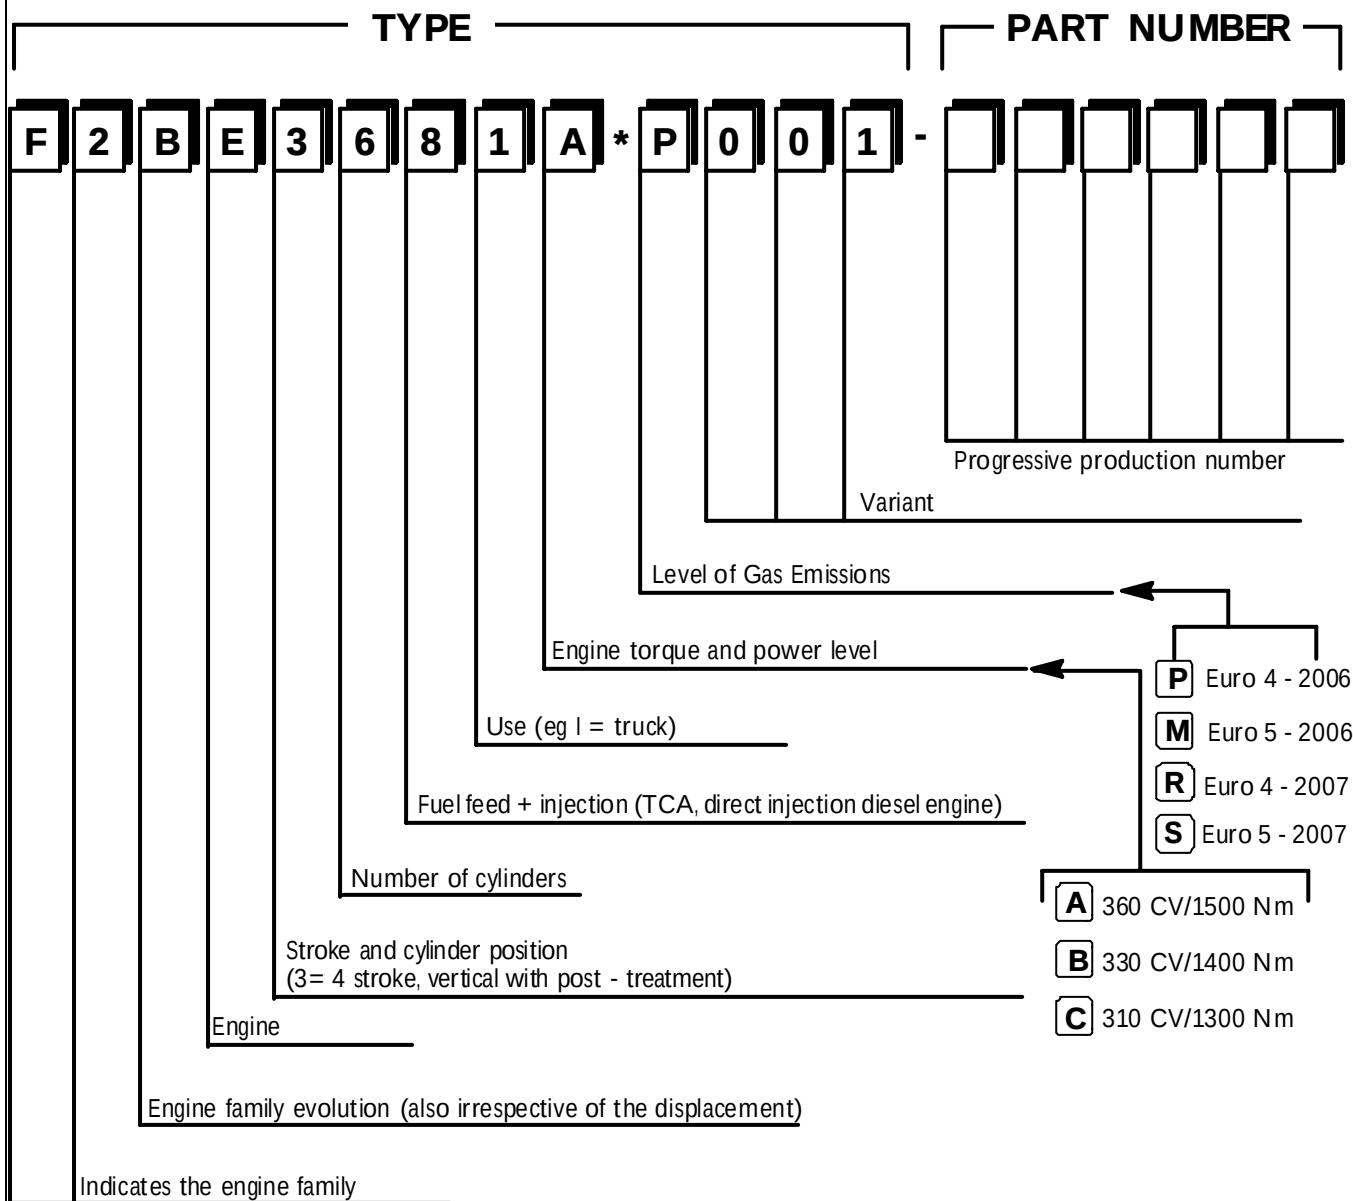

Aquila Trucks Centres

CHARACTERISTIC CURVES

Figure 6

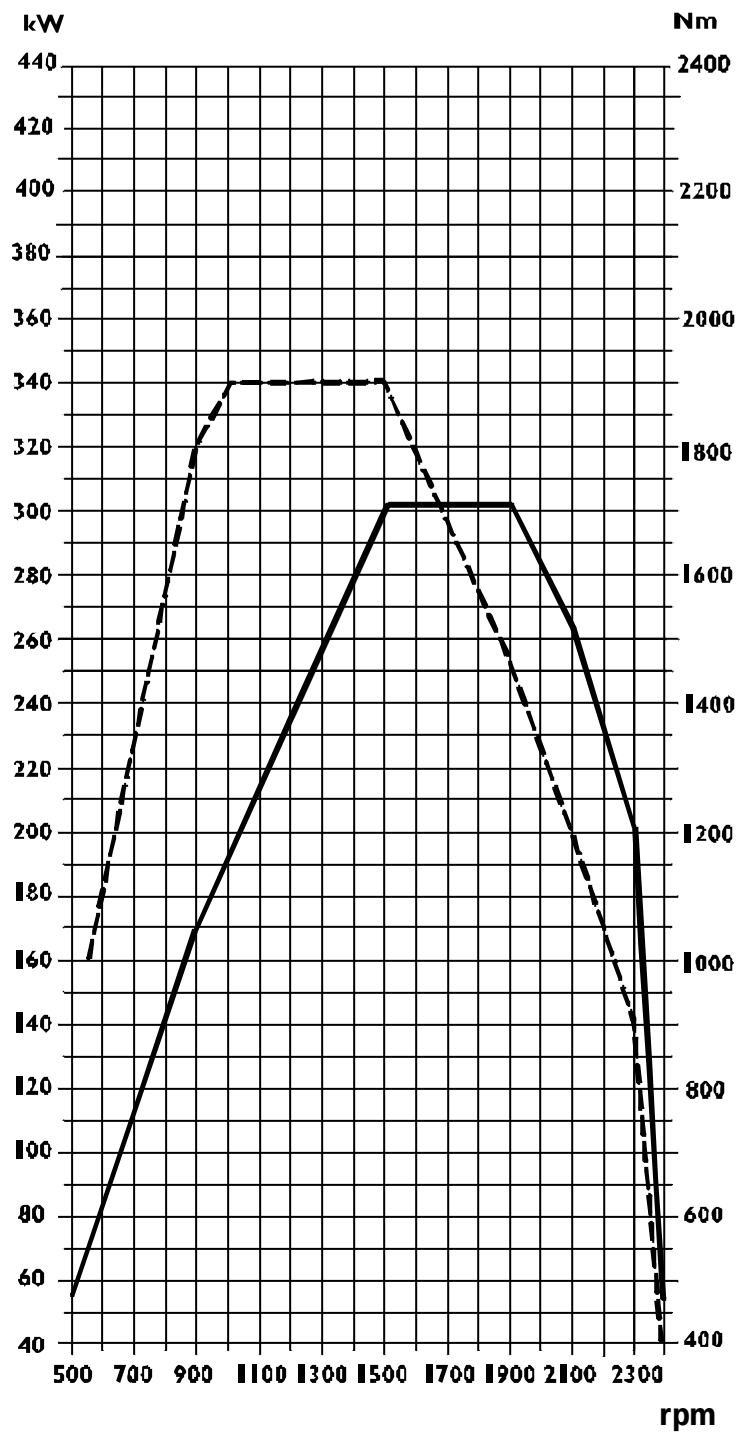

CHARACTERISTIC CURVES OF ENGINE F3BE3681D

Max. POWER : 302 kW

410 HP

1900 rpm

Max. TORQUE : 1900 Nm


194 kgm

1000 to 1515 rpm

108521

Aquila Trucks Centres

Figure 7

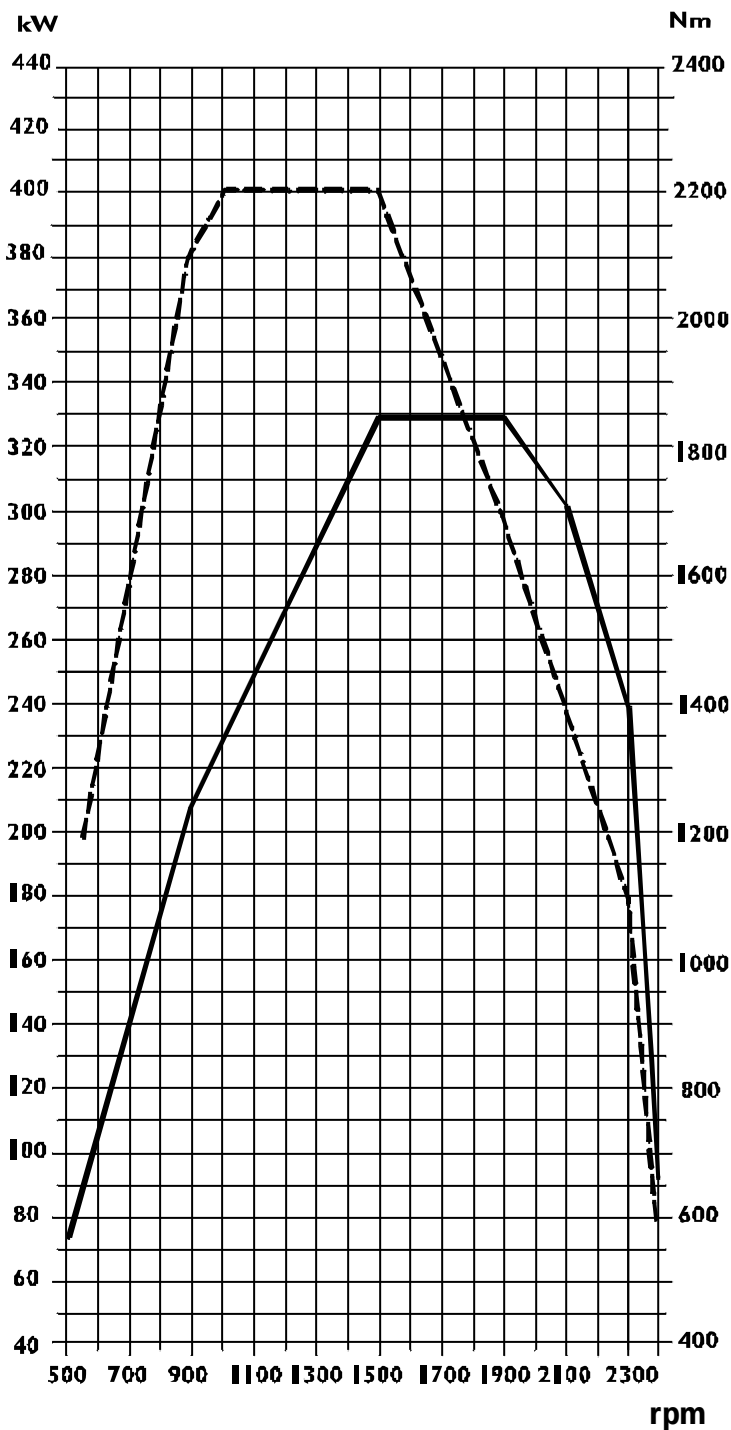

108522

CHARACTERISTIC CURVES OF ENGINE F3BE3681C

Max. POWER : 332 kW

450 HP

1900 rpm


Max. TORQUE : 2200 Nm

224 kgm

1000 to 1435 rpm

Aquila Trucks Centres

Figure 8

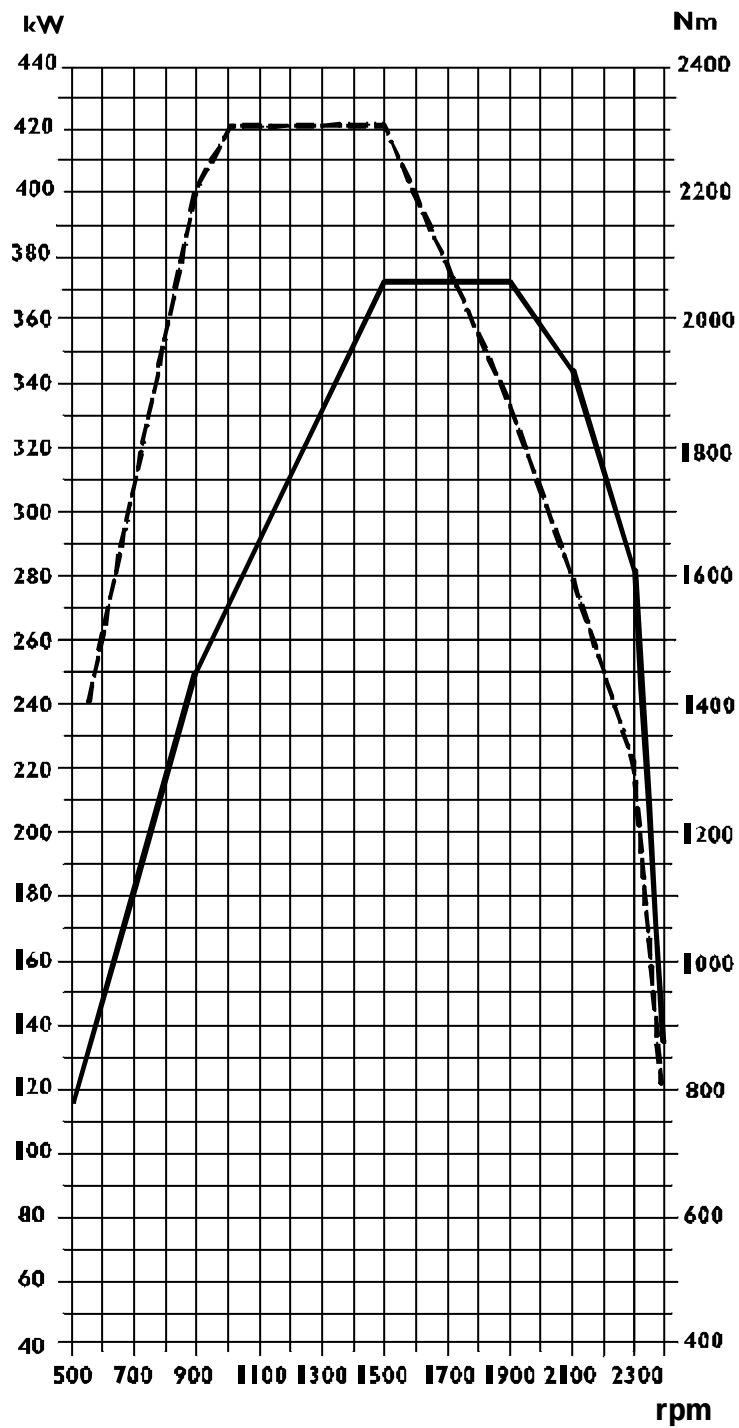

108523

CHARACTERISTIC CURVES OF ENGINE F3BE3681B

Max. POWER : 368 kW

500 HP

1900 rpm

 
 
 
Max. TORQUE : 2300 Nm

234 kgm








1000 to 1525 rpm

Aquila Trucks Centres



MAIN DATA

	Type	F3BE3681D	F3BE3681C	F3BE3681B
	Cycle Supply Injection	4-stroke diesel Turbocharged with intercooler Direct		
	Number of cylinders	6 in line		
	Bore mm	135		
	Stroke mm	150		
	cm ³	12880		
	Compression ratio	16.5 : 1		
	Maximum power kW (HP)	302 (410)	332 (450)	368 (500)
	rpm	1900	1900	1900
	Maximum torque Nm (kgm)	1900 (194)	2200 (224)	2300 (234)
	rpm	1000 to 1515	1000 to 1435	1000 to 1525
	Low idle speed no load rpm	550 ± 50		
	Fast idling speed with no load rpm	2320 ± 50		

    Aquila Trucks Centres


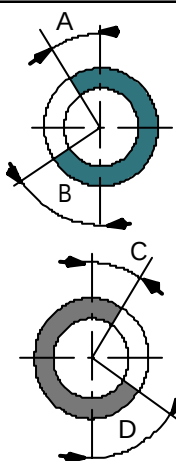
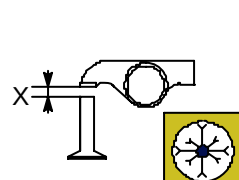



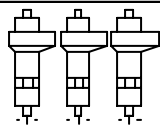
	Type	F3B
	TIMING SYSTEM Start before T.D.C. A End after B.D.C. B Start before B.D.C. D End after T.D.C. C	19° 36° 50° 9°
	To check timing Operation X { mm mm X { mm mm	– – 0.40 ± 0.05 0.60 ± 0.05
	SUPPLY	Via fuel pump - Filters
	Injection type Bosch	With UIN 31 injectors with electronic adjustment. Injectors-pump controlled by camshaft in head.
	Nozzles type	-
	Injection sequence	1 - 4 - 2 - 6 - 3 - 5
	Injection pressure bar	2000

  Aquila Trucks Centres







	Type	F3B 410 CV	F3B 450 CV - 500 CV
	TURBOCHARGING	Holset with fixed geometry and WASTEGATE	Holset variable geometry
	Turbocharger type	HX 50 W	HE 551 V
	LUBRICATION	Forced via gear pump, pressure relief valve, oil filter	
 	Oil pressure with engine warm ($100 \pm 5^{\circ}\text{C}$):		
	at slow running bar	1.5	
	at fast idling speed bar	5	
	COOLING	Via centrifugal pump, thermostat, electro-magnetic drive fan, radiator, heat exchanger	
	Water pump drive	With belt	
	Thermostat	N. 1	
	starts opening:	$84 \pm 2^{\circ}\text{C}$	
	full aperture	$94 \pm 2^{\circ}\text{C}$	
	REPLENISHING		
	Total capacity		
	1 st filling		
	liters	35	
	kg	31.5	
	Capacity		
	- engine sump at minimum level		
	liters	20	
	kg	18	
	- engine sump at maximum level		
 Urania FE 5W30 Urania LD7	liters	28	
	kg	25.2	
	- quantity in circulation that does not return to sump		
	liters	7	
	kg	6.3	
	- quantity contained in cartridge filter (to add when changing the cartridge filter)		
	liters	3	
	kg	2.7	

Aquila Trucks Centres

   ASSEMBLY DATA - CLEARANCE

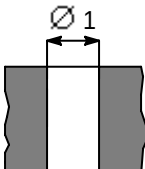

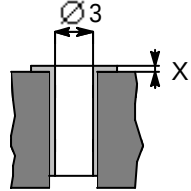
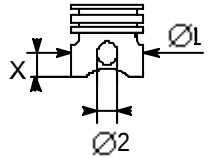
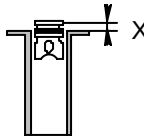

	Type	F3B
CYLINDER ASSEMBLY AND CRANK MEMBER S		mm
	Cylinder liner seats top bottom	153.500 to 153.525 152.000 to 152.025
	Cylinder liners: outside diameter: length	top bottom L
	Cylinder liners - crankcase seats top bottom	0.014 to 0.039 0.085 to 0.135
	Outside diameter	Ø2
	Cylinder liners: inside diameter inside diameter protrusion	Ø3A* Ø3B* X**
* Selection class ** Under a load of 8000 kg		
	Pistons: measurement outside diameter outside diameter seat for pin	X Ø1A ^D Ø1B ^{DD} Ø2
Piston - cylinder liners		FEDERAL MOGUL 18 134.861 to 134.873 134.872 to 134.884 54.010 to 54.018
	Piston - cylinder liners A* B*	0.127 to 0.152 0.127 to 0.152
* Selection class		
	Piston diameter	Ø1
	Piston protrusion	X
	Piston gudgeon pin	Ø3
	Piston gudgeon pin - pin seat	
D Class A pistons supplied as spares. DD Class B pistons are fitted in production only and are not supplied as spares.		

   Aquila Trucks Centres

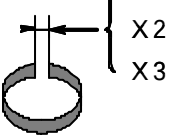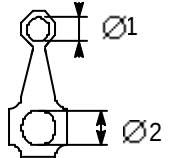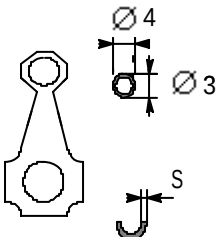	Type	F3B	
		mm	
	Piston ring slots * measured on Ø of 130 mm	X1* X2 X3	FEDERAL MOGUL 2.427 1.550 to 1.570 (**) / 3.060 to 3.080 0.020 to 5.040
	Piston rings: - scraper trapezoidal - compression bevelled - milled scraper ring with slots and internal spring * measured at 2.5 mm from outer Ø	S1* S2 S3	2.296 to 2.340 1.470 ÷ 1.500 (**) / 2.970 ÷ 2.990 4.970 to 4.990
	Piston rings - slots	1 2 3	0.087 to 0.131 0.050 to 0.100 0.030 to 0.070
	Piston rings		-
	Piston ring end gap in cylinder liner	X1 X2 X3	0.40 to 0.50 0.65 to 0.80 0.40 to 0.75
	Small end bushing seat Connecting rod bearing seat Selection class Ø2	Ø1 Ø2 1 2 3	59.000 to 59.030 94.000 to 94.010 94.011 to 94.020 94.021 to 94.030
	Small end bushing diameter outside inside Big end bearing shells Red Green Yellow*	Ø4 Ø3 S	59.085 to 59.110 54.019 to 54.035 1.965 to 1.975 1.976 to 1.985 1.986 to 1.995
	Small end pushing - seat		0.055 to 0.110
	Piston gudgeon pin - bushing		0.019 to 0.041
	Big end bearing shells		-
	Weight of connecting rod Classes	A B C	4741 to 4780 g 4781 to 4820 g 4821 to 4860 g

- * Only mounted on production and not provided with spare.
- ** Old part number


 

 
 
 

Aquila Trucks Centres

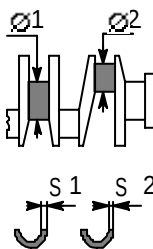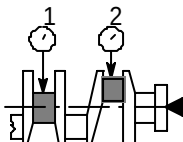	Type	F3B	
		mm	
	Measurement X		125
	Maximum error on alignment of connecting rod axle //		0.08
	Main journals	Ø1	
	- nominal		99.970 to 100.000
	- class 1		99.970 to 99.979
	- class 2		99.980 to 99.989
	- class 3		99.990 to 100.000
	Crankpins	Ø2	
	- nominal		89.970 to 90.000
	- class 1		89.970 to 89.979
	- class 2		89.980 to 89.989
	- class 3		89.990 to 90.000
Main bearing shells	S 1		
Red		3.110 to 3.120	
Green		3.121 to 3.130	
Yellow*		3.131 to 3.140	
Big end bearing shells	S 2		
Red		1.965 to 1.975	
Green		1.976 to 1.985	
Yellow*		1.986 to 1.995	
	Main bearing housings	Ø3	106.300 to 106.330
	Bearing shells - main journals f	0,060 to 0,108 * - 0,061 to 0,119 ** - 0,060 to 0,130 ***	
	Bearing shells - crankpins f	0,050 to 0,108 * - 0,051 to 0,109 ** - 0,050 to 0,098 ***	
	Main bearing shells	0.127 - 0.254 - 0.508	
	Big end bearing shells	0.127 - 0.254 - 0.508	
	Main journal for shoulder	X1	47.95 to 48.00
	Main bearing housing for shoulder	X 2	40.94 to 40.99
	Half thrust washers	X3	3.38 to 3.43
	Crankshaft shoulder	0.10 to 0.30	
	Alignment	{ // 1 - 2 ⊙ 1 - 2	0.025
	Roundness		0.040










* Fitted in production only and not supplied as spares

f Supplied as spares: * standard; ** = 0.127; *** = 0.254 - 0.508

 





Aquila Trucks Centres

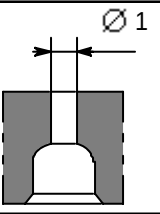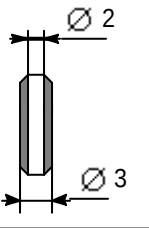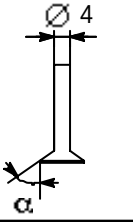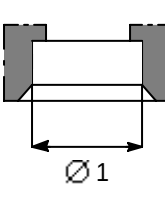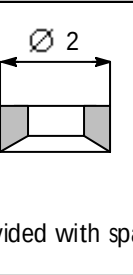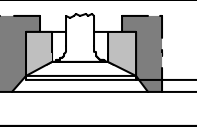	Type	F3B	
CYLINDER HEAD - TIMING SYSTEM		mm	
	Guide valve seats on cylinder head Ø1	15.980 to 15.997	
	Valve guides Ø2 Ø3	10.015 to 10.030 16.012 to 16.025	
	Valve guides and seats on head	0.015 to 0.045	
	Valve guides	-	
	Valves: Ø4 α Ø4 α	9.960 to 9.975 60° 30' ± 7' 30" 9.960 to 9.975 45° 30' ± 7' 30"	
	Valve stem and relevant guide	0.040 to 0.070	
	Seat on head for valve seat: Ø1 Ø1	49.185 to 49.220 46.985 to 47.020	
 * provided with spare	Outside diameter of valve seats on cylinder head: Ø2 Ø2	49.260 to 49.275 47.060 to 47.075 49.460 to 49.475* 47.260 to 47.275*	
	Valve seats	0,2	
	Recessing X X	0.45 to 0.75 1.65 to 1.95	

    
Aquila Trucks Centres

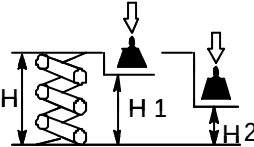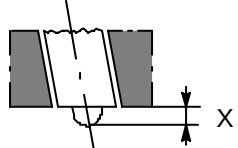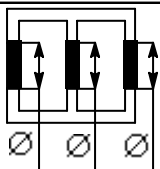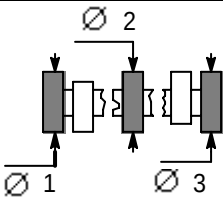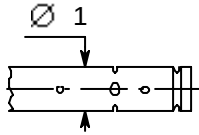	Type	F3B	
		mm	
	Between valve seat and head  	0.040 to 0.090	
	Valve spring height: free spring H under a load of: 775 ± 39 N H 1 1366 ± 68 N H 2	76 59 46	
	Injector protrusion X	0.52 to 1.34	
	Seats for camshaft bushings in cylinder head: 1 ⇒ 7	Ø	88.000 to 88.030
	Camshaft supporting pins: 1 ⇒ 7	Ø	82.950 to 82.968
	Outside diameter of bushings for camshaft: Ø	Ø	88.153 to 88.183
	Bushing inside diameter: Ø	Ø	83.018 to 83.085
	Bushings and seats in cylinder head	0.123 to 0.183	
	Bushings and supporting pins	0.050 to 0.135	
	Useful cam height   	9.231 9.5607 13.376	
	Rocker arm shaft Ø1	Ø1	41.984 to 42.000

    Aquila Trucks Centres

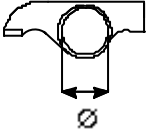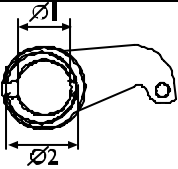	Type	F3B
		mm
	Seats for bushings in rocker arms:	
	  	45.000 to 45.016 59.000 to 59.019 46.000 to 46.016
	Outside diameter of bushings for rocker arms:	
	  	45.090 to 45.130 59.100 to 59.140 46.066 to 46.091
	Inside diameter of bushings for rocker arms:	
	  	42.025 to 42.041 56.030 to 56.049 42.015 to 42.071
	Bushings and seats:	
	  	0.074 to 0.130 0.081 to 0.140 0.050 to 0.091
	Rocker arm bushings and shaft:	
	 	0.025 to 0.057 0.015 to 0.087
	Engine brake control lever	
	Eccentric pin outer diameter $\varnothing 2$	55.981 to 56.000
	Rocker arms shaft seat $\varnothing 1$	42.025 to 42.041

 Aquila Trucks Centres

	Type	F3B	
		mm	
	Rocker arms and engine brake control lever pin	0.030 to 0.068	
	Rocker arm shaft and seat on engine brake control lever	0.025 to 0.057	
TURBOCHARGER		Holset with fixed geometry HX 50	Holset with variable geometry HE 551V
Type		0.025 ÷ 0.127	0.051 ÷ 0.152
End play		0.381 ÷ 0.610	0.381 ÷ 0.533
Radial movement			

Aquila Trucks Centres

TIGHTENING TORQUE

PART	TORQUE	
	Nm	kgm
Screws fixing lower crankcase to crankcase (see Figure 9) ♦		
Outside screws M12x1.75 First phase: pre-tightening	30	(3)
Inside screws M18x2 Second phase: pre-tightening	120	(12)
Inside screws M 18x2 Third phase: closing to angle		60°
Inside screws M 18x2 Fourth phase: closing to angle		55°
Outside screws M 12x1,75 Fifth phase: closing to angle		60°
Piston cooling nozzle union	35 ±2	(3.5 ±0.2)
Screws fixing heat exchanger to crankcase (see Figure 13)		
pre-tightening	11.5 ±3.5	(1.15 ±0.35)
tightening	19 ±3	(1.9 ±0.3)
Screws fixing suction strainer to lower crankcase	24.5 ±2.5	(2.4 ±0.25)
Screws fixing oil sump spacer (see Figure 14)		
pre-tightening (1 ÷ 16)	38	(3.8)
tightening (17 ÷ 32)	45	(4.5)
Screws fixing gearbox to crankcase M12x1.75 (see Figure 16)	63 ±7	(6.3 ±0.7)
Screws fixing control unit to lower crankcase ♦	24 ±2.5	(2.4 ±0.25)
Screws fixing cylinder head (see Figure 10) ♦		
First phase pre-tightening	60	(6)
Second phase pre-tightening	120	(12)
Third phase closing to angle		90°
Fourth phase closing to angle		65°
Screws fixing rocker arm shaft ♦		
First phase pre-tightening	80	(8)
Second phase closing to angle		60°
Lock nut for rocker arm adjustment screw	39 ±5	(3.9 ±0.5)
Screws for injector brackets ♦	30 ÷ 35	(3 ÷ 3.5)
Screws fixing plastic cover	8.5 ±1.5	(0.85 ±0.15)
Screws fixing shoulder plate to head	19 ±3	(1.9 ±0.3)
Screws fixing engine mount bracket to cylinder head		
First phase pre-tightening	120	(12)
Second phase closing to angle		45°

♦ Before assembly, lubricate with UTDM oil

• Before assembly, lubricate with graphitized oil

Aquila Trucks Centres

PART	TORQUE	
	Nm	kgm
Screws fixing engine mount bracket to flywheel casing		
First phase pre -tightening	100	(10)
Second phase closing to angle	60°	
Screws fixing camshaft gear ♦		
First phase pre -tightening	60	(6)
Second phase closing to angle	60°	
Screws fixing phonic wheel on camshaft gear	8.5 ± 1.5	(0.85 ± 0.15)
Screws fixing exhaust manifold • (see Figure 11)		
pre-tightening	40 ± 5	(4 ± 0.5)
tightening	70 ± 5	(3.2)
Screws fixing engine brake actuator cylinder	19 ± 3	(1.9 ± 0.3)
Screws fixing connecting rod cap ♦		
First phase pre -tightening	60	(6)
Second phase closing to angle	60°	
Screws fixing engine flywheel ♦		
First phase pre -tightening	120	(12)
Second phase closing to angle	90°	
Screws fixing damper flywheel ♦		
First phase pre -tightening	70	(7)
Second phase closing to angle	50°	
Screws fixing middle gear pins ♦		
First phase pre -tightening	30	(3)
Second phase closing to angle	90°	
Screws fixing idle gear adjustment connecting rod:	24.5 ± 2.5	(2.45 ± 0.25)
Screws fixing oil pump	24.5 ± 2.5	(2.45 ± 0.25)
Screws fixing crankshaft gasket front cover	24.5 ± 2.5	(2.45 ± 0.25)
Screws fixing fuel pump / filter mount	19	(1.9)
Screw fixing control unit mount	19 ± 3	(1.9 ± 0.3)
Screws and nuts fixing turbocharger • (see Figure 12)	74 ± 8	(7.4 ± 0.8)
Screw fixing thermostat assembly	30 ± 3	(3 ± 0.3)
Screws fixing water pump	24.5 ± 2.5	(2.45 ± 0.25)
Screws fixing fan hub to spacer	30	(3)
Screw fixing fan spacer to pulley	30	(3)
Screws fixing fan mount to crankcase	100	(10)
Screw securing steady tensioner	105 ± 5	(10 ± 0.5)
Screw securing automatic belt tensioner	50 ± 5	(5 ± 0.5)
Screws fixing fixed pulley for auxiliary member drive belt to crankcase	105 ± 5	(10.5 ± 0.5)
Screws fixing starter motor	74 ± 8	(7.4 ± 0.8)
Screws fixing air heater	50 ± 5	(5 ± 0.5)
Screws fixing air compressor	74 ± 8	(7.4 ± 0.8)

- ♦ Before assembly, lubricate with UTDM oil
- Before assembly, lubricate with graphitized oil

Aquila Trucks Centres

PART	TORQUE	
	Nm	kgm
Nut fixing air compressor gear	170 ± 10	(17 ± 1)
Screws fixing alternator: M 10x1.5 l = 35 mm	44 ± 4	(4.4 ± 0.4)
	M 10x1.5 l = 60 mm	44 ± 4 (4.4 ± 0.4)
Screws fixing hydraulic power steering pump	46.5 ± 4.5	(4.65 ± 0.45)
Screws fixing air-conditioner compressor to the mount	24.5 ± 2.5	(2.5 ± 0.25)
Screws fixing guard	24.5 ± 2.5	(2.5 ± 0.25)
Filter clogging sensor fixing	55 ± 5	(5.5 ± 0.5)
Water / fuel temperature sensor fixing	35	(3.5)
Transmitter / thermometric switch fixing	25	(2.5)
Air temperature transmitter fixing	35	(3.5)
Pulse transmitter fixing	8 ± 2	(0.8 ± 0.2)
Fixing engine brake solenoid valve	32 ± 3	(3.2 ± 0.3)
Engine		
M14X70/80 screw securing front and rear silentblocks to chassis	192.5 ± 19.5	19.2 ± 1.9
M16X130 screw securing front and rear silentblocks to engine	278 ± 28	27.8 ± 2.8
M18X62 flanged hex screw for front crankcase		
First stage	pre -tightening	120 12
Second stage	angle closing	45 °
M14X60 socket cheese-head screw for front crankcase		
First stage	pre -tightening	60 6
Second stage	angle closing	45 °
Flanged hex screw for rear crankcase		
First stage	pre -tightening	100 10
Second stage	angle closing	60 °


- ◆ Before assembly, lubricate with UTM oil
- Before assembly, lubricate with graphitized oil

Aquila Trucks Centres

DIAGRAMS OF TIGHTENING SEQUENCE OF MAIN ENGINE COMPONENTS


Figure 9

FRONT SIDE

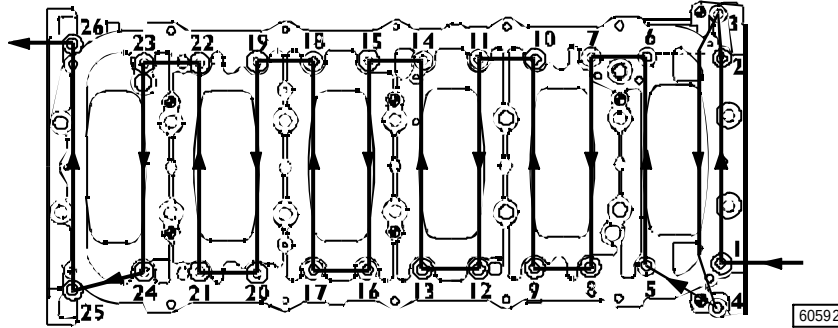


First phase:
pre-tightening
outside screws
30 Nm

FRONT SIDE

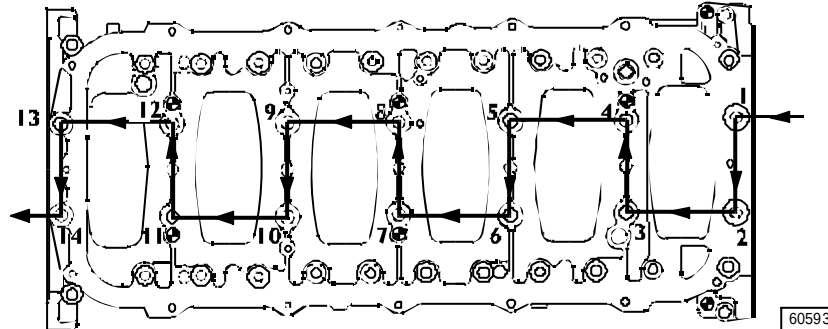


Second phase:
pre-tightening
inside screws
120 Nm

FRONT SIDE

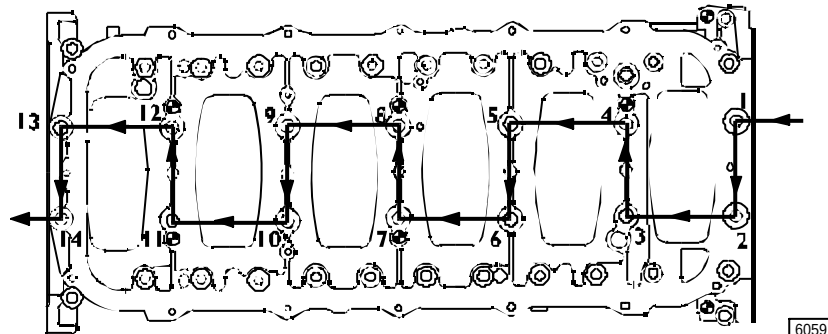


Third phase:
closing inside
screws to angle
60°

FRONT SIDE

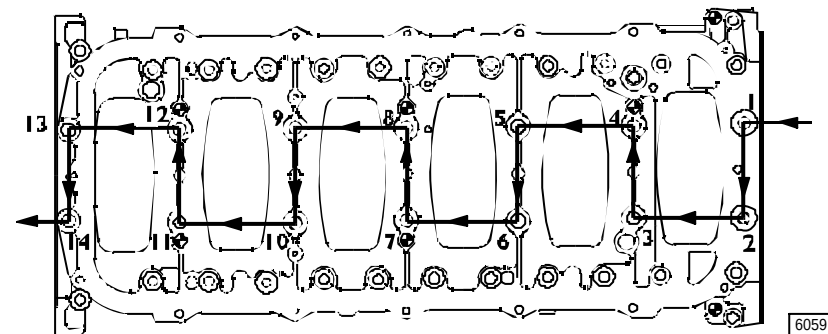

Fourth phase:
closing inside
screws to angle
55°

FRONT SIDE

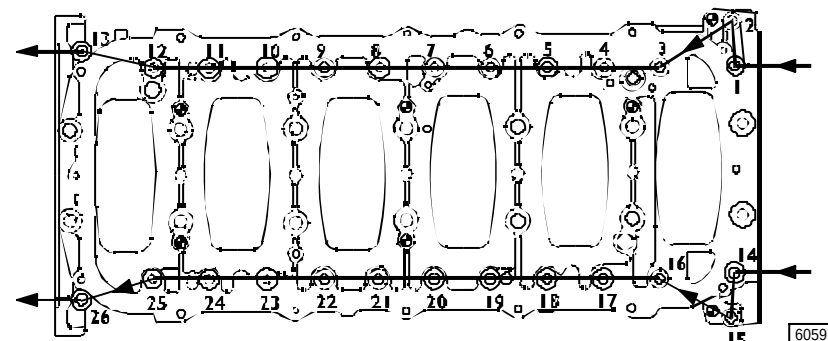


Fifth phase:
closing outside
screws to angle
60°

DIAGRAM OF TIGHTENING SEQUENCE OF LOWER CRANKCASE FIXING SCREWS

Aquila Trucks Centres


Figure 10

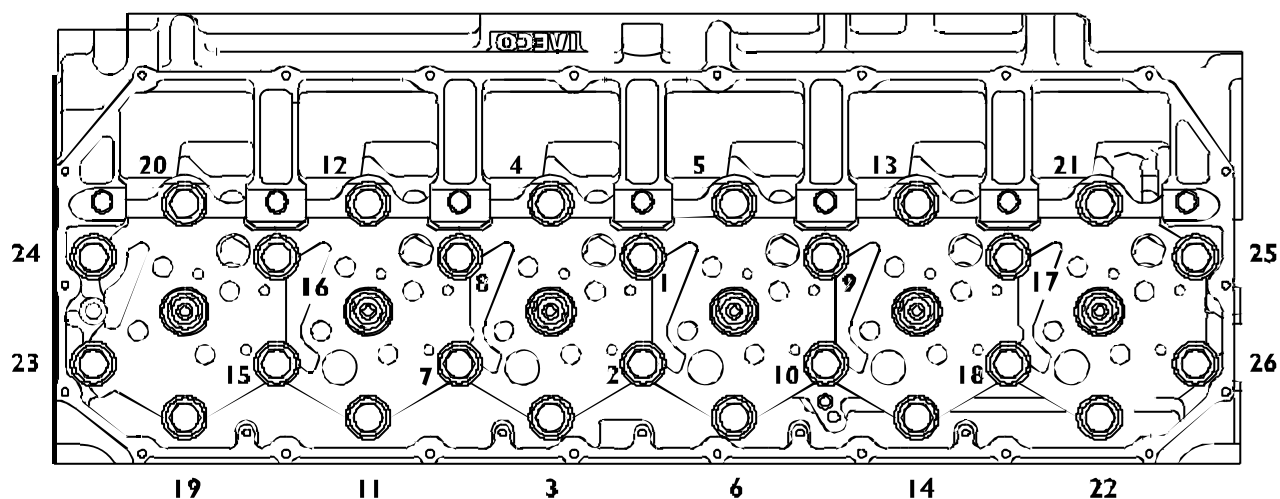

60580

DIAGRAM OF TIGHTENING SEQUENCE OF CYLINDER HEAD FIXING SCREWS


Figure 11

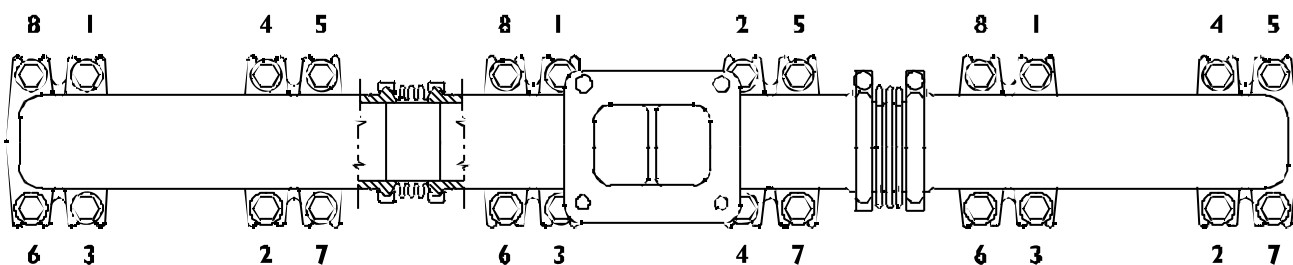

60581

DIAGRAM OF TIGHTENING SEQUENCE OF EXHAUST MANIFOLD FIXING SCREWS

Figure 12

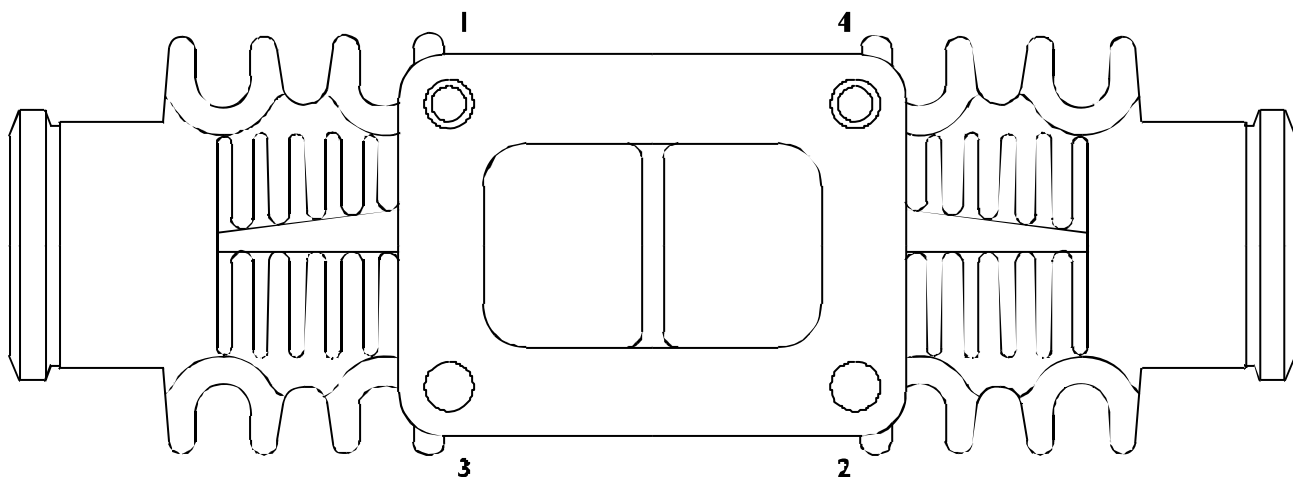

60582

DIAGRAM OF TIGHTENING SEQUENCE OF SCREWS AND NUTS FIXING TURBOCHARGER ON EXHAUST MANIFOLD

Aquila Trucks Centres

Figure 13

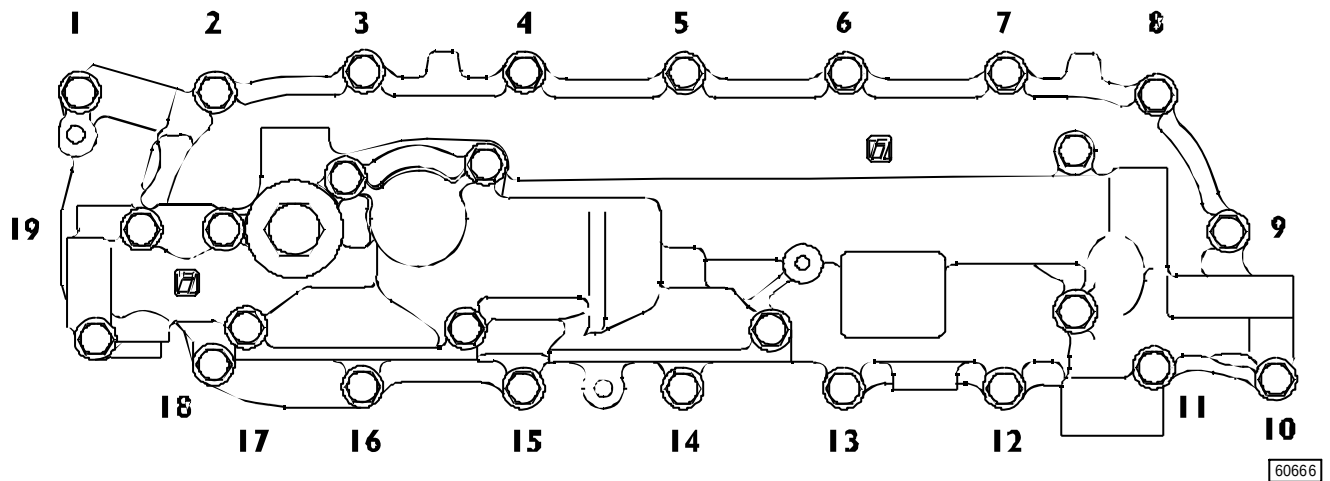


DIAGRAM OF TIGHTENING SEQUENCE OF HEAT EXCHANGER FIXING SCREWS

Figure 14

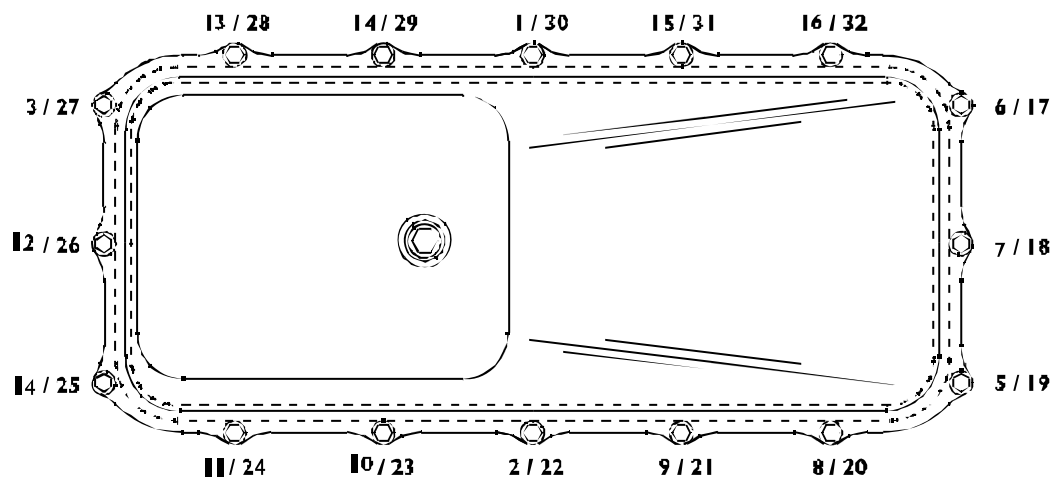


DIAGRAM OF TIGHTENING SEQUENCE OF ENGINE OIL SUMP FIXING SCREWS

Figure 15


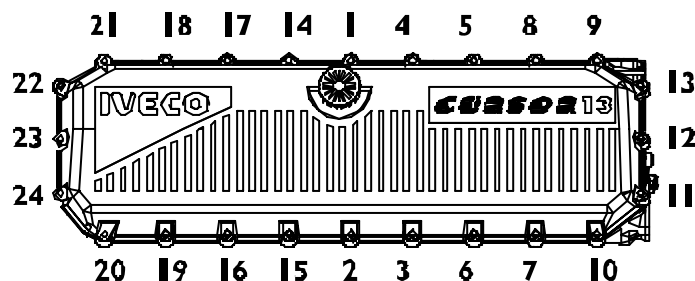


DIAGRAM OF TIGHTENING SEQUENCE FOR SCREWS FIXING ROCKER COVER

Aquila Trucks Centres

Figure 16

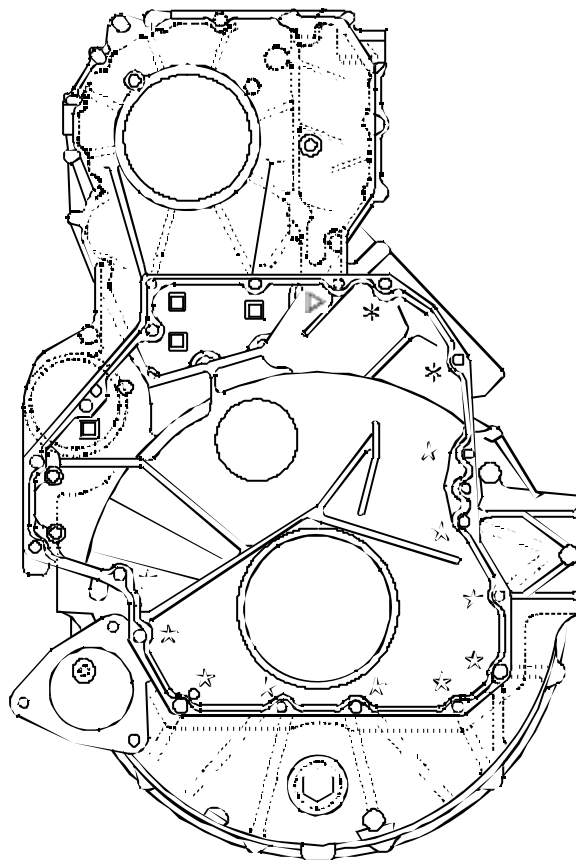


60633

DIAGRAM OF TIGHTENING SEQUENCE OF SCREWS FIXING GEAR HOUSING TO CRANKCASE

Tightening sequence

- ★ 10 screws M12 x 1.75 x 100
- ⊙ 2 screws M12 x 1.75 x 70
- 4 screws M12 x 1.75 x 35
- △ 1 screw M12 x 1.75 x 120
- : 2 screws M12 x 1.75 x 193

Figure 17






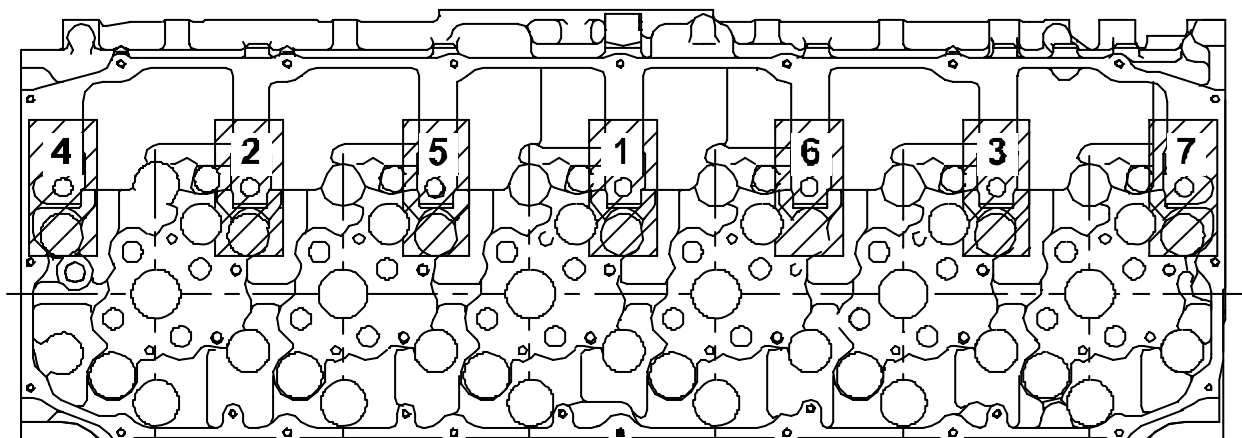


70567A

SCHEME OF THE TIGHTENING ORDER OF ROCKER ARMS SHAFTS FASTENING SCREWS






Aquila Trucks Centres

TOOLS

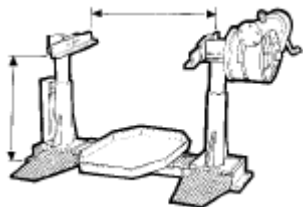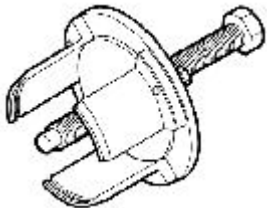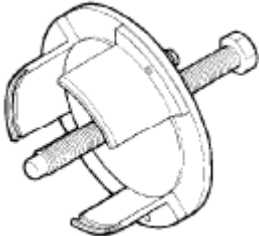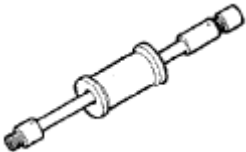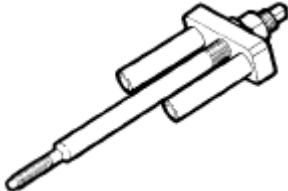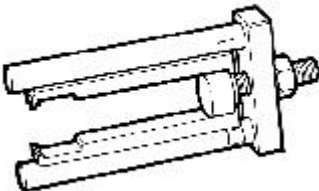TOOL No.	DESCRIPTION
99322230	 Rotary telescopic stand (capacity 2000 daN, torque 375 daN/m)
99340053	 Tool to remove crankshaft front gasket
99340054	 Tool to remove crankshaft rear gasket
99340205	 Puller with slide hammer
99342149	 Extractor for injector box
99342155	 Tool to extract injectors







Aquila Trucks Centres

 TOOLS

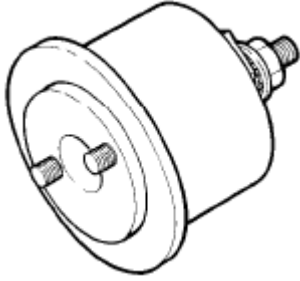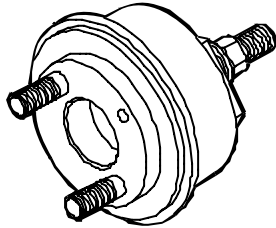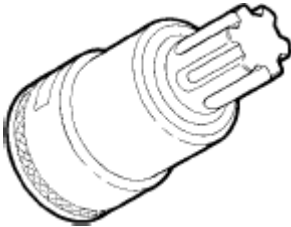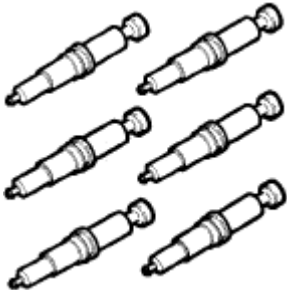TOOL No.	DESCRIPTION	
99346250		Key to fit crankshaft front gasket
99346251		Key to fit crankshaft rear gasket
99348004		Universal extractor for interiors from 5 to 70 mm
99350072		Socket wrench for screws fastening lower crankcase to crankcase
99360143		Drift to fit - remove valve guide
99360180		Plugs (6) protecting injector seats







Aquila Trucks Centres

TOOLS

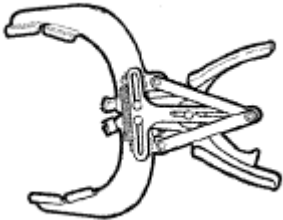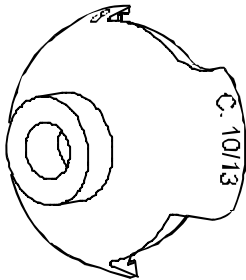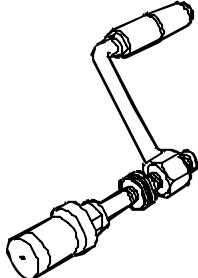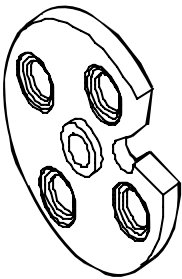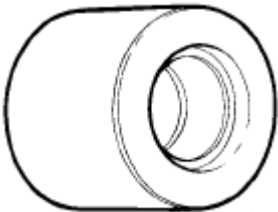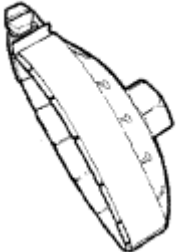TOOL No.	DESCRIPTION	
99360184		Pliers for removing and refitting piston rings (105-106 mm)
99360192		Guide for flexible belt
99360261		Tool for removing and refitting engine valves (use with specific plates)
99360263		Plate for removing and refitting engine valves (use with 99360261)
99360296		Drift for refitting valve guide (use with 99360143)
99360314		Tool to remove oil filter (engine)






Aquila Trucks Centres

TOOLS

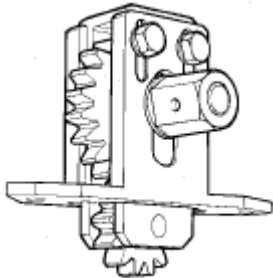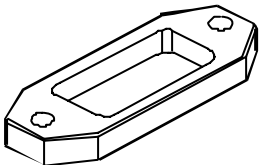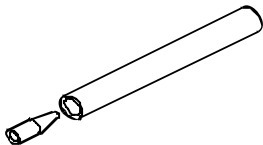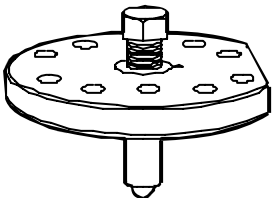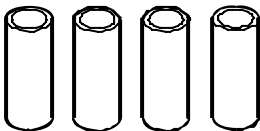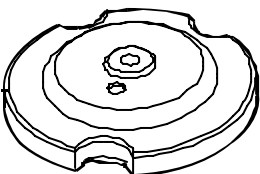TOOL No.	DESCRIPTION	
99360321		Tool to rotate engine flywheel (use with 99360325)
99360325		Spacer (use with 99360321)
99360329		Keying device for mounting gasket on valve guide
99360334		Compression tool to measure cylinder liner protrusion (use with 99370415-99395603 and specific plates)
99360336		Spacers (use with 99360334)
99360338		Plate to compress cylinder liners (use with 99360334-99360336)






Aquila Trucks Centres

TOOLS

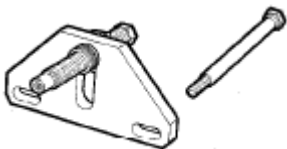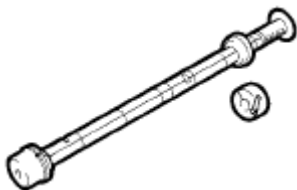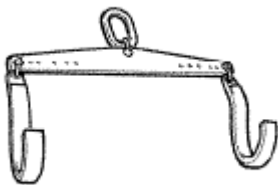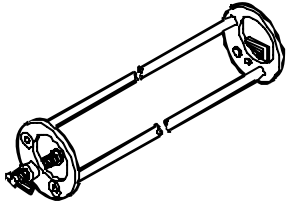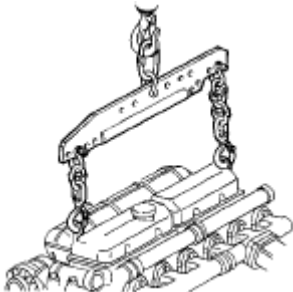TOOL No.	DESCRIPTION
99360351	 Tool to hold engine flywheel
99360499	 Drift to remove and refit camshaft bushings
99360500	 Tool to lift crankshaft
99360551	 Bracket to remove and refit engine flywheel
99360553	 Tool to assemble and install rocker arm shaft
99360585	 Beam to remove and refit engine







Aquila Trucks Centres

TOOLS

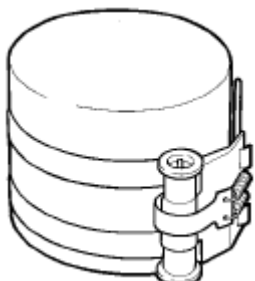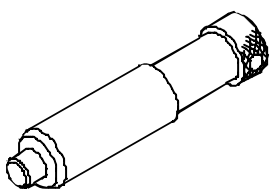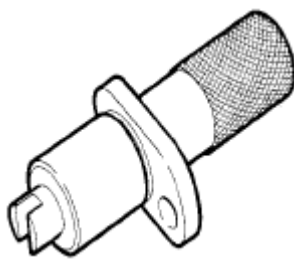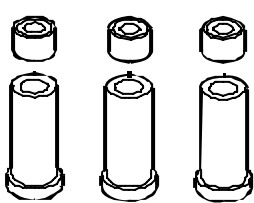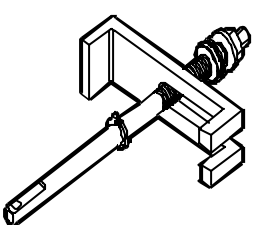TOOL No.	DESCRIPTION	
99360605		Collar to insert piston in cylinder liner (60-125 mm)
99360612		Tool to position engine T.D.C.
99360613		Tool for phonic wheel timing on camshaft
99360703		Tool to hold cylinder liners
99360706		Tool to extract cylinder liners (use with specific rings)
99360728		Ring (135 mm) (use with 99360706)






Aquila Trucks Centres

TOOLS

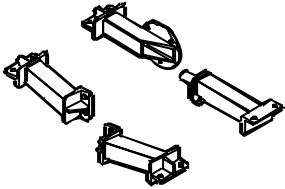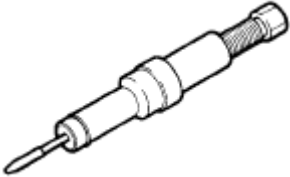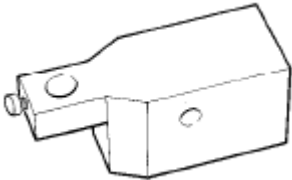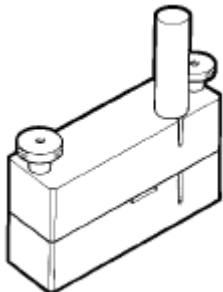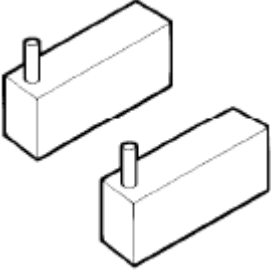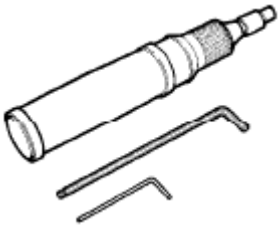TOOL No.	DESCRIPTION
99361036 	Brackets fixing engine to rotary stand 99322230
99365056 	Tool to upset injector housing
99370415 	Dial gauge base to measure cylinder liner protrusion (use with 99395603)
99378100 	Tool to punch engine data plates (use with specific punches)
99378130 	Punches for printing engine identification plates (consisting of: 99378101 (A) - 99378102 (B) - 99378103 (C) - 99378104 (D) - 99378105 (E) - 99378106 (F) - 99378107 (G) - 99378108 (V))
99389834 	Torque screwdriver to calibrate injector solenoid valve connector retaining nut




Aquila Trucks Centres

TOOLS

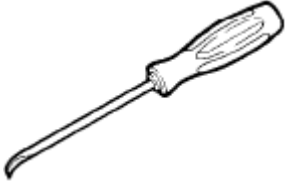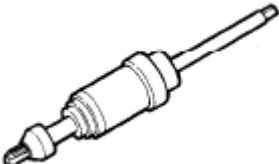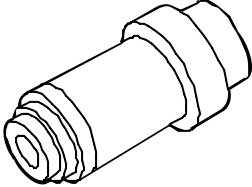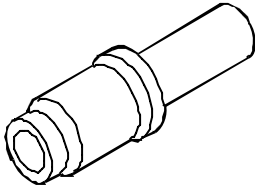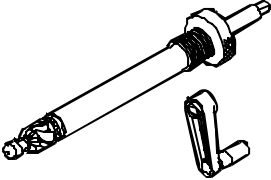TOOL No.	DESCRIPTION
99390330	 Valve guide reamer
99390772	 Tool to remove remains from injector housing seat
99390804	 Tool to thread injector housing to extract (use with 99390805)
99390805	 Guide bushing (use with 99390804)
99394015	 Guide bushing (use with 99394041 or 99394043)
99394041	 Milling cutter to regrind injector seat (use with 99394015)

Aquila Trucks Centres

TOOLS

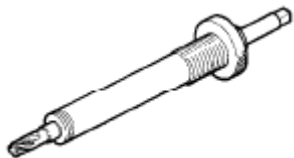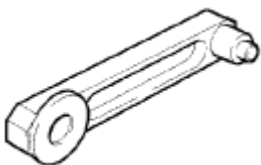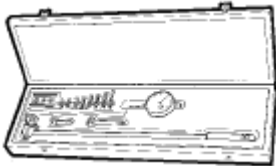TOOL No.	DESCRIPTION	
99394043		Reamer to regrind bottom of injector housing (use with 99394015)
99395216		Pair of meters for angular tightening with square 1/2" and 3/4" connection
99395219		Gauge to determine centre distance between camshaft and idle gear
99395603		Dial gauge (0 ÷ 5 mm)
99395687		Bore meter (50 ÷ 178 mm)
99396035		Crankshaft front gasket cover centring ring

Aquila Trucks Centres

Aquila Trucks Centres

ENGINE REMOVAL-REFITTING
Removal

Figure 18




If washing the engine bay, adequately protect the electric/electronic components and their connections.



- Set the vehicle on the level over a pit. Lock the rear wheels and tilt up the cab.
- Break the electric circuit by disconnecting the positive cable of the battery.
- Lift the radiator cowl and tilt up the cab.
- Disconnect the gearbox as described under the relevant heading, "Disconnecting the Gearbox".
- Drain the hydraulic power steering and engine cooling systems.

Steps to perform on the engine intake side:

- Disconnect the pipe (8) from the power steering tank (9) and the pipe (5) from the power steering pump (6).
- Disconnect pipes from overpressure valve (7) for fuel return to tank;
- Disconnect the air pipe (12) from the turbocharger actuator air filter. Disengage the pipe (10) supplying air to the fan hub from the clamps and the fitting (13).
- Disconnect the tube (3) of the air compressor.
- Disconnect the pipes (4) and (14) from the air compressor, freeing them from the clamps (16) and (18) on the engine.
- With the hose (2), remove the pipe (4) from the seat on the intake manifold.
- With the fitting (1), remove the pipe (14).
- Disconnect the coolant piping (17) and (15) and remove it by freeing it from the clamps.
- Disconnect the engine air intake sleeve (11).

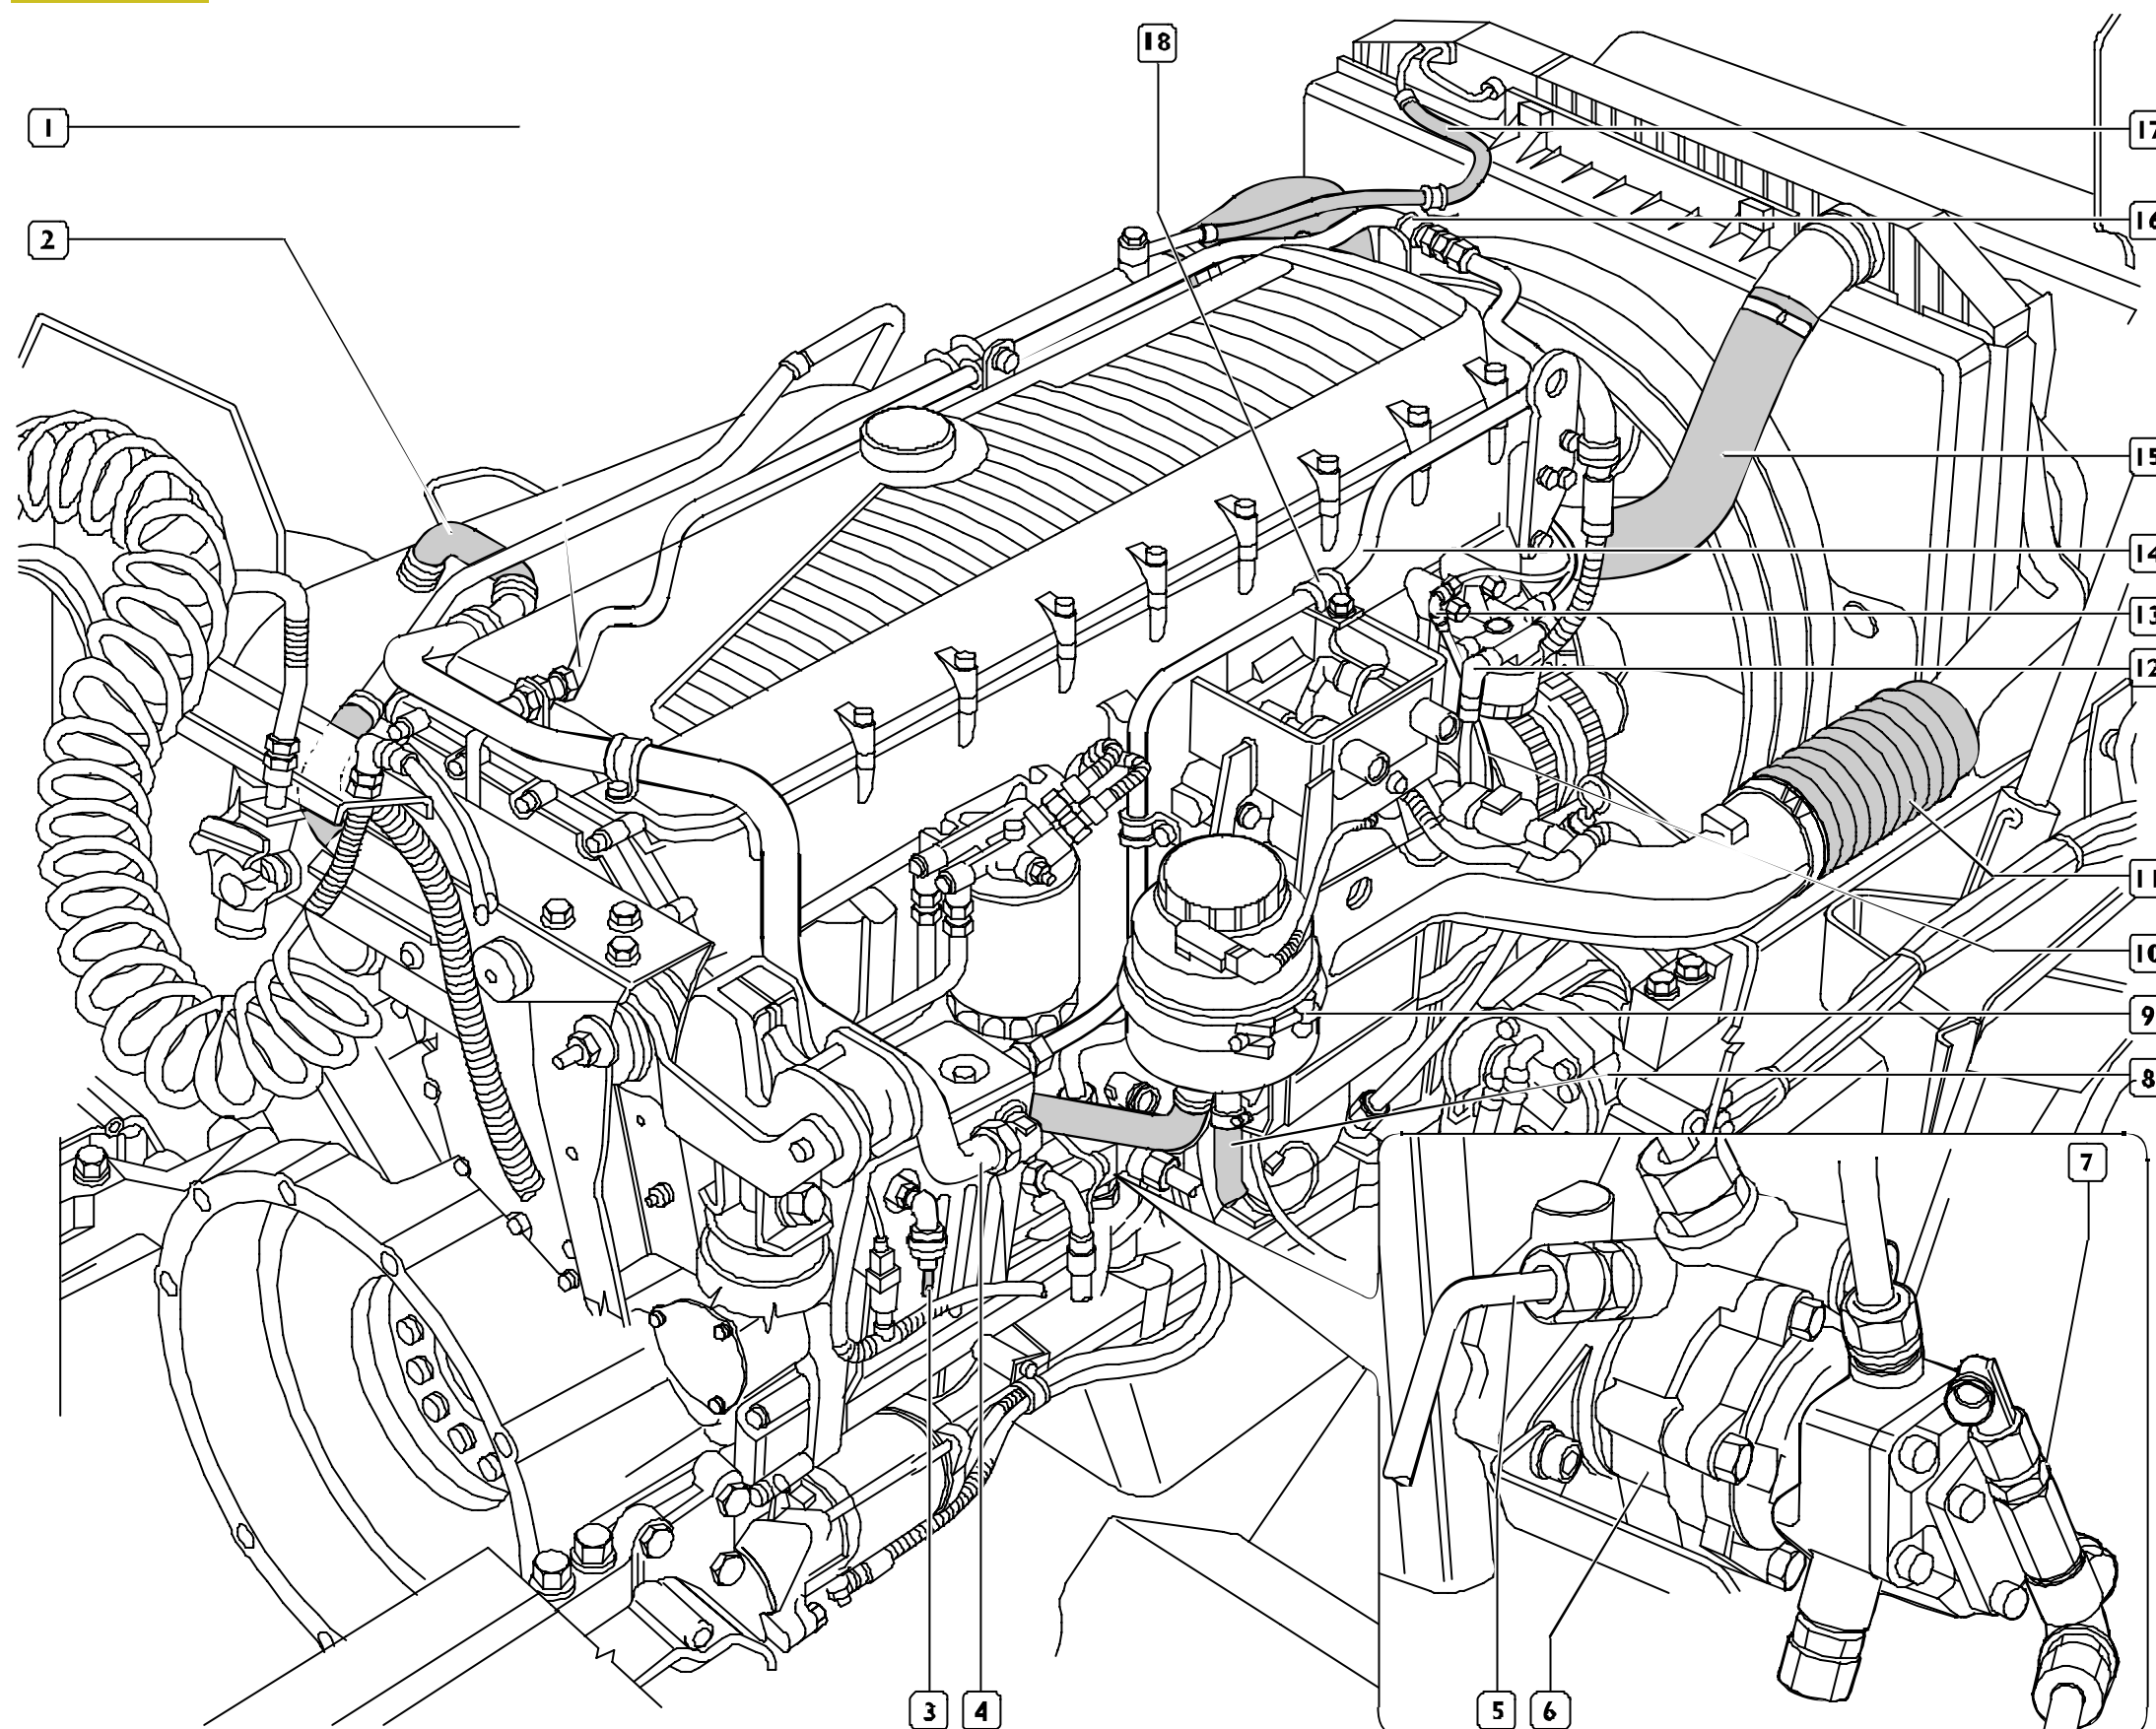

Aquila Trucks Centres

As a preliminary operation it is wise to disconnect the wiring (11) that will remain fastened to the chassis frame, proceeding as follows:

Figure 19

- Acting on the air intake side, disengage the wiring (11), disconnecting it from the engine cable with the connector (17).
- Disconnect the electrical connection (3) of the hydraulic power steering tank (4).
- Remove the entire mount of the engine starting and stopping buttons (2) together with the power steering tank (4), after disconnecting the pipe (5), by taking out the screws (1).

From the electronic control unit (8), disconnect the bottom connector (9), proceeding as follows:


- A Lift the safety lever.
- B Move the connector, disconnecting it from the control unit.
- C Lift the connector, unhooking the stop tooth.
- Disconnect the earth cable (10) from the crankcase and the electromagnetic clutch cable for the air-conditioning compressor, via the connector (12).
- Disconnect the electrical connections (7) on the starter motor (6).
- Disconnect the electrical connections (15) of the alternator (16).
- Disconnect the electrical connection from the valve on the control unit (8).
- Disconnect the diesel pipe (18) from the mount of the control unit (8).
- Then free the wiring (11) from the clamps (14) secured to the engine air intake duct (13) and carefully place it away to the side of the vehicle so it will not interfere with the removal of the engine.

Aquila Trucks Centres

From underneath the vehicle:

Figure 20

- Disconnect the coolant pipe (3) from the engine and from the radiator, then remove it.
- Disconnect the coolant pipe (2), loosen and remove the belt (6) from the pulley of the air-conditioning compressor by using the automatic tensioner.
- Disconnect the compressor (9) from the engine mount (8) by taking out the screws (7) and (10).
- Without disconnecting the pipes of the compressor and then without discharging the air-conditioning system, free the pipes (5) from the brackets (1 and 4), suitably tie the compressor to vehicle so it does not interfere with the operations of removing the engine.

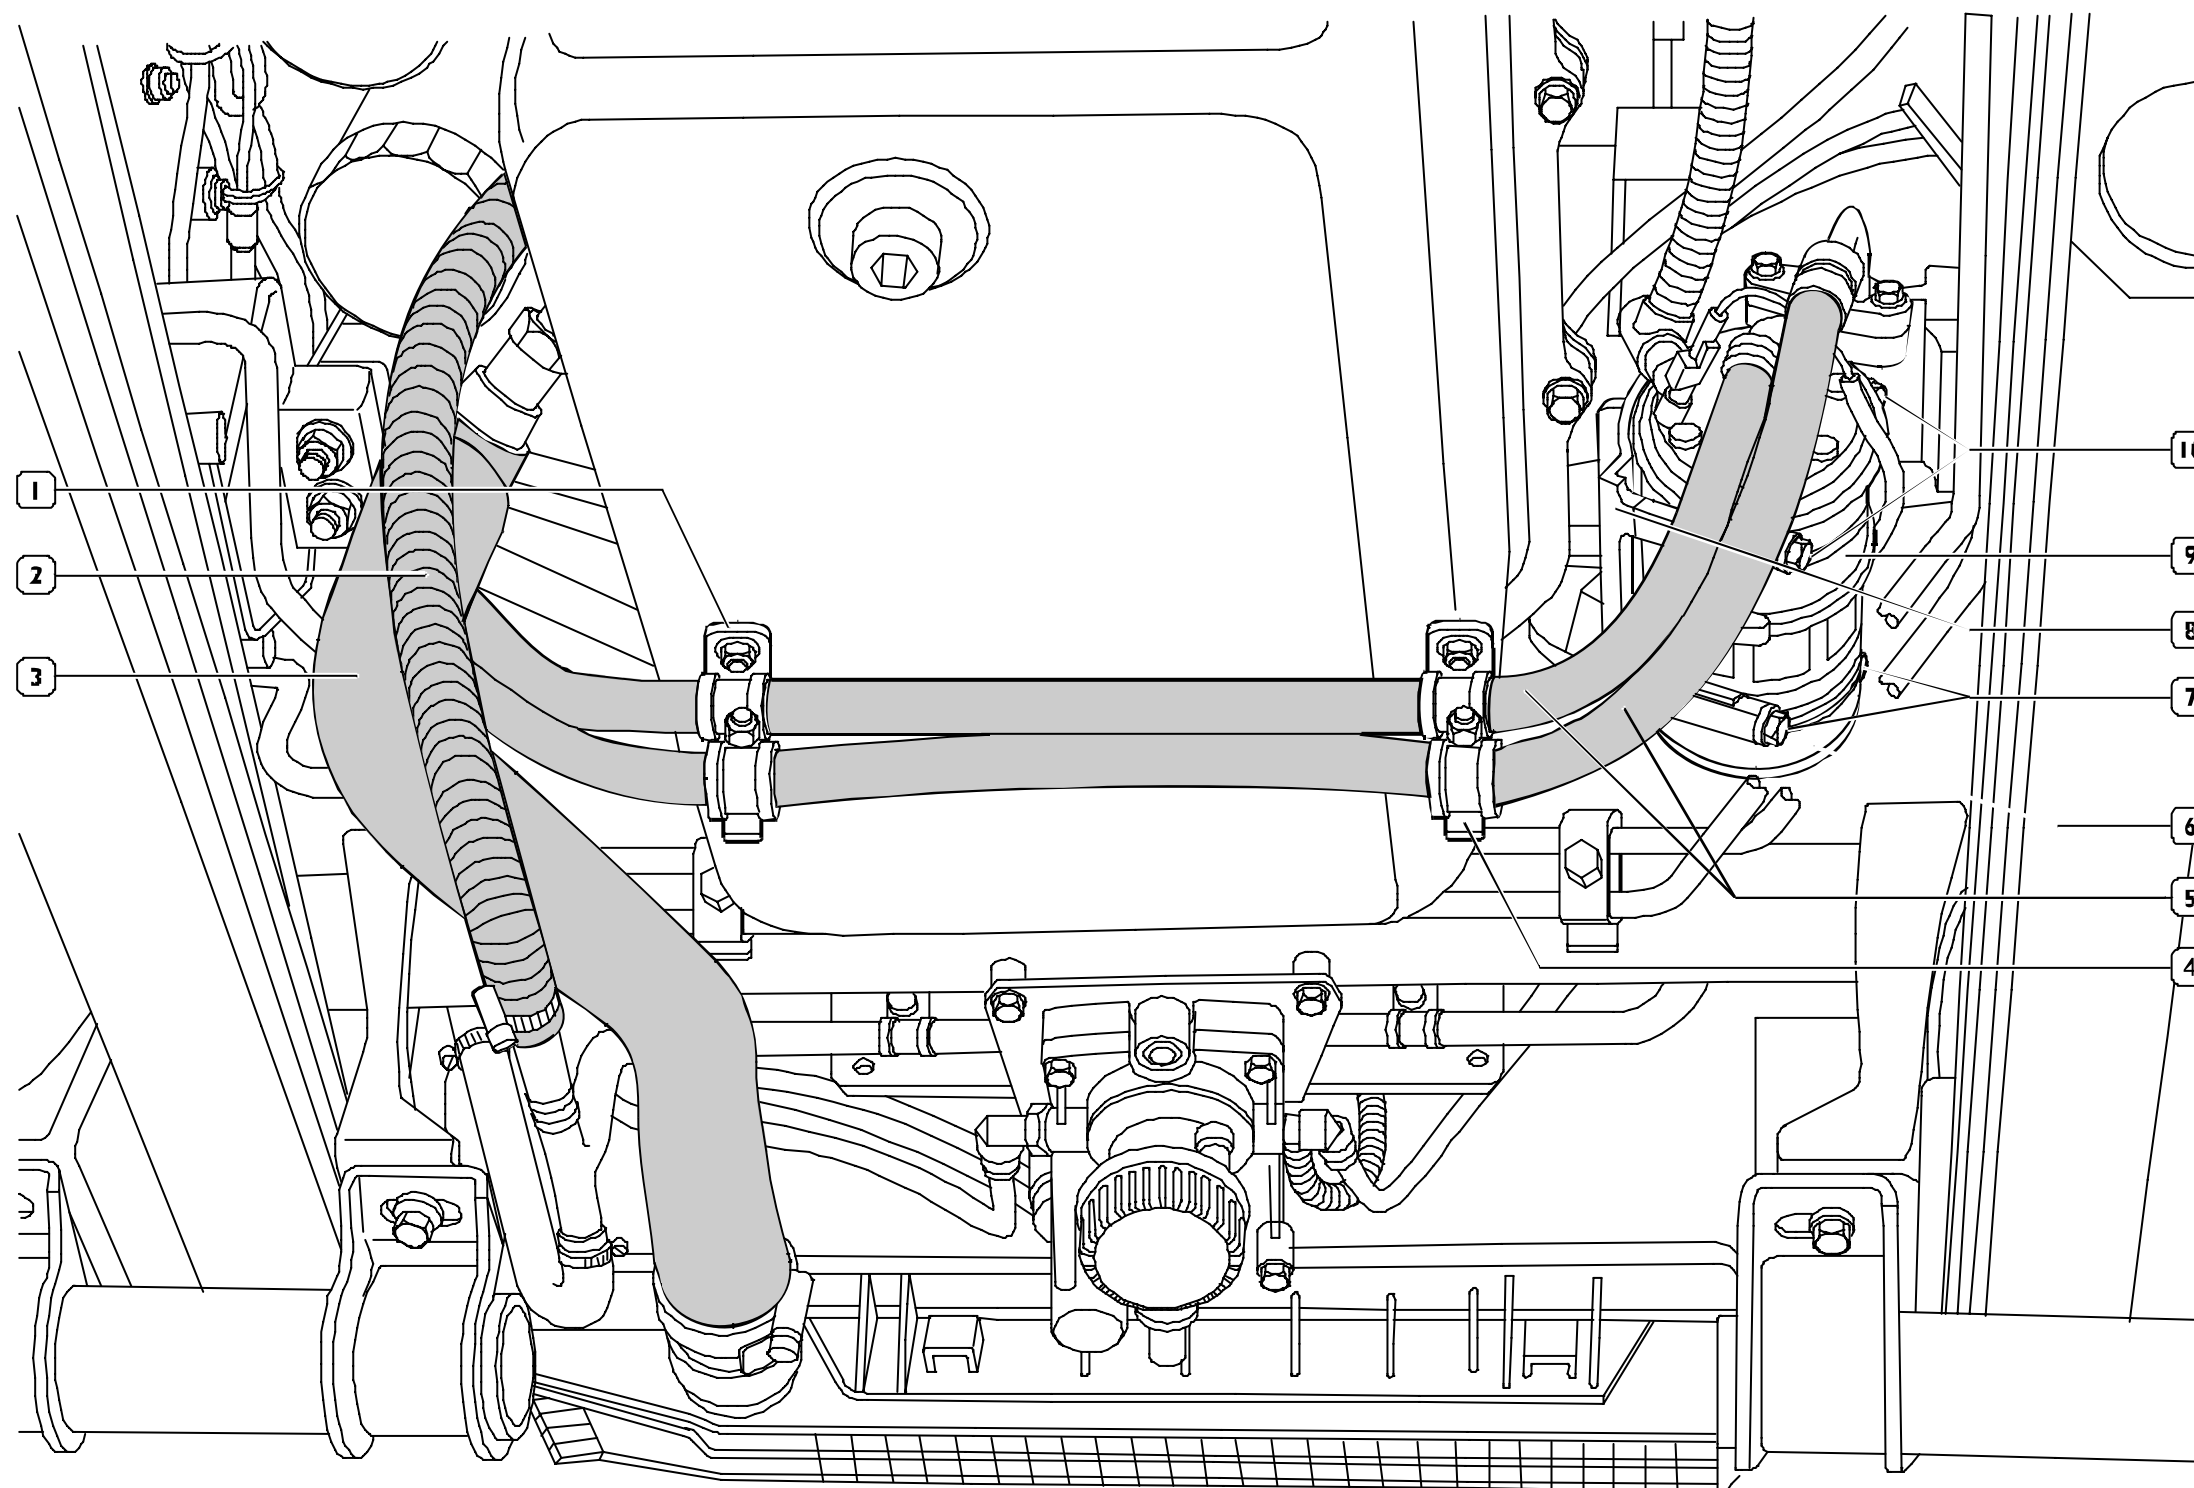

73903

Aquila Trucks Centres

Working on the engine exhaust side (driver's side), proceed as follows:

- Disconnect the air sleeve (6).
- Free the air-conditioning pipes (5) from the clamp (4) secured onto the manifold (3).
- Disconnect the coolant pipes (9) and (11) from the engine.
- Remove the engine air intake manifold (12), disconnecting it from the sleeve (21), fastenings (8) and (13), flexible sleeve (14); disconnect the oil vapour recovery pipe (7) and disconnect the air intake pipe of the compressor (20).
- Disconnect the exhaust pipe (16) by acting on the collar (15) and remove the bracket (17) by undoing the fasteners.
- Anchor the engine to the beam 99360585 and keep the tool under tension before removing the engine mounts.
- Take out the front (10) and rear (18) and (19) screws fixing the engine mounts on both sides.
- Slowly take the engine out of its bay, drawing it slightly back so as to free the fan (2) from the bay of the air conveyor (1) on the radiator.
- Remove the fan from the hub by using the four screws. Take out the engine completely, taking care over any interference with the remaining parts secured to the chassis frame, especially the wiring interfering with the right-hand rear engine mount.
- Disconnect the air bleed pipe (22) from the Intarder coolant pipe.

NOTE If washing the engine, adequately protect the electric/electronic components and their connections.

Refitting




To refit the engine, carry out the steps described for removal in reverse order, taking special care over the steps required to install the assembly in the engine bay, and keep to the following instructions:

- Check the flexible mountings of the engine and gearbox assemblies; replace them if deteriorated.
- Check that the parts of the exhaust pipe have not deteriorated or are about to deteriorate, in which case they should be replaced.
- Tighten the screws and/or nuts to the required torque.
- Fill the cooling system with coolant as required under the relevant heading.
- Bleed the air from the supply system as described under the relevant heading (542011).

NOTE Before bleeding the supply system, connect tubes onto the bleed screws located on the pre-filter mount, filter and front of the cylinder head in order to recover the fuel in suitable containers during this operation. In particular, prevent the fuel, on coming out of the bleed screw on the cylinder head, from fouling the belts driving the fan, water pump, alternator and air-conditioner compressor, damaging them.

- Fill the hydraulic power steering circuit and bleed off the air as described under the relevant heading (501030).
- Check the engine oil level.

Figure 21

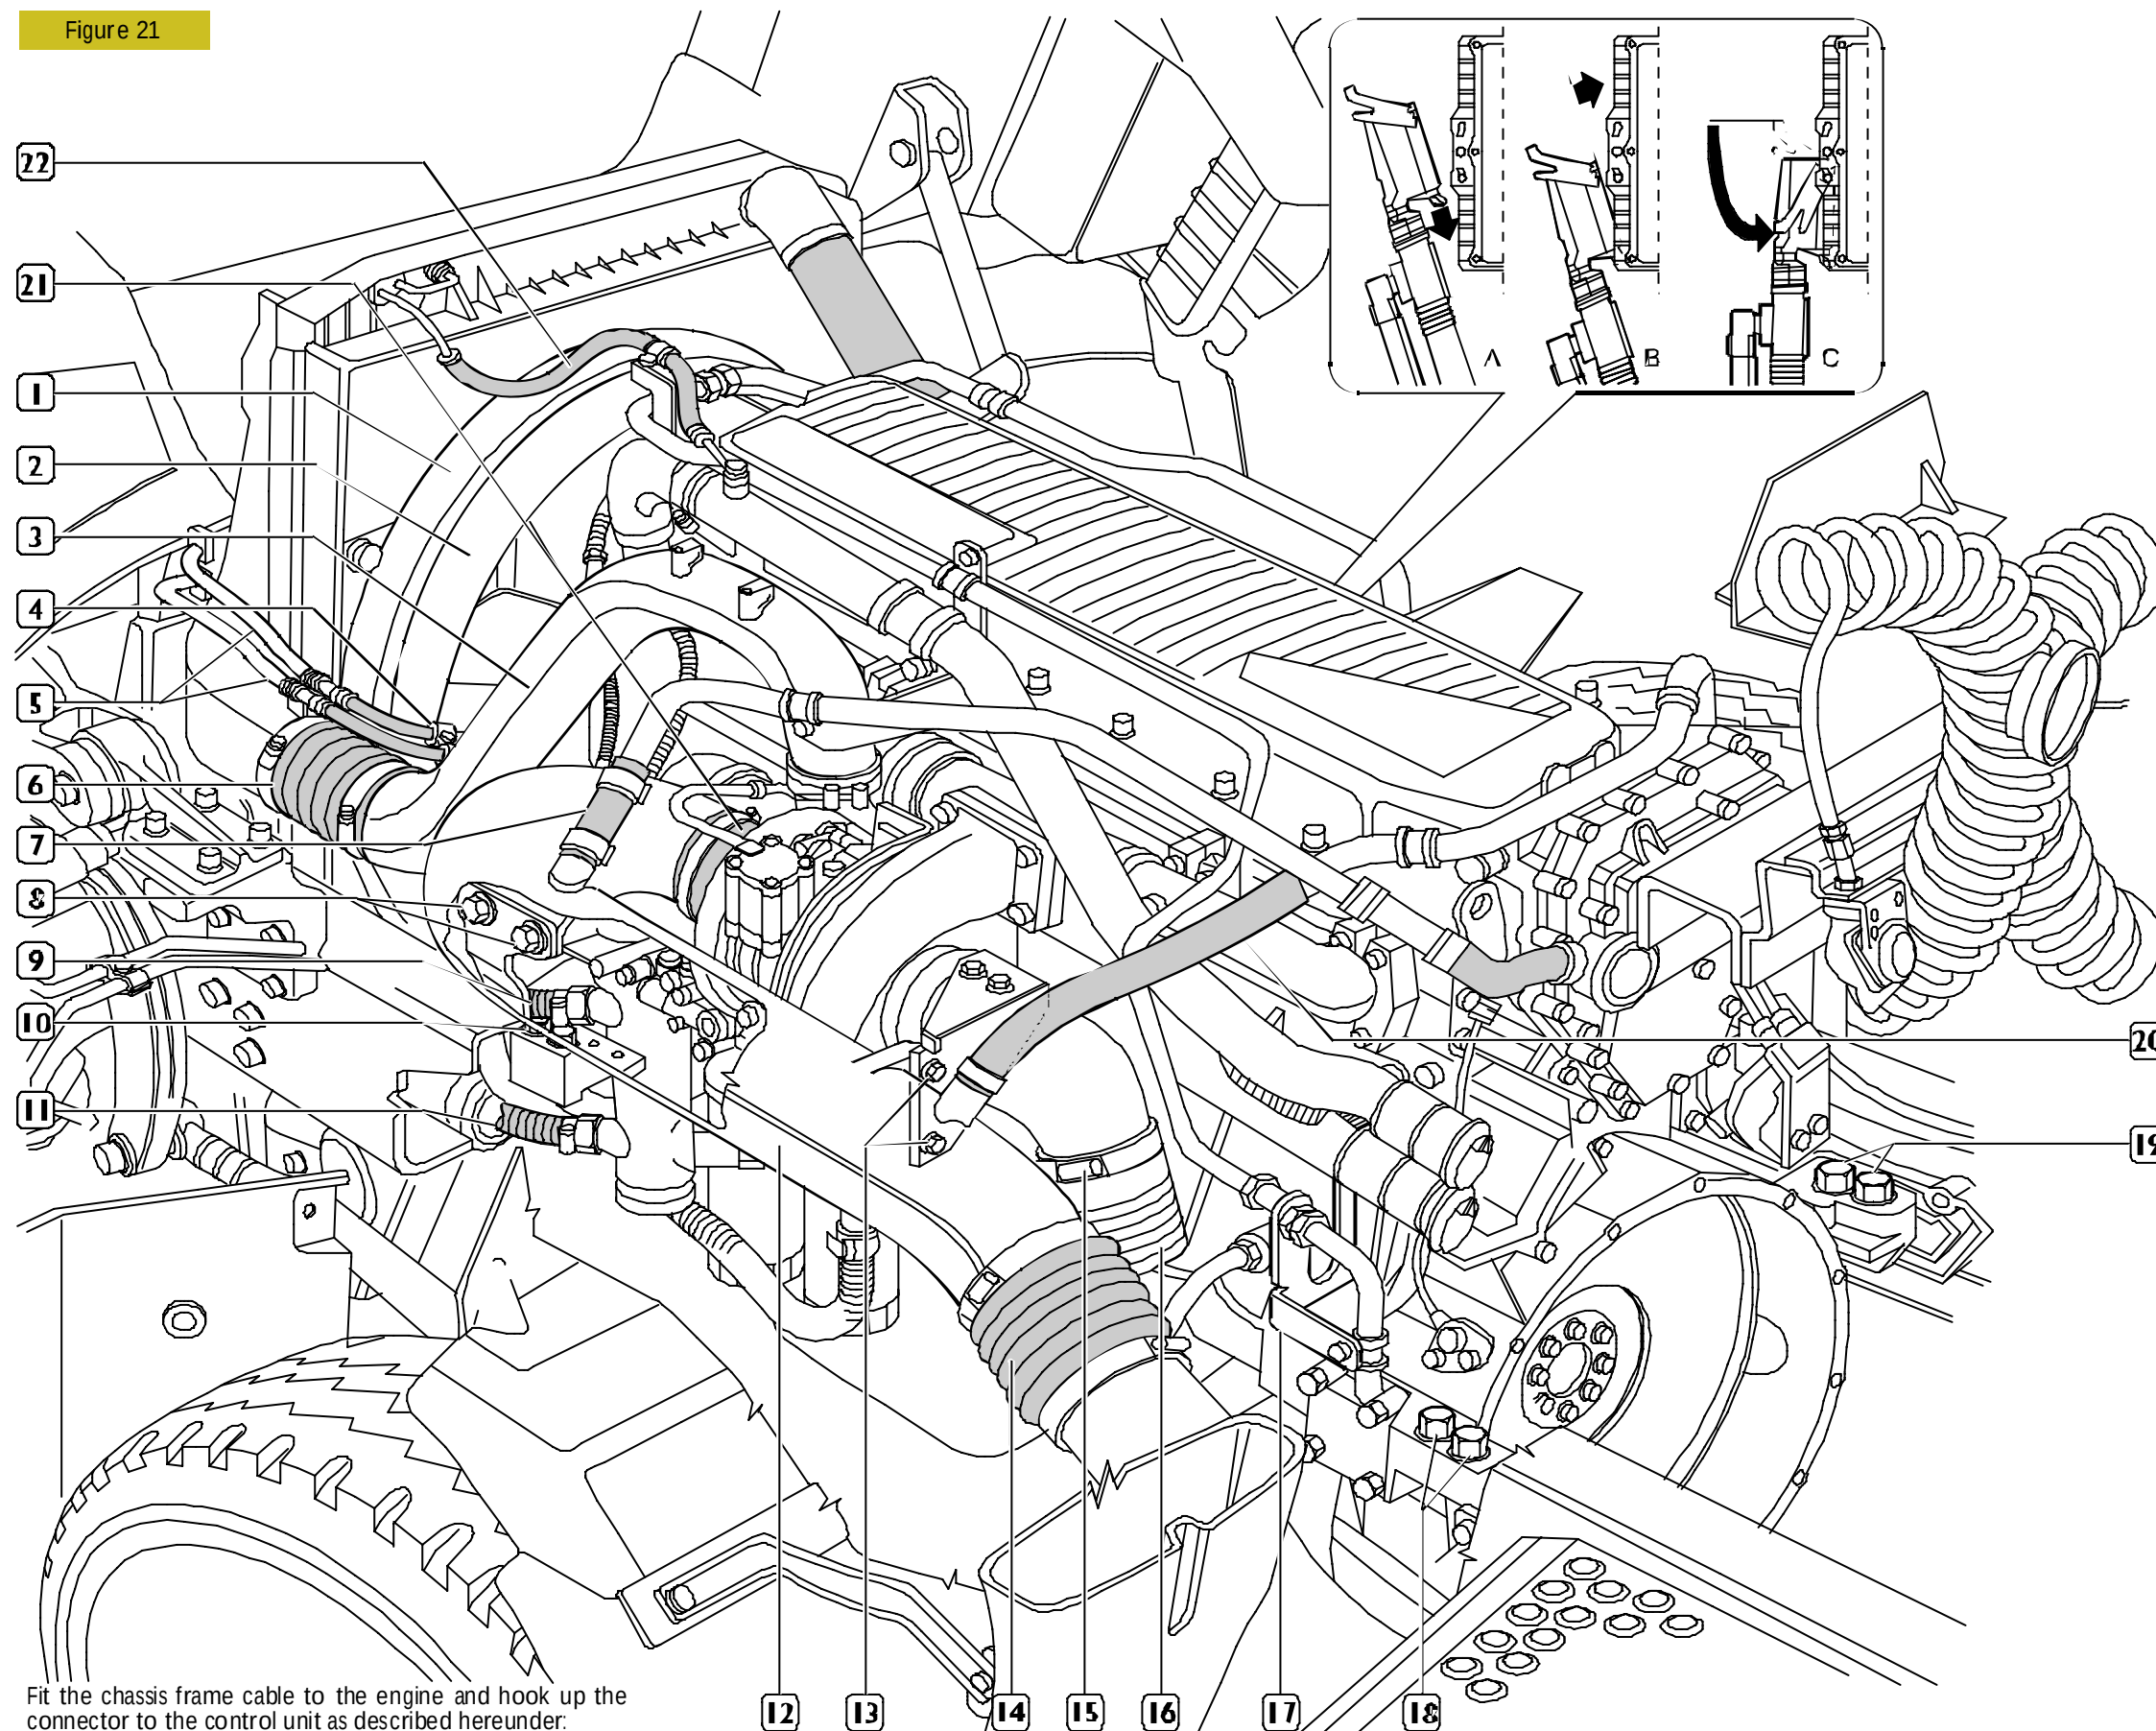

Fit the chassis frame cable to the engine and hook up the connector to the control unit as described hereunder:

- A Insert the stop tooth in its seat.
- B Hook up the connector.
- C Push the safety lever as far as the stop.

Aquila Trucks Centres

Filling the cooling system

Preliminary operations

For vehicles equipped with just the standard cab heating system or manual air-conditioning:

- Fully open the coolant cock on the instrument panel.

For vehicles equipped with the automatic air-conditioning system:

- Set the temperature control in the cab on the HI position.

For vehicles equipped with an additional heater:


- The heater must not be turned on.

Operations

Place a sheet of cardboard between the coolant radiator and the intercooler radiator in order to shorten the time it takes to reach the engine's working temperature (approx. 90 °C).

Filling the system

Figure 22

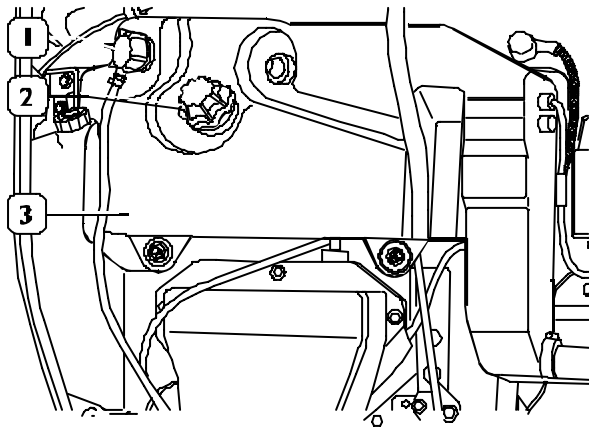

87198

NOTE Filling must be done with the engine cold.

The cap (1) must not be removed for any reasons whatsoever.

To prevent pockets of air forming in the system, the fluid has to be transferred slowly (approximate flow rate 8 litres/min).

For vehicles equipped with an additional heater: the percentage of glycols in the coolant must be no greater than 50%.

After conscientiously following the above warnings, proceed as follows:

- Remove the cap (2) from the expansion tub (3).
- Pour the coolant into the expansion tub (3) till it is quite full.



Bleeding air from the system

NOTE For vehicles equipped with an additional heater:

- Turn on the heater.

- Start the engine and keep the speed just above idling for 5 min.

NOTE If the tub empties completely during these first few minutes, stop the engine and top it up at a slower rate than before.

Restart the engine.

- after 5 min. running, top up the level of fluid in the expansion tub, if necessary.

- close the expansion tub filler with the cap (2). Take the engine up to top speed so that the coolant quickly reaches the temperature of full thermostat opening (approx. 90 °C) and keep it in this state until all the air is bled out of the system.

This is checked by seeing there is no foam or air bubbles in the tub.

The longest time it takes to bleed the air from the system completely is approximately 15 minutes from the moment when the thermostat opens (opening starts 85 °C ± 2 °C).

NOTE Do not take the filler cap off the expansion tub until the fluid in the system has cooled completely. Any topping up must only be done with the engine cold.


This is to avoid:

- 1 - Operator burns.
- 2 - Damage to the engine since cooling system pressurization is only created with the fluid heating from the condition of the engine cold.

Aquila Trucks Centres

542011 Bleeding air from the fuel system

Figure 23

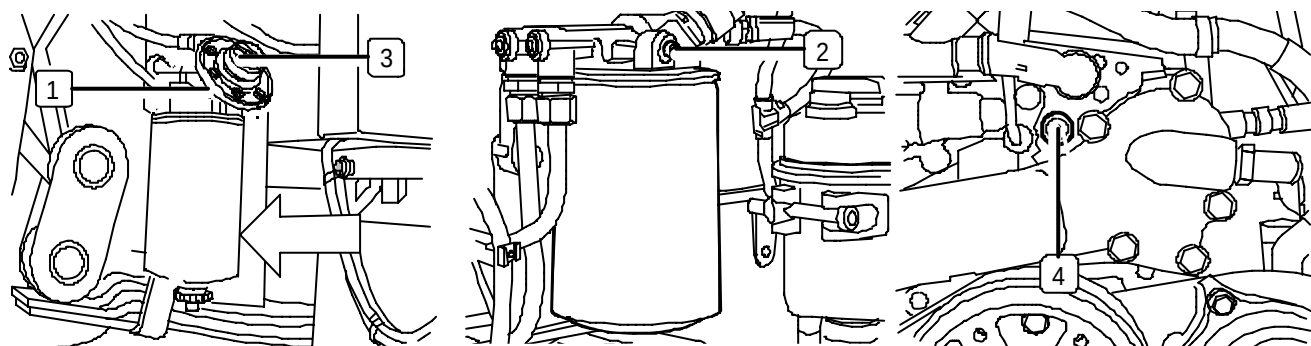

Before starting the engine, bleed the air from the fuel system, applying special tubes to the bleed screws to run the bled fuel off into a specific container.

- Bleed screw (1) on the pre-filter mounting.
- Bleed screw (2) on the filter mounting.
- Bleed screw (4) on the front of the cylinder head.
- Work the pump (3) on the pre-filter mounting till fuel with no air bubbles in it comes out of the screw (1); close the screw (1).
- Repeat this step for screw (2).
- Repeat this step for screw (4).

NOTE Under no circumstances let fuel foul the water pump alternator drive belt, etc.

Checks and tests


Start the engine, leave it running at just a little faster than idling speed and wait for the temperature of the coolant to reach the level to open the thermostat. Then, check that:

- no water leaks from the connecting sleeves of the pipes in the engine cooling and cab heating circuits, tightening the collars further if this is necessary.
- no oil leaks from between the cover and the cylinder head, between the oil sump and the crankcase, between the oil filter and its seat, between the heat exchanger and the crankcase, or between the various pipes in the lubrication circuit.
- no air leaks from the pipes connected to the pneumatic components involved in removal.
- the indicator lights on the instrument panel and the devices disconnected when removing the engine all work properly.

Aquila Trucks Centres

543422 ELECTRO-MAGNETIC FAN DRIVE REPLACEMENT**Removal**

Figure 24

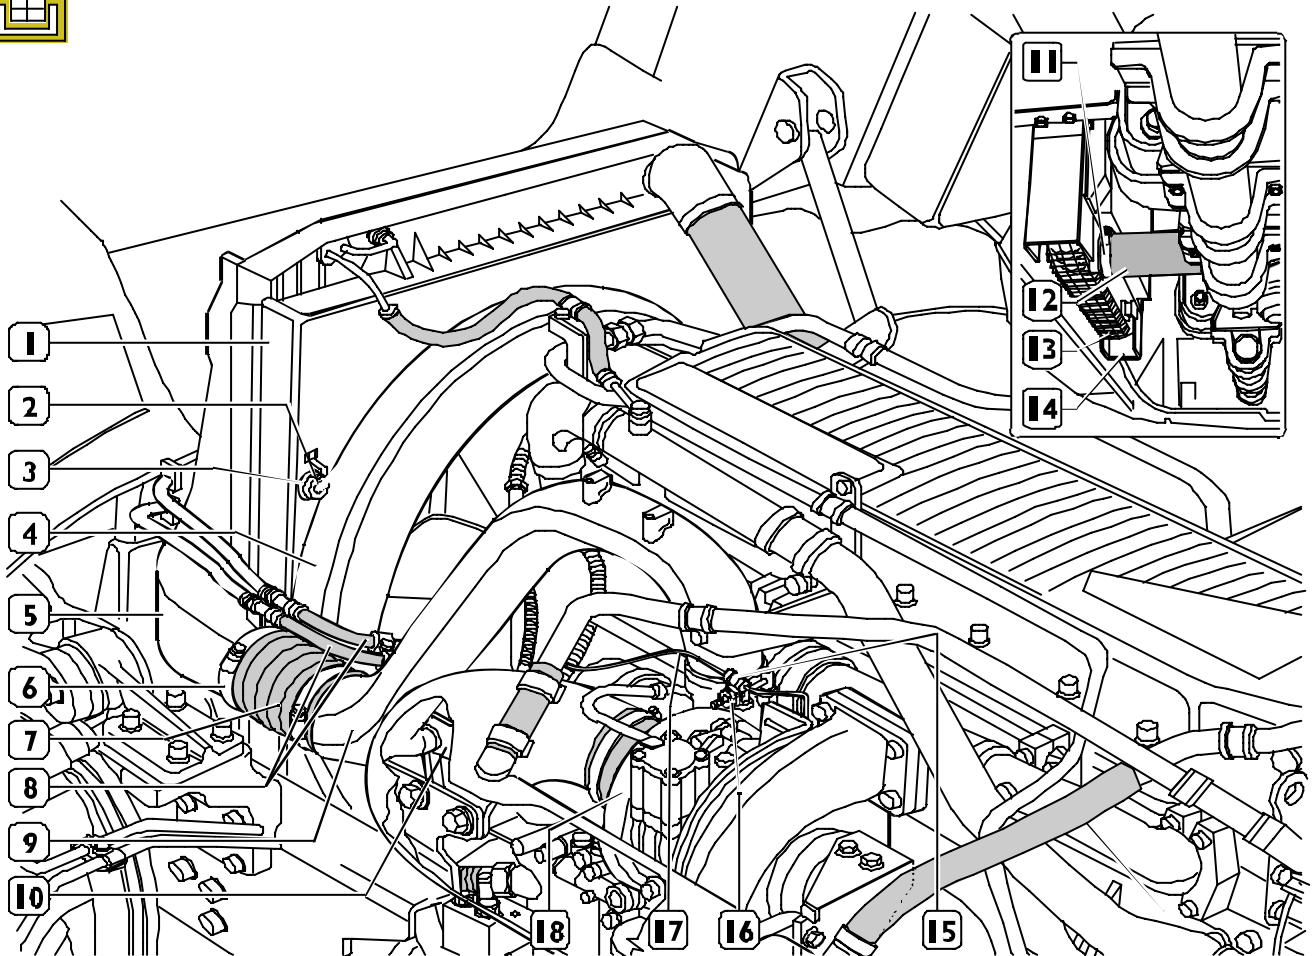

87382

To cut off the batteries, remove the electric wires or open the main switch.

Lift the calender and tilt the cabin.

Go under the vehicle and remove the plug (13) from the radiator (14) and drain the coolant fluid in the appropriate container.

Remove the clip (11) and disconnect the radiator (12) sleeve (14).

Remove the climate control system pipe (8) fastening screw (if fitted) to the air conveyor (9).

Remove the air conveyor (9) fastening screws (10) from the support bracket.

Remove the two sleeve fastening screws to the intercooler radiator (5).

Remove nut (16), then disconnect electric cable (17). Slacken the clamp (15) and remove the air conveyor (9) from the turbocharger (18) and from the intercooler radiator (5).


Slacken the sleeve (6) fastening clamp (7) from the intercooler (5) radiator.

Drive in the suitable self-threading screw in the pin hole (2) taking care to partially take off and finally remove with a screwdriver the upper clip (3) fastening the fan air (4) conveyor to the radiator guard (1).

Remove the lower clip in the same way.

Aquila Trucks Centres

Figure 25

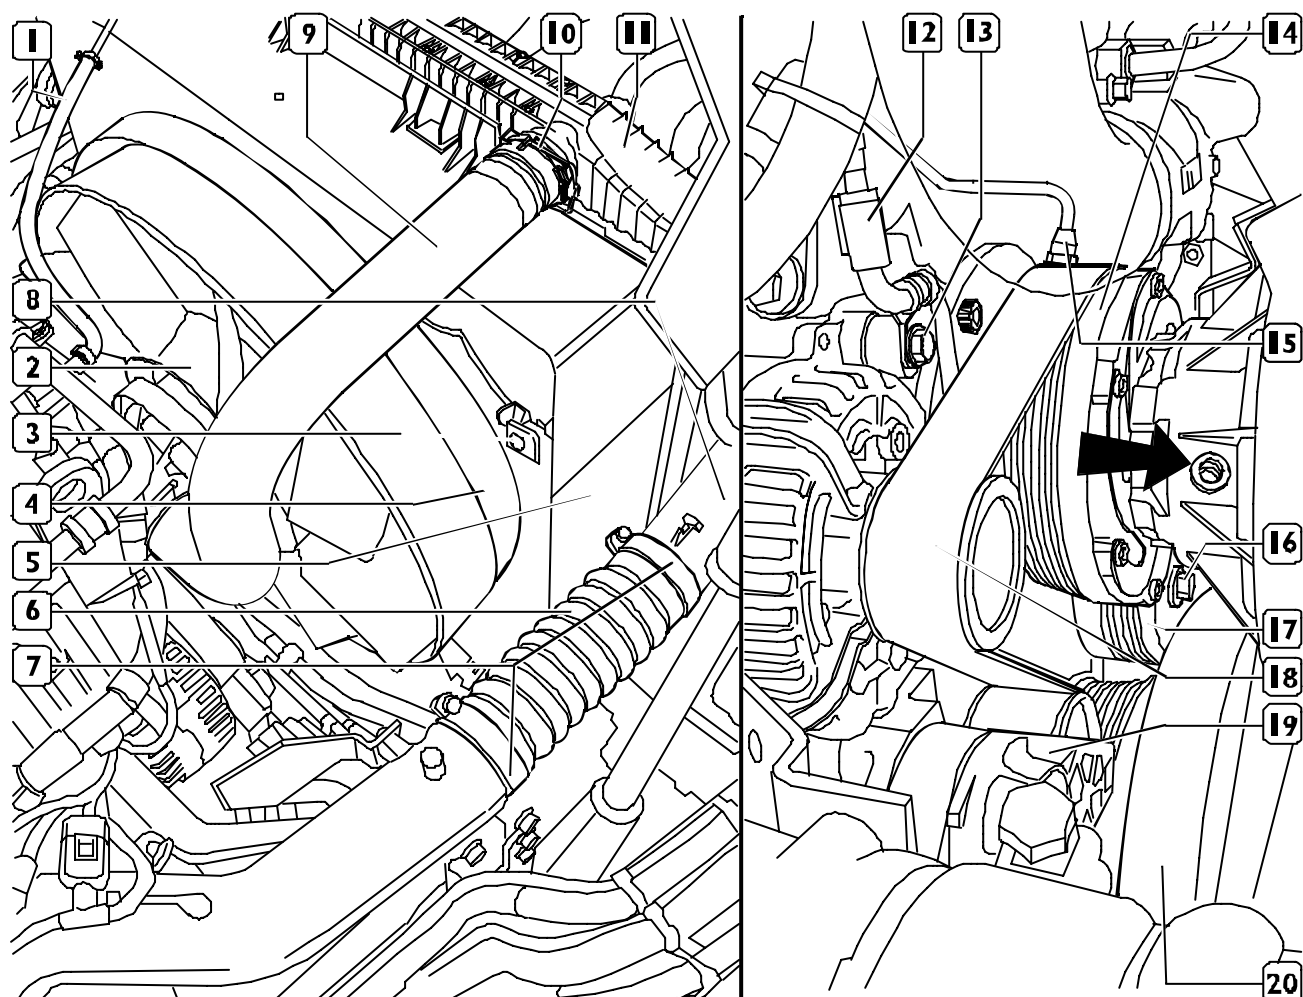

107398

Disconnect the pipe (1) from the thermostat.
Remove the clip (10) and disconnect the sleeve (9) from the radiator (11).

Slacken the clamps (7) and remove the sleeve (6).
Remove the upper and lower clip (3) as described for the left-hand side.

Remove the radiator support fastening screws on the chassis and move the radiator unit forwards.

Lift air conveyor (4) and disconnect it from the vehicle.

Remove the radiator support fastening screws (2) on the chassis and move the radiator unit forwards (14).

Remove the fan fastening screws (2).

Loosen belt (18) tension by acting on automatic belt-stretcher (19), then remove the belt from the pulleys.

Disconnect the electric connection (12) from the electro-magnetic fan drive (14).

Lock engine shaft rotation.

Remove securing screws and dismount damper (20).

Unscrew screw (16) and dismount pulley (17).

Disconnect pneumatic piping (15) from electro-magnetic fan drive (14).

Remove the fan fastening screws (13) to the electro-magnetic fan drive (14).

Refitting



To refit the electro-magnetic fan drive, reverse the removal procedure and attain to the following rules:


- check the control belt (18) conditions; replace it if damaged or worn out;
- tighten the screws and/or nuts to the prescribed torque;
- fill the cooling system with the prescribed fluid, then blow air off the cooling system as described in the respective chapter;

NOTE

The electro-magnetic fan drive is fitted with two threaded holes (→) at 180° one from the other. In the event of fault, lock the joint control driving in a M8x16 mm screw in these holes. In this way it is possible to take the vehicle to the closest dealership.

Aquila Trucks Centres

Figure 26

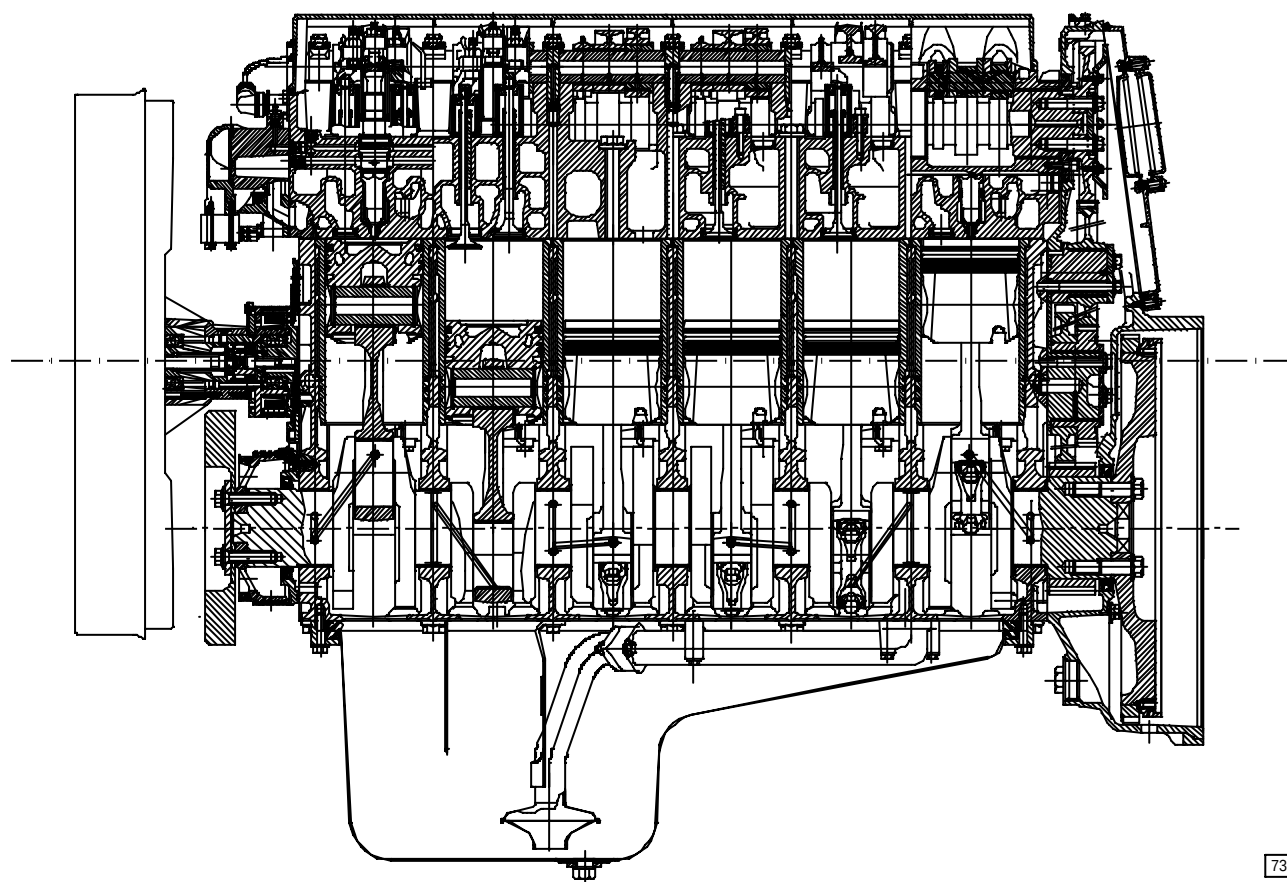


73581

LONGITUDINAL SECTION OF THE ENGINE

Aquila Trucks Centres

Figure 27

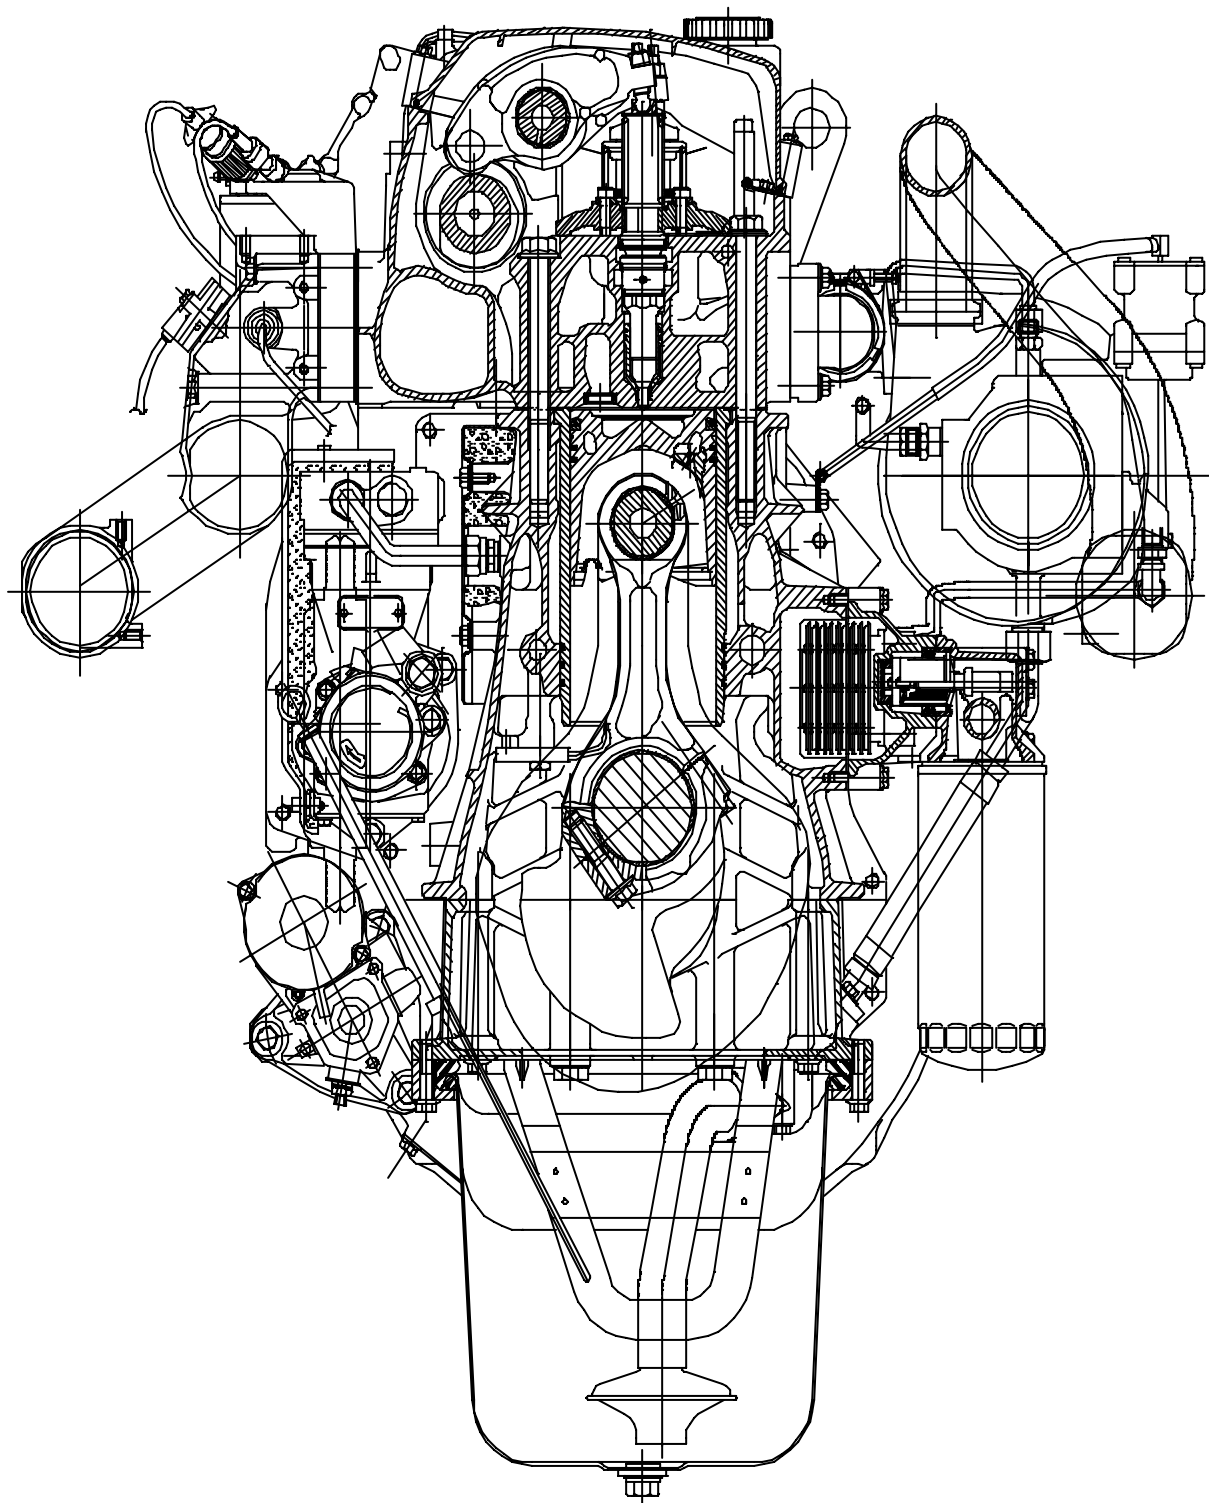


120149

TRANSVERSE SECTION OF THE ENGINE

Aquila Trucks Centres


540110 DISASSEMBLY OF THE ENGINE

Before fastening the engine on rotary stand 99322230, dismount or disconnect following parts:

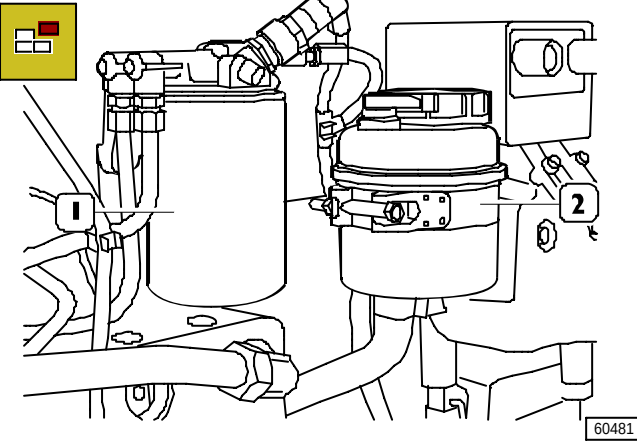
Figure 28

On the right-hand side of the engine


- the fuel cartridge filter (1).
- the hydraulic power steering tank (2).
- the electrical connections.

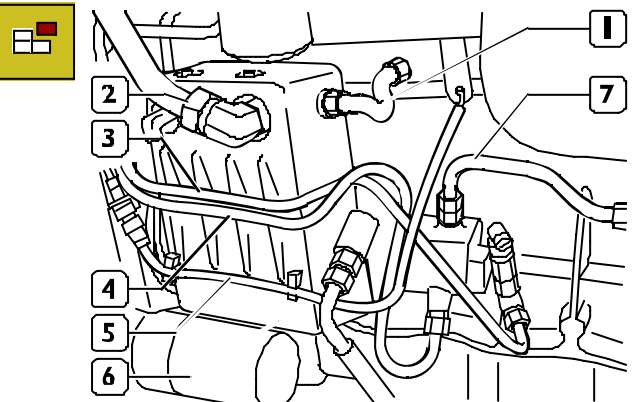Figure 29

- pipes (3, 4 and 7);
- electrical cables (5);
- sound deadening guard (6);
- pipes (1 and 2).

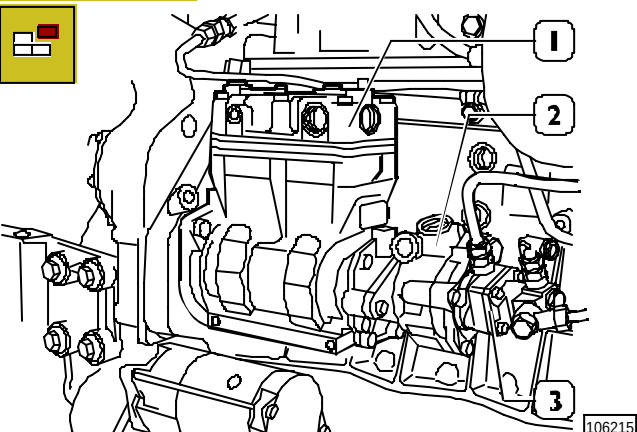
Figure 30

- compressor (1) complete with oversteering pump (2) and feed pump (3).

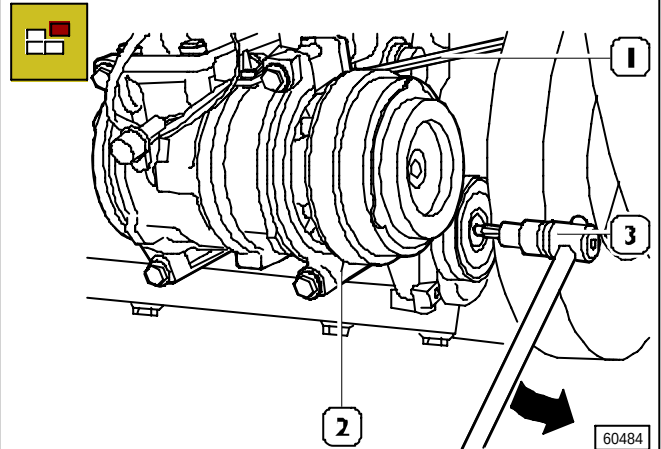
Figure 31

- Using the right tool (3), turn it in the direction shown by the arrow and remove the air-conditioner drive belt (1).
- Remove the air-conditioner (2) together with the engine mounting.

On the left-hand side of the engine

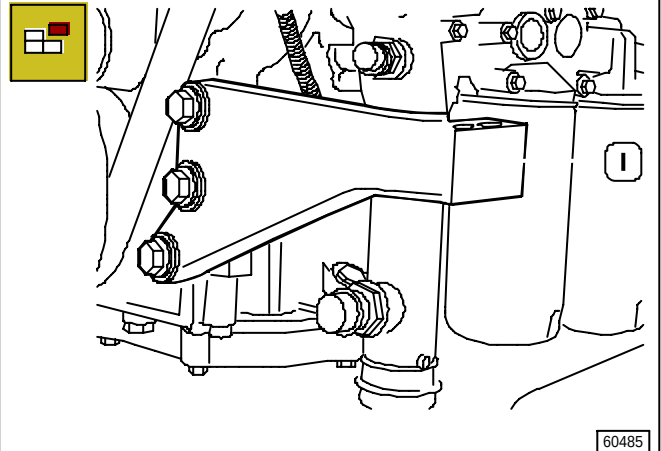Figure 32


- the engine mounting (1).

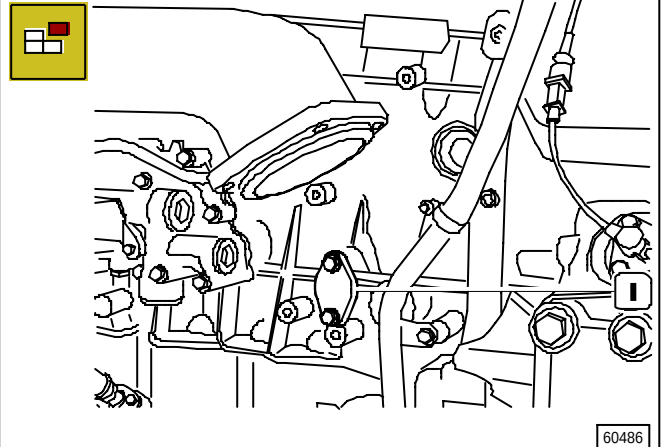Figure 33

- the oil overpressure valve (1).

Aquila Trucks Centres

Figure 34

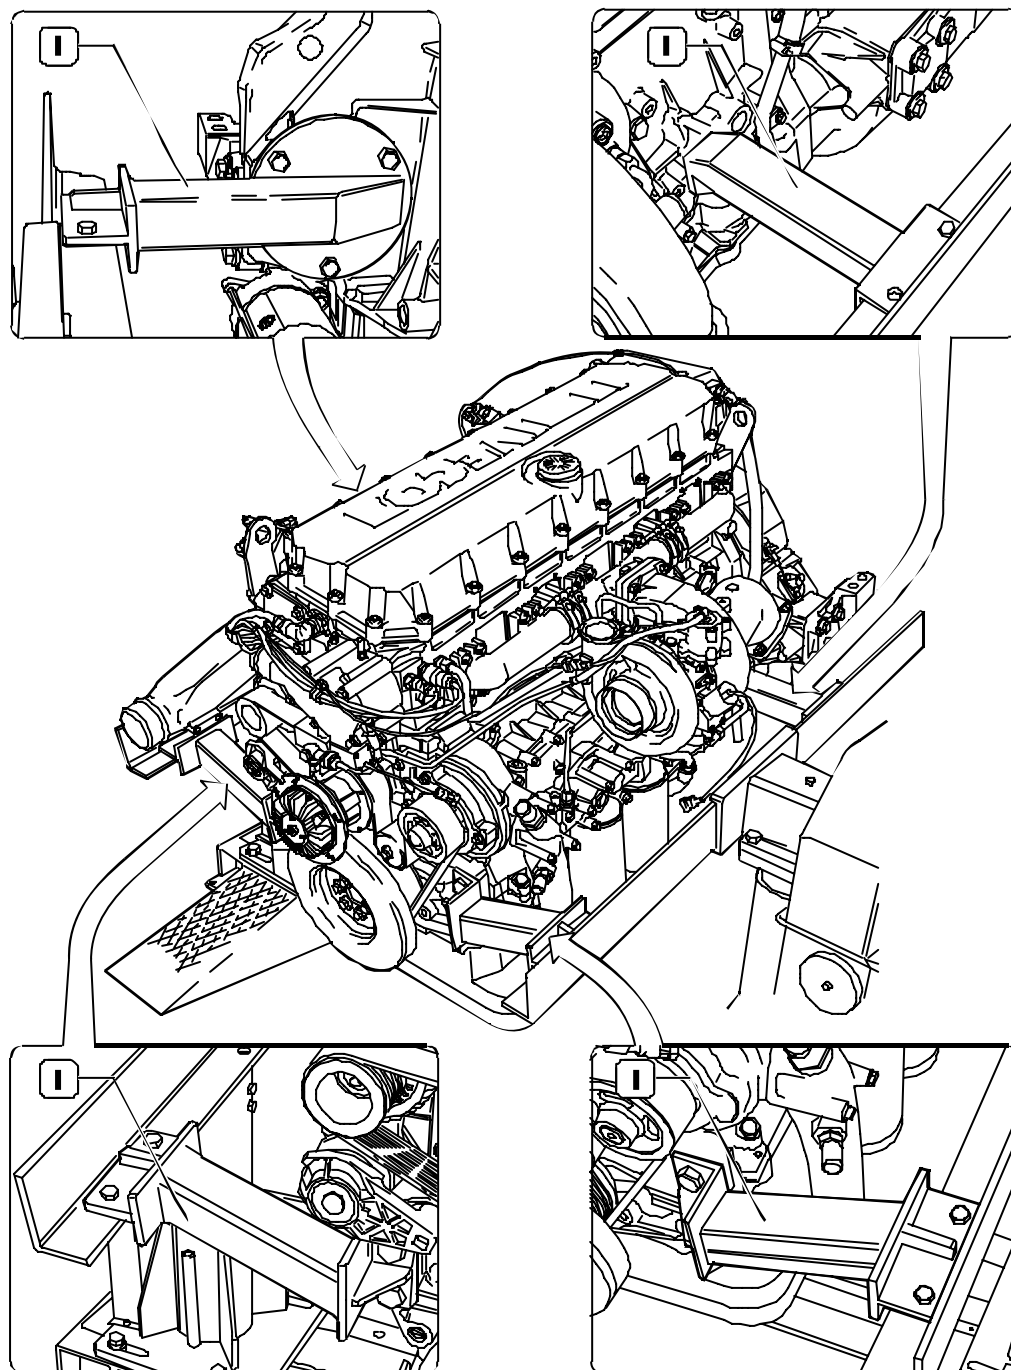


73582

Secure the engine to the rotary stand 99322030 with the brackets 99361036 (1).

Aquila Trucks Centres


Figure 35

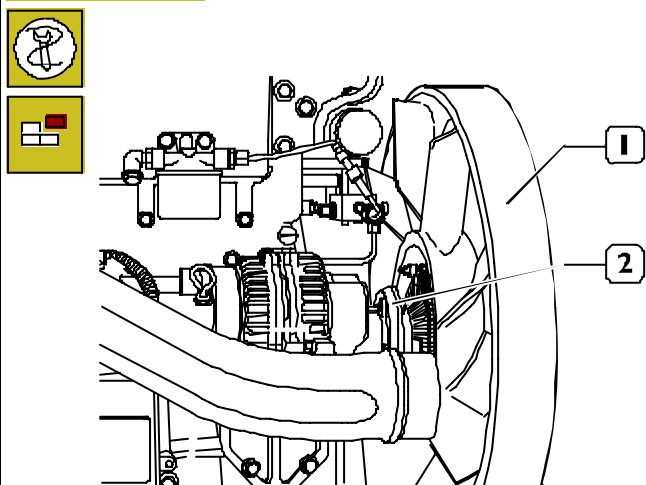

71701

If present, dismount fan (1) from electromagnetic fan drive (2).


Figure 36

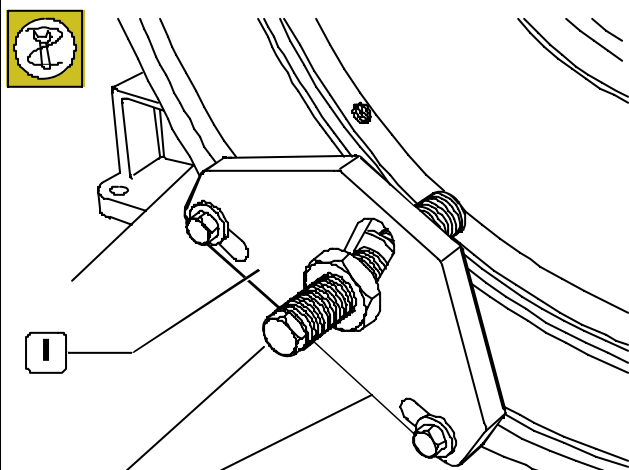

71702

Use tool (1) 99360351 to lock the flywheel.


Figure 37

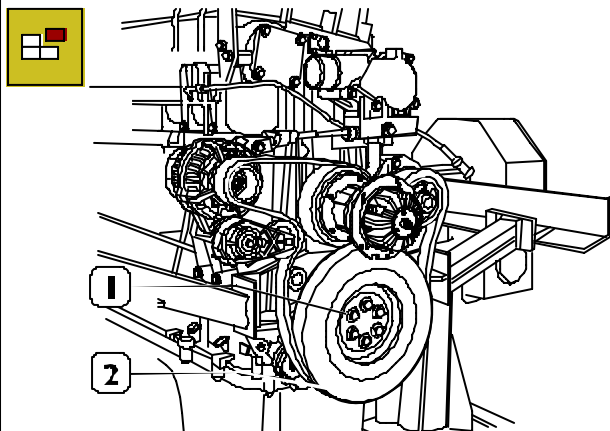

92840

Operate the 6 Allen screws (1) to remove the damper (2).

Figure 38

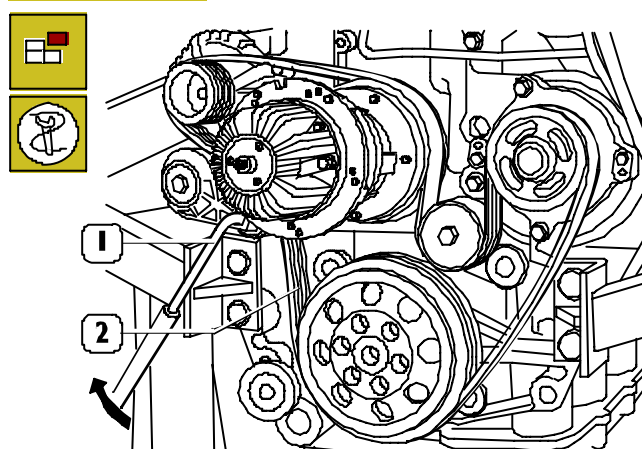


73584

Using an appropriate tool (1), turn it in the direction shown by the arrow and remove the auxiliary member drive belt (2).

If present, dismount compressor for climate control system and relating driving spring belt.

NOTE Spring belt must be replaced by a new one after every dismounting operation.

Figure 39

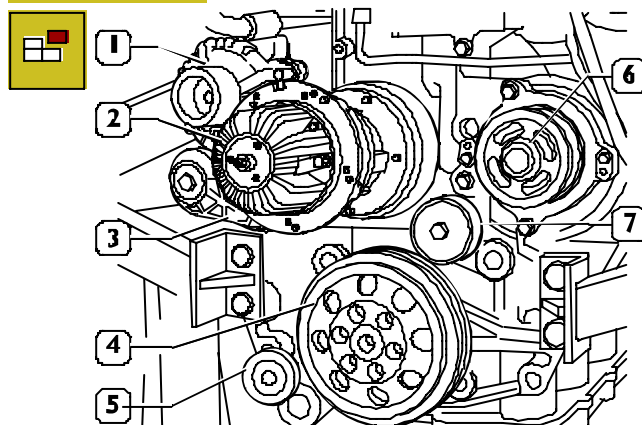


73585

Remove the alternator (1), electric fan drive (2), automatic tensioners (3 and 5), pulley (4), water pump (6) and pulley (7).

Aquila Trucks Centres

Figure 40

(Version without Intarder)

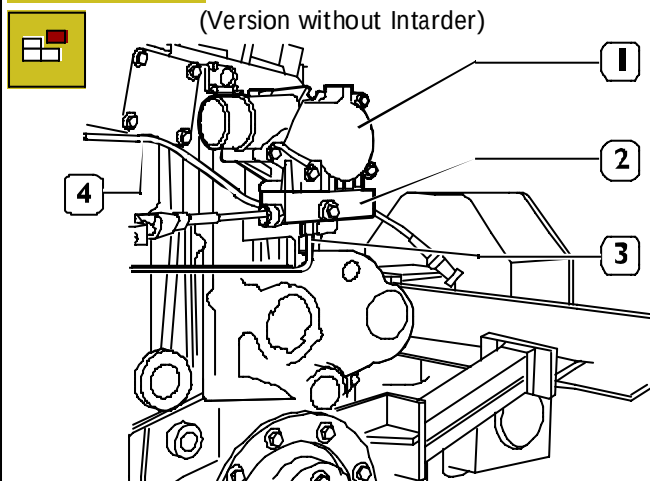


98863

Disconnect the pipes (3 and 4) from the V.G.T. control solenoid valves.

Remove the thermostat assembly (1) together with the V.G.T. control solenoid valve (2).

Figure 41


(Version with Intarder)

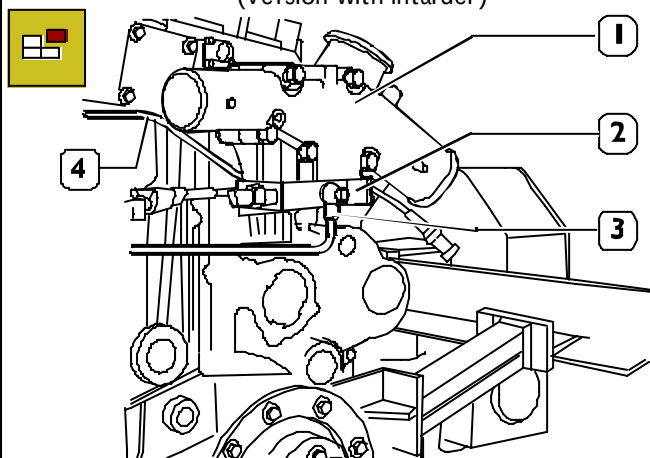

98864

Disconnect the pipes (3 and 6) from the V.G.T. control solenoid valves. Remove the water inlet/outlet pipe assembly (1) together with the V.G.T. control solenoid valve (2).


Figure 42

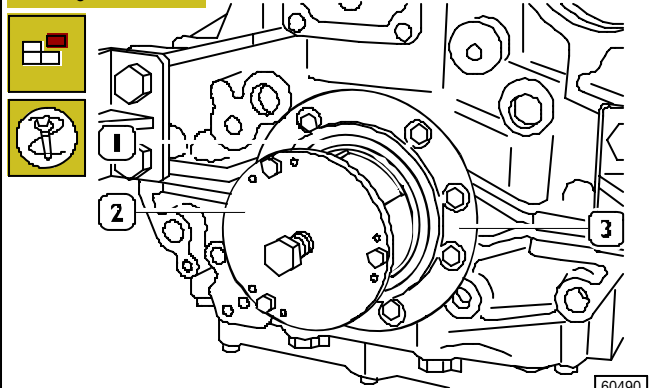

60490

Apply extractor 99340053 (2) and take out the crankshaft seal (1); now remove the flange (3).


Figure 43

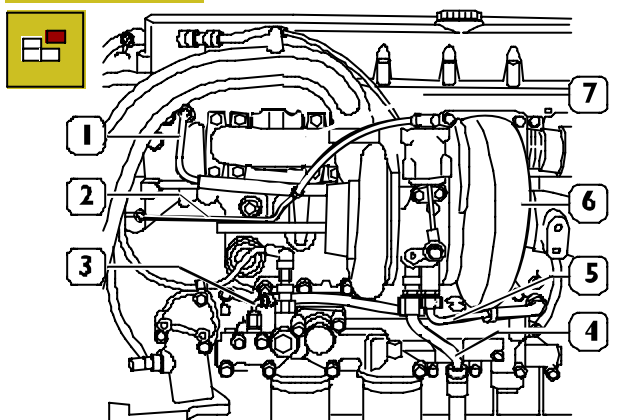

71707

Remove the following components: water delivery pipe (5); water outlet pipe (1); actuator control air pipe (2); oil delivery pipes (3); oil return pipes (4); turbo-compressor unit (6); exhaust manifold (7).

Figure 44

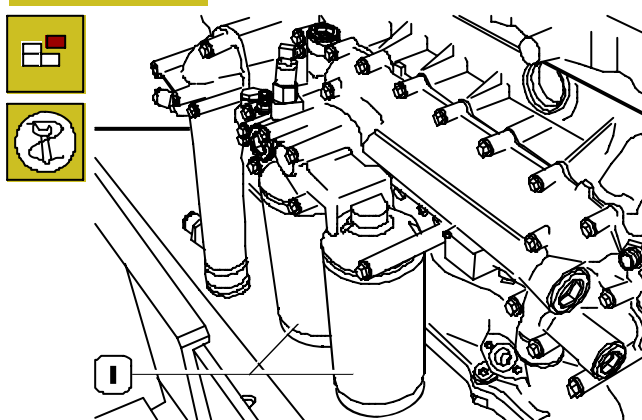


60492

Use tool 99360314 to slacken the oil filters (1).

Figure 45

(Version without Intarder)

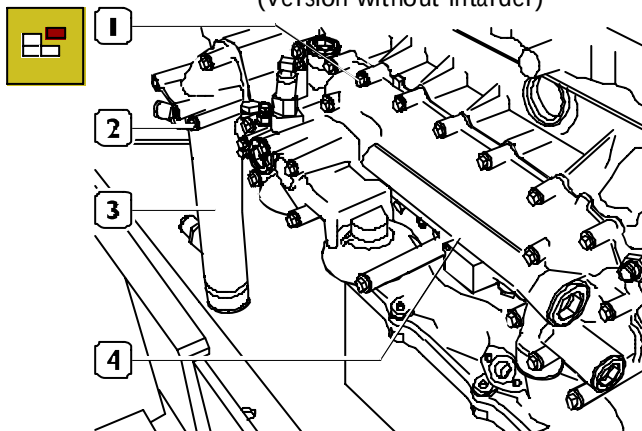

60493

- Slacken the screws (1) and remove the intercooler (4);
- Slacken the screws (2) and remove the water pipe (3).

Aquila Trucks Centres

Figure 46 (Version with Intarder)


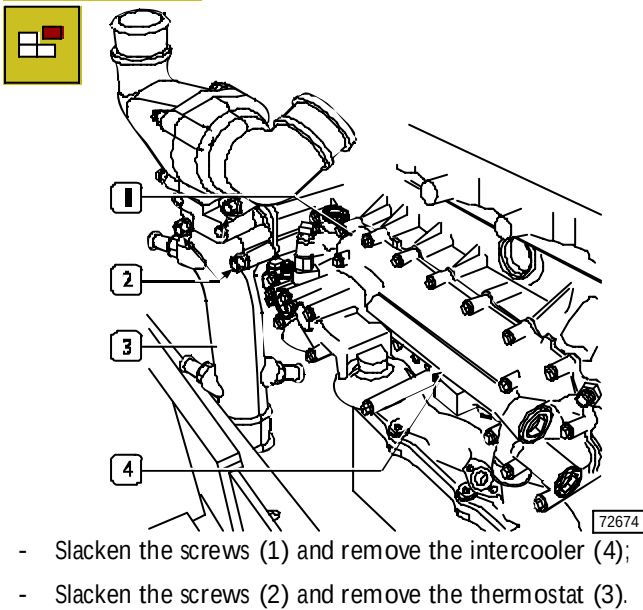



Figure 47

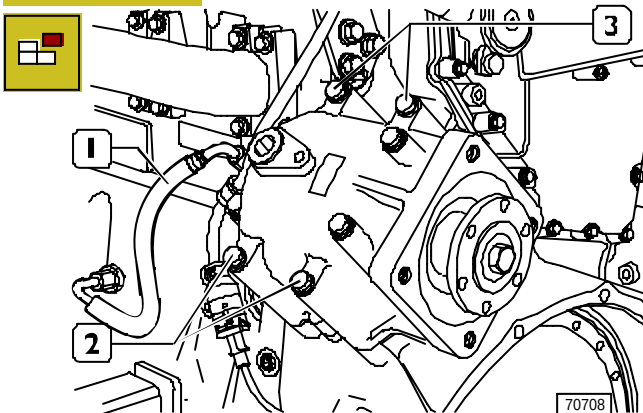

The remove the P.T.O. (if fitted):


- disconnect the oil pipe (1);
- slacken the 4 screws (2) and (3).

Figure 48

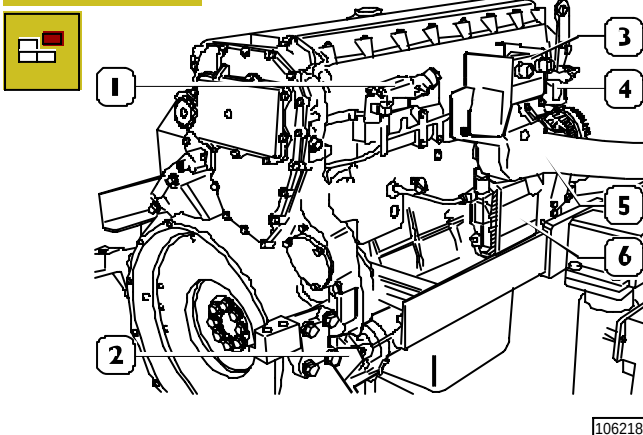


Dismount following parts: fuel filter support (1); relating pipes; starter (2); support for engine startup pushbuttons (3); air filter for PWM valve (4); intake manifold (5) complete with resistance for engine preheating; engine central unit (6);

Figure 49

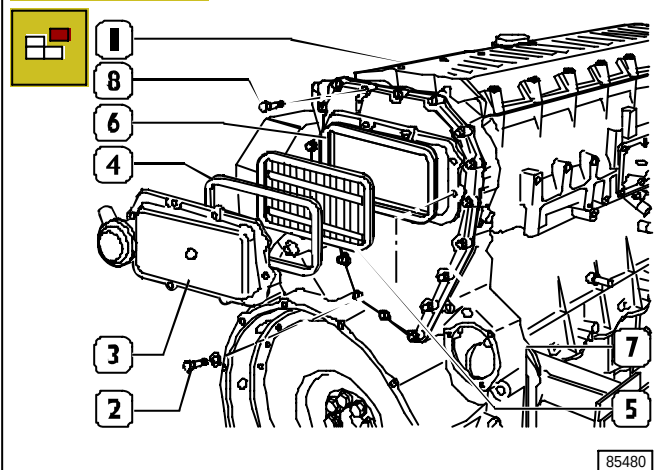


Remove the rocker arm cover (1), take off the screws (2) and extract the cover (3), the filter (5) and the gaskets (4 and 6). Remove the screws (8) and the blow-by case (7).

Figure 50

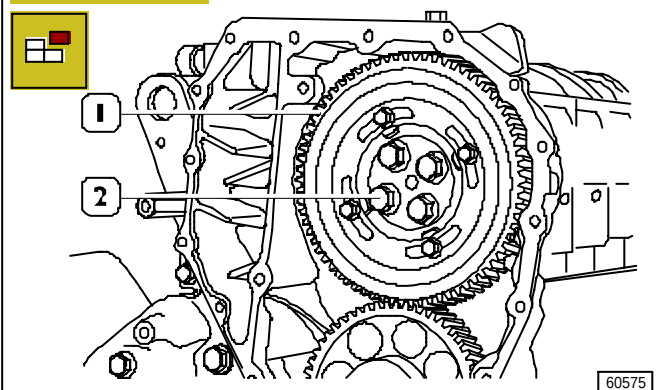

- Slacken the screws (2) and remove the gear (1) together with the phonic wheel.


Figure 51

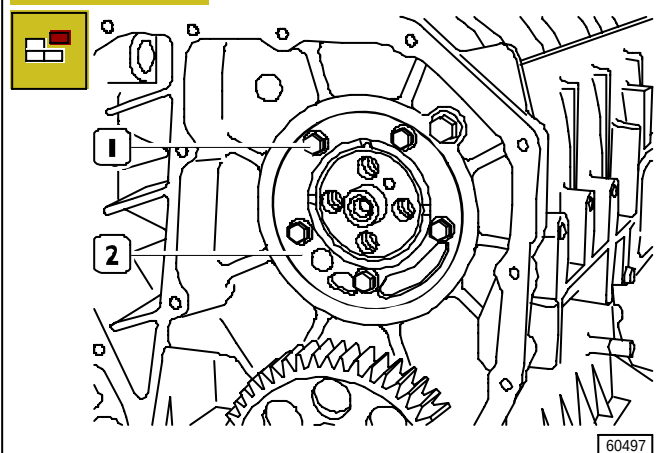

- Slacken the screws (1); drive one of them in a torque hole in order to remove the shoulder plate (2) and extract the metal sheet gasket.


Aquila Trucks Centres

Figure 52

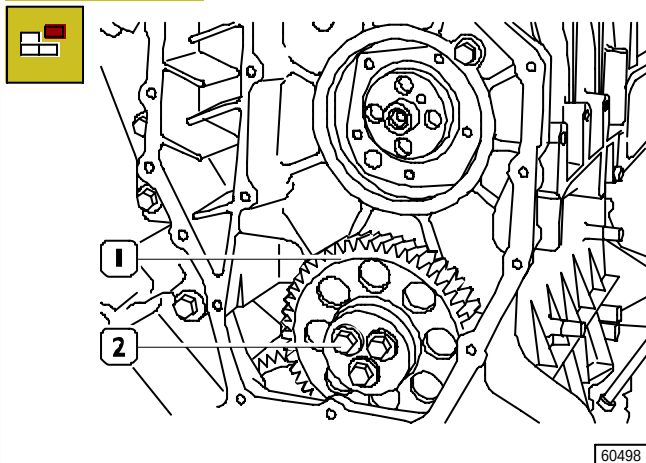


Unscrew the screws (2) and remove the idle gear (1).

Figure 53

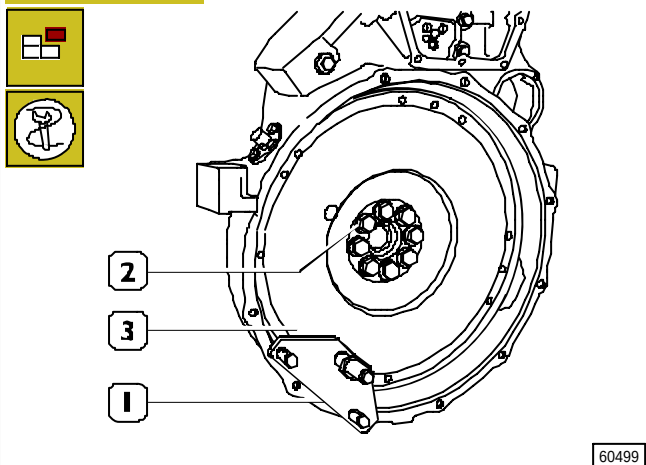


With the flywheel locking tool 99360351 (1) fitted, unscrew the fixing screws (2). Take off the tool (1) and extract the flywheel (3).

Figure 54

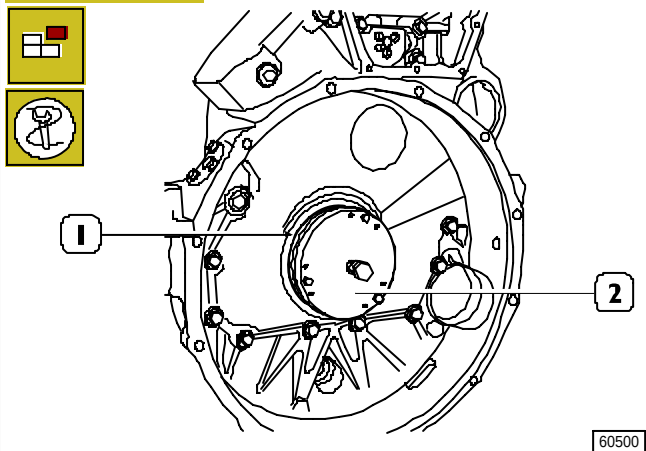


Fit on the extractor 99340054 (2) and extract the gasket (1).

Figure 55

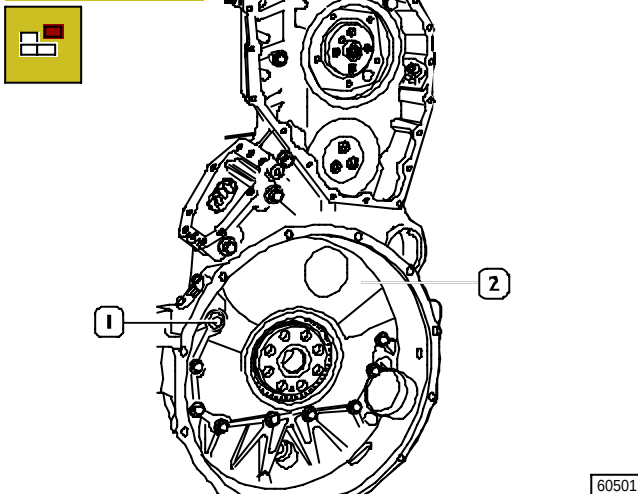


Unscrew the screws (1) and remove the gear housing (2).

Figure 56

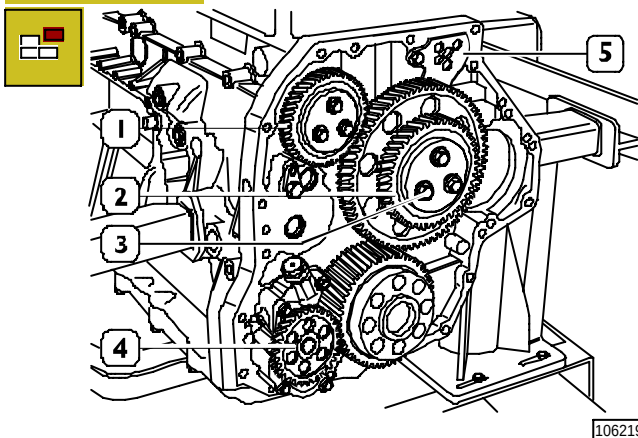

If present, dismount P.T.O. driving gear (1). Remove screws (3) and dismount double gear (2). Remove securing screw and dismount articulated rod (5). Dismount oil pump (4).


Figure 57

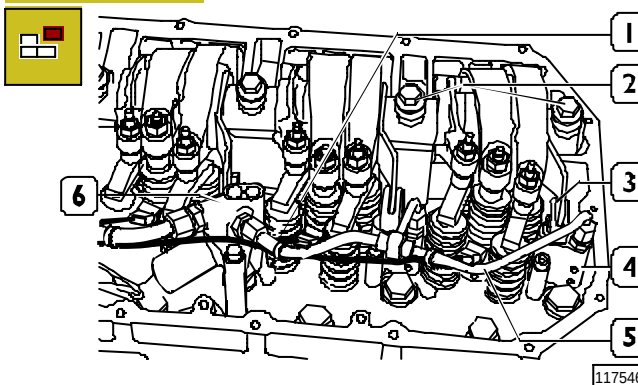

- Release the check springs (3) of the exhaust brake lever.
- Disconnect the electrical connections (1) from the injector.
- Remove exhaust brake pins (4) and slave cylinder (6) pipes (5).
- Remove the head injector wiring. The wiring has to be extracted from the front.


Aquila Trucks Centres

Figure 58

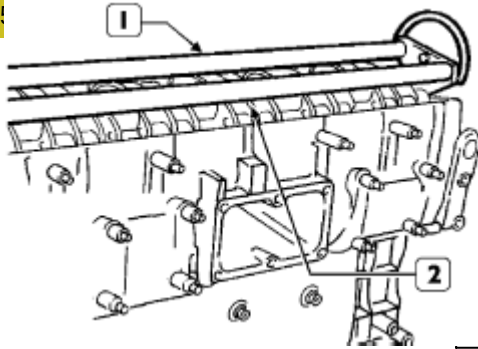


Apply tool 99360553 (1) to the rocker shaft (2) and remove the shaft (2) from the cylinder head.

Figure 59

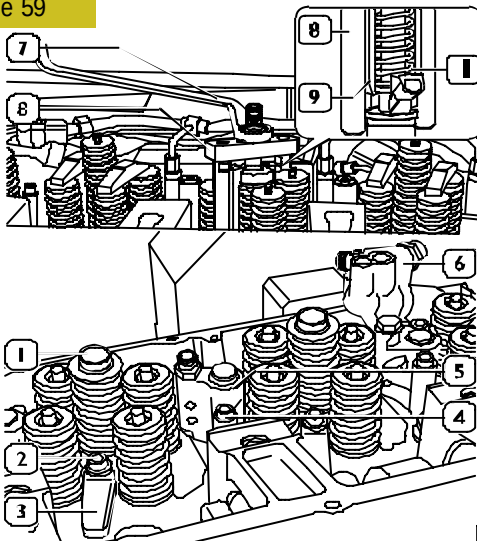

- Unscrew the screws (2) fixing the brackets (3);
- hook tool 99342155 part (9) to pump injector (1);
- mount part (8) on part (9) resting part on cylinder head;
- screw nut (7) and extract pump injector (1) from cylinder head.
- unscrew the screws (4) and remove the exhaust brake pins (5).
- unscrew the screws and remove the slave cylinder (6).


Figure 60

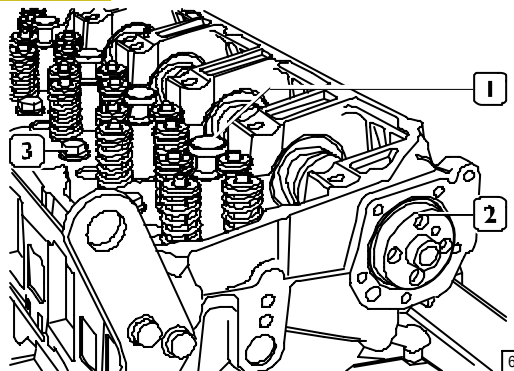

- Insert the plugs 99360180 (1) in place of the injectors.
- Extract the camshaft (2).
- Unscrew the screws fixing the cylinder head (3).


NOTE The cylinder head mount screws must be replaced at each removal operation.

Figure 61

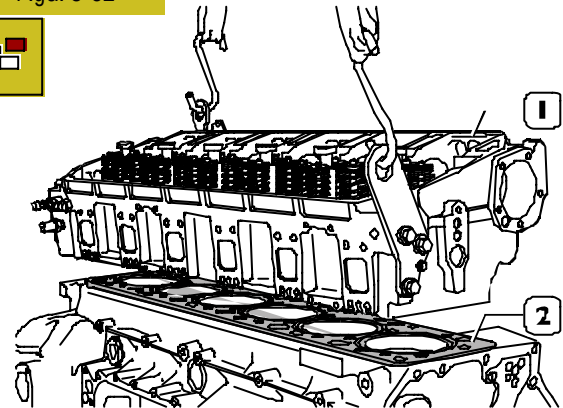


- Using metal ropes, lift the cylinder head (1).
- Take off the gasket (2).

Figure 62

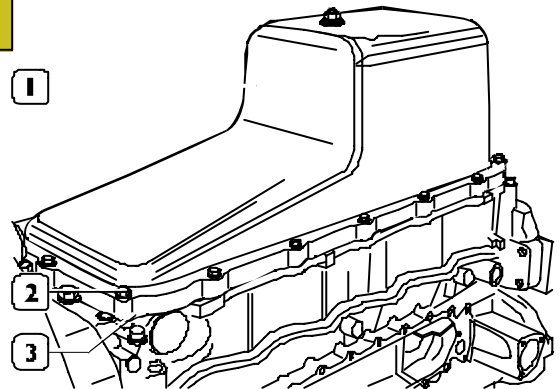

Unscrew the screws (2) and take out the engine oil sump (1) together with the frame (3) and gasket.


Figure 63

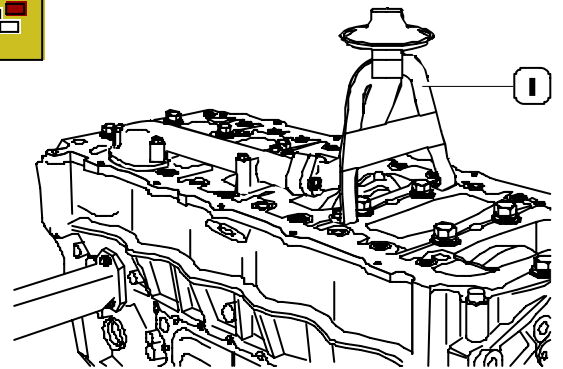

Unscrew the screws and take out the suction strainer (1).


Aquila Trucks Centres

Figure 64

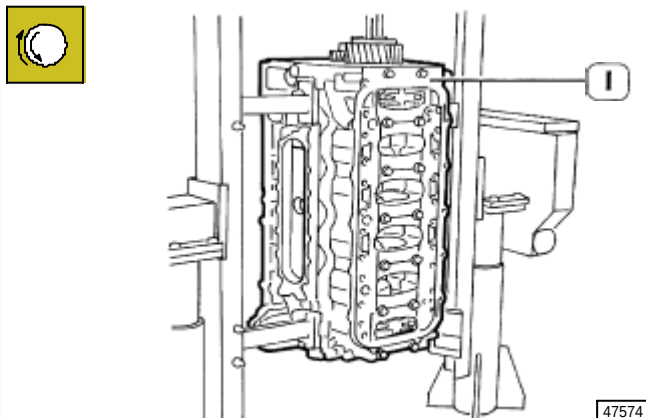

Turn the crankcase (1) upright.


Figure 65

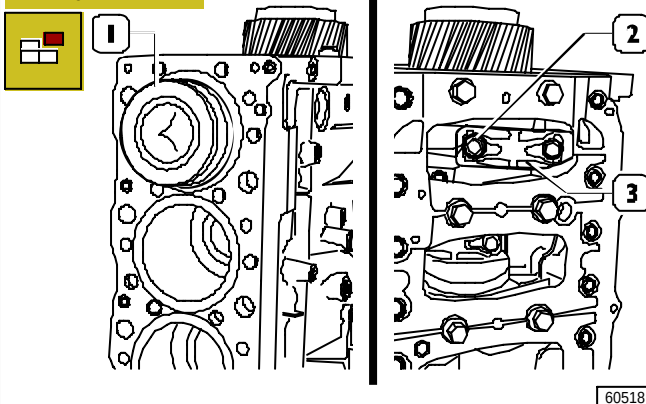

Untighten screws (2) fixing the connecting rod cap (3) and remove it. Remove the connecting rod-piston (1) assembly from the upper side. Repeat these operations for the other pistons.

NOTE Keep the big end bearing shells in their respective housings and/or note down their assembly position since, if reusing them, they will need to be fitted in the position found upon removal.


Figure 66

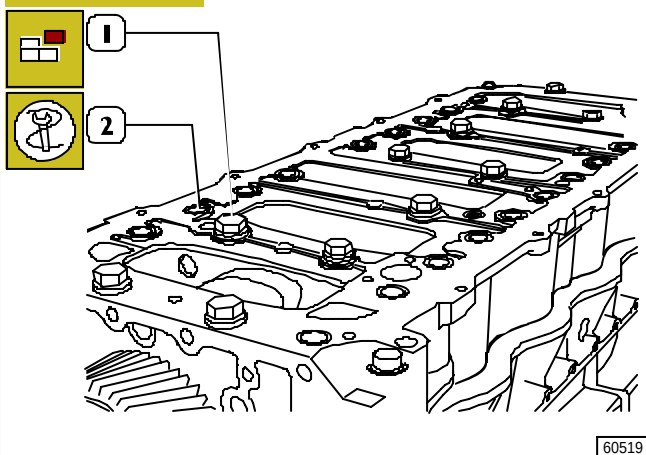

Using an appropriate wrench and the hex wrench unscrew the screws (1) and (2) and take off the crankcase base.


NOTE Note down the assembly position of the top and bottom main bearing shells since, if reusing them, they will need to be fitted in the position found upon removal.

Figure 67

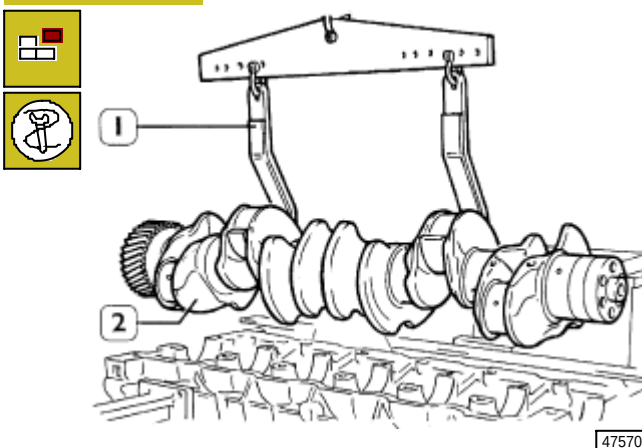

Using tool 99360500 (1), remove the crankshaft (2).

Figure 68

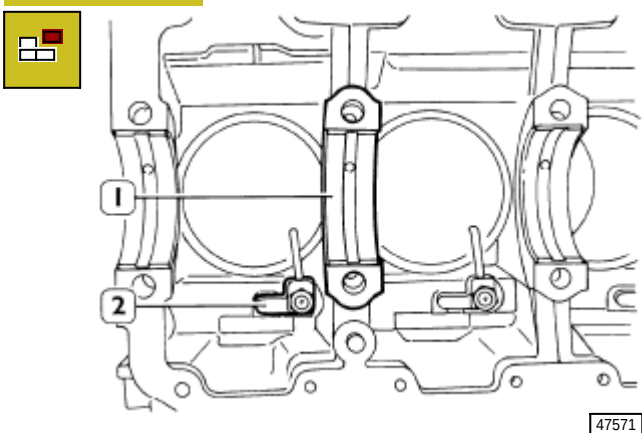

Extract the main bearing shells (1), unscrew the screws and take out the oil nozzles (2). Remove the cylinder liners as described under the relevant heading on page 179.


NOTE After removing the engine, you need to clean the removed parts thoroughly and check their integrity. The following pages give the instructions for making the checks and the main measurements to make to determine whether the parts can be reused.

Aquila Trucks Centres

REPAIRS

540410 CYLINDER BLOCK
540420 Checks and measurements

Figure 69 (Demonstration)

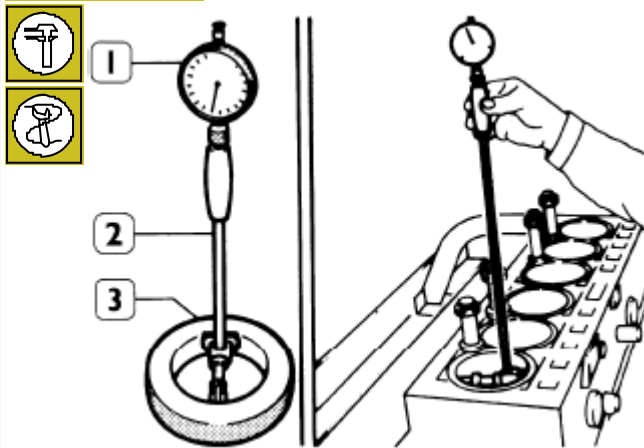


34994

The inside diameter of the cylinder liners is checked to ascertain the extent of ovalization, taper and wear using the gauge 99395687 (2) fitted with the dial gauge (1), zeroed beforehand on the ring gauge (3) of diameter 135 mm.

NOTE If you do not have a ring gauge of diameter 135 mm, use a micrometer for this purpose.

Figure 70

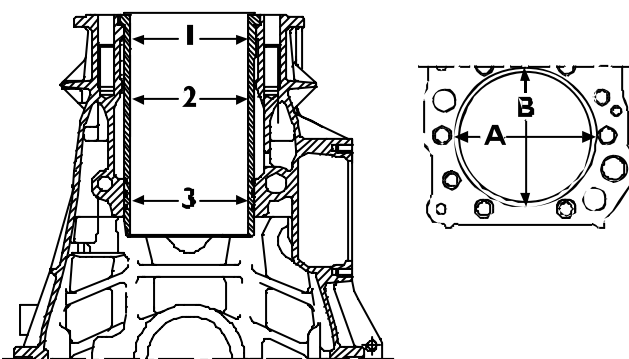


60596

- 1 = 1st measurement
 2 = 2nd measurement
 3 = 3rd measurement

The measurements have to be made on each single cylinder liner at three different heights and on two levels (A-B) at right angles to each other as shown in figure.

Figure 71

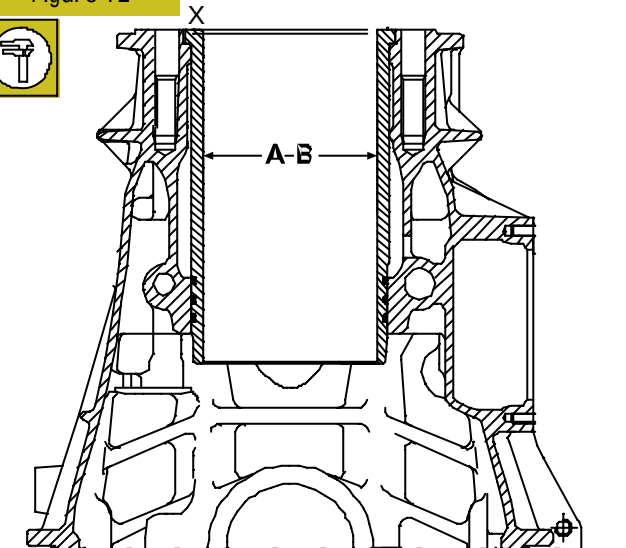

60595


- A = Selection class $\varnothing$ 135.000 to 135.013 mm
 B = Selection class $\varnothing$ 135.011 to 135.024 mm
 X = Selection class marking area

On finding maximum wear greater than 0.150 mm or maximum ovalization of 0.100 mm compared to the values shown in the figure, you need to replace the cylinder liner as no grinding, facing or reconditioning is permitted.

NOTE The cylinder liners are supplied as spare parts with selection class "A".



Figure 72

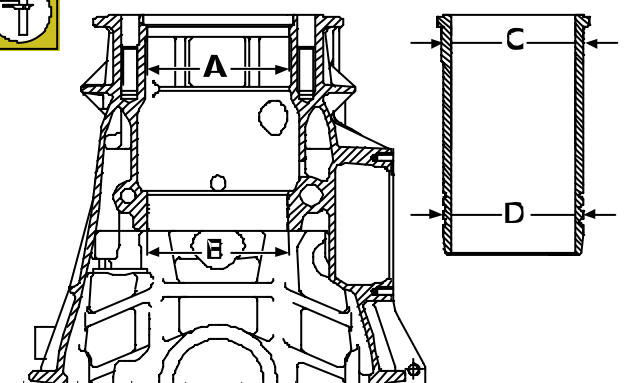

60597

- A = $\varnothing$ 153.500 to 153.525 mm
 B = $\varnothing$ 152.000 to 152.025 mm
 C = $\varnothing$ 153.461 to 153.486 mm
 D = $\varnothing$ 151.890 to 151.915 mm


The diagram shown in the figure gives the outside diameter of the cylinder liner and inside diameter of its seat.

The cylinder liners can, if necessary, be extracted and fitted several times in different seats.

Aquila Trucks Centres

Cylinder liners


Figure 73

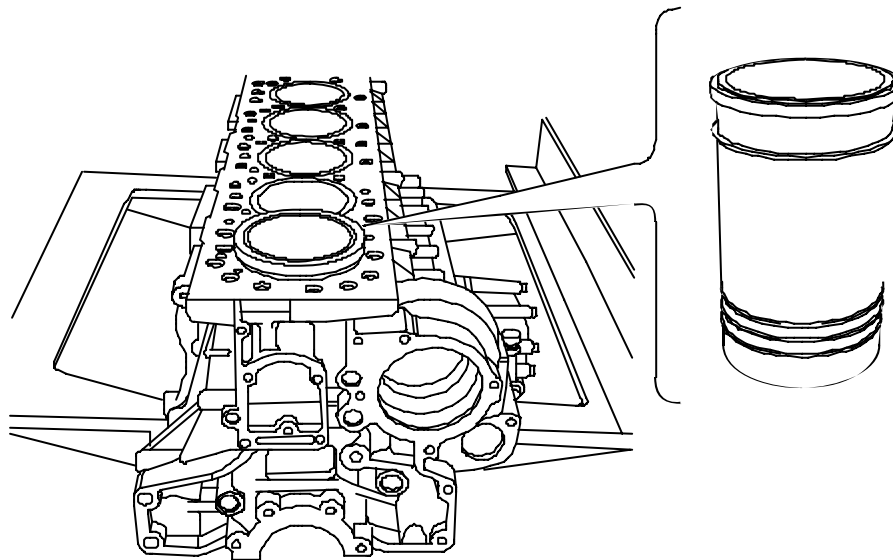

CRANKCASE ASSEMBLY WITH CYLINDER LINERS

60598

Figure 74

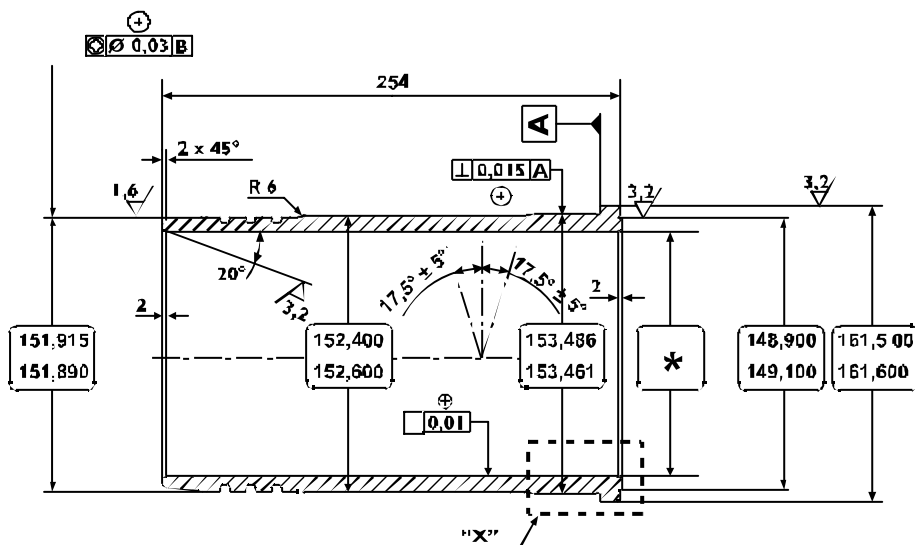


- * Selection class
- | | |
|---|-------------------------|
| { | A mm 135.000 to 135.013 |
| | B mm 135.011 to 135.024 |

108832

MAIN CYLINDER LINER DATA

Figure 75

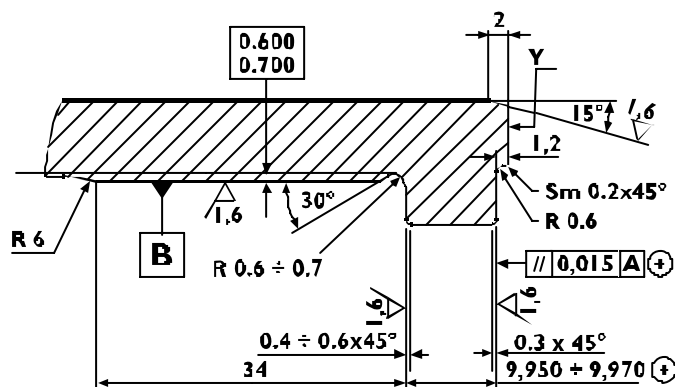

DETAIL "X"

"Y" - Selection class marking area


108833

Aquila Trucks Centres

540420 Replacing the cylinder liners

Removal


Figure 76

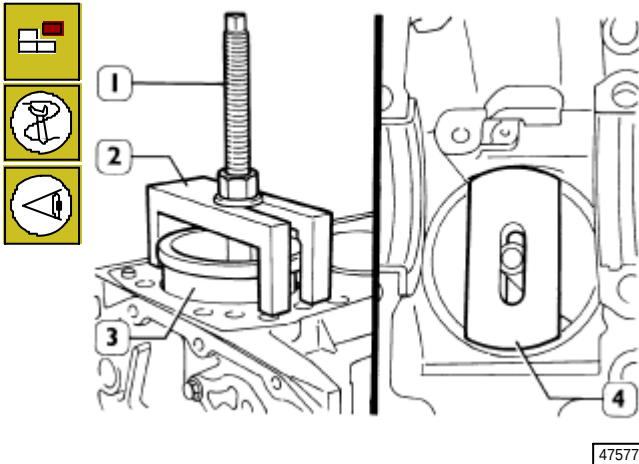

Position the parts 99360706 (2) and the plate 99360728 (4) as shown in the figure, checking that the plate (4) rests on the cylinder liner correctly. Screw down the nut of screw (1) and extract the cylinder liner (3) from the crankcase.

Assembly and checking protrusion


Figure 77

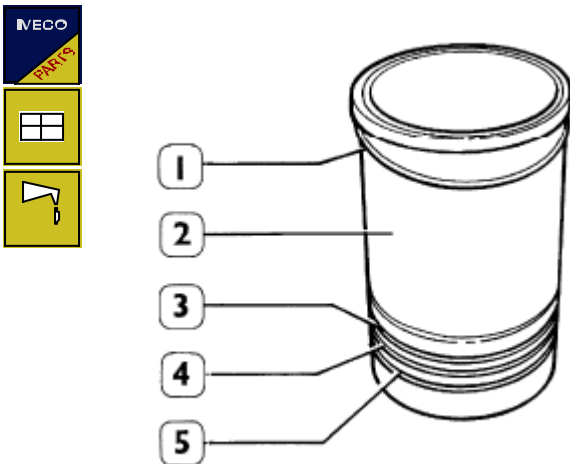

Always replace the water seals (3, 4 and 5). Fit the adjustment ring (1) on the cylinder liner (2). Lubricate the bottom of it and mount it in the cylinder assembly using the appropriate tool.

NOTE The adjustment ring (1) is supplied as a spare part with the following thicknesses: 0.08 mm - 0.10 mm - 0.12 mm - 0.14 mm.

Figure 78

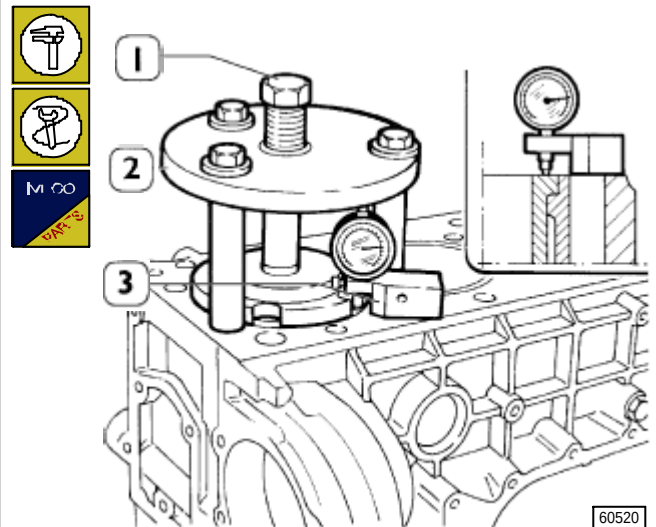

Check the protrusion of the cylinder liners with tool 99360334 (2) and tightening the screw (1) to a torque of 225 Nm. Using the dial gauge 99395603 supplied as standard with the dial gauge base 99370415 (3), check that the protrusion of the cylinder liner over the supporting face of the cylinder head is 0.045 - 0.075 mm (Figure 79); if this is not so, replace the adjustment ring (1, Figure 77), supplied as a spare part with several thicknesses.

Figure 79


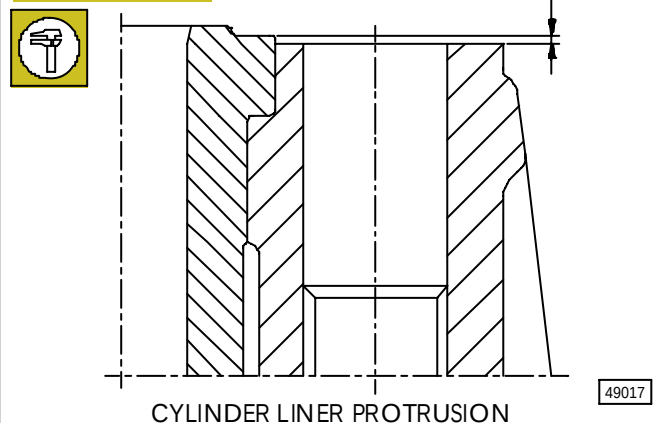


Figure 80

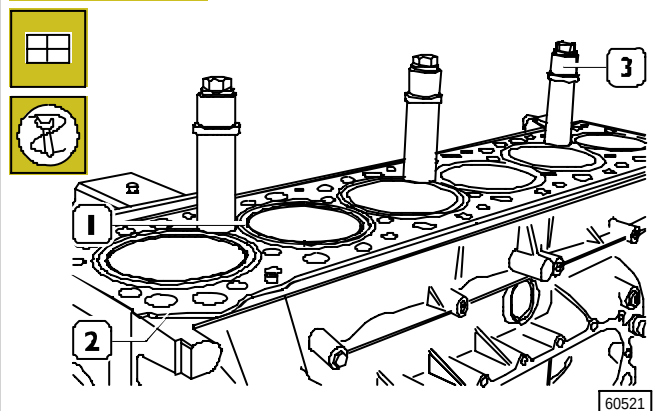


On completing assembly, lock the cylinder liners (1) to the crankcase (2) with the pins 99360703 (3).

Aquila Trucks Centres

5408 Crankshaft

Figure 81

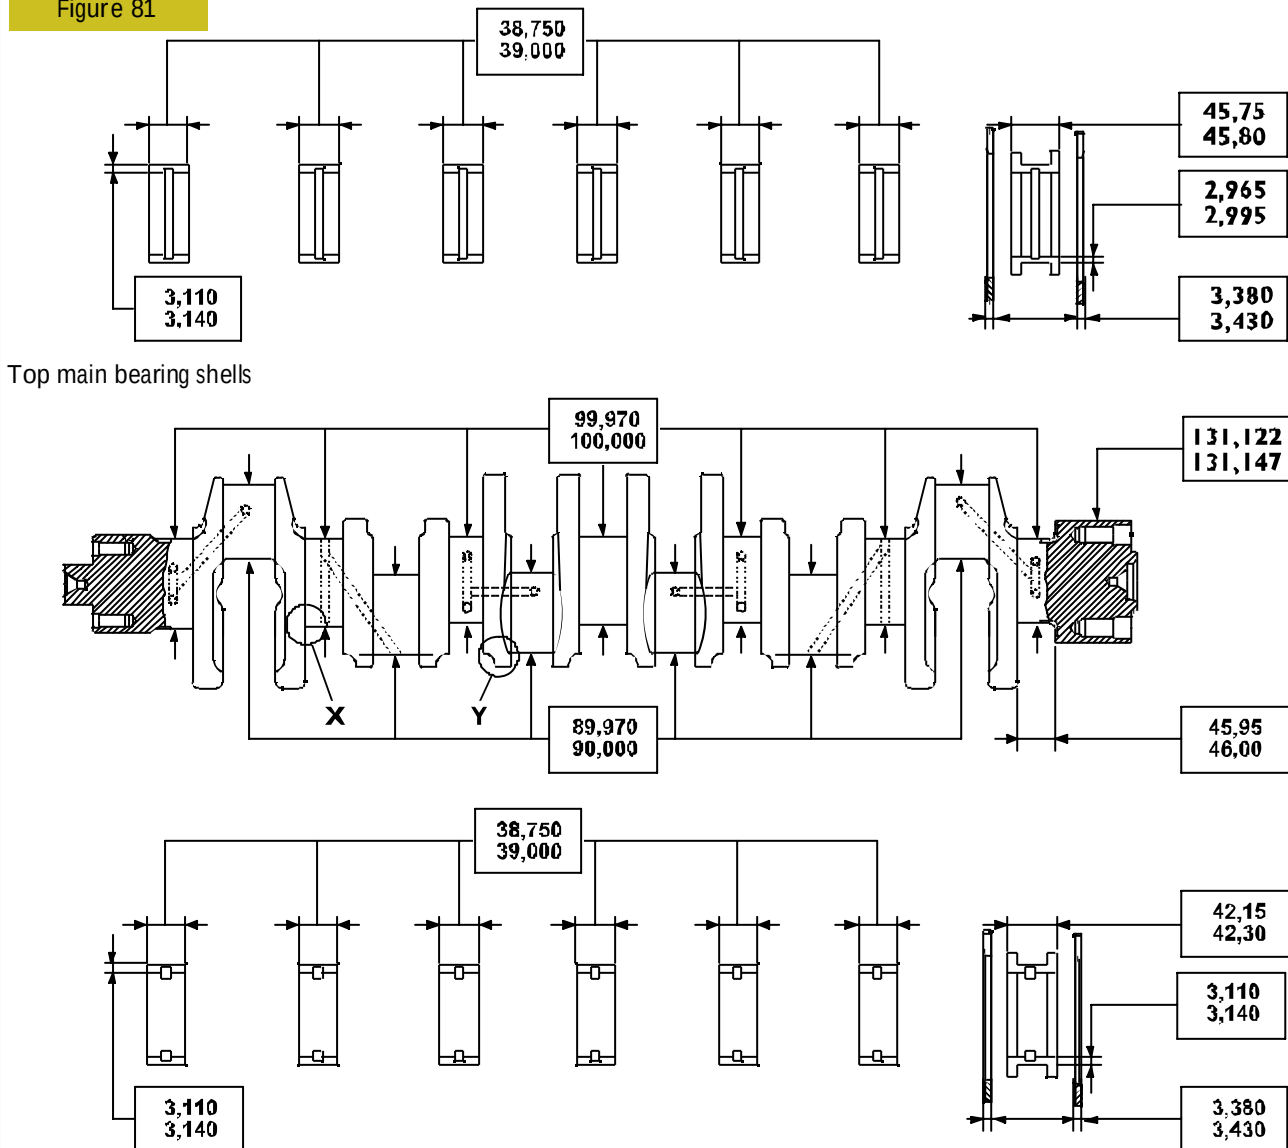

Top main bearing shells


Bottom main bearing shells

117547

MAIN DATA OF CRANKSHAFT AND MAIN BEARING SHELLS

Check the state of the main journals and crankpins of the crankshaft. They must not be scored or be too ovalized or worn. The data given refer to the normal diameter of the journals.


Figure 82

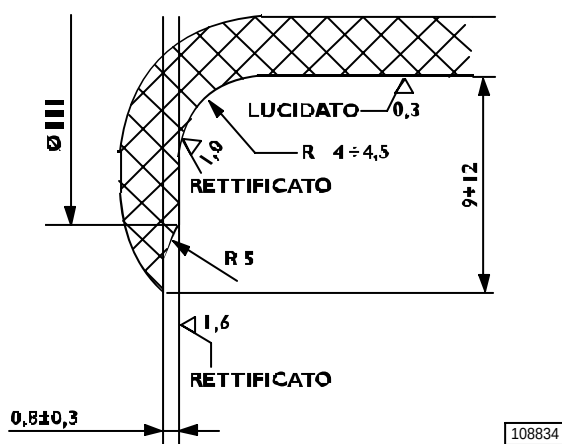

X. Detail of the main journal unions

108834

Figure 83

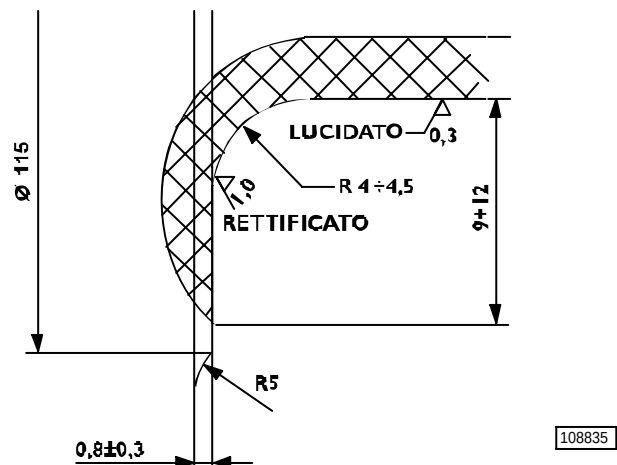

Y. Detail of the crankpin unions


108835

Aquila Trucks Centres

540812 Measuring the main journals and crankpins

Before grinding the journals, use a micrometric gauge (1) to measure the journals of the shaft (2) and establish, on the basis of the undersizing of the spare bearing shells, to what diameter it is necessary to reduce the journals.

Figure 84

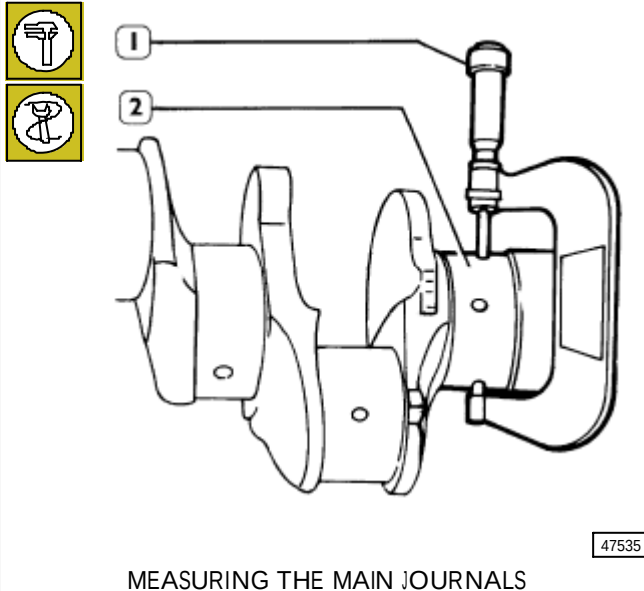


NOTE It is advisable to note the measurements in a table (Figure 85).

Figure 85


Table for noting down the measurements of the main journals and crankpins of the crankshaft.

MAIN JOURNALS

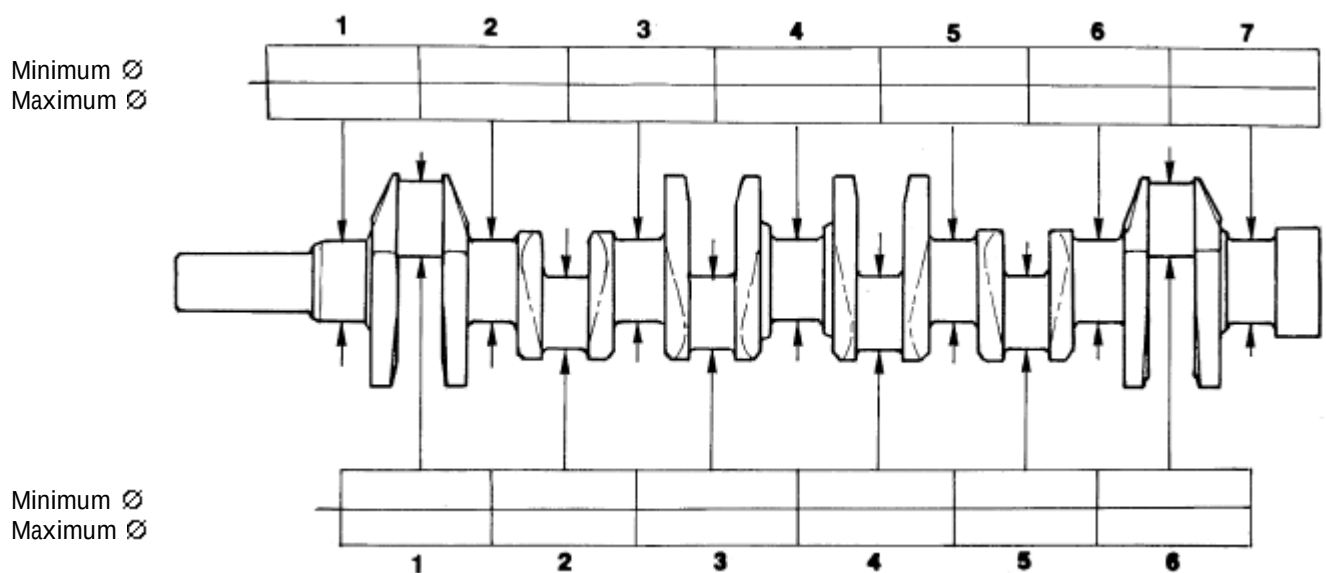

CRANKPINS

Figure 86

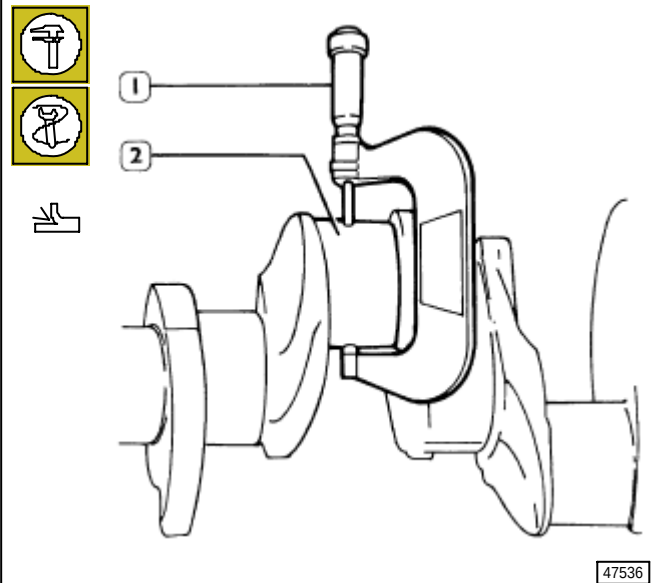

MEASURING THE CRANKPINS

When grinding, pay the utmost attention to the values of the unions of the main journals and of the crankpins given in Figure 82 and Figure 83.

NOTE All the main journals and crankpins should always be ground to the same undersizing class so as not to alter the balance of the shaft.

Aquila Trucks Centres

Preliminary measurement of data to select main bearing and big end bearing shells

For each of the journals of the crankshaft, it is necessary to carry out the following operations:

MAIN JOURNALS:

- Determine the class of diameter of the seat in the crankcase.
- Determine the class of diameter of the main journal.
- Select the class of the bearing shells to mount.

CRANKPINS:


- Determine the class of diameter of the seat in the connecting rod.
- Determine the class of diameter of the crankpin.
- Select the class of the bearing shells to mount.

DEFINING THE CLASS OF DIAMETER OF THE SEATS FOR BEARING SHELLS ON THE CRANKCASE

On the front of the crankcase two sets of numbers are marked in the position shown.

- The first set of digits (four) is the coupling number of the crankcase with its base.
- The second set of digits (seven) is the class of diameter of each of the seats referred to.
- Each of these digits may be **1, 2 or 3**.

Figure 87

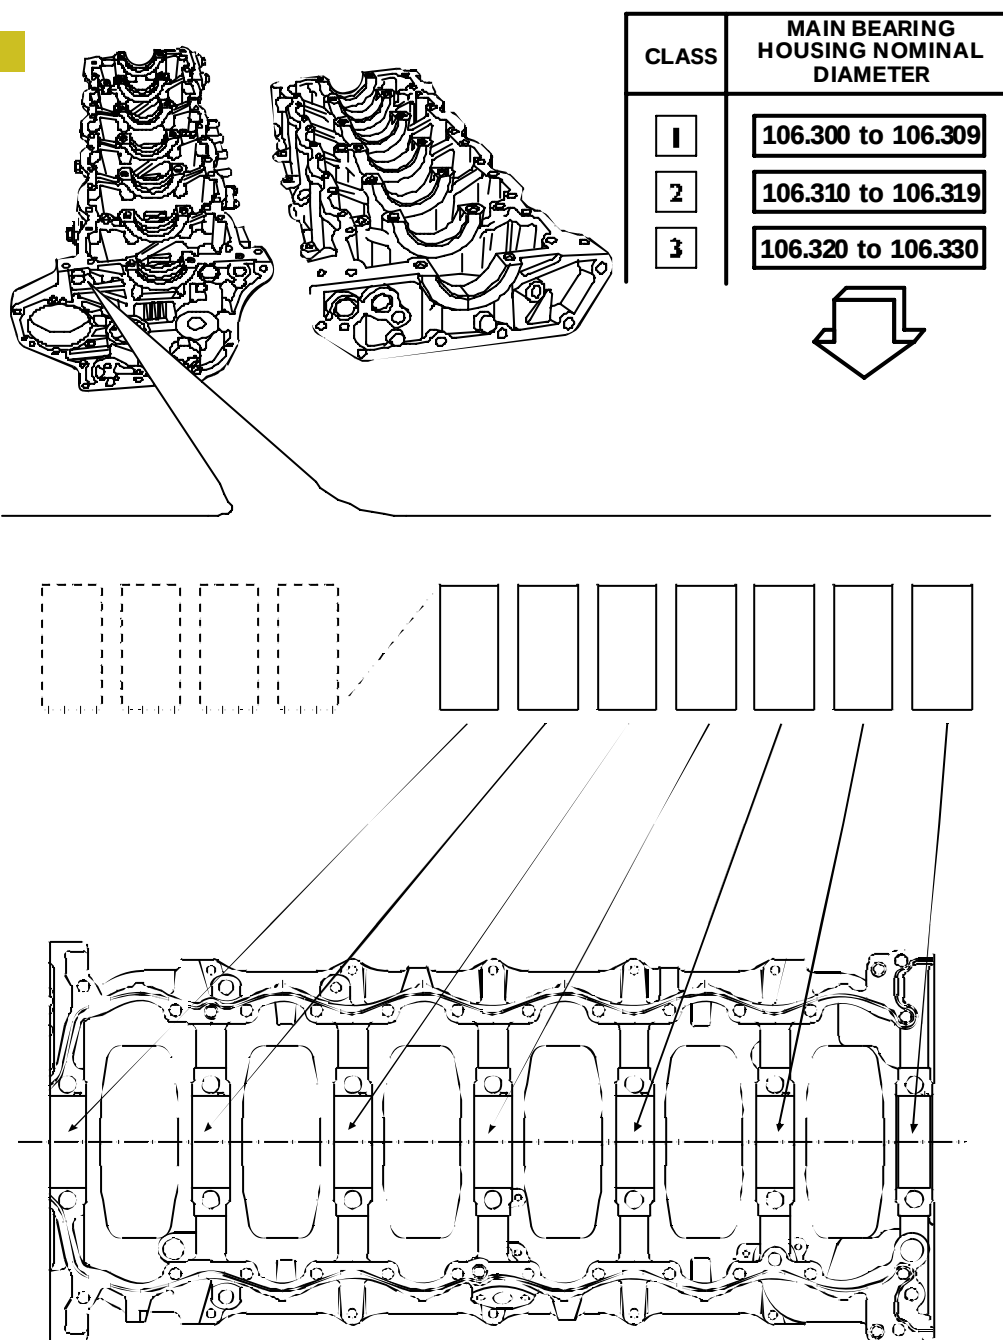

47535

Aquila Trucks Centres

Selecting the main bearing and big end bearing shells


NOTE To obtain the required assembly clearances, the main bearing and big end bearing shells have to be selected as described hereunder.


This operation makes it possible to identify the most suited bearing shells for each of the journals of the shaft (the bearing shells may even have different classes for different pins).


Depending on the thickness, the bearing shells are selected in classes of tolerance marked by a colour (red-green - red/black - green/black).

Figure 88 gives the specifications of the main bearing and big end bearing shells available as spare parts in the standard sizes (STD) and in the permissible oversizes (+0.127, +0.254, +0.508).

Figure 88

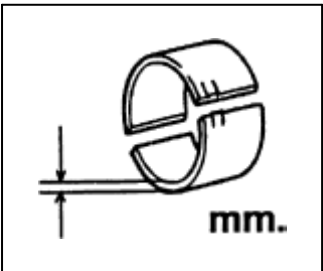Big end bearing shells		STD	+0.127	+0.254	+0.508
	red	1.965 to 1.975		2.092 to 2.102	2.219 to 2.229
	red/black		2.028 to 2.038		
	green	1.976 to 1.985		2.103 to 2.112	2.230 to 2.239
	green/black		2.039 to 2.048		

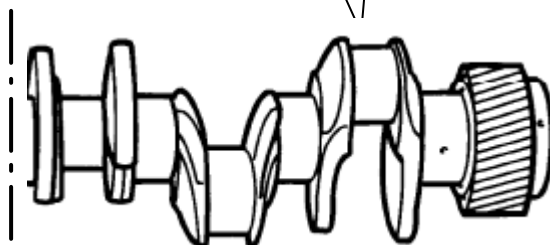

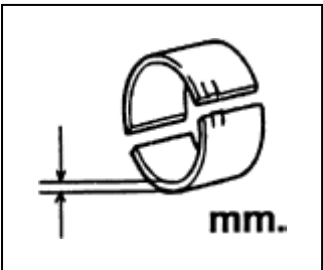Main bearing shells		STD	+0.127	+0.254	+0.508
	red	3.110 to 3.120		3.237 to 3.247	3.364 to 3.374
	red/black		3.173 to 3.183		
	green	3.121 to 3.130			
	green/black		3.184 to 3.193		

Aquila Trucks Centres



DEFINING THE CLASS OF DIAMETER OF THE MAIN JOURNALS AND CRANKPINS (journals with nominal diameter)

Three sets of numbers are marked on the crankshaft in the position shown by the arrow (Figure 89 at top):

- The first number, of five digits, is the part number of the shaft.
- Under this number, on the left, a set of six digits refers to the crankpins and is preceded by a single digit showing the status of the journals (1 = STD, 2 = -0.127), the other six digits, taken singly, give the class of diameter of each of the crankpins they refer to (Figure 89 at top).
- The set of seven digits, on the right, refers to the main journals and is preceded by a single digit: the single digit shows the status of the journals (1 = STD, 2 = -0.127), the other seven digits, taken singly, give the class of diameter of each of the main journals they refer to (Figure 89 at bottom).

Figure 89

CLASS	CRANKPIN NOMINAL DIAMETER
1	89.970 to 89.979
2	89.980 to 89.989
3	89.990 to 90.000

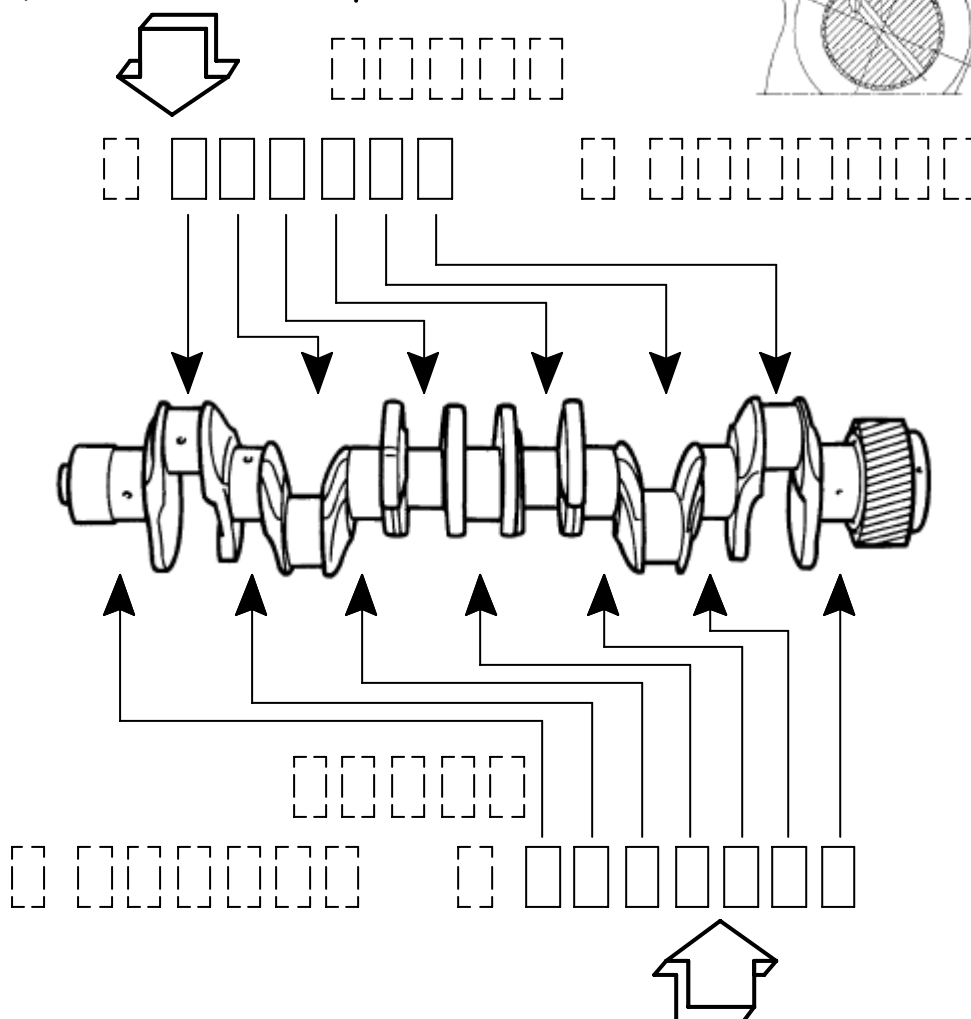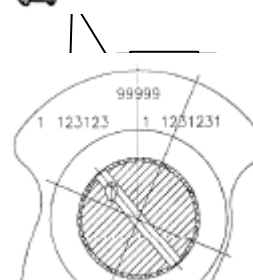

MAIN JOURNALS

mm

CLASS	MAIN JOURNALS NOMINAL DIAMETER
1	99.970 to 99.979
2	99.980 to 99.989
3	99.990 to 100.000


Aquila Trucks Centres

SELECTING THE MAIN BEARING SHELLS

After reading off the data, for each of the main journals, on the crankcase and crankshaft, you choose the type of bearing shells to use according to the following table:

Figure 90

STD.

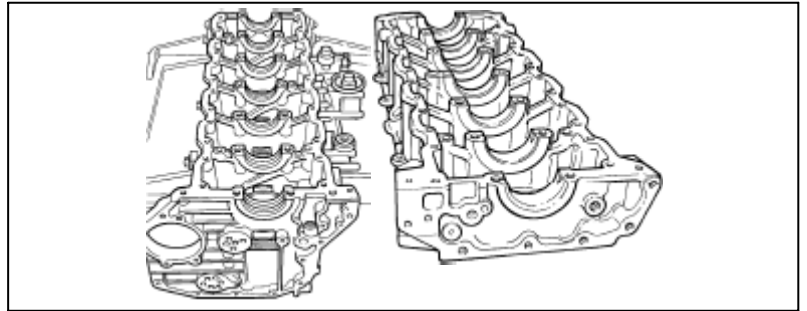


CLASS

1

2

3

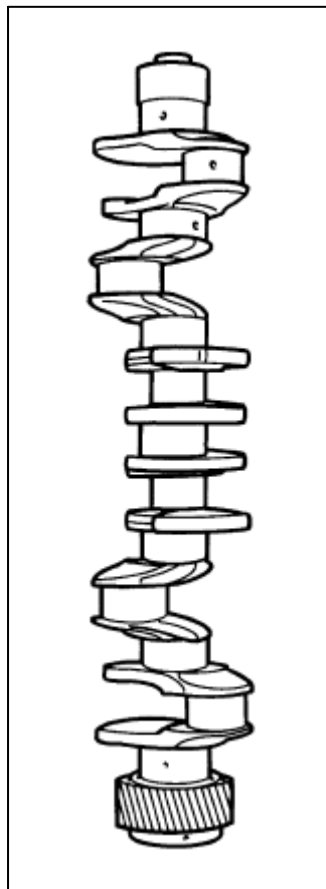

1

green

green

green

green

green

green

2

red


green

green

red

green

green

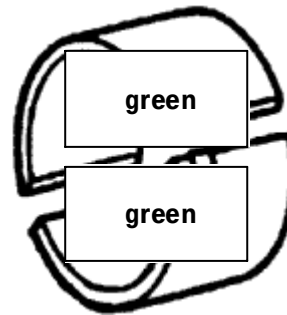

3

red

red

green

red

red

green


Aquila Trucks Centres

SELECTING THE MAIN BEARING SHELLS (GROUND JOURNALS)

If the journals have been ground, the procedure described so far cannot be applied.

In this case, it is necessary to check that the new diameter of the journals is as shown in the table and to mount the only type of bearing shell envisaged for the relevant undersizing.

Figure 91

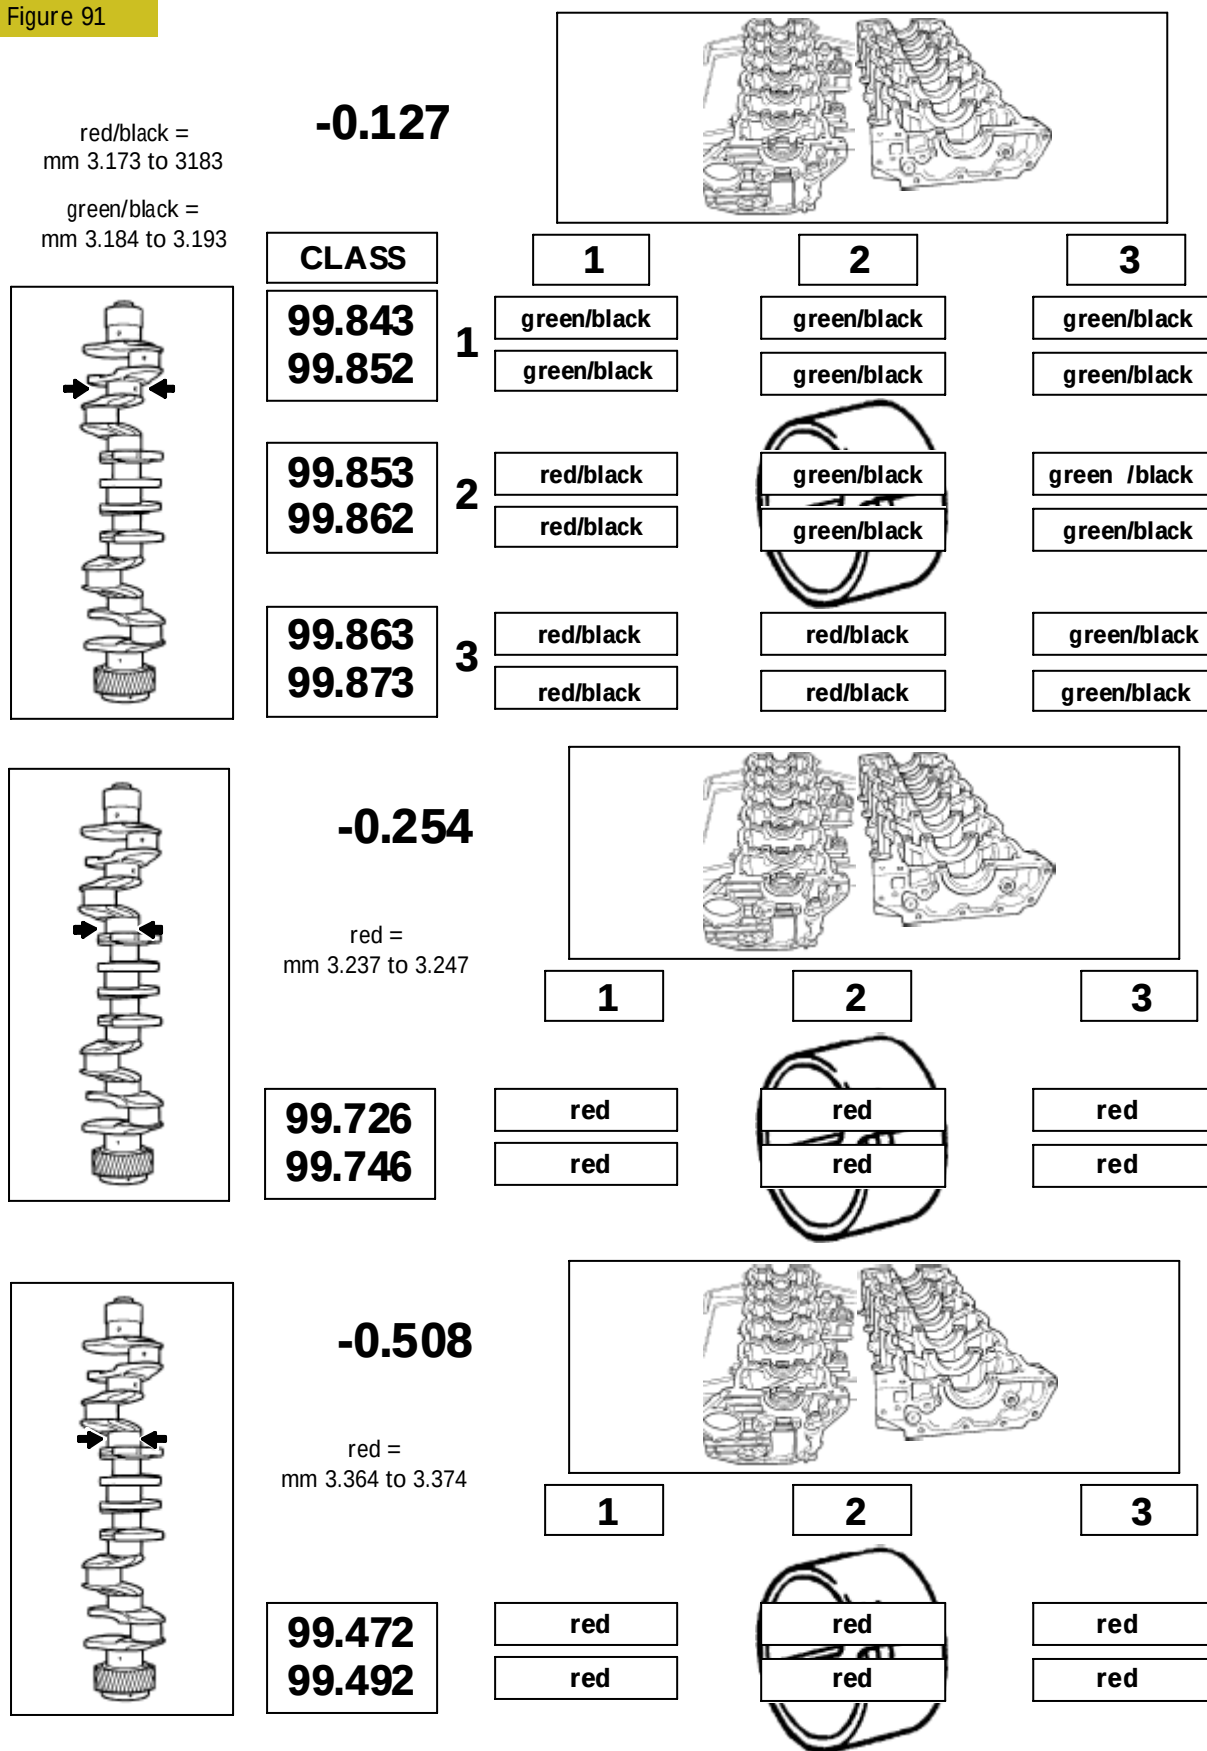

Aquila Trucks Centres

SELECTING THE BIG END BEARING SHELLS (JOURNALS WITH NOMINAL DIAMETER)

There are three markings on the body of the connecting rod in the position indicated as "A":

- 1 Letter indicating the class of weight:
 - A = 4741 to 4780 g.
 - B = 4781 to 4820 g.
 - C = 4821 to 4860 g.
- 2 Number indicating the selection of the diameter of the big end bearing seat:
 - 1 = 94.000 to 94.010 mm
 - 2 = 94.011 to 94.020 mm
 - 3 = 94.021 to 94.030 mm
- 3 Numbers identifying the cap-connecting rod coupling.

The number, indicating the class of diameter of the bearing shell seat may be **1, 2 o 3**.

Determine the type of big end bearing to fit on each journal by following the indications in the table (Figure 93).

Figure 92



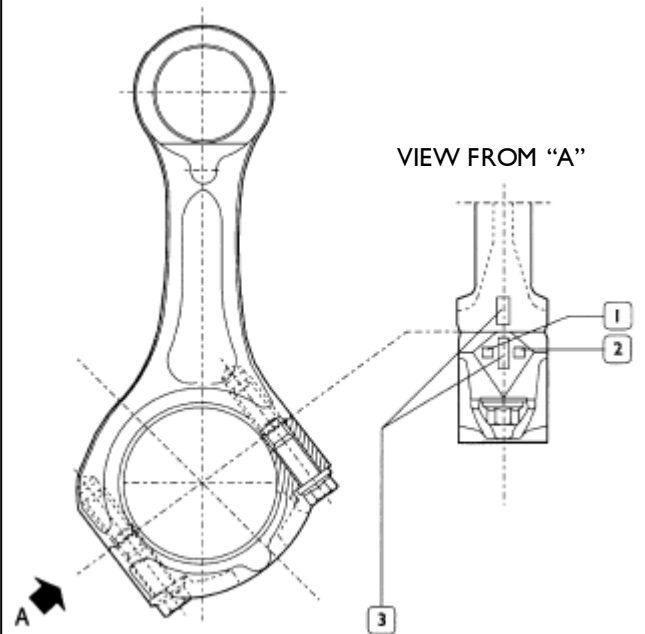


Figure 93

STD.

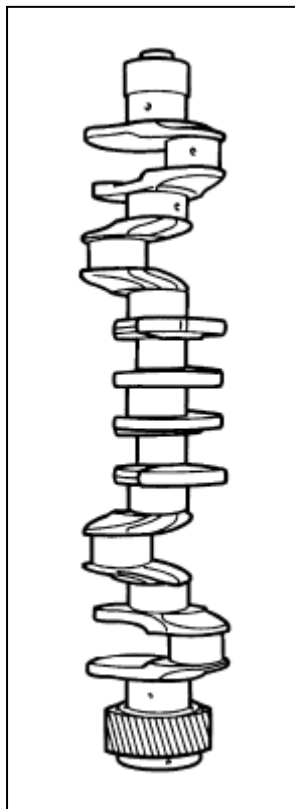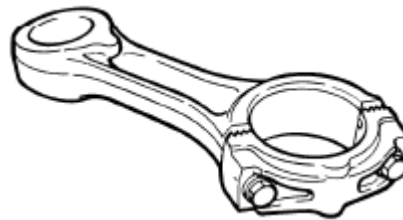

CLASS	1	2	3
1	green	green	green
	green	green	green
2	red	green	green
	red	green	green
3	red	red	green
	red	red	green

Aquila Trucks Centres

SELECTING BIG END BEARING SHELLS (GROUND JOURNALS)



If the journals have been ground, the procedure described so far cannot be applied.

In this case, it is necessary to check (for each of the undersizings) which field of tolerance includes the new diameter of the crankpins and to mount the bearing shells identified with the relevant table.

Figure 94

red/black =
mm 2.028 to 2.038



green/black =
mm 2.039 to 2.048

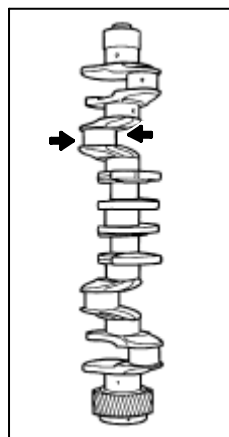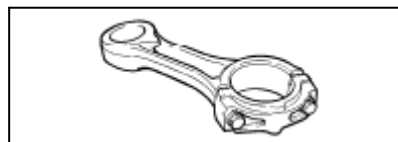**-0.127**

CLASS	1	2	3
89.843	green/black	green/black	green/black
89.852	green/black	green/black	green/black
89.853	red/black	green/black	green /black
89.862	red/black	green/black	green/black
89.863	red/black	red/black	green/black
89.873	red/black	red/black	green/black

-0.254



red =
mm 2.092 to 2.102
green =
mm 2.103 to 2.112

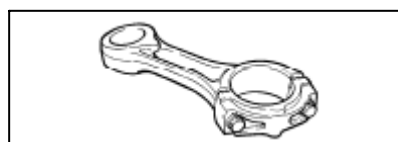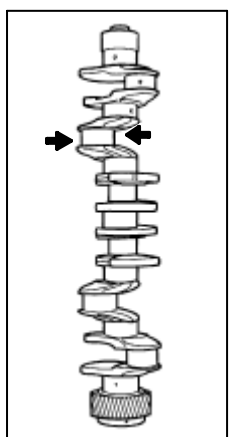

CLASS	1	2	3
89.726	red	green	green
89.735	red	green	green
89.736	red	red	green
89.746	red	red	green

-0.508

red =
mm 2.219 to 2.229
green =
mm 2.230 to 2.239

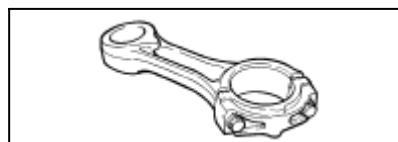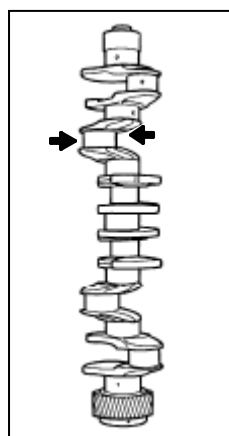


CLASS	1	2	3
89.472	red	green	green
89.481	red	green	green
89.482	red	red	green
89.492	red	red	green

Aquila Trucks Centres

540815 Replacing the timing gear and oil pump drive

Check that the toothing of the gear is neither damaged nor worn; if it is, take it out with an appropriate extractor and replace it.

Figure 95

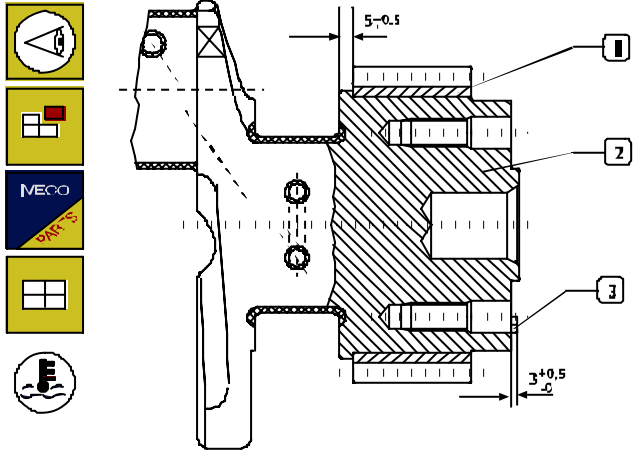


108836

When fitting the gear (1) on the crankshaft (2), heat it for no longer than 2 hours in an oven at a temperature of 180°C. After driving it in, leave it to cool.

If changing the pin (3), after fitting it on, check it protrudes from the crankshaft as shown in the figure.

540811 Checking main journal assembly clearance


Figure 96

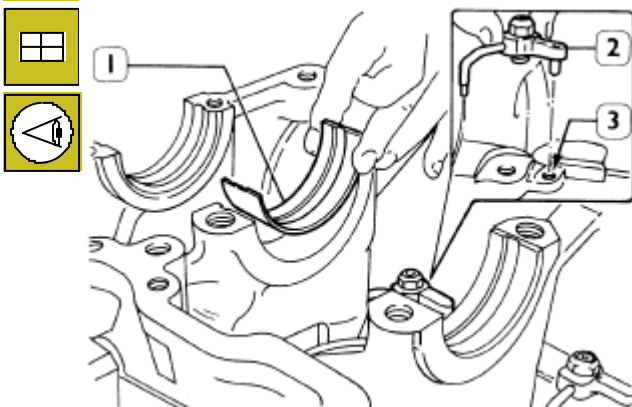

47579

Mount the oil nozzles (2), making the grub screw match the hole (3) on the crankcase.
Arrange the bearing shells (1) on the main bearing housings.


Figure 97

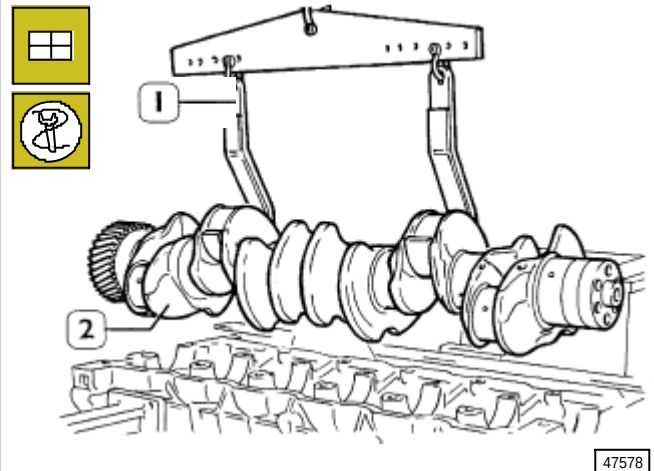

47578

Using the tackle and hook 99360500 (1), mount the crankshaft (2).

Figure 98

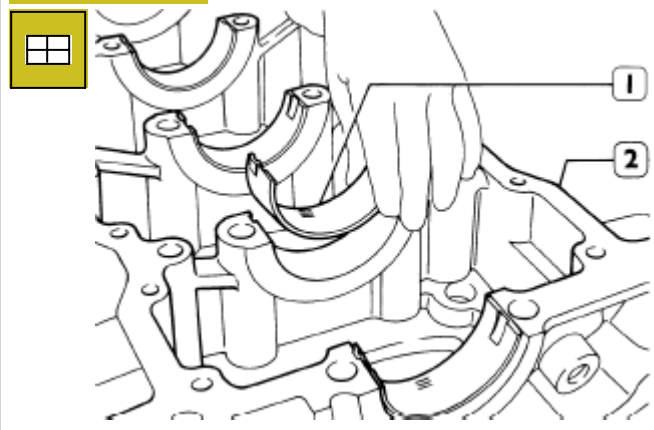


49021

Arrange the bearing shells (1) on the main bearing housings in the crankcase base (2).
Check the assembly clearance between the main journals of the crankshaft and their bearings, proceeding as illustrated on the following pages.


Aquila Trucks Centres

Figure 99

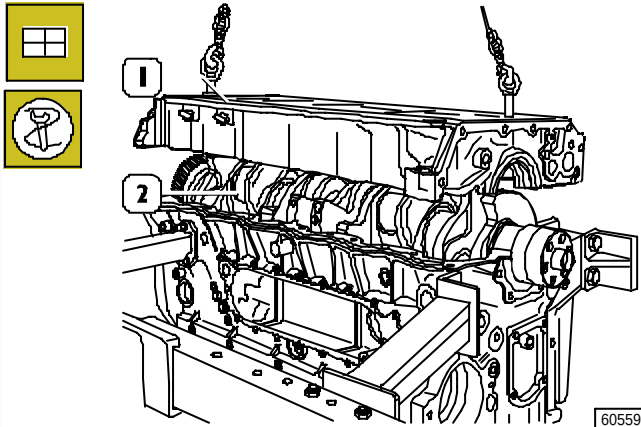

Set two journals of the crankshaft (2) parallel to the longitudinal axis, a section of calibrated wire. Using appropriate hooks and tackle, mount the lower crankcase (1).

Figure 100

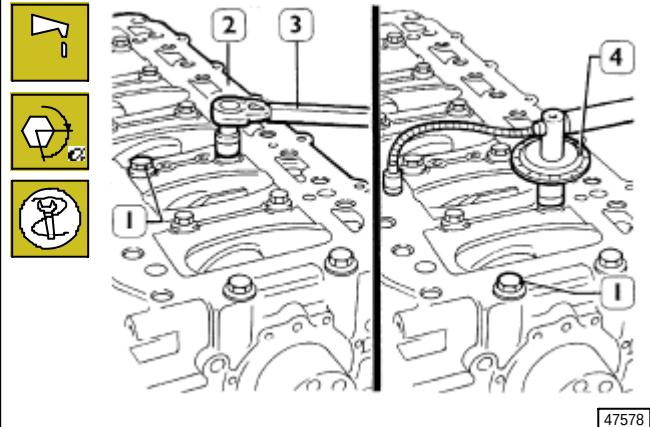

- Lubricate the internal screws (1) with UTM oil and tighten them with a torque wrench (3) to a torque of 120 Nm, using tool 99395216 (4), to an angle of 60°, following the diagram of Figure 101.

Figure 101


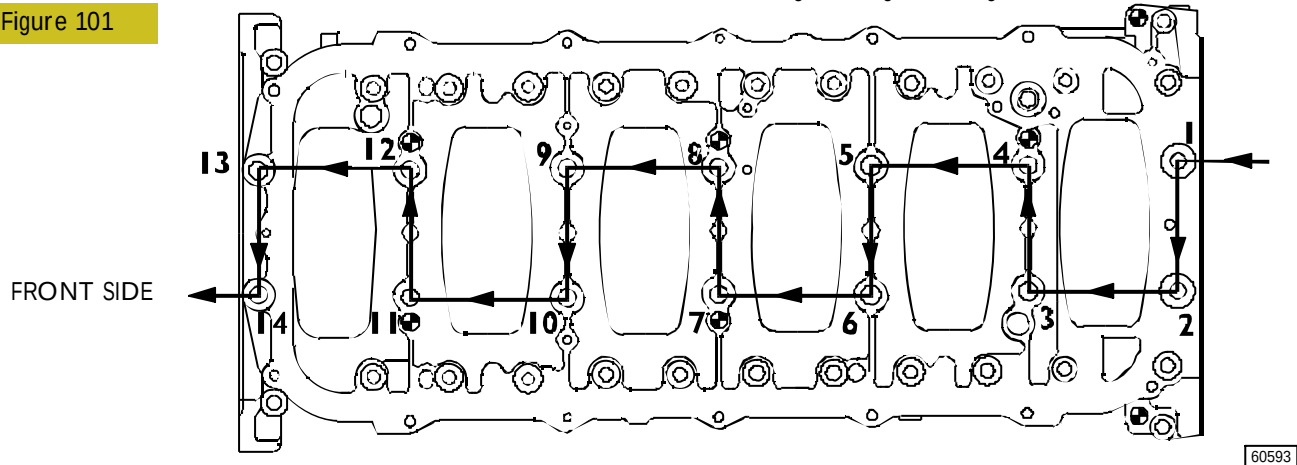


DIAGRAM OF SEQUENCE FOR TIGHTENING THE SCREWS FIXING THE BOTTOM CRANKCASE TO THE CRANKCASE

Figure 102

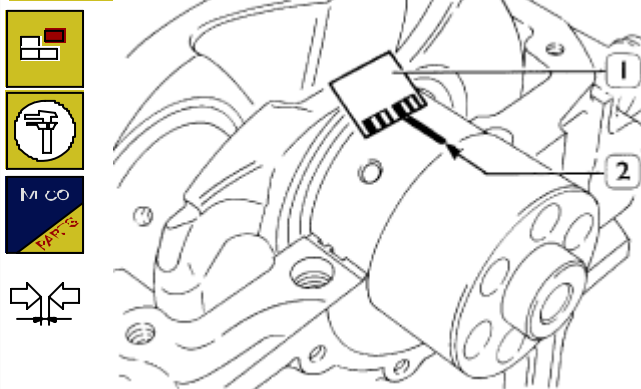


- Remove the lower crankcase.

The clearance between the main bearings and their journals is measured by comparing the width taken on by the calibrated wire (2) at the point of greatest crushing with the graduated scale on the case (1) containing the calibrated wire. The numbers on the scale give the clearance of the coupling in millimetres. If you find the clearance is not as required, replace the bearing shells and repeat the check.

Checking crankshaft end float

Figure 103

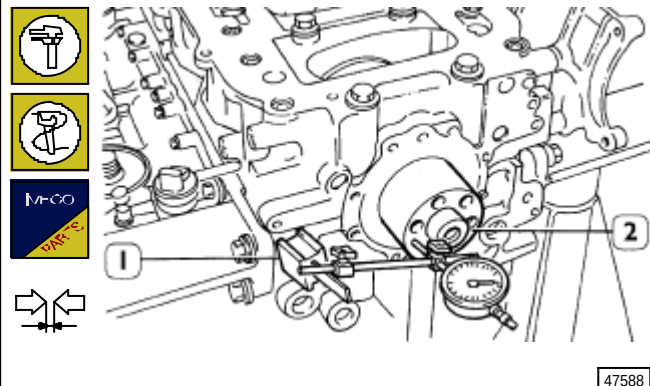


The end float is checked by setting a dial gauge (1) 99395603 with a magnetic base on the crankshaft (2) as shown in the figure. If you find the clearance to be greater than as required, replace the rear main bearing shells carrying the thrust bearings and repeat the clearance check.

Aquila Trucks Centres

5408 Connecting rod piston assembly

Figure 104

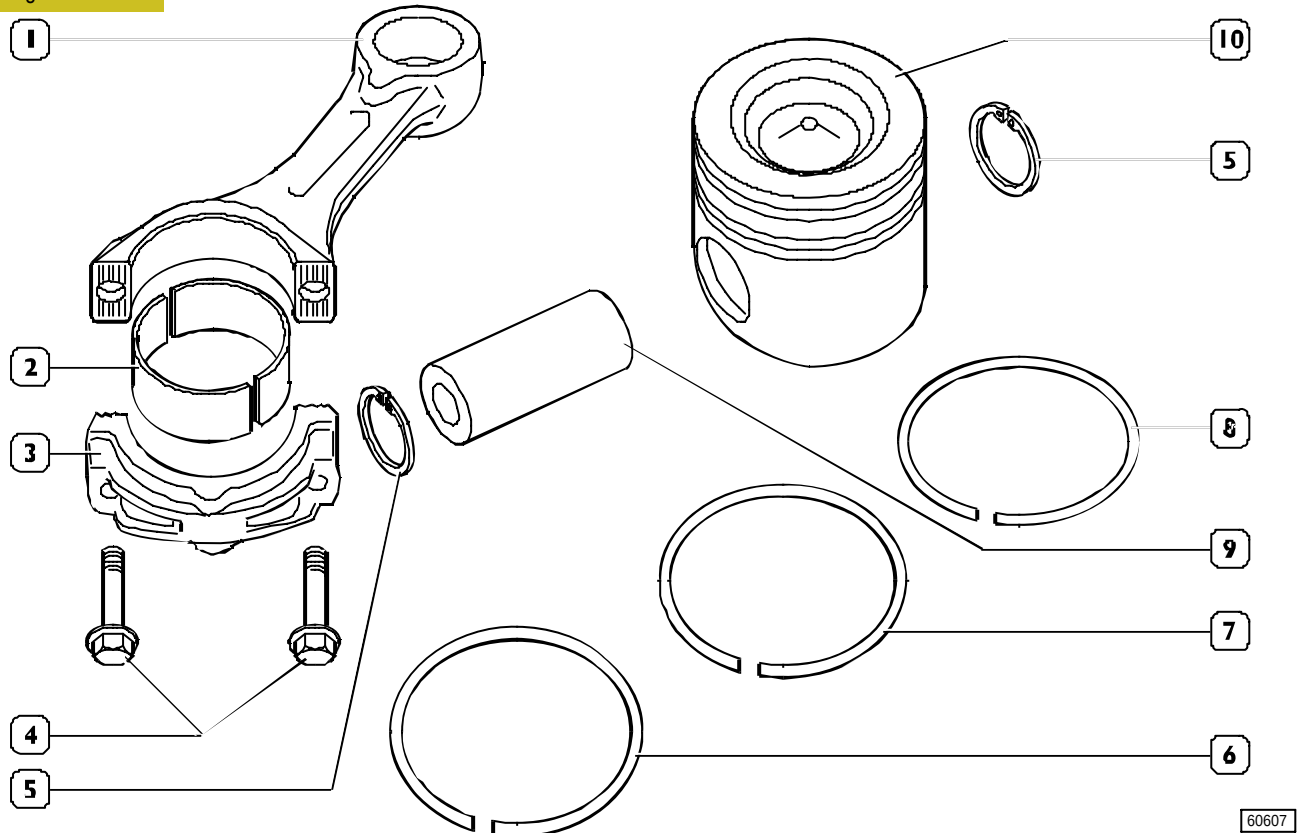


PISTON - CONNECTING ROD ASSEMBLY

1. Connecting rod body - 2. Bearing shells - 3. Connecting rod cap - 4. Cap fixing screws - 5. Seeger ring - 6. Slotted scraper ring - 7. Scraper ring - 8. Compression ring - 9. Piston gudgeon pin - 10. Piston

Check the pistons. They must show no signs of seizure, scoring, cracking or excessive wear; replace them if they do.

Removal

Figure 105

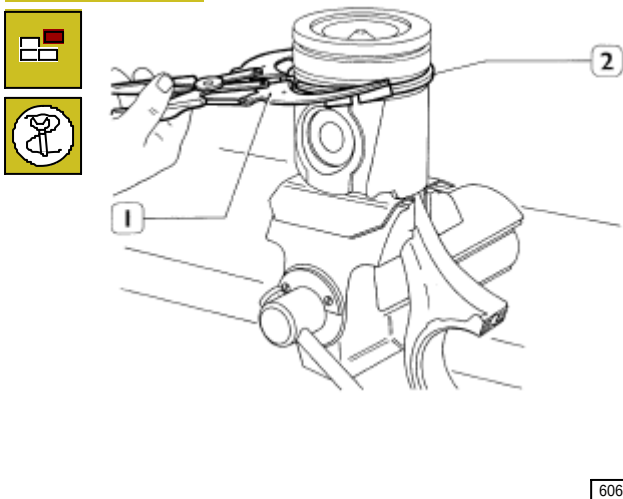


Removing the piston rings from the piston (2) using pliers 99360184 (1).

The pistons are fitted with three rings: the first one is a V-seal, the second one a bevelled seal and the third one a scraper ring.

The pistons are selected in two classes, A and B, according to diameter.


Figure 106

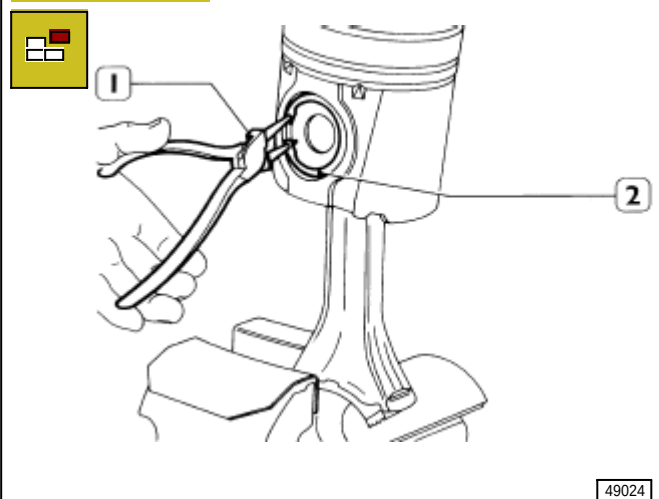

Removing the rings (2) retaining the piston gudgeon pin using round-nose pliers (1).

Aquila Trucks Centres

Figure 107

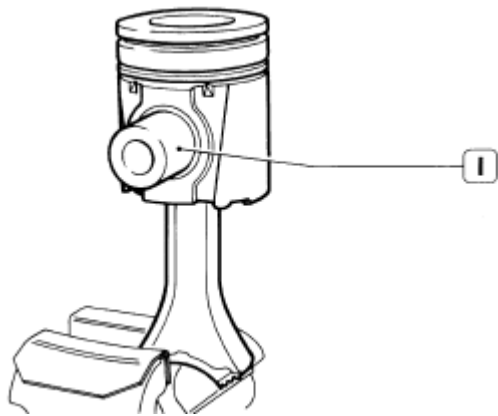


49025

Removing the piston gudgeon pin (1).
If removal is difficult, use an appropriate drift.

Measuring piston diameter


Figure 108

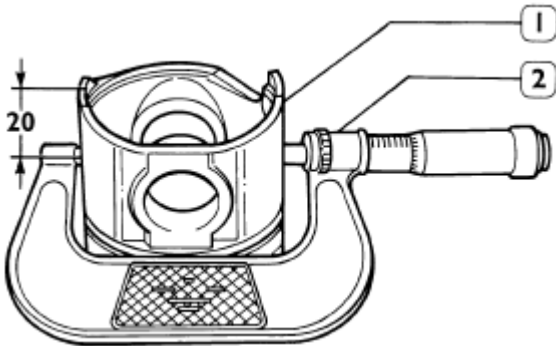

71714

Using a micrometer (2), measure the diameter of the piston (1) to determine the assembly clearance. The diameter has to be measured at the value shown.

Figure 109

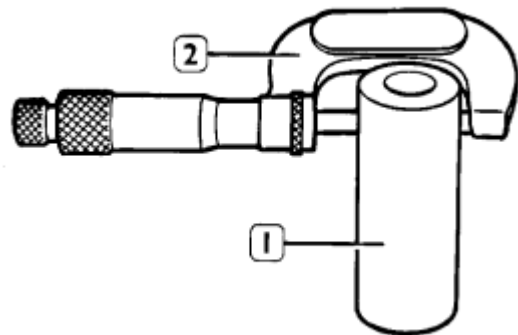

32618

Measuring the diameter of the pin (1) using a micrometer (2).

Conditions for correct pin-piston coupling

Figure 110




49026

Lubricate the pin (1) and its seats on the hubs inside the piston with engine oil. The pin has to go into the piston by lightly pressing it with the fingers and must not drop out.

Aquila Trucks Centres

Figure 111

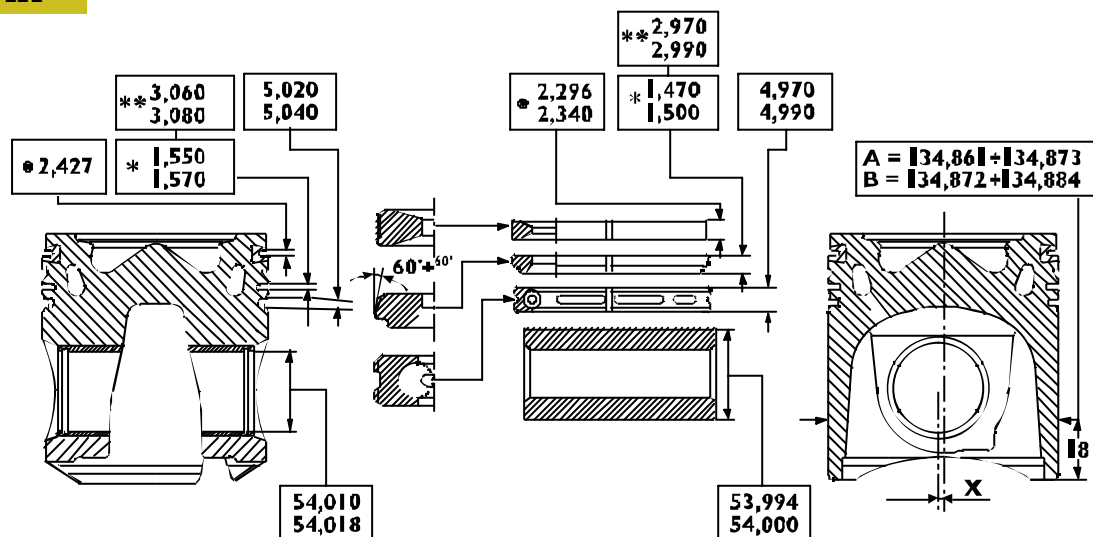

114973


MAIN DATA OF THE PISTON, PISTON RINGS AND PIN

F Dimension detected on 130 mm $\varnothing$ - J measured at 2.5 mm from outer $\varnothing$ - X = $0,8 \pm 0,1$

* Old part number - ** New part number

540842 Piston rings


Figure 112

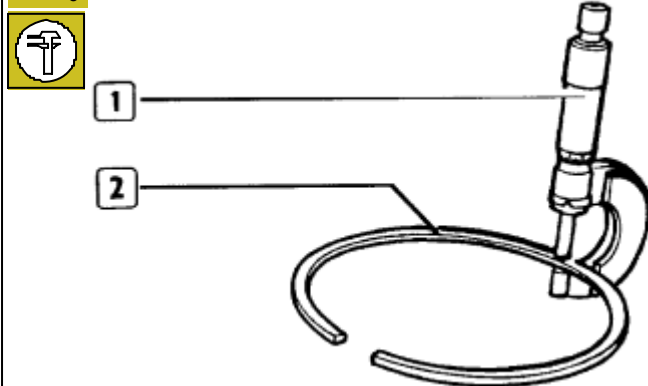

16552

Check the thickness of the piston ring (2) with a micrometer (1).


Figure 113

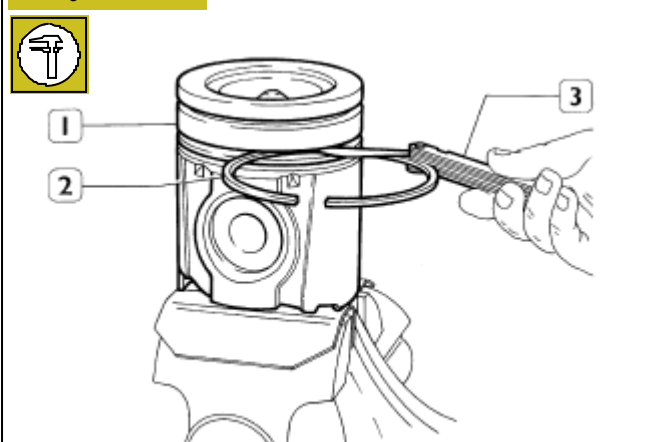

60610

Check the clearance between the seals (2) and their seats on the piston (1) with a feeler gauge (3).


Figure 114

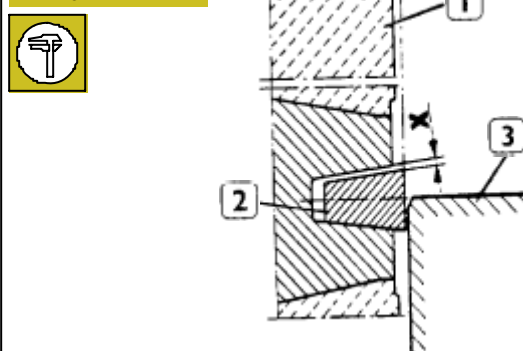

3513

The seal (2) of the 1st slot has a V shape. The clearance "X" between the seal and its seat is measured by setting the piston (1) with the ring in the cylinder liner (3) so that the seal comes half out of the cylinder liner.

Figure 115

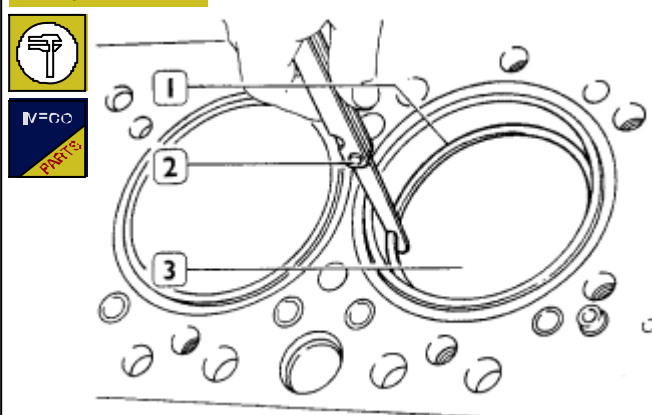

Using a feeler gauge (2), check the opening between the ends of the seals (1) inserted in the cylinder liner (3). If you find the distance between the ends is less than or greater than as required, replace the piston rings.

Aquila Trucks Centres

540830 Connecting rod

Figure 116

Punched on the big end of the connecting rod are the data relating to the section in classes relating to the connecting rod seats and the weights.

NOTE On assembling the connecting rods, check they are all of the same class of weight.

Connecting rod punch markings


1 Letter indicating the class of weight:

- A = 4741 to 4780 g.
- B = 4781 to 4820 g.
- C = 4821 to 4860 g.

2 Number indicating the selection of the diameter of the big end bearing seat:


- 1 = 94.000 to 94.010 mm
- 2 = 94.011 to 94.020 mm
- 3 = 94.021 to 94.030 mm

3 Number indicating the selection of diameter for the big end bearing housing:

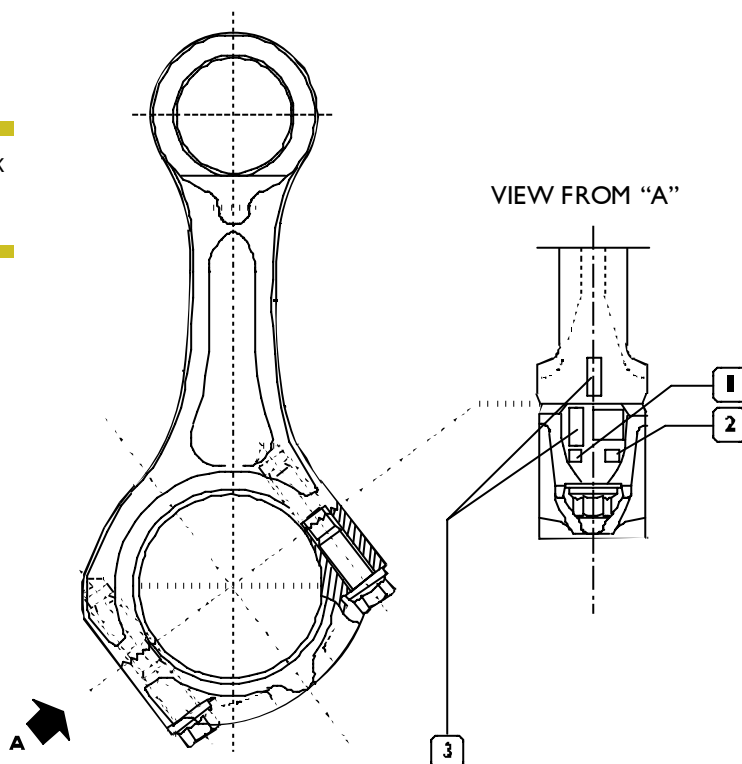

117180

Figure 117

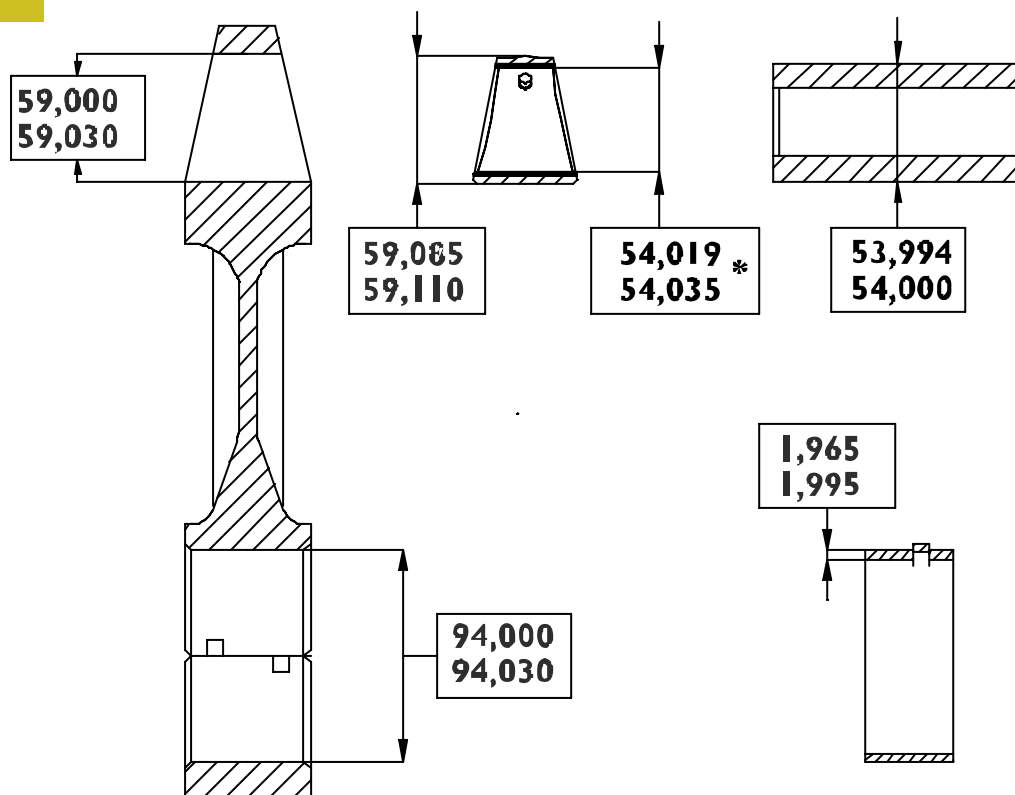

71716


MAIN DATA OF THE BUSHING, CONNECTING ROD, PIN AND BEARING SHELLS

* Measurement to be made after driving in the bushing.

Aquila Trucks Centres

540834 Bushings


Figure 118

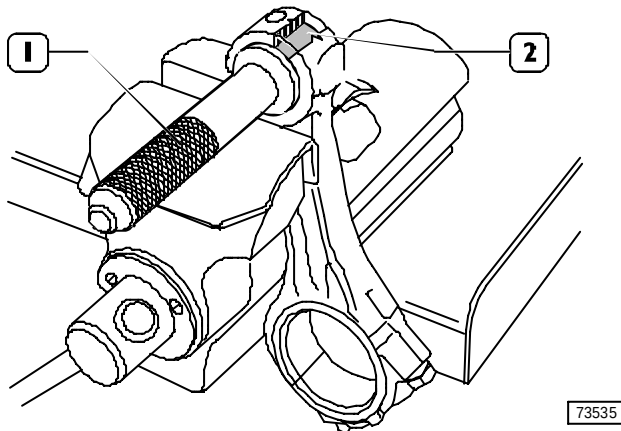

Check the bushing in the small end has not come loose and shows no sign of scoring or seizure; replace it if it does. The bushing (2) is removed and fitted with a suitable drift (1). When driving it in, make absolutely sure that the holes for the oil to pass through in the bushing and small end coincide. Using a boring machine, rebore the bushing so as to obtain a diameter of 54.019 – 54.035.

Checking connecting rods squareness

Figure 119 (Demonstration)

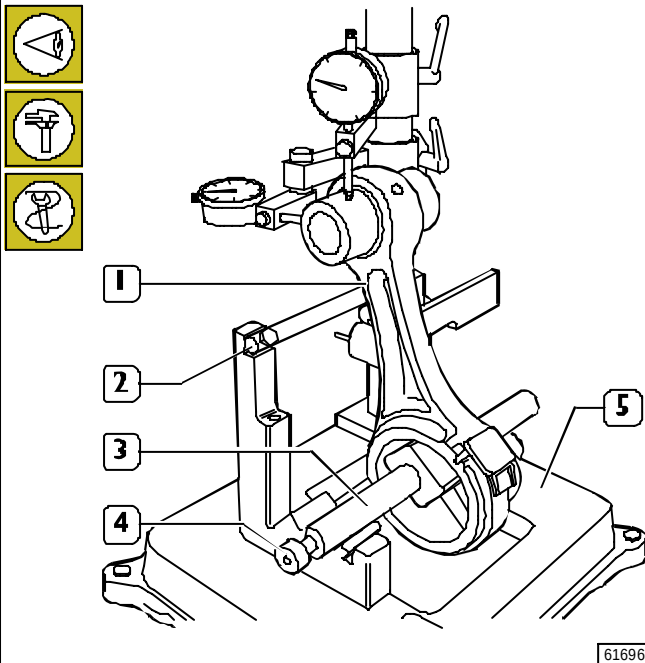

Checking axis alignment


Check the alignment of the axes of the connecting rods (1) with a suitable device (5), proceeding as follows:

Fit the connecting rod (1) on the spindle of the tool (5) and lock it with the screw (4).

Set the spindle (3) on the V-prisms, resting the connecting rod (1) on the stop bar (2).

Checking torsion

Figure 120 (Demonstration)

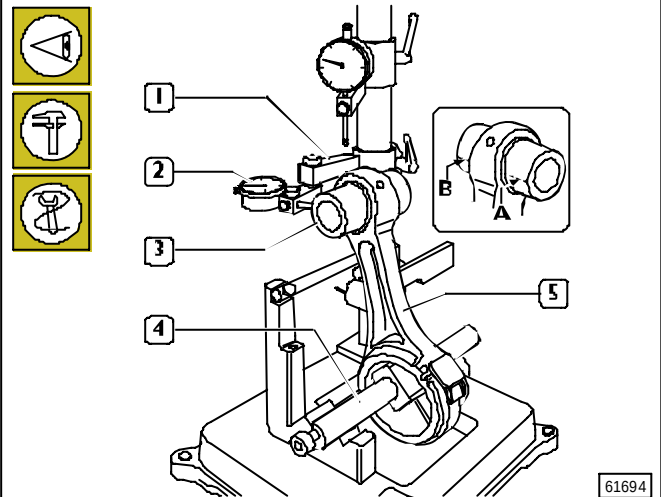


Check the torsion of the connecting rod (5) by comparing two points (A and B) of the pin (3) on the horizontal plane of the axis of the connecting rod.

Position the mount (1) of the dial gauge (2) so that this pre-loads by approx. 0.5 mm on the pin (3) at point A and zero the dial gauge (2). Shift the spindle (4) with the connecting rod (5) and compare any deviation on the opposite side B of the pin (3): the difference between A and B must be no greater than 0.08 mm.

Checking bending

Figure 121 (Demonstration)

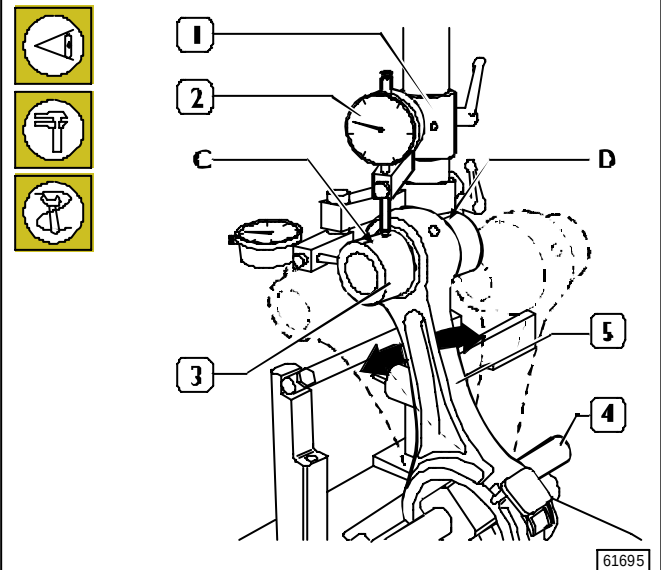

Check the bending of the connecting rod (5) by comparing two points C and D of the pin (3) on the vertical plane of the axis of the connecting rod.


Position the vertical mount (1) of the dial gauge (2) so that this rests on the pin (3) at point C.

Swing the connecting rod backwards and forwards seeking the highest position of the pin and in this condition zero the dial gauge (2). Shift the spindle (4) with the connecting rod (5) and repeat the check on the highest point on the opposite side D of the pin (3). The difference between point C and point D must be no greater than 0.08 mm.

Aquila Trucks Centres


Mounting the connecting rod – piston assembly

Figure 122

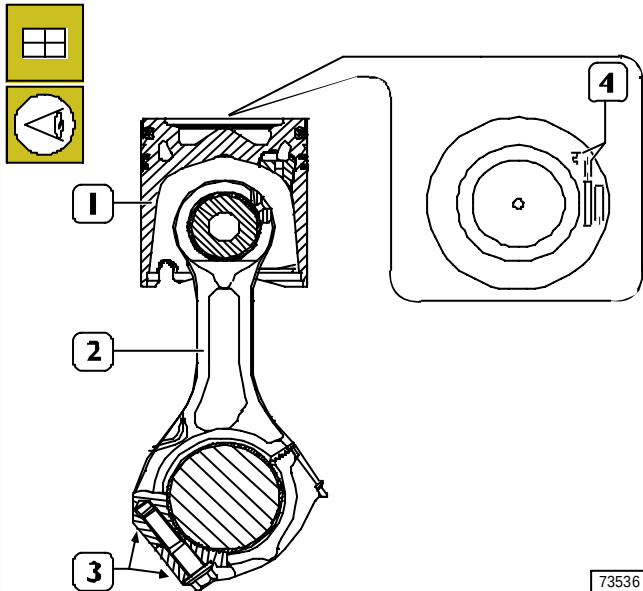

The piston (1) has to be fitted on the connecting rod (2) so that the graphic symbol (4), showing the assembly position in the cylinder liner, and the punch marks (3) on the connecting rod are observed as shown in the figure.


Figure 123

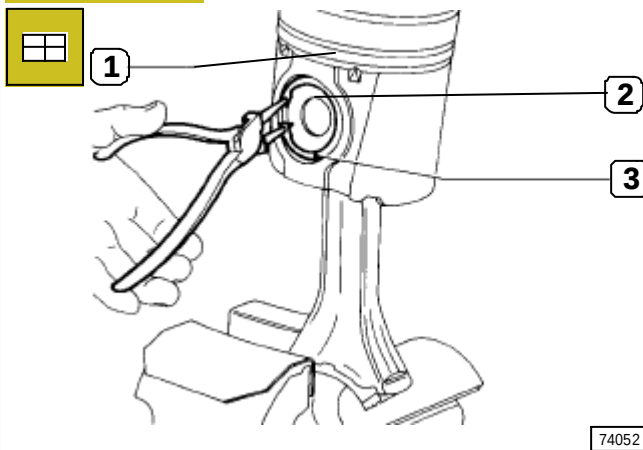

Fit the pin (2) and fasten it on the piston (1) with the seeger rings (3).

Mounting the piston ring

Figure 124

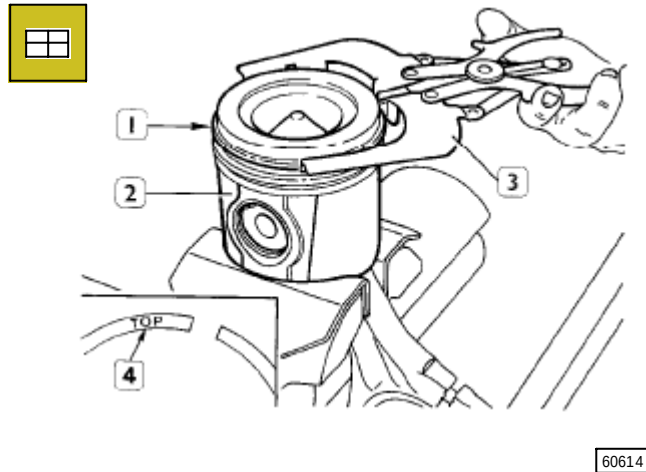


To fit the piston rings (1) on the piston (2) use the pliers 99360184 (3).

The rings need to be mounted with the word "TOP" (4) facing upwards. Direct the ring openings so they are staggered 120° apart.

Fitting the big end bearing shells

Figure 125

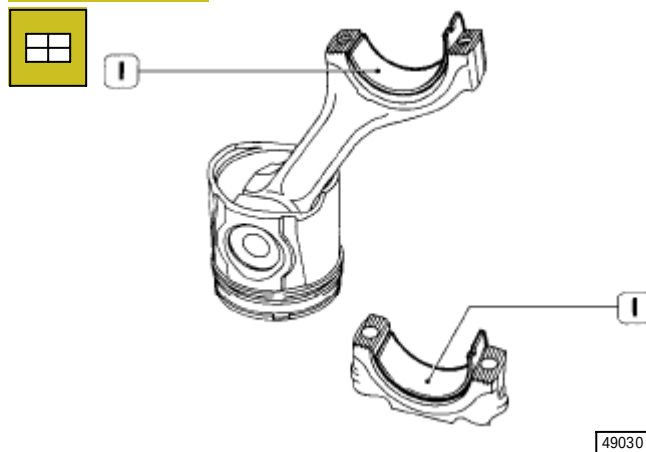

Fit the bearing shells (1), selected as described under the heading "Selecting the main and big end bearing shells", on both the connecting rod and the cap.

If reusing bearing shells that have been removed, fit them back into their respective seats in the positions marked during removal.

Aquila Trucks Centres

Fitting connecting rod - piston assemblies in the cylinder liners

With the aid of the clamp 99360605 (1, Figure 126), fit the connecting rod – piston assembly (2) in the cylinder liners, according to the diagram of Figure 127, checking that:


- The openings of the piston rings are staggered 120° apart.
- The pistons are all of the same class, A or B.
- The symbol punched on the top of the pistons faces the engine flywheel, or the recess in the skirt of the pistons tallies with the oil nozzles.



Be very careful that the connecting rod does not strike the cylinder walls.

NOTE The pistons are supplied as spares in class A and can be fitted in class B cylinder liners.

Figure 126

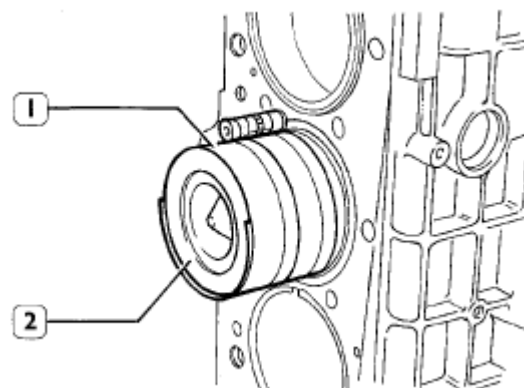


60616

Checking piston protrusion

On completing assembly, check the protrusion of the pistons from the cylinder liners; it must be 0.12 – 0.42 mm.

Figure 127

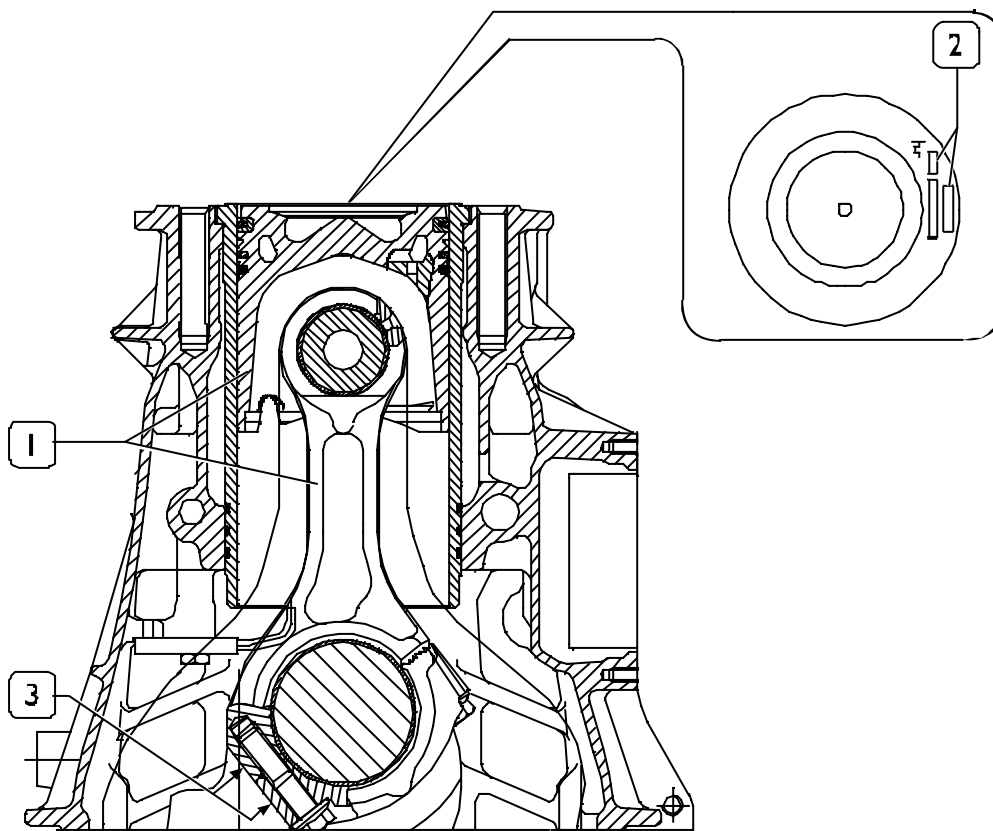

60615

ASSEMBLY DIAGRAM OF CONNECTING ROD – PISTON ASSEMBLY IN CYLINDER LINER

1. Connecting rod – piston assembly – 2. Area of punch marking on the top of the piston, symbol showing assembly position and selection class – 3. Connecting rod punch mark area


Aquila Trucks Centres

540831 Checking crankpin assembly clearance

To measure the clearance, carry out the following operations.

Connect the connecting rods to the relevant journals of the crankshaft, placing a length of calibrated wire on the journals.

Figure 128

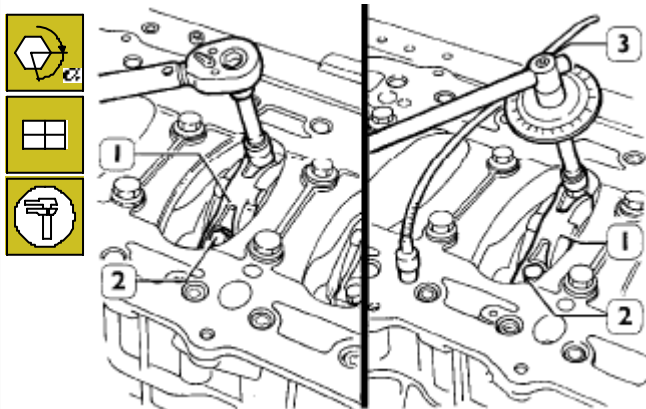

[47594]

Mount the connecting rod caps (1) together with the bearing shells. Tighten the screws (2) fixing the connecting rod caps to a torque of 60 Nm (6 kgm). Using tool 99395216 (3), further tighten the screws with an angle of 60°.

NOTE The thread of the screws (2), before assembly, has to be lubricated with engine oil.

Remove the caps and determine the clearance by comparing the width of the calibrated wire with the graduated scale on the case containing the calibrated wire.

Upon final assembly: check the diameter of the thread of the screws (2), it must be no less than 13.4 mm; if it is, change the screw. Lubricate the crankpins and connecting rod bearings. Tighten the screws (2) as described above.

540610 CYLINDER HEAD

Before dismounting cylinder head, check cylinder head for hydraulic seal by proper tooling; in case of leaks not caused by cup plugs or threaded plugs, replace cylinder head.



When replacing, the cylinder head is supplied as a spare part with a threaded plug, which must be removed during assembly.


NOTE In case of plugs dismounting/replacement, on mounting, apply sealant Loctite 270 on plugs.

Disassembly the valves

NOTE Before dismounting cylinder head valves, number them in view of their remounting in the position observed on dismounting should they not have to be overhauled or replaced.

Intake valves are different form exhaust valves in that they have a notch placed at valve head centre.

Figure 129

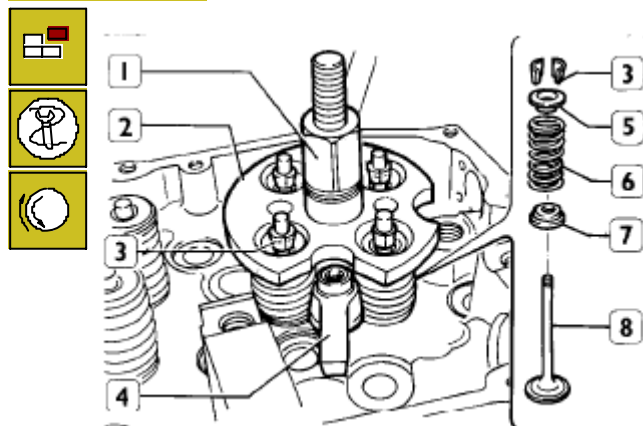

Mount and secure the tool 99360263 (2) with the bracket (4). Screw down with the device 99360261 (1) to be able to remove the coppers (3). Take out the tool (2) and extract the top plate (5), spring (6) and bottom plate (7).


Repeat this process on all the valves.

Turn over the cylinder head and take out the valves (8).

Checking head bearing surface on cylinder block

Figure 130

(Demonstration)

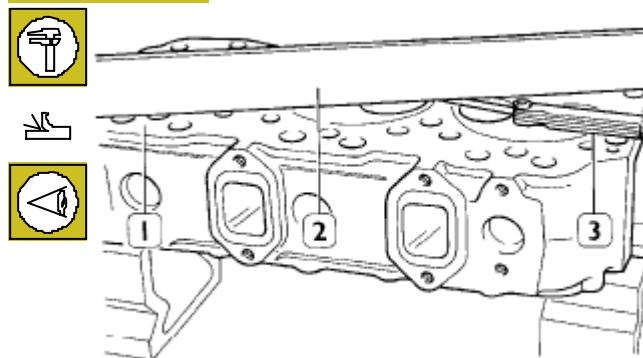

[36159]

Check the supporting surface (1) of the head on the cylinder block with a rule (2) and a feeler gauge (3). If you find any deformation, level the head on a surface grinder; maximum amount of material that can be removed 0.2 mm.


NOTE After this process, you need to check the valve recessing and injector protrusion.

Aquila Trucks Centres

540622 Valves

Decarbonizing and checking valves


Figure 131

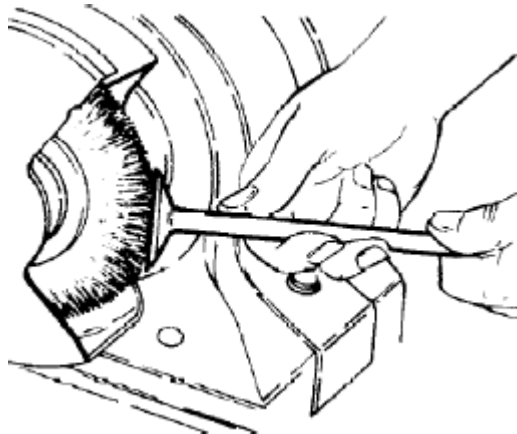

48625

Remove the carbon deposits on the valves with a wire brush. Check that the valves show no signs of seizure or cracking and check with a micrometer that the valve stem diameter comes within the required values (see Figure 132); replace the valves if it does not.

Figure 132

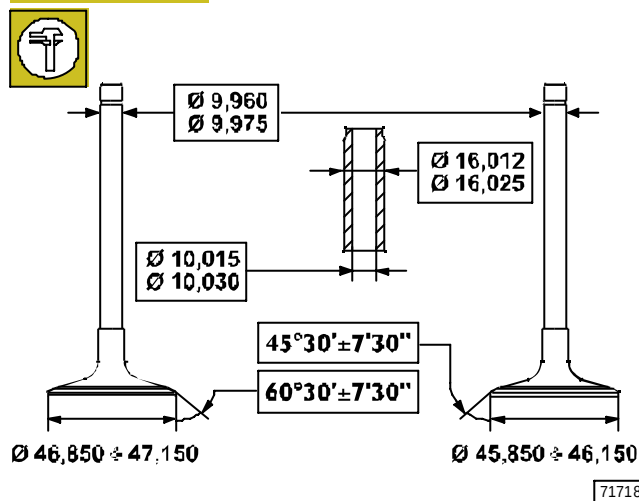

71718

MAIN DATA OF VALVES AND VALVE GUIDES

* Measurement to be made after driving in the valve guides


Check with a micrometer that the diameter of the valve stems is as indicated. If necessary, grind the valve seats with a grinding machine, removing as little material as possible.

540661 Valve seats

Regrinding – replacing valve seats

NOTE The valve seats are reground whenever the valves or valve guides are ground and replaced.

Figure 133

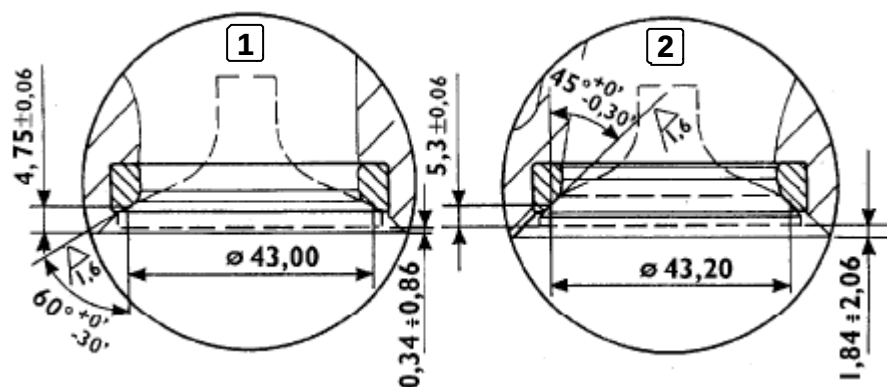


73555

MAIN DATA OF VALVE SEATS

1. Intake valve seat – 2. Exhaust valve seat

Aquila Trucks Centres

Figure 134 (Demonstration)

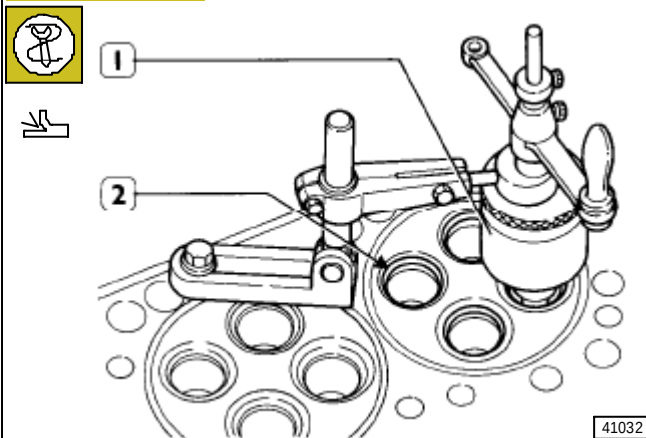

Check the valve seats (2). If you find any slight scoring or burns, regrind them with a suitable tool (1) according to the angles shown in Figure 133. If it is necessary to replace them, using the same tool and taking care not to affect the cylinder head, remove as much material as possible from the valve seats so that, with a punch, it is possible to extract them from the cylinder head.

Heat the cylinder head to $80 \pm 100^{\circ}\text{C}$ and, using a drift, fit in the new valve seats (2), chilled beforehand in liquid nitrogen. Using tool 99305019 (1), regrind the valve seats according to the angles shown in Figure 133.

After regrinding the valve seats, using tool 99370415 and dial gauge 99395603, check that the position of the valves in relation to the plane of the cylinder head is:

- $-0.45 \div -0.75$ mm (recessing) intake valves
- $-1.65 \div -1.95$ mm (recessing) exhaust valves.


Checking clearance between valve-stem and associated valve guide

Using a dial gauge with a magnetic base, check the clearance between the valve stem and the associated guide. If the clearance is too great, change the valve and, if necessary, the valve guide.

540667 Valve guides

Replacing valve guides

Figure 135

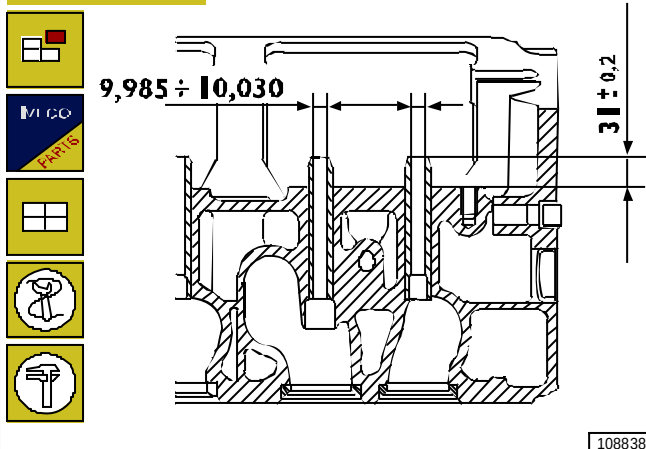

The valve guides are removed with the drift 99360143. They are fitted with the drift 99360143 equipped with part 99360296.


Part 99360296 determines the exact position of assembly of the valve guides in the cylinder head. If they are not available, you need to drive the valve guides into the cylinder head so they protrude by 30.8 ± 31.2 mm.

After driving in the valve guides, rebore their holes with the smoother 99390330.

540613 Replacing injector holders

Removal

Figure 136

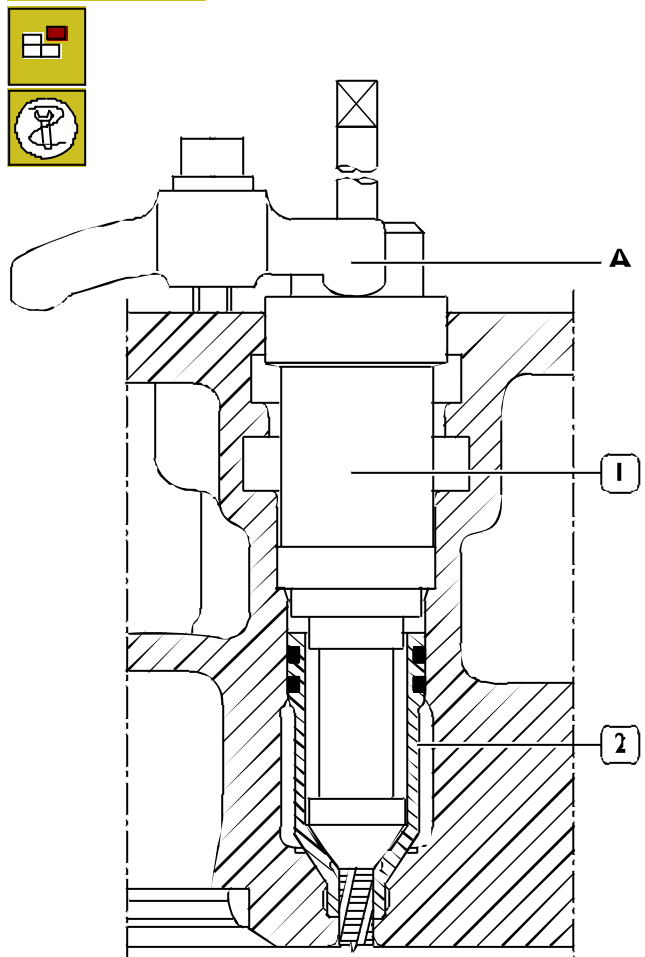


To replace the injector holder (2), proceed as follows:

- Thread the holder (2) with tool 99390804 (1).

The steps described in Figs. 137 - 139 - 140 - 141 need to be carried out by fixing the tools, with the bracket A, to the cylinder head.


Aquila Trucks Centres

Figure 137

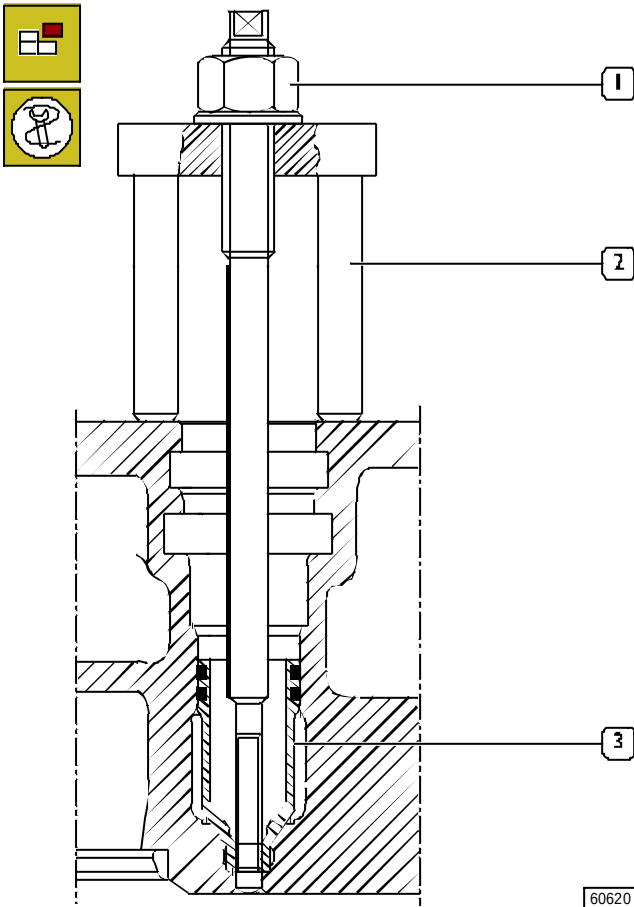

- Screw the extractor 99342149 (2) into the holder (3). Screw down the nut (1) and take the holder out of the cylinder head.


Figure 138

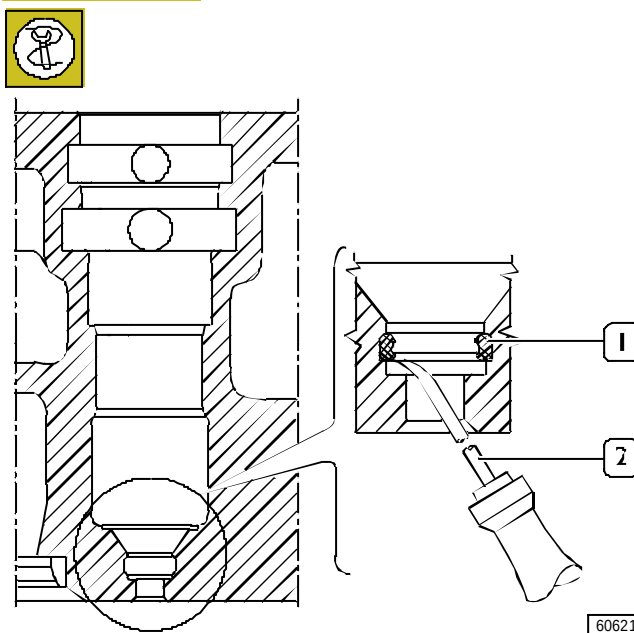

- Using the tool 99390772 (2) remove any residues (1) left in the groove of the cylinder head.


Assembly

Figure 139

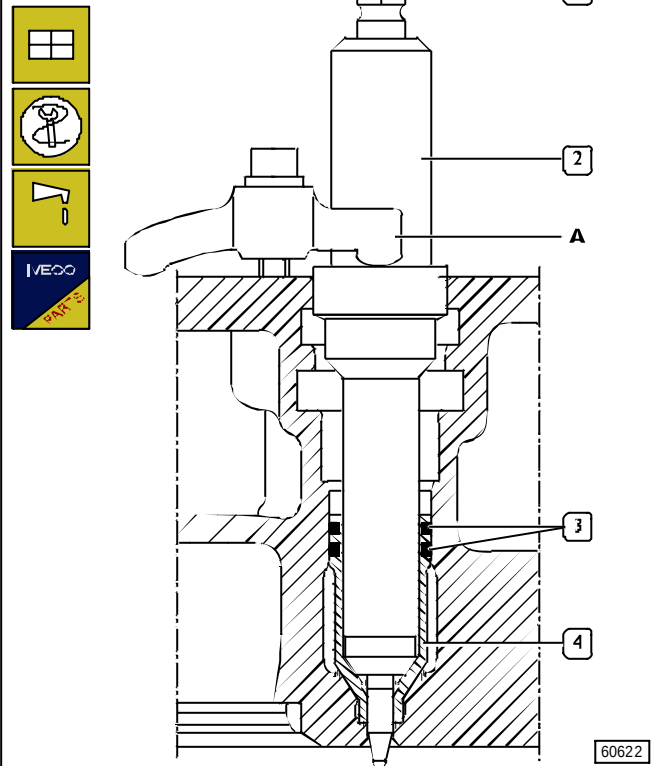

- Lubricate the seals (3) and fit them on the case (4). Using tool 99365056 (2) secured to the cylinder head with bracket A, drive in the new holder, screwing down the screw (1) upsetting the bottom portion of the holder.


Figure 140

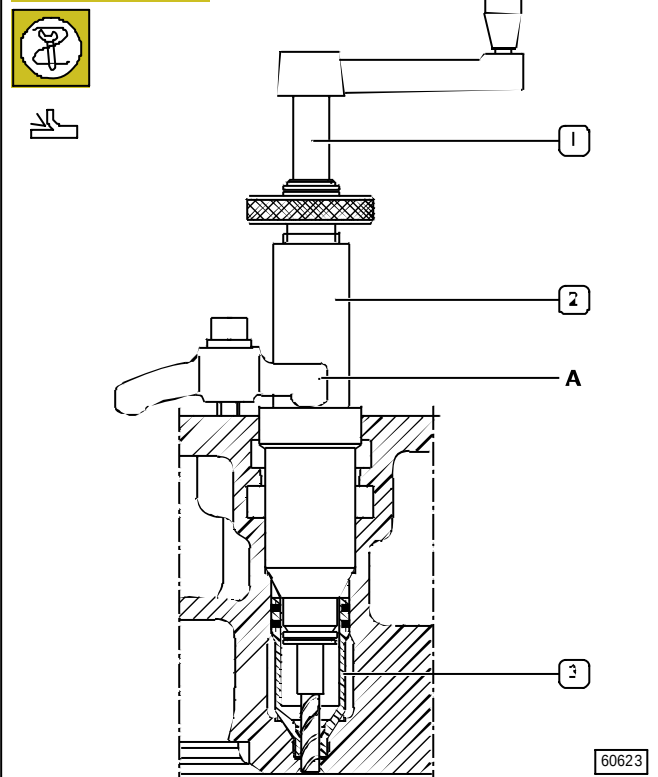

- Using the reamer 99394041 (1-2), rebores the hole in the holder (3).

Aquila Trucks Centres


Figure 141

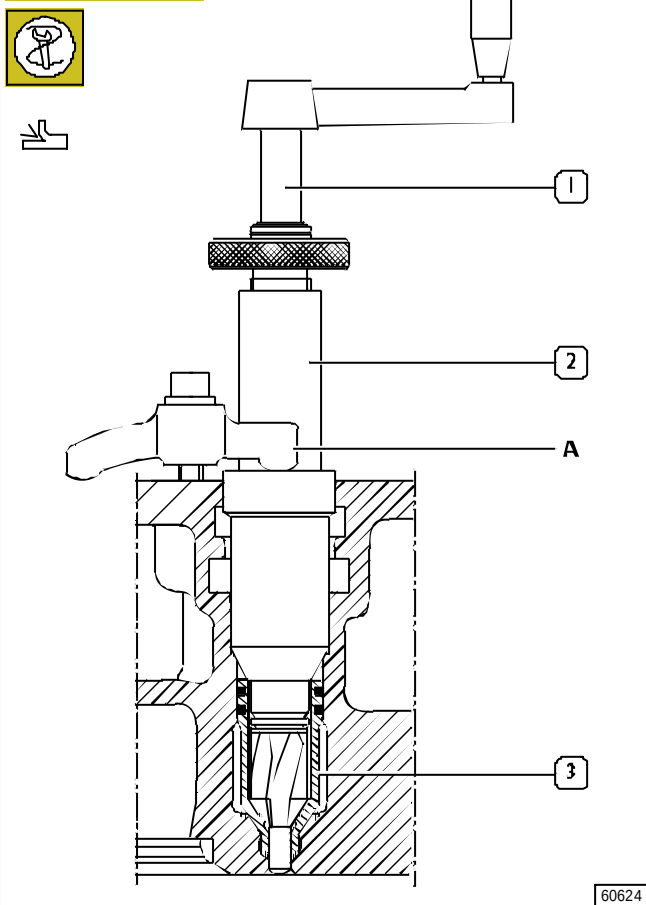

- Using the milling cutter 99394043 (1-2), regrind the injector seat in the injector holder (3).


Checking injector protrusion

Figure 142

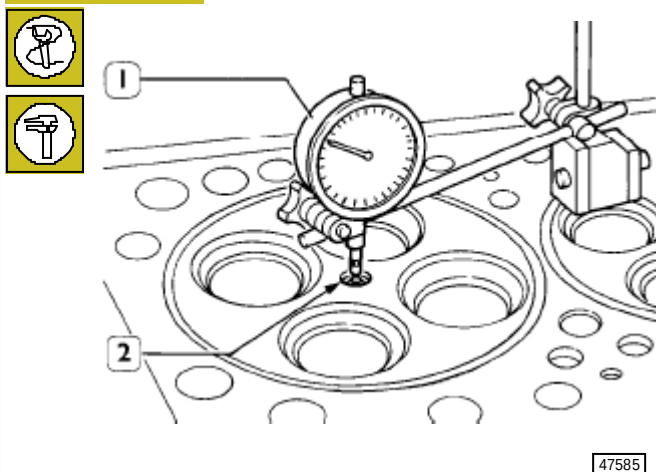

Check injector protrusion (2) with the dial gauge (1).
The protrusion must be 0.52 - 1.34 mm.

Figure 143

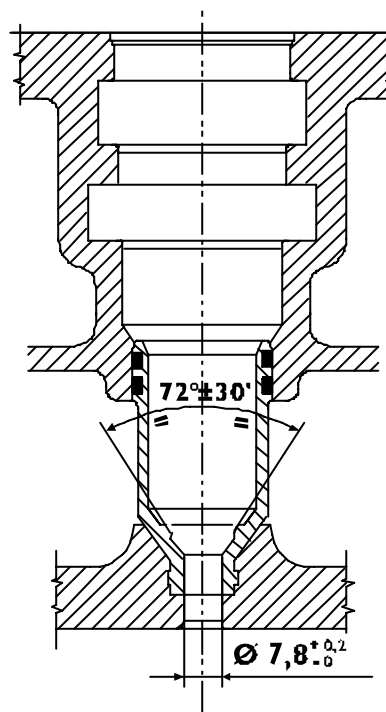


INJECTOR HOLDER ASSEMBLY DIAGRAM

Aquila Trucks Centres

5412 TIMING GEAR Camshaft drive

Figure 144

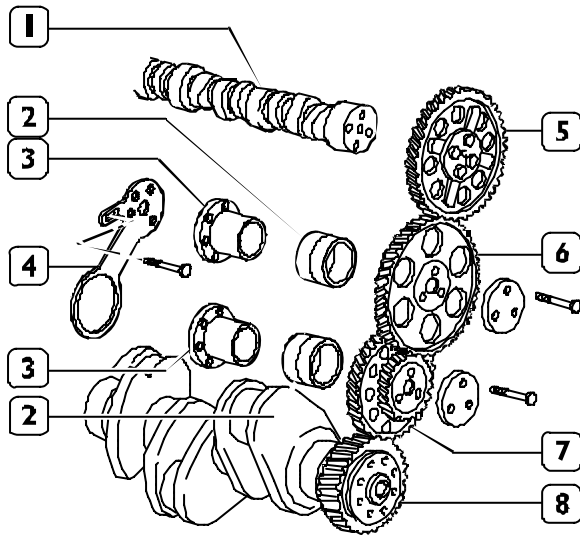


86925

TIMING CONTROL COMPONENT PARTS

1. Camshaft - 2. Bushing - 3. Pin - 4. Articulated rod -
5. Camshaft control gear - 6. Idler gear - 7. Twin idler gear -
8. Drive shaft driving gear.

541253 Idler gear pin 541252 Idler gear


Figure 145

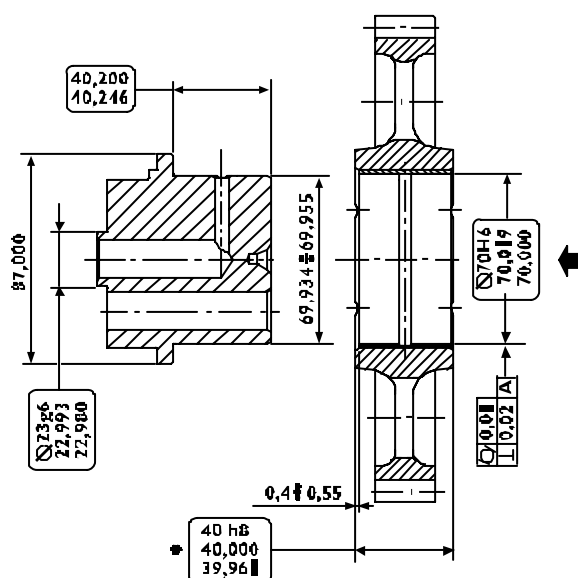

108840

541253 Twin intermediate gear pin 541252 Twin idler gear

Figure 146

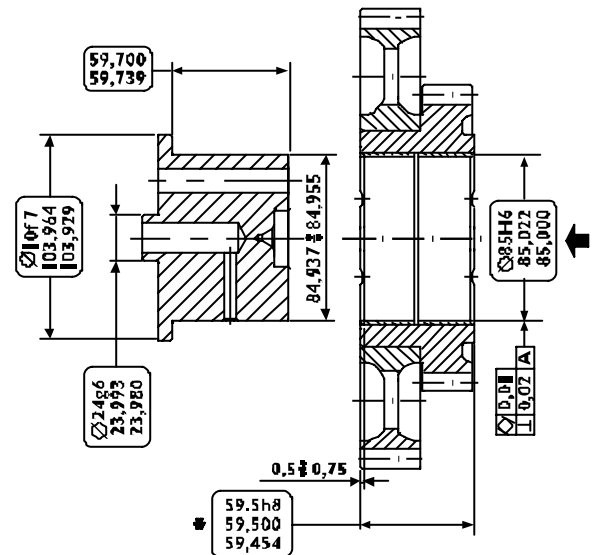

86934

541254 Replacing the bushings

Bushings (2, Figure 143), can be replaced when they are worn. Put up the bushing, then bore it to obtain the diameter shown on Figure 145 or .Figure 146

NOTE The bushing must be driven into the gear by following the direction of the arrow and setting the latter to the dimension shown on Figure 145 or .Figure 146

Rated assembling play between gear bushings and pins:


Figure 145 – 0.045 ÷ 0.085 mm

Figure 146 – 0.045 ÷ 0.085 mm.

Aquila Trucks Centres

541210 Timing system
541211 Checking cam lift and pin alignment


Figure 147

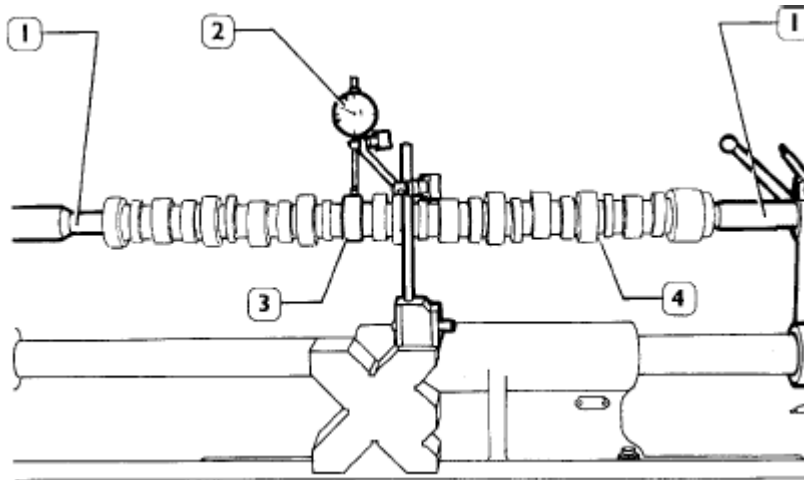

47506

Set the camshaft (4) on the tailstocks (1) and check the lift of the cams (3) with the dial gauge (2); the values are given in the table on page 139.



Figure 148

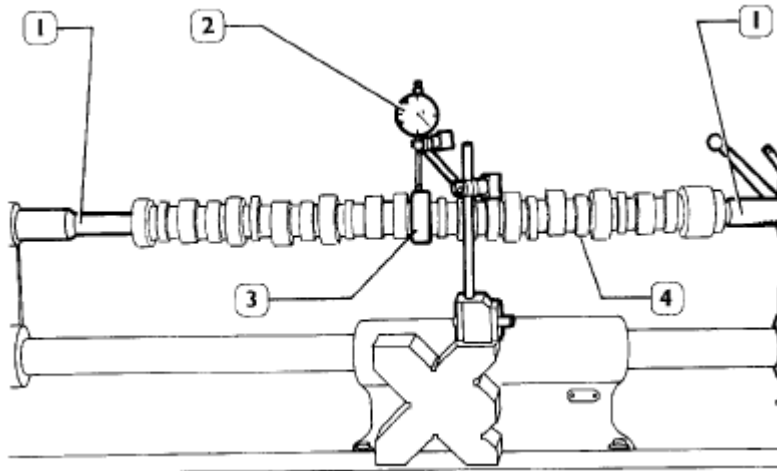

47507

Still with the camshaft (4) set on the tailstocks (1), check the alignment of the supporting pins (3) with the dial gauge (2); it must be no greater than 0.030 mm. If you find a greater misalignment, replace the shaft.

 Figure 149

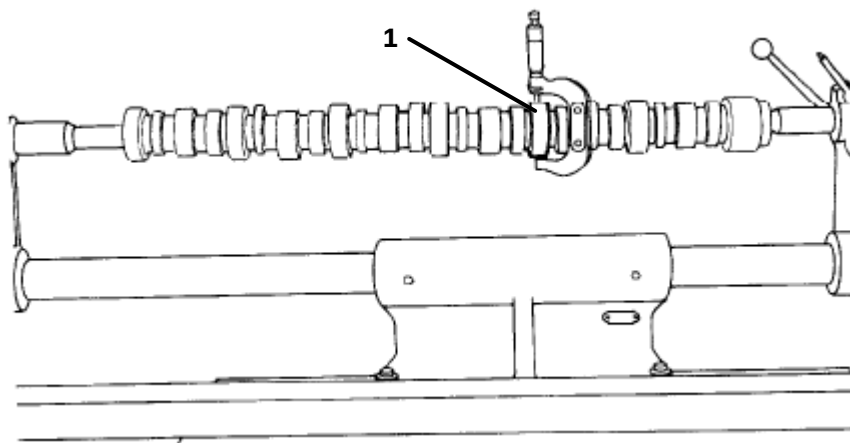


47505

To check the assembly clearance, measure the inside diameter of the bushings and the diameter of the pins (1) of the camshaft: the difference will give the actual clearance.

If you find any clearances over 0.135 mm, replace the bushings and, if necessary, the camshaft as well.

Aquila Trucks Centres

Figure 150

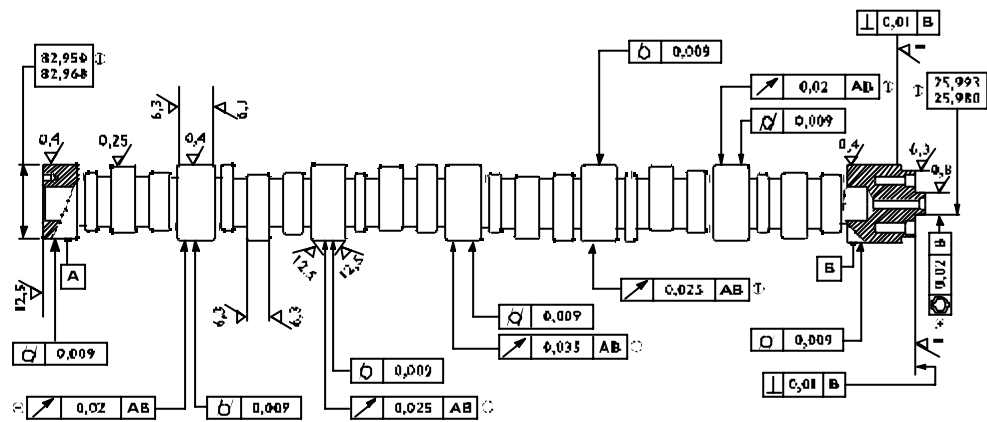

108841


MAIN DATA OF THE CAMSHAFT AND TOLERANCES

The surfaces of the supporting pins of the shaft and those of the cams need to be extra smooth. Whereas, if they show any signs of seizing or scoring, you should replace the shaft and the relevant bushings.

TOLERANCES	FEATURE SUBJECT OF TOLERANCE	SYMBOL
DIRECTION	Perpendicularity	$\perp$
POSITION	Concentricity or coaxiality	$\odot$
SWING	Circular oscillation	$\curvearrowright$
CLASS OF IMPORTANT ASCRIBED TO PRODUCT CHARACTERISTICS		SYMBOL
CRUCIAL		$\oplus$
IMPORTANT		$\oplus$
SECONDARY		$\ominus$

541213 Bushings

Figure 151

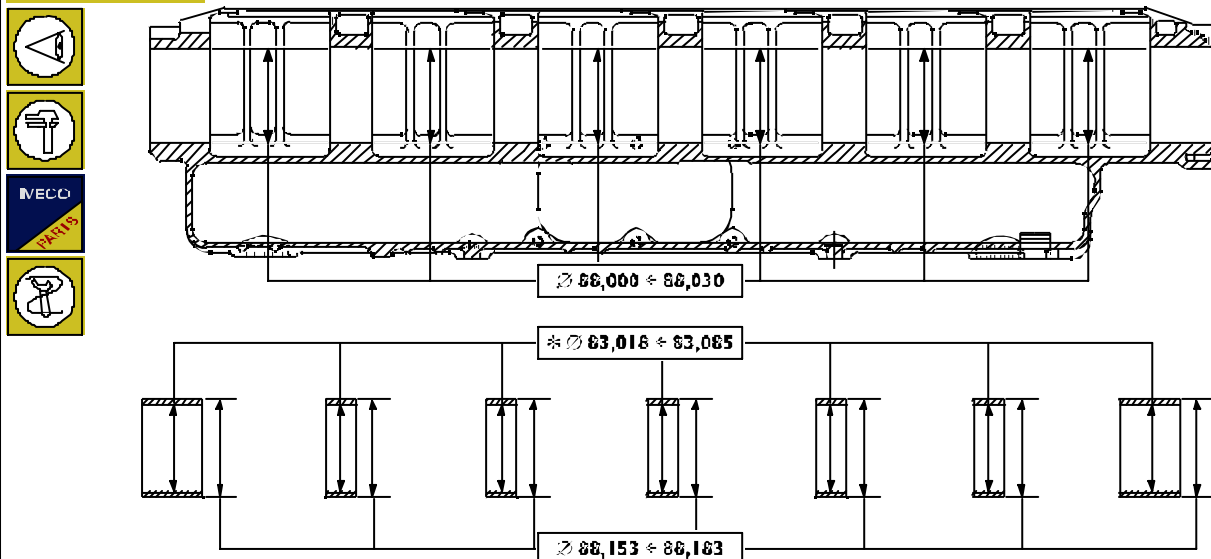

60627

MAIN DATA OF THE BUSHINGS FOR THE CAMSHAFT AND SEATS ON THE CYLINDER HEAD

* Bushing inside diameter after driving in

The surface of the bushings must show no sign of seizing or scoring; replace them if they do. Measure the inside diameter of the bushings with a bore gauge.


If you find a higher value than the tolerance, replace them. To remove and fit the bushings, use the appropriate drift 99360499.

Aquila Trucks Centres

Replacing camshaft bushings with drift 99360499

Drift

Figure 152

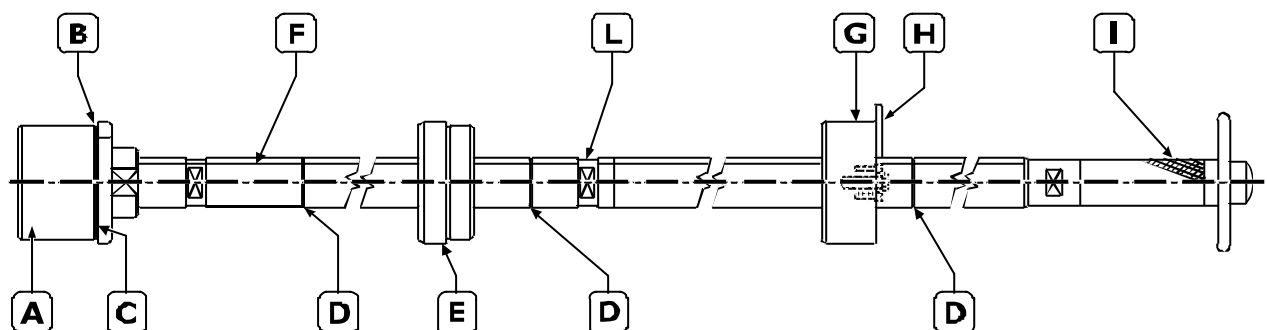


107217

- A = Drift with seat for bushings to insert/extract.
- B = Grub screw for positioning bushings.
- C = Reference mark to insert seventh bushing correctly.
- D = Reference mark to insert bushings 1, 2, 3, 4, 5, 6 correctly (yellow marks).
- E = Guide bushing.
- F = Guide line.
- G = Guide bushing to secure to the seventh bushing mount.
- H = Plate fixing bushing G to cylinder head.
- I = Grip.
- L = Extension coupling.

Removal

Figure 153

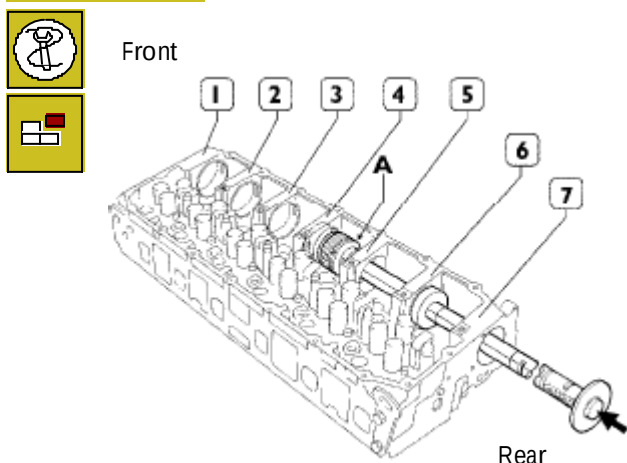


71725

The sequence for removing the bushings is 7, 6, 5, 4, 3, 2, 1. The bushings are extracted from the front of the single seats. Removal does not require the drift extension for bushings 5, 6 and 7 and it is not necessary to use the guide bushing. For bushings 1, 2, 3 and 4 it is necessary to use the extension and the guide bushings. Position the drift accurately during the phase of removal.

Assembly

Figure 154

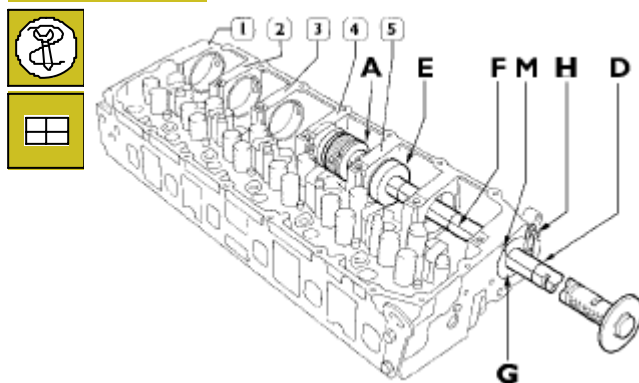

77795


Assemble the drift together with the extension.

To insert bushings 1, 2, 3, 4 and 5, proceed as follows:

- 1 position the bushing to insert on the drift (A) making the grub screw on it coincide with the seat (B) (Figure 152) on the bushing;
- 2 position the guide bushing (E) and secure the guide bushing (G) (Figure 152) on the seat of the 7th bushing with the plate (H);
- 3 while driving in the bushing, make the reference mark (F) match the mark (M). In this way, when it is driven home, the lubrication hole on the bushing will coincide with the oil pipe in its seat. The bushing is driven home when the 1st yellow reference mark (D) is flush with the guide bushing (G).

Aquila Trucks Centres

Figure 155

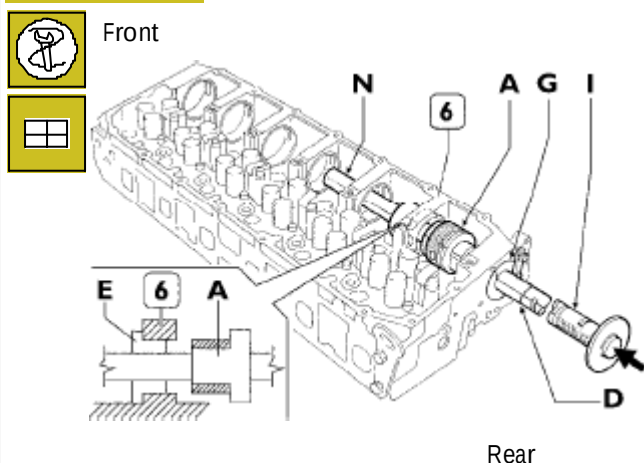


71723

To insert the bushing (6), proceed as follows:

- Unscrew the grip (I) and the extension (N).
- Position the extension (N) and the guide bushing E as shown in the figure.
- Repeat steps 1, 2, 3.

Figure 156

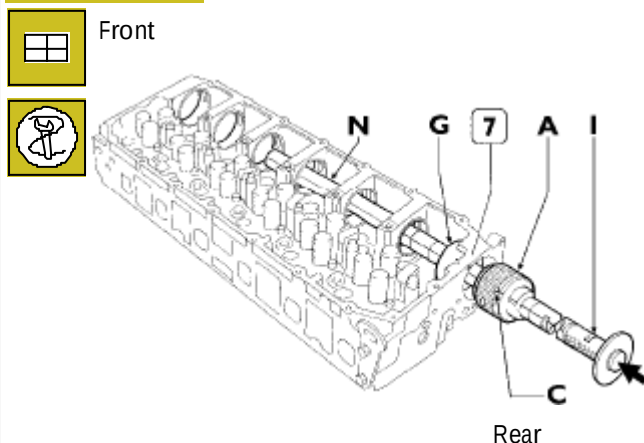


71724

To insert bushing (7), proceed as follows:

- Unscrew the grip (I) and the extension (N).
- Refit the guide (G) from the inside as shown in the figure.
- Position the bushing on the drift (A) and bring it close up to the seat, making the bushing hole match the lubrication hole in the head. Drive it home. The 7th bushing is driven in when the reference mark (C) is flush with the bushing seat.

540665 Valve springs


Figure 157 (Demonstration)

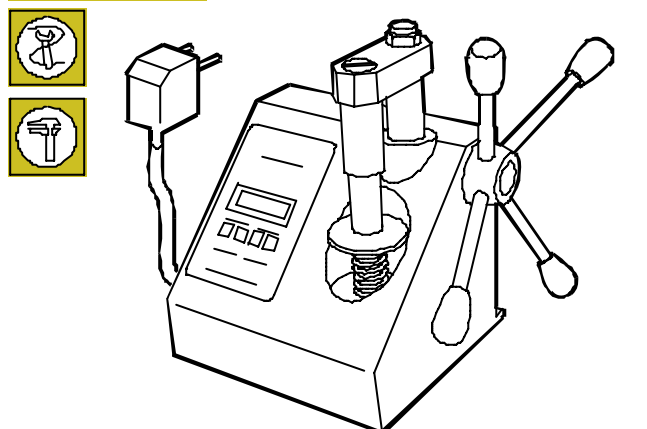

70000

Before assembly, the flexibility of the valve springs has to be checked with a suitable tool. Compare the load and elastic deformation data with those of the new springs given in the following figure.

Figure 158

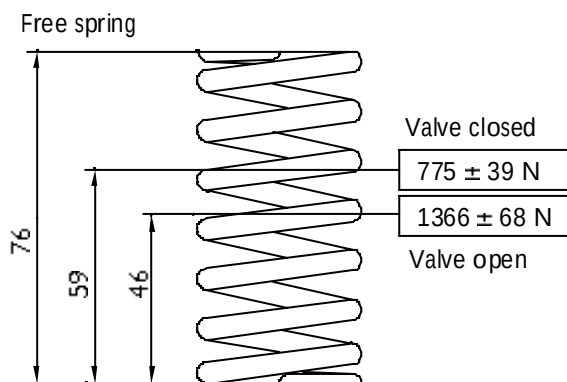


108842

MAIN DATA TO CHECK THE SPRING FOR INTAKE AND EXHAUST VALVES

Aquila Trucks Centres

Fitting valves and oil seal

Figt

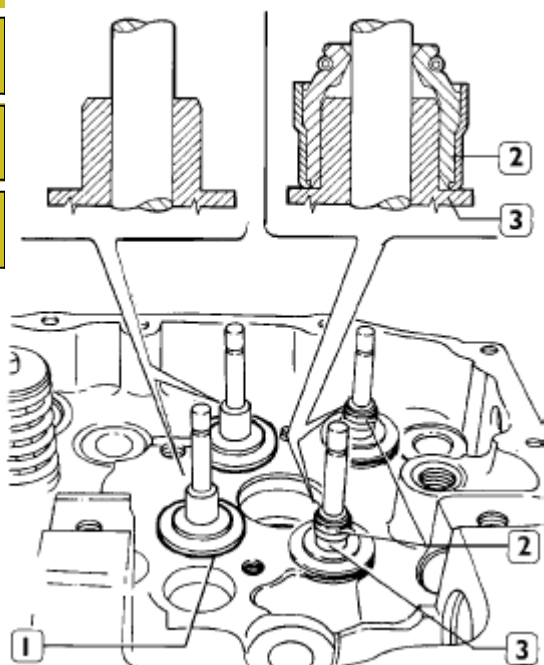


87051

Lubricate the valve stem and insert the valves in the respective valve guides; fit the lower caps (1). Use tool 99360329 to fit the oil seal (2) on the valve guides (3) of the exhaust valves; then, to fit the valves, proceed as follows.

NOTE Should valves not have been overhauled or replaced, remount them according to numbering performed on dismantling.

Intake valves are different from exhaust valves in that they have a notch placed at valve head centre.

Figure 160

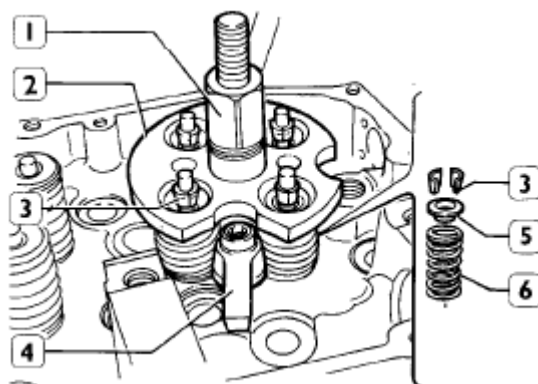


86290

- Mount the springs (6) and the top plate (5).
- Fit the tool 99360263 (2) and secure it with the bracket (4). Screw down the lever (1) to be able to fit on the cotters (3). Take off the tool (2).

5412 ROCKER SHAFT

Figure 161

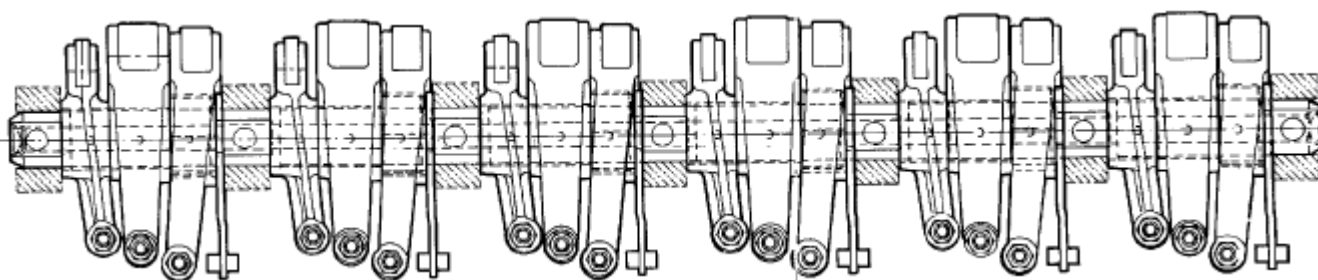

44925

The cams of the camshaft control the rocker arms directly: 6 for the injectors and 12 for the valves.

Injectors and intake valves control rocker arms are keyed on rocker arms shaft directly. Exhaust intake valves control rocker arms are keyed on rocker arms shaft putting in between the levers with engine brake control eccentric pin.

The rocker arms run directly on the profiles of the cams by means of rollers.

The other end acts on a crosspiece that rests on the stem of the two valves.

There is a pad between the rocker arm adjustment screw and the crosspiece.


There are two lubrication ducts inside the rocker arms.

The length of the rocker arm shaft is basically the same as that of the cylinder head. It has to be detached to be able to reach all the parts beneath.

Aquila Trucks Centres

Shaft

Figure 162

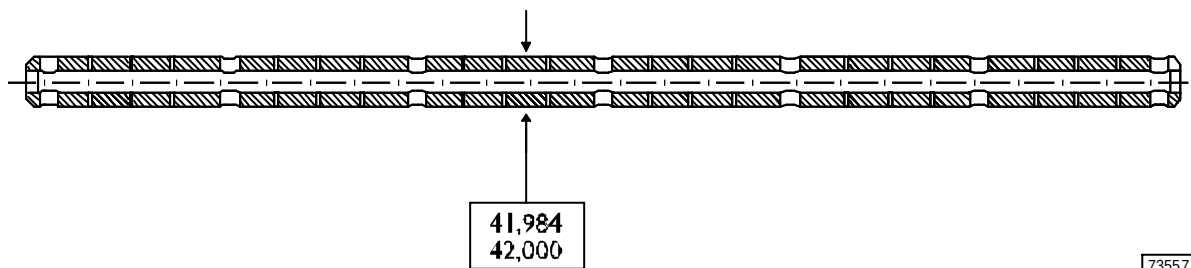


MAIN DATA OF THE ROCKER ARM SHAFT

Check that the surface of the shaft shows no scoring or signs of seizure; if it does, replace it.


Rocker arms

Figure 163

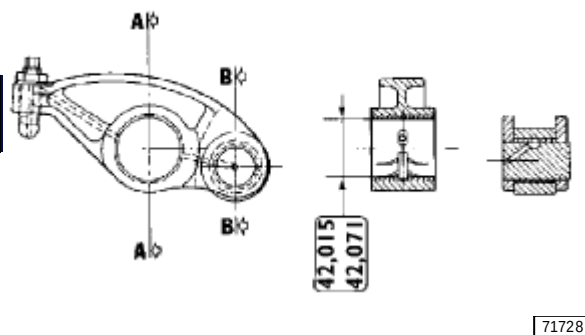


PUMP INJECTOR ROCKER ARMS

Figure 165

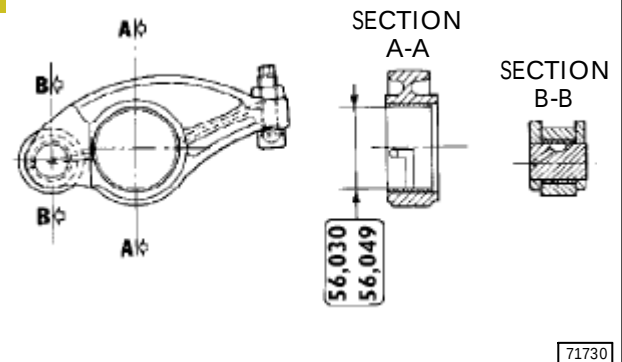


EXHAUST VALVE ROCKER ARM

Figure 164

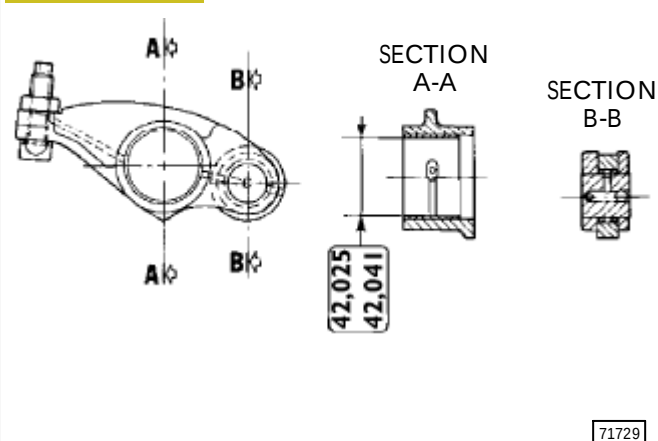

INTAKE VALVE ROCKER ARMS

Figure 166

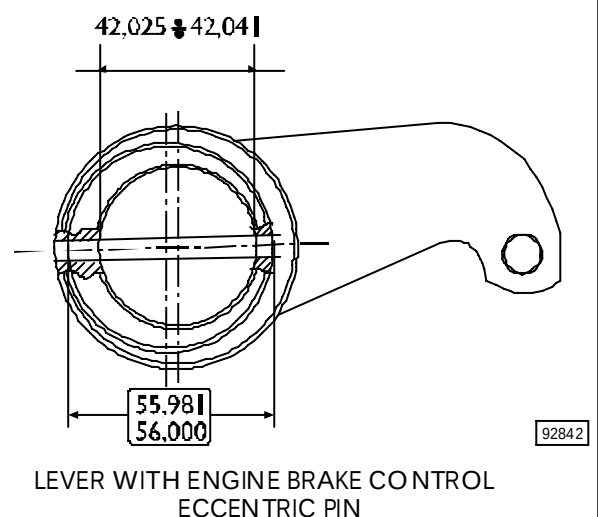LEVER WITH ENGINE BRAKE CONTROL
ECCENTRIC PIN


Check the surfaces of the bushings, which must show no signs of scoring or excessive wear; if they do, replace the rocker arm assembly.

Aquila Trucks Centres

ENGINE ASSEMBLY

Using the brackets 99361036, secure the crankcase to the stand 99322230.
Mount the cylinder liners as described on page 179.

Figure 167

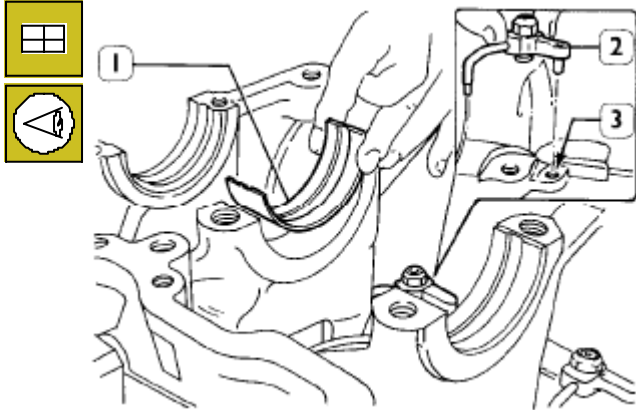


47586

Mount the oil nozzles (2), making the grub screw coincide with the hole (3) in the crankcase.

Arrange the bearing shells (1) on the main bearing housings.

NOTE Not finding it necessary to replace the main bearings, you need to fit them back in exactly the same sequence and position as in removal. Choose main bearings, if they are to be replaced, based on selection described in chapter "Selecting main and big end bearings".


Figure 168

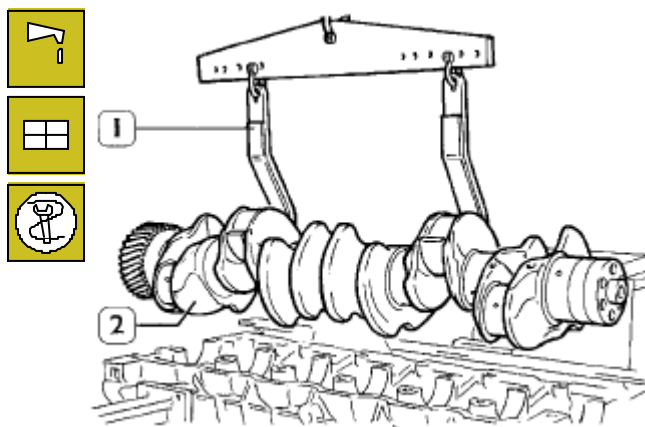

47570


Lubricate the bearing shells then mount the crankshaft (2) using the tackle and hook 99360500 (1).

Figure 169

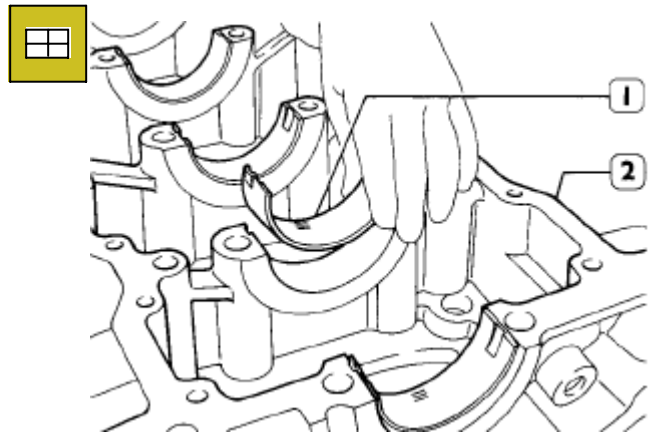

49021

Arrange the bearing shells (1) on the main bearing housings in the crankcase base (2).

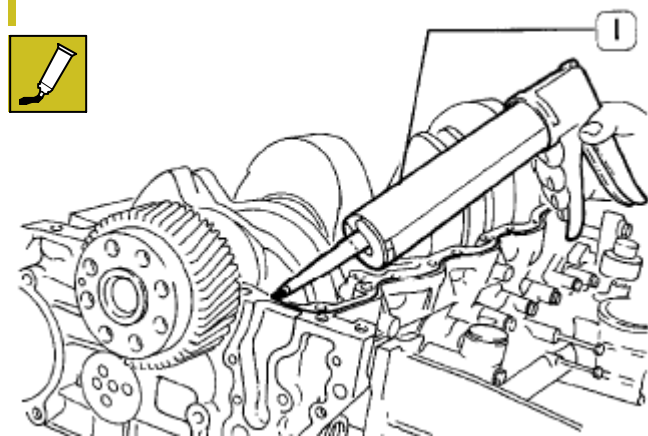


47595

Apply LOCTITE 5970 MECO No. 2995644 silicone on the crankcase using the appropriate tools (1) as shown in Figure 171.

Aquila Trucks Centres

Figure 171

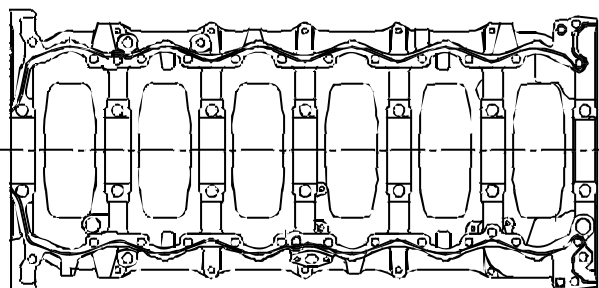


60632

Sealant application diagram.

NOTE Mount the lower crankcase within 10 min. of applying the sealant.


Figure 172

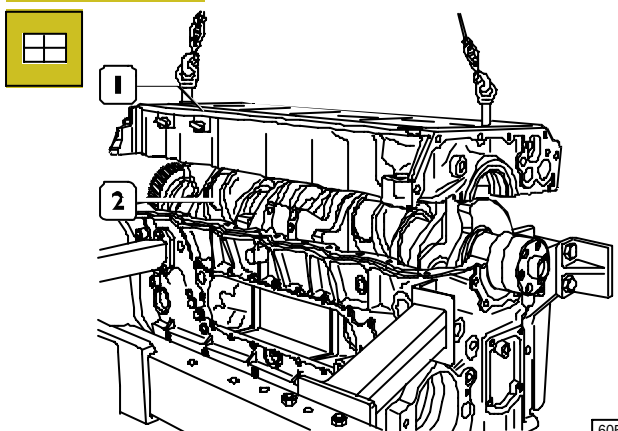

60559

Mount the lower crankcase (1) using appropriate tackle and hooks.

Figure 173

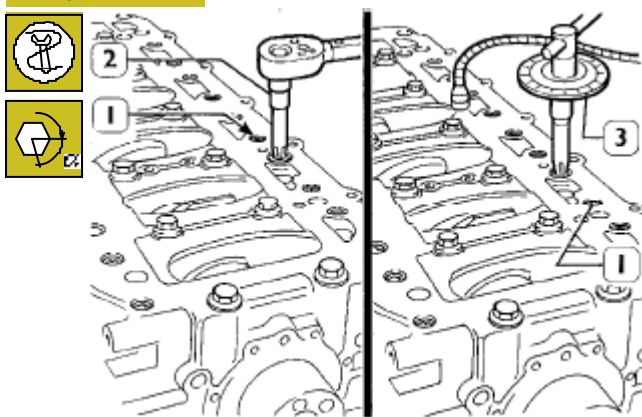


47581

NOTE Use new screws whenever removing the bed-plate.

By torque wrench (2), tighten (1) outer Hex splined screws at 30 Nm torque observing the schemes at next page.

Figure 174

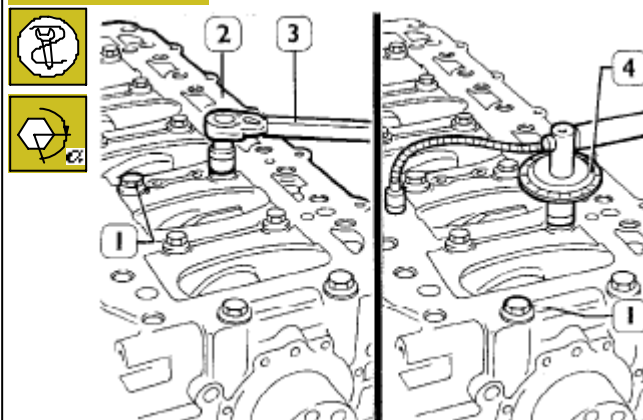


47579

Using a torque wrench (3), tighten the inside screws (1) to a torque of 120 Nm. Then tighten them to an angle of 60° and 55° with tool 99395216 (4) with another two phases. Regrind the outside screws (1, Figure 173) with closure to an angle of 60° using tool 99395216 (4).

Aquila Trucks Centres


Figure 175

FRONT SIDE

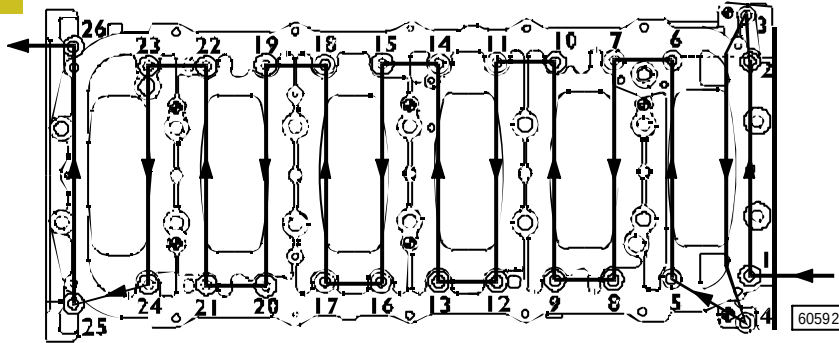First phase:
pre-tightening
outside screws


30 Nm

FRONT SIDE

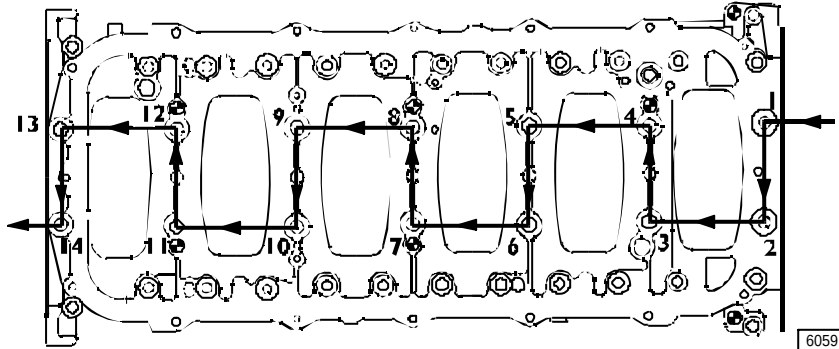Second phase:
pre-tightening
inside screws


120 Nm

FRONT SIDE

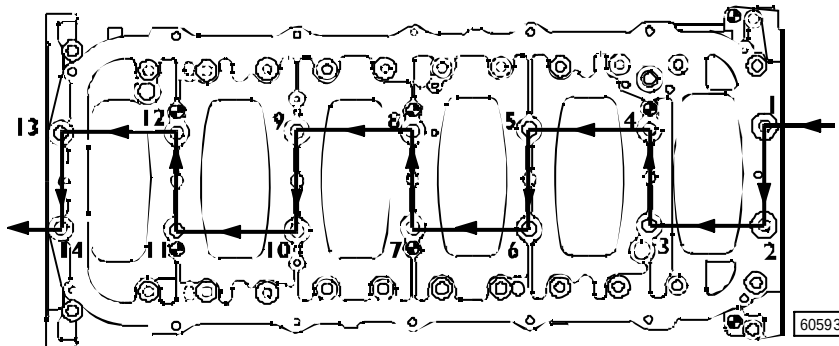Third phase:
closing inside
screws to angle


60°

FRONT SIDE

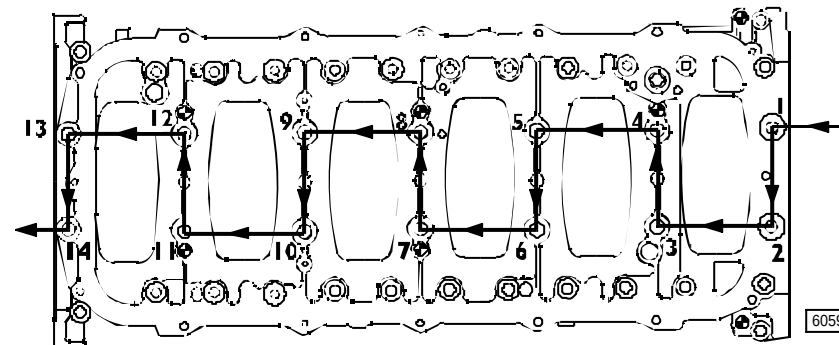Fourth phase:
closing inside
screws to angle

55°

FRONT SIDE

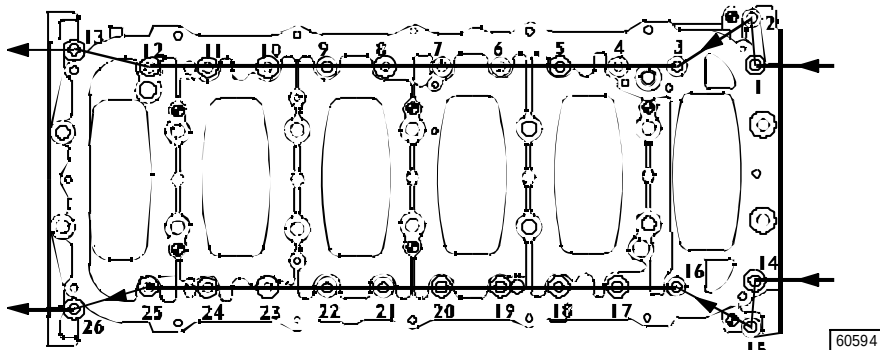Fifth phase:
closing outside
screws to angle


60°

DIAGRAM OF TIGHTENING SEQUENCE OF LOWER CRANKCASE FIXING SCREWS

Aquila Trucks Centres

Fitting connecting rod - piston assemblies in cylinder liners

Figure 176

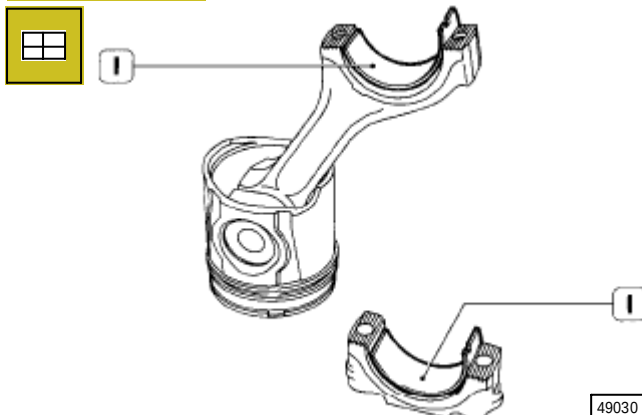


NOTE Not finding it necessary to replace the connecting rod bearings, you need to fit them back in exactly the same sequence and position as in removal. Choose main bearings, if they are to be replaced, based on selection described in chapter "Selecting main and big end bearings".

Lubricate the bearing shells (1 and 3) and fit them on the connecting rod (2) and on the cap (4).

NOTE Do not make any adjustment on the bearing shells.

Figure 178

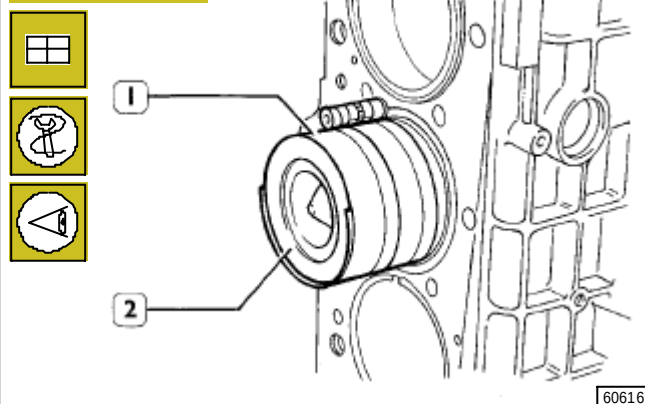


Turn the cylinder block, setting it upright. Lubricate the pistons, piston rings and inside the cylinder liners. With the aid of the clamp 99360605 (1) mount the connecting rod – piston assemblies (2) in the cylinder liners according to Figure 177. Check that:

- The number of each connecting rod corresponds to the cap coupling number.
- The symbol (2, Figure 177) punched on the top of the pistons faces the engine flywheel or the recess in the piston skirt tallies with the position of the oil nozzles.

NOTE The pistons are supplied as spares in class A and can also be fitted in class B cylinder liners.


Figure 177

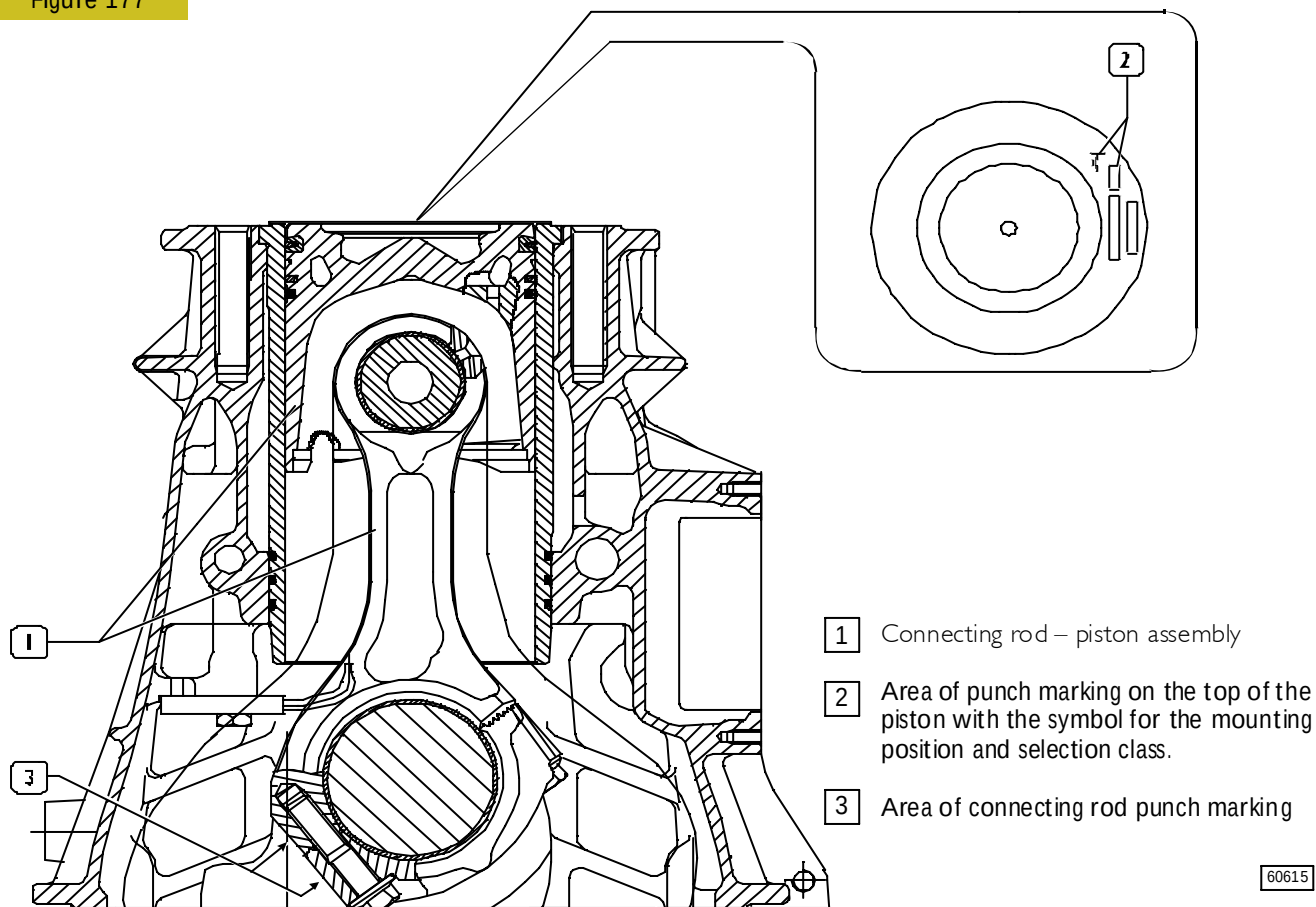

Aquila Trucks Centres

Fitting the cylinder head

Figure 179

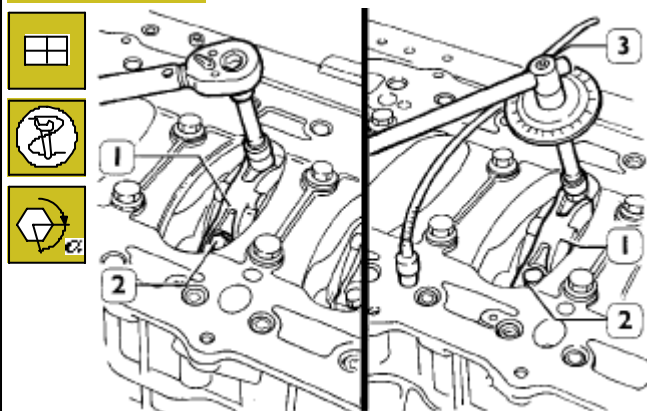


47594

NOTE Before reusing the screws (2), measure the diameter of the thread; it must be no less than 13.4 mm; if it is, change the screw. Lubricate the thread of the screws with engine oil before assembly.

Connect the connecting rods to the relevant pins of the crankshaft, mount the connecting rod caps (1) together with the bearing shells. Tighten the screws (2) fixing the connecting rod caps to a torque of 60 Nm (6 kgm). Using tool 99395216 (3), tighten the screws further with an angle of 60°.


Figure 180

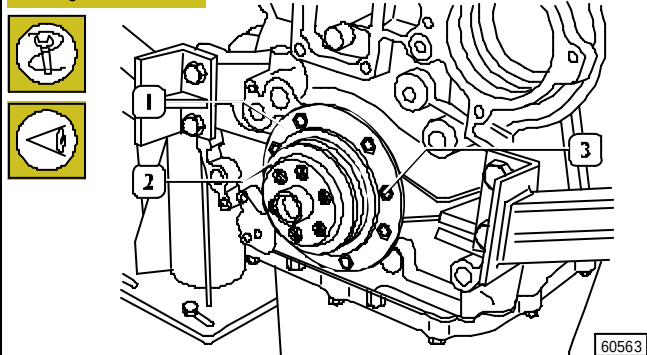

60563

Using the centring ring 99396035 (2), check the exact position of the cover (1). If it is wrong, proceed accordingly and lock the screws (3).


Figure 181

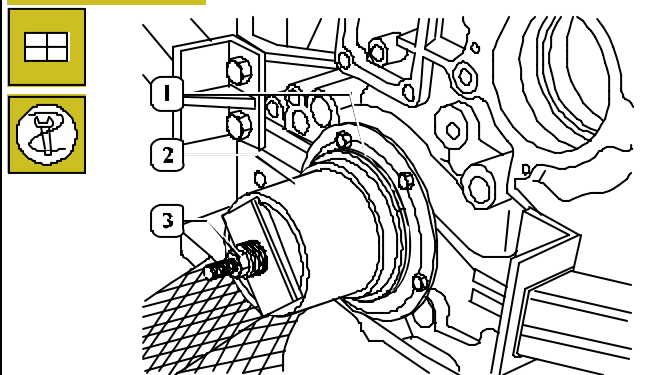

60564

Key on the gasket (1), mount the key 99346250 (2) and, screwing down the nut (3), drive in the gasket (1).

Figure 182

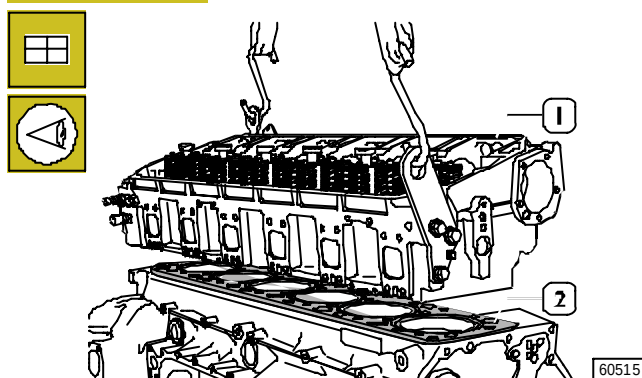

60515


Check that the pistons 1-6 are exactly at the T.D.C. Put the gasket (2) on the crankcase.

NOTE Use new screws whenever removing the cylinder head.

Mount the cylinder head (1) and tighten the screws as shown in Figs. 183, 184 and 185.

NOTE Lubricate the thread of the screws with engine oil before assembly.


Figure 183

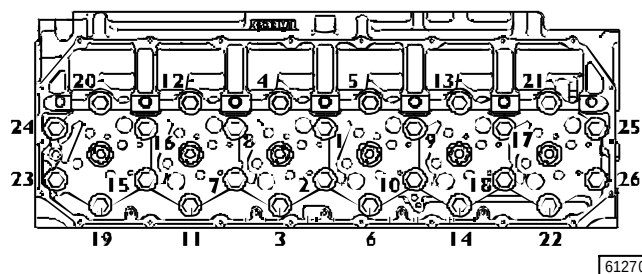

61270

Diagram of the tightening sequence of the screws fixing the cylinder head.

Figure 184

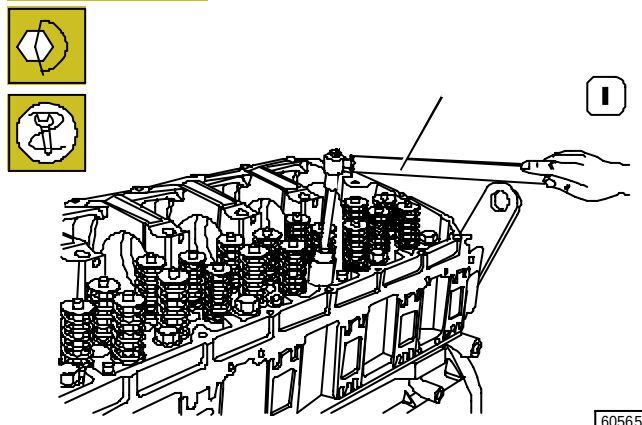


60565

- Pre-tightening with the torque wrench (1):
1st phase: 60 Nm (6 kgm).
2nd phase: 120 Nm (12 kgm).


Aquila Trucks Centres

Figure 185

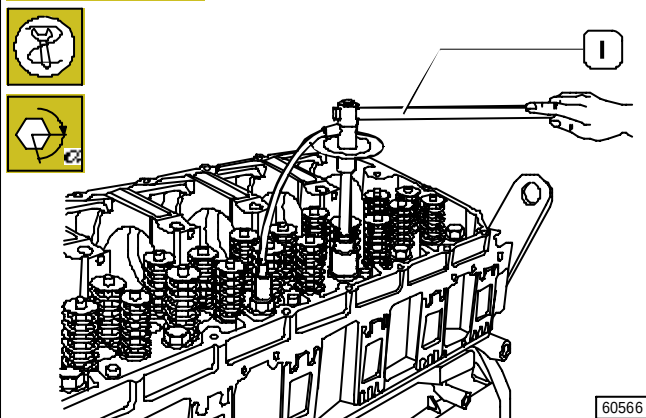

- Closing to angle with tool 99395216 (1):
3rd phase: angle of 90°
4th phase: angle of 65°.


Figure 186

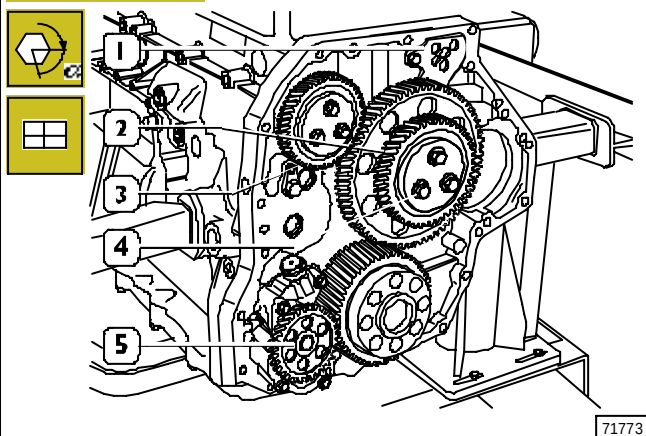

Mount the oil pump (5), the middle gears (2) together with the link rod (1) and the PTO driving gear (3). Tighten the screws (4) to the required torque.

Fitting flywheel housing


Figure 187

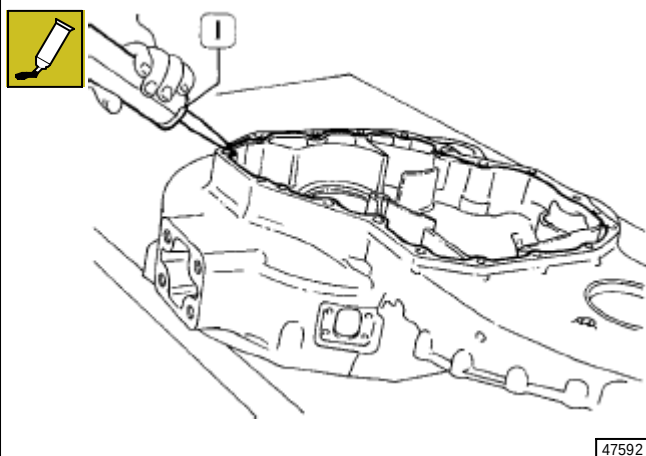

Apply LOCTITE 5970 IVECO No. 2995644 silicone on the flywheel using appropriate tools (1) as shown in the figure.

NOTE Mount the gear housing within 10 min. of applying the sealant.


Figure 188

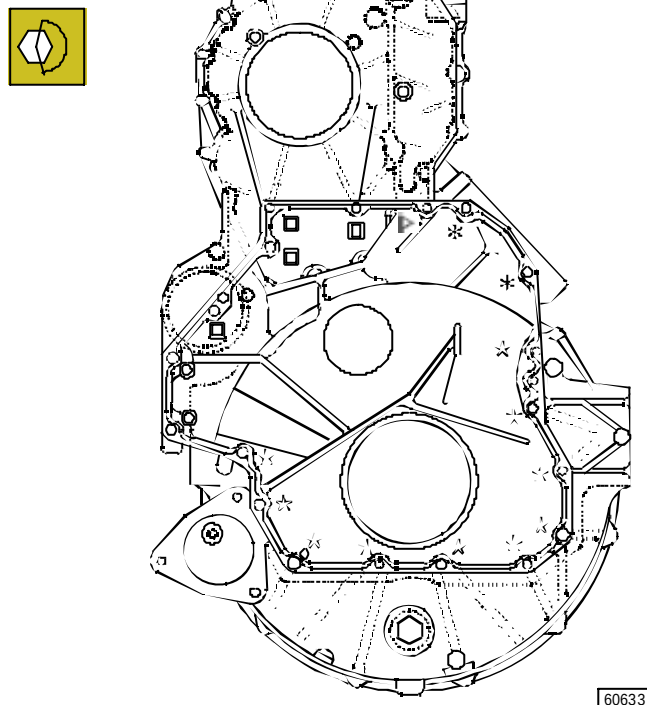

Using a torque wrench, tighten the highlighted screws with the following sequence and torque:

★	10 screws M12 x 1.75 x 100	56 to 70 Nm
⊗	2 screws M12 x 1.75 x 70	56 to 70 Nm
□	4 screws M12 x 1.75 x 35	56 to 70 Nm
△	1 screw M12 x 1.75 x 120	56 to 70 Nm
:	2 screws M12 x 1.75 x 193	56 to 70 Nm

Figure 189

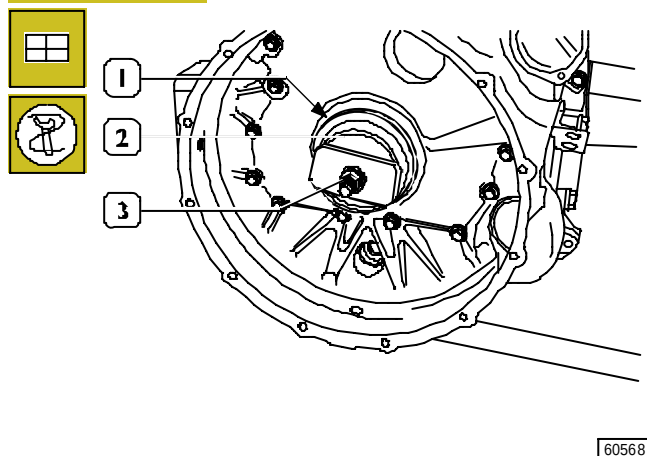


Key on the gasket (1), fit the key 99346251 (2) and, screwing down the nut (3), drive in the gasket.

Aquila Trucks Centres

540850 ENGINE FLYWHEEL

Fitting engine flywheel

Figure 190

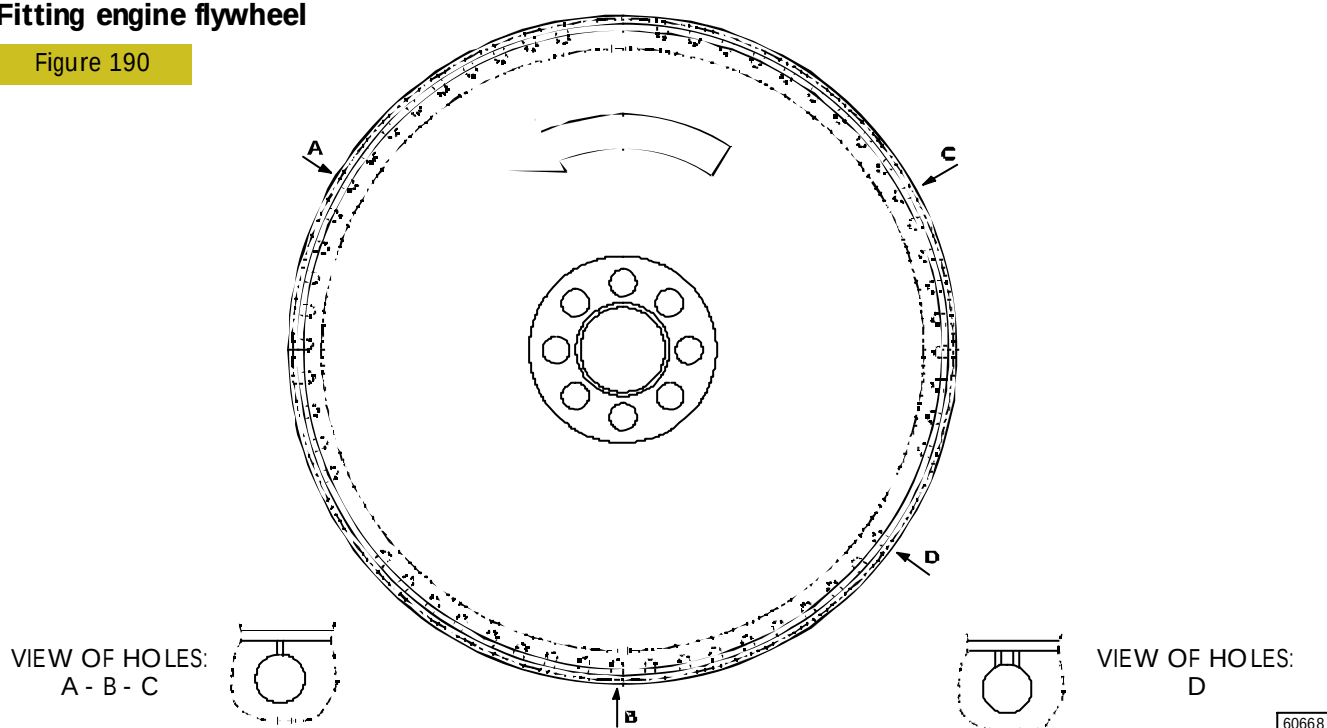


DETAIL OF PUNCH MARKS ON ENGINE FLYWHEEL FOR PISTON POSITIONS

A. Hole on flywheel with one reference mark, corresponding to the TDC of pistons 3-4. - B. Hole on flywheel with one reference mark, corresponding to the TDC of pistons 1-6. - C. Hole on flywheel with one reference mark, corresponding to the TDC of pistons 2-5. - D. Hole on flywheel with two reference marks, position corresponding to 54°.

NOTE If the teeth of the ring gear mounted on the engine flywheel, for starting the engine, are very damaged, replace the ring gear. It must be fitted after heating the ring gear to a temperature of approx. 200°C.

Figure 191

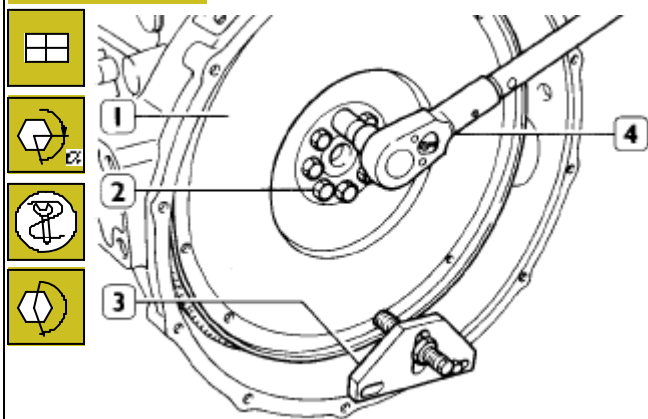


NOTE The crankshaft has a locating peg that has to couple with the relevant seat on the engine flywheel.

Position the flywheel (1) on the crankshaft, lubricate the thread of the screws (2) with engine oil and screw them down. Lock rotation with tool 99360351 (3). Lock the screws (2) in three phases.

First phase: pre-tightening with torque wrench (4) to a torque of 120 Nm (12 kgm).

Figure 192

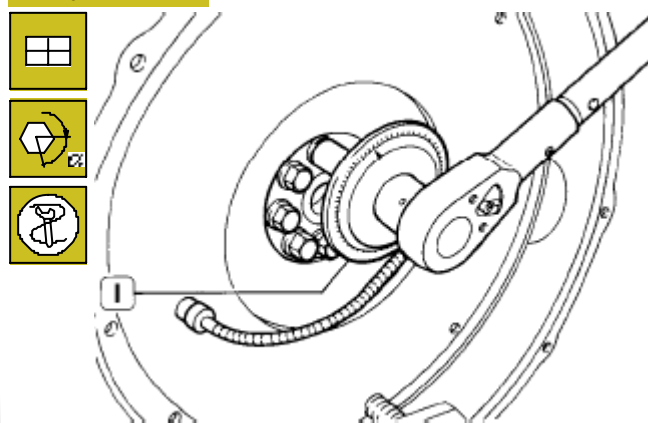


Second phase: closing to angle of 90° with tool 99395216 (1).

Aquila Trucks Centres

Fitting camshaft

Figure 193

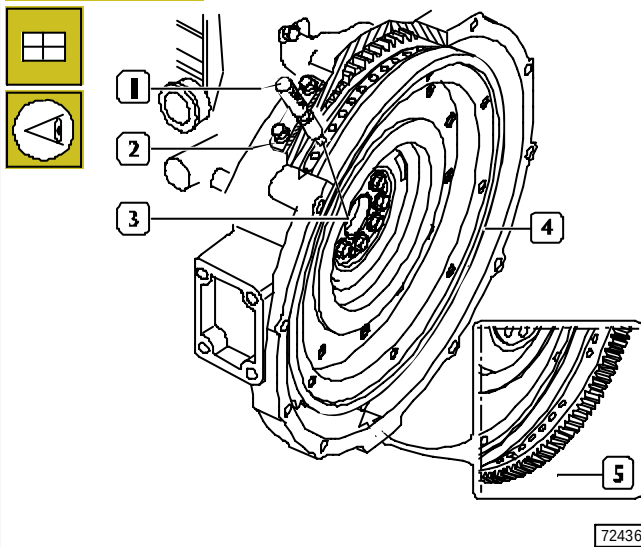

72436

Position the crankshaft with the pistons 1 and 6 at the top dead centre (T.D.C.).


This situation occurs when:

1. The hole with reference mark (5) of the engine flywheel (4) can be seen through the inspection window.
2. The tool 99360612 (1), through the seat (2) of the engine speed sensor, enters the hole (3) in the engine flywheel (4).

If this condition does not occur, turn the engine flywheel (4) appropriately.

Remove the tool 99360612 (1).

Figure 194

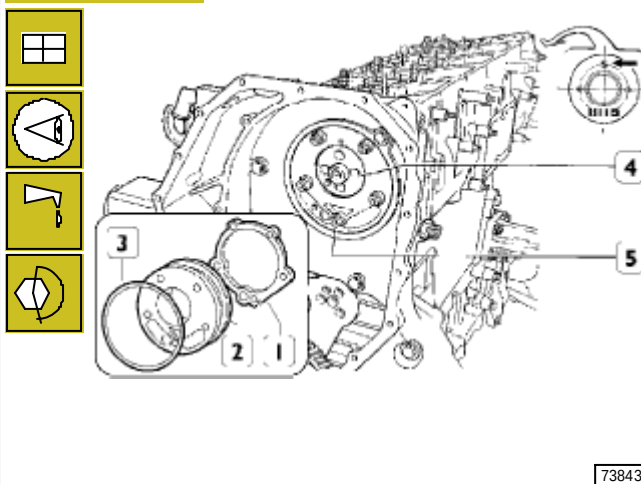


73843

Fit the camshaft (4), positioning it observing the reference marks (→) as shown in the figure.

Lubricate the seal (3) and fit it on the shoulder plate (2).

Mount the shoulder plate (2) with the sheet metal gasket (1) and tighten the screws (5) to the required torque.


Figure 195

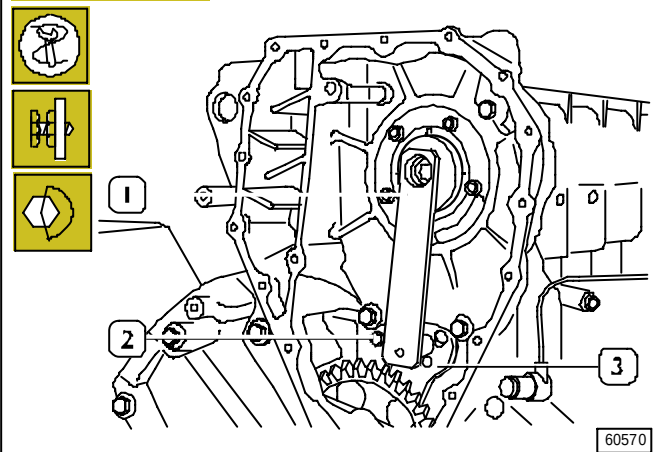

60570

- Apply the gauge 99395219 (1). Check and adjust the position of the link rod (3) for the idle gear. Lock the screw (2) to the required torque.

Figure 196

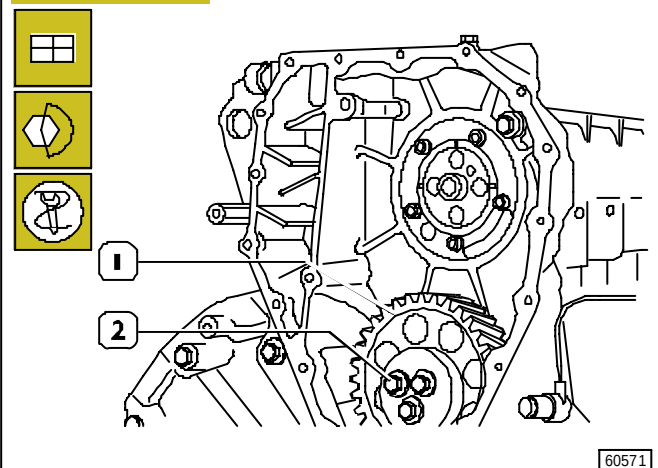


60571

- Fit the idle gear (1) back on and lock the screws (2) to the required torque.

Aquila Trucks Centres

Figure 197

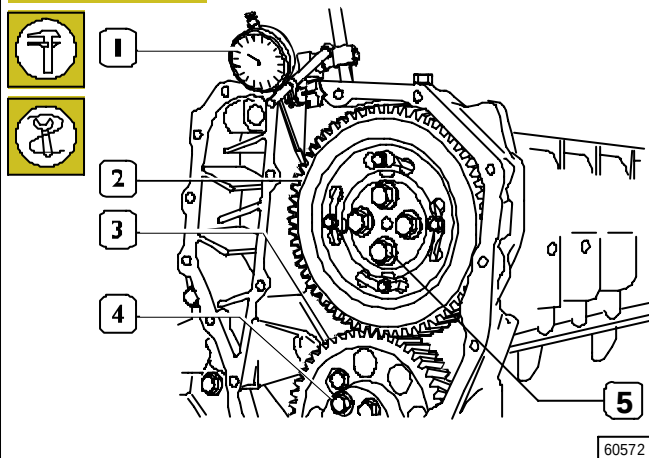


Position the gear (2) on the camshaft so that the 4 slots are centred with the holes for fixing the camshaft, without fully locking the screws (5).

Using the dial gauge with a magnetic base (1), check that the clearance between the gears (2 and 3) is 0.074 – 0.195 mm; if this is not so, adjust the clearance as follows:

- Loosen the screws (4) fixing the idle gear (3).
- Loosen the screw (2, Figure 195) fixing the link rod. Shift the link rod (3, Figure 195) to obtain the required clearance.
- Lock the screw (2, Figure 195) fixing the link rod and screws (4, Figure 197) fixing the idle gear to the required torque.


Fitting pump-injectors

Figure 198

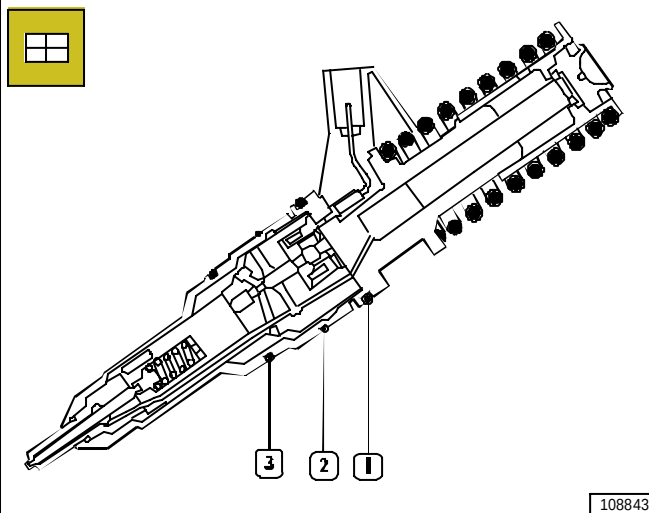

Fit the seals (1) (2) (3) on the injectors.

Figure 199

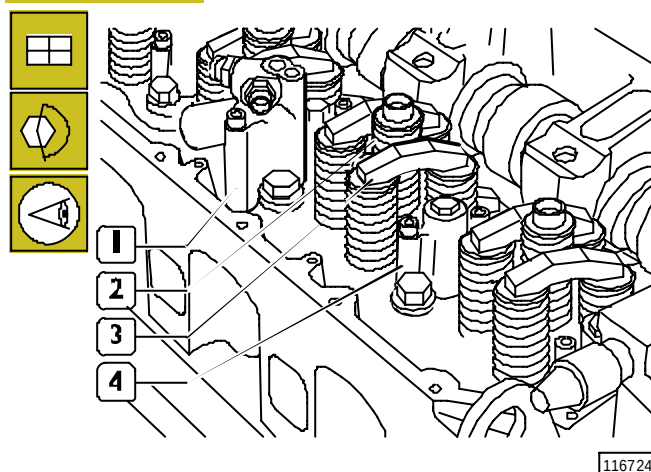


Mount:

- The injectors (2) and, using a torque wrench, lock the bracket fixing screws to a torque of 30 ÷ 35 Nm.
- The exhaust brake cylinders (1) and (4) and, using a torque wrench, fix them to a torque of 19 Nm.
- The crosspieces (3) on the valve stem, all with the largest hole on the same side.

Fitting rocker-arm shaft assembly

NOTE Before refitting the rocker-arm shaft assembly, make sure that all the adjustment screws have been fully unscrewed.

Figure 200

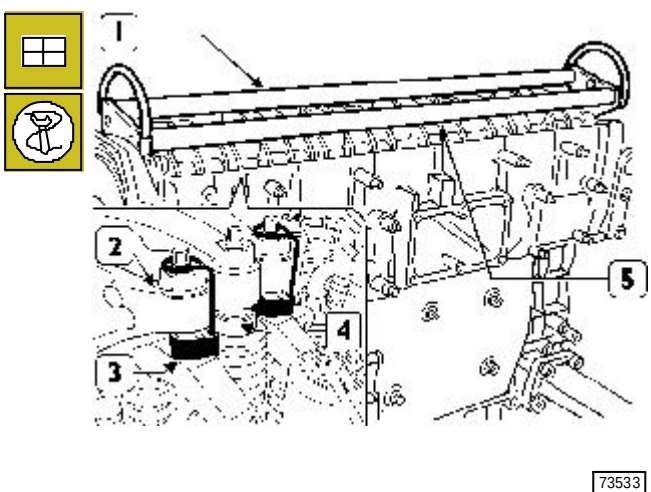


Using tool 99360144 (3), fasten the blocks (4) to the rocker arms (2).

Apply the tool 99360553 (1) to the rocker arm shaft (5) and mount the shaft on the cylinder head.

Aquila Trucks Centres


Figure 201

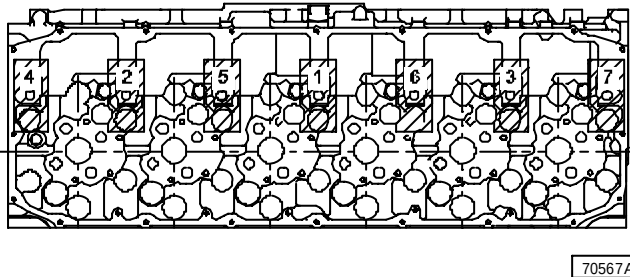

SCHEME OF SCREW TIGHTENING SEQUENCE SECURING ROCKER ARMS

Screw screws (1 - 2 - 3) until rocker arms are brought to contact relating seats on cylinder head, tighten the screws according to sequence indicated in figure operating in two steps as indicated in successive figure.


Figure 202

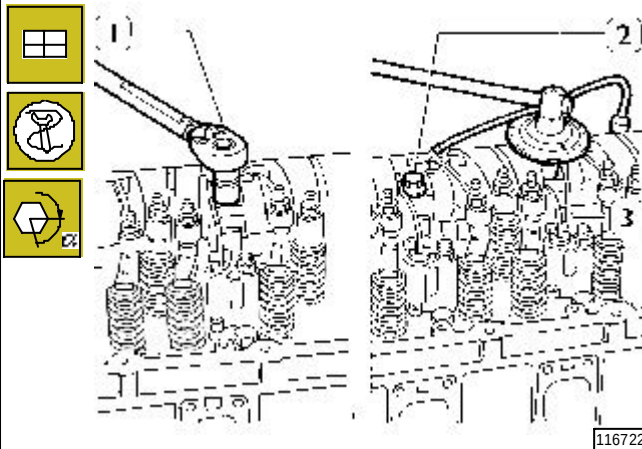

Lock the screws (2) fixing the rocker-arm shaft as follows:


- 1st phase: tightening to a torque of 80 Nm (8 kgm) with the torque wrench (1).
- 2nd phase: closing with an angle of 60° using the tool 99395216 (3).

Figure 203

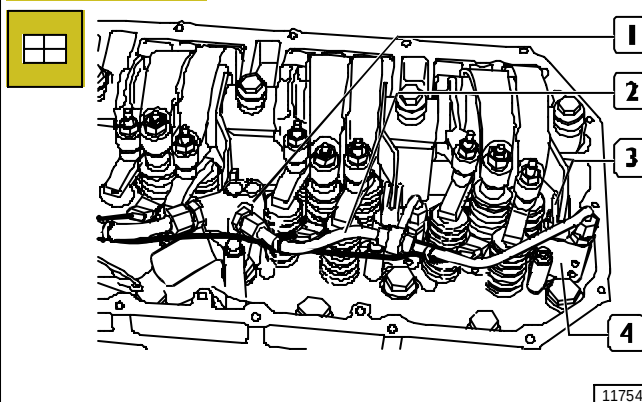

- Mount the engine brake lever retaining springs (3).
- Connect the pipe (2) to the engine brake cylinders (4) and to the cylinder with the engine brake solenoid valve (1).


Figure 204

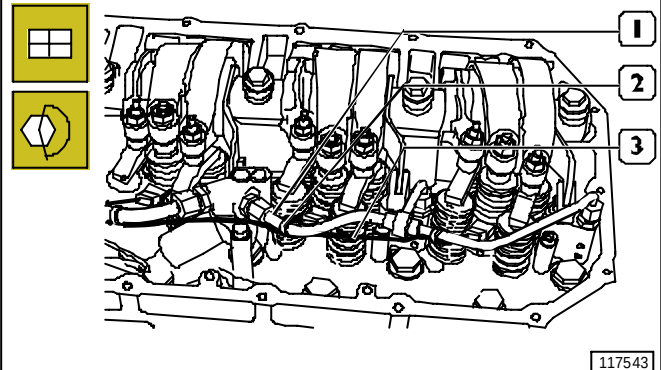

Use strips (2) to fix cable (3) to pipe (1) corresponding to white color notches machined both on cable and on pipe.

Camshaft timing

Figure 205

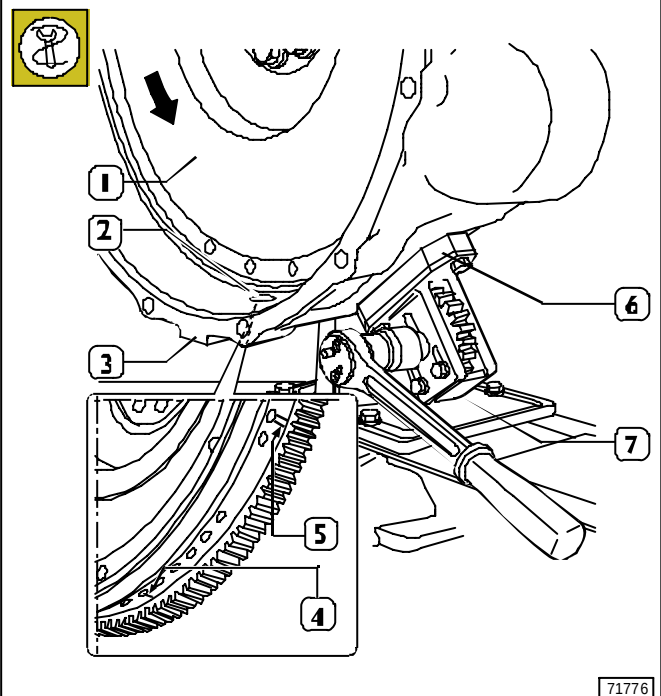

Apply tool 99360321 (7) and spacer (6) to gears housing (3).


NOTE The arrow shows the direction of rotation of the engine when running.

Using the above-mentioned tool, turn the flywheel (1) in the direction of rotation of the engine so as to take the piston of cylinder no.1 to approximately the T.D.C. in the phase of combustion.

This condition occurs when the hole with one reference mark (4), after the hole with two reference marks (5) on the engine flywheel (1), can be seen through the inspection window (2).

Aquila Trucks Centres

Figure 206

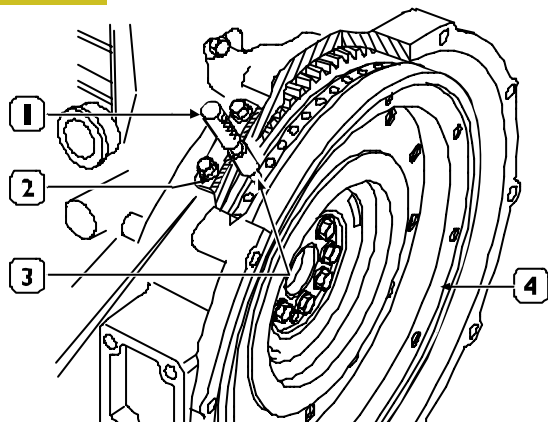


71774

The exact position of piston no.1 at the T.D.C. is obtained when in the above-described conditions the tool 99360612 (1) goes through the seat (2) of the engine speed sensor into the hole (3) in the flywheel (4).

If this is not the case, turn and adjust the flywheel (4) appropriately.

Remove the tool 99360612 (1).

Figure 207

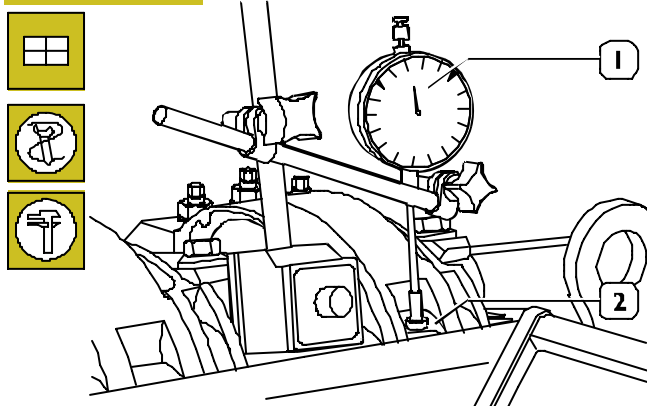

106535

Set the dial gauge with the magnetic stand (1) with the rod (flat based) on the roller (2) of the rocker arm that governs the injector of cylinder no.1 and pre-load it by 6 mm.


NOTE During the measurement, the dial gauge rod must always be at right angles to the engine centre line and NOT to the head surface.

With tool 99360321 (6, Figure 205), turn the crankshaft clockwise until the pointer of the dial gauge reaches the minimum value beyond which it can no longer fall.

Reset the dial gauge.

Turn the flywheel anticlockwise until the dial gauge gives a reading for the lift of the cam of the camshaft of 5.33 ± 0.05 mm.

Figure 208

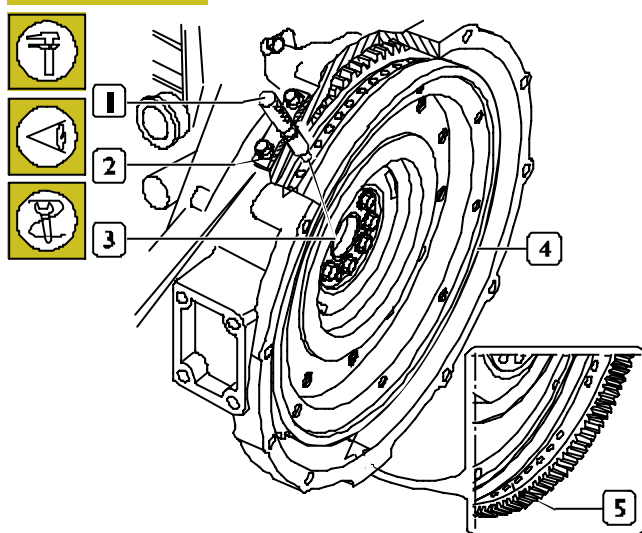


77259

The camshaft is in step if at the cam lift values of 5.33 ± 0.05 mm there are the following conditions:

- 1) a notch (5) can be seen through the inspection window;
- 2) the tool 99360612 (1) through the seat (2) of the engine speed sensor goes into the hole (3) in the engine flywheel (4).

Figure 209

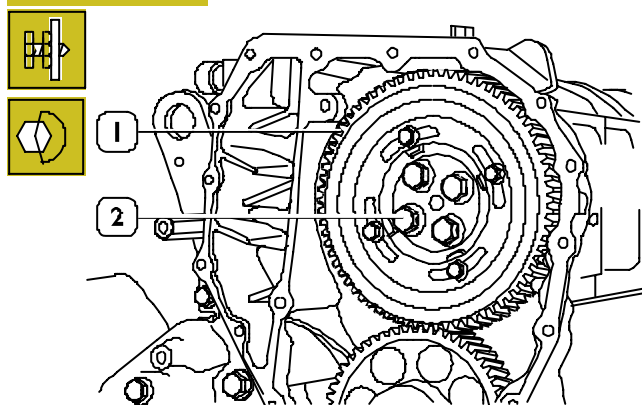


60575

If you do not obtain the conditions illustrated in Figure 208 and described in points 1 and 2, proceed as follows:

- 1) loosen the screws (2) securing the gear (1) to the camshaft and utilize the slots (1) on the gear (2, Figure 210);
- 2) turn the flywheel appropriately so as to bring about the conditions described in points 1 and 2 Figure 208, it being understood that the cam lift must not change at all;
- 3) lock the screws (2) and repeat the check as described above;
- 4) tighten the screws (2) to the required torque.

Aquila Trucks Centres


Figure 210

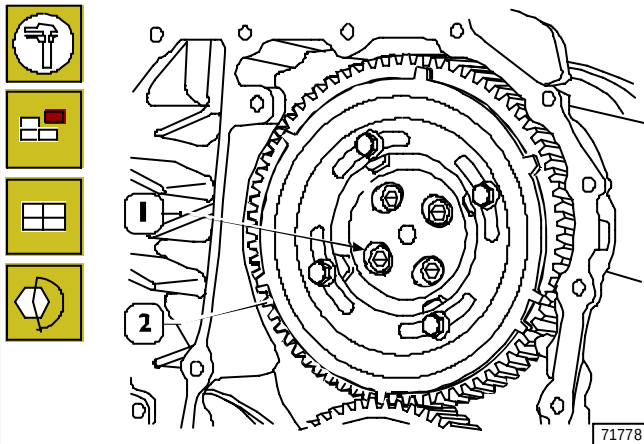

When the adjustment with the slots (1) is not enough to make up the phase difference and the camshaft turns because it becomes integral with the gear (2); as a result, the reference value of the cam lift varies, in this situation it is necessary to proceed as follows:

- 1) lock the screws (2, Figure 209) and turn the engine flywheel clockwise by approx. 1/2 turn;
- 2) turn the flywheel anticlockwise until the dial gauge gives a reading of the lift of the cam of the camshaft of 5.33 ± 0.05 mm;
- 3) take out the screws (2, Figure 209) and remove the gear (2) from the camshaft.

Figure 211

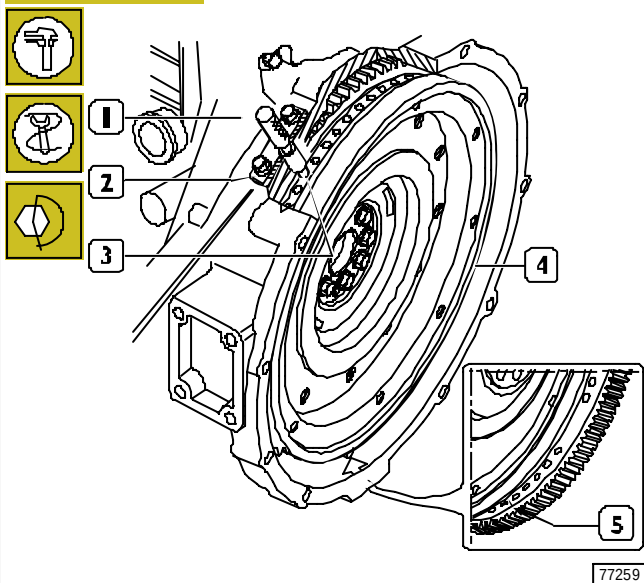

Turn the flywheel (4) again to bring about the following conditions:


- a notch (5) can be seen through the inspection window;
- the tool 99360612 (1) inserted in the hole (3) in the flywheel (4) through the seat (2) of the engine speed sensor.

Mount the gear (2, Figure 210) with the 4 slots (1, Figure 210) centred with the fixing holes of the camshaft, locking the relevant screws to the required tightening torque. Check the timing of the shaft by first turning the flywheel clockwise to discharge the cam completely and then turn the flywheel anticlockwise until the dial gauge gives a reading of 5.33 ± 0.05 mm.

Check the timing conditions described in Figure 208.

Phonic wheel timing

Figure 212

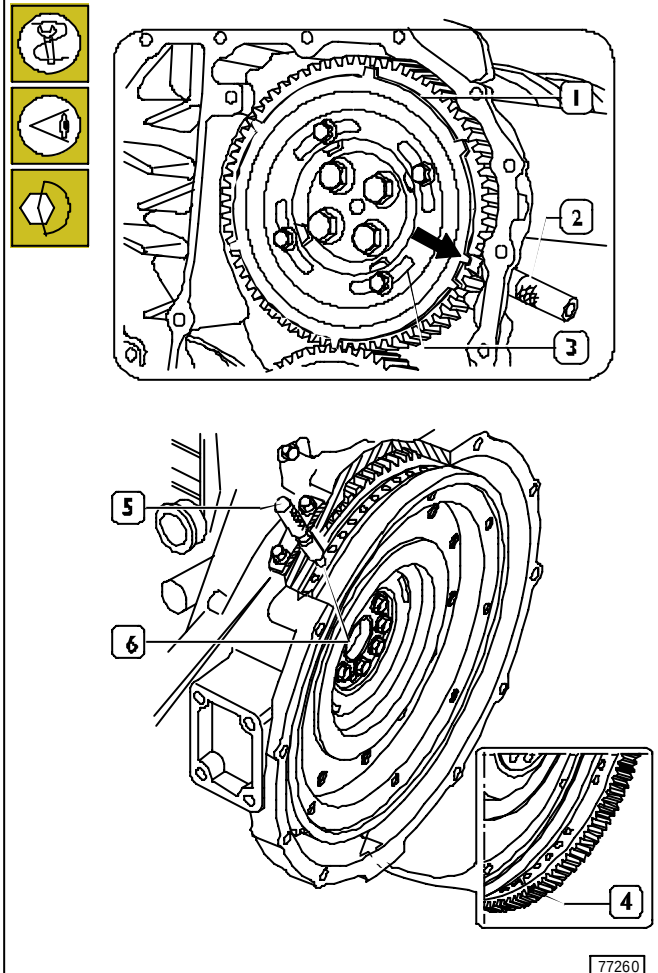

Turn the crankshaft by taking the piston of cylinder no. 1 into the compression phase at T.D.C.; turn the flywheel in the opposite direction to the normal direction of rotation by approximately 1/4 of a turn.

Again turn the flywheel in its normal direction of rotation until you see the hole marked with the double notch (4) through the inspection hole under the flywheel housing. Insert tool 99360612 (5) into the seat of the flywheel sensor (6).


Insert the tool 99360613 (2), via the seat of the phase sensor, onto the tooth (T) obtained on the phonic wheel.

Should inserting the tool (2) prove difficult, loosen the screws (3) and adjust the phonic wheel (1) appropriately so that the tool (2) gets positioned on the tooth correctly. Go ahead and tighten the screws (3).

Aquila Trucks Centres

Adjust intake and exhaust rocker arm clearance, and pump injector preload

Figure 213

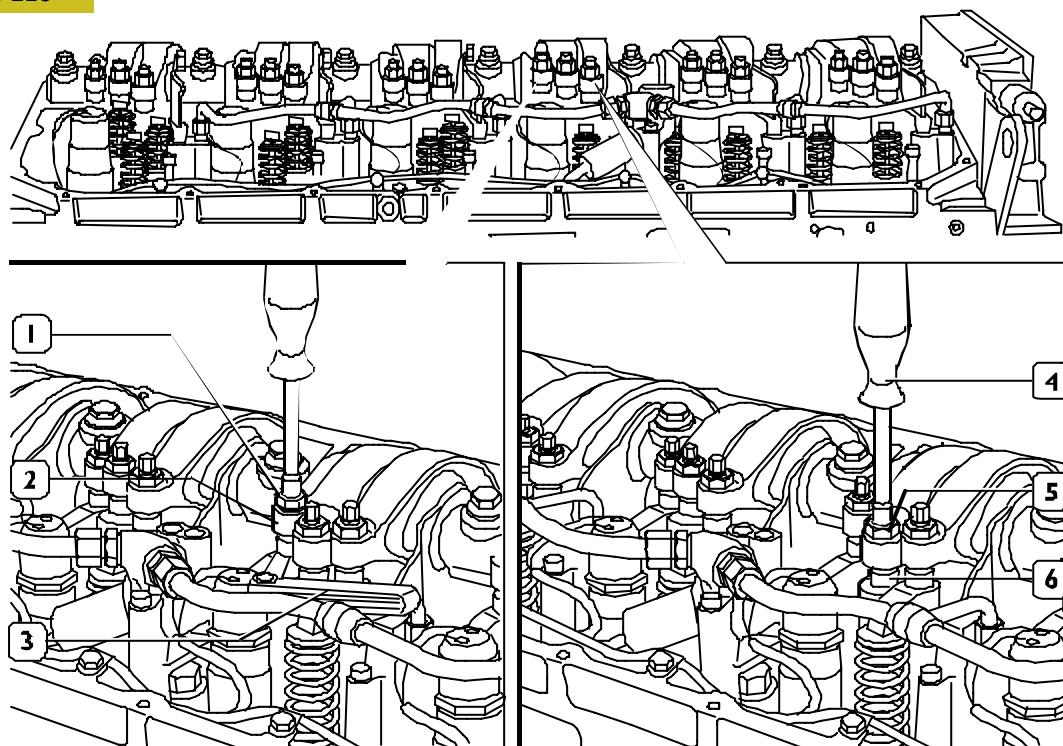

60577

ADJUSTING INTAKE, EXHAUST AND INJECTION ROCKER ARMS

The adjustment of the clearance between the rocker arms and the crosspieces governing the intake and exhaust valves and the adjustment of the pre-load of the pump injector governing rocker arms has to be done very conscientiously.

Take the cylinder whose clearance you want to adjust into the combustion phase. The valves of this cylinder are closed while they balance those of the symmetric cylinder.

The symmetric correspondence of the cylinders is 1 - 6, 2 - 5 and 3 - 4.

To perform these operations correctly, proceed as described below and as illustrated in the table.

Adjusting clearance between rocker arms and crosspieces governing the intake and exhaust valves

- Using a box wrench, loosen the nut (1) locking the adjustment screw.
- Insert the strip of feeler gauge (3) corresponding to the working clearance (page 133);
- Use a suitable wrench to screw or unscrew rocker arm (2) adjusting screw.
- Check that the blade of the feeler gauge (3) can slide with a light amount of friction.
- Lock the nut (1) holding the adjustment screw still.

Pre-load of pump injector governing rocker arms

- Using a box wrench, loosen the nut locking the adjustment screw of the rocker arms (5) governing the pump injector (6).

- With a suitable wrench (4), screw down the adjustment screw to take the pumping element to its limit.
- Tighten the adjustment screw with a torque wrench to a torque of 5 Nm (0.5 kgm).
- Unscrew the adjustment screw by $1/2 \div 3/4$ of a turn.
- Tighten the locking nut to a torque of 39 Nm (3.9 kgm).


FIRING SEQUENCE 1 - 4 - 2 - 6 - 3 - 5

Starting and clockwise rotation	Balance valves of cylinder no.	Adjust clearance of valves of cylinder no.	Adjust pre-load of injectors of cylinder no.
1 and 6 at TDC	6	1	5
120°	3	4	1
120°	5	2	4
120°	1	6	2
120°	4	3	6
120°	2	5	3

NOTE To perform the above adjustments correctly, it is mandatory to follow the sequence given in the table, checking the position at each phase of rotation with the pin 99360612 to be inserted in hole identified by a notch on flywheel, corresponding to TPD (see detail figure 190).

Aquila Trucks Centres

Figure 214

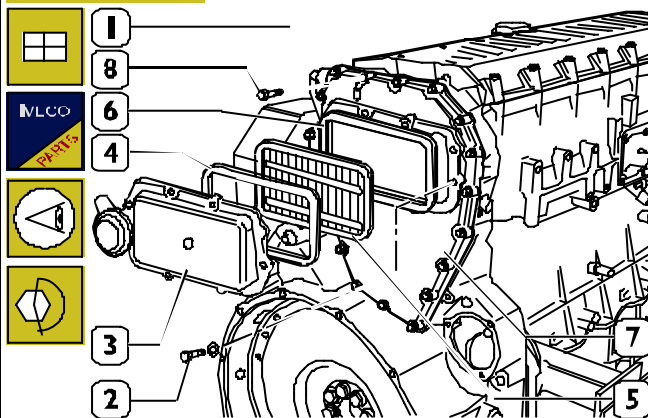

Fit the rocker cover (1).

Fit the blow-by case (7) and its gasket and then tighten the screws (8) to the prescribed torque.


Install the filter (5) and the gaskets (4 and 6).

NOTE The filter (5) operation is unidirectional, therefore it must be assembled with the two sight supports as illustrated in the figure.

Fit the cover (3) and tighten the fastening screws (2) to the prescribed torque.

NOTE Apply silicone LOCTITE 5970 (IVECO No. 2995644) on the blow-by case (7) surface of engines fitted with P.T.O. according to the procedure described in the following figure.


Figure 215

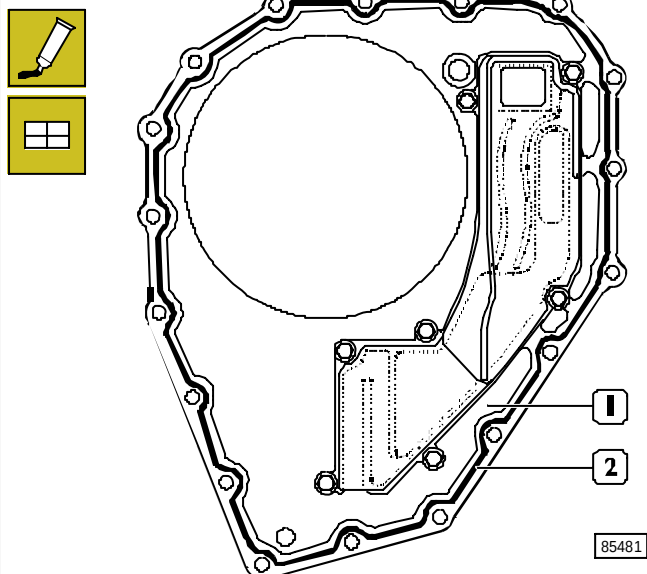

Apply silicone LOCTITE 5970 (IVECO No. 2995644) on the blow-by case and form a string (2) of $\varnothing 1,5 \pm 0,02$ as shown in the figure.

NOTE Fit the blow-by case (1) within 10' from sealer application.

Figure 216

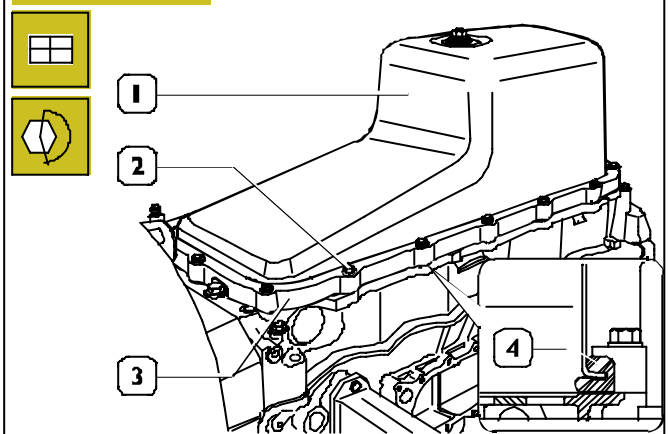

Turn engine and mount oil rose pipe.

Arrange gasket (4) on oil sump (1), position frame (3) and mount the sump on engine block screwing up screws (2) at prescribed torque:

Completing Engine Assembly

Complete the engine by fitting or hooking up the following parts:


- power take-off (P.T.O., if present) and relating pipes;
- fuel pump;
- support complete with fuel filter and pipes;
- EDC central unit;
- intake manifold;
- preheating resistance;
- heat exchanger;
- oil filters, lubricating the gasket;
- exhaust manifold;
- turbocompressor and relating water and oil pipes;
- pulley and damping flywheel;
- thermostat assembly;
- belt tensioner, water pump, alternator;
- electromagnetic joint;
- belt tensioner, if present, air-conditioner compressor;
- starter;
- oil level rod;
- electrical connections and sensors.

NOTE The fittings of the cooling water and lubricating oil pipes of the turbocharger have to be tightened to a torque of:

- 35 ± 5 Nm, water pipe fittings;
- 55 ± 5 Nm, oil pipe female fitting;
- 20-25 Nm, oil pipe male fitting.

Aquila Trucks Centres


Figure 217

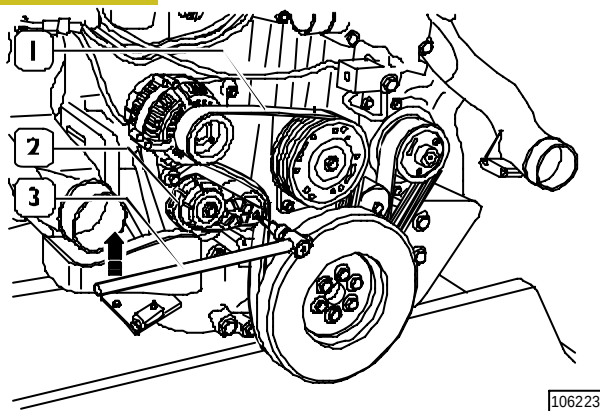

- driving belt.

To mount belt (1), belt tensioner (2) has to be operated by proper tooling (3) according to the direction indicated by the arrow in Figure.

Figure 218

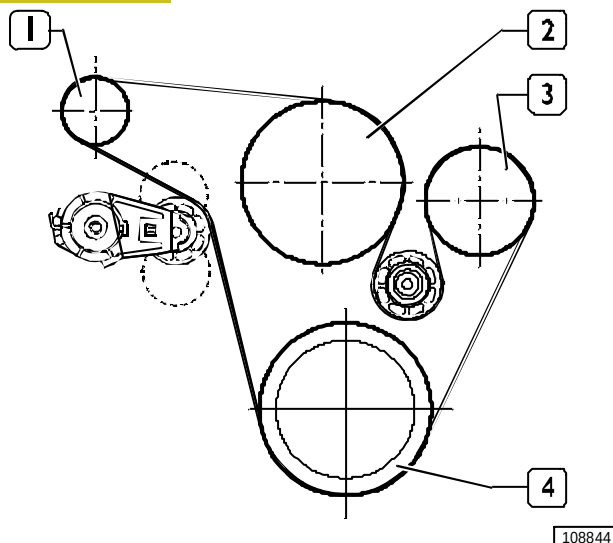

ASSEMBLY DIAGRAM OF FAN – WATER PUMP –
ALTERNATOR DRIVE BELT

1. Alternator – 2. Electromagnetic coupling –
3. Water pump – 4. Crankshaft


NOTE Belt tensioner is of automatic type; therefore, further adjusting is not provided after mounting.

- refuel engine with provided oil quantity;
- dismount engine from rotary stand and take off brackets (99361036) securing the engine.

Mount:

- oil pressure regulation valve;
- engine left support;
- air compressor complete with hydraulic guide pump;
- sound deadening guard;
- pipes.
- if present, climate control system compressor driving belt similarly to belt (1, Figure 217);

Figure 219

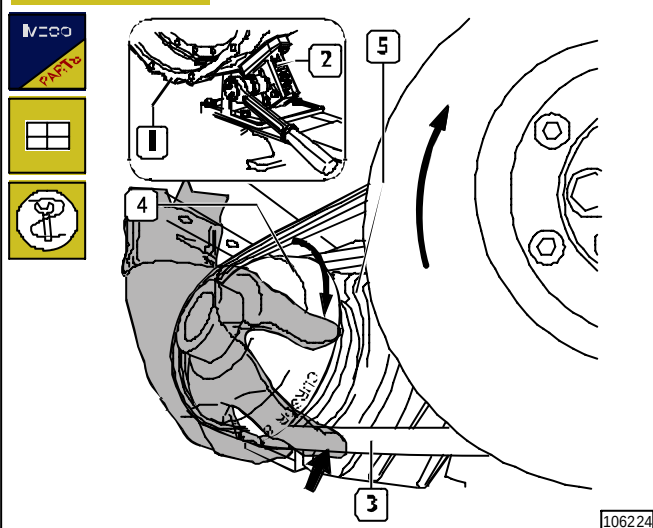

NOTE In the case of engines with climate control system compressor spring driving belt, for mounting the belt, tool 99360192 (4) must be used. Different methods may cause tensions impairing spring belt.

Apply tool 99360321 (2) provided with spacer 99360325 to gears box (1).

Mount spring belt (3) on driving shaft pulley, mount chock 99360192 (4) on compressor pulley (5) for climate control system. Position spring belt (3) in the opening of tool 99360192 marked with "cursor 10/13".

By tool 99360321 (2), rotate driving shaft according to the direction of the arrow (→) until spring belt (3) is correctly positioned on compressor pulley (5).


NOTE While operating, keep tool 99360192 (4) in contact to pulley and at the same time guide spring belt (3) in order to prevent it from twisting.

NOTE Spring belt must be replaced by a new one after every dismounting operation.

NOTE Replacing spring belt with engine on the vehicle is from engine opening after tilting the cab.

Aquila Trucks Centres

Figure 220

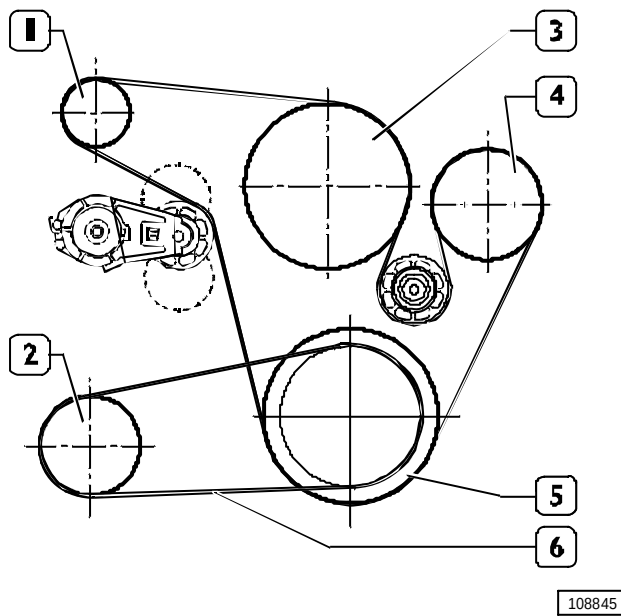

COMPRESSOR CONTROL BELT
ASSEMBLY DIAGRAM

1. Crankshaft - 2. Air conditioner compressor -
3. Electromagnetic coupling - 4. Water pump -
5. Crankshaft - 6. Spring belt.

Aquila Trucks Centres


Aquila Trucks Centres

5430 LUBRICATION

Figure 221

Engine lubrication is obtained with a gear pump driven by the crankshaft via gears.

A heat exchanger governs the temperature of the lubricating oil. It houses two oil filters, indicator sensors and safety valves.

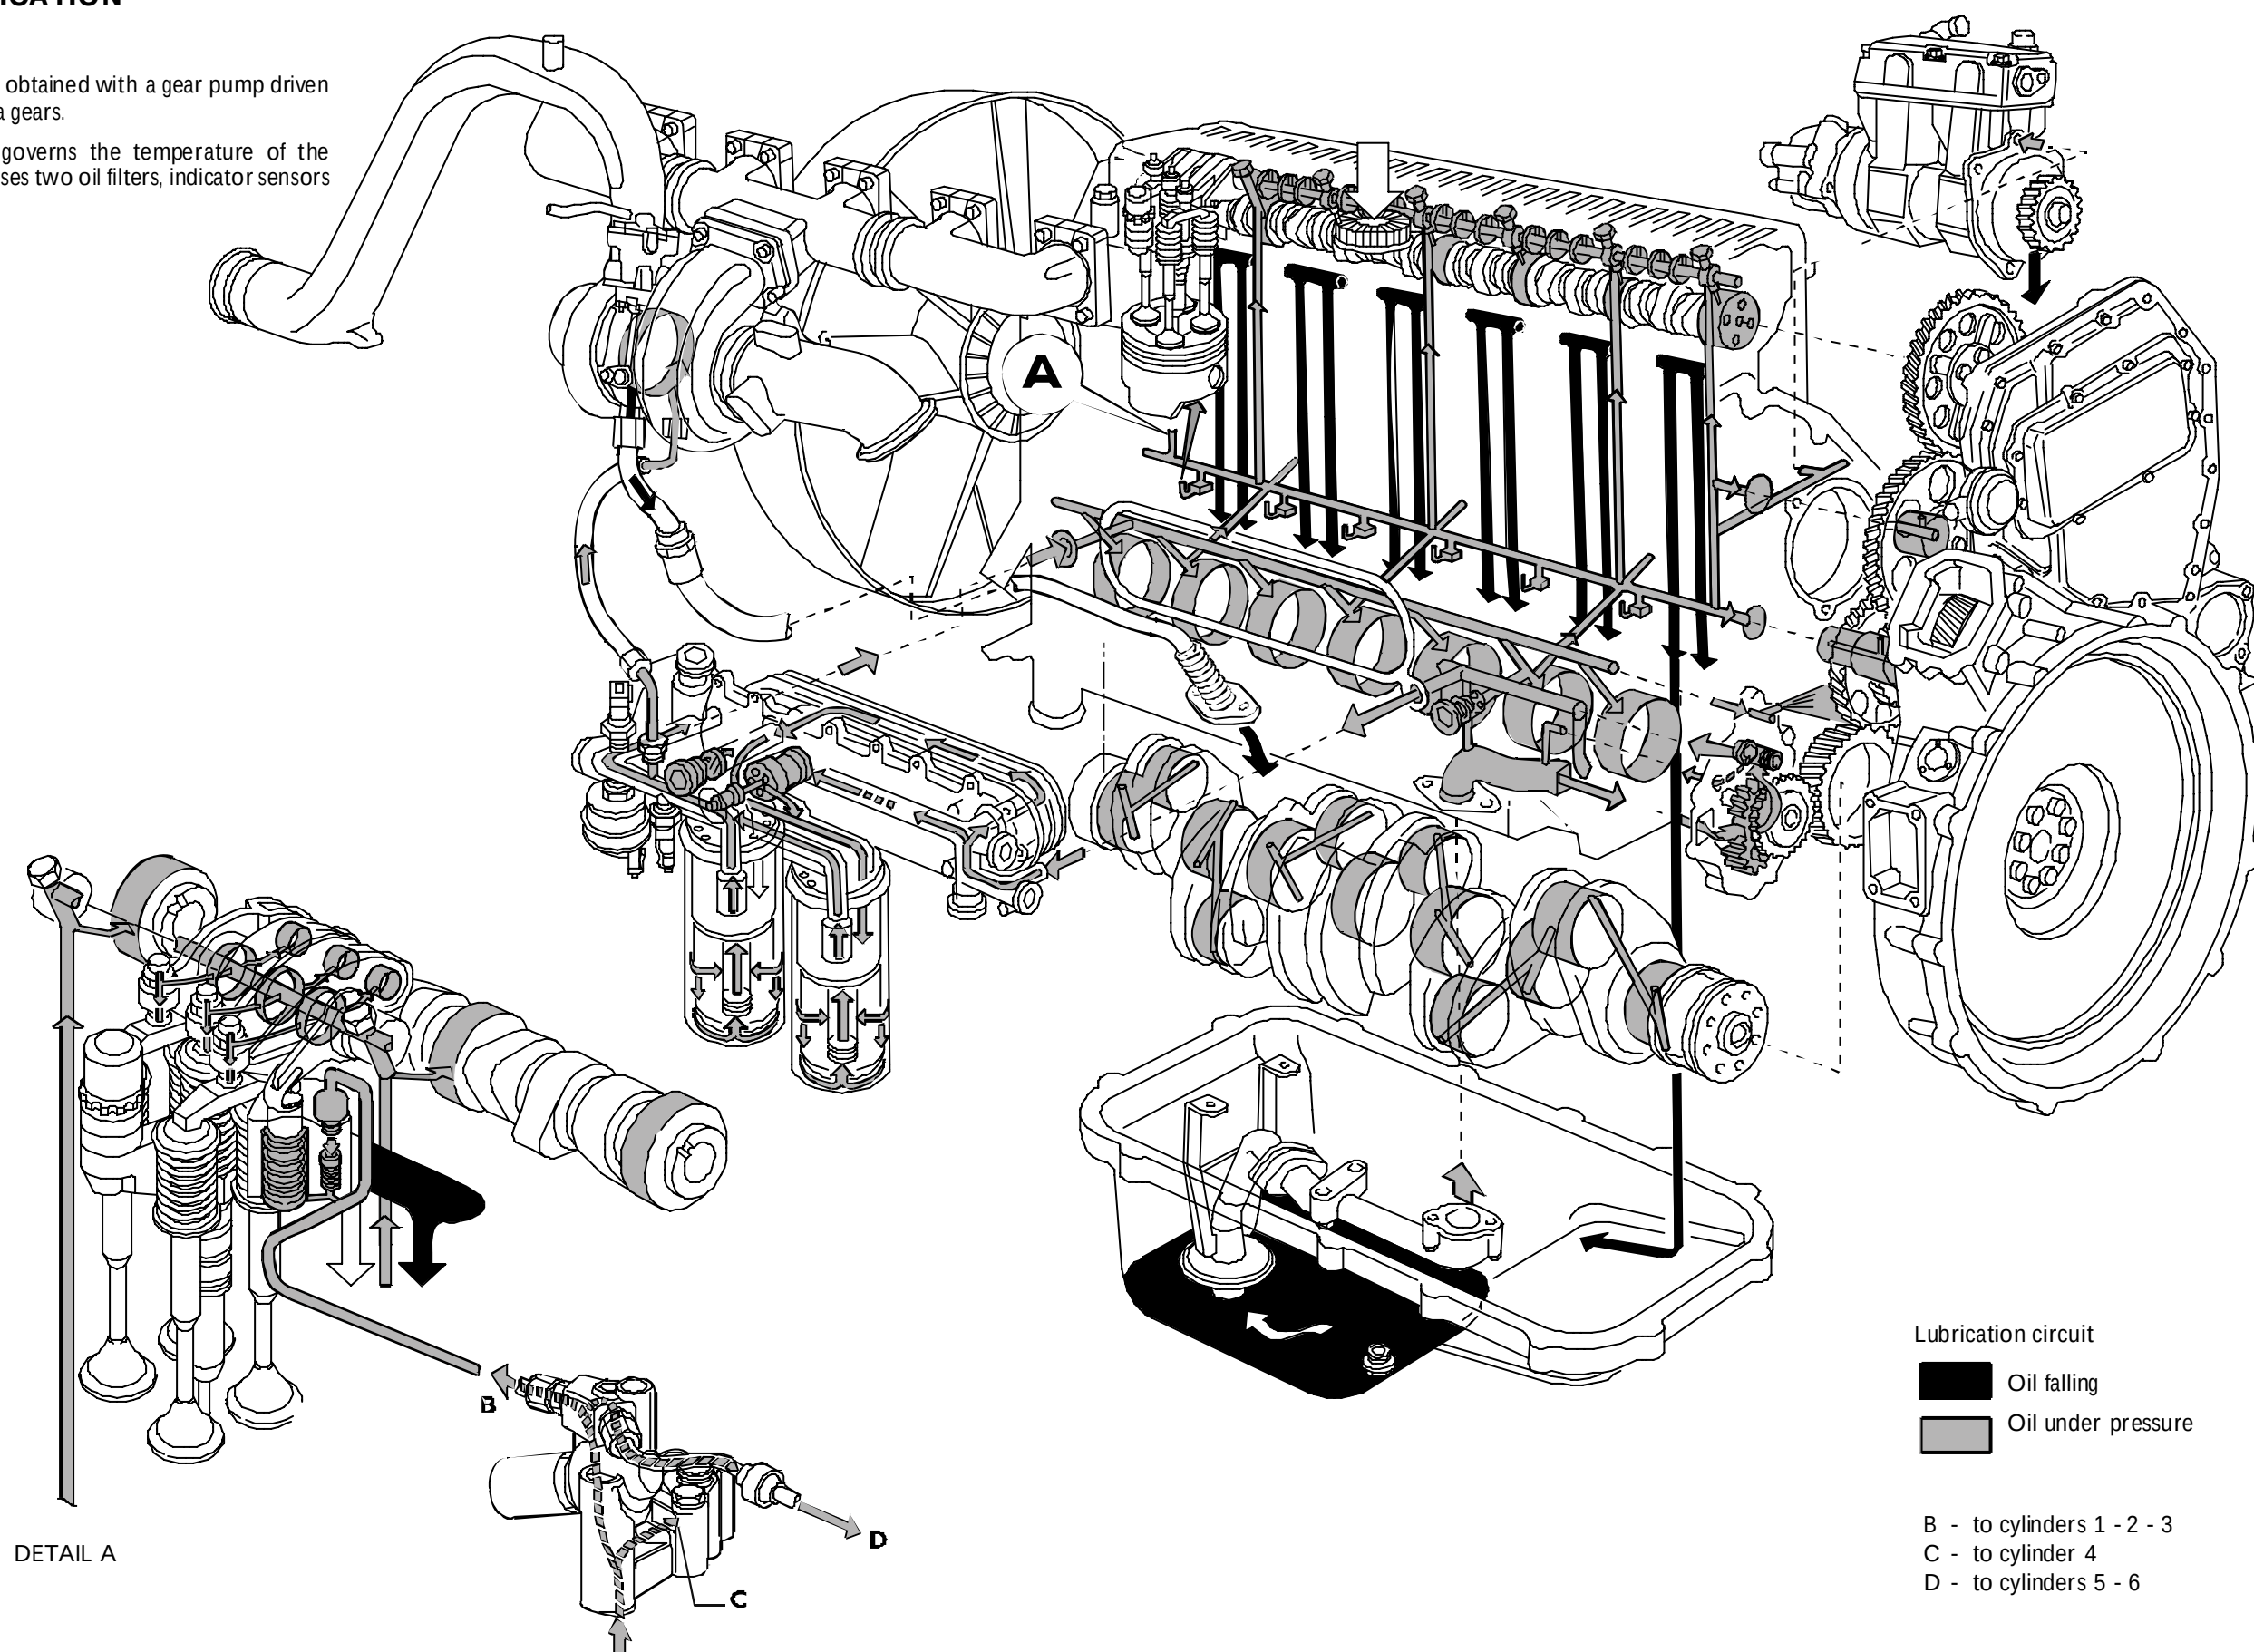


Aquila Trucks Centres

Aquila Trucks Centres

543010 Oil pump

Figure 222

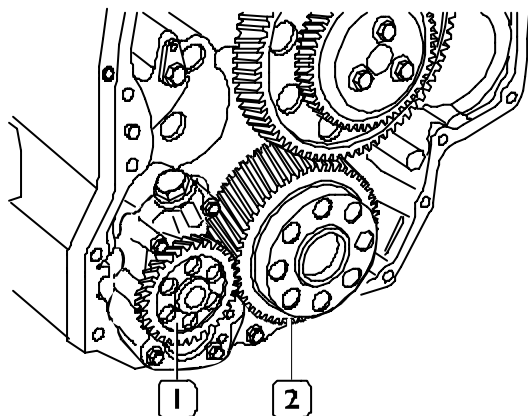


60560

The oil pump (1) cannot be overhauled. On finding any damage, replace the oil pump assembly.

See under the relevant heading for replacing the gear (2) of the crankshaft.


Safety relief valve

Figure 223

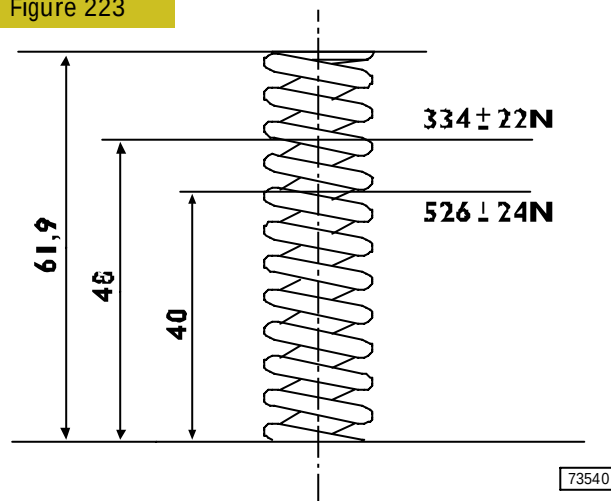

MAIN DATA TO CHECK THE OVERPRESSURE VALVE SPRING

Figure 224

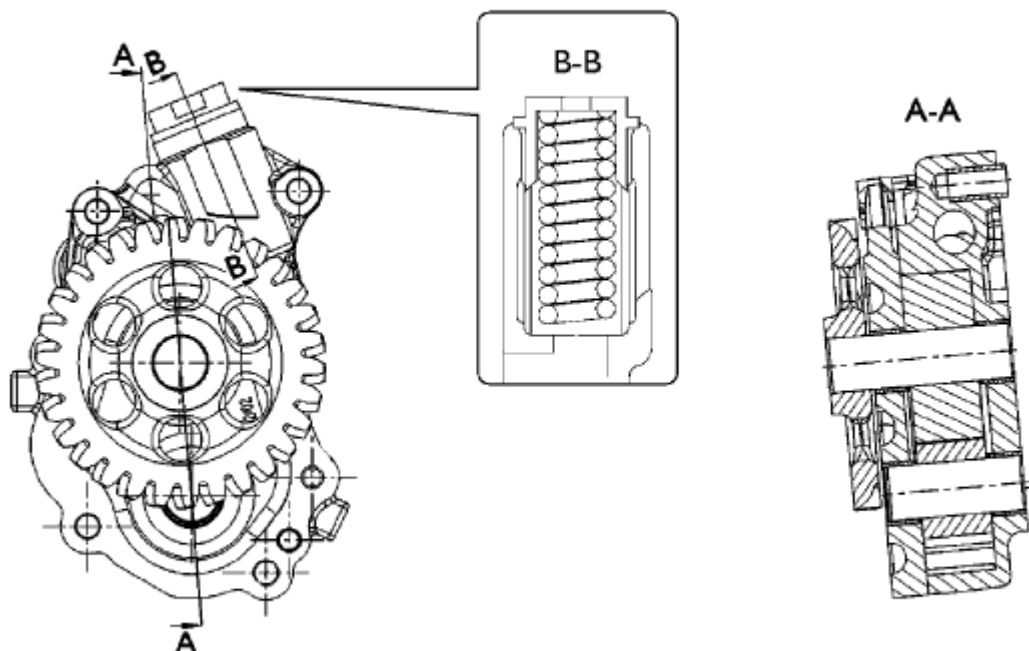

108846


OIL PUMP CROSS-SECTION

1. Safety relief valve – 2. Start of opening pressure 10 ± 1 bars.

Aquila Trucks Centres


Oil overpressure valve

Figure 225

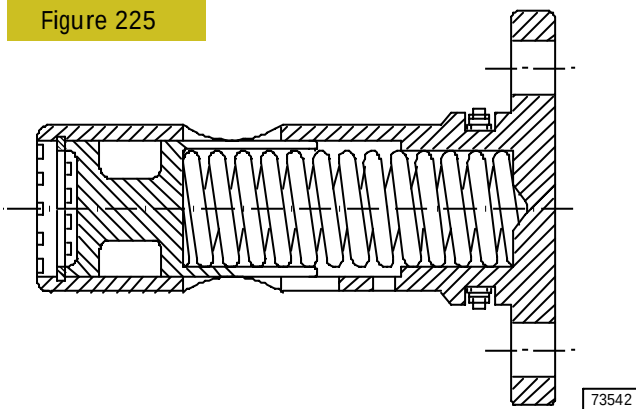

The oil overpressure valve is located on the left-hand side of the crankcase.
Start of opening pressure 5 bars.


Figure 226

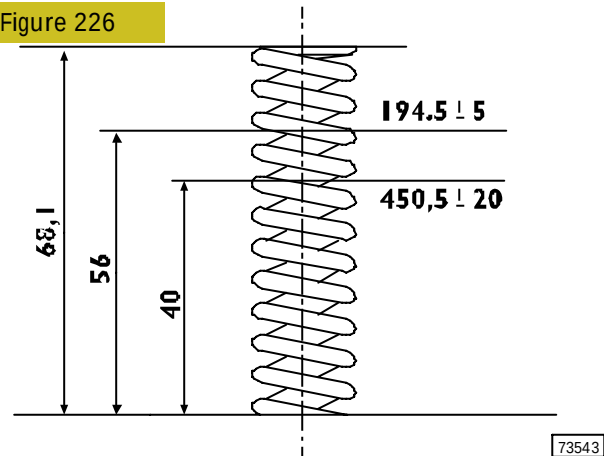

MAIN DATA TO CHECK THE OIL OVERPRESSURE VALVE SPRING

543110 Heat exchanger

Figure 227

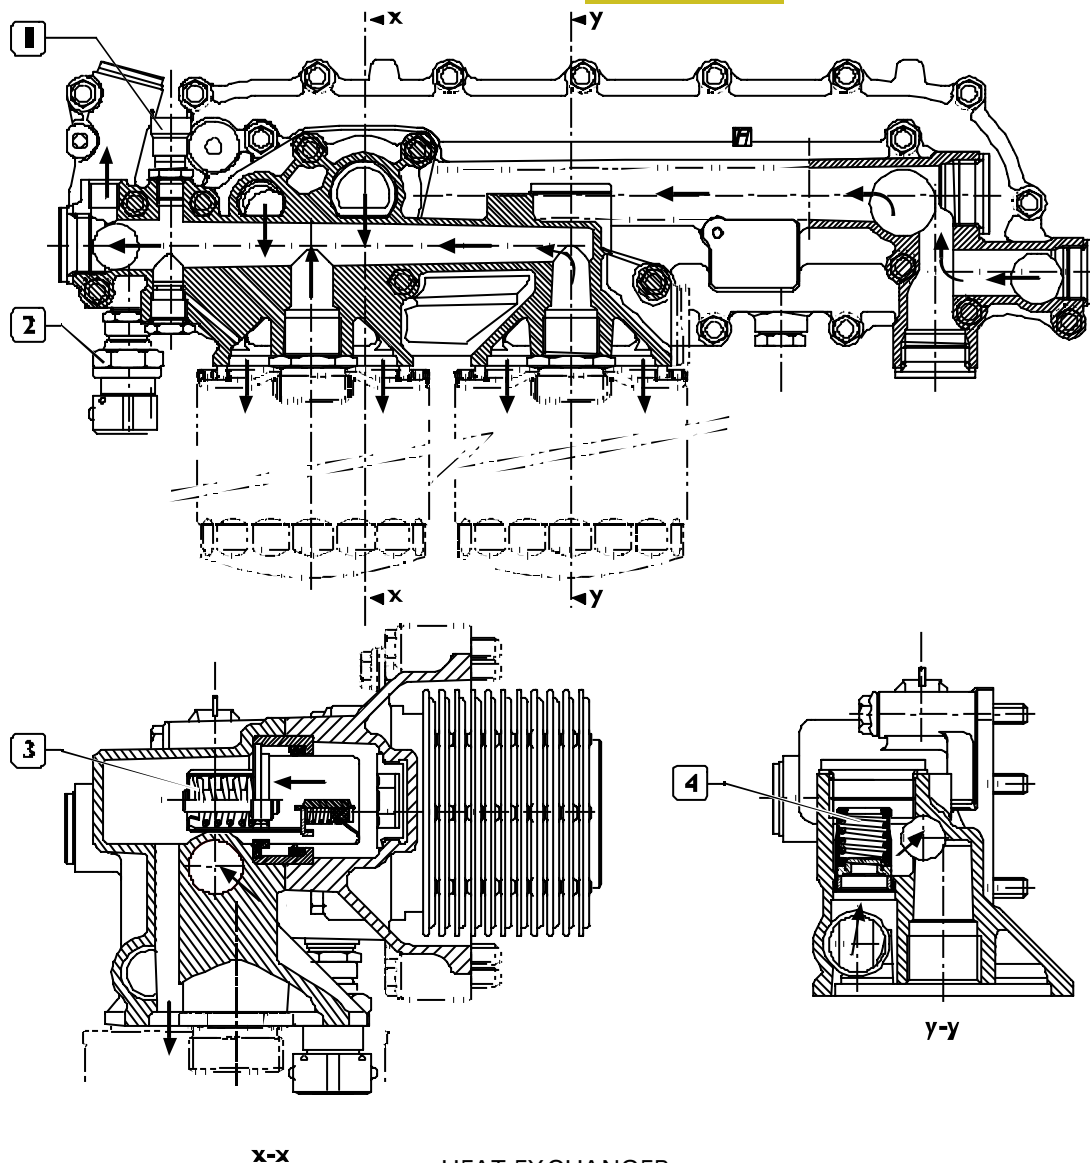


HEAT EXCHANGER

The heat exchanger is fitted with: 1. Oil temperature transmitter – 2. Oil pressure transmitter – 3. Filter bypass valve – 4. Thermostat
Number of heat exchanger elements: 11.

Aquila Trucks Centres

By-pass valve


Figure 228

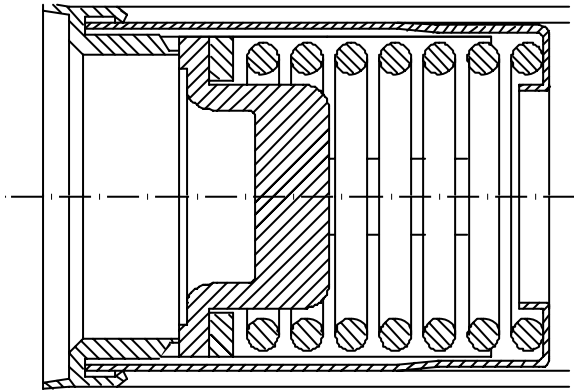

The valve quickly opens at a pressure of: 3 bars.

Thermostatic valve

Figure 229

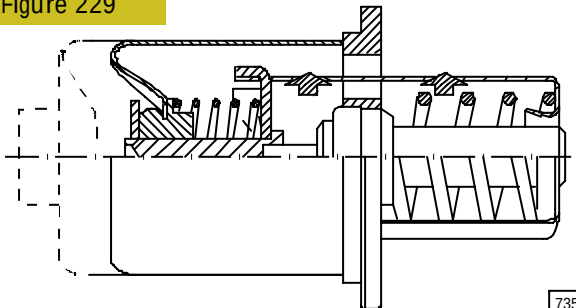

Start of opening:


- travel 0.1 mm at a temperature of $82 \pm 2^\circ\text{C}$.

End of opening:

- travel 8 mm at a temperature of 97°C .

Engine oil filters

Figure 230

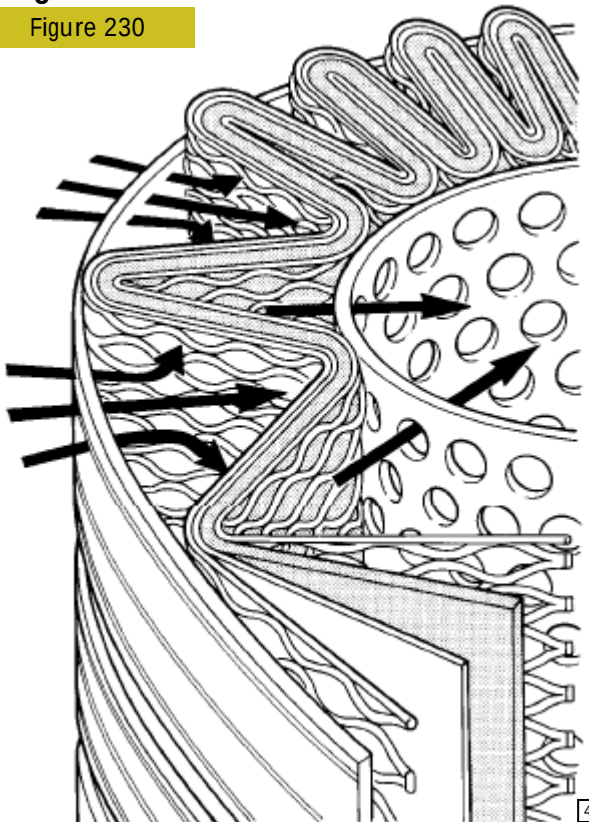

This is a new generation of filters that permit much more thorough filtration as they are able to hold back a greater amount of particles of smaller dimensions than those held back by conventional filters with a paper filtering element.

These high-filtration devices, to date used only in industrial processes, make it possible to:

- reduce the wear of engine components over time;
- maintain the performance/specifications of the oil and thereby lengthen the time intervals between changes.

External spiral winding

The filtering elements are closely wound by a spiral so that each fold is firmly anchored to the spiral with respect to the others. This produces a uniform use of the element even in the worst conditions such as cold starting with fluids with a high viscosity and peaks of flow. In addition, it ensures uniform distribution of the flow over the entire length of the filtering element, with consequent optimization of the loss of load and of its working life.

Mount upstream

To optimize flow distribution and the rigidity of the filtering element, this has an exclusive mount composed of a strong mesh made of nylon and an extremely strong synthetic material.

Filtering element

Composed of inert inorganic fibres bound with an exclusive resin to a structure with graded holes, the element is manufactured exclusively to precise procedures and strict quality control.

Mount downstream

A mount for the filtering element and a strong nylon mesh make it even stronger, which is especially helpful during cold starts and long periods of use. The performance of the filter remains constant and reliable throughout its working life and from one element to another, irrespective of the changes in working conditions.

Structural parts

The o-rings equipping the filtering element ensure a perfect seal between it and the container, eliminating by-pass risks and keeping filter performance constant. Strong corrosion-proof bottoms and a sturdy internal metal core complete the structure of the filtering element.


When mounting the filters, keep to the following rules

- Oil and fit new seals.
- Screw down the filters to bring the seals into contact with the supporting bases.
- Tighten the filter to a torque of 35-40 Nm.

Aquila Trucks Centres

Valve integrated in piston cooling nozzle

Figure 231

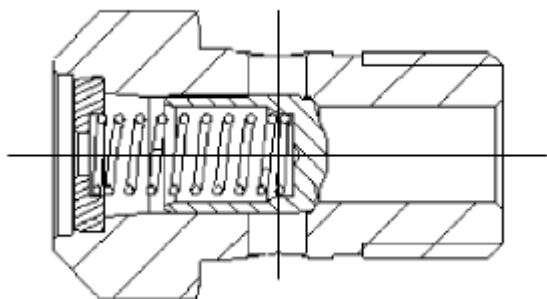

109080

The valve allows oil to enter only above the threshold pressure of 1.7 ± 0.2 bar. This permits filling the circuit and therefore lubricating the most stressed parts even when working at lower pressures.

5432 COOLING

Description

The engine cooling system works with forced circulation inside closed circuit and can be connected to an additional heater (if any) and to the intarder intercooler. It consists mainly of the following components:

- an expansion reservoir whose plug (1) incorporates two valves – discharge and charge – controlling the system pressure.
- a coolant level sensor placed at the bottom of the expansion reservoir with two coupling points:
right drive vehicles:
D coupling point for sensor S1 6.2 litres
D coupling point for sensor S2 4.7 litres
left drive vehicles:
D coupling point for sensor S1 6 litres
D coupling point for sensor S2 3.7 litres
- an engine cooling unit to dissipate the heat taken by the coolant from the engine through the intercooler.
- a heat exchanger to cool down lubrication oil;
- a water pump with centrifugal system incorporated in the cylinder block;
- an electric fan consisting of a 2-speed electro-magnetic joint equipped with a neutral wheel shaft hub fitted with a metal plate moving along the axis and where the fan is installed. It is controlled electronically by the vehicle Multiplex system.
- a 3-way thermostat controlling the coolant circulation.

Operation

The water pump is actuated by the crankshaft through a poli-V belt and sends coolant to the cylinder block, especially to the cylinder head (bigger quantity). When the coolant temperature reaches and overcomes the operating temperature, the thermostat is opened and from here the coolant flows into the radiator and is cooled down by the fan. The pressure inside the system depending on the temperature variation is controlled by the discharge and charge valves incorporated in the expansion reservoir filling plug (1).

The discharge valve has a double function:

- keep the system under light pressure in order to raise the coolant boiling point;
- discharge the pressure surplus in the atmosphere as a result of the coolant high temperature.

The charge valve makes it possible to transfer the coolant from the expansion reservoir to the radiator when a depression is generated inside the system as a result of the coolant volume reduction depending on the fall in the coolant temperature.


Discharge valve opening:

D 1 st breather	+ 0.2 0.9 - 0.1 bar
D 2 nd breather	+ 0.2 1.2 - 0.1 bar

Charge valve opening -0.03 - 0.02 bar


Plug tightening torque (1): 8 ± 1 Nm

Figure 232

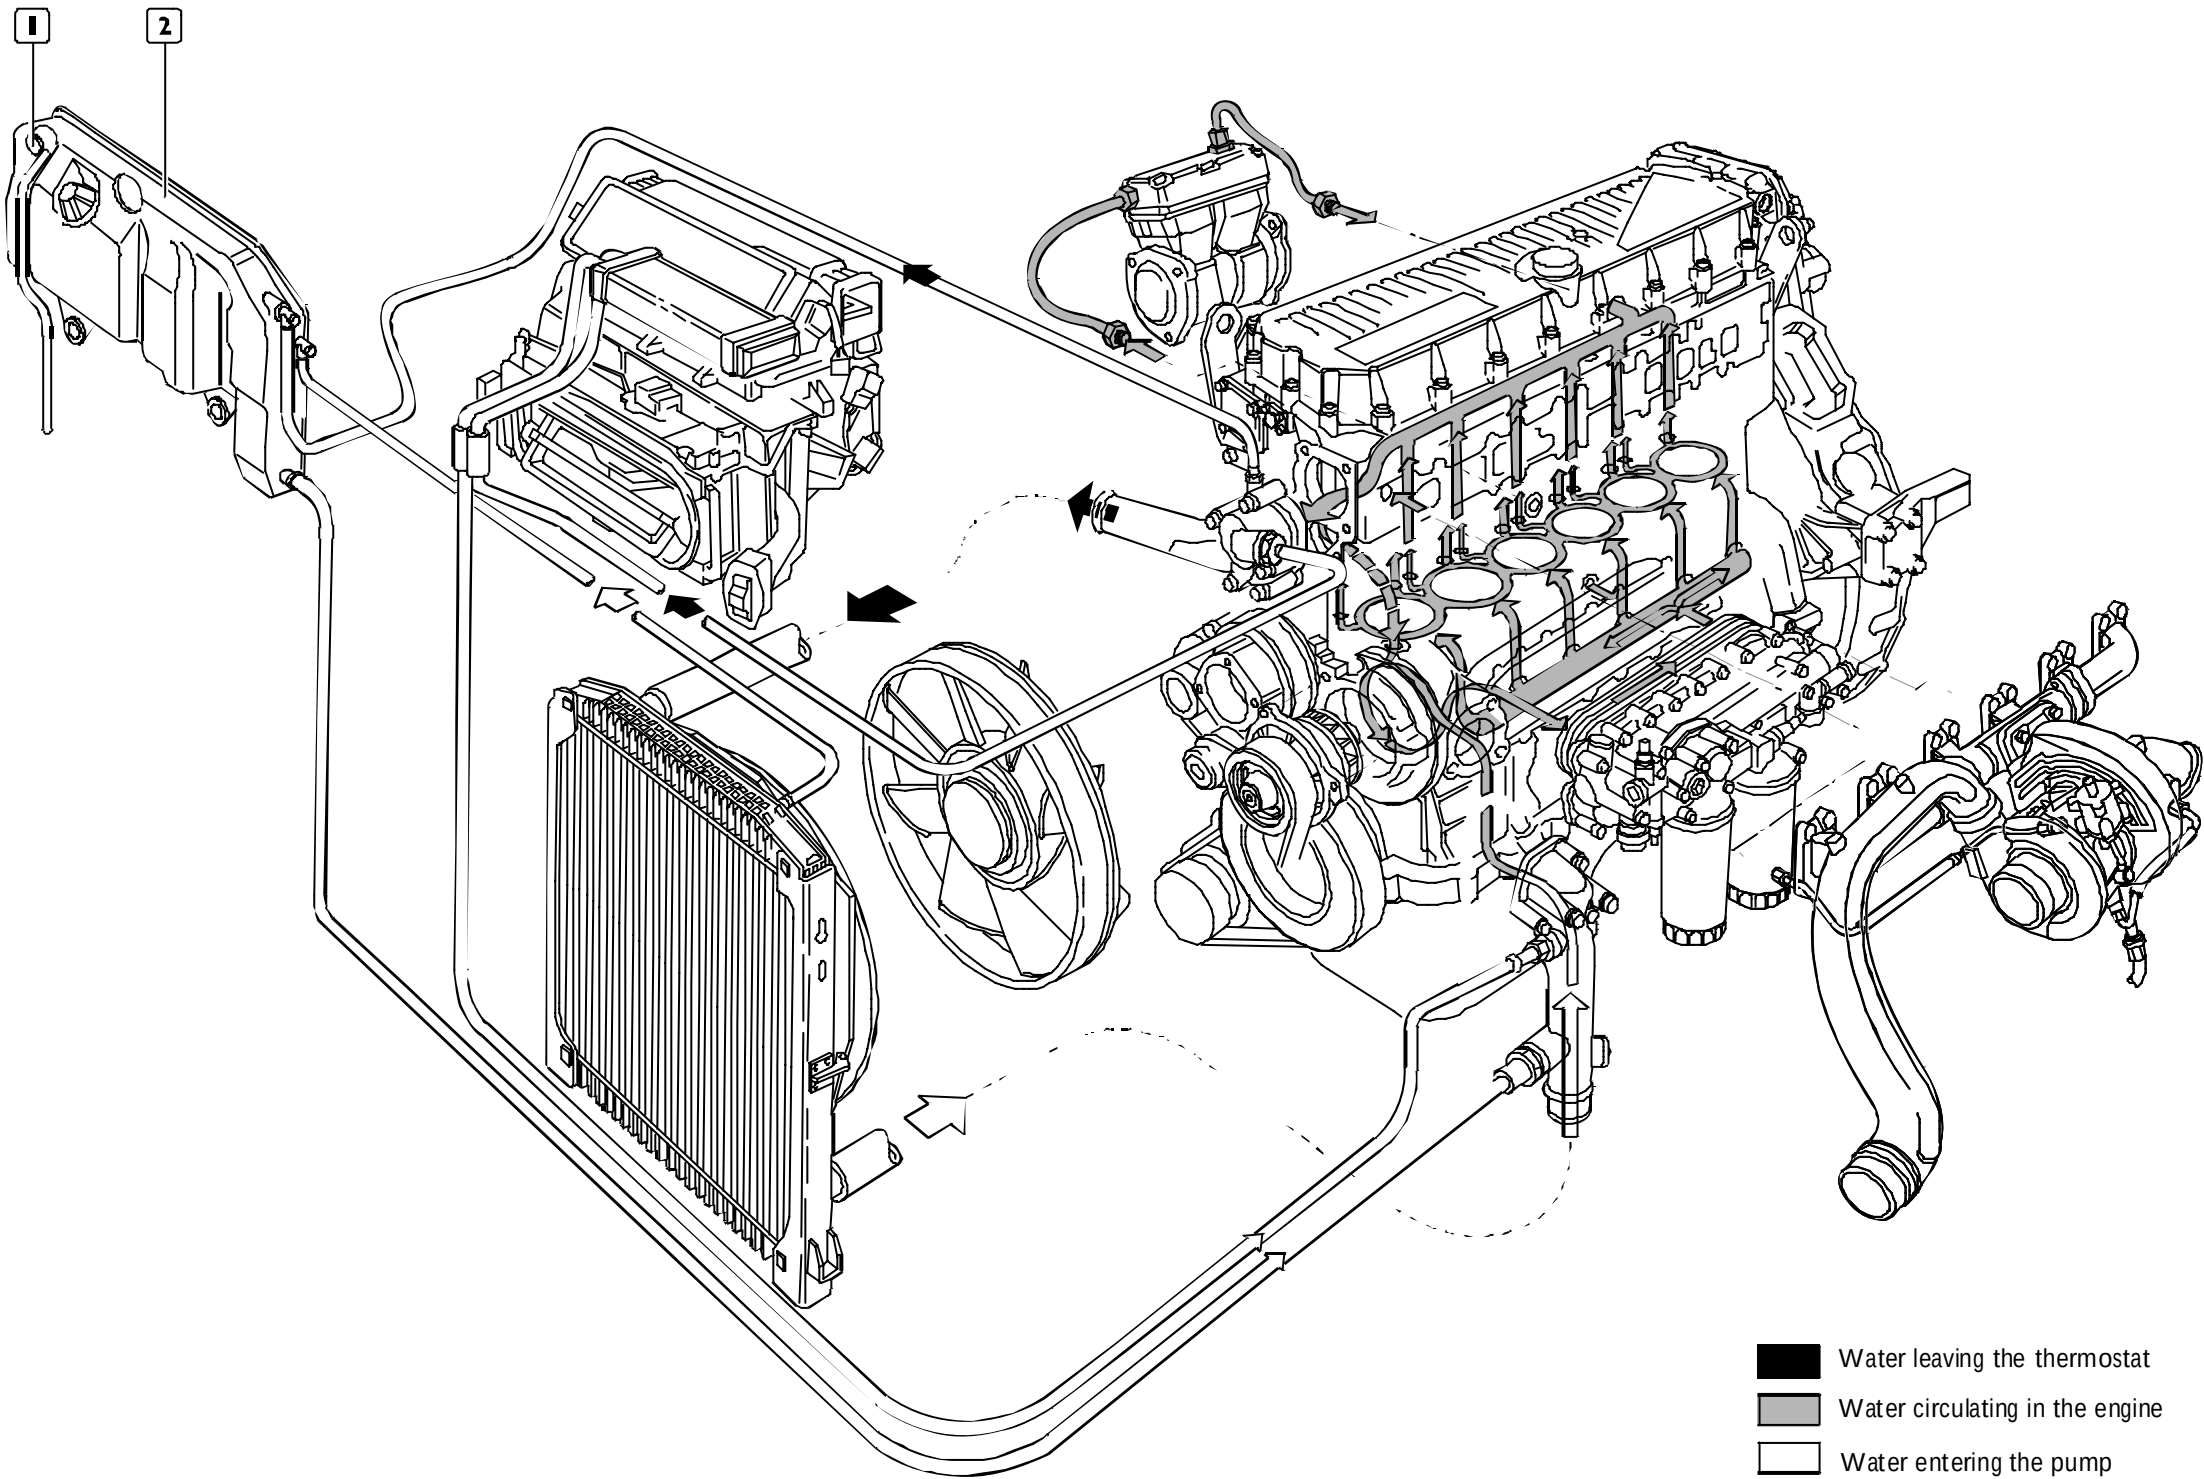

COOLING CIRCUIT VERSION WITHOUT INTARDER

Figure 233

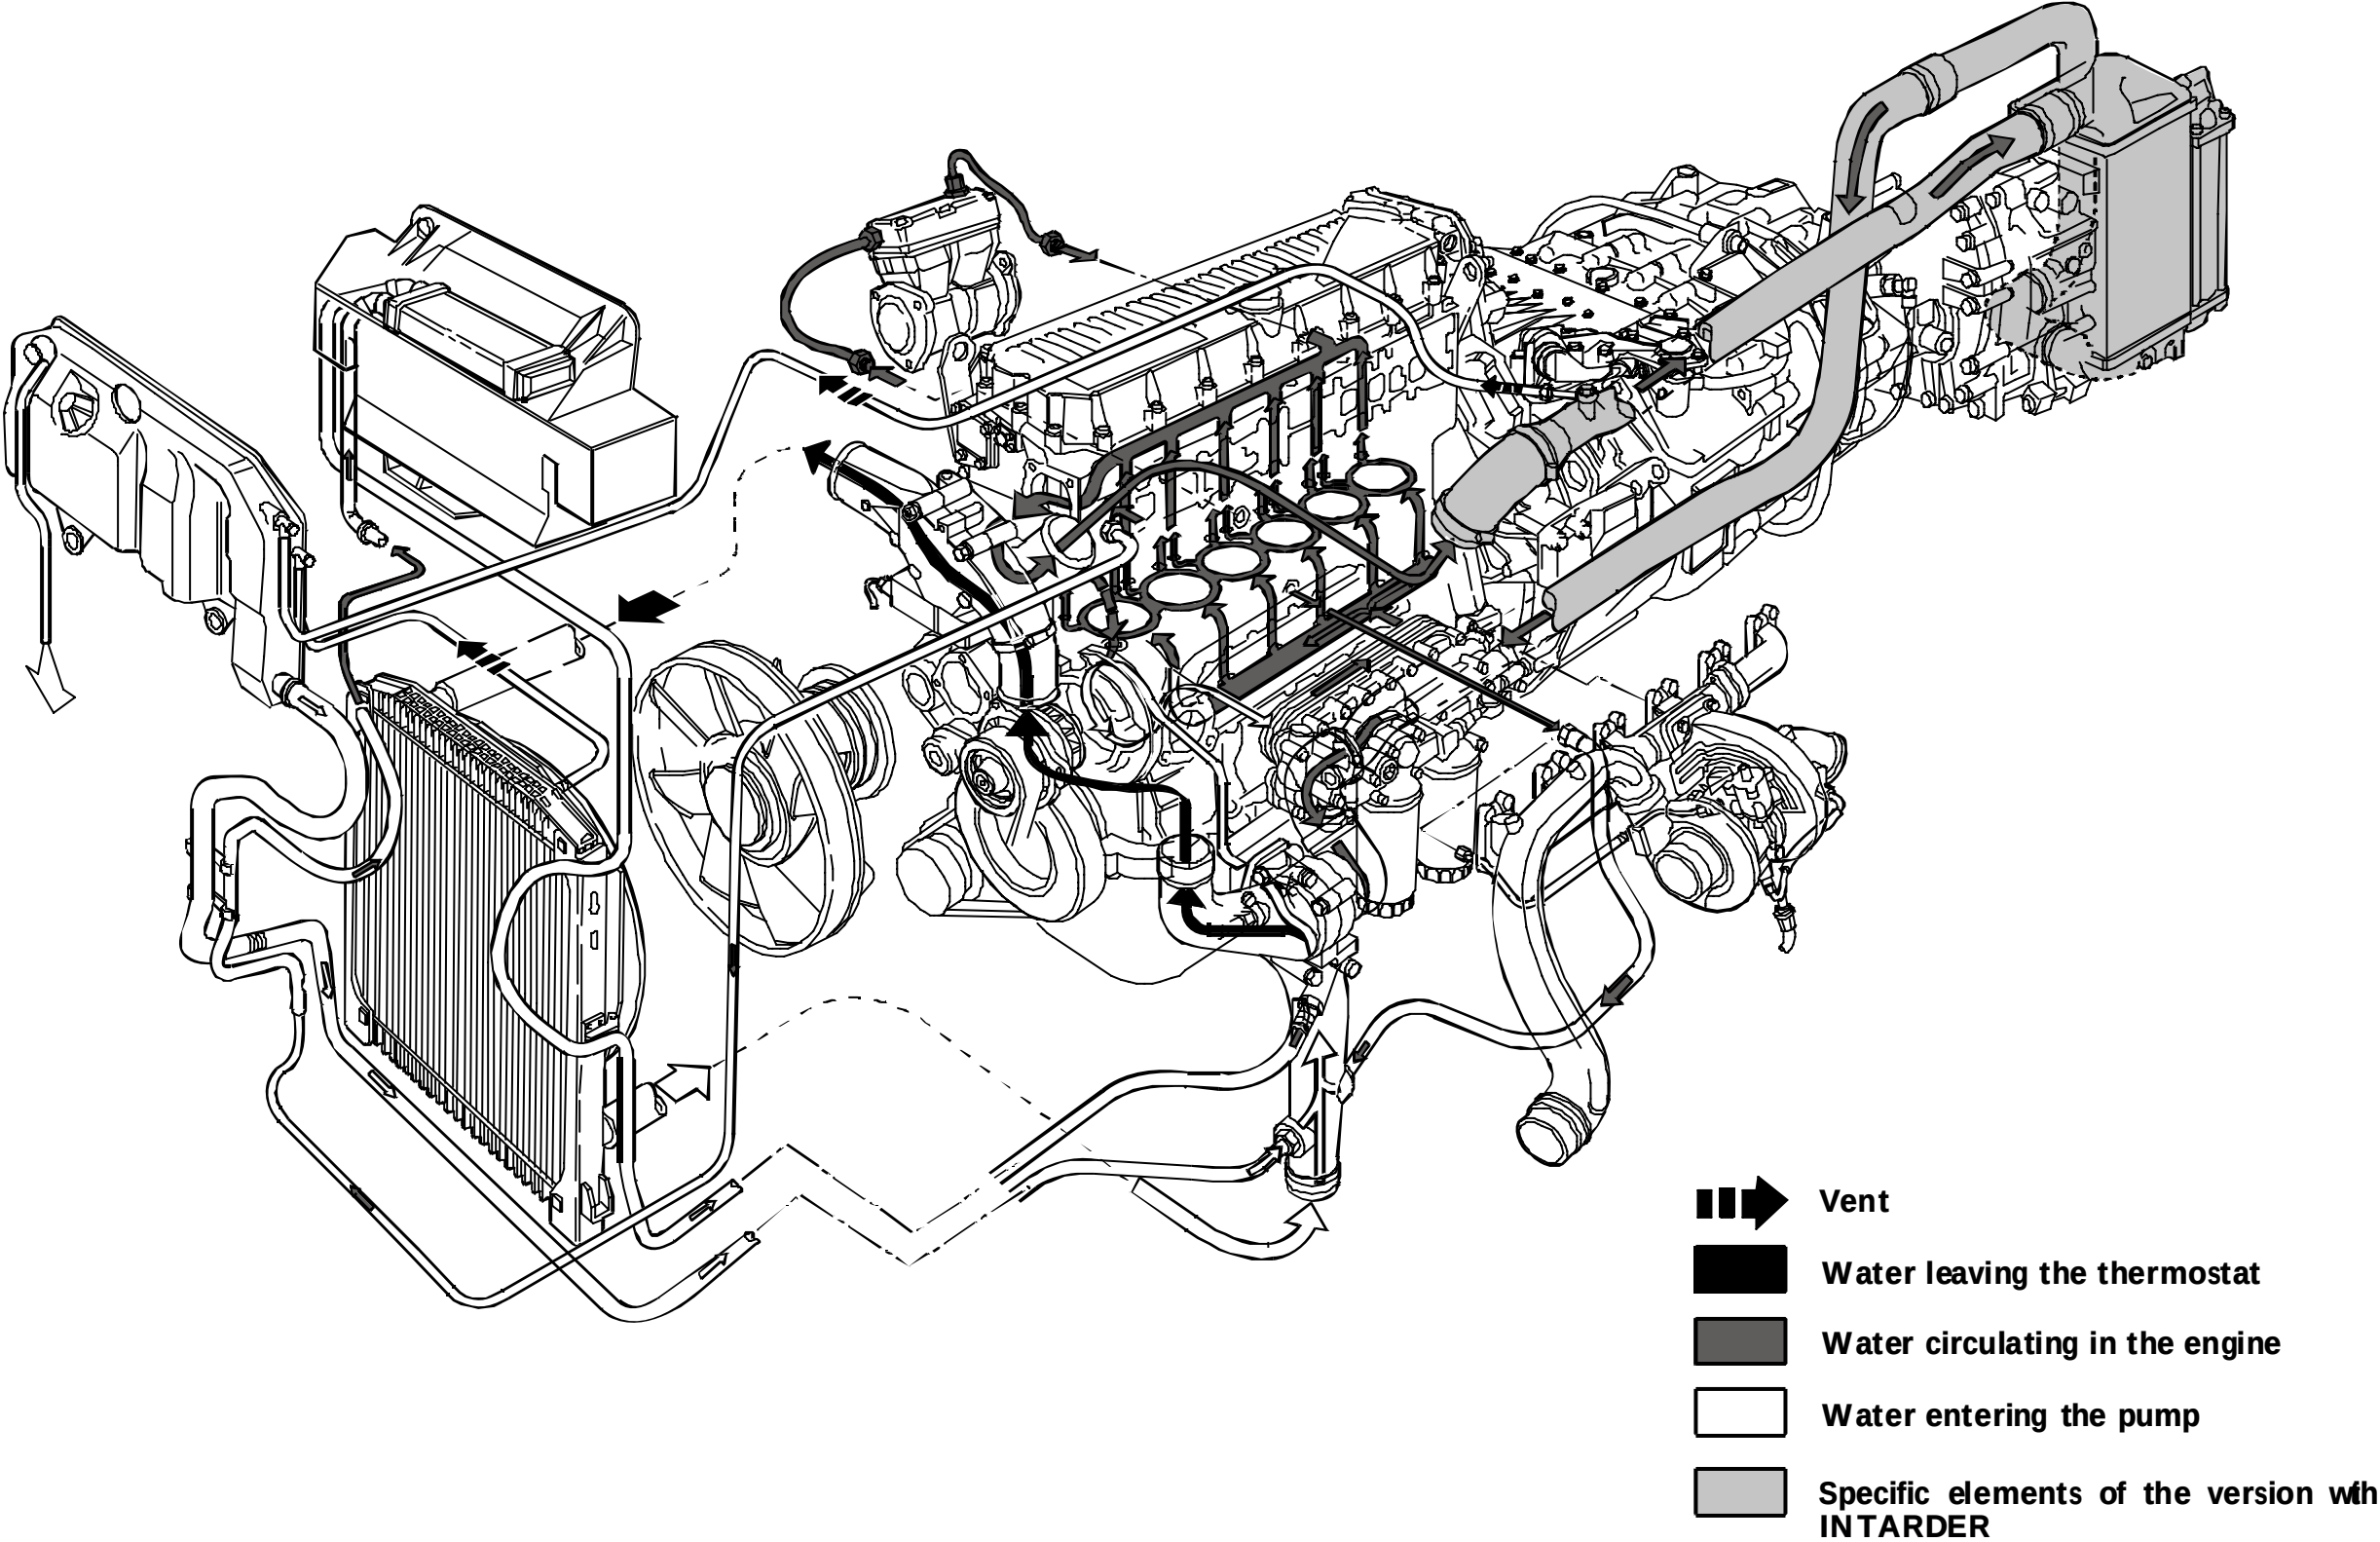


COOLING CIRCUIT VERSION WITH INTARDER

Aquila Trucks Centres

543210 Electromagnetic fan drive

Figure 234

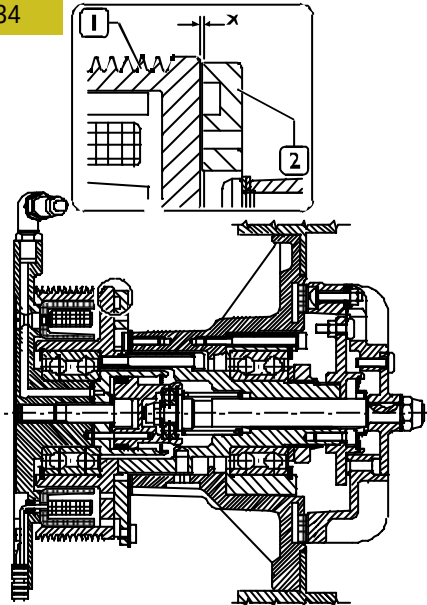

77469

ELECTROMAGNETIC FAN DRIVE SECTION

Using a feeler gauge, check the gap between the anchor assembly (2) and the pulley (1), it must be no greater than 25 mm.

The electro-magnetic fan drive action depends on:

- the coolant temperature;
- the climate control system fluid pressure (if any);
- the slowing down action of the Intarder on (if any).

Idling condition:

- water temperature is less than 93_C and both the Intarder and the air-conditioning unit (where available) are OFF;
- coolant temperature is less than 85_C and the air-conditioning system is ON (pressure inside the circuit is less than 18 bar);
- coolant temperature is less than 85_C, and the Intarder is ON, with its braking power less than 41% of its maximum power.

The first speed is actuated when:

- coolant temperature reaches 85_C, and the Intarder is ON, with its braking power greater than 41% of its maximum power;
- coolant temperature reaches 85_C and the air-conditioning system is ON (pressure inside the circuit is higher than 18 bar);

The second speed is actuated when:


- coolant temperature reaches 93_C, and the Intarder is either OFF or ON with its braking power less than 41% (speed is deactivated when temperature falls down to 88_C);
- coolant temperature reaches 85%, the Intarder is ON (with its braking power greater than 41% of its maximum power), or the air-conditioning system is ON and the pressure inside the circuit is 22 bar.

When second speed actuation is required, the system will drive the fan for 5 seconds at the first speed and then engages the second speed. This will increase belt and fan component wear in time. When the fan first speed is actuated for more than 1 minute, the system actuates the second speed until the control parameters fall under the operation levels.

As to the description of the electro-magnetic fan drive operation and servicing, see the "Manual for electric/electronic system repairing" - Volume 3

543210 Water pump

Figure 235

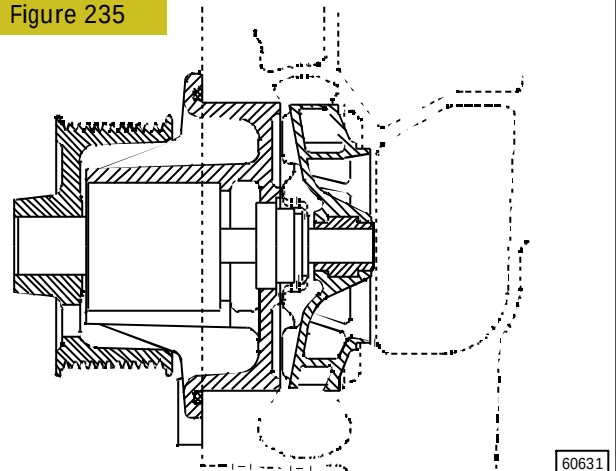

60631

CROSS-SECTION OF THE WATER PUMP


The water pump is composed of: impeller, bearing, seal and driving pulley.

NOTE Check that the pump body has no cracks or water leakage; if it does, replace the entire water pump.

543250 Thermostat

View of thermostat operation


Figure 236

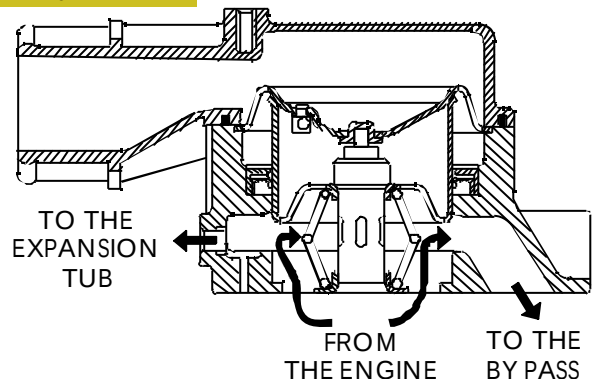

Water circulating in the engine

60747

Figure 237

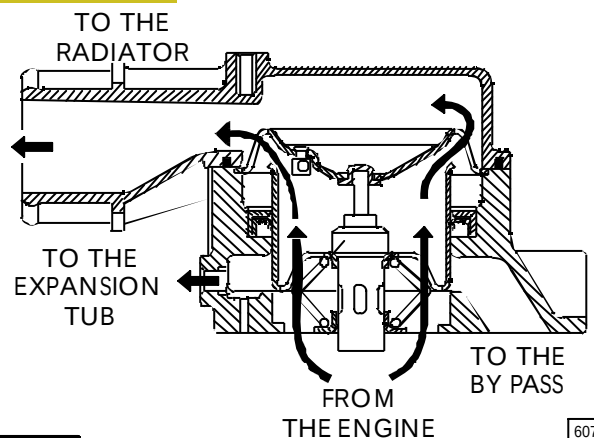

Water leaving the thermostat

60748


Check the thermostat works properly; replace it if in doubt.

Temperature of start of travel 84°C ±2°C.
Minimum travel 15 mm at 94°C ±2°C.

Aquila Trucks Centres

View of thermostat operation for versions with Intarder

Figure 238

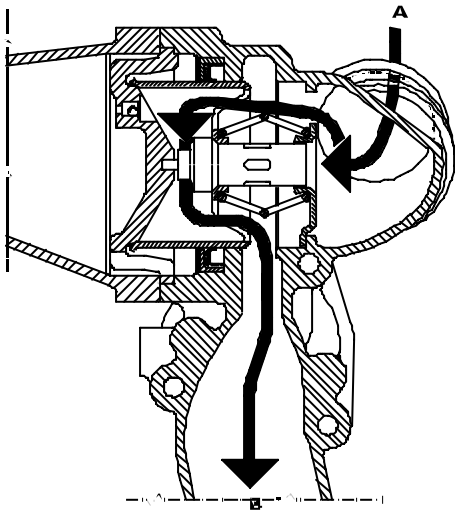


72675

**COLD OPERATION WITH
CLOSED THERMOSTAT**

- A - Water circulating in the engine and the intarder.
- B - To water pump.

Figure 239

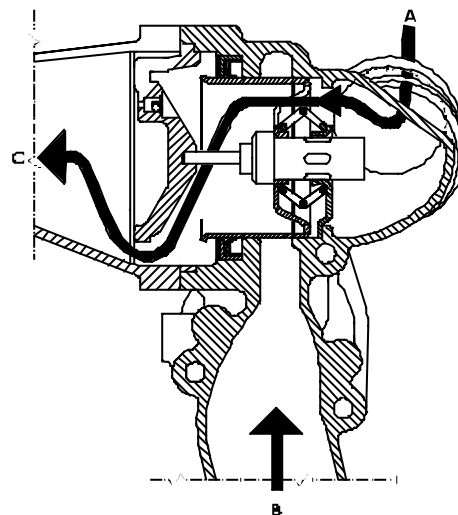

72676

**HOT OPERATION WITH
OPEN THERMOSTAT**

- A - Water circulating in the engine and the intarder.
- B - From the radiator to the water pump.
- C - To radiator.


Aquila Trucks Centres

5424 TURBOCHARGING

The turbocharging system is composed of:

- an air filter;
- A turbocharger with fixed geometry and WASTEGATE (410 HP engines) or with variable geometry for 450 HP/500 HP engines;
- an "intercooler" radiator.

Figure 240

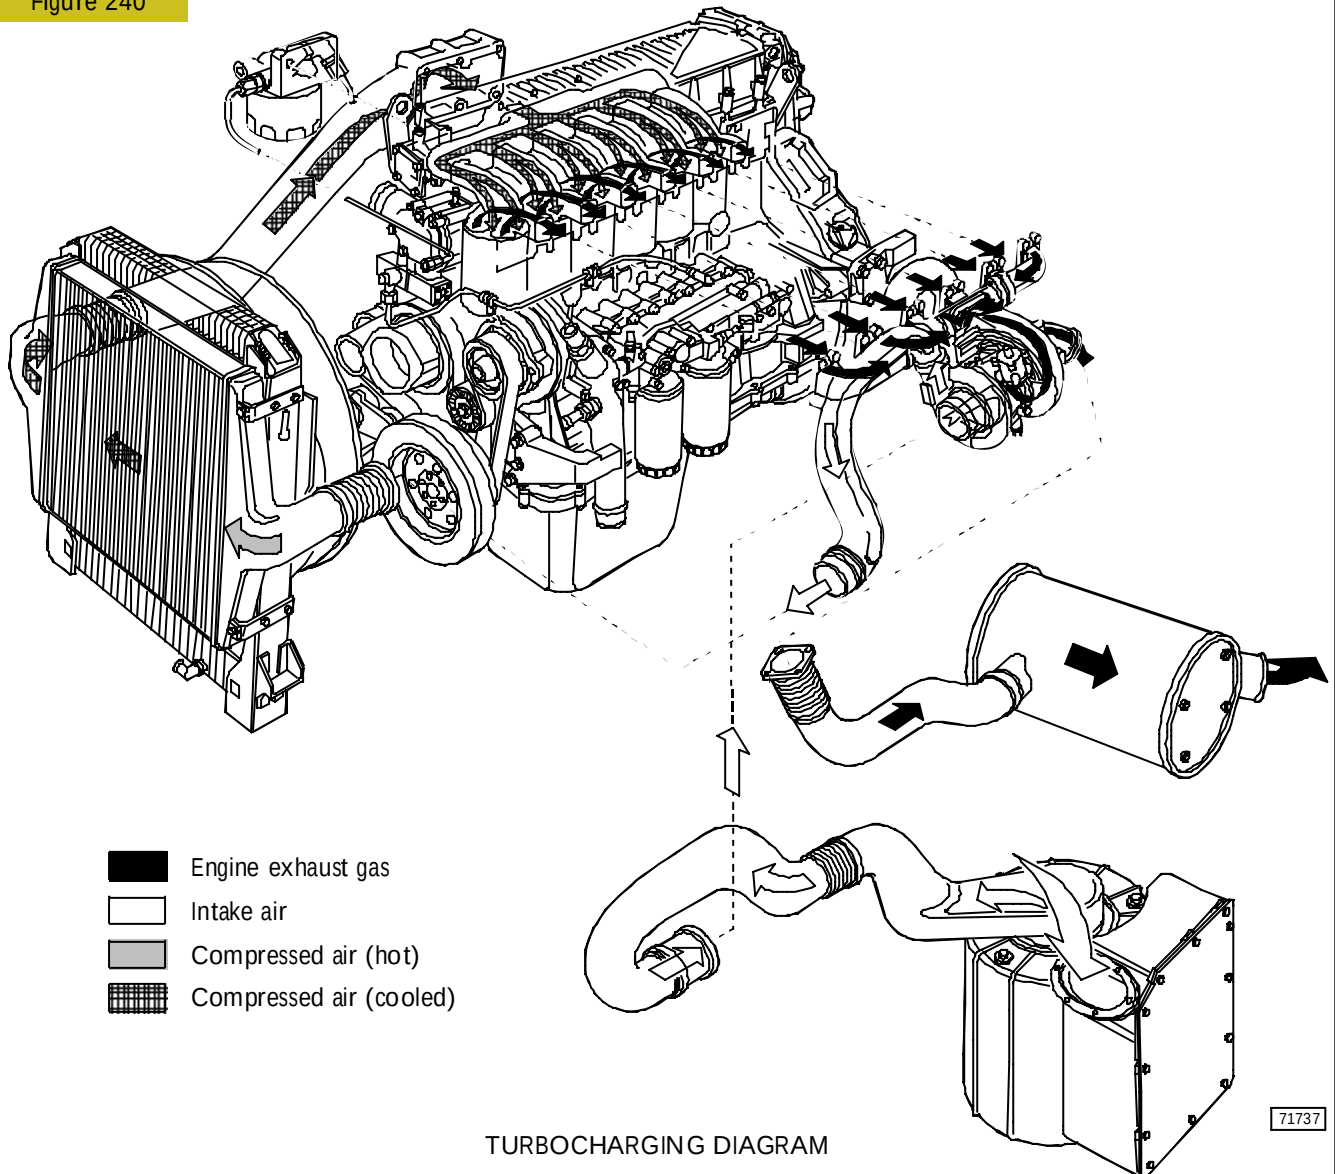**Turbocharger HOLSET HE 551 V****Working principle**

The variable geometry turbocharger (VGT) is composed of a centrifugal compressor and a turbine equipped with a mobile device that, by changing the area of cross-section of the passage of the exhaust gases going to the turbine, governs the speed.

Thanks to this solution, it is possible to keep the speed of the gases and turbine high even when the engine is running at low speed.

By making the gases pass through small cross-sections, they flow faster, so that the turbine turns faster as well.

The movement of the device changing the cross-section of the flow of exhaust gases is accomplished with a mechanism operated by a pneumatic actuator.

This actuator is controlled directly by the electronic control unit via a proportional solenoid valve.

This device is most closed at low speed.

At high engine speeds, the electronic control system increases the cross-section of the passage to permit the incoming gases to flow without increasing their speed too much.

Cast in the central body there is a toroidal chamber for the coolant to pass through.

Aquila Trucks Centres

Actuator

Figure 241


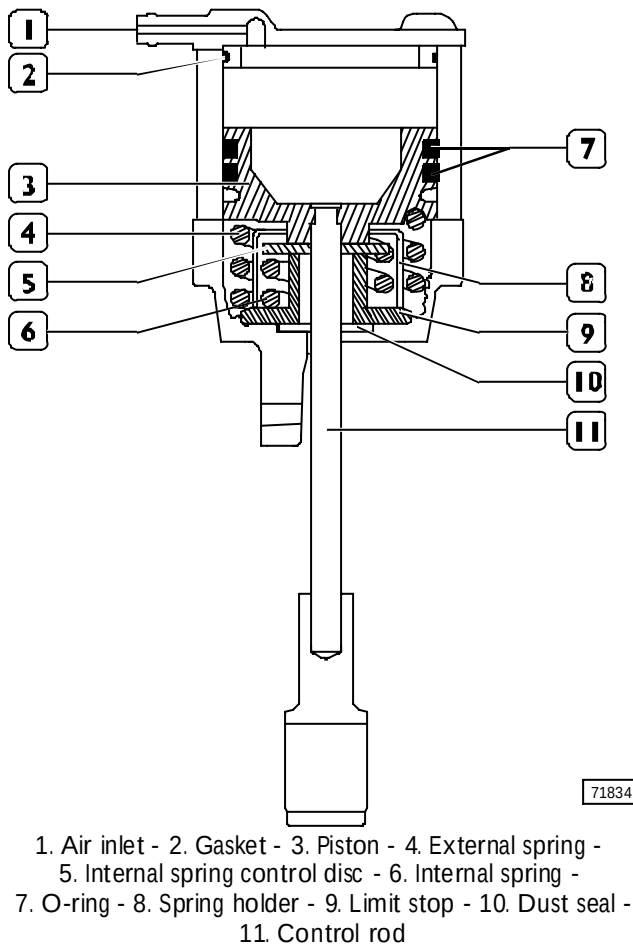


Figure 242

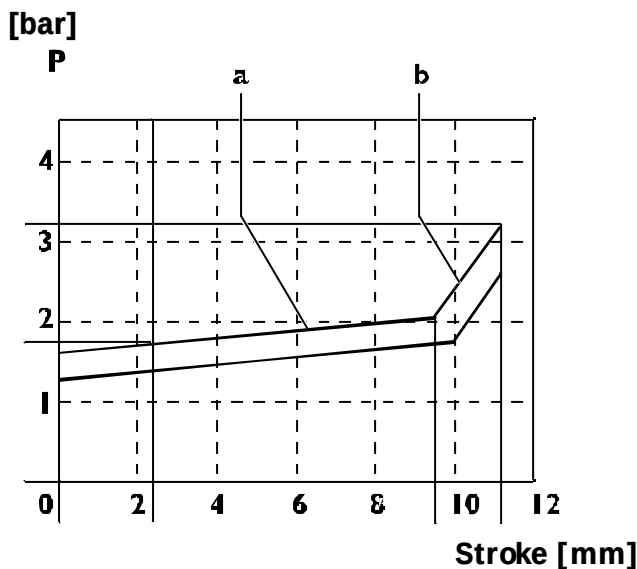

- a Gradient characterized by the effect of the external spring (4, Figure 241).
- b Gradient characterized by the effect of the external (4, Figure 241) and internal (6, Figure 241) springs.

Working principle (See Figure 241)

The actuator piston, connected to the drive rod, is controlled with the compressed air introduced through the air inlet (1) on the top of the actuator.

Modulating the air pressure varies the movement of the piston and turbine control rod. As the piston moves, it progressively compresses the external spring (4) until the base of the piston reaches the disc (5) controlling the internal spring (6).

On further increasing the pressure, the piston, via the disc (5), interferes with the bottom limit stop (10).

Using two springs makes it possible to vary the ratio between the piston stroke and the pressure. Approximately 85% of the stroke of the rod is opposed by the external spring and 15% by the internal one.

Solenoid valve for VGT control

This N.C. proportional solenoid valve is located on the left-hand side of the crankcase under the turbine.

The electronic control unit, via a PWM signal, controls the solenoid valve, governing the supply pressure of the turbine actuator, which, on changing its position, modifies the cross-section of the flow of exhaust gases onto the blades of the impeller and therefore its speed.

The VGT solenoid valve is connected to the electronic control unit between pins C1/C3.

The resistance of the coil is approx. 20-30 Ohms.

REPAIR

NOTE If anomalous engine operation is found, which is due to the boosting system, it is advisable that you check the efficiency of seal gaskets and the fastening of connecting sleeves prior to carrying out the checks on the turboblower. Also check for obstructions in the sucking sleeves, air filter. If the turbocharger damage is due to a lack of lubrication, check that the oil circulation pipes are not damaged. If so, change them or eliminate the cause.

After carrying out the above mentioned checks, check the turbocharger operation with an Engine Test by using IVECO diagnosis equipment (Modus - IT 2000 - E.A.S.Y.) according to the relevant procedure.

NOTE The test must be performed in following conditions:

- engine coolant temperature >50 °C;
- battery up (voltage >22V) for compression test;
- efficient recharging system.


If values beyond tolerance are detected, check the efficiency of:

- shut-off valve;
- pressure sensor;
- engine cable pressure sensor connection (if oxidised, clean with a specific product);
- lack of electrical defects in solenoid valve VGT (continuity connection);
- actuator moved by active diagnosis as described in relating chapter, in case of locking, grease bushing with lubricant Kernite (for high temperatures); if the trouble persists, replace the actuator;
- sliding sleeve: it must slide freely when operated manually. If locked and if the bush check is not sufficient or effective, or no faults are detected in the other points, upon authorization of the "Help Desk" market operator, change the turbocharger according to the standard procedures.

Aquila Trucks Centres

Variable geometry movement control

Figure 243

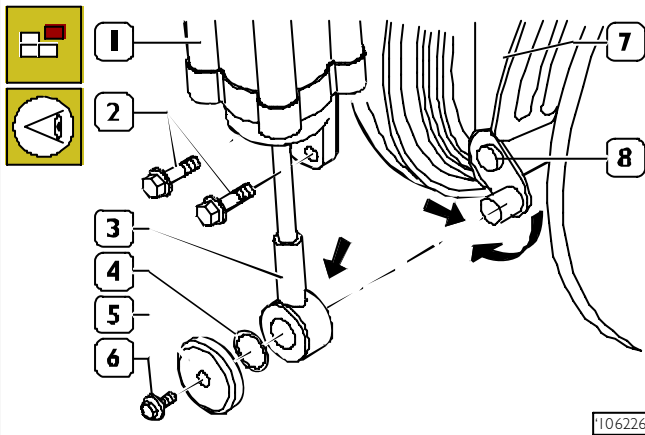

Remove screws (2) and take actuator (1) off turbocompressor (7).

Remove screw (6), underlying disk (5), ring (4) and disconnect tie rod (3) of actuator (1) from the pin of variable geometry driving lever (8).

Accurately clean pin (→) of lever (8) and bushing (→) of tie rod (3) using a cloth made of non abrasive micro fibre.


NOTE Do not use abrasive paper of any kind.

Visually check the conditions of bushing (→) of tie rod (3) and pin (→) of lever (8); where they are found to be worn out, replace actuator (1) or turbocompressor (7).

Check variable geometry inner driving mechanism movement by operating on lever (8); jamming must not occur; otherwise, clean turbine body, as described in relating chapter.

Checking the actuator


Figure 244

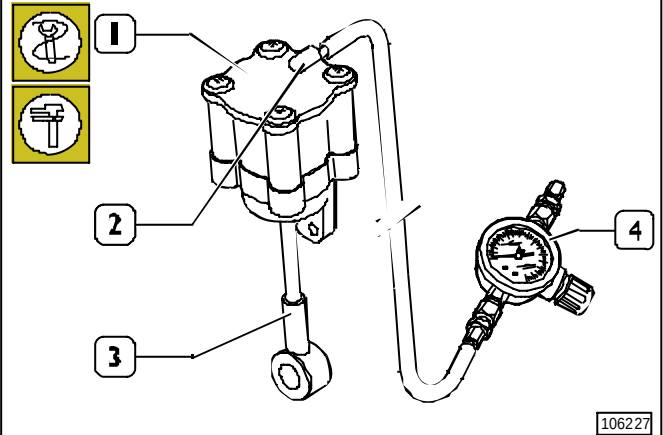

Check actuator efficiency (1) operating as follows.

Apply, to fitting (2) of actuator (1), compressed air feed piping provided with pressure regulator (4). By using the pressure regulator, introduce, into the actuator, compressed air slowly modulating it, from 0 ÷ 3.5 bar; tie rod (3) of actuator (1) must move without jamming; otherwise, replace actuator (1).

Figure 245

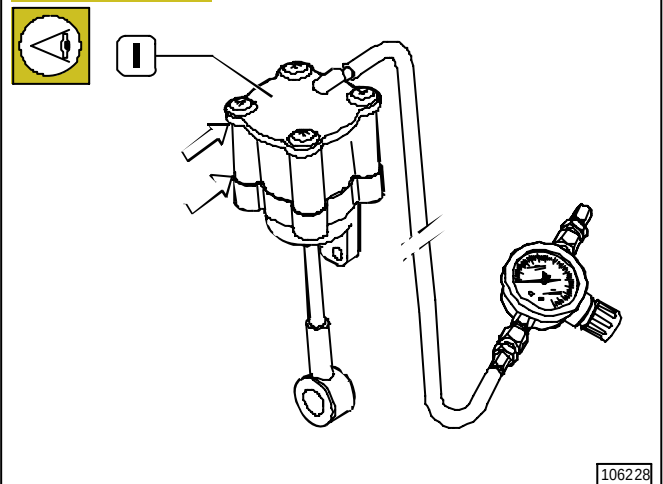


Check for any actuator leaks at indicated points (→) applying, on these points, a solution of suds.

When actuator (1) is fed with compressed air, no bubbles must be found at indicated points (→); otherwise, replace actuator (1).

Aquila Trucks Centres


Figure 246

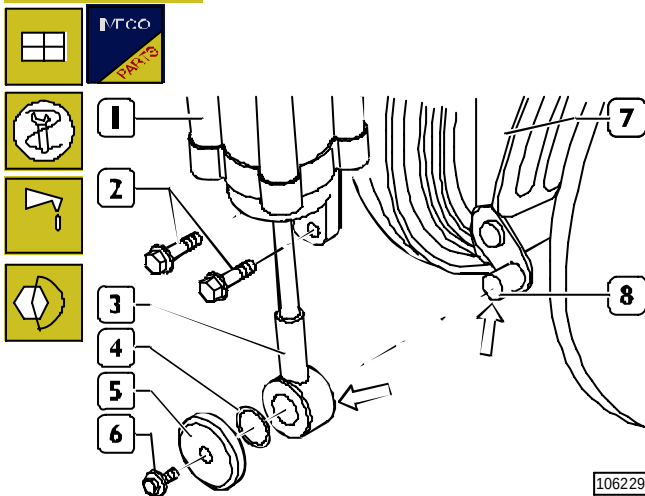

Lubricate bushing (→) of tie rod (3) and pin (→) of lever (8) with lithium-based Castrol LM GREASE type and reconnect actuator (1) to turbocompressor (7) operating as follows. Connect tie rod (3) to lever (8). Mount new ring (4), mount disk (5) and screw up screw (6). Screw up screws (2) securing actuator (1) to turbocompressor (7). Tighten screws (2 and 6) at 25 Nm torque.

Checking actuator travel


Figure 247

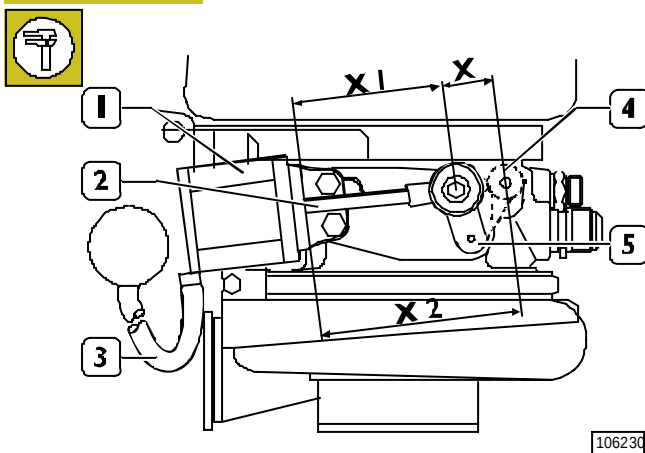

Check travel X of tie rod (2) of actuator (1) operating as follows. Measure distance X1 between actuator (1) and cross-axis of eyelet (4). Apply, to fitting of actuator (1), piping (3) for compressed air feed provided with pressure regulator. By using the pressure regulator, introduce, into actuator (1) compressed air slowly modulating it, from 0÷3,5 bar, until lever (5) is taken to its end of travel. Measure again the distance between actuator (1) and cross-axis of eyelet (4) dimension X2. Travel X of tie rod (2) of actuator (1) is given by following subtraction $X = X2 - X1$ and must result to be equal to 11.5 ± 0.5 mm.


Cleaning turbine body

Figure 248

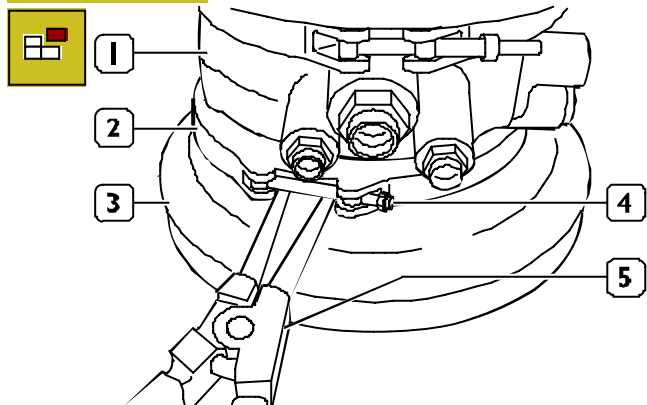

Mark mounting position of clamp (2) on central body (1). On threading and nut (4), apply antioxidant spray lubricant and, operating on nut (4), loosen clamp (2). Slightly rotate clamp (2) using pliers (5). Mark mounting position of turbine body (3) on central body (1).

Figure 249

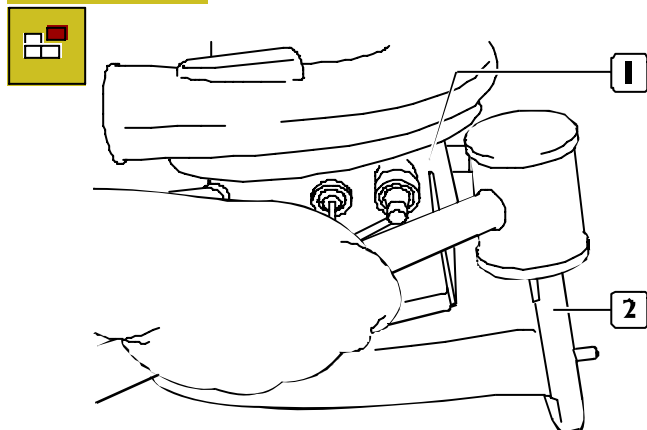


By a copper hammer, beat on two opposite points (~180°) on turbine body (2) to separate turbine body from central body (1).

NOTE In operation, take particular care to avoid damaging turbine rotor.

After dismounting turbine body, check variable geometry movement as described in relating chapter; where improvement in movement is not found with respect to previous check, replace turbocompressor.

Aquila Trucks Centres


Figure 250

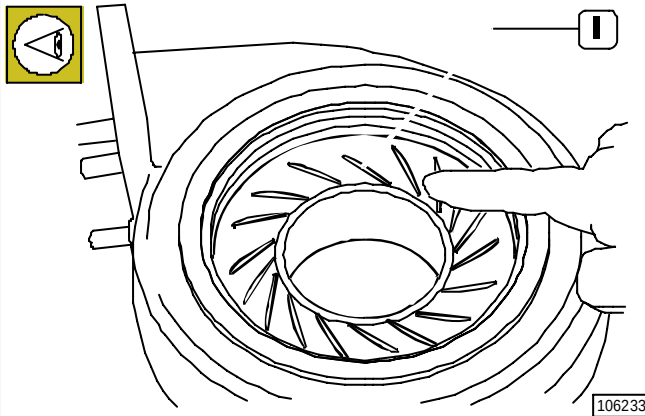

Accurately clean slot ring (1) and area around turbine body from carbonaceous deposits and check that the ring moves freely, otherwise, replace turbocompressor.


NOTE Any small cracks between slots and ring can be accepted, because they do not impair turbocompressor operation conditions.

Figure 251

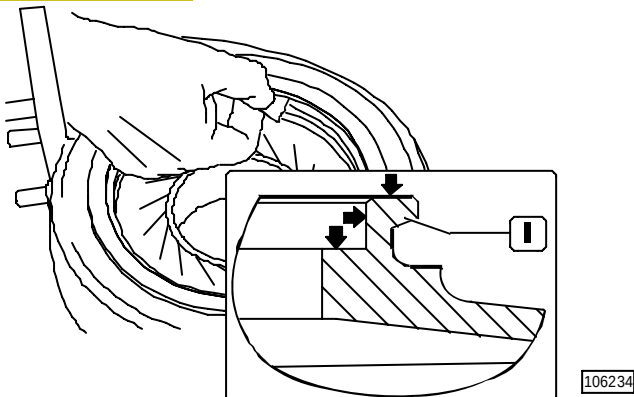


By suitable scraper and abrasive paper, accurately clean surfaces (→) of turbine body (1) from carbonaceous deposits, taking care to avoid damaging the surfaces.

Figure 252

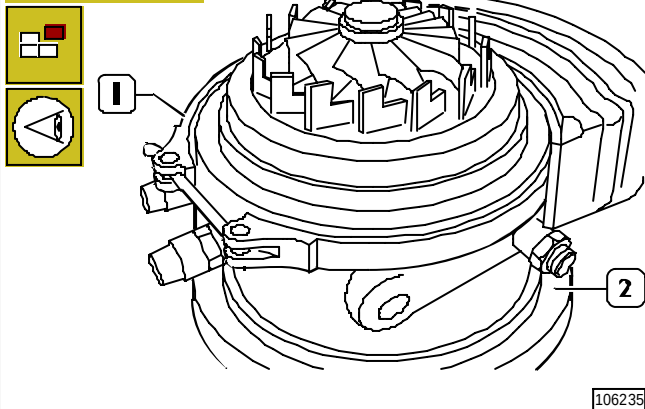

Dismount clamp (1) from central body (2) and check that the clamp does not result to be damaged; otherwise replace the clamp.


Figure 253

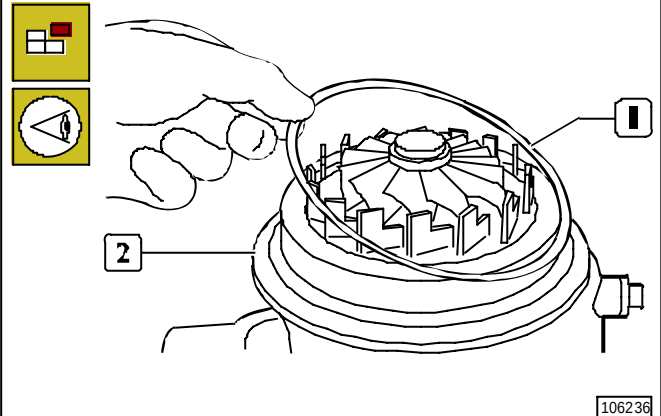

Dismount seal ring (1), external with respect to central body (2).

Accurately clean seal ring (1) and check that the ring does not result to be damaged; otherwise replace the ring.

Figure 254

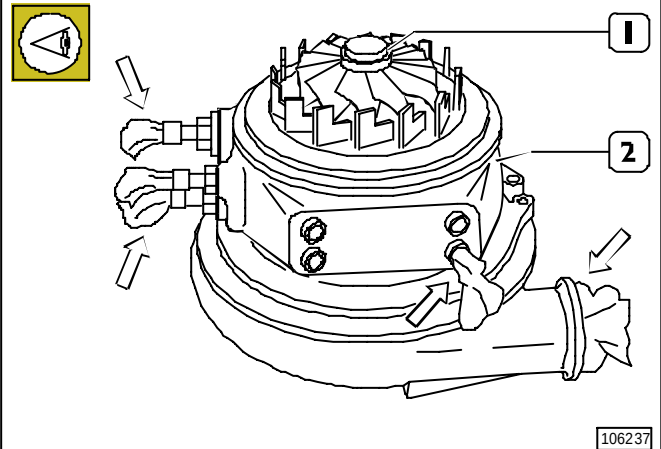

Check turbine rotor (1); there must not be found: carbonaceous deposits, deformation, cracks, blade scoring; also, turbine must turn freely.

By comparator, check clearance of turbine rotor stem (1); clearance must result to be:


- axial clearance: 0.051 ± 0.152 mm
- radial clearance: 0.381 ± 0.533 mm.

Where either clearance values over above ones or any one of above mentioned faults are found, replace turbocompressor.

NOTE Before cleaning turbine side central body, properly protect oil, water and air inlets and outlets (→) in order to prevent dirt or foreign bodies from entering turbocompressor.

Aquila Trucks Centres

Figure 255

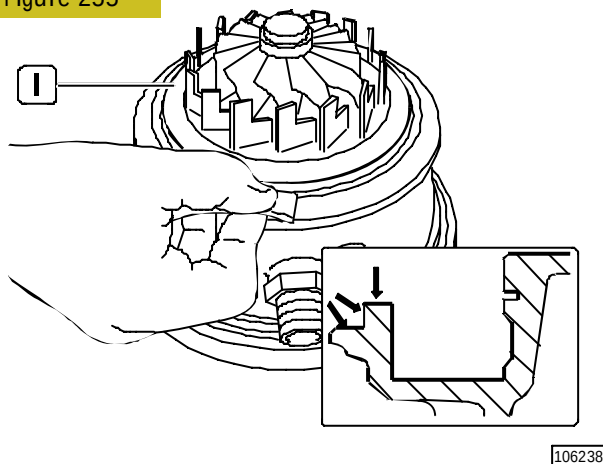


By suitable scraper and abrasive paper, accurately clean surfaces (→) of central body (1) from carbonaceous deposits, taking care to avoid damaging the surfaces and variable geometry ring.

Then, with compressed air, clean variable geometry surfaces and ring from removed residues.

Check again, as described in relating chapters:

- variable geometry movement;
- actuator;
- actuator travel.

Figure 256

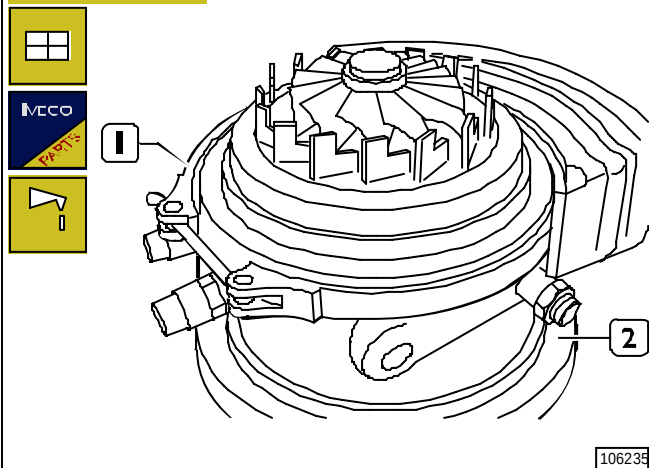


Position clamp (1) on central body (2)

NOTE Should clamp (1) be replaced with an integrated heat guard, a new actuator has to be mounted with an integrated heat guard at the place of existing one.

Position accurately cleaned seal ring on central body.
Apply a thin layer of antiscuff paste on cleaned matching surfaces: central body / turbine body.

Figure 257

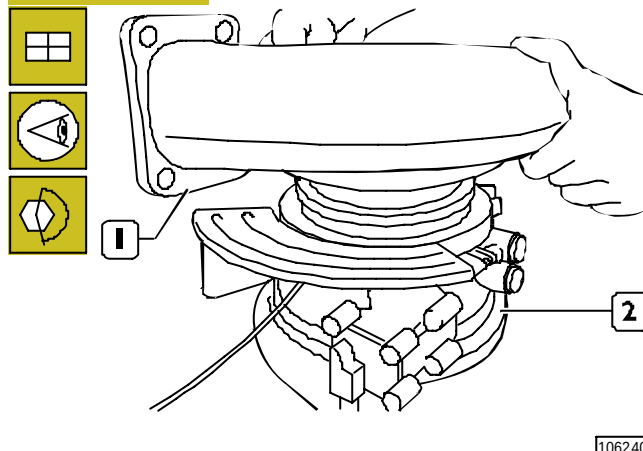

Mount turbine body (1) on central body (2) taking care to avoid damaging turbine rotor and align turbine body variable geometry slot ring. Do not force mounting operation: in case of jamming, it might damage variable geometry with consequent regulation system faulty operation.

Once mounting has been completed, make sure that turbine body results to be matched correctly on central body. Position turbine body on central body and clamp on central body in such a way that marks, made on dismounting, are matching.

Tighten nut clamping the clamp at 11.3 Nm torque.


Check again, as described in relating chapters:

- actuator;
- actuator travel.

Aquila Trucks Centres

542410 Turbocharger HOLSET HX 50W

Figure 258

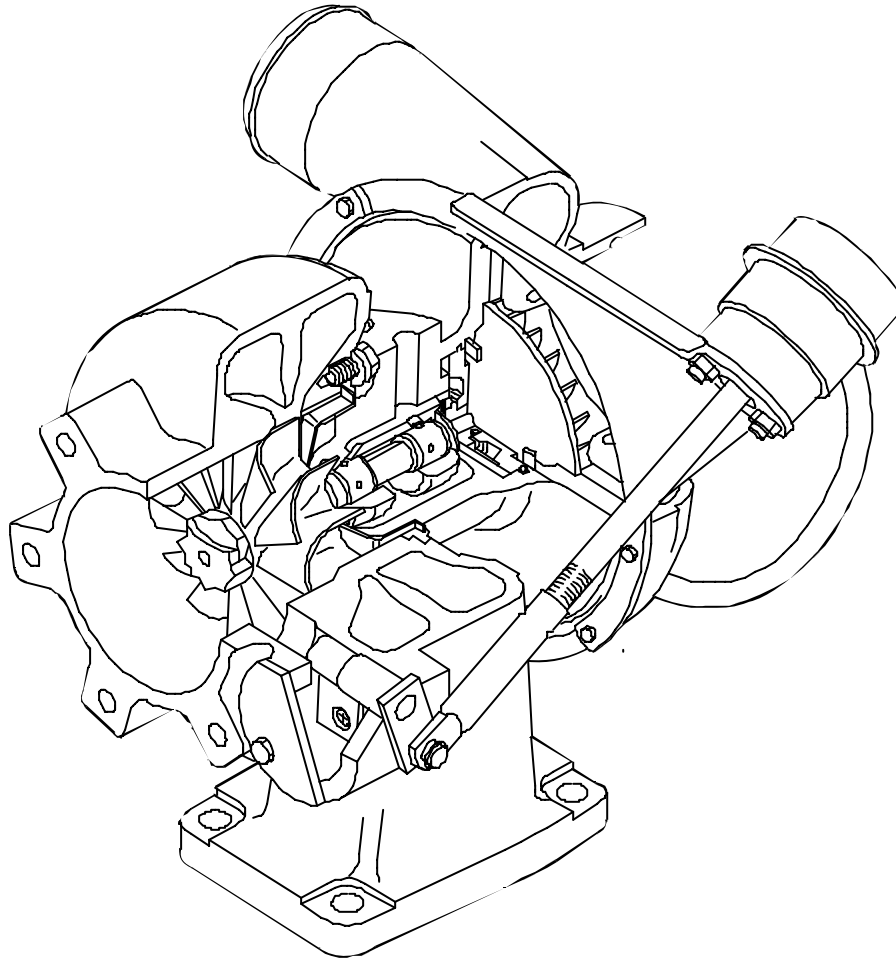

71766

The turboblower is of the type equipped with pressure relief valve.

It is essentially made up of:

- a central body which incorporates a shaft supported by bushings at the opposite ends of which the turbine impeller and the compressor rotor are fitted;
- a turbine body and a compressor body, both of which mounted on the central body end;
- an overpressure relief valve fitted to the turbine body. The function of this valve is to choke the exhaust gas outlet, by conveying part of the gas directly into the exhaust pipe, when the boosting pressure downstream the compressor reaches the calibration value.

REPAIRS


NOTE If anomalous engine operation is found, which is due to the boosting system, it is advisable that you check the efficiency of seal gaskets and the fastening of connecting sleeves prior to carrying out the checks on the turboblower. Also check for obstructions in the sucking sleeves, air filter and radiators. If the turboblower damage is due to lacking lubrication, check that the oil circulation pipes are not broken or clogged; if so, replace them or eliminate the trouble.

**54249 WASTEGATE
Wastegate check and calibration**

Cover the air, exhaust gas and lubricating oil inlets and outlets. Make a thorough cleaning of the turboblower outside by using an anti-oxidant and corrosion-proof fluid.

Aquila Trucks Centres

Figure 259

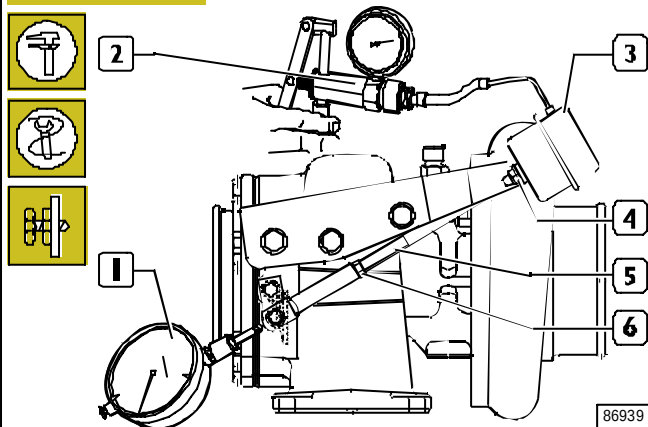

Disconnect the pipe from wastegate valve (3) union, then fit device 99367121 (2) pipe to the union.


Place the magnetic-stand comparator (1) tip onto tie rod (4) end, then reset the comparator.

Use device 99367121 (2) to let compressed air (pressure: 1.75 ± 0.01 bar) into the valve body (3), then make sure that such value remains unchanged over the entire duration of the check. Otherwise, replace the valve, as described in the relevant chapter.

Under the above conditions, the tie rod will have to make a travel of $0.43 \div 1.95$ mm.

If a different value is found, loosen nut (6) and properly rotate tie rod (5) such that tie rod travel at above indicated pressure results to be 0.86 to 1.40.

Figure 260

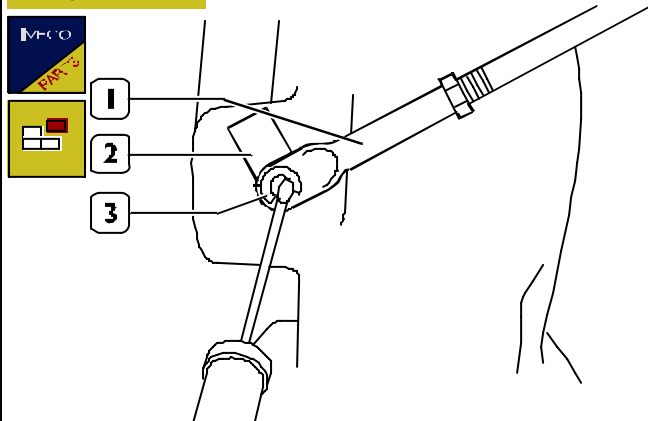


If the wastegate valve (3, Figure 259) turns out to be stuck, disconnect tie rod (1) from lever (2), by removing snap ring (3).

Use device 99367121 (2, Figure 259) to convey weak pressure into the valve body (3) again, to check whether the valve is stuck. If so, replace valve (3, Figure 259) as described in the relevant chapter.


Otherwise, check of the efficiency of the mechanism as follows.

Figure 261

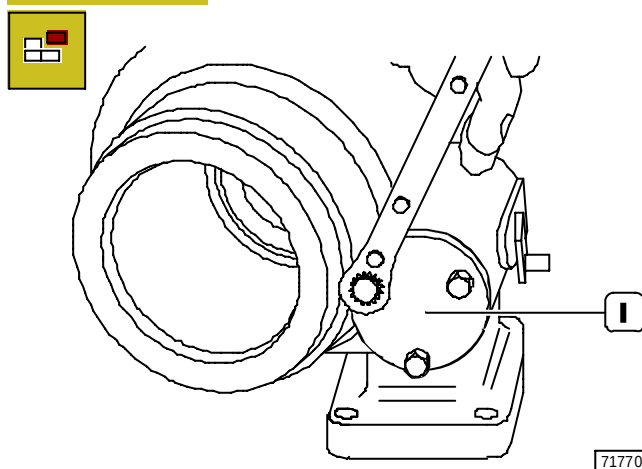

Take off the cover (1) to be able to inspect the turbine mechanism governed by the actuator.

Figure 262

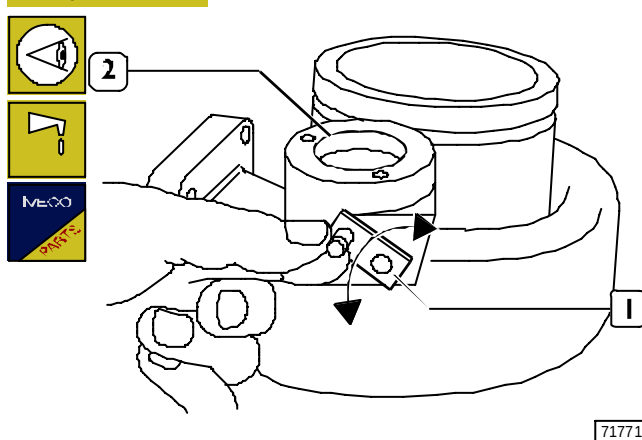

Check through the inspection hole (2) that the internal linkage control (1) is not stiff or seized; if it is, then lubricate it. And if the defect is not eliminated, replace the turbine.

Replacing the wastegate valve (see Figure 260)

Take off clip (3) securing tie rod (4) to lever (2), then remove valve (4, Figure 259) from the turboblower by taking off fastening nuts (4, Figure 259).

Fit the new valve by reversing the order of disassembling operations, then adjust the tie rod stroke as described in the relevant chapter.


NOTE Before fitting the turbocharger to the engine, it is necessary to fill the main body with lubricating oil.

Aquila Trucks Centres

FUEL SYSTEM

Fuel is supplied via a fuel pump, filter and pre-filter, 6 pump-injectors governed by the camshaft via rocker arms and by the electronic control unit.

Figure 263

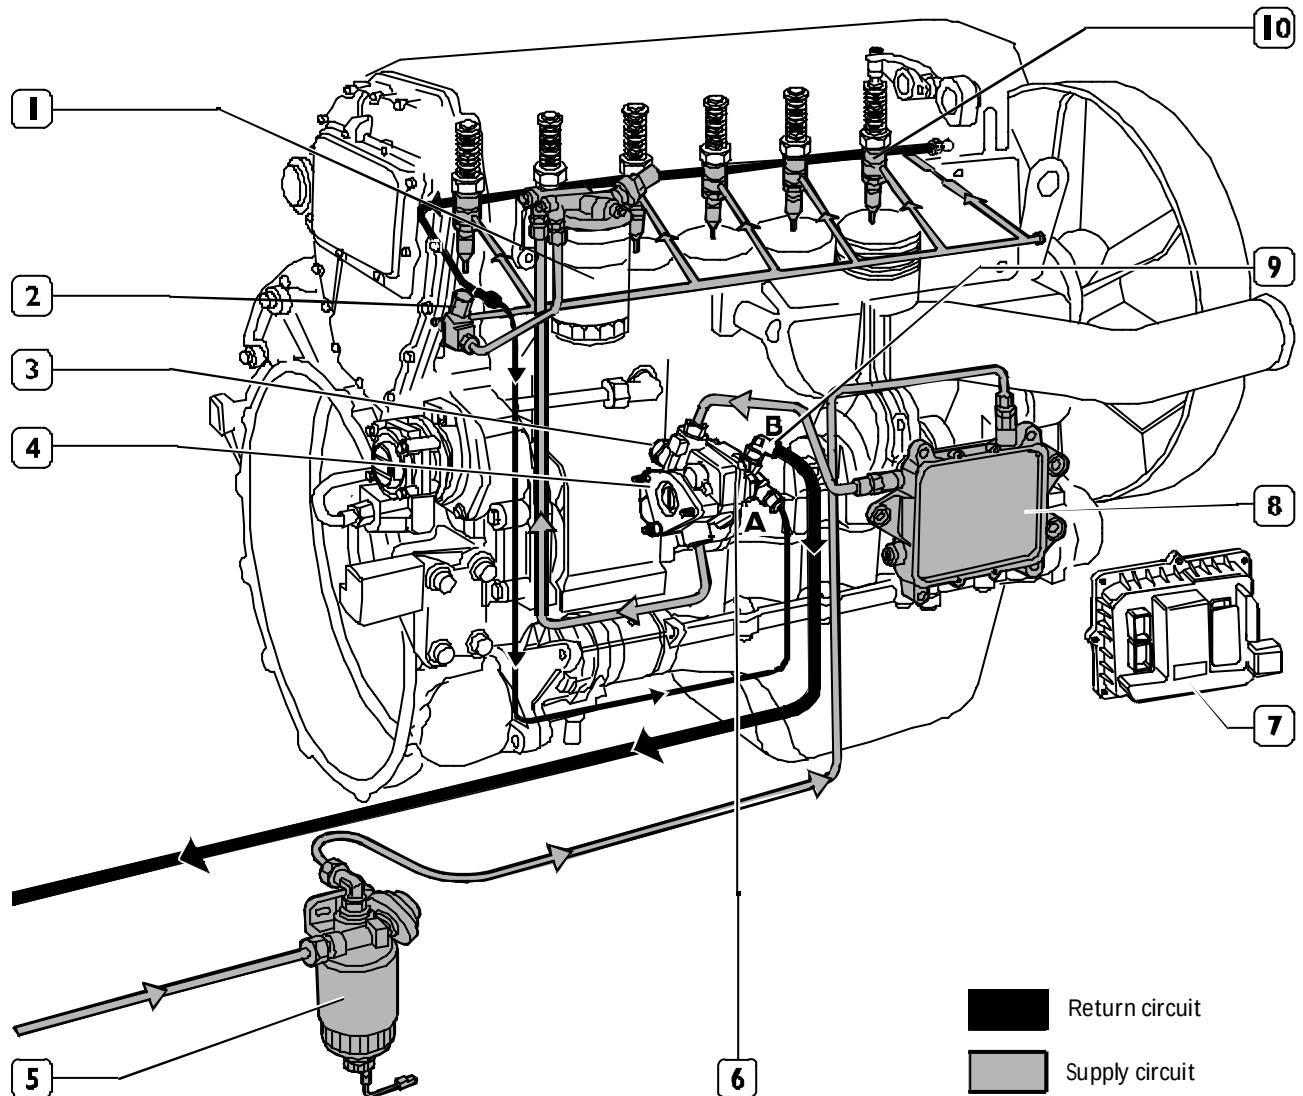

108847

ENGINE FEED SCHEME


1. Fuel filter - 2. Pressure damper - 3. Pressure control valve (start of opening at 5 bar) - 4. Feed pump - 5. Fuel pre-filter with priming pump - 6. Valve, to recirculate fuel from injectors, integrated in feed pump (start of opening at 3.5 bar) - 7. Central unit - 8. Heat exchanger - 9. Overpressure valve to return fuel to tank (start of opening at 0.2 bar) - 10. Pump injectors

A. Fuel arriving at injectors - B. Fuel returning to tank

Aquila Trucks Centres

Overpressure valve


Figure 264

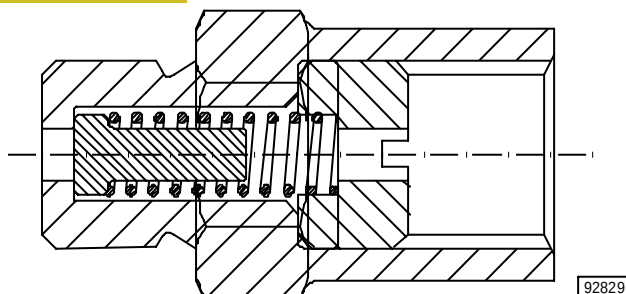

An overpressure valve is a single-acting valve, calibrated to $0.2 \div 0.3$ bar, placed on the piping that returns fuel to tank. The overpressure valve prevents fuel duct in cylinder head from emptying with engine stopped.

Feed pump

Figure 265

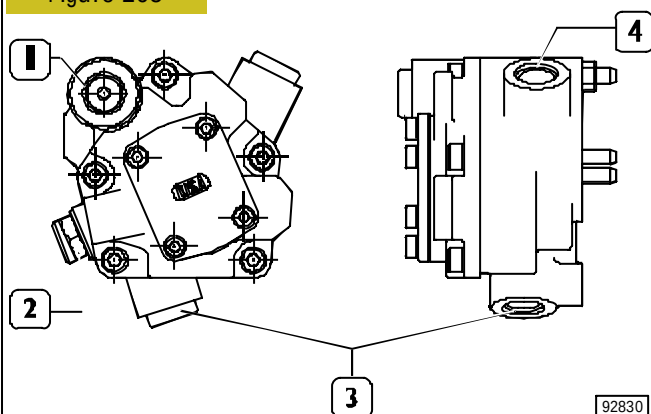

Engine feed pump for vehicles 4x2 - 4x4 - 6x4

1. Overpressure valve - 2. Delivering fuel to injectors -
3. Sucking in fuel - 4. Pressure control valve

Pump performances					
Pump rotation speed (rpm)		2600	600	170	100
Minimum flow rate (l/h)		310	45	12	
Test conditions	Negative pressure on aspiration (bar)	0.5	0.3	0.3	0.3
	Pressure on delivery (bar)	5	3	0.3	0.3
	Test liquid temperature (°C)	30	30	30	30
	Test liquid	ISO 4113			


Field of use	
Pump rotation speed (rpm)	2600
Overrunning rotation speed (max 5 min) (rpm)	4100 max
Diesel oil temperature (°C)	-25/+80
Filtering rate on aspiration (micron)	30
Negative pressure on aspiration (bar)	0.5 max

Pressure control valve	
Valve calibration	$5 \div 5.8$

Injectors return valve	
Valve calibration	$3.4 \div 3.8$

Injector-pump

Figure 266

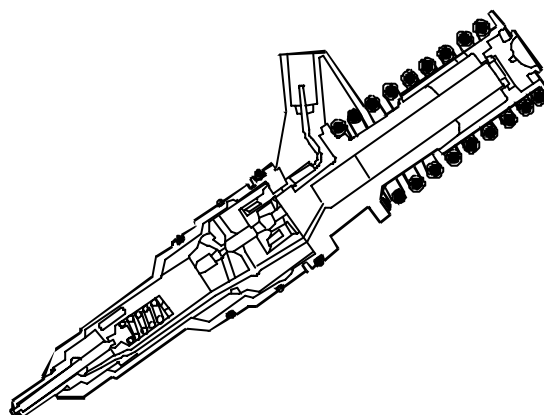


INJECTOR SECTION

The new pump injectors are capable, thanks to the higher injection pressure, of atomizing the fuel in the combustion chamber to a greater extent, thus improving combustion and therefore reducing the polluting exhaust emissions.

Pressure damper

Figure 267

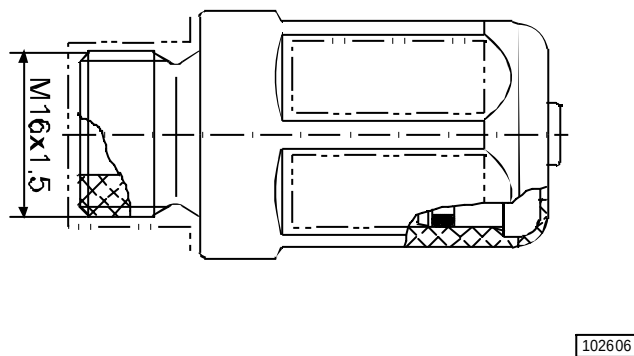

FUEL PRESSURE DAMPER

The fuel pressure damper located on the delivery pipe between the fuel filter and the cylinder head is designed to damp counter-pressure increases in the delivery pipe and filter due to injection pressure surges.

Aquila Trucks Centres

Hydrocar power take-off
on timing system

	Page
HYDROCAR POWER TAKE-OFF ON TIMING SYSTEM - (P.T.O. OPTIONAL) .	249
- Description	249

Aquila Trucks Centres


Aquila Trucks Centres

HYDROCAR POWER TAKE-OFF ON TIMING SYSTEM - (P.T.O. OPTIONAL)**Description**

It is a power takeoff based on one axle, with gear movement and clutch engagement which is set in motion by the timing gears regardless of the vehicle clutch. It can be used with the vehicle stationary or travelling and continuously; it can be engaged/disengaged with the engine on.

The power takeoff can be fitted for the direct pump coupling, or with a flange for the universal shaft.

Figure 1

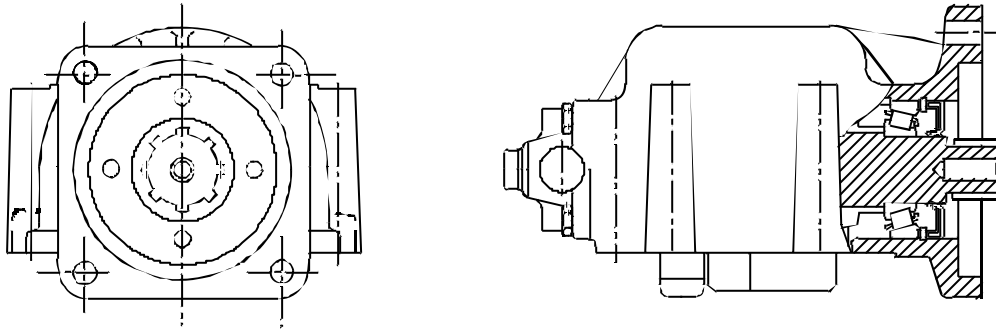

108621

Output rev number/engine rev number ratio	1.14
Output nominal torque (Nm)	600
Foreseen duration with nominal torque (hours)	500 (with 1500 rpm)
Rotation direction (compared to the engine)	Opposite
Mounting side (vehicle travelling direction)	Top
Control system	Air

Aquila Trucks Centres

Aquila Trucks Centres

Denox System 2

	Page
DENOX2 SYSTEM	253
- General remarks	253
- Tank	255
- AdBlue fluid level gauge control	255
- Switch valve	255
- Pump module	256
- Dosing module	256
- Catalyst	256
- Exhaust gas temperature sensor	257
- Humidity detecting sensor	258

Aquila Trucks Centres

Aquila Trucks Centres

DeNO_x2 SYSTEM**General remarks**


In order to keep the exhaust emission values of nitric oxides (NO_x) within the limits prescribed by the Euro 4 standard, with low fuel consumption, a system for post-processing of the above substances found in exhaust gas has been fitted to the vehicles.

This system essentially consists of an electronic-control oxidizing catalyst.

The system converts, through the SCR (Selective Catalytic Reduction) process, nitric oxides (NO_x) into inert compounds: free nitrogen (N₂) and water vapour (H₂O).

The SCR process is based on a series of chemical reactions, which leads, due to ammonia reacting with exhaust gas oxygen, to a reduction of nitric oxides (NO_x) found in exhaust gas.

Figure 1

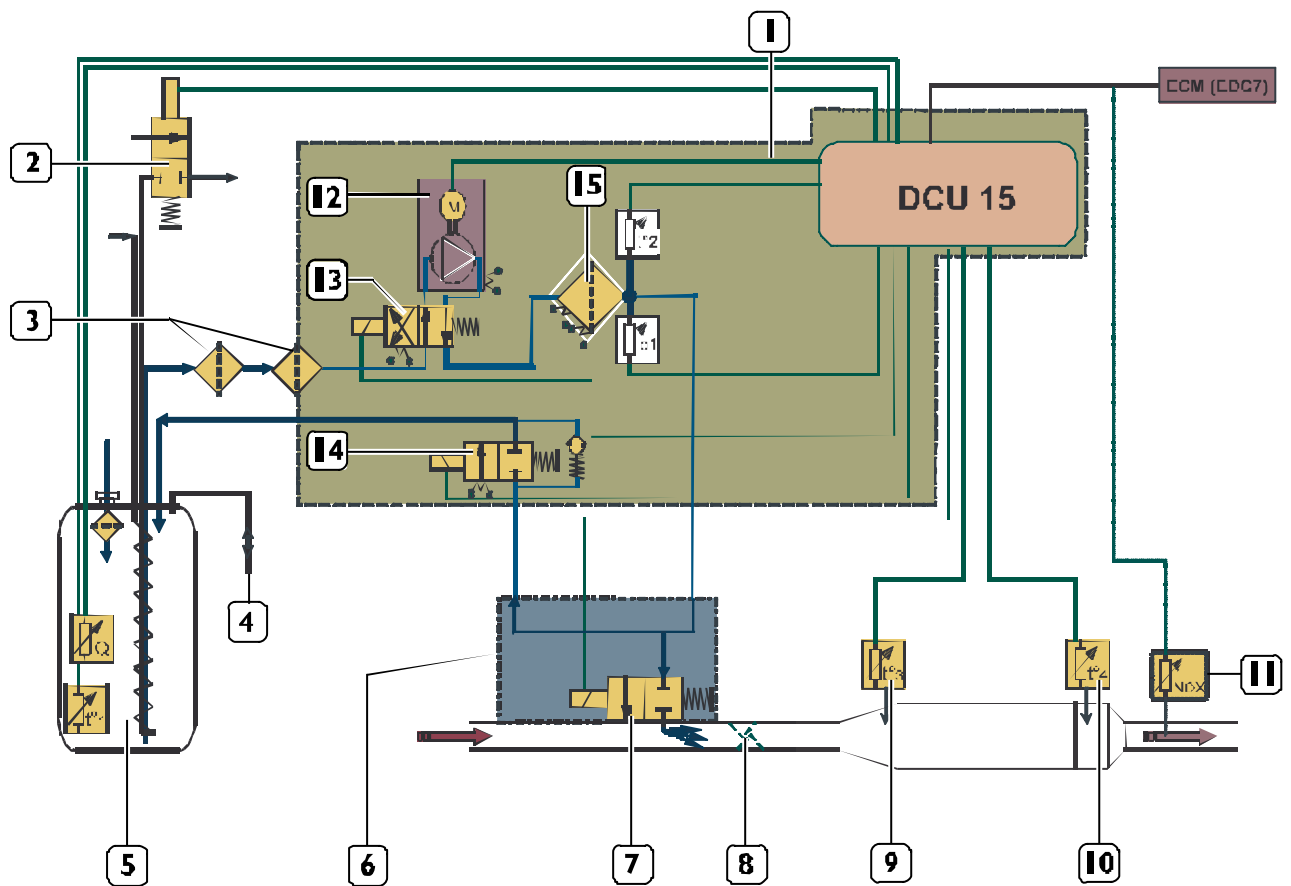

116403

1. Pump module - 2. Tank heating valve - 3. Pre-filters - 4. Tank vent pipe - 5. Ad Blue tank - 6. Dosing module -
 7. Dosing valve - 8. Mixer - 9/10. Exhaust gases temperature sensors - 11. NO_x detection sensors (*) -
 12. Diaphragm pump - 13. Multi-ways magnetic valve - 14. Cooling valve - 15. Main filter

* Future application

Aquila Trucks Centres

The system is essentially made up of:

- a tank (10) for reagent solution (water - urea: AdBlue), equipped with level gauge (9);
- an H₂O switch valve (1);
- pump module (8);
- a mixing and injection module (2);
- catalyst (5);
- two exhaust gas temperature sensors (3, 4) on catalyst (5);
- a moisture detection sensor (7) fitted on the engine air intake pipe downstream from the air cleaner.


SCR system is electronically managed by DCU (Dosing Control Unit) incorporated into pump module (10); depending on engine rpm, supplied torque, exhaust gas temperature, quantity of nitrogen oxides and humidity of air sucked in, the control unit regulates the flow rate of AdBlue solution to be let into the system.

Pump module (8) takes reagent solution out of tank (10), then sends it under pressure into measuring out module (2); finally, the reagent solution is injected into the exhaust pipe upstream of catalyst (5).

The first stage of the process takes place in the first part of the catalytic converter: due to the effect of the exhaust gas temperature, the reagent solution evaporates instantly and is hydrolysed to ammonia (2NH_3) and carbon dioxide (CO_2). At the same time, the solution evaporates to bring down the exhaust gas temperature to levels close to the optimum temperature required for the process.

Exhaust gases containing ammonia at the temperature required for the reaction enter the catalytic converter, where the second stage of the process takes place: the ammonia reacts with the oxygen in the exhaust gases and is converted to free nitrogen (N_2) and steam (H_2O).

Figure 2

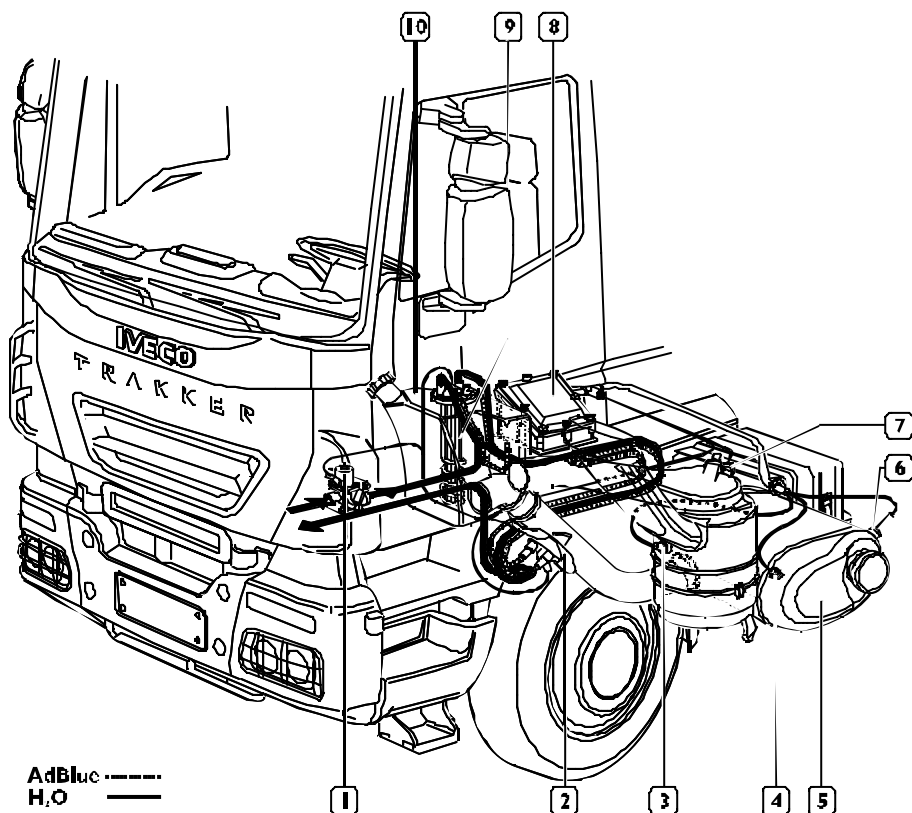

POSITION OF SCR SYSTEM COMPONENTS ON THE VEHICLE


1. H₂O valve - 2. By-pass valve - 3. Inflow exhaust gas temperature sensor - 4. Output exhaust gas temperature sensor -
 7. Sucked air humidity and temperature sensor - 5. Catalyst - 6. Nitric oxide detecting sensor (*) -
 8. Pump module - 9. Level gauge - 10. Water-urea solution (AdBlue) tank

* Future application

Aquila Trucks Centres

Tank

Figure 3

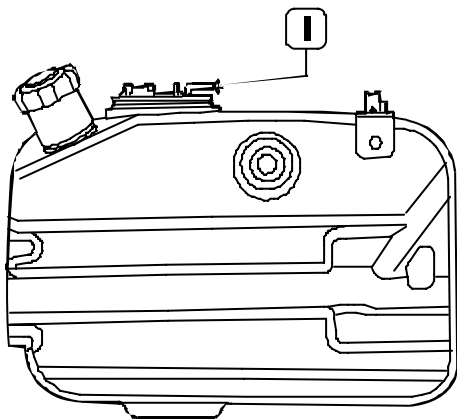


102295

The tank equipped with level gauge control (1) contains the reducing substance required for the SCR process, which consists of a 35%-urea and water solution called AdBlue.

AdBlue fluid level gauge control


Figure 4

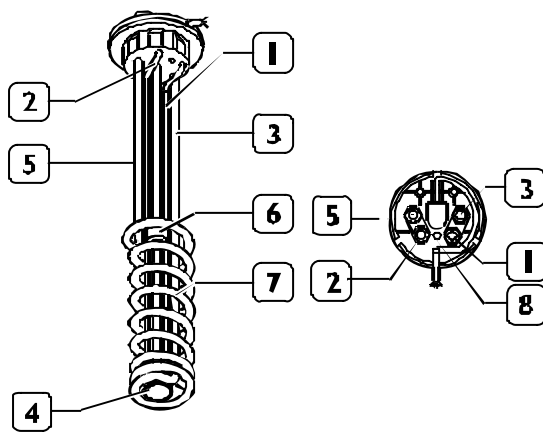

116181

1. AdBlue liquid discharge line - 2. AdBlue fluid return pipe - 3. Engine cooling hot fluid inlet pipe - 4. AdBlue (NTC) temperature sensor - 5. Engine cooling hot fluid outlet pipe - 6. Float (level sensor) - 7. AdBlue fluid heating coil - 8. AdBlue air vent

Figure 5

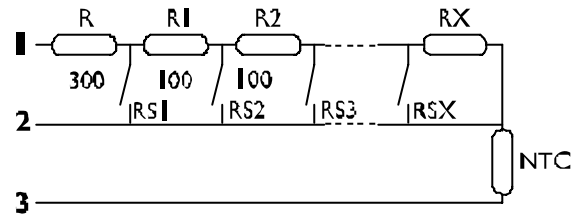

102308


FUNCTIONAL WIRING DIAGRAM

The AdBlue fluid level gauge control consists of a device made up of a set of resistors, a float, a NTC temperature sensor, and a coil used to heat the fluid under low temperature conditions.

It informs the control unit of any current change due to the resistor determined by the float position with respect to the AdBlue fluid level.

Switch valve

Figure 6

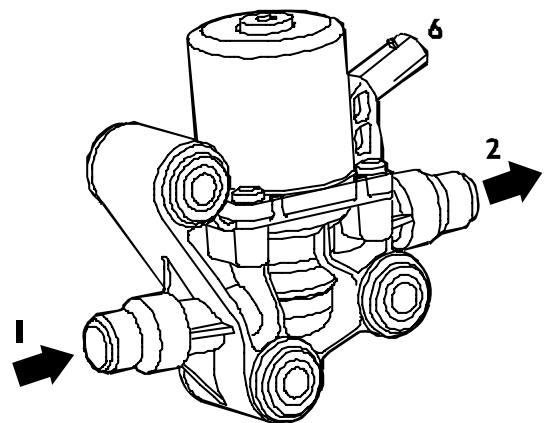

108127

FUNCTIONAL WIRING DIAGRAM

1. Coolant inlet - 2. Coolant outlet - 6. Electrical connection


The valve, which is a Normally Closed type valve, allows AdBlue tank to be heated by engine coolant.

The NTC (Figure 5) temperature sensor controls the by-pass valve which closes or opens (depending on temperature) the passage of the engine cooling hot fluid into the heating coil.

Aquila Trucks Centres

Pump module

Figure 7

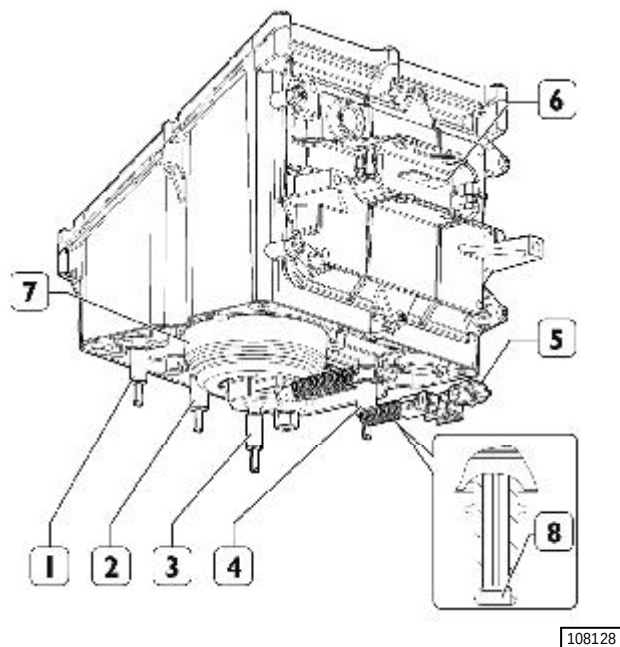


1. Pipe of AdBlue return to the tank - 2. Pipe of AdBlue return from measuring out module - 3. AdBlue solution outlet - 4. AdBlue solution inlet - 5. Electrical connection - 6. DUC (Dosing Control Unit) connector - 7. Filter - 8. Pre-filter.

108128

Dosing module

Figure 8

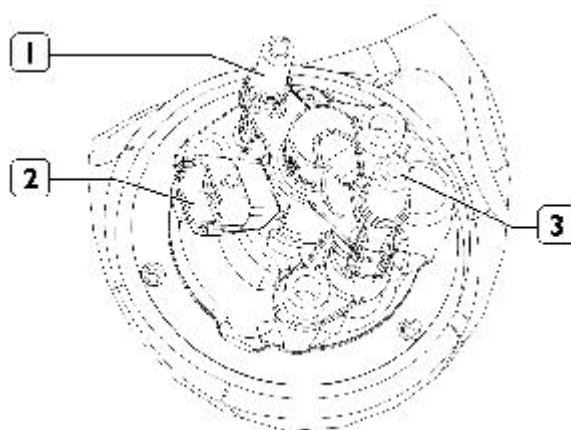


108129

1. AdBlue inlet - 2. Electrical connection - 3. AdBlue outlet

Its task is to measure out the AdBlue solution to be sent to the exhaust pipe upstream of catalyst.

Catalyst

Figure 9

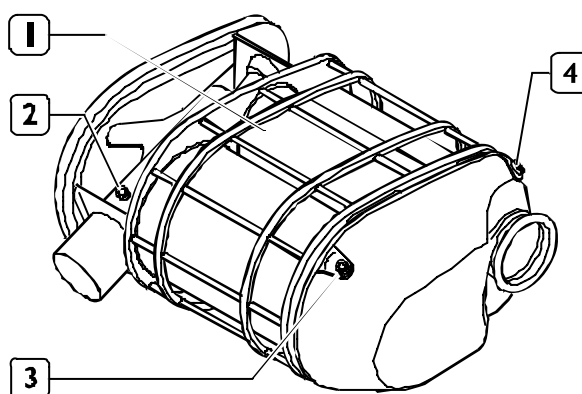

102301

Catalyst (1), equipped with sound-proofing material, replaces the exhaust silencer.


Inside the catalyst, the exhaust gas nitric oxides are, by reacting with ammonia, converted into free nitrogen and water vapour.

Temperature sensors (2 and 3) and nitric oxide detecting sensor (4) are fitted onto catalyst (1).

Aquila Trucks Centres


Exhaust gas temperature sensor

Figure 10

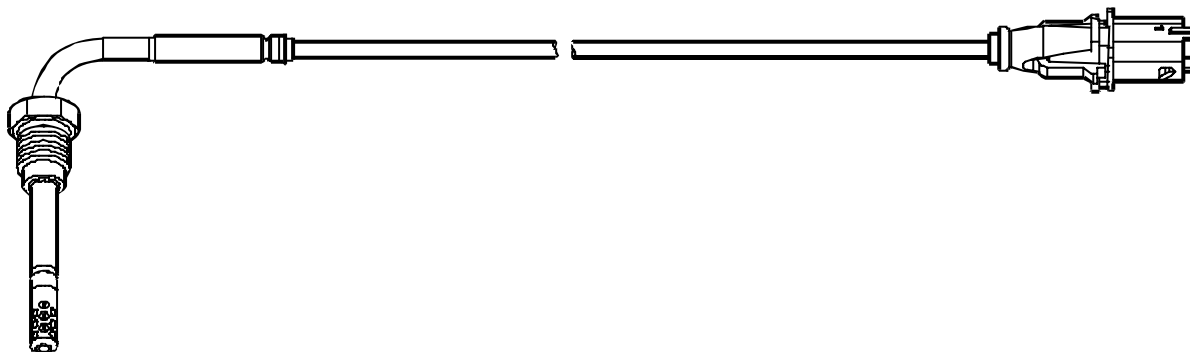

102303

Figure 11

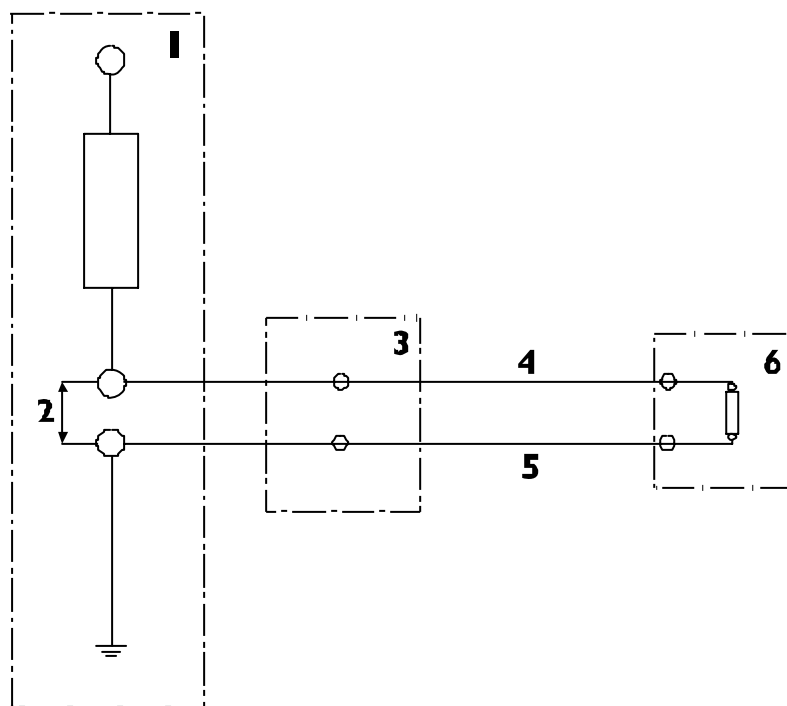

102304

FUNCTIONAL WIRING DIAGRAM


1. Supply voltage - 2. Variable output voltage - 3. Connector - 4. Signal cable (grey) - 5. Earth cable (white) - 6. Sensor.

The function of this sensor is to send the control unit the catalyst inlet and outlet exhaust gas temperature values required to calculate the amount of urea to be injected into the system.

Aquila Trucks Centres

Humidity detecting sensor

Figure 12

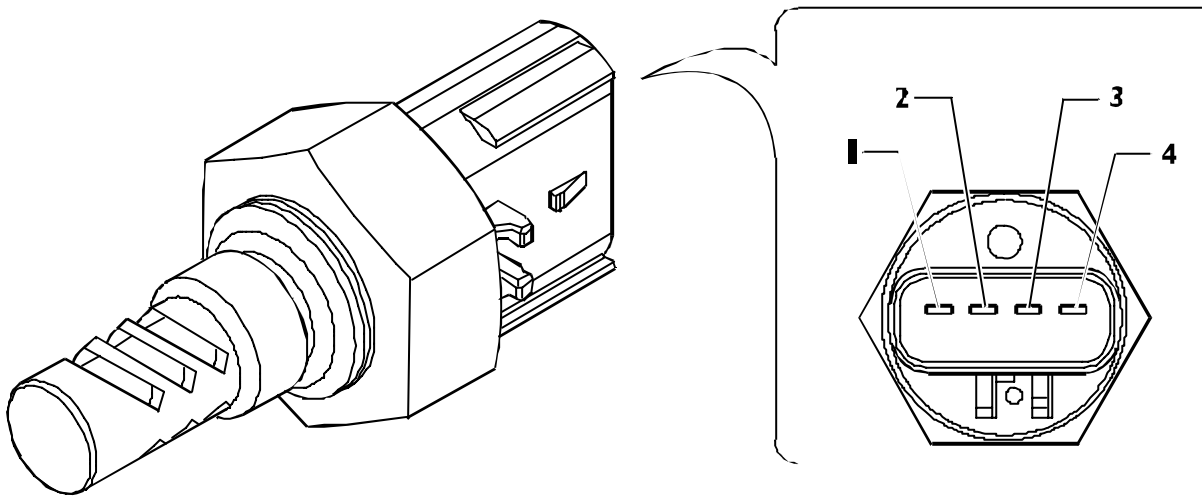


102311

1. Temperature - 2. Earth - 3. Humidity percent value - 4. Power supply.

This sensor is located on the air filter output conveyor, and is used to inform the control unit of the amount (percentage) of humidity found in sucked air, to determine the calculation of nitric oxide emissions.

Figure 13

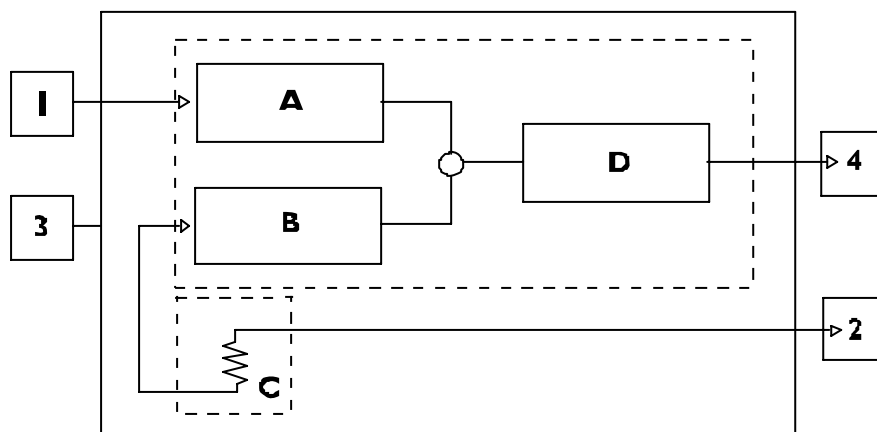

102312

ELECTRIC BLOCK DIAGRAM

1. Earth - 2. Temperature - 3. Power supply unit - 4. Humidity percent value - A. Sample frequency generator - B. Reference oscillator - C. NTC temperature sensor - D. Amplifier lowpass filter

Aquila Trucks Centres

Diagnosis

	Page
DIAGNOSIS	261
- Diagnosis Instruments	261
- Diagnosis on Cluster	263
- DTC - FMI error codes	265
- Trouble shooting according to symptoms	289

Aquila Trucks Centres

Aquila Trucks Centres

DIAGNOSIS

Fault diagnosis comprises two sections:

- The first one, organized by error codes (DTC-FMI), concerns faults that may be identified by the EDC control unit directly. These faults are mainly of an electric - electronic - pneumatic nature.
- The second one, organized by symptoms, describes the possible faults the electronic control unit cannot identify directly. These faults are mainly of a mechanical - pneumatic nature.

SECTION 1

EDC system trouble shooting can be either by Cluster or diagnosis tools Modus, IT 2000 and E.A.SY.

Diagnosis with the cluster makes it possible to estimate the situation of faults in the system in advance, while the diagnosis instruments are essential to perform thorough diagnosis and operate on the single faults correctly.

Each single instrument displays the diagnosis and repair help.

Diagnosis Instruments

MODUS (Maintenance and Diagnostic System)

A computerized fault-diagnosis station dedicated to diagnosing the brake systems, air suspensions, engines and systems controlled electronically.

The station is equipped with auxiliary functions, such as: programming electronic control units, consulting the spare parts catalogue and service time schedules.

The vehicle has a 30-pin diagnosis socket to interface with the instrument.

IT 2000 (IVECO Electronic Tester)

This makes it possible to take immediate action on the vehicle, identifying it with the chassis number.

It saves the results of diagnostics actions performed.

It can be used as a portable Personal Computer, too, being fitted for remote diagnosis.

By using MODUS as the mother station it is possible to update and configure the IT 2000.

IT 2000 interfaces with the vehicle via a 30-pin diagnosis socket.

E.A.SY.


E.A.SY. system allows to simply make the diagnosis and programming of the various electronic central units aboard the vehicle.

E.A.SY. system is made up of ECI module communicating with the electronic central units and of a Panasonic PC.

ECI module, exploiting the Panasonic PC, also allows easy on the road interventions: in particular, thanks to Panasonic PC wireless technologies (e.g. GPRS), diagnostic interventions can be assisted by a remote expert centre.

Aquila Trucks Centres

Figure 1

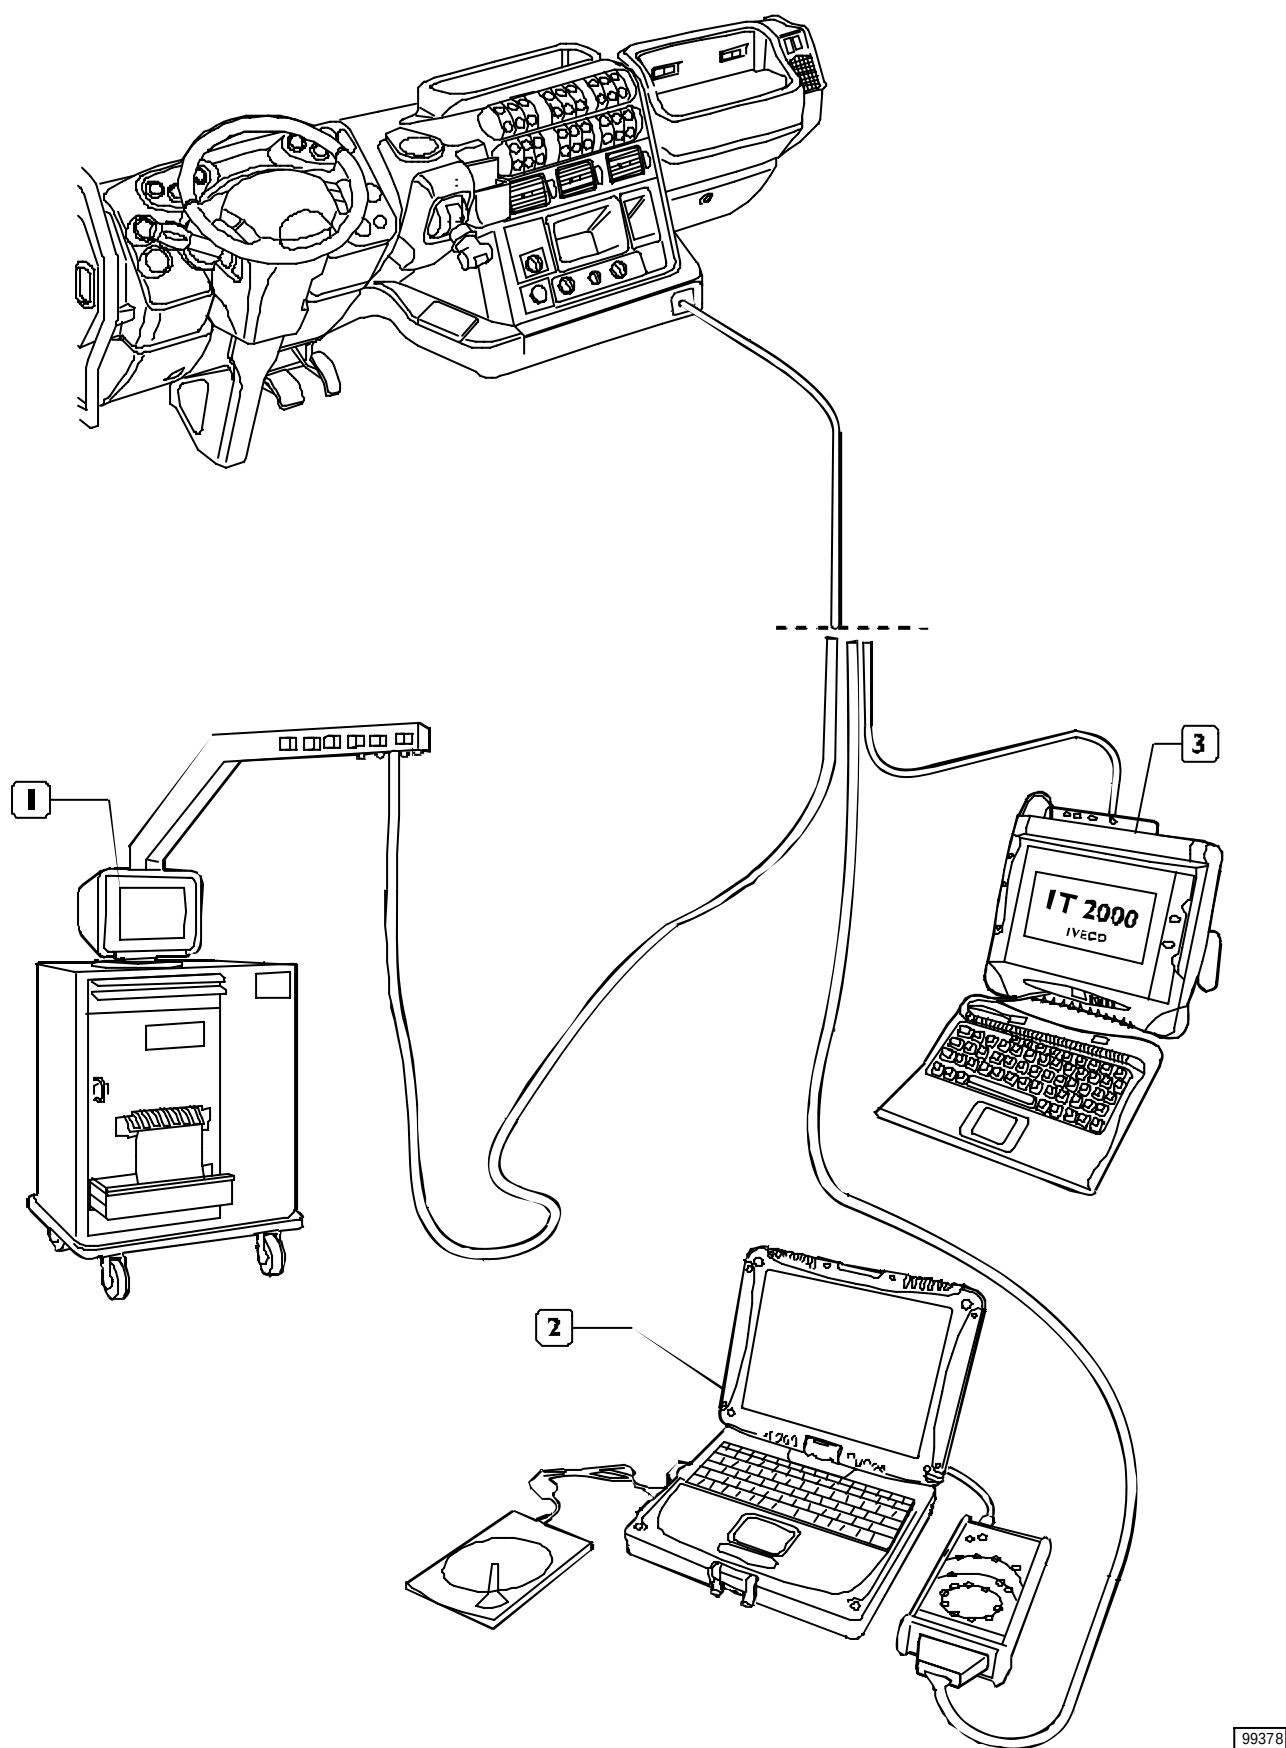

99378


1. Modus - 2. E.A.SY. - 3. IT 2000

Aquila Trucks Centres

Diagnosis on Cluster

Access to diagnostic screen is possible through "page" or " y " " b " keys.

Figure 2

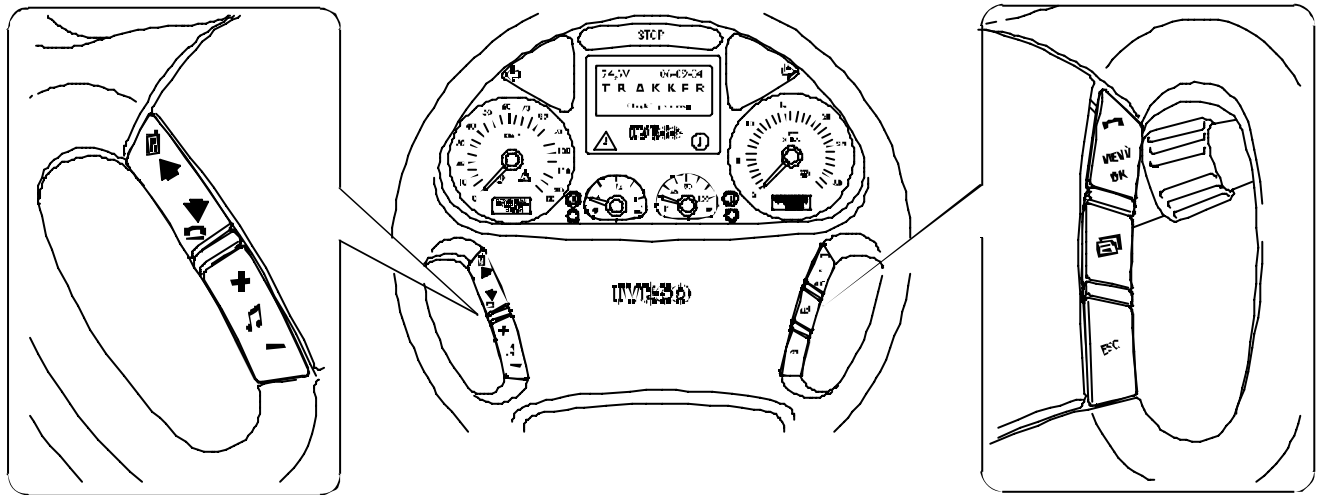

98888



Diagnostics

EDC	20011	30	127
IBC	22133	01	3
ECAS	20308	00	1

98885

Diagnosis information on the cluster is split into 4 columns:

- First column = central unit.
- Second column = central unit address plus fault order number.
- Third column = failure type.
- Fourth column = failure frequency.

The screen shows three error messages at most, but can store up to eight error messages. For displaying any further messages, just operate " y " and " b " keys.

Aquila Trucks Centres

DTC - FMI error codes

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
113		ACCELERATOR PEDAL/ BRAKE PEDAL SUSPECT		Vehicle acceleration very slow. Engine idle speed: 500 rpm.	Accelerator pedal and brake pressed simultaneously (for too long); Accelerator pedal blocked or faulty; Incorrect use of vehicle.	Check the accelerator pedal signal and pedal mechanical movement.				
116		CLUTCH SIGNAL SUSPECT		The parameter reading shows that the clutch is pressed.	Clutch switch faulty or wiring problems in pedal.	Check clutch pedal switch and wiring.				
117		BRAKE PEDAL SIGNAL ERROR		Slight power reduction	Main and secondary brake switch not synchronised. One of the two brake pedal switches may be stuck.	Check the synchronisation of both switches (signal) and wiring.				
119		PLAUSIBILITY +15			Possible mechanical problem (in pawl) or electrical problem.	Check wiring.				
121		SPEED LIMITER W/ LIGHT		Warning light permanently off.	Short circuit or defective wiring.	Check wiring.				
122		WARNING LIGHT EOBD		Warning light permanently off.	Short circuit or defective wiring.	Check wiring.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
123		EDC LAMP		Warning light permanently off.	Short circuit or defective wiring.	Check wiring.				
124		COLD START LAMP		Warning light permanently off.	Short circuit or defective wiring.	Check wiring.				
125		MAIN RELAY DEFECT		Possible problems during after-run.	Relay short circuit to battery positive or ground.	Check wiring between ECM and battery. Replace relay if necessary.				
126		BATTERY VOLTAGE		Possible problems during after-run.	Alternator or battery defective. Possible wiring problem.	Check wiring. Replace alternator regulator or battery. Replace the alternator if necessary.				
127		ENGINE BRAKE ELECTRO-VALVE		Engine brake not operational.	Relay or wiring short-circuited or interrupted.	Check wiring. Replace relay if necessary.				
128		MAIN RELAY - SHORT CIRCUIT TO BATTERY		Possible problems during after-run.	Relay short circuit to battery positive or ground. Relay may be faulty.	Check wiring between ECM and battery. Replace relay if necessary.				
129		AIR-CONDITIONER COMPRESSOR RELAY		Possible problems during after-run.	Relay short circuit to battery positive or ground. Relay may be faulty.	Check wiring between ECM and battery. Replace relay if necessary.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
12A		RELAIS FOR ENGINE BRAKE VALVE		Possible problems during after-run.	Relay short circuit to battery positive or ground. Relay may be faulty.	Check wiring between ECM and battery. Replace relay if necessary.				
12B		THERMO-STARTER RELAY 1 (HEATER)		Heater not working.	Relay or wiring short-circuited or interrupted.	Check wiring. Replace relay if necessary.				
12C		THERMO-STARTER RELAY 2		Heater not working.	Relay or wiring short-circuited or interrupted.	Check wiring. Replace relay if necessary.				
12E		MANAGEMENT SYSTEM PRE/POST-HEATING (ACTIVE)		Grid heater permanently operating.	Grid heater short circuited to ground.	Check wiring and component.				
131		COOLANT TEMPERATURE SENSOR		No reaction noticeable on behalf of the driver.	Sensor short-circuited or value implausible.	Check the wiring. Replace sensor if necessary.				
132		COOLANT TEMPERATURE SENSOR (TEST)		Slight power reduction.	Operation in extreme environmental conditions or sensor inaccurate.	Ensure the engine is not working in extreme environmental conditions. Check the wiring and the sensor accuracy. Replace sensor if necessary.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
133		AIR TEMPERATURE SENSOR BOOST AIR		Slight power reduction.	Sensor short-circuited or value implausible.	Check the wiring. Replace sensor if necessary.				
134		BOOST PRESSURE SENSOR		No reaction perceivable by the driver. Parameter recovery value: 2700 mbar.	Sensor short-circuited or difference between environmental pressure and turbo pressure implausible.	Check the wiring. Also check the environmental pressure sensor. Replace sensor if necessary.				
135		FUEL TEMPERATURE SENSOR		Slight power reduction.	Sensor short-circuited or value implausible.	Check the wiring. Replace sensor if necessary.				
138		OIL PRESSURE SENSOR		No reaction perceivable by the driver. Parameter recovery value: 3000 mbar.	Sensor short-circuited or value implausible.	Check the wiring and oil level. Replace sensor if necessary.				
13A		OIL TEMPERATURE SENSOR		No reaction perceivable by the driver. Parameter recovery value: coolant temperature value (if intact) otherwise 120 °C).	Sensor short-circuited or value implausible.	Check the wiring. Replace sensor if necessary.				
13C		ATMOSPHERIC TEMPERATURE SENSOR (HUMIDITY?)		No reaction perceivable by the driver. Parameter recovery value: 40 °C.	Sensor short-circuited or value implausible.	Check the wiring. Replace sensor if necessary.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
141		CRANK-SHAFT SPEED		No reaction noticeable on behalf of the driver.	Signal interrupted or wiring problem. Sensor installation may not be correct.	Check wiring and installation. Replace sensor if necessary.				
142		ENGINE WORKING ONLY WITH CAM-SHAFT SENSOR		No reaction perceivable by the driver.	Signal interrupted or wiring problem. Sensor installation may not be correct.	Check wiring and installation. Replace sensor if necessary.				
143		CAM-SHAFT SENSOR		No reaction perceivable by the driver.	Signal interrupted or wiring problem. Sensor installation may not be correct.	Check wiring and installation. Replace sensor if necessary.				
144		FAULT BETWEEN FLY-WHEEL SENSOR AND CAM-SHAFT		No reaction noticeable on behalf of the driver.	Signal interrupted or wiring problem. Flywheel and timing sensor installation may be incorrect.	Check wiring and installation of both sensors.				
145		FAN RELAY		No reaction perceivable by the driver. Fan off.	Short circuit or fan actuator faulty.	Check the wiring and the fan actuator. Replace the actuator if necessary.				
148		AIR-CONDITIONER COMPRESSOR RELAY		Air conditioner permanently off.	Wiring or relay short-circuited.	Check the wiring. Replace relay if necessary.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
149		PRE-HEATING RELAY FUEL FILTER		Filter heater not working.	Wiring or filter heater short-circuited.	Check the wiring. Replace the filter heater if necessary.				
151		INJECTOR CYLINDER 1		The engine runs on 5 cylinders.	Injector no.1 electric trouble.	Check correct tightness to torque of the connectors on the solenoid valve of the injector (1.36 - 1.92 Nm). Check the integrity of the injector coil and replace the injector if defective. If the coil is integral, check the wiring between the solenoid valve and EDC connector.				
152		INJECTOR CYLINDER 2		The engine runs on 5 cylinders.	Injector no.2 electric trouble.	Check correct tightness to torque of the connectors on the solenoid valve of the injector (1.36 - 1.92 Nm). Check the integrity of the injector coil and replace the injector if defective. If the coil is integral, check the wiring between the solenoid valve and EDC connector.				
153		INJECTOR CYLINDER 3		The engine runs on 5 cylinders.	Injector no.3 electric trouble	Check correct tightness to torque of the connectors on the solenoid valve of the injector (1.36 - 1.92 Nm). Check the integrity of the injector coil and replace the injector if defective. If the coil is integral, check the wiring between the solenoid valve and EDC connector.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
154		INJECTOR CYLINDER 4		The engine runs on 5 cylinders	Injector no.4 electric trouble	Check correct tightness to torque of the connectors on the solenoid valve of the injector (1.36 - 1.92 Nm). Check the integrity of the injector coil and replace the injector if defective. If the coil is integral, check the wiring between the solenoid valve and EDC connector.				
155		INJECTOR CYLINDER 5		The engine runs on 5 cylinders	Injector no.5 electric trouble	Check correct tightness to torque of the connectors on the solenoid valve of the injector (1.36 - 1.92 Nm). Check the integrity of the injector coil and replace the injector if defective. If the coil is integral, check the wiring between the solenoid valve and EDC connector.				
156		INJECTOR CYLINDER 6		The engine runs on 5 cylinders	Injector no.6 electric trouble	Check correct tightness to torque of the connectors on the solenoid valve of the injector (1.36 - 1.92 Nm). Check the integrity of the injector coil and replace the injector if defective. If the coil is integral, check the wiring between the solenoid valve and EDC connector.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
161		INJECTOR CYLINDER 1 / SHORT CIRCUIT		One or more injectors (bank 1 or bank 2) not operating.	Possible short circuit in connections. Possible problem in injector coil. Possible problem in control unit.	Check wiring. Possible internal problem also in ECM. Replace the injector if necessary.				
162		INJECTOR CYLINDER 2 / SHORT CIRCUIT		One or more injectors (bank 1 or bank 2) not operating.	Possible short circuit in connections. Possible problem in injector coil. Possible problem in control unit.	Check wiring. Possible internal problem also in ECM. Replace the injector if necessary.				
163		INJECTOR CYLINDER 3 / SHORT CIRCUIT		One or more injectors (bank 1 or bank 2) not operating.	Possible short circuit in connections. Possible problem in injector coil. Possible problem in control unit.	Check wiring. Possible internal problem also in ECM. Replace the injector if necessary.				
164		INJECTOR CYLINDER 4 / SHORT CIRCUIT		One or more injectors (bank 1 or bank 2) not operating.	Possible short circuit in connections. Possible problem in injector coil. Possible problem in control unit.	Check wiring. Possible internal problem also in ECM. Replace the injector if necessary.				
165		INJECTOR CYLINDER 5 / SHORT CIRCUIT		One or more injectors (bank 1 or bank 2) not operating.	Possible short circuit in connections. Possible problem in injector coil. Possible problem in control unit.	Check wiring. Possible internal problem also in ECM. Replace the injector if necessary.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
166		INJECTOR CYLINDER 6 / SHORT CIRCUIT		One or more injectors (bank 1 or bank 2) not operating.	Possible short circuit in connections. Possible problem in injector coil. Possible problem in control unit.	Check wiring. Possible internal problem also in ECM. Replace the injector if necessary.				
167		INJECTOR CYLINDER 1 / OPEN CIRCUIT		One or more injectors (bank 1 or bank 2) not operating.	Possible injector connection problem (or disconnected internally). Possible problem in control unit (capacitor).	Check wiring. Possible internal problem also in ECM. Replace the injector if necessary.				
168		INJECTOR CYLINDER 2 / OPEN CIRCUIT		One or more injectors (bank 1 or bank 2) not operating.	Possible injector connection problem (or disconnected internally). Possible problem in control unit (capacitor).	Check wiring. Possible internal problem also in ECM. Replace the injector if necessary.				
169		INJECTOR CYLINDER 3 / OPEN CIRCUIT		One or more injectors (bank 1 or bank 2) not operating.	Possible injector connection problem (or disconnected internally). Possible problem in control unit (capacitor).	Check wiring. Possible internal problem also in ECM. Replace the injector if necessary.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
16A		INJECTOR CYLINDER 4 / OPEN CIRCUIT		One or more injectors (bank 1 or bank 2) not operating.	Possible injector connection problem (or disconnected internally). Possible problem in control unit (capacitor).	Check wiring. Possible internal problem also in ECM. Replace the injector if necessary.				
16B		INJECTOR CYLINDER 5 / OPEN CIRCUIT		One or more injectors (bank 1 or bank 2) not operating.	Possible injector connection problem (or disconnected internally). Possible problem in control unit (capacitor).	Check wiring. Possible internal problem also in ECM. Replace the injector if necessary.				
16C		INJECTOR CYLINDER 6 / OPEN CIRCUIT		One or more injectors (bank 1 or bank 2) not operating.	Possible injector connection problem (or disconnected internally). Possible problem in control unit (capacitor).	Check wiring. Possible internal problem also in ECM. Replace the injector if necessary.				
16D		COMPRESSION TEST IN PROGRESS			Compression Test in progress.	After carrying out the compression test, turn the key OFF (after-run).				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
16E		THE MINIMUM NUMBER OF INJECTIONS WAS NOT REACHED: STOP THE ENGINE		More than 2 injectors not operating.		See individual faults in injectors.				
171		BENCH 1 CC		One or more injectors (bank 1 or bank 2) not operating.	Possible injector connection problem. Injectors short-circuited.	Check wiring. Possible internal problem also in ECM. Replace the injector if necessary.				
173		BENCH 2 CC		One or more injectors (bank 1 or bank 2) not operating.	Possible injector connection problem. Injectors short-circuited.	Check wiring. Possible internal problem also in ECM. Replace the injector if necessary.				
17C		BENCH 1 INJECTORS CHECK (INTERNAL ECU)		One or more injectors (bank 1 or bank 2) may not be operating.	Fault in control unit.	Replace the engine control unit.				
189		EGR POWER ST. SHORT TO BATT.		No fault perceived by the driver. EGR not working.	Short circuit or EGR actuator faulty.	Check wiring. Replace the EGR actuator if necessary.				
191		TURBINE ACTUATOR CONTROL ELECTRO-VALVE		Poor performance	VGT actuator or wiring defective.	Check VGT wiring and actuator.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
192		TURBINE ACTUATOR CONTROL ELECTRO-VALVE SHORT CIRCUIT TO POSITIVE		Poor performance	VGT actuator or wiring defective.	Check VGT wiring and actuator.				
193		TURBINE WHEEL REVS SENSOR		Poor performance	Air filter blocked or turbine rpm sensor signal implausible.	Check the air filter and check parameters linked with the turbine by performing a road test (parameter acquisition).				
198		FAULT ON AT LEAST TWO OF THE FOLLOWING SENSORS: TURBINE SPEED, BOOST PRESSURE AND EXHAUST GAS PRESSURE		Poor performance	Sensor signal implausible. Sensor may be faulty.	Determine which turbine component caused the problem.				
199		TURBO-CHARGER CONTROL BOOST PRESSURE FAILURE (PCR)		Poor performance	Turbo sensor or actuator may be faulty. Air filter may be blocked.	Check turbine sensors and actuator (parameter acquisition). Check whether air filter is blocked.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
19A		TURBINE SPEED EXCEEDING EVERY PERMITTED RANGE		Poor performance	Turbo sensor or actuator may be faulty. Air filter may be blocked.	Check turbine sensors and actuator (parameter acquisition). Check whether air filter is blocked.				
19B		TURBINE IN OVER-SPEED (THE FAULT IS NOT DISPLAYED IF IT IS CAUSED BY A LOW ATMOSPHERIC PRESSURE)		Poor performance	Air filter blocked or turbine rpm sensor signal implausible.	Check the air filter and check parameters linked with the turbine by performing a road test (parameter acquisition).				
19F		NOx SENSOR ERROR		No effect perceived by the driver.	Sensor signal implausible. Nox sensor may be faulty.	Check the Nox sensor.				
1A5		TIMEOUT OF CAN MESSAGE DM1DCU		No effect perceived by the driver.	Problems in the Denoxtronic (on the CAN line).	Check wiring. Check and correct any faults in the Denoxtronic control unit.				
1A6		TIMEOUT OF CAN MESSAGE SCR1		No effect perceived by the driver.	CAN configuration incorrect. CAN connections defective. Terminal resistance not suitable.	Check CAN line wiring. Check Denoxtronic control unit wiring and operation.				
1AE		HUMIDITY SENSOR		No effect perceived by the driver.	Sensor short-circuited or faulty.	Check wiring. Replace sensor if necessary.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
1AF		SERIOUS EOBD FAULT FROM DENOXTRONIC (EOBD FLASHING LIGHT)		No effect perceived by the driver.	Problems in Ad-Blue dosing system.	Check the faults in the Denoxtronic and consult the control unit troubleshooting guide.				
1B1		ERROR ON CAN CONTROLLER A		No effect perceived by the driver.	CAN configuration incorrect. CAN connections defective. Terminal resistance not suitable.	Check CAN line wiring. Check terminal resistances.				
1B2		ERROR ON CAN CONTROLLER B		No effect perceived by the driver.	CAN configuration incorrect. CAN connections defective. Terminal resistance not suitable.	Check CAN line wiring. Check terminal resistances.				
1B3		ERROR ON CAN CONTROLLER C		No effect perceived by the driver.	CAN configuration incorrect. CAN connections defective. Terminal resistance not suitable.	Check CAN line wiring. Check terminal resistances.				
1B4		TIMEOUT CAN MESSAGE BC2EDC1		No effect perceived by the driver.	CAN configuration incorrect. CAN connections defective. Terminal resistance not suitable.	Check CAN line wiring. Check BC wiring and operation.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
1B5		TIMEOUT CAN MESSAGE VM2EDC		No effect perceived by the driver.	CAN configuration incorrect. CAN connections defective. Terminal resistance not suitable.	Check CAN line wiring. Check VCM wiring and operation.				
1B7		ERROR ON MESSAGES CAN IN TRANSMISSION		No effect perceived by the driver.	CAN configuration incorrect. CAN connections defective. Terminal resistance not suitable.	Check CAN line wiring. Check ECM wiring and operation.				
1B9		ERROR ON THE EOBD LIGHT MANAGED BY THE CLUSTER)		No effect perceived by the driver.	MIL/Body Controller warning light defective.	Consult the Body Controller troubleshooting guide and check the CAN line.				
1BA		TIMEOUT CAN MESSAGE DASH DISPLAY		No effect perceived by the driver.	CAN messages from VCM inconsistent.	Consult the VCM troubleshooting guide and check the CAN line.				
1BC		TIMEOUT CAN MESSAGE AMB-COND		No effect perceived by the driver.	CAN messages from VCM inconsistent.	Consult the VCM troubleshooting guide and check the CAN line.				
1BD		TIMEOUT CAN MESSAGE CCVS		No effect perceived by the driver.	CAN messages from VCM or BC inconsistent.	Consult the VCM/BC troubleshooting guide and check the CAN line.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
1C2		ERROR MESSAGE CAN ETC1		No effect perceived by the driver.	CAN messages from ETC (gear-box) inconsistent.	Check the ETC connection with the CAN line.				
1C3		TIMEOUT IN RECEIVING TC01 CAN MESSAGE		No effect perceived by the driver.	CAN messages from TCO inconsistent.	Check the TCO connection with the CAN line.				
1C6		ERROR MESSAGE CAN TSC1-PE		No effect perceived by the driver.	CAN messages from TCU (Transmission Control Unit) inconsistent.	Check the TCU connection with the CAN line.				
1C8		ERROR MESSAGE CAN TSC1-VE		No effect perceived by the driver.	CAN messages from TCU (Transmission Control Unit) inconsistent.	Check the TCU connection with the CAN line.				
1D1		ECU OVERRUN MONITORING ERROR		No effect perceived by the driver.	Electrical interference or internal control unit problems.	If the error persists to replace ECU.				
1D2		ECU OVERRUN MONITORING ERROR		No effect perceived by the driver.	Poor control unit programming/flash Possible internal fault.	Reprogram the central unit. If the error is repeated, replace the central unit, if needed.				
1D3		ECU OVERRUN MONITORING ERROR		No effect perceived by the driver.	Poor control unit programming/flash Possible internal fault.	Reprogram the central unit. If the error is repeated, replace the central unit, if needed.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
1D4		ECU OVERRUN MONITORING ERROR		No effect perceived by the driver.	Ecu internal failure.	If the error persists to replace ECU.				
1D5		ECU OVERRUN MONITORING ERROR		No effect perceived by the driver.	Ecu internal failure.	If the error persists to replace ECU.				
1D6		ECU INTERNAL ERROR (TPU)		Control unit deactivation.	Electronic interference or control unit faulty.	If the error persists to replace ECU.				
1D8		ECU OVERRUN MONITORING ERROR		No effect perceived by the driver.	Ecu internal failure.	If the error persists to replace ECU.				
1E2		IMMOBILIZER		The engine fails to start.	Problem in CAN line or immobiliser control unit.	Check the Immobiliser control unit is correctly connected. Enter the Immobiliser PIN code during the emergency procedure.				
1E3		ERROR FOR ECU INTERNAL MONITORING		No effect perceived by the driver.	Ecu internal failure.	If the error persists to replace ECU.				
1E4		ERROR FOR ECU INTERNAL MONITORING		No effect perceived by the driver.	Ecu internal failure.	If the error persists to replace ECU.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
1E5		SENSORS POWER SUPPLY FAULT (12V)		No effect perceived by the driver.	Excessive/insufficient battery voltage or possible internal control unit problem.	Check battery voltage or connections with the ECM. Replace the control unit if necessary.				
1E6		SENSOR POWER SUPPLY 1		No effect perceived by the driver.	Excessive/insufficient battery voltage or possible internal control unit problem.	Check battery voltage or connections with the ECM. Replace the control unit if necessary.				
1E7		SENSOR POWER SUPPLY 2		No effect perceived by the driver.	Excessive/insufficient battery voltage or possible internal control unit problem.	Check battery voltage or connections with the ECM. Check ECU, if required.				
1E8		SENSOR POWER SUPPLY 3		No effect perceived by the driver.	Excessive/insufficient battery voltage or possible internal control unit problem.	Check battery voltage or connections with the ECM. Replace the control unit if necessary.				
1E9		ECU OVERRUN MONITORING ERROR		No effect perceived by the driver.	Excessive/insufficient battery voltage or possible internal control unit problem.	Check battery voltage or connections with the ECM. Replace the control unit if necessary.				
1EA		ECU OVERRUN MONITORING ERROR		No effect perceived by the driver.	Excessive/insufficient battery voltage or possible internal control unit problem.	Check battery voltage or connections with the ECM. Replace the control unit if necessary.				
1EB		ATMOSPHERIC PRESSURE SENSOR		No effect perceived by the driver. Environmental pressure recovery value: 700 mbar.	Fault in sensor inside control unit.	Change ECU.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
1FA		TOO HIGH NUMBER OF REGENERATIONS DEMAND		No reaction perceivable by the driver. Too many filter regenerations carried out.	Particulate filter may be blocked.	Check filter.				
1FB		PERMANENT RI-GENERATION ON TRAP PARTICLE		No reaction perceivable by the driver.	Catalytic converter not installed or damaged.	Check catalytic converter visually.				
1FC		FIRST SENSOR EXHAUSTED GAS TEMPERATURE		No reaction perceivable by the driver.	Temperature sensors damaged or incorrectly fitted.	Check information and condition of sensors.				
21F		TOO HIGH EFFICIENCY OF CATALYST SYSTEM		No reaction noticeable on behalf of the driver.	Actuator coil faulty or not within specified tolerance limits.	Check actuator condition.				
225		INTERRUPTED AFTER-RUN		Slight power reduction.	The control unit is turned off by the general switch instead of by the key (k15). Possible problem in main relay or connections.	Check wiring and then replace the main relay.				
228		MAIN RELAY - SHORT CIRCUIT TO GROUND		Slight power reduction.	Short circuit in main relay or relay faulty.	Check wiring between battery and ECM and then replace the main relay.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
232		COOL-ANT TEMPERATURE SENSOR ABSOLUTE TEST		Slight power reduction	Extreme environmental conditions or sensor incorrectly adjusted.	Ensure the engine is working in non-critical conditions. Check the sensor connections and accuracy. Replace sensor if necessary.				
238		OIL LOW PRESSURE		Slight power reduction	Sensor incorrectly adjusted or faults in lubrication system.	Check the sensor connections and accuracy. Check the lubrication system.				
23A		OIL TEMPERATURE ABOVE NORMAL		Slight power reduction	Sensor incorrectly adjusted or faults in lubrication system.	Check the sensor connections and accuracy. Check the lubrication system.				
27C		BENCH 2 INJECTORS CHECK (INTERNAL ECU)		One or more injectors (bank 1 or bank 2) may not be operating	Fault in control unit.	Replace the engine control unit.				
292		TURBINE ACTUATOR CONTROL ELECTRO-VALVE SHORT CIRCUIT TO GROUND		Poor performance	VGT actuator or wiring defective.	Check VGT wiring and actuator.				
2A6		TIMEOUT OF CAN MESSAGE SCR2		No effect perceived by the driver	Problem in the Denoxtronic (on the CAN line).	Check the faults in the Denoxtronic and consult the control unit troubleshooting guide. Check wiring.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
2AF		SERIOUS EOBD FAULT FROM DENOXTRONIC (EOBD FLASHING LIGHT)		No effect perceived by the driver.	Problems in AdBlue dosing system.	Check the faults in the Denoxtronic and consult the control unit troubleshooting guide.				
2B4		TIMEOUT CAN MESSAGE BC2EDC2		No effect perceived by the driver.	CAN configuration incorrect. CAN connections defective. Terminal resistance not suitable.	Check CAN line wiring. Check BC wiring and operation.				
2C6		TIMEOUT OF CAN MESSAGE TSC1-PE PASSIVE		No effect perceived by the driver.	CAN messages from TCU (Transmission Control Unit) inconsistent.	Check the TCU connection with the CAN line.				
2C8		ERROR MESSAGE CAN TSC1-VR		No effect perceived by the driver.	CAN messages from TCU (Transmission Control Unit) inconsistent.	Check the TCU connection with the CAN line.				
2C9		ERROR MESSAGE CAN TIME-DATE		No effect perceived by the driver.	CAN messages from TC (tachograph) inconsistent.	Check the tachograph connection with the CAN line.				
2D3		ECU OVERRUN MONITORING ERROR		No effect perceived by the driver.	Poor control unit programming/flash Possible internal fault.	Reprogram the central unit. If the error is repeated, replace the central unit, if needed.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
2FF		ERROR CHECK OF CRITICAL TIME FOR OIL DILUTION		Slight power reduction	Oil over-diluted.	Change the engine oil.				
392		TURBINE ACTUATOR CONTROL ELECTRO-VALVE		Poor performance	Connection damaged. Battery voltage excessive (ECU overheating).	Check VGT connection and actuator.				
3AF		SERIOUS EOBD FAULT FROM DENOXTRONIC (EOBD FLASHING LIGHT)		No effect perceived by the driver.	Problems in Ad-Blue dosing system.	Check the faults in the Denoxtronic and consult the control unit troubleshooting guide.				
3C8		TIMEOUT OF CAN MESSAGE TSC1-VE PASSIVE		No effect perceived by the driver.	CAN messages from TCU (Transmission Control Unit) inconsistent.	Check the TCU connection with the CAN line.				
3C9		ERROR MESSAGE CAN HRDV		No effect perceived by the driver.	CAN configuration incorrect. CAN connections defective. Terminal resistance not suitable.	Check CAN line wiring. Check BC wiring and operation.				
3D3		ECU OVERRUN MONITORING ERROR		No effect perceived by the driver.	Poor control unit programming/flash Possible internal fault.	Reprogram the central unit. If the error is repeated, replace the central unit, if needed.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
3FA		REGENERATION DEMAND NUMBER 2		No effect perceived by the driver.	Too many regenerations carried out.	Check particulate filter and faults in sensors.				
4AF		SERIOUS EOBD FAULT FROM DENOXTRONIC (EOBD FLASHING LIGHT)		No effect perceived by the driver.	Problems in Ad-Blue dosing system.	Check the faults in the Denoxtronic and consult the control unit troubleshooting guide.				
4C8		TIMEOUT OF CAN MESSAGE TSC1-VR PASSIVE		No effect perceived by the driver.	CAN messages from TCU (Transmission Control Unit) inconsistent.	Check the TCU connection with the CAN line.				
4FA		REGENERATION DEMAND NUMBER 3		No effect perceived by the driver.	Too many regenerations carried out.	Check particulate filter and faults in sensors.				
5AF		DM1DCU SPN5 MESSAGE		No effect perceived by the driver.	Problems in Ad-Blue dosing system.	Check the faults in the Denoxtronic and consult the control unit troubleshooting guide.				

Aquila Trucks Centres

Aquila Trucks Centres

SECTION 2

Trouble shooting according to symptoms

Visible Failure	Possible cause	Repair action
Engine does not start	Inefficient battery.	Pre-heating resistor always on. Check alternator efficiency. Check electrical connections at the battery terminals.
	Starter inefficient.	Check / replace.
	Air heater inefficient.	Check power supply and ground connection. Check heater remote control switch with active diagnosis.
	Main remote control switch (main relay) inefficient.	Check fuse efficiency. Check remote control switch with active diagnosis.
	Fuel pump inefficient.	Check efficiency by checking the filter input pressure. Check suction tightness.
	Fuel pre-filter - filter inefficient.	Check if clogged / change.
	0.3 bar valve on fuel return inefficient.	Check its efficiency. If blocked, replace it.
	Fuel circuit inefficient.	Check the system tightness and carry out bleeding.
Engine overheating	Coolant level wrong.	Check possible leaks and restore the level.
	Water pump and fan control belts inefficient.	Check, adjust tension and change components, if needed.
	Water pump inefficient.	Overhaul or change the assembly.
	Thermostat inefficient.	Check if it remains blocked in closed position or partially open. Change.
	Radiator inefficient.	Wash accurately and check if there are any fluid leaks. Change the component, if needed.
	Air filter and circuit pipes inefficient.	Make sure the manifolds and the pipes are not clogged. Check the filter clogging indicator. Change the filter.
	Cylinder head gasket inefficient.	Check the water circuit pressure and change the cylinder head gaskets.
	Fan inefficient.	Replace.

(Continue)

Aquila Trucks Centres

Visible Failure	Possible cause	Repair action
Engine lacks power	Fuel circuit inefficient.	Check if the mesh filter in the tank, the fuel pre-filter and filter are clogged; in this case change them. Check if the 0,3 bar valve on the fuel return is blocked in open position (low pressure) or in closed position (high temperature), and then replace it. Check possible circuit leaks and the fuel pump efficiency.
	Injectors inefficient.	Seizure of the plunger of one of the injectors may occur or fuel may leak through the O - Ring. Carry out the 'Engine Test and proceed according to the instructions displayed.
	Engine air suction circuit inefficient.	Remove circuit necks and replace the air filter if clogged. Check the cartridge clogging indicator.
	Exhaust gas circuit inefficient.	Eliminate exhaust manifold leaks.
	Working temperature not correct.	Check cooling system.
	VGT actuator inefficient.	Carry out the Engine Test on the basis of the instructions displayed by the diagnosis instrument.
	Turbo-compressor inefficient.	Carry out the Engine Test on the turbine and check integrity of the following turbo-compressor components: - rotating blades; - bearings; - modulating valve; - VGT filter clogged; - turbine actuator; Change faulty component. Engine Test with Modus – IT2000 – E.A.S.Y..
	Injection mechanical system inefficient.	Check wear of the injector rocker arms, the roller, the rocker arm bushes and the camshaft tappets.
	Valve clearance inefficient.	Adjust valve clearance.

(Continue)

Aquila Trucks Centres

Visible Failure	Possible cause	Repair action
Engine brake low efficiency	Head gasket inefficient.	Head grinding and change gasket.
	Injector holder inefficient.	Replace it.
	Turbo-compressor cooling system tightness inefficient.	Overhaul turbine.
	Bad fuel quality.	Check if there is water in the reservoir and remove it.
Engine smoke is light blue	Piston rings inefficient.	Overhaul piston-cylinder assembly.
	Turbo-compressor lubrication system tightness inefficient.	Overhaul turbine.
	Valve oil seal tightness inefficient.	Change valve guide gasket.
Engine brake low efficiency	Engine brake components inefficient.	Check correct operation of engine brake actuator cylinders of control solenoid valve. Check cylinder control oil pipe tightness. Check exhaust valve clearance.
	Turbo-compressor inefficient.	VGT blocked in open position. VGT actuator faulty (tie rod blow-by). Modulating valve faulty. Wrong air supply to modulating valve. Change inefficient components.
Engine stops	Fuel in the reservoir.	Carry out bleeding after refuelling.
	Inefficiency of mesh filter, fuel pre-filter and filter.	Clean the mesh filter and replace the pre-filter and filter.
	Reservoir pipes not correctly connected.	If the pipes are inverted, the vehicle can be turned off after 200 ÷ 300 km even if the reservoir is without fuel because the engine fuel pipe has a lower height of suction. Invert the pipes.

(Continue)

Aquila Trucks Centres

Visible Failure	Possible cause	Repair action
Excessive fuel consumption	Air filter inefficient.	Change.
	Fuel reservoir and pipes inefficient.	Eliminate possible leaks and replace worn out components.
Excessive or insufficient oil pressure	Overpressure valve works not correctly.	Check and replace, if needed.
	Oil pump and oil delivery pipes inefficient.	Check and replace, if needed.
	Main journals and connecting rod bearings inefficient.	Replace bearings and rectify the crankshaft, if needed.
	Engine oil SAE viscosity not correct.	Change the engine oil with one having the right viscosity.

Aquila Trucks Centres

SECTION 3

Clutch

	Page
DESCRIPTION	3
- Clutch	3
MAIN DATA	3
TROUBLESHOOTING	6
TIGHTENING TORQUES	8
TOOLS	8
REMOVING AND REFITTING THE CLUTCH	9
- Removal	9
- Checks	9
- Refitting	10
REMOVING-REFITTING THE THRUST BEARING ..	10
REPLACING THE SUPPORT BEARING OF THE CLUTCH SHAFT	10
REMOVING-REFITTING THE PEDAL UNIT	11
- Removal (vehicles with EuroTronic gearbox) ..	11
- Removal (vehicles with ZF 9S/16 S... gearbox) .	12
- Refitting	13
PEDAL	13
- Unit removal-assembly	13
CHECKING AND ADJUSTING STOPS ON CLUTCH PEDAL (vehicles with ZF 9S/16S gearboxes)	14
- Clutch stop	14
- Idle travel of clutch pedal	14
- Pedal control valve stroke	14
HYDRAULIC CONTROL (Vehicles with ZF 9S/16S gearboxes)	15

Aquila Trucks Centres

Page

- Master cylinder	15
- Clutch actuator	17
SPRING PIN ADJUSTMENT GEARBOX ASSEMBLY	18
SPECIFICATIONS FOR GEARBOX ASSEMBLY EUROTRONIC 12 AS 1930/2330/2530	19
SPRING PIN ADJUSTMENT GEARBOX EUROTRONIC 12 AS 1420 TD	20
BLEEDING CLUTCH CIRCUIT	21

 
 
 
 
Aquila Trucks Centres

DESCRIPTION**Clutch**

The clutch is of dry type with one disc and fitted with pull or push engaging mechanism with diaphragm spring. For the vehicles with ZF 9/16S mechanic gearbox, the clutch control is hydro-pneumatic and includes the main cylinder, with built-in oil tank, and the clutch actuator. For the vehicles with Euro Tronic gearbox, the clutch control is pneumatic and electronically controlled by the gearbox control unit.

MAIN DATA


17" CLUTCH for F2B engines 9S 1310 TO / 9S 1311 TO gearboxes excluded

	Type		VALEO *	SACHS **	
			Dry single plate		
	Engagement mechanism		“Pull” with diaphragm spring		
	Driven disc		With friction seal		
	Driven disc hub		With spring drive		
	Lining outer Ø	mm	430	430 ± 1	
	Lining inner Ø	mm	242	240 + 3	
	Plate thickness (new)	mm	10 ± 0.3		
	Max. off-centering of driven plate	mm	~ 0.4	~ 0.40	
	Loaded minimum on new pressure plate	N	34000	30900	
	Loaded maximum with release	N	8200	7000	
	Minimum rise thrust pad	mm	1.7		
	Disengagement stroke	mm	12 + 2	12 + 2	
	Maximum depression stroke	mm	15.1	15	
	Clutch control:		- For mechanic gearboxes, main cylinder with built-in oil tank, clutch actuator with total recovery for driven disc wear - For Euro Tronic gearboxes, electric-pneumatic actuator controlled by the gearbox control unit		
	Type of fluid		Tutela TRUCK DOT SPECIAL		




* For manual gearboxes (except for 9 speed 9S...)

** For EuroTronic gearboxes

 Aquila Trucks Centres

17" CLUTCH - for F2B engine with gearbox - 9S 1310 TO / 9S 1311 TO			
	Type	SACHS	
		Dry single plate	
	Clutch mechanism	Push with diaphragm spring	
	Driven plate	With friction seal	
	Driven plate hub	With double torsion springs	
	Lining outer Ø	mm	430 ± 1
	Lining inner Ø	mm	242
	Plate thickness (new)	mm	10 ± 0.3
	Max. off-centering driven plate	mm	± 0.2
	Load on pressure plate (new)	Min. N	18600
		Max. N	20800
	Release load	N	5800
	Minimum rise of thrust pad	mm	1.7
	Disengagement stroke	mm	10+2
	Maximum depression stroke	mm	11
	Hydraulic control	Master cylinder with oil tank incorporated - slave cylinder with total take-up of driven plate wear	
	Lubricant	Tutela TRUCK DOT SPECIAL	

   Aquila Trucks Centres

17" CLUTCH - F3B engines			VALEO *	SACHS **
	Type		Dry single plate	
	Engagement mechanism		"Pull" with diaphragm spring	
	Driven disc		With friction seal	
	Driven disc hub		With double flexible coupling	
	Lining outer Ø	mm	430	430 ± 1
	Lining inner Ø	mm	260	254
	Plate thickness (new)	mm	10.6 ± 0.3	
	Max. off-centering of driven plate	mm	≤ 0.4	≤ 0.40
	Load on pressure plate (new)	Min. N	35000	34200
	Loaded maximum with release (new)	N	8600	7900
	Minimum rise thrust pad	mm	1.7	
	Disengagement stroke	mm	12 ⁺²	12 ⁺²
	Maximum depression stroke	mm	16.6	18
	Hydraulic control		- For mechanic gearboxes, main cylinder with built-in oil tank, clutch actuator with total recovery for driven disc wear - For Euro Tronic gearboxes, electric-pneumatic actuator controlled by the gearbox control unit	
	Oil type		Tutela TRUCK DOT SPECIAL	

* For manual gearboxes

** For EuroTronic gearboxes

Aquila Trucks Centres

TROUBLESHOOTING

NOTE For any actuator operation failure, on vehicles fitted with EuroTronic transmission, see the related transmission diagnosis.

Visible Failure	Possible cause	Repair action
Noise when clutch pedal is depressed	Thrust bearing excessively worn, damaged or not properly lubricated.	Replace thrust bearing.
	Excessive play between the splines on the transmission input shaft and the relative housing in driven plate hub.	Replace the shaft and also the driven plate if necessary.
Noise when the pedal is released	Springs of driven plate broken or weak.	Replace driven plate.
	Transmission input shaft worn.	Replace the shaft and also the driven plate if necessary.
	Thrust bearing has play in engagement sleeve.	Replace the thrust bearing.
The clutch snatches	Oil or grease on engine flywheel or on driven plate linings	Eliminate the problem causing the contamination; clean flywheel thoroughly then replace driven plate.
	Pressure plate distorted.	Replace the clutch.
	Uneven wear of friction linings due to run-out of driven plate.	Replace the driven plate.
	Diaphragm spring weak or fingers broken.	Replace the driven plate.
The clutch does not disengage	Oil or grease on driven plate linings.	Replace the shaft and also the driven plate if necessary.
	Transmission input spline damaged thus preventing driven plate from sliding.	Check and adjust the stroke of the operator cylinder with no load.
	Air in the hydraulic circuit (vehicles with EuroTronic transmission excluded).	Bleed the circuit.
The clutch slips	Driven plate linings worn or burnt.	Replace the driven plate.
	Diaphragm spring weak or fingers broken.	Replace the clutch.
	Oil or grease on driven plate linings.	Eliminate the problem causing the contamination and replace driven plate

(Continue)

Aquila Trucks Centres





Visible Failure	Possible cause	Repair action
Abnormal wear of driven plate linings	Driver resting his foot on the clutch pedal while driving.	Driver must avoid the harmful habit and rest his foot on the clutch pedal only when necessary.
	Disc ring strained.	Replace disc ring.
	Diaphragm spring with weakened or broken fingers.	Replace the clutch.
	Insufficient operator cylinder stroke.	Check and adjust the stroke of the operator cylinder with no load.

Aquila Trucks Centres

TIGHTENING TORQUES

DESCRIPTION	TORQUE	
	Nm	(kgm)
Flanged hex screw fixing pressure plate to flywheel M12	65 ± 7	(6.5 ± 0.7)
Nut for stud bolt fixing clutch casing to crankcase M10	46 ± 5	(4.6 ± 0.5)
Stud bolt fixing clutch casing to crankcase M10x80	19 ± 2	(2 ± 0.2)

TOOLS

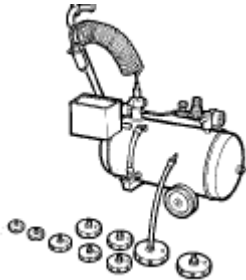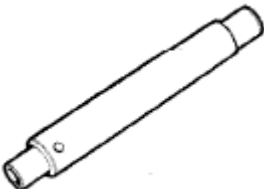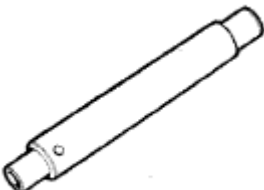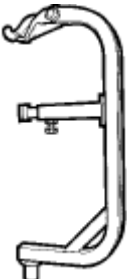TOOL NO.	DESCRIPTION	
99306010		Tool to bleed air from hydraulic clutch circuit
99348004		Universal extractor, internal from 5 to 70 mm
99370264		Guide pin to centre clutch disc
99370280		Guide pin to centre clutch disc
99370547		Mount for removing and refitting clutch assembly (to fit onto the hydraulic jack)


Aquila Trucks Centres

505210 REMOVING AND REFITTING THE CLUTCH**Removal**

This operation comprises:


- Removing-refitting propeller shafts (see relevant section 505620).
- Removing-refitting gearbox (see relevant section 530210).

Figure 1

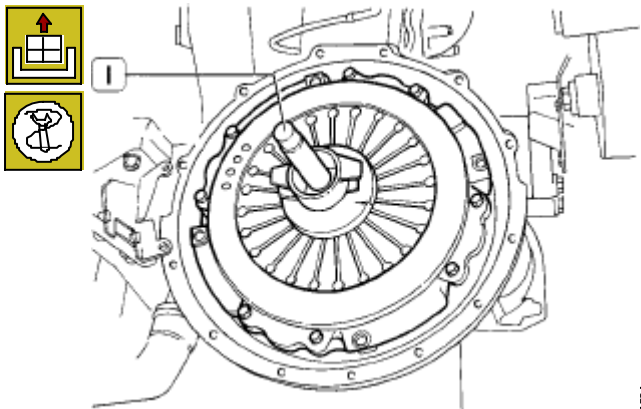


Fit the clutch locating pin 99370264 or 99370280 (1) into the support bearing of the transmission input shaft.

Figure 2

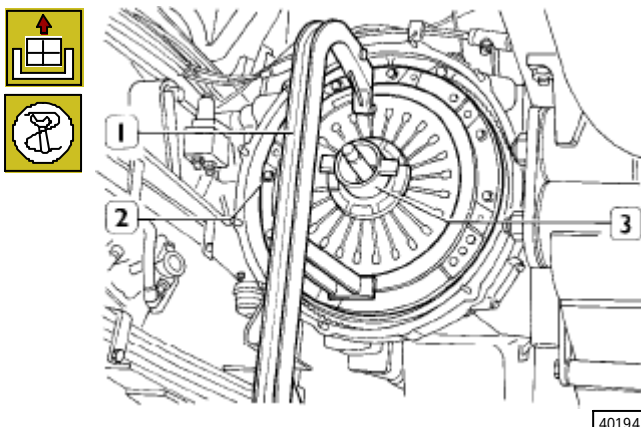

Fit the mount 99370547 (1) on the hydraulic jack and apply the mount to the pressure plate (3). Unscrew the screws (2) and remove the pressure plate from the engine flywheel.

Figure 3

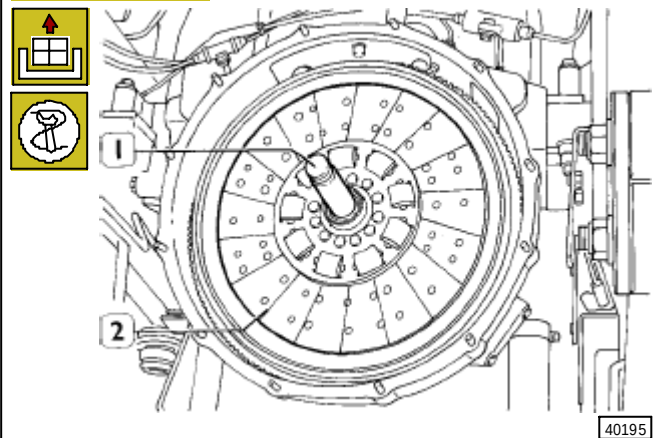

Remove the clutch disc (2) by removing at the same time the locating pin 99370264 or 99370280 (1).

Checks

The checks to make are as follows:

- The supporting surface of the driven disc, on the engine flywheel, must not be particularly worn or have too much scoring.
- The toothing of the ring gear of the engine flywheel must be neither deteriorated nor too badly worn.

If this is not the case, remove the engine flywheel (operation 540850).

In addition, check there is not even the slightest leakage of lubricant from the seal of the crankshaft rear cover: in which case, remove the flywheel as described under the relevant heading. Remove the rear cover together with the seal and replace it as described in section 2.

Check that the bearing or bushing supporting the gearbox input shaft mounted on the crankshaft is neither worn nor deteriorated, in which case it should be replaced.

Check the state of the pressure plate, the supporting surface of the driven disc must have no deformation, wear or sign of overheating and its spring or diaphragm must be sound.

Check the state of the driven disc:

- the friction linings must not be too worn, nor have any sign of overheating, nor be fouled with oil or grease.
- its hub must not have too much play on the gearbox input shaft.
- the torsion springs of the hub must not turn in their seats or be broken.

If you find any trouble at all, replace the part concerned. The clutch assembly is supplied as a spare in kit form.


The following are supplied singly:

- The driven disc and the thrust bearing.

In this case it is necessary to mount the new parts of the same supply as the torsion spring being reused.


Aquila Trucks Centres

Figure 4

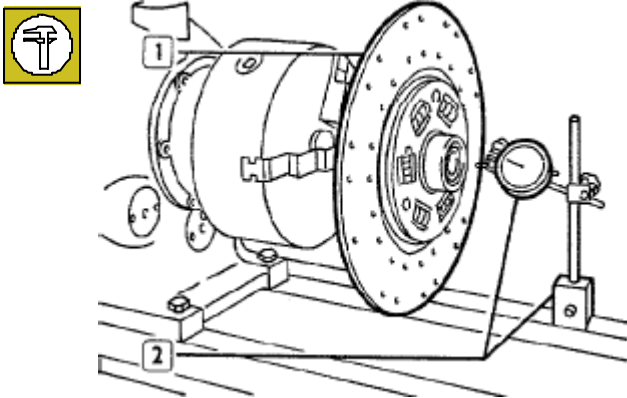

Before fitting a new driven disc it is necessary to check its centring as follows:
Position the driven disc (1) on a lathe. Then, with the aid of a dial gauge with a magnetic base (2), check that the surface of the disc is not off centre anywhere.
The maximum permissible eccentricity of the driven disc is 0.20 mm.

Figure 5

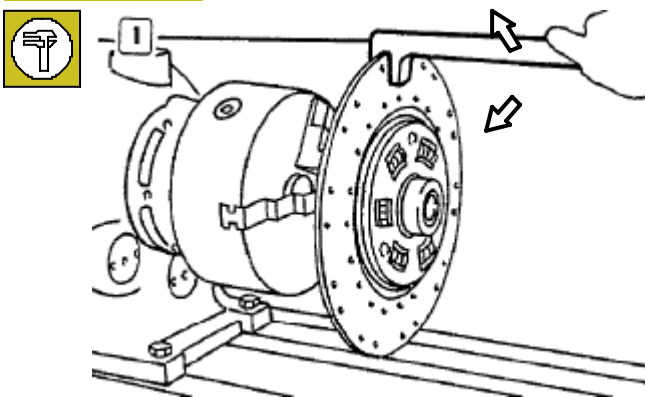

If the disc is off centre, use a fork wrench (1) as shown in the figure.


Refitting

Fit the clutch assembly back on by performing the operations described for removal in reverse order and observing the following instructions:

- Thoroughly clean the supporting surface of the clutch plate of the engine flywheel with spirits or petrol. Any light scoring you find on it can be removed with abrasive cloth.
- Position the driven disc, always using the guide pin for perfect centring to prevent harmful stresses on the hub when refitting the gearbox.
- Position the clutch plate by matching the holes for the fixing screws with the ones on the engine flywheel.
- Mount and lock the fixing screws of the pressure plate to the required torque.
- Fit the gearbox back on after spreading the splined shaft with Molikote molybdenum disulphide grease.
- Adjust the push rod of the operator cylinder as described under the relevant heading (operation 505272).

505254 REMOVING-REFITTING THE THRUST BEARING

Figure 6

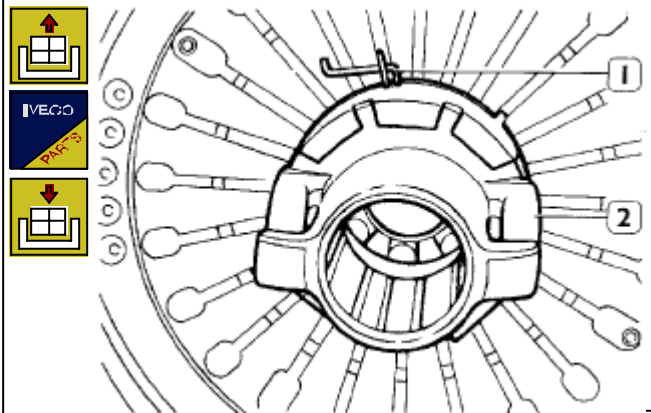

This operation comprises:

- Removing-refitting propeller shafts (see relevant section 505620).
- Removing-refitting gearbox (see relevant section 530210).


Using suitable pliers, open the snap ring (1), take the thrust bearing (2) out of the pressure plate.

Reverse these steps for fitting.

NOTE The new part has to be of the same supply as the pressure plate being reused.

540852 REPLACING THE SUPPORT BEARING OF THE CLUTCH SHAFT

Figure 7

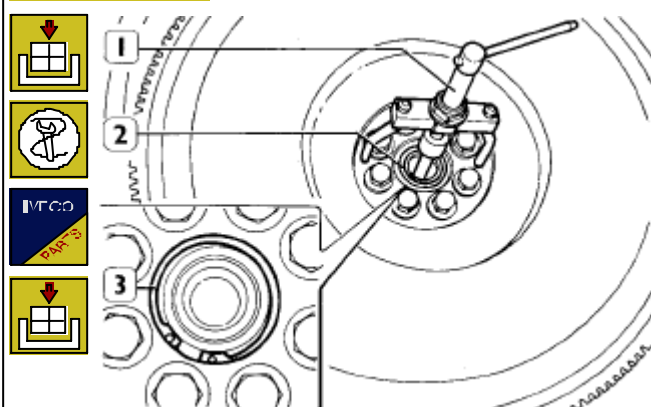

This operation comprises:

- Removing-refitting propeller shafts (see relevant section 505620).
- Removing-refitting gearbox (see relevant section 530210).
- clutch removal/refitting (operation 505210).

Using the appropriate pliers remove the split ring (3). Using the universal extractor 99348004 (1) remove the bearing (2).


For refitting, use the appropriate beater. Refit the split ring.

Aquila Trucks Centres

502601 REMOVING-REFITTING THE PEDAL UNIT

Removal (vehicles with EuroTronic gearbox)


Figure 8

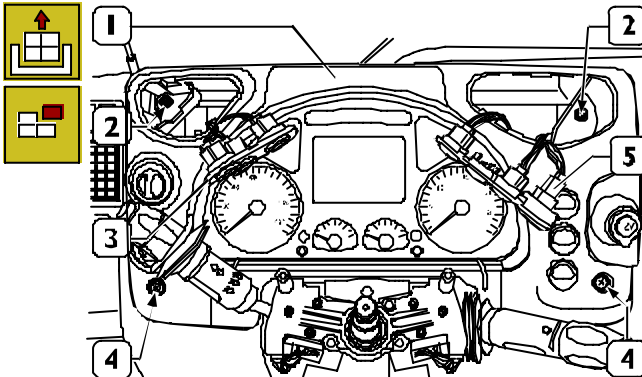

72831

Remove the push-button panels (3 and 5) and the screw caps (4) from the instrument panel (1). Take out the screws (2 and 4), remove the instrument panel (1) and put it aside.


Figure 9

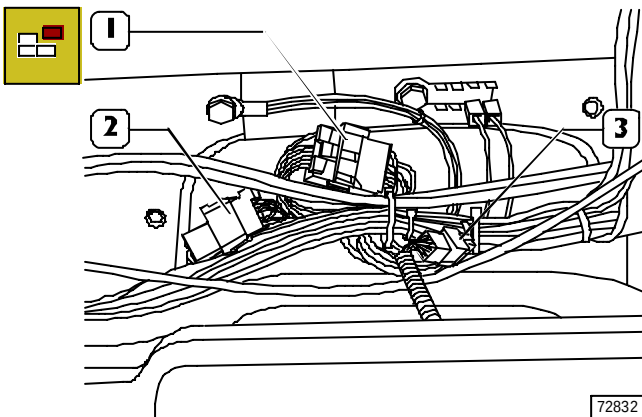

72832

Disconnect the connections (1) of the windscreen wiper, (2) of the drive control system and (3) of the immobilizer.


Figure 10

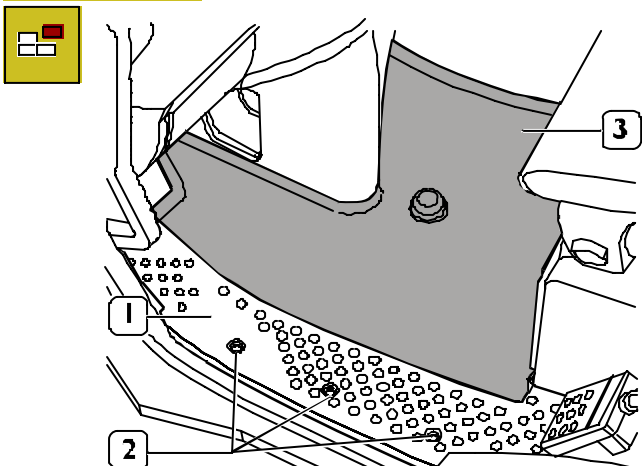

72833

Take out the screws (2), remove the heel rest (1) and lift the mat (3).


Figure 11

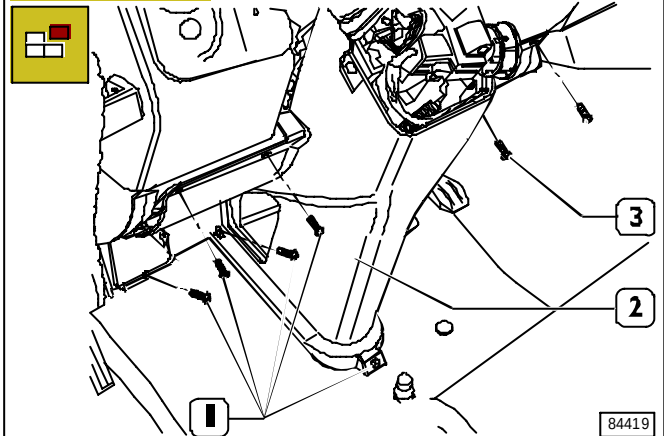

84419

Remove the screws (1 and 3) and the guard (2).


Figure 12

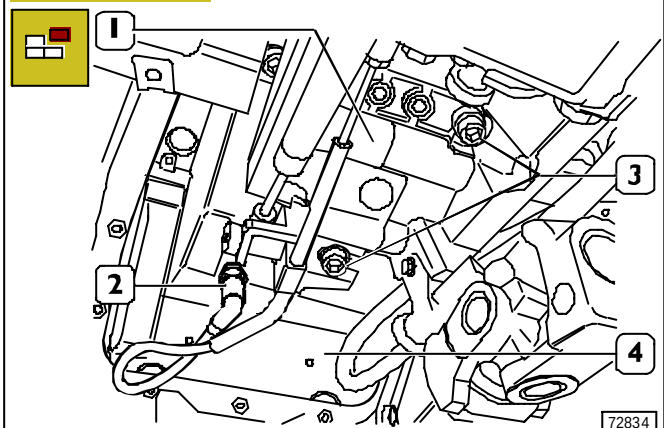

72834

Disconnect the piping (2). Take out the screws (3) and disconnect the steering control mount (1) from the pedal unit (4).

Figure 13

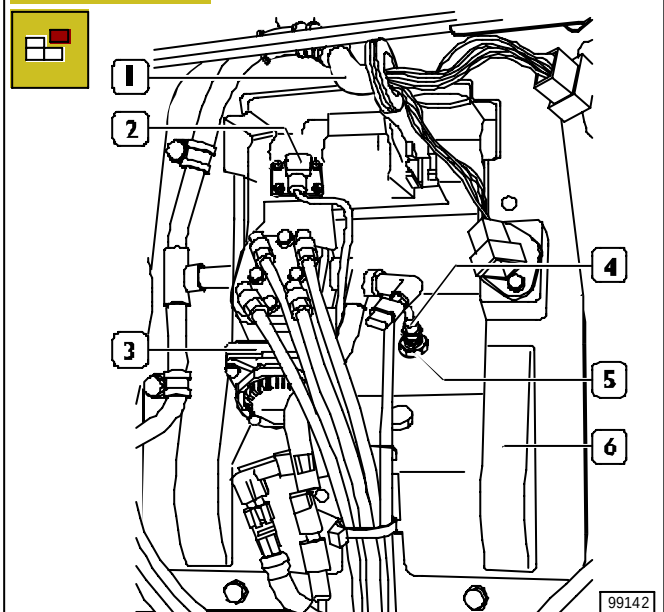


99142

From outside the cab, lift the radiator cowl, extract the grommet (1) with the wiring from the pedal unit (6). Disconnect the piping (4) from the coupling (5). Disconnect sensor (2) electric connection from distributor (3).

Aquila Trucks Centres


Figure 14

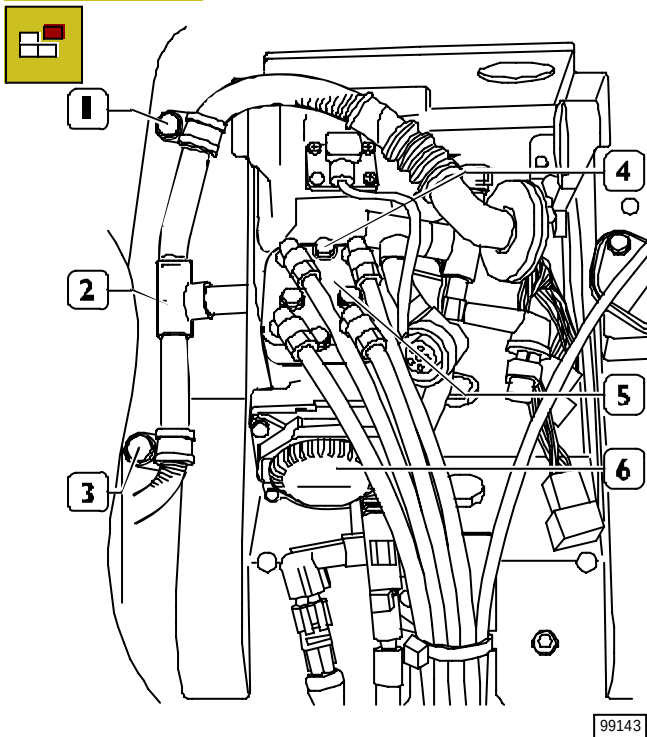

Take out the screws (4) fixing the cover (5) of the control valve (6). Gradually lift the cover (5) to discharge the pressurized air in the system.

Take out the screws (1-3) fixing the wiring clamps (2) and pedal unit to the cab.

Figure 15

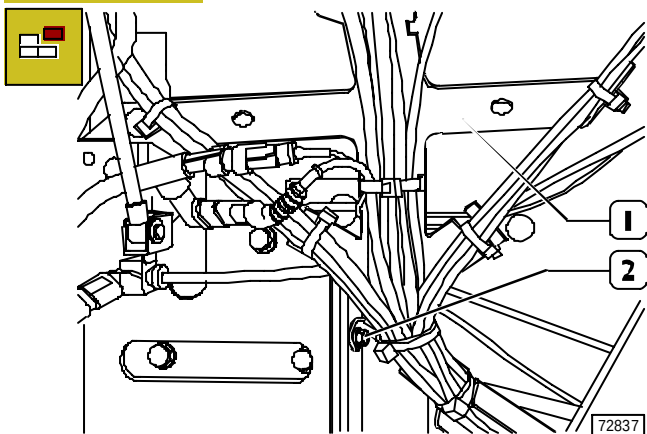


Take out the screw (2) fixing the bracket (1) supporting the piping and wiring and disconnect the pedal unit from the cab.



Removal (vehicles with ZF 9S/16 S... gearbox)

This differs from removing the pedal unit on vehicles with the EuroTronic gearbox in the following.


Figure 16

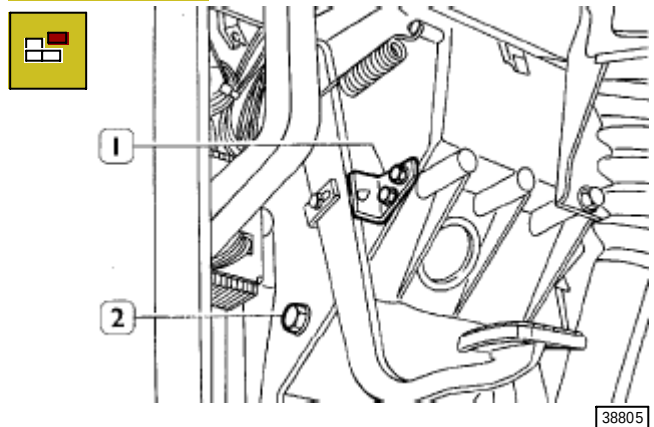

Disconnect the steering control mount as described in figures 8 – 9 – 10 – 11 – 12.


Remove the bracket (1) stopping the clutch pedal. Take out the screws (2) fixing the master cylinder to the pedal unit.

Figure 17

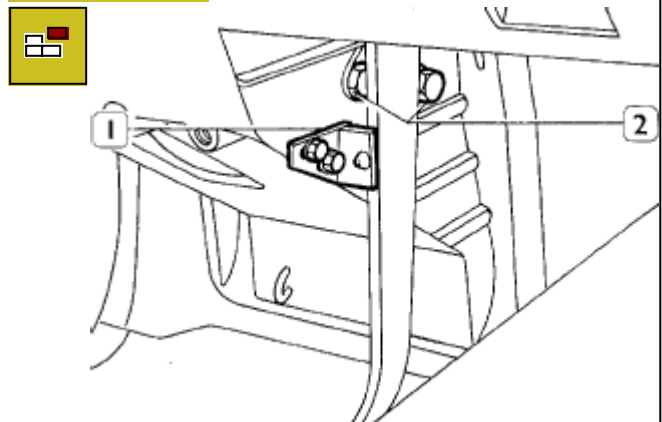

Remove the bracket (1) stopping the brake pedal. Take out the three screws (2) fixing the control valve to the pedal unit.

Figure 18

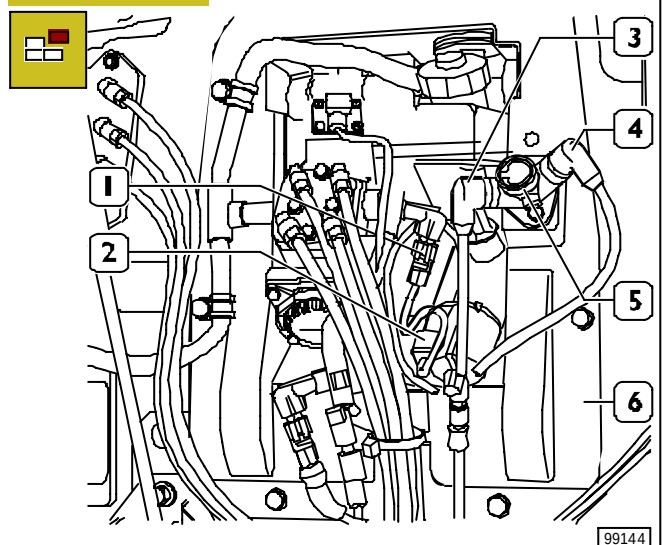


Lift the radiator cowling, disconnect the piping (3-4) from the splitter control button (5). Disconnect the electric connection (1) of the master cylinder (2) and remove this, together with the oil reservoir, from the pedal unit (6). Complete disconnecting the pedal unit as described in figures 13 – 14 – 15.

Aquila Trucks Centres

Refitting

Figure 19

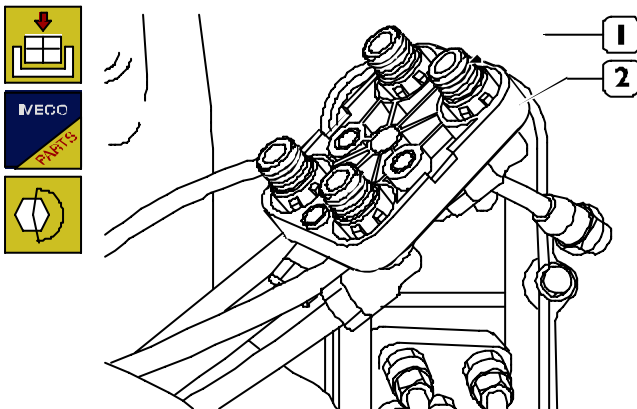

72838

For refitting, carry out the steps described for removal in reverse order. Then adjust the travel of the pedals as described under the relevant heading.

NOTE With each removal, the seals (1) of the coupling of the control valve cover (2) have to be replaced with new ones.

Tighten the screws and nuts to the required torque. After refitting, check and if necessary adjust the travel of the pedal as described under the relevant heading.

PEDAL

Unit removal-assembly


(see Figure 20)

Take out the springs (11) to return the pedals (13*-15). Eject the spring pins (7) so as to free the levers (1* and 2) from the pedals (13* and 15), which you should then extract from the pedal unit mount (18). To replace the roller bearings (9), use:

- the percussion extractor 99340205 to remove them;
- a suitable drift to fit them.

NOTE The roller bearings and associated shafts have to be lubricated with TUTELA MR3 grease. Complete assembly by carrying out the steps performed for removal in reverse order.

Figure 2

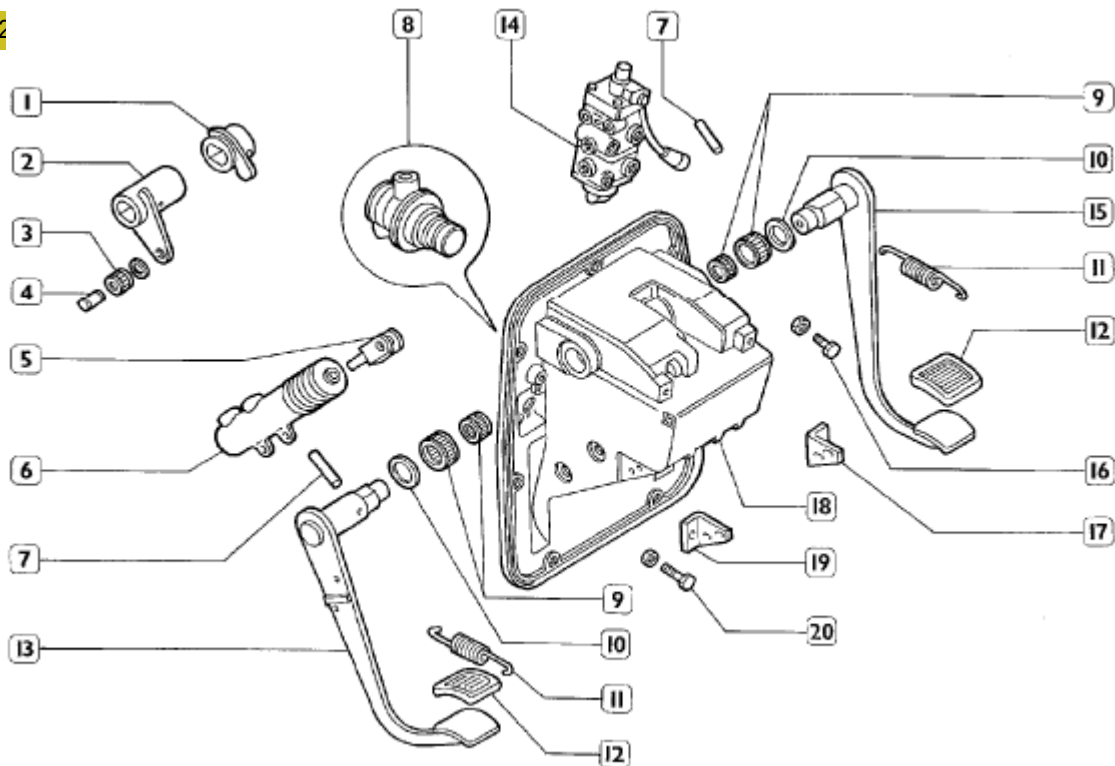


38808

1. Brake control lever – 2. Clutch control lever* – 3. Roller bearings – 4. Pin – 5. Fork – 6. Master cylinder* – 7. Spring pin – 8. Splitter control button* – 9. Roller bearings – 10. Washer – 11. Return spring – 12. Pedal cover – 13. Clutch pedal – 14. Control valve – 15. Brake pedal – 16. Brake pedal limit stop screw – 17. Brake pedal stop bracket – 18. Pedal unit mount – 19. Clutch pedal stop bracket – 20. Clutch pedal limit stop screw*

* Excluding vehicles with the EuroTronic gearbox.

CHECKING AND ADJUSTING STOPS ON CLUTCH PEDAL (vehicles with ZF 9S/16S gearboxes)

Figure 21

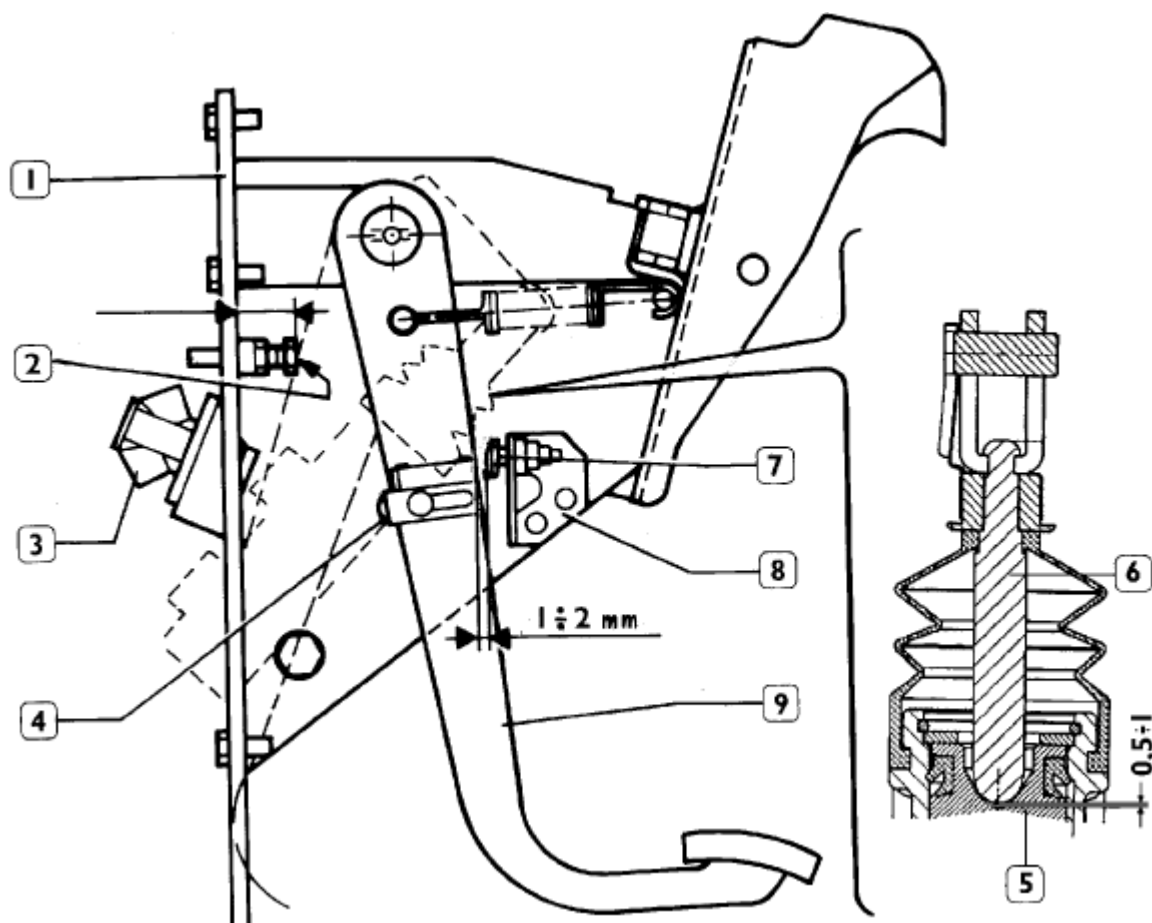

108470

Clutch stop

Check the distance **A** between the pedal unit mount (1) and the end of the screw (2). It has to be 32.5 mm, turn the screw appropriately if it is not.

Idle travel of clutch pedal

Work the clutch pedal (9) to take the cap (6) into contact with the piston (5) of the master cylinder.

In this condition, check the distance **B** between the clutch pedal (9) and the screw (7) that has to be 1 - 2 mm, turn the screw (7) appropriately if it is not.

The distance **B** corresponds to the clearance of 0.5 - 1 mm between the cap (6) and the piston (5) in the condition of the clutch pedal (9) in contact with the screw (7).

Pedal control valve stroke

After adjusting the position of the bottom and top stop, adjust the travel of the piston of the pedal control valve.

Take the clutch pedal (9) into contact with the bottom stop screw (2) and keep it in this position.

Press the button of the control valve (3) fully down and, keeping it pressed, position the angle bracket (4) so that between it and the button there is a distance of 0.5 - 1 mm. This is to prevent the pedal control valve from stopping the clutch pedal.

Aquila Trucks Centres


HYDRAULIC CONTROL (Vehicles with ZF 9S/16S gearboxes)

The hydraulic control is composed of:

- master cylinder with oil reservoir built in;
- clutch actuator with full recovery of driven disc wear.

Master cylinder

Figure 22

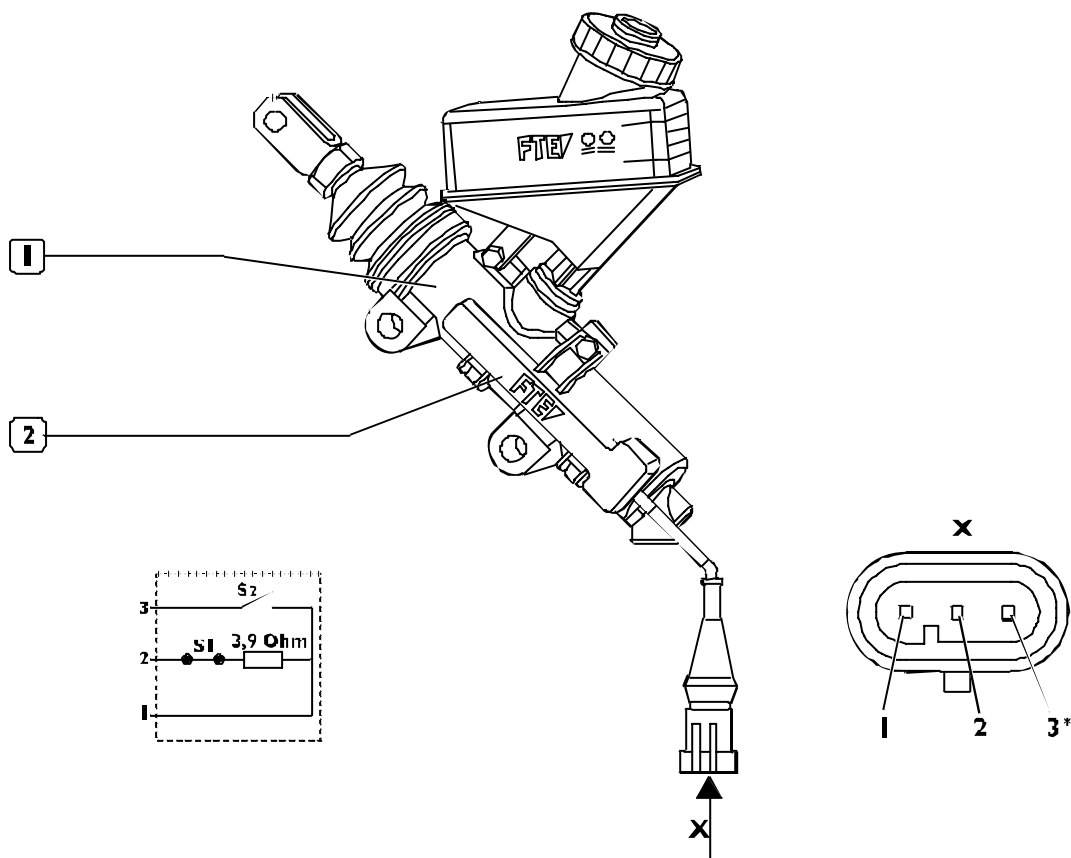

108620


MASTER CYLINDER VIEW (* only for vehicles with F3B engine)

On master cylinder there are mounted following proximity (read) switches:

- S₁N.A. (mounted on N.C. master cylinder) to disable Cruise Control;
- S₂N.A. (mounted on N.A. master cylinder) only present on vehicles with F3B engine to protect synchronisers (synchro protection).

Aquila Trucks Centres

Figure 23

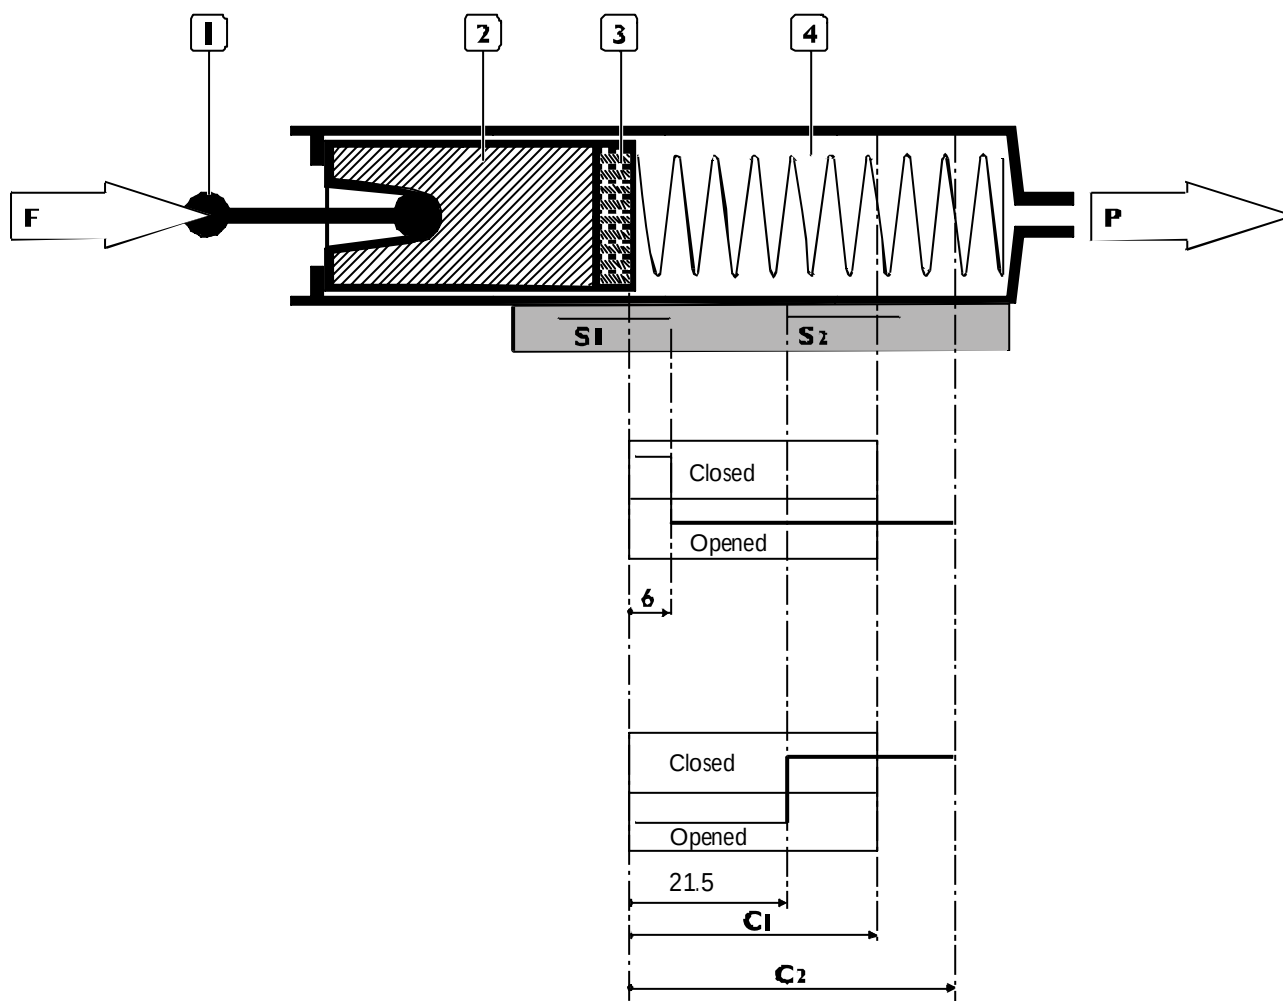

99355

FUNCTIONAL SCHEME

1. Push rod - 2. Piston - 3. Magnetic ring - 4. Cylinder

S₁ = Proximity switch to disable Cruise ControlS₂ = Proximity switch to protect gearbox synchronisersC₁ = Working stroke 31 mmC₂ = Working stroke 42 mm

F = Force applied by clutch pedal

P = Hydraulic pressure at servoclutch


CHARACTERISTICS		S1	S2
Voltage	V	48 max	
Current:			
min	mA	5	5
max	mA	400	700
Power	W	10 max	20 max
Permanent current	mA	250 max	700 max

NOTE Switch S2 goes off at piston (2) stroke of 21.5 mm corresponding to 70% of clutch pedal disengagement travel, corresponding in turn to servoshift driving point.

Aquila Trucks Centres


Clutch actuator

Figure 24

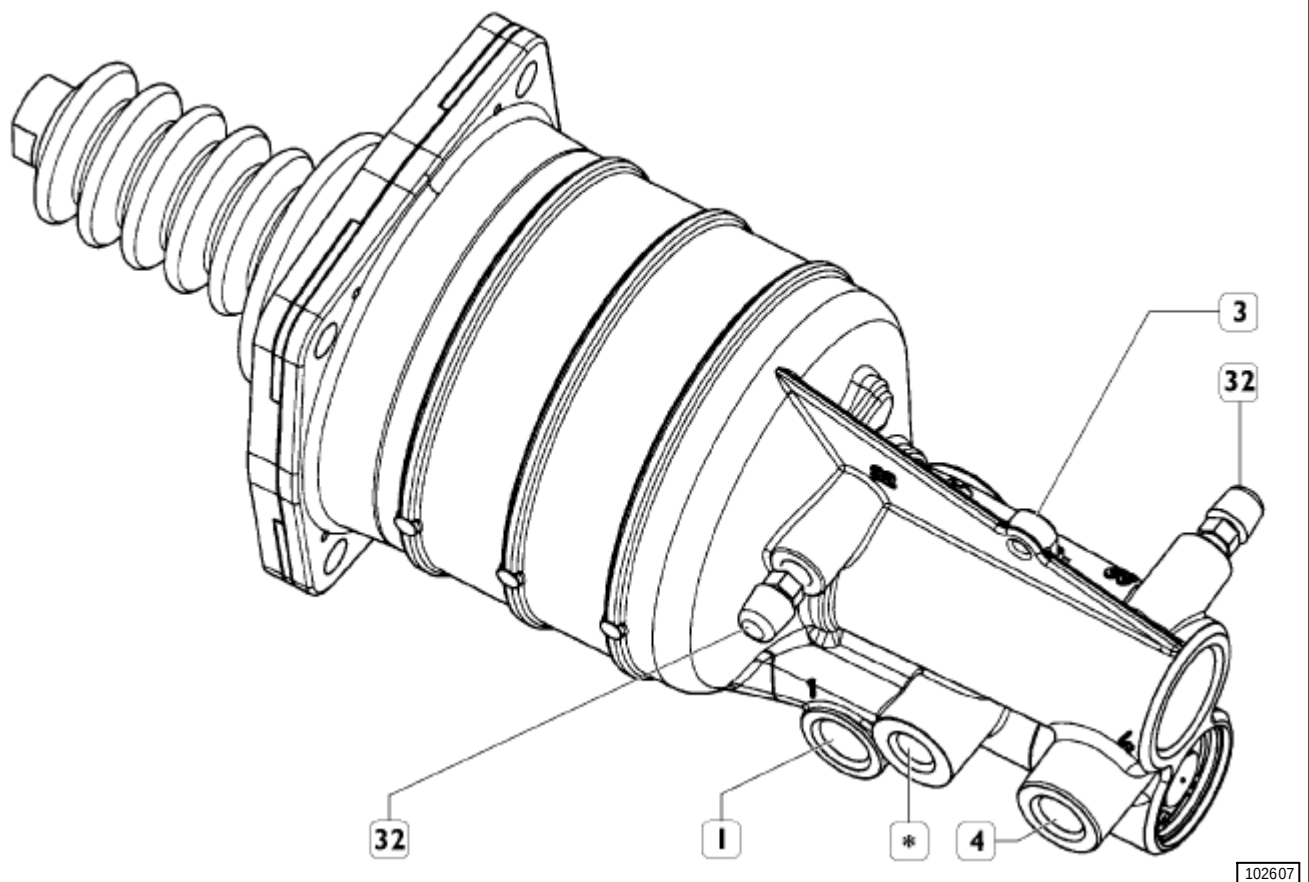

- 1. Feed (compressed air)
- 3. Bleed (compressed air)
- 4. Drive (clutch liquid)
- 32. Bleed screw
- * Fitting for valve drive

Figure 25

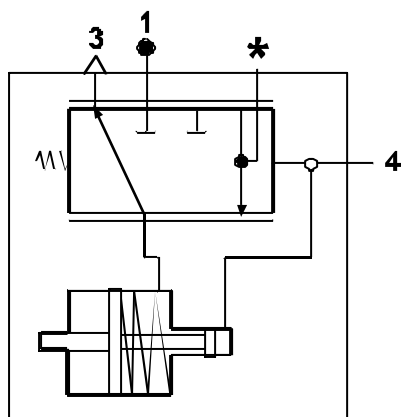

Functional scheme

- 1. Feed (compressed air)
- 3. Bleed (compressed air)
- 4. Drive (clutch liquid)

Service pressure:

- clutch liquid (P4) 40 bar
- air (P1) 11.5 bar


Max pressure:

- clutch liquid (P4) 120 bar
- air (P1) 13 bar

Aquila Trucks Centres

SPRING PIN ADJUSTMENT GEARBOX ASSEMBLY

Figure 26

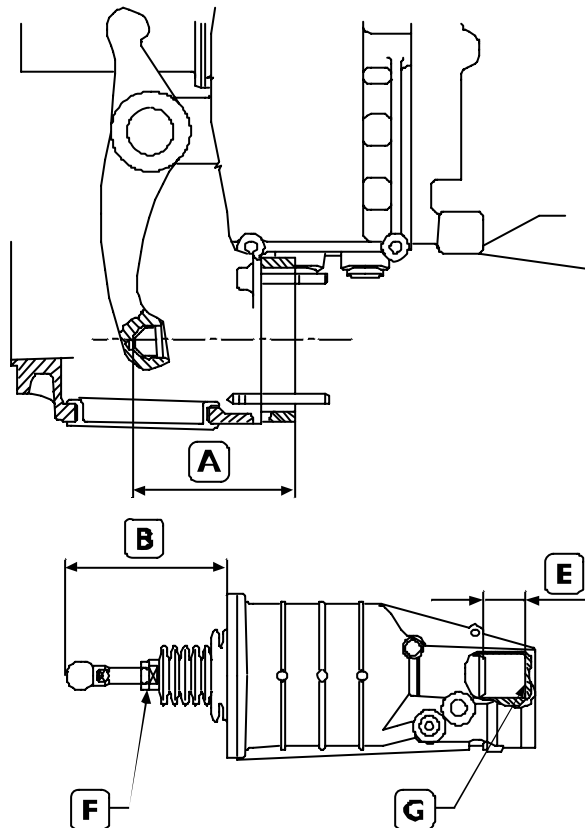

114974

NOTE Engines F2B with push clutch SACHS on gearboxes 9S 1310/11 TO do not need any adjustment.



Perform following operations:

- measure dimension (A) between clutch lever spherical cavity and actuator fixing plane; Disengagement lever must rest against thrust bearing.
- push ball spring pin up to stop (G); screw, or unscrew, spring pin (F) until dimension (B) is obtained.

$B = A - E$
(See values shown in below table).

Engine	Clutch	E (mm)
F2B	Push clutch SACHS	do not need any adjustment
	Pull clutches VALEO	30
F3B	Pull clutches VALEO	35


NOTE It is necessary to observe this adjustment to make the worn plate indicator trip, which is located in the operator cylinder, close to the complete wear of the friction linings.
The plate wear (90% of the friction material) is indicated by a significant increase in load on the pedal when disengaging the clutch.

NOTE Should any oil leaks from the main cylinder and/or the clutch actuator be detected, replace the involved component and bleed the hydraulic system.

Aquila Trucks Centres

SPECIFICATIONS FOR GEARBOX ASSEMBLY EUROTRONIC 12 AS 1930/2330/2530

Figure 27

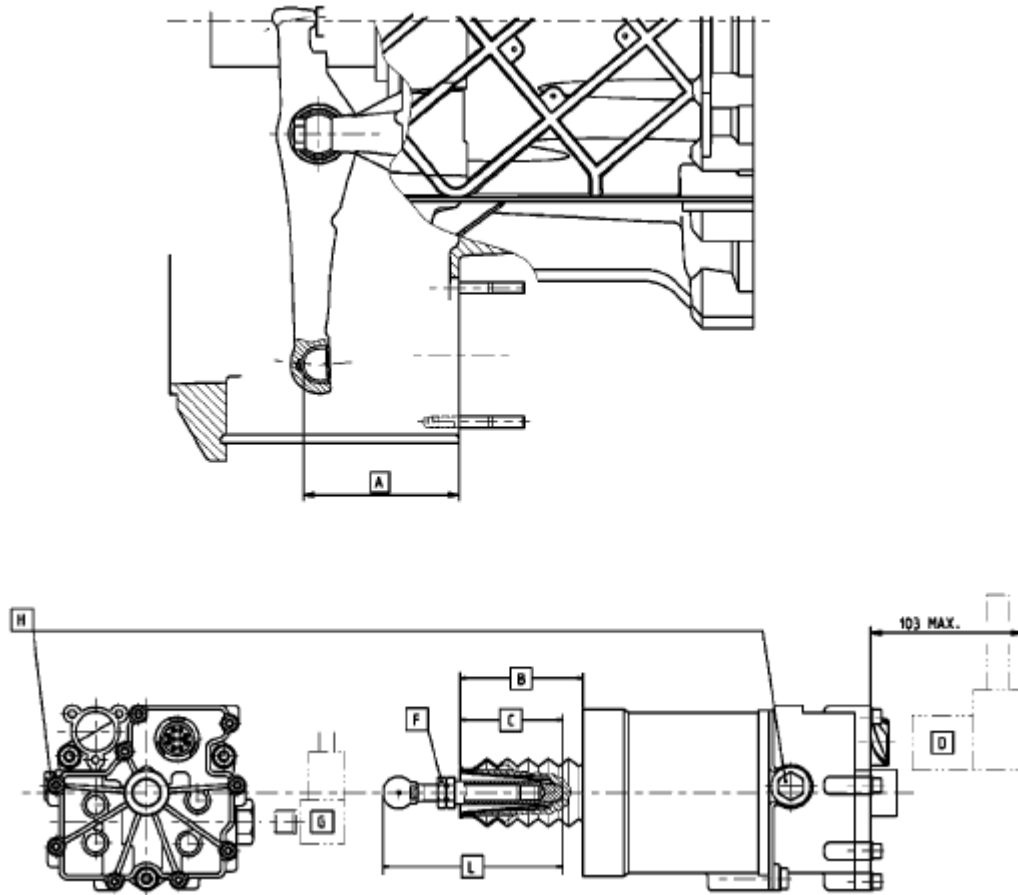

114975

A) Specifications for adjusting the clutch servo, when new and when the clutch is replaced:

1. Measure distance "A" between the clutch lever ball socket base and the clutch servo fastening surface. The lever should be resting on the thrust bearing.
2. Adjust the rod using the following equation:

$$L = A - (B - C) + 33$$
 and secure with locknut "F".
 Tightening torque 52 Nm.

NOTE

- Measure dimension "B" with the clutch servo at the end of its travel (screw plug "H" open).
- The clutch wear travel to the clutch servo, set using software, is standardised at 30 mm, corresponding to clutch plate wear of 3 mm (minimum guaranteed clutch plate wear).

B) Fitting the clutch servo to the clutch casing:

1. Unscrew the screw plug "H" on the inspection hole to allow air to emerge from the inner chamber.
2. Move the clutch servo piston back by hand to overcome the resistance of the internal spring.
3. Retighten plug "H" by hand to hold the piston back.

4. Fit the pushrod in the lever ball socket.
5. Fit the clutch servo and secure using the four hex-headed bolts.
Tightening torque 23 Nm.
6. Unscrew screw plug "H" and then retighten when the piston is forward.
Tightening torque 25 Nm.
7. Connect electrical connector "D" and air delivery pipe "G".

C) Replacing the clutch servo:

If replacing the clutch servo alone, proceed as described under point B, leaving pushrod adjustment setting "L" unchanged.




Before connecting the air pipe, ensure that the clutch servo is correctly fastened to the clutch casing.

Aquila Trucks Centres

SPRING PIN ADJUSTMENT GEARBOX EUROTRONIC 12 AS 1420 TD

Figure 28

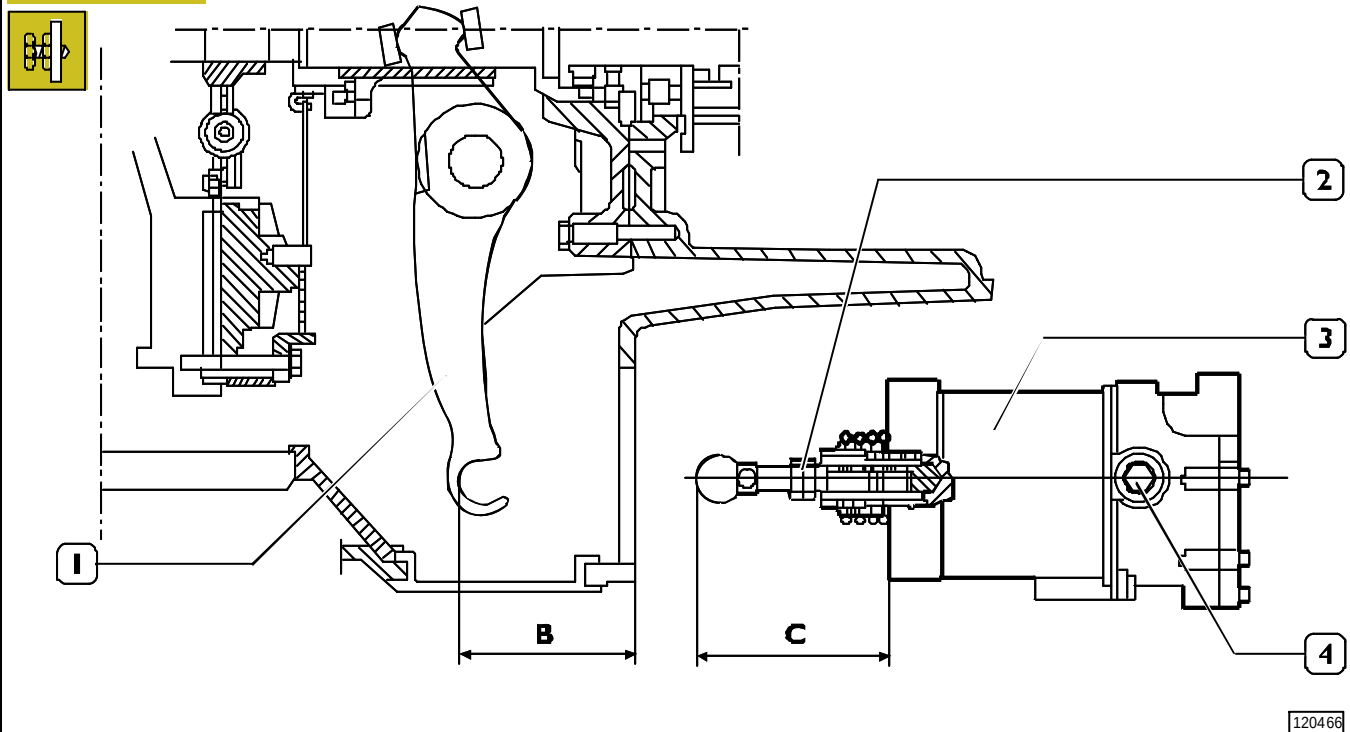

120466

NOTE In case of replacement of the clutch actuator, the previously set push rod length remains unvaried. The push rod adjustment only occurs when the driven disc or the disc pusher are replaced.



Differently from ordinary operations, in case of vehicles equipped with 12 AS 1420 gearbox, instead of the wear level, the disconnecting stroke is adjusted. If the adjustment is not carried out correctly, the disc pusher is damaged.

Push forwards the disconnecting fork (1) and measure height in "B".

Height C calculation

$$C = B + 33 \text{ mm}$$

Example:

$$B = 57 \text{ mm}$$

$$C = 57 \text{ mm} + 33 \text{ mm} = 90 \text{ mm}$$

Height C adjustment

Assemble the push rod (2) into the clutch actuator (3). Loosen the screw (4) on the clutch actuator (3) until the cylinder comes out.

Measure the height "C" between the spherical head of the push rod and the bearing surface of the clutch actuator.


Adjust the push rod to reach the height "C".

Insert the push rod (2) into the head of the disconnecting fork (1).

Aquila Trucks Centres

BLEEDING CLUTCH CIRCUIT


Figure 29

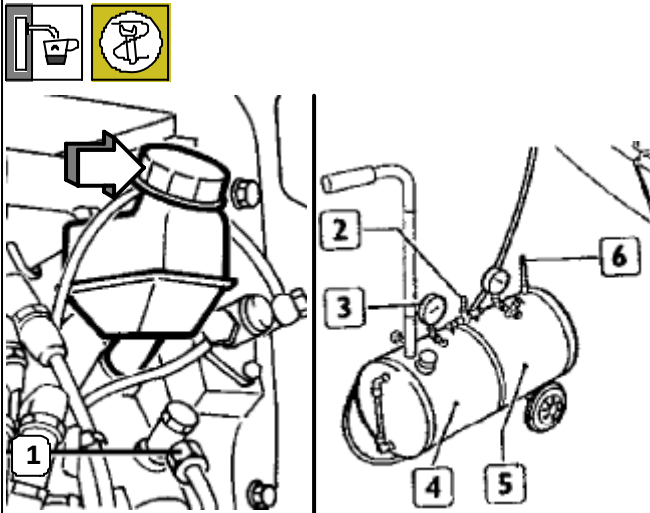

Bleed air from clutch hydraulic circuit after repairing clutch assembly or following periodic oil changes. Use air remover 99306010 for this purpose as follows:

- introduce compressed air into reservoir (5);
- fill reservoir (4) with Tutela TRUCK DOT SPECIAL fluid;
- replace clutch reservoir cover (⇒) with one of those provided with device 99306010 and connect device line to cover.

Figure 30

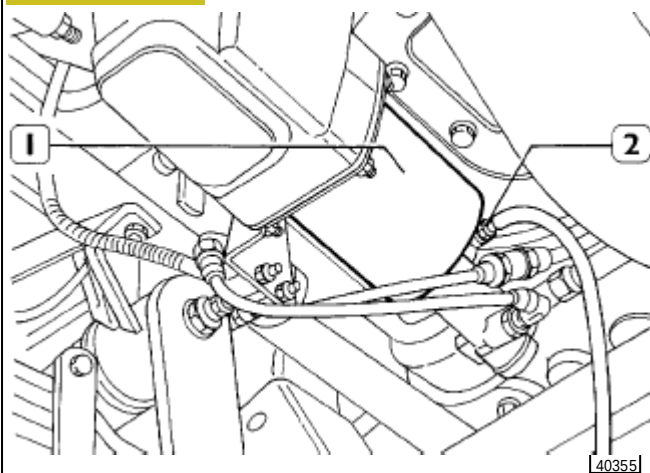

- apply a plastic pipe to bleed screw (2) of slave cylinder (1) and immerse the opposite end of the pipe in a recipient containing Tutela TRUCK DOT SPECIAL fluid. Undo bleed screw (1) by one turn, open (see Figure 29) cock (2) until pressure gauge (3) shows a reading of $1 \div 1,2$ bars;
- when clutch fluid emerging from circuit is free of bubbles, tighten bleed screw and drain air from device reservoir (5) through valve (6).

NOTE When clutch fluid is changed, bleed master cylinder by loosening fitting (1, Figure 29) before bleeding clutch servo.

Aquila Trucks Centres

Aquila Trucks Centres

SECTION 4

5302 Gearboxes

	Page
GEARBOX ZF 9 S 1310 T.O.	3÷12
GEARBOX ZF 16 S 1620 T.D. - 2220 T.D. - 2520 T.O. 13÷22	
ZF 16 S 1621 T.D. - 2221 T.D. - 2521 T.O. WITH INTARDER	23÷40
EUROTRONIC AUTOMATED 12 AS 1420 T.D.	41÷46
EUROTRONIC AUTOMATED 12 AS 1930 T.D. 12 AS 2330 T.O.	47÷56
EUROTRONIC AUTOMATED WITH INTARDER 12 AS 1931 T.D. 12 AS 2331 T.O.	57÷72
EUROTRONIC GEARBOXES DIAGNOSTICS . .	73÷170

Aquila Trucks Centres

Aquila Trucks Centres

**5302 Gearbox
ZF 9 S 1310 T.O.**

	Page
GENERAL	5
LOCATION OF GEARBOX DESCRIPTION PLATE	6
GEAR CONTROL MODULE E 13 MP	7
DIAGRAM OF MODULE E 13 MP	8
GEAR CONTROL LEVER	9
MAIN DATA	10

Aquila Trucks Centres

Aquila Trucks Centres

GENERAL

Gearbox ZF 9 S 1310 T.O. is mechanical type with synchronized gear engagement, with the exclusion of pick up gear and reverse gear, featuring front engagement.


It is made up of a part featuring 4 forward gears with reverse gear, a pick up gear and a Epicyclic Reduction Gear Unit of planetary gears type on the rear part.

The E.R.G.unit (Epicyclic Reduction Gear Unit) enables splitting the number of gears of the four speed gearbox, thus, nine forward gears are available, crawler gear included, that can be engaged in sequence

The servoshift is a device comprising a mechanical/pneumatic module that integrates the G P attraction valves locking the clutch lanes and High / Low switching.

The device works mechanically if the pneumatic system breaks down.

Figure 1

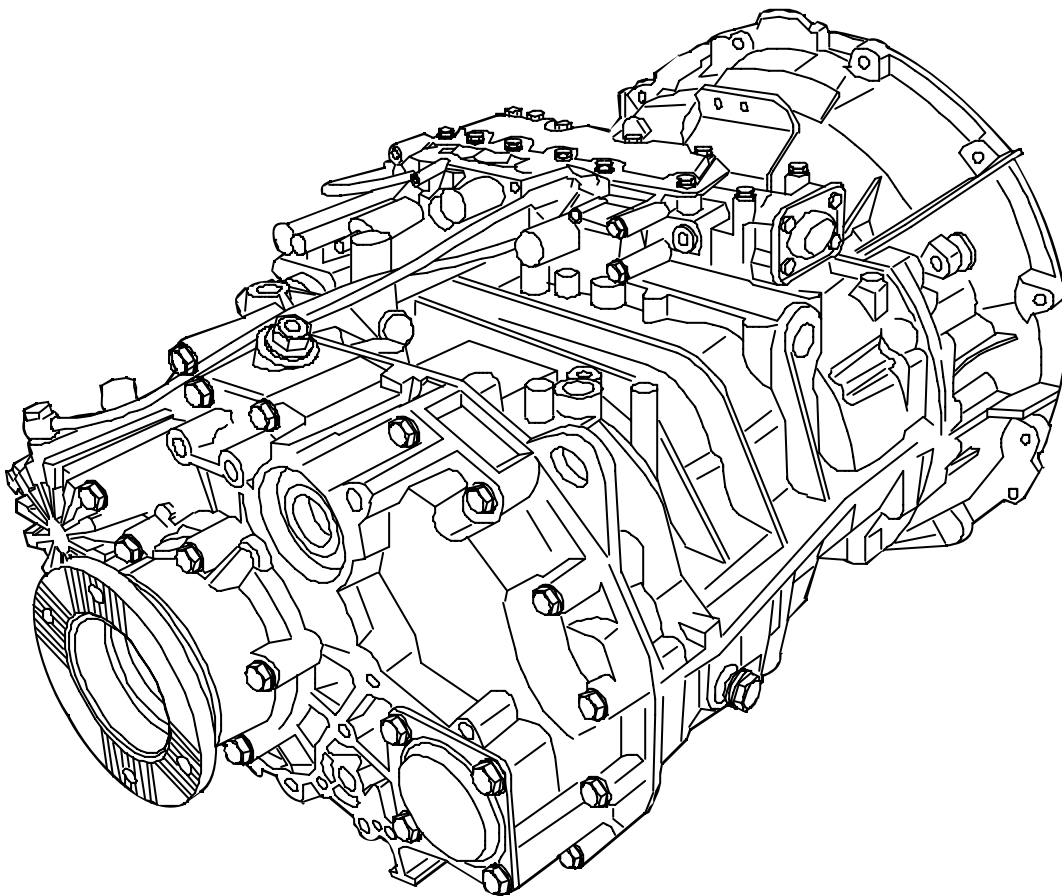


112206

Aquila Trucks Centres

LOCATION OF GEARBOX DESCRIPTION PLATE

Figure 2

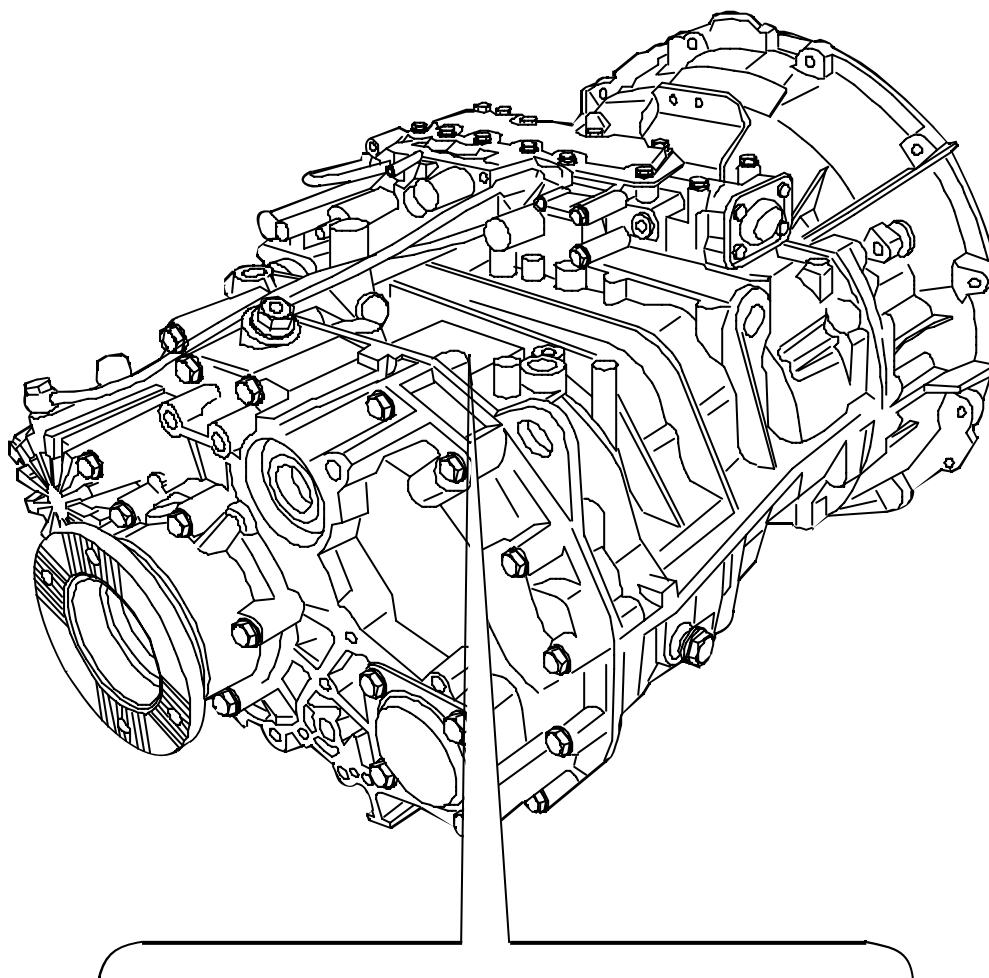

 ZF FRIEDRICHSHAFEN AG MADE IN FRANCE				
A	<table border="1"> <tr> <td>ECOMID</td> <td>9S1310TO</td> </tr> </table>	ECOMID	9S1310TO	
ECOMID	9S1310TO			
	PARTS KIT NO. MODEL SERIAL NO.			
B	1324 003 005	C		
D	CUSTOMER SPEC. NO. XXXXXXXX			
E	TOTAL RATIO 9.48-0.75	F		
G	P.T.O. N	H		
I	<table border="1"> <tr> <td>OL CAPACITY IN LITRES 9</td> <td>OIL GRADE SEE LUBRIC. LIST TE - ML 02</td> </tr> </table>	OL CAPACITY IN LITRES 9	OIL GRADE SEE LUBRIC. LIST TE - ML 02	L
OL CAPACITY IN LITRES 9	OIL GRADE SEE LUBRIC. LIST TE - ML 02			

112207

- A = Type of transmission
 B = ZF drawing no.
 C = Production sequence number
 D = Spare part IVECO drawing no.
 E = Transmission gear ratio


P.T.O. = Power take-off

- F = Tachometer gear ratio
 G = Type of power take-off
 H = Power take-off gear ratio
 I = Replacement oil amount
 L = ZF lubricant list name

Aquila Trucks Centres

GEAR CONTROL MODULE E13 MP

Figure 3

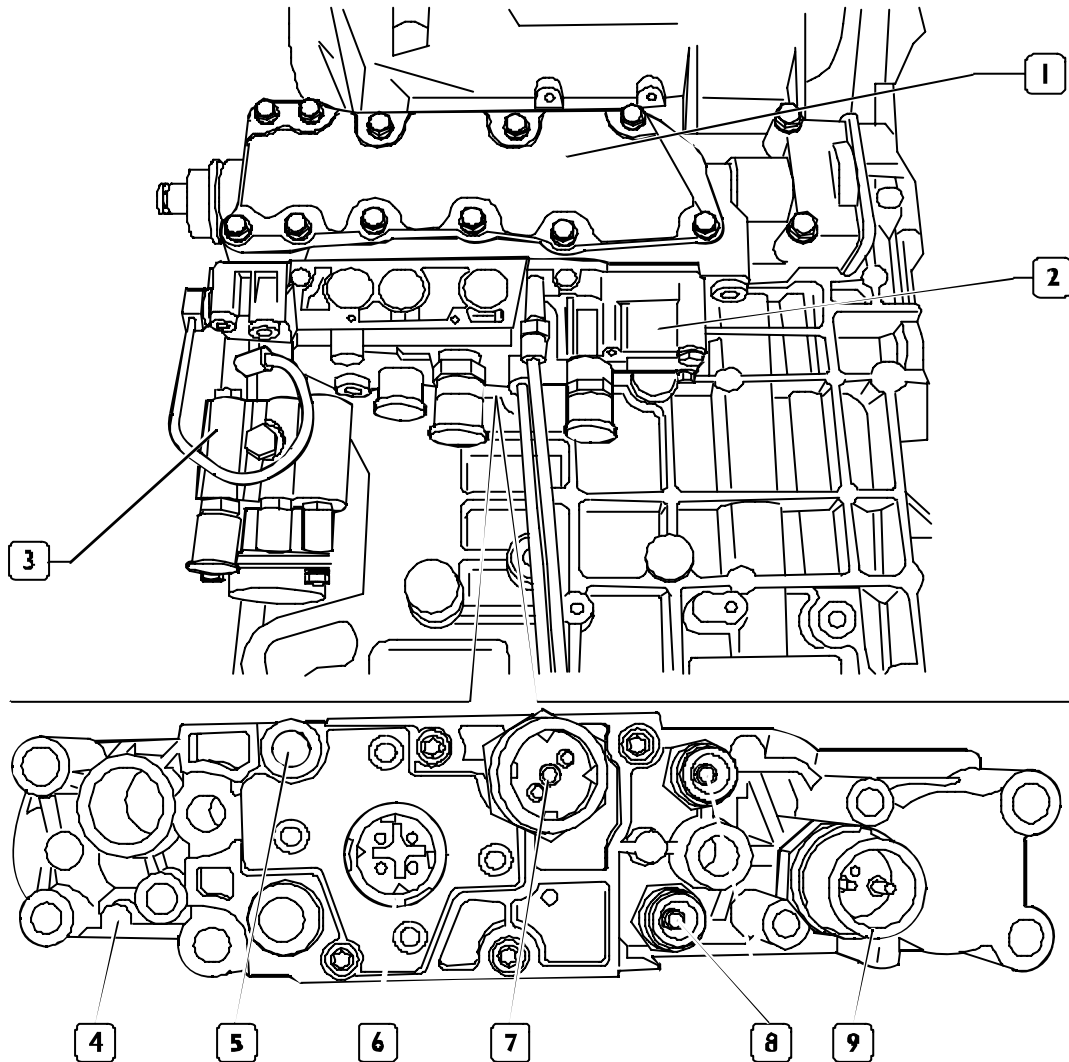

112208

1. Control tower - 2. Gear control module E13 MP - 3. Servo control - 4. Air Supply Module - 5. Pneumatic preselection connection, linked to switch on High - Low lever - 6. Electrical connector for solenoid valves - 7. Pressure switch - 8. GRE cylinder pneumatic connection line - 9. Neutral switch

The mechanically / pneumatically operated module E 13 MP integrates the valves activating the GP, lane lock and High - Low speed switching.


It offers the following advantages:

- gears are selected and engaged faster and with less effort;
- damping of vibrations from the control linkage, thus reducing noise levels;
- less stress on the synchronisers.

Aquila Trucks Centres

DIAGRAM OF MODULE E 13 MP

Figure 4

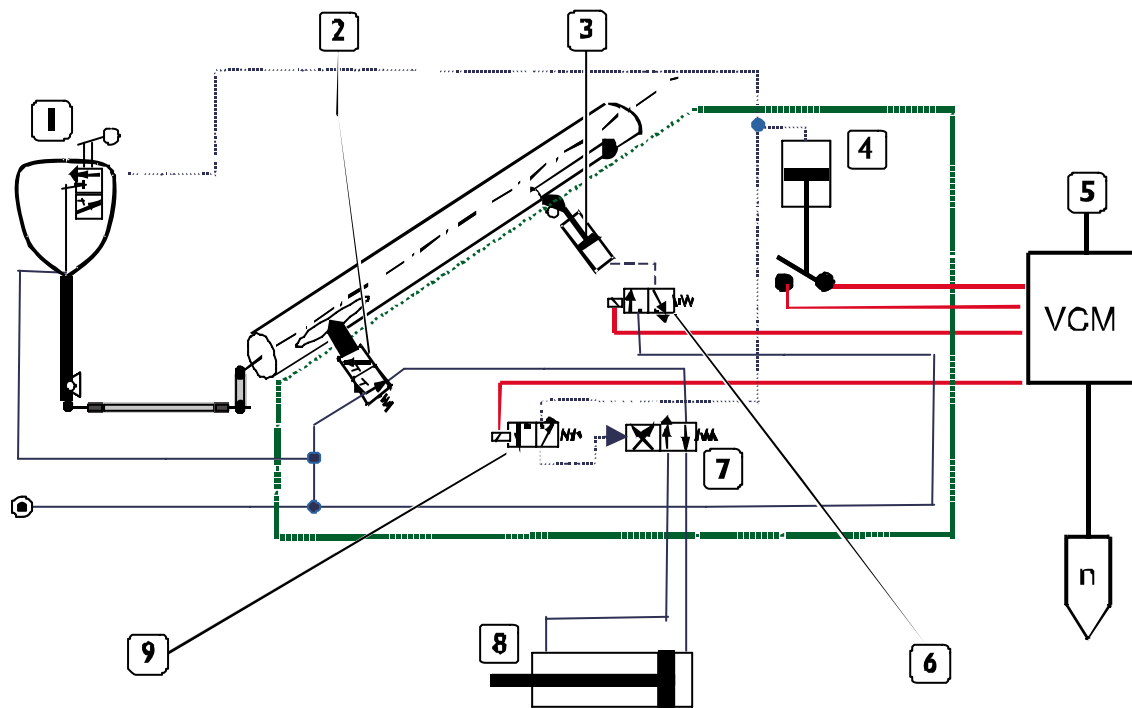

112209

1. GRE pneumatic switch - 2. Valve enabling GRE engagement - 3. Lane lock - 4. Pressure switch - 5. VCM control unit - 6. Lane locking solenoid valve - 7. GRE switching valve - 8. GRE cylinder - 9. Switching solenoid valve

NOTE This operation is to be carried out only where the bearing is to replace.

Lock speed range switching

- Prevents switching from high to low speed when a certain number of revs is exceeded.
- Protects the synchronisers from excessively high peripheral speeds.
- Protects the clutch and engine from over-revving.

EXAMPLE:

If you are in 5th gear and the rev speed is > 1000 rpm it will NOT be possible to drop to 4th gear.

Lane lock

- Prevents incorrect engagement of 4th → 1st instead of 4th → 5th

The driver intends to pass from 4th to 5th gear by switching the GP lever to high, but has forgotten to select GP - High on the selector: the lane lock function is activated to prevent selection of lane ½.

NOTE This operation is to be carried out only where the bearing is to replace.


- Prevents incorrect engagement of 8th → 5th

The lane lock function prevents incorrect engagement of 8th → 5th at a running speed of above 2000 rpm.

Aquila Trucks Centres

GEAR CONTROL LEVER

Figure 5

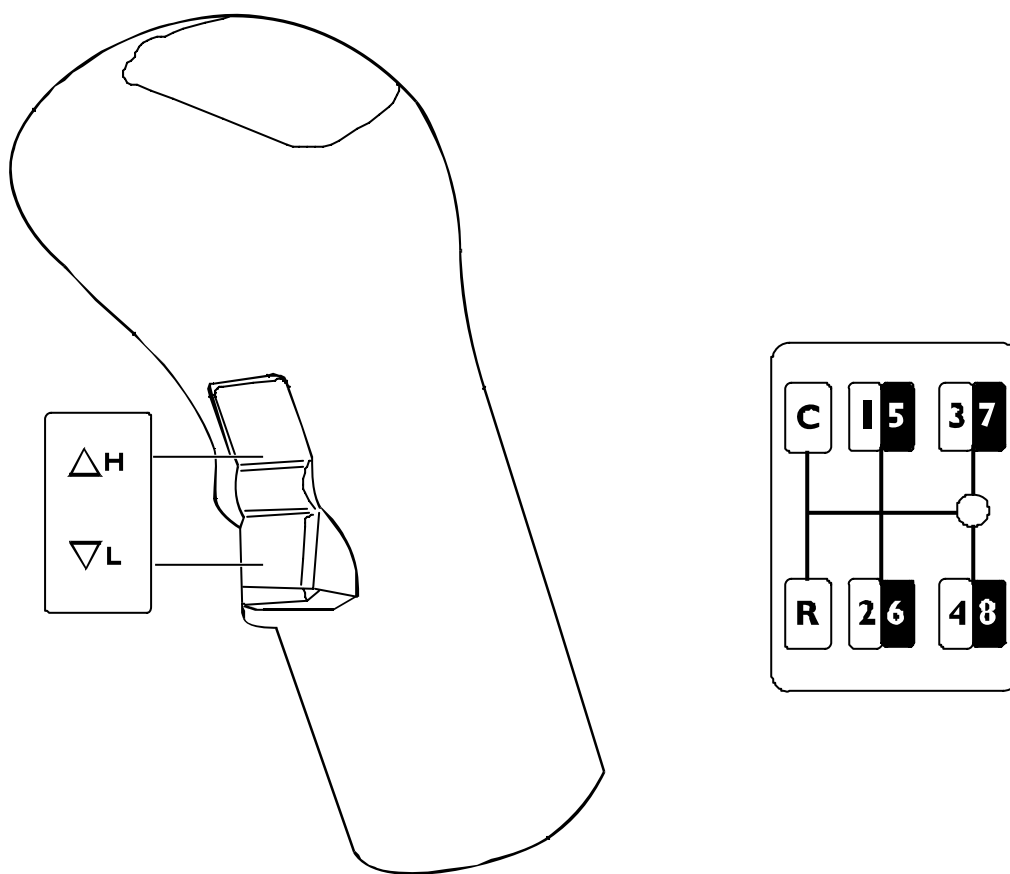





112210

H = high gears - L = low gears

When engaging gears with super H, it is possible to change the ratio using the lever switch on the gear selector. If the lever switch is set to "Low" gears 1st to 4th are selected. If it is set to "High" gears 5th to 8th are selected. The neutral position is at the centre of lane 3/4.

Aquila Trucks Centres

 
MAIN DATA

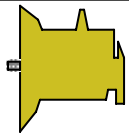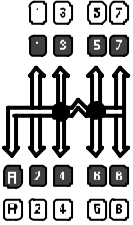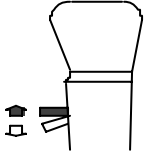	GEARBOX	ZF 9 S 1310 T.O.
	Type Input torque Nm	Mechanical
	Forward gears Reverse gear	9 1
	Control for the four main gears E.R.U* control	Mechanical type Pneumatic type
	Power take off	On request
	Gear Engagement: 1 st - 2 nd - 3 rd - 4 th speeds and E.R.U. Pickup speed and Reverse speed Disengagement protection	Freering synchronizer Fast engage type Sliding sleeves locked by rollers and springs
	Gears	Helical toothing

E.R.U * = Epicyclic reduction gear unit

T.O. = Truck Over Drive (Multiplied)

 Aquila Trucks Centres

	Gear ratios Crawler 9.48 First speed 6.58 Second speed 4.68 Third speed 3.48 Fourth speed 2.62 Fifth speed 1.89 Sixth speed 1.35 Seventh speed 1.00 Eighth speed 0.75 Reverse speed 8.97	
	Type of Oil Quantity	Tutela Truck FE-Gear Tutela Z C 90 7.5 Kg. (8.5 lt)

Aquila Trucks Centres

Aquila Trucks Centres

Gearboxes:**ZF 16 S 1620 T.D.****ZF 16 S 2220 T.D.****ZF 16 S 2520 T.O.**

	Page
DESCRIPTION	15
LOCATION OF GEARBOX DESCRIPTION PLATE	16
OPERATION	16/2
- Slow range	16/2
- Fast range	16/3
EPICYCLIC REDUCTION GEAR CONTROL	16/4
- Reduced speeds	16/4
- Normal speeds	16/5
PNEUMATIC CONTROL OF GEARBOX	16/6
MAIN DATA	17
TIGHTENING TORQUES	19
TOOLS	20
GEARBOX FAULT DIAGNOSIS	20/5
REMOVAL-REFITTING THE GEARBOX	21
- Removal	21
- Refitting	22
OVERHAULING THE GEARBOX	22/1
- Servoshift gear box.....	22/1
- Removal	22/1
- Refitting	22/1
- Disassembly	22/1
- Assembly	22/3
- Refitting	22/5

Aquila Trucks Centres

Page

- Removing the rear box	22/7
- Removing the epicyclic reduction gear unit (ERG)	22/7
- Fitting the epicyclic reduction gear unit (ERG)	22/9
- Refitting the epicyclic reduction gear unit (ERG) rear box	22/12
- Removing the gearbox	22/12
- Removing the main shaft	22/15
- Removing the drive input shaft	22/18
- Removing the transmission shaft	22/19
CHECKS	22/19
- Gerabox	22/19
- Bearings	22/19
- Shafts - gears	22/19
- Hubs - sliding sleeves - forks	22/19
- Rods forks	22/19
- Synchronizing devices	22/20
- BK-type single-cone synchronizing devices	22/20
- Fitting the transmission shaft	22/20
- Fitting the drive input shaft	22/20
- Fitting the main shaft	22/22
- Adjusting the main shaft	22/24
- Fitting the gearbox	22/25
- Adjusting splitter drive fork	22/26
- Oilpump	22/27
- Adjusting the transmission shaft bearing end float	22/27
- Drive input shaft cover	22/28

Aquila Trucks Centres

DESCRIPTION

The ZF 16 S 1620 / 1920 / 2220 gearboxes in the T.D. (direct drive) or T.O. (overdrive) versions are composed of:

- A central box containing the main shaft, input shaft, layshaft and the gears for the four forward speeds and one reverse gear.
- A rear box containing the Epicyclic Reduction Gear Unit (ERG). Its function is to double the number of forward speeds by using epicyclic gears with helical toothing. This produces a range of gears that, starting with the four incoming speeds, makes it possible to have eight different ratios at the output (four normal speeds plus four reduced speeds).
- A front box containing the step-up gearing, called the "splitter", that makes it possible for each of the eight forward speeds and for the reverse gear to obtain an additional double selection.
The "splitter" therefore halves the stagger between two successive ratios and each gear is divided into a slow ratio (L = slow ratio) and a fast ratio (S = fast ratio).

These gearboxes therefore have sixteen forward speeds with finely staggered ratios that can be engaged in succession and two reverse gears.

The synchronizing devices are the single-cone type.

Lubrication is made with a gear pump.

The double-H speed control is fitted with an air-operated "servoshift" device to improve speed selection and engagement.


The servoshift is a device comprising a mechanical/pneumatic module and a double-acting cylinder.

The advantages of this device are:

- Faster speed selection and engagement with less effort.
- It cushions the vibrations of the control linkage, reducing noise.
- Less synchronizing device stress.

The device works mechanically if the pneumatic system breaks down.


Figure 1

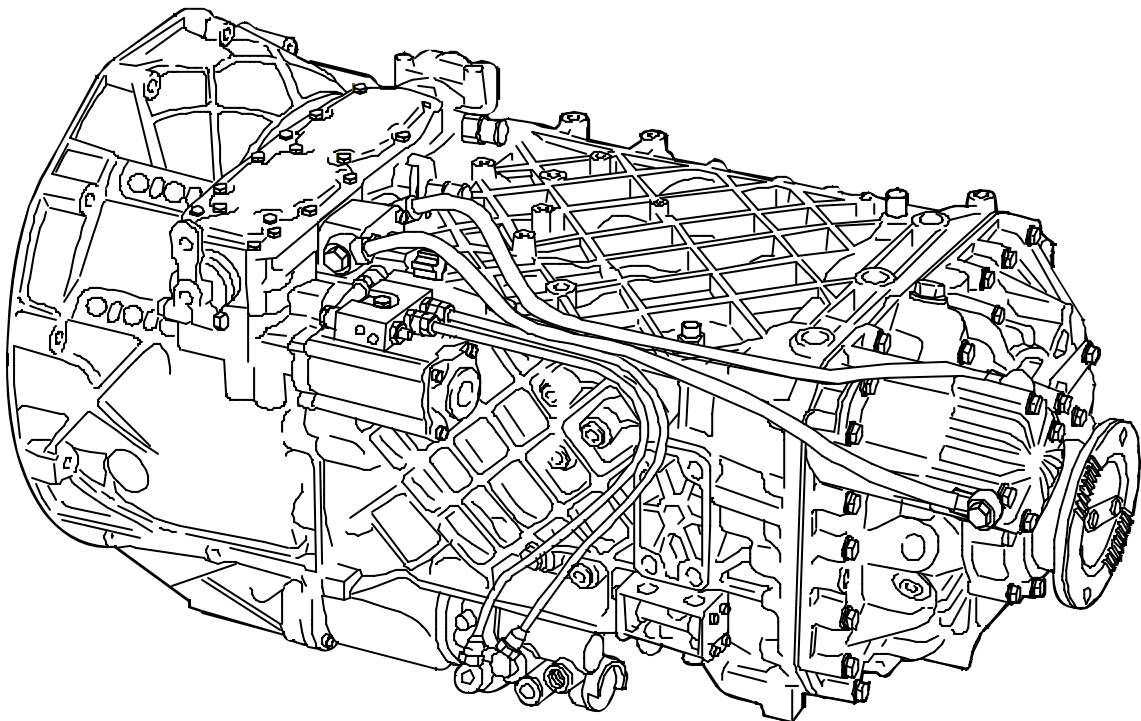

Aquila Trucks Centres

LOCATION OF GEARBOX DESCRIPTION PLATE

Figure 2

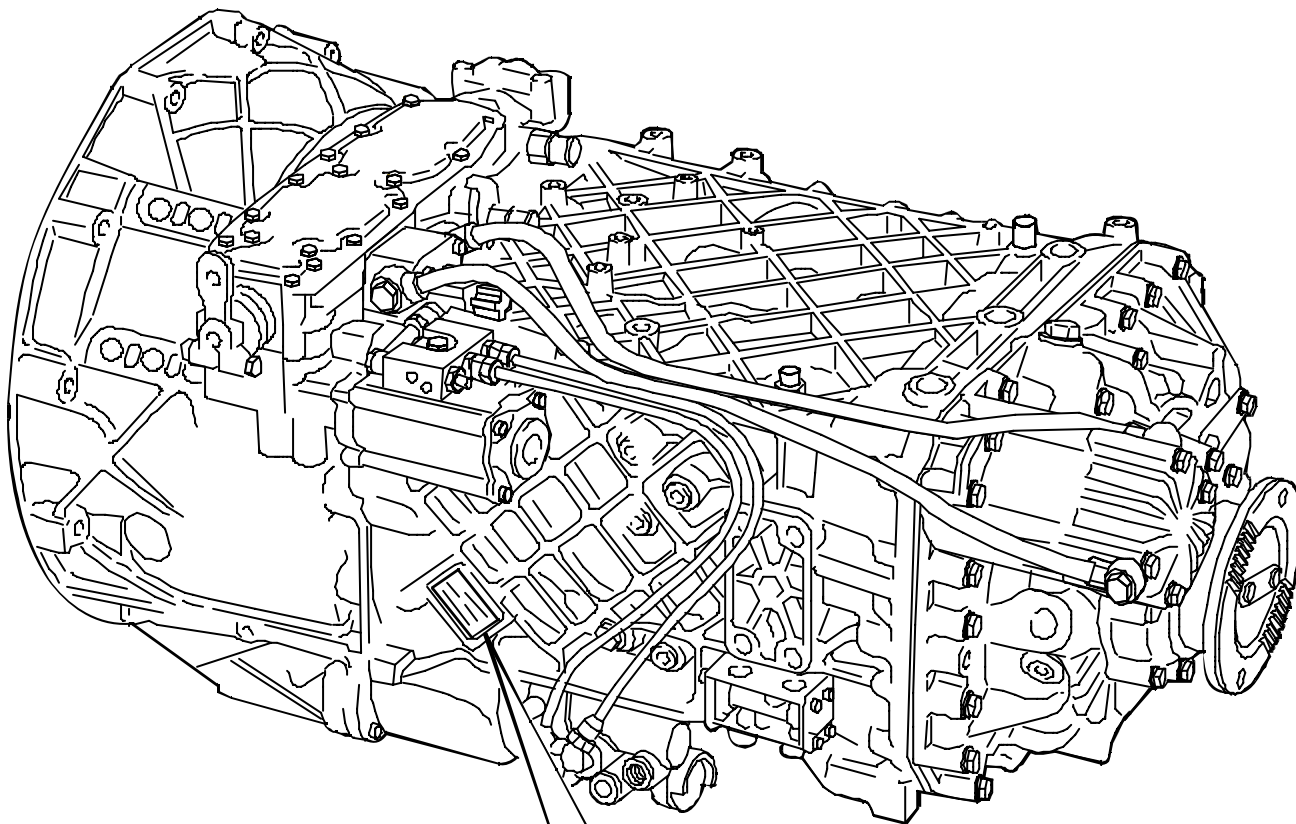

 ZF FRIEDRICHSHAFEN AG MADE IN GERMANY	
A ECOSPLIT	16S 1620/2220/2520
PARTS KIST NO.	SERIAL NO.
B	C
CUSTOMER SPEC. NO.	D
TOTAL RATIO	E
P.T.O.	F
G	H
I	L

16=Number of forward gears

S=Synchronized

1620/1920/2220 input torque

IT = interarder

112202

A = Type of transmission

B = ZF drawing no.

C = Production sequence number

D = Spare part IVECO drawing no.

E = Transmission gear ratio

P.T.O. = Power take-off

F = Tachometer gear ratio

G = Type of power take-off


H = Power take-off gear ratio

I = Replacement oil amount

L = ZF lubricant list name

Aquila Trucks Centres

Figure 2/1

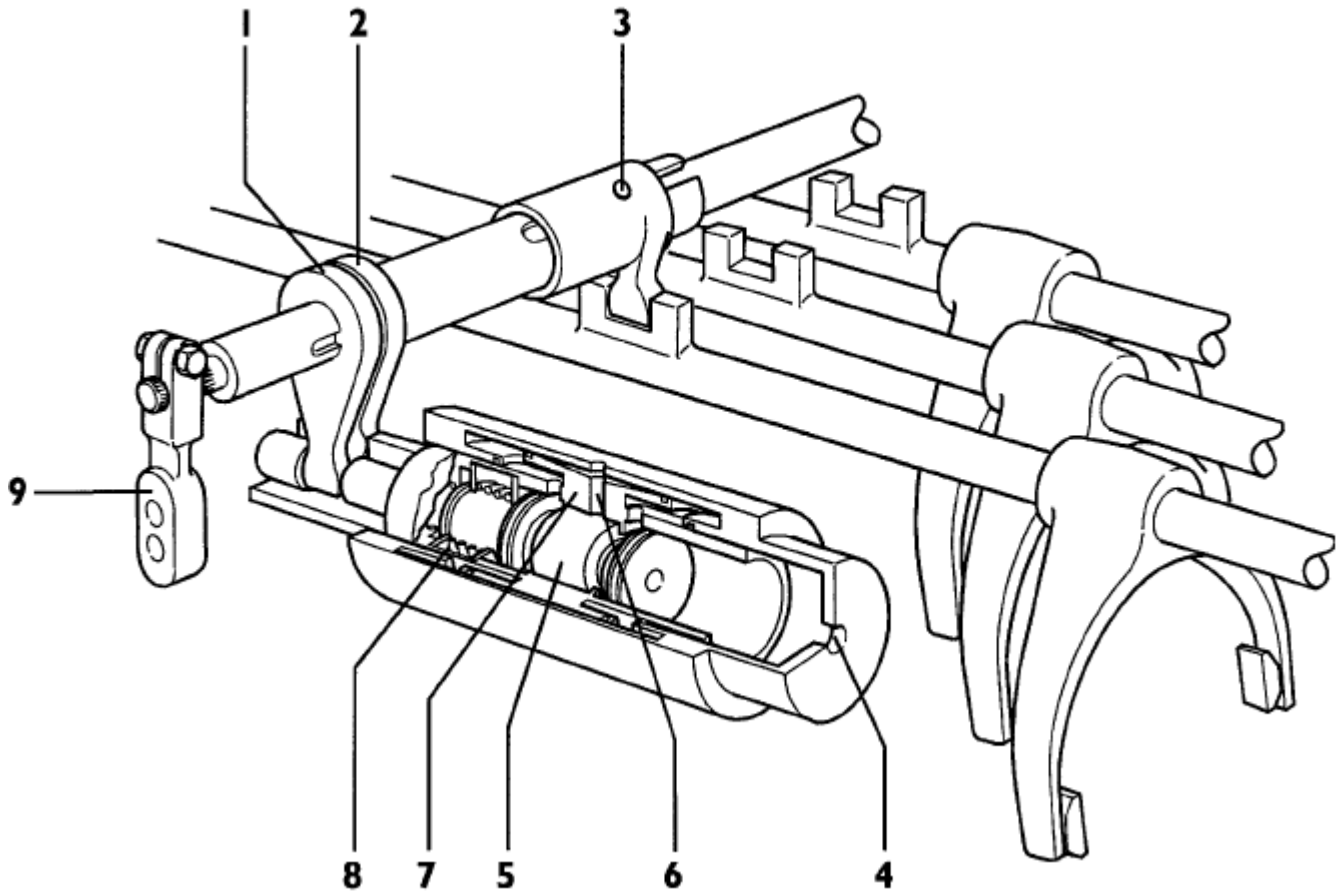

61225

DETAIL OF SERVOSHIFT SPEED CONTROL


1. Control valve lever - 2. Speed control lever - 3. Idle roller - 4. Exhaust - 5. Control piston - 6. Intake - 7. Cylinder -
8. Reaction spring - 9. Longitudinal tie rod connection lever

Aquila Trucks Centres

OPERATION

Slow range

Figure 2/2

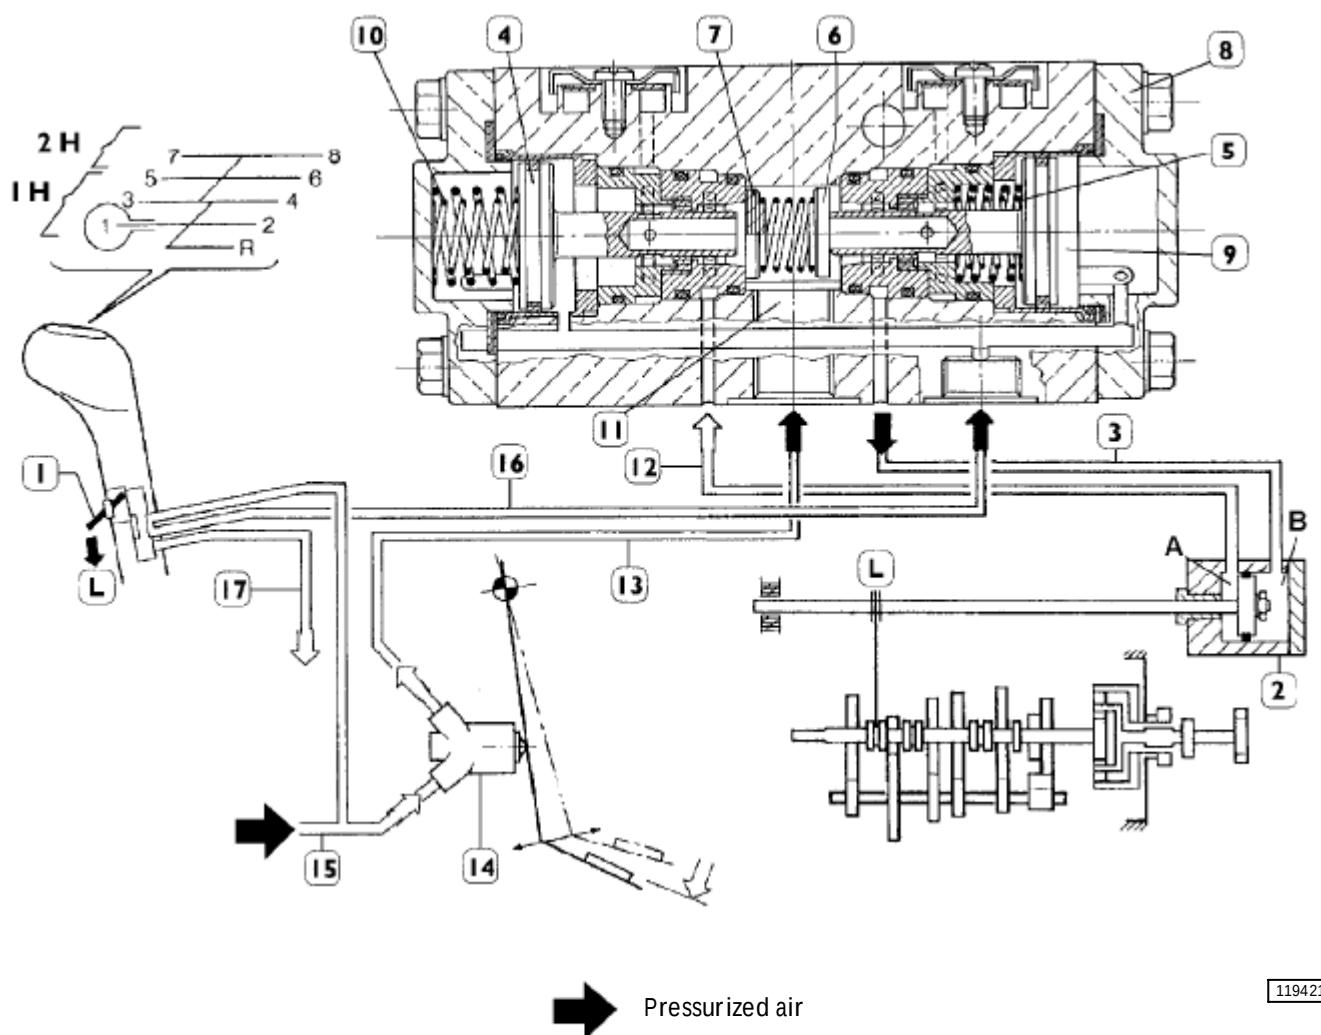

119421

PNEUMATIC DIAGRAM FOR PRE-SELECTION IN SLOW RANGE

The air from the services reservoir supplies the inhibitor valve (14) and the pre-selector (1) simultaneously, through the connecting pipe (15).

On shifting the pre-selector (1) downwards (position L of slow range), the air reaching the pre-selector (1) through the connecting pipe (16) supplies the double control valve (8).

The pressurized air, supplying the above-mentioned valve (8), pushes the pistons (4 and 9) to the left.

The movement of the pistons (4 and 9) makes it possible for the valve (7) to return to its seat and discharge the air contained in the left-hand chamber of the cylinder of the "splitter" (2) into the atmosphere through the connecting duct (12).

At the same time, the valve (6) moves and opens the passage for the air between the inlet duct (11) and the duct (3) connecting with the right-hand chamber of the cylinder of the splitter (2).

On pressing the clutch pedal, the air reaching the inhibitor valve (14) supplies the double control valve (8) through the connecting pipe (13).


The air reaching the valve (8) passes through the inlet duct (11) and, finding the passage clear, supplies the right-hand chamber of the cylinder of the "splitter" (2) through the connecting duct (3).

The piston of this cylinder, moving to the left, then drives the entire train downline, causing the slow range to be engaged.

Aquila Trucks Centres

Fast range

Figure 2/3

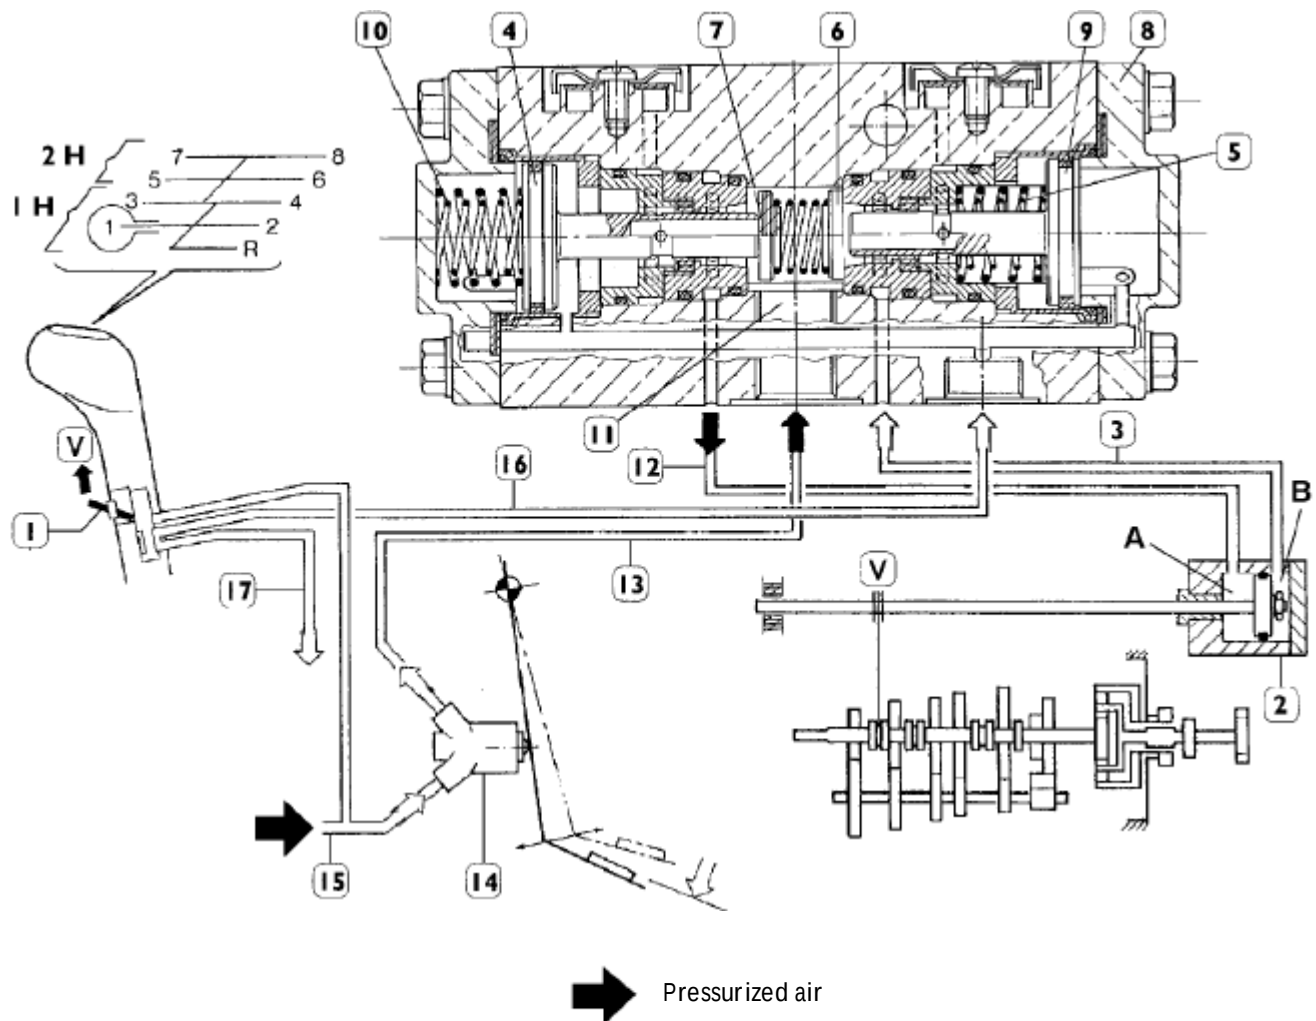

119423

PNEUMATIC DIAGRAM FOR PRE-SELECTION IN FAST RANGE

The air from the services reservoir supplies the inhibitor valve (14) and the pre-selector (1) simultaneously, through the connecting pipe (15).

On shifting the pre-selector (1) upwards (position S of fast range), the air passage between the supply pipe (15) and the double control valve (8) is closed, setting the connecting pipe (16) in communication with the outlet pipe (17).

As a result of the air being discharged by the double control valve (8), the reaction of the spring (10) and of the springs (5) pushes the pistons (4 and 9) to the right.

The movement of the pistons (4 and 9) makes it possible for the valve (6) to return to its seat and discharge the air contained in the right-hand chamber of the cylinder of the "splitter" (2) into the atmosphere through the connecting duct (3).

At the same time, the valve (7) moves and opens the passage for the air between the inlet duct (11) and the duct (12) connecting with the right-hand chamber of the cylinder of the "splitter" (2).

On pressing the clutch pedal, the air reaching the inhibitor valve (14) supplies the double control valve (8) through the connecting pipe (13).

The air reaching the valve (8) passes through the inlet duct (11) and, finding the passage clear, supplies the right-hand chamber of the cylinder of the "splitter" (2) through the connecting duct (12).


The piston of this cylinder, moving to the right, then drives the entire train downline, causing the fast range to be engaged.

Aquila Trucks Centres

EPICYCLIC REDUCTION GEAR CONTROL

Reduced speeds

Figure 2/4

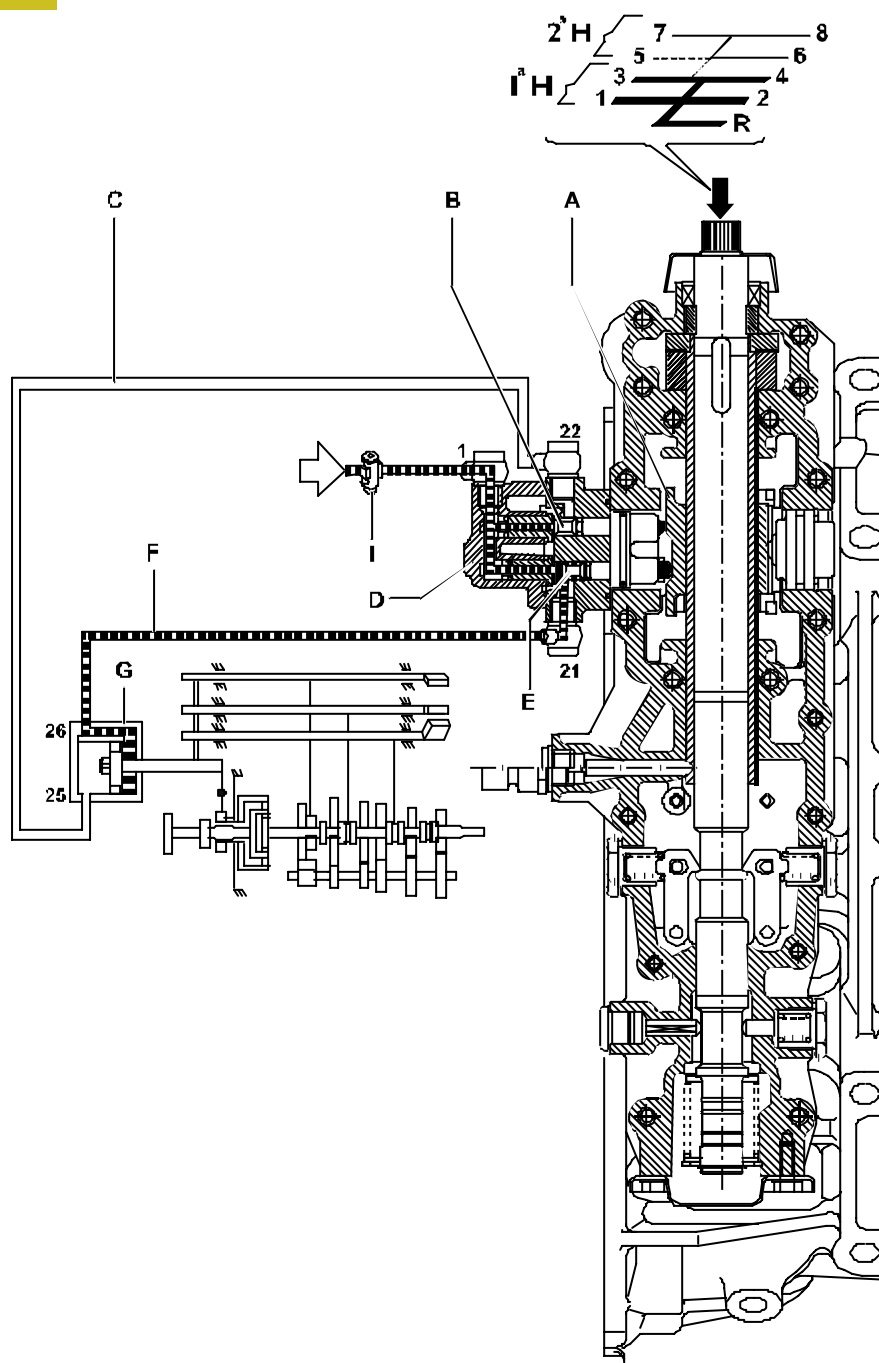

PNEUMATIC SYSTEM DIAGRAM OF REDUCED SPEED ENGAGEMENT

The air from the vehicle's pneumatic system is reduced to a pressure of 9.5 bars by the pressure reduction unit (1). It then supplies the inhibitor valve D.

Now, taking the control lever onto the reduced speed position (1st H), the body A, integral with the speed control rod, opens the valve E that, via the pipe F, supplies the cylinder G.

The piston of the cylinder G, moving to the right, activates the ERG.

At the same time, the valve B closes, making it possible for the air from the pipe C to discharge into the atmosphere.


The movement of the piston causes the contact of the electric switch to close, which turns on the indicator light in the cab with the tortoise symbol.

NOTE The reduced speeds can be used in both slow range and fast range conditions, depending on the position of the pre-selector.

Aquila Trucks Centres

Normal speeds

Figure 2/5

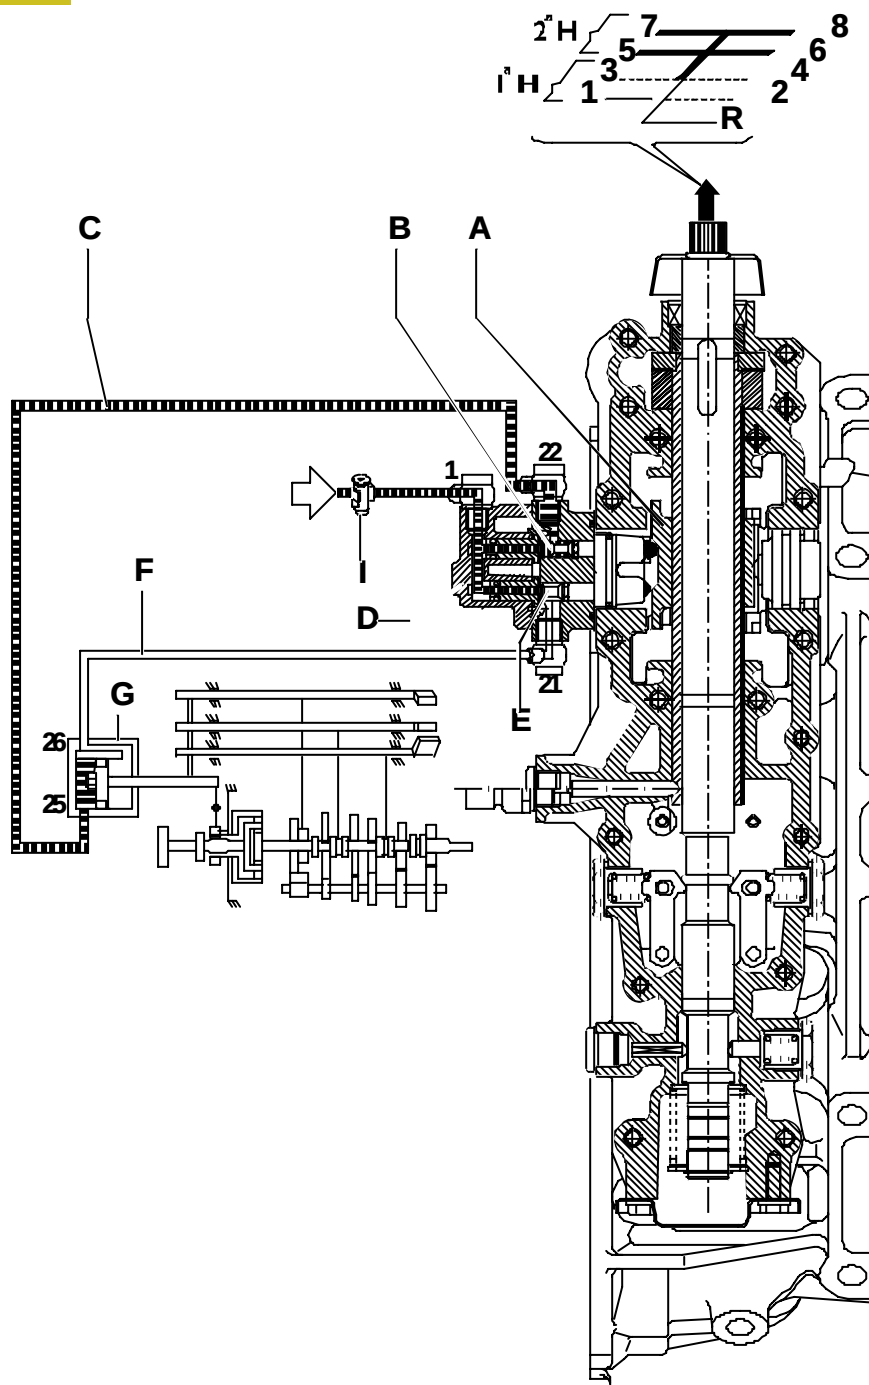

86337

PNEUMATIC SYSTEM DIAGRAM OF NORMAL SPEED ENGAGEMENT

The air from the vehicle's pneumatic system is reduced to a pressure of 9.5 bars by the pressure reduction unit (1). It then supplies the inhibitor valve D.

Now, taking the control lever onto the normal speed position (2nd H), the body A, integral with the speed control rod, opens the valve B that, via the pipe C, supplies the cylinder G.

The piston of the cylinder G, moving to the right, deactivates the ERG.

At the same time, the valve E closes, making it possible for the air from the pipe F to discharge into the atmosphere.


The movement of the piston causes the contact of the electric switch to close, which turns off the indicator light in the cab.

NOTE The normal speeds can be used in both slow range and fast range conditions, depending on the position of the pre-selector.

Aquila Trucks Centres

PNEUMATIC CONTROL OF GEARBOX

Figure 2/6

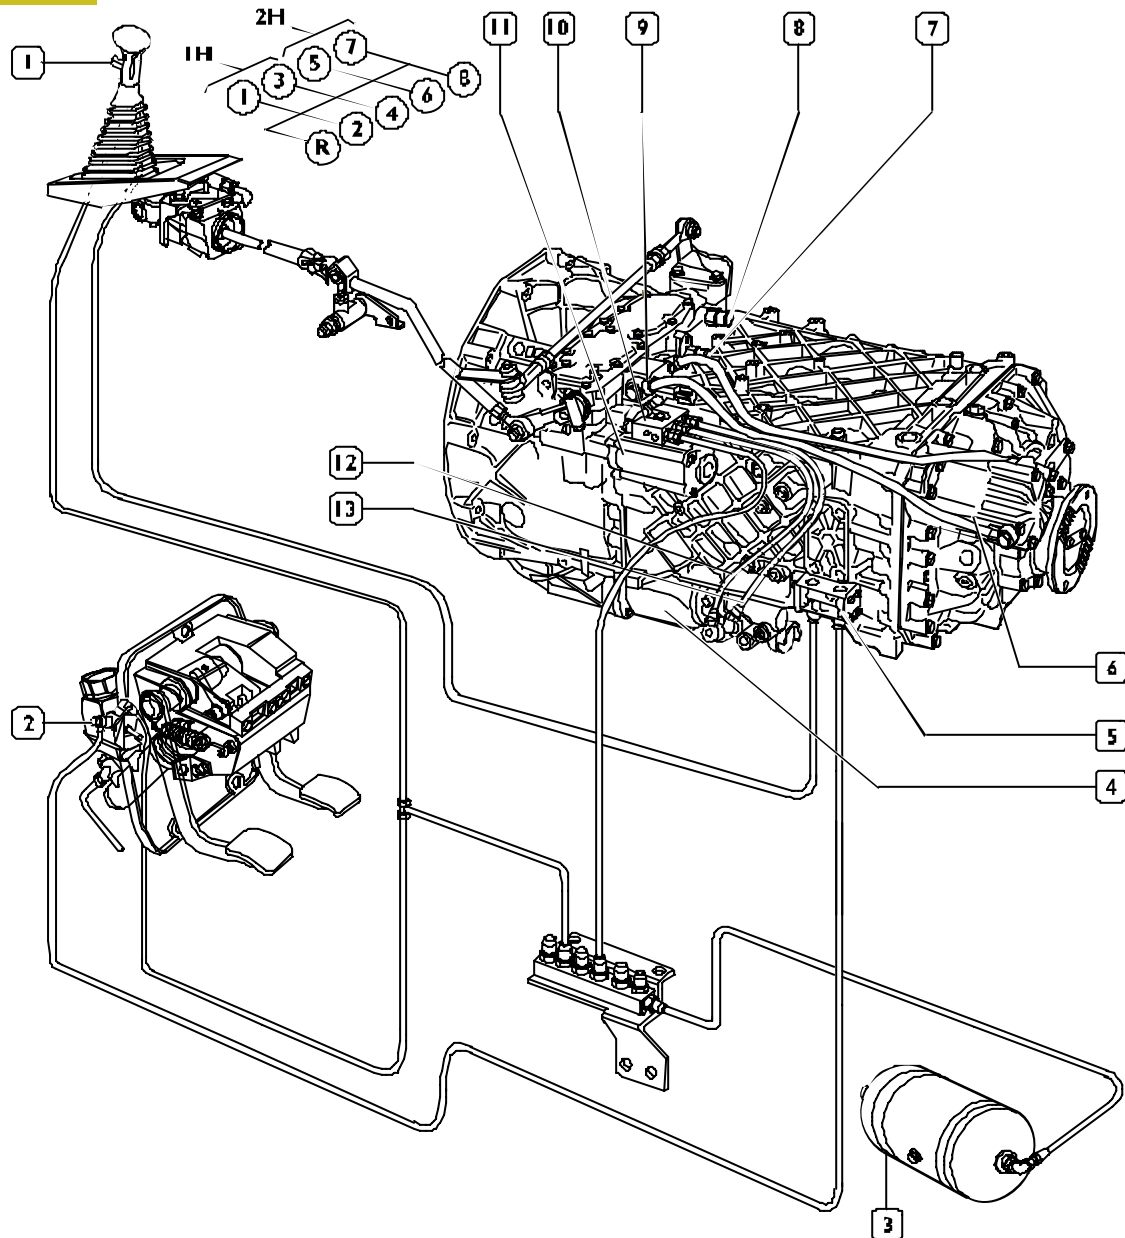

119423

DIAGRAM OF PNEUMATIC CONTROL OF GEARBOX WITH SERVOSHIFT

1. Splitter control selector - 2. Inhibitor valve - 3. Services reservoir - 4. Servo-clutch - 5. Double control valve - 6. ERG driving cylinder - 7. Switch signalling gearbox in neutral - 8. Reverse gear switch - 9. Control valve - 10. Distributor - 11. Servoshift - 12. Piping - 13. Piping

The splitter (slow speeds - fast speeds) and epicyclic reduction gear unit are air operated and controlled with the speed control lever.

The selector (1) pre-selects the L range (slow) and V range (fast) via the double control valve (5). They are inserted via the inhibitor valve (2) when the clutch pedal is pressed.

The epicyclic unit engages and disengages automatically when passing from the 1st H to the 2nd H and vice versa.

When the gearbox is in neutral, the driving cylinder (6) is operated by the pressurized air via the control valve (9).

Through the piping (12), the distributor (10) supplies the servo-clutch (4) that, if operated with the clutch pedal, supplies the servoshift (11) through the piping (13).



 
A switch (8) on the gearbox control turns on the reversing light when reverse gear is engaged.

The switch (7) signalling when the gearbox is in neutral is on the cover of the gear control.

Another switch on the ERG driving cylinder (6) turns on the indicator light in the cab (with the symbol of the tortoise) when the epicyclic reduction gear is engaged.

Aquila Trucks Centres

MAIN DATA

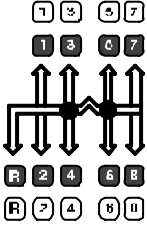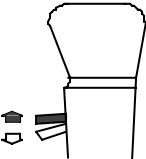

GEARBOX		
	Type	Mechanical
	Torque at input ZF 16 S 1620 T.D. ZF 16 S 2220 T.D. ZF 16 S 2520 T.O.	1700 2200 2500
	Speeds	16 forward speeds 2 reverse speeds
	Control of the four main speeds ERG control * Splitter control	Mechanical Pneumatic Pneumatic
	Power take-off	On request
	Gear engagement:	
	Forward speeds	Free ring synchronizer Bk-type single cone 1 st -2 nd -3 rd -4 th -5 th -6 th speed
	Reverse gear	Quick engagement
	Gear anti-disengagement	Sliding sleeves held by pawls and springs.
	Gear wheels	Helical-toothed

* ERG = Epicyclic reduction gear unit










T.D. = Truck Direct Drive

T.O. = Truck Over Drive (Multiplied)

  
Aquila Trucks Centres

GEARBOX		ZF 16 S 1620 T.D. ZF 16 S 1920 T.D. ZF 16 S 2220 T.D.	ZF 16 S 2520 T.O.
	Gear ratio		
	1 ^a	16.41	13.80
	2 ^a	13.80	11.54
	3 ^a	11.28	9.49
	4 ^a	9.49	7.93
	5 ^a	7.76	6.53
	6 ^a	6.53	5.46
	7 ^a	5.43	4.57
	8 ^a	4.57	3.82
	9 ^a	3.59	3.02
	10 ^a	3.02	2.53
	11 ^a	2.47	2.08
	12 ^a	2.08	1.74
	13 ^a	1.70	1.43
	14 ^a	1.43	1.20
	15 ^a	1.19	1.00
	16 ^a	1.00	0.84
	1 ^a RM	15.36	12.92
	2 ^a RM	12.92	10.80
	Type of oil	Tutela Truck FE-Gear Tutela ZC 90	
	Quantity	Dry change	
	ZF 16 S 1620 T.D. Kg	10	
	litres	11	
	ZF 16 S 1920 T.D. Kg	12	
	ZF 16 S 2220 T.D./T.O. litres	13	
	Transmission and main shaft bearings	tapered rollers	
		tapered rollers	
 	Drive output flange assembly temperature	Max. 70 °C	
   	Transmission shaft gear assembly temperature	160 ÷ 180 °C	

    Aquila Trucks Centres

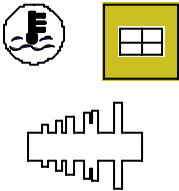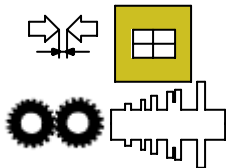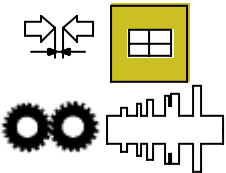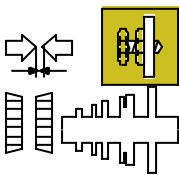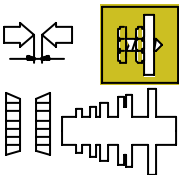GEARBOX			
	Main and transmission shaft bearing and fixed hub assembly temperature	100 °	
	End float: - ERG* planet wheel shaft bearing - ERG* fixed hub split ring - Transmission shaft bearing split ring	with adjusting ring 0 ÷ 0.1 mm	without adjusting ring 0 ÷ 0.26 mm
	End float of gear of drive input shaft, first, second and third speed	minimum 0.2 mm	
	Fourth speed gear end float	minimum 0.05 mm	
	End float between planet wheel holder and ERG* planet wheels	0.4 ÷ 1.3 mm	
	End float of bearings of shafts: main and transmission on drive input side	0.0 ÷ 0.1 mm	
	Main shaft rear bearing split ring end float	0.0 ÷ 0.05 mm	
	Wear limit check distance of synchronizer rings: - first/second speed - third/fourth speed - ERG *	1.5 mm at 50 Nm (5 kgm) 0.8 mm 1.2 mm	
	Reverse gear idler end float	0.4 ÷ 1.5 mm	
	End float or pre-load of half rings of main and drive input shafts	from - 0.05 to + 0.05	
* ERG = Epicyclic reduction gear unit			

 
Aquila Trucks Centres

GEARBOX		
	Distance for the clearance adjustment of the sliding blocks of the splitter control fork on the relevant sliding sleeve	94.1 mm 107.9 mm
	Clearance of the sliding blocks of the forks in the seats of the sliding sleeves	0.6 ÷ 1.2 mm
	Assembly distance of twin-lipped seal on rear cover	12.5 ^{+1.0} mm

Aquila Trucks Centres

TIGHTENING TORQUES

Figure 3






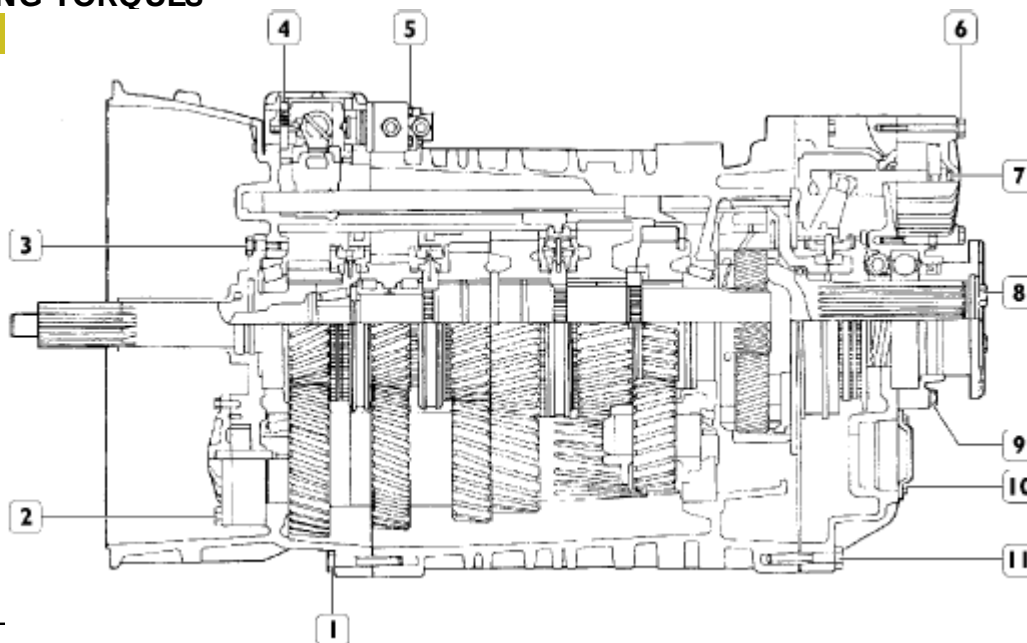


DESCRIPTION




		JE	
		Nm	kgm
1	Screws fixing splitter box	50	5
2	Screws fixing oil pump	46	4.6
3	Screws fixing drive input shaft cover	46	4.6
4	Screws fixing gearbox	43	4.3
5	Screws fixing valve to gearbox	23	2.3
6	Screws fixing ERG* cylinder to the box	50	5.0
7	Self-locking nuts fixing splitter control rods and ERG to pistons	150	15.0
8	Screws fixing drive output flange	120	12
9	Screws fixing rear cover	50	5
10	Screws fixing PTO fitting cover	79	7.9
11	Screws fixing ERG* box	50	5
	Fixing screws		
	- M18 x 1.5	35	3.5
	- M22 x 1.5	50	5
	- M24 x 1.5	60	6
	Clutch disengagement bearing drive fork support fastening screws	150	15
	Screws fixing RM gearbox bottom cover	49	4.9
	Screws fixing gearbox side cover	23	2.3
	Socket-head screws fixing pipes	35	3.5
	Oil drain plugs	80	8.0
	Oil drain plugs M38 x 1.5 with magnetic filter	140	14.0
	Pressure switches / pulse transmitters	50	5.0
	Screws fixing oil pump cover	46	4.6
	Switches on gearbox	35	3.5
	Screws fixing splitter control valve	9,5	0.9
	Nut for screw fixing lever to gearbox control rod	5	4.9
	Threaded pins for articulation of ERG* control fork	250 z	25 z
	Oil vapour breather pipe	10	1
	Push rods for positioning rods	50	5
	Screw for reverse gear shaft retaining plate (if applicable)	86	8.6
	Screws fixing fork on splitter control shaft	60	6

Aquila Trucks Centres




TOOLS

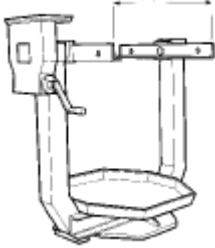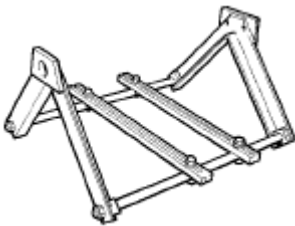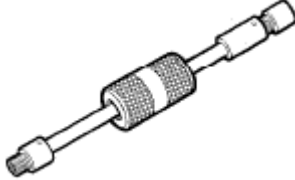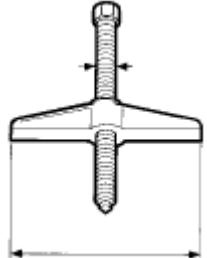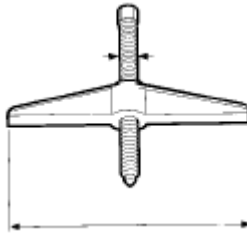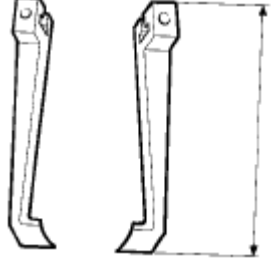TOOL No.	DESCRIPTION
99322205	 Rotary stand for overhauling assemblies
99322225	 Stand for supporting assemblies (to be fitted on stand 99322205)
99340205	 Percussion extractor
99341003	 Single-acting bridge
99341004	 Single-acting bridge
99341012	 Pair of brackets






Aquila Trucks Centres

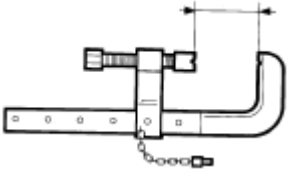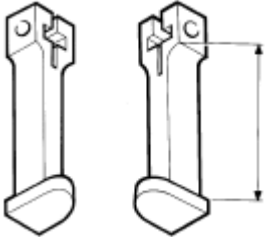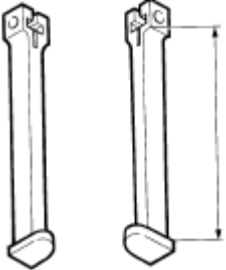TOOLS	
TOOL No.	DESCRIPTION
99341015	 Clamp
99341019	 Pair of tie rods with grips
99341020 99341021	 Pair of tie rods with grips
99341022	 Grips
99341024 99341025	 Grips
99345058	 Extractor reaction block

Aquila Trucks Centres

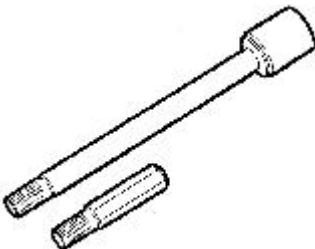
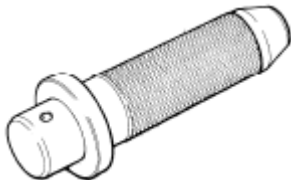
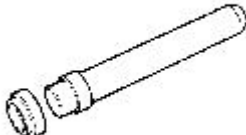
TOOLS	
TOOL No.	DESCRIPTION
99345097	 Reaction tool to extract sun gear and drive in main shaft oil pipe
99347092	 Pin to extract gearbox front and rear centring pins (use with 99340205)
99360502	 Rings to remove and refit reduction gear unit
99370006	 Grip for interchangeable drifts
99370007	 Grip for interchangeable drifts
99370113	 Beater for mounting the gasket and/or bushings of control box for the gears

 Aquila Trucks Centres

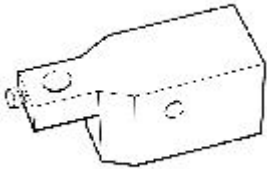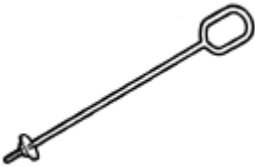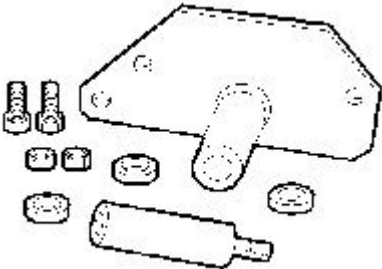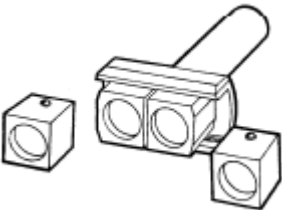TOOLS	
TOOL NO.	DESCRIPTION
99370415	 Door base of comparator to adjust secondary shaft bearings (to be used with 99395604)
99370420	 Key for fitting gasket on gearbox front cover (use with 99370006)
99370449	 Tool to extract and insert main shaft
99370450	 Tool to adjust splitter control fork
99370465	 Tool to notch safety plates
99370565	 M10 eyebolts (2) for lifting various assemblies

Aquila Trucks Centres

TOOLS

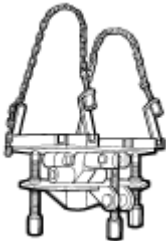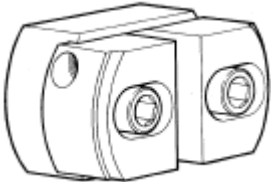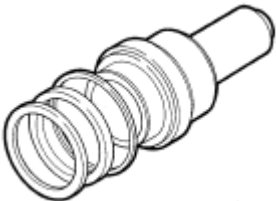TOOL NO.	DESCRIPTION	
99370629		Mount to support gearbox when removing and refitting it on the vehicle
99371050		Brackets to support gearbox when overhauling (use with 99322205 - 99322225)
99374093		Drift to mount external bearing races (91-134) (use with 99370007)
99374221		Key to fit gaskets on rear cover
99374370		Key to fit oil deflector on direct drive shaft (use 99370006)
99395604		Dial gauge (0-10 mm)

Aquila Trucks Centres

GEARBOX FAULT DIAGNOSIS

Principal operational anomalies:

Visible Failure	Possible cause	Repair action
NOISE	Excessive clearance between gears.	Overhaul the gearbox and replace worn gears.
	Gears, bearings, synchronizer rings and connecting parts worn.	Replace worn parts.
	Insufficient lubricating oil level in the gearbox.	Top up to correct level with Tutela ZC 90 or Tutela Truck Fe-Gear oil.
GEARS DISENGAGE SPONTANEOUSLY AND ENGAGE INCORRECTLY	Gears not properly engaged.	Fully engage gears before releasing clutch pedal.
	Gearshift forks broken.	Remove transmission, overhaul and replace parts as necessary.
	Synchroniser rings worn	Inspect gears and sliding sleeves for gear engagement, replacing any which are damaged; replace synchroniser rings
	Defective operation of epicyclic reduction gear	Inspect and replace damaged parts
GEARS DIFFICULT AND STIFF TO ENGAGE	Forks stiff on rods	Dismantle the transmission and look for the cause of the stiffness; repair as necessary
	Movement of sliding sleeves obstructed	Inspect and repair as necessary
	Transmission filled with unsuitable fluid.	Drain the oil and refill with Tutela ZC 90 or Tutela Truck Fe-Gear oil
	Clutch not disengaging	Adjust control or replace.
PNEUMATIC CONTROL SYSTEM DEFECTIVE OR INEFFICIENT *	Defective air pipe connections	Check the connections and restore them if necessary.
	Air pipe bent and/or crushed	Replace the pipe
	Air leaks from the pipe.	Check there are no leaks in the pipes and fittings; use an acoustic appliance or soapy water. Replace or tighten the seal if necessary.
	Air leaks from the pressure reduction valve.	Replace the valve or its seals.
	Defective pressure reduction valve setting.	Check the valve pressure. Replace if necessary.
	Air leaks from the inhibitor valves. Inhibitor valves do not work.	Check the inhibitor valves. If necessary, replace the valves or their seals.
	Air leaks from the driving cylinders.	Replace the gaskets and seals of the driving cylinders.

* The checks have to be made with the engine switched off and the air tanks full.

Aquila Trucks Centres

Aquila Trucks Centres

530210 REMOVING-REFITTING THE GEARBOX



Removal


Figure 4

To remove the gearbox, proceed as follows:

- Set the vehicle over a pit or on a lift.
- Disconnect the battery cables to prevent any short-circuiting.
- Disconnect the cable (11) using the connectors (→) and breaking the safety lead off the screw (10).
- Disconnect the connector (7) and the pipe (8) from the power take-off (if applicable).
- Disconnect the air pipes (4) and (5).
- Free the pipes (6) from the clamps (12).
- Undoing the fasteners (13), disconnect the tie rod (14) from the gearbox.
- Loosen the screw (2) and extract the lever (3) together with the tie rod (1) from the gearbox after marking its position for reassembly.
- Remove the fasteners (15) of the gearbox bell, accessible from above.

NOTE For gearboxes with the interarder, proceed as follows:

- Drain off the engine coolant and disconnect the pipes from the heat exchanger.
- If the cross member of the chassis frame prevents you from removing the gearbox, you need to drain off the oil from the interarder; take out the nuts and screws fixing the heat exchanger to the interarder, remove the stud bolts and detach the heat exchanger.

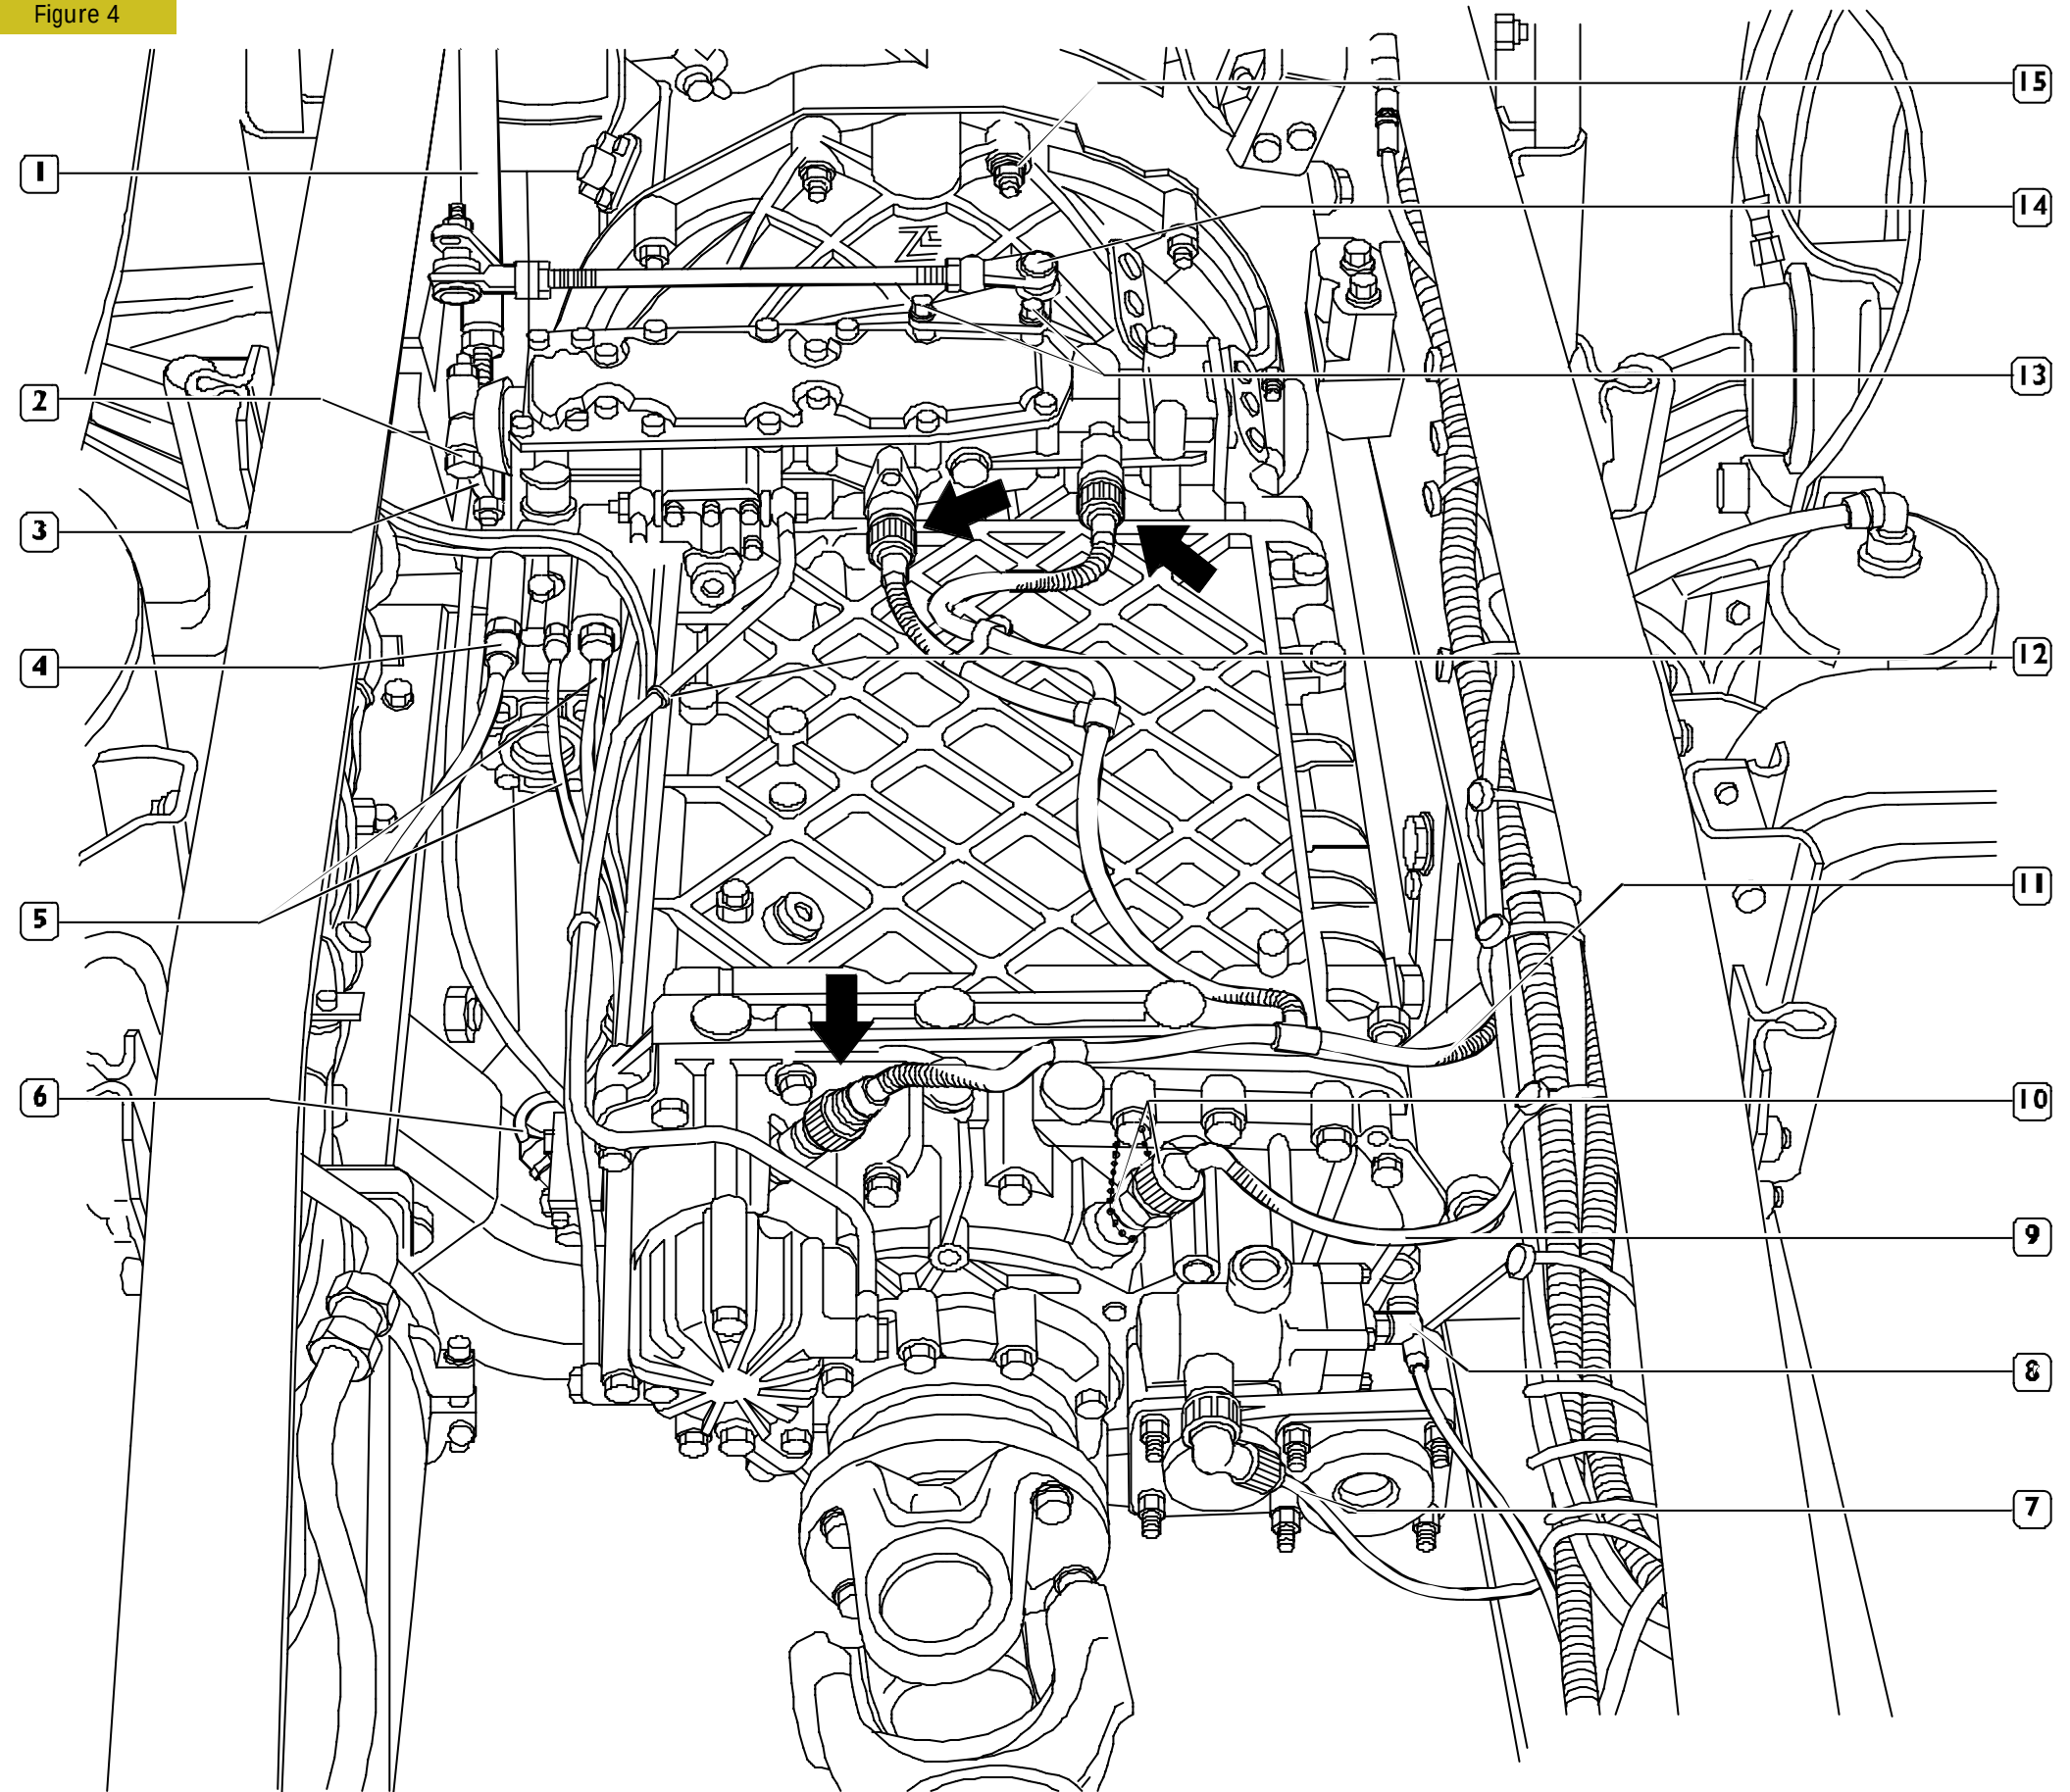


Aquila Trucks Centres

Working from under the vehicle:

Figure 5

- Disconnect the pipes (1) and (2), previously freed from the clamps.
- Unscrew the nuts (5) and tie the clutch cylinder (6) to the vehicle's chassis frame appropriately.
- Undoing the side fasteners (8), take off the cross member (7).
- Place a hydraulic jack equipped with the mount 99370629 (1, SENZA CODICE) under the gearbox.
- Disconnect the propeller shaft (10) by undoing the screws (9) and tie it to the vehicle's chassis frame appropriately so it will not interfere with the removal of the gearbox.
- Complete removing the gearbox bell fasteners (4).
- Afterwards, extract the gearbox from the engine by bringing it suitably back out of the space occupied by the exhaust pipe (3). Then lower the jack and take out the gearbox.

Figure 6

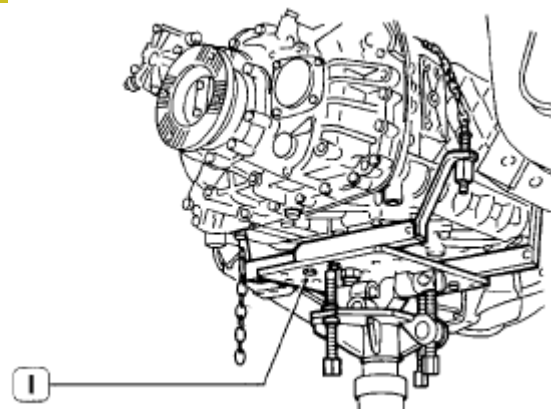

45369


Refitting



Carry out the operations performed for removal in reverse order and tighten the fixing nuts and screws to the required torque.

NOTE For gearboxes with the intarder, proceed as follows:

- Refit the heat exchanger to the intarder, inserting new seals; fit the stud bolts and tighten the fixing screw and nuts to the required torque.
- Connect the coolant pipes to the heat exchanger and replenish the gearbox with the required amount of oil.
- Fill the engine cooling system as described in Section 2 Engine.

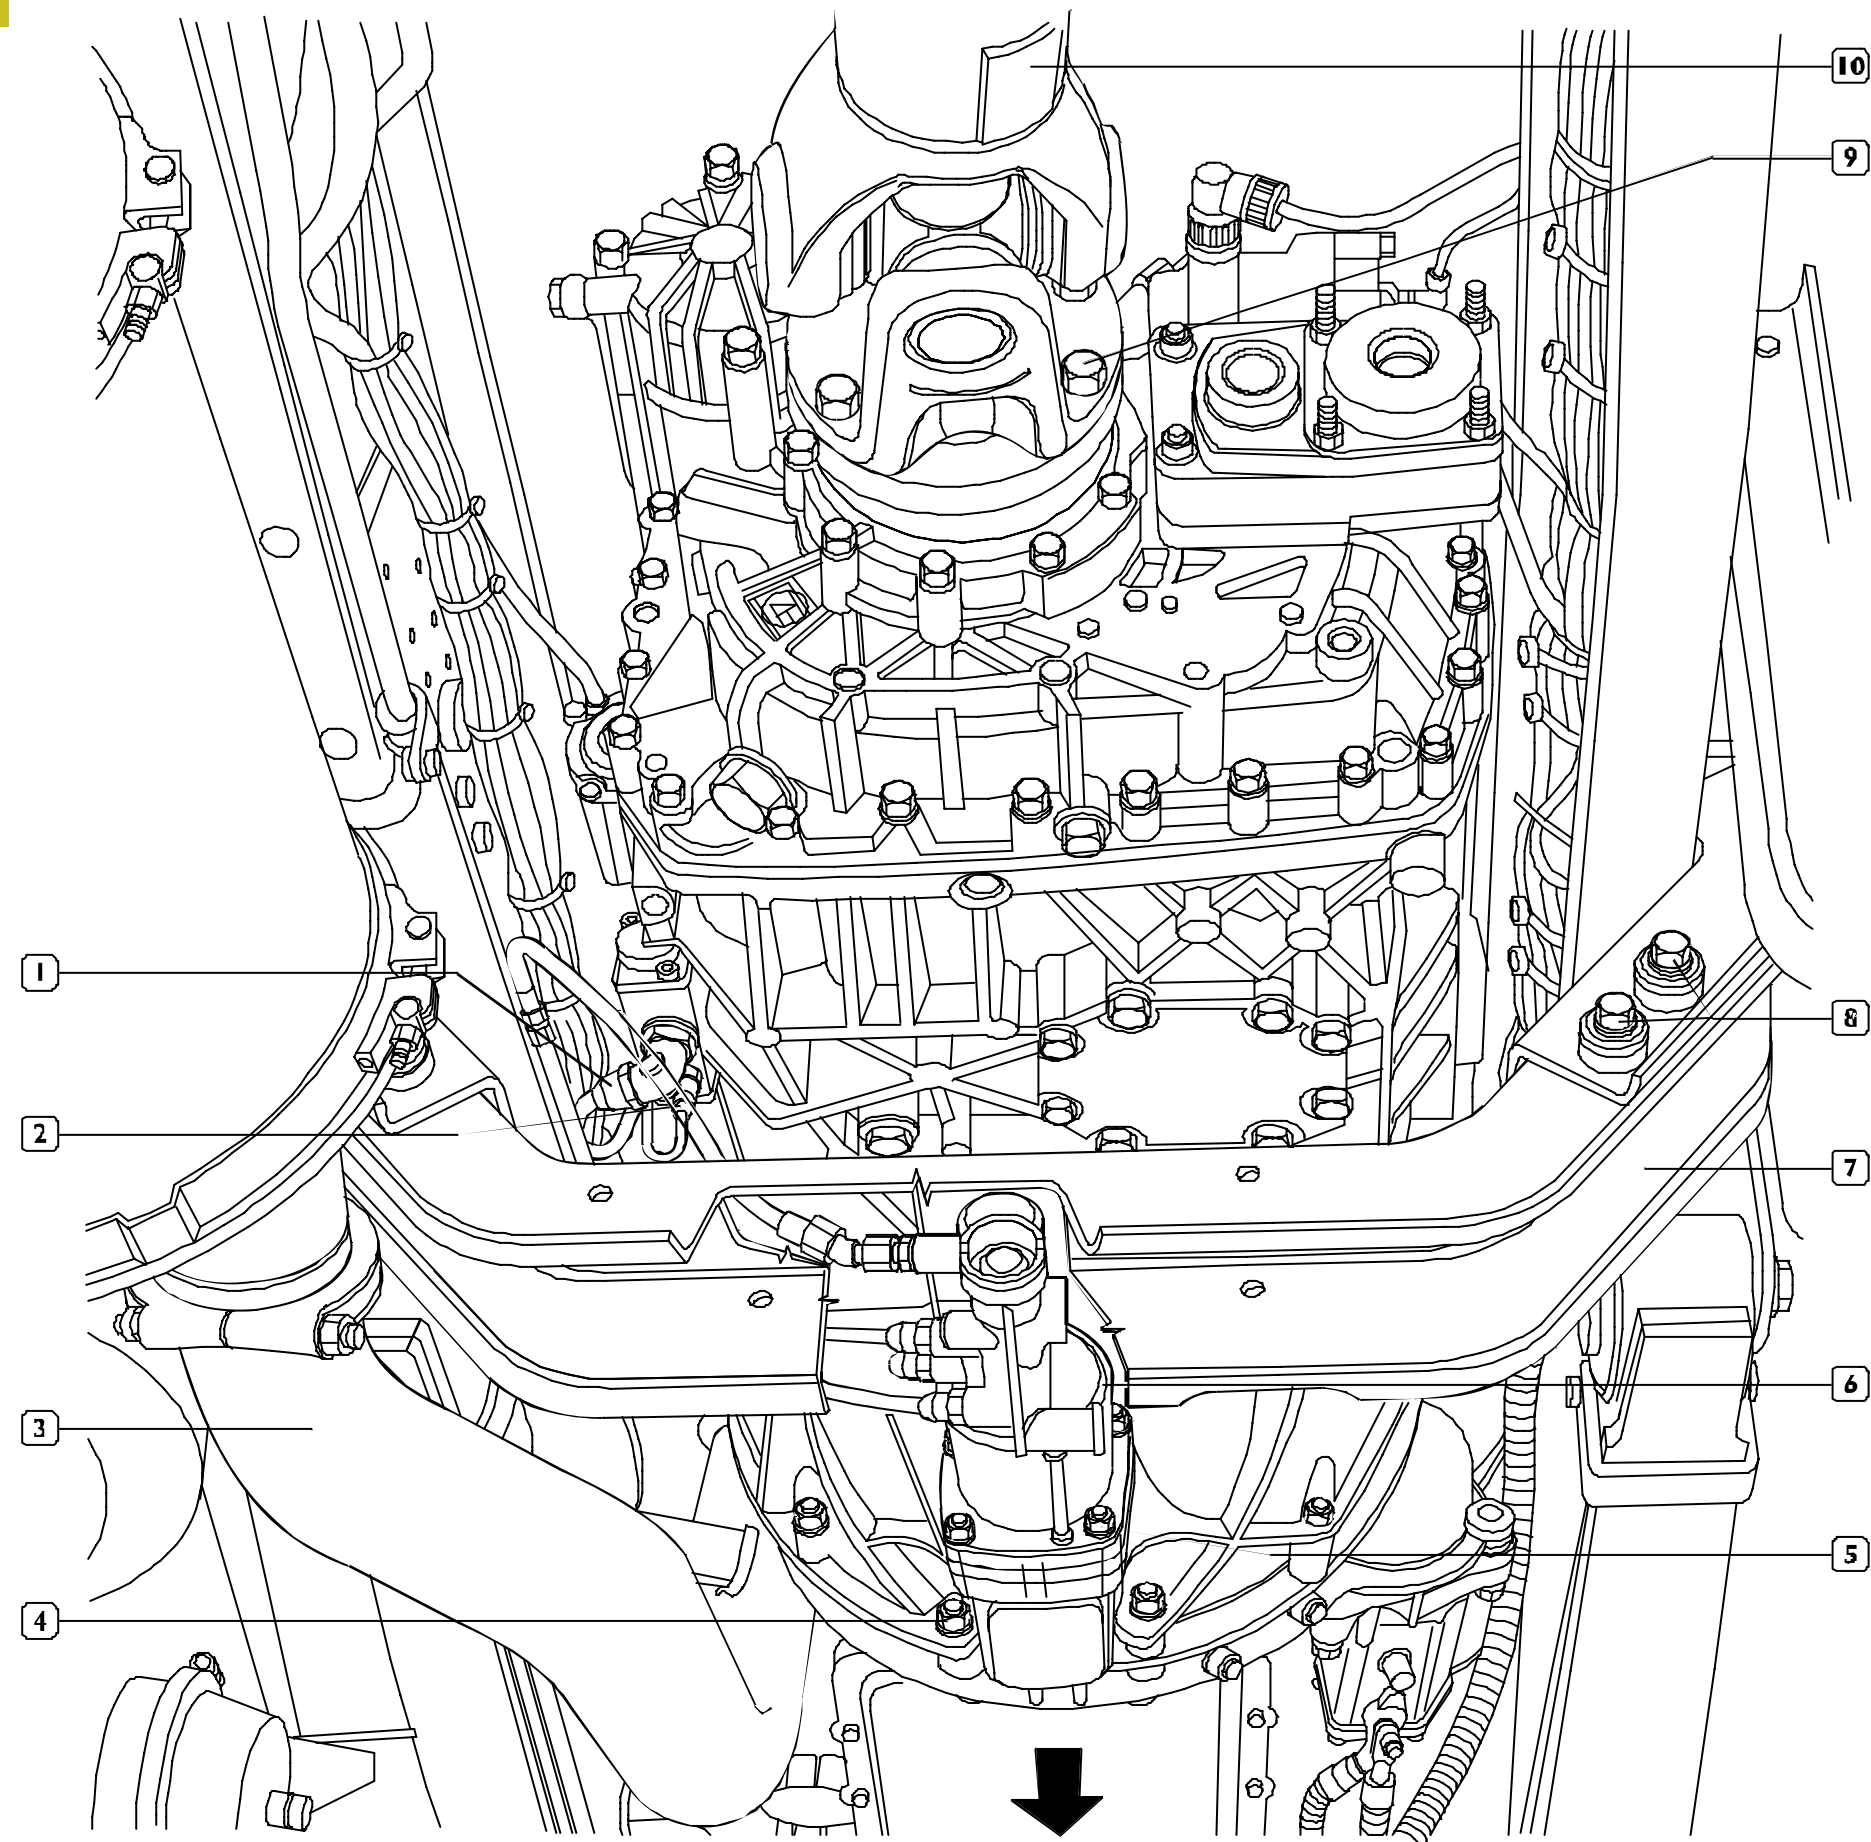

71752

Aquila Trucks Centres

530210 OVERHAULING THE GEARBOX

NOTE Wash the assembly thoroughly before overhauling.

The specific and/or general tools must be used in the way for which they were designed.

To facilitate assembly, put the removed parts away on the specific tray in their order of removal.

Upon assembly, the following must always be replaced with new parts: the gaskets and seals, spring pins, safety plates and springs. Nuts and screws must be tightened to the prescribed torque with their thread dry and degreased.



Keep to the specific regulations when disposing of lubricant and detergents.


NOTE There follows a description of the operations for overhauling the ZF 16 S 2520 gearbox that, unless stated otherwise, hold for the ZF 16 S 1920/2220/2320 gearboxes too.

Fit the supporting brackets 99371031 to the assembly.

Using ropes with hooks and a movable lift, position the assembly on the rotary stand 99322205 together with the mount 99322225.

530220 Servoshift gear box Removal

Figure 6/1

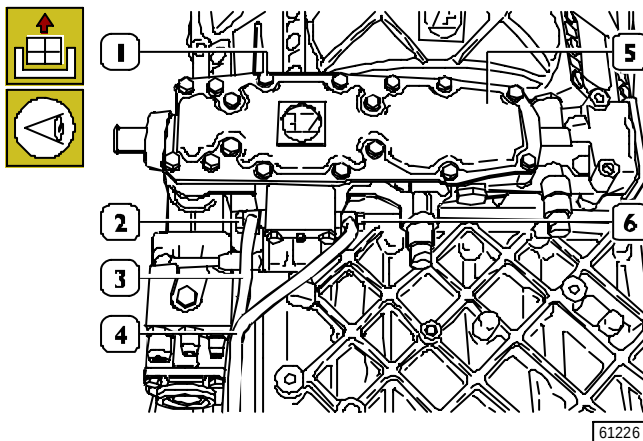

Note down the assembly position of the pipes (3 and 4) and disconnect them from the gearbox (5) by unscrewing the fittings (2 and 6) together with the washers.

Unscrew the fixing screws (1) and remove the gearbox (5) together with the servoshift from the gearbox.

NOTE The servoshift cannot be overhauled. Replace it if you find any trouble.


Refitting



For refitting, carry out the steps described for removal in reverse order, fitting new seals and tightening the fixing screws (1) and fittings (2 and 6) to the required torque.


Disassembly

Figure 6/2

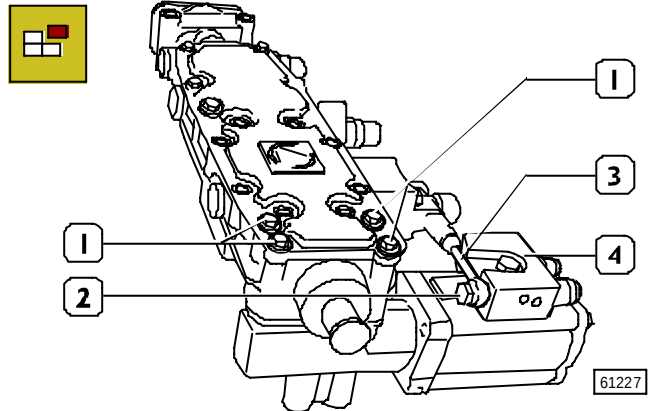

Unscrew the fitting (2) and disconnect the air pipe (3) from the distributor (4).


Figure 6/3

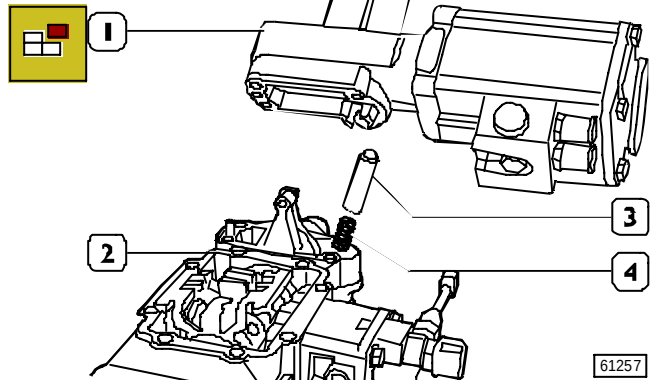

Unscrew the screws (1, Figure 6/2) and disconnect the servoshift (1) from the gearbox (2).

Take out the push rod (3) with the spring (4).

Figure 6/4

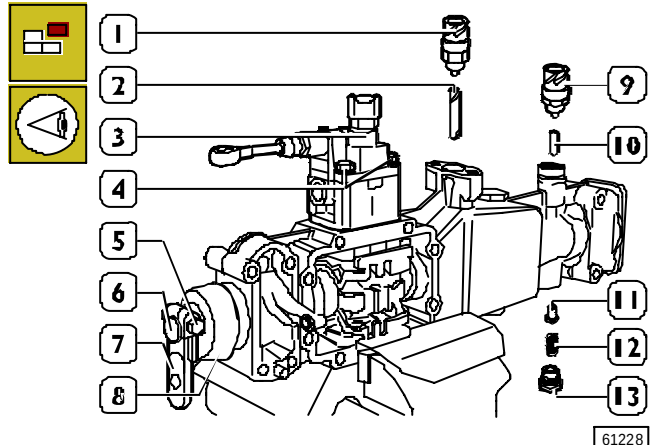

Mark the assembly position of the lever (7) on the rod (6). Loosen the nut (5) and remove the lever (7) from the rod (6).


Extract the cup (8).

Remove:

- the valve (3) after taking out the screws (4).
- the switches (1 and 9) with their washers and push rods (2 and 10).
- the plug (13) with its washer, the spring (12) and the push rod (11).

Aquila Trucks Centres


Figure 6/5

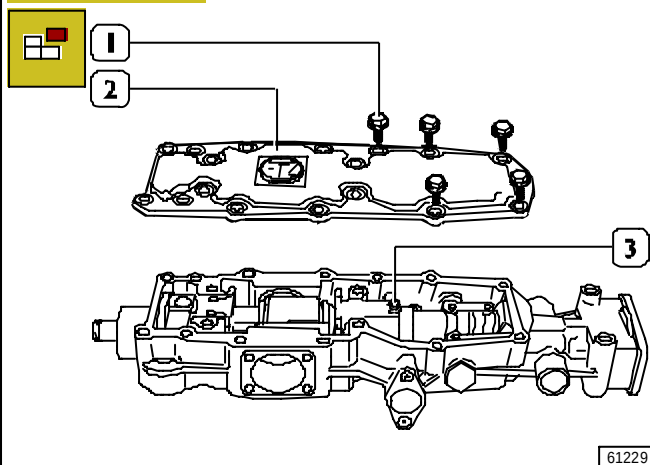

61229

Unscrew the screws (1) and take off the top cover (2).
Extract the pin (3).


Figure 6/6

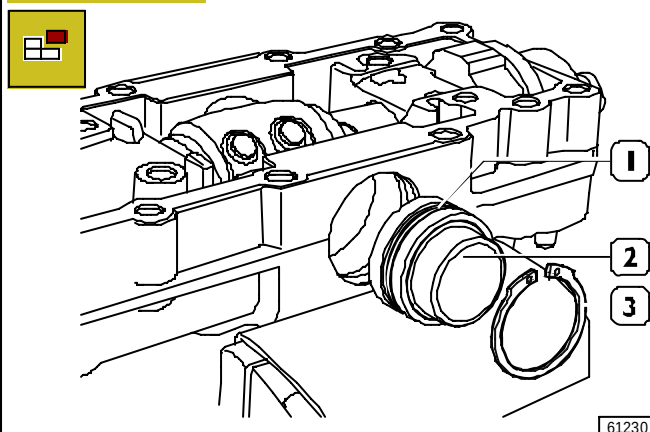

61230

Take off the circlip (3) and extract the piston (2) together with the ring (1).

Figure 6/7

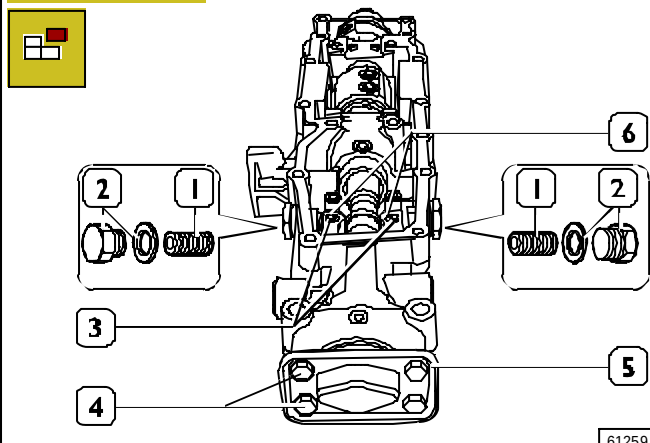


61259

Unscrew the plugs (2) with the washers, extract the springs (1) and remove the levers (6).

If necessary, take out the pins (3).

Unscrew the screws (4) and remove the cover (5).

Figure 6/8

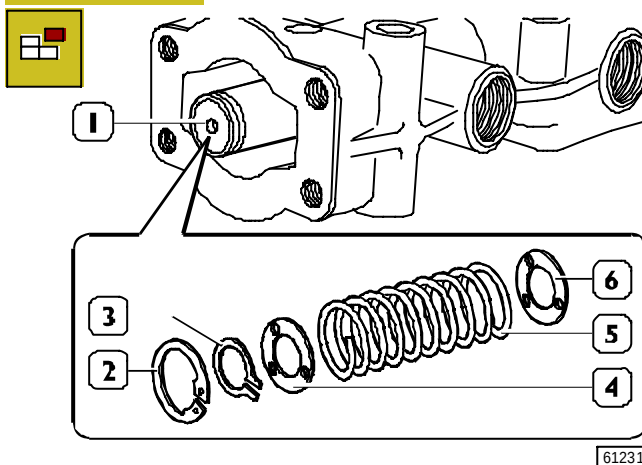


61231

Remove the circlip (2) from the rod (1).

Use the washer (4) to limit the action of the spring (5) and remove the split ring (3), extract the washer (4), the spring (5) and the washer (6).


Figure 6/9

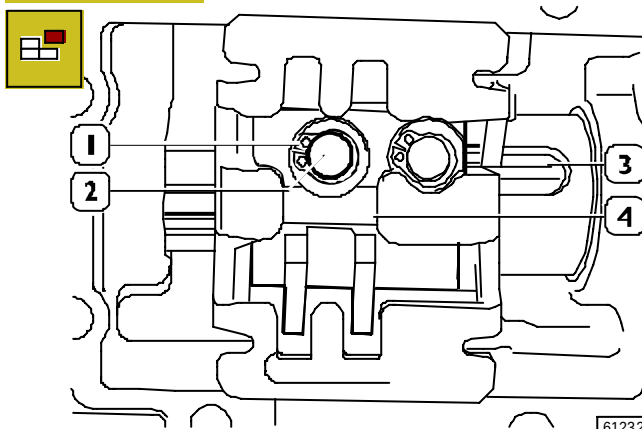

61232

Remove the circlips (1) and take out the pins (2) fastening the drive (4) to the rod (3).

Figure 6/10

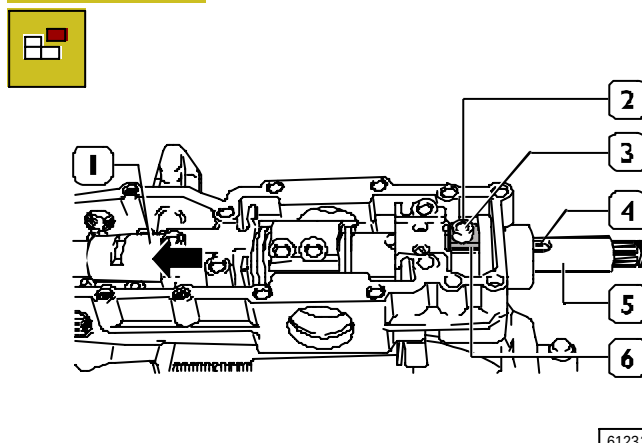


61233

Move the sleeve (1) in the direction of the arrow.

Strike a punch on the top of the lever (6) to make it come out of the bearing (3) and pin (2), freeing the latter from the groove (4) in the rod (5).

Aquila Trucks Centres


Figure 6/11

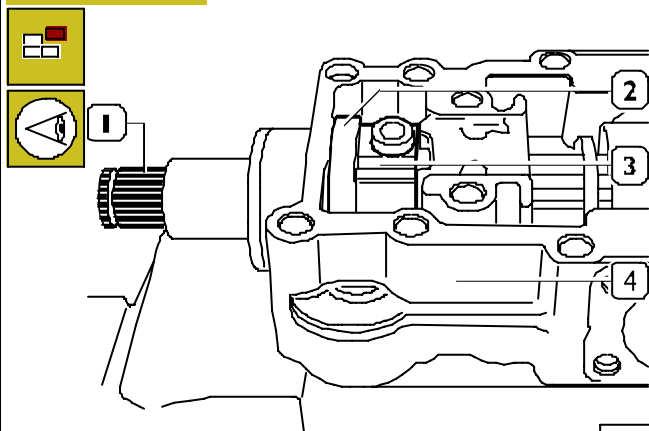

61234

Note down the assembly position of the levers (2 and 3) and take them out of the box (4) extracting the rod (1).


Figure 6/12

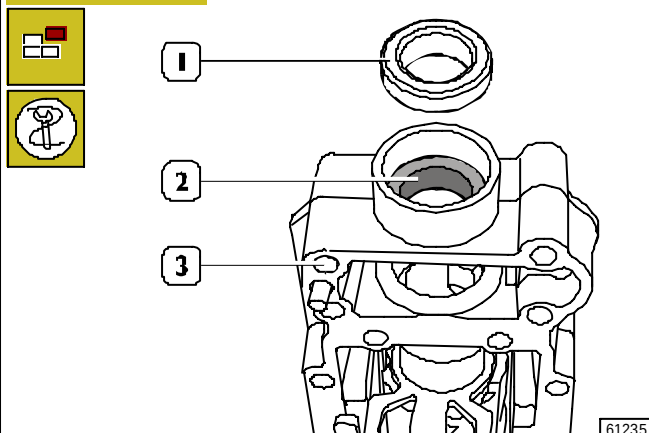

61235

Using the male extractor 99348004, extract the bushing (2) and the seal (1) from the box (3).

Figure 6/13

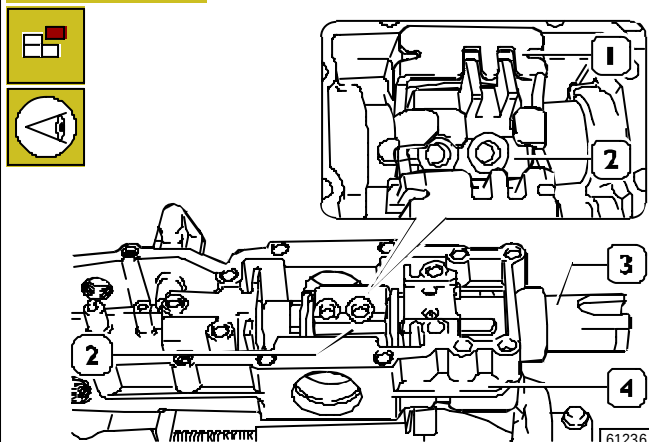


61236

Note down the assembly position of the locking element (1) and drive (2) and take them out of the box (4) after extracting the sleeve (3).

Assembly

NOTE When assembling, always replace the sealing elements with new parts: rings, copper washers, flat gaskets, o-rings and roller bearings with the pins. Check that the springs have not broken nor yielded.


Figure 6/14

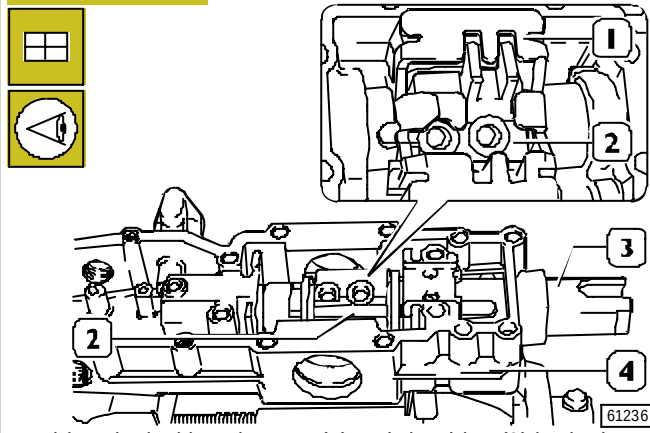

61236

Position the locking element (1) and the drive (2) in the box (4) as marked during removal and put on the sleeve (3).

Figure 6/15

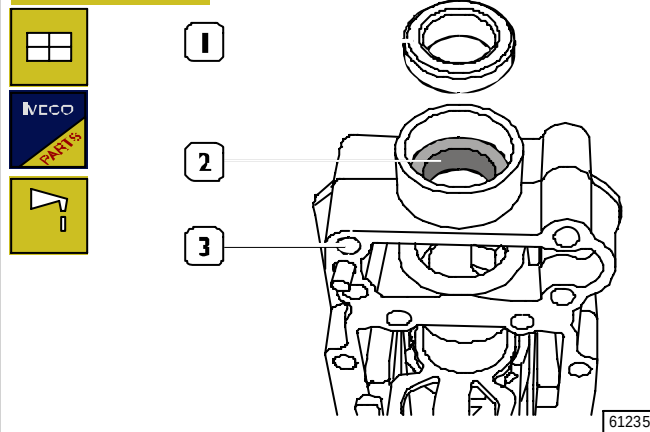


61235

Using drift 99370113, mount the bushing (2) in the box (3).

Using a suitable keying device, fit the seal (1) in the box (3). Lubricate the inside of the seal (1) with grease.

Aquila Trucks Centres


Figure 6/16

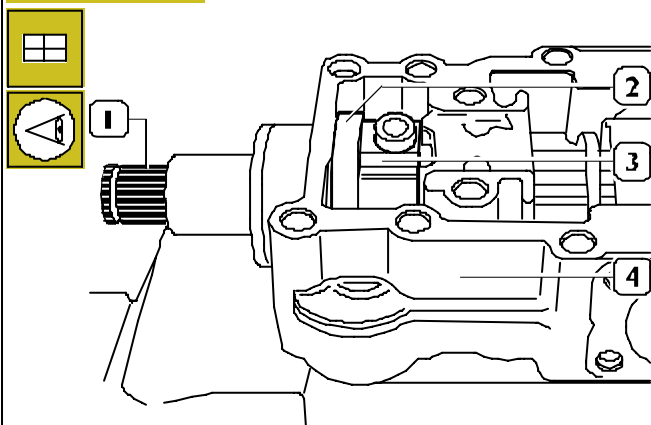

61234

Position the levers (2 and 3) in the box (4) as marked during removal and put on the rod (1).


Figure 6/18

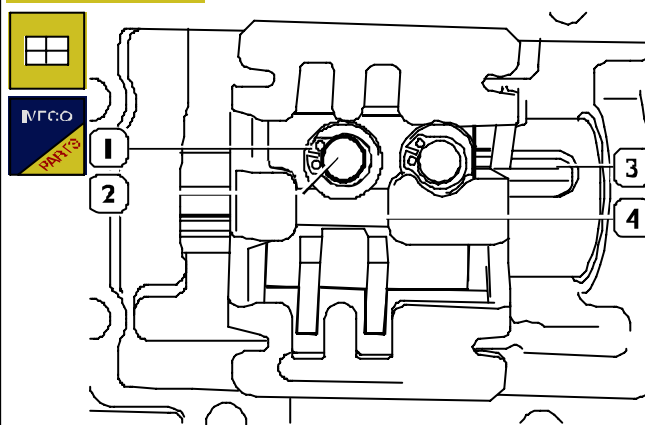

61232

Fasten the drive (4) to the rod (3), putting on the pins (2) and mount new circlips (1) on these.

Figure 6/19

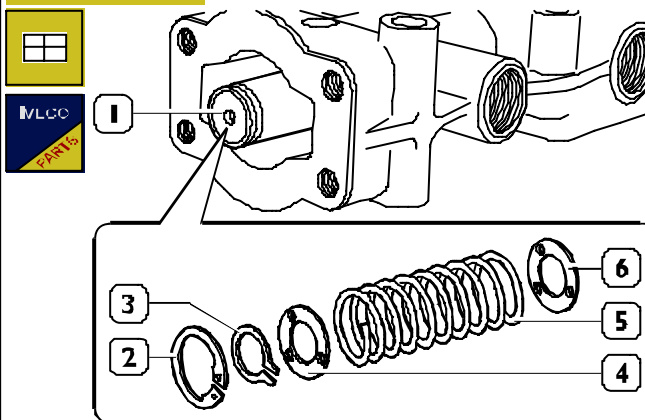


61231

On the rod (1), position: the washer (6), spring (5), washer (4) and fit on a new split ring (3).

Fit on a new circlip (2).

Figure 6/17

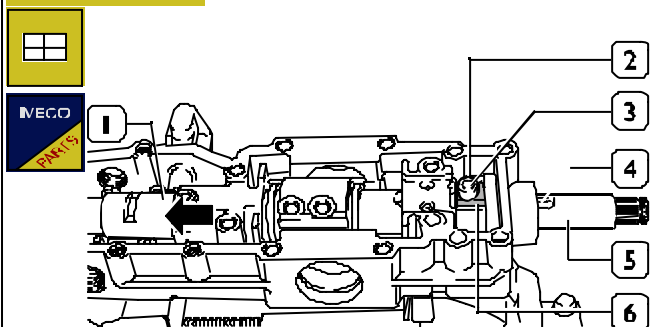


61233

Move the sleeve (1) in the direction of the arrow.

Fit a new roller bearing (3) and pin (2) on the lever (6). Position the rod (5) so that the groove (4) corresponds with the roller (3) and pin (2).

Resting the lever (6) on a flat surface, carefully strike the bearing (3) and pin (2) so they go into a position flush with the top of the lever (6) and correctly enter the groove (4) in the rod (5).

Figure 6/20

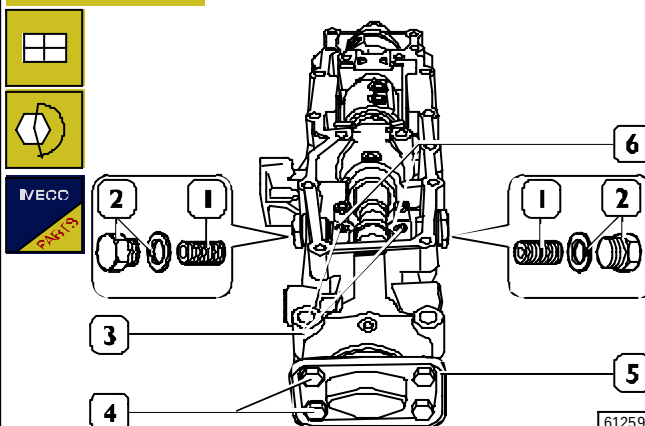


61259

Fit on the cover (5) with a new gasket, screw down the screws (4) and tighten them to the required torque.

Position the levers (6) on the pins (3). Screw down the plugs (2) with the new washers and springs (1) and tighten them to the required torque.


Aquila Trucks Centres

Figure 6/21

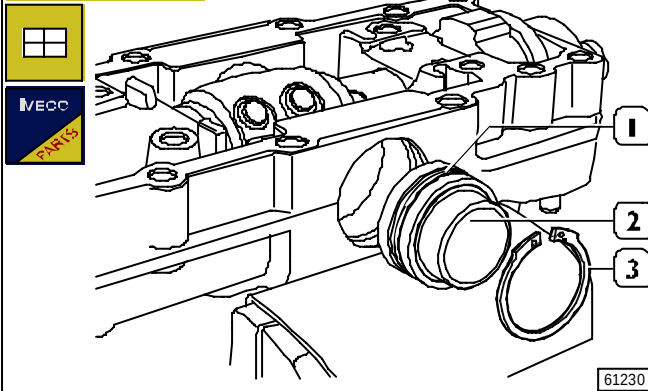


Fit a new ring (1) on the piston (2) and fit this in the box, securing it with the circlip (3).

Figure 6/22

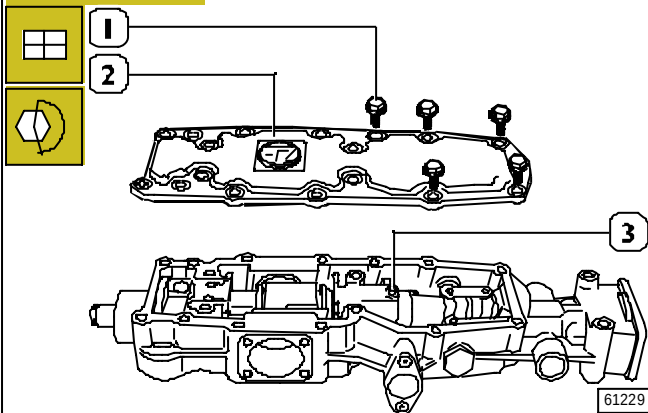

Insert the pin (3) in the box.
Put the top cover (2) on with a new gasket.
Screw down the screws (1) and tighten them to the required torque.


Figure 6/23

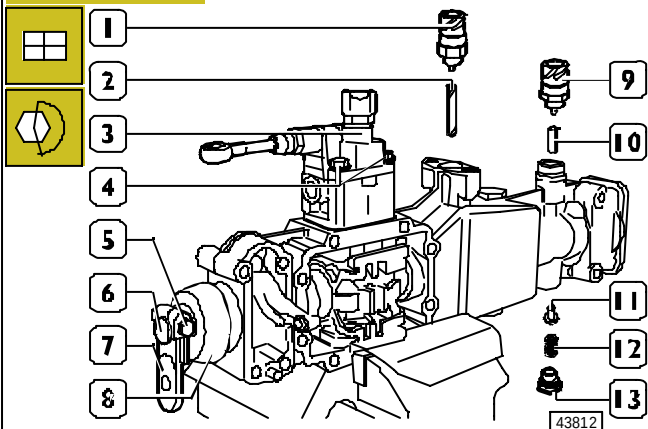

Complete gearbox assembly by fitting:


- push rod (11), spring (12), plug (13) with a new seal;
- push rods (2 and 10), switches (1 and 9) with the new washers;
- cup (8), lever (7) on the rod (6) in the position marked during removal and tighten the nut (5) to the required torque.
- valve (3) and tighten screws (4) to the specified torque.

Figure 6/24

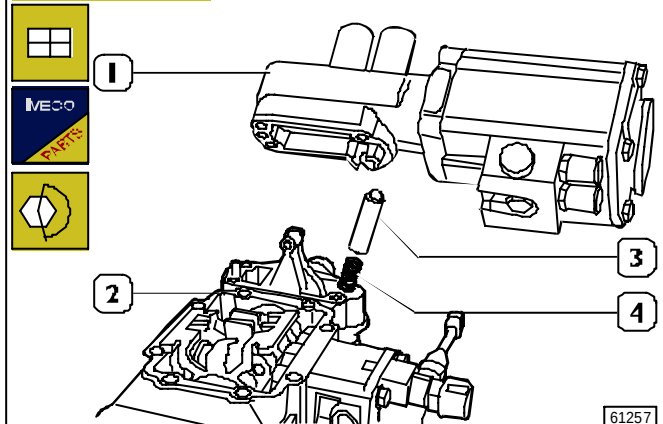

Position the push rod (3) with the spring (4) in the box (2).
Refit the servoshift (1) with a new gasket.


Figure 6/25

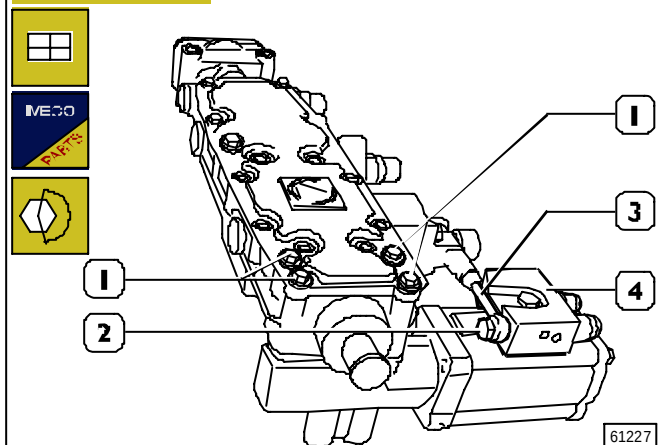

Screw down the screws (1) and tighten them to the required torque.
Connect the air pipe (3) to the distributor (4), screwing down the fitting (2) with new copper gaskets and tightening it to the required torque.

Refitting

Figure 6/26

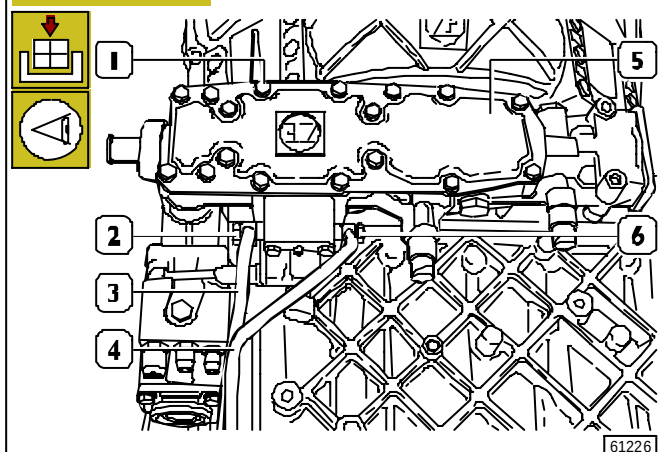


Refit the gearbox (5), screw down the fixing screws (1) and tighten them to the required torque.

Connect the pipes (3 and 4) to the box (5), in the position found at removal, with the fittings (2 and 6) together with the new washers.

Aquila Trucks Centres

Figure 6/27

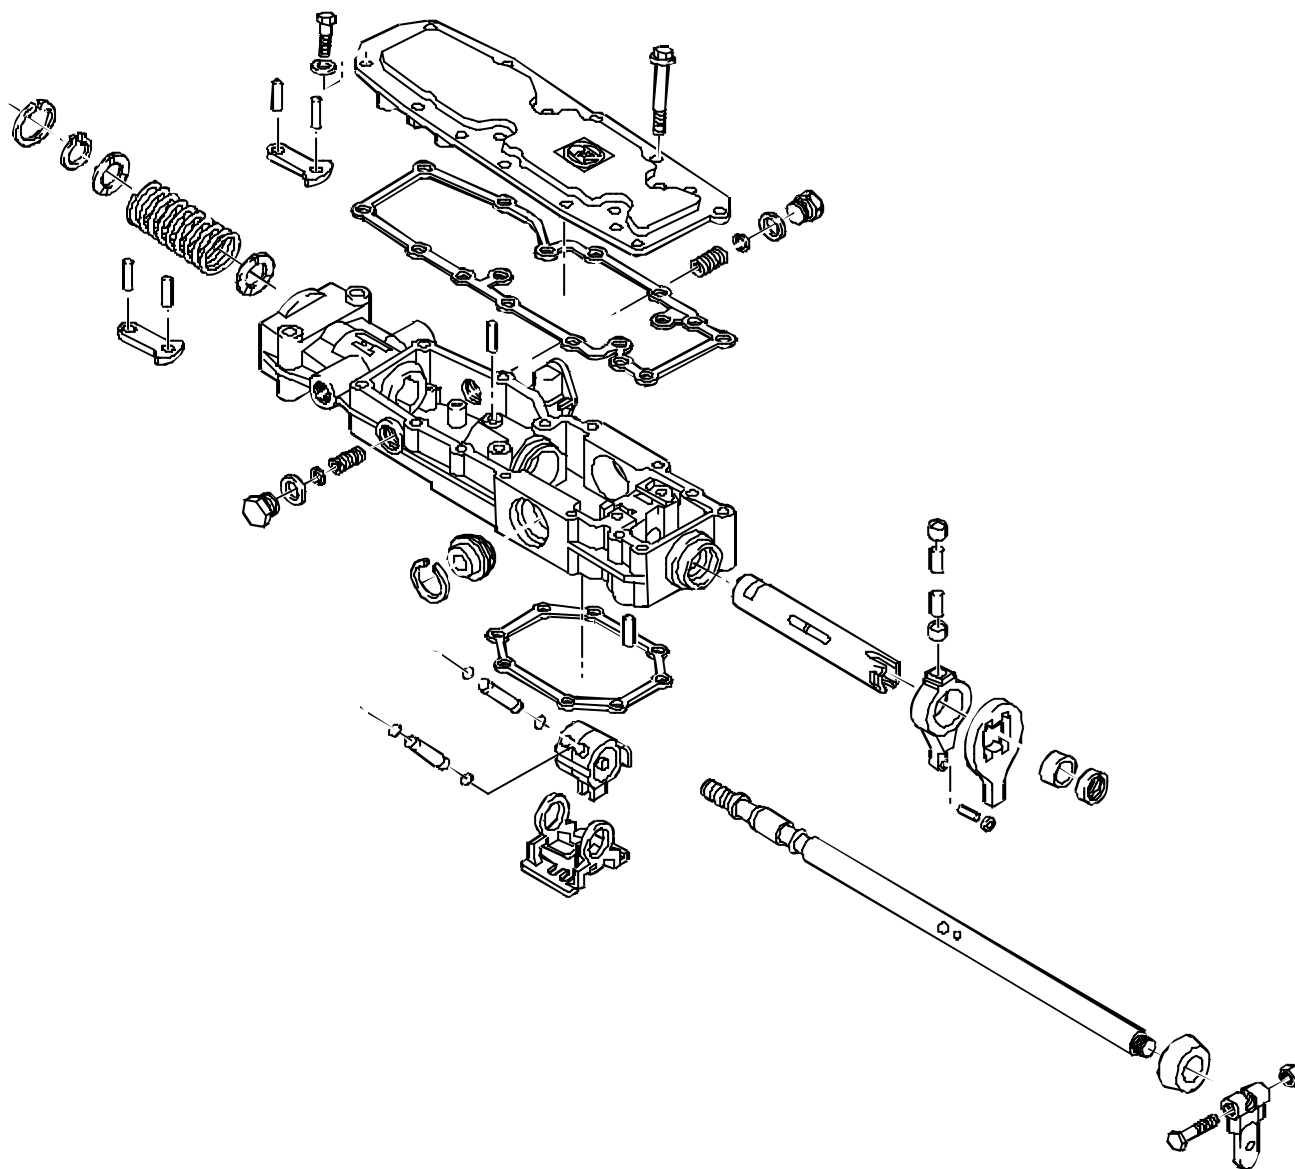


61237

PARTS COMPRISING THE GEARBOX

Aquila Trucks Centres

Removing the rear box


Figure 6/28

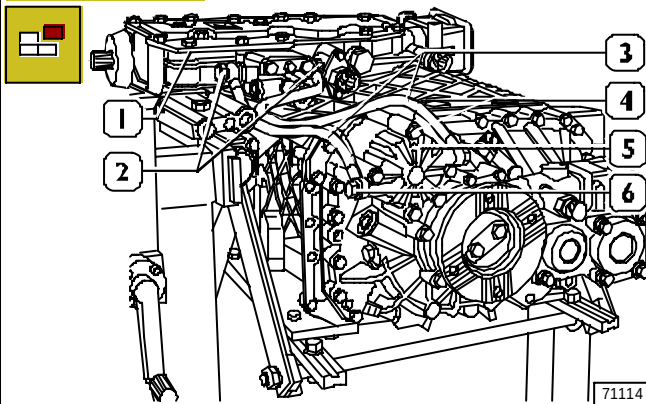

Remove the gearbox (1) as described under the relevant heading.


Take note of the assembling position of pipes (3) on G.R.E. control cylinder (5), then disconnect the pipes by unscrewing adapters (6) complete with washers.

Figure 6/29

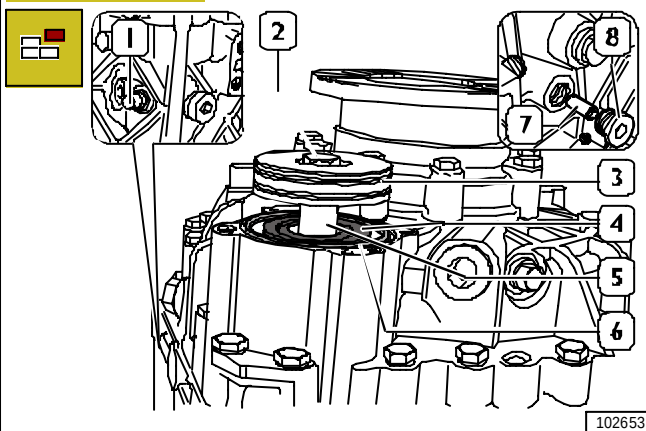


Unscrew nut (2), unthread plunger (3) complete with two seal rings and with antivibration ring from rod (5) controlling epicyclic reduction unit. Remove seal ring (6). Take off rod (5) seal (4) with a screw driver. Unscrew push rod 145N (1) positioning rod (5). Remove plug (8) and dismount pin (7).

Figure 6/30

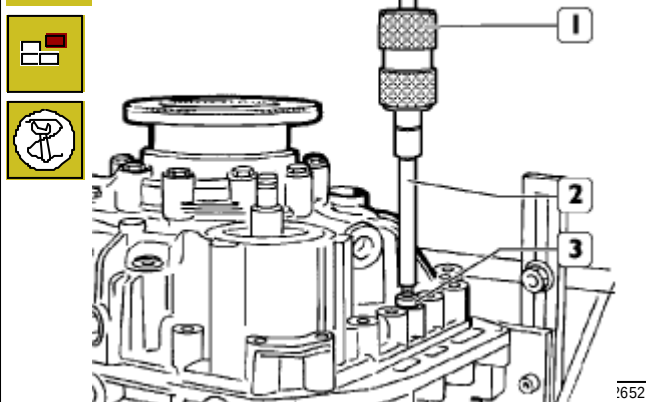

Extract 3 epicyclic reduction unit box centering pins (3) by knockout 99340205 (1) and pin 99347092 (2)


Figure 6/31

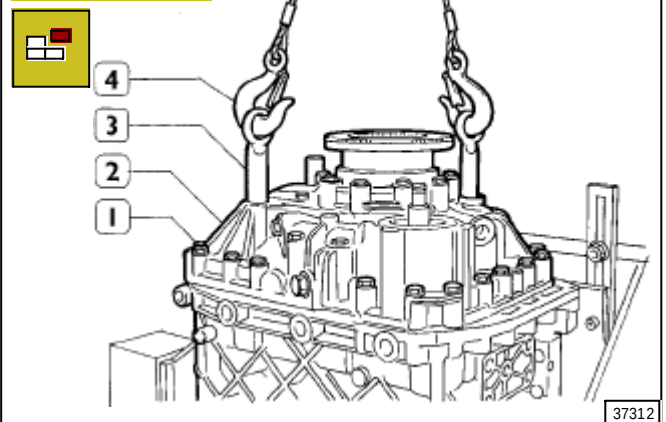

Unscrew the screws (1). Screw the eyebolts 99370565 (3) onto the rear box. Using hooks (4) and a movable lift, detach the rear box (2) from the gearbox.


Removing the epicyclic reduction gear unit (ERG)

Figure 6/32

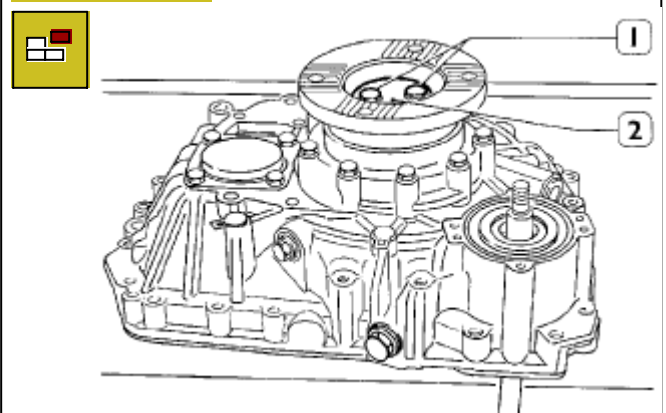

Take off safety plate (if present), unscrew two screws (1), take off push disk (2) and underlying seal ring.


Figure 6/33

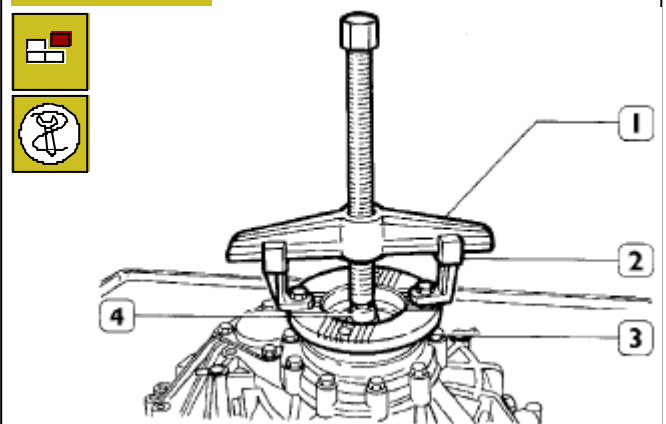

Extract the drive output flange (3) using the extractor composed of: tie rods 99341018 (2), bridge 99341003(1), reaction block 99345058 (4).

Aquila Trucks Centres


Figure 6/34

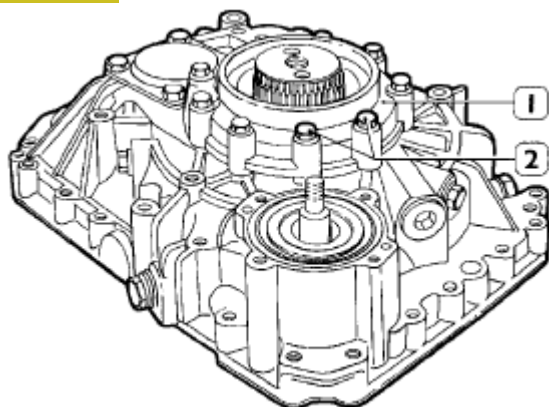

Unscrew screws (2), take off cover (1) and remove support bearing and seal ring from the cover.

NOTE For bearing disassembly, follow the instructions provided on page 27 of this section.


Figure 6/35

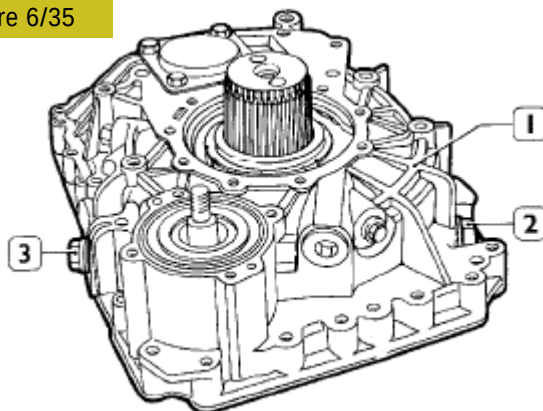

37332

Unscrew the pins (2 and 3) and remove the box (1) from the ERG unit.

Figure 6/36

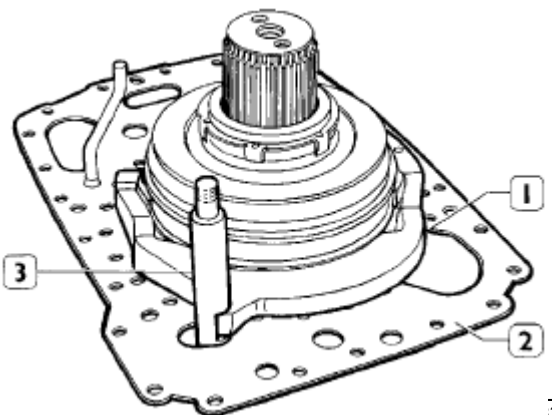


3

Extract the rod (3), fork (1) together with the sliding blocks controlling the ERG unit.

Remove the middle plate (2).


Figure 6/37

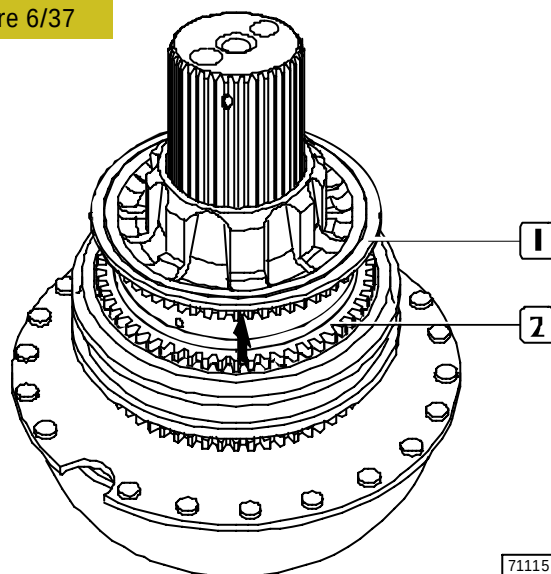

71115

Remove the coupling body (1) together with the fifth wheel bearing and synchronizer ring (2) from the hub for the sliding sleeve.


Figure 6/38

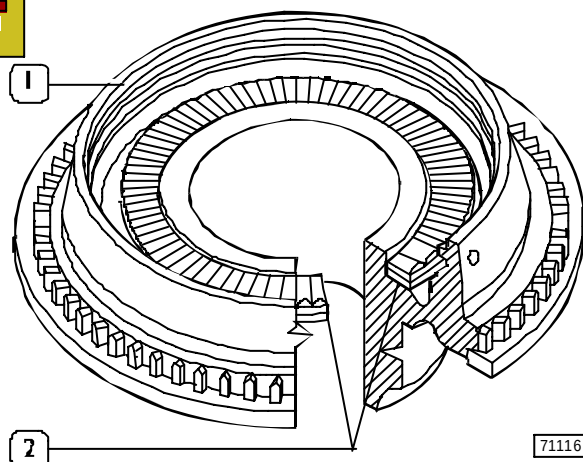

71116

Take the fifth wheel bearing (2) out of the coupling body (1).

Figure 6/39

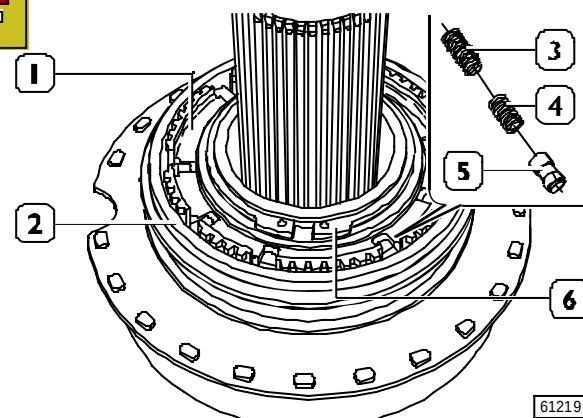


61219

Taking care over the blocks (5) and the springs (3 and 4) coming out of the hub (1), take the sliding sleeve (2) out of the hub. Remove the circlip (6).

Aquila Trucks Centres


Figure 6/40

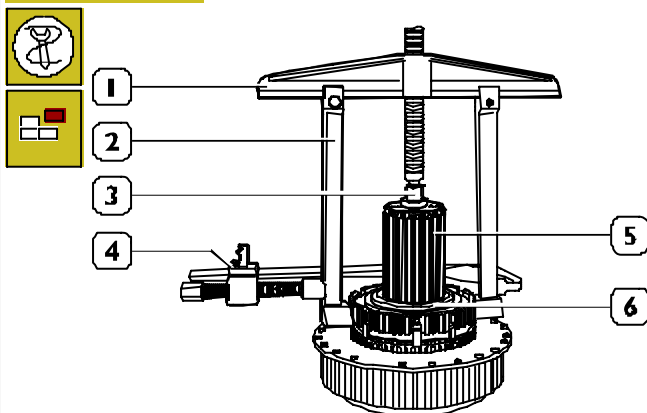

61252

With an extractor composed of bridge 99341003 (1), brackets 99341015 (2), reaction part 99345058 (3) and clamp 99341015 (4), extract the hub (6) for the sliding sleeve from the ERG shaft (5).

Figure 6/41

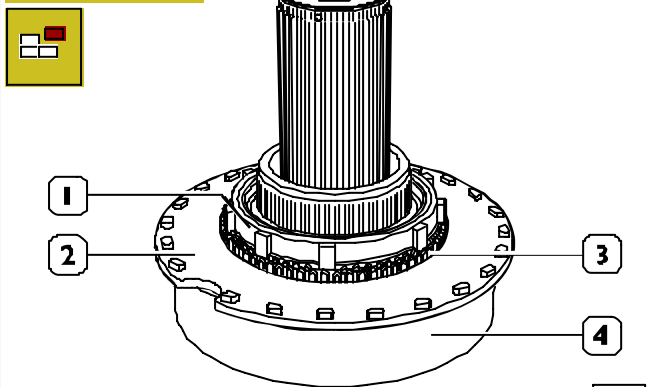


61220

Remove the synchronizer ring (1) and the coupling body (3) together with the plate (2) from the ring gear (4).

Levering under the coupling body (3), extract this from the plate (2).


Figure 6/42

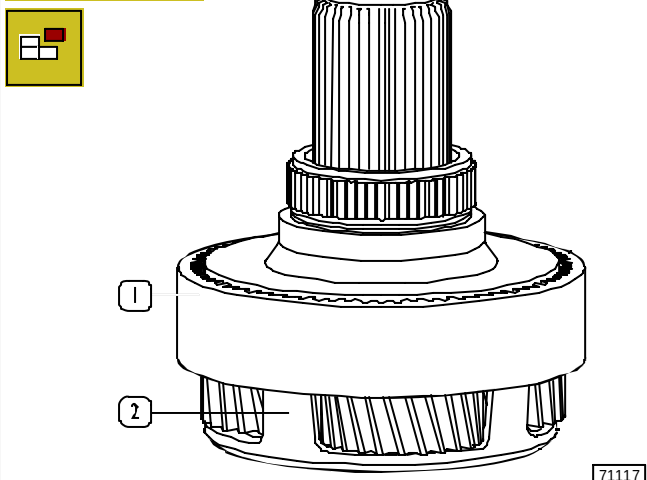

71117


Remove the ring gear (1) from the planet wheel shaft (2).

Figure 6/43

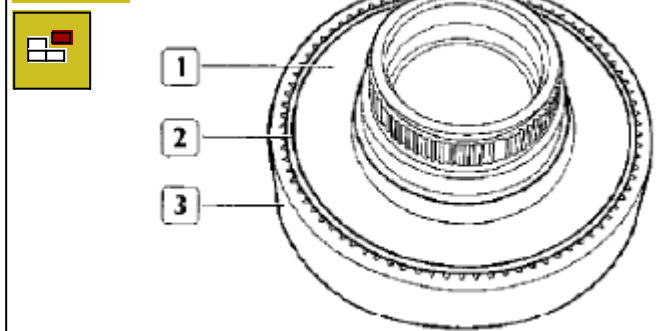

Take off the ring (2) and separate the ring gear (3) from the mount (1).

Figure 6/44

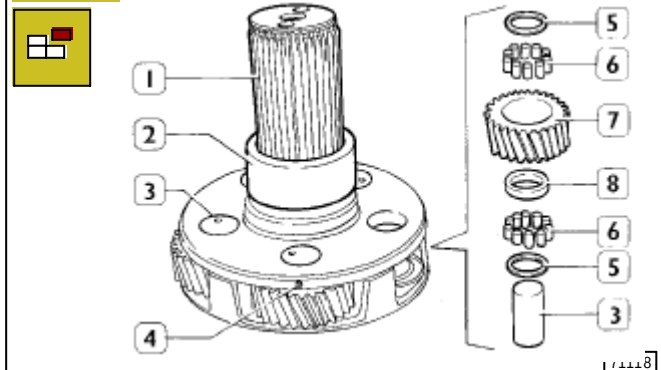


Take off the spacer (2), push the spring pins (4) inside the pins (3) and, with an appropriate drift, extract the pins (3) from the planet wheel shaft (1). Extract the planet wheels (7) together with the adjustment rings (5-8) and rollers (6) from the planet wheel shaft (1).

Fitting the epicyclic reduction gear unit (ERG)

To fit the epicyclic reduction gear unit, carry out the steps described for removal in reverse order. The operations and assembly phases requiring specific tools, clearance checks, adjustments or special precautions are described below. The tightening torques are given in the specific table.

Aquila Trucks Centres

Figure 6/45

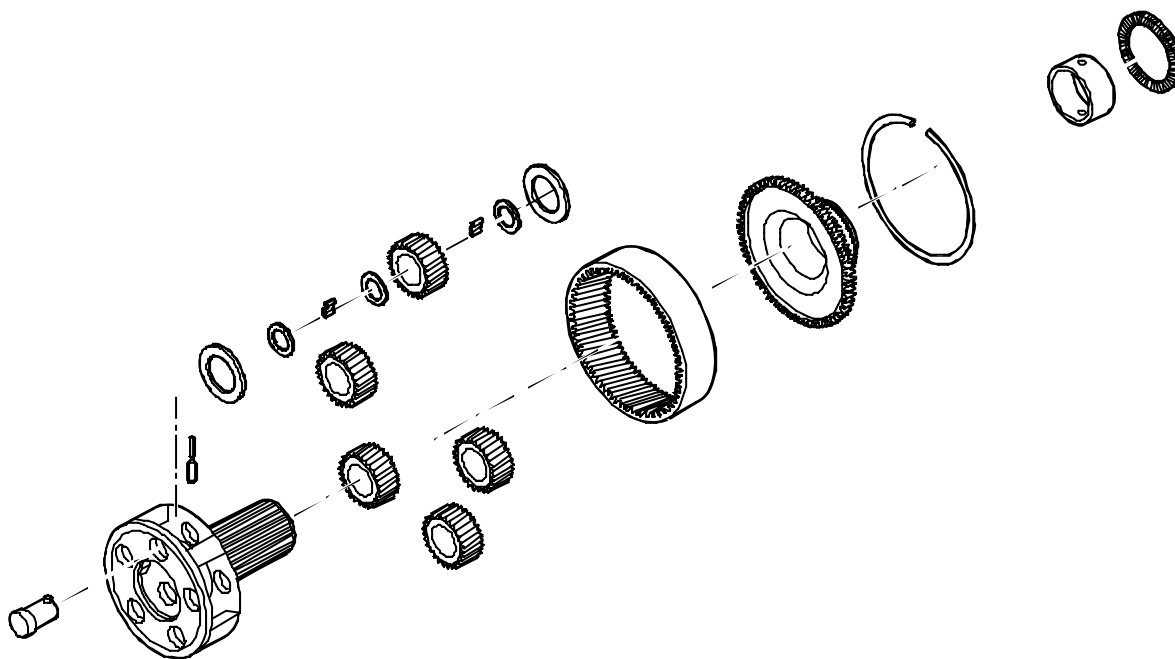


61176

COMPONENT PARTS OF THE EPICYCLIC REDUCTION GEAR UNIT

NOTE When fitting the internal rings of the bearings and the hub for the sliding sleeve, they will first need to be heated to approximately 100 °C for roughly 15 minutes.

Figure 6/46

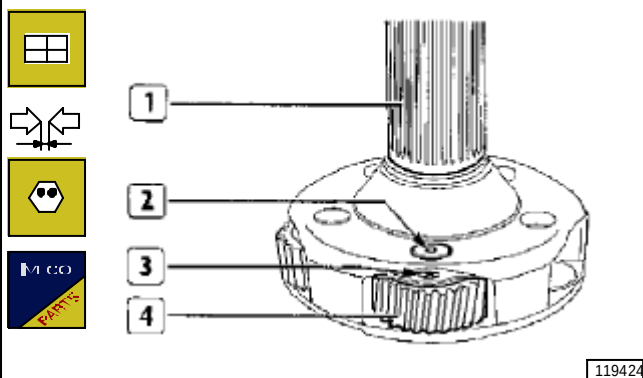


119424

Fit the pins (2) of the bearings in the planet wheel holder (1), making the reference marks "0" punched on the pins tally with the holes (3) for the spring pins.

Fit the spring pins in the holes (3) and notch them.

Figure 6/47

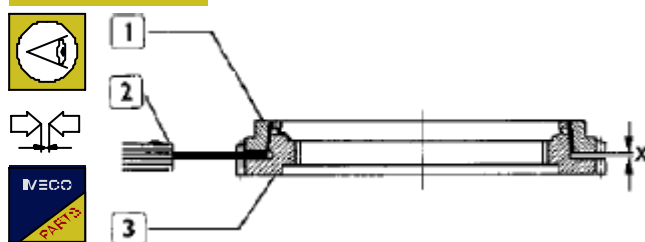


Before putting the synchronizing devices back together, check the wear of the synchronizer rings (1) and of the coupling bodies (3). Using a feeler gauge (2), measure the distance between the synchronizer ring (1) and the coupling body (3) at two opposite points. If the measured distance (X) is less than 1.2 mm, replace the synchronizer ring (1) or the coupling body (3).

Do not get the checked parts mixed up (it is recommended to mark them).


Aquila Trucks Centres

Figure 6/48

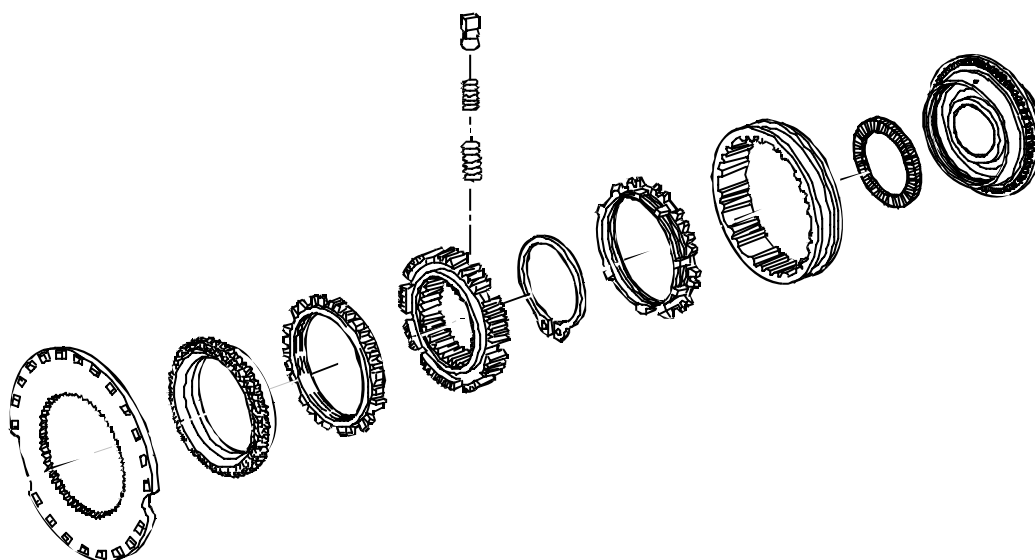

COMPONENT PARTS OF THE EPICYCLIC REDUCTION GEAR UNIT SYNCHRONIZING DEVICE

Figure 6/49

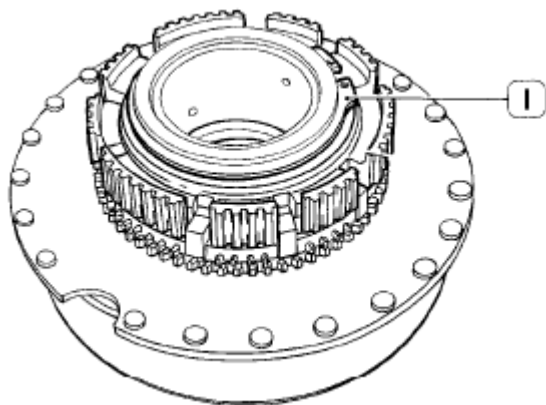


71119

Check the clearance between the ring (1) and its seat.
The clearance has to be between 0.0 and 0.1 mm.

NOTE

The circlip (1) is supplied as a spare with a different thickness.

Figure 6/50

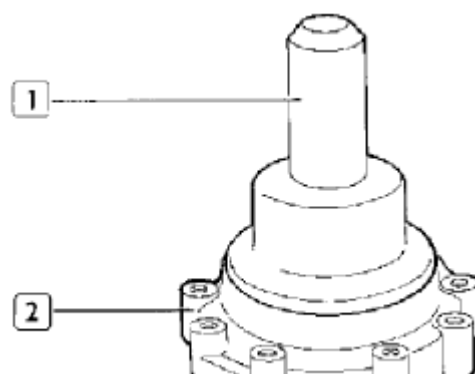

19565

Using the keying device 99374221 (1) fit the seal in the cover (2) of the drive output flange.

Aquila Trucks Centres


Refitting the epicyclic reduction gear unit (ERG) rear box

To refit the rear box of the epicyclic reduction gear unit, carry out the steps described for removal in reverse order.

The operations and assembly phases requiring specific tools, clearance checks, adjustments or special precautions are described below.

The tightening torques are given in the specific table.


Figure 6/51

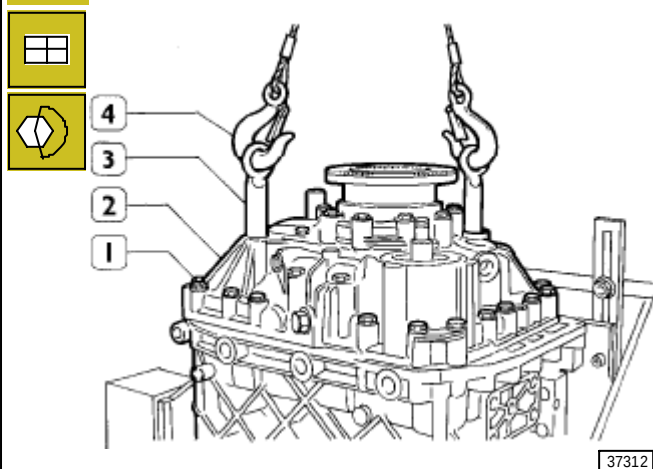

Screw the eyebolts (3) onto the rear box (2), fit the ropes with hooks (4) and, with a movable lift, mount the rear box on the gearbox.

Tighten the screws (1) to the required torque.

Figure 6/52

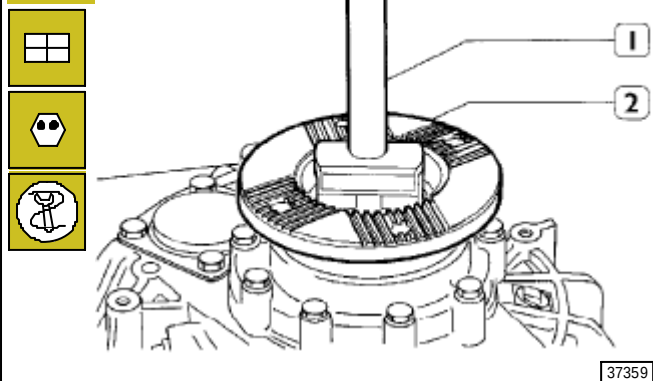


After tightening the two screws fixing the drive output flange (2), fit the safety plate on them and notch it with tool 99370465 (1).

Take the gearbox off the stand and restore the oil level.

Removing the gearbox


Figure 6/53

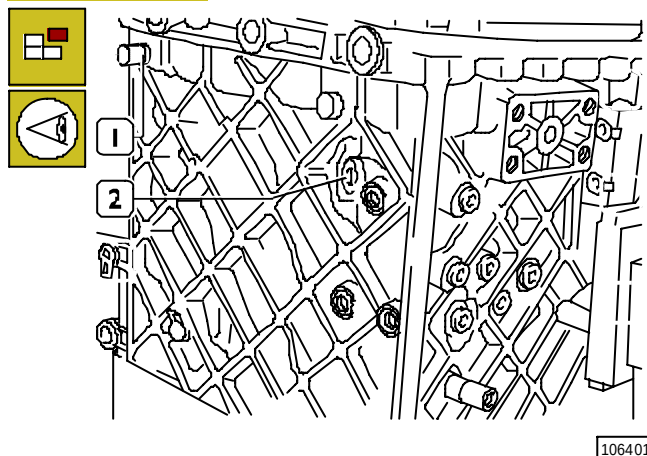

Remove the rear box of the epicyclic reduction gear unit as described under the relevant heading.

Dismount oil vapour vent (1) and plug (2).

Figure 6/54

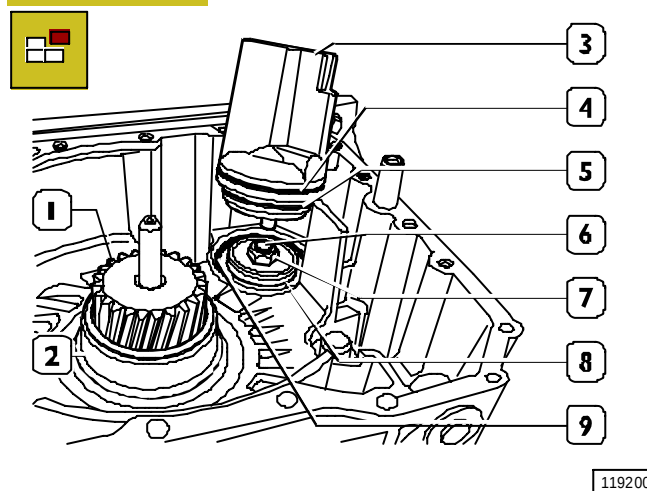


Remove the splitter driving cylinder (3) together with the rings (4-5).

Take off the ring (9). Unscrew the nut (7) and remove the piston (8) from the rod (6).

If present, disassemble the spacer ring (2) from the primary shaft (1).


Aquila Trucks Centres

Figure 6/55

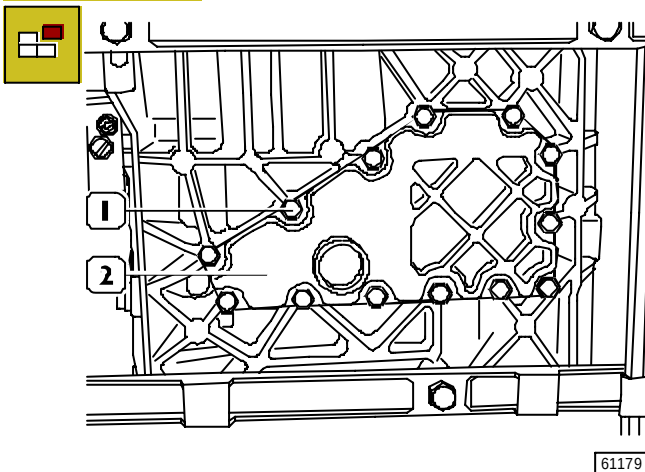

Unscrew the screws (1) and take off the cover (2).


Figure 6/56

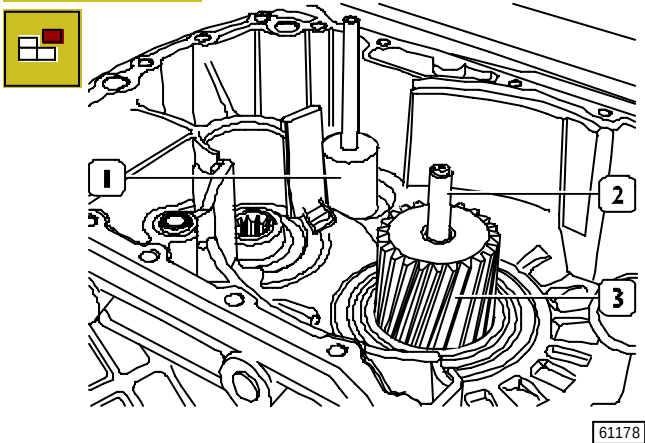

Extract the reverse gear shaft (1).


Disassemble the tube (2) from the primary shaft (3), previously measuring the tube's projection from the shaft itself.

Figure 6/57

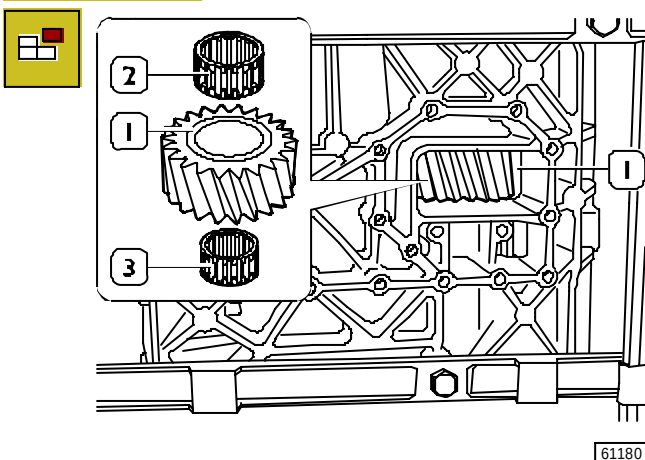

Take out the reverse idler gear (1) together with the roller bearings (2 and 3).


Figure 6/58

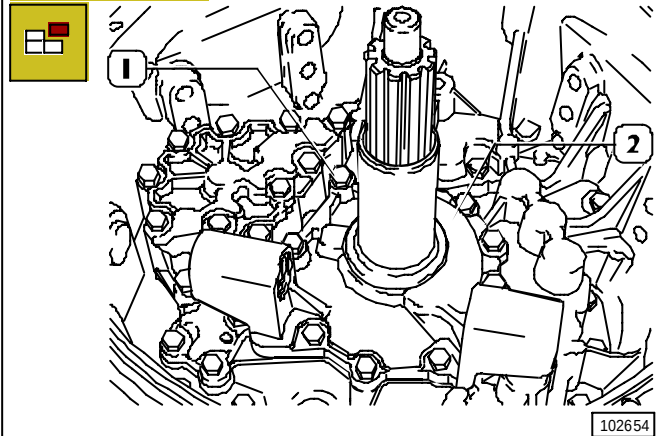

Unscrew screws (1) and dismount drive cover (2).


NOTE Screws (1, Figure 6/58 and 1, Figure 6/60) must be replaced at every dismantling operation since their thread is coated with sealing micro capsules.

Figure 6/59

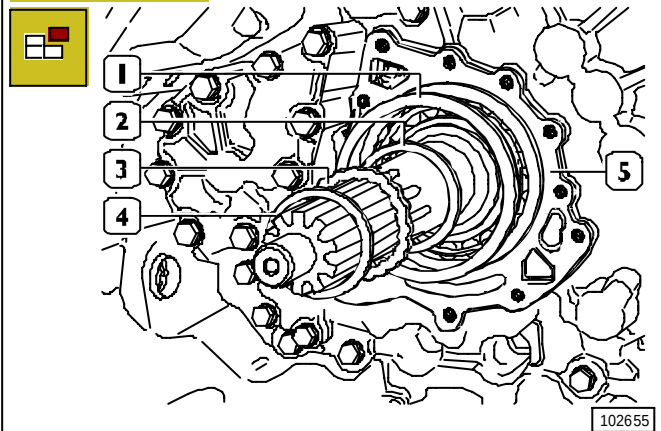

Take off the thrust washer (4), spring (3), thrust washer (2), adjustment ring (1) and gasket (5).

Figure 6/60

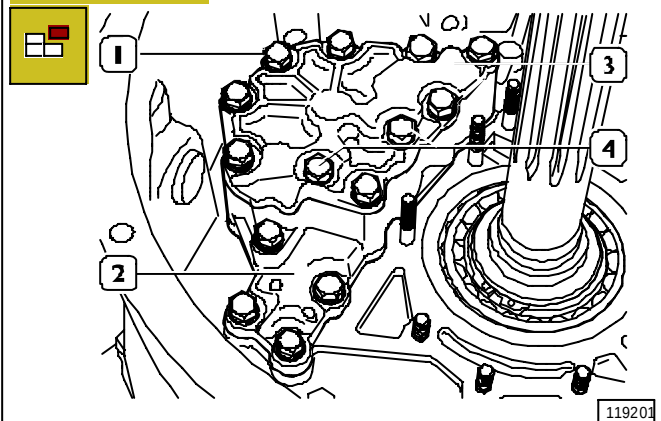


Unscrew screws (1) and dismount oil pump (2).

NOTE To remove the oil pump (2), do not unscrew the screws (4). These screws secure the cover (3) to the pump body and are unscrewed when the part has been removed solely to overhaul the oil pump.

Aquila Trucks Centres


Figure 6/61

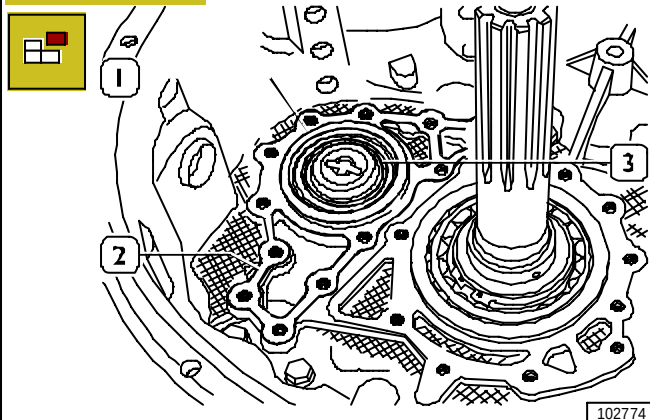

102774

Remove the adjustment rings (1) from the tapered roller bearing (3). Take off the gasket (2).

Figure 6/62

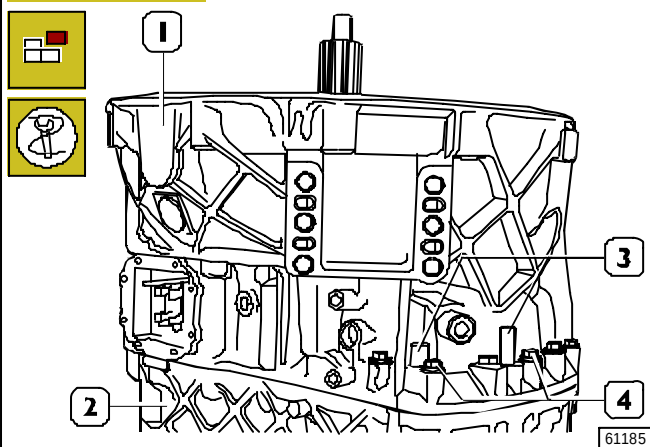


61185

Using extractor 99340205 and tool 99347092, remove the cover centering pins (3) in front (1) of the gear box (2).

Unscrew the screws (4) and the nuts fixing the front cover (1) to the gearbox (2).


Figure 6/63

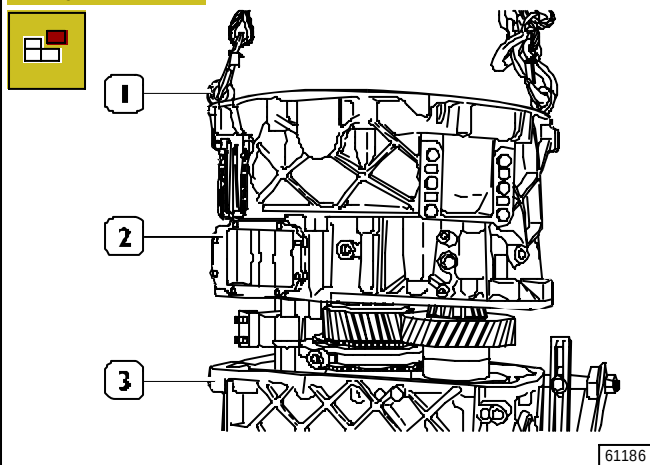

61186

Fit suitable hooks (1) onto the front cover (2) and, using a rope and lift, remove it from the gearbox (3).


Figure 6/64

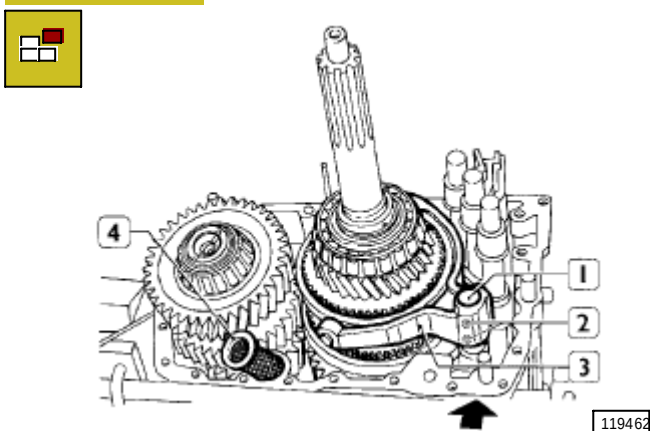

119462

If necessary, loosen the splitter shaft hardener marked with 235N (→), unscrew the two hexagon socket head cap fastening screws (2), extract the splitter control shaft (1) and remove the relative fork (3) complete with sliding manifold pads.

Figure 6/65

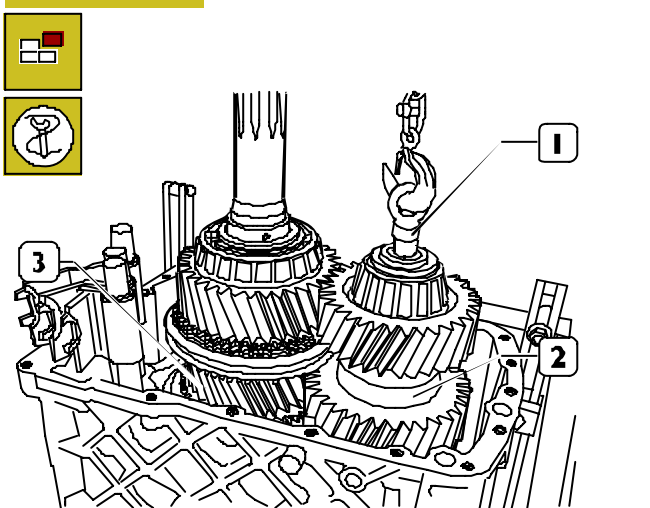


119199

Use the eyebolt 99360502 (1) to remove the secondary shaft (2) from the gear box, after making sure that it has been released from the primary one (3).

Aquila Trucks Centres

Figure 6/66

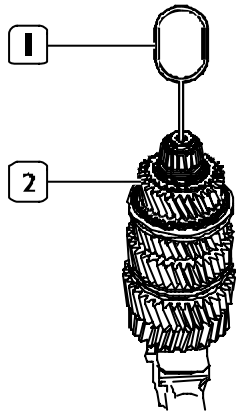


102660

Remove the motion input shaft. Insert the tool 99370449 (1) into the primary shaft (2) and constrain with the relative retaining nut. Release the control rods (3) operating with a suitable screw (4) on the latch (2, Figure 6/67). Clamp tool 99370449 (1) to the hoist, lift primary shaft (2) and tighten it by a vice. Remove tool 99370449 (1).

NOTE When disassembling the rods and the forks, be sure to take note of the correct assembly position.


Figure 6/67

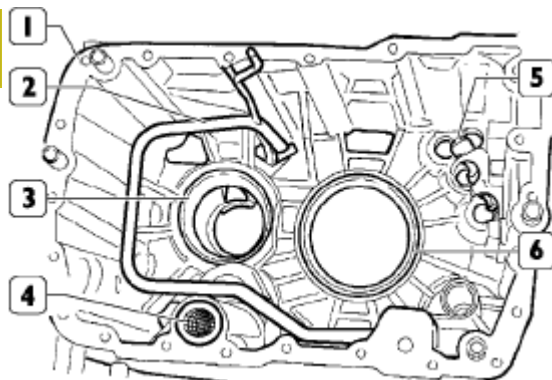

102662

Remove the gear bolt (5) together with the spring from the gearbox (1). Using an appropriate drift, extract the two outer rings (3) and (6) of the bearings, ERG side, of the transmission and main shafts. Dismount filter (4) and clean it accurately. Clean the lubricating oil delivery pipes (2) with a jet of compressed air.

Figure 6/68

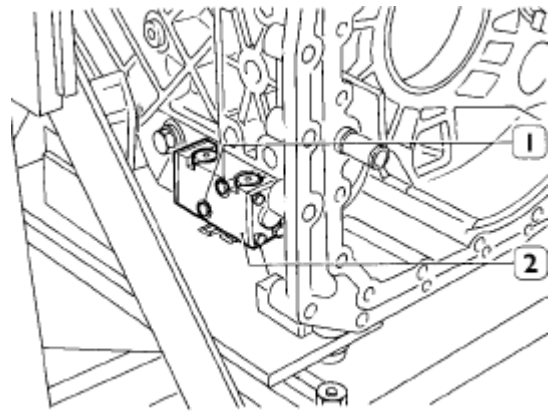


37325

Unscrew the 2 screws (1) and take out the splitter control valve (2).

NOTE Do not dismantle the splitter control valve (2), it cannot be overhauled. Replace it if you find any trouble.

Removing the main shaft

Figure 6/69

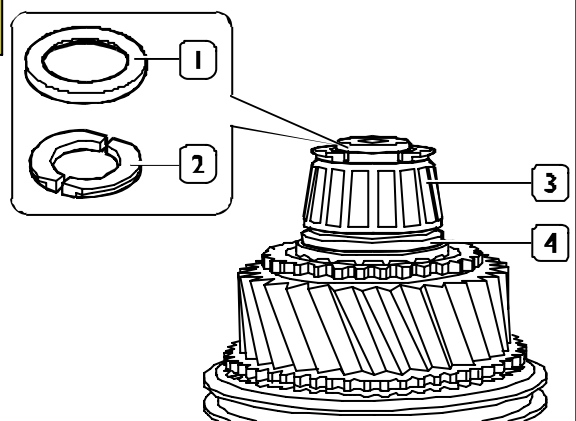


61190

Lift the notch of the retaining ring (1) and remove the half rings (2). Using a suitable extractor, remove the ring inside the tapered roller bearing (3), extract the thrust washer (4).


Aquila Trucks Centres

Figure 6/70

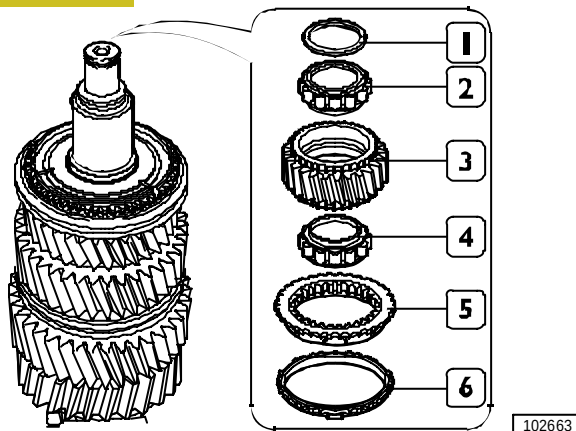

From primary shaft, dismount: ring (1), bearing (2), the gear of IV gear (3), bearing (4), coupling body (5) and synchroniser ring (6).

Figure 6/71

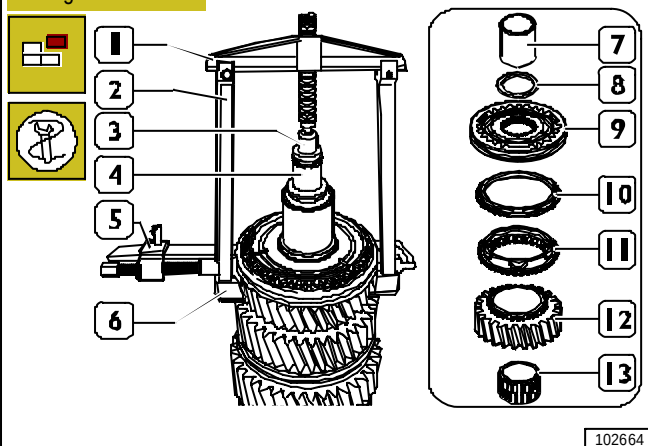


By an extractor made up of: bridge 99341003 (1), tie rods 99341020 (2), block 99345058 (3), grips 99341024 (6) and clamp 99341015 (5), dismount, from primary shaft (4):

- gear of III gear (12);
- coupling body (11);
- synchroniser ring (10);
- synchroniser unit (9);
- spacer ring (8);
- bushing (7).


Dismount needle bearing (13).

Figure 6/72

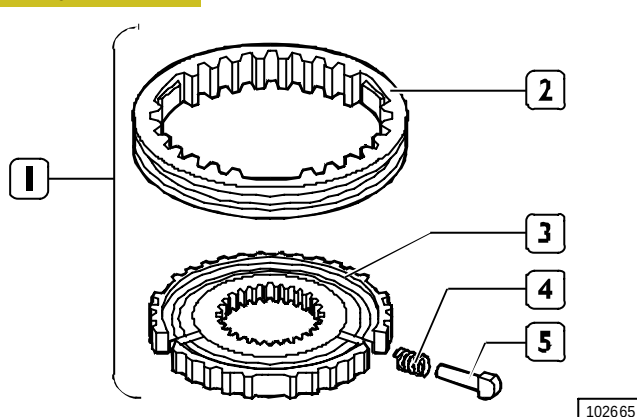


Dismantle the synchronizer unit (1). Remove the sliding sleeve (3) from the hub (2), taking care over the pins (5) and springs (4) coming out in order to collect them.

Figure 6/73

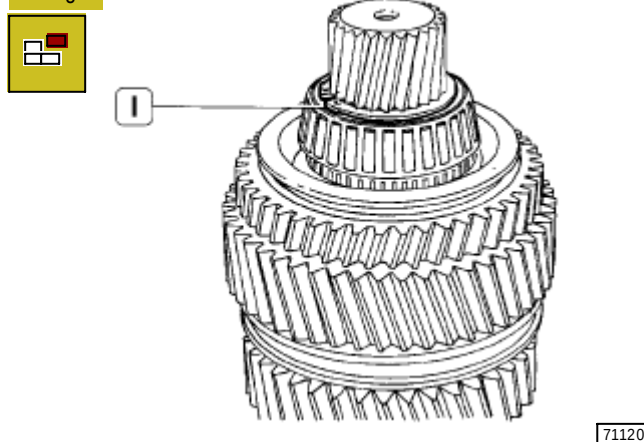

Overturn the main shaft in the vice and take out the split ring (1).


Figure 6/74

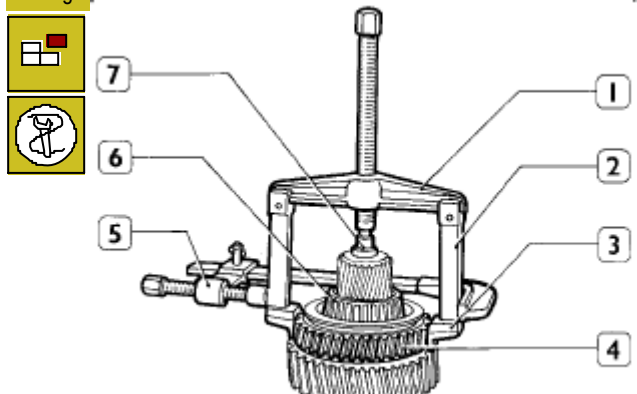

Take out the reverse gear (4) and the internal ring (6) of the bearing, ERG side, with an extractor composed of: grips 99341024 (3), tie rods 99341019 (2), bridge 99341004 (1), reaction block 99345058 (7), clamp 99341015 (5).


Aquila Trucks Centres

Figure 6/75

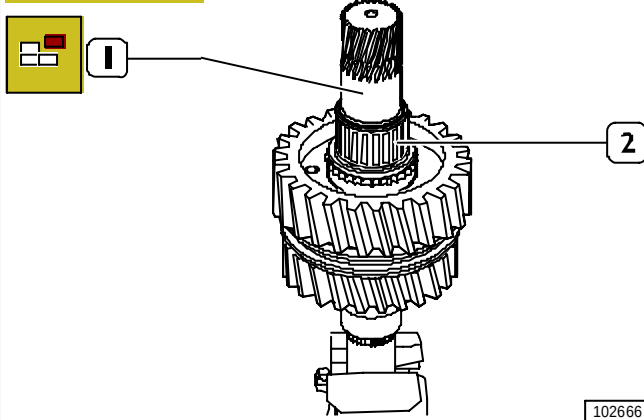


Dismount, from primary shaft (1), needle bearing (2).

Figure 6/76

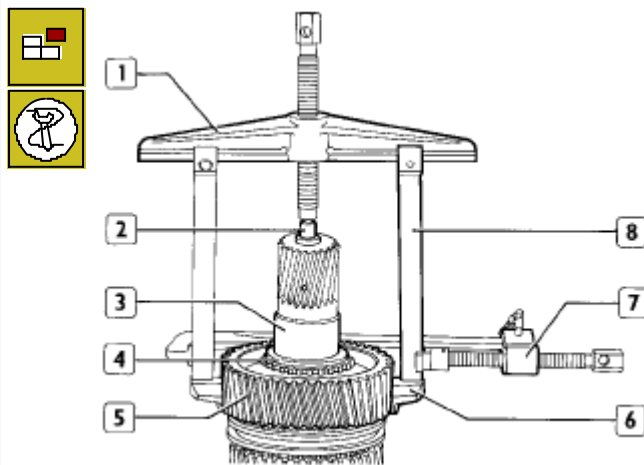


Extract the gear of 1st gear (5), coupling body (4) and bushing (3) of the bearing of the gear of reverse gear by an extractor made up of: grips 99341024 (6), tie rods 99341020 (8), bridge 99341004 (1), counter-block 99345058 (2), clamp 99341015 (7).

Figure 6/77

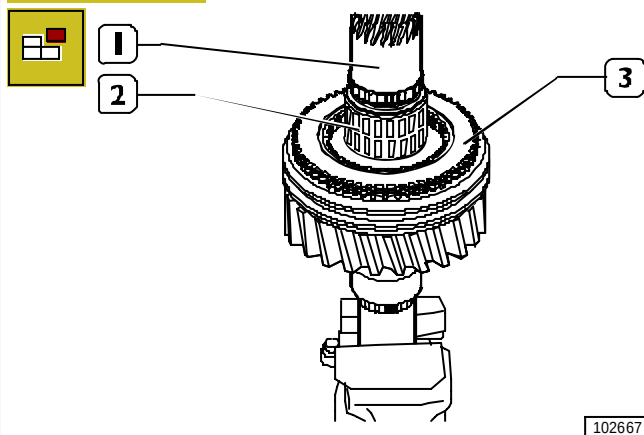


Dismount, from primary shaft (1), needle bearing (2), coupling body (3).

Figure

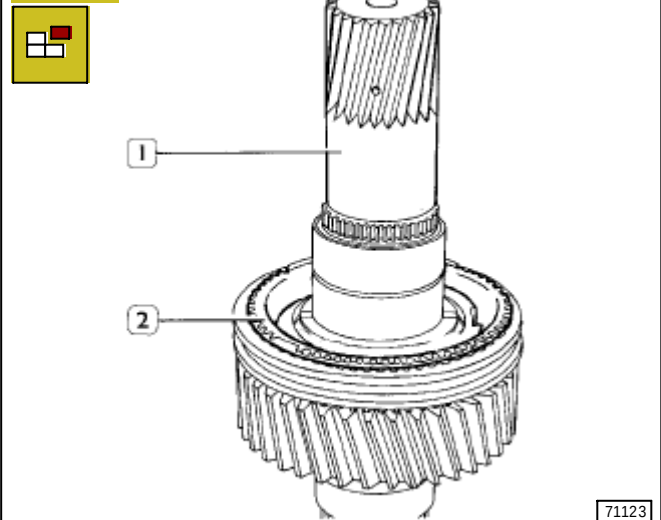


Remove the synchronizing ring (2) from the primary shaft (1).

Figure 6/79

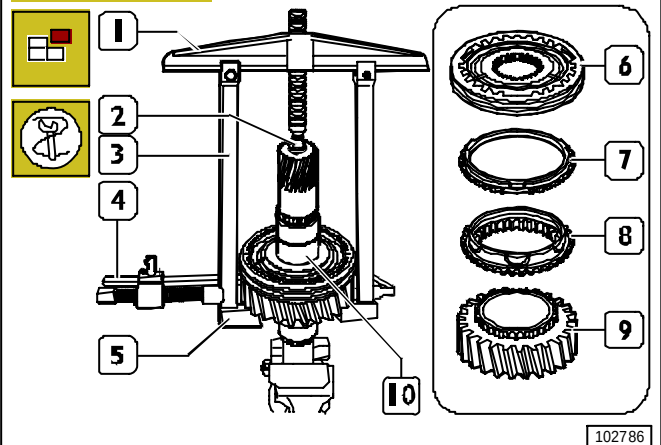

By an extractor made up of: bridge 99341004 (1), counter-block 99345058 (2), tie rods 99341024 (3), grips 99341024 (5), clamp 99341015 (4), dismount: gear of II gear (9), coupling body (8), synchroniser ring (7), synchroniser unit (6) and bushing (10).

Figure 6/80

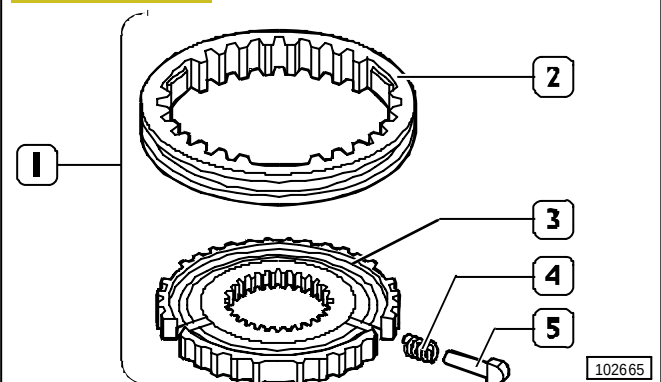


Dismantle the synchronizer unit (1). Remove the sliding sleeve (3) from the hub (2), taking care over the pins (5) and springs (4) coming out in order to collect them.

Aquila Trucks Centres


Removing the drive input shaft

Figure 6/81

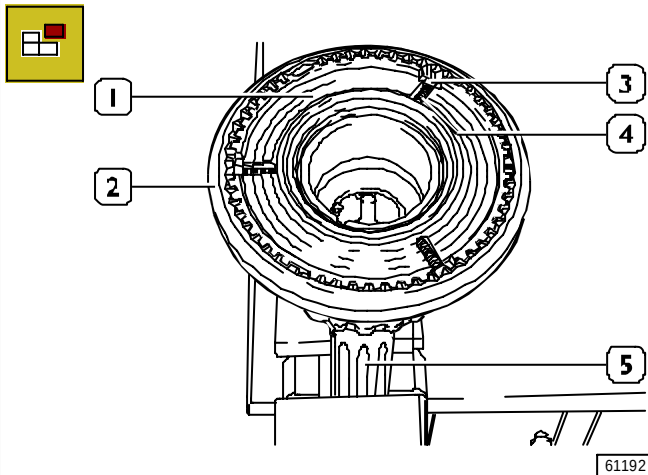


Tighten the drive input shaft (5) in the vice. Remove the sliding sleeve (2) from the hub (1) and taking care over the pins (3) and springs (4) coming out in order to collect them.

Figure 6/82

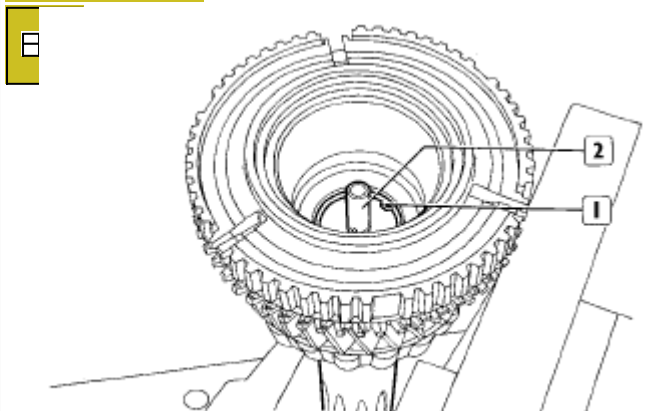


Take out the split ring (1) and remove the tube (2).

Figure 6/83

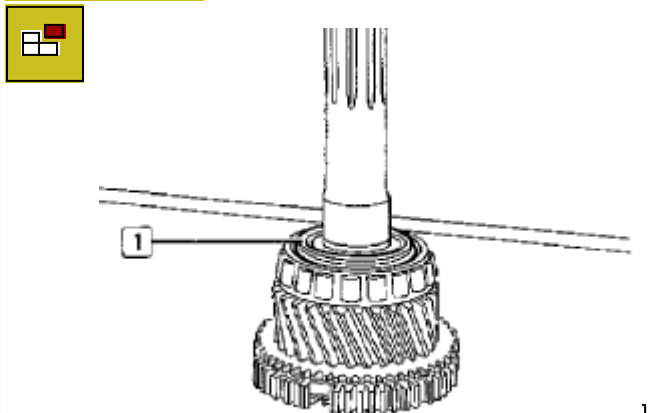

Take out the retaining ring (1) and the divided ring beneath.


Figure 6/84

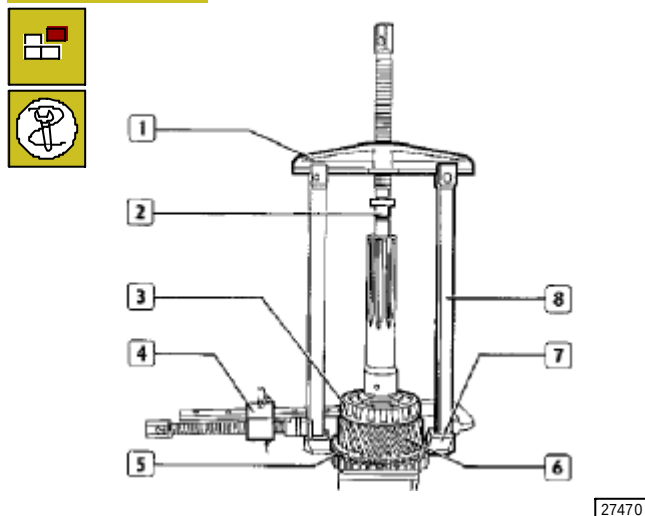

Extract the coupling body (5), gear (6) and internal ring (3) of the drive input shaft bearing with an extractor composed of:

- grips 993410245 (7);
- tie rods 99341021 (8);
- bridge 99341003 (1);
- reaction block 99345058 (2);
- clamp 99341015 (4).

Figure 6/85

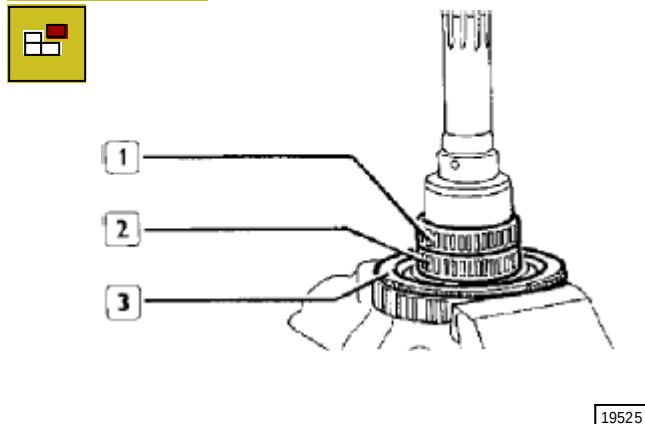


Extract the bearings (1 and 2) and the synchronizer ring (3).

Aquila Trucks Centres

Removing the transmission shaft

Figure 6/8

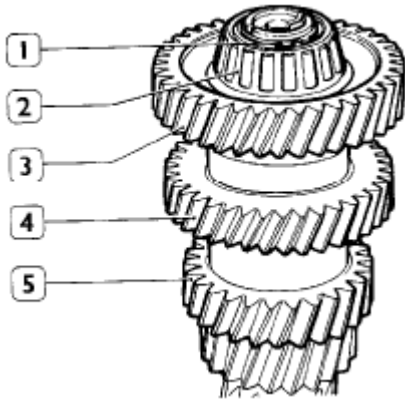

37326

Take off the split ring (1) and using an appropriate extractor take out the internal ring (2) of the bearing on the splitter side.

Use the same method, after turning over the transmission shaft, to extract the internal ring of the bearing on the ERG side.

NOTE The two roller bearings of the transmission shaft are not interchangeable. Take care to put them aside separately and to mark them so they will not get swapped over during assembly.



Using a hydraulic press, extract the gears (3, 4 and 5) from the transmission shaft.

CHECKS Gearbox

The gearbox and its covers must have no cracks.

Contact surfaces between covers and gear box must not result to be damaged or deformed. Remove any sealant residues from the threaded holes for the screws fastening oil pump and drive inlet cover.

The seats of the bearings, shafts and gear control rods must be neither damaged nor too worn.

Check that the holes, pipes and lubrication grooves are not obstructed by grease or foreign bodies.

Bearings

The roller bearings or roller cages must be in a perfect state of repair and show no signs of wear or overheating.

Shafts - gears

The bearing seats on the shafts must be neither damaged nor worn. The gear teeth must be neither damaged nor worn.

Hubs - sliding sleeves - forks


The grooves on the hubs and sliding sleeves must not be damaged. The sliding sleeve has to slide freely on the hub. The blocks or pins for positioning the sliding sleeve must not be damaged or worn. The coupling teeth of the sliding sleeves must not be damaged.

Rods - forks

The forks must be integral and their blocks must have no end float, in the radial throat of the sleeve, greater than $0.6 \div 1.2$ mm.

Where fork (5) is dismantled, on mounting, adjust its position on rod (6) as described in relating chapter.

Figure 6/87

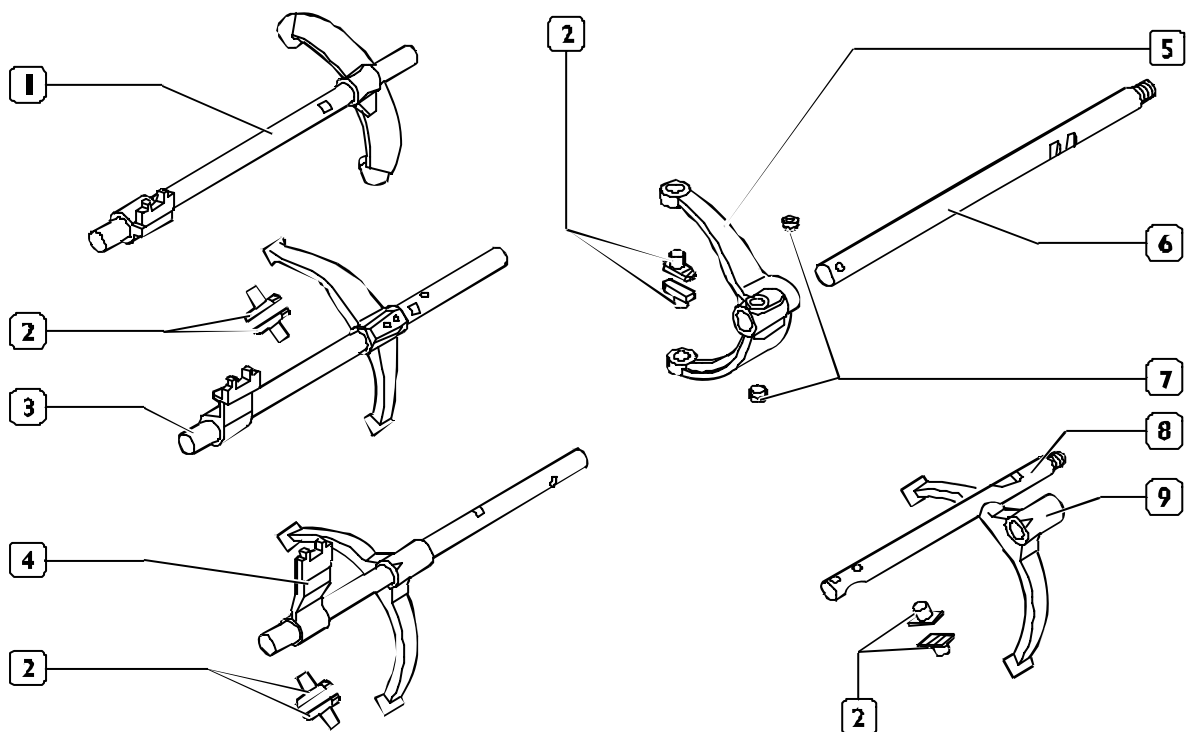

102775

1. Rod with reverse gear fork - 2. Sliding blocks - 3. Rod with I-II gear fork - 4. Rod with III-IV gear fork - 5. Splitter drive fork - 6. Rod for fork (5) - 7. Screw - 8. Rod for fork (9) - 9. epicyclic reduction unit drive fork

Aquila Trucks Centres

Synchronizing devices


Check the wear of the synchronizer rings as follows:

NOTE After the check, the synchronizer rings must be marked on the respective gears to prevent their position getting swapped over at the time of assembly.

- Visually check that the friction surface is not undulated.

BK-type single-cone synchronizing devices

Figure 6/88

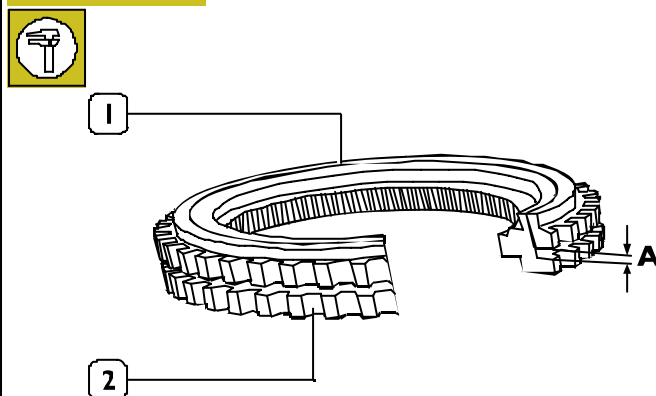

61193

Position the synchronizer ring (1) on the coupling body (2).


Turn the synchronizer ring (1) so as to ensure correct coupling on the coupling body (2).

Using a feeler gauge, check the distance A on two diametrically opposite points.

It must be no less than:

- 0.8 for the gears and splitter;
- 1.2 for the epicyclic reduction gear unit.

Figure 6/89

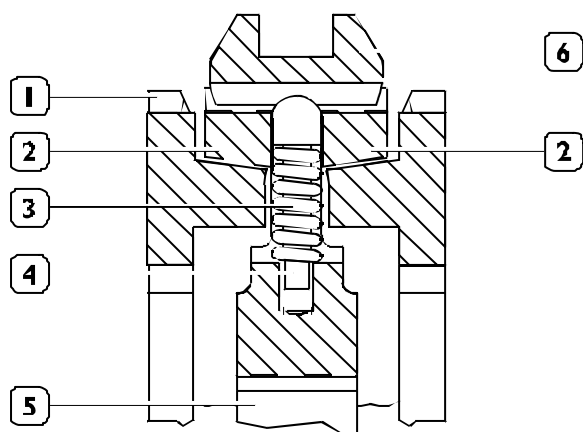


61194

1. Coupling body - 2. Synchronizer ring - 3. Compression spring - 4. Pin - 5. Synchronizer hub - 6. Sliding sleeve.

Fitting the transmission shaft

To mount the transmission shaft, carry out the steps described for removal in reverse order. The operations and assembly phases requiring specific tools, clearance checks, adjustments or special precautions are described below.

Figure 6/90

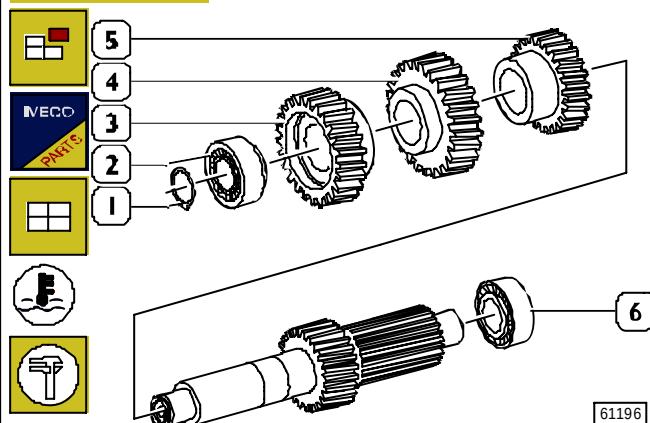

61196

Heat the gears (5, 4 and 3) to 160 °C ÷ 180 °C for approximately 15 minutes and drive them onto the shaft using a press.

NOTE For assembly, the internal rings of the tapered roller bearings must first be heated to approximately 100 °C for roughly 15 minutes.


Mount the internal ring of the bearing (2) on the splitter side, the circlip (1) and check the clearance between the circlip (1) and its seat with a feeler gauge; the clearance has to be between 0.0 and 0.1 mm.

Fitting the drive input shaft

To mount the drive input shaft, carry out the steps described for removal in reverse order.

The operations and assembly phases requiring specific tools, clearance checks, adjustments or special precautions are described below.

Figure 6/91

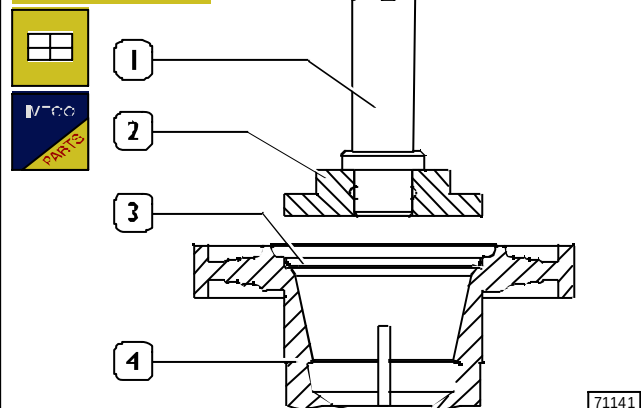


71141

If you need to replace the ring (3) of the drive input shaft (4), to remove it use general tools, for assembly use the keying device 99374370 (2) and grip 99370006 (1).

Aquila Trucks Centres


Figure 6/92

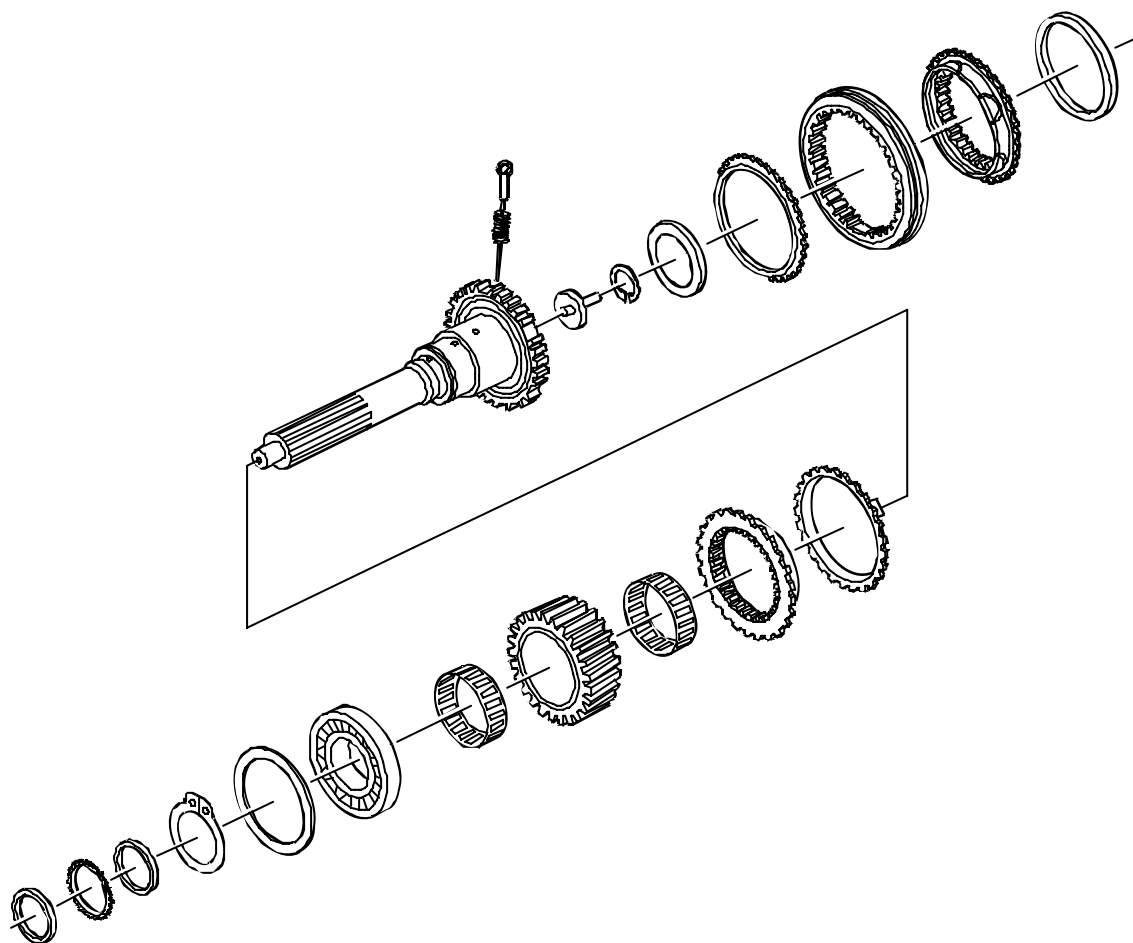

61197

COMPONENT PARTS OF THE DRIVE INPUT SHAFT

Figure 6/93

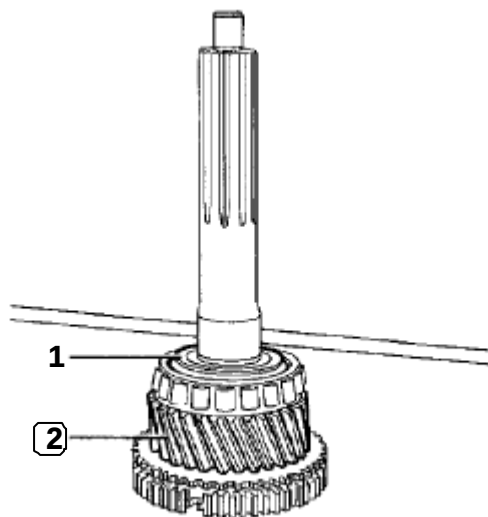

7249

Using a feeler gauge, check the end float of the drive input gear (2), it must be at least 0.2 mm.

In addition, check the tolerance between the divided ring (1) and its seat, it has to be between $-0.05 \div +0.05$ mm.


NOTE The divided ring (1) is supplied as a spare with different thicknesses.

After mounting the divided ring (1), fit onto it the retaining ring and notch it at two diametrically opposite points.

Aquila Trucks Centres

Fitting the main shaft


Figure 6/94

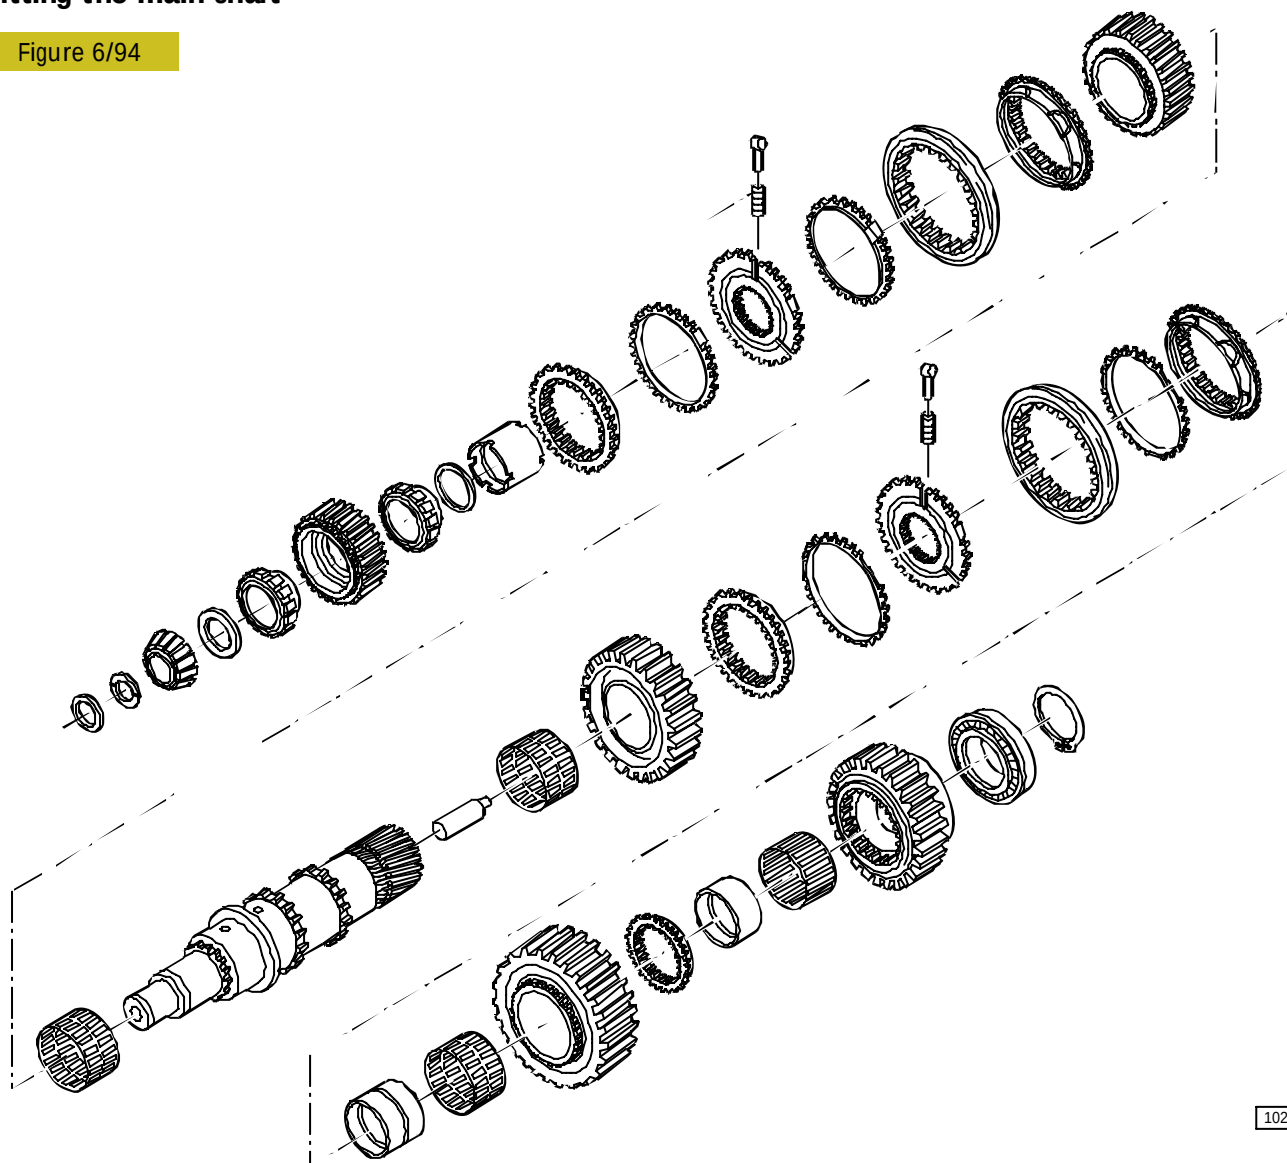

102776

COMPONENT PARTS OF THE MAIN SHAFT

Figure 6/95

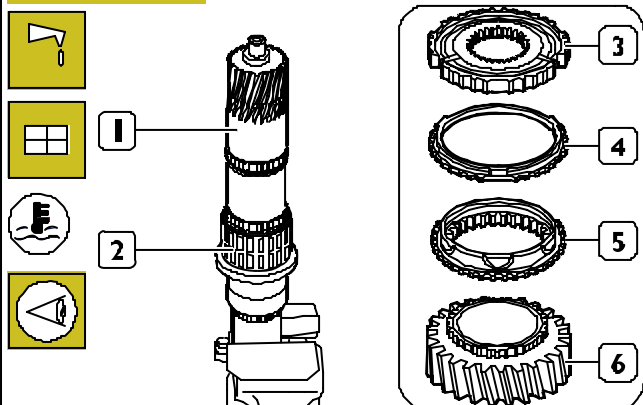

102777


Tighten primary shaft (1) by a vice and mount, on it:

- lubricated needle bearing (2);
- gear of II gear (6);
- coupling body (5);
- synchroniser ring (4).

Heat hub (3) at 120 °C temperature and mount it on primary shaft (1), paying attention that synchroniser ring projections are correctly positioned into hub (3) seats. Check that gear (6) axial clearance is 0.2 mm.

Aquila Trucks Centres


Figure 6/96

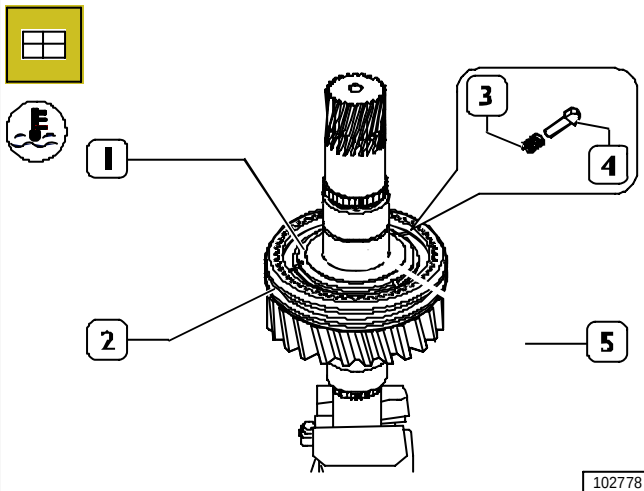

Mount sliding sleeve (2) on hub (1). Fit, into hub (1) seats: springs (3) and pins (4) adjusting them under sliding sleeve (2).

Heat bushing (5) at 120 °C and mount it on primary shaft.

Figure 6/97

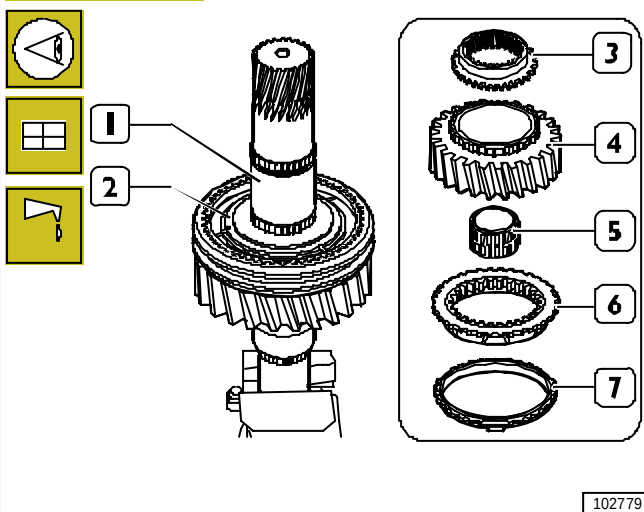


Mount, on primary shaft (1):

- synchroniser ring (7) in such a way that projections are fit into hub (2) seats;
- coupling ring (6);
- lubricated needle bearing (5);
- gear of I gear (4).

Heat toothed ring (3) at 120 °C and mount it on primary shaft (1).

Check that the axial clearance of gear of I gear (4) is 0.2 mm.


Figure 6/98

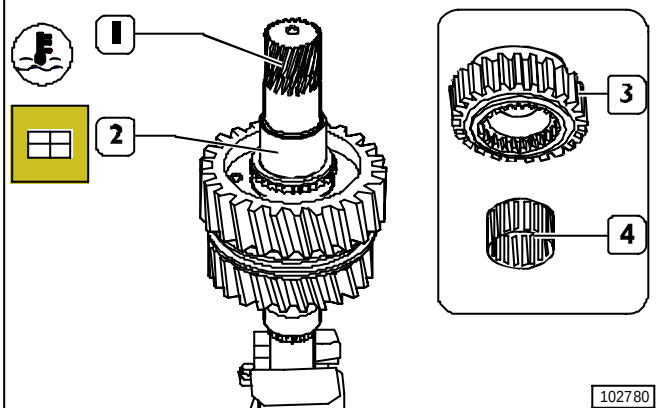

Heat bushing (2) at 120°C and mount it on primary shaft (1). Mount, on primary shaft (1):

- lubricated needle bearing (4);
- gear(3) of reverse gear.

Figure 6/99

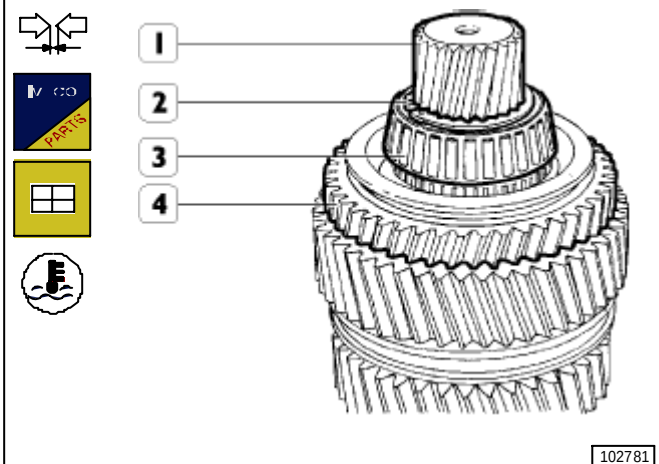

Heat taper roller bearing (3) at 100°C and mount it on primary shaft (1).

Mount spring ring (2).


Check the clearance between the split ring (2) and its seat with a feeler gauge. The clearance has to be between 0.0 and 0.1 mm.

NOTE The split ring (2) is supplied as a spare with different thicknesses.

Check that the axial clearance of gear (4) of reverse gear is $0.4 \div 1.15$ mm.

Aquila Trucks Centres

Figure 6/100

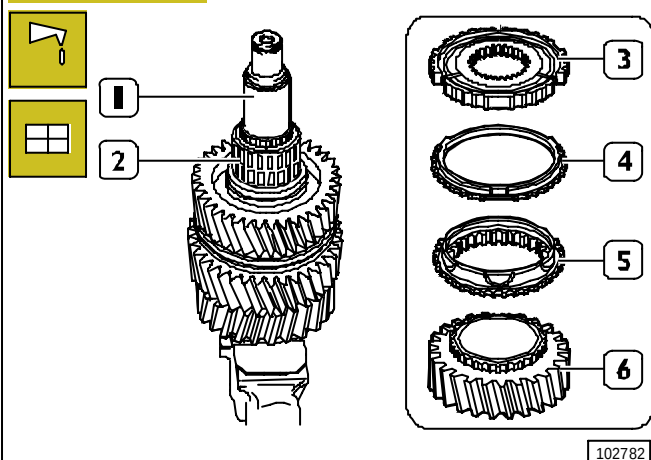

102782

Put primary shaft (1) upside down.

NOTE For the operation, use tool 99370449.


Mount, on primary shaft (1):

- lubricated needle bearing (2);
- gear of III gear (6);
- coupling body (5);
- synchroniser ring (4).

Heat hub (3) at 120 °C temperature and mount it on primary shaft (1), paying attention that synchroniser ring projections are correctly positioned into hub (3) seats.

Check that gear (6) axial clearance is 0.2 mm.


Figure 6/101

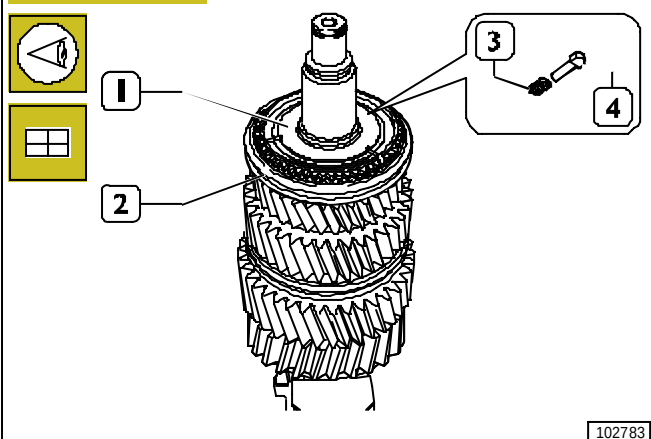

102783

Mount sliding sleeve (2) on hub (1). Fit, into hub (1) seats: springs (3) and pins (4) adjusting them under sliding sleeve (2).

Figure 6/102

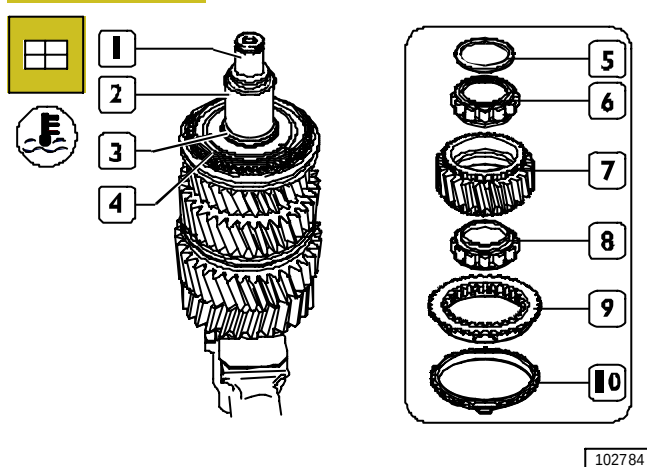

102784


Mount, on primary shaft (1), spacer ring (3).

Heat bushing (2) at 120°C and mount it on primary shaft (1). Mount:

- synchroniser ring (10) in such a way that its projections are positioned into hub (4) seats;
- coupling body (9);
- gear of IV gear (7), complete with roller bearings (6 and 8);
- spacer ring (5).

Adjusting the main shaft

Figure 6/103

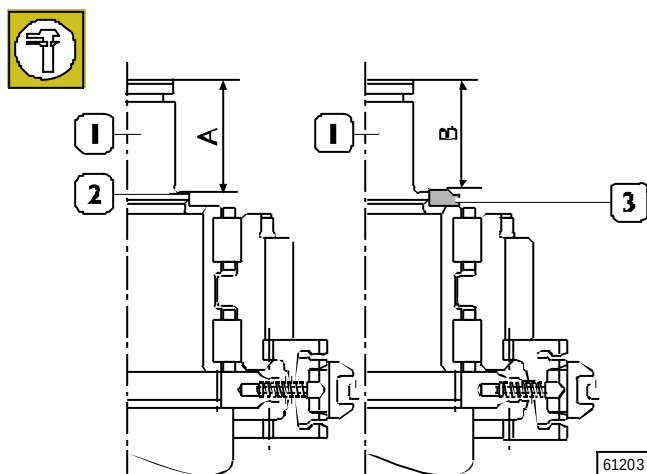

61203

Determine rib ring thickness for gear of IV gear, operating as below.

Measure the distance A between the end of the shaft (1) and the seat (2) supporting the tapered roller bearing.


Mount the thrust washer (3) and measure the distance B between this and the end of the main shaft (1).

The difference A - B must be between +0.07 and -0.08 mm..

If a different value is found, replace rib ring (3) by another one having suitable thickness.


Aquila Trucks Centres

Figure 6/104

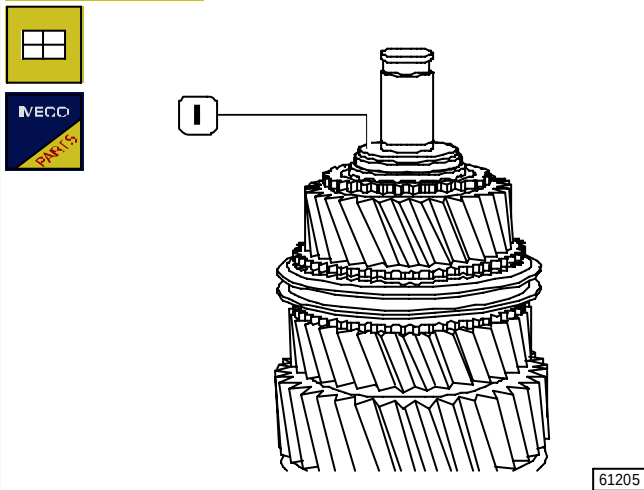

Assemble the adjustment ring (1) having a thickness set in the previous measurements.

Figure 6/105

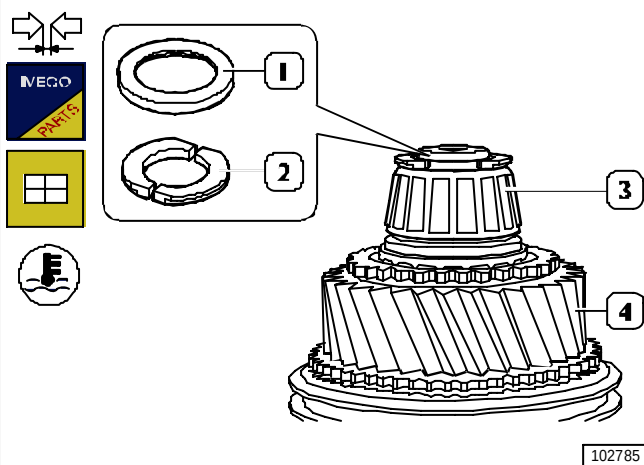

Mount the bearing (3), previously heated to 100°C.

Mount the divided ring (2) whose thickness produces an end float for it in its seat of $-0.05 \div +0.05$ mm.

Mount the retaining ring (1) and notch it at several points the same distance apart under the divided ring (2).

Check that the axial clearance of gear of IV gear (4) is 0.05 mm.

Fitting the gearbox

To mount the gearbox assembly, carry out the steps described for removal in reverse order. The operations and assembly phases requiring specific tools, clearance checks, adjustments or special precautions are described below.

The tightening torques are given in the specific table.


NOTE Any rings and seals, ring nuts, spring pins, safety plates and self-locking screws found to be worn and all parts that are not fully efficient or are scored, dented or deformed must be replaced at the time of assembly.

Thread of screws fastening oil pump and drive inlet cover is originally coated with sealing material; therefore, screws must be replaced by new ones at every dismounting operation.

The flat gaskets should be fitted dry, without any jointing compound or grease.

Before fitting the twin-lipped seals, fill the gap between the two lips with TUTELA MR3.

Figure 6/106

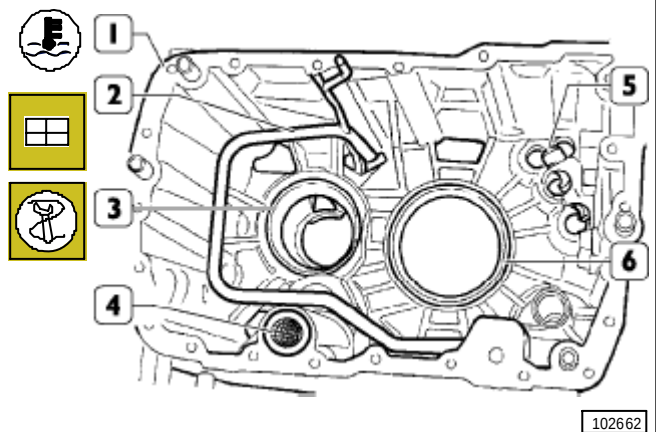


Heat bearings (3 and 6) seats at 60 °C temperature and mount bearings outer rings with handgrip 99370007 and knocker 99374093.

Mount oil filter (4), pipings (2) and latch (5) with relating spring..


Aquila Trucks Centres

Figure 6/107

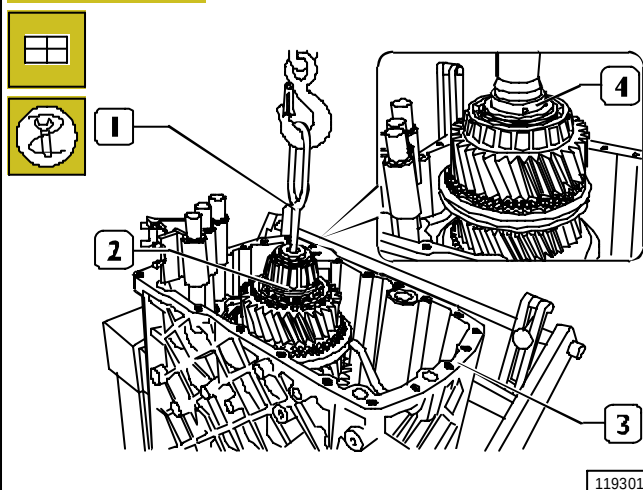

Clamp the primary shaft (2) in a vice and introduce tool 99370449 (1) into it and constrain it using the related retaining nut. Hook the tool 99370449 (1) to the lifter and lift the primary shaft (2) and insert it inside the gear box (3), being careful to assemble the rods and forks in the same position measured during the disassembly phase. Using a suitable screw inserted in the gear box hole, push the latch so that the rods can be inserted in their corresponding seats


Figure 6/108

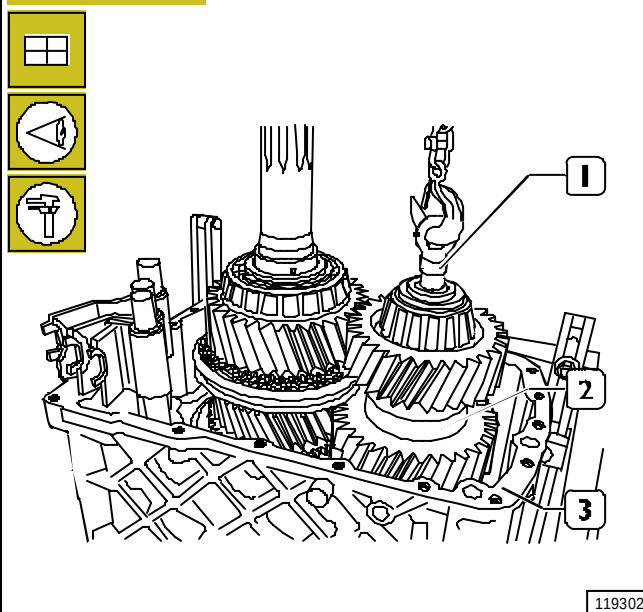

Use the eyebolt 99360502 (1) to lift the secondary shaft (2) and insert it, after properly moving the primary one, inside the gear box.

Adjusting splitter drive fork

Figure 6/109

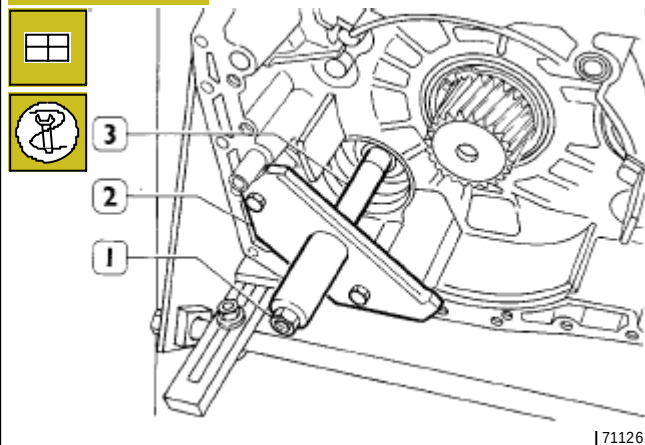


Mount tool 99370450 (2) on gearbox. For gearboxes 16 S 1920/2220/2520 tool 99370450 (2) must be provided with spacer (3) having following thickness:

- 16 S 1920/2220 = 13.8 mm.
- 16 S 2520 = 13.5 mm.

Insert the splitter drive fork control rod and secure it by means of nut (1).

Figure 6/110

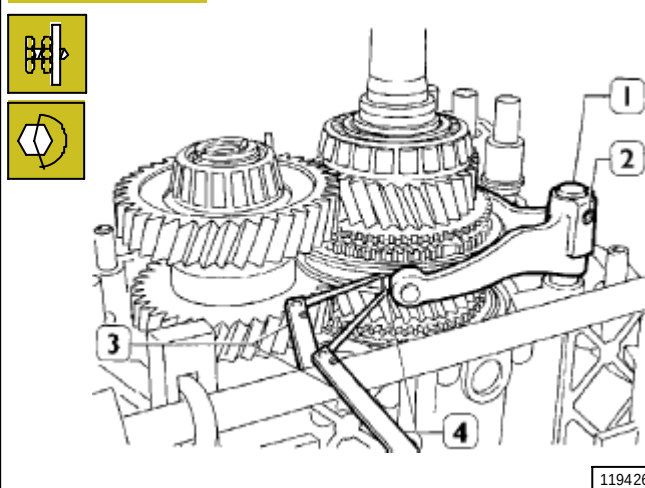

Using the two socket-head screws (2), position the splitter control fork (1) so that the two sliding blocks (4) are centred in the throat of the sliding sleeve. Use two feeler gauges (3) for this purpose.


After making the adjustment, tighten the two screws (2) to the required torque.

Screw the splitter control rod setscrew onto the gearbox, tightening it to the required torque.

Take the adjustment tool 99370450 (2, Figure 6/109) out of the gearbox together with the spacer (3) after unscrewing the nut (1, Figure 6/109).

Aquila Trucks Centres

Figure 6/111

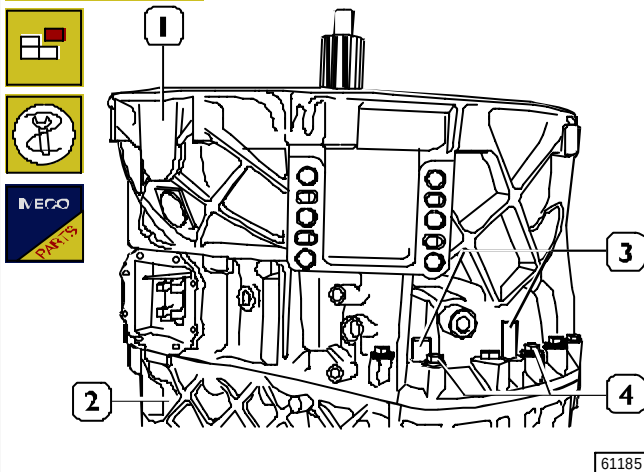


Position a new gasket on gear box (2).

Mount front cover (1).

Screw screws (4) without fully tightening them, fully fit in centering pins (3) and tighten screws (4) with prescribed torque.

534010 Oil pump

Figure 6/112

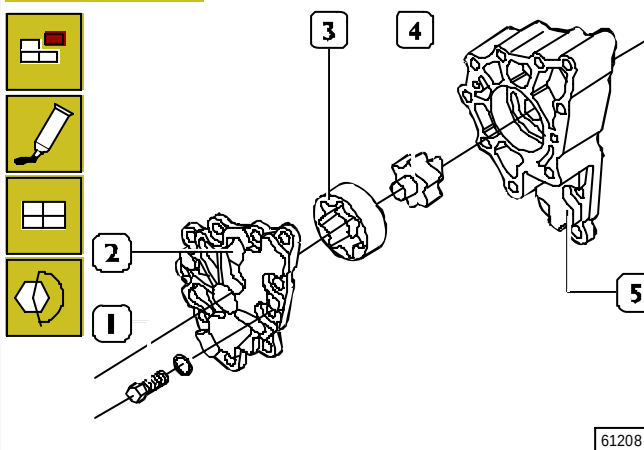

To dismantle the oil pump: unscrew the screws (1), take the cover (2) off the pump body (5) and extract from this the external (3) and internal (4) rotors.


To reassembly, carry out these steps in reverse order.

NOTE Apply a light layer of LOCTITE 574 on the mating surface of the cover (2).

Tighten the screws (1) to the required torque.

Adjusting the transmission shaft bearing end float


Figure 6/113

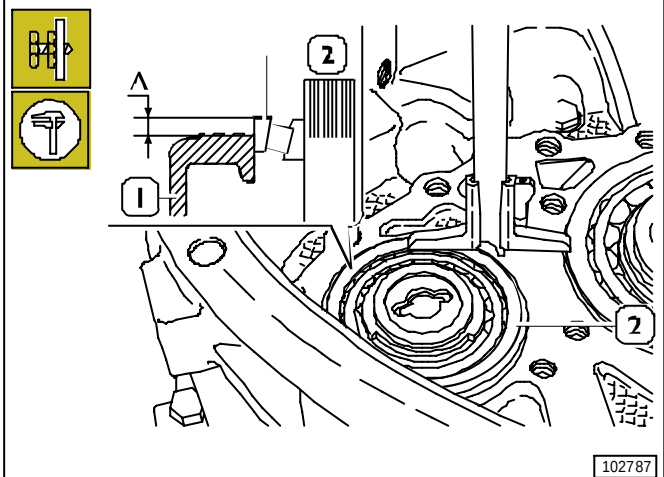

Determine the thickness S of the rings (2, Figure 6/114) for adjusting the end float of the transmission shaft bearing (2) as follows:

- Turn the shafts and check that the outer ring (2) of the bearing rests without any clearance on the bearing rollers.
- Measure the distance A between the plane of the front box (1) and the outer ring (2) at two diametrically opposite points.

Figure 6/114

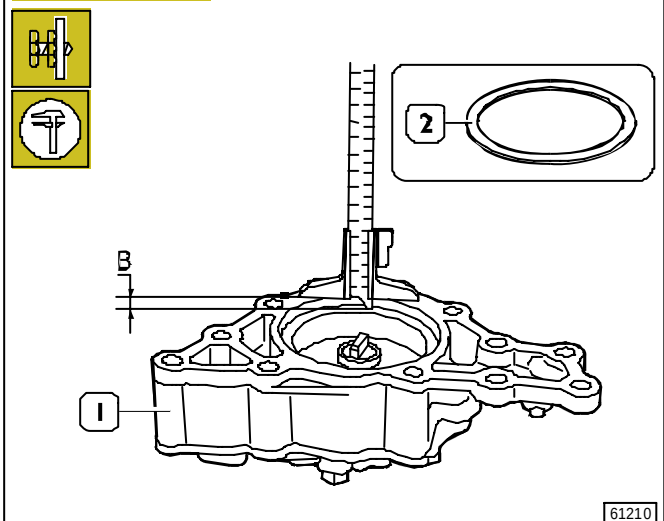

Measure the depth B of the seat of the bearing (2, Figure 6/113) on the pump body (1).

The thickness S of the adjustment ring (2) is determined by the following equation:


$$S = [B - (A - C)] - D$$

Where:

- A - B, measurements taken;
- C, thickness of gasket;
- D, end float of 0 - 0.1 mm.


Aquila Trucks Centres

Figure 6/115

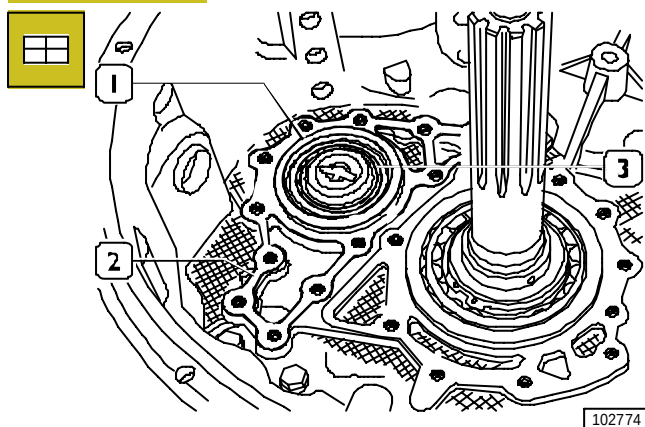

Mount new gasket (2).
Position adjusting ring (1), by thickness determined in previous measurement, on the outer ring of taper roller bearing (3).


Figure 6/116

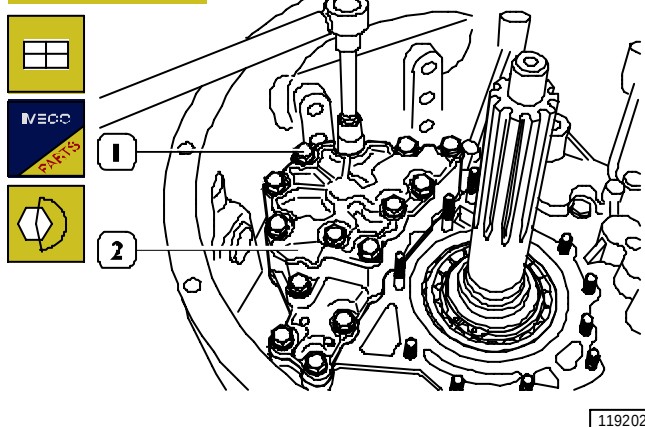

Mount oil pump (2) complete with adjusting ring (2).
Screw new screws (1) and tighten them with prescribed torque.

530511 Drive input shaft cover


Figure 6/117

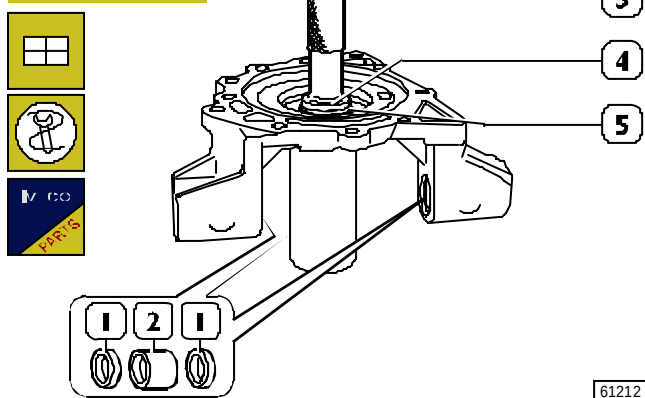

To replace the seals (1) and bushings (2), use general tools to remove - fit them.

To fit the seal (5) use the keying device 99370420 (4) and grip 99370006 (3).


Figure 6/118

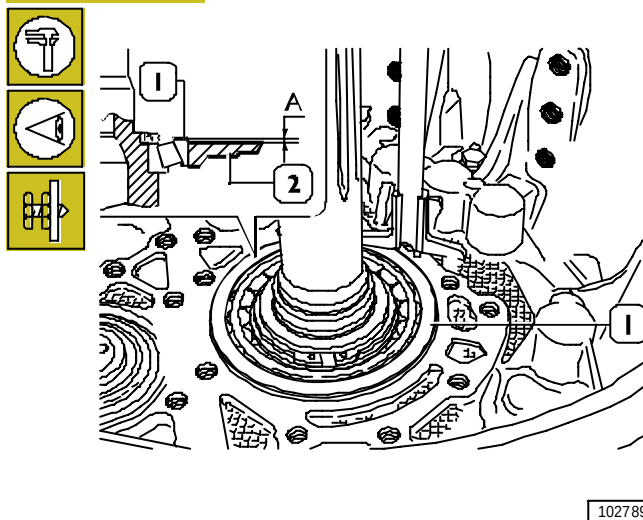

Determine the thickness S of the drive input shaft bearing adjustment ring as follows:

- Turn the drive input shaft and check that the outer ring (1) rests without any clearance or pre-load on the rollers of the internal ring of the bearing.
- Measure the protrusion of the bearing (1) from the plane of the front cover (2), distance A.

Figure 6/119

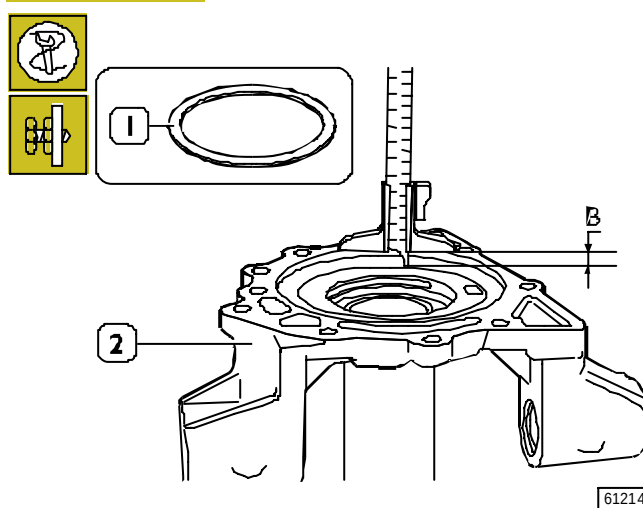

- Measure the depth B of the seat of the bearing (1, Figure 6/118) on the cover (2).

The thickness S of the adjustment ring (1) is determined by the following equation:


$$S = [B - (A - C)] - D$$

Where:

- A - B, measurements taken;
- C, thickness of gasket;
- D, end float of 0 - 0.1 mm.

Aquila Trucks Centres


Figure 6/120

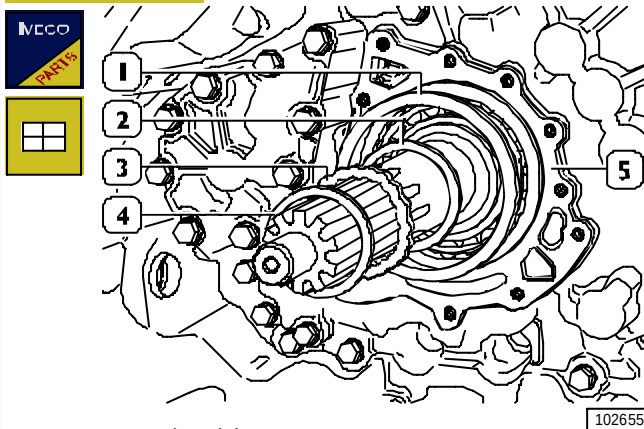

Mount new gasket (5).

Mount: adjusting ring (1) having the thickness that was determined in previous measurement, rib ring (2), spring (3) and rib ring (4).


Figure 6/121

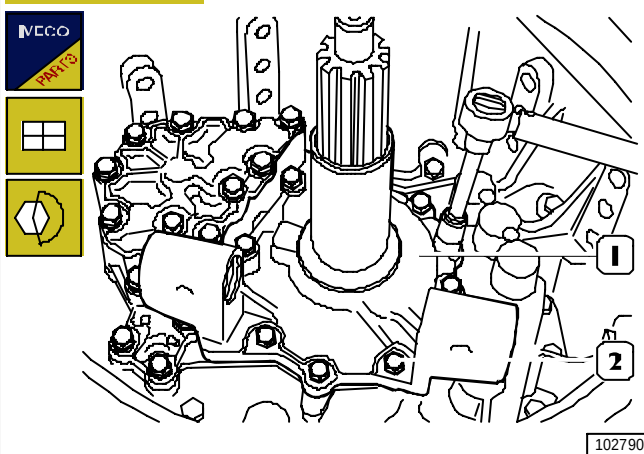

Mount cover (1).

Screw new screws (2) and tighten them with prescribed torque.


Figure 6/122

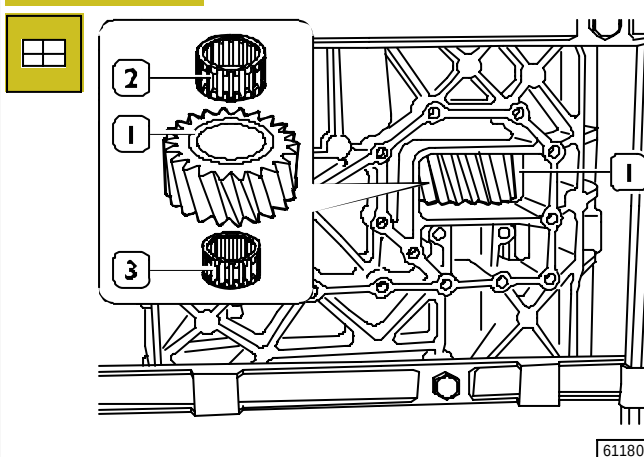

Put gear box upside down.


Mount gear of reverse gear transmission (1) complete with needle bearings (2 and 3). Mount the shaft for gear of reverse gear.

Figure 6/123

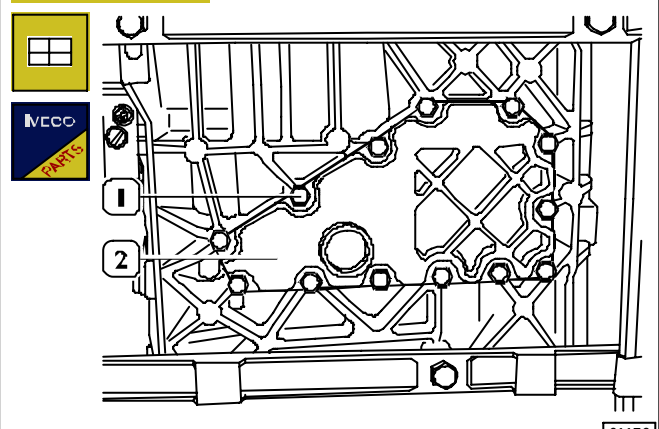

Mount cover (2) with a new gasket, screw screws (1) and tighten them with prescribed torque.

Figure 6/124

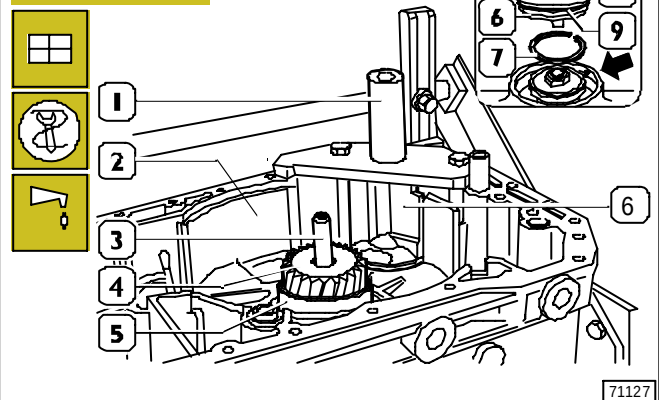

Use tool 99345097 to assemble the tube (3) in the primary shaft and check that its projection is equal to what was measured upon disassembly (if this information is not available, check that the tube penetrates approx. 10 mm inside the box).

Mount the spacer (5) on the main shaft (4), position the seal (6) in the seat of the splitter driving cylinder.

NOTE Position the cut of the ring (7) by the hole (→).

Mount the seals (8 and 9) on the cylinder (6) and lubricate them.

Fit the cylinder (6) in the gearbox.

Position the tool 99370450 (1) on the gearbox (3) so as to keep the cylinder (6) in the seat. Supply the splitter control valve (2, Figure 6/68) with compressed air (max. 6.8 bars) and listen to check the internal piston works and there are no air leaks.

Take off the tool 99370450 (1).

Mount rod positioning pegs.

Refit the epicyclic reduction gear unit box as described under the relevant heading.

Replenish the gearbox with lubricating oil of the required grade and quantity.

Aquila Trucks Centres

Aquila Trucks Centres

**ZF gearboxes
with Intarder, hydraulic retarder,
types:
ZF 16 S 1621 T.D.
ZF 16 S 2221 T.D.
ZF 16 S 2521 T.O.**

	Page
MAIN DATA	25
TOOLS	26
OVERHAULING THE GEARBOX	32
- Removing the hydraulic retarder from the gearbox on the stand	32
- Refitting the hydraulic retarder	34
- Recording the bearing end clearance of the epicycloidal reduction unit	33
- Removing the epicyclic reduction gear unit (ERG)	35
- Component parts of the epicyclic reduction gear unit	35
- Refitting the epicyclic reduction gear unit (ERG) rear box	40

NOTE Recover the adjustment rings from the stator and from the epicyclic assembly shaft bearing.

Aquila Trucks Centres


Aquila Trucks Centres

NOTE The technical data, tightening torques and procedure for overhauling the gearbox differ from the 16 S 1620 T.D. - 16 S 2220 T.D. - 16 S 2520 T.O. gearbox in the following.

MAIN DATA

GEARBOX WITH INTARDER			16 S 1621 T.D.	16 S 2221 T.D. 16 S 2521 T.O.
	Maximum braking torque	Nm	3000	
	Braking capacity	kW	420	
	Type of oil		Tutela Truck FE-Gear Tutela ZC 90	
	Quantity after overhauling gearbox and retarder drained completely	l	18.5	21.5
		kg	16.5	19.5

Figure 1





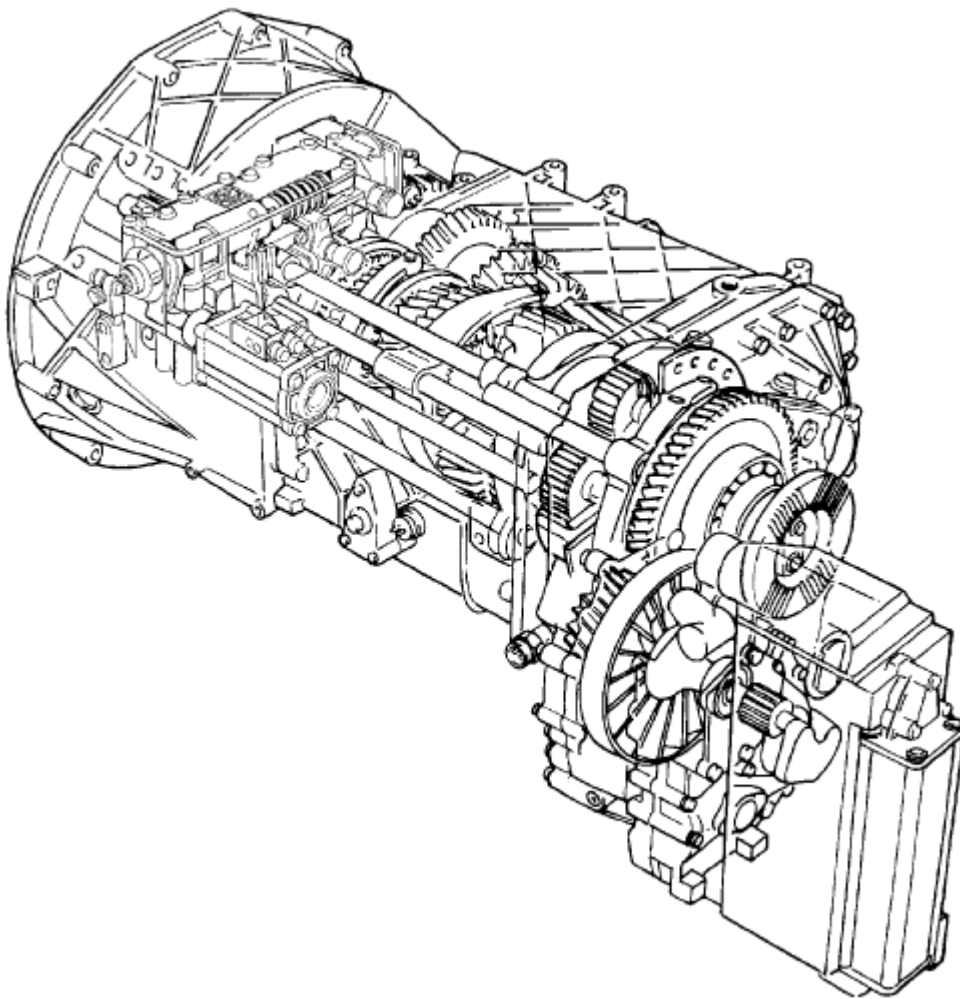


GEARBOX ASSEMBLY WITH RETARDER

71142

Aquila Trucks Centres


TOOLS

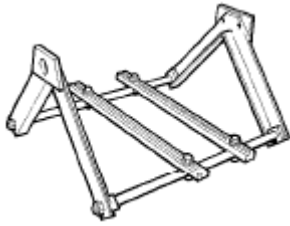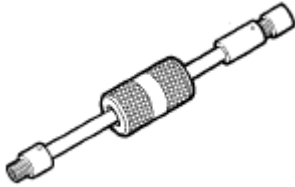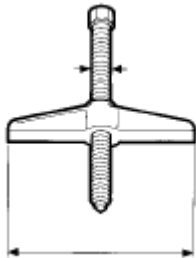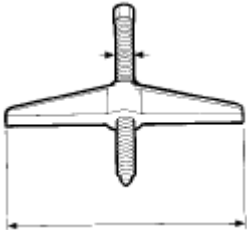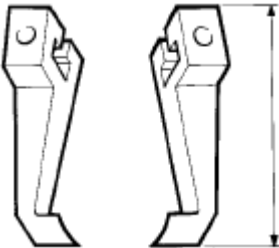TOOL NO.	DESCRIPTION
99322205	 Rotary stand for overhauling assemblies
99322225	 Stand for supporting assemblies (to be fitted on stand 99322205)
99340205	 Puller with slide-hammer
99341003	 Single-acting bridge
99341004	 Single-acting bridge
99341009	 Pair of brackets





Aquila Trucks Centres

TOOL NO.	DESCRIPTION
99341012	Pair of brackets
99341015	Clamp
99341018	Pair of brackets with hole
99341019	Pair of tie rods with grips
99341020	Pair of tie rods with grips
99341021	Pair of tie rods with grips





Aquila Trucks Centres

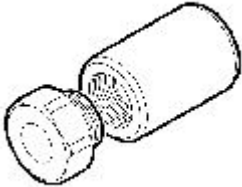TOOL NO.	DESCRIPTION	
99341022		Grips
99341024		Grips
99341025		Grips
99342143		Pin to extract reverse gear shaft (use with 99340205)
99345058		Extractor reaction block
99345097		Reaction tool to extract sun gear and drive in main shaft oil pipe




Aquila Trucks Centres

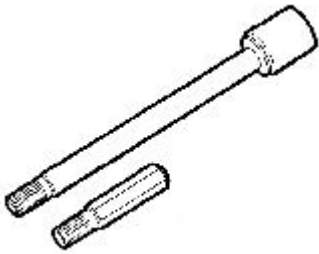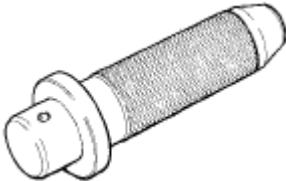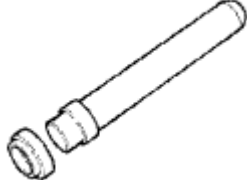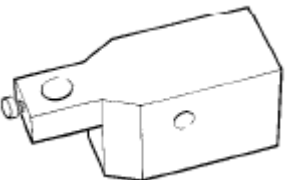TOOL NO.	DESCRIPTION
99347092	 Pin to extract gearbox front and rear centring pins
99370006	 Grip for interchangeable drifts
99370007	 Grip for interchangeable drifts
99370113	 Drift to mount seal and/or bushings on gearbox
99370415	 Dial gauge stand to adjust transmission shaft bearing end float (use with 99395604)
99370420	 Key for fitting gasket on gearbox front cover (use with 99370006)

Aquila Trucks Centres

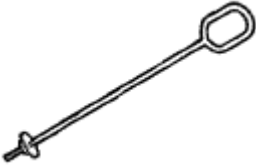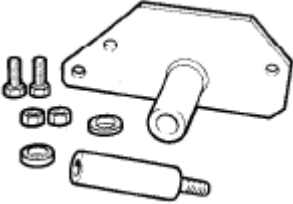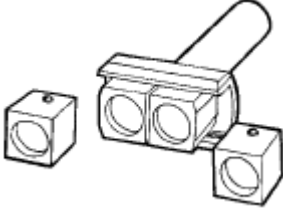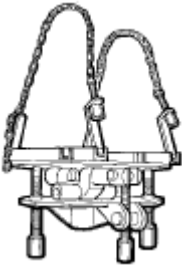TOOL NO.	DESCRIPTION	
99370449		Hook to lift main shaft
99370450		Tool to adjust splitter control fork
99370465		Tool to notch safety plates
99370565		M10 eyebolts (2) for lifting various assemblies
99370629		Mount to support gearbox when removing and refitting it on the vehicle
99371050		Brackets to support gearbox when overhauling (use with 99322205 - 99322225)

Aquila Trucks Centres

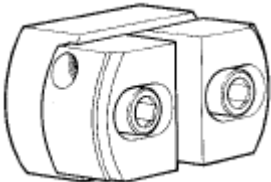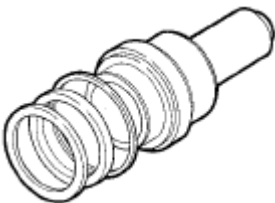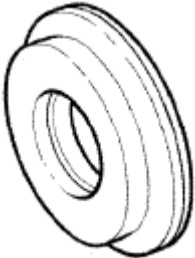
TOOL NO.	DESCRIPTION	
99374093		Drift to mount external bearing races ($\varnothing 91 \pm 134$ mm) (use with 99370007)
99374221		Key to fit gaskets on rear cover
99374370		Key to fit oil deflector on direct drive shaft (use with 99370006)
99395604		Dial gauge (0 ± 10 mm)

Aquila Trucks Centres

530210 OVERHAULING THE GEARBOX

Removing the hydraulic retarder from the gearbox on the stand

Figure 2

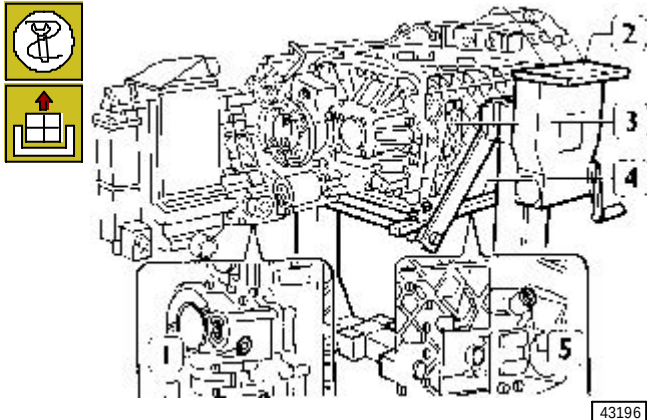


Fit the brackets 99371050 (3) onto the assembly.

Using ropes with hooks and a movable lift, put the assembly on the rotary stand 99322205 (2) together with the mount 99322225 (4).

Take off the plug (5) and drain the lubricating oil from the gearbox.


Take off the plug (1) and drain the lubricating oil from the hydraulic retarder.

Figure 3

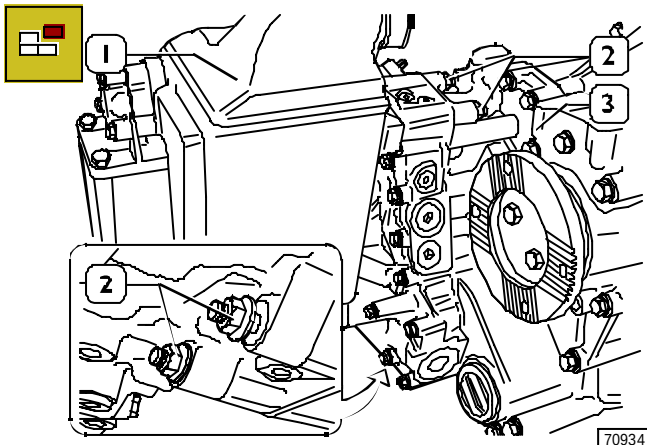


If applicable, remove the four nuts (2) fixing the heat exchanger (1) to the hydraulic retarder (3) and detach the heat exchanger (1).

Figure 4

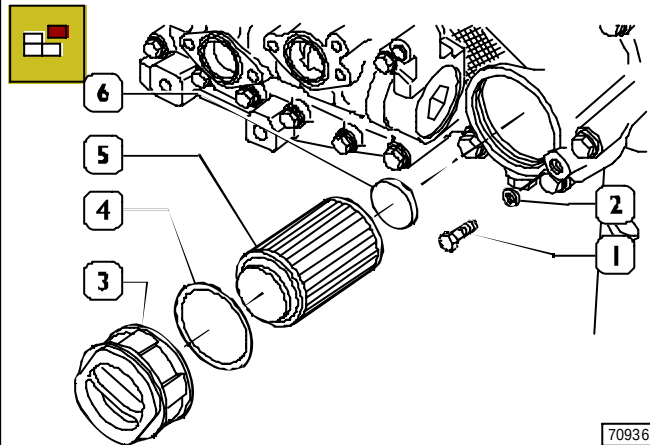


Remove the screw (1) and the washer (2) beneath. Extract the plug (3) with the seal (4), oil filter (5) and magnet (6). Drain any oil that is present.

Figure 5

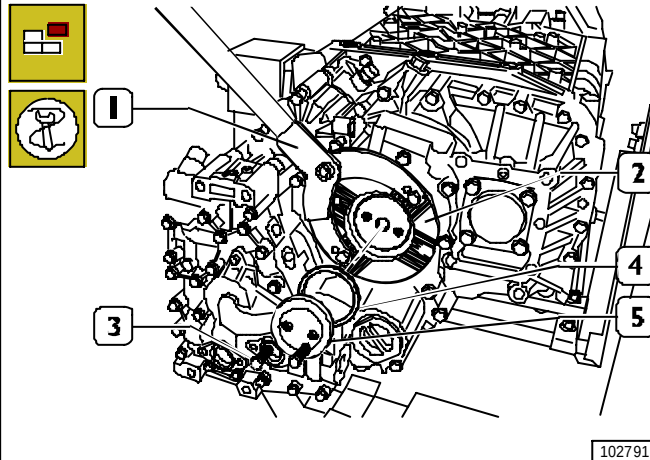

Block rotation of the sleeve (2) by applying the lever 99370317 (1) to it and remove the screws (3), disc (5) and underlying seal (4).


Figure 6

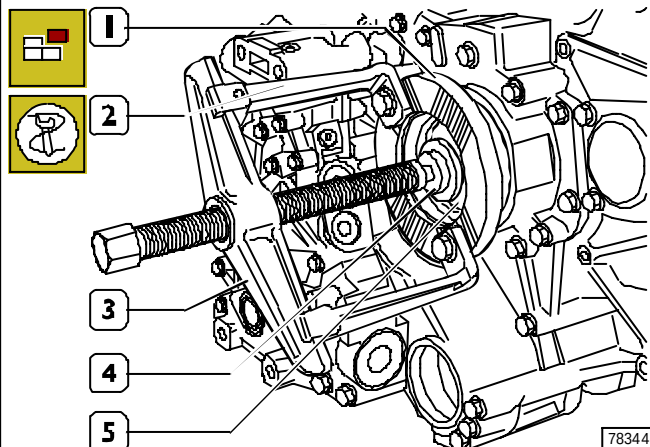

Using an extractor composed of the bridge 99341003 (3), brackets 99341018 (2) and reaction block 99345058 (4), remove the sleeve (1) from the shaft (5).


Aquila Trucks Centres

Figure 7

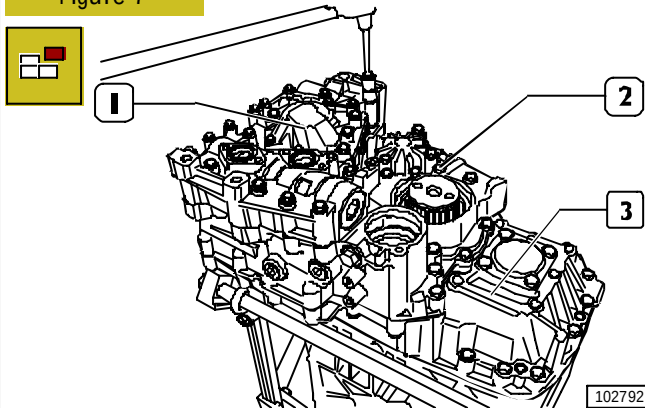

Remove the screws (2) fixing the hydraulic retarder (1) to the rear box (3).

Figure 8

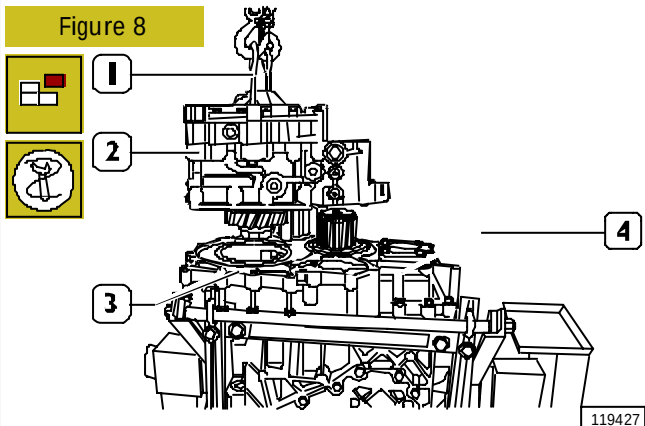


Fit the eyebolt 99370565 (1) to the hydraulic retarder (2). With special ropes and lifter, detach the hydraulic retarder (2) from the rear box (4). Remove the gasket (3).

Refitting the hydraulic retarder

Prior to reattachment determine the thickness of the ball bearing end clearance adjustment ring as follows:

Recording the bearing end clearance of the epicycloidal reduction unit


Figure 9

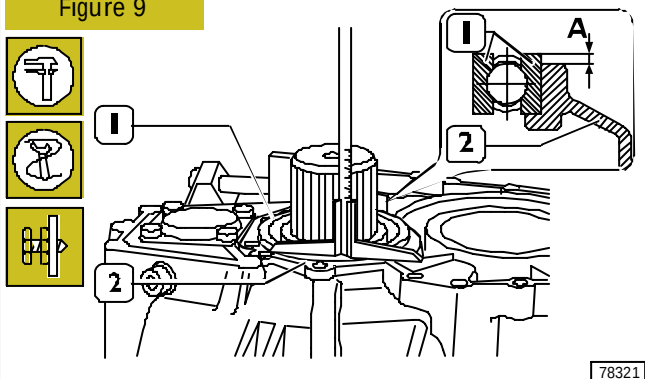

Determine the ball bearing end clearance adjustment shim (1) as follows:

- measure the projection of the bearing (1) from the rear box surface (2): dimension A.

Figure 10

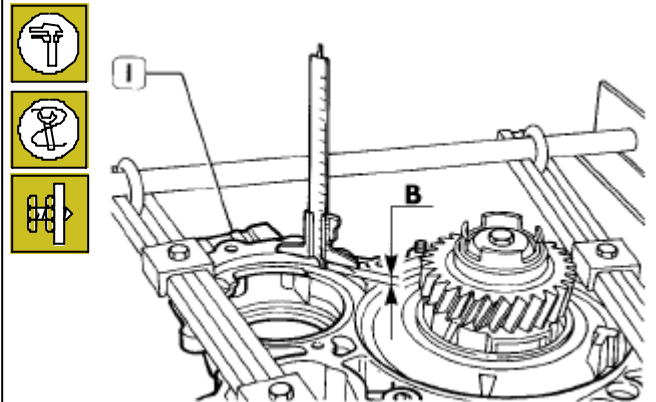

- measure the distance between the mating surface (1) of the half box decelerator and the bearing support surface (1, Figure 9): dimension B;
- measure the thickness of the gasket between the decelerator and the transmission: dimension C.


Thickness S of adjustment ring is given by the following equation:

$$S = [B + C - A] - G$$

where:

- B - C - A = measured values
- G = 0.1 mm: ball bearing end play (1, Figure 9) (0 to 0.1 mm).

Figure 11

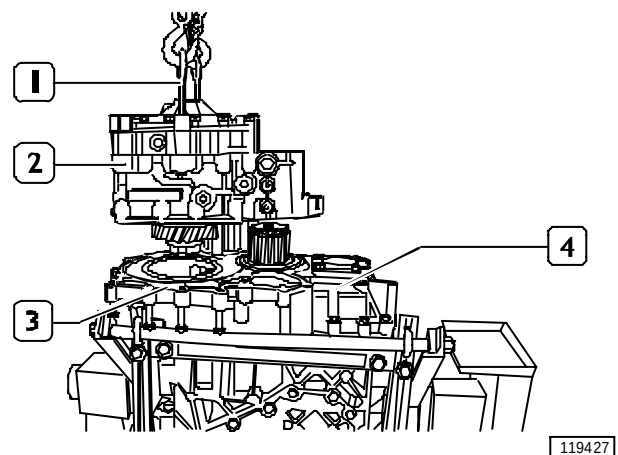


Fit the eyebolt 99370565 (1) to the hydraulic retarder (2) and lift it with a hoist.

Fit a new gasket (3) on the rear box (4).

Mount the hydraulic retarder (2) on the rear box (4) making sure that the gasket (3) gets positioned correctly.

Aquila Trucks Centres


Figure 12

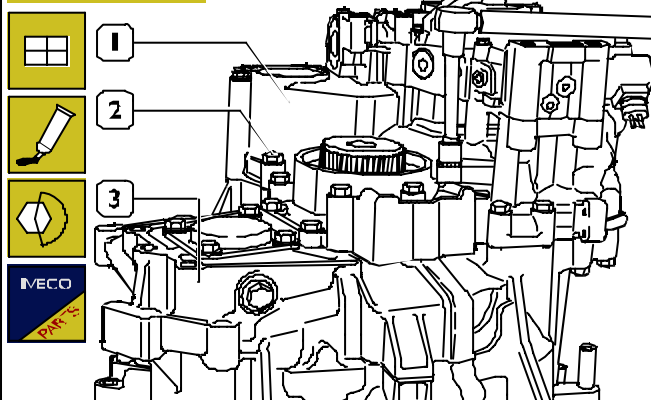

70948

Screw down the screws (2) fixing the hydraulic retarder (1) to the rear box (3) and tighten them to the prescribed torque.

Figure 13

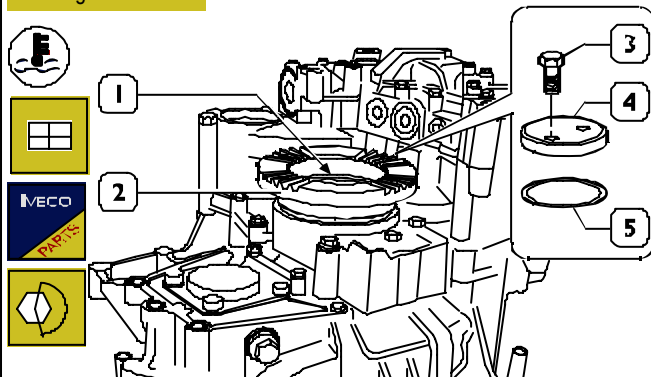


70949

Heat the flange (2) to approx. 80°C and fit it onto the spider shaft (1).

Fit on a new seal (5), the disc (4), screw down the screws (3) and tighten them to the prescribed torque.


Figure 14

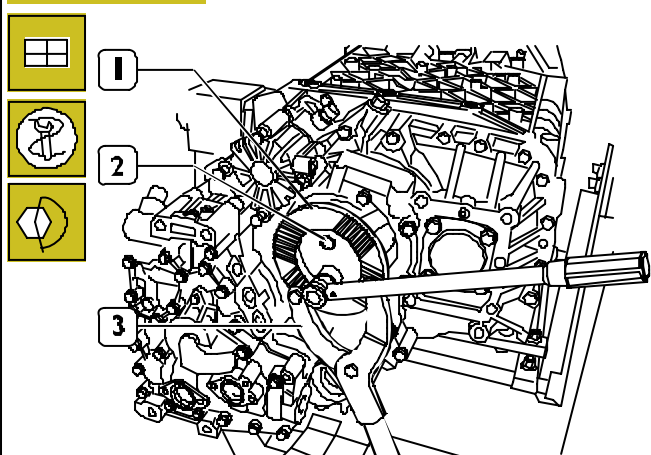

102794

Block rotation of the sleeve (1) by applying the lever 99370317 (3) and tighten the fixing screws (2) to the prescribed torque.

Figure 15

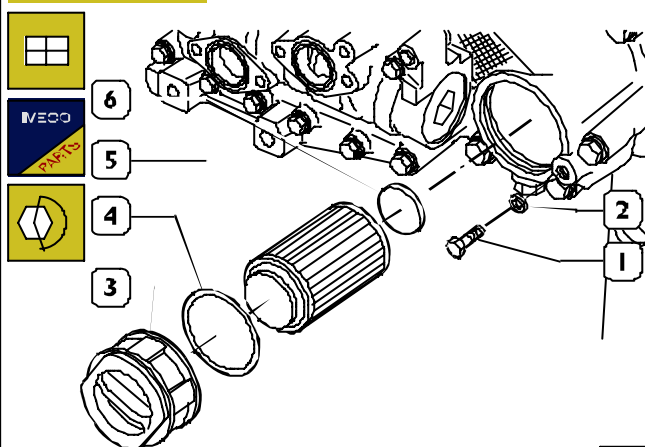


70936

Position the magnet (6) on the filter (5) and insert this into the hydraulic retarder. Fit the plug (3) with a new seal (4).

Screw down the fastening screw (1) with the washer (2).


Figure 16

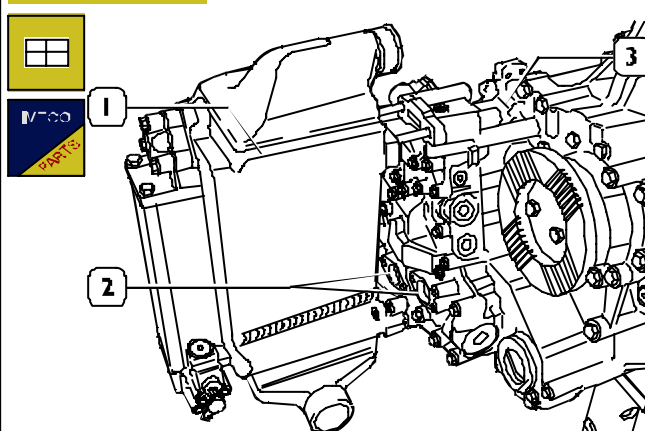

70955

Fit two new seals (2) on the hydraulic retarder (3) and mount the heat exchanger (1) (if applicable).

Figure 17

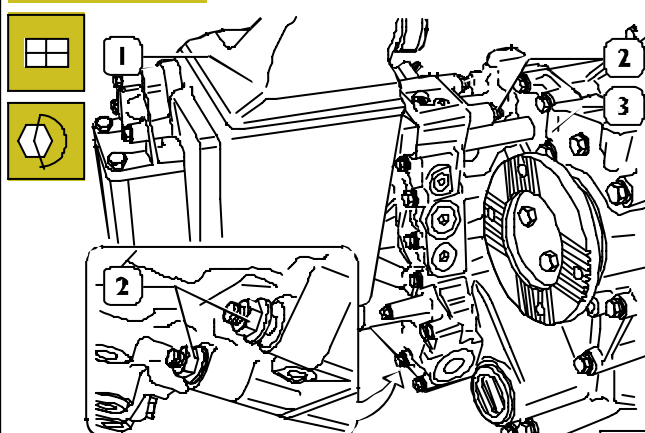


70934

Screw down the four nuts (2) fixing the heat exchanger (1) to the hydraulic retarder (3) and tighten them to the prescribed torque.

Aquila Trucks Centres

Removing the epicyclic reduction gear unit (ERG) rear box

Figure 18

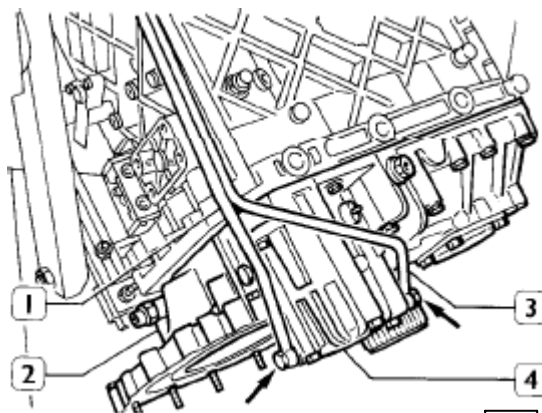


43798

Remove the hydraulic retarder as described under the relevant heading.

Take off the fittings (→) and disconnect the pipes (1 and 3) from the cylinder (4). Remove the cylinder (4) from the ERG rear box (2).


Figure 19

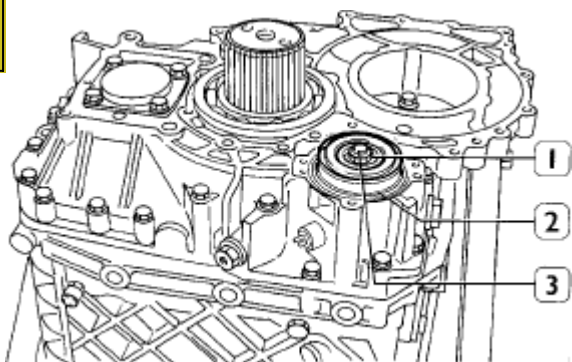

43799

Remove the nut (1) and extract the piston (2) from the rod (3).


Figure 20

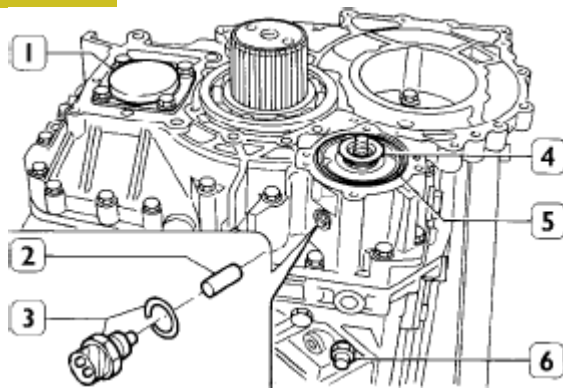

37353

Remove the seal (5), gasket (4), switch (3), push rod (2) and retaining push rod 145N (6) from the ERG rear box (1).

Figure 21

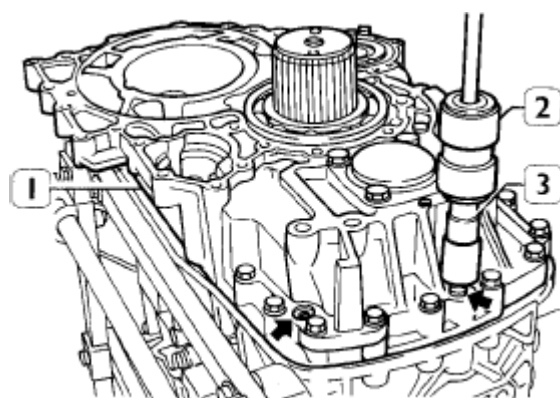


43801

Using the percussion extractor 99340205 (2) and part 99342143 (3), extract two of the three centring pins from the ERG rear box (1).

NOTE The arrows show the outside pins to extract; there is a third pin inside.

Fig

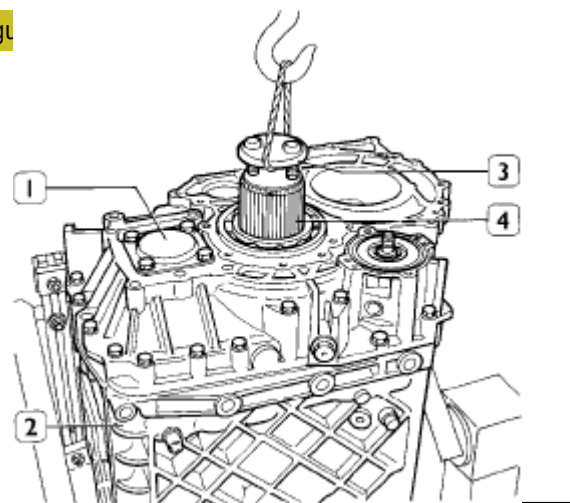

43802


Take out the screws fixing the ERG rear box (1) to the gearbox (2). Fasten the retaining plate (3) to the shaft (4) with two screws. Using a rope and hydraulic lift, remove the ERG box (1) from the gearbox (2).

Removing the epicyclic reduction gear unit (ERG)

NOTE Here we describe the steps to remove and fit the ERG epicyclic reduction gear unit that differ from the ones given for gearboxes without the Intarder.

Aquila Trucks Centres

Figure 23

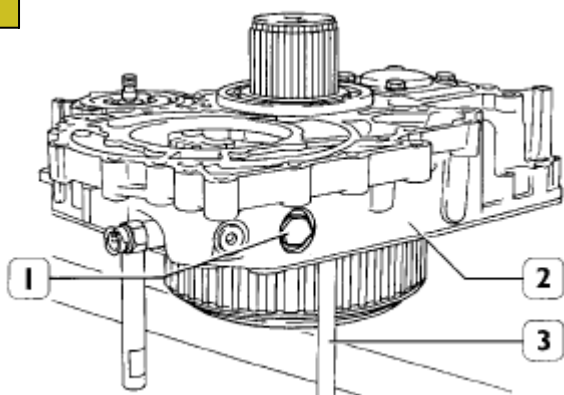


119428

Place the epicycloidal reduction unit (2) on the work bench and disassemble the two G.R.E. control knuckle joint pins (1) (8, Figure 24).

Remove the intarder oil pump intake pipe (3).

Figure 24

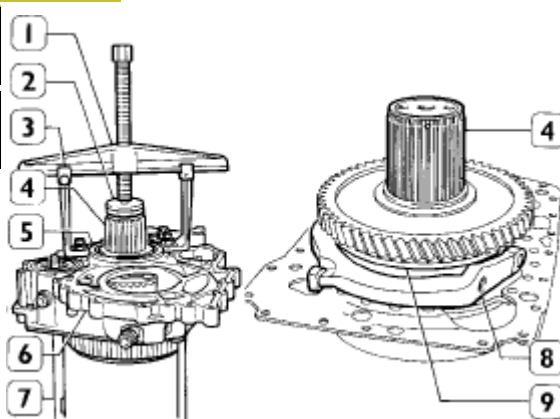


36804

Using the extractor composed of bridge 99341003(1), tie rods 99341018 (3) and block 99345058 (2) fitted onto the ERG box, as shown in the figure, extract the bearing (5) and the box (6) from the ERG shaft (4).

NOTE While extracting them, hold back the rod (7) to then take it out of the box (6) when it is freed from the fork (8).

Take the fork (8) with its blocks out of the sliding sleeve (9).

Figure 25

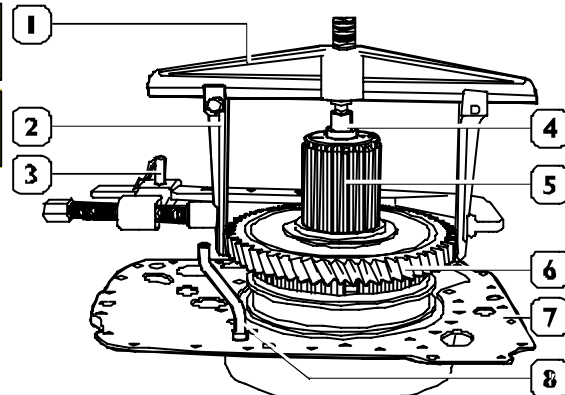


61216

Using the extractor composed of bridge 99341004 (1), brackets 99341012 (2), part 99345058 (4) and clamp 99341015 (3), extract the gear (6) from the ERG shaft (5).

Take off the plate (7) with the tube (8) for lubrication.


Figure 26

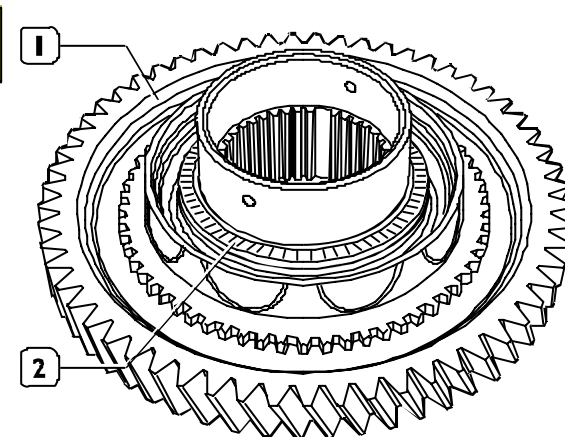

61217

Remove the fifth wheel bearing (2) from the gear (1).

Figure 27

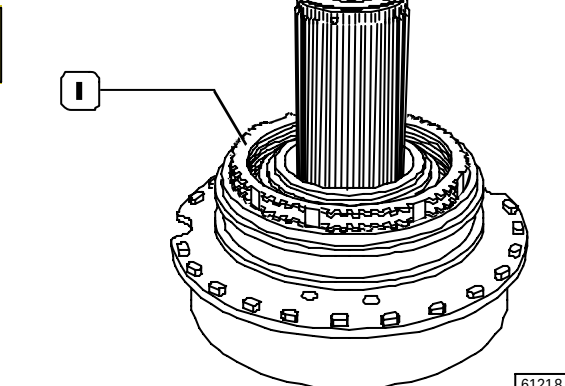


61218

Take the synchronizer ring (1) out of the sliding sleeve hub.

Aquila Trucks Centres


Figure 28

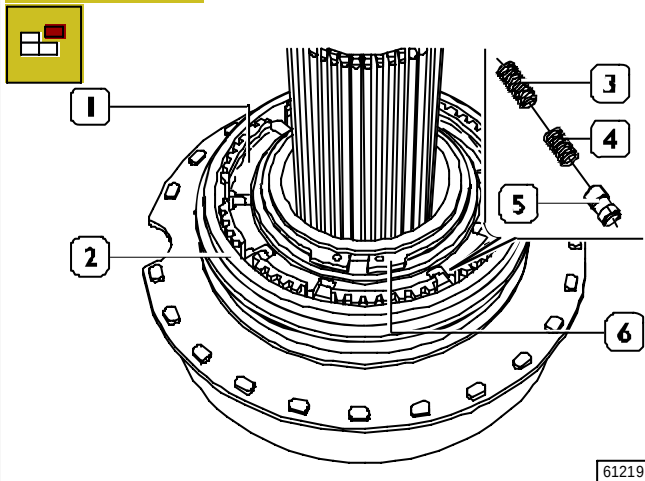

61219

Taking care over the blocks (5) and springs (3 and 4) coming out of the hub (1), extract the sliding sleeve (2) from the hub and remove the seal (6).


Figure 29

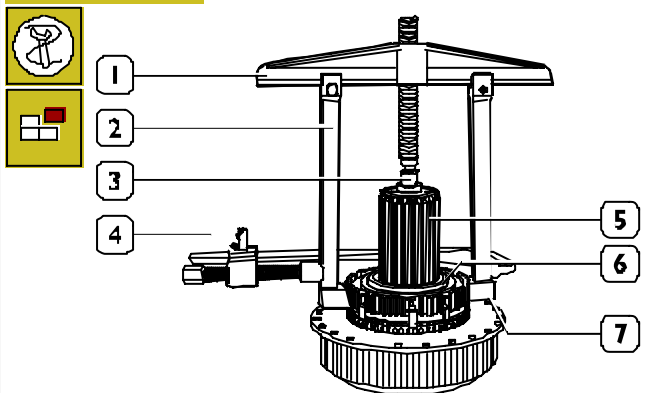

102795

Extract hub (6) for sliding sleeve from epicyclic reduction unit shaft (5) with extractor made up of bridge 99341003 (1), brackets 99341021 (2), counter-part 99341058 (3) and grips 99341025 (7) clamp 99341015 (4).

Figure 30

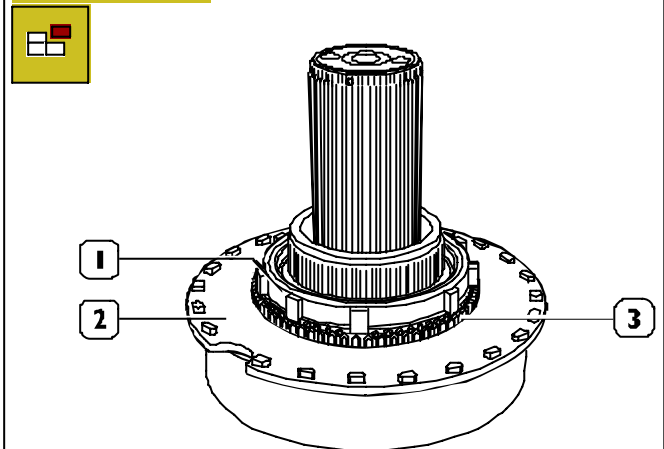


61220

Take off the synchronizer ring (1) and the coupling body (3) together with the plate (2).

Levering under the coupling body (3), extract it from the plate (2).

Figure 31

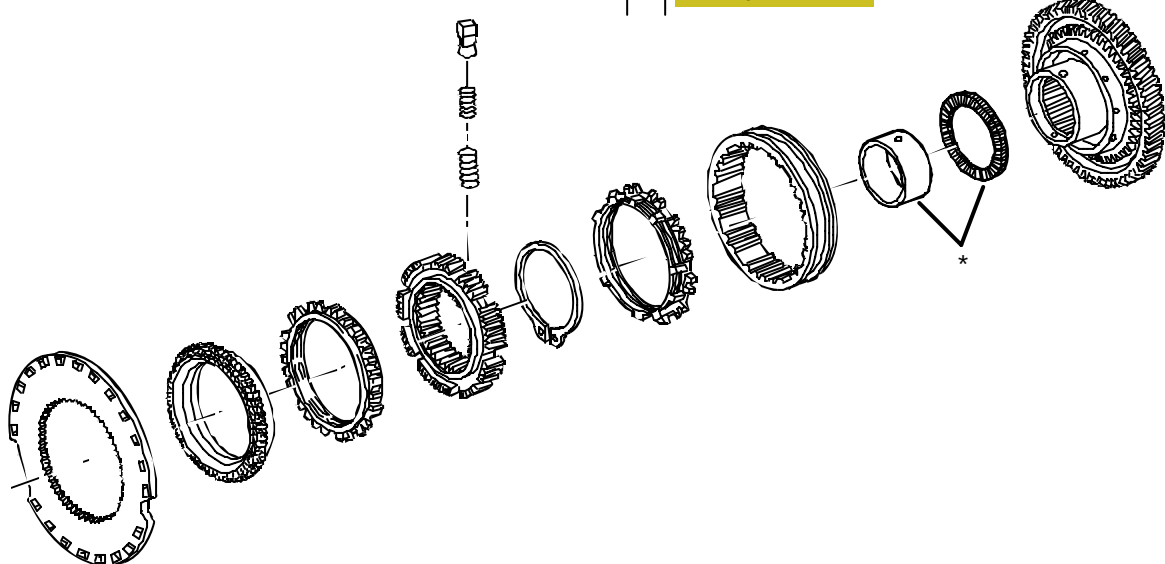


61221

COMPONENT PARTS OF THE EPICYCLIC REDUCTION GEAR UNIT SYNCHRONIZING DEVICE

Aquila Trucks Centres


Figure 32

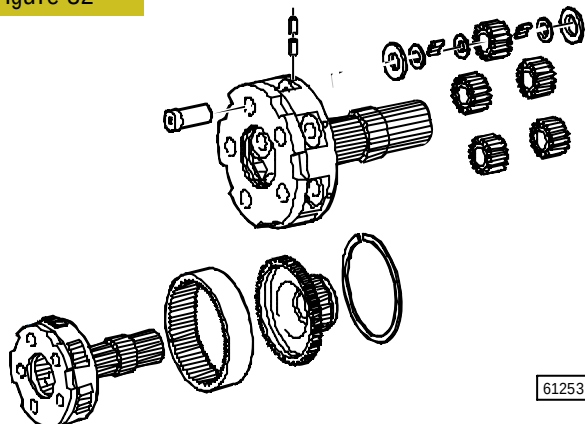

COMPONENT PARTS OF THE EPICYCLIC REDUCTION GEAR UNIT


Remove the epicyclic reduction gear unit as described for gearboxes with no Intarder.

Figure 34

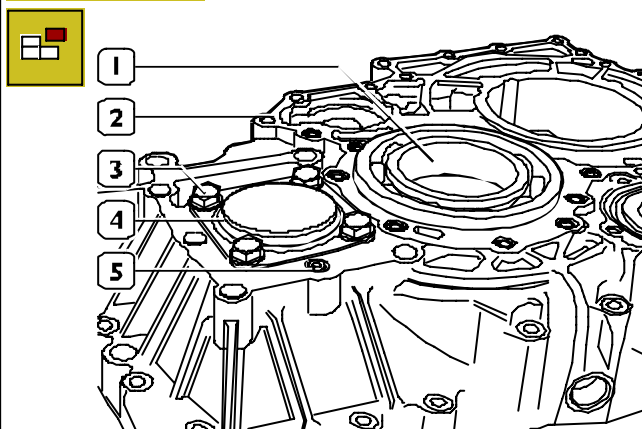

Remove the ball bearing (1) from the ERG box (2).
Unscrew the screws (3) and remove the cover (4).
Unscrew the screw (5).

Figure 33

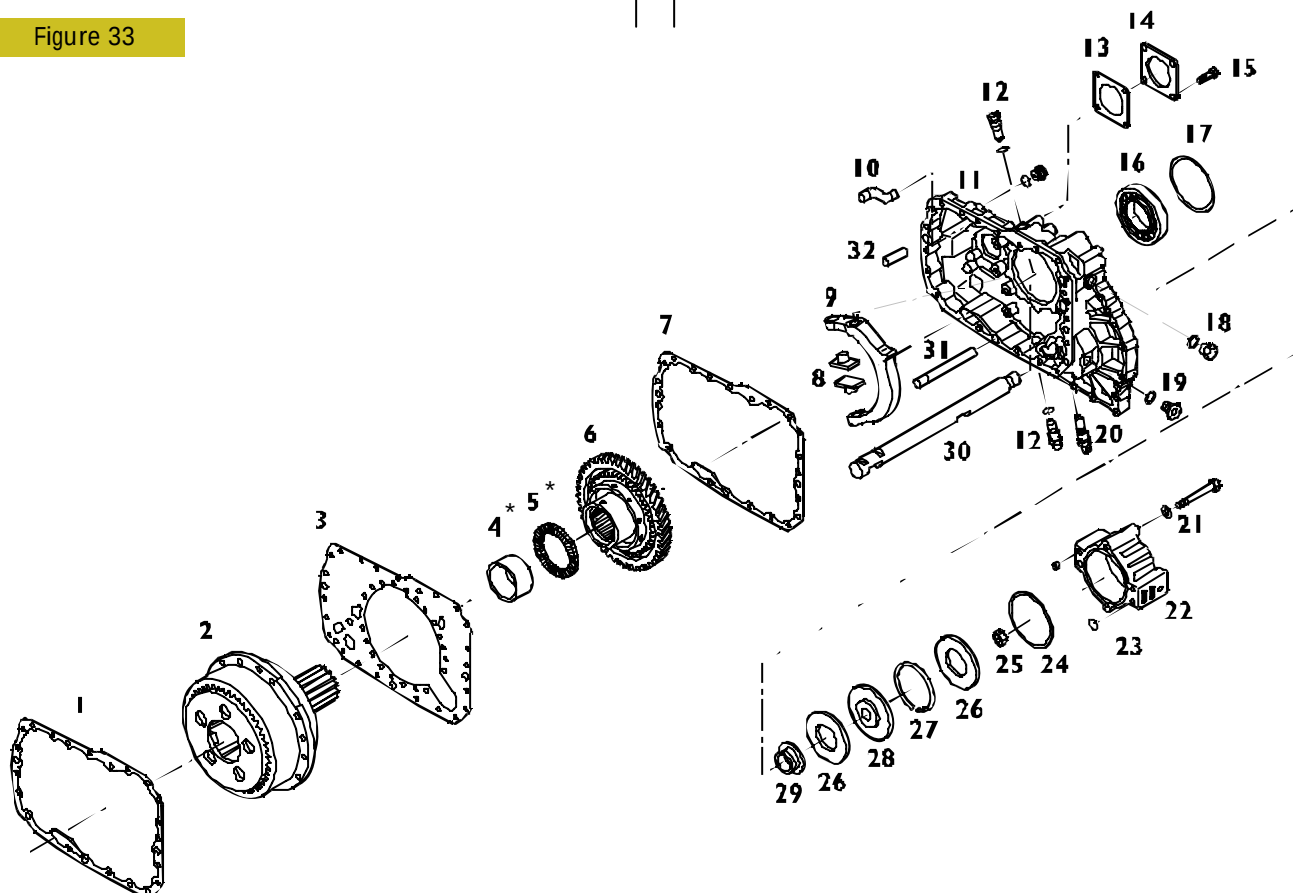


COMPONENT PARTS OF THE ERG CONTROL AND BOX

1. Gasket - 2. ERG - 3. Plate - 4. Bushing - 5. Fifth wheel bearing - 6. Gear - 7. Gasket - 8. Sliding blocks - 9. Fork - 10. Nozzle tube - 11. ERG box - 12. Pin for fork articulation with washer - 13. Gasket - 14. Cover - 15. Screw - 16. Ball bearing - 17. Adjustment ring - 18. Plug with seal - 19. Plug with seal - 20. Sensor - 21. Screw with washer - 22. Cylinder - 23. Seal - 24. Seal - 25. Nut - 26. Seal - 27. Spacer ring - 28. Piston - 29. Seal - 30. Rod - 31. Tube - 32. Pin.

Aquila Trucks Centres


Figure 35

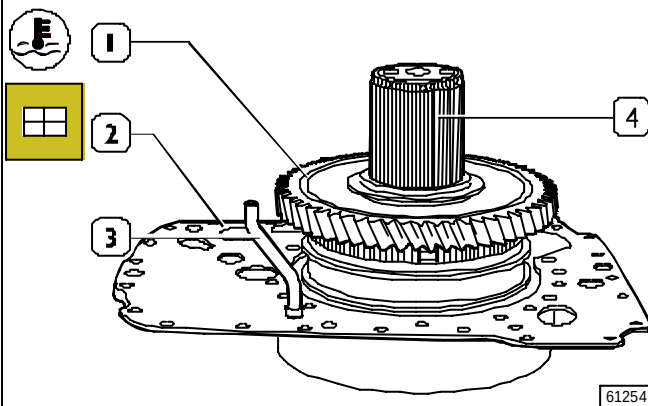

Position the plate (2) together with the tube (3) on the ERG (4).


NOTE Heat the gear (1) to a temperature of 160°C for no longer than 10 sec.
Fit the gear (1) on the ERG shaft (3).

Figure 36

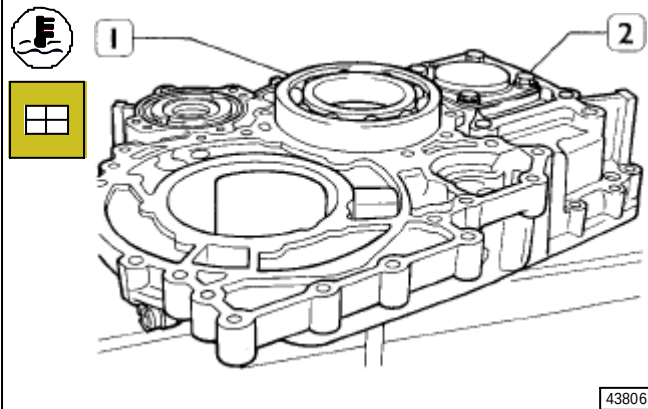


Heat the seat of the ball bearing (1) on the ERG rear box (2) to approx. 60°C and mount the ball bearing (1).

Figure 37

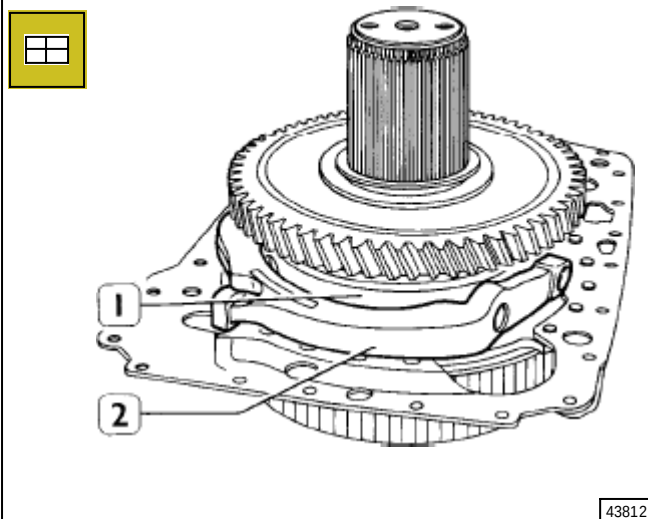

Set the fork (2) with its blocks on the sliding sleeve (1).

Figure 38

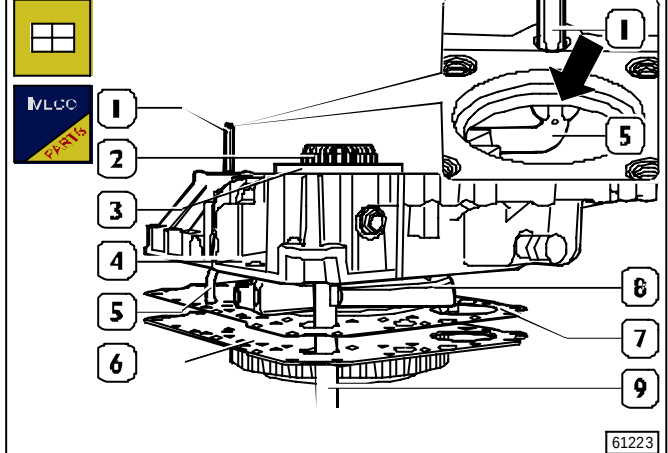

Place a new gasket (7) on the plate (6).

Partially fit the ball bearing (3) with the box (4) on the ERG shaft (2).


Insert the rod (9) into its seat in the box (4).

Position the fork (8) in the slot of the shaft (9) and keep it in this position until the assembly of the ball bearing (3) on the shaft (2) has been completed, heating the seat of the latter.

Check that the plate slots (6) coincide with those of the plate (2, Figure 35), otherwise, the epicyclic reduction unit (G.R.E.) rear box cannot be reattached.

NOTE When fitting the bearing (3), guide the tube (5) with a punch (1) so it goes into its seat (→) in the box (4).

Figure 39

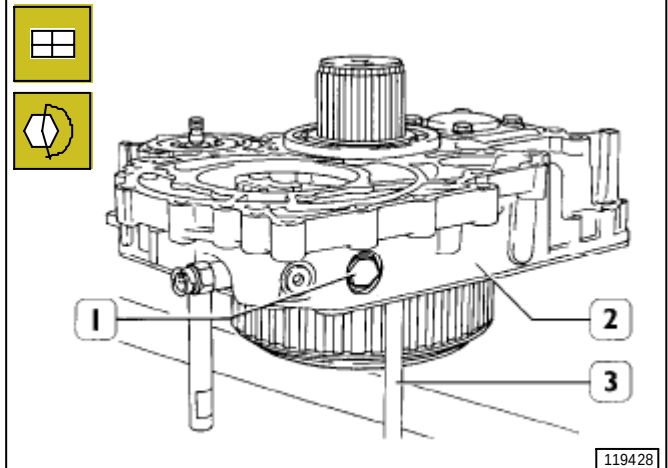


Constrain the fork (2, Figure 37) to the box using two joint pins (1), and tighten them to the prescribed torque.
Insert the intarder oil pump intake pipe (3) into the appropriate seat.

Aquila Trucks Centres

Refitting the epicyclic reduction gear unit (ERG) rear box

Figure 40

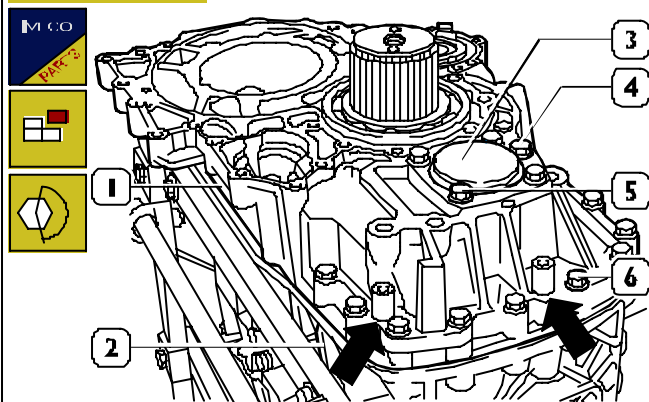

61224


Put a new gasket on the gearbox (2) and refit the ERG rear box (1).

Fit the two centring pins (→) and tighten the fixing screws (6) to the required torque.

Mount the cover (3) with a new gasket and tighten the screws (5) to the required torque.

Screw down the plug (4).

Figure 41

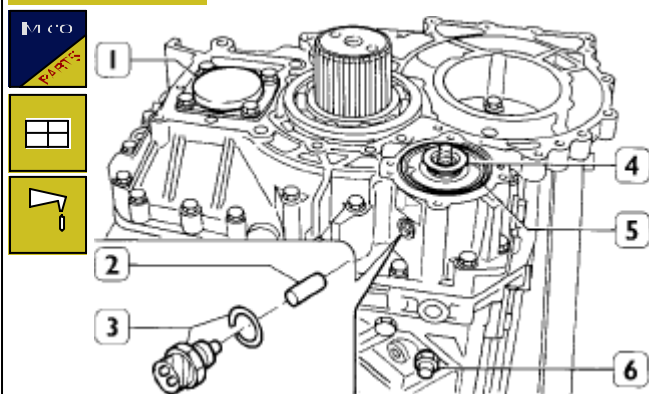


37353

Insert the push rod (2) into the gearbox and fit the switch (3) with the washer. Mount the retaining push rod 145N (6).

Lubricate the seal (5), gasket (4) and mount them on the box (1).

Figure 42

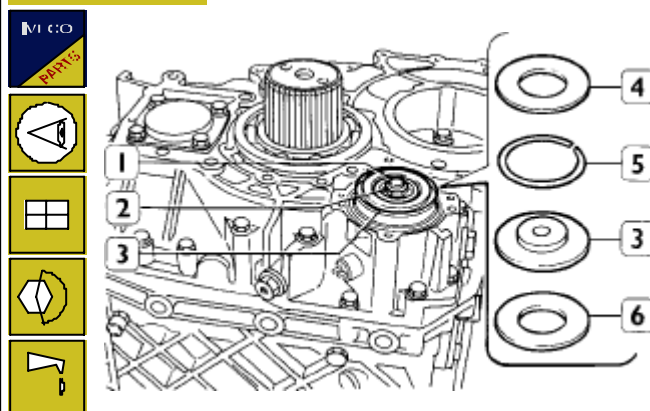


43815

Change the seals (4 and 6), spacer ring (5) of the piston (3) and lubricate them.

Fit the piston (3) on the rod (1) and tighten the nut (2) to the required torque.

Figure 43

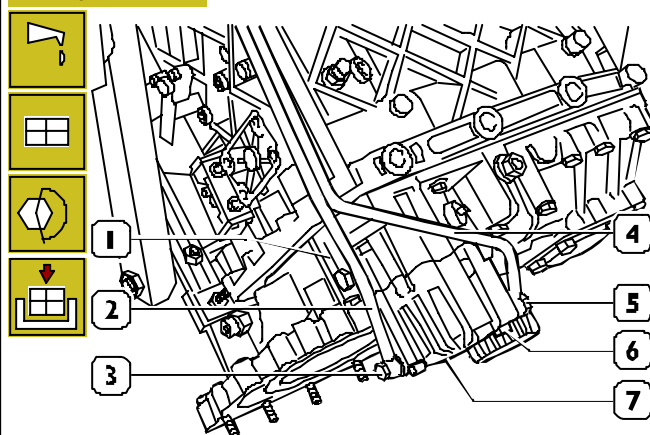

43802

Lubricate the inside of the cylinder (7), fit it on the box (1) and tighten the fixing screws (6) to the required torque.

Connect the pipes (2 and 4) to the cylinder (7), screwing down the fittings (3 and 5) with new washers and tightening them to the required torque.

Reconnect hydraulic decelerator as described in relating chapter and fill the unit with oil by prescribed quantity and quality.

Aquila Trucks Centres

**Gearbox
Euro Tronic 12 AS 1420 T.D.**

	Page
DESCRIPTION	43
LOCATION OF GEARBOX DESCRIPTION PLATE	43
MAIN DATA	45
TIGHTENING TORQUES	46
TOOLS	46/1
OVERHAULING THE GEARBOX	46/6
- Checks	46/6
- Preliminary works	46/6
CLUTCH ACTUATOR	46/6
- Clutch actuator removal	46/6
- Clutch actuator reassembly	46/7
GEARBOX ACTUATOR	46/7
- Gearbox actuator removal	46/7
- Gearbox actuator reassembly	46/8
REAR BOX	46/8
- Rear box removal	46/8
- Rear box disassembly	46/9
- Synchronizer disassembly	46/11
- Synchronizer assembly	46/11
SATELLITE HOLDER SHAFT	46/12
- Satellite holder shaft disassembly	46/13
- Satellite holder shaft assembly	46/14
- Rear box assembly	46/15
- Output cover assembly	46/15
- Output flange assembly	46/16
CLUTCH CASING	46/16
DISCONNECTING FORK	46/16

Aquila Trucks Centres

	Page
- Disassembly	46/16
- Assembly	46/16
- Disassembly of the front cover	46/16
- Disassembly of the oil pump	46/17
- Clutch casing removal	46/17
- Disassembly of the input shaft	46/18
- Shaft removal	46/18
- Disassembly of the main shaft	46/19
SPLITTER CONTROL FORK	46/21
- Disassembly/Assembly	46/21
GEAR CONTROL FORKS	46/21
- Disassembly	46/21
- Assembly	46/21
SECONDARY SHAFT	46/21
- Disassembly	46/21
- Assembly	46/22
- Assembly of the main shaft	46/22
- Assembly of the motion input shaft	46/23
- Rear box assembly	46/24
- Rear box disassembly	46/24
GEARBOX CASING	46/24
- Disassembly	46/24
- Assembly	46/25
- Shaft reassembly	46/25
- Clutch casing reassembly	46/26
- Adjustment of the axial clearance of bearings of the motion input shaft and of the secondary shaft .	46/27
- Adjustment of the axial clearance of the motion input shaft	46/28
- Adjustment of the secondary shaft axial clearance	46/29
- Assembly of the front cover	46/29

Aquila Trucks Centres

DESCRIPTION

The EuroTronic gearbox 12 AS 1420 T.D. is mechanical with electro-pneumatic control.

The driver can choose whether to program gear selection/engagement manually or automatically. The shafts and gears have helical toothing that reduces operating noise.

The main shaft gear coupling is obtained with sleeves with front toothing.

The splitter and epicyclic reduction gear unit engagement is synchronized.


The speeds are selected with finely staggered ratios and can be engaged in succession with the coupling of the epicyclic reduction gear unit "ERG" and the "Splitter" slow or fast speed unit.

On engaging the "ERG", the speeds of the main shaft are doubled. The ratios obtained in this way are further doubled with the engagement of the "Splitter". Each single ratio is thus divided into a fast or slow ratio.

T.D. = Truck Direct drive

LOCATION OF GEARBOX DESCRIPTION PLATE

Figure 1

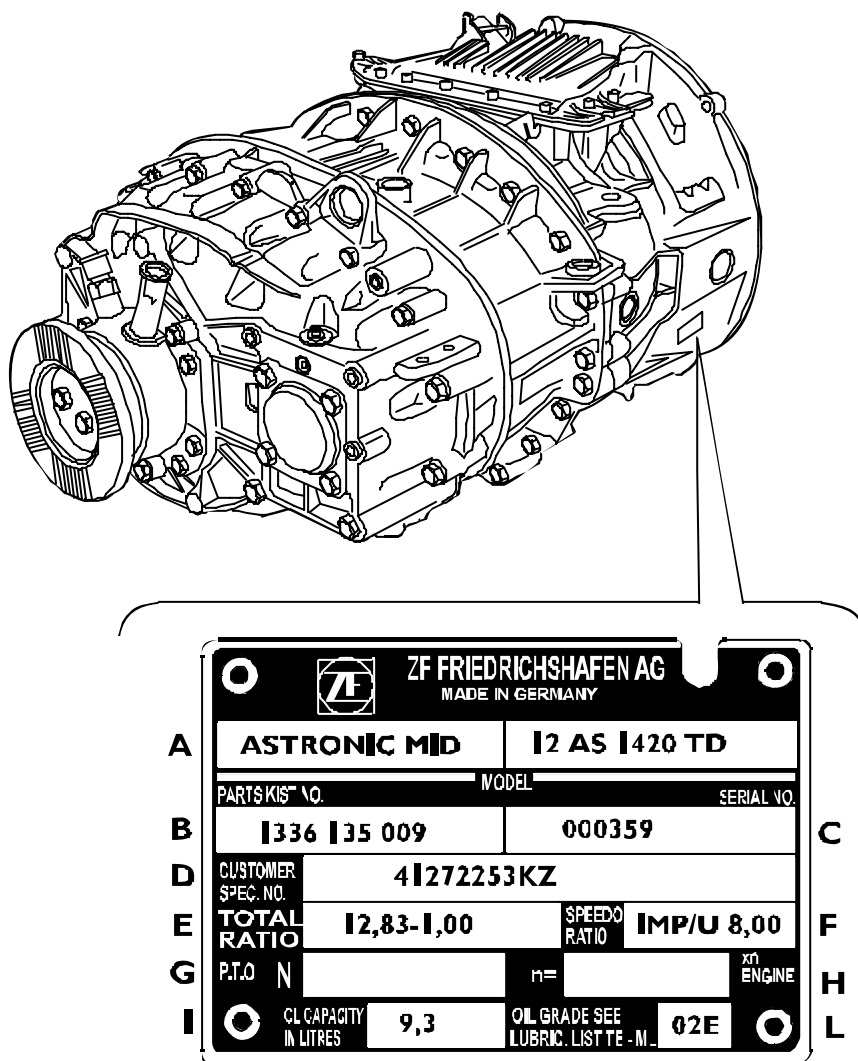

- A = Type of transmission
 B = ZF drawing no.
 C = Production sequence number
 D = Spare part IVECO drawing no.
 E = Transmission gear ratio


- F = Tachometer gear ratio
 G = Type of power take-off
 H = Power take-off gear ratio
 I = Replacement oil amount
 L = ZF lubricant list name

P.T.O. = Power take-off

112211

Aquila Trucks Centres

Figure 2



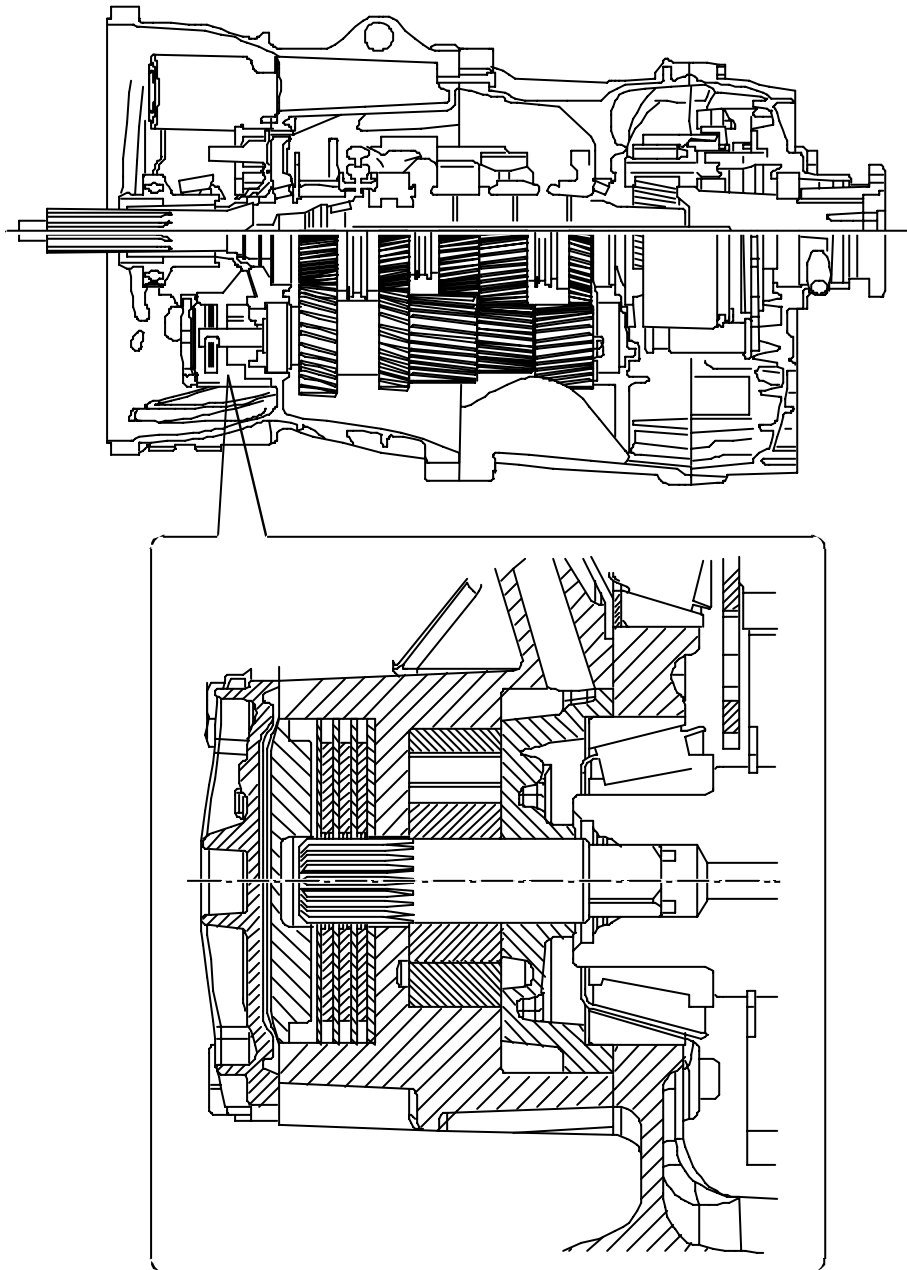


112212

LONGITUDINAL SECTION WITH INTEGRATED OVERRUN BRAKE AND OIL PUMP

Aquila Trucks Centres

 MAIN DATA

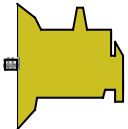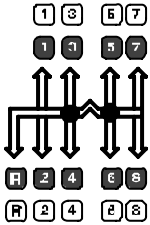	GEARBOXES		EuroTronic Automated 12 AS 1420 T.D.	
	Type		Mechanical	
	Torque activated	Nm	1400	
	Forward gears Reverse gears		12 2	
	Type of running control		electronically-operated semi-automatic	
	Rear power takeoff		optional	
	Gear engagement: E.R.U.* and splitter engagement		by front engagement sleeves free ring synchroniser	
	Gears		constantly engaged straight toothed	
	Gear ratios 1 st 2 nd 3 rd 4 th 5 th 6 th 7 th 8 th 9 th 10 th 11 th 12 th 1 st reverse gear 2 nd reverse gear		12.384 10.369 8.428 6.487 5.176 4.182 3.009 2.480 1.920 1.951 1.238 1.000 13.072 10.561	
	Type of oil		Tutela Truck Fe-Gear Tutela ZC 90	
	- 1 st filling	Litres kg	9.3 8.3	


* ERG = Epicyclic reduction gear unit

T.D. = Truck Direct Drive

Aquila Trucks Centres

TIGHTENING TORQUES






Figure 3

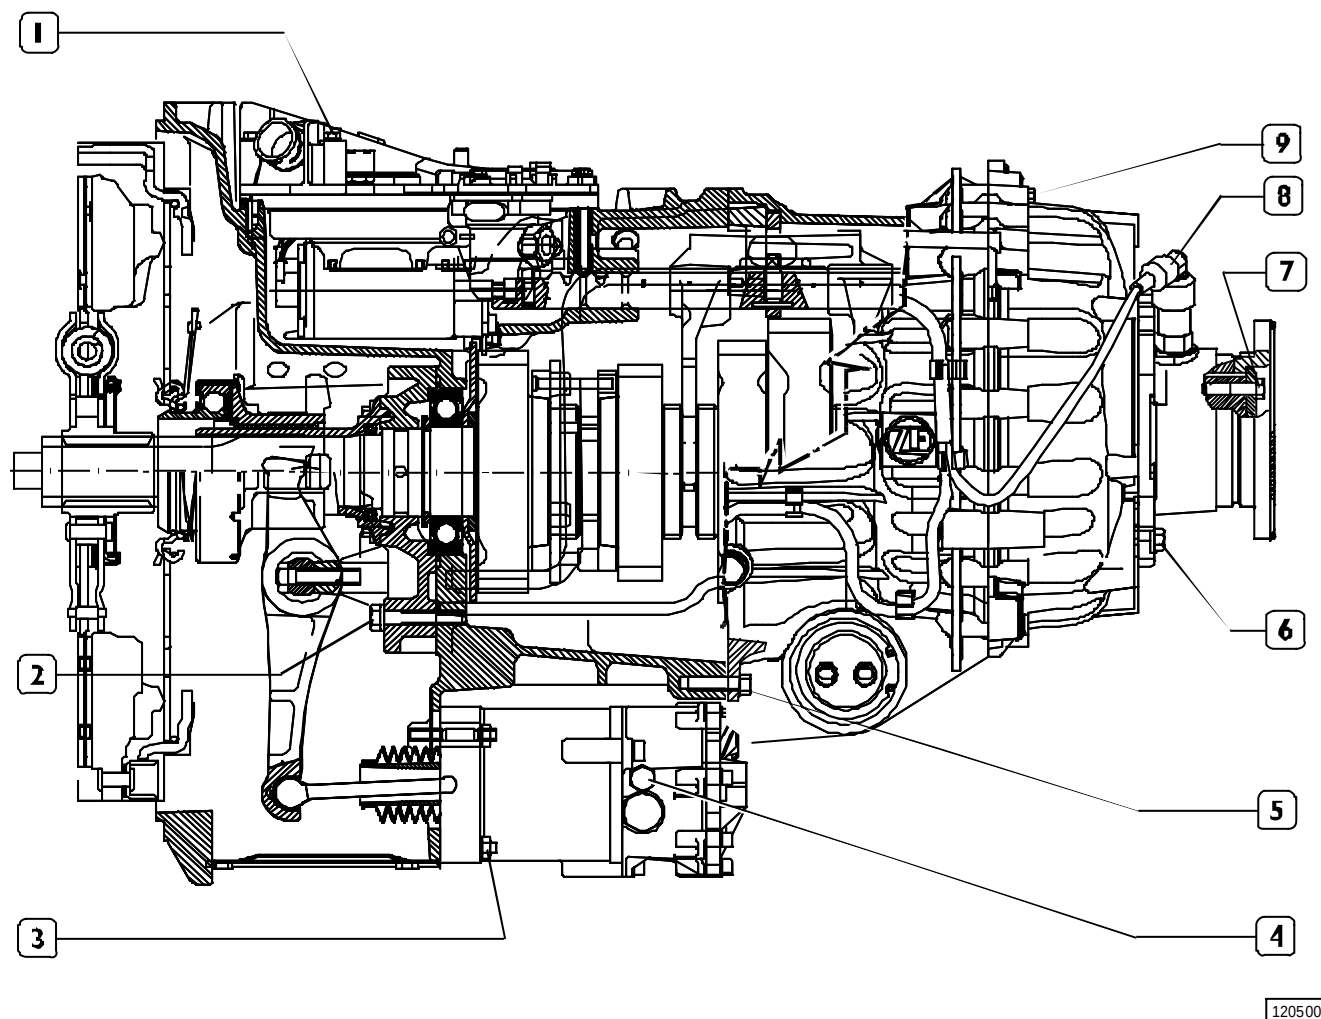





DESCRIPTION	TORQUE	
	Nm	kgm
1 Screws fixing gearbox actuator	23	2.3
2 Screws fixing cover	46	7.9
3 Screws fixing clutch actuator	23	2.3
4 Screw cap to discharge air from clutch actuator	22	2.2
5 Screws fixing rear box to middle box	50	4.6
6 Screws fixing rear cover	46	4.6
7 Screws fixing flange retaining plate	79	7.9
8 Speed sensor	45	4.5
9 Screws fixing middle box to front box	50	5
Screw plug M 10x1 on rear box	60 ± 6	1.5
Screw plug M 24x1 on rear box	60 ± 6	6 ± 0,6

Aquila Trucks Centres




TOOLS

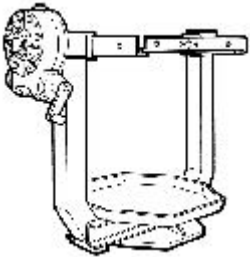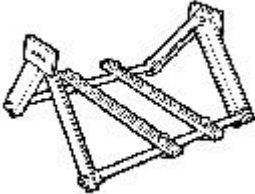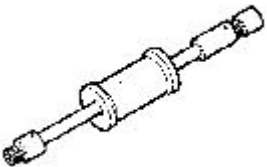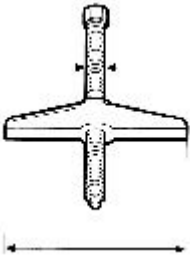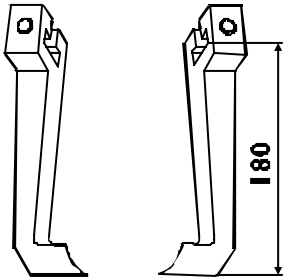TOOL NO.		DESCRIPTION
99305121		Hot air device
99322205		Rotary stand for overhauling assemblies
99322225		Mount to support assemblies (to fit onto stand 99322205)
99340205		Percussion extractor
99341003		Single-acting bridge
99341011		Pair of brackets







Aquila Trucks Centres

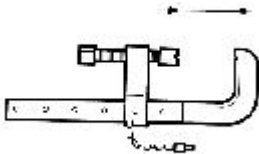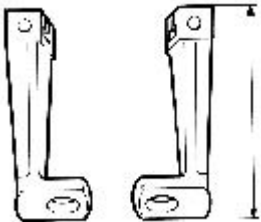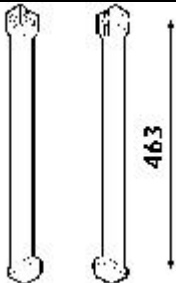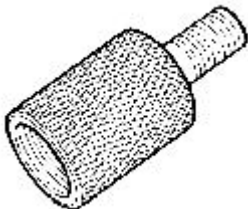TOOL NO.	DESCRIPTION	
99341013		Pair of brackets
99341015		Clamp
99341017		Pair of brackets with hole
99341021		Pair of tie rods with grips
99341025		Grips
99342143		Pin to extract gearbox front and rear centring pins (use with 99340205)


Aquila Trucks Centres

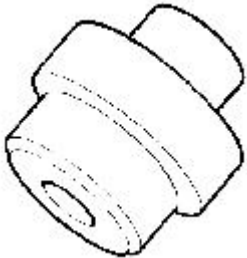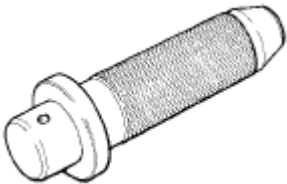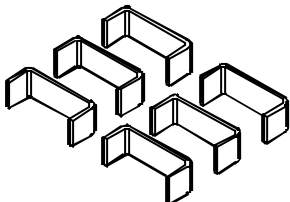TOOL NO.	DESCRIPTION	
99345054		Extractor reaction block
99348004		Universal puller for inner sides from 5 to 70 mm
99366811		Set of M10 eyebolts (3) to remove and refit gearboxes
99370006		Grip for interchangeable drifts
99370007		Grip for interchangeable drifts
99370172		Tools (6) to mount gearbox epicyclic reduction gear train synchronizer rings

Aquila Trucks Centres

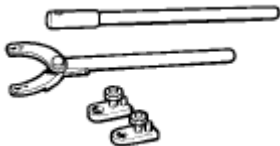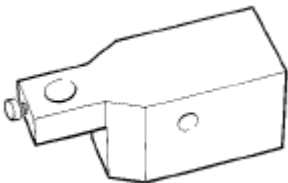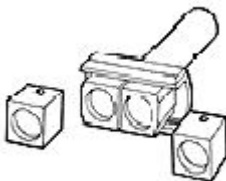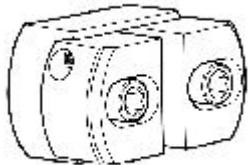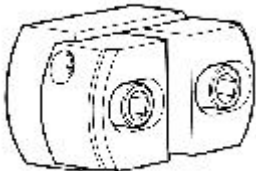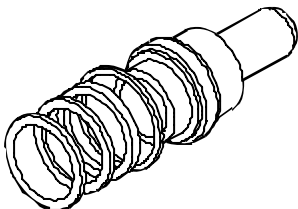TOOL NO.	DESCRIPTION	
99370317		Reaction lever with extension to fasten drive output flange
99370415		Dial gauge base to adjust transmission shaft bearings (use with 99395604)
99370465		Tool to notch safety plates
99374092		Drift to mount outer races of bearings (69 - 91) (use with 99370007)
99374093		Drift to mount external bearing races ($\varnothing$ 91 ÷ 134 mm) (use with 99370007)
99374221		Driver to mount seals on back cover

Aquila Trucks Centres

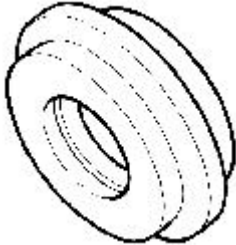TOOL NO.	DESCRIPTION	
99374336		Driver to fit seals on the front cover of the gearbox (use with 99370006)
99395604		Dial gauge (0 - 10 mm)

Aquila Trucks Centres

530210 OVERHAULING THE GEARBOX

Before overhauling, wash the assembly accurately

The specific and/or generic equipment has to be used in the way it is designed for.

To make assembly easier, put away the disassembled components in the provided tray according to their disassembly order.

During assembly, the following components shall be always replaced with new ones: gaskets, sealing rings, plungers, safety plates and springs. Nuts and screws shall be tightened according to the preset torque and their threading shall be dry and degreased.

As regards lubricant and detergent disposal, see the specific standards.



During the overhaul, always use protective gloves to handle heated components.

Checks

Gears, synchronizing rings, coupling bodies and sliding sleeves for coupling shall not show failures or excessive wear of teeth.

The main shaft shall not have any notch, above all on the sliding surface of gear coupling and rotating sliding sleeves.

Pins of the reverse counter gear shall have a smooth and groove-free surface.

Gearboxes shall not have cracks and bearing seats shall not be damaged or worn out in order to prevent bearing outer rings from rotating in their seats.

Make sure that shoulder spacers are not worn out or damaged.

The gear coupling forks shall not show cracks and the related control rods have to slide freely, but without a significant clearance, in the guide seats.


Make sure that control fork shoes are perfectly efficient.

Make sure that lubrication holes, grooves and pipes are not clogged by grease or foreign matters.

Make sure that bearings are not worn out, damaged or overheated.

Preliminary works

Figure 4

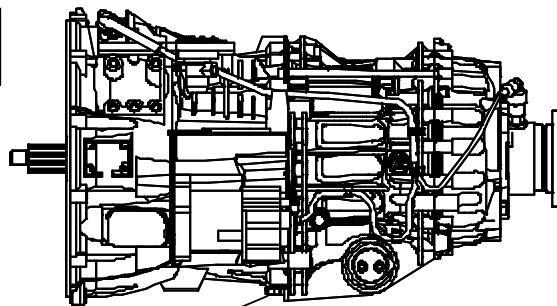

I

120464

Unscrew the plug (1) and drain oil into a proper container.

CLUTCH ACTUATOR**Clutch actuator removal**

Figure 5



I

2

7

6

3

5

120465

Cut off connections of the electric wiring from the gearbox actuator (1) and from the output revs sensor (2).

Loosen the screws (4) before removing the hexagon nuts, complete with washers. Then remove the clutch actuator (3), complete with hexagon-head screws.

Remove the protective cover (5).


Remove the spherical push rod (6) from the disconnecting fork (7).

NOTE The adjustment of the push rod (6) is described in the clutch section of this manual

Aquila Trucks Centres

Clutch actuator reassembly

Figure 6

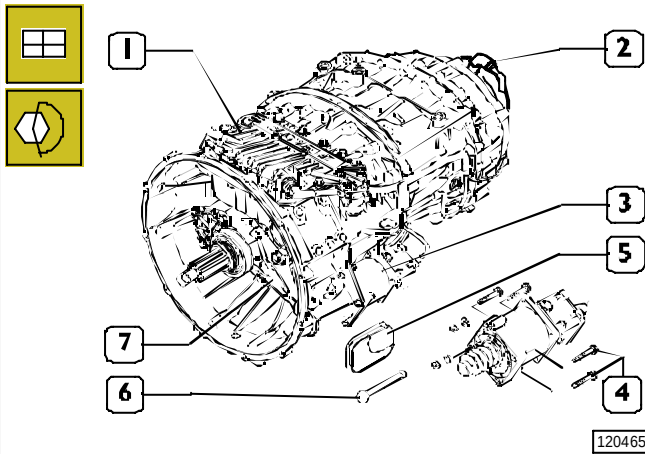

Assemble the clutch actuator (3) onto the gearbox. Make sure that connections are in the correct position. Insert the screws into the (4) actuator and tighten the four hexagon nuts, complete with washers, according to the set torque (23 Nm).

Loosen the screw on the actuator and let the piston protrude. During this operation, check the correct housing of the push rod (6) in the disconnecting fork (7). Tighten the screw according to the set torque (22 Nm).

Assemble the cover (5).

Connect the electric wiring to the clutch actuator (3), to the gearbox actuator (1) and to the output revs sensor (2).



Do not bend the cable and make sure that it is not too taut.


Avoid any friction point.

Make sure that connectors are inserted correctly.

GEARBOX ACTUATOR

Gearbox actuator removal

Figure 7

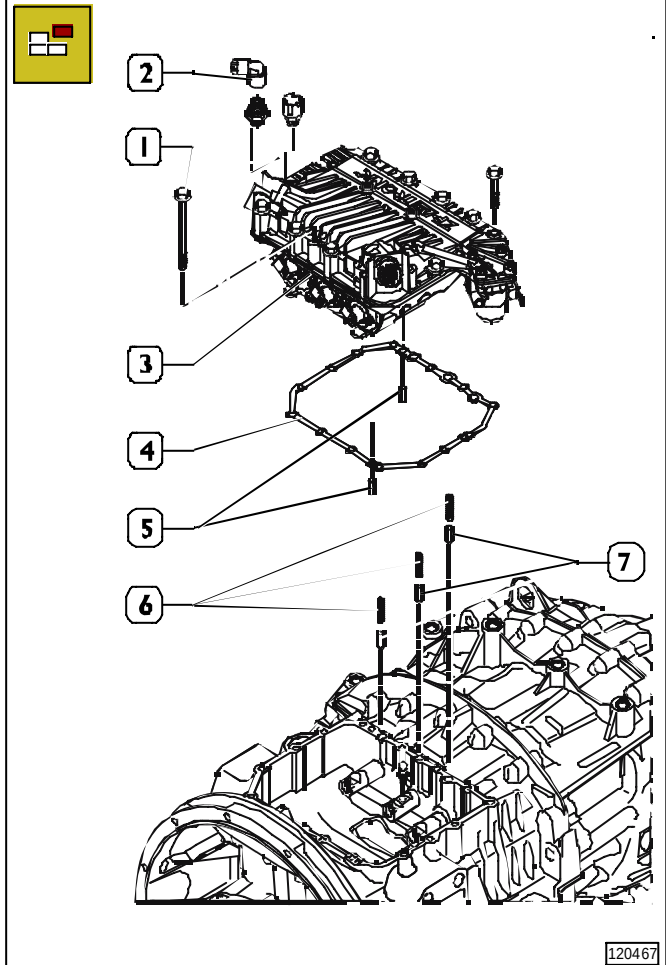

Remove the screws (1) and cut out the actuator (3) and the related gasket. (4)

Remove the compression springs (6) and the stop pins (7). Replace the two cylindrical pins (5), if damaged.


NOTE The electronic control unit is built-in in the actuator. These components cannot be overhauled.

Make sure that the oil vapor breather (2) is not clogged, otherwise clean it.

Aquila Trucks Centres

Gearbox actuator reassembly

Figure 8

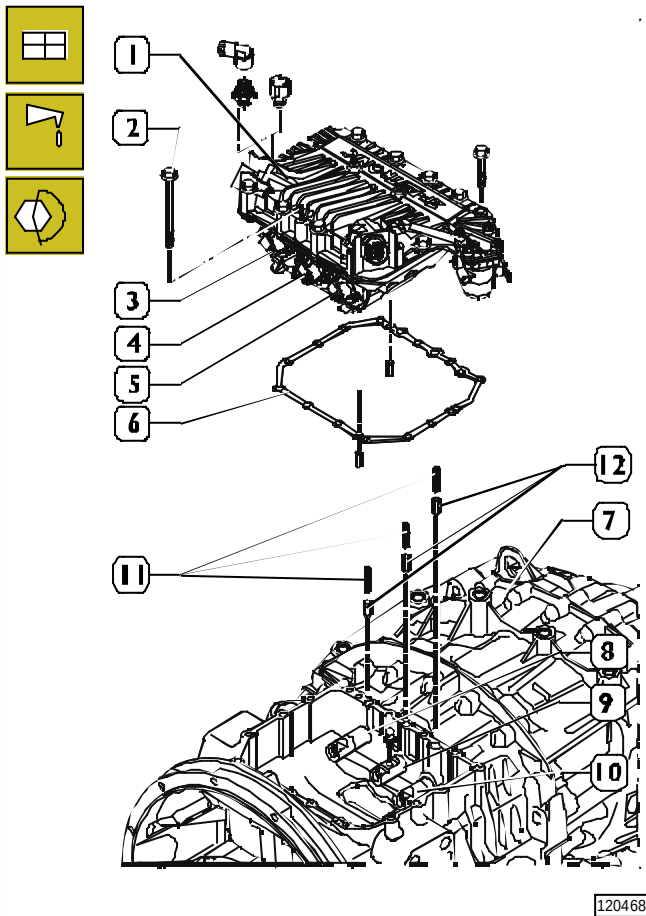

Position a new gasket on the clutch casing (4). Lubricate the solenoid valve stems (3-4-5) with silicone grease and set them to neutral position. Position the rods (8-9-10) in neutral position. Insert the stop pins (12) and the compression springs (11).

NOTE Compression springs (11) shall have the same length (abt. 50 mm).


Assemble the actuator (1) onto the front box (7), making sure that the ends of the solenoid valve stems are exactly positioned in the rod seats (8-9-10). Tighten the fastening screws (2) according to the set torque (23 Nm).

REAR BOX

Rear box removal

NOTE Before cutting-out the rear box, disassemble the gearbox actuator and the idle switch, as described in the previous paragraphs.

Figure 9

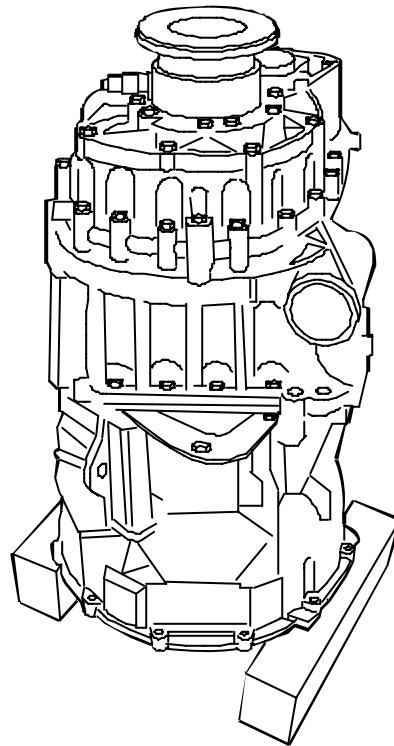


120469

Put the gearbox onto two square pieces of wood, from the friction housing side.



The gearbox has not to lay on the tang of the motion input shaft.

Figure 10

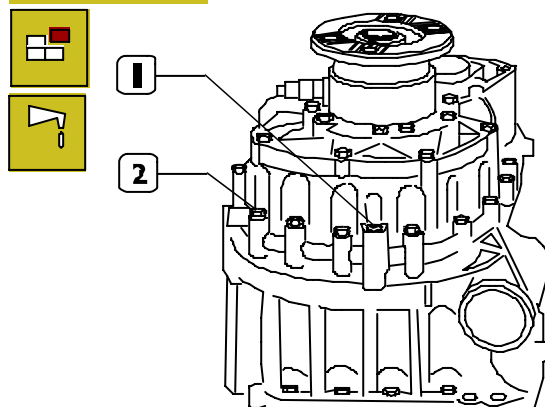


120470

With extractor 99340205 and pin 99342143 remove the centering pins (1). Remove the hexagon-head screws (2) of the rear box.

Aquila Trucks Centres


Figure 11

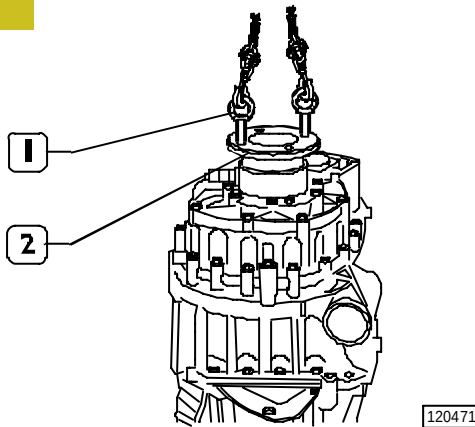

120471

Fasten the two eyebolts 99366811 (1) to the output flange (2).

Figure 12

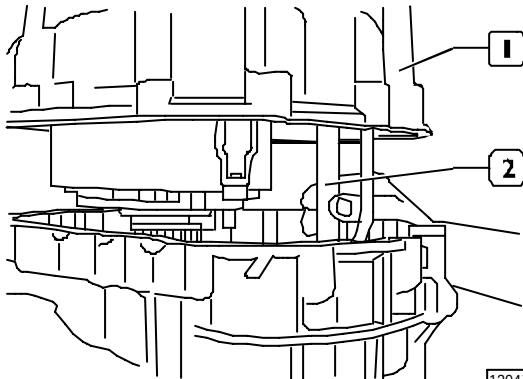

120472


By means of special ropes and lift, remove carefully the rear box (1), completed with the epicyclical reduction gear assembly (GRE).
Hold the control rod (2).



The control rod (2) is not fastened to the control arm. If not held, it might fall.

Remove the control rod (2) from the control arm.

Figure 13


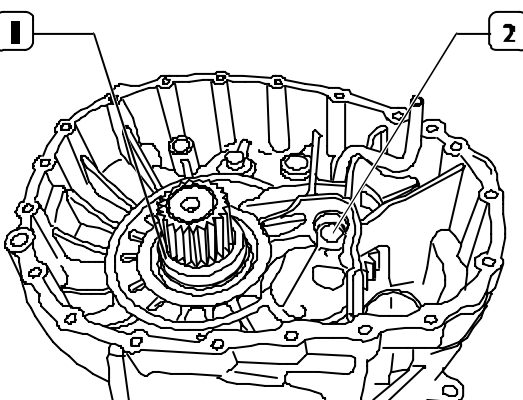


120473

Remove the thrust washer (1).
Remove the magnet (2) and clean it.

Rear box disassembly

Figure 14

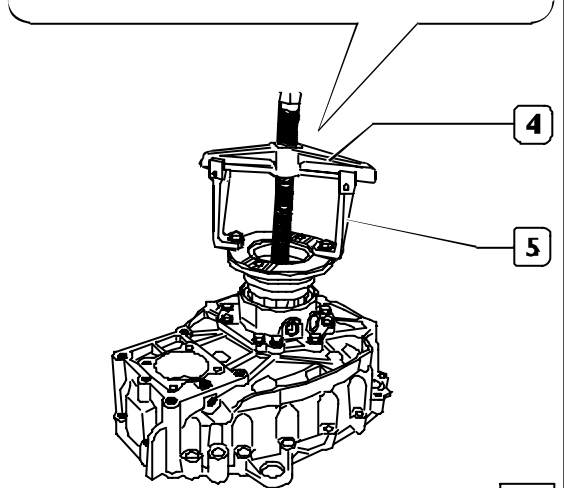
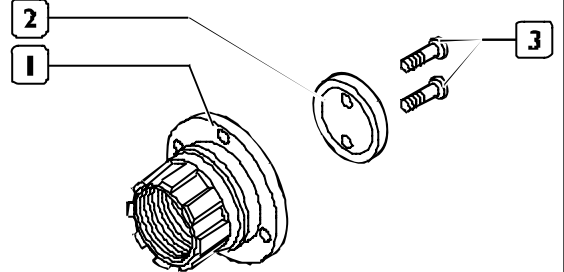


120474

Remove the screws (3), the disc (2) and the flange (1) from the satellite holder shaft.

If removal is difficult, use the bridge 99341003 (4) and the brackets 99341017 (5), which are so applied as in the following figure.

Figure 15

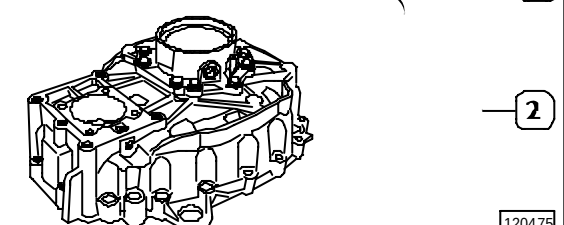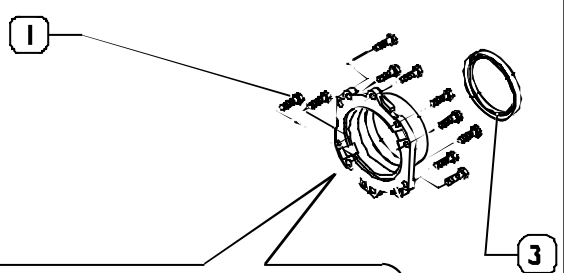


120475

Remove the screws (1) and disconnect the output cover (2).
Remove the radial sealing ring (3) by means of a proper tool, without damaging the output cover.

Aquila Trucks Centres


Figure 16

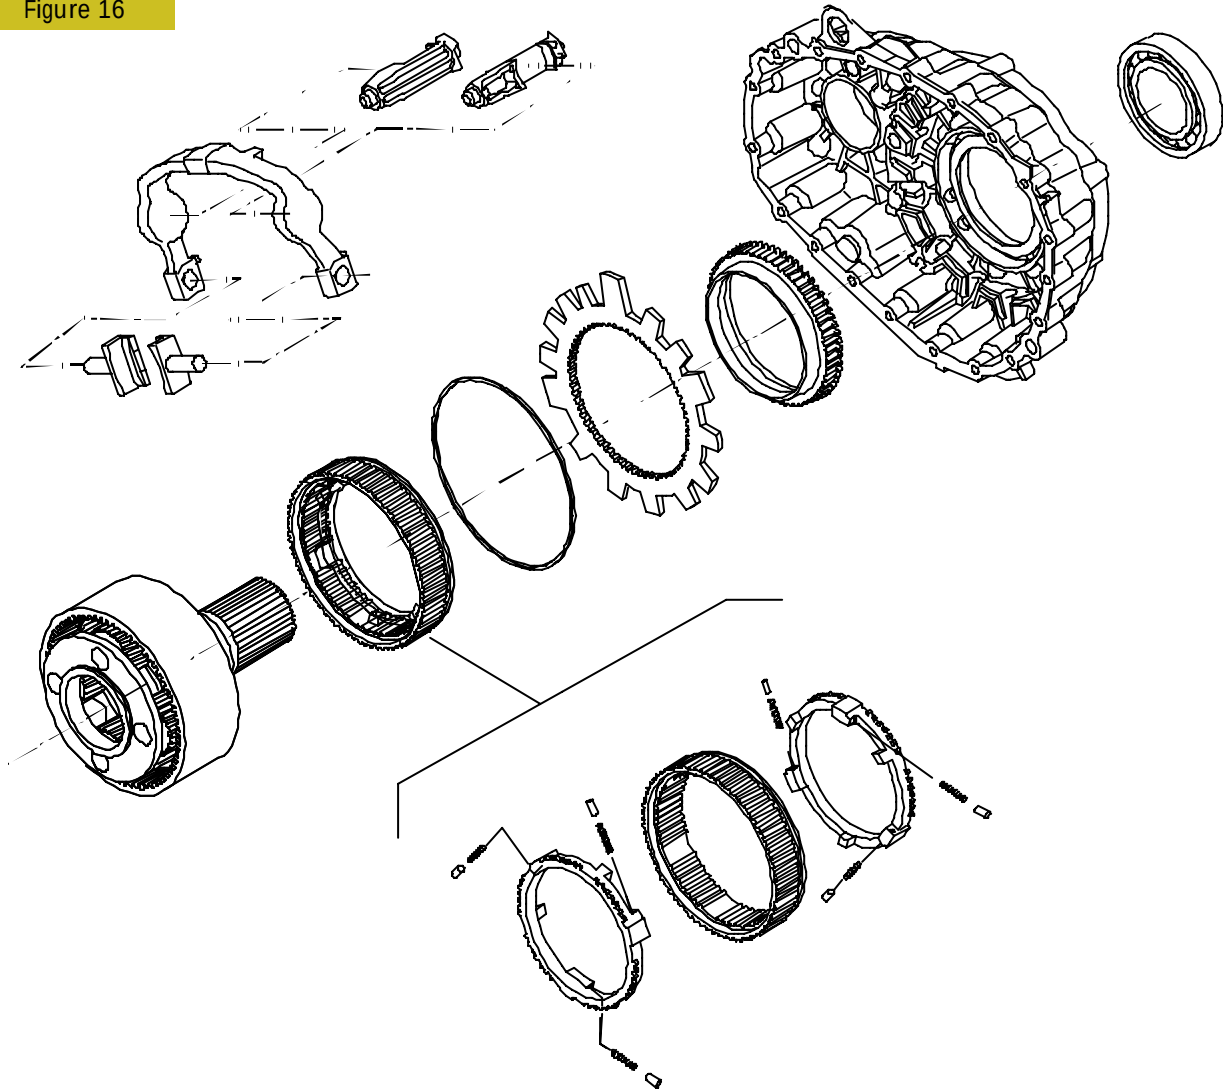

120476

COMPONENT PARTS OF THE REAR BOX


Figure 17

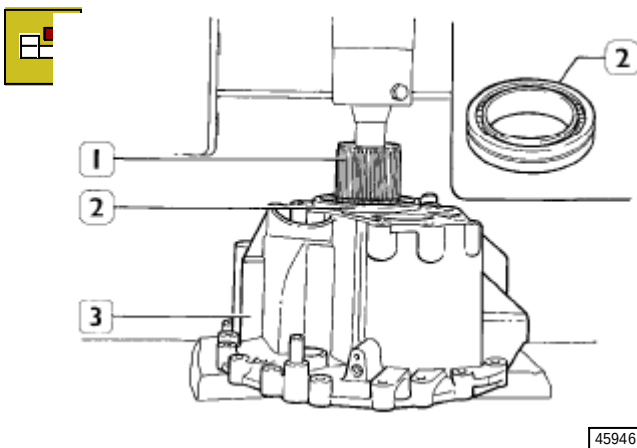

45946

With a press, remove the satellite holder shaft (1) from the supporting roll bearing (2). Turn the rear box (3) upside down.

Figure 18

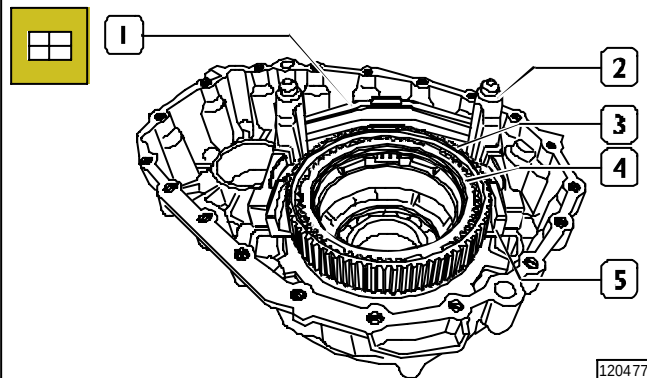

120477


Push downwards the sliding sleeve (3) and the synchronizing ring (4) (to idle position).

NOTE During this operation, pawls and compression springs of the synchronizer might come out.

Aquila Trucks Centres


Disassemble supports (2) from the box.
Remove the shoes (5) from the sliding sleeve (3).
Remove the control arm (1) and the related supports.
Remove the shoes (5) from the control arm (1).

Figure 19

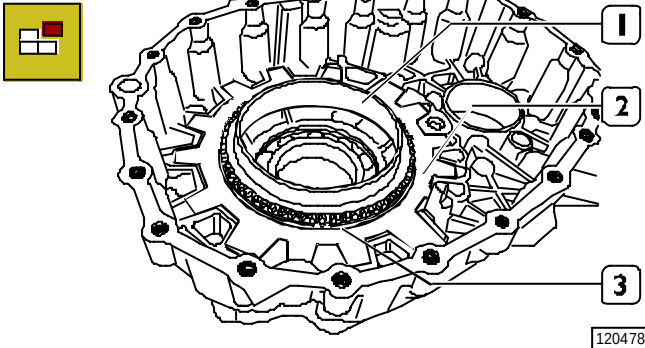

Remove the disc clutch (2) and the coupling hub (1) from the box.
Disassemble the safety ring (3), which is installed between the disc clutch (1) and the coupling hub (2).


Figure 20

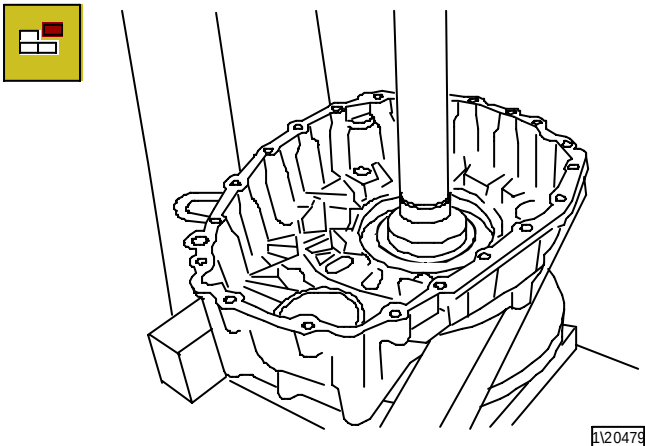

Under press, disassemble roll bearing from the rear box.

Synchronizer disassembly

Figure 21

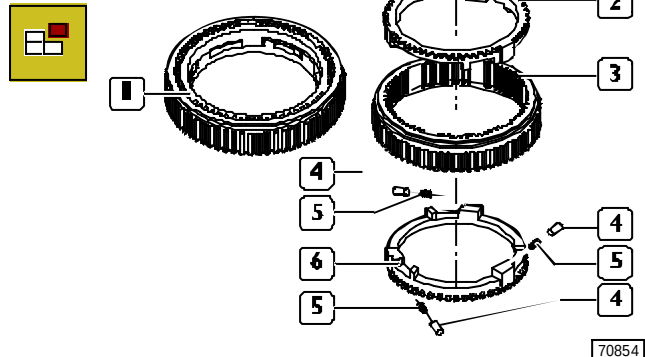


1. Synchronizer assembly - 2. Synchronizer ring - 3. Sliding sleeve - 4. Pawl - 5. Spring - 6. Synchronizing ring

Put a cloth onto the synchronizer assembly (1) so that, during its disassembly, springs (5) and pawls (4) are held while coming out from their seats.


Synchronizer assembly

Figure 22

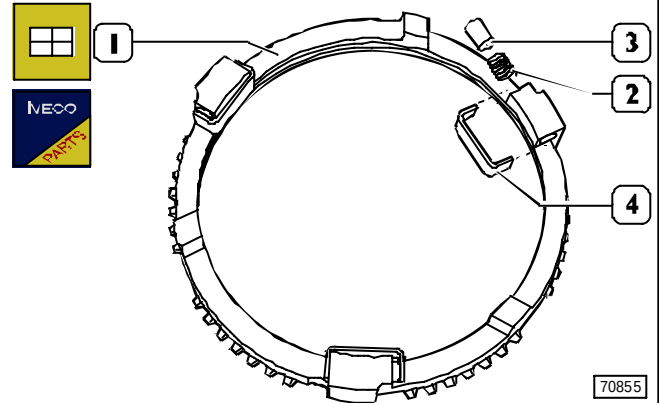

Insert springs (2) and pawls (3) into the synchronizing ring seats (1) and fasten them with tools 99370172 (4).

Figure 23

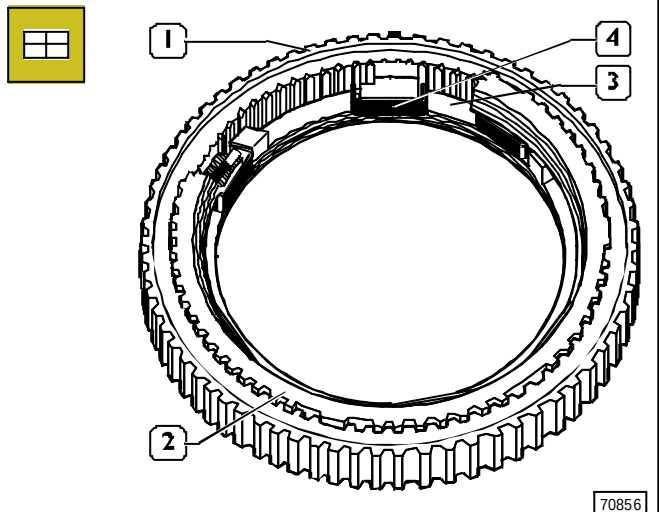


Position the synchronizing ring (2) onto the synchronizing ring (3) so that they can be assembled onto the sliding sleeve (1). Assemble the synchronizer assembly (1) onto the coupling body with the annular groove (→) facing downwards.

NOTE Remove the tools 99370172 (4) only when explicitly required by the assembly procedures in the following sections.

Aquila Trucks Centres

SATELLITE HOLDER SHAFT

Figure 24

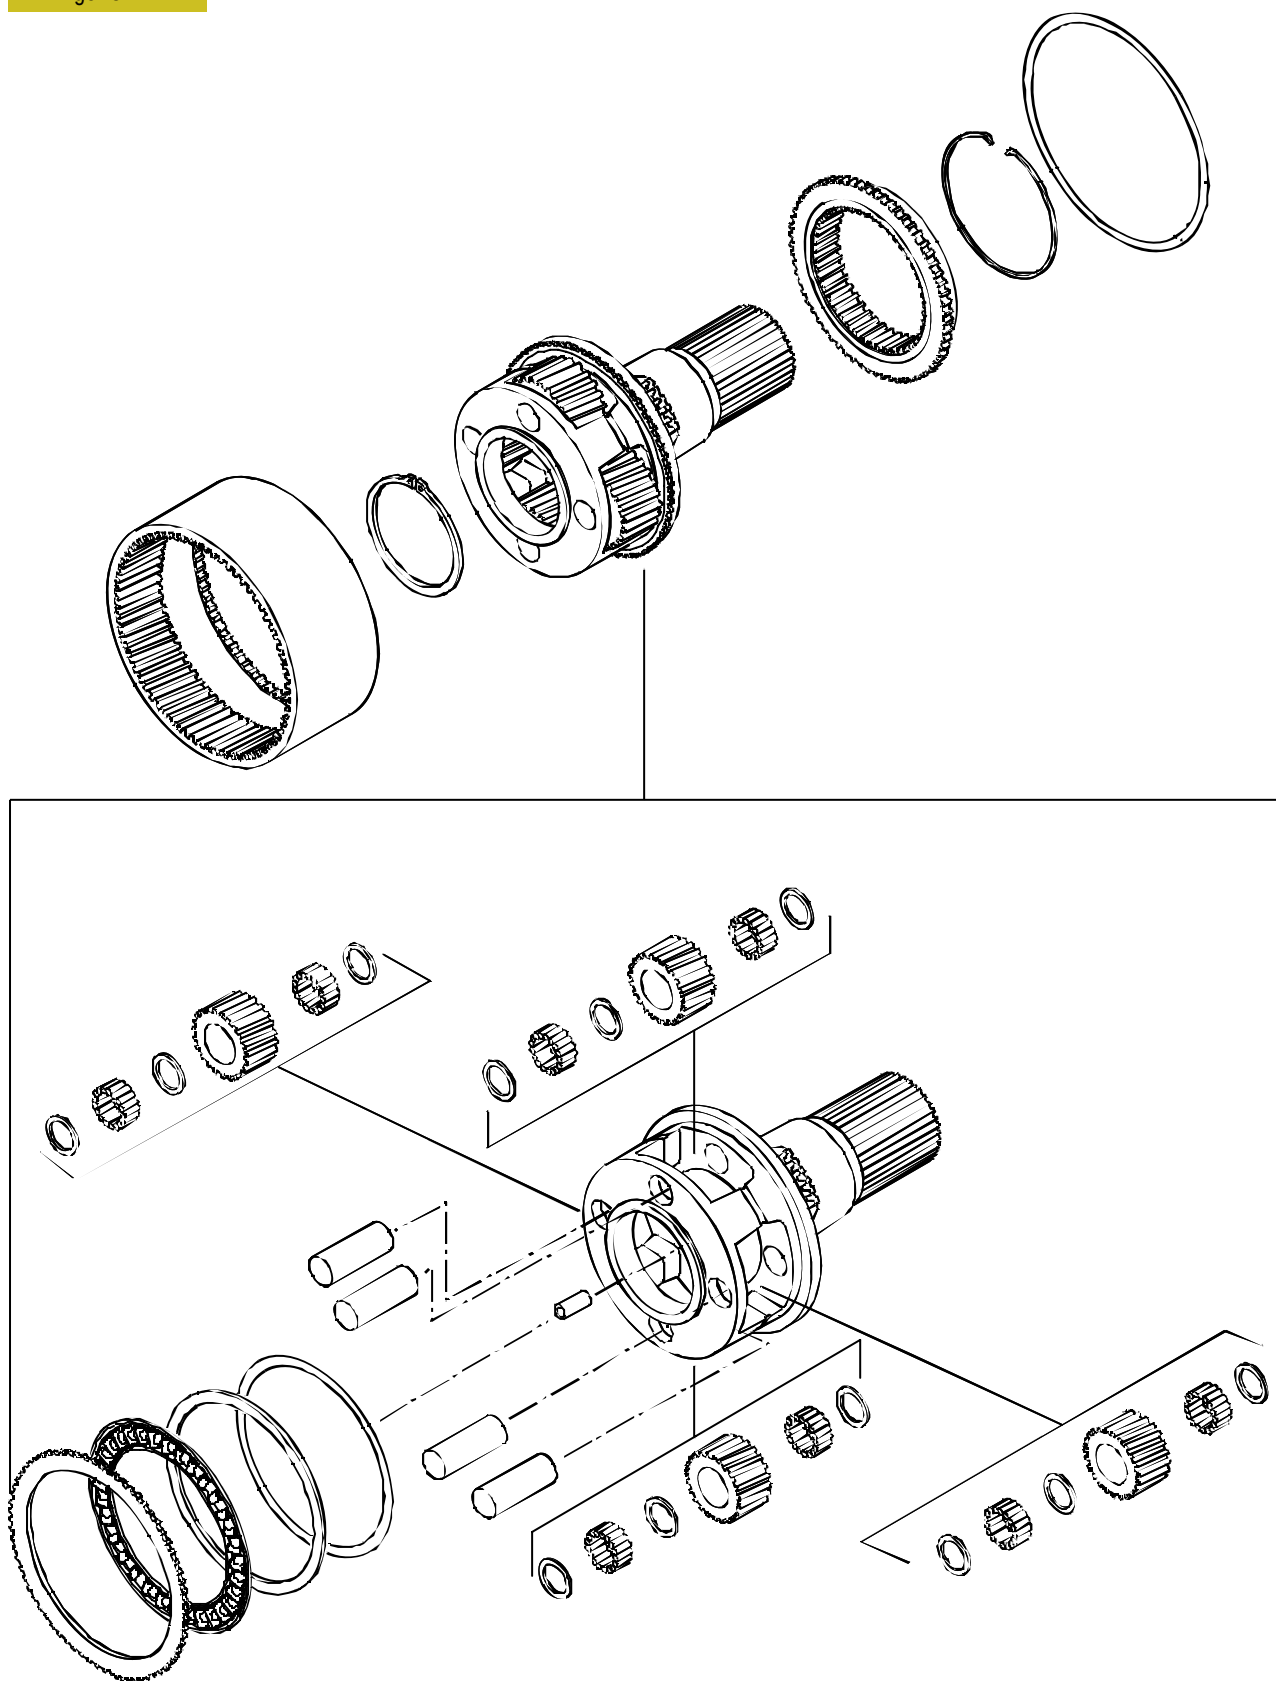


120480

MAIN COMPONENTS OF THE SATELLITE HOLDER SHAFT

Aquila Trucks Centres

Satellite holder shaft disassembly

Figure 25

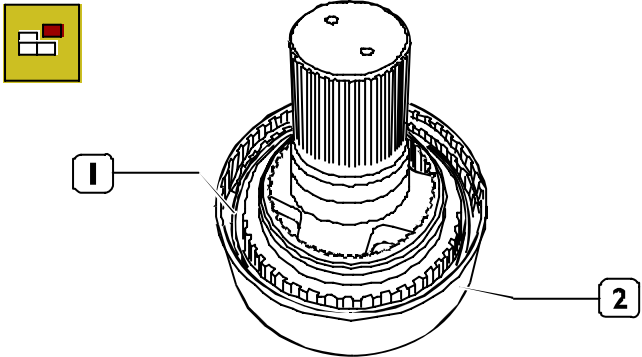


120481

Remove the safety ring (1), for example by means of two small screwdrivers and remove the crown (2) as well.



When disconnected, the crown (2) might fall.


Figure 26

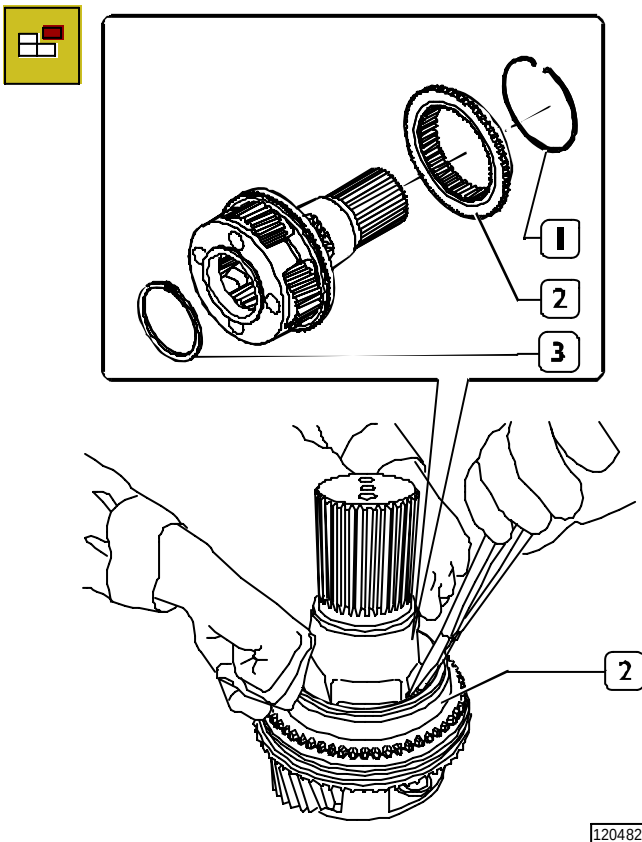

120482

Tighten the safety ring (1) with pliers. Remove the coupling hub (2) by lifting it from inside, as shown in the figure. Remove the safety ring (3).

Figure 27

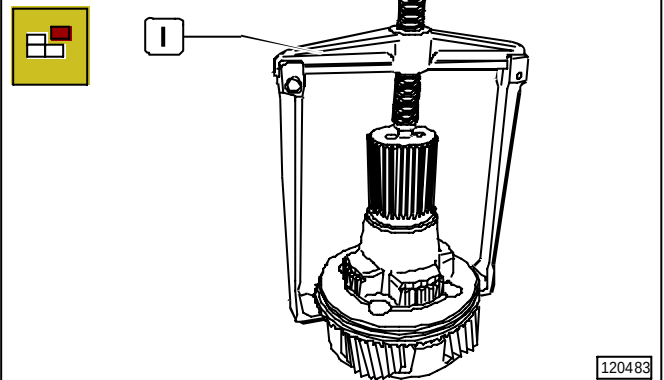


120483

Pre-tighten the shoulder ring (4, Figure 29), the roll thrust bearing (3, Figure 29) and the Belleville spring (2, Figure 29) in two 180° shifted points.

Use the most suitable locking device (1) (an example is shown in the figure).

NOTE The locking is used to pre-load the Belleville spring and make the satellite gear disassembly easier (1, Figure 28).

Figure 28

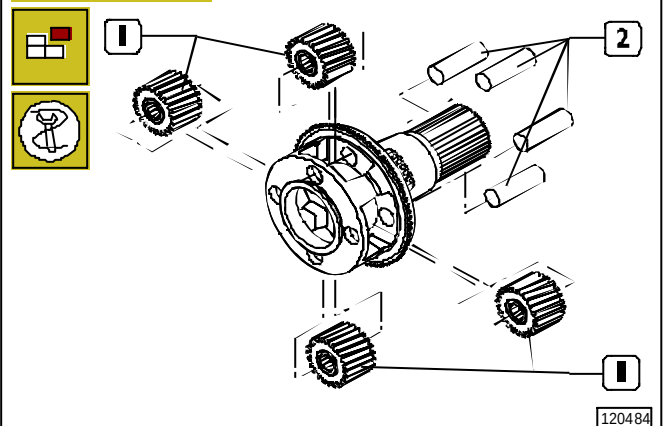


120484

Remove pins (2) from satellite gears (1).

Remove carefully the satellite gears (1), complete with rolls and washers.

Figure 29

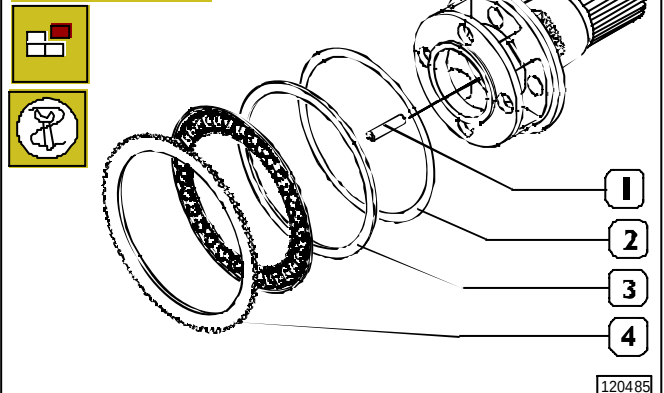


120485

Remove the extractor (1, Figure 27), the shoulder ring (4), the roll thrust bearing (3) and the Belleville spring (2) from the satellite holder shaft.

Remove the oil pipe (1), if damaged.

Aquila Trucks Centres

Figure 30

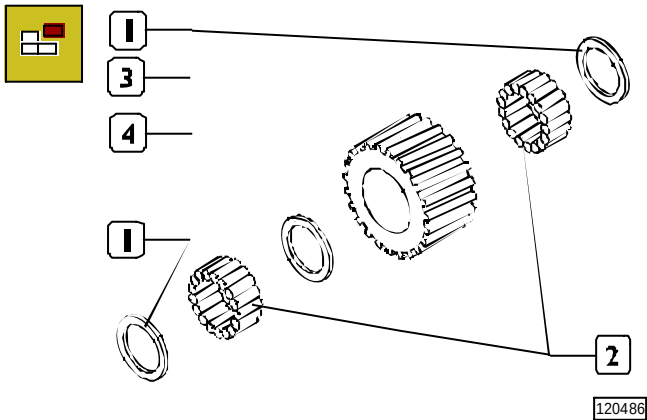


Remove washers (1 and 4) and washers and rollers (2) from the satellite gears (3).

NOTE The length of satellite gear, satellite holder shaft and the thickness of washers varies according to the gearbox type.

Satellite holder shaft assembly

Spread grease on the satellite gear hole (3) and insert all rolls (2) with the related washers (1 and 4).


Figure 31

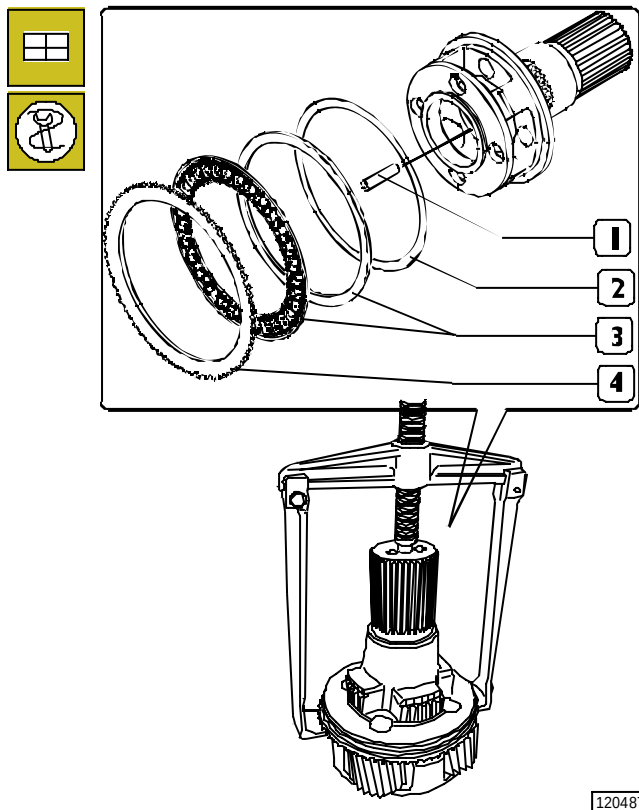

Assemble the Belleville spring (2), the roll thrust bearing (3) and the shoulder ring (4) on the satellite holder shaft, if damaged, and fasten then as described in disassembly.

NOTE Fastening is used to pre-load the Belleville spring and make the satellite gear assembly easier.

Figure 32

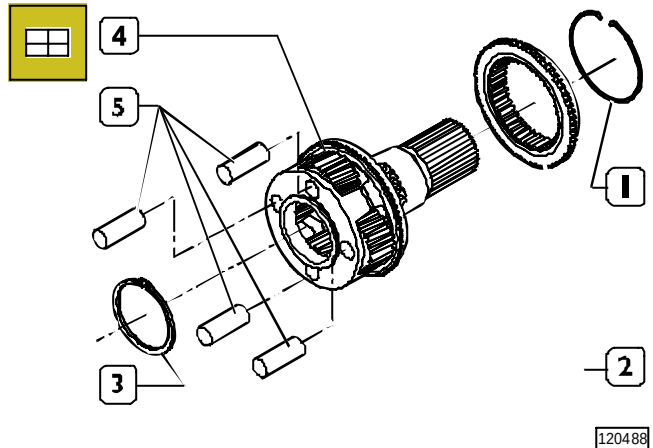


With pliers, tighten the ends of the snap ring (1) and assemble the coupling body (2) onto the G.R.E. shaft. Insert carefully the pre-assembled satellite gears (4) into the satellite holder shaft.

Insert carefully leveled pins (5) into the respective holes of the satellite holder shaft.

Assemble the snap ring (3) making sure that it is correctly housed in the groove of the satellite holder shaft.

Remove the tool used for the pre-loading of the Belleville spring (2, fFigure 31).

Figure 33

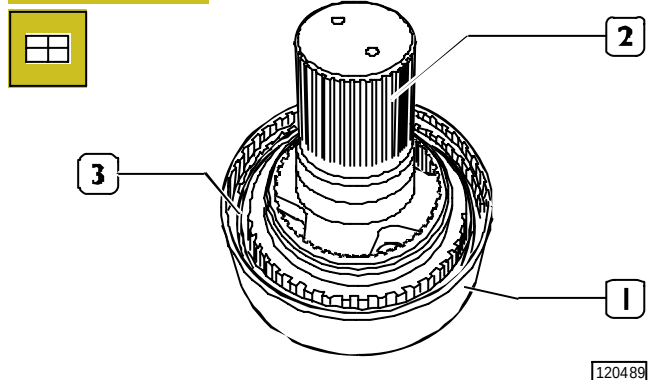

Put the crown (1) onto the support and assemble the satellite holder shaft (2)


Fasten the crown with the safety ring (3).

NOTE Make sure that the safety ring (3) is housed correctly in the groove provided in the crown bottom.

Aquila Trucks Centres


Rear box assembly

Figure 34

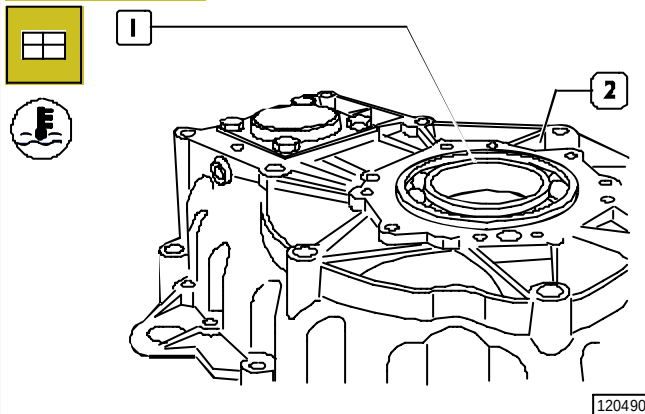


Heat the seat of the bearing (1) of the rear box (2) at 120 °C and assemble the bearing (1).

Figure 35

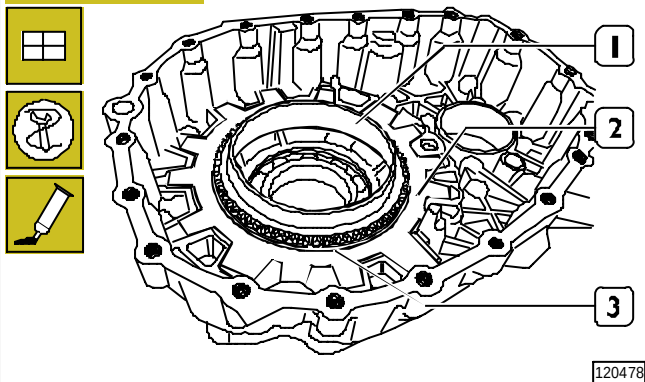

Rotate the rear box and put it on two supports. Assemble the coupling hub (1) and the disc clutch (2) complete with safety ring (3) into rear box.


Figure 36

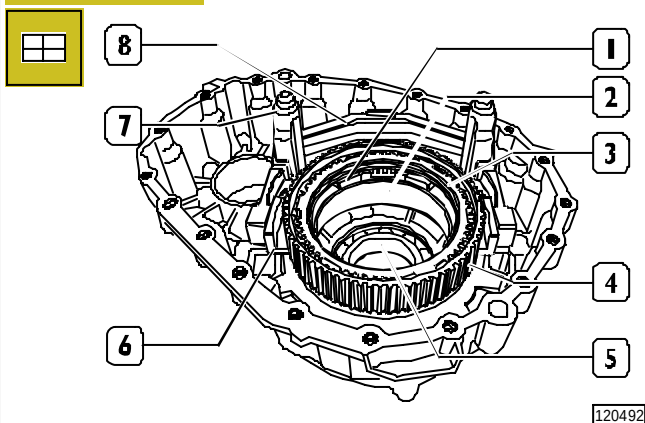

Assemble the previously assembled synchronizer set (3) onto the coupling body (2).
Remove the tools (1) 99370172.
Assemble the shoes (6) into the control arm (8) and insert them into the sliding sleeve (4).

NOTE To make assembly easier, stick supports (7) in the rear box with Loctite no. 241.


Figure 37

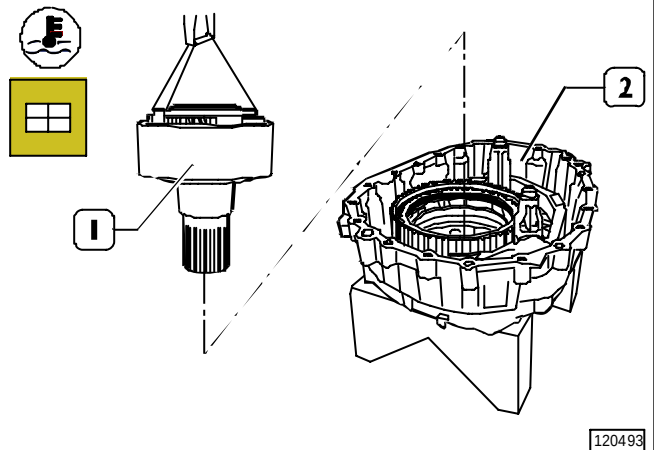

Heat the inner ring (5, figure 37) of the roll bearing at abt. 120 °C temperature.
Insert the satellite holder shaft (1) into the heated roll bearing, making sure that it reached the axial beat.
Turn the rear box (2) and assemble the remaining parts:

Output cover assembly

Figure 38

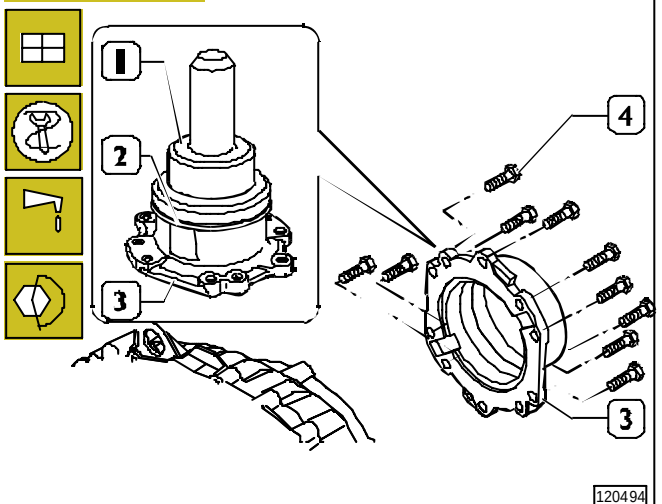


With locking set 99374221 (1), assemble the sealing ring (2) into the cover (3).
Fit the cover (3) on the rear box and fully tighten the hexagonal head screws (4).
Tightening torque = 46 Nm

Aquila Trucks Centres

Output flange assembly

Figure 39

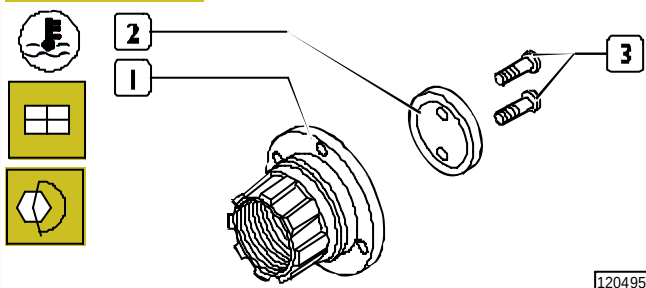


Heat the output flange (1) at max. 160 °C temperature and push it onto the satellite holder shaft teeth to the axial contact.

Assemble the disc (2) and tighten the screws (3) according to the set torque.

Tightening torque = 79 Nm

Figure 40

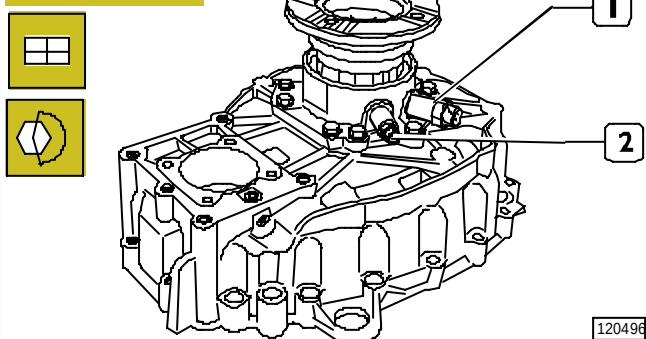


Screw the transmitters (1 and 2) according to the set torque.

Tightening torque = 45 Nm

CLUTCH CASING

Figure 41

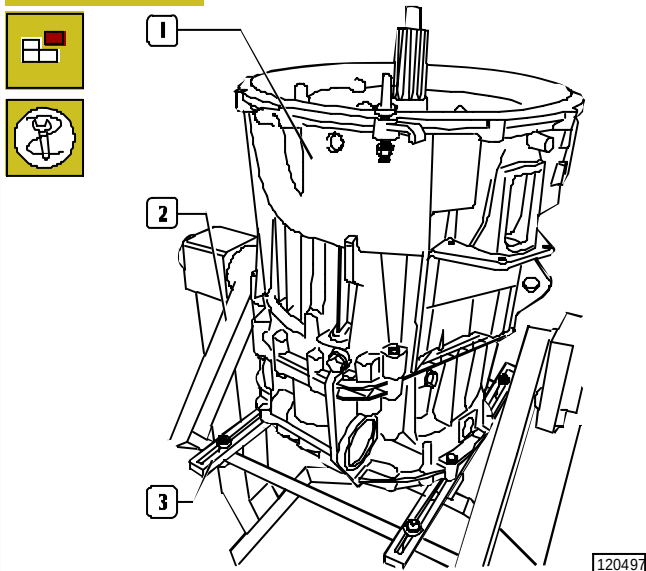


Fasten the gear transmission (1) to the support brackets 99322225 (3), which are arranged on the rotary stand 99322205 (2).

DISCONNECTING FORK

Disassembly

Figure 42

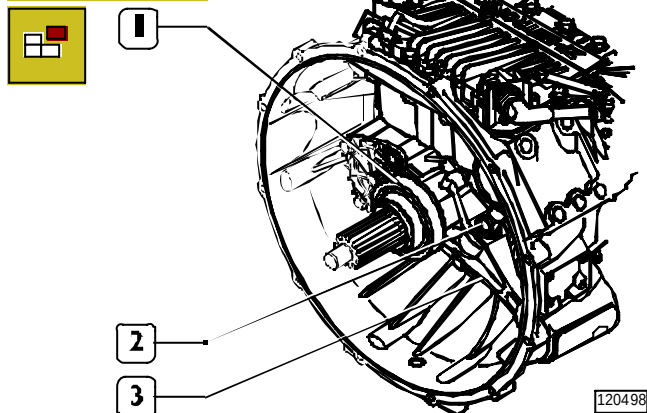

Remove the two hexagon head screws (2).

Remove the disconnecting bearing (1) and the disconnecting fork (3) from the motion input shaft.

Assembly


Grease the bearing surfaces of the disconnecting bearing (1). Assemble the bearing (1) and the disconnecting fork (3) so that it meshes the bearing.

Torque-tighten the screws (2).

Tightening torque = 115 Nm

Disassembly of the front cover

Figure 43

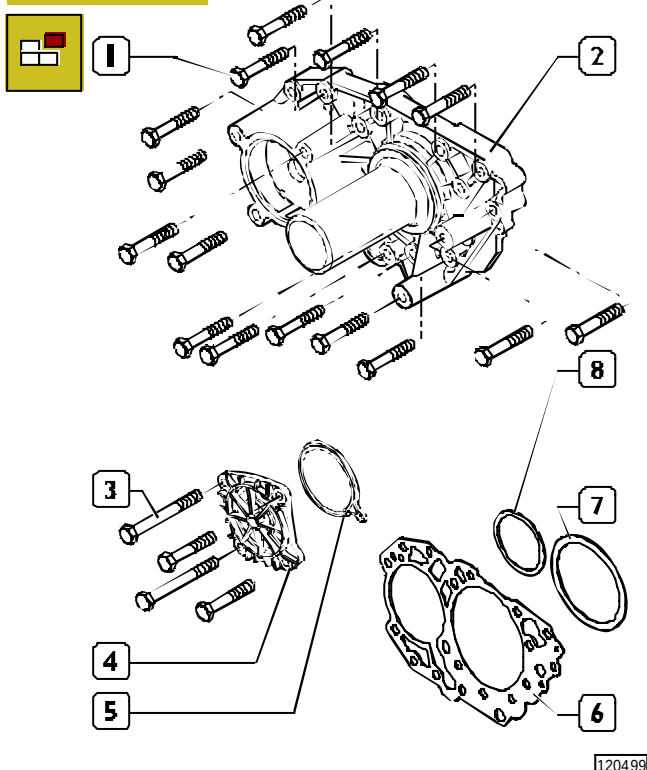


Remove the fastening screws (1 and 3) and remove the front cover (2), the cover (4) and the diaphragm (5).

Remove the adjusting rings (7, 8) and the gasket (6).

Aquila Trucks Centres

Disassembly of the oil pump


Figure 44

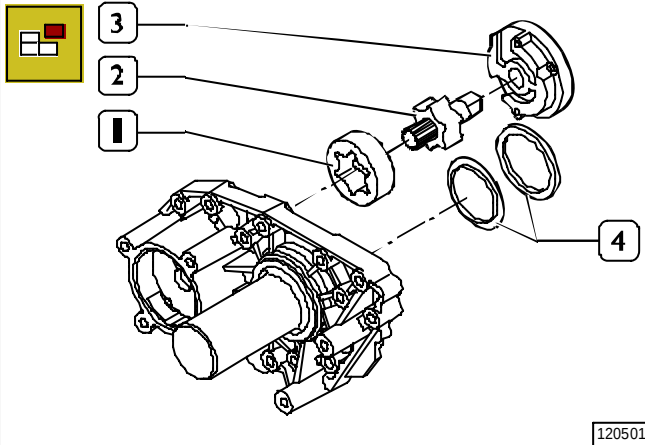

120501

Remove the pump cover (3) and remove the shaft (2) and the rotor (1) from the connecting plate.
Remove the oil collecting discs (4) from the input shaft (2).


Figure 45

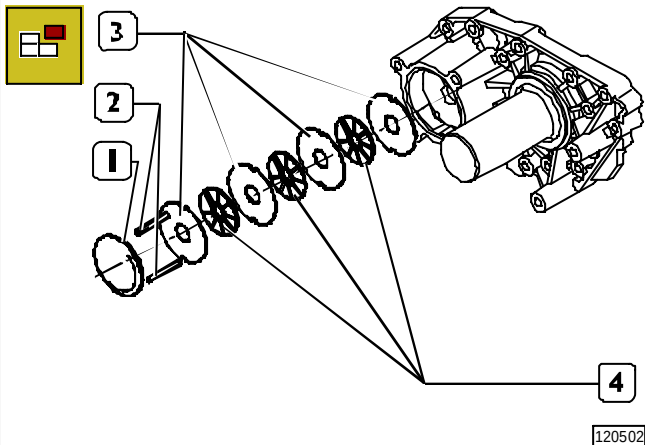

120502

Remove the brake piston (1) and remove the discs (3 and 4), taking note of their arrangement.
Replace the cylindrical pins, if damaged (2).

Figure 46

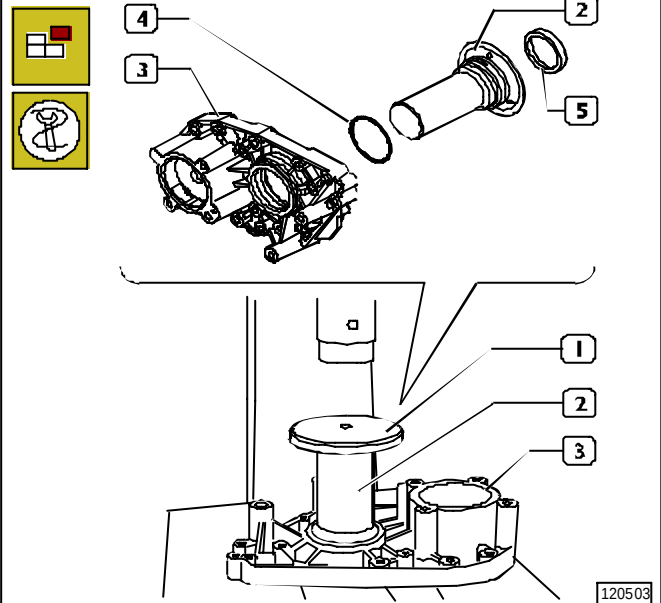


120503

Put the front cover (3) onto two supports, as shown in figure.
Remove the pipe (2) under press using a suitable torque block. Remove the O-ring (4) and the sealing ring (5) from the pipe (2).

Clutch casing removal


Figure 47

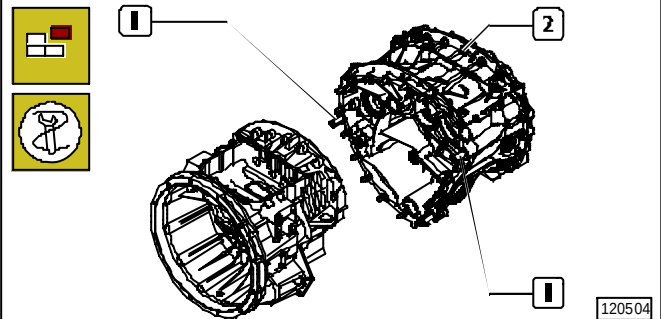

120504

With extractor 99340205 and pin 99342143, remove the centering pins (1).
Remove the screws (2) fastening the clutch casing to the gearbox.

Figure 48

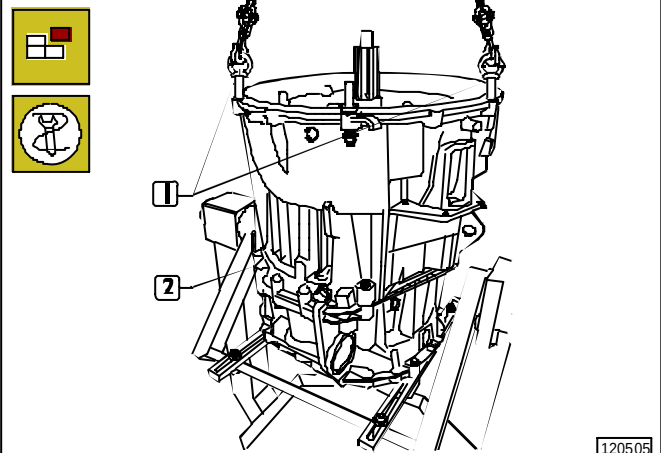


120505

Fasten two eyebolts 99366811 (1) to the clutch casing. By means of special ropes and lift, carefully remove the clutch casing (2).

Aquila Trucks Centres


Figure 49

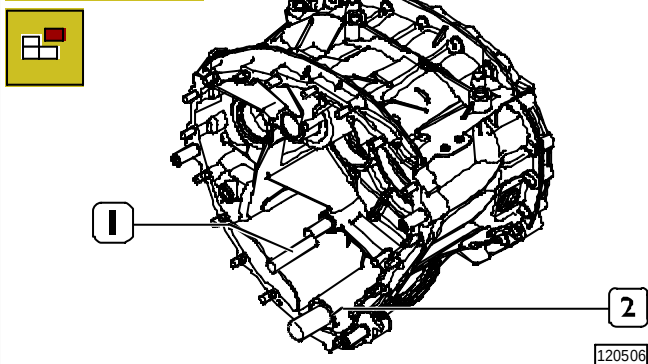

Remove the component (2) and the oil pipe (1), if damaged.


Shaft removal

Figure 50

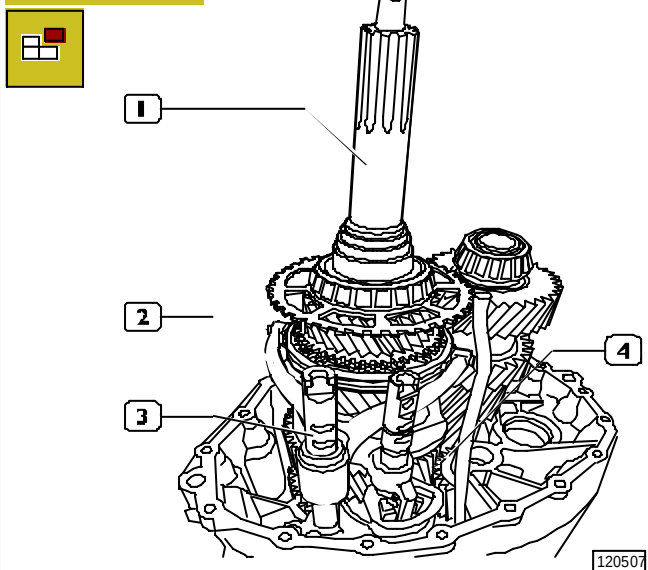


Move laterally the intermediate gear (4) of the reverse, so that it does not interfere with other gears. Remove the motion input shaft (1) complete with fork (2) and splitter control rod (3).

Figure 51

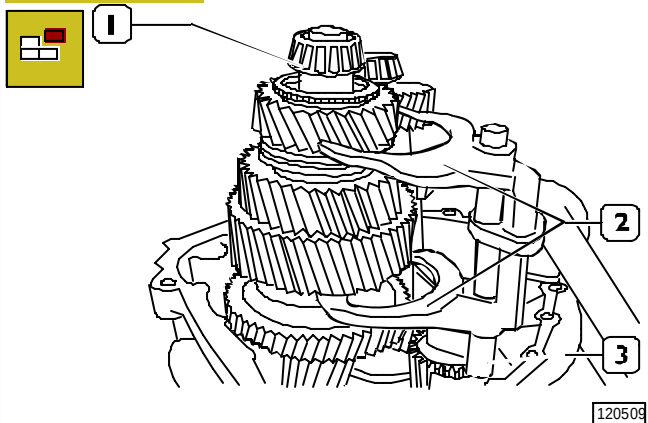

By means of special ropes and lift, carefully remove the main shaft (1) complete with control rod (3) and forks (2), moving the secondary shaft laterally.


Figure 52

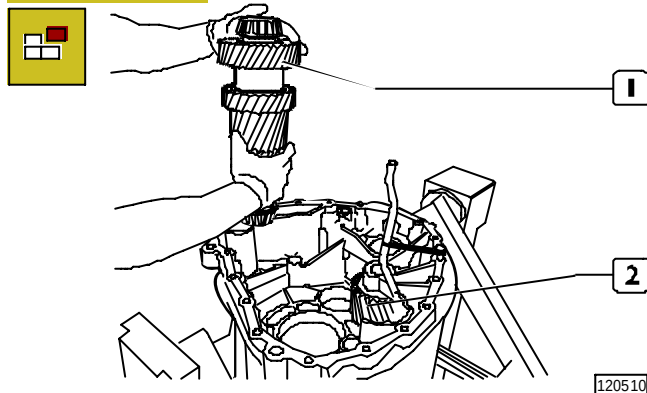

Remove the secondary shaft (1) from the gearbox. Remove the reverse gear (2) complete with rolls.

Disassembly of the input shaft


Figure 53

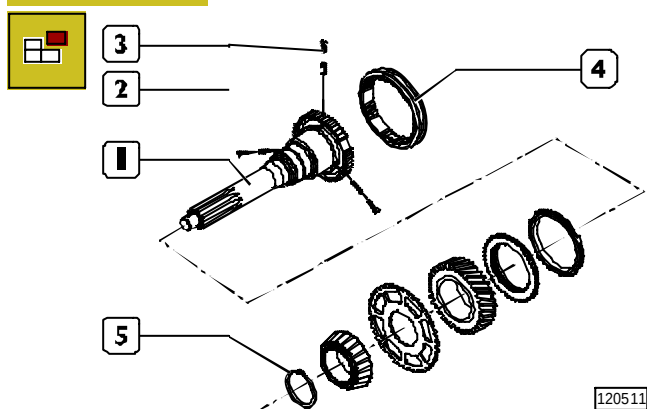

Put a cloth onto the synchronizer assembly (1) so that, during disassembly, springs (2) and pawls (3) are held while coming out from their seats.

Disassemble the sliding sleeve (4). Remove the safety ring (5).



Figure 54

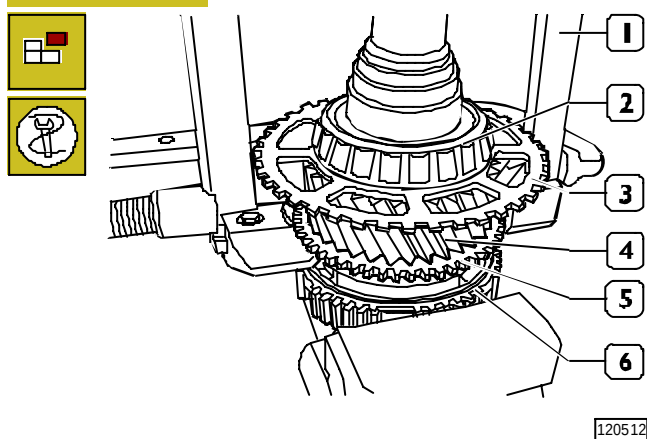

Insert holds 99341025 between the coupling hub (6) and the synchronizing ring (5). With the tools 99341021, 9934103 and 99341015, remove the conical roll bearing (2) and remove the motion input shaft, according to the following order: phonic wheel (3), helical gear (4), coupling hub (6) and synchronizing ring (5).

Aquila Trucks Centres

 Figure 55

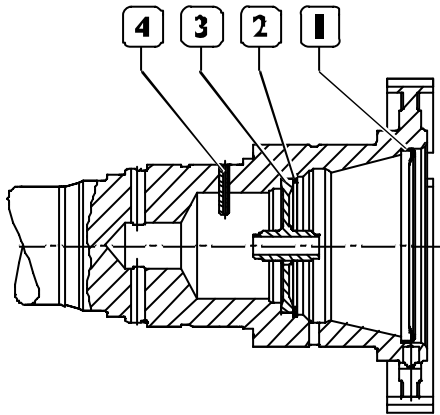


120513

Make sure that the rubber edge of the oil collecting disc (1) is not damaged or spoiled. In this case, replace it.
If necessary, remove the safety ring (2) and the cover (3).
Make sure that the hole of the electric pin (4), used for oil feeding, is not clogged.

Disassembly of the main shaft

Figure 56

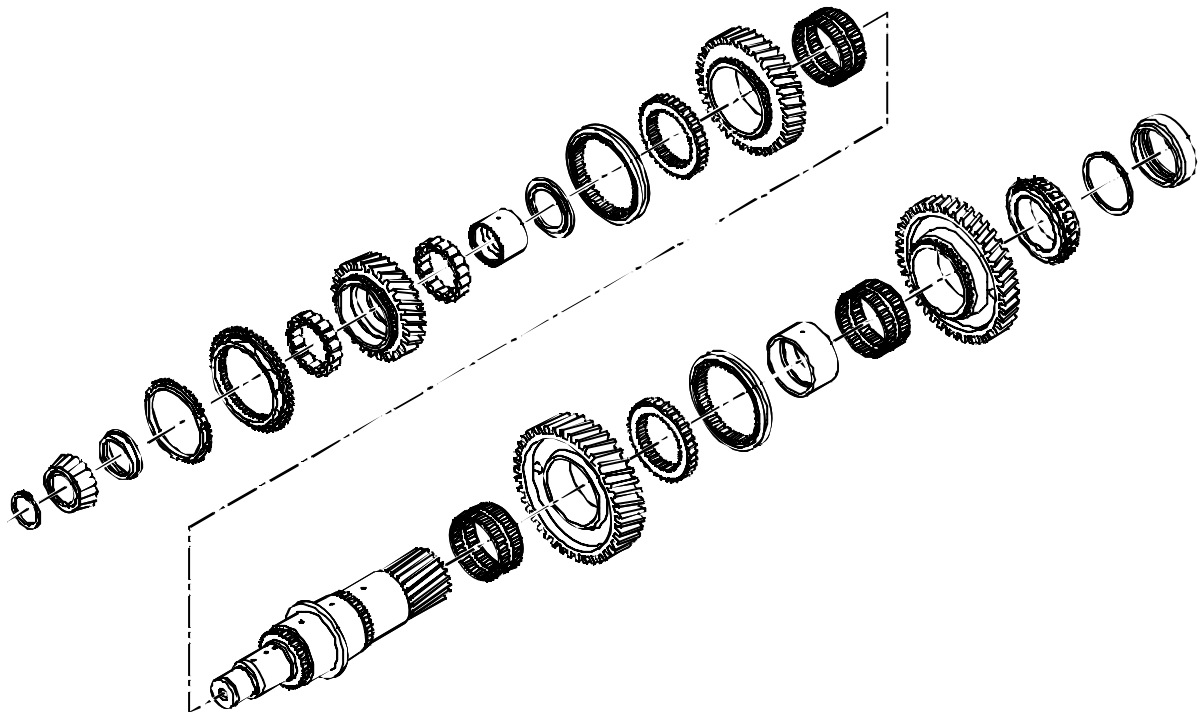


120514

MAIN SHAFT MAJOR COMPONENTS

Aquila Trucks Centres

Figure 57

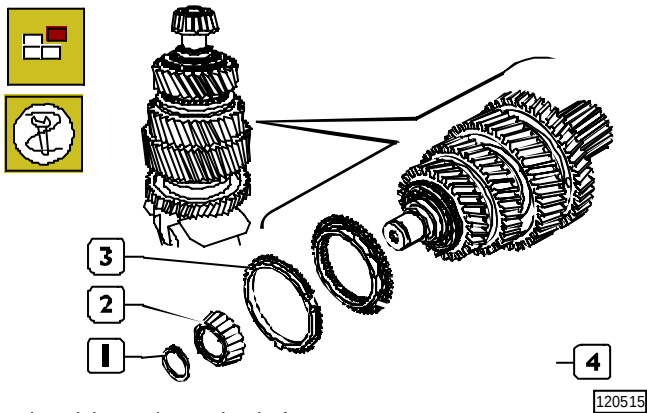


Vice tighten the main shaft.

Remove the safety ring (1) and coupling hub (4), complete with the synchronizing ring (3).


With the bridge 99341003, the brackets 99341011, the reaction block 99345054 and the tightener 99341015, remove the conical roller bearing (2).

Figure 58

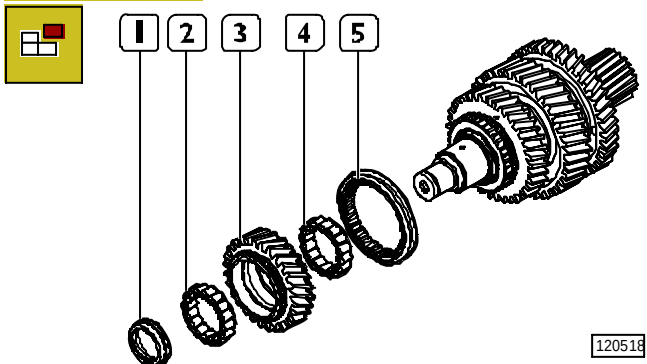

Remove the shoulder ring (1), the third gear (3), complete with roll crowns, (2 and 4) and the sliding sleeve (5).


Figure 59

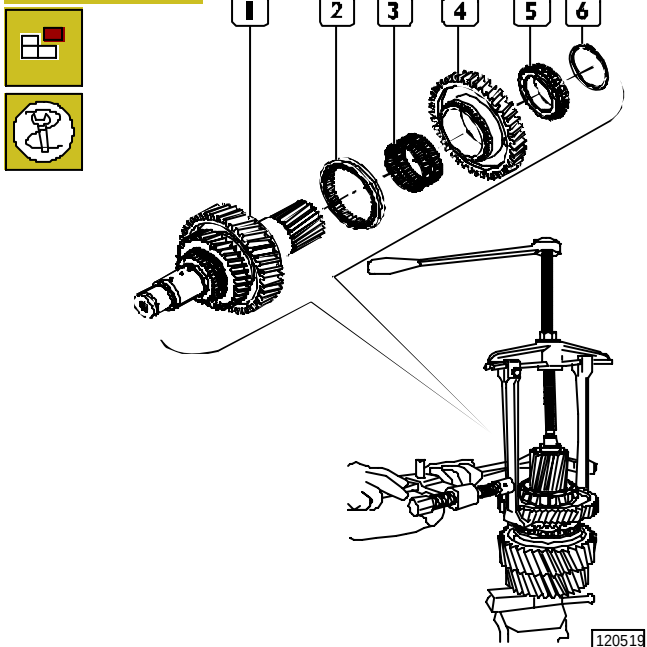

Rotate the main shaft (1) and vice tighten from the input side.
Remove the safety ring (5)

With the bridge 99341003, the brackets 99341013, the torque block 99345054 and the press 99341015 remove the reverse gear (4) with the bearing (5).
Remove the roll cage (3) and the sliding sleeve (2).


Figure 60

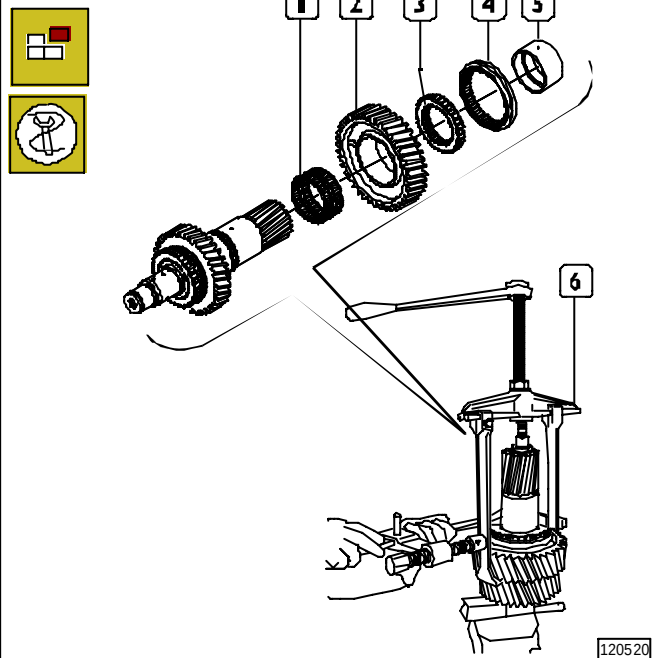

With the bridge 99341003, the brackets 99341013, the torque block 99345054 and the press 99341015 remove the first gear (2).

From the main shaft, remove the bushing (5), the sleeve holder (3) and the roll cage (1).

Figure 61

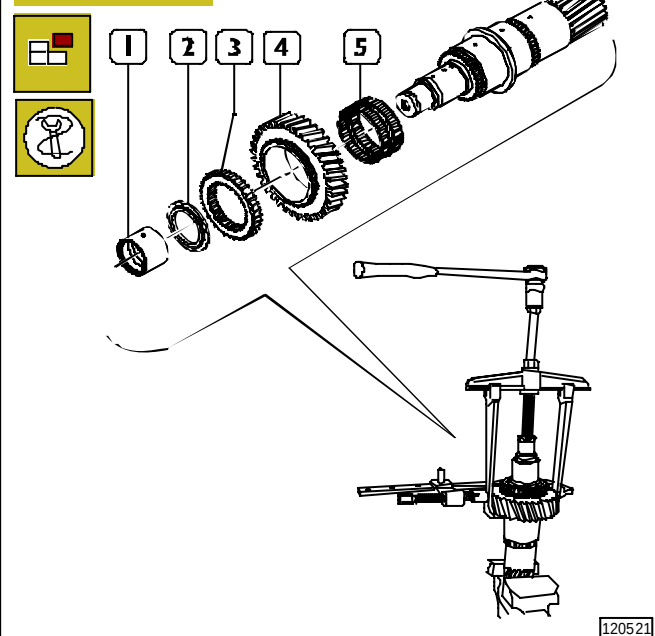

Rotate the main shaft and vice tighten it.

With brackets 99341017, bridge 99341003 and press 99341015, remove the second gear (4).


From the main shaft, remove the bushing (1), the disc (2), the sleeve holder (3) and the roll cage (5).

Aquila Trucks Centres

SPLITTER CONTROL FORK

Disassembly/Assembly

Figure 62

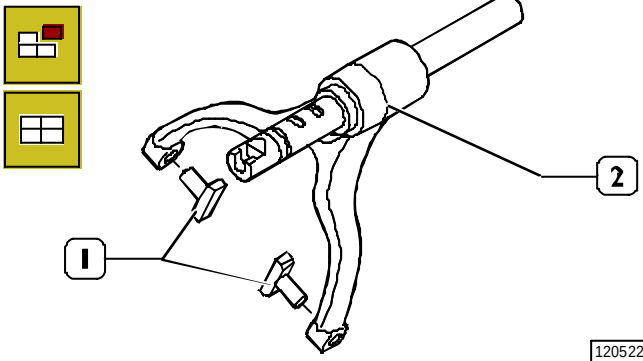


Remove the small block (2) from the splitter synchronizer connecting fork (1) and assemble the new small blocks.

GEAR CONTROL FORKS

Disassembly

Figure 63

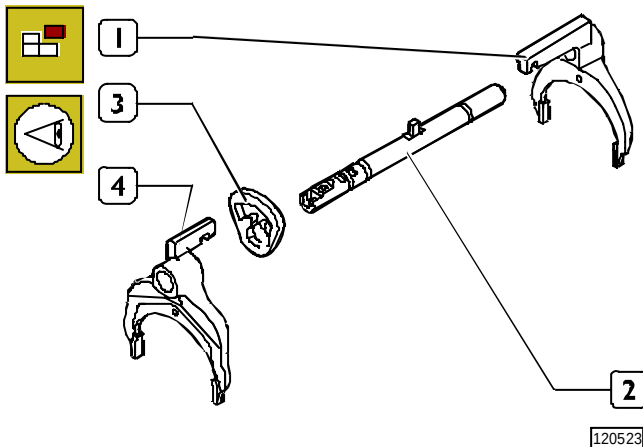

Release and remove the control forks (1) and (4).

NOTE Do not change the control forks (1) and (4). If necessary, check the serial numbers of the packing list.

Remove the ring (3) hindering the simultaneous coupling of the control shaft (2).




Position the ring (3) onto the control shaft. Insert the control forks (1 and 4) into the ring correct position.

SECONDARY SHAFT

Disassembly

Figure 64

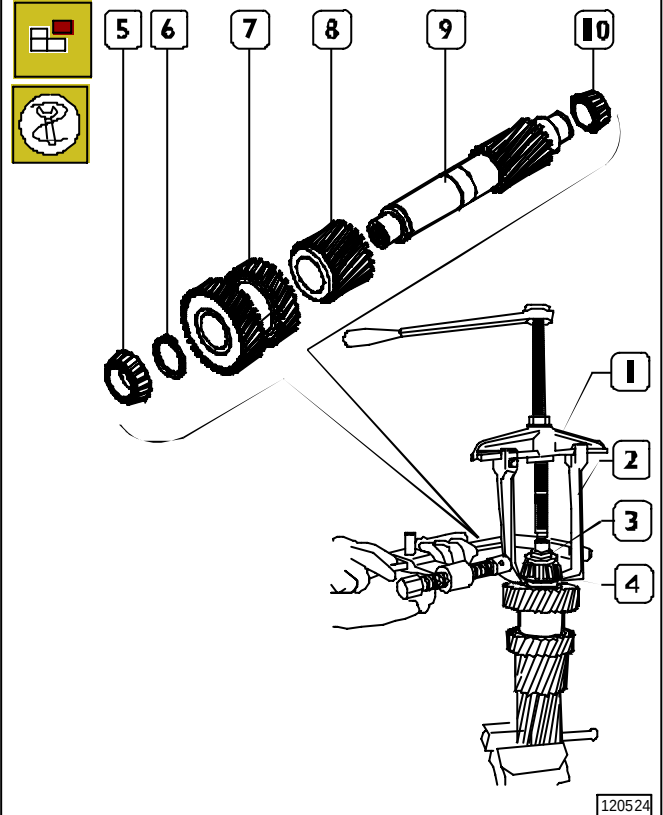

Remove the inner rings (5 and 10) of the roller bearings from the secondary shaft (9), using the extractor 99347100 (1), the holds 99347132 (4), the insert 99345057 (10) and suitable brackets (2).

Remove the safety ring (6).


Remove under press the double gear (7) and the gear (8).

NOTE The removal force of each gear can reach 500 kN.

Aquila Trucks Centres

Assembly

Figure 65

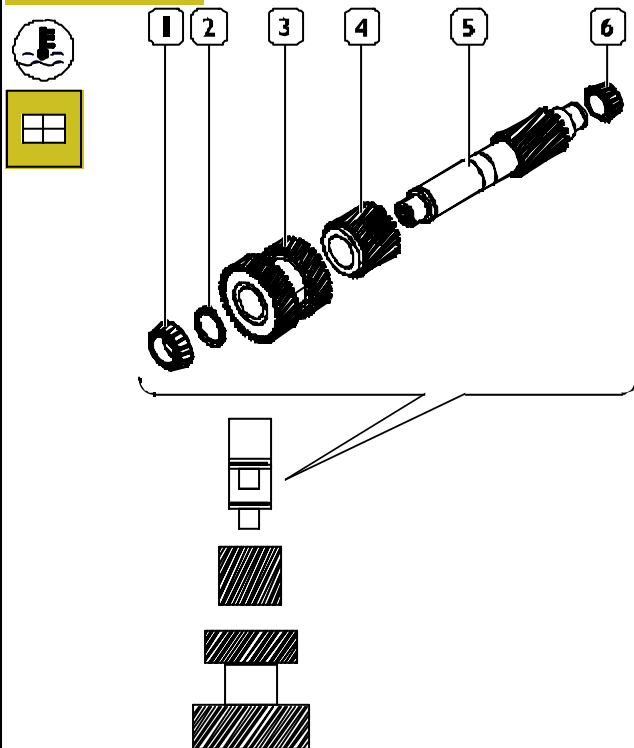

120525

Heat the gears (3 and 4) at a maximum 170 °C temperature. Put the heated gears one on another on a press and center them as shown in the figure.


Insert the secondary shaft (5) onto the heated gears and set it rapidly to axial beat.

Assemble the safety ring (2).

Heat the inner rings of the conical roll bearings (1 and 6) for 15 minutes at a maximum temperature ranging from 120 to 130 °C. Assemble them onto the secondary shaft checking the axial beat.

Assembly of the main shaft

Figure 66

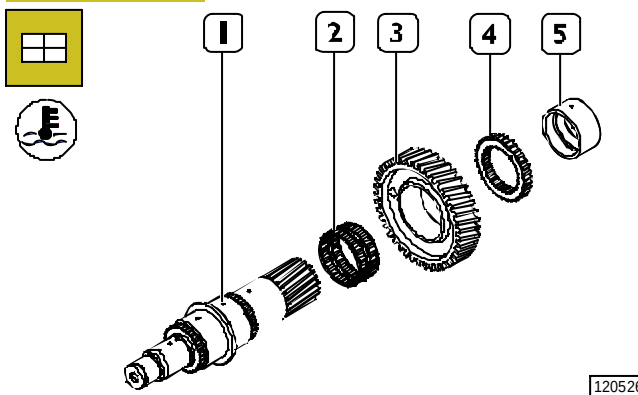

120526

Vice tighten the main shaft (1).


Lubricate the roll cage (2) and push it on the shaft.

Assemble the gear of the first gear (3) making sure that its driving teeth are facing the motion output.

Heat the sleeve holder (4) at 120 °C temperature and push it onto the teeth of the main gear.

Heat the bushing (5) at 120 °C and assemble it on the main shaft.

Figure 67

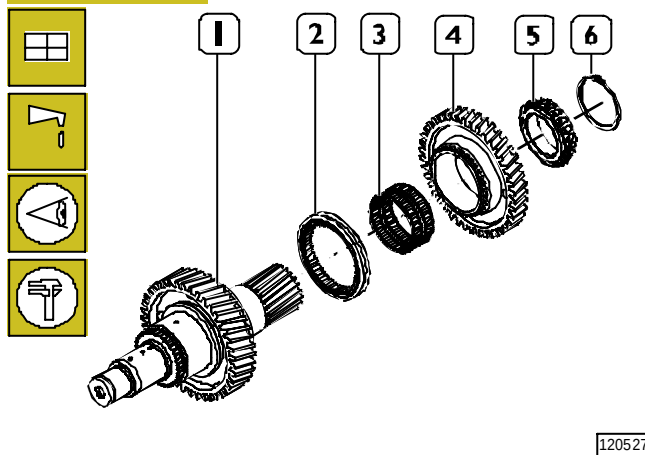

120527

Insert the sliding sleeve (2) onto the sleeve holder (4, Figure 66)

Lubricate the roll cage (3) and push it onto the bushing (5, Figure 66).

Assemble the reverse gear (4), inserting it onto the roll crown (3) and the main shaft, respectively. The driving teeth have to face the sleeve holder (4, Figure 66).

Heat the inner ring of the conical roll bearing (5) for max. 15 minutes at a temperature ranging from 120 to 130 °C and assemble it on the main shaft, making sure that it reached the axial beat.

By means of a thickness gauge, measure the safety ring thickness (6).


Choose the safety ring (6) in order to get an axial clearance ranging from 0 and 0,1 mm.

Assemble the chosen safety ring.

Rotate the main ring of 180°.

Aquila Trucks Centres

Figure 68

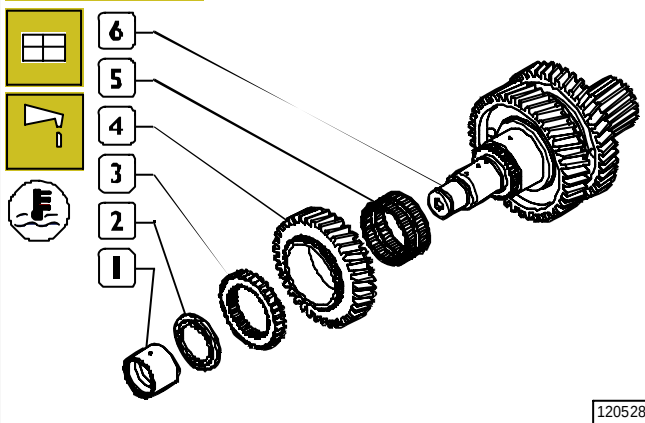


120528

Lubricate the roll cage (5) and assemble it onto the main shaft.

Assemble the gear of the second gear (4) onto the main shaft. Heat the sleeve holder (3) at abt. 120 °C temperature and push it onto the teeth of the main shaft until the axial contact is reached.

Heat the disk (2) and the bush (1) to a temperature of about 120 °C and push them on the shaft (6), until they reach the axle.

Figure 69

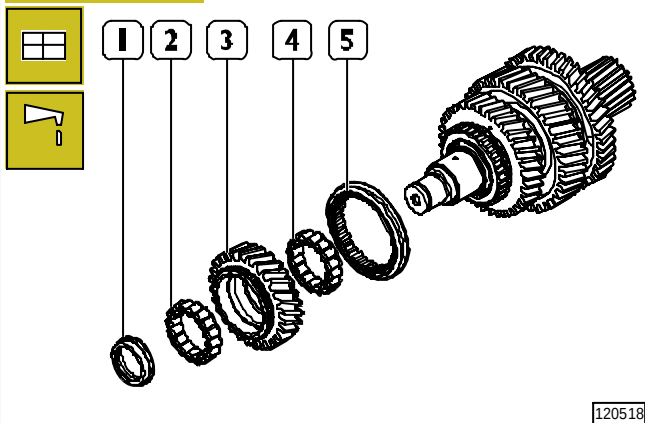

120518


Assemble the sliding sleeve (5) onto the sleeve holder (3, Figure 68).

Lubricate the roll crowns (2 and 4) and insert them onto the gear (3).

Assemble the gear set, complete with roll crowns, onto the bushing (1, Figure 68).

Assemble the shoulder ring (1) onto the main shaft.

Figure 70

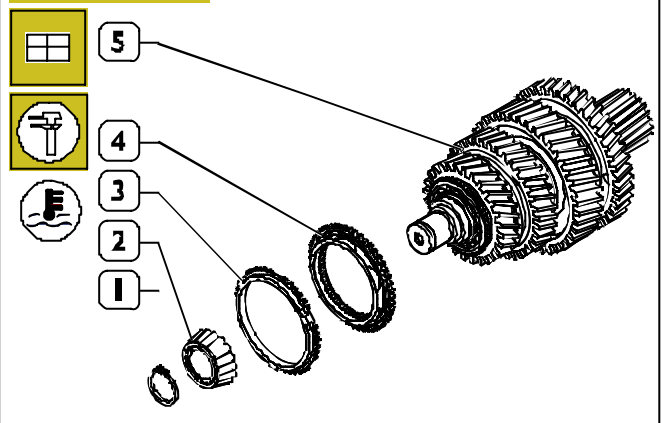

120529

Heat the inner ring of the conical roll bearing (2) for max. 15 minutes at a temperature ranging from 120 and 130 °C and push in onto the main shaft until the axial contact is reached.

With a thickness gauge, measure the thickness of the safety ring (1).


Choose a safety ring allowing to get an axial clearance ranging from 0 to 0,1 mm.

Assemble the chosen safety ring.

Assemble the coupling hub (4) and the synchronizing ring (3) onto the shaft.

Assembly of the motion input shaft

Figure 71

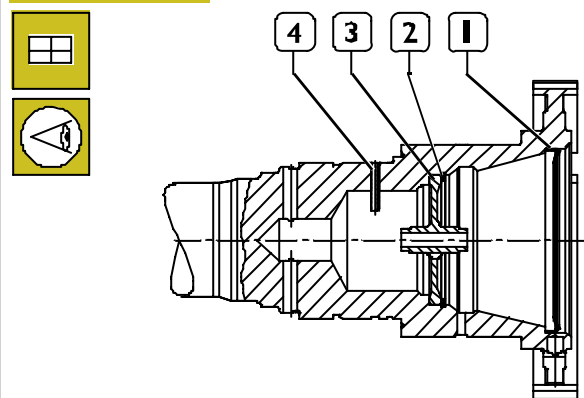

120513


Make sure that the plunger (4) is assembled.

Assemble the cover (3) and the safety ring (2).

Insert the oil collecting disc (1) into the motion input shaft to the axial beat.

Aquila Trucks Centres

Figure 72

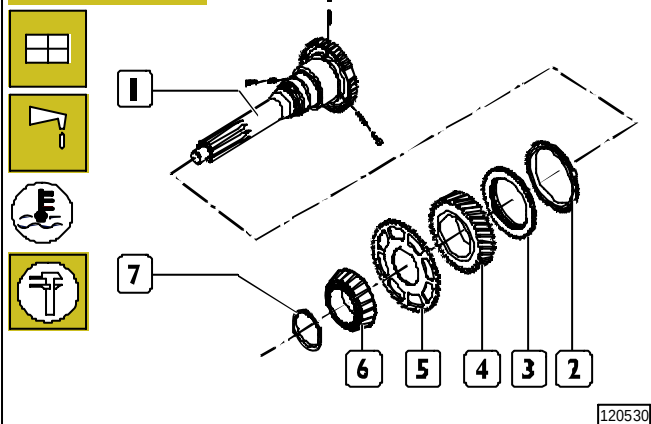

Assemble the synchronization ring (2) and the coupling hub (3) onto the shaft (1).

NOTE The projections of the synchronization ring face downwards and have to insert into the holes of the synchronizing hub.

Lubricate the gear inner track (4) and assemble the latter onto the input shaft.

The driving teeth face downwards and mesh the inner teeth of the coupling hub.


Assemble the phonic wheel (5).

Heat the inner ring of the conical roller bearing (6) at 120 °C and assemble it onto the input shaft, making sure that it reached the axial beat.

With a thickness gauge, measure the thickness of the safety ring (7).

Choose a safety ring allowing to guarantee an axial clearance ranging from 0 to 0,1 mm and assemble it onto the motion input shaft (1).

Figure 73

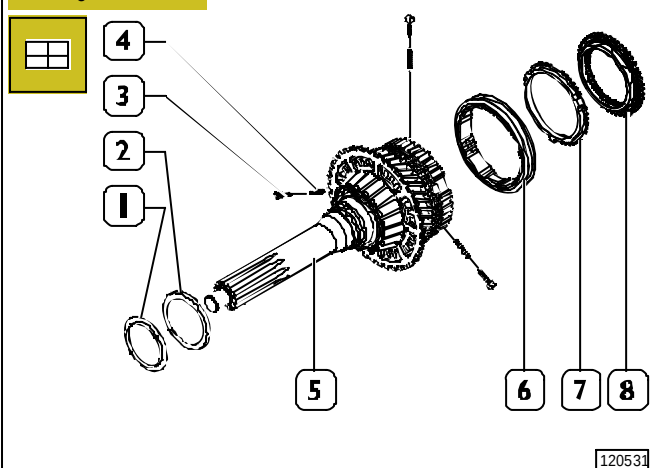

Assemble the sliding sleeve (6) onto the motion input shaft (5) and set it to beat.


Assemble the synchronizer as described in the specific chapter, complete with springs (4), pawls (3), ring (7), hub (8) and assemble it onto the shaft.

Set the sliding sleeve (6) to central position.

Assemble the oil collecting discs (1 and 2).

Rear box disassembly

Figure 74

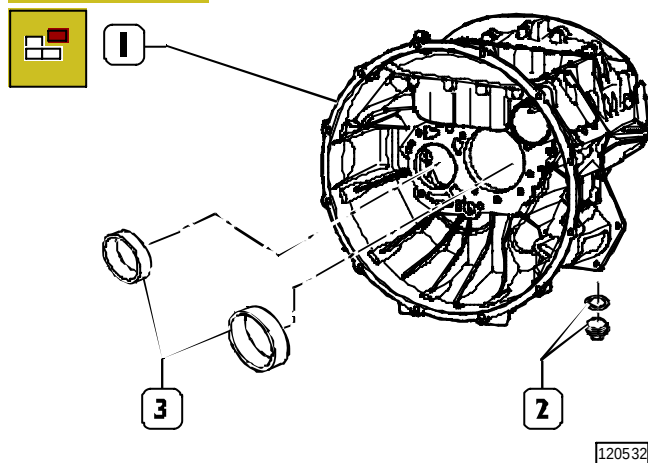


Remove the plug (2) from the clutch casing (1).
If bearings are replaced, remove the outer rings (3) by means of a suitable extractor.

Rear box assembly

-  Screw the plug (2) with a new sealing ring and tighten it according to the set torque (60 Nm).
-  By means of a suitable tool, assemble the outer rings (3) of the bearings.
-  Re-assemble the cylindrical pins (4), if previously removed.

GEARBOX CASING
Disassembly

Figure 75

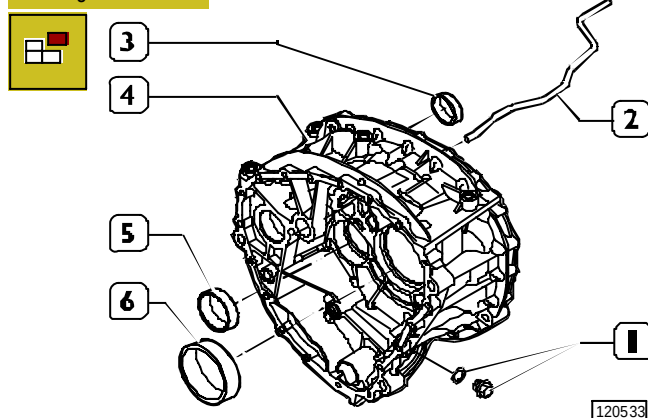

Remove the plug (1) from the gearbox (4).
In case of bearing replacement, remove the outer rings (3,5 and 6) by means of a suitable extractor.
Remove the oil pipe (2) by extracting it towards the output, taking note of its position for a following re-assembly.

Aquila Trucks Centres

Assembly



Heat evenly the seat of the conical roll bearings (5) and (6) in the gearbox at 100°C.



Assemble the outer rings (5 and 6) in the related seats, by means of a suitable tool, to the axial beat. Heat evenly the seat of the motion input shaft at 100°C and, by means of a suitable tool, insert the outer ring (3) of the bearing to the axial beat.



Fasten the outer ring (3) caulking it in four equidistant points.




Assemble the oil pipe (2) inserting it from the output side, according to the position observed during disassembly. If necessary, replace the pipe O-rings. Grease properly the O-rings and their seats.

Screw the plug (1) with a new sealing ring and tighten it according to the set torque (60 Nm).

Shaft reassembly

Figure 76

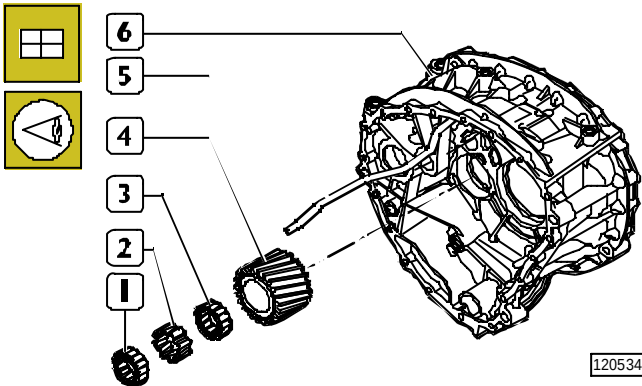


Insert the spacer (2) and the roll crowns (1 and 3) into the reverse gear (4).

Assemble the complete reverse gear into the gearbox (6) and push it laterally.


NOTE Make sure that the oil pipe (5) is assembled correctly in the gearbox.

Figure 77

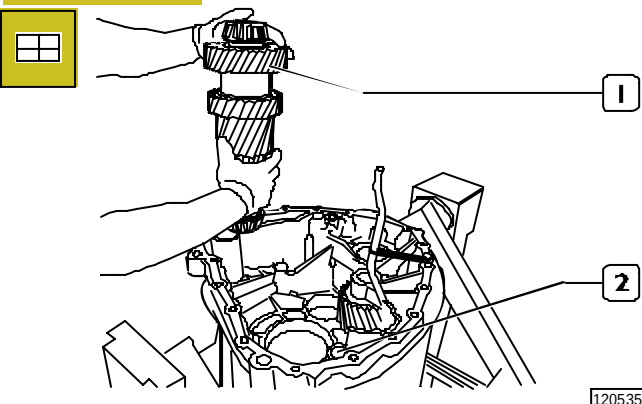

Assemble the secondary shaft (1) into the box (2).

Figure 78

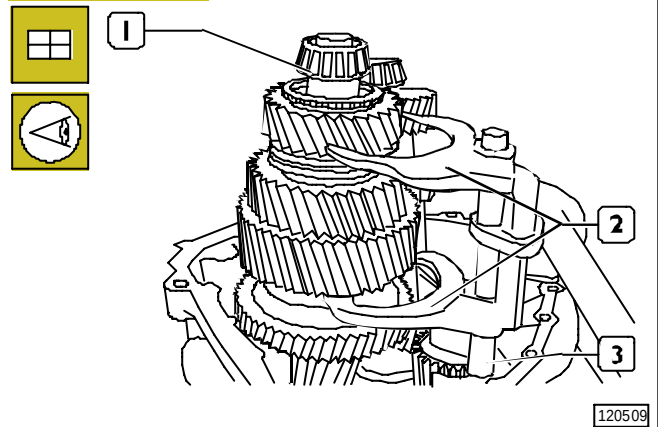


Hook the main shaft (1) as shown in the figure and insert it into the box, complete with control rod (3), forks (2) and sleeves.

Move laterally the secondary shaft to make the input of the main shaft into the gearbox easier.

Make the reverse gear mesh the main and secondary shaft ones.

Figure 79

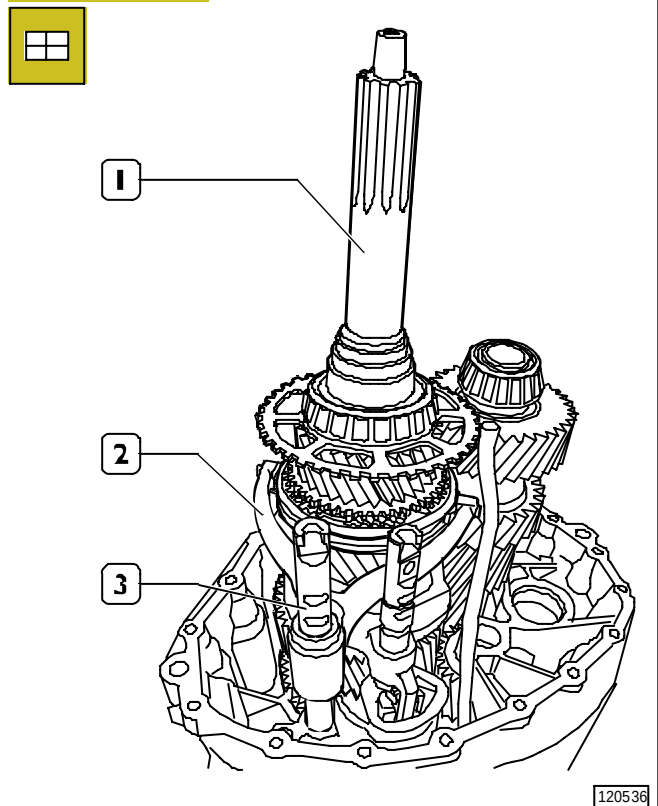


Assemble the motion input shaft (1), complete with fork (2) and control rod of the splitter (3).

Aquila Trucks Centres

Clutch casing reassembly

Figure 80

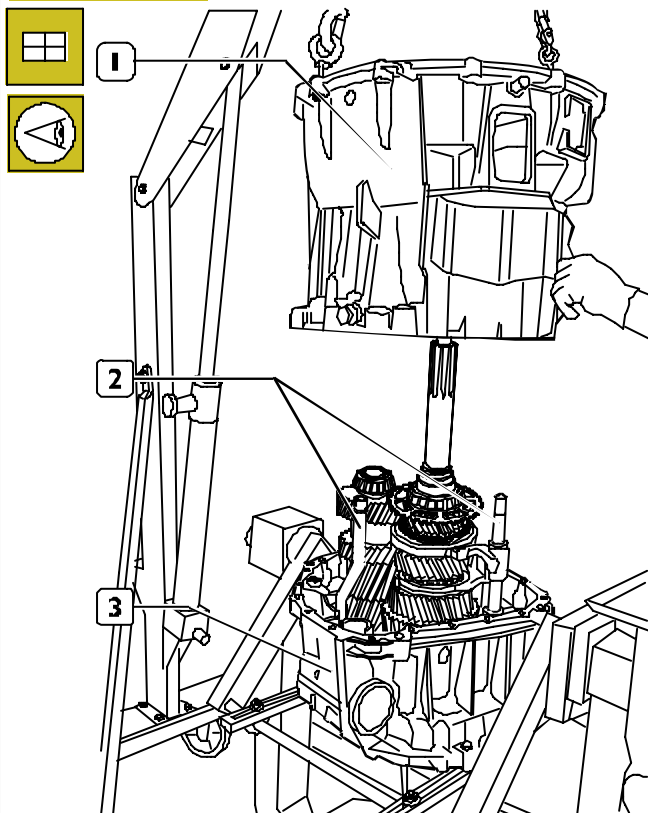

Apply two guides on the oil pipes (2) to make coupling between the clutch casing (1) and the gearbox (3) easier. Clean the box sealing surfaces.


NOTE Sealing surfaces have to be clean and without oil and grease.

Spread the sealing surface of the gearbox (3) with Loctite no. 574.

Lay carefully the clutch casing (1) onto the gearbox (3). Use the oil pipe guide for centering.

Make sure that pipes (1 and 3) are correctly assembled in the clutch casing (leveled with the surface).

Figure 81

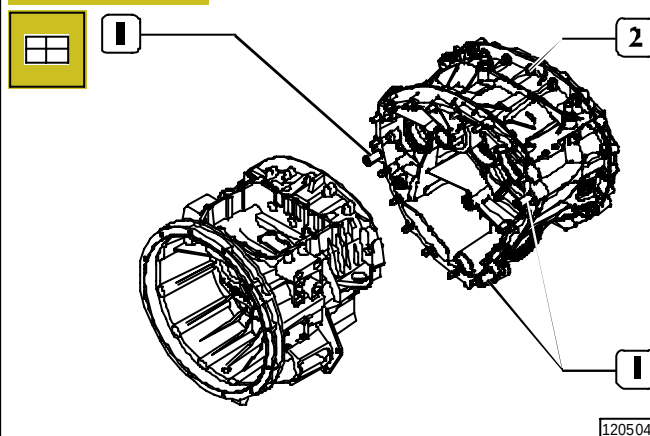


Insert partially the cylindrical pins (1) and torque-tighten the fastening screws of the clutch casing (50 Nm). Complete the insertion of the cylindrical pins (1) to the axial beat.

Aquila Trucks Centres

Adjustment of the axial clearance of bearings of the motion input shaft and of the secondary shaft

Figure 82

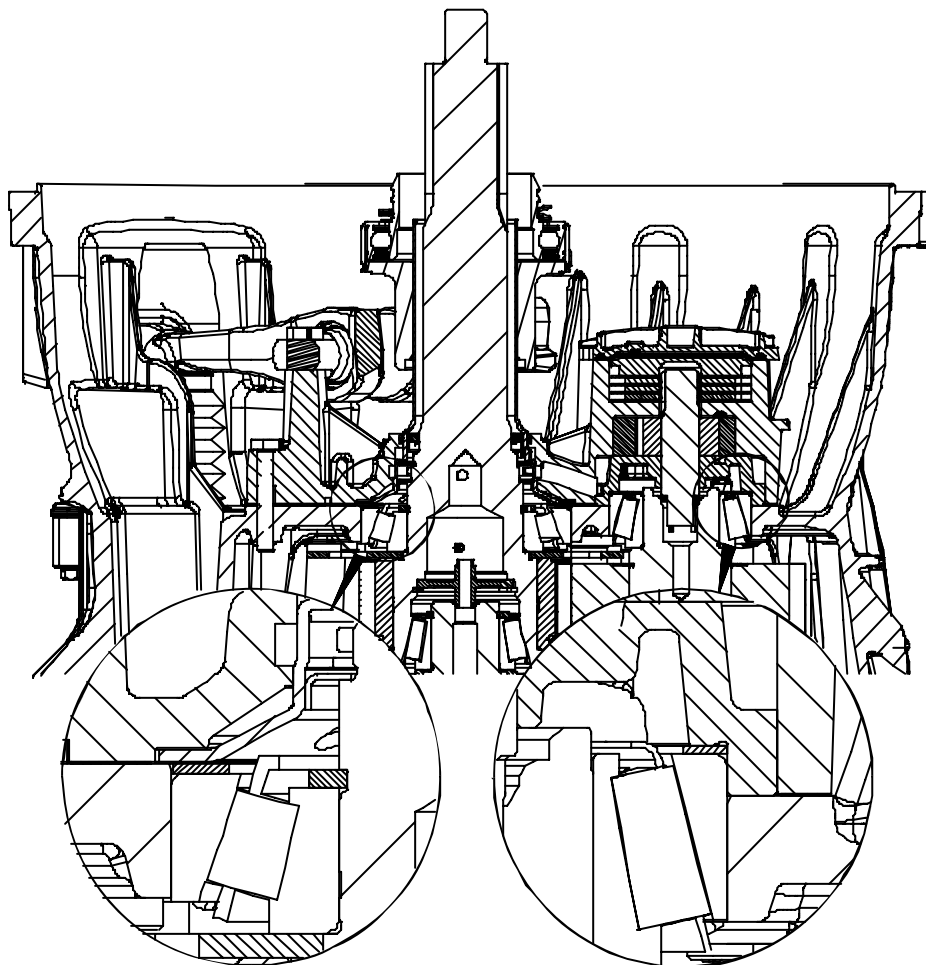

120538

Make the input shaft rotate forwards and backwards several times to align the conical rollers of the bearing and make the outer ring contact.

In order to carry out adjustments described in the following pages, an initial "null clearance" is required.

With a pin, make the outer rings of the bearings contact the conical rolls.

By means of a sharp object, make sure that bearing rolls do not move.


NOTE Clearance is null when the conical rolls are still, due to no pre-load.

Aquila Trucks Centres

Adjustment of the axial clearance of the motion input shaft


NOTE The conical roll bearing of the motion input shaft is adjusted with a pre-load ranging from 0,25 to 0,35 mm.

Figure 83

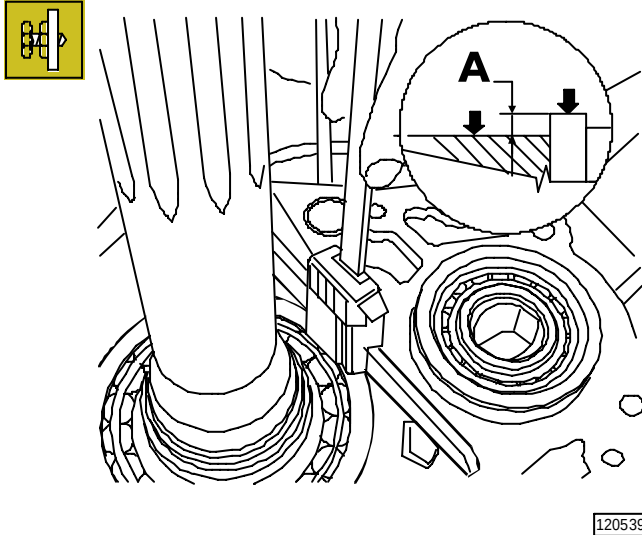**Height A**


With a thickness gauge, measure the distance between the box sealing surface and the upper edge of the bearing outer ring.

Figure 84

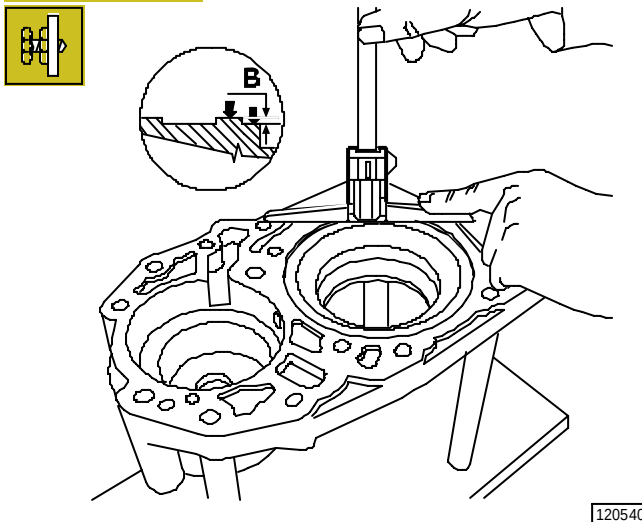**Height B**

With a depth gauge, measure the depth of the step in the front cover.

Figure 85

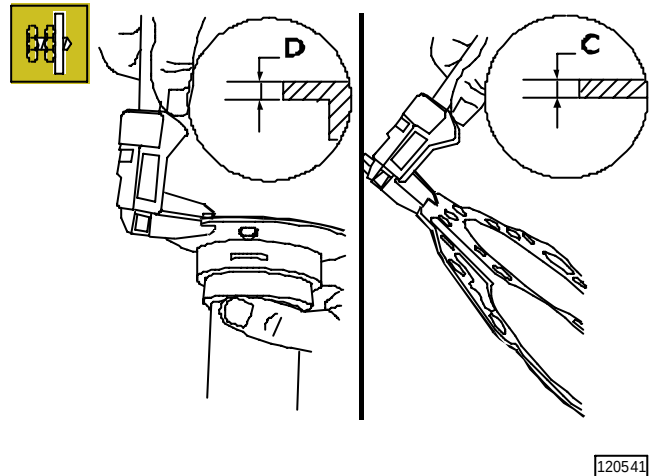**Height C**

Measure the gasket thickness.

Height D

Measure the thickness of the tube plate.

$$A + B + C - D = S$$

S = rated value with null clearance

Example

A = 2,00 mm

B = 2,20 mm

C = 0,35 mm

D = 2,50 mm

$$2,00 + 2,20 + 0,35 - 2,50 = 2,05 \text{ mm}$$

Thickness with minimum pre-load:

$$S1 = 2,05 \text{ mm} + 0,25 \text{ mm} = 2,30 \text{ mm}$$

Thickness with maximum pre-load:

$$S2 = 2,05 \text{ mm} + 0,35 \text{ mm} = 2,40 \text{ mm}$$

The thickness **S** of the adjusting ring shall be chosen among the spare available ones in the interval of calculated thicknesses S1÷S2.


Assemble the chosen adjusting thickness.

Aquila Trucks Centres

Adjustment of the secondary shaft axial clearance

NOTE The conical roll bearing of the secondary shaft is adjusted with a pre-load ranging from 0,15 and 0,25 mm.

Figure 86

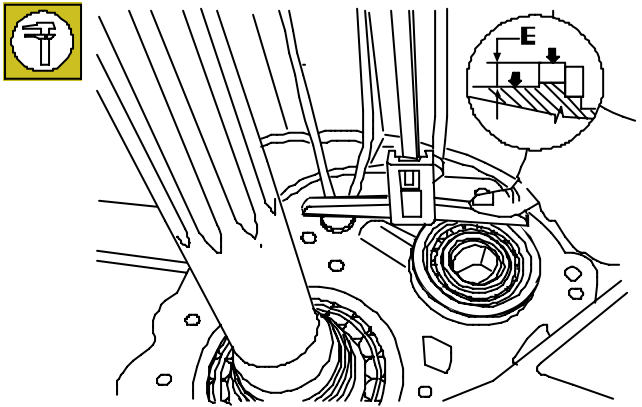


120542

Height E

With a thickness gauge, measure the distance between the upper board of the bearing outer ring and the box sealing surface.

Figure 87

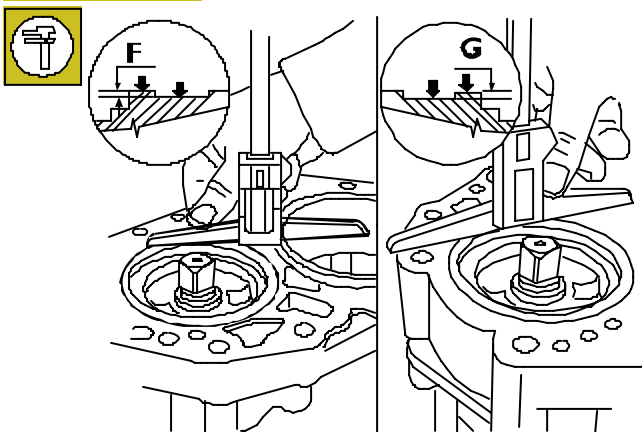

120543


Height F

Measure between the pump cover upper edge and the sealing surface of the front cover.

Height G

Measure between the pump cover upper edge and the first step.

Figure 88

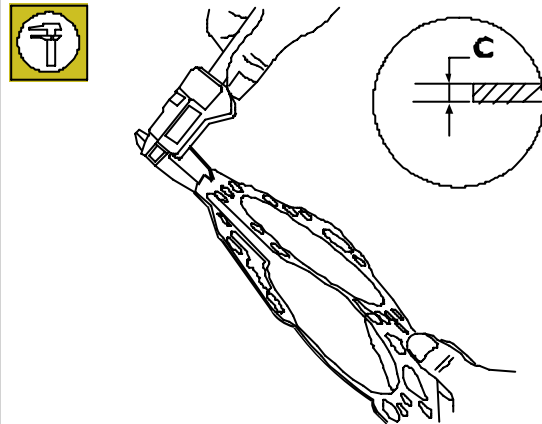

120544

Height C

Measure the gasket thickness.

$$G - F + C - E = S$$

S = rated value with null clearance

Calculation example:

E = 6,80 mm

F = 0,20 mm

G = 7,55 mm

C = 0,35 mm

$$7,55 - 0,20 + 0,35 - 6,80 = 0,90 \text{ mm}$$

Thickness with minimum pre-load:

$$S1 = 0,90 \text{ mm} + 0,15 \text{ mm} = 1,05 \text{ mm}$$

Thickness with maximum pre-load:


$$S2 = 0,90 \text{ mm} + 0,25 \text{ mm} = 1,15 \text{ mm}$$

The thickness **S** of the adjusting ring shall be chosen among the spare available ones in the interval of calculated thicknesses S1 S2.

Assemble the chosen adjusting thickness. Assemble the chosen adjusting thickness.

Assembly of the front cover

Figure 89

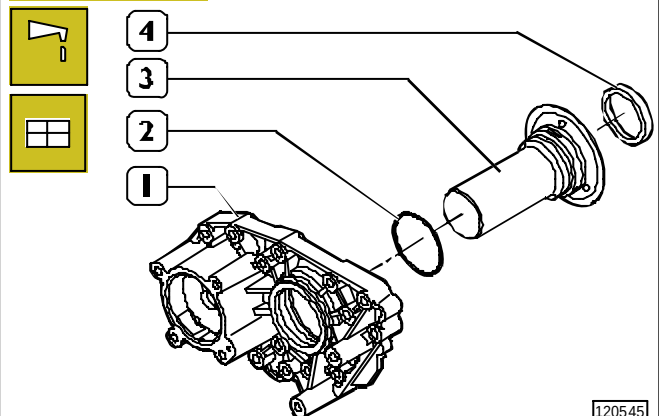


120545

Lightly grease the O-ring (2) and insert it on the front cover (1).

Aquila Trucks Centres

Figure 90

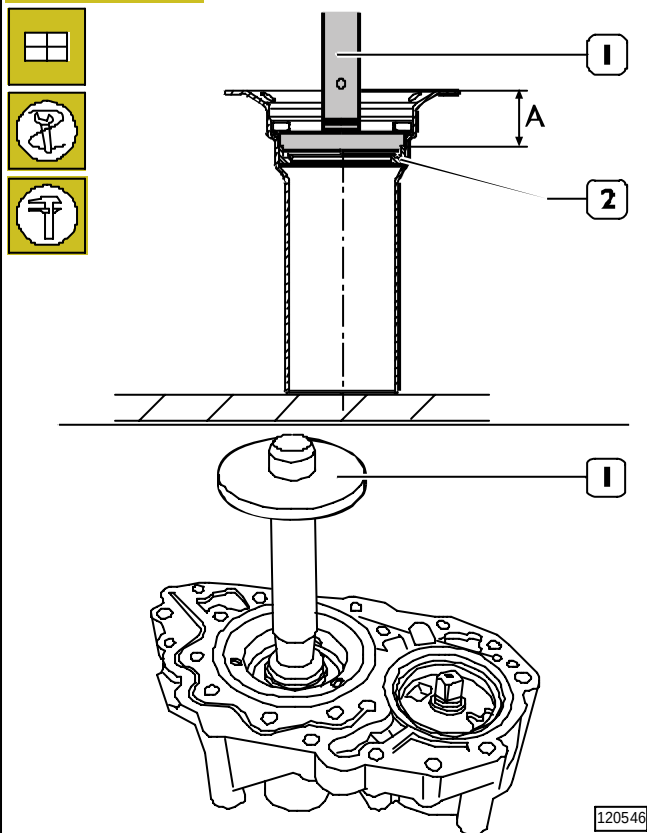


With locking set 99374336 (1), assemble the sealing ring (2). Observe the overall height $A = 31.50 \text{ mm} \pm 0.30 \text{ mm}$.

NOTE


- Moisten with alcohol the outer circumference of the sealing ring.
- The ring sealing edge has to face outwards.
- Lightly grease the ring seal lip.

Figure 91

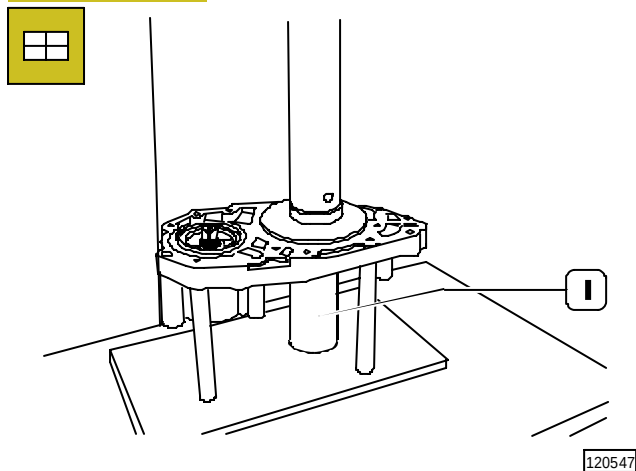


Assemble the pipe (1) under press.

Figure 92

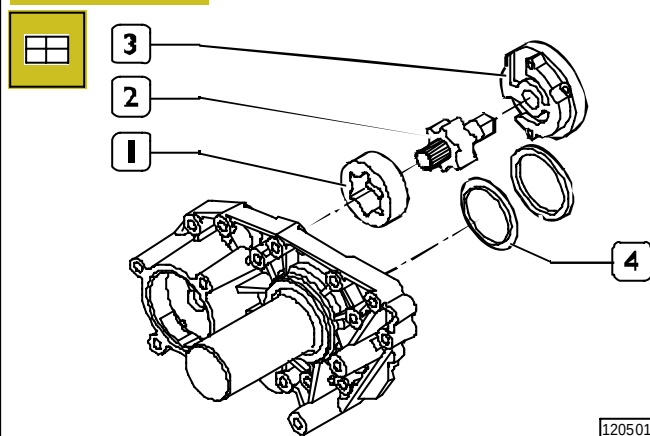

Assemble onto the plate, the rotor (1), the pump shaft (2) and the pump cover (3). Mount the oil collection disks (4).

Figure 93

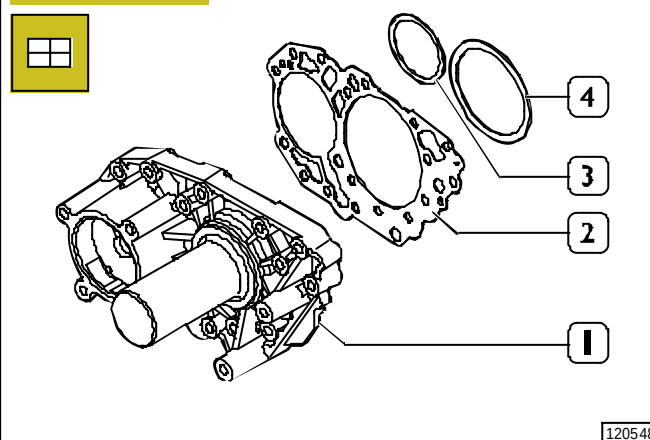


Clean the coupling surfaces of the front cover (1) and of the clutch casing.

NOTE All sealing surfaces and threaded holes M10 on the clutch casing have to be clean and without oil and grease.

Put the gasket (2) onto the clutch casing. Assemble the previously set adjusting rings (3) and (4).

Aquila Trucks Centres

Figure 94

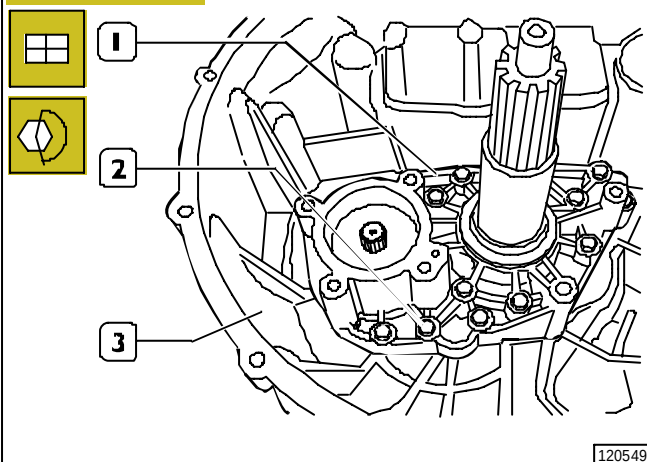


120549

Assemble the front cover (1) onto the clutch casing (3).

NOTE Moisten the plate fastening screws (1) Loctite no. 241.

Tighten the fastening screws (2) according to the set torque (46 Nm).

Figure 95

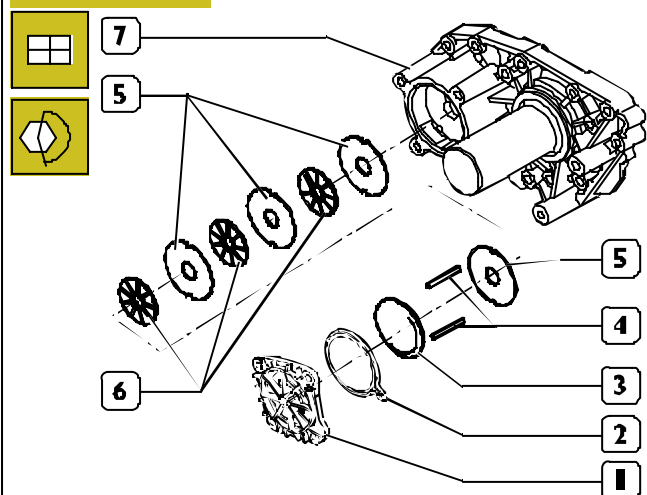

120550

Replace the cylindrical pins (4), if damaged (4).

Assemble the discs (5 e 6) according to the arrangement shown in the figure.

Assemble the brake piston (3), the diaphragm (2) and the brake cover (1).

Tighten the cover screws (1) according to the set torque (46 Nm).

Aquila Trucks Centres

Aquila Trucks Centres

Gearboxes
EuroTronic Automated:
- 12 AS 1930 T.D.
- 12 AS 2330 T.O.

	Page
DESCRIPTION	49
LOCATION OF GEARBOX DESCRIPTION PLATE	49
GEARBOX ELECTRONIC MANAGEMENT	50
MAIN DATA	51
TIGHTENING TORQUES	52
TOOLS	53
REMOVING-REFITTING GEARBOX	55
- Removal	55
- Refitting	55
OVERHAULING THE GEARBOX	56/1
- Checks	56/1
- Gearbox actuator	56/1
- Removal	56/1
- Refitting	56/2
- Removing the rear box	56/2
- Removing the rear box	56/3
- Removing the epicyclic reduction gear train (E.R.G.)	56/4
- Fitting the epicyclic reduction gear train (E.R.G.)	56/6
- Adjusting epicyclic reduction gear train bearing end float	56/7
- Adjusting main shaft end float	56/8
- Synchronizing device assembly for engaging normal or reduced gears	56/10
- Removal	56/10
- Fitting	56/10
- Removing the middle box	56/13

Aquila Trucks Centres

Page

- Removing the main shaft	56/15
- Removing the drive input shaft	56/17
- Removing the splitter synchronizing device . . .	56/18
- Fitting the splitter synchronizing device	56/19
- Fitting the drive input shaft	56/20
- Fitting the main shaft	56/20
- Splitter control fork	56/23
- Disassembly - Assembly	56/23
- Gear control forks	56/23
- Removal	56/23
- Fitting	56/23
- Fitting the middle box	56/24
- Transmission shafts	56/24
- Disassembly - Assembly	56/24
- Fitting the front box	56/27
- Front cover	56/29
- Removal	56/29
- Fitting the front cover	56/29
- Adjusting drive input shaft bearing end float . .	56/29
- Adjusting transmission shaft bearing end float .	56/30
- Clutch release lever	56/32

Aquila Trucks Centres

DESCRIPTION

Eurotronic Automated gearbox is an electrical-pneumatic drive mechanical type gearbox electronically managed by central unit. It has twelve forward gears and two reverse gears.

Gears selection and engagement functions are actuated by the help of an electronic central unit controlling clutch handling and engine rpm's during gear shift. A pneumatic device inside the gearbox decreases secondary shaft rpm's facilitating gear engagement.

All gearbox functions are managed by an electronic central unit, which receives signals from various electrical and electronic systems aboard via CAN line and controls various components optimising manoeuvres and managing manoeuvres safety.

The driver can choose whether to actuate gear selection manually or in semiautomatic mode, or to use completely automatic management.

With semiautomatic operation, the driver engages the various gears very easily by driving the selector lever, without needing to release accelerator pedal.


With automatic operation, the driver only drives accelerator or brake pedal; the gears are engaged automatically.

The gears are selected with finely shifted ratios and can be entered successively. Positioned in gearbox rear side is G.R.E. (Epicycloidal Reducer), that can be inserted by a sliding sleeve shift. The sliding sleeve allows to double front box ratios number. Such number can be further multiplied via "Splitter" engagement. Each single ratio consequently results to be split into an either slow or fast ratio. The engagements of G.R.E. and "Splitter" are synchronised.

A display unit on instrument panel warns about each system operation, as well as any operation faults.

LOCATION OF GEARBOX DESCRIPTION PLATE

Figure 1

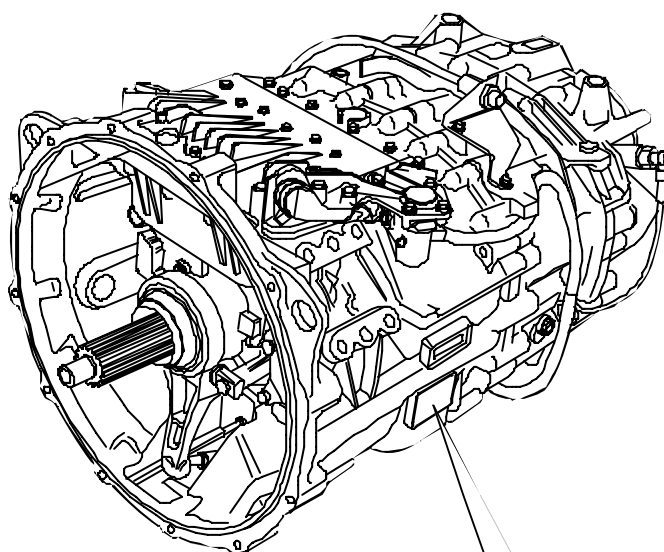

ZF FRIEDRICHSHAFEN AG MADE IN GERMANY			
A			
PARTS No.		MODE	SERIAL NO.
B		C	
CUSTOMER SPEC. NO.	D		
TOTAL RATIO	E	SPEED RATIO	F
P.T.O.	N	$\eta =$	H ENGINE
OIL CAPACITY IN LITRES	I	OIL GRADE - SEE LUBRIC. LIST TE - VL	L

112203

- A = Type of transmission
- B = ZF drawing no.
- C = Production sequence number
- D = Spare part IVECO drawing no.
- E = Transmission gear ratio


- F = Tachometer gear ratio
- G = Type of power take-off
- H = Power take-off gear ratio
- I = Replacement oil amount
- L = ZF lubricant list name

P.T.O. = Power take-off

Aquila Trucks Centres

GEARBOX ELECTRONIC MANAGEMENT
Theoretical scheme

Figure 2


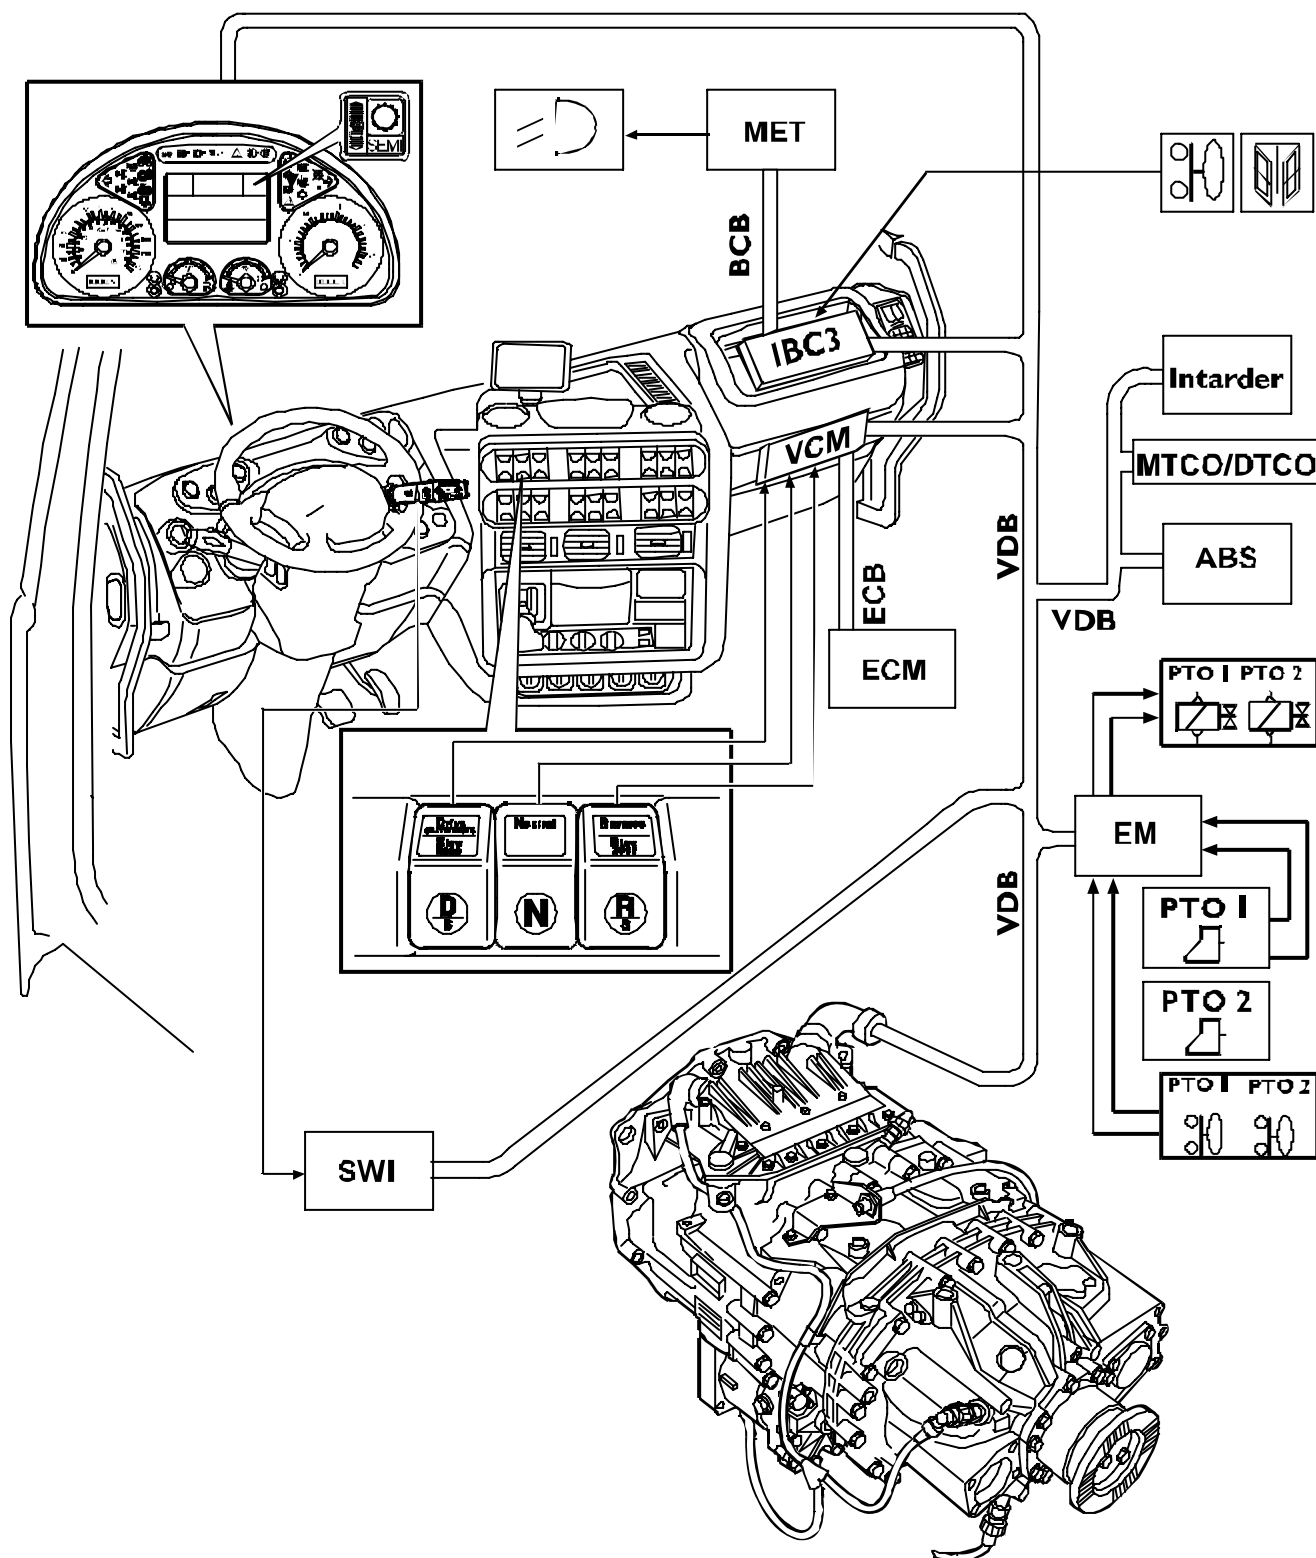


- BC = Body Computer
 ICB = Instrument Cluster Bus
 VDB = Vehicle Data Frame
 ECM = Engine Control Module
 ECB = Engine Control Bus
 EM = Expansion Module
 MET = Electronic Chassis Module

112442

Aquila Trucks Centres

MAIN DATA

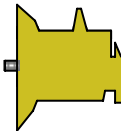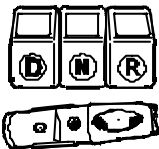
	GEARBOXES	EuroTronic	
	Type Torque activated Nm	12 AS 1930 T.D.	12 AS 2330 T.O.
		Mechanical	
		1900	2300
	Forward gears Reverse gears	12 2	12 2
	Type of running control	semiautomatic/automatic with electronic management	
	Side and/or rear power take-off	optional	
	Gear clutch : Splitter and G.R.E clutch.*	through synchroniser frontal clutch sleeves with free ring	
	Gears	with epicyclic teeth constantly meshing	
	Gear ratios 1 st 2 nd 3 rd 4 th 5 th 6 th 7 th 8 th 9 th 10 th 11 th 1 st reverse gear 2 nd reverse gear	15.86 12.33 9.57 7.44 5.87 4.57 3.47 2.70 2.10 1.63 1.29 1.00 14.68 11.41	12.33 9.59 7.44 5.78 4.57 3.55 2.70 2.10 1.63 1.27 1.00 0.78 11.41 8.88
	Type of oil - 1 st filling Litres kg	Tutela Truck Fe-Gear Tutela ZC 90 12 11	

* ERG = Epicyclic reduction gear unit
T.D. = Truck Direct Drive
T.O. = Truck Over Drive (Multiplied)

Aquila Trucks Centres

TIGHTENING TORQUES







Figure 3

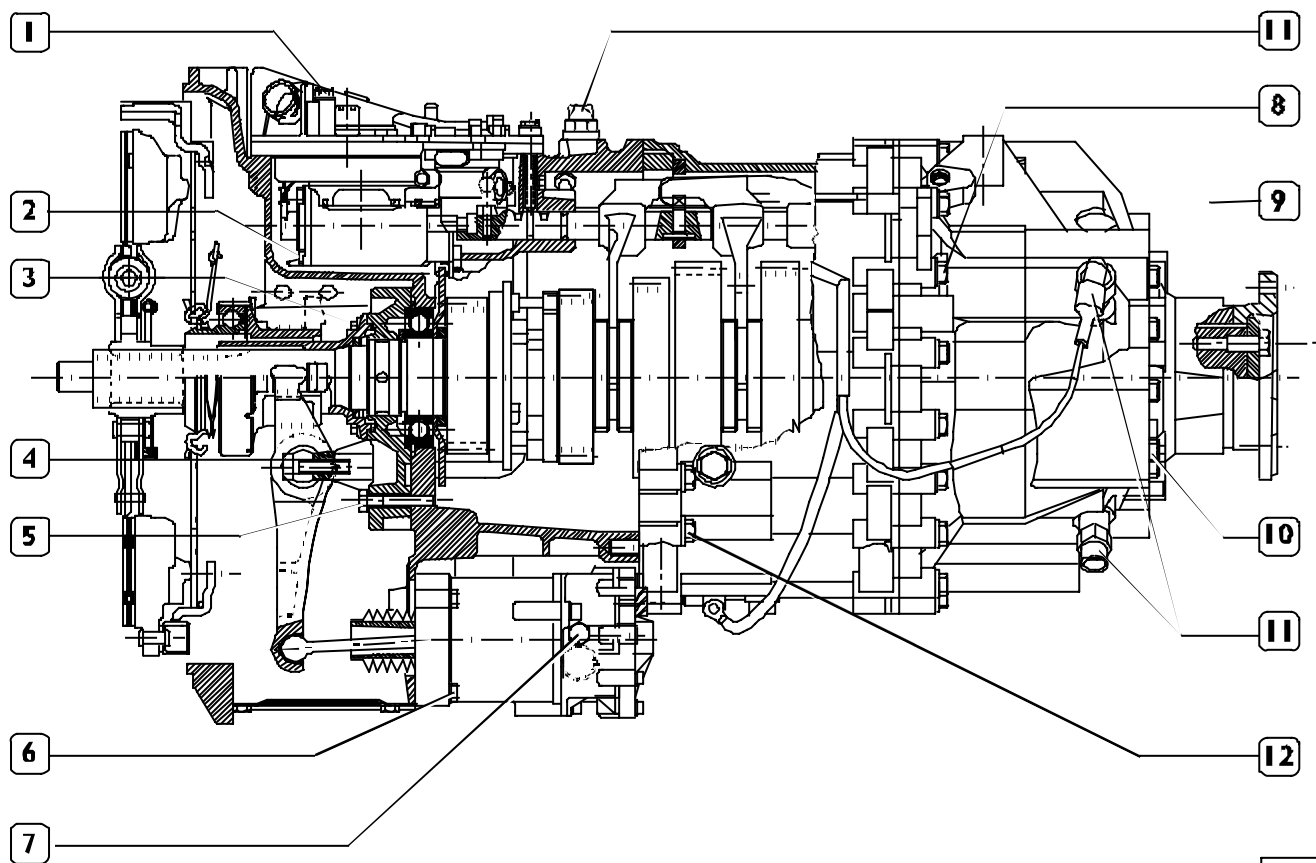






DESCRIPTION		TORQUE	
		Nm	kgm
1	Screws fixing gearbox actuator	23	2.3
2	Screw fixing oil pump	10	1
3	Screws fixing drive input shaft cover	23	2.3
4	Screw fixing clutch uncoupling lever control pin: - M 12 8.8 - M 12 10.9	79 115	7.9 11.5
5	Screws fixing cover (spread LOCTITE 241 on the thread)	79	7.9
6	Screws fixing clutch actuator	23	2.3
7	Screw cap to discharge air from clutch actuator	22	2.2
8	Screws fixing rear box to middle box	46	4.6
9	Screws fixing flange retaining plate	120	12
10	Screws fixing rear cover	5	4.6
11	Speed sensor	45	4.5
12	Screws fixing middle box to front box	50	5
	Pin on rod (spread LOCTITE 262 on the thread)	23	2.3
	Oil vapour vent	10	1
	Screw plug M 10x1 on rear box	15	1.5
	Screw plug M 24x1 on rear box	60	6
	Screw M12 fixing power take-off bay cover	79	7.9
	Screw plug M 24x1.5 on middle box	60	6
	Screw fixing plates retaining fork joint pins on rear box	23	2.3

Aquila Trucks Centres

 TOOLS

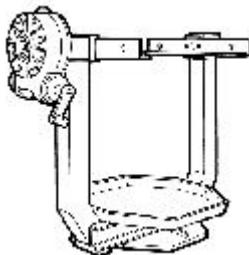
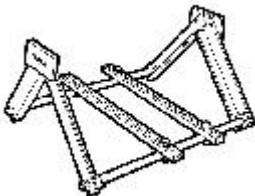
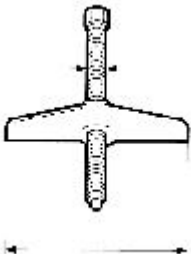
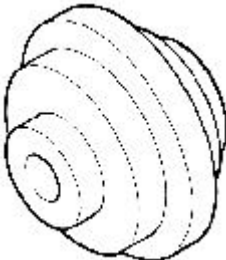
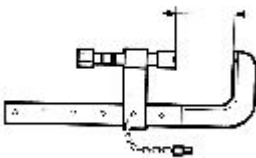
TOOL NO.	DESCRIPTION	
99305121		Hot air device
99322205		Rotary stand for overhauling assemblies
99322225		Mount to support assemblies (to fit onto stand 99322205)
99341003		Single-acting bridge
99341013		Reaction block
99341015		Clamp

Aquila Trucks Centres

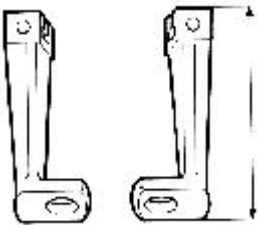
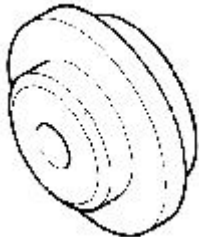
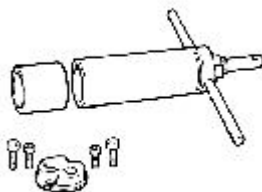
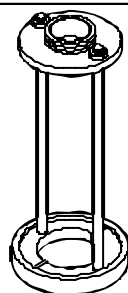
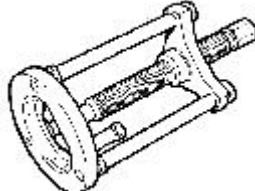
TOOL NO.	DESCRIPTION	
99341018		Pair of brackets with hole
99345057		Extractor reaction block
99345078		Extractor to remove drive input shaft bearing (use with 99345105)
993450998		Inserter to fit bearing on main shaft, rear side and to insert rear flange of gearbox
99345105		Extractor for gearbox drive input shaft bearing (use with 99345078)
99347100		Small extractor (use with specific rings with 99347132)

Aquila Trucks Centres


 


TOOLS

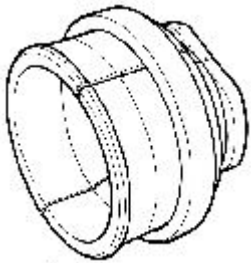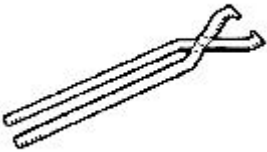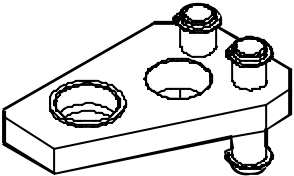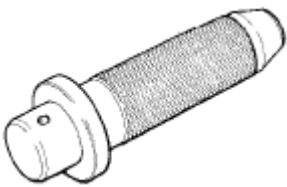TOOL NO.	DESCRIPTION	
99347132		Ring grips to extract gearbox transmission shaft bearings (use with 99345057 - 99347100)
99360323		Tool to turn drive input shaft when refitting the gearbox to the engine
99360526		Tool to extract and insert main shaft (use with 99360527) and to drive in gearbox drive input shaft bearing (use with 99345098)
99360527		Tool retaining gearbox main shaft forks (use with 99360526)
99366811		Set of M10 eyebolts (3) to remove and refit gearboxes
99370006		Grip for interchangeable drifts

Aquila Trucks Centres

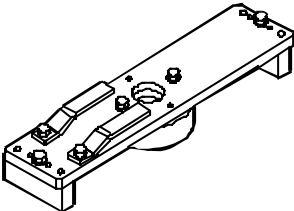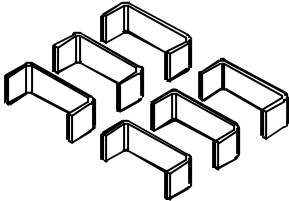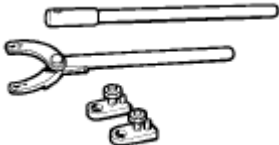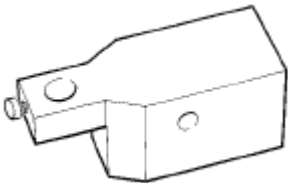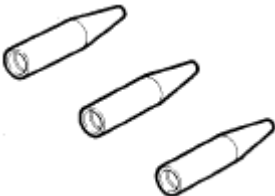TOOL NO.	DESCRIPTION	
99370007		Grip for interchangeable drifts
99370153		Tool for positioning main shaft when removing the transmission shafts and for retaining gearbox reverse gear pins
99370172		Tools (6) to mount gearbox epicyclic reduction gear train synchronizer rings
99370317		Reaction lever with extension to fasten drive output flange
99370415		Dial gauge base to adjust transmission shaft bearings (use with 99395604)
99370499		Guides (no. 3) to mount Splitter synchronizing device assembly

Aquila Trucks Centres

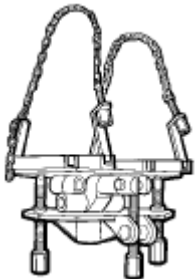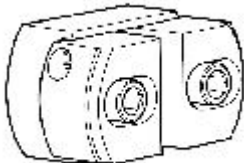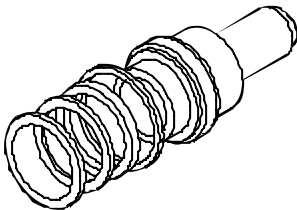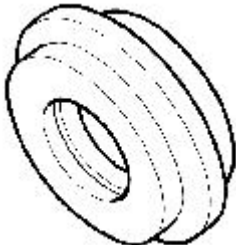TOOL NO.	DESCRIPTION	
99370629		Mount to support gearbox when removing and fitting it back on the vehicle
99374092		Drift to mount outer races of bearings (69 - 91) (use with 99370007)
99374221		Driver to mount seals on back cover
99374336		Driver to fit seals on the front cover of the gearbox (use with 99370006)
99395604		Dial gauge (0 - 10 mm)

Aquila Trucks Centres

Aquila Trucks Centres

530210 REMOVING-REFITTING GEARBOX

Removal

NOTE There follows a description of the operations for removing-refitting a gearbox with interarder that, barring the asterisked operations, hold for the gearbox without interarder too.

To remove the gearbox, proceed as follows:

- set the vehicle over a pit or on a lift;
- disconnect the battery cables to avoid any possible short-circuiting;
- remove any sound-proofing guards that may be fitted on the engine and the entry boards;
- drain engine coolant;
- disconnect the wiring via the connectors (→) and disengage it from any clamps;
- disconnect the electrical connections (3) and (18) on the electronic control unit;
- disconnect the air supply pipe (19);
- * disengage the water delivery and return pipes (4 and 12) from the sleeves (1) on the engine;
- * disconnect the water delivery pipe (4) via the sleeve (13) and disengage it from any clamps on the gearbox;
- * disconnect the water return pipe (12) via the sleeve (16) (det. C) and disengage it from any clamps on the gearbox; remove the air pipe (17) too;
- disconnect the air pipe (7) of the servo-clutch cylinder (8) (det. A);
- remove the fasteners (9) (det. A) of the servo-clutch cylinder and extract it from the gearbox;
- disconnect the drier air discharge pipe (10) from the discharge pipe (11) (det. B);
- remove the outlet pipe (11) disconnecting it from the associated collars on the silencer and turbine and disengaging it from the fastener on the chassis frame;
- put a hydraulic jack fitted with the mount 99370629 under the gearbox and sling the gearbox mount;
- remove the screws (6) (det. A) fixing the crosspiece (5) to the chassis frame and remove the crosspiece;
- disconnect the propeller shaft (15) using the screws (14) and fasten it to the vehicle's chassis frame so it won't interfere with the removal of the gearbox;
- take out the screws (2) fixing the gearbox to the engine;
- take the gearbox out of its seat.


NOTE If the cross member of the chassis frame prevents you from removing the gearbox, you need to drain off the oil from the interarder; take out the nuts and screws fixing the heat exchanger to the interarder, remove the stud bolts and detach the heat exchanger.

Refitting

Carry out the operations described for removal in reverse order and tighten the fixing nuts and screws to the required torque.

NOTE For gearboxes with interarder, proceed as follows: apply LOCTITE 510 onto the thread of the stud bolts fixing the heat exchanger and screw then onto the gearbox; connect the refrigerant fluid pipes to the heat exchanger and replenish the gearbox with the required amount of oil; fill the engine cooling system as described in Section 2 Engine.

Figure 4

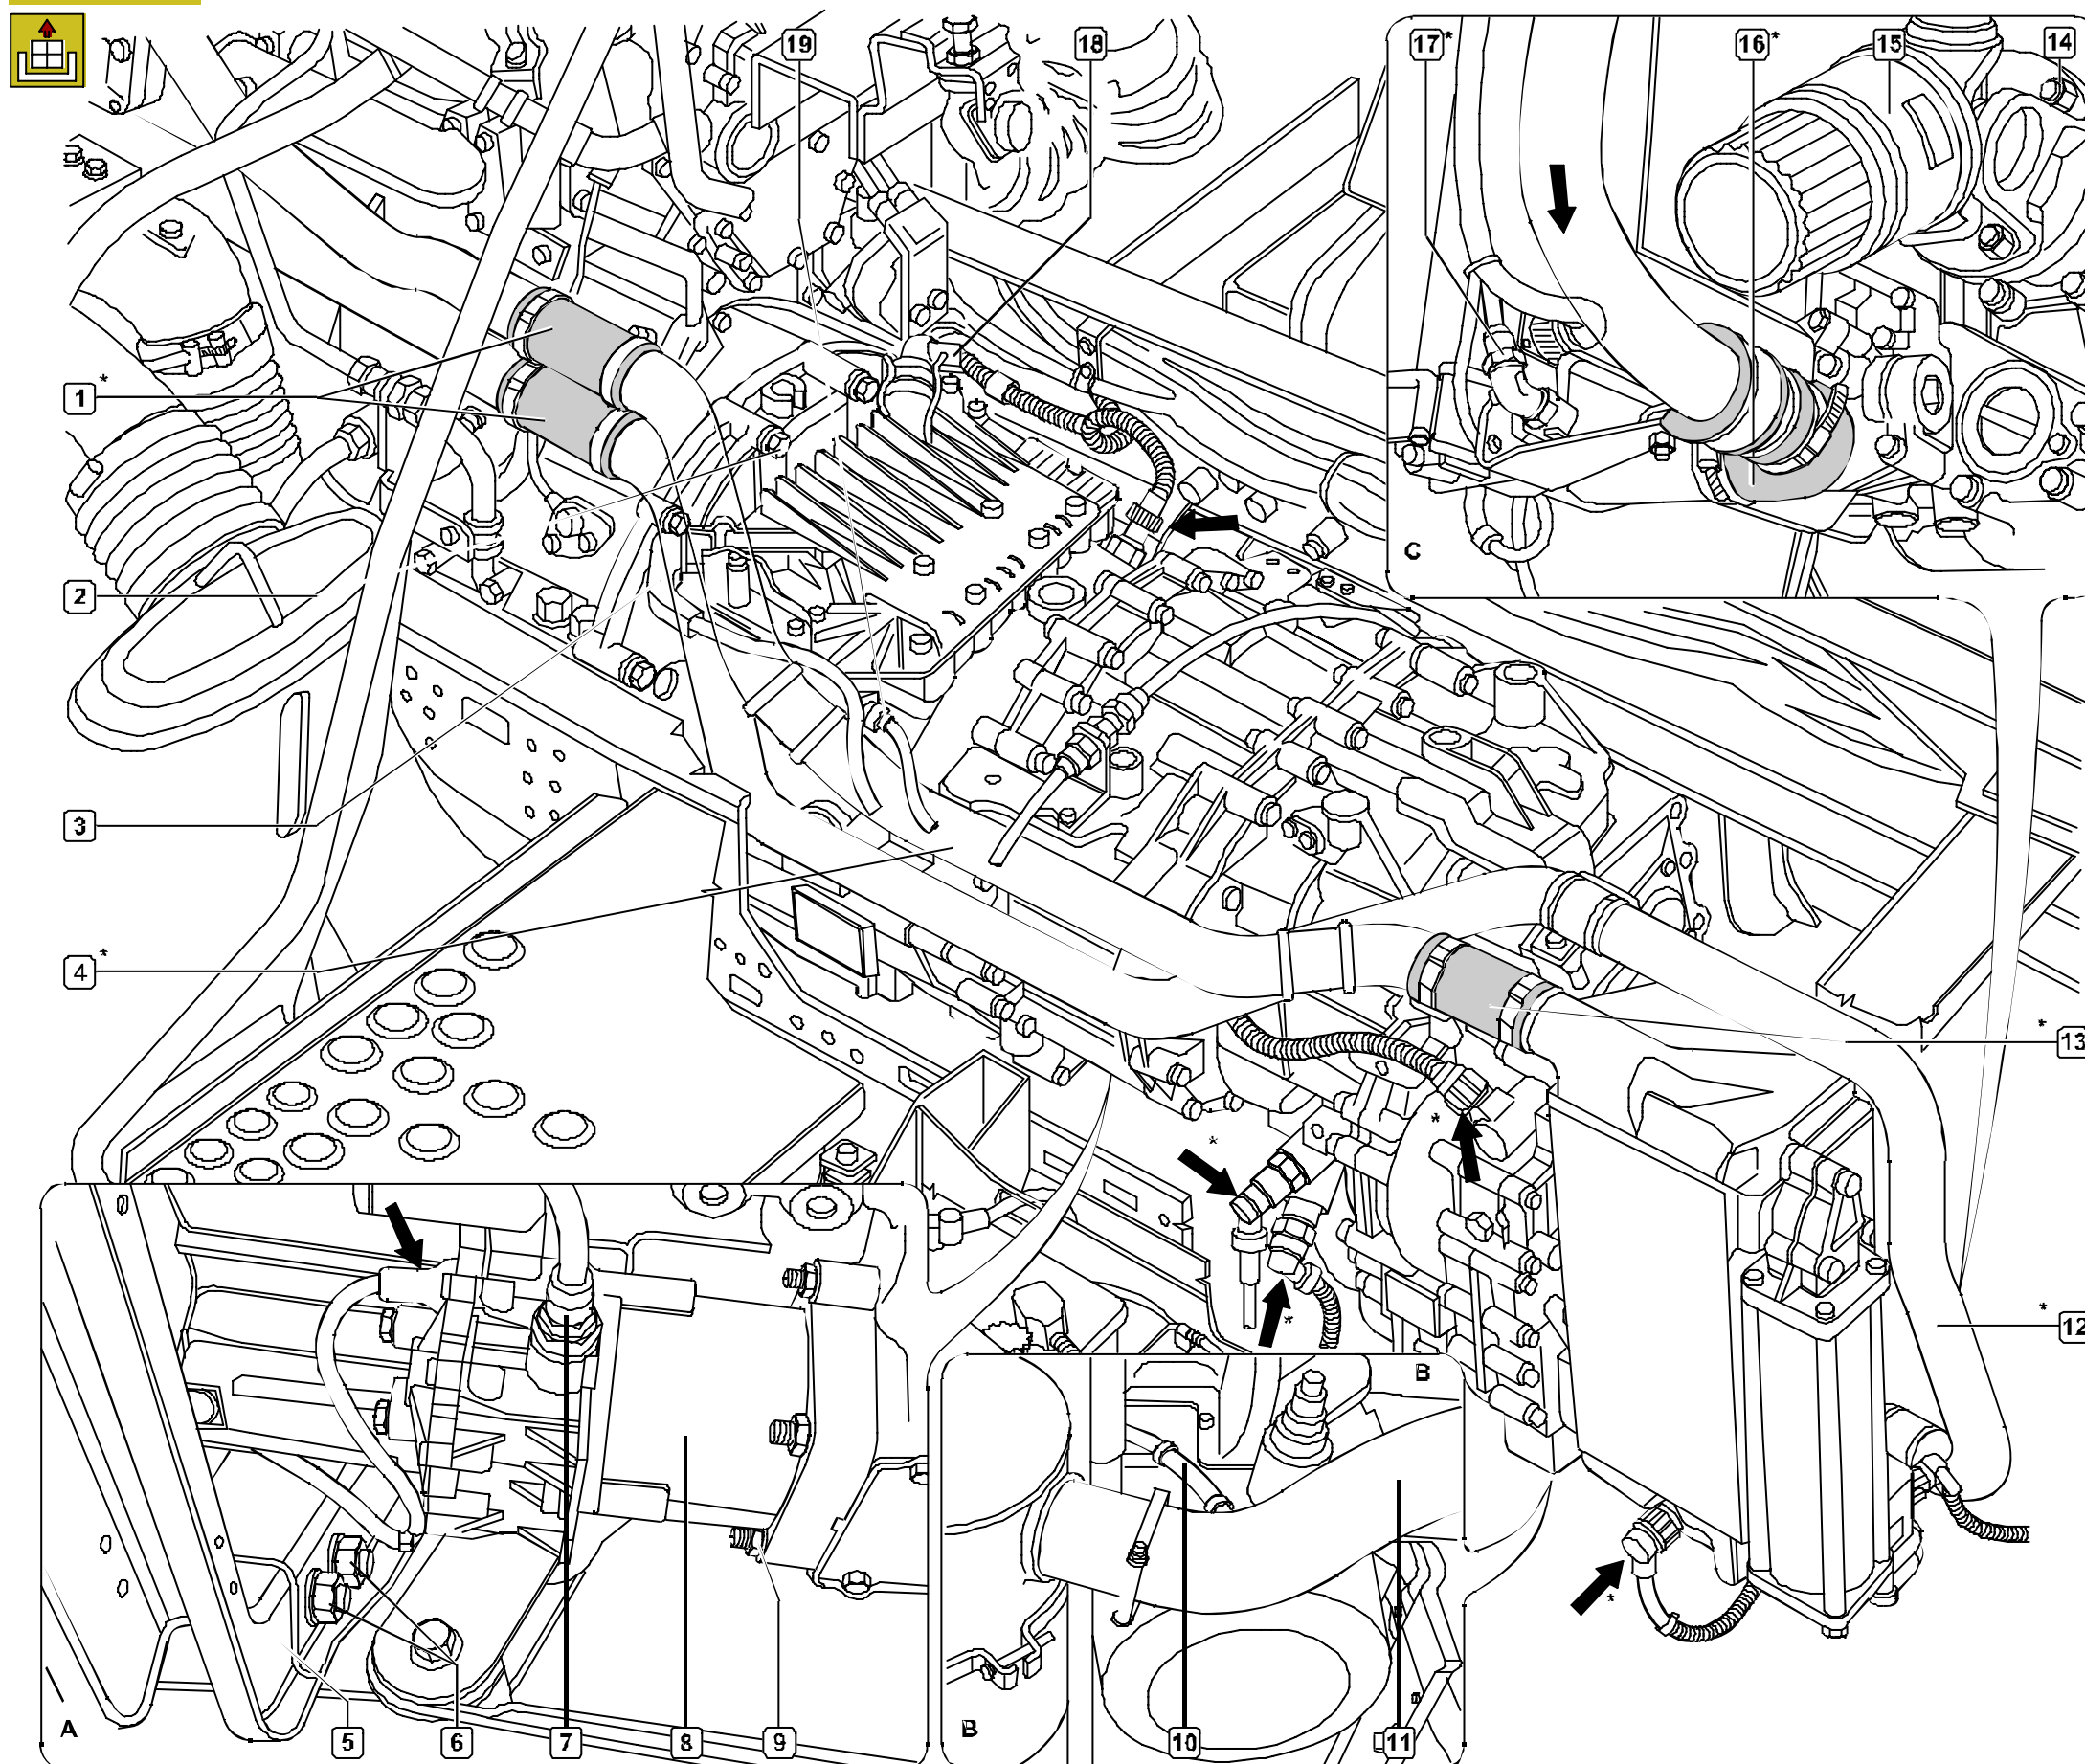

Aquila Trucks Centres

Aquila Trucks Centres

530210 OVERHAULING THE GEARBOX

Wash the assembly thoroughly before overhauling.

The specific and/or general tools must be used in the way for which they were designed.

To facilitate assembly, put the removed parts away on the specific tray in their order of removal.

Upon assembly, the following must always be replaced with new parts: the gaskets and seals, spring pins, safety plates and springs. Nuts and screws must be tightened to the prescribed torque with their thread dry and degreased.

Keep to the specific regulations when disposing of lubricant and detergents.

Checks

The gears, synchronizer rings, coupling bodies and sliding couplings must show no sign of failure or excessive toothing wear.

The main shaft must have no indentation, especially on the sliding surfaces of the gear rotation and coupling sleeves.

The reverse idle gear shafts must have a polished surface free from scoring.

The gearboxes must show no sign of cracking and the bearing seats must be neither damaged nor worn, so as to prevent the outer rings of the bearings from turning in their seats.

Check the shoulder spacers are neither worn nor damaged.

The gear coupling forks must show no sign of cracking and the relevant control rods must slide freely, but without any appreciable play, in their guide seats.


Check that the shoes of the drive forks are fully efficient.

Check that the holes, grooves and lubrication pipes are not obstructed by grease or foreign bodies.

Check the bearings are not worn, damaged or overheated.

530520 Gearbox actuator Removal

Figure 4/1

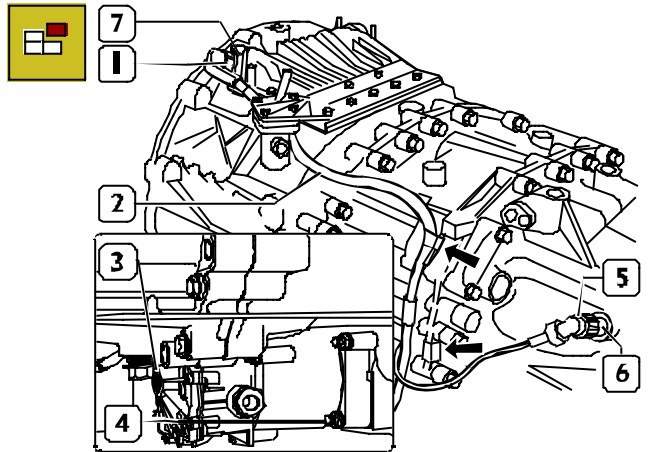


78649

Unscrew the ring nut (1 and 5) and disconnect the electric wiring (2) from the speed sensor (6 and 7).

Detach the wiring (2) from the clips (→) securing it to the middle box.

Remove the nuts (4) and detach the actuator (3) from the front box.

Figure 4/2

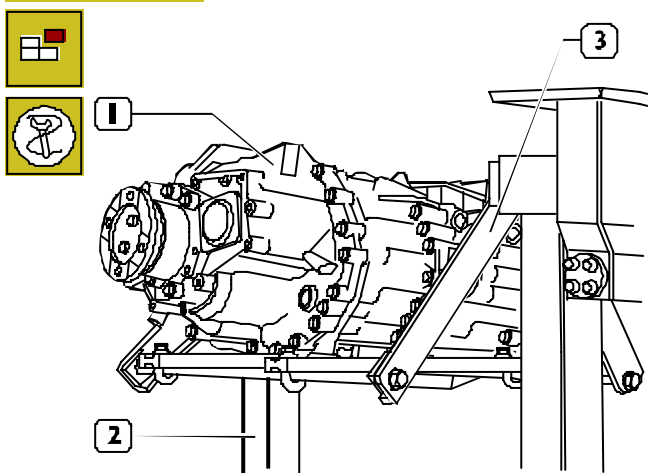


78650

Fasten the gearbox (1) to brackets 99322225 (3) on the rotating stand 99322205 (2).

Remove the plug and bleed the lubrication oil.

Aquila Trucks Centres

Figure 4/3

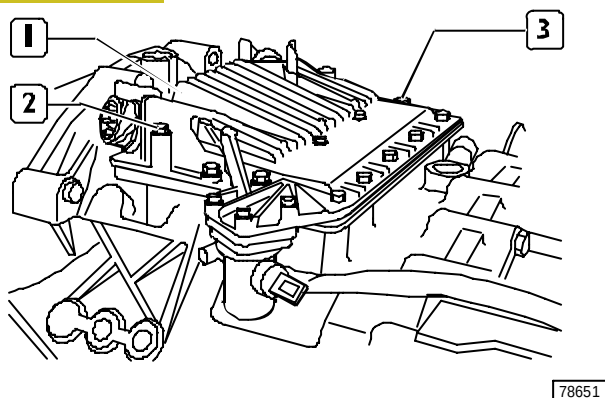

Take out the screws (2) and detach the actuator (1) with its gasket.




The electronic control unit is integrated in the actuator and these cannot be overhauled. See under the diagnosis heading for the check.

Check that the oil vapour vent (3) is not clogged; if it is, clean it.

Refitting

Figure 4/4

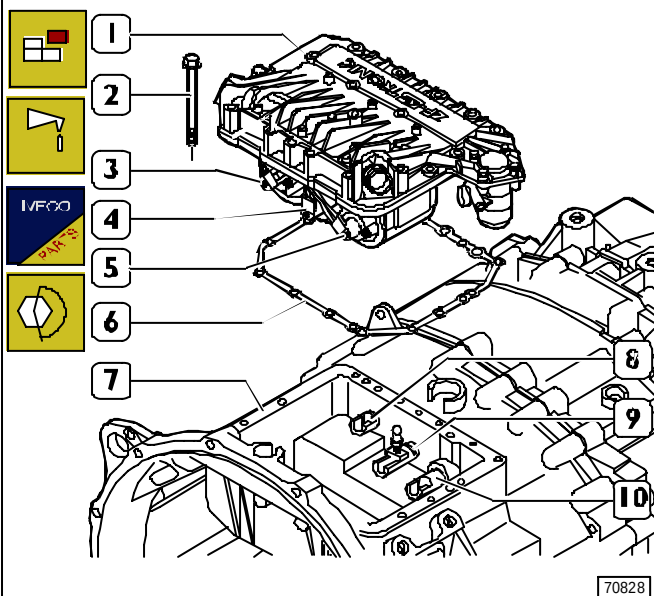


Set a new gasket (6) on the front case (7).

Lubricate the stems of the solenoid valves (3-4-5) with silicone grease and put them into a neutral position. Put the rods (8-9-10) into a neutral position. Fit the actuator (1) on the front box (7) verifying that the end of the stems of the solenoid valves is correctly positioned in the seats of the rods (8-9-10). Tighten the fixing screws (2) to the prescribed torque. After removing the gearbox from the stand used for overhaul, refit the clutch actuator (3, Figure 4/1) and make sure the wiring (2, Figure 4/1) is not damaged.

Removing the rear box

Figure 4/5

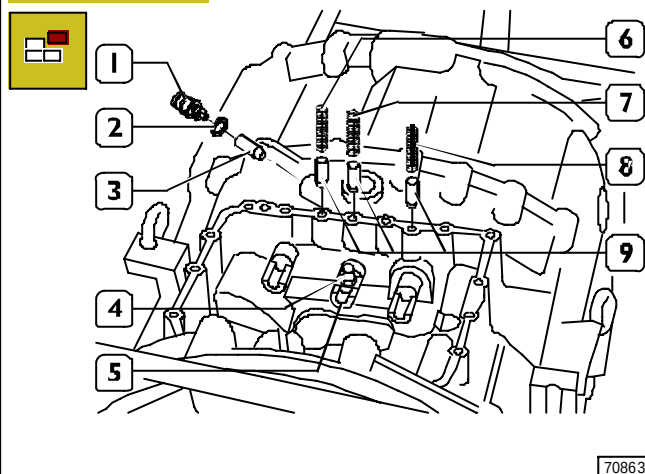

Disconnect speed actuators (1) as described in the relevant chapter.

Extract the springs (6-7-8) and the pawls (6).




The springs (7 and 8) are of equal length, the spring (6) is larger.

Remove the pin (4) from the rod (5).

Remove the switch (1) together with the gasket (2) and extract the cap (3).


Figure 4/6

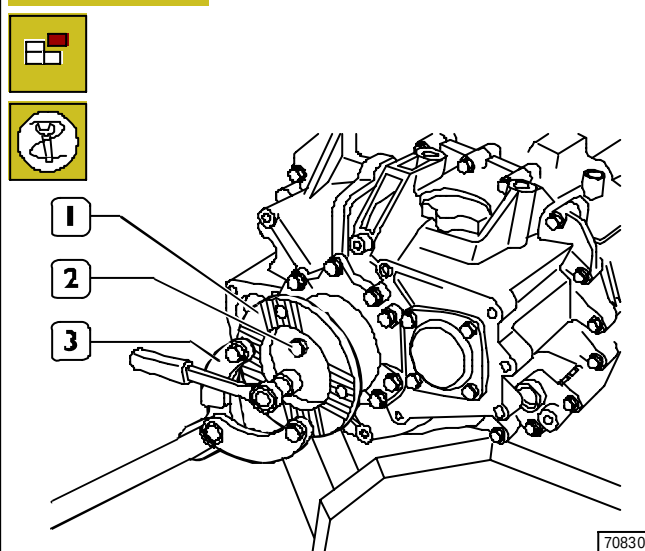

Block rotation of the sleeve (1) by applying the lever 99370317 (3) and slightly loosen the screws (2).

Aquila Trucks Centres

Figure 4/7

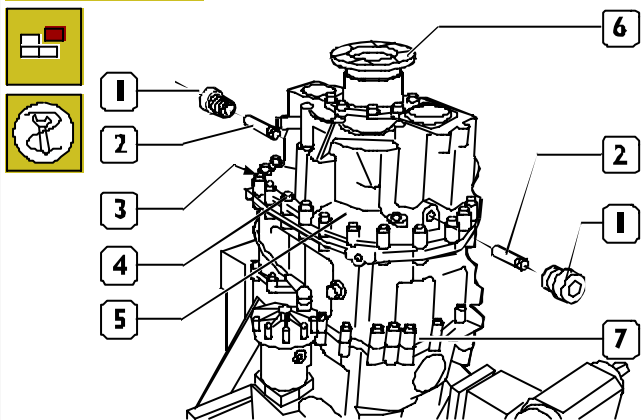


117521

Remove the screws (1) fixing the plates (2) fastening the pins (4) and extract these together with the seal (3) from the rear box (7).

Extract the two centring pins (5). Remove the screws (6).

Fit the eyebolt 99366811 to the sleeve (8) and, using special ropes and lifter, detach the rear box (7) from the middle one (9).


Figure 4/8

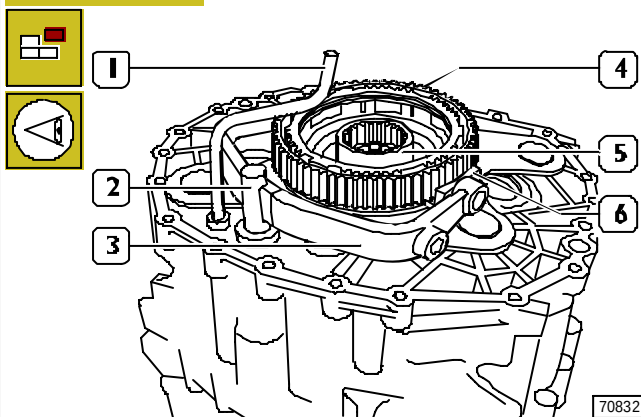

70832

Remove the oil pipe (1). Note down the assembly position of the fork (3) and plugs (6) and remove them. Remove: the rod (2), synchronizing device assembly (4) and connecting sleeve (5).

Figure 4/9

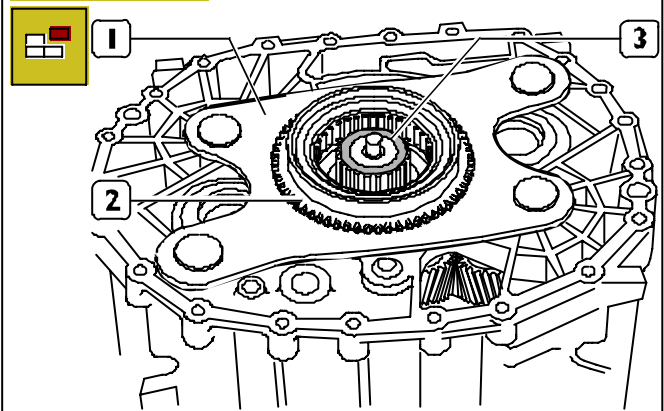


70833

Remove the adjustment ring (3) and the plate (1) together with the coupling body (2).

Removing the rear box


Figure 4/10

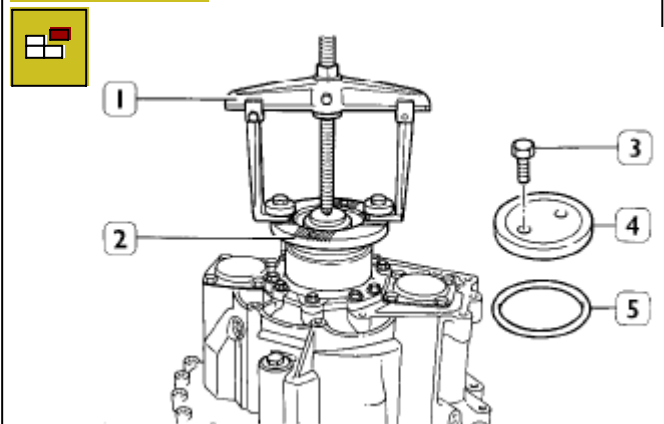

70834

Remove the screws (3), disc (4) and seal (5) and extract the sleeve (2) from the spider shaft. Should extraction prove difficult, use an extractor (1) applied as illustrated in the figure.

Figure 4/11

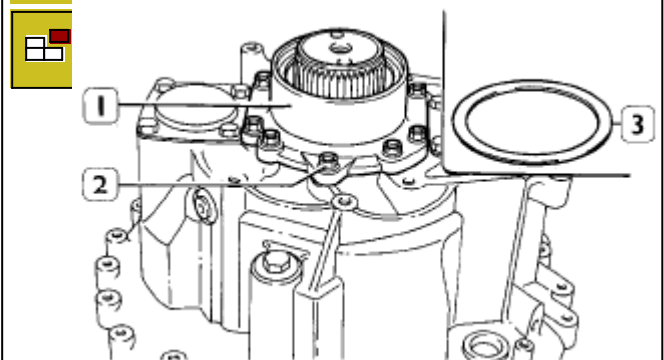


70835

Remove the screws (2) and take off the cover (1). Remove the spider shaft bearing end float adjustment ring (3).

Aquila Trucks Centres

Figure 4/12

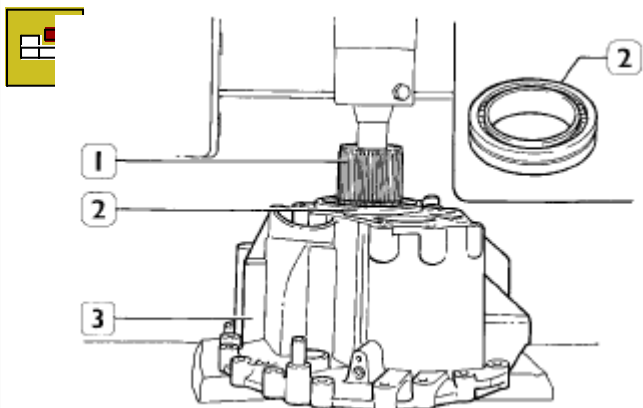


45946

Using a press, extract the spider shaft (1) from the supporting roller bearing (2). Turn the rear box (3) upside-down and extract the roller bearing (2).

Removing the epicyclic reduction gear train (E.R.G.)


Figure 4/13

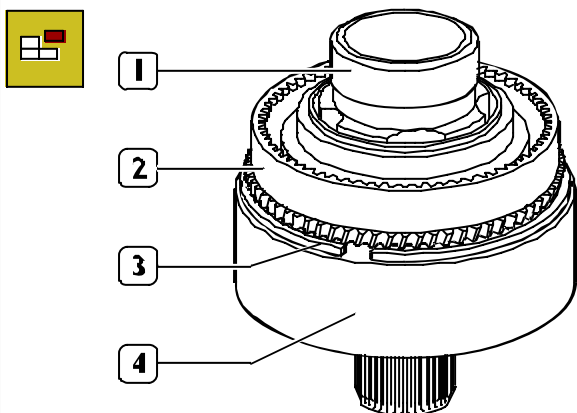

70836

Using a screwdriver, remove the circlip (3) fastening the ring gear with internal toothing (4) to the ring gear with external toothing (2) and remove them from the E.R.G. (1).


Figure 4/14

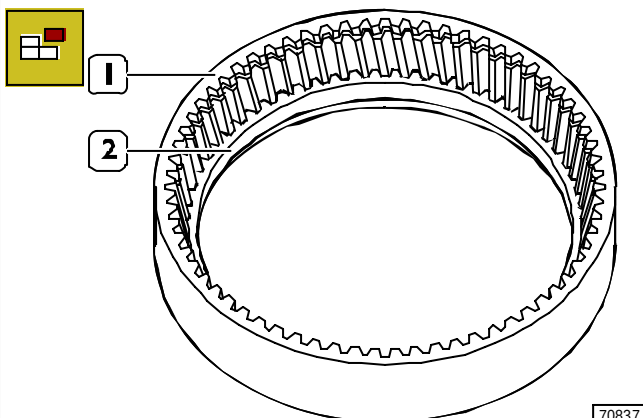

70837

Extract the toothed ring (2) from the ring gear with internal toothing (1).


Figure 4/15

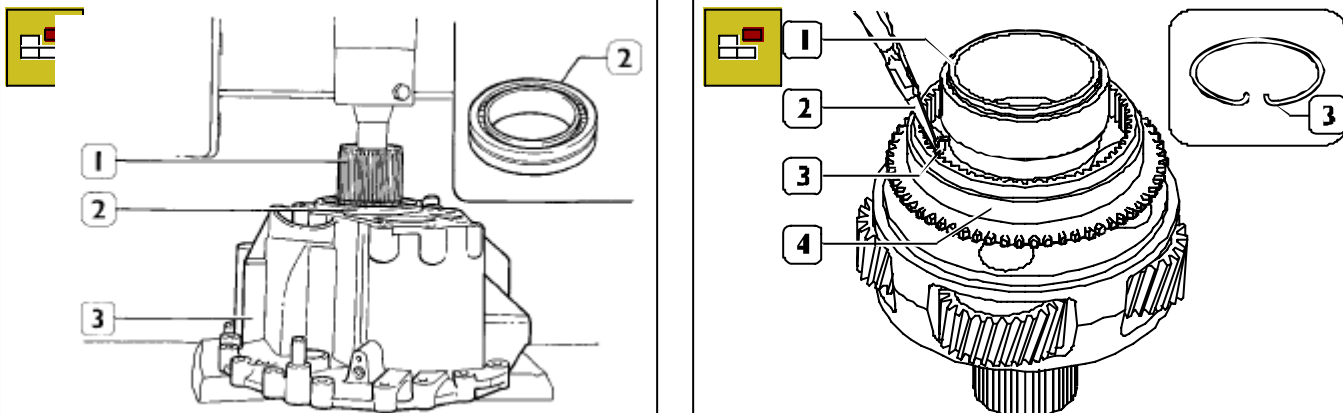

70838

Using pliers (2), tighten the ends of the circlip (3) and remove the coupling body (4) from the E.R.G. shaft (1).


Figure 4/16

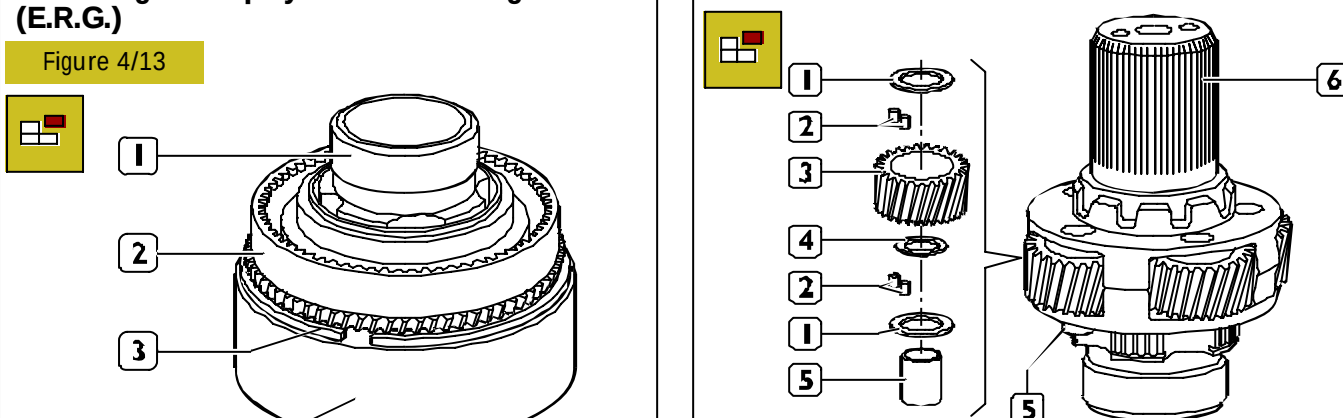

70839

Using a punch, extract the pins (5) from the spider shaft (6). Remove the planetary gears (3) from the spider shaft (6), together with the rollers (2) and shim adjustment rings (1 and 4).

Figure 4/17

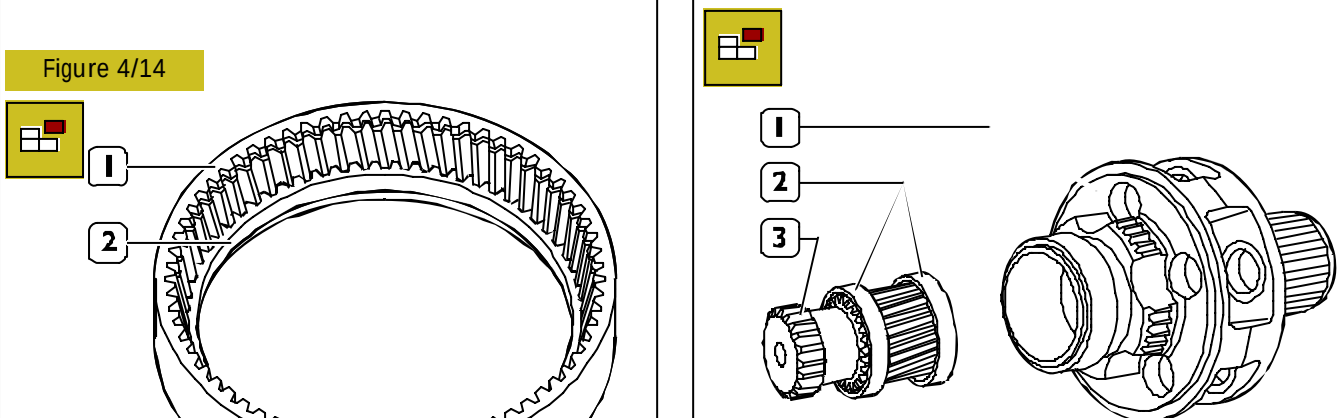


70840

Extract the toothed shaft (3) from the spider shaft (1) together with the rings (2).

Aquila Trucks Centres


Figure 4/18

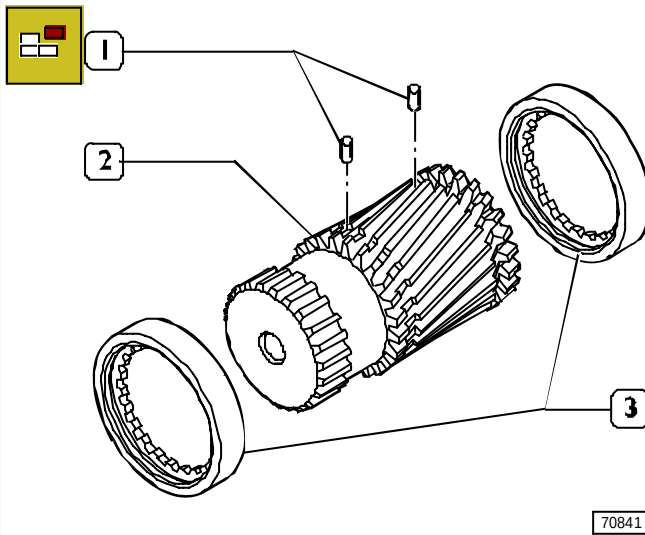

Extract one of the pins (1) from the toothed shaft (2) and extract the rings (3) from this.

70841

Figure 4/19

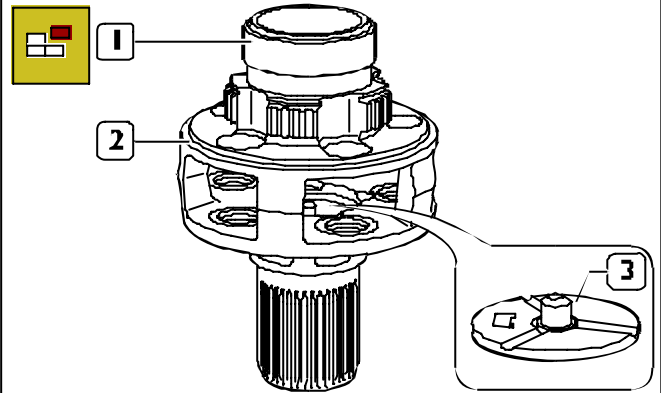


Using a suitable extractor, remove the roller bearing ring (1) from the spider shaft (2).

Using a punch, extract the disc (3) from the inside of the spider shaft (2).

70842

Figure 4/20

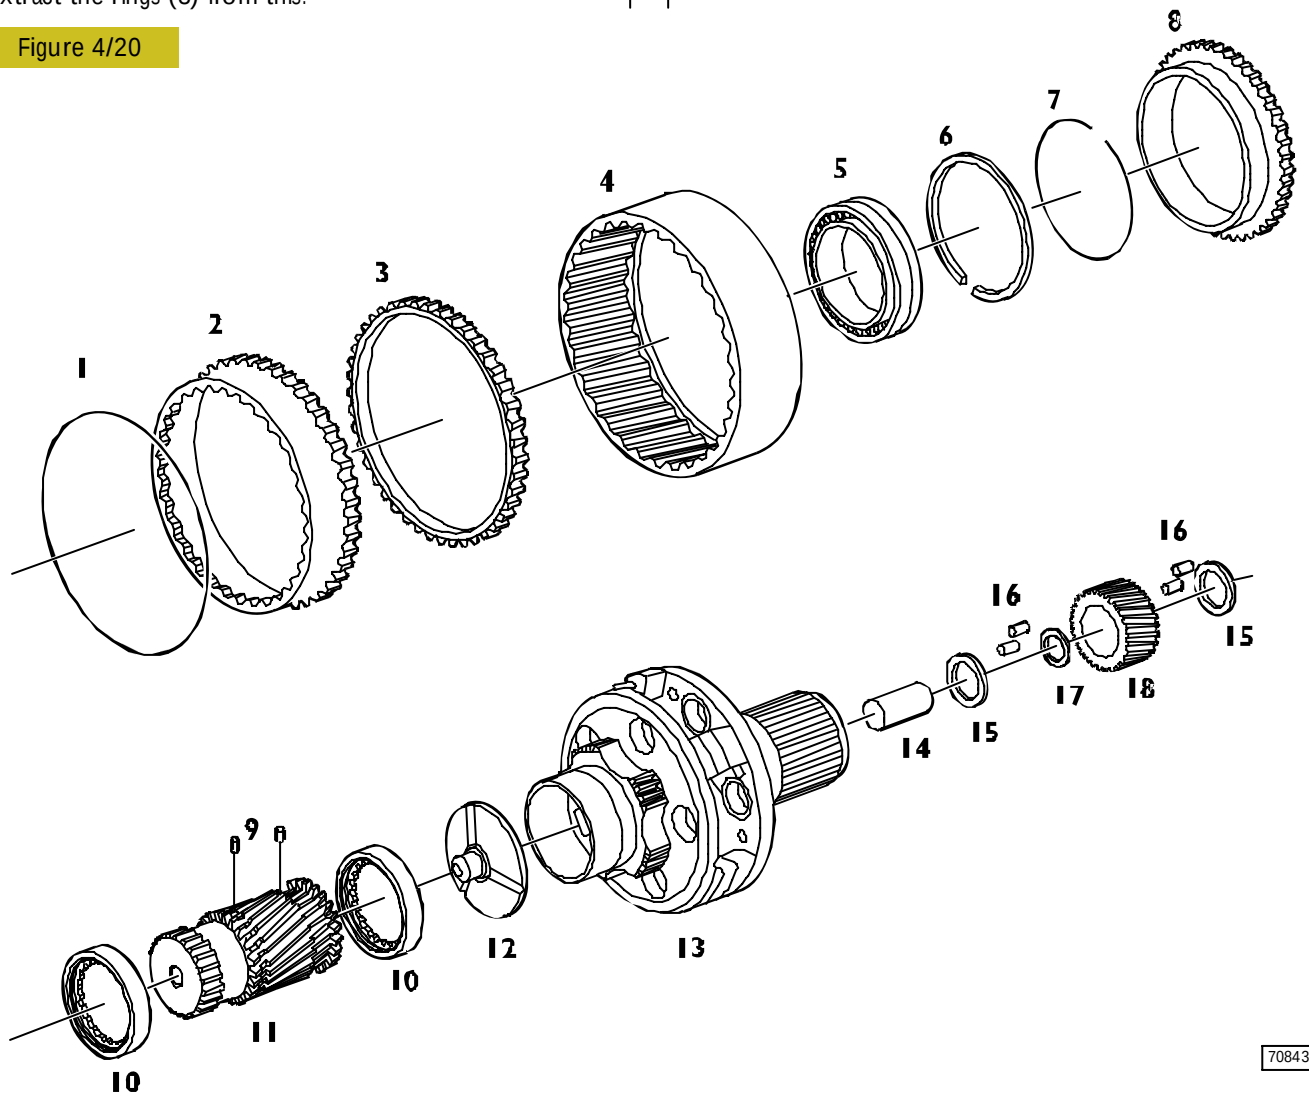

70843


PARTS COMPRISING THE E.R.G.

1. Circlip - 2. Ring gear with external toothing - 3. Toothed ring - 4. Ring gear with internal toothing - 5. Bearing - 6. Circlip - 7. Circlip - 8. Coupling body - 9. Pins - 10. Ring - 11. Toothed spindle - 12. Disc - 13. Spider shaft - 14. Pin - 15. Shim adjustment ring - 16. Rollers - 17. Shim adjustment ring - 18. Planetary gear.

Aquila Trucks Centres

Fitting the epicyclic reduction gear train (E.R.G.)

Figure 4/21

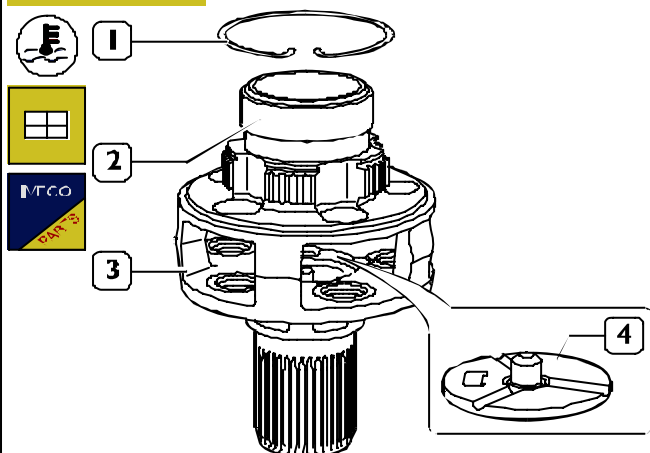


70844

Heat the inside ring (2) of the roller bearing to 120°C and fit it on the spider shaft (3).

Fit on the circlip (1). Fit on the disc (4).


Figure 4/22

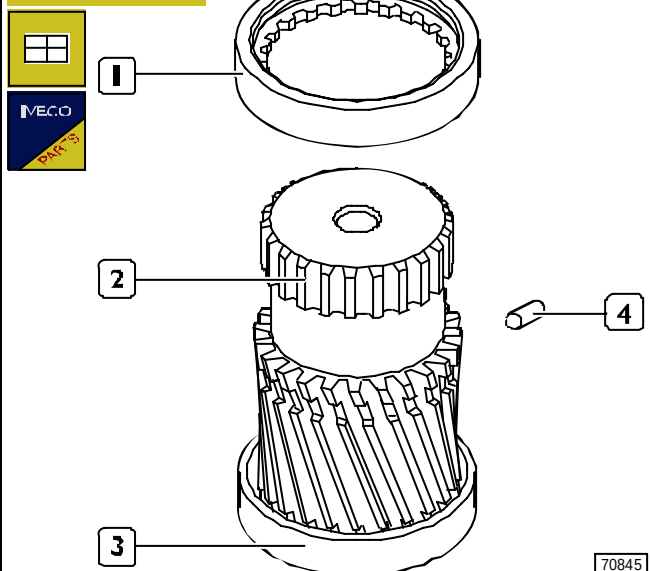

70845

Drive the rings (1 and 3) onto the toothed spindle (2) and fit on the pin (4).


Figure 4/23

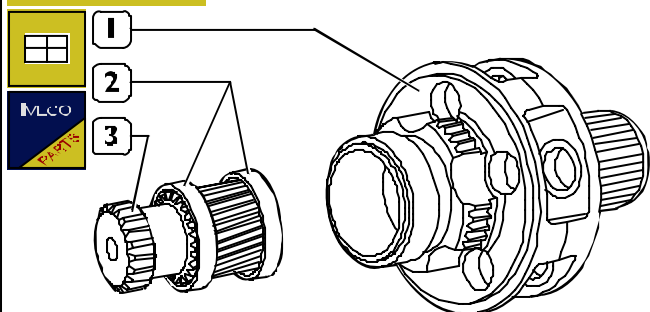

70846

Insert the spindle (3) together with the rings (2) onto the spider shaft (1).


Figure 4/24

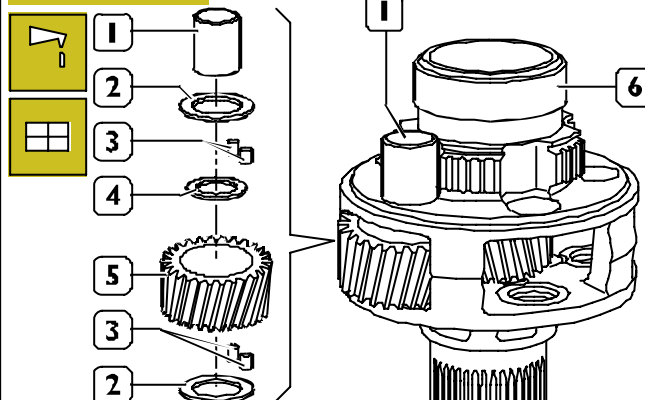

70982

Smear grease into the hole of the planetary gear (5) and insert the rollers (3) with the associated shim adjustment rings (2 and 4). Fit the planetary gears (5) onto the spider shaft (6), fastening them to it with the pins (1).


Figure 4/25

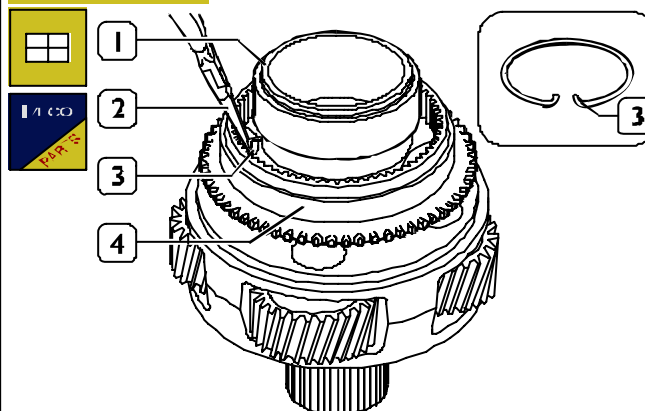

70838

Using pliers (2), tighten the ends of the circlip (3) and fit the coupling body (4) onto the E.R.G. shaft (1).

Figure 4/26

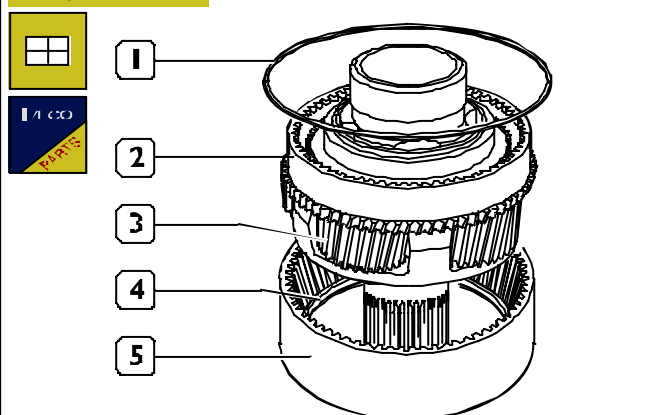


70983

Fit the ring gear with internal toothing (5) onto the spider shaft (3) together with the toothed ring (4), and the ring gear with external toothing (2) and fasten the two ring gears with the circlip (1).

Aquila Trucks Centres


Figure 4/27

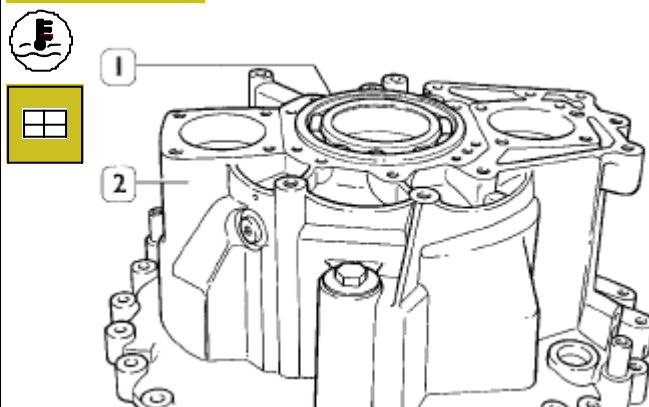

45951

Heat the seat of the bearing (1) of the rear box (2) to 120 °C and mount the bearing (1).

Figure 4/28

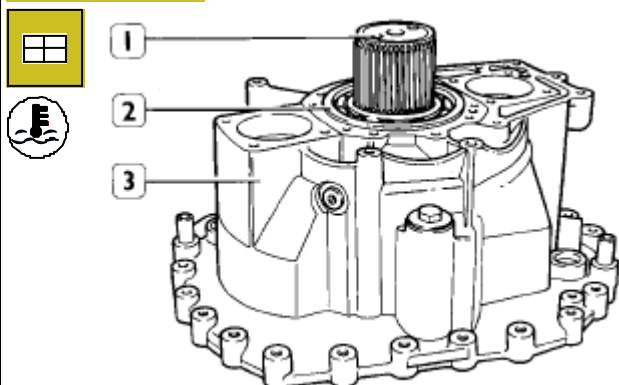


45943

Rest the spider shaft (1) on an appropriate spacer.

Heat the inside ring of the bearing (2) to 120 °C and drive it together with the rear box (3) onto the spider shaft (1).

Adjusting epicyclic reduction gear train bearing end float

Figure 4/29

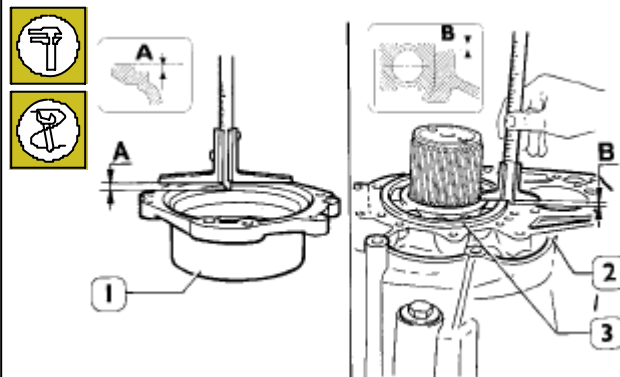

70847

Determine the ball bearing end float adjustment thickness (3) by proceeding as follows:

- measure the depth of the seat on the cover (1) of the bearing (3), distance A;
- measure the protrusion of the bearing (3) from the surface of the rear box (2), distance B.

The thickness S of the adjustment ring is determined by the following equation:

$$S = (A - B) - C$$

Where:

A and B = measurements

C = end float 0 ± 0.1 mm

For example:

A = 5.4 mm


B = 5 mm

C = 0 ± 0.1 mm

S = $(5.4 - 5) - (0 \pm 0.1 \text{ mm}) = 0.3 \pm 0.4$ mm

Aquila Trucks Centres


Figure 4/30

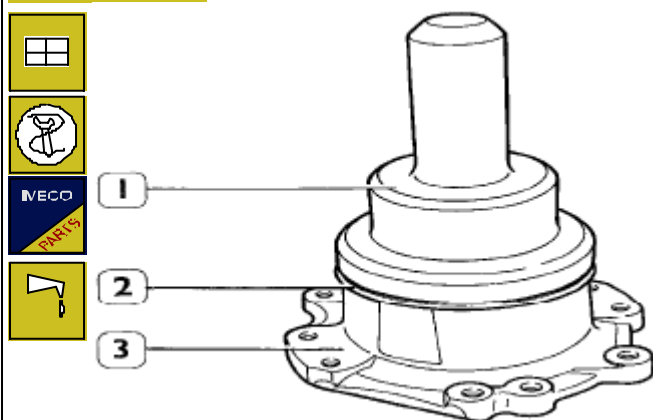

45954

Using the driver 99374221 (1), fit the seal (2) in the cover (3).


Figure 4/32

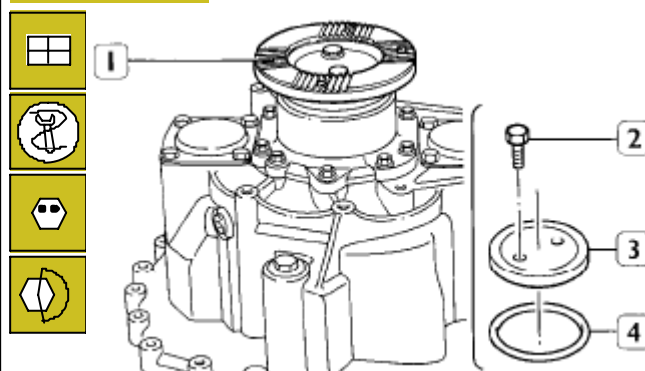

70849

Heat the sleeve (1) to 90 °C and fit it onto the spider shaft (1). Fit on a new seal (4), the disc (3) and screws (2) and tighten them to the prescribed torque.

Figure 4/31

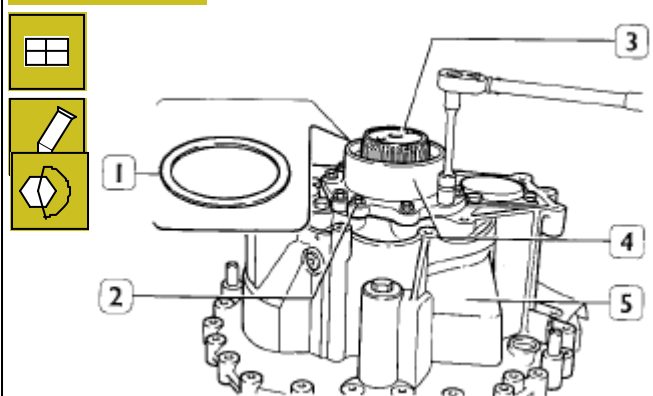


70848

Mount the adjustment ring (1), of the thickness determined in the preceding measurement, on the bearing (2), Figure 4/28) of the spider shaft (3).

Spread IVECO sealant 1905685 on the mating surface of the cover (4) with the box (5) and fit it onto the box, tightening the screws (2) to the prescribed torque.

Figure 4/33

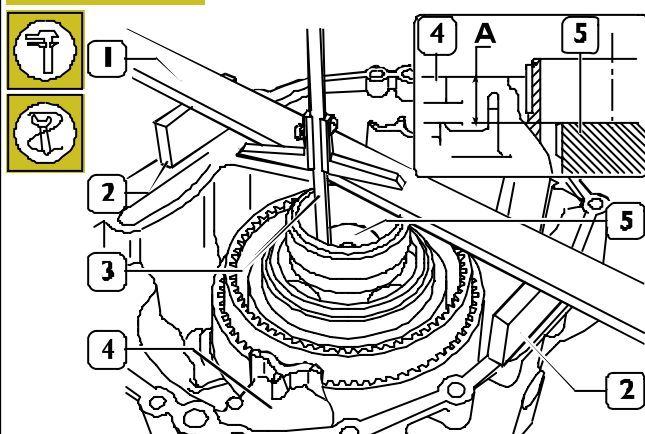


70850

Position two calibrated blocks (2) on the rear box (4). Place a calibrated rule (1) on them and, using a depth gauge (3), measure the distance between the top side of the rule and the end of the spider shaft (5), distance A.

Aquila Trucks Centres

Figure 4/34

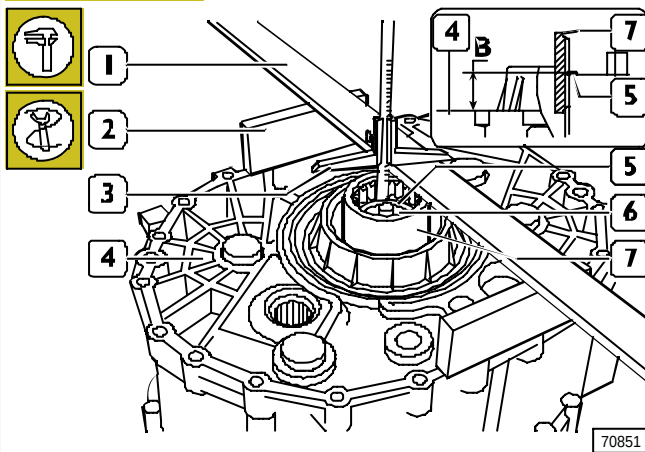

Fit the connecting sleeve (7) together with the circlip (5) on the main shaft (6).

Position two calibrated blocks (2) on the middle box (4) and place a calibrated rule (1) on them.



The calibrated blocks and rule must be the same ones used in the preceding measurement.

Using a depth gauge (3), measure the distance between the top end of the circlip (5) and the top side of the calibrated rule, distance B.



The thickness S of the main shaft end float adjustment ring is determined by the following equation:

$$S = (A - B) - 2$$

For your information (see Figure 4/36), subtracting the thickness of the calibrated blocks and rule:


- from the distance A gives the distance X corresponding to the distance between the end of the spider shaft (2) from the mating surface of the rear box (1).
- from the distance B gives the distance Y corresponding to the distance between the circlip (4) and the mating surface of the middle box (3).

Figure 4/35

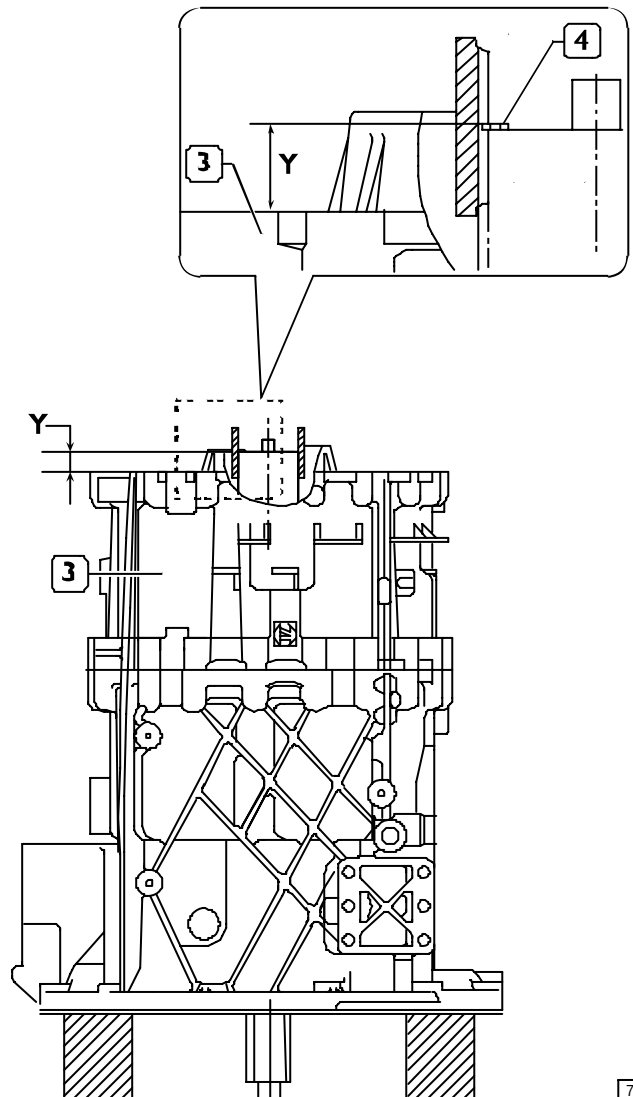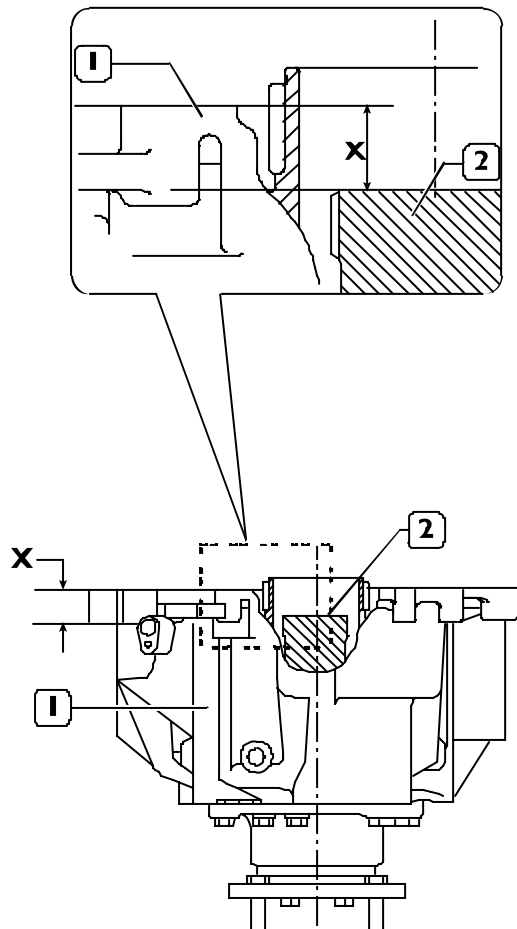

Aquila Trucks Centres

Figure 4/36

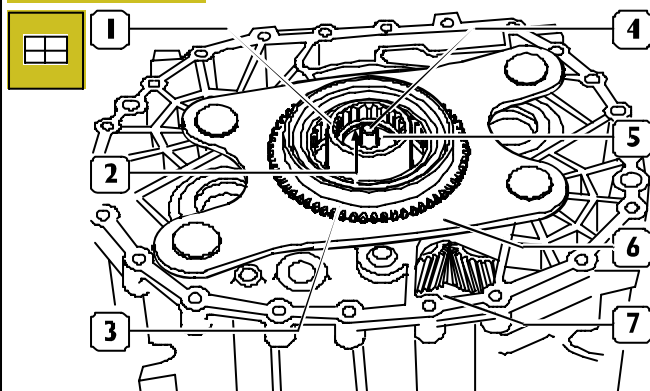

70853


Position the adjustment ring (2) (of the thickness determined in the preceding measurements) on the main shaft (5). Mount the connecting sleeve (1) and the tube (4).

Mount the plate (6) together with the coupling body (3).

Synchronizing device assembly for engaging normal or reduced gears

Removal

Figure 4/37

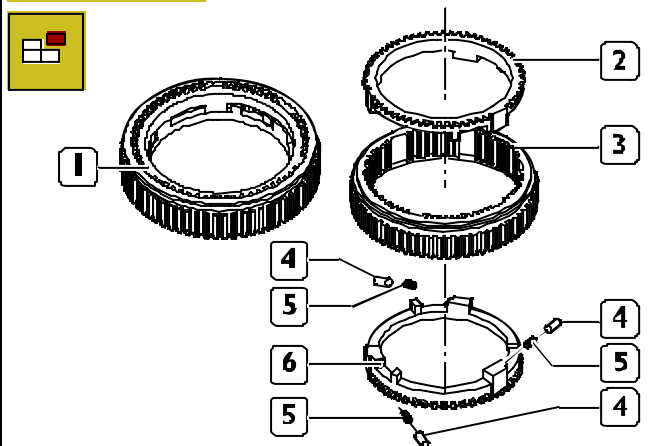


70854

1. Synchronizing device assembly - 2. Synchronizing device ring - 3. Sliding sleeve - 4. Pawl - 5. Spring - 6. Synchronizing device ring.

Put a cloth on the synchronizing device assembly (1) so that, when dismantling it, the springs (5) and pawls (4) are held back as they come out of their seats.

Fitting


Figure 4/38

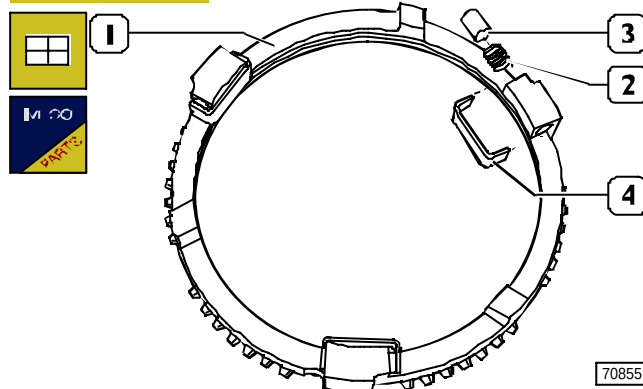

70855

Put the springs (2) and pawls (3) into the seats of the synchronizing device rings (1) and fasten them with the tools 99370172 (4).


Figure 4/39

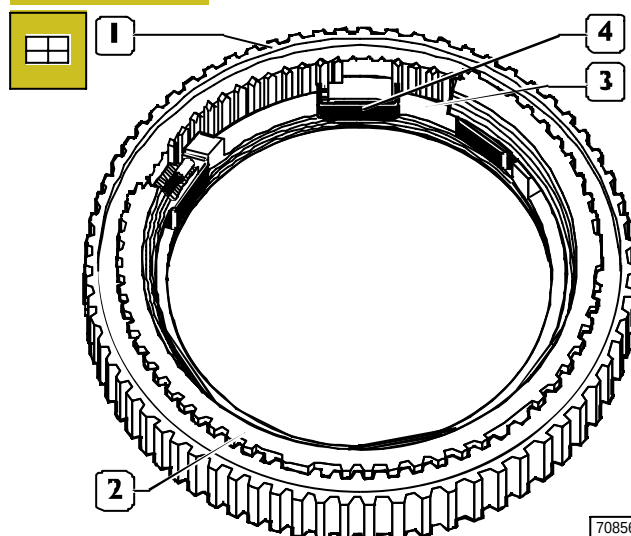

70856

Position the synchronizing device ring (2) on the synchronizing device ring (3) so that it is possible to fit the sliding sleeve (1) onto them. On completing assembly, remove the tools 99370172 (4).

Figure 4/40

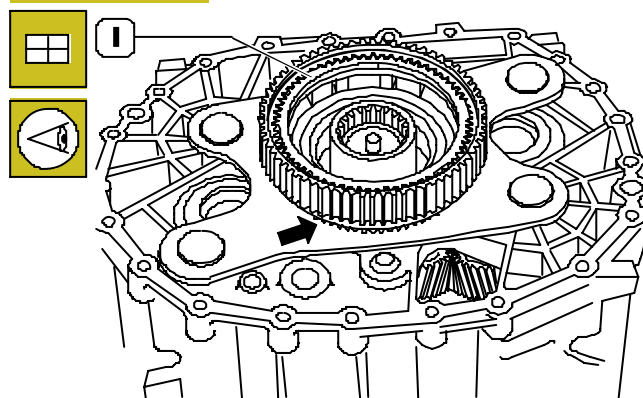


70857

Fit the synchronizing device assembly (1) on the coupling body (3, Figure 4/36) with the ring groove (→) facing downwards.

Aquila Trucks Centres

Figure 4/41

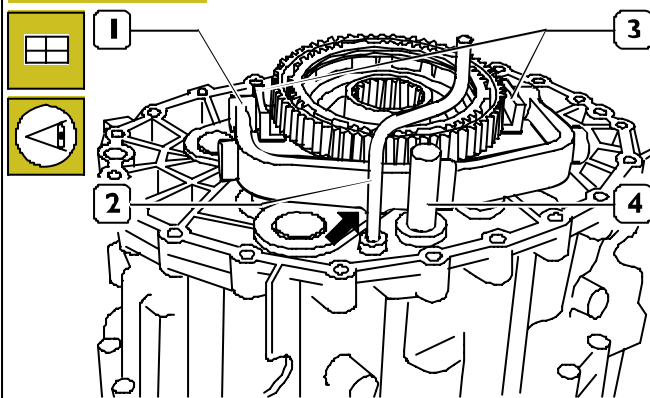


70858

Position the fork (1) with the plugs (3) and the reliefs (') facing as illustrated in the figure.

Fit on the rod (4) and connect it to the fork (1). Fit on the oil pipe (2).


Figure 4/42

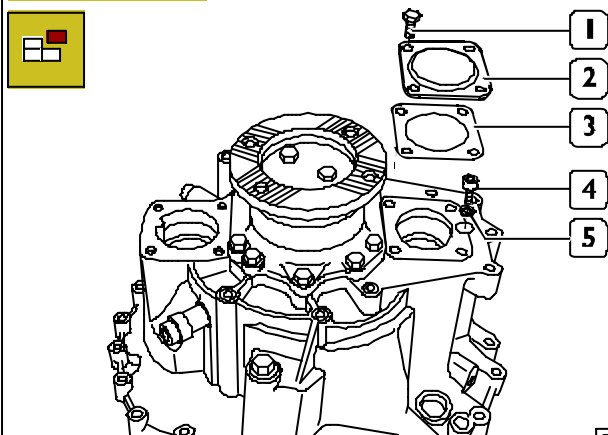

70859

Take out the screws (1) and remove the cover (2) with its seal (3). Remove the screw (4) with the washer (5).

Figure 4/43

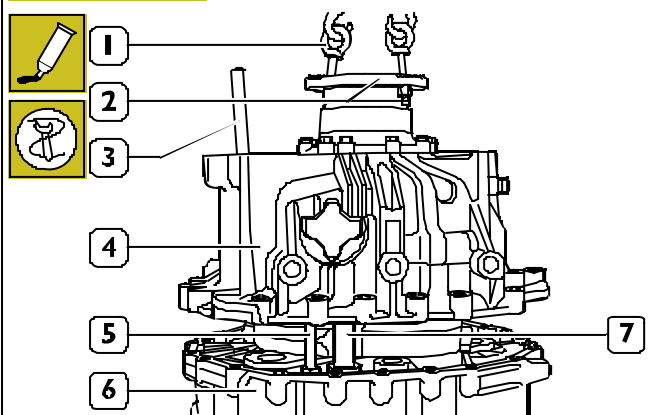


70860

Spread IVECO sealant 1905685 onto the mating surface of the middle box (6). Fit the eyebolts 99368811 (1) to the sleeve (2). Using ropes and a lifter, position the rear box (4) coaxially to the middle one (6).

Insert the rod (3) of appropriate diameter in the hole for the screw (4, Figure 4/42) and in the oil pipe (5) to guide this into its seat, while lowering the rear box (4). Lower the rear box (4), paying attention that the spider shaft, oil pipe (5) and rod (7) go into their seat correctly.

Figure 4/44

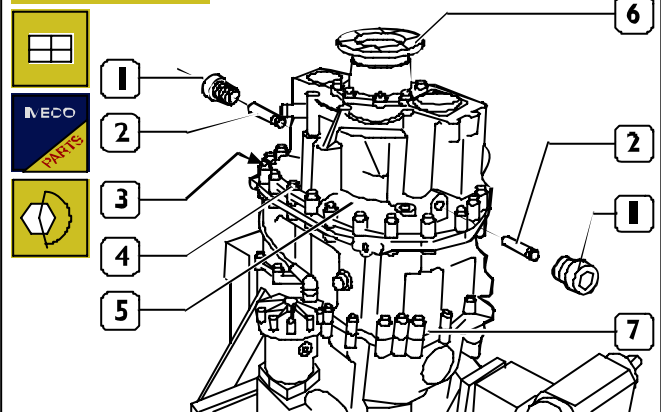


117521

Screw down the screws (6) without tightening them; insert the centring pins (5) and tighten the screws (6) to the prescribed torque.

Fit the fork joint pins (4) with fresh seals (3) and tighten the screws (1) fixing the fastening plates (2) to the prescribed torque.

Figure 4/45

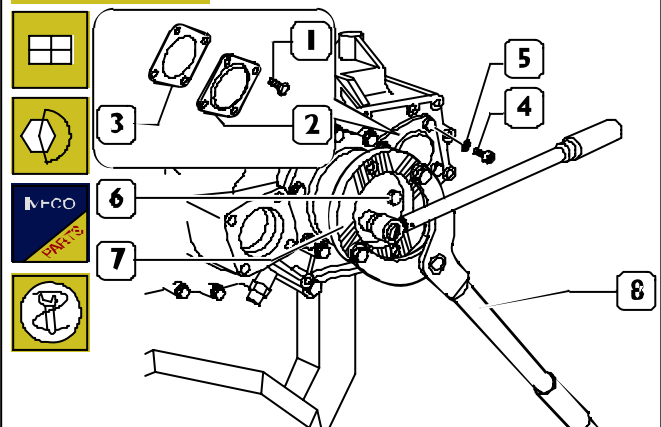

70862


Fit the screw (4) with a new washer (5) and tighten it to the prescribed torque.

Fit the cover (2) with a fresh seal (3) and tighten the fixing screws (1) to the prescribed torque.

Block rotation of the sleeve (7) by applying the lever 99370317 (8) and tighten the fixing screws (6) to the prescribed torque.

Aquila Trucks Centres

Figure 4/46

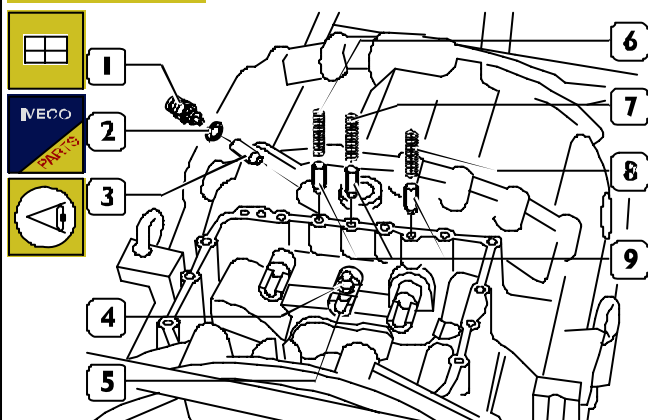


Fit the cap (3) and the switch (1) with a new gasket (2). Spread LOCTITE 262 onto the thread of the pin (4), screw it onto the rod (5) and tighten them to the prescribed torque. Fit the pawls (9) and the springs (6-7-8).



The springs (7 - 8) are of equal length, the spring (6) is larger.

Figure 4/47

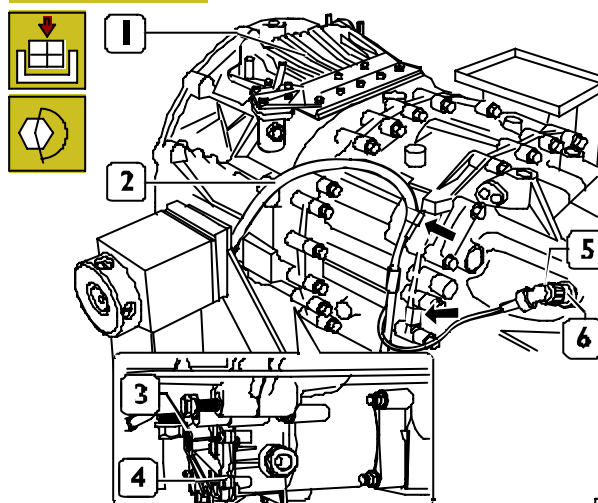


Refit the gear actuator (1) as described under the relevant heading.

Connect the electric wiring (2) to the speed sensor (6), tighten the fixing ring nut (5) and secure the wiring (2) to the box by inserting it in the clips (→).

Refit the clutch actuator (3) and tighten the nuts (4) to the prescribed torque.

Figure 4/48

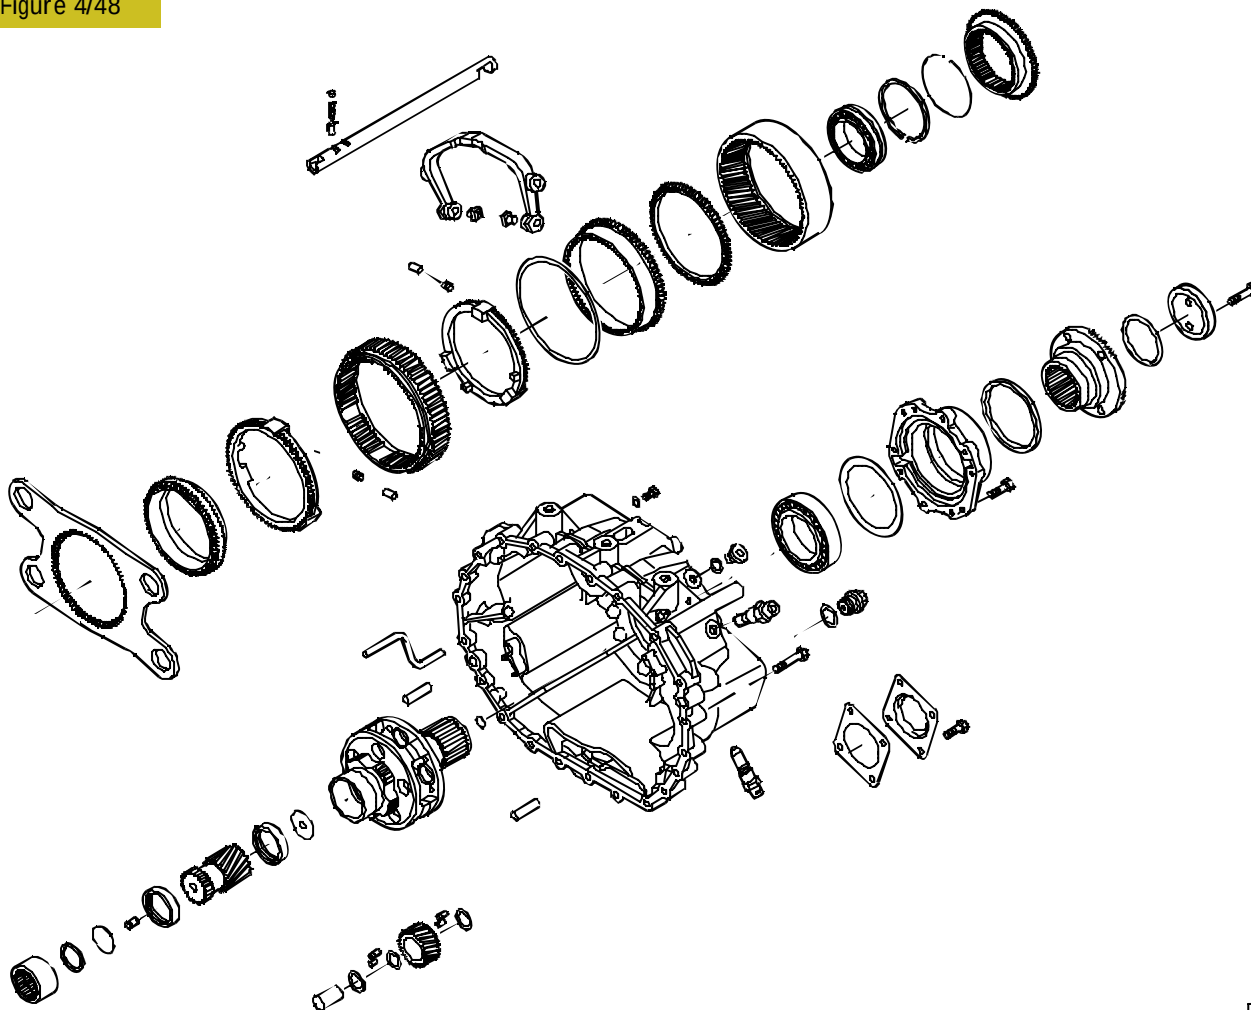


COMPONENT PARTS OF THE REAR BOX OF THE EPICYCLIC REDUCTION GEAR TRAIN

Aquila Trucks Centres


Removing the middle box

Figure 4/49

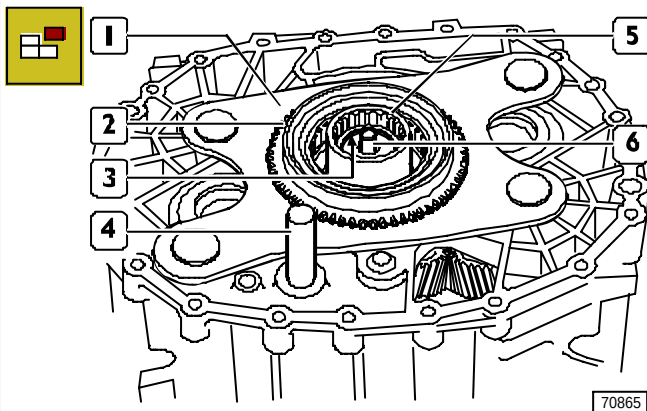

Detach the gear actuator and the rear box as described under the relevant headings. Remove the E.R.G. drive rod (4), connecting sleeve (5), adjustment ring (3) and the plate (1) together with the coupling body (2). Remove the small pipe (6).

Figure 4/50

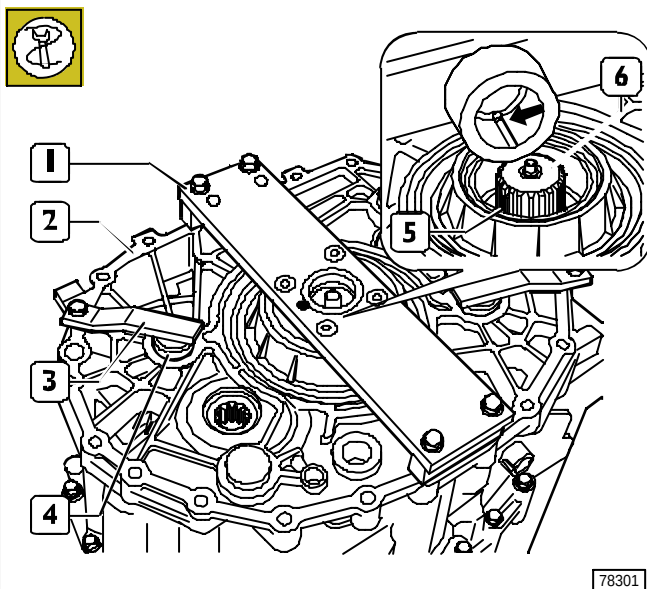


Fit the plate 99370153 (1) to the middle box (2) so that the groove inside the plate coincides with the key (5) of the main shaft (6).

Fasten the pins (4) by fitting the brackets (3) of the plate 99370153 to the middle box (2).

Turn the gearbox through 180°.


Figure 4/51

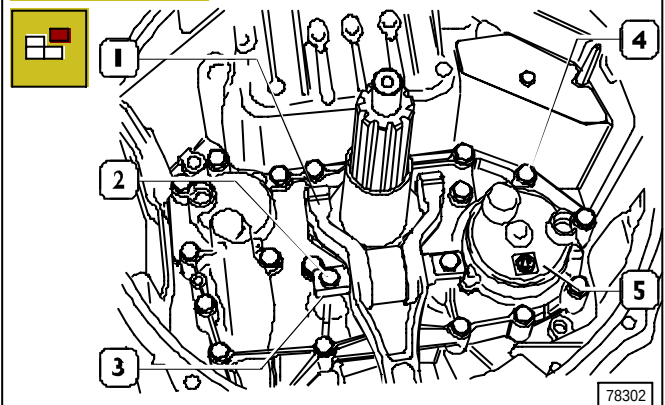

Take out the screws (2) and remove the pin (3) in the joint of the clutch uncoupling lever (1) with this lever.


Remove the screws (4) fixing the front cover (5) to the front box.

Figure 4/52

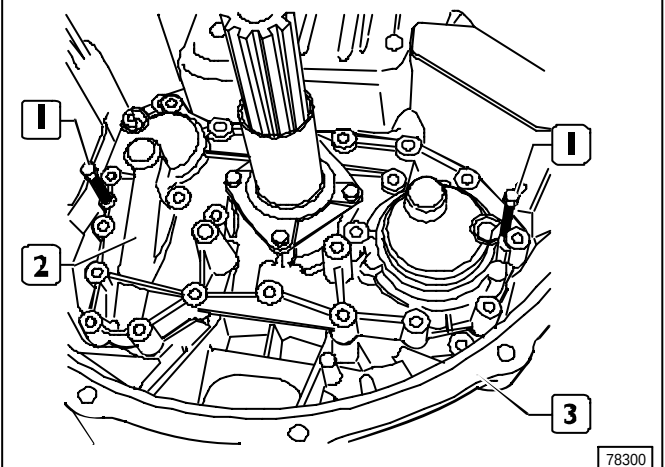

Screw down two screws (1) into the front cover (2) and detach this from the front box (3).


Figure 4/53

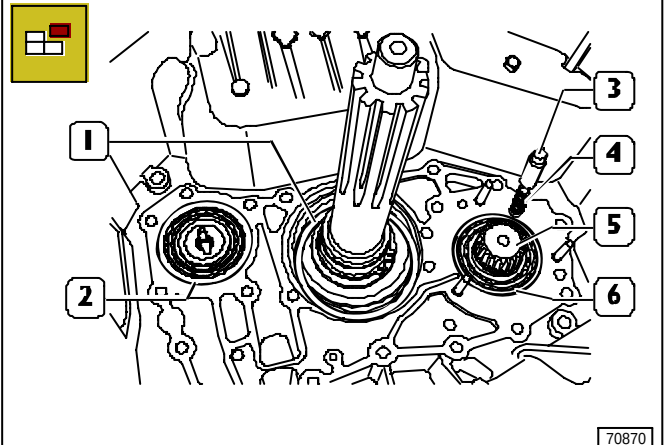

Remove the cap (3), the spring (4) from the transmission shaft (5) and the adjustment rings (1-2-6 -).


Aquila Trucks Centres

Figure 4/54

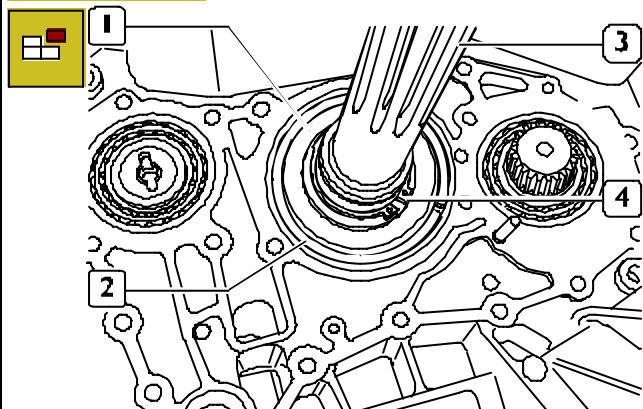


Remove the circlip (4) fastening the bearing (1) to the drive input shaft (3). Remove the circlip (2) from the bearing (1).

Figure 4/55

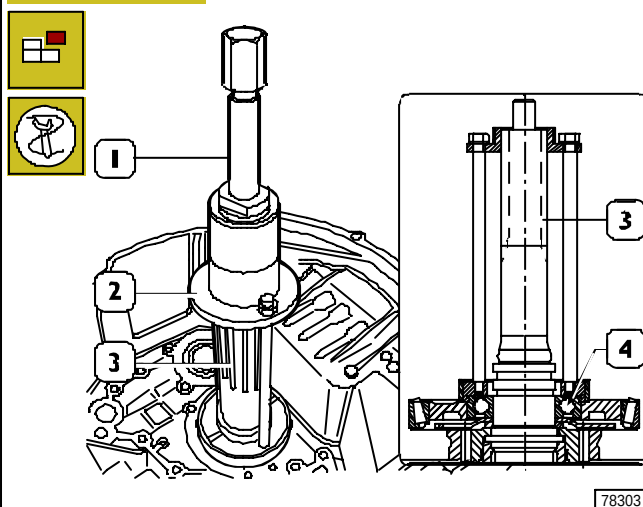

Using the extractors 99345078 (1) and 99345105 (2), extract the ball bearing (4) from the drive input shaft (3).

Figure 4/56

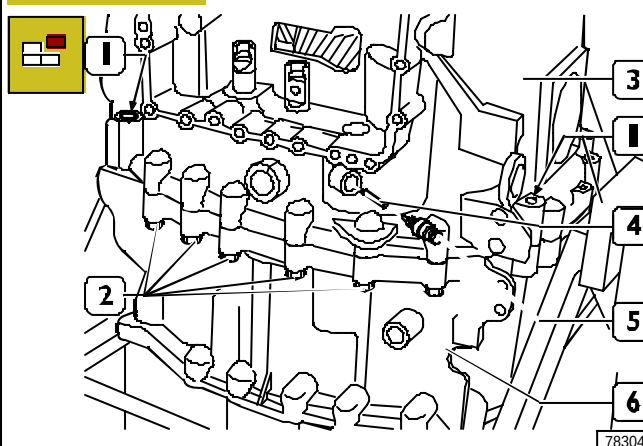


Remove the speed sensor (5) and the cap (4) beneath.

Take out the four centring pins (1).


Remove the screws (2) fixing the middle box (6) to the front box (3).

Figure 4/57

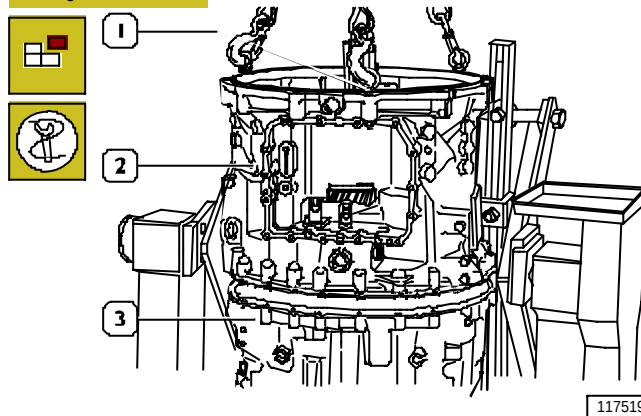

Fit the eyebolt 99366811 (1) onto the front box (2). Using special ropes and a hoist, detach the front box (2) from the middle one (3). Remove the metal seal included.


Figure 4/58

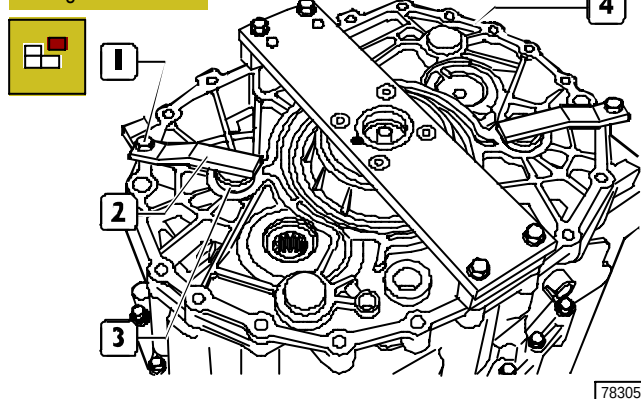

To perform the following operations, the gearbox must be positioned as shown in Figure 4/59 in order to avoid any chance of the transmission shafts falling.

Take out the screws (1) and remove the brackets (2) of the plate 99370153. Extract the reverse gear pins (3) from the middle box (4).


Figure 4/59

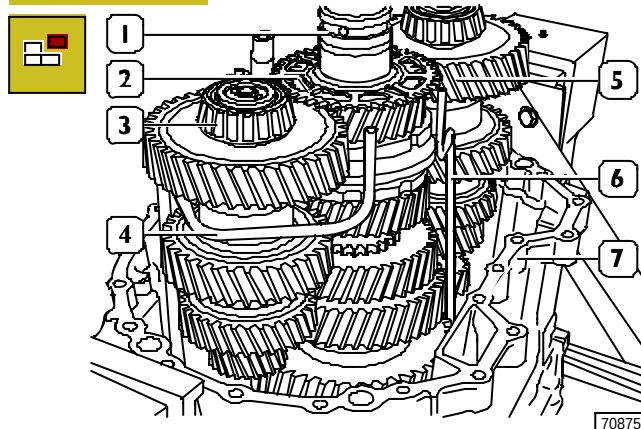

Remove the phonic wheel (2) from the drive input shaft (1). Extract the oil pipes (4-6) from the middle box (7). Spread apart the transmission shafts (3-5) and remove them from the middle box (7).

Aquila Trucks Centres


Figure 4/60

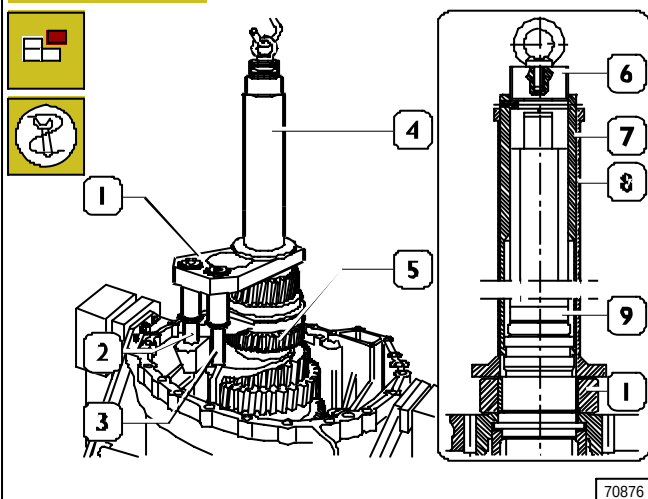

Fit tool 99360527 (1) onto the drive input shaft (9) and the rods (2 and 3); fit parts (6-7 and 8) of tool 99360526 (4) onto the drive input shaft (9).

Hook tool 99360526 (4) onto the lifter and extract the main shaft (5) together with the drive input shaft (9) and rods (2 and 3) from the supporting bearing.

Figure 4/61

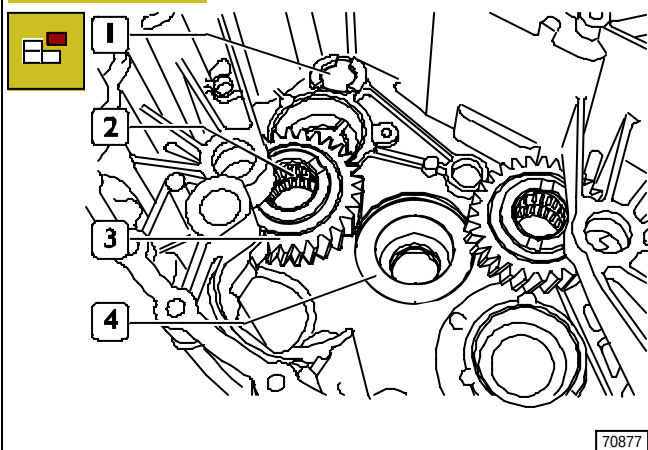

Remove the reverse gears (3) together with the roller bearings (2).


Remove the plate 99370153 (4).

If replacement is necessary, remove the centring pins (1).



Before removing the pins (1) heat the seats of the box to ~ 90°C.

Figure 4/62

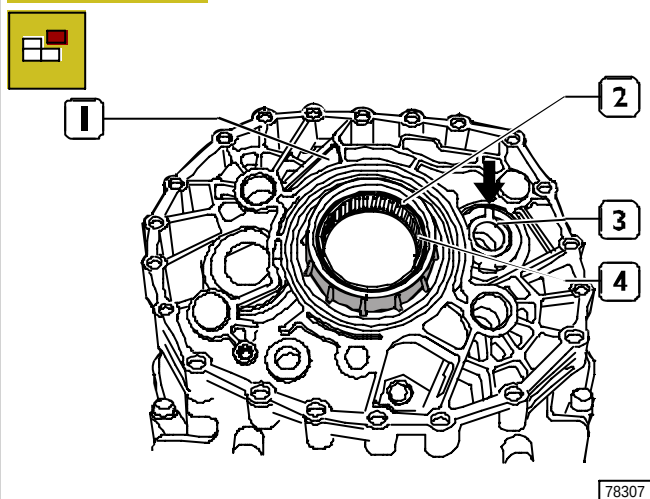


Turn the middle box (1) upside-down, remove the circlip (2) and, working from inside the box, remove the roller bearing (4).

Using a punch, and operating through the openings (→) of the middle box (1), remove the external rings (3) of the tapered roller bearings for transmission shafts.

Removing the main shaft

Figure 4/63

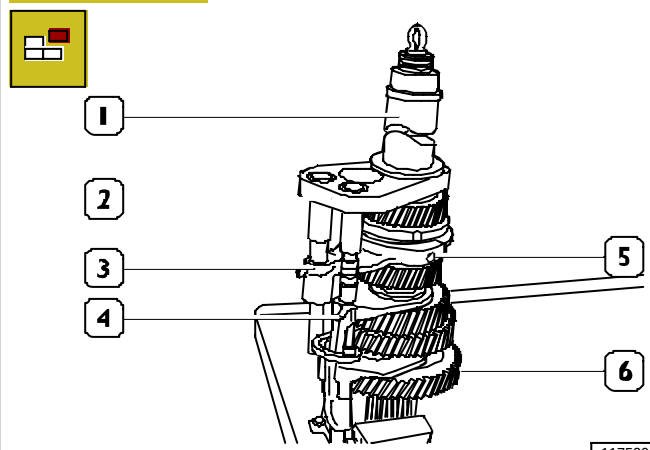

Clamp the main shaft (6) in a vice and remove tool 99360526 (1) and 99360527 (2).


Remove the rods (3 and 4) with the relevant forks.



To remove the fork (5), the ring of the synchronizing device has to be in the middle position.

Aquila Trucks Centres

Figure 4/64

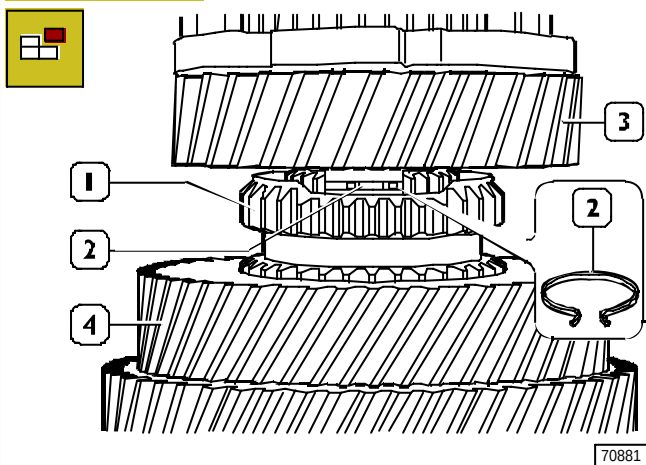

Through the bay of the coupling sleeve (1), using suitable pliers, tighten the ends of the circlip (2) and remove the drive input shaft (3) from the main shaft (4), see Figure 4/65.

Remove the coupling sleeve (1) and the tube (2) from the main shaft (3).

Turn the main shaft (3) upside-down and remove the coupling sleeve (4) from it; remove the key (5) from the hole (→) in the shaft (3) and extract it.




To extract the shoulder spacers (5 - 7 - 9 - 11 - 12 - 14) it is necessary to turn them so that their toothing is with the grooves of the shaft (3).

Extract:


- spacer (5);
- reverse gear (6);
- spacer (7);
- coupling sleeve (8);
- spacer (9);
- 2nd gear (10);
- spacers (11 and 12);
- gear (13);
- spacer (14);
- tube (15).

Figure 4/65

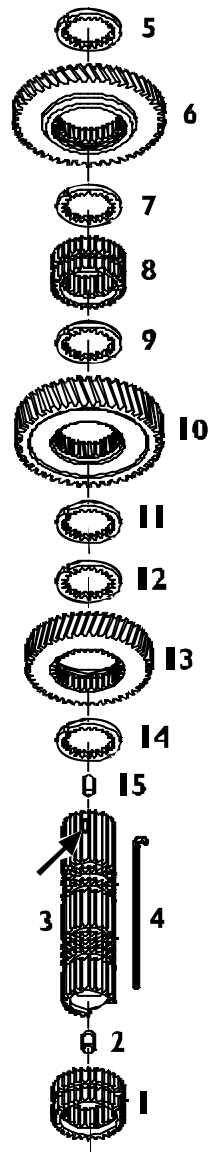

Aquila Trucks Centres

Figure 4/66

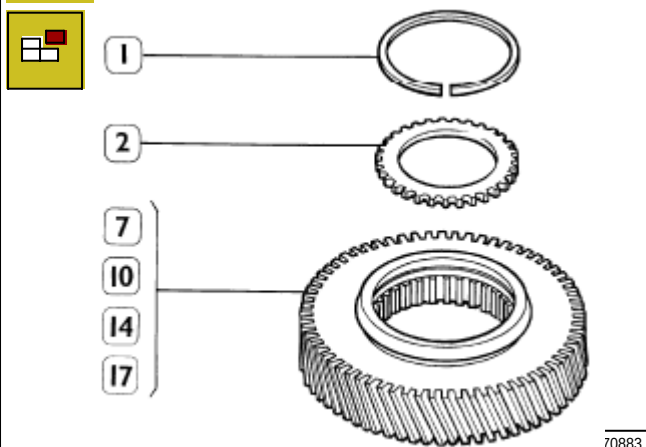


70883

If necessary, remove the circlips (1) from the gears (7 - 10 - 14 - 17, Figure 4/65) and extract the toothed ring (2).

Removing the drive input shaft


Figure 4/67

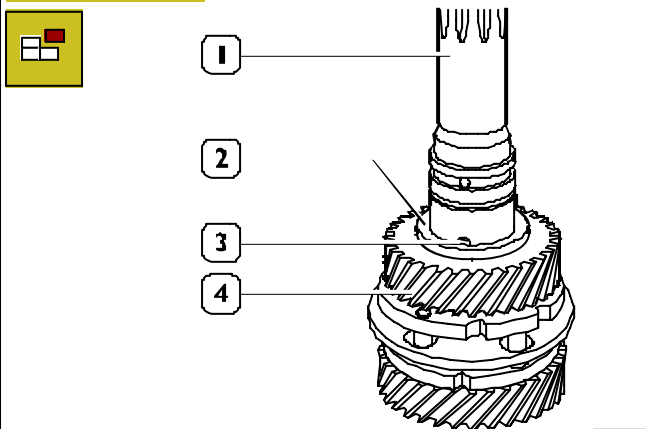

70884

Extract the ring (2), key (3) and gear (4) from the drive input shaft (1).


Figure 4/68

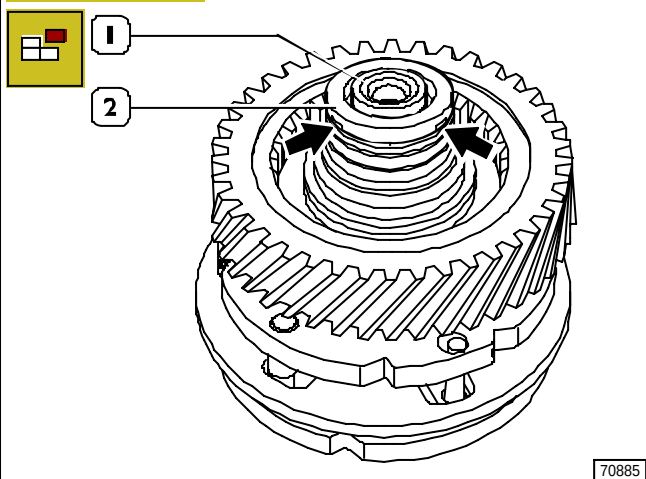

70885

Turn the drive input shaft (1) upside-down, lift the notches (→) of the safety cover (2) and take it off.

Figure 4/69

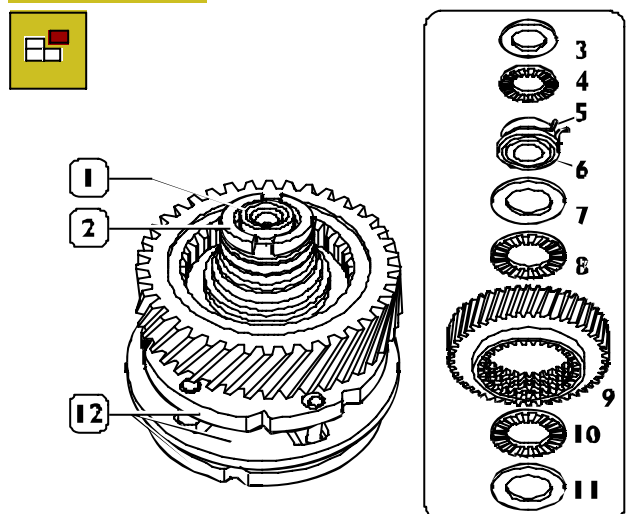


70886

Remove the half rings (2) from the drive input shaft (1) and extract from it:

- thrust washer (3);
- thrust bearing (4);
- bushing (6) together with circlip (5);
- thrust washer (7);
- thrust bearing (8);
- gear (9);
- thrust bearing (10);
- thrust washer (11);
- synchronizing device assembly (12).

Aquila Trucks Centres


Figure 4/70

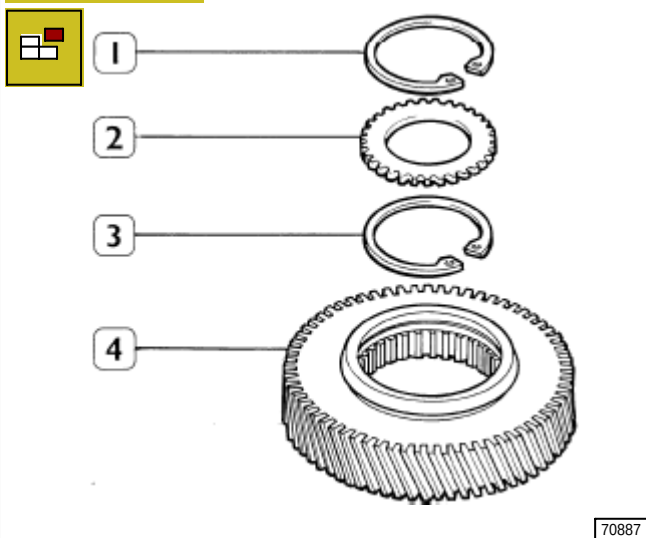

If necessary, remove the circlips (1-3) from the gear (4) and extract the toothed ring (2).

Removing the splitter synchronizing device

Figure 4/71

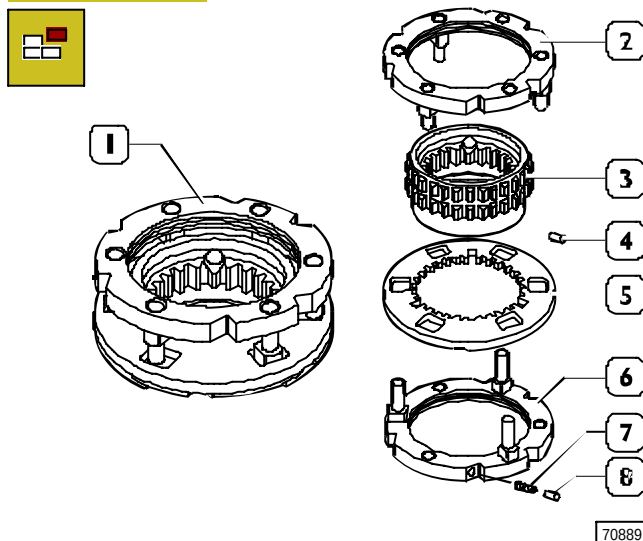


Put the synchronizing device assembly (1) on the workbench, cover it with a cloth to prevent the pins (8) and springs (7) getting lost during subsequent dismantling.

Holding back the synchronizing device ring (6), lift the synchronizing device ring (2); these will get freed: toothed ring (5), three clips (7) and three pins (8).

Remove the key (4) and extract the toothed sleeve (3) from the toothed ring (5).

Figure 4/72

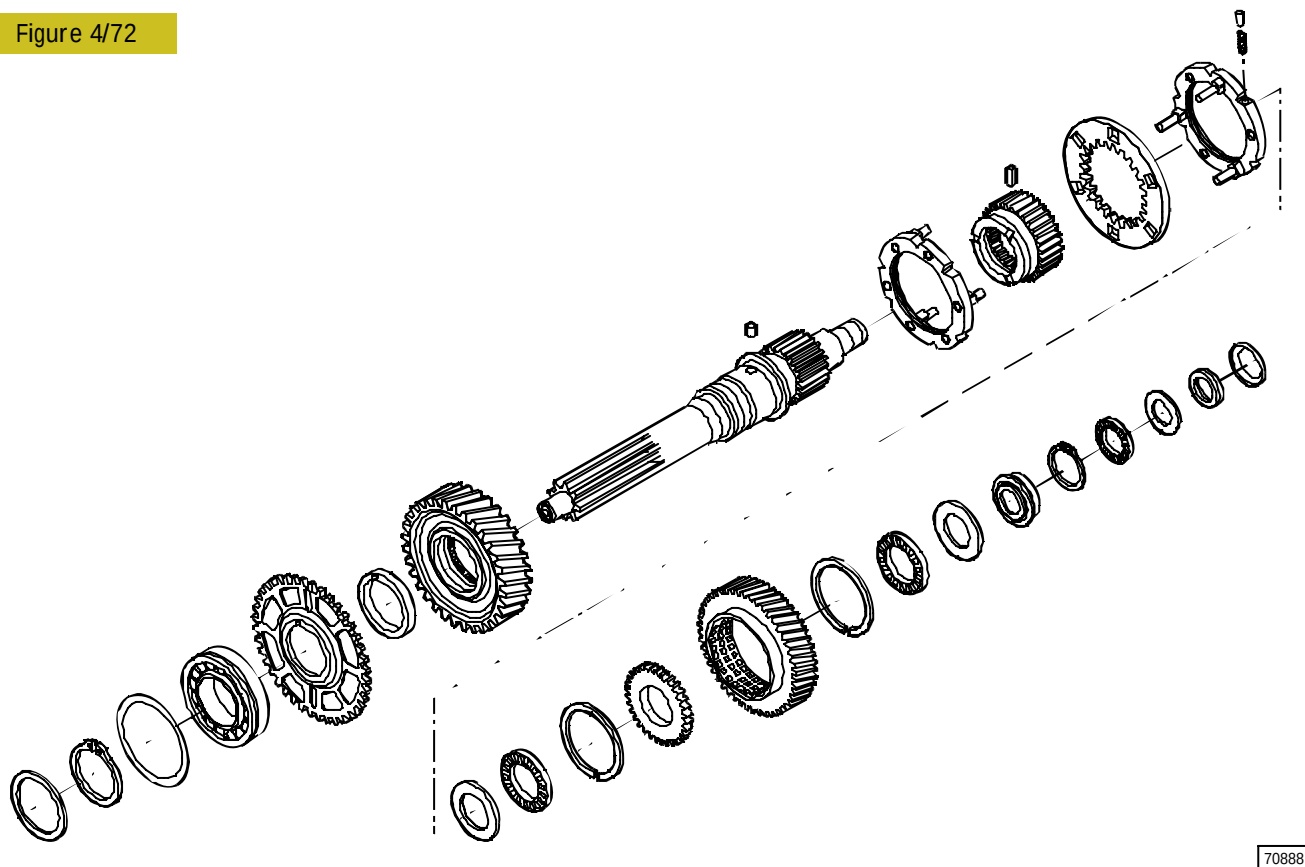

COMPONENT PARTS OF THE DRIVE INPUT SHAFT


Aquila Trucks Centres

Fitting the splitter synchronizing device

Insert the three springs (6) and three pins (7) in the synchronizing device ring (1) and keep them in their seat with the centring pins 99370499 (2).



Position the toothed ring (3) on the synchronizing device ring (5). Fit the synchronizing device ring (1) in the toothed ring (3) and on the synchronizing device ring (6) so that the centring pins 99370499 (2) drive onto the pins (4) of the synchronizing device ring (5). Press on the synchronizing device ring (1) uniformly so that the components of the assembly fit together correctly. Take out the centring pins (2).

Figure 4/74

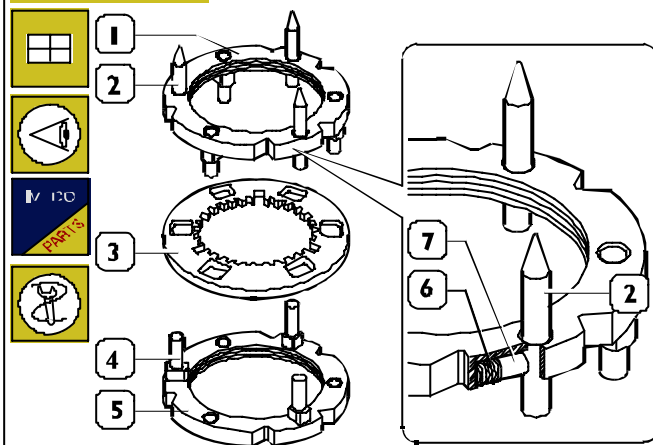

70891

Figure 4/73

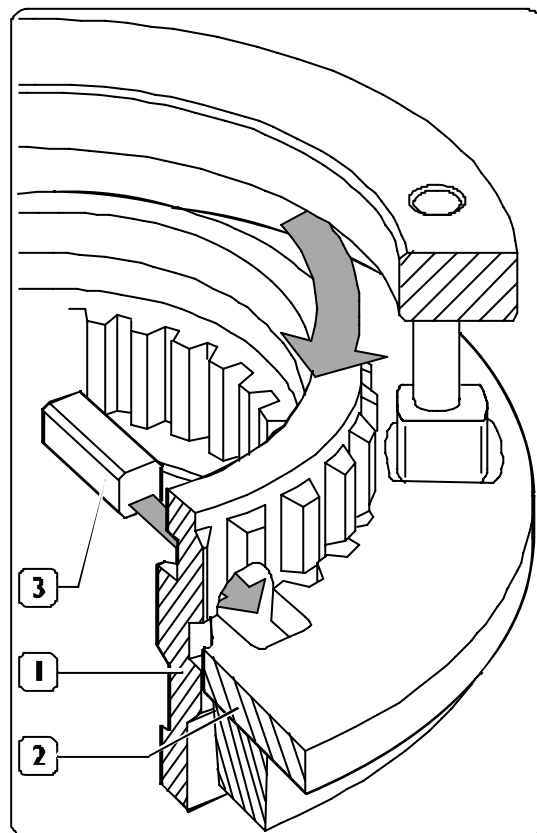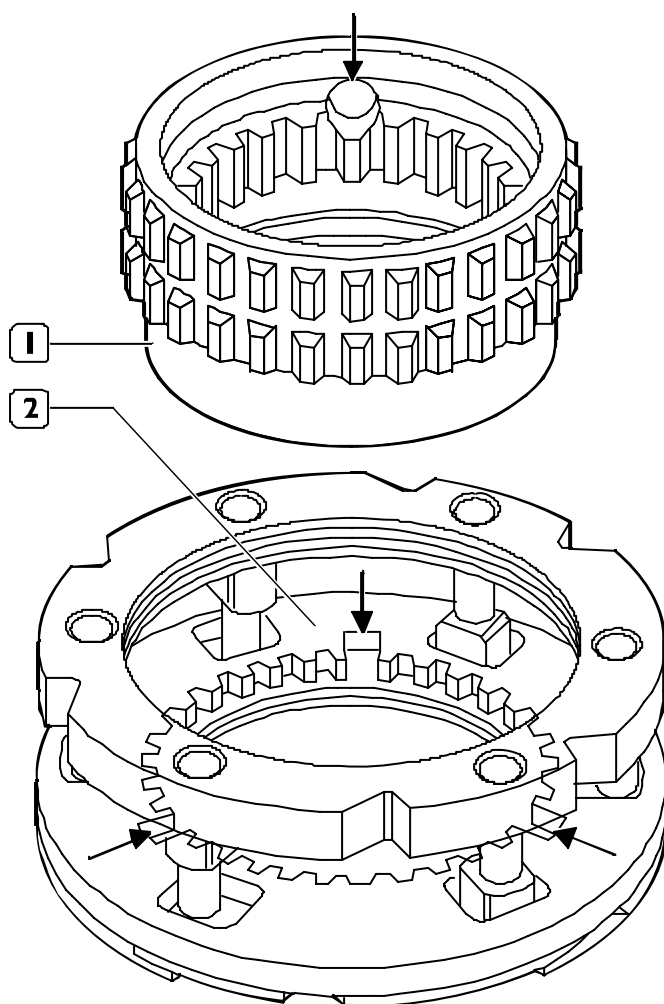

70759

Insert the toothed sleeve (1) in the toothed ring (2) so that the race between the two toothings corresponds to the inside tootthing of the ring (2) and allows it to rotate.


Turn the sleeve (1) so that the hole in it coincides with one of the three bays (→) of the toothed ring (1).

Then insert the key (3) as shown in the figure.

Aquila Trucks Centres

Fitting the main shaft

Figure 4/75

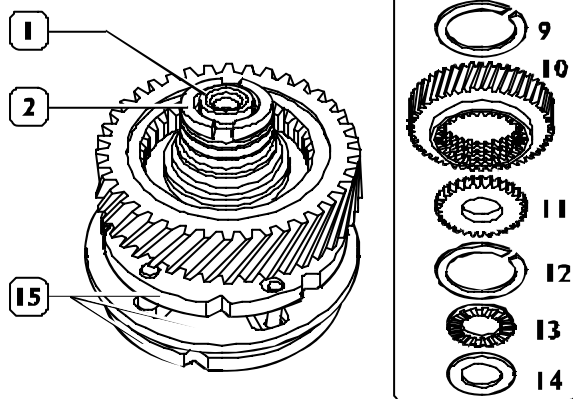


70892

On the drive input shaft (1), fit:

- synchronizing device assembly (15);
- thrust washer (14);
- thrust bearing (13);
- gear (10) together with circlips (9 and 12) and toothed ring (11);
- thrust bearing (8);
- thrust washer (7);
- bushing (6) with circlip (5);
- thrust bearing (4);
- thrust washer (3);
- half rings (2).


Figure 4/76

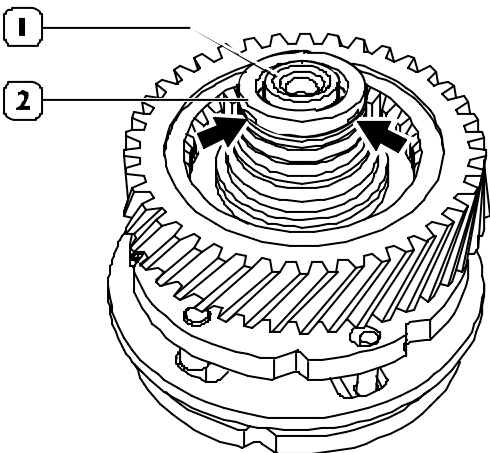

70885

Fit on a new safety cover (2) and notch it (→) at three/four equidistant points. Turn over the drive input shaft (1).

Figure 4/77

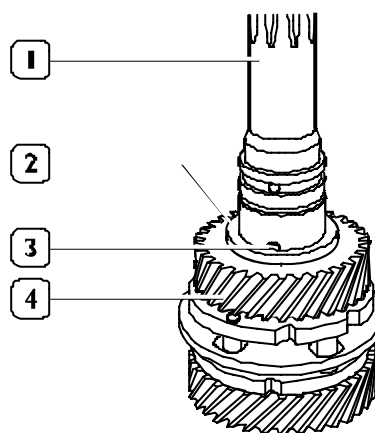


70884

On the drive input shaft (1), fit: gear (4), key (3) and thrust washer (2).

Fitting the drive input shaft

Figure 4/78

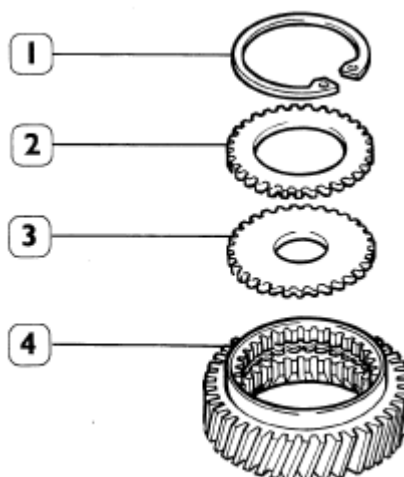


70893

In the gears (4), fit: Reverse – 1st – 2nd gears and toothed rings (2) and fasten them to the gears with the circlips (1 and 3).

Aquila Trucks Centres

Figure 4/79

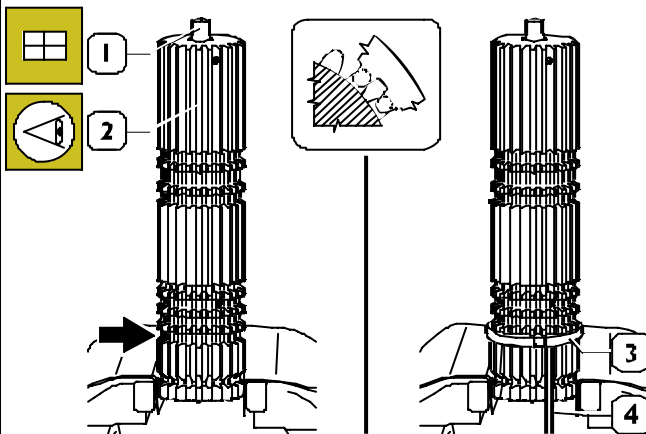


78309

Clamp the main shaft (2) in a vice. Fit on the tube (1). Put the shoulder spacer (3) in the ring groove (→). Turn the spacer (3) so that its internal toothing rests on that of the main shaft (2).

Insert the key (4) in the spacer (3) so as to prevent rotation and keep it in position.


Figure 4/80

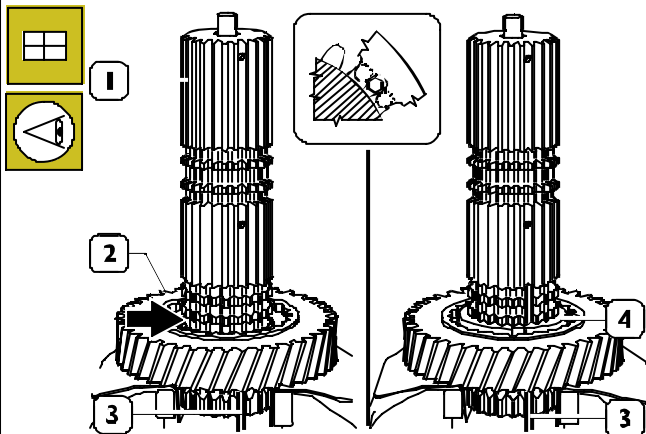

78310

Mount the 2nd speed gear (2), put the spacer (4) in the ring groove (→). Turn the spacer (4) so that its internal toothing rests on that of the main shaft (1). Insert the key (3) in the spacer (4) and keep it in position.


Figure 4/81

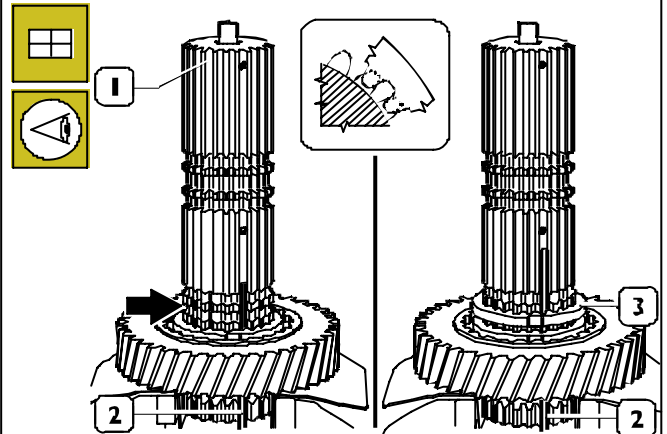

78311

Put the spacer (3) in the ring groove (→). Turn the spacer (3) so that its internal toothing rests on that of the main shaft (1). Insert the key (2) in the spacer and keep it in position.

Figure 4/82

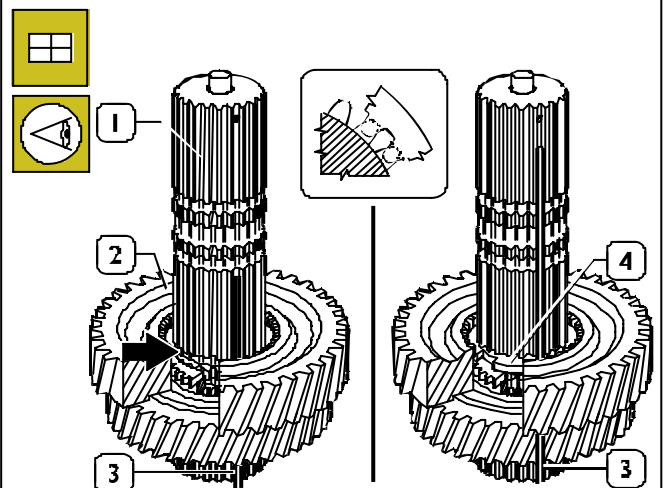


78312

Mount the 1st speed gear (2), put the spacer (4) in the ring groove (→). Turn the spacer (4) so that its internal toothing rests on that of the main shaft (1). Insert the key (3) in the spacer (4) and keep it in position.


Aquila Trucks Centres

Figure 4/83

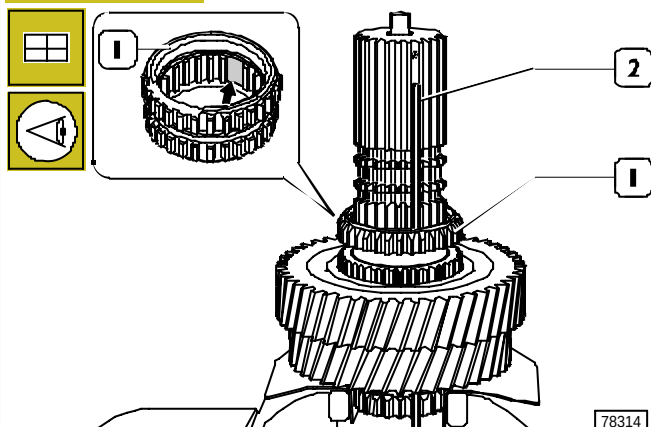


Fit on the 1st/Reverse gear coupling sleeve (1) with the larger internal groove (→) turned to the side of the key (2).

Figure 4/84

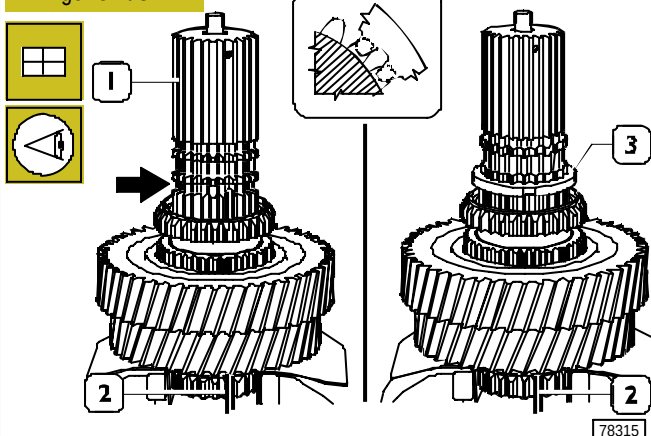


Put the spacer (3) in the ring groove (→). Turn the spacer (3) so that its internal toothing rests on that of the main shaft (1). Insert the key (2) in the spacer (3) and keep it in position.

Figure 4/85

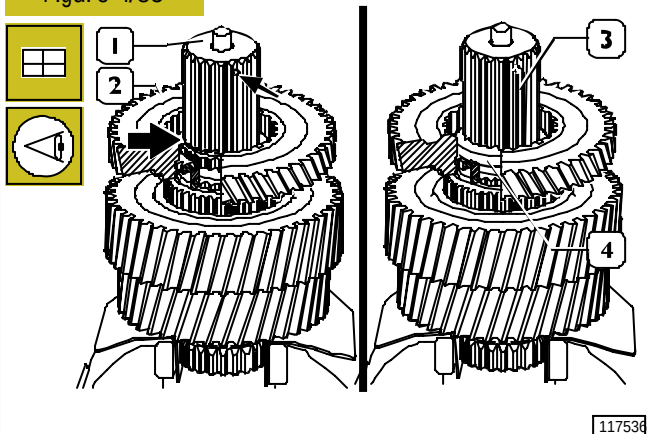

Fit on the gear (2). Put the spacer (4) in the ring groove (→) so that its internal toothing rests on that of the main shaft (1). Slide out the key (3) and insert it from the upper side of the shaft into its keyway and in all the spacers so that the bent part enters into the hole (→) of the shaft (1).


Figure 4/86

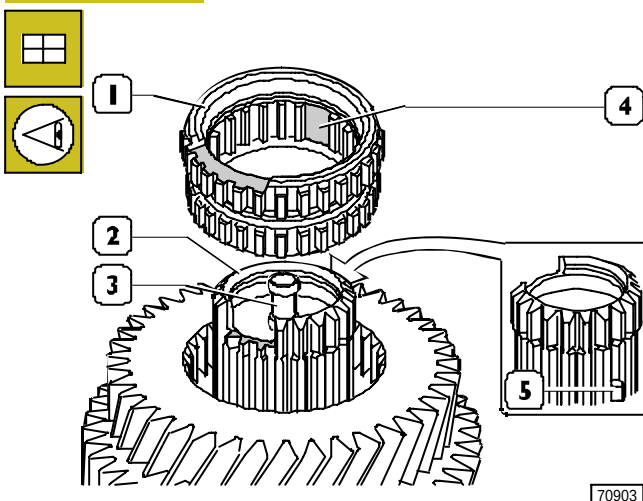

Turn over the main shaft (2) and fit on the sleeve (1) with the bay (4) coinciding with the key (5).

Fit on the tube (3).

Figure 4/87

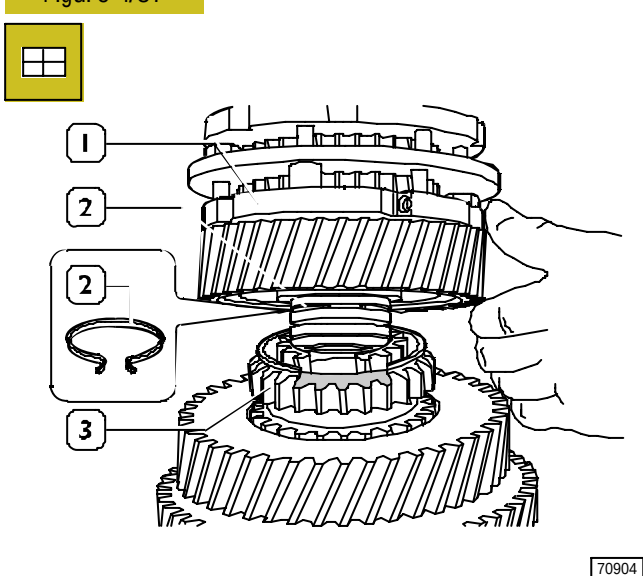

Using suitable pliers, tighten the ends of the circlip (2) and fit the drive input shaft (1) onto the main shaft (3).




Make sure that the circlip (2) gets correctly positioned in the seat of the main shaft (3).

Aquila Trucks Centres

**Splitter control fork
Disassembly - Assembly**


Figure 4/88

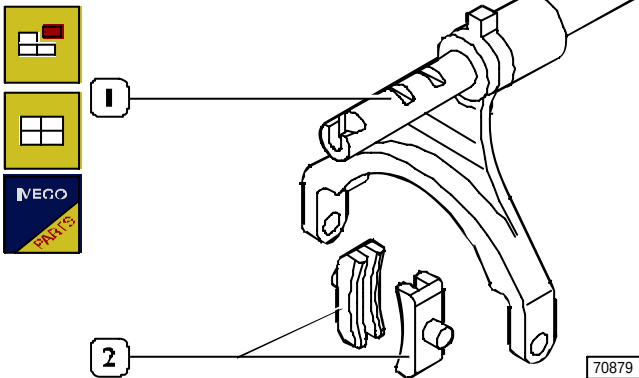

Extract the plugs (2) from the splitter synchronizing device coupling fork (1) and fit on the new plugs.

**Gear control forks
Removal**


Figure 4/89

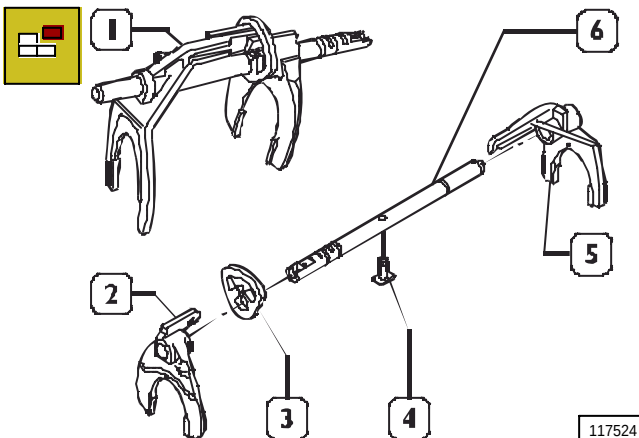

Dismantle the gear control fork assembly (1), suitably adjusting the ring (3) to prevent the gears simultaneously coupling and extracting from the rod (6): the coupling fork (5)*, pin (4), fork (2) and ring (3).


Fitting

Figure 4/90

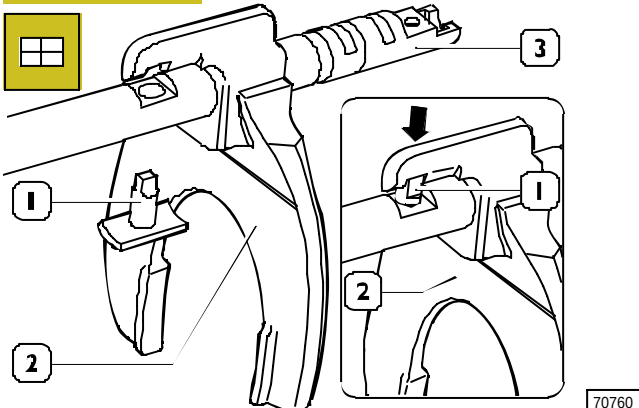


Insert the pin (1) in the seat on the rod (3). Drive the reverse/1st gear coupling fork (2) onto the rod (3), adjusting it so that the pin (1) gets positioned in the bay (→) of the fork (2).

Figure 4/91

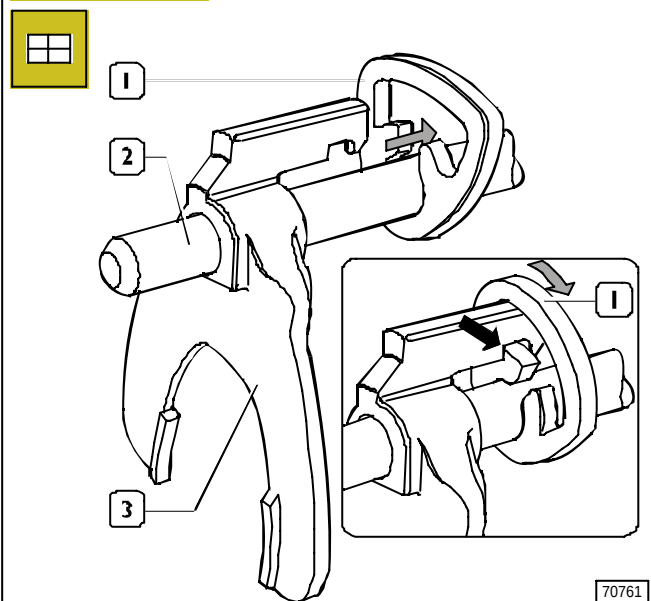

Drive the ring (1) and the 2nd/3rd gear coupling fork (3) onto the rod (2). Position the fork (3) in the ring (1) so that on turning it the bay (→) of the fork (3) is inserted in the ring (1).

Figure 4/92

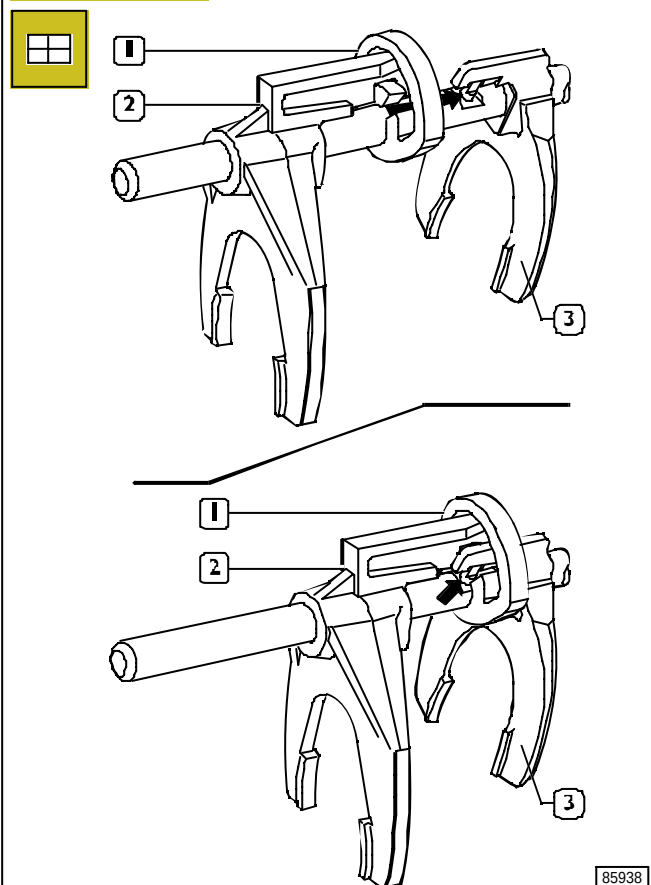


Position the fork (2) and the ring (1) assembled together as indicated so that the compartment (→) of the fork (3) engages reverse/ 1st gear engages into the ring (1).

Aquila Trucks Centres

**Transmission shafts
Disassembly - Assembly**

Figure 4/93

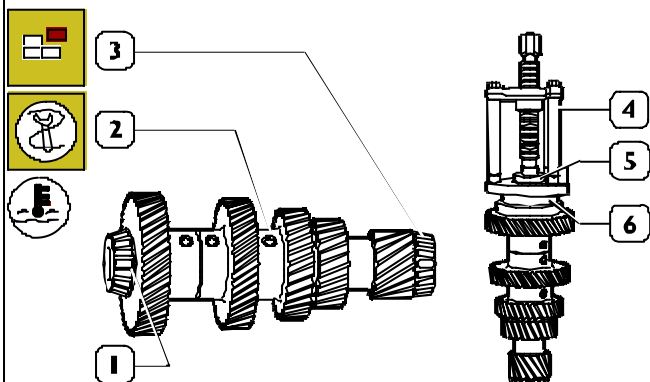


117525

Remove the inside rings (1-3) of the roller bearings from the transmission shaft (2), using the extractor 99347100 (4), grips (6) and plug 99345057 (5).

To fit the rings (1 - 3) on the shaft (2) it is necessary to first heat them to 120°C.

Fitting the middle box

Figure 4/94

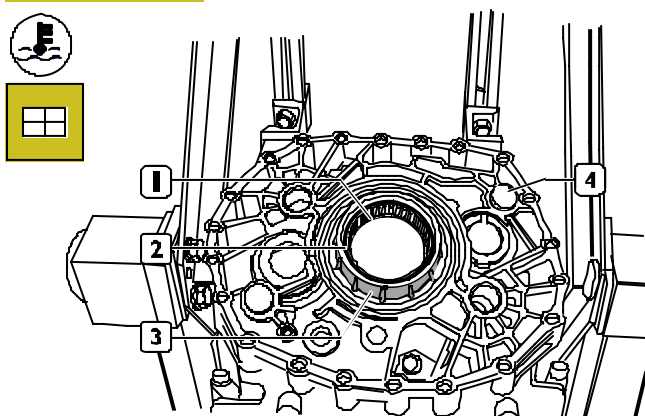


78318

Heat the seat (3) of the cylindrical roller bearing (1) to ~ 90°C, fit this and fasten it to the middle box with the circlip (2).

If removed, refit the centring pins (4) after heating the seats of the box to ~ 90°C.


Figure 4/95

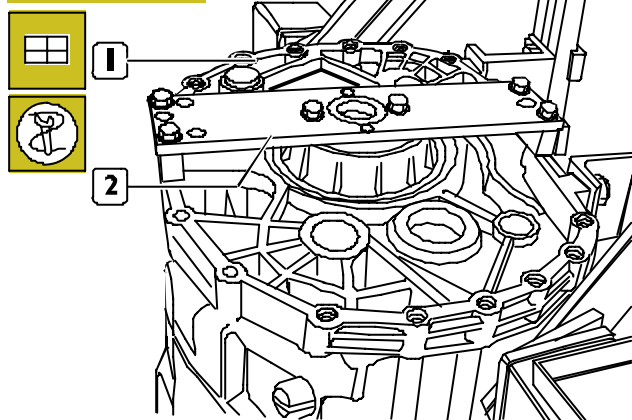

78319

Fit the plate 99370153 (2) onto the middle box (1).


Figure 4/96

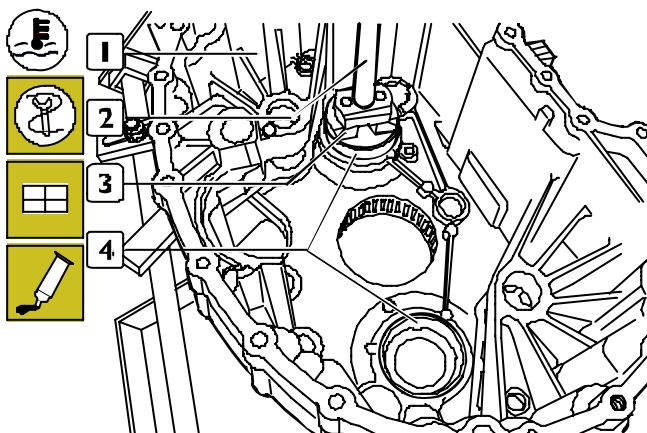

70909

From inside the box (1), heat the seats of the rings (4) to ~ 90°C, transmission shaft bearings. Fit on the rings (4) with driver 99370092 (3) and grip 99370007 (2).

Figure 4/97

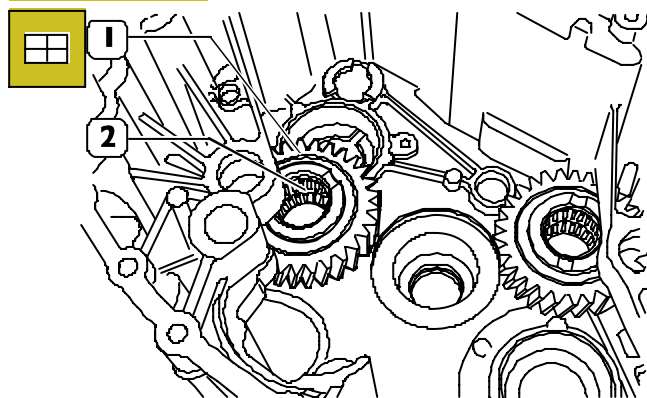


70910

Place the reverse gears (1) together with the roller bearings (2) in the middle box.


Aquila Trucks Centres

Figure 4/98

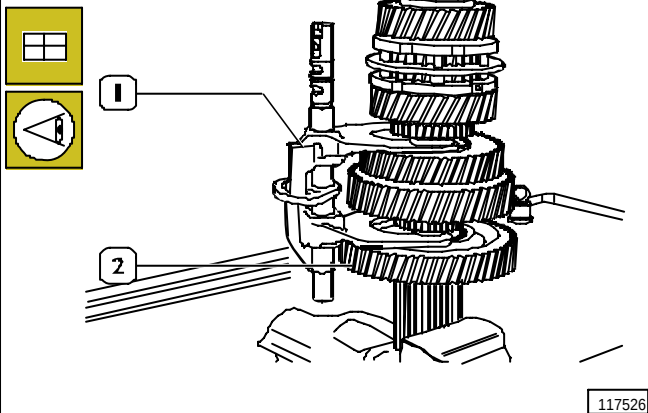


Fit the fork assembly (1) onto the main shaft (2), verifying that the forks are correctly positioned on their respective coupling sleeves.

Figure 4/99

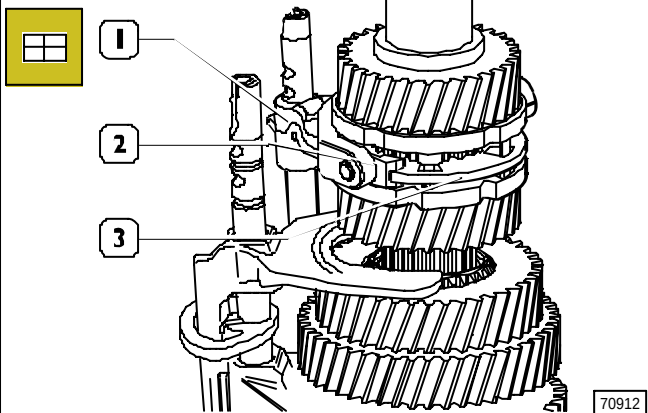


Mount the splitter coupling fork (1) positioning the plugs (2) on the toothed coupling ring (3).

Figure 4/100

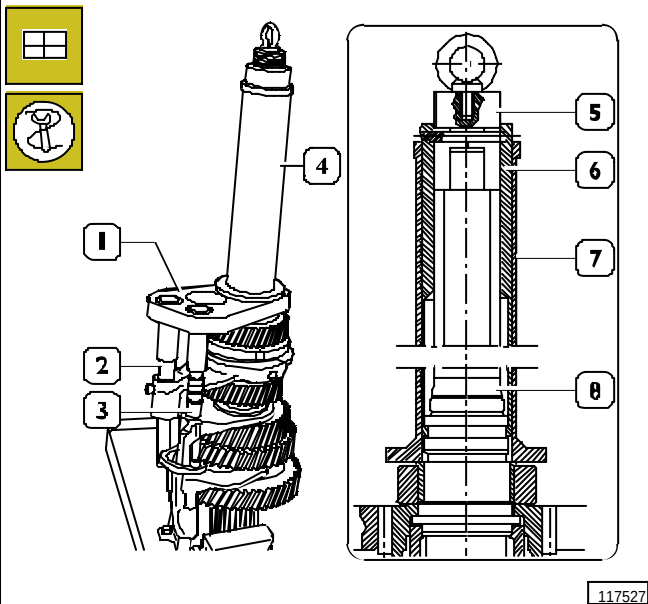

Fit tool 99360527 (1) onto the drive input shaft (8) and the rods (2 and 3). Fit parts (5-6-7) of tool 99360526 (4) onto the drive input shaft (8).


Figure 4/101

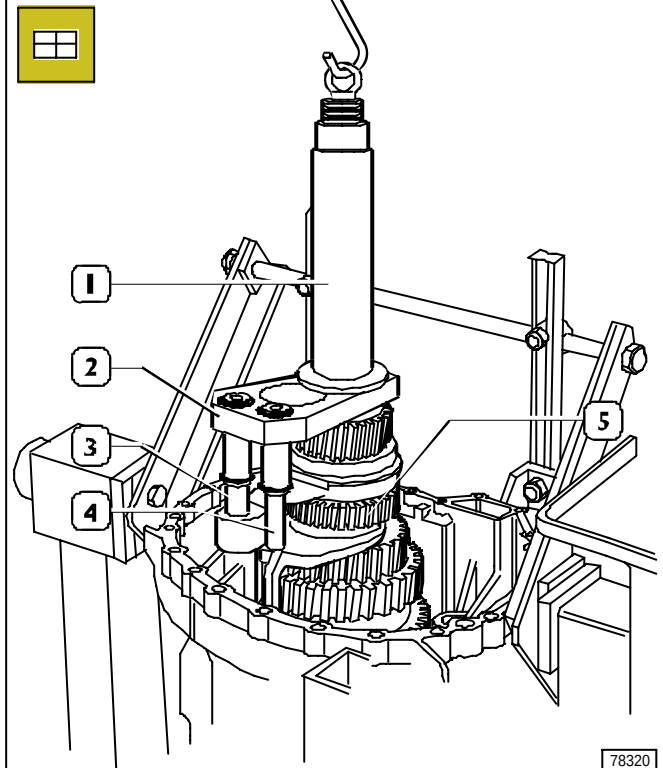

Hook the tool 99360526 (1) onto the lifter and fit the main shaft assembly (5) in the gearbox, verifying that the shaft (5) and the rods (3 and 4) get correctly inserted in their seats.

Remove the tools 99360526 (1) and 99360527 (2).


Figure 4/102

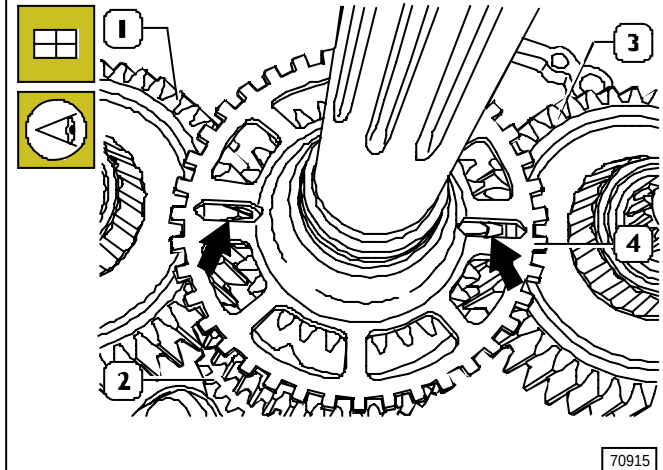

Mount the transmission shafts (1 and 3) so that on joining them to the main shaft (2) the marks stamped on them are aligned. Use the slots (→) of the phonic wheel (4) to check this.


Aquila Trucks Centres

Figure 4/103

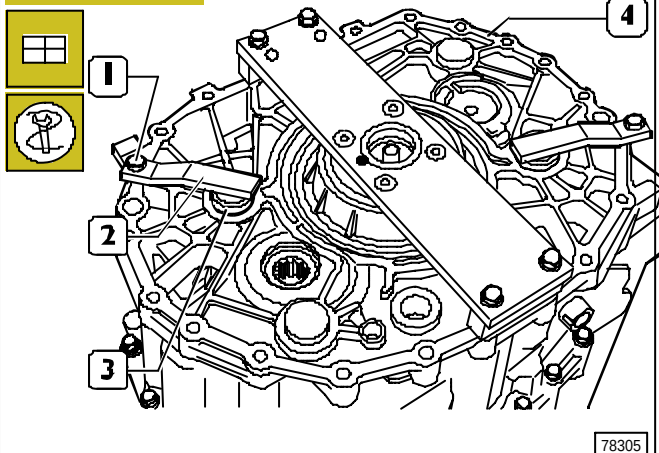

78305

Figure 4/104

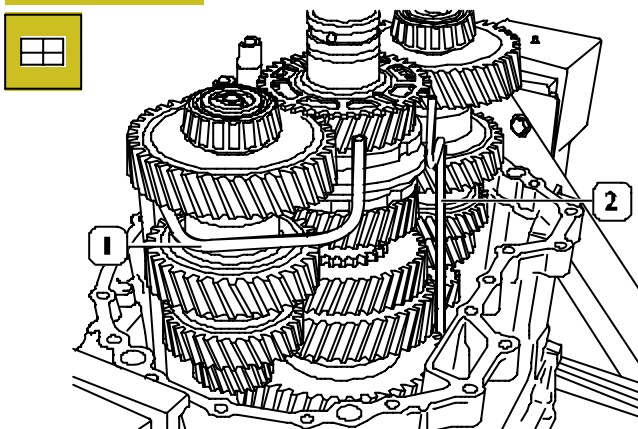

70917



To perform the following operations, the gearbox must be positioned as shown in Figure 4/104 in order to avoid any chance of the reverse gears falling.




With no gears engaged, the shafts must turn freely, otherwise the alignment of the marks (see Figure 4/102) will not be correct.

Fit on the oil pipes (1 and 2).

Insert the pins (3) in the middle box (4) and in the reverse gears (1, Figure 4/98), fastening them to the box (4) with the brackets (2) of plate 99370153 and the screws (1).

Figure 4/105

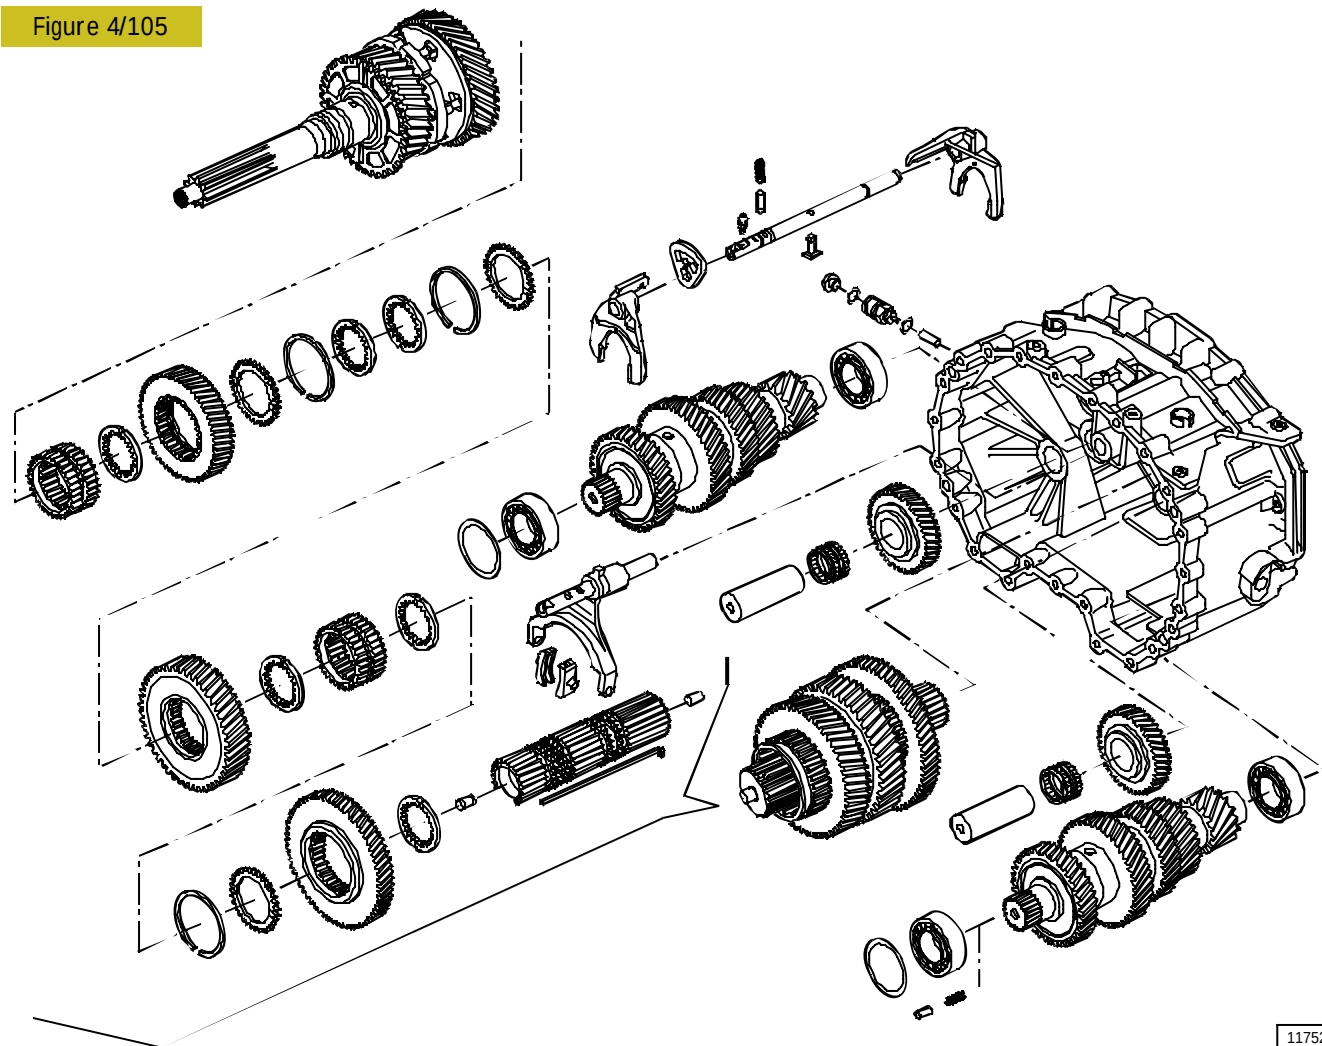


117528

COMPONENT PARTS OF THE MIDDLE BOX

Aquila Trucks Centres

Fitting the front box

Figure 4/106

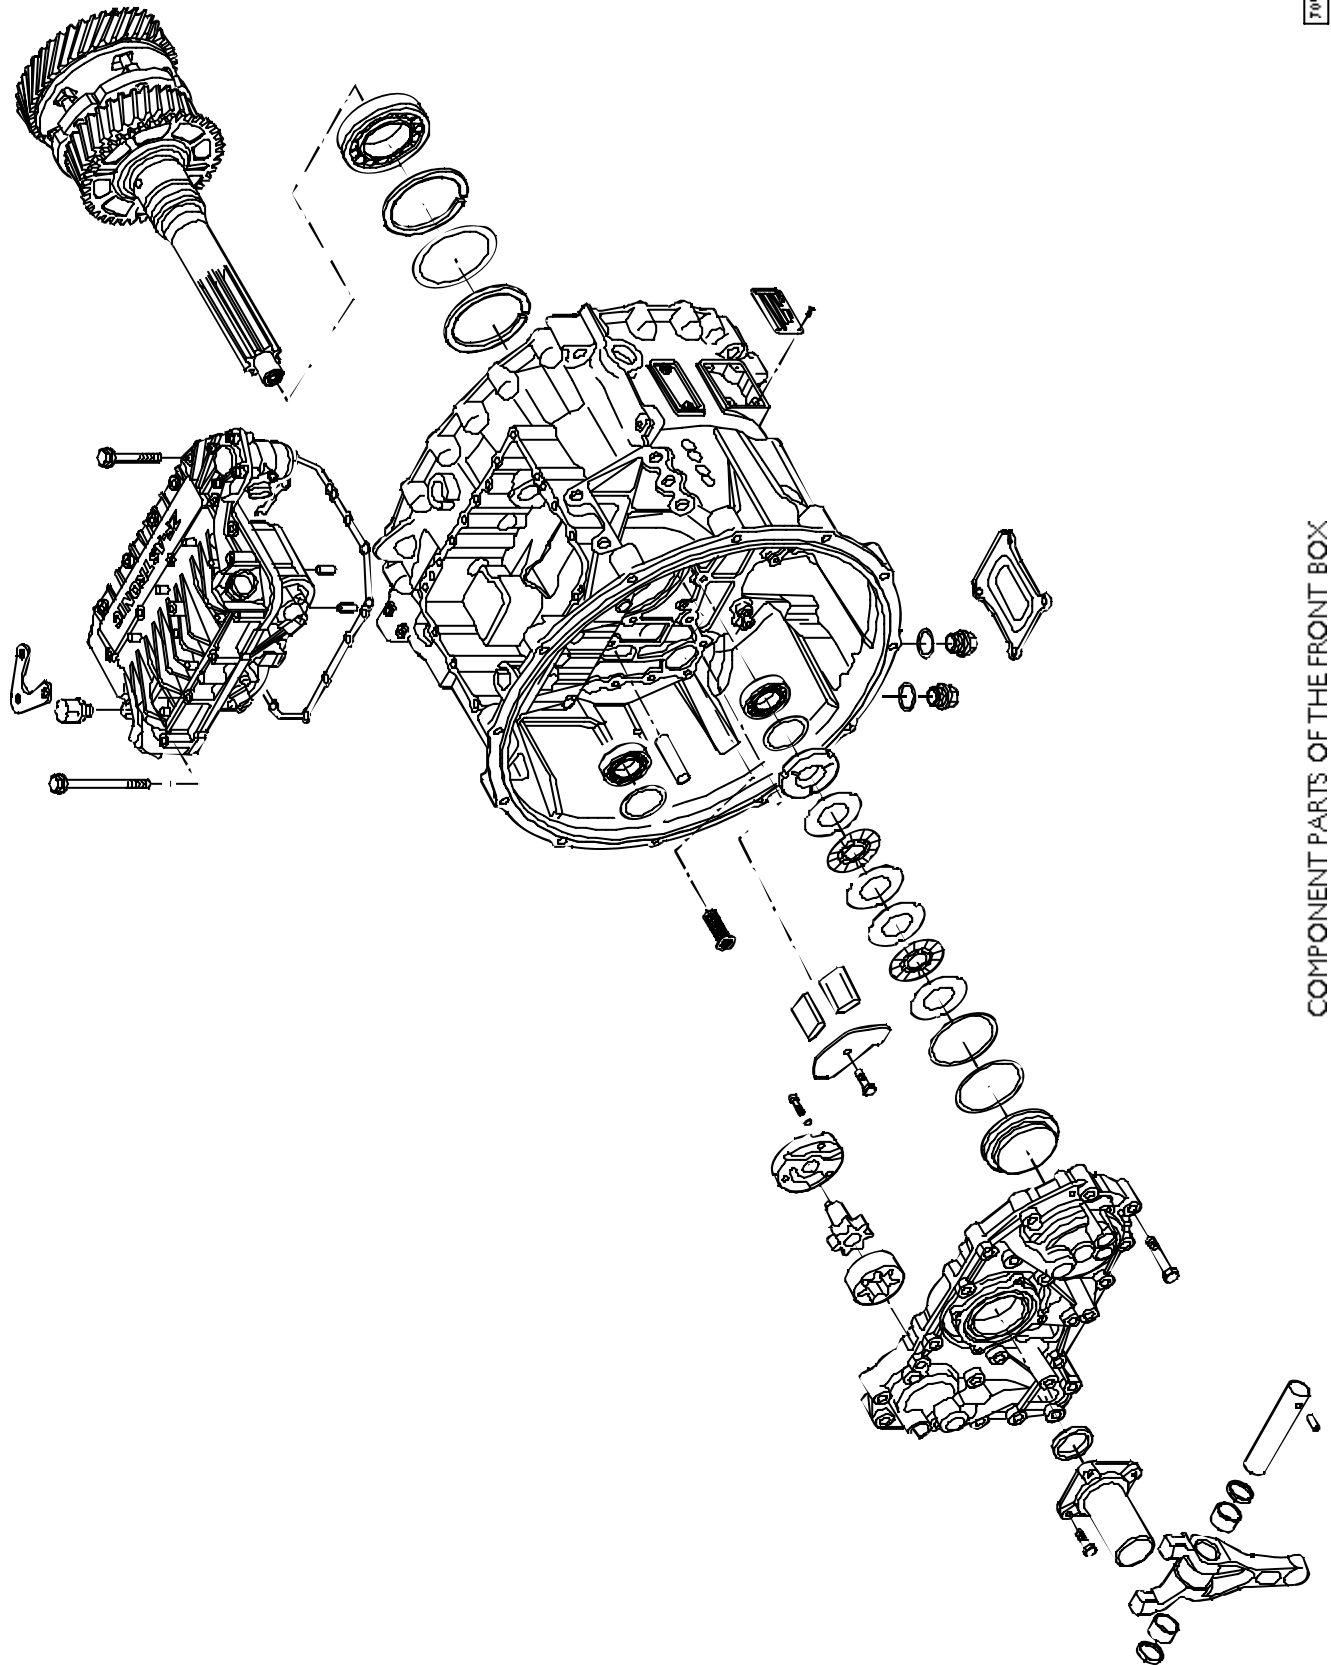


70912

COMPONENT PARTS OF THE FRONT BOX

Aquila Trucks Centres

Figure 4/107

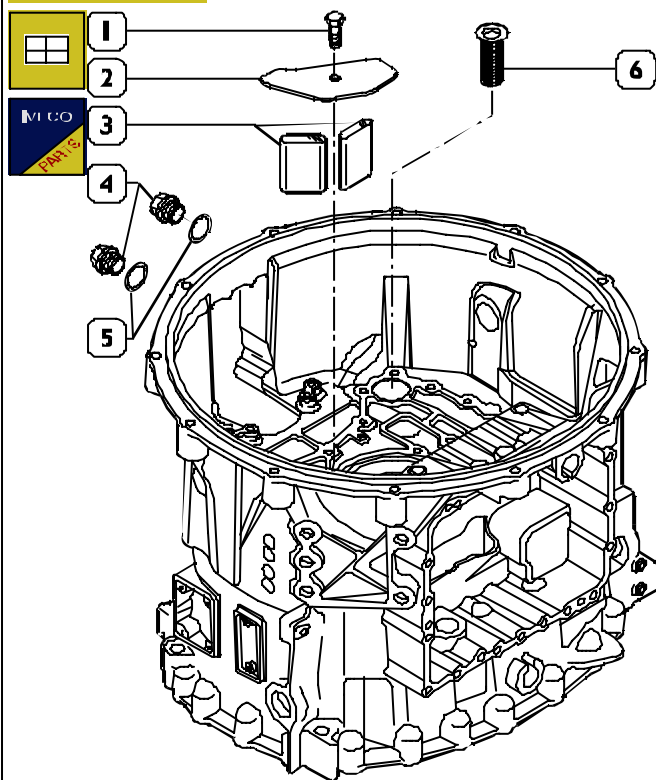

70819


Remove the screw (1), lift the cover (2), remove the vents (3) and clean them or replace them.

Then reassemble the parts.

Carefully clean the oil filter (6) and fit it back in its seat.

If the plugs (4) have been removed, it is necessary to fit them back on with new seals (5).


Figure 4/108

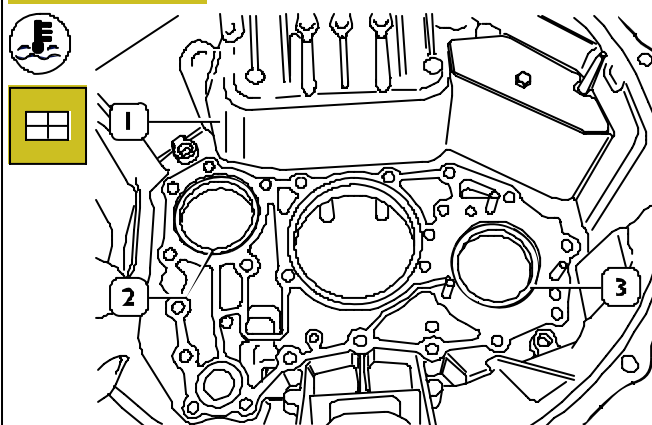

70920

Heat the front box (1) to 90°C in correspondence with the seats for the external rings (2 - 3) of the tapered roller bearings and fit these on.

Figure 4/109

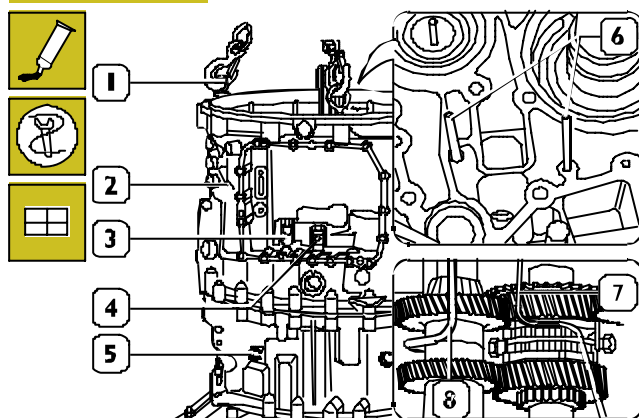

70921

Spread IVECO sealant 1905685 onto the mating surface of the middle box (5).

Fit the eyebolt 99368811 (1) onto the front box (2).


Using ropes and a hoist, lift the box (2) and position it coaxially to the middle box (5).

Insert the rods (6), of suitable diameter, into the seats in the front box (2) of the oil pipes (7 and 8) and into these too.

Lower the box (2) checking that the rods (3 and 4) and the oil pipes (7 and 8) are correctly inserted in their seat.

Remove the eyebolt (1) and the guide rods (6).

Figure 4/110

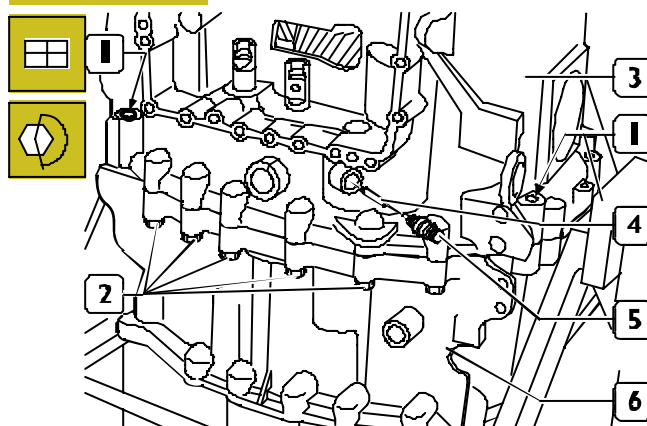


70924

Screw down the screws (2) fixing the front box (3) to the middle box (6). Insert the centring pins (1) and tighten the screws (2) to the prescribed torque.

Mount the cap (4) and the speed sensor (5), tightening it to the prescribed torque.


Aquila Trucks Centres

Figure 4/111

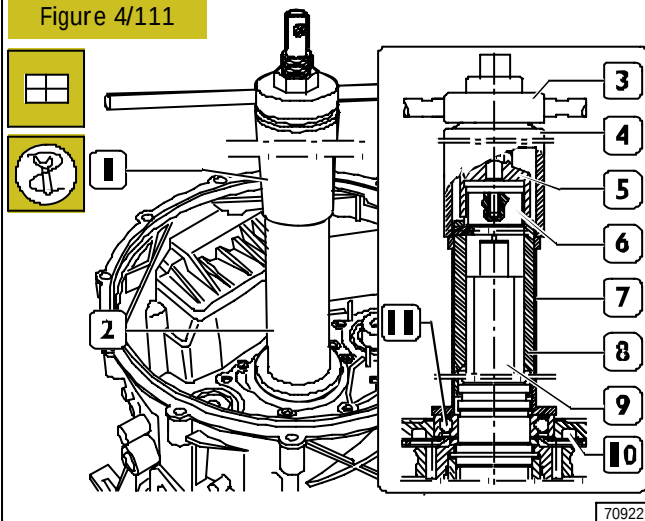

Using the tools 99345098 (1) comprising parts (3-4 and 5) and 99360526 comprising parts (6 - 7 - 8), fit the ball bearing (11) on the drive input shaft (9) and in the front box (10).

Figure 4/112

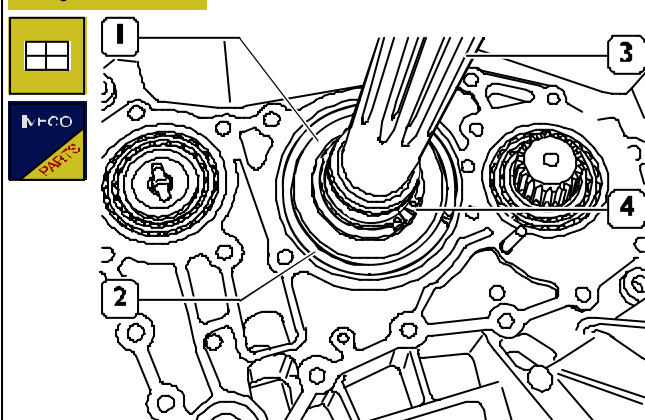


Fit the circlip (4) fastening the bearing (1) to the drive input shaft (3).

Fit the circlip (2) onto the bearing (1).


Front cover Removal

Figure 4/113

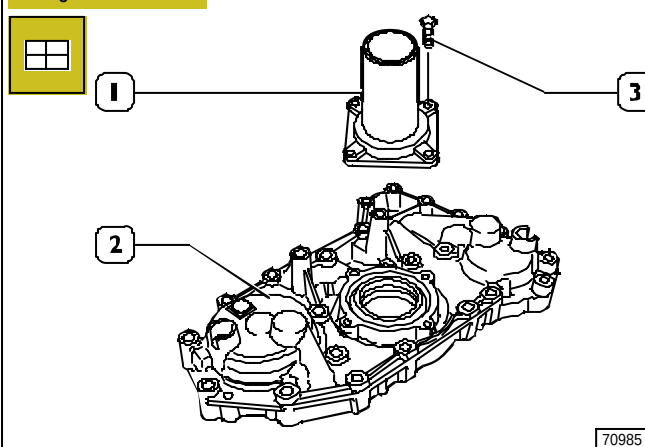

Remove the screws (3) and take off the drive input shaft cover (1) from the front cover (2).

Figure 4/114

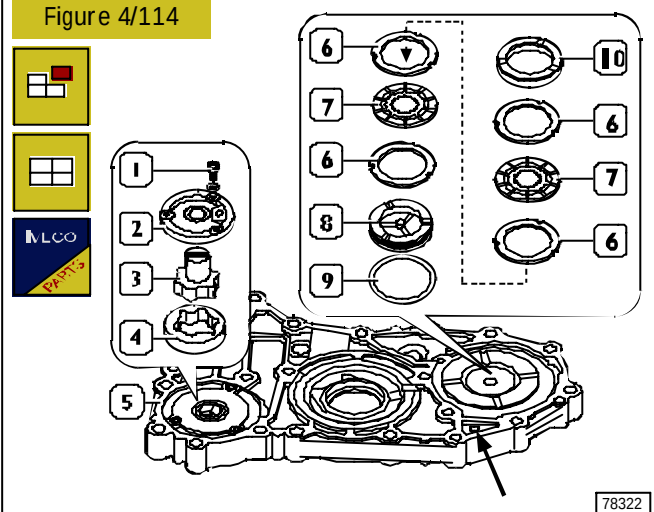

Take out the screws (1) and, through the front cover (5), take out the oil pump comprising: cover (2), rotor (3) and stator (4).

Introduce compressed air through the hole (→) and expel through the front cover (5): the overrun brake piston (8) comprehensive of gasket (9), clutch plates with external toothing (6), clutch plates with internal toothing (7) and supporting ring (10).

Fitting the front cover


Recompose the front cover (5) by reversing the operations described for removal, without parts (6 - 7 - 8).



The gasket (9) must always be replaced.

Adjusting drive input shaft bearing end float

Figure 4/115

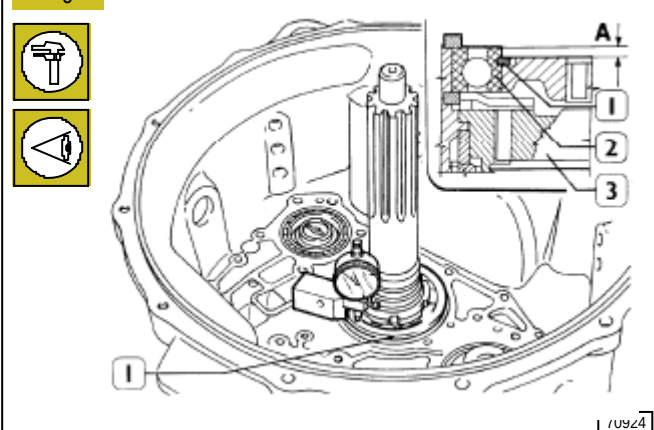


Determine the thickness S of the drive input shaft bearing adjustment ring by proceeding in the following way:

- check that the circlip (1) of the bearing (2) rests in its seat;
- measure the protrusion of the bearing (2) from the surface of the front box (3), distance A .

Aquila Trucks Centres

Figure 4/116

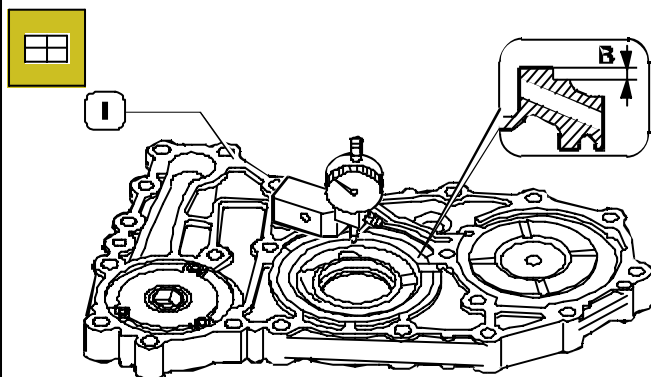

70986

- measure the depth of the seat on the front cover (1) of the bearing (2, Figure 4/115), distance B.

The thickness S of the adjustment ring is determined by the following equation:

$$S = (A - B) - C$$

Where:


- A-B = measurements
C = end float $0 \div 0.1$ mm

For example:

- A = 5.50 mm
B = 3.90 mm
C = $0 \div 0.1$ mm
S = $(5.50 - 3.90) - 0 \div 0.1 = 1.59 - 1.60$ mm

Adjusting transmission shaft bearing end float


Figure 4/117

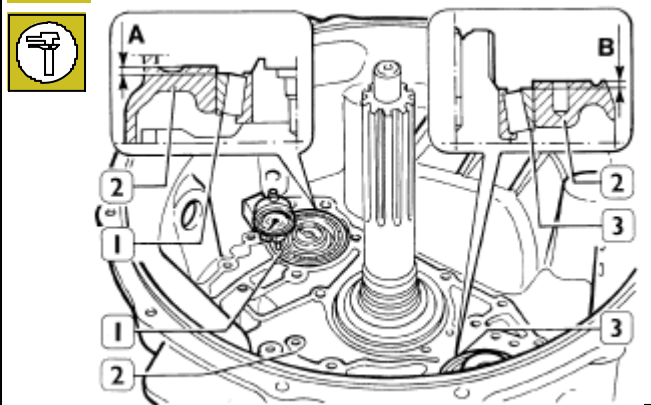

Determine the thickness S of the transmission shaft bearing end float adjustment rings by proceeding in the following way:

- turn the shafts and check that the external rings (1 - 3) of the bearings rest with no play on the rollers of the bearings;
 - measure the distance between the surface of the front box (2) and the external rings (1 - 3);
- D external ring (1) pump side, distance A.
D external ring (3) overrun brake side, distance B

Figure 4/118

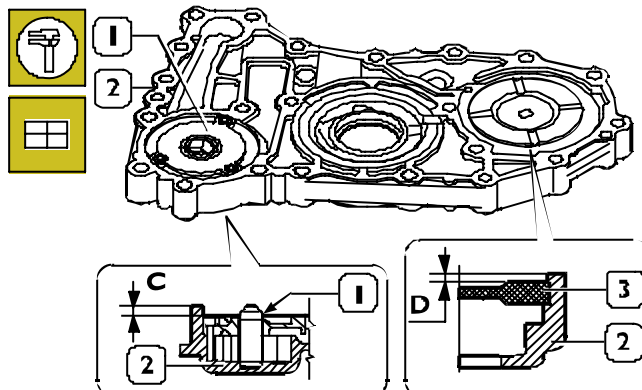

70926

- measure the distance between the surface of the front cover (2) and the oil pump (1), distance C;
- mount the overrun brake disc supporting ring (3) in the seat on the front cover (2) and measure the distance between this and the surface of the cover (2), distance D.

The thickness S of the adjustment rings is determined by the following equation:

$$D \text{ oil pump side} \quad S = A + C + F$$

A - C = measurements

F = end float ± 0.05

For example:

$$S = 2 + 0.05 (\pm 0.05) = 2 - 2.1$$

$$D \text{ overrun brake side } S = B + D + F$$


B - C = measurements

F = end float ± 0.05

For example:

$$S = 1.95 + 0.15 (\pm 0.05) = 2.05 - 2.15$$

Figure 4/119

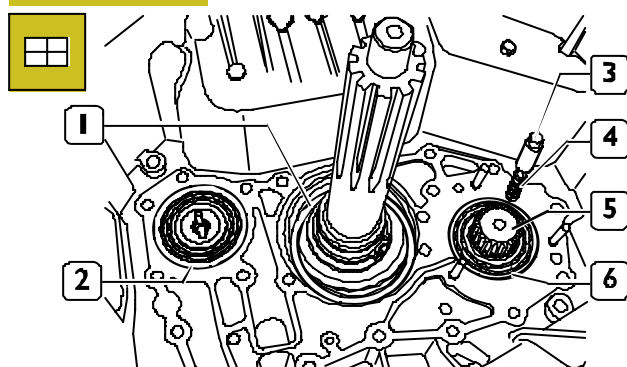


70870

On the external rings of the bearings supporting the drive input and transmission shafts, mount the end float adjustment rings (1 - 2 and 6) of the thickness determined in the preceding measurements. Insert the spring (4) and the cap (3) in the transmission shaft (5).


Aquila Trucks Centres

Figure 4/120

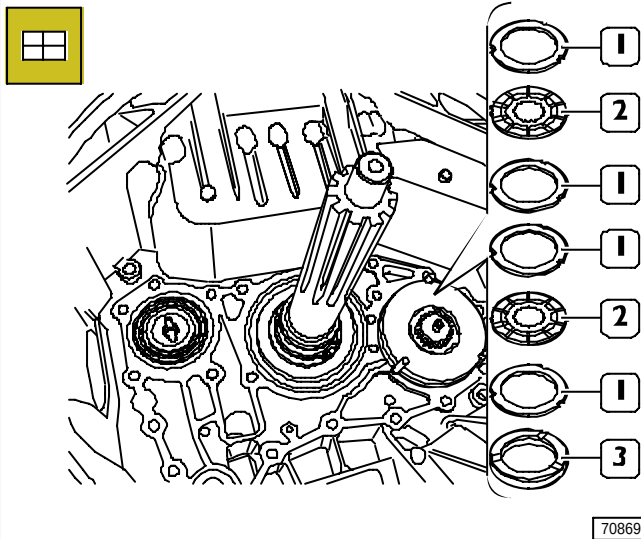


In the sequence shown in the figure, position: the supporting ring (3), clutch plates with internal tothing (2) and clutch plates with external tothing (1).

Figure 4/121

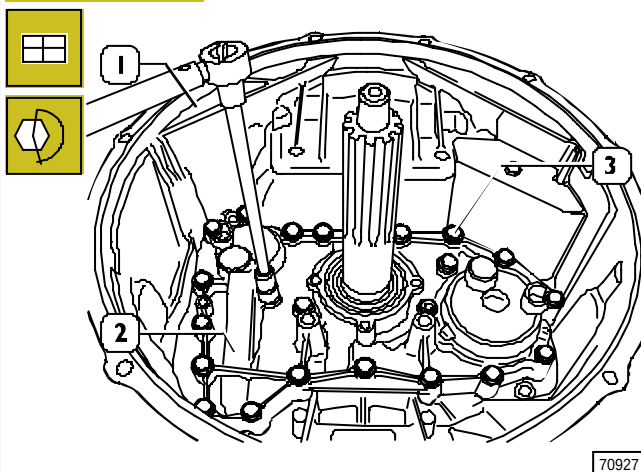


Spread IVECO sealant 1905685 onto the surface of the front box (1) mating with the cover (2). Adjust the key of the oil pump shaft so that it coincides with the coupling milling of the transmission shaft. Fit on the cover (2) and tighten the screws (3) to the prescribed torque.

Figure 4/122

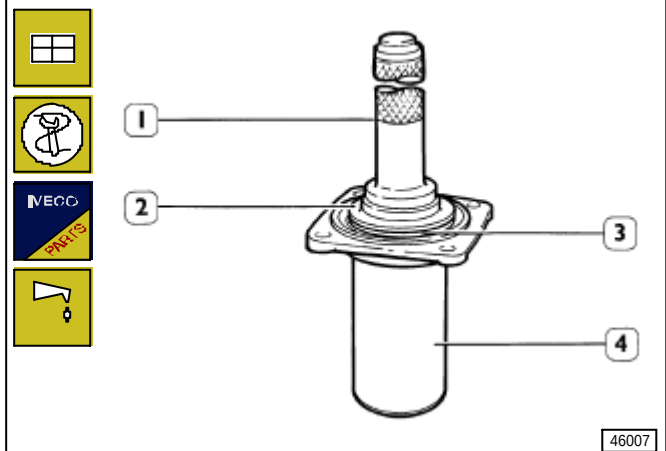

Using the driver 99374336 (2) and grip 99370007 (1), fit the seal (3) in the drive input shaft cover (4).

Figure 4/123

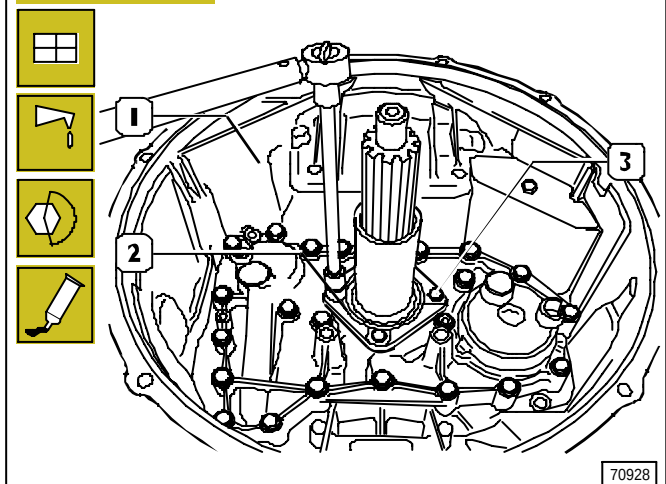


Lubricate the sealing surface of the seal with Unisilikon.

Spread IVECO sealant 1905285 onto the surface of the front box (1) mating with the cover (2). Mount the cover (2). Spread LOCTITE 241 onto the thread of the screws (3) and tighten them to the prescribed torque.

Aquila Trucks Centres

Clutch release lever


Figure 4/124

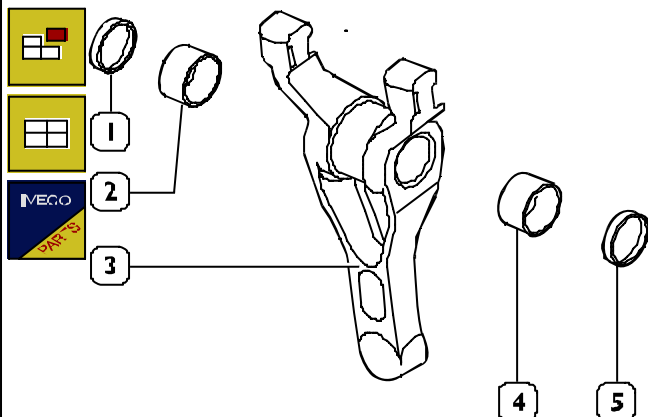

70929

The bushings (2 and 4) and seals (1 and 5) of the lever (3) are changed by using a suitable drift for removing – fitting new parts.


Figure 4/125

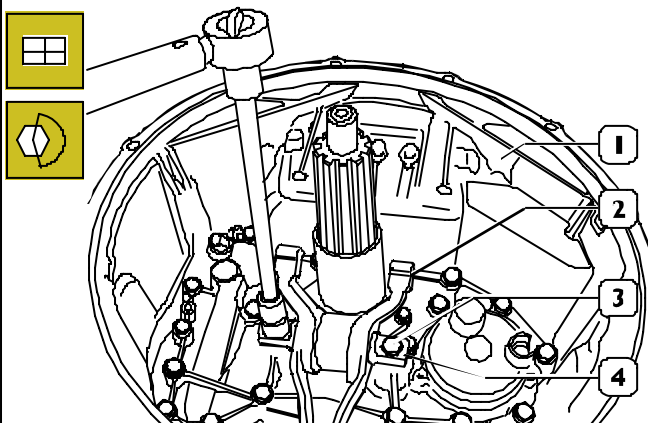

70930

Insert the joint pin (4) into the lever (2) and tighten the screws (3), fixing it to the front box (1), to the prescribed torque.

Figure 4/126

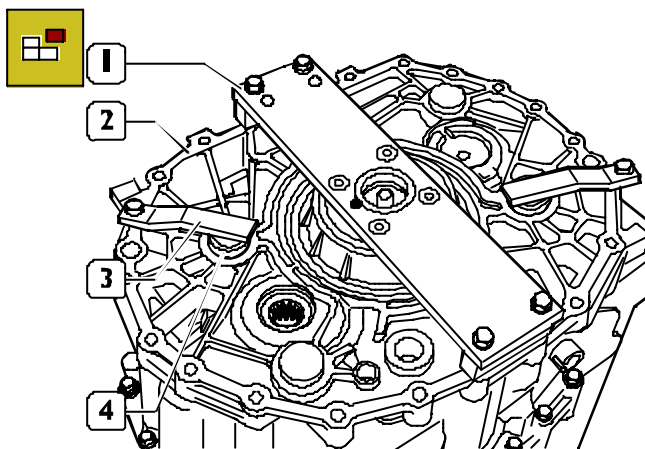


87268

Turn over the gearbox.

Remove the plate 99370153 (1) and the brackets (3) fastening the pins (4) from the middle box (2).

Figure 4/127

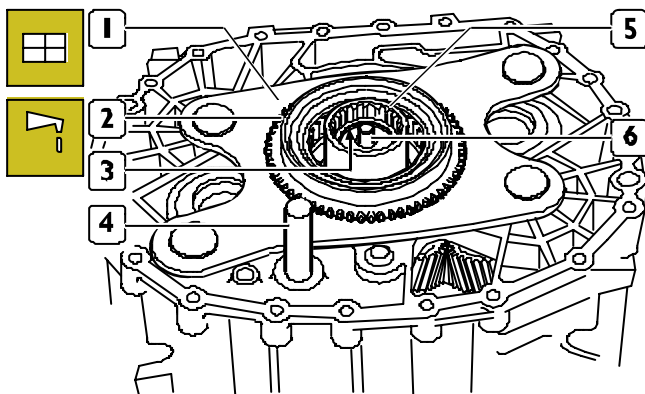

70865

Fit: the plate (1) together with the coupling body (2), adjustment ring (3), connecting sleeve (5) and rod (4).

Fit the small pipe (6). Complete assembly of the gearbox by refitting the rear box and the speed actuator as described under the relevant headings.

On completing assembly, replenish the gearbox with the prescribed grade and quantity of lubricating oil.

Aquila Trucks Centres

Gearboxes **EuroTronic Automated with Intarder** **- 12 AS 1931 T.D.** **- 12 AS 2331 T.D./T.O.**

	Page
MAIN DATA	59
TOOLS	60
EXPERIMENTAL TOOLS	61
OVERHAULING THE GEARBOX	62
- Removing the hydraulic retarder	62
- Refitting the hydraulic retarder	63
- Adjusting epicyclic reduction gear train bearing end float	63
- Adjusting stator end float	64
- Removing the rear box	66
- Disassembling the E.R.G.	66
- Assembling the E.R.G.	68

Aquila Trucks Centres


Aquila Trucks Centres

NOTE This differs from the 12 AS 1930 T.D. - 12 AS 2330 T.D./T.O. gearbox in the following:

MAIN DATA

	GEARBOXES	12 AS 1931 T.D. 12 AS 2331 T.D./T.O.
	Maximum braking torque Nm Braking capacity Kw	3200 500
	Type of oil Quantity after overhauling gearbox and retarder drained completely litres kg	Tutela Truck Fe - Gear Tutela ZC 90 21 18.9

Figure 1

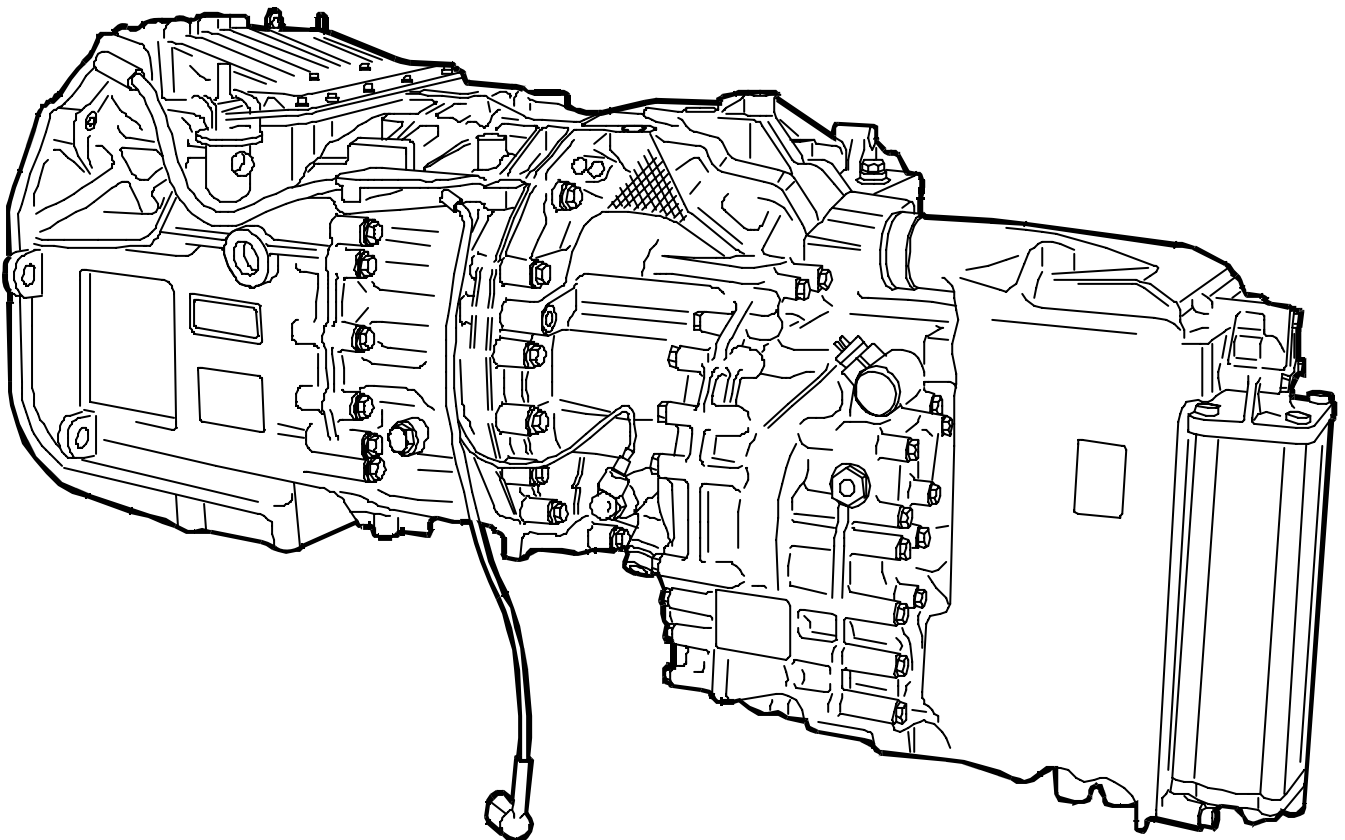

T.D.= Truck Direct Drive
T.O. = Truck Over Drive (Multiplied)


70831

Aquila Trucks Centres


TOOLS

TOOL NO.


DESCRIPTION

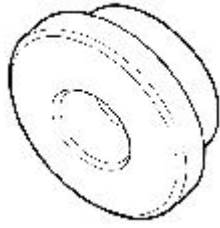99345056

Reaction block for extractors

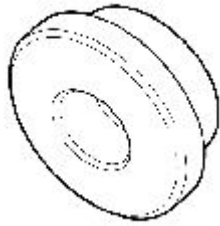99345058

 Reaction block for extractors


99370565

M10 eyebolts (2) for lifting various assemblies

Aquila Trucks Centres

EXPERIMENTAL TOOLS

This heading covers the working drawing for the experimental tool (S.P. 2396) used when overhauling the gearbox described in this section, which can be made by the repair shop.

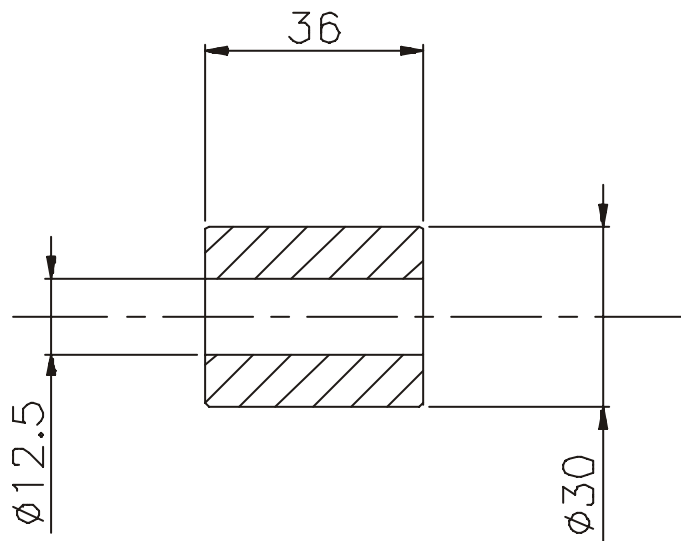

Modification:


For the permissible errors on the dimensions without tolerance and for other general specifications, see **IVECO** STD 10-2311

MAT. Fe 360		COVER. /	DRAWN UTS (B)	N°DRAWING SP. 2396		
All proprietary rights reserved by IVECO. The drawing shall not be reproduced or in any way utilized, for the manufacture or the component or unit herein illustrated and must not be released to other parties, without written consent. Any infringement will be legally pursued.	ISO ≤ IT8 4 ≤ 30' Ra ≤ 0,4	Serie di 3 distanziali	APPROVED	EXPER. 2396	SIZE A4	
		per posizionamento cambio	DATE 12/09/2002	SHEET		
		al cavalletto 99322205+99322225	SUPERSEDES			
	C/ 15.18-0011	Tipo EUROTRONIC 2 ÷ INTARDER		SCALE 1:1	IVECO	
				Q.TY 3		

Aquila Trucks Centres

530210 OVERHAULING THE GEARBOX**Removing the hydraulic retarder**

Figure 2

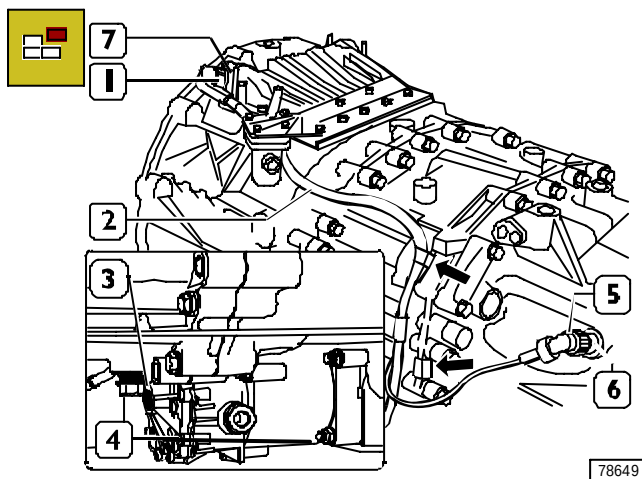


Unscrew the ring nut (1 and 5) and disconnect the electric wiring (2) from the speed sensor (6 and 7).

Detach the wiring (2) from the clips (→) securing it to the middle box.

Remove the nuts (4) and detach the actuator (3) from the front box.


Figure 3

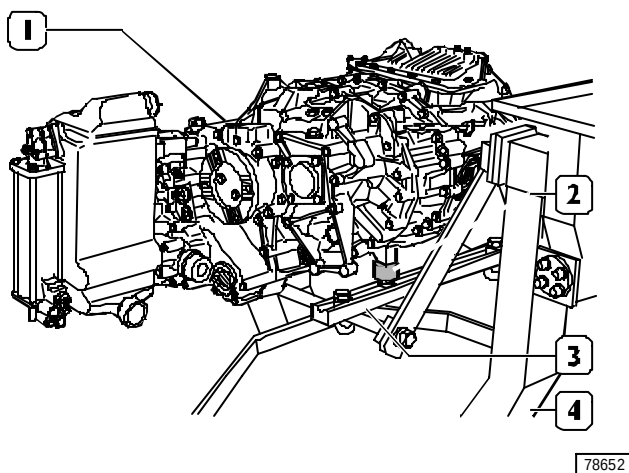

Fit spacers SP. 2396 (2) and fasten the gearbox (1) to brackets 99322225 (3) on the rotating stand 99322205 (4).


Drain off the lubricating oil by removing the plugs from the Intarder and from the gearbox.

Figure 4

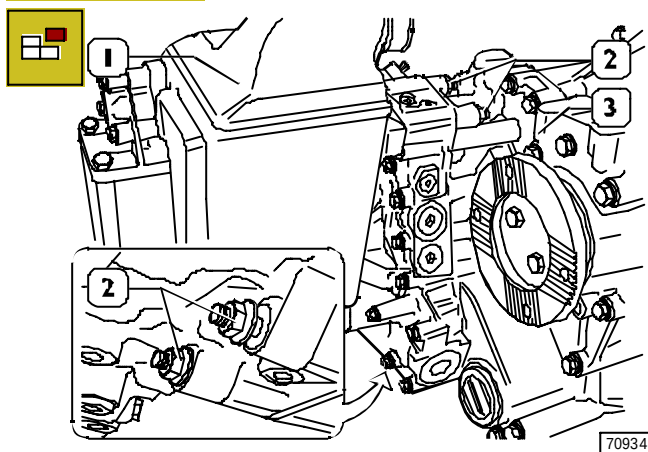


If applicable, remove the four nuts (2) fixing the heat exchanger (1) to the hydraulic retarder (3) and detach the heat exchanger (1).

Figure 5

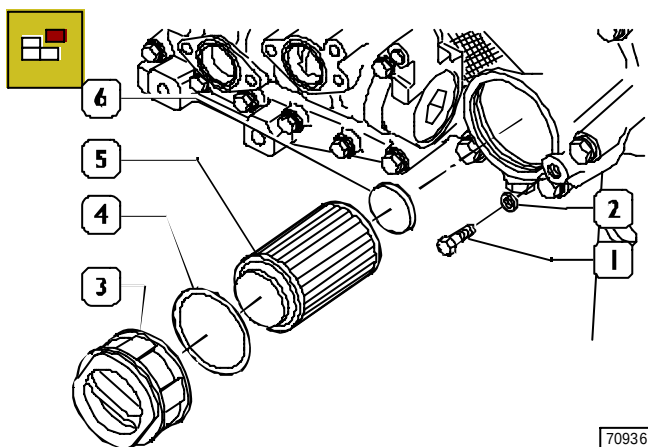

Remove the screw (1) and the washer (2) beneath. Extract the plug (3) with the seal (4), oil filter (5) and magnet (6).


Figure 6

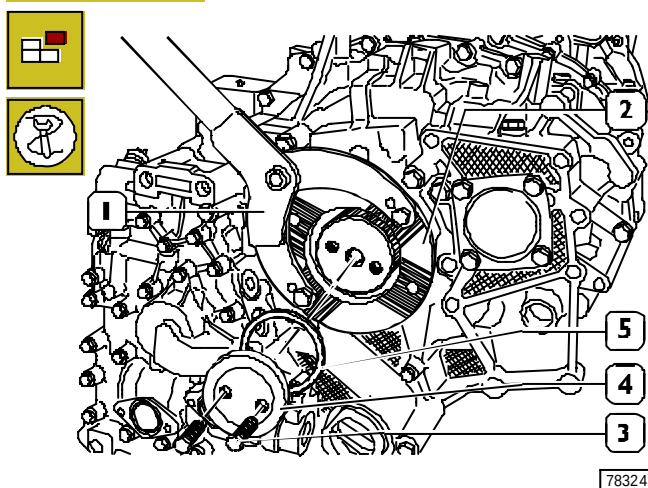

Block rotation of the sleeve (2) by applying the lever 99370317 (1) to it and remove the screws (3), disc (4) and underlying seal (5).


Aquila Trucks Centres

Figure 7

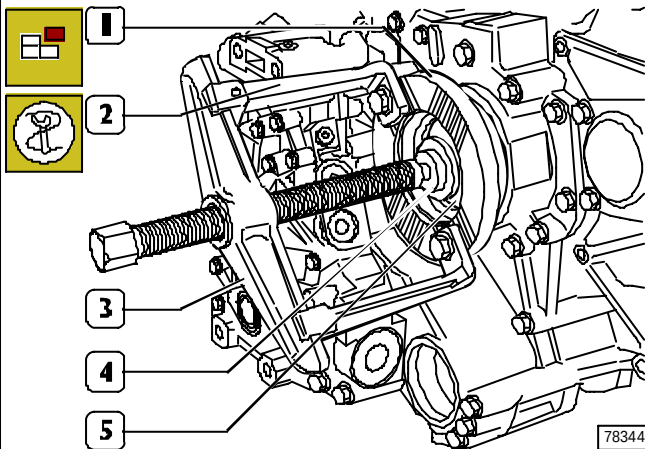


Using an extractor composed of the bridge 99341003 (3), brackets 99341018 (2) and reaction block 993410134 (4), remove the sleeve (1) from the shaft (5).

Figure 8

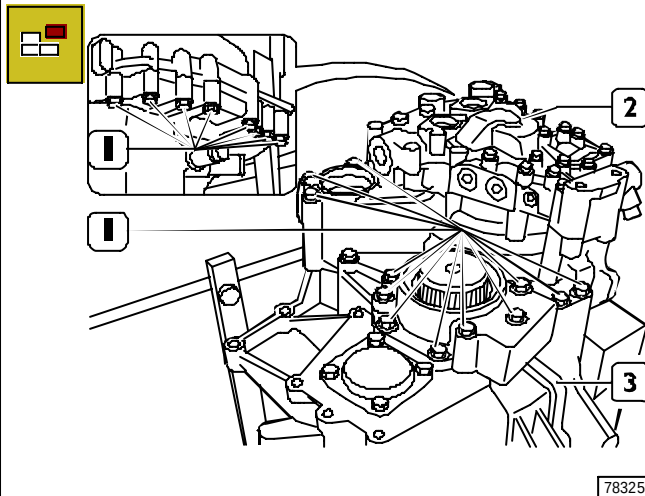

Remove the screws (1) fixing the hydraulic retarder (2) to the rear box (3).

Figure 9

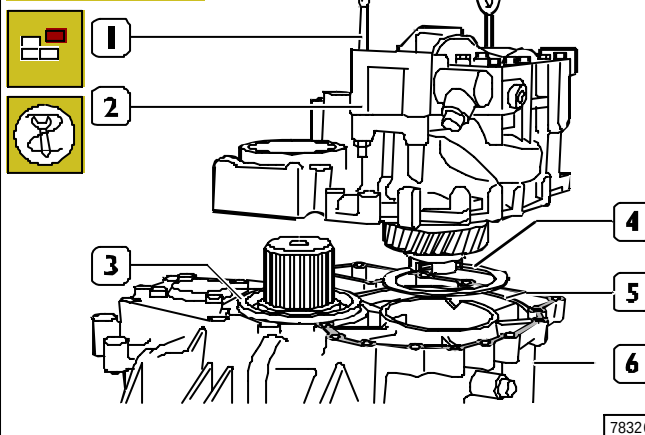

Fit the eyebolt 99370565 (1) to the hydraulic retarder (2). With special ropes and lifter, detach the hydraulic retarder (2) from the rear box (5).


Remove the adjustment rings (3 and 4) and the gasket (6).

Refitting the hydraulic retarder

Before refitting, determine the thickness of the adjustment rings (3 and 4, Figure 9) as follows:

Adjusting epicyclic reduction gear train bearing end float


Figure 10

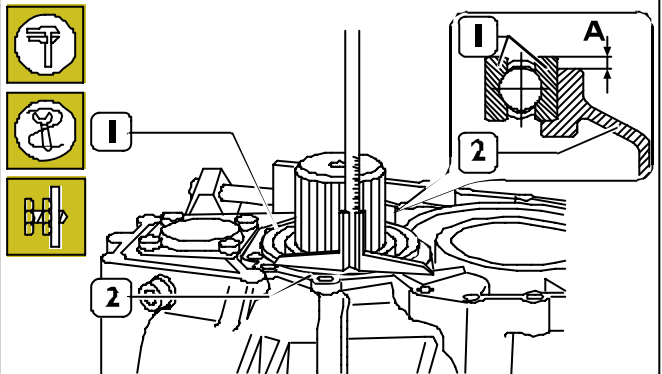

Determine the ball bearing end float adjustment thickness (1) by proceeding as follows:

- measure the protrusion of the bearing (1) from the surface of the rear box (2): distance A;

Figure 11

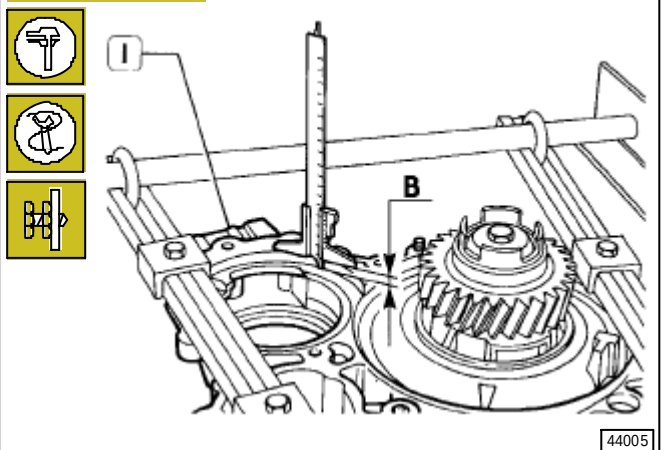

- measure the distance between the sealing surface (1) of the half box of the retarder and the supporting surface of the bearing (1, Figure 10): distance B;
- measure the thickness of the gasket between the retarder and gearbox: distance C.

The thickness S of the adjustment ring is given by the following equation:

$$S = [B + C - A] - G$$


where:

- B - C - A = measurements
- G = 0.1 mm: end float of the ball bearing (1 Figure 10) (0 ÷ 0.1 mm)

Aquila Trucks Centres

Adjusting stator end float

Figure 12

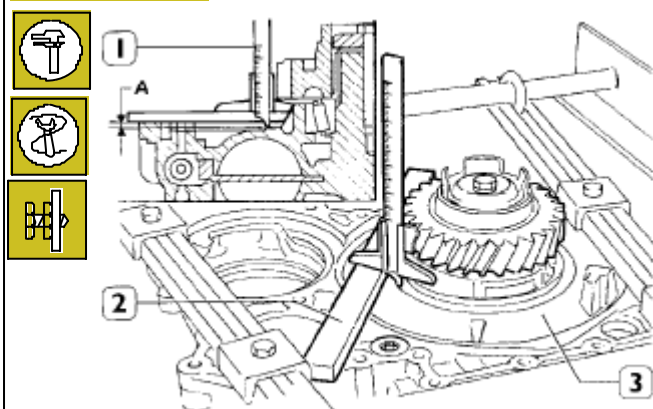


70946

Determine the thickness S of the stator end float adjustment ring:

- using a depth gauge (1) and calibrated rule (2), measure the distance between the sealing surface of the half boxes and the supporting surface of the stator (3): distance A;

Figure 13

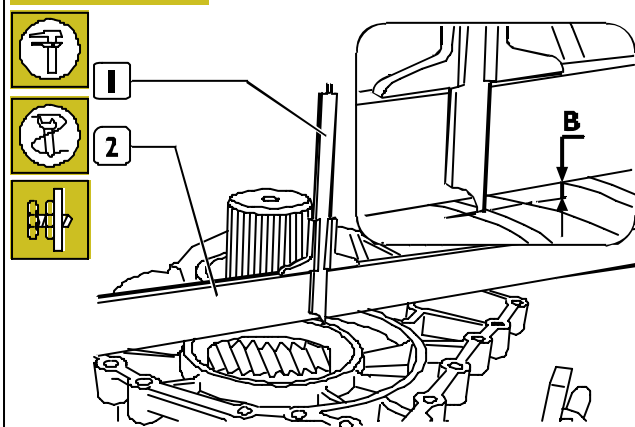


106403

- with depth gauge (1) and calibrated ruler (2), measure distance B between adjusting ring (5,) rest surface and hydraulic decelerator rest surface;
- measure the thickness of the gasket between the retarder and gearbox: distance C.

The thickness S of the stator end float at adjustment ring is given by the following sum: $S = A + B + C + D$

- A, B and C = measurements
- D = 0.05 mm: stator end float adjustment ring pre-load. (- 0.05 ÷ 0.05 mm)

Figure 14

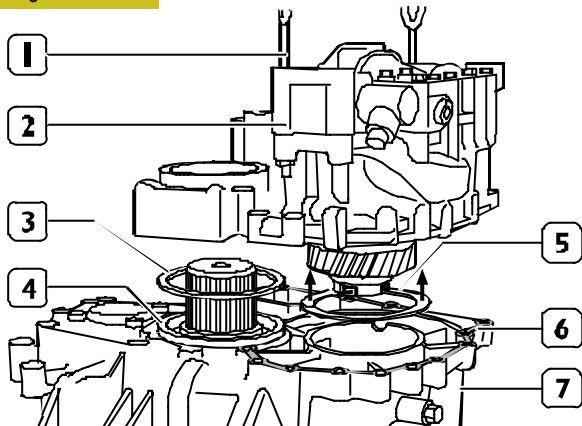

78327


Fit the eyebolt 99370565 (1) to the hydraulic retarder (2) and lift it with a hoist.

Position the adjustment rings (3 and 5) of the thickness determined in the preceding measurements on the bearing (4) and on the seat (→) of the stator.

Fit a new gasket (6) on the rear box.

Mount the hydraulic retarder (2) on the rear box (7) making sure that the gasket (6) gets positioned correctly.

Figure 15

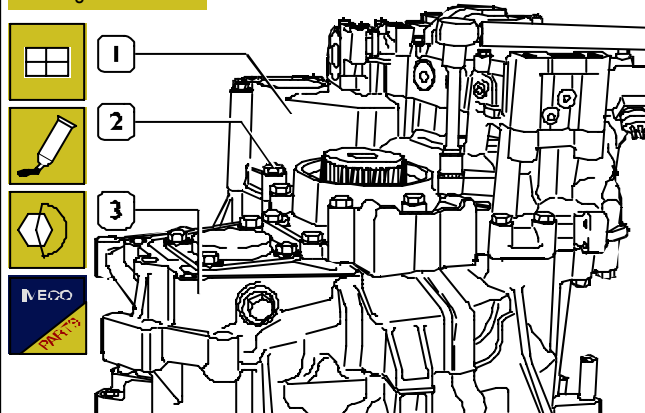


70948

Screw down the screws (2) fixing the hydraulic retarder (1) to the rear box (3) and tighten them to the prescribed torque.

Aquila Trucks Centres


Figure 16

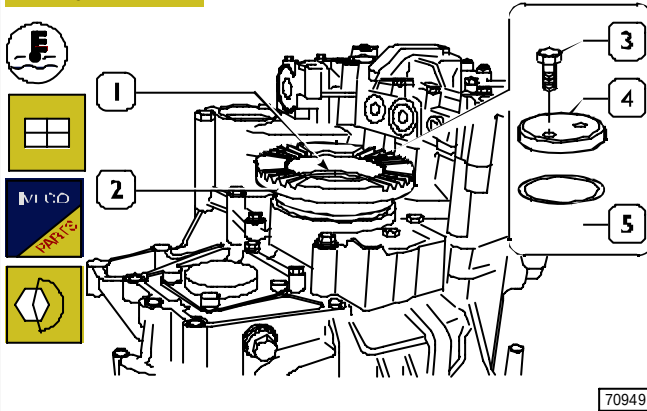

Heat the flange (2) to approx. 80°C and fit it onto the spider shaft (1).


Fit on a new seal (5), the disc (4), screw down the screws (3) and tighten them to the prescribed torque.

Figure 17

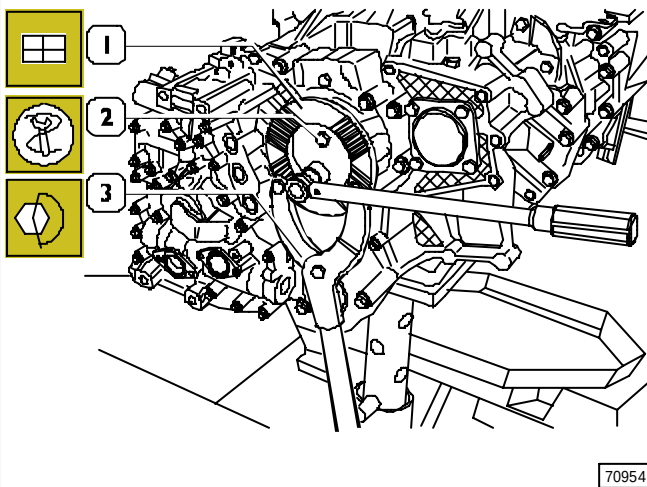

Block rotation of the sleeve (1) by applying the lever 99370317 (3) and tighten the fixing screws (2) to the prescribed torque.


Figure 18

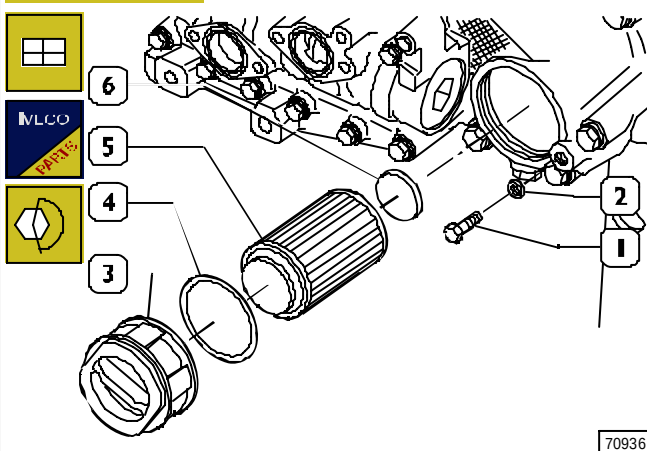

Position the magnet (6) on the filter (5) and insert this into the hydraulic retarder. Fit the plug (3) with a new seal (4).


Screw down the fastening screw (1) with the washer (2).

Figure 19

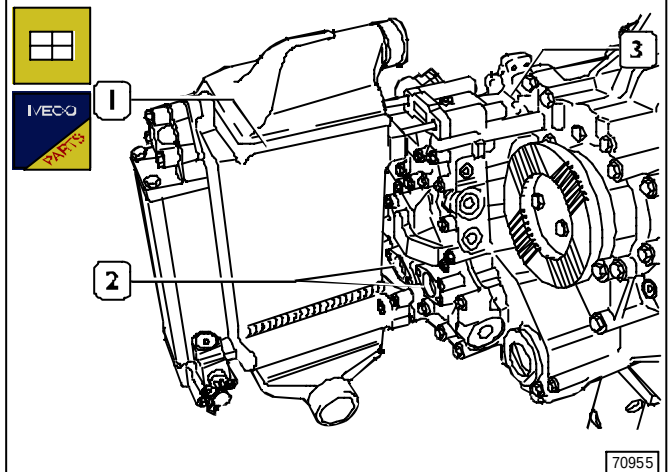


Fit two new seals (2) on the hydraulic retarder (3) and mount the heat exchanger (1) (if applicable).

Figure 20

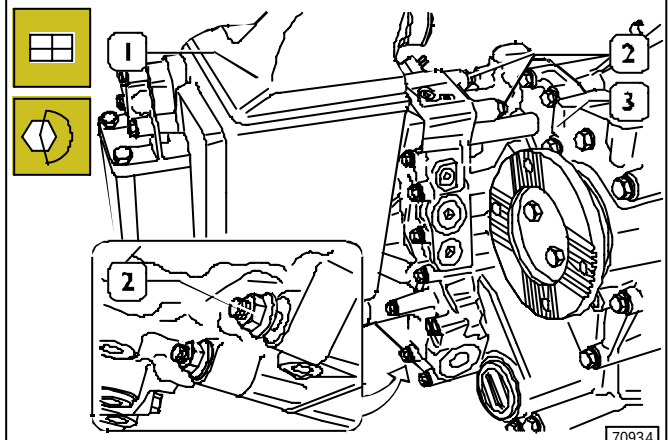

Screw down the four nuts (2) fixing the heat exchanger (1) to the hydraulic retarder (3) and tighten them to the prescribed torque.

Figure 21

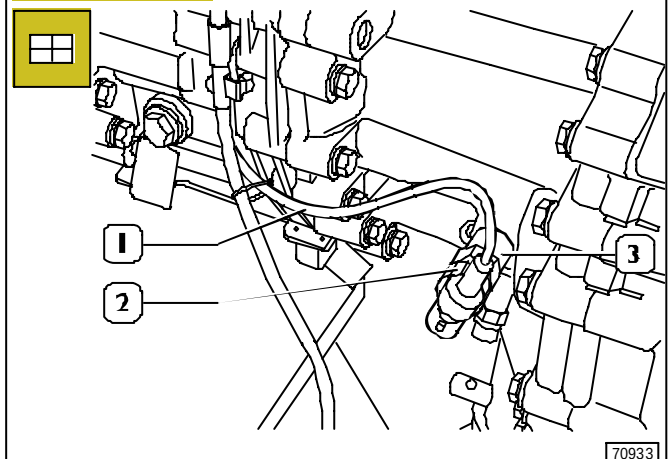


Connect the electric wiring (1) to the speed sensor (3) and tighten the ring nut (2). Replenish the gearbox with the prescribed grade and quantity of lubricating oil.

Aquila Trucks Centres

Removing the rear box

Figure 22

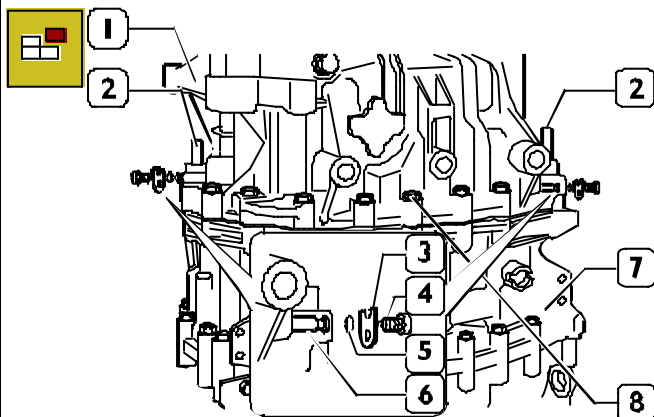

70937


Disconnect the gear actuator, as described in the respective chapter.

Remove the hydraulic retarder as described under the relevant heading.

Remove the fastening screws (4) of the plates (3) retaining the pins (6) and remove the pins with the O-rings (5) from the central case (7).

Take off the locating pins (2) and remove the rear case (1) fastening screws (8).

Figure 23

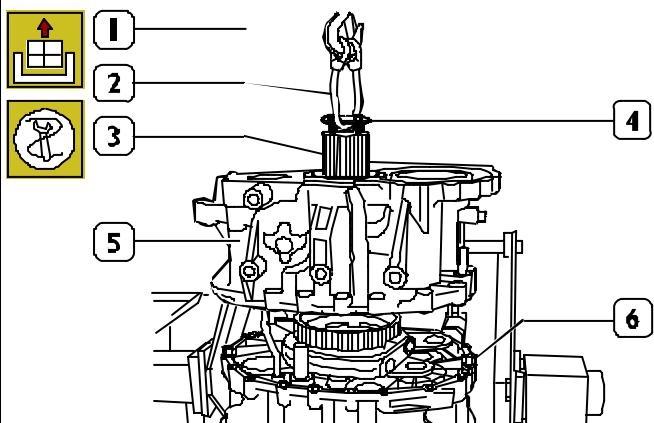


85851

Apply the flange fastening plate (4) on the planetary gear shaft (3) and leave enough clearance to let the rope (2) pass through.

Hook the rope to a hoist (1) and remove the rear case (5) from the central case (6).

Disassembling the E.R.G.


Figure 24

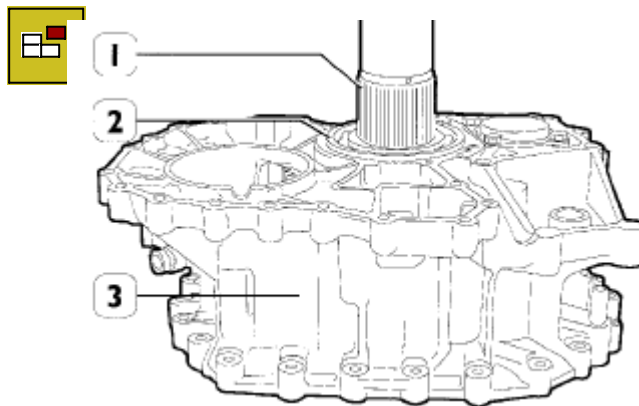

48941

Using a press, extract the E.R.G. spider shaft (1) from the supporting ball bearing (2). Turn the rear box (3) upside-down and extract the ball bearing (2).


Figure 25

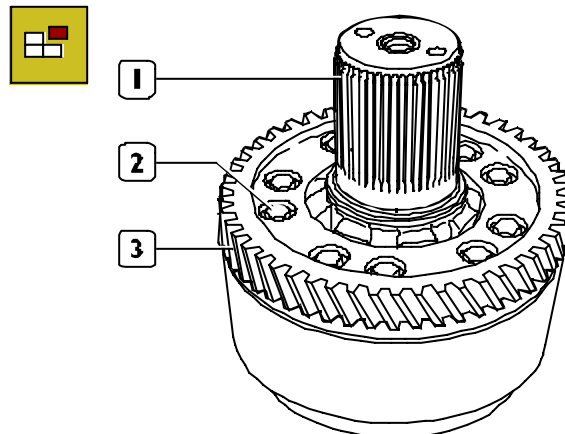

70941

Remove the screws (2) securing the gear (3) to the spider shaft (1).

Figure 26

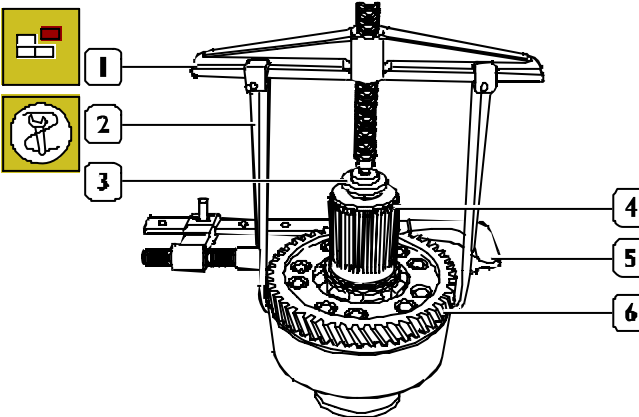


70942

Using an extractor composed of: bridge 99341004 (1), stays 99341012 (2), reaction block 99345056 (3) and clamp 99341015 (5), extract the gear (6) from the spider shaft (4).

Aquila Trucks Centres


Figure 27

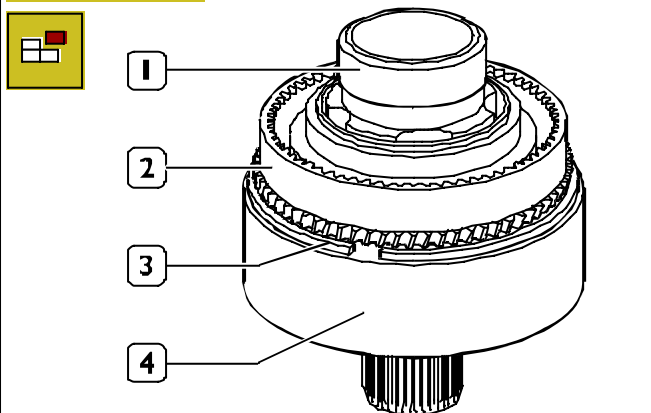

70836

Using a screwdriver, remove the seeger ring (3) fastening the ring gear with internal tooting (4) to the ring gear with external tooting (2) and remove them from the E.R.G. (1).


Figure 28

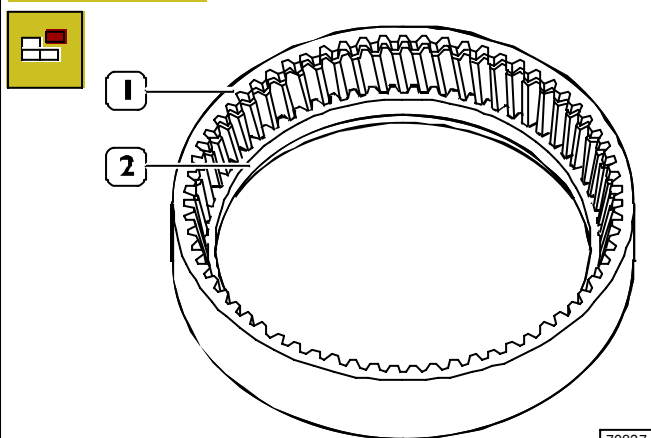

70837

Extract the toothed ring (2) from the ring gear with internal tooting (1).


Figure 29

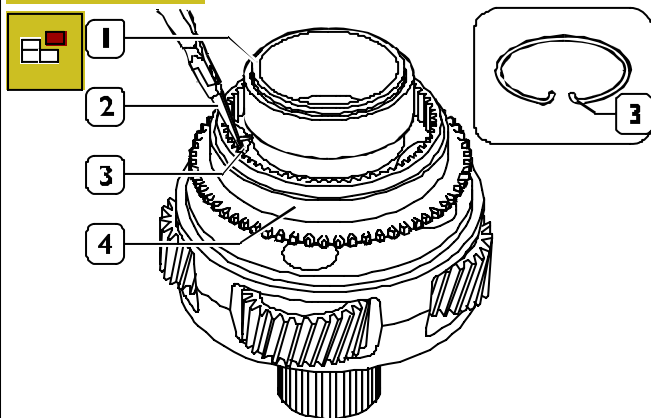

70838

Using pliers (2), tighten the ends of the seeger ring (3) and remove the coupling body (4) from the E.R.G. shaft (1).


Figure 30

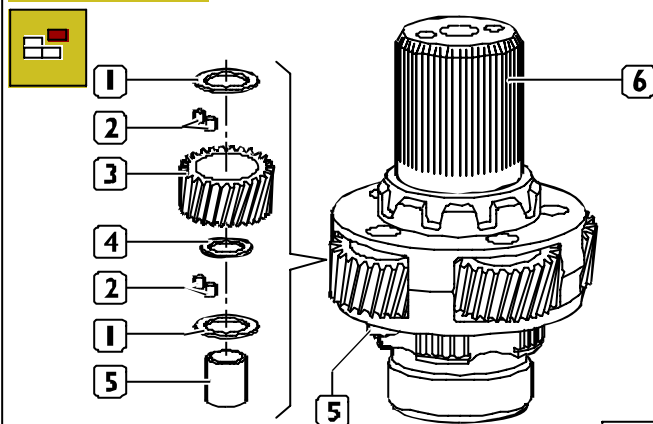

70839

Using a punch, extract the pins (5) from the spider shaft (6). Remove the planetary gears (3) from the spider shaft (6), together with the rollers (2) and shim adjustment rings (1 and 4).


Figure 31

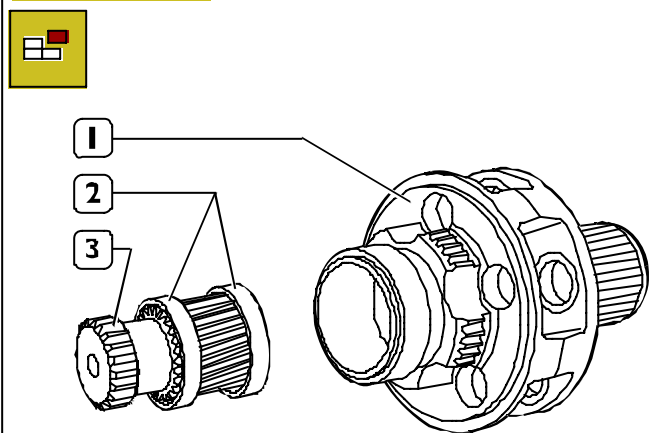

70840

Extract the toothed spindle (3) from the spider shaft (1) together with the rings (2).

Figure 32

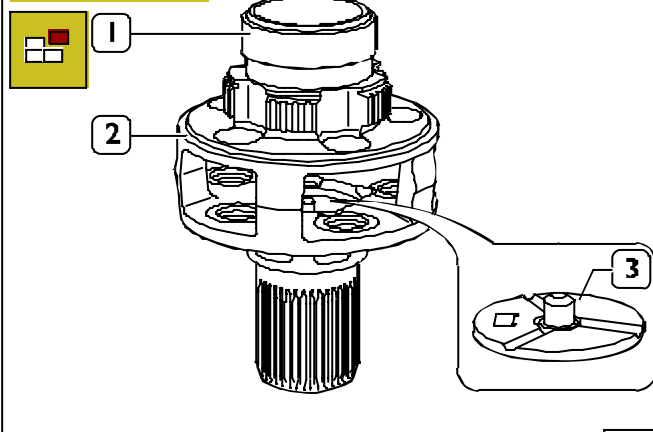


70842

Using a suitable extractor, remove the roller bearing ring (1) from the spider shaft (2). Using a punch, extract the disc (3) from the inside of the spider shaft (2).

Aquila Trucks Centres


Figure 33

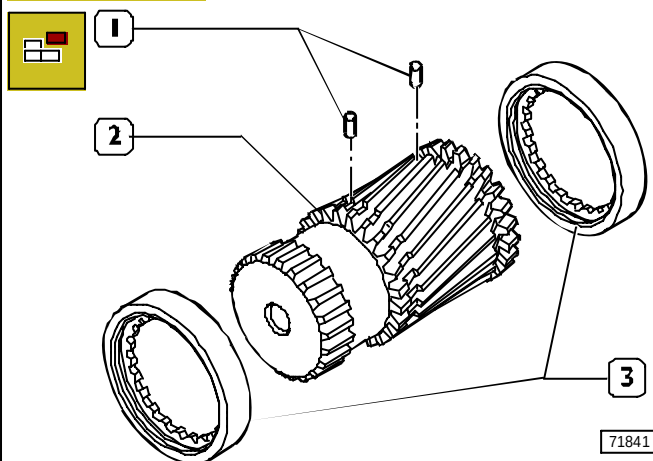

Extract one of the pins (1) from the toothed spindle (2) and extract the rings (3) from this.

Assembling the E.R.G.


Figure 35

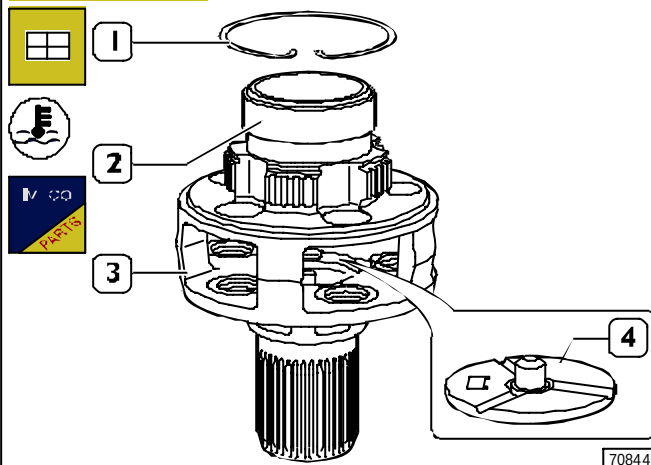

Heat the inside ring (2) of the roller bearing to and fit it on the spider shaft (3).

Fit on the circlip (1). Fit on the disc (4).

Figure 34

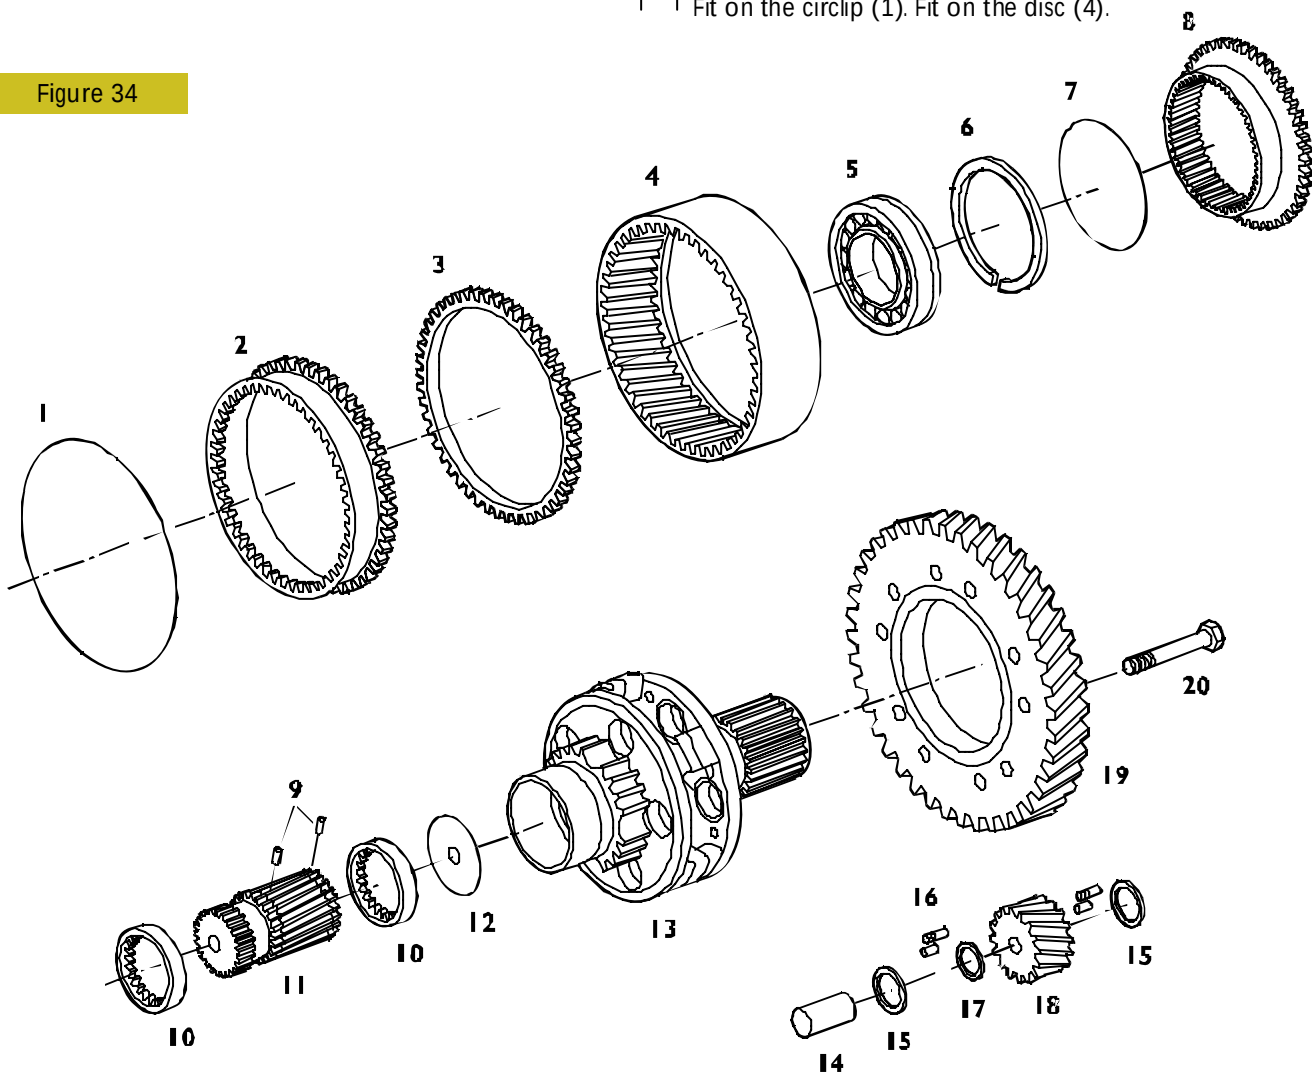


PARTS COMPRISING THE E.R.G.

1. Circlip - 2. Ring gear with external toothing - 3. Toothed ring - 4. Ring gear with internal toothing - 5. Bearing - 6. Circlip - 7. Circlip - 8. Coupling body - 9. Pins - 10. Ring - 11. Toothed spindle - 12. Disc - 13. Spider shaft - 14. Pin - 15. Shim adjustment ring - 16. Rollers - 17. Shim adjustment ring - 18. Planetary gear - 19. Gear - 20. Screw.

70943

Aquila Trucks Centres


Figure 36

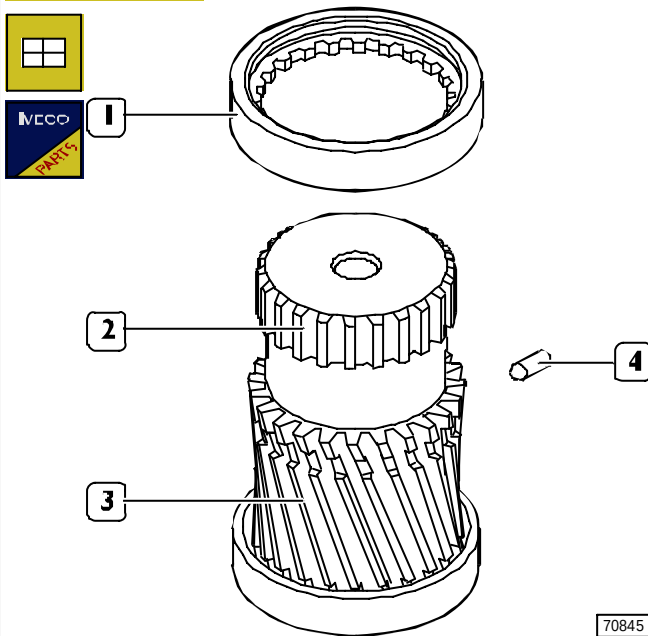

70845

Drive the rings (1 and 3) onto the toothed spindle (2) and fit on the pin (4).


Figure 37

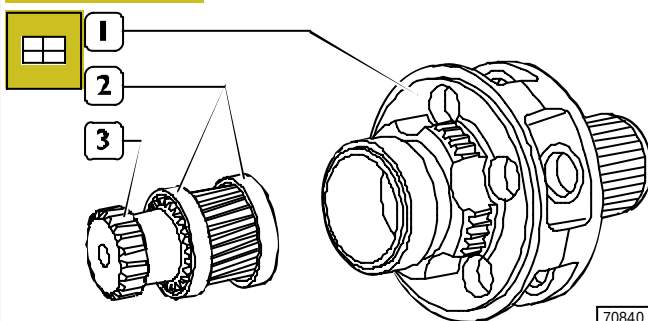

70840

Insert the spindle (3) together with the rings (2) onto the spider shaft (1).

Figure 38

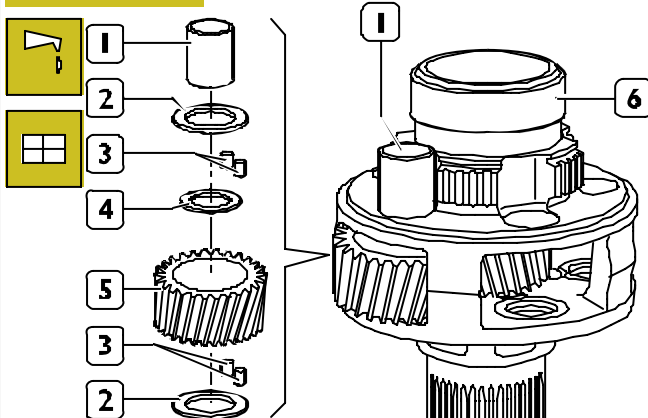


70982

Smear grease into the hole of the planetary gear (5) and insert the rollers (3) with the associated shim adjustment rings (2 and 4).

Fit the planetary gears (5) onto the spider shaft (6), fastening them to it with the pins (1).


Figure 39

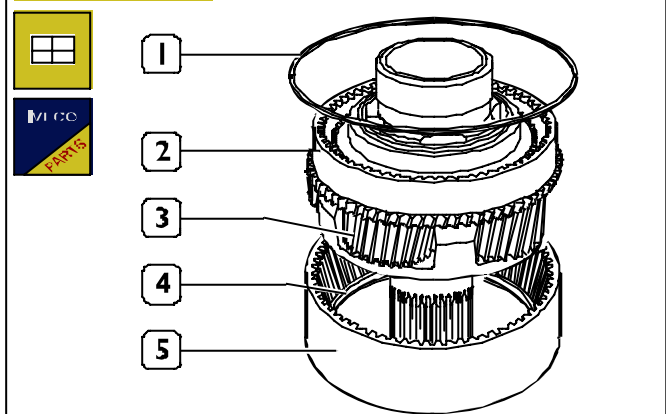

70983

On the spider shaft (3), fit: the ring gear with internal toothing (5) together with the toothed ring (4), and the ring gear with external toothing (2) and fasten the two ring gears with the circlip (1).

Figure 40

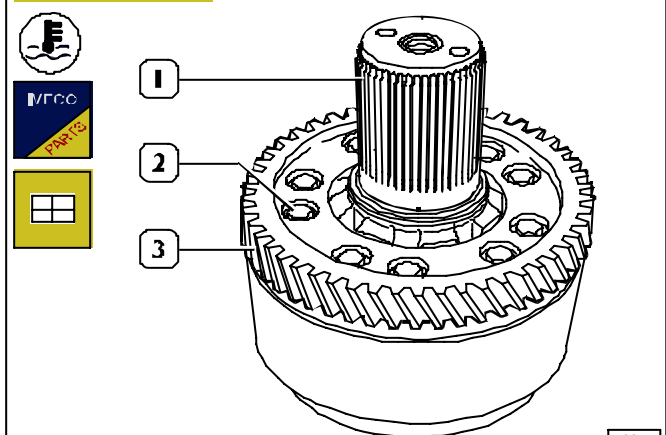

70941

Heat the gear (3) to $120^{\circ}\text{C} \pm 130^{\circ}\text{C}$ and fit it onto the spider shaft (1). Screw down the fixing screws (2) and tighten them to the prescribed torque.

Figure 41




48944

Heat the seat of the bearing (1) of the rear box (2) to 90°C and mount the bearing (1).

Aquila Trucks Centres


Figure 42

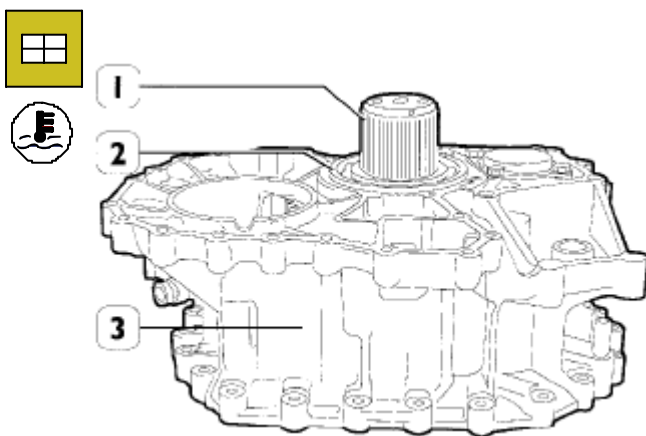

48946

Rest the spider shaft (1) on an appropriate spacer. Heat the inside ring of the bearing (2) to approx. 100°C and drive it together with the rear box (3) onto the spider shaft (1).


Figure 43

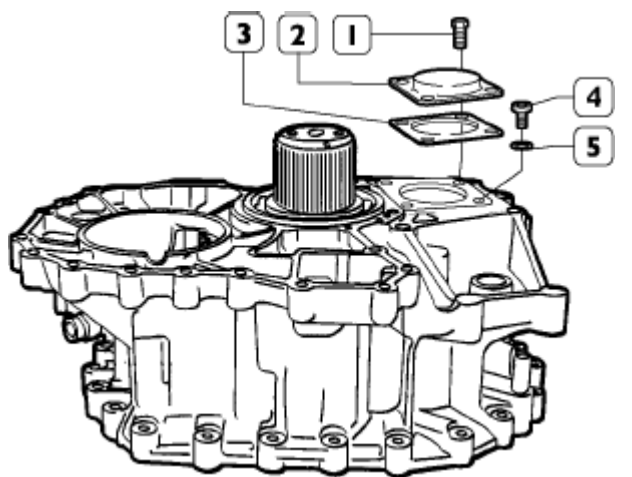

78364

Take out the screws (1) and remove the cover (2) with its seal (3). Remove the screw (4) with the washer (5).

Figure 44

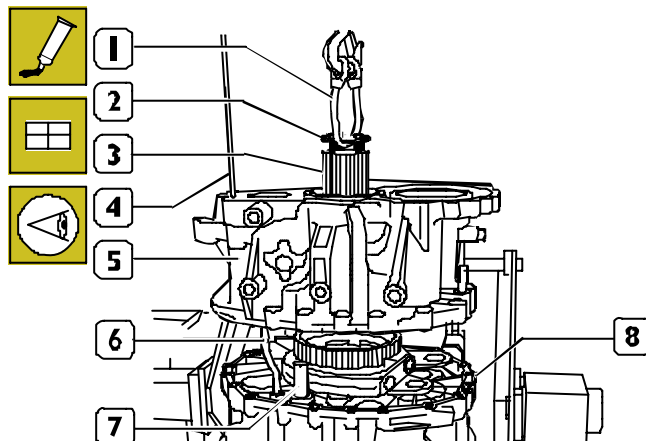

85852


Apply sealer IVECO 1905685 on the central case (8) mating surface. Apply the shaft (3), the planetary gear shaft (3) fastening plate (2) leaving enough clearance to let the rope (1) pass through.

Hook the rope to a hoist and position the rear case (5) coaxially compared to the central case (8).

Fit a reinforcement (4) having the suitable diameter in the screw hole (1, Figure 45) and in the oil pipe (6) in order to lead the pipe into its seat when the rear case is lowered.

Lower the rear case (5) and make sure the planetary gear shaft, the oil pipe (6) and the bar (7) are fitted correctly in the respective seats.

Figure 45

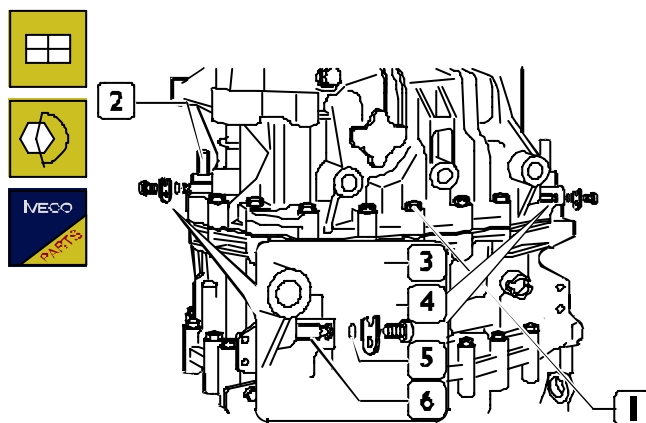


70937

Screw down the screws (1) without tightening them; insert the centring pins (2) and tighten the screws (1) to the prescribed torque.

Fit the fork joint pins (6) with fresh seals (5) and tighten the screws (4) fixing the fastening plates (3) to the prescribed torque.

Aquila Trucks Centres

Figure 46

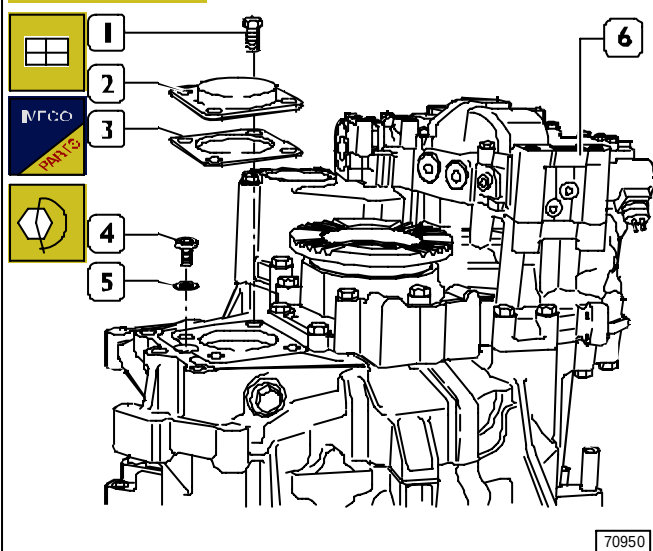

Fit the screw (4) with a new washer (5) and tighten it to the prescribed torque.

Fit the cover (2) with a fresh seal (3) and tighten the fixing screws (1) to the prescribed torque.

Then refit the hydraulic retarder (6) as described under the relevant heading.

Aquila Trucks Centres

Aquila Trucks Centres

EuroTronic Gearboxes Diagnostic

	Page
FAULT DIAGNOSIS	75
- Diagnosis Instruments	75
- Cluster Diagnosis	77
- DTC-FMI error codes	78

Aquila Trucks Centres

Aquila Trucks Centres

FAULT DIAGNOSIS

EUROTRONIC troubleshooting can be performed with the Cluster or Modus, E.A.SY. and IT 2000 diagnosis instruments.

Diagnosis via cluster makes it possible to estimate the fault situation in the system in advance, while the fault-diagnosis instruments are essential to make a thorough diagnosis and operate correctly on the single faults.

For each single instrument it displays the diagnosis and repair help.

Diagnosis Instruments

MODUS (Maintenance and Diagnostic System)

A computerized fault-diagnosis station dedicated to diagnosing the brake systems, air suspensions, engines and systems controlled electronically.

The station is equipped with auxiliary functions, such as: programming electronic control units, consulting the spare parts catalogue and service time schedules.

The vehicle has a 30-pin diagnosis socket to interface with the instrument.

IT 2000 (IVECO Electronic Tester)

This makes it possible to take immediate action on the vehicle, identifying it with the chassis number.

It saves the results of diagnostics actions performed.

It can be used as a portable Personal Computer, too, being fitted for remote diagnosis.

By using MODUS as the mother station it is possible to update and configure the IT 2000.

IT 2000 interfaces with the vehicle via a 30-pin diagnosis socket.

E.A.SY.


E.A.SY. system allows to simply make the diagnosis and programming of the various electronic central units aboard the vehicle.

E.A.SY. system is made up of ECI module communicating with the electronic central units and of a Panasonic PC.

ECI module, exploiting the Panasonic PC, also allows easy on the road interventions: in particular, thanks to Panasonic PC wireless technologies (e.g. GPRS), diagnostic interventions can be assisted by a remote expert centre.

Aquila Trucks Centres

Figure 1

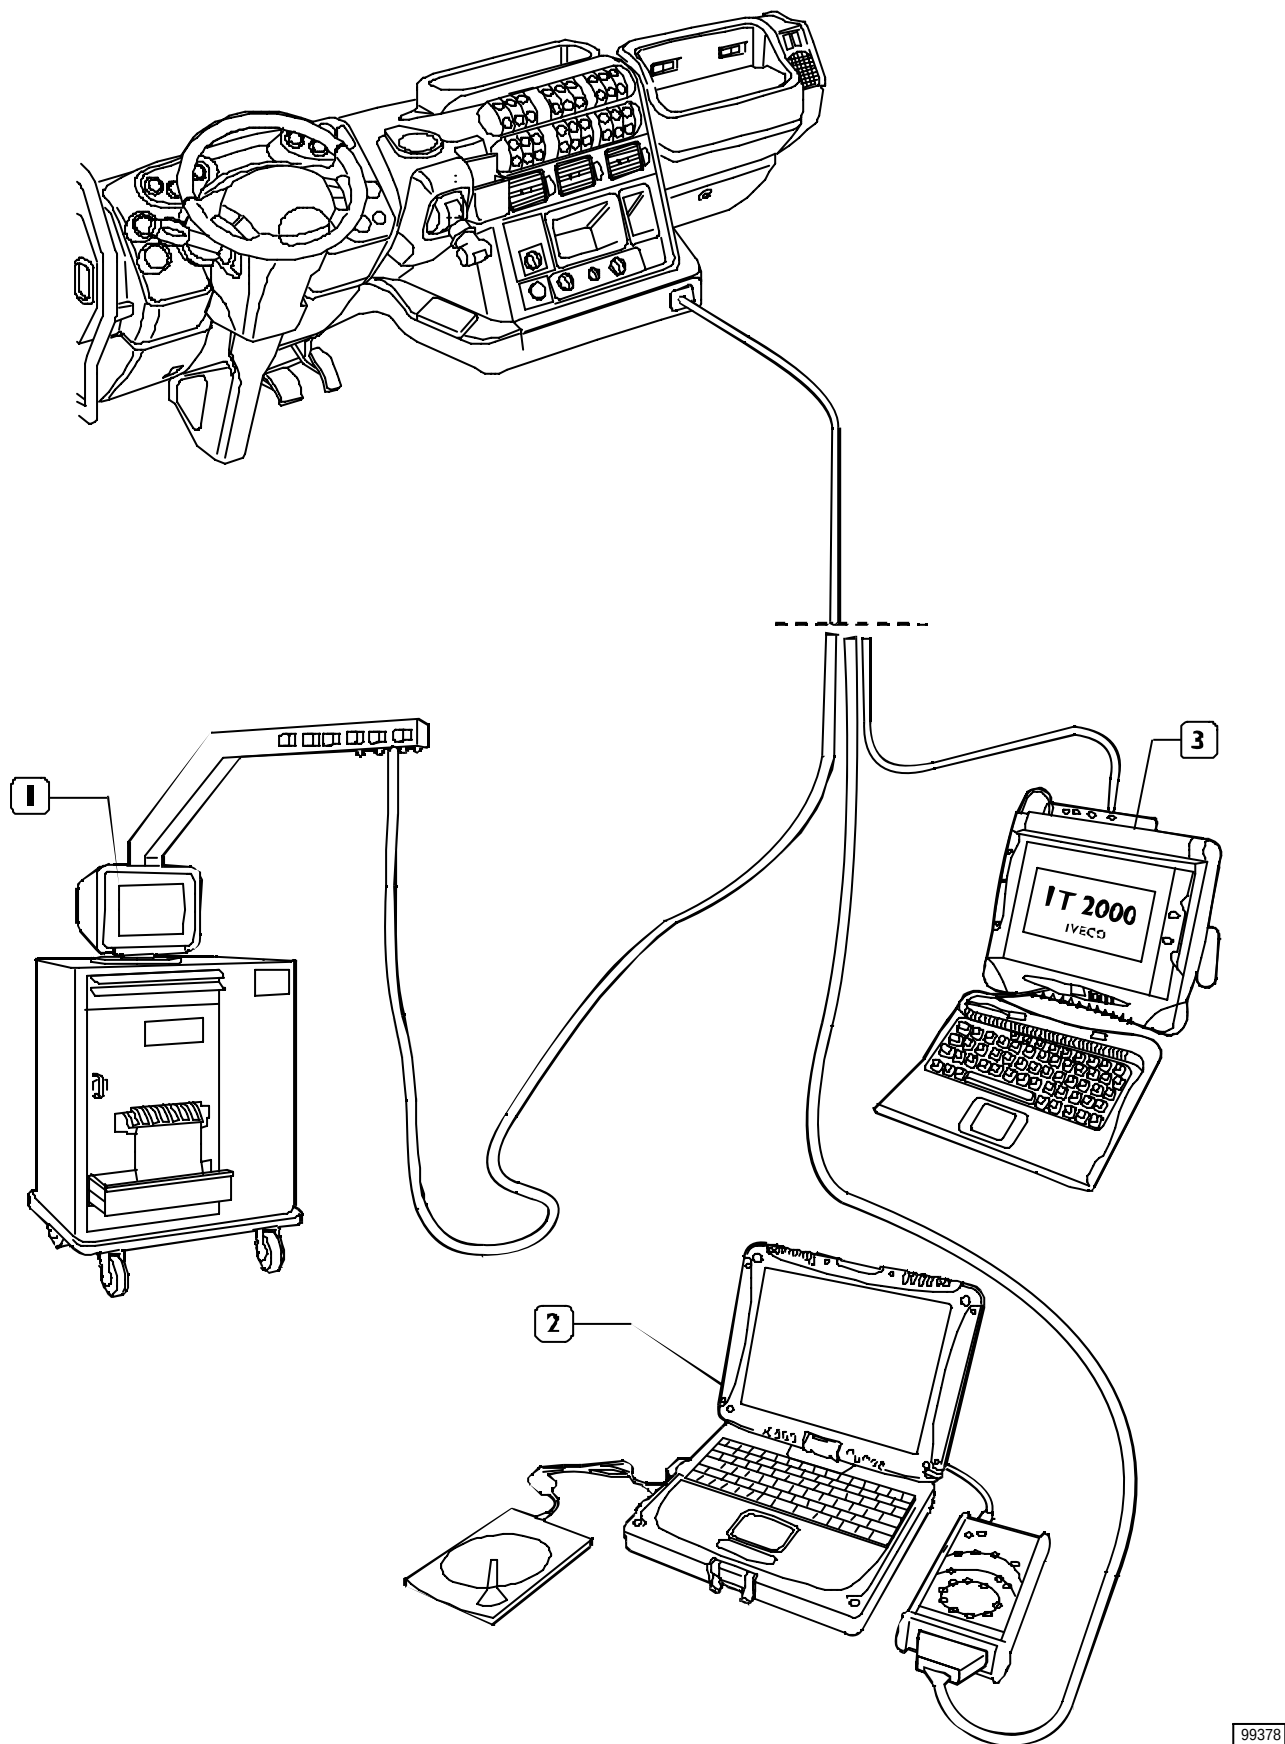

1. E.A.S.Y. - 2. IT 2000 - 3. Modus


99378

Aquila Trucks Centres

Diagnosis on Cluster

Access to diagnostic screen is possible through "page" or " y " " b " keys.

Figure 2

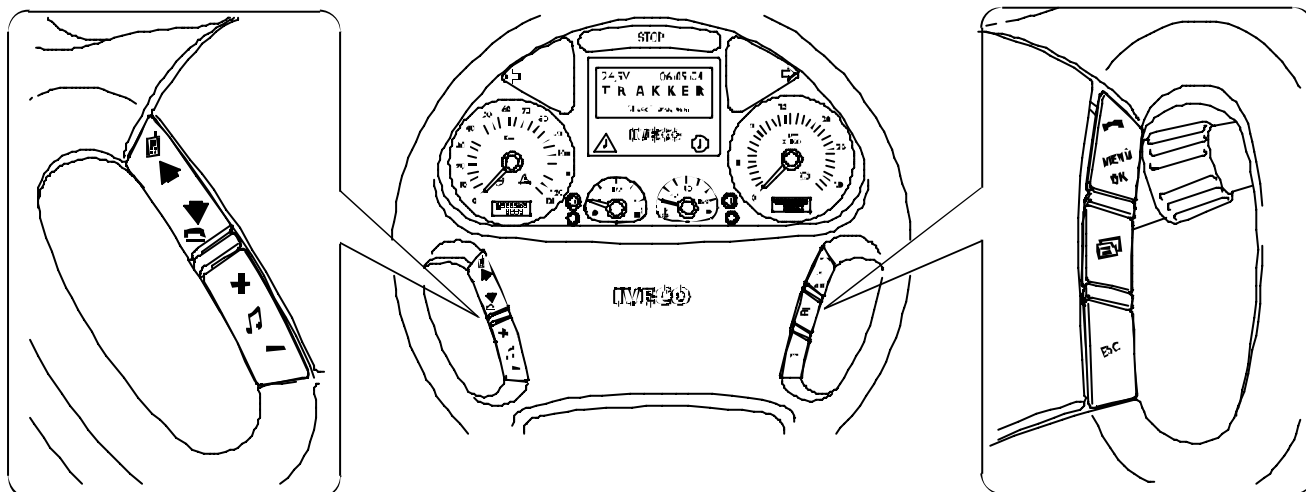

98888



Diagnostics

EDC	20011	30	127
IBC	22133	01	3
ECAS	20308	00	1

98885

Diagnosis information on the cluster is split into 4 columns:

- First column = central unit.
- Second column = central unit address plus fault order number.
- Third column = failure type.
- Fourth column = failure frequency.

The screen shows three error messages at most, but can store up to eight error messages. For displaying any further messages, just operate " y " and " b " keys.

DTC-FMI error codes

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
		SENSORS -TRANSMISSION OUTPUT SPEED	WRONG SIGNAL			Check the clutch actuator and the integrity of the connections with the gear actuator (electronic control unit)				Gear actuator replacement (control unit)
		SIGNALS - SENSOR - TACHOGRAPH SENSOR	WRONG SIGNAL	Other errors 91,100,177 present.	Short circuit to ground to pin 8 - CAN H possible.	Check vehicle CAN.	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	
		SIGNALS - SENSOR - TACHOGRAPH+OUTPUT SHAFT SPEED SENSOR	BOTH SPEED SENSORS FAULTY	If the output speed signal 1 is available, there are no restrictions on the system.		Check vehicle-end wiring. Check and replace defective output sensor.				Error 99,101 set; Output speed > 2500 rpm; Vehicle speed too high.

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
		CAN LINE - ENGINE - REQUESTED ENGINE TORQUE	WRONG SIGNAL	Vehicle moving: No calculation of vehicle weight and gear resistance possible. Impossible to calculate starting gear. The driver's request will be substituted by the information on the throttle pedal position. Once coupling is over, an amount of fuel equivalent to the throttle pedal value will be released. The clutch coupling quality could be reduced. During cruise control operation it is not possible to release any amount of fuel because the throttle pedal value is 0. After the clutch has engaged, the amount of fuel will be released by the EDC. Poor coupling quality after changing gear. Vehicle stationary: Starting is possible. On reaching the stop, the average starting gear will be engaged. No additional functional restrictions.		Check accelerator/accelerator wiring. Replace/repair accelerator/periphery.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
		CAN LINE - ENGINE - LOW IDLE SWITCH	WRONG SIGNAL	Further errors saved in EDC.		Please make also a diagnosis check on EDC system.				
		CAN LINE - ENGINE - CONTROL MESSAGE	TIMEOUT			Check fuse box fuses.				
		CAN LINE - ENGINE - CONTROL MESSAGE	TIMEOUT		In the EEC1 message time-out at the following signals: - Idling switch - Kickdown switch - Accelerator pedal position - Engine torque ratio calculation	Please make also a diagnosis check on EDC system.				
		CAN LINE - ENGINE - NUMBER OF ENGINE REVS.	WRONG SIGNAL			Check vehicle CAN.	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
02	05	SHIFTING ACTUATOR - SOLENOID VALVE (Y2) SPLITTER	SHORT CIRCUIT TO GROUND	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Replacing the gearbox actuator (control unit)				
03	05	SHIFTING ACTUATOR - SOLENOID VALVE (Y3) SPLITTER	SHORT CIRCUIT TO GROUND	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Replacing the gearbox actuator (control unit)				
04	05	SHIFTING ACTUATOR - (Y4) SOLENOID VALVE GEAR SELECTION	SHORT CIRCUIT TO GROUND	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Replacing the gearbox actuator (control unit)				
05	05	SHIFTING ACTUATOR - (Y5) SOLENOID VALVE GEAR SELECTION	SHORT CIRCUIT TO GROUND	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Replacing the gearbox actuator (control unit)				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
06	05	SHIFTING ACTUATOR - (Y6) SOLENOID VALVE GEAR ENGAGEMENT	SHORT CIRCUIT TO GROUND	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Replacing the gearbox actuator (control unit)				
07	05	SHIFTING ACTUATOR - (Y7) SOLENOID VALVE GEAR ENGAGEMENT	SHORT CIRCUIT TO GROUND	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Replacing the gearbox actuator (control unit)				
08	05	SHIFTING ACTUATOR - (Y8) SOLENOID VALVE RANGE LOW	SHORT CIRCUIT TO GROUND	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Replacing the gearbox actuator (control unit)				
09	05	SHIFTING ACTUATOR - (Y9) SOLENOID VALVE RANGE HIGH	SHORT CIRCUIT TO GROUND	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Replacing the gearbox actuator (control unit)				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
0A	05	SHIFTING ACTUATOR - (Y10) MAIN VALVE	SHORT CIRCUIT TO GROUND	Impossible to change gear, not even in neutral. The selected gear stays engaged. The vehicle can only set off again in particular conditions (gear selected =< the 8 th gear).		Replacing the gearbox actuator (control unit)				
0B	05	DEVICE - WARNING LAMP/BUZZER	SHORT CIRCUIT TO GROUND	Possible short circuit.		Check wiring	1- Measure type: Voltage (V) Measure point 1: Connector for ECU power supply - vehicle side. Pin: 11 Measure point 2: Connector for ECU power supply - vehicle side. Pin: 16 2- Measure type: Voltage (V) Measure point 1: Connector for ECU power supply - vehicle side. Pin: 11 Measure point 2: Connector for ECU power supply - vehicle side. Pin: 17	1- Connector Connected; Key +15 ON; 2- Connector Connected; Key +15 ON;	1- Min. value: 22 V; Max. value: 28 V; 2- Min. value: 22 V; Max. value: 28 V;	

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
0D	05	DEVICE - REAR PTO - REAR ENGINE PTO EN-GAGED	SHORT CIRCUIT TO GROUND	PTO 1 not available. No additional system restrictions.		Check wiring, control contactor, connections with the MUX system and gear lever				
0D	05	DEVICE - REAR PTO - REAR ENGINE PTO EN-GAGED	SHORT CIRCUIT TO GROUND			For STRALIS please check either for a possible short between 9131 and 0131 cables or check for a possible wiring inversion on ST67 connector (PIN 4 of 0131 cable could be inverted with PIN 2 of 9131 cable).				
0E	05	DEVICE - PTO 2 - LATERAL ENGINE PTO EN-GAGED	SHORT CIRCUIT TO GROUND	PTO2 not available. No additional system restrictions		Check wiring, control contactor, connections with the MUX system and gear lever				
0E	05	DEVICE - PTO 2 - LATERAL ENGINE PTO EN-GAGED	SHORT CIRCUIT TO GROUND			For STRALIS please check either for a possible short between 9131 and 0131 cables or check for a possible wiring inversion on ST67 connector (PIN 4 of 0131 cable could be inverted with PIN 2 of 9131 cable).				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
11	05	SHIFTING ACTUATOR - SOLENOID VALVE (Y1)	SHORT CIRCUIT TO GROUND	Vehicle moving: The speed increases are managed as the changes. The speed increases are not possible when the engine is at low speed. The engagement time increases. Vehicle stationary: The engagement time is longer.		Replacing the gearbox actuator (control unit)				
12	05	CLUTCH ACTUATOR - (Y17) SOLENOID VALVE CLUTCH DISENGAGEMENT SLOW	SHORT CIRCUIT TO GROUND	Clutch control is implemented via the fast clutch uncoupling solenoid valve. It decreases comfort when manoeuvring.		Check the clutch actuator and the integrity of the connections with the gear actuator (electronic control unit)	Measure type: Resistance (Ohm) Measure point 1: Connector for clutch actuator - gearbox side Pin: 9 Measure point 2: Connector for clutch actuator - gearbox side Pin: 16	Connector Not connected; Key +15 OFF;	Min. value: 14 Ohm; Max. value: 20 Ohm;	
13	05	CLUTCH ACTUATOR - (Y15) SOLENOID VALVE CLUTCH ENGAGEMENT SLOW	SHORT CIRCUIT TO GROUND	Clutch control is implemented via the fast clutch uncoupling solenoid valve. It decreases comfort when manoeuvring.		Check the clutch actuator and the integrity of the connections with the gear actuator (electronic control unit)	Measure type: Resistance (Ohm) Measure point 1: Connector for clutch actuator - gearbox side Pin: 7 Measure point 2: Connector for clutch actuator - gearbox side Pin: 16	Connector Not connected; Key +15 OFF;	Min. value: 14 Ohm; Max. value: 20 Ohm;	

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
14	05	CLUTCH ACTUATOR - (Y16) SOLENOID VALVE CLUTCH DISENGAGEMENT FAST	SHORT CIRCUIT TO GROUND	Clutch control is implemented via the fast clutch uncoupling solenoid valve. It decreases comfort when manoeuvring.		Check the clutch actuator and the integrity of the connections with the gear actuator (electronic control unit)	Measure type: Resistance (Ohm) Measure point 1: Connector for clutch actuator - gearbox side Pin: 12 Measure point 2: Connector for clutch actuator - gearbox side Pin: 17	Connector Not connected; Key +15 OFF;	Min. value: 14 Ohm; Max. value: 20 Ohm;	
15	05	CLUTCH ACTUATOR - (Y14) SOLENOID VALVE CLUTCH ENGAGEMENT FAST	SHORT CIRCUIT TO GROUND	Clutch control is implemented via the fast clutch uncoupling solenoid valve. It decreases comfort when manoeuvring.		Check the clutch actuator and the integrity of the connections with the gear actuator (electronic control unit)	Measure type: Resistance (Ohm) Measure point 1: Connector for clutch actuator - gearbox side Pin: 8 Measure point 2: Connector for clutch actuator - gearbox side Pin: 17	Connector Not connected; Key +15 OFF;	Min. value: 14 Ohm; Max. value: 20 Ohm;	
16	05	SUPPLY VOLTAGE - DEVICE	SHORT CIRCUIT TO GROUND	ECU output deactivated. No information from the gear lever, from the buzzer. Vehicle moving: Gearbox locked. Vehicle stationary: Gearbox automatically in neutral. System not available		Control unit - gear lever wiring control				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
1A	04	CAN LINE - ENGINE - CONFIGURATION MESSAGE	TIMEOUT	The system adopts substitutive parameters. Reduced functionality for the automatic mode and to calculate the starting gear, if there is a large difference between the parameters utilized and the actual values. The quality of clutch uncoupling may decrease.		Check vehicle CAN.	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	Reprogram the electronic control unit to rewrite the parameters.
1A	04	CAN LINE - ENGINE - CONFIGURATION MESSAGE	TIMEOUT			Please make also a diagnosis check on EDC system.				
1B	08	CAN LINE - ENGINE - CONFIGURATION MESSAGE	WRONG SIGNAL	The system adopts substitutive parameters. Reduced functionality for the automatic mode and to calculate the starting gear, if there is a large difference between the parameters utilized and the actual values. The quality of clutch uncoupling may decrease.		Check vehicle CAN.	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	Reprogram the electronic control unit to rewrite the parameters.
1B	08	CAN LINE - ENGINE - CONFIGURATION MESSAGE	WRONG SIGNAL			Please make also a diagnosis check on EDC system.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
1C	08	CAN LINE -RE-TARDER - INTARDER - BRAKING TORQUE	WRONG SIGNAL	Impossible to calculate the gear resistance. No automatic calculation of the starting gear. The average starting gear is engaged at the stop. No additional system restrictions.		Check vehicle CAN.	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	Further CAN errors present (183, 184, etc.).
1C	08	CAN LINE -RE-TARDER - INTARDER - BRAKING TORQUE	WRONG SIGNAL	Further Intarder errors (e.g. 27, 29).		Check/Replace Intarder electronics.				
1D	08	CAN LINE -RE-TARDER - INTARDER - WATER TEMPERATURE INCREASE	WRONG SIGNAL	There are no requests to engage lower gears, from the retarder, to increase the engine speed to improve the cooling capacity.		Check vehicle CAN.	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	Further CAN errors present (183, 184, etc.).
1D	08	CAN LINE -RE-TARDER - INTARDER - WATER TEMPERATURE INCREASE	WRONG SIGNAL	Further Intarder errors (e.g. 27, 28).		Check/Replace Intarder electronics.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
1E	08	CAN LINE -RE-TARDER -INTARDER -CON-FIGURATION MESSAGE	WRONG SIGNAL	Further Intarder errors (e.g. 27, 28).		Check/Replace Intarder electronics.				
1E	08	CAN LINE -RE-TARDER -INTARDER -CON-FIGURATION MESSAGE	WRONG SIGNAL	Impossible to calculate the gear resistance. No automatic calculation of the starting gear. The average starting gear is engaged at the stop. No additional system restrictions.		Check vehicle CAN.	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	Further CAN errors present (183, 184, etc.).
1F	08	CAN LINE -RE-TARDER -ENGINE BRAKE -BRAKING TORQUE	WRONG SIGNAL	Further Intarder errors (e.g. 27, 28).		Check/Replace Intarder electronics.				
1F	08	CAN LINE -RE-TARDER -ENGINE BRAKE -BRAKING TORQUE	WRONG SIGNAL	Impossible to calculate the gear resistance. No automatic calculation of the starting gear. The average starting gear is engaged at the stop. No additional system restrictions.		Check vehicle CAN.	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	Further CAN errors present (183, 184, etc.).

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
20	08	CAN LINE -RE-TARDER -ENGINE BRAKE -CON-FIGURATION MESSAGE	WRONG SIGNAL	Impossible to calculate the gear resistance. No automatic calculation of the starting gear. The average starting gear is engaged at the stop. No additional system restrictions.		Check vehicle CAN.	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	Further CAN errors present (183, 184, etc.).
20	08	CAN LINE -RE-TARDER -ENGINE BRAKE -CON-FIGURATION MESSAGE	WRONG SIGNAL	Further Intarder errors (e.g. 27, 28).		Check/Replace Intarder electronics.				
21	04	CAN LINE -RE-TARDER -ENGINE BRAKE -CON-FIGURATION MESSAGE	TIMEOUT	Impossible to calculate the gear resistance. No automatic calculation of the starting gear. The average starting gear is engaged at the stop. No additional system restrictions.		Check vehicle CAN.	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	Further CAN errors present (26, 178, 183, 184, etc.).

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
21	04	CAN LINE -RE-TARDER - ENGINE BRAKE - CONFIGURATION MESSAGE	TIMEOUT	Further Intarder errors (e.g. 27, 28).		Check/Replace Intarder electronics.				
21	04	CAN LINE -RE-TARDER - ENGINE BRAKE - CONFIGURATION MESSAGE	TIMEOUT			Check fuse box fuses.				
22	0A	SHIFTING ACTUATOR - SOLENOID VALVE (Y2) SPLITTER	INTERUPTION	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Replacing the gearbox actuator (control unit)				
23	0A	SHIFTING ACTUATOR - SOLENOID VALVE (Y3) SPLITTER	INTERUPTION	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Replacing the gearbox actuator (control unit)				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
24	0A	SHIFTING ACTUATOR - (Y4) SOLENOID VALVE GEAR SELECTION	INTERRUPTION	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Replacing the gearbox actuator (control unit)				
25	0A	SHIFTING ACTUATOR - (Y5) SOLENOID VALVE GEAR SELECTION	INTERRUPTION	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Replacing the gearbox actuator (control unit)				
26	0A	SHIFTING ACTUATOR - (Y6) SOLENOID VALVE GEAR ENGAGEMENT	INTERRUPTION	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Replacing the gearbox actuator (control unit)				
27	0A	SHIFTING ACTUATOR - (Y7) SOLENOID VALVE GEAR ENGAGEMENT	INTERRUPTION	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Replacing the gearbox actuator (control unit)				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
28	0A	SHIFTING ACTUATOR - (Y8) SOLENOID VALVE RANGE LOW	INTERUPTION	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Replacing the gearbox actuator (control unit)				
29	0A	SHIFTING ACTUATOR - (Y9) SOLENOID VALVE RANGE HIGH	INTERUPTION	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Replacing the gearbox actuator (control unit)				
2A	0A	SHIFTING ACTUATOR - (Y10) MAIN VALVE	INTERUPTION	Impossible to change gear, not even in neutral. The selected gear stays engaged. The vehicle can only set off again in particular conditions (gear selected $\leq$ the 8 th gear).		Replacing the gearbox actuator (control unit)				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
2B	0A	DEVICE - WARNING LAMP/BUZZER	INTER- RUPTION	Possible wiring interruption.		Check wiring	1- Measure type: Voltage (V) Measure point 1: Connector for ECU power supply - vehicle side. Pin: 11 Measure point 2: Connector for ECU power supply - vehicle side. Pin: 16 2- Measure type: Voltage (V) Measure point 1: Connector for ECU power supply - vehicle side. Pin: 11 Measure point 2: Connector for ECU power supply - vehicle side. Pin: 17	1- Connector Connected; Key +15 ON; 2- Connector Connected; Key +15 ON;	1- Min. value: 22 V; Max. value: 28 V; 2- Min. value: 22 V; Max. value: 28 V;	
2D	0A	DEVICE - REAR PTO - REAR ENGINE PTO ENGAGED	INTER- RUPTION			For STRALIS please check either for a possible short between 9131 and 0131 cables or check for a possible wiring inversion on ST67 connector (PIN 4 of 0131 cable could be inverted with PIN 2 of 9131 cable).				
2D	0A	DEVICE - REAR PTO - REAR ENGINE PTO ENGAGED	INTER- RUPTION	PTO 1 not available. No additional system restrictions.		Check wiring, control contactor, connections with the MUX system and gear lever				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
2E	0A	DEVICE - PTO 2 - LATERAL ENGINE PTO ENGAGED	INTER- RUPTION	PTO2 not available. No additional system restrictions		Check wiring, control contactor, connections with the MUX system and gear lever				
2E	0A	DEVICE - PTO 2 - LATERAL ENGINE PTO ENGAGED	INTER- RUPTION			For STRALIS please check either for a possible short between 9131 and 0131 cables or check for a possible wiring inversion on ST67 connector (PIN 4 of 0131 cable could be inverted with PIN 2 of 9131 cable).				
31	0A	SHIFTING ACTUATOR - SOLENOID VALVE (Y1)	INTER- RUPTION	Vehicle moving: The speed increases are managed as the changes. The speed increases are not possible when the engine is at low speed. The engagement time increases. Vehicle stationary: The engagement time is longer.		Replacing the gearbox actuator (control unit)				
32	0A	CLUTCH ACTUATOR - (Y17) SOLENOID VALVE CLUTCH DISENGAGEMENT SLOW	INTER- RUPTION	Comfort decreased when starting and manoeuvring; the clutch is controlled by the fast uncoupling valve.		Check the clutch actuator and the integrity of the connections with the gear actuator (electronic control unit)	Measure type: Resistance (Ohm) Measure point 1: Connector for clutch actuator - gearbox side Pin: 9 Measure point 2: Connector for clutch actuator - gearbox side Pin: 16	Connector Not connected; Key +15 OFF;	Min. value: 14 Ohm; Max. value: 20 Ohm;	

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
33	0A	CLUTCH ACTUATOR - (Y15) SOLENOID VALVE CLUTCH ENGAGEMENT SLOW	INTERRUPTION	Comfort decreased when starting and manoeuvring; the clutch is controlled by the fast uncoupling valve.		Check the clutch actuator and the integrity of the connections with the gear actuator (electronic control unit)	Measure type: Resistance (Ohm) Measure point 1: Connector for clutch actuator - gearbox side Pin: 7 Measure point 2: Connector for clutch actuator - gearbox side Pin: 16	Connector Not connected; Key +15 OFF;	Min. value: 14 Ohm; Max. value: 20 Ohm;	
34	0A	CLUTCH ACTUATOR - (Y16) SOLENOID VALVE CLUTCH DISENGAGEMENT FAST	INTERRUPTION	Comfort decreased when starting and manoeuvring; the clutch is controlled by the fast uncoupling valve.		Check the clutch actuator and the integrity of the connections with the gear actuator (electronic control unit)	Measure type: Resistance (Ohm) Measure point 1: Connector for clutch actuator - gearbox side Pin: 12 Measure point 2: Connector for clutch actuator - gearbox side Pin: 17	Connector Not connected; Key +15 OFF;	Min. value: 14 Ohm; Max. value: 20 Ohm;	
35	0A	CLUTCH ACTUATOR - (Y14) SOLENOID VALVE CLUTCH ENGAGEMENT FAST	INTERRUPTION	Comfort decreased when starting and manoeuvring; the clutch is controlled by the fast uncoupling valve.		Check the clutch actuator and the integrity of the connections with the gear actuator (electronic control unit)	Measure type: Resistance (Ohm) Measure point 1: Connector for clutch actuator - gearbox side Pin: 8 Measure point 2: Connector for clutch actuator - gearbox side Pin: 17	Connector Not connected; Key +15 OFF;	Min. value: 14 Ohm; Max. value: 20 Ohm;	

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
36	0A	SUPPLY VOLTAGE - DEVICE	INTER- RUPTION	ECU output deactivated. No information from the gear lever, from the buzzer. Vehicle moving: Gearbox locked. Vehicle stationary: Gearbox automatically in neutral. System not available		Control unit - gear lever wiring control				
3B	06	DEVICE - REAR PTO - SWITCH SIGNAL- LING PTO 1 EN- GAGE- MENT	SIGNAL NOT PLAUSIBLE			For STRALIS please check either for a possible short between 9131 and 0131 cables or check for a possible wiring inversion on ST67 connector (PIN 4 of 0131 cable could be inverted with PIN 2 of 9131 cable).				
3B	08	DEVICE - REAR PTO - SWITCH SIGNAL- LING PTO 1 EN- GAGE- MENT	SIGNAL NOT PLAUSIBLE	PTO1 not available. No additional system restrictions		Check wiring between the PTO1 check and control switches				
3C	08	DEVICE - PTO 2 - SWITCH SIGNAL- LING PTO 2 EN- GAGE- MENT	SIGNAL NOT PLAUSIBLE	PTO2 not available. No additional system restrictions		Check wiring between the PTO2 check and control switches				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
3C	08	DEVICE - PTO 2 - SWITCH SIGNALING PTO 2 ENGAGEMENT	SIGNAL NOT PLAUSIBLE			For STRALIS please check either for a possible short between 9131 and 0131 cables or check for a possible wiring inversion on ST67 connector (PIN 4 of 0131 cable could be inverted with PIN 2 of 9131 cable).				
3D	08	DEVICE - REAR PTO - SWITCH SIGNALING PTO 1 ENGAGEMENT	PERMANENT SIGNAL	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Check wiring between the PTO1 check and control switches				
3E	08	DEVICE - PTO 2 - SWITCH SIGNALING PTO 2 ENGAGEMENT	PERMANENT SIGNAL	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Check wiring between the PTO2 check and control switches				
3F	08	DEVICE - REAR PTO - SWITCH SIGNALING PTO 1 ENGAGEMENT	NO SIGNAL	PTO1 not available. No additional system restrictions		Check wiring between the PTO1 check and control switches				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
3F	08	DEVICE - REAR PTO - SWITCH SIGNALING PTO 1 ENGAGEMENT	NO SIGNAL			For STRALIS please check either for a possible short between 9131 and 0131 cables or check for a possible wiring inversion on ST67 connector (PIN 4 of 0131 cable could be inverted with PIN 2 of 9131 cable).				
40	08	DEVICE - PTO 2 - SWITCH SIGNALING PTO 2 ENGAGEMENT	NO SIGNAL	PTO2 not available. No additional system restrictions		Check wiring between the PTO2 check and control switches				
40	08	DEVICE - PTO 2 - SWITCH SIGNALING PTO 2 ENGAGEMENT	NO SIGNAL			For STRALIS please check either for a possible short between 9131 and 0131 cables or check for a possible wiring inversion on ST67 connector (PIN 4 of 0131 cable could be inverted with PIN 2 of 9131 cable).				
42	06	SHIFTING ACTUATOR - SOLENOID VALVE (Y2) SPLITTER	SHORT CIRCUIT TO POSITIVE	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Replacing the gearbox actuator (control unit)				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
43	06	SHIFTING ACTUATOR - SOLENOID VALVE (Y3) SPLITTER	SHORT CIRCUIT TO POSITIVE	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Replacing the gearbox actuator (control unit)				
44	06	SHIFTING ACTUATOR - (Y4) SOLENOID VALVE GEAR SELECTION	SHORT CIRCUIT TO POSITIVE	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Replacing the gearbox actuator (control unit)				
45	06	SHIFTING ACTUATOR - (Y5) SOLENOID VALVE GEAR SELECTION	SHORT CIRCUIT TO POSITIVE	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Replacing the gearbox actuator (control unit)				
46	06	SHIFTING ACTUATOR - (Y6) SOLENOID VALVE GEAR ENGAGEMENT	SHORT CIRCUIT TO POSITIVE	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Replacing the gearbox actuator (control unit)				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
47	06	SHIFTING ACTUATOR - (Y7) SOLENOID VALVE GEAR ENGAGEMENT	SHORT CIRCUIT TO POSITIVE	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Replacing the gearbox actuator (control unit)				
48	06	SHIFTING ACTUATOR - (Y8) SOLENOID VALVE RANGE LOW	SHORT CIRCUIT TO POSITIVE	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Replacing the gearbox actuator (control unit)				
49	06	SHIFTING ACTUATOR - (Y9) SOLENOID VALVE RANGE HIGH	SHORT CIRCUIT TO POSITIVE	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Replacing the gearbox actuator (control unit)				
4A	06	SHIFTING ACTUATOR - (Y10) MAIN VALVE	SHORT CIRCUIT TO POSITIVE	Vehicle moving: Gearbox locked. Vehicle stationary: The reduced gears can be engaged.		Replacing the gearbox actuator (control unit)				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
4B	06	DEVICE - WARNING LAMP/BUZZER	SHORT CIRCUIT TO POSITIVE	Possible short circuit.		Check wiring	1- Measure type: Voltage (V) Measure point 1: Connector for ECU power supply - vehicle side. Pin: 11 Measure point 2: Connector for ECU power supply - vehicle side. Pin: 16 2- Measure type: Voltage (V) Measure point 1: Connector for ECU power supply - vehicle side. Pin: 11 Measure point 2: Connector for ECU power supply - vehicle side. Pin: 17	1- Connector Connected; Key +15 ON; 2- Connector Connected; Key +15 ON;	1- Min. value: 22 V; Max. value: 28 V; 2- Min. value: 22 V; Max. value: 28 V;	
4D	06	DEVICE - REAR PTO - REAR ENGINE PTO ENGAGED	SHORT CIRCUIT TO POSITIVE	PTO 1 not available. No additional system restrictions.		Check wiring, control contactor, connections with the MUX system and gear lever				
4D	06	DEVICE - REAR PTO - REAR ENGINE PTO ENGAGED	SHORT CIRCUIT TO POSITIVE			For STRALIS please check either for a possible short between 9131 and 0131 cables or check for a possible wiring inversion on ST67 connector (PIN 4 of 0131 cable could be inverted with PIN 2 of 9131 cable).				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
4E	06	DEVICE - PTO 2 - LATERAL ENGINE PTO EN-GAGED	SHORT CIRCUIT TO POSITIVE	PTO2 not available. No additional system restrictions		Check wiring, control contactor, connections with the MUX system and gear lever				
4E	06	DEVICE - PTO 2 - LATERAL ENGINE PTO EN-GAGED	SHORT CIRCUIT TO POSITIVE			For STRALIS please check either for a possible short between 9131 and 0131 cables or check for a possible wiring inversion on ST67 connector (PIN 4 of 0131 cable could be inverted with PIN 2 of 9131 cable).				
51	06	SHIFTING ACTUATOR - SOLENOID VALVE (Y1)	SHORT CIRCUIT TO POSITIVE	Vehicle moving: Gearbox locked. Vehicle stationary: It is possible to engage the starting gear. The main valve is only activated in the coupling phase if the clutch is open.		Replacing the gearbox actuator (control unit)				
52	06	CLUTCH ACTUATOR - (Y17) SOLENOID VALVE CLUTCH DISENGAGEMENT SLOW	SHORT CIRCUIT TO POSITIVE	Generally, gearbox locked, system not available. Vehicle stationary: The coupling valve is de-energized; the gearbox is in neutral when the clutch opens.		Replacing the gearbox actuator (control unit)	Measure type: Resistance (Ohm) Measure point 1: Connector for clutch actuator - gearbox side Pin: 9 Measure point 2: Connector for clutch actuator - gearbox side Pin: 16	Connector Not connected; Key +15 OFF;	Min. value: 14 Ohm; Max. value: 20 Ohm;	

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
53	06	CLUTCH ACTUATOR - (Y15) SOLENOID VALVE CLUTCH ENGAGEMENT SLOW	SHORT CIRCUIT TO POSITIVE	Generally, gearbox locked, system not available. Vehicle stationary: The coupling valve is de-energized; the gearbox is in neutral when the clutch opens.		Replacing the gearbox actuator (control unit)	Measure type: Resistance (Ohm) Measure point 1: Connector for clutch actuator - gearbox side Pin: 7 Measure point 2: Connector for clutch actuator - gearbox side Pin: 16	Connector Not connected; Key +15 OFF;	Min. value: 14 Ohm; Max. value: 20 Ohm;	
54	06	CLUTCH ACTUATOR - (Y16) SOLENOID VALVE CLUTCH DISENGAGEMENT FAST	SHORT CIRCUIT TO POSITIVE	Generally, gearbox locked, system not available. Vehicle moving: The clutch is kept in the position required by the uncoupling valve. Vehicle stationary: After a certain length of time the gearbox goes into neutral.		Replacing the gearbox actuator (control unit)	Measure type: Resistance (Ohm) Measure point 1: Connector for clutch actuator - gearbox side Pin: 12 Measure point 2: Connector for clutch actuator - gearbox side Pin: 17	Connector Not connected; Key +15 OFF;	Min. value: 14 Ohm; Max. value: 20 Ohm;	
55	06	CLUTCH ACTUATOR - (Y14) SOLENOID VALVE CLUTCH ENGAGEMENT FAST	SHORT CIRCUIT TO POSITIVE	Generally, gearbox locked, system not available. Vehicle stationary: The coupling valve is de-energized; the gearbox is in neutral when the clutch opens.		Replacing the gearbox actuator (control unit)	Measure type: Resistance (Ohm) Measure point 1: Connector for clutch actuator - gearbox side Pin: 8 Measure point 2: Connector for clutch actuator - gearbox side Pin: 17	Connector Not connected; Key +15 OFF;	Min. value: 14 Ohm; Max. value: 20 Ohm;	

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
56	06	SUPPLY VOLTAGE - DEVICE	SHORT CIRCUIT TO POSITIVE	After switching over the key (Off-On) the fault is recognized during system set-up and the display does not go out. Turning the key onto Off the display shows code EE. No additional system restrictions.		Control unit - gear lever wiring control				
5A	09	SHIFTING ACTUATOR - ELECTRONIC CONTROL UNIT - INTERNAL FAILURE	INTERNAL COMMUNICATION ERROR	Vehicle moving: Gearbox locked, the clutch opens when the vehicle stops. Vehicle stationary: Gearbox automatically in neutral. Gearbox locked; the system is not available.		Replacing the gearbox actuator				
5B	04	CAN LINE - BRAKING SYSTEM - CONTROL MESSAGE	TIMEOUT	Other CAN errors 180,181,182,183,184 and/or 177 present.	Short circuit to ground to pin 8 - CAN H possible.	Check vehicle CAN.	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	
5B	04	CAN LINE - BRAKING SYSTEM - CONTROL MESSAGE	TIMEOUT	Impossible to calculate the gear resistance. No automatic calculation of the starting gear. The average starting gear is engaged at the stop. No additional system restrictions.		Check fuse box fuses.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
5B	04	CAN LINE - BRAKING SYSTEM - CONTROL MESSAGE	TIMEOUT		Message issued by ASR / ABS / EBS electronics.	Check ABS/ASR/EBS signal travel.				The message contains the following signals: z_ABS: ABS operation. z_ASR_EDC: Signal ASR-EDC-Ein-griffz_ASR_B R : Status ASR-Bremsbetriebz_EBS: Status EBS
5C	08	CAN LINE - BRAKING SYSTEM - ABS ACTIVATED	WRONG SIGNAL	Impossible to calculate the gear resistance. No automatic calculation of the starting gear. The average starting gear is engaged at the stop. No additional system restrictions.	Error 91 present "EBC1 timeout" message issued by ABS / ASR / EBS electronics.	Check ABS / ASR / EBS signal travel.				No z_ABS signal (signal contained in EBC1 message).
5C	08	CAN LINE - BRAKING SYSTEM - ABS ACTIVATED	WRONG SIGNAL			Check CAN line. Check ECU correct programming.	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	
5D	08	CAN LINE - BRAKING SYSTEM - ASR ACTIVATED (ENGINE)	WRONG SIGNAL			Check CAN line. Check ECU correct programming.	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
5D	08	CAN LINE - BRAKING SYSTEM - ASR ACTIVATED (ENGINE)	WRONG SIGNAL	Impossible to calculate the gear resistance. No automatic calculation of the starting gear. The average starting gear is engaged at the stop. No additional system restrictions.	Error 91 present "EBC1 timeout" message issued by ABS / ASR / EBS electronics.	Check ABS/ASR/EBS signal travel.				No z_ABS signal (signal contained in EBC1 message).
5E	08	CAN LINE - BRAKING SYSTEM - ASR ACTIVATED (BRAKE)	WRONG SIGNAL	Impossible to calculate the gear resistance. No automatic calculation of the starting gear. The average starting gear is engaged at the stop. No additional system restrictions.	Error 91 present "EBC1 timeout" message issued by ABS / ASR / EBS electronics.	Check ABS / ASR / EBS signal travel.				No z_ABS signal (signal contained in EBC1 message).
5E	08	CAN LINE - BRAKING SYSTEM - ASR ACTIVATED (BRAKE)	WRONG SIGNAL			Check CAN line. Check ECU correct programming.	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
5F	08	CAN LINE - CRUISE CONTROL / VEHICLE SPEED - CRUISE CONTROL OFF	WRONG SIGNAL	No additional system restrictions.		Check vehicle CAN.	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	No z_cc_status signal (signal contained in CCVS message).
5F	08	CAN LINE - CRUISE CONTROL / VEHICLE SPEED - CRUISE CONTROL OFF	WRONG SIGNAL	Error 182 present "CCVS timeout" message issued by EDC.		Check signal travel EDC.				
60	08	CAN LINE - CRUISE CONTROL / VEHICLE SPEED - PROGRAMMED SPEED	WRONG SIGNAL	No additional system restrictions.		Check vehicle CAN.	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	No z_cc_status signal (signal contained in CCVS message).

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
60	08	CAN LINE - CRUISE CONTROL / VEHICLE SPEED - PROGRAMMED SPEED	WRONG SIGNAL	Error 182 present "CCVS timeout" message issued by EDC.		Check signal travel EDC.				
61	08	CAN LINE - ENGINE - NUMBER OF ENGINE REVS.	WRONG SIGNAL	Vehicle moving: Clutch control is governed by the time interval set by the control unit. Reduction in driving comfort. The clutch opens under the threshold fixed by the system; the speed of the engine is not checked during gear increases. Vehicle stationary: Clutch control is governed by the time interval set by the control unit; reduction in manoeuvring comfort.		Check engine speed in error memory under environmental conditions.				
61	08	CAN LINE - ENGINE - NUMBER OF ENGINE REVS.	WRONG SIGNAL			Please make also a diagnosis check on EDC system.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
62	08	SHIFTING ACTUATOR - SENSORS - INPUT SHAFT SPEED	WRONG SIGNAL	Vehicle moving: The time interval increases by which gear changes are governed. When changing gear the clutch may be partly closed. If the gear is engaged, the input speed is replaced with the output speed. Vehicle stationary: The time interval increases by which gear changes are governed. Reduction in driving and manoeuvring comfort.		Check connector status and sensor efficiency. Otherwise check: - correct mounting of the sensor. - correct mounting and play of phonic wheel.				
63	08	SENSORS - TRANSMISSION OUTPUT SPEED	WRONG SIGNAL	The output speed is calculated via redundant signals, such as the tachograph signal, via the CAN line. All the gears can be engaged manually. Reduction in clutch performance due to the time needed to acquire the information from the CAN line.		Check wiring and connections. Replace sensor if required.	1- Measure type: Voltage (V) Measure point 1: Connector for clutch actuator - gearbox side Pin: 18 Measure point 2: Connector for clutch actuator - gearbox side Pin: 6 2- Measure type: Voltage (V) Measure point 1: Connector for clutch actuator - gearbox side Pin: 11 Measure point 2: Connector for clutch actuator - gearbox side Pin: 6	1- Connector Connected; Key +15 ON; 2- Connector Connected; Key +15 ON;		

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
64	08	SIGNALS - SENSOR - TACHOGRAPH SENSOR	WRONG SIGNAL	If the output speed signal 1 is available, there are no restrictions on the system.		Check vehicle-end wiring. Check and replace defective output sensor.				Error 99,101 set; Output speed > 2500 rpm; Vehicle speed too high.
64	08	SIGNALS - SENSOR - TACHOGRAPH SENSOR	WRONG SIGNAL			Verify the correct working of the tachograph.				
64	08	SIGNALS - SENSOR - TACHOGRAPH SENSOR	WRONG SIGNAL			Or alternatively check that the stored value in the ECU for the axle ratio correct is (Diagnosis: Identification Code Reading). If the value is not correct, carry out again the programming (Programming: Configuration Change).				
65	08	SIGNALS - SENSOR - TACHOGRAPH+OUTPUT SHAFT SPEED SENSOR	BOTH SPEED SENSORS FAULTY	Vehicle moving: The speed increases are managed as the changes. The speed increases are not possible when the engine is at low speed. The engagement time increases. Vehicle stationary: The engagement time is longer.	Wear of selector fork.	Check signal travel as with error 99 and 100. Wear of selector fork. Disassemble/replace transmission.				Gear selected and displayed -> no power transmission.

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
66	03	SIGNALS - SENSOR - INPUT AND OUTPUT SPEED SENSOR	PLAUSIBILITY	Vehicle moving: The speed increases are managed as the changes. The speed increases are not possible when the engine is at low speed. The engagement time increases. Vehicle stationary: The engagement time is longer.		Check if the position of the sensors is correct. Check the mechanical efficiency of the transmission. Check that the vehicle is not equipped with an electronic control unit programmed for the retarder, if the transmission does not require it.				
67	08	CAN LINE - CRUISE CONTROL / VEHICLE SPEED - VEHICLE SPEED	WRONG SIGNAL	The system adopts substitutive parameters. Reduced functionality for the automatic mode and to calculate the starting gear, if there is a large difference between the parameters utilized and the actual values. The quality of clutch uncoupling may decrease.	Other CAN errors 26,180,181,182.	Check vehicle CAN.	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	Reprogram the electronic control unit to rewrite the parameters.
67	08	CAN LINE - CRUISE CONTROL / VEHICLE SPEED - VEHICLE SPEED	WRONG SIGNAL			Please make also a diagnosis check on EDC system.				
67	08	CAN LINE - CRUISE CONTROL / VEHICLE SPEED - VEHICLE SPEED	WRONG SIGNAL	Further errors saved in EDC.	EDC deactivation relay defective.	Replace deactivation relay.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
68	01	SUPPLY VOLTAGE - ELECTRONIC CONTROL UNIT	VOLTAGE TOO HIGH	Defective supply.		Check for a fault in the 10A fuses (fuses holder no. 70602).	1- Measure type: Voltage (V) Measure point 1: Connector for ECU power supply - vehicle side. Pin: 4 Measure point 2: Connector for ECU power supply - vehicle side. Pin: 16 - 2- Measure type: Voltage (V) Measure point 1: Connector for ECU power supply - vehicle side. Pin: 5 Measure point 2: Connector for ECU power supply - vehicle side. Pin: 16 - 3- Measure type: Voltage (V) Measure point 1: Connector for ECU power supply - vehicle side. Pin: 4 Measure point 2: Connector for ECU power supply - vehicle side. Pin: 17 - 4- Measure type: Voltage (V) Measure point 1: Connector for ECU power supply - vehicle side. Pin: 5 Measure point 2: Connector for ECU power supply - vehicle side. Pin: 17	1- Connector Connected; Key +15 ON; 2- Connector Connected; Key +15 ON; 3- Connector Connected; Key +15 ON; 4- Connector Connected; Key +15 ON;	1- Min. value: 22 V; Max. value: 28 V; 2- Min. value: 22 V; Max. value: 28 V; 3- Min. value: 22 V; Max. value: 28 V; 4- Min. value: 22 V; Max. value: 28 V;	

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
69	02	SUPPLY VOLTAGE - ELECTRONIC CONTROL UNIT	VOLTAGE TOO LOW	Defective supply.		Check for a fault in the 10A fuses (fuses holder no. 70602).	1- Measure type: Voltage (V) Measure point 1: Connector for ECU power supply - vehicle side. Pin: 4 Measure point 2: Connector for ECU power supply - vehicle side. Pin: 16 - 2- Measure type: Voltage (V) Measure point 1: Connector for ECU power supply - vehicle side. Pin: 5 Measure point 2: Connector for ECU power supply - vehicle side. Pin: 16 - 3- Measure type: Voltage (V) Measure point 1: Connector for ECU power supply - vehicle side. Pin: 4 Measure point 2: Connector for ECU power supply - vehicle side. Pin: 17 - 4- Measure type: Voltage (V) Measure point 1: Connector for ECU power supply - vehicle side. Pin: 5 Measure point 2: Connector for ECU power supply - vehicle side. Pin: 17	1- Connector Connected; Key +15 ON; 2- Connector Connected; Key +15 ON; 3- Connector Connected; Key +15 ON; 4- Connector Connected; Key +15 ON;	1- Min. value: 22 V; Max. value: 28 V; 2- Min. value: 22 V; Max. value: 28 V; 3- Min. value: 22 V; Max. value: 28 V; 4- Min. value: 22 V; Max. value: 28 V;	

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
6B	02	CLUTCH ACTUATOR - POSITION SENSOR	SUPPLY OUT OF RANGE	Vehicle moving: The clutch is disengaged via time control. Vehicle stationary: Impossible to perform manoeuvres. If the vehicle has not started within a set time, neutral is engaged. A fresh gear has to be selected with the gear lever to start the vehicle. Comfort is diminished on starting.		Check the sensor voltage supply.	Measure type: Voltage (V) Measure point 1: Connector for clutch actuator - gearbox side Pin: 15 Measure point 2: Connector for clutch actuator - gearbox side Pin: 20	Connector Connected; Key +15 ON;	Min. value: 4.5 V; Max. value: 5.5 V;	

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
6C		SIGNALS - GEAR SHIFT LEVER	WRONG SIGNAL	Control lever: No shifting possible during travel. At standstill the "last-starting gear" is selected in the manual mode (half-automatic mode), the automatic starting gear in automatic mode. If neutral is activated or existing at standstill, the starting gear is not engaged. Neutral switch: No shifting possible during travel. At standstill a starting gear can be selected and the vehicle can be driven with a starting gear selected. R gear selector signals: If there is a fault (no signal) in one of the two. Reverse gear switches at a standstill and if the tip-action speed range selector is pulled backwards (-/-), the low-ratio Reverse gear (RL) is engaged.	New shift lever: if there is any shifting request signal transmitted in the VCM_TC message.	Check wiring and connections between gear lever and Ecu: nominal value supply voltage gear selector 24 Volt. Check CAN line between gear lever and Ecu: nominal value resistance CAN H - CAN L 60 Ohm. Replace CAN bus wiring and/or CAN modules. Check and/or replace range selector.	1- Measure type: Voltage (V) Measure point 1: Connector (vehicle side) Pin: 11 Measure point 2: Connector (vehicle side) Pin: 16 2- Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 3 Measure point 2: Connector (vehicle side) Pin: 6 3- Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	1- Connector Connected; Key +15 OFF; 2- Connector Connected; Key +15 OFF; 3- Connector Connected; Key +15 OFF;	1- Max. value: 19,5 V; 2- Typical Value: 60 Ohm; 3- Typical Value: 60 Ohm;	

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
6C	00	SIGNALS - GEAR SHIFT LEVER	WRONG SIGNAL	The gearbox may have lower performance or be locked. It depends on the conditions generating it.		Select PARAMETER READ environment. Move the shift lever and verify the value changes. Check cabling, if failure persists, the lever is worn.				
6E	04	CAN LINE - COMMUNICATION LINES - GEAR SHIFT LEVER	COMMUNICATION ERROR	After switching over the key (Off-On) the fault is recognized during system set-up and the display shows the error code; the system is not available. Vehicle moving: gearbox locked, the system automatically engages the last gear used to start the vehicle. If the gearbox has the reverse gear engaged t/m is automatically put into neutral. No information on the gear lever is available. The display shows alternately the error code and the information on the gear.		Check vehicle CAN.	1- Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 3 Measure point 2: Connector (vehicle side) Pin: 6 2- Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	1- Connector Connected; Key +15 OFF; 2- Connector Connected; Key +15 OFF;	1- Typical Value: 60 Ohm; 2- Typical Value: 60 Ohm;	

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
6E	04	CAN LINE - COMMUNICATION LINES - GEAR SHIFT LEVER	COMMUNICATION ERROR			Check wiring and connections between gear lever and Ecu.	Measure type: Voltage (V) Measure point 1: Connector (vehicle side) Pin: 11 Measure point 2: Gear lever connector Pin: 15	Connector Connected; Key +15 ON;	Max. value: 24 V;	Replace CAN gear selector switch. Conduct a test drive with function check. Check transmission for leaks.
71	04	CAN LINE -RE-TARDER -INTARDER -CONFIGURATION MESSAGE	TIMEOUT	Impossible to calculate the gear resistance. No automatic calculation of the starting gear. The average starting gear is engaged at the stop. No additional system restrictions.		Check vehicle CAN.	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	
71	04	CAN LINE -RE-TARDER -INTARDER -CONFIGURATION MESSAGE	TIMEOUT			Check/Replace Intarder electronics.				
72	00	CLUTCH ACTUATOR - CLUTCH	ENGAGEMENT NOT REQUESTED, ENGAGED GEAR AND STATIONARY VEHICLE	Standstill: shift to neutral, after neutral system available.		Check the mechanical operation of the clutch unit and the pneumatic circuit.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
75	00	CLUTCH ACTUATOR - CLUTCH	SELF-ADJUSTMENT ERROR	System not available.		Check the mechanical system of the clutch engage/disengage unit.				
76	00	CLUTCH ACTUATOR - CLUTCH	DOES NOT DIS-ENGAGE	Vehicle moving: Try engaging the gear. If the gear is engaged, the clutch stays engaged. The gearbox stays locked. Vehicle stationary: If the clutch fails to disengage, the engine remains locked. The system selects neutral automatically.		Check the mechanical operation of the clutch unit and the pneumatic circuit.				
77	00	CLUTCH ACTUATOR - CLUTCH	DOES NOT EN-GAGE	Vehicle moving: If the gearbox has a gear engaged, the clutch tries to close with the highest speed. Gearbox locked. Vehicle stationary: Automatic engagement of neutral after time lag governed by the system. System not available.		Check the mechanical operation of the clutch unit and the pneumatic circuit.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
78	00	CLUTCH ACTUATOR - (Y17) SOLENOID VALVE CLUTCH DISENGAGEMENT SLOW	MECHANICAL FAILURE	Reduction in clutch performance. The function performed by a damaged valve is performed by another valve following this scheme:mechanical fault of the Y17 valve >> function performed by valve Y16 mechanical fault of the Y16 valve >> function performed by valve Y17 mechanical fault of the Y15 valve >> function performed by valve Y14 mechanical fault of the Y14 valve >> function performed by valve Y15		Check the clutch actuator and the integrity of the connections with the gear actuator (electronic control unit)				
79	00	CLUTCH ACTUATOR - (Y16) SOLENOID VALVE CLUTCH DISENGAGEMENT FAST	MECHANICAL FAILURE	Reduction in clutch performance. The function performed by a damaged valve is performed by another valve following this scheme:mechanical fault of the Y17 valve >> function performed by valve Y16 mechanical fault of the Y16 valve >> function performed by valve Y17 mechanical fault of the Y15 valve >> function performed by valve Y14 mechanical fault of the Y14 valve >> function performed by valve Y15		Check the clutch actuator and the integrity of the connections with the gear actuator (electronic control unit)				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
7A	00	CLUTCH ACTUATOR - (Y15) SOLENOID VALVE CLUTCH ENGAGEMENT SLOW	MECHANICAL FAILURE	Reduction in clutch performance. The function performed by a damaged valve is performed by another valve following this scheme:mechanical fault of the Y17 valve >> function performed by valve Y16 mechanical fault of the Y16 valve >> function performed by valve Y17 mechanical fault of the Y15 valve >> function performed by valve Y14 mechanical fault of the Y14 valve >> function performed by valve Y15		Check the clutch actuator and the integrity of the connections with the gear actuator (electronic control unit)				
7B	00	CLUTCH ACTUATOR - (Y14) SOLENOID VALVE CLUTCH ENGAGEMENT FAST	MECHANICAL FAILURE	Reduction in clutch performance. The function performed by a damaged valve is performed by another valve following this scheme:mechanical fault of the Y17 valve >> function performed by valve Y16 mechanical fault of the Y16 valve >> function performed by valve Y17 mechanical fault of the Y15 valve >> function performed by valve Y14 mechanical fault of the Y14 valve >> function performed by valve Y15		Check the clutch actuator and the integrity of the connections with the gear actuator (electronic control unit)				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
7C	00	CLUTCH ACTUATOR - POSITION SENSOR	SIGNAL OUT OF RANGE	Vehicle moving: The clutch is engaged - disengaged via time lag signal. Vehicle stationary: Manoeuvring impossible. If the vehicle fails to start within a certain length of time set by the control unit, the gearbox automatically goes into neutral; starting is again possible after engaging the gear with the gear lever. Reduction in clutch performance.		Check the sensor voltage supply.	Measure type: Voltage (V) Measure point 1: Connector for clutch actuator - gearbox side Pin: 10 Measure point 2: Connector for clutch actuator - gearbox side Pin: 20	Connector Connected; Key +15 ON;	Min. value: 0.5 V; Max. value: 4.5 V;	
7D	00	SHIFTING ACTUATOR - PRESSURE REDUCTION VALVE	PRESSURE TOO HIGH AT ALTITUDE	No system restriction.		Check system supply air pressure 7 bars.				
7E	03	SHIFTING ACTUATOR - SENSORS - PRESSURE SENSOR	SIGNAL OUT OF RANGE	No system restriction if there is enough air in the system. The Cluster fails to display the AL code if the air system does not have the right pressure. The clutch is controlled with a time interval; the control times may turn out longer.		Gear actuator replacement (control unit)				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
7F	03	SHIFTING ACTUATOR - SENSORS - ECU TEMPERATURE	SIGNAL OUT OF RANGE	No system restriction.		Replacing the gearbox actuator (control unit)				
80	00	SENSORS - OIL TEMPERATURE SIGNAL	SIGNAL OUT OF RANGE	No system restriction; the system takes the control unit temperature signal as reference.		Reprogram and in case replace the gearbox actuator (control unit).				
81	06	SHIFTING ACTUATOR - SENSORS - GEAR ENGAGED	SHORT CIRCUIT TO POSITIVE	Vehicle moving: When the trouble occurs while changing gear, the coupling signal is substituted by the time check signal. The gearbox is then locked; it is possible to engage neutral. Vehicle stationary: it is possible to select the starting gear. The main valve and the gear coupling valve remain active until the clutch, on closing, exceeds the reference threshold or the start conditions occur.		Verify that sensor resistance should be between 60 and 90 Ohms.	Measure type: Resistance (Ohm) Measure point 1: Sensor connector Pin: 1 Measure point 2: Sensor connector Pin: 2	Connector Not connected; Key +15 OFF;	Typical Value: 69 Ohm;	

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
81	06	SHIFTING ACTUATOR - SENSORS - GEAR ENGAGED	SHORT CIRCUIT TO POSITIVE			Check VDB CAN-line integrity.				
82	05	SHIFTING ACTUATOR - SENSORS - GEAR ENGAGED	SHORT CIRCUIT TO GROUND	Vehicle moving: When the trouble occurs while changing gear, the coupling signal is substituted by the time check signal. The gearbox is then locked; it is possible to engage neutral. Vehicle stationary: it is possible to select the starting gear. The main valve and the gear coupling valve remain active until the clutch, on closing, exceeds the reference threshold or the start conditions occur.		Verify that sensor resistance should be between 60 and 90 Ohms.	Measure type: Resistance (Ohm) Measure point 1: Sensor connector Pin: 1 Measure point 2: Sensor connector Pin: 2	Connector Not connected; Key +15 OFF;	Typical Value: 69 Ohm;	
82	05	SHIFTING ACTUATOR - SENSORS - GEAR ENGAGED	SHORT CIRCUIT TO GROUND			Check VDB CAN-line integrity.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
83	0A	SHIFTING ACTUATOR - SENSORS - GEAR ENGAGED	INTERUPTION	Vehicle moving: When the trouble occurs while changing gear, the coupling signal is substituted by the time check signal. The gearbox is then locked; it is possible to engage neutral. Vehicle stationary: it is possible to select the starting gear. The main valve and the gear coupling valve remain active until the clutch, on closing, exceeds the reference threshold or the start conditions occur.		Verify that sensor resistance should be between 60 and 90 Ohms.	Measure type: Resistance (Ohm) Measure point 1: Sensor connector Pin: 1 Measure point 2: Sensor connector Pin: 2	Connector Not connected; Key +15 OFF;	Typical Value: 69 Ohm;	
83	0A	SHIFTING ACTUATOR - SENSORS - GEAR ENGAGED	INTERUPTION			Check VDB CAN-line integrity.				
84	00	SHIFTING ACTUATOR - SENSORS - GEAR ENGAGED	SELF-ADJUSTMENT ERROR	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Verify that sensor resistance should be between 60 and 90 Ohms.	Measure type: Resistance (Ohm) Measure point 1: Sensor connector Pin: 1 Measure point 2: Sensor connector Pin: 2	Connector Not connected; Key +15 OFF;	Typical Value: 69 Ohm;	

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
85	06	SHIFTING ACTUATOR - SENSORS - GEAR SELECTOR	SHORT CIRCUIT TO POSITIVE	Vehicle moving: Only some gears can be selected. Vehicle stationary: All the gears can be selected; the reverse gears cannot be selected.		Verify that sensor resistance should be between 60 and 90 Ohms.	Measure type: Resistance (Ohm) Measure point 1: Sensor connector Pin: 1 Measure point 2: Sensor connector Pin: 2	Connector Not connected; Key +15 OFF;	Typical Value: 69 Ohm;	
85	06	SHIFTING ACTUATOR - SENSORS - GEAR SELECTOR	SHORT CIRCUIT TO POSITIVE			Check VDB CAN-line integrity.				
85	06	SHIFTING ACTUATOR - SENSORS - GEAR SELECTOR	SHORT CIRCUIT TO POSITIVE			Replace ECU. If replacing the ECU corrects the problem, reinstall the original ECU to confirm that the problem is in the ECU.				
86	05	SHIFTING ACTUATOR - SENSORS - GEAR SELECTOR	SHORT CIRCUIT TO GROUND			Check VDB CAN-line integrity.				
86	05	SHIFTING ACTUATOR - SENSORS - GEAR SELECTOR	SHORT CIRCUIT TO GROUND			Replace ECU. If replacing the ECU corrects the problem, reinstall the original ECU to confirm that the problem is in the ECU.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
86	05	SHIFTING ACTUATOR - SENSORS - GEAR SELECTOR	SHORT CIRCUIT TO GROUND	Vehicle moving: Only some gears can be selected. Vehicle stationary: All the gears can be selected; the reverse gears cannot be selected.		Verify that sensor resistance should be between 60 and 90 Ohms.	Measure type: Resistance (Ohm) Measure point 1: Sensor connector Pin: 1 Measure point 2: Sensor connector Pin: 2	Connector Not connected; Key +15 OFF;	Typical Value: 69 Ohm;	
87	0A	SHIFTING ACTUATOR - SENSORS - GEAR SELECTOR	INTERUPTION	Vehicle moving: Only some gears can be selected. Vehicle stationary: All the gears can be selected; the reverse gears cannot be selected.		Verify that sensor resistance should be between 60 and 90 Ohms.	Measure type: Resistance (Ohm) Measure point 1: Sensor connector Pin: 1 Measure point 2: Sensor connector Pin: 2	Connector Not connected; Key +15 OFF;	Typical Value: 69 Ohm;	
87	0A	SHIFTING ACTUATOR - SENSORS - GEAR SELECTOR	INTERUPTION			Check VDB CAN-line integrity.				
87	0A	SHIFTING ACTUATOR - SENSORS - GEAR SELECTOR	INTERUPTION			Replace ECU. If replacing the ECU corrects the problem, reinstall the original ECU to confirm that the problem is in the ECU.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
88	00	SHIFTING ACTUATOR - SENSORS - GEAR SELECTOR	SELF-ADJUSTMENT ERROR	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Verify that sensor resistance should be between 60 and 90 Ohms.	Measure type: Resistance (Ohm) Measure point 1: Sensor connector Pin: 1 Measure point 2: Sensor connector Pin: 2	Connector Not connected; Key +15 OFF;	Typical Value: 69 Ohm;	
89	06	SHIFTING ACTUATOR - SENSORS - RANGE UNIT	SHORT CIRCUIT TO POSITIVE	Vehicle moving: Locking engaged gear range assembly. Only the gears of the current gear assembly can be changed by time control. Vehicle stationary: All the starting gears can be selected; the low range gear assembly can be selected by the time control. The main valve and the range valve remain active until the clutch coupling exceeds a pre-arranged threshold or the running condition is detected.		Verify that sensor resistance should be between 60 and 90 Ohms.	Measure type: Resistance (Ohm) Measure point 1: Sensor connector Pin: 1 Measure point 2: Sensor connector Pin: 2	Connector Not connected; Key +15 OFF;	Typical Value: 69 Ohm;	
89	06	SHIFTING ACTUATOR - SENSORS - RANGE UNIT	SHORT CIRCUIT TO POSITIVE			Check VDB CAN-line integrity.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
8A	05	SHIFTING ACTUATOR - SENSORS - RANGE UNIT	SHORT CIRCUIT TO GROUND	Vehicle moving: Locking engaged gear range assembly. Only the gears of the current gear assembly can be changed by time control. Vehicle stationary: All the starting gears can be selected; the low range gear assembly can be selected by the time control. The main valve and the range valve remain active until the clutch coupling exceeds a pre-arranged threshold or the running condition is detected.		Verify that sensor resistance should be between 60 and 90 Ohms.	Measure type: Resistance (Ohm) Measure point 1: Sensor connector Pin: 1 Measure point 2: Sensor connector Pin: 2	Connector Not connected; Key +15 OFF;	Typical Value: 69 Ohm;	
8A	05	SHIFTING ACTUATOR - SENSORS - RANGE UNIT	SHORT CIRCUIT TO GROUND			Check VDB CAN-line integrity.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
8B	0A	SHIFTING ACTUATOR - SENSORS - RANGE UNIT	INTER- RUPTION	Vehicle moving: Locking engaged gear range assembly. Only the gears of the current gear assembly can be changed by time control. Vehicle stationary: All the starting gears can be selected; the low range gear assembly can be selected by the time control. The main valve and the range valve remain active until the clutch coupling exceeds a pre-arranged threshold or the running condition is detected.		Verify that sensor resistance should be between 60 and 90 Ohms.	Measure type: Resistance (Ohm) Measure point 1: Sensor connector Pin: 1 Measure point 2: Sensor connector Pin: 2	Connector Not connected; Key +15 OFF;	Typical Value: 69 Ohm;	
8B	0A	SHIFTING ACTUATOR - SENSORS - RANGE UNIT	INTER- RUPTION			Check VDB CAN-line integrity.				
8C	00	SHIFTING ACTUATOR - SENSORS - RANGE UNIT	SELF-ADJUSTMENT ERROR	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Verify that sensor resistance should be between 60 and 90 Ohms.	Measure type: Resistance (Ohm) Measure point 1: Sensor connector Pin: 1 Measure point 2: Sensor connector Pin: 2	Connector Not connected; Key +15 OFF;	Typical Value: 69 Ohm;	

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
8D	06	SHIFTING ACTUATOR - SENSORS - SPLITTER UNIT	SHORT CIRCUIT TO POSITIVE	Splitter assembly locked. Driving is possible only with the last gear assembly selected by the splitter. If the required gear cannot be engaged, the highest available gear is engaged. If the trouble occurs a gear change the splitter control is made by the time control.		Verify that sensor resistance should be between 60 and 90 Ohms.	Measure type: Resistance (Ohm) Measure point 1: Sensor connector Pin: 1 Measure point 2: Sensor connector Pin: 2	Connector Not connected; Key +15 OFF;	Typical Value: 69 Ohm;	
8E	05	SHIFTING ACTUATOR - SENSORS - SPLITTER UNIT	SHORT CIRCUIT TO GROUND	Splitter assembly locked. Driving is possible only with the last gear assembly selected by the splitter. If the required gear cannot be engaged, the highest available gear is engaged. If the trouble occurs a gear change the splitter control is made by the time control.		Verify that sensor resistance should be between 60 and 90 Ohms.	Measure type: Resistance (Ohm) Measure point 1: Sensor connector Pin: 1 Measure point 2: Sensor connector Pin: 2	Connector Not connected; Key +15 OFF;	Typical Value: 69 Ohm;	

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
8F	0A	SHIFTING ACTUATOR - SENSORS - SPLITTER UNIT	INTER- RUPTION	Splitter assembly locked. Driving is possible only with the last gear assembly selected by the splitter. If the required gear cannot be engaged, the highest available gear is engaged. If the trouble occurs a gear change the splitter control is made by the time control.		Verify that sensor resistance should be between 60 and 90 Ohms.	Measure type: Resistance (Ohm) Measure point 1: Sensor connector Pin: 1 Measure point 2: Sensor connector Pin: 2	Connector Not connected; Key +15 OFF;	Typical Value: 69 Ohm;	
90	00	SHIFTING ACTUATOR - SENSORS - SPLITTER UNIT	SELF-ADJUSTMENT ERROR	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Verify that sensor resistance should be between 60 and 90 Ohms.	Measure type: Resistance (Ohm) Measure point 1: Sensor connector Pin: 1 Measure point 2: Sensor connector Pin: 2	Connector Not connected; Key +15 OFF;	Typical Value: 69 Ohm;	

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
91	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - RANGE UNIT	DOES NOT DIS-ENGAGE	Vehicle moving: When selecting the change from the lower gear assembly to the higher one, the highest gear of the lower gear assembly is selected. When selecting the change from the higher gear assembly to the lower one, the lowest gear of the higher gear assembly is selected. Vehicle stationary: If it is not possible to select the lower gear assembly, the lowest gear of the higher gear assembly is used for picking up. It is not possible to engage the reverse gear of the higher gear assembly.		First of all remove possible failures due to interruptions or short-circuit on sensors and solenoid valves				
91	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - RANGE UNIT	DOES NOT DIS-ENGAGE			Try to engage gears with the vehicle at rest and check if the failure is still present.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
91	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - RANGE UNIT	DOES NOT DIS-ENGAGE			Check the mechanical system of the range unit.				
92	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - RANGE UNIT	SPLITTER LEAVES THE INITIAL POSITION BUT DOES NOT REACH THE FINAL POSITION	If the selected gear assembly cannot be engaged, the relevant actuator tries to repeat engagement for three times. When the attempts fail, the system can have the following reactions: 1) When the selection from the lower to the higher gear assembly fails, the highest gear of the lower assembly is engaged. 2) When the selection from the higher to the lower gear assembly fails, the lowest gear of the higher gear assembly is engaged. Vehicle stationary: if the lower gear assembly cannot be selected, the lowest gear of the higher gear assembly is selected for picking up.		First of all remove possible failures due to interruptions or short-circuit on sensors and solenoid valves				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
92	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - RANGE UNIT	SPLITTER LEAVES THE INITIAL POSITION BUT DOES NOT REACH THE FINAL POSITION			Try to engage gears with the vehicle at rest and check if the failure is still present.				
92	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - RANGE UNIT	SPLITTER LEAVES THE INITIAL POSITION BUT DOES NOT REACH THE FINAL POSITION			Check the mechanical system of the range unit.				
93	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - RANGE UNIT	DOES NOT ENGAGE	If the selected gear assembly cannot be engaged, the relevant actuator tries to repeat engagement for three times. If it is not possible to engage the fresh gear assembly the system tries to go back to the previous one; if this attempt fails after a certain length of time the system goes into neutral.		First of all remove possible failures due to interruptions or short-circuit on sensors and solenoid valves				
93	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - RANGE UNIT		DOES NOT ENGAGE		Try to engage gears with the vehicle at rest and check if the failure is still present.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
93	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - RANGE UNIT	DOES NOT ENGAGE			Check the mechanical system of the range unit.				
94	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - SPLITTER UNIT	DOES NOT DIS-ENGAGE	Vehicle moving: The highest-lowest gear that can be selected is the highest-lowest one available on the gear assembly selected previously with the splitter. Vehicle stationary: The highest-lowest gear that can be selected corresponds to the highest-lowest pick-up gear on the gear assembly previously engaged by the splitter.		First of all remove possible failures due to interruptions or short-circuit on sensors and solenoid valves				
94	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - SPLITTER UNIT	DOES NOT DIS-ENGAGE			Verify that B7 sensor resistance should be between 60 and 90 Ohms.	Measure type: Resistance (Ohm) Measure point 1: Sensor connector Pin: 1 Measure point 2: Sensor connector Pin: 2	Connector Not connected; Key +15 OFF;	Typical Value: 69 Ohm;	
94	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - SPLITTER UNIT	DOES NOT DIS-ENGAGE			Try to engage gears with the vehicle at rest and check if the failure is still present.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
94	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - SPLITTER UNIT	DOES NOT DIS-ENGAGE			Check the mechanical system of the splitter unit (eventually replace the gears/splitter shaft).				
95	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - SPLITTER UNIT	SPLITTER LEAVES THE INITIAL POSITION BUT DOES NOT REACH THE FINAL POSITION	Vehicle moving: The highest-lowest gear that can be selected is the highest-lowest one available on the gear assembly selected previously with the splitter. Vehicle stationary: The highest-lowest gear that can be selected corresponds to the highest-lowest pick-up gear on the gear assembly previously engaged by the splitter.		First of all remove possible failures due to interruptions or short-circuit on sensors and solenoid valves				
95	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - SPLITTER UNIT	SPLITTER LEAVES THE INITIAL POSITION BUT DOES NOT REACH THE FINAL POSITION			Verify that B7 sensor resistance should be between 60 and 90 Ohms.	Measure type: Resistance (Ohm) Measure point 1: Sensor connector Pin: 1 Measure point 2: Sensor connector Pin: 2	Connector Not connected; Key +15 OFF;	Typical Value: 69 Ohm;	
95	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - SPLITTER UNIT	SPLITTER LEAVES THE INITIAL POSITION BUT DOES NOT REACH THE FINAL POSITION			Try to engage gears with the vehicle at rest and check if the failure is still present.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
95	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - SPLITTER UNIT	SPLITTER LEAVES THE INITIAL POSITION BUT DOES NOT REACH THE FINAL POSITION			Check the mechanical system of the splitter unit (eventually replace the gears/splitter shaft).				
96	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - SPLITTER UNIT	DOES NOT ENGAGE	System not available.		First of all remove possible failures due to interruptions or short-circuit on sensors and solenoid valves				
96	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - SPLITTER UNIT	DOES NOT ENGAGE			Verify that B7 sensor resistance should be between 60 and 90 Ohms.	Measure type: Resistance (Ohm) Measure point 1: Sensor connector Pin: 1 Measure point 2: Sensor connector Pin: 2	Connector Not connected; Key +15 OFF;	Typical Value: 69 Ohm;	
96	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - SPLITTER UNIT	DOES NOT ENGAGE			Try to engage gears with the vehicle at rest and check if the failure is still present.				
96	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - SPLITTER UNIT	DOES NOT ENGAGE			Check the mechanical system of the splitter unit.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
97	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - GEAR SELECTOR	DOES NOT DIS-ENGAGE			Check the mechanical system of the gear engagement unit.				
97	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - GEAR SELECTOR	DOES NOT DIS-ENGAGE	Vehicle moving: T/m engages on the previous gear. If the previous gear cannot be engaged due to the vehicle's speed, the system selects the gear that can be selected as close as possible to the previous gear. When the attempt is not successful the T/m is in neutral. Vehicle stationary: If the previous gear cannot be engaged the T/m goes into neutral.		First of all remove possible failures due to interruptions or short-circuit on sensors and solenoid valves				
97	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - GEAR SELECTOR	DOES NOT DIS-ENGAGE			Try to engage gears with the vehicle at rest and check if the failure is still present.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
98	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - GEAR SELECTOR	SPLITTER LEAVES THE INITIAL POSITION BUT DOES NOT REACH THE FINAL POSITION	Vehicle moving: T/m engages on the previous gear. If the previous gear cannot be engaged due to the vehicle's speed, the system selects the gear that can be selected as close as possible to the previous gear. When the attempt is not successful the T/m is in neutral. Vehicle stationary: If the previous gear cannot be engaged the T/m goes into neutral.		First of all remove possible failures due to interruptions or short-circuit on sensors and solenoid valves				
98	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - GEAR SELECTOR	SPLITTER LEAVES THE INITIAL POSITION BUT DOES NOT REACH THE FINAL POSITION			Try to engage gears with the vehicle at rest and check if the failure is still present.				
98	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - GEAR SELECTOR	SPLITTER LEAVES THE INITIAL POSITION BUT DOES NOT REACH THE FINAL POSITION			Check the mechanical system of the gear engagement unit.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
99	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - GEAR SELECTOR	DOES NOT ENGAGE	Vehicle moving: T/m engages on neutral. It is necessary to start engaging another gear with the gear lever; if the system is not able to engage the gear it shuts down and is no longer available.		First of all remove possible failures due to interruptions or short-circuit on sensors and solenoid valves				
99	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - GEAR SELECTOR	DOES NOT ENGAGE			Try to engage gears with the vehicle at rest and check if the failure is still present.				
99	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - GEAR SELECTOR	DOES NOT ENGAGE			Check the mechanical system of the gear engagement unit.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
9A	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - GEAR ENGAGED	DOES NOT DIS-ENGAGE	Vehicle moving: The clutch is engaged in the previous gear. The next attempt at engaging will have to start with the selector switch. Vehicle stationary: gear change permitted only after the neutral signal has been received. Starting and driving can be attempted with the gear engaged, if the gear is equal to or lower than the lowest gear of the selected range.		First of all remove possible failures due to interruptions or short-circuit on sensors and solenoid valves				
9A	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - GEAR ENGAGED	DOES NOT DIS-ENGAGE			Try to engage gears with the vehicle at rest and check if the failure is still present.				
9A	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - GEAR ENGAGED	DOES NOT DIS-ENGAGE			Check the mechanical system of the gear engagement unit.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
9B	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - GEAR ENGAGED	DOES NOT ENGAGE	Vehicle moving: T/m stays on neutral. Another gear selection can be set with the selector lever; if the system comes out of the neutral position, but the gear is not engaged within a certain time, the system goes back into neutral. Vehicle stationary: T/m stays on neutral. When a gear is engaged the clutch is engaged. If the clutch travel is too long, T/m goes back into the neutral position. Another gear selection can be set with the selector lever.		First of all remove possible failures due to interruptions or short-circuit on sensors and solenoid valves				
9B	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - GEAR ENGAGED	DOES NOT ENGAGE			Try to engage gears with the vehicle at rest and check if the failure is still present.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
9B	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - GEAR ENGAGED	DOES NOT ENGAGE			Check the mechanical system of the gear engagement unit.				
9C	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - GEAR ENGAGED	WRONG GEAR SHIFTING	The gearbox automatically goes into neutral and the clutch stays open. Another gear selection can be set with the selector lever.		First of all remove possible failures due to interruptions or short-circuit on sensors and solenoid valves				
9C	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - GEAR ENGAGED	WRONG GEAR SHIFTING			Try to engage gears with the vehicle at rest and check if the failure is still present.				
9C	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - GEAR ENGAGED	WRONG GEAR SHIFTING			Check the mechanical system of the gear engagement unit.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
9E	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - GEAR ENGAGED	DISENGAGEMENT NOT REQUESTED			Try to engage gears with the vehicle at rest and check if the failure is still present.				
9E	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - GEAR ENGAGED	DISENGAGEMENT NOT REQUESTED			Check the mechanical system of the gear engagement unit.				
9E	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - GEAR ENGAGED	DISENGAGEMENT NOT REQUESTED	The main valve will be automatically operated together with the gear valves to couple in the final position. If the gear has uncoupled completely, a suitable gear will be automatically engaged according to the speed conditions.		First of all remove possible failures due to interruptions or short-circuit on sensors and solenoid valves				
9E	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - GEAR ENGAGED	DISENGAGEMENT NOT REQUESTED			Verify that B4 sensor resistance should be between 60 and 90 Ohms.	Measure type: Resistance (Ohm) Measure point 1: Sensor connector Pin: 1 Measure point 2: Sensor connector Pin: 2	Connector Not connected; Key +15 OFF;	Typical Value: 69 Ohm;	

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
9F	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - RANGE UNIT	DISENGAGEMENT NOT REQUESTED	The main valve will be automatically operated together with the gear valves to couple in the final position. If the gear has uncoupled completely, a suitable gear will be automatically engaged according to the speed conditions.		First of all remove possible failures due to interruptions or short-circuit on sensors and solenoid valves				
9F	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - RANGE UNIT	DISENGAGEMENT NOT REQUESTED			Verify that B4 sensor resistance should be between 60 and 90 Ohms.	Measure type: Resistance (Ohm) Measure point 1: Sensor connector Pin: 1 Measure point 2: Sensor connector Pin: 2	Connector Not connected; Key +15 OFF;	Typical Value: 69 Ohm;	
9F	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - RANGE UNIT	DISENGAGEMENT NOT REQUESTED			Try to engage gears with the vehicle at rest and check if the failure is still present.				
9F	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - RANGE UNIT	DISENGAGEMENT NOT REQUESTED			Check the mechanical system of the gear engagement unit.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
A0	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - SPLITTER UNIT	DISENGAGEMENT NOT REQUESTED			Verify that B7 sensor resistance should be between 60 and 90 Ohms.	Measure type: Resistance (Ohm) Measure point 1: Sensor connector Pin: 1 Measure point 2: Sensor connector Pin: 2	Connector Not connected; Key +15 OFF;	Typical Value: 69 Ohm;	
A0	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - SPLITTER UNIT	DISENGAGEMENT NOT REQUESTED			Try to engage gears with the vehicle at rest and check if the failure is still present.				
A0	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - SPLITTER UNIT	DISENGAGEMENT NOT REQUESTED	The main valve will be automatically operated together with the gear valves to couple in the final position. If the gear has uncoupled completely, a suitable gear will be automatically engaged according to the speed conditions.		First of all remove possible failures due to interruptions or short-circuit on sensors and solenoid valves				
A0	00	SHIFTING ACTUATOR - CONTROL CYLINDERS - SPLITTER UNIT	DISENGAGEMENT NOT REQUESTED			Check the mechanical system of the range splitter (in case replace the sleeves and the gears shaft).				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
A3	00	CAN LINE - ENGINE - TORQUE REQUEST	NO AVAIL-ABLE SYMPTOM	Speed cannot be increased (during downshifts).	Transmission end possibilities.	Check/assemble the gear shift rail with detent for gate.				Gear change shaft: - Old: 1327 306 005 - New: 1327 306 008 Introduction ex transmission number into production: 12 AS 2301 No. 141912 AS 2301 IT No. 203583
A3	00	CAN LINE - ENGINE - TORQUE REQUEST	NO AVAIL-ABLE SYMPTOM	Vehicle moving: Gear change not synchronized. Vehicle stationary: Starting permitted. Decrease in functionality and clutch comfort.		Check the following function vehicle components: - Injection pump - Diesel filter- Fuel conduct and circuit Wiring (signal travel) - Mechanics engine brake flaps				
A4	08	CAN LINE - ENGINE - REQUESTED ENGINE TORQUE	WRONG SIGNAL	Further errors saved in EDC.		Please make also a diagnosis check on EDC system.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
A5	08	CAN LINE - ENGINE - ACCELERATOR PEDAL POSITION	WRONG SIGNAL	Further errors saved in EDC.		Please make also a diagnosis check on EDC system.				
A5	08	CAN LINE - ENGINE - ACCELERATOR PEDAL POSITION	WRONG SIGNAL	Vehicle moving: No calculation of vehicle weight and gear resistance possible. Impossible to calculate starting gear. Throttle pedal position will be replaced by request for information from the driver. The coupling quality could be reduced. Vehicle stationary: Starting is possible. On reaching the stop, the average starting gear will be engaged. The manoeuvring and starting quality could be reduced.		Check accelerator/accelerator wiring. Replace/repair accelerator/periphery.				
A6	00	CAN LINE - ENGINE - IDLE SWITCH / ACCELERATOR PEDAL	PLAUSIBILITY	Vehicle moving: Gear changing possible Vehicle stationary: Impossible to start the vehicle. System not available.		Check accelerator/accelerator wiring/idling switch. Replace/repair/teach-in accelerator/periphery.				Error is set with idling signal 1 and accelerator pedal position > 20%.

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
A6	00	CAN LINE - ENGINE - IDLE SWITCH / ACCELERATOR PEDAL	PLAUSIBILITY	Further errors saved in EDC.		Please make also a diagnosis check on EDC system.				
A7	08	CAN LINE - ENGINE - ENGINE TORQUE	WRONG SIGNAL	System not available.		Check vehicle CAN.	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	
A7	08	CAN LINE - ENGINE - ENGINE TORQUE	WRONG SIGNAL			Intermittent or incorrect signal.	Please make also a diagnosis check on EDC system.			

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
A8	08	CAN LINE - ENGINE - LOW IDLE SWITCH	WRONG SIGNAL	Vehicle moving: No system restriction present while driving. Vehicle stationary: After RESETTNG the display shows codes AP or FP until the throttle pedal is pressed and the idling signal is off. If the idling signal fails to arrive within a certain length of time, the display will show the error with code AC or will no longer show code FP. Starting is possible if the control unit detects a throttle potentiometer value > the threshold and the engine idling speed + a predefined threshold.		Check accelerator / accelerator wiring / idling switch. Replace / repair / teach-in accelerator / periphery.				Error is set with idling signal 0 and accelerator pedal position > 0%.
A9	00	SHIFTING ACTUATOR - ELECTRONIC CONTROL UNIT - ECU RELAY CUT-OFF	DOES NOT SWITCH OFF	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		The relay is located within the E.C.U. Before replacing the E.C.U., check that the voltage supplied is correct.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
AA	00	SHIFTING ACTUATOR - ELECTRONIC CONTROL UNIT - ECU RELAY CUT-OFF	DOES NOT SWITCH ON	Vehicle moving: gear-box locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		The relay is located within the E.C.U. Before replacing the E.C.U., check that the voltage supplied is correct.				
AB	08	CAN LINE - ENGINE - ENGINE TORQUE	WRONG SIGNAL	Vehicle moving: No calculation of vehicle weight and gear resistance possible. Impossible to calculate starting gear. The information on the torque percentage is obtained from the driver's controls (throttle pedal). Vehicle stationary: Starting possible. When the vehicle stops the system selects the average starting gear. Attention to possible overloads on the clutch.	EDC deactivation relay defective.	Replace deactivation relay.				No error saved in EDC.
AB	08	CAN LINE - ENGINE - ENGINE TORQUE	WRONG SIGNAL			Intermittent or incorrect signal.	Please make also a diagnosis check on EDC system.			

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
AE	08	CAN LINE - ENGINE - KICK-DOWN SWITCH	WRONG SIGNAL	The kickdown function is not available. No additional functional restrictions.		Check the following components: - EDC-Accelerator pedal (teach-in) - Wiring (signal travel) - Kickdown switch				Error on the signal from the throttle pedal
AF	04	SUPPLY VOLTAGE - ELECTRONIC CONTROL UNIT	SIGNAL KEY (+15) NOT PRESENT	Defective supply (+15).		Check for a fault in the 10A fuses (fuses holder no. 70602).	1- Measure type: Voltage (V) Measure point 1: Connector for ECU power supply - vehicle side. Pin: 1 Measure point 2: Connector for ECU power supply - vehicle side. Pin: 16 2- Measure type: Voltage (V) Measure point 1: Connector for ECU power supply - vehicle side. Pin: 1 Measure point 2: Connector for ECU power supply - vehicle side. Pin: 17	1- Connector Connected; Key +15 ON; 2- Connector Connected; Key +15 ON;	1- Min. value: 22 V; Max. value: 28 V; 2- Min. value: 22 V; Max. value: 28 V;	
B0	00	SIGNALS - GEAR SHIFT LEVER	SHIFT LEVER POSITION NOT DEFINED	The gearbox may have lower performance or be locked. It depends on the conditions generating it.		Select PARAMETER READ environment. Move the shift lever and verify the value changes. Check cabling, if failure persists, the lever is worn.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
B1	04	CAN LINE -COMMUNICATION LINES - VEHICLE	COMMUNICATION ERROR	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Verify CAN line (for a possible disconnection of ST11 connector).	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	
B1	04	CAN LINE -COMMUNICATION LINES - VEHICLE	COMMUNICATION ERROR			Check wiring				
B2	04	CAN LINE -COMMUNICATION LINES - VEHICLE	COMMUNICATION ERROR (WARNING)	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Verify CAN line (for a possible disconnection of ST11 connector).	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	
B2	04	CAN LINE -COMMUNICATION LINES - VEHICLE	COMMUNICATION ERROR (WARNING)			Check wiring				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
B3	00	CAN LINE -COMMUNICATION LINES - VEHICLE	QUEUE OVERRUN	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Verify CAN line (for a possible disconnection of ST11 connector).	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	
B3	00	CAN LINE -COMMUNICATION LINES - VEHICLE	QUEUE OVERRUN			Check wiring				
B4	04	CAN LINE - ENGINE - CONTROL MESSAGE	TIMEOUT	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Check vehicle CAN.	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	
B4	04	CAN LINE - ENGINE - CONTROL MESSAGE	TIMEOUT	In the EEC1 message timeout at the following signals: - theoretical injection volume EDC - current injected volume EDC - output speed of engine		Please make also a diagnosis check on EDC system.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
B4	04	CAN LINE - ENGINE - CONTROL MESSAGE	TIMEOUT			Check fuse box fuses.				
B5	04	CAN LINE - ENGINE - CONTROL MESSAGE	TIMEOUT	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Check vehicle CAN.	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
B6	04	CAN LINE - CRUISE CONTROL / VEHICLE SPEED - CONTROL MESSAGE	TIMEOUT	No vehicle speed based on wheels (redundant 2 output speed information, if output speed is not detected on 2 nd output speed sensor of CAN tachograph). No service brake signal. When running by inertia, the service brake signal is considered active. No Cruise Control active information. No calculation of vehicle weight and gear resistance possible. Impossible to calculate starting gear. The ensuing variable single fault message is deleted. The clutch always disengages at the associated brake pedal engine speed (higher engine revs).		Check vehicle CAN.	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	The following signals are in CCVS:- Veh. speed v_fzg (km/h)-Brake switch z_fbr (1 active/0 not active)-Cruise control target speed v_cc_set (km/h)-Cruise control status v_cc status
B6	04	CAN LINE - CRUISE CONTROL / VEHICLE SPEED - CONTROL MESSAGE	TIMEOUT			Please make also a diagnosis check on EDC system.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
B6	04	CAN LINE - CRUISE CONTROL / VEHICLE SPEED - CONTROL MESSAGE	TIMEOUT			Check fuse box fuses.				
B7	04	CAN LINE - RE-TARDER - ENGINE BRAKE - CONTROL MESSAGE	TIMEOUT	No calculation of vehicle weight and gear resistance possible. Impossible to calculate starting gear. No information on exhaust brake torque. If the exhaust brake is activated, the coupling quality can turn out poor at the start of coupling. The exhaust brake is considered as not activated. No additional functional restrictions.		Check vehicle CAN.	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	ERC1_ER contains the current engine brake torque.
B7	04	CAN LINE - RE-TARDER - ENGINE BRAKE - CONTROL MESSAGE	TIMEOUT			Please make also a diagnosis check on Intarder.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
B7	04	CAN LINE - RE- TARDER - ENGINE BRAKE - CONTROL MESSAGE	TIMEOUT			Check fuse box fuses.				
B8	04	CAN LINE - RE- TARDER - INTARDER - CON- TROL MESSAGE	TIMEOUT	No calculation of vehicle weight and gear resistance possible. Impossible to calculate the starting gear. The average starting gear will be engaged. No additional functional restrictions		Check vehicle CAN.	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	Message ERC1_DR contains: -Secondary retarder brake torque -Request, increase in engine speed
B8	04	CAN LINE - RE- TARDER - INTARDER - CON- TROL MESSAGE	TIMEOUT			Please make also a diagnosis check on Intarder.				
B8	04	CAN LINE - RE- TARDER - INTARDER - CON- TROL MESSAGE	TIMEOUT			Check fuse box fuses.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
BC	00	SHIFTING ACTUATOR - ELECTRONIC CONTROL UNIT - INTERNAL FAILURE	INCORRET WORKING	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Delete the fault memory: if the error remains, call the Help Desk and follow their instructions to reprogram or replace the control unit if necessary.				
BD	00	SHIFTING ACTUATOR - ELECTRONIC CONTROL UNIT - INTERNAL FAILURE	INCORRET WORKING	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Delete the fault memory: if the error remains, call the Help Desk and follow their instructions to reprogram or replace the control unit if necessary.				
BE	00	SHIFTING ACTUATOR - ELECTRONIC CONTROL UNIT - INTERNAL FAILURE	PROGRAMMING DATA NOT VALID	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Reprogram the electronic control unit to rewrite the parameters.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
BF	00	SHIFTING ACTUATOR - ELECTRONIC CONTROL UNIT - INTERNAL FAILURE	PROGRAMMING DATA NOT VALID	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Reprogram the electronic control unit to rewrite the parameters.				
C0	00	SHIFTING ACTUATOR - ELECTRONIC CONTROL UNIT - INTERNAL FAILURE	EEPROM ACCESS FAILURE	No calculation of vehicle weight and gear resistance possible. Impossible to calculate the starting gear. The average starting gear will be engaged. No additional functional restrictions		Erase the failure memory and retry. If the problem persists, contact the Help Desk and follow the instructions for the possible replacement of the gearcase.				
C1	01	SHIFTING ACTUATOR - ELECTRONIC CONTROL UNIT - ECU TEMPERATURE	TOO HIGH	Vehicle moving: Gear changing blocked. The clutch opens when the vehicle stops and neutral is engaged. Impossible to keep on driving. The display alternately shows the too high temperature and the information on the gear. System not available.		Verify fluid level.				ECU temperature on electronics circuit board greater than 125 °C and oil temperature greater than 130 °C.

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
C2	08	CAN LINE - BRAKING SYSTEM - FRONT WHEELS SPEED	NO SIGNAL	The automatic shift unit is deactivated. No further system restrictions.		Check / Replace speed sensor.				Error entered in other electronic units as well (EDC, ABS, etc.)
C2	08	CAN LINE - BRAKING SYSTEM - FRONT WHEELS SPEED	NO SIGNAL	Error stored only in transmission electronic unit.		Last time of error storage on the reading out environmental conditions. Cancel Faults Memory				
C2	08	CAN LINE - BRAKING SYSTEM - FRONT WHEELS SPEED	NO SIGNAL	Error still active.	Vehicle speed sensor disconnected or failed.	Check / Replace wiring speed sensor. Check signal travel.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
C2	08	CAN LINE - BRAKING SYSTEM - FRONT WHEELS SPEED	NO SIGNAL		Signal out of tolerance.	Gear actuator replacement (control unit)				Alternative solution: disassemble transmission actuator and replace transmission actuator lower section.
C5	08	CAN LINE - BRAKING SYSTEM - AVERAGE FRONT WHEEL SPEED	WRONG SIGNAL	No calculation of vehicle weight and gear resistance possible. Impossible to calculate the starting gear. The average starting gear will be engaged. No additional functional restrictions		Check fuse box fuses.				Signal is contained in CAN message "SWI".
C5	08	CAN LINE - BRAKING SYSTEM - AVERAGE FRONT WHEEL SPEED	WRONG SIGNAL		Message is generated in the ABS electronics.	Check ABS.				
C5	08	CAN LINE - BRAKING SYSTEM - AVERAGE FRONT WHEEL SPEED	WRONG SIGNAL	The automatic shift unit is deactivated. No further system restrictions.	Check / Replace speed sensor.					Error entered in other electronic units as well (EDC, ABS, etc.)

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
C5	08	CAN LINE - BRAKING SYSTEM - AVERAGE FRONT WHEEL SPEED	WRONG SIGNAL	Error stored only in transmission electronic unit.		Last time of error storage on the reading out environmental conditions. Cancel Faults Memory				
C5	08	CAN LINE - BRAKING SYSTEM - AVERAGE FRONT WHEEL SPEED	WRONG SIGNAL	Error still active.	Vehicle speed sensor disconnected or failed.	Check/Replace wiring speed sensor. Check signal travel.				
C5	08	CAN LINE - BRAKING SYSTEM - AVERAGE FRONT WHEEL SPEED	WRONG SIGNAL	Signal out of tolerance.	Gear actuator replacement (control unit)	Alternative solution: disassemble transmission actuator and replace transmission actuator lower section.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
C7	04	CAN LINE - BRAKING SYSTEM - SPEED WHEELS MESSAGE	TIMEOUT	No calculation of vehicle weight and gear resistance possible. Impossible to calculate the starting gear. The average starting gear will be engaged. No additional functional restrictions		Check fuse box fuses.	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	
C7	04	CAN LINE - BRAKING SYSTEM - SPEED WHEELS MESSAGE	TIMEOUT		Message issued by ASR / ABS / EBS electronics.	Check ABS / ASR / EBS signal travel.				
C7	04	CAN LINE - BRAKING SYSTEM - SPEED WHEELS MESSAGE	TIMEOUT	Other errors 91,100,177 present.	Short circuit to ground to pin 8 - CAN H possible.	Check vehicle CAN.	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	
E2	04	CAN LINE - MUX	TIMEOUT	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Check the CAN line and the working of the other ECU's connected.	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	After replacing any ECU's connected to CAN line, carry out the Cancel Faults Memory.

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
E3	00	SHIFTING ACTUATOR - ELECTRONIC CONTROL UNIT - INTERNAL FAILURE	APPLICATION ERROR FOR CAN COMMUNICATION	Vehicle moving: gearbox locked, the clutch opens automatically when the vehicle stops. Vehicle stationary: gearbox automatically in neutral, impossible to continue driving.		Check the CAN line and the working of the other ECU's connected.	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	After replacing any ECU's connected to CAN line, carry out the Cancel Faults Memory.
E7	00	CAN LINE - COMMUNICATION LINES - VCM	EEC3 TIMEOUT ERROR	In initialization phase: default config. (current lever/no addit. Manoeuvring mode/ normal mode). After initialization phase: no functional limitation.	The message VCM_TC is not received for approx. 150 ms or is ignored because it is not valid always for the same time.	Verify presence and recognition VCM ECU. Verify CAN line.	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	The error passes intermittent in phase of initialization when it receives the corrected message, but only the shift lever configuration is updated. After the initialization after a reset of the system.

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
F1	08	CAN LINE - COMMUNICATION LINES - GEAR SHIFT LEVER	VCM_TC CAN MESSAGE MISSING	In initialization phase: default config. (current lever/no addit. Manoeuvring mode/normal mode). After initialization phase: no functional limitation.	The message VCM_TC is not received for approx. 150 ms or is ignored because it is not valid always for the same time.	Verify presence and recognition VCM ECU. Verify CAN line.	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	The error passes intermittent in phase of initialization when it receives the corrected message, but only the shift lever configuration is updated. After the initialization after a reset of the system.
F6	00	CAN LINE - COMMUNICATION LINES - VCM	PTI (Power takeoff Information) MESSAGE TIMEOUT ERROR	In initialization phase: default config. (current lever/no addit. Manoeuvring mode/normal mode). After initialization phase: no functional limitation.	The message VCM_TC is not received for approx. 150 ms or is ignored because it is not valid always for the same time.	Verify presence and recognition VCM ECU. Verify CAN line.	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	The error passes intermittent in phase of initialization when it receives the corrected message, but only the shift lever configuration is updated. After the initialization after a reset of the system.

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
F7	00	CAN LINE - COMMUNICATION LINES - VCM	PTI (Power takeoff Information) MESSAGE SIGNAL FAILURE			For STRALIS please check either for a possible short between 9131 and 0131 cables or check for a possible wiring inversion on ST67 connector (PIN 4 of 0131 cable could be inverted with PIN 2 of 9131 cable).				
F7	00	CAN LINE - COMMUNICATION LINES - VCM	PTI (Power takeoff Information) MESSAGE SIGNAL FAILURE			Check vehicle CAN.	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
FD	04	CAN LINE - COMMUNICATION LINES - VEHICLE	EM_CMD CAN MESSAGE TIMEOUT	No system restriction.	The message EM_CMD CAN is not received for approx. 150 ms or is ignored because it is not valid always for the same time.	Verify presence and recognition EM (Expansion Module) ECU. Verify CAN line.	Measure type: Resistance (Ohm) Measure point 1: Connector (vehicle side) Pin: 8 Measure point 2: Connector (vehicle side) Pin: 12	Connector Connected; Key +15 OFF;	Typical Value: 60 Ohm;	

Aquila Trucks Centres

Aquila Trucks Centres

SECTION 5

Power take off

	Page
DESCRIPTION	3
MAIN DATA	4
TIGHTENING TORQUE	5
TOOLS	6
EXPERIMENTAL TOOLS	8
- Operation (power take off disengaged)	11
- Operation (power take off engaged)	12
REMOVING - REFITTING TOTAL POWER TAKE-OFF ASSEMBLY	13
- Removal	13
- Refitting	14
OVERHAULING	15
- Disassembling the main box	15
- Disassembling the drive assembly	15
- Disassembling bearing for shaft with gear wheel	15
- Disassembling the oil pump	16
- Assembling the oil pump	17
- Cleaning and checking parts	17
- Assembling the bearing for shaft with gear wheel	18
- Fitting drive assembly	18
- Adjusting drive output shaft tapered bearings .	20
- Assembling the main housing	21
- Adjusting ball bearing	21


Aquila Trucks Centres

Aquila Trucks Centres

DESCRIPTION

The total power takeoff is mounted between the engine flywheel and the clutch unit. The power takeoff is equipped with a non-synchronized pneumatic-mechanic connection to transfer the drive shaft motion to the pick up flange. The lubrication is carried out by an oil pump.

Figure 1





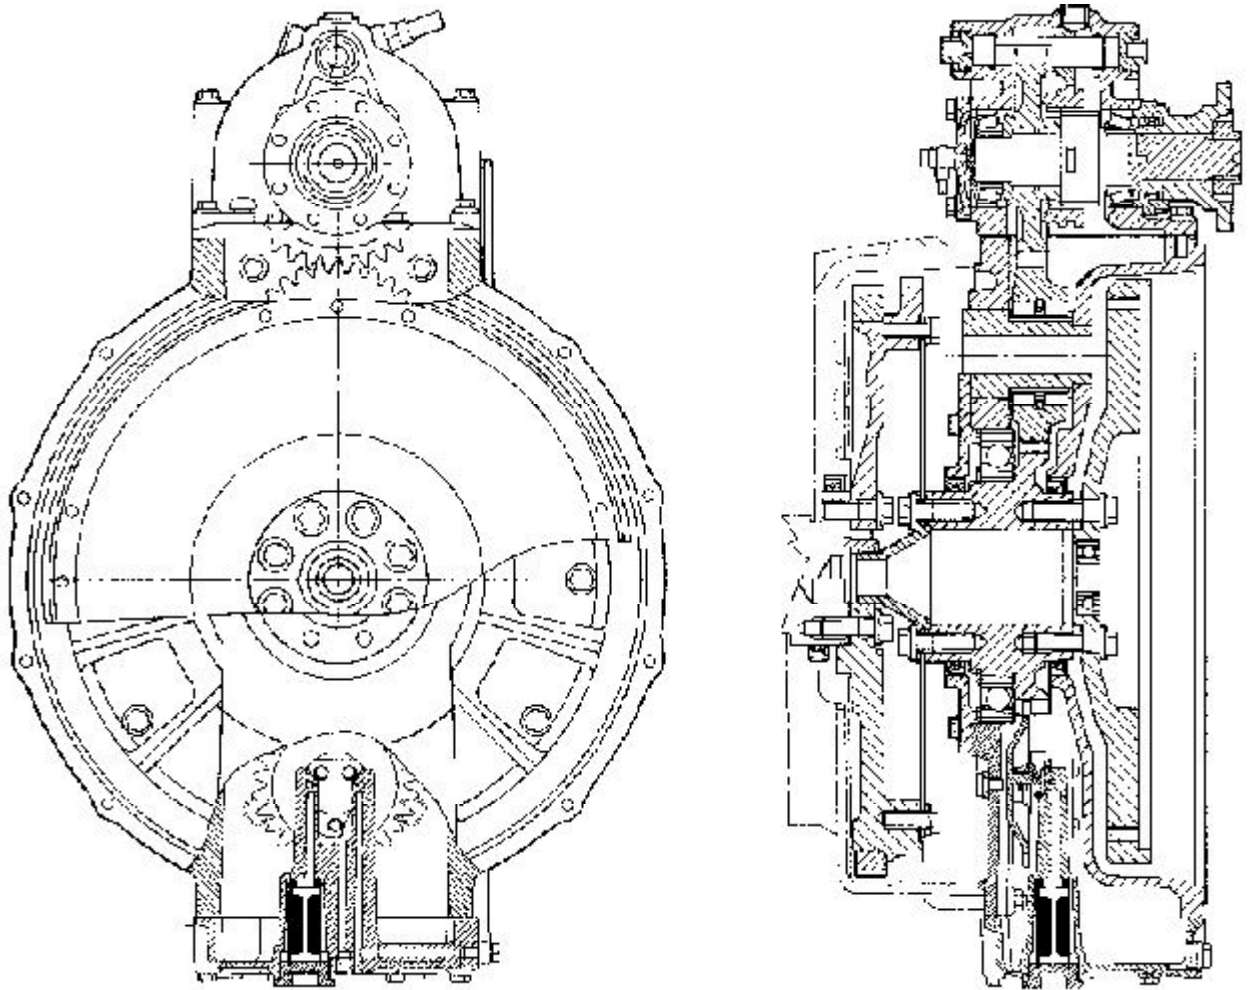


60239

CROSS SECTION

Aquila Trucks Centres

     MAIN DATA


	Ratio revolutions - rpm	1 : 1.29
	Torque	900 Nm
	Direction of rotation	Same as engine
Type of engagement/release control		Pneumatic **
	Type of lubricant Quantity	TUTELA ZC 90 - SAE 80 W/90 2.5 l
Foreseen duration of the nominal torque (hours)*		500
Type of motion output (vehicle travelling direction)		Rear with flange
Gearbox connection		SAE 1
Weight (without flywheels) (kg)		70
Weight (with clutch flywheel) (kg)		102.6
	Bearings for output shaft	2 tapered roller bearings
	Bearing settings	Using setting rings
	Distances setting rings	5.5 - 5.6 - 5.7 - 5.8 - 5.9 6 - 6.1 - 6.2 mm
	Bearing for control shaft	1 ball bearing
	Bearing settings	Using setting rings
	Thickness setting rings	3.95 - 4 - 4.05 - 4.10 - 4.15 - 4.20 4.25 - 4.30 mm
	Thickness safety split ring	3.60 - 3.65 - 3.70 - 3.80 3.85 - 3.90 mm

* At a speed of 2450 rpm. Indicative value for the operation without bumps and vibrations

** Pressure value 10 bar always supplied

Aquila Trucks Centres

Figure 2

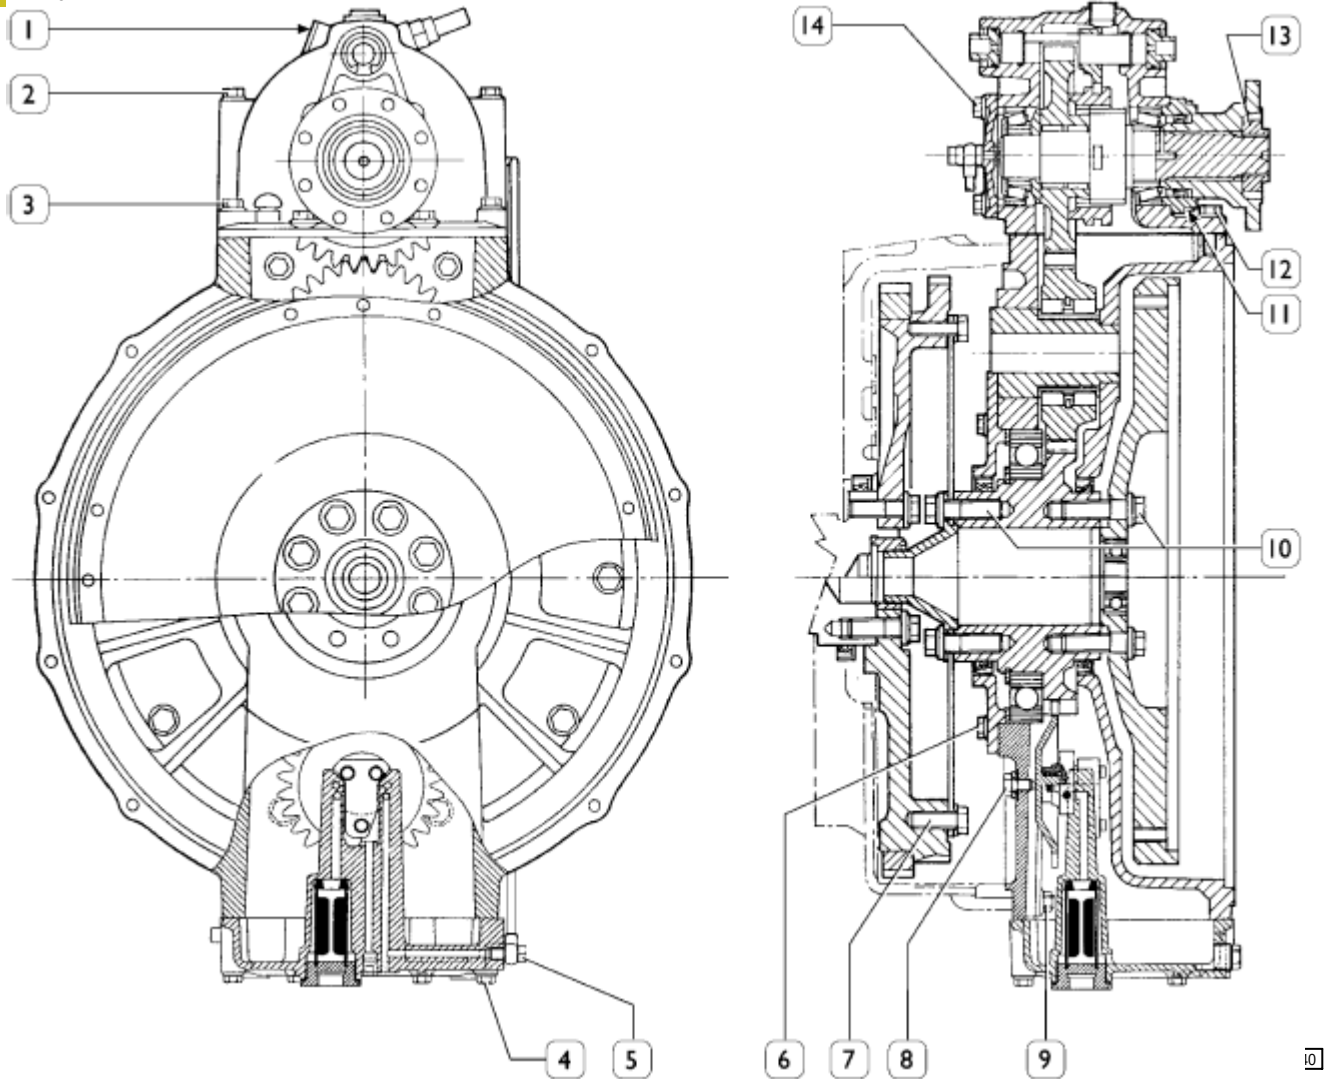






TIGHTENING TORQUE

DESCRIPTION		TORQUE	
		Nm	kgm
1	Plug	27.5	2.75
2	Screw M10x140	43	4.3
3	Screw	43	4.3
4	Screw M8x60	18	1.8
5	Joint	5.5	0.55
6	Screw for cover	22	2.2
7	Screw	82	8.2
8	Screw M10x1.5	10	1
9	Nut with flange for stud bolt	29	2.9
10	* Screws must be tightened in two stages: 1 st stage pre-torque 2 nd stage to angle	95 60°	9.5 60°
11	Screw M8x30	18	1.8
12	Screw M10x30	43	4.3
13	Nut M33x1.5	465	46.5
14	Screw M8x30	18	1.8


NOTE: Apply LOCTITE 242 on the plugs and joints in contact with the lubricant

Aquila Trucks Centres

TOOLS

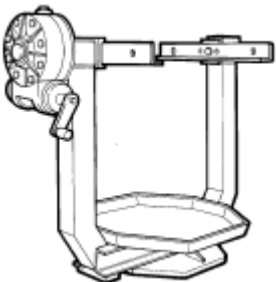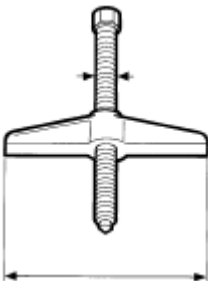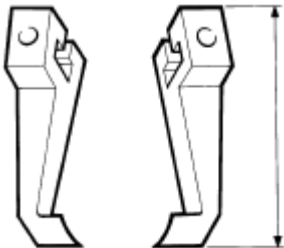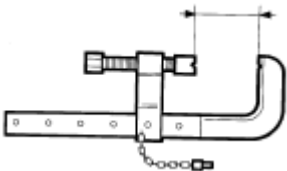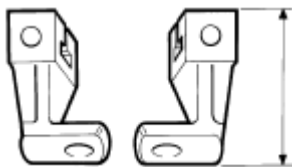
TOOL NO.	DESCRIPTION
99305121 	Hot air apparatus
99322205 	Revolving stand for overhauling units
99341003 	Double-acting bridge
99341009 	Pair of brackets
99341015 	Clamp
99341016 	Pair of brackets with hole

Aquila Trucks Centres

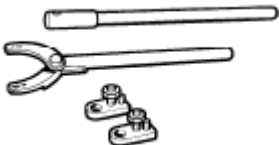TOOL NO.	DESCRIPTION
99345049	 Counter block for pullers
99360503	 Rings for lifting cylinder units
99363241	 Plates (2) to measure gearbox main or transmission shaft bearing preload
99370317	 Counter lever with extension to fasten flanges
99395216	 Pair of meters for tightening to angle with 1/2" and 3/4" square coupling

EXPERIMENTAL TOOLS

This chapter illustrates the mechanical working drawing of the experimental tools (S.P.) used to overhaul the overall power takeoff described in this section, which can be manufactured by the repair shops themselves.

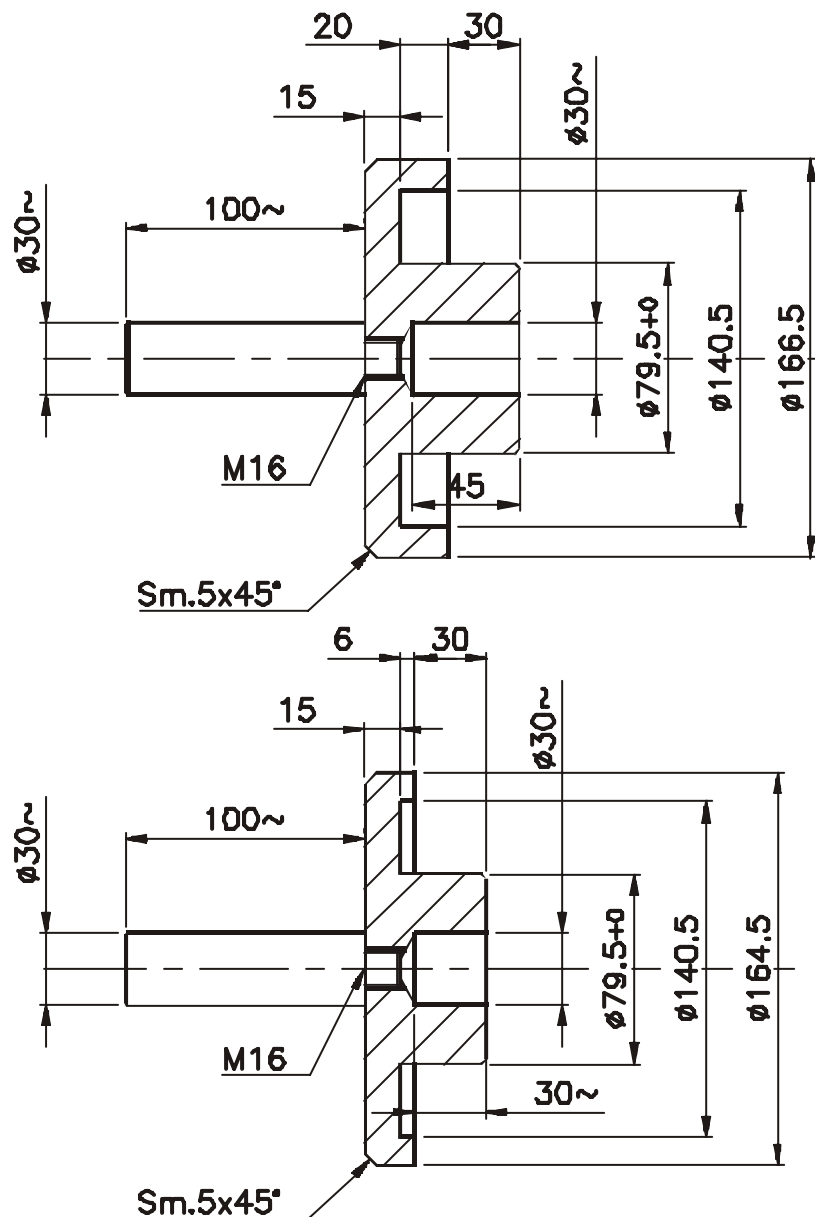


For the permissible errors on the dimensions without tolerance and for other general specifications, see **ASME** STD 10-2311

MAT. Acciaio			COVER. Vedi dis.		DRAWN UTS (B)		NDRAWING SP.2481		
All proprietary rights reserved by IVECO. This drawing shall not be reproduced or its any way utilized, for the reproduction or the transport or other kinds. It shall be used only for reference and shall not be released to other parties, without written consent. Any infringement will be legally pursued.			ISO 9001  15. 10-000.1	Calettatore per montaggio		APPROVED		EXPER. 2481	SIZE A4
				guarnizione presa di forza		DATE 16/10/2003		SHEET	
						SUPERSEDES			
				MOTORE F2B-F3B		SCALE 1:2.5		IVECO	
						Q.TY 1			

Aquila Trucks Centres

Figure 3

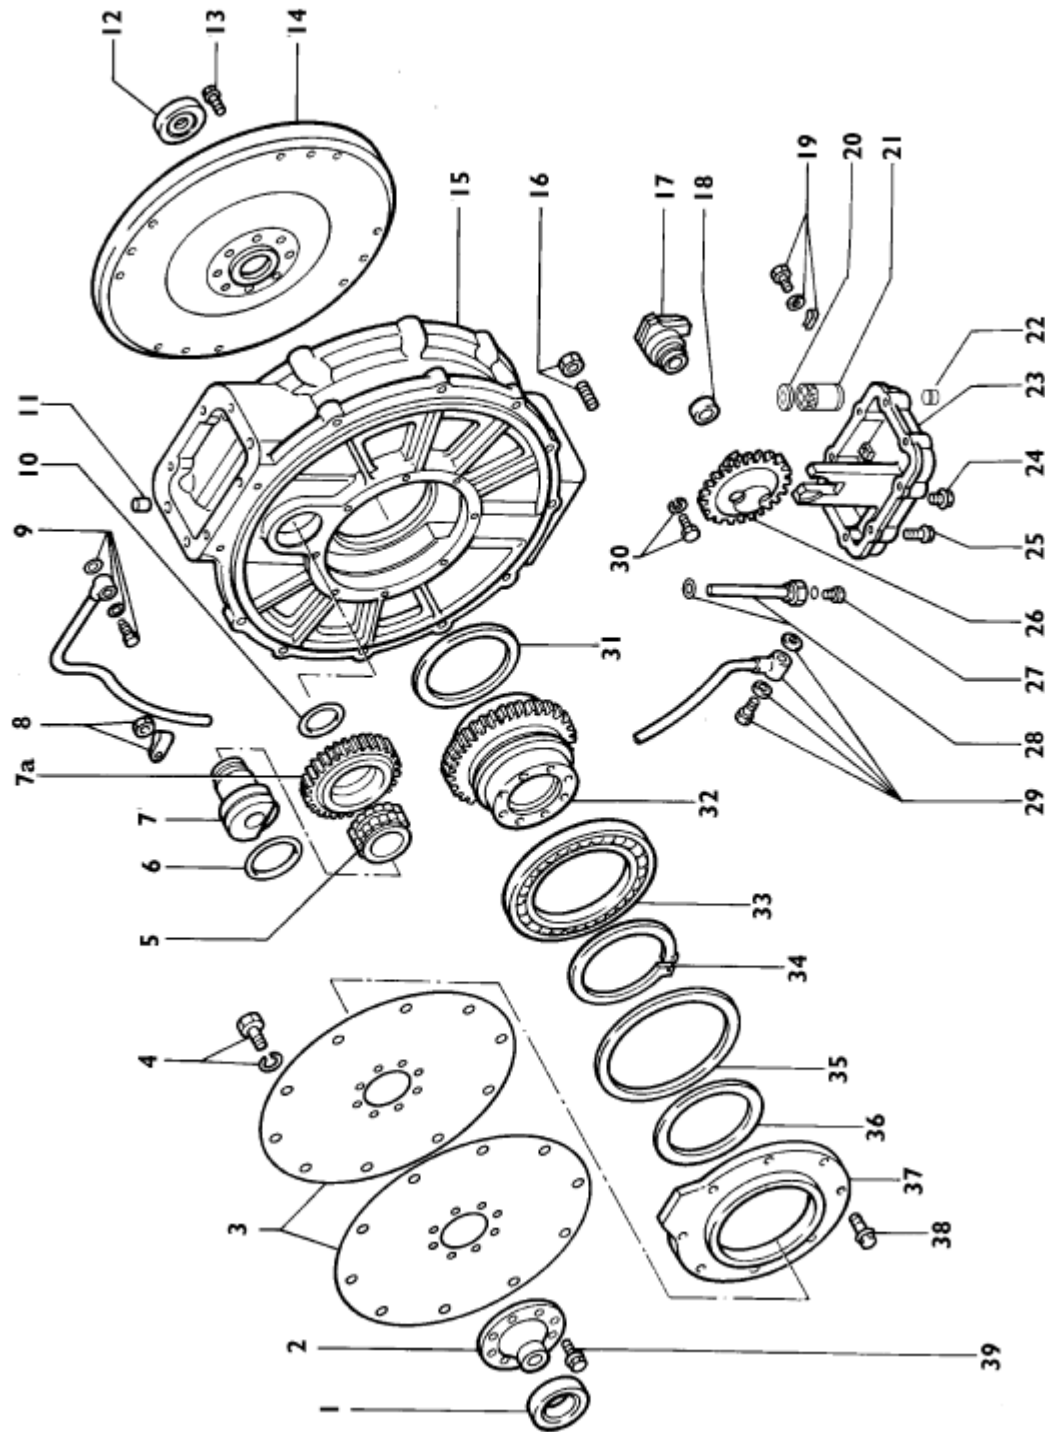


COMPONENT PARTS OF THE POWER TAKE-OFF (DEMONSTRATION)

1. Bushing - 2. Flange - 3. Laminar coupling - 4. Screw and washer - 5. Roller bearing - 6. Seal - 7. Shaft for middle gear - 7a. Middle gear - 8. Bracket with nut - 9. Fitting with washers - 10. Seal - 11. Locating peg - 12. Bearing - 13. Screw - 14. Flywheel - 15. Box - 16. Stud bolt with nut - 17. Oil pump - 18. Bearing - 19. Screw washer and bracket - 20. Seal - 21. Oil filter - 22. Plug - 23. Cover - 24. Plug - 25. Screw - 26. Gear - 27. Screw with washer - 28. Pipe with washer - 29. Pipe with fitting and washers - 30. Screw - 31. Seal - 32. Pinion shaft - 33. Ball bearing - 34. Split ring - 35. Adjustment ring - 36. Seal - 37. Cover - 38. Screw - 39. Screw

71362

Aquila Trucks Centres

Figure 4

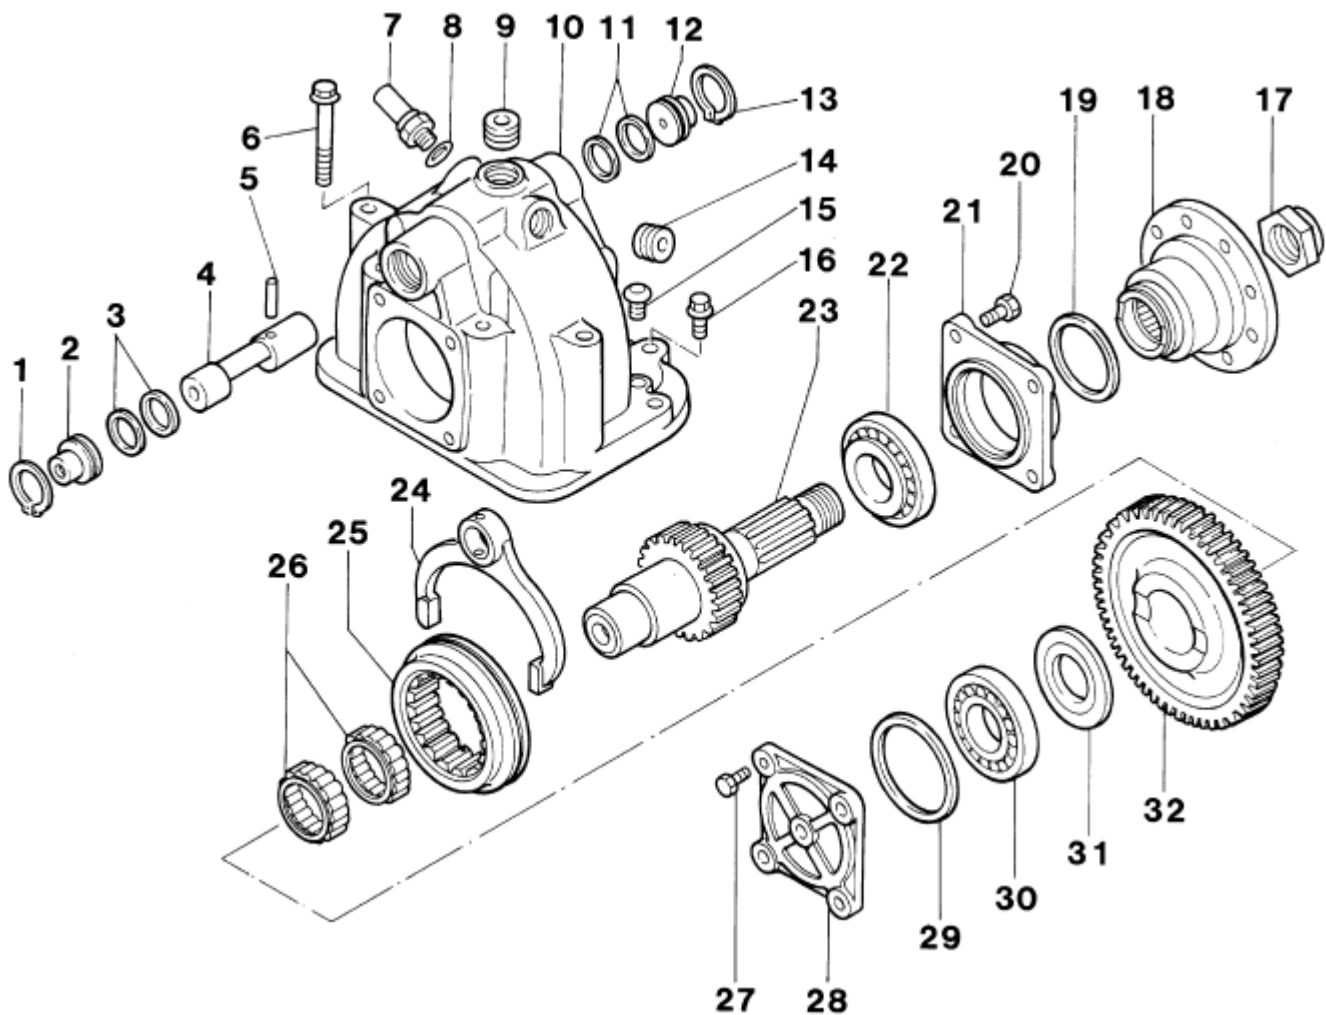


40776

EXPLODED VIEW OUTPUT UNIT COMPONENTS

1. Safety split ring - 2. Joint - 3. Choke ring - 4. Fork shaft - 5. Pin - 6. Screws - 7. Transmitter - 8. Washer - 9. Plug - 10. Housing - 11. Choke rings - 12. Joint - 13. Safety split ring - 14. Plug - 15. Vent - 16. Screws - 17. Nut - 18. Flange - 19. Seal - 20. Screws - 21. Cover - 22. Conical bearings - 23. Grooved transmission shaft - 24. Selector fork - 25. Sliding joint - 26. Roller bearings - 27. Screws - 28. Cover - 29. Setting ring - 30. Conical bearing - 31. Shoulder ring - 32. Gear wheel

Aquila Trucks Centres

Figure 5

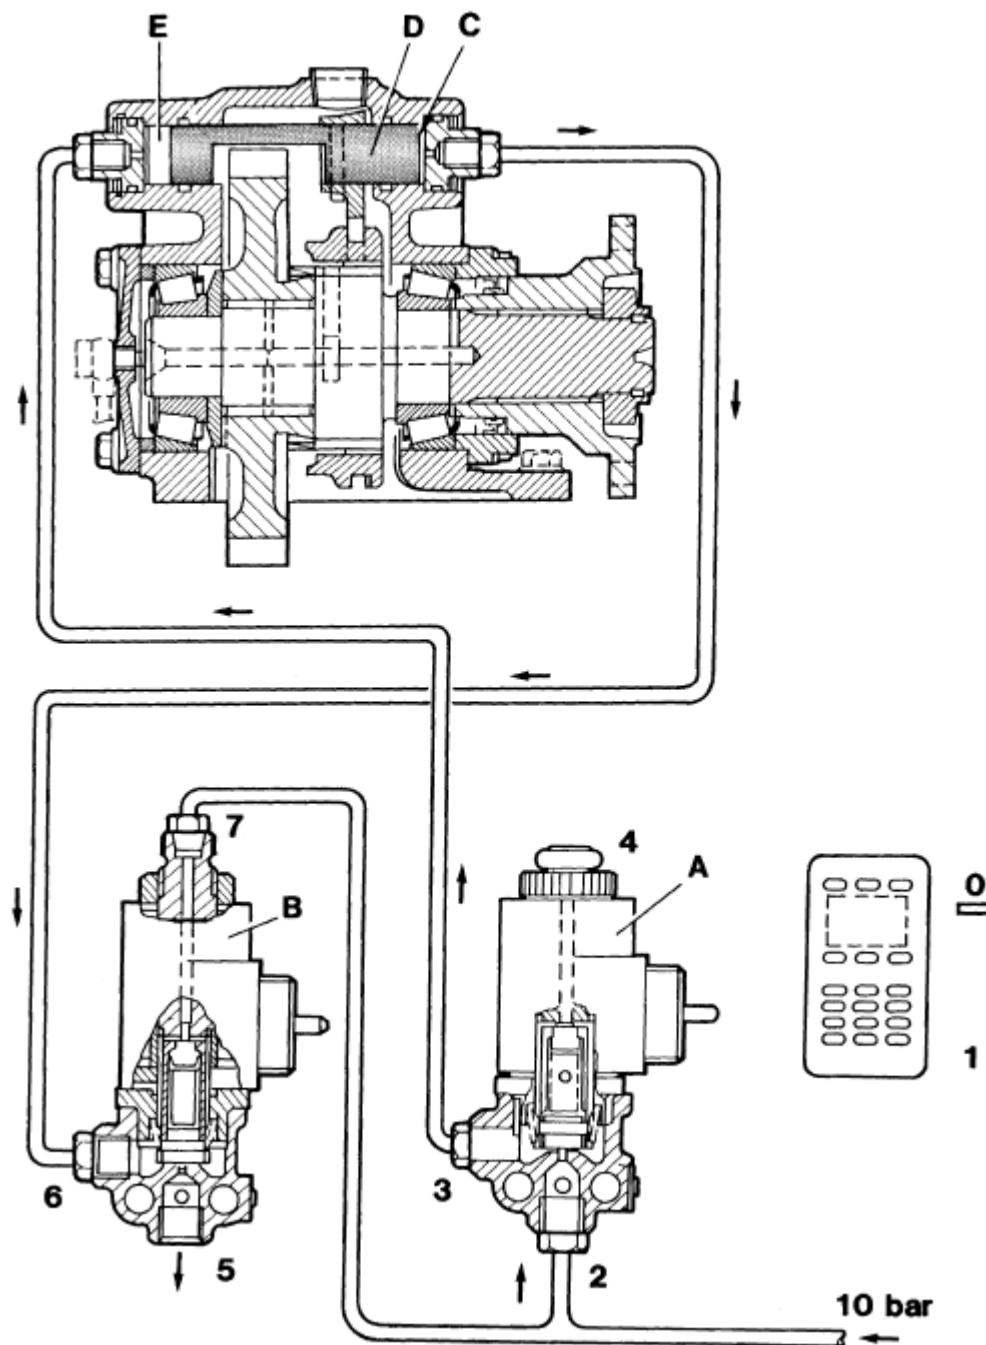

40787

Operation (power take off disengaged)

A = Electro-pneumatic valve N.A. (usually open) with switch disengaged

B = Electro-pneumatic valve N.C. (usually closed) with switch disengaged


With the switch in position 0 (disengaged) the electromagnets of the valves A - B are disconnected and therefore the circuit of the valve A remains open and that of valve B remains closed.

The air taken in enters valve A by link (2), leaves by link (3) and passes through the pipes to chamber E, moving the control rod with fork D in power take off position disengaged.

At the same time the air in chamber C passes through the piping to the link (6) and passes into the air by link (5).

Aquila Trucks Centres

Figure 6

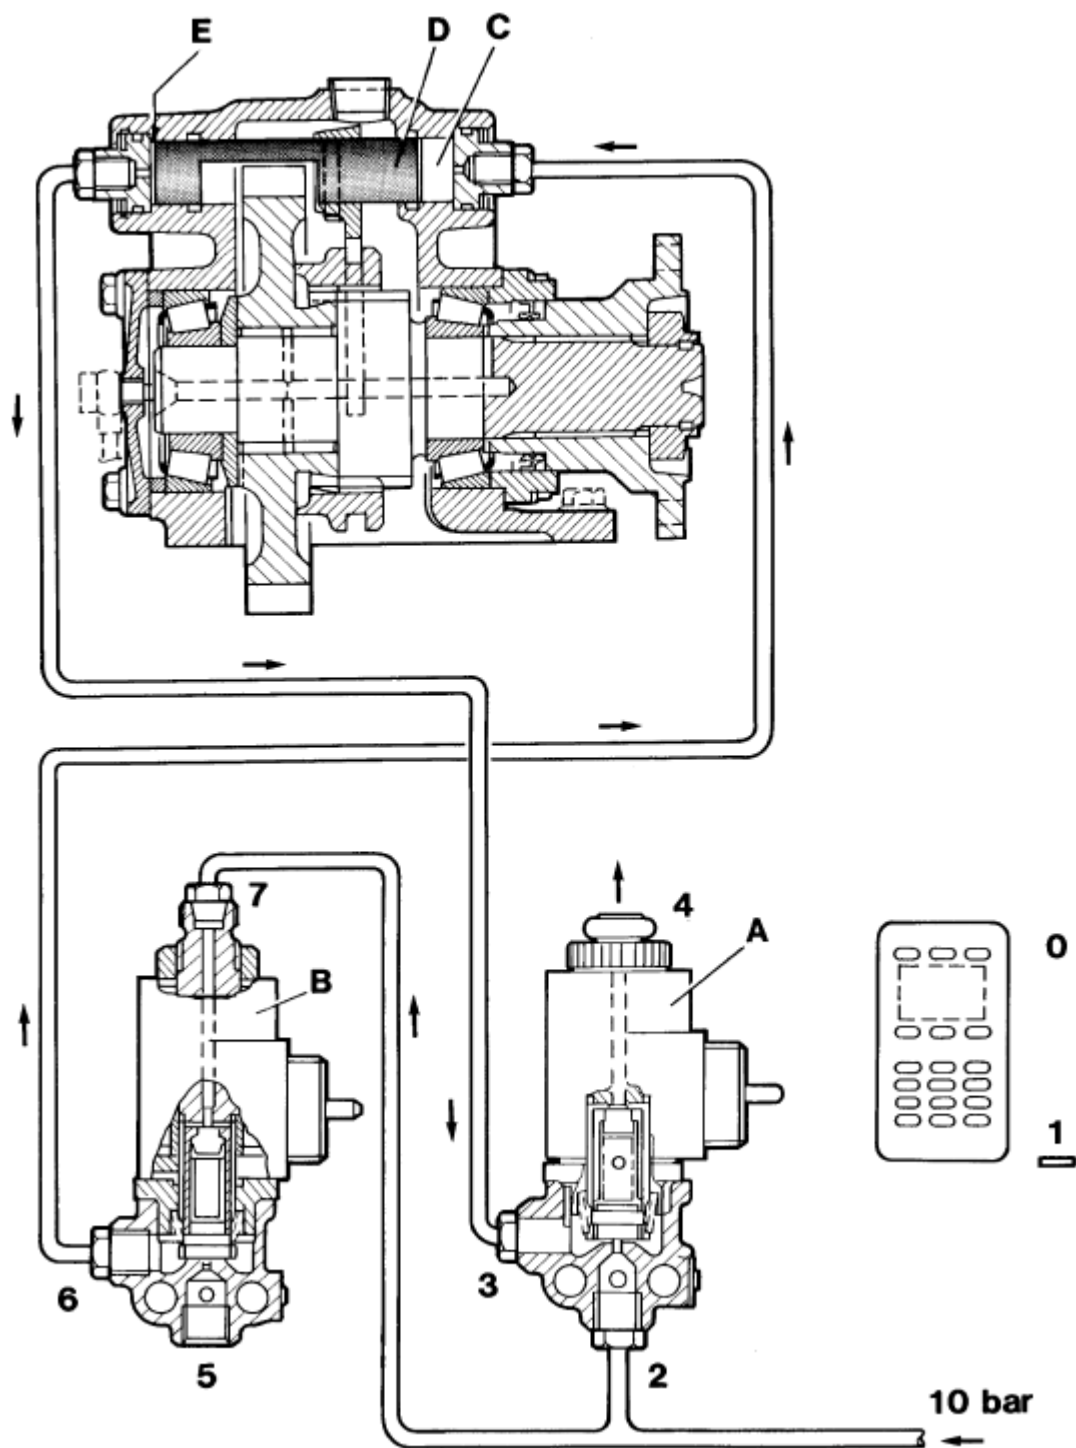

40787

Operation (power take off engaged)

A = Electro-pneumatic valve N.A. (usually closed) with switch disengaged

B = Electro-pneumatic valve N.C. (usually open) with switch disengaged

With the switch in position 1 (engaged) the electromagnets of the valves A - B are excited and therefore the circuit of the valve A open and open that of valve B.

The air taken in through link (7) enters valve B leaves by link (6) and passes through the pipes to chamber C, moving the control rod with fork D in power take off position engaged.

At the same time the air in chamber E passes through the piping to the link (3) into valve A and passes into the air by link (4).

Aquila Trucks Centres


534501 REMOVING - REFITTING TOTAL POWER TAKE-OFF ASSEMBLY

Removal

This operation comprises:

- Removing - refitting propeller shafts (see relevant section 505620).
- Removing - refitting gearbox (see relevant section 530210).
- Removing - refitting clutch (see relevant section 505210).

Figure 7

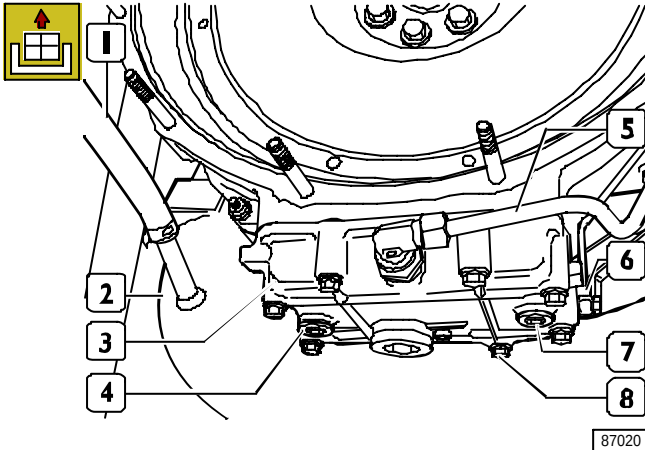


Remove the plugs (4 and 7) and drain the oil in a suitable container.

From the lower cover (3) disconnect the oil pipes (5 and 6). Remove the screws (8) and the lower cover (3).

If fitted, slacken the clamp and disconnect the oil vapour pipes (1) from the exhaust pipe (2).

Remove the chassis exhaust pipe fasteners (2).

Figure 8

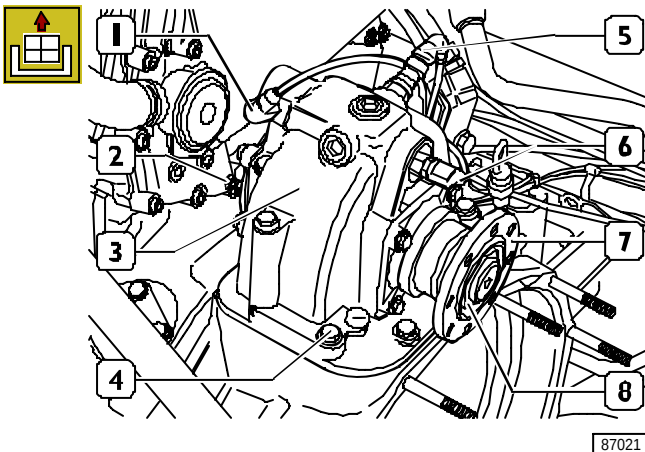

Remove the bolts and disconnect the flange drive shaft (7).


From the power take off assembly (3):

- Disconnect the electrical connection (5);
- disconnect the air pipes (1 and 6);
- remove the pipe union (2) and the oil pipe.

NOTE If the power take off assembly is to be overhauled (3). Slacken the nut (8) fastening the drive output flange (7).


Remove the screws (4) and the power take off assembly (3).

Figure 9

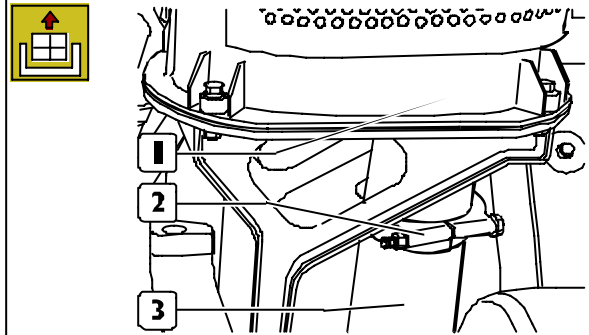

Slacken the clamp (2) fastening the exhaust pipe (3) to the muffler (1).


Figure 10

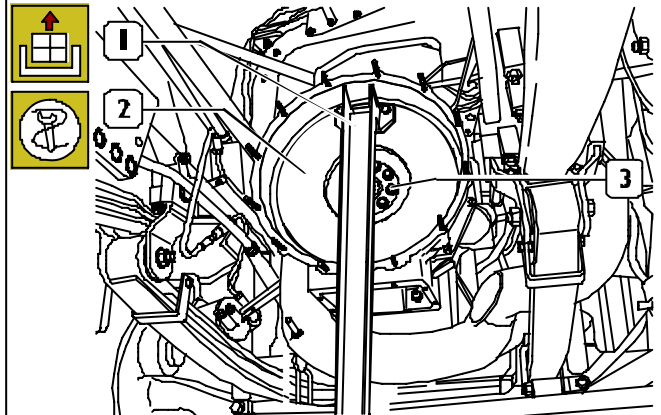

Place bracket 99360551 (1) on the hydraulic lift and fit the bracket on the clutch coupling flywheel (2).

Remove the screws (3) and disconnect the flywheel (2) from the power take off shaft.

Figure 11

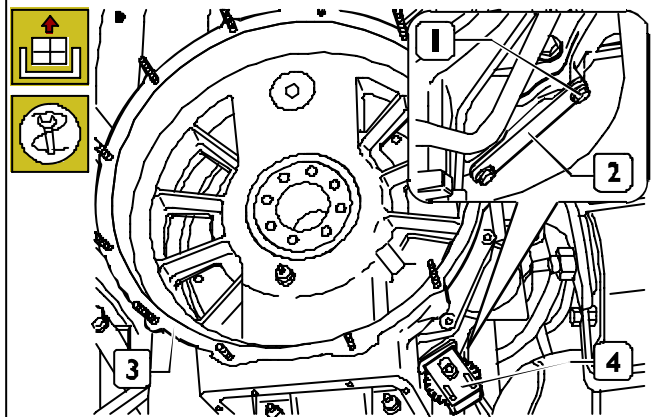


Remove the screws (1) and the inspection cover (2) from the gear case (3).

Apply the flywheel rotation tool 99360321 (4) on the gear case (3). For engines F3B, this tool shall be completed with spacer 99360325.

Aquila Trucks Centres

Figure 12

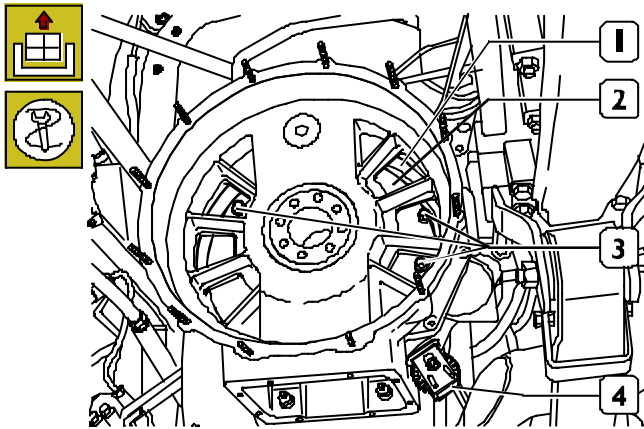


87025

Remove the screws (2) fastening the joint (3) to the engine flywheel (1).

NOTE To gain access of the remaining screws (2) which are not visible, turn the engine flywheel with tool 99360321 (4).


Figure 13

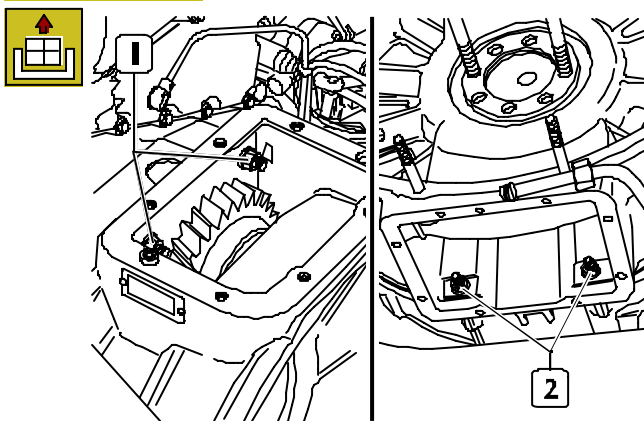

87026

From the inside of the power take off case, remove the top fastening nuts (1) and the bottom fastening nuts (2).

Figure 14

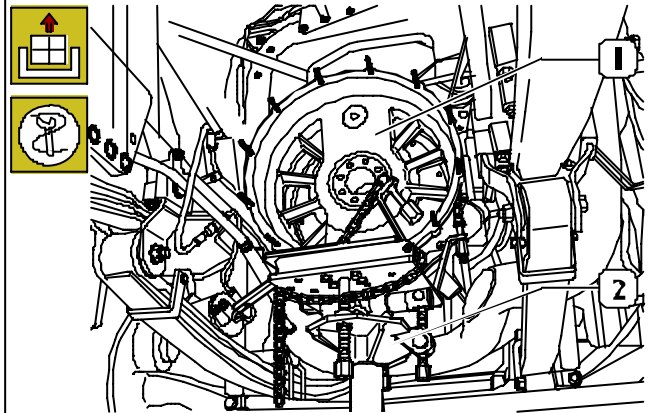

87027

Place a hydraulic lift fitted with support 99370629 (2) under the power take off case (1) and sling it with the appropriate chain (1).

Remove the nuts and the power take off case from the engine.

Refitting



To refit the power take off assembly, reverse the removal procedure and observe the following precautions:



- lubricate the connecting shaft tang with MOLYCOTE HSC grease;



- apply LOCTITE 510 on the power take off assembly surface and the bottom cover;

- apply LOCTITE 242E oil on the screw or the contact plug threading;

- tighten the screws/nuts to the prescribed torque;

NOTE For angle tightening of the clutch coupling flywheel fastening screws use tool 99395216.



- the drive output flange fastening nut shall be tightened (if it was not carried out during overhaul) to torque 465 Nm (46,5 kgm) after fitting the power take off assembly ;




- fill the assembly with the lubrication oil of the recommended type and in the prescribed quantity.

Aquila Trucks Centres


OVERHAULING**Disassembling the main box**

Figure 15

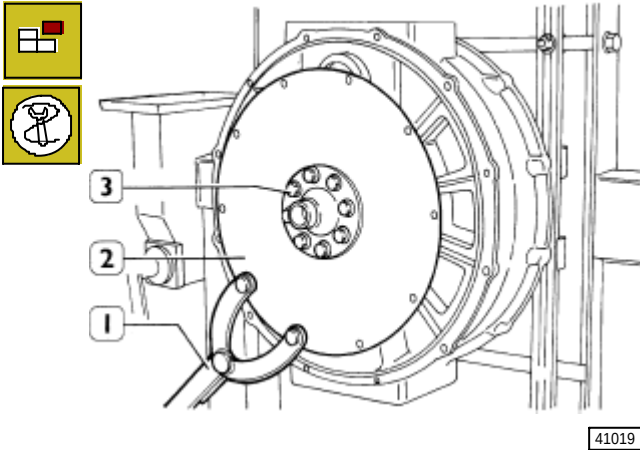


Position the whole assembly on the rotary stand 99322205. Lock the rotation of the laminar coupling (2) with the reaction lever 99370317 (1) and using a suitable wrench unscrew the retaining screws (3). Remove the laminar coupling and the flange.

Figure 16

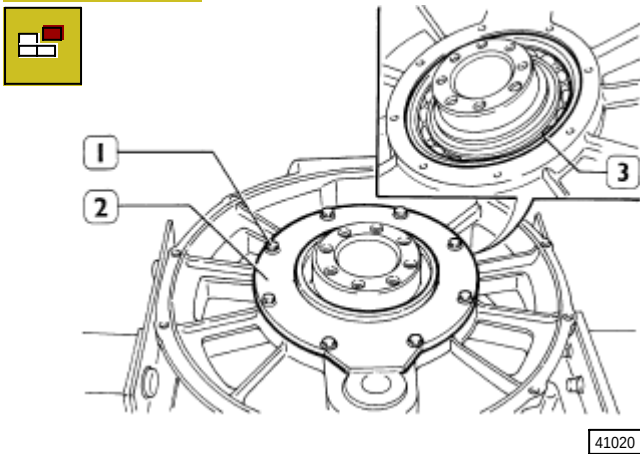

Unscrew the screws (1), take off the cover (2) together with the seal and recover the adjustment ring (3).


Figure 17

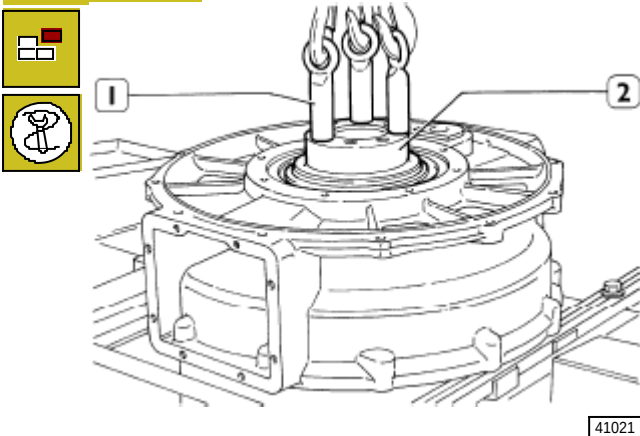

Using the eyebolt 993605003 (1) and lift, remove the shaft with the gear wheel (2).

534510 Disassembling the drive assembly


Figure 18

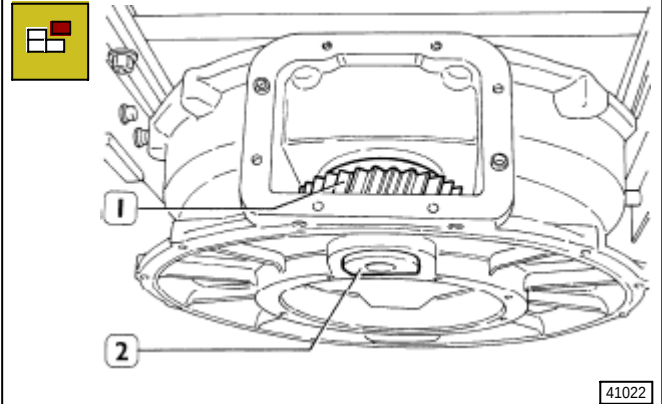

Using an appropriate drift, drive out the shaft (2) and extract the middle gear (1). Take the seal out of the box.


Disassembling bearing for shaft with gear wheel

Figure 19

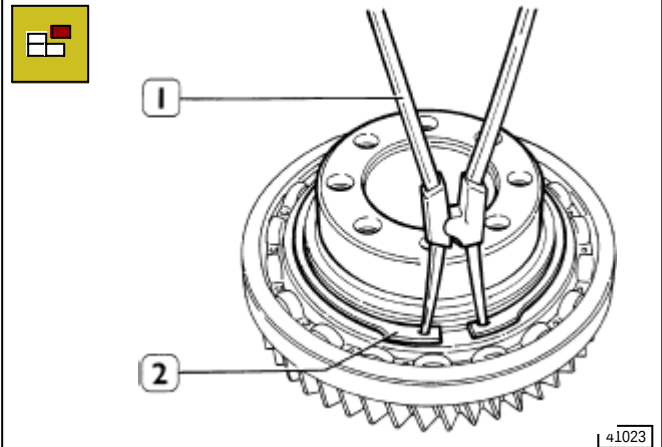

Using suitable pliers (1), remove the seeger ring (2).


Figure 20

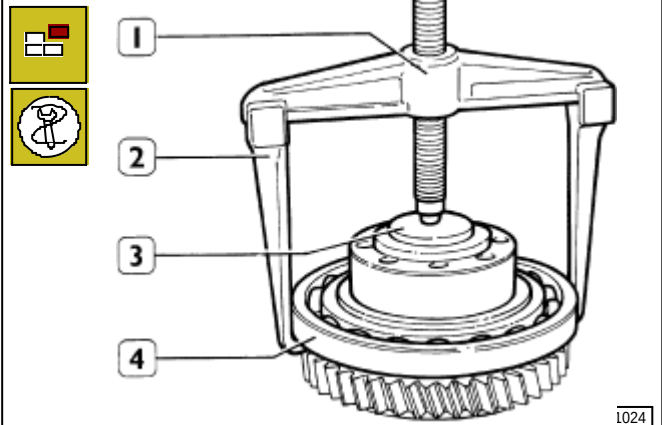

Extract the ball bearing (4) with the extractor 99341003 (1), grips 99341009 (2) and reaction block 99345049 (3).


Aquila Trucks Centres

Figure 21

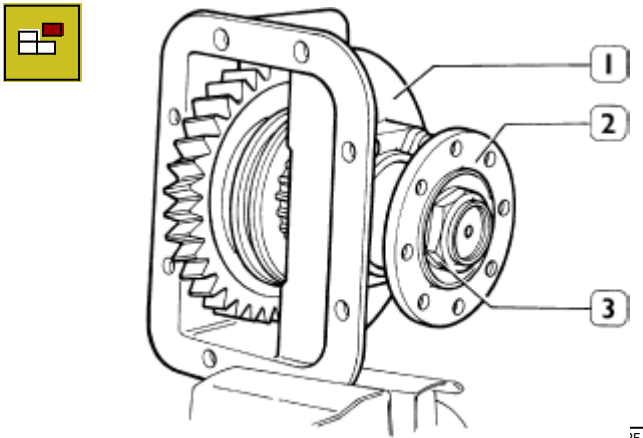


Put the assembly in a vice, unscrew the nut (3), extract the flange (2), unscrew the screws and remove the cover (1).

Figure 22

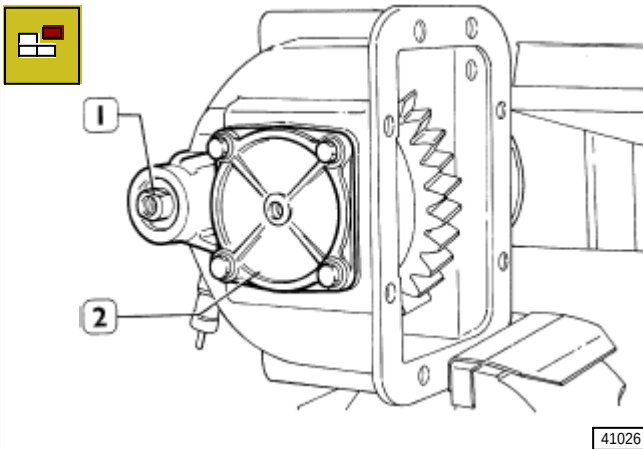


Unscrew the screws and take off the cover (2); recover the adjustment ring.
Take off the split ring and extract the fitting (1); unscrew the electric transmitter.

Figure 23

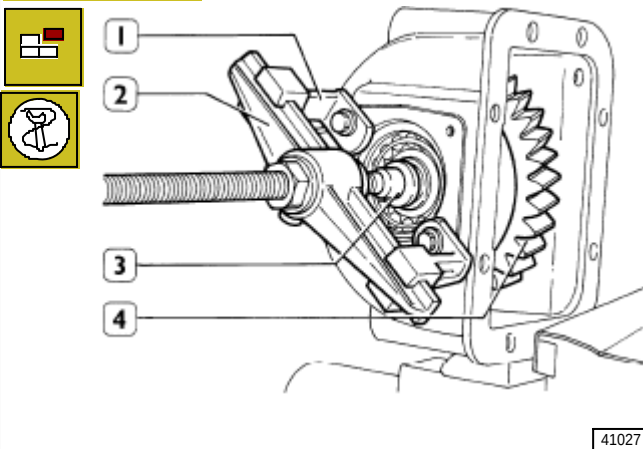


Apply the extractor 99341002 (2) with the grips 99341016 (1) and extract the toothed output shaft (3).
Take out the gear (4).

Figure 24

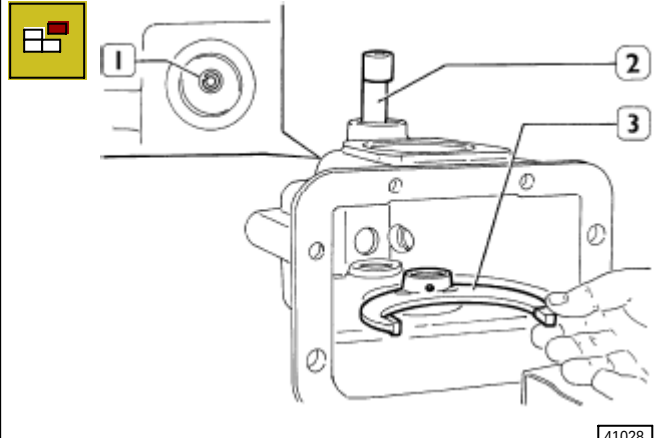

Drive out the spring pin (1), take out the shaft (2) and the drive fork (3).


Figure 25

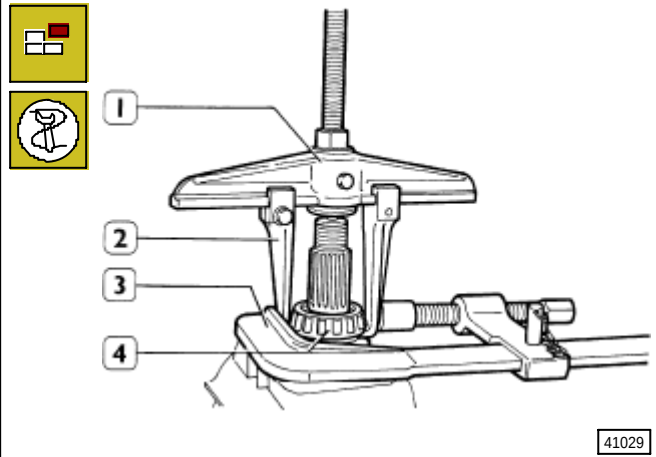

Put the toothed output shaft in a vice. Using the extractor 993441002 (1), grips 99341009 (2) and clamp 99341015 (3), extract the tapered roller bearing (4).

534532 Disassembling the oil pump

Figure 26

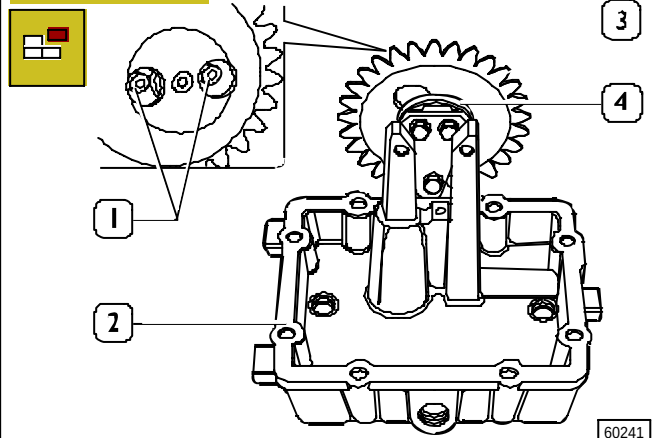


Extract the shaft together with the gear (3) from the oil pump (4). Unscrew the screws (1) securing the oil pump (4) and detach it from the cover (2).

Aquila Trucks Centres

Assembling the oil pump

Figure 27

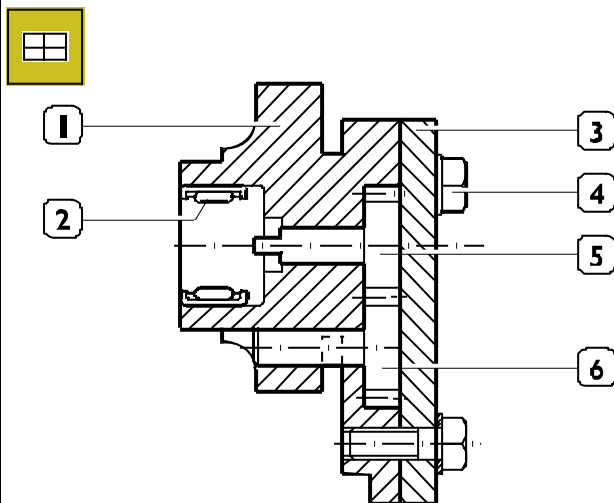

71567

Take out the fixing screws (4) and remove the cover (3) from the pump casing (1).
Extract the gear shafts (5 and 6) from the pump casing (1).
Using a suitable extractor, remove the roller bearing (2) from the pump casing (1).

Cleaning and checking parts

After completing removal, immerse all the parts except for the bearings in a wash tank containing a solution of water and soda heated to a temperature of 80 to 85°C until the lubricant residues have dissolved.

Using a wire brush and scraper, get rid of any deposits on the parts, remains of gaskets and traces of Loctite and sealant from the mating surfaces, taking care not to damage them.

Wash again and dry the parts with compressed air.

Using a benchtop electric cleaning machine with wire brushes, remove any remains of Loctite and sealant from the threads of the screws.

To clean the bearings thoroughly, you need to put them in a bath of kerosene and, with the aid of a brush, eliminate all traces of lubricant.

Dry them with compressed air, bearing in mind that the jet of air must not cause the bearings to turn.


Then lubricate the bearings with oil of the same type used for the gears.

Keeping the bearings pressed down by hand while turning them slightly in both directions you should feel no roughness nor hear any noise as they move.

Carefully check that the rollers and cages, as well as the external and internal rolling races, are not worn.

Check all the parts to decide whether to reuse them or replace them.


Figure 28

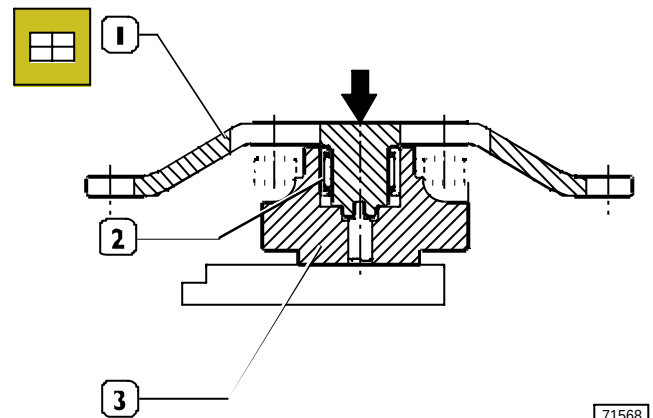

71568

Key the roller bearing (2) onto the driven gear shaft (1).
Apply a press on the gear (1) so as to fit the roller bearing (2) in the pump casing (3).

Figure 29

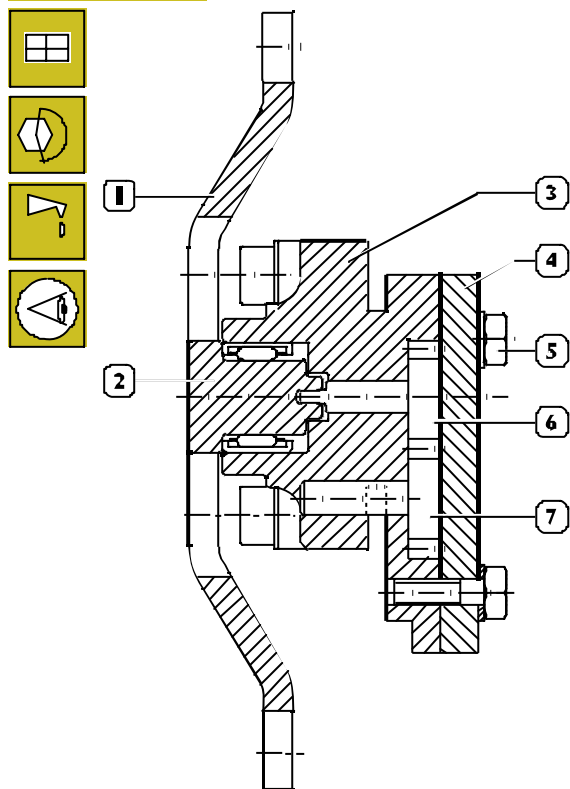

71569

Mount the gear (6) in the pump casing so that the end of the shaft goes into the corresponding compartment of the shaft (2) of the driven gear (1) and the gear (7).


NOTE The gears need to be lubricated beforehand.

Put the cover (4) on the pump casing (3). Screw down the fixing screws (5) and tighten them to the required torque.

NOTE When handling the oil pump, take care the shaft (2) of the driven gear does not come out of the gear shaft (6).

Aquila Trucks Centres

Figure 30

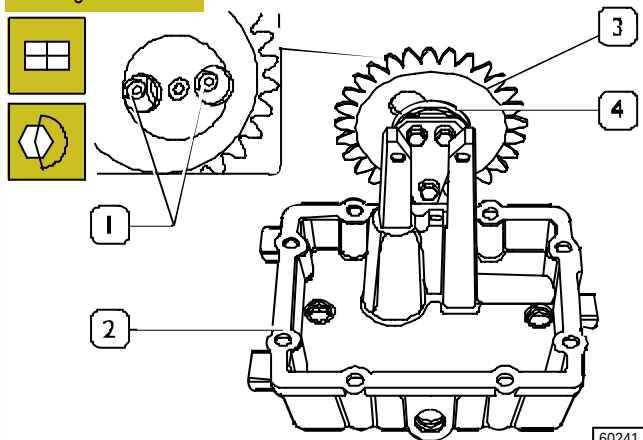


Put the oil pump (4) on the bottom cover (2) and secure it there with the screws (1), tightening them to the required torque.

NOTE When handling bottom cover (2), take care the shaft of the driven gear (3) does not come out of the oil pump gear shaft.


Assembling the bearing for shaft with gear wheel

Figure 31

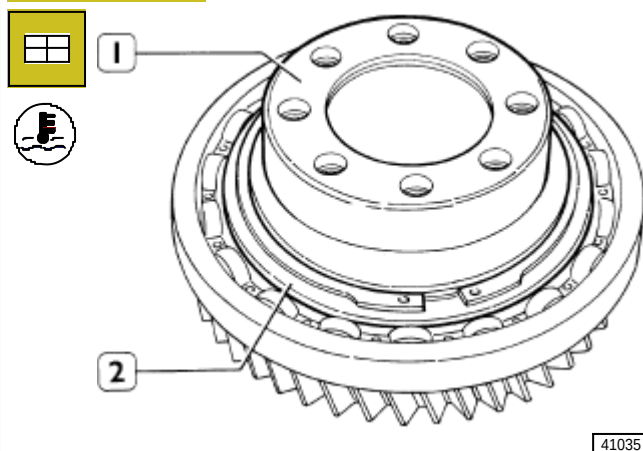

Heat the internal ring of the bearing (2) to approx. 80°C and key it on the shaft (1).
Leave it to cool to pass on to the next step.


Figure 32

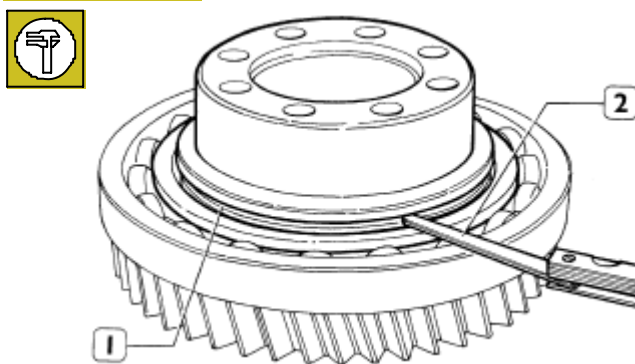

Using a feeler gauge (2), measure the gap (1) between the bearing and the seat of the seeger ring. Then select the seeger ring that gives the less clearance possible.


Fitting drive assembly

Figure 33

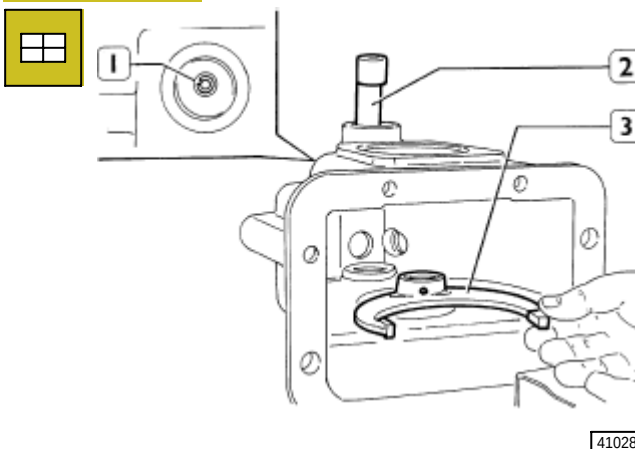

Put the box in a vice.
Fit on the fork (3), key on the shaft (2) and drive on the spring pin (1).


Figure 34

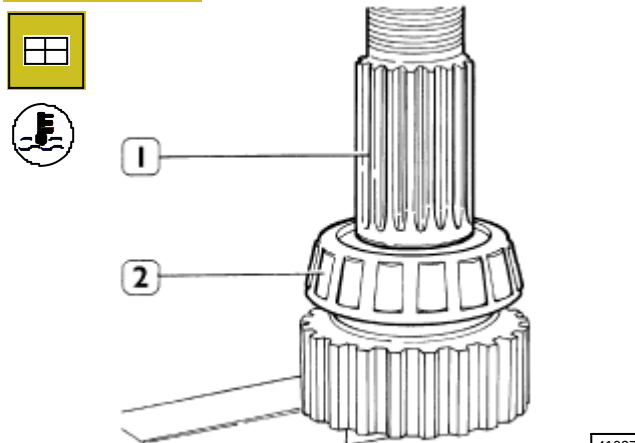

Heat the internal ring of the bearing (2) to approx. 80°C and key it on the toothed shaft (1).


Aquila Trucks Centres

Figure 35

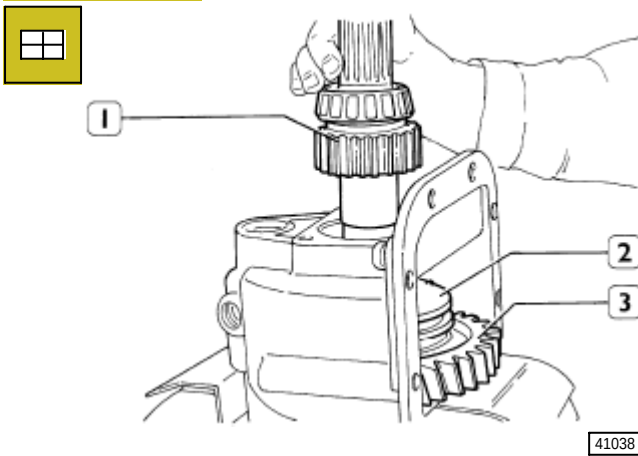


Put the gear (3) together with the sliding sleeve (2) in the box; insert the toothed shaft (1).

Figure 36

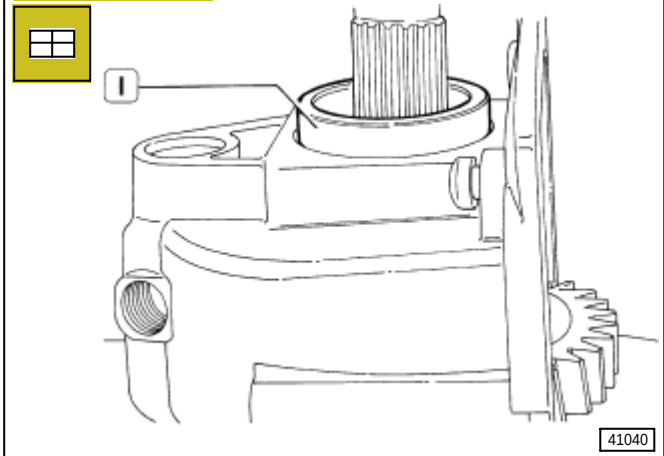

Fit on the external ring (1) for the bearing.

Figure 37

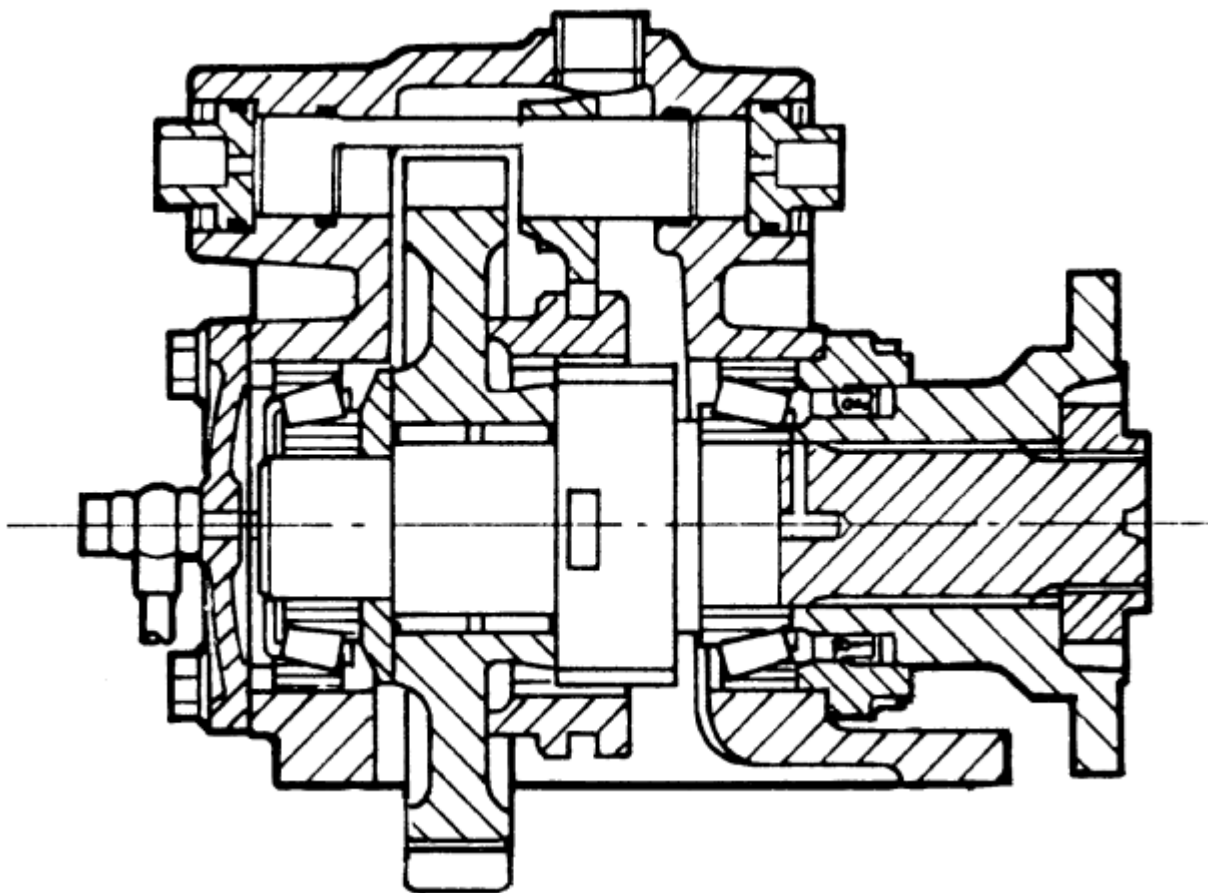


SECTION OF DRIVE ASSEMBLY

Aquila Trucks Centres

Adjusting drive output shaft tapered bearings

Figure 38

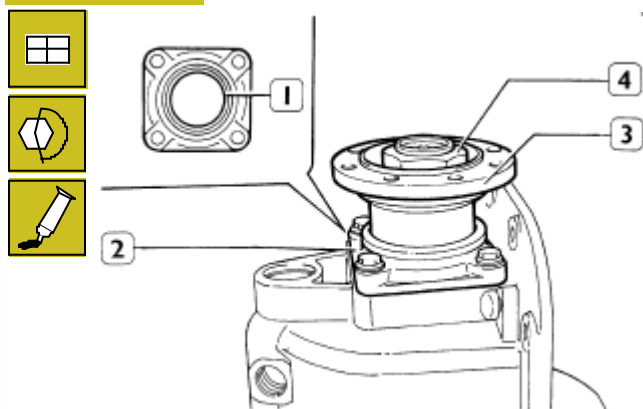


41041

Using an appropriate drift, fit the seal (1) in the cover (2). Apply LOCTITE 410 on the supporting surface. Mount the cover (2) and tighten the screws to a torque of 18 Nm. Fit on the flange (3) and screw down the nut (4) by hand.

NOTE Tightening the nut (4) to a torque of 380 Nm (38 kgm) has to be done on the vehicle, after fitting the drive assembly on the main box.


Figure 39

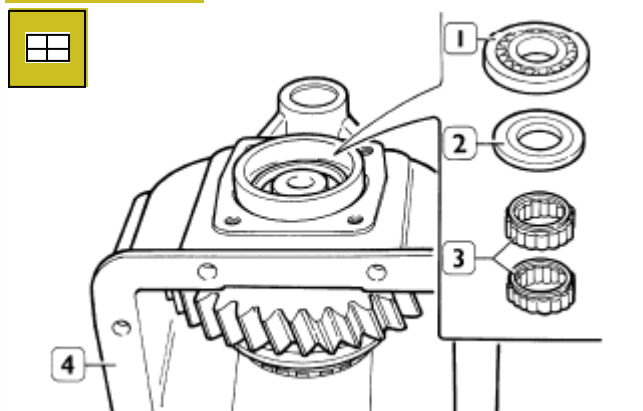

41042

Take the box (4) out of the vice and turn it over. Fit the roller bearings (3), thrust washer (2) and tapered roller bearing (1) on the shaft.

Figure 40

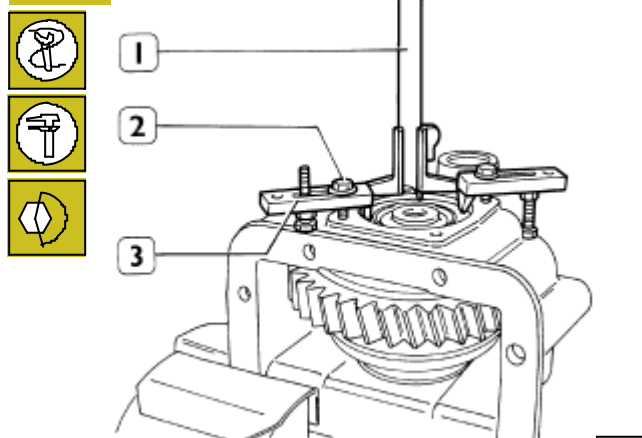

41043


Fit the plates 99363241 (3) on the outer ring of the bearing. Tighten the screws (2) to a torque of 18 Nm (1.8 kgm), corresponding to an axial load of approx. 250 kg, and turn the output shaft.

Using a feeler gauge (1), measure the distance between the supporting surface and the outer ring of the bearing. The measurement will correspond to the thickness of the adjustment ring.

NOTE The thickness of the adjustment ring will have to be selected by rounding off.

For example, measurement 6 to 6.04 mm, select ring of thickness 6 mm.
measurement 6.05 to 6.09, select ring of thickness 6.1 mm.

Figure 41

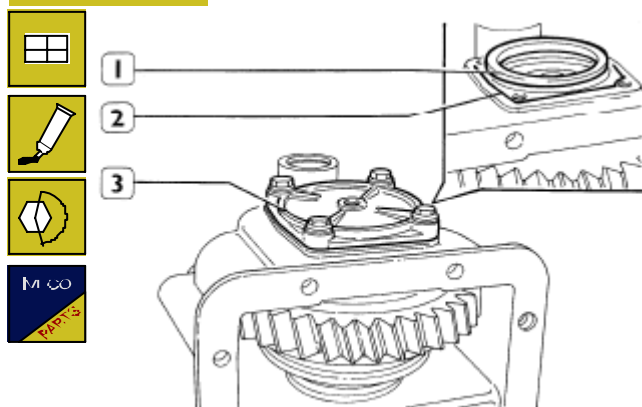

41044


Mount the adjustment ring (1). Apply LOCTITE 510 sealant on the supporting surface (2). Mount the cover (3) and lock the screws to a torque of 18 Nm (1.8 kgm).

Replace the seals on the fittings (2-12, Figure 4) then mount them and position the split rings (1-13, Figure 4). Screw on the transmitter (7, Figure 4).

Aquila Trucks Centres

Assembling the main housing

Figure 42

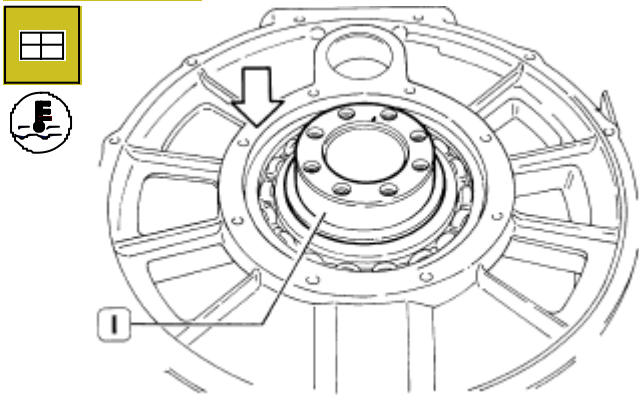


41045

Slightly heat the seat (1) for the ball bearing on the box and mount the shaft (1) with the gear wheel together with the bearing.

Adjusting ball bearing


Figure 43

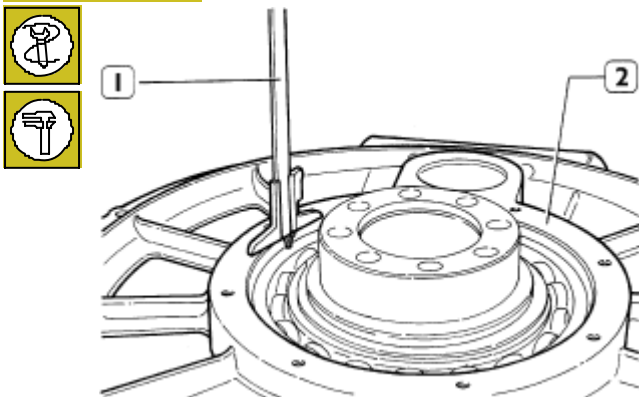

41046


Measure the distance (A, Figure 45) on the main box (2) with a feeler gauge (1).

Figure 44

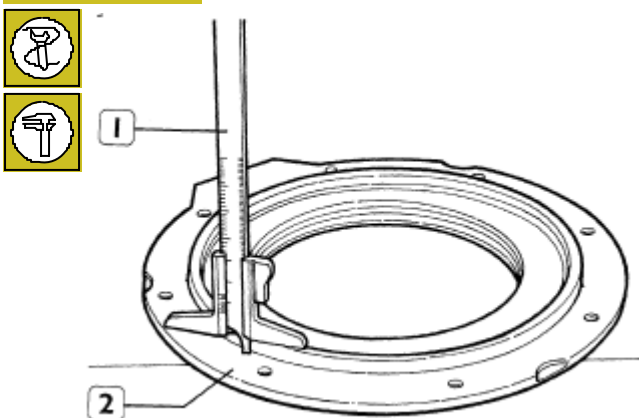

Measure the distance (B, Figure 45) on the cover (2) for the bearing with a feeler gauge (1).

Figure 45

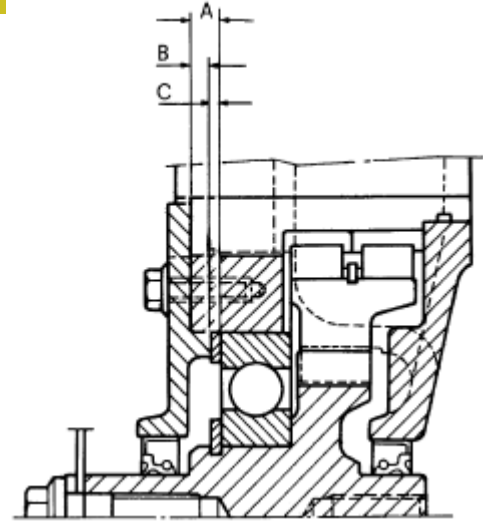

41048

PARTIAL SECTION OF BEARING AND SHAFT WITH GEAR WHEEL


The value "C" of the adjustment ring is given by the following formula: $A - B = C$

NOTE If the value of "C" is the same as the nominal thickness of the adjustment ring (see table on page 4), fit the relevant ring.

Whereas, if "C" is different, fit the adjustment ring for the smaller value.

For example, "C" = 4.14 to 4.11 mm, fit the ring of 4.1 mm.

Figure 46

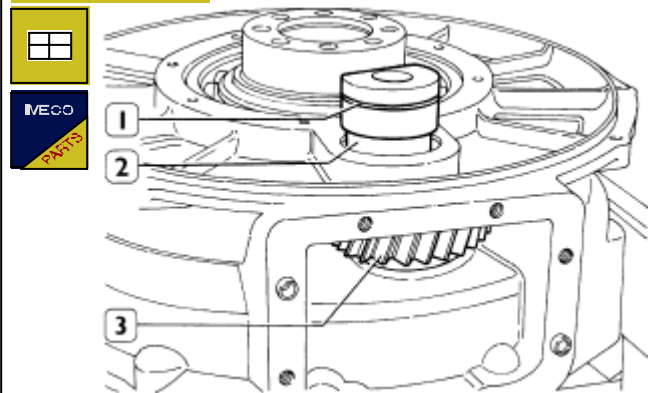


41049

Fit the middle gear (3) in the box, drive in (2) after replacing the seals (1).

Aquila Trucks Centres

Figure 47

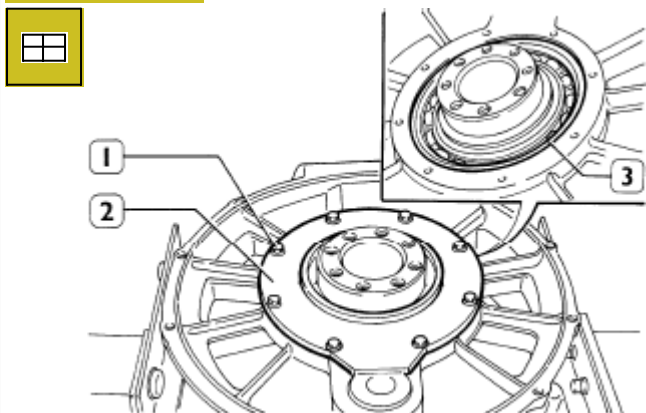


41020

Fit the setting ring (3), apply LOCTITE 510 sealant to the contact surface; fit the cover (2) complete with choke ring and tighten the screws (1) to torque 22 Nm (2.2 kg).

NOTE To fit the seal ring into cover (2) and on the opposite side of the box, use tool SP 2481 illustrated on page 8.

Figure 48

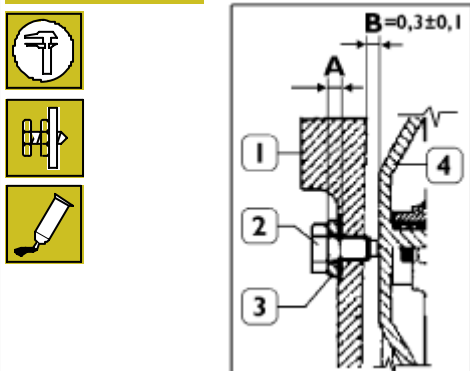

If the shoulder screw (2) of the oil pump gear (4) has been removed from the case (1), measure the adjusting washer thickness (3) as follows.

Temporarily fit the bottom cover with the oil pump.

Screw down the screw (2) without the washer (3) in contact with the driven gear (4).

Using a feeler gauge, measure the distance between the underside of the head of the screw (2) and the box (1), distance A.

Take out the screw (2), apply LOCTITE 242E on its thread and screw it back on, placing a washer in between with a thickness of:

$$S = A + B$$

where A is the distance measured

$$B = 0.3 \pm 0.1$$


corresponding to the distance between the end of the screw (2) and the driven gear (4).

Tighten the screw (2) to the required torque.

NOTE Screw (2) has a left-hand thread.

Remove again the bottom cover with the oil pump.


Figure 49

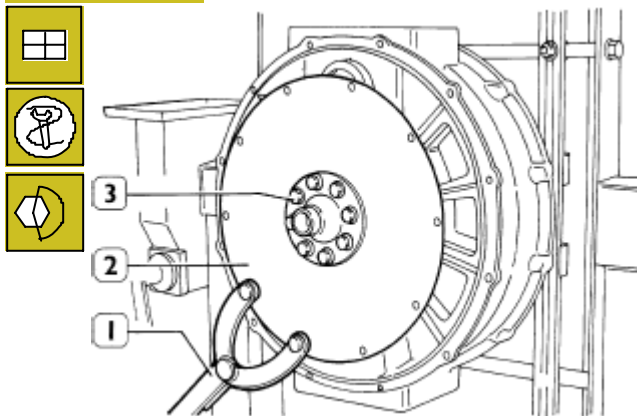

41019

Fit the joint (2) with the flange and clamp it with the reaction lever 99370317 (1); fasten the screws (3) to torque 95 Nm (9.5 Kgm) 1st step.

Figure 50

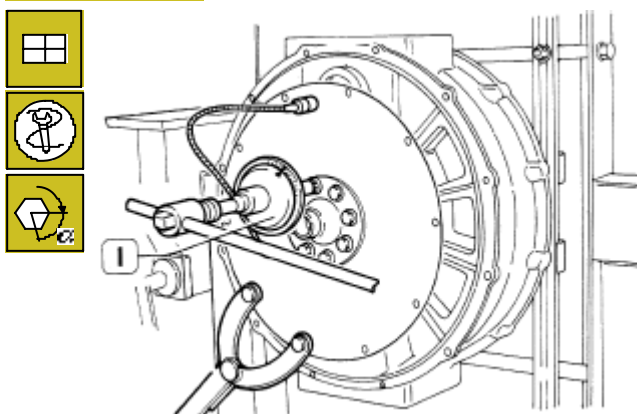

41050

Fit tool 99395216 (1) to a box spanner and tighten the screws by a further 60°, 2nd stage.

Aquila Trucks Centres

SECTION 6

5054 Transfer box TC 1800-TC 2200

	Page
DESCRIPTION OF TRANSFER BOX ASSEMBLY TC 1800 - TC 2200	3
MAIN DATA	3
VERSION WITH P.T.O. (OPT. 391-392)	5
P.T.O. SPECIFICATIONS	5
USING THE TRANSFER BOX	6
- On-road driving (normal ratio)	6
- Diagram of drive transmission with normal ratio	7
- Off-road driving (reduced ratio)	8
- Center differential locking	9
- Version with P.T.O.	10
TORQUE TRANSFER	13
- Transfer ratio calculation	13
- Control locking divider and differential gears . .	14
TIGHTENING TORQUES	16
TOOLS	20
LUBRICATION	24
TRANSFER BOX REMOVING AND REFITTING	25
- Removal	25
- Refitting	25
DISASSEMBLING THE TRANSFER BOX	25
CLEANING AND CHECKING PARTS	29
REPLACING OUTPUT SHAFT COVER SEALS .	29

Aquila Trucks Centres

Page

REPLACING INPUT SHAFT COVER SEAL	29
INPUT SHAFT	30
- Removal	30
- Fitting	30
EPICYCLIC TORQUE TRANSFER UNIT	31
- Removal	31
- Fitting	32
COUNTERSHAFT	32
- Removal	32
- Fitting	32
ASSEMBLING THE TRANSFER BOX	33
ADJUSTING THE BEARING PRE-LOAD	36
- Input shaft	36
- Countershaft	36
- Output shaft	37
COMPLETING ASSEMBLY	38
- Adjusting push-rod switch signalling interaxle locking and P.T.O. engagement (if applicable)	39
- Adjusting pulse transmitter	39
- Replenishing oil	39

Aquila Trucks Centres

DESCRIPTION OF TRANSFER BOX ASSEMBLY TC 1800 - TC 2200

The transfer box is located between the gearbox and the middle axle.

It is composed of a set of constant mesh helical spur gears.

These gears are mounted on three shafts: input shaft, countershaft and secondary output shaft.

The sliding toothed sleeve for coupling normal gears (on road) and reduced gears (off road) is mounted on the input shaft.

 
 
 
 
The interaxle differential gear that provides independent speed transmission between the front and rear axles is mounted on the output shaft.

In addition, there is the differential locking device.

The transfer box is made in two versions:


- For vehicles with two axles (4x4) and four axles (8x8) with a division of 1:2:2.
- For vehicles with three axles (6x6) with a division of 1:4:0.

MAIN DATA

		TC 1800	TC 2200
	Gears	Constant mesh helical spur gears	
	Transmission ratios: normal (on road) reduced (off road)	1 : 1 1 : 1.6	
	Maximum input torque Nm	18,000	22,000
	4x4 vehicles Torque reduction 6x6 vehicles	1 : 2.2 1 : 4	
	Bearing pre-load for: input shaft countershaft output shaft	0.05 ÷ 0.10 mm	
	Bearing pre-load adjustment	with adjustment rings	
	Adjustment ring thickness input shaft mm countershaft .mm output shaft mm	1-1.1-1.2-1.3-1.4-1.5-1.6-1.7-1.8-1.9 1-1.6-1.7-1.8-1.9-2.0-2.1-2.2-2.3-2.4-2.5 1-1.1-1.2-1.3-1.4-1.5-1.6-1.7-1.8-1.9-2	
	Thickness of adjustment rings for pulse transmitter mm	1 - 1.5	
	Type of oil - for arctic climate only Quantity litres	TUTELA ZC 90 TUTELA GI/A 6.5	
	Weight of reduction gear - divider kg	265	-

Aquila Trucks Centres

Figure 1

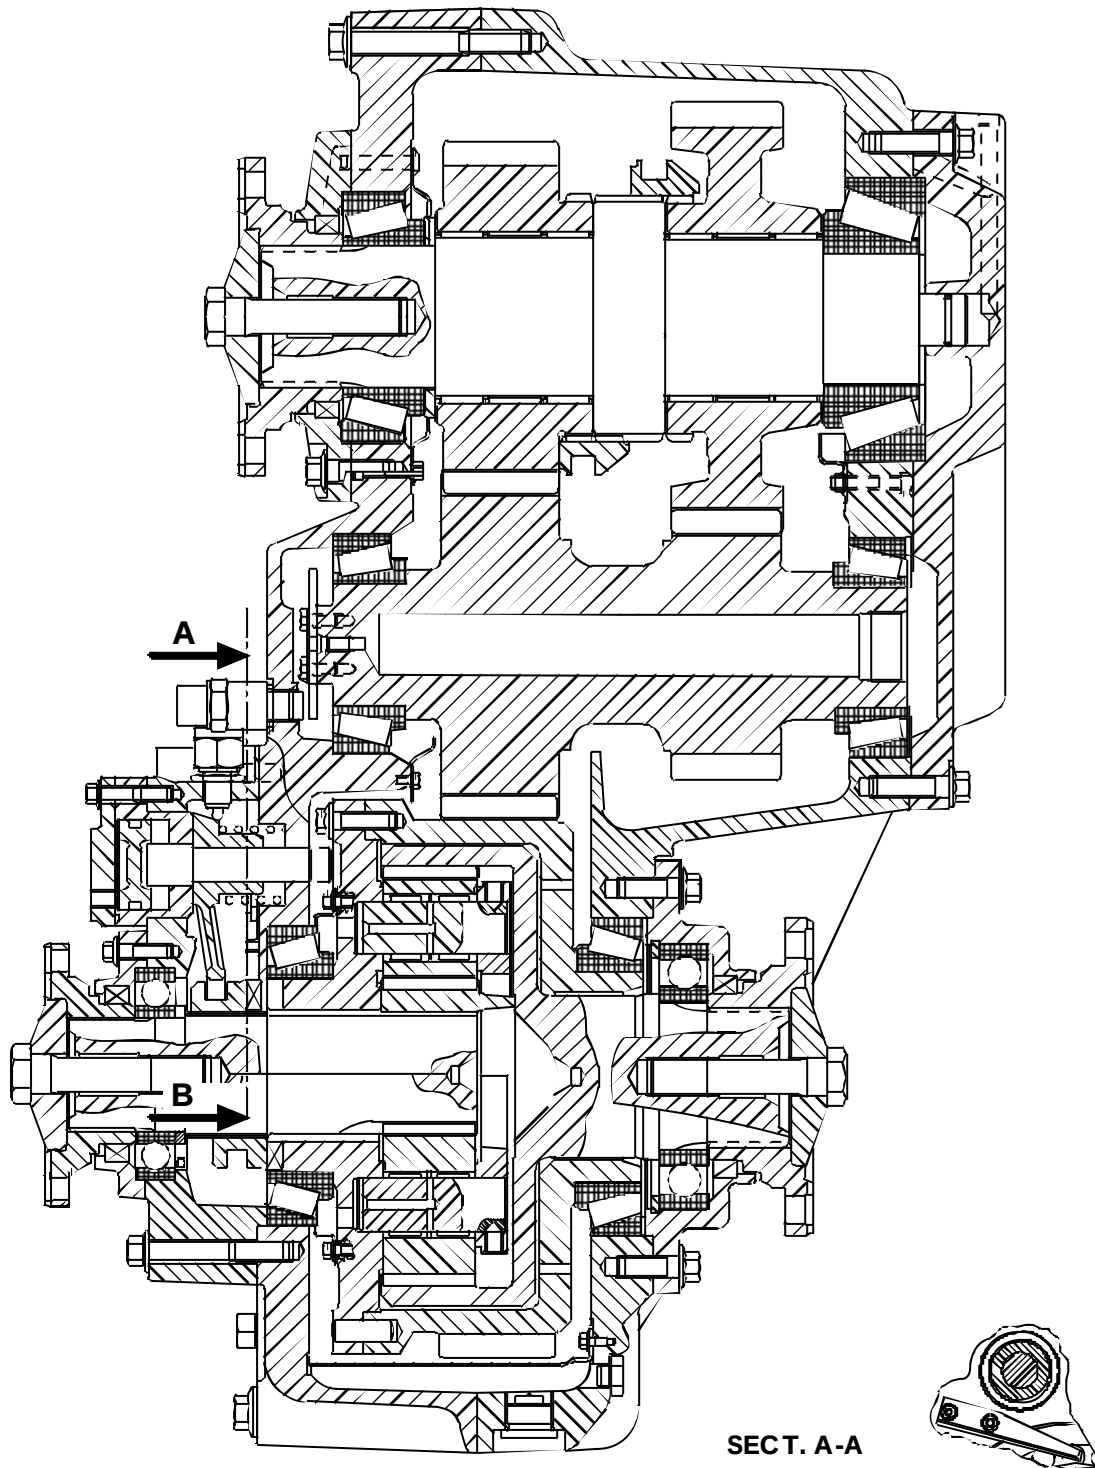


LONGITUDINAL SECTION OF TRANSFER BOX

52634

Aquila Trucks Centres

VERSION WITH P.T.O. (OPT. 391-392)

Figure 2

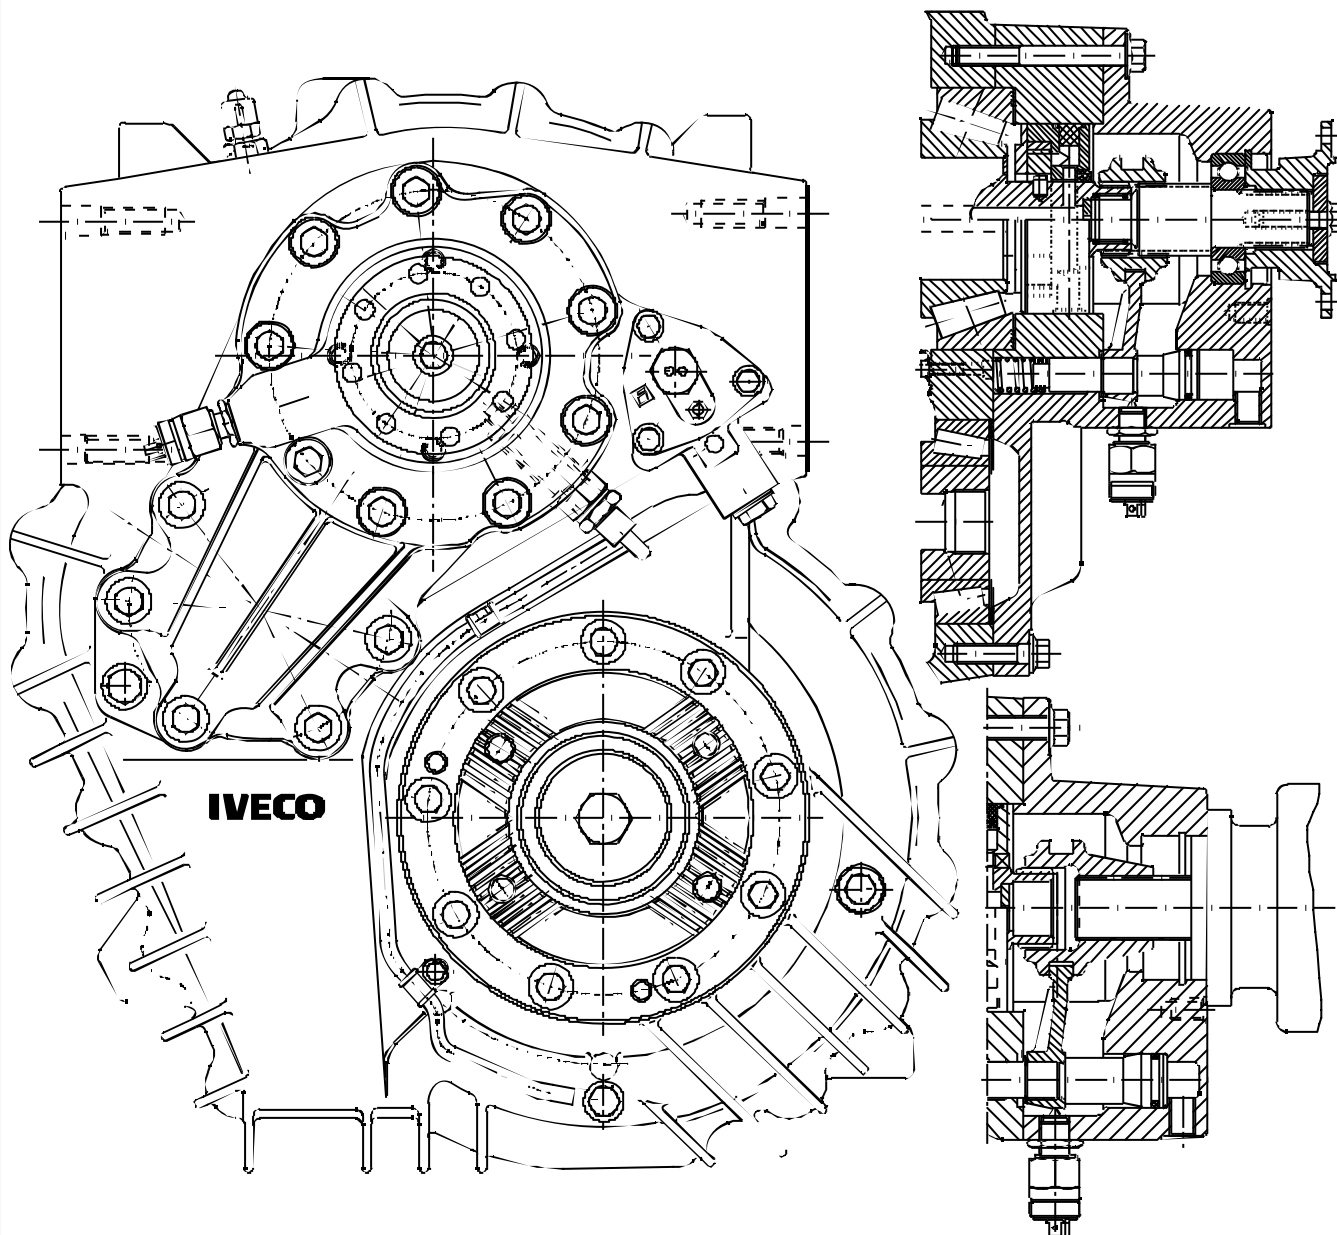

62124


P.T.O. SPECIFICATIONS

Max. torque available	1,180 Nm	
Ratio	1 : 1	
Direction of rotation	same as engine	
P.T.O. coupling control	Pneumatic	
Connection version	Flange	Pump

Aquila Trucks Centres

USING THE TRANSFER BOX
On-road driving (normal ratio)

Figure 3

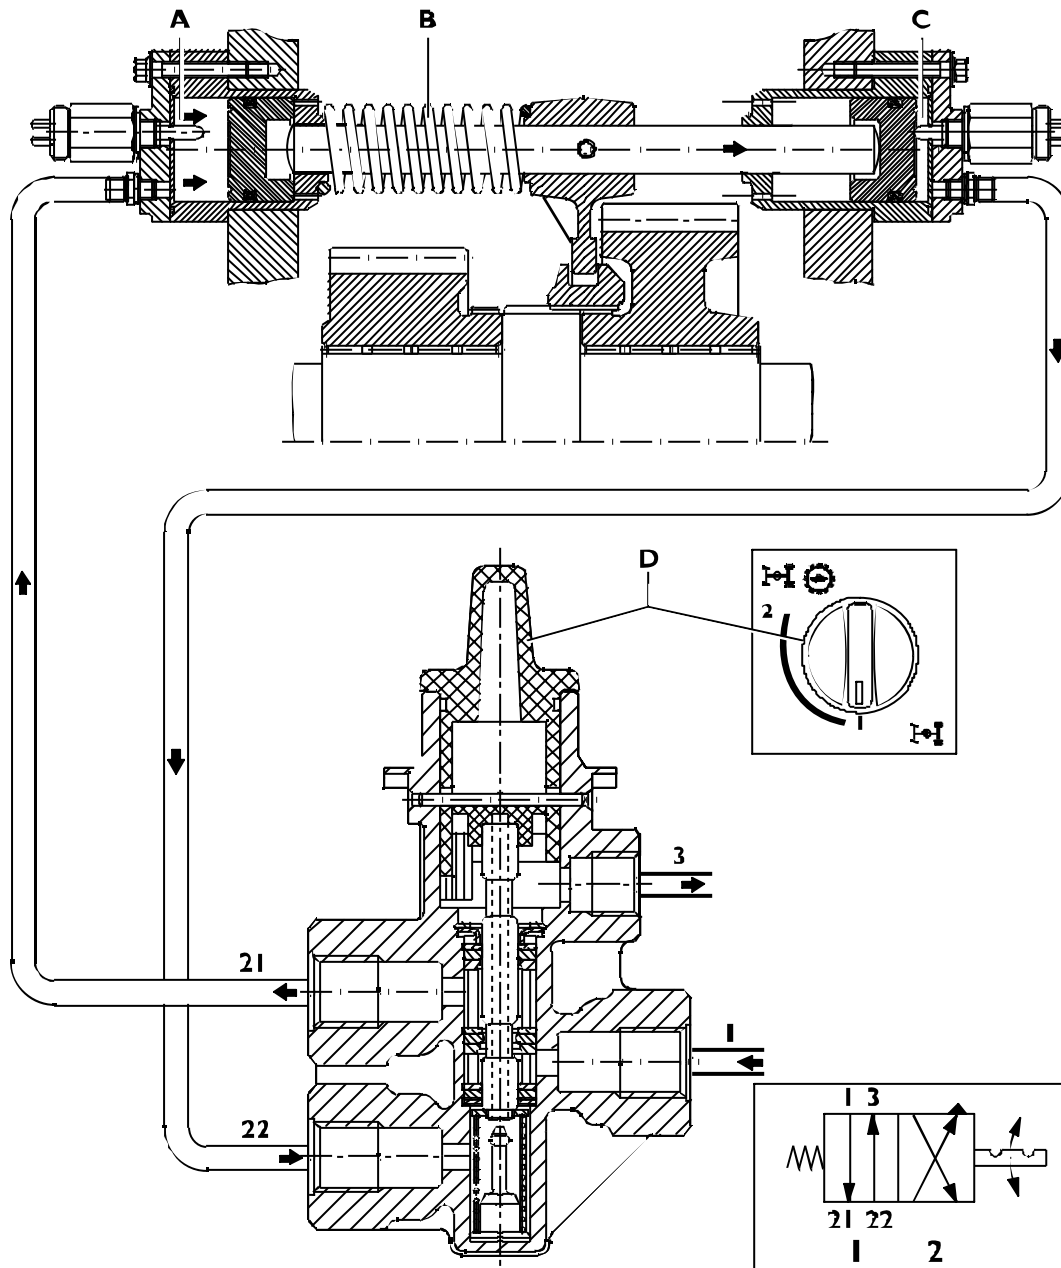

119253

With the control knob D on 1, the incoming air at the fitting 1 passes through the distributor and comes out of the fitting 21 and, going to supply the chamber A, causes the piston to move to its limit stop.

Control knob positions:

- position 1 = on-road driving.
- position 2 = off-road driving.

User instructions:

- release the throttle.
- turn the knob onto 1;
- never press the clutch pedal while operating the reduction gear control.


The spring B keeps the fork and the sleeve in the on-road ratio position.

The air in the chamber C gets discharged into the atmosphere through the fitting 3.

Aquila Trucks Centres

Diagram of drive transmission with normal ratio

Figure 4

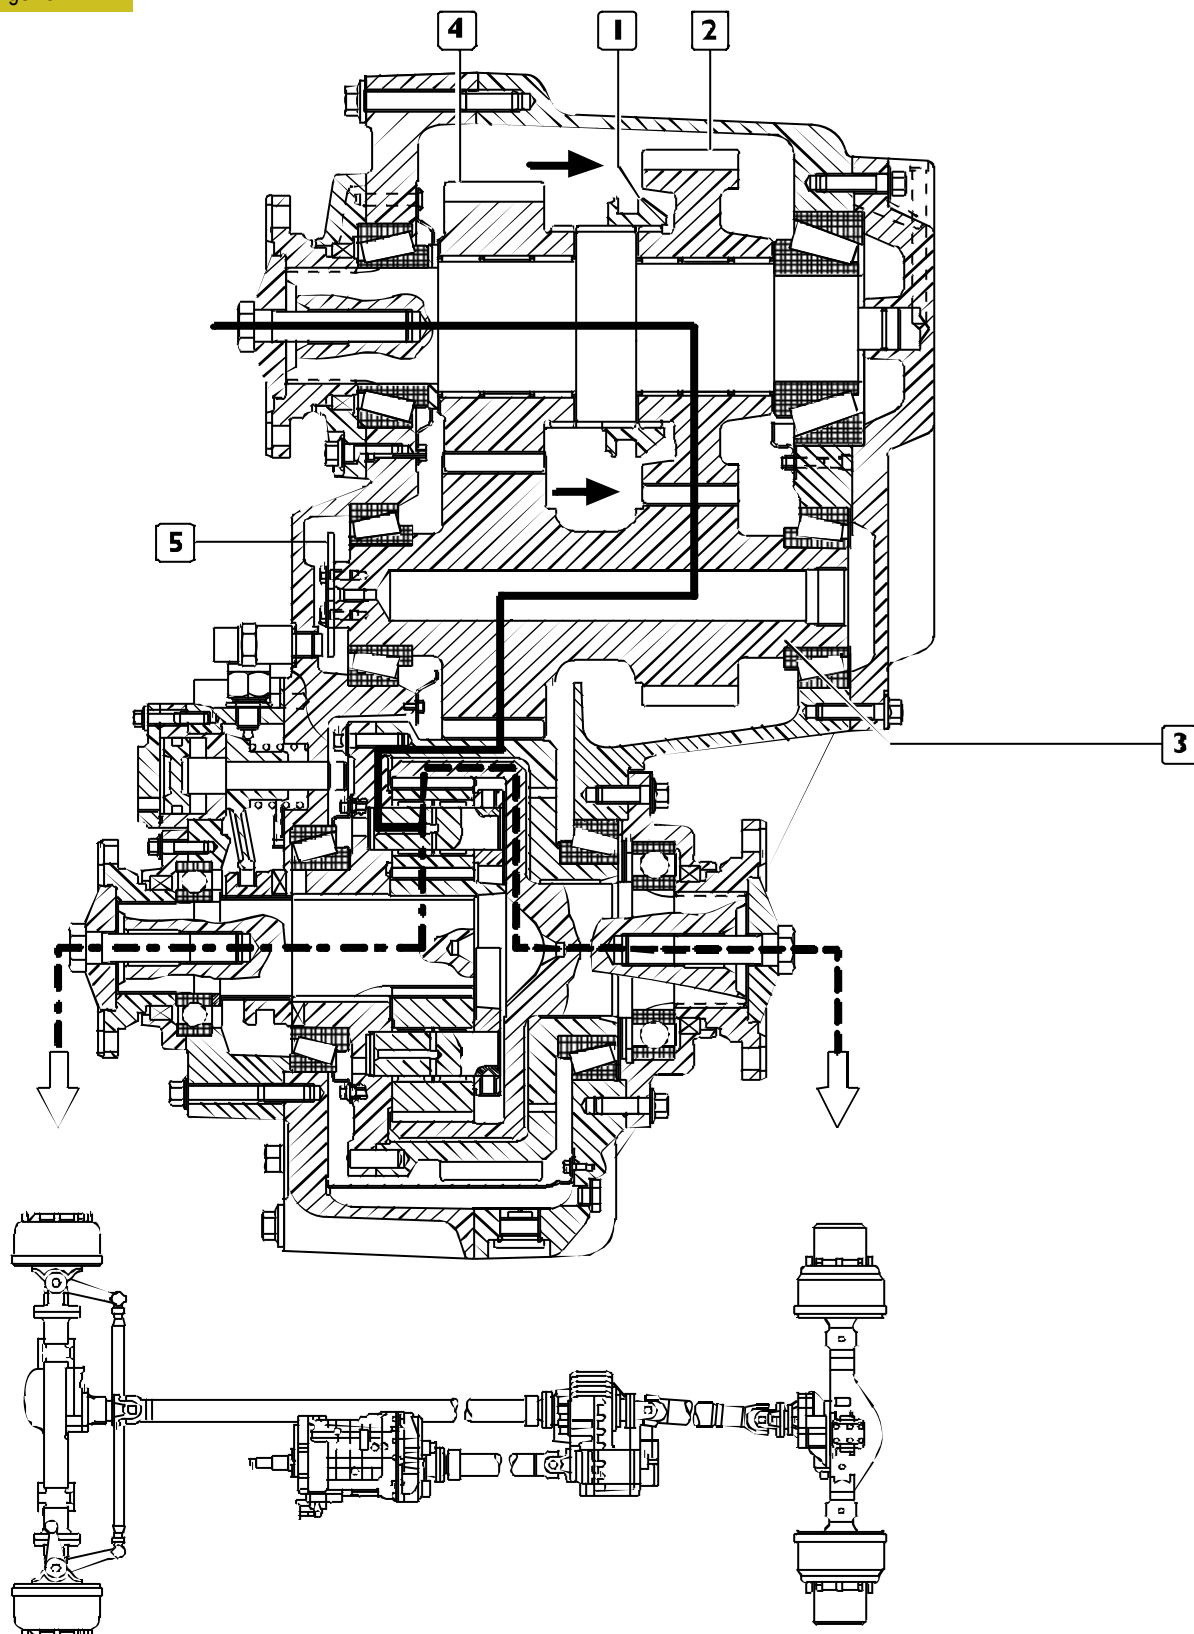

With the control knob on 1, the sleeve (1) moves in the direction of the arrows, making the gear (2) integral with the input shaft and thereby creating a 1:1 ratio with the divider unit.


The drive transmission passes through the countershaft (3), where the phonic wheel (5) is secured for reading the speed.

62126

Aquila Trucks Centres

Off-road driving (reduced ratio)

Figure 5

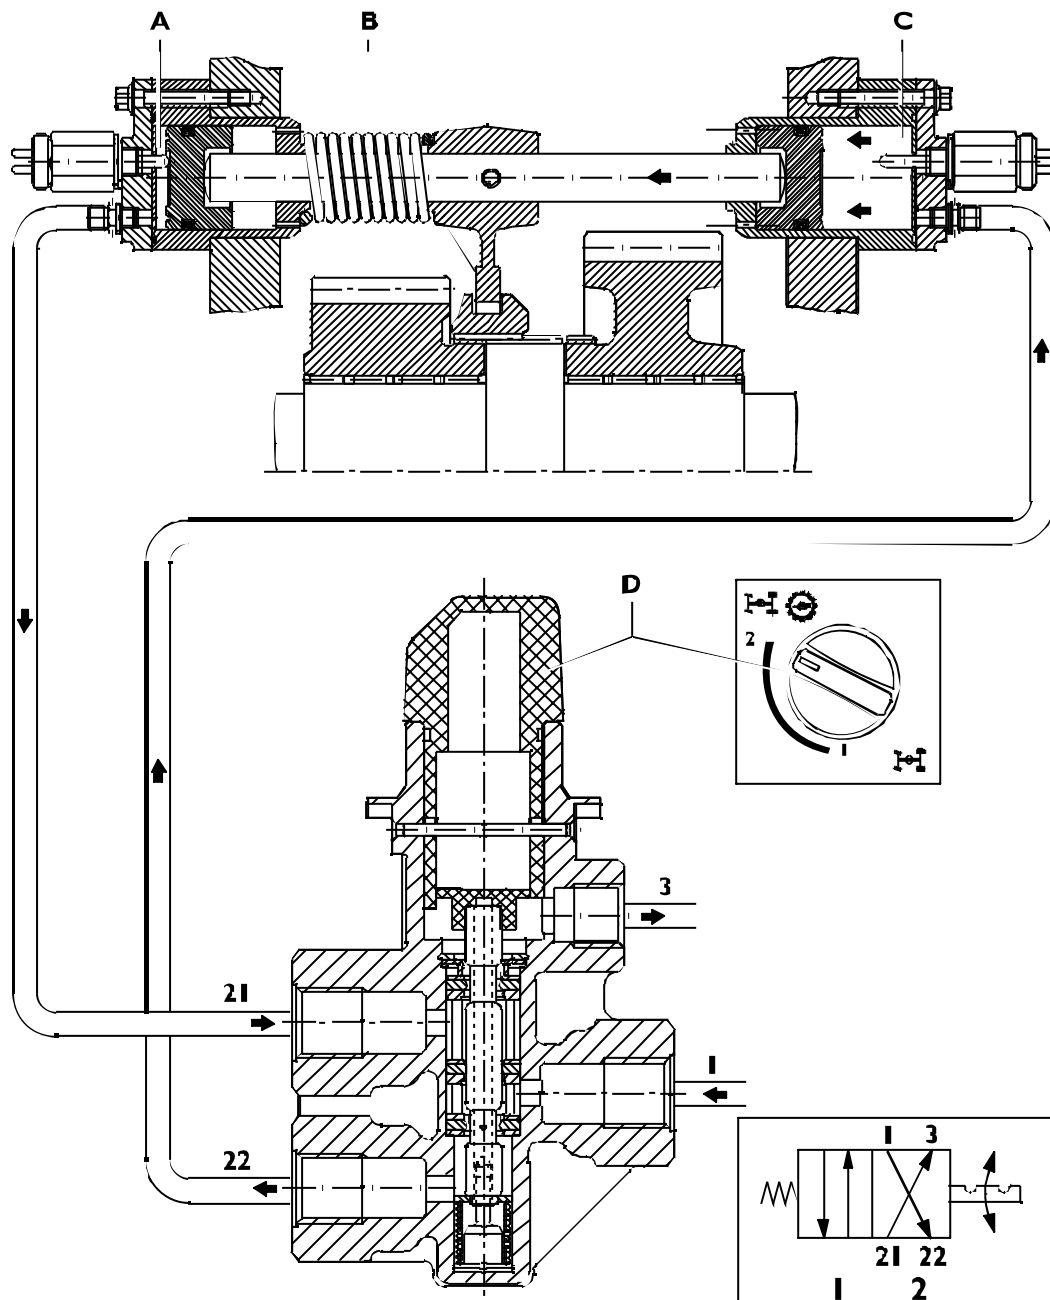

119254

With the control knob D on 2, the incoming air at the fitting I passes through the distributor and comes out of the fitting 22 and, going to supply the chamber C, causes the piston to move to its limit stop.

User instructions:

- Release the throttle.
- Turn the knob onto 1.
- Briefly press the throttle pedal.


The fork and the sleeve will move towards the off-road ratio. The movement of the piston will close the contact of the switch that will switch on the reduced speed indicator light on the dashboard.

The air in the chamber A gets discharged into the atmosphere through the fitting 3.

Aquila Trucks Centres

Diagram of drive transmission with reduced ratio

Figure 6

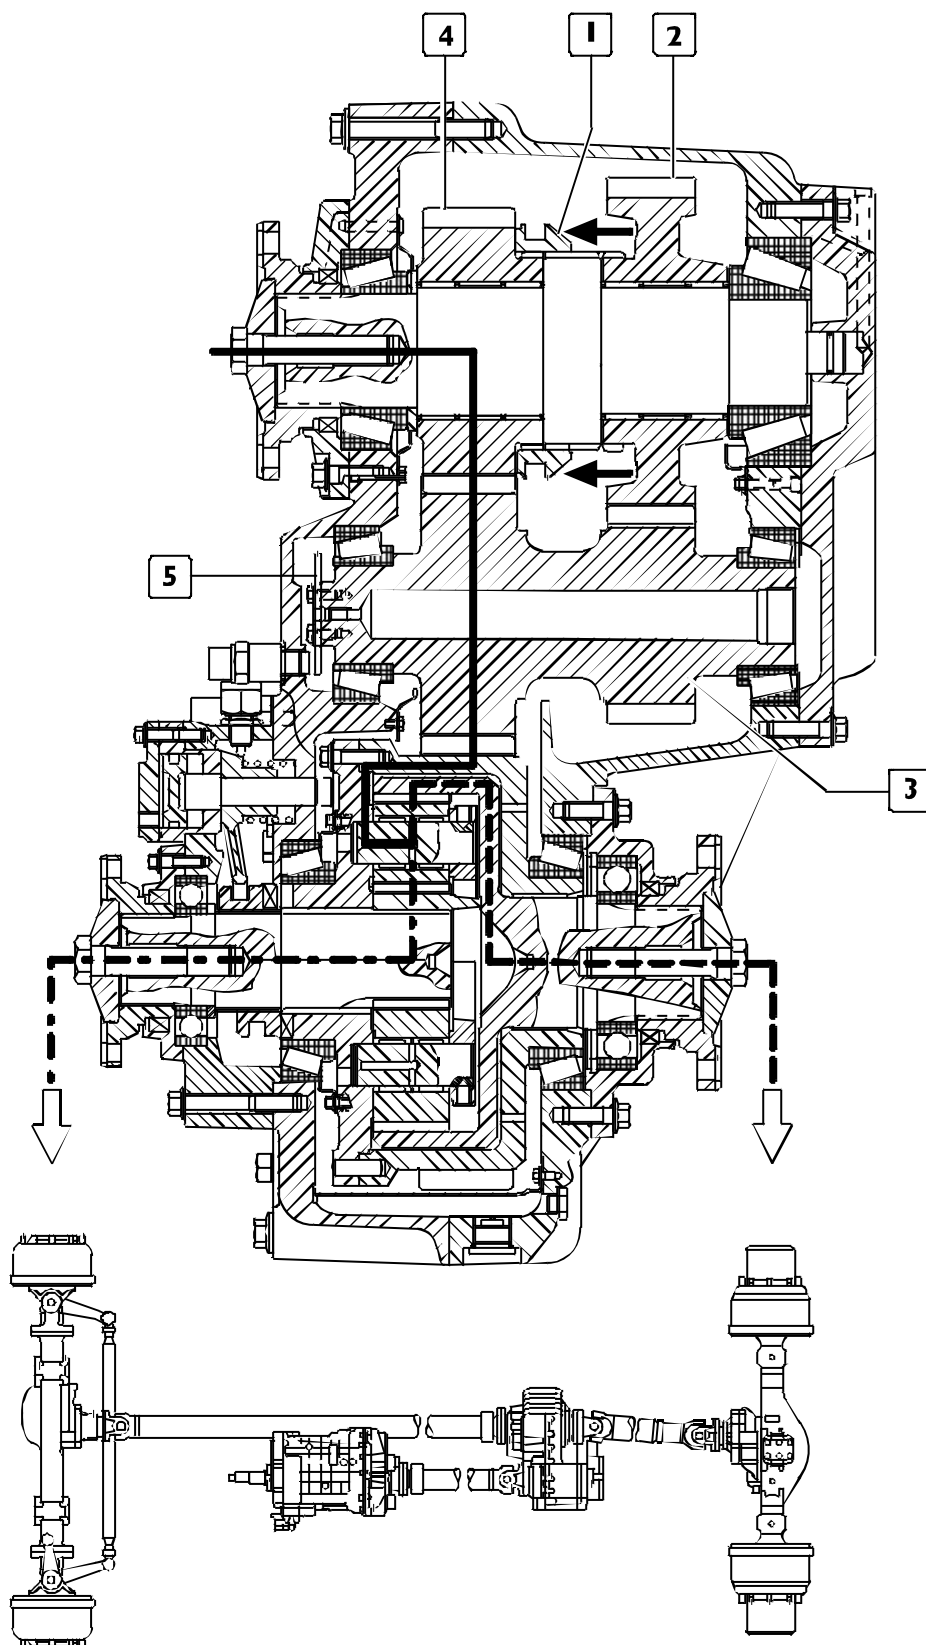

With the control knob on 2, the sleeve (1) moves in the direction of the arrows, making the gear (4) integral with the input shaft and thereby creating a 1:1.6 ratio with the divider unit.

The drive transmission passes through the countershaft (3), where the phonic wheel (5) is secured for reading the speed.


62128

Aquila Trucks Centres

Version with P.T.O.

Control on on-road driving position

Figure 7

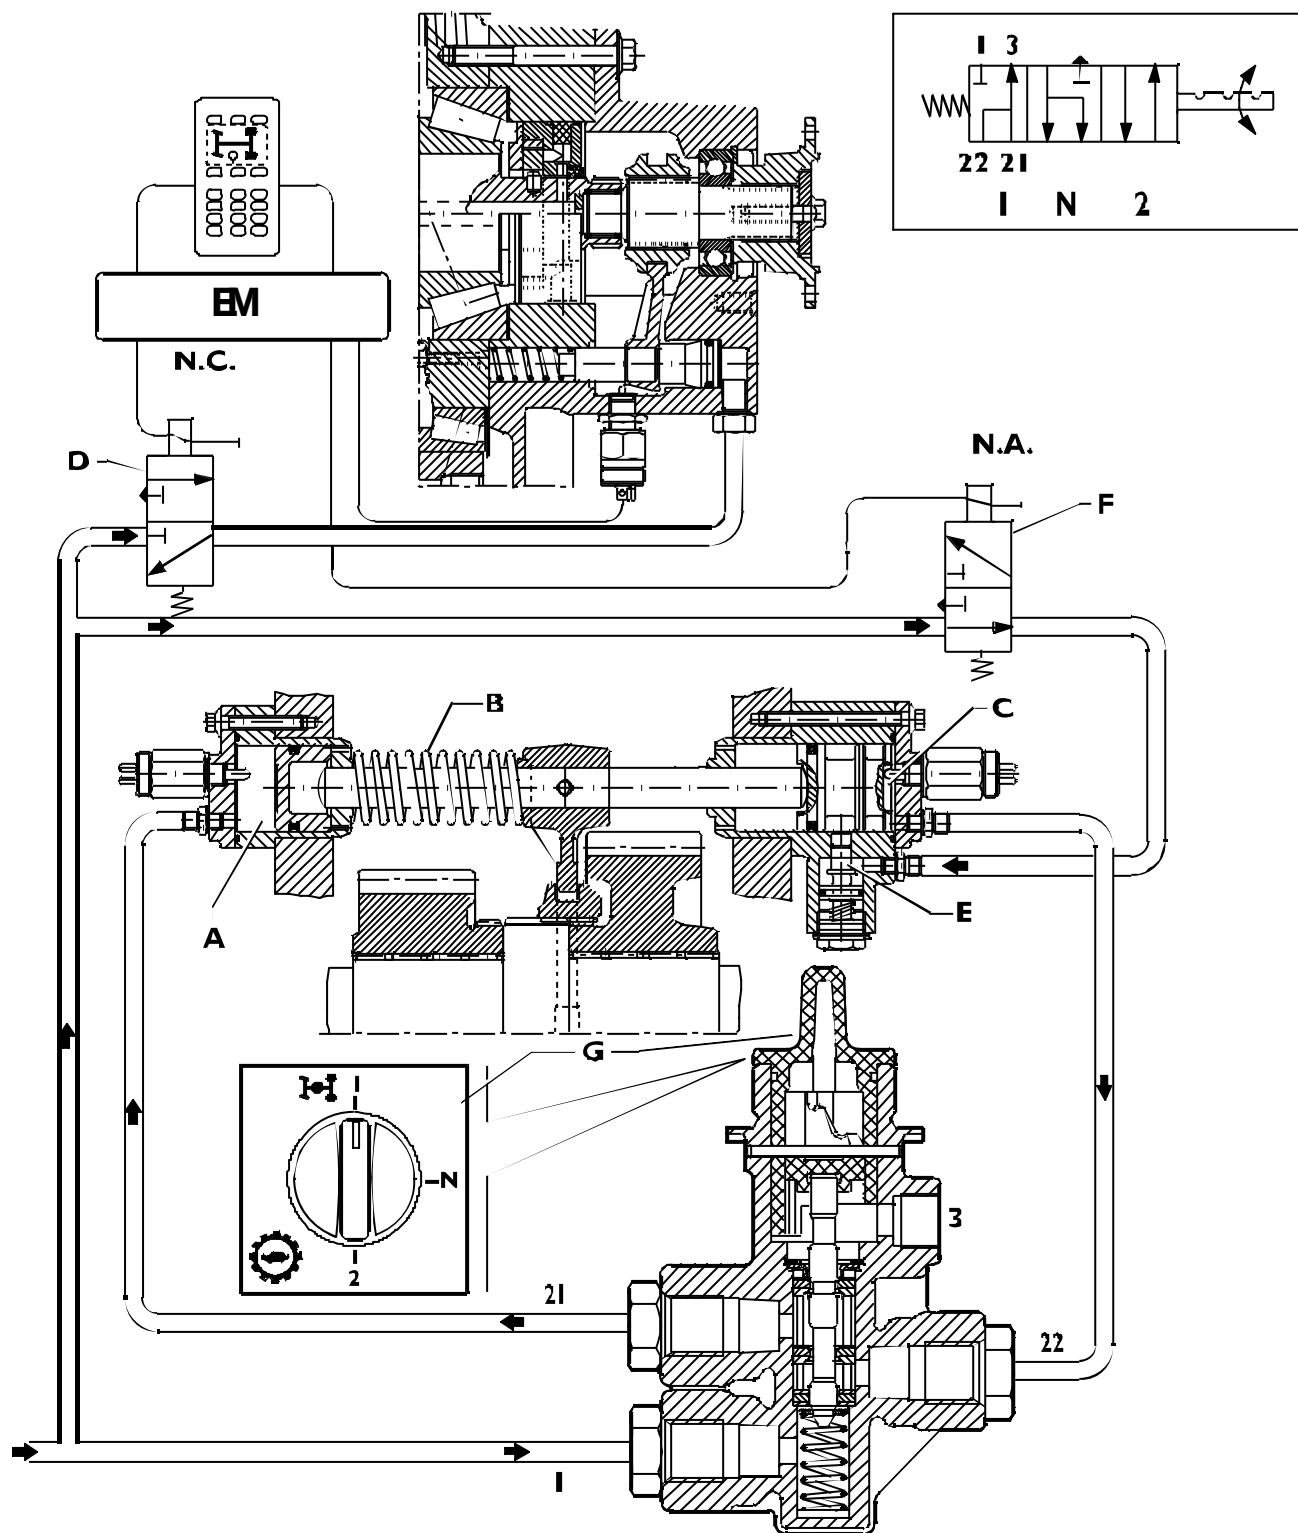

119255


With the control knob on 1, the incoming air at the fitting 1 of the distributor will not supply the outlets 21 and 22. The spring B keeps the fork and the sleeve in the on-road ratio position.

The chambers A and C of the cylinder are in communication with the atmosphere through the bleed of the distributor. The push rod E, on receiving the air from the normally open solenoid valve F, will be turned off, thereby permitting the piston of the chamber C to be able to move.

Aquila Trucks Centres

Control on neutral position

Figure 8

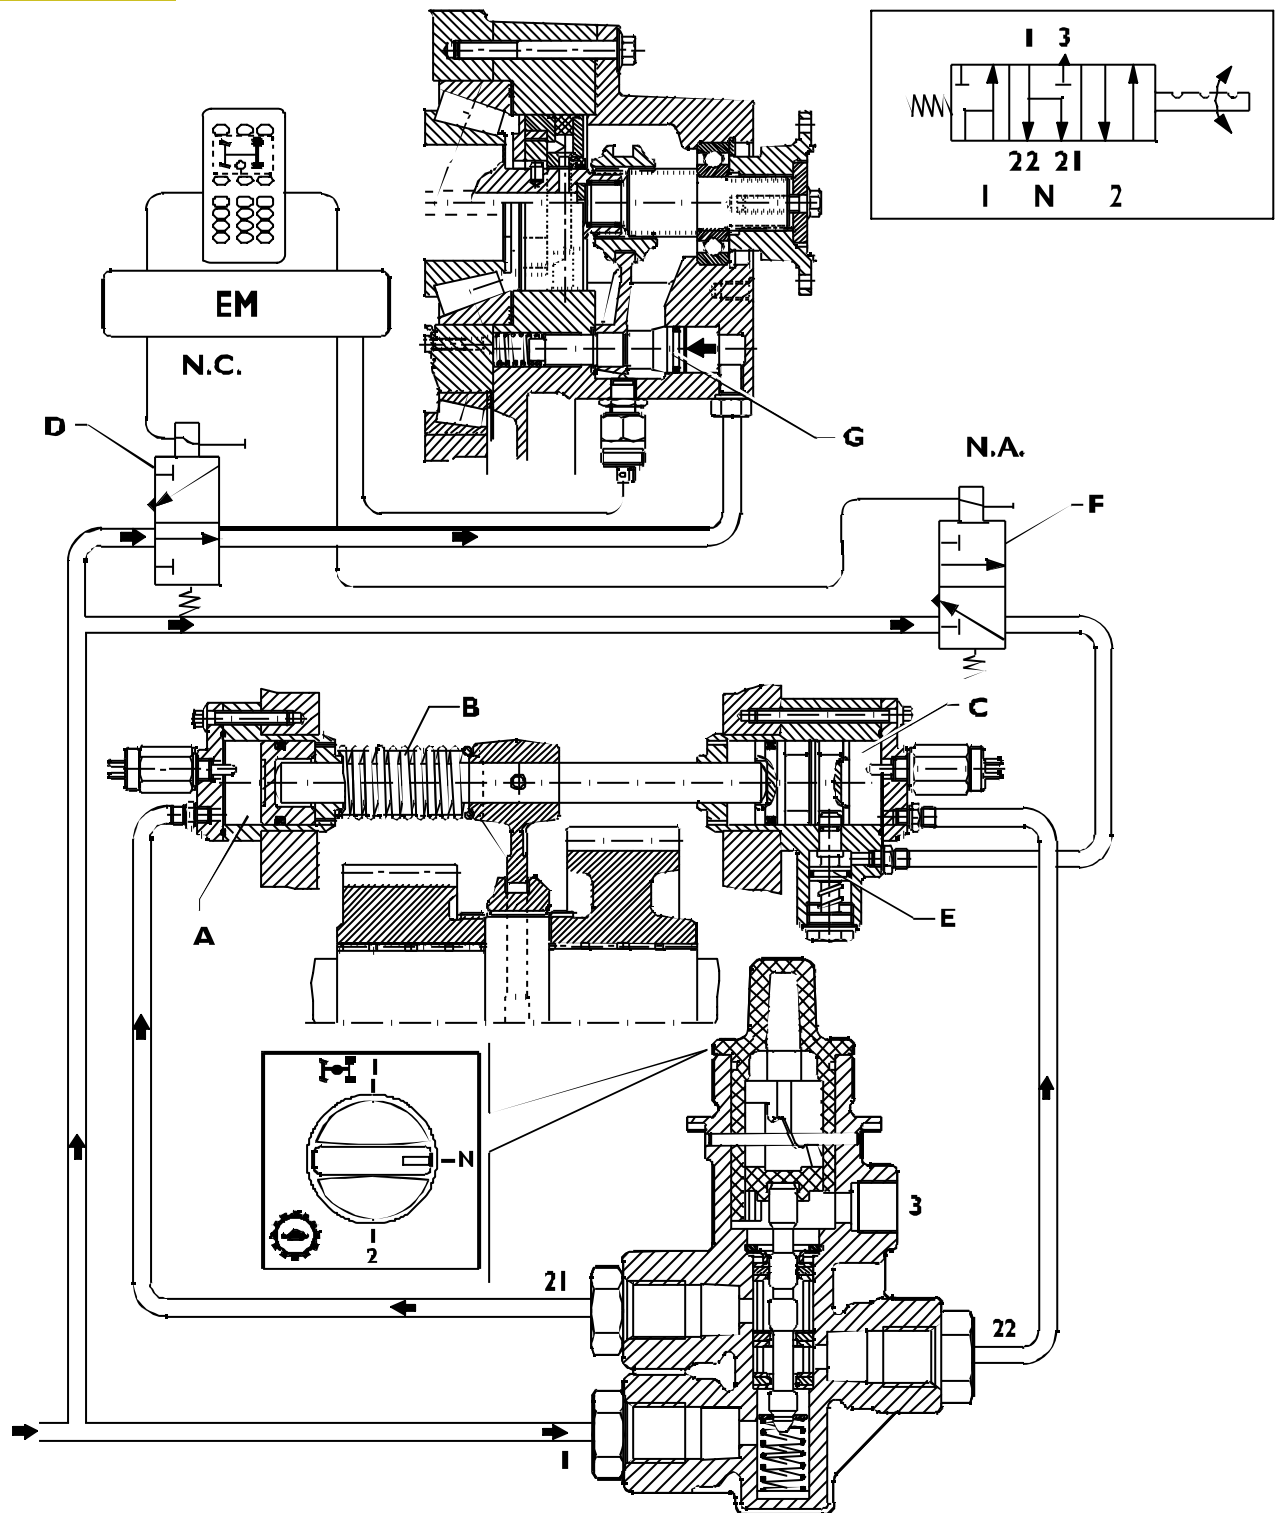

119256

With the knob on position N, the incoming air at the fitting 1 passes through the distributor and comes out of the fittings 21 and 22, thereby supplying both the chamber A and the chamber C, causing the fork and the sleeve to move into the neutral position.

Power take-off coupling

Turning on the electric power take-off control switch energizes the solenoid valves D and F simultaneously.

The normally closed solenoid valve D, on energizing, opens and supplies the power take-off coupling cylinder G.


The normally open solenoid valve V, on energizing, closes and prevents the air from keeping the safety push rod E turned off.

This last condition is necessary to lock the piston and the fork in the neutral position.

Aquila Trucks Centres

Control on off-road driving position

Figure 9

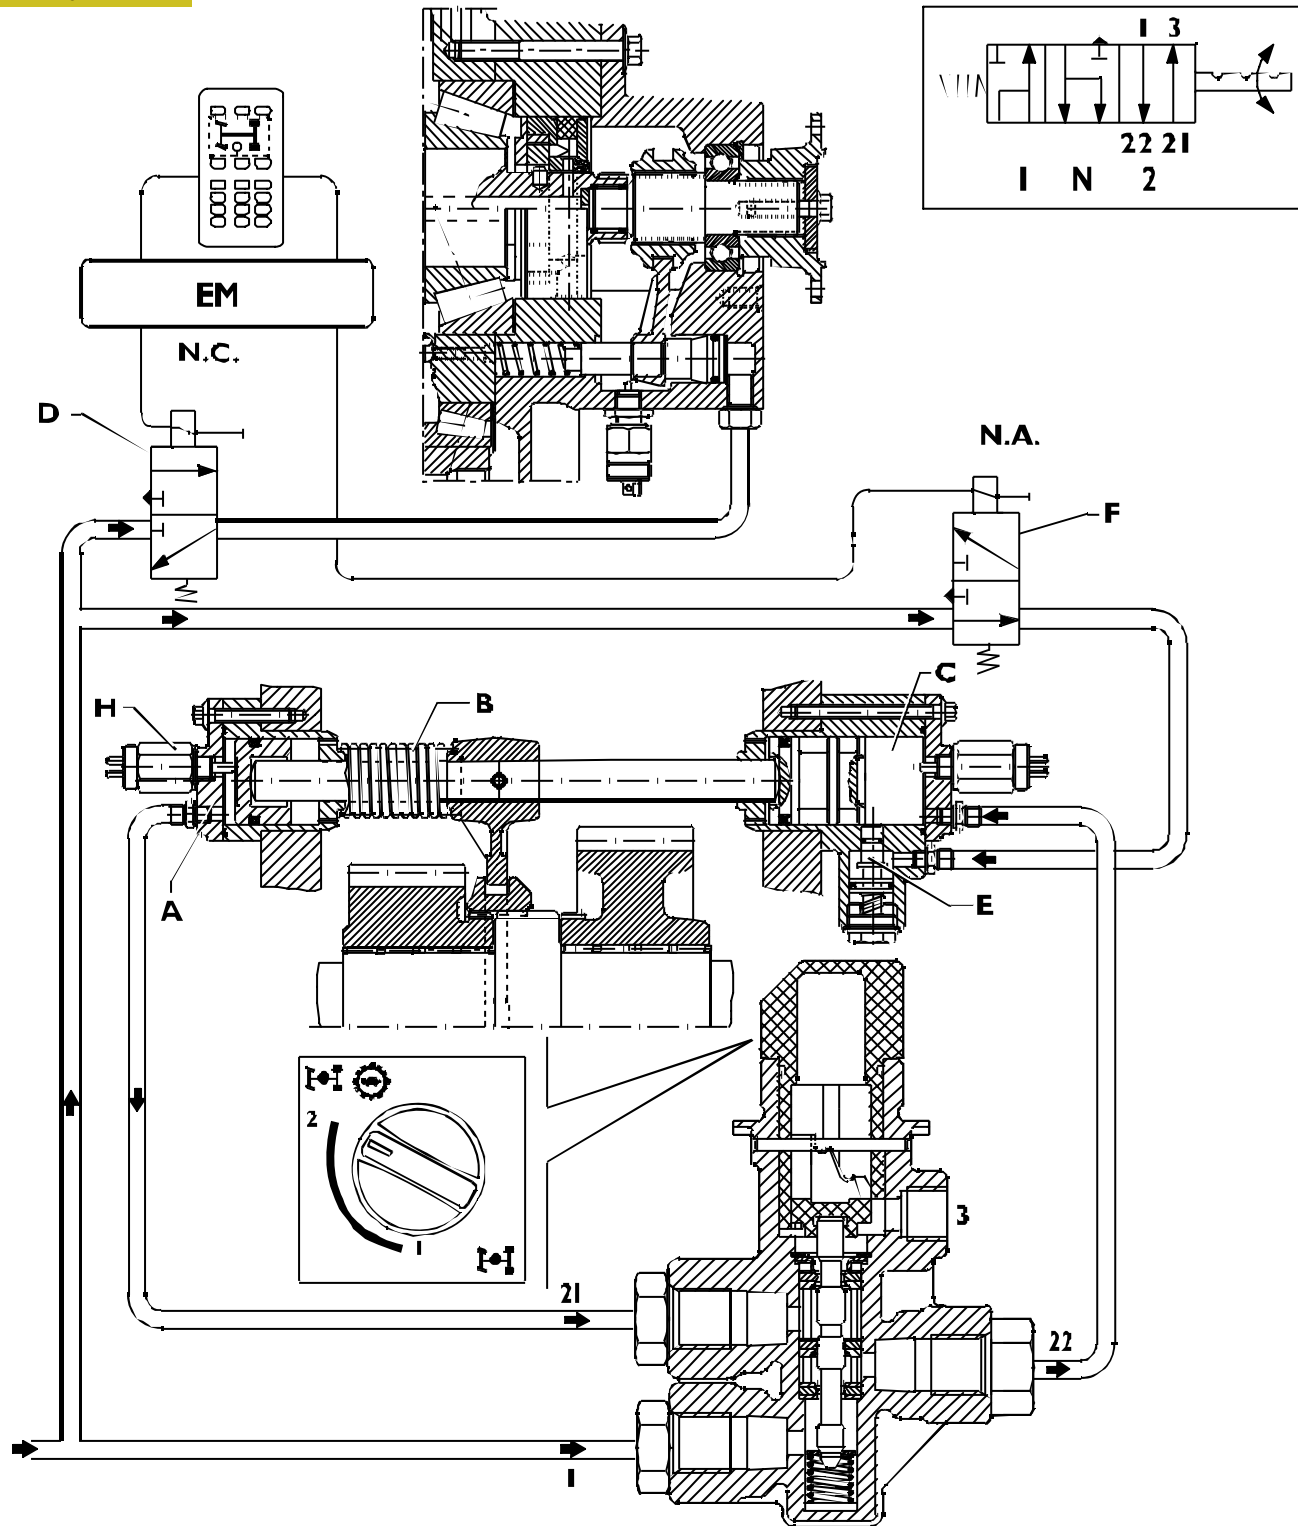

With the control knob on 2, the incoming air at the fitting 1 passes through the distributor and comes out of the fitting 22 supplying the chamber C and causing the piston to move to its limit stop.

The fork and the sleeve will move towards the off-road ratio gear.

The movement of the piston will close the contact of the switch H that will switch on the reduced speed indicator light on the dashboard and the air in the chamber A gets discharged into the atmosphere through the bleed 3 of the distributor.

The push rod E, on receiving the air from the normally open solenoid valve F will be turned off, thereby permitting the piston of the chamber C to be able to move.


Aquila Trucks Centres

TORQUE TRANSFER

The drive transmitted by the input shaft through the countershaft (4) will turn the planet gear train (1), which via the ring gear Z_2 and the planet wheel Z_1 will transmit the drive to the rear (3) and front (2) output shafts.

Transfer ratio calculation

Figure 10

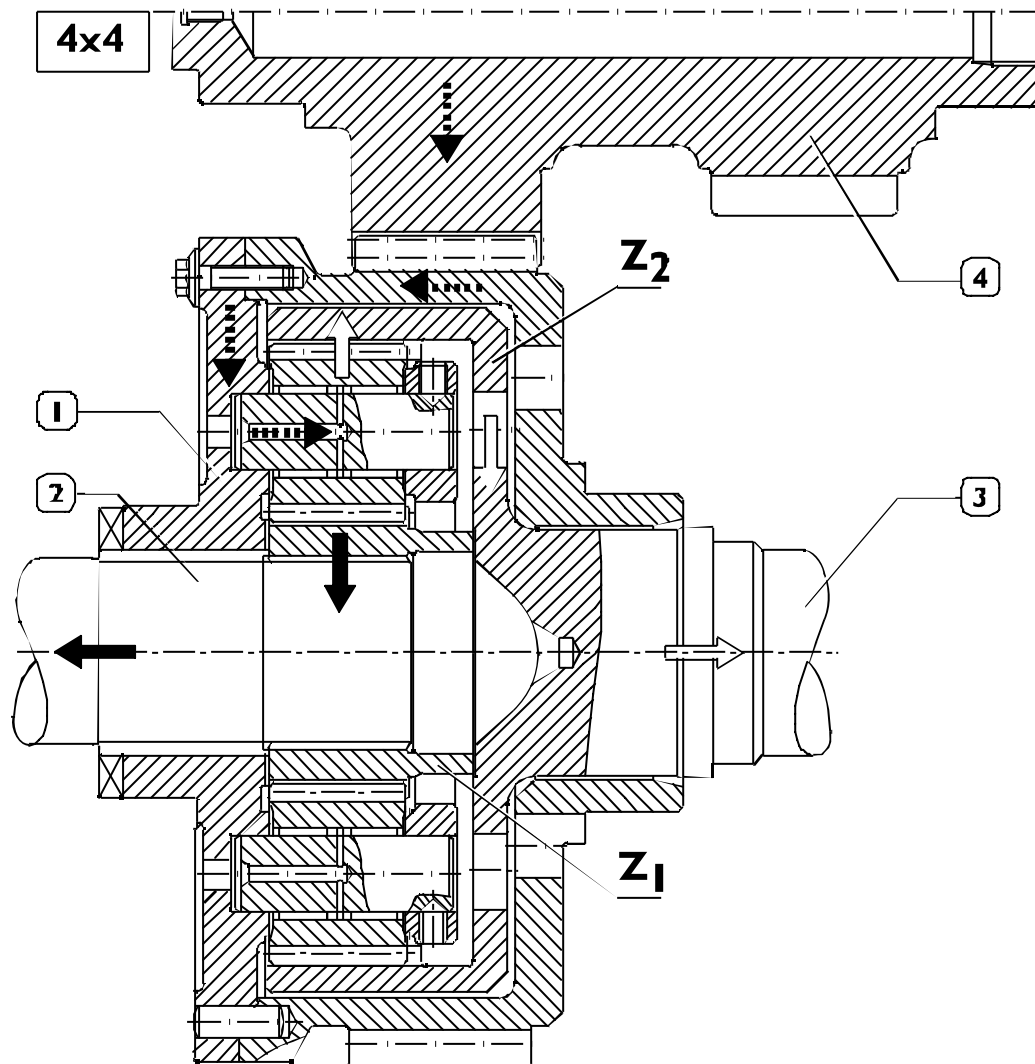

-▶ Incoming torque
 ▶ Torque to the front wheels
 ▶ Torque to the rear wheels

62132

4x4 - 8x8 vehicles

$$\text{Front axle } T_1 = \frac{Z_1}{Z_1 + Z_2} = \frac{33}{33 + 72} = 0,31$$

$$\text{Rear axle } T_2 = \frac{Z_2}{Z_1 + Z_2} = \frac{72}{33 + 72} = 0,68$$

$$\text{Total transfer} = \frac{T_2}{T_1} = \frac{0,68}{0,31} = 2,2$$

6x6 vehicles


$$\text{Front axle } T_1 = \frac{Z_1}{Z_1 + Z_2} = \frac{18}{18 + 72} = 0,2$$

$$\text{Rear axle } T_2 = \frac{Z_2}{Z_1 + Z_2} = \frac{72}{18 + 72} = 0,8$$

$$\text{Total transfer} = \frac{T_2}{T_1} = \frac{0,8}{0,2} = 4,0$$

Aquila Trucks Centres

Figure 11

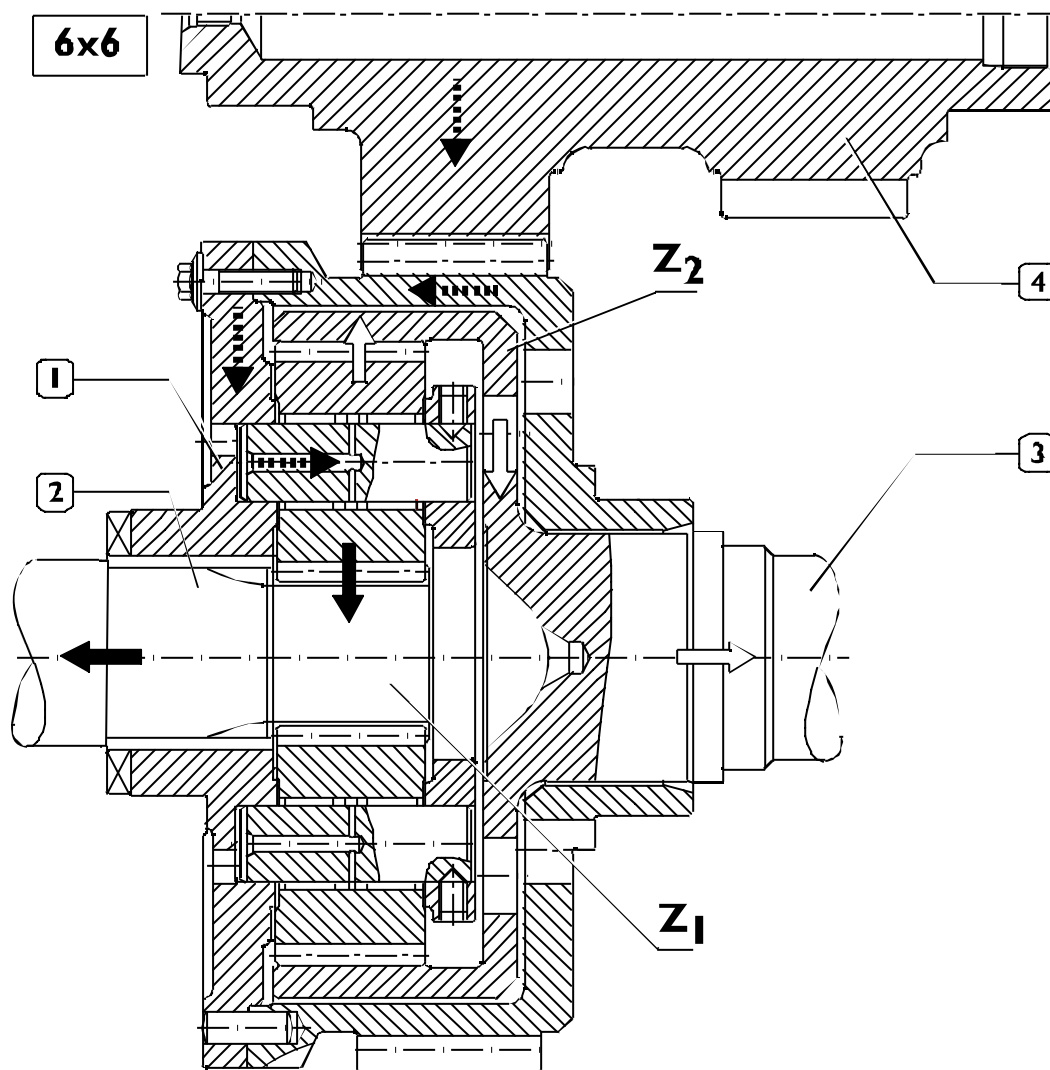

-▶ Incoming torque
 —▶ Torque to the front wheels
 —▶ Torque to the rear wheels

62133

Center differential locking

Vehicles 4x4 - 6x4 - 6x6 - 8x4 - 8x8

Locking must only be used to drive over muddy and slippery ground.

Correct operation requires carrying out the following steps:

- Pass on to the locking position with the vehicle stationary or at low speed.
- Proceed with caution.

When the bad road conditions have been passed, proceed as follows:

- Pass on to the unlocking position keeping the vehicle's speed.
- Temporarily lift the throttle.
- Go back to the safety speed


If locking is not immediately turned off, you need to change the direction of travel in order to get rid of any tension.



- On muddy and slippery ground, never turn the wheels in no-load conditions when differential locking is engaged as this would cause damage (just a few seconds would be enough).
- Never engage differential locking while one wheel is turning in no-load conditions; this would severely damage the gears.

Aquila Trucks Centres


Figure 12

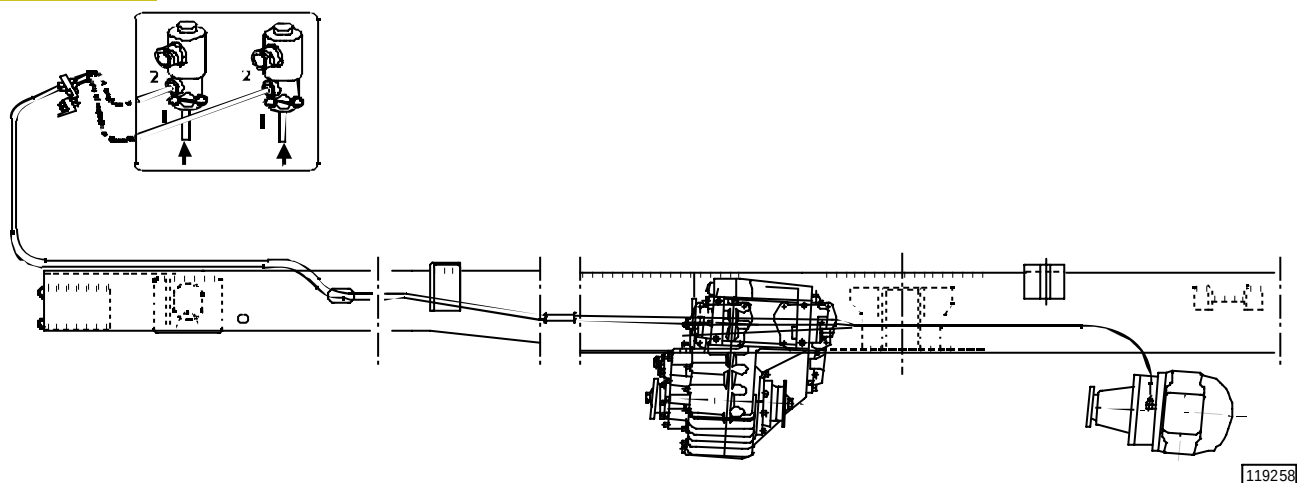

119258

DIAGRAM OF 4x4 VEHICLE DIFFERENTIAL LOCKING CONTROL

Figure 13

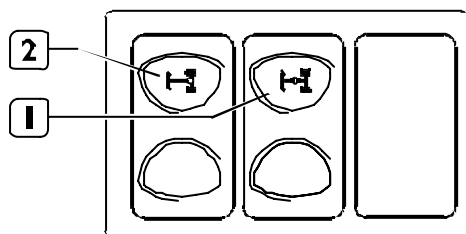


119259

- 1 = Longitudinal differential lock relay
2 = Transverse differential lock relay


When locking is turned on, the associated indicator or lights on the dashboard come on.

Figure 14

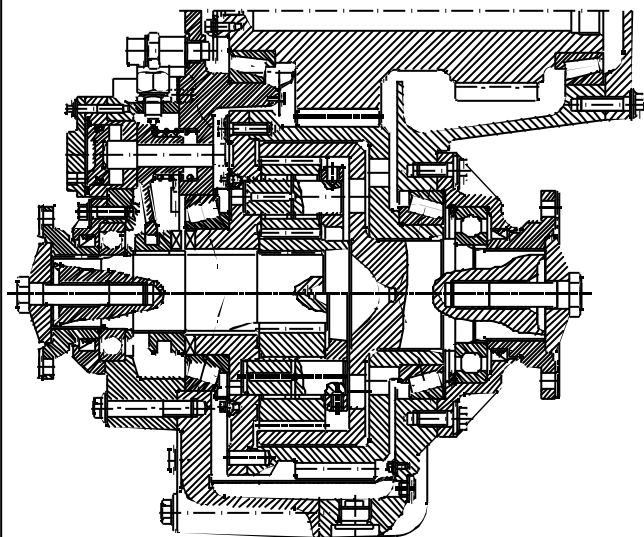

62136

Figure 15

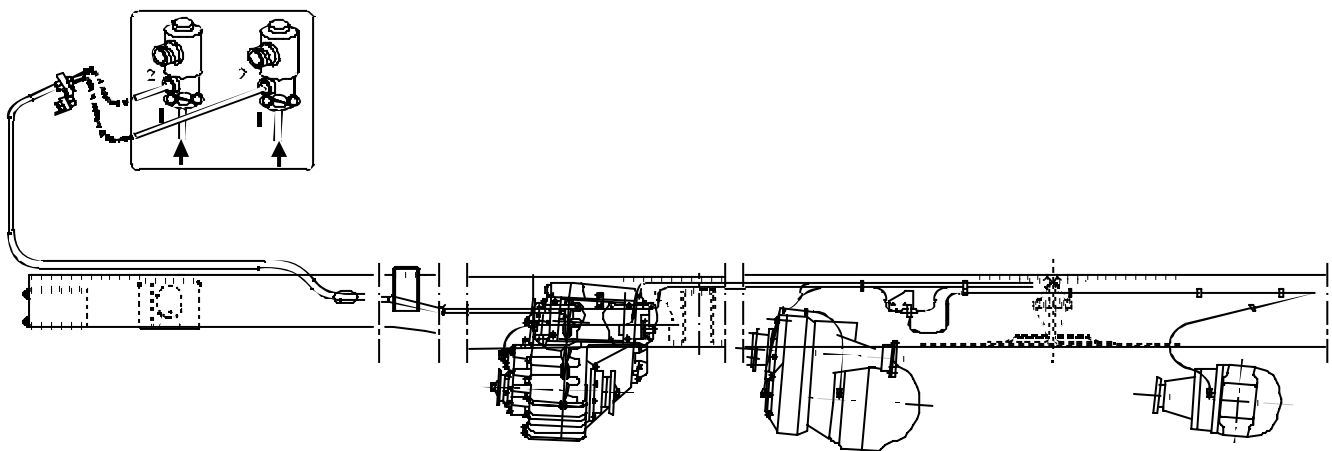


119260

DIAGRAM OF 6x6 VEHICLE DIFFERENTIAL LOCKING CONTROL

Aquila Trucks Centres

TIGHTENING TORQUES

Figure 16

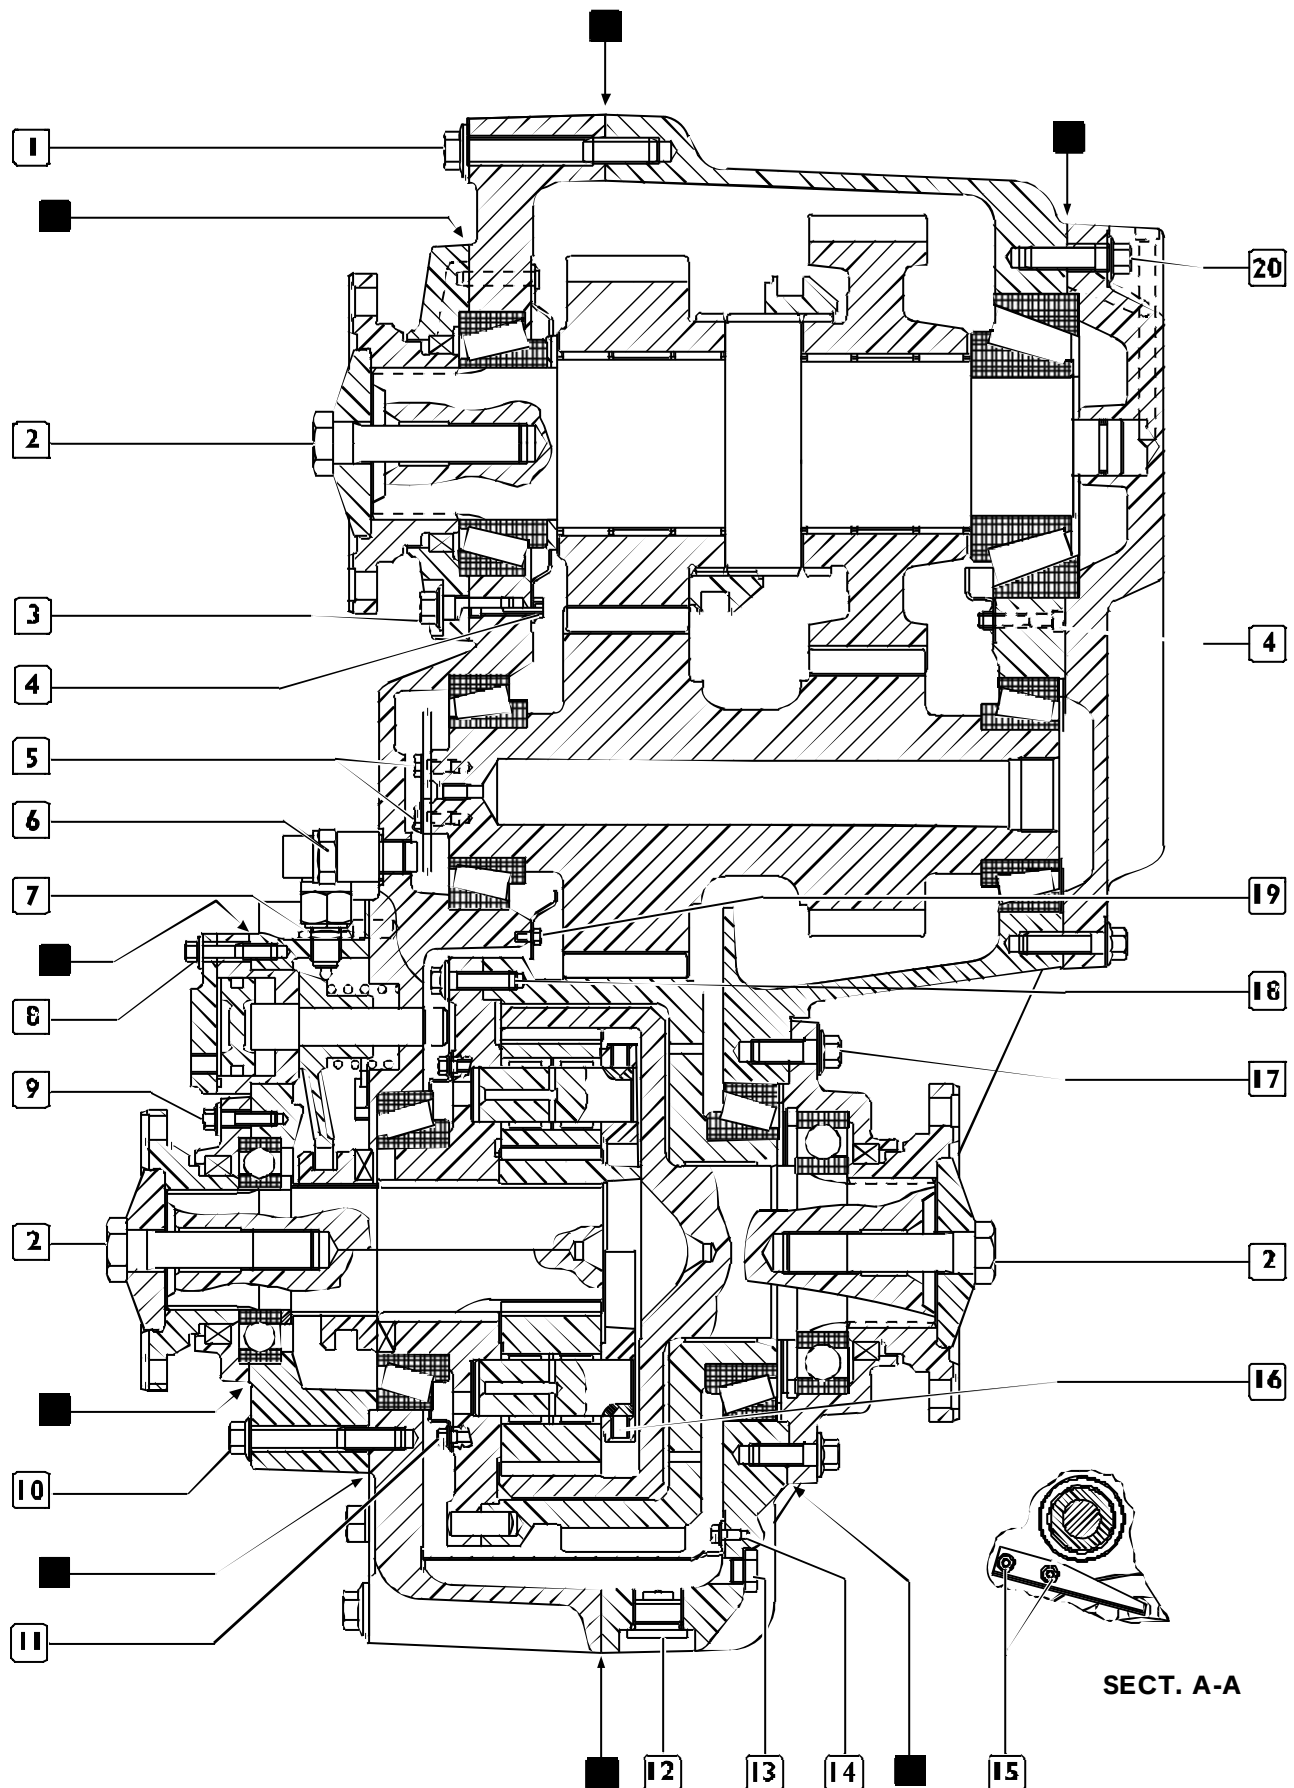

62138

Aquila Trucks Centres


	DESCRIPTION	TORQUE	
		Nm	kgm
1	Screw M 14 (TC 1800)	92 ± 9	9.4 ± 0.9
1	Screw M 14 (TC 2200)	120 ± 12	12.2 ± 1.2
2	Pin M 22 x 1.5	500 ± 50	50.9 ± 5.1
3	Screw M 12 (TC 1800)	58 ± 6	5.9 ± 0.6
3	Screw M 12 (TC 2200)	78 ± 8	7.9 ± 0.8
4	Screw M 6	9.5 ± 0.5	1 ± 0.05
5	Screw M 6	9.5 ± 0.5	1 ± 0.05
6	Pulse transmitter M 18 x 1.5	45 ± 5	4.6 ± 0.5
7	Push-rod switch nut M 18 x 1.5	45 ± 5	4.6 ± 0.5
8	Screw M 8 (TC 1800)	19 ± 2	1.9 ± 0.2
8	Screw M 8 (TC 2200)	22.5 ± 2.5	2.3 ± 0.25
9	Screw M 10	45 ± 5	4.6 ± 0.5
10	Screw M 12 (TC 1800)	58 ± 6	5.9 ± 0.6
10	Screw M 12 (TC 2200)	78 ± 8	7.9 ± 0.8
11	Screw M 6*	7 ± 1	0.7 ± 0.1
12	Screw plug M 27 x 2 (TC 1800)	100 ± 10	9.8 ± 1
12	Screw plug M 27 x 2 (TC 2200)	55 ± 5	5.6 ± 0.5
13	Screw plug M 14 x 1.5 (TC 1800)	60 ± 6	6.1 ± 0.6
13	Screw plug M 14 x 1.5 (TC 2200)	78 ± 8	7.9 ± 0.8
14	Screw M 5	4.5 ± 0.5	0.46 ± 0.05
15	Screw M 5* (TC 1800)	4.5 ± 0.5	0.46 ± 0.05
15	Screw M 5* (TC 2200)	5 ± 0.5	0.5 ± 0.05
16	Grub screw M 10*	33 ± 3	3.4 ± 0.3
17	Screw M 12 (TC 1800)	58 ± 6	5.9 ± 0.6
17	Screw M 12 (TC 2200)	78 ± 8	7.9 ± 0.8
18	Screw M 10	65	6.6
19	Screw M 5	5 ± 0.5	0.5 ± 0.05
20	Screw M 12 (TC 1800)	58 ± 6	5.9 ± 0.6
20	Screw M 12 (TC 2200)	78 ± 8	7.9 ± 0.8

* Apply LOCTITE AVX.

J Apply LOCTITE 510

Aquila Trucks Centres

Figure 17

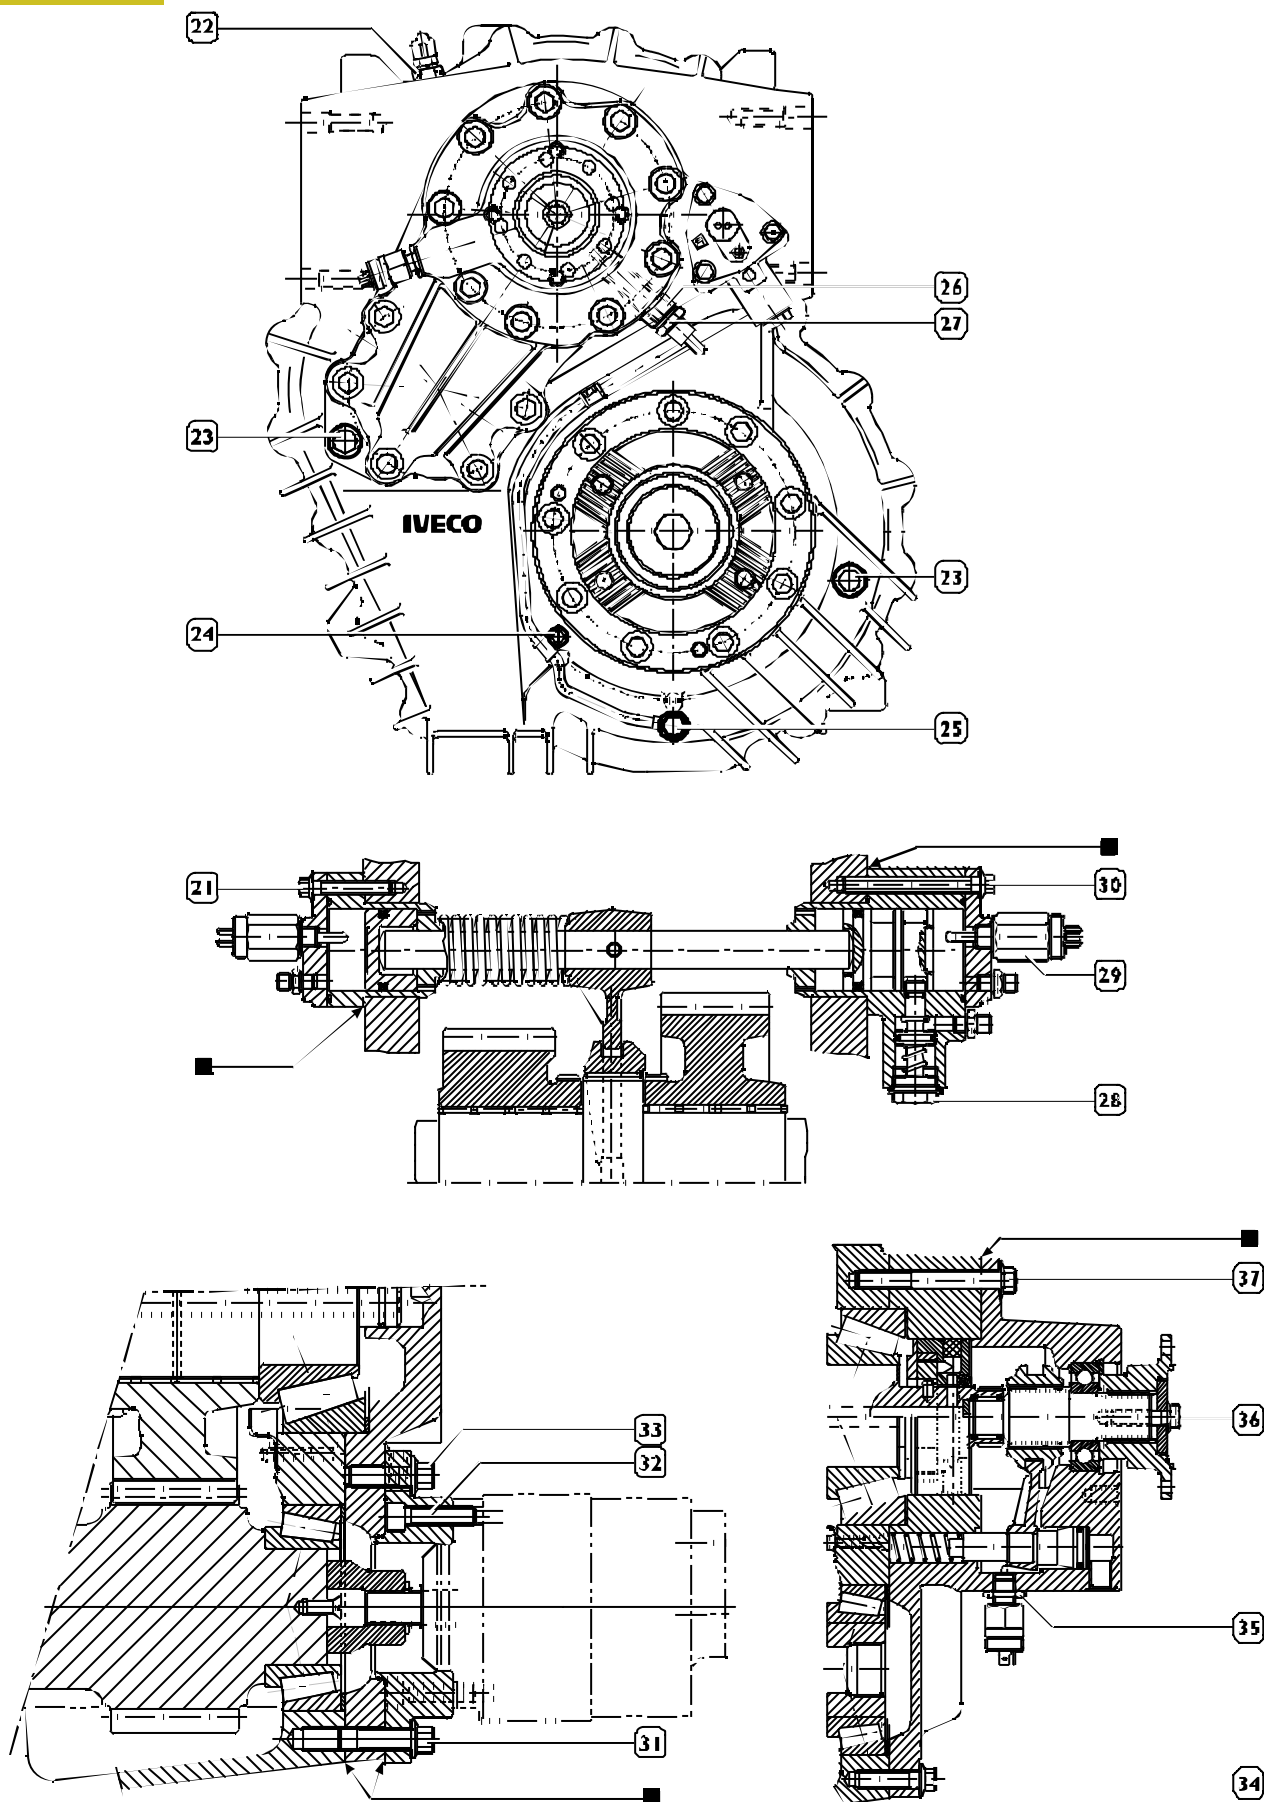

62139

Aquila Trucks Centres

	DESCRIPTION	TORQUE	
		Nm	kgm
21	Screw M 8 (TC 1800)	19 ± 2	1.9 ± 0.2
21	Screw 8 (TC 2200)	22.5 ± 2.5	2.3 ± 0.25
22	Oil vapour vent	100 ± 10	10.2 ± 1.02
23	Screw plug M 22 (TC 1800)	70 ± 7	7.1 ± 0.7
23	Screw plug M 22 x 1.5 (TC 2200)	110 ± 10	11.2 ± 1.02
24	Screw M 6	7 ± 1	0.7 ± 0.1
25	Threaded filling-pipe M 14	45 ± 5	4.6 ± 0.5
26	Terminal filling-pipe 1/4"	45 ± 5	4.6 ± 0.5
27	Terminal filling-pipe M 22 x 1.5 (TC 1800)	70 ± 7	7.1 ± 0.7
27	Terminal filling-pipe M 22 x 1.5 (TC 2200)	78 ± 8	7.9 ± 0.8
28	Plug M 28 x 1.5	110 ± 10	11.2 ± 1.02
29	Push rod switch M 14 x 1.5	45 ± 5	4.6 ± 0.5
30	Screw M 8 (TC 1800)	19 ± 2	1.9 ± 0.2
30	Screw M 8 (TC 2200)	22.5 ± 2.5	2.3 ± 0.25
31	Special screw M 12 x 80	78 ± 8	7.9 ± 0.8
32	Screw M 10 (TC 1800)*	49 ± 3	5 ± 0.3
32	Screw M 10 (TC 2200)*	47 ± 3	4.8 ± 0.3
33	Screw M 12	78 ± 8	7.9 ± 0.8
34	Screw M 12 (TC 1800)	58 ± 6	5.9 ± 0.6
34	Screw M 12 (TC 2200)	78 ± 8	7.9 ± 0.8
35	Push-rod switch nut M 18 x 1.5 (TC 1800)	45 ± 5	4.6 ± 0.5
35	Push-rod switch nut M 18 x 1.5 (TC 2200)	50 ± 5	5.1 ± 0.5
36	Screw M 10 (TC 1800)	45 ± 5	4.6 ± 0.5
36	Screw M 10 (TC 2200)	50 ± 5	5.1 ± 0.5
37	Screw M 12 (TC 1800)	58 ± 6	5.9 ± 0.6
37	Screw M 12 (TC 2200)	78 ± 8	7.9 ± 0.8






* Apply LOCTITE 242

J Apply LOCTITE 510




Aquila Trucks Centres

TOOLS







NOTE When removing and refitting parts, keep strictly to using the specific tools

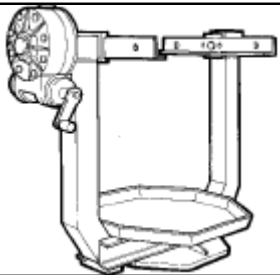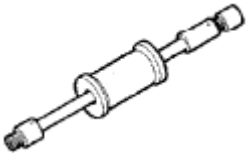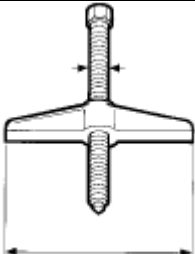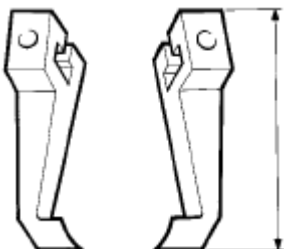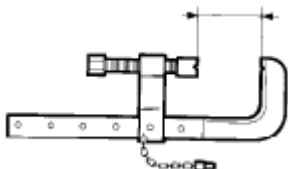TOOL No.	DESCRIPTION	
99305121		Hot-air device.
99322205		Rotary stand to overhaul assemblies (capacity 1000 daN, torque 120 daN).
99340205		Puller with slide-hammer
99341003		Single-acting bridge.
99341009		Pair of brackets.
99341015		Clamp.

Aquila Trucks Centres

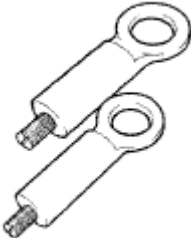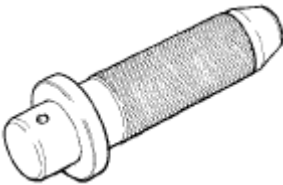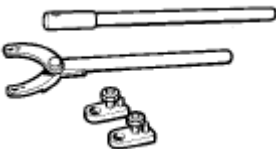TOOL No.	DESCRIPTION	
99342143		Pin to extract epicyclic assembly planet pins (use with 99340205).
99345049		Extractor reaction block.
99360502		Pair of rings to remove and refit the transfer half box.
99366067		M8 eyebolts to remove and refit countershaft.
99370006		Kit for valve seat regrinding.
99370317		Reaction lever with extension to retain flanges.

Aquila Trucks Centres

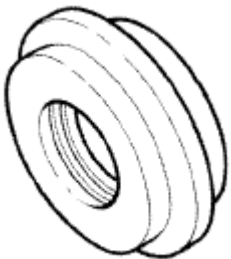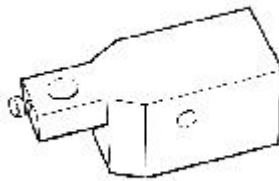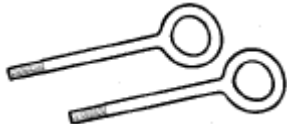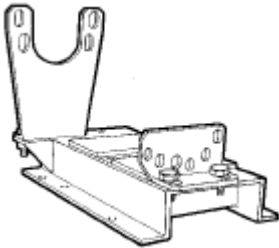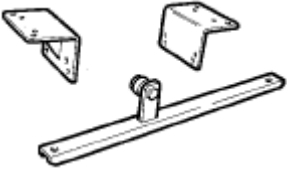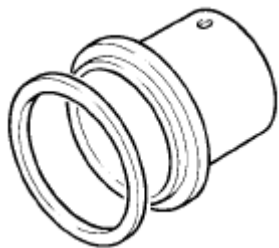TOOL No.	DESCRIPTION	
99370362		Keying device to fit gasket on front drive output shaft cover (use with 99370006).
99370415		Comparator holder base for adjusting secondary shaft bearings (use with 99395604)
99370565		Eyebolts to remove and refit epicyclic assembly.
99370631		Mount to remove and refit transfer box.
99371051		Bracket to support reduction transfer box while overhauling (use with 99322205).
99374253		Keying device to fit gasket on covers of drive input shaft and rear drive output shaft.



Aquila Trucks Centres

TOOL No.	DESCRIPTION
99395604	 Dial gauge (0-10 mm)

Aquila Trucks Centres

LUBRICATION

Figure 18

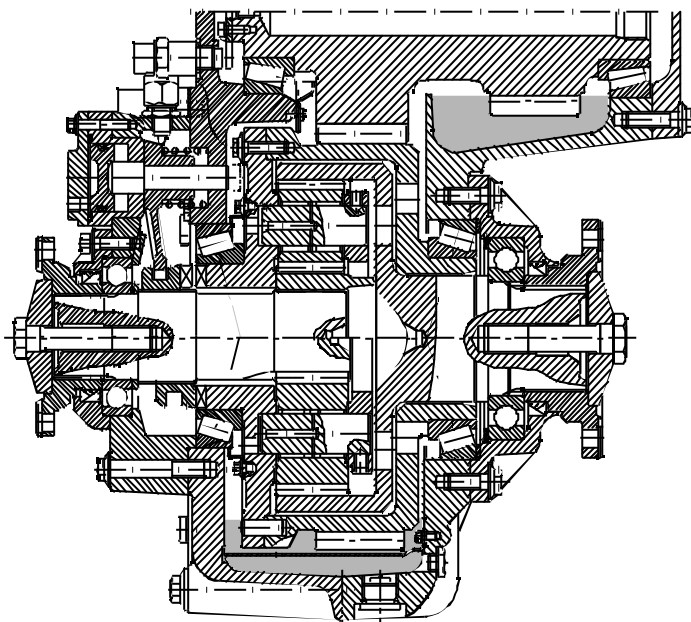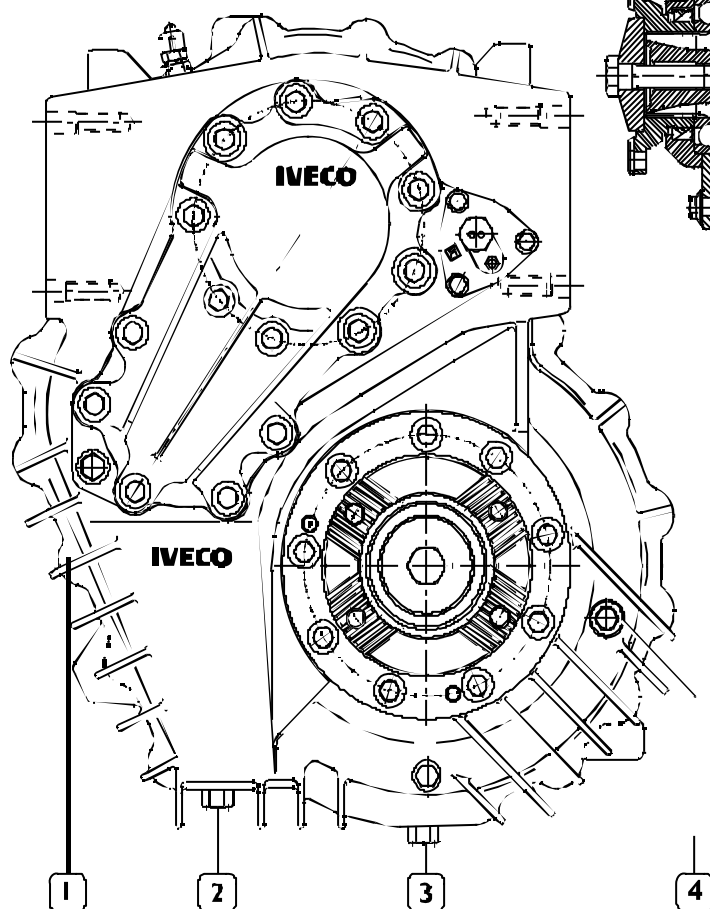

62140

Procedure to check the oil level and refuelling

Make sure the vehicle is on level ground.

- Remove the plug (4). A small quantity of oil may spill out.
- Make sure that the oil reaches the plug hole (4). Top up through the plug hole (1) after removing the plug.
- Close both plugs, tightening them to the required torque.

Changing oil

The oil should be changed periodically at the following intervals:

- With road use, every 150,000 km
- With heavy-duty use, every 1,500 hours

Type of oil: Tutela ZC 90 (SAE 80 W 90)

Tutela GI/A for arctic climate


Quantity: 6.5 litres

Remove the plugs (2 and 3) to drain the oil.

Aquila Trucks Centres

**505401 TRANSFER BOX
REMOVING AND REFITTING****Removal**

Figure 19

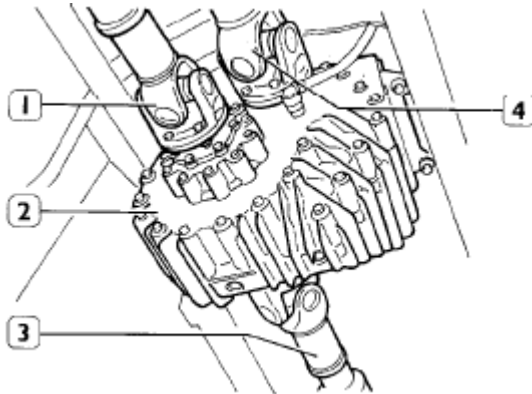

39869

To remove the reduction gear - divider (2), proceed as follows:

- Disconnect the batteries.
- Disconnect the electrical and air connections.
- Unscrew the nuts for the propeller shaft flange retaining screws (1 - 3 - 4) and disconnect them.
- Put the bracket 99370631 on the hydraulic lift and secure it to the reduction gear - divider.
- Unscrew the nuts for the screws fixing the reduction gear - divider to the chassis frame.
- Lower the lift and take out the reduction gear - divider.

Refitting


The operations to perform to refit this assembly are not particularly difficult. Therefore, it is sufficient to repeat the steps described for removal in reverse order.

505401 DISASSEMBLING THE TRANSFER BOX

Put the reduction gear - divider on the rotary stand 99322205 with the brackets 99371051. Set it upright, unscrew the plugs and drain off the oil.



Figure 20

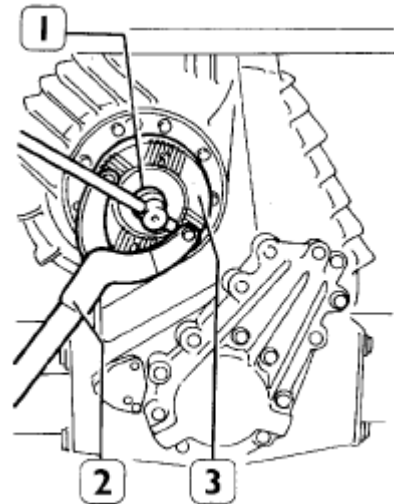


62141

Lock the rotation of the flange (3) with the reaction lever 99370317 (2). Unscrew the retaining screw with an appropriate socket wrench (1) and take off the flange.

Version without P.T.O.

Figure 21

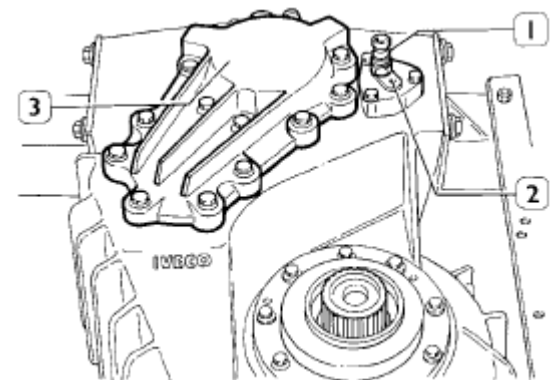

62142

Turn the assembly 90° with its back facing upwards.

Unscrew the push-rod switch (1) for engaging normal speeds (if applicable).


Unscrew the 3 screws and take off the cover (2) with the piston. Unscrew the 14 screws and take off the cover (3).

Take off the adjustment rings for the pre-load of the countershaft and drive input shaft bearings.

Aquila Trucks Centres


Version with P.T.O.

Figure 22

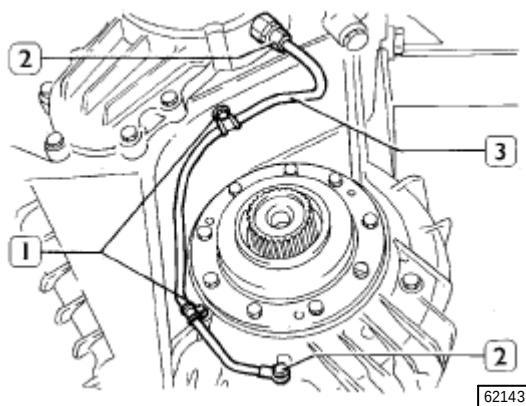


Unscrew the two screws (1) fixing the clamps. Unscrew the two fittings (2) and remove the oil pipe (3).

Figure 23

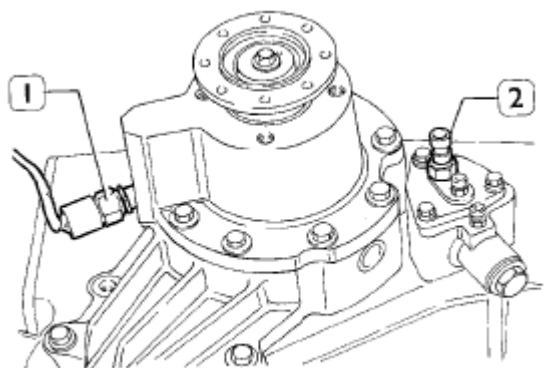


Unscrew the push-rod switch (1) for engaging the P.T.O. and the push-rod switch (2) for engaging normal speeds.

Figure 24

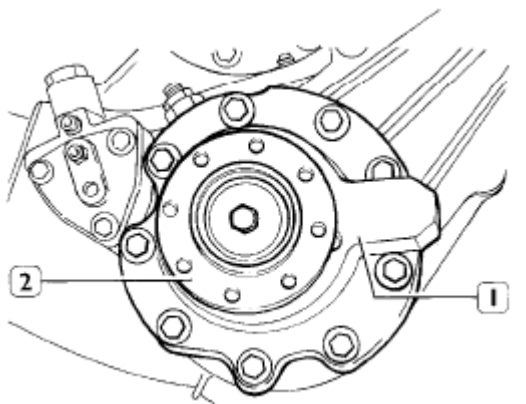

Unscrew the 9 screws and take off the power take-off (1) together with the flange (2) and drive fork.


Figure 25

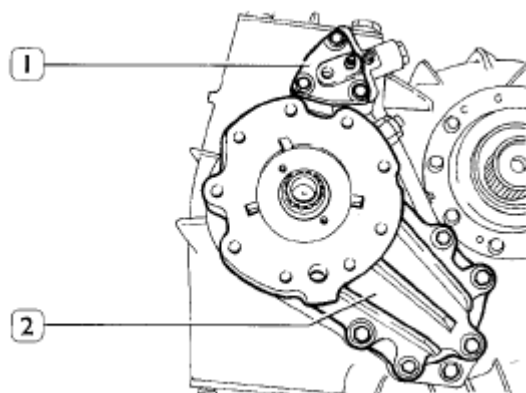

Unscrew the 3 screws and take off the cover (1) with the piston. Unscrew the remaining 5 screws and take off the cover (2). Take off the adjustment rings for the pre-load of the countershaft and drive input shaft bearings.


Both versions

Figure 26

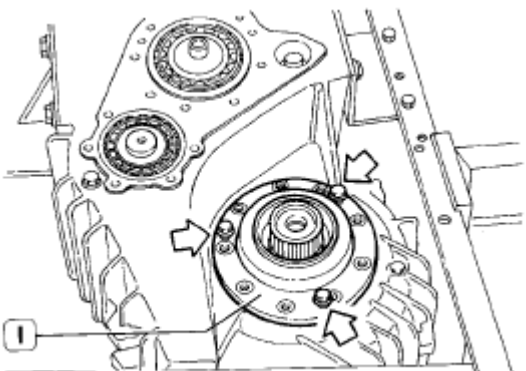

Unscrew the 9 screws, then using the 3 reaction screws screwed into the holes shown by the arrows, take off the cover (1) and take out the adjustment rings for the pre-load of the output shaft bearings.

Figure 27

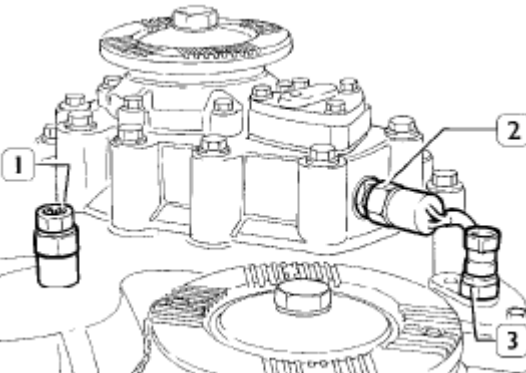


Turn the assembly 180°.

Unscrew the vehicle speed pulse transmitter (1), divider locking indicator push-rod switch (2) and the push-rod switch (3) for engaging reduced speeds (if applicable).


Aquila Trucks Centres

Figure 28

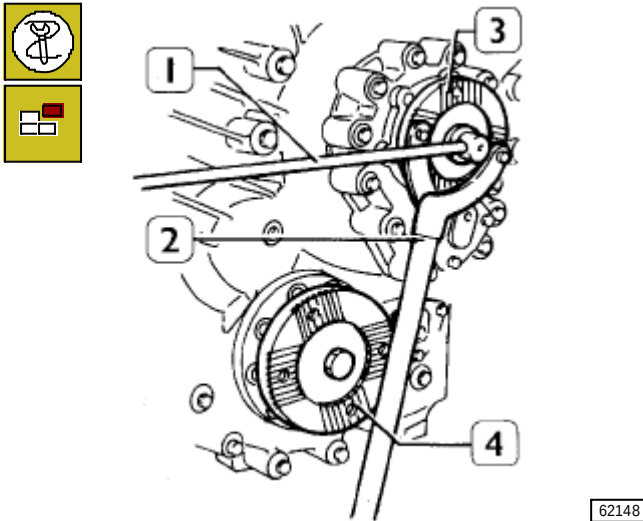


Lock rotation of the flange (3) with the reaction lever 99370317 (2). Unscrew the retaining screw with an appropriate socket wrench (1) and take out the flange; repeat this step to take out the flange (4).

Figure 29

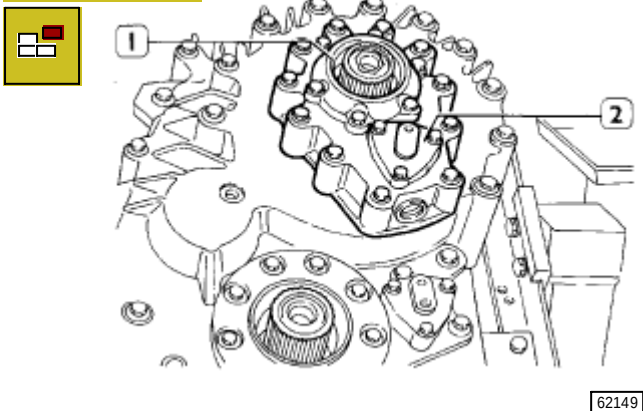


Unscrew the 6 screws and take off the cover (1) with the seal. Unscrew the 3 screws and take off the cover (2) with the piston for locking the divider.

Figure 30

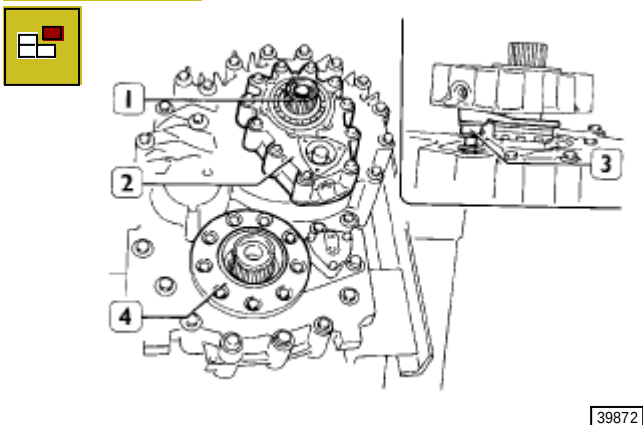


Unscrew the 11 screws and take off the cover (2) together with the shaft (1) and the fork (3) for divider locking. Unscrew the 9 screws and take off the cover (4) together with the seal.

Figure 31

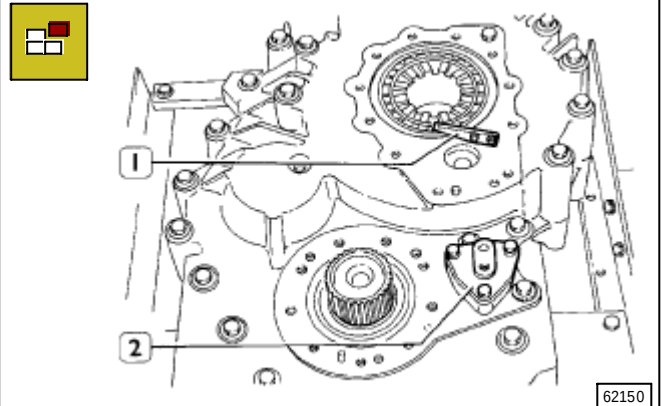

Unscrew the 3 screws, take off the cover (2) with the driving piston and take out the internal spring. Using an Allen wrench, unscrew the screws and take off the safety plate (1).


Figure 32

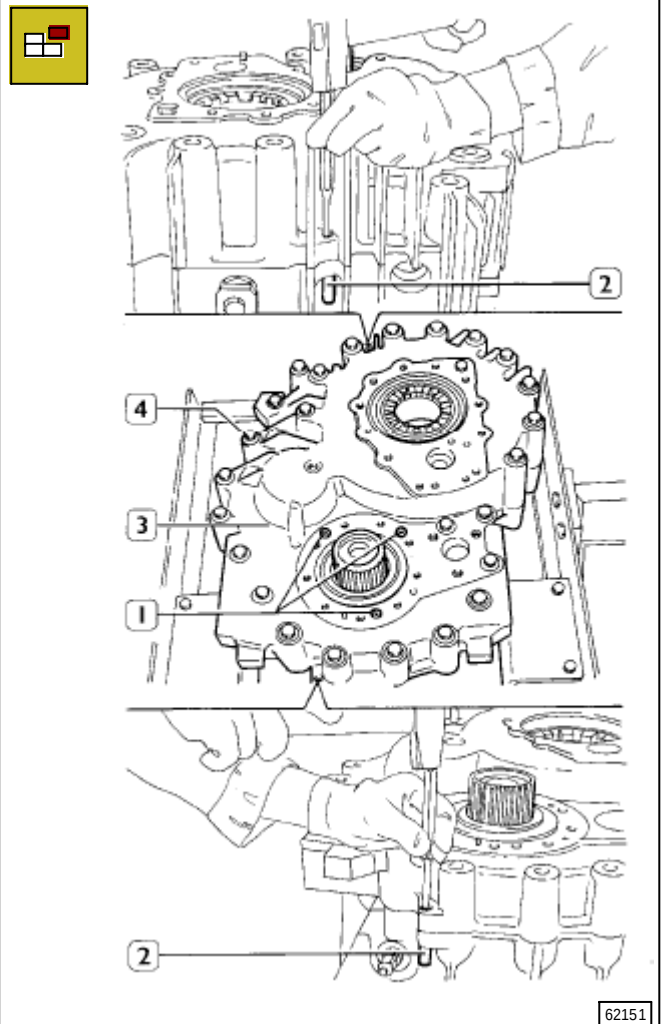

Unscrew the 3 Allen screws (1) fixing the internal plate. Unscrew the screws (4) fixing the half box. Using an appropriate punch, take out the 2 pins (2) centring the half box (3).

Aquila Trucks Centres

Figure 33

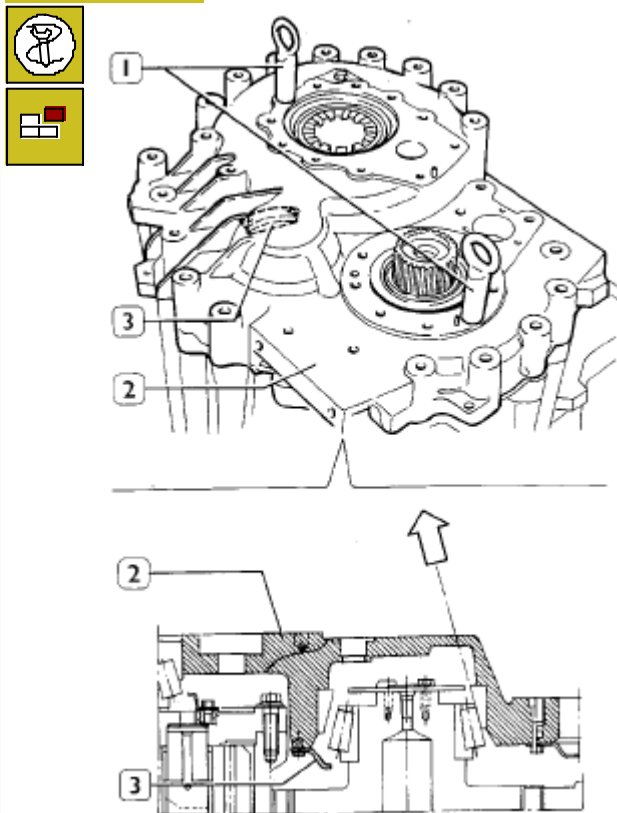


62152

Position the two rings 99360502 (1) as shown in the figure to balance the half box (2).

Using hooks and a rope, lift the half box, moving it in the direction of the arrow to free the plate (3) from under the bearing of the middle shaft.


Figure 34

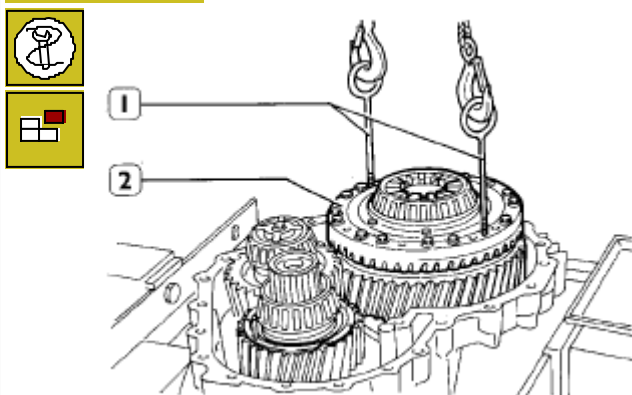

62153

Using eyebolts 99370565 (1), ropes and the lift, extract the epicyclic divider (2) from the box.


Figure 35

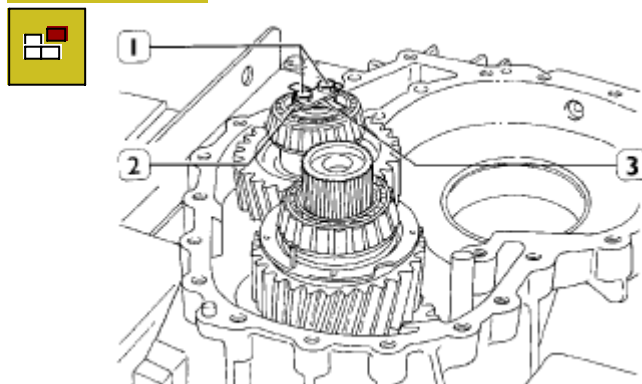

62154

Straighten the safety plate (3). Unscrew the screws (1) then remove the phonic wheel (2).


Figure 36

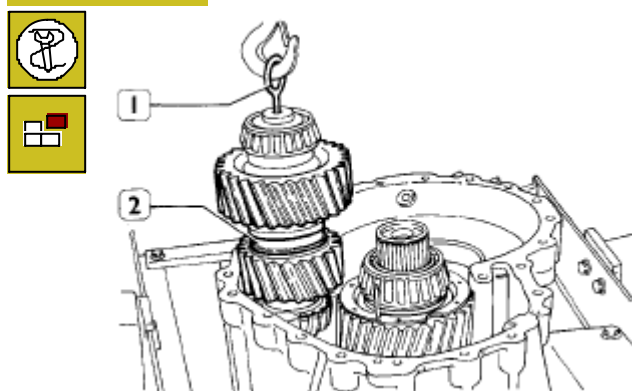

62155

Using the eyebolt 99366067 (1), a rope and the lift, extract the countershaft (2) from the box.

Figure 37

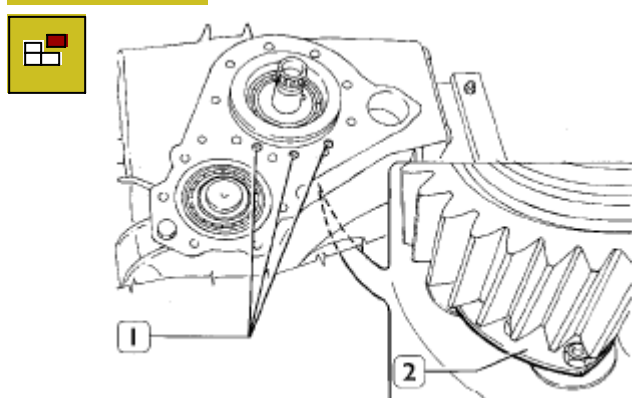


62156

Unscrew the 3 screws (1) on the opposite side of the box and extract the plate (2) that prevents you from taking out the input shaft.

NOTE To do this, operate from the bottom without making the assembly turn since when the plate gets detached the input shaft would fall.


Aquila Trucks Centres

Figure 38

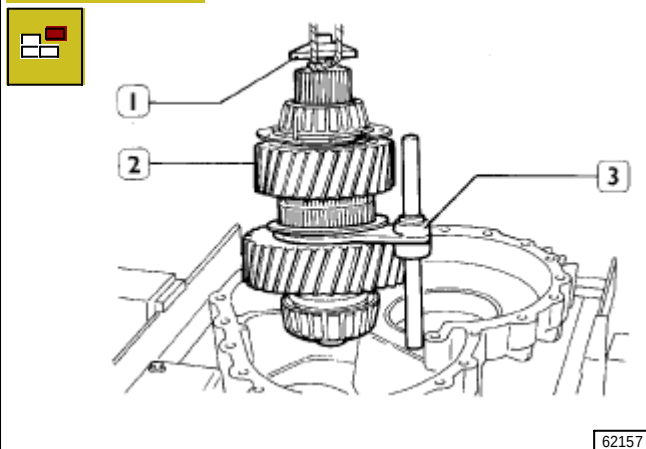

Screw the screw and washer (1) onto the input shaft (2). Using a rope and the lift, extract the input shaft (2) together with the drive fork (3) from the box.

Figure 39

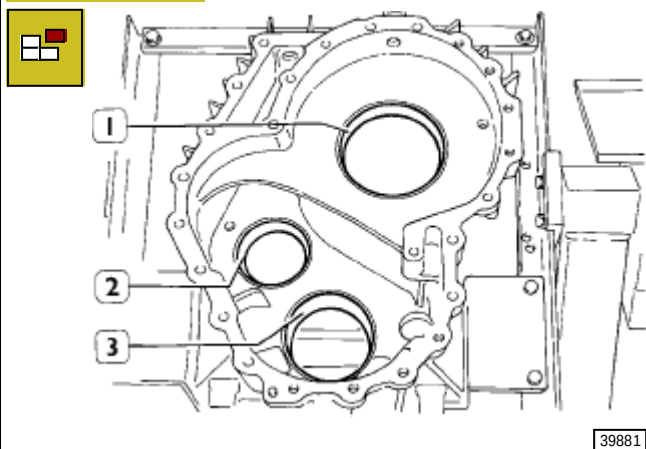

Using an appropriate drift, extract the outer rings (1 - 2 - 3) of the bearings from the box.

CLEANING AND CHECKING PARTS


After removing the reduction gear - divider, remove the shafts and the epicyclic divider assembly and thoroughly clean all the parts.

Check that the parts show no sign of too much wear, seizure or cracking.

Always replace the seals with each removal.


REPLACING OUTPUT SHAFT COVER SEALS

Figure 40

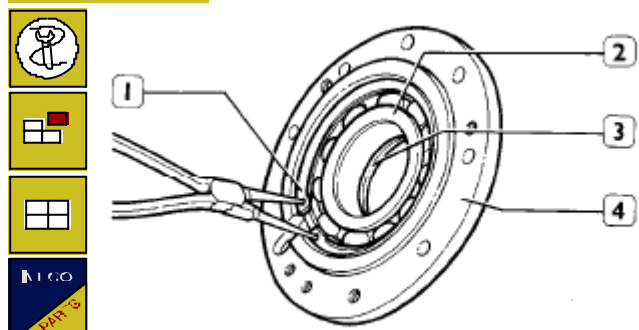

To replace the seal (3) of the cover (4) of the rear output shaft, you need to take off the seeger ring (1) and extract the bearing (2). The seal is fitted on with the keying device 99374253.


Figure 41

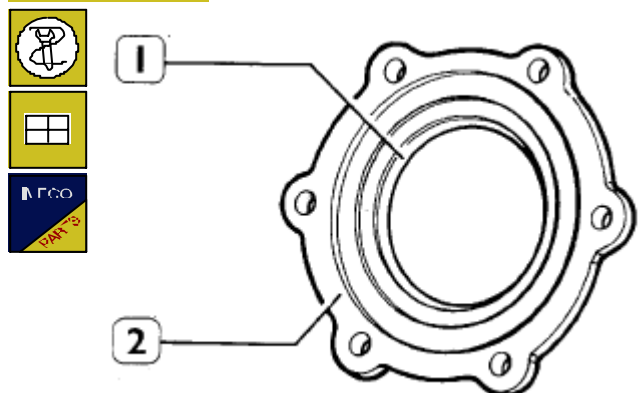

The seal (1) for the cover (2) of the front output shaft is fitted using the keying device 99370362 and the grip 99370006.

REPLACING INPUT SHAFT COVER SEAL

Figure 42

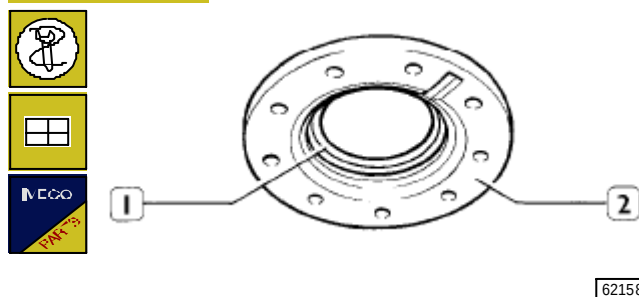


The seal (1) for the cover (2) of the input shaft is fitted using the keying device 99374253.

Aquila Trucks Centres

**INPUT SHAFT
Removal**

Figure 43

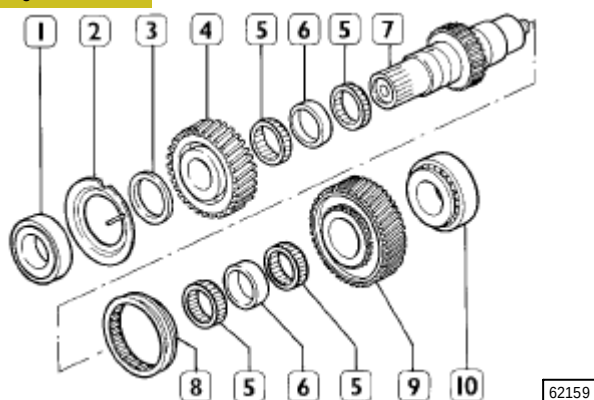
**COMPONENT PARTS OF THE INPUT SHAFT**

1. Bearing - 2. Plate - 3. Spacer ring - 4. Gear - 5. Roller bearings - 6. Spacer ring - 7. Shaft - 8. Sliding sleeve - 9. Gear - 10. Bearing.

62159

NOTE The bearings (1, Figure 44 and Figure 45) are removed using a hydraulic press.


Figure 44

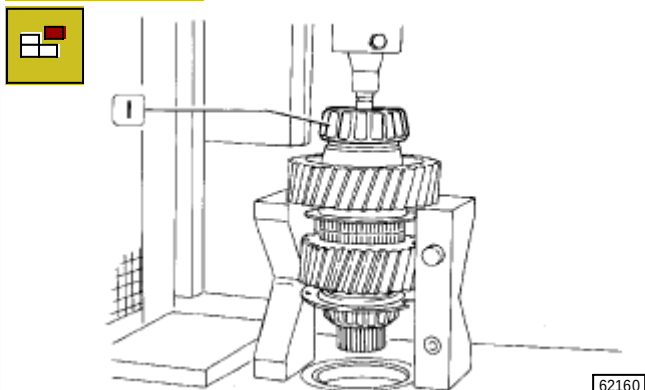

62160

After taking out the bearing (1), manually extract the gear (9, Figure 43), roller bearings (5, Figure 43), spacer ring (6, Figure 43) and sliding sleeve (8, Figure 43).

Figure 45

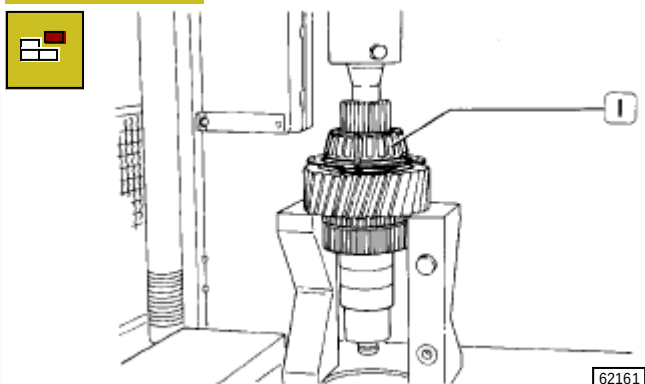


62161

Take out the bearing (1), too, and extract the plate (2, Figure 82), spacer ring (3, Figure 43), gear (4, Figure 43), roller bearings (5, Figure 43) and spacer ring (6, Figure 43).

Fitting

Figure 46

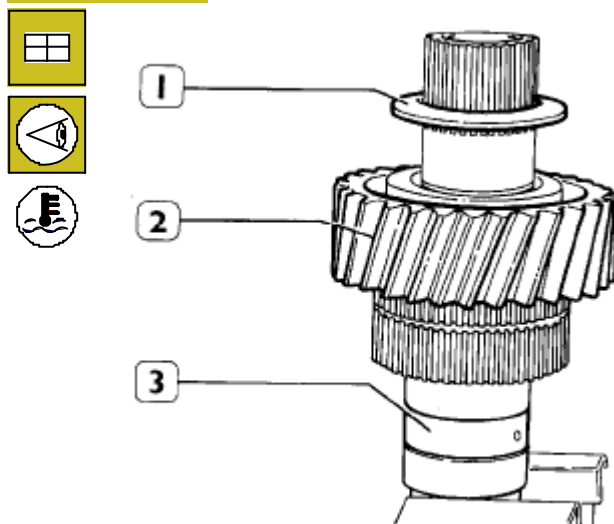


39894

Tighten the shaft (3) in a vice with the grooved part facing upwards.

Mount the roller bearings (5, Figure 43) with the spacer (6, Figure 43), key on the gear (2, Figure 46) with the coupling toothing facing downwards. Mount the spacer ring (1) and the plate (2, Figure 43).

Heat the internal ring of the roller bearing (1, Figure 43) to 80 - 90°C and mount it on the shaft.

Figure 47

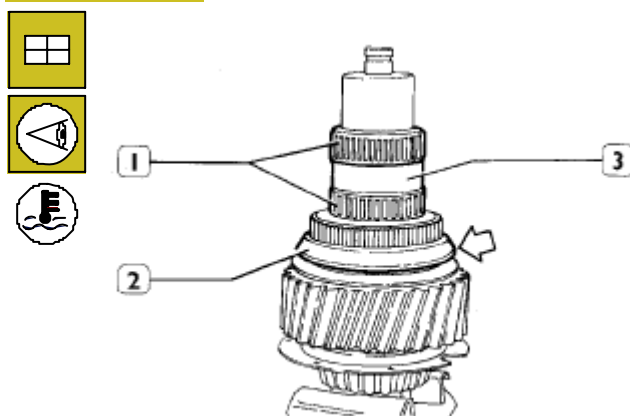

62162

Turn over the shaft and grip it in a vice.


Mount the sliding sleeve (2) with the flaring (arrow) facing upwards. Mount the roller bearings (1) and the spacer (3). Mount the gear (9, Figure 43) with the coupling toothing facing the sliding sleeve.

Heat the internal ring of the bearing (10, Figure 43) to 80 - 90 °C and mount it on the shaft.

Aquila Trucks Centres


EPICYCLIC TORQUE TRANSFER UNIT
Removal

Figure 48

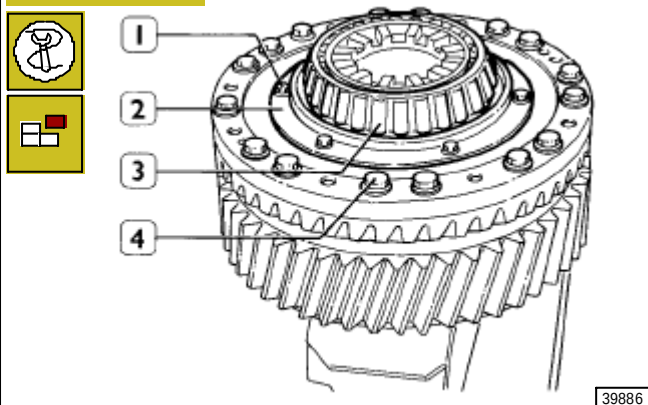


Unscrew the screws (1) and remove the oil seal (2). Using the bridge 99341003, brackets 99341009 and clamp 99341015 and the reaction block 99345049, take out the bearing (3), then unscrew the screws (4).

Figure 49

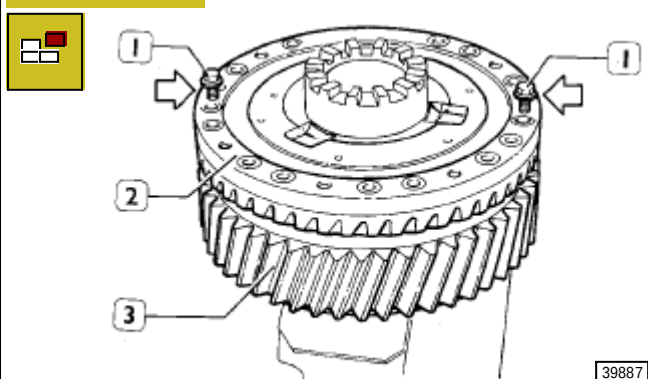

Using 2 screws (1) screwed into the holes shown by the arrows, extract the planet wheel holder (2) from the ring gear (3).


Figure 50

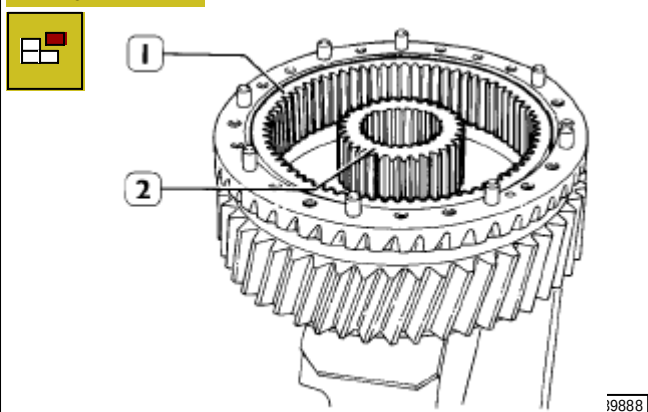

Remove the sun wheel (2) and take out the rear drive output shaft (1).


NOTE On versions with a division ratio of 1:4, used on 6x6 models, there is no sun wheel as the toothing is on the front drive output shaft.

Figure 51

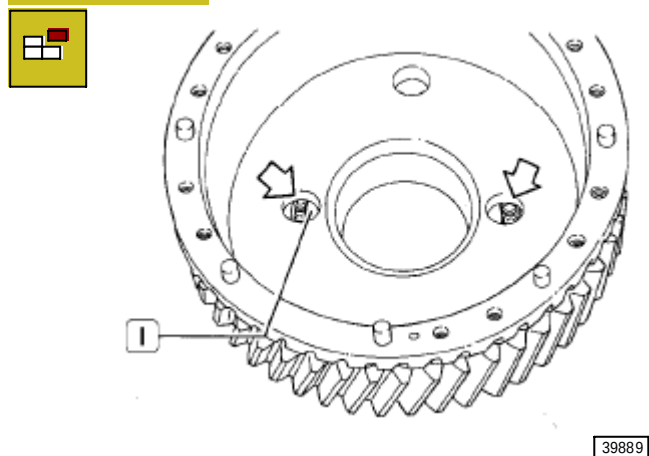


Using an appropriate drift through the holes (arrows), take the bearing (1) out.

Figure 52

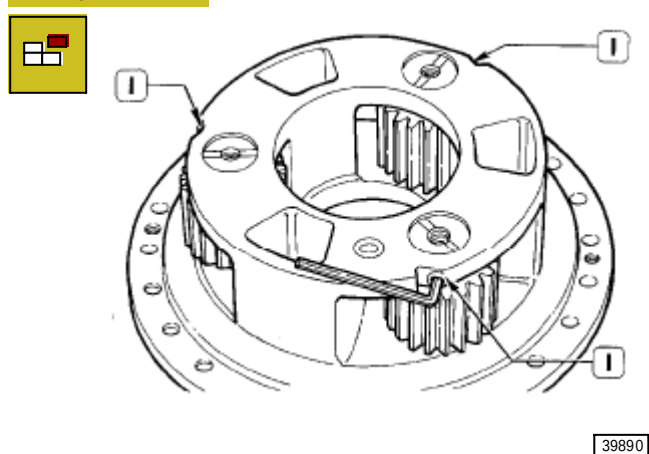

Using an Allen wrench, unscrew the 3 grub screws (1).

Figure 53

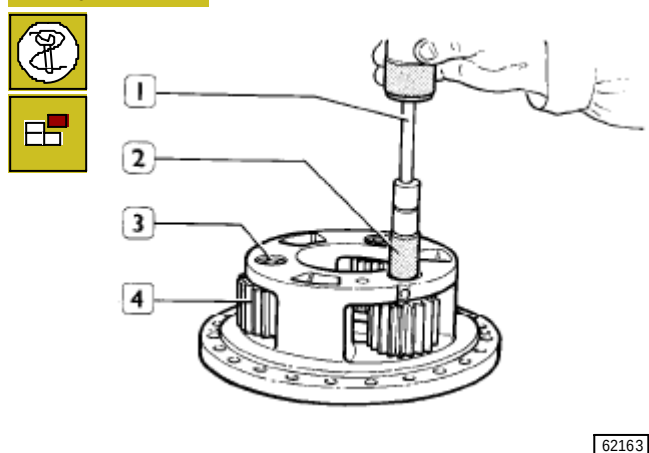


Using a puller with slide-hammer 99340205 (1) together with pin 99342143 (2), take out the shafts (3) for the gears (4).

Aquila Trucks Centres


Fitting

Figure 54

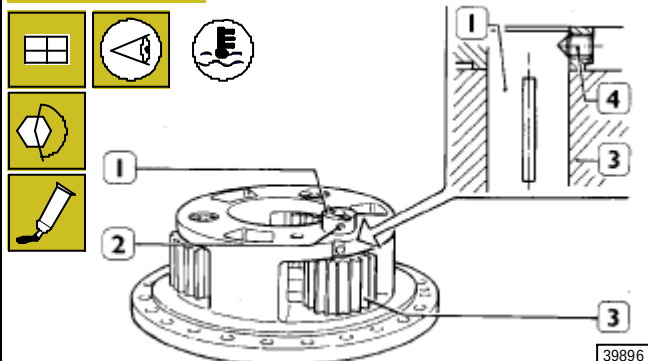


On the planet wheel holder, mount the gears (3), key on the pin (1) so that the recess (2) coincides with the hole for the grub screw (4). Apply LOCTITE AVX on the grub screw (4) and lock it to the required torque. Repeat these steps for the other pins. Turn the planet wheel holder over and, after heating it to 80 - 90°C, key on the internal ring of the bearing.

Figure 55

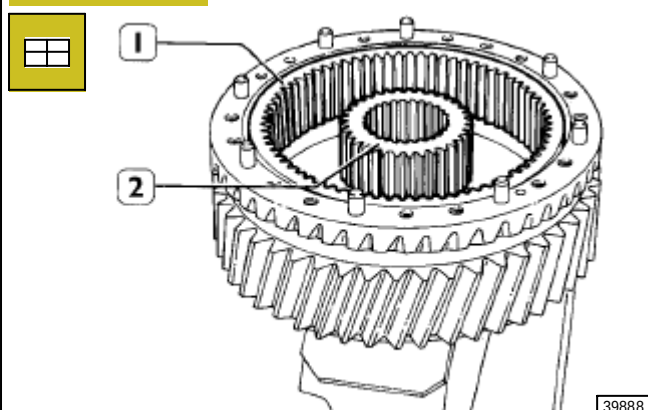


Mount the rear drive output shaft (1) and the sun wheel (2) (if applicable) on the ring gear and put the assembly in a vice.

Figure 56

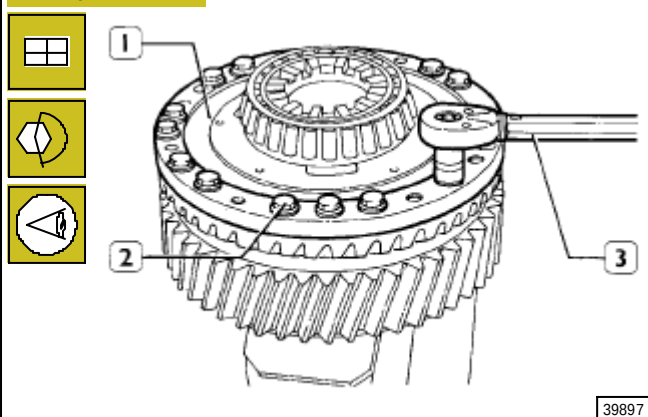

Mount the planet wheel holder assembly (1), making the centring pins coincide. Screw down the screws (2) and lock them with a torque wrench (3) to the required torque.


Figure 57

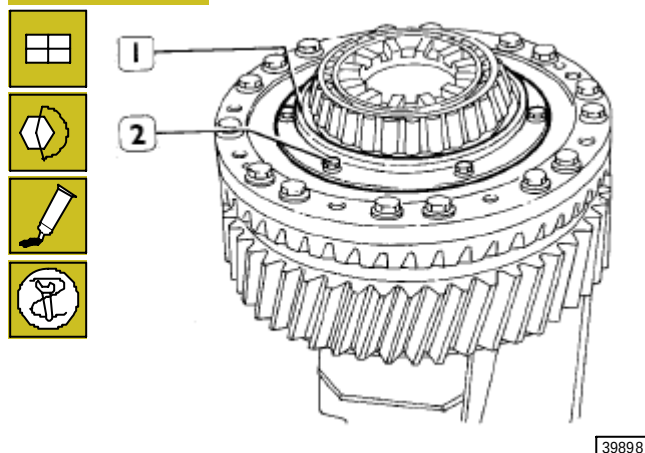

Fit on the oil seal (1). Apply LOCTITE AVX on the screws (2) and screw them down to the required torque. Turn over the assembly and key on the bearing after heating the middle ring to 80 - 90°C.

COUNTERSHAFT Removal

Figure 58

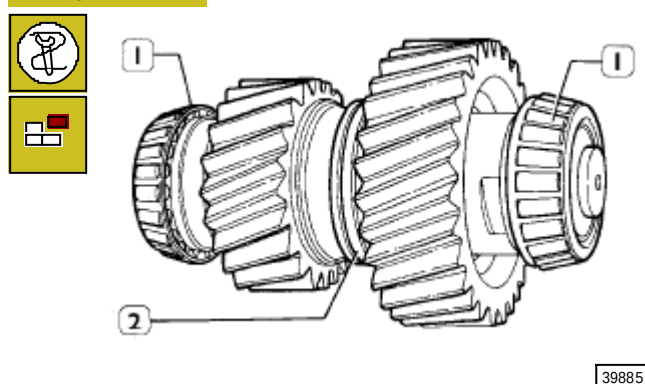

Removing the bearings (1) of the countershaft (2) presents no difficulty as it is a destructive operation.

Fitting


Fit the new bearings (1) on the countershaft after heating the internal rings to 80 - 90°C.



Aquila Trucks Centres

ASSEMBLING THE TRANSFER BOX


Figure 59

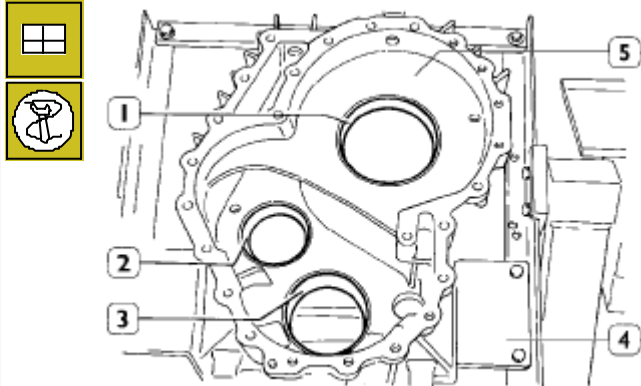

62366

Put the box (5) on the stand 99322205 with the brackets 99371051 (4). Using an appropriate drift, key on the outer rings (1 – 2 – 3) of the bearings.


Figure 60

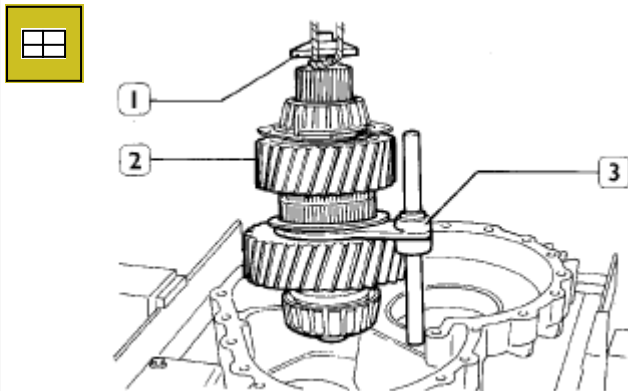

62157

Screw the screw and washer (1) onto the input shaft. Using a rope and the lift, mount the shaft (2) together with the drive fork (3) in the box.


Figure 61

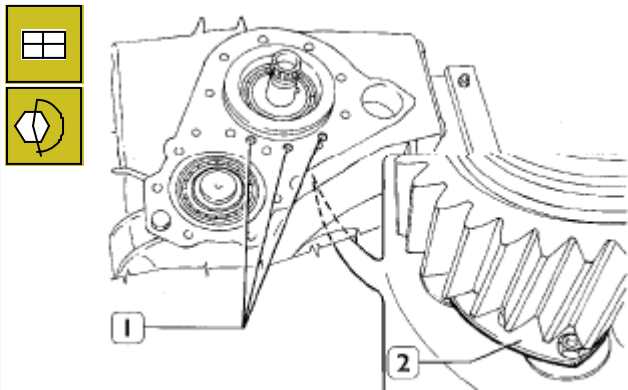

62156

Insert the plate (2) and lockit by screwing down the 3 screws (1) on the opposite side of the box to the required torque, working from the bottom without making the assembly turn.


Figure 62

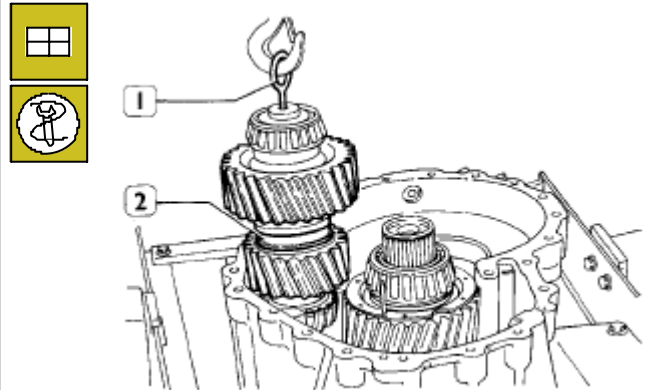

62155

Using the eyebolt 99366067 (1), mount the countershaft (2).


Figure 63

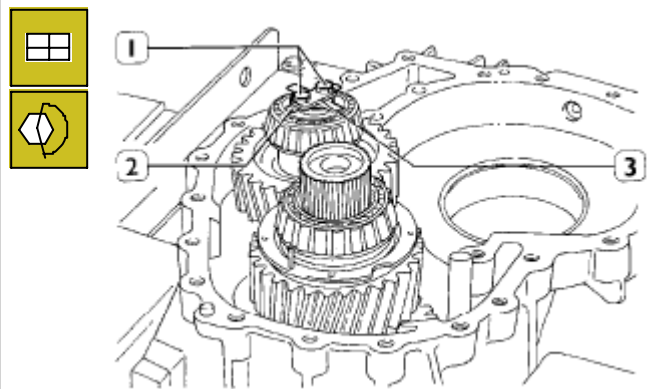

62154

Mount the phonic wheel (1) and the safety plate (3). Screw down the screws (2) to the required torque and bend back the safety plate.

Figure 64

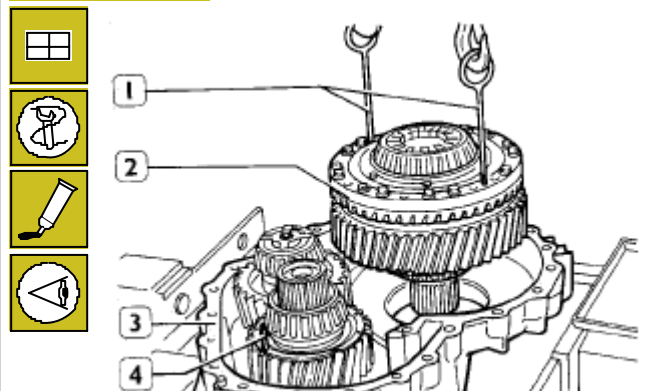


62164

Using the eyebolts 99370565 (1), mount the epicyclic divider (2) in the box. Put LOCTITE 410 sealant on the supporting surface (3). Position the pin (4) of the plate in correspondence with the respective hole on the box.


Aquila Trucks Centres

Figure 65

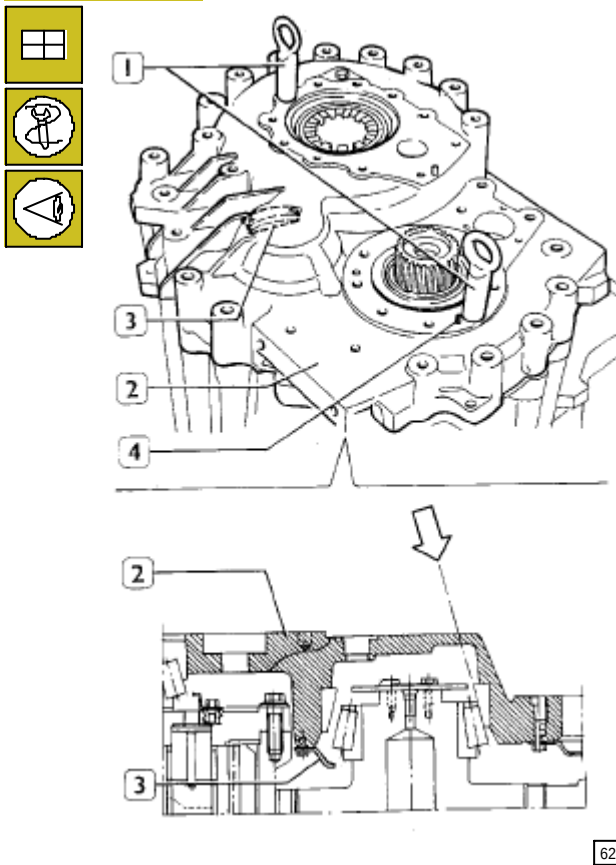


Using the rings 99360502 (1), hooks and a rope, insert the half box (2), following the direction of the arrow to insert the pin (4) of the plate (3) under the bearing of the middle shaft.

Figure 66

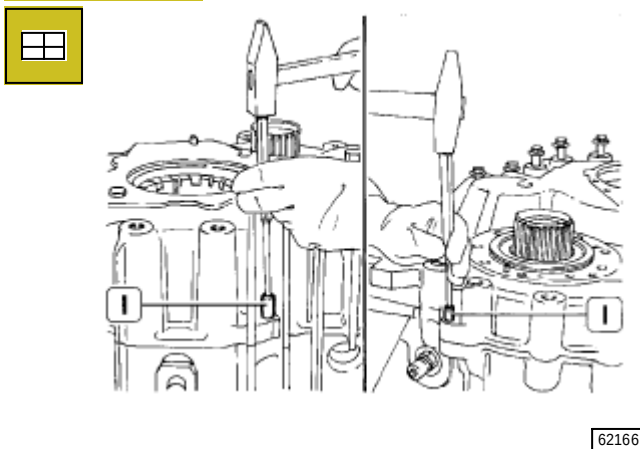


Using an appropriate punch, insert the two centring pins (1).

Figure 67

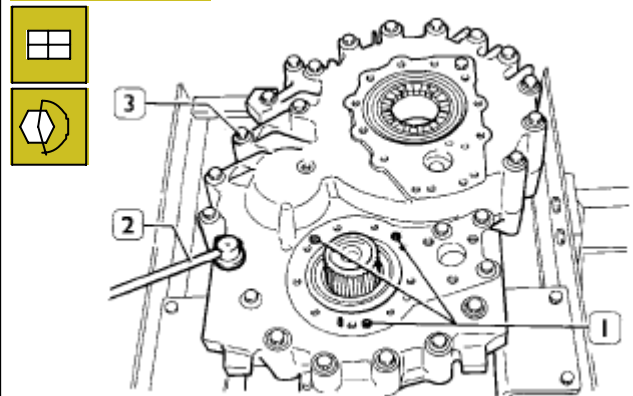

Screw down the 3 socket-head screws (1) fixing the internal plate.
Using a torque wrench (2), tighten the screws (3) fixing the half box to the required torque.

Figure 68

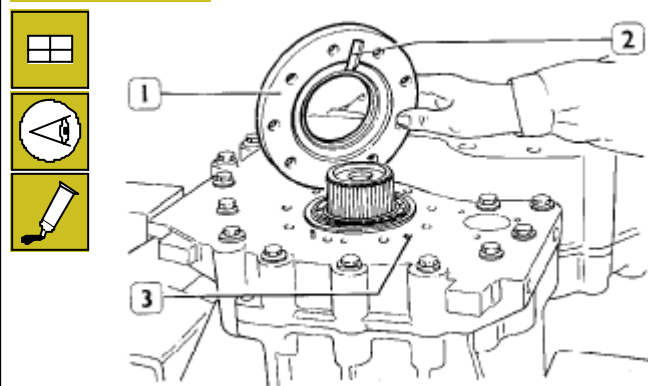


Put on LOCTITE 510 sealant.
Position the cover (1) together with the seal.

NOTE The oil passage (2) has to be positioned in correspondence with the respective hole (3).

Aquila Trucks Centres


Figure 69

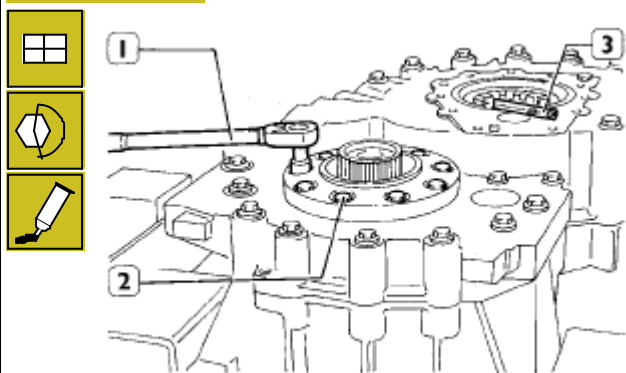

39903

Lock the screws (2) of the cover to the required torque using a torque wrench (1). Position the safety plate (3). Put LOCTITE AVX on the screws and lock them to the required torque.


Figure 70

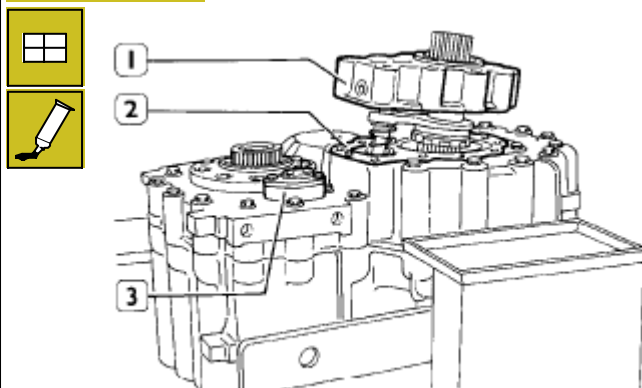

39904

Mount on the cover (3) together with the driving piston and internal spring. Spread the seat (2) with LOCTITE 510, then fit on the cover (1) together with the divider coupling drive fork and shaft.


Figure 71

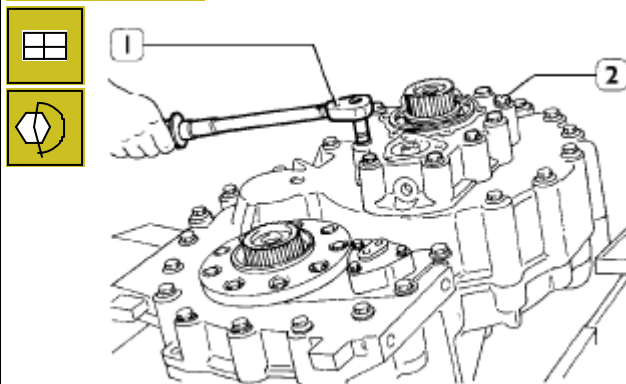

39905

Tighten the screws (2) with a torque wrench (1) to the required torque.


Figure 72

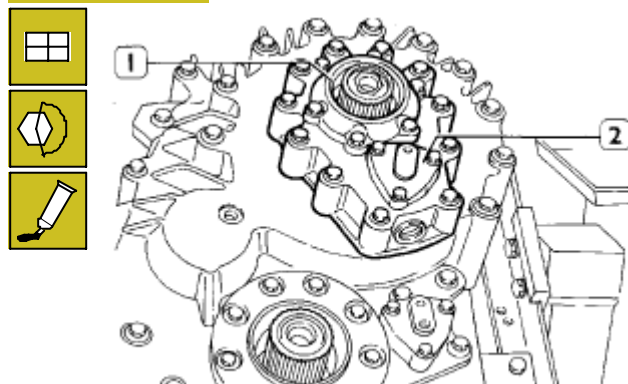

62149

Mount the cover (2) together with the driving piston. Spread on LOCTITE 510, fit on the cover (1) and tighten the screws to the required torque.

Figure 73

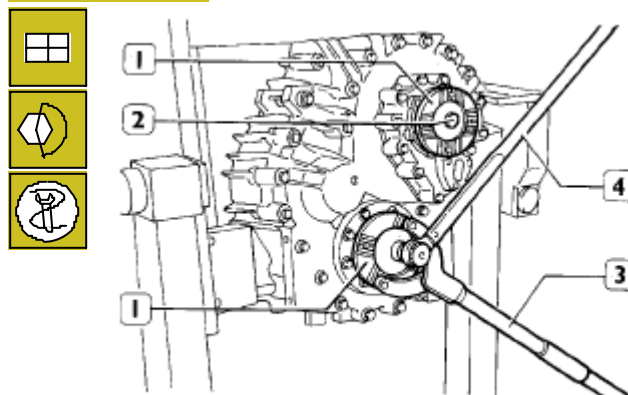

39906

Key on the two flanges (1), put on the washers and, with the reaction lever 99370317 (3) and torque wrench (4), tighten the screws (2) to the required torque.

Aquila Trucks Centres


ADJUSTING THE BEARING PRE-LOAD

The pre-load of the input shaft, countershaft and output shaft is adjusted as follows:

Input shaft

- Make sure the external race of the bearing driven into the housing on the front side has reached its stop.
- Bed down the shaft into its seat by applying an axial load of 50 kg on the external ring of the rear bearing while turning the shaft at the same time.

Figure 74

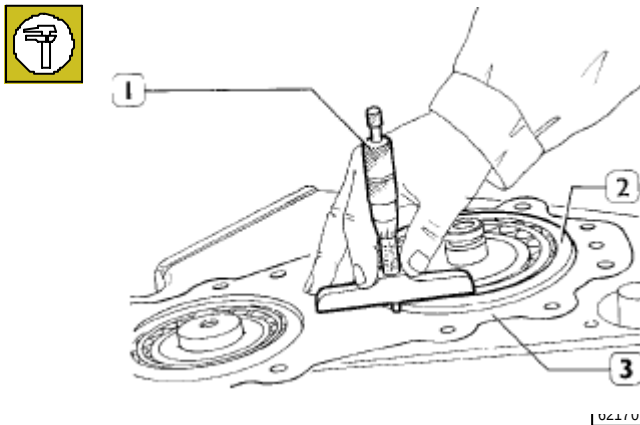


- Using a depth micrometer (1), measure the protrusion of the external race (2) of the bearing with respect to the face of the box (3) at two opposite points at least, while maintaining the axial load.

The distance A measured has to be between:

TC 1800	6.3 ÷ 7.5 mm;
TC 2200	10.5 ÷ 11.5 mm.

Figure 75

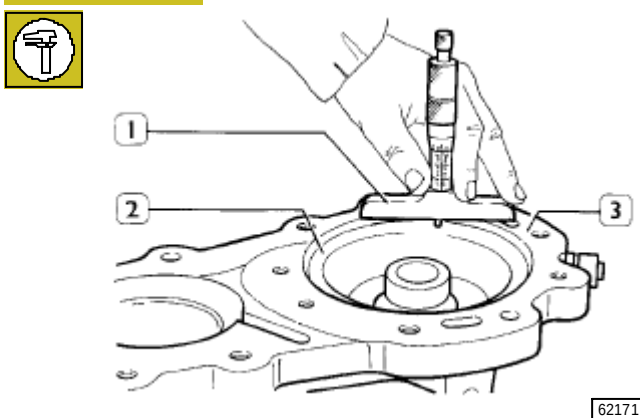

- Using a depth micrometer (1), measure the depth of the seat (2) of the rear cover with respect to the face.

The distance B measured has to be between:

TC 1800	8.5 ÷ 8.6 mm;
TC 2200	12.5 ÷ 12.6 mm.

The difference between the two measurements made gives the thickness S_e of the adjustment rings; add the required pre-load to this value.


$$S_e = (A - B) + 0.05 \text{ mm}$$

The thicknesses always have to be selected by rounding up to get a total pre-load of from 0.05 to 0.10 mm.

Countershaft

- Make sure the external race of the bearing driven into the housing on the front side has reached its stop.
- Bed down the shaft into its seat by applying an axial load of 50 kg on the external ring of the rear bearing while turning the shaft at the same time.

Figure 76

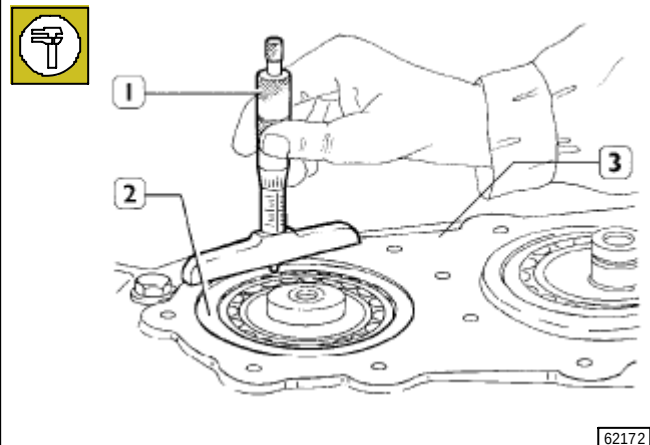

- Using a depth micrometer (1), measure the protrusion of the external race (2) of the bearing with respect to the face of the box (3) at two opposite points at least, while maintaining the axial load.

The distance C measured has to be between:

$$2.5 \text{ and } 3.4 \text{ mm}$$

To this measurement, add the required pre-load to get the thickness S_r :

$$S_r = C + 0.05 \text{ mm}$$

The thicknesses always have to be selected by rounding up to get a total pre-load of from 0.05 to 0.10 mm.


Aquila Trucks Centres

Output shaft

- Make sure the external race of the bearing driven into the housing on the front side has reached its stop.
- Bed down the shaft into its seat by applying an axial load of 50 kg on the external ring of the rear bearing while turning the shaft at the same time.

TC 1800

Figure 77

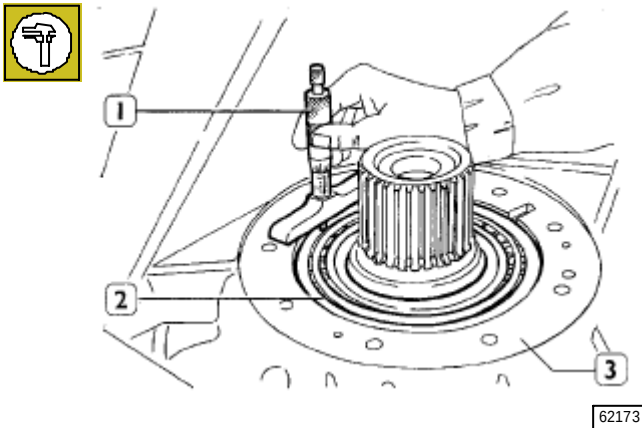


- Using a depth micrometer (1), measure the protrusion of the external race (2) of the bearing with respect to the face of the box (3) at two opposite points at least, while maintaining the axial load.

The distance D measured has to be between:

5.0 and 6.8 mm

Figure 78

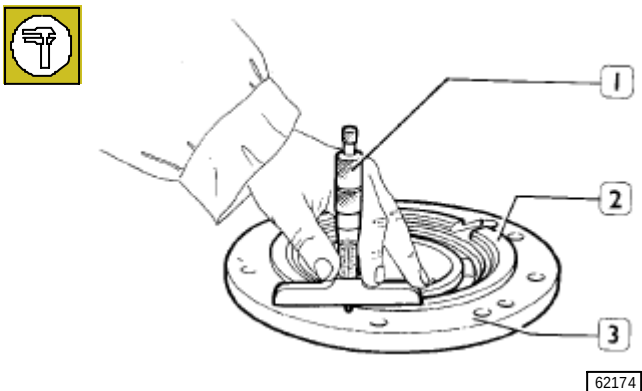

- Using a depth micrometer (1), measure the protrusion of the seat (2) of the rear cover with respect to the face (3).

The distance E measured has to be between:

3.9 and 4.0 mm


The difference between the two measurements made gives the thickness S_u of the adjustment rings; add the required pre-load to this value.

$$S_u = (D - E) + 0.05 \text{ mm}$$

The thicknesses always have to be selected by rounding up to get a total pre-load of from 0.05 to 0.10 mm.

TC 2200

Figure 79

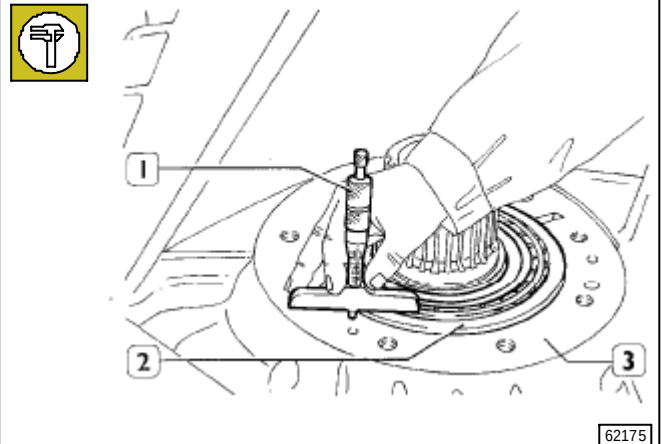


- Using a depth micrometer (1), measure the protrusion of the external race (2) of the bearing with respect to the face of the box (3) at two opposite points at least, while maintaining the axial load.

The distance D measured has to be between:

5.2 and 7.0 mm

Figure 80

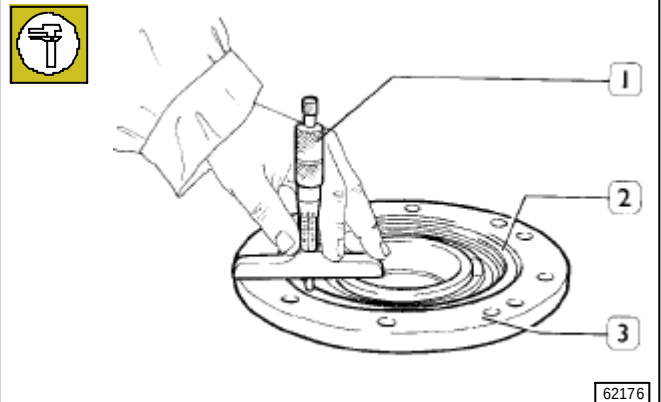

- Using a depth micrometer (1), measure the depth of the seat (2) of the rear cover with respect to the face (3).

The distance E measured has to be between:

8.0 and 8.1 mm

The difference between the two measurements made gives the thickness S_u of the adjustment rings; add the required pre-load to this value.


$$S_u = (E - D) + 0.05 \text{ mm}$$

The thicknesses always have to be selected by rounding up to get a total pre-load of from 0.05 to 0.10 mm.

Aquila Trucks Centres

COMPLETING ASSEMBLY

Figure 81

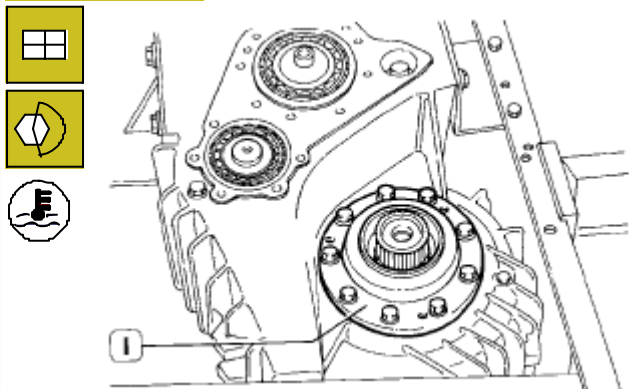


62177

Put on the adjustment rings of the thickness calculated beforehand. Then key on the cover together with the bearing, after heating to 80 - 90°C, and tighten the screws to the required torque.

Version without P.T.O.

Figure 82

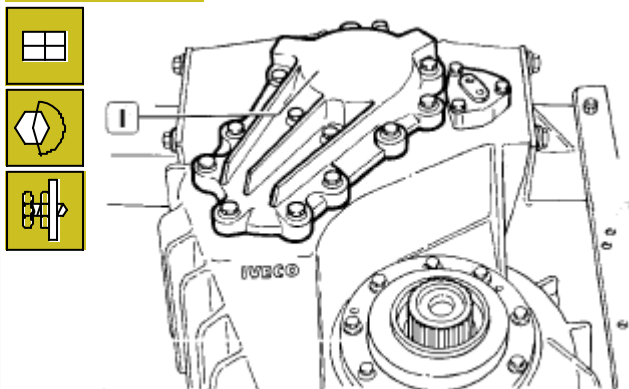

62178

Put on the adjustment rings of the thickness calculated beforehand. Then fit on the cover (1) and tighten the screws to the required torque.

Mount the push-rod switches to engage normal and reduced speeds and divider locking and the vehicle speed pulse transmitter and set them as described on the following page.

Version with P.T.O.

Figure 83




62179

Put on the adjustment rings of the thickness calculated beforehand. Then fit on the cover (1) together with the spring (2).

NOTE Fit on the cover paying attention to the alignment of the slot (3) with the grub screw (4) on the shaft.

Figure 84

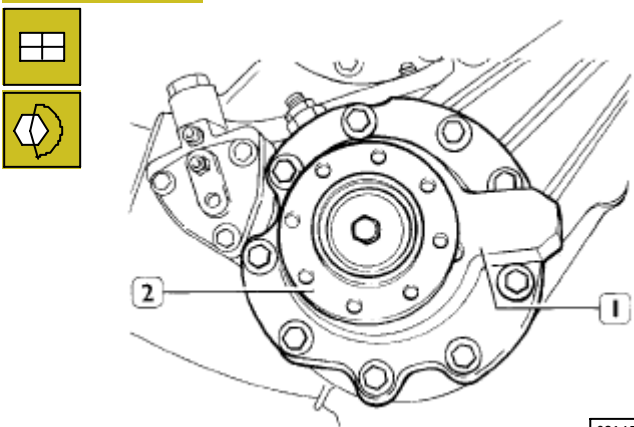

62145


Mount the power take-off (1) together with the flange (2) and drive fork. Then tighten the fixing screws to the required torque.

Mount the push-rod switches to engage normal and reduced speeds (if applicable), divider locking and to engage the P.T.O. and the vehicle speed pulse transmitter and set them as described on the following page.

Aquila Trucks Centres

Both versions

Figure 85

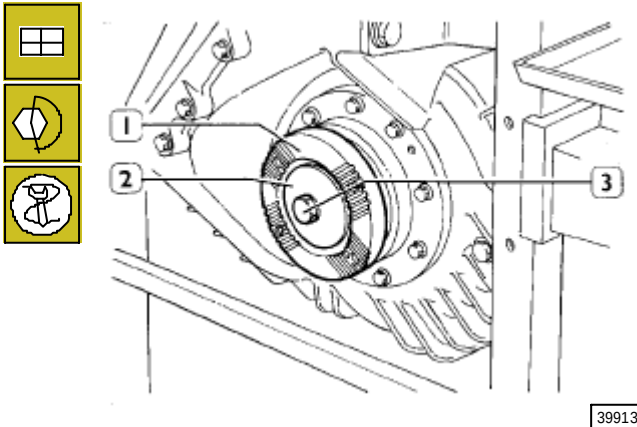

Key on the flange (1) and put on the washer (2). Using the reaction lever 99370317 and a torque wrench, tighten the screw (3) to a torque of 500 ± 50 Nm.


Adjusting push-rod switch signalling interaxle locking and P.T.O. engagement (if applicable)



Screw down the switch to close the electric contacts, unscrew it by one turn, then lock the lock nut to the required torque.

Adjusting pulse transmitter

Figure 86

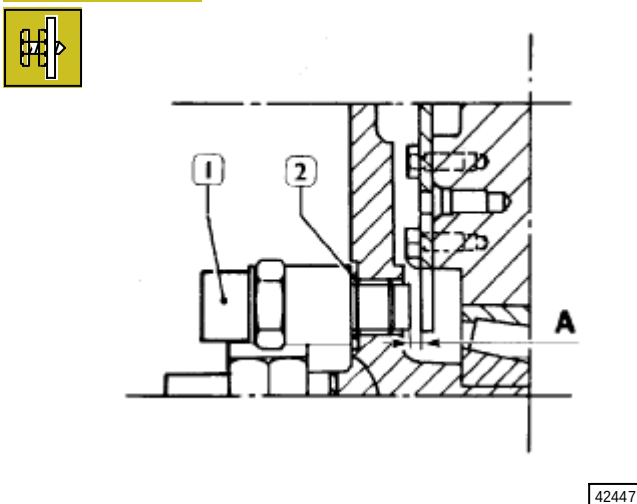

Select the adjustment ring (2) so as to obtain the distance A of 2 - 2.8 mm when fitting the pulse transmitter (1).

Replenishing oil

Screw down the oil drain plugs.

Add the appropriate type of oil to the assembly (see table on page 3) by following the procedure described on page 24.

Aquila Trucks Centres

Aquila Trucks Centres

SECTION 7

5056 Propeller shafts


	Page
MAIN DATA	3
- Vehicles 4x2	5
- Vehicles 6x4	6
- Vehicles 8x4x4	8
- Vehicles 4x4	9
- Vehicles 6x6	10
- Vehicles 8x8x4	10
TROUBLESHOOTING	11
- Main operating faults	11
TIGHTENING TORQUES	12
TOOLS	12
PROPELLER SHAFT REMOVAL AND REFITTING	13
- Removal	13
- Refitting	13
REPAIRS	13
- Disassembling the universal joint	13
- Assembling the universal joint	13
CHECKING PROPELLER SHAFTS ON VEHICLES	14

Aquila Trucks Centres

Aquila Trucks Centres

MAIN DATA


Figure 1

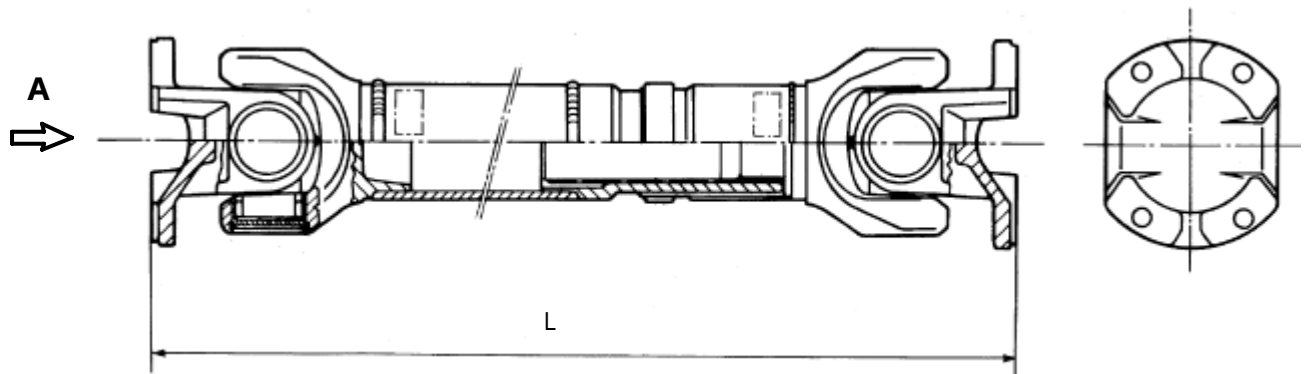

39056

SLIDING PROPELLER SHAFT

Figure 2

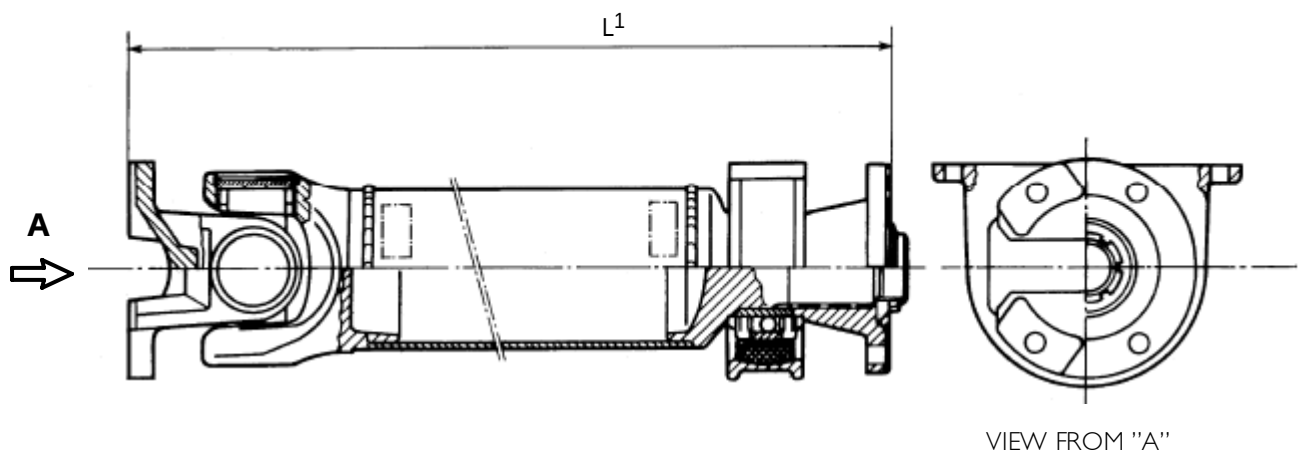

VIEW FROM "A"

39057

PROPELLER SHAFT FOR CONNECTION WITH SPRING BEARING

Universal joint working angle: 25°

Aquila Trucks Centres

MAIN DATA

Description	mm
Assembly (radial) clearance of joint in seats on fork	0.03
Maximum eccentricity of propeller shaft	
- measured in the middle	0.4
- measured at the end	0.25
- measured on the shank	0.15

Aquila Trucks Centres

Vehicles 4x2

Wheelbase		3500	3800		4200		4500		4800		5100	
Model	Gearbox type	L mm min. max.	L1 mm	L mm min. max.	L1 mm	L mm min. max.	L1 mm	L mm min. max.	L1 mm	L mm min. max.	L1 mm	L mm min. max.
190T 31/33	ZF 9 S 1310 T.O.	-	935	1225 ÷ 1335	1205	1350 ÷ 1460	1655	1175 ÷ 1285	1655	1175 ÷ 1285	1880	1575 ÷ 1685
190T 31/33	ZF 9 S 1310 T.O. + Multipower	-	-	1975 ÷ 2085	1025	1350 ÷ 1460	1475	1175 ÷ 1285	1700	1250 ÷ 1360	1700	1575 ÷ 1685
190T 33/36	ZF 16 S 1620 T.D.	-	-	2050 ÷ 2160	1150	1325 ÷ 1435	1595	1150 ÷ 1260	1820	1220 ÷ 1330	1820	1550 ÷ 1660
190T 33/36	ZF 16 S 1620 T.D. + Multipower	-	-	1850 ÷ 1960	-	2300 ÷ 2410	1420	1150 ÷ 1260	1645	1220 ÷ 1330	1645	1550 ÷ 1660
190T 41/45/50	ZF 16 S 2220 T.O. ZF 16 S 2520 T.O.	-	-	1875 ÷ 1985	-	2275 ÷ 2385	1420	1150 ÷ 1260	-	-	1645	1550 ÷ 1660
190T 41/45/50	ZF 16 S 2220/2520 T.O. + Multipower	-	-	1700 ÷ 1810	-	2100 ÷ 2210	1240	1150 ÷ 1260	-	-	1465	1550 ÷ 1660
190T 41/45/50	ZF 12 AS 2330 T.O.	-	-	1975 ÷ 2085	-	2400 ÷ 2510	-	2670 ÷ 2780	-	-	-	3290 ÷ 3400
190T 41/45/50	ZF 12 AS 2330 T.O. + Multipower	-	-	1800 ÷ 1910	-	2200 ÷ 2310	-	2490 ÷ 2600	-	-	-	3110 ÷ 3220
400T 33/36	ZF 16 S 1620 T.D.	1750 ÷ 1860	-	2050 ÷ 2160	-	-	-	-	-	-	-	-
400T 33/36	ZF 16 S 1620 T.D. + Multipower	1550 ÷ 1660	-	1850 ÷ 1960	-	-	-	-	-	-	-	-
400T 41/45/50	ZF 16 S 2220 T.O. ZF 16 S 2520 T.O.	1550 ÷ 1660	-	1875 ÷ 1985	-	-	-	-	-	-	-	-
400T 41/45/50	ZF 16 S 2220/2520 T.O. + Multipower	1375 ÷ 1485	-	1700 ÷ 1810	-	-	-	-	-	-	-	-
400T 41/45/50	ZF 12 AS 2330 T.O.	1675 ÷ 1785	-	1975 ÷ 2085	-	-	-	-	-	-	-	-
400T 41/45/50	ZF 12 AS 2330 T.O. + Multipower	1475 ÷ 1585	-	1800 ÷ 1910	-	-	-	-	-	-	-	-

Aquila Trucks Centres

Vehicles 6x4

Wheelbase		3200		3500		3820		4200		
		Between gearbox and intermediate axle	Between axles	Between gearbox and intermediate axle	Between axles	Between gearbox and intermediate axle	Between axles	Between gearbox and intermediate axle	Between axles	
Model	Gearbox type	L mm min. max.	L mm min. max.	L mm min. max.	L mm min. max.	L mm min. max.	L mm min. max.	L1	L mm min. max.	L mm min. max.
J 260T 31/33/B	ZF 9 S 1310 T.O.	1450 ÷ 1560	830 ÷ 940	1775 ÷ 1885	830 ÷ 940	2025 ÷ 2135	830 ÷ 940	-	-	830 ÷ 940
J 260T 31/33/B	ZF 9 S 1310 T.O. + Multipower	1275 ÷ 1385	830 ÷ 940	1575 ÷ 1685	830 ÷ 940	1850 ÷ 1960	830 ÷ 940	-	-	830 ÷ 940
J 260T 31/33	ZF 9 S 1310 T.O.	-	-	-	-	-	-	960	1475 ÷ 1585	830 ÷ 940
J 260T 31/33	ZF 9 S 1310 T.O. + Multipower	-	-	-	-	-	-	780	1475 ÷ 1585	830 ÷ 940
Y 260T 31/33/B	ZF 9 S 1310 T.O.	1375 ÷ 1485	670 ÷ 830	1700 ÷ 1810	670 ÷ 830	1950 ÷ 2060	670 ÷ 830	-	2350 ÷ 2460	830 ÷ 940
Y 260T 31/33/B	ZF 9 S 1310 T.O. + Multipower	1200 ÷ 1310	670 ÷ 830	1525 ÷ 1635	670 ÷ 830	1775 ÷ 1885	670 ÷ 830	-	2150 ÷ 2260	830 ÷ 940
Y 260T 31/33	ZF 9 S 1310 T.O.	-	-	-	-	-	-	960	1400 ÷ 1510	670 ÷ 830
Y 260T 31/33	ZF 9 S 1310 T.O. + Multipower	-	-	-	-	-	-	780	1400 ÷ 1510	670 ÷ 830
J 260T 33/36	ZF 12 AS 1420 T.D. ZF 12 AS 1930 T.D.	1375 ÷ 1485	830 ÷ 940	1675 ÷ 1785	830 ÷ 940	1950 ÷ 2060	830 ÷ 940	-	2350 ÷ 2460	830 ÷ 940
J 260T 33/36	ZF 12 AS 1420 T.D. } ZF 12 AS 1930 T.D. }+Multipower	1200 ÷ 1310	830 ÷ 940	1525 ÷ 1635	830 ÷ 940	1775 ÷ 1885	830 ÷ 940	-	2200 ÷ 2310	830 ÷ 940
J 260T 33/36	ZF 16 S 1620 T.D.	1350 ÷ 1460	830 ÷ 940	1675 ÷ 1785	830 ÷ 940	1950 ÷ 2060	830 ÷ 940	-	2350 ÷ 2460	830 ÷ 940
J 260T 33/36	ZF 16 S 1620 T.D. + Multipower	1175 ÷ 1285	830 ÷ 940	1475 ÷ 1585	830 ÷ 940	1750 ÷ 1860	830 ÷ 940	-	2150 ÷ 2260	830 ÷ 940
Y 260T 33/36/B	ZF 16 S 1620 T.D.	1275 ÷ 1385	670 ÷ 830	1600 ÷ 1710	670 ÷ 830	1875 ÷ 1985	670 ÷ 830	-	-	-
Y 260T 33/36/B	ZF 16 S 1620 T.D. + Multipower	1100 ÷ 1210	670 ÷ 830	1400 ÷ 1510	670 ÷ 830	1700 ÷ 1810	670 ÷ 830	-	-	-
Y 260T 33/36	ZF 16 S 1620 T.D.	-	-	-	-	-	-	-	2275 ÷ 2385	670 ÷ 830
Y 260T 33/36	ZF 16 S 1620 T.D. + Multipower	-	-	-	-	-	-	-	2100 ÷ 2210	670 ÷ 830
260/380T 41/45/50T	ZF 16 S 2220/2520 T.O. +Multipower	950 ÷ 1060	775 ÷ 955	1275 ÷ 1385	775 ÷ 955	1525 ÷ 1635	775 ÷ 955	-	1950 ÷ 2060	775 ÷ 955
260/380T 41/45/50	ZF 16 S 2220/2520 T.O.	1125 ÷ 1235	775 ÷ 955	1450 ÷ 1560	775 ÷ 955	1700 ÷ 1810	775 ÷ 955	-	2100 ÷ 2210	775 ÷ 955
260/380T 41/45/50/P	ZF 12 AS 2330 T.O.	1225 ÷ 1335	775 ÷ 955	1550 ÷ 1660	775 ÷ 955	1800 ÷ 1910	775 ÷ 955	-	2225 ÷ 2335	775 ÷ 955
260/380T 41/45/50/P	ZF 12 AS 2330 T.O.+Multipower	1050 ÷ 1160	775 ÷ 955	1375 ÷ 1485	775 ÷ 955	1625 ÷ 1735	775 ÷ 955	-	2050 ÷ 2160	775 ÷ 955
f 380T 36	ZF 16 S 1620 T.D.	1300 ÷ 1410	775 ÷ 955	1625 ÷ 1735	775 ÷ 955	1900 ÷ 2010	775 ÷ 955	-	2300 ÷ 2410	775 ÷ 955
f 380T 36	ZF 16 S 1620 T.D.+Multipower	1125 ÷ 1235	775 ÷ 955	1425 ÷ 1535	775 ÷ 955	1700 ÷ 1810	775 ÷ 955	-	2100 ÷ 2210	775 ÷ 955
f 380T 36	ZF 12 AS 1930 T.D.	1325 ÷ 1435	775 ÷ 955	1650 ÷ 1760	775 ÷ 955	1900 ÷ 2010	775 ÷ 955	-	2300 ÷ 2410	775 ÷ 955
f 380T 36	ZF 12 AS 1930 T.D.+Multipower	1125 ÷ 1235	775 ÷ 955	1475 ÷ 1585	775 ÷ 955	1725 ÷ 1835	775 ÷ 955	-	2150 ÷ 2260	775 ÷ 955
J 440T 33/36T	ZF 16 S 1620 T.D.	1350 ÷ 1460	830 ÷ 940	1675 ÷ 1785	830 ÷ 940	-	-	-	-	-
J 440T 33/36T	ZF 16 S 1620 T.D.+Multipower	1175 ÷ 1285	830 ÷ 940	1475 ÷ 1585	830 ÷ 940	-	-	-	-	-
J 440T 33/36T	ZF 12 AS 1420 T.D. ZF 12 AS 1930 T.D.	1375 ÷ 1485	830 ÷ 940	1675 ÷ 1785	830 ÷ 940	-	-	-	-	-
J 440T 33/36T	ZF 12 AS 1420 T.D. } ZF 12 AS 1930 T.D. }+Multipower	1200 ÷ 1310	830 ÷ 940	1525 ÷ 1635	830 ÷ 940	-	-	-	-	-
260T 33/36	ZF 12 AS 1420 T.D. ZF 12 AS 1930 T.D.	-	-	-	-	1900 ÷ 2010	670 ÷ 830	-	2300 ÷ 2410	670 ÷ 830
260T 33/36	ZF 12 AS 1420 T.D. } ZF 12 AS 1930 T.D. }+Multipower	-	-	-	-	1700 ÷ 1810	670 ÷ 830	-	2100 ÷ 2210	670 ÷ 830
440/720T 41/45/50T	ZF 16 S 2220/2520 T.O. +Multipower	950 ÷ 1060	775 ÷ 955	-	-	-	-	-	-	-
440/720T 41/45/50T	ZF 16 S 2220/2520 T.O.	1125 ÷ 1235	775 ÷ 955	-	-	-	-	-	-	-
440/720T 41/45/50/P	ZF 12 AS 2330 T.O.	1225 ÷ 1335	775 ÷ 955	-	-	-	-	-	-	-
440/720T 41/45/50/P	ZF 12 AS 2330 T.O.+Multipower	1050 ÷ 1160	775 ÷ 955	-	-	-	-	-	-	-

J rear axle 452146
Y rear axle MT23 - 155
f rear axle 453291

Aquila Trucks Centres

Vehicles 6x4 (it follows)

Wheelbase		4500			4800			5100		
		Between gearbox and intermediate axle		Between axles	Between axles		Between axles	Between axles		Between axles
Model	Gearbox type	L1 mm	L mm min. max.	L mm min. max.	L1 mm	L mm min. max.	L mm min. max.	L1 mm	L mm min. max.	L mm min. max.
J 260T 31/33	ZF 9 S 1310 T.O.	1230	1475 ÷ 1585	830 ÷ 940	1685	1350 ÷ 1460	830 ÷ 940	1685	1650 ÷ 1760	830 ÷ 940
J 260T 31/33	ZF 9 S 1310 T.O. + Multipower	1050	1475 ÷ 1585	830 ÷ 940	1505	1350 ÷ 1460	830 ÷ 940	1505	1650 ÷ 1760	830 ÷ 940
J 260T 33/36	ZF 12 AS 1420 T.D. ZF 12 AS 1930 T.D.	1165	1475 ÷ 1585	830 ÷ 940	1615	1350 ÷ 1460	830 ÷ 940	1615	1650 ÷ 1760	830 ÷ 940
J 260T 33/36	ZF 12 AS 1420 T.D. } ZF 12 AS 1930 T.D. } +Multipower	985	1475 ÷ 1585	830 ÷ 940	1435	1350 ÷ 1460	830 ÷ 940	1435	1650 ÷ 1760	830 ÷ 940
J 260T 33/36	ZF 16 S 1620 T.D.	1150	1475 ÷ 1585	830 ÷ 940	1595	1350 ÷ 1460	830 ÷ 940	1595	1650 ÷ 1760	830 ÷ 940
J 260T 33/36	ZF 16 S 1620 T.D. + Multipower	970	1475 ÷ 1585	830 ÷ 940	1420	1350 ÷ 1460	830 ÷ 940	1420	1650 ÷ 1760	830 ÷ 940
Y 260T 33/36	ZF 16 S 1620 T.D.	-	-	-	1595	1275 ÷ 1385	670 ÷ 830	-	-	-
Y 260T 33/36	ZF 16 S 1620 T.D. + Multipower	-	-	-	1420	1275 ÷ 1385	670 ÷ 830	-	-	-
260T/380T41/45/50	ZF 16 S 2220/2520 T.O.	970	1425 ÷ 1535	775 ÷ 955	1420	1300 ÷ 1410	775 ÷ 955	1420	1600 ÷ 1710	775 ÷ 955
260T/380T41/45/50	ZF 16 S 2220/2520 T.O. +Multipower	-	2200 ÷ 2310	775 ÷ 955	1240	1300 ÷ 1410	775 ÷ 955	1240	1600 ÷ 1710	775 ÷ 955
f 380T 36	ZF 16 S 1620 T.D.	1150	1425 ÷ 1535	775 ÷ 955	-	-	-	-	-	-
f 380T 36	ZF 16 S 1620 T.D. + Multipower	970	1425 ÷ 1535	775 ÷ 955	-	-	-	-	-	-
Y 260T 31/33	ZF 9 S 1310 T.O.	-	-	-	1685	1275 ÷ 1385	670 ÷ 830	-	-	-
Y 260T 31/33	ZF 9 S 1310 T.O. + Multipower	-	-	-	1505	1275 ÷ 1385	670 ÷ 830	-	-	-
260/380T 41/45/50/P	ZF 12 AS 2330 T.O.	1075	1425 ÷ 1535	775 ÷ 955	1525	1300 ÷ 1410	775 ÷ 955	1525	1600 ÷ 1710	775 ÷ 955
260/380T 41/45/50/P	ZF 12 AS 2330 T.O. + Multipower	-	2300 ÷ 2410	775 ÷ 955	1345	1300 ÷ 1410	775 ÷ 955	1345	1600 ÷ 1710	775 ÷ 955
260T 33/36	ZF 12 AS 1420 T.D. ZF 12 AS 1930 T.D.	-	-	-	1615	1275 ÷ 1385	670 ÷ 830	-	-	-
260T 33/36	ZF 12 AS 1420 T.D. } ZF 12 AS 1930 T.D. } +Multipower	-	-	-	1435	1275 ÷ 1385	670 ÷ 830	-	-	-

J rear axle 452146

Y rear axle MT23 - 155

f rear axle 453291

Aquila Trucks Centres

Vehicles 8x4x4

Wheelbase		4250		4750			5020			5820		
		Between gearbox and intermediate axle	Between axles	Between gearbox and intermediate axle		Between axles	Between gearbox and intermediate axle		Between axles	Between gearbox and intermediate axle		Between axles
Model	Gearbox type	L mm	L mm	L1 mm	L mm	L mm	L1 mm	L mm	L mm	L1 mm	L mm	L mm
		min. max.	min. max.		min. max.	min. max.		min. max.	min. max.		min. max.	min max
340T 36	ZF 16 S 1620 T.D.	2400 ÷ 2510	830 ÷ 940	1510	1400 ÷ 1510	830 ÷ 940	1510	1650 ÷ 1760	830 ÷ 940	1820	2150 ÷ 2260	830 ÷ 940
340T 36	ZF 16 S 1620 T.D. +Multipower	2200 ÷ 2310	830 ÷ 940	1330	1400 ÷ 1510	830 ÷ 940	1330	1650 ÷ 1760	830 ÷ 940	1645	2150 ÷ 2260	830 ÷ 940
340T 36	ZF 12 AS 1930 T.D.	2400 ÷ 2510	830 ÷ 940	1525	1400 ÷ 1510	830 ÷ 940	1525	1650 ÷ 1760	830 ÷ 940	1840	2150 ÷ 2260	830 ÷ 940
340T 36	ZF 12 AS 1930 T.D. +Multipower	2225 ÷ 2335	830 ÷ 940	1345	1400 ÷ 1510	830 ÷ 940	1345	1650 ÷ 1760	830 ÷ 940	1660	2150 ÷ 2260	830 ÷ 940
340T 36 B/P-/P	ZF 16 S 1620 T.D.	2300 ÷ 2410	650 ÷ 790	1510	1325 ÷ 1435	650 ÷ 790	1510	1600 ÷ 1710	650 ÷ 790	1820	2100 ÷ 2210	650 ÷ 790
340T 36 B/P-/P	ZF 16 S 1620 T.D. +Multipower	2150 ÷ 2260	650 ÷ 790	1330	1325 ÷ 1435	650 ÷ 790	1330	1600 ÷ 1710	650 ÷ 790	1645	2100 ÷ 2210	650 ÷ 790
340T 36/P	ZF 12 AS 1930 T.D.	-	-	-	-	-	1525	1575 ÷ 1685	670 ÷ 830	1840	2075 ÷ 2185	670 ÷ 830
340T 36/P	ZF 12 AS 1930 T.D. +Multipower	-	-	-	-	-	1345	1575 ÷ 1685	670 ÷ 830	1660	2075 ÷ 2185	670 ÷ 830
410T 36	ZF 16 S 1620 T.D.	2350 ÷ 2460	775 ÷ 955	1505	1325 ÷ 1435	775 ÷ 955	1505	1600 ÷ 1710	775 ÷ 955	1820	2100 ÷ 2210	775 ÷ 955
410T 36	ZF 16 S 1620 T.D. +Multipower	2150 ÷ 2260	775 ÷ 955	1330	1325 ÷ 1435	775 ÷ 955	1330	1600 ÷ 1710	775 ÷ 955	1645	2100 ÷ 2210	775 ÷ 955
410T 36	ZF 12 AS 1930 T.D.	2350 ÷ 2460	775 ÷ 955	1525	1325 ÷ 1435	775 ÷ 955	1525	1600 ÷ 1710	775 ÷ 955	1840	2100 ÷ 2210	775 ÷ 955
410T 36	ZF 12 AS 1930 T.D. +Multipower	2175 ÷ 2285	775 ÷ 955	1345	1325 ÷ 1435	775 ÷ 955	1345	1600 ÷ 1710	775 ÷ 955	1660	2100 ÷ 2210	775 ÷ 955
340T 41/45/P	ZF 16 S 2220 T.O.	-	-	-	-	-	1330	1575 ÷ 1685	670 ÷ 830	1645	2075 ÷ 2185	670 ÷ 830
340T 41/45/P	ZF 16 S 2220 T.O. +Multipower	-	-	-	-	-	1150	1575 ÷ 1685	670 ÷ 830	1465	2075 ÷ 2185	670 ÷ 830
340T 41/45/P	ZF 12 AS 2330 T.O.	-	-	-	-	-	1435	1575 ÷ 1685	670 ÷ 830	1750	2075 ÷ 2185	670 ÷ 830
340T 41/45/P	ZF 12 AS 2330 T.O.+Multipower	-	-	-	-	-	-	-	-	1570	2075 ÷ 2185	670 ÷ 830
340T 41/45/B 410T 41/45/50/B	ZF 16 S 2220/2520 T.O.	2150 ÷ 2260	775 ÷ 955	1330	1325 ÷ 1435	775 ÷ 955	1330	1600 ÷ 1710	775 ÷ 955	1645	2100 ÷ 2210	775 ÷ 955
340T 41/45 B 410T 41/45/50/B	ZF 16 S 2220/2520 T.O. +Multipower	2000 ÷ 2110	775 ÷ 955	1150	1325 ÷ 1435	775 ÷ 955	1150	1600 ÷ 1710	775 ÷ 955	1465	2100 ÷ 2210	775 ÷ 955
340T 41/45/B/P	ZF 12 AS 2330 T.O.	2250 ÷ 2360	775 ÷ 955	1435	1325 ÷ 1435	775 ÷ 955	1435	1600 ÷ 1710	775 ÷ 955	1750	2100 ÷ 2210	775 ÷ 955
410T 41/45/50/B	ZF 12 AS 2330 T.O.	2250 ÷ 2360	775 ÷ 955	1435	1325 ÷ 1435	775 ÷ 955	1435	1600 ÷ 1710	775 ÷ 955	1750	2100 ÷ 2210	775 ÷ 955
340T 41/45/B/P 410T 41/45/50/B	ZF 12 AS 2330 T.O.+Multipower	2075 ÷ 2185	775 ÷ 955	1255	1325 ÷ 1435	775 ÷ 955	1255	1600 ÷ 1710	775 ÷ 955	1570	2100 ÷ 2210	775 ÷ 955

Aquila Trucks Centres

Vehicles 4x4

Wheelbase		3800			4200			4500		
		Between gearbox and transfer box	Between transfer box and rear axle	Between transfer box and front axle	Between gearbox and transfer box	Between transfer box and rear axle	Between transfer box and front axle	Between gearbox and transfer box	Between transfer box and rear axle	Between transfer box and front axle
Model	Gearbox type	L mm min. max.	L mm min. max.	L mm min. max.	L mm min. max.	L mm min. max.	L mm min. max.	L mm min. max.	L mm min. max.	L mm min. max.
190T 31/33 W	ZF 9 S 1310 T.O.	925 ÷ 1035	875 ÷ 985	1800 ÷ 1910	925 ÷ 1035	1250 ÷ 1360	1800 ÷ 1910	925 ÷ 1035	1525 ÷ 1635	1800 ÷ 1910
190T 31/33 W	ZF 9 S 1310 T.O. + Multipower	700 ÷ 810	875 ÷ 985	1800 ÷ 1910	700 ÷ 810	1250 ÷ 1360	1800 ÷ 1910	700 ÷ 810	1525 ÷ 1635	1800 ÷ 1910
190T 33/36 W	ZF 12 AS 1420 T.D./12 AS 1930 T.D.	825 ÷ 935	875 ÷ 985	1800 ÷ 1910	825 ÷ 935	1250 ÷ 1360	1800 ÷ 1910	825 ÷ 935	1525 ÷ 1635	1800 ÷ 1910
190T 33/36 W	ZF 12 AS 1420 T.D./12 AS 1930 T.D. + Multipower	650 ÷ 760	875 ÷ 985	1800 ÷ 1910	650 ÷ 760	1250 ÷ 1360	1800 ÷ 1910	650 ÷ 760	1525 ÷ 1635	1800 ÷ 1910
190T 33/36 W	ZF 16 S 1620 T.D.	825 ÷ 935	875 ÷ 985	1800 ÷ 1910	825 ÷ 935	1250 ÷ 1360	1800 ÷ 1910	825 ÷ 935	1525 ÷ 1635	1800 ÷ 1910
190T 33/36 W	ZF 16 S 1620 T.D. + Multipower	650 ÷ 760	875 ÷ 985	1800 ÷ 1910	650 ÷ 760	1250 ÷ 1360	1800 ÷ 1910	650 ÷ 760	1525 ÷ 1635	1800 ÷ 1910
190T 41/45 W	ZF 16 S 2220 T.O. + Multipower	497 ÷ 587	850 ÷ 960	1800 ÷ 1910	497 ÷ 587	1250 ÷ 1360	1800 ÷ 1910	497 ÷ 587	1525 ÷ 1635	1800 ÷ 1910
190T 41/45 W	ZF 12 AS 2330 T.O.	750 ÷ 860	850 ÷ 960	1800 ÷ 1910	750 ÷ 860	1250 ÷ 1360	1800 ÷ 1910	750 ÷ 860	1525 ÷ 1635	1800 ÷ 1910
190T 41/45 W	ZF 12 AS 2330 T.O. + Multipower	571 ÷ 681	850 ÷ 960	1800 ÷ 1910	571 ÷ 681	1250 ÷ 1360	1800 ÷ 1910	571 ÷ 681	1525 ÷ 1635	1800 ÷ 1910
190T 41/45 W	ZF 16 S 2220 T.O.	650 ÷ 760	850 ÷ 960	1800 ÷ 1910	650 ÷ 760	1250 ÷ 1360	1800 ÷ 1910	650 ÷ 760	1525 ÷ 1635	1800 ÷ 1910
400T 41/45 WT	ZF 12 AS 2330 T.O.	750 ÷ 860	850 ÷ 960	1800 ÷ 1910	-	-	-	-	-	-
400T 41/45 WT	ZF 12 AS 2330 T.O. + Multipower	571 ÷ 681	850 ÷ 960	1800 ÷ 1910	-	-	-	-	-	-
400T 41/45 WT	ZF 16 S 2220 T.O. + Multipower	497 ÷ 587	850 ÷ 960	1800 ÷ 1910	-	-	-	-	-	-
400T 41/45 WT	ZF 16 S 2220 T.O.	650 ÷ 760	850 ÷ 960	1800 ÷ 1910	-	-	-	-	-	-

Aquila Trucks Centres

Vehicles 6x6

Wheelbase		3500				3820			
		Between gearbox and transfer box	Between transfer box and intermediate axle	Between axles	Between transfer box and front axle	Between gearbox and transfer box	Between transfer box and intermediate axle	Between axles	Between transfer box and front axle
Model	Gearbox type	L mm min. max.	L mm min. max.	L mm min. max.	L mm min. max.	L mm min. max.	L mm min. max.	L mm min. max.	L mm min. max.
260/380T 36 W	ZF 16 S 1620 T.D.	571 ÷ 681	700 ÷ 810	775 ÷ 955	1525 ÷ 1635	825 ÷ 935	700 ÷ 810	775 ÷ 955	1800 ÷ 1910
260/380T 36 W	ZF 16 S 1620 T.D. + Multipower	410 ÷ 440	700 ÷ 810	775 ÷ 955	1525 ÷ 1635	650 ÷ 760	700 ÷ 810	775 ÷ 955	1800 ÷ 1910
260/380T 36 W	ZF 12 AS 1930 T.D.	571 ÷ 681	700 ÷ 810	775 ÷ 955	1525 ÷ 1635	825 ÷ 935	700 ÷ 810	775 ÷ 955	1800 ÷ 1910
260/380T 36 W	ZF 12 AS 1930 T.D. + Multipower	420 ÷ 460	700 ÷ 810	775 ÷ 955	1525 ÷ 1635	650 ÷ 760	700 ÷ 810	775 ÷ 955	1800 ÷ 1910
260T 41/45 W	ZF 16 S 2220 T.O.	390 ÷ 440	700 ÷ 810	775 ÷ 955	1525 ÷ 1635	650 ÷ 760	700 ÷ 810	775 ÷ 955	1800 ÷ 1910
260T 41/45 W	ZF 16 S 2220 T.O. + Multipower	-	-	-	-	500 ÷ 550	700 ÷ 810	775 ÷ 955	1800 ÷ 1910
260T 41/45 W	ZF 12 AS 2330 T.O.	500 ÷ 550	700 ÷ 810	775 ÷ 955	1525 ÷ 1635	750 ÷ 860	700 ÷ 810	775 ÷ 955	1800 ÷ 1910
260T 41/45 W	ZF 12 AS 2330 T.O. + Multipower	-	-	-	-	570 ÷ 660	700 ÷ 810	775 ÷ 955	1800 ÷ 1910
380T 41/45 W	ZF 16 S 2220 T.O.	390 ÷ 440	700 ÷ 833	775 ÷ 955	1525 ÷ 1635	650 ÷ 750	700 ÷ 833	775 ÷ 955	1800 ÷ 1910
380T 41/45 W	ZF 16 S2220 T.O. + Multipower	-	-	-	-	500 ÷ 550	700 ÷ 833	775 ÷ 955	1800 ÷ 1910
380T 41/45 W	ZF 12 AS 2330 T.O.	500 ÷ 550	700 ÷ 810	775 ÷ 955	1525 ÷ 1635	750 ÷ 860	700 ÷ 810	775 ÷ 955	1800 ÷ 1910
380T 41/45 W	ZF 12 AS 2330 T.O. + Multipower	-	-	-	-	554 ÷ 644	700 ÷ 810	775 ÷ 955	1800 ÷ 1910
720T 41/45 WT	ZF 16 S 2220 T.O.	390 ÷ 440	700 ÷ 833	775 ÷ 955	1525 ÷ 1635	-	-	-	-
720T 41/45 WT	ZF 12 AS 2330 T.O.	500 ÷ 550	700 ÷ 810	775 ÷ 955	1525 ÷ 1635	-	-	-	-

Vehicles 8x8x4

Wheelbase		4750				
		Between gearbox and transfer box	Between transfer box and intermediate axle	Between rear axles	Between front axles	Between transfer box and front axle
Model	Gearbox	L mm min. max.	L mm min. max.	L mm min. max.	L mm min. max.	L mm min. max.
410T 45 W	ZF 16 S 2220 T.O.	1700 ÷ 1810	590 ÷ 700	775 ÷ 955	830 ÷ 940	1320 ÷ 1500
410T 45 W	ZF 16 S 2220 T.O. + Multipower	1500 ÷ 1610	590 ÷ 700	775 ÷ 955	830 ÷ 940	1320 ÷ 1500
410T 45 W	ZF 12 AS 2330 T.O.	1800 ÷ 1910	590 ÷ 700	775 ÷ 955	830 ÷ 940	1320 ÷ 1500
410T 45 W	ZF 12 AS 2330 T.O. + Multipower	1575 ÷ 1685	590 ÷ 700	775 ÷ 955	830 ÷ 940	1320 ÷ 1500

Aquila Trucks Centres

TROUBLESHOOTING**Main operating faults**

Visible Failure	Possible cause	Repair action
Transmission noise and vibration	Deformed shaft.	Replace the shaft.
	Shaft not balanced.	Check the balance and determine the points where you need to weld on the balancing plates.
	Too much clearance between grooved profiles.	Replace the shaft.
	Loose screws and nuts fixing the shaft to the sleeves on the gearbox or on the rear axle.	After making a thorough check, fully tighten the loose screws and nuts; replace any damaged parts.
	Universal joints of the propeller shaft seized or too worn.	Overhaul or replace the universal joints.
	Insufficient lubrication of the various parts.	Lubricate via the grease nipples.
	Loose screws fixing the flexible mounting.	Tighten the screws to the required torque.
	Silentblock of the central mounting deteriorated.	Replace the mounting.
	Bearing of the central flexible mounting deteriorated or with too much play.	Replace the mounting
	Loose screws or ring nuts fixing the flange on the shank of the propeller shaft.	Tighten the screws or ring nuts to the required torque.

Aquila Trucks Centres

TIGHTENING TORQUES

DESCRIPTION	TORQUE	
	Nm	kgm
Ring nut for fixing flange on connecting shaft:		
M 40x1.5	350 + 50	35 + 5
M 55x1.5	380 + 70	38 + 7
Screw fixing flange on connecting shaft: M 20 x 160	450 ± 34	45 ± 3.4
Nut for screw fixing propeller shaft flanges	133.5 ± 13.5	13.3 ± 1.3
Nut for M12 screw fixing bracket for flexible mounting to chassis frame	92 ± 9	9.2 ± 1
Nut for M14 fixing flexible mounting to chassis frame	146.5 ± 14.5	14.6 ± 1.4


TOOLS

TOOL NO.	DESCRIPTION
99370618	 Mount to remove-refit propeller shaft

Aquila Trucks Centres

505620 PROPELLER SHAFT REMOVAL AND REFITTING**Removal**

Figure 3

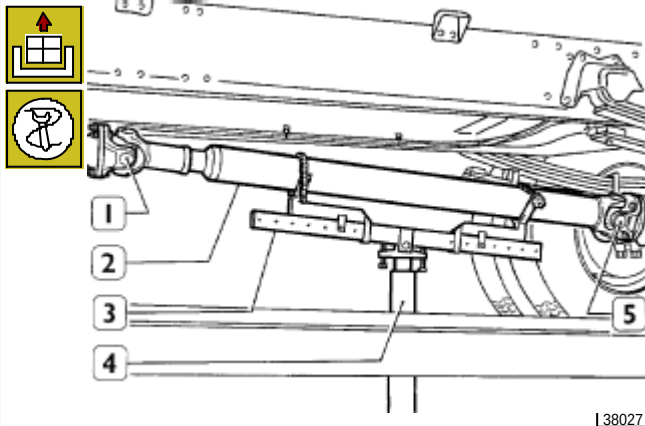

Place a hydraulic jack (4) equipped with the mount 99370618 (3) under the rear propeller shaft (2).


Disconnect the propeller shaft (2) from the rear axle and from the flexible mounting by unscrewing the screws and nuts fixing the flanges (1 and 5).

Lower the hydraulic jack completely to detach the propeller shaft.



Removal and refitting are described for a vehicle with a propeller shaft in two sections.

Figure 4

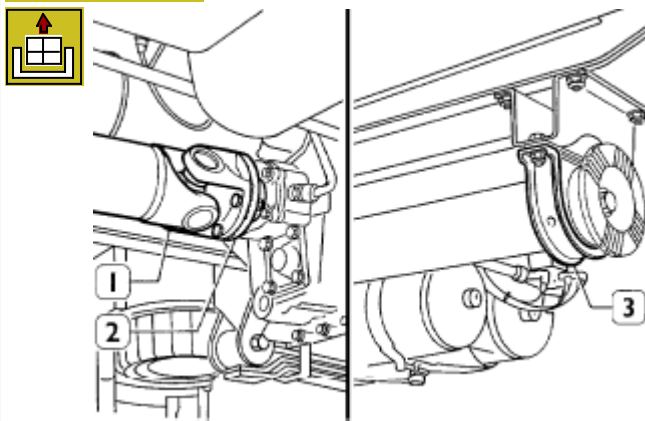

Repeat these steps for the front propeller shaft (1), disconnecting it from the flange (2) of the gearbox and removing the flexible mounting (3) as well.


Refitting

For refitting, carry out the steps described for removal in reverse order, observing the following:

- The self-locking nuts always have to be replaced and tightened to the required torque.


505620 REPAIRS**Disassembling the universal joint**

Fi

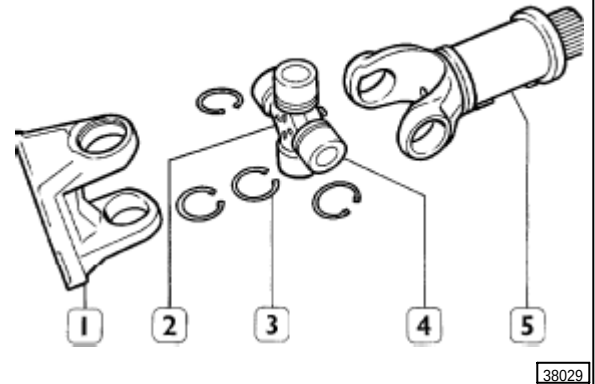**COMPONENT PARTS OF THE UNIVERSAL JOINT**

1. Fork - 2. Joint - 3. Split rings - 4. Bearings - 5. Sliding sleeve.

Figure 6

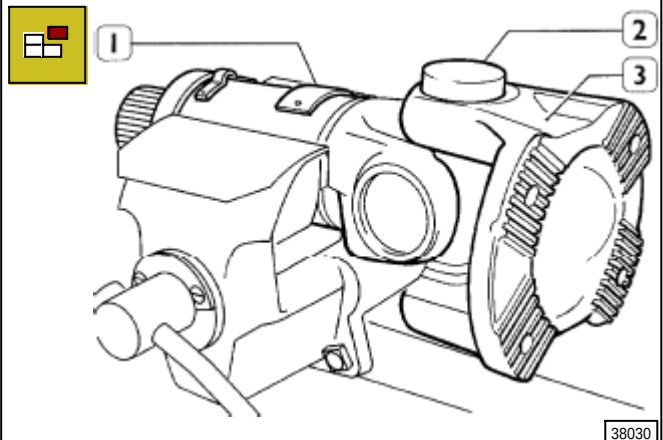

Put the universal joint assembly (1) in a vice.

Using suitable pliers, take off the split rings (3, Fig. 3).

Strike a mallet on the fork (3, Fig. 4) till the bearing (2) partly comes out of its seat, that is until the joint interferes with the fork.

Turn the part over and repeat the above operations.

Take one of the two bearings (2) out by hand.

Take out the fork (3) and, with the aid of a punch, extract the other bearing.

With the same procedure, extract the bearings from the other fork and free the joint.

To remove the opposite joint, repeat the above steps.

Assembling the universal joint


Insert the joint into the fork and into the forked sleeve.

Mount the bearings together with the rollers, and therefore the split rings, on the pins of the joint.

Aquila Trucks Centres

CHECKING PROPELLER SHAFTS ON VEHICLES

Figure 7

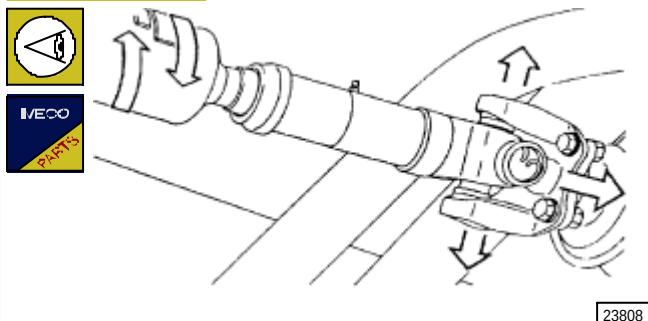

The drive shafts are supplied ready for assembly.
They are statically and dynamically balanced.
The plates welded to the propeller shafts are for balancing.
If there are no plates, it is necessary to balance the shaft again.
Working on the propeller shaft and at the same time, in the opposite direction, on the sliding sleeve (arrows), check there is not too much clearance between the splines.
Working on the forks of the sleeves (arrows), check that the joints are not worn; if they are, replace them as described above.

Aquila Trucks Centres

SECTION 8

Axles

	Page
AXLES	3-12
FRONT AXLES 5985/2D	13-54
INTERMEDIATE AXLES 452191/2D 453291/2D	55-100
INTERMEDIATE AXLES 452146/2D	101-132
REAR AXLES 451391/2D 452191/2D 453291/2D	133-168
REAR AXLES 452146/2D	169-190
AXLES IN TANDEM MERITOR MT 23-155/2D:	
- INTERMEDIATE AXLE MD 11-155/2D	193-234
- REAR AXLE MR 11-155/2D	235-264

Aquila Trucks Centres

Aquila Trucks Centres

Axles

	Page
TROUBLESHOOTING	5
- Main operating faults	5
REMOVING - RE-FITTING IN PLACE THE FRONT DRIVE AXLE (4x4 - 6x6 Vehicles)	6
- Removal	6
- Refitting	6
REMOVING REAR AXLES (4x2 - 4x4 Vehicles)	8
REMOVING THE REAR AXLE (6x4 - 6x6 - 8x4x4 Vehicles)	10
REMOVING THE INTERMEDIATE AXLE (6x4 - 6x6 - 8x4x4 Vehicles)	11
- Instructions to adjust and check the functioning of the transmitter that controls the engagement of differential and reduction gear unit locking . .	12
REFITTING IN PLACE THE AXLE (Vehicles : all versions)	12

Aquila Trucks Centres

Aquila Trucks Centres

TROUBLESHOOTING


Main operating faults

Visible Failure	Possible cause	Repair action
Wheel hubs noisy	Insufficient lubrication.	Check there are no leaks from gaskets or the axle casing and top up oil to correct level.
	Wheel hub bearings inefficient.	Remove the hub and replace inefficient parts.
	Bad adjustment of wheel hub bearings.	Adjust bearings.
	Half-shaft splines to fit planetary gears of epicyclic gears are worn.	Overhaul and replace worn or damaged parts.
Noise	Lubricating oil level low.	Check there are no leaks from gaskets or axle casing and top up to correct level.
	Half shaft splines to fit the differential crown wheels damaged.	Overhaul the axle and replace worn or damaged parts.
	Bad adjustment of hub bearings.	Adjust the bearings backlash.
	Bad adjustment or wear on differential gears or bearings.	Locate the trouble and overhaul the unit.
Noise at release	Improper fitting backlash between pinion and ring bevel gear.	Remove the gear housing inspection cover and adjust backlash between pinion and ring bevel gear.
Noise during acceleration	Insufficient lubrication.	Check that there are no leaks from the gaskets or the casing and top up to the correct level.
	Gear housing bearings badly set or deteriorated.	Overhaul the unit.
	Bad tooth contact between pinion and ring bevel gear.	Adjust the contact.
Cornering noise	Improper backlash between planetary gears and crown wheels.	Overhaul or replace the unit.

Aquila Trucks Centres

522810 REMOVING - RE-FITTING IN PLACE THE FRONT DRIVE AXLE (4x4 - 6x6 Vehicles)**Removal**

Figure 1

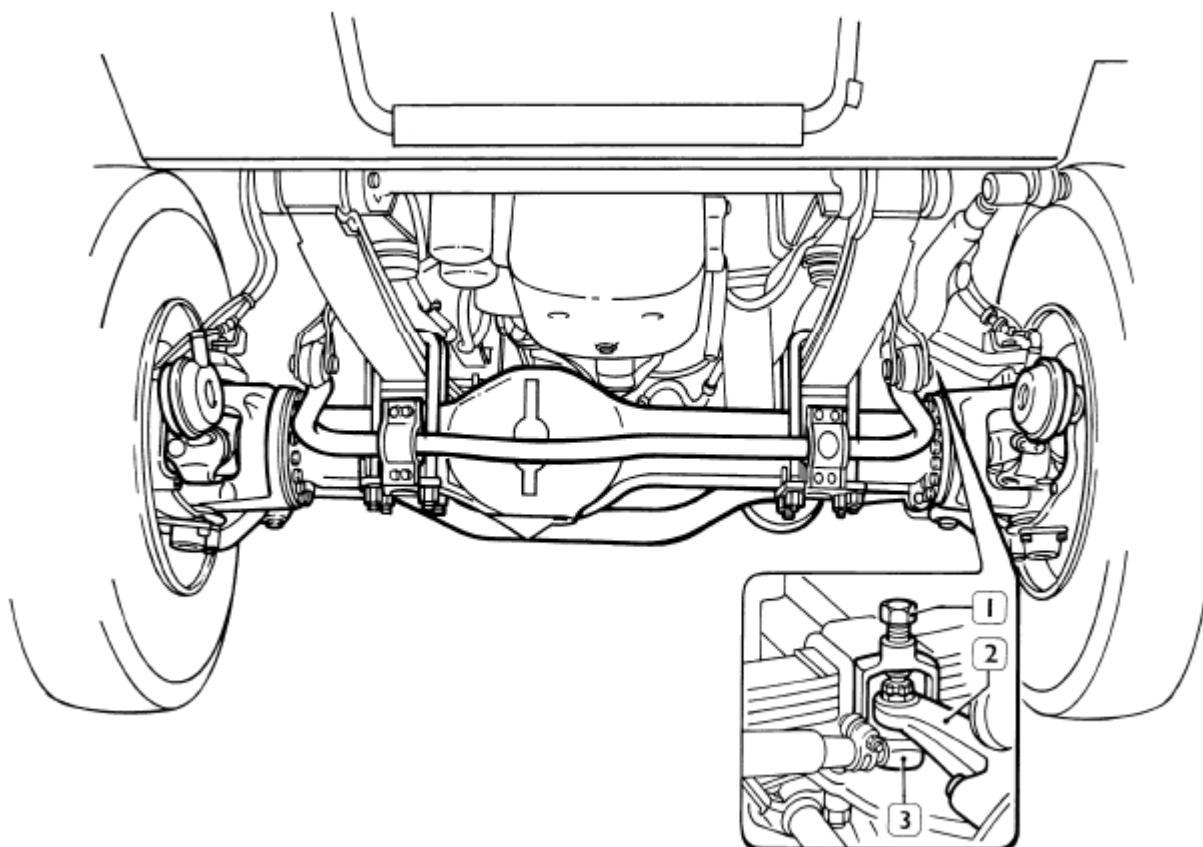

40560

Place the vehicle on flat ground and lock the rear wheels.
Loosen the front wheel fastening nuts.
Using a hydraulic jack, lift the front of the vehicle and rest it on two supporting stands.
Remove the wheel nuts then remove the wheels using hydraulic truck 99321024.


Using puller 99347068 (1) remove tie-rod kingpin (3) from the arm (2).

Disconnect:

- air delivery hoses from the diaphragm brake cylinders;
- ABS transmitters electric cable;
- for vehicles that are provided with it, the electric cable for brake lining wear indicator.

Aquila Trucks Centres

Figure 2

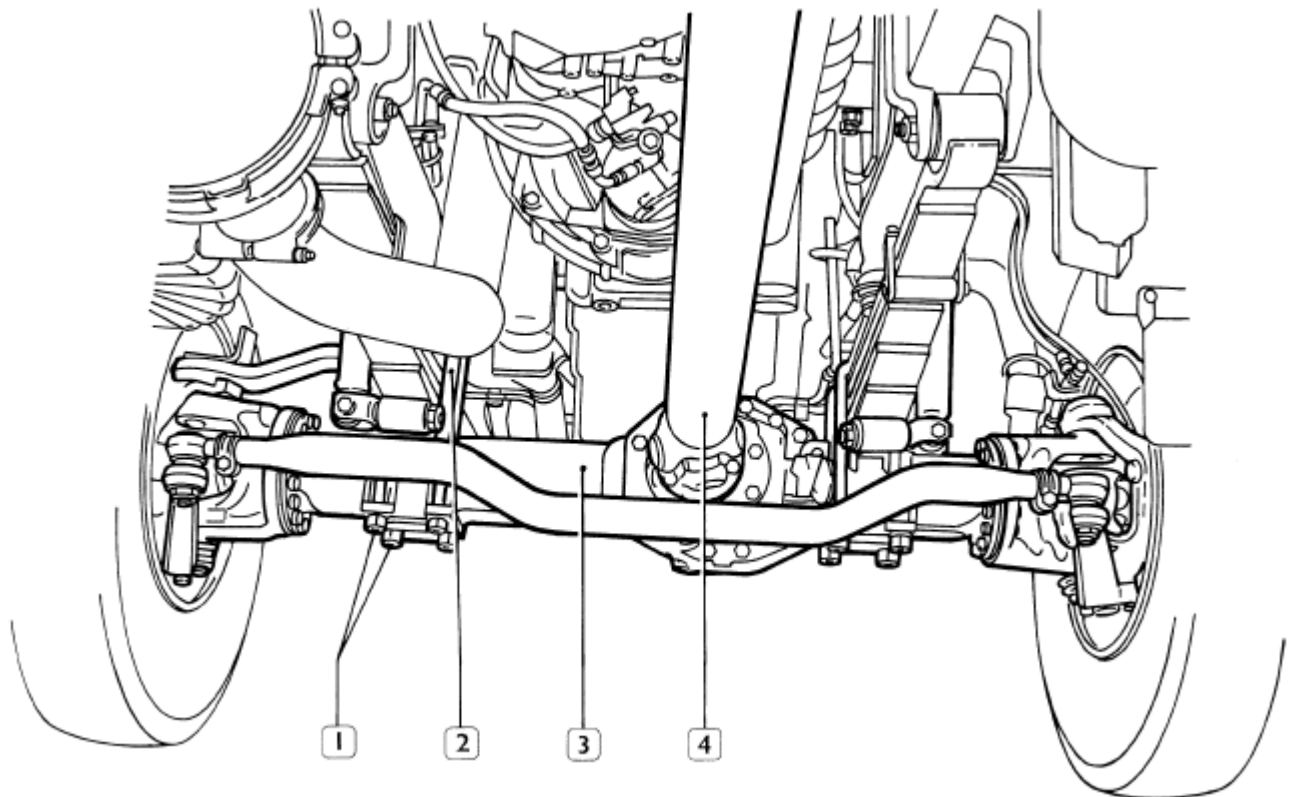

40561

Place a hydraulic jack with stand 99370617 under the front drive axle (3).
Unscrew the nuts and disconnect the propeller shaft (4).
Unscrew nuts (1) and remove the clips (2) fastening the leaf springs to the axle.
Lower the hydraulic jack and withdraw the axle (3)

Refitting

To re-fit in place, follow the removal instructions in reverse.



Nuts and bolts must be tightened to the prescribed torques.




Check and adjust the front wheels geometry.

Aquila Trucks Centres

525010 REMOVING REAR AXLES (4x2 - 4x4 Vehicles)

Figure 3

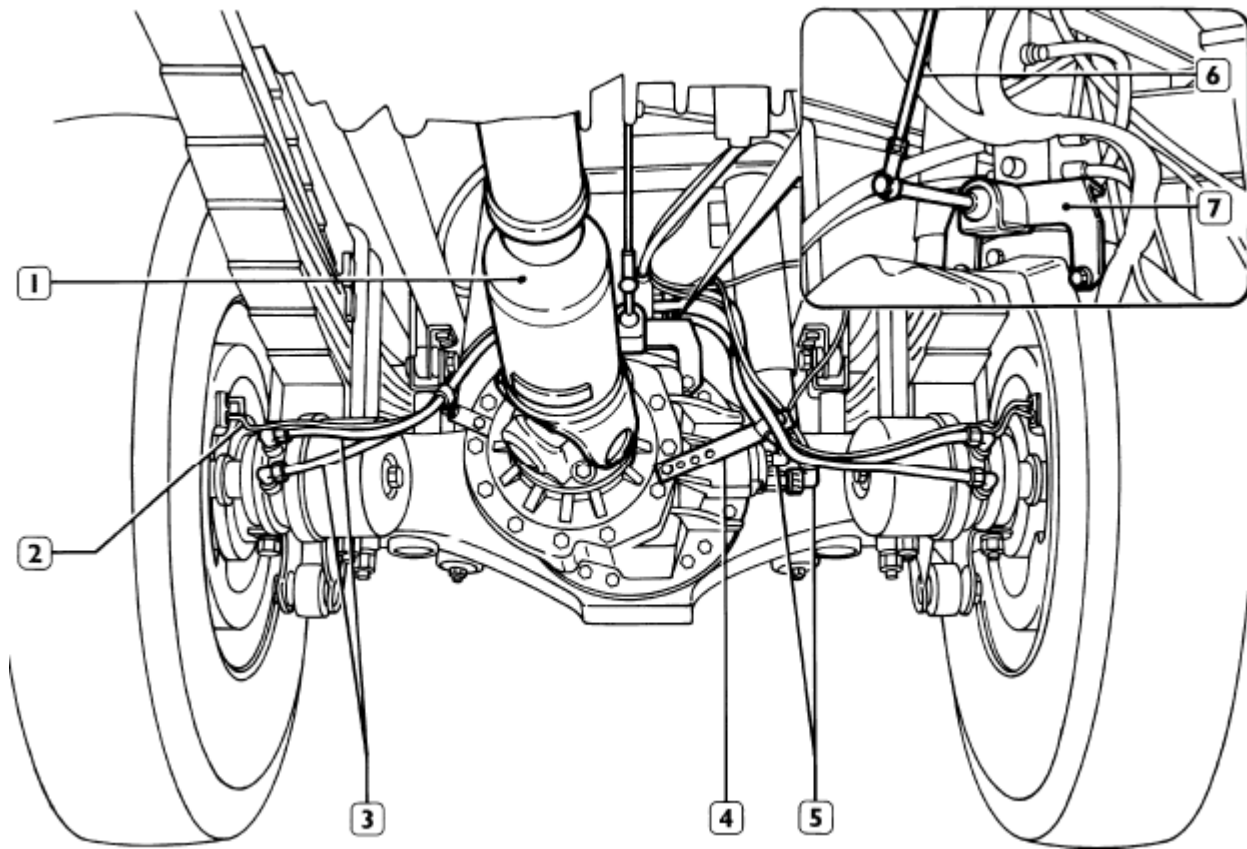


40469

Place the vehicle on flat ground and lock the front wheels. Remove the nut guards and loosen the nuts. Lift the rear of the vehicle and rest it on two supporting stands. Set the hydraulic truck 99321024 under the wheels, remove the wheel nuts then remove the wheels. Remove the propeller shaft (1) and braking control tie-rod (6) from the rear axle.

Disconnect the air hoses and electric cable (5) from the differential locking device. Disconnect brake cylinder air delivery hoses (3). Remove the bracket (7) securing hoses, cables and couplings to the axle casing. Disconnect the brake lining wear indicator cables (2) and ABS transmitter electric cable. Remove the hose clamp bracket (4). Place a hydraulic jack fitted with support 99370617 under the axle.

Aquila Trucks Centres

Figure 4

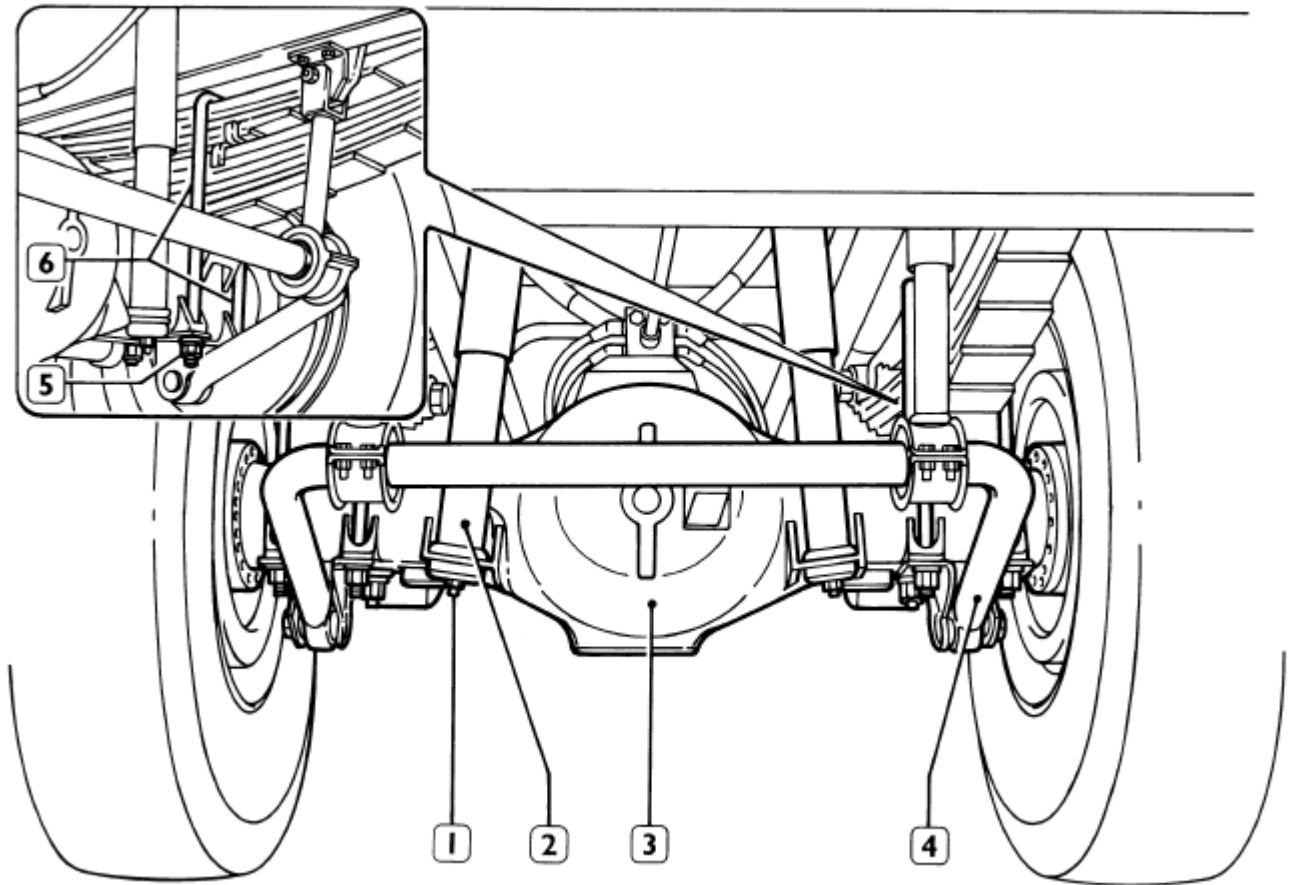

40470

Unscrew the nuts (1) and remove the shock absorbers (2) from the lower supports.

Unscrew the securing screws (5) and withdraw the brackets (6) that connect the leaf spring to the axle.


Rotate the torsion bar (4) and anchor it to the chassis.

Lower the hydraulic jack and remove the rear axle (3)

Aquila Trucks Centres

**REMOVING THE REAR AXLE
(6x4 - 6x6 - 8x4x4 Vehicles)**

Figure 5

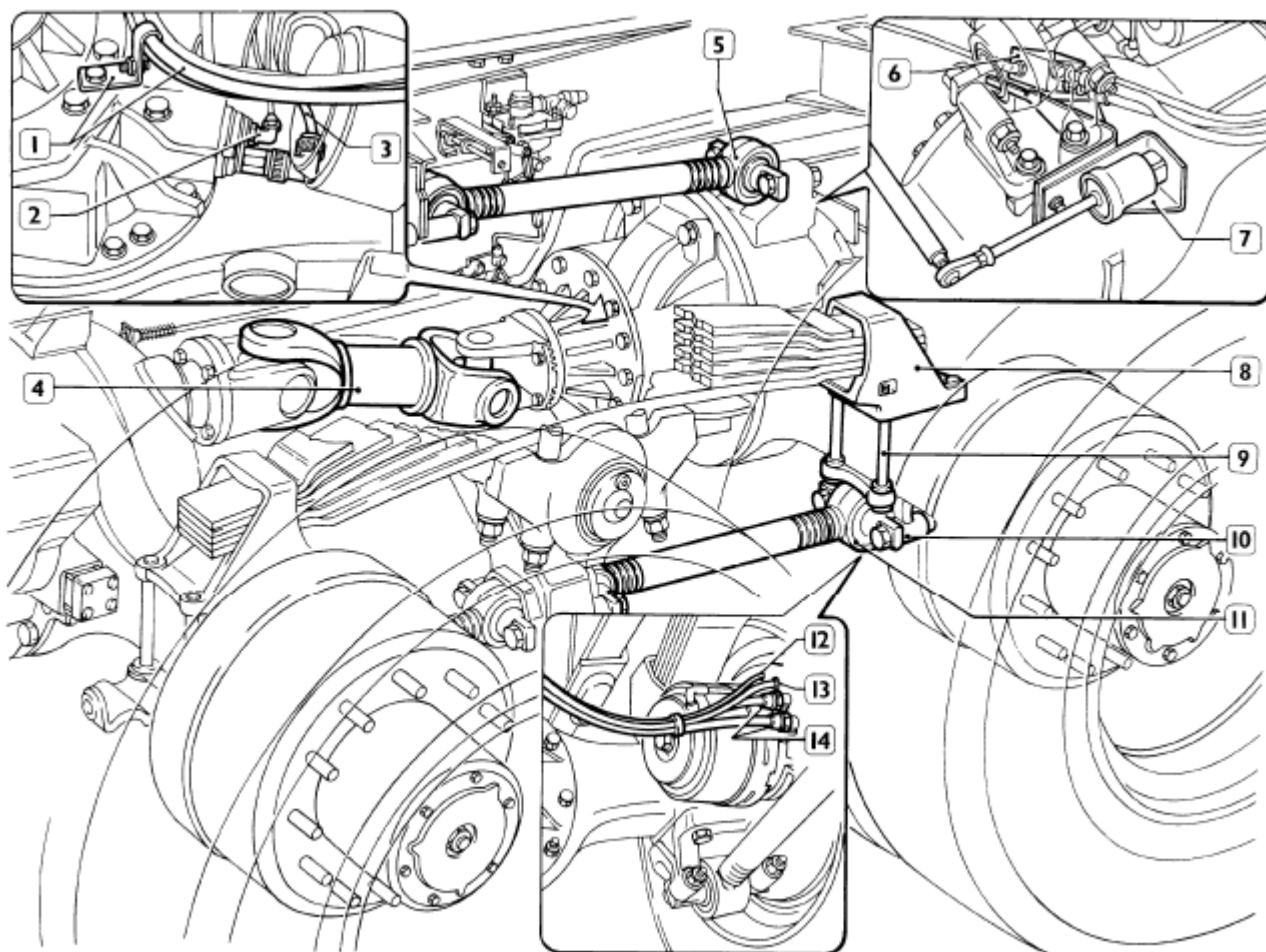

40471

Place the vehicle on flat ground and lock the front wheels. Remove the nut guards and loosen the nuts.

Lift the rear of the vehicle and rest it on two supporting stands. Set the hydraulic truck 99321024 under the wheels, remove the wheel nuts then remove the wheels.

Remove the propeller shaft (4) from the rear differential. Disconnect the air hoses (2) from the differential locking device and electric cable (3) from the differential locking indication switch.

Remove the strap fastening the cables and hoses to the bracket (1).

Disconnect air delivery hoses (14) from the brake cylinders. Disconnect the brake lining wear indicator cables (13) and (12) ABS transmitter cables.

Remove from the rear of the axle casing : bracket (6) supporting the air hoses multiple coupling and the bracket (7) that secures the braking control tie rod.

Place a hydraulic jack fitted with support 99370617 under the axle.

Remove the upper longitudinal tie rod (5) from the axle casing.


Remove the lower longitudinal tie rods (11) from the brackets (10).

Bring the axle backward so that the shoes (8) withdraw from the leaf springs.

Aquila Trucks Centres

**REMOVING THE INTERMEDIATE AXLE
(6x4 - 6x6 - 8x4x4 Vehicles)**

Figure 6

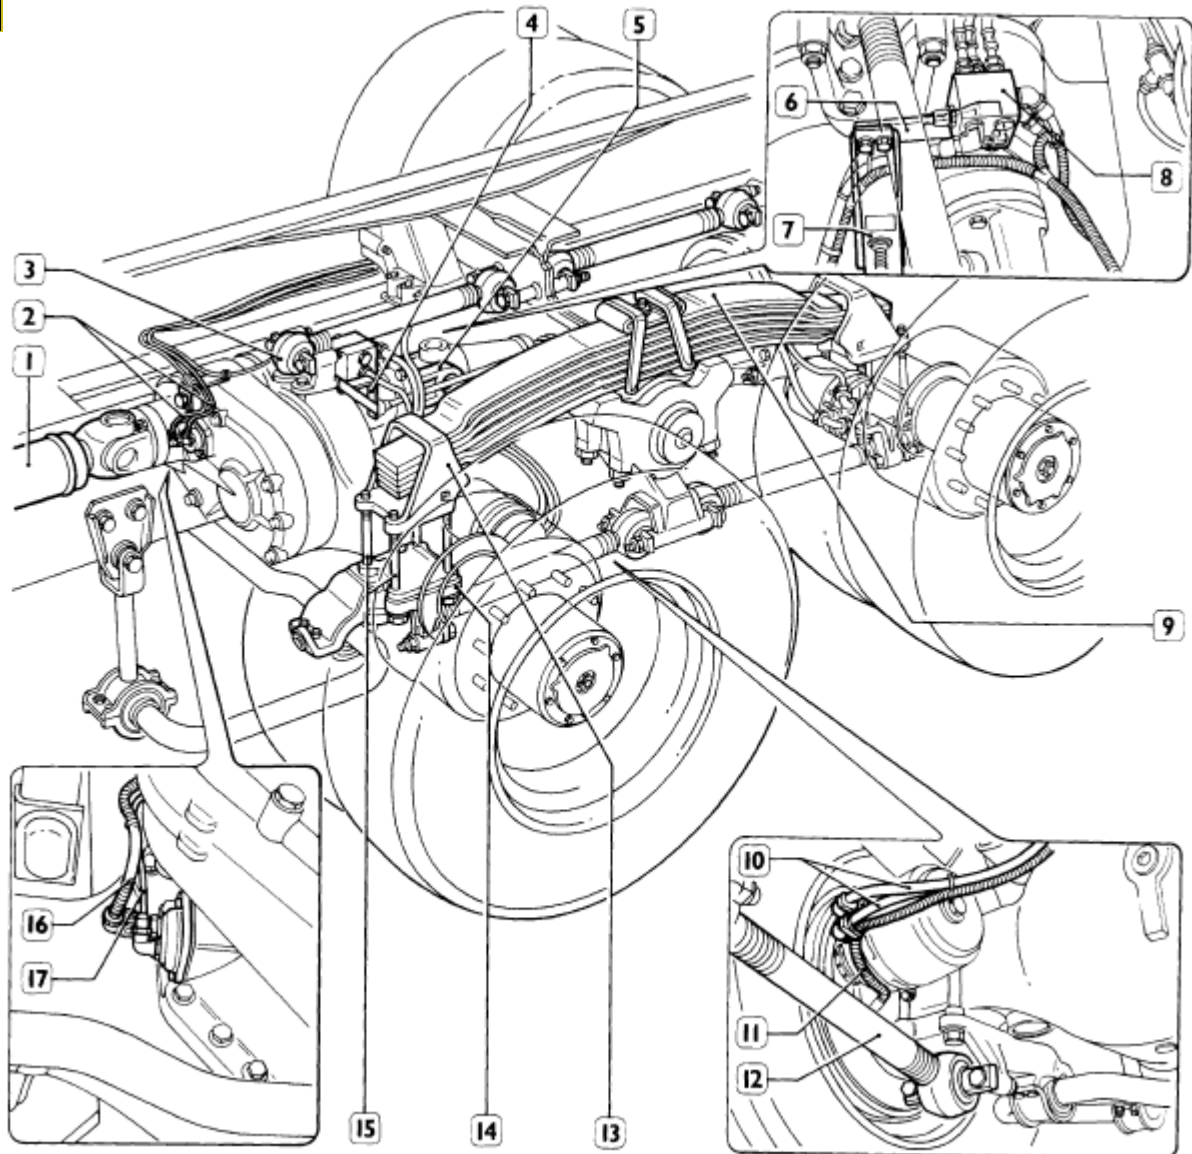

40472

Place the vehicle on flat ground and lock the front wheels. Remove the nut guards and loosen the nuts. Lift the rear of the vehicle and rest it on two supporting stands. Set the hydraulic truck 99321024 under the wheels, remove the wheel nuts then remove the wheels. Remove the propeller shafts (1-5) from the intermediate differential. Remove the straps fastening cables and hoses to the brackets. Remove the bracket (6) securing the air hoses multiple coupling (8). Remove the braking control tie-rod bracket (4). Disconnect air delivery hoses (10) from the brake cylinder.

Disconnect the brake lining wear indicator cables (11). Disconnect the air hoses (16) from the differential device and electric cable (17) from the differential locking indication switch. Disconnect the air hose (2) from the differential reduction gear unit locking device and the locking indicator switch electric cable. Place a hydraulic jack fitted with support 99370617 under the axle. Remove the upper longitudinal tie rod (3) from the intermediate axle casing. Remove the lower longitudinal tie rods from the brackets (14). Bring the axle backward so that the shoes (13) withdraw from the leaf springs.

Aquila Trucks Centres

Instructions to adjust and check the functioning of the transmitter that controls the engagement of differential and reduction gear unit locking

The adjustment and verification of the transmitter (two function type) that checks the engagement of the differential and reduction gear unit is carried out with the axle fitted on the vehicle.

The procedure is as follows:

- 1) With differential and reduction gear locked, screw down the transmitter until the contacts close, checking in the cab that the indicator light switches on.
- 2) When the indicator light switches on in the cab, tighten the transmitter by one more turn.
- 3) Tighten the transmitter locking nut to a torque of 40 Nm (4 kgm)
- 4= Release the differential and reduction gear unit locking engagement and check that the contacts are closed (the indicator light in the cab switches off).

REFITTING IN PLACE THE AXLE (Vehicles : all versions)

To re-fit in place, reverse the removal operations taking care to tighten all screws and nuts to the prescribed torques.

When re-fitted in place check that:

- there are no leaks from the air hoses;
- the lubrication oil in the axle casing is at the correct level;
- the differential locking indicator light is working correctly. If it does not, refer to the relevant chapter.

NOTE For 6x4 - 6x6 - 8x4x4 vehicles, if the leaf spring shoes have been removed, the procedure to re-fit in place is given in the section "Removal - re-fitting in place the rear leaf spring for CANTILEVER type suspensions".

Aquila Trucks Centres

5228 Front Axle 5985/2D (D1385)

	Page
DESCRIPTION	15
MAIN DATA	16
TIGHTENING TORQUES	18
TOOLS	20
OVERHAULING THE FRONT AXLE	26
- Wheel hub disassembly	26
- Stub axle disassembly	27
- Drive shaft disassembly	29
- Fork support disassembly	29
- Stub axle disassembly	30
- Wheel hub disassembly	30
- Epicycoid gear disassembly	30
CLEANING AND CHECKING PARTS	31
CHECKING THE AXLE SQUARENESS	31
ASSEMBLY	34
- Yoke support assembling	35
- Drive shaft assembling	36
- Stub axle assembling	36
- Epicyclic reduction gear assembling	41
- Greasing the stub axle pins	42
- Epicyclic gear unit lubrication	42
REMOVING THE DIFFERENTIAL (with the axle mounted on stand 99322215) .	43
- Checking the axle housing	43
REFITTING THE DIFFERENTIAL (with the axle mounted on stand 99322215) .	43
DIFFERENTIAL REPAIR	45

Aquila Trucks Centres

Page

- Disassembly	45
- Disassembling the differential housing	46
- Disassembling the bevel pinion	47
CHECKING THE DIFFERENTIAL COMPONENTS	47
- Assembling the differential housing	48
- Assembling the bevel pinion support	49
- Differential	51
- Adjusting the rolling torque on the differential housing bearings	52


Aquila Trucks Centres

DESCRIPTION

The axle is of the load-bearing, double reduction type. The first reduction is provided by the bevel pinion/ring bevel gear, whereas the second reduction is by means of an epicycloid unit on the wheel hubs. The differential housing (with ring bevel gear) is supported by taper roller bearings, which can be adjusted by means of two threaded ring nuts.

The bevel pinion is supported by two taper roller bearings, which can be adjusted by means of adjustment rings. The axle shafts start from the differential and transmit drive to the epicycloid reduction units by means of homo-kinetic couplings. Two flanges are fitted at each end of the rear axle housing, which serve for stub axle articulation. The drum brake is of the Duo/Duplex type.







Figure 1

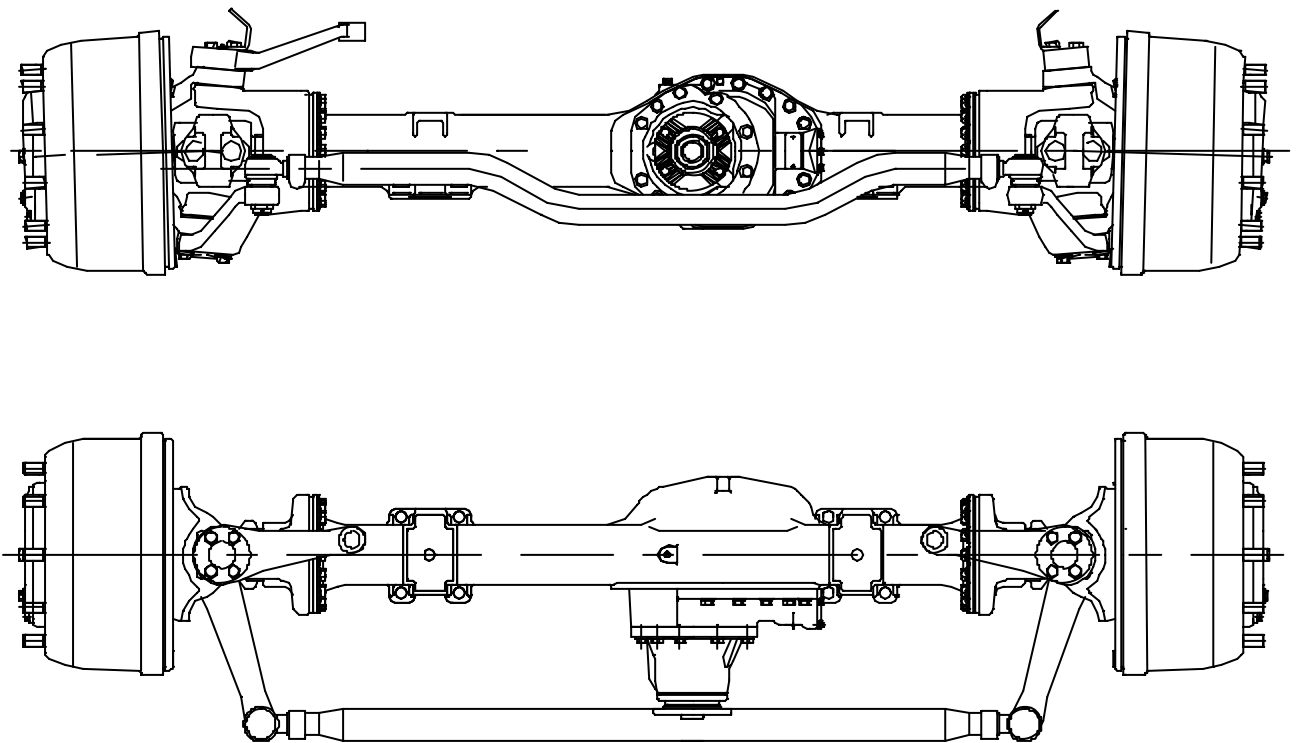






71523

Aquila Trucks Centres

      MAIN DATA


	Type of axle: Load-bearing, double reduction	5985 / 2D (D1385)
	Bevel pinion bearings	2 taper rollers
	Bevel gear reduction unit ratio	27/32 (1.185) - 29/37 (1.276) - 28/37 (1.321) - 27/37 (1.370) - 24/35 (1.458) - 23/36 (1.565) - 21/34 (1.619) - 19/33 (1.737) - 21/40 (1.905) - 17/35 (2.059) - 17/36 (2.118) - 15/34 (2.267) - 13/35 (2.692)
	Epicyclic reduction unit/wheels ratio	3.2
	Bevel pinion bearing rolling torque: without gasket Nm with lubricated gasket Nm	$6 \div 8$ $7.5 \div 9.5$
	Bevel pinion bearing rolling torque adjustment	with adjustment shims
	Thickness of bevel pinion bearing rolling torque adjustment shims mm	10 - 10.02 - 10.04 - 10.06 - 10.08 - 10.10 - 10.12 - 10.14 - 10.16 - 10.18 - 10.20 - 10.22 - 10.24 - 10.26 - 10.28 - 10.30 - 10.32 - 10.34 - 10.36 - 10.38 - 10.40 - 10.42 - 10.44 - 10.46 - 10.48 - 10.50 - 10.52 - 10.54 - 10.56 - 10.58 - 10.60
	Thickness of bevel pinion/ring bevel gear position adjustment shims mm	0.2 - 0.3 - 0.5 - 1
	Clearance between pinion and ring bevel gear mm	$0.15 \div 0.35$
	Adjustment of clearance between pinion and ring bevel gear	with ring nuts
	WHEEL HUBS	
	Wheel hub bearings	2 taper rollers
	Wheel hub bearings rolling torque: new bearings with surface protection Nm	$6 \div 7 + (7.5 \div 9)$
	Wheel hub bearings rolling torque: run in bearings and new, lubricated seals Nm	$6 \div 7 + (4 \div 5)$
	Wheel hub bearings rolling torque: run in bearings and seals Nm	$6 \div 7 + (3 \div 4)$
	Drive shaft end float mm	$0.5 \div 1$

 Aquila Trucks Centres

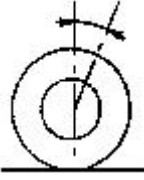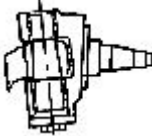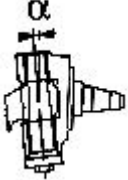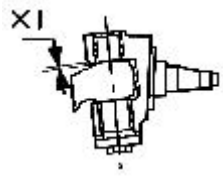	Type of axle: Load bearing, double reduction	5985 / 2D (D 1385)	
	Axle oil Quantity Litres Oil for wheel hub bearings	TUTELA W 140/MDA 4.5 ÷ 5 TUTELA W140/MDA	
	G.R.W. maximum load kg	9000 - 10000	
	WHEEL ALIGNMENT		
	Wheel camber (vehicle with static load)	1° 30'	
	Wheel caster (vehicle with static load)	2° 17'	
	Wheel toe-in (unloaded vehicle) mm - adjustment tolerance mm - control tolerance mm	4x4 - 6x6 models 0.5 ± 0.75 ± 2	8x8 models 0 ± 0.75 ± 2
	STUB AXLE PINS		
	King pin angle	5°	
   	Thickness of adjustment shims for clearance between axle and stub axle upper shim X1 mm	1.75 - 2.00 - 2.25 - 2.50 - 2.75 - 3.00 3.25 - 3.50	

Aquila Trucks Centres

Figure 2

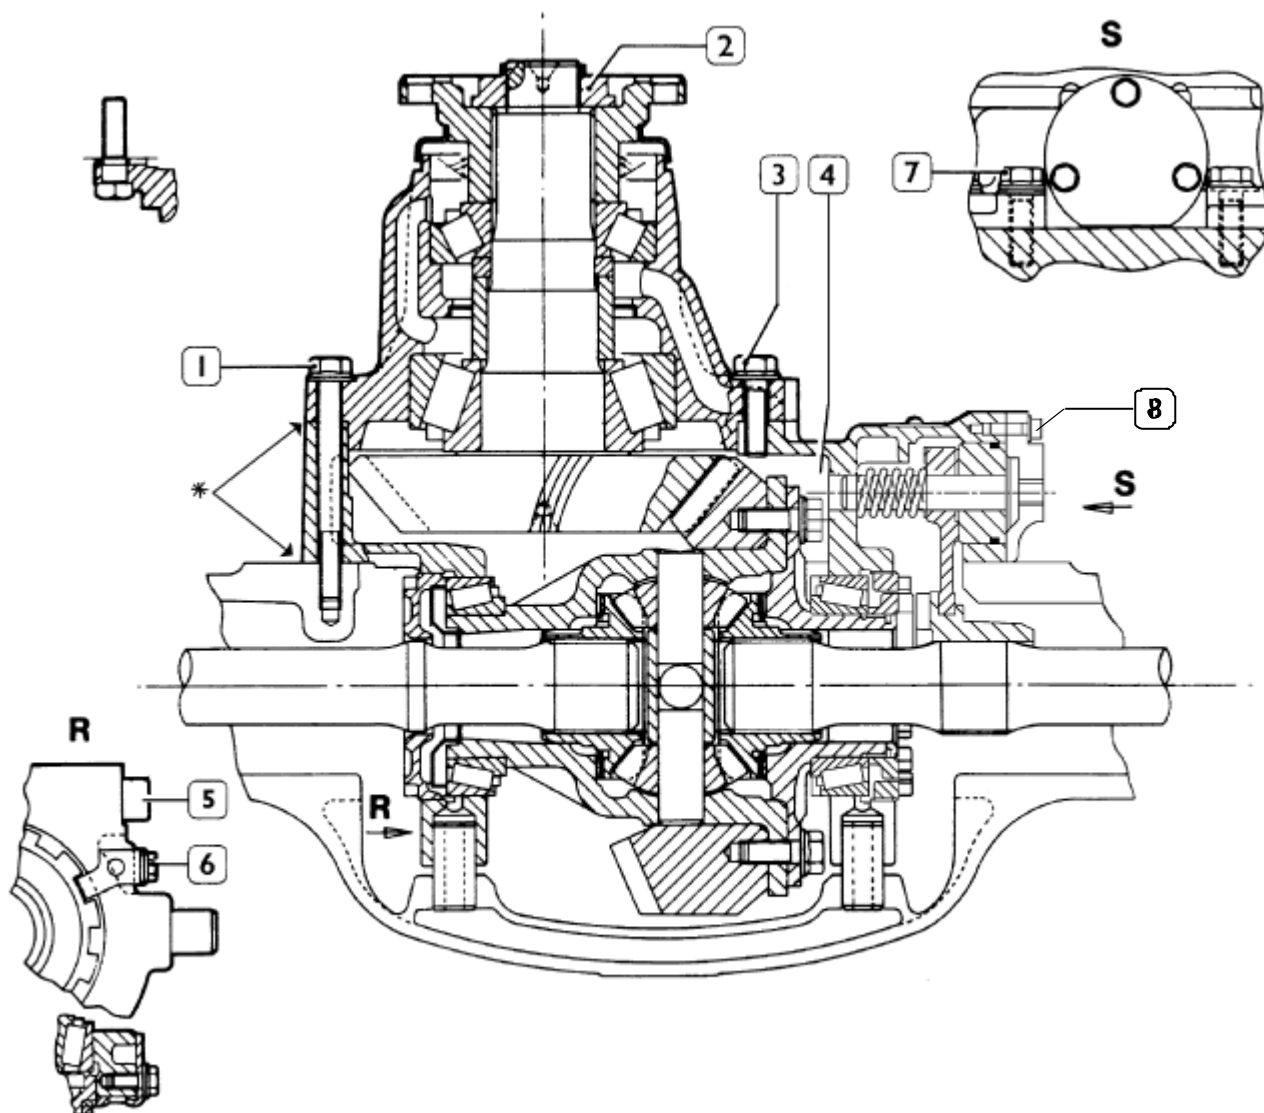

115266

TIGHTENING TORQUES


DESCRIPTION	TORQUE	
	Nm	kgm
1 Screw fixing differential housing to axle housing	180 ± 10	18 ± 1
2 Locknut for bevel pinion	700 ± 50	70 ± 5
3 Screw fixing bevel pinion mounting to differential housing	180 ± 10	18 ± 1
4 Screw fixing ring bevel gear to differential housing	180 ± 10	18 ± 1
5 Screw fixing bearing mountings $\diamond$	180 ± 10	18 ± 1
6 Self-locking screw fixing safety plate	51 ± 4	5.1 ± 0.4
7 Screw with toothed flange	180 ± 10	18 ± 1
8 Screw fixing differential lock cover	19 ± 2	1.9 ± 0.2

 $\diamond$ apply LOCTITE AVX

* apply LOCTITE 573

Aquila Trucks Centres

Figure 3

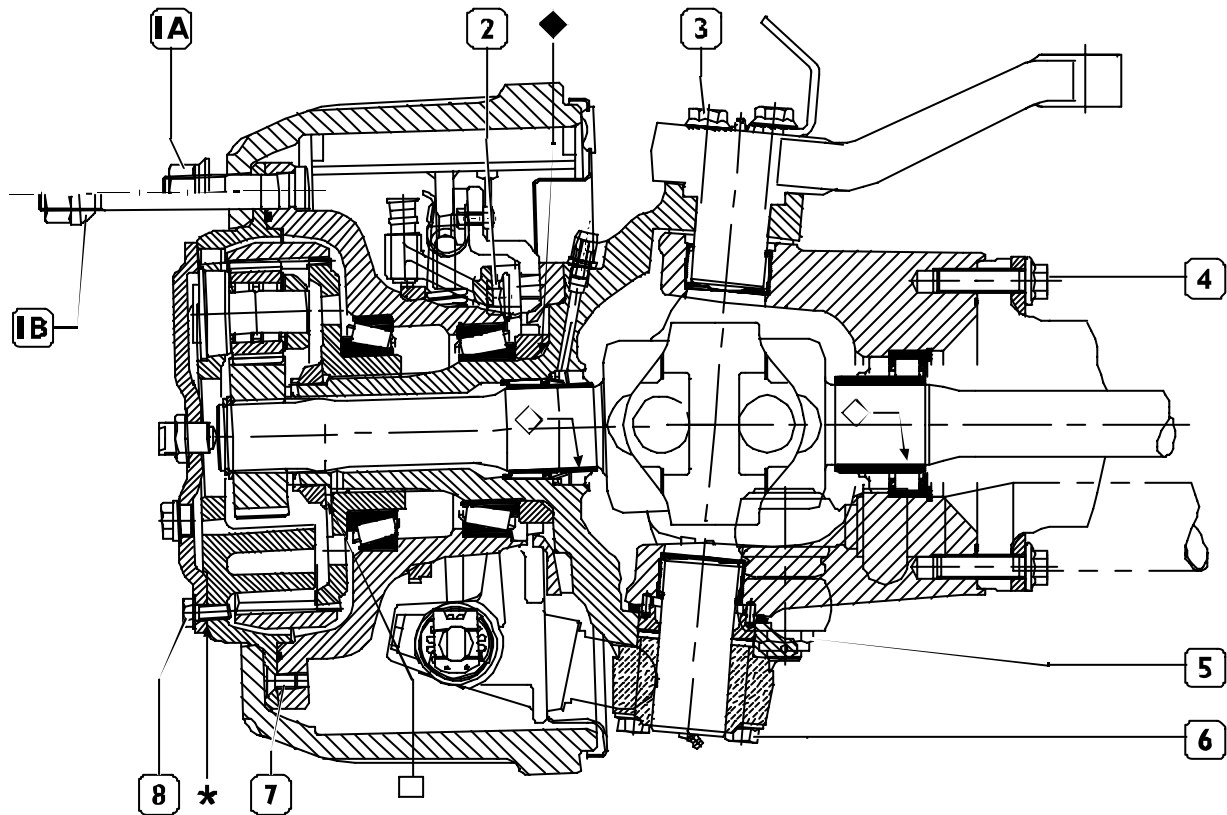

WHEEL HUB LONGITUDINAL SECTION AND EPICYCLIC REDUCTION

98971

TIGHTENING TORQUES

DESCRIPTION		TORQUE	
		Nm	kgm
1	Nut fixing wheel	615 ± 35	61.5 ± 3.5
2	Screw fixing brake mounting	324 ÷ 396	32.4 ÷ 39.6
3	Screw fixing steering lever pin	207 ÷ 253	20.7 ÷ 25.3
4	Screw fixing mounting for stub axle	324 ÷ 396	32.4 ÷ 39.6
5	Notched nut fixing swivel head pin	250 **	2.5 **
6	Fixing screw	207 ÷ 233	20.7 ÷ 23.3
7	Fixing screw for mounting	22 ÷ 28	2.2 ÷ 2.8
8	Fixing screw for cover z	44 ÷ 54	4.4 ÷ 5.4

* apply LOCTITE 510

** minimum - maximum torque, tighten to first notch coinciding with hole for split-pin

z apply LOCTITE 573 on the contact surface

j apply MOLYCOTE lubricant on the contact surface before assembly

Z lock with LOCTITE AVX

Aquila Trucks Centres


TOOLS

TOOL NO.

DESCRIPTION

99305121


Hot air device

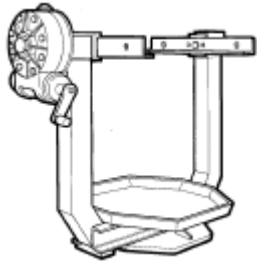99322205

Rotating stand for assembly overhaul

99322215

Stand for axles overhaul

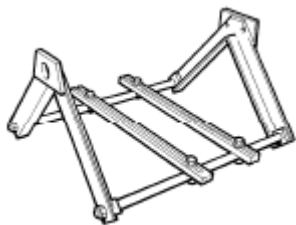99322225

Support for assemblies (to be fitted onto stand 99322205)





99345049

Reaction block for extractors





99345053

Reaction block for extractors






Aquila Trucks Centres

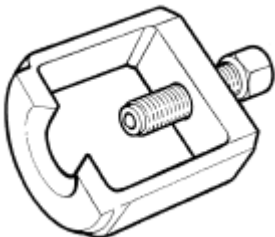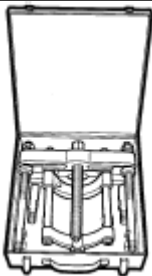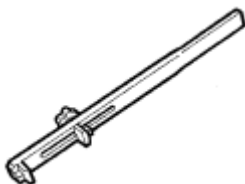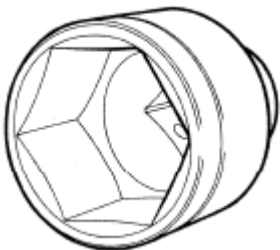TOOL NO.	DESCRIPTION	
99347068		Extractor for steering tie-rod ball joint
99348001		Extractor with locking device
99348004		Universal extractor for 5 to 70 mm (internal)
99354207		Wrench (94.5 mm) for wheel hub bearings adjusting nut
99355025		Wrench for differential gear housing bearing adjustment ring nuts
99355081		Wrench (60 mm) for differential bevel pinion nut (use with 99370317)





Aquila Trucks Centres

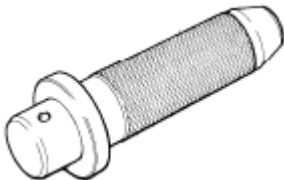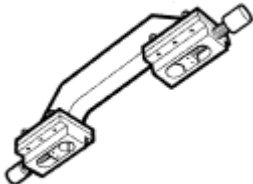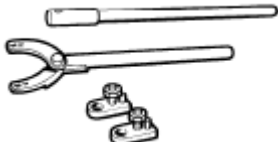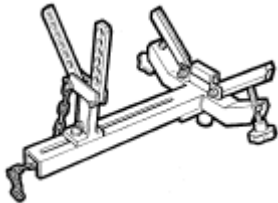TOOL NO.	DESCRIPTION	
99370006		Grip for interchangeable punches
99370007		Grip for interchangeable punches
99370133		Tool for locking differential caps spread
99370317		Reaction lever with extension for flange retaining
99370509		Hook to extract differential gear half-housing
99370616		Support for differential removal and refitting


Aquila Trucks Centres

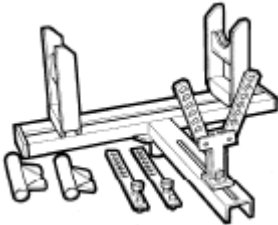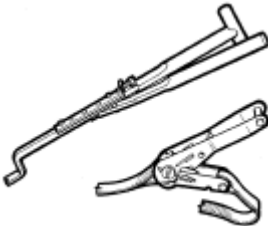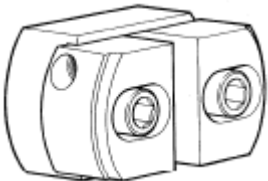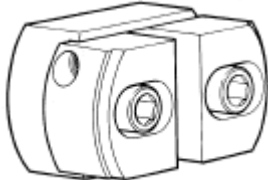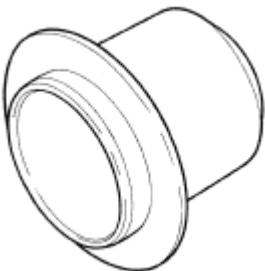TOOL NO.	DESCRIPTION	
99370617		Universal mounting to support axles during removal and refitting
99372211		Tool for disassembly and assembly of brake shoe retaining spring
99374093		Punch to fit external races of bearings (diameter 91 - 134 mm use with 99370007)
99374094		Punch to fit external races of bearings (diameter 134 - 215 mm use with 99370007)
99374233		Key to fit differential bevel pinion seal
99374369		Punch to fit taper roller bearings on stub axle (use with 99370006)

Aquila Trucks Centres

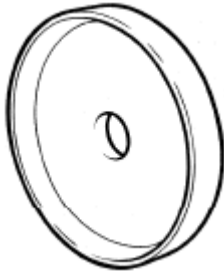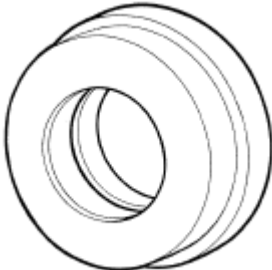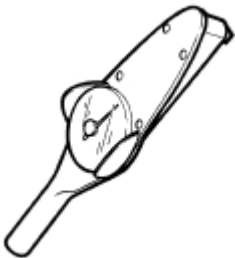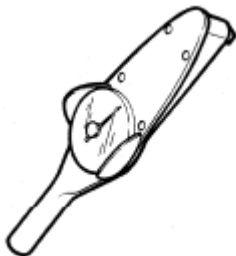TOOL NO.	DESCRIPTION	
99374371		Key to fit roller bearings and seal rings on axle fork (use with 99370006)
99374377		Key for assembly of wheel hub internal seals
99374382		Punch to fit roller bearings on stub axle fork (use with 99370006)
99374390		Key to fit seal ring on stub axle (use with 99370006)
99389819		Torque wrench from 0 to 10 Nm with 1/4" square connection
99389821		Torque wrench from 0 to 70 Nm with 3/8" square connection


Aquila Trucks Centres

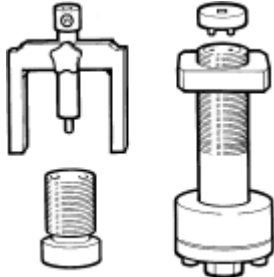TOOL NO.	DESCRIPTION
99395026	Tool to check rolling torque of hubs (use with torque wrench) 
99395027	Tool to determine thickness of differential bevel pinion adjustment shims (use with 99395603) 
99395603	Dial gauge (0 - 5 mm) 

Aquila Trucks Centres

522810 OVERHAULING THE FRONT AXLE**Wheel hub disassembly**

Figure 4

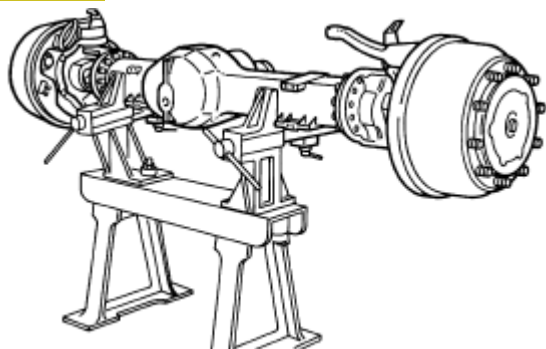


39481

Position the axle on overhaul stand 99322205.

NOTE If the axle is fitted with differential locking, secure the engagement sleeve in position by inserting a screw in the cylinder feed hole.

Figure 5

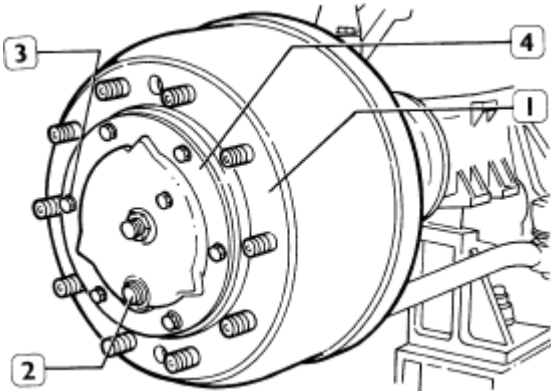

39482


Position the wheel hub (1) so that the oil drainage plug (2) is at the lowest point.

Unscrew the plug and drain off the oil into a container.

To facilitate oil drainage remove a screw (3) on the cover (4). Drain off the oil from the differential assembly, unscrewing the plug on the axle housing and allowing the oil to drain into a suitable container.

When the oil is fully drained off, tighten the drainage hole plugs by hand.


Figure 6

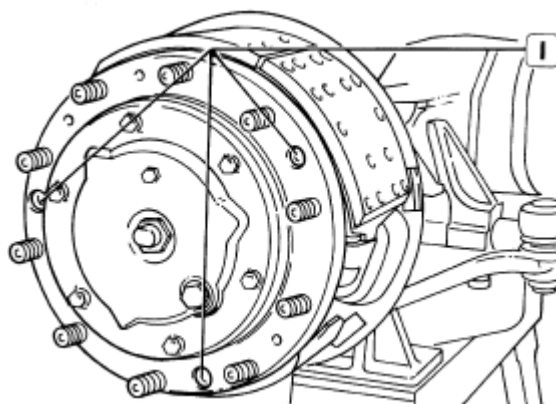

39483

Loosen and remove the three flush-mounted hex screws (1).

Figure 7

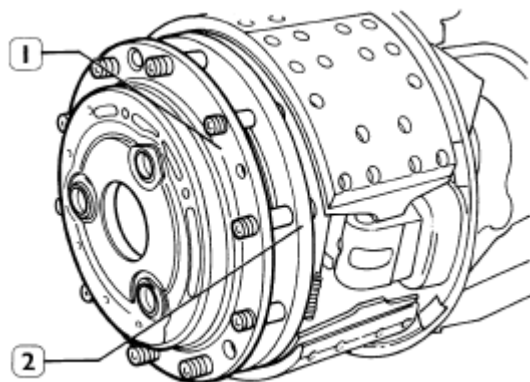


39484

Using a suitable tool, detach the side pinion mounting support (1) from the hub (2) and remove - making sure that the ring gear, which is integral with the side pinions, is not removed.

Aquila Trucks Centres


Figure 8

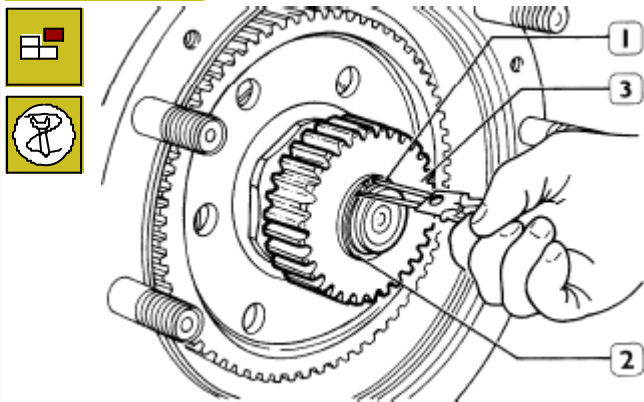

39485

Move the axle shaft outwards.
Remove the seeger ring (2) and the spacer then remove the gear unit (3).


Figure 9

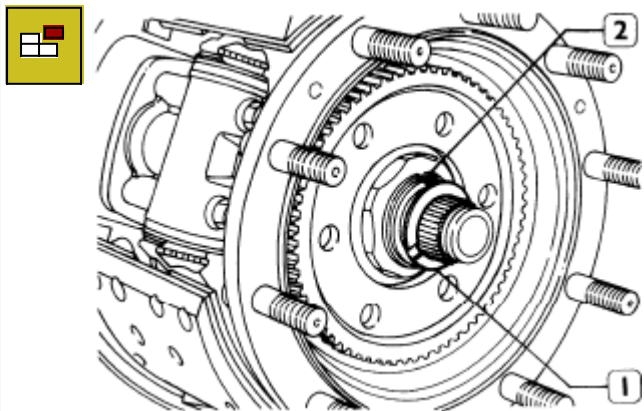

39486

Extract the shim ring (1).
Using a suitable tool, remove the notch on the nut (2).


Figure 10

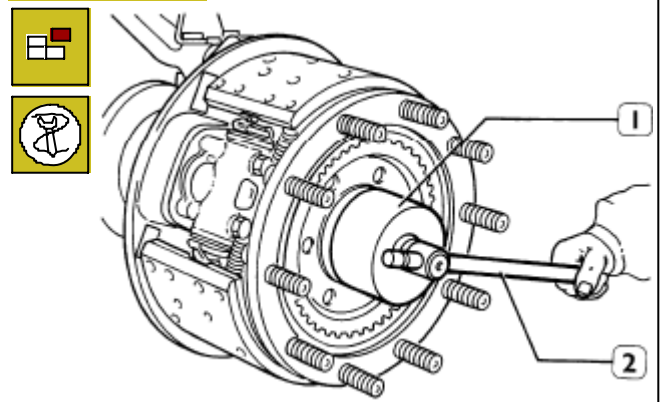

39487

Using wrench 99354207 (1), unscrew the nut (2, Figure 9).
Remove the crown support gear unit (56, Figure 35) together with the bearing internal ring.

Figure 11

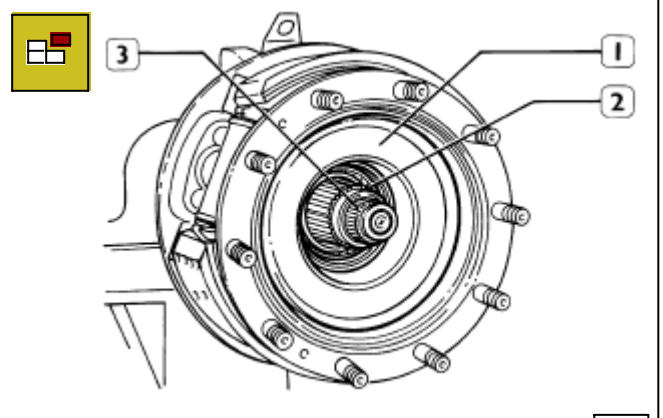


39488

Remove the wheel hub (1) together with the bearing (2) from the stub axle (3).

Stub axle disassembly

Figure 12

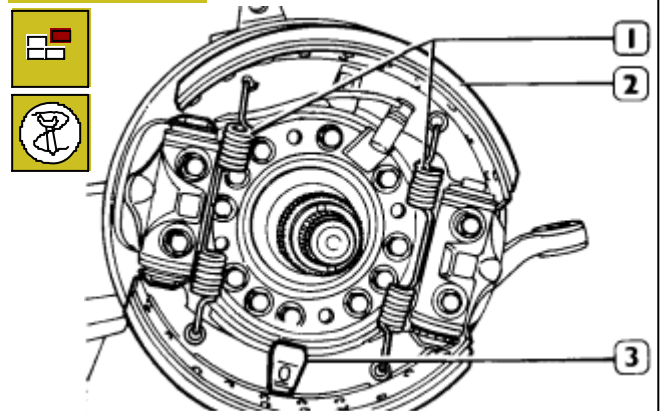


71524

Using tool 99372211, release the shoe (2) retaining springs (1).
Extract both of the shoes from the retaining brackets (3) by moving them first upwards, then downwards.

Aquila Trucks Centres


Figure 13

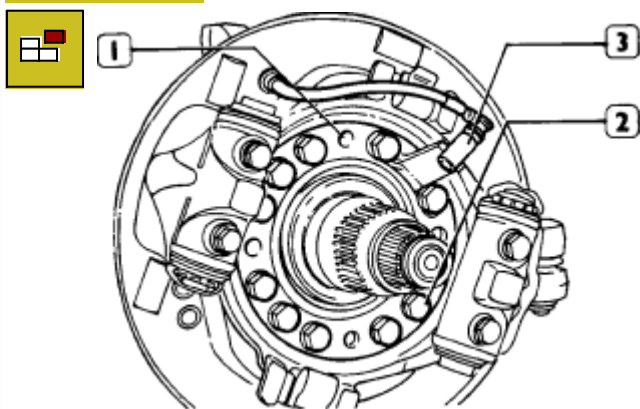

71525

Unscrew the screws (2) on the brake mounting (1) and remove together with the guards. Extract the ABS brakes sensor (3).


Figure 14

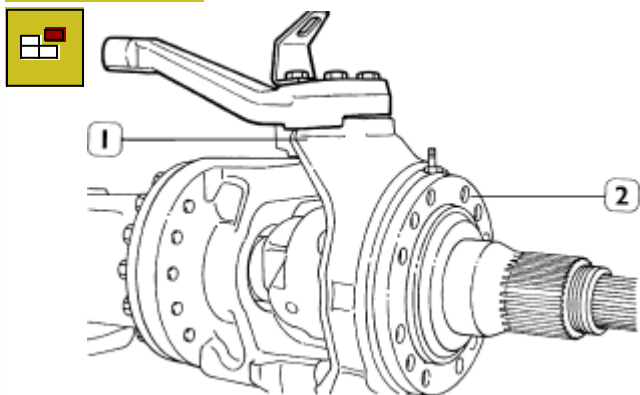

39525

Disassemble the intermediate ring (2) on the stub axle (1).


Figure 15

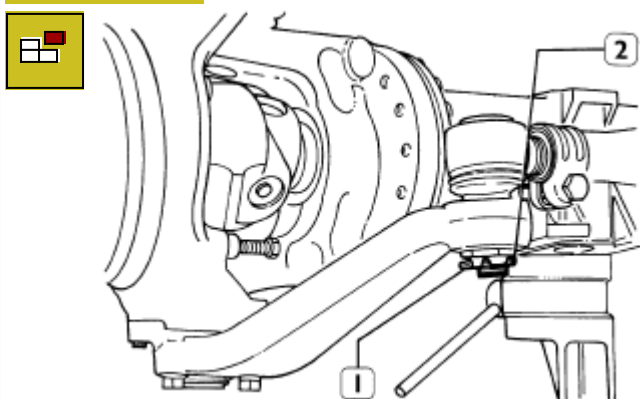

39491

Remove the split pin (1) and unscrew the nut (2) by a few threads, without fully removing.


Figure 16

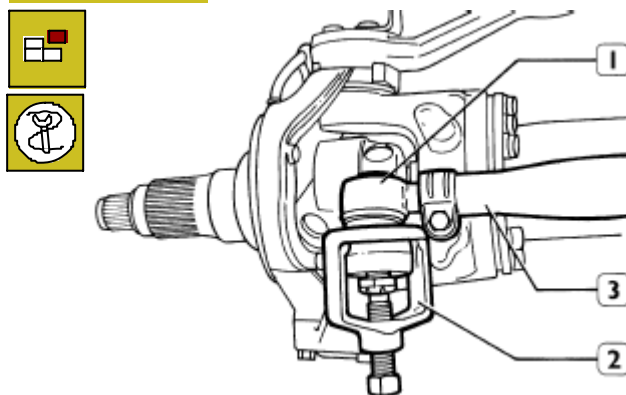

39492

Fit extractor 99347068 (2) and remove the stub axle ball joint. Remove the track rod (3).


Figure 17

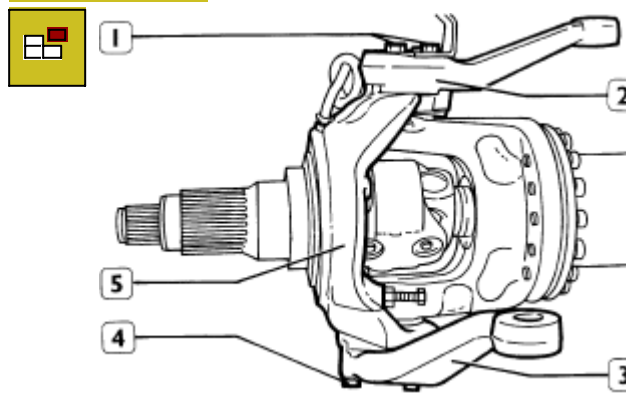

39493

Unscrew the screws (1-4) fixing the pin (2) and knuckle lever (3). Extract the pin (2) and the lever (3) from their seats on the stub axle (5).

Figure 18

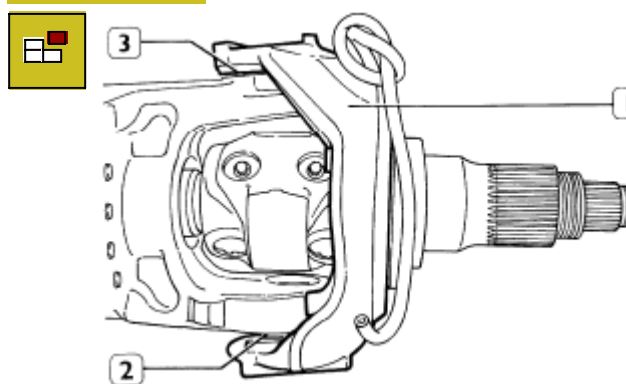


39494

Remove the stub axle (1) and the spacer rings (3) and (2).

Aquila Trucks Centres

Drive shaft disassembly

Figure 19

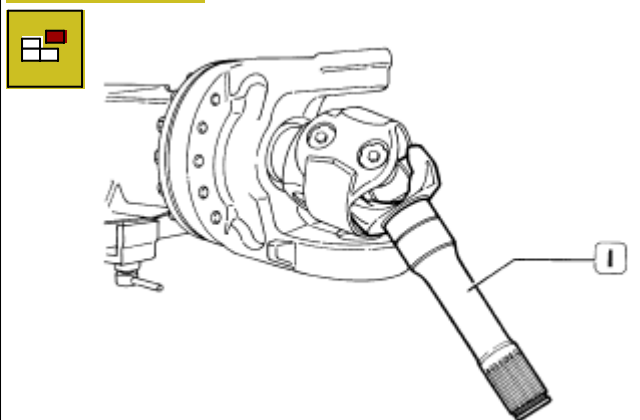


39495

Remove the axle shafts (1).

552820 Yoke support disassembly


Figure 20

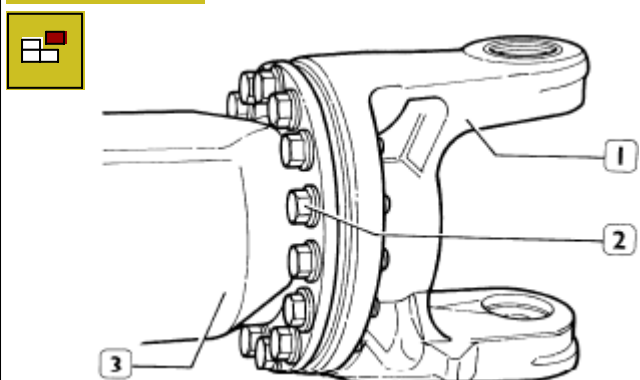

39498

Remove the screws (2) and the yoke (1) from the axle housing (3).
Repeat the same operation on the hub on the opposite side.


Figure 21

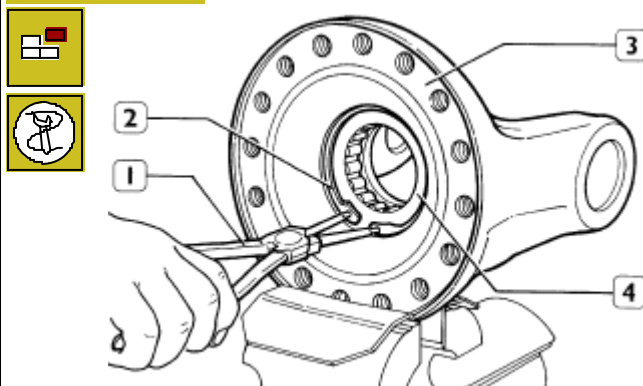

39499

Using suitable pliers (1) remove the retaining ring (2) and the support ring (4) under the yoke support (3).
Remove the seal ring.


Figure 22

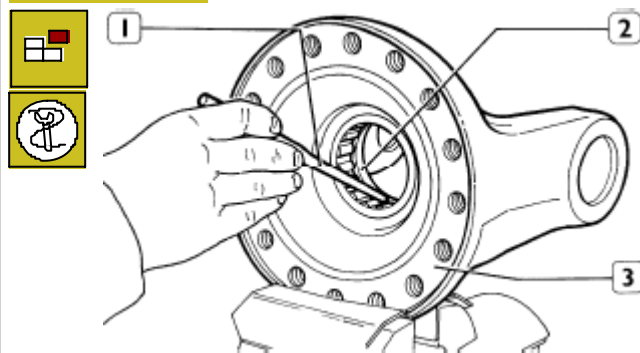

39500

Using a punch (1) extract the seal ring (2) from the yoke support (3).


Figure 23

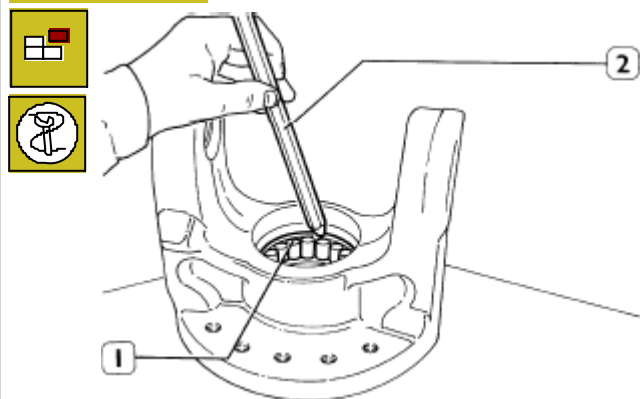

39501

Remove the roller bearing (1) using a suitable punch (2).

Figure 24

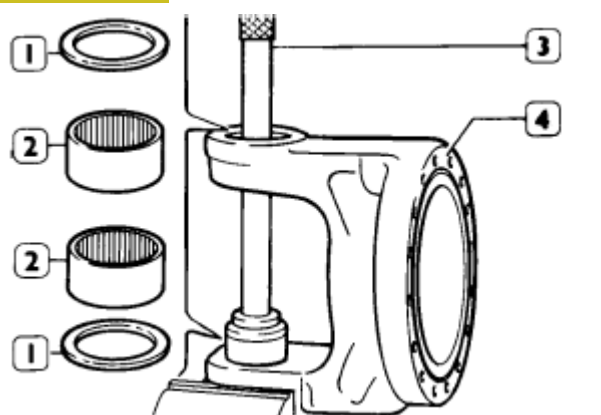


71526

Using a suitable punch (3) on the roller bearing (2), extract the bearings together with the seal rings (1) from the yoke support (4).

Aquila Trucks Centres

Stub axle disassembly


Figure 25

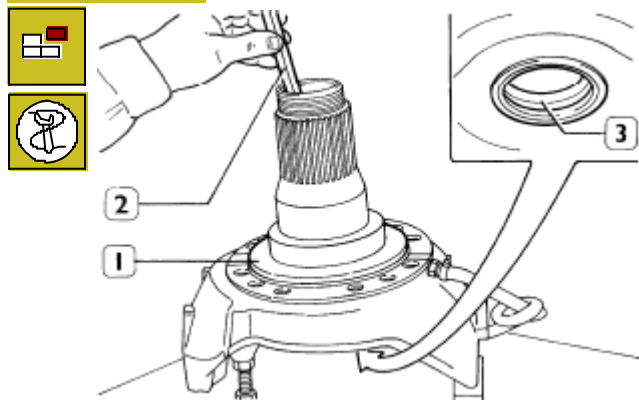

39502

Remove the seal ring (3) from the stub axle (1) using a punch (2).

Figure 26

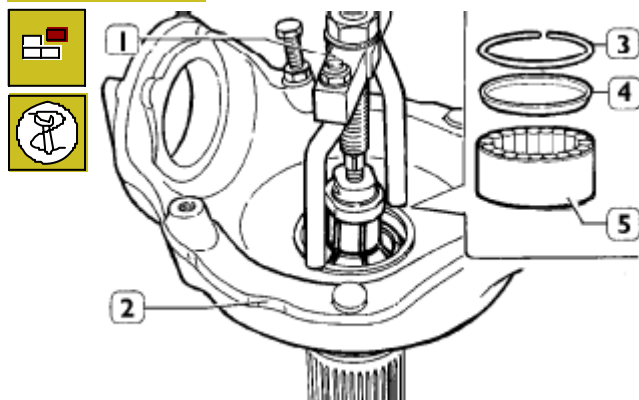


71527

Remove the seeger ring (3) and extract the oil seal ring (4). Using extractor 99348004 (1), extract the roller bearing (5) from the stub axle (2).

Wheel hub disassembly


Figure 27

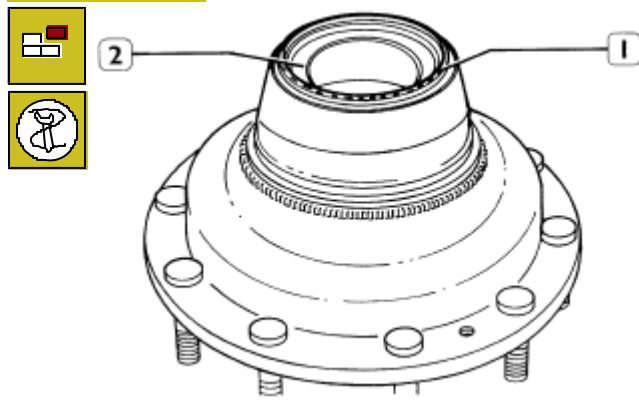

39504

Remove the seal ring (1) and, using a suitable punch, the bearing external ring (2).

Figure 28

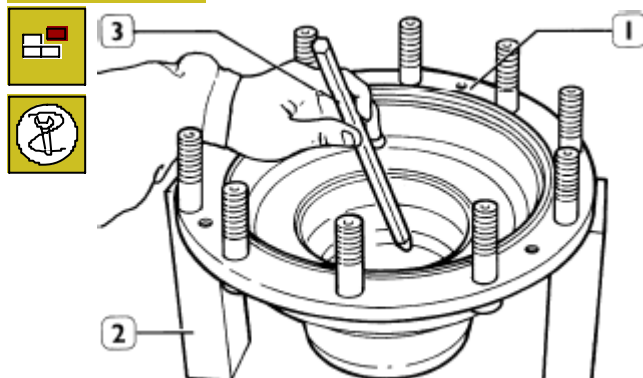


39505

Rest the wheel hub (1) on two supports (2) and extract the bearing external ring and seal using a punch (3).

Epicyclic gear disassembly


Figure 29

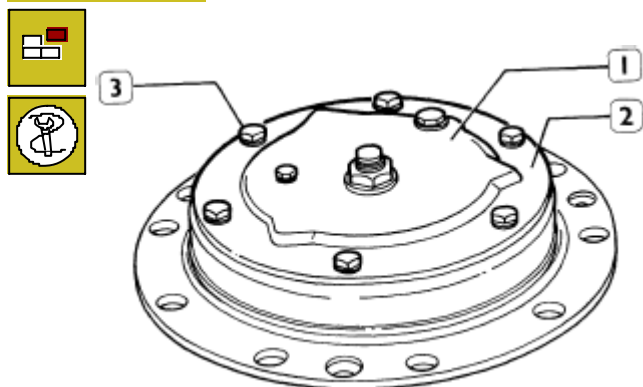

39506

Unscrew the screws (3) and, using a suitable punch, separate the cover (1) from the side pinion support (2).

Figure 30

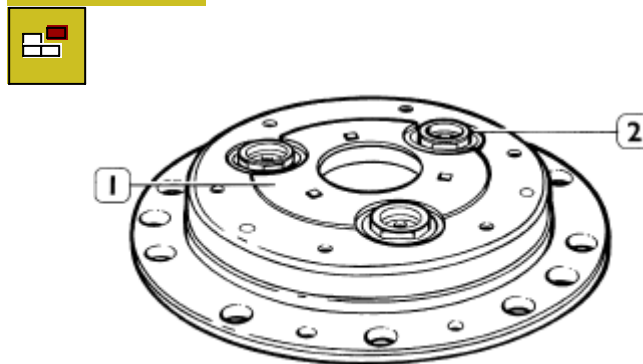


39507

Overturn the support (1) leaving the pins (2) in the seats.

Aquila Trucks Centres


Figure 31

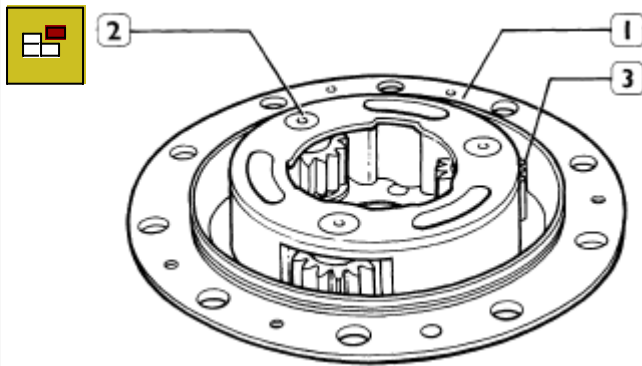

39508

Extract the pins (2) from the support (1) together with the gears (3) and the shims.

Figure 32

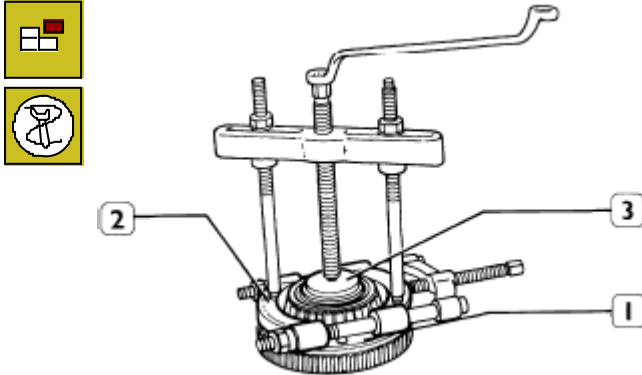

39510

Using extractor 99348001 and reaction block (3) 99345049, remove the support bearing (2) from the ring bevel gear-support gear unit (1).

CLEANING AND CHECKING PARTS

On completion of disassembly operations, immerse all parts (apart from the bearings) in a washing tank containing a solution of water and sodium carbonate, heated to a temperature of $80^{\circ} \pm 85^{\circ}\text{C}$, until the lubrication residual has dissolved.

Use a metal brush and scraper to remove any further deposits, including residual from the seals, Loctite and sealing compound from the mating surfaces, taking care not to damage the parts.

Wash the parts again and dry with compressed air.

On the workbench, using an electric cleaning machine with rotating metal brushes, eliminate any residuals of Loctite or sealing compound on the threads of the screws.

The bearings must be immersed in an oil bath and carefully cleaned with a brush in order to remove all traces of lubrication.

Dry the bearings with compressed air, making sure that the air jet does not make the bearings rotate.

Lubricate the bearings with the same type of oil used for the epicycloid gear unit.

Press down on the bearings with your hand and rotate them slightly in both directions. Bearing movement should be both smooth and silent.

Carefully check that the rollers and cages, as well as the external and internal rolling tracks, are not worn. Check all parts to see whether they can be re-used or replaced. Check the axle housing, the yoke supports and relative stub axles for signs of cracking or damage.

Replace any worn parts.

Check the studs fixing the wheel: if the threads are damaged or deformed they must be replaced. Work under a press to extract and re-assemble the studs. On completion of assembly operations, check that the orthogonal deviation is no greater than 0.3 mm.

CHECKING THE AXLE SQUARENESS

In order to read the angle with the gauge proceed as follows:

- position the two support rods (1, Figure 33), complete with centering cones (4), in the seats of the kingpins, securing in position with the rods;
- fit the gauge assembly and read the angle values on the goniometers (2).

The angle of the holes should be 5° .

Check the levelness of the leaf spring contact surfaces.


In order to read the angle with the gauge proceed as follows:

- insert two centering pins (4, Figure 34) on the leaf spring surfaces;
- using the centering pins, position two goniometers (2) on the leaf spring surfaces;
- fit the transverse rods (1) on the support rods (3) and the goniometers (2), and read the incidence angle values on the relative goniometers.

The axle caster angle should be $2^{\circ} 17'$.

Aquila Trucks Centres

Figure 33

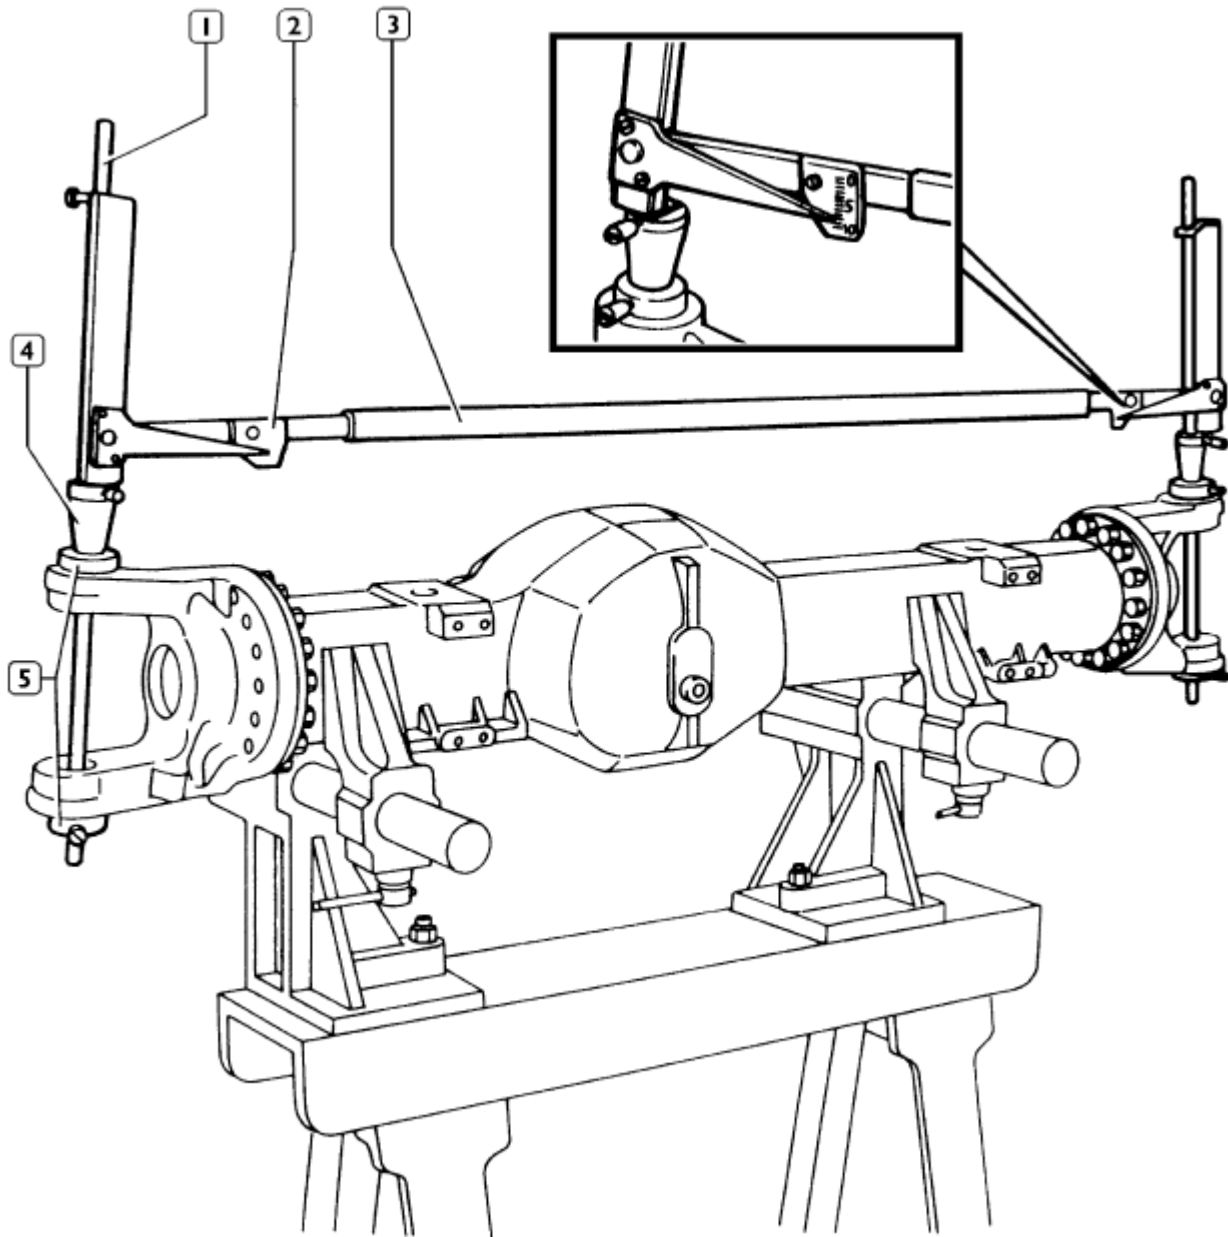


39593

CHECKING THE ANGLE

1. Support rod - 2. Goniometer - 3. Transverse rod - 4. Centering cones - 5. Spacer

Aquila Trucks Centres

Figure 34

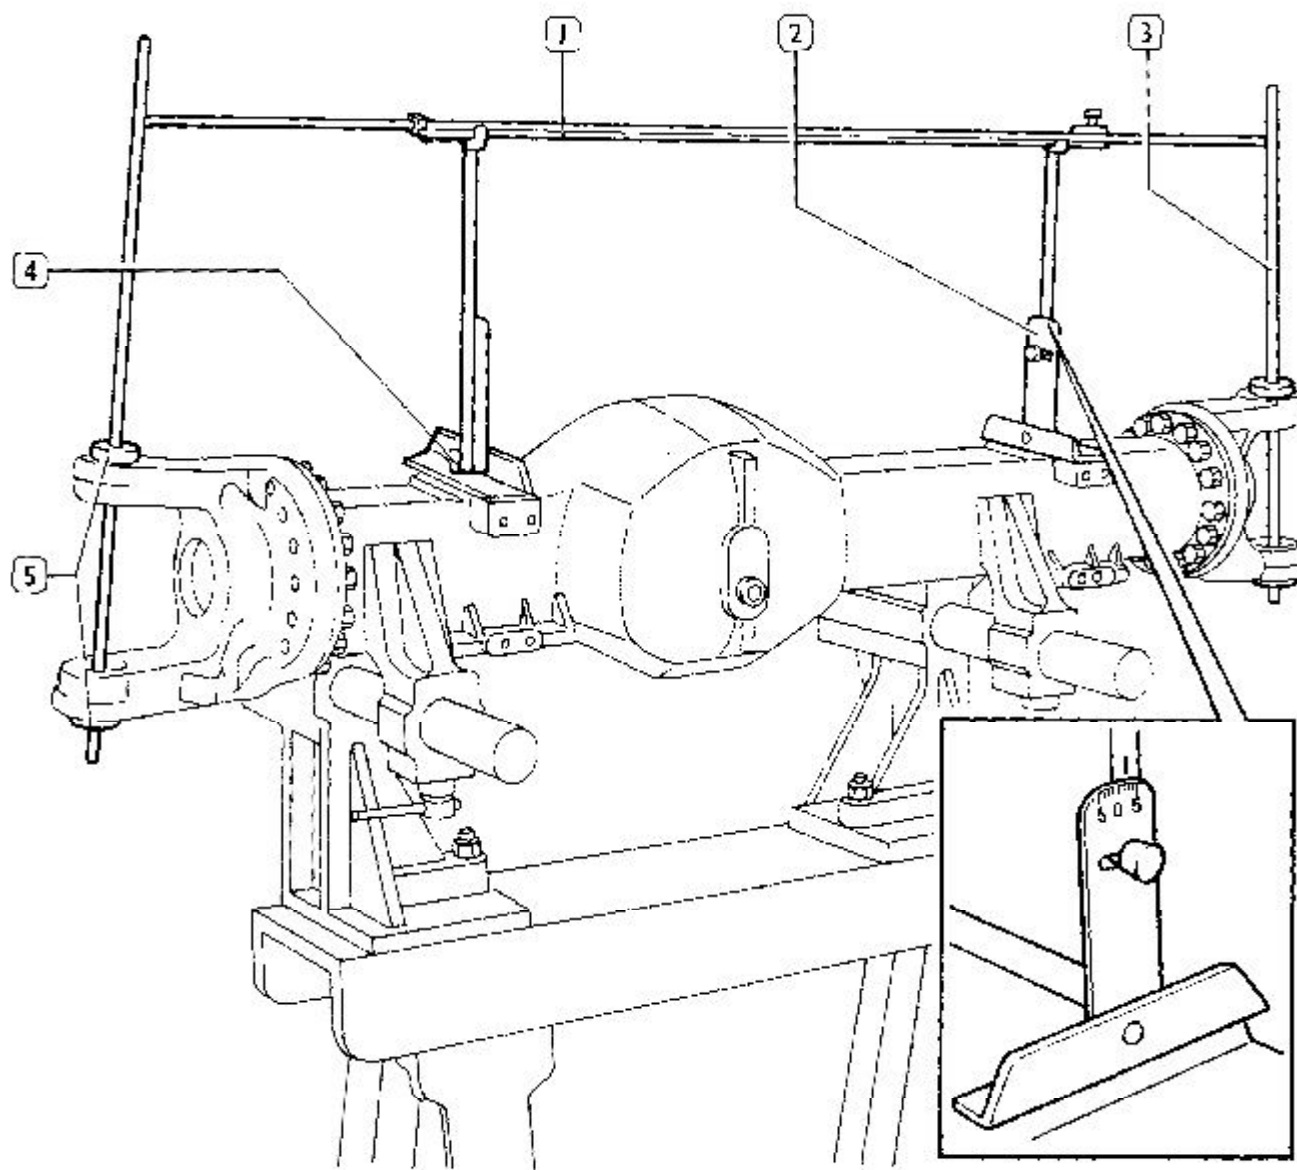

39594


CHECKING THE CASTER ANGLE

1. Transverse rod - 2. Goniometer - 3. Support rod - 4. Centering pin - 5. Spacer

Aquila Trucks Centres

ASSEMBLY

Figure 35

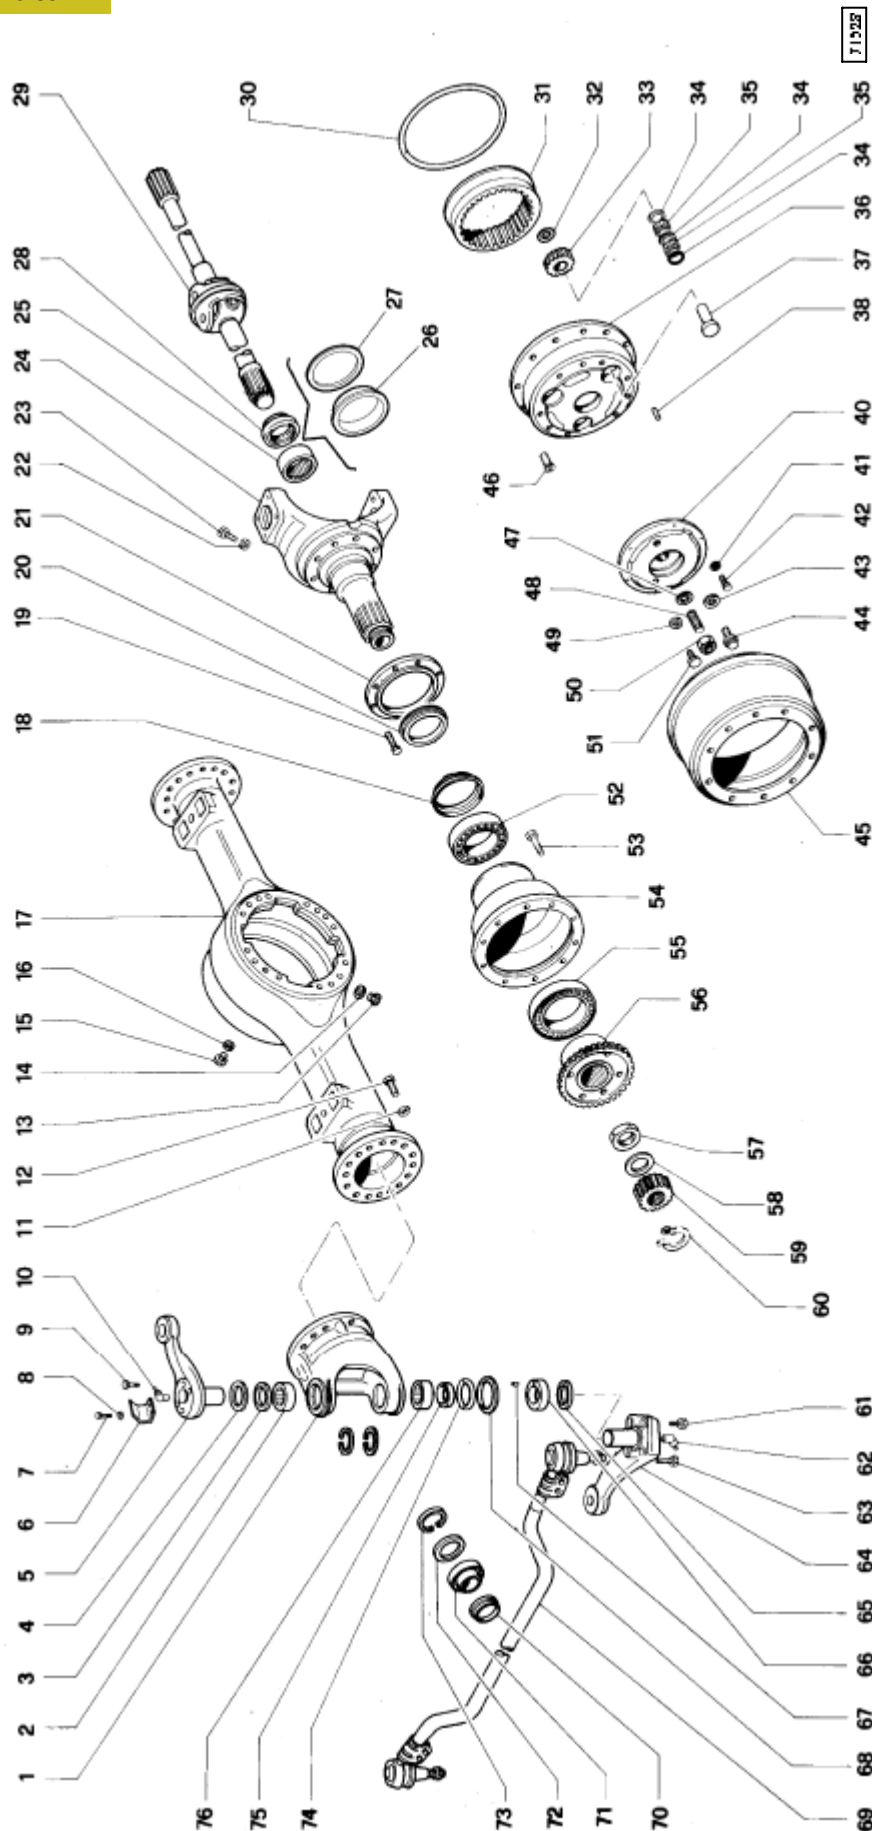


REAR AXLE AND FINAL DRIVE COMPONENTS

1. Yoke - 2. Roller bearing - 3. Seal ring - 4. Compensation ring - 5. Steering lever - 6. Bracket - 7. Lever fixing screw - 8. Washer - 9. Lever fixing screw - 10. Grease nipple - 11. Washer - 12. Yoke support fixing screw - 13. Oil drainage plug - 14. Seal washer - 15. Oil filler plug - 16. Seal washer - 17. Axle housing - 18. Seal ring - 19. Brake support fixing screw - 20. Shim ring - 21. Intermediate ring - 22. Screw locknut (23) - 23. Steering stop adjustment screw - 24. Stub axle - 25. Roller bearing - 26. Oil seal ring - 27. Circlip - 28. Seal ring - 29. Axle shaft with homo-kinetic coupling - 30. Seal ring - 31. Ring gear - 32. Shim washer - 33. Crown wheel gears - 34. Shim rings - 35. Bearing rollers - 36. Side pinion support - 37. Bearing mounting pin - 38. Parallel pin - 40. Crown wheel support cover - 41. Washer - 42. Screw fixing cover - 43. Seal washer - 44. Oil induction plug - 45. Brake drum - 46. Screw fixing crown wheel support - 47. Seal washer - 48. Spacer screw - 49. Seal washer - 50. Safety nut - 51. Oil level plug - 52. Tapered roller bearing - 53. Screw fixing wheel - 54. Wheel hub - 55. Tapered roller bearing - 56. Crown support gear unit - 57. Nut fixing wheel hub - 58. Support ring - 59. Gear unit - 60. Safety ring - 61. Screw fixing lever - 62. Grease nipple - 63. Screw fixing lever - 64. Connecting lever - 65. Support ring - 66. Spacer ring - 67. Stop pin - 68. Guard ring - 69. Transverse tie-rod - 70. Seal ring - 71. Roller bearing - 72. Support ring - 73. Safety ring - 74. Seal ring - 75. Seal ring - 76. Roller bearing

Aquila Trucks Centres

Yoke support assembly


Figure 36

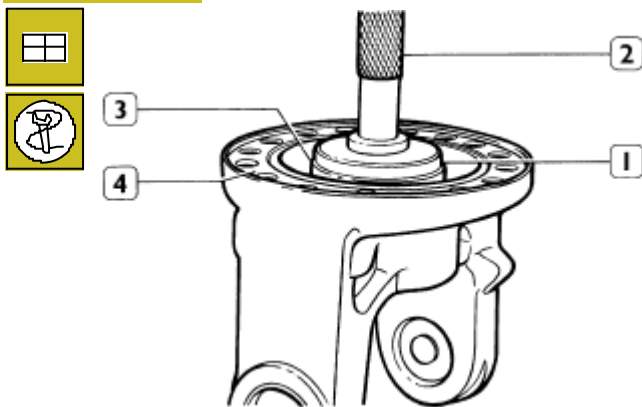

39511

Using punch 99374371 (1) and grip 99370006 (2), fit the roller bearing (3) in the seat on the yoke support.


Figure 37

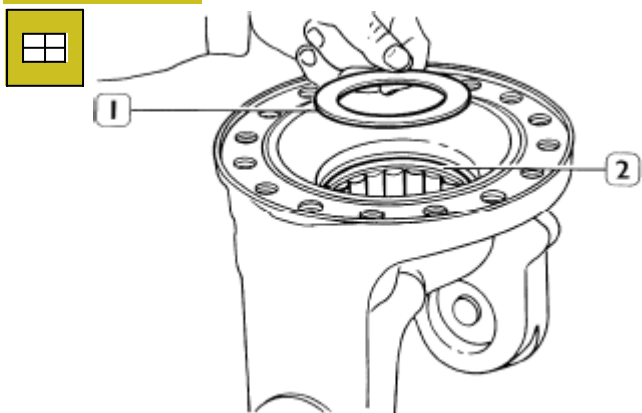

39512

Fit the spacer (1) in the seat (2) on the yoke support.


Figure 38

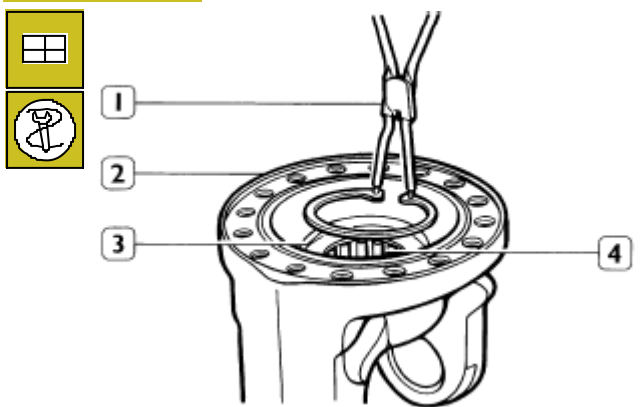

39513

Using suitable pliers (1) position the retaining ring (3) in the seat on the yoke support (2).


Figure 39

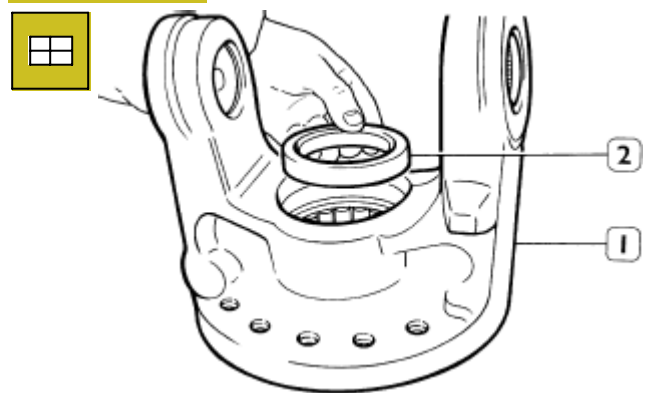

39514

Overturn the support (1) and fit the seal (2).


Figure 40

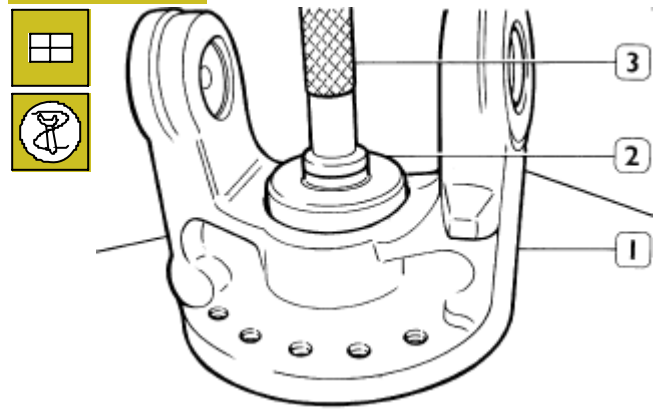

39515

Using key 99374371 (2) and grip 99370006 (3), fit the seal in the seat on the yoke support (1).

Figure 41

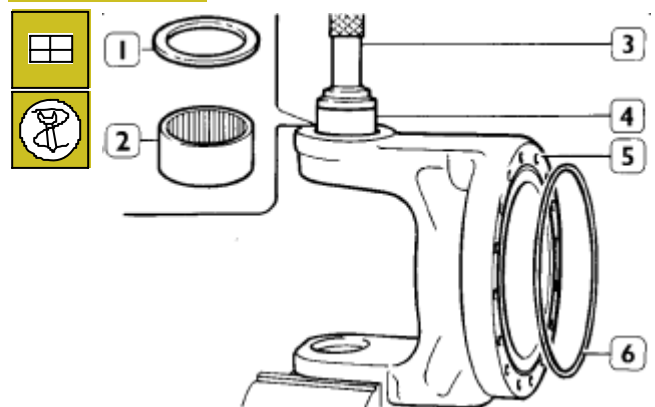


71529

Using punch 99374382 (4) and grip 99370006 (3), fit the roller bearing (2) in the yoke support (5); then fit the seal ring (1). Repeat the same operation on the opposite side. Position the seal ring (6) in the seat on the yoke support (5).


Aquila Trucks Centres

Figure 42

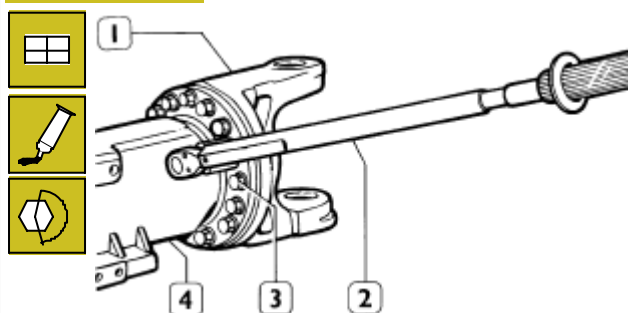


Fit the yoke support (1) on the axle housing (4), remembering to fit the mechanical steering stop stud in the correct position. Align the holes for the fixing screws. Gradually and fully tighten the screws (3). Use a torque wrench to tighten to the correct value.

Figure 45

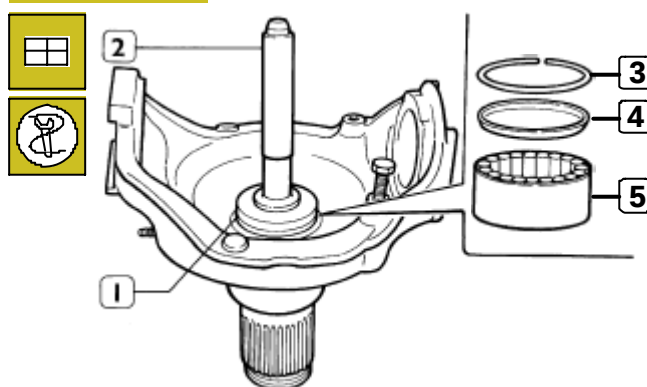


Using key 99374369 (1) and grip 99370006 (2), fit the roller bearing (5). Fit the oil seal ring (4) and secure to the stub axle with the circlip (3).

Figure 46

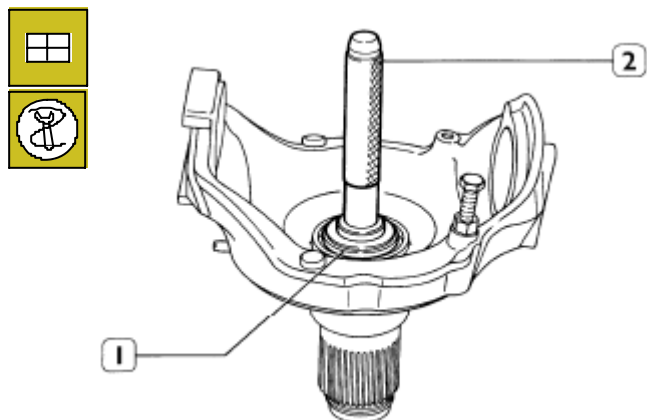

Using key 99374390 and grip 99370006 (2), fit the seal ring (1) in the stub axle seat.


Figure 47

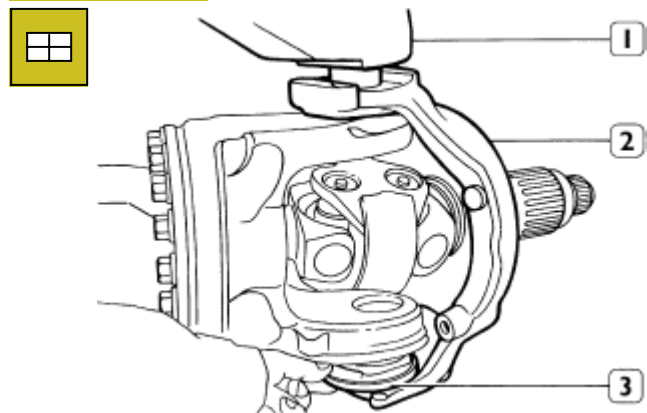

Fit the stub axle (2) and provisionally insert the upper pin (1) with the shim (3).

Drive shaft assembly


Figure 43

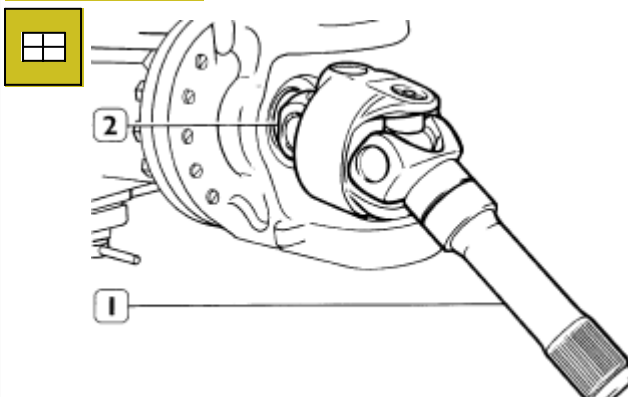

Lubricate the internal ring on the bearing (2) and then insert the drive shaft (1), taking care not to damage the seal ring.

Stub axle assembly


Figure 44

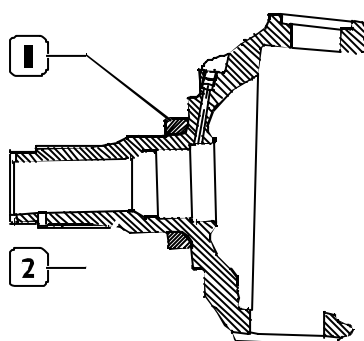

Check that the surface of the ring (1), that houses the hub seal ring, is not damaged or worn. Replace the ring (1) if necessary. When assembling the ring (1), apply LOCTITE 573 on the stub axle (2) pin contact surface (⇒).

Aquila Trucks Centres


Figure 48

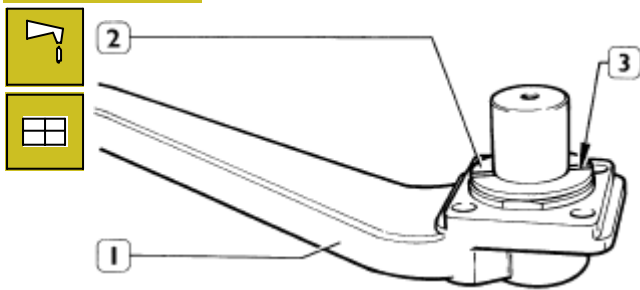

39521

Lubricate the shoulder ring (2) and fit on the steering return lever (1) in the position indicated by the arrow (3).


Figure 49

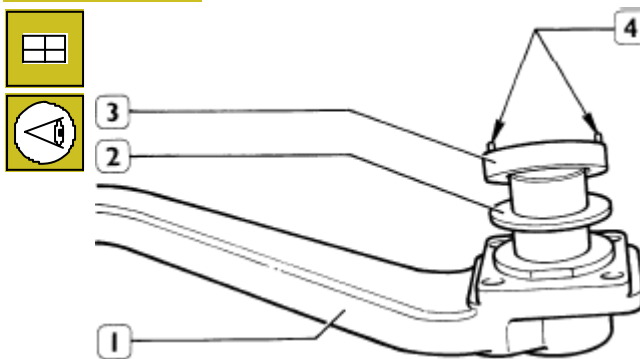

39522

Fit the spacer (3) with the pins (4) positioned as shown in the drawing; fit the seal ring in the safety ring and insert between the yoke support and the stub axle.


Figure 50

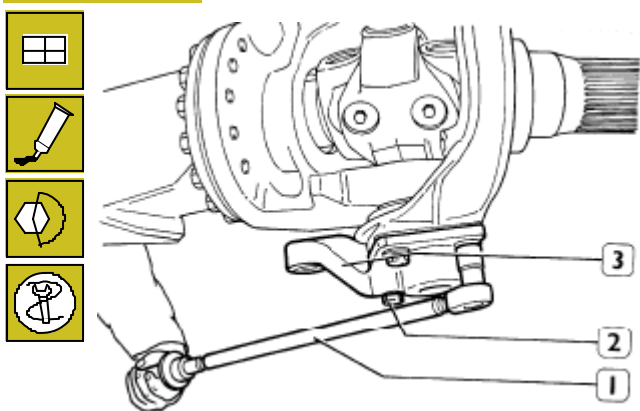

39523

Fit the lever (3) on the stub axle. Tighten the screws (2) and use the torque wrench (1) to tighten to the correct value.


Figure 51

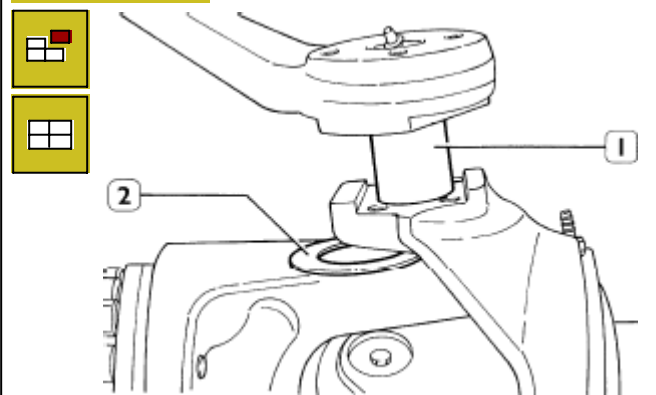

39524

Partially extract the upper pin (1) and insert the shim (2).

Figure 52

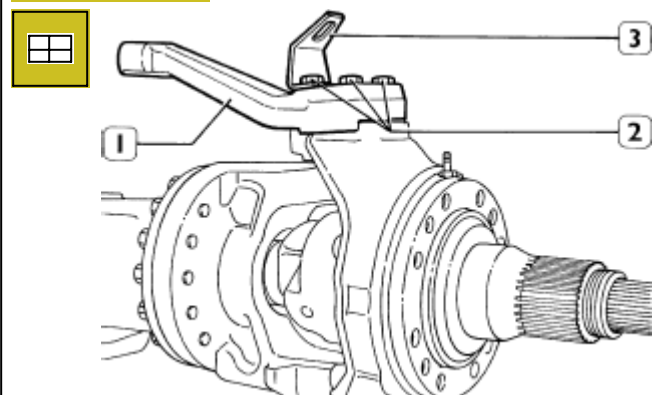


39525

Insert the upper pin (1). Assemble the brake air piping union support bracket (3) and secure in position with the screws (2).

Aquila Trucks Centres

Figure 53

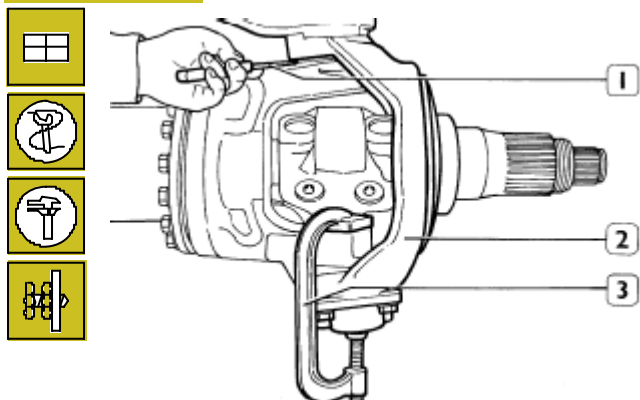

39526


Fit a clamp (3) in order to raise the stub axle (2); check that there is no clearance with a feeler gauge (1).

If clearance is detected, replace the shim with a suitably dimensioned shim and check that the clearance has been eliminated.

The shims are available in various thicknesses: 1.75; 2; 2.25; 2.5; 2.75; 3; 3.25; 3.5.

Remove the upper pin fixing screw, smear with Loctite and refit, tightening to a torque of 230 Nm (23 kgm).


Figure 54

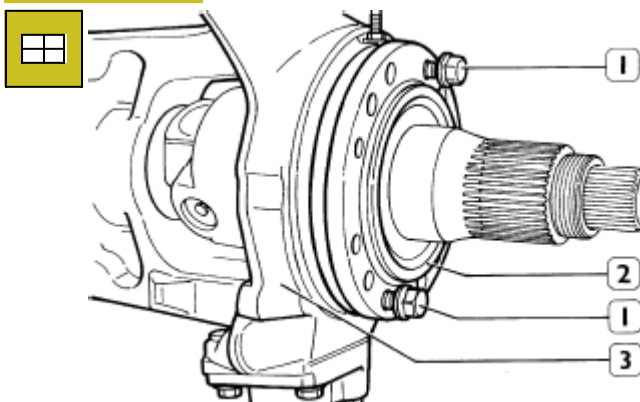

39527

Using two screws (1) insert the flange (2) on the stub axle (3), with the oil drainage plug facing downwards.


Figure 55

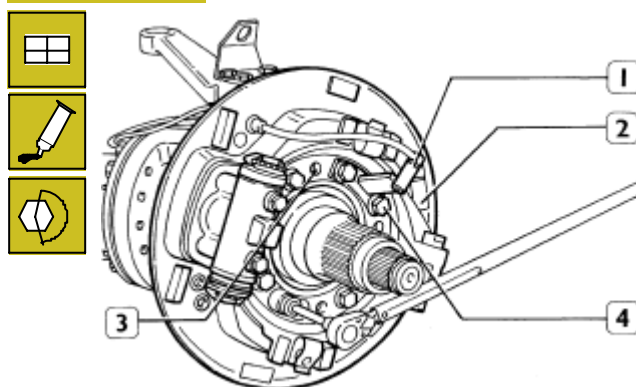

39528

Assemble the brake body (3) and guard (2) on the stub axle; smear the screws (4) with Loctite and tighten to a torque of 360 Nm. Fit the ABS sensor (1).


Figure 56

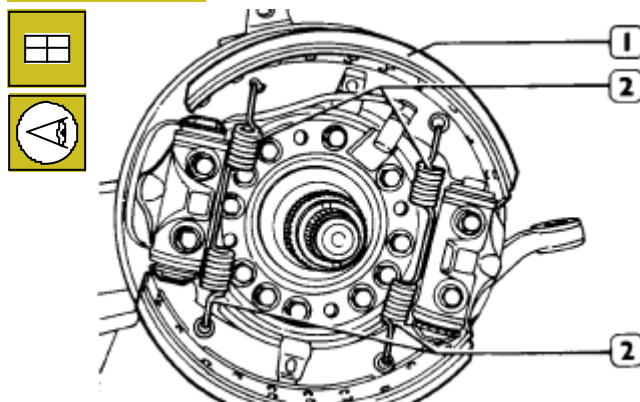

71531

Fit the jaws (1) so that the marked arrow is facing towards the direction of forward movement; using tool 99372211 fit the return springs (2).

Figure 57

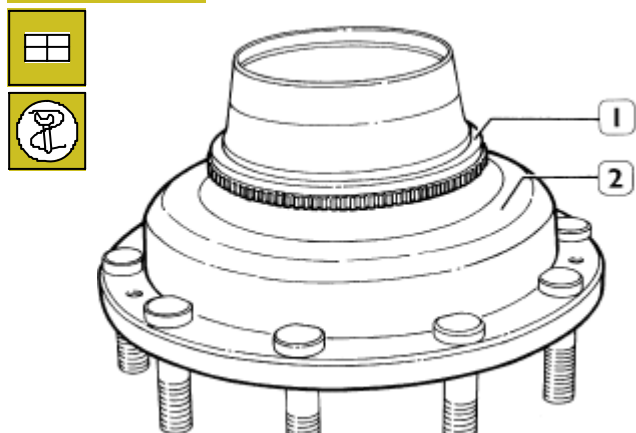


39530

Slightly heat the phonic wheel (1) with an electric drier and fit on the wheel hub (2).

Aquila Trucks Centres


Figure 58

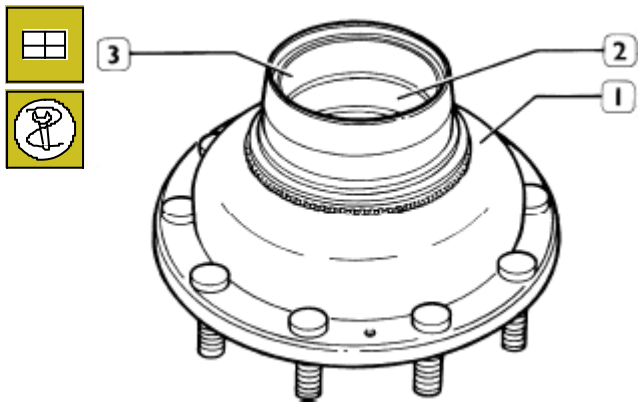

39531

Fit the bearing external races (2 and 3) on the wheel hub (1) using punch 99374094.


Figure 59

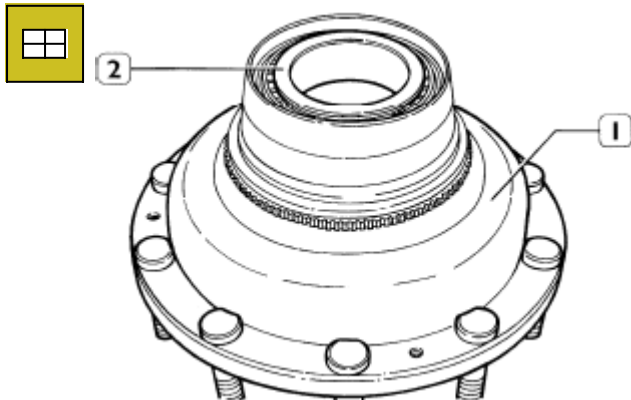

39532

Insert the external bearing internal race (2) on the wheel hub (1).


Figure 60

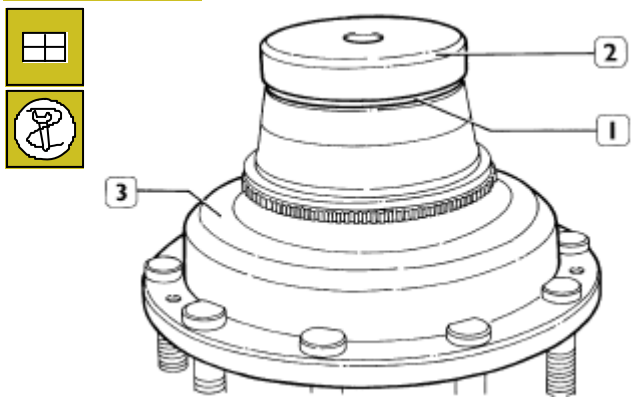

39533

Using key 99374377 (2) fit the seal (1) on the wheel hub (3).


Figure 61

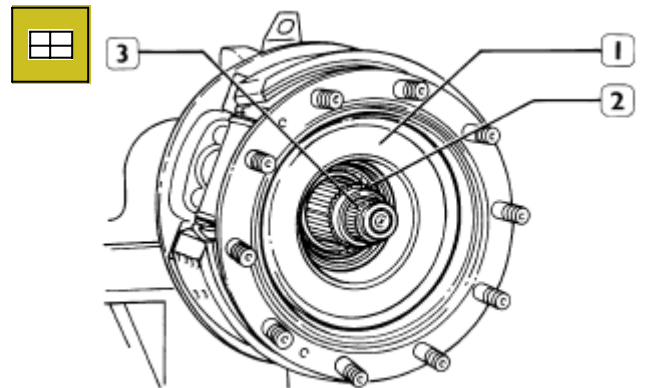

39488

Fit the wheel hub (1) on the stub axle shank (1).

Figure 62

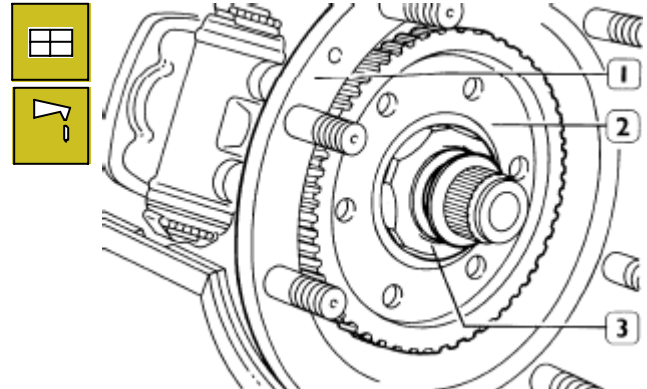


39534

Fit the crown support gear unit (2) and bearing on the hub (1). Tighten the nut (3) with the contact surface pre-lubricated with Molycote.

NOTE The oil flow milling on the crown support gear unit (2) must be positioned perpendicularly on the lower part.

Figure 63

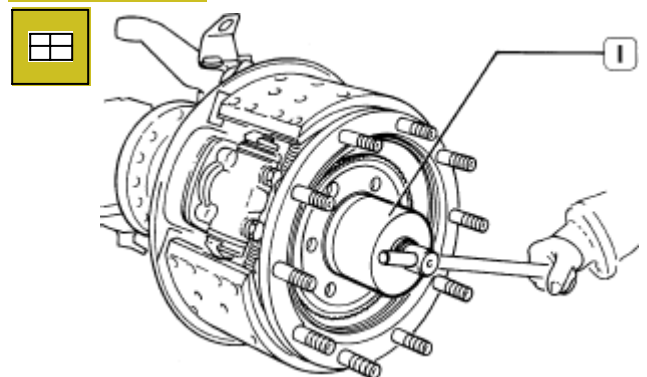


39535

Using key 99354207 (1) tighten the wheel hub fixing nut until the assembly rotates with difficulty. Strike the hub (axially) a few times with a rubber mallet to correctly settle the bearings.

Aquila Trucks Centres

Figure 64

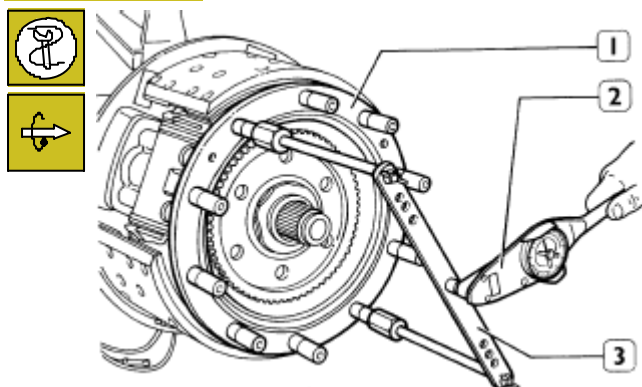

39536

Apply tool 99389819 (3) to the wheel hub (1) and rotate the hub with the torque wrench (2).


Zero-set the torque wrench (2) index and rotate the wheel hub at approx. 25 to 30 rpm.

Read the rolling torque on the tool scaled index.

This value must correspond with the data on the SPECIFICATIONS AND DATA table on page 18.

If different values are detected, tighten or loosen the nut until the required values are obtained.


Figure 65

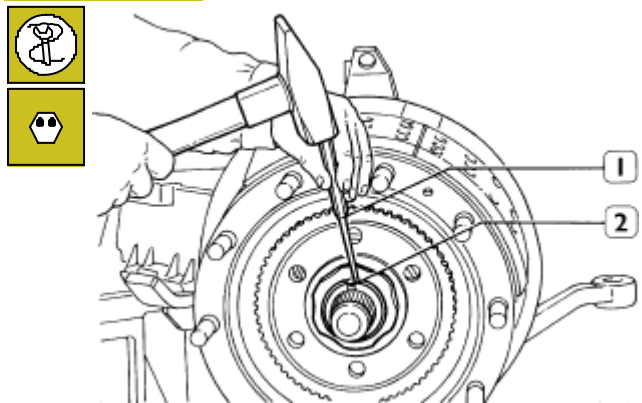

39537

Using a punch (1) secure the nut (2).


Figure 66

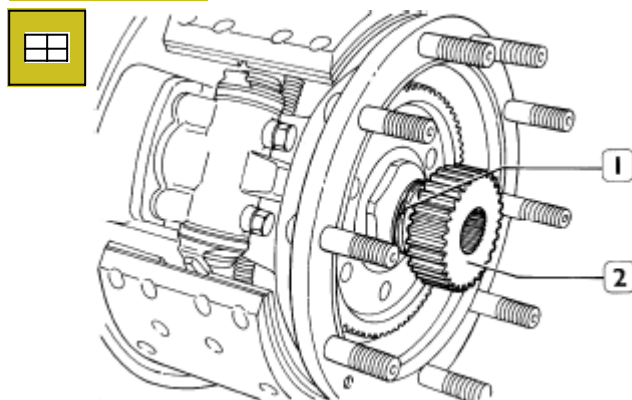

39538

Assemble the shoulder ring (1) and the gear unit (2).

Figure 67

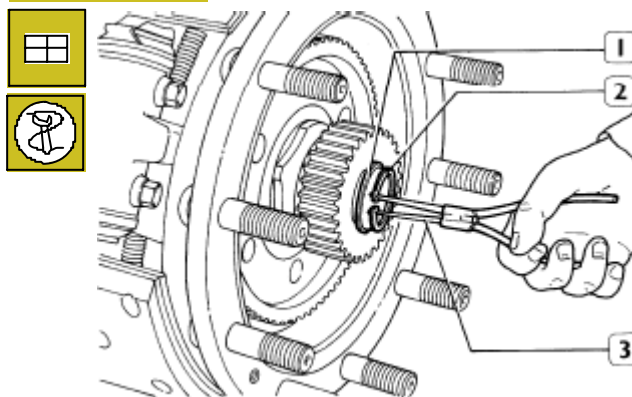


39539

Using pliers, fit the shoulder ring (1) and the seeger ring (2) on the axle shaft.

Aquila Trucks Centres

522870 Epicyclic reduction gear assembly


Figure 68

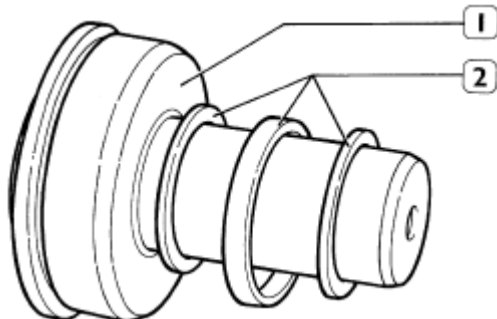

39541

Assemble the shim rings (2) on the pin (1).


Figure 69

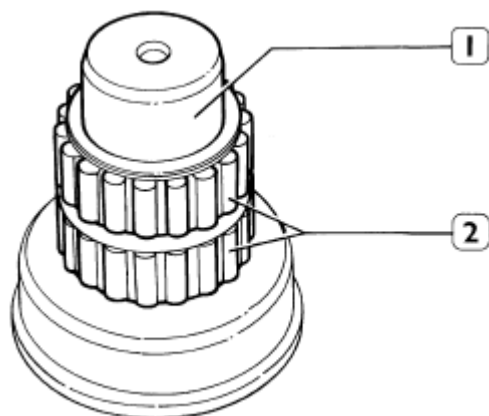

39542

Using grease, fit the rollers (2) on the pin (1).


Figure 70

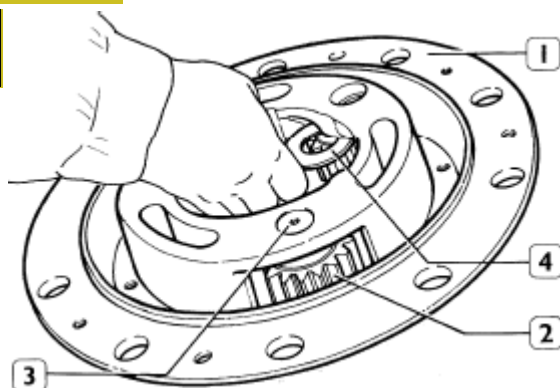

39543

Insert the gears (2), washers (4), spacers and pins (3) in the support (1).


Figure 71

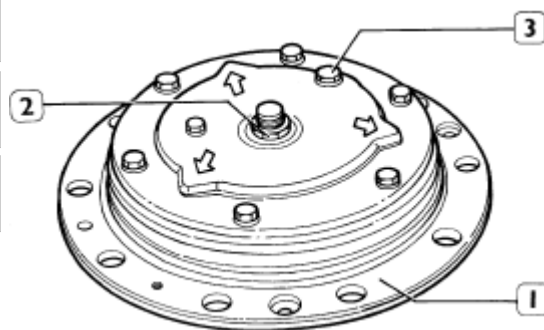

39544

Smear sealing compound on the mating surfaces of the support cover (1), fit the seal and position the cover so that the parts indicated by the arrows coincide with the pins. Before fitting the seal, it is advised to position the pins according to seats on the cover, then fit the seal. Tighten the fixing screw to a torque of 25 Nm (2.5 kgm). Loosen the nut (2) and slightly unscrew the screw (3).

Figure 72

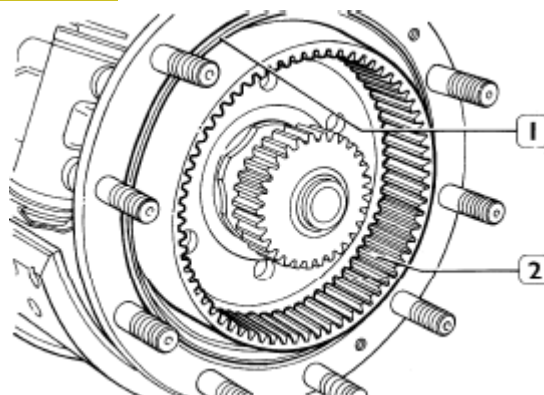


39545

Fit the crown (2) with the external bevel facing towards the operator, grease the circlip (1) and fit in the seat.

Aquila Trucks Centres


Figure 73

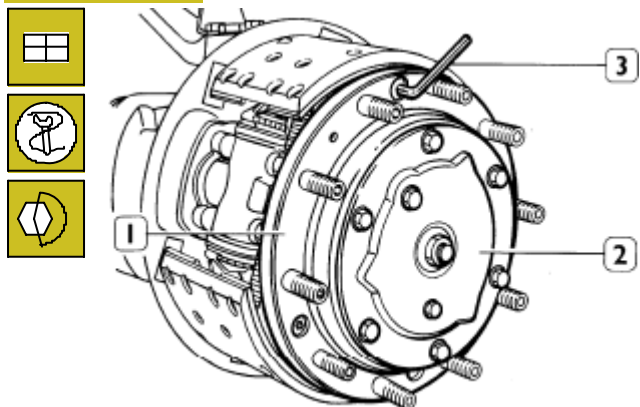

39546

Fit the side pinion support (2) on the wheel hub (1), using an Allen wrench (3), tighten the three sunken hex screws to a torque of 25 Nm (2.5 kgm).

Figure 74

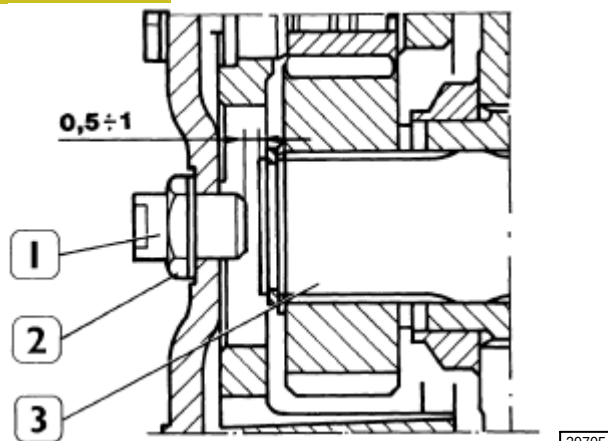


39705

Tighten the screw (1) until it makes contact with the axle shaft (3), then loosen by 1/3 to 1/2 of a turn, thereby obtaining an assembly clearance of 0.5 to 1mm.

Tighten the nut (2).

Replace the washer each time the axle shaft axial clearance is adjusted.


Figure 75

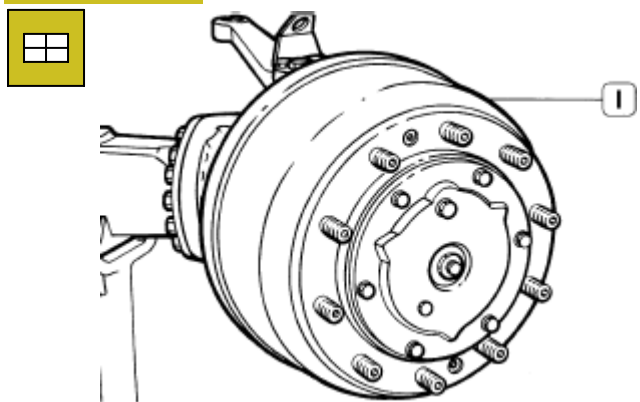

39547

Fit the brake drum (1) on the wheel hub and secure in position with the two screws.

Figure 76

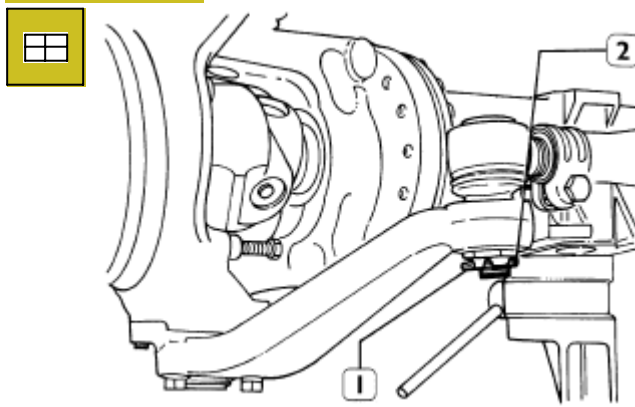

39491

Fit the transverse tie-rod and tighten the nut (1) to the pre-stabilised torque value, position the split-pin (2) and bend to secure in position.

Greasing the stub axle pins

Using a grease pump, insert grease into the grease nipples. Pump grease into the roller bearing sleeves until they are full, and the pressure forces the grease past the seal rings and out of the gap between the stub axle upright and the yoke support. Eliminate the excess grease.


Epicyclic gear unit lubrication

Introduce approx. 0.75 litres (0.68 kg) of TUTELA W 140/M-DA oil, through the hole on the cover of the epicycloid gear unit.

Aquila Trucks Centres

**525910 REMOVING THE DIFFERENTIAL
(with the axle mounted on stand
99322215)**


Figure 77

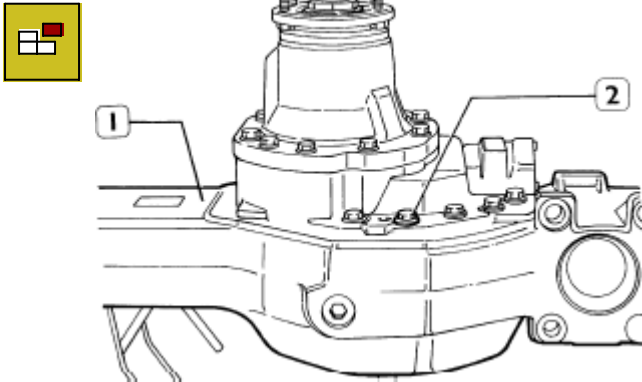

39548

Position the axle housing (1) as shown in the drawing. Remove the wheel hubs, stub axles and extract the drive shafts as described in the relevant chapter. Tighten the differential carrier fixing screws (2).

Figure 78

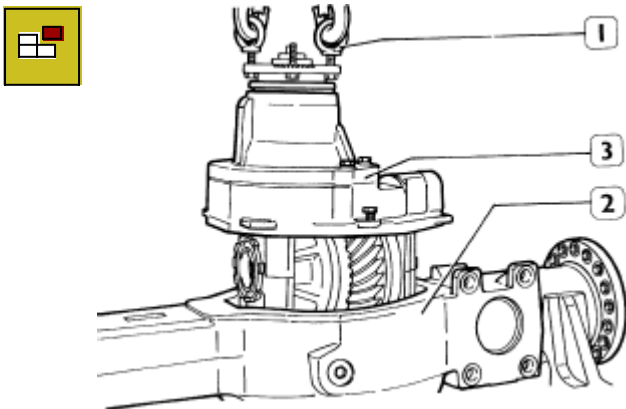

39549

Fit two eyebolts (1) to the differential output flange. Using a suitable hoist and cables, remove the differential (3) from the axle housing (2).


Checking the axle housing

Check the alignment of the axle housing, as any eventual deformation will lead to unnecessary stress and make the assembly noisy (see page 32).

**REFITTING THE DIFFERENTIAL
(with the axle mounted on stand 99322215)**

To keep the circlip seal in its seat, located between the axle housing and the differential housing, apply a light covering of grease. The mating surfaces on the axle housing (2) and the differential housing (1) must be smeared with Loctite 573.


Figure 79

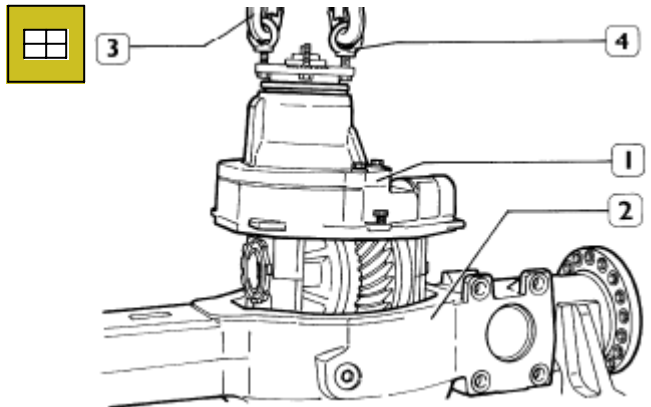

39550

Using a hydraulic hoist with cables and hooks (3), position the differential housing (1) in the axle housing (2).

Figure 80

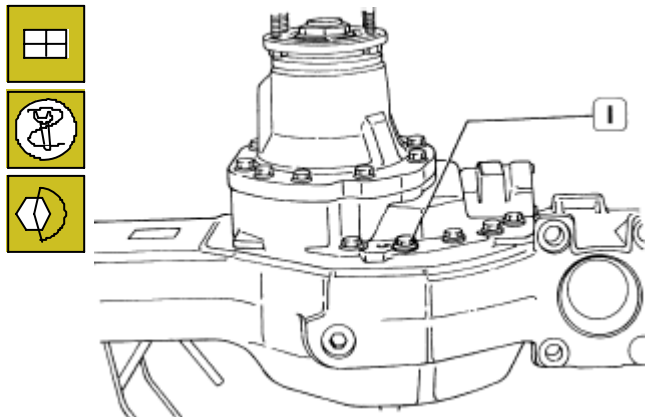


39551

Insert the screws (1) and tighten to the pre-stabilised torque value with a torque wrench.

Aquila Trucks Centres

Figure 81

78613

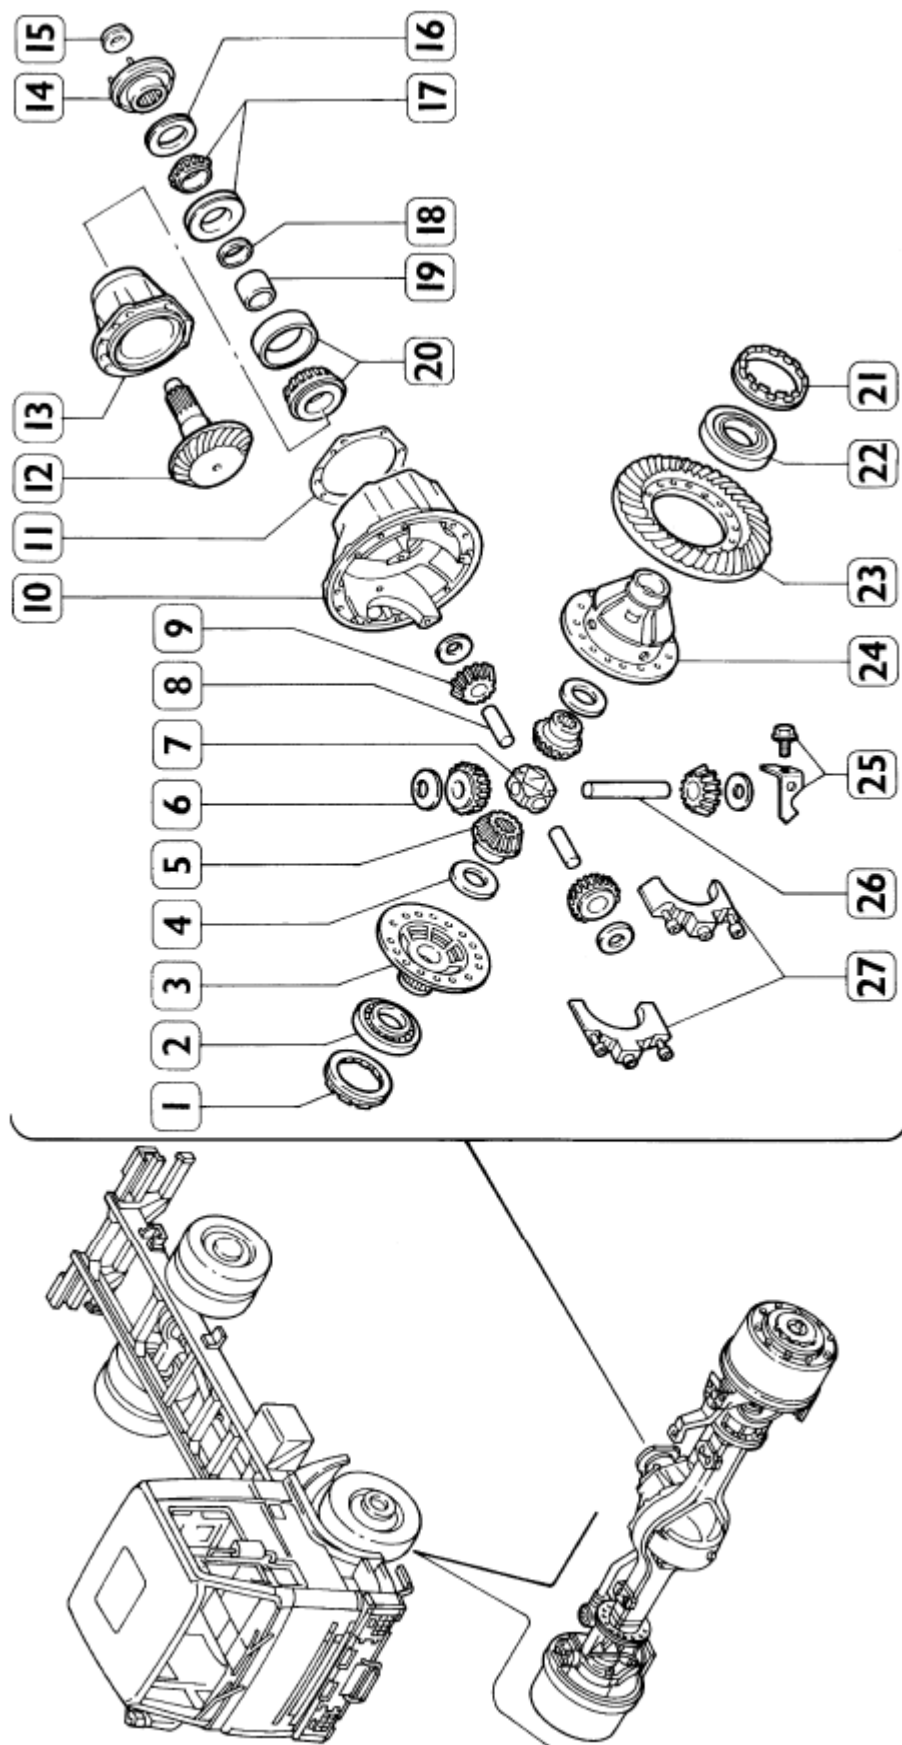


DIFFERENTIAL COMPONENTS

1. Ring nut - 2. Bearing - 3. Gear housing cover - 4. Shoulder washer - 5. Crown wheel - 6. Washer - 7. Spider - 8. Short pin - 9. Side pinion - 10. Differential carrier - 11. Adjustment shim - 12. Pinion - 13. Pinion support - 14. Flange - 15. Nut - 16. Seal ring - 17. Bearing - 18. Adjustment ring - 19. Spacer - 20. Bearing - 21. Ring nut - 22. Bearing - 23. Crown - 24. Differential housing - 25. Long pin - 26. Caps

Aquila Trucks Centres


525910 DIFFERENTIAL REPAIR Disassembly

Figure 82

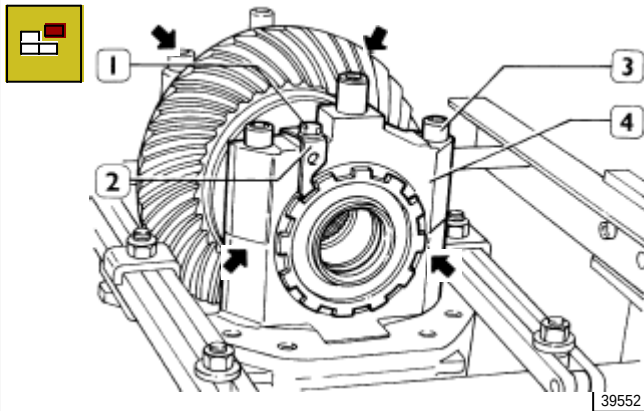


Uncrew the screws (1) and remove the safety plate (2). Heat the points indicated by the arrows with electric drier 99305121 and uncrew the screws (3) sealed with LOCTITE. Remove the caps (4) and ring nuts.

Figure 83

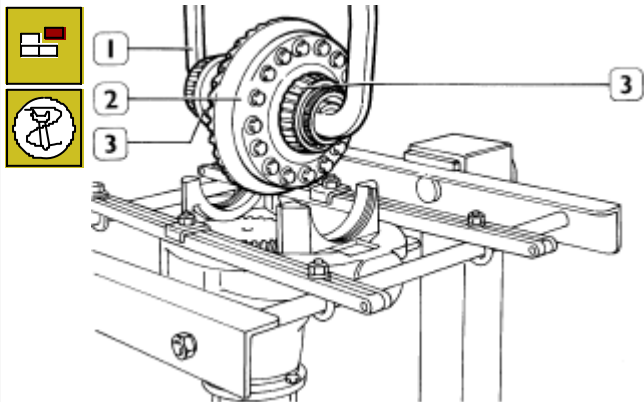


Raise the differential housing (2) and bearings (3) using a hoist (1).

Figure 84

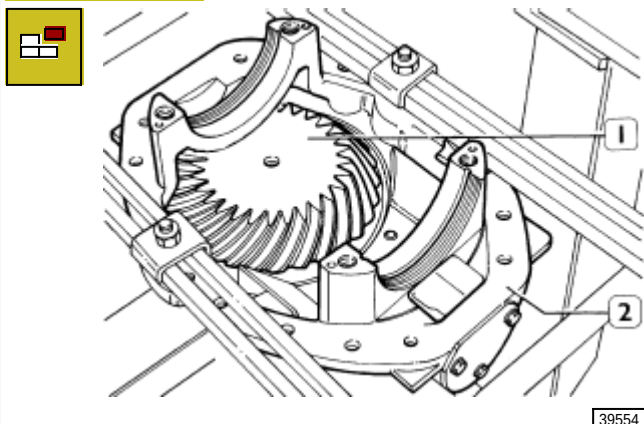


View of pinion (1) inside the differential carrier (2).

Figure 85

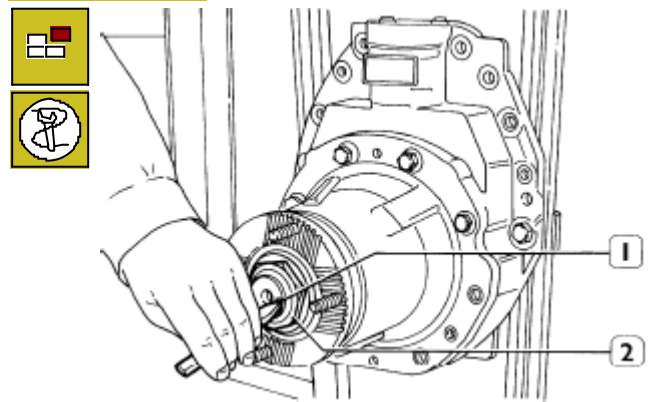


Use a punch to remove the securing (1) notch and unscrew the nut (2) as described below.

Figure 86

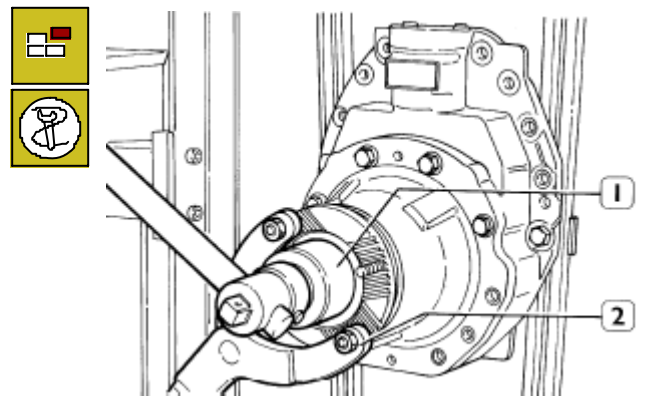

Block the rotation of the drive coupling flange with the reaction lever 99370317 (2), and loosen the drive coupling flange fixing nut using the Allen wrench 99355081 (1).

Figure 87

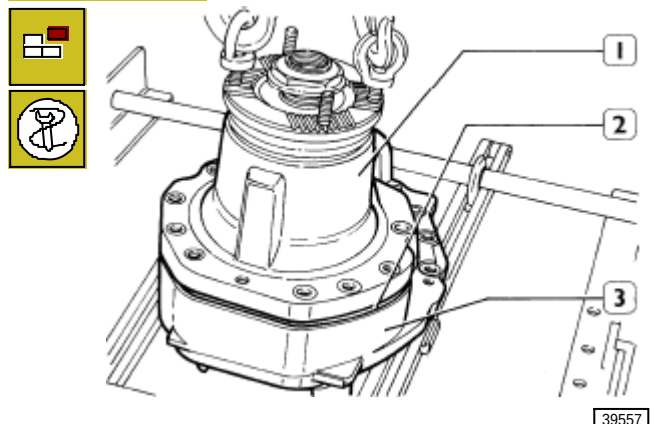


Uncrew the bolts that fix the bevel pinion support to the differential carrier. Extract the support (1) and bevel pinion from the differential carrier (3); remove the pinion/bevel gear positioning shims (2).

Aquila Trucks Centres

Disassembling the differential housing


Figure 88

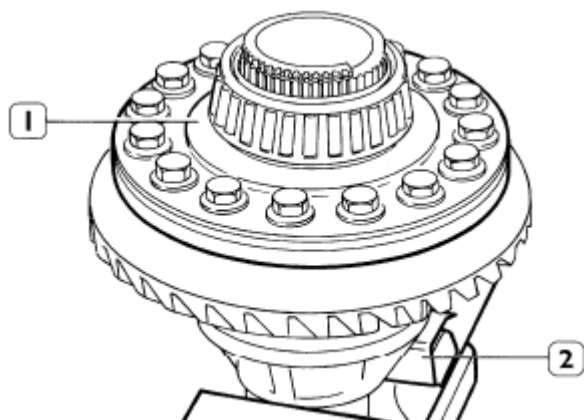

39558

Fit the gear housing (1) in a vice (2).


Figure 89

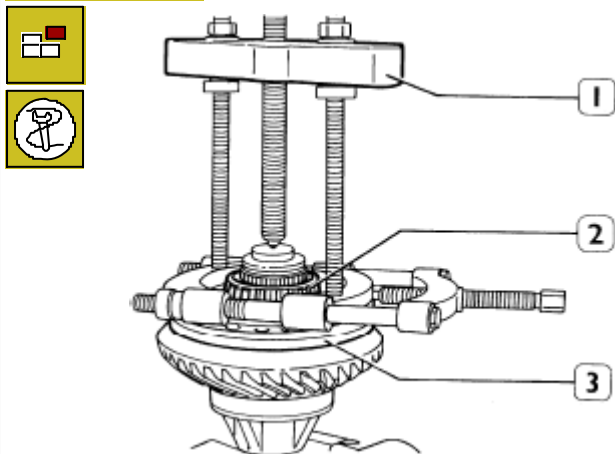

39559

Using extractor 99348001 (1), extract the support bearing (2) on the toothed side from the differential housing (3).


Figure 90

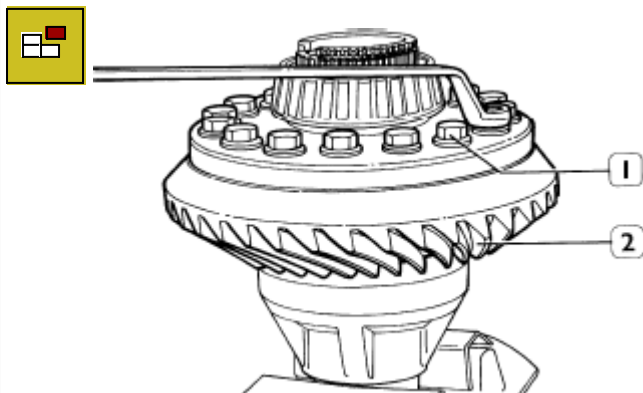

39560

Loosen and remove the screws (1).
Detach the ring bevel gear (2) using a punch.


Figure 91

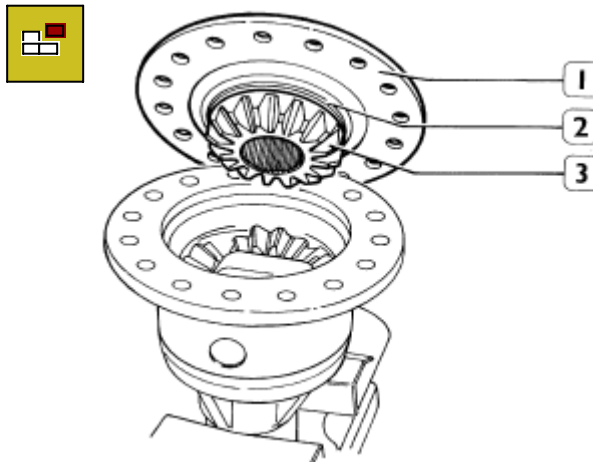

39561

Remove the differential housing cover (1).
Remove the crown wheel (3) from the gear housing, together with the shoulder washer (2).

Figure 92

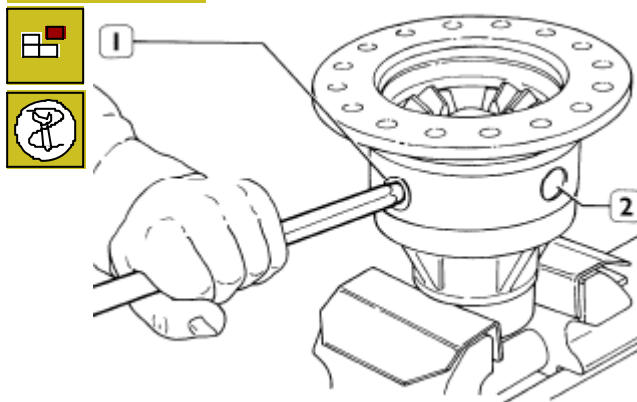

39562

Using a punch, first extract the long pin (1) and then the two short pins (2).


NOTE The exact position of the pins is marked on the spider body by a long stripe for the long pin, and by two short stripes for the short pins.

Remove the spider and the four side pinions with the relative shoulder washers.
Remove the crown wheel and shoulder washer.

Aquila Trucks Centres


Disassembling the bevel pinion support

Figure 93

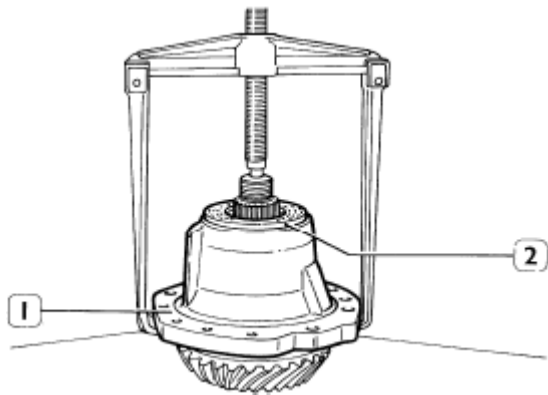


Using an extractor, positioned as shown in the drawing, extract the bevel pinion with bearing and support adjusting ring (1).
Extract the seal ring (2).

Figure 94

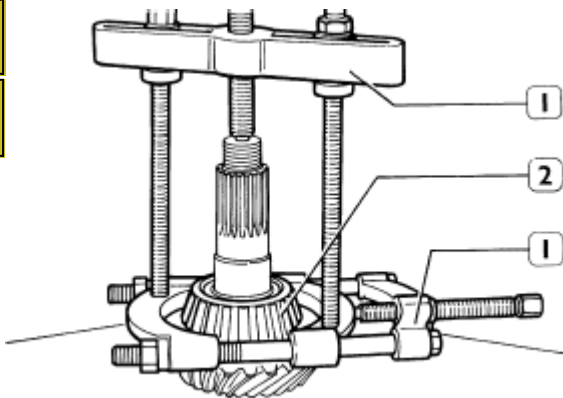

Using extractor 99348001 (1), extract the bearing (2) from the bevel pinion.

Figure 95

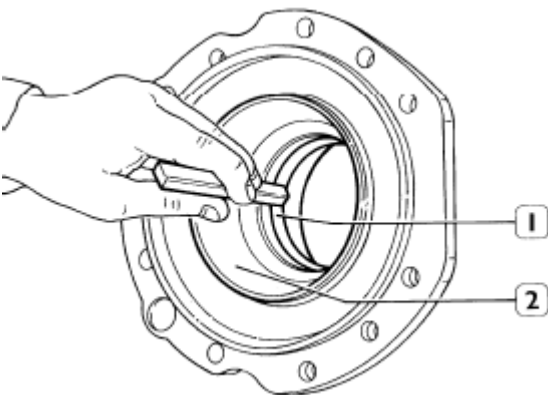

Using a punch, remove the front and intermediate bearing external rings (1 and 2) from the support.
Remove the oil baffle.

CHECKING THE DIFFERENTIAL COMPONENTS

Carefully clean all of the individual differential components. Lubricate the bearings and make sure that the roller support cage rotates freely, without sticking. Check the ring bevel gear and half-casing contact surfaces, making sure that the bevel gear matches perfectly. Any eventual deformation on these surfaces would cause screw vibration on the bevel gear, leading to incorrect assembly operation.

NOTE Carefully clean all the threads to ensure exact adjustments and precise tightening torque values.

Check that the splined section used to key the flange on the pinion is not worn. Replace the pinion if necessary.


NOTE If either the bevel gear or pinion need to be changed, both parts must be replaced as they are provided as coupled spare parts.

Check the side pinions with relative shoulder washers, and the spider and crown wheels with relative shoulder washers. Replace all sealing elements and safety washers with new parts.

Aquila Trucks Centres


Assembling the differential housing

Figure 96

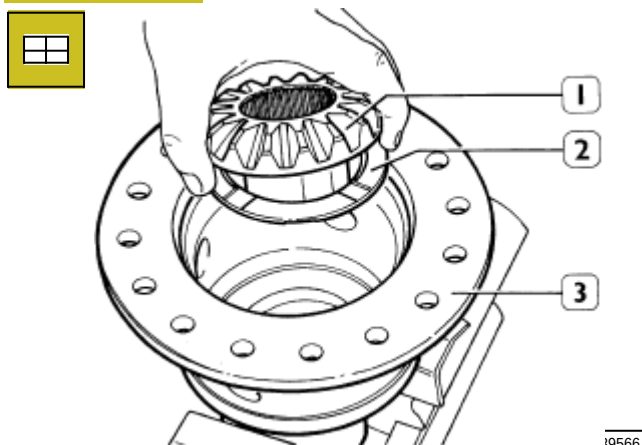

Set the gearing box (3) on a suitable support, place in the seat crown wheel (1) comprising shoulder washer (2).


Figure 97

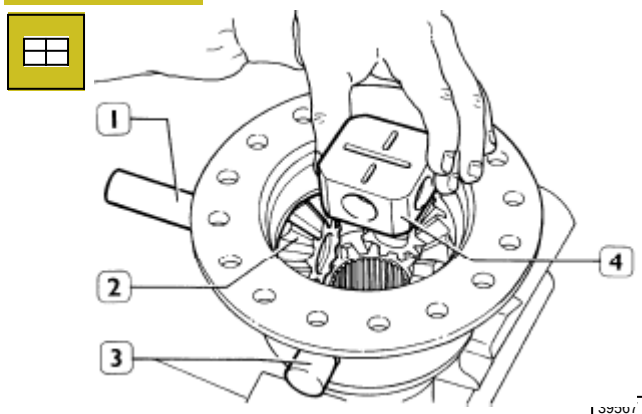

Assemble the four side pinions (2) with the shoulder washers and insert the spider (4). Insert the long pin (1) and the two short pins (3).

The exact position of the pins is marked on the spider body (4) by a long stripe for the long pin, and by two short stripes for the short pins.


Figure 98

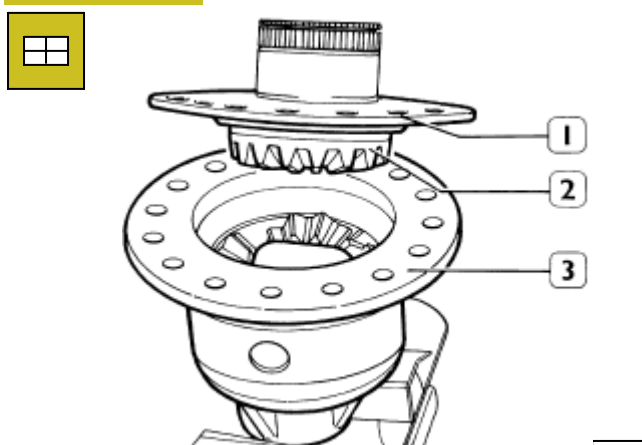

Position the crown wheel (2) and shoulder washer on the side pinion gear unit.


Fit the cover (1) on the differential housing (3) by centering the fixing screw holes.

Figure 99

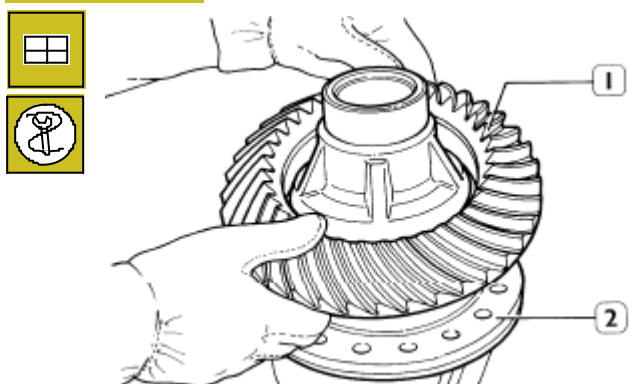

Heat the ring bevel gear (1) to approx. 80°C, fit in position in the differential housing (2) and secure with the two fixing screws.

Figure 100

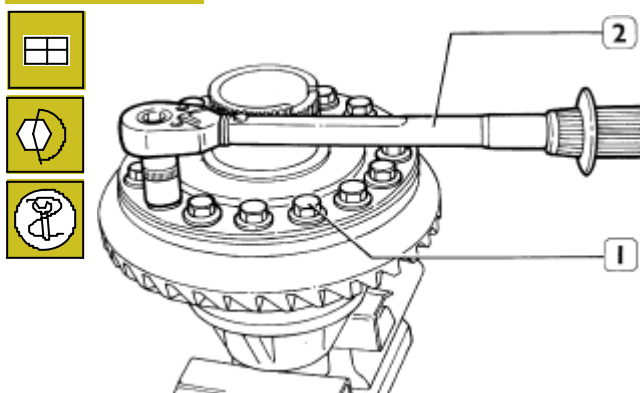


Fit the other screws (1) and tighten with a torque wrench (2) to 180 Nm.

Heat the support bearings with electric drier 99305121 and assemble in the gear housing.

Aquila Trucks Centres

Assembling the bevel pinion support

Figure 101

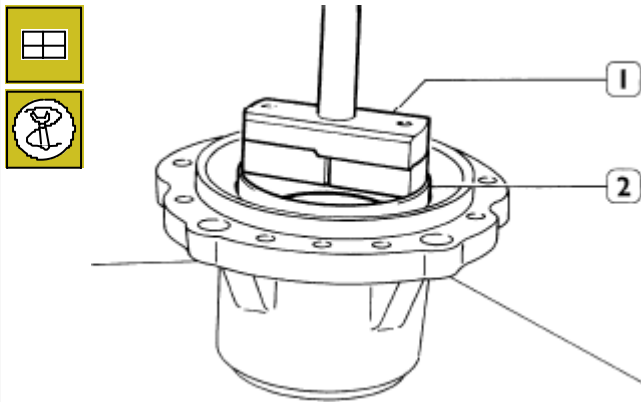


39571

Fit a new oil baffle on the pinion support.

Fully fit the external ring (2) for the front bearing into the seat, using punch 99374093 (1), and the external ring for the rear bearing, using punch 99374094, into the seat.

Procedure to follow to determine the thickness of the bevel pinion rolling torque adjusting ring.


Figure 102

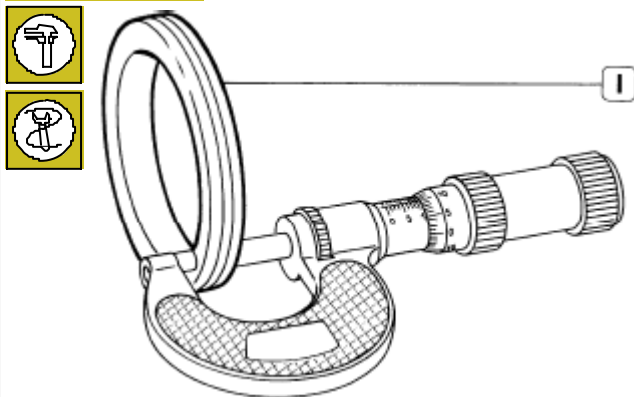

39572

Measure and note the thickness (value A) of the adjusting ring (1) on disassembly.


Figure 103

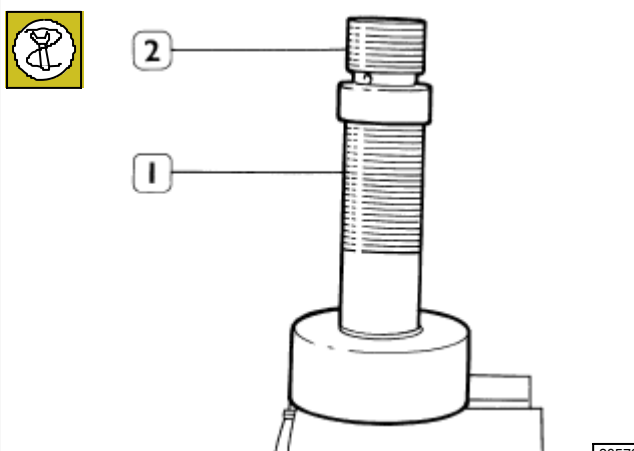

39573

Secure tool 99395027 (1) and extension (2) in a vice.

Figure 104

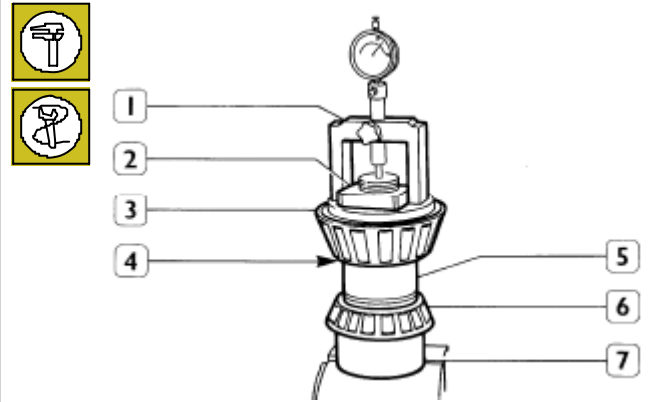

39574

Fit the following parts on tool 99395027:

- the bearing (6) on the pinion-side;
- the spacer ring (5), the previously measured adjusting ring (4) and the bearing (3).


Fully tighten the ring nut (2).

Position part (1) of tool 99395027 (7) on the bearing (3), fitted with a zero-set dial gauge on the end of the tool (7).

Then remove:

- the part (1);
- the ring nut (2);
- the bearing (3);
- the adjusting ring (4) on the tool (7).

Figure 105

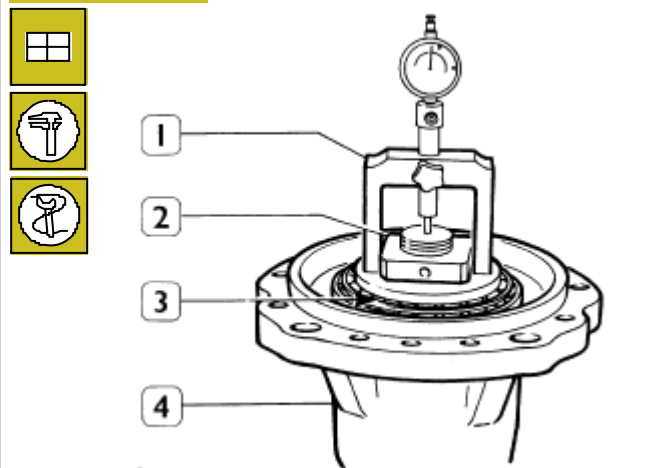


39575

Position the support (4, Figure 105) on the bearing (6, Figure 104) and assemble the bearing (3) on the support.

Tighten the ring nut (2) by hand. Check the rolling torque as indicated in Figure 106.

Aquila Trucks Centres

Figure 106

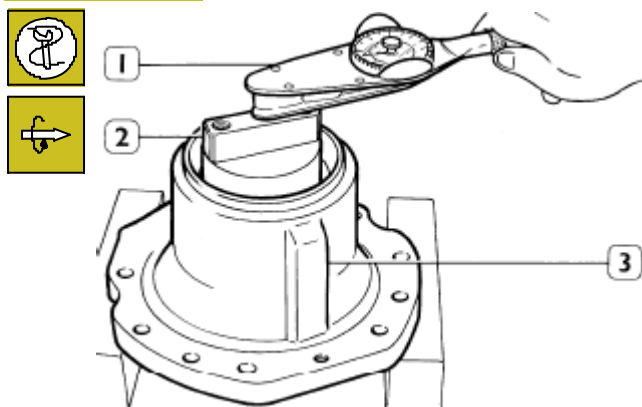

39576

Position the complete support (3) on two parallel blocks; using the torque wrench (1) applied on tool 99395027 (2) and read the rolling torque. This value should be:

- 6 to 8 Nm; if not, adjust by means of the ring nut (2, Figure 104).

Position the part (1, Figure 104), with the dial gauge zero-set, on the bearing (3) and read the eventual deviation (value B).

Thickness **S** on the adjusting ring is provided by the following formula:

$$S = A - (\pm B) + C$$

Where:

A = thickness of the adjusting ring assembled for dial gauge zero-setting;

B = deviation value read;

C = 0.05 mm coefficient which takes into account the expansion of the bearings as a result of the assembly negative allowance on the bevel pinion.

First example:

A = 10.12 mm
B = + 0.13 mm
C = 0.05 mm

$$S = 10.12 - (+ 0.13) + 0.05 =$$

$$S = 10.12 - 0.13 + 0.05 = 10.04 \text{ mm.}$$

Second example:


A = 10.12 mm
B = - 0.13 mm
C = 0.05 mm

$$S = 10.12 - (- 0.13) + 0.05 =$$

$$S = 10.12 + 0.13 + 0.05 = 10.30 \text{ mm.}$$

On completion of the operation, remove the parts of tool 99395027.

Figure 107

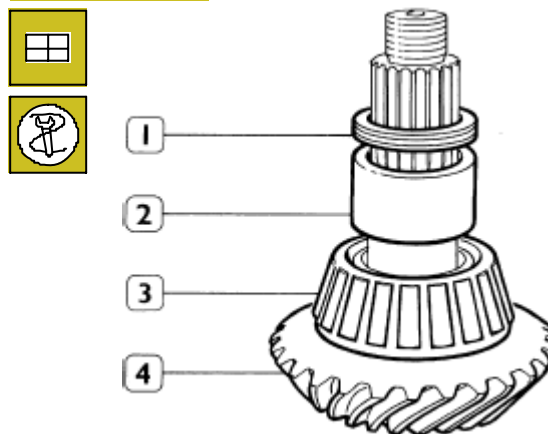

39577


Heat the bearing (3) with electric drier 99305121 and fit on the bevel pinion (4).

Fit the spacer (2).

Assemble the adjusting ring (1) with the same thickness as previously noted, and position on the bevel pinion.

Fit the bevel pinion on the support, complete with external rings for bearings.

Figure 108

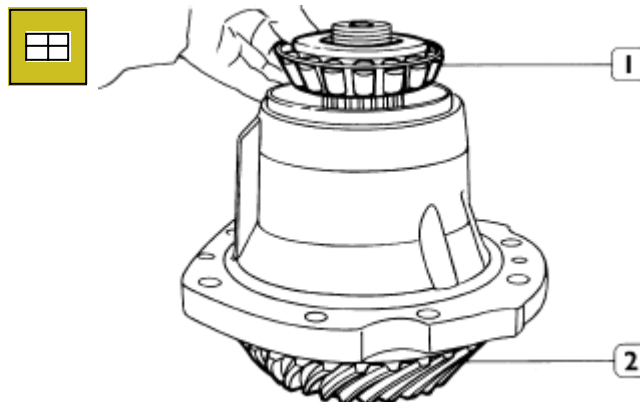


39578

Heat the bearing (1) with electric drier 99305121 and position in the bevel pinion (2) seat using a punch.


Aquila Trucks Centres

Figure 109

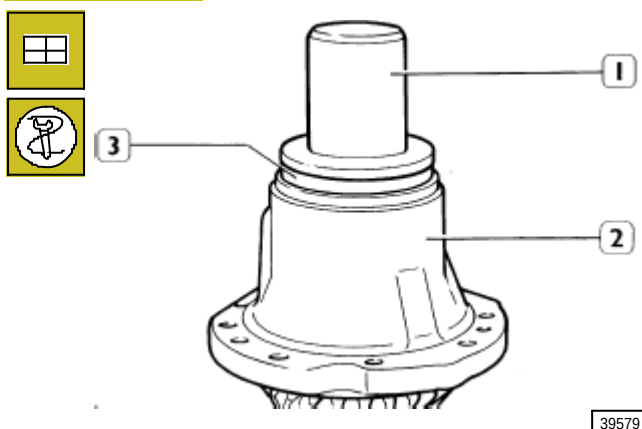

Using key 99374233 (1) fit the new seal (3) on the support (2). Spare part seals are supplied pre-lubricated and with grease between the lips.


Figure 110

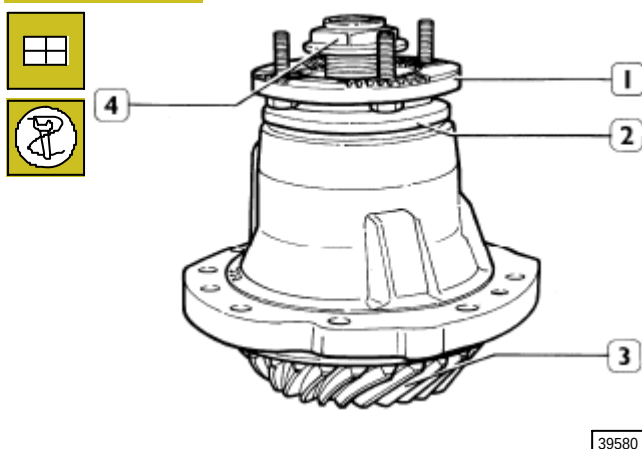

Position the drive coupling flange (1), complete with baffle (2), on the splined section of the bevel pinion (3) and settle in the seat with a punch. Provisionally tighten the fixing nut (4).

Differential

Figure 111

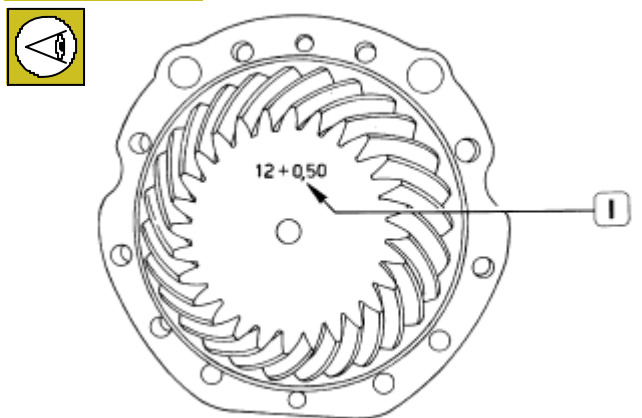

Before fitting the bevel pinion support assembly on the differential housing, check the value (1) marked on the bevel pinion and, by consulting the table in Figure 112, the thickness

of the adjusting ring to be positioned between the support and the housing will be given.

Example:

If the reference value (1) marked on the bevel pinion is + 0.5, the thickness of the adjusting ring must be 1.5 mm.


The adjusting rings are available in the following dimensions: 0.2, 0.3, 0.5, 1 mm.

Figure 112

Value marked on the bevel pinion	Total thickness of adjusting ring
0	0.5
0.1	0.6
0.2	0.7
0.3	0.8
0.4	0.9
0.5	1.0
0.6	1.1
0.7	1.2
0.8	1.3
0.9	1.4
1.0	1.5

SUMMARY TABLE TO DETERMINE THE THICKNESS OF THE BEVEL PINION POSITION ADJUSTING RING

Figure 113

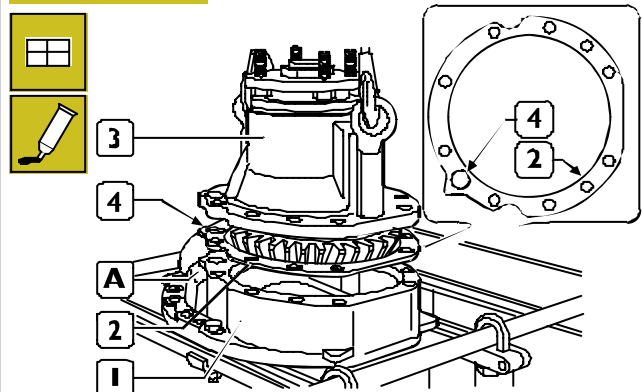


Apply LOCTITE 573 on the differential carrier (1) contact surface, adding LOCTITE 510 around the holes indicated by the arrows. Fit the adjusting ring (2) on the differential carrier (1), so that the hole (4) faces towards upper part A of the differential carrier. Using eyebolts and cables, fit the bevel pinion assembly support (3) on the differential carrier (1). Tighten the fixing screws to the correct torque value.



Apply LOCTITE 573 on the threads of the screws that pass through the holes on the differential carrier (1).

Aquila Trucks Centres


Figure 114

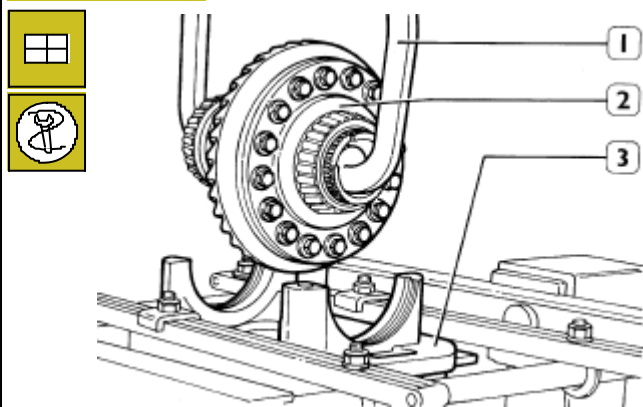

39583

Using the hook (1), raise the previously assembled differential housing (2) and position on the differential housing (3).

Figure 115

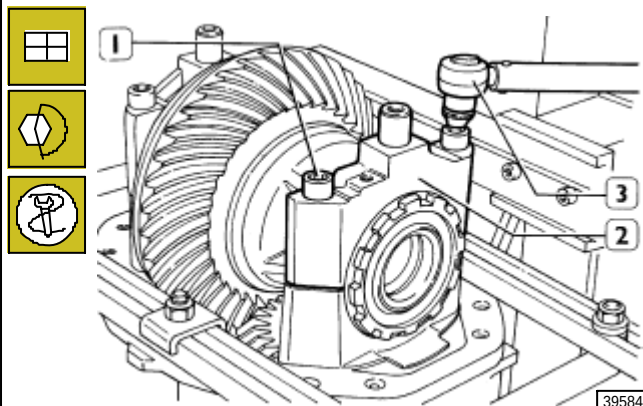


39584

Fit the external bearing rings and position the caps (2). Apply LOCTITE AVX on the threads of the screws (1), and tighten without fully screwing down. Fit the adjusting ring nuts, making sure that they screw on easily. Using a torque wrench (3), tighten the screws (1) to the correct torque value.

Adjusting the rolling torque on the gear housing bearings


Figure 116

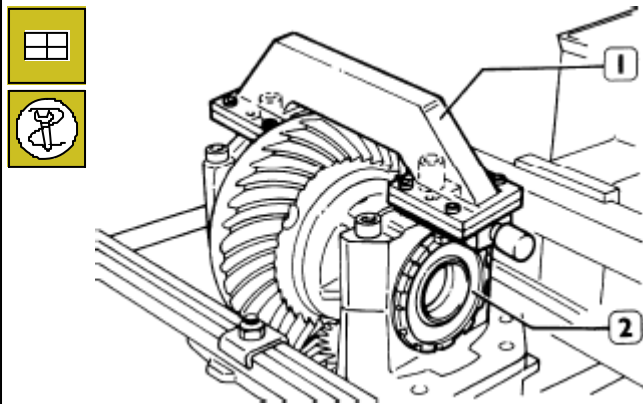

39585

Position tool 99370133 (1) as shown in the drawing to avoid excessive spread on the caps during adjustment operations.

Figure 117

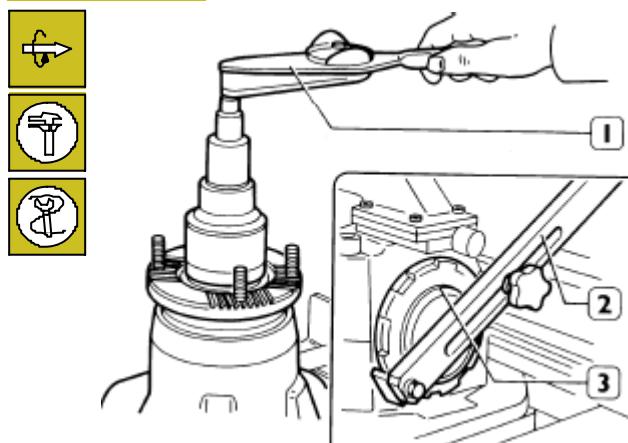

39587

The total rolling torque reading is carried out when the clearance between the teeth on the bevel gear pair is as near to the pre-stabilised value as possible.

However, the total rolling torque value varies according to the reduction bevel gear pair ratio (see table in Figure 118).

Using torque wrench 99389819 (1) and the appropriate Allen wrench, read the pre-stabilised torque value, adjusting the bearing adjustment ring nuts (3) with wrench 99355025 (2).


Figure 118

No. of teeth	Ratio	Total rolling torque Nm
13/35	2.692	$a + (1.1 - 1.5)$
15/34	2.267	$a + (1.3 - 1.8)$
17/36	2.118	$a + (1.4 - 1.9)$
17/35	2.059	$a + (1.5 - 1.9)$
19/33	1.737	$a + (1.7 - 2.3)$
21/34	1.619	$a + (1.9 - 2.5)$
21/40	1.905	$a + (1.6 - 2.1)$
23/36	1.565	$a + (1.9 - 2.6)$
24/35	1.458	$a + (2.1 - 2.7)$
27/32	1.185	$a + (2.5 - 3.4)$
27/37	1.370	$a + (2.2 - 2.9)$
28/37	1.321	$a + (2.3 - 3.0)$
29/37	1.276	$a + (2.4 - 3.1)$

$$a = 7.5 \div 9.5 \text{ Nm}$$

Aquila Trucks Centres


Figure 119

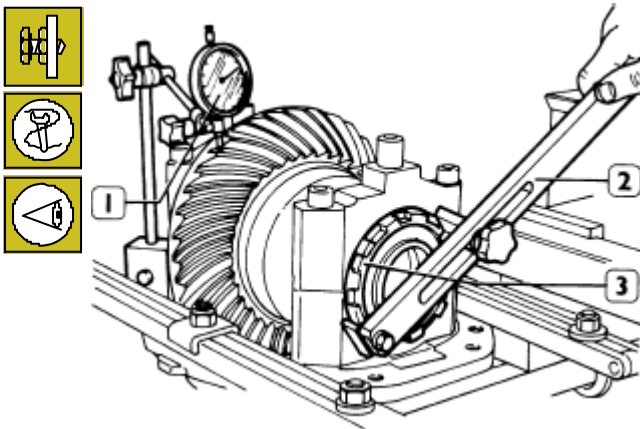

Adjust the axial clearance between the teeth on the pinion/bevel gear, which should be 0.15 to 0.35 mm, proceeding as follows:

- Position a magnetic stand dial gauge (1) as shown in the drawing.
- Using wrench 99355025 (2), tighten the bearing adjustment ring nut (3) whilst loosening the ring nut on the opposite side by the same amount. This prevents the previously measured rolling torque from varying.

Figure 120

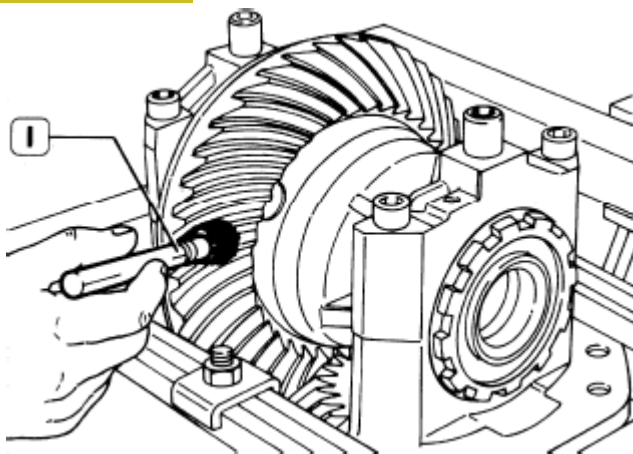


Using a brush (1) apply a light covering of Prussian blue on the teeth of the bevel gear.

Rotate the pinion and check the coloured contact marks that the pinion teeth have made on the bevel gear teeth.


The following drawings illustrate possible contact marks and the operations required in order to correct the faults.

Figure 121

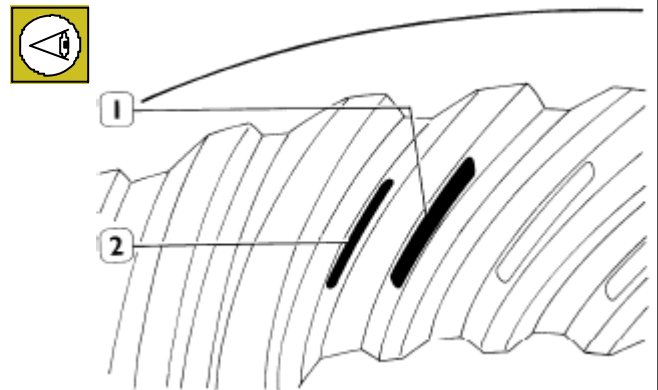

The contact marks should be on both the leading face (1) and the pushing face (2), more or less in the centre between the teeth. When working without a load, both contact zones should be slightly out of position in relation to the external diameter of the bevel gear.


Figure 122

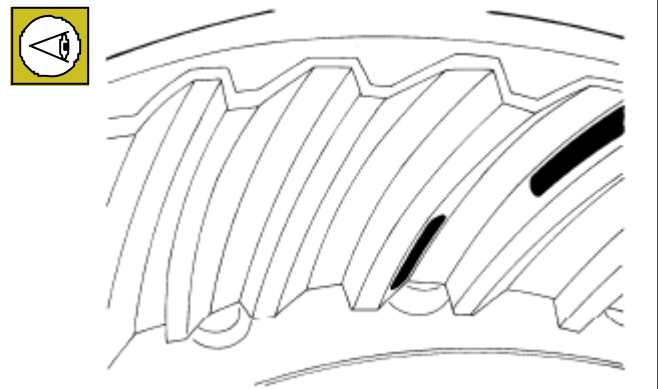

If the mark on the leading face (towards the external diameter) and on the pushing face (towards the internal diameter) is out of position, the pinion is located too close to the bevel gear.

- Solution: increase the thickness of the adjusting ring between the intermediate bearing and the bevel pinion.

Figure 123

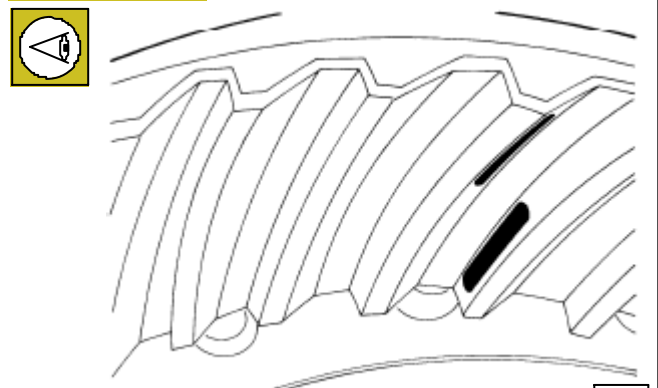


If the mark on the leading face is positioned towards the internal diameter, and on the pushing face it is located towards the external diameter of the bevel gear, the pinion is located too far away from the bevel gear axis.

- Solution: decrease the thickness of the adjusting ring between the intermediate bearing and the bevel pinion.

Aquila Trucks Centres

Figure 124

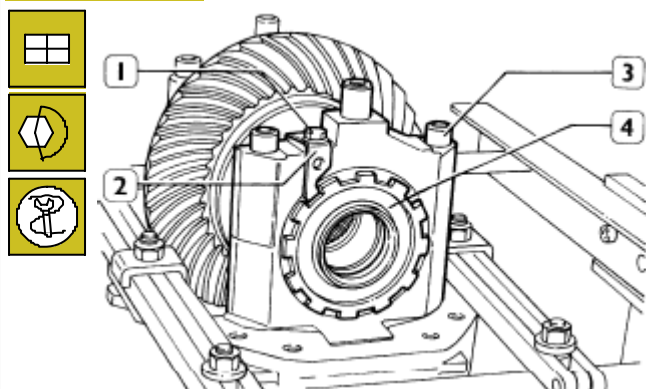

Position the plate (2) and tighten the fixing screws (1) to the correct torque value.

If the plate (2) does not coincide with the notch on the ring nut (4), slightly rotate the ring nut until the plate and ring nut notch coincide. Repeat this operation on the opposite side.

Aquila Trucks Centres

5251 Intermediate axles
452191/2D (R9274)
453291/2D (R9189)

	Page
DESCRIPTION	57
MAIN DATA	58
TIGHTENING TORQUES	59
TOOLS	61
REMOVING-REFITTING THE INTERAXLE DIFFERENTIAL (with the axle mounted on the vehicle)	68
- Removal	68
- Refitting	68
INTERMEDIATE AXLE ASSEMBLY REPAIRS ...	69
- Disassembly	69
- Epicyclic reduction gear disassembly	69
- Wheel hub disassembly	70
- Wheel hubs disassembly	73
- Assembling the epicyclic reduction gear	75
REMOVING - REFITTING THE FLOW DIVIDER DIFFERENTIAL (with the axle mounted on stand 99322215) .	77
- Removal	77
- Refitting	77
REPAIRING THE INTERAXLE DIFFERENTIAL ..	78
- Interaxle differential unit disassembly	78
- Differential housing disassembly	81
- Interaxle differential disassembly	83
- Interaxle differential unit assembly	87
- Differential housing assembly	88
- Interaxle differential unit assembly	90

Aquila Trucks Centres

Page

- Procedure to follow to determine the thickness of the bevel pinion rolling torque adjusting ring	90
- Adjusting the rolling torque on the differential housing bearings	94
DRIVE SHAFT	98
- Disassembly	98
- Checking parts	99
- Assembly	99

Aquila Trucks Centres

DESCRIPTION

The intermediate axle is of the load-bearing, double reduction type.

The first reduction is provided by the bevel pinion/ring bevel gear, whereas the second reduction is by means of an epicycloid unit on the wheel hubs.

The differential housing (with ring bevel gear) is supported by taper roller bearings, which can be adjusted by means of two threaded ring nuts.


The bevel pinion is supported by two taper roller bearings, which can be adjusted by means of adjustment shims.

The intermediate axle is fitted with a flow divider unit that distributes the torque between the two axles.

The axle is also provided with a pneumatic device for differential locking and another device for flow divider locking.

The drum brake is of the Duo/Duplex type.




Figure 1

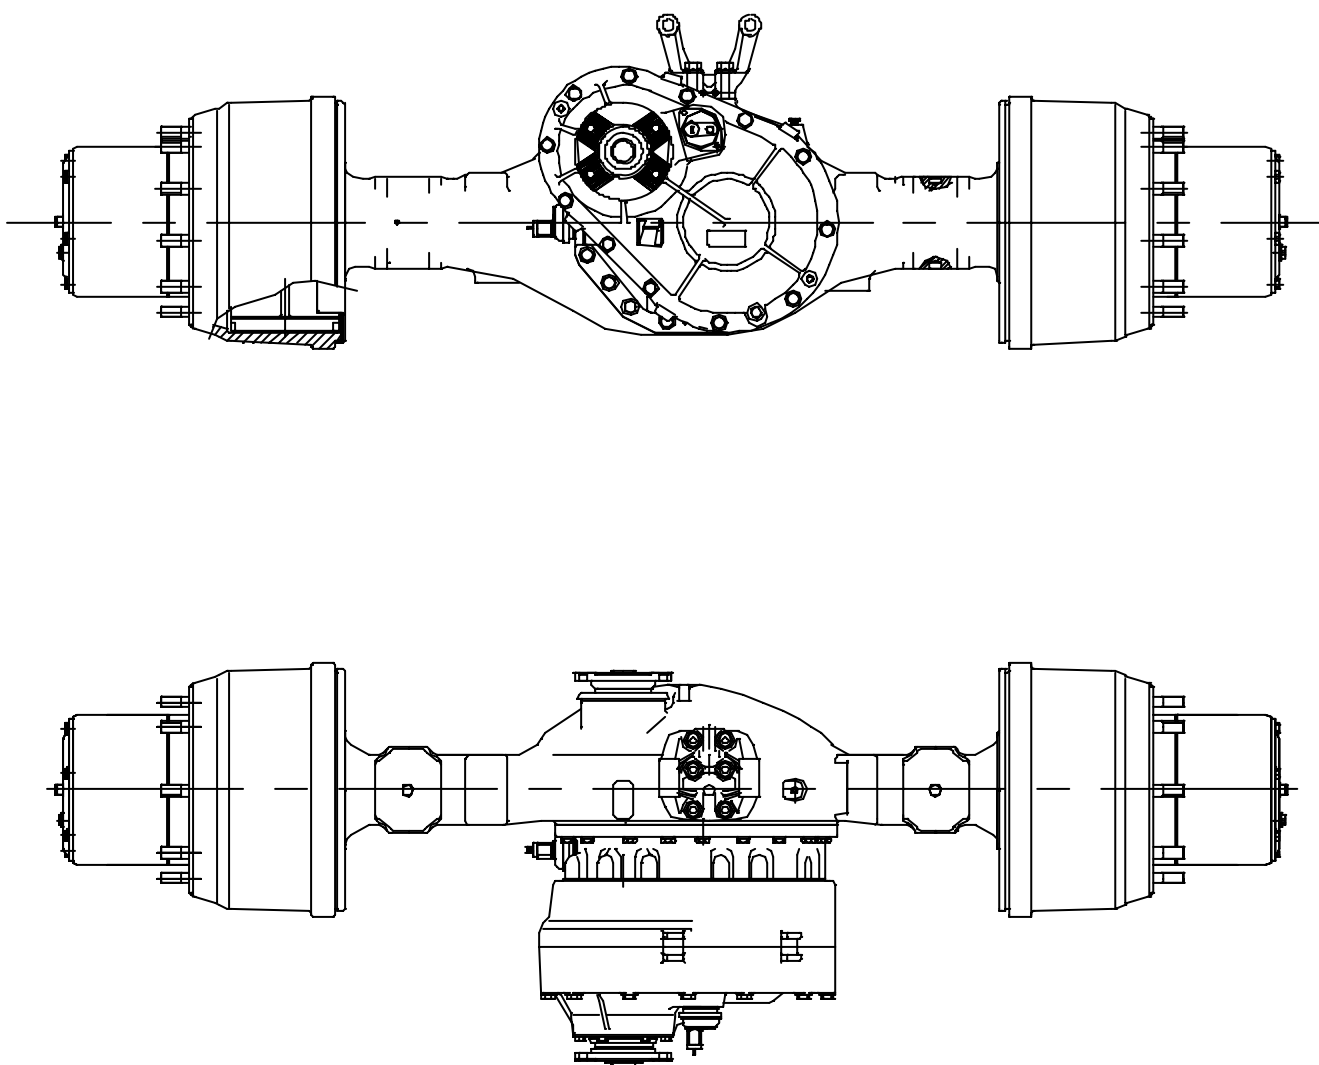

71847


Aquila Trucks Centres

   MAIN DATA

	Type of axle: Load-bearing, single reduction with pneumatically controlled differential locking and flow divider unit	452191/2D (R9274)	453291/2D (R9189)
	Bevel pinion bearings	2 taper rollers and 1 straight roller	
	Bevel gear reduction unit ratio	27/32 (1.185) - 29/37 (1.276) - 27/37 (1.370) - 28/37 (1.321) - 24/35 (1.458) - 23/36 (1.565) - 21/34 (1.619) - 19/33 (1.737) - 21/40 (1.905) - 17/35 (2.059)	
	Epicyclic reduction unit/wheels ratio	3.2	
	Bevel pinion bearing rolling torque Nm	1.5 ÷ 3.5	
	Bevel pinion bearing rolling torque adjustment	with adjustment rings	
	Thickness of bevel pinion bearing rolling torque adjustment rings mm	1.000 ÷ 2.500 (series of increased thicknesses = 0.02 mm)	
	Thickness of bevel pinion/ring bevel gear position adjustment rings mm	3.6-3.7-3.8-3.9-4.0-4.1-4.2-4.3-4.4-4.5-4.6	
	Clearance between pinion and ring bevel gear mm	0.20 ÷ 0.33	
	Adjustment of clearance between pinion and ring bevel gear	with ring nuts	
	Bearing total rolling torque S	with ring nut	
	WHEEL HUBS		
	Wheel hub bearings	2 taper rollers	
	Wheel hub bearings rolling torque: new bearings with surface protection Nm	6 ÷ 7 + (12 ÷ 16)	
	Wheel hub bearings rolling torque: run in bearings and new, lubricated seals Nm	6 ÷ 7 + (5 ÷ 7)	
	Wheel hub bearings rolling torque: run in bearings and seals Nm	3 Nm + (2.5 ÷ 4.5 Nm)	
	Drive shaft end float mm	0.5 ÷ 1	
	Axle oil Quantity Litres kg	TUTELA W140/MDA 27 24.3	
	G.R.W. maximum load kg	11000	16000

Aquila Trucks Centres

Figure 2

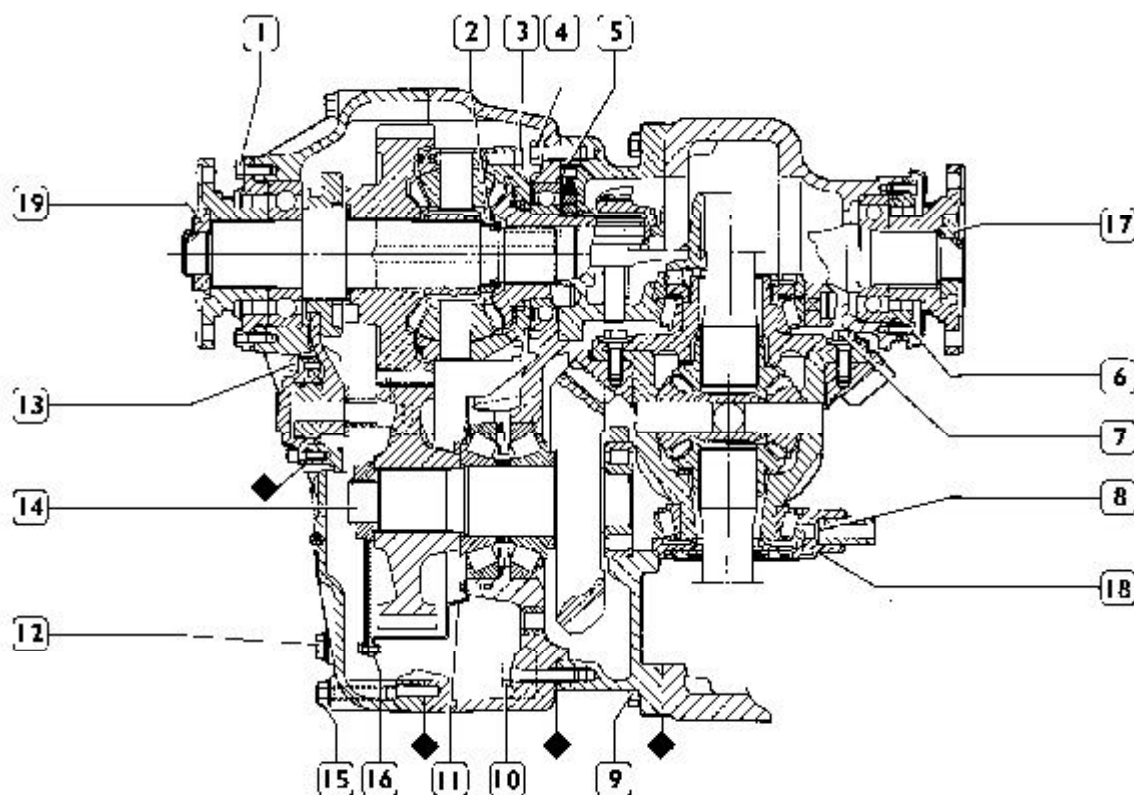

115267

TIGHTENING TORQUES


DESCRIPTION		TORQUE	
		Nm	kgm
1	Hex screw for cover	62 ± 6	6.2 ± 0.6
2	Ring nut	230 ± 20	23 ± 2
3	Hex screw	67 ± 8	6.7 ± 0.8
4	Self-locking screw	260 ± 25	26 ± 2.5
5	M12 x 1.5 threaded plug	21.5 ± 1.5	2.1 ± 0.1
6	Hex screw for cover	33 ± 3	3 ± 0.3
7	Self-locking screw { 1 st stage 2 nd stage	100	10
		300 ± 10	30 ± 1
8	Self-locking screw fixing safety plate	51 ± 5	5 ± 0.5
9	Self-locking screw	260 ± 25	26 ± 2.5
10	Self-locking screw	260 ± 25	26 ± 2.5
11	Self-locking screw fixing oil feed	16 ± 2	1.6 ± 0.2
12	Threaded plug	110 ± 10	11 ± 1
13	Cheese-headed screw	25 ± 2	2.5 ± 0.2
14	Self-locking nut	1250 ± 50	125 ± 5
15	Screw fixing cover	182.5 ± 17.5	18.2 ± 1.7
16	Nut for screw fixing oil feed	16 ± 2	1.6 ± 0.2
17	Self-locking nut	700 ± 50	70 ± 5
18*	M16 screw fixing caps to gear housing	270 ± 25	27 ± 2.5
19	Self-locking nut	825 ± 25	82.5 ± 2.5

z apply LOCTITE 573 sealant on contact surface

* apply LOCTITE AVX on thread

Aquila Trucks Centres

Figure 3

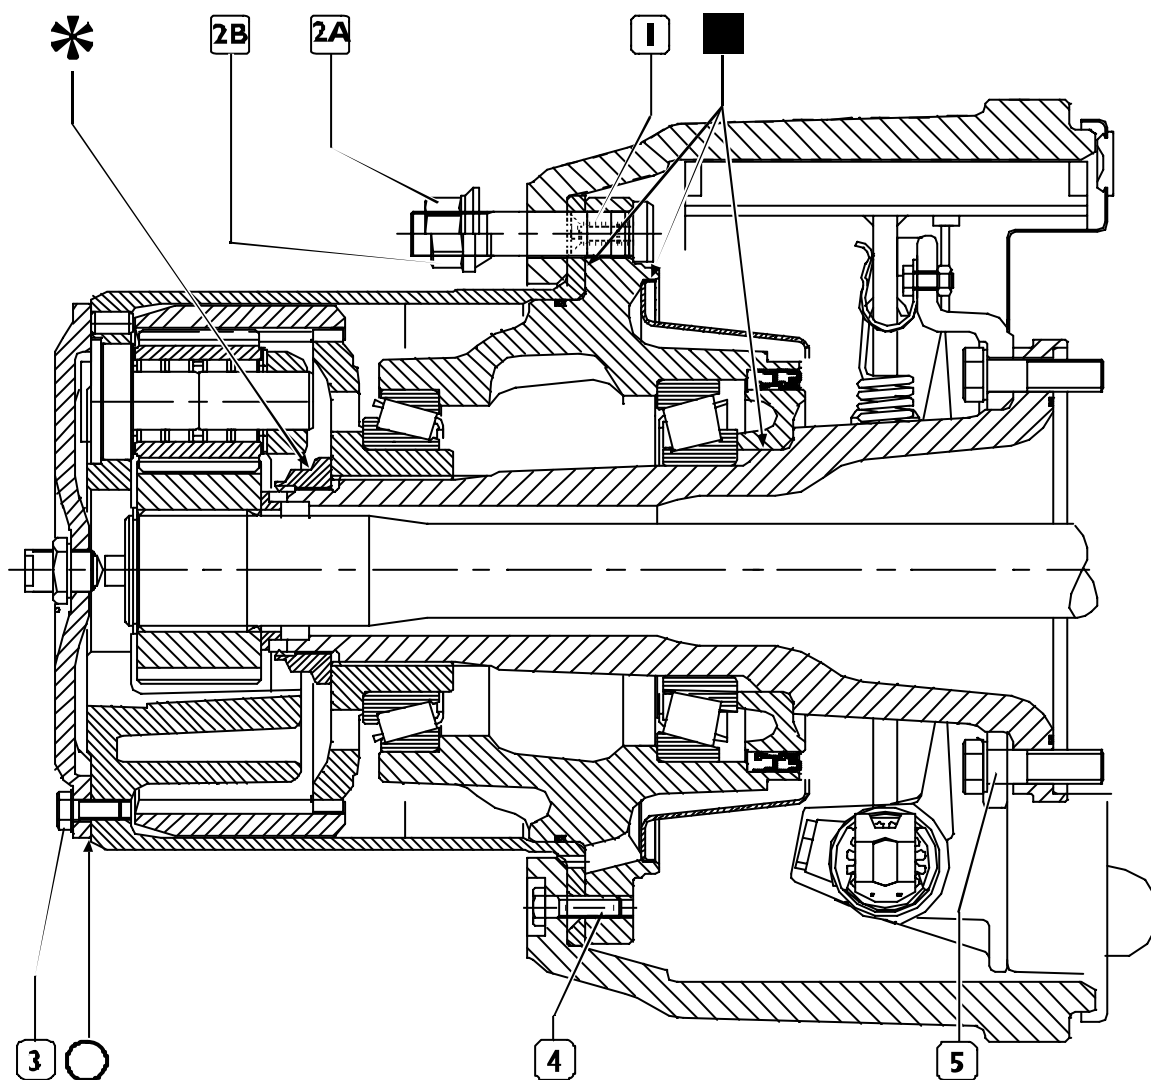

98970

SECTION ON EPICYCLIC REDUCTION AND WHEEL HUB

TIGHTENING TORQUES

DESCRIPTION	TORQUE	
	Nm	kgm
1 Countersunk screw fixing drum	25 ± 3	2.5 ± 0.3
2A Nut fixing wheel	615 ± 35	61.5 ± 3.5
2B Nut fixing wheel	415 ± 35	41.5 ± 3.5
3 Screw fixing cover to side pinion support V	50 ± 5	5 ± 0.5
4 Screw	50 ± 5	5 ± 0.5
5 Screw fixing load bearing sleeve	295 ± 30	29.5 ± 0.3

d apply LOCTITE 5970 on the contact surface




V apply LOCTITE 573 on thread

H apply LOCTITE 573 on mating surface



* Before mounting, slightly smear MOLYCOTE on nut rest surface

Aquila Trucks Centres





TOOLS

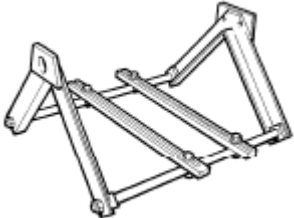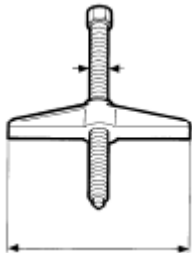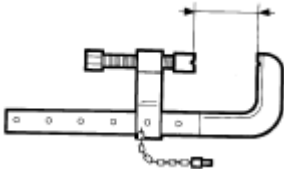TOOL NO.	DESCRIPTION
99305121	 Hot air device
99322205	 Rotating stand for assembly overhaul (1000 N load bearing capacity, 120 da Nm torque)
99322215	 Stand for axles overhaul
99322225	 Support for assemblies (to be fitted onto stand 99322205)
99341003	 Single-acting bridge
99341015	 Press




Aquila Trucks Centres

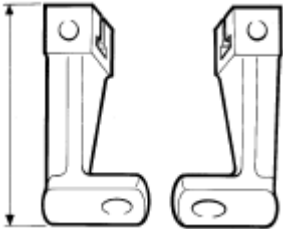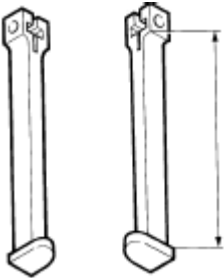TOOL NO.	DESCRIPTION	
99341017		Pair of brackets with hole
99341020		Pair of tie rods for grips
99341023		Grips
99345053		Reaction block for extractors
99348001		Extractor with locking device
99354001		Wrench for differential gear housing bearing adjustment ring nuts





Aquila Trucks Centres

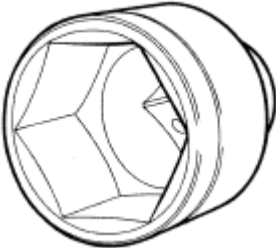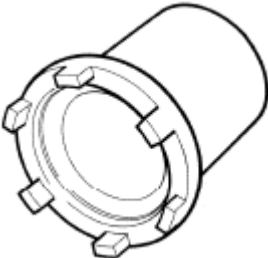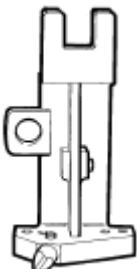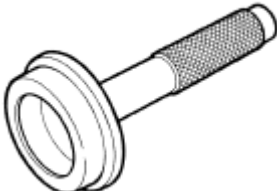TOOL NO.	DESCRIPTION	
99354207		Wrench (94.5 mm) for wheel hub bearings adjusting nut
99355081		Wrench (60 mm) for drive infeed flange retaining nut and flow divider spur gear unit retaining nut
99355121		Wrench for flow divider main shaft ring nut
99363310		Tool for retaining spur gear on flow divider bevel pinion
99370005		Interchangeable grip for punches



Aquila Trucks Centres

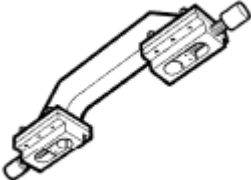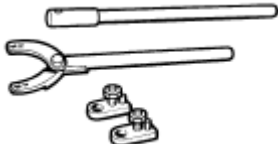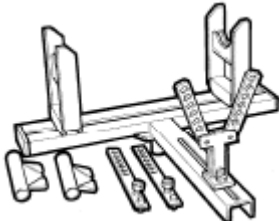TOOL NO.	DESCRIPTION	
99370007		Interchangeable grip for punches
99370122		Punch for fitting flow divider main shaft crown wheel bushings
99370133		Tool for locking differential caps spread
99370317		Reaction lever with extension for flange retaining
99370509		Hook to extract differential gear half-housing
99370617		Universal mounting to support axles during removal and refitting


Aquila Trucks Centres

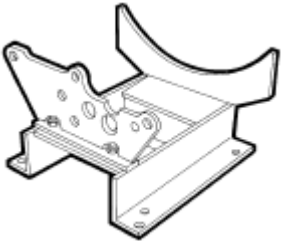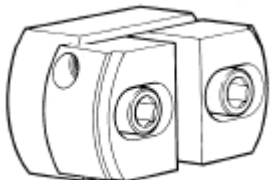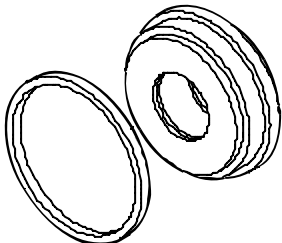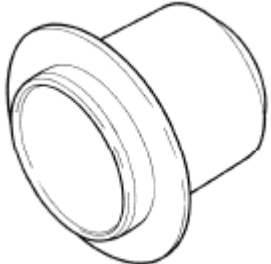TOOL NO.	DESCRIPTION
99370630	 Mounting for removal and refitting of flow divider between axles
99374013	 Key to fit flow divider drive infeed shaft seal (use with 99370006)
99374094	 Punch to fit external races of bearings (diameter 134 - 215 mm use with 99370007)
99374161	 Key for assembly of wheel hub internal seals
99374233	 Key to fit flow divider drive shaft seal
99374235	 Key to fit shaft crown wheel gear front seal

Aquila Trucks Centres

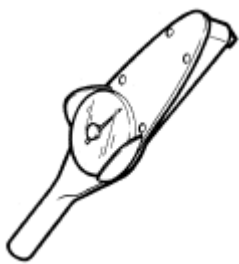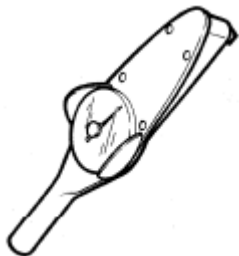TOOL NO.	DESCRIPTION	
99389816		x 4 torque multiplier with 3/4 " infeed and 1" square connection (max. 2745 Nm)
99389819		Torque wrench from 0 to 10 kgm with 1/4" square connection
99389821		Torque wrench from 0 to 70 kgm with 3/8" square connection
99395026		Tool to check rolling torque of hubs (use with torque wrench)
99374451		Tool for drive shaft disassembly-assembly

Aquila Trucks Centres

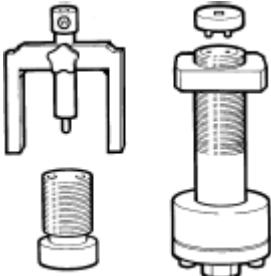
TOOL NO.	DESCRIPTION
99395027	Tool to determine thickness of differential bevel pinion adjustment shims (use with 99395603)
	
99395603	Dial gauge (0 - 5 mm)
	

Aquila Trucks Centres

526210 REMOVING-REFITTING THE INTERAXLE DIFFERENTIAL (with the axle mounted on the vehicle)

Removal

Figure 4

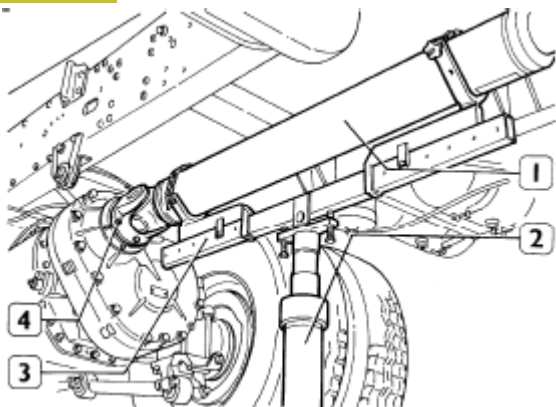

40156

Position a hydraulic jack (2), fitted with support 99370618 (3), under the propeller shaft (1).

Disconnect the propeller shaft (1) from the intermediate axle by unscrewing the screws and nuts fixing the flange (4).

Fully lower the hydraulic jack, thereby detaching the transmission shaft.


Disconnect the air piping and electrical connections from the differential lock and flow divider controls.

Unscrew the lower plug and drain off the oil.

Extract the drive shafts as described under the relative heading.

NOTE The drive shaft on the differential lock side must not be removed, but only extracted by approx. 120 mm. This is to prevent differential lock engagement inner sleeve without any more half shaft guide from inhibiting that rear axle box transfer box differential is taken out.


Figure 5

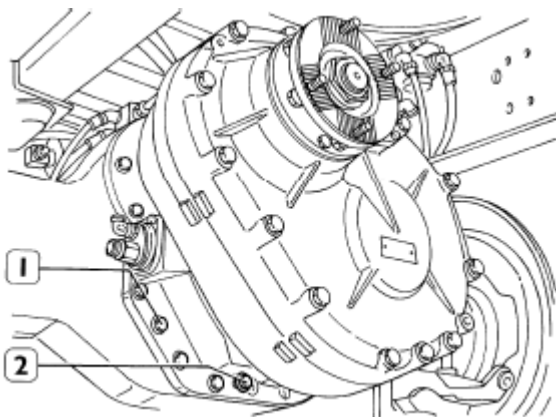

40157

Insert suitable screws in the two threaded holes (2) to act as extractors for the interaxle differential unit.

Figure 6

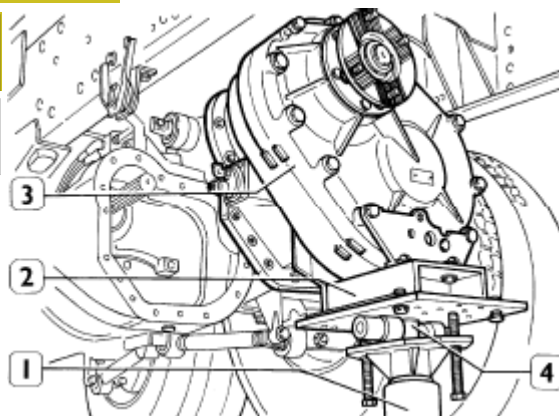

40158


Using the hydraulic jack (1) place bracket 99370630 (2) with device 99370629 (4) underneath the differential-reduction gear unit (3); remove the fastening screws, tighten the two counteracting screws to pull out the unit from the axle casing.

Refitting

Carry out refitting operations by reversing the order of the removal procedure, bearing in mind the following points.

- Carefully clean and smear LOCTITE 573 on the contact surfaces of the differential housing and the drive shaft covers. Replace the seal.

Figure 7

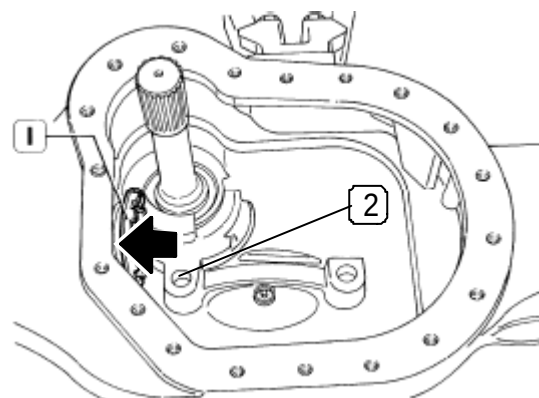

40075

Check that the interaxle differential engagement sleeve (1) is correctly positioned on the drive shaft, with the internal side of the groove (= >) flush with the axle housing.

Check:

- that the differential lock fork engages on the sleeve and that the differential centering pins enter the holes (2);
- tighten all the screws to the pre-stabilised torque;
- connect the air piping and electrical connections;
- fill up the axle housing with oil.


Aquila Trucks Centres

525110 INTERMEDIATE AXLE ASSEMBLY REPAIRS**Disassembly**

NOTE The drive shafts - brake drums and jaws - air breather - interaxle differential - wheel hubs and epicycloid reduction units removal-refitting operations, can all be carried out with the unit fitted on the vehicle.

Before positioning the axle assembly on the overhaul stand, drain off the oil by unscrewing the lower plug on the axle housing.


Figure 8

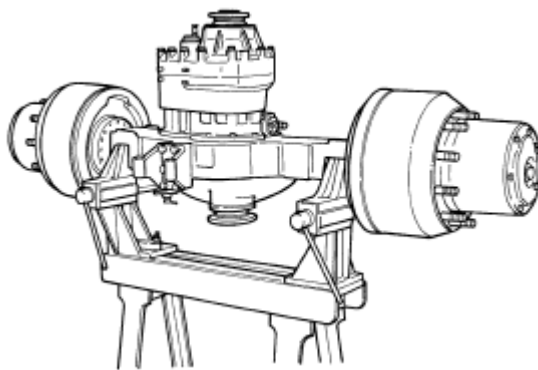

40052

Position the axle assembly on stand 99322215.

Figure 9

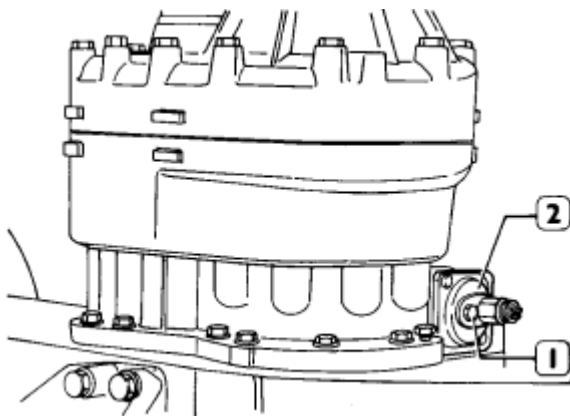


71533

Block the differential locking device sliding sleeve with a screw. Remove the control cylinder threaded coupling (2) and replace with a screw (1) (M 14 x 1.5). Rotate the axle mechanism to facilitate engagement between the sliding sleeve and the engagement sleeve; this will avoid involuntary sleeve movement whilst the drive shaft is being extracted.

525140 Epicyclic reduction gear disassembly


Figure 10

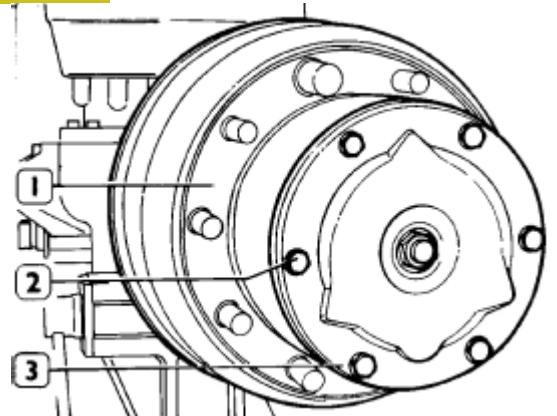

71534

Position a container under the wheel hub (1). Unscrew the screws (2), remove the cover (3) and drain off the oil into a container.


Figure 11

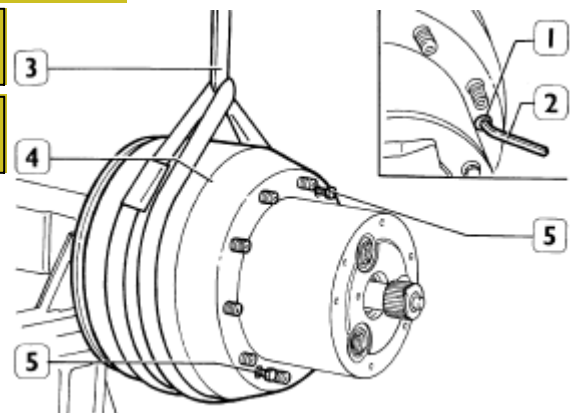

40338

Using an Allen wrench (2) unscrew the two screws (1) fixing the drum; replace with the reaction screws (5). Tighten the reaction screws and remove the drum (4) from the hub and, using a sling (3), raise and remove.

Figure 12

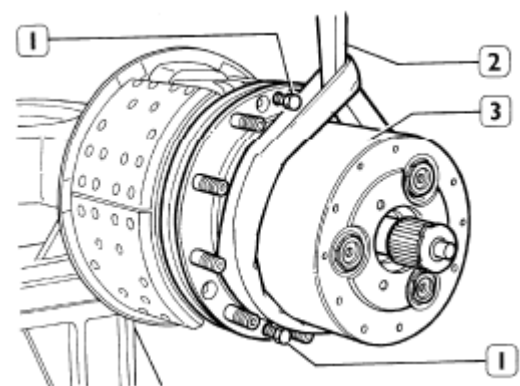


40054

Unscrew the 3 side pinion (3) fixing screws; tighten the reaction screws (1) and, using a sling (2), remove the support (3).


Aquila Trucks Centres

Figure 13

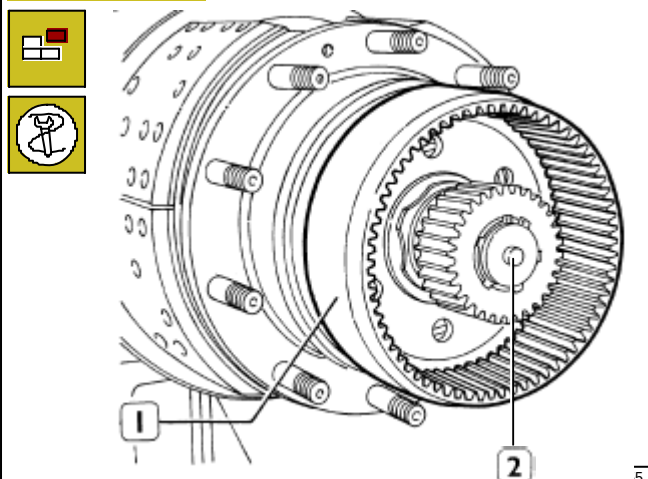


Remove the bevel gear (1) from the mounting.
Remove the shoulder pin (2).

Figure 14

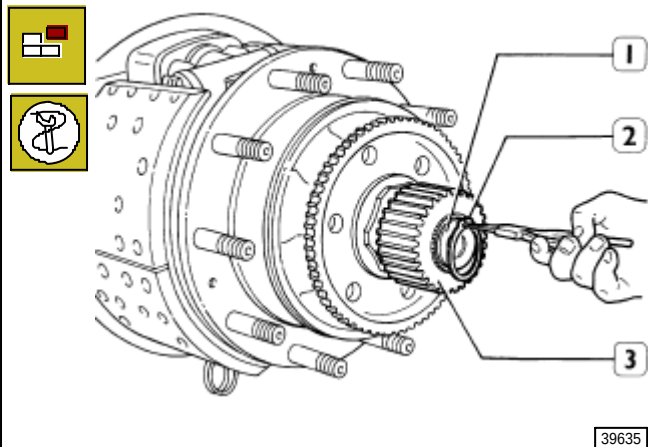


Using suitable pliers, remove the safety ring (2), extract the gear unit (3) from the drive shaft (1).

Figure 15

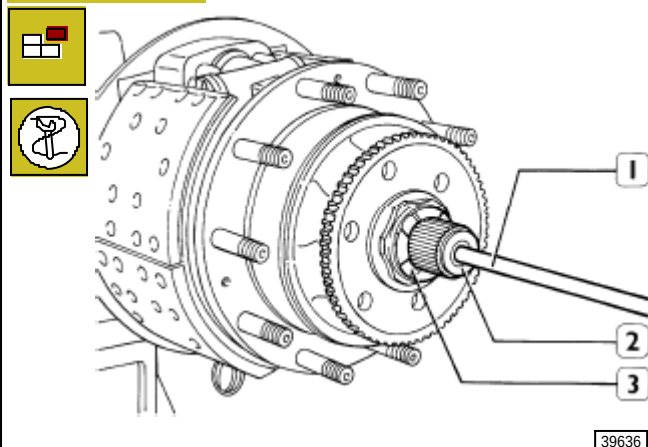

Fit tool 99374451 (1) in the shoulder pin seat and extract the drive shaft (2) from the load bearing sleeve.
Remove the spacer ring (3).

Figure 16

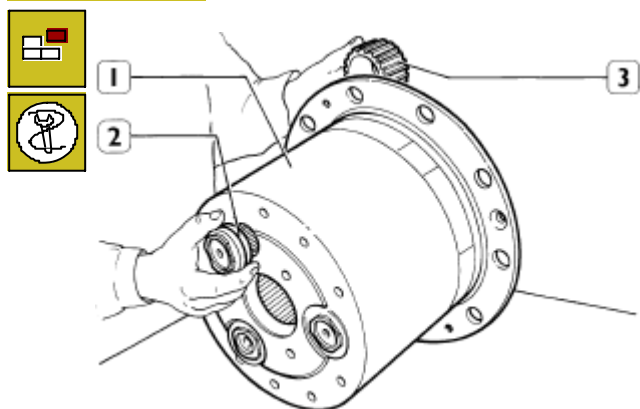


[40056]

Extract the support pins (2) from the side pinion support (1).
Remove the side pinions (3) from the support (1) and recover the rollers and the spacer rings.

525130 Wheel hub disassembly


Figure 17

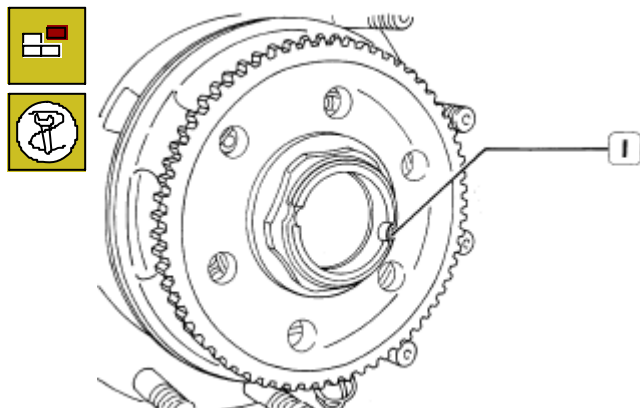

[39637]

Using a punch, remove the notch (1) on the adjusting nut.

Figure 18

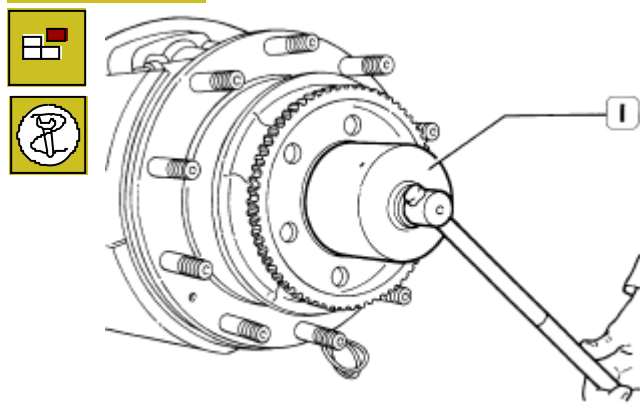


[39638]

Using Allen wrench 99354207 (1), unscrew the adjusting nut.

Aquila Trucks Centres


Figure 19

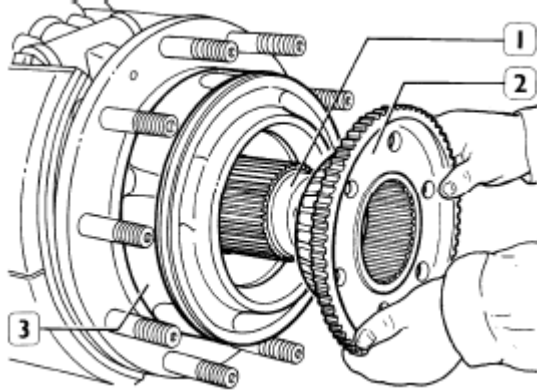

39639

Extract the bevel gear mounting (2), together with the bearing and wheel hub (3), from the load bearing sleeve (1).

Figure 20

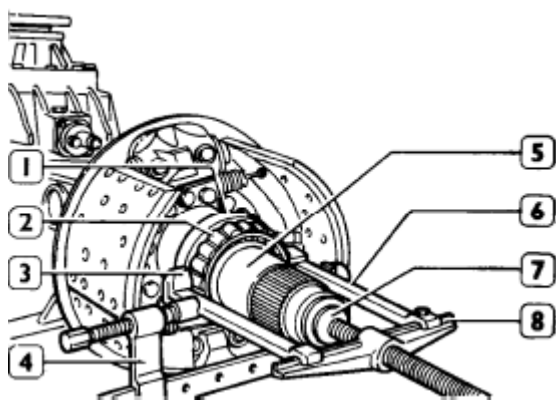


71535

Check the surface of the ring (1), on which the hub seal ring rotates, is not damaged or worn.

If necessary, replace the ring (1).

Using the extractor [comprising bridge 99341003 (8), grips 99341023 (3), tie rods 99341003 (6), press 99341015 (4) and reaction block 99345053 (7)], extract the ring (replacing if necessary) and/or the internal ring (2) of the sleeve (5) taper bearing.

Figure 21

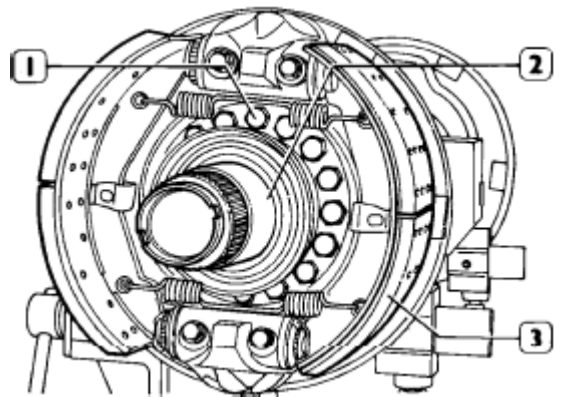


71536

Check the load bearing sleeve (2). If damaged, replace as follows.


Unscrew the screws (1), remove the brake support plate (3) and the axle casing sleeve (2).

Figure 22

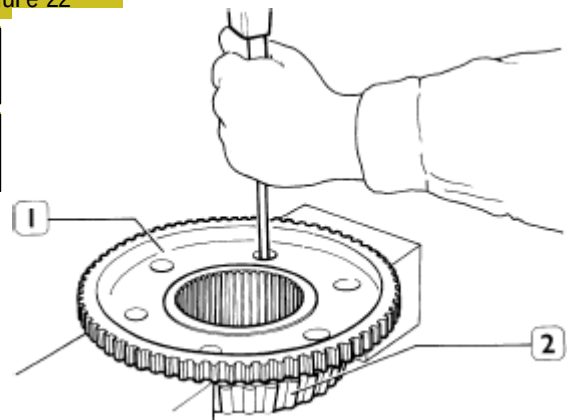

Push out of the crown holder (1) the taper roller external bearing (2) by means of a special beater inserted through the holes obtained from the crown holder.


Figure 23

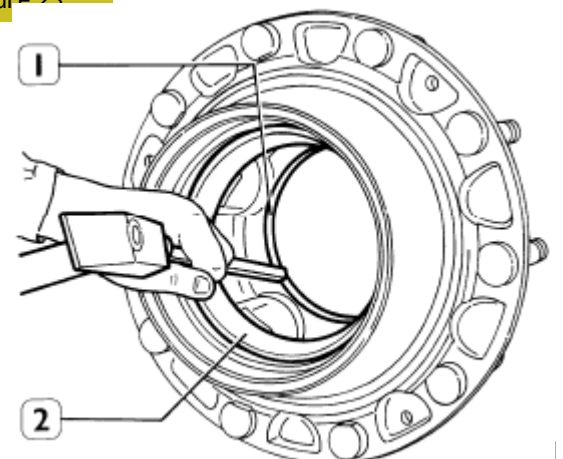

Using the appropriate tools, extract the external and internal seal rings from the wheel hub. With a universal bronze punch, extract the external rings (1 and 2) of the internal and external bearings.

Aquila Trucks Centres

Figure 24

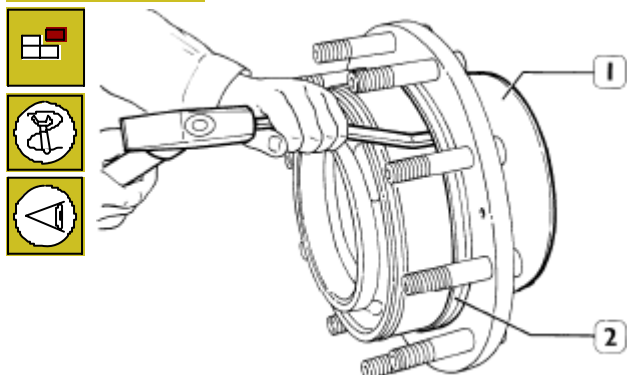

40063

Check the oil manifold (1) and replace if damaged. Extract with a punch inserted in the slots on the hub (2).

CLEANING AND CHECKING WHEEL HUB AND EPICYCLIC GEAR PARTS



Carefully clean the wheel hub parts. Check the drive shafts for deformation. If necessary, straighten the drive shafts using a hydraulic press; if this does not provide satisfactory results, replace the drive shafts. Check the studs fixing the wheel: if the threads are damaged or deformed they must be replaced. Work under a press to extract and re-assemble the studs. On completion of assembly operations, check that the orthogonal deviation is no greater than 0.3 mm.

Lubricate the bearings and make sure that the roller support cage rotates freely, rotation should be smooth, without hardening.


Check the threads on the hub bearings adjustment nuts and on the load bearing sleeves; replace the nuts if necessary. Check the oil manifold and replace if damaged. Replace all seals with new parts.

Carefully clean all the epicycloid gear unit parts. Visually check the toothing on the bevel gear support, the bevel gear, the crown wheel gears and the open gear unit.

Check the spacer rings, distance ring, bearing rollers and support pins.

Replace any damaged or worn parts.

Figure 25

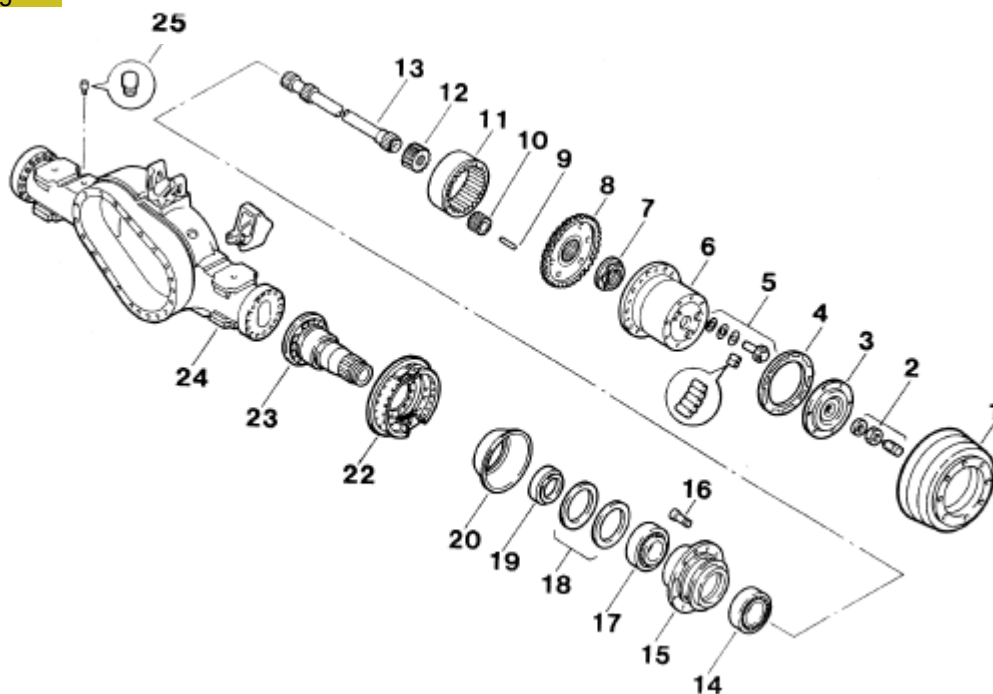

40063


WHEEL HUB PARTS

1. Brake drum - 2. Adjusting nut and screw - 3. Cover - 4. Seal - 5. Pin and roller for side pinions - 6. Side pinion support - 7. Adjusting nut - 8. Ring bevel gear support - 9. Shoulder pin - 10. Side pinion - 11. Ring bevel gear - 12. Gear unit - 13. Drive shaft - 14. Bearing - 15. Wheel hub - 16. Stud - 17. Bearing - 18. Seal rings - 19. Support ring - 20. Oil sump - 22. Brake unit - 23. Load bearing sleeve - 24. Axle housing - 25. Breather

Aquila Trucks Centres

525030 Wheel hub disassembly

Figure 26

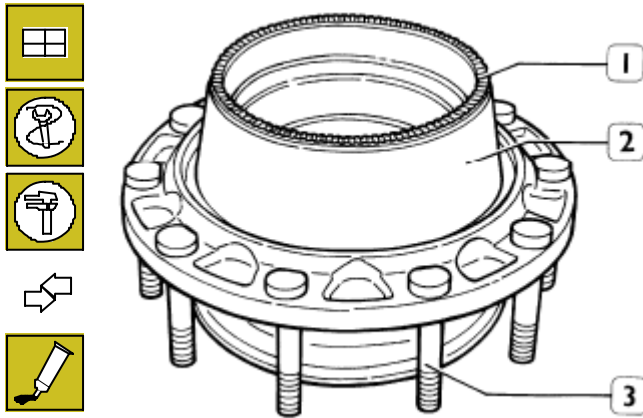


39645

If the studs (3) need to be replaced, before fitting new studs, make sure that the contact surface on the head is free of slag, burr, blisters.

After fitting, check that the studs are fully inserted on the hub and that the right angle error does not exceed 0.3 mm.

If the oil collecting sump (2) needs to be replaced, before assembly, smear the contact surface on the hub/sump and hub/hub seat with LOCTITE 573 sealing compound.


Figure 27

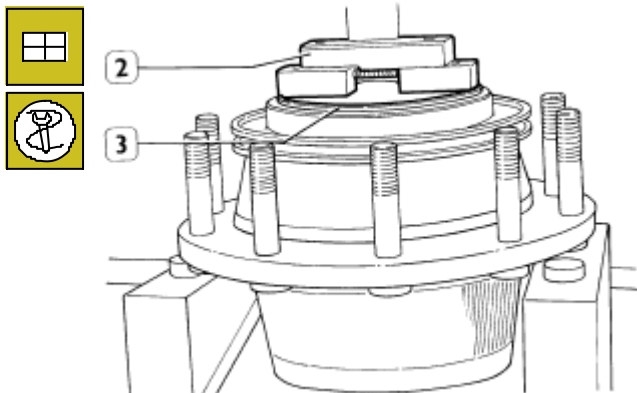

40064

Using punch 99374094 (2) and a press, fit the external ring on the external bearing (3), stopping approx. 5 mm from the fully fitted position (see Figure 28).


Figure 28

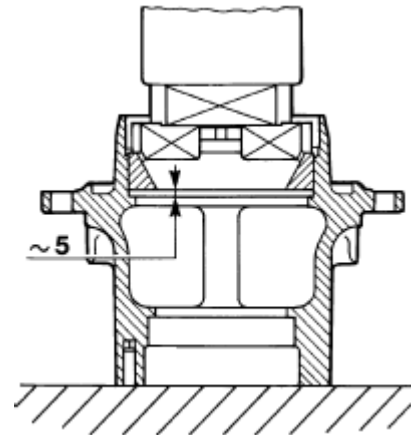

40410

Complete fitting operations manually, using grip 99370007, then turn the hub over and carry out the same operation with the external ring of the internal bearing.


Figure 29

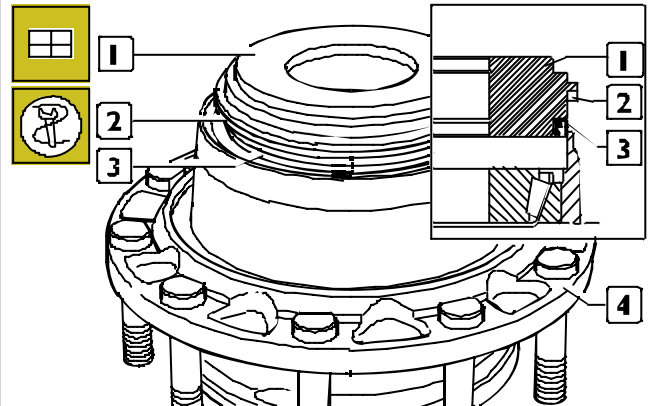

71537

Using a hydraulic press and key 99374161 (1), with the ring (2) positioned as shown in the drawing, fit the brown internal seal ring (3) on the wheel hub (4).

Figure 30

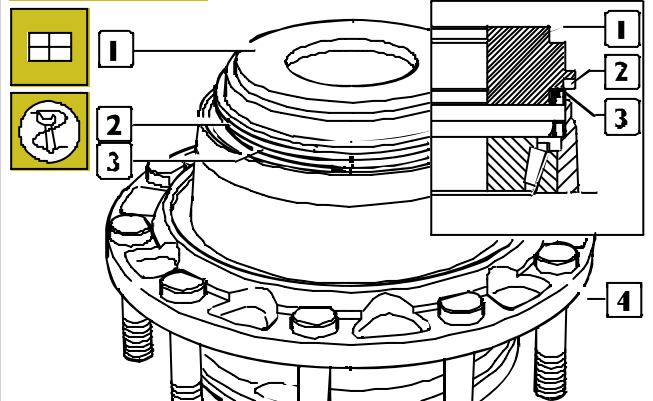


71538

Using a hydraulic press and key 99374161 (1), with the ring (2) positioned as shown in the drawing, fit the blue external seal ring (3) on the wheel hub (4).

Aquila Trucks Centres


Figure 31

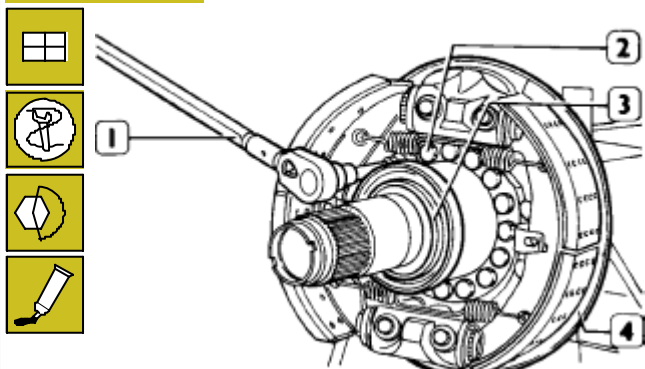

71539

Position the seal ring on the load bearing sleeve. Fit the load bearing sleeve (3), the brake support plate (4) and dust seal disk. Smear the screws (2) and tighten to the correct value with a torque wrench (1).


Figure 32

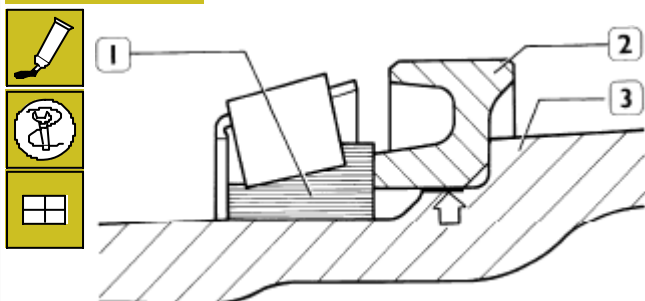

40375

Smear LOCTITE 573 on the seat (=>) of the load bearing sleeve (3) on the seal rings support ring (2). Heat the ring (2) with an electric drier and key on the load bearing sleeve (3). Heat the taper bearing internal ring (1) to 100°C and fit on the load bearing sleeve.


Figure 33

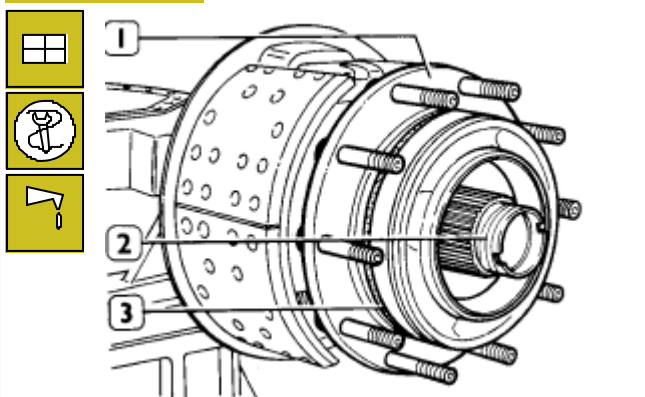

71540

Lubricate the lip of the seal rings and sleeve. Fit the hub (1) on the load bearing sleeve (2). Lubricate the seal ring (3) and fit on the wheel hub.


Figure 34

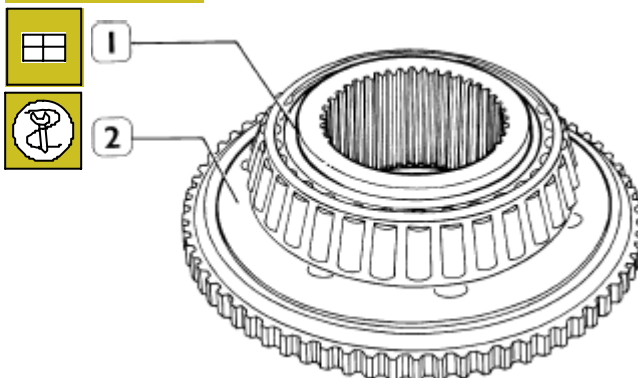

40377

Using an electric drier, heat the taper roller bearing (1) to 100°C and fit on the bevel gear support (2) with a punch.


Figure 35

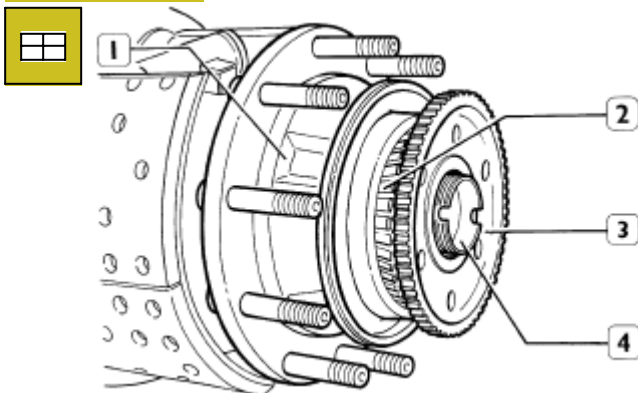

39650

Fit the bevel gear support (3) and the taper roller bearing (2) on the load bearing sleeve (4)


Figure 36

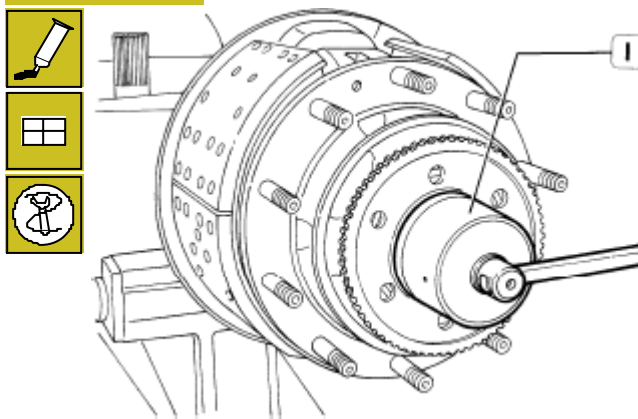

Apply a thin layer of MOLYKOTE on the contact surface of the adjusting nut and tighten with wrench 99354207 (1) until the hub rotates with difficulty. Release the hub with a few blows from a hammer in the direction of the axis and in both directions.

Aquila Trucks Centres

Figure 37

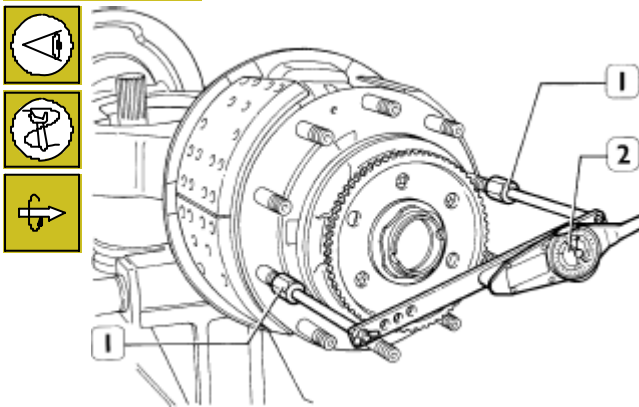

40071

Position tool 99395026 (1) and, using a torque wrench (2), read the wheel hub rolling torque.




During hub rolling torque detection, hub rotation speed must not exceed 40 rpm.

Wheel hub rolling torque values vary according to the following conditions:

- new bearings with surface protection $6 \div 7 + (12 \div 16) \text{ Nm}$
- run in bearings and new, lubricated seals $6 \div 7 + (5 \div 7) \text{ Nm}$
- run in bearings and seals $6 \div 7 + (2.5 \div 4.5) \text{ Nm}$


Figure 38

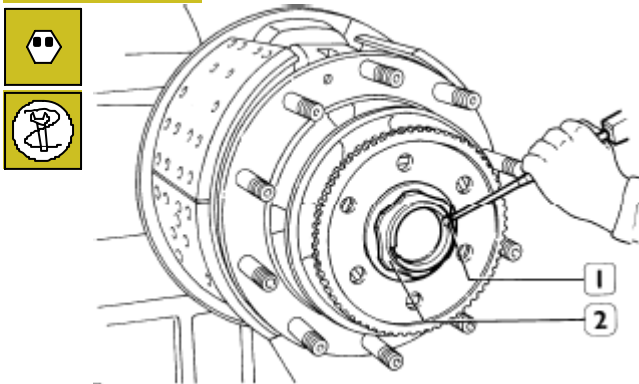

40072

Once the required rolling torque has been achieved, secure the adjusting nut (2) with a punch in the two grooves on the load bearing sleeve (1).

Figure 39

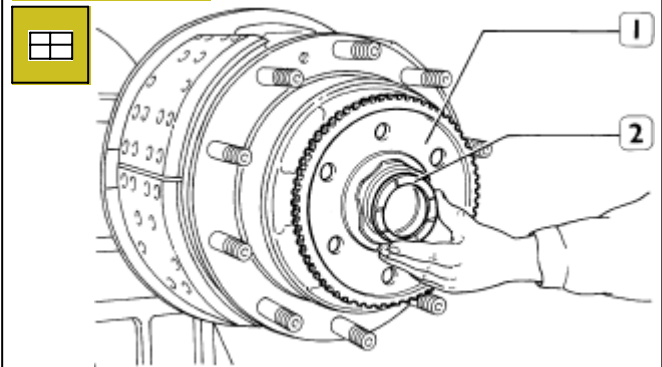


40069

Position the spacer ring (2) on the load bearing sleeve.

525140 Assembling the epicyclic reduction gear

Figure 40

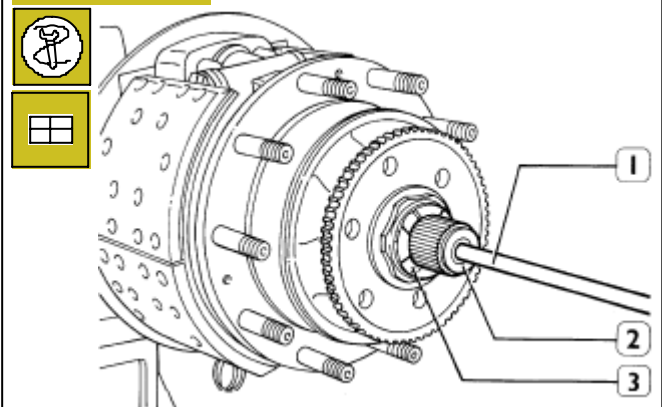


39636

Using tool 99374451 (1) introduce the drive shaft (2) on the load bearing sleeve (3).

NOTE Fit the short drive shaft, with double toothing, on the load bearing sleeve on the differential lock side.

Figure 41

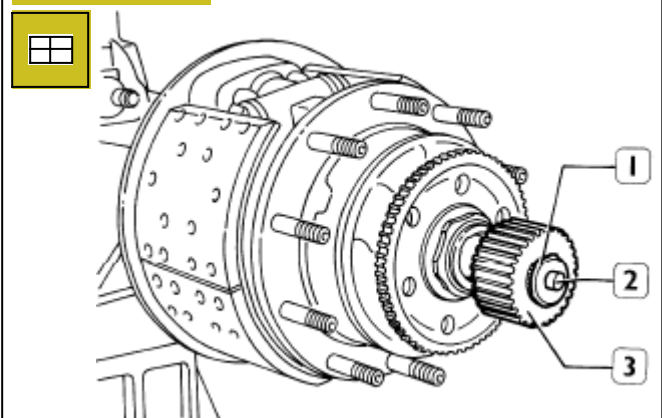


39653

Position the gear unit (3) on the grooved section of the drive shaft and the safety ring (1) in the seat. Drive the shoulder pin (2) into the seat on the drive shaft.


Aquila Trucks Centres

Figure 42

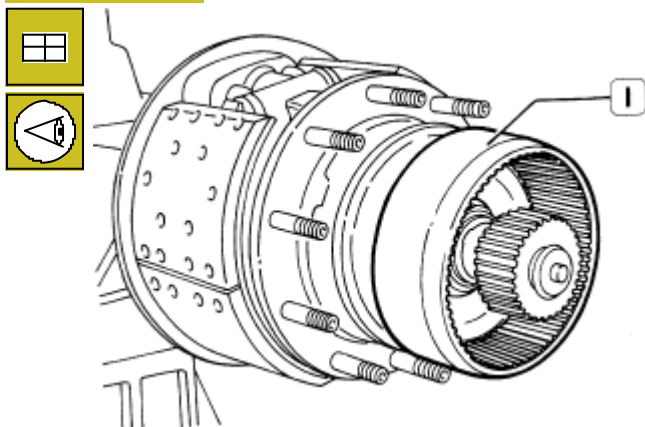

Position the bevel gear (1) with the external bevel facing outwards and then fit on the bevel gear support.


Figure 43

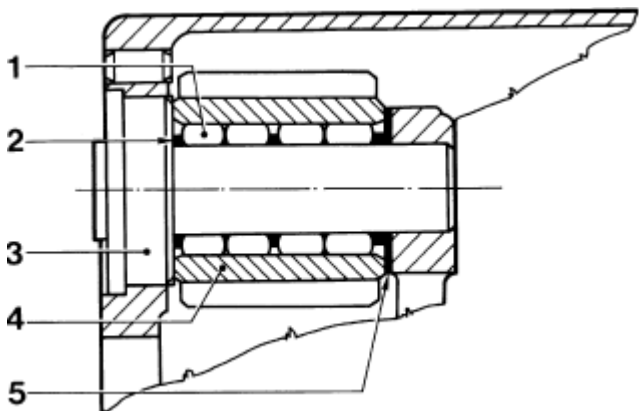

26916

Smear the rollers (1) with grease and position, together with the three spacer rings (2) on the side pinion (4), as shown in the drawing.
Position the side pinion (4) and the spacer washer (5) in the side pinion support.
Introduce the support pin (3) from the cover side, pushing it fully into position.
Repeat the same operation for the remaining two side pinion units.

Figure 44

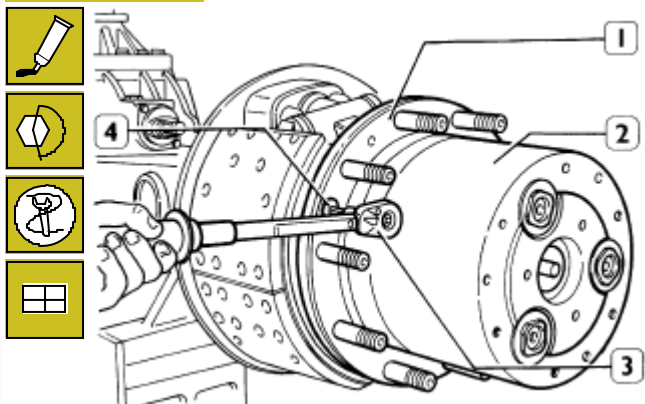


39655

Smear a thin layer of LOCTITE 573 on the contact surfaces of the side pinion support (2) and the wheel hub (1).

Push the side pinion support (2) onto the hub by moving the drive coupling flange in both directions to facilitate toothing engagement. Make sure that the fixing holes on the side pinion support and the hub coincide.

Position the three cheese-headed screws (4) and tighten to a torque of 50 ± 5 Nm with a torque wrench (3).


Figure 45

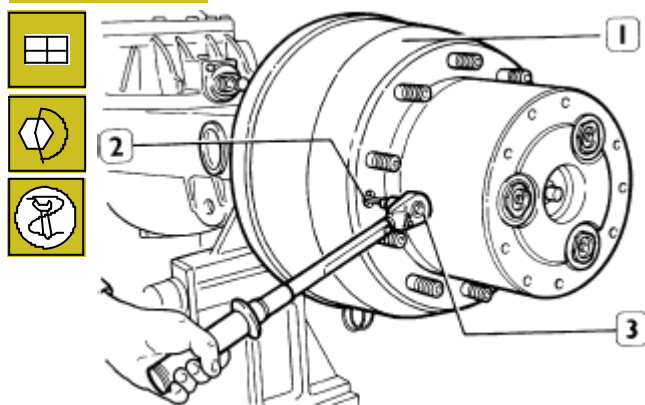

39656

Fit the brake drum (1) on the side pinion support. Secure the brake drum with the two cheese-headed screws (2) and tighten to a torque of 50 ± 5 Nm with a torque wrench (3).

Figure 46

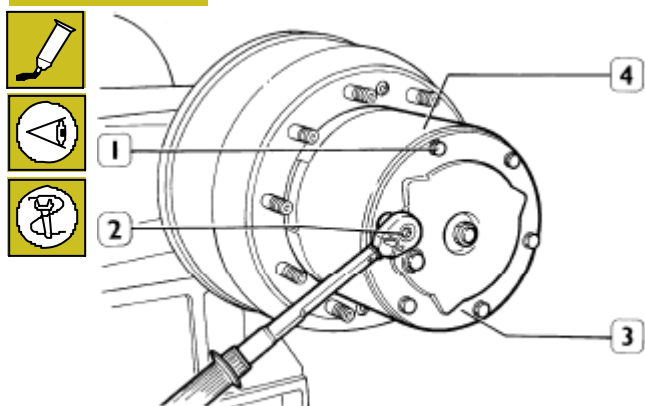


40073

Smear a thin layer of LOCTITE 510 on the cover (3) and side pinion support (4) contact surfaces.
Position the cover so that the bevels of the support pins coincide with the holes on the cover.
Smear LOCTITE 573 sealing compound on the screw (1) thread and tighten to a torque of 50 ± 5 Nm with a torque wrench (2).

Aquila Trucks Centres

Figure 47

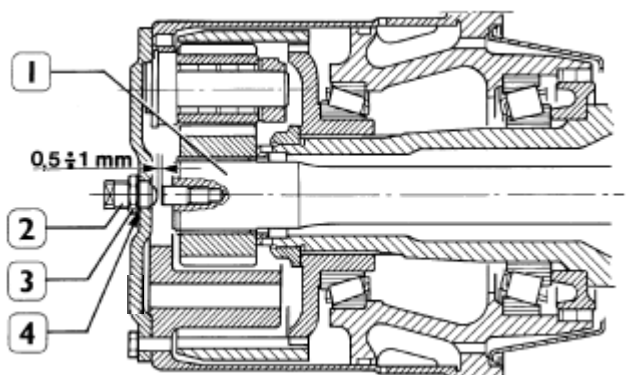

26924

The end float on the drive shaft (1) must be between 0.5 and 1 mm.

To carry out this adjustment fully tighten the adjusting screw (2), then unscrew by half a turn and secure with the hex nut (3).


NOTE The flat face of the hex nut must be positioned towards the seal ring (4).

526210 REMOVING - REFITTING THE INTERAXLE DIFFERENTIAL (with the axle mounted on stand 99322215)

Removal

Position the axle assembly on stand 99322215.


Figure 48

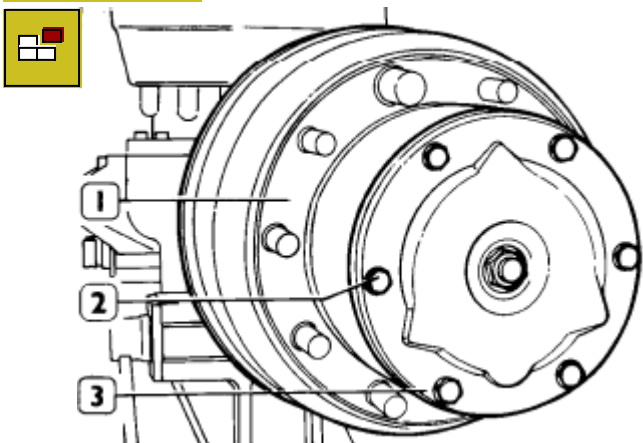

71534

Position a container under the wheel hub (1); unscrew the screws (2), remove the cover (3) and drain off the oil.

Figure 49

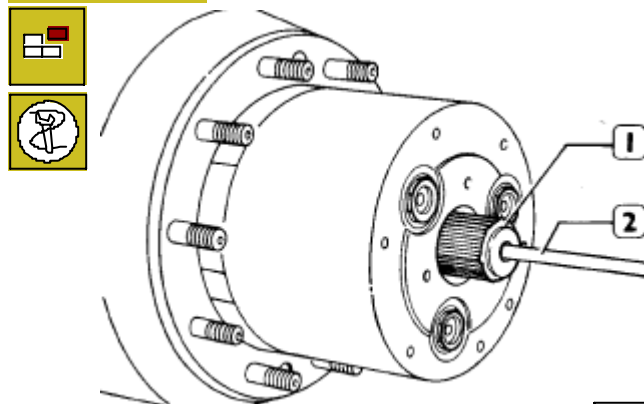


71541

Remove the shoulder pin and fit tool 99374451 (2) in the shoulder pin seat, then partially extract the drive shaft (1). Repeat this operation on the opposite side.

NOTE The drive shaft on the differential lock side must not be removed, but only extracted by approx. 120 mm. This is to prevent differential lock engagement inner sleeve without any more half shaft guide from inhibiting that rear axle box transfer box differential is taken out.

Figure 50

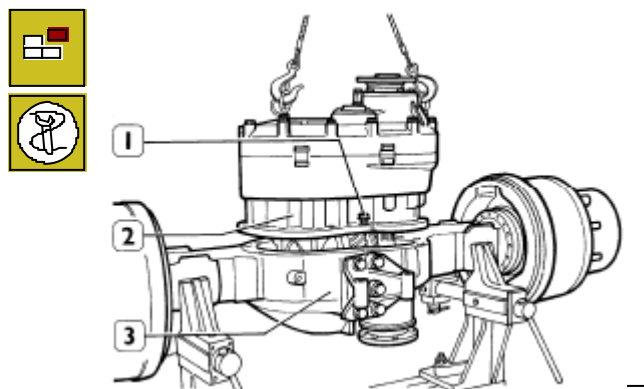

40074


Unscrew the screws fixing the flow divider-differential unit (2) to the axle housing (3). Insert the reaction screws (1) and, with eyebolts, steel slings and a hoist, extract the unit from the axle housing.

Refitting

For refitting, carry out the operations described for removal in reverse order, whilst observing the following instructions.


Aquila Trucks Centres

Figure 51

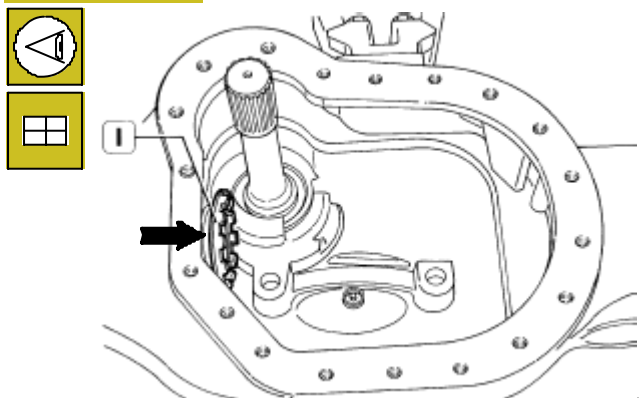


- the load bearing sleeve (1), for differential lock engagement, must be positioned on the drive shaft, with double toothing, with the internal side of the groove flush with the axle housing.

Figure 52

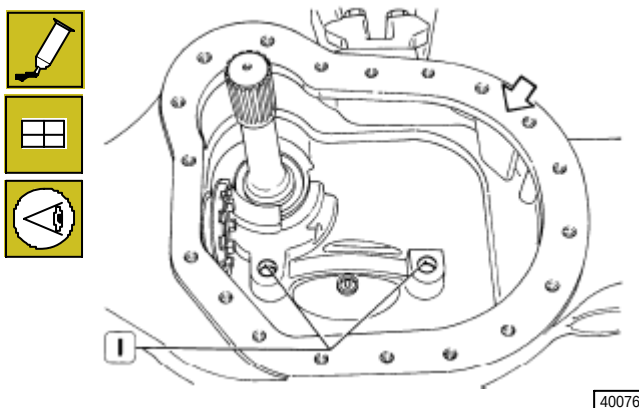

- clean carefully and smear LOCTITE 573 sealing compound on the contact surface (=>). Position the flow divider-differential unit, making sure that the fork engages on the sleeve (1, Figure 51) and that the centering pins enter the holes (1, Figure 52).

Figure 53

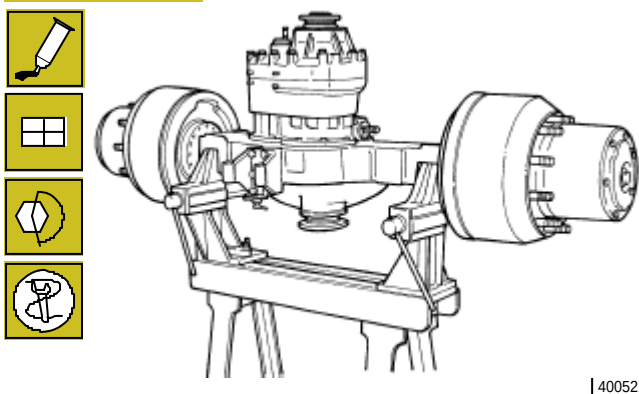


- Smear the thread and contact surface of the screws with LOCTITE 573 and tighten to a torque of 260 +/- 25 Nm using a torque wrench.

- refit the drive shafts and shoulder pins; apply LOCTITE 573 on the covers and tighten to the correct torque value. Adjust the end float on the drive shafts as described in Figure 47.

526010 REPAIRING THE INTERAXLE DIFFERENTIAL


Interaxle differential unit disassembly

Figure 54

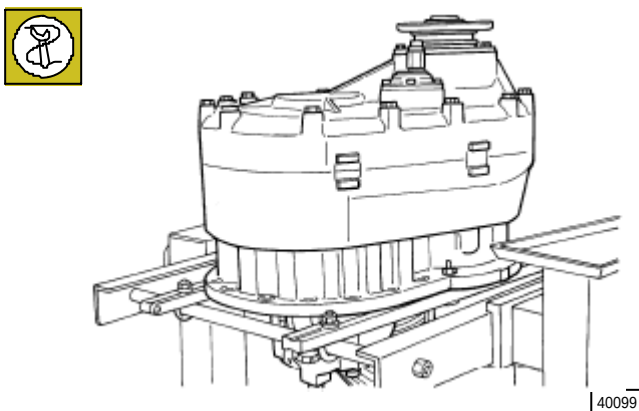

Position the interaxle differential unit on stand 99322205, with the appropriate brackets.


Figure 55

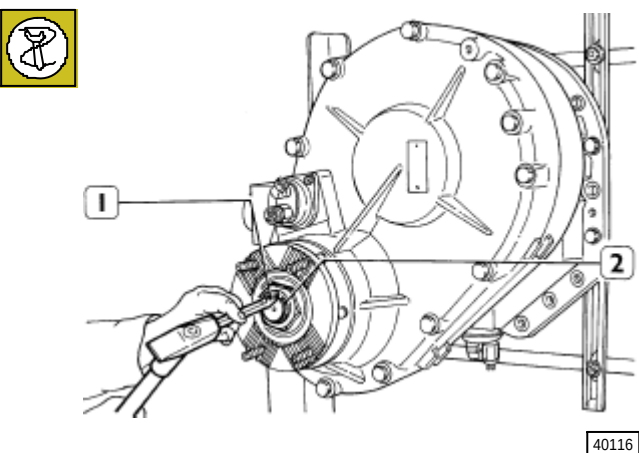

Using a punch (1) remove the safety notch on the nut (2).

Aquila Trucks Centres


Figure 56

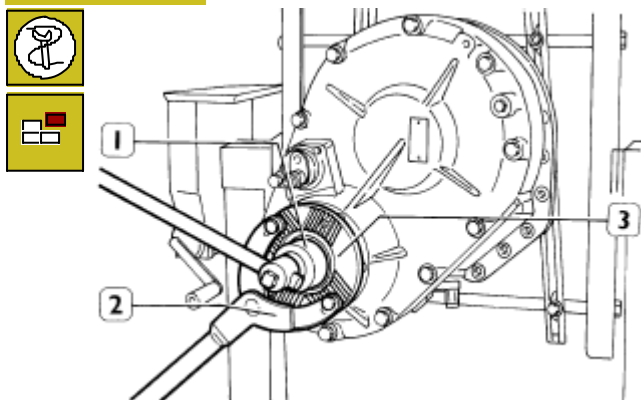

40117

Apply reaction lever 99370317 (2), heat the nut and loosen the drive coupling flange (3) fixing nut using Allen wrench 99355081 (1).


Figure 57

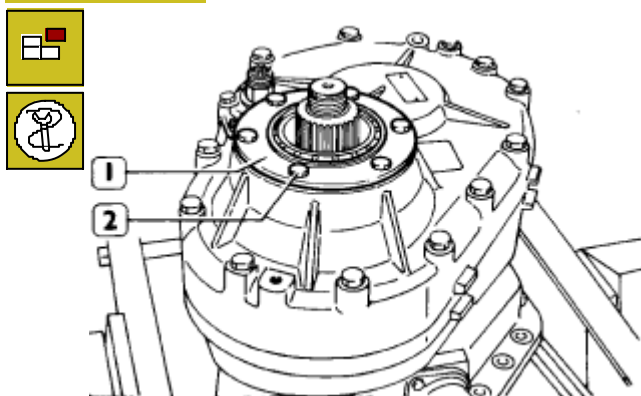

119173

Unscrew the screws (2) and remove the cover (1), complete with seal ring.


Figure 58

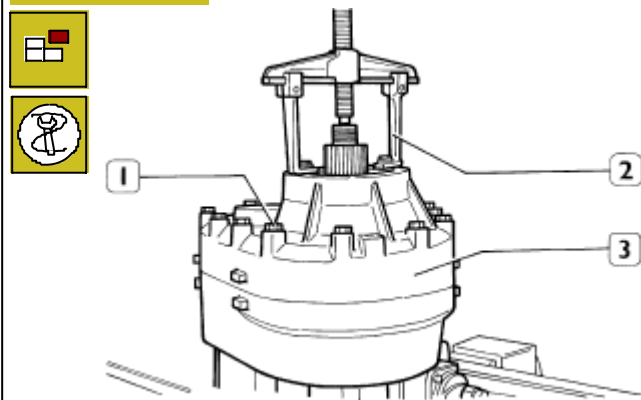

40119


Unscrew the screws (1) and, using an extractor (2) raise the cover (3) until the shaft bearing can be extracted.

Figure 59

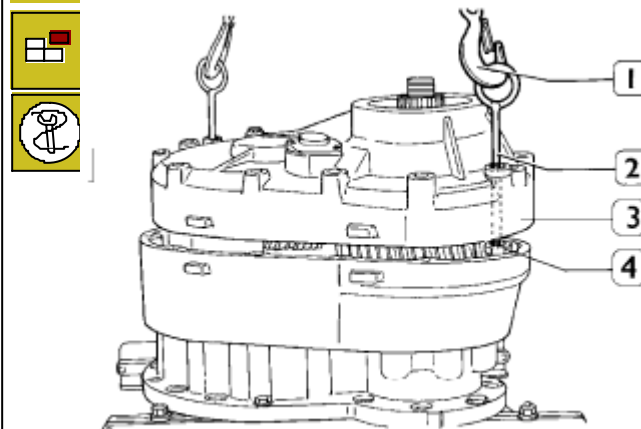

Lift box (3) so as to obtain sufficient space to insert the two nuts (4) in which eyebolts (2) are fastened. Using eyebolts (2) and slings with hooks (1), remove the half-housing (3) by moving the flow divider lock engagement fork, taking care not to damage parts.

Figure 60

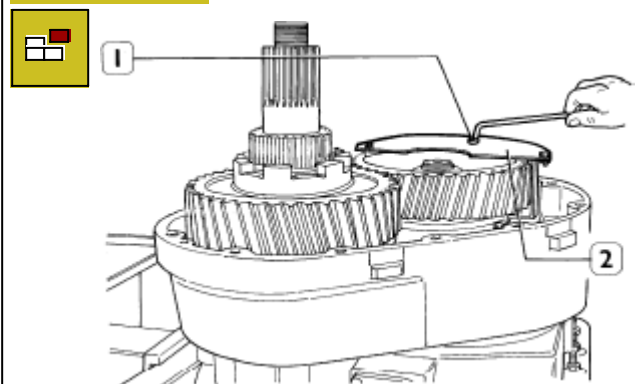


40121

Unscrew the screws (1) and remove the upper part of the oil feed (2).

Aquila Trucks Centres


Figure 61

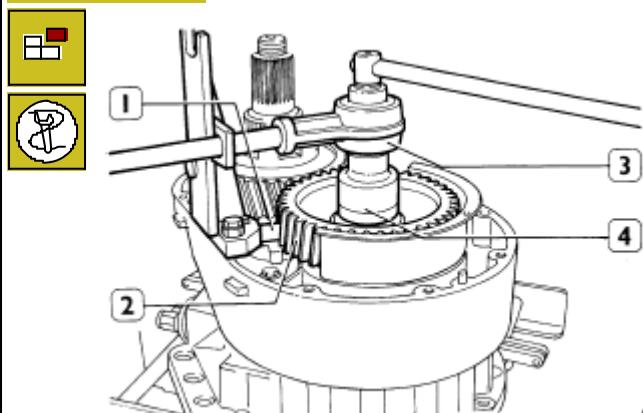

40122

Unscrew the gear unit (2) nut.
Fit tool 99363310 (1), blocking gear unit (2) rotation.
Using Allen wrench 99355038 (4) and multiplier 99389816 (3) unscrew the fixing nut.


Figure 62

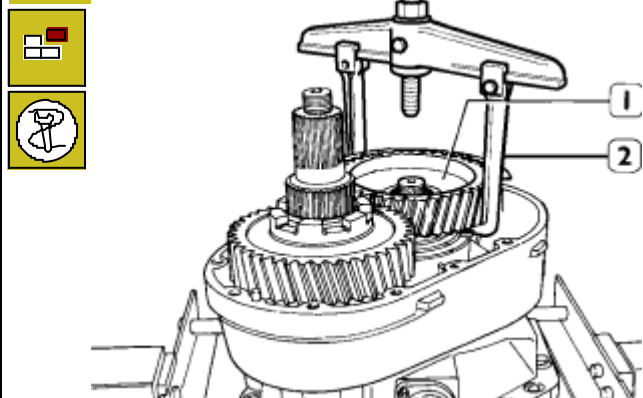

119175

Using appropriate extractor (2) remove driven gear (1) from taper pinion.


Figure 63

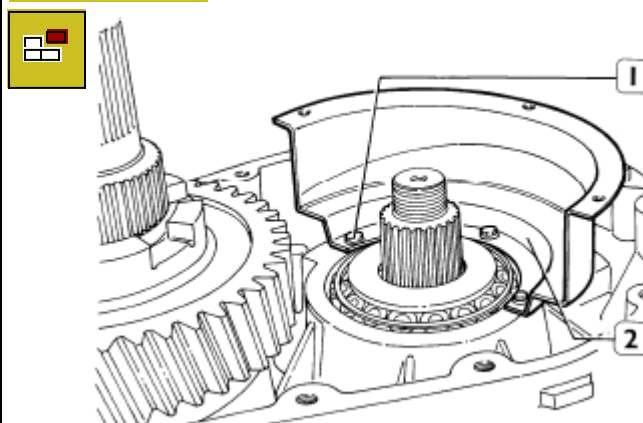

40115

Unscrew the three screws (1) and remove the oil feed (2).


Figure 64

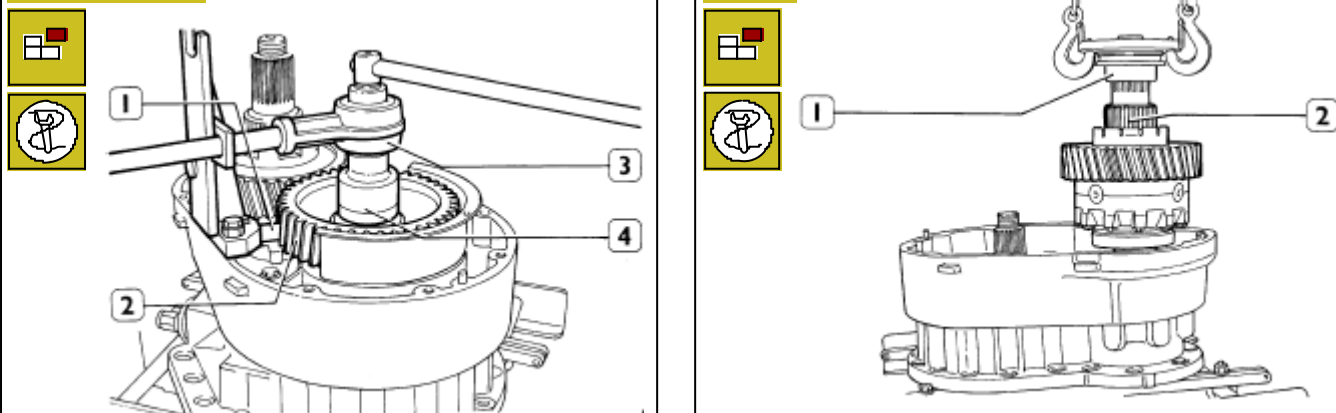

40116

Refit the flange (1) and secure with the nut; using hooks and slings, raise the flow divider differential unit (2).


Figure 65

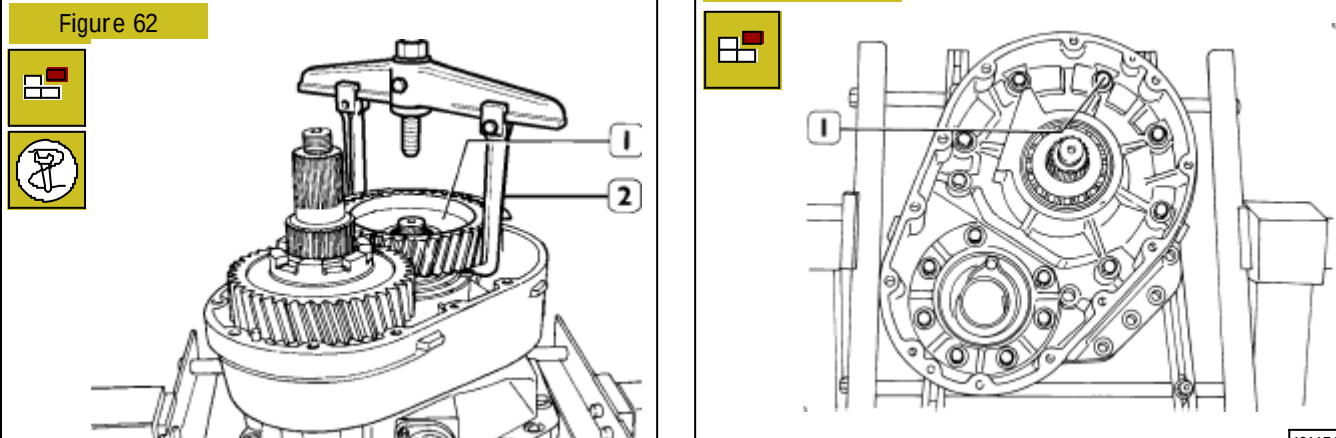

40117A

Unscrew the fourteen screws (1) fixing the half-housing to the differential housing.

Figure 66

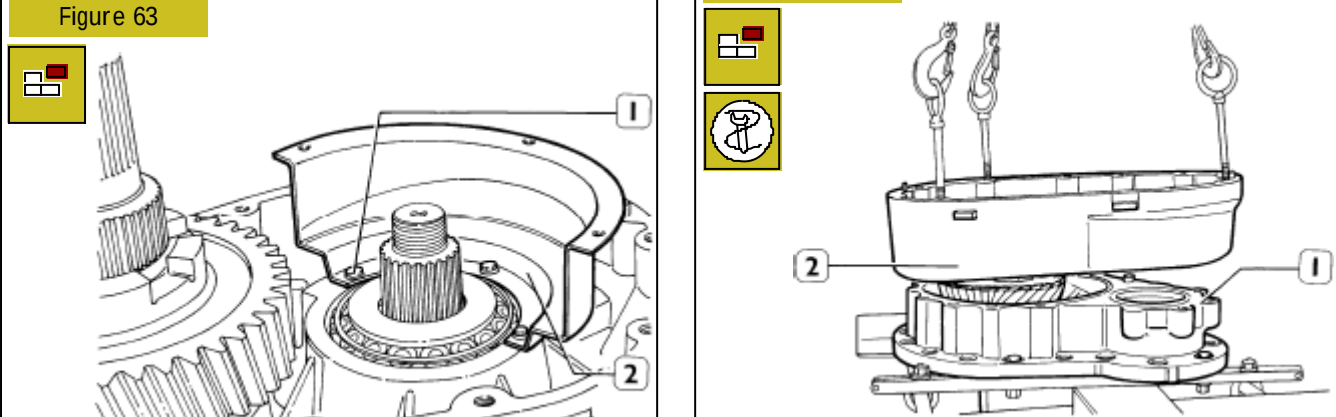


40119A

Using eyebolts, hooks and slings, remove the half-housing (2), complete with bevel pin, from the differential housing (1).

Aquila Trucks Centres

Differential housing disassembly

Figure 67

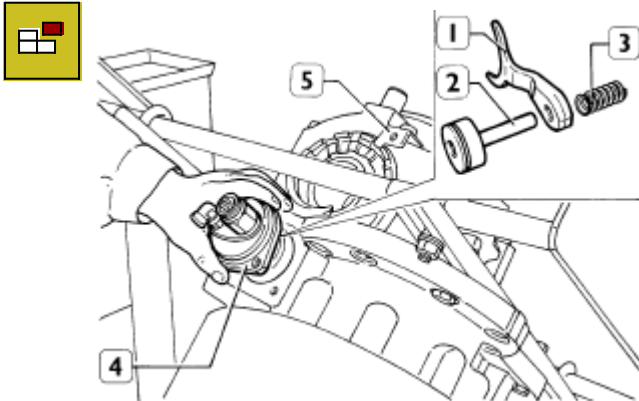


40113

Rotate the stand through 180°.

Unscrew the two screws and remove the cover (4), the piston (2), the fork (1) and the spring (3). Unscrew the screw and remove the safety plate (5).

Figure 68

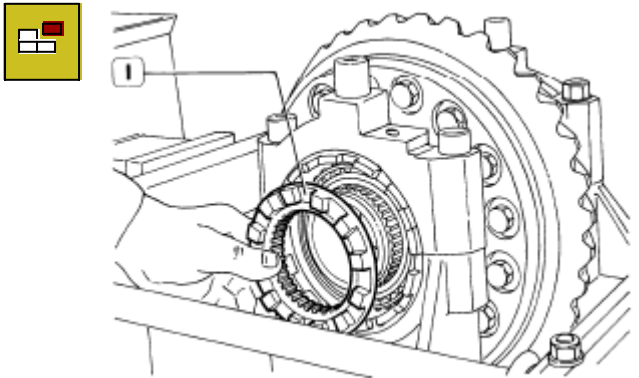


40111A

Remove the seeger ring and extract the differential lock fixed sleeve (1).

Mark the assembly position of the caps in relation to the differential carrier.

Figure 69

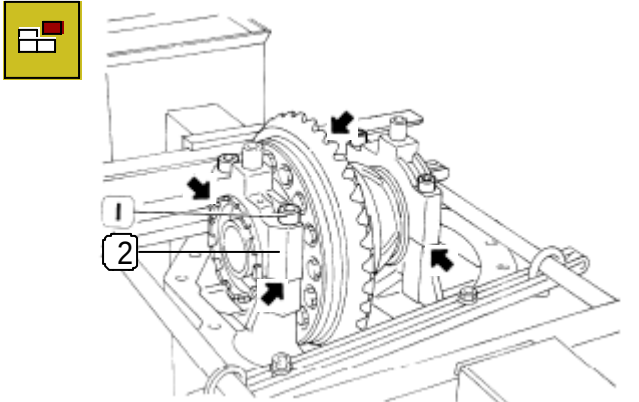


40102

Slightly loosen the adjusting ring nut, heat the points indicated by the arrows with drier 99305121 and unscrew the screws (1) secured with LOCTITE.

Remove the caps (2).


Figure 70

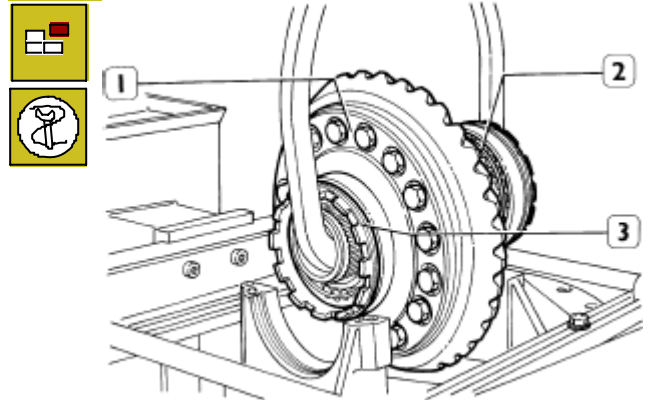

40108

Using a hook, remove the differential housing (1), together with the bearings (2) and adjusting ring nut (3).


Figure 71

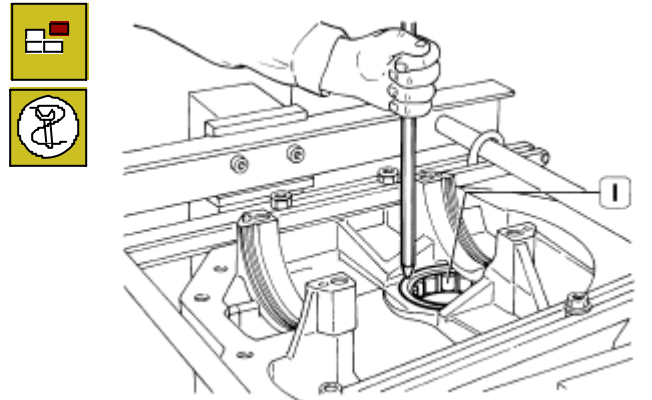

40104

Using a universal punch, extract the taper roller bearing (1) from the differential carrier.

Figure 72

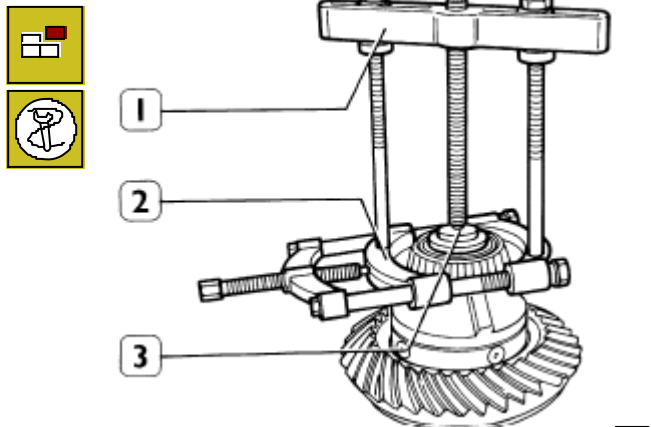


...086

Using extractor 99348001 (1-2) and reaction block 99345053 (3), extract the taper roller bearing from the differential housing. Repeat the same operation on the opposite side.

Aquila Trucks Centres


Figure 73

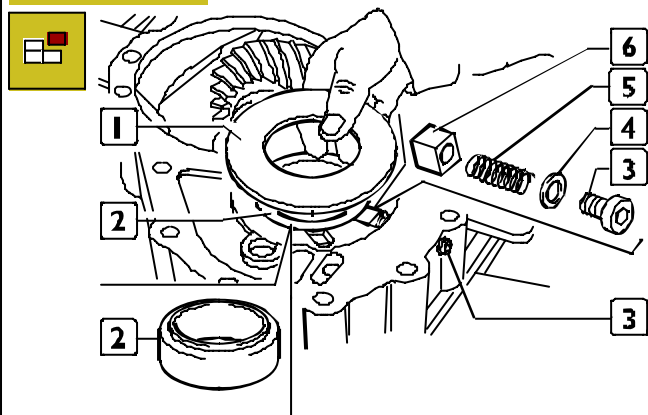

71544

Remove the guard disk (1).
Remove the plug (3), complete with washer (4), and extract the spring (5) and piston (6).
Remove the eccentric (2).


Figure 74

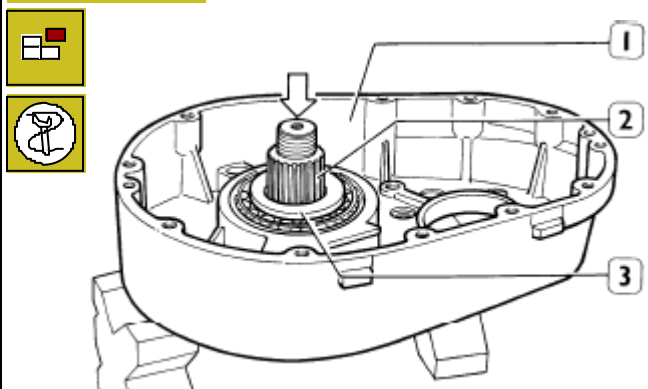

40376

Position the half-housing (1) on two parallel blocks and, using a punch, extract the bevel pinion (2) and remove the taper roller bearing (3).


Figure 75

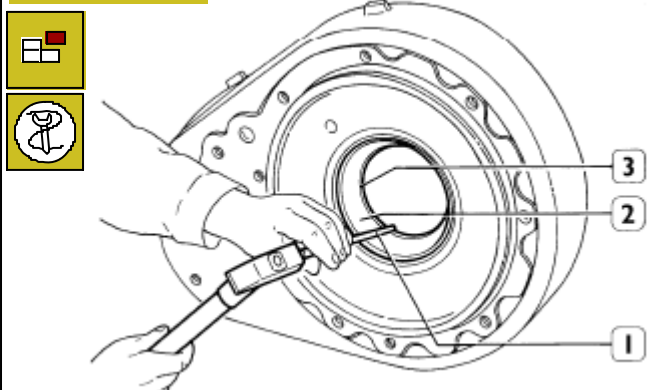

40079

Using a punch (1), extract the external rings (2-3) from the half-housing taper roller bearings.


Figure 76

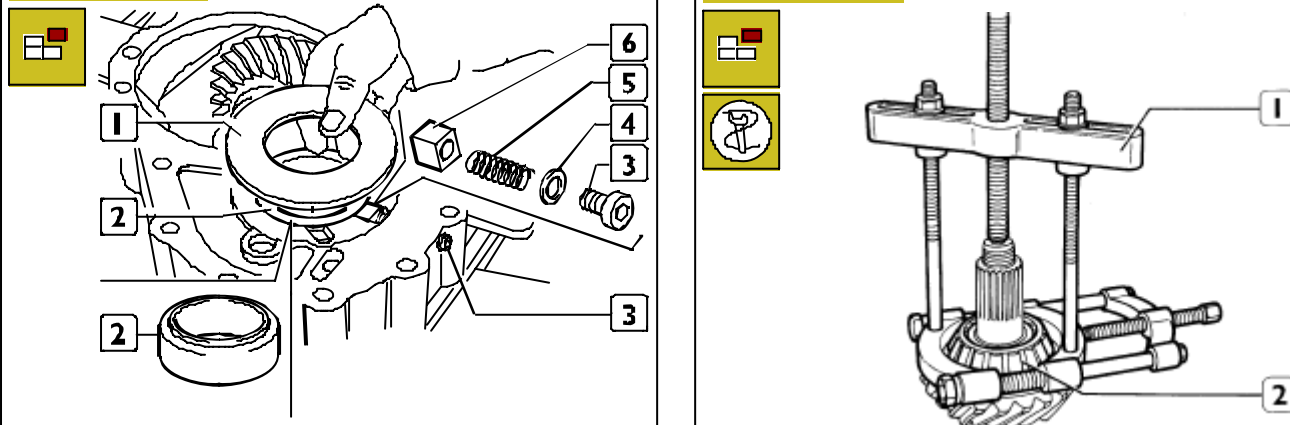

470077

Using extractor 99348001 (1), extract the intermediate bearing (2) from the bevel pinion.


Figure 77

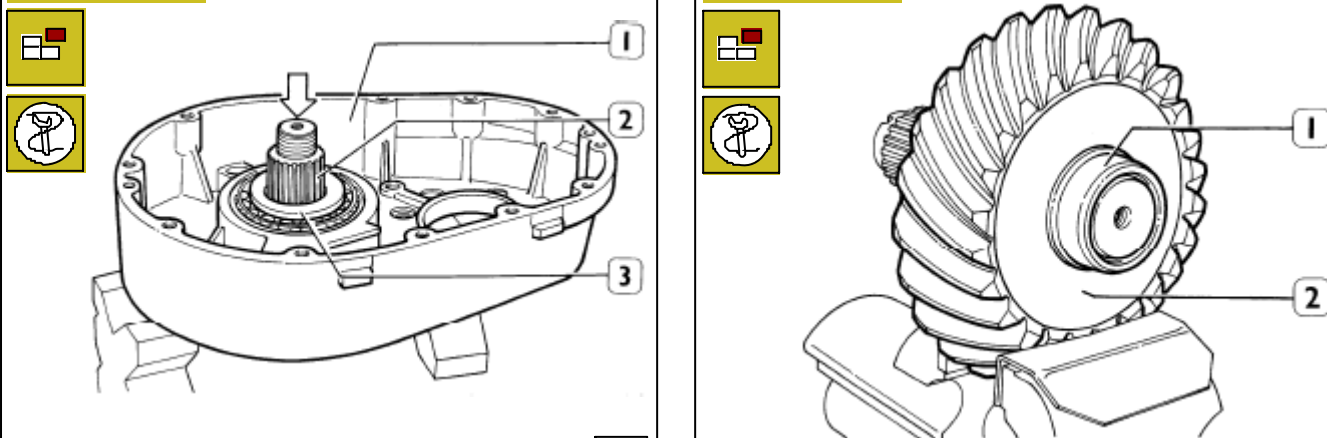

3

Using suitable tools, extract the internal ring (1) from the rear bearing of the bevel pinion (2). This is a destructive operation.

Figure 78

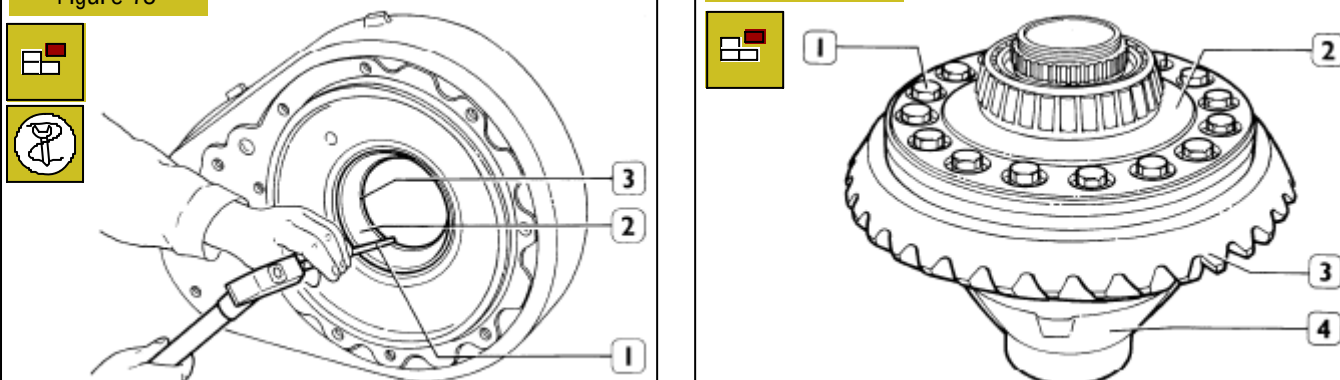

40087

Loosen and extract the screws (1) fixing the ring bevel gear (3) and cover (2) to the half-housing (4).

Aquila Trucks Centres


Figure 79



40088

Counter-mark the cover and gear housing. Remove the gear housing cover (1) and release the ring bevel gear (2) using a punch (3).


Figure 80

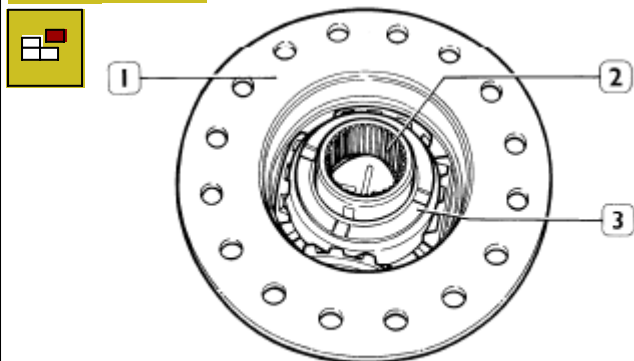

40089

Remove the crown wheel (2), together with the shoulder washer (3), from the gear housing (1).

Figure 81

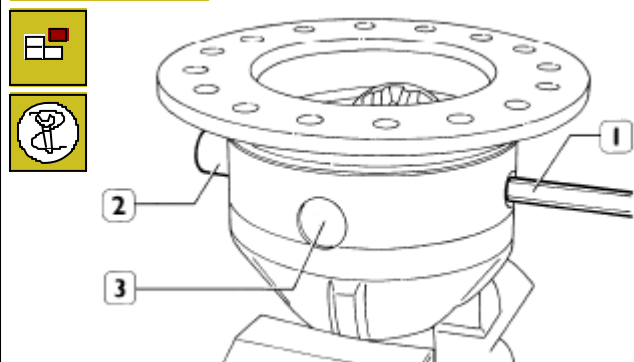


400910

Using a punch (1), first extract the long pin (2) and then the two short pins (3).

NOTE The exact position of the pins is marked on the spider body (2, Figure 82) by a long stripe for the long pin, and by two short stripes for the short pins.

Figure 82

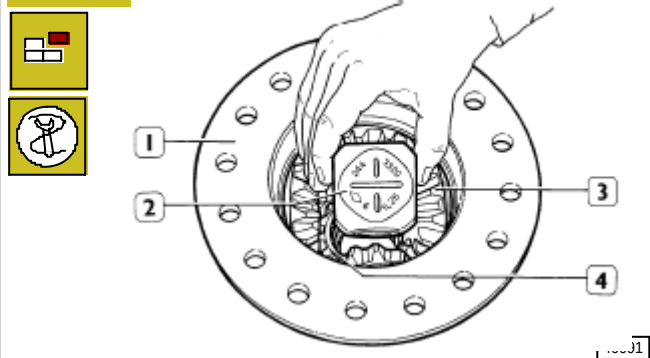


119171

Remove the spider (2) and the side pinions (3) with the relative shoulder washers and crown wheel (4) from the gear housing (1).

Interaxle differential disassembly

Figure 83

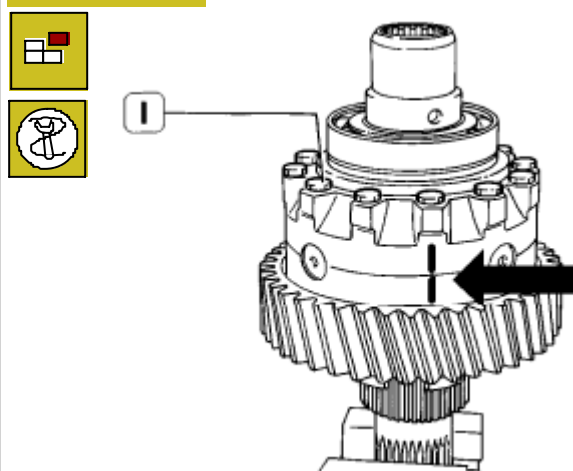


119176

Fit the interaxle differential in a vice; unscrew the screws (1). Mark half boxes as shown →.


Aquila Trucks Centres

Figure 84

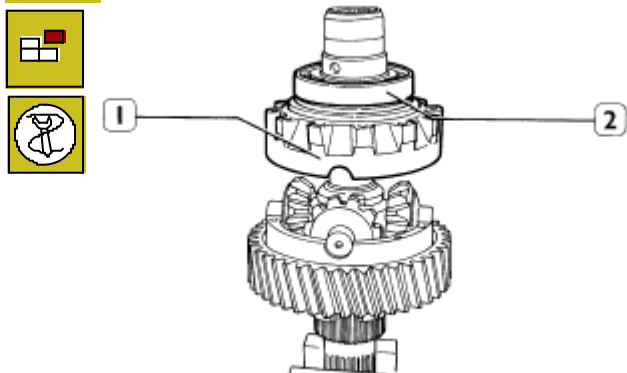


Remove the half-housing (1) and bearing (2).

Figure 85

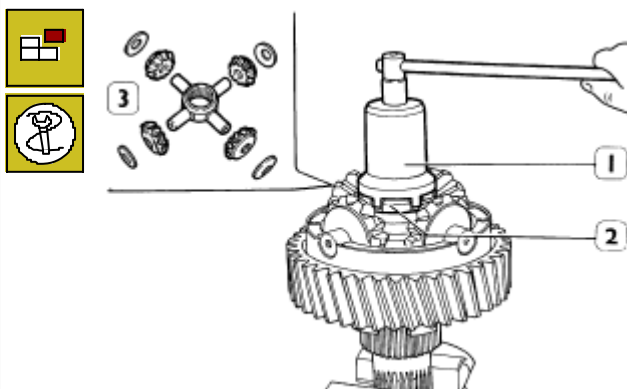


With appropriate punch, remove rivets from ring nut (2). Use spanner 99355121 (1) to unlock ring nut (2), remove spider (3) complete with planetary gears, thrust washers and seal (6, Fig. 86).

Figure 86

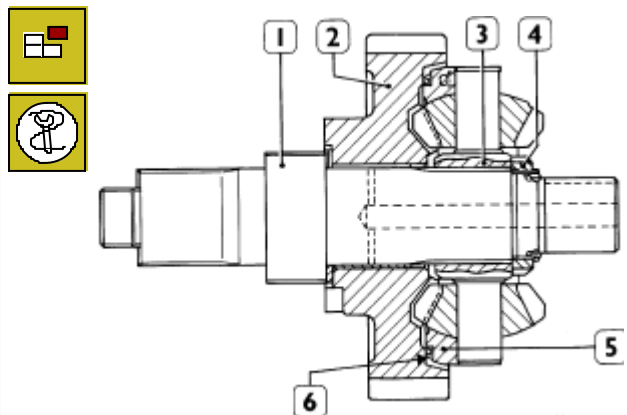


1. Input shaft - 2. Driving gear - 3. Spider - 4. Ring nut - 5. Differential half-housing - 6. Seal ring

Figure 87

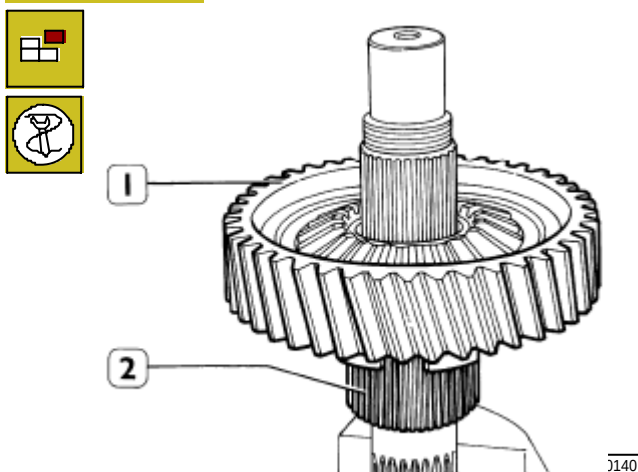

Extract the driving gear (1) from the input shaft and remove the shoulder washer.

Figure 88

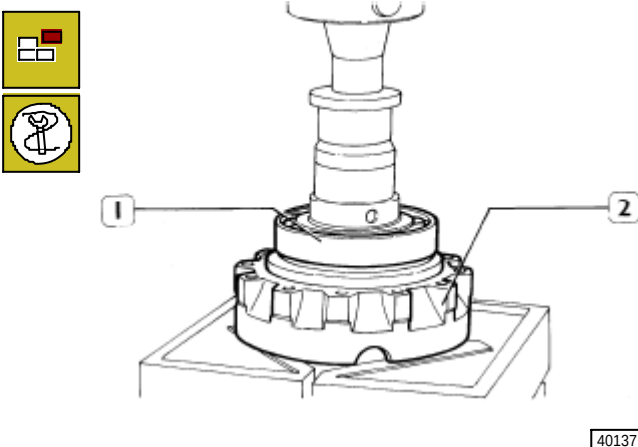

Using a hydraulic press, extract the bearing (1) from the half-housing (2) using the crown wheel gear unit.

CHECKING THE DIFFERENTIAL COMPONENTS

Carefully clean all of the individual differential-flow divider components, replacing worn parts and all sealing elements.


NOTE Carefully clean all the threads to ensure exact adjustments and precise tightening torque values.

NOTE If either the bevel gear or pinion need to be changed, both parts must be replaced as they are provided as coupled spare parts.

NOTE Check the bushings mounted in the driven gear and crown wheel unit. Replace if worn using a press.

Aquila Trucks Centres

Figure 89

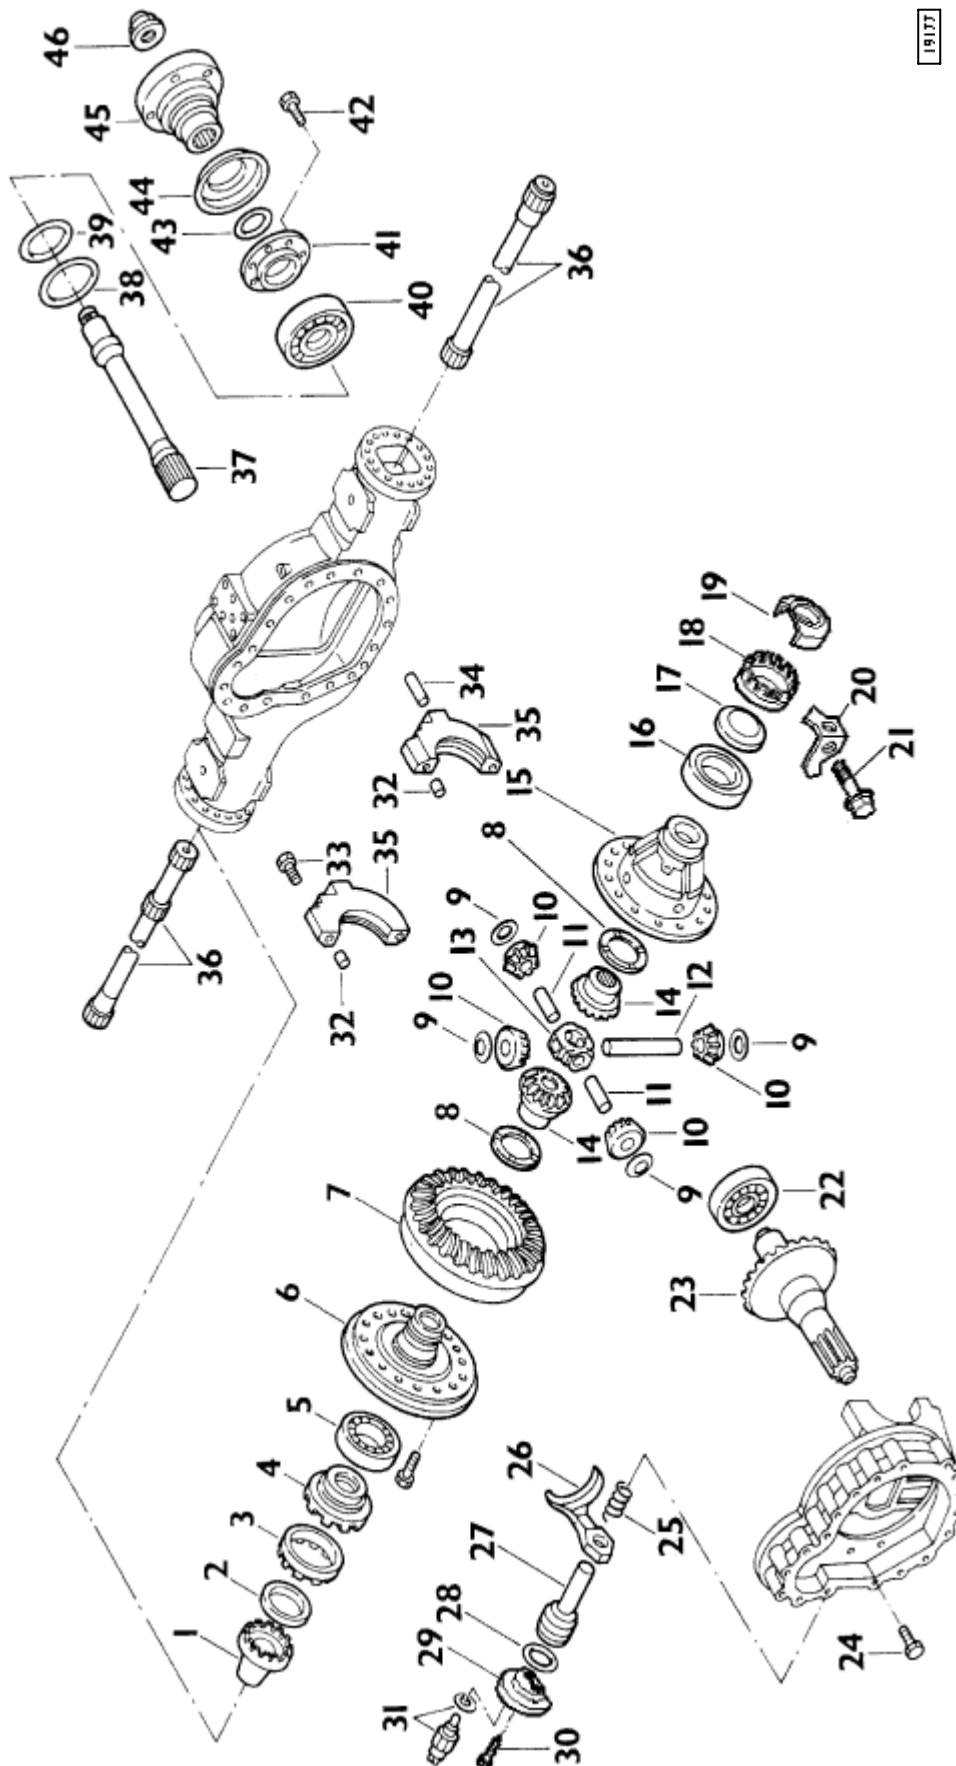


DIFFERENTIAL COMPONENTS

1. Sleeve - 2. Ring - 3. Ring nut - 4. Ring nut - 5. Oil seal - 6. Cover - 7. Crown - 8. Washer - 9. Fifth wheel - 10. Side pinion - 11. Pin - 12. Pin - 13. Spider - 14. Side pinion - 15. Differential housing cover - 16. Bearing - 17. Ring nut - 18. Bearing - 19. Oil baffle - 20. Screw - 21. Plate - 22. Bearing - 23. Pinion - 24. Screw - 25. Spring - 26. Fork - 27. Piston - 28. Ring - 29. Cover - 30. Screw - 31. Switch - 32. Pin - 33. Screw - 34. Pin - 35. Caps - 36. Drive shafts - 37. Shaft - 38. Seal ring - 39. Seal ring - 40. Bearing - 41. Cover - 42. Screw - 43. Seal ring - 44. Oil splash plate - 45. Flange - 46. Nut

Aquila Trucks Centres

Figure 90

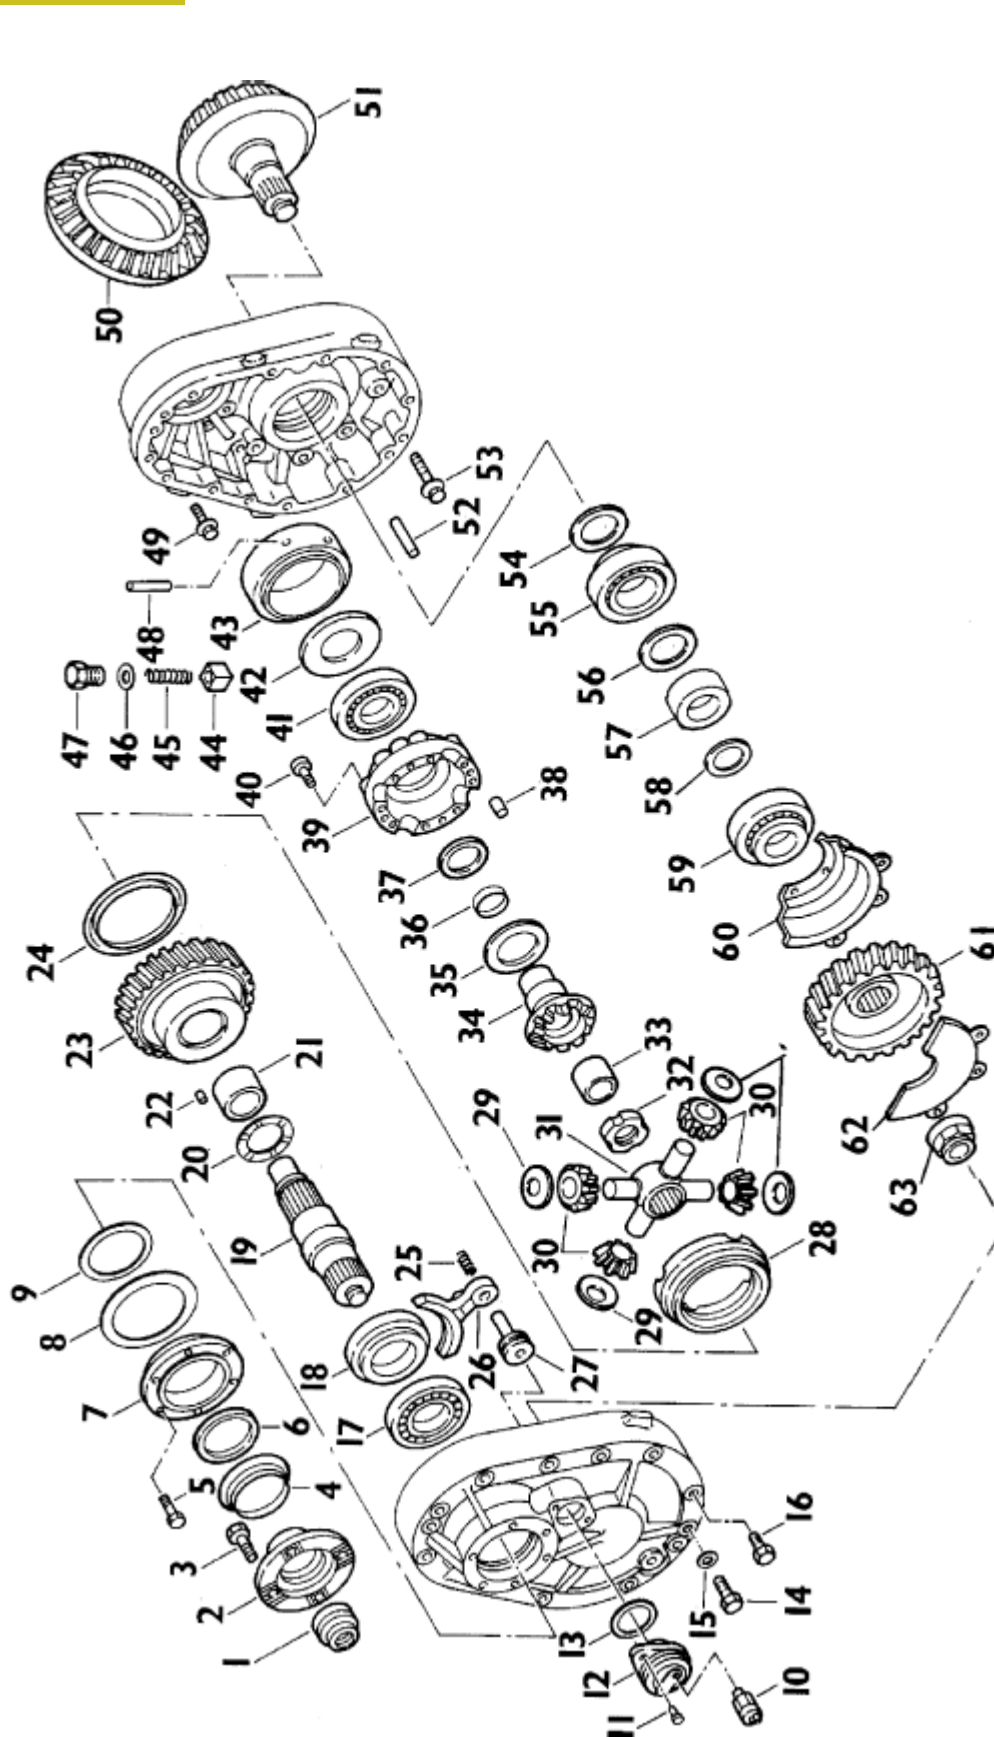


FLOW DIVIDER-DIFFERENTIAL COMPONENTS

1. Nut - 2. Control side flange - 3. Hex screw - 4. Oil splash plate - 5. Screw - 6. Seal - 7. Cover - 8. Seal ring - 9. Seal ring - 10. Switch - 11. Screw - 12. Cover - 13. Ring - 14. Plug - 15. Ring - 16. Screw - 17. Bearing - 18. Sleeve - 19. Shaft - 20. Washer - 21. Bushing - 22. Pin - 23. Gears - 24. Seal ring - 25. Spring - 26. Fork - 27. Piston - 28. Half-housing - 29. Washer - 30. Side pinions - 31. Spider - 32. Ring nut - 33. Bushing - 34. Crown wheel - 35. Washer - 36. Oil guard - 37. Seal ring - 38. Pin - 39. Half-housing - 40. Side pinions - 41. Bearing - 42. Washer - 43. Eccentric ring - 44. Adjusting piston - 45. Compression spring - 46. Ring - 47. Threaded plug - 48. Pin - 49. Self-locking screw - 50. Crown - 51. Pinion - 52. Pin - 53. Self-locking screw - 54. Adjusting shim - 55. Bearing - 56. Adjustment thickness - 57. Spacer ring - 58. Ring - 59. Bearing - 60. Oil feed - 61. Gears - 62. Oil feed cover - 63. Nut

Aquila Trucks Centres

Interaxle differential unit assembly


Figure 91

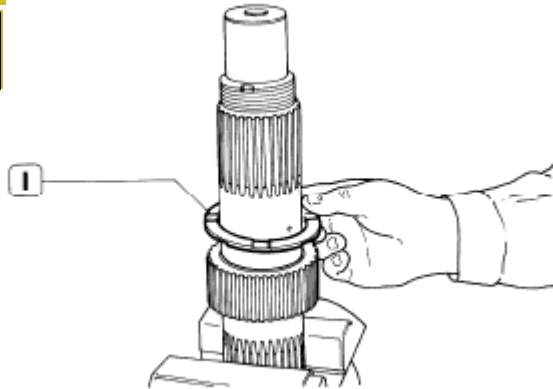

40141

Position the input shaft in a vice and fit the shoulder ring (1).


Figure 92

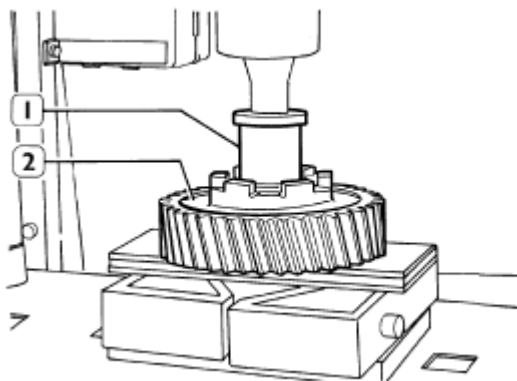

40411

If disassembled, assemble the bushing in the driven gear (2) using a suitable keying device (1).


Figure 93

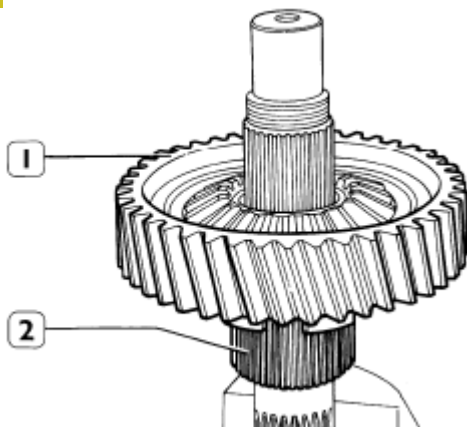

40140

Fit the driven gear (1) on the input shaft (2).


Figure 94

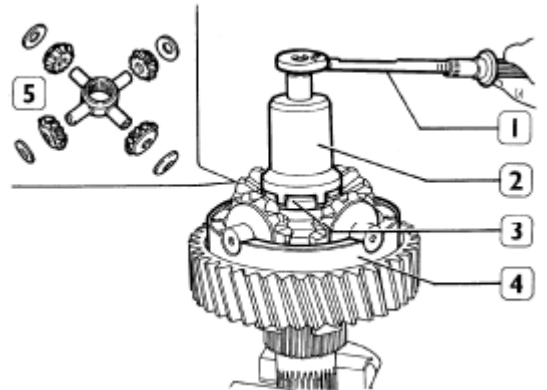

40138

Assemble the half-housing (4) and the seal ring. Fit the spider (5) and side pinions, using wrench 99355121 (2) and torque wrench (1), tighten the ring nut (3) to a torque value of 230 ± 20 Nm.


Figure 95

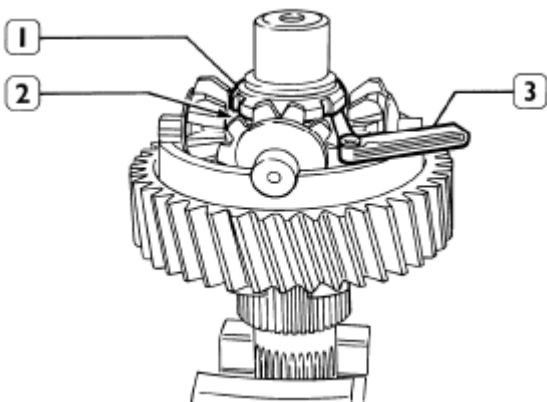

40142

After tightening the ring nut (1) check (with a feeler gauge (3)) that there is a clearance of 0.40 to 0.55 mm between the ring nut (1) and the spider (2). If not, replace the necessary parts.

Figure 96

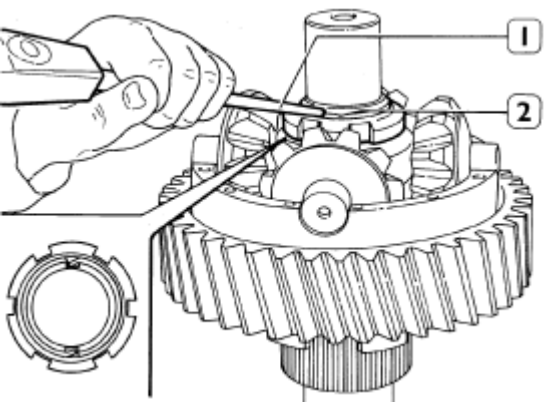


40143

Using a punch (1) secure the ring nut (2) as shown in the drawing.

Aquila Trucks Centres


Figure 97

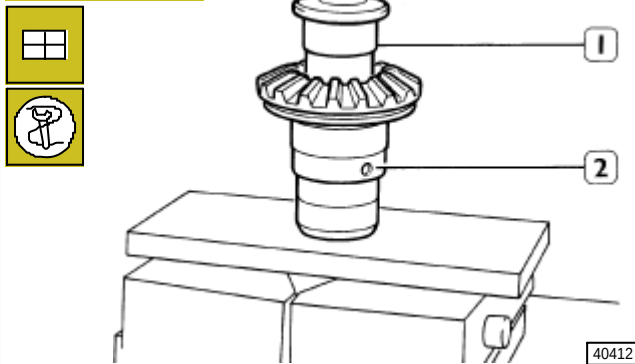

Using key 99370122 (1) and press, fit the bushing in the crown wheel gear unit (2).


NOTE After assembling the bushing, make sure that it is keyed correctly on the input shaft.

Figure 98

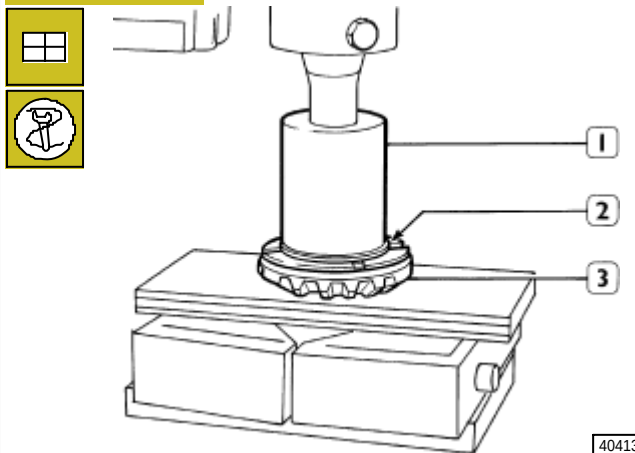

Fit the shoulder ring in the crown wheel gear unit (3), then fit the seal ring (2) using a keying device (1).


Figure 99

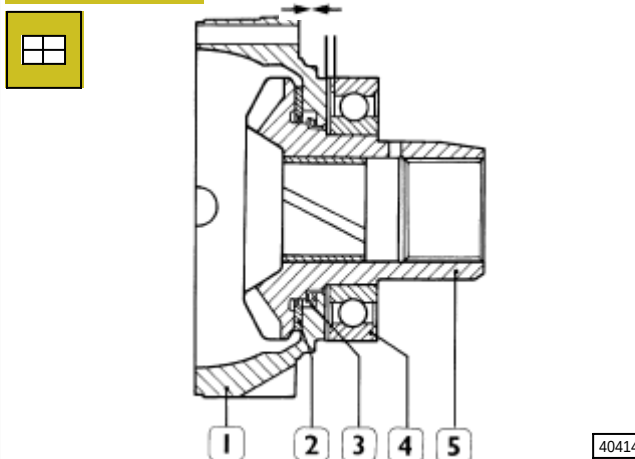

Fit the crown wheel gear unit (5) and parts (2 and 3) in the half-housing (1).

Heat the ball bearings (4) to 100° - 110°C and fit on the crown wheel gear unit (5). Check that the half-housing (3) and the bearing (4) are at a distance of $X = 1.05$ to 1.60 mm.

Figure 100

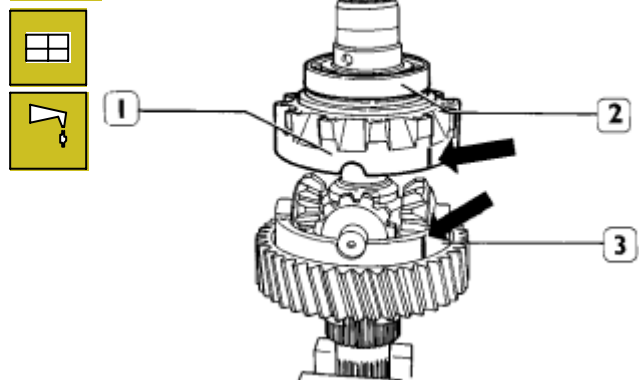


Fill the inner chamber of the half-housing (3) with 100g of lubricating oil.

Fit the half-housing assembly (1), bearing (2) and the crown wheel gear unit on the lower half-housing (3).

NOTE Check alignment of marks drawn during removal.


Figure 101

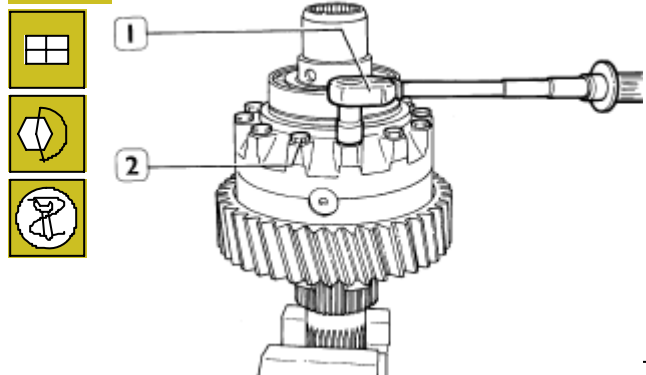

Insert the fixing screws (2) and tighten to a torque of 67 ± 8 Nm with a torque wrench (1).

Differential housing assembly


Figure 102

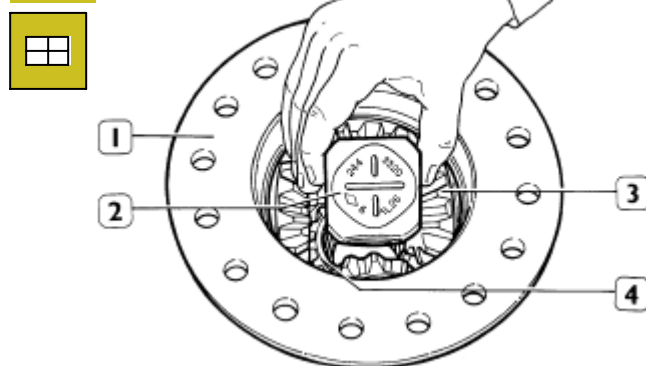

Place the differential housing (1) on a support. Position the crown wheel (4) and shoulder washer in the seat. Fit the 4 side pinions (3), complete with shoulder washer, and insert in the spider (2).

Aquila Trucks Centres

Figure 103

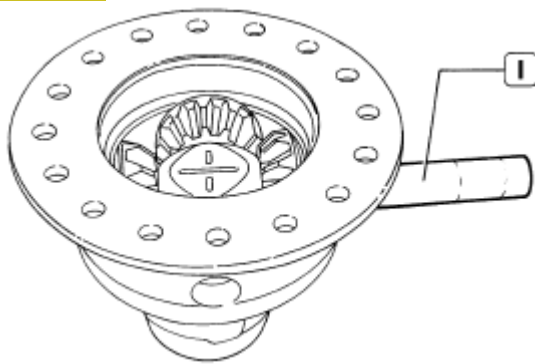


40092

Insert the long pin (1) and the two short pins.

NOTE First insert the long (through) pin. The exact position of the pins is marked on the spider body by a long stripe for the long pin, and by two short stripes for the short pins


Figure 104

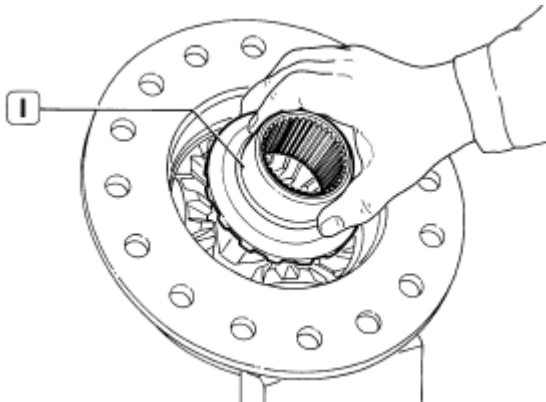

40093

Assemble the crown wheel (1).


Figure 105

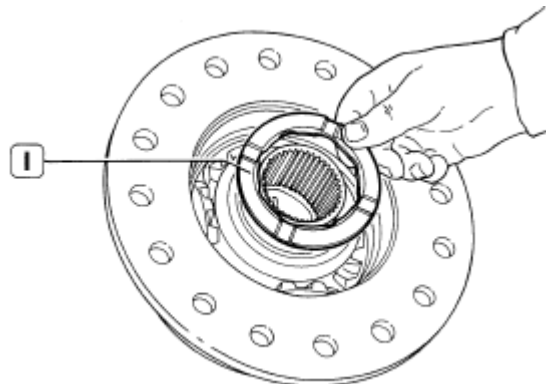

40094

Fit the shoulder washer (1).


Figure 106

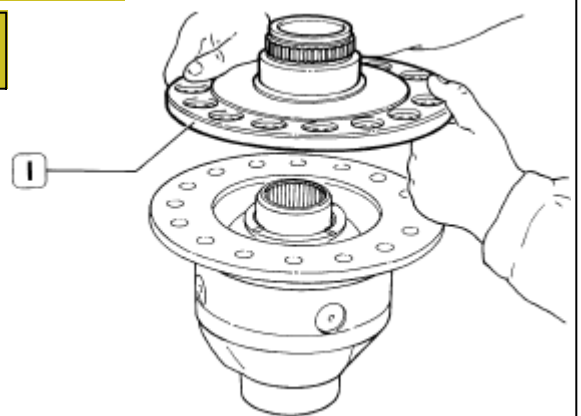

40095

Fit the gear housing cover (1).


Figure 107

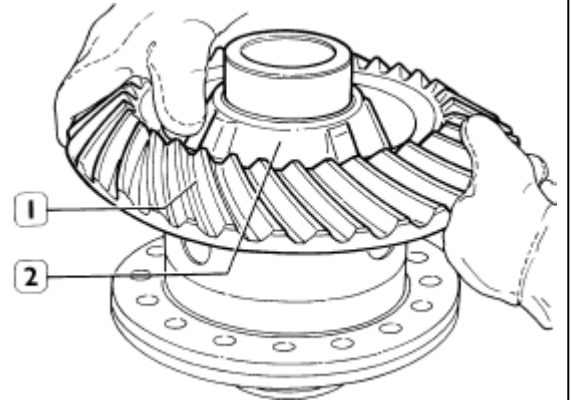

40096

Heat the ring bevel gear (1) to approx. 80°C, fit in position in the gear housing (2) and secure with two screws.

Figure 108

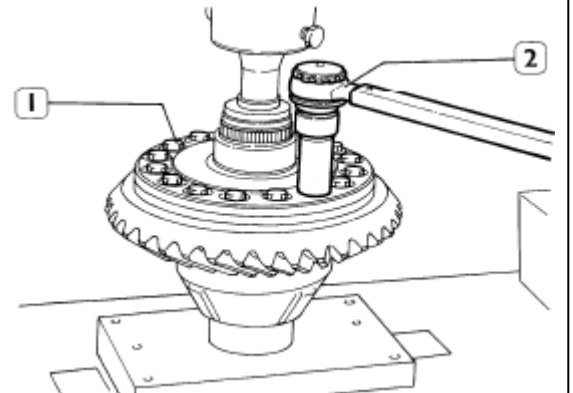


40097

Introduce the remaining screws (1); lock gear unit rotation using a press and tighten the screws (1) to a torque of 300 ± 10 Nm with a torque wrench (2).

Aquila Trucks Centres

Figure 109

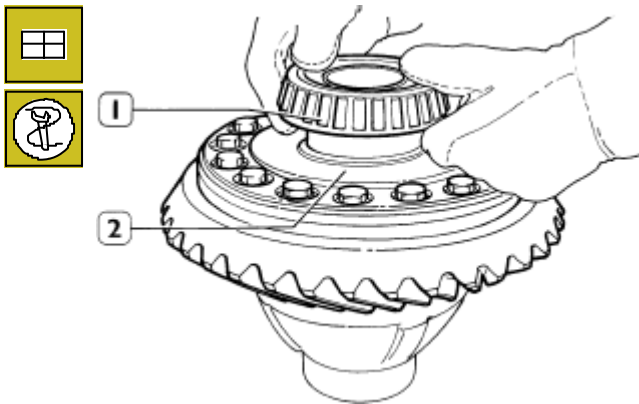


40098

Using an electric heater, heat the support bearing (1) for 15' at a temperature of 100°C and fit on the gear housing (2). Repeat the same operation on the opposite side.

Interaxle differential unit assembly

Figure 110

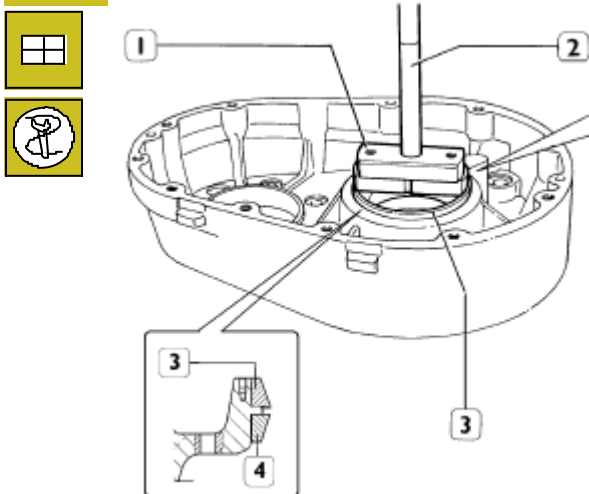


120448

Fully fit the external rings (3) of the intermediate and external bearings in their seats, using punch 99374094 (1) and grip 99370007 (2).

Procedure to follow to determine the thickness of the bevel pinion rolling torque adjusting ring


Figure 111

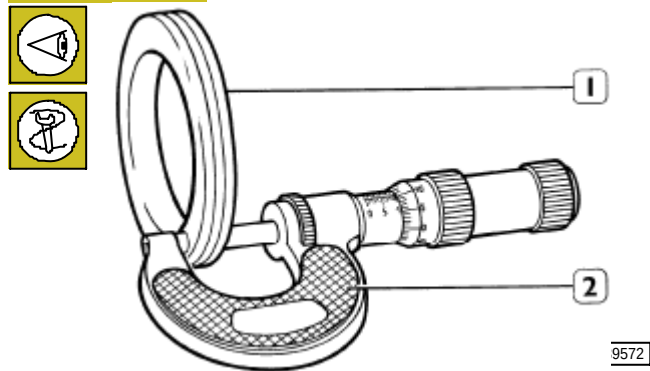

9572

Using a feeler gauge (2) measure and note the thickness of the adjusting ring (1) on disassembly (value A).

Figure 112

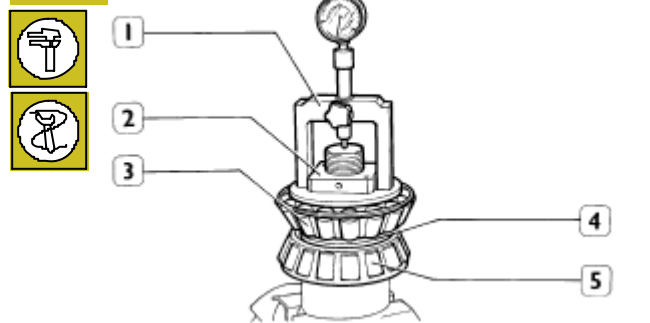

40083

Secure tool 99395027 in a vice and fit the following parts:


- the bearing (5) on the pinion-side;
- the previously measured adjusting ring (4), the spacer and the bearing (3).

Fully tighten the ring nut (2).

Position part (1) of tool 99395027 (6) on the bearing (3), fitted with a zero-set dial gauge on the end of the tool. Then remove:

- the part (1), the ring nut (2), the bearing (3), the adjusting ring (4) and the spacer;

Figure 113

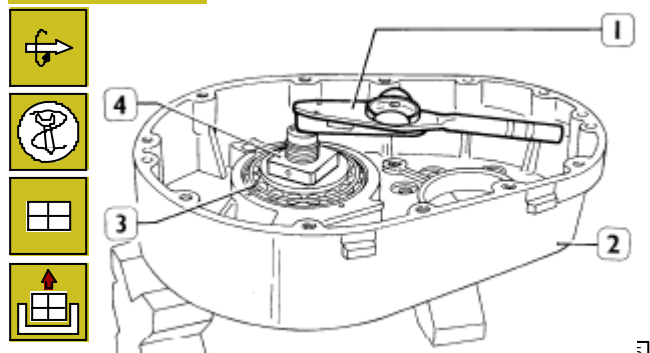


5

- position tool 989395207 and bearing (5, Figure 112) in the half-housing (2) and position the bearing (3, Figure 113);
- tighten the ring nut (4) by hand and check (using a torque wrench (1)) the rolling torque, which should be 1.5 - 3.5 Nm; if necessary, adjust by means of the ring nut.

Aquila Trucks Centres

Figure 114

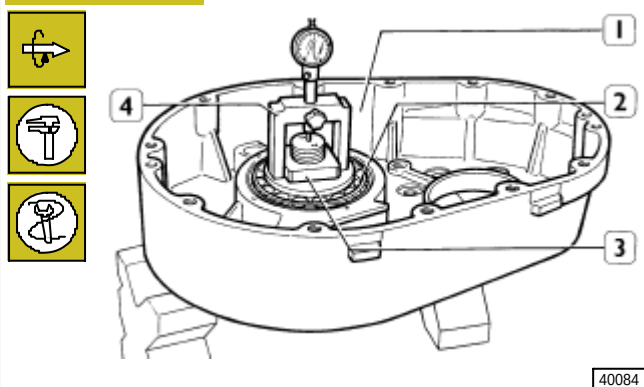

Position the part (4), with the dial gauge zero-set, on the bearing (2) and read the eventual deviation (value B). Disassemble the parts on tool 99395027.

Thickness S on the adjusting ring is provided by the following formula:

$$S = A - (\pm B) + C$$

Where:

A = thickness of the adjusting ring assembled for dial gauge zero-setting;

B = deviation value read;

C = 0.05 mm coefficient which takes into account the expansion of the bearings as a result of the assembly negative allowance on the bevel pinion.

Standard version

First example

A = 10.12 mm

B = + 0.13 mm

C = 0.05 mm

$$S = 10.12 - (+ 0.13) + 0.05 =$$

$$S = 10.12 - 0.13 + 0.05 = 10.04 \text{ mm.}$$

Second example

A = 10.12 mm

B = - 0.13 mm

C = 0.05 mm

$$S = 10.12 - (-0.13) + 0.05 =$$

$$S = 10.12 + 0.13 + 0.05 = 10.30 \text{ mm}$$

Reinforced version

First example

A = 1.85 mm

B = + 0.13 mm

C = 0.05 mm

$$S = 1.85 - (+ 0.13) + 0.05 =$$

$$S = 1.85 - 0.13 + 0.05 = 1.77 \text{ mm.}$$

Second example

A = 1.85 mm


B = - 0.13 mm

C = 0.05 mm

$$S = 1.85 - (- 0.13) + 0.05 =$$


$$S = 1.85 + 0.13 + 0.05 = 2.03 \text{ mm.}$$

Figure 115

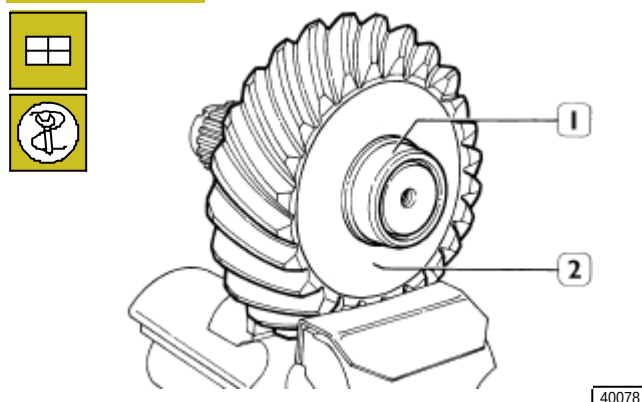

Heat the internal ring (1) of the rear bearing and fit on the bevel pinion (2).

Figure 116

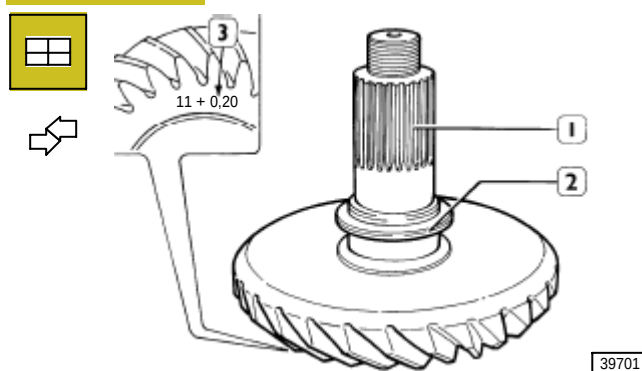

Fit the adjusting ring (2), in order to position the pinion in relation to the bevel gear, on the bevel pinion (1). The thickness of the adjusting ring is determined by the reference value (3) marked on the bevel pinion.

See the table in Figure 117.


Figure 117

Value marked on the bevel pinion	Total thickness of adjusting ring
- 0.5	4.6
- 0.4	4.5
- 0.3	4.4
- 0.2	4.3
- 0.1	4.2
0	4.1
+ 0.1	4.0
+ 0.2	39.9
+ 0.3	3.8
+ 0.4	3.7
+ 0.5	3.6

Summary table to determine the thickness of the bevel pinion position adjusting ring.


Aquila Trucks Centres

Figure 118

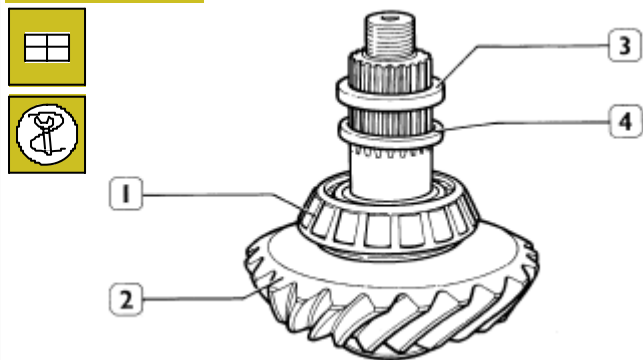


Heat the intermediate bearing (1) with an electric drier to $\sim 100^{\circ}\text{C}$, and position in the bevel pinion (2). Fit adjustment ring (4) and spacer (3) with previously measured thickness.

Figure 119

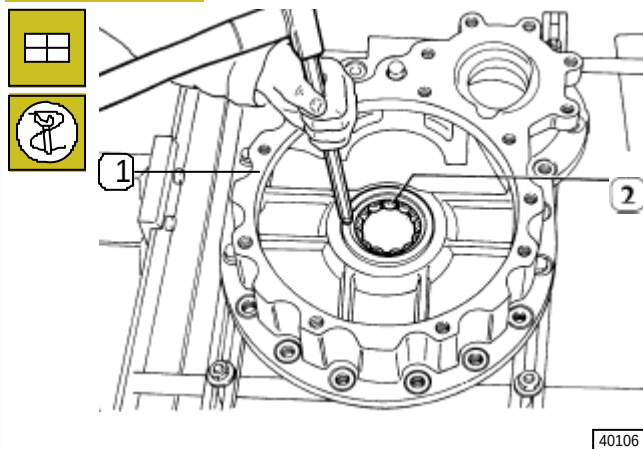


Position the differential housing (1) on the stand. Using a punch, fit the roller bearing (2).

Figure 120

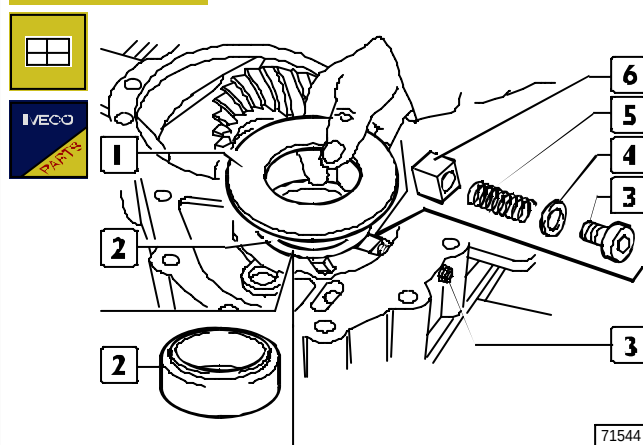


Fit the eccentric (2). Insert the piston (6) and the spring (5) in the differential housing. Tighten the plug (3) with a new washer (4) and tighten to the correct torque. Fit the guard disk (1).

Figure 121

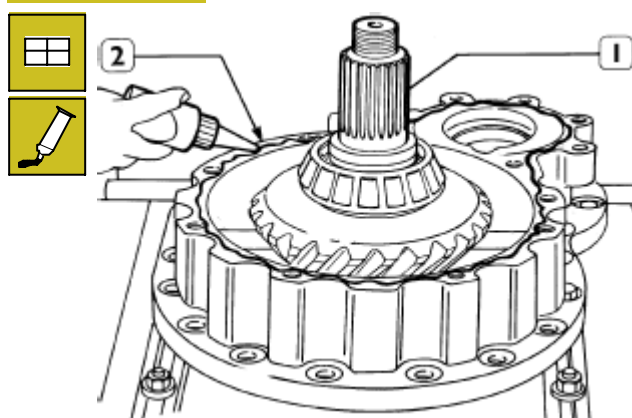


Fit the bevel pinion (1) on the roller bearing (2, Figure 119). Smear LOCTITE 573 (2) on the contact surface.

Figure 122

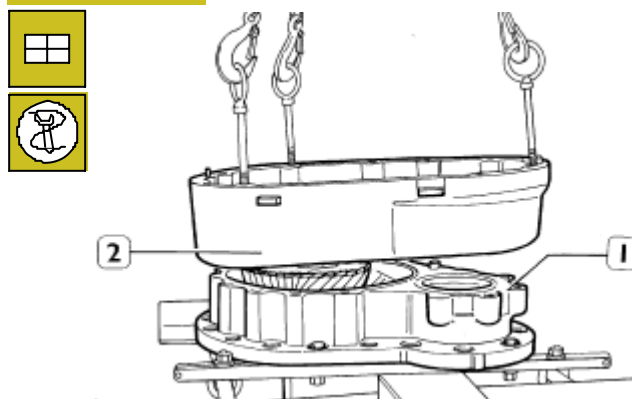

Raise and fit the half-housing (2) on the differential housing (1).


Figure 123

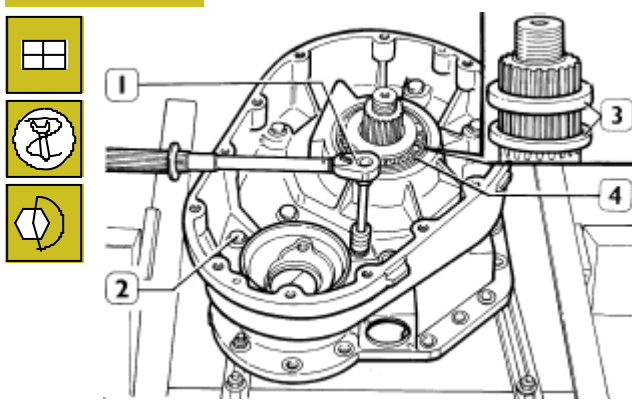

Using the torque wrench (1), tighten the screws (2) to a torque of $260 \pm 25 \text{ Nm}$. Fit the spacer ring and the adjusting ring (3) on the bevel pinion. Heat bearing (4) using hot air blower at $\sim 100^{\circ}\text{C}$ and secure it on taper pinion.


Aquila Trucks Centres

Figure 124

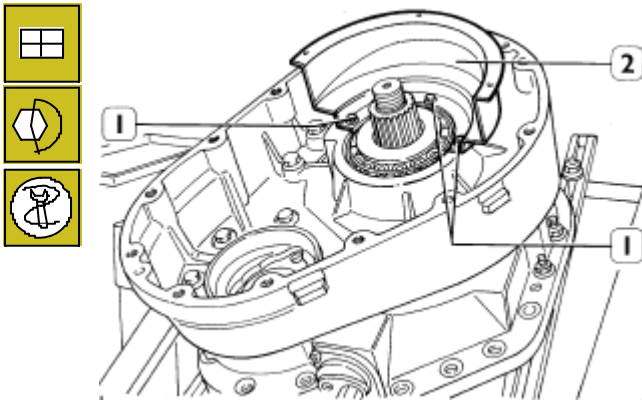


Assemble the oil feed (2) and tighten the screws (1) to a torque of 16 ± 2 Nm.

Figure 125

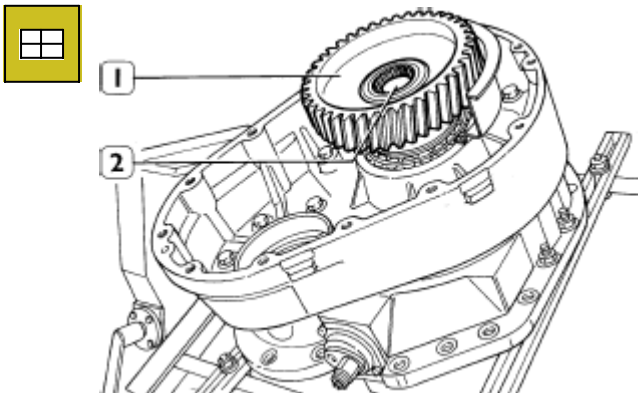


Heat gear (1) at a temperature of $\sim 150^{\circ}\text{C}$ and secure it on taper pinion (2).

Figure 126

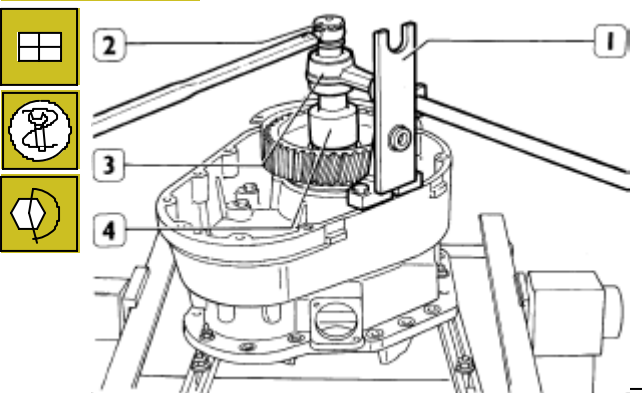

Position tool 99363310 (1) and, using Allen wrench 99355038 (4), multiplier 99389816 (3) and torque wrench (2) tighten the driven gear nut to a torque of: 1200 to 1300 Nm


Figure 127

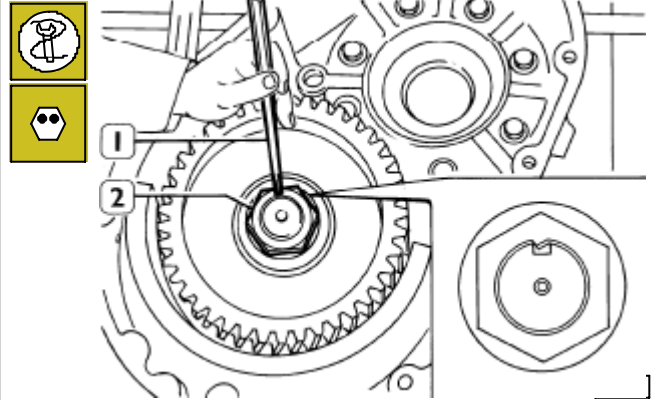

Using a punch (1), secure the driven gear nut (2).


NOTE If the nut (2) used is of the Numeyer type, it does not need to be secured.

Figure 128

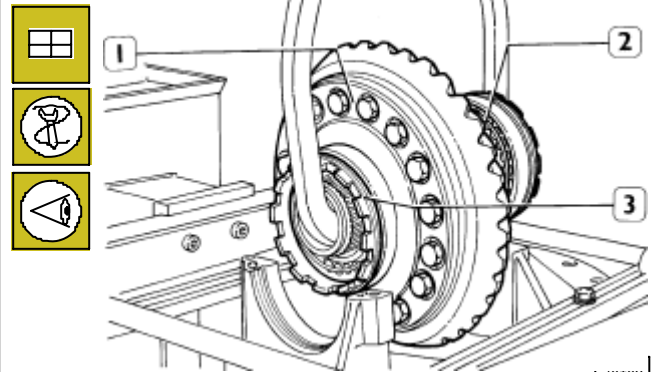

Using the hook, raise the differential housing (1), bearings (2) and adjusting ring nut (3). Position on the differential carrier. Carefully position the adjusting ring nuts on the threads of the differential carrier.

Figure 129

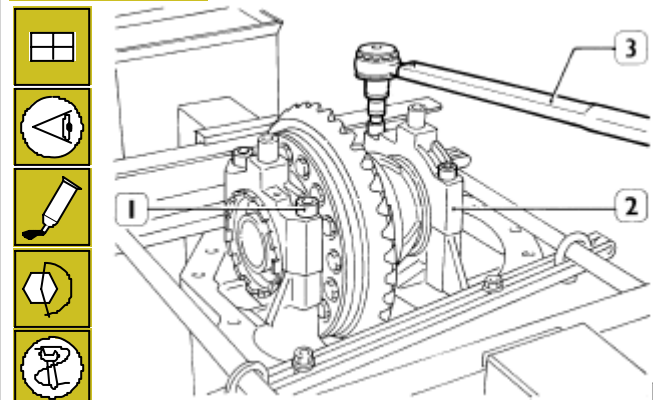


Fit the caps (2) and provisionally tighten the screws (1). Check that the adjusting ring nuts screw on easily. Remove the screws, one at a time, apply LOCTITE AVX and tighten with a torque wrench (3) to a value of 270 ± 25 Nm.

Aquila Trucks Centres

Adjusting the rolling torque on the differential housing bearings

Figure 130

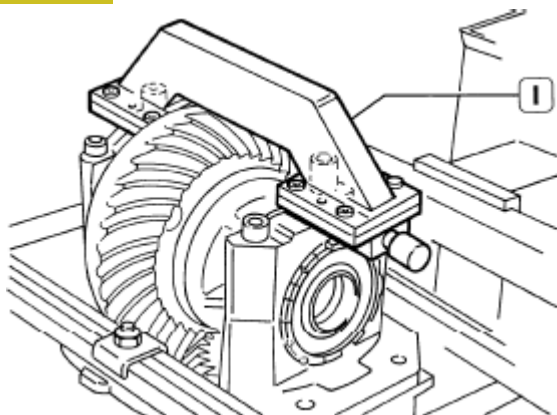


39585

Position tool 99370133 (1) as shown in the drawing to avoid excessive spread on the caps during adjustment operations.

NOTE The total rolling torque reading is carried out when the clearance between the teeth on the bevel gear pair is as near to the pre-stabilised value as possible. However, the total rolling torque value varies according to the reduction bevel gear pair ratio (see table in Figure 132).

Figure 131

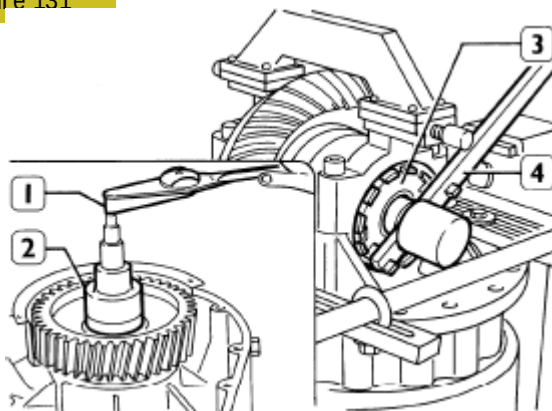

40417

Using torque wrench 99389819 (1) and the appropriate Allen wrench (2), read the pre-stabilised torque value, adjusting the bearing adjustment ring nuts (3) with wrench 99354001 (2).

Figure 132

No. of teeth	Ratio	Total rolling torque (Nm)
17/35	2.059	$3 \div 5.9$
21/40	1.905	$3.1 \div 6.1$
19/33	1.737	$3.3 \div 6.4$
21/34	1.619	$3.4 \div 6.6$
23/36	1.565	$3.4 \div 6.7$
24/35	1.458	$3.6 \div 6.9$
27/37	1.370	$3.7 \div 7.1$
28/37	1.321	$3.8 \div 7.3$
29/37	1.276	$3.0 \div 5.0$
27/32	1.185	$4 \div 7.7$

To adjust the endfloat between the bevel gear pair pinion -ring bevel gear teeth, proceed as follows:


- Read the clearance value between the teeth, which varies according to the bevel gear pair ratio, in the table in Figure 135;

Figure 133

No. of teeth	Ratio	Clearance between teeth
17/35	2.059	$0.2 \div 0.33$
21/40	1.905	$0.2 \div 0.33$
19/33	1.737	$0.2 \div 0.33$
21/34	1.619	$0.2 \div 0.33$
23/36	1.565	$0.2 \div 0.33$
24/35	1.458	$0.2 \div 0.33$
27/37	1.370	$0.2 \div 0.33$
28/37	1.321	$0.2 \div 0.33$
29/37	1.276	$0.2 \div 0.33$
27/32	1.185	$0.2 \div 0.33$

Aquila Trucks Centres

Figure 134

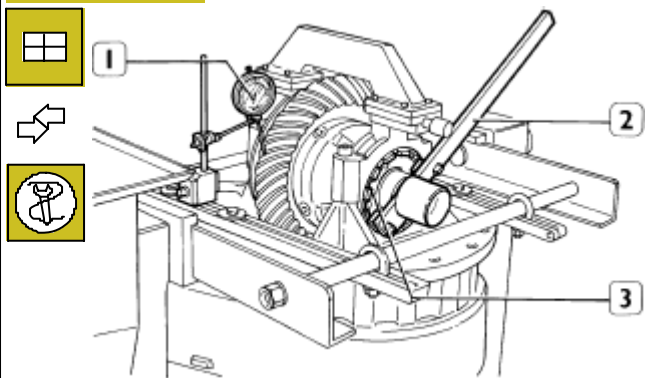


40114A

- Position a magnetic stand dial gauge (1) as shown in Figure 136.
- Prevent the bevel pinion from rotating whilst alternately rotating the bevel gear and, using a gauge (1), read the clearance between the teeth on the two gear units. If not, using wrench 99354001 (2), adjust the adjusting ring nut (3).

In order to prevent the previously measured rolling torque from varying, during adjustments of the coupling clearance between the pinion and the bevel gear teething, tighten the ring nut with wrench 99354001 by the same amount as the ring nut on the opposite is loosened.

On completion of operations, check that the two adjusting ring nuts are suitably positioned to allow the safety plate to be fitted.


Figure 135

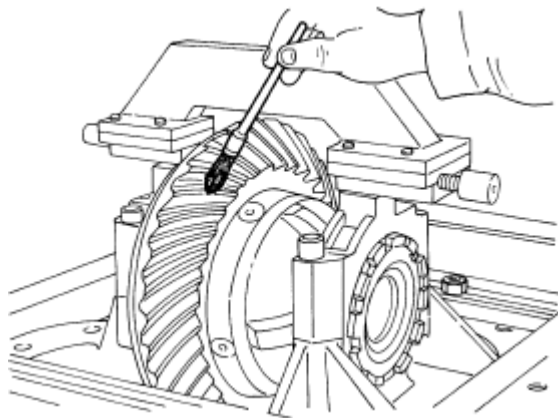

40159

Using a brush, apply a light covering of Prussian blue on the teeth of the bevel gear.
Rotate the bevel gear in both directions.


Figure 136

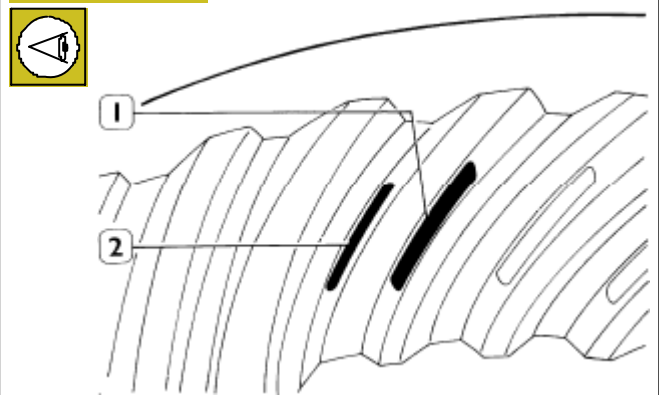

40160

The contact marks should be on both the leading face (1) and the pushing face (2), more or less in the centre between the teeth. When working without a load, both contact zones should be slightly out of position in relation to the external diameter of the bevel gear.


Figure 137

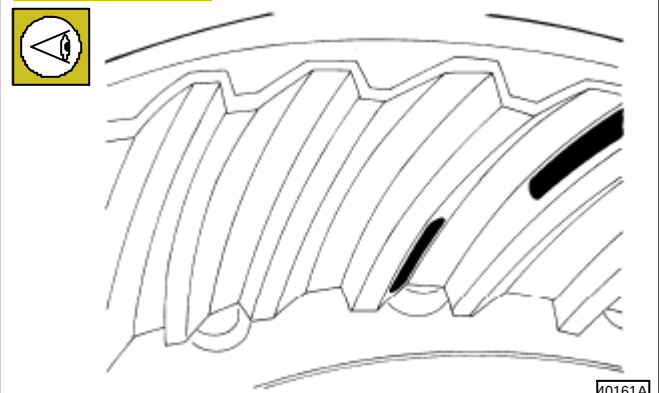

40161A

If the mark on the leading face (towards the external diameter) and on the pushing face (towards the internal diameter) is out of position, the pinion is located too close to the bevel gear.
- Solution: increase the thickness of the adjusting ring (2, Figure 116).

Figure 138

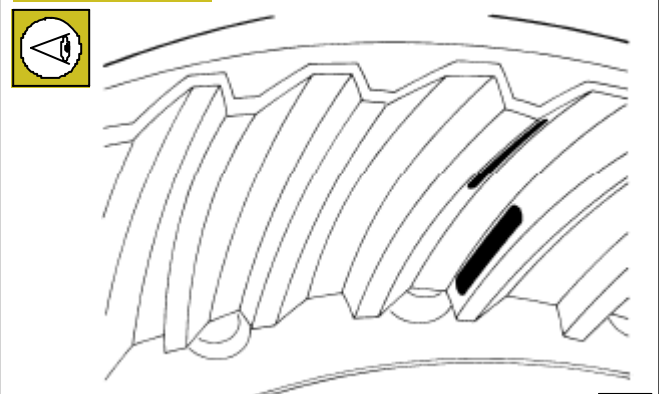


40161B

If the mark on the leading face is positioned towards the internal diameter, and on the pushing face it is located towards the external diameter of the bevel gear, the pinion is located too far away from the bevel gear axis.
- Solution: decrease the thickness of the adjusting ring (2, Figure 116).

Aquila Trucks Centres


Figure 139

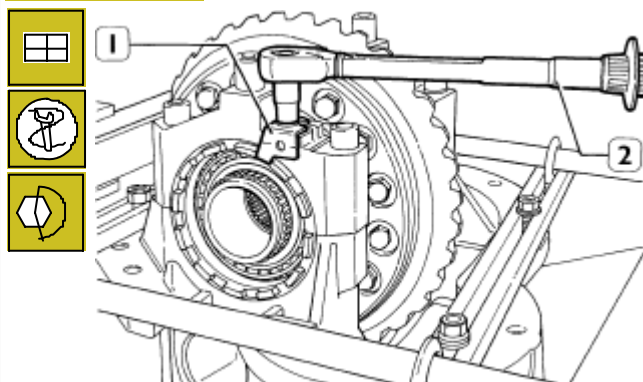

40110

Assemble the safety plate (1); tighten the screw with a torque wrench (2) to a torque of 51 ± 5 Nm.


Figure 140

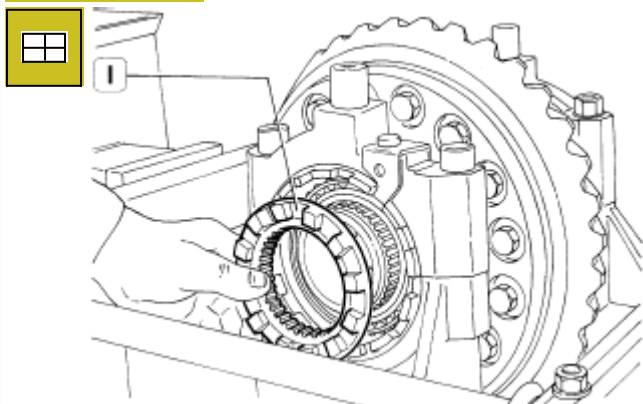

40111

Fit the differential locking sleeve (1).


Figure 141

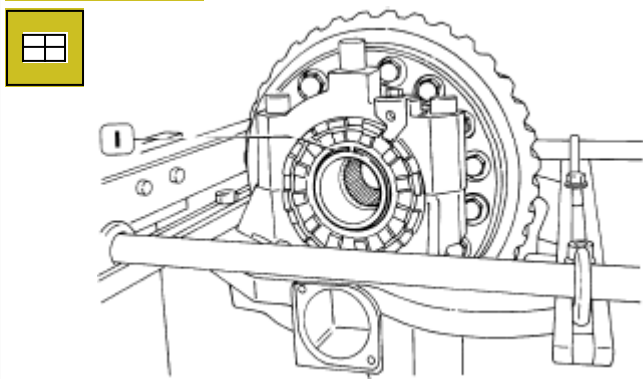

40078

Secure in position with the safety ring (1).


Figure 142

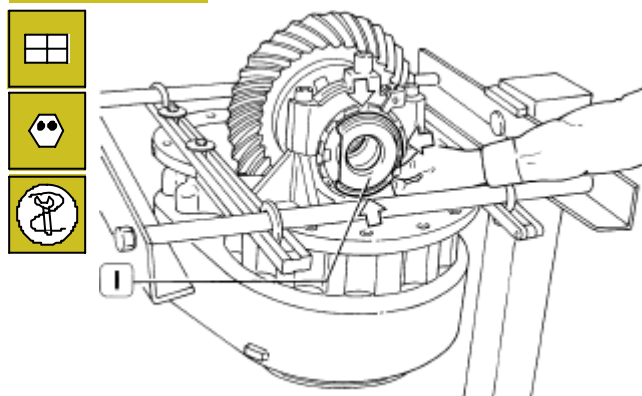

40115A

Fit the oil baffle (1) with the straight side in the vertical position, as indicated in Figure 146. Secure in the three points indicated by the arrows to prevent counter-rotation.

Figure 143

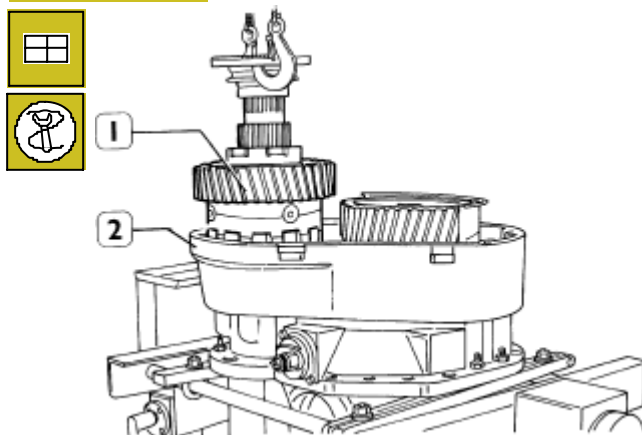


40124

Fit the differential-flow divider unit (1) in the half-housing (2).

Aquila Trucks Centres


Figure 144

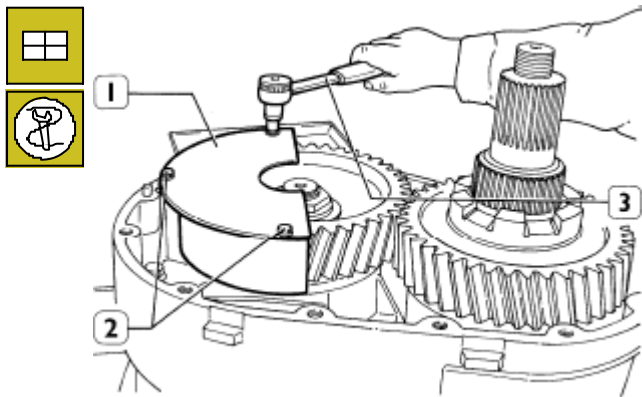

40125

Assemble the upper part (1) of the oil feed and tighten the screws (2) with a wrench (3).


Figure 145

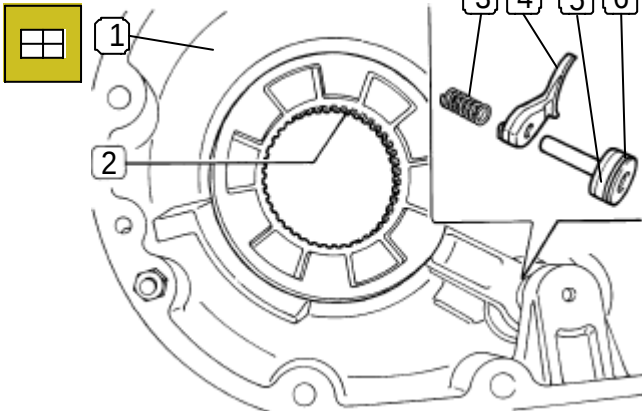

40126

In the lower part of the cover (1), fit the flow divider differential engagement sleeve (2) and the control unit comprising: the spring (3), fork (4) and the piston (5) with a new seal ring (6).


Figure 146

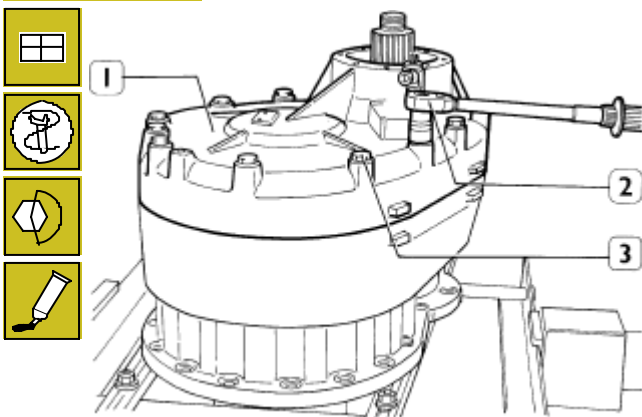

40127

Smear LOCTITE AVX on the contact surface. Fit the cover (1) and tighten the screws (3) to a torque of 182.5 Nm using the torque wrench (2).


Figure 147

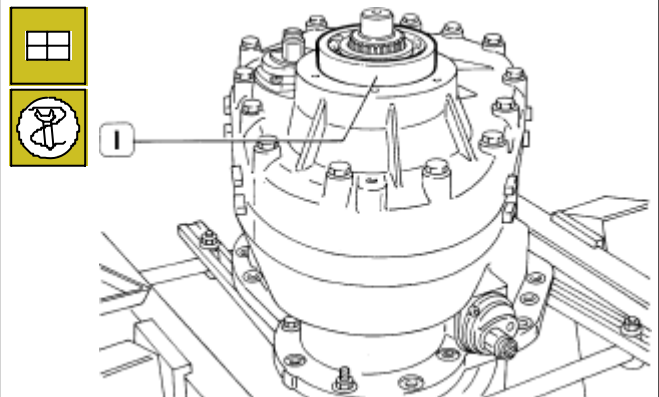

40128

Using a punch, fit the ball bearing (1) on the input shaft.


Figure 148

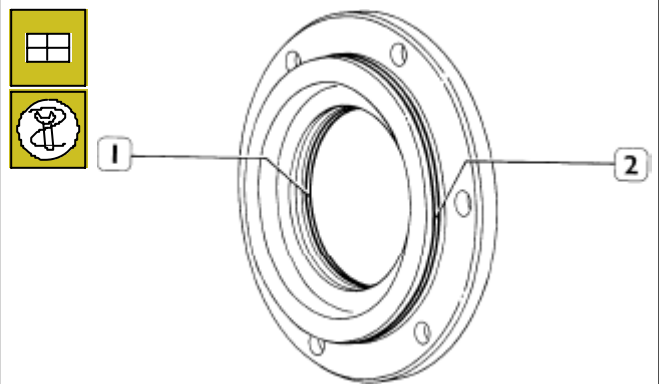

40129

Using key 99374233, fit the seal ring (1) in the cover; replace the seal ring (2).

Figure 149

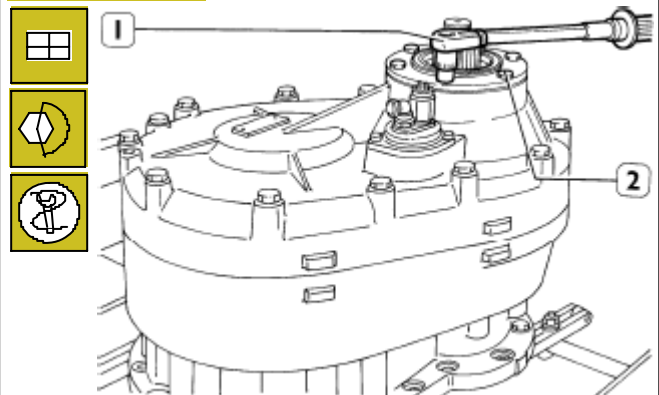


Fit the cover and tighten the screws (2) to a torque of 62 ± 6 Nm with a torque wrench (1).

Aquila Trucks Centres

526064 DRIVE SHAFT Disassembly


Figure 150

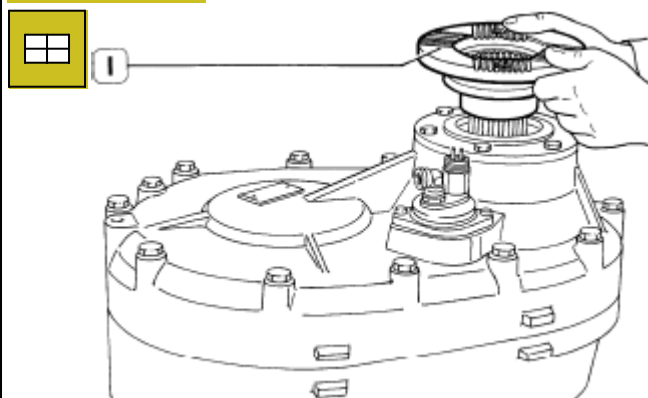

40132

Fit the flange (1) on the input shaft.


Figure 151

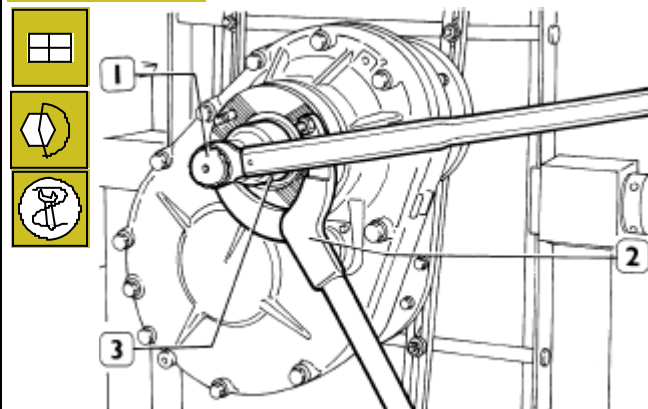

40133

Rotate the unit and, using a torque wrench (1), reaction lever (2) and Allen wrench 99355081 (3), tighten the nut to a torque of 800 to 850 Nm.


Figure 152

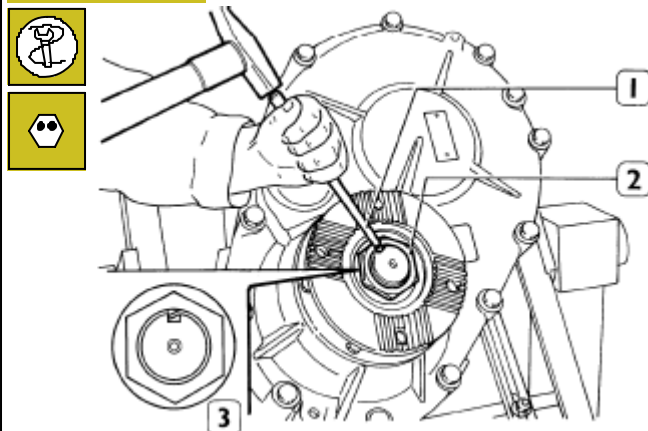

40134

Using a punch (1), secure the nut (2) as shown in the detail (3).


Figure 153

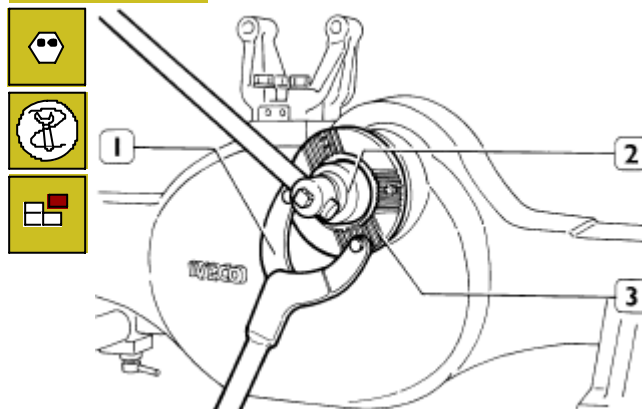

40145

Remove the flange (3) nut safety notch. Position the reaction lever (1) and unscrew the nut (2) using Allen wrench 99355081. Extract the flange (3).


Figure 154

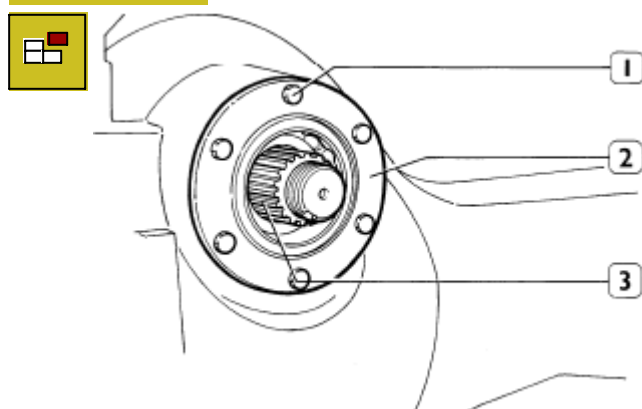

40147

Unscrew the screws (1), remove the cover (2) and extract the drive shaft (3) and bearing.

Figure 155

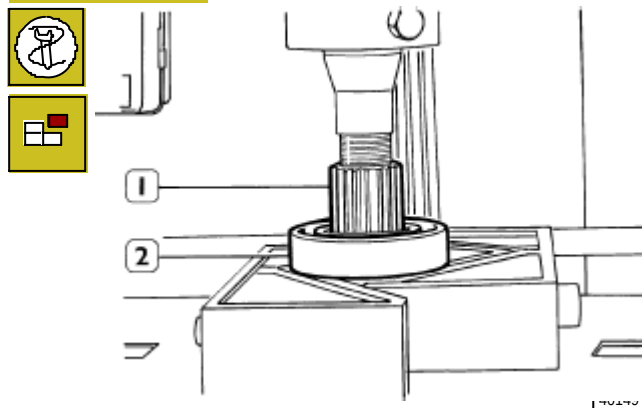

40149

Using a press, extract the ball bearing (1) from the drive shaft (2).


Aquila Trucks Centres

Checking parts

Clean and check all drive shaft parts, replacing any worn or damaged components. Always replace the seal rings.

Assembly


Figure 156

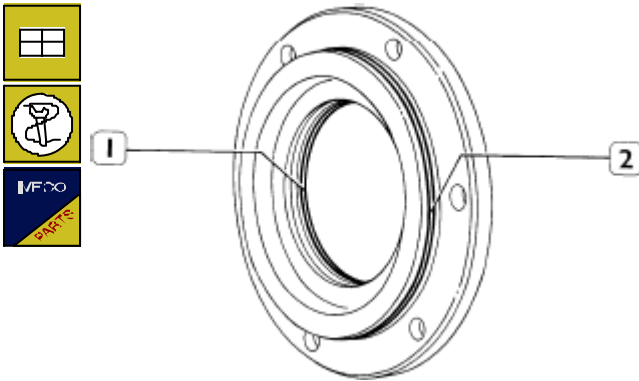

40129

Using key 99374013, fit the internal seal ring (1) in the cover and replace the external seal ring (2).

Figure 157

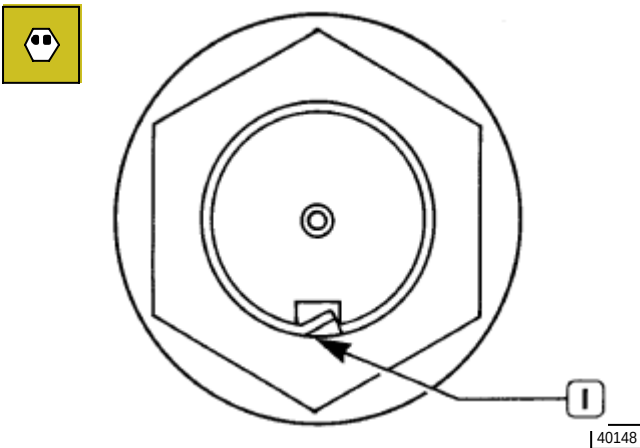

Refit the drive shaft by reversing the order of the disassembly operations, and tighten the screws (1, Figure 157) to the correct torque.

Tighten the nut (1) to a torque of 650 to 750 Nm.

After having tightened the nut (1), secure the collar.

Aquila Trucks Centres

Aquila Trucks Centres

Intermediate axle 452146/2D (R 9174)

	Page
DESCRIPTION	103
MAIN DATA	104
TIGHTENING TORQUES	105
TOOLS	107
INTERMEDIATE AXLE ASSEMBLY REPAIRS ...	113
- Disassembly	113
REPAIRING THE INTERAXLE DIFFERENTIAL ...	113
- Flow divider differential unit disassembly	113
- Removing the bevel pinion from the support .	116
- Gear housing disassembly	116
- Interaxle differential disassembly	117
CHECKING THE INTERAXLE DIFFERENTIAL PARTS	121
- Interaxle differential assembly	121
- Differential housing assembly	123
- Assembling the bevel pinion support	124
- Procedure to follow to determine the thickness of the bevel pinion rolling torque adjusting ring	124
- Differential housing assembly	126
- Differential housing bearings rolling torque adjustment	128

Aquila Trucks Centres

Aquila Trucks Centres

DESCRIPTION

The intermediate axle is of the load-bearing, double reduction type.

The first reduction is provided by the bevel pinion/ring bevel gear, whereas the second reduction is by means of an epicycoid unit on the wheel hubs.

The differential housing (with ring bevel gear) is supported by taper roller bearings, which can be adjusted by means of two threaded ring nuts.


The bevel pinion is supported by two taper roller bearings, which can be adjusted by means of adjustment rings.

The intermediate axle is fitted with an interaxle unit that distributes the torque between the two axles.

The axle shafts start from the differential and transmit drive to the epicycoid reduction units located in the wheel hubs. The axle is also provided with a pneumatic device for differential locking and another device for flow divider locking.

The drum brake is of the Duo/Duplex type.

Figure 1









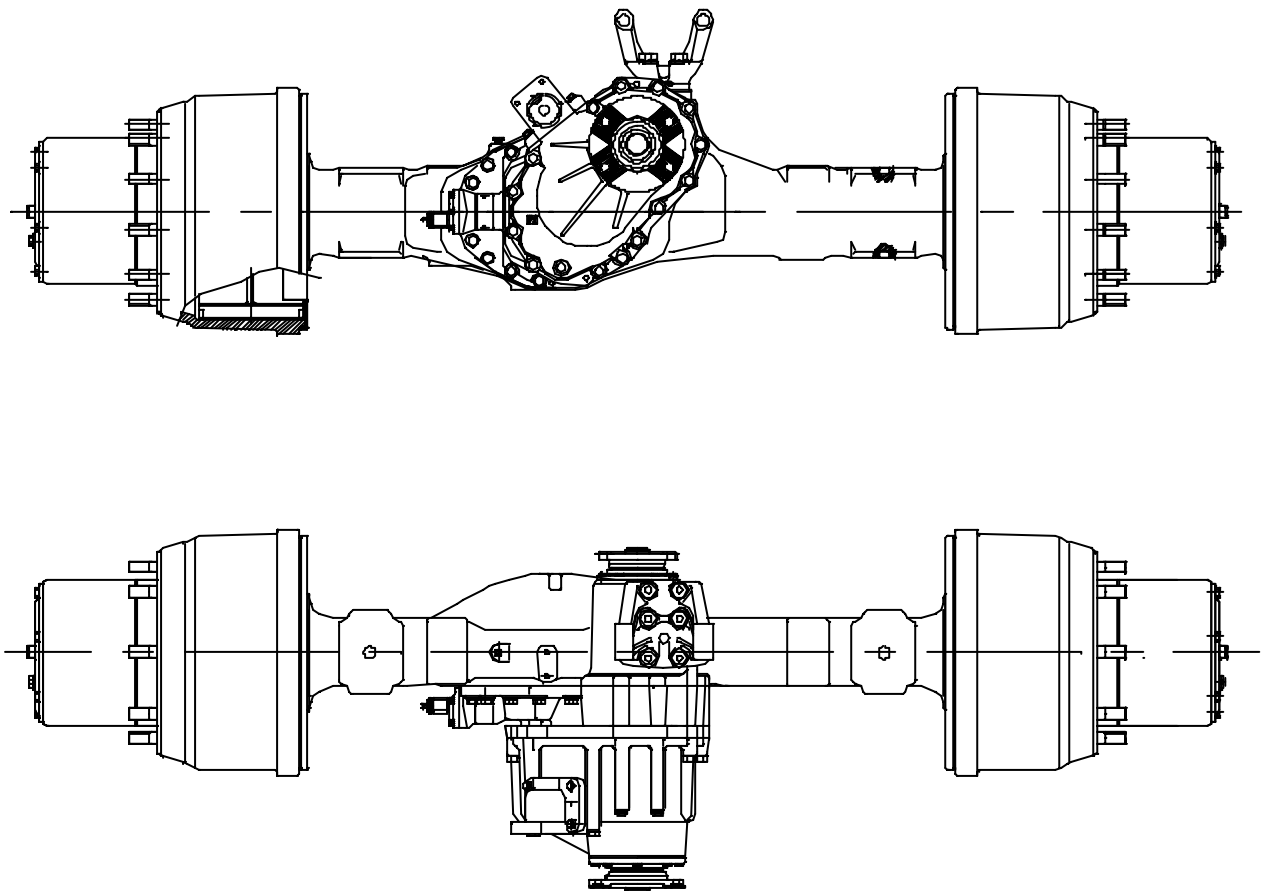


71545

LONGITUDINAL PICTORIAL SECTION OF DIFFERENTIAL REDUCTION GEAR UNIT


Aquila Trucks Centres

         MAIN DATA

	Type of axle: Load-bearing, double reduction with pneumatically controlled differential locking and flow divider unit	452146/2D (R 9174)
	Bevel pinion bearings	2 taper rollers
	Bevel gear reduction unit ratio	34/37 (1.088) - 27/32 (1.185) - 28/37 (1.321) - 29/37 (1.276) - 27/37 (1.370) - 24/35 (1.458) - 23/36 (1.565) - 21/34 (1.619) - 19/33 (1.737) - 21/40 (1.905) - 17/35 (2.059) - 15/34 (2.267) - 17/36 (2.118)
	Epicyclic reduction unit/wheels ratio	3.2
	Bevel pinion bearing rolling torque without seal Nm	6 ÷ 8
	Bevel pinion bearing rolling torque adjustment	with adjustment rings
	Thickness of bevel pinion bearing rolling torque adjustment ring mm	10 - 10.02 - 10.04 - 10.06 - 10.08 - 10.10 - 10.12 - 10.14 - 10.16 - 10.18 - 10.20 - 10.22 - 10.24 - 10.26 - 10.28 - 10.30 - 10.32 - 10.34 - 10.36 - 10.38 - 10.40 - 10.42 - 10.44 - 10.46 - 10.48 - 10.50 - 10.52 - 10.54 - 10.56 - 10.58 - 10.60
	Thickness of bevel pinion/ring bevel gear position adjustment rings mm	0.2 - 0.3 - 0.5 - 1
	Clearance between pinion and ring bevel gear mm	0.15 ÷ 0.35
	Adjustment of clearance between pinion and ring bevel gear	with ring nuts
	WHEEL HUBS	
	Wheel hub bearings	2 taper rollers
	Wheel hub bearings rolling torque: new bearings with surface protection Nm	6 ÷ 7 Nm + (12 ÷ 16 Nm)
	Wheel hub bearings rolling torque: run in bearings and new, lubricated seals Nm	6 ÷ 7 Nm + (5 ÷ 7 Nm)
	Adjustment of clearance between pinion and ring bevel gear Nm	3 Nm + (2.5 ÷ 4.5 Nm)
	Drive shaft end float mm	0.5 ÷ 1
	Axle oil Quantity Litres kg	TUTELA W140/MDA 13
	G.R.W. maximum load kg	11000

Aquila Trucks Centres

Figure 2

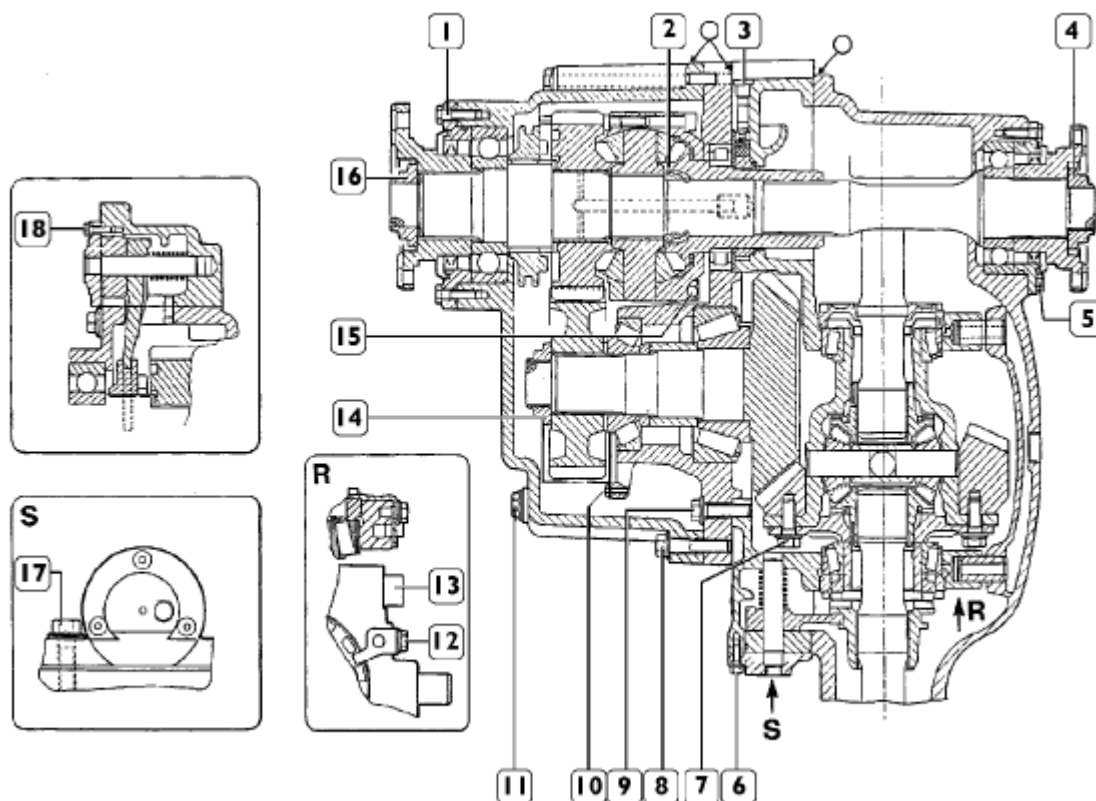

115269

TIGHTENING TORQUES


DESCRIPTION	TORQUE	
	Nm	kgm
1 Screw for input shaft cover H	33 ± 3	3.3 ± 0.3
2 Ring nut for flow divider spider	220 ± 20	22 ± 2
3 Oil pump cap	21.5 ± 1.5	2.2 ± 0.2
4 Nut for drive shaft flange	700 ± 50	70 ± 5
5 Screw for drive shaft cover H	33 ± 3	3.3 ± 0.3
6 Screw for differential lock cover	19 ± 2	1.9 ± 0.2
7 Self-locking screw fixing ring bevel gear	170 ± 10	17 ± 1
8 Screw fixing flow divider half-housing H	110 ± 10	11 ± 1
9 Screw fixing bevel pinion support	170 ± 10	17 ± 1
10 Screw fixing oil manifold	9 ± 1	0.9 ± 0.1
11 Oil plug	80 ± 8	8 ± 0.8
12 Screw for safety plate	51 ± 4	5.1 ± 0.4
13 Screw fixing gear housing caps H	180 ± 10	18 ± 1
14 Nut locking gear on bevel pinion shaft	700 ± 50	70 ± 5
15 Screw fixing bearing retaining plate	120 ± 10	12 ± 10
16 Nut for input shaft flange	700 ± 50	70 ± 5
17 Screw fixing housing	170 ± 10	17 ± 1
18 Screw for flow divider locking control cover H	19 ± 2	1.9 ± 0.2

H apply LOCTITE AVX

O apply LOCTITE 573

Aquila Trucks Centres

Figure 3

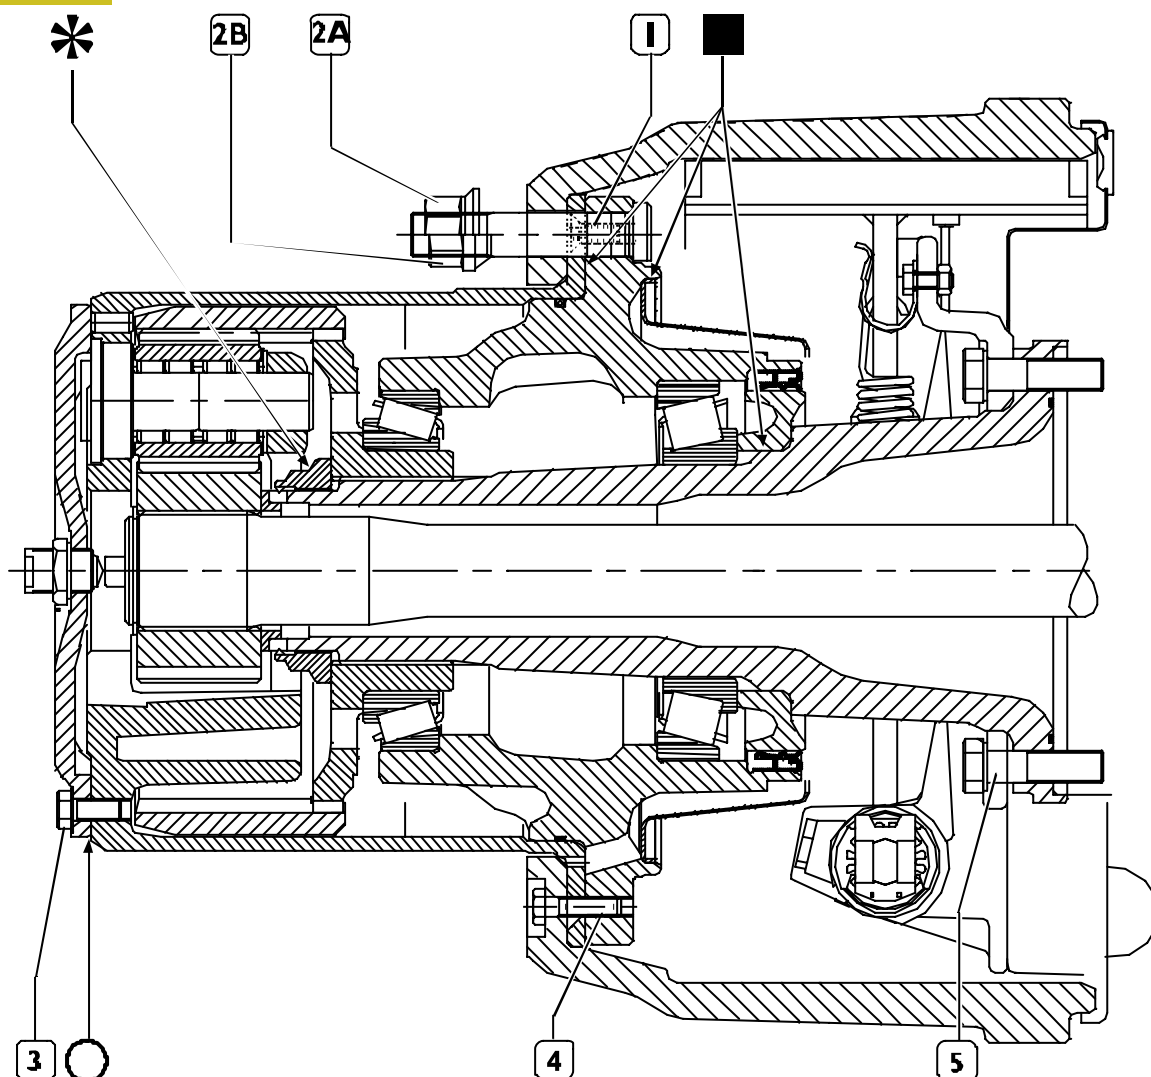

98970

TIGHTENING TORQUES

DESCRIPTION	TORQUE	
	Nm	kgm
1 Countersunk screw fixing drum	25 ± 3	2.5 ± 0.3
2A Nut fixing wheel	615 ± 35	61.5 ± 3.5
2B Nut fixing wheel	415 ± 35	41.5 ± 3.5
3 Screw fixing cover to crown wheel support h	50 ± 5	5 ± 0.5
4 Screw	50 ± 5	5 ± 0.5
5 Screw fixing load bearing sleeve	295 ± 30	29.5 ± 3

d apply LOCTITE 5970 on the contact surface






h apply LOCTITE 573 on thread

H apply LOCTITE 573 on mating surface



: before mounting, slightly smear MOLYCOTE on nut rest surface

Aquila Trucks Centres





TOOLS

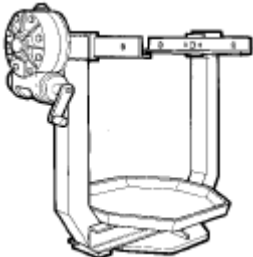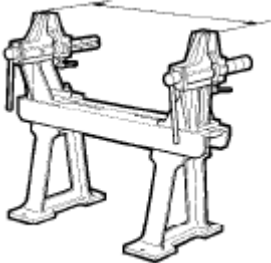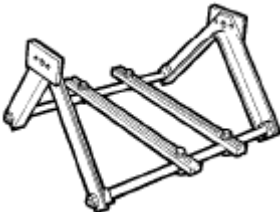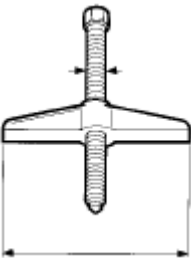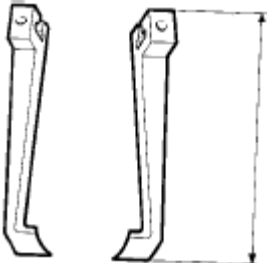TOOL NO.	DESCRIPTION	
99305121		Hot air device
99322205		Rotating stand for assembly overhaul
99322215		Stand for axles overhaul
99322225		Support for assemblies (to be fitted on stand 99322205)
99341003		Single-acting bridge
99341012		Pair of brackets






Aquila Trucks Centres

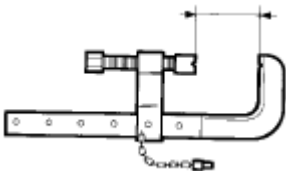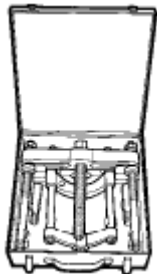TOOL NO.	DESCRIPTION	
99341015		Press
99345053		Reaction block for extractors
99348001		Extractor with locking device
99354207		Wrench (94.5 mm) for wheel hub bearings adjusting nut
99355025		Wrench for differential gear housing bearing adjustment ring nuts
99355086		Wrench for flow divider main shaft ring nut






Aquila Trucks Centres

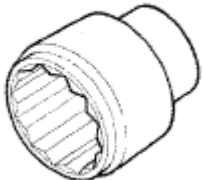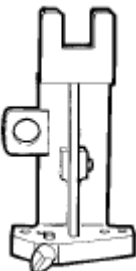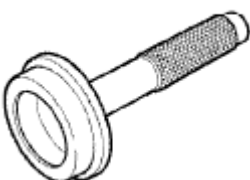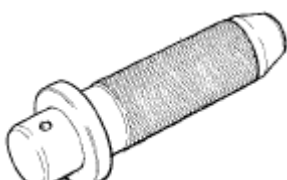TOOL NO.	DESCRIPTION	
99355131		Wrench (55 mm) for drive infeed flange nut
99363310		Tool for retaining spur gear on flow divider bevel pinion
99370005		Grip for interchangeable punches
99370006		Interchangeable grip for punches
99370007		Interchangeable grip for punches
99370121		Punch for fitting crown wheel bushings (use with 99370006)




Aquila Trucks Centres

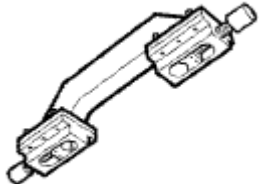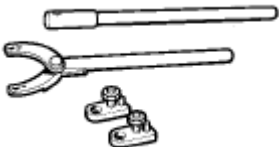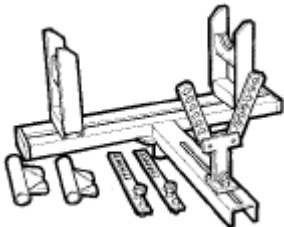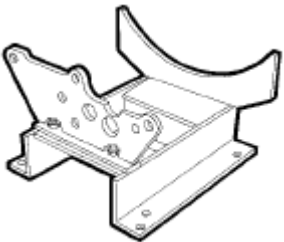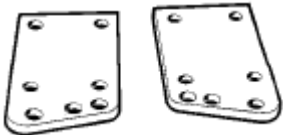TOOL NO.	DESCRIPTION	
99370133		Tool for locking differential caps spread
99370317		Reaction lever with extension for flange retaining
99370509		Hook to extract differential gear half-housing
99370617		Universal mounting to support axles during removal and refitting
99370630		Mounting for removal and refitting of flow divider
99371022		Pair of differential support brackets for use during overhaul (use with 99322205-99322225)

Aquila Trucks Centres

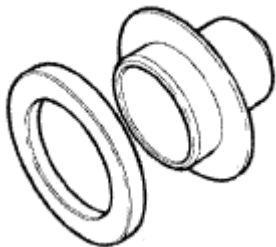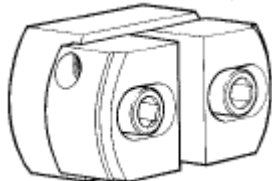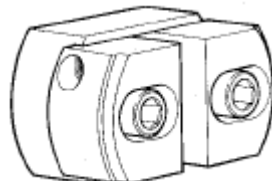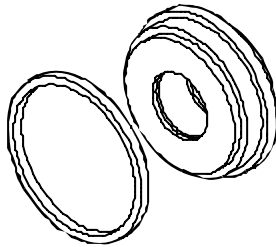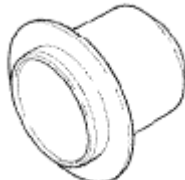TOOL NO.	DESCRIPTION	
99374013		Key to fit differential bevel pinion seal (use with 99370006)
99374093		Punch to fit external races of bearings (use with 99370007)
99374094		Punch to fit external races of bearings (134 - 215) (use with 99370007)
99374161		Key for assembly of wheel hub internal seals
99374233		Key to fit flow divider drive shaft seal
99374451		Tool for axle shaft disassembly-assembly

Aquila Trucks Centres

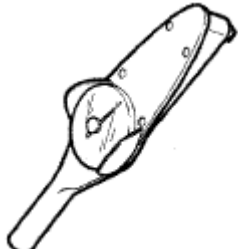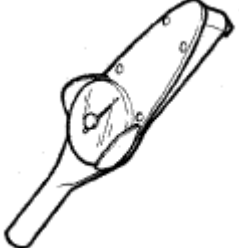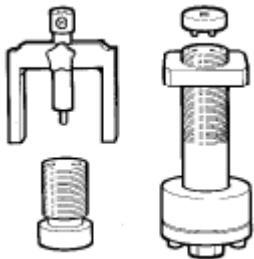TOOL NO.	DESCRIPTION
99389816	 x 4 torque multiplier with 3/4 " infeed and 1" square connection (max. 2745 Nm)
99389819	 Torque wrench from 0 to 10 Nm with 1/4" square connection
99389821	 Torque wrench from 0 to 70 Nm with 3/8" square connection
99395026	 Tool to check rolling torque of hubs (use with torque wrench)
99395027	 Tool to determine thickness of differential bevel pinion adjustment shims (use with 99395603)
99395603	 Dial gauge (0 - 5 mm)

Aquila Trucks Centres

526110 INTERMEDIATE AXLE ASSEMBLY REPAIRS**Disassembly**


NOTE The drive shafts - brake drums and jaws - air breather - interaxle differential - wheel hubs and epicyclic reduction units removal-refitting operations, can all be carried out with the unit fitted on the vehicle.

Before positioning the axle assembly on the overhaul stand, drain off the oil by unscrewing the lower plug on the axle housing.

NOTE For repairs on the wheel hubs, epicyclic reduction units, drive shaft and flow divider differential removal-refitting operations, follow the instructions for the 451391/2D - 452191/2D intermediate axles.


526110 REPAIRING THE INTERAXLE-DIFFERENTIAL**Flow divider differential unit disassembly**

Figure 4

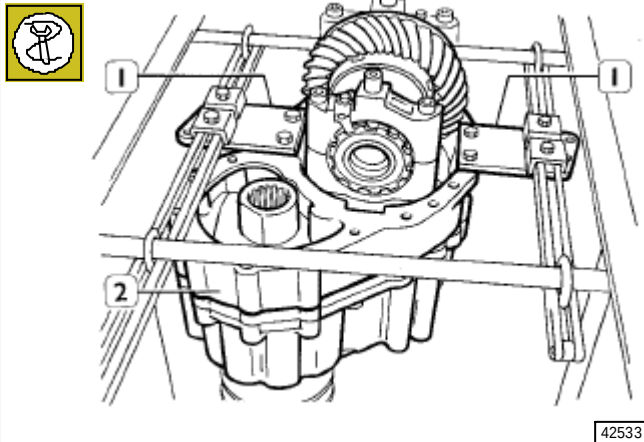


Position the interaxle differential unit (2) on stand 99322205, with brackets 99371022 (1).

Figure 5

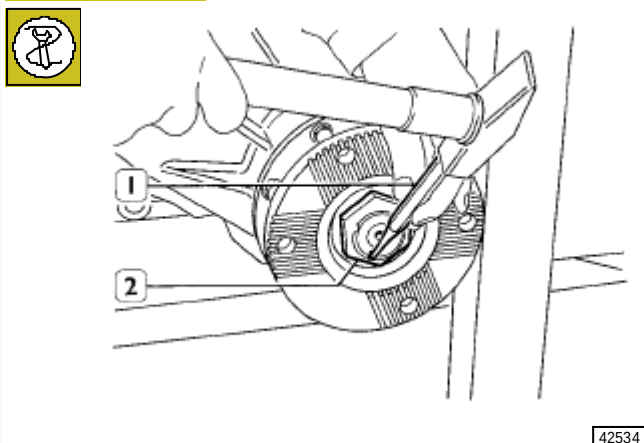


Using a punch (1) remove the safety notch on the nut (2).

Figure 6

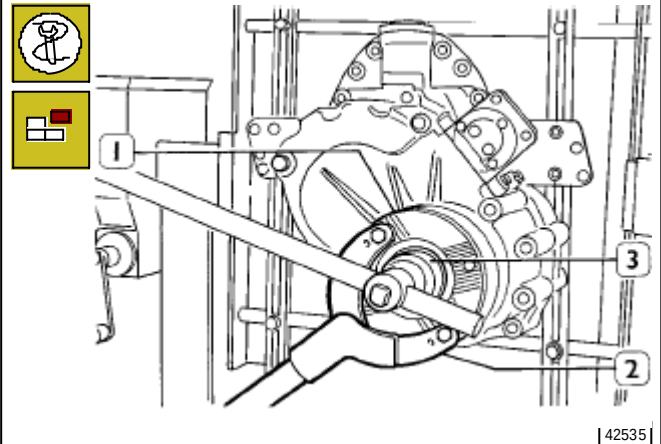


Apply reaction lever 99370317 (2), using Allen wrench 99355131 (1), unscrew the nut and extract the drive coupling flange (3).

Figure 7

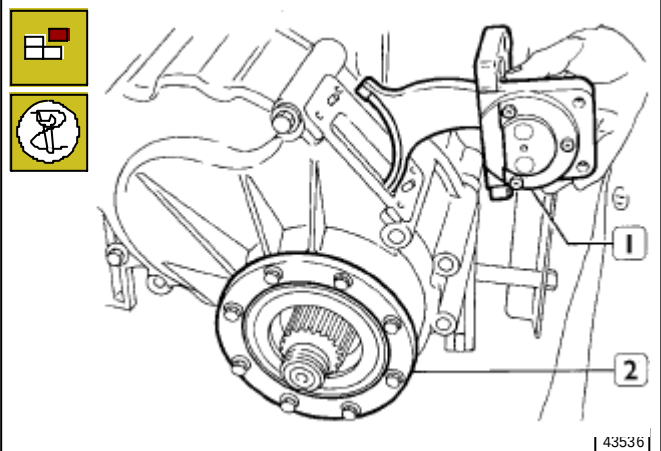

Unscrew the screws and remove the interaxle control assembly (1).
Unscrew the screws and remove the cover (2).


Figure 8

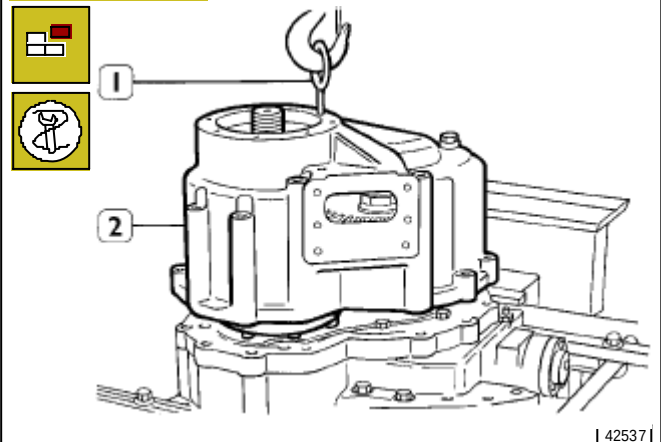

Remove the screws on the cover (2) and, using an eyebolt (1), remove the cover (2).

Aquila Trucks Centres


Figure 9

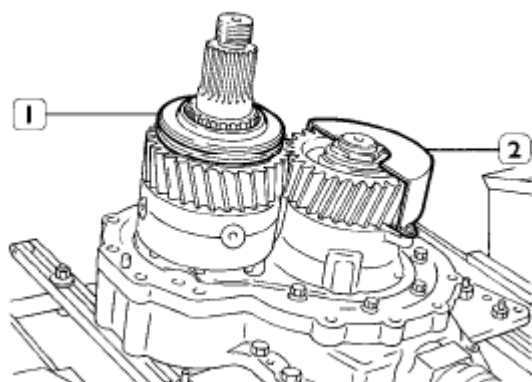

42538

Extract the sliding sleeve (1) and remove the oil feed (2).


Figure 10

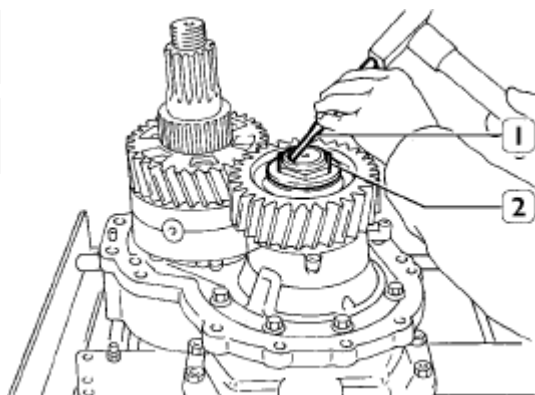

42539

Using a punch (1) remove the safety notch on the nut (2).


Figure 11

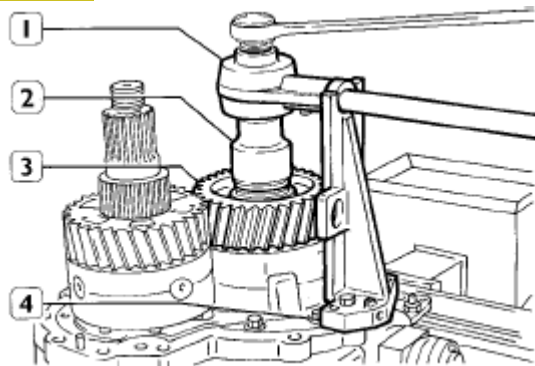

42540

Fit tool 99363310 (4), blocking gear unit (3) rotation. Using Allen wrench 99355131 (2) and multiplier 99389816 (1) unscrew the bevel pinion fixing nut.


Figure 12

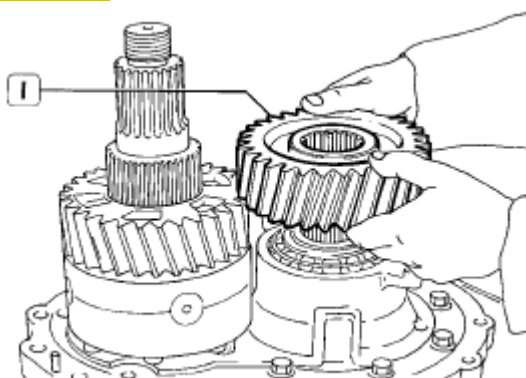

42541

Extract the driven gear (1) and the spacer.


Figure 13

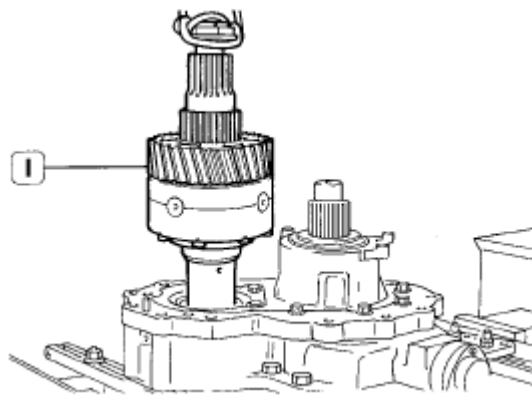

42542

Using slings, raise and remove the flow divider differential unit (1).

Figure 14

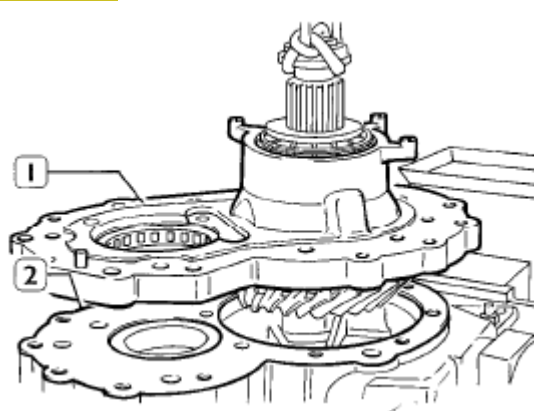


42543

Unscrew the screws fixing the bevel pinion support (1) to the housing (2) and, using slings, disassemble together with the bevel pinion.


Aquila Trucks Centres

Figure 15

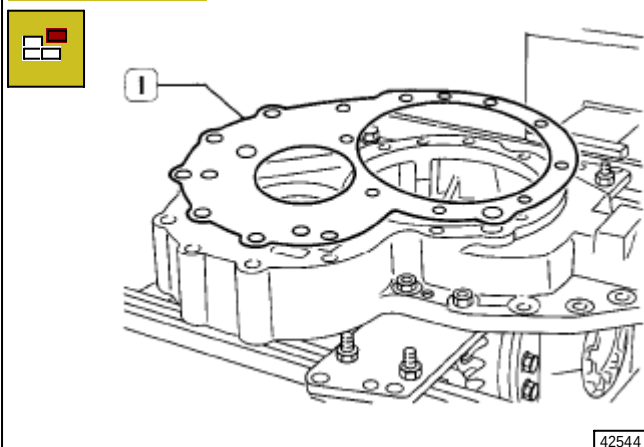


Remove adjustment shim (1).

Figure 16

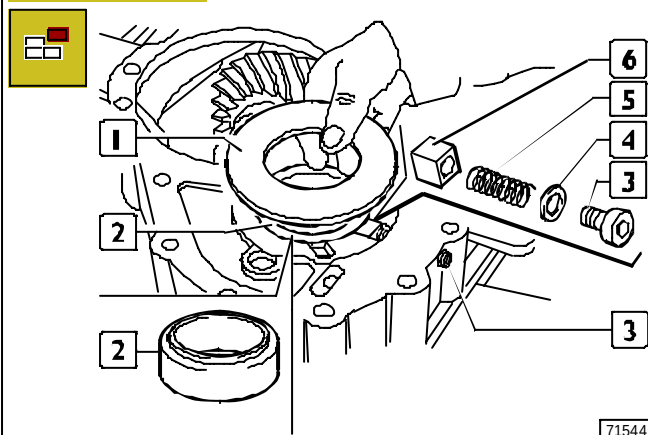


Remove the guard disk (1). Remove the plug (3), complete with washer (4), and extract the spring (5) and piston (6). Remove the eccentric (2).

Figure 17

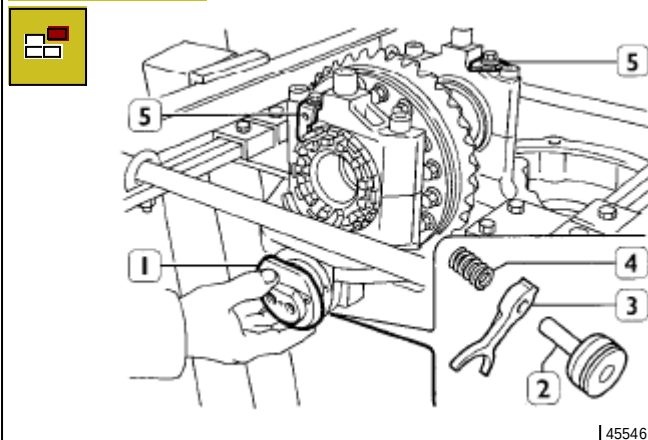


Rotate the stand through 180°. Unscrew the two screws and remove the cover (1), the piston (2), the fork (3) and the spring (4). Unscrew the screw and remove the safety plate (5).

Figure 18

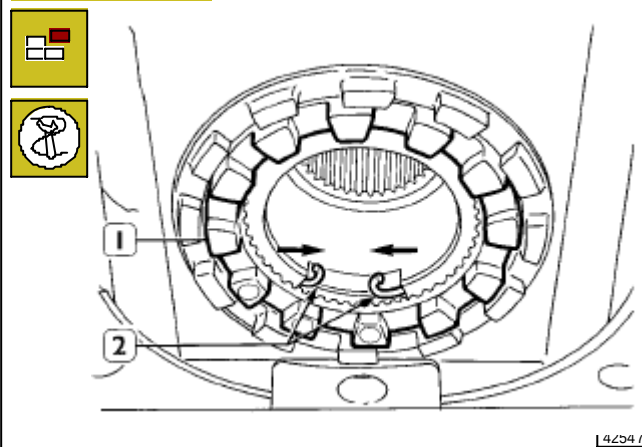


Using suitable pliers, acting on the retaining circlip (2) in the direction indicated by the arrows, then extract the differential lock fixed sleeve (1).

Figure 19

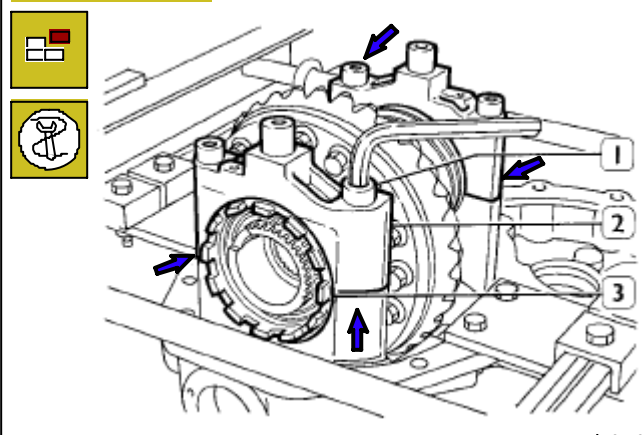

Slightly loosen the adjusting ring nut (3). Heat the points indicated by the arrows with drier 99305121 and unscrew the screws (1) secured with LOCTITE. Counter-mark and then remove the caps (2).

Figure 20

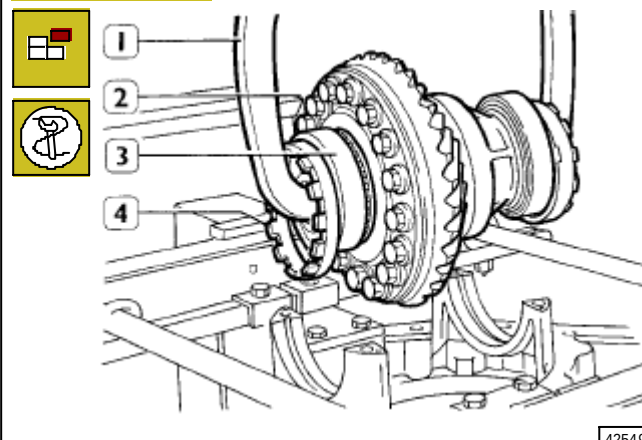


Using hook 99370509 (1), remove the differential housing (2), together with the bearings (3) and ring nut (4).

Aquila Trucks Centres

Removing the bevel pinion from the support


Figure 21

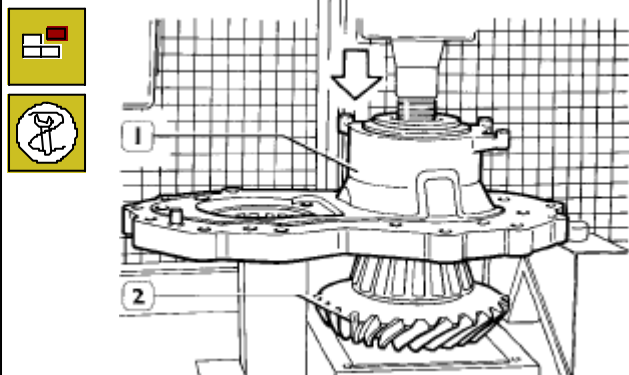

42550

Disassembly of the bevel pinion (2) from the support (1) must be carried out under a press.


Figure 22

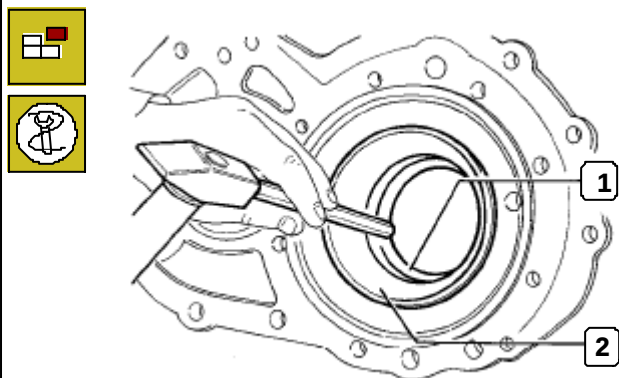

42551

Using a punch, extract the external rings (1-2) of the bearings.


Figure 23

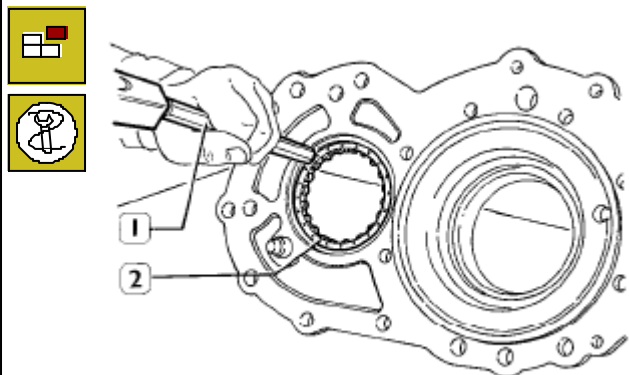

42552

Using a punch (1), extract the roller bearing (2).

Figure 24

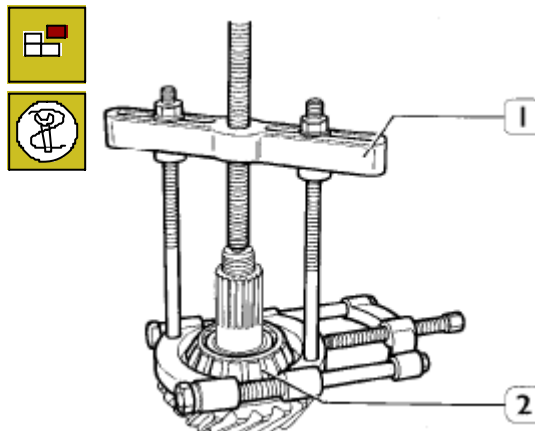


40077

Using extractor 99348001 (1), extract the bearing (2) from the bevel pinion.

Gear housing disassembly


Figure 25

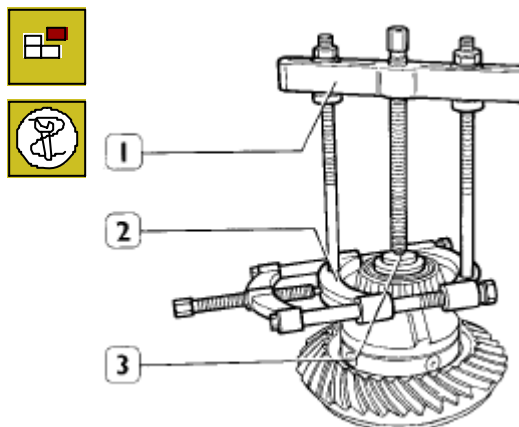

40086

Using extractor 99348001 (1-2) and reaction block 99345055 (3), extract the taper roller bearing from the gear housing. Repeat the same operation on the opposite side.

Figure 26

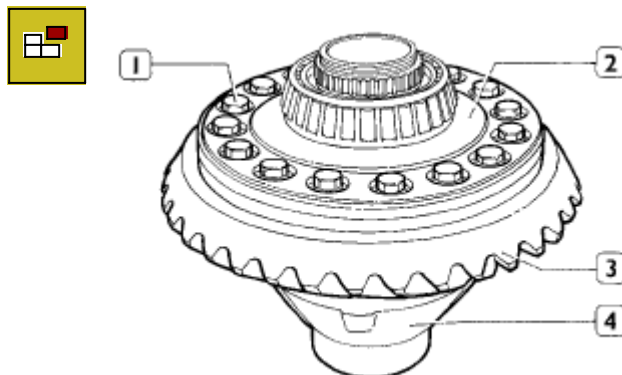


40087

Loosen and extract the screws (1) fixing the ring bevel gear (3) and cover (2) to the half-housing (4).

Aquila Trucks Centres

Figure 27

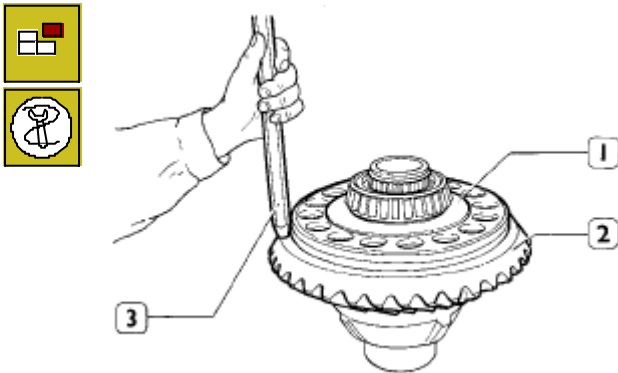


40088

Counter-mark the cover and gear housing.

Remove the gear housing cover (1) and release the ring bevel gear (2) using a punch (3).


Figure 28

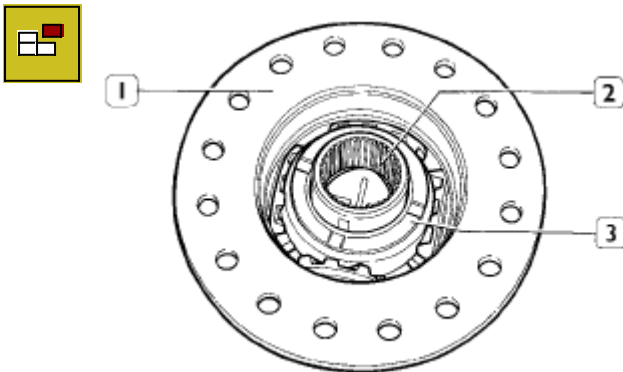

40089

Remove the crown wheel (2), together with the shoulder washer (3), from the gear housing (1).

Figure 29

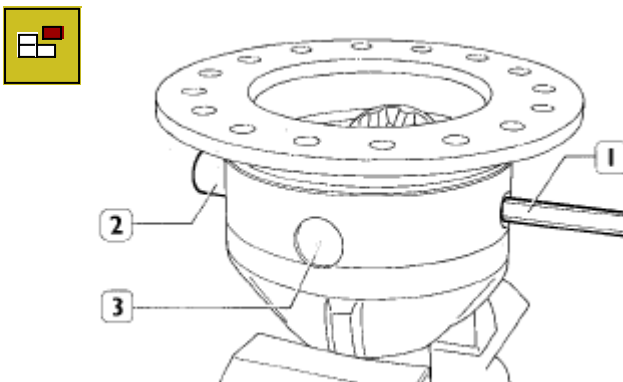


40090

Using a punch (1), first extract the long pin (2) and then the two short pins (3).

NOTE The exact position of the pins is marked on the spider body (2, Figure 30) by a long stripe for the long pin, and by two short stripes for the short pins.

Figure 30

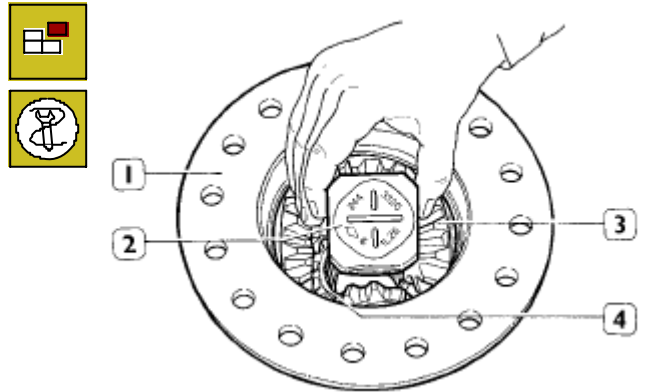


40091

Remove the spider (2) and the side pinions (3) with the relative shoulder washers and crown wheel (4) from the gear housing (1).

Interaxle differential disassembly


Figure 31

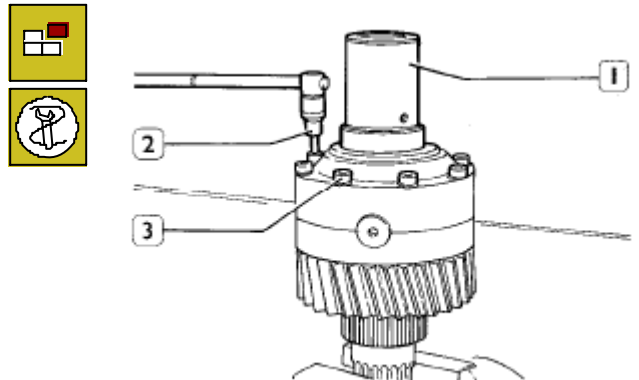

42553

Fit the differential-flow divider (1) in a vice. Using 8 mm Allen wrench (2) unscrew the screws (1).

Figure 32

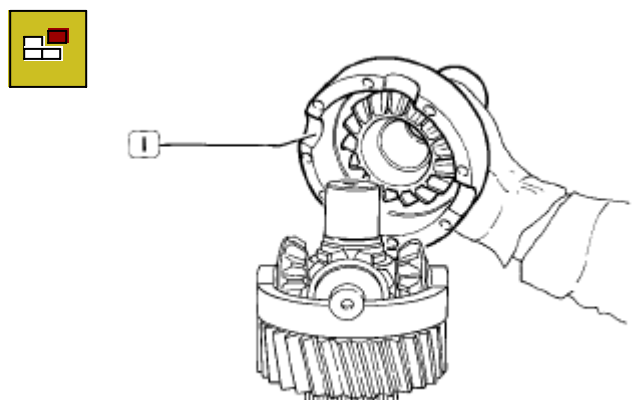


42554

Remove the half-housing (1) and crown wheel (2).

Aquila Trucks Centres


Figure 33

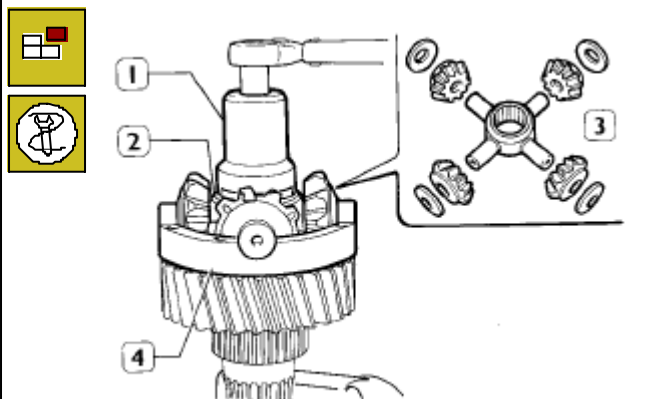

42555


Using a punch, remove the notch on the ring nut (2). With wrench 99355086 (1) unscrew the ring nut (2), remove the spider (3) and the side pinion and shoulder washers. Remove the half-housing (4).

Figure 34

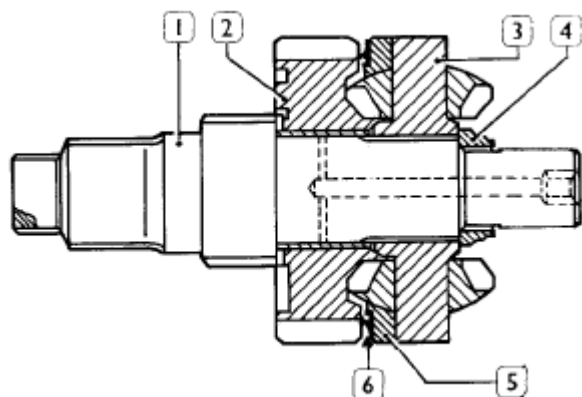

1. Input shaft - 2. Driving gear - 3. Spider - 4. Ring nut -
5. Differential half-housing - 6. Seal ring


Figure 35

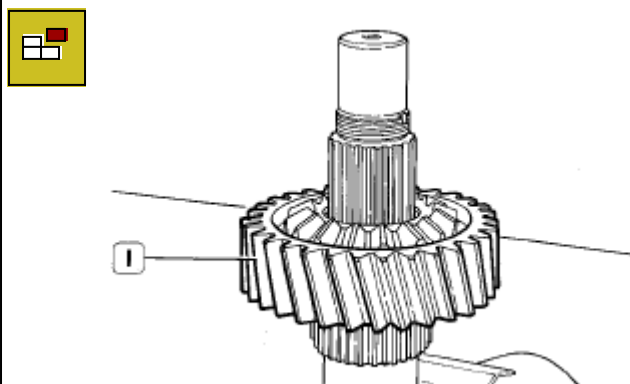

42556

Extract the driving gear (1).


Figure 36

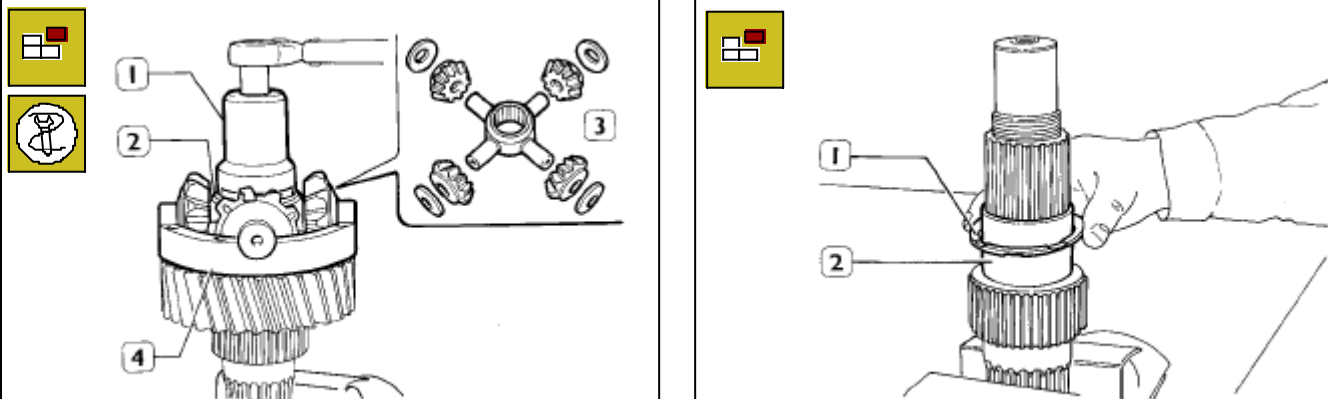

42557

Extract the shoulder washer (1) and the bushing (2). This is a destructive operation.


Figure 37

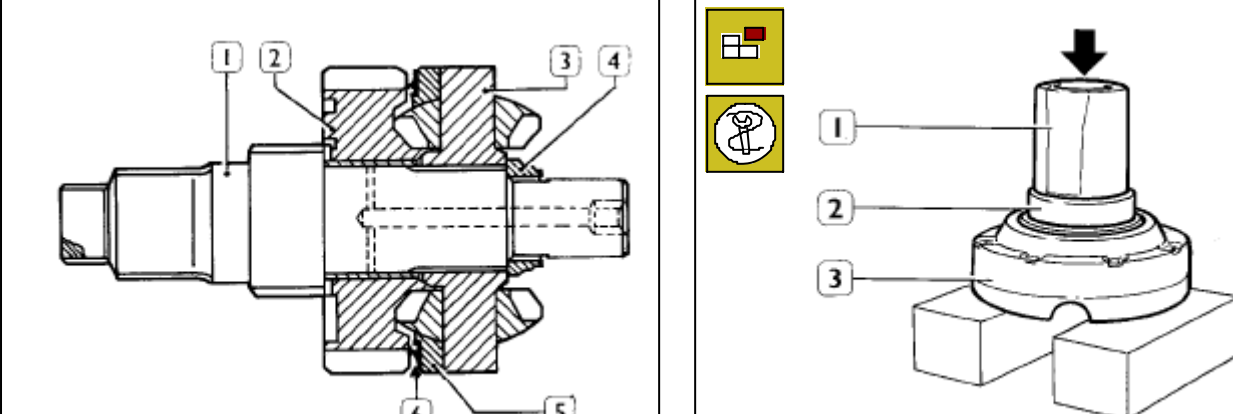

42558


Acting on the crown wheel gear unit (1) in the direction indicated by the arrows, extract the roller bearing internal ring (2) and the crown wheel gear unit from the half-housing (3).

Figure 38

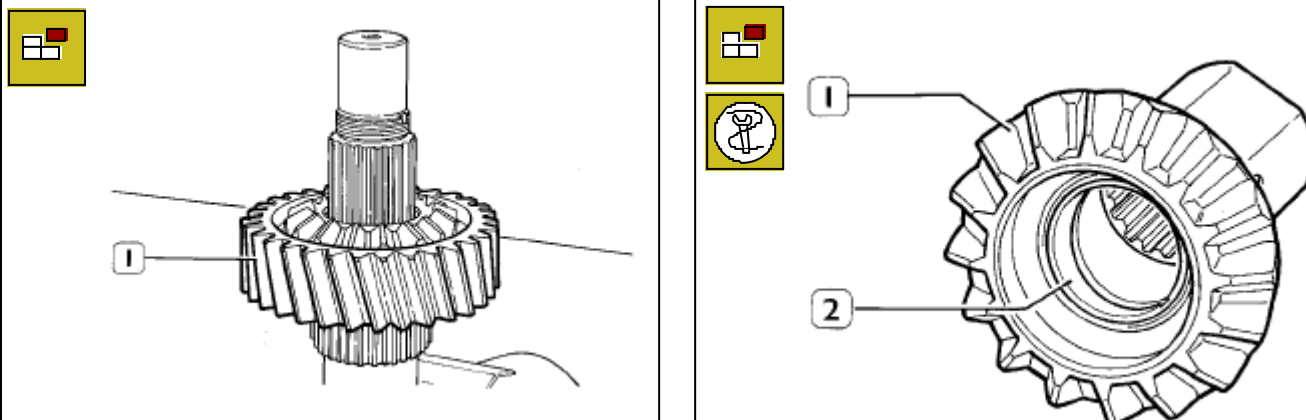

Using a punch, extract the bushing (2) from the crown wheel gear unit (1).

Aquila Trucks Centres

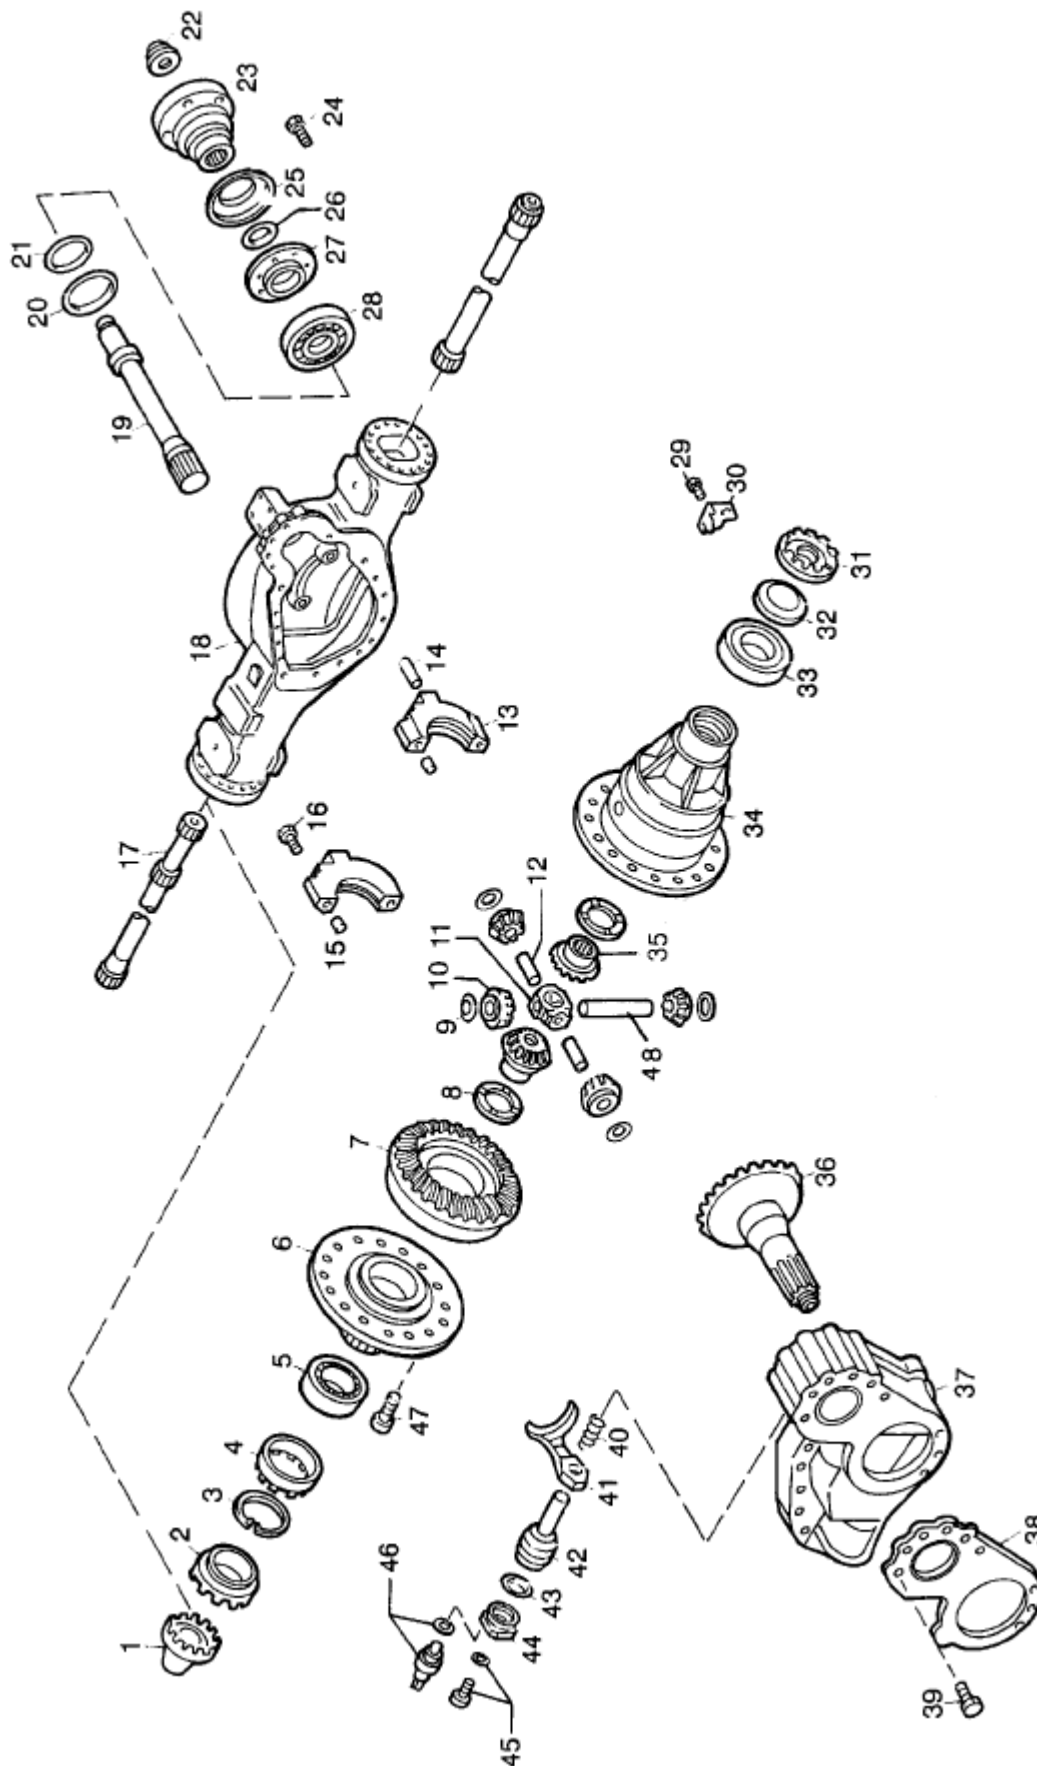


DIFFERENTIAL COMPONENTS

- 1. Sliding sleeve - 2. Fixed sleeve - 3. Circlip - 4. Ring nut - 5. Bearing - 6. Cover - 7. Crown - 8. Shoulder washer - 9. Fifth wheel - 10. Side pinion - 11. Spider - 12. Short pin - 13. Cap - 14. Pin - 15. Pin - 16. Screw - 17. Drive shaft - 18. Axle housing - 19. Shaft - 20. Seal ring - 21. Seal ring - 22. Nut - 23. Flange - 24. Screw - 25. Dust seal cover - 26. Seal ring - 27. Cover - 28. Bearing - 29. Screw - 30. Plate - 31. Ring nut - 32. Oil baffle - 33. Bearing - 34. Gear housing - 35. Crown wheel - 36. Pinion - 37. Support - 38. Adjusting shim - 39. Screw - 40. Spring - 41. Fork - 42. Piston - 43. Ring - 44. Cover - 45. Screw - 46. Switch - 47. Screw - 48. Long pin

Aquila Trucks Centres

Figure 40

429443

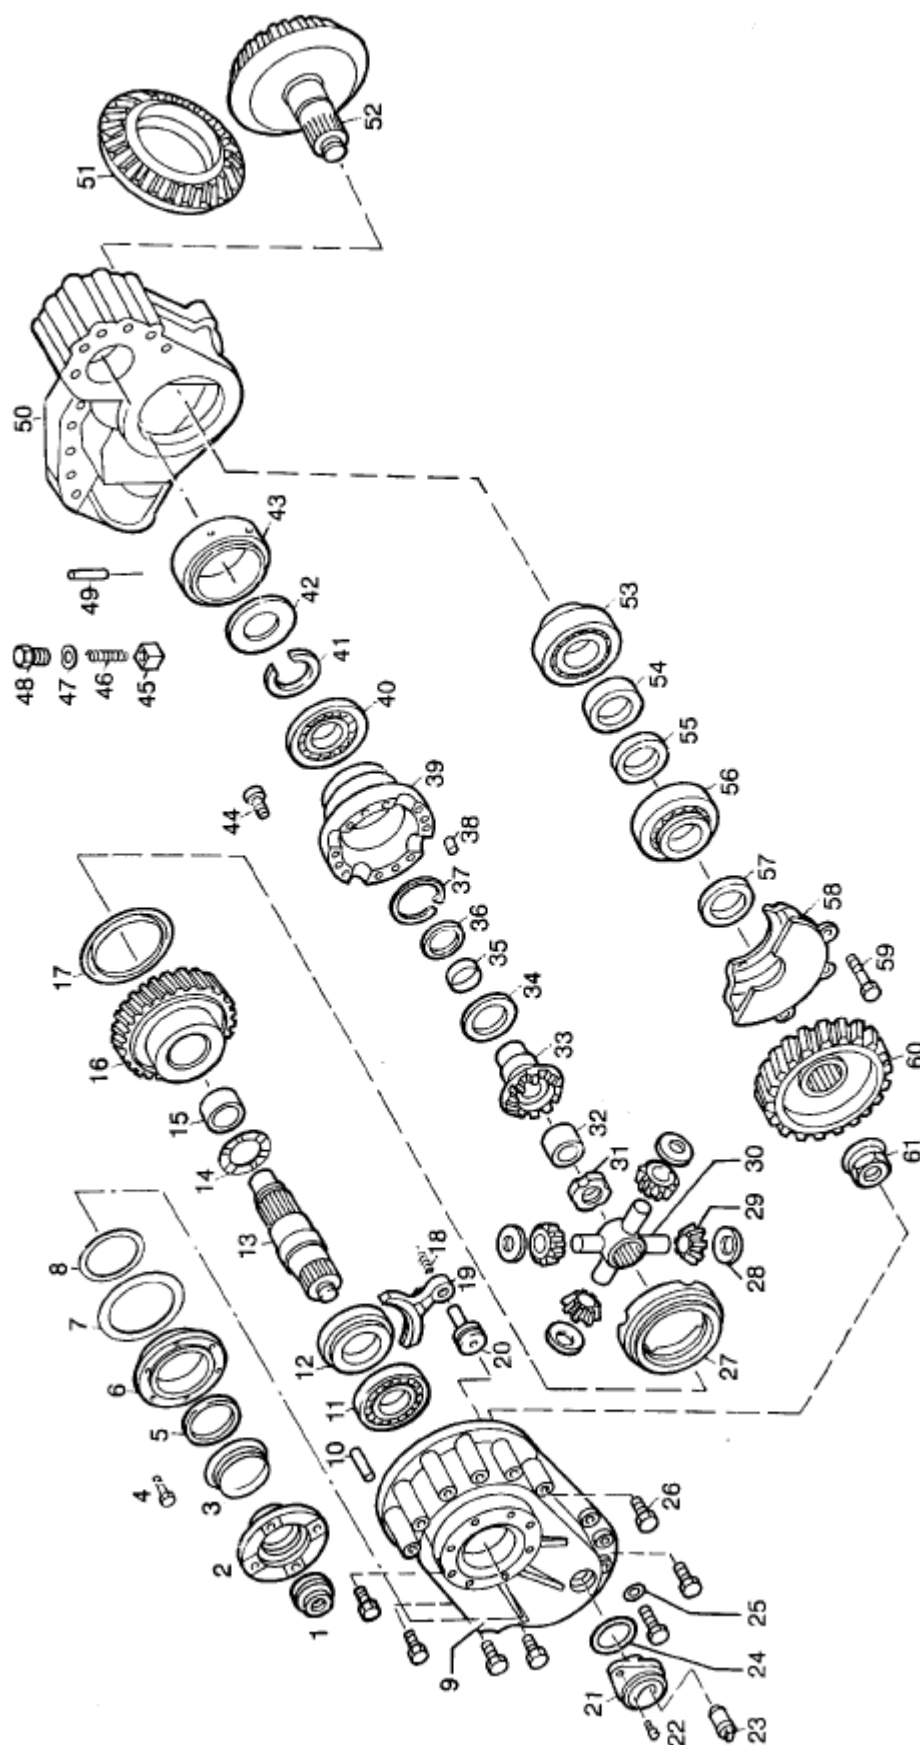

FLOW DIVIDER-DIFFERENTIAL COMPONENTS

1. Nut - 2. Flange - 3. Dust seal cover - 4. Screw - 5. Seal ring - 6. Cover - 7. Seal ring - 8. Seal ring - 9. Housing - 10. Pin - 11. Bearing - 12. Sliding sleeve - 13. Shaft - 14. Washer - 15. Bushing - 16. Gears - 17. Oil guard ring - 18. Spring - 19. Fork - 20. Piston - 21. Cover - 22. Screw - 23. Switch - 24. Seal ring - 25. Washer - 26. Screw - 27. Half housing - 28. Fifth wheel - 29. Side pinion - 30. Spider - 31. Ring nut - 32. Bushing - 33. Crown wheel - 34. Washer - 35. Oil guard - 36. Seal ring - 37. Circlip - 38. Pin - 39. Housing - 40. Bearing - 41. Ring - 42. Washer - 43. Eccentric ring - 44. Spring - 45. Piston - 46. Plug - 47. Circlip - 48. Pin - 49. Pin - 50. Housing - 51. Crown - 52. Pinion - 53. Bearing - 54. Spacer - 55. Adjusting ring - 56. Bearing - 57. Ring - 58. Oil feed - 59. Screw - 60. Gears - 61. Nut

Aquila Trucks Centres

CHECKING THE INTERAXLE DIFFERENTIAL PARTS

Carefully clean all of the individual differential-flow divider components, replacing worn parts and all sealing elements


NOTE Carefully clean all the threads to ensure exact adjustments and precise tightening torque values.

NOTE If either the bevel gear or pinion need to be changed, both parts must be replaced as they are provided as coupled spare parts.

NOTE Replace all seal rings and bushings if damaged.


Interaxle differential unit assembly

Figure 41

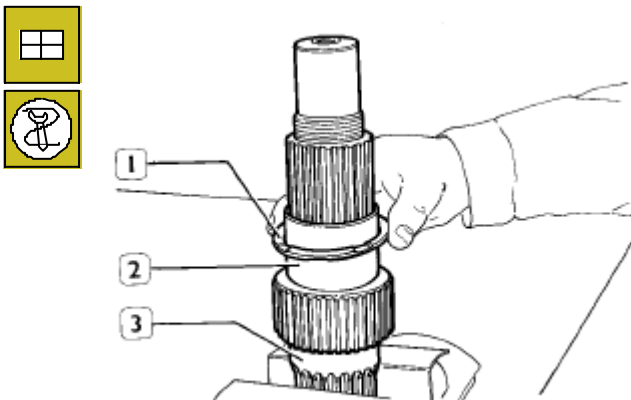


Position the input shaft (3) in a vice, heat the bushing (2) to 105°C and fit on the shaft. Fit the shoulder ring (1).

Figure 42

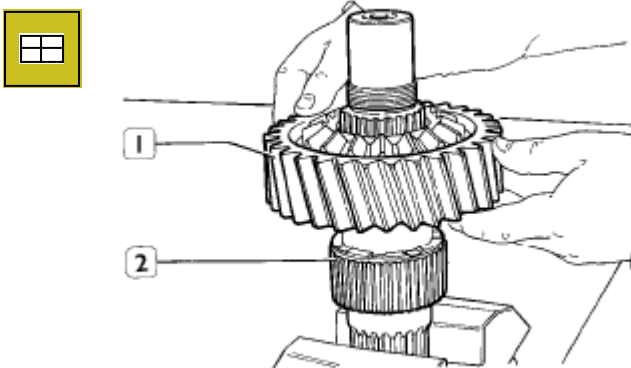


Fit the gear (1) on the input shaft (2). Check that the gear (1) rotates freely on the bushing (2, Figure 41).

Figure 43

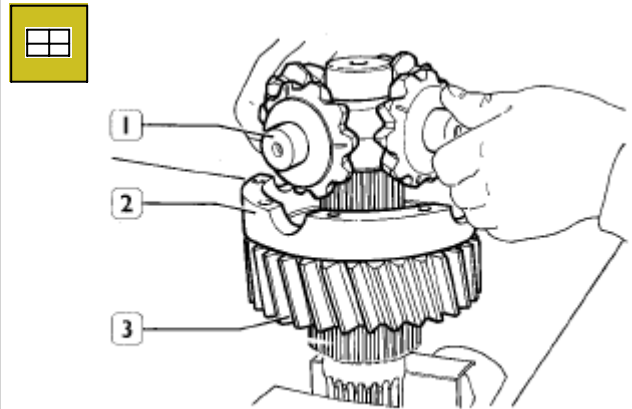


Assemble the half-housing (2) and seal ring on the driven gear (3). Fit the spider (1) and side pinions and fifth wheel.

Figure 44

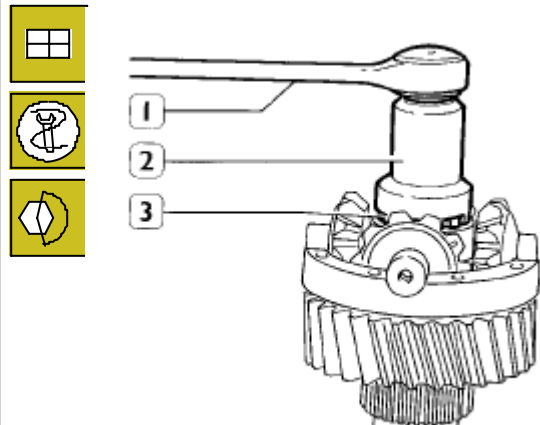

Using the torque wrench (1) and wrench 99355086 (2), tighten the ring nut (3) to the correct torque value.


Figure 45

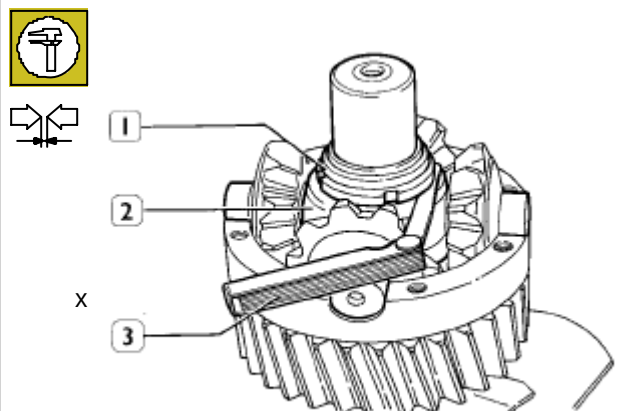

After tightening the ring nut (1) check (with a feeler gauge (3)) that there is a clearance of 0.05 to 0.1 mm between the ring nut (1) and the spider (2). If not, replace the necessary parts.


Aquila Trucks Centres

Figure 46

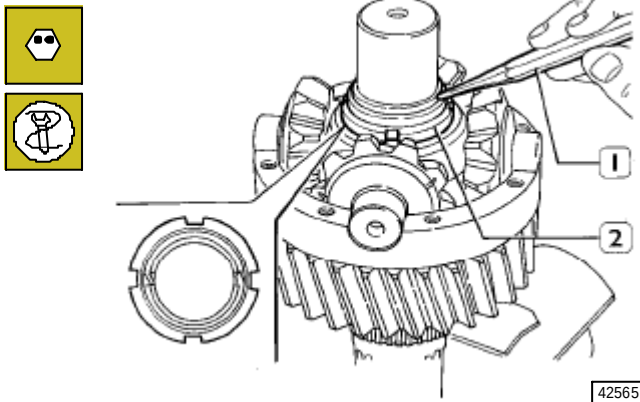

Using a punch (1) secure the ring nut (2) as shown in the drawing.


Figure 47

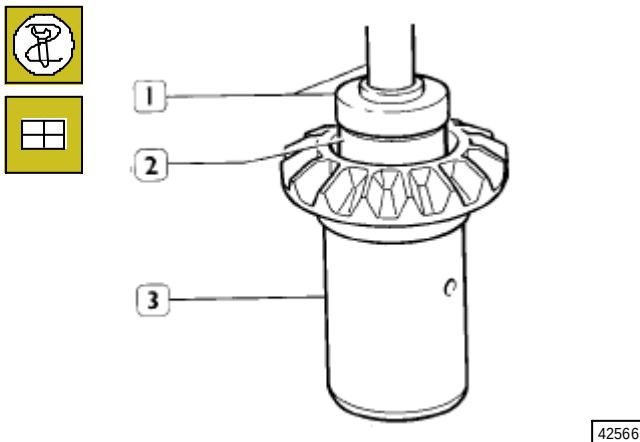

Using punch 99370121 (1) and grip 99370006, fit the bushing (2) in the crown wheel gear unit (3).


NOTE After assembling the bushing, make sure that it is keyed correctly on the input shaft.

Figure 48

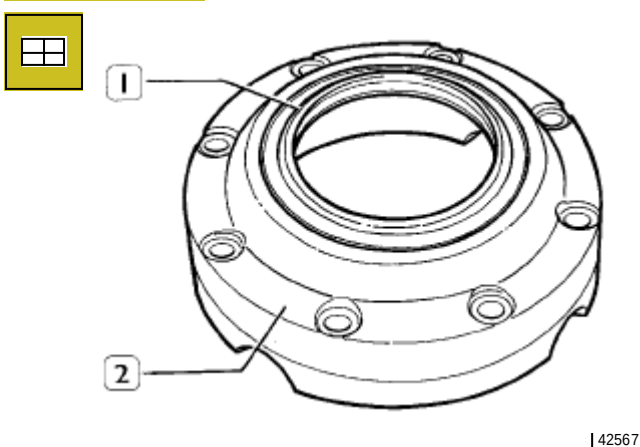


Fit the seal ring (1) in the half-housing (2).

Figure 49

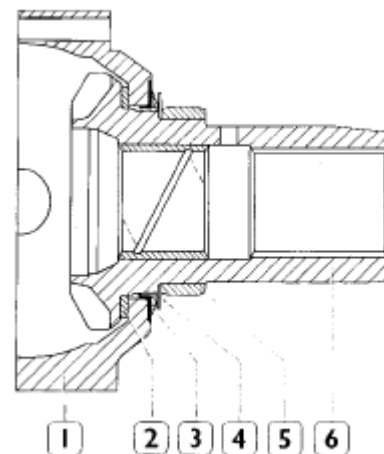


1. Half-housing - 2. Shoulder ring - 3. Seal ring - 4. Washer - 5. Roller bearing ring - 6. Crown wheel gear

Figure 50

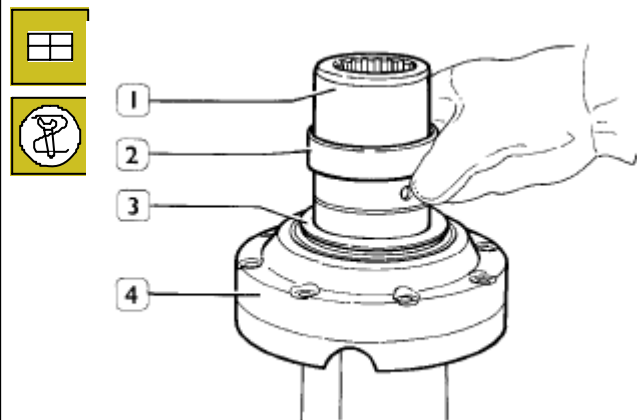

Position the crown wheel gear unit (1) on a support. Fit the shoulder ring (2, Figure 48) the half-housing (4), the washer (3). Heat the internal ring (2) for the roller bearings and fit on the crown wheel gear unit.

Figure 51

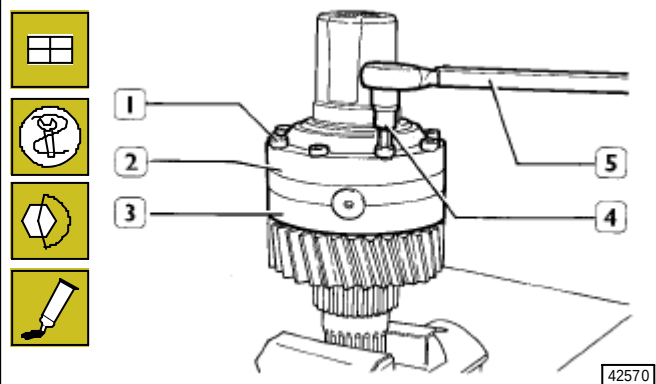


Fill the inner chamber of the half-housing (3) with 100g of lubricating oil. Fit the previously assembled half-housing assembly (2) on the half-housing (3) and, using a torque wrench (5) and an Allen wrench (4), tighten the screws (1) to the correct torque, after having smeared the screws with LOCTITE AVX.

Aquila Trucks Centres


Differential housing assembly

Figure 52

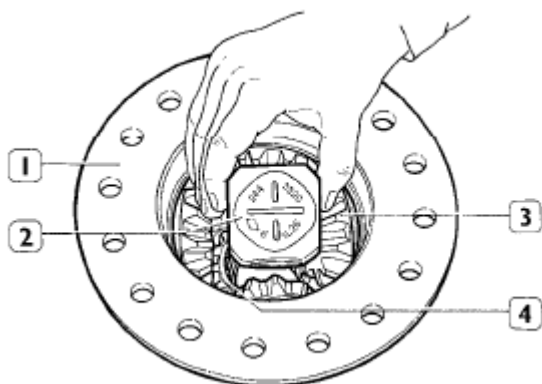

Place the gear housing (1) on a support. Position the crown wheel (4) and shoulder washer in the seat. Fit the 4 side pinions (3), complete with shoulder washer, and insert in the spider (2).

Figure 53

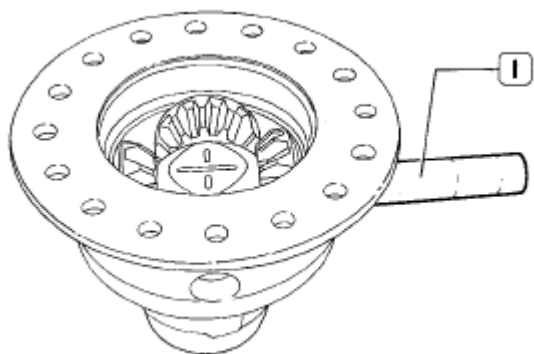


Insert the long pin (1) and the two short pins.




First insert the long (through) pin. The exact position of the pins is marked on the spider body by a long stripe for the long pin, and by two short stripes for the short pins

Figure 54

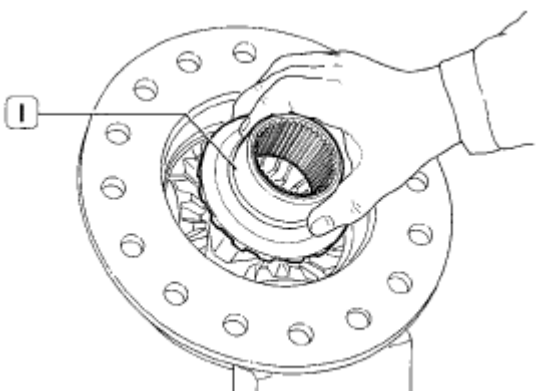

Assemble the crown wheel (1).


Figure 55

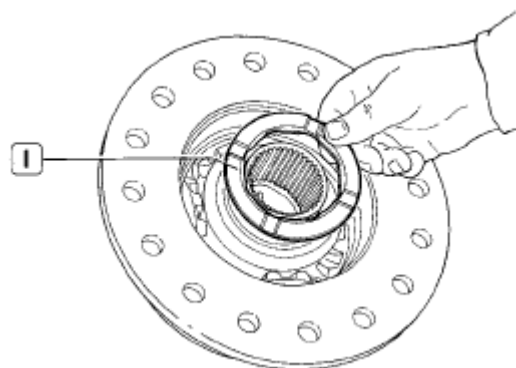

40094

Fit the shoulder washer (1).


Figure 56

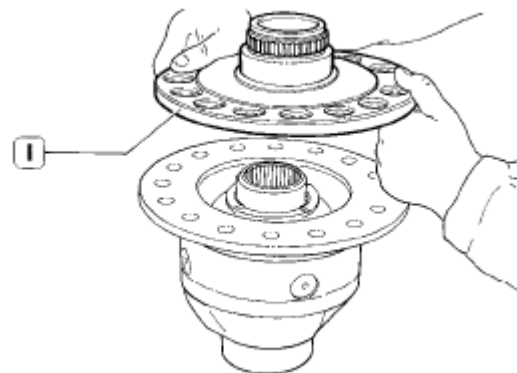

40095

Fit the gear housing cover (1).

Figure 57

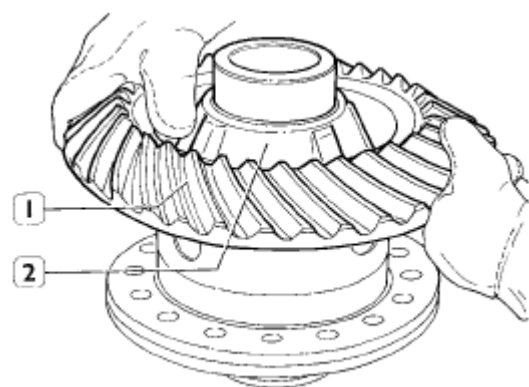


40096

Heat the ring bevel gear (1) to approx. 80°C, fit in position in the gear housing (2) and secure with two screws.


Aquila Trucks Centres

Figure 58

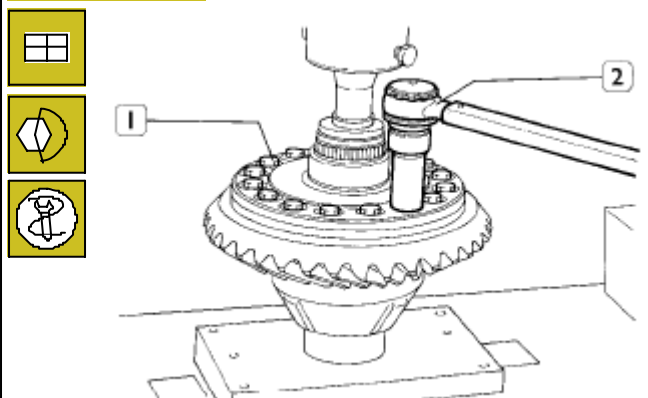

Introduce the remaining screws (1); lock gear unit rotation using a press and tighten the screws (1) to the correct torque with a torque wrench (2).


Figure 59

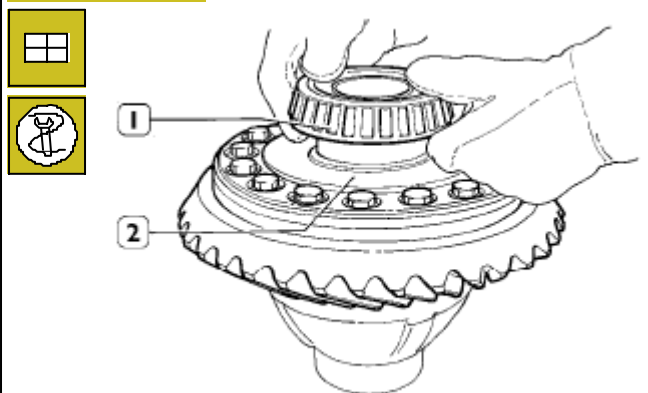

Using an electric heater, heat the support bearing (1) for 15' at a temperature of 100°C and fit on the gear housing (2). Repeat the same operation on the opposite side.


Assembling the bevel pinion support

Figure 60

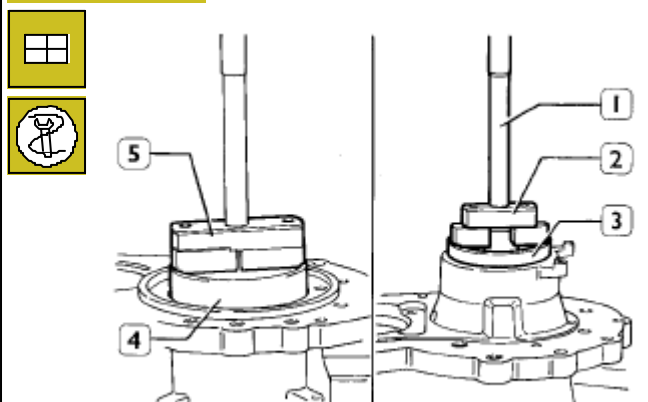

Using punch 99374093 (2) and grip 99370007 (1), fit the bearing external ring (3) in the support. Repeat the same operation on the external ring (4) on the opposite side, using punch 99374094 (5).


Figure 61

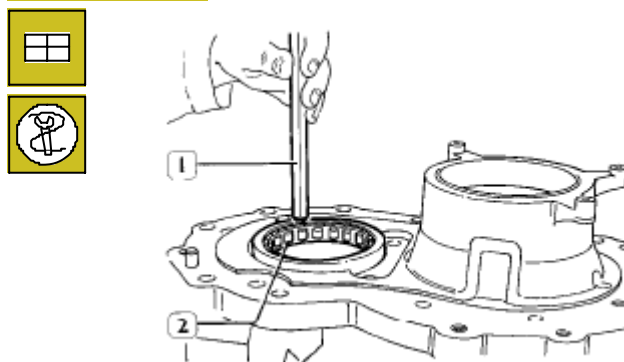

Using a punch (1) fit the roller bearing (2).


Procedure to follow to determine the thickness of the bevel pinion rolling torque adjusting ring

Figure 62

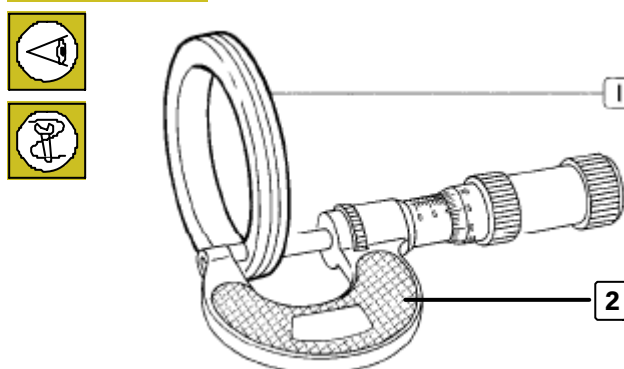

Using a feeler gauge (2) measure and note the thickness of the adjusting ring (1) on disassembly (value A).

Figure 63

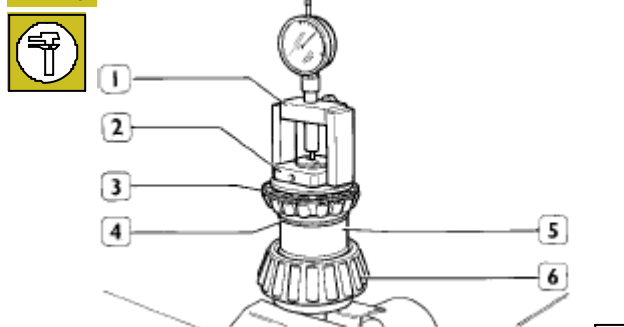

Secure tool 99395027 in a vice and fit the following parts:

- the bearing (6) on the pinion-side;
- the previously measured adjusting ring (4), the spacer (5) and the bearing.


Fully tighten the ring nut (2).

Position part (1) of tool 99395027 on the bearing (3), fitted with a zero-set dial gauge on the end of the tool. Then remove:

- the part (1), the ring nut (2), the bearing (3), the adjusting ring (4) and the spacer (5).


Aquila Trucks Centres

Figure 64

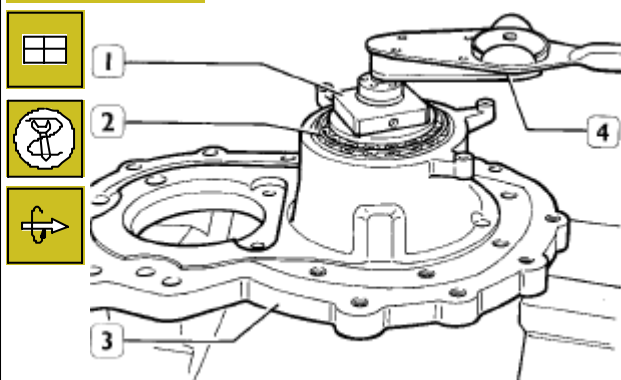

Position tool 989395027 and bearing (6, Figure 63) in the support (3) and position the bearing (2, Figure 64). Tighten the ring nut (1) by hand and check (using a torque wrench (4)) the rolling torque, which should be 6 - 8 Nm; if necessary, adjust by means of the ring nut (1).

Figure 65

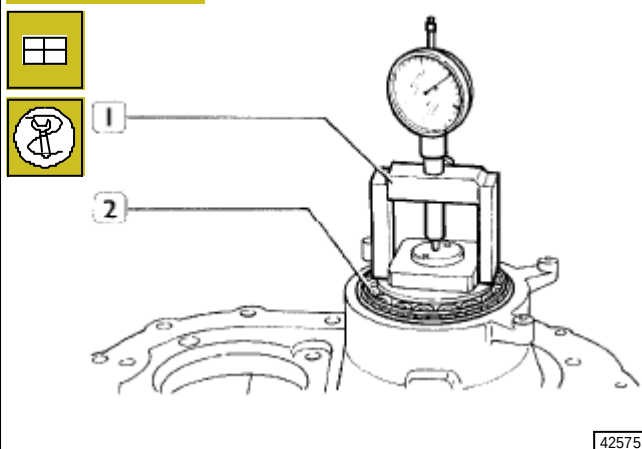

42575

Position the part (1), with the dial gauge zero-set, on the bearing (2) and read the eventual deviation (value B). Disassemble the parts on tool 99395027.

Thickness **S** on the adjusting ring is provided by the following formula:

$$S = A - (\pm B) + C$$

Where:

A = thickness of the adjusting ring assembled for dial gauge zero-setting;

B = deviation value read;

C = 0.05 mm coefficient which takes into account the expansion of the bearings as a result of the assembly negative allowance on the bevel pinion.

First example:

$$A = 10.12 \text{ mm}$$

$$B = + 0.13 \text{ mm}$$

$$C = 0.05 \text{ mm}$$

$$S = 10.12 - (+ 0.13) + 0.05 =$$

$$S = 10.12 - 0.13 + 0.05 = 10.04 \text{ mm}$$

Second example:

$$A = 10.12 \text{ mm}$$


$$B = - 0.13 \text{ mm}$$

$$C = 0.05 \text{ mm}$$

$$S = 10.12 - (- 0.13) + 0.05 =$$

$$S = 10.12 + 0.13 + 0.05 = 10.30 \text{ mm}$$


Figure 66

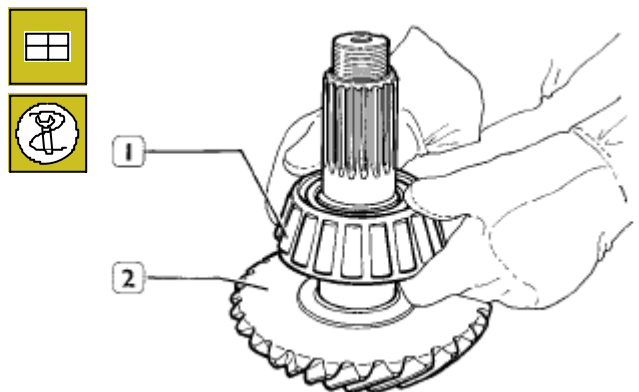

42576


Heat the bearing (1) to 100°C and fit on the bevel pinion (2).

Figure 67

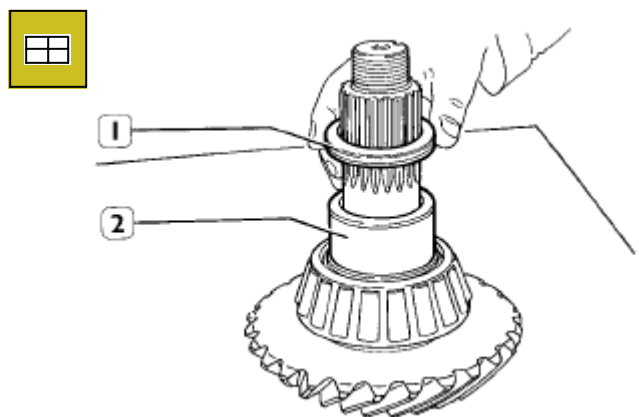

Fit the spacer ring (2) and the adjusting ring (1) with the thickness previously measured.

Figure 68

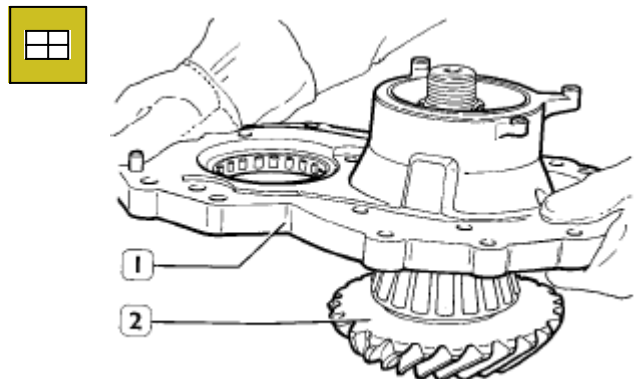


42578

Position the support (1) on the bevel pinion (2).

Aquila Trucks Centres


Figure 69

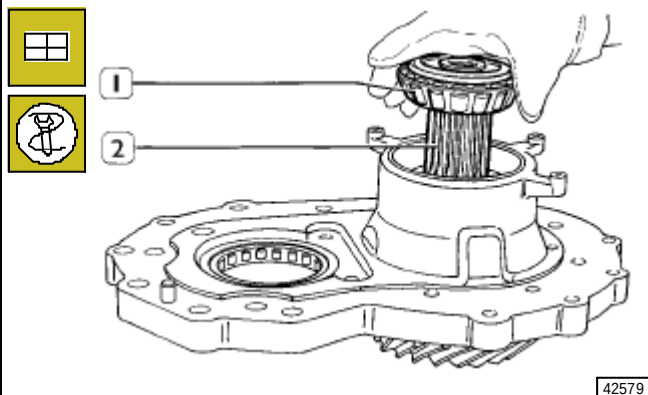

Heat the bearing (1) to 100°C and fit on the bevel pinion (2).


Differential housing assembly

Figure 70

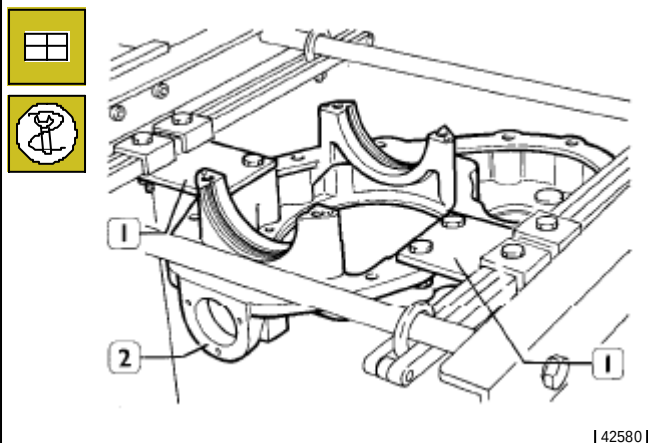


Position the housing (2) on a stand with brackets 99371022 (1).

Figure 71

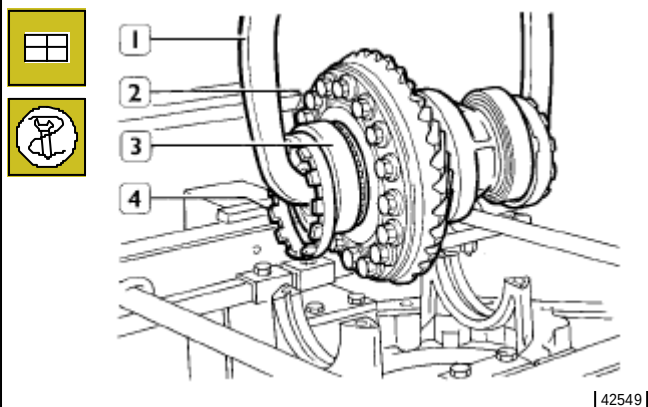


Using hook 99370509 (1), raise the gear housing (2), bearings (3) and adjusting ring nut (4). Position on the differential housing. Carefully position the adjusting ring nuts on the threads of the differential housing.

Figure 72

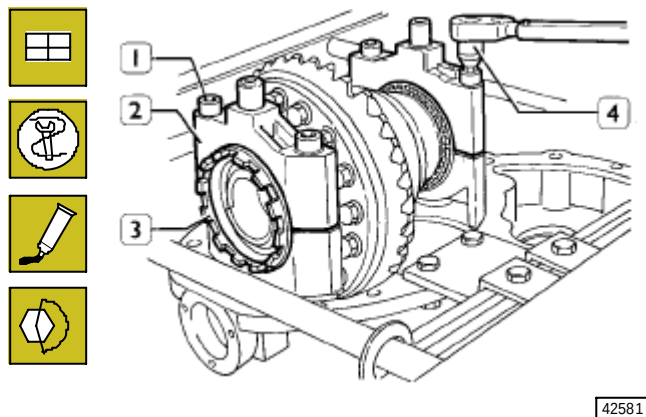


Fit the caps (2) and provisionally tighten the screws (1). Check that the adjusting ring nuts (3) screw on easily. Remove the screws, one at a time, apply LOCTITE AVX and tighten with a torque wrench (4) to the correct torque value.

Figure 73

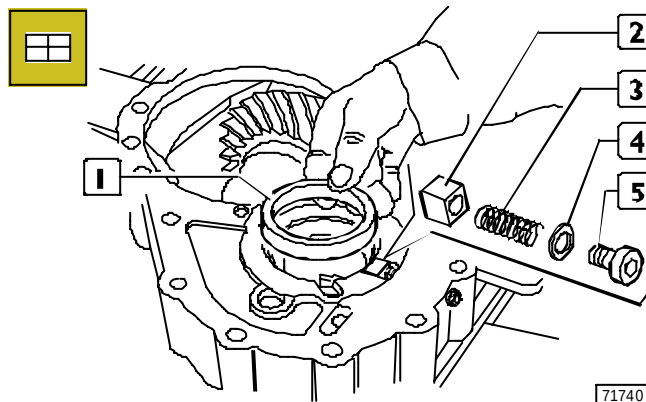

Rotate the unit and fit: the eccentric ring (1), piston (2), spring (3) and plug (5) with a new washer (4), and tighten to the correct torque.


Figure 74

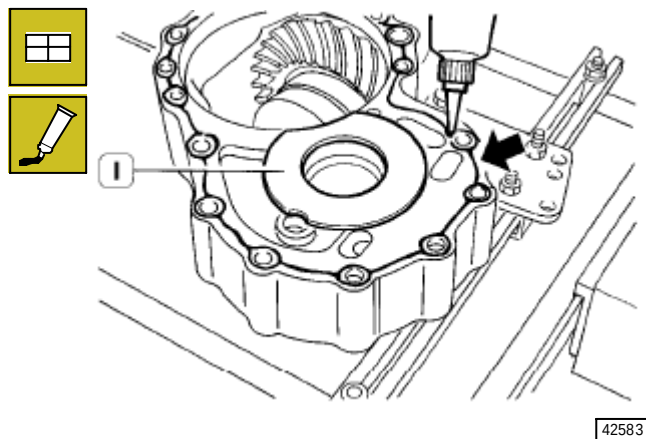

Fit the guard disk (1) and apply a bead (⇒) of LOCTITE 573 on the contact surface.

Aquila Trucks Centres


Figure 75

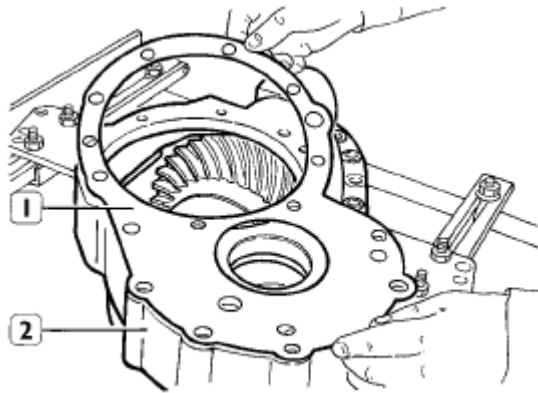

42584

Fit the adjusting ring (1), in order to position the pinion in relation to the bevel gear, on the housing (2). The thickness of the adjusting ring is determined by the reference value (1, Figure 76) marked on the bevel pinion.

Figure 76

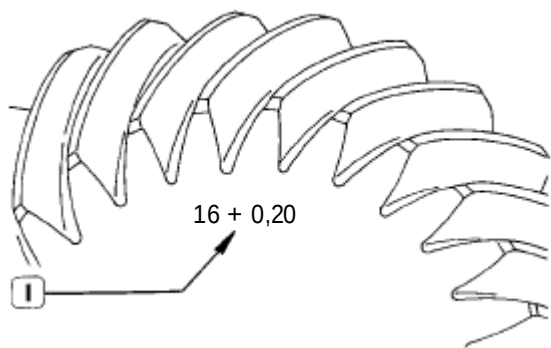


42585

Figure 77

Value marked on the bevel pinion (1, Figure 76)	Adjusting shim
0	0.5
0.1	0.6
0.2	0.7
0.3	0.8
0.4	0.9
0.5	1
0.6	1.1
0.7	1.2
0.8	1.3
0.9	1.4
1.0	1.5

Summary table to determine the thickness of the bevel pinion position adjusting ring.


Figure 78

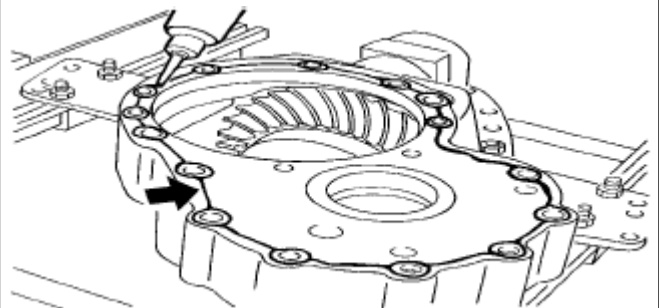

42586

Apply another bead ($\Rightarrow$) of LOCTITE 573 on the adjustment shim.


Figure 79

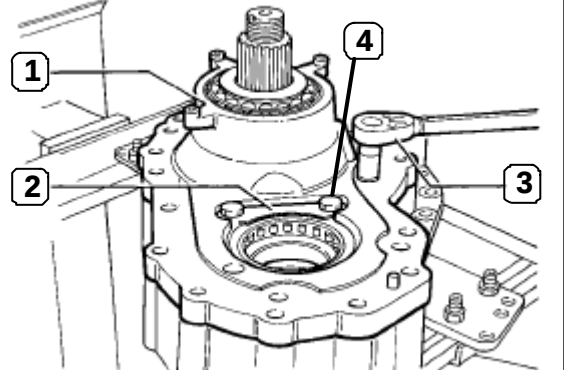

42587

Assemble the complete bevel pinion support (1), apply the bearing retainer plate (2). Use torque wrench (3) to tighten screws (4) to the set torque.

Figure 80

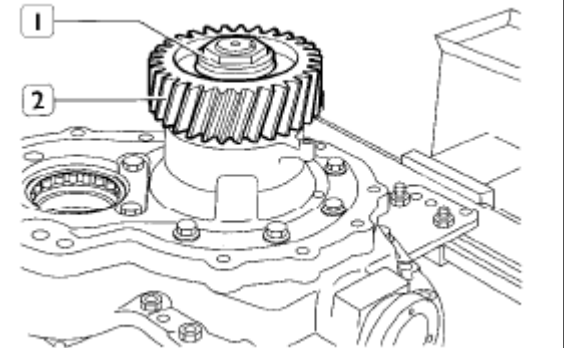


42588

Fit the gear (2) and tighten the fixing nut (1) to the correct torque.

Aquila Trucks Centres

Figure 81

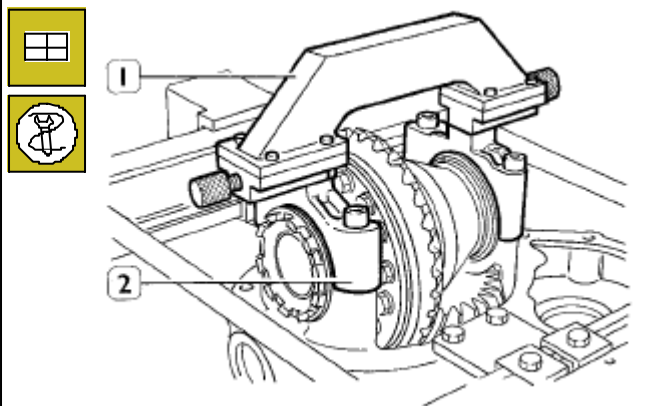


42589

Position tool 99370133 (1) on the caps (2) to avoid excessive spread on the caps during adjustment operations.

Differential housing bearings rolling torque adjustment

Figure 82

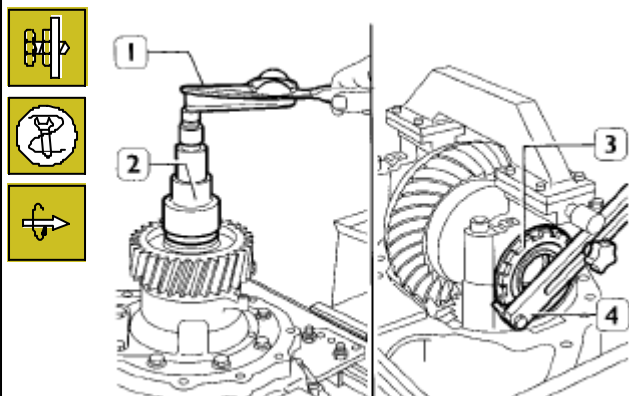

The rolling torque reading is carried out when there is a clearance between the teeth on the bevel gear pair. However, the total rolling torque value varies according to the reduction bevel gear pair ratio (see table in Figure 83).


Using torque wrench 99389819 (1) and the appropriate Allen wrench (2), read the pre-stabilised torque value. If the torque value is different from that indicated in Figure 83, adjusting the bearing adjustment ring nuts (3) with the wrench (4).

Figure 83

No. of teeth	Ratio	Total rolling torque (Nm)
15/34	2.267	$a + (1.3 \div 1.8)$
17/35	2.059	$a + (1.5 \div 1.9)$
17/36	2.118	$a + (1.4 \div 1.9)$
19/33	1.737	$a + (1.7 \div 2.3)$
21/40	1.905	$a + (1.6 \div 2.1)$
21/34	1.619	$a + (1.9 \div 2.5)$
23/36	1.565	$a + (1.9 \div 2.6)$
24/35	1.458	$a + (2.1 \div 2.7)$
28/37	1.321	$a + (2.3 \div 3)$
27/32	1.185	$a + (2.5 \div 3.4)$
27/37	1.370	$a + (2.21 \div 2.9)$
29/37	1.276	$a + (2.4 \div 3.1)$
34/37	1.088	$a + (2.7 \div 3.7)$

$a = 7.5 \div 9.5 \text{ Nm}$

Figure 84

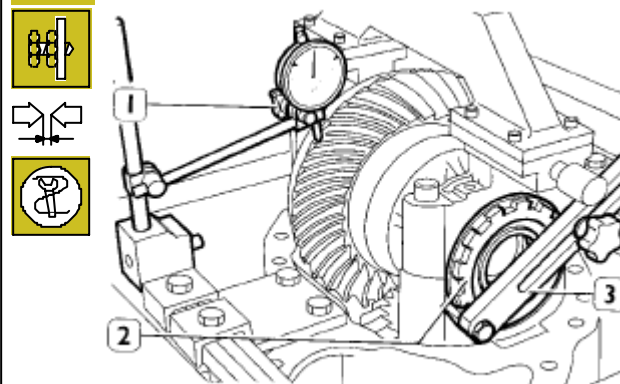

If a different value is read, adjust the end float between the teeth on the bevel pinion/gear pair, as follows:

- Position a magnetic dial gauge (1) as shown in Figure 84.
- Prevent the bevel pinion from rotating whilst alternately rotating the bevel gear and, using a gauge (1), read the clearance between the teeth on the two gear units. This clearance should be 0.15 - 0.35 mm.

If not, using the wrench (3), adjust the adjusting ring nut (2).


In order to prevent the previously measured rolling torque from varying, during adjustments of the coupling clearance between the pinion and the bevel gear teething, tighten the ring nut with the wrench (3) by the same amount as the ring nut on the opposite is loosened.

On completion of operations, check that the two adjusting ring nuts are suitably positioned to allow the safety plate to be fitted.

Remove tool 99370133.


Aquila Trucks Centres

Figure 85

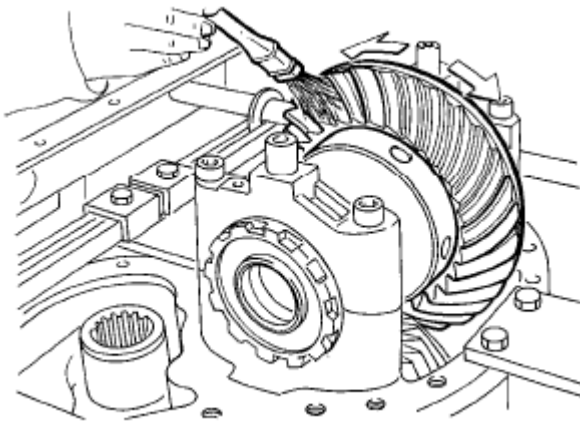

Using a brush, apply a light covering of Prussian blue on the teeth of the bevel gear.
Rotate the bevel gear in both directions.


Figure 86

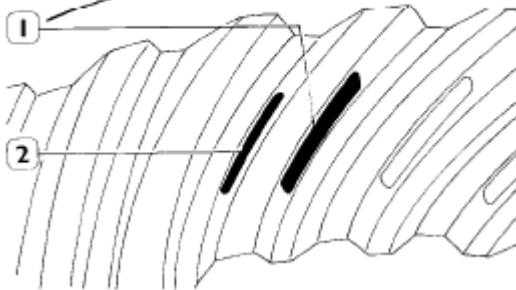

40160

The contact marks should be on both the leading face (1) and the pushing face (2), more or less in the centre between the teeth. When working without a load, both contact zones should be slightly out of position in relation to the external diameter of the bevel gear.


Figure 87

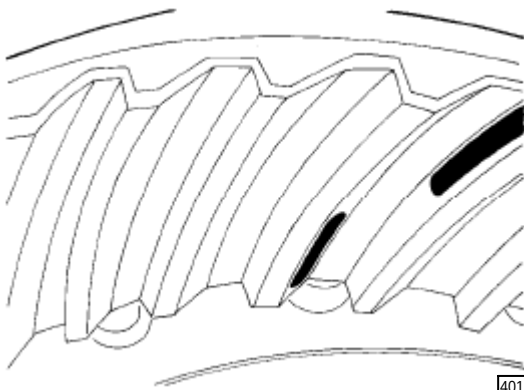

40161A

If the mark on the leading face (towards the external diameter) and on the pushing face (towards the internal diameter) is out of position, the pinion is located too close to the bevel gear.
- Solution: increase the thickness of the adjusting ring (1, Figure 75).

Figure 88

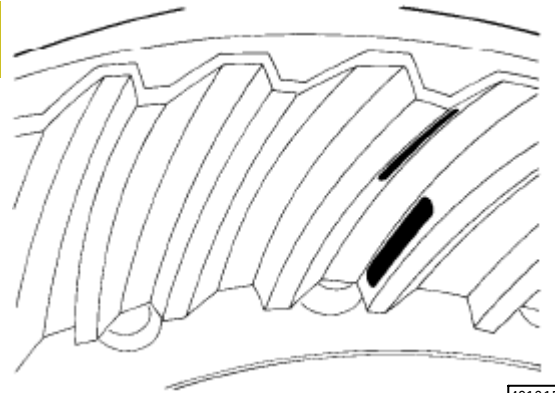


40161B

If the mark on the leading face is positioned towards the internal diameter, and on the pushing face it is located towards the external diameter of the bevel gear, the pinion is located too far away from the bevel gear axis.

- Solution: decrease the thickness of the adjusting ring (1, Figure 75).

Figure 89

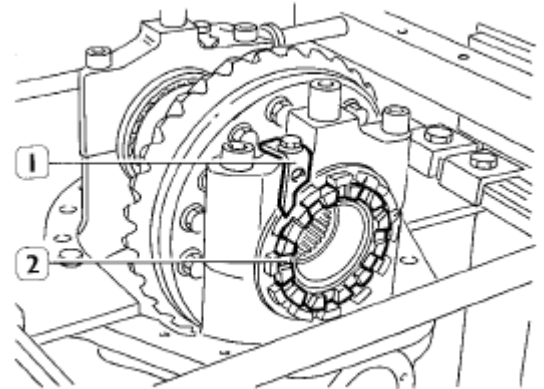


42593

Assemble the safety plate (1); tighten the screws to the correct torque.

Fit the circlip and key the sleeve (2) for the differential lock.

Figure 90

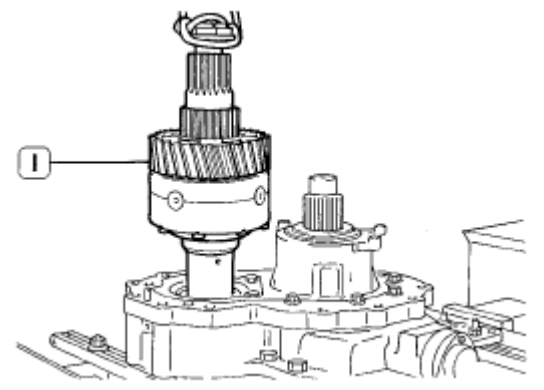


42542

Disassemble the gear unit (2, Figure 80) and assemble the differential - flow divider unit (1).

Aquila Trucks Centres


Figure 91

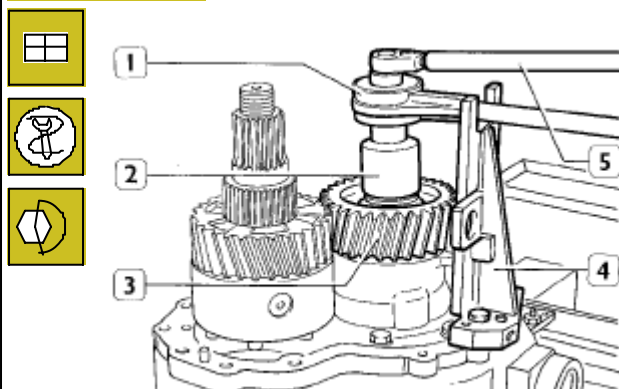

Remove the gear unit (3) and fit tool 99363310 (4), blocking gear unit (3) rotation.

Using Allen wrench 99355131 (2), multiplier 99389816 (1) and a torque wrench (5) tighten the gear nut to the correct torque value.


Figure 92

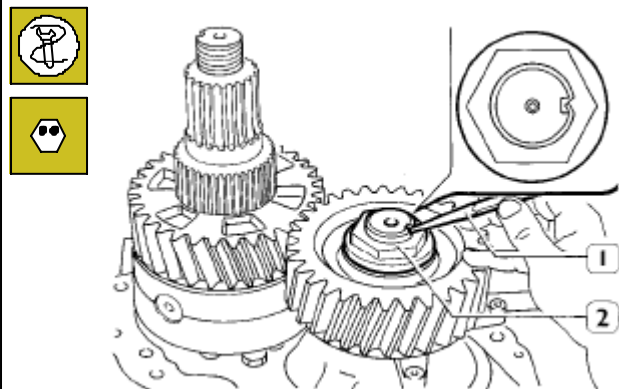

42595

Using a punch (1) secure the ring nut (2) as shown in the drawing.

Figure 93

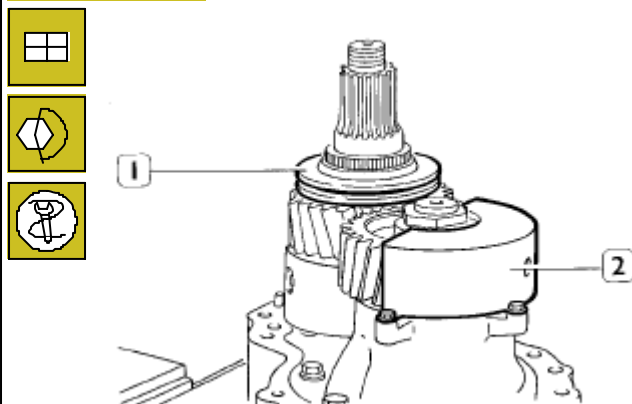

42596


Assemble the oil feed (2) and tighten the screws to the correct torque; key the sliding sleeve (1).

Figure 94




Assemble the control (1) with the differential lock fork. Apply a bead of LOCTITE 573 on the contact surface.

Figure 95

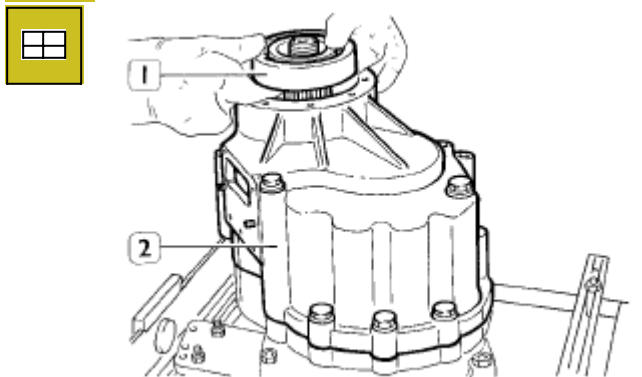

Fit the cover (2) and tighten the screws to the correct torque. Heat the bearing internal ring (1) and key on the input shaft.

Figure 96

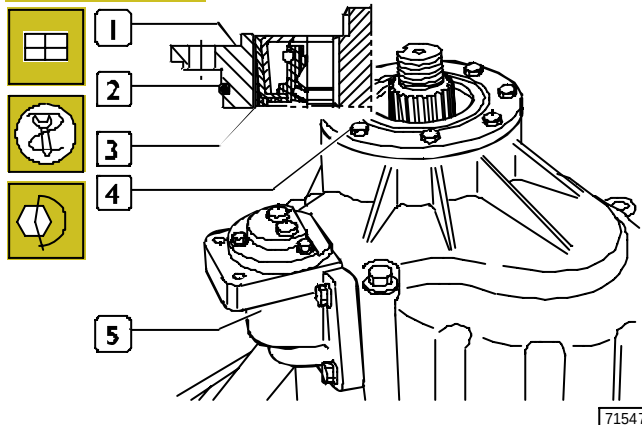


71547

Assemble the cover (1), complete with internal (3) and external (2) seal rings, and tighten the screws to the correct torque. Fit the flow divider locking cover (5).

NOTE To fit the internal seal ring (3), use keying device 99374013 and grip 99370006.


Aquila Trucks Centres

Figure 97

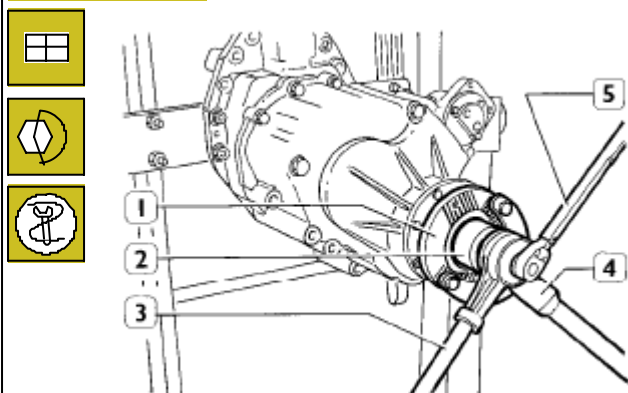

Rotate the unit. Fit the flange (1) on the input shaft. Tighten the nut to the correct torque value using Allen wrench 99355131 (2).

Figure 98

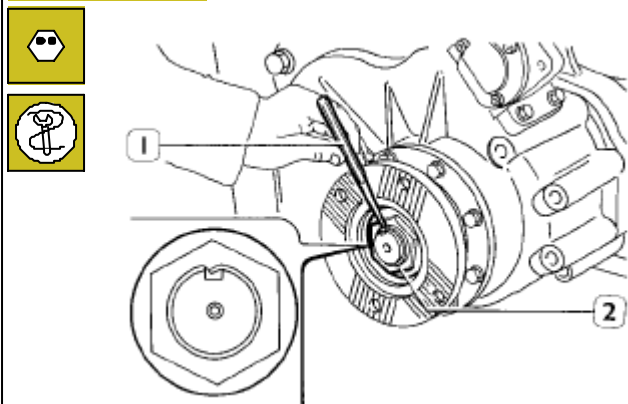

Using a punch (1) secure the ring nut (2) as shown in the drawing.

Aquila Trucks Centres

Aquila Trucks Centres

5250	Rear axles	
	451391/2D (R 8284)	
	452191/2D (R 8274)	
	453291/2D (R 8298)	
		Page
DESCRIPTION		135
MAIN DATA		136
TIGHTENING TORQUES		137
TOOLS		139
REAR AXLES ASSEMBLY OVERHAUL		144
- Removal		144
- Epicyclic reduction gear disassembly		144
- Wheel hub disassembly		145
CHECKING THE WHEEL HUB AND EPICYCLIC REDUCTION GEAR UNIT PARTS		147
WHEEL HUB ASSEMBLY		148
- Assembling the epicyclic reduction gear		150
REMOVING-REFITTING THE DIFFERENTIAL ..		153
REFITTING		154
REPAIRING THE DIFFERENTIAL		155
- Disassembly		155
- Differential housing disassembly		156
- Removing the bevel pinion support		157
CHECKING THE DIFFERENTIAL COMPONENTS		159
- Differential housing assembly		160
- Assembling the bevel pinion support		161
- Procedure to follow to determine the thickness of the bevel pinion rolling torque adjusting ring		161
- Differential carrier assembly		163
- Differential housing bearings rolling torque adjustment		164

Aquila Trucks Centres

Aquila Trucks Centres

DESCRIPTION

The rear axle is of the double reduction type; the first reduction is provided by the bevel pinion/ring bevel gear, whereas the second reduction is by means of an epicyclic unit on the wheel hubs.

The differential housing (with ring bevel gear) is supported by taper roller bearings, which can be adjusted by means of two threaded ring nuts.

The bevel pinion is supported by two taper roller bearings and a third straight roller bearing.


The bevel pinion can be adjusted by means of adjustment rings located between the two taper roller bearings.

The axle is provided with a pneumatic device for differential locking.

The axle shafts start from the differential and transmit drive to the epicyclic reduction units.

The drum brake is of the Duo/Duplex type.


Figure 1

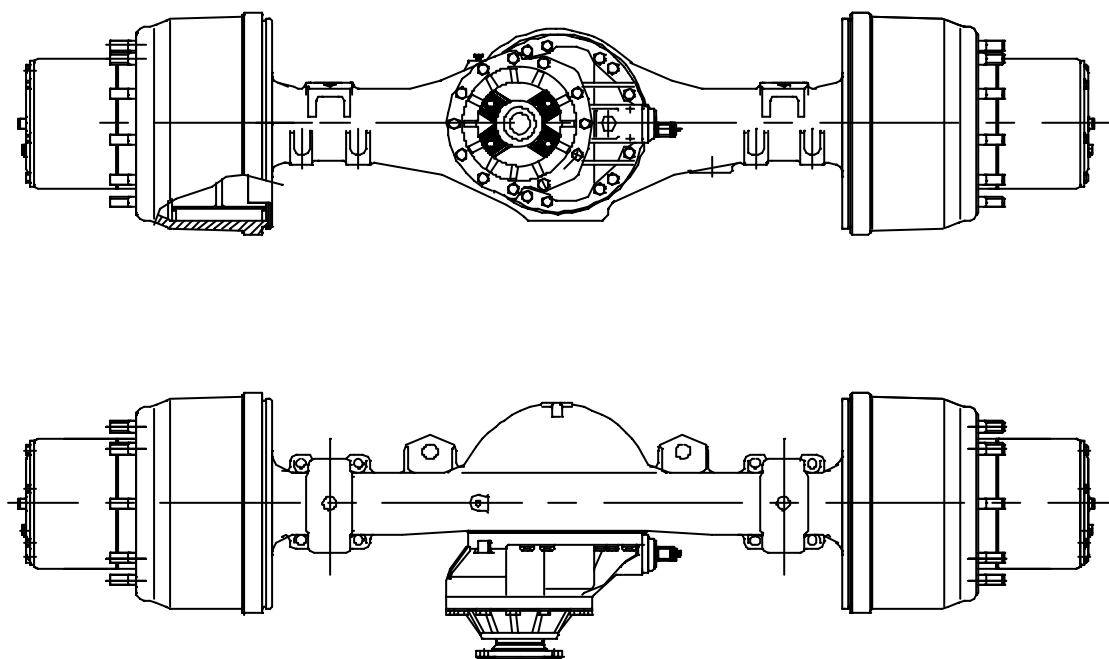

REAR AXLE 451391/2D

71548

Figure 2







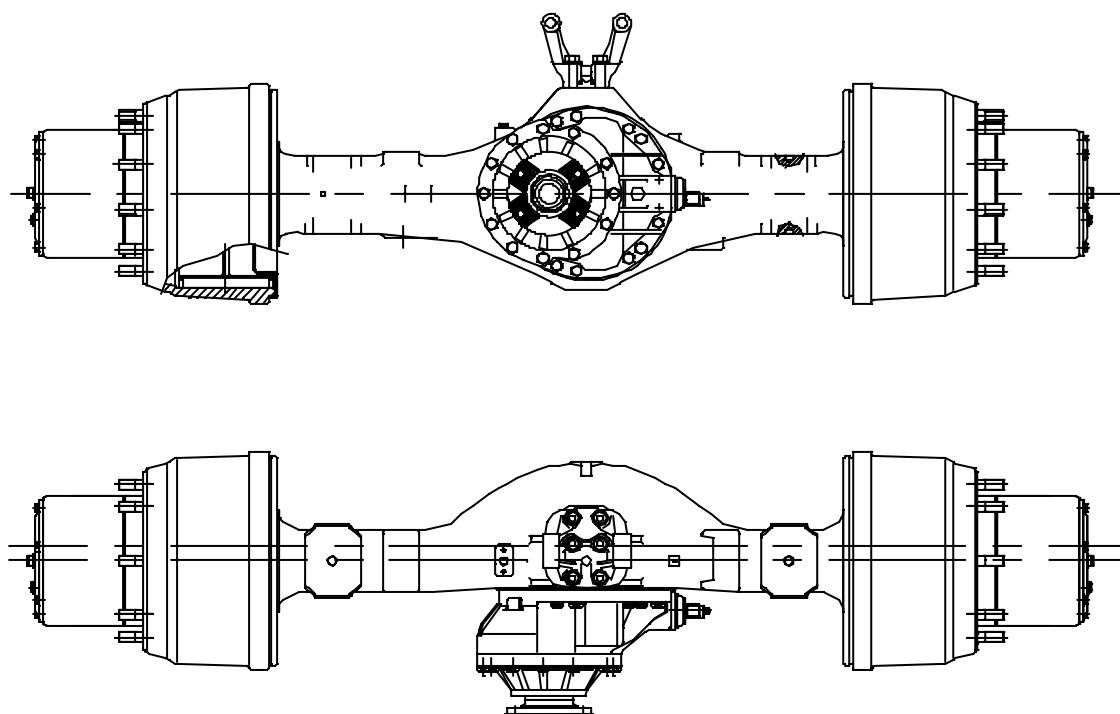


REAR AXLES 452191/2D - 453291/2D

71549


Aquila Trucks Centres

       MAIN DATA

	Type of axle: Load-bearing, double reduction with pneumatically controlled differential locking	452191/2D (R8274)	451391/2D (R8284)	453291/2D (R8298)
	Bevel pinion bearings	2 taper rollers and 1 straight roller		
	Bevel gear reduction unit ratio	27/32 (1.185) - 29/37 (1.276) - 27/37 (1.370) - 28/37 (1.321) - 24/35 (1.458) - 23/36 (1.565) - 21/34 (1.619) - 19/33 (1.737) - 21/40 (1.905) - 17/35 (2.059)		
	Epicycoid reduction unit/wheels ratio	3.2		
	Bevel pinion bearing rolling torque without seal Nm	1.5 ÷ 3.5		
	Bevel pinion bearing rolling torque adjustment	with adjustment rings		
	Thickness of bevel pinion bearing rolling torque adjustment rings mm	9.80 ÷ 10.80 (series of increased thicknesses = 0,02 mm)		
	Thickness of bevel pinion/ring bevel gear position adjustment rings mm	3.6 - 3.7 - 3.8 - 3.9 - 4.0 - 4.1 - 4.2 - 4.3 - 4.4 - 4.5 - 4.6		
	Clearance between pinion and ring bevel gear mm	0.20 ÷ 0.33		
	Adjustment of clearance between pinion and ring bevel gear	with ring nuts		
	WHEEL HUBS			
	Wheel hub bearings	2 taper rollers		
	Wheel hub bearings rolling torque: new bearings with surface protection Nm	6 ÷ 7 + (12 ÷ 16)		
	Wheel hub bearings rolling torque: run in bearings and new, lubricated seals Nm	6 ÷ 7 + (5 ÷ 7)		
	Wheel hub bearings rolling torque: run in bearings and seals Nm	6 ÷ 7 Nm + (2.5 ÷ 4.5 Nm)		
	Drive shaft end float mm	0.5 ÷ 1		
	Axle oil	TUTELA W140/MDA 16 14.5		
	G.R.W. maximum load kg	11.000	13.000	16.000

Aquila Trucks Centres

Figure 3

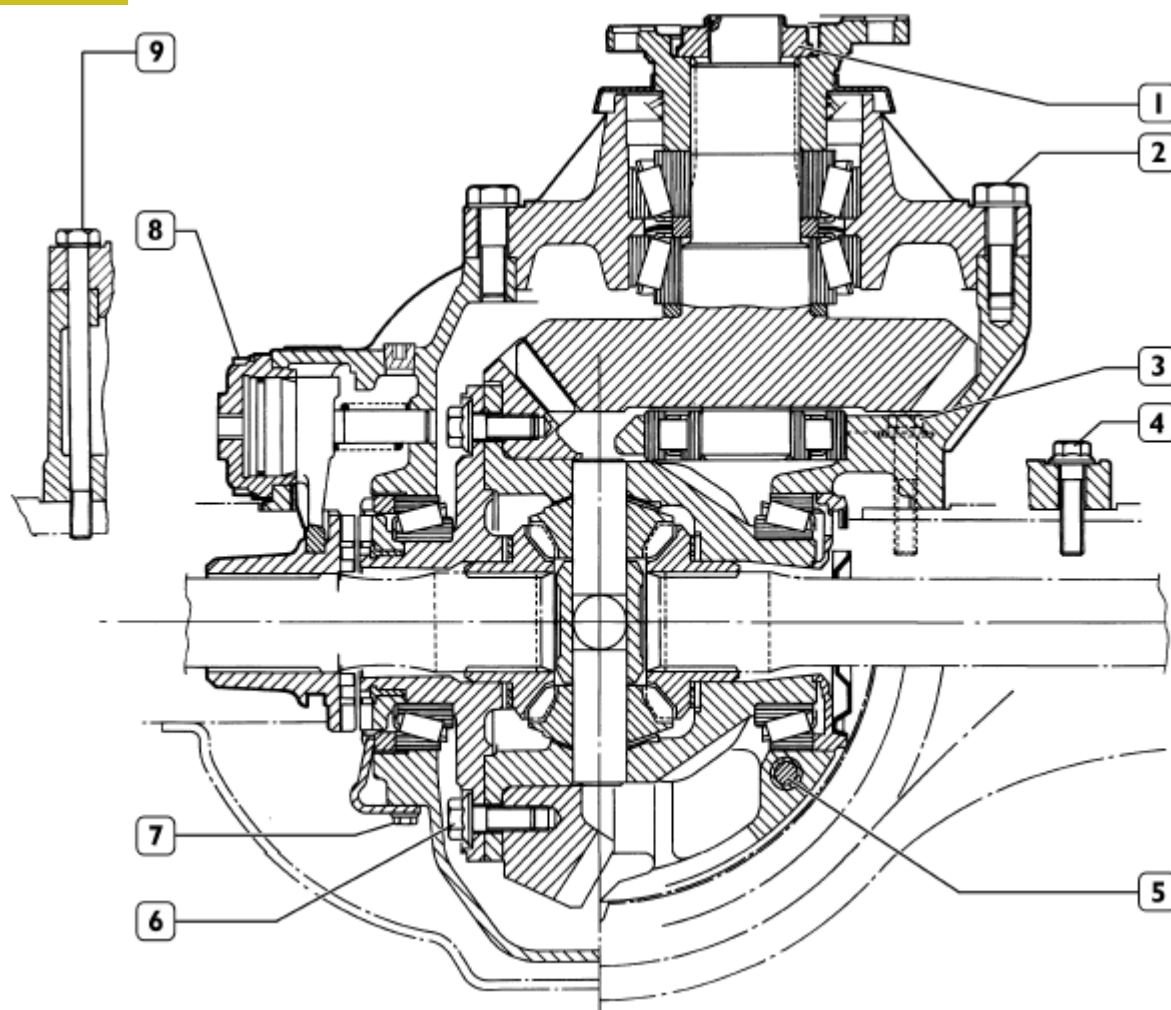

115270

TIGHTENING TORQUES


DESCRIPTION		TORQUE	
		Nm	kgm
1	Nut fixing bevel pinion	700 ± 50	70 ± 5
2	Screw fixing bevel pinion support to differential carrier	165 ± 15	16.5 ± 1.5
3	Screw fixing differential carrier to axle	160 ± 10	16 ± 1
4	Screw fixing differential carrier to axle *	160 ± 10	16 ± 1
5	Screw fixing bevel pinion support to differential carrier *	280 ± 15	28 ± 1.5
6	Screw fixing ring bevel gear to differential housing 1 st stage 2 nd stage	100 300 ± 10	10 30 ± 1
7	Screw fixing safety plate to gear housing cover	60 ± 6	6 ± 0.6
8	Cheese headed screw fixing control cylinder	25 ± 2	2.5 ± 0.2
9	Self-locking screw	120 ± 10	12 ± 1

D apply LOCTITE AVX

◆ apply LOCTITE 573

Aquila Trucks Centres

Figure 4

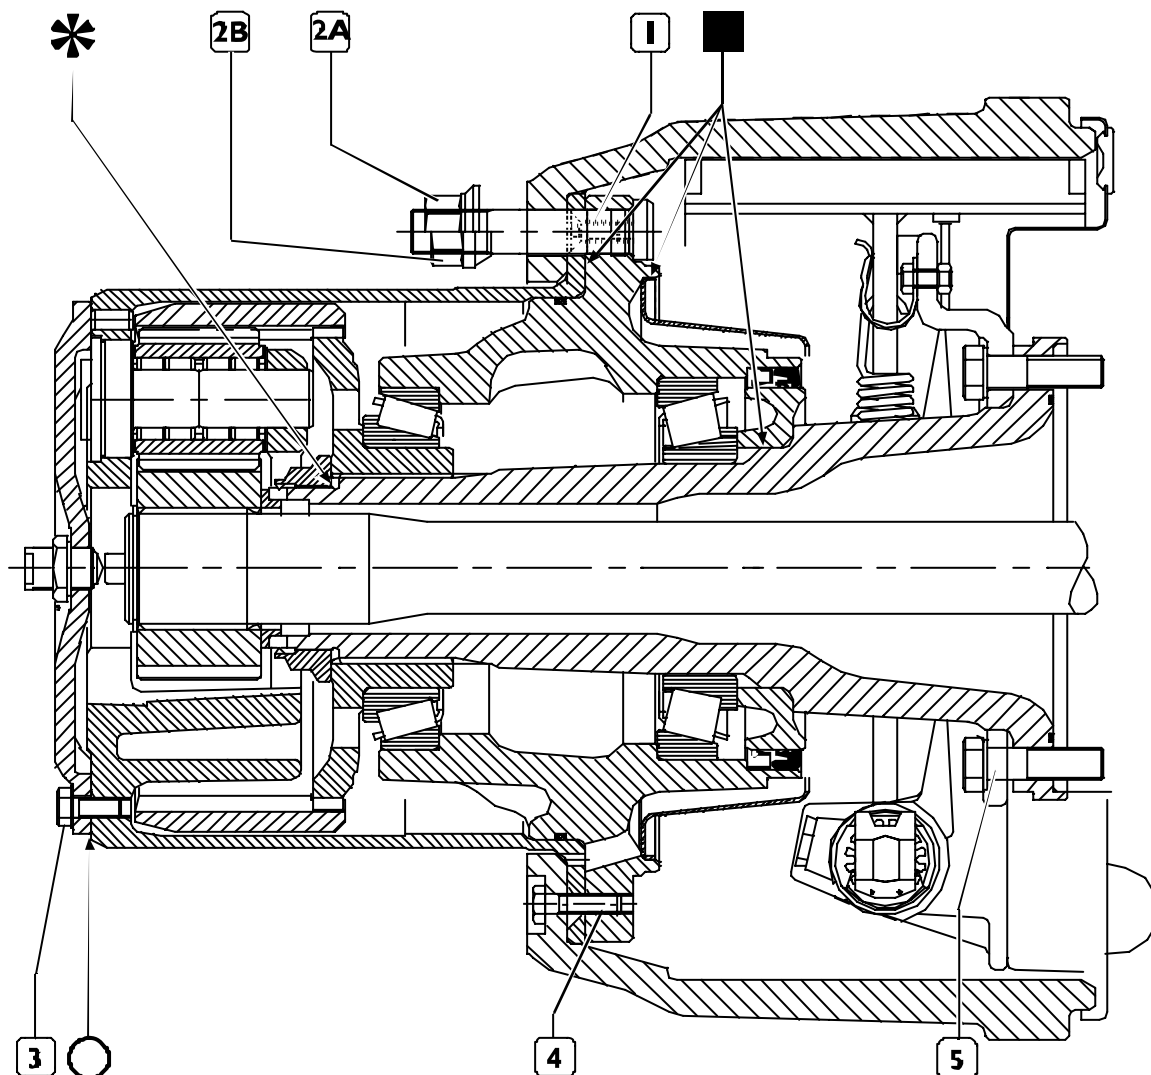

115268

TIGHTENING TORQUES

DESCRIPTION	TORQUE	
	Nm	kgm
1 Countersunk screw fixing drum	25 ± 3	2.5 ± 0.3
2A Nut fixing wheel	615 ± 35	61.5 ± 3.5
2B Nut fixing wheel	415 ± 35	41.5 ± 3.5
3 Screw fixing cover to side pinion support h	50 ± 5	5 ± 0.5
4 Countersunk screw	50 ± 5	5 ± 0.5
5 Screw fixing load bearing sleeve	295 ± 30	29.5 ± 3

d apply LOCTITE 5970 on connection surface






h apply LOCTITE 573 on thread

H apply LOCTITE 573 on mating surface




: apply MOLYKOTE on the nut contact surface

Aquila Trucks Centres





TOOLS

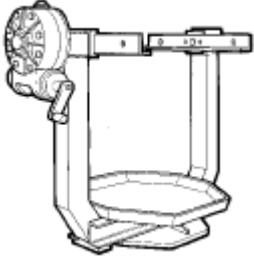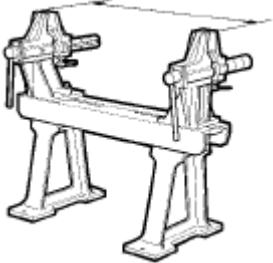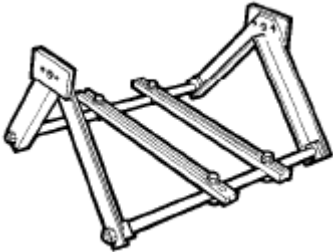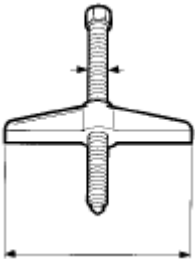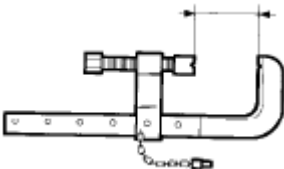TOOL NO.	DESCRIPTION
99305121 	Hot air device
99322205 	Rotating stand for assembly overhaul
99322215 	Stand for axles overhaul
99322225 	Support for assemblies (to be fitted onto stand 99322205)
99341003 	Single-acting bridge
99341015 	Press







Aquila Trucks Centres

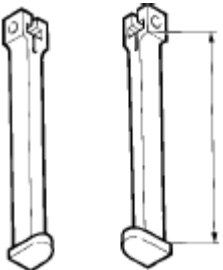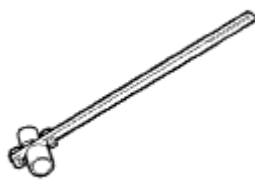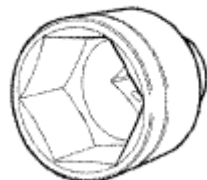TOOL NO.	DESCRIPTION	
99341020		Pair of tie rods for grips
99341023		Grips
99345055		Reaction block for extractors
99354001		Wrench for differential gear housing bearing adjustment ring nuts
99354207		Wrench (94.5 mm) for wheel hub bearings adjusting nut
99355081		Wrench (60 mm) for differential bevel pinion nut (use with 99370317)





Aquila Trucks Centres

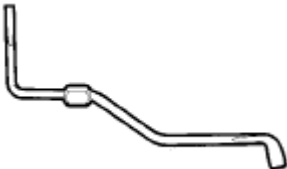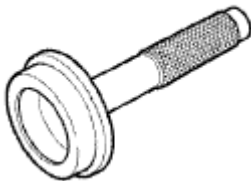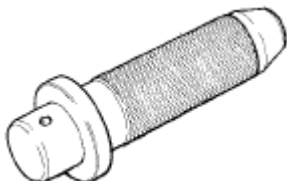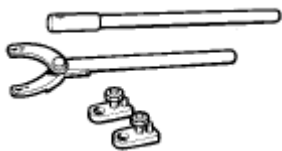TOOL NO.	DESCRIPTION	
99356001		Wrench for adjusting wheel brake jaws
99370005		Grip for interchangeable punches
99370006		Interchangeable grip for punches
99370007		Interchangeable grip for punches
99370317		Reaction lever with extension for flange retaining
99370509		Hook to extract differential gear half-housing

Aquila Trucks Centres

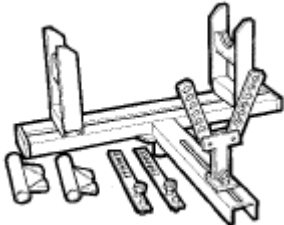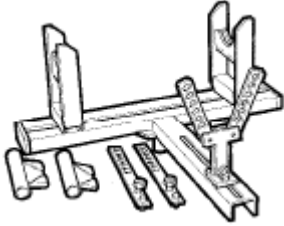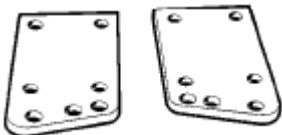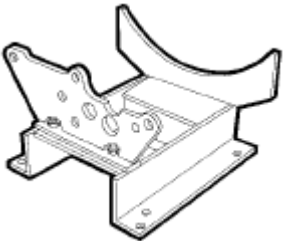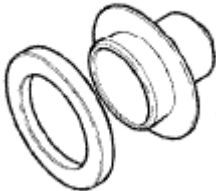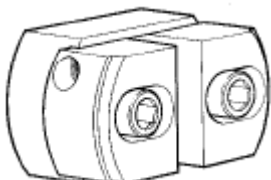TOOL NO.	DESCRIPTION	
99370616		Mounting for removal and refitting of differential
99370617		Universal mounting to support axles during removal and refitting
99371022		Pair of differential support brackets for use during overhaul (use with 99322205-99322225)
99372211		Tool for removal and refitting of brake jaws retaining springs
99374013		Key to fit flow divider drive infeed shaft seal (use with 99370006)
99374093		Punch to fit external races of bearings (use with 99370007)

Aquila Trucks Centres

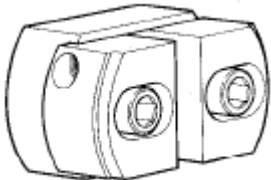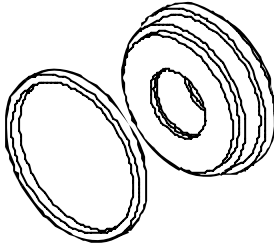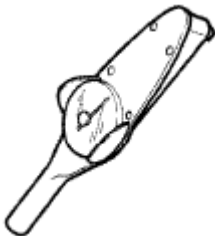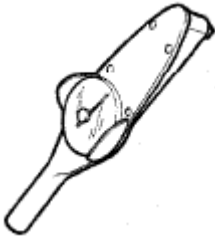TOOL NO.	DESCRIPTION
99374094	 Punch to fit external races of bearings (diameter 134 - 215 mm use with 99370007)
99374161	 Key for assembly of wheel hub internal seals
99374451	 Tool for axle shaft disassembly-assembly
99389819	 Torque wrench from 0 to 10 Nm with 1/4" square connection
99389821	 Torque wrench from 0 to 70 Nm with 3/8" square connection
99395026	 Tool to check rolling torque of hubs (use with torque wrench)


Aquila Trucks Centres

525010 REAR AXLES ASSEMBLY OVERHAUL**Disassembly**

NOTE The drive shafts - brake drums and jaws - air breather - wheel hubs differential and epicycloid reduction units removal-refitting operations, can all be carried out with the units fitted on the vehicle.


Before positioning the axle assembly on the overhaul stand, drain off the oil by unscrewing the lower plug on the axle housing.

Figure 5

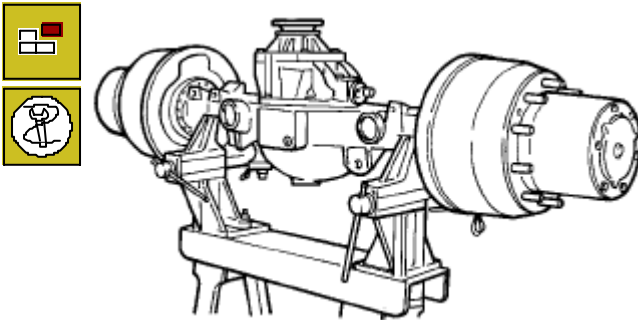

Position the axle assembly on stand 99322215.

Figure 6

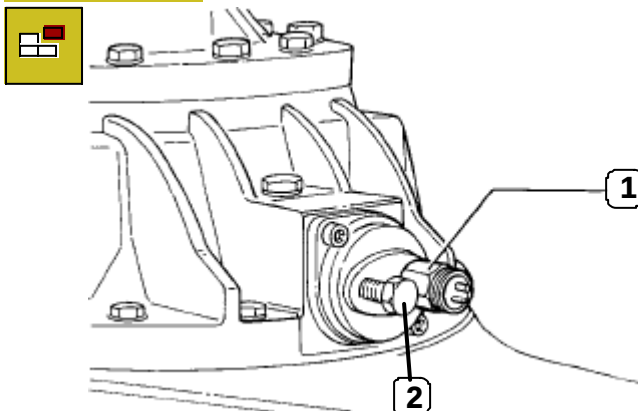


Block the differential locking device sliding sleeve with a screw.
Remove the control cylinder threaded coupling (2) and replace with a screw (1) (M 14 x 1.5).
Rotate the axle mechanism to facilitate engagement between the sliding sleeve and the engagement sleeve; this will avoid involuntary sleeve movement whilst the drive shaft is being extracted.

NOTE Position a container under the wheel hub to recover the oil.

! Before extracting the axle shaft make sure that the screw has been tightened (2, Figure 6).

Epicyclic reduction gear disassembly


Figure 7

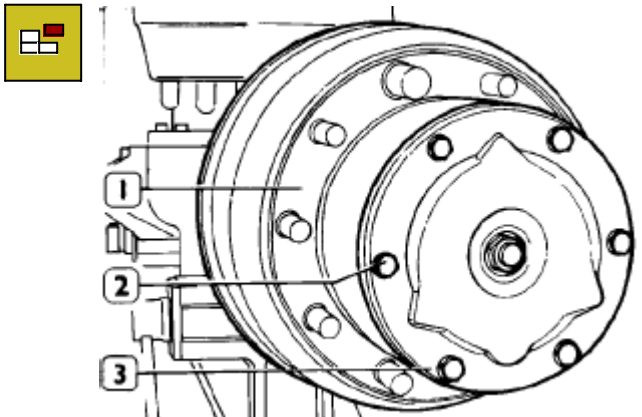

71534

Unscrew the screws (1), remove the cover (3) and drain off the oil into the container.


Figure 8

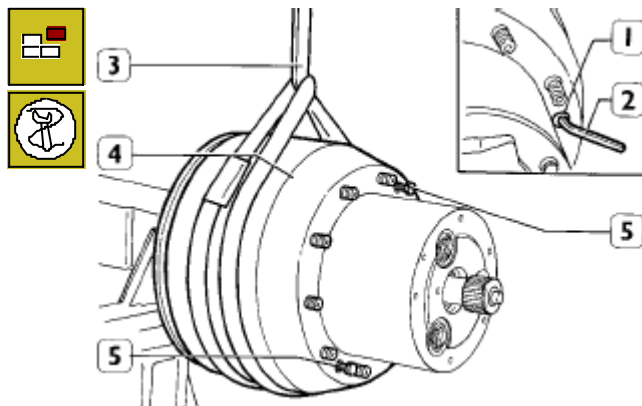

40338

Using an Allen wrench (2) unscrew the two screws (1) fixing the drum; replace with the reaction screws (5). Tighten the reaction screws and remove the drum (4) from the hub and, using a sling (3), raise and remove.

Figure 9

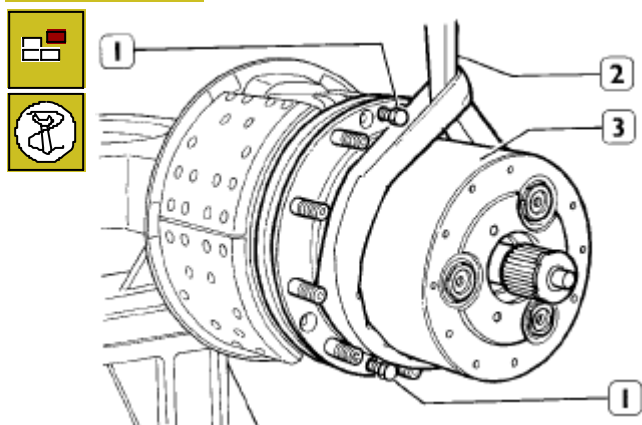


40054

Unscrew the 3 side pinion (3) fixing screws; tighten the reaction screws (1) and, using a sling (2), remove the support (3).


Aquila Trucks Centres

Figure 10

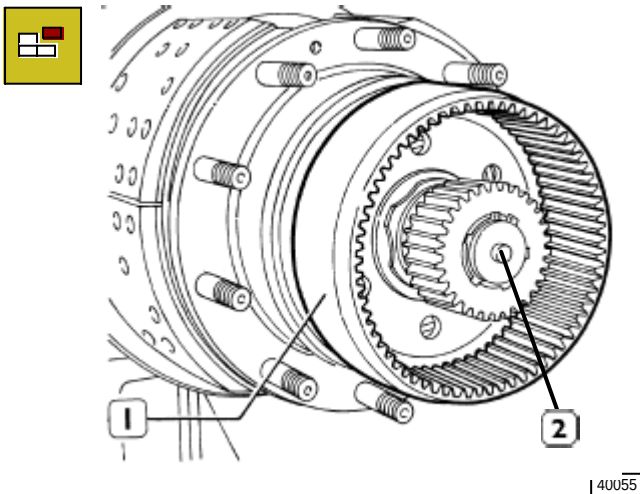


Remove the bevel gear (1) from the mounting.
Remove the shoulder pin (2).

Figure 11

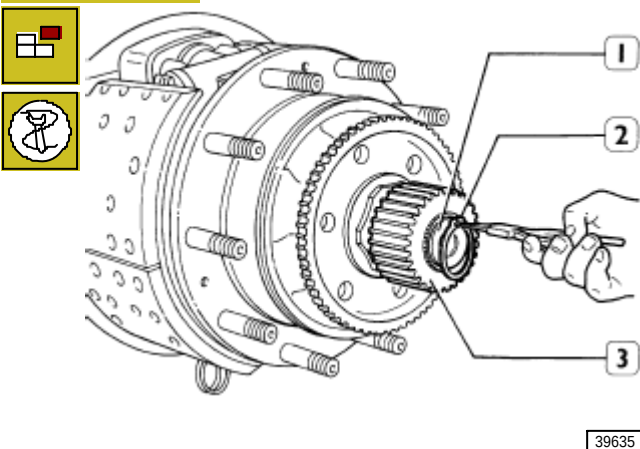


Using suitable pliers, remove the safety ring (2), extract the gear unit (3) from the drive shaft.

Figure 12

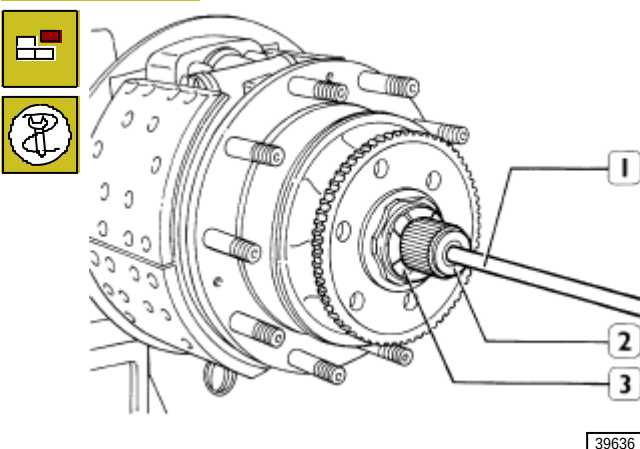

Fit tool 99374451 (1) in the shoulder pin seat and extract the drive shaft (2) from the load bearing sleeve.
Remove the spacer ring (3).


Figure 13

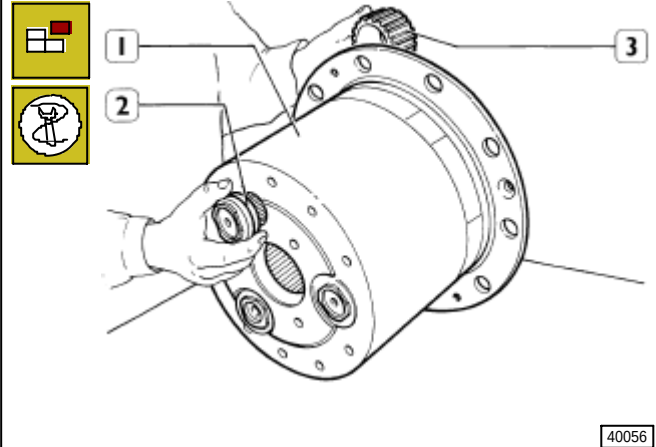

Extract the support pins (2) from the side pinion support (1).
Remove the side pinions (3) from the support (1) and recover the rollers and the spacer rings.


525130 Wheel hub disassembly

Figure 14

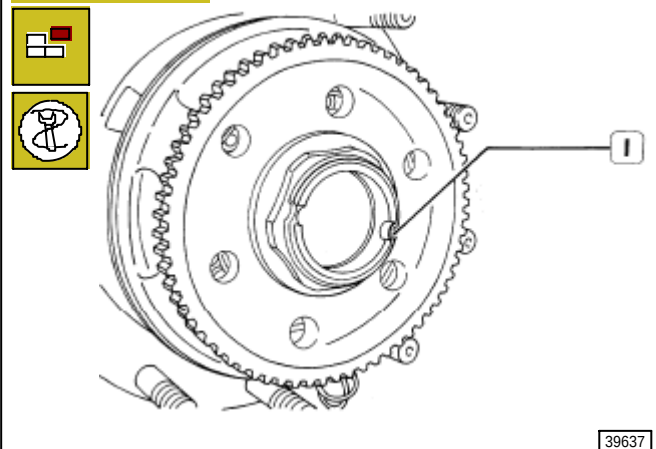

Using a punch, remove the notch (1) on the adjusting nut.


Figure 15

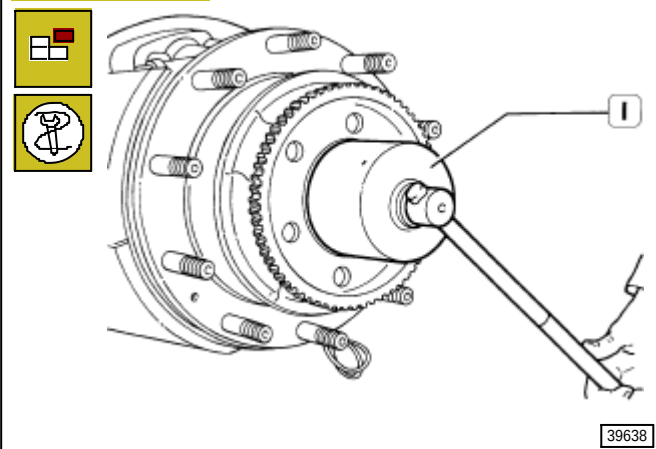

Using Allen wrench 99354207 (1), unscrew the adjusting nut.

Aquila Trucks Centres


Figure 16

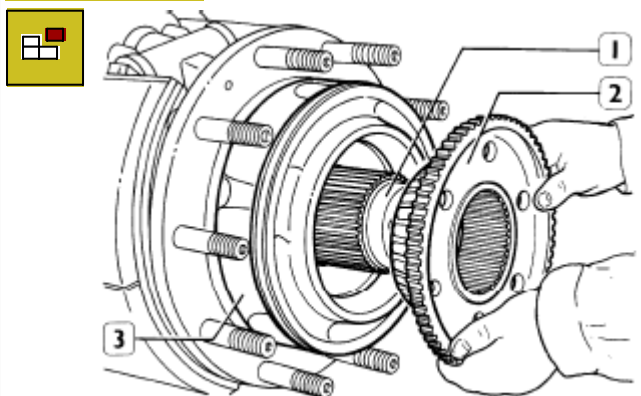

39639

Extract the bevel gear mounting (2), together with the bearing and wheel hub (3), from the load bearing sleeve (1).

Figure 17

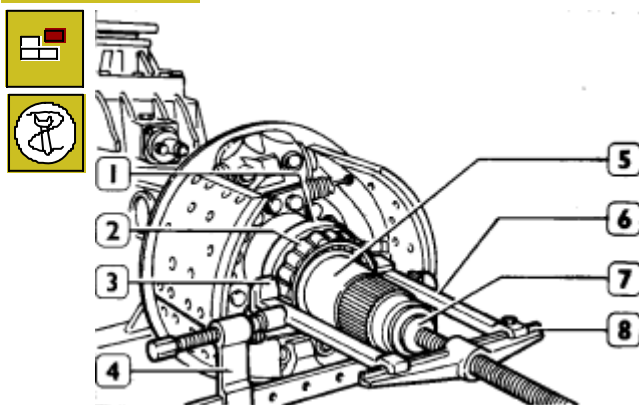


71535

Check the surface of the ring (1), on which the hub seal ring rotates, is not damaged or worn, if necessary, replace the ring (1).

Using the extractor [comprising bridge 99341003 (8), grips 99341023 (3), tie rods 99341020 (6), press 99341015 (4) and reaction block 99345053 (7)], extract the ring (replacing if necessary) and/or the internal ring (2) of the sleeve (5) taper bearing.

Figure 18

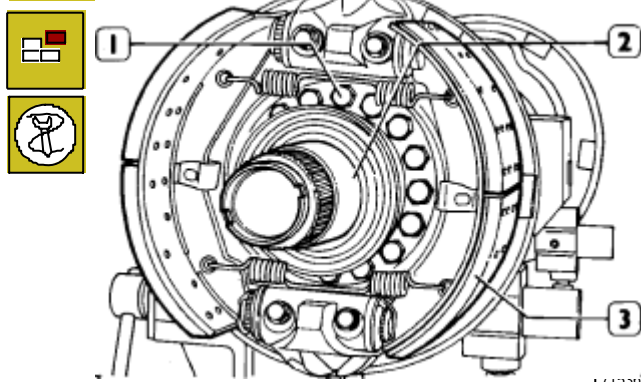


113304

Check the load bearing sleeve (2). If damaged, replace as follows.

Unscrew the screws (1), remove the brake support plate (3) and the axle casing sleeve (2).

NOTE Screws (1) are secured with LOCTITE AVX.


Figure 19

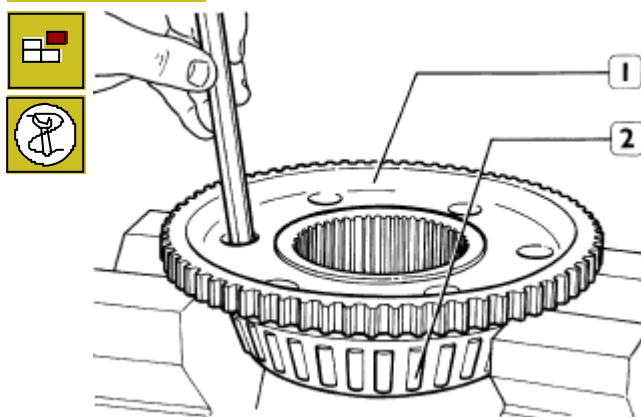

39642

Using a punch inserted through the holes on the bevel gear support, extract the external taper roller bearing (2) from the bevel gear support (1).


Figure 20

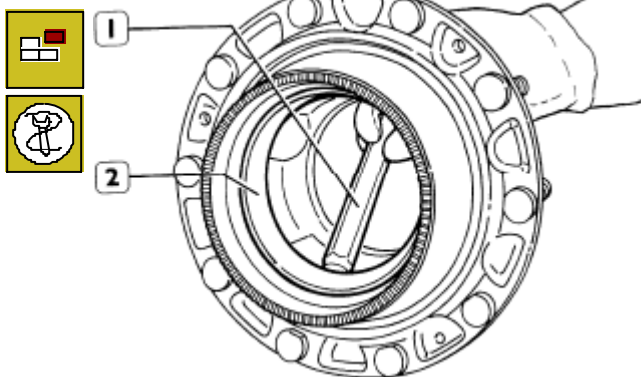

Using a universal bronze punch (1), extract the external ring (2) for the internal bearing. The seal ring will also be extracted. Proceed in the same way to extract the external bearing external ring. If necessary, disassemble the phonic wheel.

Aquila Trucks Centres

Figure 21

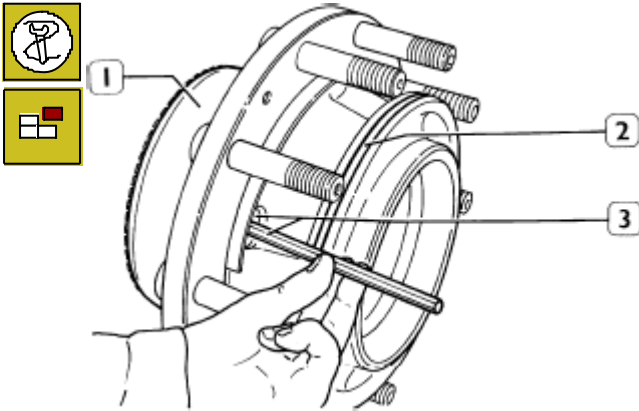

39644

Check the oil manifold (1) and replace if damaged. Extract with a punch inserted in the slots on the hub (3). Remove the seal ring (2).

CLEANING AND CHECKING WHEEL HUB AND EPICYCLIC GEAR PARTS

Carefully clean the wheel hub parts. Check the drive shafts for deformation. If necessary, straighten the drive shafts using a hydraulic press; if this does not provide satisfactory results, replace the drive shafts. Check the studs fixing the wheel: if the threads are damaged or deformed they must be replaced. Work under a press to extract and re-assemble the studs. On completion of assembly operations, check that the orthogonal deviation is no greater than 0.3 mm. Lubricate the bearings and make sure that the roller support cage rotates freely, rotation should be smooth, without hardening.

Check the threads on the hub bearings adjustment nuts and on the load bearing sleeves; replace the nuts if necessary. Check the oil manifold and replace if damaged.

Replace all seals with new parts.


Carefully clean all the epicycloid gear unit parts. Visually check the toothing on the bevel gear support, the bevel gear, the crown wheel gears and the open gear unit.

Check the spacer rings, distance ring, bearing rollers and support pins.

Replace any damaged or worn parts.



Figure 22

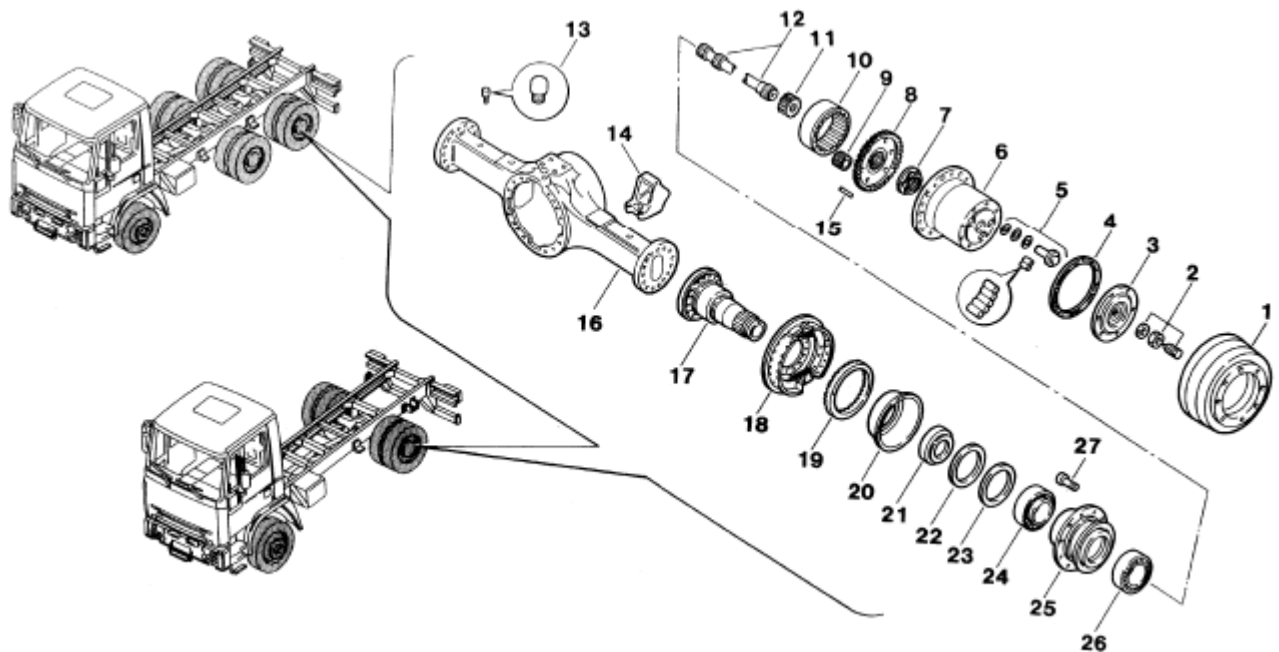

40430


WHEEL HUB PARTS

1. Brake drum - 2. Adjusting nut and screw - 3. Cover - 4. Seal - 5. Pin and roller for side pinions - 6. Side pinion support - 7. Adjusting nut - 8. Ring bevel gear support - 9. Side pinion - 10. Shoulder pin - 11. Ring bevel gear - 12. Drive shaft - 13. Breather - 14. Bracket - 15. Shoulder pin - 16. Axle housing - 17. Load bearing sleeve - 18. Brake unit - 19. Phonic wheel - 20. Oil sump - 21. Support ring - 22. Seal ring - 23. Seal ring - 24. Bearing - 25. Wheel hub - 26. Bearing - 27. Stud

Aquila Trucks Centres

525030 WHEEL HUB ASSEMBLY

Figure 23

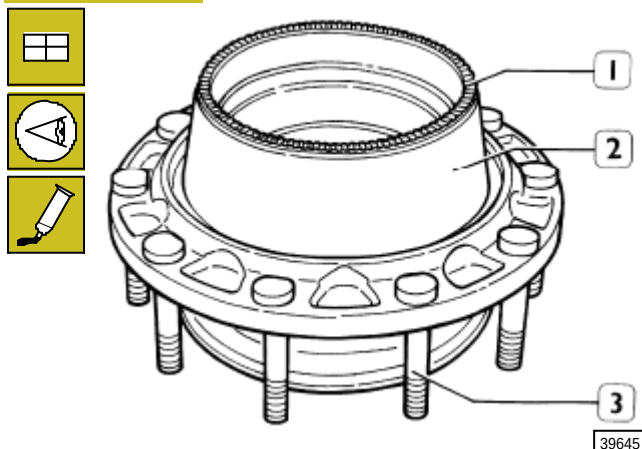


If the studs (3) need to be replaced, before fitting new studs, make sure that the contact surface on the head is free of slag, burr, blisters.

After fitting, check that the studs are fully inserted on the hub and that the right angle error does not exceed 0.3 mm.

If the oil collecting sump (2) needs to be replaced, before assembly, smear the contact surface on the hub/sump and hub/hub seat with LOCTITE 573 sealing compound.


Refit the phonic wheel (1) and, on completion, make sure that phonic wheel is positioned perfectly in the hub seat. Using a 1/100ths feeler gauge, check that the right angle error does not exceed 0.2 mm.

Figure 24

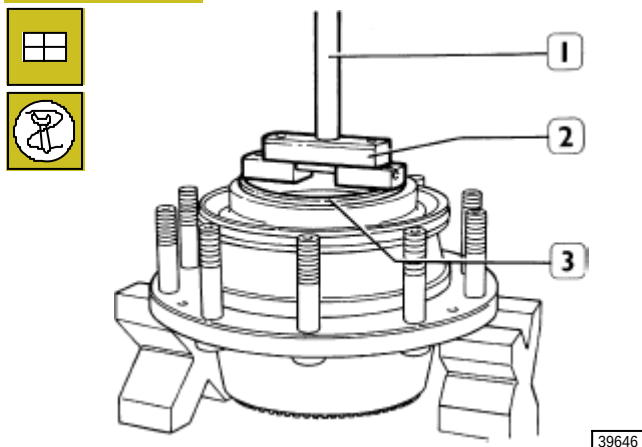


Using punch 99374093 (2) and a press, fit the external ring on the external bearing (3), stopping approx. 5 mm from the fully fitted position; complete fitting operations manually, using grip 99370007 (1).

Figure 25

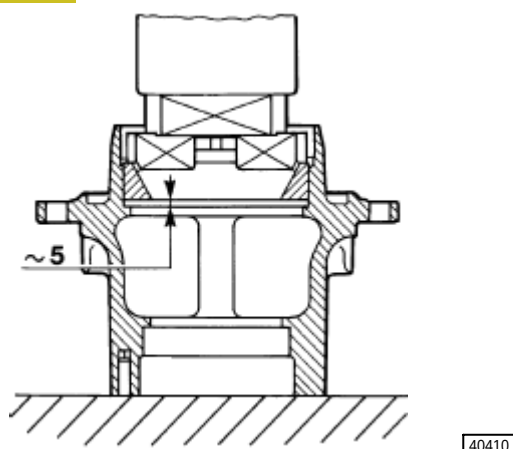


Complete fitting operations manually, using grip 99370007, then turn the hub over and carry out the same operation with the external ring of the internal bearing.

Figure 26

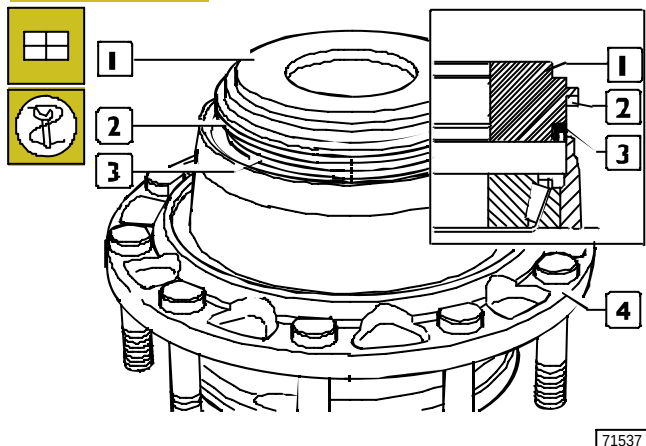

Using a hydraulic press and key 99374161 (1), with the ring (2) positioned as shown in the drawing, fit the brown internal seal ring (3) on the wheel hub (4).


Figure 27

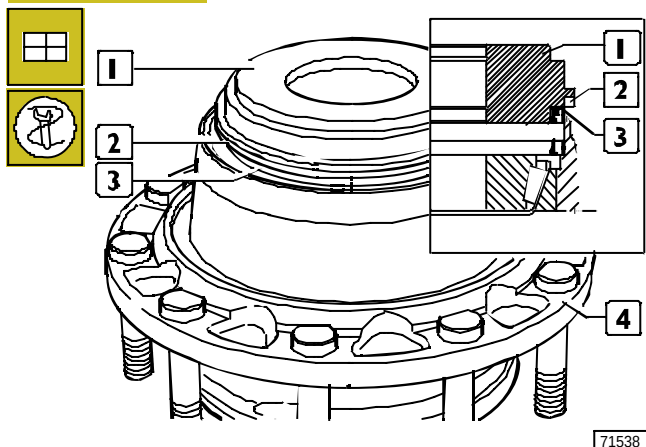

Using a hydraulic press and key 99374161 (1), with the ring (2) positioned as shown in the drawing, fit the blue seal ring (3) on the wheel hub (4).

Aquila Trucks Centres


Figure 28

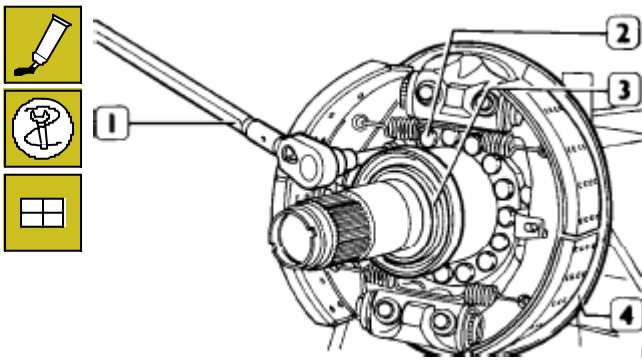

71539

Position the seal ring on the load bearing sleeve. Fit the load bearing sleeve (3), the brake support plate (4) and dust seal disk. Smear the screws (2) and tighten to the correct value with a torque wrench (1).


Figure 29

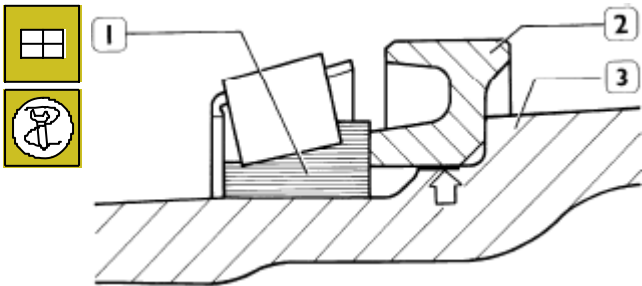

40375

Smear LOCTITE 573 on the seat (3) of the load bearing sleeve on the seal rings support ring (2). Heat the ring (2) with an electric drier and key on the load bearing sleeve (3). Heat the taper bearing internal ring (1) to 100°C and fit on the load bearing sleeve.


Figure 30

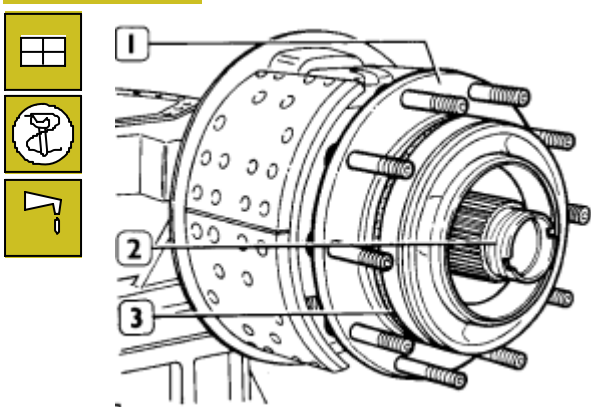

71540

Lubricate the lip of the seal rings and sleeve. Fit the hub (1) on the load bearing sleeve (2). Lubricate the seal ring (3) and fit on the wheel hub.


Figure 31

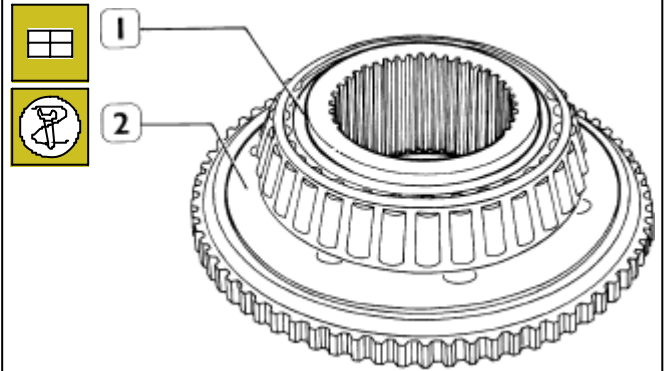

40377

Using an electric drier, heat the taper roller bearing (1) to 100°C and fit on the bevel gear support (2) with a punch.


Figure 32

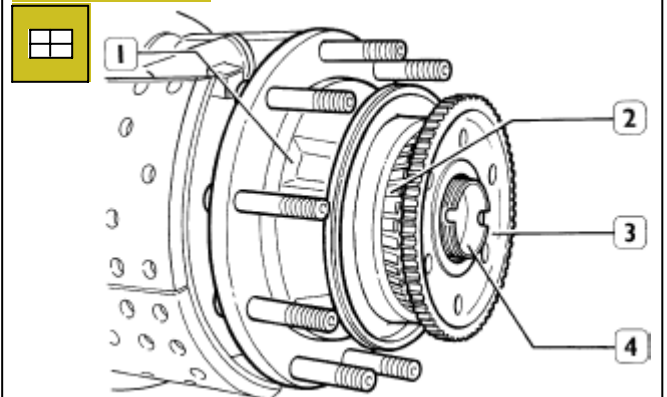

39650

Fit the bevel gear support (3) and the taper roller bearing (2) on the load bearing sleeve (4).

Figure 33

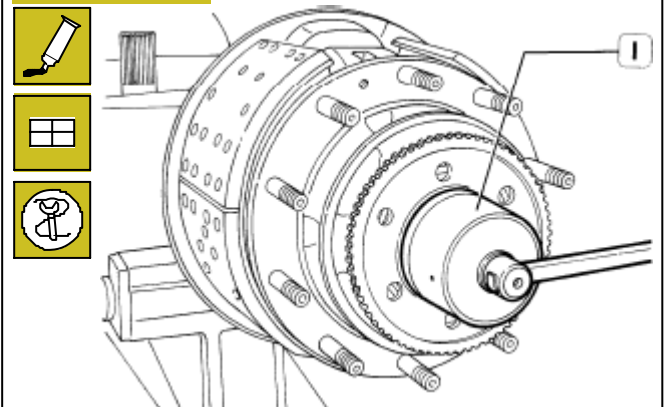


40070

Apply a thin layer of MOLYKOTE on the contact surface of the adjusting nut and tighten with wrench 99354207 (1) until the hub rotates with difficulty. Release the hub with a few blows from a hammer in the direction of the axis and in both directions.

Aquila Trucks Centres

Figure 34

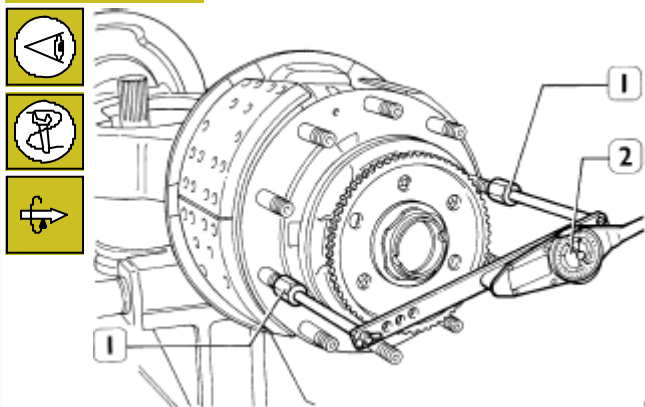

40071

Position tool 99395026 (1) and, using a torque wrench (2), read the wheel hub rolling torque.




Whilst reading the wheel hub rolling torque, hub rotation must not exceed 40 rpm.

Wheel hub rolling torque values vary according to the following conditions:

- new bearings with surface protection $6 \div 7 + (12 \div 16)$ Nm
- run in bearings and new, lubricated seals $6 \div 7 + (5 \div 7)$ Nm
- run in bearings and seals $6 \div 7 + (2.5 \div 4.5)$ Nm


Figure 35

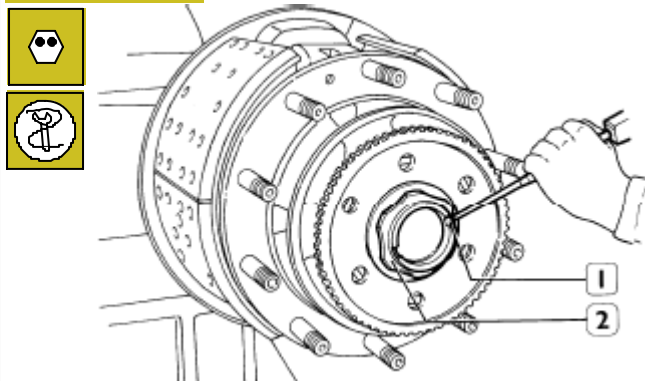

40072

Once the required rolling torque has been achieved, secure the adjusting nut (2) with a punch in the two grooves on the load bearing sleeve (1).

Figure 36

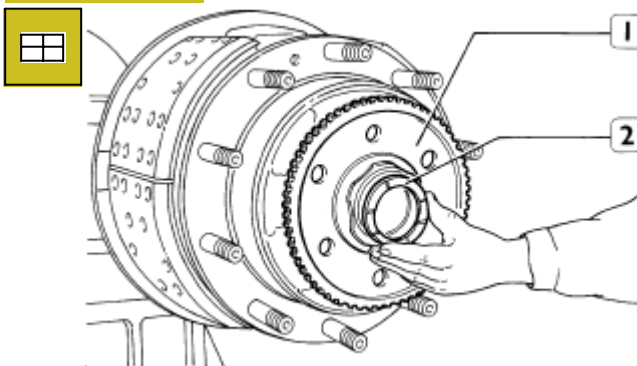


40069

Position the spacer ring (2) on the load bearing sleeve.

525140 Assembling the epicyclic reduction gear

Figure 37

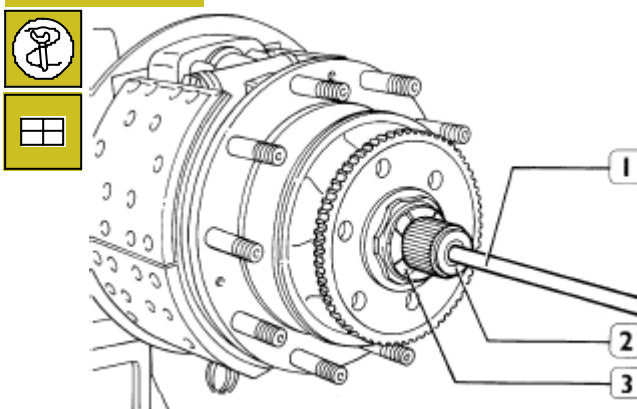


39636

Using tool 99374451 (1) introduce the drive shaft (2) on the load bearing sleeve (3).



The double toothed short half shaft is to be fitted in the bearing shaft on the differential locking side.

Figure 38

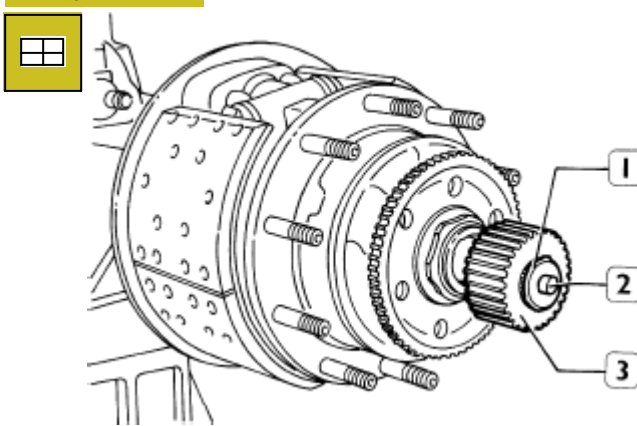


39653

Position the gear unit (3) on the grooved section of the drive shaft and the safety ring (1) in the seat. Drive the shoulder pin (2) into the seat on the drive shaft.

Aquila Trucks Centres


Figure 39

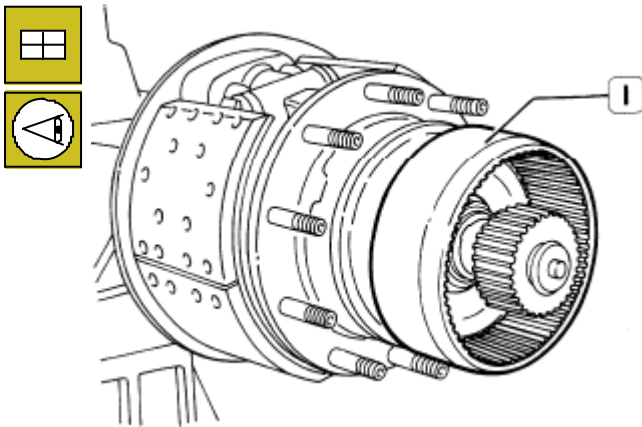

39654

Position the bevel gear (1) with the external bevel facing outwards and then fit on the bevel gear support.

Figure 40

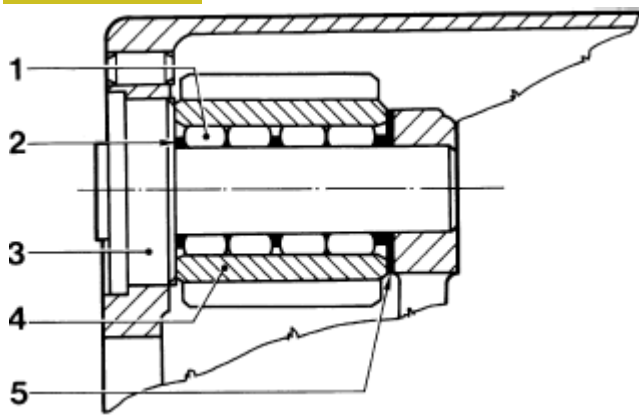


Smear the rollers (1) with grease and position, together with the three spacer rings (2) on the side pinion (4), as shown in the drawing.

Position the side pinion (4) and the spacer washer (5) in the side pinion support.

Introduce the support pin (3) from the cover side, pushing it fully into position.

Repeat the same operation for the remaining two side pinion units.

Figure 41

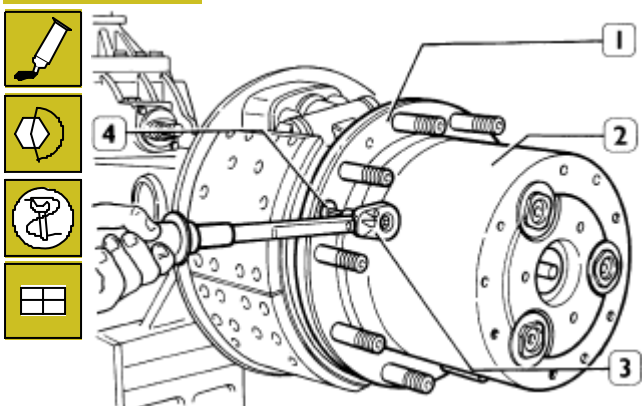


39655

Smear a thin layer of LOCTITE 573, or Reinzoplast, on the contact surfaces of the side pinion support (2) and the wheel hub (1).

Push the side pinion support (2) onto the hub by moving the drive coupling flange in both directions to facilitate toothing engagement. Make sure that the fixing holes on the side pinion support and the hub coincide.

Position the three cheese-headed screws (4) and tighten to a torque of 50 ± 5 Nm with a torque wrench (3).


Figure 42

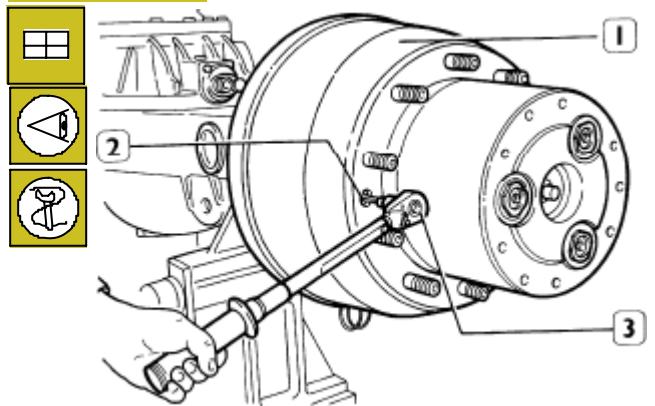

39656

Fit the brake drum (1) on the side pinion support. Secure the brake drum with the two cheese-headed screws (2) and tighten to a torque of 50 ± 5 Nm with a torque wrench (3).

Figure 43

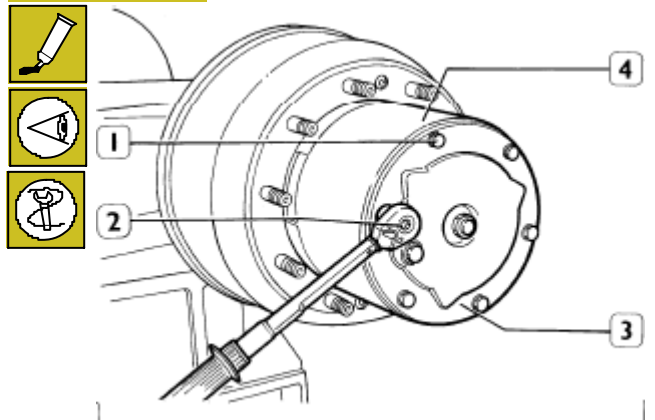

40073


Smear a thin layer of LOCTITE 510 on the cover (3) and side pinion support (4) contact surfaces.

Position the cover so that the bevels of the support pins coincide with the holes on the cover.

Smear LOCTITE 573 sealing compound on the screw (1) thread and tighten to a torque of 50 ± 5 Nm with a torque wrench (2).

Aquila Trucks Centres

Figure 44

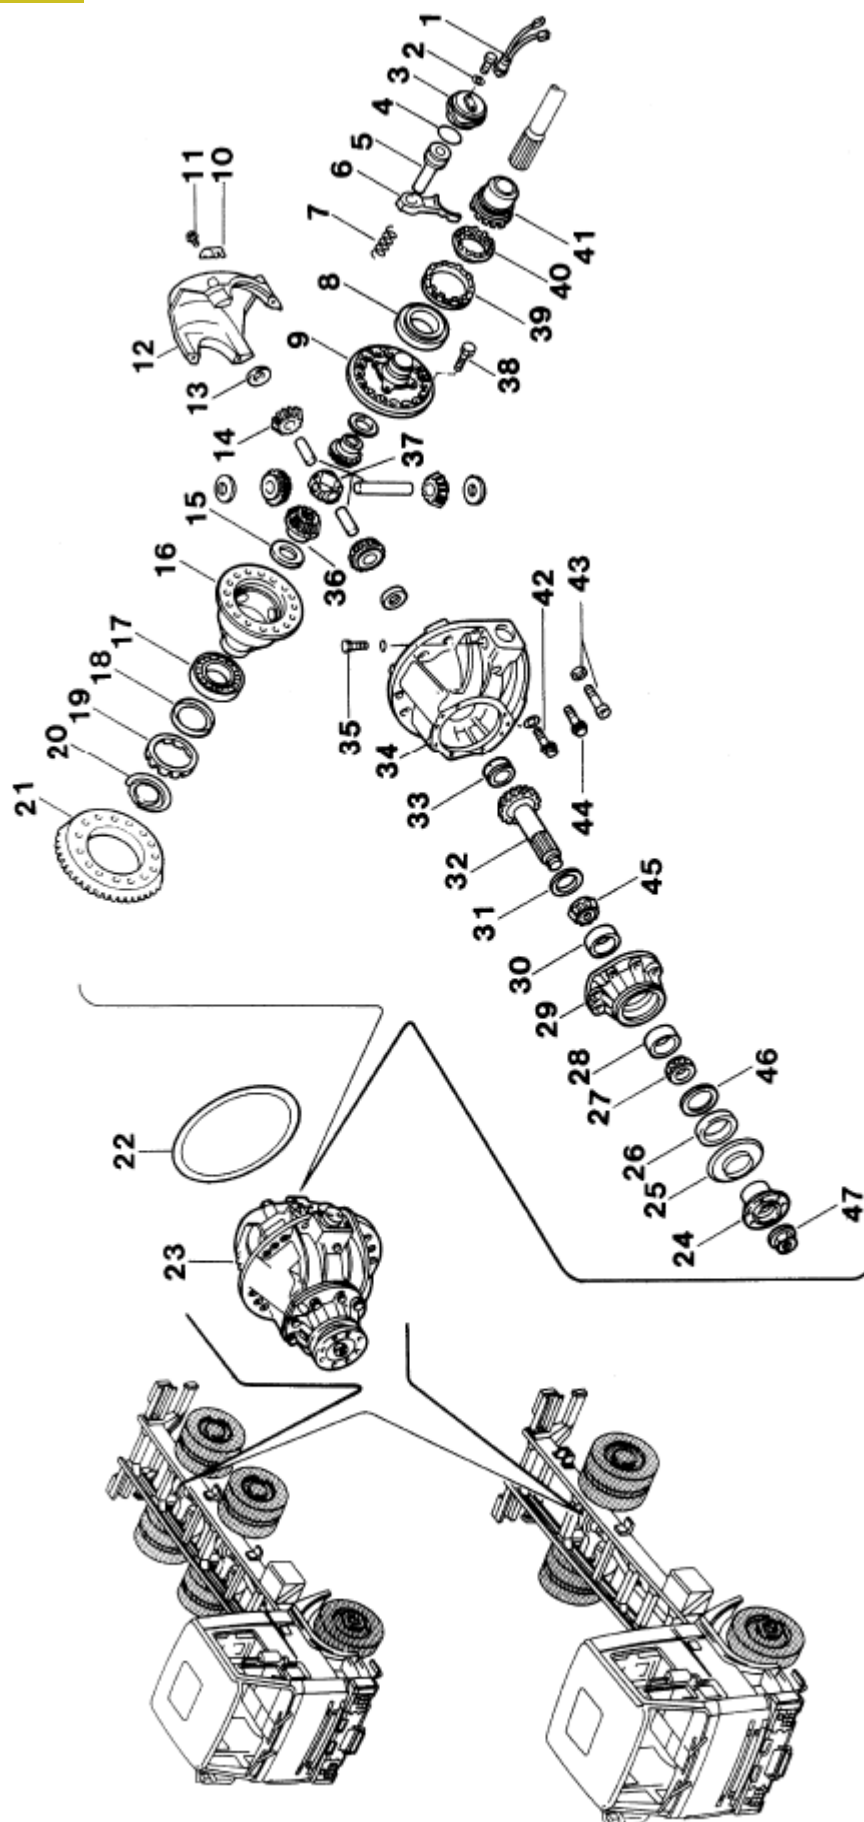


DIFFERENTIAL UNIT PARTS

1. Electric transmitter - 2. Seal and coupling ring - 3. Cover - 4. Seal ring - 5. Piston - 6. Fork - 7. Springs - 8. Bearing - 9. Cover - 10. Plate - 11. Screw - 12. Cover - 13. Washer - 14. Side pinion - 15. Shoulder washer - 16. Half-housing - 17. Bearing - 18. Ring - 19. Ring nut - 20. Oil baffle - 21. Ring baffle - 22. Seal ring - 23. Differential unit - 24. Flange - 25. Dust seal - 26. Seal ring - 27. Bearing - 28. Bearing - 29. Pinion support - 30. Bearing - 31. Pinion - 32. Pinion - 33. Bearing - 34. Housing - 35. Screw - 36. Crown wheel - 37. Cross pins - 38. Screw - 39. Ring nut - 40. Sleeve - 41. Sliding sleeve - 42. Screw - 43. Ring - 44. Bearing - 45. Ring - 46. Ring - 47. Nut

Aquila Trucks Centres

Figure 45

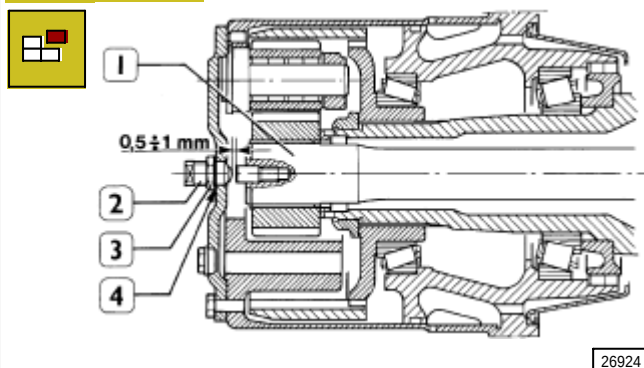


26924

The end float on the drive shaft (1) must be between 0.5 and 1 mm. To carry out this adjustment fully tighten the adjusting screw (2), then unscrew by half a turn and secure with the hex nut (3).

NOTE The flat face of the hex nut must be positioned towards the seal ring (4).

526210 REMOVING-REFITTING THE DIFFERENTIAL


Figure 46

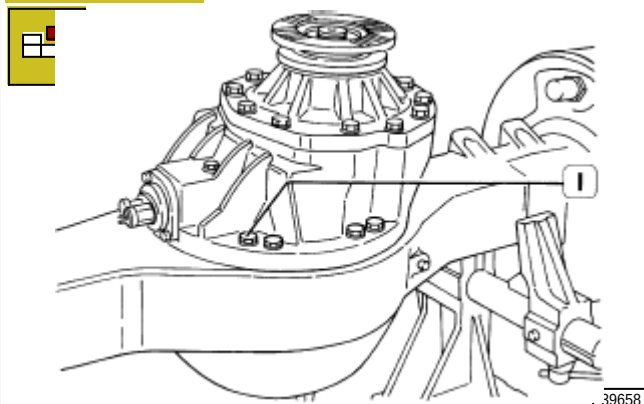

39658

Remove the screws (1) fixing the differential carrier to the axle housing.


Figure 47

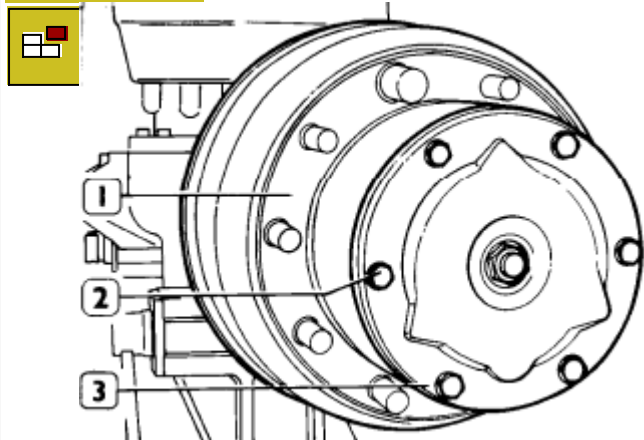

71534

Position a container under the wheel hub (1); unscrew the screws (2), remove the cover (3) and drain off the oil.


Figure 48

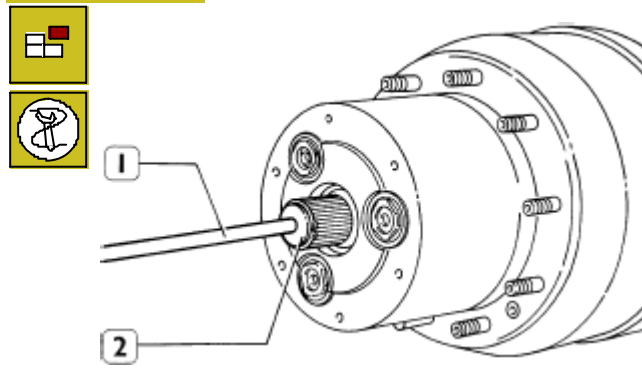

39659

Fit tool 99374451 (1) in the shoulder pin seat thread, then extract the drive shaft (2) from the load bearing sleeve.


Figure 49

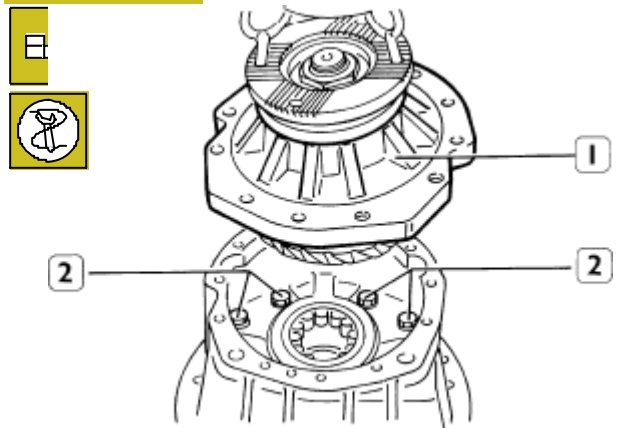

39660

Using eyebolts, raise the pinion support (1) with a sling and unscrew the four screws (2) fixing the differential carrier.

Figure 50

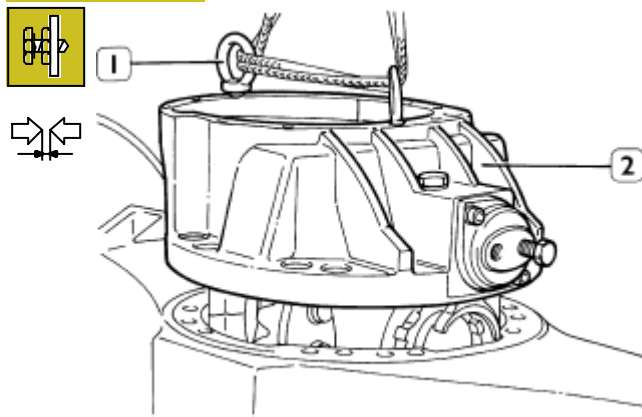


39661

Using eyebolts (1) and a sling, raise the differential carrier (2).

Aquila Trucks Centres

REFITTING


Figure 51

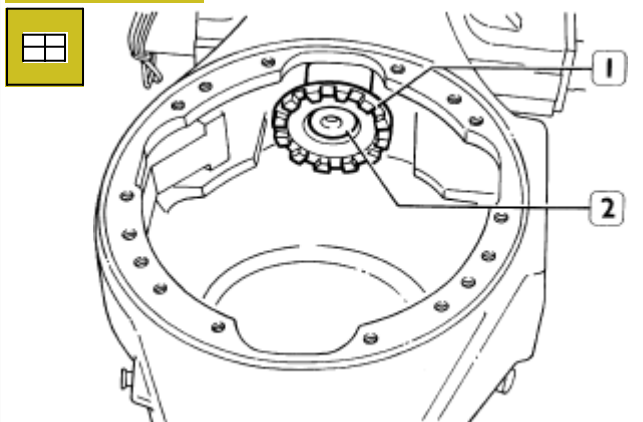

39662

Fit the sliding sleeve (1) on the drive shaft (2) with double toothing.

Figure 52

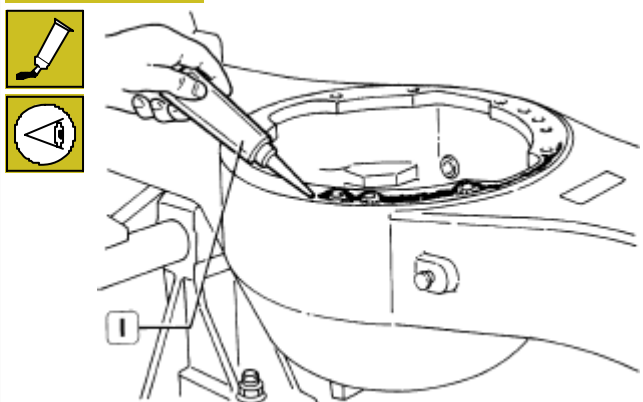

39663

Smear LOCTITE 573 (1) sealing compound on the contact surface. When assembling the differential housing, make sure that the differential lock engagement fork is correctly introduced on the sliding sleeve.


Figure 53



39664

Position the seal ring and assemble the differential carrier (1). Apply LOCTITE 573 on the threads of the external screws (2). Using a torque wrench, tighten the external (2) and internal (3) screws to the correct torque.

Figure 54

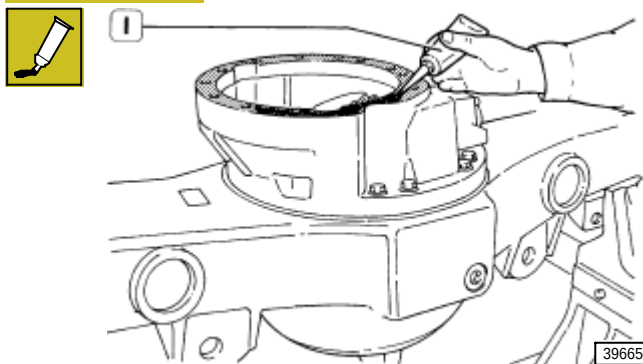


39665

Smear LOCTITE 573 (1) sealing compound on the contact surface.



Apply a bead of LOCTITE 510 around the oil passage holes.

Figure 55

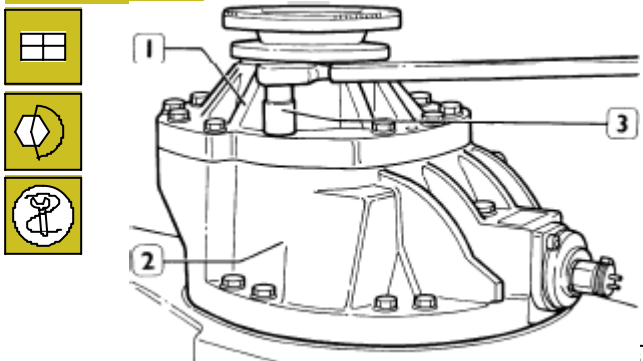


Position the bevel pinion support (1) on the differential carrier (2). Using a torque wrench, tighten the screws (3) to the correct torque.



Apply LOCTITE 573 on the threads of the screws (3) that pass through the holes.

Figure 56

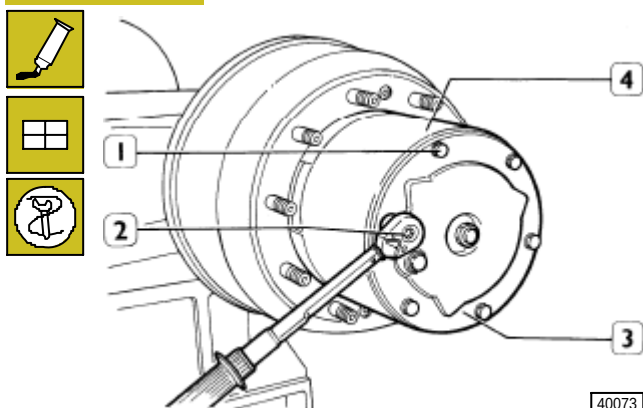

40073


Smear a thin layer of LOCTITE 510 on the cover (3) and crown wheel support (4) contact surfaces. Position the cover so that the bevels of the support pins coincide with the holes on the cover. Smear LOCTITE 573 sealing compound on the screw (1) thread and tighten to the correct torque with a torque wrench (2).

Aquila Trucks Centres

526210 REPAIRING THE DIFFERENTIAL


Removal

Figure 57

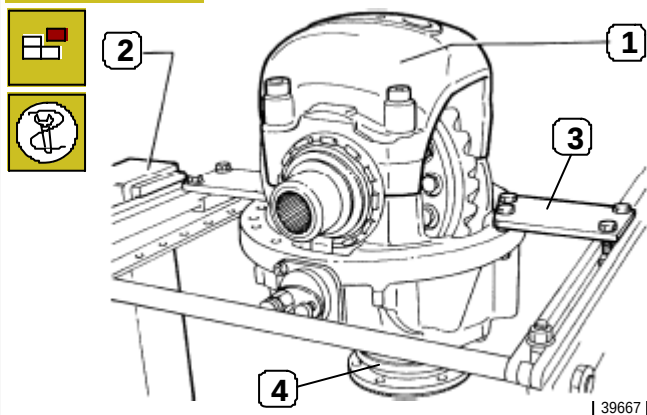


Position the differential unit with the gear housing cover (1) facing upwards, on rotating stand 99322205 (2), together with support 99322225 and pair of brackets 99371022 (3). Provisionally fit the bevel pinion support (4).

Figure 58

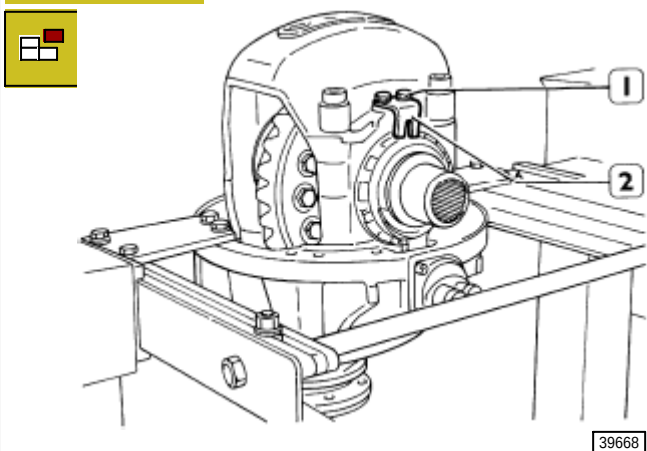


Unscrew the screws (1) and remove the safety plate (2). Repeat the same operation on the opposite side.

Figure 59

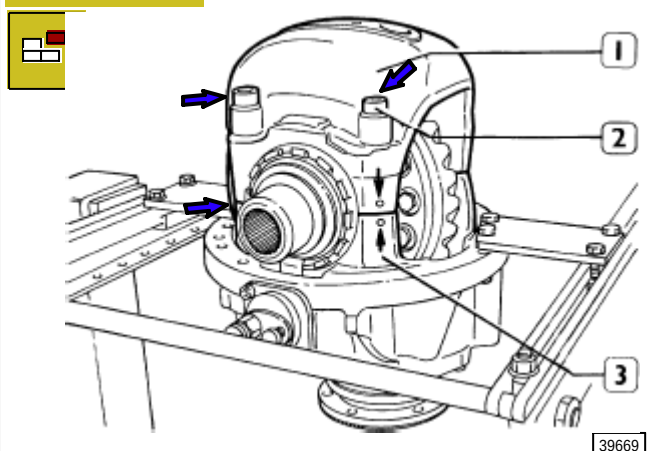


Heat the points indicated by the arrows with drier 99305121 and unscrew the screws (2) fixing the cover (secured with LOCTITE).

Figure 60

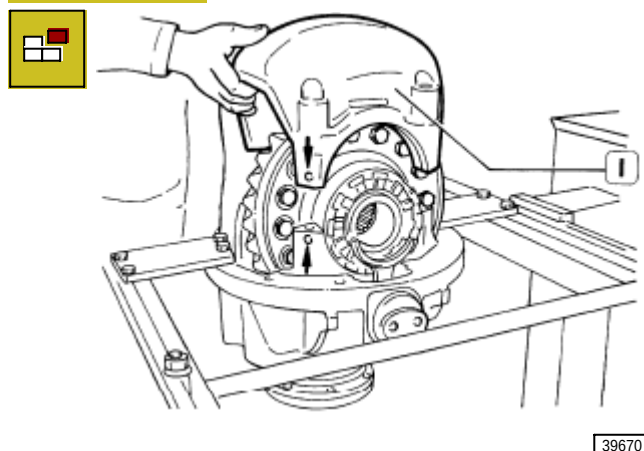


Raise the gear housing cover (1).

Figure 61

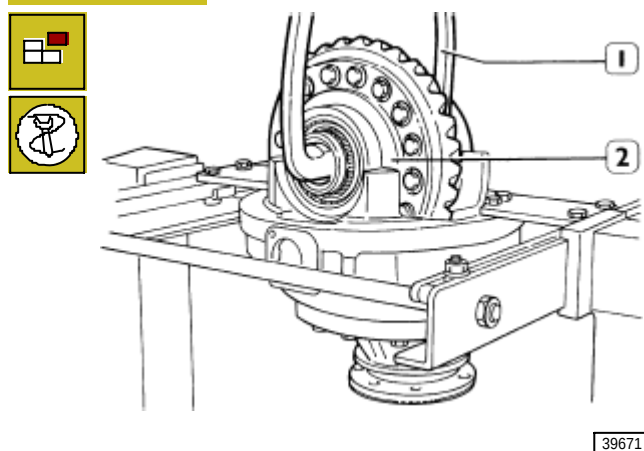

Using hook 99370509 (1), raise the gear housing (2), together with the taper roller bearings and bearing external rings.


Figure 62

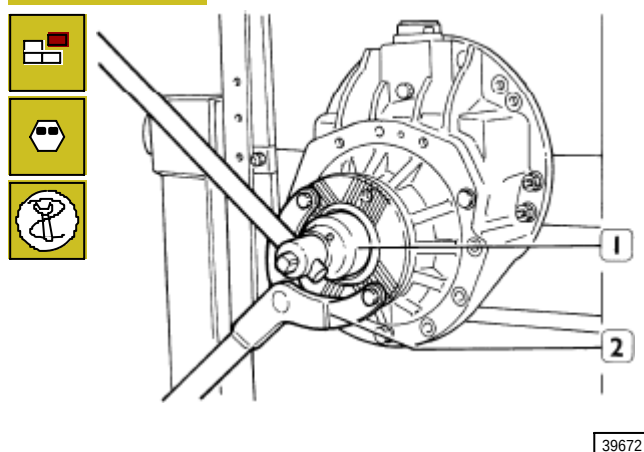

Rotate the differential carrier through 90°. Remove the safety notch on the fixing nut. Apply reaction lever 993701317 (2) to the drive coupling flange and, using Allen wrench 99355081 (1), loosen the fixing nut.

Aquila Trucks Centres


Figure 63

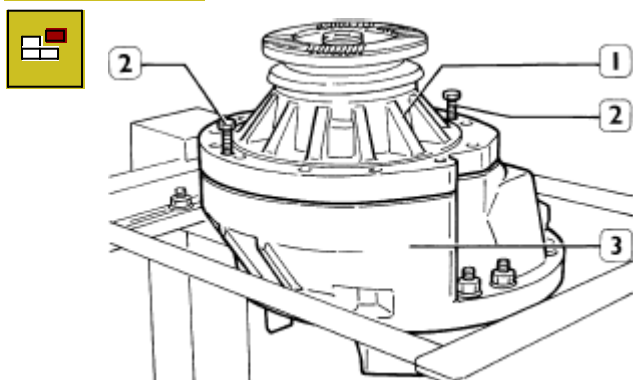

39673

Unscrew the screws and washers of the differential carrier (3) bevel pinion support (1). Fit the reaction screws (2) and extract the differential housing support.


Figure 64

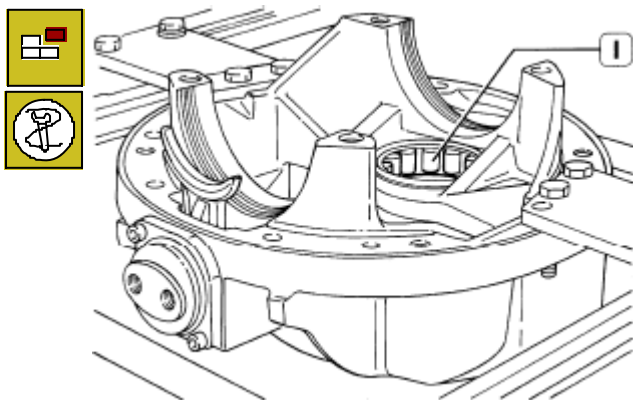

39674

Using a universal punch, extract the bevel pinion taper roller bearing (1) from the seat on the differential carrier.


Figure 65

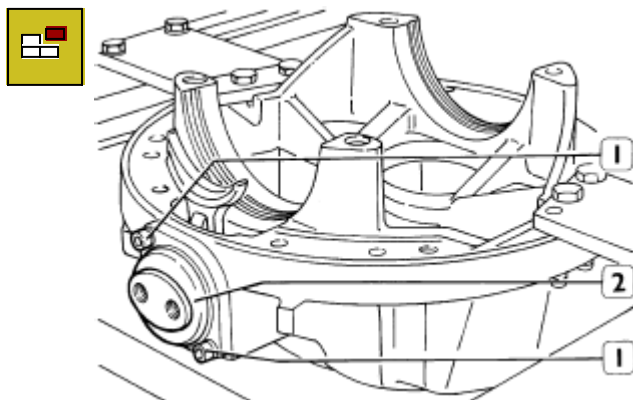

39675

Unscrew the 2 sunken hex screws (1) and remove the differential locking device control cylinder (2).

Figure 66

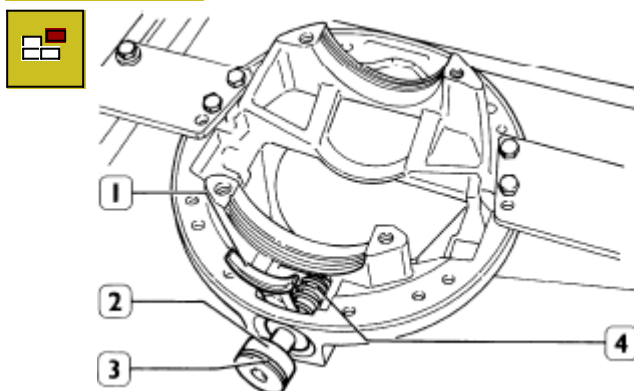


39676

Extract the piston (2), together with the seal ring (3), the engaging fork (1) and the compression spring (4).

Differential housing disassembly


Figure 67

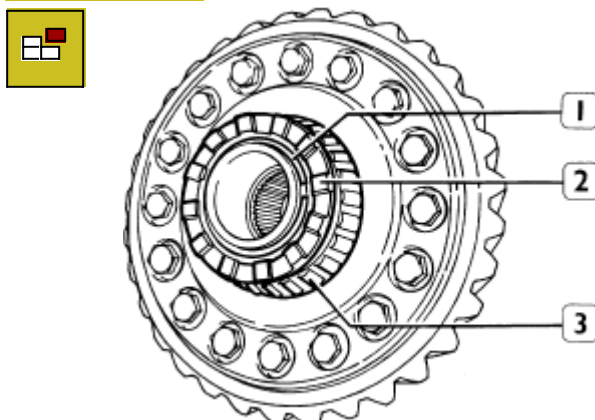

39677

Remove the circlip (1) and extract the differential lock engaging sleeve (3) from the gear housing cover (2).

Figure 68

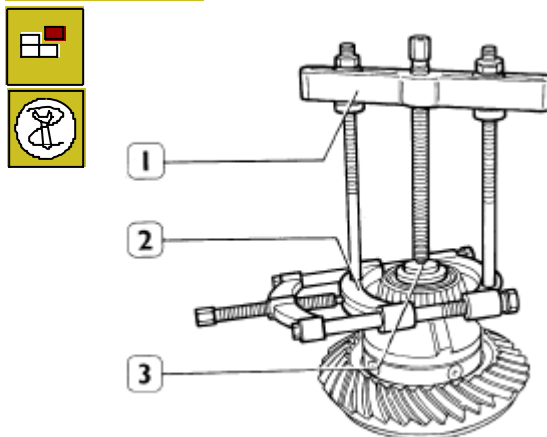


40086

Using extractor 99348001 (1-2) and reaction block 99345053 (3), extract the taper roller bearing from the differential housing. Repeat the same operation on the opposite side.

Aquila Trucks Centres


Figure 69

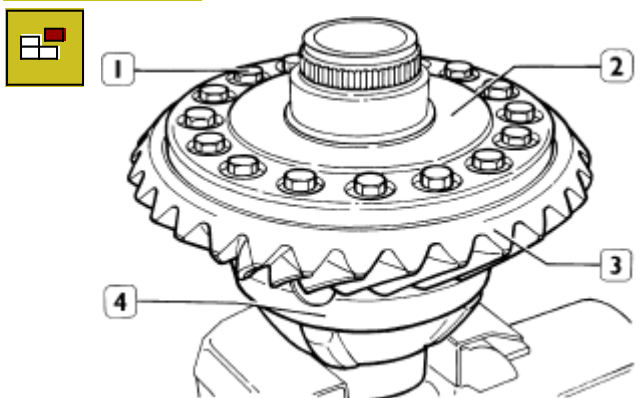

39679

Loosen and extract the screws (1) fixing the ring bevel gear (3) and cover (2) to the half-housing (4).


Figure 70

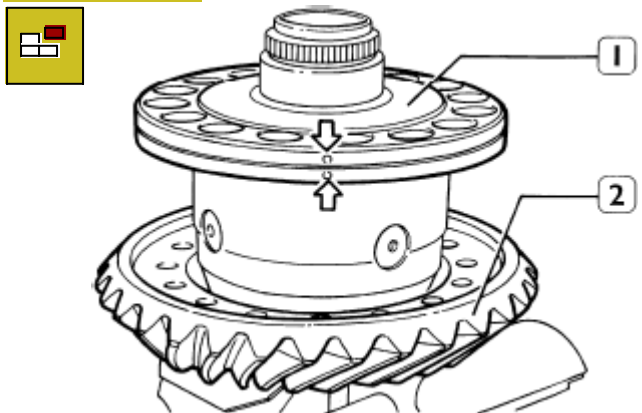

39680

Counter-mark the cover and gear housing ($\Rightarrow \Leftarrow$). Remove the differential housing cover (1) and release the ring bevel gear (2).


Figure 71

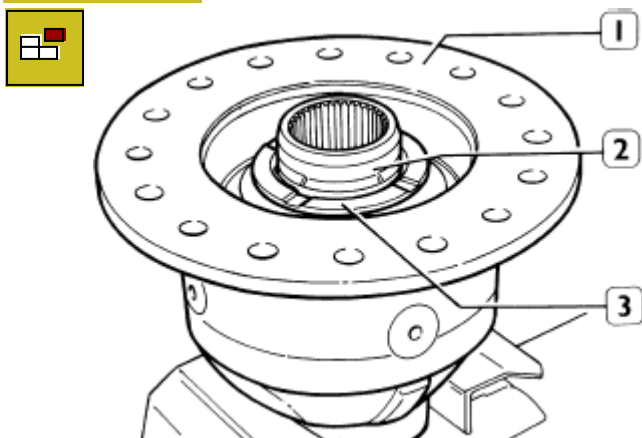

39681

Remove the crown wheel (2), together with the shoulder washer (3), from the differential housing (1).

Figure 72

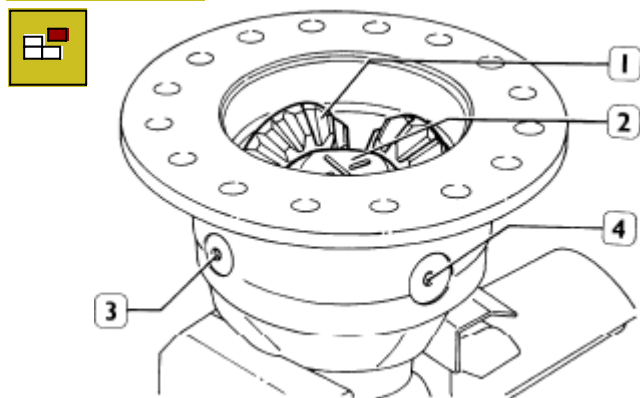

39682


Using a punch, first extract the long pin (4) and then the two short pins (3).

NOTE The exact position of the pins is marked on the spider body (2) by a long stripe for the long pin, and by two short stripes for the short pins.

Remove the spider (2) and the four side pinions (1) with the relative shoulder washers.
Remove the crown wheel and the shoulder washer.

Removing the bevel pinion from the support

Figure 73

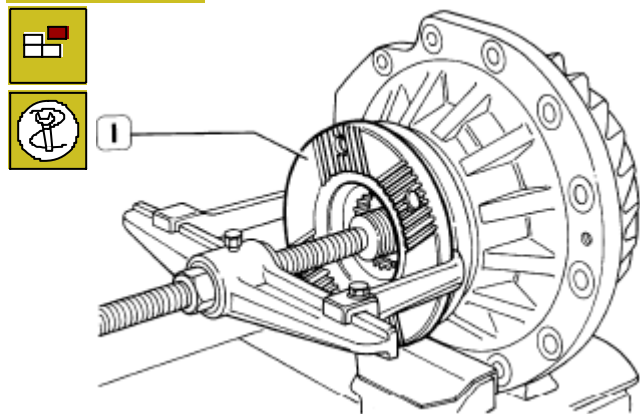


39683

Remove the fixing nut and the drive coupling flange (1).
If flange extraction proves difficult, use a universal extractor.

Aquila Trucks Centres


Figure 74

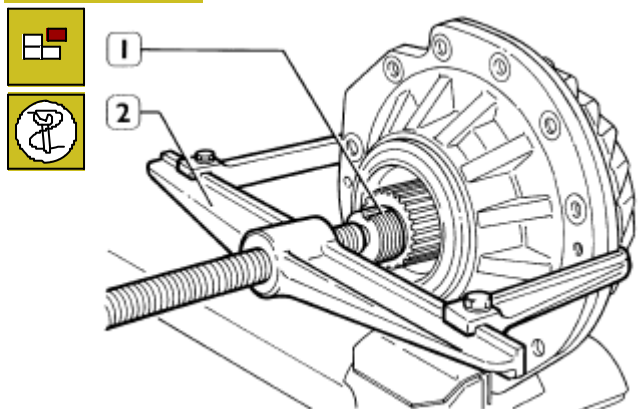

39684

Remove the bevel pinion (1), intermediate bearing and adjusting rings from the support. This operation should be carried out under a press; if not, use an extractor (2).


Figure 75

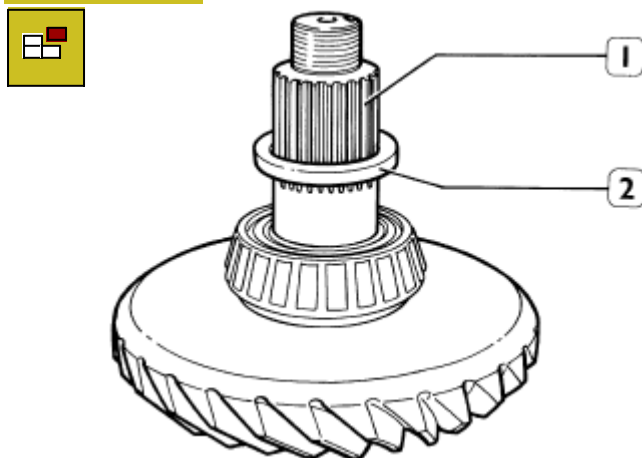

39685

Remove the bearing adjustment ring (2) from the bevel pinion (1).


Figure 76

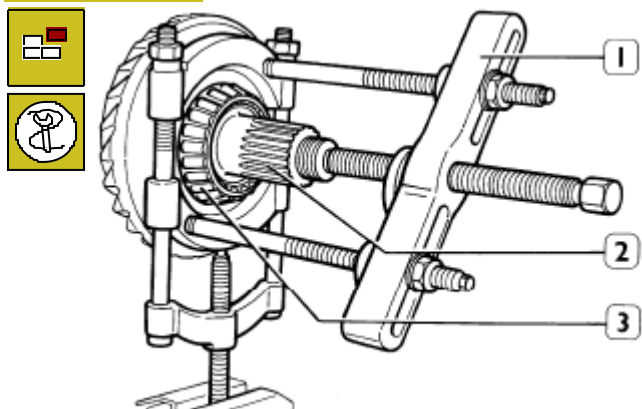

39686

Using universal extractor 99348001 (1), extract the intermediate taper roller bearing (3) from the bevel pinion (2).


Figure 77

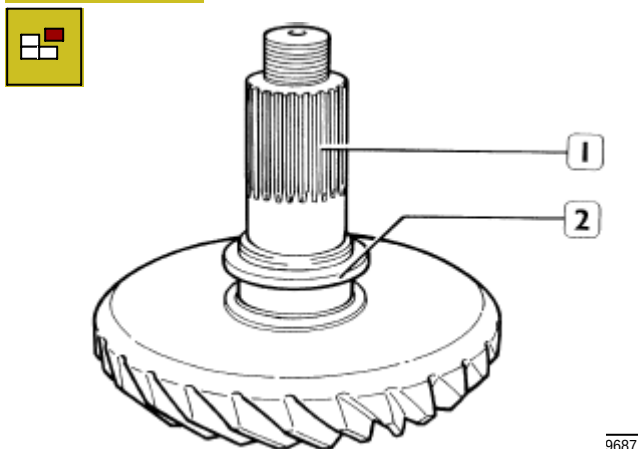

9687

Extract the pinion position adjusting ring (2) from the bevel pinion (1).


Figure 78

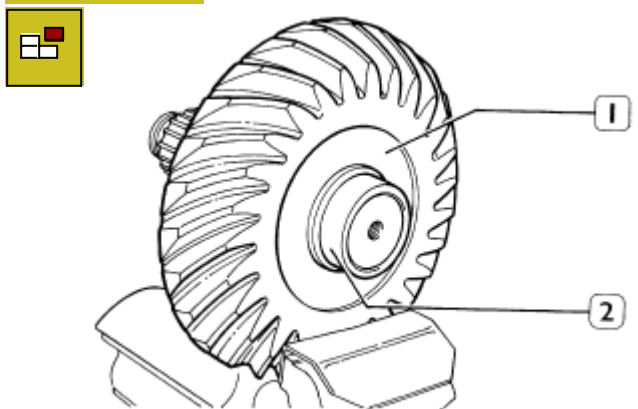

39688

Extract the rear straight roller bearing internal ring (2) from the bevel pinion (1). This is a destructive operation.

Figure 79

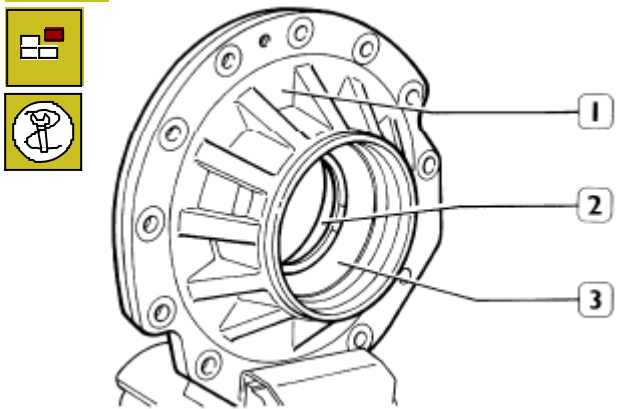

39689

Using a punch, extract the external rings (3 and 2) for the front and intermediate bearings from the support (1).

Aquila Trucks Centres

CHECKING THE DIFFERENTIAL COMPONENTS

Carefully clean all of the individual differential components. Lubricate the bearings and make sure that the roller support cage rotates freely, rotation should be smooth, without hardening.

NOTE Carefully clean all the threads to ensure exact adjustments and precise tightening torque values.


Check that the grooved section on the pinion flange is not excessively worn. Replace the pinion if necessary.

NOTE If either the bevel gear or pinion need to be changed, both parts must be replaced as they are provided as coupled spare parts.

Aquila Trucks Centres


Differential housing assembly

Figure 80

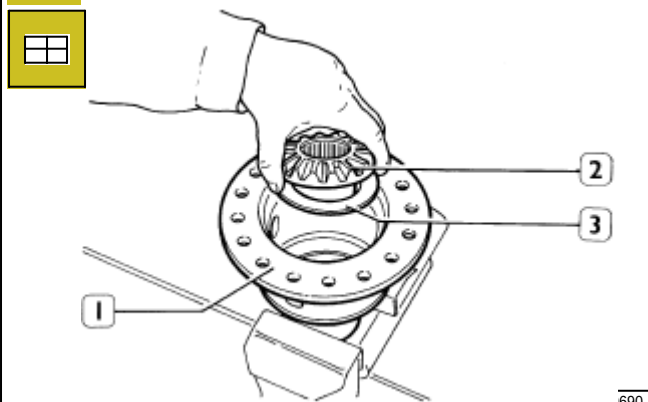


Secure the gear housing (1) in a vice and position the crown wheel (2) in its seat, together with the shoulder washer (3).

Figure 81

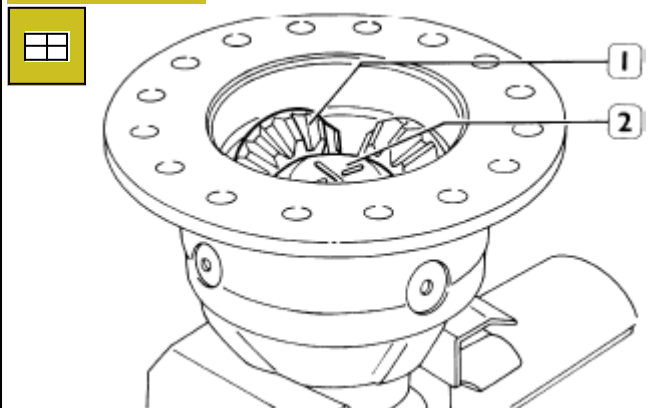

Assemble the four side pinions (1) with the shoulder washers and insert the spider (2).


Figure 82

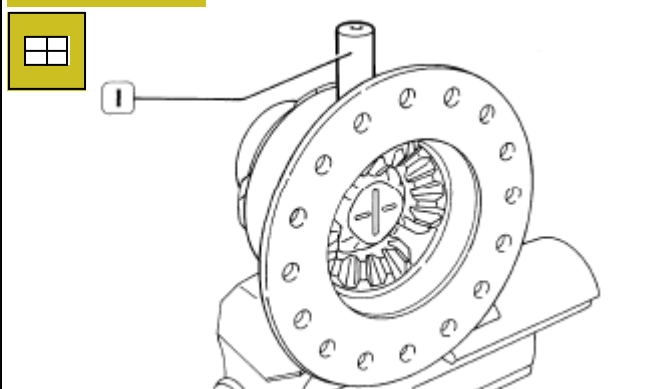

Insert the long pin (1) and the two short pins.

NOTE First insert the long (through) pin. The exact position of the pins is marked on the spider body by a long stripe for the long pin, and by two short stripes for the short pins.


Figure 83

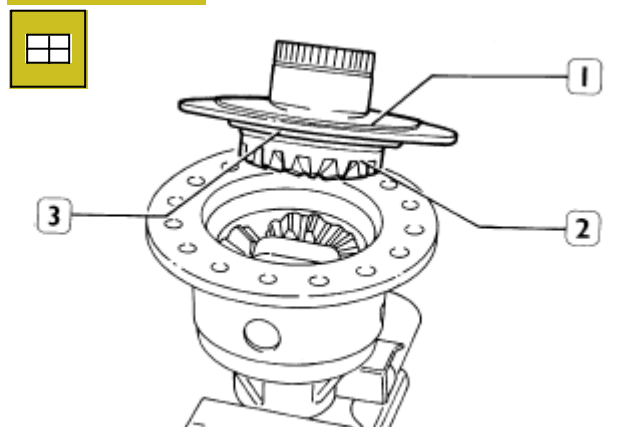

Position the crown wheel (2) and shoulder washer (3) on the side pinion gear unit.


Fit the cover (1) on the differential housing by making the marks (made during disassembly operations) coincide.

Figure 84

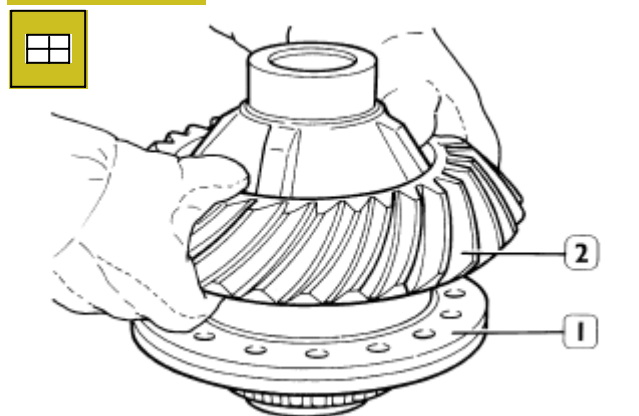

Heat the ring bevel gear (2) to approx. 80°C, fit in position in the gear housing (1) and secure with two fixing screws.

Figure 85

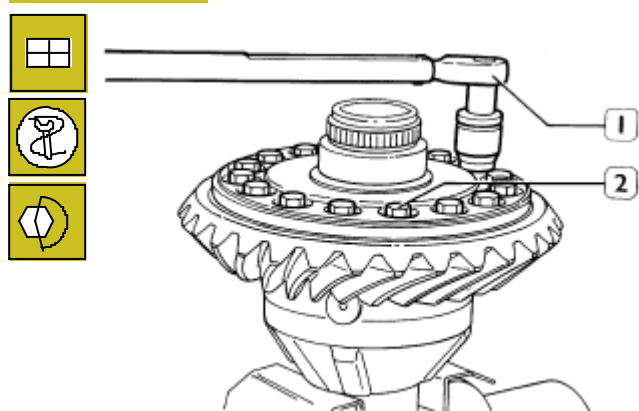

Fit the remaining screws (2) and tighten with a torque wrench (1) to 300 ± 10 Nm (30 ± 1).

Aquila Trucks Centres

Figure 86




39696

Using an electric heater, heat the support bearing (2) for 15' at a temperature of 100°C and fit on the differential housing cover using a punch (1). Repeat the same operation on the other bearing.

Assembling the bevel pinion support

Figure 87

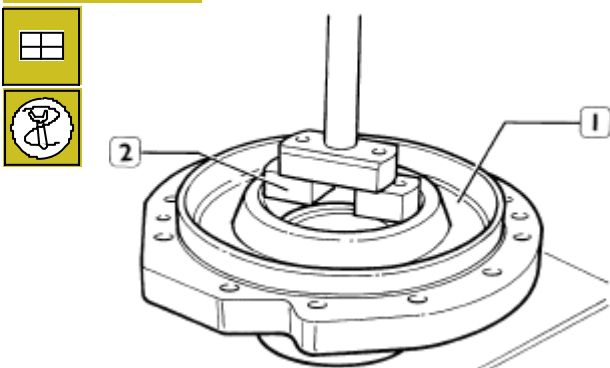


39697

Fit a new oil baffle on the pinion support (1) Using punch 99374093 (2), fit the intermediate bearing external ring and the front bearing external ring in the support in their respective seats.

Procedure to follow to determine the thickness of the bevel pinion rolling torque adjusting ring


Figure 88

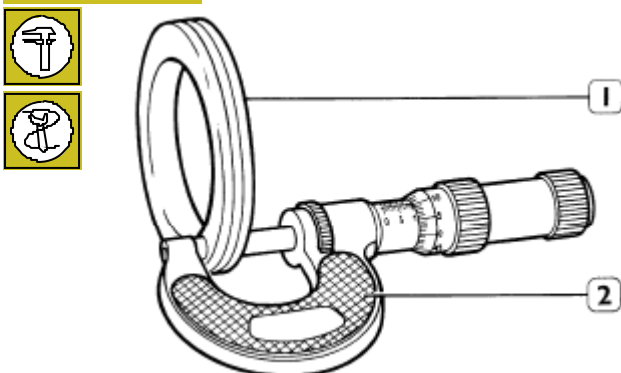

39572

Using a feeler gauge (1) measure and note the thickness of the adjusting ring on disassembly (value A).

Figure 89

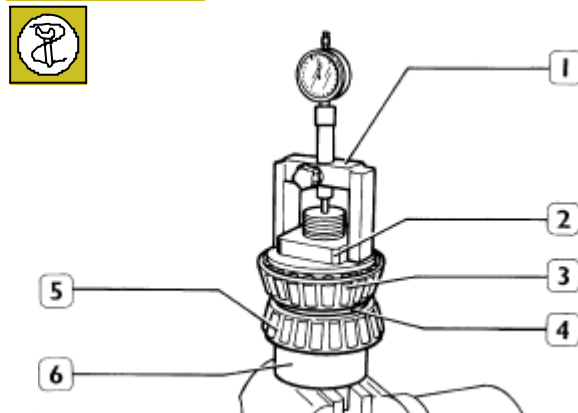

39698

Secure tool 99395027 (6) in a vice and fit the following parts:


- the bearing (5) on the pinion-side;
- the previously measured adjusting ring (4) and the bearing (3).

Fully tighten the ring nut (2).

Position part (1) of tool 99395027 (6) on the bearing (3), fitted with a zero-set dial gauge on the end of the tool (6). Then remove:

- the part (1),
- the ring nut (2),
- the bearing (3),
- the adjusting ring (4) on the tool (6).

Figure 90

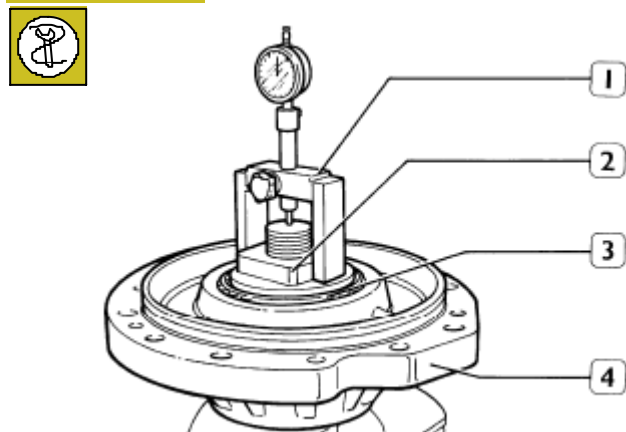


39699

Position the support (4) on the bearing (5, Figure 89) and the bearing (3) on the support. Tighten the ring nut (2) by hand and check the rolling torque, as indicated in Figure 91.

Aquila Trucks Centres

Figure 91

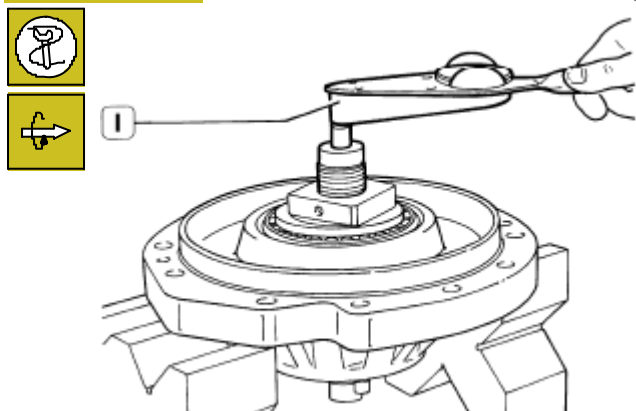

39700

Position the complete support on two parallel blocks; using the torque wrench (1) applied on tool 99395027 and read the rolling torque. This value should be 1.5 to 3.5 Nm; if not, adjust by means of the ring nut (2, Figure 89).

Position the part (1, Figure 89), with the dial gauge zero-set, on the bearing (3) and read the eventual deviation (value B).

Thickness S on the adjusting ring is provided by the following formula:

Where:

A = thickness of the adjusting ring assembled for dial gauge zero-setting;

B = deviation value read;

C = 0.05 mm coefficient which takes into account the expansion of the bearings as a result of the assembly negative allowance on the bevel pinion.

First example:

A = 10.12 mm

B = + 0.13 mm

C = 0.05 mm

$$S = 10.12 - (+ 0.13) + 0.05 =$$

$$S = 10.12 - 0.13 + 0.05 = 10.04 \text{ mm.}$$

Second example:

A = 10.12 mm

B = - 0.13 mm


C = 0.05 mm

$$S = 10.12 - (- 0.13) + 0.05 =$$

$$S = 10.12 + 0.13 + 0.05 = 10.35 \text{ mm.}$$

On completion of the operation, remove the parts of tool 99395027.

Figure 92

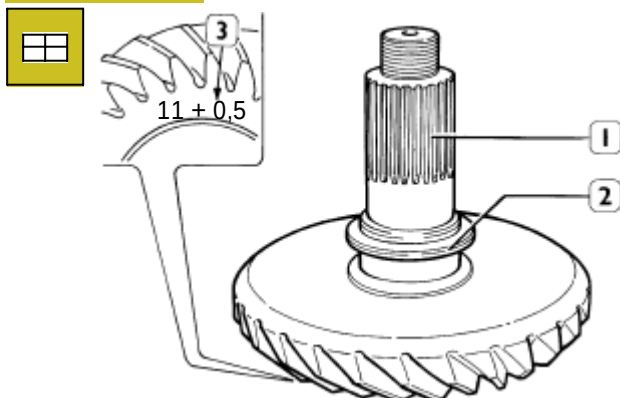

39701

Fit the adjusting ring (2), in order to position the pinion in relation to the bevel gear, on the bevel pinion (1). The thickness of the adjusting ring is determined by the reference value (3) marked on the bevel pinion.


See the table in Figure 93.

Figure 93

Value marked on the bevel pinion	Total thickness of adjusting ring
-0.5	4.6
-0.4	4.5
-0.3	4.4
-0.2	4.3
-0.1	4.2
0	4.1
+0.1	4.0
+0.2	3.9
+0.3	3.8
+0.4	3.7
+0.5	3.6

Summary table to determine the thickness of the bevel pinion position adjusting ring.

Figure 94

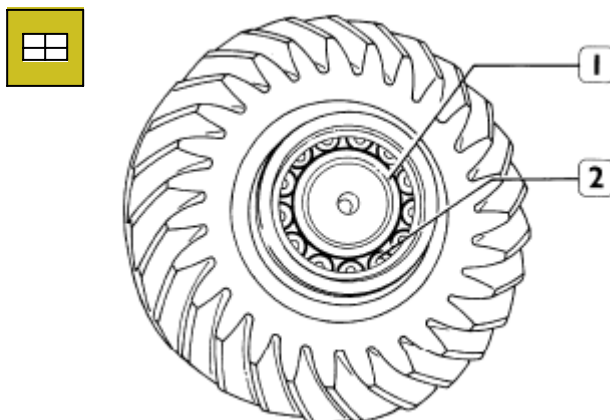


39702

Heat with an electric drier to 100°C and insert the rear straight rollers bearing internal ring (1) on the bevel pinion (2).

Aquila Trucks Centres

Differential carrier assembly


Figure 95

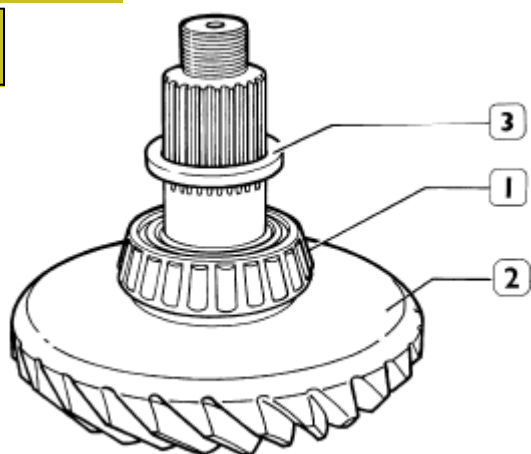

39703

Heat the intermediate bearing (1) for approx. 15' at a temperature of 100°C and fit on the bevel pinion (2); fit the adjusting ring (3) with the same thickness as previously noted (page 164).


Figure 96

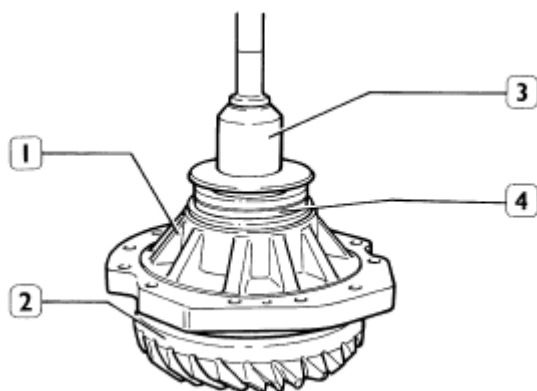

39704

Fit the previously assembled support (1) on the bevel pinion (2), fitting the front bearing. Using key 99374013 (3) and grip 99370006, insert the oil seal ring (4).


Figure 97

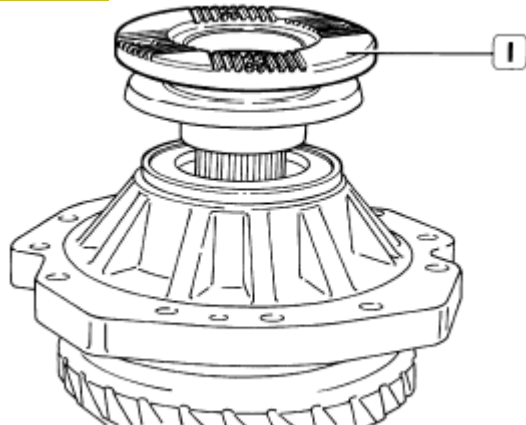

39705


Assemble the drive coupling flange (1) with a punch and tighten the fixing nut by hand.

Figure 98

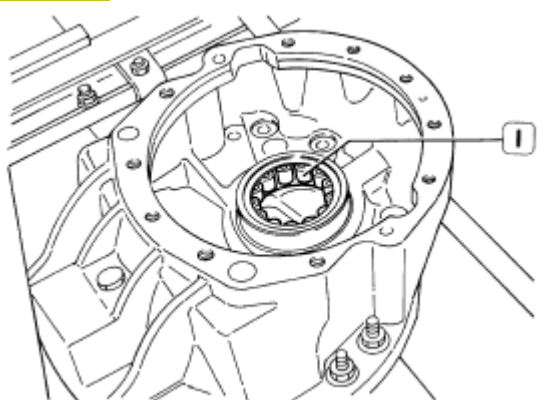

Using a punch, fit the rear straight rollers bearing (1) in position on the differential carrier.


Figure 99

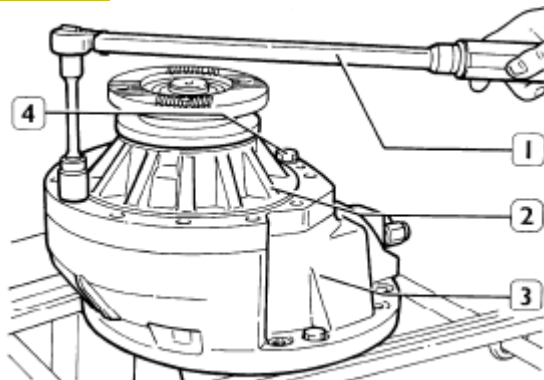

39707

Provisionally assemble the bevel pinion support (2) on the differential carrier (3), insert 2 screws (4) and washers in diametrically opposing positions. Using a torque wrench (1), tighten to a torque of 160 ± 10 Nm (16 ± 1 kgm).

Figure 100

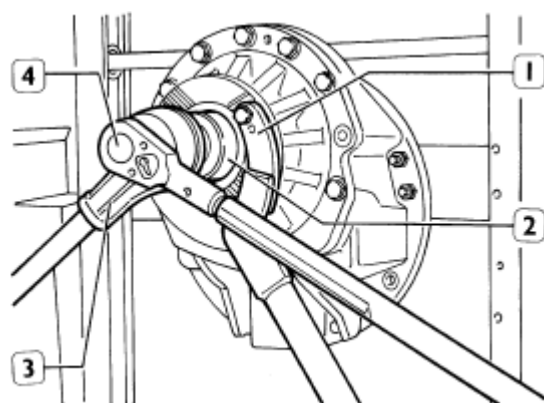


39708

Block the drive coupling flange rotation using reaction lever 99370317 (1) and, using Allen wrench 99355081 (2), the multiplier (3) and a torque wrench (4) tighten the fixing nut to a torque value of 700 ± 50 Nm (70 ± 5 kgm).

Aquila Trucks Centres


Figure 101

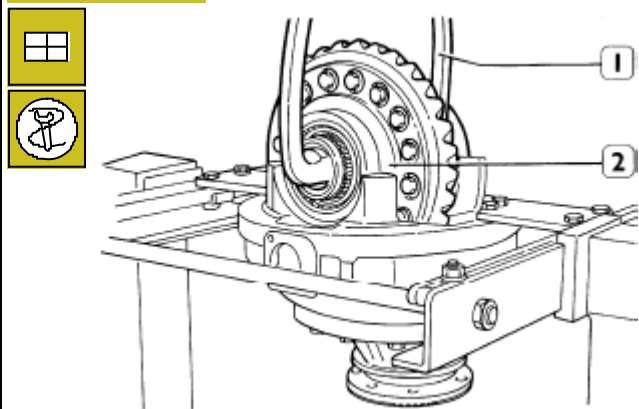

39671

Using hook 99370509 (1), position the gear housing (2) together with the roller bearings on the differential carrier.

Figure 102

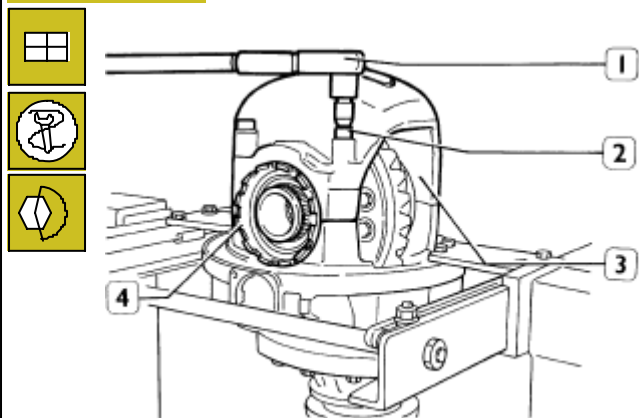

39709


Correctly fit the cover (3) making the marks (made during disassembly operations) coincide. Provisionally tighten the screws (2) and check that the adjusting ring nuts (4) screw-in easily.

Remove the screws (2), smear the threads with LOCTITE AVX and then re-tighten with a torque wrench (1) to a torque of 280 ± 15 Nm.

Differential housing bearings rolling torque adjustment

The rolling torque reading is carried out when there is a clearance between the teeth on the bevel gear pair. However, the total rolling torque value varies according to the reduction bevel gear pair ratio (see table in Figure 104).

Figure 103

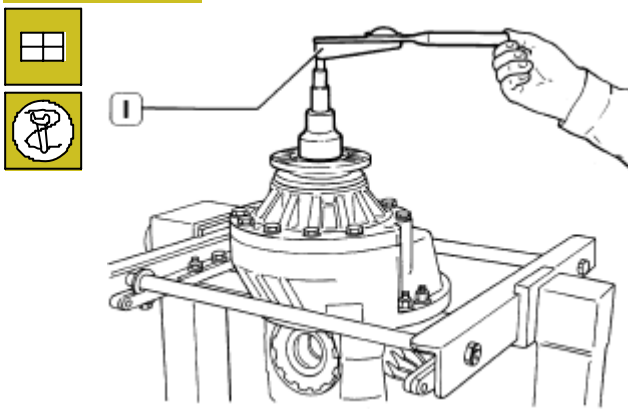

39712


Using torque wrench 99389819 (1) and the appropriate Allen wrench, check that the total rolling torque value corresponds with the value indicated in Figure 104.

Figure 104

No. of teeth	Ratio	Total rolling torque (Nm)
17/35	2.059	a + (1.5 - 2.4)
19/33	1.737	a + (1.6 - 2.6)
21/34	1.619	a + (1.9 - 3.1)
23/36	1.565	a + (1.9 - 3.2)
24/35	1.458	a + (2.1 - 3.4)
28/37	1.321	a + (2.3 - 3.8)
27/32	1.185	a + (2.5 - 4.2)
21/40	1.905	a + (1.6 - 2.6)
27/37	1.370	a + (2.2 - 3.6)
29/37	1.276	a + (2.4 - 3.9)

$$a = 7.5 \div 9.5 \text{ Nm}$$

Figure 105

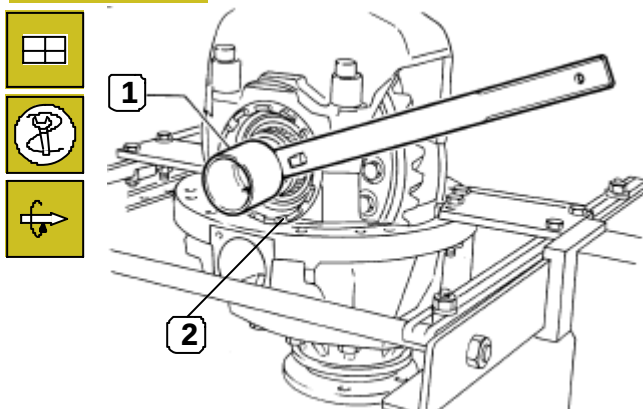

39711

If the torque value is different from that indicated in Figure 104, adjust the adjustment ring nuts (2) with wrench 99354001 (1) until the required torque is obtained.

Aquila Trucks Centres


Adjust the end float between the teeth on the bevel gear pair as follows:

- Read the clearance value between the teeth in Figure 106.

Figure 106

No. of teeth	Ratio	Clearance between teeth
17/35	2.059	$0.2 \div 0.33$
19/33	1.737	$0.2 \div 0.33$
21/34	1.619	$0.2 \div 0.33$
23/36	1.565	$0.2 \div 0.33$
24/35	1.458	$0.25 \div 0.33$
28/37	1.321	$0.2 \div 0.33$
27/32	1.185	$0.2 \div 0.33$
21/40	1.905	$0.2 \div 0.33$
27/37	1.370	$0.2 \div 0.33$
29/37	1.276	$0.2 \div 0.33$

Figure 107

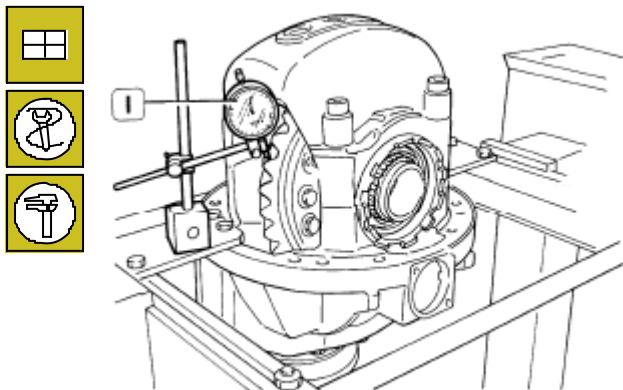


39710

- Position a magnetic stand dial gauge (1) as shown in the drawing.
- Prevent the bevel pinion from rotating with reaction lever 99370317, reverse the direction of rotation of the bevel gear and, using a gauge (1), read the clearance between the teeth on the two gear units.

If not, using the wrench 99354001 (1, Figure 108), adjust the adjusting ring nut.

Figure 108

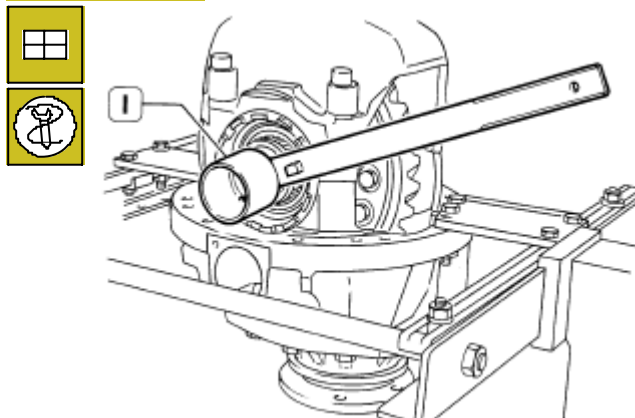


39711

In order to prevent the previously measured rolling torque from varying, during adjustments of the coupling clearance between the pinion and the bevel gear teeth, tighten the ring nut with the wrench 99354001 (1) by the same amount as the ring nut on the opposite is loosened.

On completion of operations, check that the two adjusting ring nuts are suitably positioned to allow the safety plate to be fitted.

Figure 109

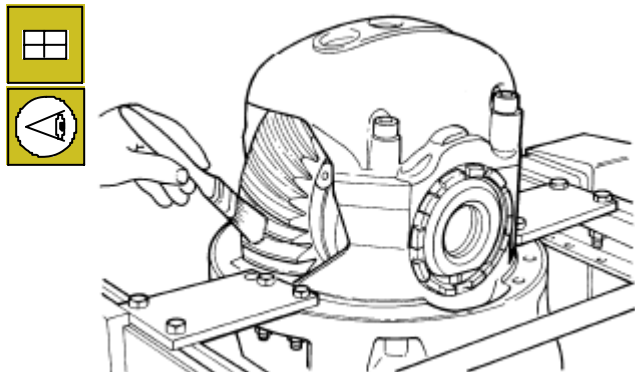

39704


Using a brush, apply a light covering of Prussian blue on the teeth of the bevel gear.

Rotate the pinion and check the coloured contact marks that the pinion teeth have made on the bevel gear teeth.

The following drawings illustrate possible contact marks and the operations required in order to correct the faults.

Aquila Trucks Centres


Figure 110

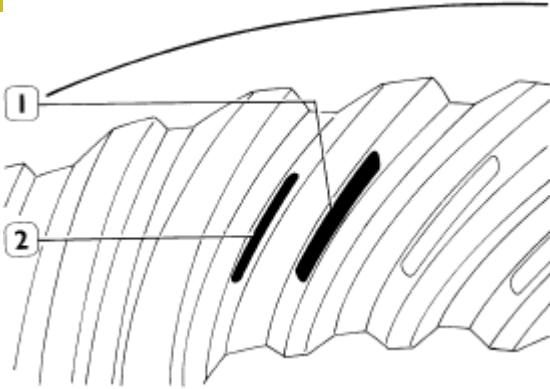

40160

The contact marks should be on both the leading face (1) and the pushing face (2), more or less in the centre between the teeth. When working without a load, both contact zones should be slightly out of position in relation to the external diameter of the bevel gear.


Figure 111

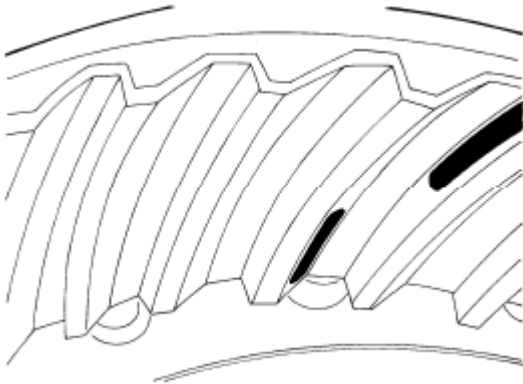

0161A

If the mark on the leading face (towards the external diameter) and on the pushing face (towards the internal diameter) is out of position, the pinion is located too close to the bevel gear.
- Solution: decrease the thickness of the adjusting ring (2, Figure 92) between the intermediate bearing and the bevel pinion.


Figure 112

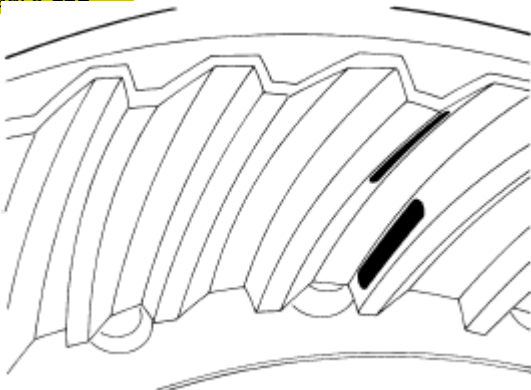

40161B

If the mark on the leading face is positioned towards the internal diameter, and on the pushing face it is located towards the external diameter of the bevel gear, the pinion is located too far away from the bevel gear axis.
- Solution: increase the thickness of the adjusting ring (2, Figure 92) between the intermediate bearing and the bevel pinion.


Figure 113

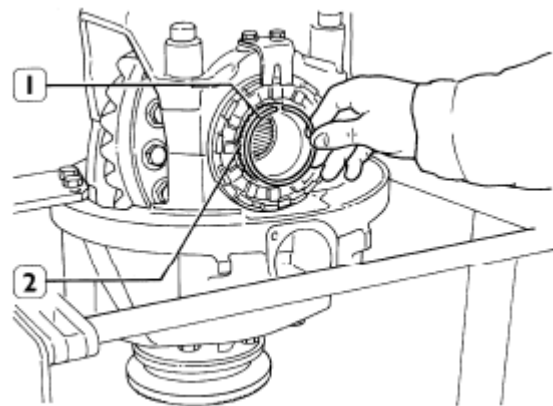

39713

Assemble the engaging sleeve (1) on the gear housing tooting and, with a screwdriver, position the circlip (2) in the groove.


Figure 114

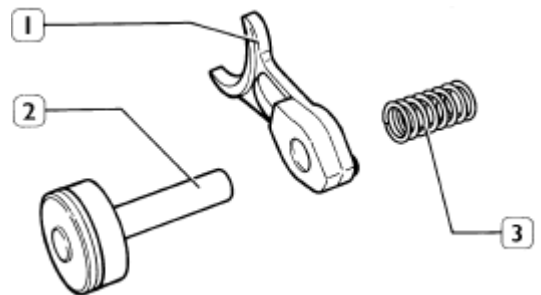

39714

Fit the differential lock engagement assembly comprising: the control cylinder, the piston (2), the engaging fork (1) and the compression spring (3).

Figure 115

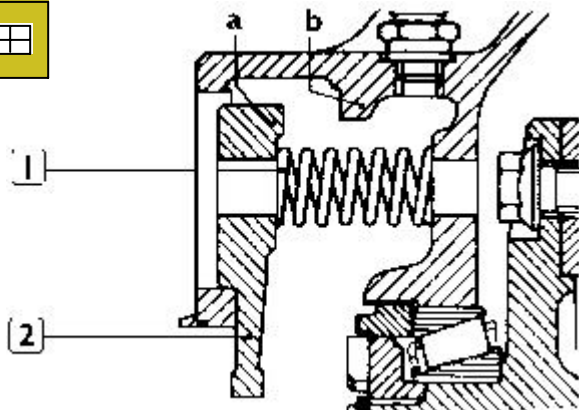


26609

Introduce the compression spring (1) in the differential housing. Fit the engaging fork (2) so that fork (a) travel limit corresponds with travel limit (b) on the differential housing.

Aquila Trucks Centres

Figure 116

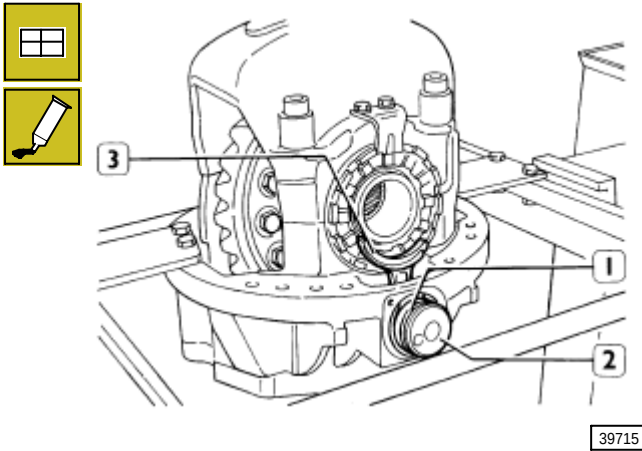

Fit a new seal ring (1) on the control piston (2) and smear with grease.

Introduce the control piston (2) on the engaging fork (3) in the compression spring, then fit the assembly in the gap on the differential housing.

Disassemble the bevel pinion support.

Fitting the differential on the axle housing.

1. Fit the sliding sleeve on the drive shaft.
2. Fit the gear housing assembly, taking care that the fork engages in the groove on the sliding sleeve.
3. Tighten the screw whilst pushing the drive shaft so that the sliding sleeve engages on the differential engaging sleeve.
4. Apply LOCTITE 573 on the threads and under the heads of the screws and tighten to the correct torque with a torque wrench.
5. Apply LOCTITE 573 on the contact surface, refit the pinion support and tighten the screws to the correct torque.

Aquila Trucks Centres

Aquila Trucks Centres

**Rear axle
452146/2D (R 8174)**

	Page
DESCRIPTION	171
MAIN DATA	172
TIGHTENING TORQUES	173
TOOLS	175
REAR AXLE ASSEMBLY OVERHAUL	180
REPAIRING THE DIFFERENTIAL	180
- Disassembly	180
- Disassembling the differential housing	181
- Disassembling the bevel pinion support	182
CHECKING THE DIFFERENTIAL COMPONENTS	182
- Assembly the differential housing	183
- Assembling the bevel pinion support	184
- Differential carrier assembly	186
- Adjusting the rolling torque on the differential housing bearings	187

Aquila Trucks Centres

Aquila Trucks Centres

DESCRIPTION

The rear axle is of the double reduction type; the first reduction is provided by the bevel pinion/ring bevel gear, whereas the second reduction is by means of an epicyclic unit on the wheel hubs.

The differential housing (with ring bevel gear) is supported by taper roller bearings, which can be adjusted by means of two threaded ring nuts.

The bevel pinion is supported by two taper roller bearings.


The bevel pinion can be adjusted by means of adjustment shims located between the two taper roller bearings.

The axle is provided with a pneumatic device for differential locking.

The axle shafts start from the differential and transmit drive to the epicyclic reduction units.

The drum brake is of the Duo/Duplex type.

Figure 1






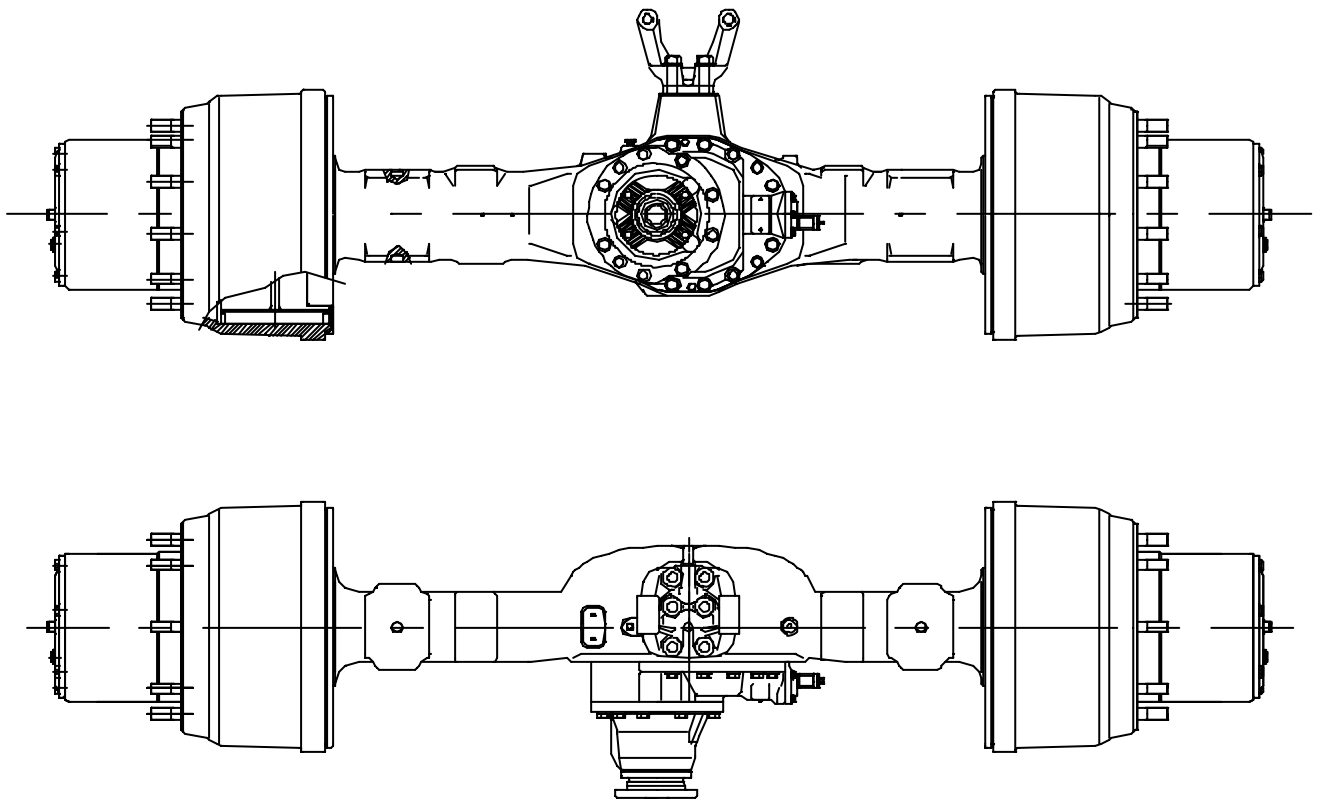


71550

LONGITUDINAL PICTORIAL SECTION OF THE DIFFERENTIAL


Aquila Trucks Centres

      MAIN DATA

	Type of axle: Load-bearing, double reduction with pneumatically controlled differential locking	452146/2D (R 8174)
	Bevel pinion bearings	2 taper rollers
	Bevel gear reduction unit ratio	27/32 (1.185) - 28/37 (1.321) - 24/35 (1.458) - 23/36 (1.565) - 21/34 (1.619) - 19/33 (1.737) - 17/35 (2.059) - 13/35 (2.692) - 15/34 (2.267) - 17/36 (2.118) - 21/40 (1.905) - 27/37 (1.370) - 34/37 (1.088)
	Epicycoid reduction unit/wheels ratio	3.2
	Bevel pinion bearing rolling torque without seal Nm	$6 \div 8$
	Bevel pinion bearing rolling torque adjustment	with adjustment rings
	Thickness of bevel pinion bearing rolling torque adjustment rings mm	10 - 10.02 - 10.04 - 10.06 - 10.08 - 10.10 - 10.12 - 10.14 - 10.16 - 10.18 - 10.20 - 10.22 - 10.24 - 10.26 - 10.28 - 10.30 - 10.32 - 10.34 - 10.36 - 10.38 - 10.40 - 10.42 - 10.44 - 10.46 - 10.48 - 10.50 - 10.52 - 10.54 - 10.56 - 10.58 - 10.60
	Thickness of bevel pinion/ring bevel gear position adjustment rings mm	0.2 - 0.3 - 0.5 - 1
	Clearance between pinion and ring bevel gear mm	$0.15 \div 0.35$
	Adjustment of clearance between pinion and ring bevel gear	with ring nuts
	WHEEL HUBS	
	Wheel hub bearings	2 taper rollers
	Wheel hub bearings rolling torque: new bearings with surface protection Nm	$6 \div 7 + (12 \div 16)$
	Wheel hub bearings rolling torque: run in bearings and new, lubricated seals Nm	$6 \div 7 + (5 \div 7)$
	Wheel hub bearings rolling torque: run in bearings and seals Nm	$6 \div 7 + (2.5 \div 4.5)$
	Drive shaft end float mm	$0.5 \div 1$
	Axle oil: Quantity Litres kg	TUTELA W140/MDA 11.5
	G.R.W. maximum load kg	11000

Aquila Trucks Centres

Figure 2

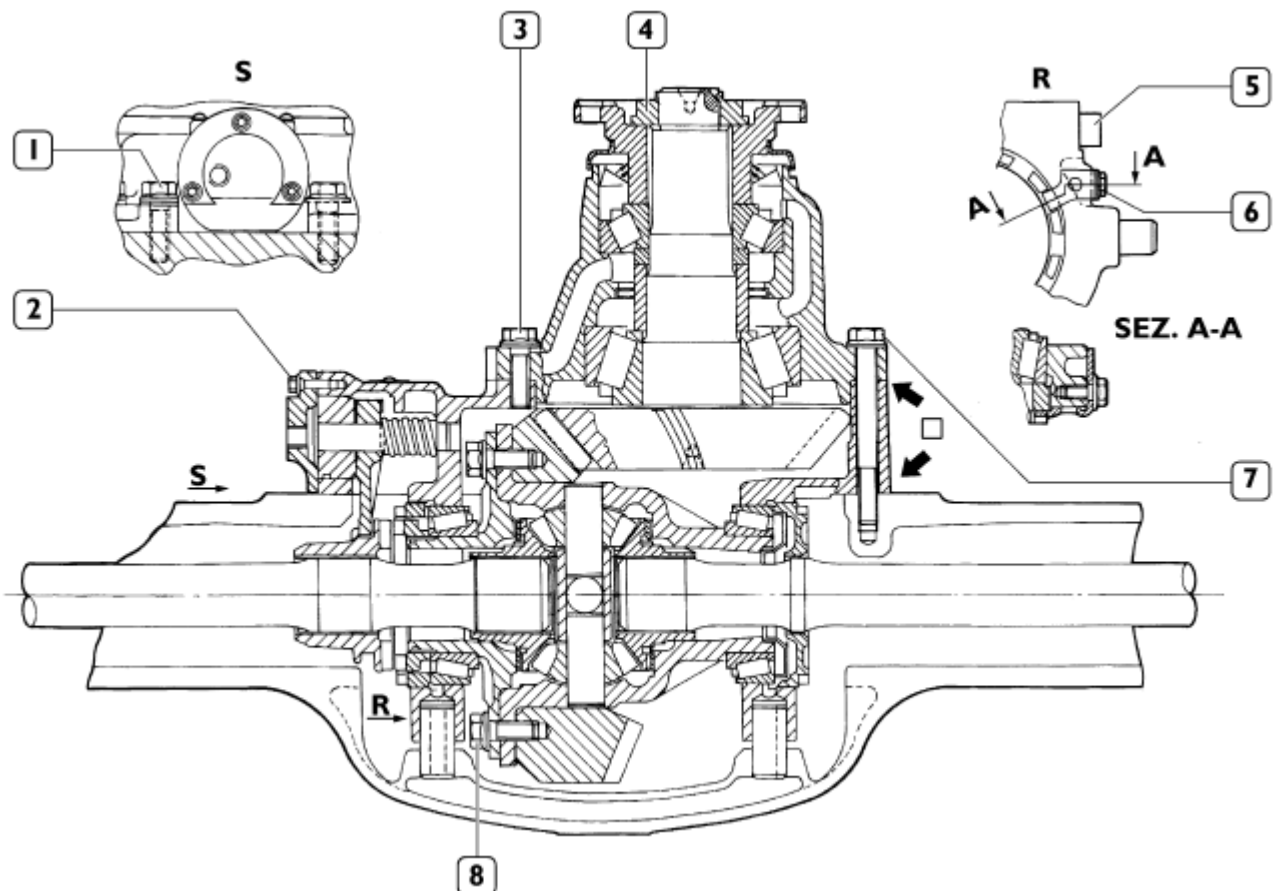

115271

TIGHTENING TORQUES


DESCRIPTION	TORQUE	
	Nm	kgm
1 Toothed flange	180 ± 10	18 ± 1
2 Self-locking screw	19 ± 2	1.9 ± 0.2
3 Screw fixing bevel pinion support	180 ± 10	18 ± 1
4 Nut fixing bevel pinion flange	700 ± 50	70 ± 5
5 Screw fixing supports for bearings Z	180 ± 10	18 ± 1
6 Self-locking screw for safety plate	51 ± 4	5.1 ± 0.4
7 Screw fixing differential carrier to axle housing	180 ± 10	18 ± 1
8 Screw fixing ring bevel gear to gear housing Z	180 ± 10	18 ± 1

Z apply LOCTITE AVX

h apply LOCTITE 573

Aquila Trucks Centres

Figure 3

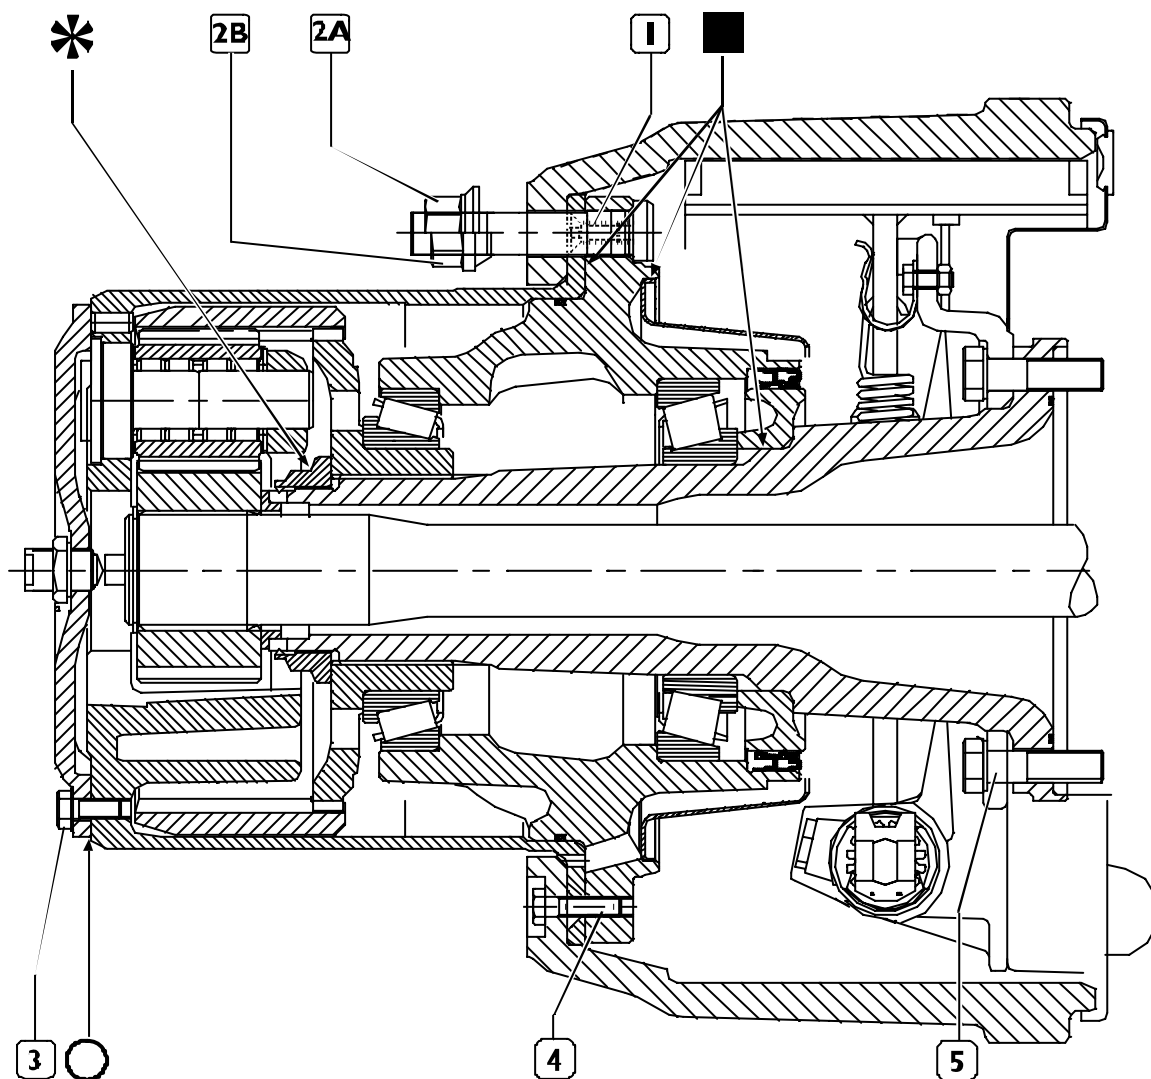

98970

TIGHTENING TORQUES

DESCRIPTION	TORQUE	
	Nm	kgm
1 Countersunk screw fixing drum	25 ± 3	2.5 ± 0.3
2A Nut fixing wheel	615 ± 35	$61.5 \div 3.5$
2B Nut fixing wheel	415 ± 35	$41.5 \div 3.5$
3 Screw fixing cover to side pinion support h	50 ± 5	5 ± 0.5
4 Screw	50 ± 5	5 ± 0.5
5 Screw fixing load bearing sleeve	295 ± 30	29.5 ± 3

d smear LOCTITE 5970 on connection surface





h apply LOCTITE 573 on thread

H apply LOCTITE 573 on mating surface



: before mounting, slightly smear MOLYCOTE on nut rest surface

Aquila Trucks Centres







TOOLS

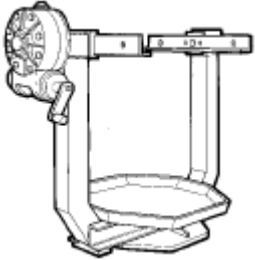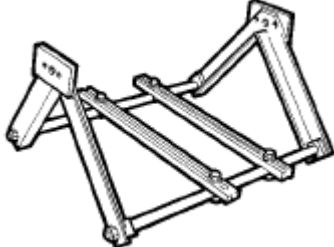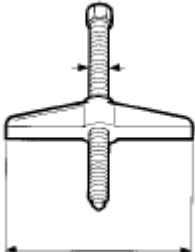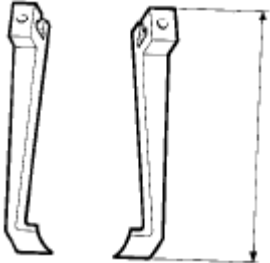TOOL NO.	DESCRIPTION	
99305121		Hot air device
99322205		Rotating stand for assembly overhaul
99322215		Stand for axles overhaul
99322225		Support for assemblies (to be fitted onto stand 99322205)
99341003		Single-acting bridge
99341012		Pair of brackets






Aquila Trucks Centres

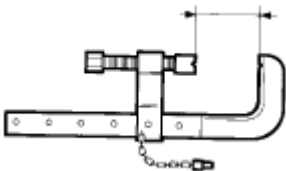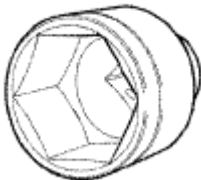TOOL NO.	DESCRIPTION	
99341015		Press
99345053		Reaction block for extractors
99348001		Extractor with locking device
99354207		Wrench (94.5 mm) for wheel hub bearings adjusting nut
99355025		Wrench for differential gear housing bearing adjustment ring nuts
99355081		Wrench (60 mm) for differential bevel pinion nut (use with 99370317)

Aquila Trucks Centres

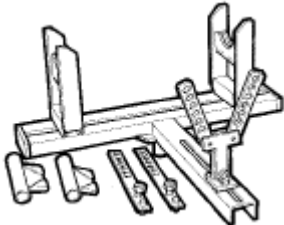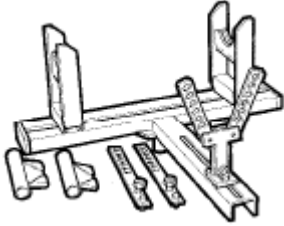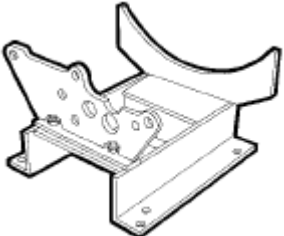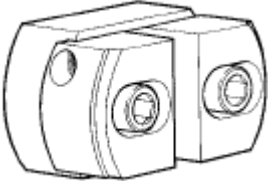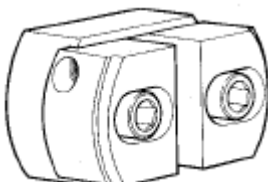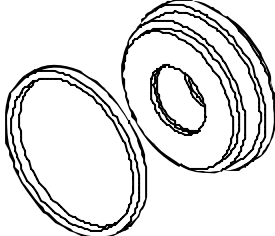TOOL NO.	DESCRIPTION	
99370616		Mounting for removal and refitting of differential
99370617		Universal mounting to support axles during removal and refitting
99372211		Tool for removal and refitting of brake jaws retaining springs
99374093		Punch to fit external races of bearings (use with 99370007)
99374094		Punch to fit external races of bearings (134 - 215) (use with 99370007)
99374161		Key for assembly of wheel hub internal seals

Aquila Trucks Centres

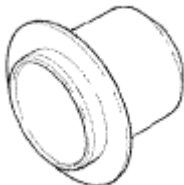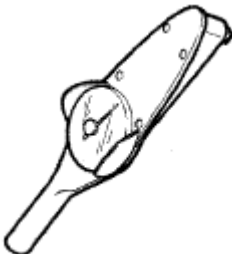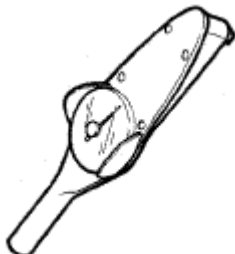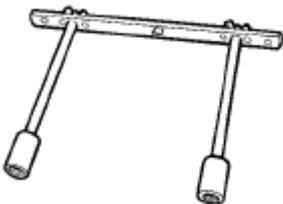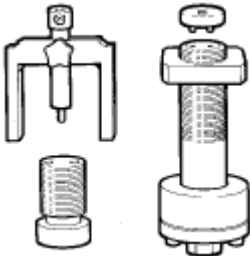TOOL NO.	DESCRIPTION	
99374233		Key to fit differential bevel pinion seal (use with 99370006)
99374451		Tool for axle shaft disassembly-assembly
99389819		Torque wrench from 0 to 10 Nm with 1/4" square connection
99389821		Torque wrench from 0 to 70 Nm with 3/8" square connection
99395026		Tool to check rolling torque of hubs (use with torque wrench)
99395027		Tool to determine differential bevel pinion adjusting shim (use with 99395603)

Aquila Trucks Centres

TOOL NO.	DESCRIPTION
99395603	Dial gauge (0-5 mm)
	


Aquila Trucks Centres

525010 REAR AXLE ASSEMBLY OVERHAUL

NOTE For repairs on the wheel hubs, epicycloid reduction units, drive shaft and flow divider differential removal-refitting operations, follow the instructions for the 451391/2D - 452191/2D - 453291/2D axles.


526210 REPAIRING THE DIFFERENTIAL Disassembly

Figure 4

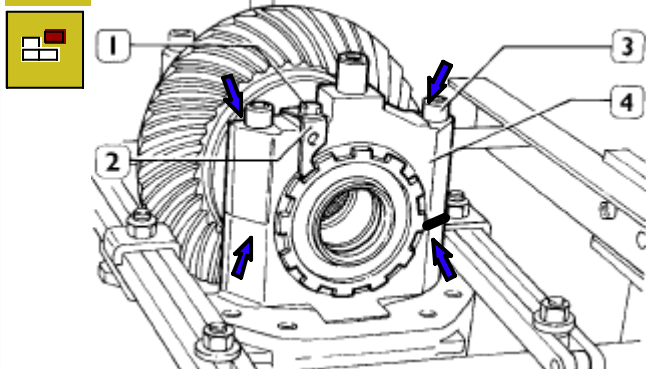


Heat the points indicated by the arrows with electric drier 99305121 and unscrew the screw (1) sealed with LOCTITE. Remove the safety plate (2). Unscrew the screws (3) sealed with LOCTITE. Remove the caps (4) and ring nuts.

Figure 5

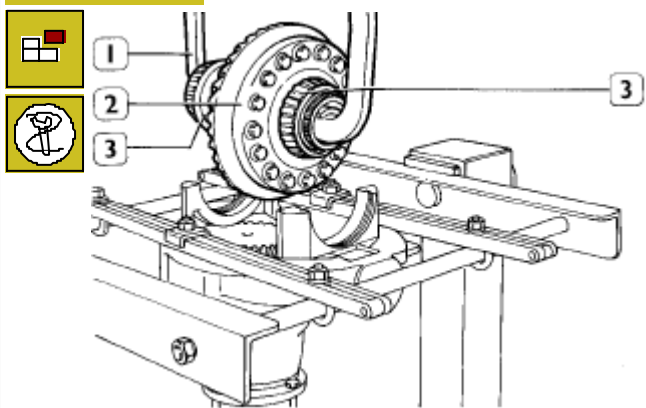


Raise the differential housing (2) and bearings (3) using a hook (1).

Figure 6

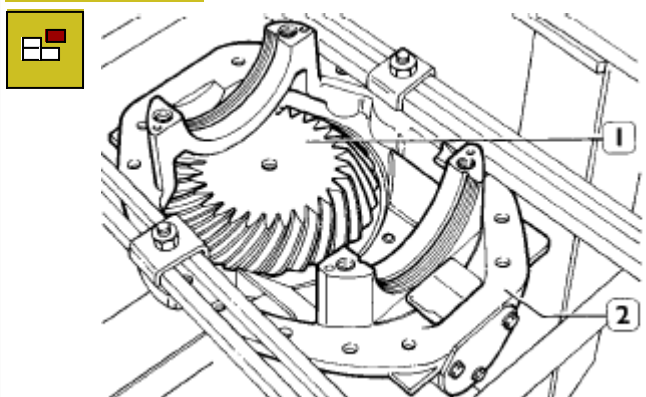


View of pinion (1) inside the differential carrier (2).

Figure 7

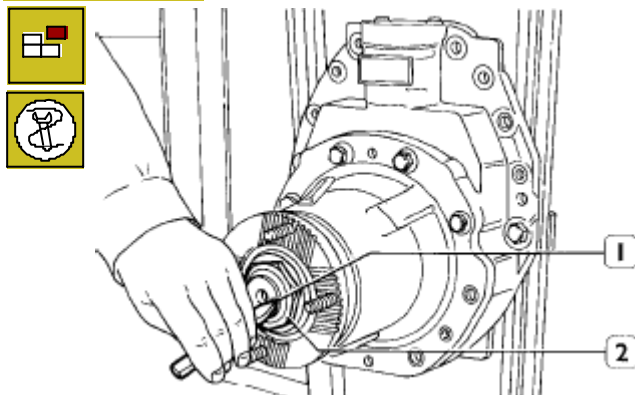


Use a punch to remove the securing (1) notch and unscrew the nut (2) as described below.

Figure 8

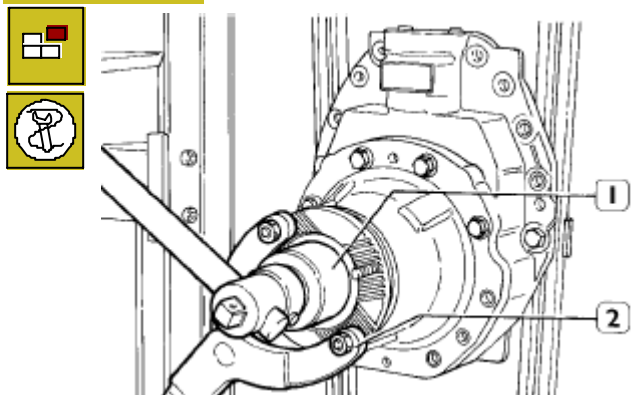

Block the rotation of the drive coupling flange with the reaction lever 99370317 (2), and loosen the drive coupling flange fixing nut using the Allen wrench 99355081 (1).

Figure 9

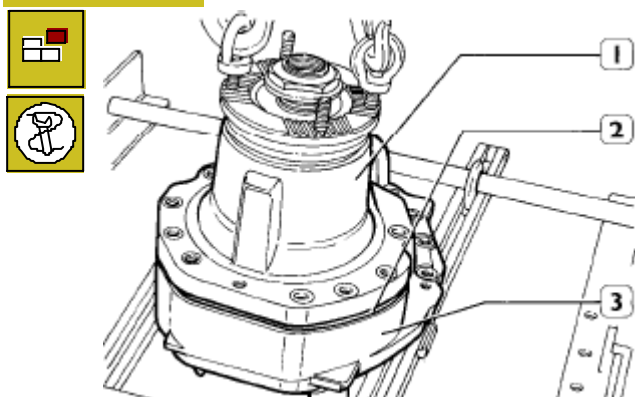


Unscrew the bolts that fix the bevel pinion support to the differential carrier. Extract the support (1) and bevel pinion from the differential carrier (3); remove the pinion/bevel gear positioning shims (2).

Aquila Trucks Centres

Disassembling the differential housing


Figure 10

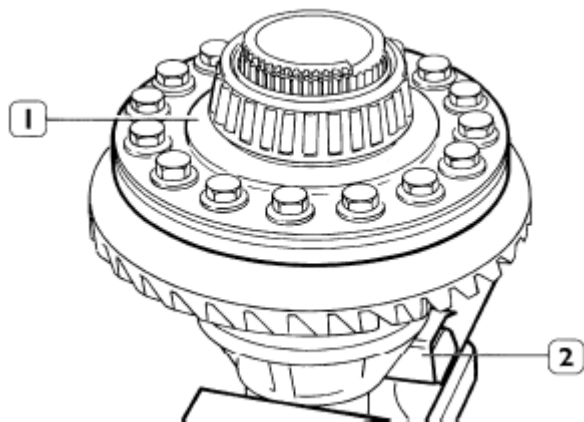

39558

Fit the gear housing (1) in a vice (2).


Figure 11

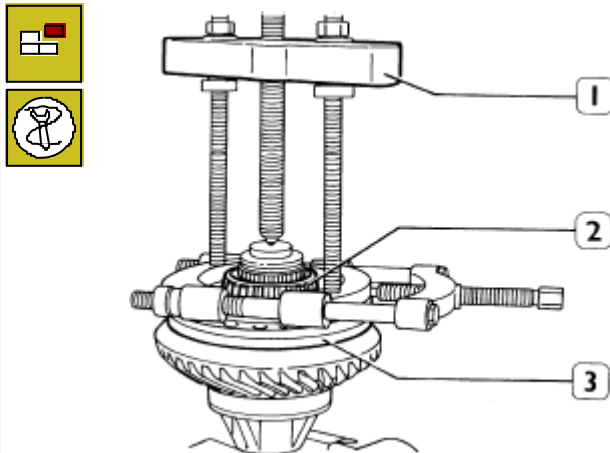

39559

Using extractor 99348001 (1), extract the support bearing (2) on the toothed side from the differential housing (3).


Figure 12

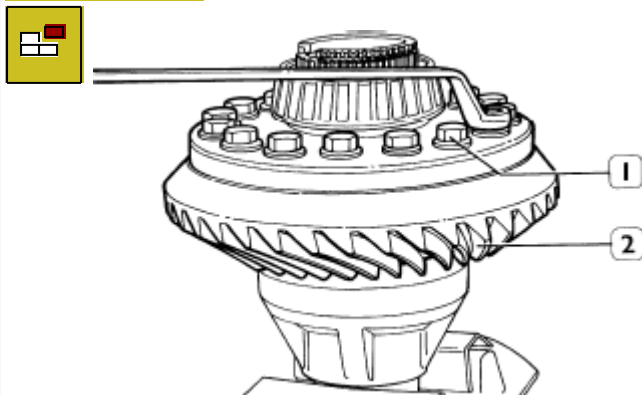

39560

Loosen and remove the screws (1).
Detach the ring bevel gear (2) using a punch.


Figure 13

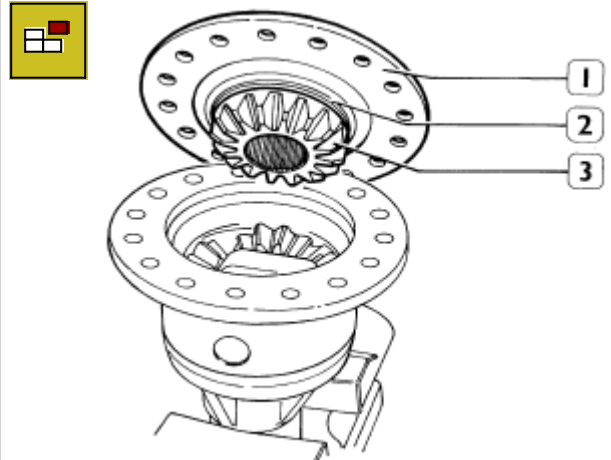

39561

Remove the differential housing cover (1).
Remove the crown wheel (3) from the differential housing, together with the shoulder washer (2).

Figure 14

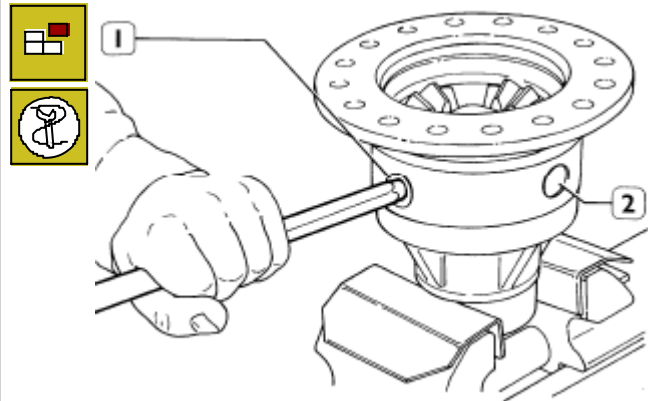

39562

Using a punch, first extract the long pin (1) and then the two short pins (2).


NOTE The exact position of the pins is marked on the spider body by a long stripe for the long pin, and by two short stripes for the short pins.

Remove the spider and the four planetary gears with the relevant shoulder washers.
Remove the crown wheel and shoulder washer.

Aquila Trucks Centres

Disassembling the bevel pinion support



Figure 15

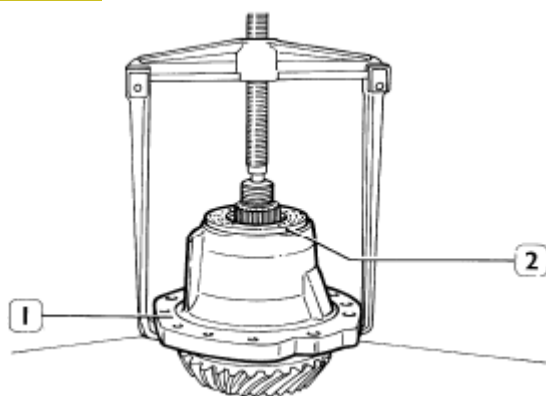

39563

Using an extractor, positioned as shown in the drawing, extract the bevel pinion with bearing and support adjusting ring (1).
Extract the seal ring (2).

 
Figure 16

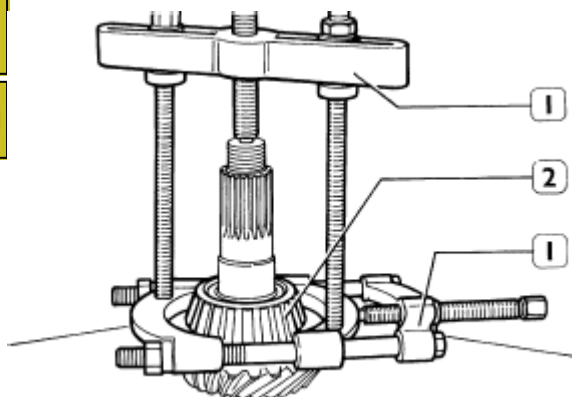

39564

Using extractor 99348001 (1), extract the bearing (2) from the bevel pinion.

Figure 17

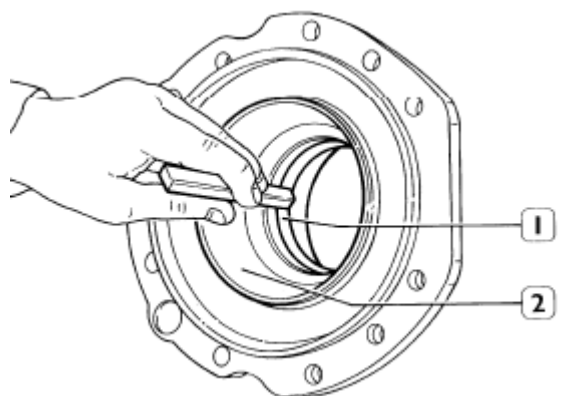

39565

Using a punch, remove the front and intermediate bearing external rings (1 and 2) from the support.
Remove the oil baffle.

CHECKING THE DIFFERENTIAL COMPONENTS

Carefully clean all of the individual differential components. Lubricate the bearings and make sure that the roller support cage rotates freely, without sticking. Check the ring bevel gear and half-casing contact surfaces, making sure that the bevel gear matches perfectly. Any eventual deformation on these surfaces would cause screw vibration on the bevel gear, leading to incorrect assembly operation.

NOTE Carefully clean all the threads to ensure exact adjustments and precise tightening torque values.

Check that the splined section used to key the flange on the pinion is not worn. Replace the pinion if necessary.


NOTE If either the bevel gear or pinion need to be changed, both parts must be replaced as they are provided as coupled spare parts.

Check the side pinions with relative shoulder washers, and the spider and crown wheels with relative shoulder washers. Replace all sealing elements and safety washers with new parts.

Aquila Trucks Centres


Assembling the differential housing

Figure 18

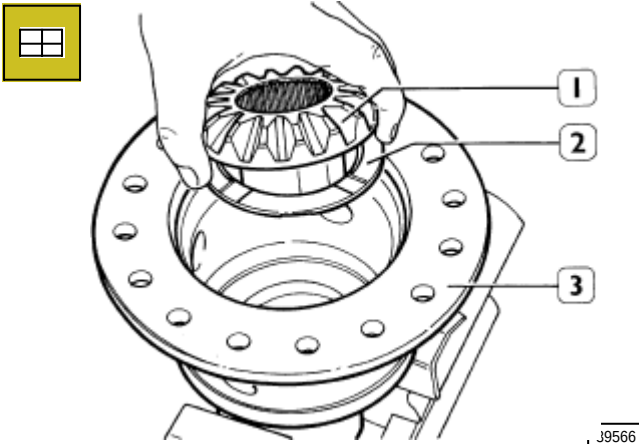


Place the differential housing (3) on a suitable support, position the crown wheel (1) in its seat, together with the shoulder washer (2).

Figure 19

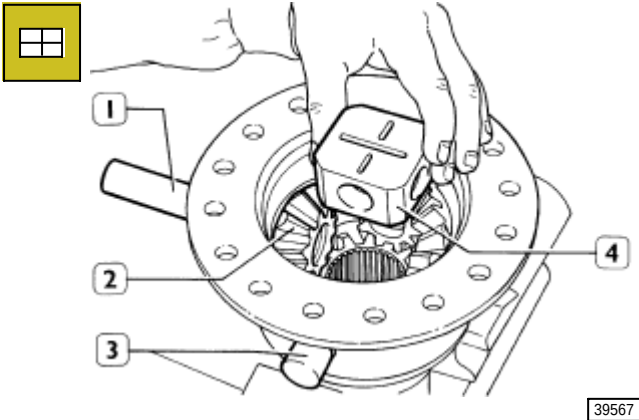


Assemble the four side pinions (2) with the shoulder washers and insert the spider (4). Insert the long pin (1) and the two short pins (3). The exact position of the pins is marked on the spider body (4) by a long stripe for the long pin, and by two short stripes for the short pins.

Figure 20

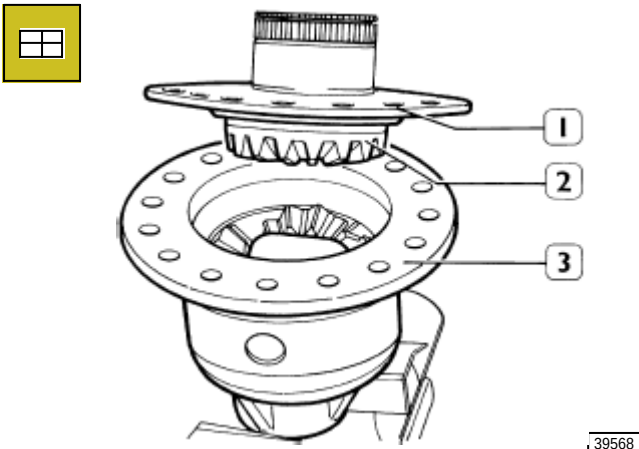


Position the crown wheel (2) and shoulder washer on the side pinion gear unit. Fit the cover (1) on the differential housing (3) by centering the fixing screw holes.

Figure 21

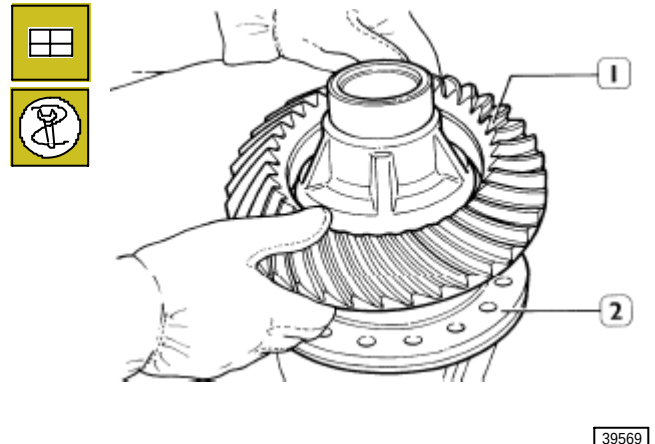

Heat the ring bevel gear (1) to approx. 80°C, fit in position in the differential housing (2) and secure with the two fixing screws.

Figure 22

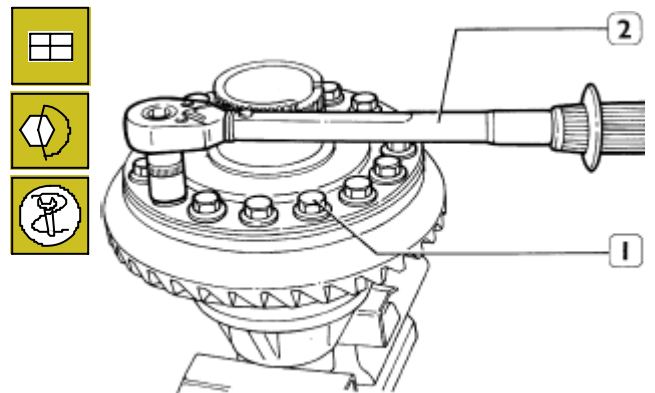


Fit the other screws (1) and tighten with a torque wrench (2) to the specified torque. Heat the support bearings with electric drier 99305121 and assemble in the differential housing.

Aquila Trucks Centres


Assembling the bevel pinion support

Figure 23

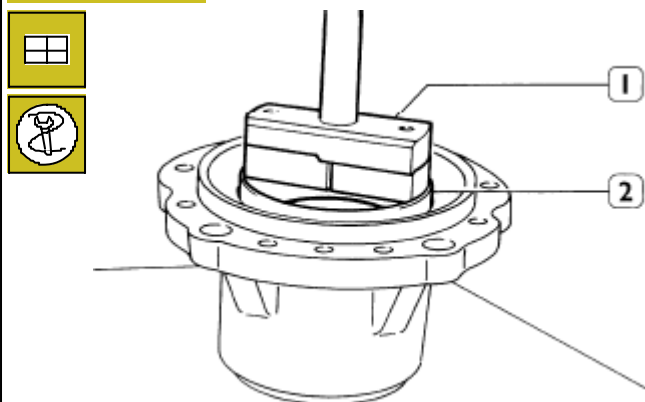


Fit a new oil baffle on the pinion support.
Fully fit the external ring (2) for the front bearing into the seat, using punch 99374093 (1), and the external ring for the rear bearing, using punch 99374094, into the seat.
Procedure to follow to determine the thickness of the bevel pinion rolling torque adjusting ring.

Figure 24

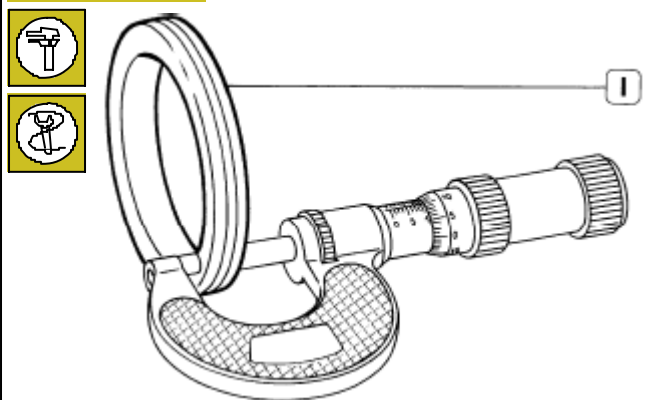


Measure and note the thickness of the adjusting ring (1) on disassembly (value A).

Figure 25

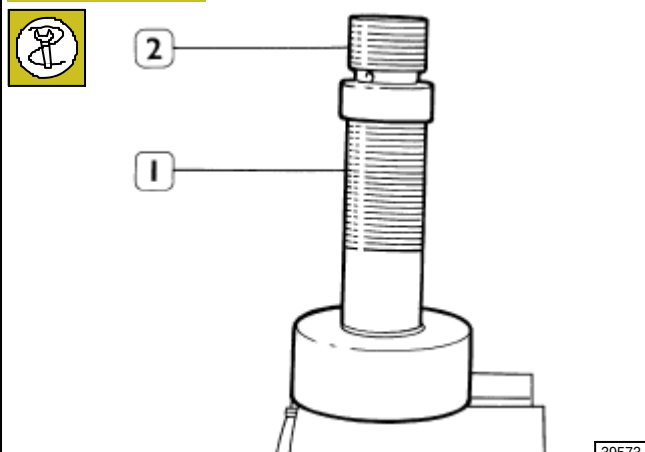

Secure tool 99395027 (1) and extension (2) in a vice.

Figure 26

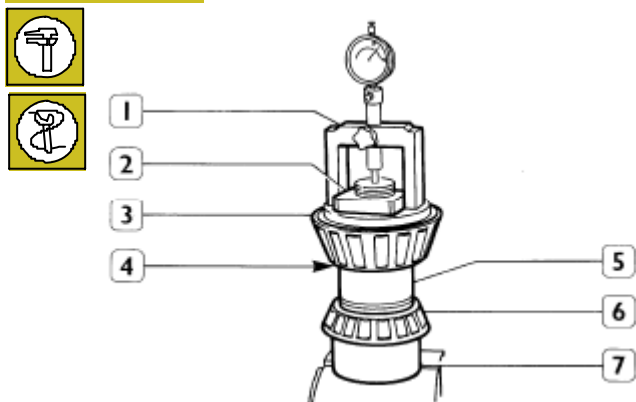

Fit the following parts on tool 99395027:

- the bearing (6) on the pinion-side;
- the spacer ring (5), the previously measured adjusting ring (4) and the bearing (3).


Fully tighten the ring nut (2).

Position part (1) of tool 99395027 (7) on the bearing (3), fitted with a zero-set dial gauge on the end of the tool (7).

Then remove:

- the part (1);
- the ring nut (2);
- the bearing (3);
- the adjusting ring (4) on the tool (7).


Figure 27

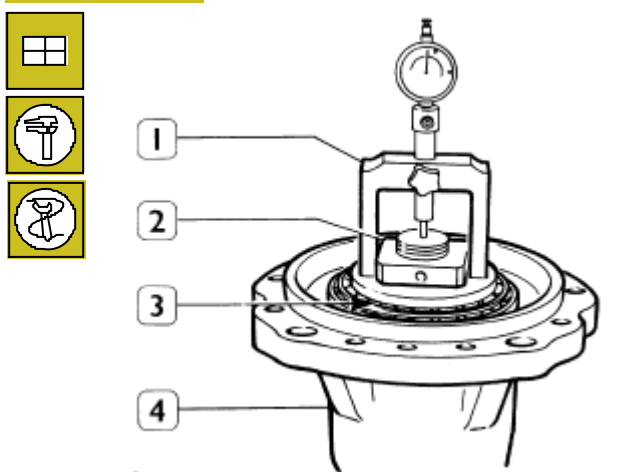

Position the support (4, Figure 27) on the bearing (6, Figure 26) and assemble the bearing (3) on the support. Tighten the ring nut (2) by hand. Check the rolling torque as indicated in Figure 28.

Aquila Trucks Centres

Figure 28

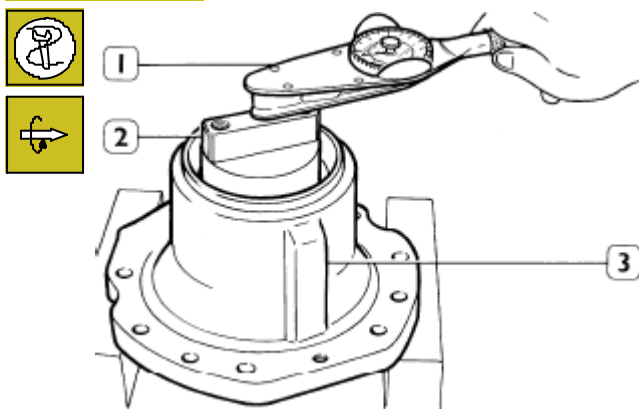

39576

Position the complete support (3) on two parallel blocks; using the torque wrench (1) applied on the tool (2) and read the rolling torque. This value should be:

- 6 to 8 Nm; if not, adjust by means of the ring nut (2, Figure 26).

Position the part (1, Figure 26), with the dial gauge zero-set, on the bearing (3) and read the eventual deviation (value B).

Thickness **S** on the adjusting ring is provided by the following formula:

Where:

A = thickness of the adjusting ring assembled for dial gauge zero-setting;

B = deviation value read;

C = 0.05 mm coefficient which takes into account the expansion of the bearings as a result of the assembly negative allowance on the bevel pinion.

First example:

A = 10.12 mm

B = + 0.13 mm

C = 0.05 mm

$$S = 10.12 - (+ 0.13) + 0.05 =$$

$$S = 10.12 - 0.13 + 0.05 = 10.04 \text{ mm}$$

Second example

A = 10.12 mm

B = - 0.13 mm


C = 0.05 mm

$$S = 10.12 - (- 0.13) + 0.05 =$$

$$S = 10.12 + 0.13 + 0.05 = 10.30 \text{ mm}$$

On completion of the operation, remove the parts of tool 99395027.

Figure 29

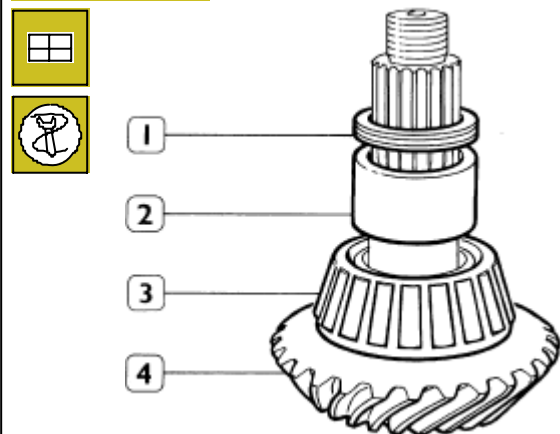

39577


Heat the bearing (3) with electric drier 99305121 and fit on the bevel pinion (4).

Fit the spacer (2).

Assemble the adjusting ring (1) with the same thickness as previously noted, and position on the bevel pinion.

Fit the bevel pinion on the support, complete with external rings for bearings.

Figure 30

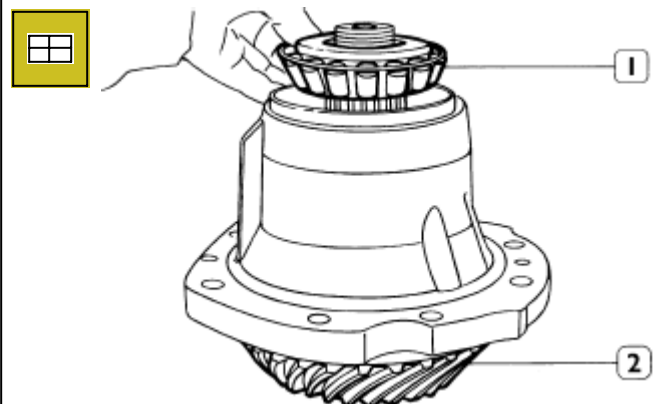


39578

Heat the bearing (1) with electric drier 99305121 and position in the bevel pinion (2) seat using a punch.

Aquila Trucks Centres


Figure 31

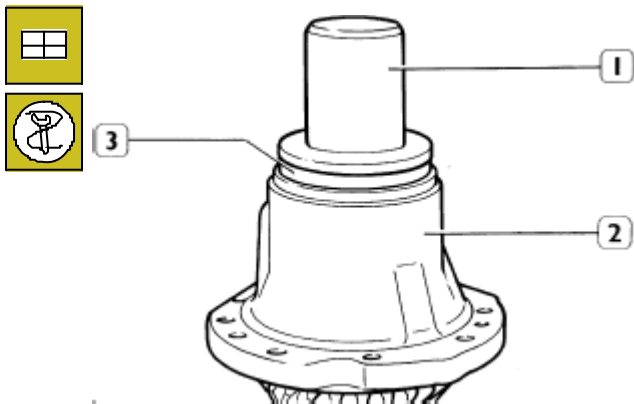

39579

Using key 99374233 (1) fit the new seal (3) on the support (2). Spare part seals are supplied pre-lubricated and with grease between the lips.

Figure 32

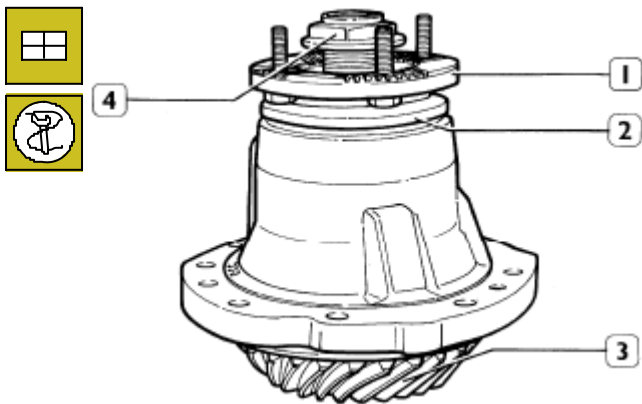


39580

Position the drive coupling flange (1), complete with baffle (2), on the splined section of the bevel pinion (3) and settle in the seat with a punch. Provisionally tighten the fixing nut (4).

Differential carrier assembly

Figure 33

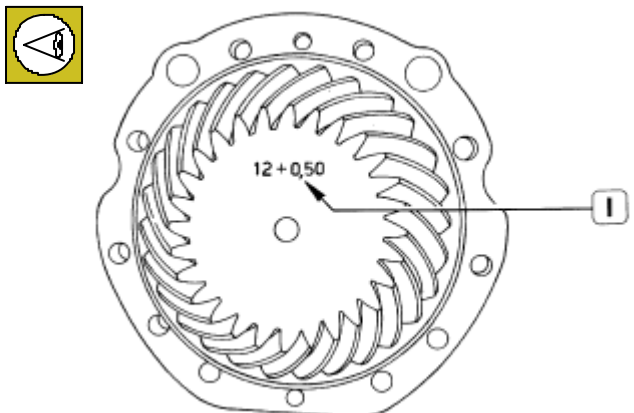

39581

Before fitting the bevel pinion support assembly on the differential carrier, check the value (1) marked on the bevel pinion and, by consulting the table in Figure 34, the thickness of

the adjusting shim to be positioned between the support and the carrier will be given.

Example:

If the reference value (1) marked on the bevel pinion is + 0.5, the thickness of the adjusting ring must be 1.5 mm.


The adjusting rings are available in the following dimensions: 0.2, 0.3, 0.5, 1 mm.

Figure 34

Value marked on the bevel pinion	Total thickness of adjusting ring
0	0.5
0.1	0.6
0.2	0.7
0.3	0.8
0.4	0.9
0.5	1.0
0.6	1.1
0.7	1.2
0.8	1.3
0.9	1.4
1.0	1.5

SUMMARY TABLE TO DETERMINE THE THICKNESS OF THE BEVEL PINION POSITION ADJUSTING RING

Figure 35

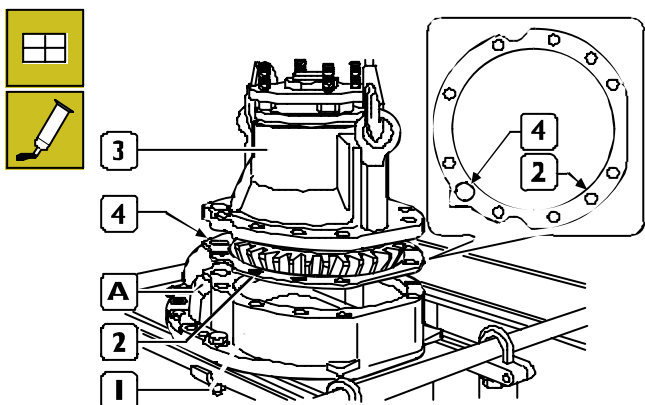

71850


Apply LOCTITE 573 on the differential housing (1) contact surface, adding LOCTITE 510 around the holes indicated by the arrows. Fit the adjusting ring (2) on the differential housing (1), so that the hole (4) faces towards upper part A of the differential housing. Using eyebolts and cables, fit the bevel pinion assembly support (3) on the differential housing (1). Tighten the fixing screws to the correct torque value.



Apply LOCTITE 573 on the threads of the screws that pass through the holes on the differential housing.


Aquila Trucks Centres

Figure 36

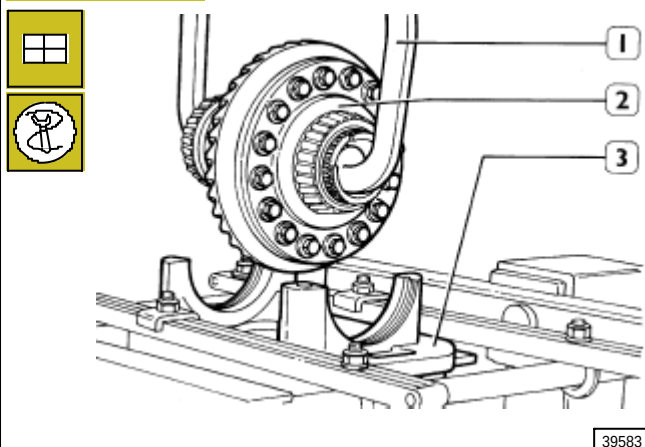


Using the hook (1), raise the previously assembled differential housing (2) and position on the differential housing (3).

Figure 37

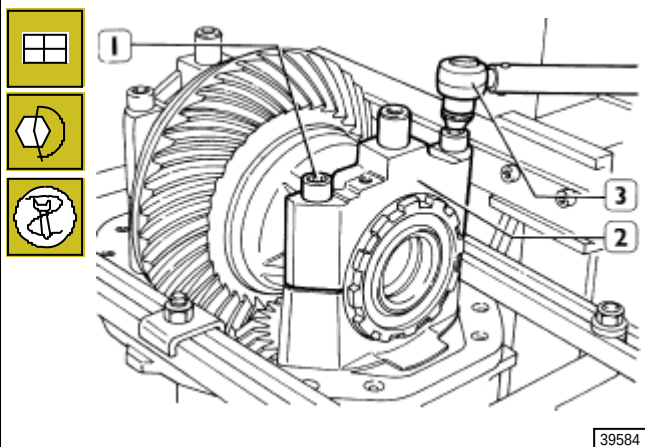

Fit the external bearing rings and position the caps (2), and tighten the screws (1) without fully screwing down. Fit the adjusting ring nuts, making sure that they screw on easily. Using a torque wrench (3), tighten the screws (1) to the correct torque value.


Figure 38

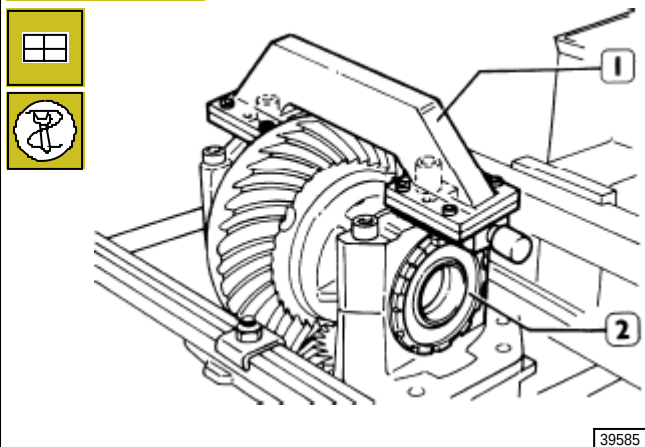

Position tool 99370133 (1) as shown in the drawing to avoid excessive spread on the caps during adjustment operations.

Adjusting the rolling torque on the differential housing bearings

Figure 39

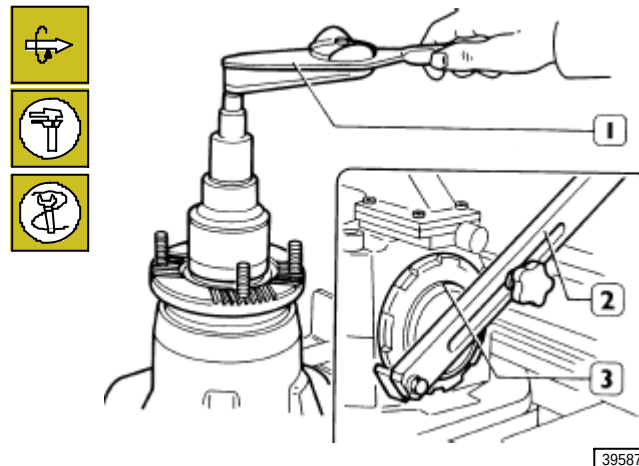

The total rolling torque reading is carried out when there is a clearance between the teeth on the bevel gear pair. However, the total rolling torque value varies according to the reduction bevel gear pair ratio (see following table).

Using torque wrench 99389819 (1) and the appropriate Allen wrench, check that the total torque value corresponds with that indicated on the following table, according to the reduction bevel gear pair ratio.


Figure 40

No. of teeth	Ratio	Total rolling torque (Nm)
13/35	2.692	a + (1.1 - 1.5)
15/34	2.267	a + (1.3 - 1.8)
17/35	2.059	a + (1.5 - 1.9)
17/36	2.118	a + (1.4 - 1.9)
19/33	1.737	a + (1.7 - 2.3)
21/34	1.619	a + (1.9 - 2.5)
21/40	1.905	a + (1.6 - 2.1)
23/36	1.565	a + (1.9 - 2.6)
24/35	1.458	a + (2.1 - 2.7)
28/37	1.321	a + (2.3 - 3.0)
27/32	1.185	a + (2.5 - 3.4)
27/37	1.370	a + (2.2 - 2.9)
34/37	1.088	a + (2.7 - 3.7)

$$a = 7.5 \div 9.5 \text{ Nm}$$

Aquila Trucks Centres


Figure 41

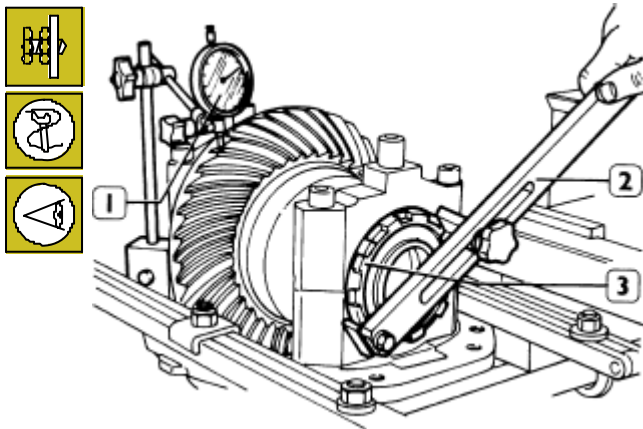

Adjust the axial clearance between the teeth on the pinion/bevel gear, which should be 0.15 to 0.35 mm, proceeding as follows:


- Position a magnetic dial gauge (1) as shown in the drawing.
- Using wrench 99355205 (2), tighten the bearing adjustment ring nut (3) whilst loosening the ring nut on the opposite side by the same amount. This prevents the previously measured rolling torque from varying.

Figure 42

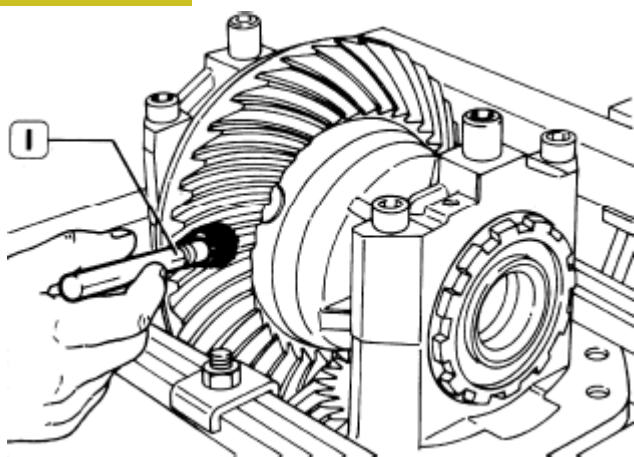


Using a brush (1) apply a light covering of Prussian blue on the teeth of the bevel gear. Rotate the pinion and check the coloured contact marks that the pinion teeth have made on the bevel gear teeth. The following drawings illustrate possible contact marks and the operations required in order to correct the faults.

Figure 43

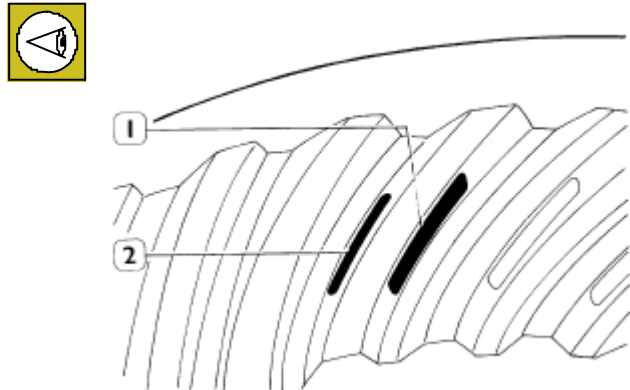


The contact marks should be on both the leading face (1) and the pushing face (2), more or less in the centre between the teeth. When working without a load, both contact zones should be slightly out of position in relation to the external diameter of the bevel gear.

Figure 44

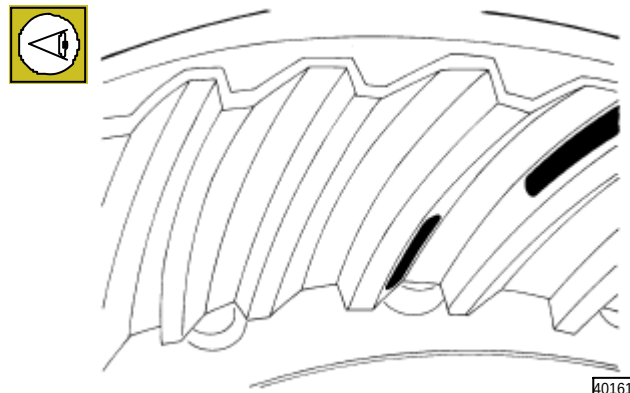

If the mark on the leading face (towards the external diameter) and on the pushing face (towards the internal diameter) is out of position, the pinion is located too close to the bevel gear.
- Solution: decrease the thickness of the adjusting ring between the intermediate bearing and the bevel pinion (2, Figure 35).


Figure 45

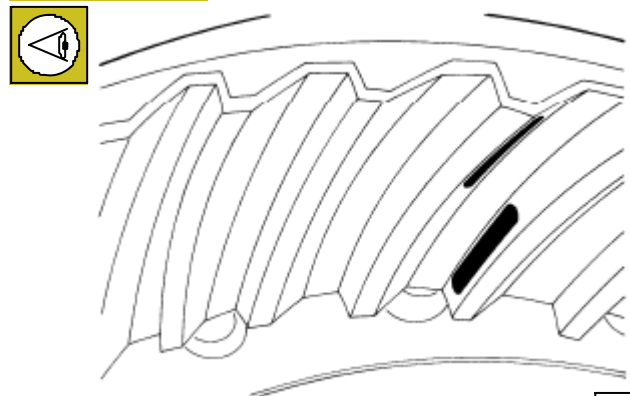

If the mark on the leading face is positioned towards the internal diameter, and on the pushing face it is located towards the external diameter of the bevel gear, the pinion is located too far away from the bevel gear axis.
- Solution: increase the thickness of the adjusting ring between the intermediate bearing and the bevel pinion (2, Figure 35).

Aquila Trucks Centres

Figure 46

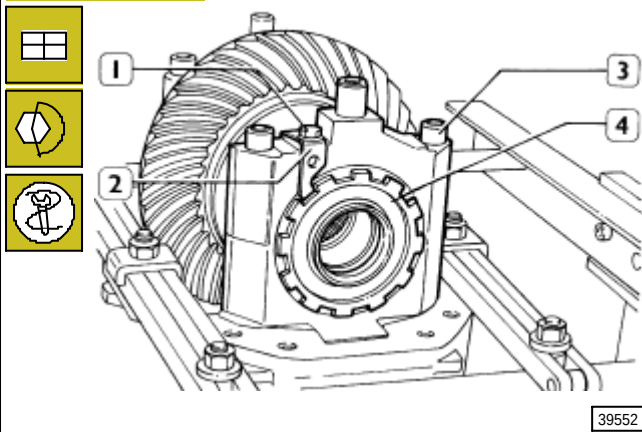

Position the plate (2) and tighten the fixing screws (1) to the correct torque value.

If the plate (2) does not coincide with the notch on the ring nut (3), slightly rotate the ring nut until the plate and ring nut notch coincide. Repeat this operation on the opposite side.

Aquila Trucks Centres

Aquila Trucks Centres

Axles in tandem
ARVINMERITOR MT23-155/2D

Page

AXLES IN TANDEM MT 23-155/2D

INTERMEDIATE AXLE MD11-155/2D 193÷234

REAR AXLE MR11-155/2D 235÷264

Aquila Trucks Centres

Aquila Trucks Centres

**Intermediate Axles
ARVINMERITOR MD11-155/2D**

	Page
DESCRIPTION	195
LOCATION OF DIFFERENTIAL UNIT PLATES - REAR AXLE	196
MAIN DATA	197
TIGHTENING TORQUES	199
TOOLS	201
EXPERIMENTAL TOOLS	207
INTERMEDIATE REAR AXLE ASSEMBLY OVERHAUL	208
OVERHAULING THE WHEEL HUBS	208
- Removal	208
- Wheel hub component check	209
REPLACING THE WHEEL HUB BOLTS	210
- Wheel hub reassembly	210
DIFFERENTIAL CARRIER REMOVAL	212
- Case removal	212
- Differential housing removal	218
- Checking the differential components	219
- Refitting the differential housing	219
ASSEMBLING DIFFERENTIAL CARRIER	221
- Calculating bevel pinion position in differential carrier	221
EXAMPLES	221
- Adjust the limit switch of the differential interaxle lock control pin	225
- Adjusting drive input shaft bearing end float ...	226
ADJUSTING THE CAP SPREAD	227
CORRECTING THE BEVEL GEAR PAIR CONTACTS (AFTER FITTING IN PLACE) ...	230

Aquila Trucks Centres

Page

REMOVAL-OVERHAUL-REFITTING OF INTERAXLE SHAFT	233
--	-----

- Adjustment of interaxle shaft bearing end play	234
---	-----


Aquila Trucks Centres

DESCRIPTION

The intermediate axle is of the full-floating, single-reduction type and consists of a steel case housing the inter-axle differential and the main differential. Drive is transmitted from the inter-axle differential to the main differential by means of two helical gears.

The rear axle is fitted with an air-controlled differential lock device. Wheel hubs are mounted on two taper roller bearings floating on the sleeve and adjusted by means of a threaded nut. Brakes are of the drum DUO-DUPLEX type.

Figure 1

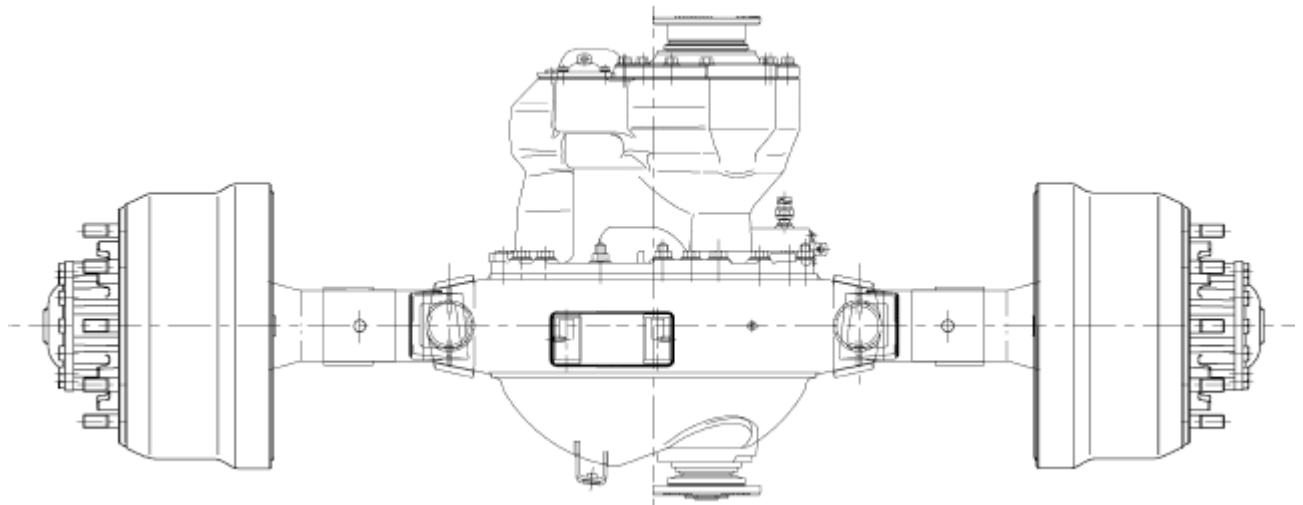

107467

Aquila Trucks Centres


LOCATION OF DIFFERENTIAL UNIT PLATES - REAR AXLE

The plates contain all information and details relating to either DIFFERENTIAL UNIT and REAR AXLE.

On rear axle, two plates are present: one on the differential unit and one in same position on rear axle box. On the notifications of interventions under guarantee, rear axle box and differential unit plate data must always be shown. It is suggested always to read and copy out shown data before any repair so as to order correct spare parts and transmit correct information to either IVECO Service Network.

Plate is never to be removed from the unit.

Figure 2

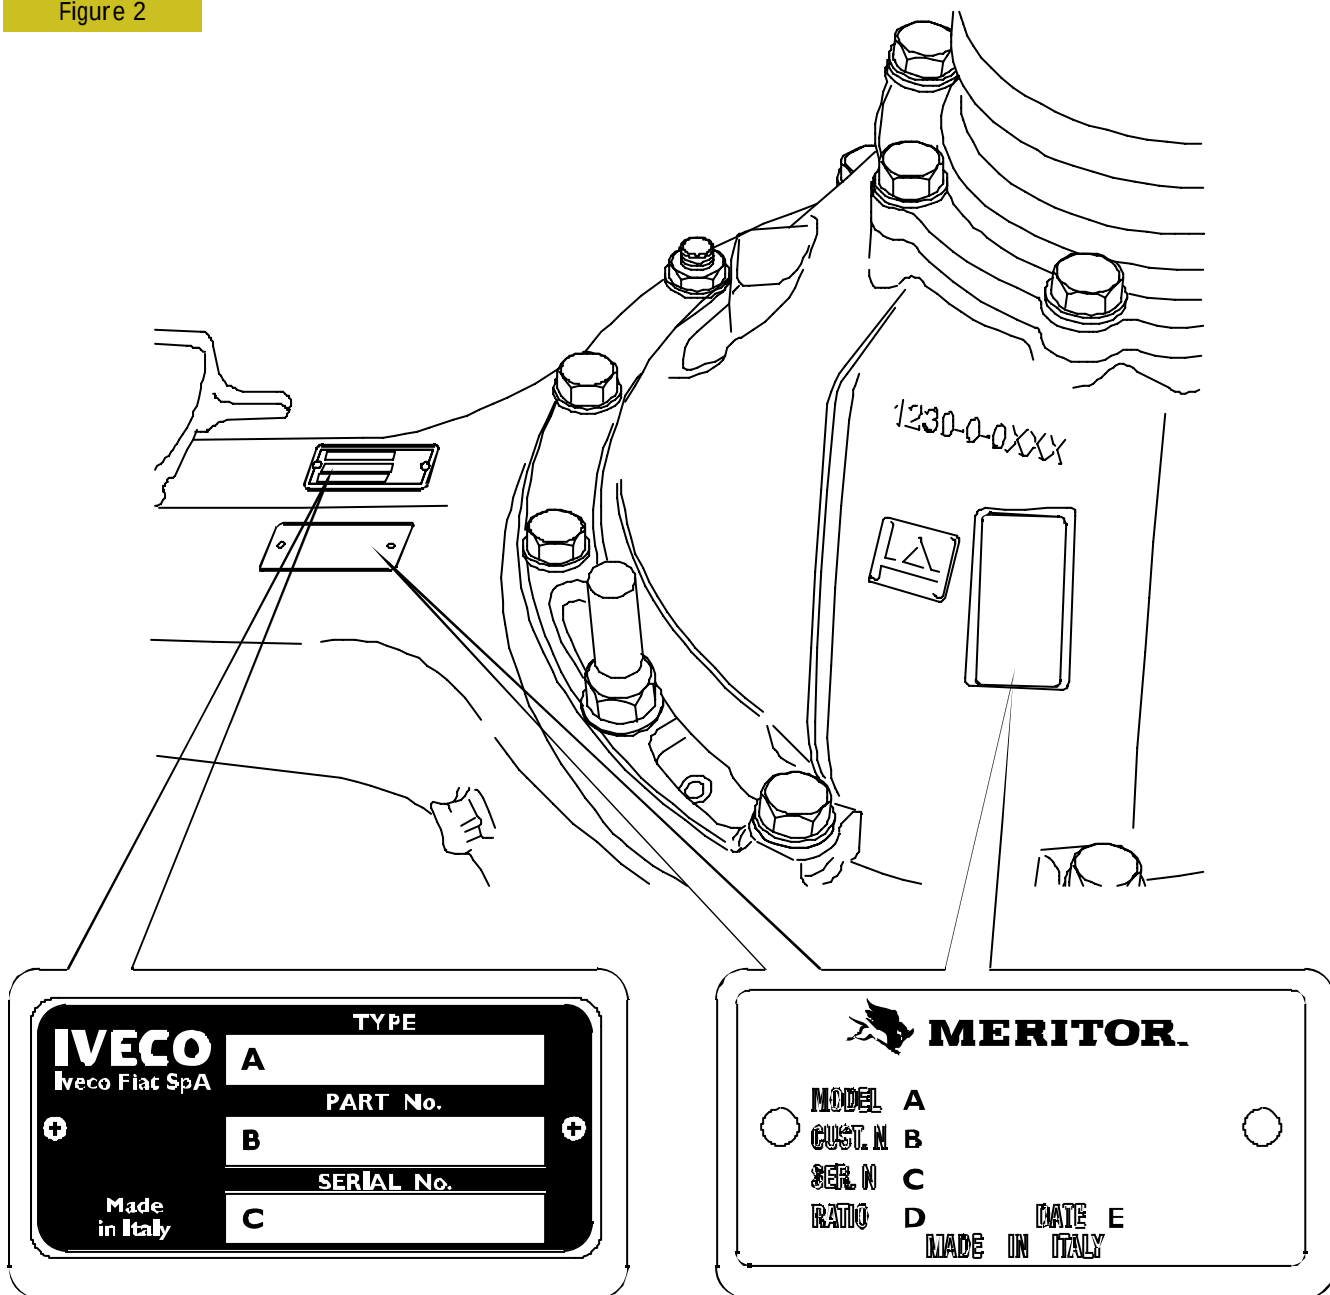

86620

IVECO identification plate

 
- A = identifies rear axle type
- B = drawing number
- C = production progressive number

ARVINMERITOR identification plate









- A = identifies the family the item is belonging to / the model
- B = drawing number
- C = ArvinMeritor series number
- D = rear axle ratio
- E = production date

Aquila Trucks Centres

MAIN DATA


	Axle type: Full-floating, single reduction with air-controlled differential lock device	MT23-155/2D
DIFFERENTIAL 	Final bevel gear ratio (number of teeth: pinion/crown wheel) Standard on models:	4.50 (8/36) - 4.13 (8/33) - 3.78 (9/34) - 3.40 (10/34)
	Bevel drive pinion bearings	2 taper roller
 	Bevel drive pinion bearing rolling torque New bearings Used bearings	2.30 ÷ 7.40 0.23 ÷ 0.74 3.00 ÷ 5.30 0.30 ÷ 0.53
  	Bearing drive pinion preloading adjustment	by shims
 	Shim thickness range or bevel pinion bearing preloading adjustment	-
 	Bevel drive pinion bearing rolling torque New bearings Used bearings	0.20 ÷ 0.46 0.30

       Aquila Trucks Centres

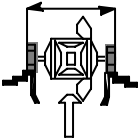	Bevel pinion to crown wheel end play adjustment	By ring nuts
	Cap divergency	0.05 ÷ 0.23
	Differential carrier bearing rolling torque Nm kgm	1.7 ÷ 3.9 0.17 ÷ 0.39
	Cap divergency adjustment	By ring nuts
	Rolling torque between planetary gear and differential gears Nm kgm	-
	Bevel drive pinion setting as to differential carrier	By shims
	Thickness range for shims located between intermediate bearing ring and differential carrier	-
INTER-AXLE DIFFERENTIAL UNIT		
	Inter-axle differential bearings	2, taper roller
	Inter-axle differential bearing end play mm	0.05 ÷ 0.20
	End play adjustment	By shims
	Inter-axle differential bearing shim thickness range mm	-
	WHEEL HUBS	
	Wheel hub bearings	Two of type UNIT - BEARING
	Wheel hub bearing end play adjustment	Not adjustable Torque tightening by threaded nut
	Rear axle oil Quantity: air suspension litres (kg)	TUTELA W140/M-DA 20 (18)

Aquila Trucks Centres

Figure 3

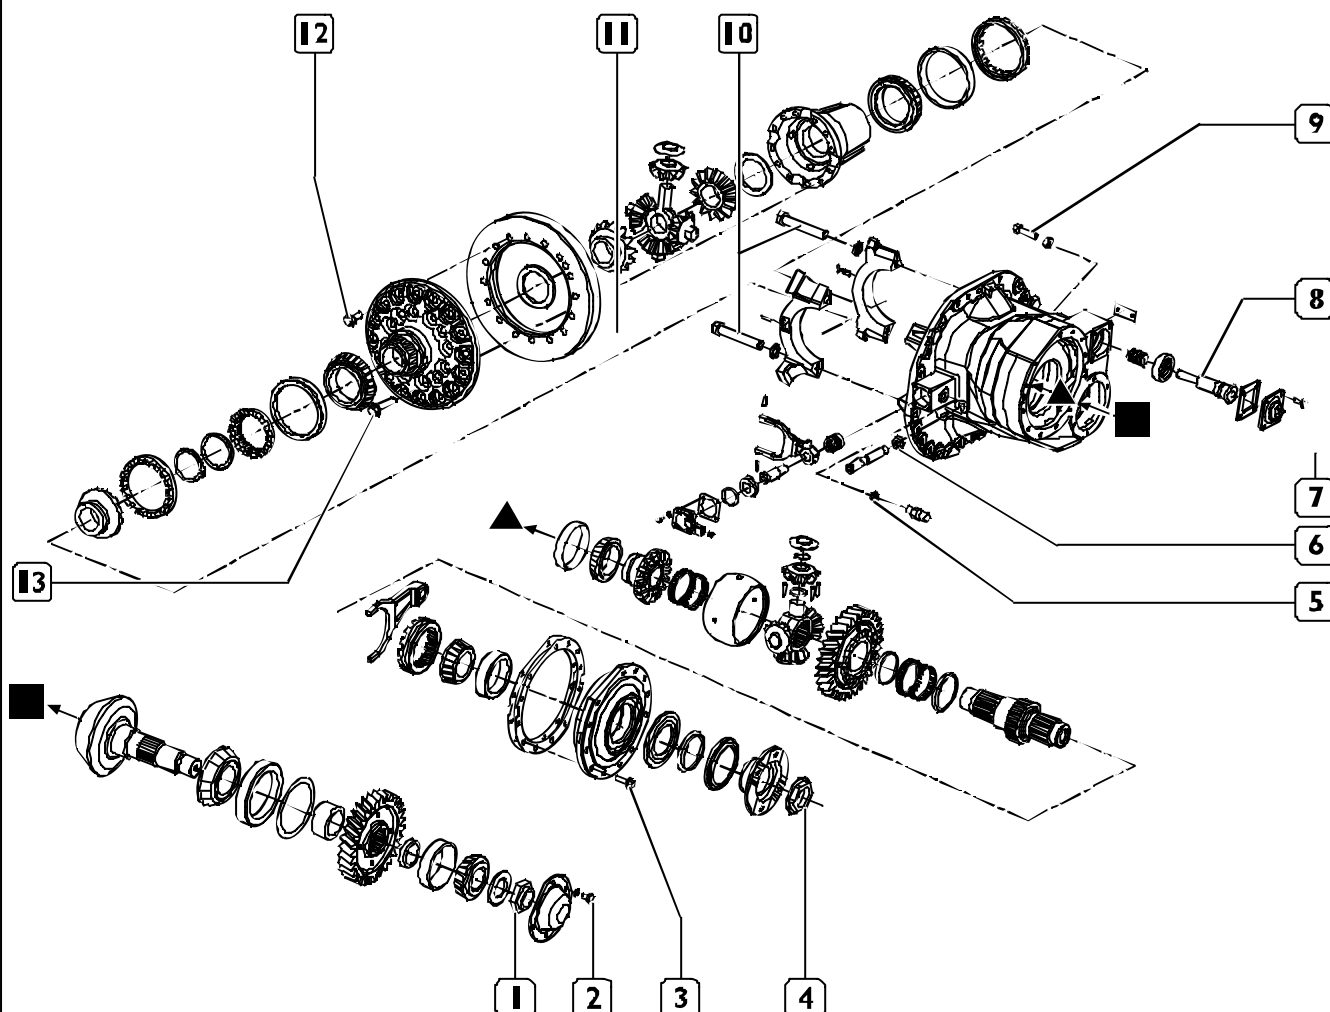


107466

TIGHTENING TORQUES

PART	TORQUE	
	Nm	kgm
1 Pinion nut	1220 ÷ 2035	122 ÷ 203
2 Pinion cover cheese-headed screw	40 ÷ 70	4 ÷ 7
3 Drive input shaft cover cylindrical-headed bolt	75 ÷ 95	7.5 ÷ 9.5
4 Motion input shaft nut	1200 ÷ 1400	120 ÷ 140
5 Sensor switch lock nut	35 ÷ 45	3.5 ÷ 4.5
6 Pressure screw nut	270 ÷ 335	27 ÷ 33.5
7 Longitudinal clamp cover cheese-headed screw	15 ÷ 25	1.5 ÷ 2.5
8 Differential longitudinal clamp piston	180 ÷ 220	18 ÷ 22
9 Adjusting screw	55 ÷ 75	5.5 ÷ 7.5
10 Half-cap fastening cheese-headed screw	650 ÷ 810	65 ÷ 81
11 Differential cover cheese-headed screw	15 ÷ 25	1.5 ÷ 2.5
12 Cover cheese-headed screw	520 ÷ 540	52 ÷ 54
13 Differential casing cheese-headed screw	460 ÷ 480	46 ÷ 48
- Differential lock switch	30 ÷ 50	3 ÷ 5

Aquila Trucks Centres

Figure 4

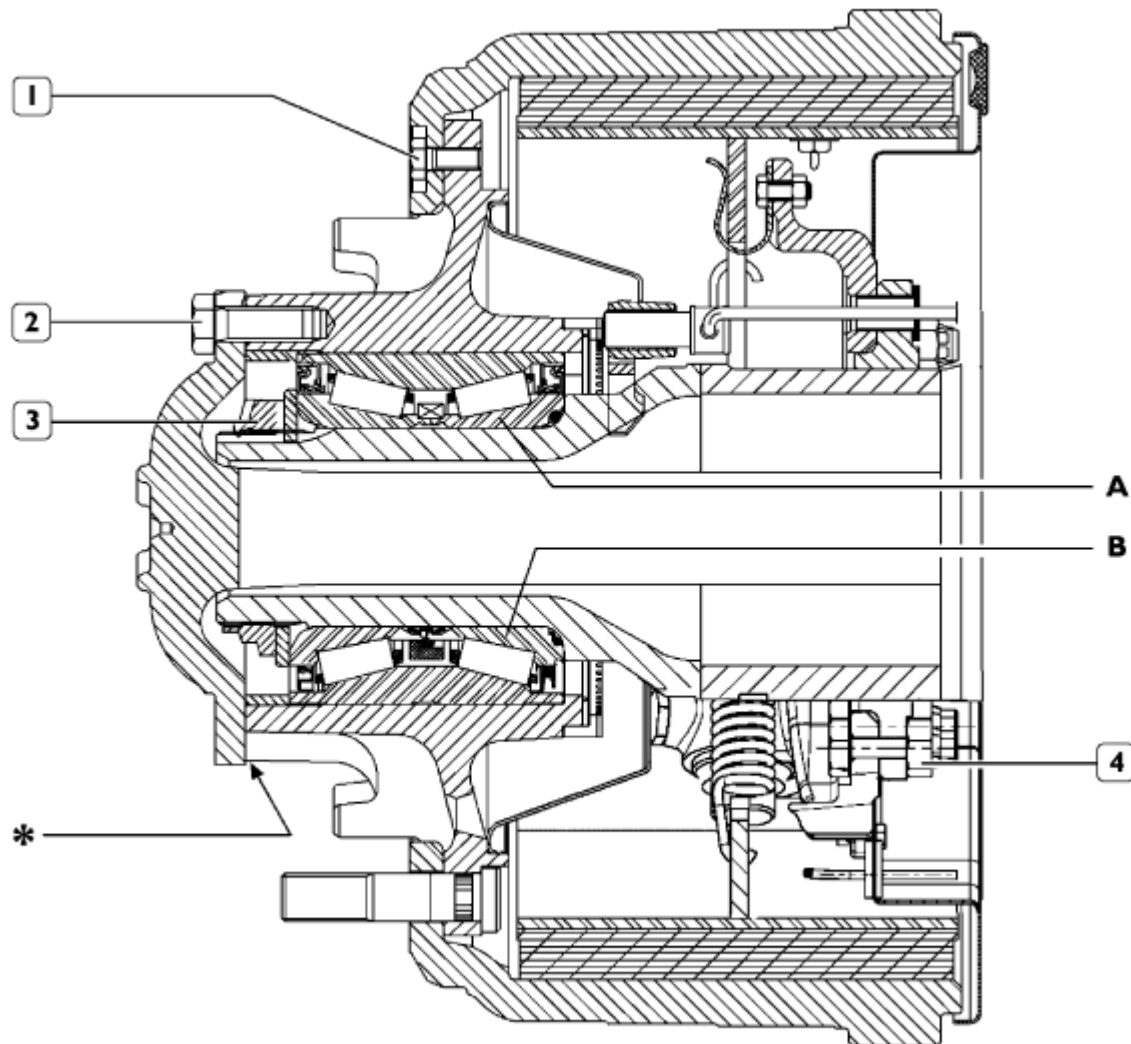

115272

TIGHTENING TORQUES

PART	TORQUE	
	Nm	kgm
1 Screw fixing drum	42 to 67	4.2 to 6.7
2 Screw fixing drive shaft flange	235 to 289	23.5 to 28.9
3 Ring nut for wheel hub bearings	834 to 1030	83.4 to 103
4 Nut for screw fixing brake mount	275 to 304	27.5 to 30.4
D Screw fixing speed sensor mount	5 to 7	0.5 to 0.7

: Spread with sealant type IVECO 1905685 (LOCTITE 14780)




D Spread LOCTITE 245 on the thread

A = TIMKEN bearing





B = SKF bearing

Aquila Trucks Centres





TOOLS

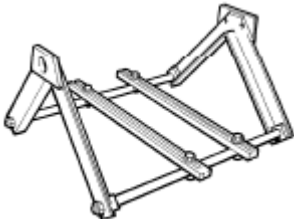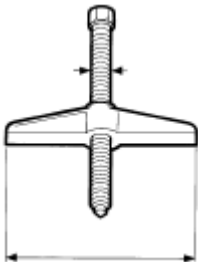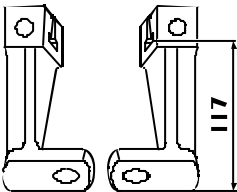TOOL NO.	DESCRIPTION	
99305121		Heater
99322205		Rotary stand for overhauling assemblies (capacity 1000 daN, torque 120 daNm)
99322215		Stand for axle overhauling
99322225		Unit holder (to be mounted on stand 99322205)
99341003		Single-acting lift
99341017		Pair of brackets with holes






Aquila Trucks Centres

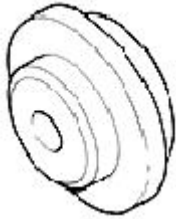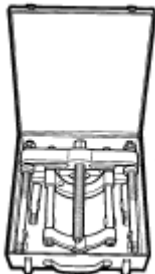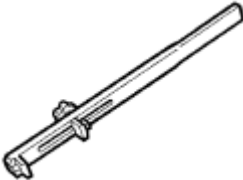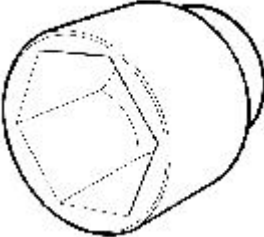TOOL NO.	DESCRIPTION	
99345053		Reaction block for puller tools
99345055		Reaction block for puller tools
99348001		Puller tool with clamping device
99355025		Wrench for differential gearcase bearing adjustment ring nuts
99355069		Wrench (75 mm) for differential bevel pinion nut (to be used with 99370317)
99355131		Wrench (55 mm) for the nut of the drive input flange of the transfer box (use with 99370317)






Aquila Trucks Centres

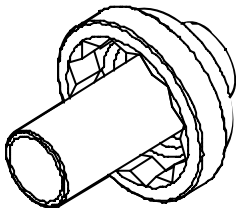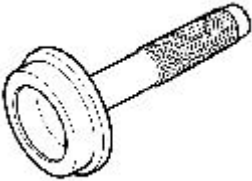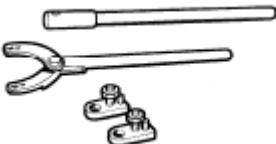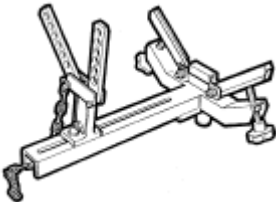TOOL NO.	DESCRIPTION	
99355180		Wrench (105 mm) for wheel hub bearing adjustment nut
99370005		Hand-grip for interchangeable drift punches
99370007		Hand-grip for interchangeable drift punches
99370317		Reaction lever and extension for flange lock
99370509		Hook to remove differential gearcase half-housing
99370616		Support to remove-fit back differential

Aquila Trucks Centres

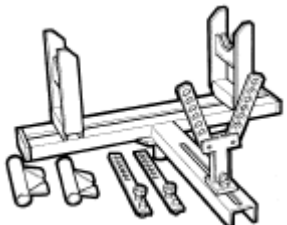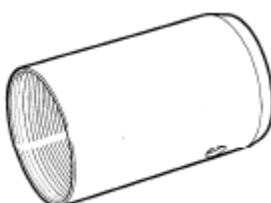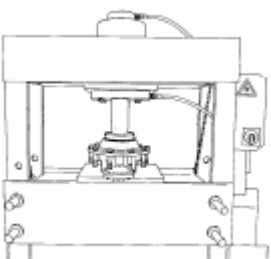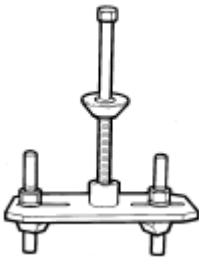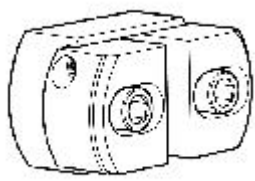TOOL NO.	DESCRIPTION	
99370617		Universal support to remove-fit back rear axles
99370700		Guide to assemble wheel hub
99370706		Tool to fit wheel hub bearing
99370708		Tool for removing wheel hub bearing
99371047		Stand to hold differential half-housing when tightening crown wheel screws (to be used with 99322205 - 99322225)
99374093		Drift punch for installation of bearing outer races (91 ÷ 134) (use with 99370007)

Aquila Trucks Centres

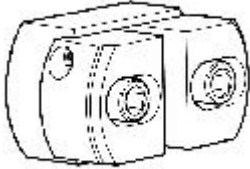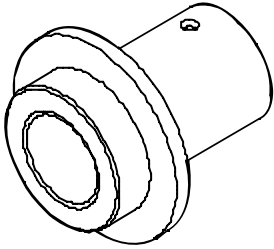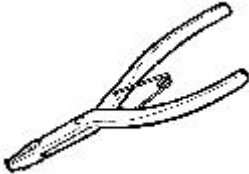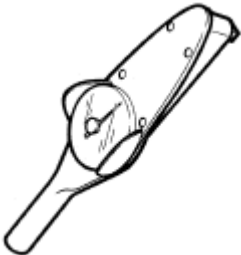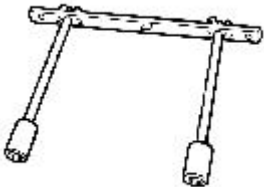TOOL NO.	DESCRIPTION	
99374094		Drift punch for installation of bearing outer races (134 ÷ 215) (use with 99370007)
99374163		Installer, transfer case output shaft seal
99381125		Pliers for removal of circlips on transfer box shaft
99389816		4 x torque multiplier, with square connection, 3/4" in, 1" out (maximum torque 2745 Nm).
99389819		Torque wrench (0 - 10 Nm) with 1/4" square fitting
99395026		Tool for measuring hub rolling drag torque (use with torque wrench)

Aquila Trucks Centres

TOOL NO.

DESCRIPTION


99395603

Dial gauge (0÷5 mm)

Aquila Trucks Centres

EXPERIMENTAL TOOLS


This chapter shows technical construction drawings of the special purpose tools (S.P. 2373) used to service the axle described in this section. These may be built by the repair workshops.

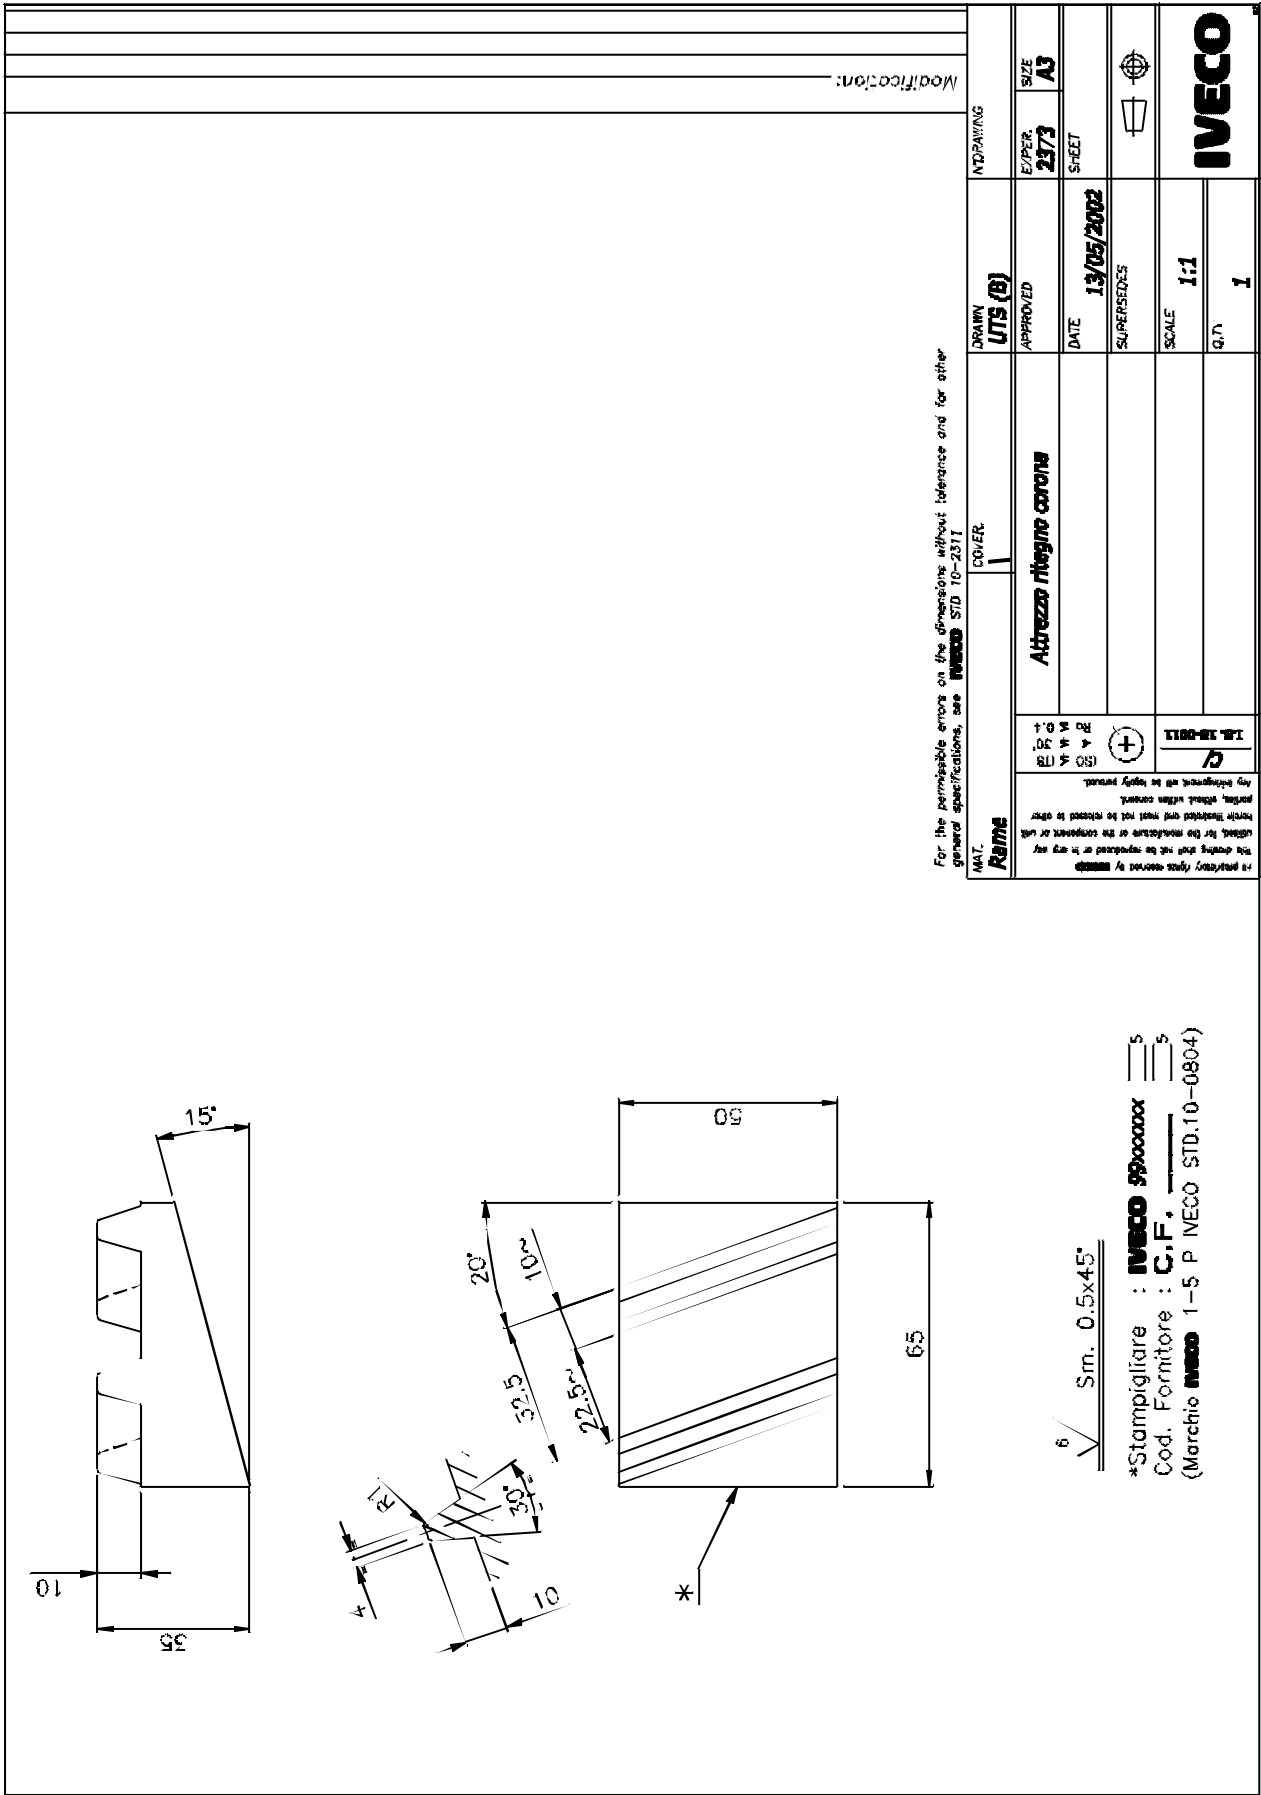

Aquila Trucks Centres

525010 INTERMEDIATE REAR AXLE ASSEMBLY OVERHAUL

Figure 5

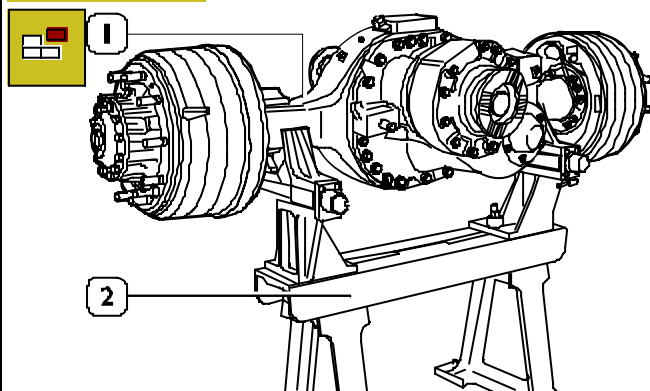


112513

Put the rear axle (1) on the overhaul stand 99322215 (2).

525030 OVERHAULING THE WHEEL HUBS**Removal**


Figure 6

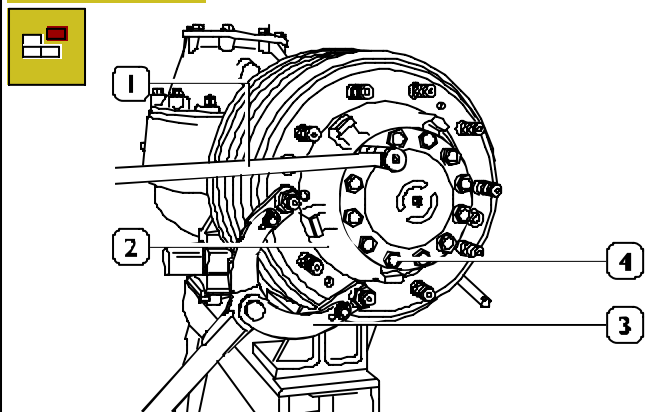

49205

Put a container under the wheel hub to collect the oil. Lock rotation of the wheel hub (2) with the retaining tool 99370317 (3). Undo the screws fixing the drive shaft (4) with the wrench (1).


Figure 7

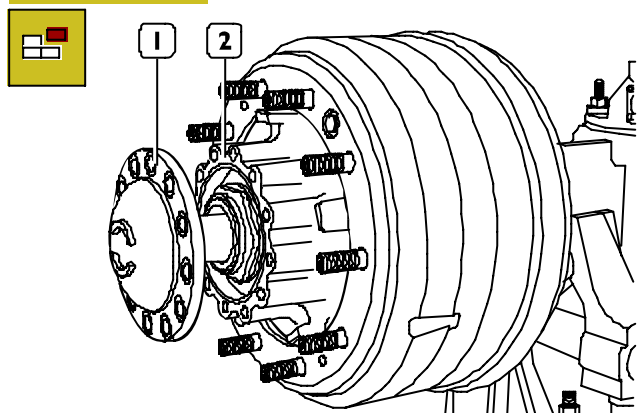

49206

Take the drive shaft (1) out of the wheel hub (2).

Figure 8

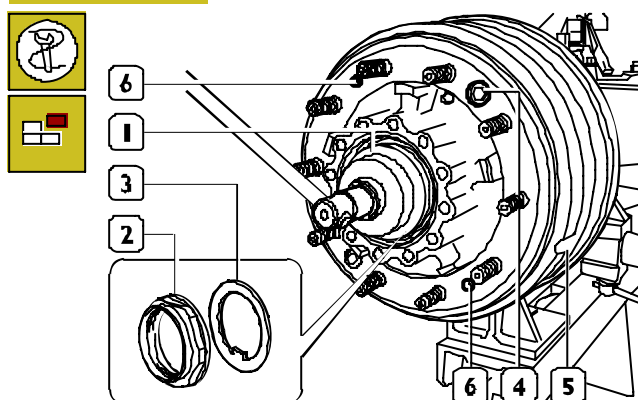


49207

Using an appropriate tool, straighten the bending on the ring nut (2) preventing it from unscrewing.

Using the wrench 99355180 (1), unscrew the ring nut (2) locking the wheel hub bearing. Take out the retaining ring (3). Undo the screws (4), screw reaction screws into the threaded holes (6) in order to extract the brake drum (5).

Aquila Trucks Centres


Figure 9

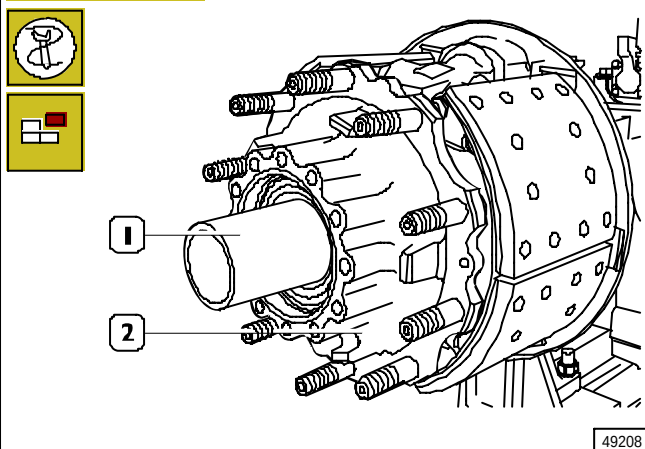

Screw tool 99370700 (1) onto the sleeve and extract the wheel hub (2). This operation is carried out by hand, since bearings float on the sleeve.


NOTE Tool 99370700 (1) is used to safeguard the sleeve thread.

Figure 10

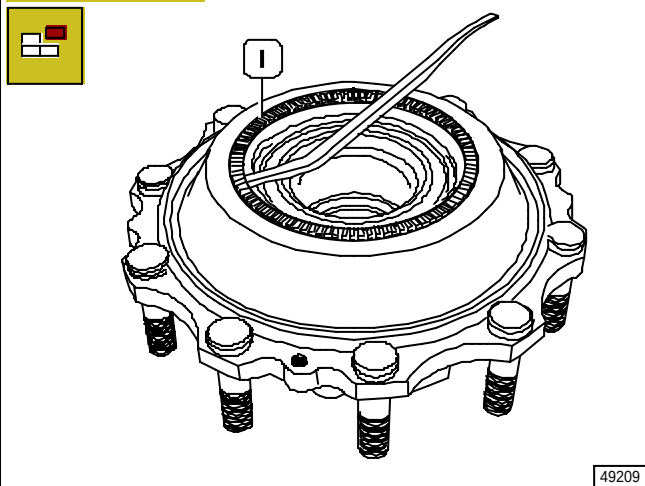

The phonic wheel (1) is only removed if it has to be replaced. To remove it, use a suitable lever.

Figure 11

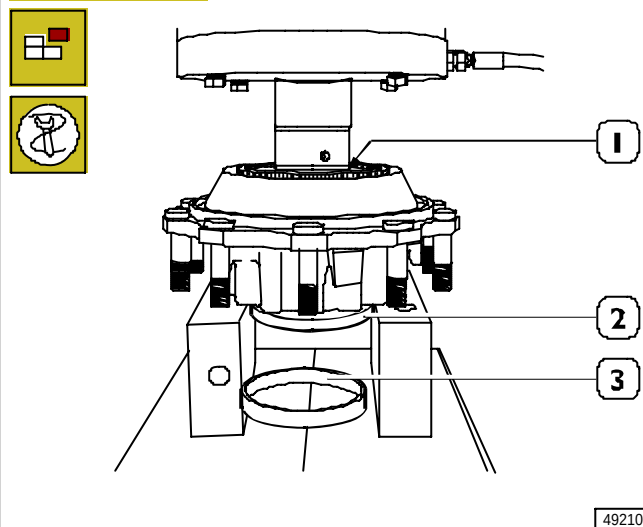

Using the suitable tool 99370708 (1) and a vice, extract the bearing (2), along with the related adjustment ring (3).

Wheel hub component check



Carefully clean all wheel hub components. Inspect half-shafts, making sure they are not warped. Inspect wheel clamping bolts: if the thread is damaged, replace them. To extract the bolts, use a vice.



The bearing rotation must be free and smooth.




Inspect the threads of wheel hub bearing adjustment nuts and axle casing ends; if needed, replace the nuts. Replace all sealing elements with new ones.

Aquila Trucks Centres

525035 REPLACING THE WHEEL HUB BOLTS

Figure 12

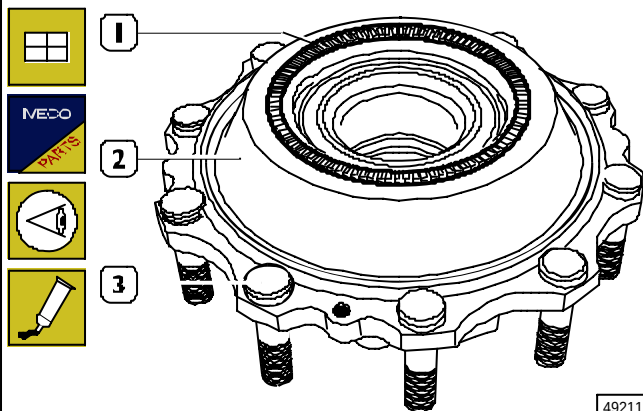

Before replacing wheel hub bolts (3) with new ones, make sure the bolt head supporting surface is free from slags, burrs or nicks.

Insert the new bolts by applying a load on their heads not exceeding 2.500 Kg.


After inserting the bolts, make sure they fit completely.

Wheel hub reassembly

Before replacing the wheel hub cap (2, Figure 12), apply a layer of putty having 40 to 240°C heat resistance to the cap contact surface and hub housing.

To reassemble the phonic wheel (1, Figure 12), pre-heat the wheel to 150°C; when the phonic wheel has been fitted, make sure it is perfectly rested on the hub housing.

Figure 13

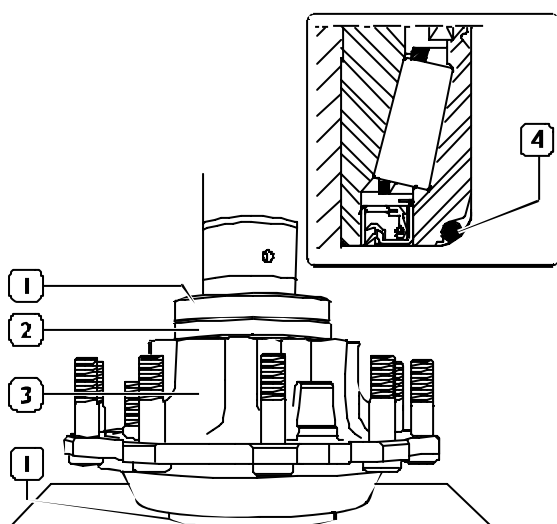


Put the bearing (2) on the wheel hub (3) with the seal (4) positioned as shown in the figure.

Fit the bearing (2) using a press and tool 99370706 (1).

NOTE The force for driving in the bearing with the press has to be 40,000 to 100,000 N.


Make sure the bearing is properly inserted with the wheel hub shoulder.

Figure 14

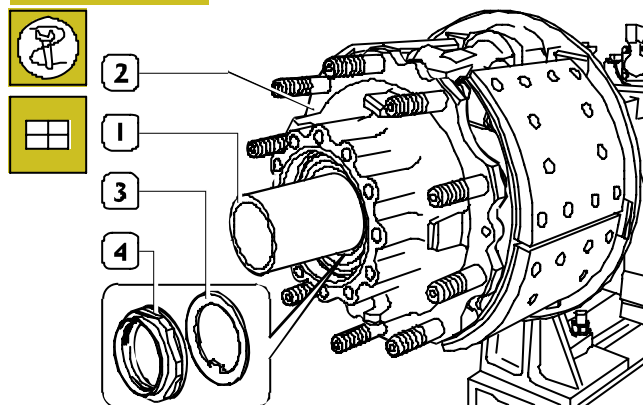

Screw tool 99370700 (1) on the sleeve and assemble the wheel hub (2), complete with bearing. Remove tool 99370700 (1) and place the seal ring (3), inserting the tab into the sleeve slot, then screw the ring nut (4).


Figure 15

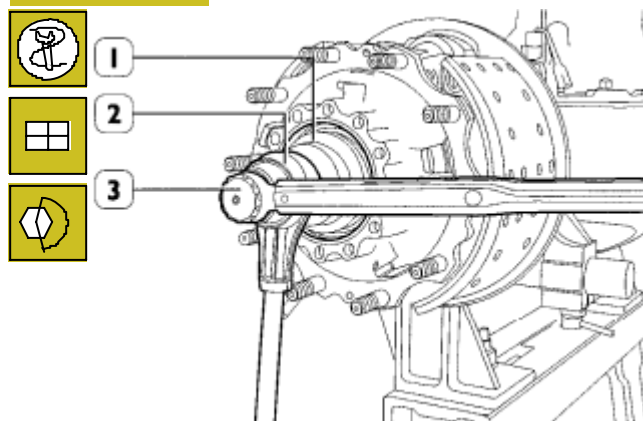

Using wrench 99355180 (1), multiplier (2) and torque wrench (3), tighten the ring nut (4, Figure 14) to the prescribed torque (834 to 1030 Nm).

Aquila Trucks Centres

Figure 16

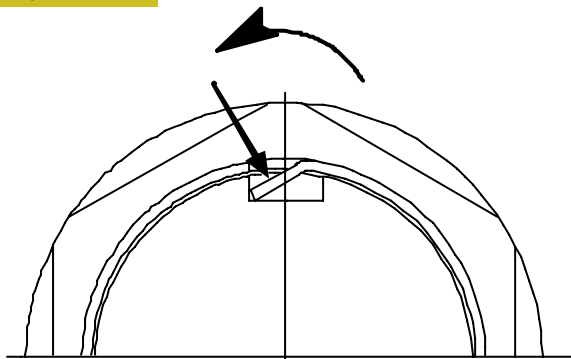


49213A

After tightening, using an appropriate tool, notch and bend the ring nut as shown so it cannot be unscrewed.

The arrow shows the direction of unscrewing the ring nut.

Using a fit tool key the spacer ring (5, Figure 18) and check that a play of $0 \div 0.145$ mm between wheel hub outer side and spacer side, making two measures at 180° .

Figure 17

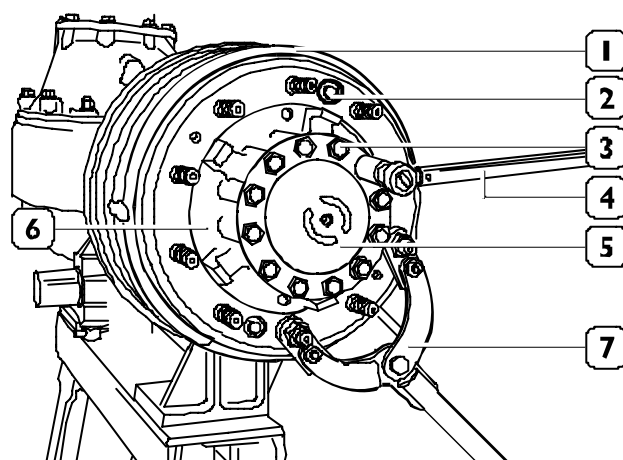

49216

Lock the wheel hub with tool 99370317 (7).


Fit the drum (1) to the wheel hub (6) and fasten it by tightening the screws (2) to the prescribed torque.

Apply sealant IVECO 1905685 (LOCTITE 14780) to both half-shaft flange and wheel hub contact surfaces.

Fit the screws (3) fastening the half-shaft (5) to the wheel hub (6) and tighten them with torque wrench (4) to the prescribed torque.

After these operations, replenish the axle housing with oil up to the right level.

Figure 18

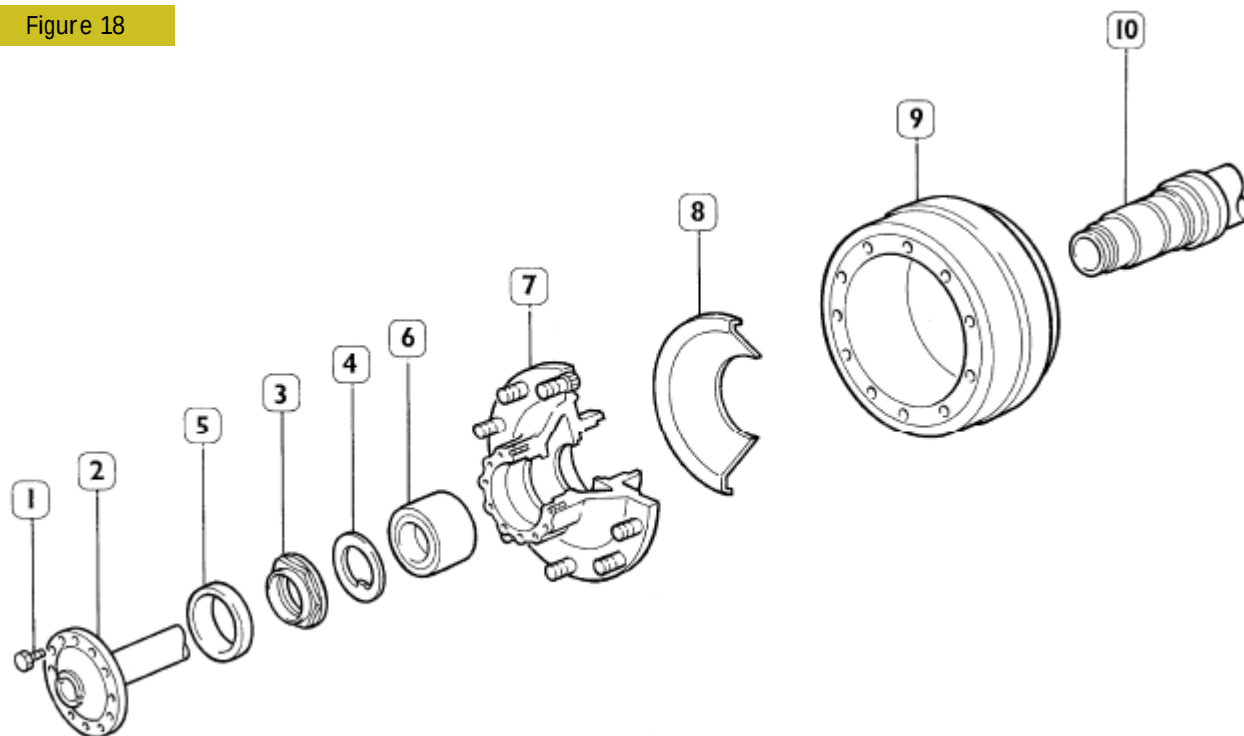

WHEEL HUB COMPONENTS


1. Screw - 2. Half-shaft - 3. Ring nut - 4. Safety ring - 5. Spacer ring - 6. Bearing - 7. Wheel hub -
8. Wheel hub cap - 9. Brake drum - 10. Axle sleeve

Aquila Trucks Centres

526210 DIFFERENTIAL CARRIER REMOVAL

Case removal

Figure 19

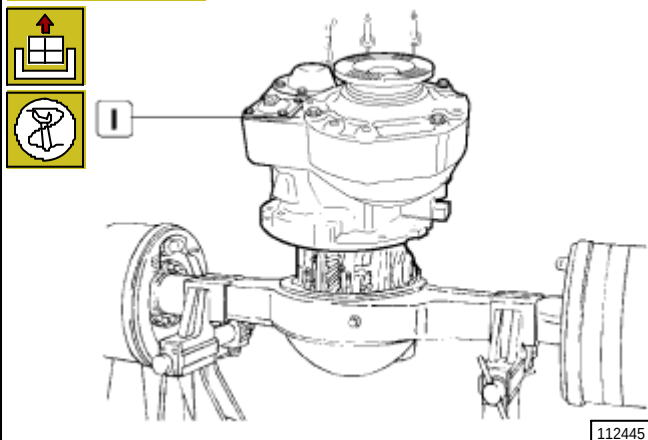


112445

Slacken the differential carrier (1) fastening screws; withdraw the casing from the rear axle using metal eyelets and cables.

NOTE To remove the differential carrier with the rear axle fitted on the vehicle, use support 99370616.


Figure 20

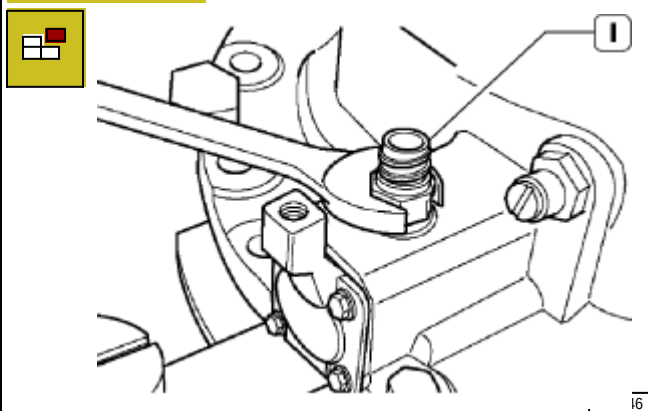

16

Remove the differential clamp warning switch (1) to fit the carrier on the stand.


Figure 21

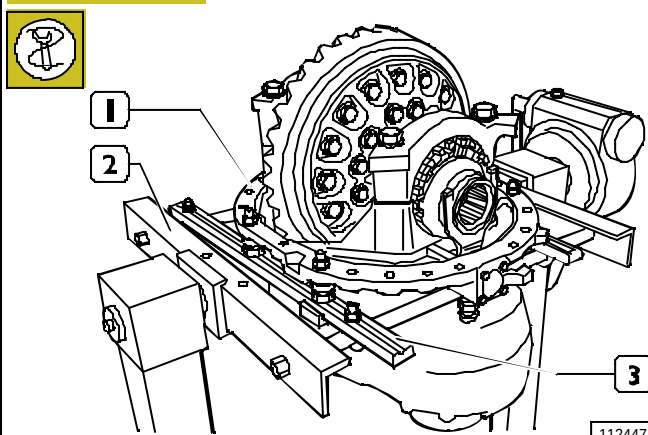

112447

Put the differential carrier (1) on the rotating stand 99322205 (2) together with the support 99322225 (3).


Figure 22

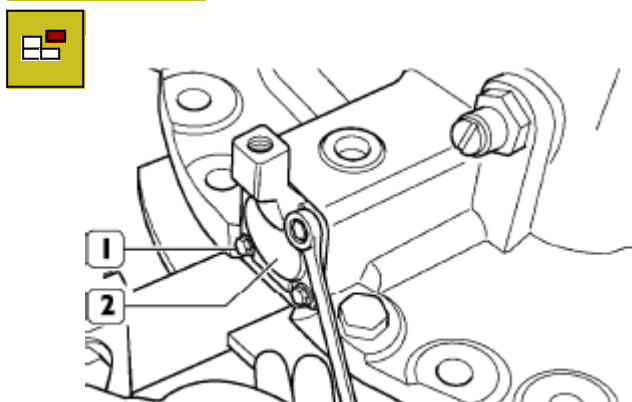

112448

Remove the differential clamp cover (2) fastening screws (1). Take off the cover and the gasket.


Figure 23

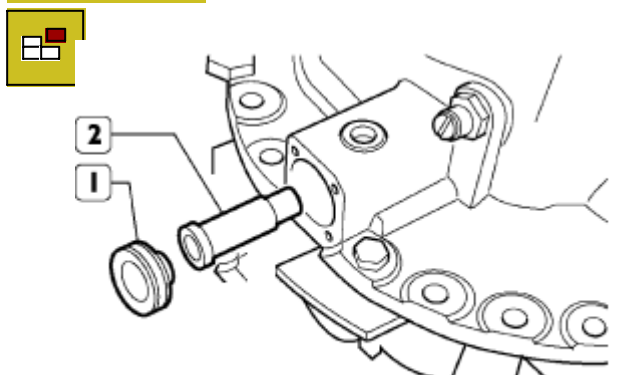

112449

Remove the piston (1) and the stem (2).

Figure 24

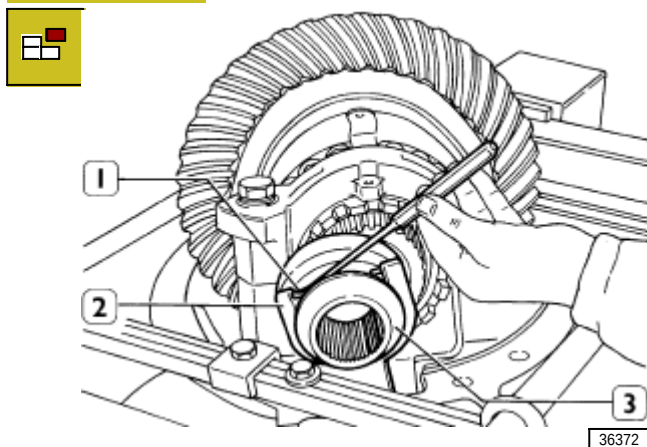


36372

Use a punch to take back the fork (2) elastic pins (1) so that the fork can be released from the sleeve (3). Remove the sleeve (3) from the carrier.

Aquila Trucks Centres


Figure 25

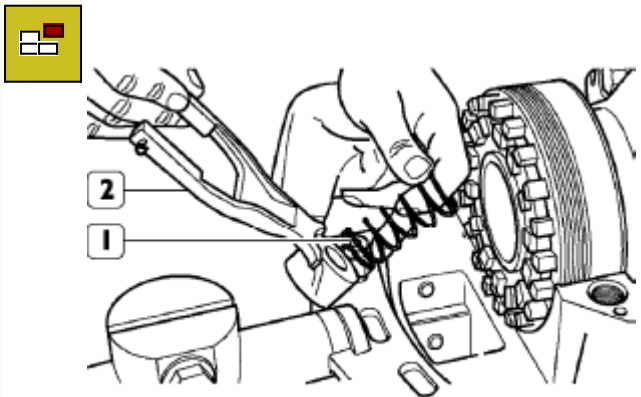

112451

Press and remove the spring (1), then take off the fork (2).


Figure 26

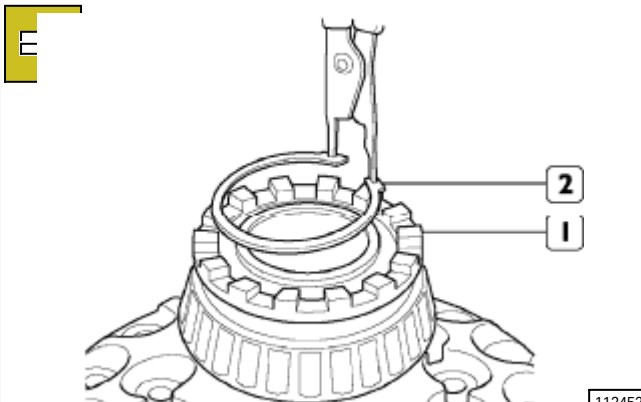

112452

Remove the seal ring (2), the spacer fitted below and the collar (1).

Figure 27

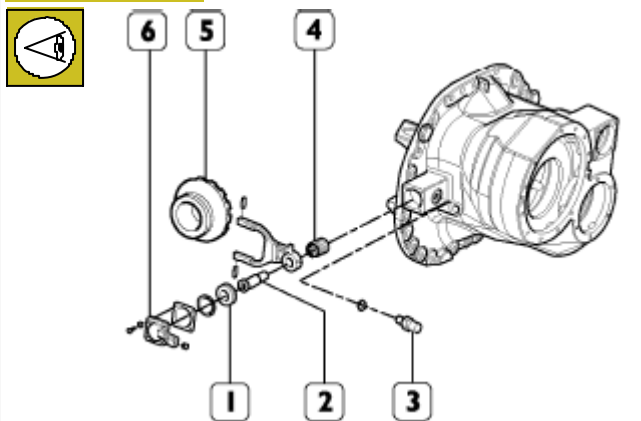


112453

1. Plunger - 2. Stem - 3. Differential locking switch -
4. Spring - 5. Sleeve - 6. Cover

Clean and check the status of all differential lock assembly parts.

Figure 28

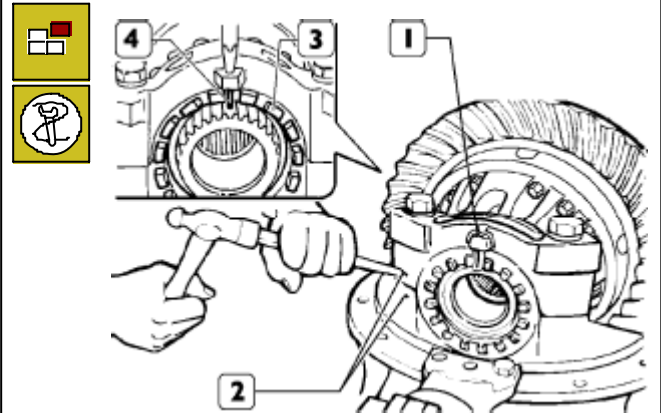

112454


Remove the split pin (1) and the elastic pin (4).

Mark with a punch the caps (2) and the case to facilitate the assembly.

Slacken the ring nuts (3) with tool 99355025.

Remove the caps (2) and the ring nuts (5).

Figure 29

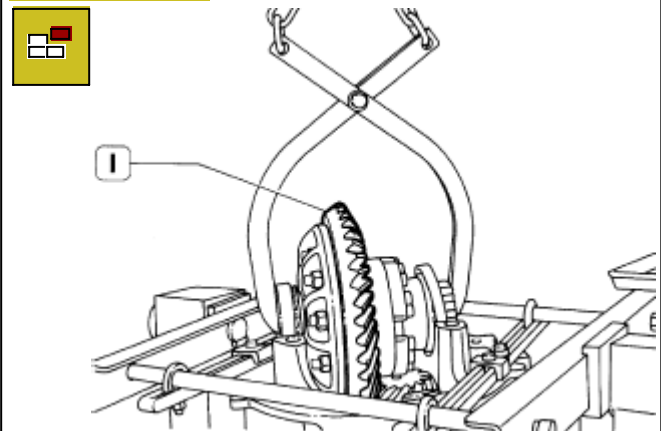


36374

Use the suitable hook to remove the differential housing (1) with the ring bevel gear and the support bearings.

Aquila Trucks Centres

Figure 30

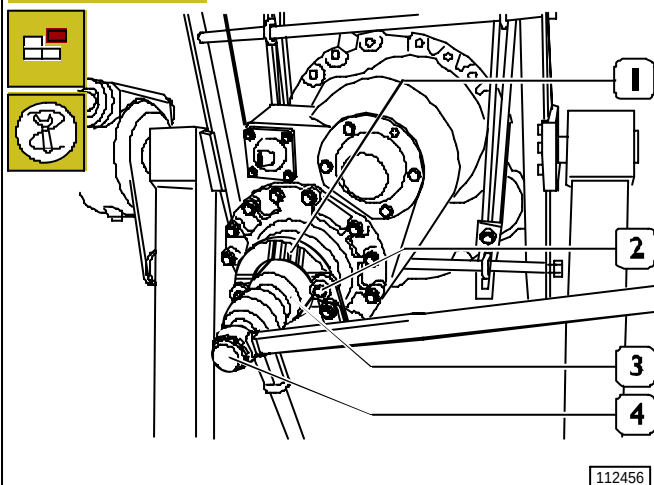


112456

Remove denting of nut checking flange (1).

Stop the flange rotation (1) through tool 99370317 (2); use wrench 99355069 (3) and the multiplier (4) to slacken the flange retaining nut (1).

Remove the motion input shaft flange (1).


Figure 31

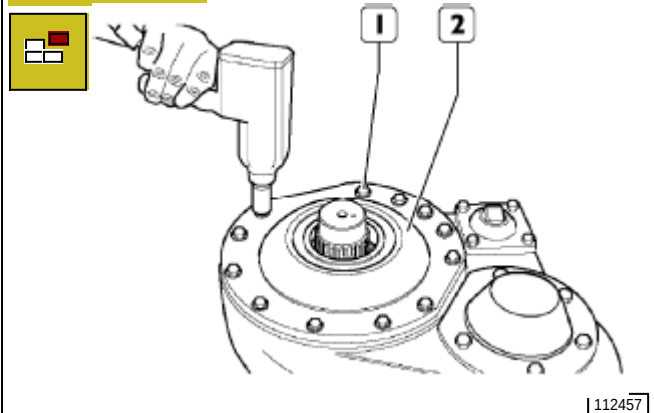

112457

Take off the screws (1) and remove the motion input shaft cover (2).


Figure 32

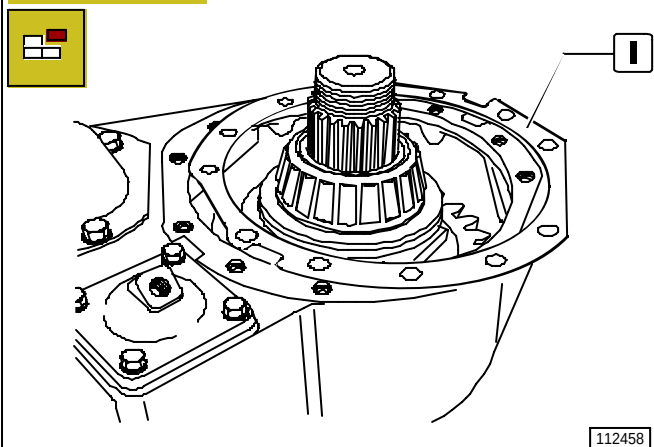

112458

Remove the shims (1).


Figure 33

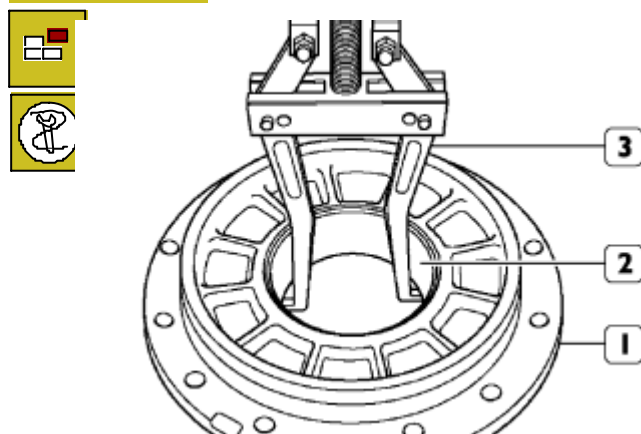

112459

Remove the bearing (2) outer ring from the cover (1) of the motion input shaft through the puller (3), if needed.


Figure 34

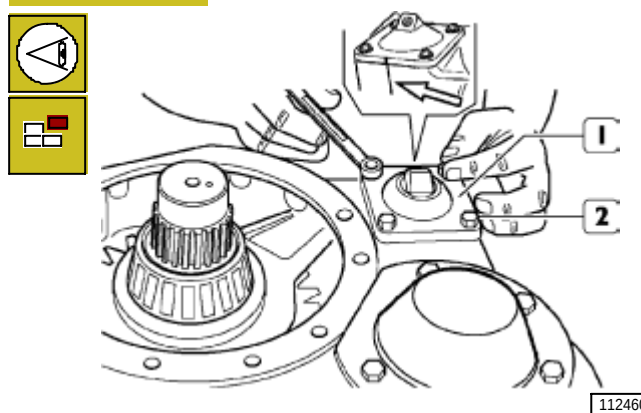

112460

Mark the longitudinal clamp cover (1) assembly position and take it off by slackening the fastening screws (2).

Figure 35

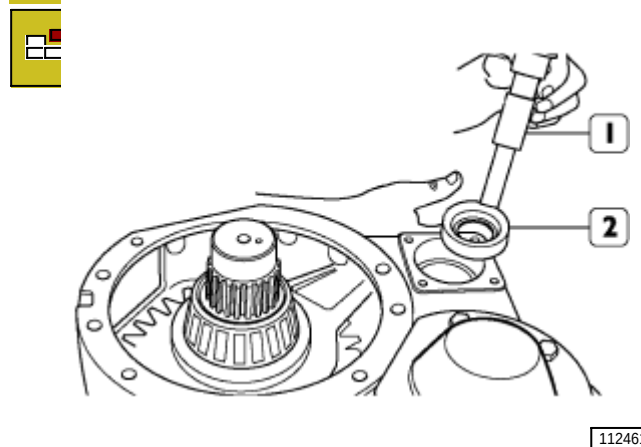


112461

Remove the control piston (1), the diaphragm seat (2) and the spring below it.

Aquila Trucks Centres


Figure 36

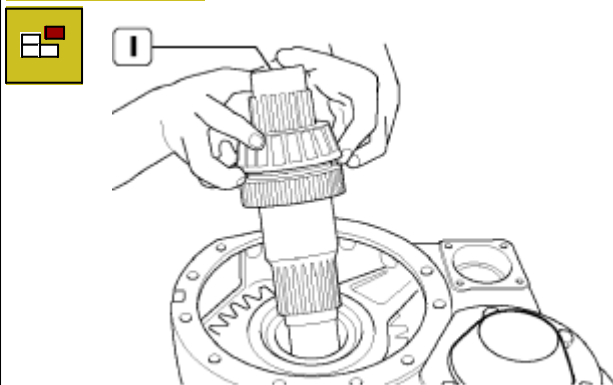

112462

Carefully remove the motion input shaft assembly (1).


Figure 37

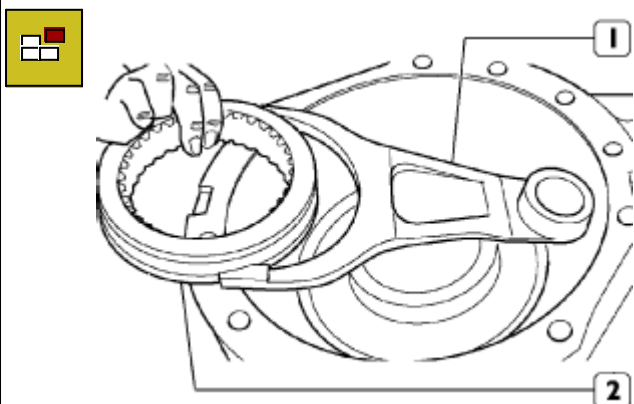

112463

Take off the fork (1) and the sleeve (2).

Figure 38

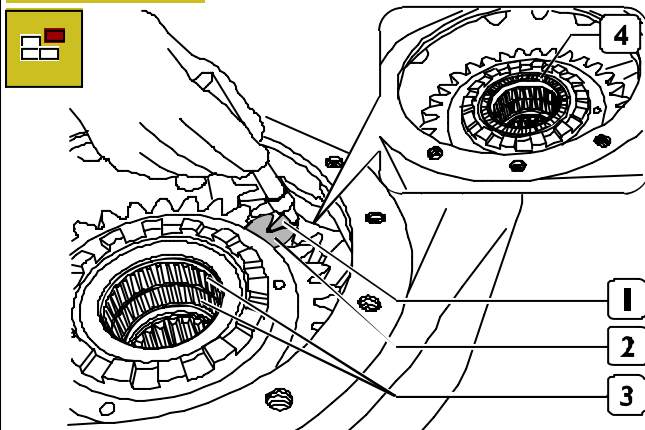

112464


Remove the bearing (3).

Mark the gear (1,2) assembly position.

Remove the two roller cages (3) and the spacer (4) from the gear (2).

Remove the helical-tooth gear (1).

Figure 39

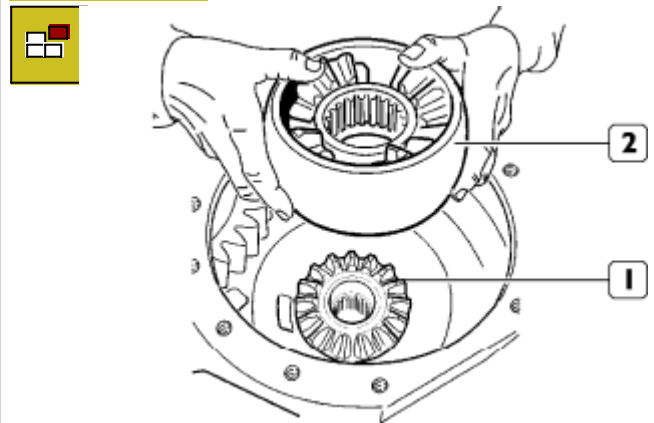


112466

Remove the crown wheel and planetary gear unit (2).

Remove the rear gear (1) with the bearing.

Figure 40

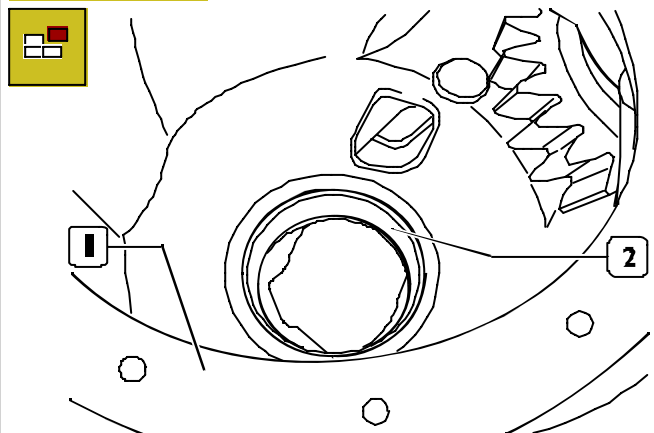


112467

Turn the differential case (1) and use a beater to remove the rear bearing outer ring (2), if needed.

Aquila Trucks Centres


Figure 41

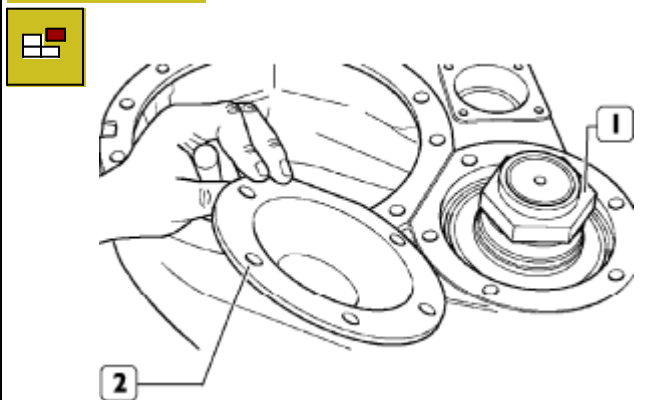

112468

Remove the cover (2) of the conic pinion.


Figure 42

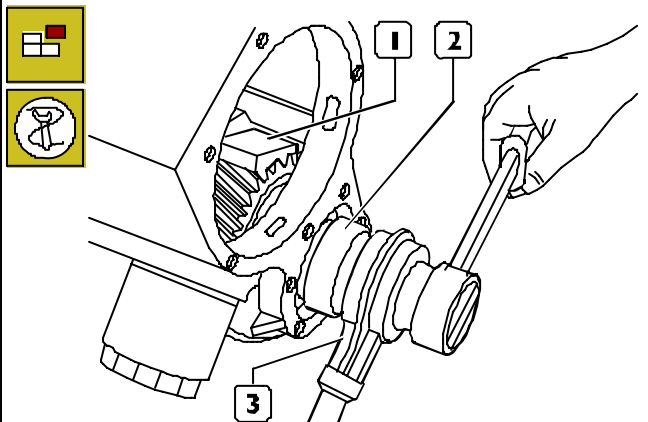

77237

Stop the conic pinion rotation with tool S.P.2373 (1); use wrench 99355069 (2) and the multiplier (3) to remove the bearing retaining nut (1, Figure 41) on the conic pinion and the washer below.


Figure 43

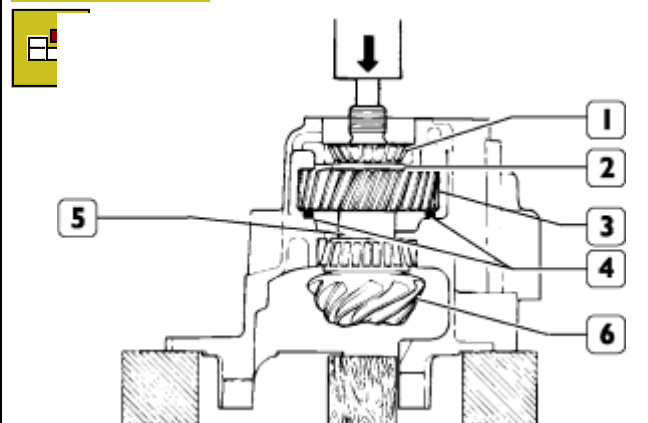

112470

Fit the two spacers (4) below the gear (3). Under the press, pull out the conic pinion (6) and take off the bearing (1), the adjusting ring (2), the gear (3) and the spacer (5) from the conic pinion.


Figure 44

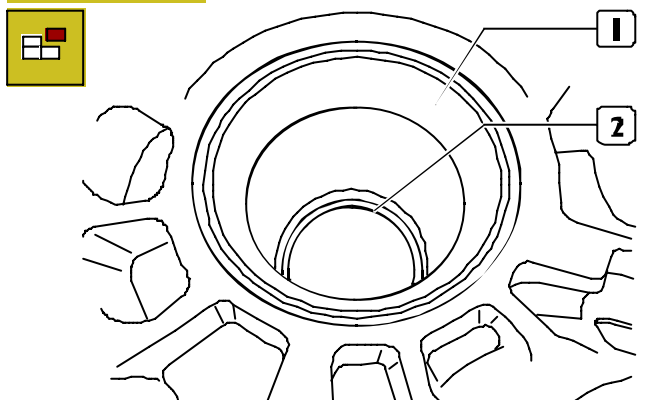

112471

Use a drift to remove outer races (1) and (2) with their shims.

Figure 45

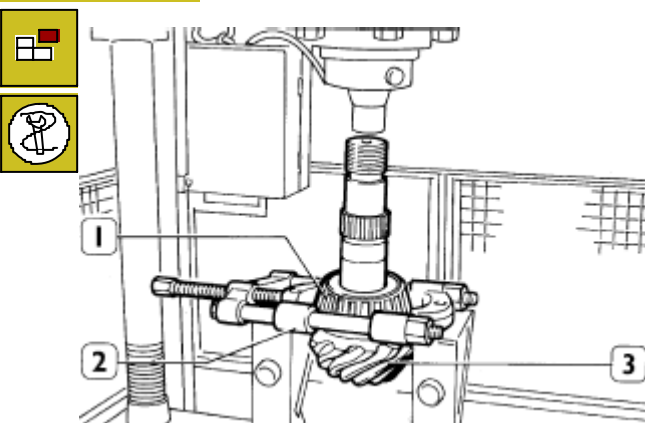


36381

Place tool 99348001 (2) under the taper roller bearing (1) and pull it off the bevel pinion (3) using a press.

Aquila Trucks Centres

Figure 46

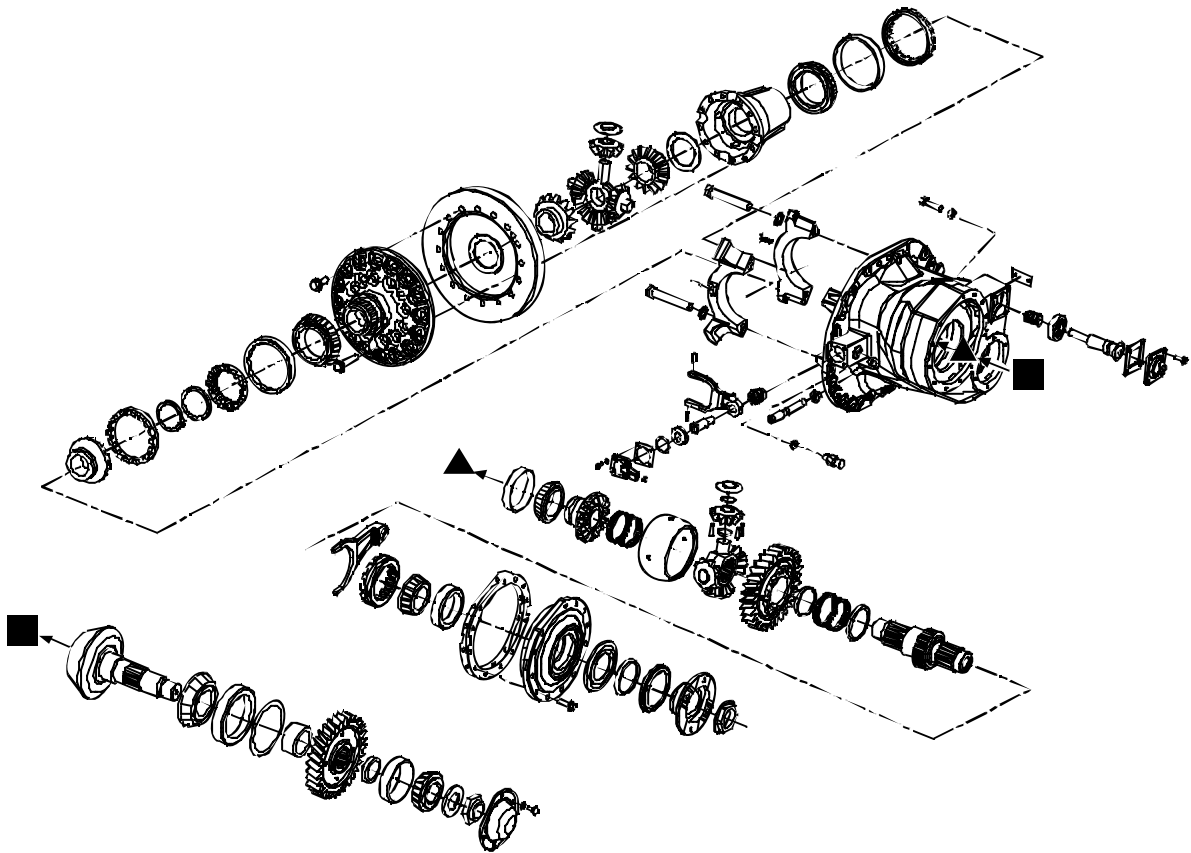


INTER-AXLE DIFFERENTIAL COMPONENTS - EXPLODED VIEW

112472

Aquila Trucks Centres

Differential housing removal


Figure 47

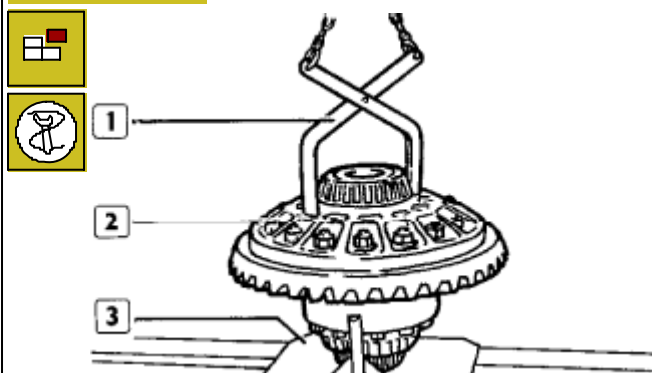

19379

Use the suitable hook (1) to lift the whole differential housing (2) and put it on the supporting base 99371047 (3).


Figure 48

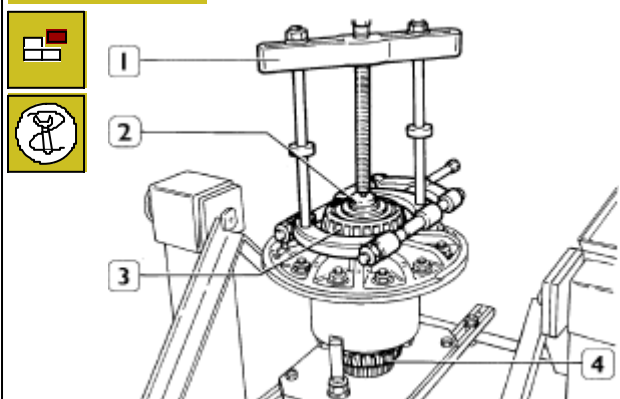

36317

Use tool 99348001 (1) and the reaction block 99345055 (2) to pull out bearing (3) and bearing (4).

Figure 49

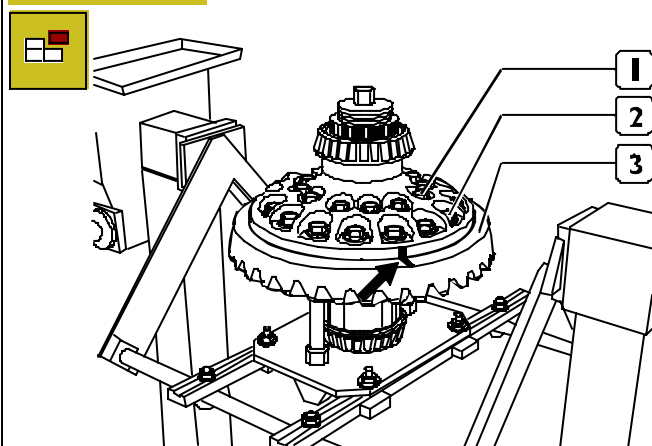


112475

Mark the ring gear and the differential housing position as shown in the figure.

Remove the ring gear (3) fastening screws (1, 2).

Turn the case and remove the ring gear (3).
Remove the half-case fastening screws (1).
Turn the case.

Figure 50

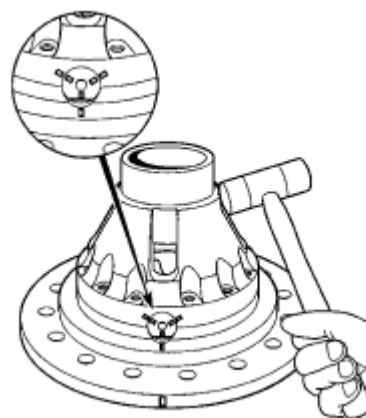


476

Mark the two half-cases (2 and 3) and the cross as shown in the figure.

Split the half-cases.

Figure 51

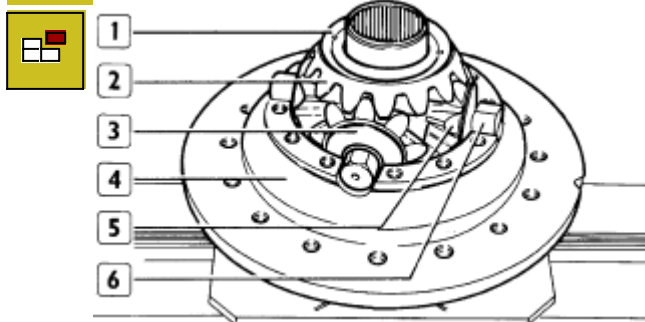

19383

Remove the crown wheel (2) and the offsetting washer (1).
Remove the cross (6) with the four planetary gears (5) and the shoulder washer (3); strip the cross-planetary gear unit.
Remove the other planetary gear and the shoulder washer from the half-case (4).

Aquila Trucks Centres

Checking the differential components

Carefully clean the differential components.

Lubricate the bearings and rotate the roller cage freely: the rotation must be regular with no stiffness.

Check the contact surfaces of the bevel gear and the stop plate of the half-box to ensure that the crown wheel adheres properly. Any deformation of these surfaces will cause the vibration of the fastening screws jeopardising the unit functioning.

NOTE Carefully clean screw, stud and ring nut threads to ensure proper adjustments and exact tightening torque.

Check that the splined section for the flange connection onto the pinion is not worn. If it is replace the pinion.

Check the planetary gears and their shoulder washers, the spider and the crown wheels with their shoulder washers.


All sealing elements, the adjustment ring nut clip and safety washers must be replaced with new ones.

NOTE If it is necessary to replace the crown or the pinion, both elements must be changed as they are supplied in pairs.



Refitting the differential housing


Figure 52

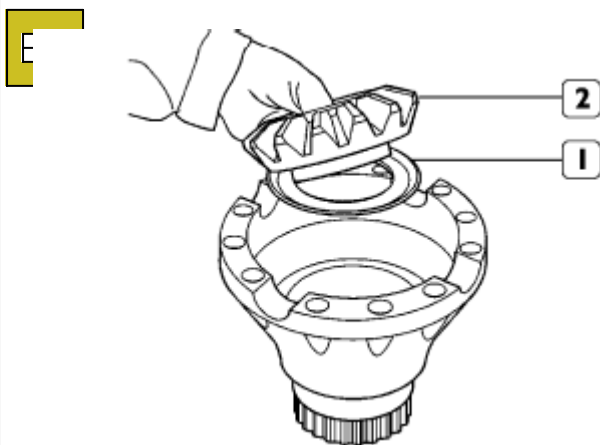

112478

Fit the shoulder washer (1) and the planetary gear (2) in the half-case.

Figure 53

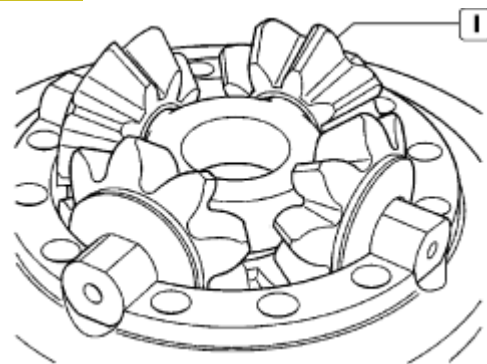


112479

Assemble the pinions (1) and the fit the assembly in the half-case.

NOTE If the assembly has not been previously mounted, make sure that the pinions are installed correctly.

Figure 54

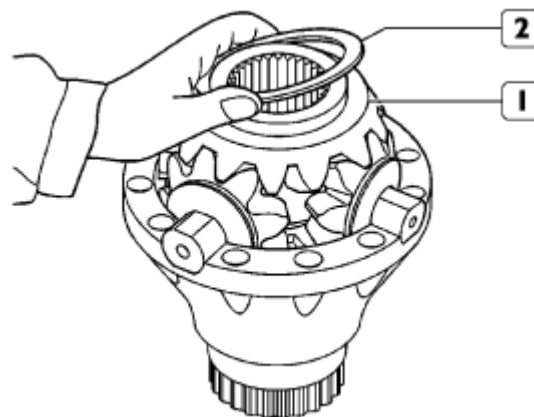


112480

Fit the shoulder washer (2) and the planetary gear (1) on the differential housing.

Aquila Trucks Centres

Figure 55

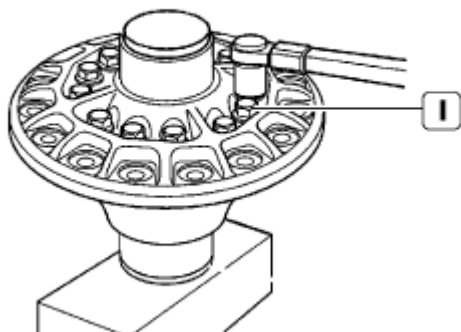


112481

Lock the differential with the suitable tool; then fit it in the half-case. Make sure that the marks made at removal match. Apply some drops of "LOCTITE 270" on the screw threading (1). Tighten the screws (1) to the prescribed torque.

NOTE It is advisable to replace the screws (1) with new ones.

Heat the ring gear inside an air-circulation oven at 100°C for 15' and fit it in the seat on the differential housing, making sure that the holes for the fastening screws of the ring gear-differential housing coincide.

Figure 56

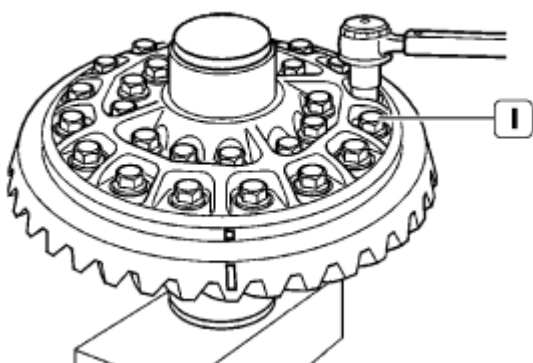


112482

After the ring gear has cooled down, fit the screws and tighten the self-locking nuts (1) with the torque wrench to the prescribed torque.

NOTE It is advisable to replace the screws (1) with new ones.

Figure 57

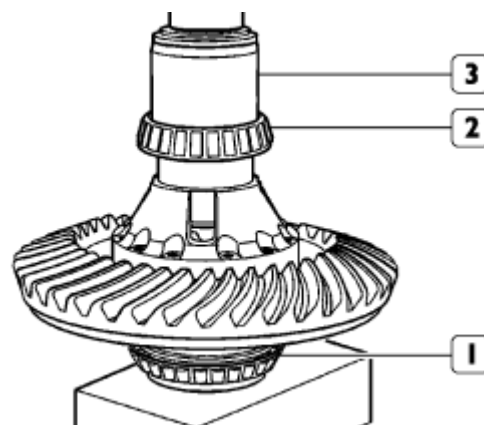


112483

Heat the bearings (1,3) inside an air-circulation oven at 100°C for 15' and fit them in the differential housing by means of the suitable beater (3).

Aquila Trucks Centres

ASSEMBLING DIFFERENTIAL CARRIER**Calculating bevel pinion position in differential carrier**

Figure 58

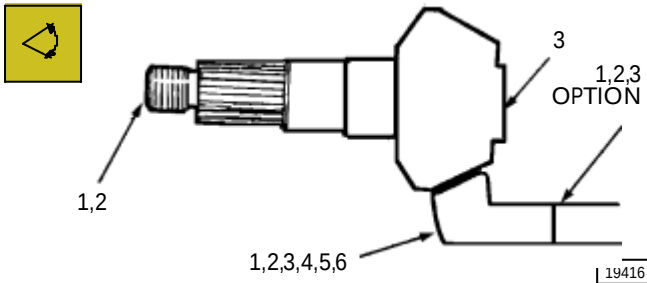

If a new final drive set is installed, it will be necessary to know the meaning of the markings on pinion and crown wheel in order to position the pinion correctly.

1. Part number
2. Tooth combination number.
This number (example: 12/41) indicates that the pinion has 12 teeth and the crown wheel 41.
3. Pinion/crown wheel pair set number.
All final drive sets are available as pairs: therefore pinion and crown wheel bear the same number which is stamped on head end for pinions and the outer face for crown wheels.



Never use a pinion and crown wheel set unless both components have the same number.

4. Variation number needed to determine the thickness of the shim pack interposed between pinion bearing cage and differential carrier (in the example below, this number is identified as CP).

Every crown wheel is marked with a variation number which indicates the nominal assembly distance. Use this number to calculate the thickness of the shim pack that is interposed between pinion bearing cage and differential carrier. This number, expressed in mm, (e.g. P.C. + 0.1 or P.C. - 0.1) is marked on the external part of the ring gear.

5. Pinion/crown wheel set manufacturing and inspection month and year.
6. Specified pinion/crown wheel set clearance.
Part number and tooth combination number are stamped on threaded end of all pinions. Number may alternatively be located on outer diameter of crown wheel. On any pinion/crown wheel set, crown wheel will always bear an even stamped category number (e.g. 36786), whereas corresponding pinion will bear an odd number (e.g. 36787).

To determine the thickness of the shim pack to be interposed between bearing cage and differential carrier proceed as follows

1. Measure the thickness of the shim pack removed with the old final drive gear set. Use a micrometer or other suitable gauge and record the value found.

2. Read the CP marked on pinion to be replaced: if it is a plus (+) number or a minus (-) number respectively subtract or add it from the value obtained under 1. above.

Take note of the result

NOTE The value obtained in 2. will be used to calculate the thickness of the shim to be interposed between pinion bearing cage and differential carrier for correct new final drive assembly.

3. Read the CP marked on the new pinion.
Either add or subtract this value - depending on whether the sign is a plus or a minus - to or from the value noted under 2. above.
The result indicates the thickness which the new shim pack should have.

Refer to the following examples which cover all the possible calculation cases


EXAMPLES

Case 1:	mm
Original shim pack thickness	0.76
CP marked on pinion + 0.05	+ 0.05
Resulting value	0.81
CP marked on new pinion +0.12	- 0.12
Thickness for new shim pack	0.69
Case 2:	
Original shim pack thickness	0.76
CP marked on pinion - 0.05	- 0.05
Resulting value	0.71
CP marked on new pinion + 0.12	- 0.12
Thickness for new shim pack	0.59
Case 3:	
Original shim pack thickness	0.76
CP marked on pinion + 0.05	+ 0.05
Resulting value	0.81
CP marked on new pinion - 0.12	+ 0.12
Thickness for new shim pack	0.93
Case 4:	
Original shim pack thickness	0.76
CP marked on pinion - 0.05	- 0.05
Resulting value	0.71
CP marked on new pinion - 0.12	+ 0.12
Thickness for new shim pack	0.83

NOTE The difference between old pack and new pack thickness values must be added or subtracted - depending on cases - to or from the adjusting ring thickness (4, Figure 59).


Aquila Trucks Centres

Figure 59

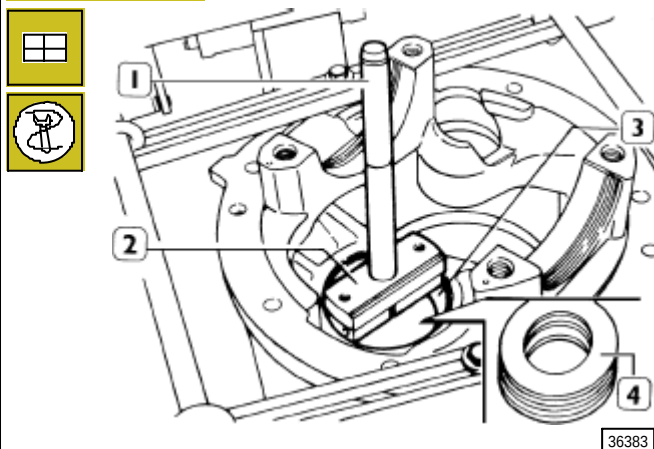


Arrange shim pack (4) for adjusting bevel pinion position in carrier; then fit bevel pinion bearing cup (3) using handle 99370007 (1) and drift 99374093 (2).
Fit the remaining outer rings using beaters 99374093/94.

Figure 60

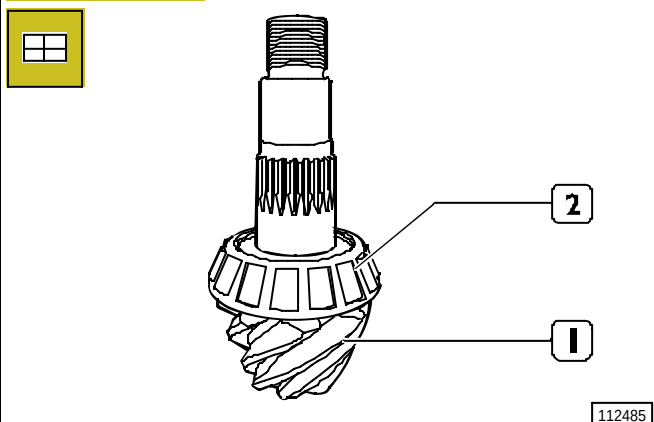

Heat the bearing (2) to 100°C for 15 minutes and install it on bevel pinion (1) using a drift.


Figure 61

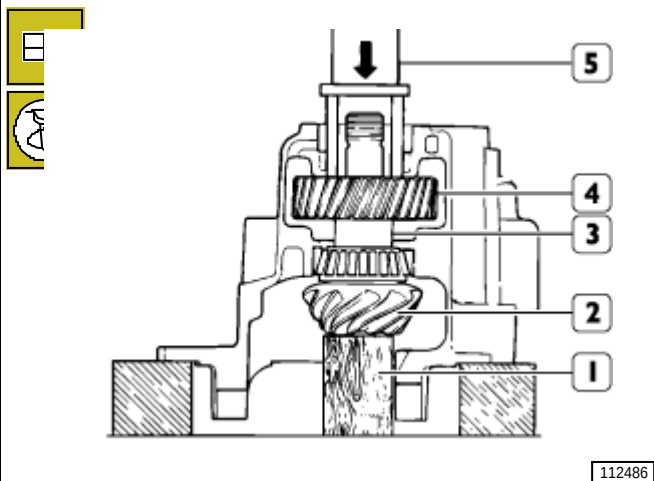

Insert bevel pinion (2) in carrier and spline spacer (3) and gear (4) on it at the same time.
Mount reaction block (1) under pinion.

Drive gear (4) under press (5)

Figure 62

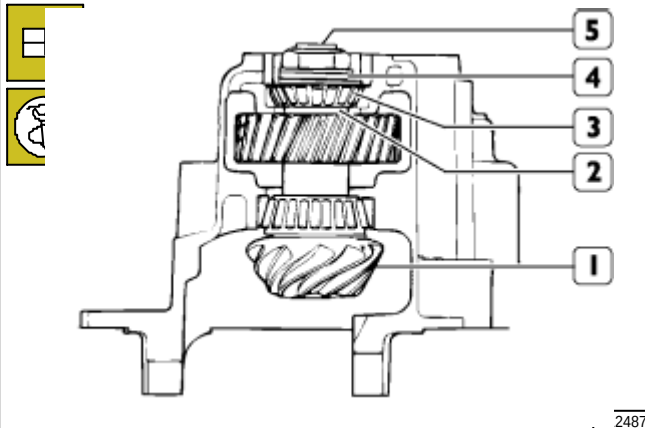


Block the rear axle position with tools 99341004 and 99341008.

Fit the adjusting ring (2).

Heat the bearing (3) at 100°C for 15' and fit it on the pinion.

Insert the washer (4) and the retaining nut (5).

Figure 63

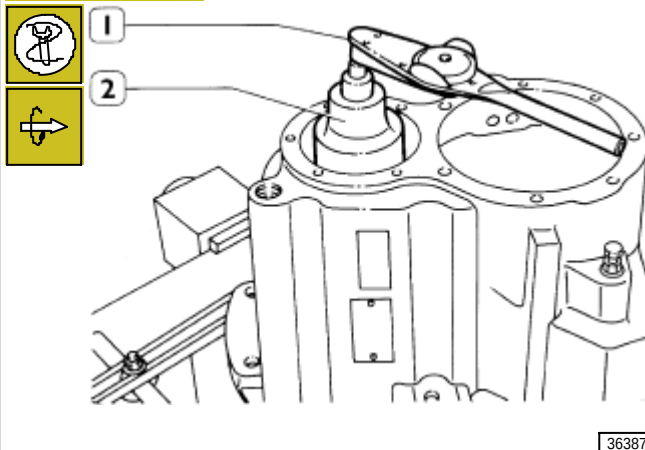

Tighten retaining nut bevel pinion using wrench 99355069 (2).

Remove tools 99341004 and 99341008.

Apply torque wrench (1) to bevel pinion retaining nut and check that rolling torque is:

- 2.30 ÷ 7.40 Nm with new bearings,
- 3.00 ÷ 5.30 Nm with used bearing.


In case of a different reading, replace adjusting ring (2, Figure 62) with a thinner one if reading is higher than the specified figure and with a thicker one if the reading is lower than the specified figure.

Aquila Trucks Centres



Apply a layer of sealer on the pinion cover and the screws. Fasten the cover by tightening the screws to the prescribed torque.


Figure 64

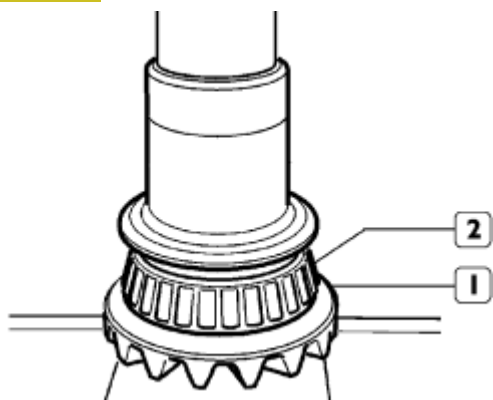

112489

If previously removed, heat the bearing (2) at 100°C for 15' and fit it with the suitable beater on the rear gear (1).


Figure 65

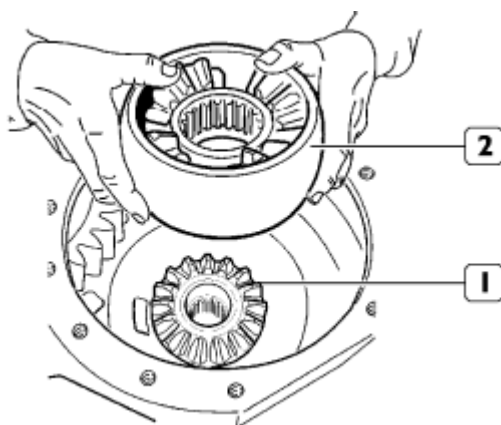

112466

Fit the rear gear (1) and the crown wheel and planetary gear unit (2) in the case.


Figure 66

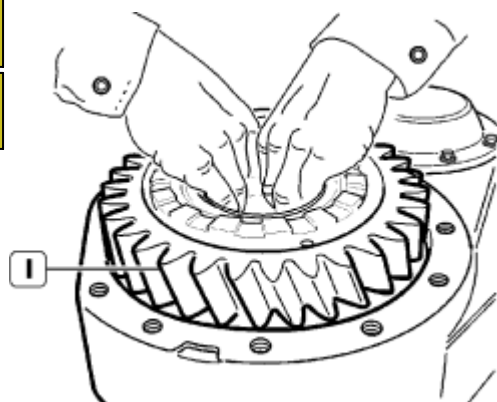

112493

Fit the gear (1) making sure that it matches with the marks made at removal.


Figure 67

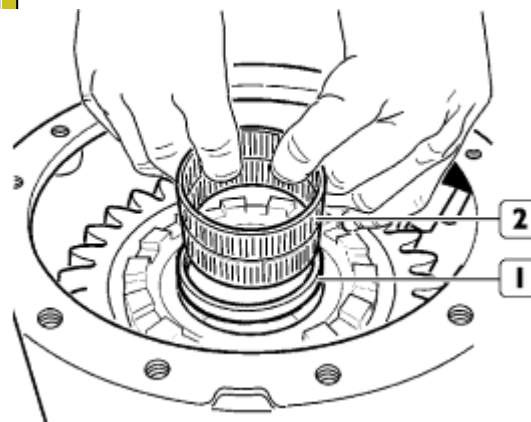

112494

Fit the spacer (1) and the roller cages (2).

Figure 68

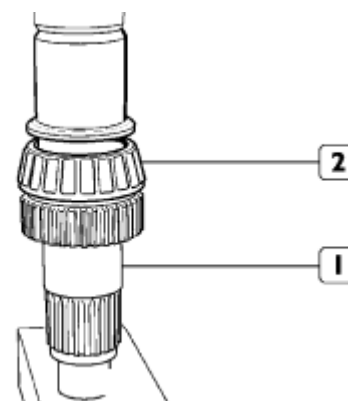


112495

Heat the bearing (2) at 100°C for 15' and fit it with the suitable beater on the motion input shaft (1).

Aquila Trucks Centres


Figure 69

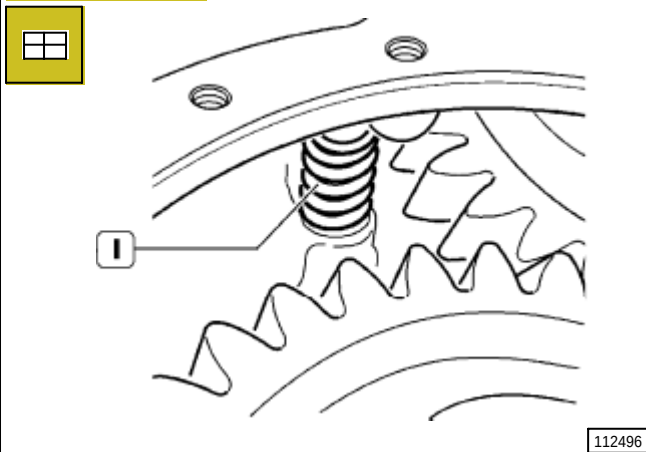

112496

Fit the compression spring (1).


Figure 70

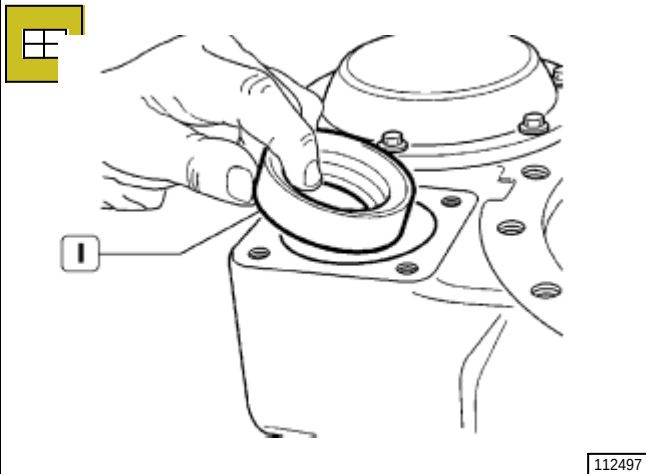

112497

Fit the membrane seat (1).


Figure 71

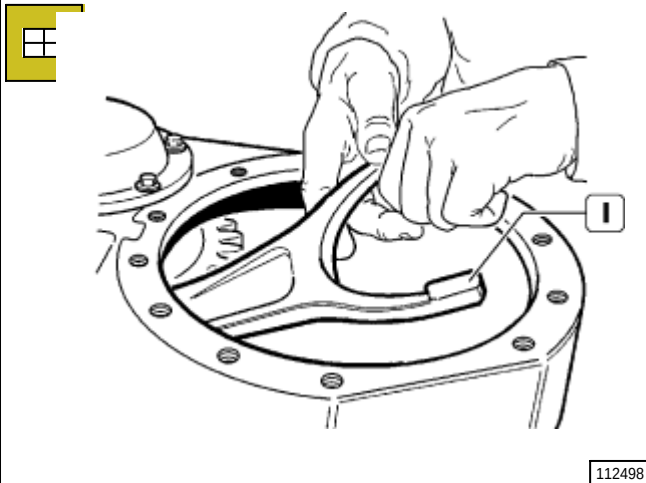

112498


Fit the fork (1).

Figure 72

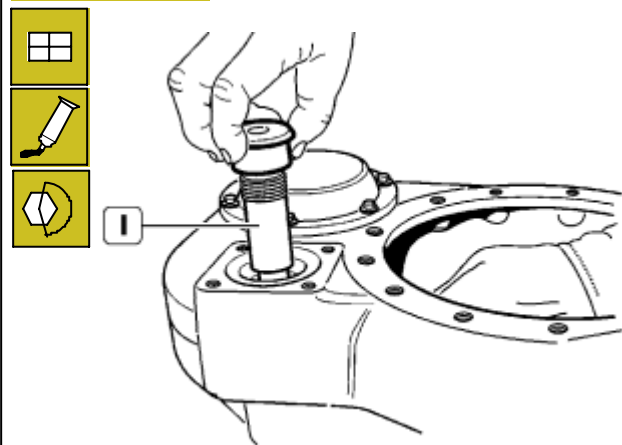

Apply some sealer on the piston threading (1). Insert the piston through the fork and the compression spring. Tighten to the prescribed torque.

Figure 73

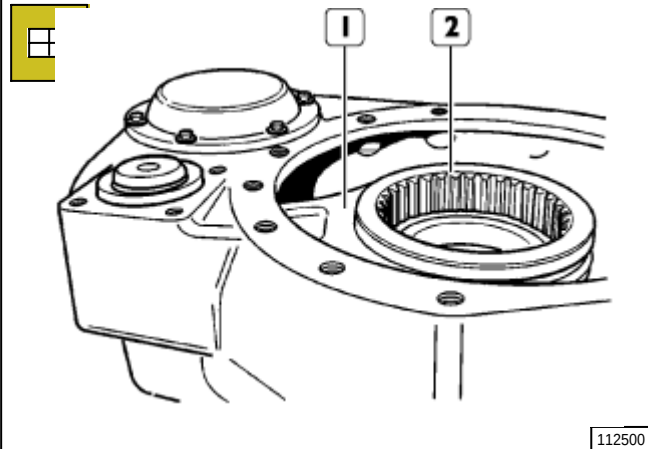


112500

Insert the sleeve (2) in the fork (1).

Aquila Trucks Centres


Figure 75

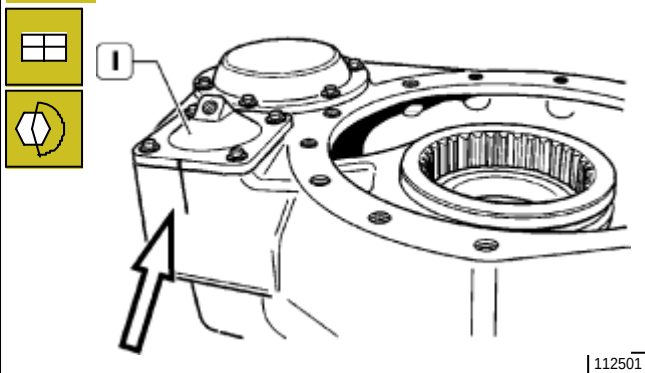

Fit the cover (1) and the membrane located below. Tighten to the prescribed torque.


NOTE Fit the cover making sure that it matches with the marks made at removal.

Figure 76

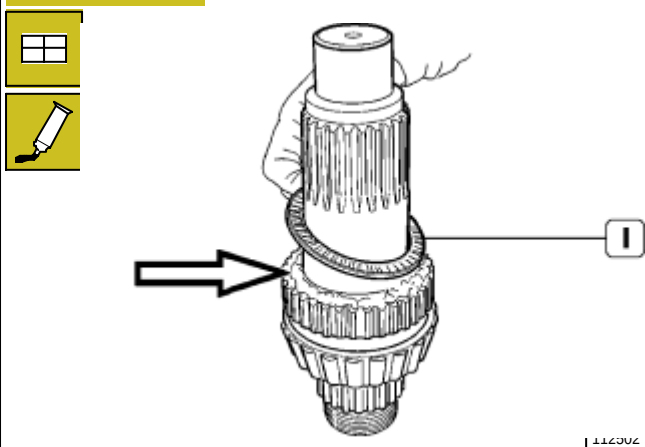

Spread some vaseline as shown in the figure. Fit the roller bearing (1).


Figure 77

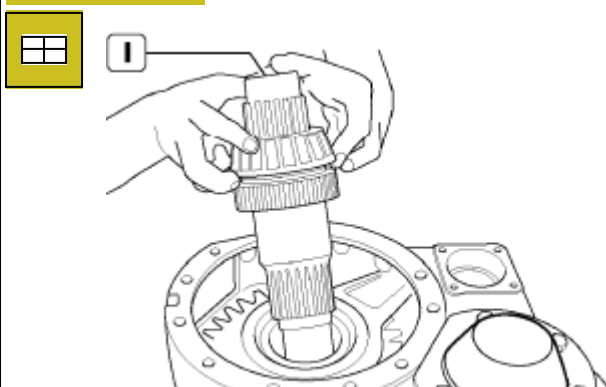

Fit the motion input shaft assembly (1) in the case.

Adjust the limit switch of the differential interaxle lock control pin


Figure 78

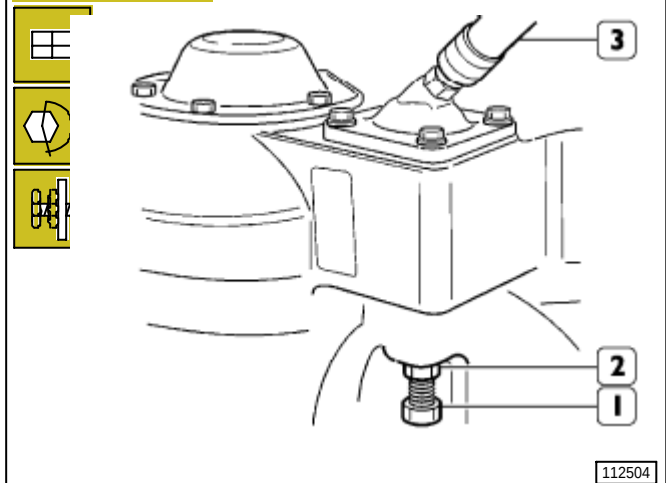

Adjust the limit switch of the control pin as follows:

- fill the cylinder (3) with 8-bar compressed air;
- tighten the screw (1) until it comes into contact with the control pin;
- further tighten the screw (1) by $1/4 \div 1/2$ turn and lock the stop nut (2) to the prescribed torque.

Figure 79

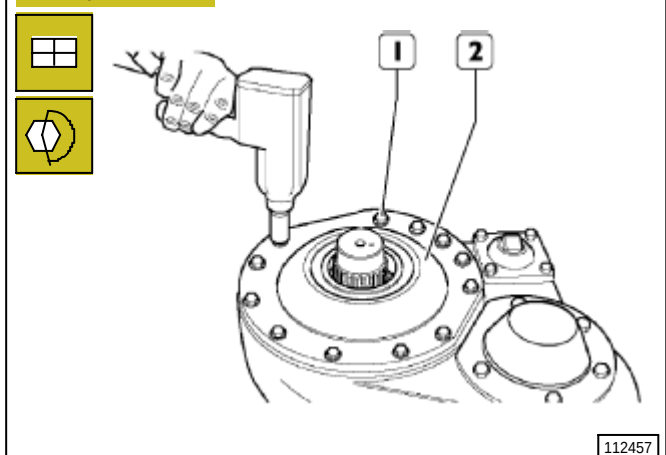


Fit the spacers (1, Figure 32) taken off at removal.

Fit the cover (2) tightening only 4 screws (1) to the prescribed torque.

Aquila Trucks Centres

Figure 79

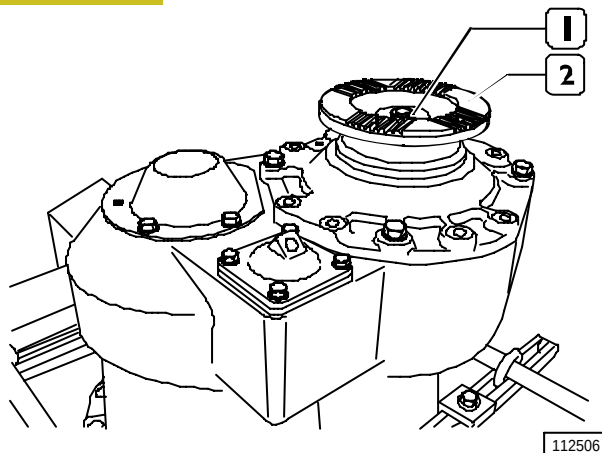


112506

Fit the flange (2).

Tighten the retaining nut (1) to the prescribed torque.

Adjusting drive input shaft bearing end float

Figure 80

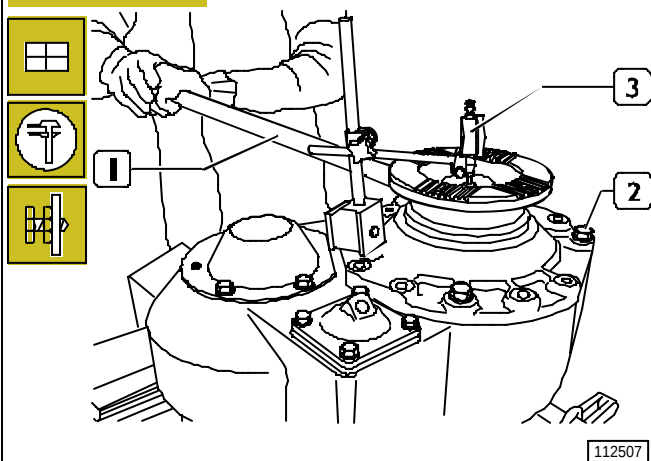


112507

Proceed as follows to adjust shaft bearing end play;

- turn the motion input shaft in the two directions to adjust the bearing;
- fit a dial gauge (3) and set to zero on the motion input shaft end;
- use a bar (1) and a support, if needed, to lever and check that the end play of the input shaft is between $0.01 \div 0.09$ mm. If the end play is not included in this range, add or remove the shims (1 Figure 32) from the package previously inserted to obtain the required play;
- Tighten all the cover screws (2) to the prescribed torque.


Figure 81

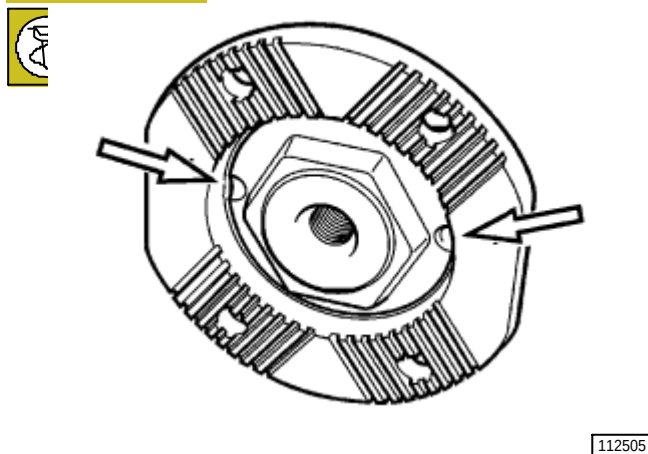

112505

Bruise the retaining nut (1) as shown in the figure.

Figure 82

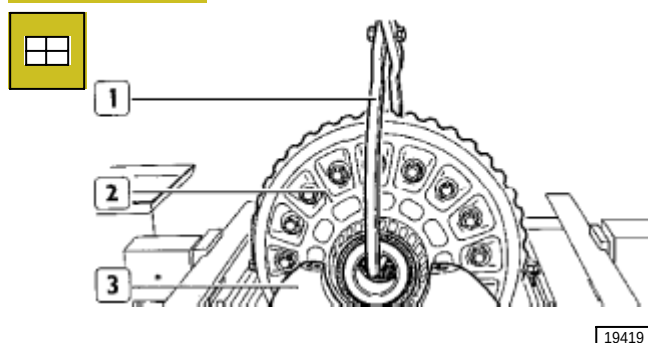


19419

Using the proper hook (1) lift the previously assembled gear housing (2) and set it on the differential carrier (3).


Aquila Trucks Centres

Figure 83

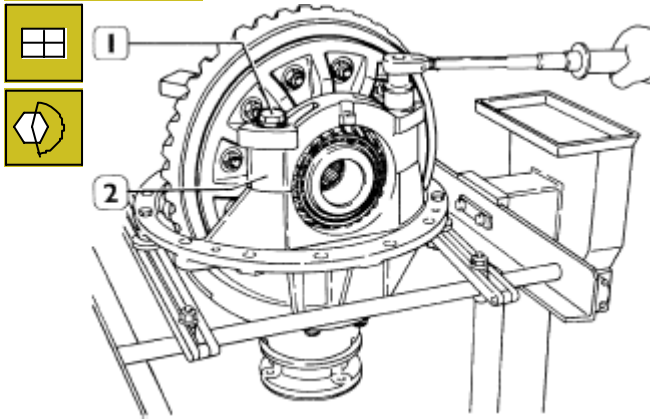

Fit the caps (2), tighten the screws (1) and the washers to the prescribed torque.

Figure 84

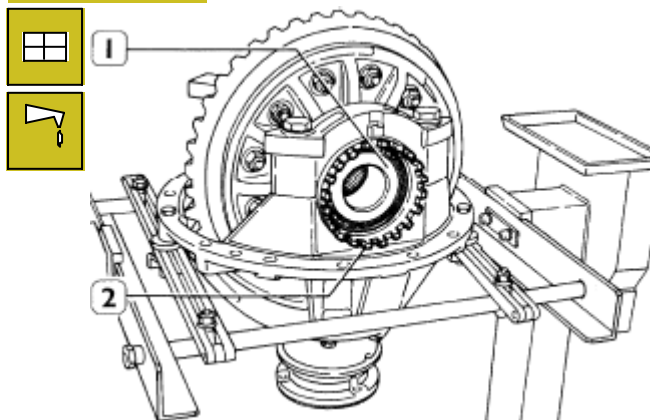

Grease the taper roller bearings (1) and set the outer rings on them.
Screw the adjustment ring nuts (2).

ADJUSTING THE CAP SPREAD

Cap spread adjustment and check can be performed with two methods:


1st METHOD

1. Tighten bearing adjusting ring nuts (4) by wrench 99355025 (3, Figure 86) until removing the gap between pinion-crown and axle, ensure also that the crown is not forcing on pinion;
2. use a proper micrometer, set diagonally and centred on points (X-Y-arrows, Figure 85), to measure and mark cap distance;

2nd METHOD


- A. Set diagonally and centred on the external machined seats of both caps (2, Figure 86), two magnetic base gauges (1) as shown in Figure 86.

Figure 85

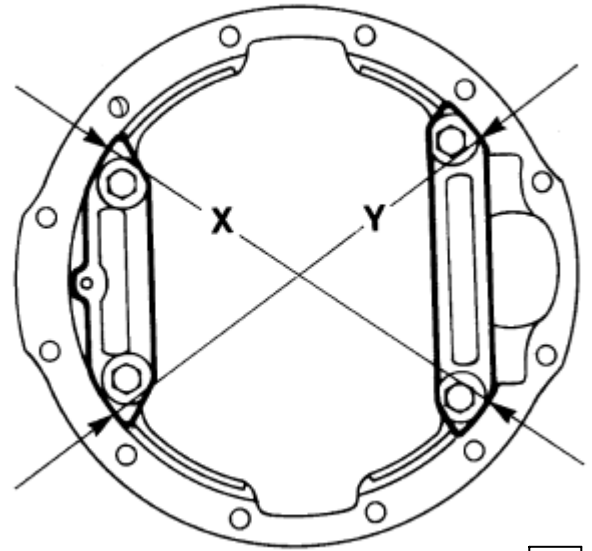

3. retighten the two adjusting ring nuts (4, Figure 86) to obtain a cap angle (2, Figure 86), measured as described in point 2, of 0.15 - 0.33 mm which corresponds to a bearing preload of 1.7 - 3.9 Nm (0.17 - 0.39 kgm).


Figure 86

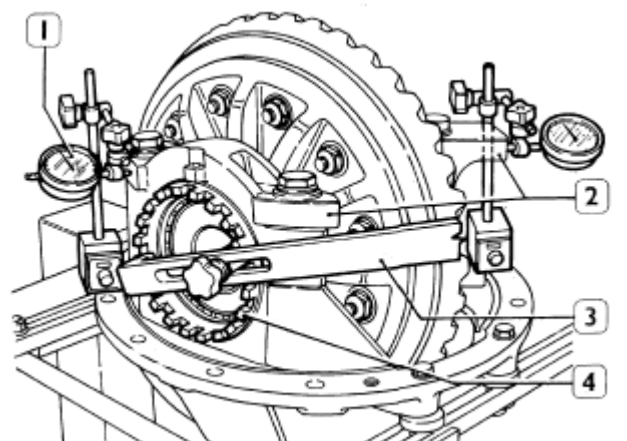

- B. proceed as described in point 1;
- C. remove the end play, retighten the two adjusting ring nuts (4, Figure 86) to obtain a cap angle (2) of 0.05 - 0.23 mm which corresponds to sum of the values read on the gauges (1)

Aquila Trucks Centres

Figure 87

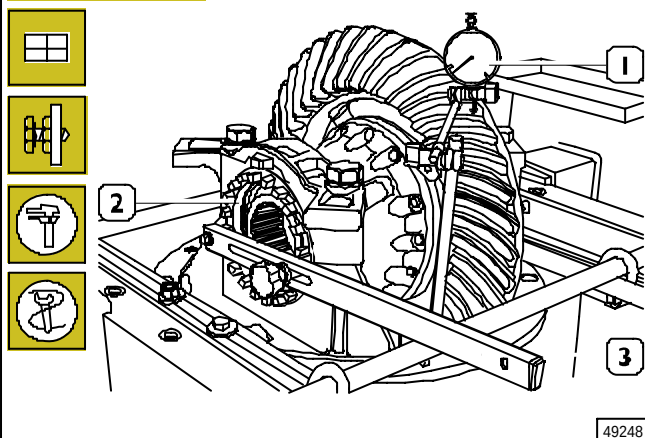

Adjust the end play between pinion-crown wheel teeth to obtain:


- 0.20 to 0.46 mm for already used units;
- 0.3 mm for new units

and proceed as follows:

- lock bevel pinion rotation using tool 99370317;
- position the gauge with magnetic base (1) as shown in the figure;
- using wrench 99355025 (3), loosen the adjusting ring nut on the crown side and tighten by the same amount the adjusting ring nut (2) on the opposite side. Taking this precaution the cap angle that has been previously adjusted is maintained;
- proceed as described until obtaining the prescribed value.

The end play value shall be checked on 4 equidistant points.


Figure 88

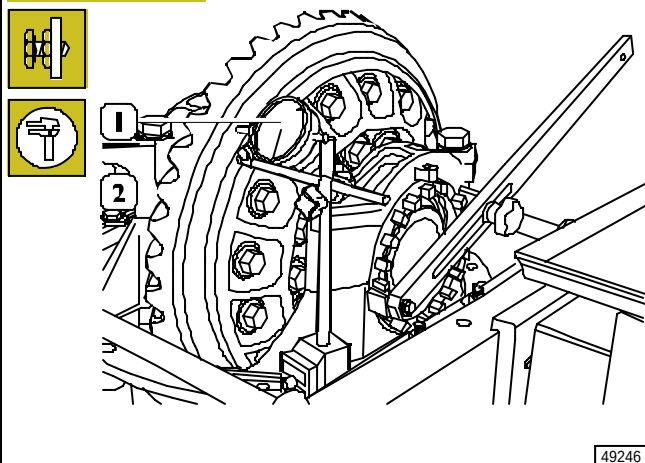

Using a gauge with magnetic stand (1) check whether crown surging is not exceeding 0.20 mm, otherwise remove the differential unit and find the cause.

Re-assemble and repeat previously described adjustment operations.

Figure 89

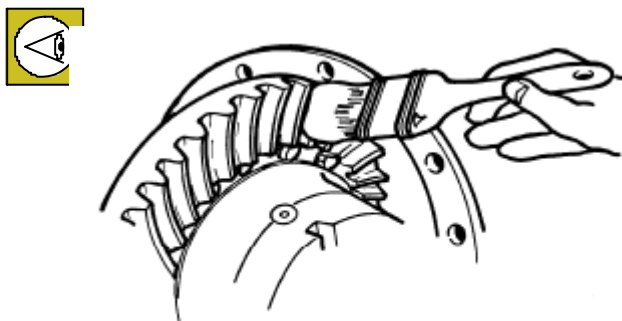

Using a brush apply a thin coating of Prussian blue on the crown wheel.

Turn the pinion and find the contact mark between the pinion teeth and the crown wheel teeth.

The following figures show the possible contact points and how to correct any errors.

Aquila Trucks Centres

Figure 90



19452

Contacts are excessively set on crown wheel teeth bottom land.

Conditions C-D. The pinion is too deeply set and therefore it requires further adjustment.

To adjust the exact pinion position, shims must be added under the pinion support to obtain an exact contact.

Condition C. Measure the end play and restore after adding the shims.

Condition D. After adding the shims take end play to the minimum value.

Figure 91



19453

Contacts are excessively set towards crown wheel teeth crest.



Conditions A-B. The pinion is too far out and therefore it requires further adjustment.

To adjust the exact pinion position, shims must be removed from under the pinion support to obtain an exact contact.

Condition A. After removing the shims take end play to the maximum value

Condition B. Measure the end play and restore after removing the shims.

 Figure 92

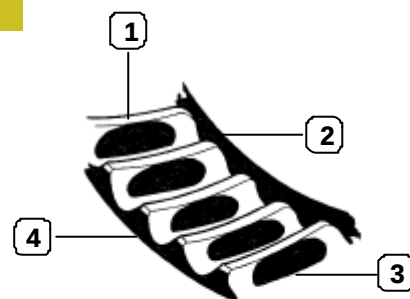

19454

THEORETICAL CONTACT AREA

- 1 Release, tooth concave side
- 2 Tip
- 3 Driving, tooth convex side
- 4 Heel

Condition E-F.

DRIVING. Central, tending towards the tip on tooth face and central on tooth contour.

RELEASE. Central, tending towards the heel on tooth face and central on tooth contour.

The pinion is positioned exactly.

Contact position can be modified by changing the pinion-crown end play.



Condition E. Reduce the end play.

Condition F. Increase the end play.



Aquila Trucks Centres

CORRECTING THE BEVEL GEAR PAIR CONTACTS (AFTER FITTING IN PLACE)


Figure 93

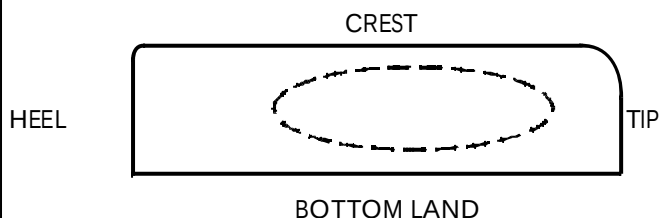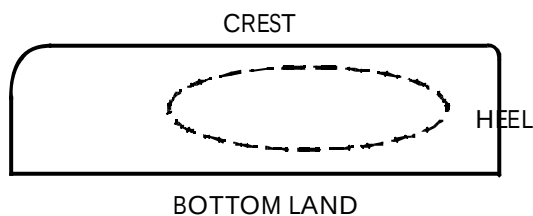THEORETICAL CONTACTS**DRIVING
(CROWN WHEEL CONVEX SIDE)****RELEASE
(CROWN WHEEL CONCAVE SIDE)**



- DRIVING : CENTRAL, TENDING TOWARDS THE TIP ON TOOTH FACE AND CENTRAL ON TOOTH CONTOUR.
- RELEASE : CENTRAL, TENDING TOWARDS THE HEEL ON TOOTH FACE AND CENTRAL ON TOOTH CONTOUR.

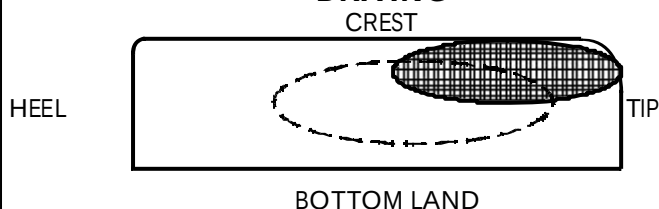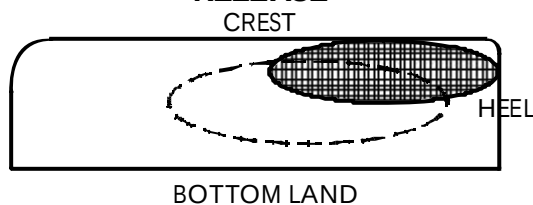CONDITION "A"**DRIVING****RELEASE**

- DRIVING - RELEASE : EXCESSIVE CONTACTS TO CREST
- DRIVING : EXCESSIVE CONTACT TO TIP
- RELEASE: EXCESSIVE : CONTACT TO HEEL
- CORRECTIVE ACTIONS : REMOVE SHIMS AND INCREASE END PLAY TO MAX.

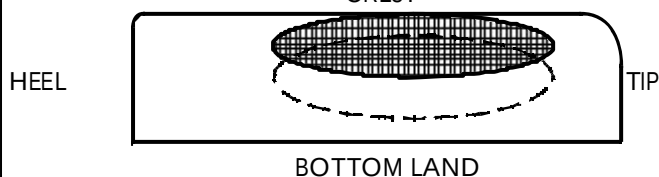CONDITION "B"**CREST****CREST**

- DRIVING - RELEASE : EXCESSIVE CONTACTS TO CREST
- CORRECTIVE ACTIONS : MEASURE THE END PLAY, REMOVE SHIMS AND RESTORE END PLAY

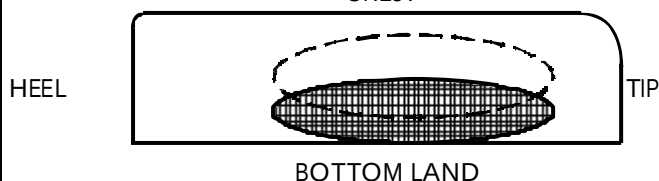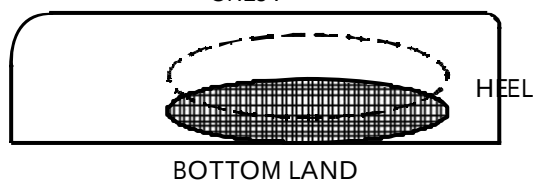
CONDITION "C"**CREST****CREST**

- DRIVING - RELEASE : EXCESSIVE CONTACTS TO BOTTOM LAND
- CORRECTIVE ACTIONS : MEASURE THE END PLAY, ADD SHIMS AND RESTORE END PLAY


60676

Aquila Trucks Centres


Figure 94

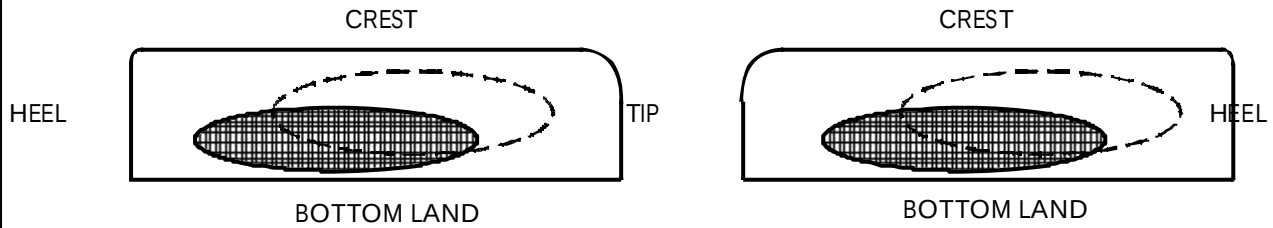CONDITION "D"

- DRIVING - RELEASE : EXCESSIVE CONTACTS TO BOTTOM LAND
- DRIVING : EXCESSIVE CONTACT TO HEEL
- RELEASE : EXCESSIVE CONTACT TO TIP
- CORRECTIVE ACTIONS : ADD SHIMS AND REDUCE END PLAY TO MIN.

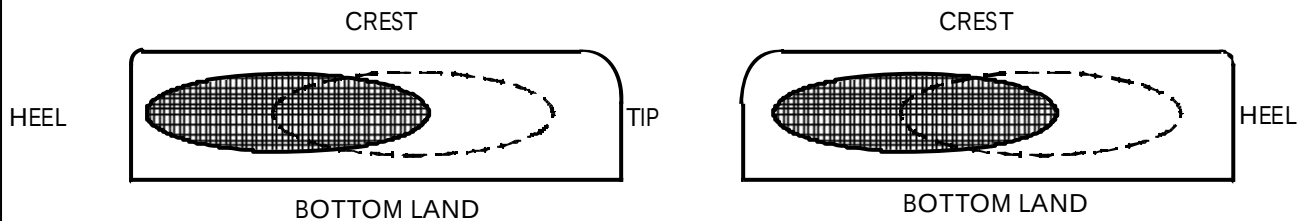CONDITION "E"

- DRIVING : EXCESSIVE CONTACT TO HEEL
- RELEASE : EXCESSIVE CONTACT TO TIP
- CORRECTIVE ACTIONS : REDUCE END PLAY

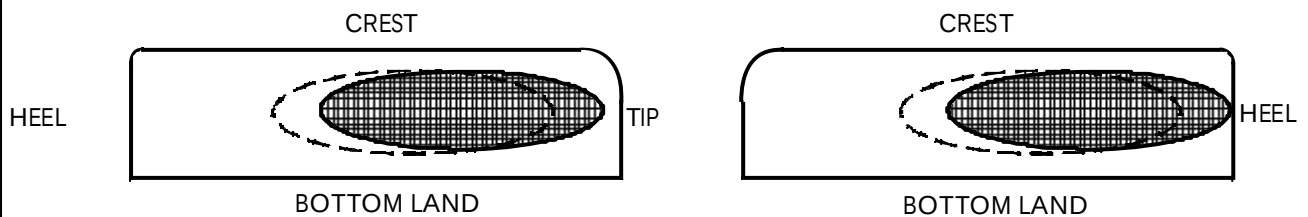CONDITION "F"


- DRIVING : EXCESSIVE CONTACT TO TIP
- RELEASE : EXCESSIVE CONTACT TO HEEL
- CORRECTIVE ACTIONS : INCREASE END PLAY

60677

Note: In case of pinions fitted without pilot bearing instead of "removing shims" it will be necessary to "add shims" and vice versa.
For the end play, the same conditions shown stand valid.
Contact marks are always referred to crown wheel teeth.


Aquila Trucks Centres

Figure 95

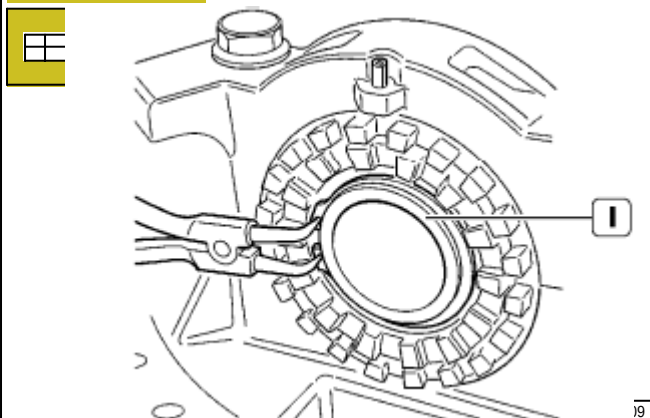

Fit the seal ring (1) and the spacer below.


Figure 96

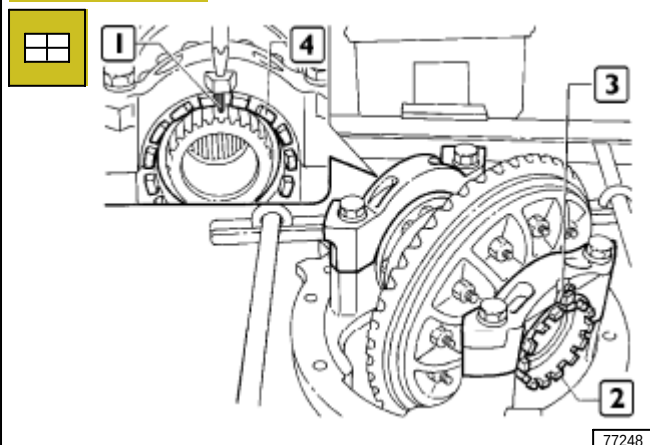

Fit the elastic pin (1) and the split pin (3) to lock the ring nuts (2-4).


NOTE If the elastic pin or the split pin do not coincide with the respective seats on the ring nuts, slightly turn the ring nuts so that the elastic pin or the split pin can be fitted.

Figure 97

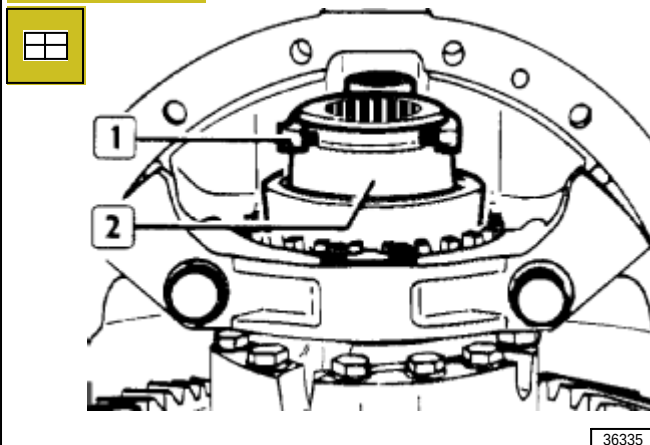


Fit the sliding sleeve (2) on the fork (1) and drive in the two spring pins.
Position the fork including the sliding sleeve into its seat.

Figure 98

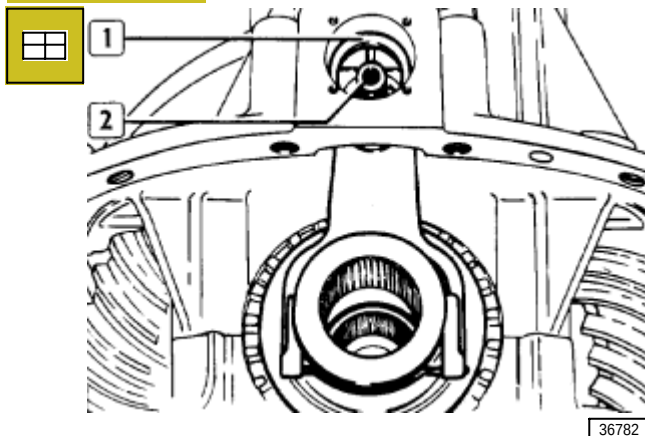

Insert the return spring (2) and the plain washer (1).


Figure 99

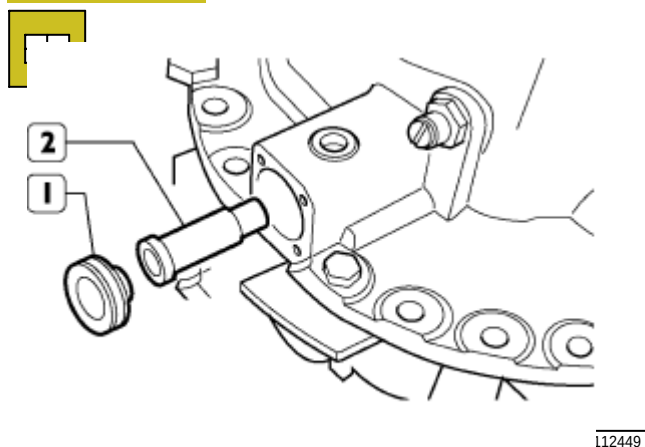

Fit the stem (2) and the piston (1).

NOTE Use a new o-ring.

Figure 100

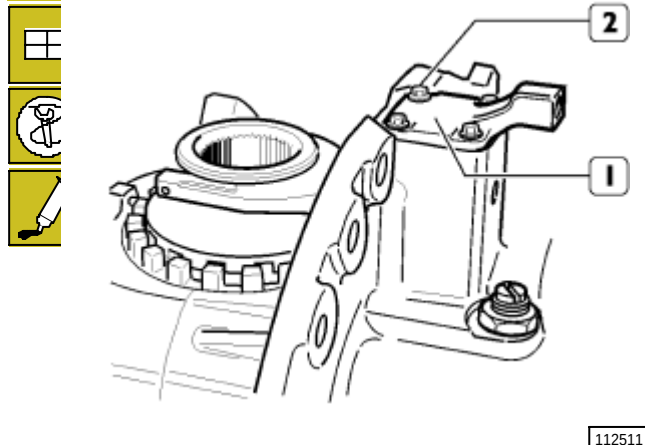


Fit the cover (1) as shown in the figure with a new gasket.
Tighten the screws (2) to the prescribed torque.

Aquila Trucks Centres

Remove the differential case from the stand and refit it on the rear axle case.

Figure

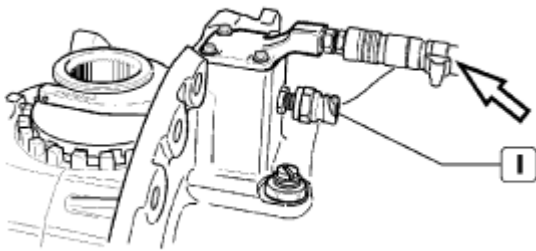

Fill the cylinder (see arrow) with 8-bar pressure.


Apply some sealer on the differential clamping switch (1) and fit it in its seat.

Connect a multimeter to the differential clamping switch and tighten the switch until they touch.

Further tighten it by one turn and close with the lock nut to the prescribed torque.

526082 REMOVAL-OVERHAUL-REFITTING OF INTERAXLE SHAFT

Figure 102

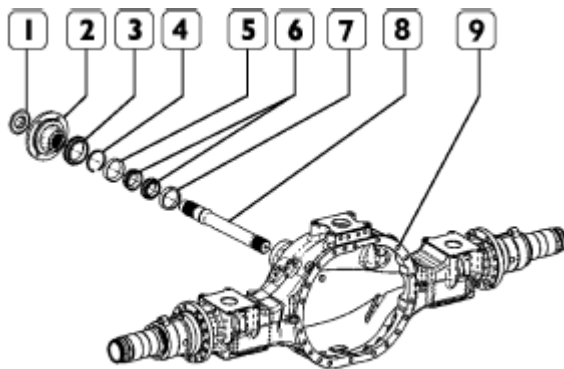


450

INTERAXLE SHAFT COMPONENTS

1. Nut - 2. Flange - 3. Seal ring - 4. Spacer ring -
5. Bearing outer ring - 6. Motion output shaft bearings -
7. Bearing outer ring - 8. Motion output shaft -
9. Rear axle case

Figure 103

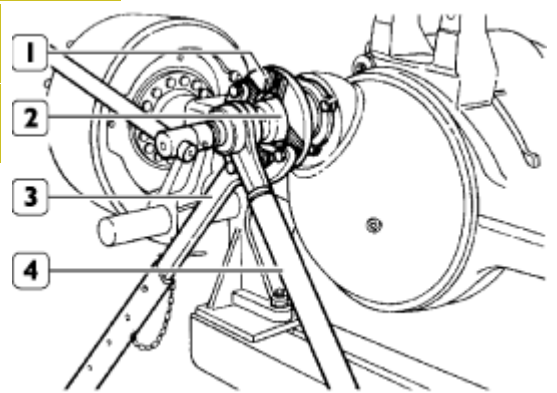

112455


Stop rotation of flange (1) with retainer 99370317 (3). With wrench 99355131 (2) and torque adaptor (4) loosen shaft flange (1) retaining nut.

Use a lever and the suitable beater to remove the flange (1).

Remove and throw away the seal ring (3, Figure 102).

Remove the snap ring from the interaxle shaft (4, Figure 102).

Figure 104

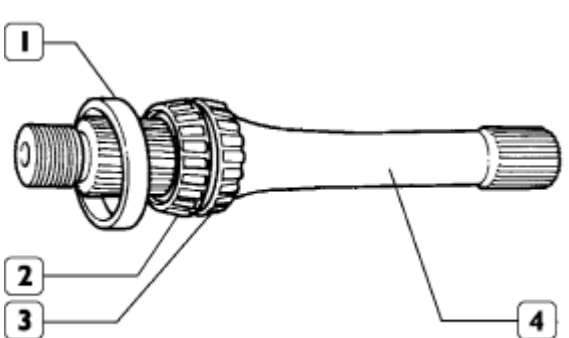


Pull out the interaxle shaft (4) together with the bearings (2 and 3) and the outer ring (1).

Use a suitable extractor to remove bearings (2 and 3) from interaxle shaft (4).

Aquila Trucks Centres

Adjustment of interaxle shaft bearing end play

Figure 105

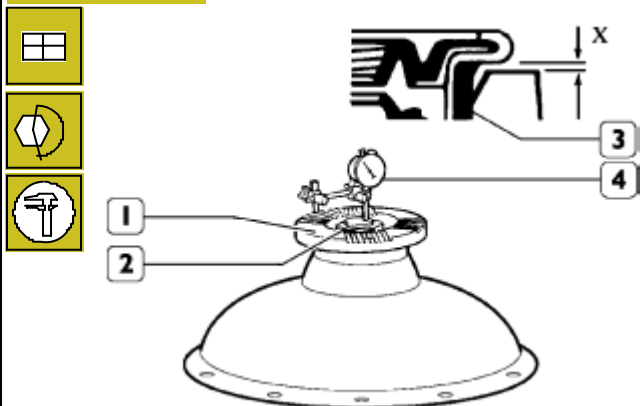

112473


Reverse the removal operation sequence to reassemble the interaxle shaft unit.

After fitting sealing ring (3), use a feeler gauge to check distance X between sealing ring (3) and mounting at four equi-distant points. Distance X must be between $0.38 \div 0.76$ mm.

Tighten nut (2) fastening flange (1) to the drive output shaft to the specified torque. Then check that end play is between 0.025 and 0.127 mm using a magnetic stand dial gauge positioned on shaft (4, Figure 104).

If reading is other than specified, replace the snap ring (4, Figure 102) with one of the correct thickness.

Figure 106

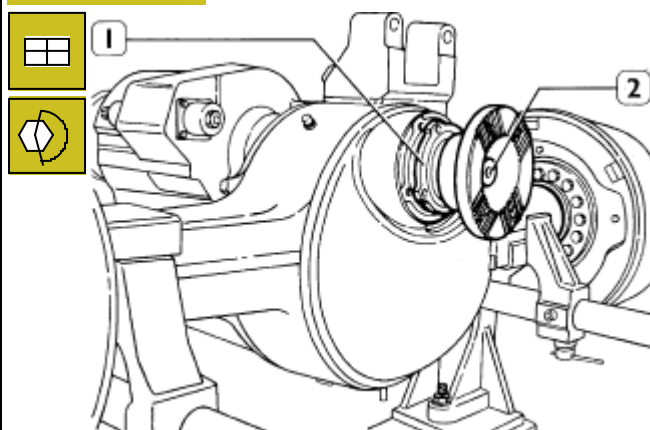

36346

Turn by 90° axle casing.

Set support (1) into axle casing comprising interaxle shaft (2) and tighten fixing nuts to the required torque.

Aquila Trucks Centres

5250 Rear axles ARVINMERITOR MR11-155/2D

	Page
DESCRIPTION	237
LOCATION OF DIFFERENTIAL UNIT PLATES - REAR AXLE	238
MAIN DATA	239
TIGHTENING TORQUES	240
TOOLS	241
REAR AXLE ASSEMBLY OVERHAUL	246
OVERHAULING THE WHEEL HUBS	246
REMOVING AND REFITTING THE DIFFERENTIAL (WITH AXLE ON STAND 99322215)	246
- Removal	246
- Checking axle housing	246
- Refitting	246
REPAIRING THE DIFFERENTIAL	247
- Removing the differential	247
- Removing the differential housing	248
REMOVING THE BEVEL PINION FROM THE SUPPORT	250
- Differential component check	250
- Fitting the differential housing	251
FITTING THE MOUNT ON THE BEVEL PINION	252
- Reassembling the differential carrier	254
ADJUSTING THE CAP GAP	256
CORRECTING THE CROWN WHEEL AND PINION CONTACTS (AFTER ASSEMBLY) ..	259
WORK ON THE VEHICLE	262
REPLACING THE BEVEL PINION MOUNT SEAL	262
- Disassembly	262
- Assembly	263

Aquila Trucks Centres

Aquila Trucks Centres

DESCRIPTION

The rear axle is the load bearing type with a single reduction. It is composed of a pressed sheet steel box appropriately strengthened.

The differential is characterized by a hypoid-toothed gear train. The pinion is supported by two tapered roller bearings and by a third cylindrical roller bearing.

The position of the bevel pinion, in relation to the ring bevel gear, is adjusted by changing the thickness of the pack of shims between the differential case and the bevel pinion mount.


The gearing box is supported by two tapered roller bearings and can be adjusted axially with two threaded ring nuts.

The rear axle is equipped with a differential locking device.

The bearings of the wheel hubs are the UNIT-BEARING type with permanent lubrication and need no adjustment.

Brakes are of the DUO - DUPLEX drum type.

Figure 1

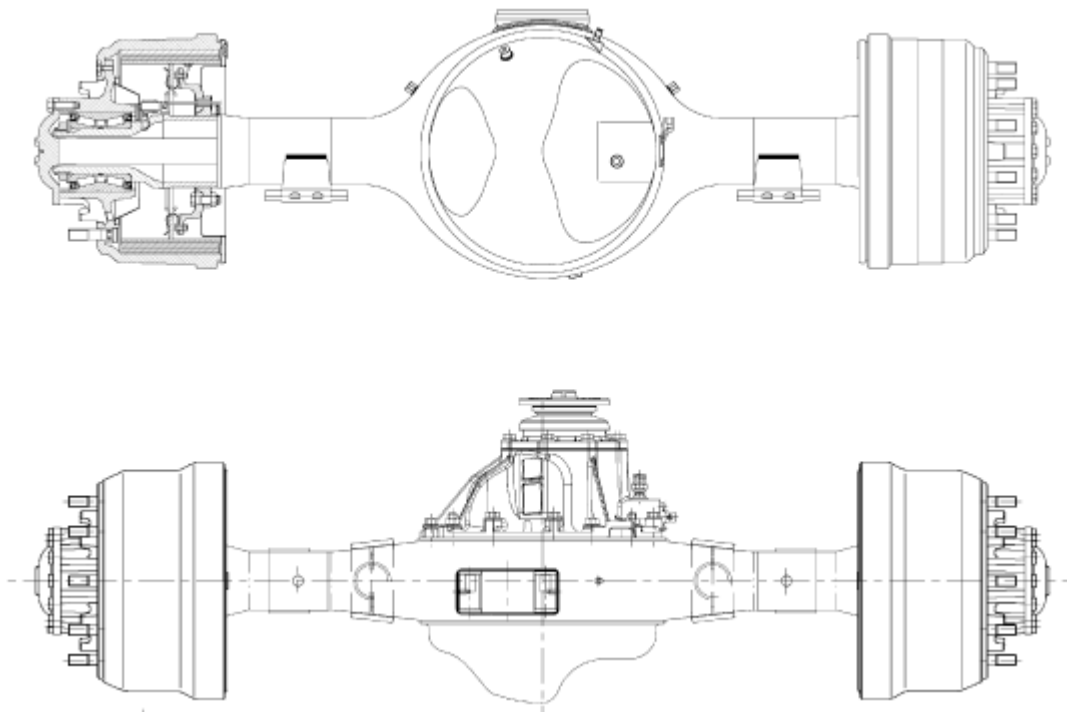

107468

VIEWS OF THE ARVINMERITOR MT23-155 TANDEM AXLE ASSEMBLY

Aquila Trucks Centres


LOCATION OF DIFFERENTIAL UNIT PLATES - REAR AXLE

The plates contain all information and details relating to either DIFFERENTIAL UNIT and REAR AXLE.

On rear axle, two plates are present: one on the differential unit and one in same position on rear axle box. On the notifications of interventions under guarantee, rear axle box and differential unit plate data must always be shown. It is suggested always to read and copy out shown data before any repair so as to order correct spare parts and transmit correct information to either IVECO Service Network.

Plate is never to be removed from the unit.

Figure 2

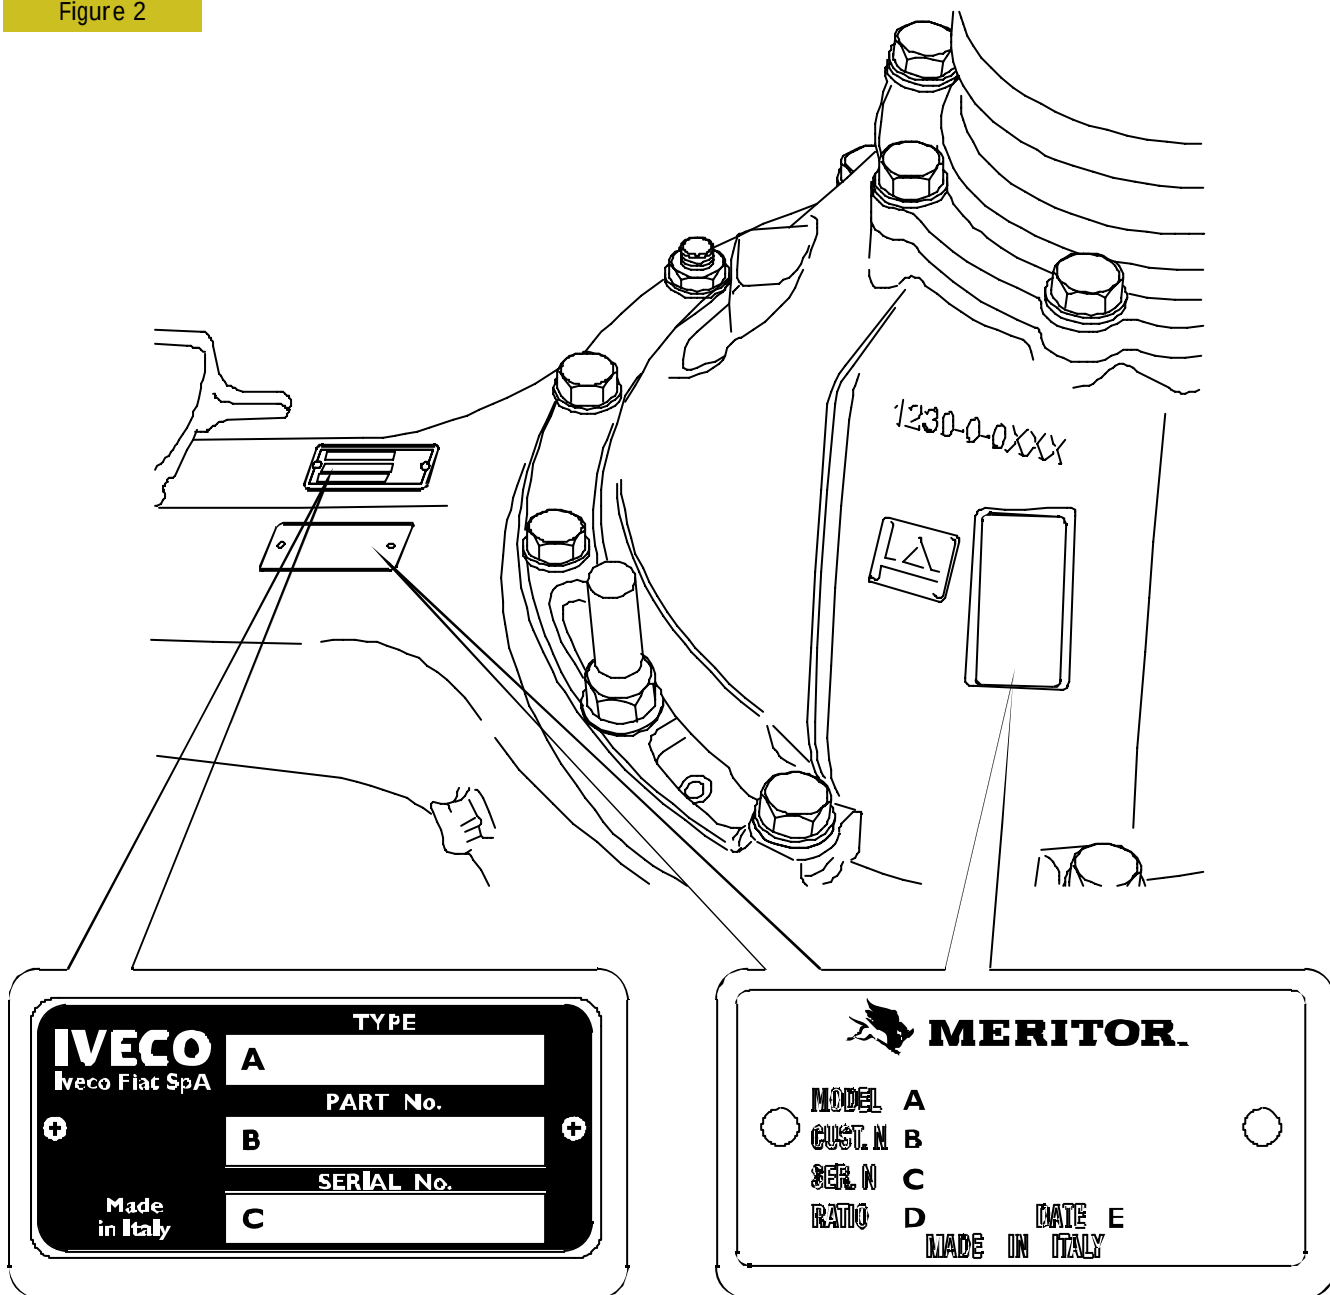

86620

IVECO identification plate

 
 
 



 
- A = identifies rear axle type
- B = drawing number
- C = production progressive number

ARVINMERITOR identification plate

- A = identifies the family the item is belonging to / the model
- B = drawing number
- C = ArvinMeritor series number
- D = rear axle ratio
- E = production date


Aquila Trucks Centres

MAIN DATA

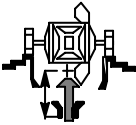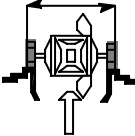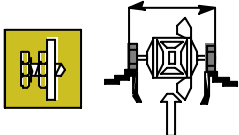	Rear axle Type	Load bearing with single reduction MT 23-155
	Bevel pinion bearings	2 with tapered rollers and 1 with cylindrical rollers
	DIFFERENTIAL ASSEMBLY Bevel gear pair reduction ratio	4.50 (8/36) - 4.13 (8/33) - 3.78 (9/34) - 3.40 (10/34)
	Clearance between pinion and ring gear mm	0.26 to 0.50
	Adjustment of clearance between pinion and ring gear	With adjustment rings
	Bevel pinion position in relation to ring gear	With adjustment shims
	Cap gap mm	0.15 to 0.33
	Cap gap adjustment	With adjustment rings
	Rolling torque between planetary gears and crown wheels Nm kgm	68 max. 6.8 max.
	Thicknesses of adjustment rings between bevel pinion mount and differential case mm	0.125 - 0.200 - 0.500
	Wobble of ring gear supporting surface on half box mm	0.13 max.
	WHEEL HUBS	
	Wheel hub bearings	Two taper roller bearings
	Wheel hub bearing end float adjustment	By ring nut
	Axle oil	TUTELA W140/M-DA
	Quantity Litres (kg)	18.5 (16.5)
	Dry weight (Mechanical suspension) kg (Pneumatic suspension) kg	586 591
	Maximum capacity GRW kg	11500

Aquila Trucks Centres

Figure 3

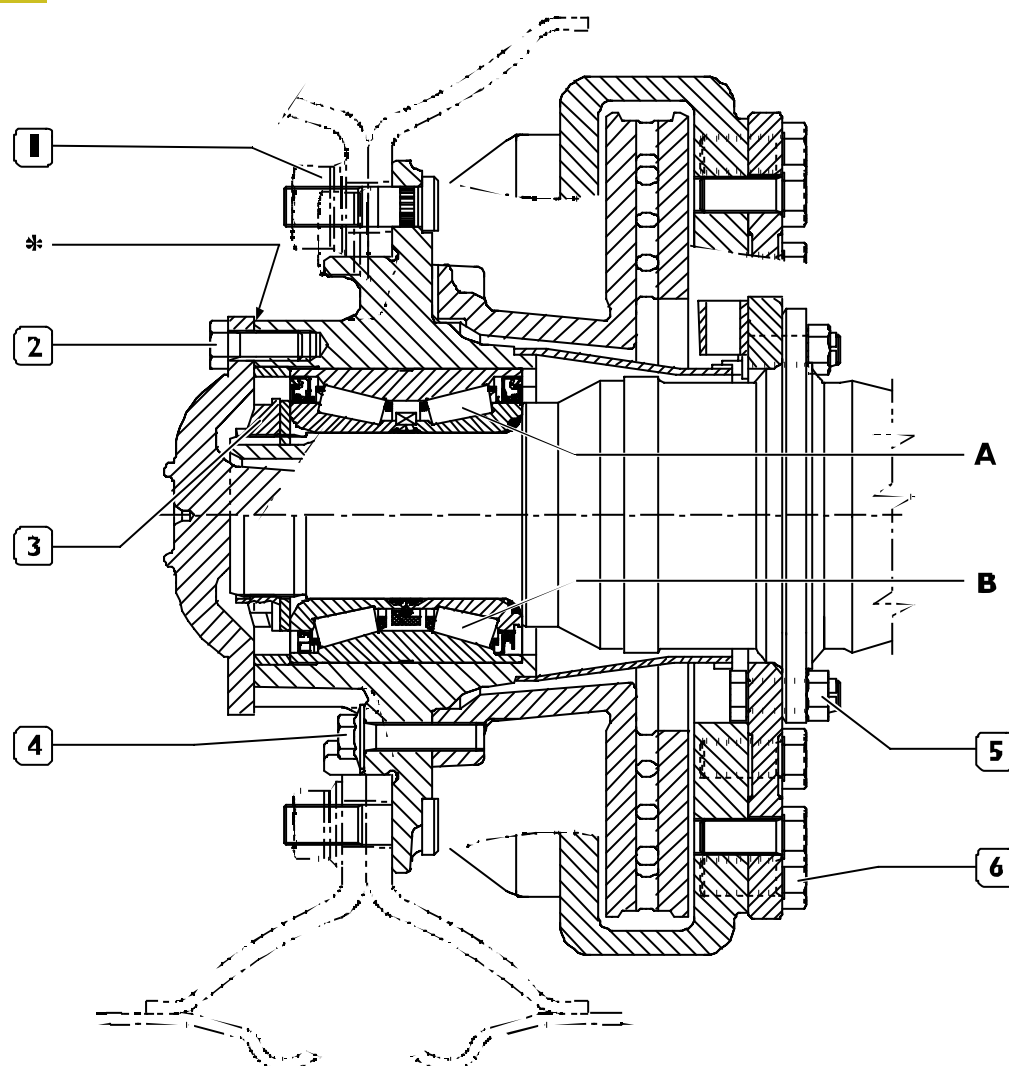

84401

TIGHTENING TORQUES

PART	TORQUE	
	Nm	kgm
1 Nut fixing wheels	732 to 599	73.2 to 59.9
2 Screw fixing drive shaft flange	235 to 289	23.5 to 28.9
3 Ring nut retaining wheel hub bearing	834 to 1030	83.4 to 103
4 Screw fixing brake disc to wheel hub	268 to 295	26.8 to 29.5
5 Nut for screw fixing brake calliper mount	275 to 304	27.5 to 30.4
6 Screw fixing brake calliper to mount	554 to 677	55.4 to 67.7




: Spread with sealant type IVECO 1905685 (LOCTITE 14780)

A TIMKEN bearing




B SKF bearing

Aquila Trucks Centres






TOOLS

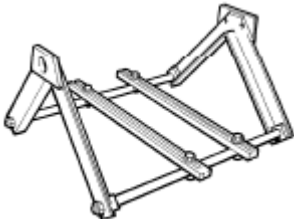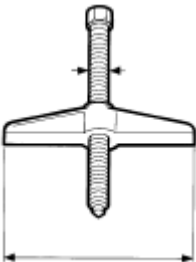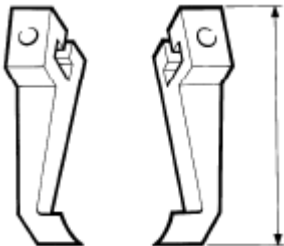TOOL NO.	DESCRIPTION	
99305121		Heater
99322205		Rotary stand for overhauling assemblies (capacity 1000 daN, torque 120 daNm)
99322215		Stand for axle overhauling
99322225		Unit holder (to be mounted on stand 99322205)
99341003		Single-acting lift
99341009		Pair of brackets





Aquila Trucks Centres

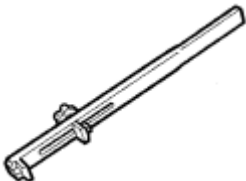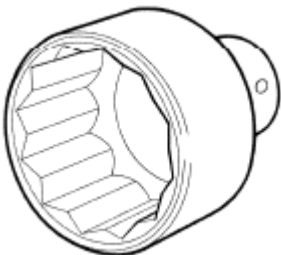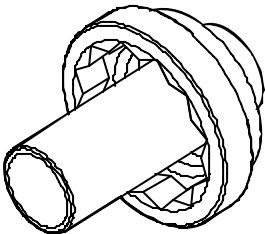TOOL NO.	DESCRIPTION	
99341015		Clamp
99345049		Reaction block for puller tools
99348001		Puller tool with clamping device
99355025		Wrench for differential gearcase bearing adjustment ring nuts
99355088		Wrench (60 mm) for differential bevel pinion nut (to be used with 99370317)
99355180		Wrench (105 mm) for wheel hub bearing adjustment nut

Aquila Trucks Centres

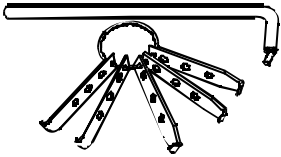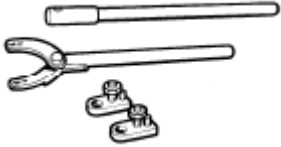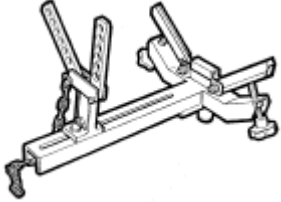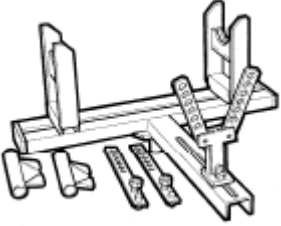
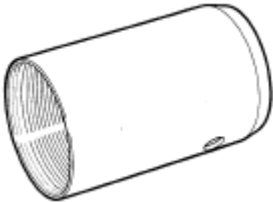
TOOL NO.	DESCRIPTION	
99363204		Tool to extract gaskets
99370317		Reaction lever and extension for flange lock
99370509		Hook to remove differential gearcase half-housing
99370616		Support to remove-fit back differential
99370617		Universal support to remove-fit back rear axles
99370700		Guide to assemble wheel hub

Aquila Trucks Centres

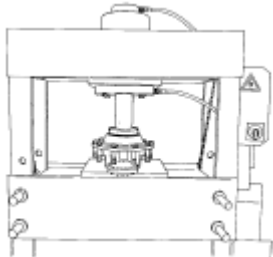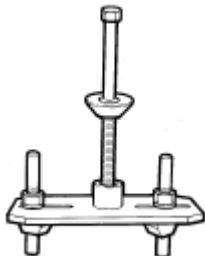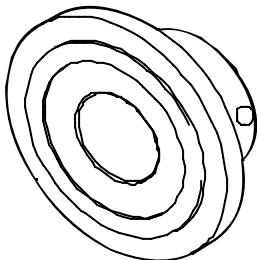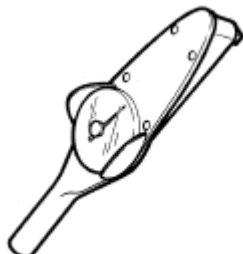TOOL NO.	DESCRIPTION	
99370706		Tool to fit wheel hub bearing
99370708		Tool for removing wheel hub bearing
99371047		Stand to hold differential half-housing when tightening crown wheel screws (to be used with 99322205 - 99322225)
99374244		Installing tool for assembling bevel pinion seal ring
99389816		4 x torque multiplier, with square connection, 3/4" in, 1" out (maximum torque 2745 Nm).
99389819		Torque wrench (0 - 10 Nm) with 1/4" square fitting

Aquila Trucks Centres

TOOL NO.	DESCRIPTION
99341017	Pair of brackets with holes
99345053	Reaction block for puller tools

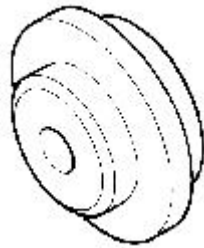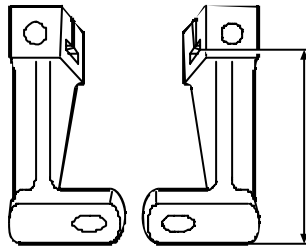


Aquila Trucks Centres

525010 REAR AXLE ASSEMBLY OVERHAUL**525030 OVERHAULING THE WHEEL HUBS**

NOTE Wheel hub overhauling is similar to the intermediate axle overhauling described on page 208.

**526210 REMOVING AND REFITTING THE DIFFERENTIAL
(with axle on stand 99322215)**

Figure 4

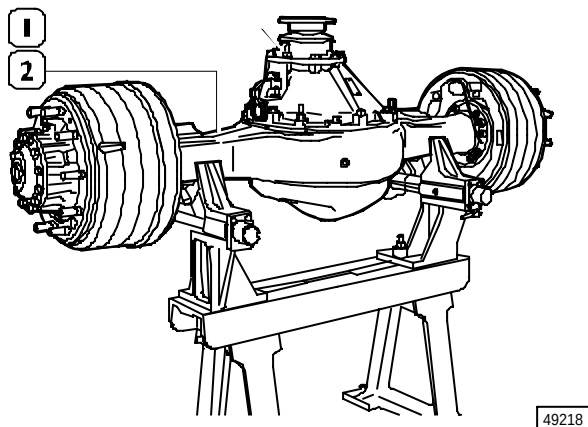**Removal**


Take out the axle shafts, undo differential case (1) fastening screws and nuts, screw down three screws (which act as extractors in this phase) into the special threaded holes provided, then take the differential off rear axle case (2).

Checking axle housing

It is necessary to check the alignment of the axle housing since any deformation will generate abnormal strain and make the assembly noisy.

NOTE To perform the checks on the axle housing, it is necessary to remove the wheel hubs.

Figure 5

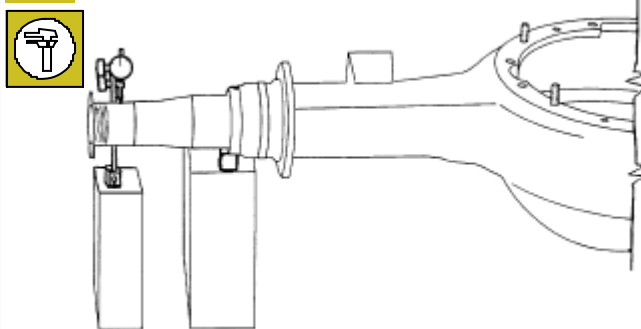


Set two parallels on a suitable check surface, rest the axle housing on it, taking care to protect the thread on the sleeves with the ring nuts.

Position a dial gauge with a magnetic base, put the rod on a ground portion of the sleeve and, turning the axle housing on its own axis, check it has suffered no deformation, with a maximum oscillation for the:

- air-suspension axle housing 0.3 mm


Refitting

Figure 6

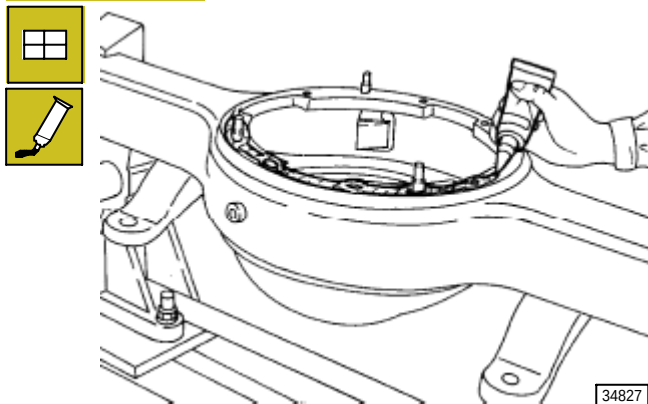

Spread the contact surface of the axle housing with IVECO 1905685 (LOCTITE 14780) sealant, after cleaning the contact surface.

Figure 7

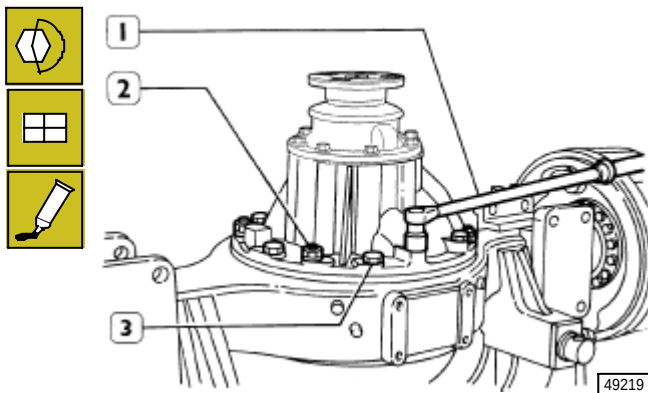


Insert the differential into the axle housing, screw down the nuts (2) and screws (3) together with the safety washers and tighten them, with a torque wrench (1), to the required torque and in the sequence shown in Figure 8.

Fit the axle shafts into place.

Pour the required amount of oil into the axle housing.

Figure 8

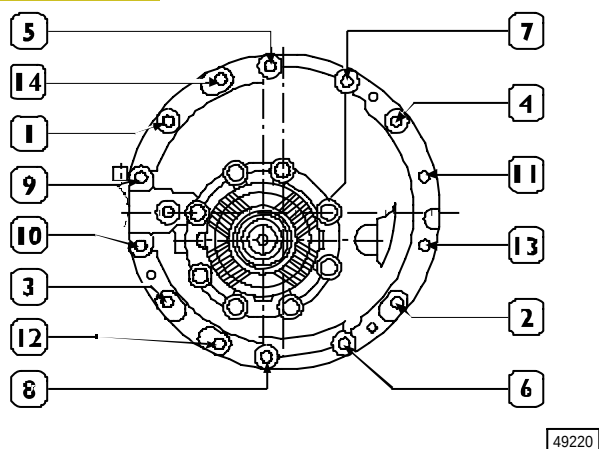

Tightening sequence diagram (differential case to axle housing)


(1 - 2 - 3 - 4 - Nuts)

(10 - 9 - 14 - 5 - 7 - 11 - 13 - 6 - 8 - 12 - Screws)

Aquila Trucks Centres


526210 REPAIRING THE DIFFERENTIAL
Removing the differential

Figure 9

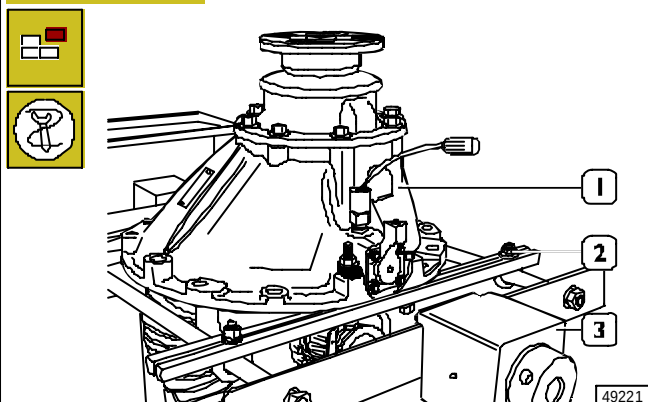


Remove the differential (1) as described in Figure 4. Secure it to the stand 99322205 (3) with the mount 99322225 (2).

Figure 10

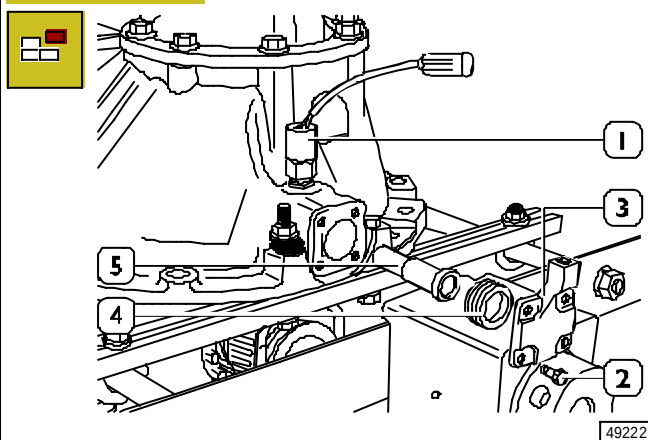


Unscrew the transmitter (1); unscrew the screws (2) and remove the parts 3 – 4 – 5.

Figure 11

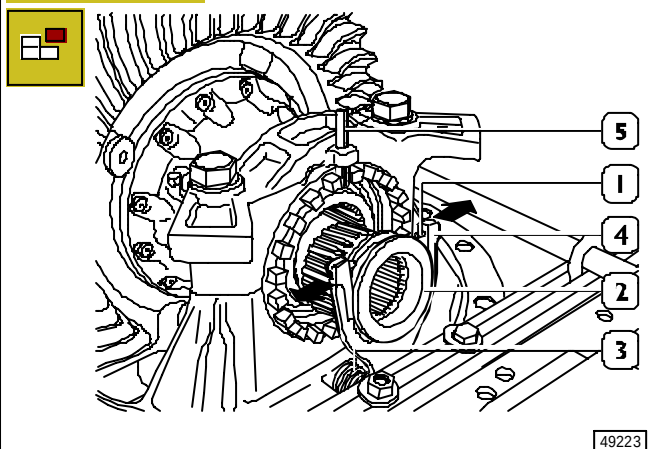


Push the split pins (1 →) outwards and extract the sliding sleeve (2). Take out the spring (3), fork (4) and split pin (5).

Figure 12

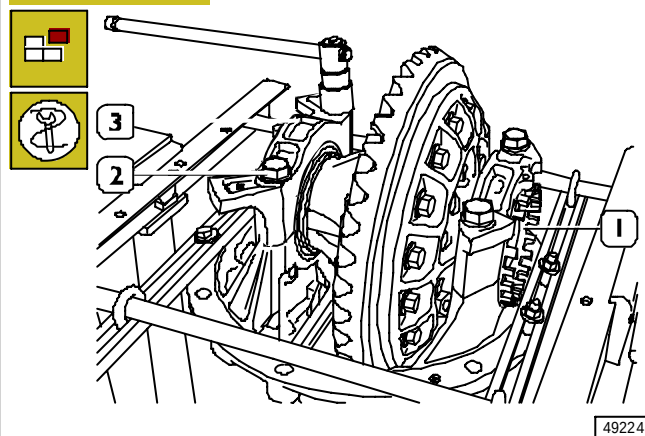

Unscrew the ring nut (1) for adjusting the bearing. Using an appropriate wrench, unscrew and remove the screws (2) with their washers; repeat this process on the opposite side. Remove the supporting bearing caps (3).


Figure 13

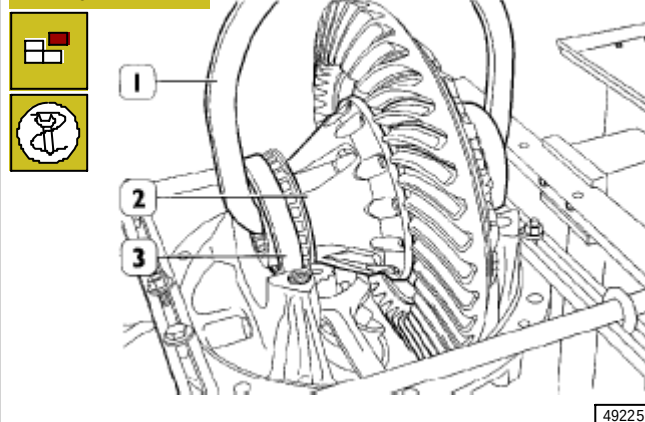

Using the hook 99370509 (1) extract the differential housing (2) together with the ring bevel gear and outer rings (3).


Aquila Trucks Centres

Figure 14

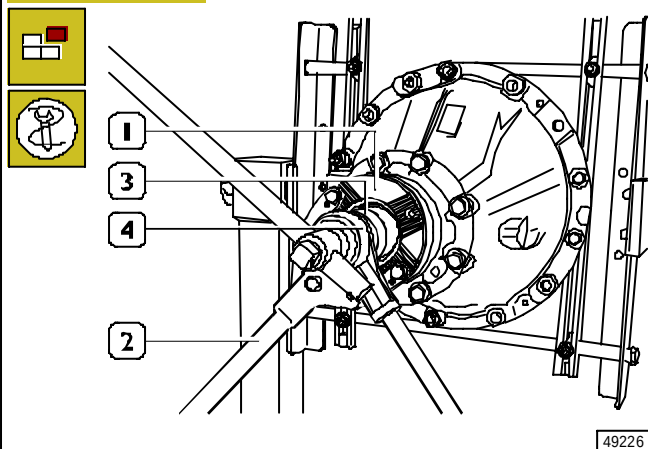

Using tool 99370317 (2), lock the flange (1).
Using wrench 9955088 (3) and multiplier (4), loosen the bevel pinion nut.

Figure 15

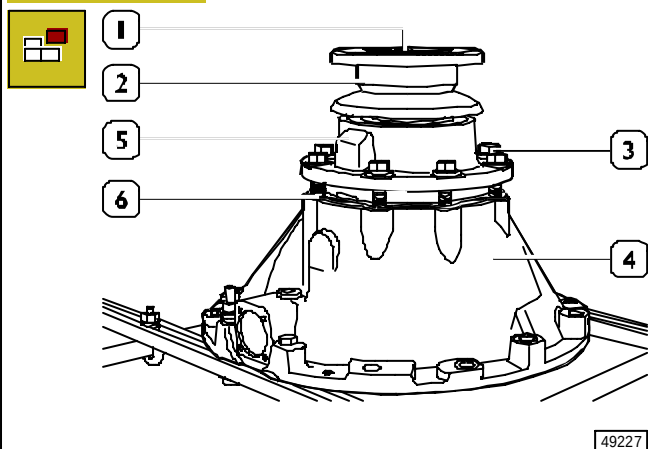


Remove the nut (1) and extract the flange (2).
Remove the screws (3) fastening the bevel pinion support to the differential carrier (4).
Remove the complete bevel pinion support (5) from the differential carrier. Remove the shims (6) for adjusting the pinion position in relation to the crown wheel and use a micrometer to measure the overall thickness.

NOTE Check that the seal ring is intact (O-ring), change it if damaged.


Removing the differential housing

Figure 16

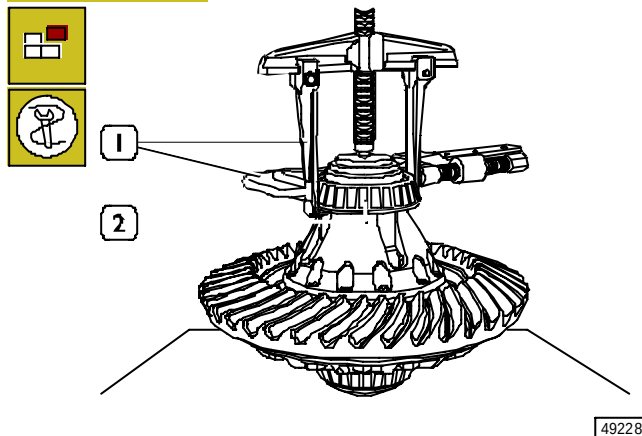


Using a suitable puller (1), extract the bearing (2).

Figure 17

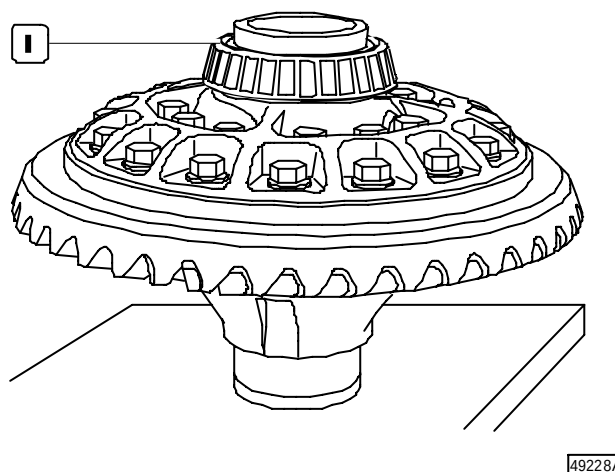

Turn the gearcase upside down and remove the bearing (1). (This is a destructive operation).


Figure 18

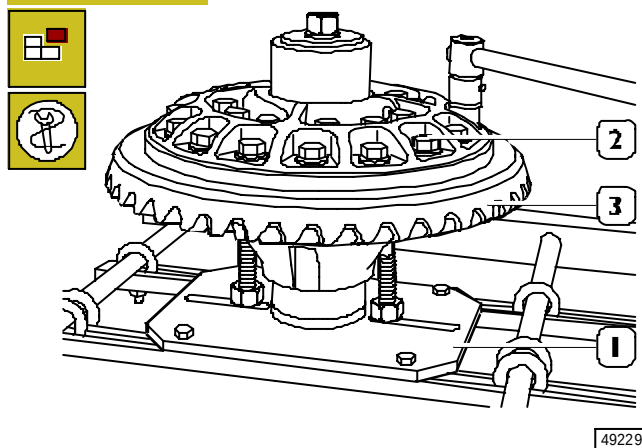

Place the gearcase on tool 9971047 (1).
Remove the locknuts (2) fastening the ring bevel gear (3) to the gearcase.
Using a bronze beater, remove the ring bevel gear.

Aquila Trucks Centres


Figure 19

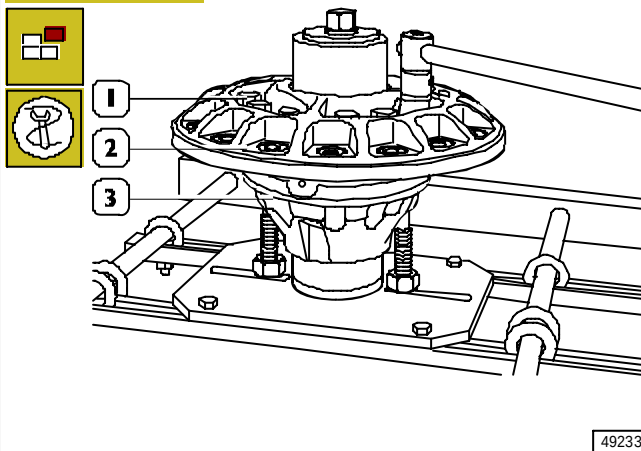

Mark the assembling position of the two half cases (2 and 3) and cross journal, to ensure correct matching and re-assembling. Remove the screws (1) and lift the half casing (2) off the unit.

Figure 20

Remove components (2 - 3 - 4 - 5 - 6 - 7 - 8 - 9) from the half casing (1).

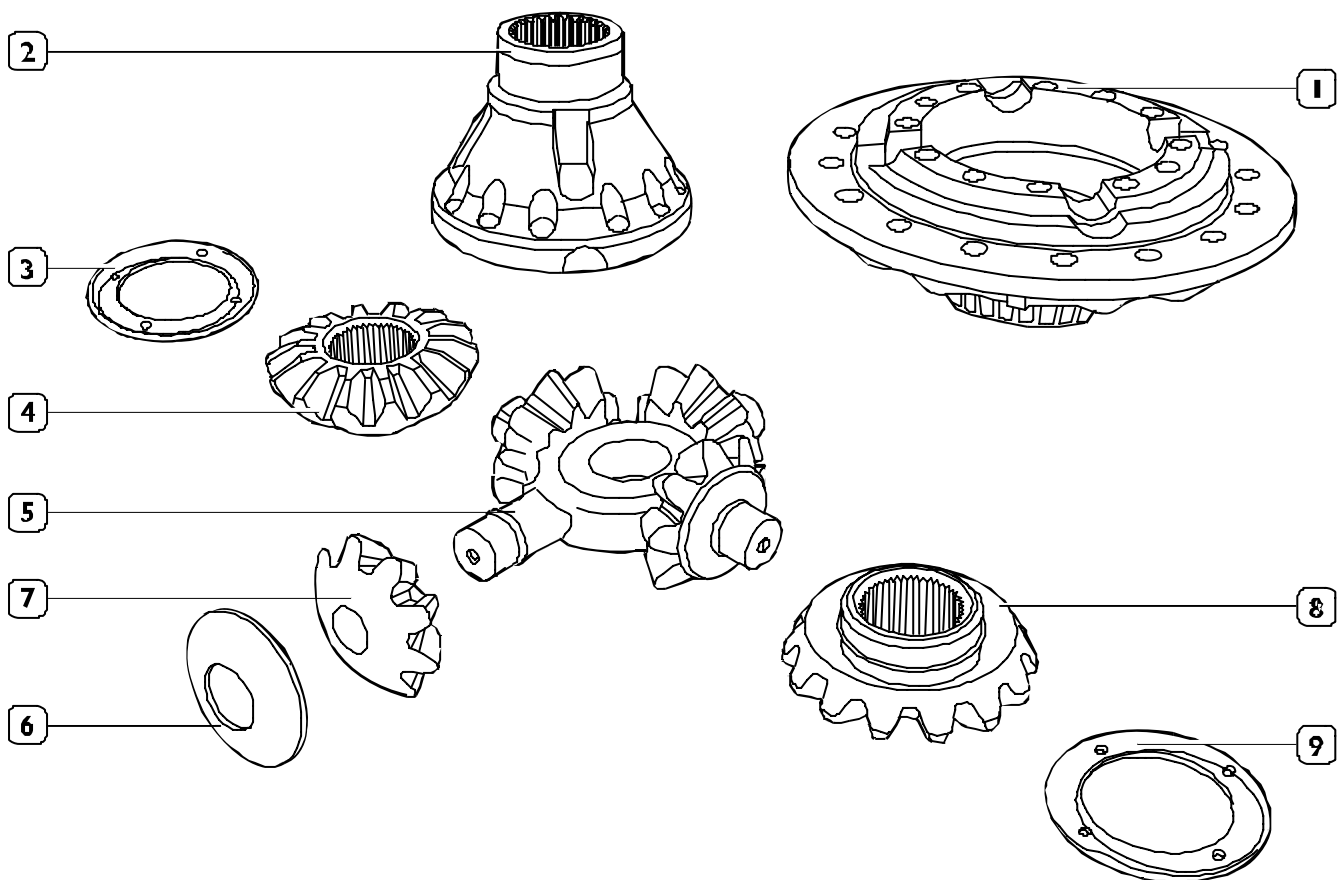

49234A


DIFFERENTIAL HOUSING COMPONENTS

1. Half casing - 2. Half casing - 3. Crown wheel - 4. Planetary gear - 5. Spider - 6. Shoulder washer -
7. Planetary gears - 8 Crown wheel - 9 Shoulder washer

Aquila Trucks Centres


526249 REMOVING THE BEVEL PINION FROM THE SUPPORT

Figure 21

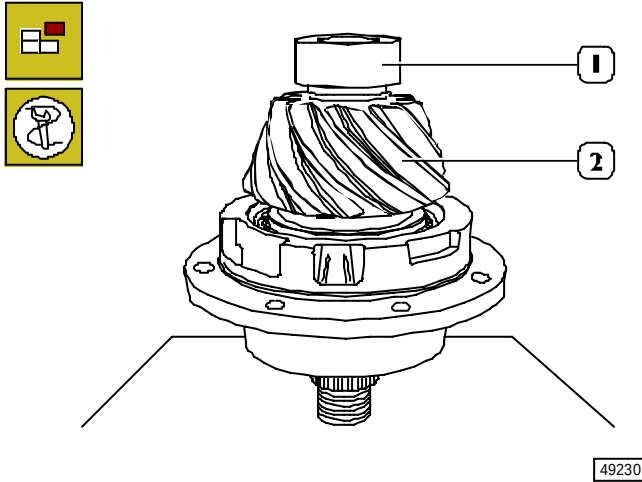

Using tool 99348001, extract the bearing (1) from the bevel pinion (2).

Figure 22

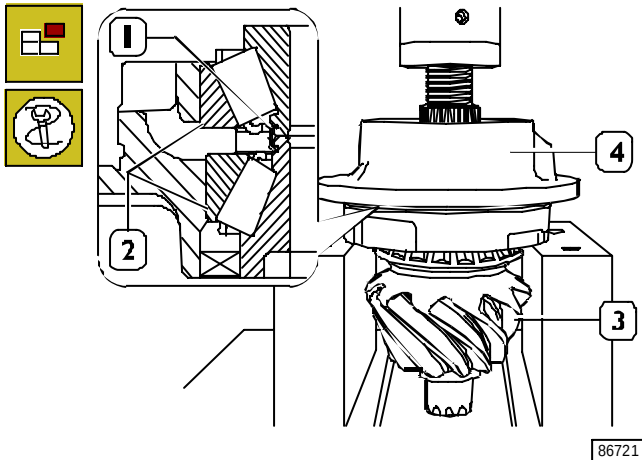

Take off the bevel pinion (3) (under a press) from the support (4).




The mounting (4) is supplied as a spare part together with preassembled tapered roller bearings and seals.



Due to production requirements, the two bearings (2) of pinion (3) are kept assembled by means of a special metal ring (1) that is normally left in place, owing to its being unimportant. During the pinion disassembling phase, the ring is partially taken out, if still present.

If not taken out, the ring could be dangerous, since it could subsequently interfere with the bearings. Prior to reassembling the pinion, it is therefore essential that you check for the presence of the ring and take it out fully.

Figure 23

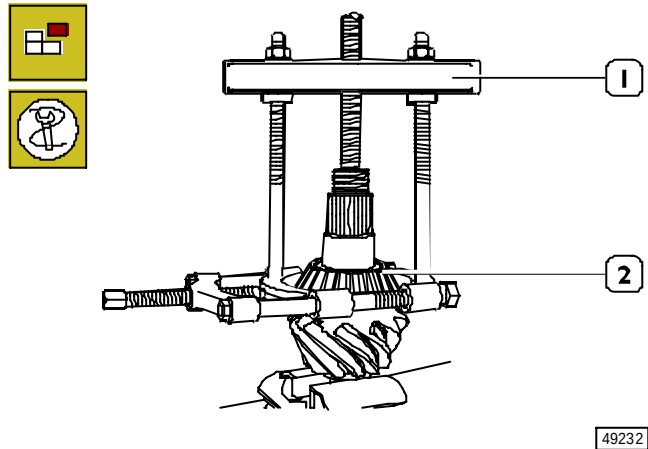

Using a suitable tool (1), extract the bearing (2).

Differential component check

Carefully clean all differential components. Lubricate the bearings and rotate the roller cage; it should rotate freely and smoothly.




Inspect the ring bevel gear and half casing contact surfaces, making sure the ring bevel gear perfectly adheres. Warped surfaces may cause ring bevel gear fastening screw vibration, thus undermining the unit operation.

Make sure the slotted section fastening the flange to the pinion is not worn. If it is, replace the pinion.

Aquila Trucks Centres


Fitting the differential housing

Figure 24

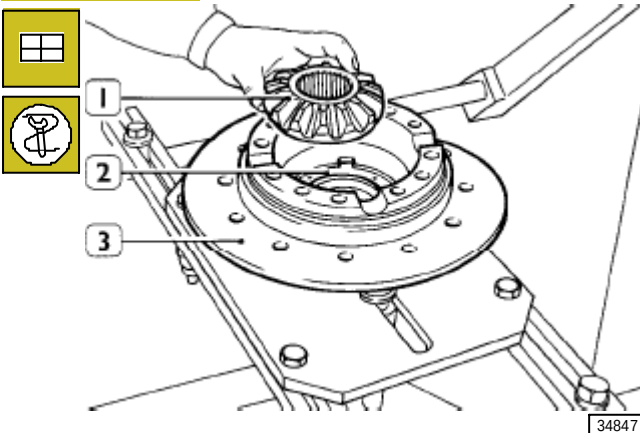

Place the half casing (3) on tool 99371047. Insert the crown wheel shoulder washer (2) into the half casing, then fit the crown wheel (1).

Figure 25

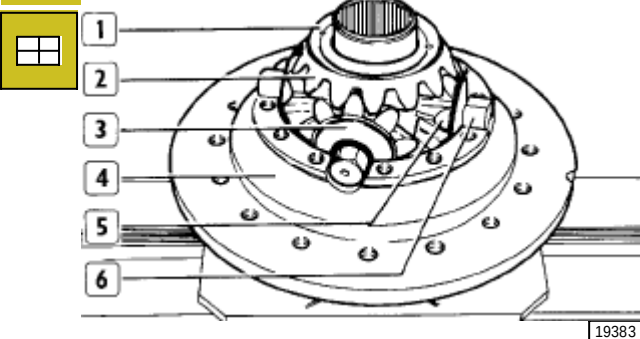


Fit the spider (6), complete with planetary gears (5) and shoulder washers (3), to the half casing (4).

NOTE If the spider has not been replaced, make sure the marks made on removal match.

Fit the second crown wheel (2) complete with shoulder washer (1).

NOTE Lubricate every component with axle oil.


Figure 26

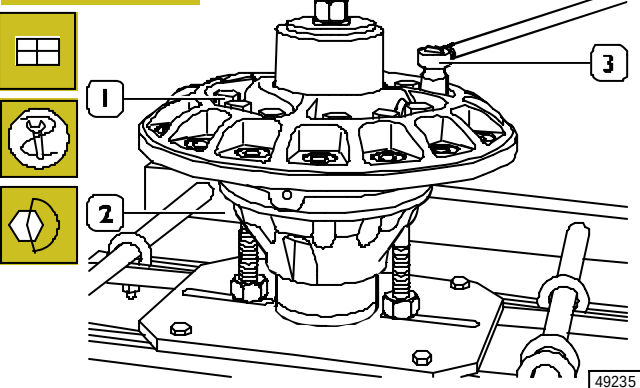

Fit the half casing (2). Make sure the marks made on removal match. Insert the screws (1) and tighten as follows:


- 1st phase: tightening with a torque wrench (3) to a torque of 100 Nm (10 kgm).

Figure 27

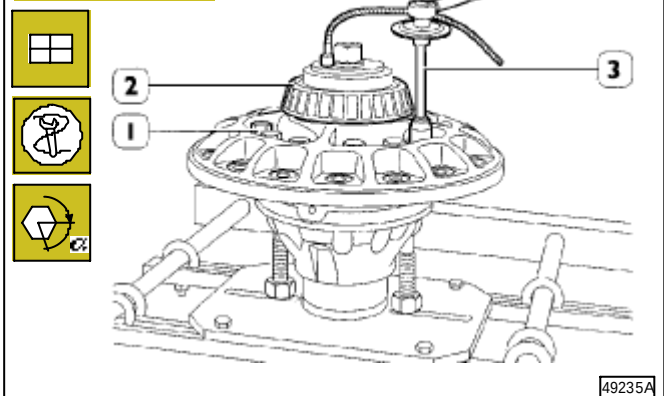


- 2nd stage: tighten the screws (1) by means of tool 99395216 (3) at 110° to 120° angle. Heat the bearing (2) at 100°C for approx. 15 min. in a convection furnace and fit it, using a suitable beater.

Figure 28

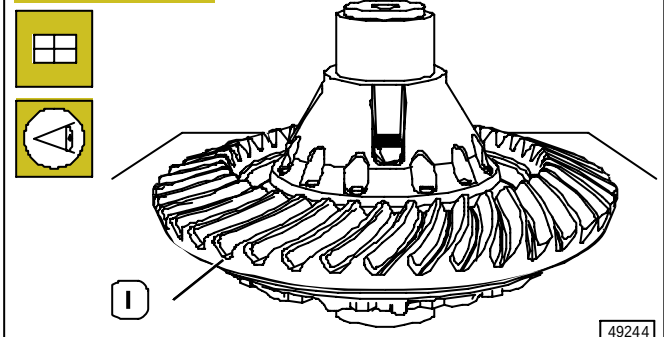

Heat the ring bevel gear (1) to a temperature of 100°C ± 150°C in an air circulation oven and position it in its seat, in the gear housing, checking it turns freely and making the holes coincide for the screws fixing the ring bevel gear-gear housing by fitting the 4 manoeuvring screws.

Figure 29

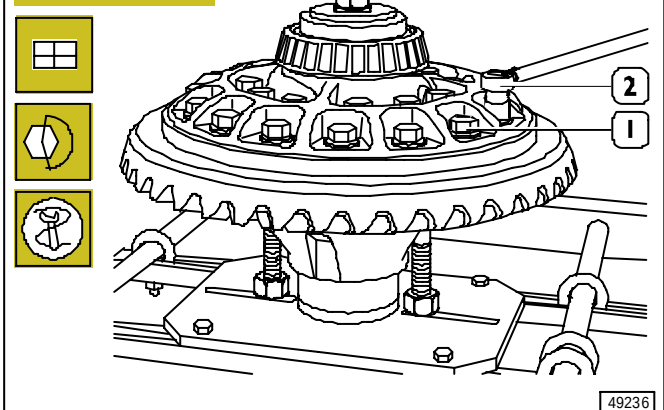


Let the ring bevel gear cool, then place the gearcase upside down on the tool.

Insert the screws (1) and tighten as follows:

- 1st stage: tighten to 100 Nm (10 kgm) torque by means of a torque wrench (2);
- replace the 4 manoeuvre screws with new ones and apply the same specified torque.

Aquila Trucks Centres

Figure 30

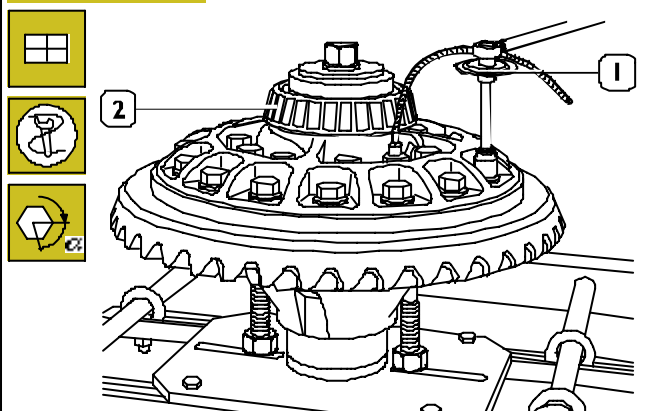


492364

- 2nd phase: closing, with tool 99395216 (1) with an angle of 80 – 90°.

Heat the bearing (2) to a temperature of 100°C for approx. 15 min. in an air circulation oven and drive it in with an appropriate drift.

526249 FITTING THE MOUNT ON THE BEVEL PINION


Figure 31

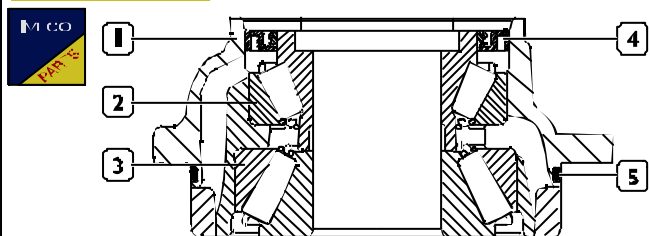

72766

The bevel pinion mount (1) is supplied as a spare together with the tapered roller bearings (2 and 3) and the seals (4 and 5).


Figure 32

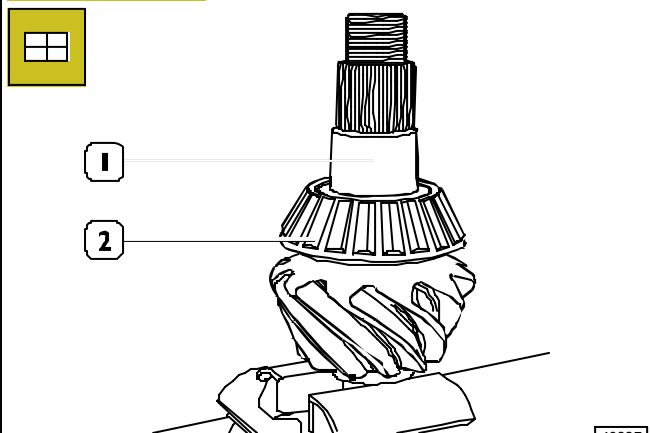

49237

Heat the bearing (2) to a temperature of 100°C for 15 min. in an air circulation oven and mount it on the bevel pinion (1).


Figure 33

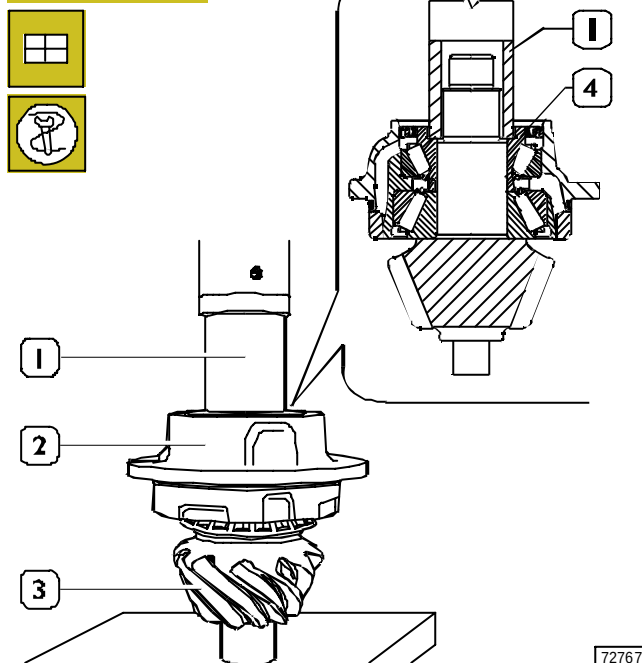

72767

Using a press and a suitable tube (1) positioned on the inner ring of the roller bearing (4), fit the mount (2) on the bevel pinion (3).

Figure 34

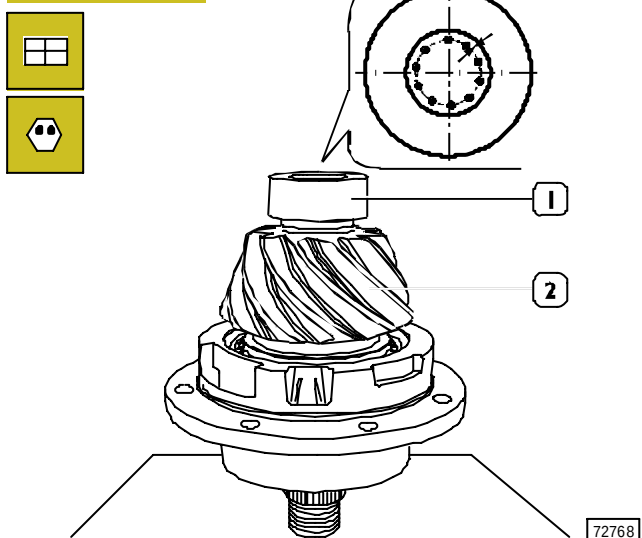

72768

Heat the bearing (1) to a temperature of 100°C for 15 min. in an air circulation oven and mount it on the bevel pinion (2).


Lock the bearing by notching the bevel pinion at 10 equidistant points as shown in the figure. This should be done conscientiously with a suitable punch.



The diameter of the impression has to be between 3.40 – 4.10 mm, corresponding to a depth of 0.30 – 0.44 mm respectively, using a load of 4000 kg with a ball with a 10 mm diameter.

Aquila Trucks Centres


Figure 35

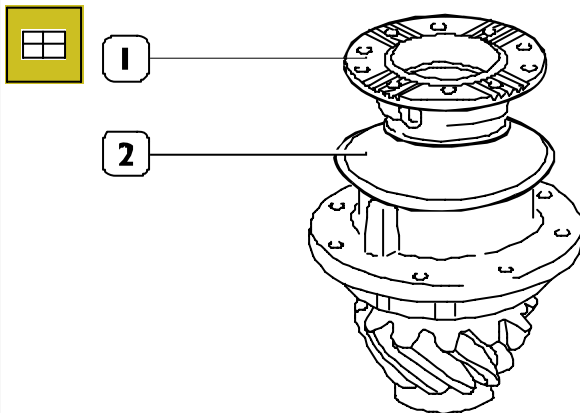

49239

Place the transmission fitting flange (1), complete with baffle (2), and fit it using a suitable beater. The use of a vice is recommended. Temporarily tighten the lock nut.

Figure 36

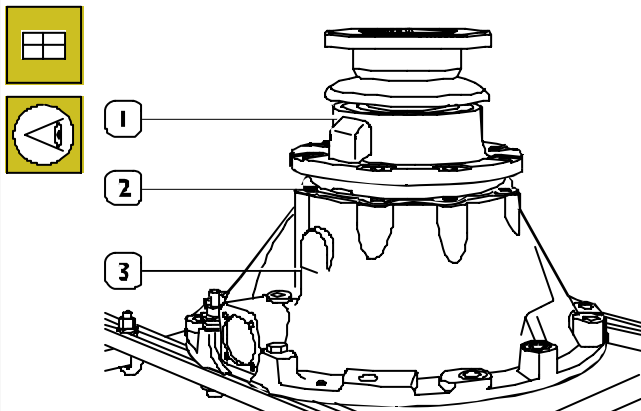


49240

If the same pinion-crown wheel unit previously removed is reinstalled, fit the relative adjusting shims (2) and bevel pinion support with the seal ring (O-ring) (1) to the differential carrier (3). Make sure the lubrication oil slot is properly aligned.

NOTE Replace the seal ring (O-ring) in the event that it is damaged, to avoid oil leaks through the shims.

Figure 37

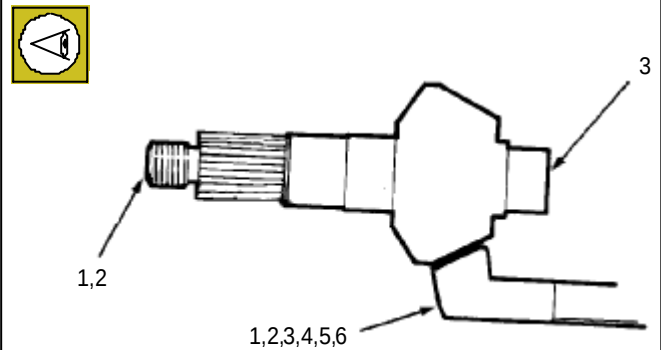

19416

Before assembling a new pinion-crown wheel unit, it is mandatory to understand the meaning of the marks stamped on both pinion and crown wheel, in order to find out the proper pinion position.

1. Part number
2. Tooth play number
3. Pinion-crown wheel unit coupling number
4. Adjustment number, to define the thickness of the shims to be fitted between pinion support and differential housing (this number is called CP in the following examples)
5. Pinion-crown wheel unit date of manufacturing and testing (month and year)
6. Pinion-crown wheel unit rated backlash.

Part and tooth play numbers are marked on the pinion threaded end.

On crown wheels, the same numbers are generally marked on the front face.

As an alternative, they may be found on the crown wheel outer diameter.

For any pinion-crown wheel unit, the crown wheel part number shall always be even (for instance, 36786), whereas the corresponding pinion part number shall be odd (for instance, 36787).

The tooth play number (for example, 10-41) means the pinion features 10 teeth and crown wheel 41, corresponding to 4.10 : 1 transmission ratio.

NOTE Never use pinion-crown wheel units bearing different numbers.

Aquila Trucks Centres

Each crown wheel has an adjustment number specifying the rated mounting clearance.

Use this number to calculate the thickness of the adjusting shims to be fitted between pinion support and differential housing.

This number (for example, C.P. +0.1, or C.P. -0.1 mm), is stamped on the crown wheel outer diameter.

To calculate the thickness of the adjusting shims to be fitted between pinion support and differential housing, proceed as follows:

1. Measure the thickness of the shims fitted on the pinion-crown wheel unit to be replaced. Use a micrometer or gauge and note the measurement.
2. Read the C.P. stamped on the crown wheel to be replaced. If positive (+), subtract this number from the previously taken measurement (see "1"). If the number represents a negative value (-) add it to the measurement taken (see "1").

Note the result.

NOTE The measurement obtained at "2" shall be used to calculate the thickness of the adjusting shims to be fitted between pinion support and differential housing, in relation to the new pinion-crown wheel unit to be installed.

3. Read the C.P. stamped on the new crown wheel. Add or subtract this value (add if +, subtract if -) to/from the previously taken measurement (see item "2").

The obtained value indicates the thickness of the new shims to be fitted.

Refer to the following examples, covering all possible combinations.

Examples of calculation

Example 1:

Original shim thickness	mm 0.75
Crown wheel C.P. + 0.05	- 0.05
Result	mm 0.70
New crown wheel C.P. + 0.10	+ 0.10
New shim thickness to be used	mm 0.80

Example 2:

Original shim thickness	mm 0.65
Crown wheel C.P. - 0.05	+ 0.05
Result	mm 0.70
New crown wheel C.P. + 0.15	+ 0.15
New shim thickness to be used	mm 0.85

Example 3:

Original shim thickness	mm 0.70
Crown wheel C.P. + 0.05	- 0.05
Result	mm 0.65
New crown wheel C.P. - 0.05	- 0.05
New shim thickness to be used	mm 0.60

Example 4:


Original shim thickness	mm 0.85
Crown wheel C.P. - 0.10	+ 0.10
Result	mm 0.70
New crown wheel C.P. - 0.15	- 0.15
New shim thickness to be used	mm 0.80

NOTE Spare parts shims, to be fitted between pinion support and differential housing, are provided with the following thickness: 0.125 - 0.200 - 0.500 mm.

A number, specifying the rated backlash between pinion and crown wheel after manufacturing, is stamped on all units. This number is found on the crown wheel outer diameter.

Reassembling the differential carrier

Figure 38

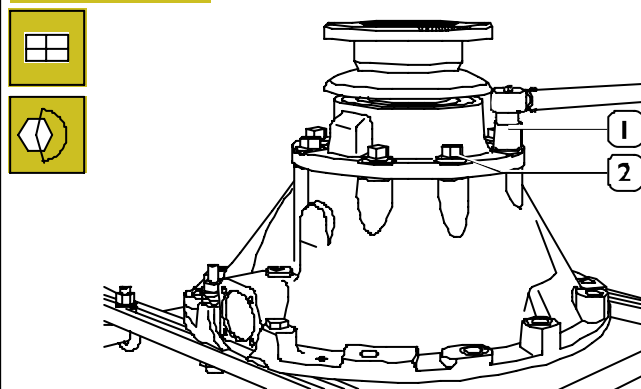


49241

Insert the screws (2) and tighten to the prescribed torque, using a torque wrench (1).

- 1st step: tighten using the torque wrench (1) to a torque of 100 Nm (10 kgm);
- 2nd step: tighten the screw (2) using tool 9935216 with an angle of $60^\circ \div 70^\circ$.

Aquila Trucks Centres

Figure 39

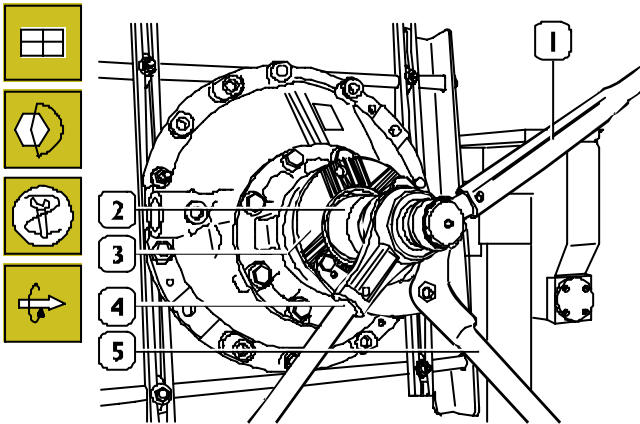


49242

Turn the unit by 90°.

Using tool 99370317 (5), lock the flange (3). Using wrench 99355088 (2), multiplier (4) and torque wrench (1), tighten the pinion lock nut to the prescribed torque (1350 to 1370 Nm). Place the caps, making sure reference tabs match. Tighten the screws, complete with washers, to the prescribed torque by means of a torque wrench.

NOTE Check that the multiplication factor of the multiplier (4) is correct.

Figure 40

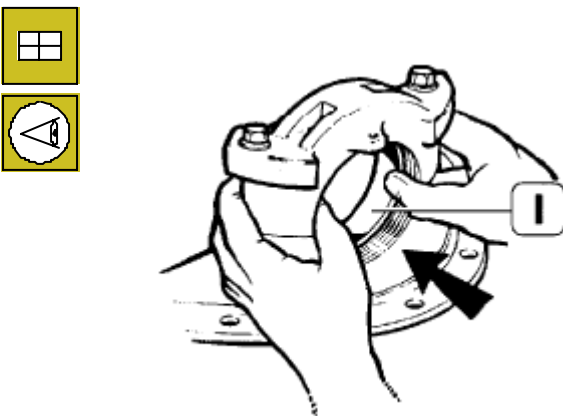


20670

Then, slightly push the bearing outer rings (1), to make sure they slide smoothly within their housings.

Remove the screws, complete with washers, and caps.

Figure 41

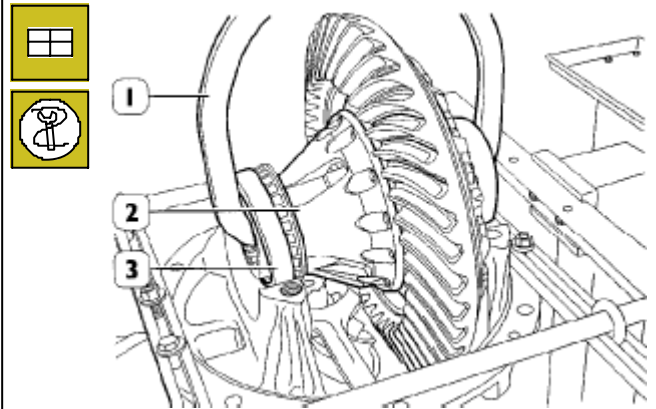


49225

Position the external rings (3) of the bearings

Using hook 99370509 (1), lift the previously assembled gearcase (2) and place it onto the differential housing.


Figure 42

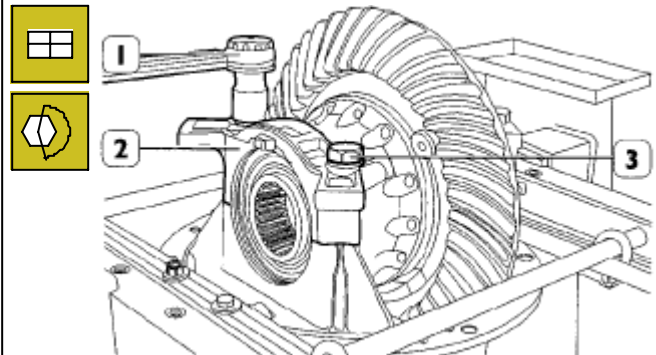

49244

Position the caps (2), suitably settle them using a hammer and insert the screws (3), complete with washers. Tighten the screws to the prescribed torque, using a torque wrench (1).

Figure 43

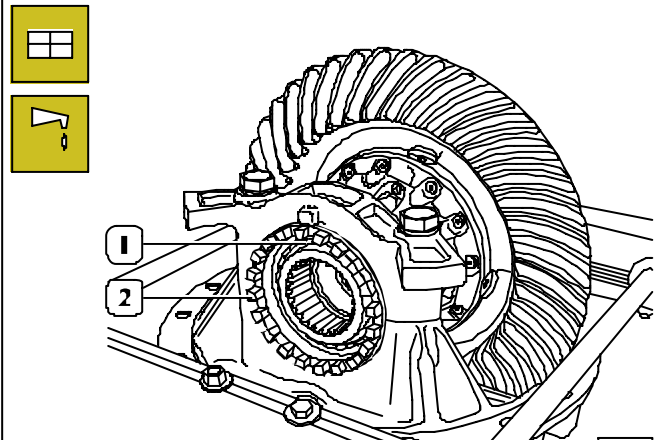

49245

Lubricate the conical roller bearings (1), manually tighten the ring nuts (2) until they touch the external bearing rings; tighten the screws (3, Figure 42) to the prescribed torque.

Aquila Trucks Centres


ADJUSTING THE CAP GAP

Adjusting and checking retraction of the caps can be done with two methods:

1st METHOD

1. Use wrench 99355025 (3, Figure 45) to tighten the adjustment lock rings (4) of the bearings until eliminating the pinion-crown wheel clearance and end float. At the same time check that the crown wheel does not force on the pinion;
2. using a suitable micrometer positioned diagonally and centrally in points (X-Y-arrows, Figure 44); measure and note the distance of the caps;

Figure 44

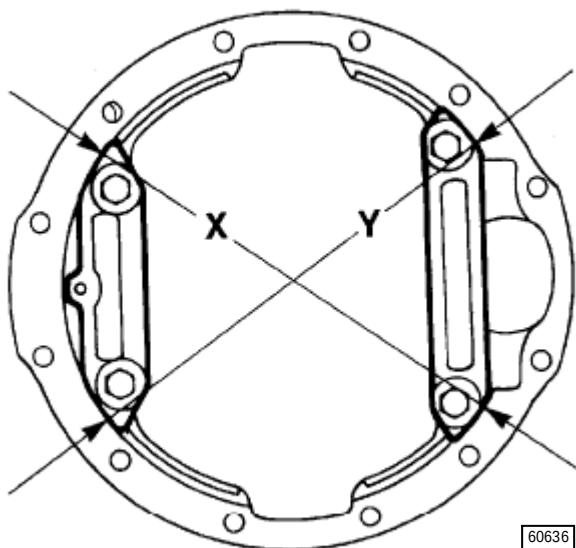


3. further tighten the two adjustment lock rings (4, Figure 45) to obtain a retraction of the caps (2, Figure 45), measured on Axis X or on axis Y as described in point "2" of: 0.15 to 0.33 mm which corresponds to a preload on the bearings of 1.7 to 3.9 Nm (0.17 to 0.39 kgm).

2nd METHOD

- A. Diagonally and centrally on the outer machined seats of both caps (2, Figure 45) position two dial gauges (1) with magnetic stand as shown in Figure 45;


Figure 45

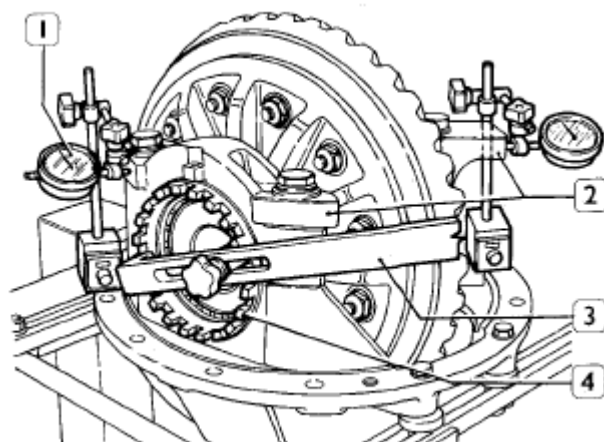

- B. proceed as described in point "1";
- C. after eliminating the end float further tighten the two adjustment lock rings (4) to obtain a retraction of the caps (2) of 0.15 to 0.33 mm, which corresponds to the sum of the readings on the dial gauges (1).

Aquila Trucks Centres

Figure 46

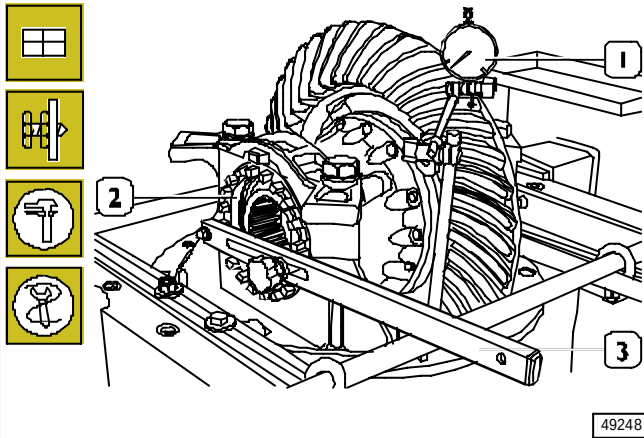


Adjust the axial clearance between the teeth of the pinion - crown wheel unit which must be 0.26 to 0.50 mm proceeding as follows:

- stop the bevel pinion from turning using tool 99370317;
- position the magnetic-based dial gauge (1) as illustrated;
- using wrench 99355025 (3) slacken the adjustment lock ring on the crown wheel side and tighten, to the same extent, the adjustment lock ring (2) of the opposite side. The purpose of this is to leave the previously-adjusted cap retraction unchanged;
- proceed as described until obtaining the specified clearance.

The clearance should be checked on 4 points the same distance apart.


Figure 47

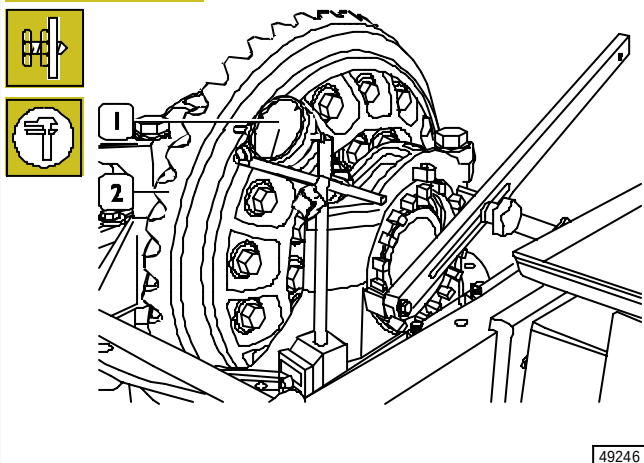

Use a magnetic-based dial gauge (1) to check that the crown wheel (2) does not have any upper wobble above 0.20 mm. If it does, disassemble the differential unit and find the cause.

Refit and repeat the adjustment operations described previously.

Figure 48

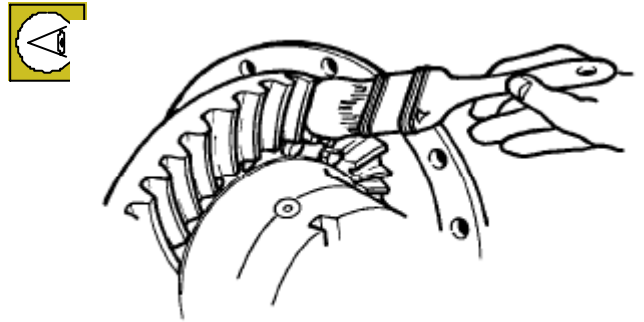

Apply a light layer of Prussian blue on the crown wheel. Turn the pinion and measure the impression of the contact of the pinion teeth on the crown wheel teeth. The following figures show possible contacts and how to correct any errors.

Aquila Trucks Centres

Figure 49



19452

Contacts too much on crown wheel teeth bottom land

Conditions C-D. Indicates that the pinion is fastened too deeply and needs further adjustment.

To adjust the exact position of the pinion shims should be added under the pinion support to obtain the exact contact.

Condition C. Measure the clearance and restore it after adding shims.

Condition D. After adding shims, take the clearance towards minimum.

Figure 50



19453



Contacts too much towards the crown wheel teeth top land

Conditions A-B. Indicates that the pinion is fastened too much towards the outside and therefore needs further adjustment. To adjust the exact position of the pinion, remove shims under the pinion support to obtain the exact contact.

Condition A. After removing the shims, take the clearance towards maximum.

Condition B. Measure the clearance and restore it after removing shims.

 Figure 51

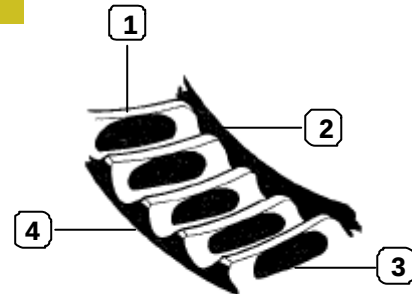

Clearance increase

19454

THEROETICAL CONTACT AREA

1. Release, concave side of tooth
2. Top land
3. Pulling, convex side of tooth
4. Heel

PULLING. Central tending towards the top land on the tooth face and central on the tooth profile.

RELEASE. Central tending to the heel on the tooth face and central on the tooth profile.

Indicates that the pinion is fastened correctly.

The contact position can be further changed by changing the pinion-crown wheel clearance.



Condition E. Lower the clearance.

Condition F. Increase the clearance.



Aquila Trucks Centres

CORRECTING THE CROWN WHEEL AND PINION CONTACTS (AFTER ASSEMBLY)

Figure 52

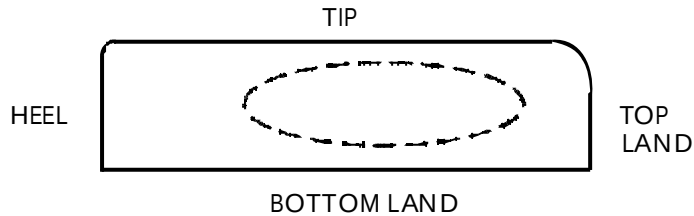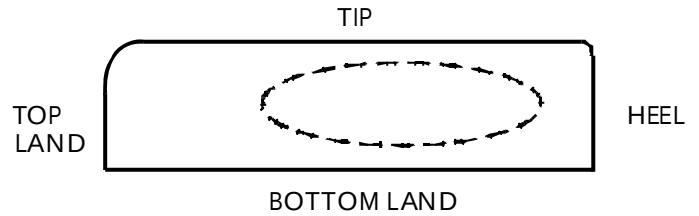THEORETICAL CONTACTS**PULLING
(CONVEX SIDE OF RING GEAR)****RELEASE
(CONCAVE SIDE OF RING GEAR)**


- PULLING : CENTRAL TENDING TOWARDS THE TOP LAND ON THE TOOTH FACE AND CENTRAL ON THE TOOTH PROFILE
- RELEASE : CENTRAL TENDING TOWARDS THE HEEL ON THE TOOTH FACE AND CENTRAL ON THE TOOTH PROFILE

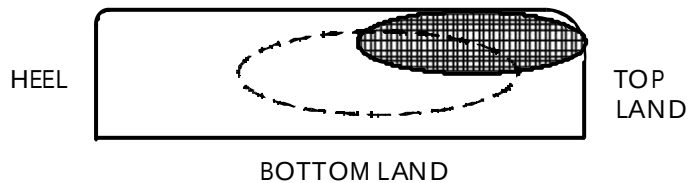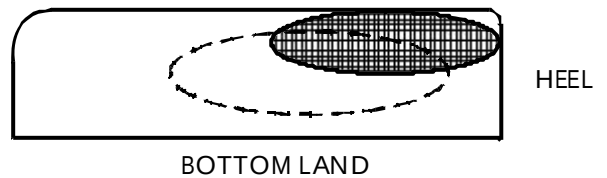CONDITION "A"**PULLING
TIP****RELEASE
TIP**


- PULLING RELEASE : CONTACTS TOO MUCH AT TIP
- PULLING : CONTACT TOO MUCH AT TOP LAND
- RELEASE : CONTACT TOO MUCH AT HEEL
- CORRECTIVE ACTION : REMOVE SHIMS AND INCREASE CLEARANCE TO MAXIMUM

CONDITION "B"

TIP

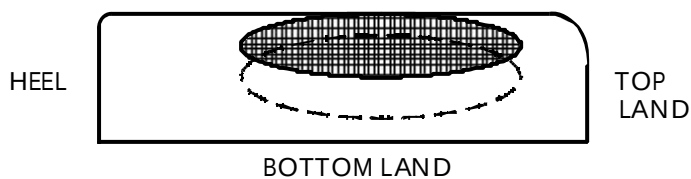


TIP

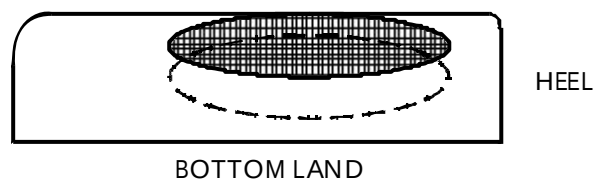


- PULLING - RELEASE : CONTACTS TOO MUCH AT TIP
- CORRECTIVE ACTION : MEASURE THE CLEARANCE AND RESTORE THE CLEARANCE

CONDITION "C"

TIP

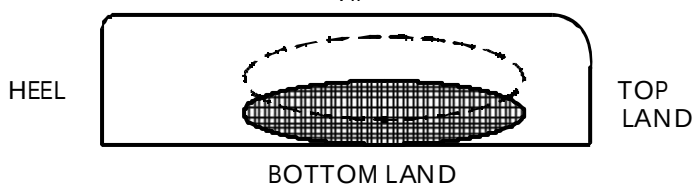

TIP

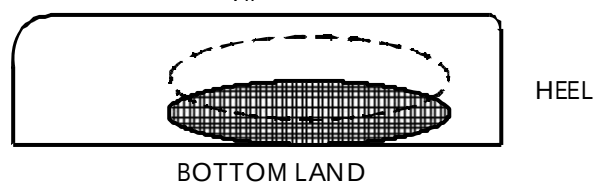


- PULLING - RELEASE : CONTACTS TOO MUCH ON BOTTOM LAND
- CORRECTIVE ACTION : MEASURE THE CLEARANCE, ADD SHIMS AND RESTORE CLEARANCE


60676

Aquila Trucks Centres


Figure 53

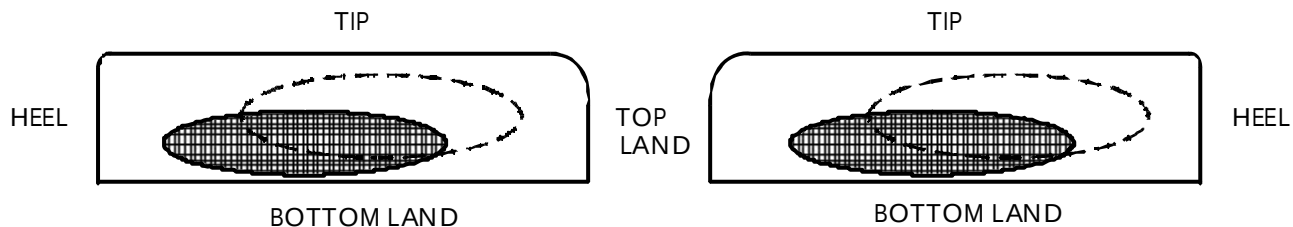CONDITION "D"

- PULLING - RELEASE : CONTACTS TOO MUCH ON BOTTOM LAND
- PULLING: : CONTACT TOO MUCH AT HEEL
- RELEASE : CONTACT TOO MUCH AT TOP LAND
- CORRECTIVE ACTION : ADD SHIMS AND REDUCE CLEARANCE TO MINIMUM

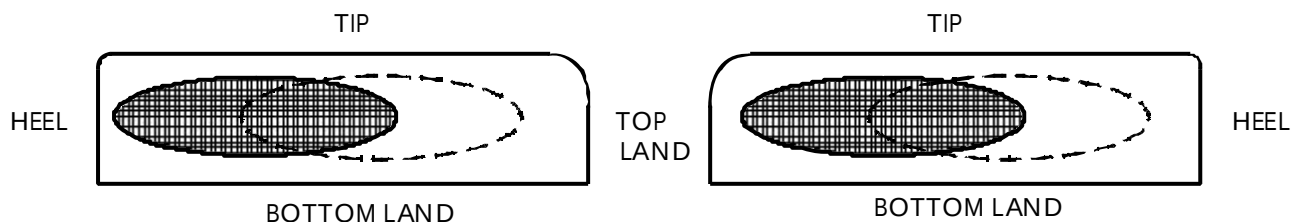CONDITION "E"

- PULLING : CONTACT TOO MUCH AT HEEL
- RELEASE : CONTACT TOO MUCH AT TOP LAND
- CORRECTIVE ACTION : REDUCE CLEARANCE

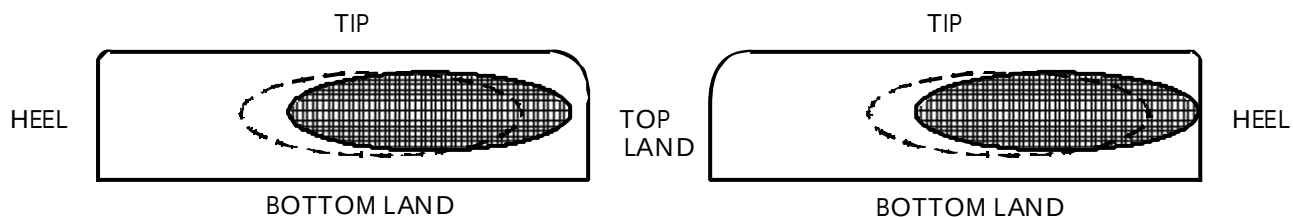
CONDITION "F"

- PULLING : CONTACT TOO MUCH AT TOP LAND
- RELEASE : CONTACT TOO MUCH AT HEEL
- CORRECTIVE ACTION : INCREASE CLEARANCE

60677

Aquila Trucks Centres


Figure 54

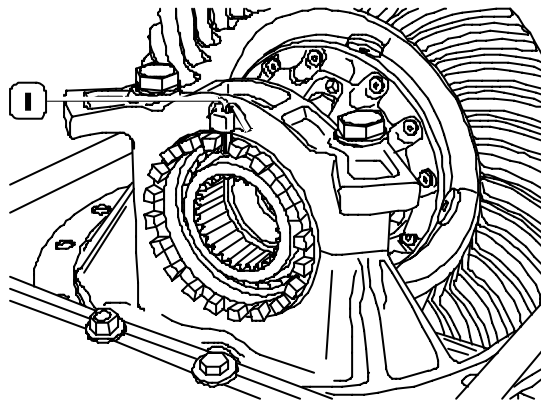

49249

Replace the safety split pin (1) and fold it; repeat this operation on the opposite side.

Figure 55

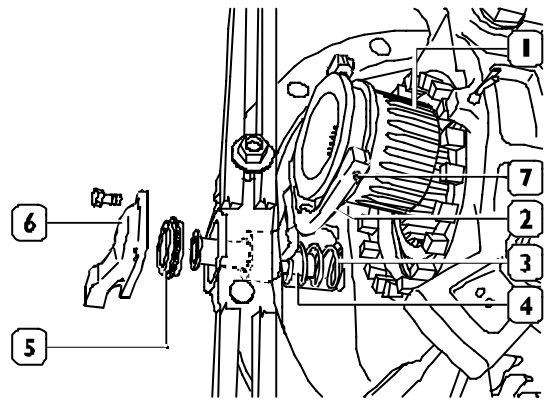

49250

Place the pin (4) into its housing.

Fit the fork (2) and spring (3) to the pin (4) and push it in all the way. Fit the piston (5), complete with ring and cover (6), then fit the sliding sleeve (1) and spring plugs (7).


Aquila Trucks Centres

WORK ON THE VEHICLE

REPLACING THE BEVEL PINION MOUNT SEAL

Disassembly


Figure 56

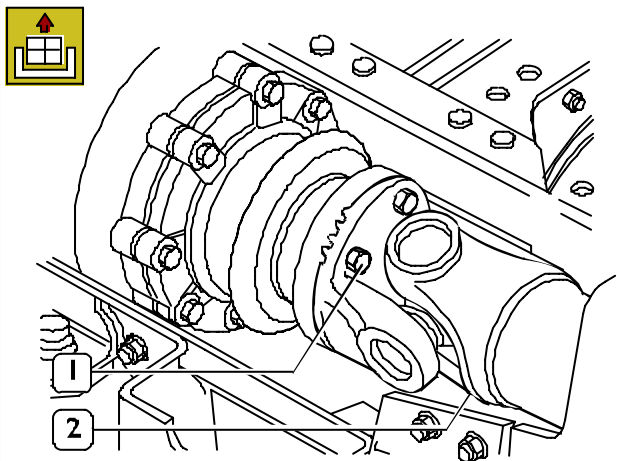

61481

Slacken the nuts (1) fastening the flange. Disconnect the transmission shaft (2), fastening it to the frame.


Figure 57

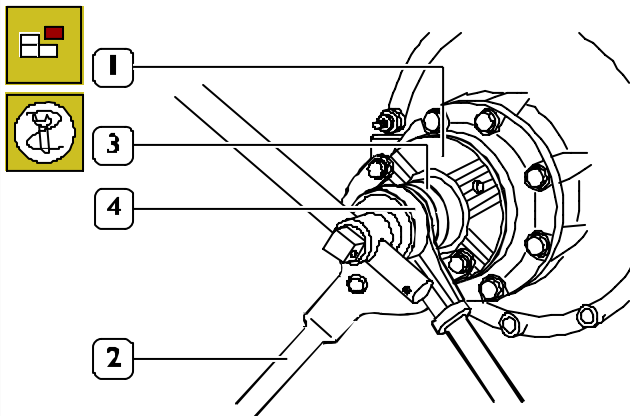

61482

Prevent the flange (1) from turning using retainer tool 99370317 (2). Using wrench 99355088 (3) and the multiplier (4) slacken the nut for the bevel pinion and withdraw the flange (4).


Figure 58

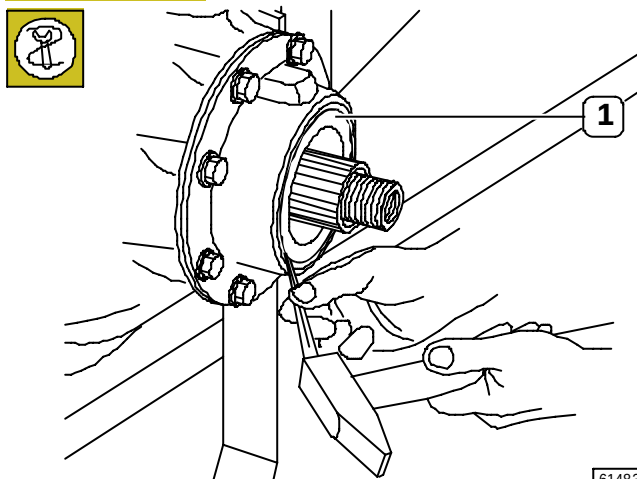

61483

Using a suitable tool raise the outer edge of the ring (1) in two opposed points

Figure 59

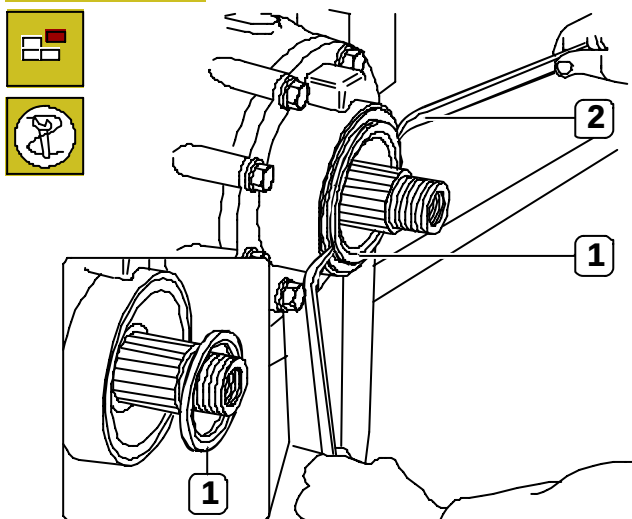


61484

Using the two levers (2) remove the inner ring (1).

Aquila Trucks Centres

Figure 60

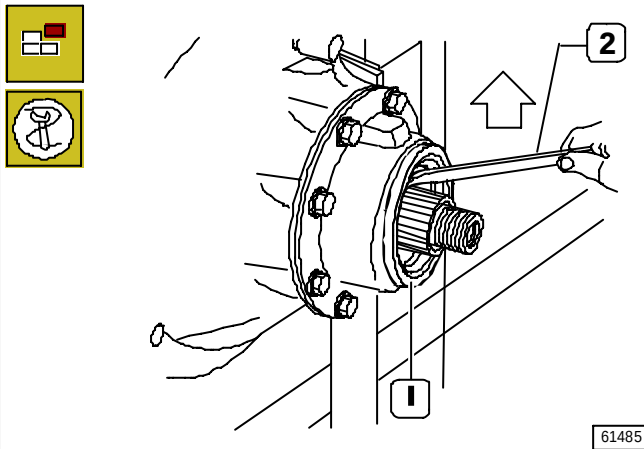


With tool 99363204 (2) positioned as shown in the figure, remove the seal (1) from the bevel pinion mount.

Assembly

Thoroughly clean the seat of the seal of all debris and traces of oil.

Figure 61

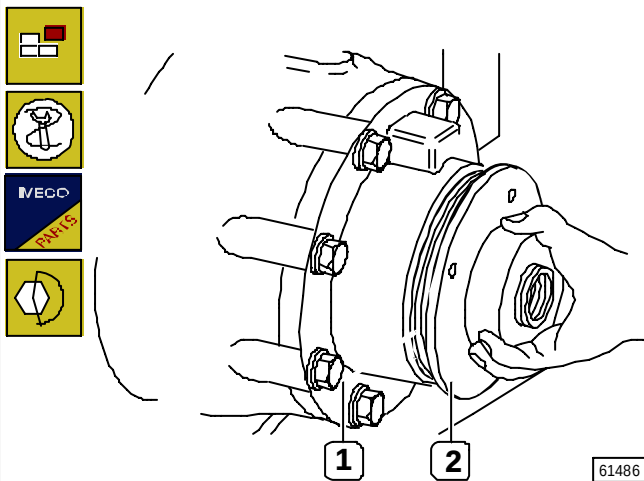

Position the new seal (1).

Apply the keying device 99374244 (2), screw a manoeuvring nut onto the bevel pinion and mount the seal down to the stop.

Unscrew the manoeuvring nut, take out the keying device 99374244 (2), fit the flange back on and screw down a new nut, locking it with a torque wrench and multiplier to the required torque.

Fit the propeller shaft back on and tighten the fixing nuts to the required torque.

Aquila Trucks Centres

Aquila Trucks Centres

SECTION 9	
5250 Front axles	
	Page
FRONT AXLE 5886/D	3-24
WHEEL ALIGNMENT	25-34

Aquila Trucks Centres

Aquila Trucks Centres

Front axle 5886/D

	Page
DESCRIPTION	5
- Front axle	5
MAIN DATA	6
TROUBLESHOOTING	8
TIGHTENING TORQUES	9
TOOLS	10
REMOVING AND REFITTING THE AXLE	14
- Removal	14
- Refitting in place	15
VEHICLE CHECKS	16
- Ball joints	16
- Tie rods	16
TRACK ROD AND DRAG LINK BALL JOINTS SLACK CHECK	16
FRONT AXLE ASSEMBLY OVERHAUL	17
REMOVING - REFITTING WHEEL HUBS	17
- Removal	17
- Refitting wheel hubs	18
REMOVING AND REFITTING IN PLACE THE TRACK ROD	18
REPLACING TRANSVERSE TIE ROD BALL JOINTS	19
REMOVING AND REFITTING LEVER FOR TRANSVERSE TIE ROD	19
REMOVING AND REFITTING LEVER FOR LONGITUDINAL TIE ROD	19
REMOVING AND REFITTING PIN FOR STUB AXLE	19
- Removal	19
- Replacing kingpin bearing	20

Aquila Trucks Centres

Page

- Refitting	21
- Stub axle-axle end play check and adjustment .	22
AXLE BODY CHECKS AND MEASUREMENTS . .	22
- Checking leaf spring supporting surface levelness with reference to kingpin holes using proper equipment	22
- Kingpin seats camber angle check	24

Aquila Trucks Centres


DESCRIPTION

Front axle

The front axle is a steel structure with a double-T cross-section at the end of which the stub axles are articulated. The stub axle articulation is made with tapered pins integral with the axle body and by means of four bearings with rollers driven in with interference in the holes of the stub axle overhangs.

The wheel hubs are supported by two tapered roller bearings, set right lubricated with oil, mounted on the shank of the stub axle and adjustable with the threaded ring nut. The brake is the Knorr-type disc.

Figure 1






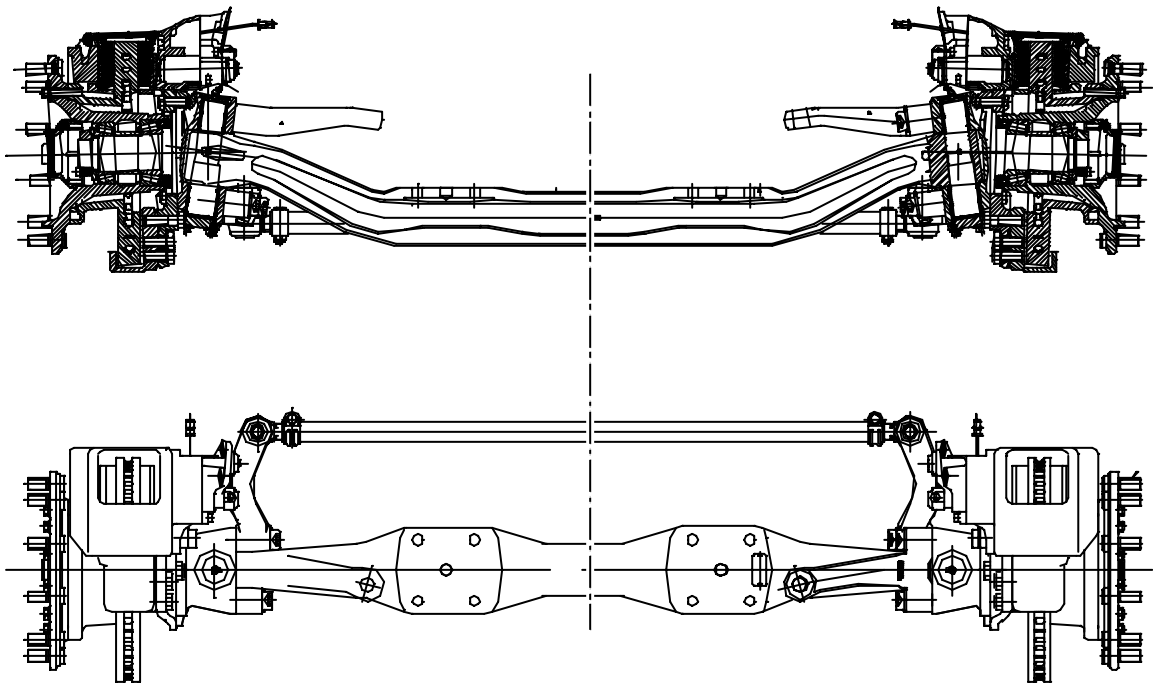


71571









FRONT AXLE 5886/D

Aquila Trucks Centres

MAIN DATA

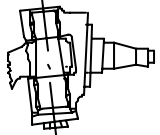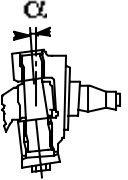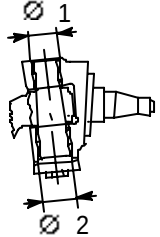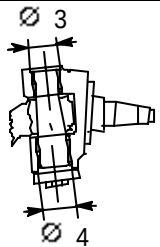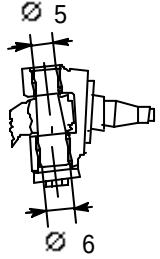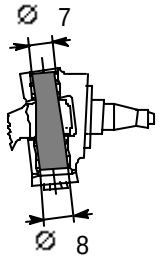	Type of axle	5886/D	
	KINGPINS		
	Angle of seats for kingpin	7°	
	Diameter of roller bearing seats on the stub axle: - top seat Ø 1 - bottom seat Ø 2	mm mm	51.967 ÷ 51.986 59.967 ÷ 59.986
	Outside diameter of roller bearings for stub axle: - top bearings Ø 3 - bottom bearings Ø 4	mm mm	52 60
	Stub axle bearings	mm	0.014 ÷ 0.033
	Inside diameter of roller bearings for stub axle: - top bearings Ø 5 - bottom bearings Ø 6	mm mm	43 53
	Diameter of pin for stub axle - top Ø 7 - bottom Ø 8	mm mm	42.984 ÷ 43.000 52.981 ÷ 53.000
	Top bearings - pin	mm	0 ÷ 0.016
	Bottom bearings - pin	mm	0 ÷ 0.019

     Aquila Trucks Centres

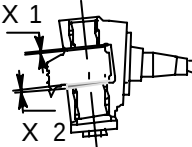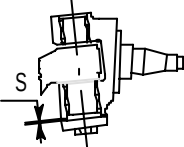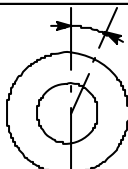		5886/D	
	Backlash between axle and stub axle upper shim X 1	mm	0.10 ÷ 0.35
	Clearance between axle and stub axle lower shim X 2	mm	0.25
		Adjustment shims X1 ; X2	
		mm	0.25 ÷ 1.75
		WHEEL HUBS	
		Wheel hub bearings	
		mm	max 0.16
		Wheel hubs backlash	
		daNm	0.50 max.
		Oil for wheel hub bearings	
Amount for each hub litres (kg)		Tutela W 140/M DA	
0.33 (0.35)			
		WHEEL ALIGNMENT	
		Wheel camber angle (unloaded vehicle)	
		1°	
		Wheel caster angle (unloaded vehicle)	
		4x2 6x4 Models	8x4x4
		2° 30'	1st axle 2° 30'
			2nd axle 2° 30'
		4x2 6x4 Models	8x4x4
Wheel toe-in (unloaded vehicle) mm		1	0
Adjustment tolerance mm		± 0.75	± 0.75
Check tolerance mm		± 2	± 2
Axle weight kg		-	
Maximum capacity (GRW) kg		9000	

Aquila Trucks Centres

TROUBLESHOOTING


Main operating faults of a mechanical nature

Visible Failure	Possible cause	Repair action
Hard steering	Front axle badly aligned.	Restore alignment and tighten leaf spring bracket nuts to correct torque.
	Irregular toe-in.	Make accurate toe-in adjustment on front wheels.
	Uneven tyre pressure	Inflate tyres to prescribed pressure.
	Insufficient lubrication in joints.	Carefully lubricate the joints.
	Wrong stub axle-axle adjustment.	Make an accurate adjustment of the stub axis-axis end play.
	Stub axle elements for rotation on pin are inefficient.	Check and replace strained parts.
Wobbling	Uneven wheel camber	Check axle mounting, repair or replace the strained parts.
	Front axis not aligned.	Restore alignment and tighten leaf spring bracket nuts to specified torque.
	Uneven toe-in.	Adjust toe-in.
	Steering rod kingpins inefficient.	Replace strained parts.
	Irregular backlash on wheel hub bearings.	Adjust end play after making necessary replacements.
	Wheels are eccentric: trued rim, strained tyre badly fitted on rim.	Replace faulty rim Deflate and centre tyre on rim.
	Unbalanced wheels.	Balance the wheels.
Noise	Wheel hub bearings insufficiently lubricated.	Top up oil level in wheel hubs.
	Wheel hub bearings are worn.	Replace faulty bearings and adjust end play.
	Too much slack between stub axle and needle bearings.	Check and replace worn parts.

Aquila Trucks Centres

TIGHTENING TORQUES

Figure 2

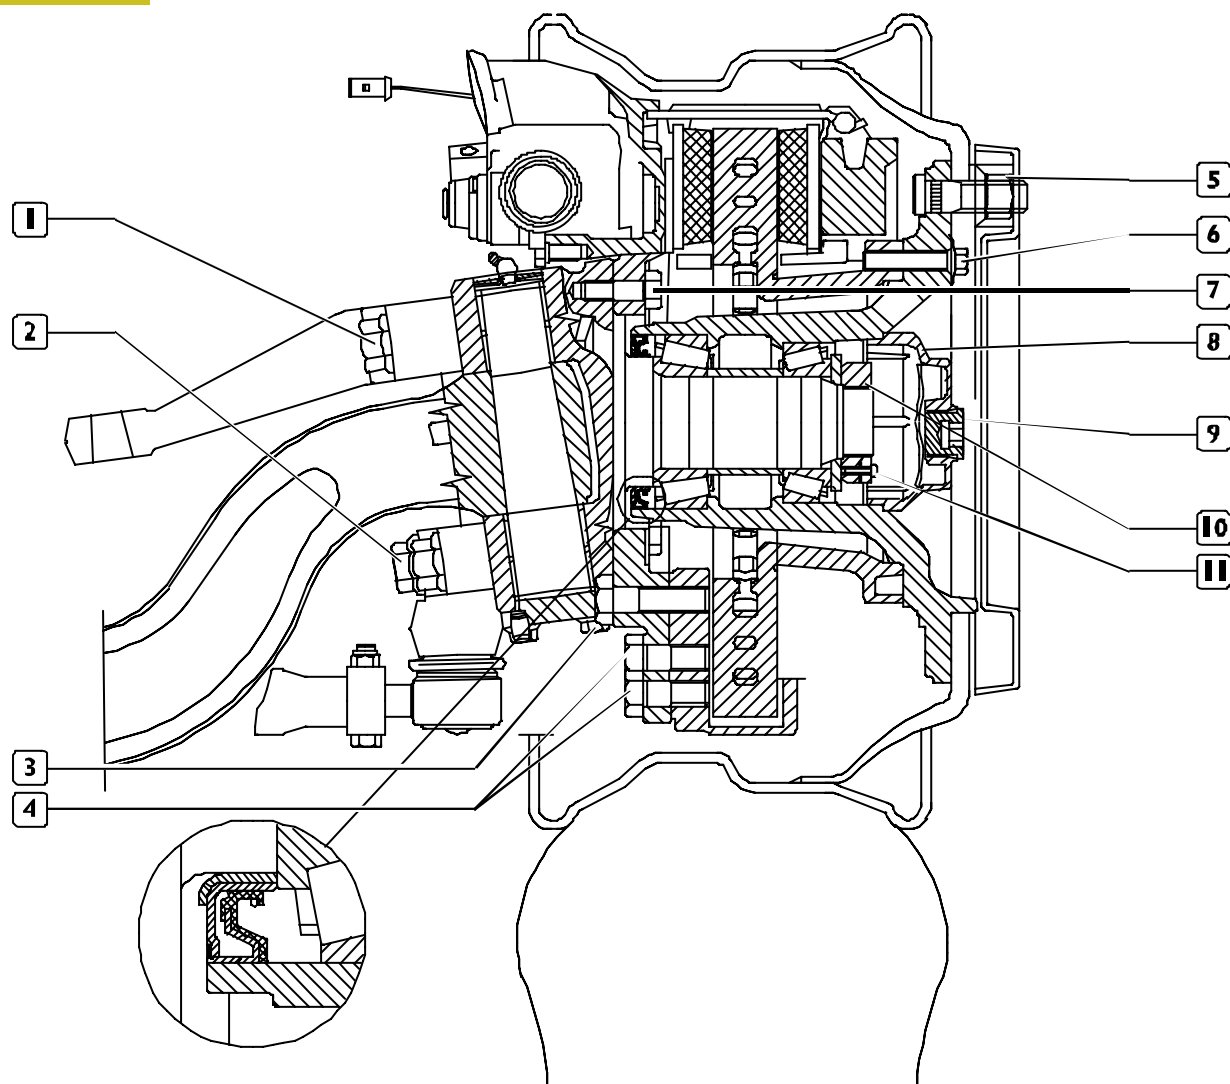

98981

CROSS-SECTION OF FRONT AXLE - WHEEL SIDE





DESCRIPTION	TORQUE	
	Nm	(kgm)
1 Flanged screw to secure cross tie bar lever on steering knuckle	1400 ÷ 1250	(140 ÷ 125)
2 Flanged screw to secure side lever on steering knuckle	1400 ÷ 1250	(140 ÷ 125)
3 Lower thrust bearing flanged hexagonal screw on steering knuckle	111 ÷ 123	(11.1 ÷ 12.3)
4 Self-locking hex screw M20x1.5 fixing brake callipers	554 ÷ 677	(55.4 ÷ 67.7)
5 Nut fixing wheels	565 ÷ 690	(56.5 ÷ 69)
6 Hex screw fixing brake disc to wheel hub	268 ÷ 295	(26.8 ÷ 29.5)
7 Self-locking hex screw M16x1.5 fixing brake calliper mount to stub axle	298 ÷ 329	(29.8 ÷ 32.9)
8 Cover for wheel hub *	120 ÷ 140	(12 ÷ 14)
9 Conical threaded plug for wheel hub	55 ÷ 60	(5.5 ÷ 6)
10 Ring nut fixing wheel bearing	490 ÷ 540	(49 ÷ 54)
11 Cylindrical screw with recessed hex locking ring nut	25 ÷ 30	(2.5 ÷ 3)
- Notched nut for steering knuckle pin	300*	30*
- Collar nut fixing brackets fixing leaf spring to axle	410 ÷ 510	(41 ÷ 51)

D Apply LOCTITE 574 on cover/wheel hub contact surface






* Minimum torque - Maximum torque, tighten up to first notch matching to split pin hole

Aquila Trucks Centres






TOOLS

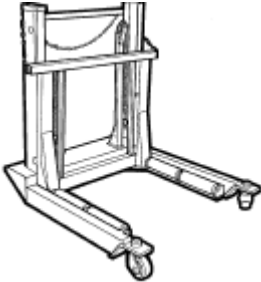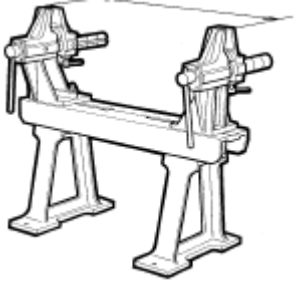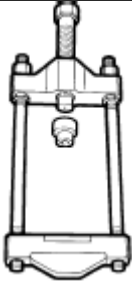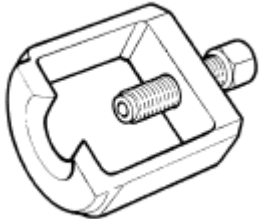TOOL NO.	DESIGNATION
99305354 	Wheel geometry portable optical testing equipment
99321024 	Hydraulic truck to remove and re-fit in place the wheels
99322215 	Stand for axle testing
99347047 	Puller for stub axle pin
99347068 	Puller for drag link kingpins
99354207 	Wrench for wheel hub cup

Aquila Trucks Centres

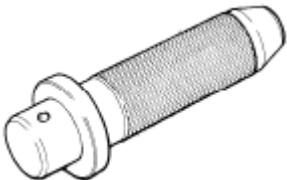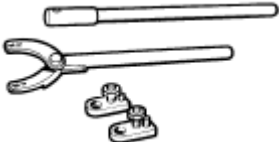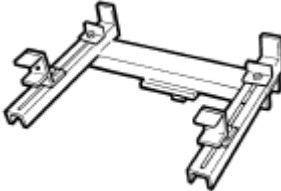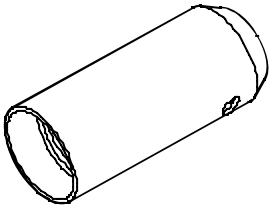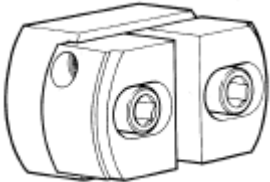TOOL NO.	DESIGNATION	
99370006		Handle for interchangeable beaters
99370007		Handle for interchangeable beaters
99370317		Lever and relevant extension bar
99370628		Stand for axle removal and installation
99370715		Guide for wheel hub assembly
99374093		Beater to fit in place bearing outer tracks (to be used with 99370007)

Aquila Trucks Centres

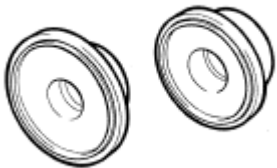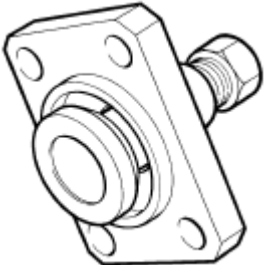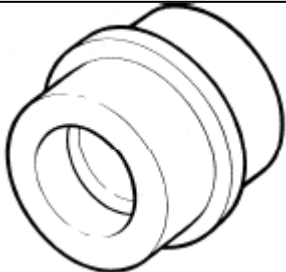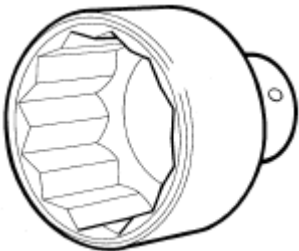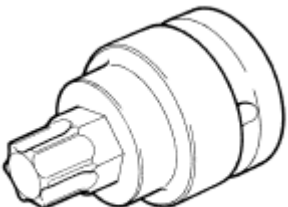TOOL NO.	DESIGNATION	
99374132		Tool for fitting wheel hub internal gasket (to be used with 99370006)
99374173		Elements to fit in place kingpin gasket (to be used with 99370007)
99374405		Tool to fit kingpin
99374530		Beater to remove/re-fit in place kingpin bearing (to be used with 99370007)
99388001		Wrench (80 mm) for wheel hub bearing adjustment ring nut
99388002		Wrench for screws to secure cross and side tie bar lever to steering knuckle


Aquila Trucks Centres

TOOL NO.	DESIGNATION
99389819	 Torque wrench (0 - 10) with square 1/4" connection
99395026	 Tool for testing hubs rolling torque (to be used with 99389819)

Aquila Trucks Centres

520610 REMOVING AND REFITTING THE AXLE**Removal**

Figure 3

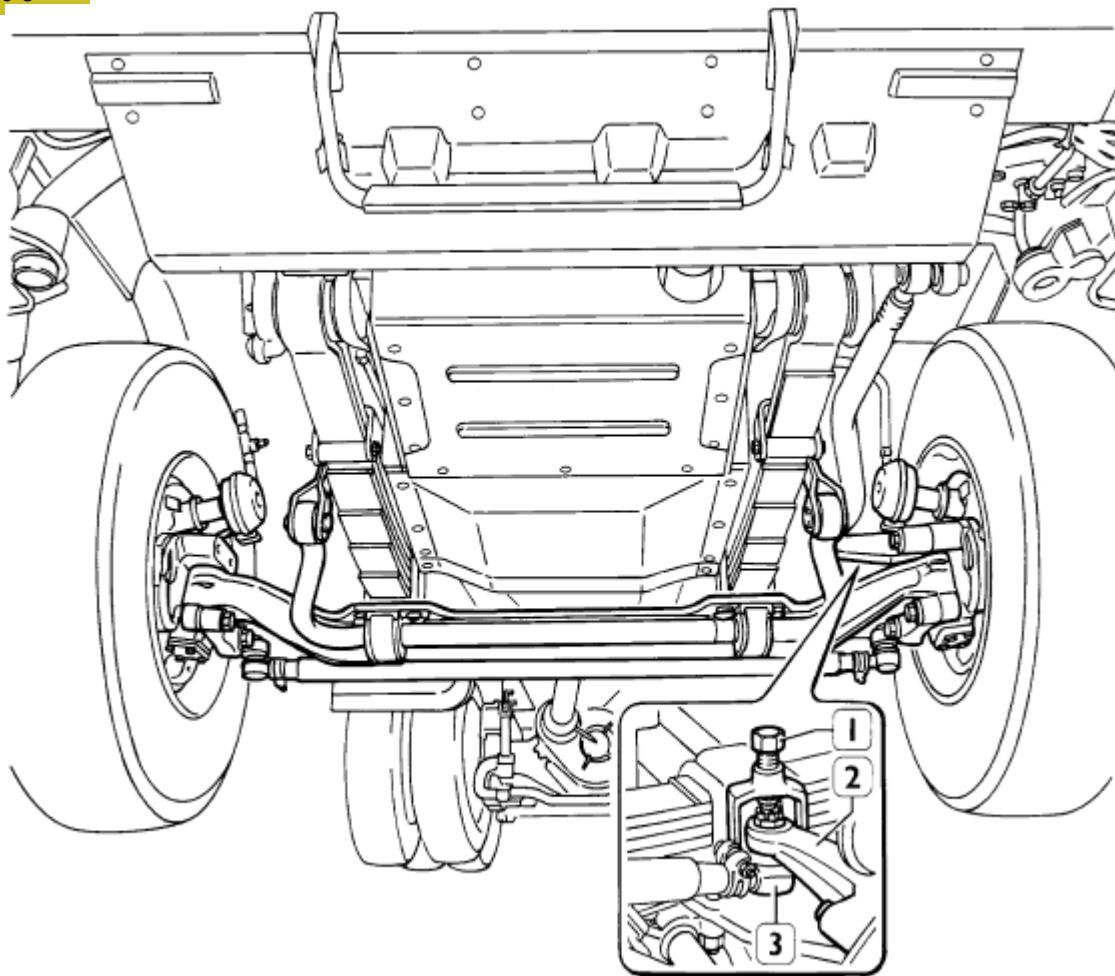

40450

Place the vehicle on flat ground and lock the rear wheels. Loosen the front wheel fastening nuts. Using a hydraulic jack lift the front of the vehicle and rest it on two stands. Take out the wheel nuts and remove the wheels with hydraulic truck 99321024.


Using puller 99347068 (1) remove the tie-rod (3) king pin on the arm (2)

Disconnect:

- Air delivery hoses from brake diaphragm cylinders;
- ABS transmitter electric cable;
- Brake linings wear indicator cable if the vehicle is equipped with this device.

Aquila Trucks Centres

Figure 4

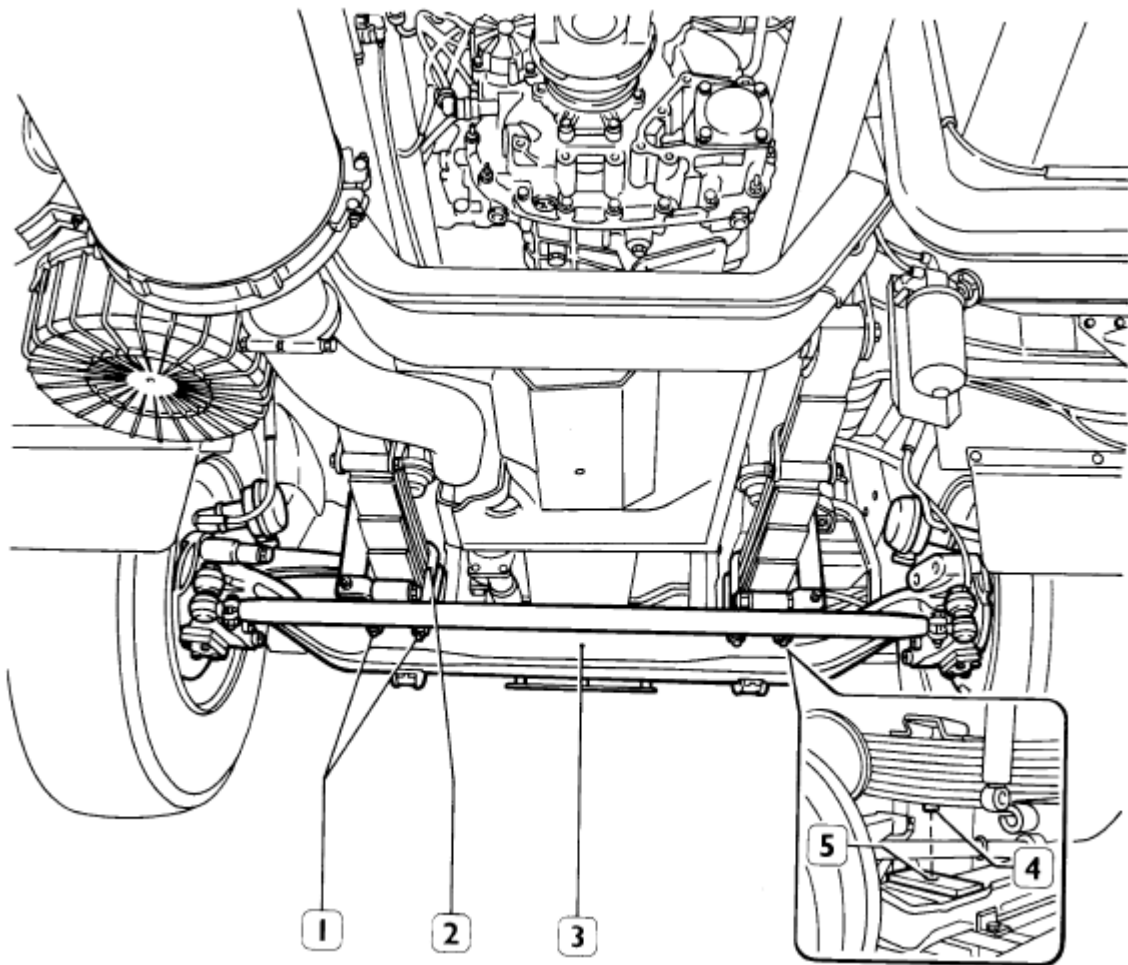

40451

Set a hydraulic jack fitted with stand 99370628 under the axle (3).

Unscrew the nuts (1) and take away the leaf spring to axle fastening brackets (2).

Lower the hydraulic jack and remove the axle (3).

Refitting in place

By means of the hydraulic jack fitted with stand 99370628 lift the axle so that the leaf spring connection pins (4) located on the spring support planes on the axle.

To re-fit in place, follow the removal instructions in reverse order.



All bolts are to be tightened to the prescribed driving torques indicated in the table on page 11.



Check and adjust the front wheel geometry.

Aquila Trucks Centres

VEHICLE CHECKS

Kingpins

Clean the traverse and drag link kingpins. Check that the king pin components are not strained or broken. If they are, replace them.


Tie rods

Check the clamp screws and nuts, make sure they are not worn and that they are tightened to the prescribed torques. Check for strain or damage and if necessary replace them.

TRACK ROD AND DRAG LINK BALL JOINTS SLACK CHECK

Do not lift the vehicle. With a gauge (1, Figure 5) measure distance "X" with the vehicle in straight running position. Measure again with the vehicle in full left-hand (X 1) and right-hand (X 2) steering positions; note the values found.

Figure 5

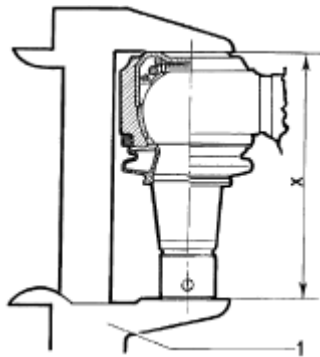

36914

Calculate slack "A" using the following formula:

$$A = B - X$$

where B is the greater value found from measurements X 1 and X 2.

If the value is more than 2 mm replace the kingpin.


Aquila Trucks Centres

520610 FRONT AXLE ASSEMBLY OVERHAUL

Using a lift, position and secure the axle assembly (1) on the stand 99322215 (2) for overhaul.

520620 REMOVING - REFITTING WHEEL HUBS**Removal**

Figure 6

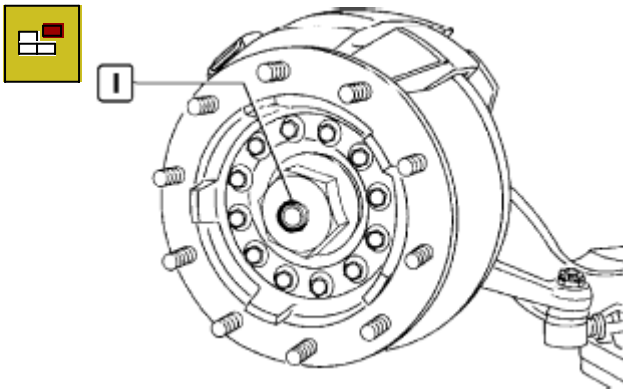


77206

Remove the brake callipers as described in the "BRAKE AIR SYSTEM" section.

Arrange special oil recover container at safety distance. Rotate wheel hub in such a way as to take thread plug (1) downwards; unscrew plug (1) and drain oil into the container.


Figure 7

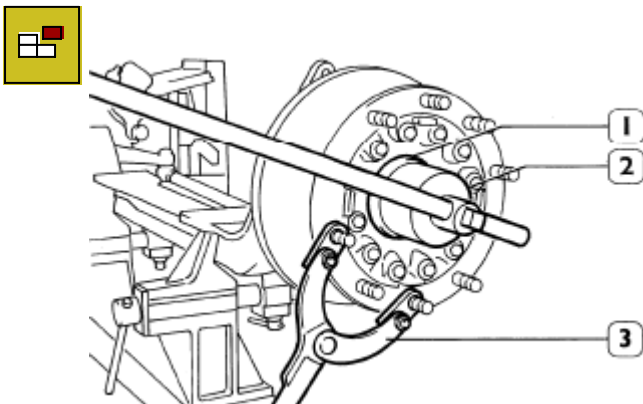

49178

Using the reaction lever 99370317 (3), lock the rotation of the wheel hub and, using wrench 99354207 (2), unscrew the oil cover (1). Drain oil completely.


Figure 8

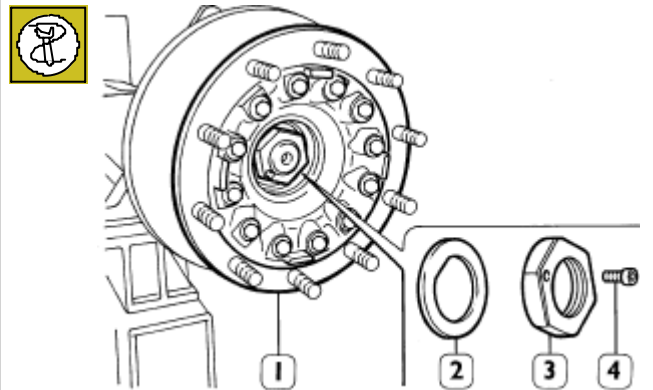

49179

Undo the screw (4), take out the adjustment nut (3) with the wrench 99388001, extract the washer (2), the outer bearing and remove the wheel hub (1) together with the spacer and internal bearing.

Figure 9

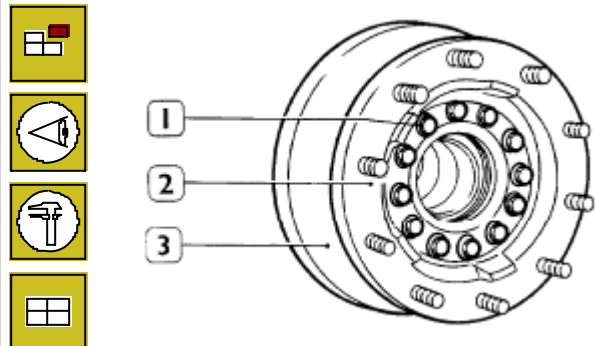

38597


Examine the state of wear of the brake disc (3) as described in the "BRAKE AIR SYSTEM" section.

To remove the brake disc (3), take out the screws (1) and disconnect it from the wheel hub (2).

Aquila Trucks Centres

520635 REMOVING AND REFITTING IN PLACE THE TRACK ROD**Refitting wheel hubs**

Figure 10

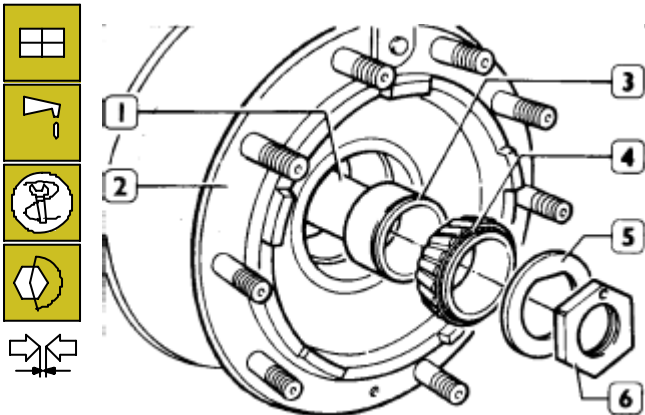

40369

Screw the tool 99370715 (1) onto the kingpin and lubricate the outer surface of the kingpin with TUTELA W140/M-DA oil.


Carefully key the wheel hub (2) onto the kingpin so as not to damage the seal.

Fit on the spacer (3), inner ring (4) of the tapered roller bearing.

Unscrew the tool 99370715 (1).

Key on the washer (5) and screw down the stop nut (6).


Figure 11

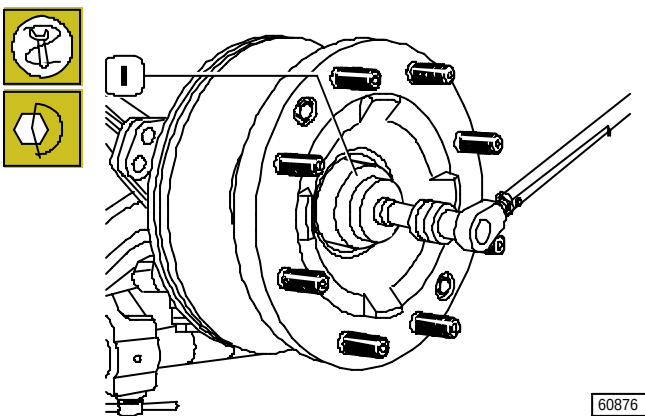

60876

Using the wrench 99388001 (1) tighten the nut (6, Figure 10) to the required torque.

Figure 12

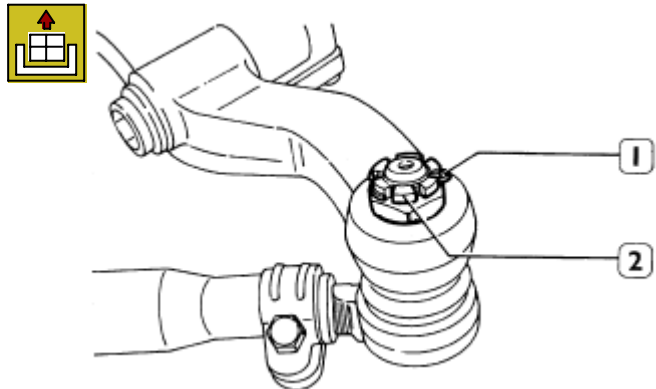


40370

Straighten and remove the split pin (1).

Loosen the nut (2) and partially unscrew to avoid the tie-rod falling when being removed.

Figure 13

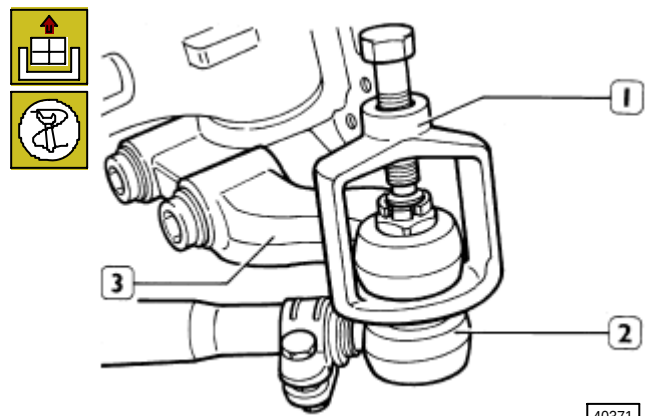

40371

Using puller 99347068 (1) release the kingpin (3) from lever (2). Repeat the same operations on the opposite side, unscrew the nuts completely and remove the track rod.



To re-fit in place follow the removal operations in reverse order.



Tighten the taper pin nuts to the prescribed torque.




Check that the nut notches match the traverse holes on the taper pins; if the split pins do not enter, progressively increase the driving torque of the nuts until they enter correctly (lowest angle 60°)



Aquila Trucks Centres

520635 REPLACING TRANSVERSE TIE ROD BALL JOINTS

Figure 14

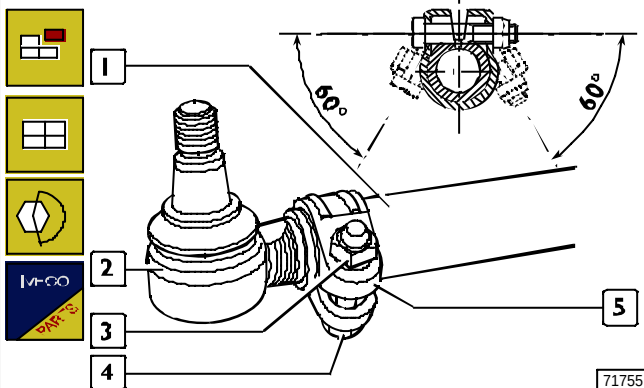

Lock the screw (4), loosen the nut (3) and unscrew the articulation (2) from the transverse tie rod (1).

NOTE To make it easier to refit the transverse tie rod and then adjust the wheel toe-in, note down the number of turns needed to unscrew each single articulation so as to screw the new ones on with the same number of turns.

Screw the new articulation into the tie rod and lock it in position by tightening the locking nut (3) to the required torque.

NOTE The nut (3) has to be tightened with the clamp (5) positioned in one of the set-ups shown in the figure.




Refit the transverse tie rod.



Check and if necessary adjust the toe-in of the front wheels as described under the section heading "Wheel Geometry".

520631 REMOVING AND REFITTING LEVERS FOR TRANSVERSE TIE ROD


Figure 15

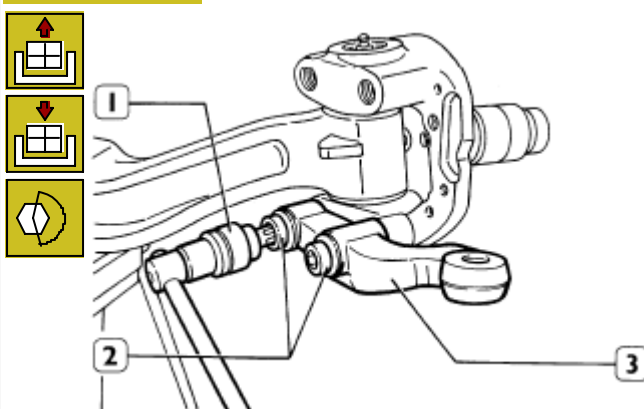

Using wrench 99388002 (3) unscrew the screws (2) and remove the lever (1). To refit it, carry out the operations in reverse order, locking the fixing screws to the required torque.

520632 REMOVING AND REFITTING LEVER FOR LONGITUDINAL TIE ROD


Figure 16

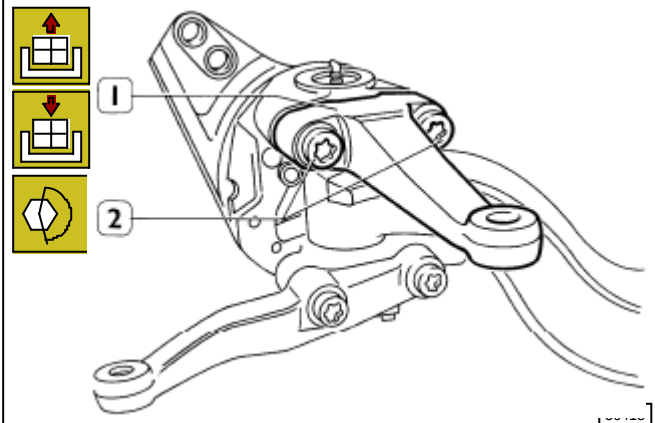

Using wrench 99388002 (1, Figure 14), unscrew the screws (2, Figure 15) and remove the lever (1). To refit it, carry out the operations in reverse order, locking the screws to the required torque.


520611 REMOVING AND REFITTING PIN FOR STUB AXLE**Removal**

Figure 17

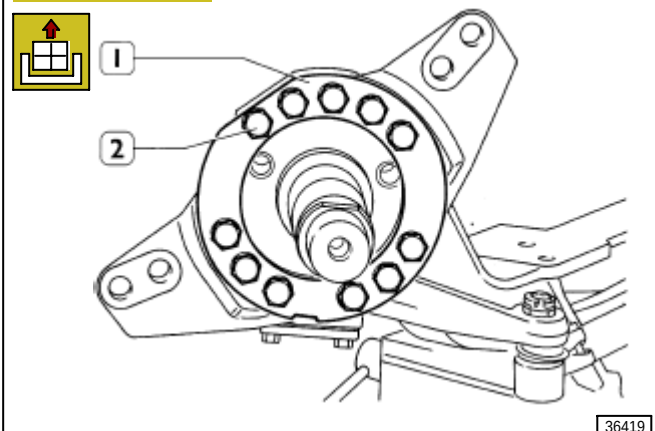

Undo the screws (2) and detach the mount (1).


Figure 18

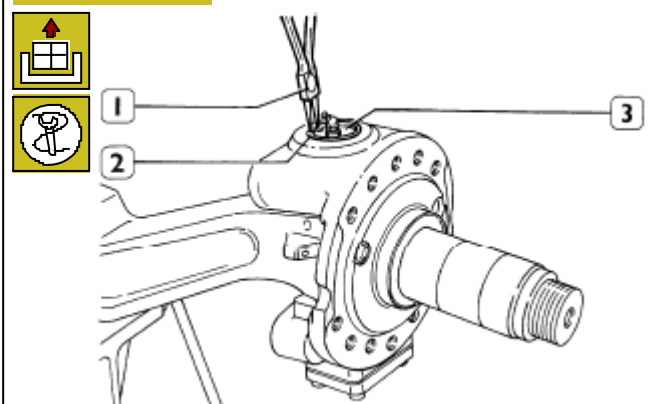

Using specific pliers (1), take out the retaining ring (2) and extract the cover (3) together with the grease nipple.

Aquila Trucks Centres


Figure 19

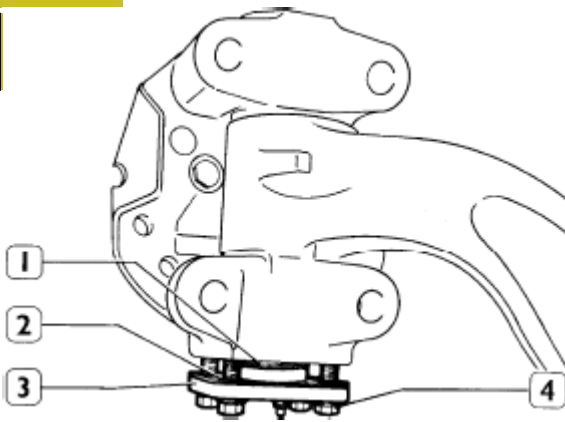

36421

Undo the screws (4) and remove the bottom cover (3), adjustment plates (2) and fifth wheel (1).

Figure 20

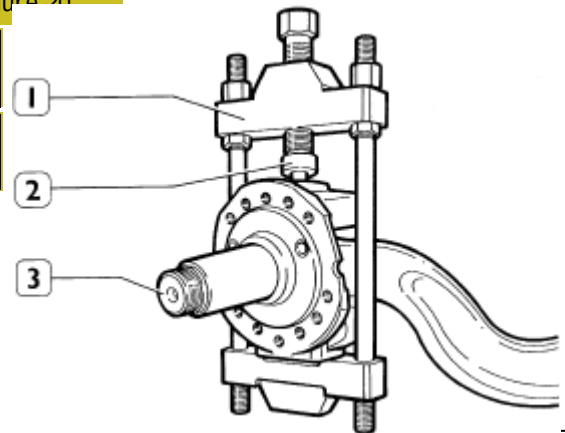


36422

Using the tool 99347047 (1) and part (2), free the kingpin (3); remove the tool and take out the pin.

520615 Replacing kingpin bearing

Figure 21

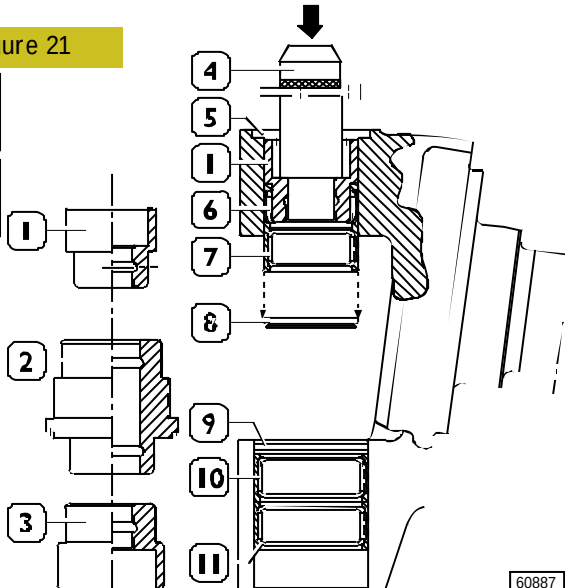

60887


The kingpin bearings (5) are replaced by using parts (1-2-3) of drift 99374530 and grip 99370007 (4) to disassemble and assemble them.

NOTE The parts mentioned in the following text are shown in Figure 21.

Use part (1) and grip (4) to remove the seal (8) and roller bearings (6-7) on the top side.

Use part (3) and grip (4) to remove the seal (9) and roller bearings (10-11) on the bottom side.

Figure 22

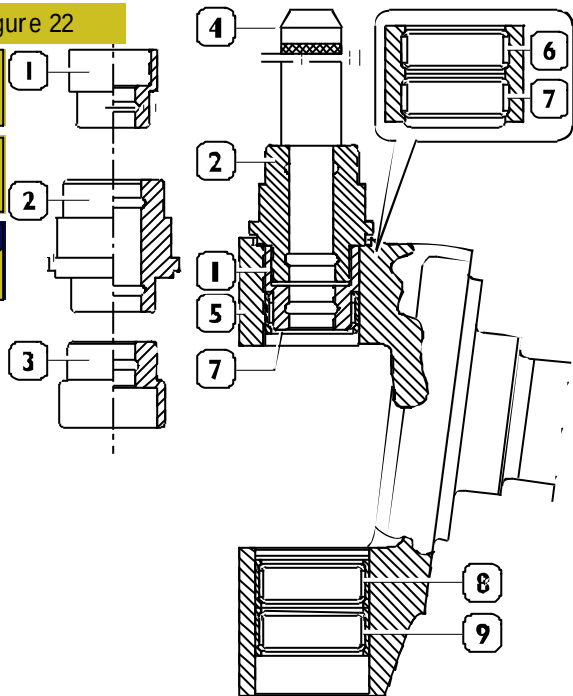

60889


Fitting roller bearing (7): use parts (1 and 2) and grip (4).

Fitting roller bearing (6): use part (2) and grip (4).

Fitting roller bearing (8): use parts (3 and 2) and grip (4).

Fitting roller bearing (9): use part (2) and grip (4).

Figure 23

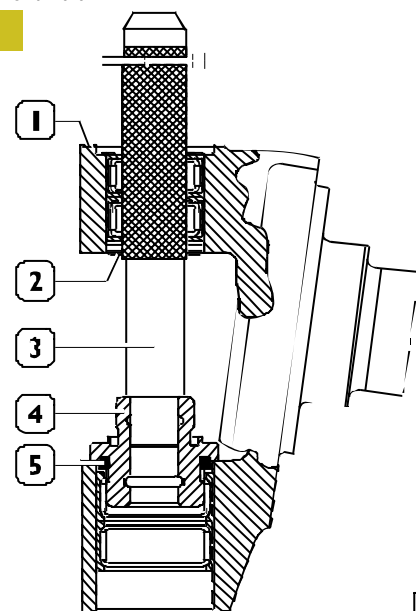


60890

Using the drift 99374173 (4) and grip 99370007 (3), fit the seals (2 and 5) in the stub axle (1).

Aquila Trucks Centres

Refitting

Figure 24

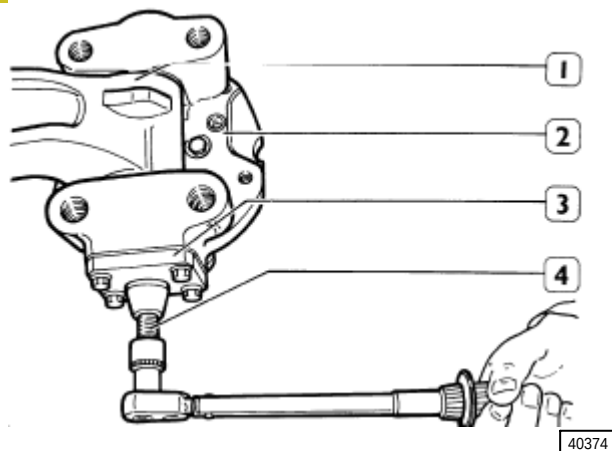


Set on the axle (1) the stub axle (2) and fit the pin into its seat; apply tool 99374405 (3) to the stub axle and fasten it with the lower cover screws, tightening to a suitable torque. Fit the pin in the axle tapered seat, tightening the pressure screw (4) to a torque of $15 \div 16$ daNm. Remove tool 99374405 from the stub axle.

NOTE Before fitting the pin make sure that the tapered seat on the axle and the pin surface are perfectly clean and dry to avoid oil film that could cause the pin to rotate in its seat when fitting it in.




Before fitting in place, dampen the lower cover collar with Tutela MR2.

Figure 25

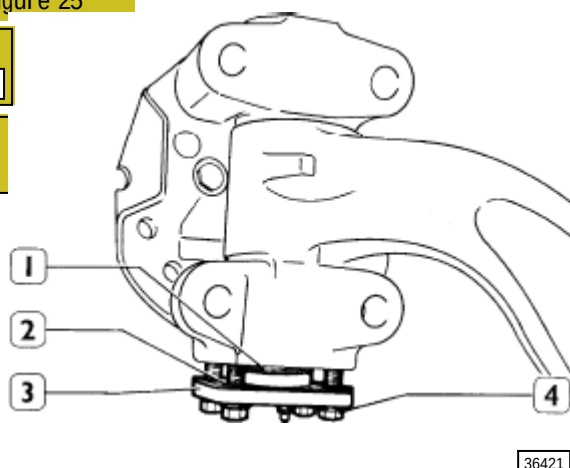

Set the lower cover (3) with the collar (1) and shims (2); tighten the fastening screws (4) at prescribed torque. Repeat the same operation for the opposite axle.

Figure 26

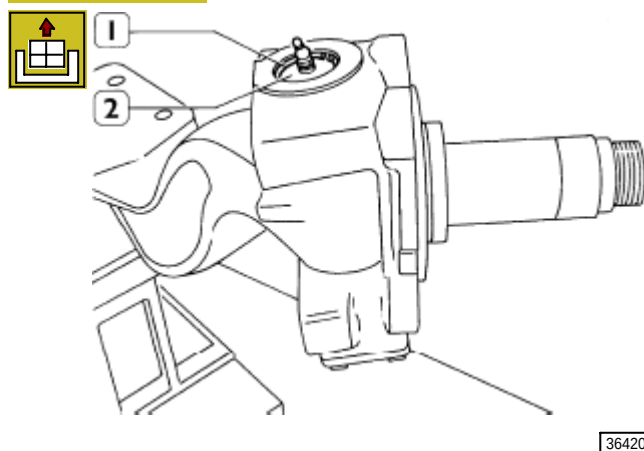


Fit the upper cover (2) into its housing together with the seal gasket; set the grease nipple as shown in the figure, then fit the circlip (1) making sure that the ring expansion takes place correctly.

Aquila Trucks Centres

Stub axle-axle end play check and adjustment


Figure 27

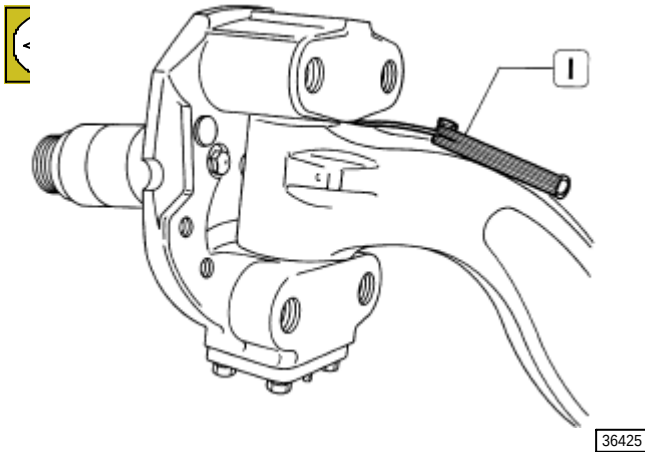

36425

Lift the stub axle so that it is in contact with the lower shim of the axle. Use a feeler gauge (1) to check the clearance between the stub axle upper shim and the axle. The allowed range is between 0.10 and 0.15 mm.

Figure 28

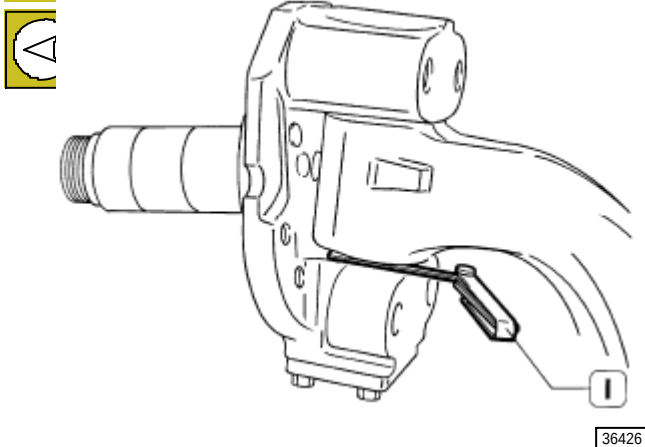

36426

After the clearance between the upper shim of the stub axle and the axle has been checked, use a feeler gauge (1) to check that between the lower shim of the stub axle and that of the axle there is a clearance of not less than 0.25 mm.



If end play adjustment is necessary, replace the shims with other spares that have suitable thicknesses.



The thicknesses of the spare rings are indicated in the SPECIFICATIONS AND DATA table (page 6).




Grease the complete upper and lower joint with MR2 making sure that the grease flows through the baffle lip of the gaskets.

520618 AXLE BODY CHECKS AND MEASUREMENTS

Checking leaf spring supporting surface levelness with reference to kingpin holes using proper equipment

Figure 29

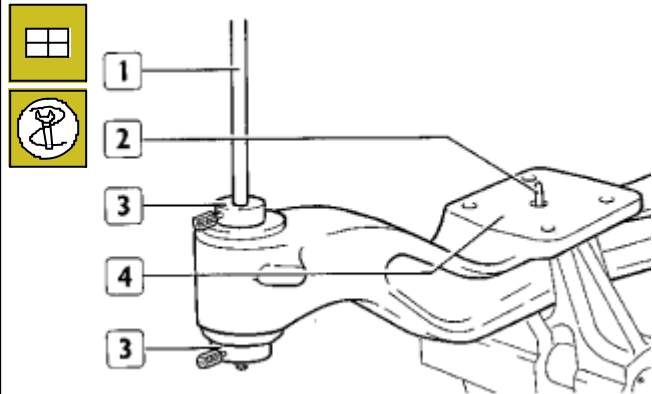

Set the two rods (1) with the cones (3) in the kingpin holes; press down the cones and lock them in position with the screws on the rod.


Insert the two set screws (2) in the seats on the leaf spring contact surface.

Set the bases (5, Figure 30) with goniometers on the surfaces (6) and insert the set screws.

NOTE Before placing the bases with the goniometers, make sure that there is no paint or roughness on the contact surfaces.


Aquila Trucks Centres

Figure 30

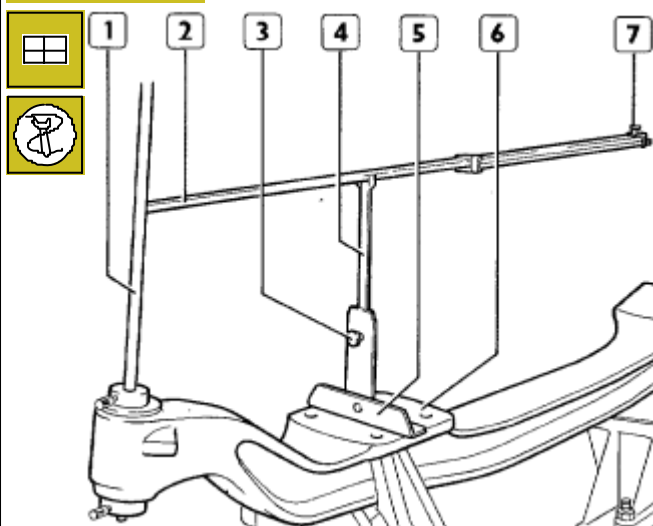

Set the sliding bar (2) on the goniometer rods, adjusting the length so that the shaped ends remain inserted in the rods (1). Lock the clamp screw (7) and the screws (3) that fasten the goniometer to the rods (4).

Figure 31

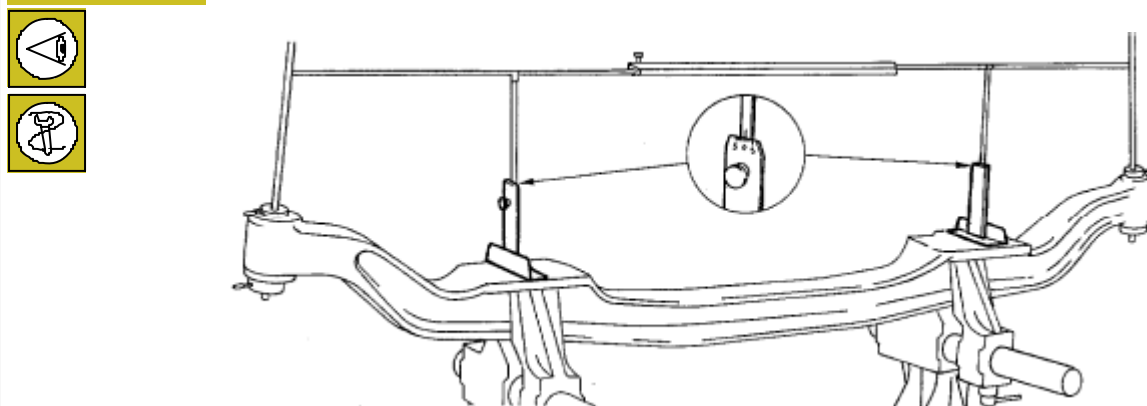


Check for deviation angles on the goniometer scaled sections indicated by the arrows. The goniometer indicators do not indicate any angular displacement when the planarity of the leaf spring contact

surface with reference to the stub axle pin holes is correct. Remove the sliding bar and the bases with goniometer.

Aquila Trucks Centres


Kingpin seats camber angle check

Figure 32

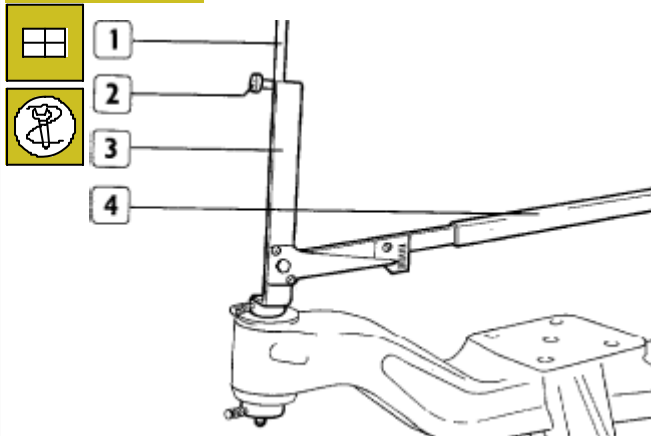

Set the supports (3) with goniometers on the rods (1) and slightly turn the screws (2) without locking them. Insert the coupling track rod (4) and tighten the screws (2) that fasten the supports in the rods (1)

Figure 33

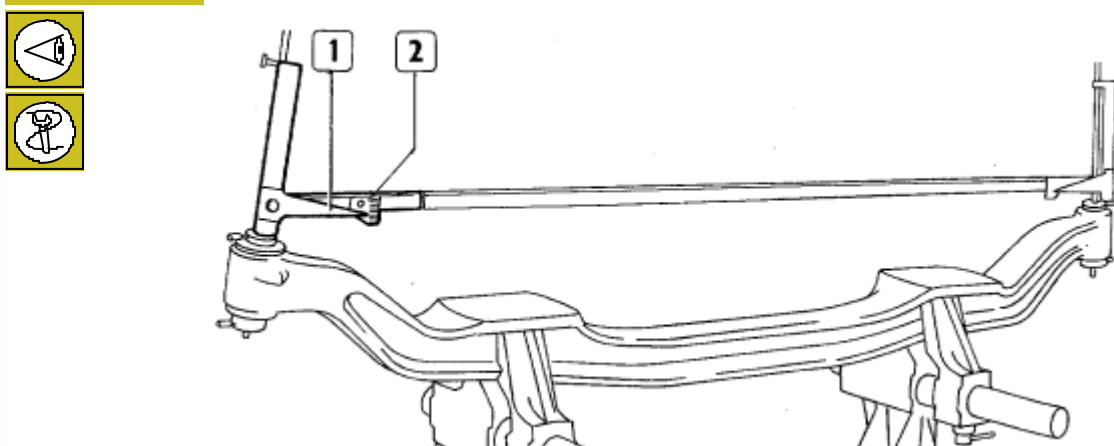

Read the kingpin holes camber angle value in the relevant scaled sectors (2) according to the indicators (1).

The camber angle value for the kingpin holes is to be $7^{\circ} \pm 0^{\circ}3'$

Aquila Trucks Centres

Wheel alignment

	Page
GENERAL INFORMATION	27
- Steering wheel angles	27
FRONT WHEEL ALIGNMENT (4X2 VEHICLES)	28
- Positioning clips and headlights	28
- Electronic compensation of rim eccentricity ..	29
- Wheel alignment	29
- Checking wheel toe-in	30
- Checking wheel deviation	30
- Checking camber	30
- Checking kingpin angle and caster	31
- Checking rear axle alignment	32
WHEEL ALIGNMENT OF VEHICLES WITH ADDED CENTRAL AXLE (8X4X4)	32
- Checking steering angles	34

Aquila Trucks Centres

Aquila Trucks Centres

GENERAL INFORMATION

Steering wheel angles


To ensure satisfactory road holding performance, low tyre wear and to allow driving wheels in the steering stage to return spontaneously to straight ahead running position, front wheels are given the following fitting angles:

- camber;
- kingpin angle;
- caster;
- toe-in.

These angles, suitably calculated, produce the right balance of the forces created when the vehicle is moving, in different load conditions, which tend to alter the position of the wheels on the ground.

Figure 1

Camber

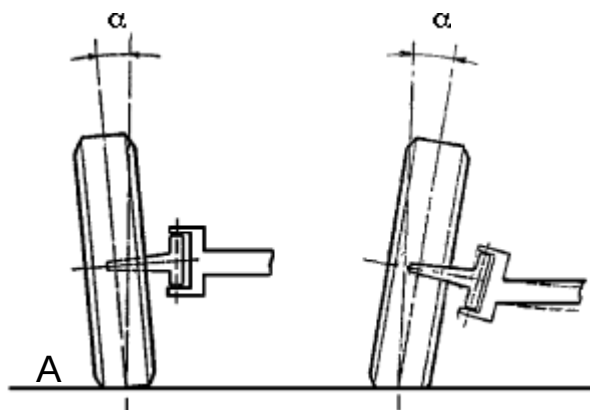


32956

The camber (α) is the angle formed by the axis passing through the centre line of the wheel and the vertical to the ground when observing the vehicle from the front. The angle is positive (A) when the top of the wheel tilts outwards, negative (B) when the top of the wheel tilts inwards.

Kingpin angle

Figure 2

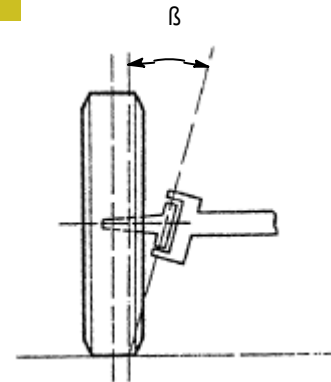

32957

The kingpin angle (β) is the angle formed by the axis passing through the kingpin and the vertical to the ground when observing the vehicle from the front.


When the extension of the kingpin axis approaches the wheel at its point of contact with the ground (opposite to the camber), the angle is positive; it is extremely difficult, if not impossible, to have a negative kingpin angle.

The camber (α) and kingpin angle (β) make it possible for the axes of the wheel and kingpin to come as close as possible to the centre of support of the tyre on the ground.

This produces low tyre consumption and a low steering torque.

Caster

Figure 3

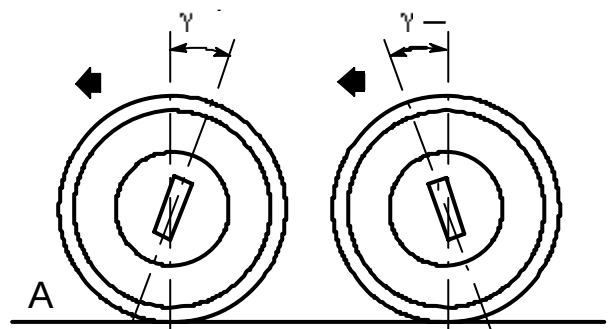

32958

The caster (γ) is the angle formed by the kingpin axis with the vertical to the ground when observing the vehicle from the side.


If the extension of the kingpin axis falls forwards to the point where the wheel rests on the ground, in the direction of travel of the vehicle, the caster is by convention positive (A); it is negative (B) if it falls behind the point where the wheels rest on the ground, and zero if it is exactly vertical to the point where the wheels rest on the ground.

This angle makes it possible to keep the front wheels straight when the vehicle is travelling in a straight line and for them to return straight on their own after the position they take in a bend as soon as the driver lets go of the steering wheel.

Aquila Trucks Centres

Wheel toe-in


Figure 4

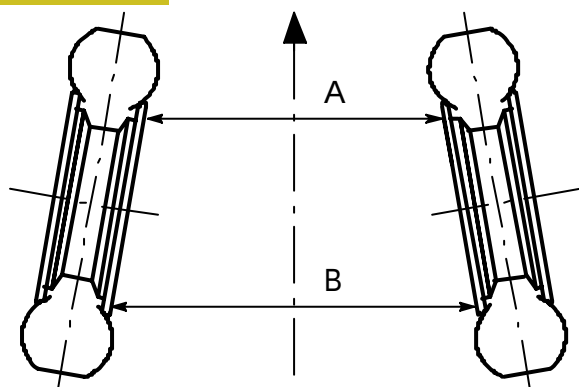

32813

The toe-in is the result of the difference between the distances A and B (in mm) measured on the horizontal axis of the rims, when observing the vehicle from above. This produces light driving and low tyre consumption. Toe-in is positive if B is greater than A.


Figure 5

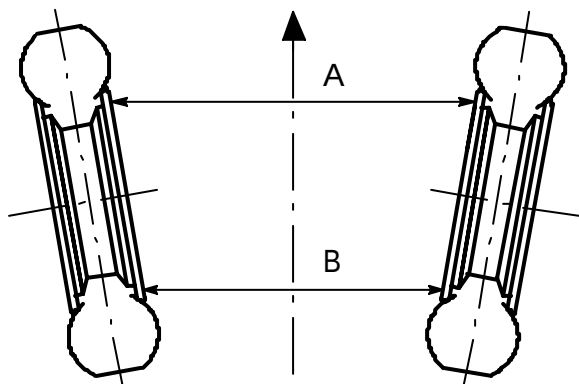

32814

Toe-in is negative if B is less than A.

Figure 6

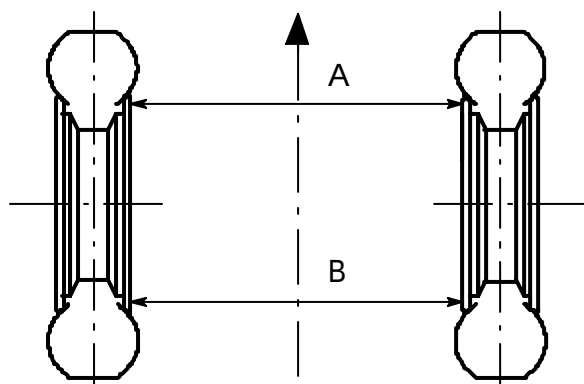

32815

Toe-in will be zero if B is equal to A.

FRONT WHEEL ALIGNMENT
(4X2 VEHICLES)

Before moving on to the checks, it is necessary to make a preliminary inspection of some parts of the vehicle that may affect wheel geometry. If any trouble is found, it will have to be rectified in order to avoid incorrect measurements. The checks to make are the following:

- tyre pressure;
- wheel hub bearing clearance;
- clearance between steering tie-rod pins and levers on stub axles;
- efficiency of shock absorbers;
- wheel rims, which must have no buckling out of tolerance.


Check the wheel geometry with the instrument 99305354.



The checks and any work on the wheel geometry must be done with the vehicle with a static load. Periodically make sure the light clusters are set correctly.


Positioning clips and headlights

Figure 7

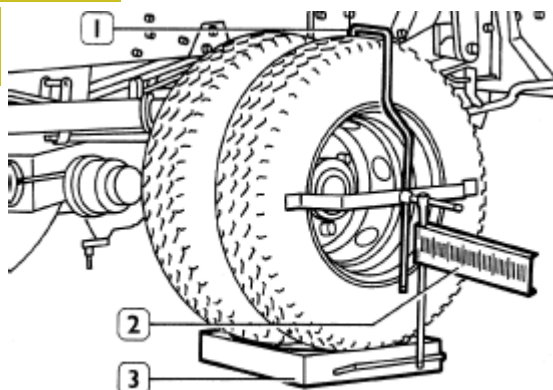

Set the vehicle with its wheels in the position of straight-line travel on a flat surface. Lift the rear of the vehicle and place the boards (3) under the wheels. Lower the vehicle, brake the rear wheels and fit on the hook (1) with the rule (2).


Figure 8

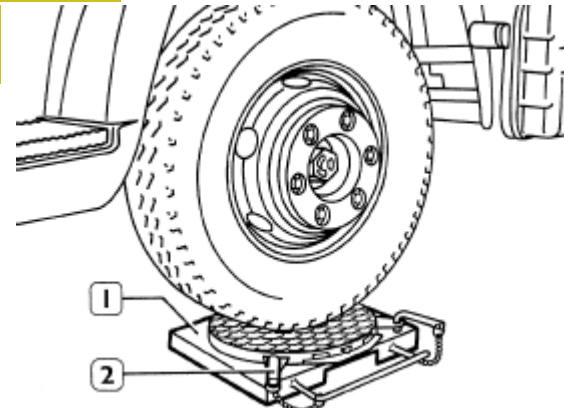

Lift the front of the vehicle and place oscillators (1) under the wheels, locking them with the clamps (2).

Aquila Trucks Centres


Figure 9

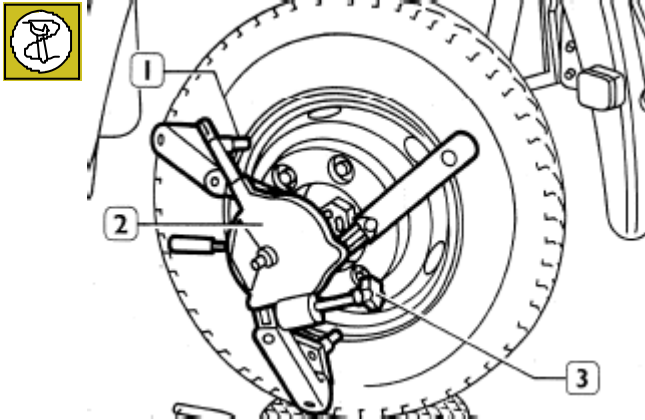

32975

Position the self-centring clip (2), fitted with appropriate fixing pins (1), on the rim of the wheel. Using the knob (3), lock the clip on the wheel, checking it is properly anchored.


Figure 10

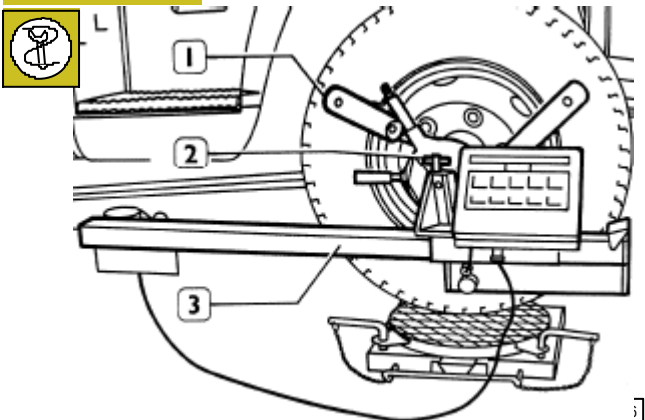

Fit the measuring unit (3) on the clips (1) and fasten it with the screw (2). Repeat these steps on the other wheel.

Electronic compensation of rim eccentricity

Figure 11

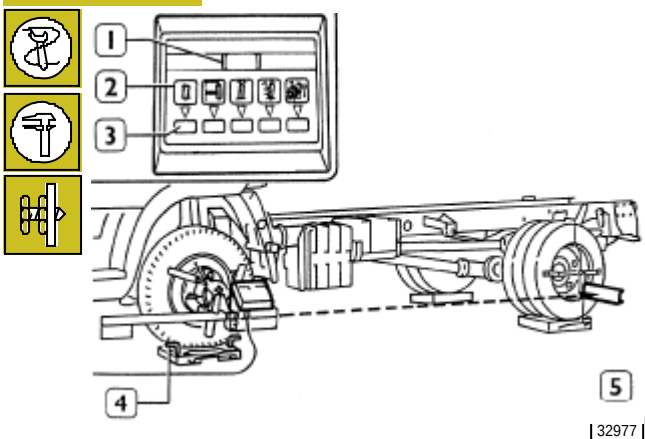

32977

Connect the plugs of the measuring unit to the transformer and turn on the switch. Loosen the locking screw of the measuring unit and lift the lens shield. Press the "off centre" button (3) for at least two seconds, five lines will appear on the display (1).

Turn the wheel slowly by hand and project the light signal onto the corresponding scale of the rule (5). Measure and note down the minimum and maximum travel of the light signal: e.g., 12 and 8.

Calculate the mean travel: $12 + 8 = 20 : 2 = 10$ and position the wheel on the mean value calculated, marking its position.

Press the "off centre" button (3) again till the wheel toe-in LED (2) comes on and the digital indicator (1) shows an artificial value.


Repeat these steps on the other wheel.



Take care the laser beam does not hit anyone's eyes: it would severely damage their sight.

Lower the vehicle so that the wheels, in the marked position, rest completely in the middle of the oscillating plates, and free these from their bases, taking out the pins (4).


Figure 12

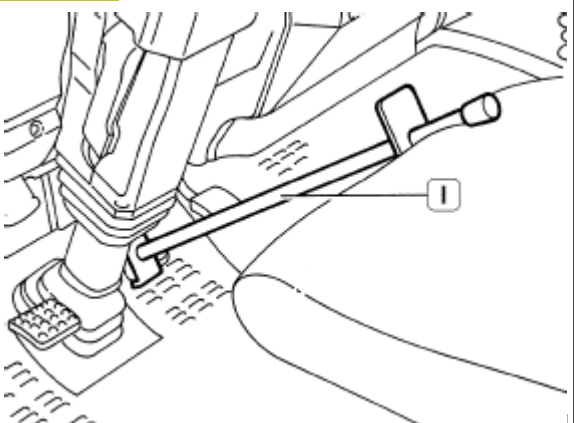

Press the brake pedal and lock it in position with the tool (1) positioned against the seat, thereby keeping the vehicle braked for the entire cycle of measurement.

Wheel alignment

Figure 13

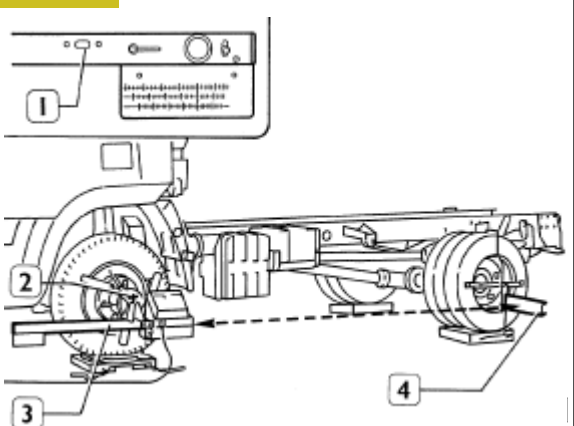


Level the measuring units (3) with the spirit level (1) and lock them in position with the screw (2).

Move the rules (4) until they are centred by the light signal emitted by the measuring unit and note down the values given.

Aquila Trucks Centres


Figure 14

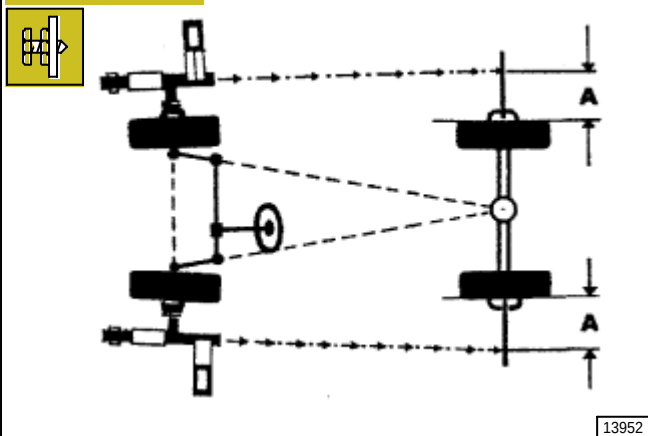

If the values are not the same, turn the wheels until the pointers of the light signals are on two equal values (A), exactly the mean value of the two readings made beforehand. This produces perfect wheel alignment.

Checking wheel toe-in

Figure 15

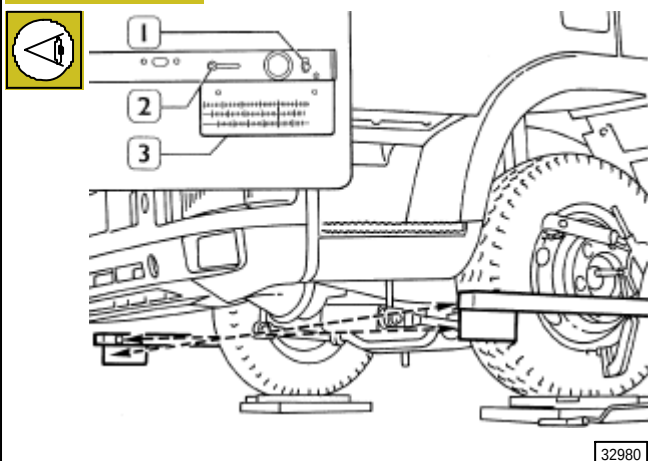

With the measuring units still level and the wheels perfectly aligned, using the lever (1), move the lens shield.

Using the lever (2), direct the pointer of the light signal onto the millimetre scale of the rule (3) corresponding to the diameter of the rim.

Repeat these steps on the opposite measuring unit and read off the value of the toe-ins given in mm on the millimetre scales.

The algebraic sum of these two measurements must give the required value.



The toe-in is adjusted with the transverse tie rod so as, for each wheel, to have a toe-in equal to half the required value.

Checking wheel deviation

The deviation is checked while reading the toe-in.

The partial value of the toe-in measured on the rule (3) has to be equal to the value measured on the rule on the other wheel.

If, however, there is a difference in these values, e.g. -2 and +3, the total toe-in is +1 and is therefore correct, but at the same time it indicates a deviation between the wheels (one wheel further forward than the other) of 5 lines.


This number of lines is calculated with the algebraic sum of the values measured: $+3 - (-2) = 5$, or more simply by counting the lines between the two values.

Each line corresponds to a deviation of 2 mm.

When the deviation is greater than 10 lines (20 mm), it is necessary to make additional checks, to verify the state of the leaf springs (whether one of these has given way, or whether the chassis or axle are out of shape).

Checking camber

Figure 16

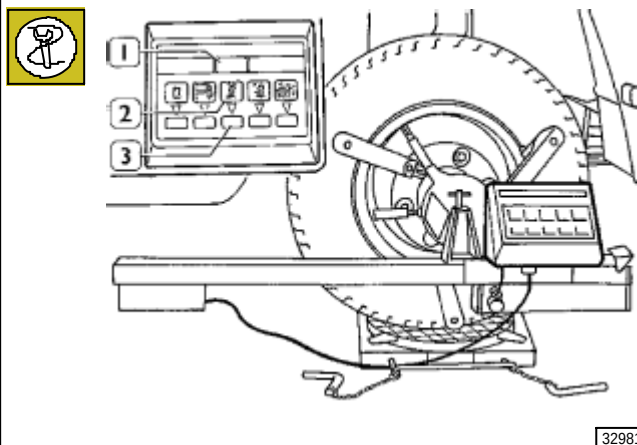


With the front wheels aligned with the rear ones and the measuring units level, press the camber button (3); the LED (2) will come on and the display (1) will show the value of the camber, that has to be 1°.

NOTE The camber is a fixed value that cannot be adjusted. Therefore, if you find the value is not as required, detach and remove the axle to make the relevant checks and replacements if necessary.

Aquila Trucks Centres


Checking kingpin angle and caster

Figure 17

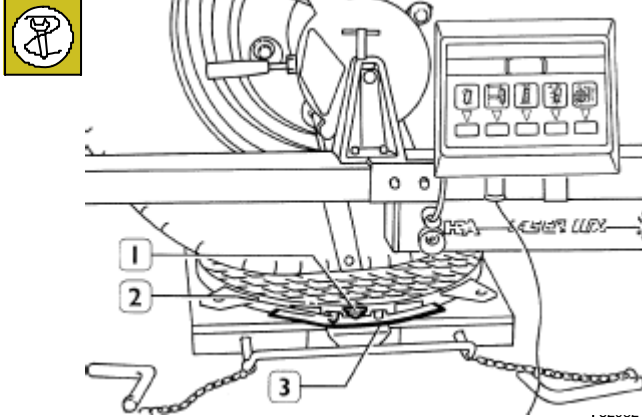


Still with the front wheels aligned with the rear ones, loosen the knurled knobs (2) and reset the graduated sector (3) on the pointer (1) of the oscillating plate.

Figure 18

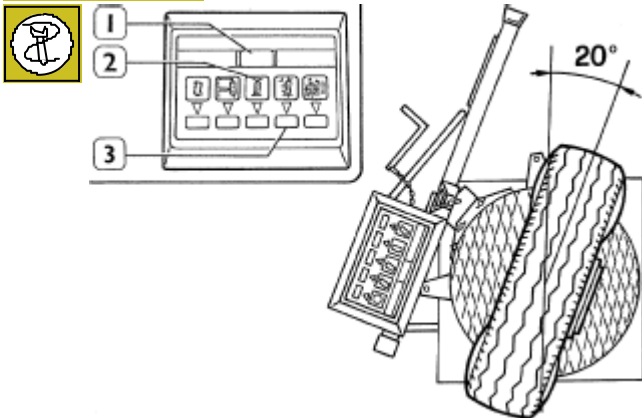


Turn the wheels 20° inwards and press the kingpin angle button (3) twice; the LED (2) will come on and the display (1) will show nine horizontal lines.

Figure 19

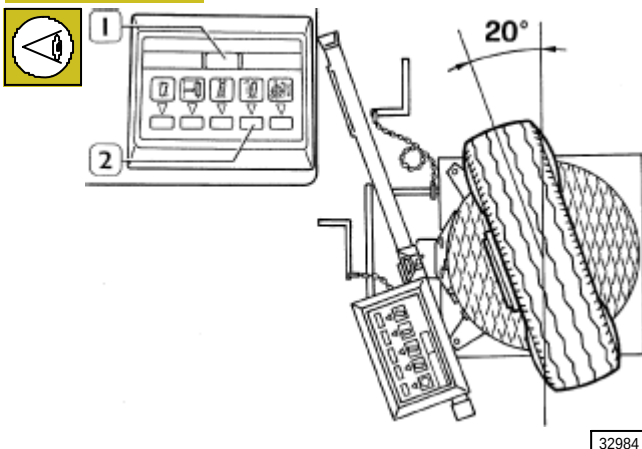

Turn the wheels 20° outwards and press the kingpin angle button (3) again; the display (1) will show the value of the kingpin angle that has to be 7°.


Figure 20

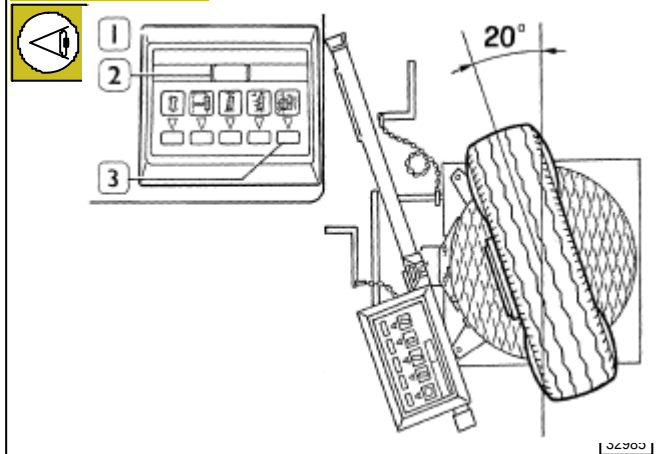

Without moving the wheel, press the caster button (3). The LED (1) will come on and the display (2) will show the value of the caster, which has to be the required value.

NOTE The caster and kingpin angle are fixed values that cannot be adjusted. Therefore, if you find the values are not as required, detach and remove the axle to make the relevant checks and replacements if necessary.

Figure 21

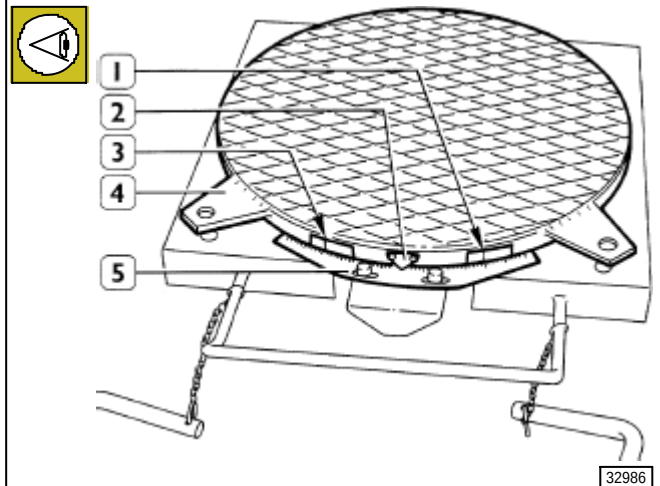

With the wheels turned straight, reset the graduated sectors (5) on the pointer (2) of the oscillating plates (4). If the steering angles to be measured are greater than 30°, it is necessary to use the 20° mark (1) on the oscillating plate and the corresponding one of the graduated sector as "0°" reference indices.


Turn the wheels to reach a required angle (internal or external wheel angle).

Then check that the steering angle (external or internal wheel angle) of the opposite wheel corresponds to the required value, remembering to use the corresponding scale with the sign shown on the oscillating plate to read off the angle.

Aquila Trucks Centres

Checking rear axle alignment


Figure 22

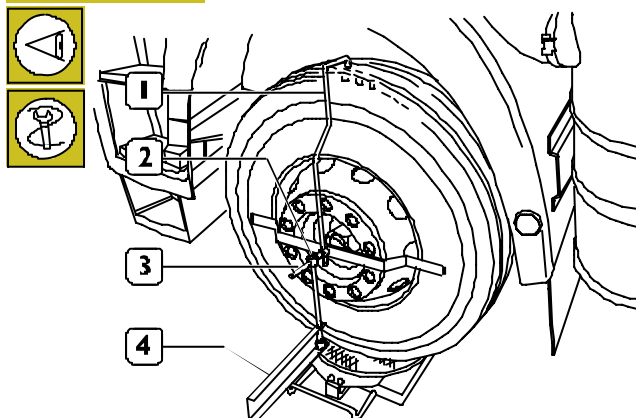

Fit the rule (4) on the front wheels, checking the slide (2) is exactly in the middle of the two annular grooves of the shaft (3).

Fit the measuring units on the rear wheels as described above for the wheels of the front axle.

Figure 23

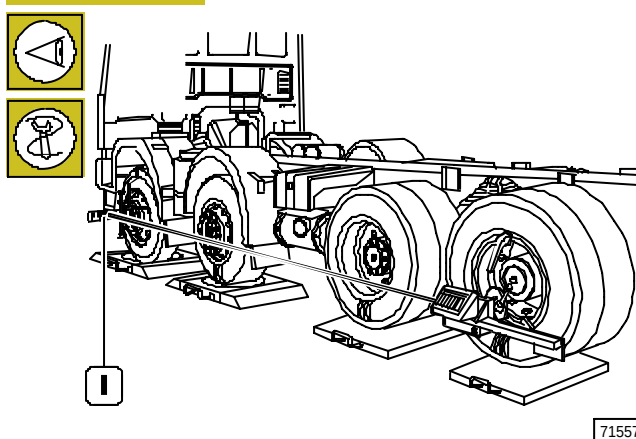


Project the light signal on the rule (1) and note down the value shown.

Repeat this measurement on the other wheel and check that the value shown is the same as the one noted down; if it is not, thoroughly check over the assembly of the rear axle on the vehicle: if you find no trouble, check the chassis has not lost its shape, following the procedures described in the "Bodywork - Chassis" section.

WHEEL ALIGNMENT OF VEHICLES WITH ADDED CENTRAL AXLE (8X4X4)

Figure 24

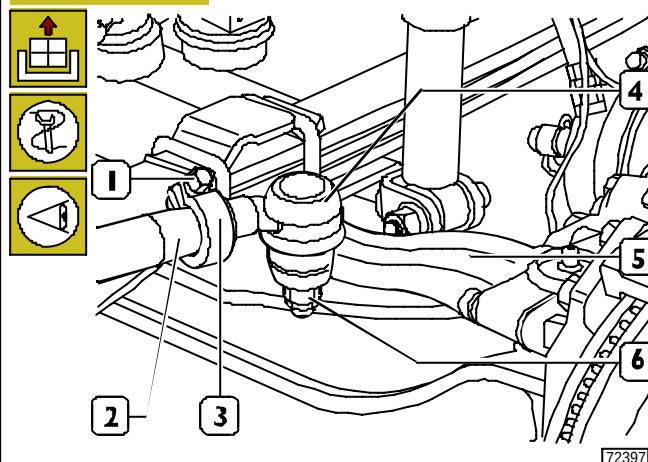


Detach the swivel head (4) of the rear longitudinal tie rod (2) from the steering lever (5) of the central axle with the extractor 99347068.



Check the distance between the centre distances of the swivel heads of the tie rod (2). It must be 953 ± 10 mm. If it is not, loosen the screw (1) fixing the collar (2) and turn the tie rod (2) appropriately.

Provisionally fit the swivel head (4) back onto the lever (5) and screw down the fixing nut (6) without fully locking it.


Figure 25

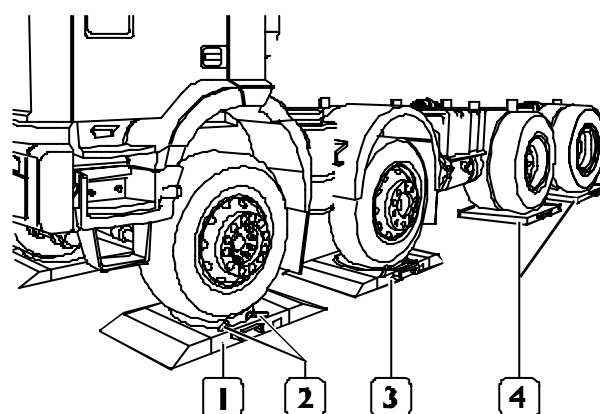

Lift the vehicle, position the oscillating plates (1 and 4) of the device 99305123 under the wheels of the steering axles, locking them with the specific clamps (2) and place the boards (3) under the rear wheels.

Aquila Trucks Centres


Figure 26

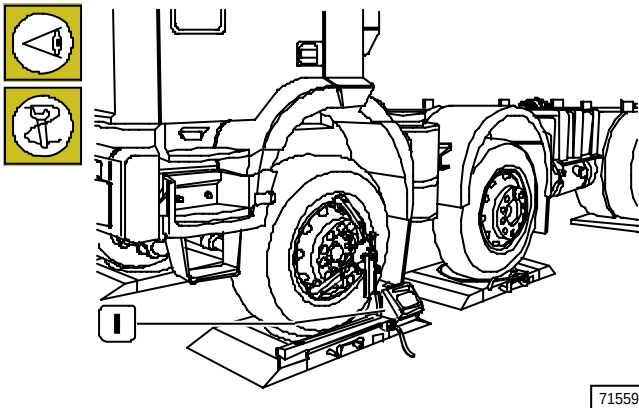

71559

Check front axle wheel geometry using device 99305123 (1) according to procedure described and illustrated for 4X2 vehicles.


Figure 27

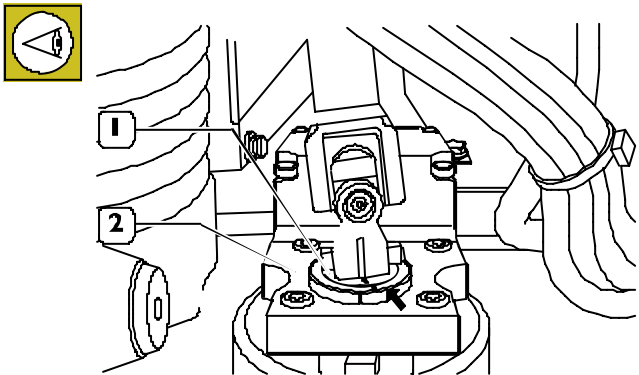

71745

After checking and adjusting the toe-in, if necessary, set the wheels straight and check the steering box is in the "steering centre" position, that is the notch $\Leftarrow$ of the shaft (1) coincides with the notch $\Rightarrow$ of the steering box (2).


Figure 28

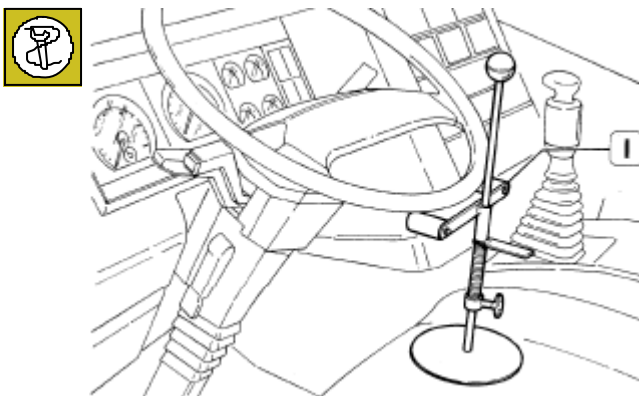

38861

Lock the steering wheel with the tool (1).

Figure 29

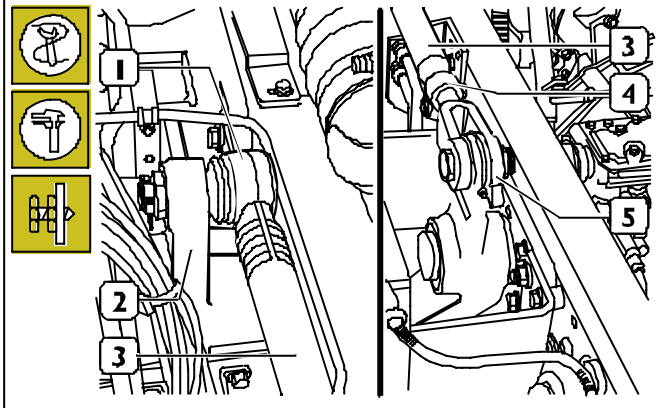


71746

Check that the distance between the centre distances of the swivel head (1) and of the fork (5) of the middle longitudinal tie rod (3) is 1735 ± 2 mm.

If this is not so, disconnect the swivel head (1) from the lever (2) with the extractor, loosen the collar (4) and turn the tie rod (3) appropriately to get the required distance; then, fit the swivel head (1) back onto the lever (2).

NOTE Each turn of the tie rod (3) corresponds to a change in its length of 0.75 mm.

Figure 30

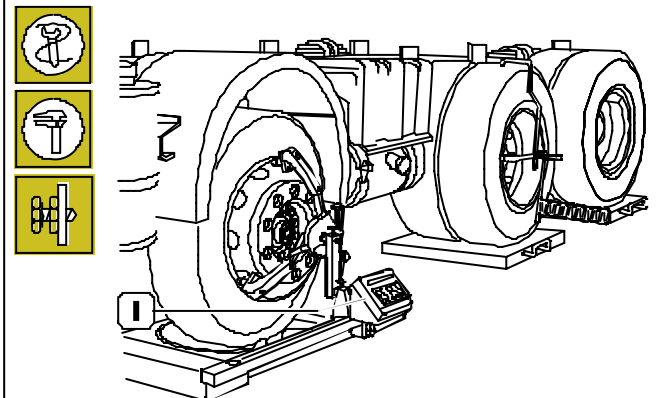


71560

Disconnect the swivel heads (1, Figure 29) from the steering lever (2, Figure 29) from the central axle.

Fit the light cluster (1) of the device 99305123 onto the wheels of the central axle, repeat the checks and, if necessary, adjust the toe-in as done for the front axle.

Aquila Trucks Centres

Figure 31

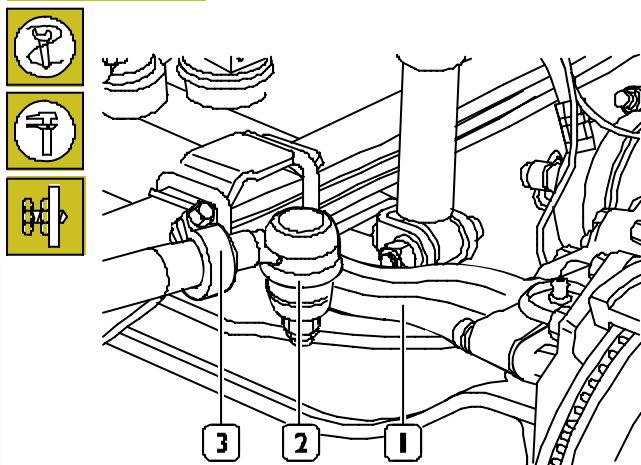


71744

With the wheels straight and the steering box in the "steering centre" position, check that the pin of the swivel head (2) goes exactly into the tapered hole of the lever (1). If it does not, loosen the collar (3) fixing the swivel head to the tie rod and turn the swivel head appropriately to achieve the above condition.

In this way, the wheels of the central axle will be aligned with those of the front axle (permitted alignment tolerance 0 ± 0.5 mm).

Fit the swivel head back onto the respective lever permanently by tightening the nuts to the required torque.

Figure 32

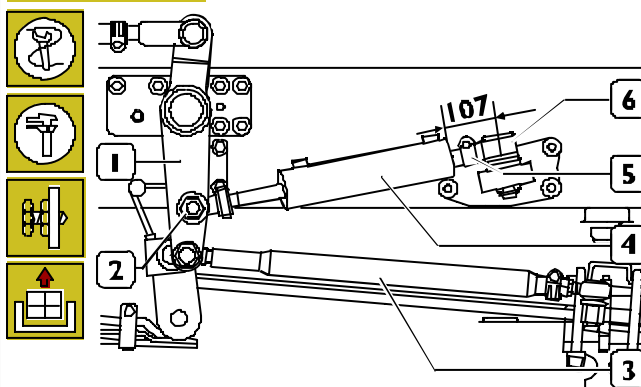


71561

Position the steering box in the steering centre position. Check there is 107 mm between the face of the driving cylinder (4) and the centre distance of the swivel head (6); if this is not so, disconnect this with the extractor, loosen the collar (5), turn the swivel head (6) appropriately to obtain the required distance and fit the swivel head back on in this position.

Disconnect the swivel head (2) from the idler arm (1) and take the cylinder (4) into its closed position.


Figure 33

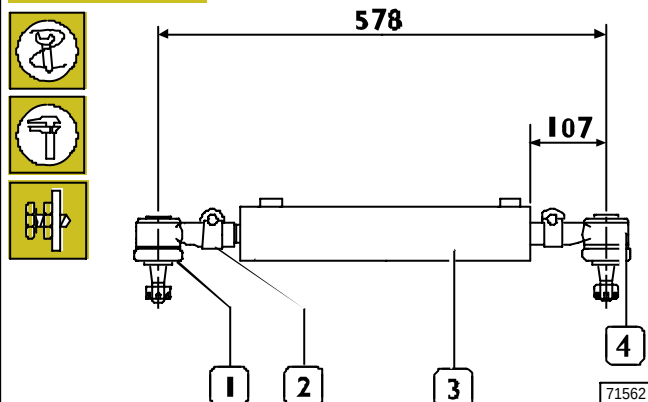

71562

Check that the distance between the centre distance of the swivel head (4) and the centre distance of the swivel head (1) is 578 mm. If this is not so, loosen the collar (2) and turn the swivel head (1) appropriately to obtain the required distance.

Figure 34

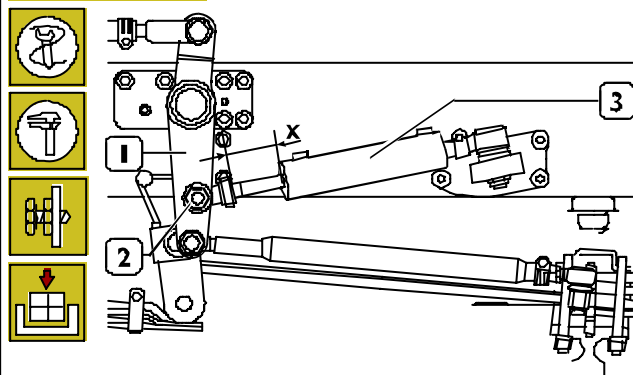


71563

Fit the swivel head (2) back onto the idler arm.

With the steering box in the steering centre position, the distance X between the swivel head (2) and the face of the cylinder (3) is 140 ± 2 mm.

Checking steering angles

Figure 35

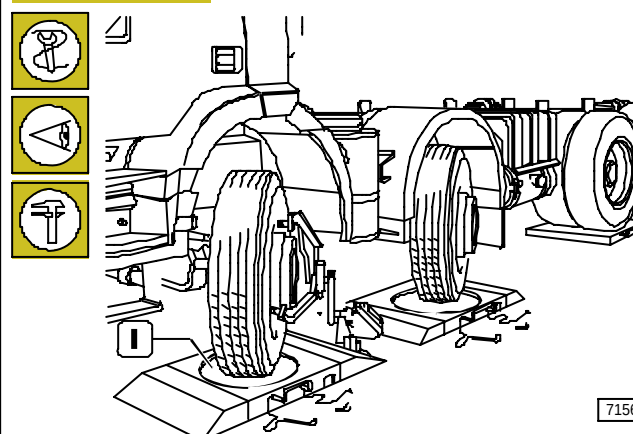

71564

After resetting the graduated sectors on the pointers of the oscillating plates (1), turn the wheels so that the left front wheel is positioned on the internal steering angle and check that the other wheels are turned by the required angle. Repeat the check on the steering angles, positioning the left front wheel on the external steering angle.

Aquila Trucks Centres

SECTION 10

Suspensions

	Page
FRONT AND REAR MECHANICAL SUSPENSIONS	3
- Description	3
MAIN DATA	14
FRONT SHOCK ABSORBERS	23
REAR SHOCK ABSORBERS	24
AIR SUSPENSION	25
- Chassis frame lifting, lowering and self-levelling with remote control	25
- Saving Levels	25
AIR SUSPENSION SYSTEM DIAGRAMS	26
- Rear air suspension main diagram for 4x2T/P tractors	26
- Rear air suspension main diagram for 4x4 vehicles (trucks)	27
- Working diagram of pneumatic rear suspensions for 6x4 - 8x4 vehicles (trucks and tractors) ...	28
MAIN DATA	29
- Pneumatic system	29
MAIN COMPONENTS OF THE PNEUMATIC SYSTEM	30
- Relief valve	30
- Fault diagnosis	30
- Level sensor	30
- Electropneumatic distributor	31
- Air low pressure manometer switch	31
- Air spring	31
CHASSIS ADJUSTMENT	32
- Rear pneumatic suspension for vehicles 4x2 - 4x4	32
- Rear pneumatic suspension for vehicles 6x4 - 8x4 with SR rear axles	33
- Rear pneumatic suspension for vehicles 6x4 - 8x4 with HR rear axles	34

Aquila Trucks Centres

Page

Page

DIAGNOSTICS	35
- Diagnosis Instruments	35
- Diagnosis on Cluster	37
- DTC - FMI error codes	39
TIGHTENING TORQUES	68
TOOLS	69
EXPERIMENTAL TOOLS	73
FRONT LEAF SPRING REMOVAL-REFITTING ..	75
- Removal	75
- Refitting	75
REMOVAL-REFITTING OF INTERMEDIATE AXLE LEAF SPRING (8X4 VEHICLES)	76
- Removal	76
- Refitting	76
REMOVAL-REFITTING OF REAR LEAF SPRING (4X2 - 4X4 VEHICLES)	77
- Removal	77
- Refitting	77
REMOVAL-REFITTING OF REAR LEAF SPRING ON CANTILEVER TYPE SUSPENSIONS (6X4 - 6X6 - 8X4 - 8X8 VEHICLES)	78
- Removal	78
- Refitting	78
- Procedure for assembly of the slipper block and mounting brackets for the longitudinal bars ...	79
- Tightening the U-bolts clamping the leaf spring to the central pivot	79
REAR CANTILEVER SUSPENSION (6X4 - 6X6 - 8X4 - 8X8 VEHICLES)	80
- Removal-refitting of central pivot	80
- Removal-refitting of central pivot shaft	80
- Renewal of bearings	80
- Removal-refitting of hanger bracket	80
- Removal of the central pivot	80

- Removal of the central pivot shaft	80
- Removal of the hanger bracket	80
- Renewal of the bearings	80
- Refitting the hanger bracket	81
- Refitting the central pivot shaft	82
- Refitting the central pivot	82
REMOVAL-REFITTING OF REAR AXLE LONGITUDINAL ARM	84
REMOVAL-REFITTING OF INTERMEDIATE AXLE LONGITUDINAL ARM	84
REMOVAL-REFITTING OF REAR AXLE TRIANGULAR ARM FOR VEHICLES WITH AIR SUSPENSION	84
- Removal	84
- Refitting	84
REPLACING THE SUSPENSION ARM FLEXIBLE PIN	85
- Dismounting	85
- Mounting	85
REPLACING TRIANGULAR SWINGING ARM BALL ARTICULATED JOINT	85
- Dismounting	86
- Mounting	86
SHOCK ABSORBERS	88
- Removal	88
- Refitting	88
ANTI-ROLL BARS	88
ANTI-ROLL BAR	89
FRONT ANTI-ROLL BAR	89
AUXILIARY AXLE ANTI-ROLL BAR (8X4 VEHICLES)	89
REAR ANTI-ROLL BAR	89
INTERMEDIATE AXLE ANTI-ROLL BAR (6X4 - 6X6 - 8X4 - 8X8 VEHICLES)	89
- Removal	89
- Refitting	89

Aquila Trucks Centres


FRONT AND REAR MECHANICAL SUSPENSIONS**Description****FRONT SUSPENSION**

The front suspension system is comprised of parabolic or semi-elliptic leaf springs with double-acting hydraulic shock absorbers and an anti-roll bar.

REAR SUSPENSION

4x4 - 4x2 vehicles: parabolic or semi-elliptic leaf springs with double-acting hydraulic shock absorbers and anti-roll bars.
6x4 - 6x6 - 8x4 - 8x8 vehicles: cantilever leaf springs and anti-roll bars.

Figure 1

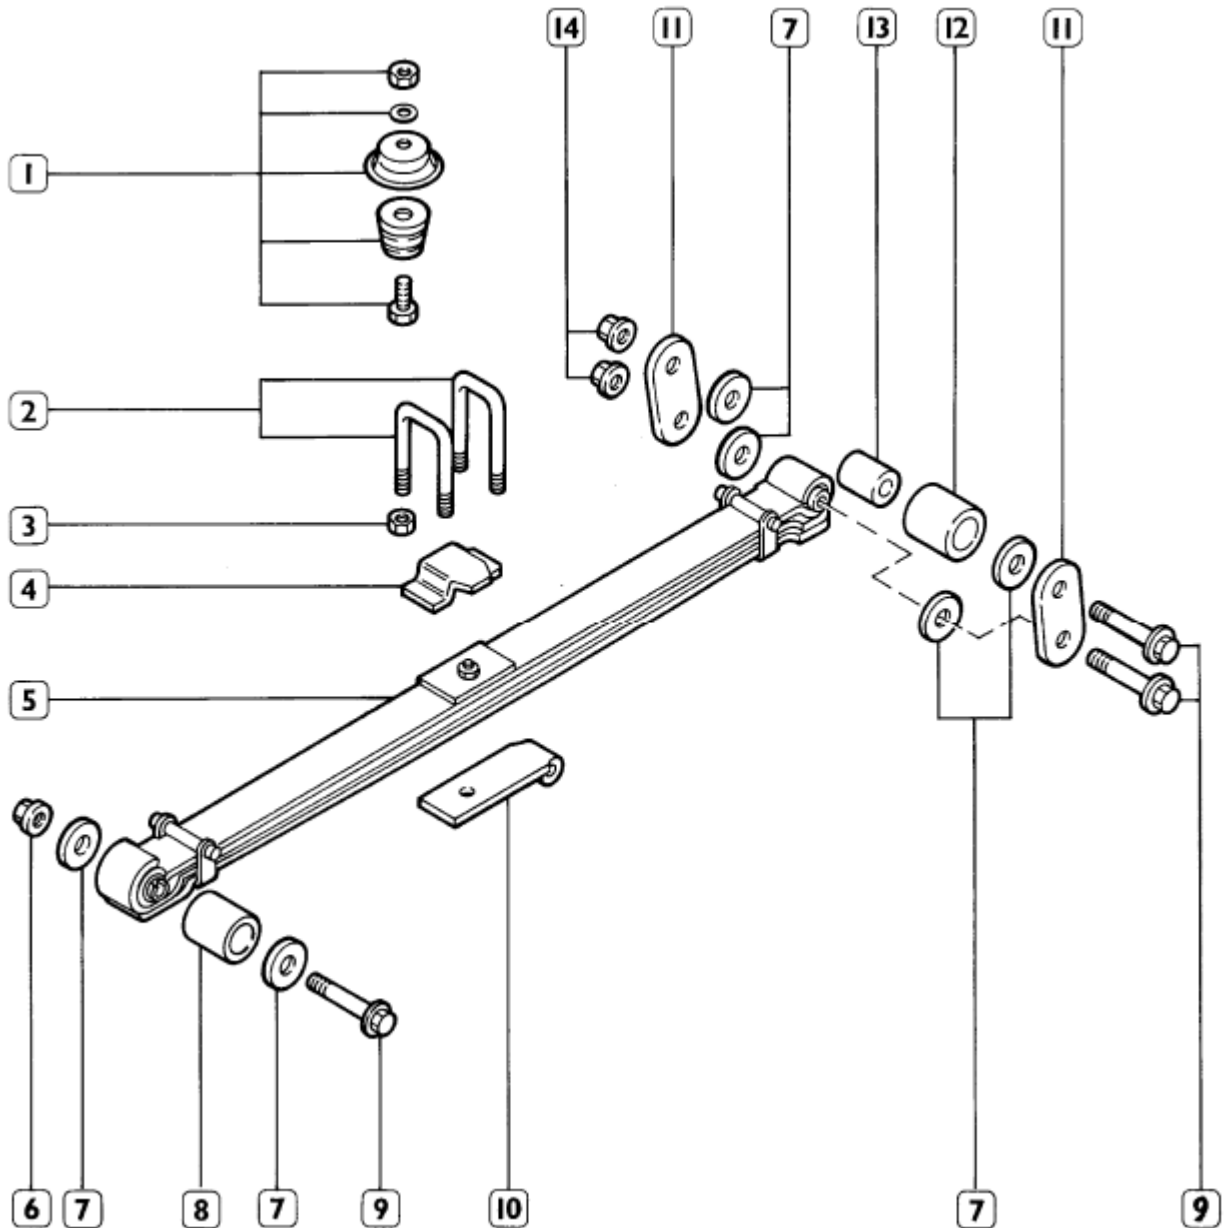


39614

FRONT SUSPENSION COMPONENTS

1. Bump stop with fixings - 2. Clamping U-bolts - 3. Nut - 4. Plate - 5. Leaf spring - 6. Nut - 7. Washers - 8. Bush - 9. Shackle pins - 10. Plate - 11. Shackle plate - 12. Rubber bush - 13. Metal bush - 14. Nuts

Aquila Trucks Centres

Figure 2

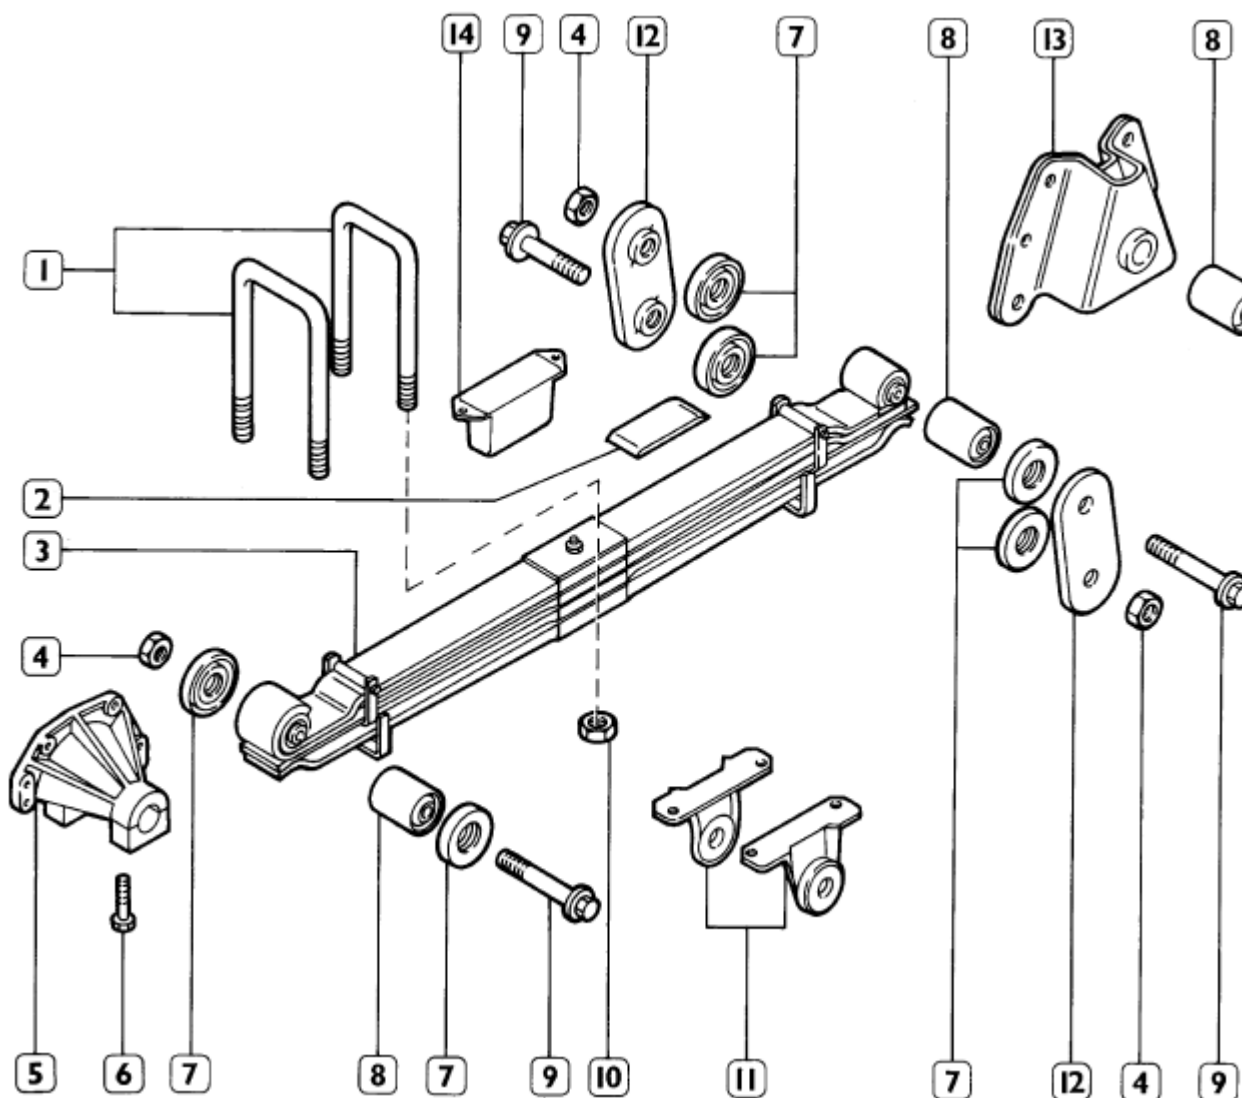


39615

REAR SUSPENSION COMPONENTS

1. Clamping U-bolts - 2. Plate - 3. Leaf spring - 4. Nut - 5. Hanger - 6. Screw - 7. Washers - 8. Bushes -
 9. Shackle pins - 10. Nut - 11. Clamping plates - 12. Shackle plates - 13. Hanger - 14. Bump stop

Aquila Trucks Centres

Figure 3

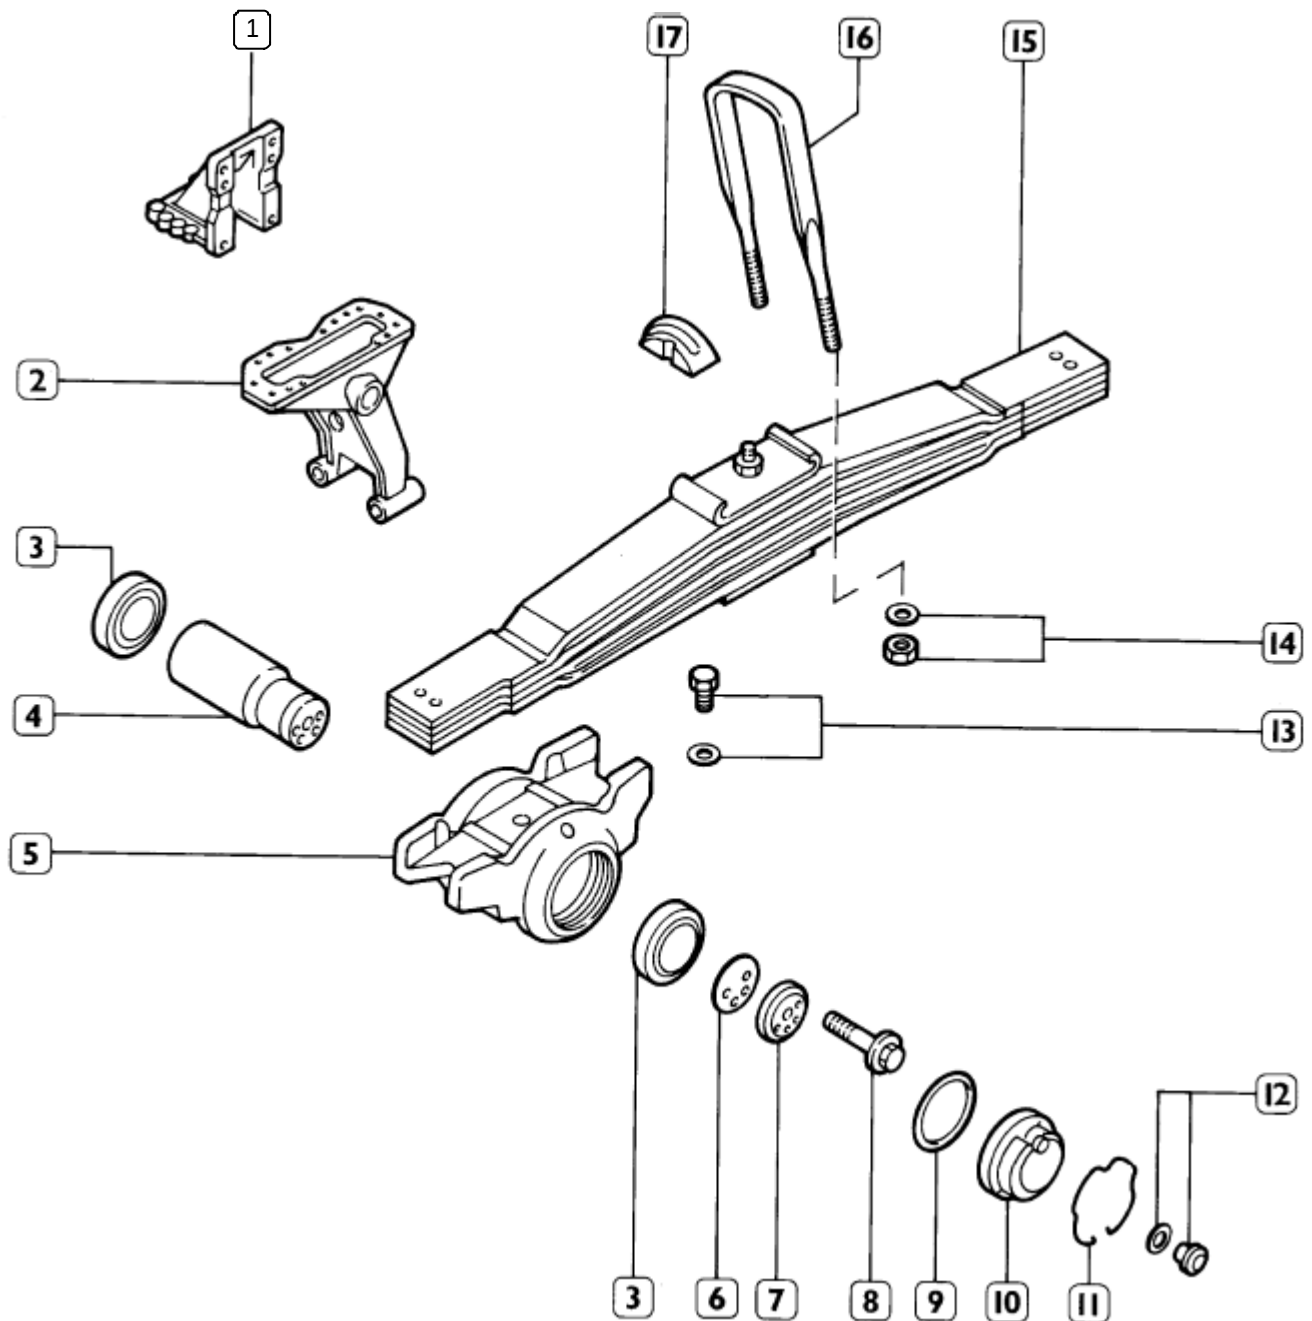


39616

REAR CANTILEVER SUSPENSION COMPONENTS

1. Hanger bracket - 2. Hanger bracket - 3. Angular contact bearing - 4. Central pivot shaft - 5. Central pivot -
 6. Adjustment shim - 7. Plate - 8. Bolt - 9. Seal - 10. Cap - 11. Spring clip - 12. Plug with gasket - 13. Plug with gasket -
 14. Nut with washer - 15. Leaf spring - 16. Clamping U-bolt - 17. Spacer

Aquila Trucks Centres

Figure 4

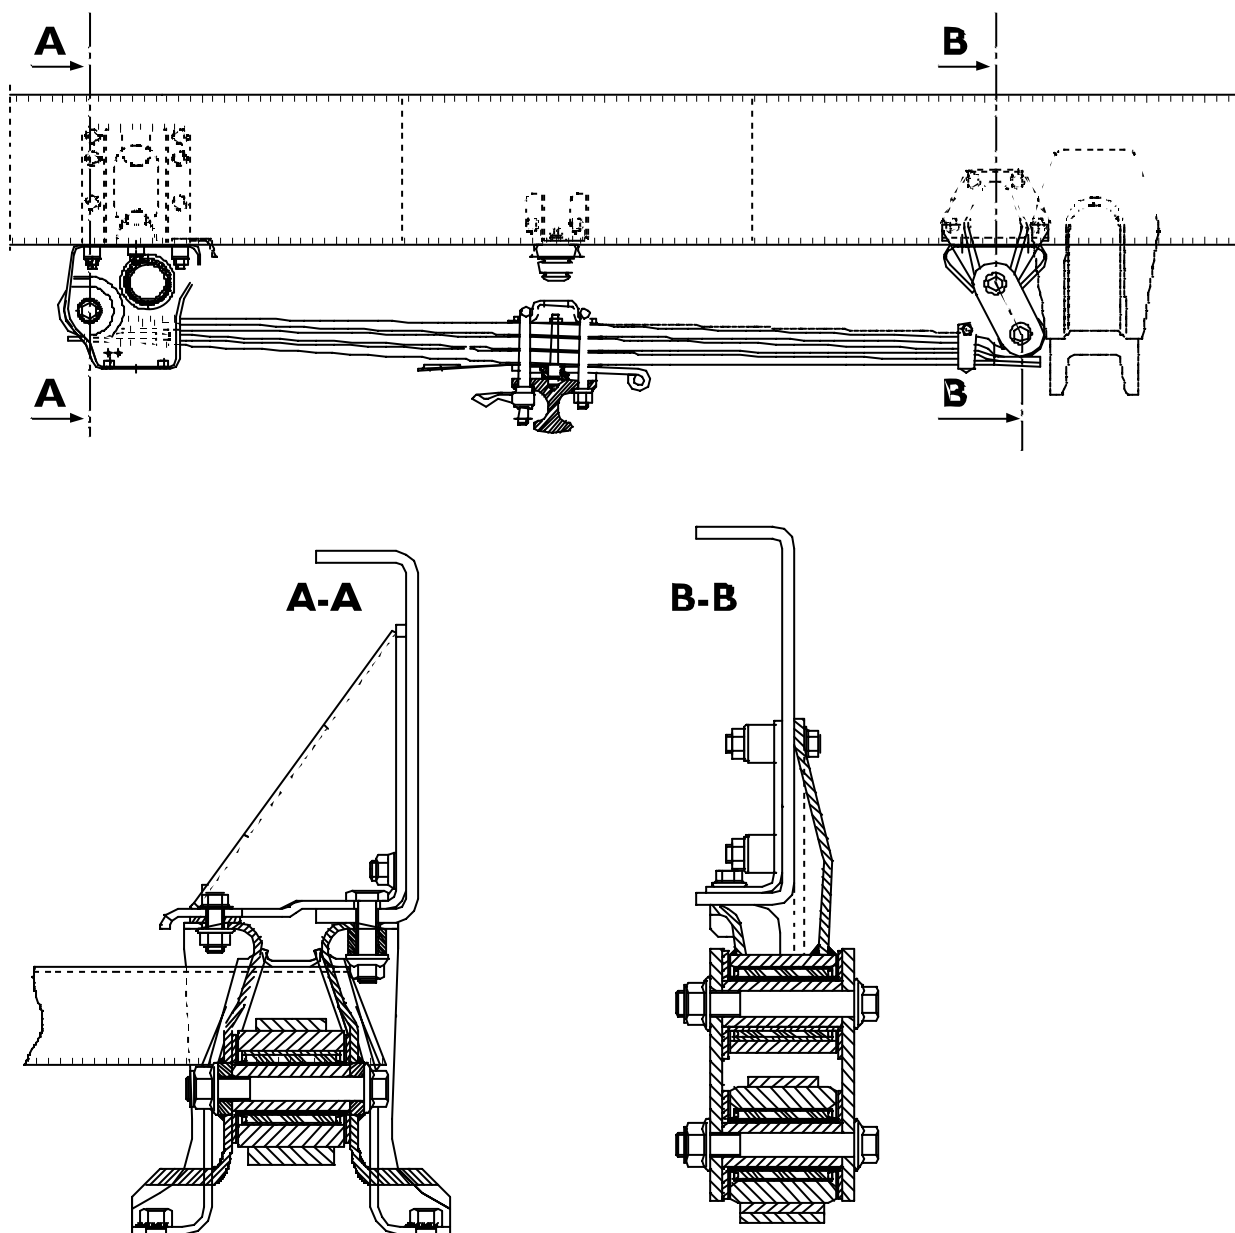


FRONT SUSPENSION WITH PARABOLIC LEAF SPRINGS: 4x2 - 6x4 VEHICLES

72212

Aquila Trucks Centres

Figure 5

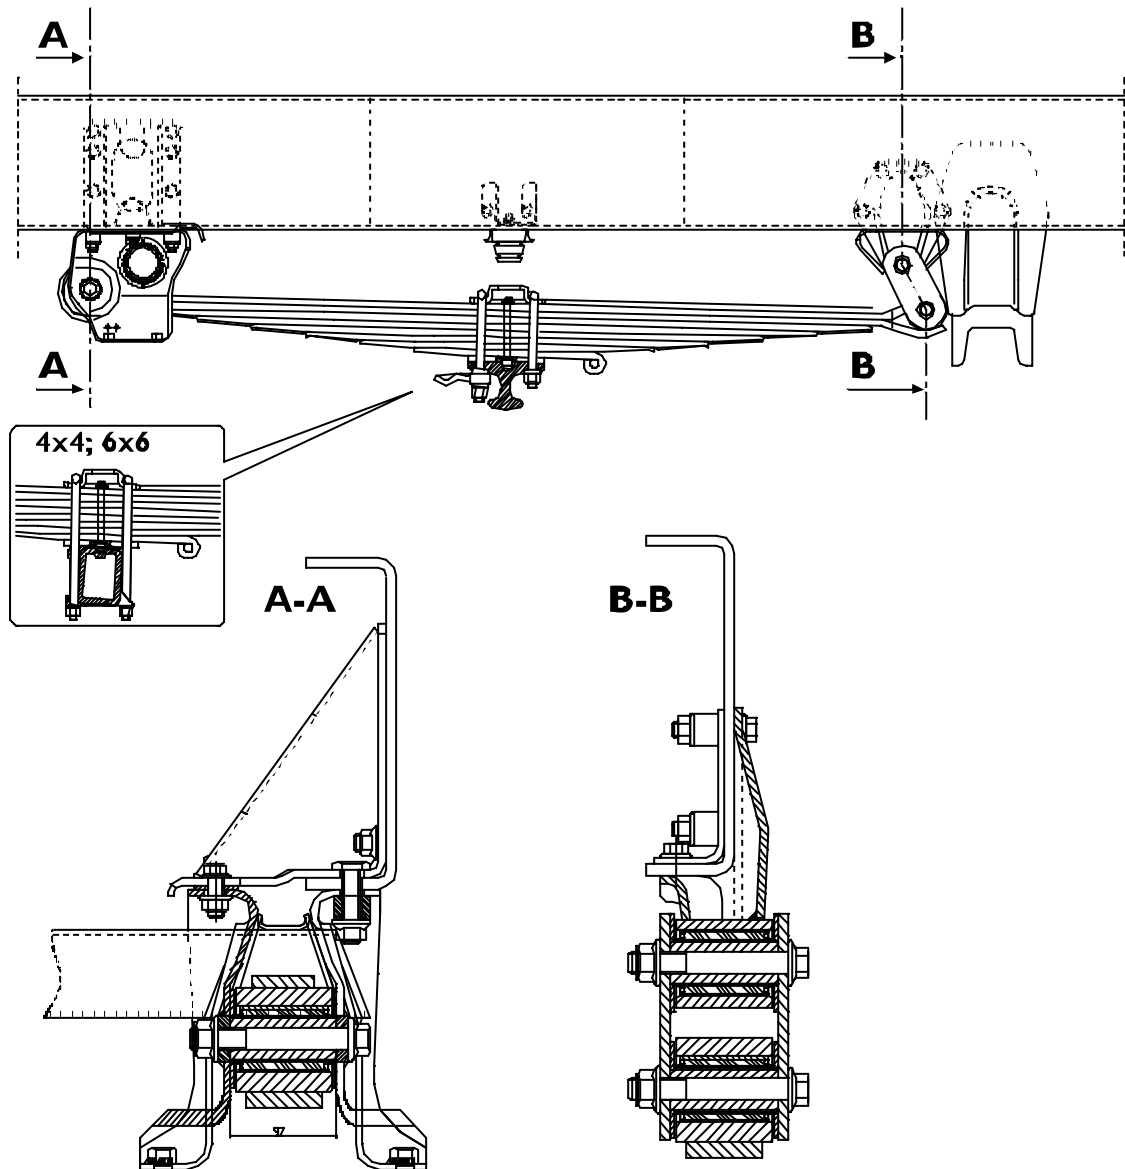


90640

FRONT SUSPENSION WITH SEMI-ELLIPTIC LEAF SPRINGS: 4x2 - 4x4 - 6x4 - 6x6 VEHICLES

Aquila Trucks Centres

Figure 6

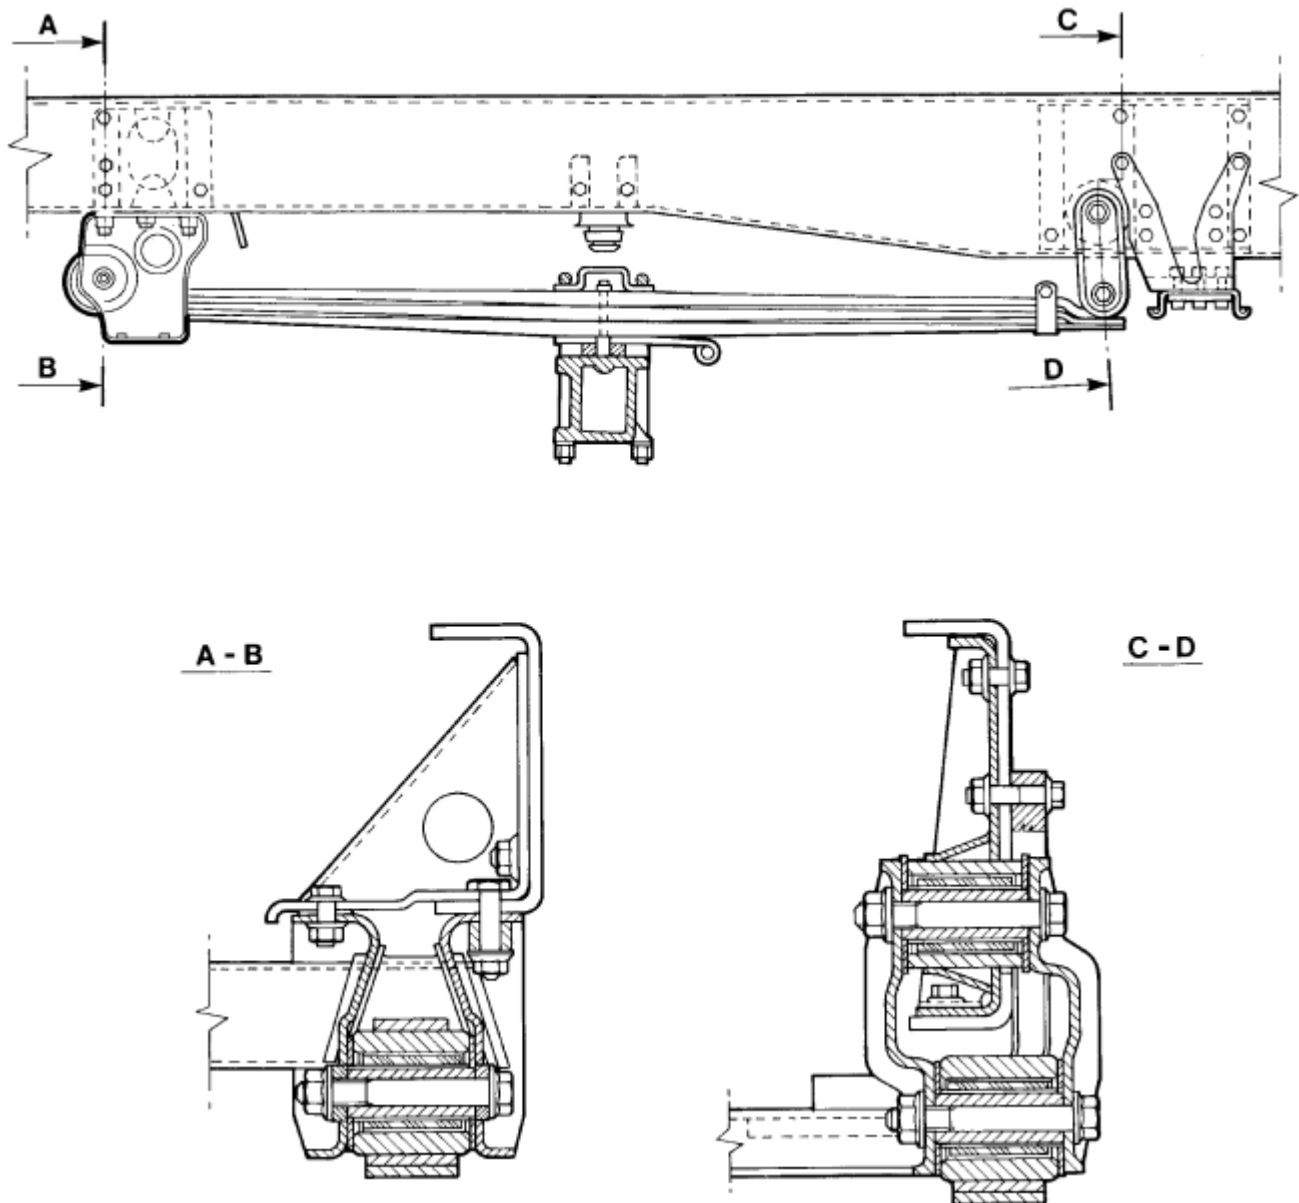


90641

FRONT SUSPENSION WITH PARABOLIC LEAF SPRINGS: 4x4 - 6x6 VEHICLES

Aquila Trucks Centres

Figure 7

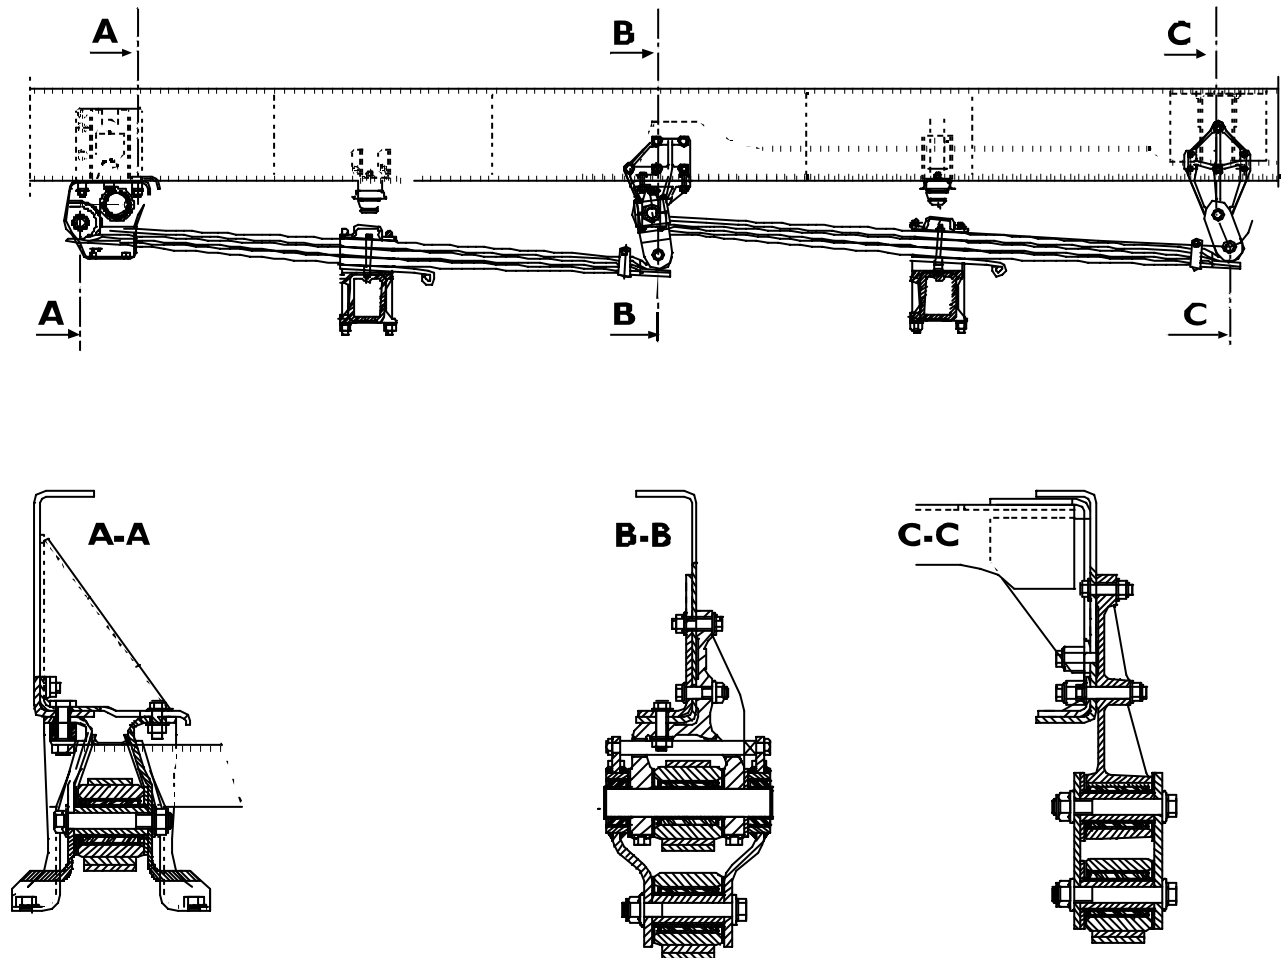


72217

FRONT SUSPENSION WITH PARABOLIC LEAF SPRINGS: 8x4 - 8x8 VEHICLES

Aquila Trucks Centres

Figure 8

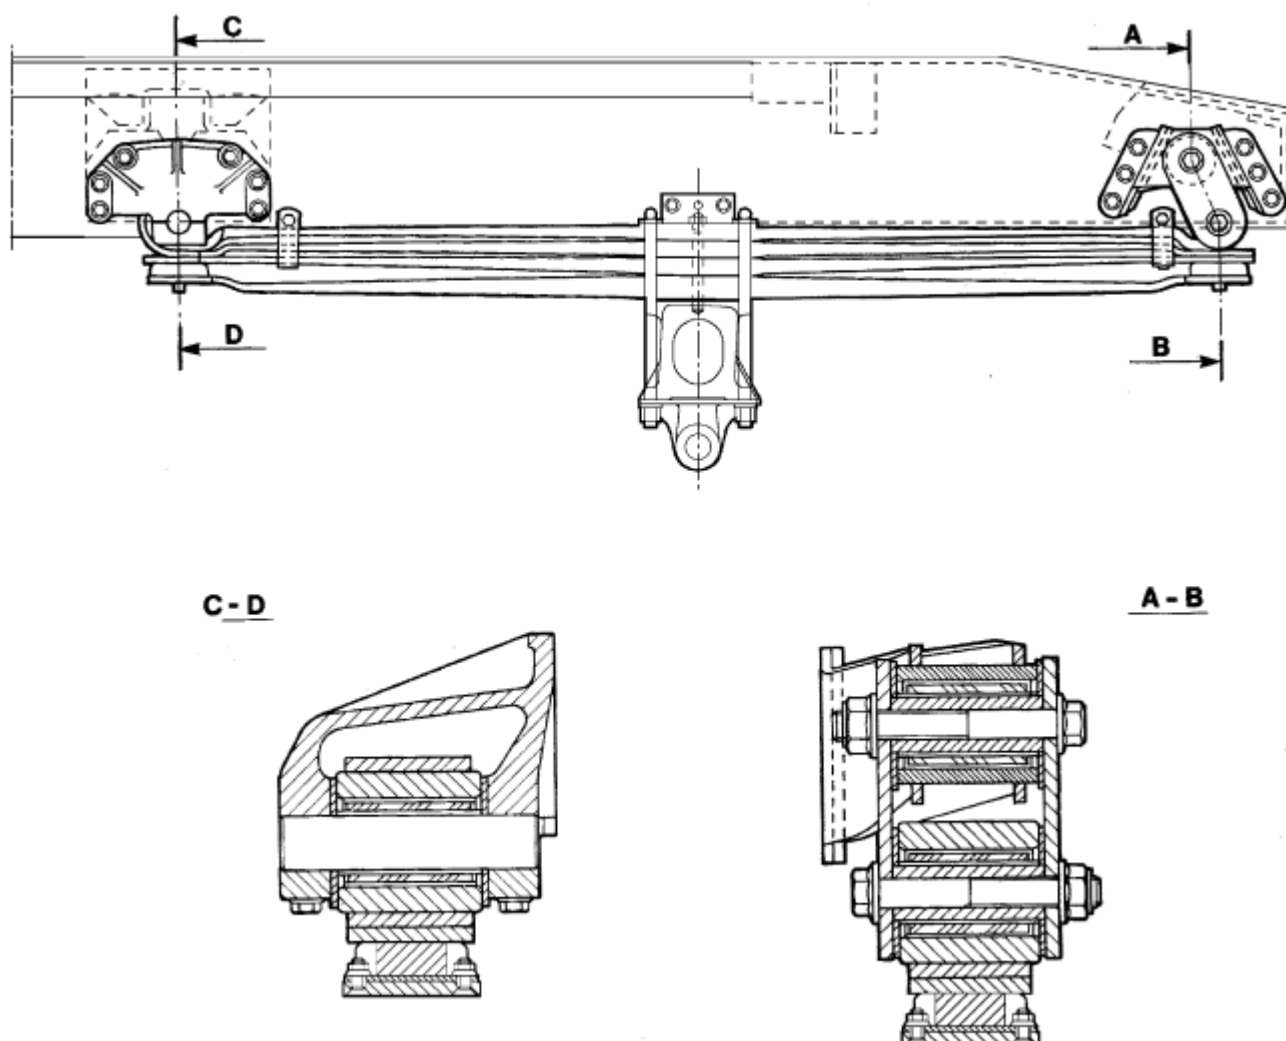


72215

REAR SUSPENSION WITH PARABOLIC LEAF SPRINGS: 4x2 - 4x4 VEHICLES

Aquila Trucks Centres

Figure 9

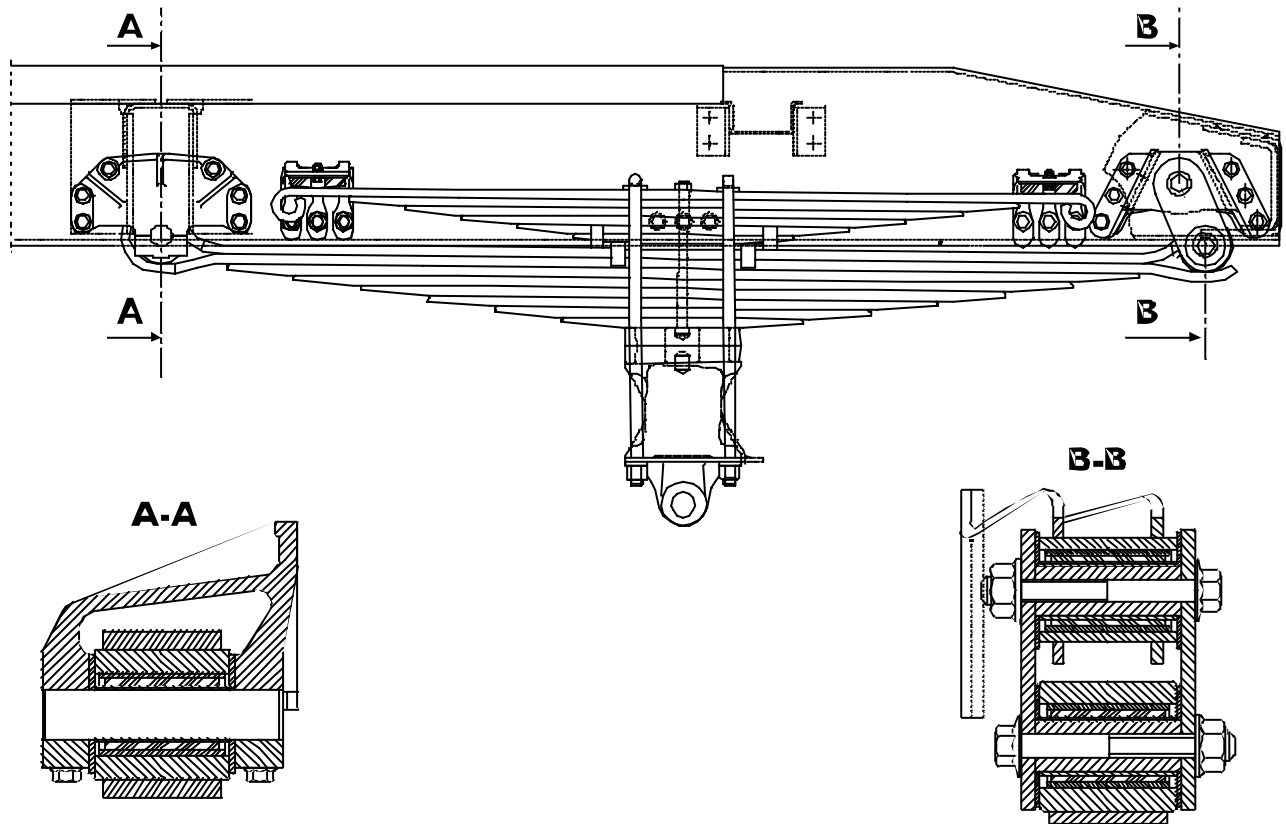


72218

REAR SUSPENSION WITH SEMI-ELLIPTIC LEAF SPRINGS: 4x2 - 4x4 VEHICLES

Aquila Trucks Centres

Figure 10

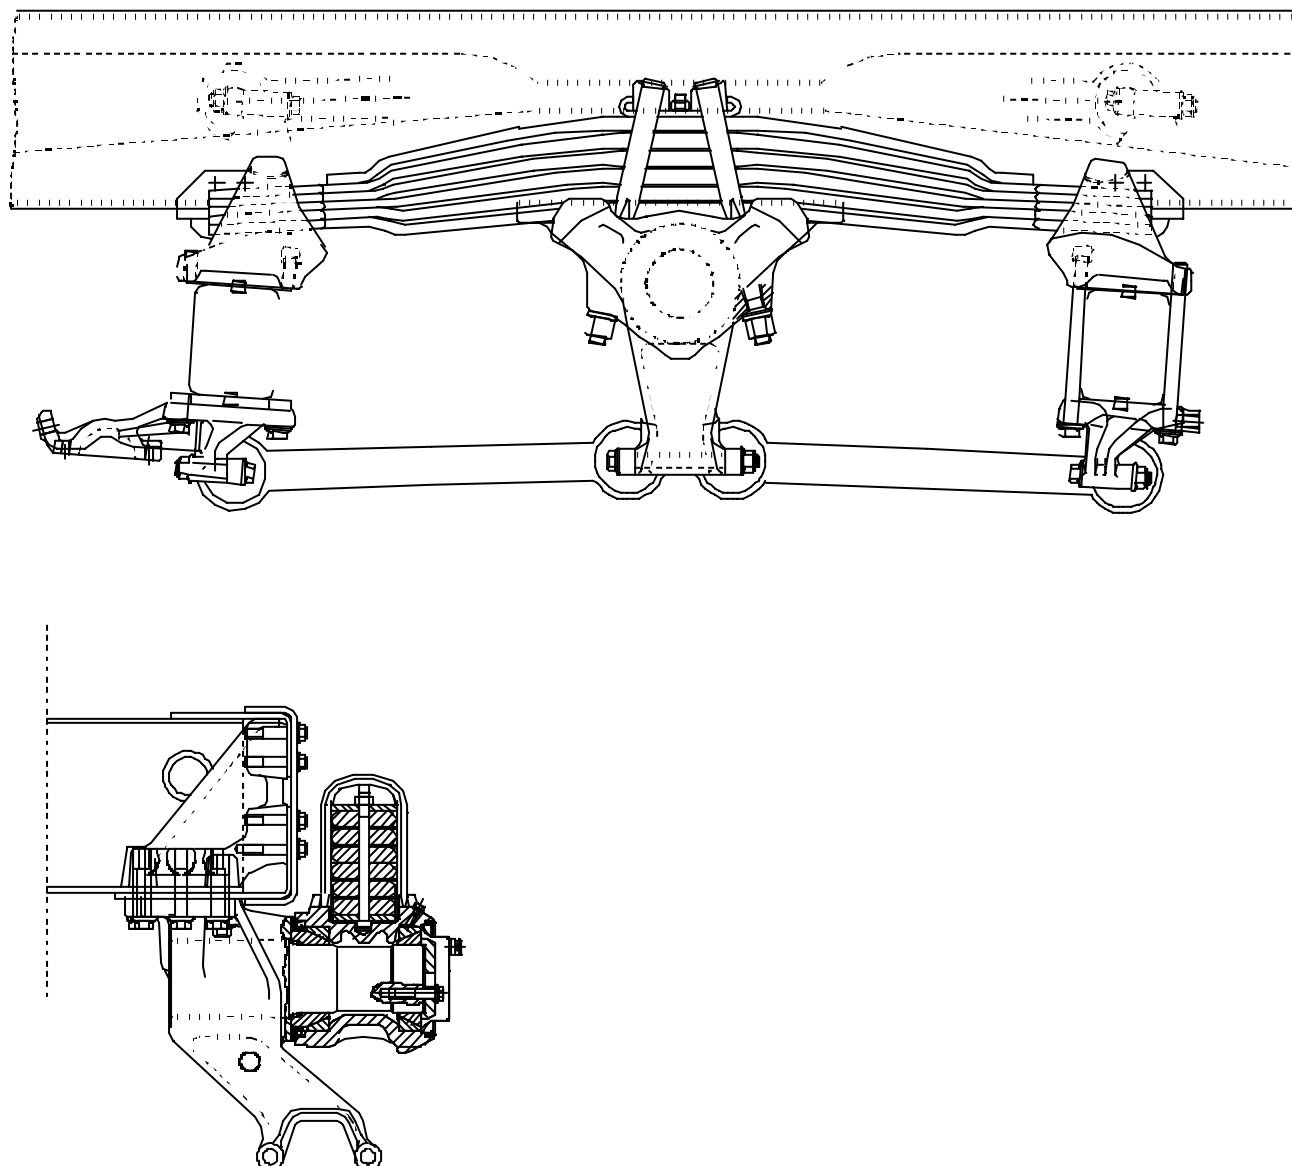


72216

REAR CANTILEVER SUSPENSION WITH PARABOLIC LEAF SPRINGS: 6x4 - 6x6 - 8x4 - 8x8 VEHICLES

Aquila Trucks Centres

Figure 11

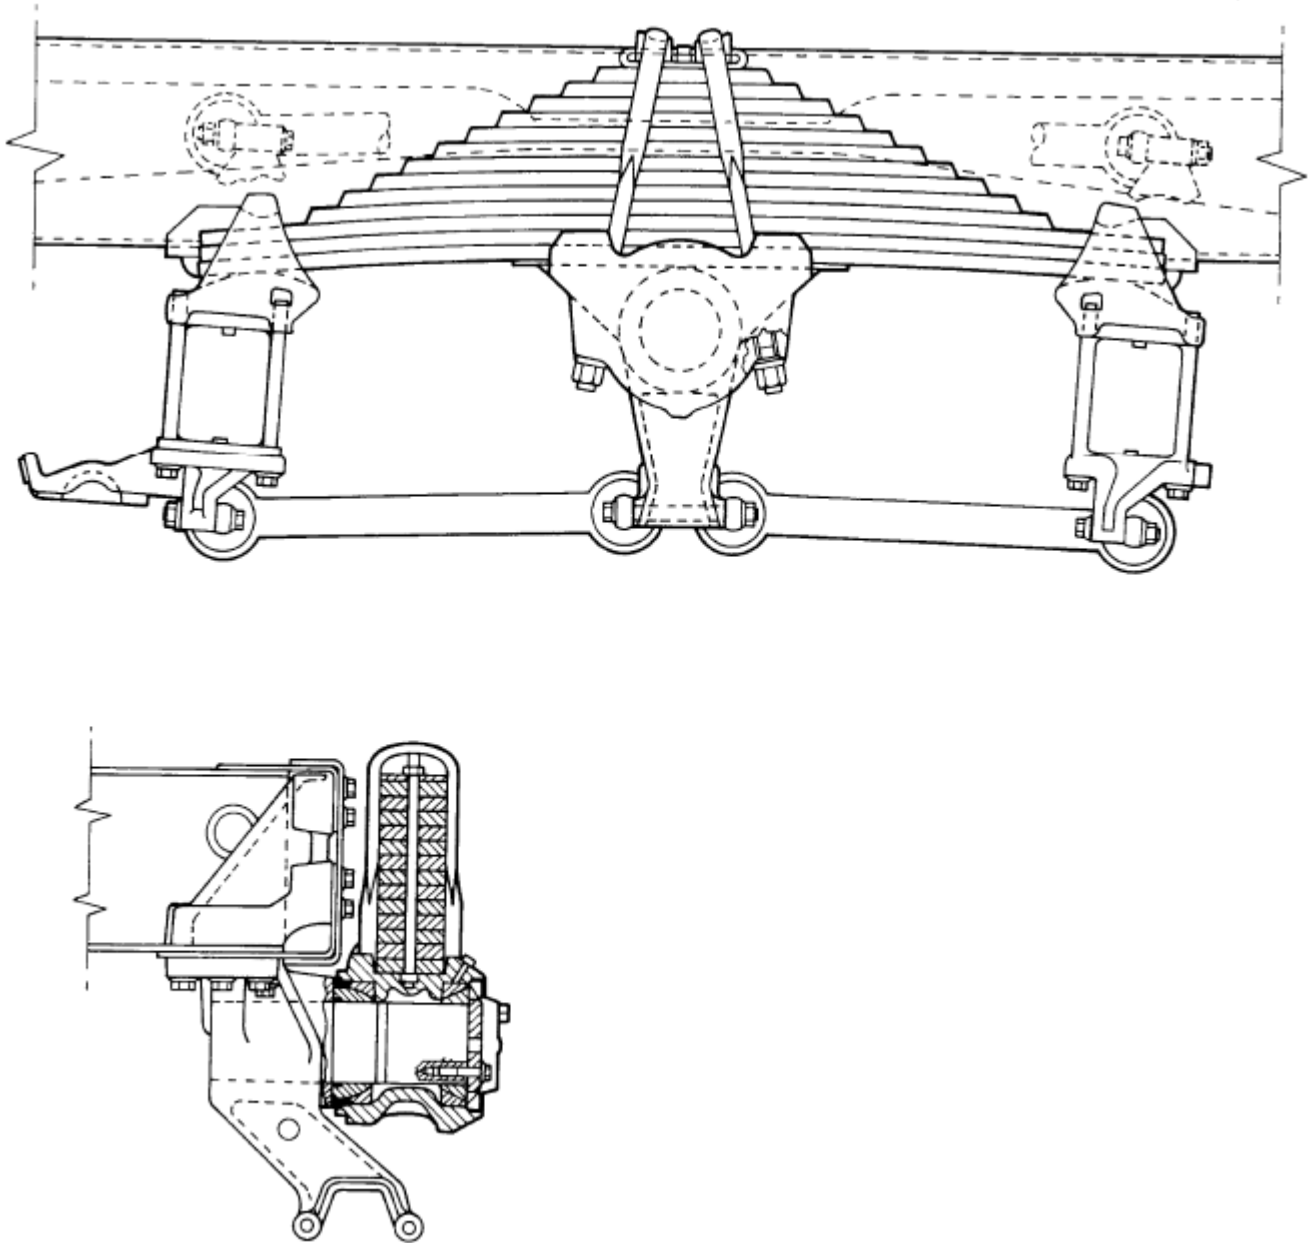







39622

REAR CANTILEVER SUSPENSION WITH SEMI-ELLIPTIC LEAF SPRINGS: 6x4 - 6x6 - 8x4 - 8x8 VEHICLES

Aquila Trucks Centres






MAIN DATA

  FRONT SUSPENSION: 4x2 - 4x4 - 6x4 - 8x4 MODELS

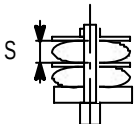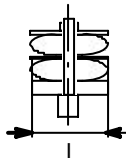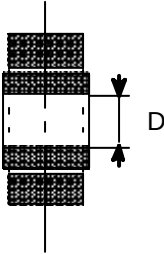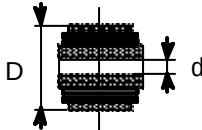		mm
	8 tons parabolic leaf springs	No. 2 No. 4
	Spring length (measured at eye centres)	1900 $^{+0}_{-6}$
	Leaf thickness (measured at centre) - 1 st - 2 nd leaf - 3 rd leaf	30 22
	Distance between leaves	3
	Leaf width	90 ± 0.5
	Inside diameter of master leaf eye (bush seat)	60.1 ÷ 60.2
	D = outside diameter of eye d = inside diameter of eye	20.2 ÷ 20.5
NEW LEAF SPRING CHECK DATA		
	Flexibility mm/KN	4.2 ± 6%







Aquila Trucks Centres

   FRONT SUSPENSION: 6x6 - 8x4 - 8x8 MODELS

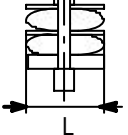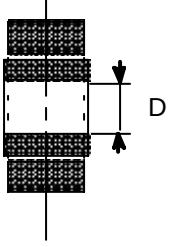		mm
	8 tons parabolic leaf springs	No. 2 No. 4
	Spring length (measured at eye centres)	1900 $^{+0}_{-6}$
	Leaf thickness (measured at centre) - master leaf - 2 nd - 3 rd leaf	25 26
	Distance between leaves	3
	Leaf width	90
	Inside diameter of master leaf eye (bush seat)	60.1 ÷ 60.2
	D = outside diameter of eye d = inside diameter of eye	20.2 ÷ 20.5
NEW LEAF SPRING CHECK DATA		
	Flexibility mm/KN	4.41






Aquila Trucks Centres

 FRONT SUSPENSION: 4x2 - 4x4 - 6x4 - 6x6 - 8x4 - 8x8 MODELS

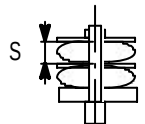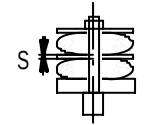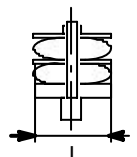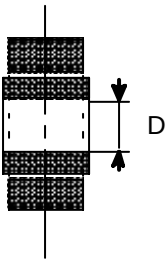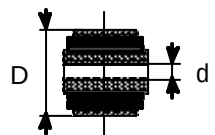		mm
	9 tons parabolic leaf springs:	No. 2 No. 4
	Spring length (measured at eye centres)	1900 $\begin{smallmatrix} + 0 \\ - 6 \end{smallmatrix}$
	Leaf thickness (measured at centre) - master leaf - 2 nd - 3 rd leaf	27 28
	Distance between leaves	3
	Leaf width	90
	Inside diameter of master leaf eye (bush seat)	60.1 ÷ 60.2
	D = outside diameter of eye d = inside diameter of eye	20.2 ÷ 20.5
NEW LEAF SPRING CHECK DATA		
	Flexibility mm/KN	3.63







Aquila Trucks Centres

FRONT SUSPENSION: 4x2 - 4x4 - 6x4 - 6x6 MODELS

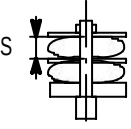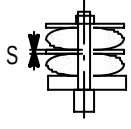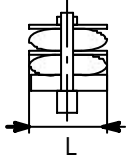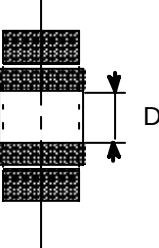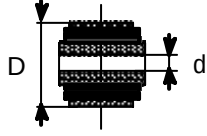		mm
	9 tons semi-elliptic leaf springs:	No. 2
	Spring length (measured at eye centres)	1900 $\begin{smallmatrix} + 0 \\ - 6 \end{smallmatrix}$
	Leaf thickness (1 st $\Rightarrow$ 9 th leaf)	16
	Distance between leaves	3
	Leaf width	90
	Inside diameter of master leaf eye (bush seat)	60.1 $\div$ 60.2
	D = outside diameter of eye d = inside diameter of eye	20.2 $\div$ 20.5
NEW LEAF SPRING CHECK DATA		
	Flexibility mm/KN	3.21





Aquila Trucks Centres

 REAR SUSPENSION: 4x2 - 4x4 MODELS

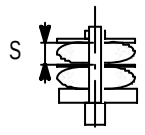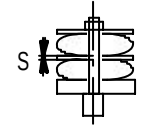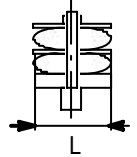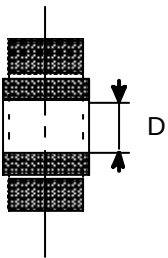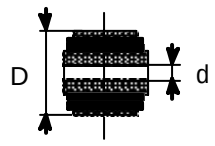		mm
	13.5 tons parabolic leaf springs:	No. 2
	Main spring length (measured at eye centres) Helper spring length (measured at block centres)	1800 ± 3 1800 ± 3
	Thickness of main spring leaves (measured at centre) Thickness of helper spring leaf (measured at centre)	26 40
	Distance between leaves	3
	Leaf width	100
	Inside diameter of master leaf eye (bush seat)	$60.1 \div 60.2$
	D = outside diameter of eye d = inside diameter of eye	$20.2 \div 20.5$
NEW LEAF SPRING CHECK DATA		
	Flexibility mm/KN Flexibility after intervention of helper spring mm/KN	3.45 1.47




Aquila Trucks Centres

 REAR SUSPENSION: 4x2 - 4x4 MODELS

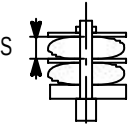

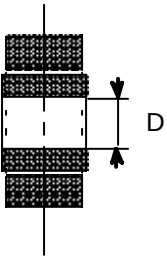
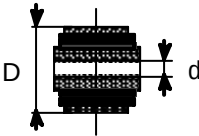
		mm
	14 tons semi-elliptic leaf springs:	No. 2
	Main spring length (measured at eye centres) Helper spring length	1800 ± 3 1360 ± 3
	Thickness of main spring leaves (1 st $\Rightarrow$ 8 th leaves) Thickness of helper spring leaves (1 st $\Rightarrow$ 6 th leaves) Distance between main and helper spring	17 15 10
	Distance between leaves	100
	Inside diameter of master leaf eye (bush seat)	$60.1 \div 60.2$
	D = outside diameter of eye d = inside diameter of eye	$20.2 \div 20.5$
NEW LEAF SPRING CHECK DATA		
	Flexibility mm/KN Flexibility after intervention of helper spring mm/KN	2.27 0.9

Aquila Trucks Centres

 REAR SUSPENSION: 6x4 - 6x6 MODELS

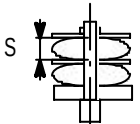
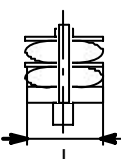
		mm
	13 tons semi-elliptic leaf springs:	No. 2
	Spring length	1485 ± 2
	Leaf thickness (measured at centre)	22
	Leaf width: 1 st ⇒ 3 rd leaves Leaf width: 4 th ⇒ 8 th leaves	96 100
NEW LEAF SPRING CHECK DATA		
	Flexibility mm/KN	0.34

 REAR SUSPENSION: 6x4 - 8x4 MODELS

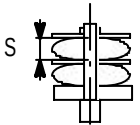
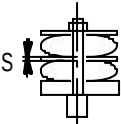
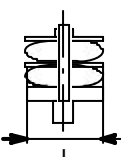
		mm
	16 tons parabolic leaf springs:	No. 2
	Spring length: 1 st - 2 nd - 3 rd leaves 4 th leaf	1480 ± 2 1040
	Leaf thickness: 1 st - 2 nd - 3 rd leaves 4 th leaf (measured at centre)	27 58
	Distance between leaves	3
	Leaf width: 1 st ⇒ 3 rd leaves Leaf width: 3 rd ⇒ 4 th leaves	96 100
NEW LEAF SPRING CHECK DATA		
	Flexibility mm/KN	0.23

Aquila Trucks Centres

REAR SUSPENSION: 6x4 - 6x6 MODELS



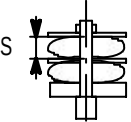
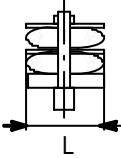
		mm
	16.5 tons semi-elliptic:	No. 2
	Spring length	1475 ± 2
	Leaf thickness (measured at centre)	22
	Leaf width: 1 st ⇒ 3 rd leaves Leaf width: 4 th ⇒ 11 th leaves	96 100
NEW LEAF SPRING CHECK DATA		
	Flexibility mm/KN	0.25

REAR SUSPENSION: 6x4 - 6x6 - 8x4 MODELS

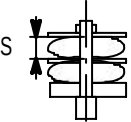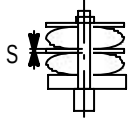
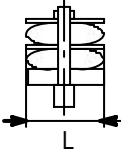
		mm
	10.5 tons parabolic leaf springs:	No. 2
	Spring length: 1 st - 2 nd - 3 rd leaves 4 th leaf	1480 ± 2 1040
	Leaf thickness: 1 st - 2 nd - 3 rd leaves 4 th leaf (measured at centre)	26 43
	Distance between leaves	3
	Leaf width: 1 st ⇒ 3 rd leaves Leaf width: 3 rd ⇒ 4 th leaves	96 100
NEW LEAF SPRING CHECK DATA		
	Flexibility mm/KN	0.39

Aquila Trucks Centres

 REAR SUSPENSION: 6x4 - 6x6 - 8x4 - 8x8 MODELS


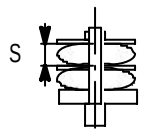
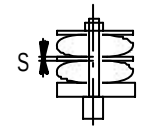
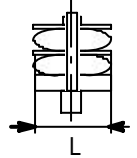
		mm
	13 tons parabolic leaf springs:	No. 2
	Leaf thickness: 1 st - 2 nd - 3 rd leaves 4 th leaf	1480 ± 2 1040
	Leaf thickness: 1 st - 2 nd - 3 rd leaves 4 th leaf (measured at centre)	26 53
	Distance between leaves	3
	Leaf width: 1 st ⇒ 3 rd leaves Leaf width: 3 rd ⇒ 4 th leaves	96 100
NEW LEAF SPRING CHECK DATA		
	Flexibility mm/KN	0.29

REAR SUSPENSION: 6x4 - 6x6 - 8x4 - 8x8

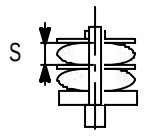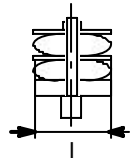		mm
	16 tons semi-elliptic leaf springs:	No. 2
	Spring length	1480 ± 2
	Leaf thickness (measured at centre)	22
	Leaf width: 1 st ⇒ 3 rd leaves Leaf width: 4 th ⇒ 13 th leaves	96 100
NEW LEAF SPRING CHECK DATA		
	Flexibility mm/KN	0.22





Aquila Trucks Centres

    FRONT SHOCK ABSORBERS

SHOCK ABSORBERS			MANNESMANN SACHS	ARVIN
	Length between the eye centre and the end:			
	Open		778 ± 3	777 ± 3
	Closed		448 ± 3	452 ± 3
	Stroke		330	324
MODELS 4x2 - 6x4				
SHOCK ABSORBERS			MANNESMANN SACHS	ARVIN
	Length between the eye centre and the end:			
	Open		754 ± 3	751 ± 3
	Closed		434 ± 3	435 ± 3
	Stroke		320	316
TRACTORS 4x2 - 6x4				
SHOCK ABSORBERS			MANNESMANN SACHS	ARVIN
	Length between the eye centre and the end:			
	Open		754 ± 3	754 ± 3
	Closed		434 ± 3	432 ± 3
	Stroke		320	322
CABIN TRUCK 4x2 - 6x4				
SHOCK ABSORBERS			MANNESMANN SACHS	ARVIN
	Length between the eye centre and the end:			
	Open		754 ± 3	754 ± 3
	Closed		434 ± 3	432 ± 3
	Stroke		320	322
MODELS 8x4 - 8x8				
SHOCK ABSORBERS			MANNESMANN SACHS	ARVIN
	Length between the eye centre and the end:			
	Open		689 ± 3	693 ± 3
	Closed		409 ± 3	413 ± 3
	Stroke		280	280
MODELS 4x4 - 6x6				

Aquila Trucks Centres

    REAR SHOCK ABSORBERS

SHOCK ABSORBERS		SACHS BOGE		ARVIN
	Length between rubber bush mounting surfaces:			
	Open	720 ± 3		720 ± 3
	Closed	410 ± 3		412 ± 3
	Stroke	310		308
MODELS 4x2 - 4x4				
SHOCK ABSORBERS		SACHS BOGE		
	Length between rubber bush mounting surfaces:			
	Open	762 ± 3		-
	Closed	432 ± 3		-
	Stroke	330		-
MODELS 4x4				
SHOCK ABSORBERS		MANNESMANN SACHS		ARVIN
	Length between rubber bush mounting surfaces:			
	Open	652 ± 3		652 ± 3
	Closed	402 ± 3		404 ± 3
	Stroke	250		248
MODELS 4x2 - 4x4 - 6x4 - 6x6 - 8x4				
SHOCK ABSORBERS		MANNESMANN SACHS		ARVIN
	Length between rubber bush mounting surfaces:			
	Open	840 ± 3		839 ± 3
	Closed	500 ± 3		500 ± 3
	Stroke	340		339
MODELS 6x4 - 6x6 - 8x4 - 8x8				

Aquila Trucks Centres

AIR SUSPENSION

The air suspensions are highly flexible; they have a considerable vibration-damping capacity and, above all, irrespective of the load on the vehicle, due to the system's self-adjustment, the "chassis frame – road surface" distance stays constant. By simply pressing a push-button the air suspensions can change the "chassis frame – road surface" distance and therefore the height of the vehicle's loading deck. Besides the well-known benefits provided by the air suspension, the ECAS system provides:

- considerable reduction in air consumption;
- ready response to the various adjustment processes;
- simplified systems;
- wide safety margins;
- full system diagnosis.

The ECAS (Electronically Controlled Air Suspension) system automatically controls the nominal level of the vehicle's air suspensions.

All the above operations anyhow have the constraint of specific operating conditions and the associated safety devices of the systems connected to them.

The ECAS electronic control unit automatically controls the level (distance off the road surface) of the chassis frame with the actual values supplied by the sensors, comparing them with the nominal values saved in memory.

In the event of moving away or the attitude changing, the electronic control unit governs the electro-pneumatic assemblies with which the actual level is corrected compared to the nominal one set or saved previously by the driver.

The system has a remote control for lifting/lowering and levelling the chassis frame and it is possible to work with the vehicle either stationary or moving.

Besides lifting, lowering and self-levelling, the remote control makes it possible to save other chassis frame attitude levels and call them up when required.

Chassis frame lifting lowering and self-levelling with remote control

Lifting, lowering and levelling the vehicle before loading and unloading it is done with the remote control located next to the driver's seat.

The remote control can be removed from its mounting so these manoeuvres can be done from the ground too.




When unloading heavy loads or containers (with a crane), lower the chassis frame completely.



Do not stop the engine if the indicator light (10) comes on. If the indicator light (9) comes on while driving, stop the vehicle and turn the ignition key onto "STOP"; after approximately (7) seconds, turn the key onto MAR (start). If after approximately two seconds the indicator light (9) does not go out, call the Service Network.

Figure 12

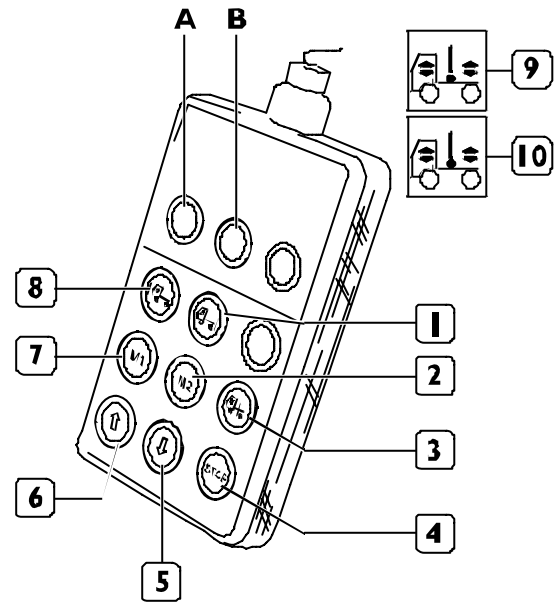

78792

Lift/lower the chassis frame as described below:

- Turn the ignition switch onto MAR (start). The yellow and red indicator lights (9) and (10) will come on for approximately 3 seconds.
- Press the push-button (1 and 8) to select the rear axle. The indicator light A-B comes on to show the selection made (to cancel the selection, press the button again).
- Pressing the buttons (5 and 6) and keeping them pressed lifts or lowers the chassis frame.

Briefly press the push-button (3), the chassis frame will go back into its normal self-levelling position.

The indicator light (9) goes out as soon as the normal level is reached.

The "STOP" push-button (4) stops any action the system is performing.



After loading/unloading and before starting off again, you must bring the vehicle back into its normal self-levelling position by pressing the button (3).

Saving Levels

With buttons (2) and (7), it is possible to save and call up two chassis-frame positions:

- Take the chassis frame to the required height by following the above instructions.
- Press the STOP button (4) and keep it pressed while pressing one of the buttons (2) or (7).
- Release the button (4). The chassis-frame position has been saved.


To call up a saved position, press the associated button (2) or (7).

Aquila Trucks Centres

AIR SUSPENSION SYSTEM DIAGRAMS

Rear air suspension main diagram for 4x2T/P (tractors)

Figure 13

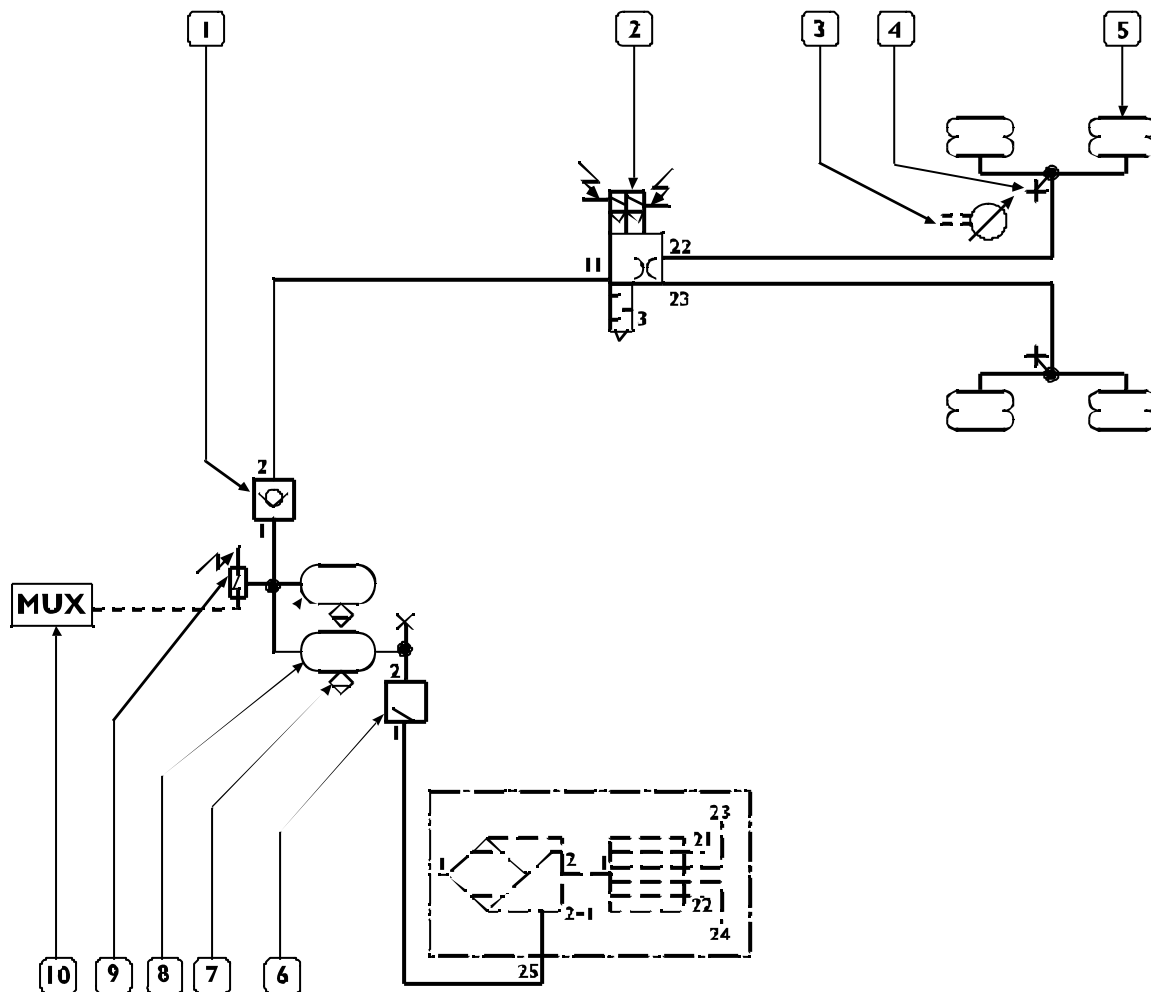


73706

1. Check valve - 2. Rear axle electropneumatic distributor - 3. Rear level sensor - 4. Pressure control intake -
 5. Rear axle air spring - 6. Pressure relief valve with limited return - 7. Condensate hand bleeder - 8. 20 Lt. air reservoirs -
 9. Pressure gauge (opening pressure 8 bar) - 10. Pilot lamp (air suspension low pressure).

Aquila Trucks Centres

Rear air suspension main diagram for 4x4 vehicles (trucks)

Figure 14

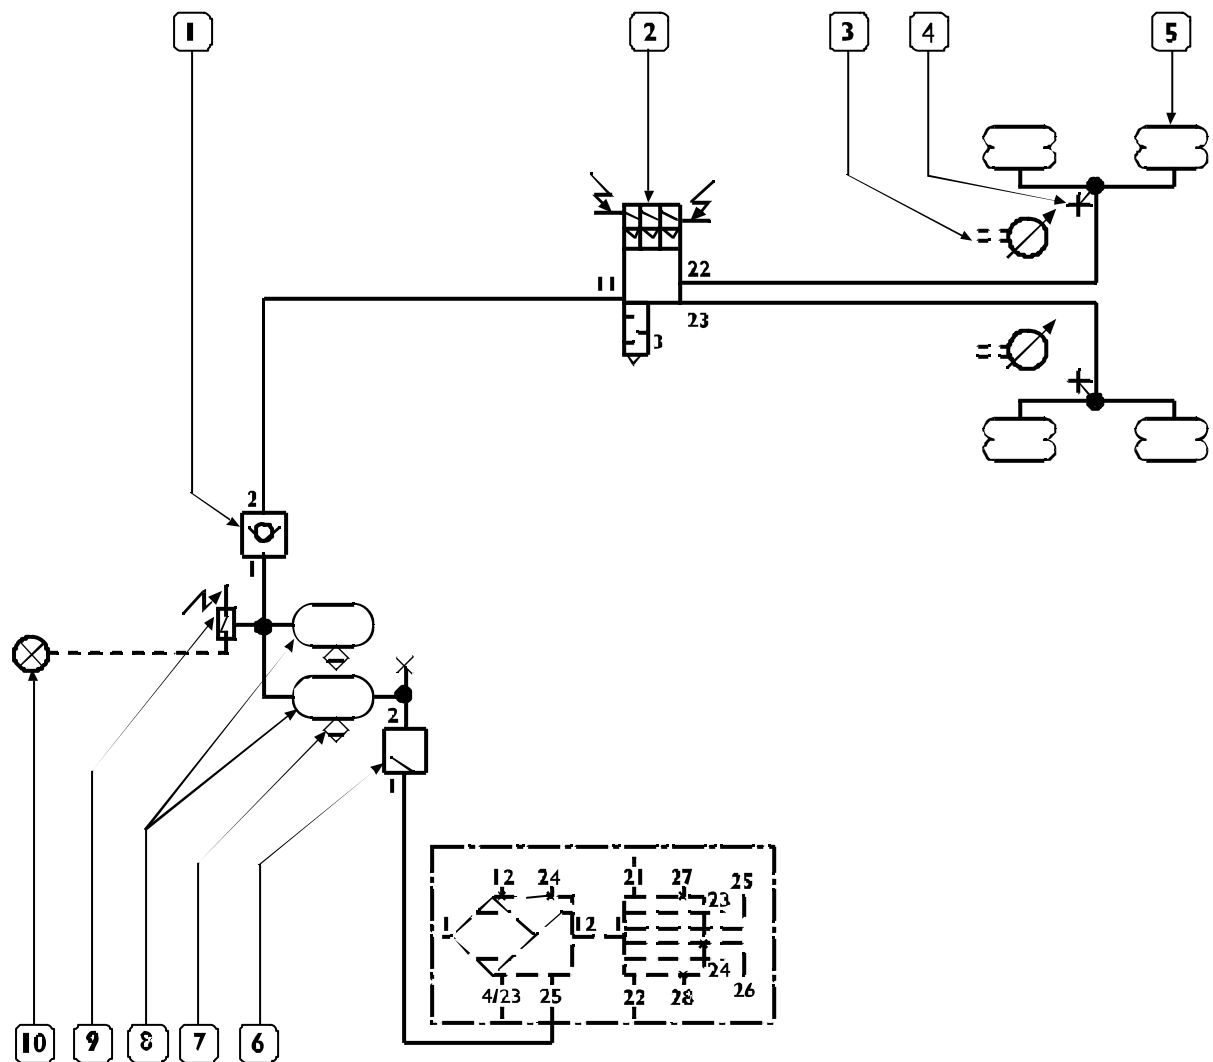


60905

1. Check valve - 2. Rear axle electropneumatic distributor - 3. Rear level sensor - 4. Pressure control intake -
 5. Rear axle air spring - 6. Pressure relief valve with limited return - 7. Condensate hand bleeder - 8. 20 lt. air reservoirs -
 9. Pressure gauge (opening pressure 8 bar) - 10. Pilot lamp (air suspension low pressure).

Aquila Trucks Centres

Working diagram of pneumatic rear suspensions for 6x4 - 8x4 vehicles (trucks and tractors)

Figure 15

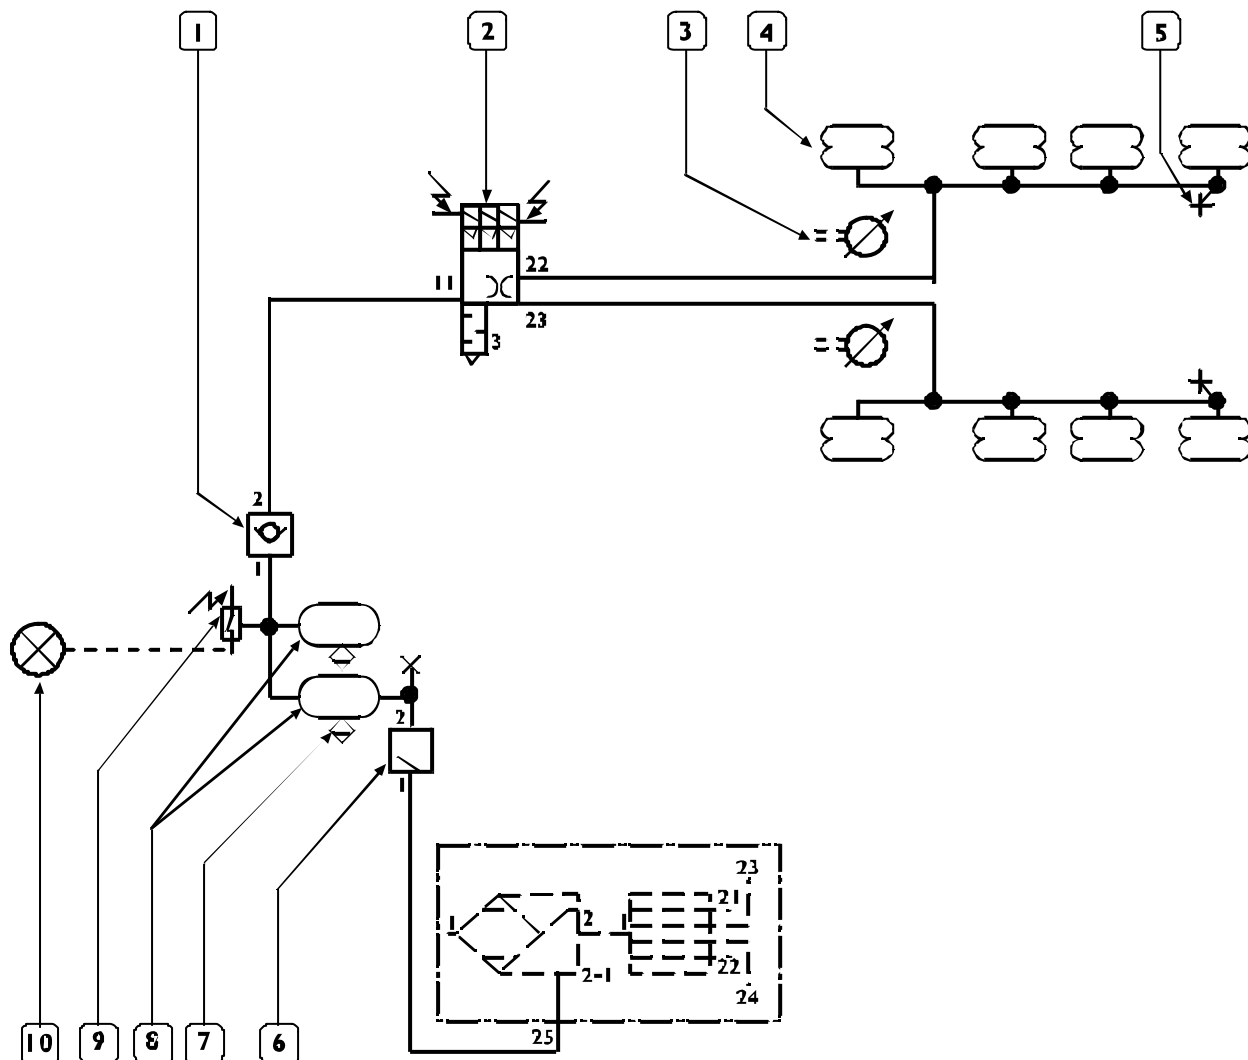

77868

1. Check valve – 2. Rear axle electro-pneumatic control valve – 3. Rear level sensor – 4. Rear axle air spring – 5. Pressure test point – 6. Controlled pressure valve with limited return (opening pressure 8.5 bars) – 7. Manual condensate bleed valve – 8. 30-litre air tanks – 9. Pressure switch (opening pressure 8 bars) – 10. Pilot lamp (air suspension low pressure)

Aquila Trucks Centres

MAIN DATA**Pneumatic system**

DESCRIPTION

Relief valve

- Type: KNORR-BREMSE DR 4248 - WABCO 434 100 232

Opening pressure

8,5 $\begin{smallmatrix} +0 \\ -0,3 \end{smallmatrix}$ bar

Electropneumatic distributors

- Type: WABCO 472 880 001

Power supply voltage

24 $\begin{smallmatrix} +6 \\ -4,4 \end{smallmatrix}$ V

Rated current

0.34A

Operating pressure

5 $\div$ 13 bar

Level sensors

- Type: WABCO 441 050 0120

Power supply voltage

Pulse 8 to 16 V

Measurement criteria

Inductive

Current absorption

Max 90 mA

Lever angle

Max 100°

Air low pressure manometer switch

- Type: TDS F13046 S

Operating voltage

12/24 V

Electric load allowed

0.001 $\div$ 1 A

Max. operating pressure

12 bar

Hand condensate bleeder

- Type: VOSS 52089975

Max. operating pressure

13 bar

Air reservoirs

Reservoirs

20 Litres

Electronic unit

- Type: WABCO 446 170 211

Supply voltage


24 V

Aquila Trucks Centres

MAIN COMPONENTS OF THE PNEUMATIC SYSTEM

793824 Relief valve

Figure 16

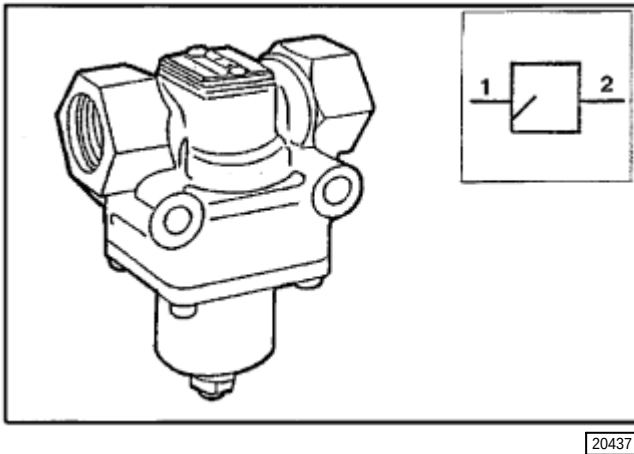

20437

This is a limited-return valve carrying out two functions:


- Stopping the flow of compressed air feeding the reservoirs when the pressure inside the latter decreases under a set value (calibration) due to a malfunction or to excessive withdrawals.
- Feeding these reservoirs as soon as the braking system achieves a value ensuring a perfect efficiency in braking.

Fault diagnosis

INCONVENIENT	POSSIBLE CAUSE	SOLUTION
Breathing at outlet	Leak from the membrane	Overhaul the equipment replacing worn components
Air leak form the two half-body connection	Leak from the membrane fixing	
Delivery breathing (in the atmosphere) with feeding at a pressure lower than the rated one	Leak form the intake valve or form the relevant seat	Overhaul the equipment replacing worn components.

Level sensor

Figure 17

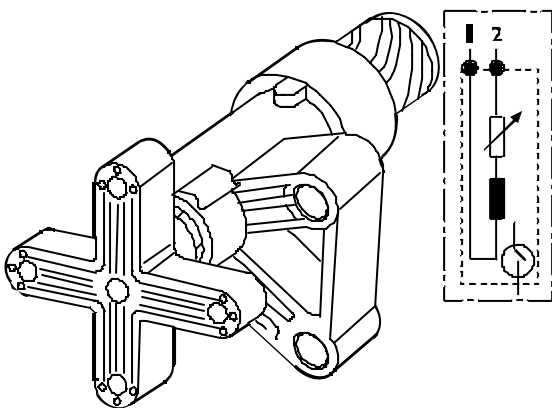

73807

The lever sensor constantly informs the electronic control unit on the changes in the chassis attitude with respect to the roadway.


The sensor consists of a coil, fixed to the chassis, where a piston connected by means of a cam to the lever secured to the vehicle axle is moved.

At a change in the distance between chassis and vehicle axle, the lever rotates and moves the piston causing the consequent change of the self-inductance of the coil electrically connected to the electronic control unit.

Aquila Trucks Centres

Electropneumatic distributor

Figure 18

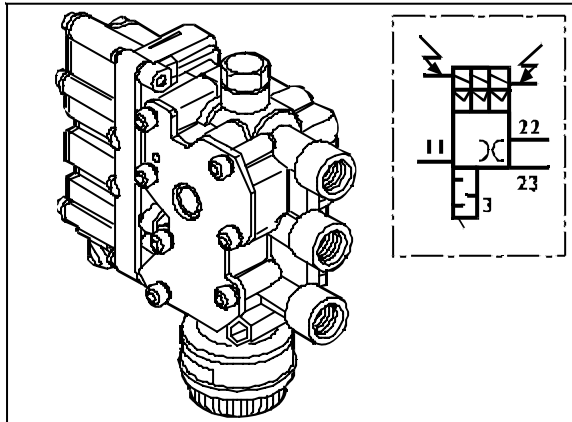


73810

The electropneumatic distributor consists of a group of solenoid valves, whose concentration reduces both the structure volume and the use of connections.

The solenoid valves are directly controlled by the electronic control unit and allow to increase, decrease or keep the volume of air in the pneumatic cells.

Air low pressure manometer switch

Figure 19

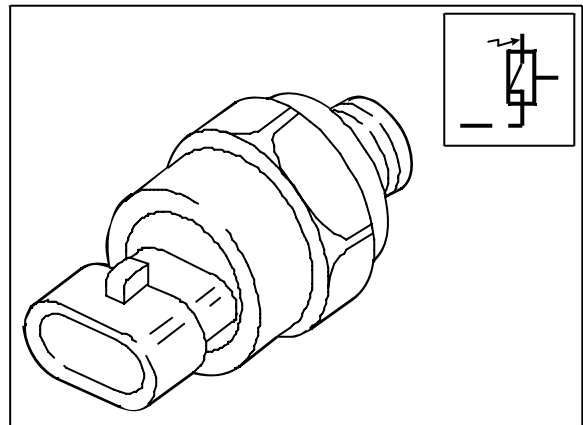


52723

The manometer switch is located near the service air reservoir, on the delivery piping for the air spring suspensions.

Its function is to indicate low (< 8 bar) feed pressure through an optical indicator on the dashboard

5007 Air spring

Figure 20

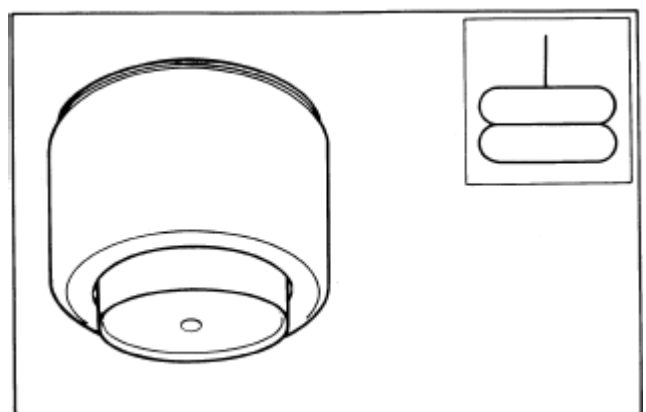

30106

It is a flexible element containing air under pressure and able to change its extension irrespective of the value of the applied load.


Aquila Trucks Centres

CHASSIS ADJUSTMENT

Adjustment is carried out by using pads 99342647 and adjusting levelling valves in order to realise X distances shown in the figures.

Rear pneumatic suspension for vehicles 4x2 - 4x4

Figure 21

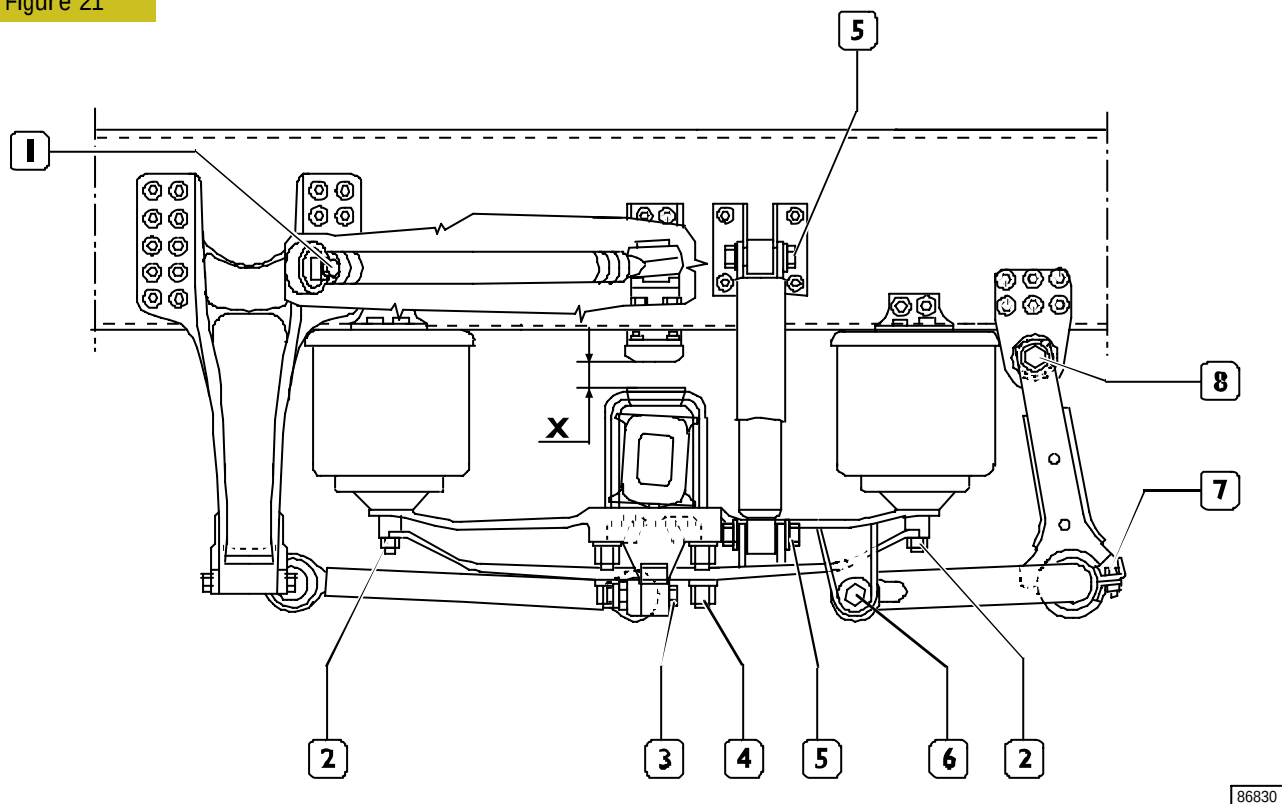

REAR SUSPENSION ASSEMBLY DRAWING


DESCRIPTION		TORQUE	
		Nm	kgm
1	M18 x 1.5 screw fixing triangular arm to bracket	320 to 385	32 to 38.5
2	Nut fixing air springs to the mounting	83 to 101	8.3 to 10.1
3	M18 x 1.5 nut for screw fixing longitudinal rod	375 to 460	37.5 to 46
4	M24 x 2 nut with collar for brackets fixing rear axle to rear mounting	576 to 704	57.6 to 70.4
5	M20 nut for screw fixing top and bottom shock absorber	210 to 250	21 to 25
6	M20 nut for pin fixing stabilizer bar to mounting	636 to 777	63.6 to 77.7
7	M12 nut for bolt fixing stabilizer bar to link rod	165 to 200	16.5 to 20
8	M20 nut for pin fixing link rod to mounting	636 to 777	63.6 to 77.7

X = 60 mm

Aquila Trucks Centres

Rear pneumatic suspension for vehicles 6x4 - 8x4 with SR rear axles

Figure 22

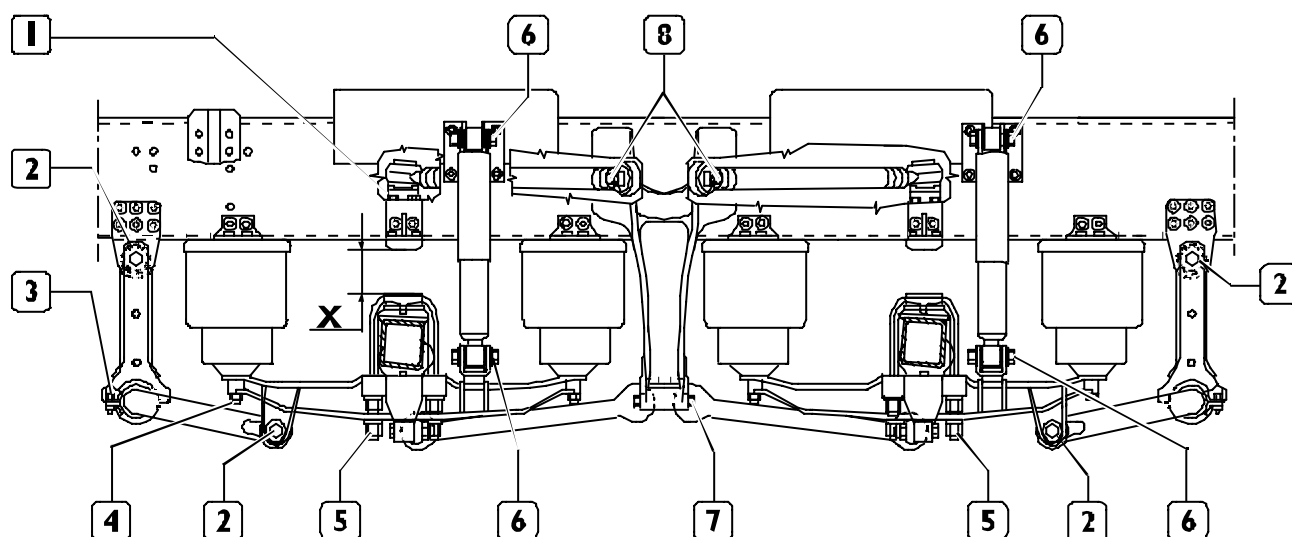

86831

REAR SUSPENSION ASSEMBLY


DESCRIPTION		TORQUE	
		Nm	(kgm)
1	Triangular arm screw M18 at rear axle casing	270 to 300	(27 to 33)
2	Flanged nut M20 to secure stabiliser bar on air spring support and to secure articulated connecting rod on chassis bracket	636 to 777	(63.6 to 77.7)
3	Nut for screw to secure elastic anchoring member to articulated connecting rod	165 to 200	(16.5 to 20)
4	Nut to secure air spring to support	83 to 101	(8.3 to 10.1)
5	Nut M24 with collar for brackets to secure rear axle to suspension support	576 to 704	(57.6 to 70.4)
6	Nut M20 to secure rear axle shock absorber on top and bottom	210 to 250	(21 to 25)
7	Nut M18x1,5 to secure side rods	375 to 460	(37.5 to 46)
8	Screw M18 to secure triangular arm to bracket	320 to 385	(32 to 38.5)

X = 125 mm

Aquila Trucks Centres

Rear pneumatic suspension for vehicles 6x4 - 8x4 with HR rear axles

Figure 23

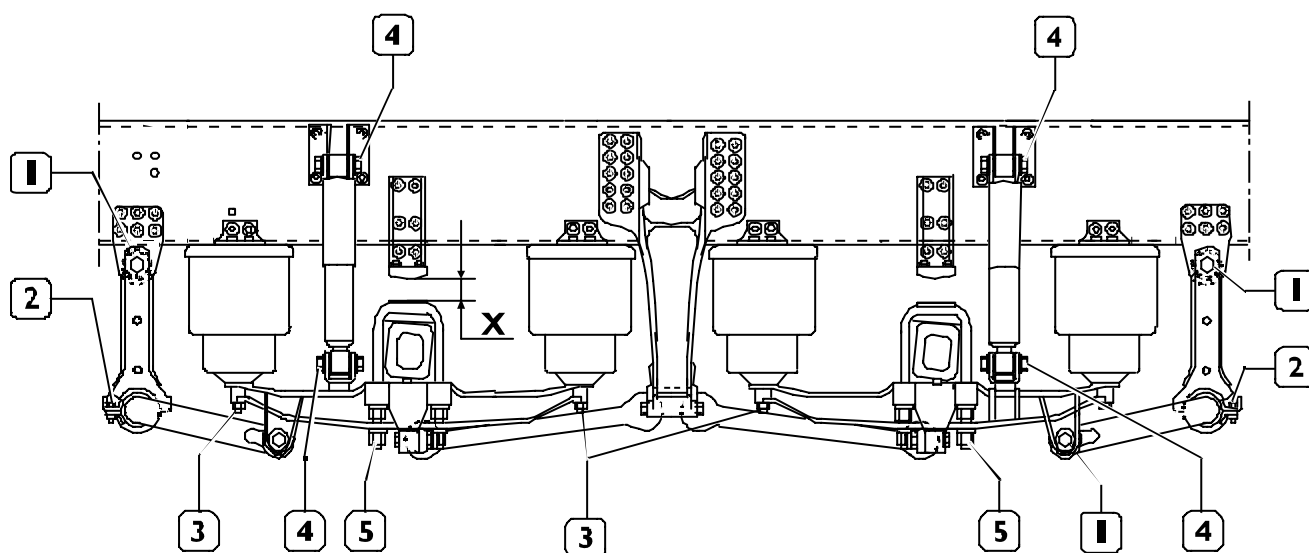

99005

REAR SUSPENSION ASSEMBLY

DESCRIPTION		TORQUE	
		Nm	(kgm)
1	Flanged nut M20 to secure stabiliser bar on air spring support and to secure articulated connecting rod on chassis bracket	636 to 777	(63.6 to 77.7)
2	Nut for screw to secure elastic anchoring member to articulated connecting rod	100 to 122	(10 to 12)
3	Nut to secure air spring to support	83 to 101	(8.3 to 10.1)
4	Nut M20 to secure rear axle shock absorber on top and bottom	210 to 250	(21 to 25)
5	Nut M24 with collar for brackets to secure rear axle to suspension support	540 to 660	(54 to 66)

X = 64 mm

Aquila Trucks Centres

DIAGNOSTICS

Fault diagnosis comprises two sections:

- The first one, organized by error codes (DTC-FMI), concerns faults that may be identified by the ECAS control unit directly. These faults are mainly of an electric – electronic – pneumatic nature.
- The second one, organized by symptoms, describes the possible faults the electronic control unit cannot identify directly. These faults are mainly of a mechanical nature.

SECTION I

ECAS system troubleshooting can be performed with the Cluster or with the diagnosis instruments Modus, IWT, IT 2000 and E.A.SY..

Diagnosis with the cluster makes it possible to estimate the situation of faults in the system in advance, while the diagnosis instruments are essential to perform thorough diagnosis and operate on the single faults correctly.

Each single instrument displays the diagnosis and repair help.

Diagnosis Instruments

MODUS (Maintenance and Diagnostic System)

A computerized fault-diagnosis station dedicated to diagnosing the brake systems, air suspensions, engines and systems controlled electronically.

The station is equipped with auxiliary functions, such as: programming electronic control units, consulting the spare parts catalogue and service time schedules.

The vehicle has a 30-pin diagnosis socket to interface with the instrument.

IT 2000 (IVECO Electronic Tester)

This makes it possible to take immediate action on the vehicle, identifying it with the chassis number.

It saves the results of diagnostics actions performed.

It can be used as a portable Personal Computer, too, being fitted for remote diagnosis.

By using MODUS as the mother station it is possible to update and configure the IT 2000.

IT 2000 interfaces with the vehicle via a 30-pin diagnosis socket.

E.A.SY.


E.A.SY. system allows to simply make the diagnosis and programming of the various electronic central units aboard the vehicle.

E.A.SY. system is made up of ECI module communicating with the electronic central units and of a Panasonic PC.

ECI module, exploiting the Panasonic PC, also allows easy on the road interventions: in particular, thanks to Panasonic PC wireless technologies (e.g. GPRS), diagnostic interventions can be assisted by a remote expert centre.

Aquila Trucks Centres

Figure 24

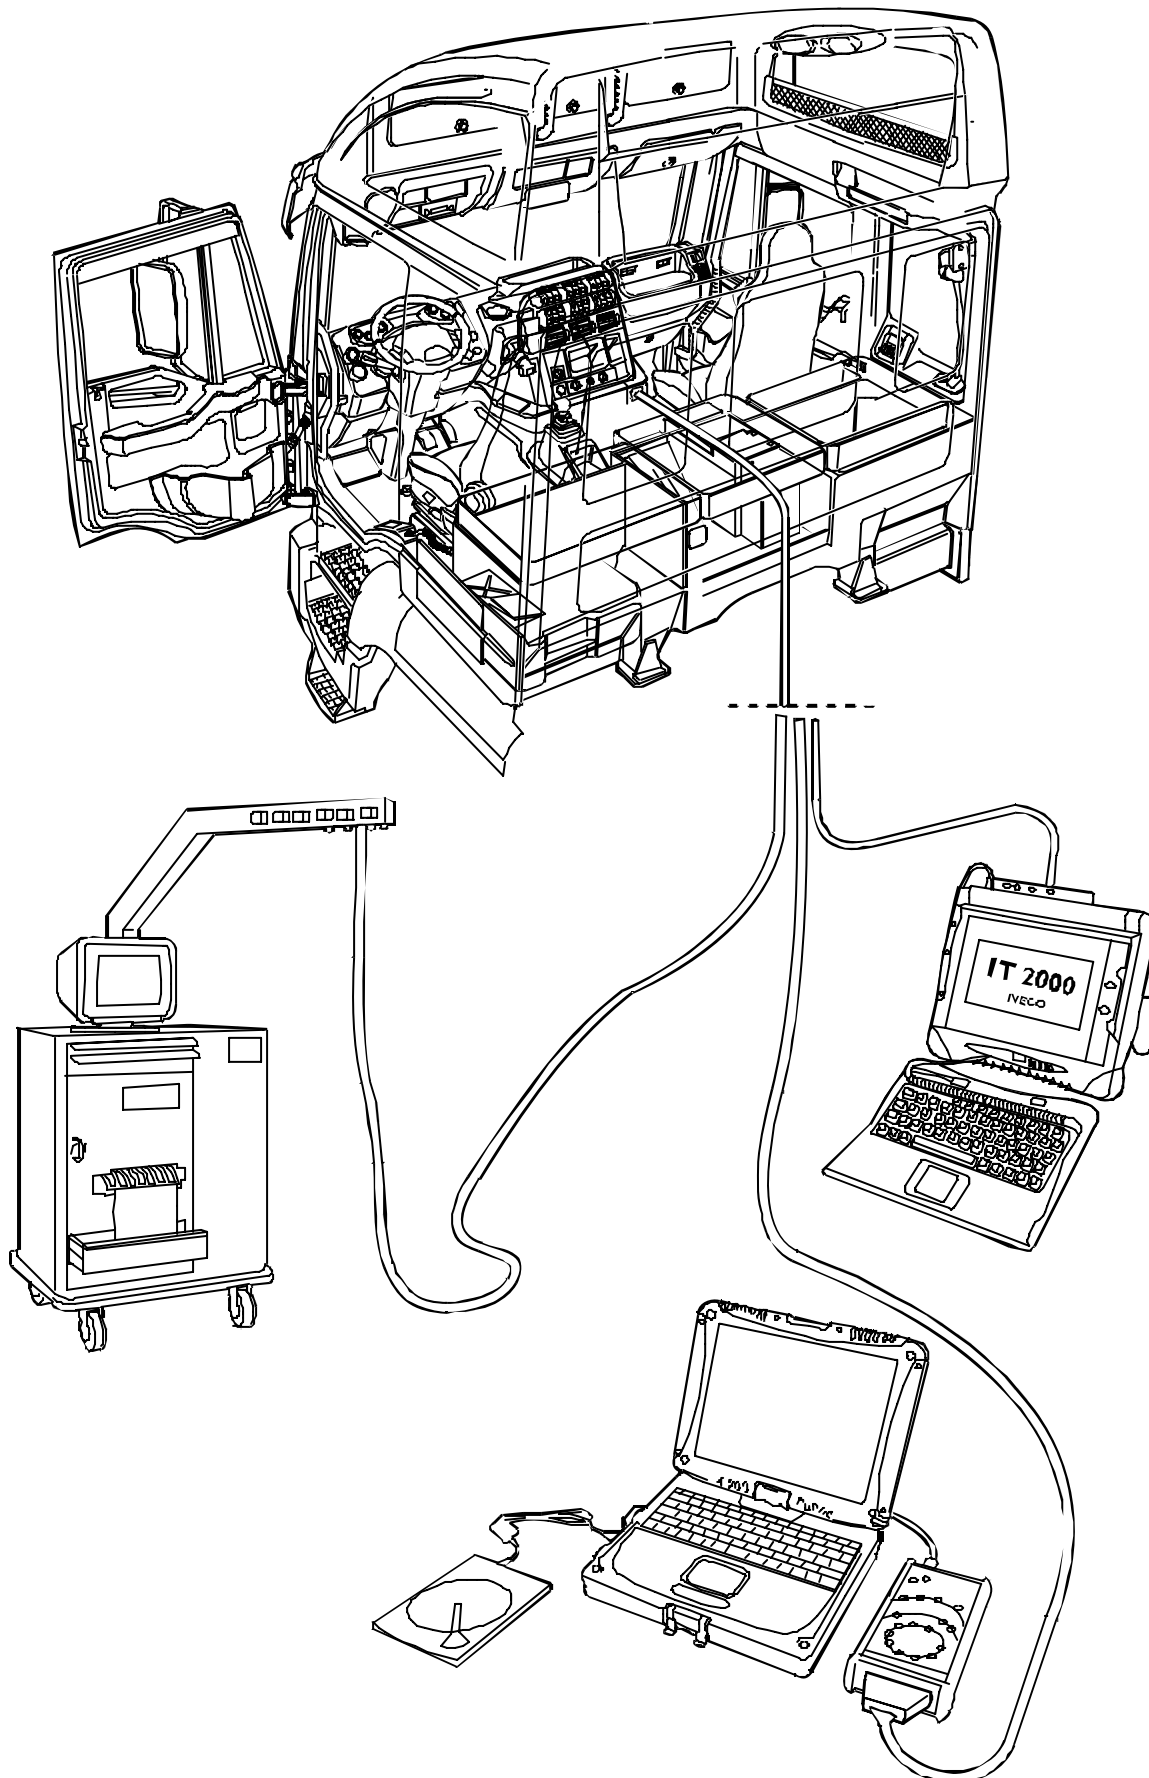


98889

Aquila Trucks Centres

Diagnosis on Cluster

Access to diagnostic screen is possible through "page" or " y " and " b " keys.

Figure 25

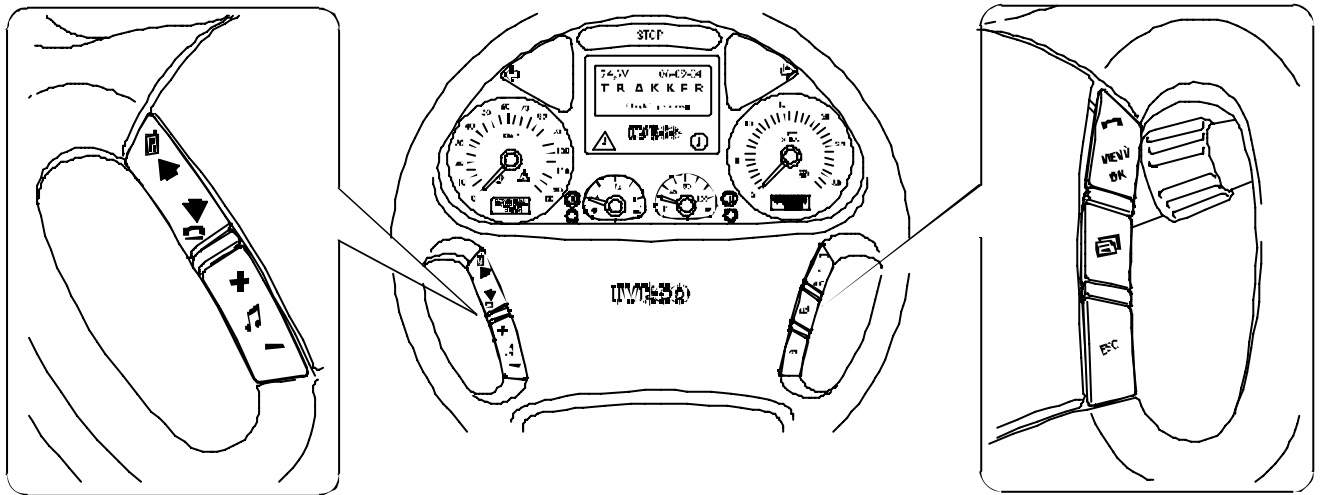

98888

**Diagnostics**

EDC	20011	30	127
BC	22133	01	3
ECAS	20308	00	1

98885

Diagnosis information on the cluster is split into 4 columns:

- First column = central unit.
- Second column = central unit address plus fault order number.
- Third column = failure type.
- Fourth column = failure frequency.

The screen shows three error messages at most, but can store up to eight error messages. For displaying any further messages, just operate " y " and " b " keys.

Aquila Trucks Centres

DTC-FMI error codes

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
		SOLE-NOID VALVES - ADDITIONAL AXLE LIFTING	SHORT CIRCUIT TO POSITIVE	Additional axle control deactivated.	Additional axle lifting solenoid valve locked closed.	Check wiring and connectors on additional axle control solenoid valve. Check: Check isolation from - battery pin 1 - X3 / 7 - 10 - X1 Measuring conditions: Connectors connected to control unit. Key on START. Comparable values: 22 - 26 V				
		SOLE-NOID VALVES - ADDITIONAL AXLE LIFTING	OPEN CIRCUIT	Additional axle control deactivated.	Additional axle lifting solenoid valve locked closed.	Check wiring and connectors on additional axle control solenoid valve. Check: Check continuity between pins 4 - X2 / 1 - X3 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: 70 - 90 Ohm				
		SOLE-NOID VALVES - ADDITIONAL AXLE LIFTING	SHORT CIRCUIT TO GROUND	Additional axle automatically lowered.	Additional axle lifting solenoid valve locked open.	Check wiring and connectors on additional axle control solenoid valve. Check: Check isolation from - battery pin 1 X3 / 12 - X1 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: > 1 Mohm				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
01	03	SOLE-NOID VALVES - FRONT SOLE-NOID VALVE	SHORT CIRCUIT TO POSITIVE	Front and rear axles automatic controls deactivated. Front axle manual controls deactivated.	Front axle sole-noid valve locked closed.	Check wiring and connectors on front frame control solenoid valve. Check: Check isolation from + battery pin 15 - X2 / 7 - 10 - X1 Measuring conditions: Connectors connected to control unit. Key on START. Comparable values: 22 - 26 V				
01	05	SOLE-NOID VALVES - FRONT SOLE-NOID VALVE	OPEN CIRCUIT	Front and rear axles automatic controls deactivated. Front axle manual controls deactivated.	Front axle sole-noid valve locked closed.	Check wiring and connectors on front frame control solenoid valve. Check: Check continuity pins 4 - 15 / X2 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: 70 - 90 Ohm				
01	06	SOLE-NOID VALVES - FRONT SOLE-NOID VALVE	SHORT CIRCUIT TO GROUND	Front axle automatically lowered.	Front axle sole-noid valve locked open.	Check wiring and connectors on front frame control solenoid valve. Check: Check isolation from - battery pin 15 - X2 / 12 - X1 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: > 1 Mohm				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
03	03	SOLE-NOID VALVES - REAR RIGHT	SHORT CIRCUIT TO POSITIVE	Rear axles automatic controls deactivated.	RH engine axle solenoid valve locked closed.	Check wiring and connectors on RH engine axle frame control solenoid valve. Check: Check isolation from - battery pin 13 - X2 / 7 -10 - X1 Measuring conditions: Connectors connected to control unit. Key on START. Comparable values: 22 - 26 V				
03	05	SOLE-NOID VALVES - REAR RIGHT	OPEN CIRCUIT	Rear axles automatic controls deactivated.	RH engine axle solenoid valve locked closed.	Check wiring and connectors on RH engine axle frame control solenoid valve. Check: Check continuity pins 4 - 13 / X2 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: 70 - 90 Ohm				
03	06	SOLE-NOID VALVES - REAR RIGHT	SHORT CIRCUIT TO GROUND	RH side engine axle automatically lowered.	RH engine axle solenoid valve locked open.	Check wiring and connectors on RH engine axle frame control solenoid valve. Check: Check isolation from - battery pin 13 - X2 / 12 - X1 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: > 1 Mohm				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
04	03	SOLE- NOID VALVES - REAR LEFT	SHORT CIRCUIT TO POSI- TIVE	Rear axles auto- matic controls deactivated.	LH engine axle solenoid valve locked closed.	Check wiring and con- nectors on LH engine axle frame control solenoid valve. Check: Check isolation from - battery pin 10 - X2 /7 - 10 X1 Measuring conditions: Connectors connected to control unit. Key on START. Comparable values: 22 - 26 V				
04	05	SOLE- NOID VALVES - REAR LEFT	OPEN CIR- CUIT	Rear axles auto- matic controls deactivated.	LH engine axle solenoid valve locked closed.	Check wiring and con- nectors on LH engine axle frame control solenoid valve. Check: Check continu- ity between pins 4 - 10 / X2 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: 70 - 90 Ohm				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
04	06	SOLE-NOID VALVES - REAR LEFT	SHORT CIRCUIT TO GROUND	LH side engine axle automatically lowered.	LH engine axle solenoid valve locked open.	Check wiring and connectors on LH engine axle frame control solenoid valve. Check: Check isolation from - battery pin 10 - X2 /12 - X1 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: > 1 Mohm				
05	03	SOLE-NOID VALVES - REAR RIGHT (THIRD AXLE)	SHORT CIRCUIT TO POSITIVE	Rear axles automatic controls deactivated. Raise and auxiliary deactivated at additional axle peak.	RH additional axle solenoid valve locked closed.	Check wiring and connectors on RH additional axle frame control solenoid valve. Check: Check isolation from + battery pin 12 - X2 /7 - 10 - X1 Measuring conditions: Connectors connected to control unit. Key on START. Comparable values: 22 - 26 V				
05	05	SOLE-NOID VALVES - REAR RIGHT (THIRD AXLE)	OPEN CIRCUIT	Rear axles automatic controls deactivated. Raise and auxiliary deactivated at additional axle peak.	RH additional axle solenoid valve locked closed.	Check wiring and connectors on RH additional axle frame control solenoid valve. Check: Check continuity between pins 4 - 12 / X2 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: 70 - 90 Ohm				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
05	06	SOLE-NOID VALVES - REAR RIGHT (THIRD AXLE)	SHORT CIRCUIT TO GROUND	RH side additional axle automatically lowered.	RH additional axle solenoid valve locked open.	Check wiring and connectors on RH additional axle frame control solenoid valve. Check: Check isolation from - battery pin 12 - X2 / 12 - X1 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: > 1 Mohm				
06	03	SOLE-NOID VALVES - REAR LEFT (THIRD AXLE)	SHORT CIRCUIT TO POSITIVE	Rear axles automatic controls deactivated. Raise and auxiliary deactivated at additional axle peak.	LH additional axle solenoid valve locked closed.	Check wiring and connectors on LH additional axle frame control solenoid valve. Check: Check isolation from - battery pin 14 - X2 / 7 - 10 - X1 Measuring conditions: Connectors connected to control unit. Key on START. Comparable values: 22 - 26 V				
06	05	SOLE-NOID VALVES - REAR LEFT (THIRD AXLE)	OPEN CIRCUIT	Rear axles automatic controls deactivated. Raise and auxiliary deactivated at additional axle peak.	LH additional axle solenoid valve locked closed.	Check wiring and connectors on LH additional axle frame control solenoid valve. Check: Check continuity between pins 4 - 14 / X2 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: 70 - 90 Ohm				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
06	06	SOLE-NOID VALVES - REAR LEFT (THIRD AXLE)	SHORT CIRCUIT TO GROUND	LH side additional axle automatically lowered.	LH additional axle solenoid valve locked open.	Check wiring and connectors on LH additional axle frame control solenoid valve. Check: Check isolation from - battery pin 14 - X2 / 12 - X1 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: > 1 Mohm				
07	03	SOLE-NOID VALVES - AIR INLET/ OUTLET VALVE	SHORT CIRCUIT TO POSITIVE	Front and rear axles automatic controls deactivated. Raise and auxiliary deactivated at additional axle peak.	Power supply solenoid valve locked closed.	Check wiring and connectors on power supply solenoid valve. Check: Check isolation from - battery pin 11 - X2 / 7 - 10 - X1 Measuring conditions: Connectors connected to control unit. Key on START. Comparable values: 22 - 26 V				
07	05	SOLE-NOID VALVES - AIR INLET/ OUTLET VALVE	OPEN CIRCUIT	Front and rear axles automatic controls deactivated. Raise and auxiliary deactivated at additional axle peak.	Power supply solenoid valve locked closed.	Check wiring and connectors on power supply solenoid valve. Check: Check continuity between pins 4 - 11 / X2 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: 70 - 90 Ohm				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
07	06	SOLE-NOID VALVES - AIR INLET/OUTLET VALVE	SHORT CIRCUIT TO GROUND	Front and rear axles automatic controls deactivated. Raise and auxiliary deactivated at additional axle peak.	Power supply solenoid valve locked open.	Check wiring and connectors on power supply solenoid valve. Check: Check isolation from - battery pin 11 - X2 / 12 - X1 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: > 1 Mohm				
10	02	SENSORS - FRONT LEVEL SENSOR	INCORRECT PARAMETERS	No front axle leveling.	Front axle level automatic controls disabled.	Electronic control unit configuration check. Check calibration levels. Check sensor installation and eventual mechanical connection faults.				
10	03	SENSORS - FRONT LEVEL SENSOR	SHORT CIRCUIT TO POSITIVE	No front axle leveling.	Front axle level automatic controls disabled.	Check sensor wiring and connectors. Check: Check isolation from - battery pin 9 - X2 / 7 - 10 - X1 Measuring conditions: Connectors connected to control unit. Key on START. Comparable values: 22 - 26 V				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
10	05	SENSORS - FRONT LEVEL SENSOR	OPEN CIRCUIT	No front axle leveling.	Front axle level automatic controls disabled.	Check sensor wiring and connectors. Check: Check continuity between pins 7 - 9 / X2 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: 4 - 5 Kohm				
10	06	SENSORS - FRONT LEVEL SENSOR	SHORT CIRCUIT TO GROUND	No front axle leveling.	Front axle level automatic controls disabled.	Check sensor wiring and connectors. Check: Check isolation from - battery pin 9 - X2 / 12 - X1 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: > 1 Mohm				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
12	02	SENSORS - REAR RIGHT LEVEL SENSOR	INCORRECT PARAMETERS	On "4x2 Tractor" - No rear axle leveling. On "6x2 Truck or Tractor" - Yellow fault light ON. On "6x2 Truck or Tractor" with simultaneous LH sensor fault - No rear axle leveling and auxiliary function deactivated at peak.	1 sensor axle "4x2 Tractors" Deactivation of rear axle level automatic controls. 2 sensor axle "6x2 Truck or Tractor" no functional fault. 2 sensor axle "6x2 Truck or Tractor" with simultaneous LH sensor fault. Deactivation of rear axle level automatic controls and auxiliary at peak.	Electronic control unit configuration check. Check calibration levels. Check sensor installation and eventual mechanical connection faults.				
12	03	SENSORS - REAR RIGHT LEVEL SENSOR	SHORT CIRCUIT TO POSITIVE	On "4x2 Tractor" - No rear axle leveling. On "6x2 Truck or Tractor" - Yellow fault light ON. On "6x2 Truck or Tractor" with simultaneous LH sensor fault - No rear axle leveling and auxiliary function deactivated at peak.	1 sensor axle "4x2 Tractors" Deactivation of rear axle level automatic controls. 2 sensor axle "6x2 Truck or Tractor" no functional fault. 2 sensor axle "6x2 Truck or Tractor" with simultaneous LH sensor fault. Deactivation of rear axle level automatic controls and auxiliary at peak.	Check sensor wiring and connectors. Check: Check isolation from + battery pin 8 - X2 / 7 - 10 - X1 Measuring conditions: Connectors connected to control unit. Key on START. Comparable values: 22 - 26 V				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
12	05	SENSORS - REAR RIGHT LEVEL SENSOR	OPEN CIRCUIT	On "4x2 Tractor" - No rear axle leveling. On "6x2 Truck or Tractor" - Yellow fault light ON. On "6x2 Truck or Tractor" with simultaneous LH sensor fault - No rear axle leveling and auxiliary function deactivated at peak.	1 sensor axle "4x2 Tractors" Deactivation of rear axle level automatic controls. 2 sensor axle "6x2 Truck or Tractor" no functional fault. 2 sensor axle "6x2 Truck or Tractor" with simultaneous LH sensor fault. Deactivation of rear axle level automatic controls and auxiliary at peak.	Check sensor wiring and connectors. Check: Check continuity between pins 7 - 8 / X2 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: 80 - 90 Ohm				
12	06	SENSORS - REAR RIGHT LEVEL SENSOR	SHORT CIRCUIT TO GROUND	On "4x2 Tractor" - No rear axle leveling. On "6x2 Truck or Tractor" - Yellow fault light ON. On "6x2 Truck or Tractor" with simultaneous LH sensor fault - No rear axle leveling and auxiliary function deactivated at peak.	1 sensor axle "4x2 Tractors" Deactivation of rear axle level automatic controls. 2 sensor axle "6x2 Truck or Tractor" no functional fault. 2 sensor axle "6x2 Truck or Tractor" with simultaneous LH sensor fault. Deactivation of rear axle level automatic controls and auxiliary at peak.	Check sensor wiring and connectors. Check: Check isolation from + battery pin 8 - X2 / 12 - X1 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: > 1 Mohm				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
13	02	SENSORS - REAR LEFT LEVEL SENSOR	INCORRECT PARAMETERS	On "6x2 Truck or Tractor" - Yellow fault light ON. On "6x2 Truck or Tractor" with simultaneous RH sensor fault - No rear axle leveling and auxiliary function deactivated at peak.	2 sensor axle "6x2 Truck or Tractor" no functional fault. 2 sensor axle "6x2 Truck or Tractor" with simultaneous RH sensor fault. Deactivation of rear axle level automatic controls and auxiliary at peak.	Electronic control unit configuration check. Check calibration levels. Check sensor installation and eventual mechanical connection faults.				
13	03	SENSORS - REAR LEFT LEVEL SENSOR	SHORT CIRCUIT TO POSITIVE	On "6x2 Truck or Tractor" - Yellow fault light ON. On "6x2 Truck or Tractor" with simultaneous RH sensor fault - No rear axle leveling and auxiliary function deactivated at peak.	2 sensor axle "6x2 Truck or Tractor" no functional fault. 2 sensor axle "6x2 Truck or Tractor" with simultaneous RH sensor fault. Deactivation of rear axle level automatic controls and auxiliary at peak.	Check sensor wiring and connectors. Check: Check isolation from + battery pin 5 - X2 / 7 - 10 - X1 Measuring conditions: Connectors connected to control unit. Key on START. Comparable values: 22 - 26 V				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
13	05	SENSORS - REAR LEFT LEVEL SENSOR	OPEN CIRCUIT	On "6x2 Truck or Tractor" - Yellow fault light ON. On "6x2 Truck or Tractor" with simultaneous RH sensor fault - No rear axle leveling and auxiliary function deactivated at peak.	2 sensor axle "6x2 Truck or Tractor" no functional fault. 2 sensor axle "6x2 Truck or Tractor" with simultaneous RH sensor fault. Deactivation of rear axle level automatic controls and auxiliary at peak.	Check sensor wiring and connectors. Check: Check continuity between pins 7 - 5 / X2 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: 80 - 90 Ohm				
13	06	SENSORS - REAR LEFT LEVEL SENSOR	SHORT CIRCUIT TO GROUND	On "6x2 Truck or Tractor" - Yellow fault light ON. On "6x2 Truck or Tractor" with simultaneous RH sensor fault - No rear axle leveling and auxiliary function deactivated at peak.	2 sensor axle "6x2 Truck or Tractor" no functional fault. 2 sensor axle "6x2 Truck or Tractor" with simultaneous RH sensor fault. Deactivation of rear axle level automatic controls and auxiliary at peak.	Check sensor wiring and connectors. Check: Check isolation from - battery pin 5 - X2 / 12 - X1 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: > 1 Mohm				
16	03	SENSORS - FRONT PRESSURE SENSOR	SHORT CIRCUIT TO POSITIVE	Possible front axle overload.	FAILURE INDICATOR TURNS ON. LOAD INDICATION IS MISSING OR DOES NOT RESULT.	Check connector wiring and components.	Measure type: Voltage (V) Measure point 1: Connector X1 Pin: 10 Measure point 2: Connector X2 Pin: 3	Key +15 ON;	Typical Value: 22-26 V;	INSERT ADAPTER BETWEEN THE UNIT AND CABLING

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
16	05	SENSORS - FRONT PRESSURE SENSOR	OPEN CIRCUIT	Possible front axle overload.	FAILURE INDICATOR TURNS ON. LOAD INDICATION IS MISSING OR DOES NOT RESULT.	Check connector wiring and components.	Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 1 Measure point 2: Connector X2 Pin: 3	Key +15 OFF;	Typical Value: 41 KOhm;	INSERT ADAPTER BETWEEN THE UNIT AND CABLING
16	06	SENSORS - FRONT PRESSURE SENSOR	SHORT CIRCUIT TO GROUND	Possible front axle overload.	FAILURE INDICATOR TURNS ON. LOAD INDICATION IS MISSING OR DOES NOT RESULT.	CHECK INSULATION FROM BATTERY. CHECK COMPONENT AND CONNECTOR CABLING INTEGRITY.	Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 3 Measure point 2: Connector X1 Pin: 12	Key +15 OFF;	Typical Value: 1-1.5 KOhm;	INSERT ADAPTER BETWEEN THE UNIT AND CABLING
18	03	SENSORS - RIGHT PRESSURE SENSOR (AXLE)	SHORT CIRCUIT TO POSITIVE	Fault light ON. Axle load signal missing or incorrect.	Possible engine axle overload.	Check connector wiring and components. Check: Check isolation from + battery pin 2 - X2 / 7 - 10 - X1 Measuring conditions: Connectors connected to control unit. Key on START. Comparable values: 22 - 26 V				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
18	05	SENSORS - RIGHT PRESSURE SENSOR (AXLE)	OPEN CIRCUIT	Fault light ON. Axle load signal missing or incorrect.	Possible engine axle overload.	Check connector wiring and components. Check: Check continuity between pins 1 - 2 / X2 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: 35 - 45 Kohm				
18	06	SENSORS - RIGHT PRESSURE SENSOR (AXLE)	SHORT CIRCUIT TO GROUND	Fault light ON. Axle load signal missing or incorrect.	Possible engine axle overload.	Check connector wiring and components. Check: Check isolation from - battery pin 2 - X2 / 12 - X1 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: 1 - 1.5 Kohm				
19	03	SENSORS - LEFT PRESSURE SENSOR (AXLE)	SHORT CIRCUIT TO POSITIVE	Fault light ON. Axle load signal missing or incorrect.	Possible engine axle overload.	Check connector wiring and components. Check: Check isolation from + battery pin 6 - X2 / 7 - 10 - X1 Measuring conditions: Connectors connected to control unit. Key on START. Comparable values: 22 - 26 V				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
19	05	SENSORS - LEFT PRESSURE SENSOR (AXLE)	OPEN CIRCUIT	Fault light ON. Axle load signal missing or incorrect.	Possible engine axle overload.	Check connector wiring and components. Check: Check continuity between pins 1 - 6 / X2 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: 35 - 45 Kohm				
19	06	SENSORS - LEFT PRESSURE SENSOR (AXLE)	SHORT CIRCUIT TO GROUND	Fault light ON. Axle load signal missing or incorrect.	Possible engine axle overload.	Check connector wiring and components. Check: Check isolation from - battery pin 6 - X2 / 12 - X1 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: 1 - 1.5 Kohm				
1A	03	SENSORS - RIGHT PRESSURE SENSOR 3RD AXLE	SHORT CIRCUIT TO POSITIVE	Fault light ON. Axle load signal missing or incorrect.	Possible additional axle overload.	Check connector wiring and components. Check: Check isolation from + battery pin 4 - X3 / 7 - 10 - X1 Measuring conditions: Connectors connected to control unit. Key on START. Comparable values: 22 - 26 V				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
1A	05	SENSORS - RIGHT PRESSURE SENSOR 3RD AXLE	OPEN CIRCUIT	Fault light ON. Axle load signal missing or incorrect.	Possible additional axle overload.	Check connector wiring and components. Check: Check continuity between pins 1 - X2 / 4 - X3 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: 35 - 45 Kohm				
1A	06	SENSORS - RIGHT PRESSURE SENSOR 3RD AXLE	SHORT CIRCUIT TO GROUND	Fault light ON. Axle load signal missing or incorrect.	Possible additional axle overload.	Check connector wiring and components. Check: Check isolation from - battery pin 4 - X3 / 12 - X1 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: 1 - 1.5 Kohm				
1B	03	SENSORS - LEFT PRESSURE SENSOR 3RD AXLE	SHORT CIRCUIT TO POSITIVE	Fault light ON. Axle load signal missing or incorrect.	Possible additional axle overload.	Check connector wiring and components. Check: Check isolation from + battery pin 3 - X3 / 7 - 10 - X1 Measuring conditions: Connectors connected to control unit. Key on START. Comparable values: 22 - 26 V				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
1B	05	SENSORS - LEFT PRESSURE SENSOR 3RD AXLE	OPEN CIRCUIT	Fault light ON. Axle load signal missing or incorrect.	Possible additional axle overload.	Check connector wiring and components. Check: Check continuity between pins 1 - X2 / 3 - X3 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: 35 - 45 Kohm				
1B	06	SENSORS - LEFT PRESSURE SENSOR 3RD AXLE	SHORT CIRCUIT TO GROUND	Fault light ON. Axle load signal missing or incorrect.	Possible additional axle overload.	Check connector wiring and components. Check: Check isolation from - battery pin 3 - X3 / 12 - X1 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: 1 - 1.5 Kohm				
1C	03	SENSORS - PRESSURE SENSOR RAISER	SHORT CIRCUIT TO POSITIVE	Additional axle cannot be raised. Auxiliary function deactivated at peak.	Additional axle control disabled.	Check connector wiring and components. Check: Check isolation from + battery pin 5 - X3 / 7 - 10 - X1 Measuring conditions: Connectors connected to control unit. Key on START. Comparable values: 22 - 26 V				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
1C	05	SENSORS - PRESSURE SENSOR RAISER	OPEN CIRCUIT	Additional axle cannot be raised. Auxiliary function deactivated at peak.	Additional axle control disabled.	Check connector wiring and components. Check: Check continuity between pins 1 - X2 / 5 - X3 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: 35 - 45 Kohm				
1C	06	SENSORS - PRESSURE SENSOR RAISER	SHORT CIRCUIT TO GROUND	Additional axle cannot be raised. Auxiliary function deactivated at peak.	Additional axle control disabled.	Check connector wiring and components. Check: Check isolation from - battery pin 5 - X3 / 12 - X1 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: 1 - 1.5 Kohm				
21	0B	REMOTE CONTROL - REMOTE CONTROL 1	IT IS NOT POSSIBLE TO DETECT THE FAULT	Deactivation remote control 1.	Level manual controls disabled.	Check correct operation of remote control on Modus instrument status parameters.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
22	03	POWER SUPPLY - SUPPLY VOLTAGE FOR ELECTRO-VALVES	SHORT CIRCUIT TO POSITIVE	Fault light ON.	Load distribution on axles control disabled.	Check wiring and connectors on frame control solenoid valves. Check: Check isolation from + battery pin 4 - X2 / 7 - 10 - X1 Measuring conditions: Connectors connected to control unit. Key on START. Comparable values: 22 - 26 V				
22	05	POWER SUPPLY - SUPPLY VOLTAGE FOR ELECTRO-VALVES	OPEN CIRCUIT	Pneumatic suspension locked. Manual trim variations cannot be carried out. Auxiliary function deactivated at peak.	ECAS totally disabled.	Check wiring and connectors on frame control solenoid valves. Check: Check continuity between pins 4 - X2 / 6.1 or 61.1 solenoids Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: 70 - 90 Ohm				
22	06	POWER SUPPLY - SUPPLY VOLTAGE FOR ELECTRO-VALVES	SHORT CIRCUIT TO GROUND	Pneumatic suspension locked. Manual trim variations cannot be carried out. Auxiliary function deactivated at peak.	ECAS totally disabled.	Check wiring and connectors on frame control solenoid valves. Check: Check isolation from - battery pin 4 - X2 / 12 - X1 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: > 1 Mohm				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
26	02	ELECTRONIC CONTROL UNIT - MEMORY CHECK-SUM	SPECIFIC DATA NOT CORRECT	No frame automatic adjustment. Additional axle cannot be raised. Auxiliary function deactivated at peak.	Additional axle control and level automatic controls disabled.	Electronic control unit configuration check. Check calibration levels. Check: Reprogram Electronic control unit. Recalibrate frame level. Measuring conditions: Comparable values:				
27	02	ELECTRONIC CONTROL UNIT - PARAMETER CHECK-SUM	INCORRECT PARAMETERS	No frame automatic adjustment. Additional axle cannot be raised. Auxiliary function deactivated at peak.	Additional axle control and level automatic controls disabled.	Electronic control unit configuration check. Check calibration levels. Check: Reprogram Electronic control unit. Recalibrate frame level. Measuring conditions: Comparable values:				
28	02	ELECTRONIC CONTROL UNIT - HEIGHT SENSOR CALIBRATION DATA CHECK-SUM FAULT	INCORRECT PARAMETERS	No frame automatic adjustment. Additional axle cannot be raised. Auxiliary function deactivated at peak.	Additional axle control and level automatic controls disabled.	Electronic control unit configuration check. Check calibration levels. Check: Reprogram Electronic control unit. Recalibrate frame level. Measuring conditions: Comparable values:				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
2E	03	POWER SUPPLY - PRESSURE SENSORS VOLTAGE SUPPLY	SHORT CIRCUIT TO POSITIVE	Fault light ON. Axles load signal missing or incorrect.	Possible axles overload.	Check connector wiring and components. Check: Check isolation from + battery pin 1 - X2 / 7 - 10 - X1 Measuring conditions: Connectors connected to control unit. Key on START. Comparable values: 0.5 - 4.5 V				
2E	06	POWER SUPPLY - PRESSURE SENSORS VOLTAGE SUPPLY	SHORT CIRCUIT TO GROUND	Fault light ON. Axles load signal missing or incorrect. Additional axle cannot be raised. Auxiliary function deactivated at peak.	Possible axles overload. Additional axle control disabled.	Check connector wiring and components. Check: Check isolation from - battery pin 1 - X2 / 7 - 12 - X1 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: 30 - 50 Kohm				
2E	0B	POWER SUPPLY - PRESSURE SENSORS VOLTAGE SUPPLY	IT IS NOT POSSIBLE TO DETECT THE FAULT	Fault light ON. Axles load signal missing or incorrect. Additional axle cannot be raised. Auxiliary function deactivated at peak.	Possible axles overload. Additional axle control disabled.	Check connector wiring and components. Check: A) Check isolation from + battery pin 1 - X2 / 7 - 10 - X1 B) Check isolation from - battery pin 1 - X2 / 12 - X1 Measuring conditions: A) Connectors connected to control unit. Key on START. B) Connectors connected to control unit. Key on STOP. Comparable values: A) 0.5 - 4.5 V B) 30 - 50 Kohm				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
2F	03	POWER SUPPLY - SUPPLY VOLTAGE FOR ECAS REMOTE CONTROL	SHORT CIRCUIT TO POSITIVE	Remote controls deactivated.	Level manual controls disabled.	Check connector wiring and components. Check: Check isolation from + battery pin 13 - X1 / 7 - 10 - X1 Measuring conditions: Connectors connected to control unit. Key on START. Comparable values: 1 - 1.5 V				
2F	06	POWER SUPPLY - SUPPLY VOLTAGE FOR ECAS REMOTE CONTROL	SHORT CIRCUIT TO GROUND	Remote controls deactivated.	Level manual controls disabled.	Check connector wiring and components. Check: Check isolation from - battery pin 13 - X1 / 12 - X1 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: 30 - 40 Kohm				
30	03	REMOTE CONTROL - REMOTE CONTROL 1	SHORT CIRCUIT TO POSITIVE - DATA LINE	Deactivation remote control 1.	Level manual controls disabled.	Check connectors wiring and components. Check: Check isolation from + battery pin 11 - X1 / 7 - 10 - X1 Measuring conditions: Connectors connected to control unit. Key on START. Comparable values: 22 - 26 V				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
30	06	REMOTE CONTROL - REMOTE CONTROL 1	SHORT CIRCUIT TO GROUND - DATA LINE	Deactivation remote control 1.	Level manual controls disabled.	Check connectors wiring and components. Check: Check isolation from - battery pin 11 - X1 / 12 - X1 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: 6 - 7 Kohm				
31	03	REMOTE CONTROL - REMOTE CONTROL 1	SHORT CIRCUIT TO POSITIVE - CLOCK LEITUNG	Deactivation remote control 1.	Level manual controls disabled.	Check connectors wiring and components. Check: Check isolation from + battery pin 8 - X1 / 7 - 10 - X1 Measuring conditions: Connectors connected to control unit. Key on START. Comparable values: 4 - 4.5 V				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
31	06	REMOTE CONTROL - REMOTE CONTROL 1	SHORT CIRCUIT TO GROUND - CLOCK LINE	Deactivation remote control 1.	Level manual controls disabled.	Check connectors wiring and components. Check: Check isolation from - battery pin 8 - X1 / 12 - X1 Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: 8.5 - 9.5 Kohm				
3C	09	CAN LINE - CAN COMMUNICATION ERROR	ABNORMAL UPDATE RATE	Level adjustment delayed or advanced.	Delayed level adjustment time. Incorrect braking adjustment.	Check vehicle CAN line and relative connections on the relevant control units. Check: Check condition between pin 15 and 16 on 30-pole diagnosis connector. Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: 60 ohm				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
3D	09	CAN LINE - MESSAGE VSC1 (CCVS) FROM ENGINE	FAULTY SIGNAL	Level adjustment delayed or advanced.	Delayed level adjustment time. Incorrect braking adjustment.	Check vehicle CAN line and relative connections on the relevant control units. Check condition between pin 15 and 16 on 30-pole diagnosis connector. Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: 60 ohm				
3E	09	CAN LINE - MESSAGE EEC1 FROM ENGINE	FAULTY SIGNAL	Level adjustment delayed or advanced.	Delayed level adjustment time. Incorrect braking adjustment.	Check vehicle CAN line and relative connections on the relevant control units. Check condition between pin 15 and 16 on 30-pole diagnosis connector. Measuring conditions: Connectors connected to control unit. Key on STOP. Comparable values: 60 ohm				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
44	09	CAN LINE - MESSAGE TCO1 FROM TACHOGRAPH	FAULTY SIGNAL	Level adjustment delayed or advanced.	Delayed level adjustment time. Incorrect braking adjustment.	Check vehicle CAN line and relative connections on the relevant control units.Check: Check condition between pin 15 and 16 on 30-pole diagnosis connector.Measuring conditions: Connectors connected to control unit. Key on STOP.Comparable values: 60 ohm				
45	09	CAN LINE - MESSAGE TIME AND DATE FROM TACHOGRAPH	FAULTY SIGNAL	Level adjustment delayed or advanced.	Delayed level adjustment time. Incorrect braking adjustment.	Check vehicle CAN line and relative connections on the relevant control units.Check: Check condition between pin 15 and 16 on 30-pole diagnosis connector.Measuring conditions: Connectors connected to control unit. Key on STOP.Comparable values: 60 ohm				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
E7	09	CAN LINE - DATA UPDATING FREQUENCY	FAULTY SIGNAL	Level adjustment delayed or advanced.	Delayed level adjustment time. Incorrect braking adjustment.	Check vehicle CAN line and relative connections on the relevant control units.				
FE	02	ELECTRONIC CONTROL UNIT - ELECTRONIC CONTROL UNIT	SPECIFIC DATA NOT CORRECT	Pneumatic suspension locked. Manual trim variations cannot be carried out. Auxiliary function deactivated at peak.	ECAS totally disabled.	Electronic control unit configuration check. Check: Reprogram Electronic control unit, if fault persists, replace. Measuring conditions: Comparable values:				

Aquila Trucks Centres

SECTION 2

Visible Failure	Possible cause	Repair action
Noisy suspension	Insufficient lubrication.	Lubricate thoroughly.
	Shock absorbers noisy or inefficient.	Check and if necessary replace shock absorbers.
	Wheel bearings worn with excessive play.	Renew bearings or adjust play.
	Leaf spring hangers loose.	Check hanger fixings and if necessary replace any loose pins or bolts.
	Leaf spring pack loose due to broken centre bolt.	Overhaul the leaf springs and renew the centre bolt and self-locking nut.
	Leaf spring pack loose due to breakage of pins securing the spring clamps.	Check leaf spring clamps and renew the pins.
Vehicle pulls to one side	Tyre pressures incorrect.	Check and inflate to specified pressure.
	Front wheel alignment incorrect.	Check and adjust front wheel alignment.
	Hydraulic shock absorbers inefficient.	Fit new shock absorbers.
	Broken leaf spring.	Overhaul leaf spring and renew components as required.
	Incorrect load distribution.	Distribute load evenly over loading deck.
Excessive flexibility of suspension	Leaf spring centre bolt broken.	Fit new bolt.
	Spring leaves over-stressed or broken.	Overhaul the leaf spring and renew damaged parts or the complete spring as necessary.
Squeaking, knocking, excessive noise in general	Leaf spring mountings loose.	Check mountings and if necessary renew loose shackle pins.
	Leaf spring pack loose due to broken centre bolt.	Overhaul the leaf springs and renew the centre bolt and self-locking nut.
	Leaf spring pack loose due to breakage of pins securing the spring clamps.	Check leaf spring clamps and renew the pins.
	Wheel bearings worn. Excessive play of bearings.	Renew bearings, if necessary. Adjust axial clearances of bearings.
	Excessive wear or play of bearings at central pivot of cantilever suspension.	Renew bearings and/or adjust axial clearances of bearings.




Aquila Trucks Centres

TIGHTENING TORQUES




DESCRIPTION	TORQUE	
	Nm	(kgm)
FRONT SUSPENSION		
Collared nut for leaf spring U-bolts	460 ± 50	(46 ± 5)
Flanged nut for front and rear shackle pins	710 ± 70	(71 ± 7)
M14 flanged nut for bolt securing front spring hanger to chassis frame and for securing central pivot on 8x4	180 ± 20	(18 ± 2)
M16 nut for securing front spring hanger	275 ± 25	(27.5 ± 2.5)
M20 flanged nut for anti-roll bar retaining pin *	437.5 ± 42.5	(43.7 ± 4.2)
Anti-roll bar retaining pin *	437.5 ± 42.5	(43.7 ± 4.2)
M16 nut for lower shock absorber mounting	150 ± 15	(15 ± 1.5)
M14 nut for upper shock absorber mounting	63.5 ± 6.5	(6.3 ± 0.6)
M20 bolt for shock absorber-axle mounting	259 ± 26	(25.9 ± 2.6)
Fork-securing M20 nut	400 ± 40	(40 ± 4)
M12 nut for anti-roll bar bushing support * *	182.5 ± 17.5	(18.2 ± 1.7)
M20 flanged nut for anti-roll bar retaining pin * *	756.5 ± 20.5	(75.6 ± 2)
REAR SUSPENSION		
Collared nut for leaf spring U-bolts	460 ± 50	(46 ± 5)
Flanged nut for front and rear shackle pins	710 ± 70	(71 ± 7)
M20 flanged nut for anti-roll bar retaining pin	437.5 ± 42.5	(43.7 ± 4.2)
Anti-roll bar retaining pin *	437.5 ± 42.5	(43.7 ± 4.2)
U-bolt retaining bolt for front spring pivot	192 ± 17	(19.2 ± 1.7)
M14 bolt securing U-bolt for central pivot pin (8x4 - 8x8 vehicles)	205 ± 20	(20.5 ± 2)
M14 nut for upper and lower shock absorber mounting	63.5 ± 6.5	(6.3 ± 0.6)
M24 nut securing shock absorber to hanger and axle	400 ± 40	(40 ± 4)
M24x110 bolt securing shock absorber to chassis frame	400 ± 40	(40 ± 4)
M20 nut or bolt securing shock absorber to axle or hanger	380 ± 40	(38 ± 4)
M20 bolt securing bar and shock absorber springs support * *	700 ± 15	(70 ± 1.5)
M20 nut securing shock absorber to hanger and to air spring support beam	230 ± 20	(23 ± 2)
REAR CANTILEVER SUSPENSION		
Nut for leaf spring clamping U-bolt	825 ± 75	(82.5 ± 7.5)
Flanged hex head bolt securing upper hanger bracket to chassis frame	270 ± 55	(27 ± 5.5)
Flanged hex head bolt securing lower hanger bracket to upper hanger bracket	492.5 ± 96.5	(49 ± 9.6)
Retaining bolt for longitudinal bar to leaf spring slipper block	420	(42)
Hex retaining nut for reaction bar	390 ± 40	(39 ± 4)
M20 flanged nut for anti-roll bar retaining pin	437.5 ± 42.5	(43.7 ± 4.2)
M18 hex nut securing longitudinal bars	385 ± 35	(38.5 ± 3.5)
M18 hex nut securing longitudinal bars * *	417.5 ± 57.5	(41.7 ± 5.7)
M18 hex head bolt securing triangular bar to hanger bracket * *	352.5 ± 32.5	(35.2 ± 3.2)
16x1.5 hex bolt securing triangular bar pivot mounting to axle * *	277.5 ± 27.5	(27.7 ± 2.7)
Hex socket screw securing plate to axle casing * *	430 ± 30	(43 ± 3)
* Excluding vehicles with pneumatic suspension * * Only for vehicles with pneumatic suspension		

Aquila Trucks Centres





TOOLS

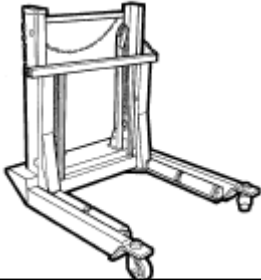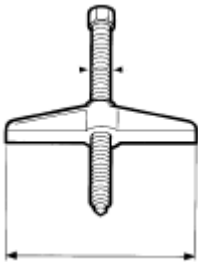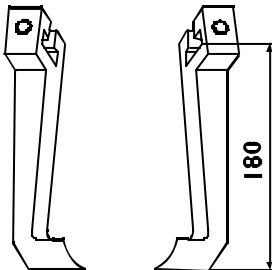TOOL NO.	DESCRIPTION	
99305117		Pneumatic circuit check instruments
99321024		Hydraulic jack for wheel removal and refitting
99327030		E.A.S.Y.
99331016		Unitester case fitted with multimeter and amperometric device
99341003		Single-acting lift
99341011		Pair of brackets



Aquila Trucks Centres

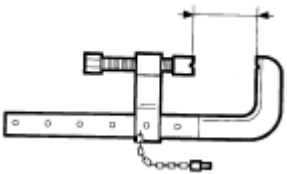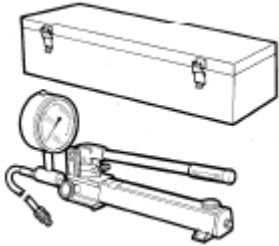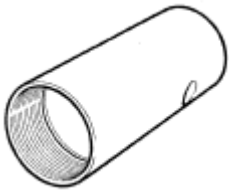TOOL NO.	DESCRIPTION	
99341015		Clamp
99341035		High pressure pump for assembly of suspension pivots and hangers
99345055		Adapter plate for use with pullers
99346001		Standard installer (use with specific bushes)
99346004		Threaded bush (for use with 99346001 and 99363245)
99346049		Tool for disassembling and assembling flexible blocks on stabilizer bar and leaf spring.

Aquila Trucks Centres

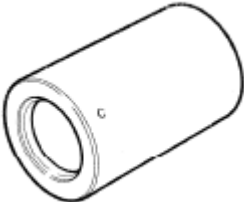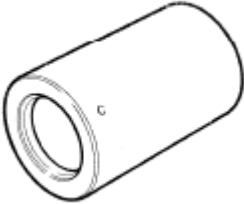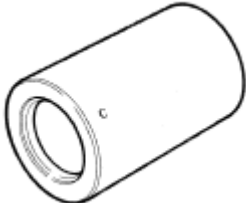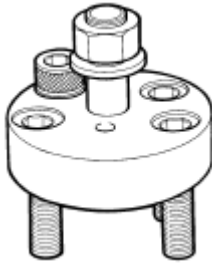TOOL NO.	DESCRIPTION
99346238 ♦	 Sleeve for installing inner race of angular contact bearing (use with specific bushes)
99346242 ♦♦	 Sleeve for installing inner race of angular contact bearing (use with specific bushes)
99346243	 Sleeve for installing inner race of angular contact bearing (use with specific bushes)
99346247	 Reference spacers for ECAS suspension adjustment
99363245	 Threaded bush (for use with 99346001 and 99346004)
99363296 ♦	 Tool to be fitted to bearing spindle for installing inner race of angular contact bearing (use with 99346001 - 99346004 - 99346238 - 99346243 - 99363245)


Aquila Trucks Centres

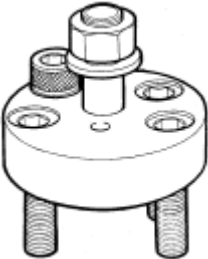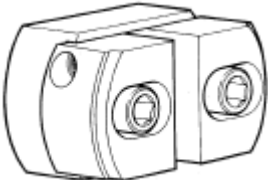TOOL NO.	DESCRIPTION
99363309 ♦♦	 Tool to be fitted to bearing spindle for installing inner race of angular contact bearing (use with 99346001 - 99346004 - 99346242 - 99346243 - 99363245)
99370007	 Interchangeable driver handle for bearing installers
99374094	 Installer for outer bearing races (134 to 215) (for use with 99370007)
99374119 ♦	 Installer for spring mounting oil seal
99374131 ♦♦	 Installer for spring mounting oil seal
♦ Vehicles with 21 tons suspensions (outside diameter of central pivot shaft 88 mm) ♦♦ Vehicles with 32 tons suspensions (outside diameter of central pivot shaft 120 mm)	

Aquila Trucks Centres

EXPERIMENTAL TOOLS

This chapter shows technical construction drawings of the special purpose tool (S.P. 2403), used in servicing the suspension described in this section. This may be built by the repair workshops.

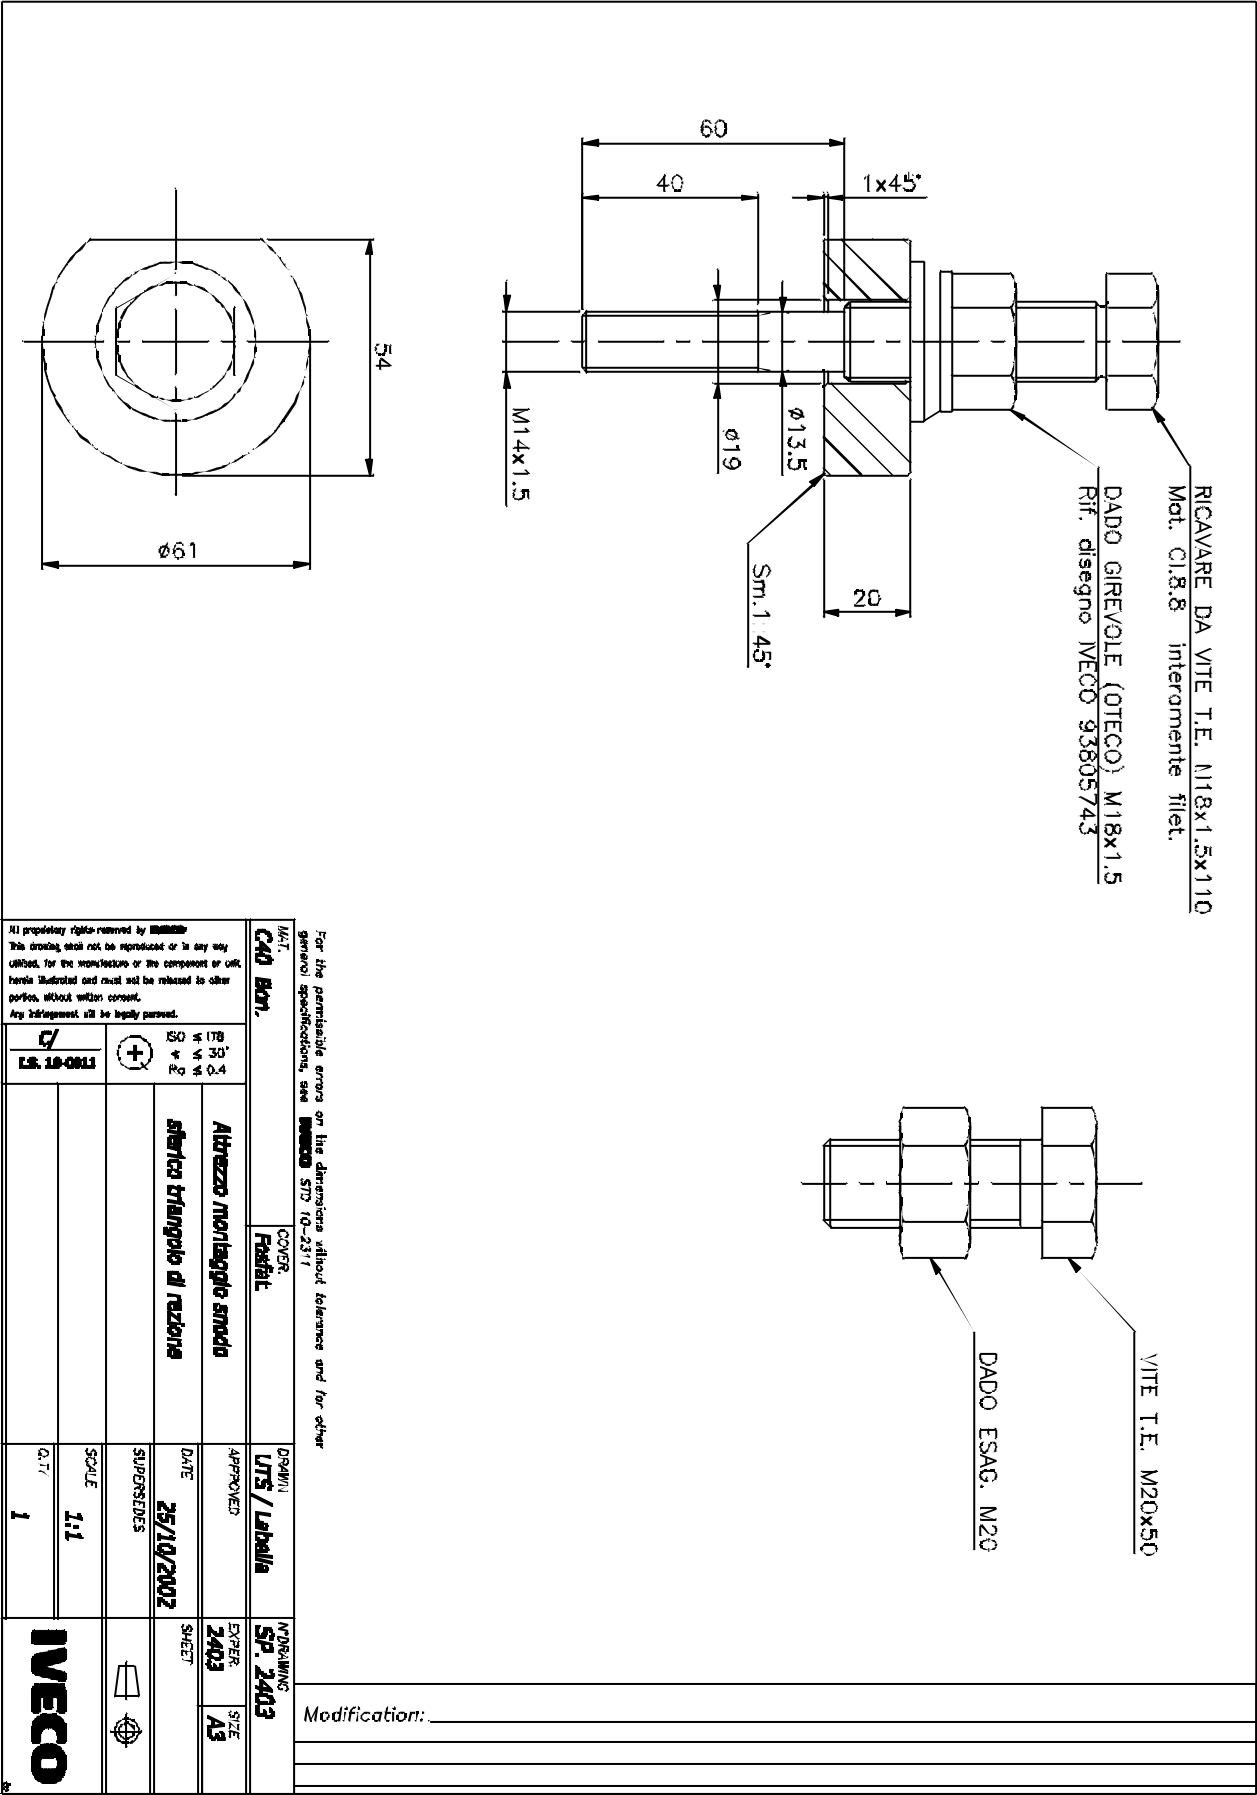

Aquila Trucks Centres

Aquila Trucks Centres

500410 FRONT LEAF SPRING REMOVAL-REFITTING**Removal**

Arrange vehicle on flat ground and lock rear wheels.

Loosen front wheels securing nuts.

By a hydraulic jack, lift the vehicle from front side and rest it on two support stands.

Unscrew wheels securing nuts and disconnect wheels with hydraulic truck 99321024.

Position a hydraulic jack suitable to support front axle when the leaf spring will be disconnected.

Then, lower the hydraulic jack that is prearranged under front axle until leaf spring tension is released.

Remove board (5) operating as follows:

- remove screws (4), operating from under the vehicle and remove board complete assembly;
- remove screw (10) of rear shackle (11);

NOTE If screw (10) is oriented with its head towards the external side of the vehicle, it is necessary for dismantling the vehicle to partially disconnect the air filter as described below:

- disconnect lower cover (2);
- remove container (15);
- disconnect filtering cartridge (14) operating on nut (1);
- remove the nut with screw (3) securing leaf spring to front support;
- unscrew nuts (6) and unthread U bolts (7);
- disengage shock absorber (13) from suspension operating on fastener (8);
- remove leaf spring (9).

Refitting

For reconnection, invert operations performed for disconnection observing following warnings.



Check the thread of the brackets joining leaf springs to front axle; if faults are found, rectify thread (operation 500412), or replace brackets.


NOTE For correct cover (2) springs clamping, align to mark (12).

Tighten screws (10) with their head oriented inwards.

Check stop spring buffers conditions; if stop spring buffers are found to be worn out, replace them (operation 500417).



Tighten nuts at prescribed torque.

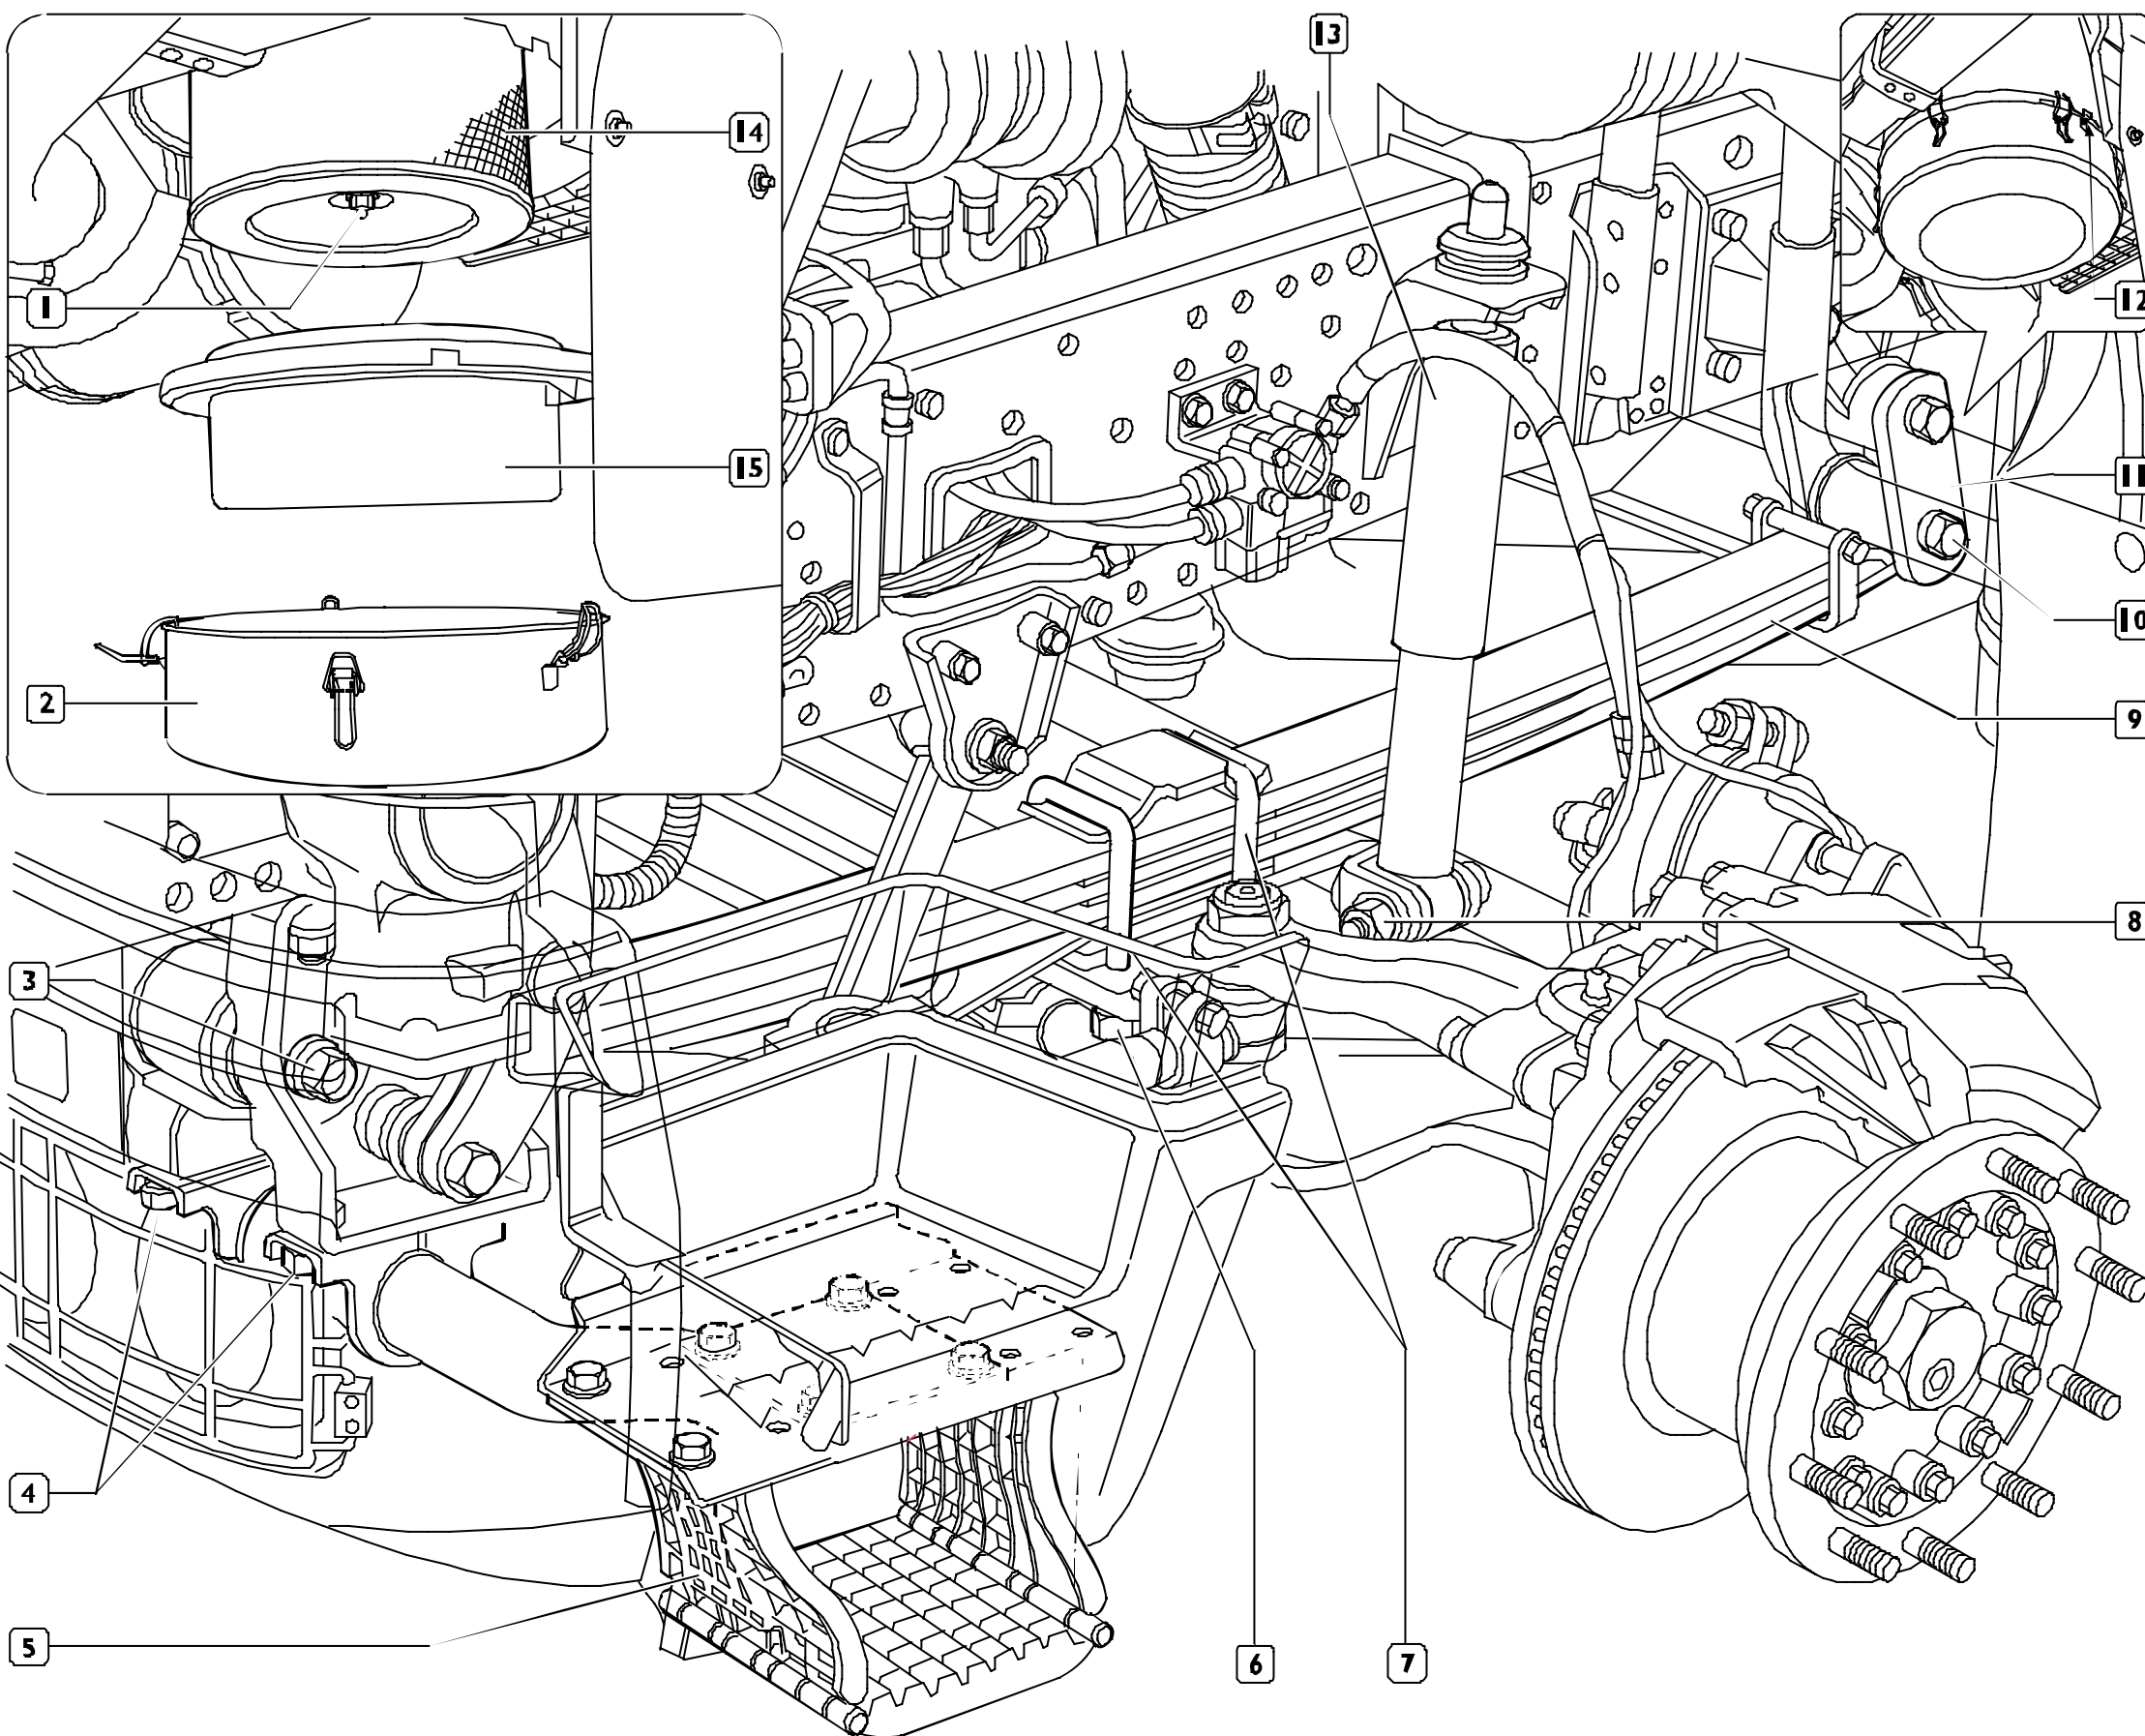

Aquila Trucks Centres

500420 REMOVAL-REFITTING OF INTERMEDIATE AXLE LEAF SPRING (8x4 VEHICLES)

Removal

Park the vehicle on level ground and chock the rear wheels. Loosen the wheel nuts on the 2nd axle. Using a hydraulic jack, raise the front of the vehicle and support it on two stands.

Unscrew the wheel nuts and, using hydraulic trolley 99321024, remove the wheels.

Position a hydraulic jack to support the axle when the leaf spring is detached.

Lower the hydraulic jack supporting the axle to relieve the tension on the leaf spring (2).

- Detach the front leaf spring from the mounting (1) before proceeding with the removal of the second steering axle;
- remove the rear shackle pin (7);
- undo the front mounting (1) to detach the leaf spring from the vehicle;
- unscrew the four nuts (4) and withdraw the U-bolts (3);
- remove the nut and bolt (5) and detach the shock absorber (20) from the suspension;
- remove the complete leaf spring (2).

Refitting


Carry out the removal operations in reverse order, observing the following instructions:

NOTE Before the leaf spring can be attached to the two mountings, the spring must be loaded (using suitable equipment including hydraulic jacks and by loading the vehicle itself), thereby causing it to extend and bringing the holes for the shackle pins into alignment.

Inspect the threads on the U-bolts the secure the leaf spring to the axle; if damaged, re-cut the threads (operation 500412) or renew the U-bolts. Check the condition of the rubber bump stops and renew them if deteriorated (operation 500417).

Tighten all nuts to the prescribed torque settings. To tighten down the cap (9), first tighten bolt (10) to the prescribed torque, interposing spacer (8), and then tighten bolt (11) without a spacer.


Figure 27

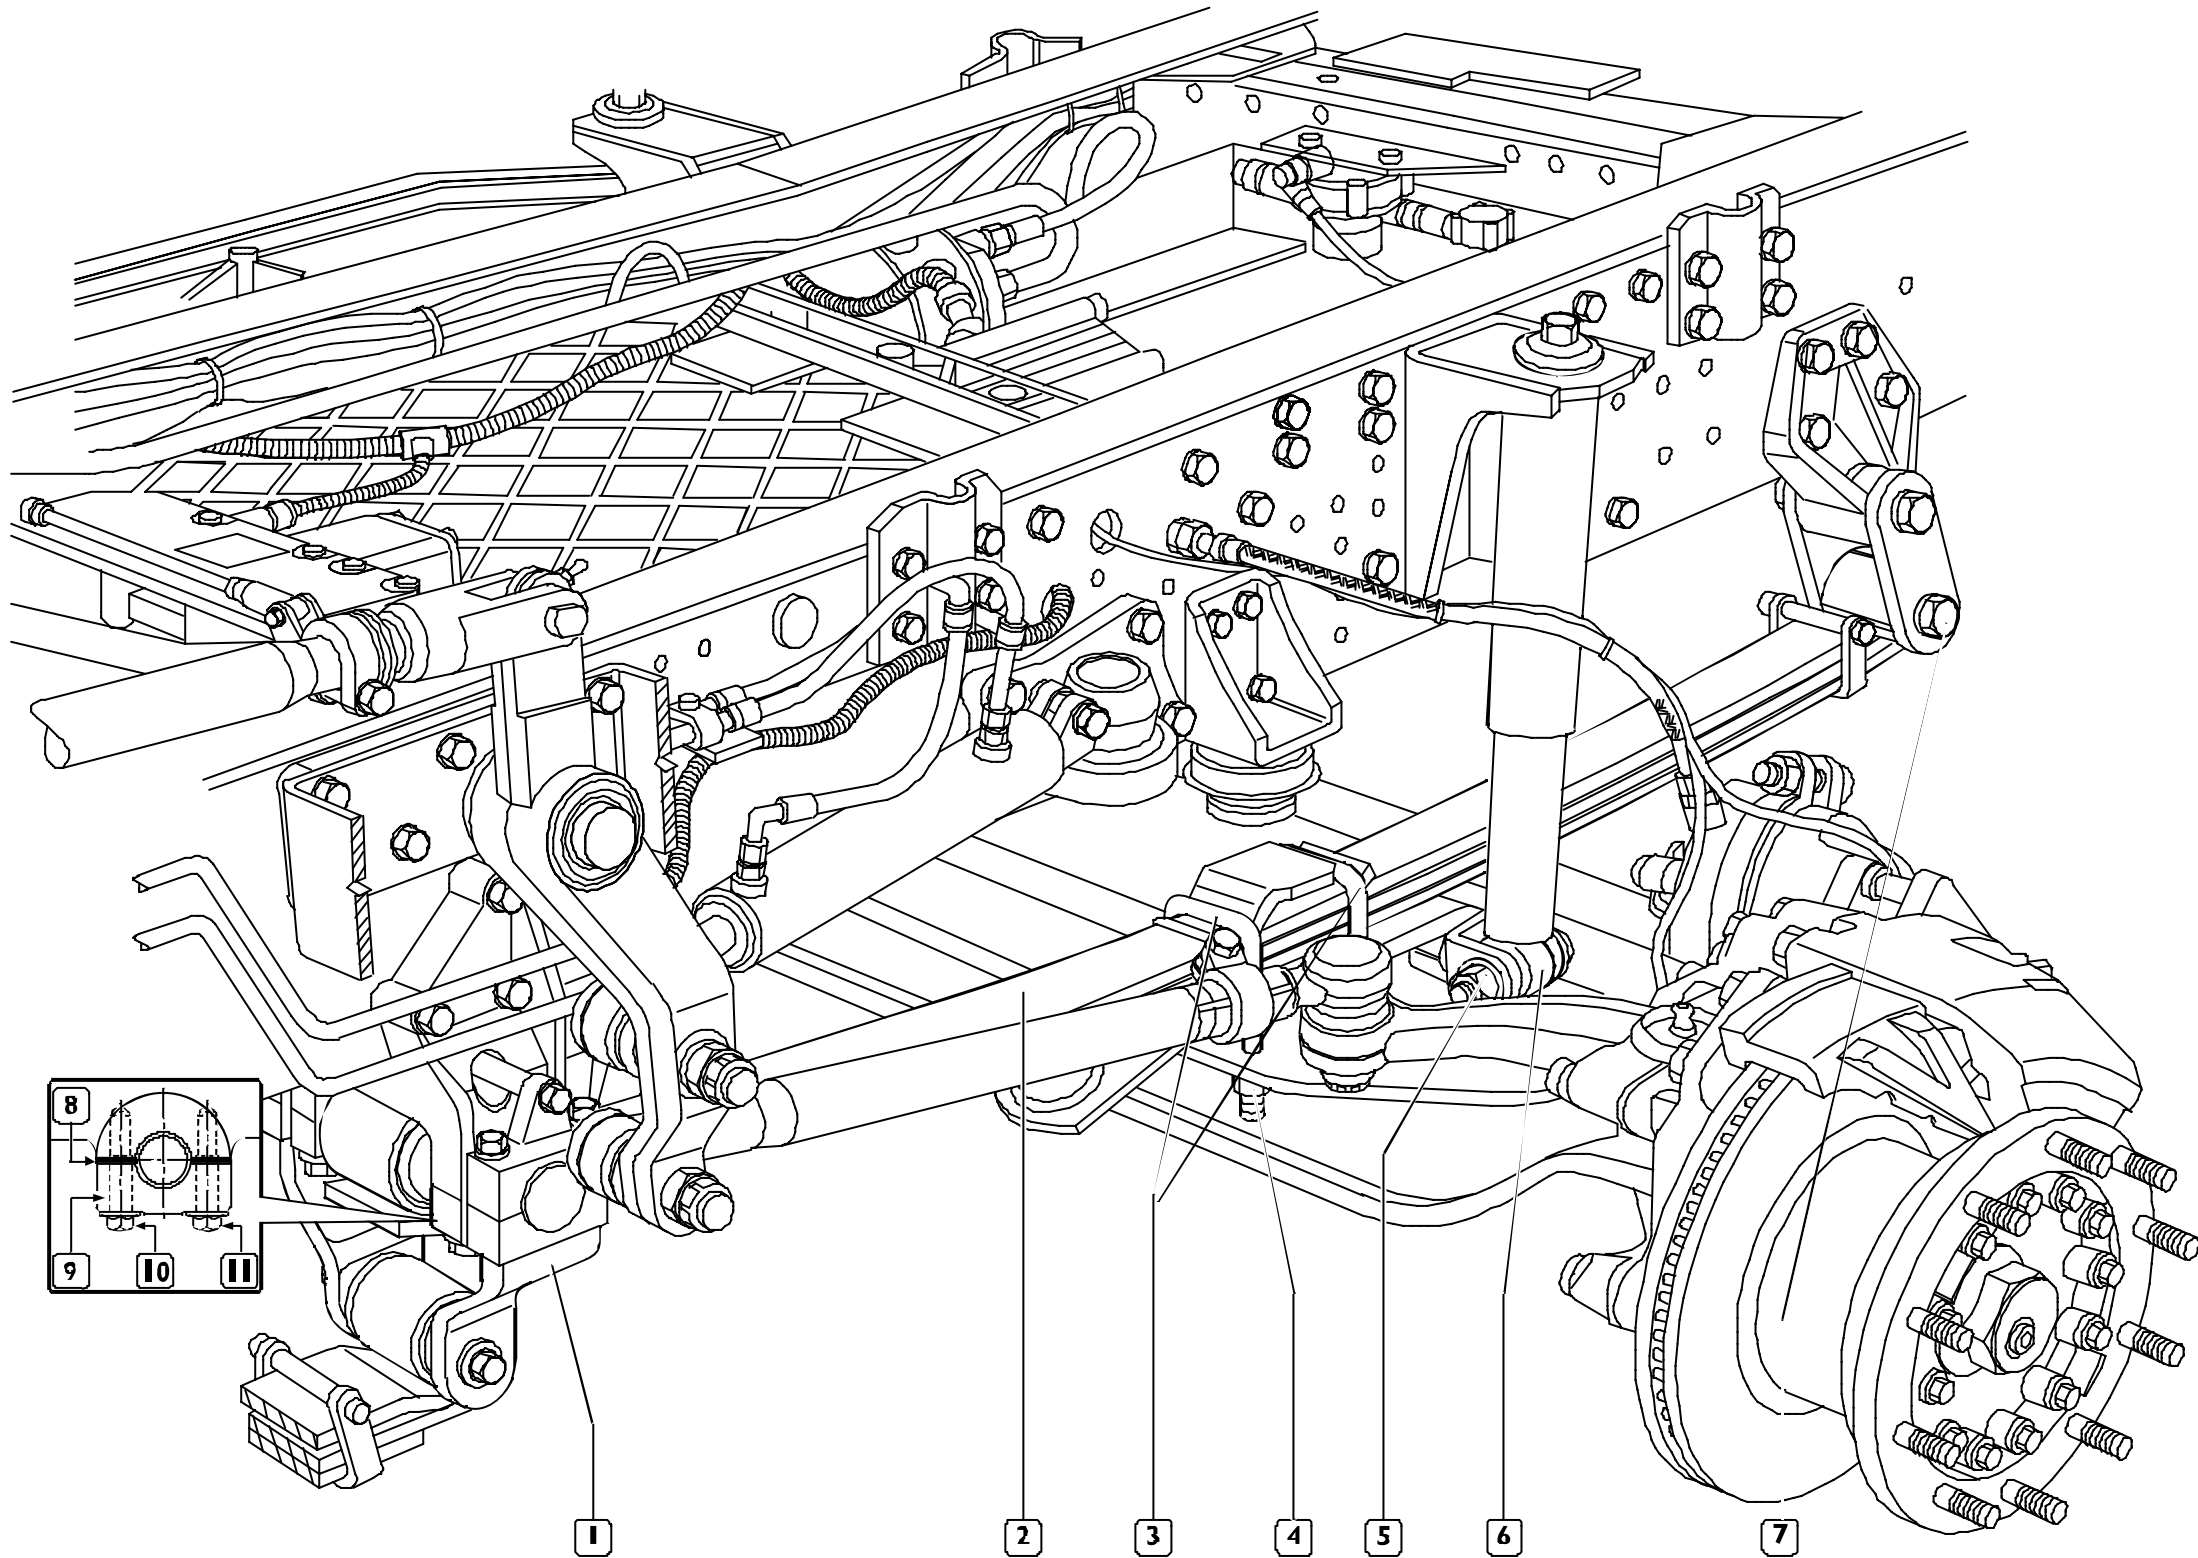

Aquila Trucks Centres

500410 REMOVAL-REFITTING OF REAR LEAF SPRING (4x2 - 4x4 VEHICLES)

Figure 39

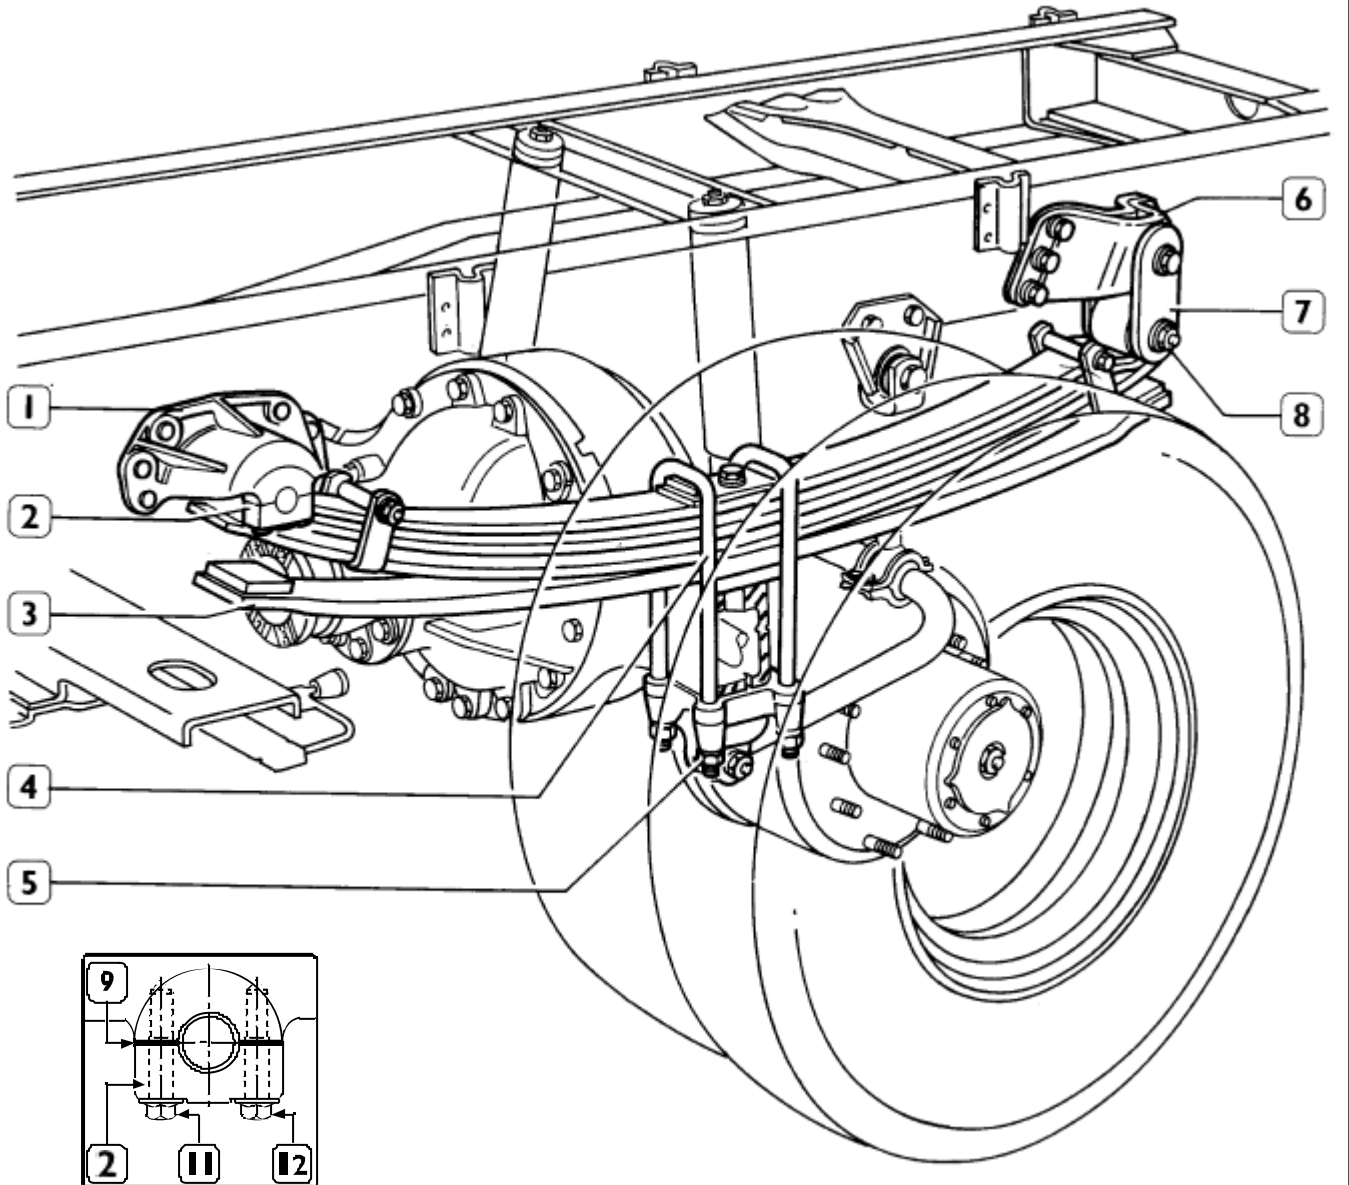

72339

REAR SUSPENSION WITH PARABOLIC LEAF SPRING**Removal**

Park the vehicle on level ground and chock the front wheels. Using a hydraulic jack, raise the vehicle and support the chassis on two stands.

Remove the wheels using hydraulic trolley 99321024.

Remove the nuts (5) and withdraw the U-bolts securing the leaf spring (3) to the axle.

Position trolley 99306064 under the leaf spring and attach the latter to the trolley with the specific brackets.

Remove bolts (11 and 12) and remove the cap (2) along with the spacer (9) that secures the spring shackle pin to the front hanger (1); unscrew nut (8) and withdraw the shackle pin securing the shackle plate (7) to the rear hanger (6).

Operate the jack to lower the axle so that the leaf spring centre bolt can be withdrawn.

Refitting

Carry out the removal operations in reverse order, observing the following instructions:



Inspect the threads on the U-bolts that secure the leaf spring to the axle; if damaged, restore the threads (operation 500412) or renew the U-bolts.

Check the condition of the rubber bump stops and renew them if deteriorated (operation 500417).




Tighten all nuts to the prescribed torque settings. To tighten down the cap (9), first tighten bolt (10) to the prescribed torque, interposing spacer (8), and then tighten bolt (11) without a spacer.

Aquila Trucks Centres

500430 REMOVAL-REFITTING OF REAR LEAF SPRING ON CANTILEVER TYPE SUSPENSIONS (6x4 - 6x6 - 8x4 - 8x8 VEHICLES)

Figure 29

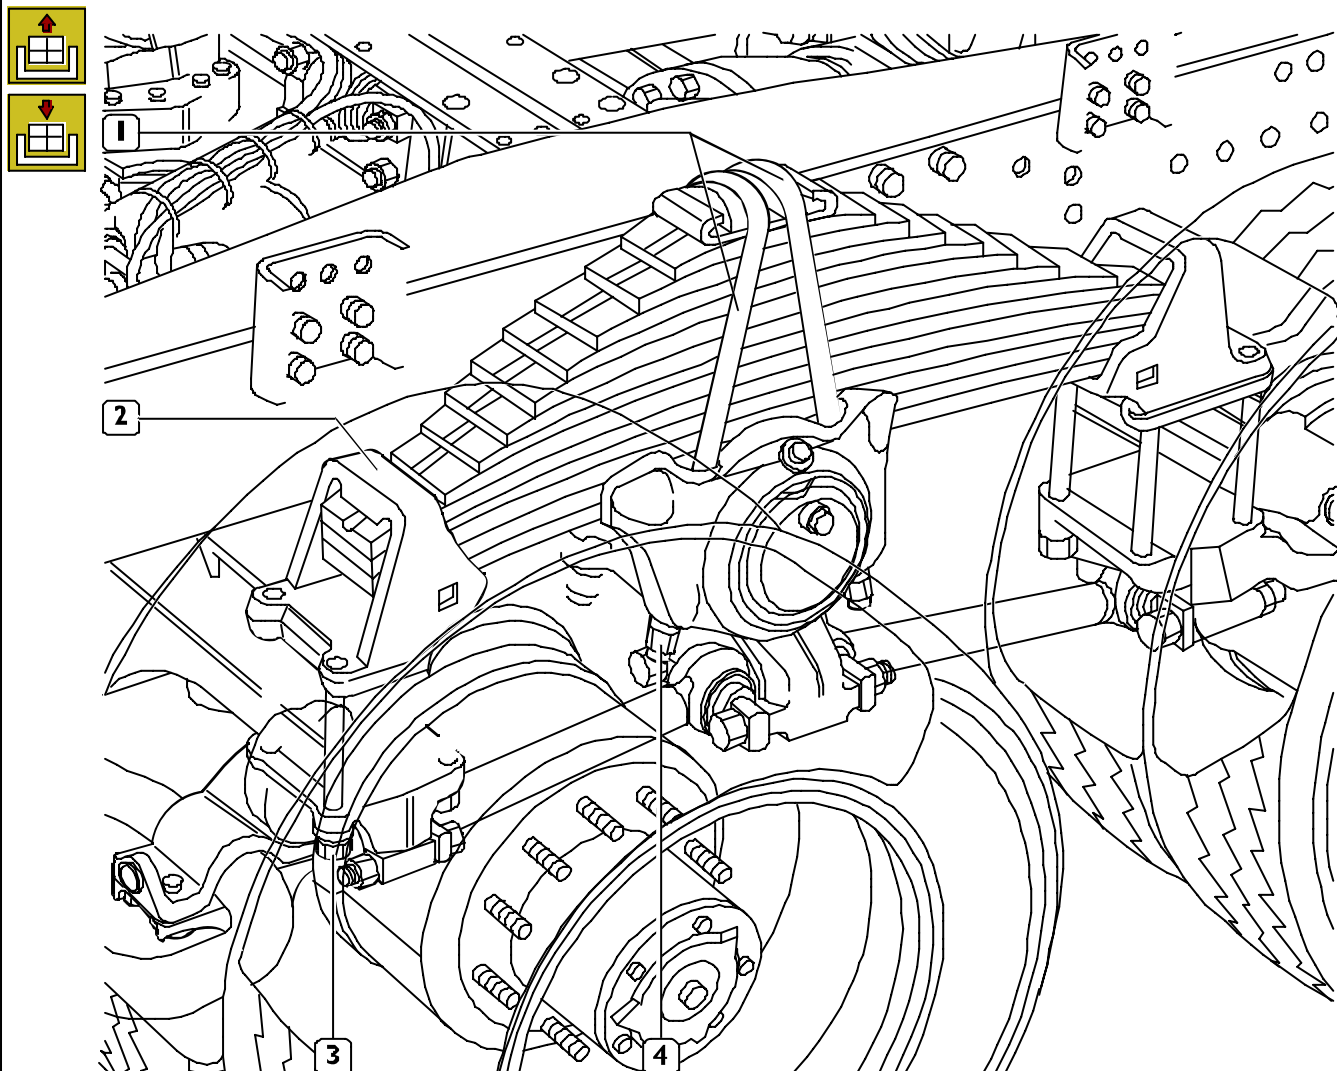

71516

Removal

Park the vehicle on level ground, chock the front wheels and loosen the rear wheel nuts.

Position the bracket 99370617 on a hydraulic jack, place the jack under the axle and raise the rear of the vehicle. Support the chassis frame and the intermediate and rear axles on stands, while ensuring that the bracket maintains contact with the axle.

Remove the wheel nuts and remove the wheels using hydraulic trolley 99321024.

Remove the nuts (5) of the U-bolts (1) securing the leaf spring (6) to the central pivot.

Remove the bolts (3) and detach the longitudinal bar mounting bracket (4) and the slipper block (2) from the axle casing.

Proceed with the removal of the complete leaf spring from the vehicle using a suitable jack.

Refitting

Carry out the removal operations in reverse order, observing the following instructions.




Inspect the threads on the U-bolts that secure the leaf spring to the axle; if damaged, re-cut the threads (operation 500452) or renew the U-bolts. Fit the slipper block and the longitudinal bar mounting bracket as described on page 79.

Aquila Trucks Centres

Procedure for assembly of the slipper block and mounting brackets for the longitudinal bars

Figure 30

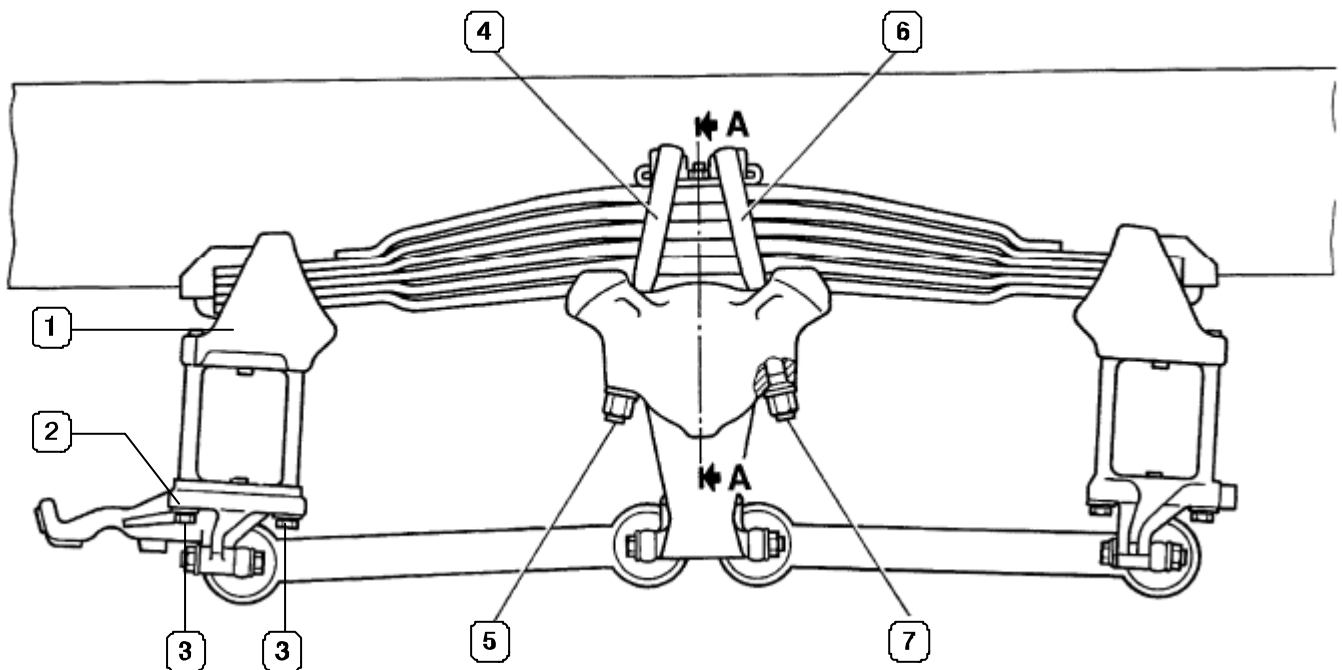

36836

- Apply MODILAC grease to the threads of the slipper block (1);
- apply resin for box frames to bolt contact surfaces and holes in the bracket (2);
- after having aligned the parts, pre-tighten bolts (3) in cross-wise sequence to a torque of 100 Nm;
- finally tighten bolts (3) to a torque of 420 Nm.

Tightening the U-bolts clamping the leaf spring to the central pivot

Tighten the leaf spring (4 and 6) clamping nuts (5 and 7) as follows:

- tighten nuts (5) to a torque of 300 to 500 Nm
- tighten nuts (7) to a torque of 750 to 900 Nm
- tighten nuts (5) to a torque of 750 to 900 Nm


Aquila Trucks Centres

REAR CANTILEVER SUSPENSION
(6x4 - 6x6 - 8x4 - 8x8 vehicles)

- 500440** Removal-refitting of central pivot shaft
500442 Removal-refitting of central pivot shaft
500443 Renewal of bearings
500449 Removal-refitting of hanger bracket

Removal of the central pivot

Figure 31

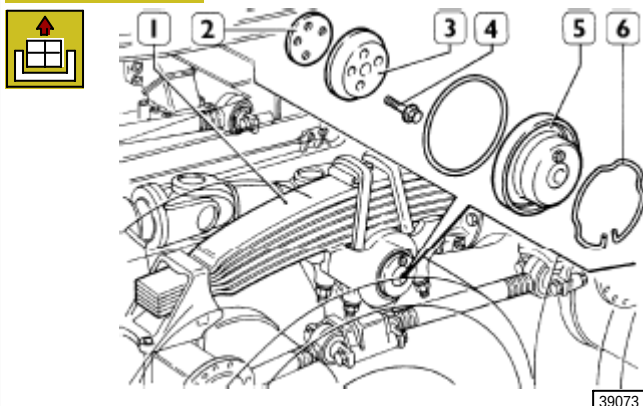


Remove the leaf spring (1) as described in the relative chapter (operation 500430).



Raise the front of the vehicle and support it on stands so that the chassis frame is level. Remove the spring clip (6) and remove the cap (5). Unscrew the bolts (4) and remove plate and the underlying adjustment shims (2).


Figure 32

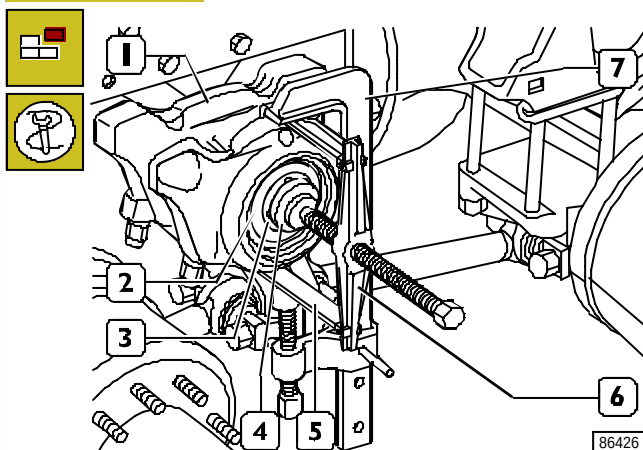

With tools 99341011 (5), 99341003 (6), 99341015 (7) and reaction block 99345055 (4), withdraw from shaft (3) the central support (1) completed with external half-bearing (2).

Removal of the central pivot shaft

Figure 33

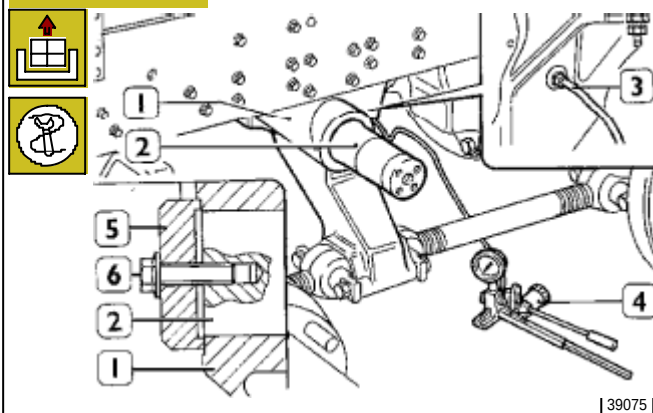

Loosen bolt (6) by one full turn.




Do not remove the bolt (6) and plate (5) as these will prevent the shaft (2) from being violently expelled from the bracket during the subsequent operation.

Removal of the hanger bracket

Fit the pipe (3) of hydraulic pump 99341035 (4) to the hole in the hanger bracket (1); operate the pump to separate the shaft (2) from the bracket (1). Remove bolt (6) and plate (5) and withdraw the shaft (2) from the bracket (1).


Figure 34

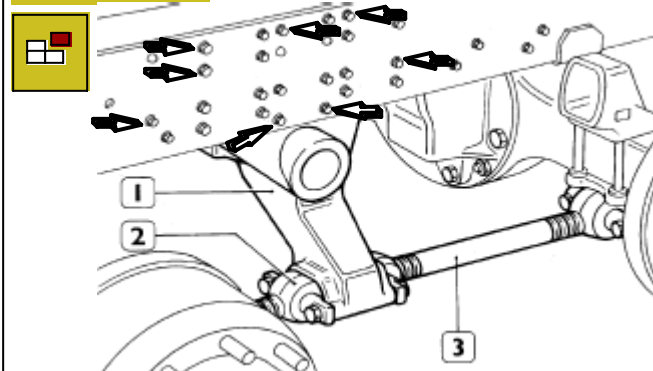

Detach the longitudinal tie-rods (2 and 3) and detach the bracket (1). If the upper bracket (1, Figure 38) is to be replaced, remove the retaining bolts (⇒) and detach it from the chassis side members.

Renewal of the bearings


Figure 35

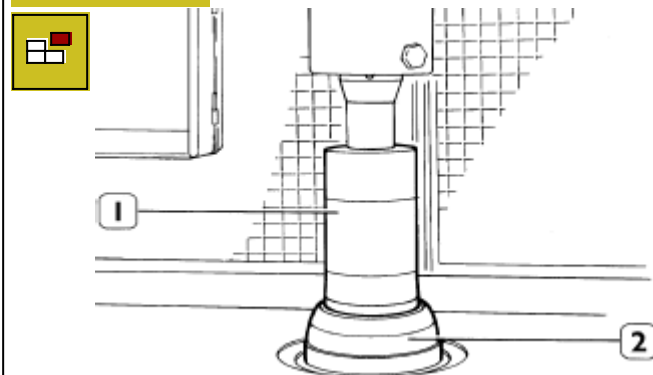

Using a hydraulic press, withdraw the inner bearing race (2) of the central pivot shaft (1).

Aquila Trucks Centres

Figure 36

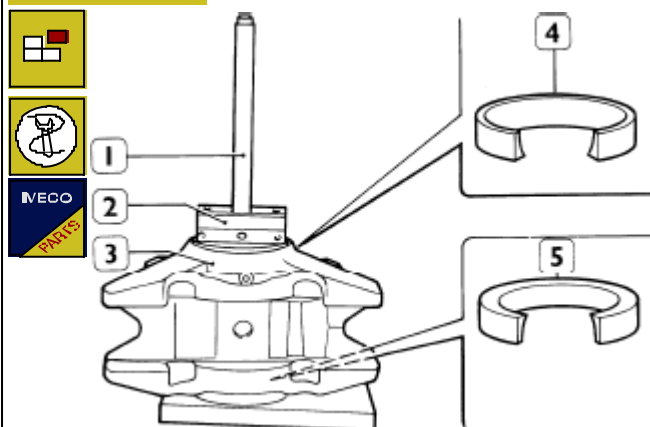

The outer races of the bearings (4 and 5) are to be removed from the central pivot with the aid of a suitable bearing extraction tool.

To refit the bearings, use tool 99374094 (2) with a press and partially insert the bearings in the central pivot (3).

Complete the installation using a mallet and driver handle 99370007 (1).


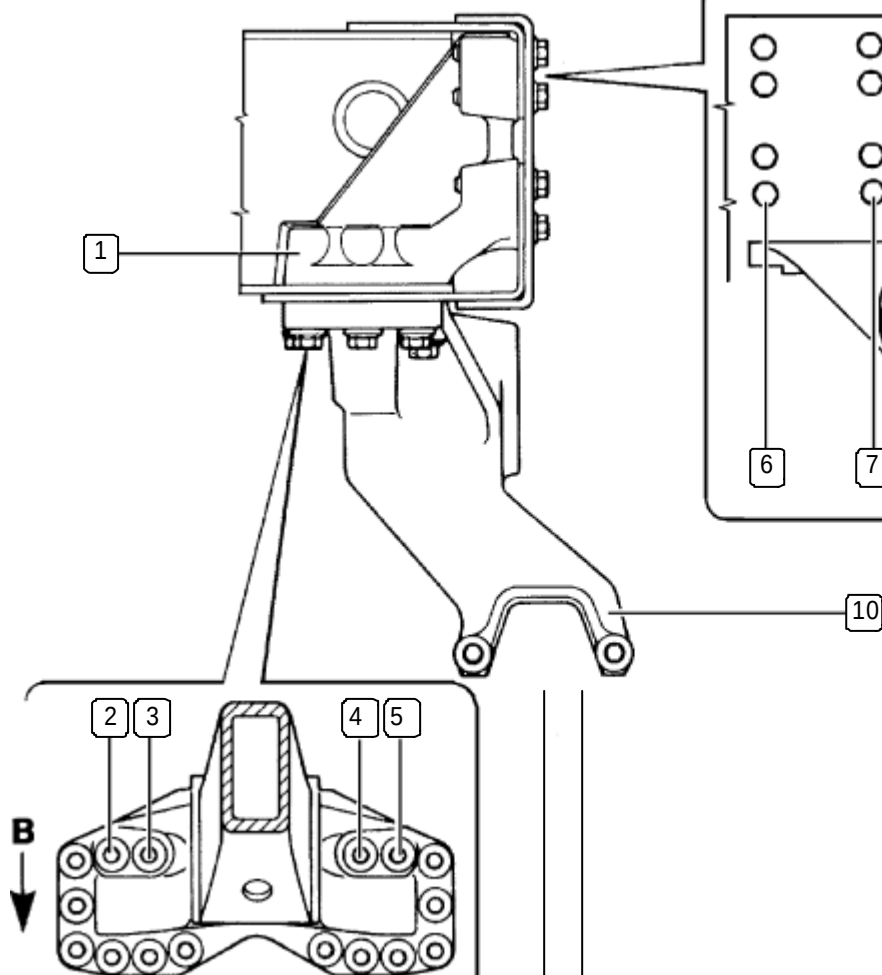


Figure 37

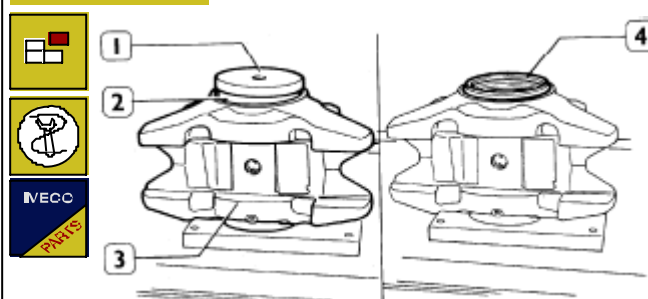


39080

Using installer (1) 99374119 or 99374131, install the seal (2) in the central pivot (3). Then fit ring (4).

Refitting the hanger bracket

Figure 38

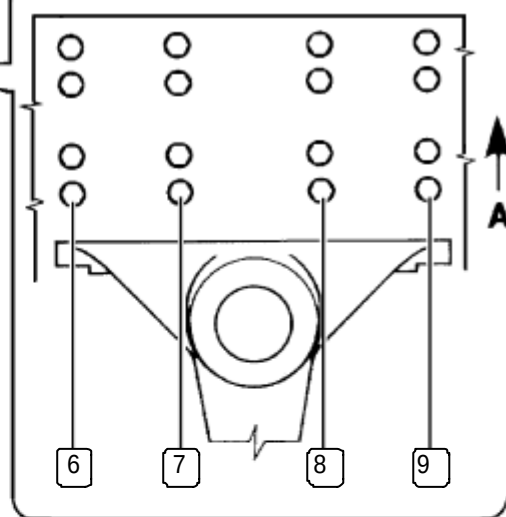

179

n-
i-
er
se
ie
on


of arrow A.

- Tightening torque for bolts securing lower bracket (10) to upper bracket (1): 395 to 590 Nm;
- Tightening torque for bolts securing upper bracket (1) to chassis side member: 215 to 325 Nm;

Aquila Trucks Centres

Refitting the central pivot shaft


Figure 39

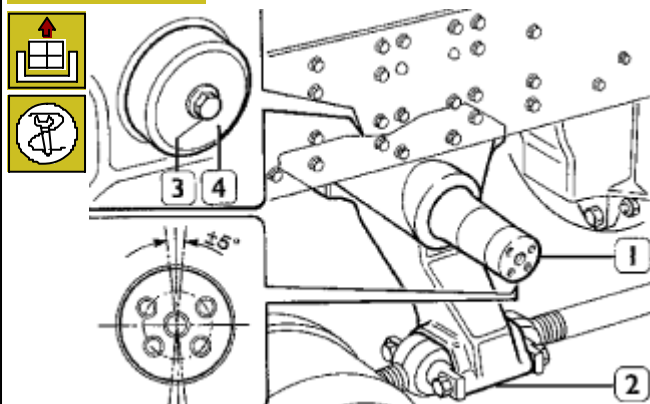

39081

Insert the shaft (1) in the hanger bracket (2) with the holes oriented as shown in the figure; position the plate (4) on the bracket (2) and secure it to the shaft (1) with the bolt (3).


Figure 40

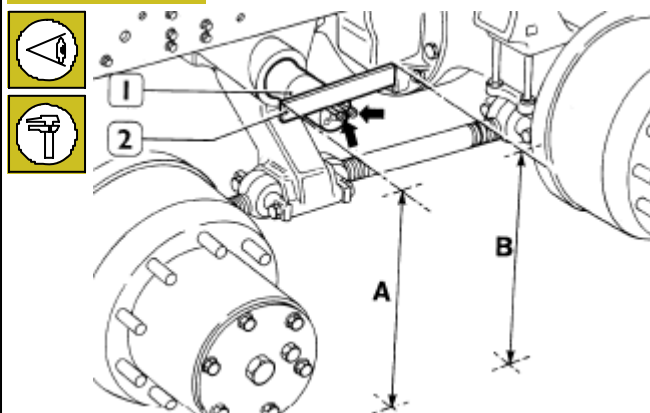

39082

Screw the bolts (⇒) into the holes in the shaft (1); place a straight edge (2) along the top of the bolts and check that the ends A and B are equidistant from the ground; if not, adjust by turning the shaft (1).


Figure 41

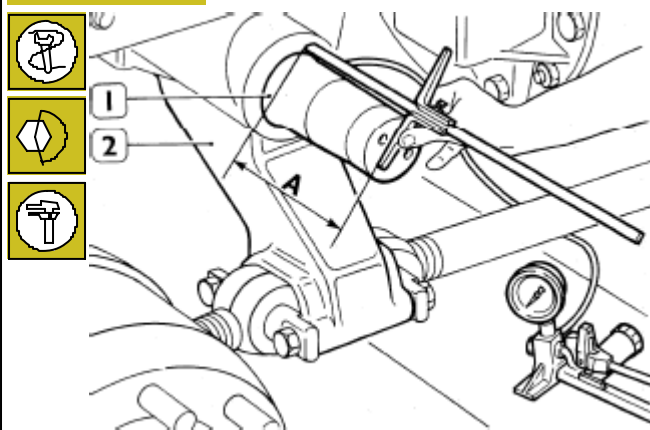

39083

Hold the shaft (1) against rotation and tighten the bolts (3, Figure 37) to a torque of 50 Nm. Measure the distance A between the end of the shaft (1) and the hanger bracket (2). The distance measured must be within the range indicated in the table in Figure 42.

Figure 42

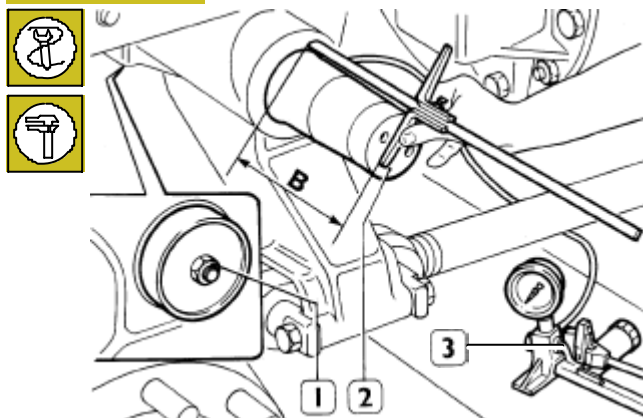

39084

While holding the shaft (2) against rotation, operate the hydraulic pump 99341035 (3) and simultaneously screw in bolt (1) until the end of the shaft (2) is positioned at distance B from the bracket.

The distance B must be equal to A-C, where A is the distance previously measured and C is the value indicated in the table. The distance B must be within the range indicated in the table.

Measure- ment	Outside diameter of shaft end (2)	
	88 mm	120 mm
A	217.5 ÷ 220.5	211.5 ÷ 215
B	213.5 ÷ 216.5	205 ÷ 208.5
C	4.5 +05	6.5 +05




Towards the end of the shaft fitting procedure, the oil reaches a pressure between 800 and 1300 bar.

Having obtained distance B, open the discharge valve on the hydraulic pump 99341035 and wait at least 10 minutes before finally tightening the bolt (1) to a torque of 830 to 665 Nm (83 to 66.5 kgm). Disconnect the pump tube from the hanger bracket and refit the plug to the oil inlet hole.

Refitting the central pivot


Figure 43

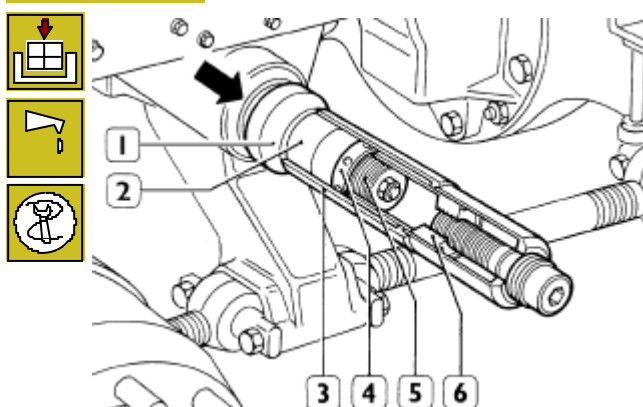

Lubricate the oil seal (⇒) with TUTELA MR3 grease and fit it to the shaft (2). Using tools 99346238 or 99346242 (3), 99363296 or 9936330 (4), 99363245 (5), and 99346004 (6), which are to be fitted to the shaft (2) as shown, install the inner bearing (1).

Aquila Trucks Centres


Figure 44

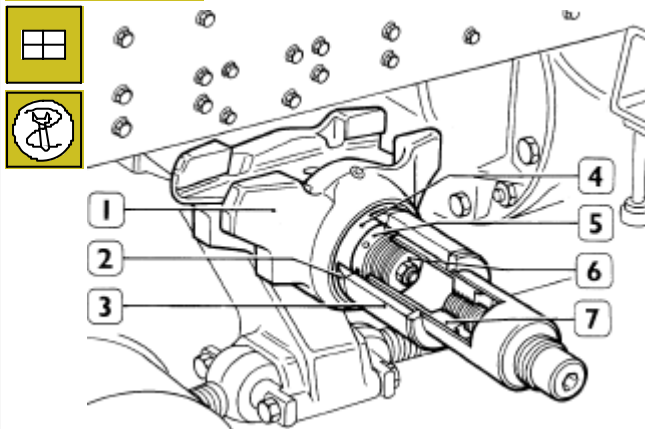

Fit the central pivot (1) to the shaft (4) and, using tools 99346243 (3), 99363296 (5), 99363245 (6), 99346004 (7) and 99346001 (8), fitted to the shaft (4) as shown, install the inner race of the outer bearing (2).

NOTE Towards the end of the installation operation, it will be necessary to tap the central pivot (1) with a mallet to ensure that the inner races of the bearings seat correctly in their respective housings. Remove the installation tools from the shaft.

Figure 45

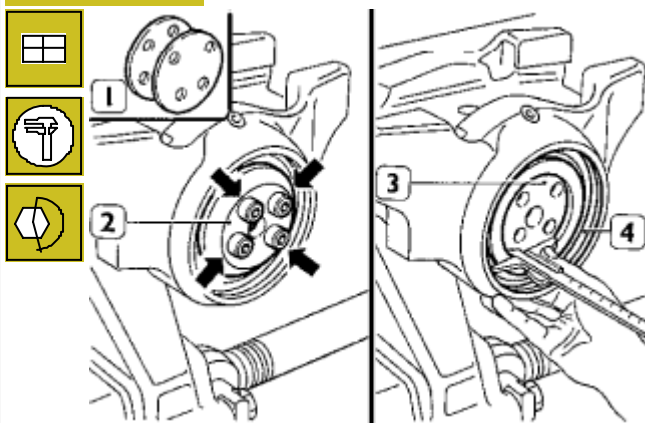

Determine the thickness S of the bearing axial play adjustment shims (1) as follows:


- apply the plate (2) and tighten the retaining bolts ($\Rightarrow$) to a torque of 30 Nm;
- Remove the bolts ($\Rightarrow$), remove the plate and measure the distance between the end of the shaft (3) and the inner race (4) of the bearing:
distance A shaft protrusion
distance -A shaft stand-in
- measure the stand-in of the plate surface (1) as shown in Figure 35: distance B.

The thickness S of the adjustment shim is given by:

$$S = B + C - (\pm A)$$


A and B are the measured distances and C is the axial play of the bearings (0.1 to 0.3 mm). Then fit: adjustment shim/s of the calculated thickness and the plate (2) and tighten the retaining bolts ($\Rightarrow$) to a torque of 240 Nm. Fit the leafspring and tighten the u-bolt nuts in the manner described on page 79.

Figure 46

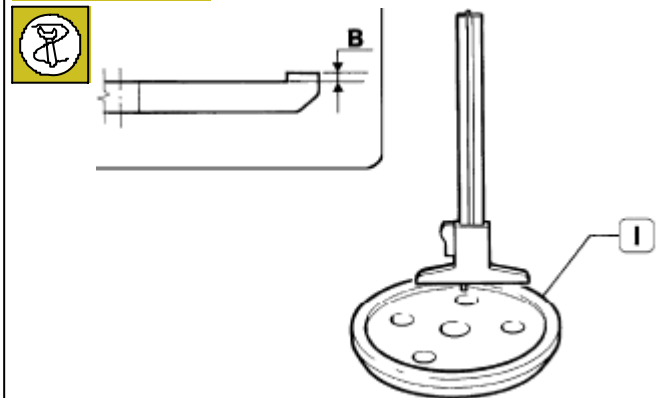

Tap the central pivot a few times in the direction of the shaft axis, then check that the pivot can freely rotate through 180°; if not, increase the thickness of the adjustment shim by 0.1 mm.

Figure 47

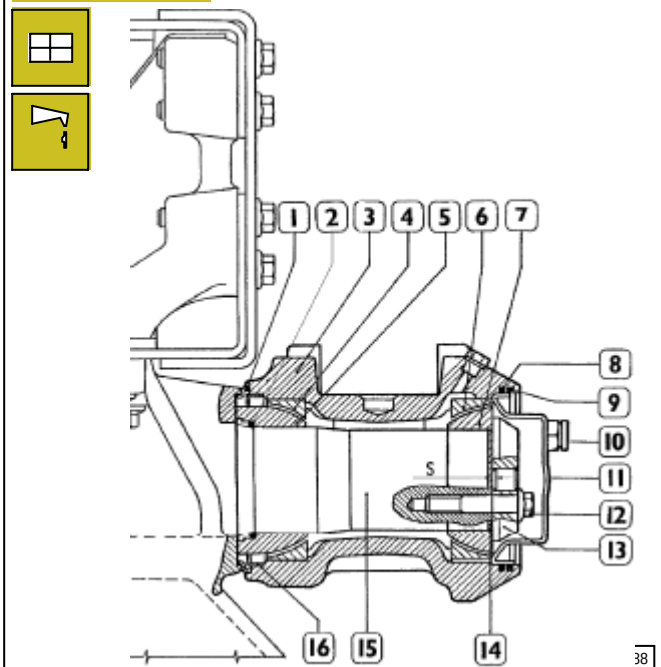

CENTRAL PIVOT COMPONENTS

1. Oil seal - 2. Oil seal - 3. Central pivot -
4. Outer race of inner bearing - 5. Inner race of inner bearing - 6. Outer race of outer bearing - 7. Inner race of outer bearing - 8. Oil seal - 9. Spring clip - 10. Plug -
11. Cap - 12. Bolt - 13. Plate - 14. Adjustment shims -
15. Shaft - 16. Seal.

Fit: oil seal (8) lubricated with TUTELA MR3 grease and cap (11) with plug (10) positioned at the top. Secure the cap (11) to the central pivot (3) with spring clip (9). Remove the plug (10) and pour in TUTELA GI/A oil until it flows out of the hole (quantity ~ 0.5 l).

Inject Tutela MR2 grease into the grease nipple located on the hanger bracket: complete the suspension refitting procedure as described on page 78.

Aquila Trucks Centres

- 528913 REMOVAL-REFITTING OF REAR AXLE LONGITUDINAL ARM**
528914 REMOVAL-REFITTING OF INTERMEDIATE AXLE LONGITUDINAL ARM
528918 REMOVAL-REFITTING OF REAR AXLE TRIANGULAR ARM FOR VEHICLES WITH AIR SUSPENSION


**Removal**

Remove the retaining nuts or bolts (⇒) of the longitudinal arms (1, Figure 49) or triangular arms (1, Figure 48), and remove the arms.

**Refitting**


Refitting is the reverse of removal. Tighten nuts/bolts to the specified torque.

Figure 48

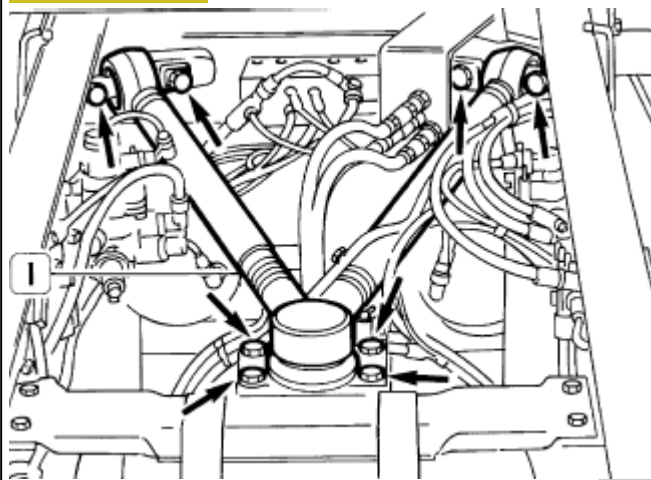

TRIANGULAR ARM FITTED TO VEHICLES
WITH AIR SUSPENSION 4x4 - 6x4 - 8x4

Figure 49

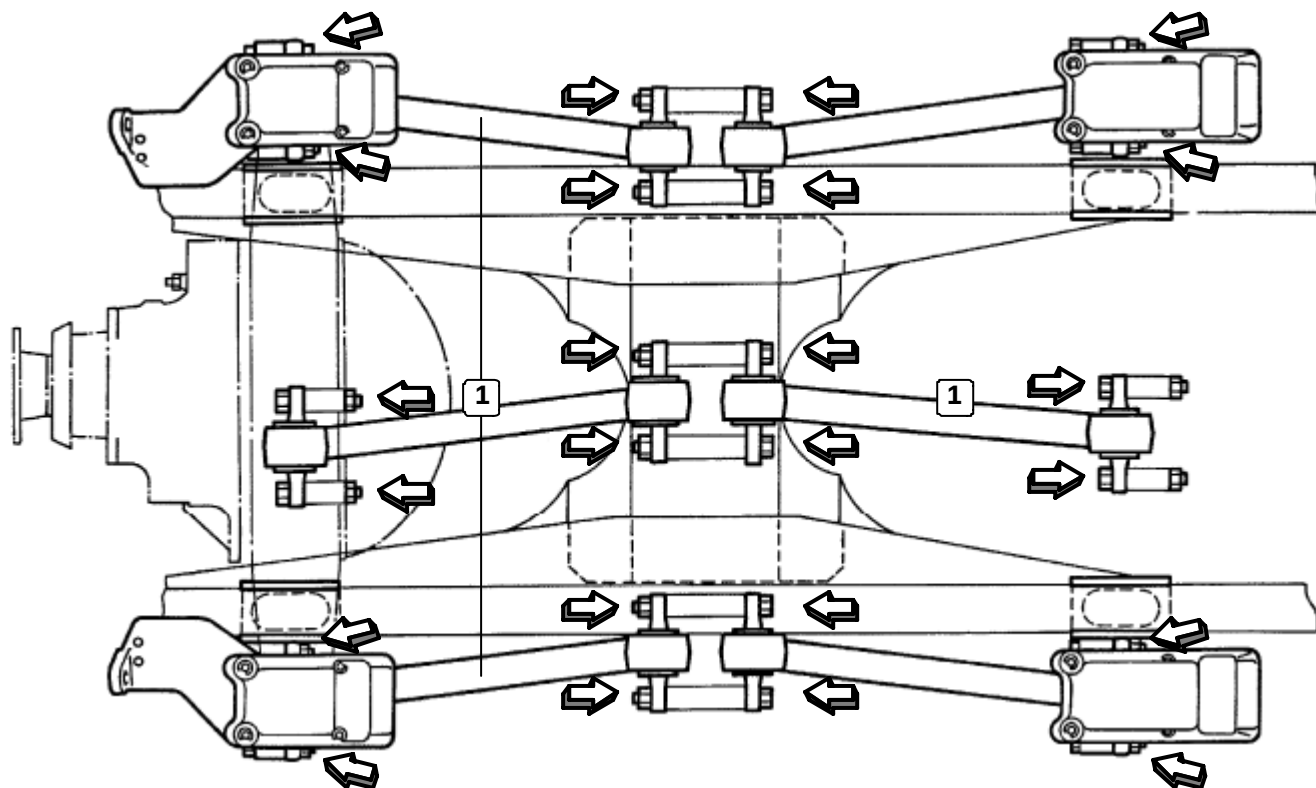


LONGITUDINAL ARMS FITTED TO 6x4 - 8x4 - 8x8 VEHICLES

Aquila Trucks Centres

REPLACING THE SUSPENSION ARM FLEXIBLE PIN

Figure 50

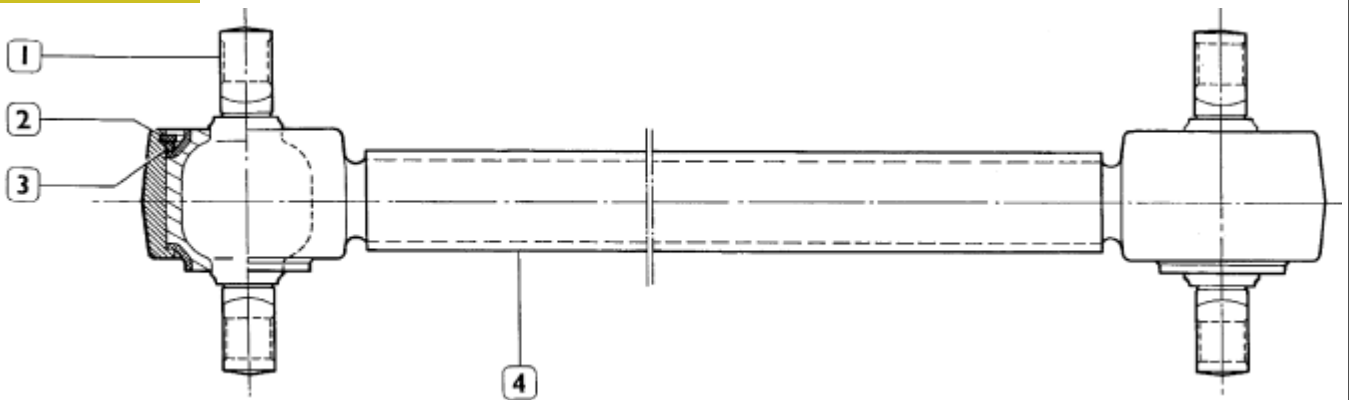

38700

LONGITUDINAL SUSPENSION ARM

Dismounting

Using a suitable press and drift, compress the flexible part of the pin (1) in order to remove the circlip (2) and the underlying ring (3) with pincers.


Withdraw the pin (1) from the suspension arm (4).

Mounting

Carry out the removal operations in reverse order, bearing in mind that the pin mounting face must be positioned at 90° to the longitudinal axis of the suspension arm. The circlip opening must be oriented as shown in the detail in the figure.

REPLACING TRIANGULAR SWINGING ARM BALL ARTICULATED JOINT

Figure 51

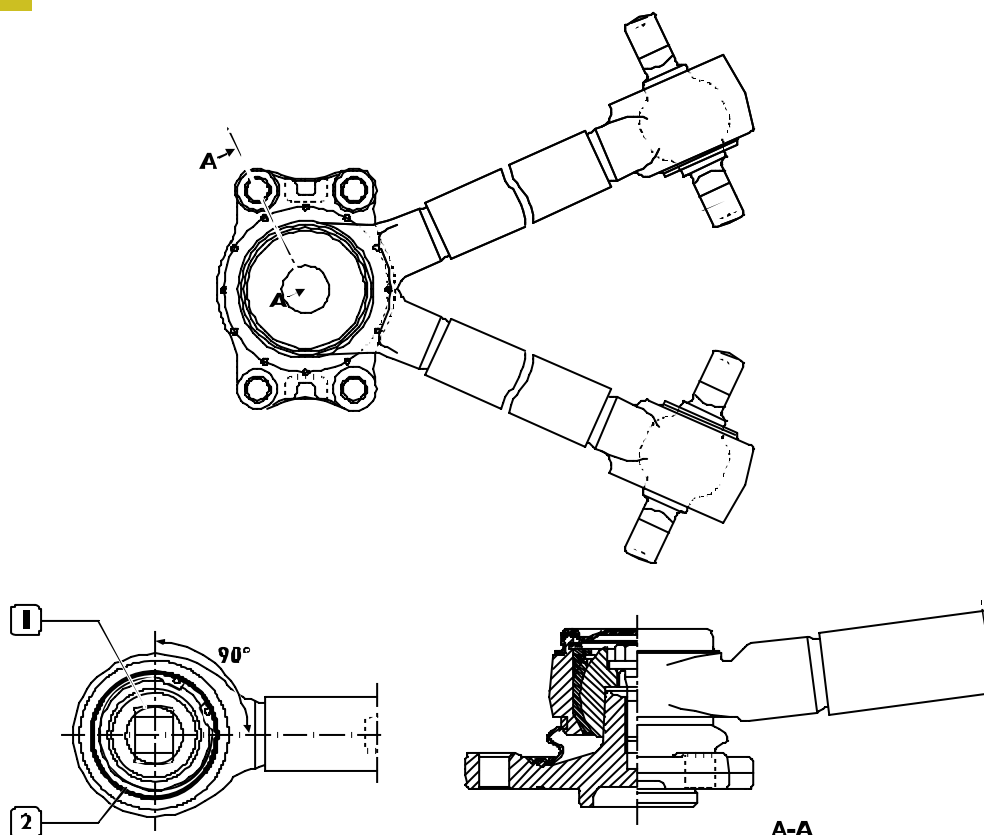

79479

TRIANGULAR SUSPENSION ARM

Aquila Trucks Centres


Dismounting



Replacing the ball articulated joint directly on the vehicle can only be performed on tractors. For boxed trucks, the operation is carried out at the bench after detaching the reaction triangle (see procedure described at page 84).

Before replacing the articulated joint, a stand has to be arranged under the axle in order to avoid dangerous oscillations of it once dismounting has been performed.


Figure 52

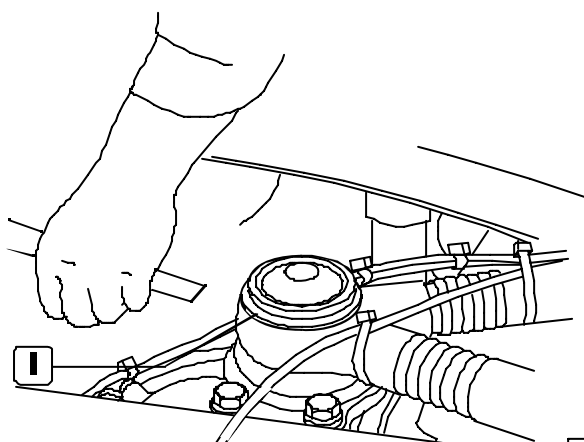

Dismount cover (1).


NOTE Once it has been removed, the cover is to be replaced by a new one.

Figure 53

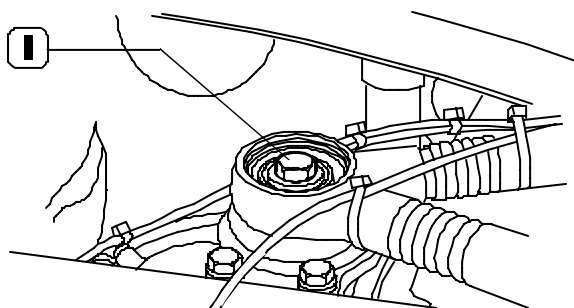

Unscrew screw (1).


Figure 54

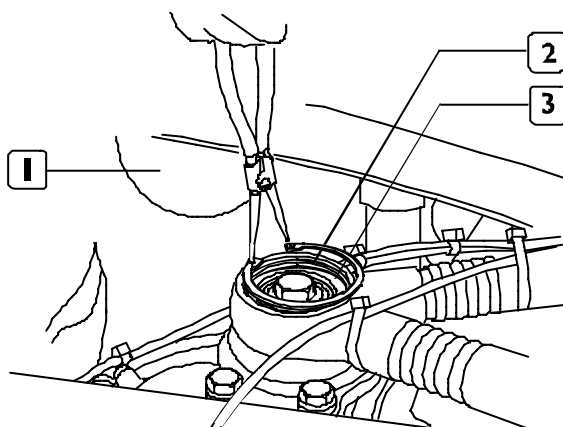

Remove spring ring (1) by pliers.

Remove underlying check rings (2, 3).


Figure 55

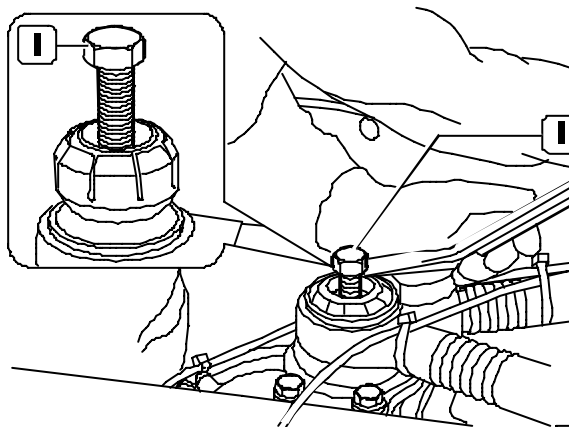

Dismount the ball articulated joint with M20 X 1,5 screw (1) and suitable tools.

Mounting


Figure 56

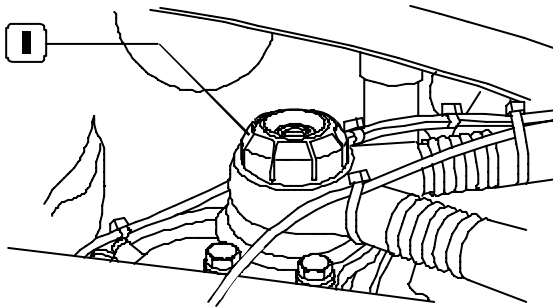

Mount ball articulated joint (1) into seat by provided beater


Aquila Trucks Centres

Figure 57

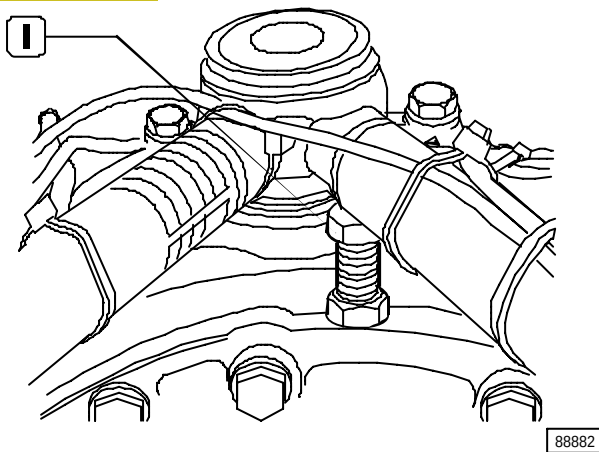


Arrange part (1) of the tool of Sp. 2403 under one of reaction triangle arms to the purpose of making upper seal ring mounting easier.

Figure 58

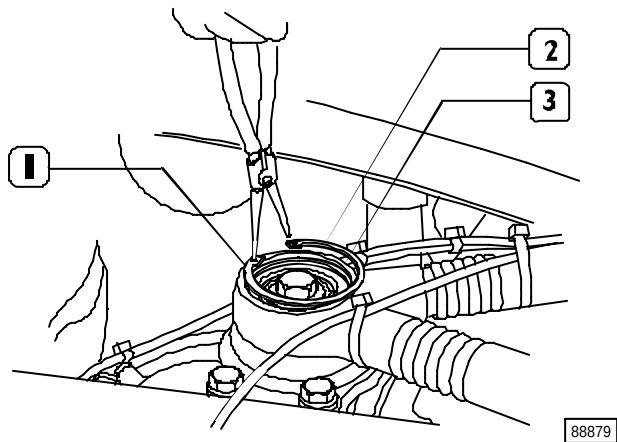


Mount seal rings (1, 2, 3).
Remove the part of tool (1) of Sp. 2403 (see previous figure).

Figure 59

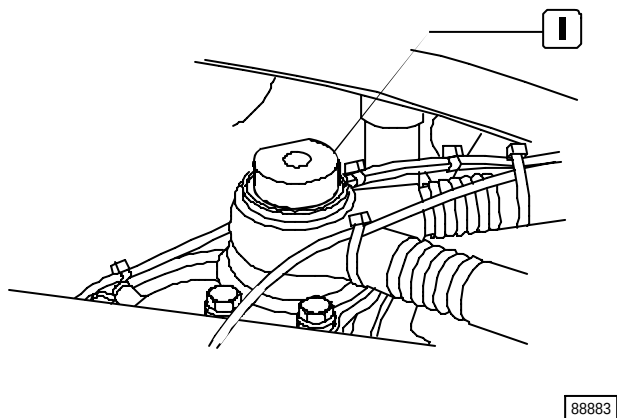


Position spacer (1) of the tool of Sp. 2403 as in figure.

Figure 60

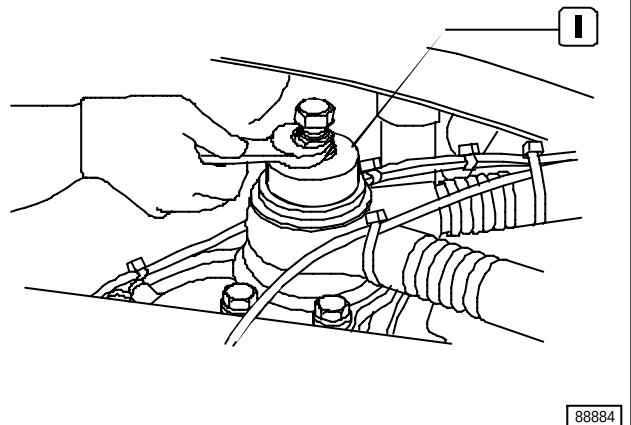


By tool (1) of Sp. 2403, draw the ball articulated joint and seal ring.

Figure 61

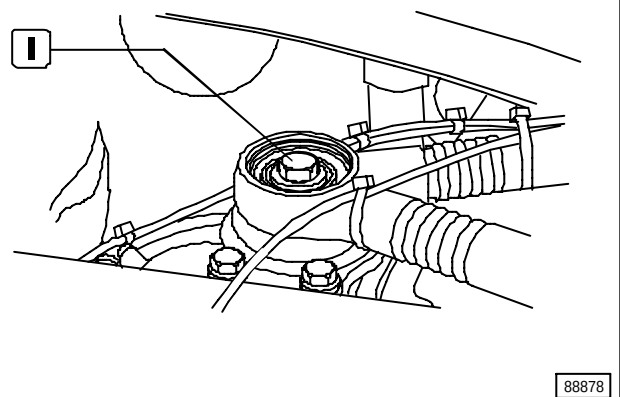

Tighten screw (1) with a proper torque (135 Nm).

Figure 62

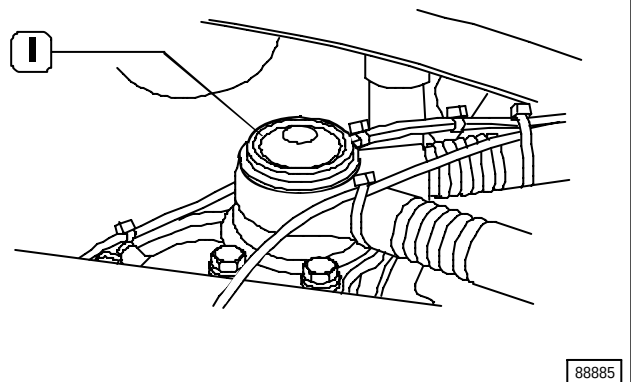


Mount cover (1).

Aquila Trucks Centres


5009 SHOCK ABSORBERS

Fig

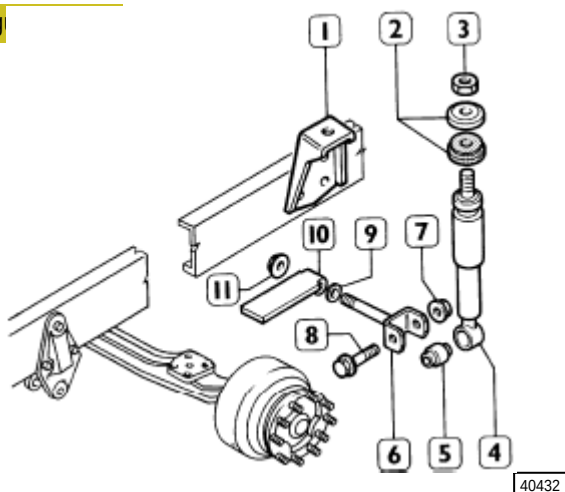

1. Hanger bracket - 2. Bushes - 3. Nut -
4. Shock absorber - 5. Bush - 6. Lower mounting bracket -
7. Nut - 8. Bolt - 9. Washer - 10. Bracket - 11. Nut.

Figure 64

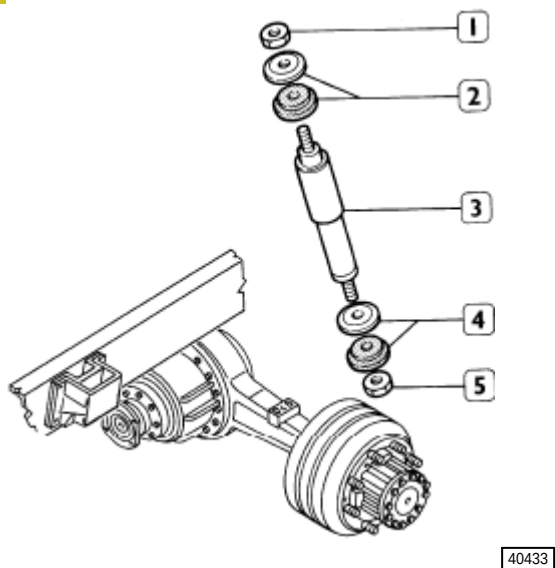

1. Hanger bracket - 2. Bushes - 3. Nut -
4. Shock absorber - 5. Bush - 6. Lower mounting bracket -
7. Nut - 8. Bolt - 9. Washer - 10. Bracket - 11. Nut.

Removal

Remove the shock absorber by removing the upper and lower mounting bolts/nuts.


NOTE Inspect the rubber bushes; if worn or deteriorated, renew them. Check shock absorber efficiency using suitable test equipment.

Refitting

Carry out the removal operations in reverse order; tighten bolts and nuts to specified torques.

5289 ANTI-ROLL BARS


Figure 65

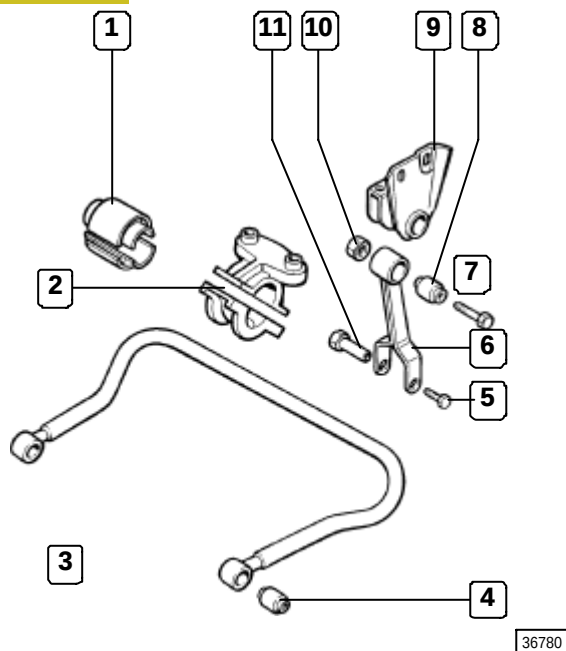

FRONT ANTI-ROLL BAR COMPONENTS

1. Bush - 2. Bush support - 3. Anti-roll bar -
4. Rubber bush - 5. Bolt - 6. Link rod - 7. Bolt -
8. Rubber bush - 9. Bracket - 10. Nut - 11. Bolt

Figure 66

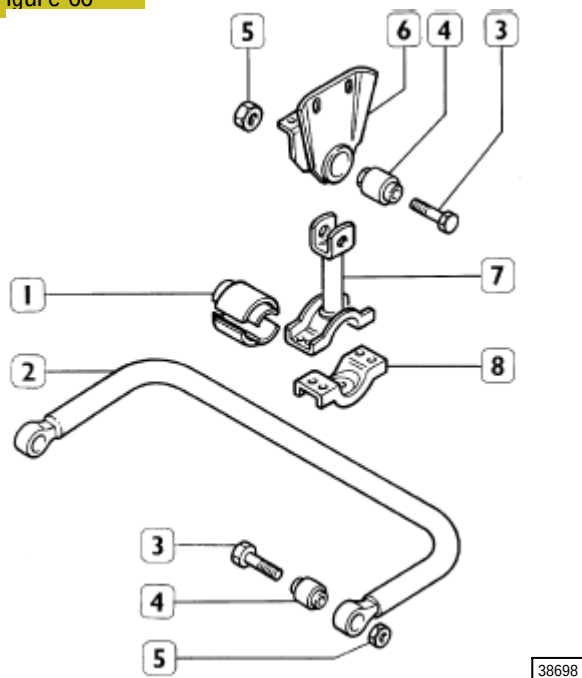

REAR ANTI-ROLL BAR COMPONENTS

1. Bush - 2. Anti-roll bar - 3. Bolt - 4. Rubber bush -
5. Nut - 6. Bracket - 7. Link rod - 8. Cap

To renew the rubber bushes (4-8, Figure 65) and (4, Figure 66), use a press with tool 99346049 to remove and install the bushes.

Aquila Trucks Centres

- 5289 ANTI-ROLL BAR**
528930 FRONT ANTI-ROLL BAR
528940 AUXILIARY AXLE ANTI-ROLL BAR (8x4 VEHICLES)
528960 REAR ANTI-ROLL BAR
528950 INTERMEDIATE AXLE ANTI-ROLL BAR (6x4 - 6x6 - 8x4 - 8x8 VEHICLES)

Removal

Remove the anti-roll bar by removing the nuts/bolts securing the pivot mountings and the cap retaining bolts.



Check the bushes and/or rubber mountings and renew them if they show signs of wear or deterioration.

Refitting

Refit by carrying out the removal operations in reverse order; tighten nuts/bolts to the specified torques.



NOTE Position the half bushes (4) so that the joint is located as shown in the figure.


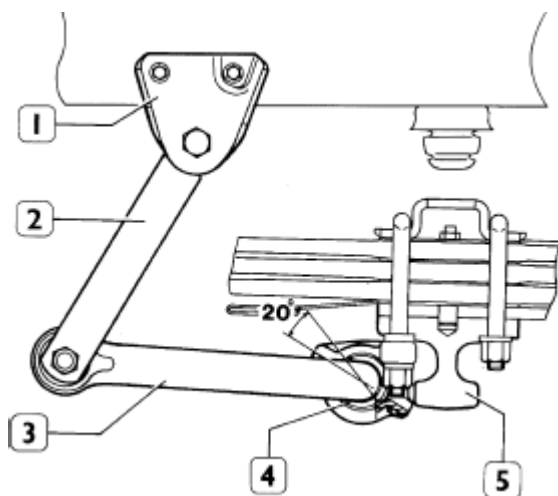


Figure 67


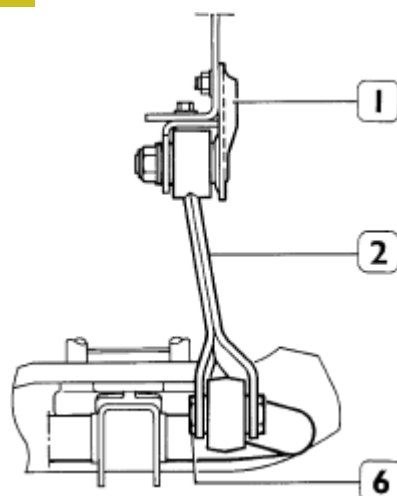


38694

ASSEMBLY DRAWING FOR FRONT ANTI-ROLL BAR: 4x2 - 6x4 - 8x4 VEHICLES

1. Upper hanger bracket - 2. Link rod - 3. Anti-roll bar - 4. Rubber bush (in two halves) - 5. Front axle - 6. Cap.

Figure 68

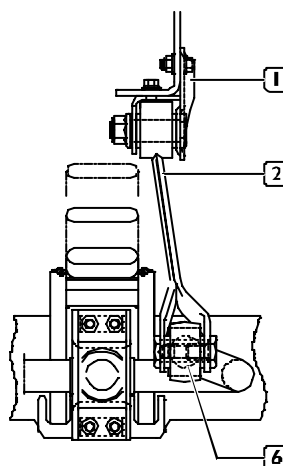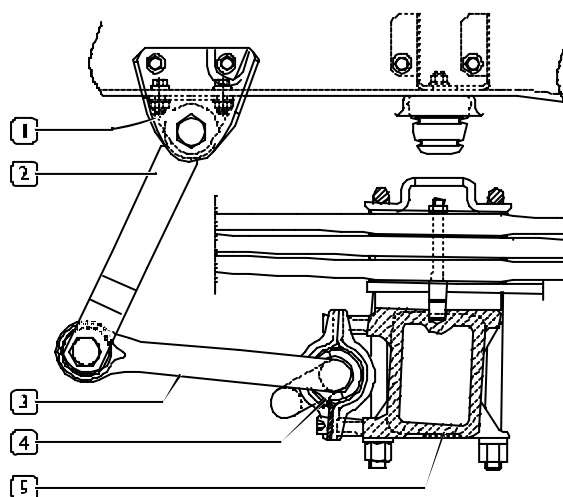


72233

ASSEMBLY DRAWING FOR REAR ANTI-ROLL BAR: 4x4 - 6x6 - 8x8 VEHICLES

1. Upper hanger bracket - 2. Link rod - 3. Anti-roll bar - 4. Rubber bush (in two halves) - 5. Axle - 6. Cap.

Aquila Trucks Centres

Figure 69

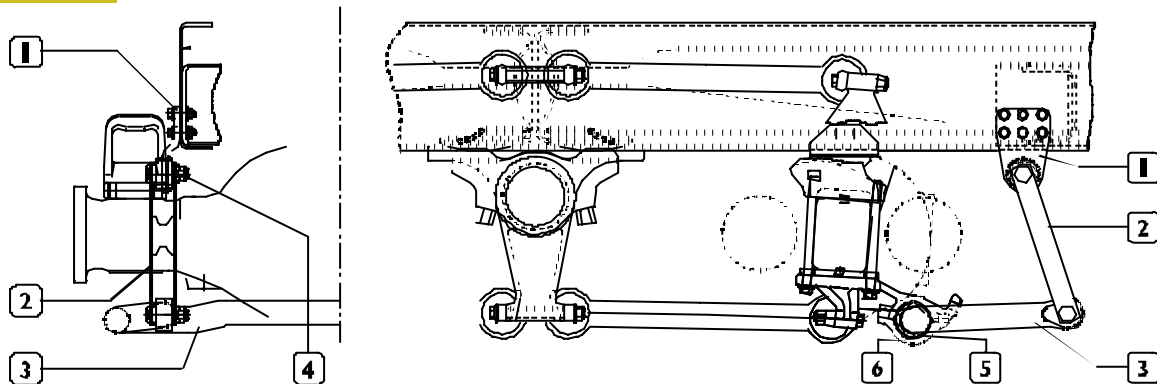


72234

ASSEMBLY DRAWING FOR REAR ANTI-ROLL BAR: 6x4 - 8x4 VEHICLES

1. Upper hanger bracket - 2. Link rod - 3. Anti-roll bar - 4. Rear axle - 5. Rubber bush (in two halves) - 6. Cap.

Figure 70

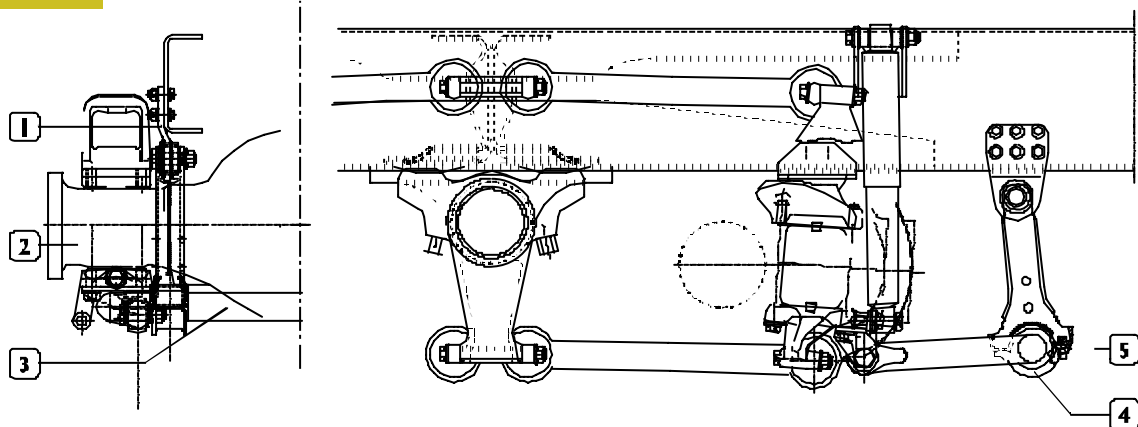


72235

ASSEMBLY DRAWING FOR REAR ANTI-ROLL BAR: 6x4 - 8x4 VEHICLES

1. Upper hanger bracket - 2. Link rod - 3. Anti-roll bar - 4. Rubber bush (in two halves) - 4. Rear axle - 5. Cap.

Figure 71

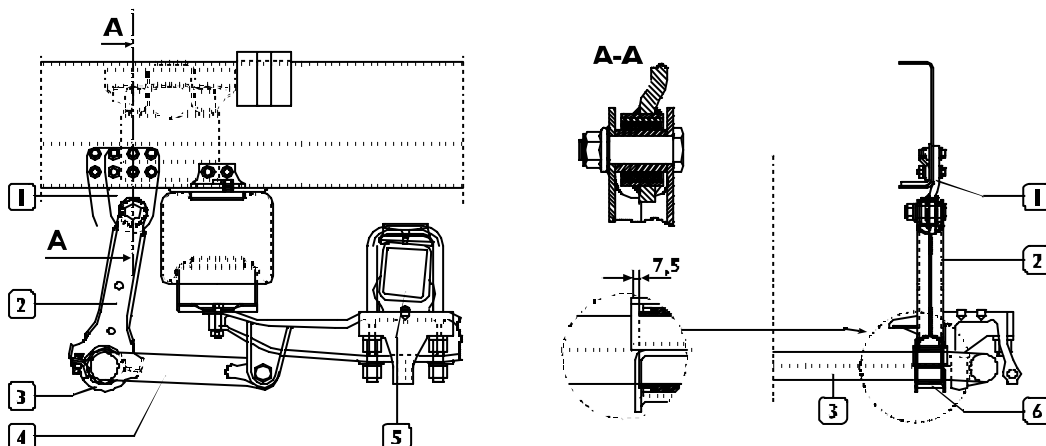


72236

ASSEMBLY DRAWING FOR REAR ANTI-ROLL BAR: 6x4 - 8x4 VEHICLES WITH AIR SUSPENSION

1. Upper hanger bracket - 2. Link rod - 3. Rubber bush (in two halves) - 4. Anti-roll bar - 5. Rear axle - 6. Cap.

Aquila Trucks Centres

Figure 72

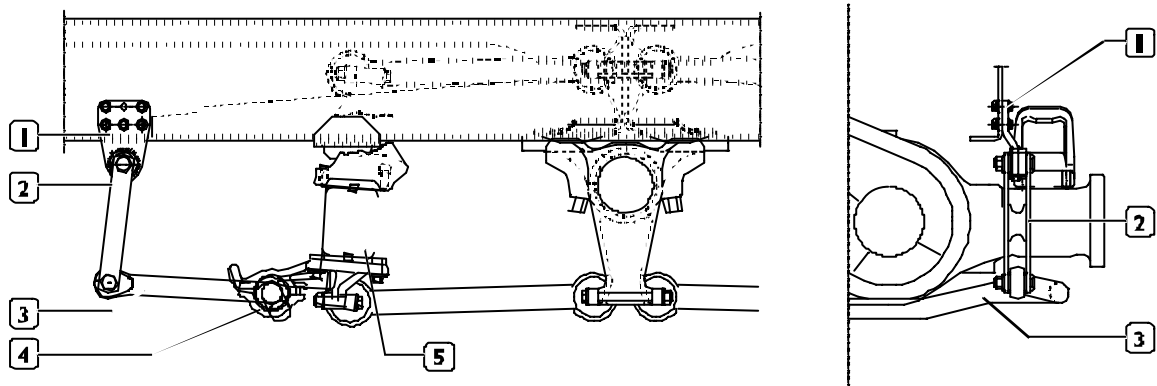


72237

ASSEMBLY DRAWING FOR INTERMEDIATE AXLE ANTI-ROLL BAR: 6x4 - 6x6 - 8x4 - 8x8 VEHICLES

1. Upper hanger bracket - 2. Link rod - 3. Anti-roll bar - 4. Rubber bush (in two halves) - 5. Front axle.

Figure 73

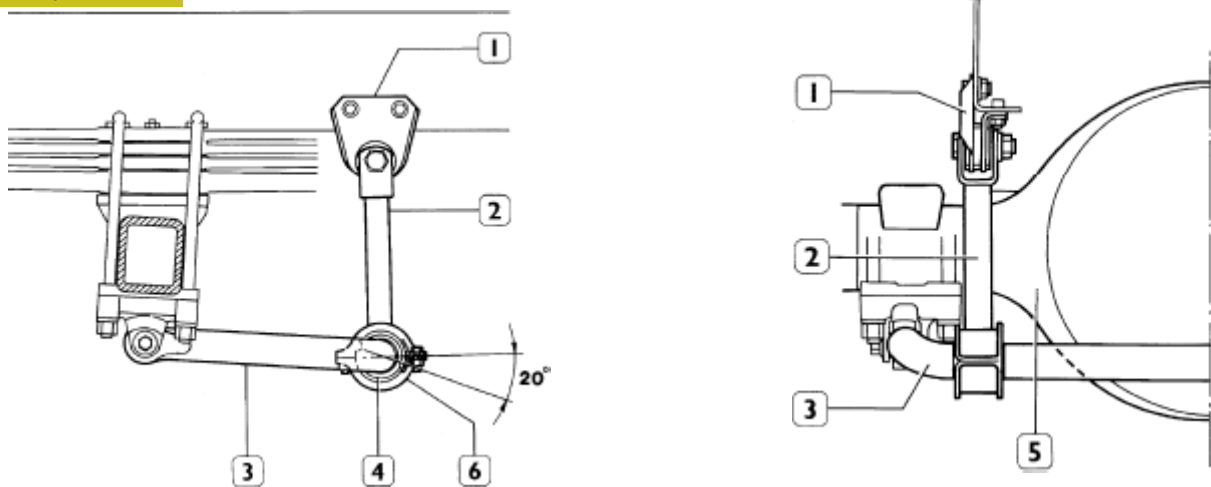


38695

ASSEMBLY DRAWING FOR REAR ANTI-ROLL BAR: 4x2 VEHICLES

1. Upper hanger bracket - 2. Link rod - 3. Anti-roll bar - 4. Rubber bush (in two halves) - 5. Rear axle - 6. Cap.

Figure 74

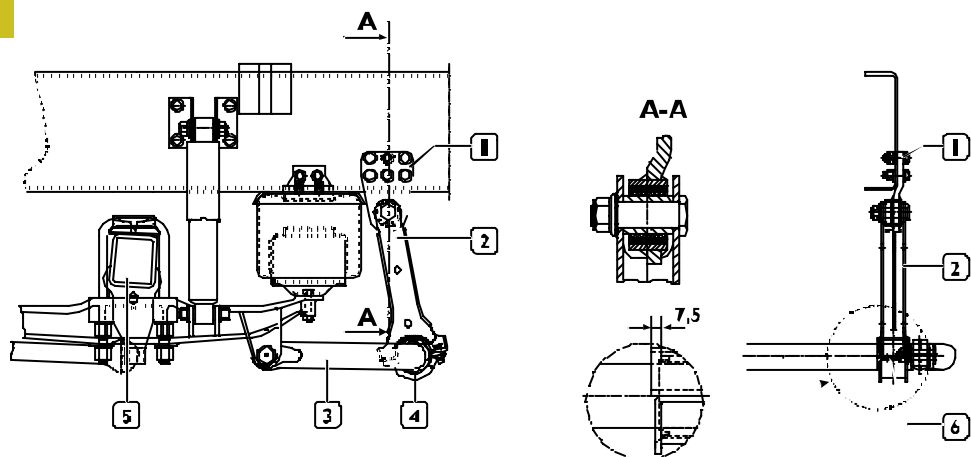

72238

ASSEMBLY DRAWING FOR REAR ANTI-ROLL BAR: 4x2 - 4x4 VEHICLES WITH AIR SUSPENSION

ASSEMBLING DIAGRAM FOR ADDITIONAL AXLE STABILISING BAR FOR 8x4 VEHICLES

WITH PNEUMATIC SUSPENSION

1. Upper hanger bracket - 2. Link rod - 3. Anti-roll bar - 4. Rubber bush (in two halves) - 5. Rear axle - 6. Cap.

Aquila Trucks Centres

Aquila Trucks Centres

SECTION 11

5025 Wheels and tyres

	Page
DESCRIPTION	3
MAIN DATA	3
- Tire pressure values	3
TOOLS	4
TROUBLESHOOTING	4
- Main operating faults	4
STATIC WHEEL BALANCING	6
CORRECTION OF RESIDUAL STATIC IMBALANCE	7
TYRE INFLATION PRESSURES	7
HOW TYRE BEHAVIOUR DEPENDS ON PRESSURE	8

Aquila Trucks Centres

Aquila Trucks Centres

DESCRIPTION

The wheel rim is the structure that confers rigidity to the wheel and is identified by the following dimensions:

- rim diameter, measured across centre of the wheel from one bead seat to the other
- rim width, (distance between the inside of the bead flanges across the rim)

The tyre performs the following functions:

- to cushion the wheel against shocks transmitted from uneven road surfaces using the elasticity of air;

- to transmit the driving force delivered by the engine to the road surface to move the vehicle;
- to confer the maximum grip and stability of contact between the tyre and the road, while affording satisfactory durability;
- to withstand the forces created by sudden braking, hard acceleration and the centrifugal forces generated when cornering;
- to ensure the stability of the vehicle at high speed; to ensure that steering effort is converted into directional movement.

MAIN DATA

WHEELS		Wheel rims	Tyres
	Disc with specific continuous rims	22.5x9.00 22.5x9.00 22.5x8.25	13 R 22,5 315/80 R 22.5 12 R 22.5

Tire pressure values

NOTE When checking tyre pressures refer to the values indicated in the specific "Use and Maintenance" handbook.

Aquila Trucks Centres

TOOLS

TOOL No.	DESCRIPTION
----------	-------------

99305037	Electronic on-vehicle balancer for front wheel balancing
-----------------	--

TROUBLESHOOTING**Main operating faults**

Visible Failure	Possible cause	Repair action
Excessive wear	Excessive speed over rough surfaces.	Reduce speed.
	Sudden variations in speed due to violent acceleration or harsh braking.	Avoid all unnecessary acceleration and braking.
	Excessive speed with tyres under-inflated.	Check tyre pressures with tyres cold.
	Tyres over-inflated.	Reduce tyre pressures.
	Vehicle overloaded.	Consult permissible load specifications.
Uneven wear	Difference in tyre pressures between different pairs of wheels.	Check tyre pressures.
	Tyres under-inflated: wear concentrated on outer edges of the tread rather than in the centre.	Inflate tyres to correct pressure.
	Tyres over-inflated: wear concentrated in the centre of the tread.	Reduce tyre pressures.
	Insufficient front wheel toe-in: excessive wear on inner edges of tyre treads.	Check and adjust toe-in.
	Front wheels set to incorrect wheel geometry.	Restore correct wheel geometry.
	Wheel rims deformed causing imbalance.	Repair wheel rims, if possible, or replace them; then balance the wheels.
	Tyres incorrectly fitted to rims.	Fit the tyre correctly and balance the wheel.
	Rear axle out of parallel due to breakage on leaf spring centre bolt, springs of different lengths or buckled springs.	Overhaul the suspension.
	Excessive front wheel toe-in; excessive wear on outer edges of tread.	Check and adjust front wheel toe-in.

(Continued)

Aquila Trucks Centres

Visible Failure	Possible cause	Repair action
Vehicle pulls to one side	Front wheels out of balance.	Balance the wheels.
	Front tyres inflated to different pressures.	Check that both tyres are inflated to correct pressure.
	Excessively uneven wear between tyres of the same wheel pair.	Renew the tyre that is excessively worn.

Aquila Trucks Centres

502511 STATIC WHEEL BALANCING

Figure 1


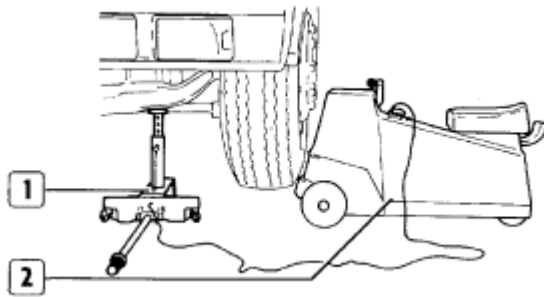


Figure 2

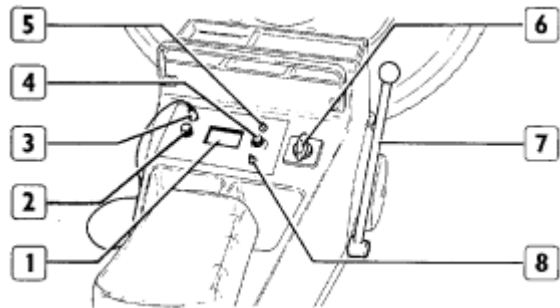

16997

The front wheels can be balanced while on the vehicle using the electronic balancer 99305037; this method has the advantage of balancing the wheel along with the other rotating masses.

The operation must be carried out as follows:

- Jack up the front of the vehicle and check that the wheels can rotate freely.
- Position the pickup unit (1) under the axle near to the wheel, setting the height so that the wheel spinner of unit 99305037 (2) is in contact with the tyre; position an axle stand under the opposite end of the axle and lower the jack.

- Connect the lead (3) of the pickup unit to the balancer 99305037.
- Make a radial reference mark on tyre, using chalk or a strip of adhesive tape.
- Turn switch (2) to the static balancing position and sensitivity switch (4) to notch n° 5 on the graduated scale.
- Turn on switch (5) for the meter light (1) and turn on the strobe lamp (8).
- Turn the wheel spinner switch (6) to the first speed position in order to rotate the wheel.

Turn the wheel spinner switch (6) to the second speed position and push the balancer against the tyre.


As the wheel is spinning, the stroboscopic effect will make the reference mark appear static; the needle on the meter (1) will move from zero to a maximum value and then return to zero. Once the needle has started to fall, withdraw the balancer, switch off the wheel spinner completely (6) and brake the spinner motor by means of the brake lever (7).

The wheel will continue to revolve due to inertia and the new position of the reference mark should be noted.

Read the value shown by the needle on the weight indication meter (1). Multiply this value by ten to obtain the correction weight to be fitted to the rim.

Aquila Trucks Centres

Figure 3

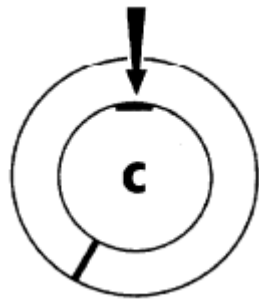


16998

Fit the calculated correction weight as shown in the figure. If the meter needle remains in the green section during testing, the wheel is already balanced.

NOTE If the weight required to balance the wheel exceeds 100 grams, divide the weight in half and attach one of the two parts thus formed to the inside of the rim and the other to the outside, making sure that they are in the same position.

CORRECTION OF RESIDUAL STATIC IMBALANCE

Figure 4

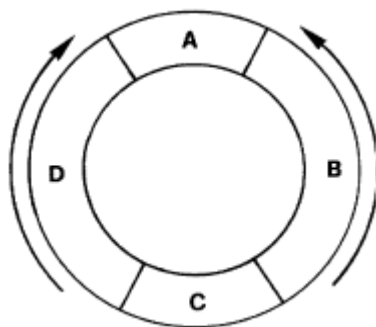

23885

To correct residual imbalance, repeat the operations described above, and, referring to the diagram in Figure 4 and the weight indication on the meter (1, Figure 2), adjust as follows:

- If the weight is in zone A, this means that it is too light and therefore it must be increased by the amount shown on the weight indication meter (1, Figure 2).
- If the weight is in the bottom zone C, this means that it is too heavy and therefore must be reduced by the amount shown on the weight indication meter.
- If the weight is zones B or D, do not increase or reduce the weight, but move it upwards 5 cm in the direction shown by the arrows in figure 4.

502510 TYRE INFLATION PRESSURES

Tyre pressures must be checked with the tyres cold. Take care to obtain an accurate reading: too high a pressure will result in a harsh ride and excessive wear of the centre part of the tread, while if the pressure is too low, the load will not be distributed evenly over the entire tread but concentrated on the edges, causing premature wear of these areas and damage to the internal structure of the tyre.

Unequal tyre pressures will affect the stability of the vehicle and impair driving safety.

Abnormal tyre wear can occur in different parts of the tread.

Aquila Trucks Centres

HOW TYRE BEHAVIOUR DEPENDS ON PRESSURE

The diagrams illustrate how different inflation pressures affect tyre behaviour and performance.

NOTE (The percentage values given inside the tyres indicate the inflation pressure levels, while the performance value refers to the life of the tyre).

Figure 5

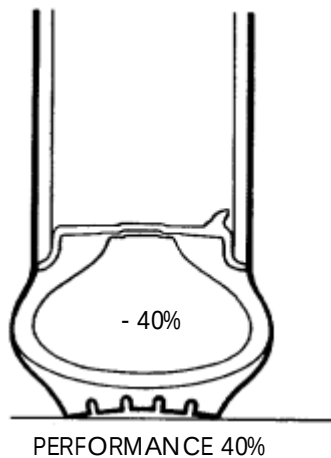


Figure 6


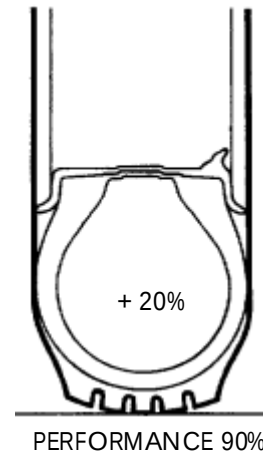


Figure 7

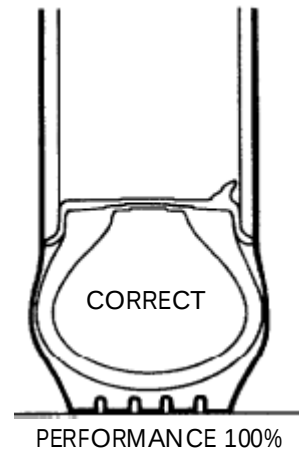

NOTE If anomalous wear of front tyres is found (either inside or outside the tread), have front wheel toe-in checked. Never exceed the maximum weight per axle (the vehicle's gross weight being unchanged). It is advisable to change the tyre pair fitted to one axle when bands - due to block wear - are visible over the entire tread width (see dotted areas on pictures). Tyres are provided with wear indicators. Replacement is compulsory when such indicators are reached.

Aquila Trucks Centres

SECTION 12

5014 Steering system

	Page
DESCRIPTION	3
MAIN DATA	4
TROUBLESHOOTING	5
- Main operating faults of a mechanical nature ..	5
TIGHTENING TORQUES	7
TOOLS	8
- Steering control diagram for 4x2 - 6x4 vehicles (ZF 8098 power steering)	10
- Steering control diagram for 4x4 - 6x6 vehicles (ZF 8098 power steering)	11
- Steering control diagram for 8x4x4 vehicles (ZF 8099 power steering)	12
- Steering control diagram for 8x8 vehicles (ZF 8099 power steering)	13
- Steering hydraulic control circuit diagram for 8x4x4 - 8x8 vehicles	14
STEERING CONTROL	15
HYDRAULIC STEERING	16
- Mounting steering wheel lever	16
REMOVING-REFITTING THE STEERING CONTROL ASSEMBLY	17
- Removal	17
- Refitting	19
- Replacing the pneumatic cylinder	19
- Removal	19
- Mounting	20
- Replacing blinker switch	22
- Removal	22

Aquila Trucks Centres

Page


- Mounting	23
MAIN OPERATIONS	23
BLEEDING THE POWER STEERING SYSTEM	23
MEASURING STEERING BOX PLAY AT THE STEERING WHEEL	23
CHECKING THE MAXIMUM PRESSURE OF THE POWER STEERING SYSTEM	24
- Setting the automatic hydraulic steering limit . .	24
- Check	24

Aquila Trucks Centres

DESCRIPTION

ZF 8098 power steering unit is a continuous ball-type steering unit; it essentially consists of: housing and steering built-in mechanical part, control valve and operating cylinder.

Figure 1

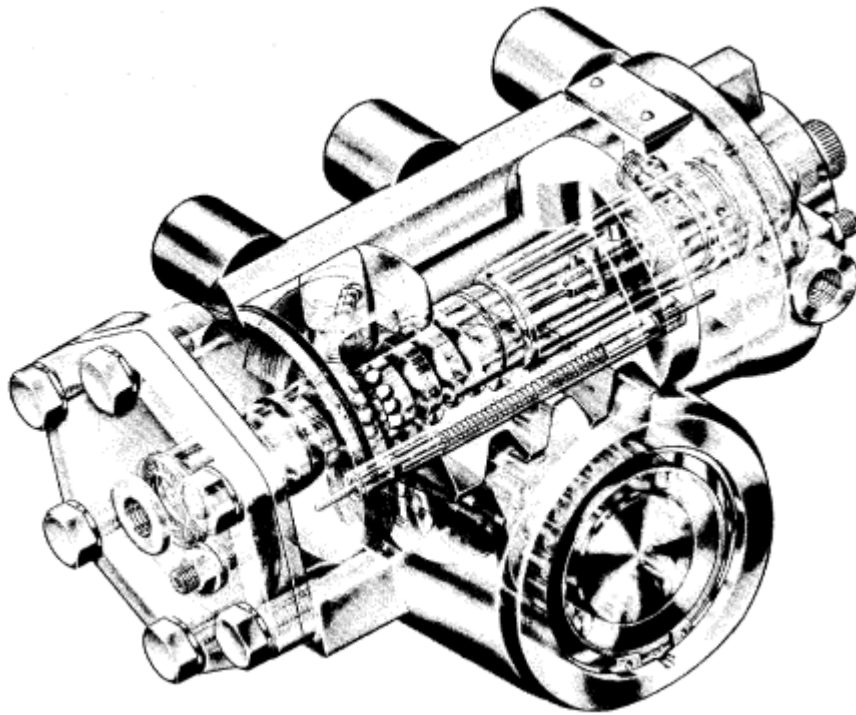


27199

ZF 8098 POWER STEERING UNIT



Aquila Trucks Centres

MAIN DATA

Vehicles: 4x2 - 4x4 - 6x4 - 6x6

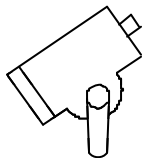	Power steering unit	ZF 8098 ball circulation with built-in pressure relief valve (the hydraulic guide can be provided with a hydraulic device to automatically regulate steering angle limit)	
	Variable working pressure	170 + 10 bar	
	Variable reduction ratio: - drive centre - steering lock	22.2:1 26.2:1	
	Power steering pump	ZF	
	Min. rpm	rpm	500
	Max. rpm	rpm	4700
	Max. pressure (without pressure relief valve)	bar	180
	Delivery	dm ³ /min	22

 Vehicles: 8x4x4 - 8x8

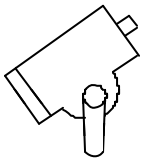	Power steering unit	ZF 8099 ball circulation, dual circuit, with pressure relief valve in circuits 1 and 2; and check valve in circuit 1 Hydraulic device to automatically regulate steering angle limit	
	Variable working pressure	140 + 14 bar	
	Variable reduction ratio: - drive centre - steering lock	22.2:1 26.2:1	
	Assembling	on compressor	ancillary on gearbox
		ZF	ZF
	Power steering pump		
	Min. rpm	rpm	500
	Max. rpm	rpm	3000
	Max. pressure (without pressure relief valve)*	bar	165*
	Controlled delivery	dm ³ /min	22.5 ÷ 30
	Drive cylinder for hydraulic guide	ZF 8099	
	Length between wheel bases:		
	- start of stroke	mm	578
	- end of stroke	mm	828
	- straight-line ride position	mm	702

Aquila Trucks Centres

TROUBLESHOOTING

Main operating faults of a mechanical nature

Visible Failure	Possible cause	Repair action
Steering stiff when turning right and left	Insufficient oil in circuit.	Check oil level with engine running; top up to dip stick upper notch and bleed the circuit.
	Air in the hydraulic circuit.	Check the seal of the intake pipe and the pump shaft gasket and top up the oil. Bleed the circuit.
	Locked or clogged modulating valve.	Remove the valve, wash and check the throttle hole to ensure it is not clogged.
	Oil pump flow rate is insufficient.	Overhaul or replace the pump.
	Spider not sliding well.	Move the union in both directions so that it slopes under its own weight.
	Poor lubrication of transmission lever bearings (on vehicles with second steering).	Grease the transmission lever bearings.
	Worn transmission lever bearings (on vehicles with second steering axle).	Overhaul the transmission levers and replace worn parts.
	Hydraulic cylinders not working (on vehicles with second steering axle).	Replace the faulty cylinders.
Steering is only hard to the left or the right	A hydraulic pump is not working (6x6 - 8x4x4 vehicles).	Overhaul or replace the hydraulic pump.
	Inefficient internal gaskets.	Send the power steering to a ZF station.
Steering is hard when the steering wheel is turned quickly	Hydraulic centre position is not correct (when the steering wheel is released it returns to an end position).	Have the power steering adjusted by a ZF station.
	Clogged modulating valve.	Remove the valve, wash and clean.
	Hydraulic pump flow rate is inadequate (wear on gears).	Overhaul or replace the hydraulic pump.
	Air in the steering system.	Check the seal of the intake pump and the pump shaft gasket. Top up the oil. Bleed the circuit.

(Continued)

Aquila Trucks Centres

Visible Failure	Possible cause	Repair action
Hard knocks on the steering wheel when steering	Universal joint is slack.	Replace the universal joint.
	Power steering internal breakdown.	Send the power steering to a ZF station.
	System oil level too low.	Top up oil and bleed the circuit.
	Bad wheel attitude.	Make checks and adjustments.
	Unbalanced wheels.	Carry out the balancing operations following the instructions in the "Wheels and Tyres" section.
	Drag link king pins loose.	Replace any worn parts.
	Hydraulic pump not functioning properly.	Replace the pump.
	Oil seepage from power steering circuit fittings.	Check the efficiency of the gaskets on the fittings and replace any that are worn.
Steering wheel torsional vibration	Unbalanced wheels.	Carry out the balancing operations following the instructions in the "Wheels and Tyres" section.
	Incorrect front wheel attitude.	Make the checks and adjustments according to the specification data given in the "AXLES" section.
	Air in the hydraulic system.	Check the seal of the intake pump and the pump shaft gasket. Top up the oil. Bleed the circuit.
Excessive steering wheel play	Backlash in ball joints and/or flexible mountings are slack.	Replace the kingpins.
	Universal joint is slack.	Replace the universal joint.
	Power steering internal breakdown.	Send the power steering to a ZF station.
Loss of fluid	Tank cover not secured.	Secure cover.
	Deterioration of gaskets and seals.	Replace, top up fluid and bleed.
	In every case it is necessary to establish where and why hydraulic fluid is being lost, eliminate the cause and, with the engine running, top up fluid to upper mark on dipstick.	
Insufficient pressure in the circuit	Pump not operating correctly.	Replace pump.
	Fluid leaking from couplings in power steering circuit.	Check coupling seals for serviceability, replacing any which are worn.
	Insufficient fluid level in the tank.	Top up level and bleed circuit.
	Fluid leaking from couplings in power steering circuit (8x4x4).	Check coupling seals for serviceability, replacing any which are worn.



Aquila Trucks Centres

TIGHTENING TORQUES

DESCRIPTION	TORQUE	
	Nm	(kgm)
Hexagonal nut with collar for steering support and idler arm	226.5 ± 22.5	(22.6 ± 2.2)
Flanged hexagonal head screw for fixing steering stand	278 ± 28	(27.8 ± 2.8)
Hexagonal head screw for steering box	527.5 ± 52.5	(52.7 ± 5.3)
Calibrated hexagonal head screw for steering box	527.5 ± 52.5	(52.7 ± 5.3)
Castle nut for steering linkage and hydraulic cylinder (*)	300	(30)
Self-locking nut for universal joint	55 ± 5	(5.5 ± 0.5)
Calibrated screw for universal joint	55 ± 5	(5.5 ± 0.5)
Fastening collar for drag link and track rod	80 ± 10	(8 ± 1)
Hexagonal nut for steering box lever	575 ± 55	(57.5 ± 5.5)
Self-locking flanged nut for steering stand	226.5 ± 22.5	(22.6 ± 2.2)
Y Flanged hexagonal head screw for idler arm	278 ± 28	(27.8 ± 2.8)
(*) If at the prescribed torque, the slot does not match the hole, continue to tighten until it becomes possible to insert the split pin.		
Y 8x4 -8x8 Vehicles		


Aquila Trucks Centres

TOOLS

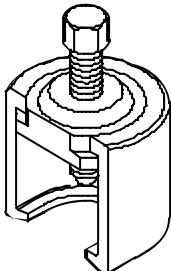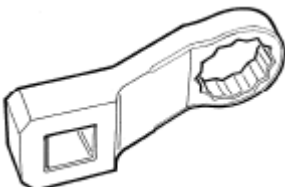TOOL NO.	DESCRIPTION
99347042	 Steering wheel puller
99347045	 Steering drop arm puller
99347068	 Steering ball joint remover
99355032	 Wrench for power steering gear retaining bolts
99374393	 Pressure gauges for testing power steering system pressure
99374398	 Calibrated scale and pointer for measuring steering play (to be used with 99374393)

Aquila Trucks Centres


TOOL NO.	DESCRIPTION
99374399	Pair of expanders to lock wheels (to be used with 99374393 and 99374398)

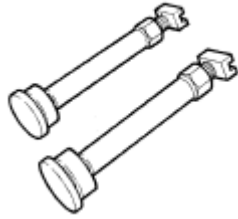

Aquila Trucks Centres

Steering control diagram for 4x2 - 6x4 vehicles (ZF 8098 power steering)

Figure 2

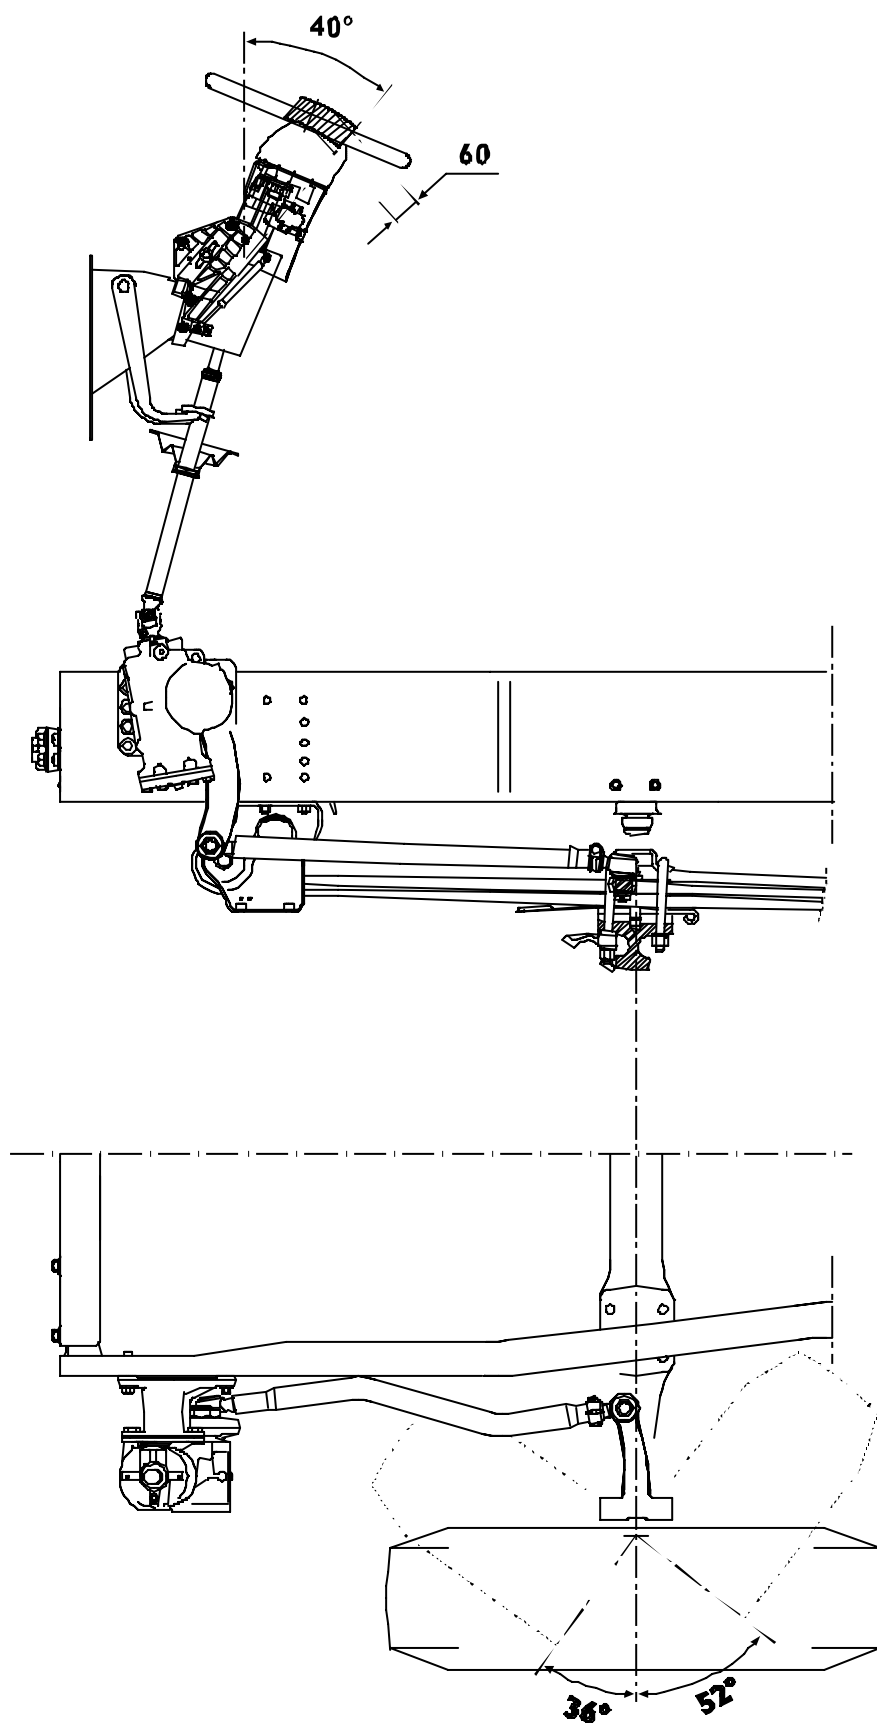


90645

Aquila Trucks Centres

Steering control diagram for 4x4 - 6x6 vehicles (ZF 8098 power steering)


Figure 3

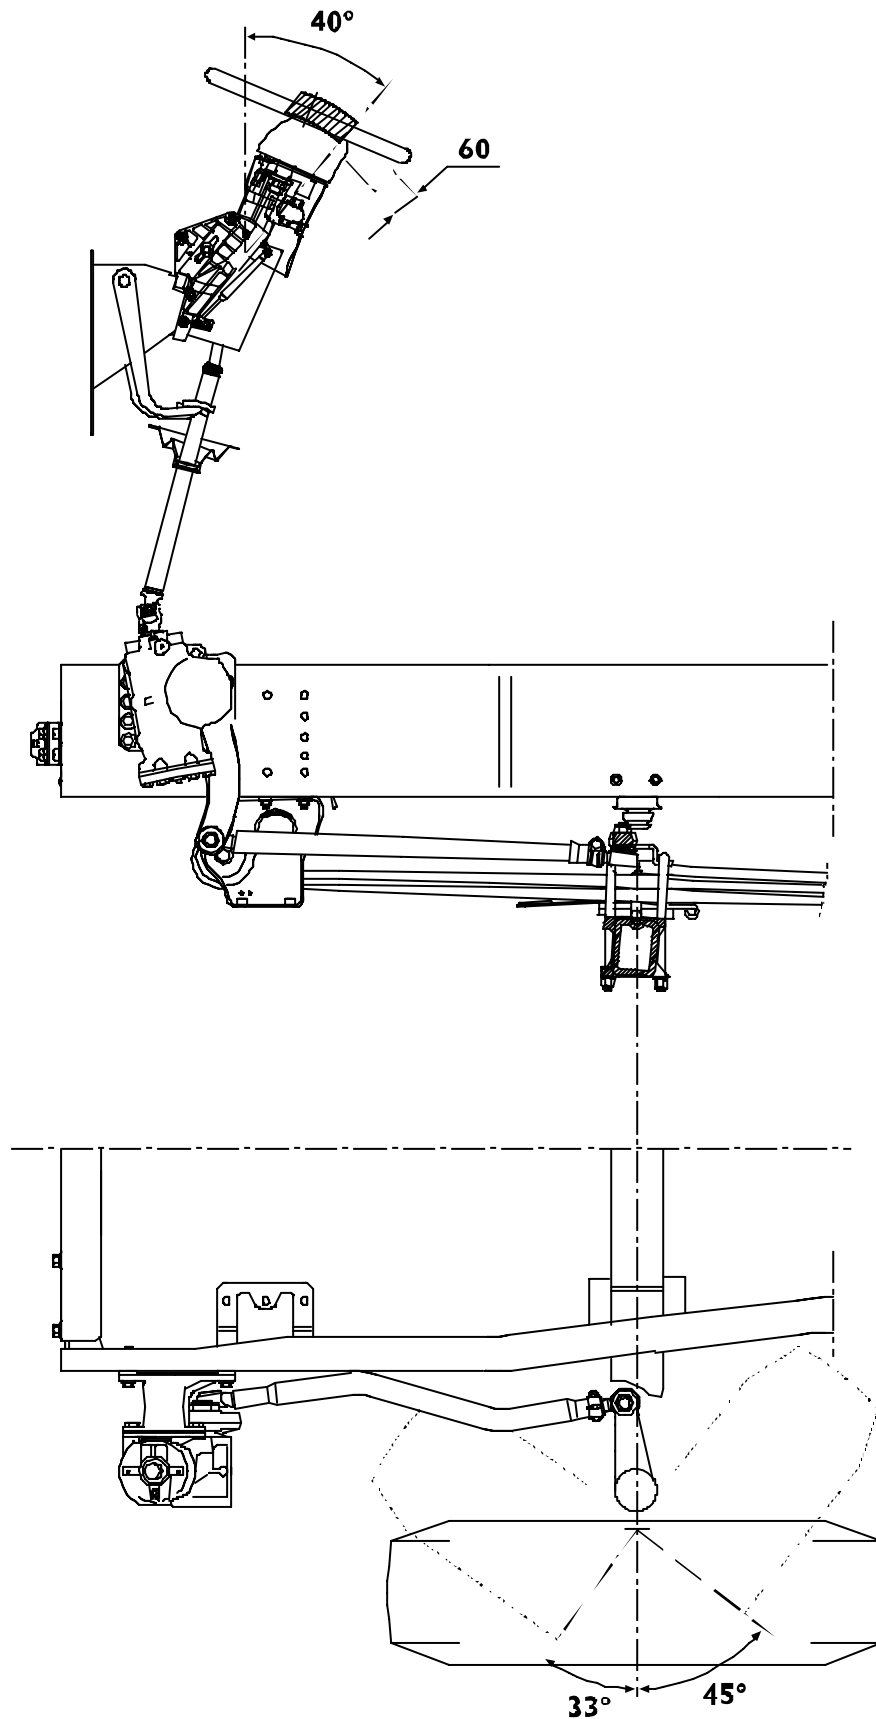

Aquila Trucks Centres

Steering control diagram for 8x4x4 vehicles (ZF 8099 power steering)

Figure 4

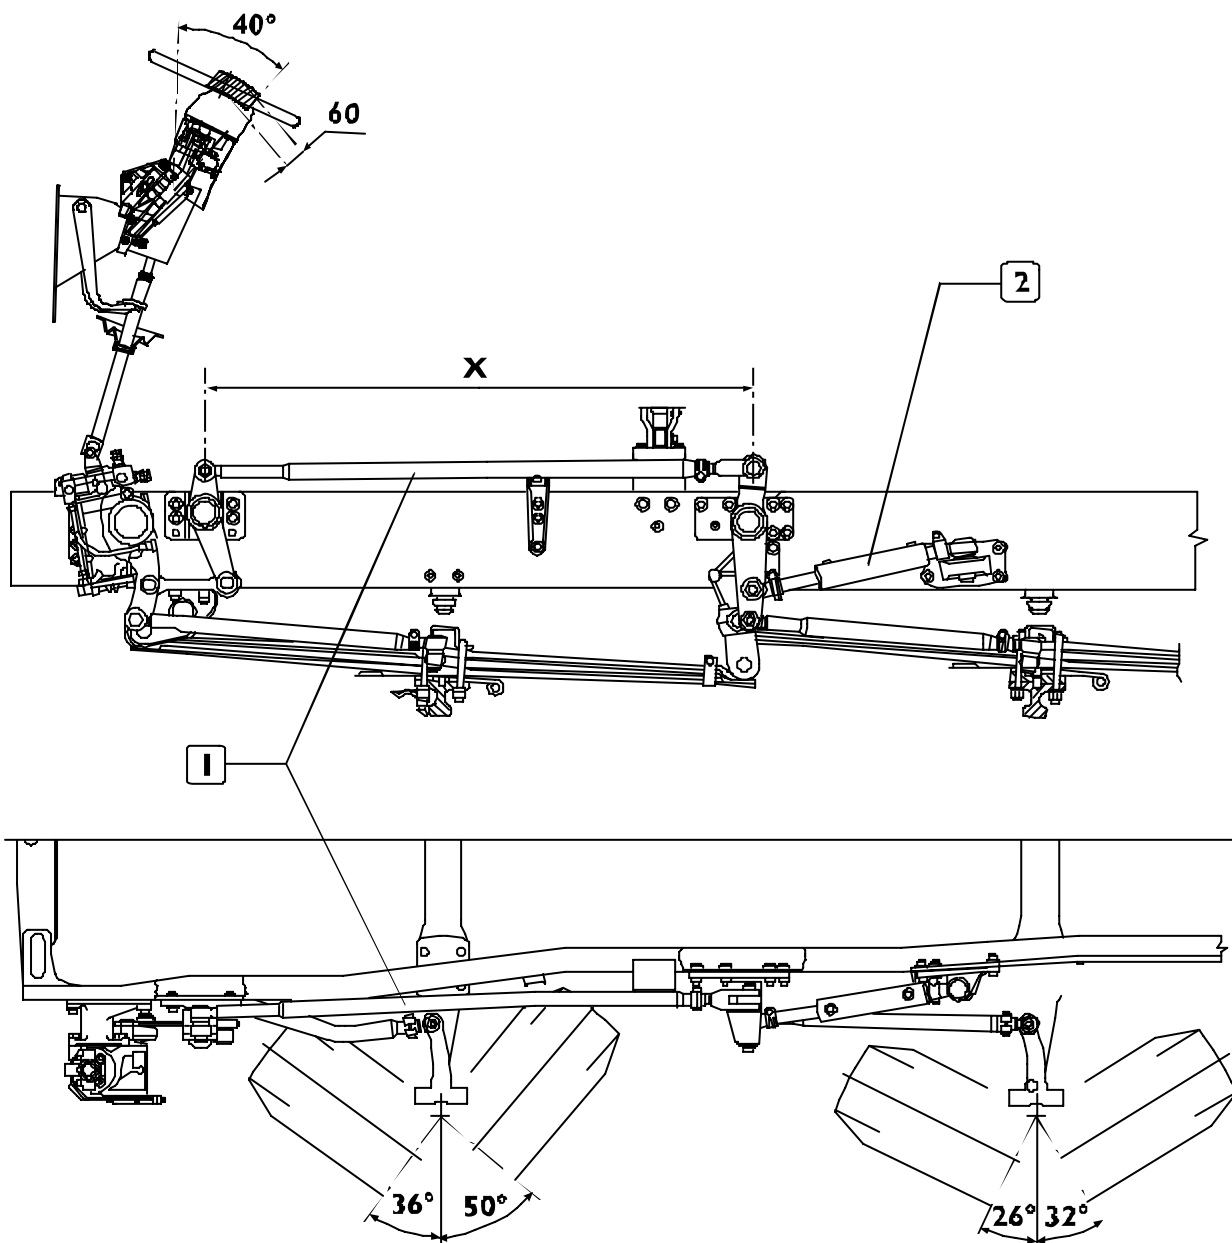

90647

The intermediate rod (1) length x measured at the distance between centres of kingpins and fork shall be always restored when replacing one of the above mentioned parts and/or checked before inspecting the wheel alignment.

- vehicles with wheel base 1500 mm : $x = 1540 \pm 2$


- vehicles with wheel base 1875 mm : $x = 1735 \pm 2$

Drive cylinder length measured at kingpin distance between centres shall be 578 mm at stroke start and 828 mm at the end of stroke.

Aquila Trucks Centres

Steering control diagram for 8x8 vehicles (ZF 8099 power steering)

Figure 5

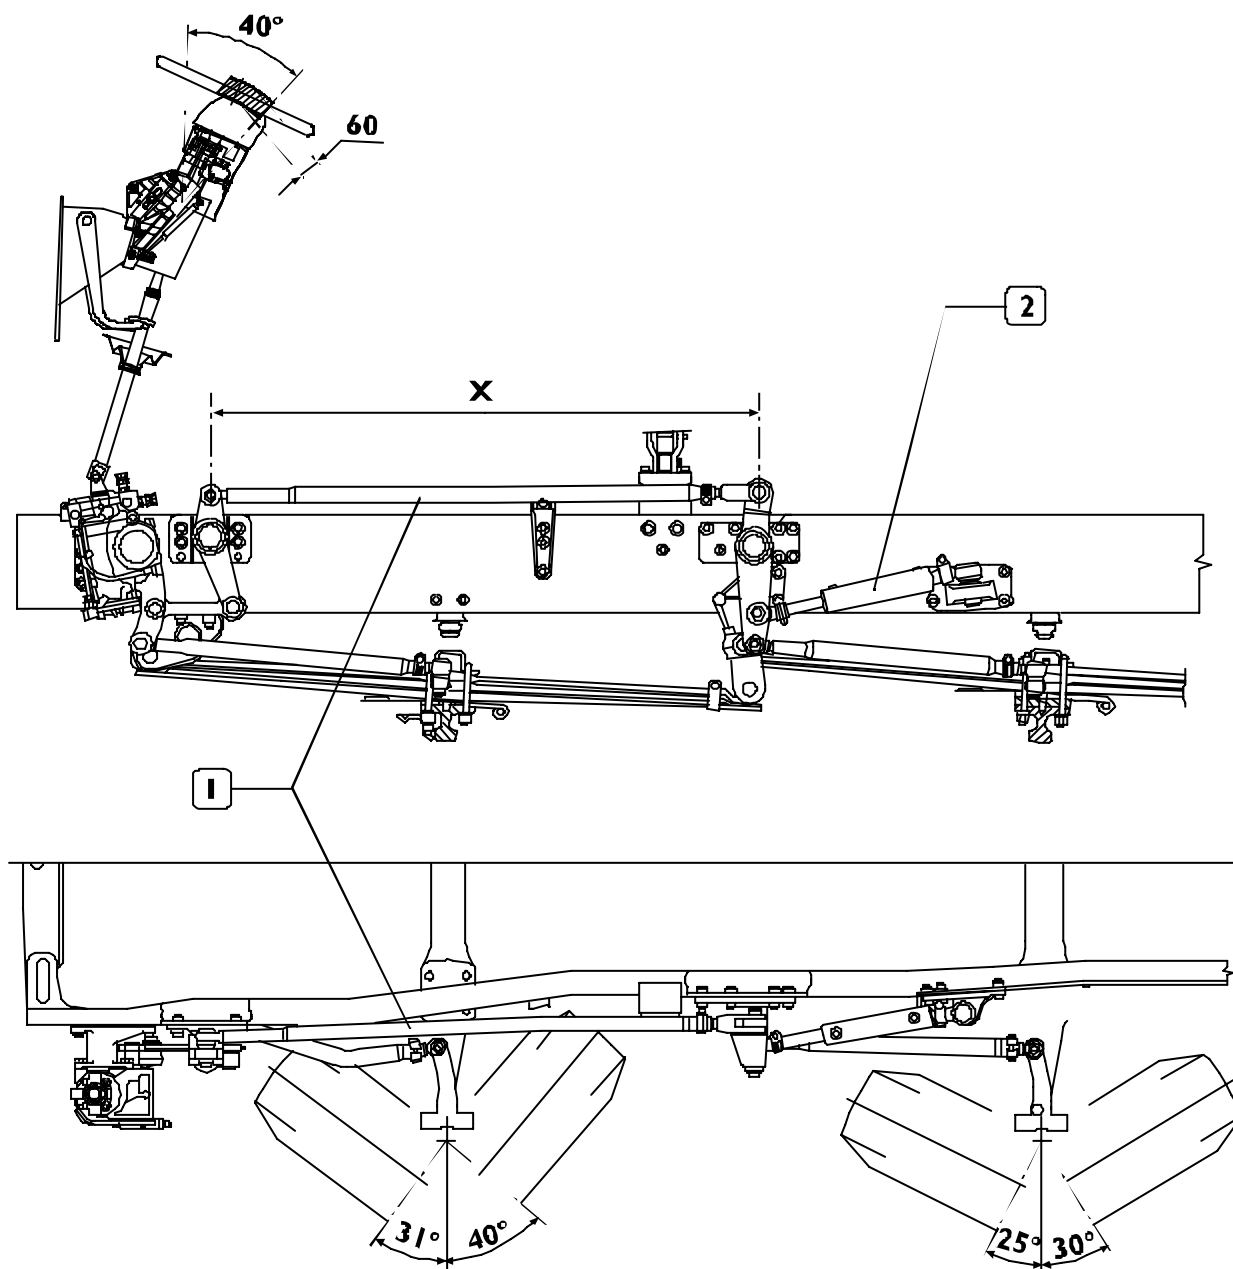

90648

The intermediate rod (1) length x measured at the distance between centres of kingpins and fork shall be always restored when replacing one of the above mentioned parts and/or checked before inspecting the wheel alignment.

- vehicles with wheel base 1500 mm : $x = 1540 \pm 2$

- vehicles with wheel base 1875 mm : $x = 1735 \pm 2$

Drive cylinder length measured at kingpin distance between centres shall be 578 mm at stroke start and 828 mm at the end of stroke.

Aquila Trucks Centres

Figure 6




- C. Circuit 2 delivery pipe - D. Circuit 1 return pipe - E. Power cylinder pipe.

Aquila Trucks Centres

50140 STEERING CONTROL

Figure 7

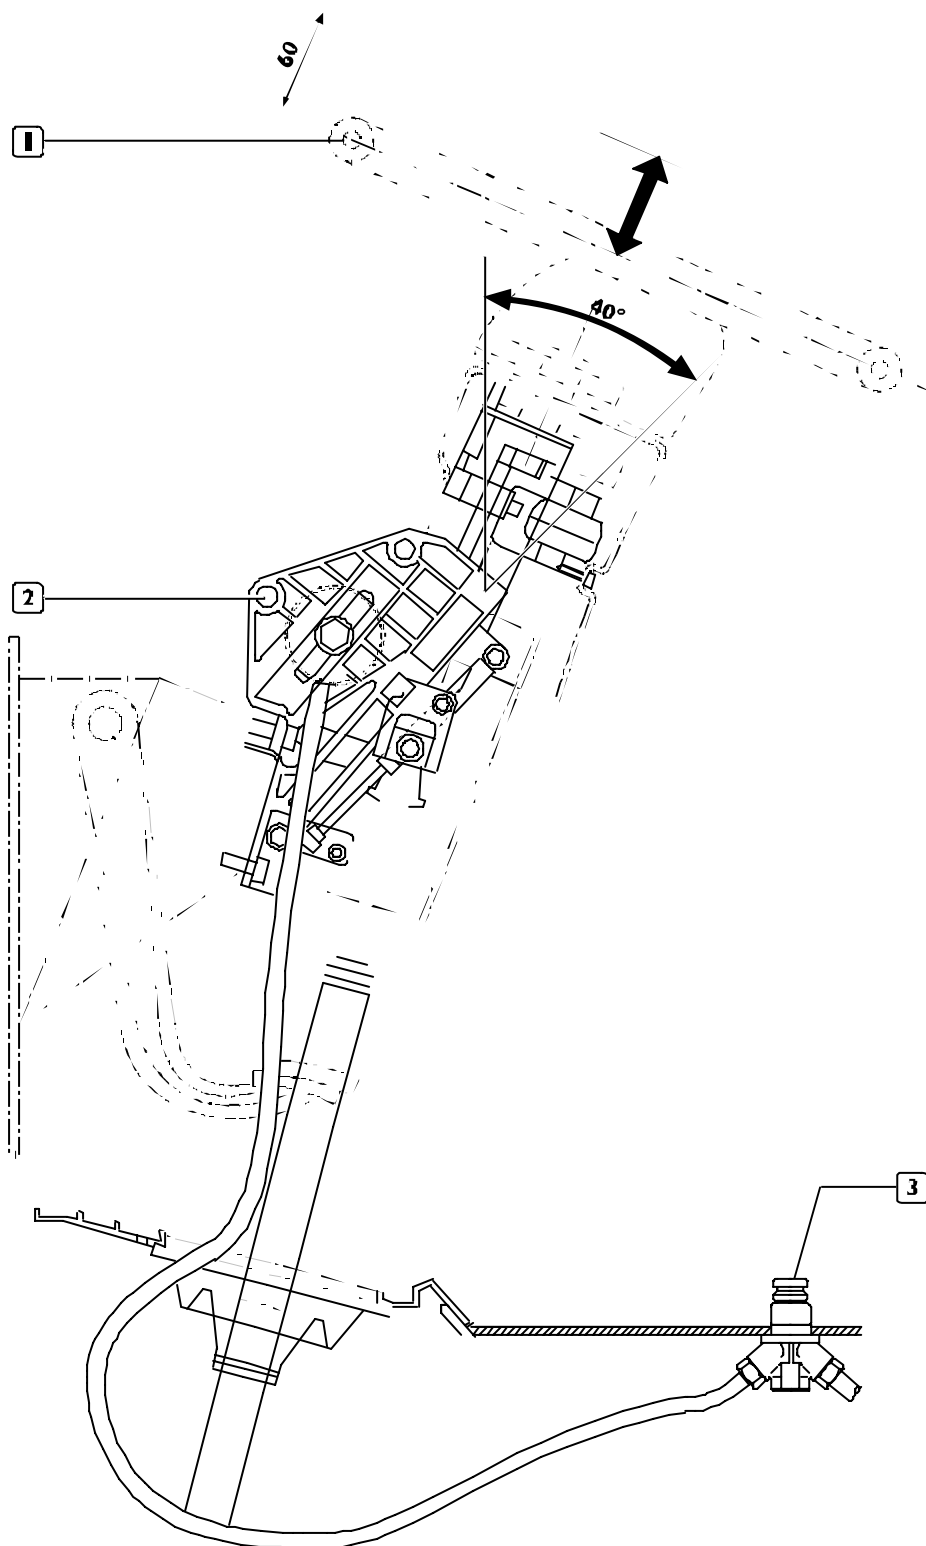

72848

The steering control is equipped with a pneumatic device to adjust the angle and height of the steering wheel. The position of the steering wheel is adjusted by pressing the push-button on the floor of the cab:

- Press the button (3) on the floor: the pressurized air of the services system is sent to the steering wheel adjustment assembly (2) releasing it.

- Manoeuvre the steering wheel (1) into the required position (longitudinal travel along the axis of the steering column 60 mm, angular travel to the vertical 40°).
- Release the button on the floor.


Aquila Trucks Centres

HYDRAULIC STEERING

NOTE If the hydraulic steering has to be replaced, before reconnecting the new hydraulic guide to the support, the steering wheel lever is to be mounted on the new hydraulic guide as described in following chapter.

If the hydraulic guide is provided with a steering limit automatic regulation, the automatic regulation is to be set as described in relevant chapter after reconnecting the hydraulic guide.


Figure 9

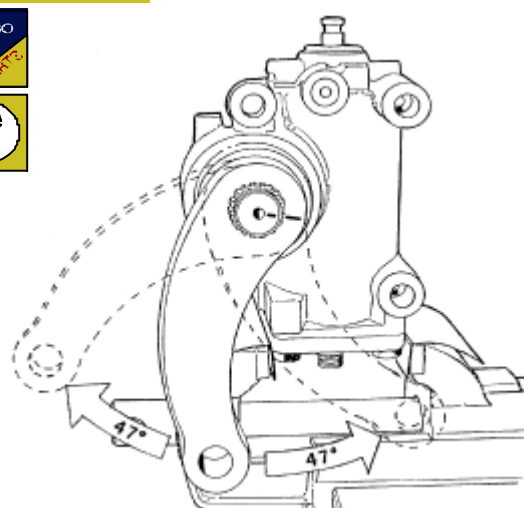

33691

Check the angular travel of the lever that has to be 47° in both directions.


Figure 10

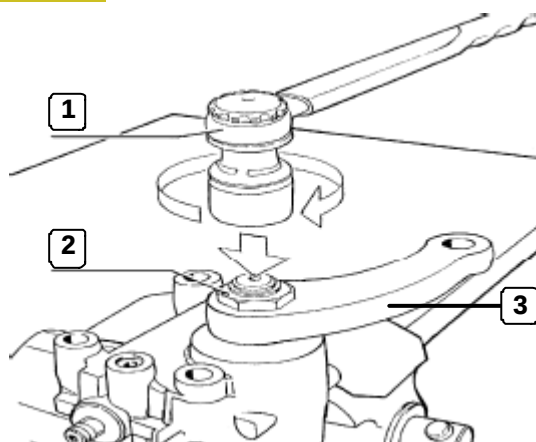

33692

Keeping the lever (3) stationary to prevent turning the power steering shaft, lock the nut (2) fixing the lever with a torque wrench (1) to a torque of 575 Nm.

Figure 11

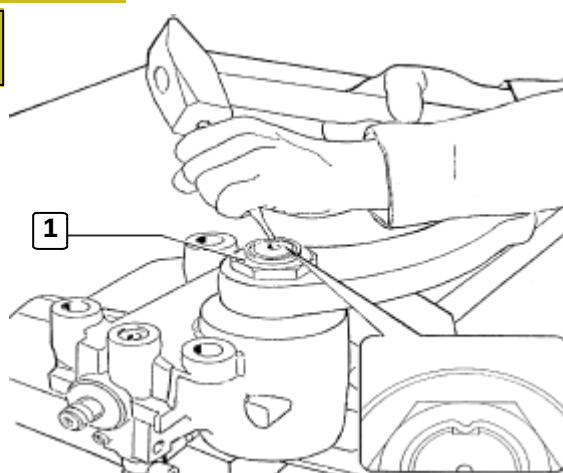


33693

Using a suitable punch, notch the collar of the nut (1).

Mounting steering wheel lever

Figure 8

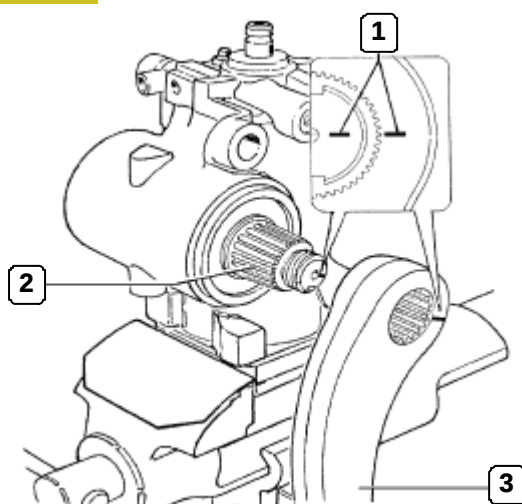

33690

Secure the power steering box in a vice. Fit the steering lever (3), making the reference marks (1) cut on the driving shaft (2) and on the lever (3) tally.




So as not to change the setting of the automatic hydraulic steering limit (if present), do not turn the shaft (2) of the power steering box with a torque greater than 25 Nm.


Aquila Trucks Centres

501410 REMOVING-REFITTING THE STEERING CONTROL ASSEMBLY**Removal****Figure 12**


Lift the cowling of the cab. Set the wheels straight and check that the steering box is in the "straight ahead" position, so the reference mark $\Rightarrow$ of the shaft (1) coincides with the reference mark $\Rightarrow$ of the steering box (2).

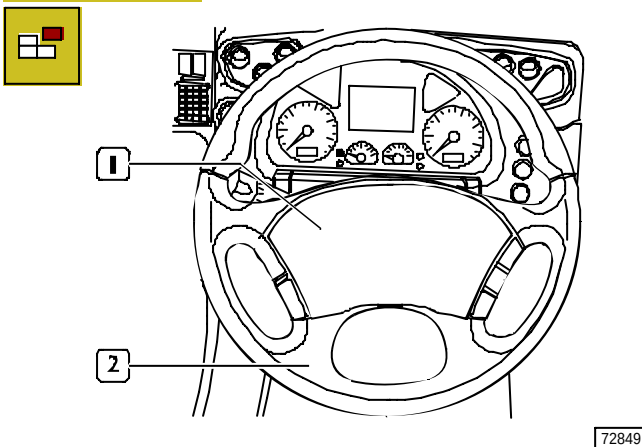Figure 13


Engage the steering lock by taking the ignition key out. Take the cover (1) off the steering wheel (2).

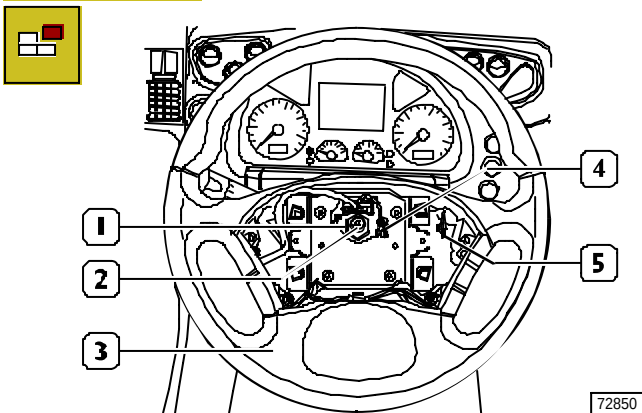Figure 14

Disconnect the connection (4) of the earth cable. Remove the nut (1), mark the assembly position of the steering wheel (3) on the shaft (2) and remove the steering wheel (3).

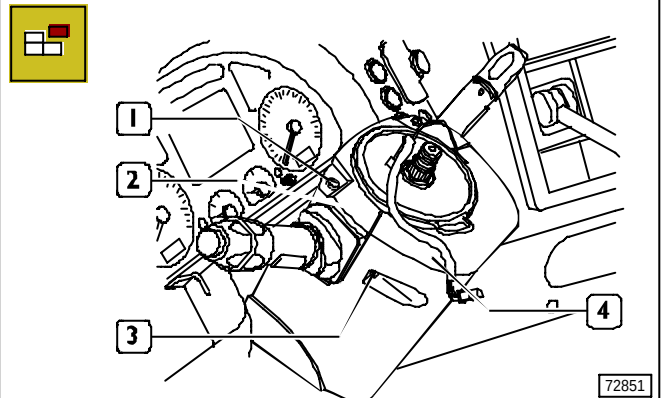Figure 15

Take out the screws (1 and 3) and take off the side guards (2,4).

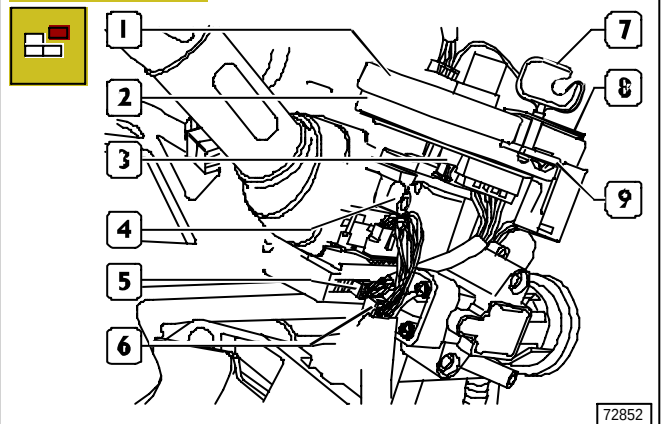Figure 16


Remove the interconnecting box (2) from the steering control mounting (4), keeping strictly to the procedures described hereunder. This is to prevent damaging the spiralled cable in the box, during assembly, and to avoid a wrong reading of the steering wheel angle.

Disconnect the electric connections (5 and 6). Take the key (5, Figure 14) out of the steering wheel (3, Figure 14). Fasten the cover (1) of the interconnecting box (2) to the box by inserting the key (7) in the slots (8 and 9). This prevents the cover (1) and the box (2) from turning on each during disassembly and this condition is maintained until assembly. If there is no key (7), use a screw and nut of suitable length and diameter.

Take hold of the interconnecting box (2), lift it carefully so that the retaining spring pins (3) come out of the mounting (4) and put it aside.

Aquila Trucks Centres


Figure 17

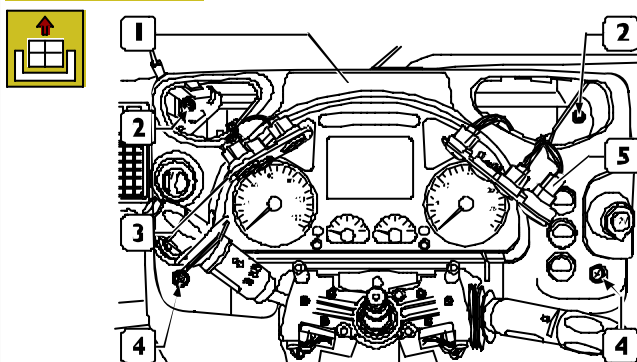

72831

Remove the push-button panels (3 and 5) and the caps for the screws (4) from the instrument panel (1). Take out the screws (2 and 4), remove the instrument panel (1) and put it aside.


Figure 18

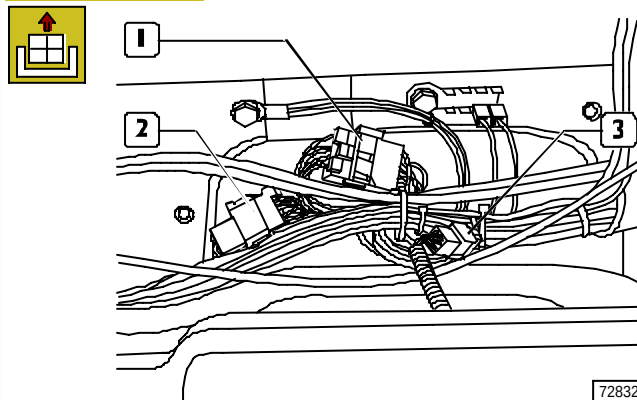

72832

Disconnect the connections (1) of the windscreen wiper, (2) of the drive control system, (3) of the immobilizer.


Figure 19

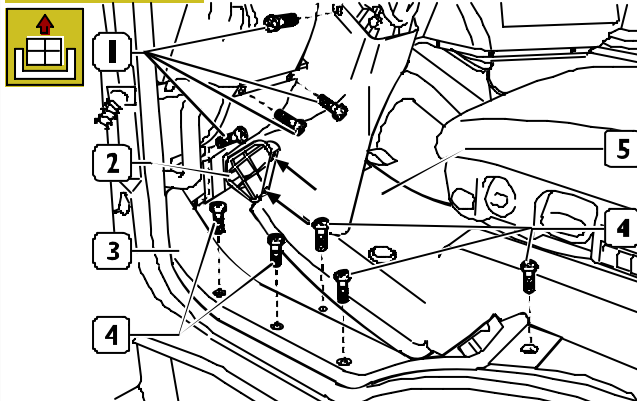

77108

- Remove mat (5).
- Unscrew securing screws (4) of the sill (3).
- Detach the sill (3) from the vehicle.
- Undo the fasteners (←) and take out the air opening (2) in the floor.
- Unscrew the side screws (1) fixing the steering column guard.


Figure 20

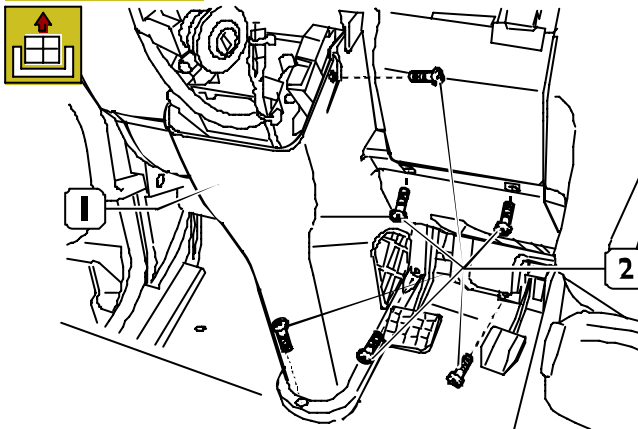

90002

- Unscrew the screws (2) fixing the steering column guard in the area of the pedal board.
- Detach the steering column guard (1) from the vehicle.


Figure 21

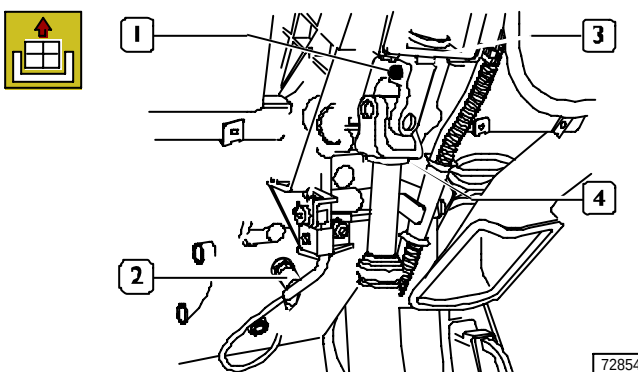

72854

Mark the assembly position of the shaft (2, Figure 14) on the mounting (3) and on the universal joint (4). Loosen the screw (1) and extract the universal joint (4) from the top shaft. Disconnect the pipe (2).

Figure 22

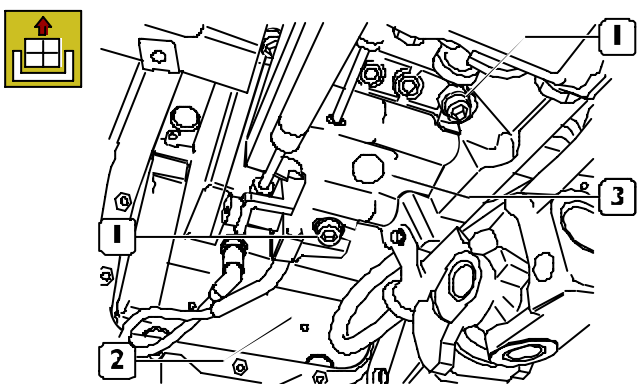


72855

Take out the 3 screws (1) and remove the steering control mounting (3) from the pedal board (2).

Aquila Trucks Centres


Figure 23

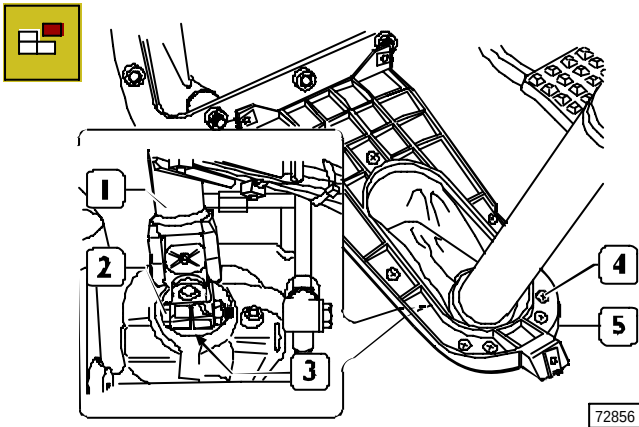

From outside the cab, loosen the screw (2) and disconnect the bottom shaft (1) from the power steering (3) shaft. Take out the screws (4) and remove the bottom shaft (1) together with the guard (5).

Refitting

Figure 24

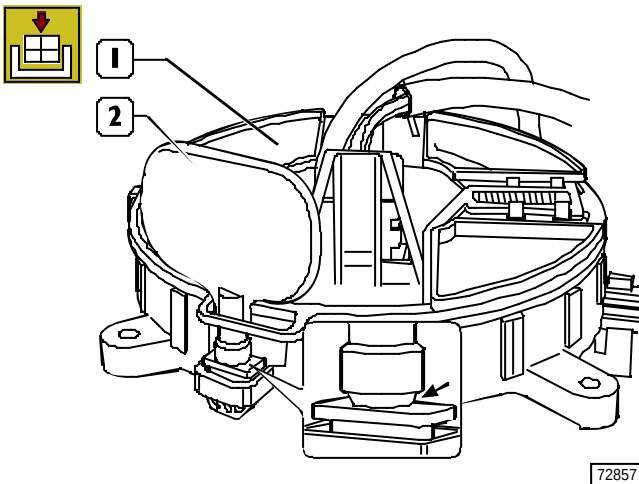


To refit, carry out the operations described for removal in reverse order, tightening the screws and/or nuts to the required torque.



The interconnecting box (1) is supplied as a spare with the stop key assembled as illustrated in the figure. After fitting it on the steering control mounting, it is necessary to turn the key (2) so as to cause it to break at the point shown by the arrow and put the key in the steering wheel housing, see Figure 14.

Replacing the pneumatic cylinder
Removal


Figure 25

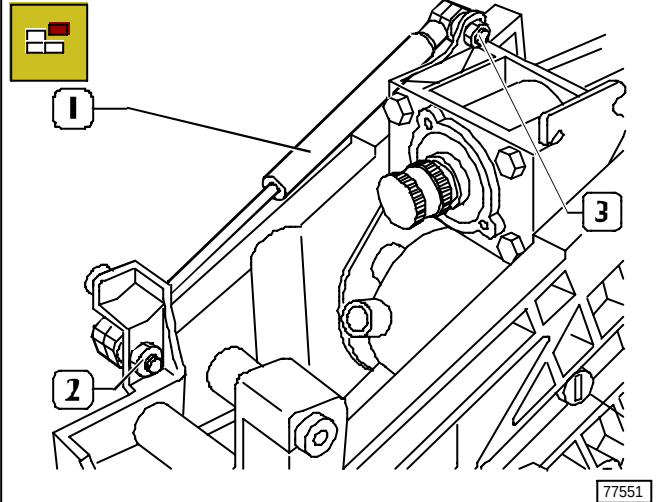

Remove the steering gear assembly as described under the relevant heading (operation 501410).

Remove the damper (1) by taking out the fixing nuts (2 and 3).

Figure 26

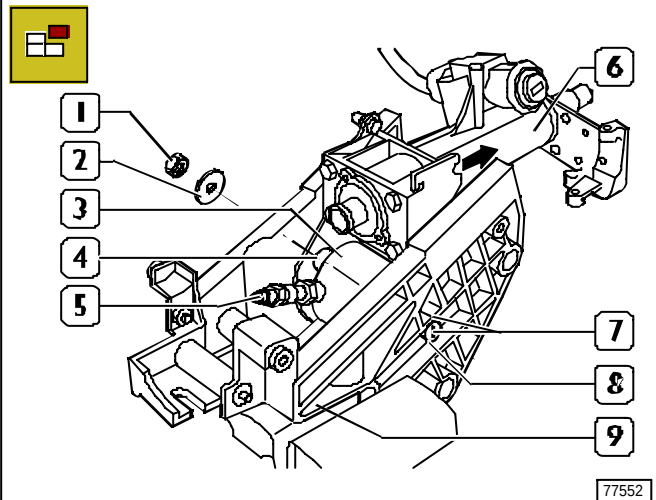

Screw a suitable coupling (5) into the air supply hole of the cylinder (3) and introduce air at a pressure of 8 ± 12 bars.



The air pressure must be maintained throughout removal: this is a necessary condition to make sure the pneumatic cylinder (3) gets released.


Shift the steering gear shaft-assembly (6) completely outwards (→).

Mark the assembly position of the screw (7) on the mount (9). Remove the nut (1), extract the screw (7) with the washers (2 and 8) and remove from the mount (9) the pneumatic cylinder (3) the adjustment washer (4) and the steering gear shaft assembly (6).

Aquila Trucks Centres

Mounting

Figure 27

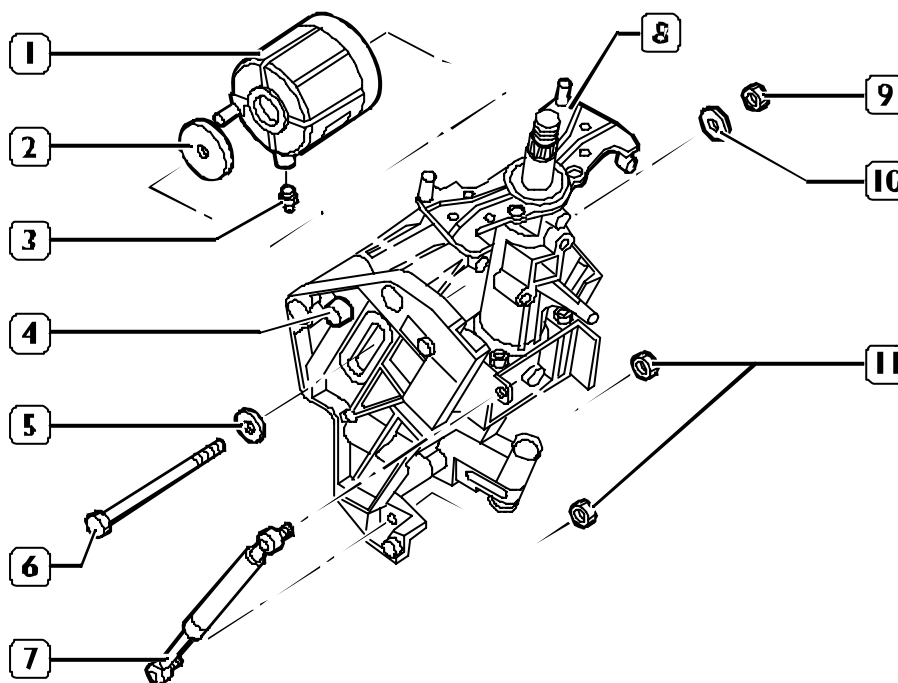


77554

PARTS COMPRISING THE STEERING GEAR ASSEMBLY

1. Pneumatic cylinder - 2. Adjustment washer - 3. Coupling - 4. Mount - 5. Washer - 6. Screw - 7. Damper -
8. Steering gear shaft assembly - 9. Nut - 10. Washer - 11. Nut.

Figure 28

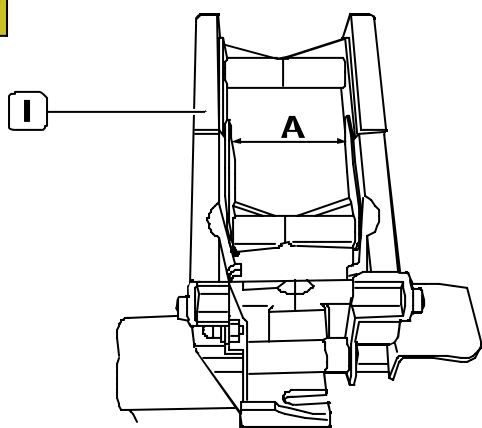


77553

Determine the thickness of the adjustment washer (2, Figure 27) as follows.

Measure the distance A between the sliding surfaces of the mount (1) with a suitable instrument (precision class 0.05 mm).

Figure 29

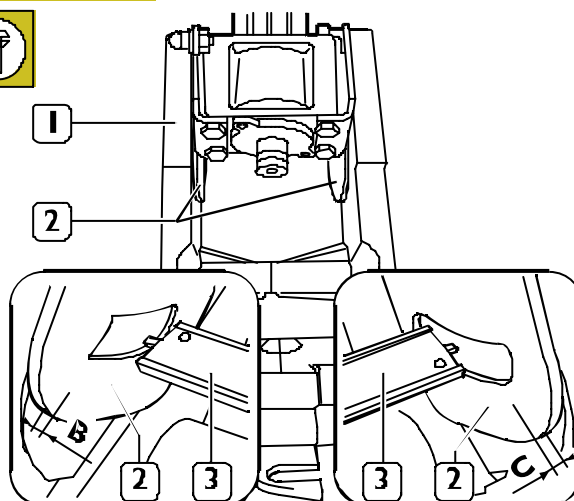


77555

Position the steering gear shaft mount (2) in the mount (1). Measure the distances B and C between the internal surface of the mount (2) and the sliding surface (of the above) of the mount (1) with a suitable instrument (3) (precision class 0.05 mm).

Aquila Trucks Centres

Figure 30

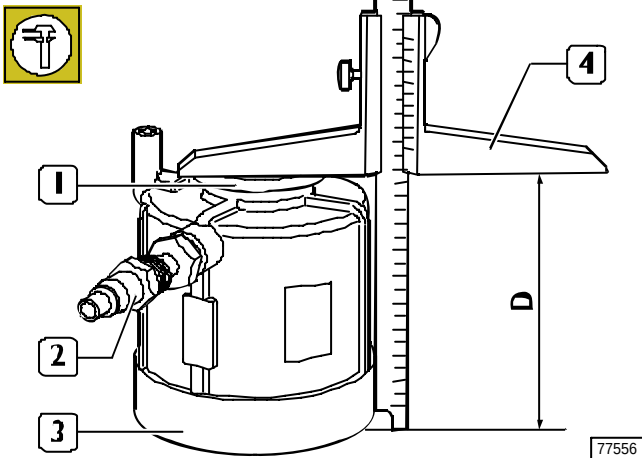

Screw a suitable coupling (2) into the air supply hole of the new cylinder (3) and introduce air at a pressure of 8 ± 12 bars.




The air pressure must be maintained throughout the measurement and following assembly.

Place the pneumatic cylinder (3) on the plane and put the adjustment washer (1) on its piston; measure the distance (D) with a suitable instrument (4, precision class 0.05 mm).

$S = A - (B + C + D + 0.2)$, where A - B - C - D are the distances measured and 0.2 is the clearance.

Figure 31

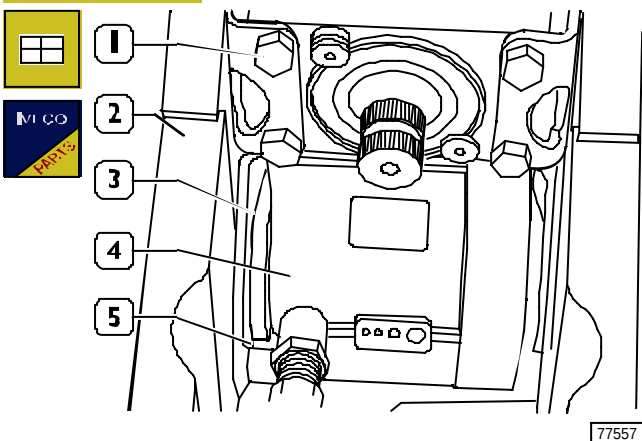


Put mount (2) in mount (1) and fit on the cylinder (4 supplied with air at a pressure of 8 ± 12 bars) positioning it with the pin (5) in the guiding groove of the mount (2). Choose the adjustment washer (3) from the ones supplied as spares, with the thickness calculated in the preceding measurement.

NOTE Washer thickness: 4.6 - 4.7 - 4.8 - 4.9 - 5.5 - 5.2 - 5.4 mm.

Lubricate the washer (3) with grease and insert it between the cylinder (4) and the mount (1).

Figure 32

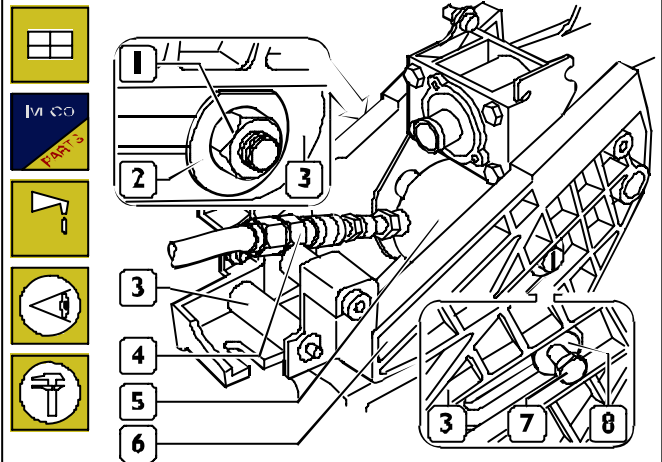

Fit on a new screw (7) with the washer (8) positioning it at the point marked during removal.


From the opposite side, fit on the washer (2). Apply Loctite 270 on the thread of the new nut (1) and screw it onto the screw (3) to determine a clearance of 0.1 ± 0.2 mm between the washer (2) and the mount (3).

Check the travel of the mount (8) of the steering gear shaft on the mount (3) in all directions.

Set the steering gear shaft mount (6) in the position of the start of travel (minimum height of the steering wheel).

Remove the air coupling (4) from the pneumatic cylinder (5).

Figure 33

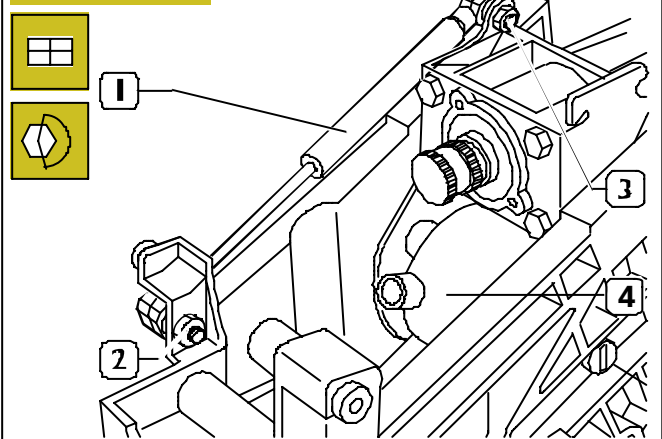

Fit on the damper (1), screw down the fixing nuts (2 and 3) tightening them to a torque of 23 Nm.


Check the locking of the cylinder (4): applying a tractive force of 300 N (30 kg) to the steering gear shaft, in the direction of the driver, this must not move in relation to the mount (3). Then refit the steering gear assembly to the vehicle as described under the relevant heading.

Aquila Trucks Centres

Replacing blinker switch

Removal


Figure 34

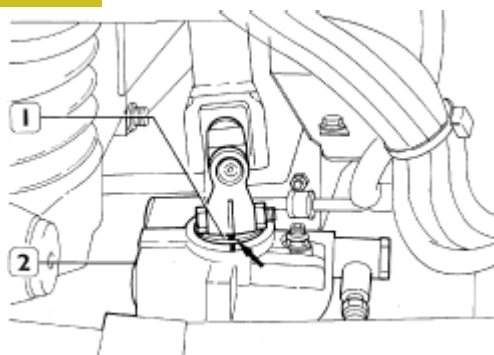

38660

Lift the cowling of the cab. Set the wheels straight and check that the steering box is in the "straight ahead" position, so the reference mark ⇐ of the shaft (1) coincides with the reference mark ⇒ of the steering box (2).


Figure 35

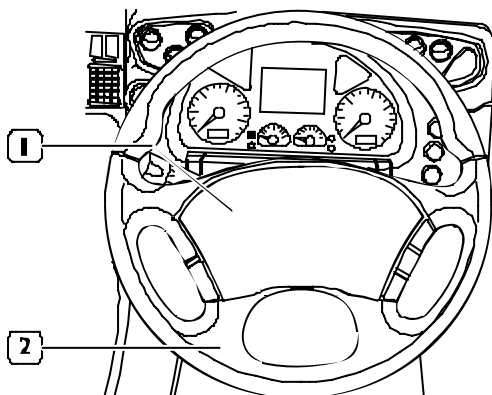

72849

Engage the steering lock by taking the ignition key out. Take the cover (1) off the steering wheel (2).


Figure 36

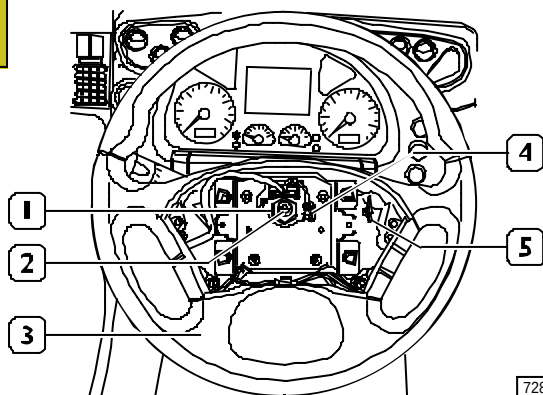

72850

Disconnect the connection (4) of the earth cable. Remove the nut (1), mark the assembly position of the steering wheel (3) on the shaft (2) and remove the steering wheel (3).


Figure 37

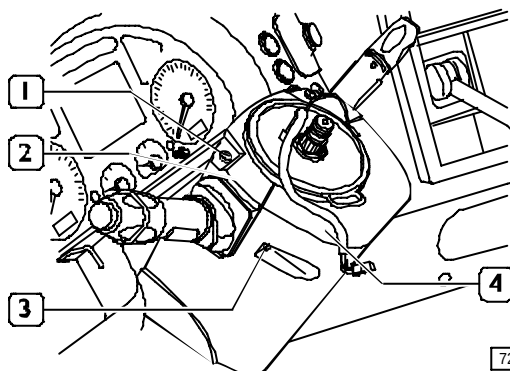

72851

Take out the screws (1 and 3) and take off the side guards (2.4).

Figure 38

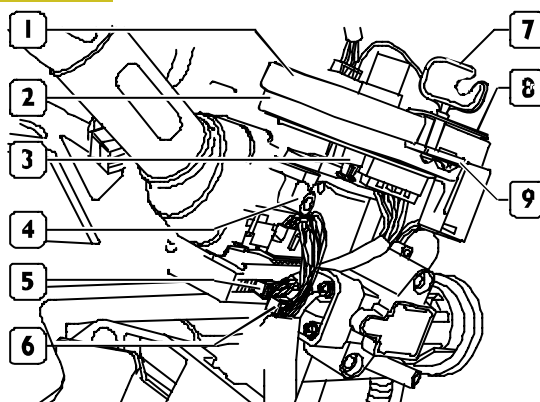

72852




Remove the interconnecting box (2) from the steering control mounting (4), keeping strictly to the procedures described hereunder. This is to prevent damaging the spiralled cable in the box, during assembly, and to avoid a wrong reading of the steering wheel angle.

Disconnect the electric connections (5 and 6). Take the key (5, Figure 36) out of the steering wheel (3, Figure 36). Fasten the cover (1) of the interconnecting box (2) to the box by inserting the key (7) in the slots (8 and 9). This prevents the cover (1) and the box (2) from turning on each during disassembly and this condition is maintained until assembly. If there is no key (7), use a screw and nut of suitable length and diameter.

Take hold of the interconnecting box (2), lift it carefully so that the retaining spring pins (3) come out of the mounting (4) and put it aside.

Aquila Trucks Centres

Figure 39

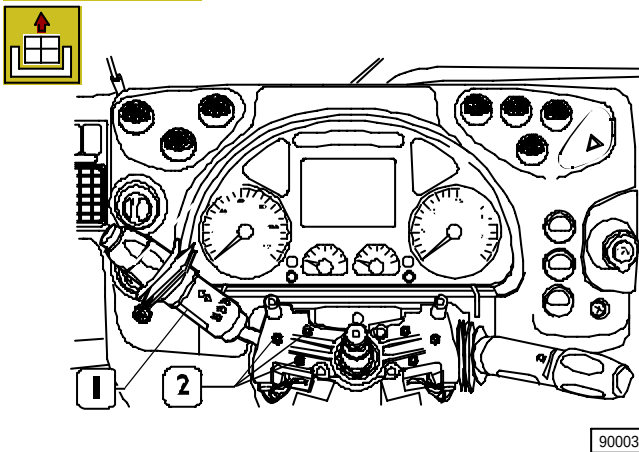

Disconnect securing screws (2) of steering column stalk (1). Remove electric connection and disconnect steering column stalk (1).

Mounting

For mounting, invert operations described for dismounting, tightening the screws and/or nuts at prescribed torque.



The steering column stalks that are supplied as spares have no thread on securing plate. Never thread holes because you might damage the components inside steering column stalk. As the plate is made of aluminium, it allows self-threading on securing it through screws.

MAIN OPERATIONS

501430 BLEEDING THE POWER STEERING SYSTEM

For vehicles 4x2 - 4x4 - 6x4 - 6x6

To bleed the power steering system, proceed as follows.

Fill the power steering fluid reservoir with the prescribed fluid (Tutela G/A).

Turn the engine over with the starter motor and top up the fluid continually to prevent air being drawn into the pump.

Top up the fluid until the level remains constant above the minimum mark on the dipstick.

Start the engine and run it idling, checking that the level of the fluid does not fall under the minimum level marked on the dipstick.

Turn the steering wheel from lock to lock several times to force any air out of the power steering cylinder until no more bubbles appear in the fluid in the reservoir.

Accelerate to maximum rpm, then stop the engine and check that the fluid level does not rise more than 1 to 3 cm.

For vehicles 8x4 - 8x8

Fill the hydraulic power steering case through the oil reservoir of Circuit 1.

Fill the oil reservoir of circuit 1 with the prescribed oil, start the engine and keep it idling.

Top up the oil continuously to prevent the pump from sucking air.

Fill the emergency pump through the oil reservoir of the emergency circuit.

Fill the oil reservoir with the prescribed oil, lift the engine axles from the ground, start the engine and keep it idling, then engage a gear.

Top up the oil continuously to prevent the pump from sucking air.

When the two circuits are full, i.e. when the oil level in the two reservoirs cannot fall below the top mark, start the engine and, with the axles lifted from the ground, keep it idling for 2-3 minutes with the gear engaged.

Turn the steering wheels several times from one limit switch to the other.


Check continuously and top up the oil in the reservoirs, if needed.

501430 MEASURING STEERING BOX PLAY AT THE STEERING WHEEL

Check there is no mechanical play in the steering linkage.

Lock the left-hand wheel in the straight-ahead position using the expanders 99374399; raise the axle.

Figure 40

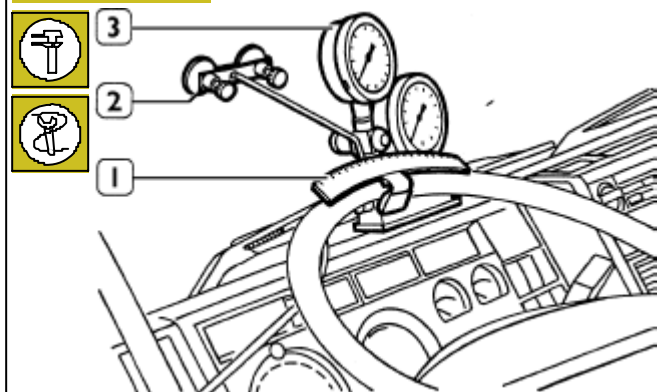

Attach the fixed pointer (2) to the windscreen with suction cups, and attach the graduated scale 99374398 (1) to the steering wheel. Position the pressure tester 99374393 (3) (0 to 10 bar and 0 to 160 bar, pressure gauges connected by a shunt valve). Connect the pipe of the pressure tester to the fitting on the power steering delivery pipe. Top up the fluid level if necessary. Start the engine and run at idle speed. Record the pressure reading shown on the 0 to 10 bar gauge. Slowly turn the steering wheel to the left until the previous pressure reading is increased by 1 bar. Hold the steering wheel in this position and record the value in mm reached on the graduated scale 99374398. Now turn the steering wheel to the right until the pressure reading is again increased by 1 bar, and note the value in mm on the graduated scale 99374398. Add together the two values in mm obtained for left and right steering: the total should not exceed 40 mm. Lower the axle.

Aquila Trucks Centres


CHECKING THE MAXIMUM PRESSURE OF THE POWER STEERING SYSTEM

Using the pressure tester 99374393, connected as described above, and the driver's side wheel locked, start the engine and run at idle. Apply a steering force of 10 ± 20 kg to the steering wheel and record the pressure reading on the 0 ± 160 bar gauge. Repeat the operation applying the same steering force in the opposite direction; if the readings obtained are lower than specified, locate the source of the problem.

NOTE The maximum pressure is given on the data plate attached to the ZF steering box.

Setting the automatic hydraulic steering limit

Figure 41

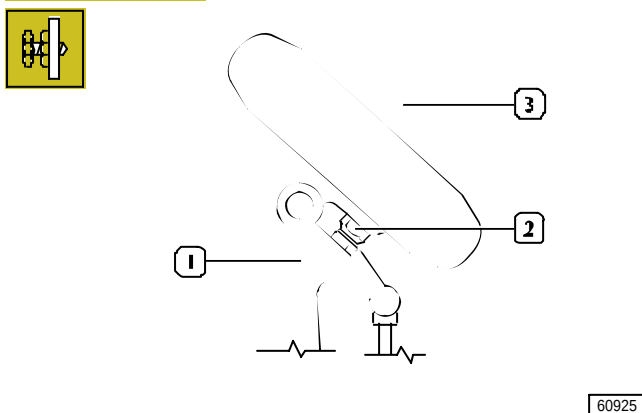

60925

This adjustment is made after fitting the power steering system on the vehicle, with the vehicle unloaded and the front wheels raised or set on revolving platforms. In addition, it is necessary to steer both right and left as follows.

Make sure the gearbox is in neutral.

Start the engine and run at a speed of ≤ 1500 rpm.

Turn the steering wheel in one direction to bring the stop screw (2) on the stub axle (3) into contact with the axle (1).

In this position, apply an additional force on the steering wheel to determine the automatic setting. Repeat this procedure steering in the opposite direction.

If there is a reduction in the travel of the steering control lever, it is necessary to replace the steering limiting screw concerned with a new one, or both screws if the trouble involves the opposite travel as well.

The screws are located on the top and bottom sides of the power steering box. Make the adjustment as described above.

Check

Connect a pressure gauge (minimum full-scale value 200 bar) to the pressure test fitting on the delivery line from the pump to the power steering and apply a steering force at the steering wheel of 50 ± 20 Nm (corresponding to 200 ± 80 N on a 500 mm diameter steering wheel), turning the wheel to the full lock position. The pressure reading should be within the range of 35 to 70 bar. If the pressure is too high, replace the adjustment screws with new ones and repeat the adjustment procedure. If the pressure is too low, check that the hydraulic system is operating properly and that there are no leaks.

Aquila Trucks Centres

SECTION 13

79 Pneumatic system
52 Brakes

	Page
SYMBOLS FOR AIR/HYDRAULIC SYSTEM CIRCUIT DIAGRAMS (MISCELLANEOUS AND GENERATORS) . . .	5
SYMBOLS FOR AIR/HYDRAULIC SYSTEM CIRCUIT DIAGRAMS (VALVES)	6
SYMBOLS FOR AIR/HYDRAULIC SYSTEM CIRCUIT DIAGRAMS (TANKS AND ACCUMULATORS) . . .	12
SYMBOLS FOR AIR/HYDRAULIC SYSTEM CIRCUIT DIAGRAMS (CALIPERS AND CYLINDERS)	13
SYMBOLS FOR AIR/HYDRAULIC SYSTEM CIRCUIT DIAGRAMS (HALF-JOINTS AND COUPLING HEADS) .	15
SYMBOLS FOR AIR/HYDRAULIC SYSTEM CIRCUIT DIAGRAMS (INDICATORS AND SWITCHES)	17
SYMBOLS FOR AIR/HYDRAULIC SYSTEM CIRCUIT DIAGRAMS (BRAKES)	18
PIPES AND COUPLINGS	19
- General	19
- Replacing flexible hoses with threaded couplings	19
- Replacing flexible hoses with quick-connection couplings	20
- Replace hoses with Raufoss type fittings	21/1
BRAKING SYSTEMS WITH ABS - EBL DEVICE	22
- Main diagram for vehicles 4x2 - 4x4 used for haulage	22
- Working diagram for 6x4 vehicles isolated with an ABS - EBL device	23
- Working diagram for 6x4 - 6x6 vehicles designed for towing with ABS - EBL device	24
- Working diagram for 8x4x4 - 8x8x4 vehicles isolated with an ABS - EBL device	25
- Working diagram for 8x4x4 - 8x8x4 vehicles designed for towing with ABS - EBL device	26
BRAKING SYSTEMS WITH ABS - EBL - ASR DEVICE	27

Aquila Trucks Centres

Page

	Page
- Working diagram for 4x2 - 4x4 vehicles designed for towing	27
- Main diagram for vehicles 6x4 with ABS - EBL - ASR	28
- Main diagram for vehicles 6x4 - 6X6 used for haulage fitted with ABS - EBL - ASR ..	29
- Main diagram for vehicles 8x4x4 - 8x8x4 with ABS - EBL - ASR	30
- Main diagram for vehicles 8x4x4 - 8x4x4 used for haulage fitted with ABS - EBL - ASR ..	31
- Braking system main components layout on the vehicle	32
DESCRIPTION	33
- Service braking	33
- Emergency braking	33
- Retarding braking	33
- Parking braking	33
BRAKES	33
- Front disc brakes SN7 type (for vehicles with partial traction)	33
- Drum brakes	33
FAULT DIAGNOSIS	34
- Diagnosis Instruments	34
- Diagnosis on Cluster	36
- DTC - FMI error codes	37
TIGHTENING TORQUES	73
TOOLS	74
MAIN DATA - PNEUMATIC SYSTEM	82
MAIN DATA - BRAKES	86
BRAKING SYSTEM MAIN COMPONENTS CHECK	89
BRAKING SYSTEM MAIN COMPONENTS	92
- Compressor	92
- Troubleshooting	92
- Head fastening screws tightening torque	92
- A.P.U. (Air Processing Unit)	93
- A.P.U. Troubleshooting (Drier + four-way protection valve)	93

- Duplex distributor	94
- Troubleshooting	94
- Pressure reducer	95
- Troubleshooting	95
- Triple control servo distributor	95
- Setting at the bench	95
- Predominance adjustment	95
- KNORR BREMSE AC 597B	96
- WABCO 973 009 013	96
- Troubleshooting	96
- Coupling heads	97
- Check valve (towing vehicles)	97
- Parking brakes control hand distributor (for towing vehicles)	97
- Troubleshooting	97
- Parking brakes control hand distributor (stand-alone vehicles)	98
- Troubleshooting	98
- Relay valves	99
- Troubleshooting	99
- Diaphragm brake cylinder	99
- Combined brake cylinder	100
- Combined cylinder emergency relief device ..	100
REPAIR OPERATIONS	100
- Troubleshooting	100
- Troubleshooting	101
ANTI-SKID SYSTEM	101
- ABS (Anti-Lock Brake System)	101
- ASR (Anti-Slip Regulator) system	101
- EBL (Electronic Brakes Limiter)	101
- Pressure sensor	101
- Electronic control unit	102



Aquila Trucks Centres

	Page		Page
- Brake anti-lock distributor	102	- Removal	110
- Electropneumatic valve for ASR	102	- Refitting	110
- Rpm sensors	102	SN7 BRAKE CALIPER OVERHAUL	112
- Phonic wheels	102	- Disassembly	112
FRONT DISC BRAKES SN 7 TYPE	103	- Component part cleaning and check	113
- Operation (See previous figure)	104	- Assembly	113
CHECKS	104	OVERHAULING BRAKE DISCS	115
- Checking the automatic play recovery system efficiency	104	TURNING AND GRINDING BRAKE DISCS ON THE BENCH	115
- SN7 brake caliper components	105	TURNING AND GRINDING BRAKE DISCS ON THE VEHICLE	115
- SN7 brake calliper braking gaskets thickness check	106	DRUM BRAKES	116
- Replacing brake linings	107	DUO DUPLEX DRUM FRONT/REAR BRAKES	117
- Removing and refitting brake callipers	109	- Disassembly	117
- Removal	109	- Drum turning	120
- Refitting	109	- Replacing brake linings	120
- Removing and refitting wheel hubs	110	- Turning brake linings	121
		- Assembly	121

Aquila Trucks Centres









Aquila Trucks Centres

  **SYMBOLS FOR AIR/HYDRAULIC SYSTEM CIRCUIT DIAGRAMS
(MISCELLANEOUS AND GENERATORS)**

DESCRIPTION	SYMBOL	
HYDRAULIC FLOW		
AIR FLOW		
ELECTRICAL LINE		
ABLE TO ROTATE		
CROSSOVER OF CONNECTED LINES		
PRESSURE TEST POINT		
QUICK-CONNECTION COUPLING		
COCK		
COCK WITH OUTLET		
SILENCER		
COMPRESSOR		
ENERGY SAVING COMPRESSOR		
VACUUM PUMP		
HYDRAULIC PUMP		
HYDRAULIC HAND PUMP		











Aquila Trucks Centres

        SYMBOLS FOR AIR/HYDRAULIC SYSTEM CIRCUIT DIAGRAMS (VALVES)

DESCRIPTION	SYMBOL	
CONDENSATE SEPARATOR		
FILTER		
DEHUMIDIFIER		
DEHUMIDIFIER		
DEHUMIDIFIER WITH BUILT-IN REGULATOR		
AUTOMATIC CONDENSATION DRAIN VALVE		
CONTROLLED CONDENSATION DRAIN VALVE		
HAND CONDENSATE DRAIN VALVE		
CONTROLLED ANTI-ICING UNIT		
AUTOMATIC ANTI-ICING UNIT		
PRESSURE REGULATOR WITH INDEPENDENT CIRCUIT		
PRESSURE REGULATOR		
PRESSURE CONTROLLER		
PRESSURE CONTROLLER (GOVERNOR)		
PRESSURE LIMITING VALVE		












Aquila Trucks Centres

          SYMBOLS FOR AIR/HYDRAULIC SYSTEM CIRCUIT DIAGRAMS (VALVES)

DESCRIPTION	SYMBOL	
PROPORTIONAL REDUCING VALVE		
ADAPTER VALVE		
FOUR CIRCUIT PROTECTION VALVE		
THREE CIRCUIT PROTECTION VALVE		
TWO CIRCUIT PROTECTION VALVE		
NON-RETURN AIR INLET VALVE		
LIMITED RETURN AIR INLET VALVE		
SAFETY VALVE		
CHECK VALVE		
CHECK VALVE		
DOUBLE SHUT-OFF VALVE		
DIFFERENTIAL DOUBLE SHUT-OFF VALVE		
THROTTLE VALVE WITH QUICK RETURN		
THROTTLE VALVE		










Aquila Trucks Centres

    SYMBOLS FOR AIR/HYDRAULIC SYSTEM CIRCUIT DIAGRAMS (VALVES)

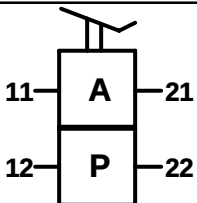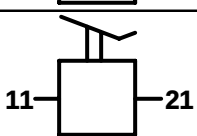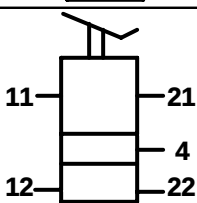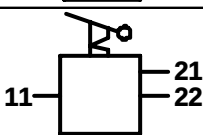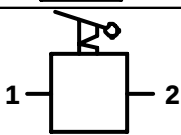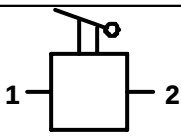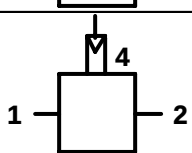DESCRIPTION	SYMBOL	
QUICK DISCHARGE		
BRAKE CONTROL VALVE		
BRAKE CONTROL VALVE		
BRAKE CONTROL VALVE		
PARKING BRAKE CONTROL VALVE		
PARKING BRAKE CONTROL VALVE		
BRAKE VALVE		
CONTROL VALVE		
CONTROL VALVE		
RETARDER CONTROL VALVE		
SERVO CONTROL VALVE		









Aquila Trucks Centres

SYMBOLS FOR AIR/HYDRAULIC SYSTEM CIRCUIT DIAGRAMS (VALVES)

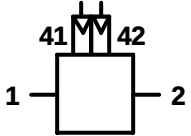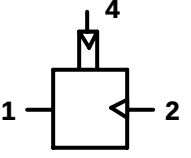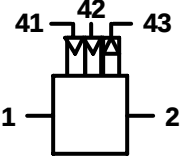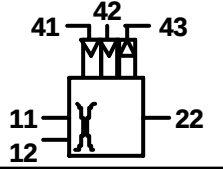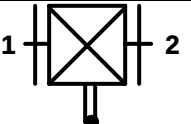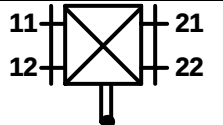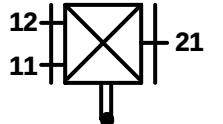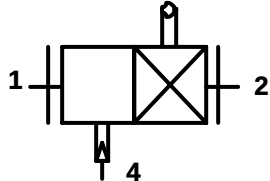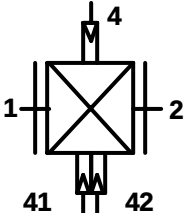DESCRIPTION	SYMBOL	
SERVO CONTROL VALVE		
SERVO CONTROL VALVE FOR SINGLE LINE		
TRAILER BREAKING TRIPLE CONTROL VALVE		
TRAILER BREAKING TRIPLE CONTROL VALVE WITH BUILT-IN SERVO SWITCHING		
LOAD SENSING VALVE		
DUAL LOAD SENSING VALVE		
LOAD SENSING VALVE WITH BY-PASS		
LOAD SENSING VALVE WITH BUILT-IN RELAY		
LOAD SENSING VALVE WITH BUILT-IN RELAY WITH AIR CONTROL		










Aquila Trucks Centres

SYMBOLS FOR AIR/HYDRAULIC SYSTEM CIRCUIT DIAGRAMS (VALVES)

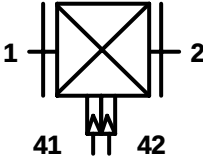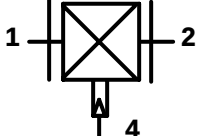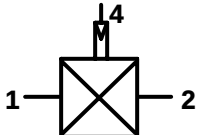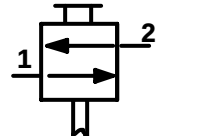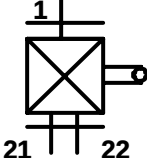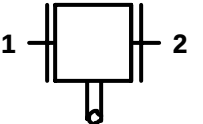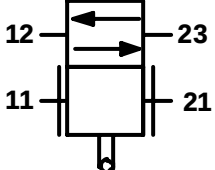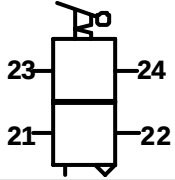DESCRIPTION	SYMBOL	
LOAD SENSING VALVE WITH AIR CONTROL		
LOAD SENSING VALVE WITH AIR CONTROL		
PROPORTIONAL REDUCING VALVE		
SLAVED PROPORTIONAL REDUCING VALVE		
STROKE LIMITER VALVE		
LEVELLING VALVE		
LEVELLING VALVE		
LEVELLING VALVE WITH BUILT-IN TRAVEL LIMITER		
HAND OPERATED SUSPENSION RAISING CONTROL VALVE		



Aquila Trucks Centres

  SYMBOLS FOR AIR/HYDRAULIC SYSTEM CIRCUIT DIAGRAMS (VALVES)

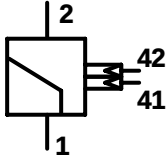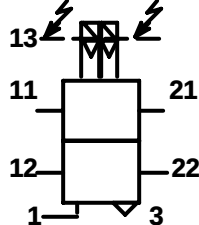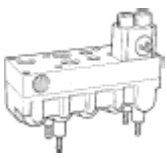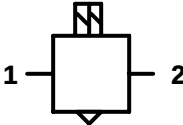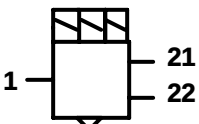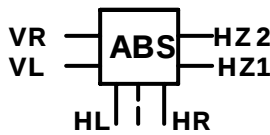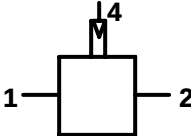DESCRIPTION	SYMBOL	
PROPORTIONAL CONTROL VALVE		
HAND OPERATED SUSPENSION CONTROL VALVE WITH ELECTRICAL MONITORING		
ELECTROPNEUMATIC VALVE		
ELECTROPNEUMATIC VALVE		
ELECTROPNEUMATIC VALVE		
HYDRAULIC MODULATOR FOR ABS		
AUGMENTER VALVE		











Aquila Trucks Centres

  **SYMBOLS FOR AIR/HYDRAULIC SYSTEM CIRCUIT DIAGRAMS
(TANKS AND ACCUMULATORS)**

DESCRIPTION	SYMBOL	
COMPRESSED AIR TANK		
BRAKE FLUID RESERVOIR		
AIR SPRING		



Aquila Trucks Centres

      **SYMBOLS FOR AIR/HYDRAULIC SYSTEM CIRCUIT DIAGRAMS
(CALIPERS AND CYLINDERS)**

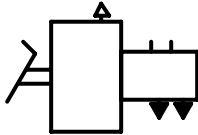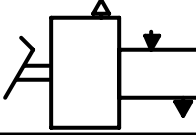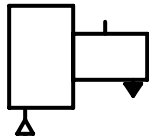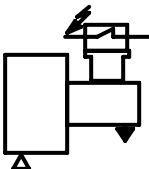DESCRIPTION	SYMBOL	
VACUUM BRAKE SERVO		
VACUUM BRAKE SERVO		
DUAL CIRCUIT MASTER CYLINDER		
SINGLE CIRCUIT MASTER CYLINDER		
AIR/HYDRAULIC CONVERTER		
AIR/HYDRAULIC CONVERTER		
HYDRAULIC BRAKE CYLINDER		
OPERATOR CYLINDER		
BRAKE CYLINDER		
SPRING CYLINDER		
COMBINED BRAKE CYLINDER		
FIXED DISK BRAKE CALIPER		






Aquila Trucks Centres

  **SYMBOLS FOR AIR/HYDRAULIC SYSTEM CIRCUIT DIAGRAMS
(CALLIPERS AND CYLINDERS)**

DESCRIPTION	SYMBOL	
FLOATING DISK BRAKE CALLIPER		
FLOATING DISK BRAKE CALLIPER WITH PARKING		
MECHANICAL FLOATING DISK BRAKE CALLIPER		
SERVO CLUTCH		
SERVO CLUTCH		





Aquila Trucks Centres

**SYMBOLS FOR AIR/HYDRAULIC SYSTEM CIRCUIT DIAGRAMS
(HALF-JOINTS AND COUPLING HEADS)**

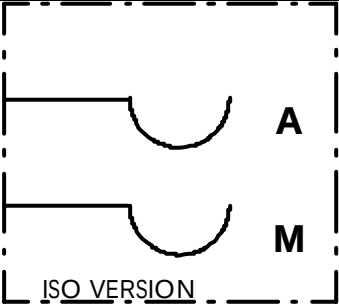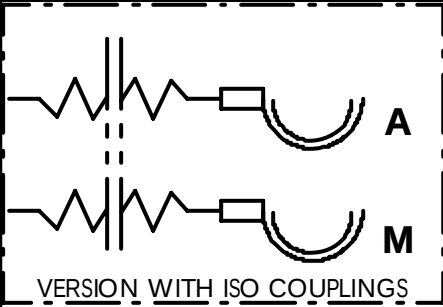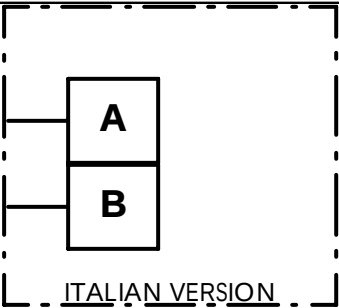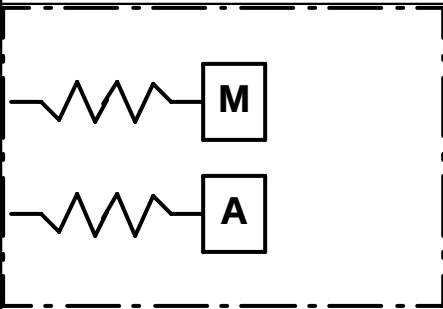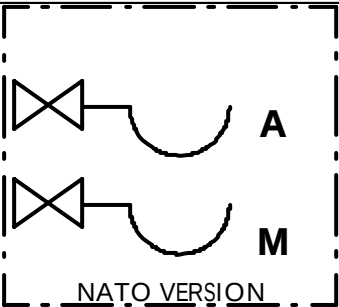DESCRIPTION	SYMBOL	
"ISO" SEMICOUPLING		
"ISO" SEMICOUPLING		
"CUNA" SEMICOUPLING		
"CUNA" SEMICOUPLING		
"NATO" SEMICOUPLING		




Aquila Trucks Centres

**SYMBOLS FOR AIR/HYDRAULIC SYSTEM CIRCUIT
(HALF-JOINTS AND COUPLING HEADS)**

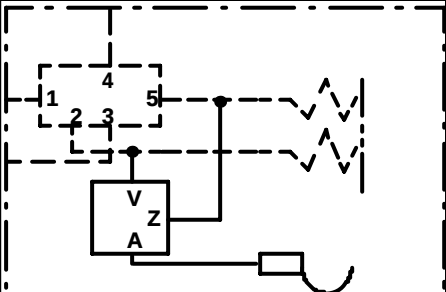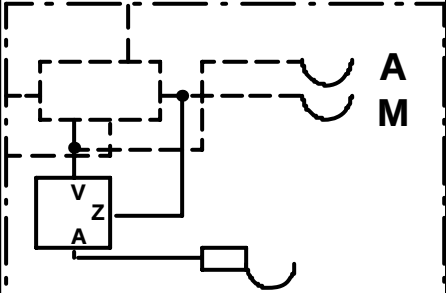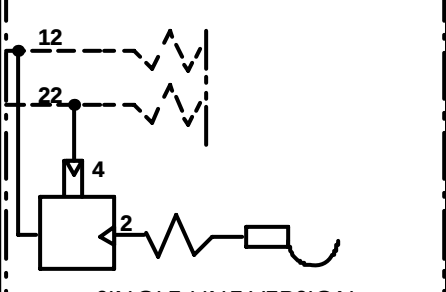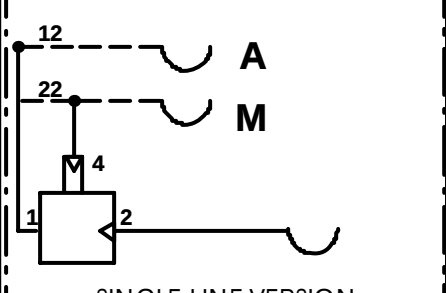DESCRIPTION	SYMBOL	
SEMI-COUPLING	 SINGLE LINE VERSION	
SEMI-COUPLING	 SINGLE LINE VERSION	
SEM-ICOUPLING	 SINGLE LINE VERSION	
SEMI-COUPLING	 SINGLE LINE VERSION	








Aquila Trucks Centres

   **SYMBOLS FOR AIR/HYDRAULIC SYSTEM CIRCUIT DIAGRAMS
(INDICATORS AND SWITCHES)**

DESCRIPTION	SYMBOL	
PRESSURE GAUGE		
PRESSURE GAUGE		
PRESSURE TRANSMITTER		
LAMP		
MECHANICALLY CONTROLLED SWITCH		
PRESSURE SWITCH		
LOW PRESSURE SWITCH		
AUDIBLE WARNING		
SENSOR		

Aquila Trucks Centres

SYMBOLS FOR AIR/HYDRAULIC SYSTEM CIRCUIT DIAGRAMS (BRAKES)

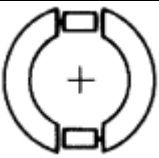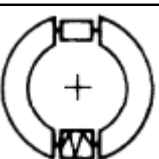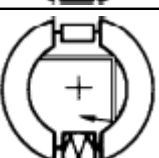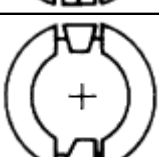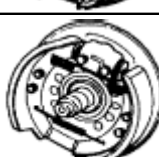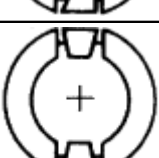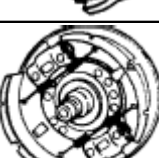DESCRIPTION	SYMBOL	
SINGLE CYLINDER HYDRAULIC BRAKE		
TWIN CYLINDER HYDRAULIC BRAKE		
DUAL SERVO HYDRAULIC BRAKE		
DUAL SERVO HYDRAULIC BRAKE WITH PARKING BRAKE		
SINGLE CAM OPERATED BRAKE		
TWIN DUAL CAM OPERATED BRAKE		

Aquila Trucks Centres

799512 PIPES AND COUPLINGS


General

Hydraulic system pipings for industrial vehicles are flexible ones made of polyamide with single-layered or double-layered structure and in the following diameters ($\varnothing$ 6-8-10-12-16 mm) equipped with spares in meters.

Replacing flexible hoses with threaded couplings

Carefully follow the instructions below.

Figure 1

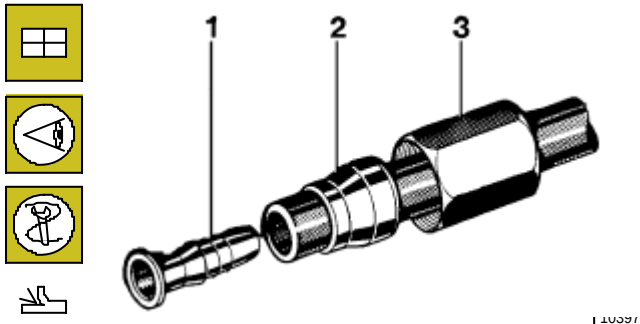


- Use only approved hose
- Check the condition of the replacement hose; there must be no cracks, cuts or incisions on it.
- Cut the pipe to the required length, cutting at 90° to the centreline using appropriate pipe cutting pliers 99387050.

Thread onto the pipe, in the order given:

- nut (3), compression ring (2) (larger thickness towards the nut (3)) and reinforcing bush (1);
- bush must be in perfect condition (it must not show any distortion or signs of hammering).

Figure 2

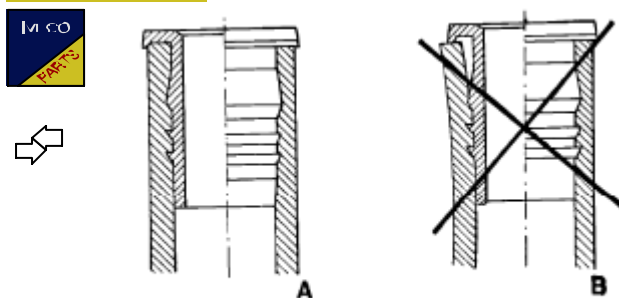

FITTING METHOD

- A = CORRECT METHOD OF FITTING
B = INCORRECT METHOD OF FITTING

- Install reinforcing bush using tool 99372219, ensuring that there is contact between its flange and the end of the hose;
- make sure that the end of the hose fits into the raked groove in the flange.

- End-form the seating bush, on fitting to the vehicle or on the work bench, to a union.
- The pressure exerted and the final distance of the front edge of the compression ring from that of the reinforcing bush must be the value listed in the schedule as given in the table.




If the fittings are badly assembled, do not re-use the hose after extracting the bush and seating ring.

	Pipe mm	Distance between edge of bush and ring mm (*)	Assembly pressure N/mm ²
Double layer	6 x 1	from 1 to 1,5	0,040
	8 x 1	from 2 to 2,5	0,050
Single layer	10 x 1,5	from 2 to 2,5	0,050
	12 x 1,6	from 2 to 2,5	0,060
	16 x 2,34	from 3 to 3,5	0,060

(*) See reference h, Figure 3.

Figure 3

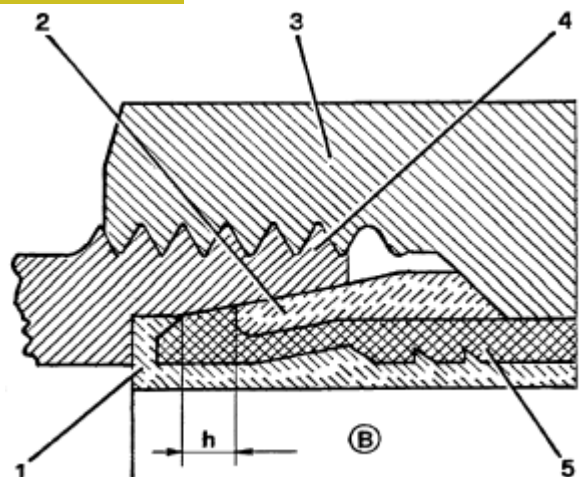

1. Reinforcing bush - 2. Pressure ring - 3. Nut - 4. Union
5. Hose - h. Distance between edge of bush and edge of ring (see table).

Insert the end of the hose prepared in this way into the union body until reinforcing bush flange bears against seating;

- To tighten nut onto union, first of all screw in by hand and then complete tightening using a polygon wrench fitted on the torque wrench, to be set according to the specified tightening torque.

Aquila Trucks Centres

When fitting the hose to the vehicle, some important points requiring care should be borne in mind :

- Bends must comply with minimum radii, so as to avoid constrictions:


Diameter of pipe mm	Minimum radius of curvature mm
6 x 1	≈ 40
8 x 1	≈ 50
10 x 1,5	≈ 60
12 x 1,6	≈ 75
16 x 2,34	≈ 100



Make sure that the hoses are not in contact with sharp edges or with sharp metal parts or sources of heat, but are at a minimum safety distance of 15 mm from these.

- When hoses run through chassis members or metal parts, make sure that the holes through which they pass are fitted with rubber grommets and that these are in good condition.
- Avoid sliding the hose along sharp edges which might cause cuts.
- Where the hose has to be attached to existing pipework, take account of the additional heat to which it may be subjected (power steering pipework); in this case, the hose must be protected with shields.
- When the hose has been connected, check that it is not under tension between the attachment points, instead leaving it slightly slack to take up the more substantial variations in temperature, especially for short lengths.
- Before fitting, thoroughly clean the hoses by blowing compressed air through them to safeguard operation of the system.

Figure 4

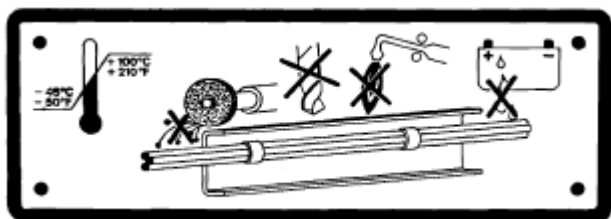

- Protect the hoses if grinding or welding operations are carried out on the vehicle; a notice is fitted in the cabin indicating the precautions to be observed carefully to avoid damage.




For greater safety and convenience in working, it is advisable to remove the hoses during these operations.

When fitting is finished, check that all seals (unions, couplings etc.) are completely free from leaks.

Replacing flexible hoses with quick-connection couplings

Swivel couplings:

Figure 5

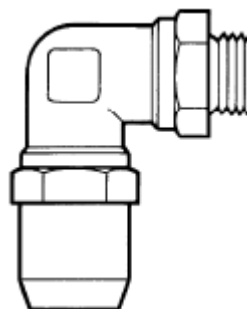


39306

Screw the coupling into the threaded seating provided on the air valve and tighten it to the tightening torque indicated in the table.

Banjo couplings:

Figure 6

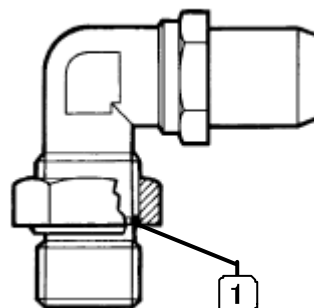

39307


- Check that the seal ring (1) is in its seat;
- Tighten the coupling until the seal gasket contacts the valve;
- Direct the valve correctly and keeping the movable part still, lock the hexagonal nut to the torque indicated in the table.

Swivel and banjo couplings:

COUPLING THREAD	TIGHTENING TORQUE (Nm ± 10%)
M 10 x 1,0 mm	22
M 12 x 1,5 mm	24
M 14 x 1,5 mm	28
M 16 x 1,5 mm	35
M 22 x 1,5 mm	40

Aquila Trucks Centres


Figure 7

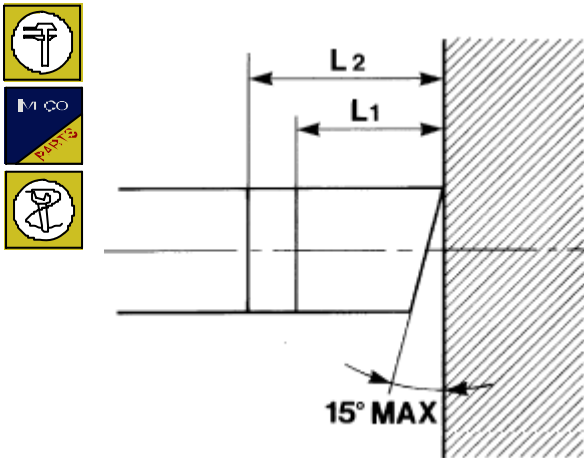

33977

- Only use approved type-tested hoses;
- Check the condition of the new hose to ensure it has no cracks, cuts or scores;
- Cut the hose at 90°, maximum error 15°, with reference to the axis. Use pipe-cutter pliers 99387050 to cut to the required length;

Figure 8

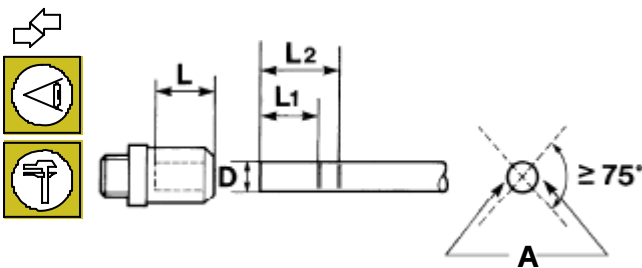

33976

A = Mark to identify end of tube travel


- Use indelible ink to mark clearly two reference marks on both diametrically opposite faces of the pipe at an angle of $\geq 75^\circ$, set at distances L_1 and L_2 , to ensure correct fitting in place.



L_1 and L_2 vary according to the diameter of the hose and are to be measured at the longer part of the hose (see Figure 7).

D (mm)	L ⁰ _{+0.5} (mm)	L ₁ ^{-0.5} ₊₁ (mm)	L ₂ ^{-0.5} ₊₁ (mm)
6	19.8	17	22
8	20.5	18	23
12	25	22	28
16	27.1	24	30


Figure 9

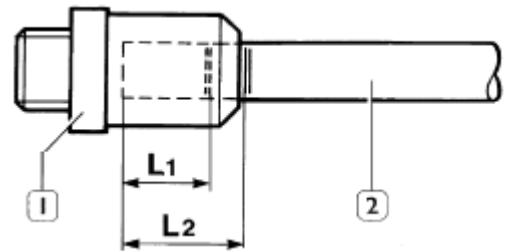

33908

- Insert the hose (2) by hand into the coupling (1), with a force between 30 and 20 Nm according to the hose diameter, so that reference mark L_1 is inside the hose whereas L_2 remains visible.

Figure 10

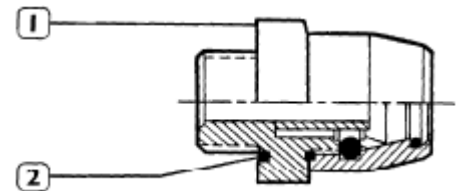

33978

When removing couplings (1) on pneumatic components, check the condition of the seal ring (2) and if necessary replace.

COUPLING THREAD	SEAL RING DIMENSIONS
M 10 x 1.0	10.1 x 1.6
M 12 x 1.5	11.0 x 2.0
M 14 x 1.5	-
M 16 x 1.5	15.0 x 2.0
M 22 x 1.5	-



Whenever a hose is removed from a quick connection coupling, the coupling itself must be replaced. Spare quick connection couplings are supplied complete.




Quick release and threaded couplings are not interchangeable. This also applies to flexible hoses used with quick release couplings and flexible hoses used with threaded couplings.

Aquila Trucks Centres

Replace hoses with Raufoss type fittings

Figure 10/1

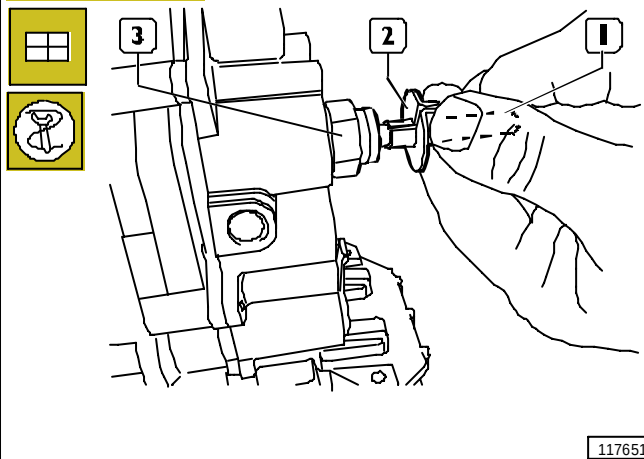

NOTE Operations for pipe change replacement with Raufoss type fittings are different from previously described ones only for what is mentioned below.


In order to remove pipe (1), fit tool 99387051 (2) on it through the opening. Push tool 99387051 (2) inside fitting (3) till release of polyamide pipe.
Remove pipe (1).

Aquila Trucks Centres

Aquila Trucks Centres

BRAKING SYSTEMS WITH ABS - EBL DEVICE**Main diagram for vehicles 4x2 - 4x4 used for haulage**

Figure 11

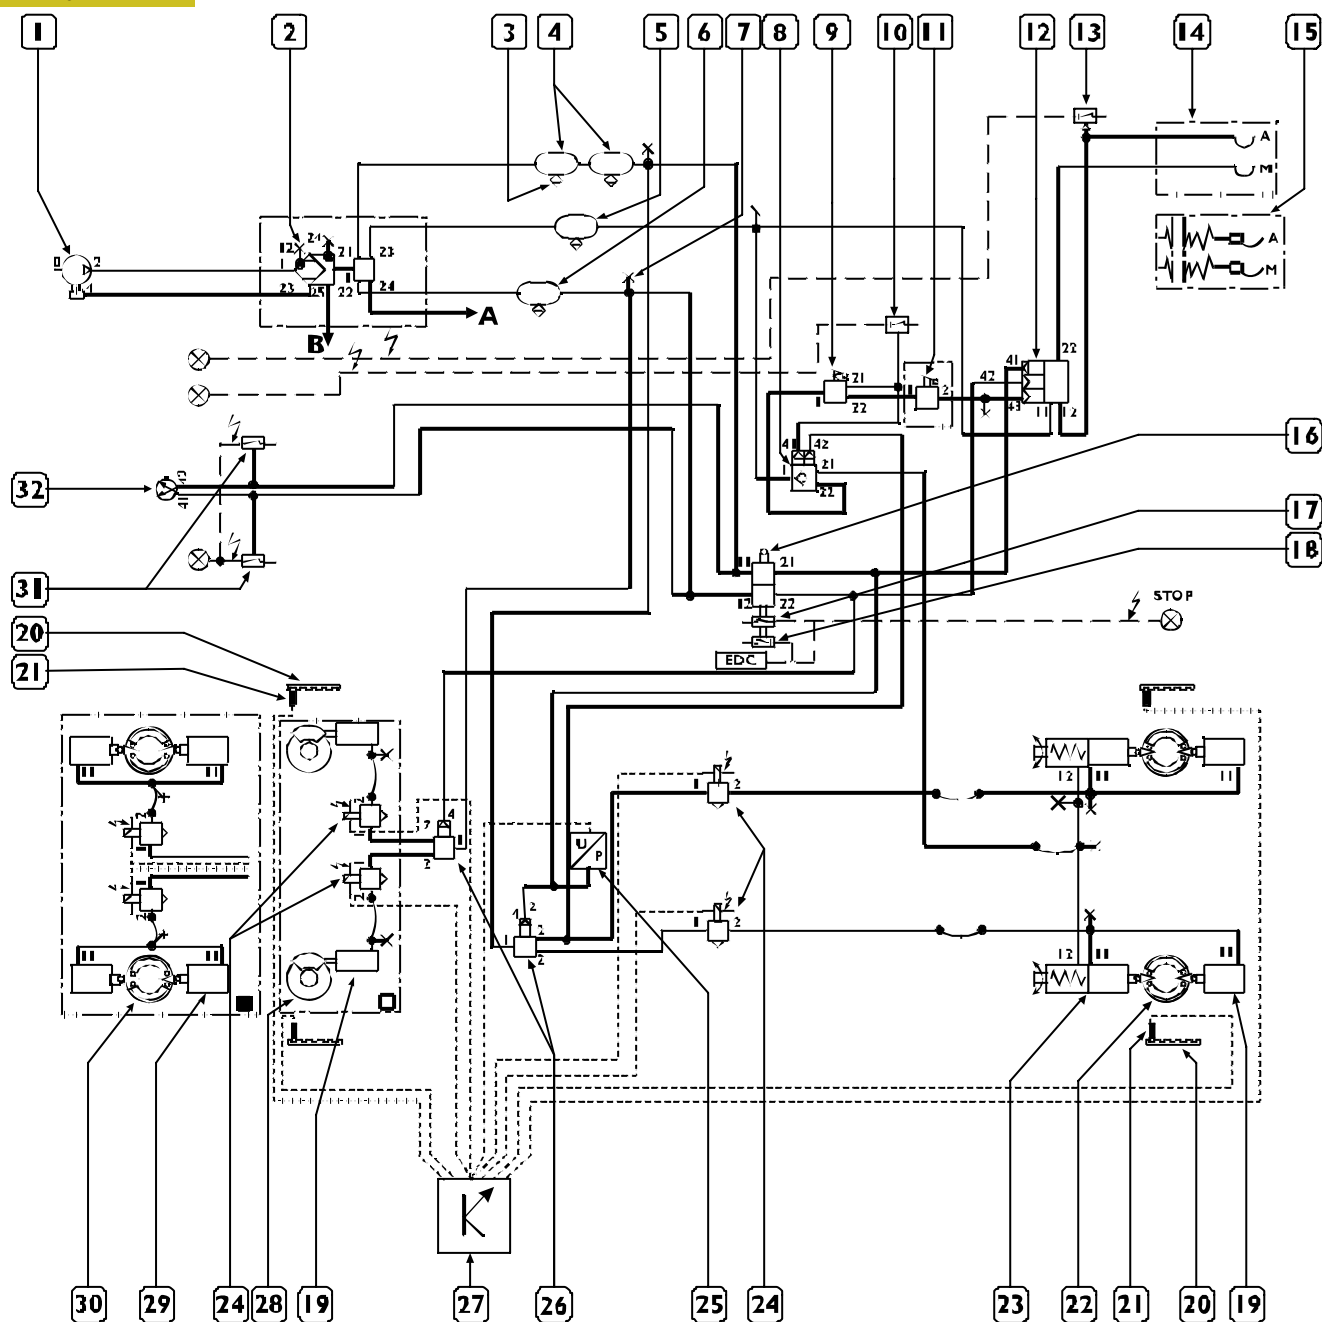

108145

1. E.S. Compressor - 2. A.P.U. - 3. Manual condensate discharge valve - 4. Trailer air tank 20 l - 5. Rear axle air tank 20 l - 6. Front axle air tank 20 l - 7. Pressure test point - 8. Dual control relay valve - 9. Parking brake hand control valve - 10. Switch for parking brake on indicator - 11. Trailer slowing hand control valve (optional) - 12. Triple servo control valve for trailer braking - 13. Low pressure switch - 14. "ISO" half-coupling for truck - 15. "ISO" half-coupling for tractor - 16. Duplex distributor - 17. Brake light switch - 18. Engine brake control switch - 19. Diaphragm brake cylinder - 20. Phonic wheel - 21. Wheel speed sensor - 22. Duo Duplex drum brake assembly - 23. Combined brake cylinder - 24. ABS solenoid valve - 25. Pressure sensor - 26. Single-control relay valve - 27. Electronic control unit - 28. Disc brake assembly - 29. Diaphragm brake cylinder - 30. Drum brake assembly - 31. Low pressure switch - 32. Pressure gauge - A. Services - B. Services


V 4x2 vehicles

J 4x4 vehicles (optional for vehicles 4x2)

Aquila Trucks Centres

Working diagram for 6x4 vehicles isolated with an ABS - EBL device

Figure 12

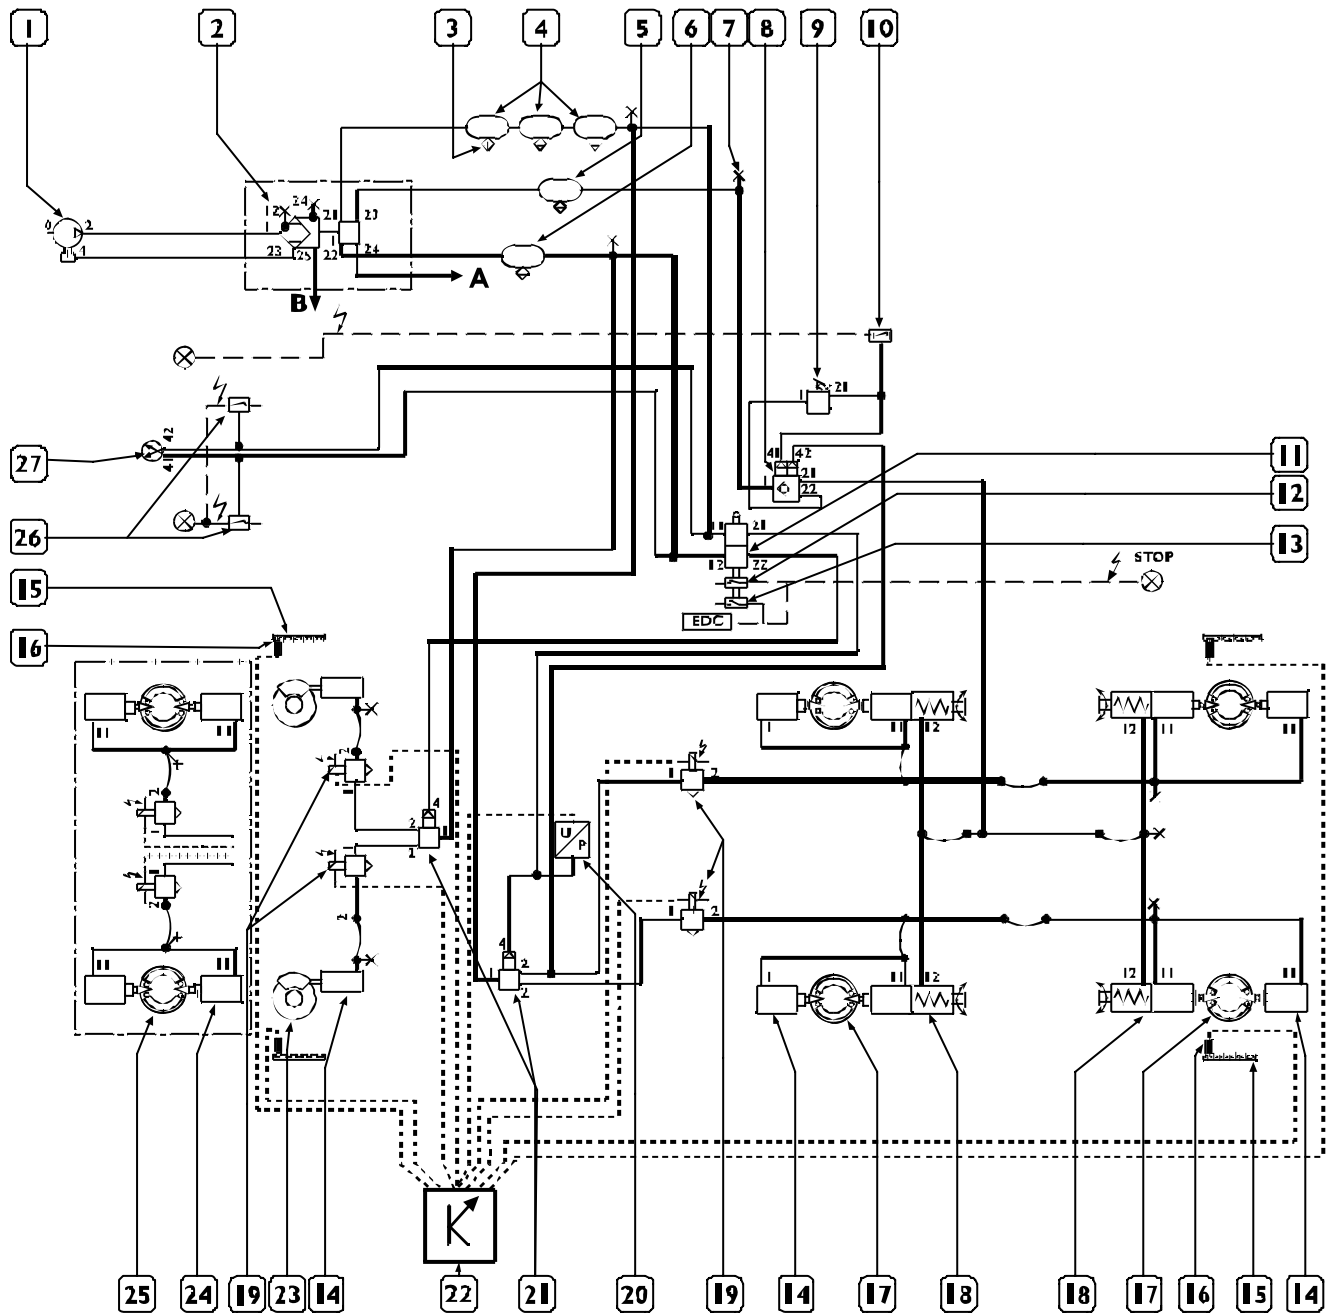

78271


1. E.S. Compressor - 2. A.P.U. - 3. Manual condensate discharge valve - 4. Trailer air tank 20 l - 5. Rear axle air tank 20 l - 6. Front axle air tank 20 l - 7. Pressure test point - 8. Dual control relay valve - 9. Parking brake hand control valve - 10. Switch for parking brake on indicator - 11. Duplex distributor - 12. Brake light switch - 13. Engine brake control switch - 14. Diaphragm brake cylinder - 15. Phonic wheel - 16. Wheel speed sensor - 17. Duo Duplex drum brake assembly - 18. Combined brake cylinder - 19. ABS solenoid valve - 20. Pressure sensor - 21. Single-control relay valve - 22. Electronic control unit - 23. Disc brake assembly - 24. Diaphragm brake cylinder (*) - 25. Drum brake assembly (*) - 26. Low pressure switch - 27. Pressure gauge - A. Services - B. Services

(*) optional

Aquila Trucks Centres

Working diagram for 6x4 - 6x6 vehicles designed for towing with ABS - EBL device

Figure 13

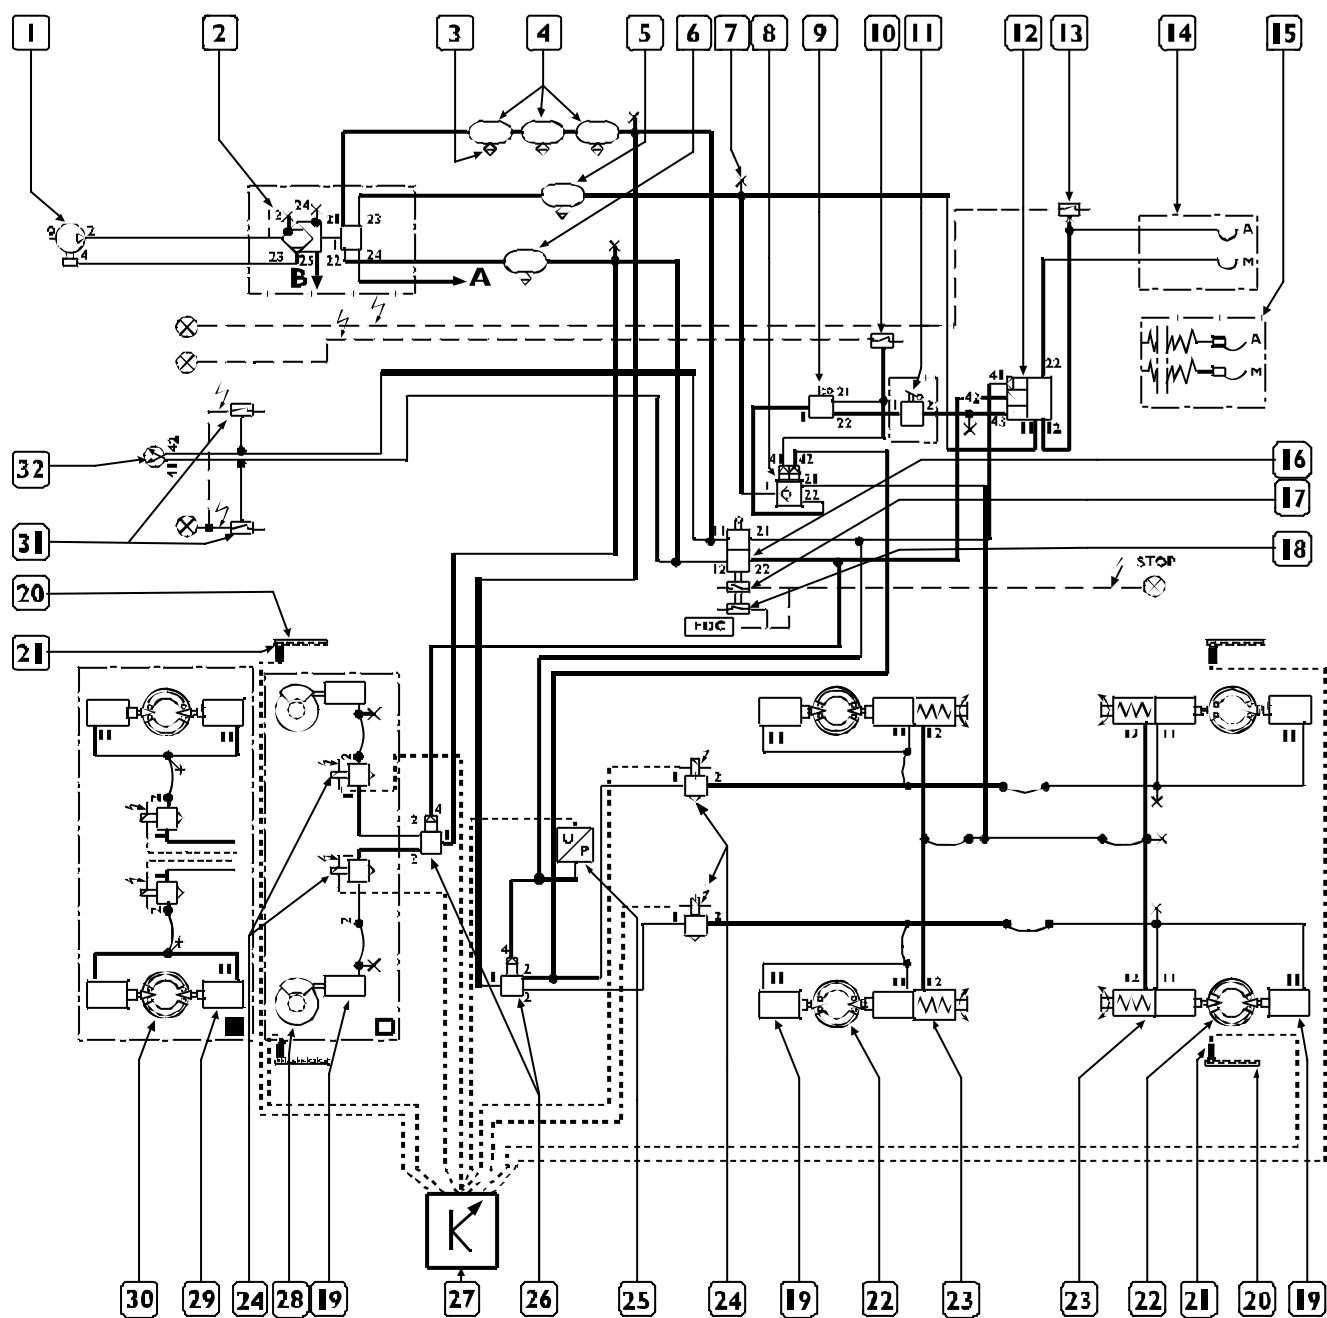

108146

1. E.S. Compressor - 2. A.P.U. - 3. Manual condensate discharge valve - 4. Trailer air tank 20 l - 5. Rear axle air tank 20 l - 6. Front axle air tank 20 l - 7. Pressure test point - 8. Dual control relay valve - 9. Parking brake hand control valve - 10. Switch for parking brake on indicator - 11. Trailer slowing hand control valve (optional) - 12. Triple servo control valve for trailer braking - 13. Low pressure switch - 14. "ISO" half-coupling for truck - 15. "ISO" half-coupling for tractor - 16. Duplex distributor - 17. Brake light switch - 18. Engine brake control switch - 19. Diaphragm brake cylinder - 20. Phonic wheel - 21. Wheel speed sensor - 22. Double drum brake assembly - 23. Combined brake cylinder - 24. ABS solenoid valve - 25. Pressure sensor - 26. Single-control relay valve - 27. Electronic control unit - 28. Disc brake assembly - 29. Diaphragm brake cylinder - 30. Drum brake assembly - 31. Low pressure switch - 32. Pressure gauge - A. Services - B. Services


V 6x4 vehicles

J 6x6 vehicles (optional for 6x4 vehicles)

Aquila Trucks Centres

Working diagram for 8x4x4 - 8x8x4 vehicles isolated with an ABS - EBL device

Figure 14

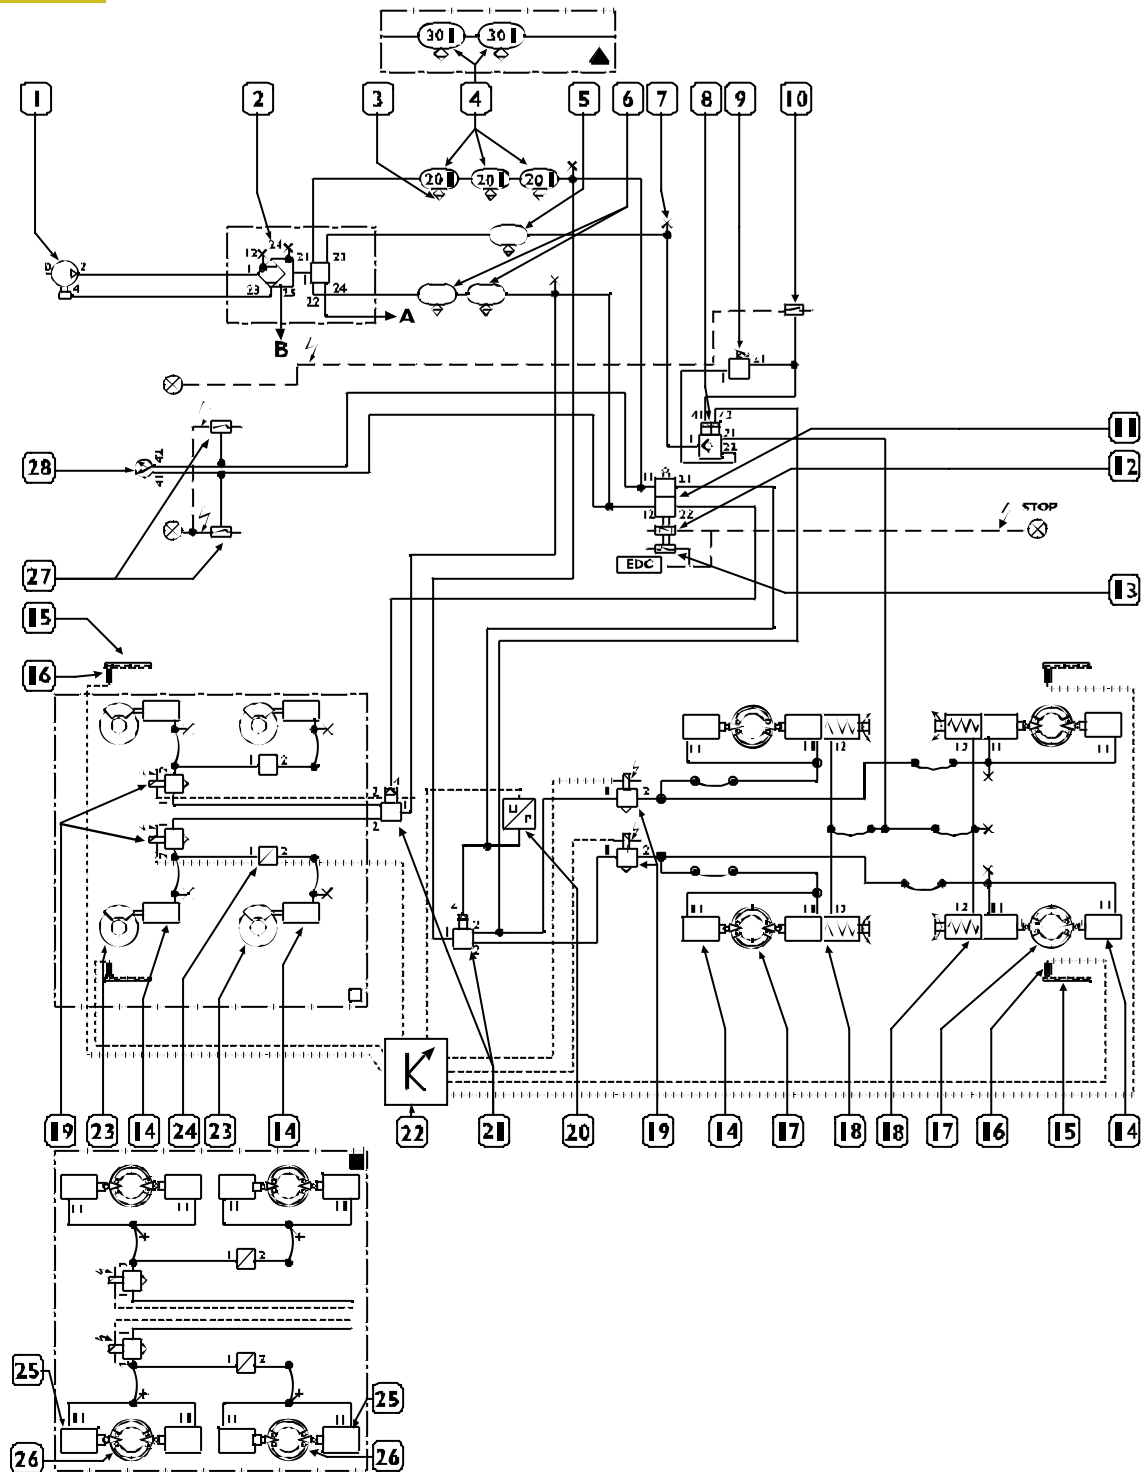

108147

1. E.S. Compressor - 2. A.P.U. - 3. Manual condensate discharge valve - 4. Trailer air tank 20 l - 5. Rear axle air tank 20 l - 6. Front axle air tank 20 l - 7. Pressure test point - 8. Dual control relay valve - 9. Parking brake hand control valve - 10. Switch for parking brake on indicator - 11. Duplex distributor - 12. Brake light switch - 13. Engine brake control switch - 14. Diaphragm brake cylinder - 15. Phonic wheel - 16. Wheel speed sensor - 17. Duo Duplex drum brake assembly - 18. Combined brake cylinder - 19. ABS solenoid valve - 20. Pressure sensor - 21. Single-control relay valve - 22. Electronic control unit - 23. Disc brake assembly - 24. Proportional reducing valve - 25. Membrane brake cylinder - 26. Duo Duplex drum brake assembly - 27. Low pressure switch - 28. Manometer - A. Services

V 8x4x4 vehicles


J 8x8x4 vehicles (optional for vehicles 8x4x4)

Y Optional configuration depending on the type of air filter and the type of engine exhaust system.

Aquila Trucks Centres

Working diagram for 8x4x4 - 8x8x4 vehicles designed for towing with ABS - EBL device

Figure 15

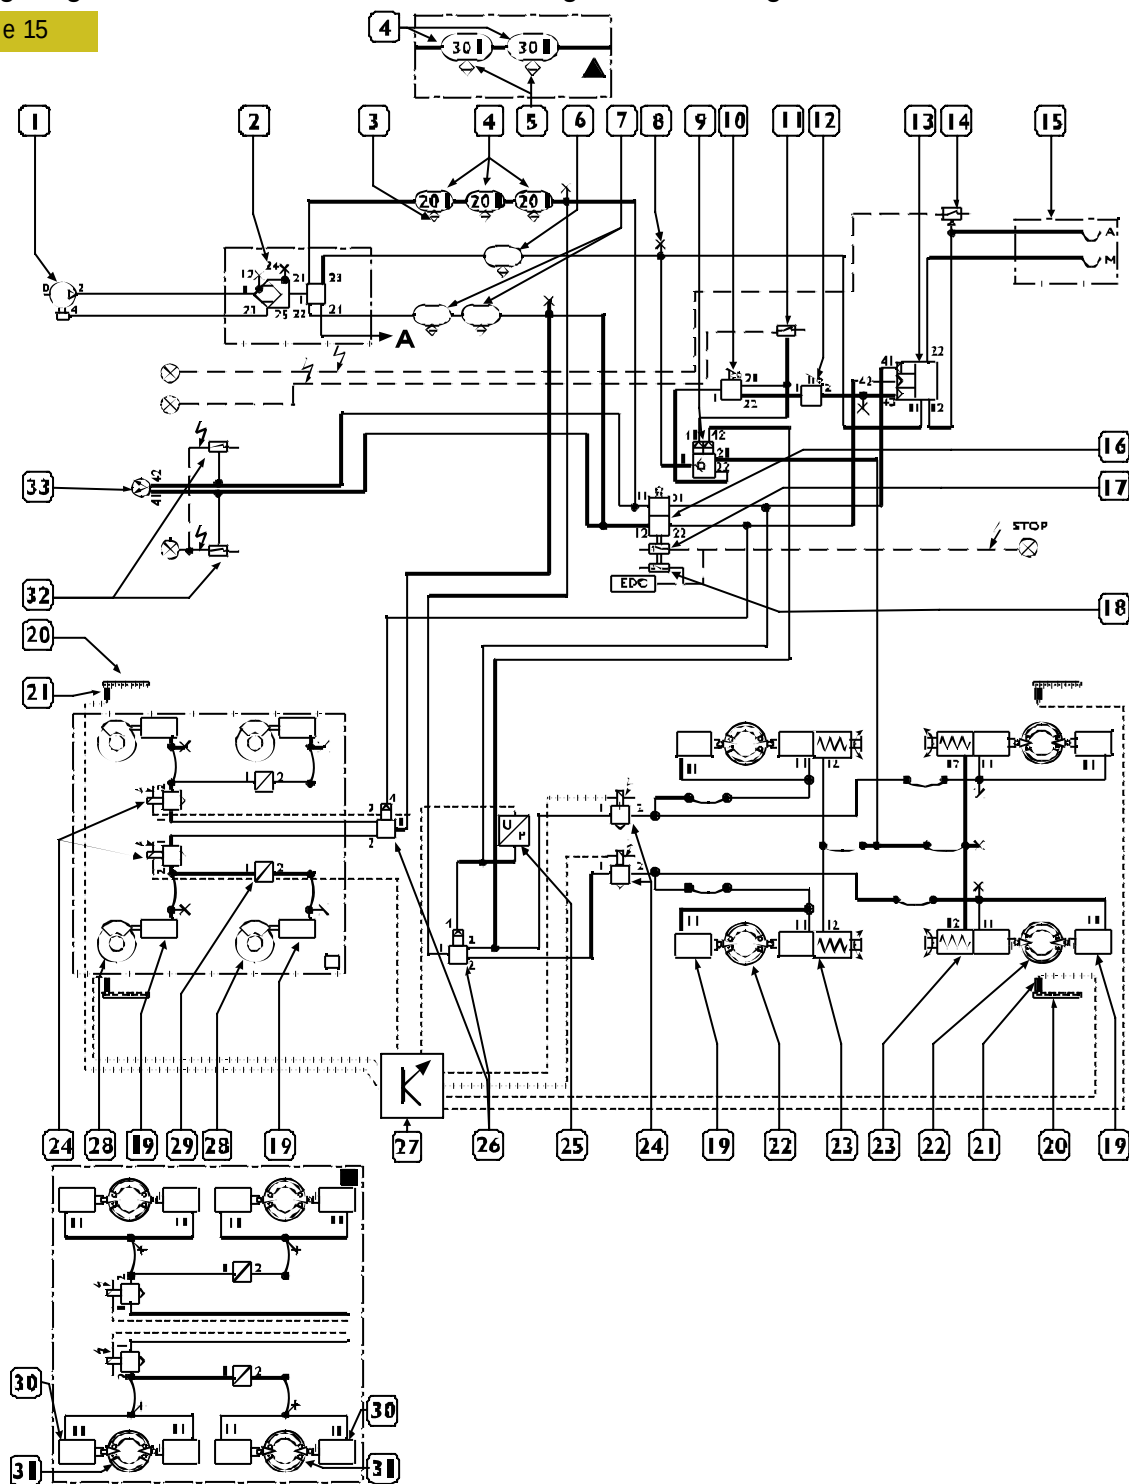

108148

1. E.S. Compressor - 2. A.P.U. - 3. Manual condensate discharge valve - 4. Trailer air tank - 5. 20 liter trailer air tank - 6. Rear axle air tank 30 l - 7. Front axle air tank 20 l - 8. Pressure test point - 9. Dual control relay valve - 10. Parking brake hand control valve - 11. Switch for parking brake on indicator - 12. Trailer slowing hand control valve (optional) - 13. Triple servo control valve for trailer braking - 14. Low pressure switch - 15. "ISO" half-coupling for truck - 16. Duplex distributor - 17. Brake light switch - 18. Engine brake control switch - 19. Diaphragm brake cylinder - 20. Phonic wheel - 21. Wheel speed sensor - 22. Duo Duplex drum brake assembly - 23. Combined brake cylinder - 24. ABS solenoid valve - 25. Pressure sensor - 26. Single-control relay valve - 27. Electronic control unit - 28. Disc brake assembly - 29. Proportional reducing valve - 30. Diaphragm brake cylinder - 31. Duo Duplex drum brake assembly - 32. Low pressure switch - 33. Pressure gauge - A. Services

V 8x4x4 vehicles

J 8x8x4 vehicles (optional for vehicles 8x4x4)


Y Optional configuration depending on the type of air filter and the type of engine exhaust system.

Aquila Trucks Centres

BRAKING SYSTEMS WITH ABS - EBL - ASR DEVICE

Working diagram for 4x2 - 4x4 vehicles designed for towing

Figure 16

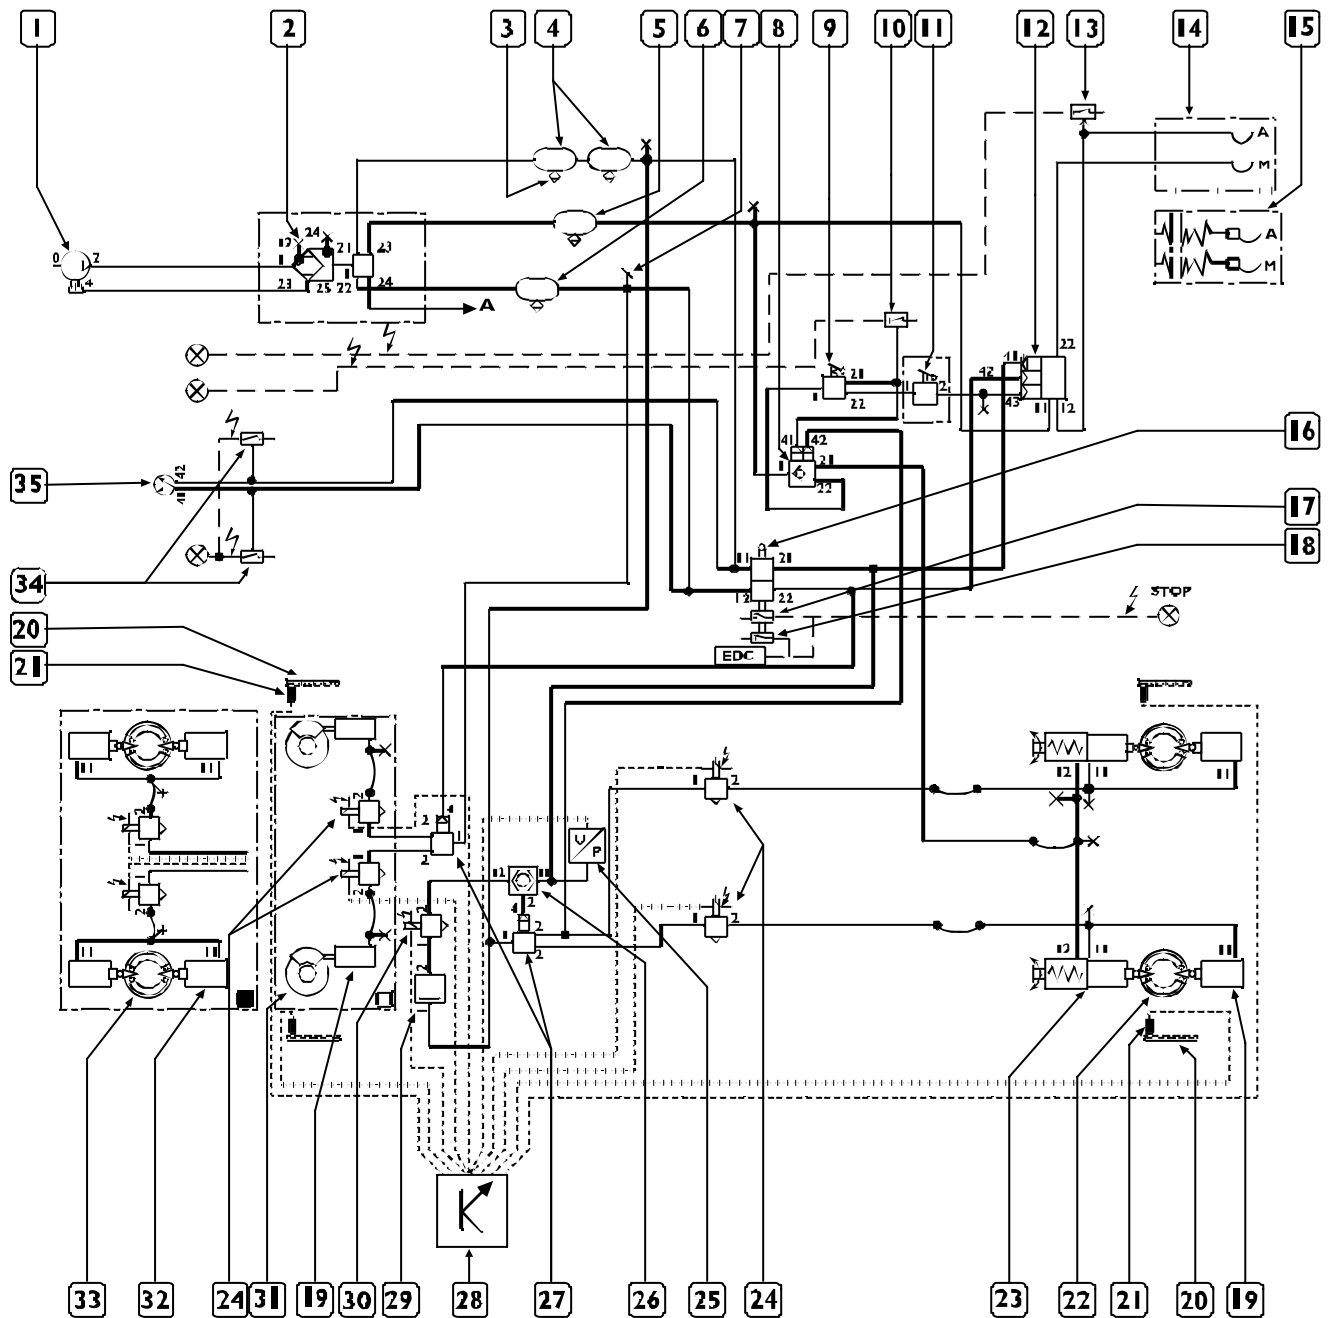

108149

1. E.S. Compressor - 2. A.P.U. - 3. Manual condensate discharge valve - 4. Trailer air tank 20 l - 5. Rear axle air tank 20 l - 6. Front axle air tank 20 l - 7. Pressure test point - 8. Dual control relay valve - 9. Parking brake hand control valve - 10. Switch for parking brake for indicator - 11. Trailer slowing hand control valve (optional) - 12. Triple servo control valve for trailer braking - 13. Low pressure switch - 14. "ISO" half-coupling for truck - 15. "ISO" half-coupling for tractor - 16. Duplex distributor - 17. Brake light switch - 18. Engine brake control switch - 19. Diaphragm brake cylinder - 20. Phonic wheel - 21. Wheel speed sensor - 22. Duo Duplex drum brake assembly - 23. Combined brake cylinder - 24. ABS solenoid valve - 25. Pressure sensor - 26. Twin stop valve - 27. Single-control relay valve - 28. Electronic control unit - 29. Controlled pressure check valve - 30. A.S.R. solenoid valve - 31. Disc brake assembly - 32. Diaphragm brake cylinder - 33. Drum brake assembly - 34. Low pressure switch - 35. Pressure gauge -

A. Services


V 4x2 vehicles

J 4x4 vehicles (optional for 4x2 vehicles)

Aquila Trucks Centres

Main diagram for vehicles 6x4 with ABS - EBL - ASR

Figure 17

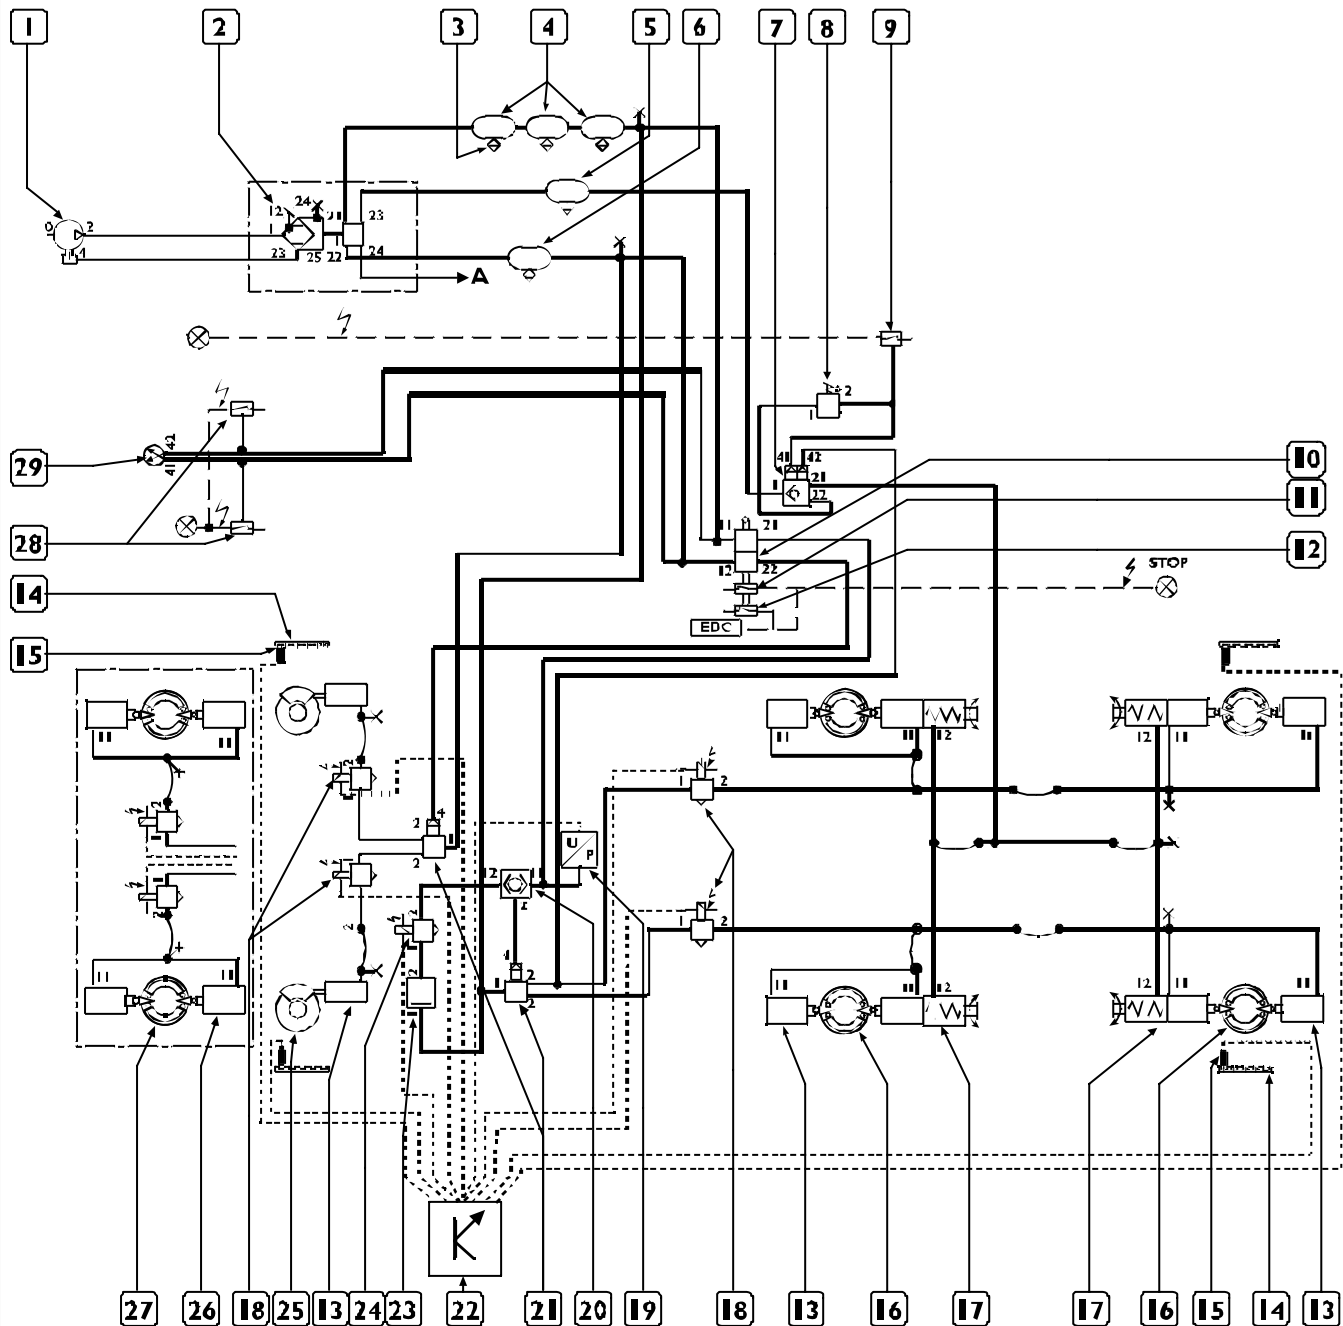

71845


1. E.S. Compressor - 2. A.P.U. - 3. Manual condensate discharge valve - 4. Trailer air tank 20 l - 5. Rear axle air tank 20 l - 6. Front axle air tank 20 l - 7. Dual control relay valve - 8. Parking brake hand control valve - 9. Switch for parking brake on indicator - 10. Duplex distributor - 11. Brake light switch - 12. Engine brake control switch - 13. Diaphragm brake cylinder - 14. Phonic wheel - 15. Wheel speed sensor - 16. Duo Duplex drum brake assembly - 17. Combined brake cylinder - 18. ABS solenoid valve - 19. Pressure sensor - 20. Twin stop valve - 21. Single-control relay valve - 22. Electronic control unit - 23. Controlled pressure check valve - 24. A.S.R. solenoid valve - 25. Disc brake assembly - 26. Diaphragm brake cylinder (*) - 27. Drum brake assembly (*) - 28. Low pressure switch - 29. Pressure gauge - A. Services

(*) optional

Aquila Trucks Centres

Main diagram for vehicles 6x4 - 6X6 used for haulage fitted with ABS - EBL - ASR

Figure 18

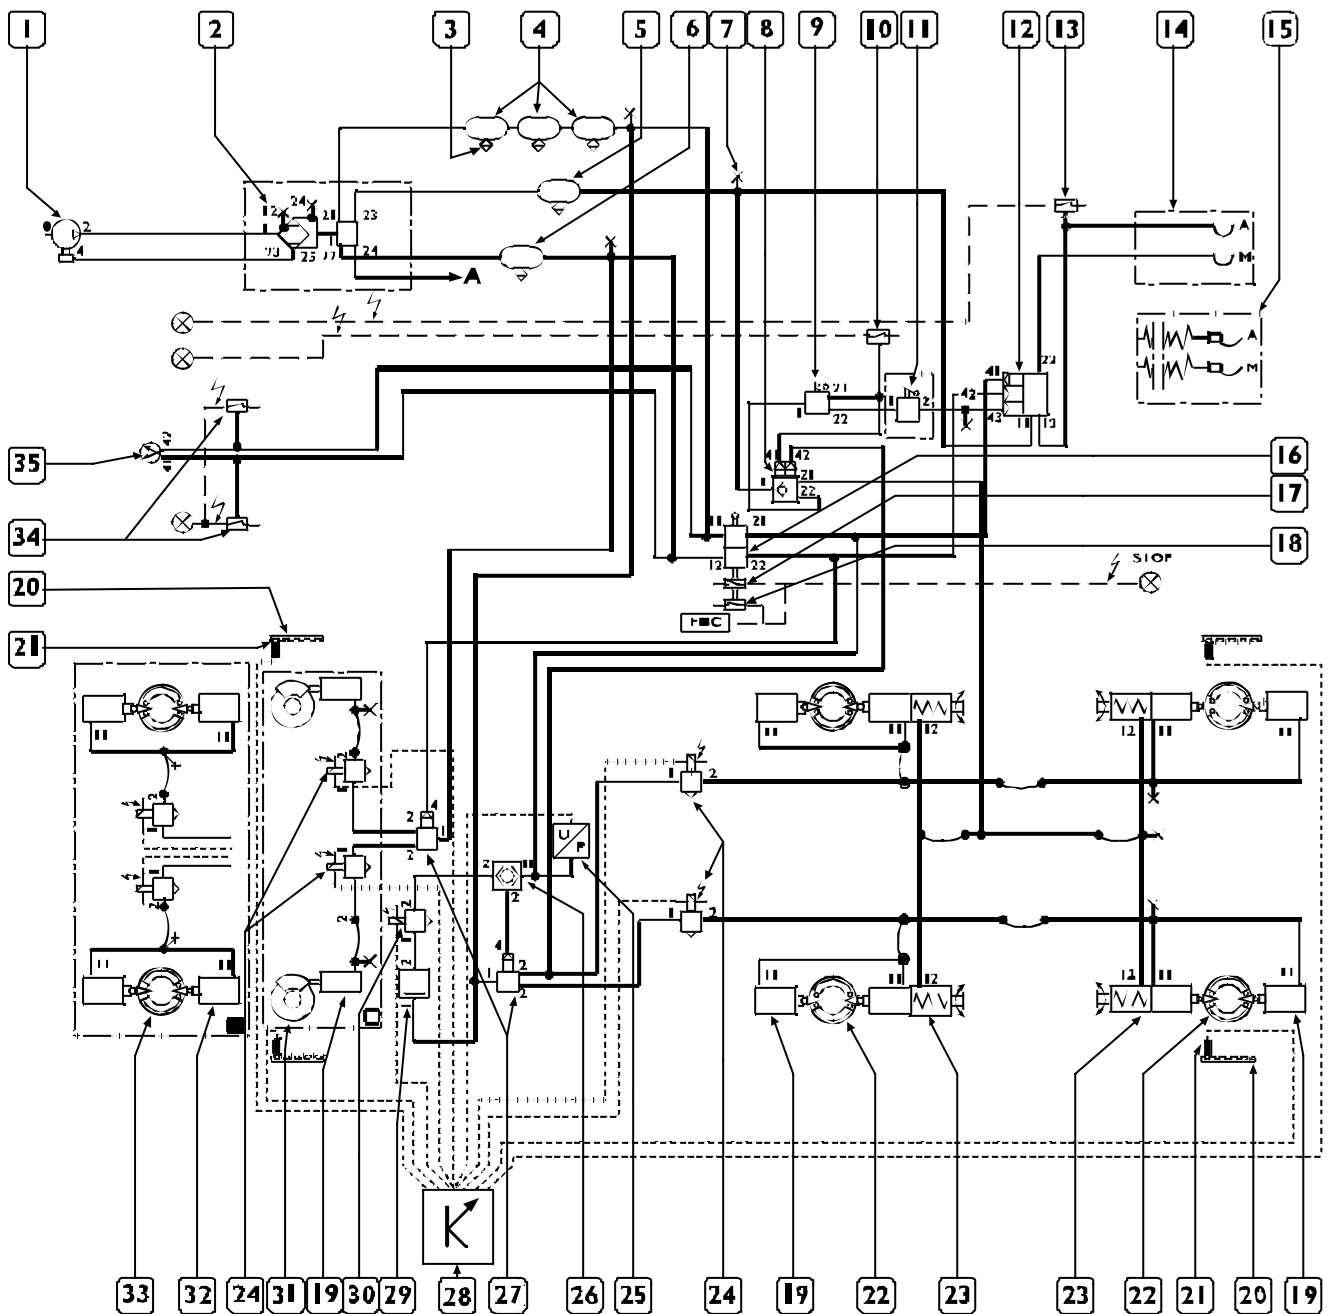

108150

1. E.S. Compressor - 2. A.P.U. - 3. Manual condensate discharge valve - 4. Trailer air tank 20 l - 5. Rear axle air tank 20 l - 6. Front axle air tank 20 l - 7. Pressure test point - 8. Dual control relay valve - 9. Parking brake hand control valve - 10. Switch for parking brake on indicator - 11. Trailer slowing hand control valve (optional) - 12. Triple servo control valve for trailer braking - 13. Low pressure switch - 14. "ISO" half-coupling for truck - 15. "ISO" half-coupling for tractor - 16. Duplex distributor - 17. Brake light switch - 18. Engine brake control switch - 19. Diaphragm brake cylinder - 20. Phonic wheel - 21. Wheel speed sensor - 22. Duo Duplex drum brake assembly - 23. Combined brake cylinder - 24. ABS solenoid valve - 25. Pressure sensor - 26. Twin stop valve - 27. Single-control relay valve - 28. Electronic control unit - 29. Controlled pressure check valve - 30. A.S.R. solenoid valve - 31. Disc brake assembly - 32. Diaphragm brake cylinder - 33. Drum brake assembly - 34. Low pressure switch - 35. Pressure gauge - A. Services


V 6x4 vehicles

J 6x6 vehicles (optional for 6x4 vehicles)

Aquila Trucks Centres

Main diagram for vehicles 8x4x4 - 8x8x4 with ABS - EBL - ASR

Figure 19

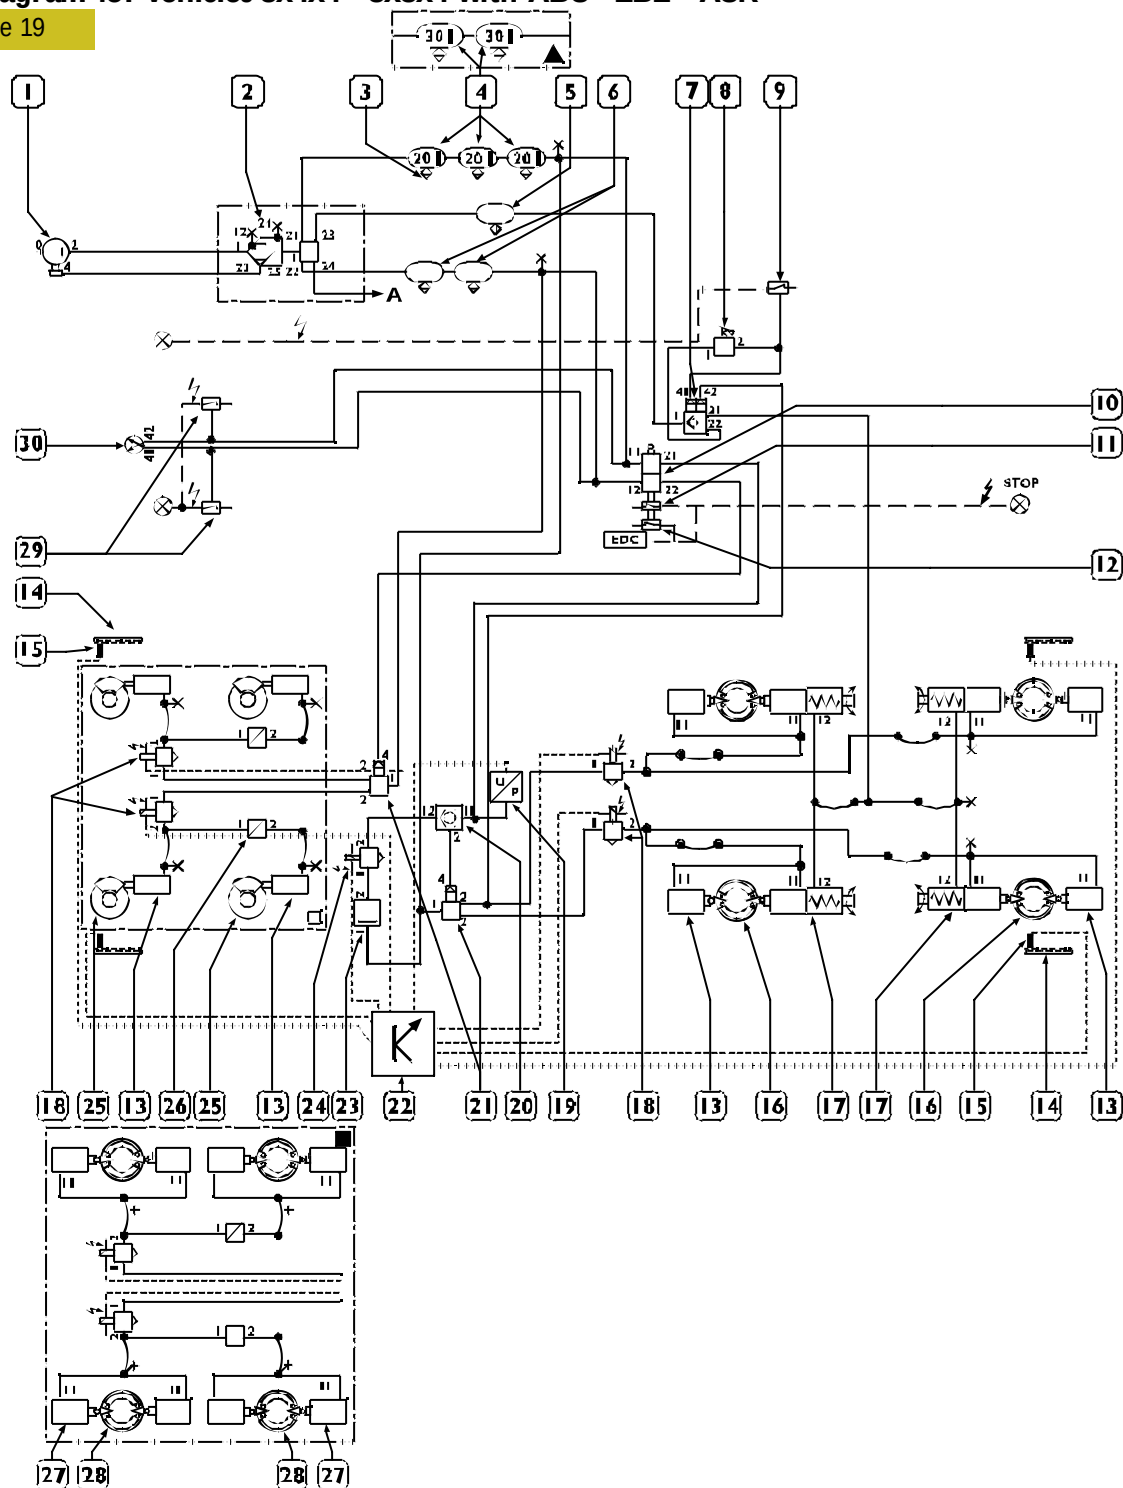

108151

1. E.S. Compressor - 2. A.P.U. - 3. Manual condensate discharge valve - 4. Trailer air tank - 5. Rear axle air tank 20 l - 6. Front axle air tank 20 l - 7. Dual control relay valve - 8. Parking brake hand control valve - 9. Switch for parking brake on indicator - 10. Duplex distributor - 11. Brake light switch - 12. Engine brake control switch - 13. Diaphragm brake cylinder - 14. Phonic wheel - 15. Wheel speed sensor - 16. Duo Duplex drum brake assembly - 17. Combined brake cylinder - 18. ABS solenoid valve - 19. Pressure sensor - 20. Twin stop valve - 21. Single-control relay valve - 22. Electronic control unit - 23. Controlled pressure check valve - 24. A.S.R. solenoid valve - 25. Disc brake assembly - 26. Proportional reducing valve - 27. Diaphragm brake cylinder - 28. Duo Duplex drum brake assembly - 29. Low pressure switch - 30. Pressure gauge - A. Services

V 8x4x4 vehicles


J 8x8x4 vehicles (optional for vehicles 8x4x4)

Y Optional configuration depending on the type of air filter and the type of engine exhaust system.

Aquila Trucks Centres

Main diagram for vehicles 8x4x4 - 8x8x4 used for haulage fitted with ABS - EBL - ASR

Figure 20

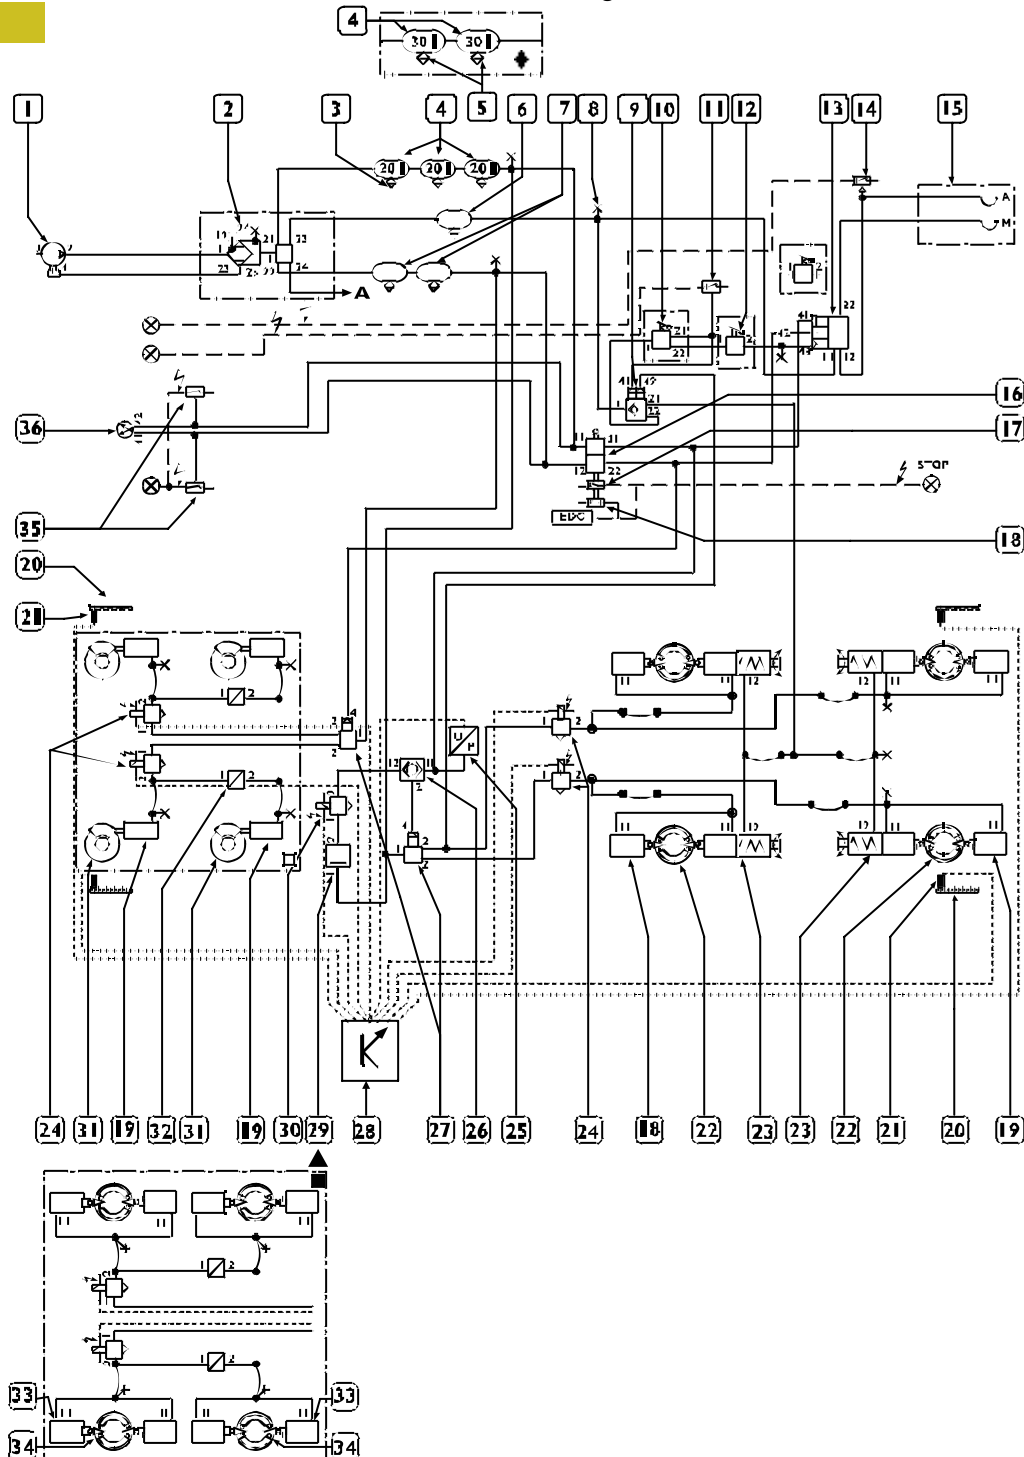

1. E.S. Compressor - 2. A.P.U. - 3. Manual condensate discharge valve - 4. Trailer air tank - 5. Manual condensate discharge valve - 6. Rear axle air tank 20 l - 7. Front axle air tank 20 l - 8. Pressure test point - 9. Dual control relay valve - 10. Parking brake hand control valve - 11. Switch for parking brake on indicator - 12. Trailer slowing hand control valve (optional) - 13. Triple servo control valve for trailer braking - 14. Low pressure switch - 15. "ISO" half-coupling for truck - 16. Duplex distributor - 17. Brake light switch - 18. Engine brake control switch - 19. Diaphragm brake cylinder - 20. Phonic wheel - 21. Wheel speed sensor - 22. Duo Duplex drum brake assembly - 23. Combined brake cylinder - 24. ABS solenoid valve - 25. Pressure sensor - 26. Twin stop valve - 27. Single-control relay valve - 28. Electronic control unit - 29. Controlled pressure check valve - 30. A.S.R. solenoid valve - 31. Disc brake assembly - 32. Proportional reducing valve - 33. Diaphragm brake cylinder - 34. Duo Duplex drum brake assembly - 35. Low pressure switch - 36. Pressure gauge - A. Services

V 8x4x4 vehicles


J 8x8x4 vehicles (optional for vehicles 8x4x4)

♦ Optional configuration depending on the type of air filter and the type of engine exhaust system.

Aquila Trucks Centres

Braking system main components layout on the vehicle

Figure 21

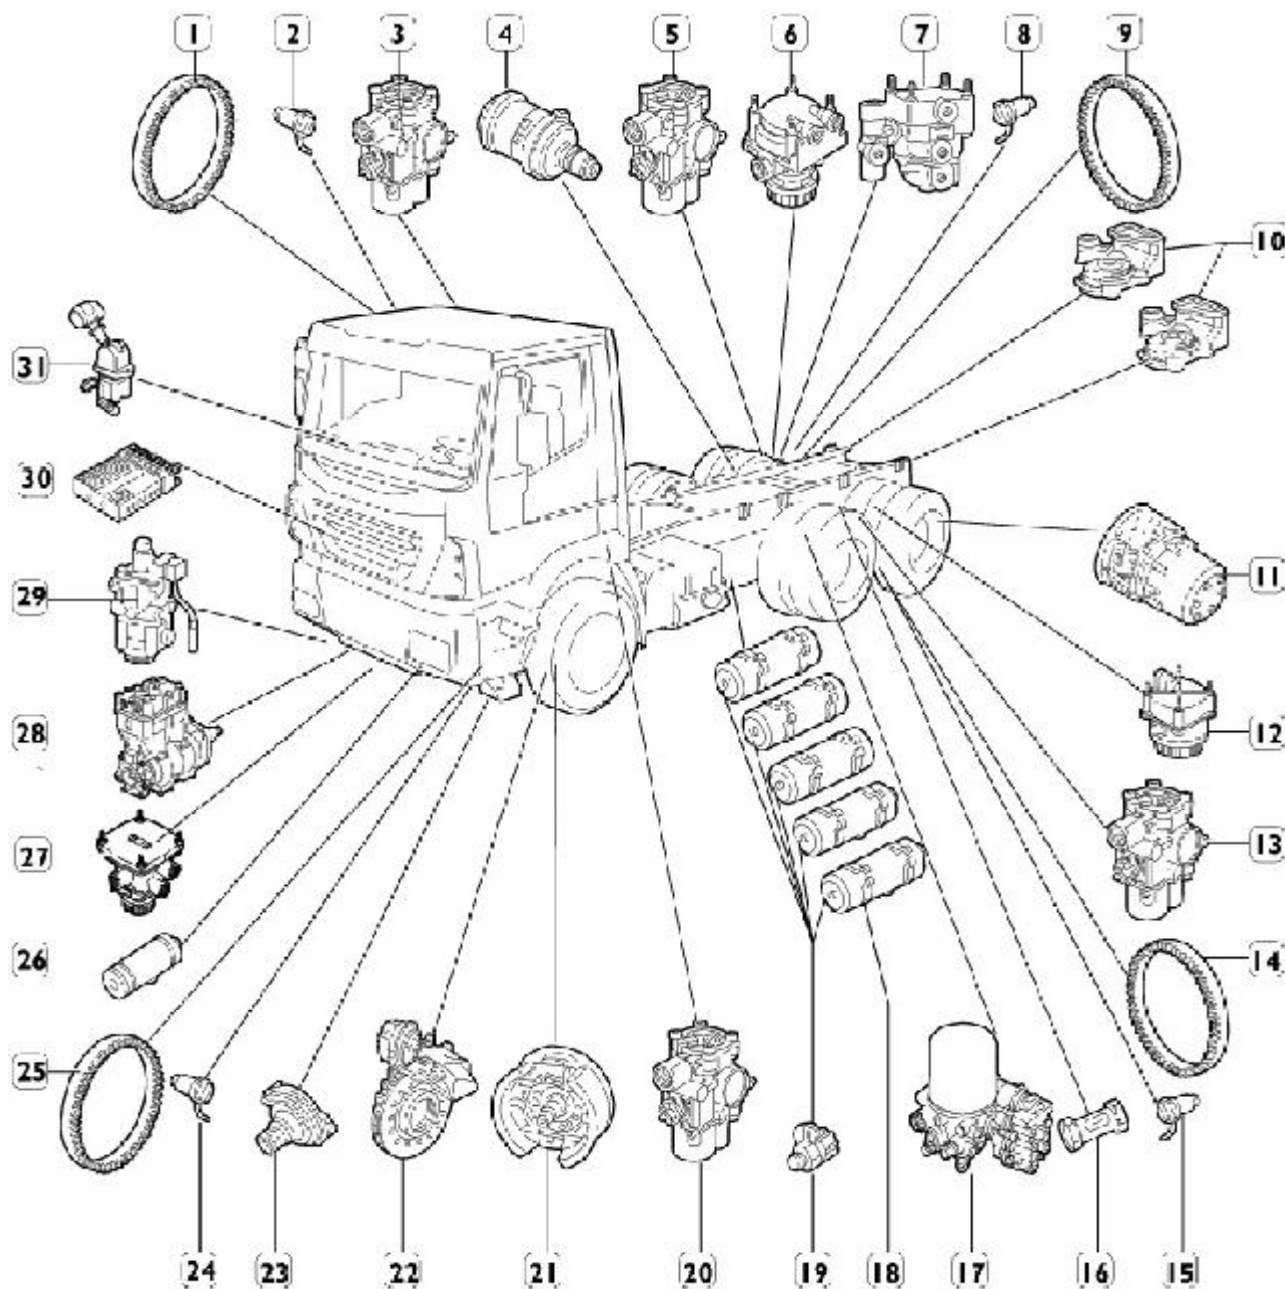

117183

1. "Phonic" wheel - 2. Wheel turning sensor - 3. ABS electro-valve - 4. Combined brake cylinder - 5. ABS electro-valve - 6. Dual control relay valve - 7. Triple control servo-distributor - 8. Wheel turning sensor - 9. "Phonic" wheel - 10. Hose and coupling - 11. Duo Duplex bridge complex with drum control brake - 12. Relay valve - 13. ABS electro-valve - 14. "Phonic" wheel - 15. Wheel turning sensor - 16. Relief valve - 17. A.P.U. - 18. Air reservoir - 19. Manual condensed steam discharge valve - 20. ABS electro-valve - 21. Drum control brake Duo Duplex axle complex - 22. Disk brake axle complex - 23. Membrane brake cylinder axle (disk brakes) - 24. Wheel turning sensor - 25. "Phonic" wheel - 26. Air reservoir - 27. Relay valve with regulation of the predominance - 28. E.S Compressor - 29. Duplex Distributor - 30. Electronic Power Unit - 31. Hand distributor parking brake control

Aquila Trucks Centres

DESCRIPTION

Service braking

Pneumatically controlled pedal type, operating on all the wheels and the trailer.

It features two separate sections, one to activate the front axle braking components, the other for the rear axle components. A third section, assisting the two distributor sections, brakes the trailer.

The duplex distributor controls the two separate sections and the triple control servo distributor that in its turn controls the third section.

Should a failure occur in one section, the pneumatic system sectioning enables the others to operate efficiently.

Emergency braking

This is combined with the parking braking. The double circuit system enables the braking of one axle even when there is a failure in the braking of the other axle, by means of the service brake pedal and the parking hand lever.

Retarding braking

The I.T.B. (Iveco Turbo Brake) engine brake used on Cursor engines is composed of a hydraulically controlled mechanism that cancels the exhaust valve clearance. By applying this mechanism, at the end of the compression phase, a few degrees before the T.D.C., the exhaust valves open slightly with a consequent reduction in the pressure formed in the cylinder. This takes advantage of the braking torque of the compression phase but without having the following return thrust on the piston.

Parking braking

This is mechanical and actuated through the hand distributor set at the end of its stroke. It operates on the rear wheels of the tractor discharging the air from the spring section of the pneumatic cylinder and the servo distributor control section, thus locking the trailer or semi-trailer wheels.

From the driver's seat it is possible to check whether the trailer is able, with the trailer brakes released, to ensure the efficiency of the combined tractor-trailer parking brake.

BRAKES

Front disc brakes SN7 type (for vehicles with partial traction)

The discs are keyed onto the wheel hubs and equipped with ventilation fins that permit lowering the high temperature generated under the braking action.

A small electrical cable is embedded in the brake lining and is connected to the MET power unit which commands a warning light on the dashboard signal the wearing of the said brake linings.

The phonic wheels of the ABS device are keyed onto the wheel hubs.

Drum brakes

S MERITOR DUO DUPLEX type 410 x 180 and 410 x 200

Each braking assembly is composed of a body housing the adjustment pins, control pins and wedge units.

The wedge units are operated by the stem of the cylinders that in their turn are operated by compressed air.

The wedge unit rollers, as they travel, cause the control pins to expand that, overcoming the resistance of the shoe return springs, bring the shoes up to the drum to actuate braking. The adjustment and control pins are made integral with the brake body by two pins that fit into a side slot. When the braking action ends, there is no air pressure in the diaphragm section of the combined brake cylinders and so the action of the wedge unit return and shoe return springs take the wedge units back into the starting position.

A sensor is screwed onto one of the two shoes forming the brake. This sensor indicates the state of wear of the brake linings. When the sensor wire comes into contact with the drum, the brake lining wear indicator light blinks in the cab.

When the sensor wire gets broken, due to further wear of the brake linings, the wear indicator light stays on, thereby indicating the linings have reached their maximum wear limit.

Aquila Trucks Centres

FAULT DIAGNOSIS

Fault diagnosis comprises two sections:

- The first one, organized by error codes (DTC-FMI), concerns faults that may be identified by the ABS control unit directly. These faults are mainly of an electric – electronic – pneumatic nature.
- The second one, organized by symptoms, describes the possible faults the electronic control unit cannot identify directly. These faults are mainly of a mechanical – pneumatic nature.

SECTION I

ABS system troubleshooting can be performed with the Cluster or with the diagnosis instruments Modus, IT 2000 and E.A.S.Y..

Diagnosis with the cluster makes it possible to estimate the situation of faults in the system in advance, while the diagnosis instruments are essential to perform thorough diagnosis and operate on the single faults correctly.

Each single instrument displays the diagnosis and repair help.

Diagnosis Instruments

MODUS (Maintenance and Diagnostic System)

A computerized fault-diagnosis station dedicated to diagnosing the brake systems, air suspensions, engines and systems controlled electronically.

The station is equipped with auxiliary functions, such as: programming electronic control units, consulting the spare parts catalogue and service time schedules.

The vehicle has a 30-pin diagnosis socket to interface with the instrument.

IT 2000 (IVECO Electronic Tester)

This makes it possible to take immediate action on the vehicle, identifying it with the chassis number.

It saves the results of diagnostics actions performed.

It can be used as a portable Personal Computer, too, being fitted for remote diagnosis.

By using MODUS as the mother station it is possible to update and configure the IT 2000.

IT 2000 interfaces with the vehicle via a 30-pin diagnosis socket.

E.A.S.Y.


E.A.S.Y. system allows to simply make the diagnosis and programming of the various electronic central units aboard the vehicle.

E.A.S.Y. system is made up of ECI module communicating with the electronic central units and of a Panasonic PC.

ECI module, exploiting the Panasonic PC, also allows easy on the road interventions: in particular, thanks to Panasonic PC wireless technologies (e.g. GPRS), diagnostic interventions can be assisted by a remote expert centre.

Aquila Trucks Centres

Figure 22

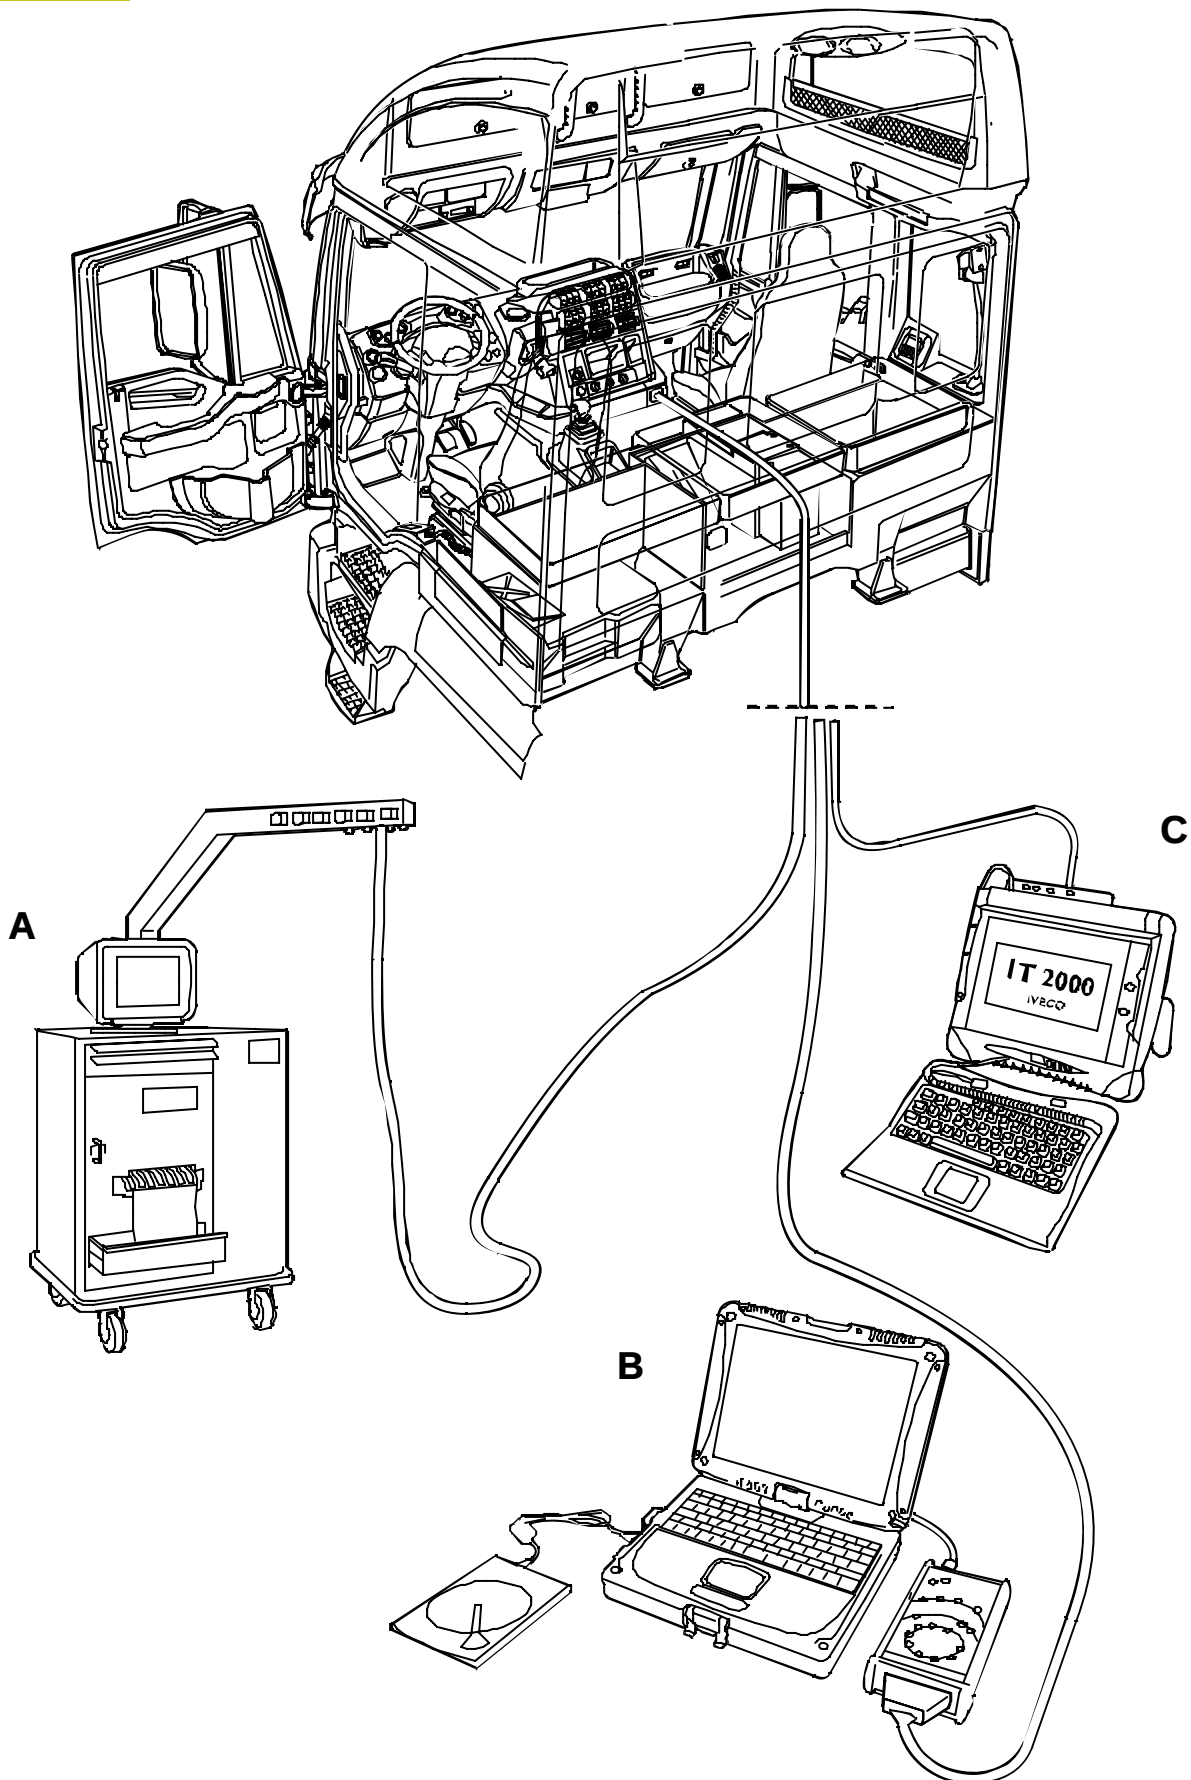

A. Modus - B. EASY - C. IT 2000


98889

Aquila Trucks Centres

Diagnosis on Cluster

Access to diagnostic screen is possible through "page" or " y " " b " keys.

Figure 23

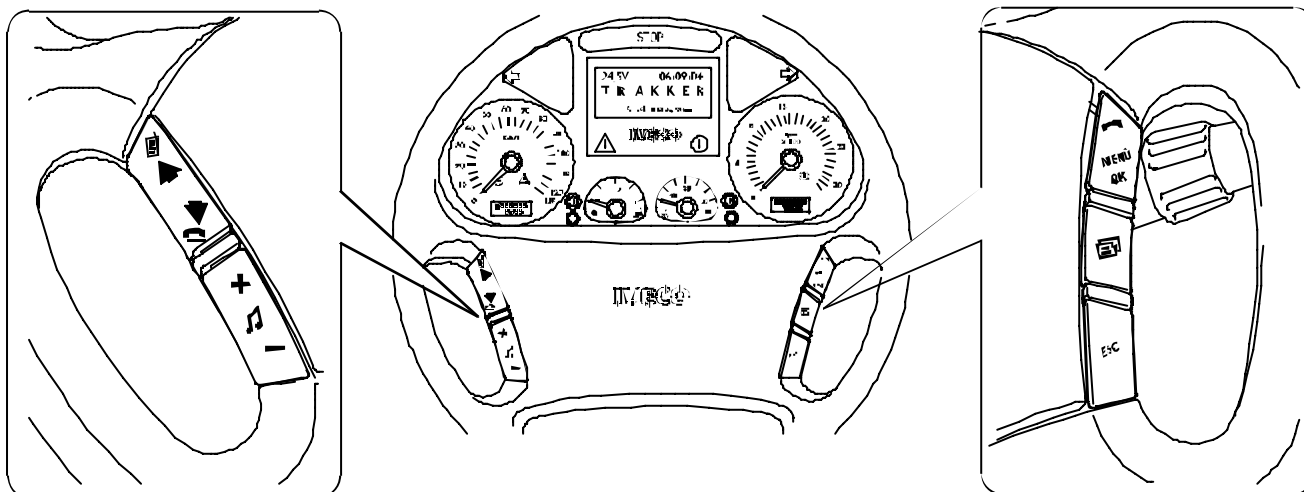

98888

 Diagnostics			
EDC	20011	30	127
BC	22133	01	3
ABS	20308	00	1

98884

Diagnosis information on the cluster is split into 4 columns:

- First column = central unit.
- Second column = central unit address plus fault order number.
- Third column = failure type.
- Fourth column = failure frequency.

The screen shows three error messages at most, but can store up to eight error messages. For displaying any further messages, just operate " y " and " b " keys.

DTC - FMI error codes

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
001	01	SENSORS - FRONT LEFT SENSOR	EXCESSIVE AIR GAP			Check phonic wheel and replace it if damaged. Check and restore clearance between sensor and phonic wheel. Check: Check the integrity and cleanliness of the phonic wheel. Restore clearance between sensor and phonic wheel. Comparable values: 0,7 ± 0,05 mm				
001	02	SENSORS - FRONT LEFT SENSOR	INCORRECT TYRE			Check that: - the phonic wheels are not faulty; - teeth are not damaged or missing; - the tyres have equal measure (measures released by constructor), tyres pressure . Verify the axle ratio .				Check correct tyre circumference.
001	03	SENSORS - FRONT LEFT SENSOR	SHORT CIRCUIT TO POSITIVE		Possible short circuit.	Check sensor wiring. Check sensor efficiency, replace it if damaged.	1- Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 15 Measure point 2: Connector X2 Pin: 12 2- Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 15 Measure point 2: Connector X1 Pin: 4 3- Measure type: Voltage (V) Measure point 1: Connector X2 Pin: 15 Measure point 2: Connector X1 Pin: 4	1- Connector Not connected; Key +15 OFF; 2- Connector Not connected; Key +15 OFF; 3- Connector Connected; Key +15 ON;	1- Min. value: 0.9 KOhm; Max. value: 2 KOhm; 2- Min. value: 500 KOhm; 3- Max. value: 1 V;	Carry out the indicated measurements

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
001	04	SENSORS - FRONT LEFT SENSOR	SHORT CIRCUIT TO GROUND		Possible short circuit.	Check sensor wiring. Check sensor efficiency, replace it if damaged.	1- Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 15 Measure point 2: Connector X2 Pin: 12 2- Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 15 Measure point 2: Connector X1 Pin: 4 3- Measure type: Voltage (V) Measure point 1: Connector X2 Pin: 15 Measure point 2: Connector X1 Pin: 4	1- Connector Not connected; Key +15 OFF; 2- Connector Not connected; Key +15 OFF; 3- Connector Connected; Key +15 ON;	1- Min. value: 0.9 KOhm; Max. value: 2 KOhm; 2- Min. value: 500 KOhm; 3- Max. value: 1 V;	Carry out the indicated measurements
001	05	SENSORS - FRONT LEFT SENSOR	OPEN CIRCUIT		Possible open circuit or interrupted cable between.	Check sensor wiring. Check sensor efficiency, replace it if damaged.	1- Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 15 Measure point 2: Connector X2 Pin: 12 2- Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 15 Measure point 2: Connector X1 Pin: 4 3- Measure type: Voltage (V) Measure point 1: Connector X2 Pin: 15 Measure point 2: Connector X1 Pin: 4	1- Connector Not connected; Key +15 OFF; 2- Connector Not connected; Key +15 OFF; 3- Connector Connected; Key +15 ON;	1- Min. value: 0.9 KOhm; Max. value: 2 KOhm; 2- Min. value: 500 KOhm; 3- Max. value: 1 V;	Carry out the indicated measurements

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
001	06	SENSORS - FRONT LEFT SENSOR	SHORT CIRCUIT		Possible short circuit.	Check sensor wiring. Check sensor efficiency, replace it if damaged.	1- Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 15 Measure point 2: Connector X2 Pin: 12 2- Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 15 Measure point 2: Connector X1 Pin: 4 3- Measure type: Voltage (V) Measure point 1: Connector X2 Pin: 15 Measure point 2: Connector X1 Pin: 4	1- Connector Not connected; Key +15 OFF; 2- Connector Not connected; Key +15 OFF; 3- Connector Connected; Key +15 ON;	1- Min. value: 0.9 KOhm; Max. value: 2 KOhm; 2- Min. value: 500 KOhm; 3- Max. value: 1 V;	Carry out the indicated measurements
001	07	SENSORS - FRONT LEFT SENSOR	PHONIC WHEEL			Check phonic wheel and replace it if damaged. Check and restore clearance between sensor and phonic wheel. Check: Check the integrity and cleanliness of the phonic wheel. Restore clearance between sensor and phonic wheel. Comparable values: 0,7 ± 0,05 mm				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
001	08	SENSORS - FRONT LEFT SENSOR	SLIPPING		Mechanical problems in the ASR -System (pneumatic pipes, the ASR electrovalve, ABS-electrovalves, ASR disabling switch).	Check that: - the phonic wheels are not faulty; - teeth are not damaged or missing.				Check and restore clearance between sensor and phonic wheel. Check: Check the integrity and cleanliness of the phonic wheel. Restore clearance between sensor and phonic wheel. Comparable values: $0,7 \pm 0,05$ mm
001	09	SENSORS - FRONT LEFT SENSOR	INVERTED WIRING			Using the MEASURABLE PARAMETERS read the velocity of the wheel in question.				
001	0A	SENSORS - FRONT LEFT SENSOR	IRREGULAR SIGNAL			Position of the sensor incorrect; high air gap; false contacts in the connector.				
001	0B	SENSORS - FRONT LEFT SENSOR	SIGNAL NOT PLAUSIBLE			Position of the sensor incorrect; high air gap; false contacts in the connector.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
001	0C	SENSORS - FRONT LEFT SENSOR	WRONG SIGNAL			Position of the sensor incorrect; high air gap; false contacts in the connector.				If necessary, replace the ECU.
002	01	SENSORS - FRONT RIGHT SENSOR	EXCESSIVE AIR GAP			Check phonic wheel and replace it if damaged. Check and restore clearance between sensor and phonic wheel. Check: Check the integrity and cleanliness of the phonic wheel. Restore clearance between sensor and phonic wheel. Comparable values: 0,7 ± 0,05 mm				
002	02	SENSORS - FRONT RIGHT SENSOR	INCORRECT TYRE			Check that: - the phonic wheels are not faulty; - teeth are not damaged or missing; - the tyres have equal measure (measures released by constructor), tyres pressure . Verify the axle ratio.				Check correct tyre circumference.

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
002	03	SENSORS - FRONT RIGHT SENSOR	SHORT CIRCUIT TO POSITIVE		Possible short circuit.	Check sensor wiring. Check sensor efficiency, replace it if damaged.	1- Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 13 Measure point 2: Connector X2 Pin: 10 2- Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 13 Measure point 2: Connector X1 Pin: 8 3- Measure type: Voltage (V) Measure point 1: Connector X2 Pin: 13 Measure point 2: Connector X1 Pin: 8	1- Connector Not connected; Key +15 OFF; 2- Connector Not connected; Key +15 OFF; 3- Connector Connected; Key +15 ON;	1- Min. value: 0.9 KOhm; Max. value: 2 KOhm; 2- Min. value: 500 KOhm; 3- Max. value: 1 V;	Carry out the indicated measurements
002	04	SENSORS - FRONT RIGHT SENSOR	SHORT CIRCUIT TO GROUND		Possible short circuit.	Check sensor wiring. Check sensor efficiency, replace it if damaged.	1- Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 13 Measure point 2: Connector X2 Pin: 10 2- Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 10 Measure point 2: Connector X1 Pin: 4 3- Measure type: Voltage (V) Measure point 1: Connector X2 Pin: 10 Measure point 2: Connector X1 Pin: 4	1- Connector Not connected; Key +15 OFF; 2- Connector Not connected; Key +15 OFF; 3- Connector Connected; Key +15 ON;	1- Min. value: 0.9 KOhm; Max. value: 2 KOhm; 2- Min. value: 500 KOhm; 3- Max. value: 1 V;	Carry out the indicated measurements

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
002	05	SENSORS - FRONT RIGHT SENSOR	OPEN CIRCUIT		Possible open circuit or interrupted cable between.	Check sensor wiring. Check sensor efficiency, replace it if damaged.	1- Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 13 Measure point 2: Connector X2 Pin: 10 2- Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 10 Measure point 2: Connector X1 Pin: 4 3- Measure type: Voltage (V) Measure point 1: Connector X2 Pin: 10 Measure point 2: Connector X1 Pin: 4	1- Connector Not connected; Key +15 OFF; 2- Connector Not connected; Key +15 OFF; 3- Connector Connected; Key +15 ON;	1- Min. value: 0.9 KOhm; Max. value: 2 KOhm; 2- Min. value: 500 KOhm; 3- Max. value: 1 V;	Carry out the indicated measurements
002	06	SENSORS - FRONT RIGHT SENSOR	SHORT CIRCUIT		Possible short circuit.	Check sensor wiring. Check sensor efficiency, replace it if damaged.	1- Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 13 Measure point 2: Connector X2 Pin: 10 2- Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 10 Measure point 2: Connector X1 Pin: 4 3- Measure type: Voltage (V) Measure point 1: Connector X2 Pin: 10 Measure point 2: Connector X1 Pin: 4	1- Connector Not connected; Key +15 OFF; 2- Connector Not connected; Key +15 OFF; 3- Connector Connected; Key +15 ON;	1- Min. value: 0.9 KOhm; Max. value: 2 KOhm; 2- Min. value: 500 KOhm; 3- Max. value: 1 V;	Carry out the indicated measurements

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
002	07	SENSORS - FRONT RIGHT SENSOR	PHONIC WHEEL			Check phonic wheel and replace it if damaged. Check and restore clearance between sensor and phonic wheel. Check: Check the integrity and cleanliness of the phonic wheel. Restore clearance between sensor and phonic wheel. Comparable values: $0,7 \pm 0,05$ mm				
002	08	SENSORS - FRONT RIGHT SENSOR	SLIPPING		Mechanical problems in the ASR -System (pneumatic pipes, the ASR electrovalve, ABS-electrovalves, ASR disabling switch).	Check that: - the phonic wheels are not faulty; - teeth are not damaged or missing.				Check and restore clearance between sensor and phonic wheel. Check: Check the integrity and cleanliness of the phonic wheel. Restore clearance between sensor and phonic wheel. Comparable values: $0,7 \pm 0,05$ mm
002	09	SENSORS - FRONT RIGHT SENSOR	INVERTED WIRING			Using the MEASURABLE PARAMETERS read the velocity of the wheel in question.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
002	0A	SENSORS - FRONT RIGHT SENSOR	IRREGULAR SIGNAL			Position of the sensor incorrect; high air gap; false contacts in the connector.				
002	0B	SENSORS - FRONT RIGHT SENSOR	SIGNAL NOT PLAUSIBLE			Position of the sensor incorrect; high air gap; false contacts in the connector.				
002	0C	SENSORS - FRONT RIGHT SENSOR	WRONG SIGNAL			Position of the sensor incorrect; high air gap; false contacts in the connector.				If necessary, replace the ECU.
003	01	SENSORS - REAR LEFT SENSOR	EXCESSIVE AIR GAP			Check phonic wheel and replace it if damaged. Check and restore clearance between sensor and phonic wheel. Check: Check the integrity and cleanliness of the phonic wheel. Restore clearance between sensor and phonic wheel. Comparable values: 0,7 ± 0,05 mm				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
003	02	SENSORS - REAR LEFT SENSOR	INCORRECT TYRE			Check that: - the phonic wheels are not faulty; - teeth are not damaged or missing; - the tyres have equal measure (measures released by constructor), tyres pressure . Verify the axle ratio.				Check correct tyre circumference.
003	03	SENSORS - REAR LEFT SENSOR	SHORT CIRCUIT TO POSITIVE		Possible short circuit.	Check sensor wiring. Check sensor efficiency, replace it if damaged.	1- Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 14 Measure point 2: Connector X2 Pin: 11 2- Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 11 Measure point 2: Connector X1 Pin: 4 3- Measure type: Voltage (V) Measure point 1: Connector X2 Pin: 11 Measure point 2: Connector X1 Pin: 4	1- Connector Not connected; Key +15 OFF; 2- Connector Not connected; Key +15 OFF; 3- Connector Connected; Key +15 ON;	1- Min. value: 0.9 KOhm; Max. value: 2 KOhm; 2- Min. value: 500 KOhm; 3- Max. value: 1 V;	Carry out the indicated measurements

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
003	04	SENSORS - REAR LEFT SENSOR	SHORT CIRCUIT TO GROUND		Possible short circuit.	Check sensor wiring. Check sensor efficiency, replace it if damaged.	1- Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 14 Measure point 2: Connector X2 Pin: 11 2- Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 11 Measure point 2: Connector X1 Pin: 4 3- Measure type: Voltage (V) Measure point 1: Connector X2 Pin: 11 Measure point 2: Connector X1 Pin: 4	1- Connector Not connected; Key +15 OFF; 2- Connector Not connected; Key +15 OFF; 3- Connector Connected; Key +15 ON;	1- Min. value: 0.9 KOhm; Max. value: 2 KOhm; 2- Min. value: 500 KOhm; 3- Max. value: 1 V;	Carry out the indicated measurements
003	05	SENSORS - REAR LEFT SENSOR	OPEN CIRCUIT		Possible open circuit or interrupted cable between.	Check sensor wiring. Check sensor efficiency, replace it if damaged.	1- Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 14 Measure point 2: Connector X2 Pin: 11 2- Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 11 Measure point 2: Connector X1 Pin: 4 3- Measure type: Voltage (V) Measure point 1: Connector X2 Pin: 11 Measure point 2: Connector X1 Pin: 4	1- Connector Not connected; Key +15 OFF; 2- Connector Not connected; Key +15 OFF; 3- Connector Connected; Key +15 ON;	1- Min. value: 0.9 KOhm; Max. value: 2 KOhm; 2- Min. value: 500 KOhm; 3- Max. value: 1 V;	Carry out the indicated measurements

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
003	06	SENSORS - REAR LEFT SENSOR	SHORT CIRCUIT		Possible short circuit.	Check sensor wiring. Check sensor efficiency, replace it if damaged.	1- Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 14 Measure point 2: Connector X2 Pin: 11 2- Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 11 Measure point 2: Connector X1 Pin: 4 3- Measure type: Voltage (V) Measure point 1: Connector X2 Pin: 11 Measure point 2: Connector X1 Pin: 4	1- Connector Not connected; Key +15 OFF; 2- Connector Not connected; Key +15 OFF; 3- Connector Connected; Key +15 ON;	1- Min. value: 0.9 KOhm; Max. value: 2 KOhm; 2- Min. value: 500 KOhm; 3- Max. value: 1 V;	Carry out the indicated measurements
003	07	SENSORS - REAR LEFT SENSOR	PHONIC WHEEL			Check phonic wheel and replace it if damaged. Check and restore clearance between sensor and phonic wheel. Check: Check the integrity and cleanliness of the phonic wheel. Restore clearance between sensor and phonic wheel. Comparable values: 0,7 ± 0,05 mm				
003	08	SENSORS - REAR LEFT SENSOR	INVERTED WIRING			Using the MEASURABLE PARAMETERS read the velocity of the wheel in question.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
003	09	SENSORS - REAR LEFT SENSOR	SLIPPING		Mechanical problems in the ASR -System (pneumatic pipes, the ASR electrovalve, ABS-electrovalves, ASR disabling switch).	Check that: - the phonic wheels are not faulty; - teeth are not damaged or missing.				Check and restore clearance between sensor and phonic wheel. Check: Check the integrity and cleanliness of the phonic wheel. Restore clearance between sensor and phonic wheel. Comparable values: $0,7 \pm 0,05$ mm
003	0A	SENSORS - REAR LEFT SENSOR	IRREGULAR SIGNAL			Position of the sensor incorrect; high air gap; false contacts in the connector.				
003	0B	SENSORS - REAR LEFT SENSOR	SIGNAL NOT PLAUSIBLE			Position of the sensor incorrect; high air gap; false contacts in the connector.				
003	0C	SENSORS - REAR LEFT SENSOR	WRONG SIGNAL			Position of the sensor incorrect; high air gap; false contacts in the connector.				If necessary, replace the ECU.

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
004	01	SENSORS - REAR RIGHT SENSOR	EXCESSIVE AIR GAP			Check phonic wheel and replace it if damaged. Check and restore clearance between sensor and phonic wheel. Check: Check the integrity and cleanliness of the phonic wheel. Restore clearance between sensor and phonic wheel. Comparable values: 0,7 ± 0,05 mm				
004	02	SENSORS - REAR RIGHT SENSOR	INCORRECT TYRE			Check that: - the phonic wheels are not faulty; - teeth are not damaged or missing; - the tyres have equal measure (measures released by constructor), tyres pressure . Verify the axle ratio.				Check correct tyre circumference.
004	03	SENSORS - REAR RIGHT SENSOR	SHORT CIRCUIT TO POSITIVE		Possible short circuit.	Check sensor wiring. Check sensor efficiency, replace it if damaged.	1- Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 18 Measure point 2: Connector X2 Pin: 17 2- Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 17 Measure point 2: Connector X1 Pin: 4 3- Measure type: Voltage (V) Measure point 1: Connector X2 Pin: 17 Measure point 2: Connector X1 Pin: 4	1- Connector Not connected; Key +15 OFF; 2- Connector Not connected; Key +15 OFF; 3- Connector Connected; Key +15 ON;	1- Min. value: 0.9 KOhm; Max. value: 2 KOhm; 2- Min. value: 500 KOhm; 3- Max. value: 1 V;	Carry out the indicated measurements

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
004	04	SENSORS - REAR RIGHT SENSOR	SHORT CIRCUIT TO GROUND		Possible short circuit.	Check sensor wiring. Check sensor efficiency, replace it if damaged.	1- Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 18 Measure point 2: Connector X2 Pin: 17 2- Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 17 Measure point 2: Connector X1 Pin: 4 3- Measure type: Voltage (V) Measure point 1: Connector X2 Pin: 17 Measure point 2: Connector X1 Pin: 4	1- Connector Not connected; Key +15 OFF; 2- Connector Not connected; Key +15 OFF; 3- Connector Connected; Key +15 ON;	1- Min. value: 0.9 KOhm; Max. value: 2 KOhm; 2- Min. value: 500 KOhm; 3- Max. value: 1 V;	Carry out the indicated measurements
004	05	SENSORS - REAR RIGHT SENSOR	OPEN CIRCUIT		Possible open circuit or interrupted cable between.	Check sensor wiring. Check sensor efficiency, replace it if damaged.	1- Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 18 Measure point 2: Connector X2 Pin: 17 2- Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 17 Measure point 2: Connector X1 Pin: 4 3- Measure type: Voltage (V) Measure point 1: Connector X2 Pin: 17 Measure point 2: Connector X1 Pin: 4	1- Connector Not connected; Key +15 OFF; 2- Connector Not connected; Key +15 OFF; 3- Connector Connected; Key +15 ON;	1- Min. value: 0.9 KOhm; Max. value: 2 KOhm; 2- Min. value: 500 KOhm; 3- Max. value: 1 V;	Carry out the indicated measurements

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
004	06	SENSORS - REAR RIGHT SENSOR	SHORT CIRCUIT		Possible short circuit.	Check sensor wiring. Check sensor efficiency, replace it if damaged.	1- Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 18 Measure point 2: Connector X2 Pin: 17 2- Measure type: Resistance (KOhm) Measure point 1: Connector X2 Pin: 17 Measure point 2: Connector X1 Pin: 4 3- Measure type: Voltage (V) Measure point 1: Connector X2 Pin: 17 Measure point 2: Connector X1 Pin: 4	1- Connector Not connected; Key +15 OFF; 2- Connector Not connected; Key +15 OFF; 3- Connector Connected; Key +15 ON;	1- Min. value: 0.9 KOhm; Max. value: 2 KOhm; 2- Min. value: 500 KOhm; 3- Max. value: 1 V;	Carry out the indicated measurements
004	07	SENSORS - REAR RIGHT SENSOR	PHONIC WHEEL			Check phonic wheel and replace it if damaged. Check and restore clearance between sensor and phonic wheel. Check: Check the integrity and cleanliness of the phonic wheel. Restore clearance between sensor and phonic wheel. Comparable values: 0,7 ± 0,05 mm				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
004	08	SENSORS - REAR RIGHT SENSOR	SLIPPING		Mechanical problems in the ASR -System (pneumatic pipes, the ASR electrovalve, ABS-electrovalves, ASR disabling switch).	Check that: - the phonic wheels are not faulty; - teeth are not damaged or missing.				Check and restore clearance between sensor and phonic wheel. Check: Check the integrity and cleanliness of the phonic wheel. Restore clearance between sensor and phonic wheel. Comparable values: $0,7 \pm 0,05$ mm
004	09	SENSORS - REAR RIGHT SENSOR	INVERTED WIRING			Using the MEASURABLE PARAMETERS read the velocity of the wheel in question.				
004	0A	SENSORS - REAR RIGHT SENSOR	IRREGULAR SIGNAL			Position of the sensor incorrect; high air gap; false contacts in the connector.				
004	0B	SENSORS - REAR RIGHT SENSOR	SIGNAL NOT PLAUSIBLE			Position of the sensor incorrect; high air gap; false contacts in the connector.				
004	0C	SENSORS - REAR RIGHT SENSOR	WRONG SIGNAL			Position of the sensor incorrect; high air gap; false contacts in the connector.				If necessary, replace the ECU.

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
007	03	SOLE-NOID VALVES - FRONT LEFT ABS SOLE-NOID VALVE	SHORT CIRCUIT TO POSITIVE		Possible short circuit.	Check wiring and connectors.	1- Measure type: Voltage (V) Measure point 1: Connector X2 Pin: 3 Measure point 2: Connector X1 Pin: 4 2- Measure type: Voltage (V) Measure point 1: Connector X2 Pin: 6 Measure point 2: Connector X1 Pin: 4	1- Connector Connected; Key +15 ON; 2- Connector Connected; Key +15 ON;	1- Max. value: 1 V; 2- Max. value: 1 V;	Carry out the recommended measurements.
007	05	SOLE-NOID VALVES - FRONT LEFT ABS SOLE-NOID VALVE	OPEN CIRCUIT		Possible open circuit or interrupted cable between.	Check wiring and connectors.	1- Measure type: Resistance (Ohm) Measure point 1: Connector X2 Pin: 3 Measure point 2: Connector X1 Pin: 4 2- Measure type: Resistance (Ohm) Measure point 1: Connector X2 Pin: 6 Measure point 2: Connector X1 Pin: 4	1- Connector Not connected; Key +15 OFF; 2- Connector Not connected; Key +15 OFF;	1- Min. value: 14 Ohm; Max. value: 21 Ohm; 2- Min. value: 14 Ohm; Max. value: 21 Ohm;	Carry out the recommended measurements.
007	06	SOLE-NOID VALVES - FRONT LEFT ABS SOLE-NOID VALVE	SHORT CIRCUIT TO GROUND		Possible short circuit.	Check wiring and connectors.	1- Measure type: Resistance (Ohm) Measure point 1: Connector X2 Pin: 3 Measure point 2: Connector X1 Pin: 4 2- Measure type: Resistance (Ohm) Measure point 1: Connector X2 Pin: 6 Measure point 2: Connector X1 Pin: 4	1- Connector Not connected; Key +15 OFF; 2- Connector Not connected; Key +15 OFF;	1- Min. value: 14 Ohm; Max. value: 21 Ohm; 2- Min. value: 14 Ohm; Max. value: 21 Ohm;	Carry out the recommended measurements.

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
008	03	SOLE-NOID VALVES - FRONT RIGHT ABS SOLE-NOID VALVE	SHORT CIRCUIT TO POSITIVE		Possible short circuit.	Check wiring and connectors.	1- Measure type: Voltage (V) Measure point 1: Connector X2 Pin: 1 Measure point 2: Connector X1 Pin: 4 2- Measure type: Voltage (V) Measure point 1: Connector X2 Pin: 4 Measure point 2: Connector X1 Pin: 4	1- Connector Connected; Key +15 ON; 2- Connector Connected; Key +15 ON;	1- Max. value: 1 V; 2- Max. value: 1 V;	Carry out the recommended measurements.
008	05	SOLE-NOID VALVES - FRONT RIGHT ABS SOLE-NOID VALVE	OPEN CIRCUIT		Possible open circuit or interrupted cable between.	Check wiring and connectors.	1- Measure type: Resistance (Ohm) Measure point 1: Connector X2 Pin: 1 Measure point 2: Connector X1 Pin: 4 2- Measure type: Resistance (Ohm) Measure point 1: Connector X2 Pin: 4 Measure point 2: Connector X1 Pin: 4	1- Connector Not connected; Key +15 OFF; 2- Connector Not connected; Key +15 OFF;	1- Min. value: 14 Ohm; Max. value: 21 Ohm; 2- Min. value: 14 Ohm; Max. value: 21 Ohm;	Carry out the recommended measurements.
008	06	SOLE-NOID VALVES - FRONT RIGHT ABS SOLE-NOID VALVE	SHORT CIRCUIT TO GROUND		Possible short circuit.	Check wiring and connectors.	1- Measure type: Resistance (Ohm) Measure point 1: Connector X2 Pin: 1 Measure point 2: Connector X1 Pin: 4 2- Measure type: Resistance (Ohm) Measure point 1: Connector X2 Pin: 4 Measure point 2: Connector X1 Pin: 4	1- Connector Not connected; Key +15 OFF; 2- Connector Not connected; Key +15 OFF;	1- Min. value: 14 Ohm; Max. value: 21 Ohm; 2- Min. value: 14 Ohm; Max. value: 21 Ohm;	Carry out the recommended measurements.

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
009	03	SOLE-NOID VALVES - REAR LEFT ABS SOLE-NOID VALVE	SHORT CIRCUIT TO POSITIVE		Possible short circuit.	Check wiring and connectors.	1- Measure type: Voltage (V) Measure point 1: Connector X2 Pin: 2 Measure point 2: Connector X1 Pin: 4 2- Measure type: Voltage (V) Measure point 1: Connector X2 Pin: 5 Measure point 2: Connector X1 Pin: 4	1- Connector Connected; Key +15 ON; 2- Connector Connected; Key +15 ON;	1- Max. value: 1 V; 2- Max. value: 1 V;	Carry out the recommended measurements.
009	05	SOLE-NOID VALVES - REAR LEFT ABS SOLE-NOID VALVE	OPEN CIRCUIT		Possible open circuit or interrupted cable between.	Check wiring and connectors.	1- Measure type: Resistance (Ohm) Measure point 1: Connector X2 Pin: 2 Measure point 2: Connector X1 Pin: 4 2- Measure type: Resistance (Ohm) Measure point 1: Connector X2 Pin: 5 Measure point 2: Connector X1 Pin: 4	1- Connector Not connected; Key +15 OFF; 2- Connector Not connected; Key +15 OFF;	1- Min. value: 14 Ohm; Max. value: 21 Ohm; 2- Min. value: 14 Ohm; Max. value: 21 Ohm;	Carry out the recommended measurements.
009	06	SOLE-NOID VALVES - REAR LEFT ABS SOLE-NOID VALVE	SHORT CIRCUIT TO GROUND		Possible short circuit.	Check wiring and connectors.	1- Measure type: Resistance (Ohm) Measure point 1: Connector X2 Pin: 2 Measure point 2: Connector X1 Pin: 4 2- Measure type: Resistance (Ohm) Measure point 1: Connector X2 Pin: 5 Measure point 2: Connector X1 Pin: 4	1- Connector Not connected; Key +15 OFF; 2- Connector Not connected; Key +15 OFF;	1- Min. value: 14 Ohm; Max. value: 21 Ohm; 2- Min. value: 14 Ohm; Max. value: 21 Ohm;	Carry out the recommended measurements.

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
00A	03	SOLE-NOID VALVES - REAR RIGHT ABS SOLE-NOID VALVE	SHORT CIRCUIT TO POSITIVE		Possible short circuit.	Check wiring and connectors.	1- Measure type: Voltage (V) Measure point 1: Connector X2 Pin: 8 Measure point 2: Connector X1 Pin: 4 2- Measure type: Voltage (V) Measure point 1: Connector X2 Pin: 9 Measure point 2: Connector X1 Pin: 4	1- Connector Connected; Key +15 ON; 2- Connector Connected; Key +15 ON;	1- Max. value: 1 V; 2- Max. value: 1 V;	Carry out the recommended measurements.
00A	05	SOLE-NOID VALVES - REAR RIGHT ABS SOLE-NOID VALVE	OPEN CIRCUIT		Possible open circuit or interrupted cable between.	Check wiring and connectors.	1- Measure type: Resistance (Ohm) Measure point 1: Connector X2 Pin: 8 Measure point 2: Connector X1 Pin: 4 2- Measure type: Resistance (Ohm) Measure point 1: Connector X2 Pin: 9 Measure point 2: Connector X1 Pin: 4	1- Connector Not connected; Key +15 OFF; 2- Connector Not connected; Key +15 OFF;	1- Min. value: 14 Ohm; Max. value: 21 Ohm; 2- Min. value: 14 Ohm; Max. value: 21 Ohm;	Carry out the recommended measurements.
00A	06	SOLE-NOID VALVES - REAR RIGHT ABS SOLE-NOID VALVE	SHORT CIRCUIT TO GROUND		Possible short circuit.	Check wiring and connectors.	1- Measure type: Resistance (Ohm) Measure point 1: Connector X2 Pin: 8 Measure point 2: Connector X1 Pin: 4 2- Measure type: Resistance (Ohm) Measure point 1: Connector X2 Pin: 9 Measure point 2: Connector X1 Pin: 4	1- Connector Not connected; Key +15 OFF; 2- Connector Not connected; Key +15 OFF;	1- Min. value: 14 Ohm; Max. value: 21 Ohm; 2- Min. value: 14 Ohm; Max. value: 21 Ohm;	Carry out the recommended measurements.

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
00D	03	THIRD BRAKE RELAY - THIRD BRAKE RELAY	SHORT CIRCUIT TO POSITIVE		Possible short circuit.	Check for a fault in the fuse 70601 / 5. Check for a fault in the connector ST93 Check that the relay 25104 (E) is working correctly.	1- Measure type: Voltage (V) Measure point 1: Connector X1 Pin: 14 Measure point 2: Connector X1 Pin: 4 2- Measure type: Resistance (Ohm) Measure point 1: Connector X1 Pin: 14 Measure point 2: Connector X1 Pin: 7	1- Connector Connected; Key +15 ON; 2- Connector Not connected; Key +15 OFF;	1- Max. value: 1 V; 2- Min. value: 14 Ohm; Max. value: 21 Ohm;	Carry out the recommended measurements.
00D	05	THIRD BRAKE RELAY - THIRD BRAKE RELAY	OPEN CIRCUIT		Possible open circuit or interrupted cable between.	Check for a fault in the fuse 70601 / 5. Check for a fault in the connector ST93 Check that the relay 25104 (E) is working correctly. Reset the ECU: 1- With ignition key on "ON" short-circuit Pin 13 (connector X1) to ground for a time between 3 and 6 sec. 2- Wait for 2 sec. 3- Short-circuit again the Pin 13 connector X1 to ground and repeat the procedure for three times; each short-circuit should last at least 0,5 sec. If the procedure has been correctly carried out the ASR indicator switches on (four short pulses). When the ignition key is switched ON again, it is possible to delete the faults memory. If the fault persists, replace the E.C.U.	1- Measure type: Voltage (V) Measure point 1: Connector X1 Pin: 14 Measure point 2: Connector X1 Pin: 4 2- Measure type: Resistance (Ohm) Measure point 1: Connector X1 Pin: 14 Measure point 2: Connector X1 Pin: 7	1- Connector Connected; Key +15 ON; 2- Connector Not connected; Key +15 OFF;	1- Max. value: 1 V; 2- Min. value: 14 Ohm; Max. value: 21 Ohm;	Carry out the recommended measurements.

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
00D	06	THIRD BRAKE RELAY - THIRD BRAKE RELAY	SHORT CIRCUIT TO GROUND		Possible short circuit.	Check for a fault in the fuse 70601 / 5. Check for a fault in the connector ST93 Check that the relay 25104 (E) is working correctly.	1- Measure type: Voltage (V) Measure point 1: Connector X1 Pin: 14 Measure point 2: Connector X1 Pin: 4 2- Measure type: Resistance (Ohm) Measure point 1: Connector X1 Pin: 14 Measure point 2: Connector X1 Pin: 7	1- Connector Connected; Key +15 ON; 2- Connector Not connected; Key +15 OFF;	1- Max. value: 1 V; 2- Min. value: 14 Ohm; Max. value: 21 Ohm;	Carry out the recommended measurements.
00E	04	VOLTAGE	LOW TENSION / OPEN CIRCUIT		Possible open circuit or interrupted cable between.	Check for a fault in the fuse 70601 / 4 (Stralis 70602 / 5). Check for a fault in the fuse 70601 / 6 (Stralis 70602 / 6). Check for a fault in the supply wiring. Check the ignition key and voltage stability. Check correct pin location on Electronic control unit, if fault persists, replace.	1- Measure type: Voltage (V) Measure point 1: Connector X1 Pin: 7 Measure point 2: Connector X1 Pin: 4 2- Measure type: Voltage (V) Measure point 1: Connector X1 Pin: 8 Measure point 2: Connector X1 Pin: 4	1- Connector Connected; Key +15 ON; 2- Connector Connected; Key +15 ON;	1- Min. value: 22 V; Max. value: 28 V; 2- Min. value: 22 V; Max. value: 28 V;	Carry out the recommended measurements.

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
00E	05	VOLTAGE	GROUND FAULTY OR NOT PRESENT (pin 9 connector X1)		Possible open circuit or interrupted cable between.	Check wiring and connectors. Check: Check correct pin location on Electronic control unit, if fault persists, replace. Comparable values:	1- Measure type: Voltage (V) Measure point 1: Connector X1 Pin: 4 Measure point 2: GND Pin: GND 2- Measure type: Voltage (V) Measure point 1: Connector X1 Pin: 9 Measure point 2: GND Pin: GND 3- Measure type: Resistance (Ohm) Measure point 1: Connector X1 Pin: 9 Measure point 2: GND Pin: GND 4- Measure type: Resistance (Ohm) Measure point 1: Connector X1 Pin: 4 Measure point 2: GND Pin: GND	1- Connector Connected; Key +15 ON; 2- Connector Connected; Key +15 ON; 3- Connector Not connected; Key +15 OFF; 4- Connector Not connected; Key +15 OFF;	1- Max. value: 1 V; 2- Max. value: 1 V; 3- Max. value: 3 Ohm; 4- Max. value: 3 Ohm;	Carry out the recommended measurements.
00E	07	THIRD BRAKE RELAY - SUPPLY RELAY (INSIDE THE ELECTRONIC CONTROL UNIT)	FAULT		Ecu internal failure.	Before replacing the control unit make sure that the control unit is powered correctly.	(V)			Carry out the recommended measurements.

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
010		PRESSURE SENSOR	SHORT CIRCUIT		Short-circuit, faulty sensor.	Check sensor wiring. Replace sensor if damaged.	1- Measure type: Voltage (V) Measure point 1: Connector X1 Pin: 2 Measure point 2: Connector X1 Pin: 4 2- Measure type: Voltage (V) Measure point 1: Connector X1 Pin: 7 Measure point 2: Connector X1 Pin: 4	1- Connector Connected; Key +15 ON; 2- Connector Connected; Key +15 ON;	1- Min. value: 0.5 V; Max. value: 4.5 V; 2- Min. value: 22 V; Max. value: 28 V;	Carry out the recommended measurements.
010	03	PRESSURE SENSOR	SHORT CIRCUIT TO POSITIVE		Shorted to high source	Check sensor wiring. Replace sensor if damaged.	1- Measure type: Voltage (V) Measure point 1: Connector X1 Pin: 2 Measure point 2: Connector X1 Pin: 4 2- Measure type: Voltage (V) Measure point 1: Connector X1 Pin: 7 Measure point 2: Connector X1 Pin: 4	1- Connector Connected; Key +15 ON; 2- Connector Connected; Key +15 ON;	1- Min. value: 0.5 V; Max. value: 4.5 V; 2- Min. value: 22 V; Max. value: 28 V;	Carry out the recommended measurements.
010	05	PRESSURE SENSOR	OPEN CIRCUIT OR SHORT CIRCUIT TO GROUND		Open circuit or short-circuiting to negative.	Check sensor wiring. Replace sensor if damaged.	1- Measure type: Voltage (V) Measure point 1: Connector X1 Pin: 2 Measure point 2: Connector X1 Pin: 4 2- Measure type: Voltage (V) Measure point 1: Connector X1 Pin: 7 Measure point 2: Connector X1 Pin: 4	1- Connector Connected; Key +15 ON; 2- Connector Connected; Key +15 ON;	1- Min. value: 0.5 V; Max. value: 4.5 V; 2- Min. value: 22 V; Max. value: 28 V;	Carry out the recommended measurements.
012	03	SOLE-NOID VALVES - ASR SOLE-NOID VALVE	SHORT CIRCUIT TO POSITIVE		Possible short circuit.	Check wiring and connectors.	Measure type: Voltage (V) Measure point 1: Connector X2 Pin: 16 Measure point 2: Connector X1 Pin: 4	Connector Connected; Key +15 ON;	Max. value: 1 V;	Carry out the recommended measurements.

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
012	05	SOLE-NOID VALVES - ASR SOLE-NOID VALVE	OPEN CIRCUIT		Possible open circuit or interrupted cable between.	Check wiring and connectors. Check for a fault in the component. Reset the ECU: 1- With ignition key on "ON" short-circuit Pin 13 (connector X1) to ground for a time between 3 and 6 sec. 2- Wait for 2 seconds. 3- Short-circuit again the Pin 13 connector X1 to ground and repeat the procedure for three times; each short-circuit should last at least 0,5 sec. If the procedure has been correctly carried out the ASR indicator switches on (four short pulses). When the ignition key is switched ON again, it is possible to delete the faults memory. If the fault persists, replace the E.C.U.	Measure type: Resistance (Ohm) Measure point 1: Connector X2 Pin: 7 Measure point 2: Connector X2 Pin: 16	Connector Not connected; Key +15 OFF;	Min. value: 30 Ohm; Max. value: 40 Ohm;	Carry out the recommended measurements.
012	06	SOLE-NOID VALVES - ASR SOLE-NOID VALVE	SHORT CIRCUIT TO GROUND		Possible short circuit.	Check wiring and connectors.	Measure type: Resistance (Ohm) Measure point 1: Connector X2 Pin: 7 Measure point 2: Connector X2 Pin: 16	Connector Not connected; Key +15 OFF;	Min. value: 30 Ohm; Max. value: 40 Ohm;	Carry out the recommended measurements.
017	05	ABS INDICATOR	SHORT CIRCUIT TO GROUND		Possible causes: blink code activation > 16 sec. by means of switch (pin 15 ecu).	Check for a fault in the fuse 14 and connector ST18, pin 5.	Measure type: Voltage (V) Measure point 1: Connector X1 Pin: 15 Measure point 2: Connector X1 Pin: 4	Connector Connected; Key +15 ON;	Max. value: 1 V;	Carry out the recommended measurements.

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
0E7	02	CAN LINE	INPLAUS- IBLE VE- HICLE SPEED			Check that: - the phonic wheels are not faulty; - teeth are not damaged or missing; - the tyres have equal measure (measures released by constructor), tyres pressure . Verify the axle ratio.				
0E7	05	CAN LINE	OPEN CIR- CUIT OR SHORT CIRCUIT TO GROUND OR POS- ITIVE		Possible open circuit or interrupted cable between.	Check wiring and connectors. Check for reversal of CAN line cables.	1- Measure type: Resistance (Ohm) Measure point 1: Connector X1 Pin: 1 (CAN H) Measure point 2: Connector X1 Pin: 3 (CAN L) 2- Measure type: Resistance (KOhm) Measure point 1: Connector X1 ECU Pin: 1 (CAN H) Measure point 2: Connector X1 ECU Pin: 3 (CAN L)	1- Connector Connected; Key +15 OFF; 2- Connector Not connected; Key +15 OFF;	1- Typical Value: 60 Ohm; 2- Min. value: 29 KOhm; Max. value: 33 KOhm;	Carry out the recommended measurements.
0E7	06	CAN LINE	CONNEC- TION DIS- ABLED		Possible open circuit or interrupted cable between.	Check wiring and connectors.	1- Measure type: Resistance (Ohm) Measure point 1: Connector X1 Pin: 1 (CAN H) Measure point 2: Connector X1 Pin: 3 (CAN L) 2- Measure type: Resistance (KOhm) Measure point 1: Connector X1 ECU Pin: 1 (CAN H) Measure point 2: Connector X1 ECU Pin: 3 (CAN L)	1- Connector Connected; Key +15 OFF; 2- Connector Not connected; Key +15 OFF;	1- Typical Value: 60 Ohm; 2- Min. value: 29 KOhm; Max. value: 33 KOhm;	Carry out the recommended measurements.

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
0E7	07	CAN LINE	TIMEOUT WITH THE RETARDER			Check for correct operation/connection of the control units that are interfaced with each other (e.g.: EDC, GEARBOXES, EBS, ABS, INTARDER, SUSPENSIONS, IMMOBILIZER, others...)				
0E7	08	CAN LINE	DELAY IN THE COMMUNICATION WITH THE EDC E.C.U. (ENGINE BRAKE)			Check for correct operation/connection of the control units that are interfaced with each other (e.g.: EDC, GEARBOXES, EBS, ABS, INTARDER, SUSPENSIONS, IMMOBILIZER, others...)				
0E7	09	CAN LINE	DELAY IN THE COMMUNICATION WITH THE EDC E.C.U. (TORQUE)			Check that the CAN LINE is correctly connected to the other control units. Check for CAN presence on the diagnostic connector.	1- Measure type: Resistance (Ohm) Measure point 1: Connector X1 Pin: 1 (CAN H) Measure point 2: Connector X1 Pin: 3 (CAN L) 2- Measure type: Resistance (KOhm) Measure point 1: Connector X1 ECU Pin: 1 (CAN H) Measure point 2: Connector X1 ECU Pin: 3 (CAN L) 3- Measure type: Resistance (Ohm) Measure point 1: 30-pole connector Pin: 21 Measure point 2: 30-pole connector Pin: 22	1- Connector Connected; Key +15 OFF; 2- Connector Not connected; Key +15 OFF; 3- Connector Connected; Key +15 OFF;	1- Typical Value: 60 Ohm; 2- Min. value: 29 KOhm; Max. value: 33 KOhm; 3- Typical Value: 60 Ohm;	Carry out the recommended measurements.

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
0E7	0A	CAN LINE	DELAY IN THE COMMUNICATION WITH THE EDC E.C.U. (ENGINE BRAKE/RETARDER)			Check that the CAN LINE is correctly connected to the other control units. Check for CAN presence on the diagnostic connector.	1- Measure type: Resistance (Ohm) Measure point 1: Connector X1 Pin: 1 (CAN H) Measure point 2: Connector X1 Pin: 3 (CAN L) 2- Measure type: Resistance (KOhm) Measure point 1: Connector X1 ECU Pin: 1 (CAN H) Measure point 2: Connector X1 ECU Pin: 3 (CAN L) 3- Measure type: Resistance (Ohm) Measure point 1: 30-pole connector Pin: 21 Measure point 2: 30-pole connector Pin: 22	1- Connector Connected; Key +15 OFF; 2- Connector Not connected; Key +15 OFF; 3- Connector Connected; Key +15 OFF;	1- Typical Value: 60 Ohm; 2- Min. value: 29 KOhm; Max. value: 33 KOhm; 3- Typical Value: 60 Ohm;	Carry out the recommended measurements.
0E7	0C	CAN LINE	INTERNAL FAULT		Ecu internal failure.	Before replacing the control unit make sure that the control unit is powered correctly.	1- Measure type: Resistance (KOhm) Measure point 1: Connector X1 ECU Pin: 1 (CAN H) Measure point 2: Connector X1 ECU Pin: 3 (CAN L) 2- Measure type: Voltage (V) Measure point 1: Connector X1 Pin: 7 Measure point 2: Connector X1 Pin: 4 3- Measure type: Voltage (V) Measure point 1: Connector X1 Pin: 8 Measure point 2: Connector X1 Pin: 4	1- Connector Not connected; Key +15 OFF; 2- Connector Connected; Key +15 ON; 3- Connector Connected; Key +15 ON;	1- Min. value: 29 KOhm; Max. value: 33 KOhm; 2- Min. value: 22 V; Max. value: 28 V; 3- Min. value: 22 V; Max. value: 28 V;	Carry out the recommended measurements.

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
0FB	03	VOLTAGE	OVER-VOLTAGE		The alternator charge may be excessive.	Check battery and alternator supply. Check supply voltage.				Check the Tension Regulator or any false contacts on the earth or positive points.
0FD	02	ELECTRONIC CONTROL UNIT	INCORRECT WHEEL PARAMETERS			Reprogram ABS central unit with correct configuration.				If the error persists to replace ECU.
0FD	0C	ELECTRONIC CONTROL UNIT	EEPROM PARAMETERS NOT CORRECT			Reprogram ABS central unit with correct configuration.				If the error persists to replace ECU.
0FE	05	ELECTRONIC CONTROL UNIT	ASR FUNCTION DISABLED	Brake controlling ASR disabled.	ECU connector X2 not connected or absence of ground on PIN 2 of each ABS electrovalve.	Check compatibility between vehicle system and E.C.U. configuration.				Check that the ABS ECU programming is convenient for the vehicle system. Check the CAN line with EDC. Check that the EDC ECU is properly programmed.

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
0FE	05	ELECTRONIC CONTROL UNIT	ABS-ASR FUNCTION DISABLED	ABS / ASR disabled.	ECU connector X2 not connected or absence of ground on PIN 2 of each ABS electrovalve.	Check compatibility between vehicle system and E.C.U. configuration.				Check that the ABS ECU programming is convenient for the vehicle system. Check the CAN line with EDC. Check that the EDC ECU is properly programmed.
0FE	08	ELECTRONIC CONTROL UNIT	EXCESSIVE SLIPPING		Mechanical problems in the ASR -System (pneumatic pipes, the ASR electrovalve, ABS-electrovalves, ASR disabling switch).	Check phonic wheel and replace it if damaged. Check and restore clearance between sensor and phonic wheel. Check: Check the integrity and cleanliness of the phonic wheel. Restore clearance between sensor and phonic wheel. Comparable values: 0,7 ± 0,05 mm				
0FE	09	SOLENOID VALVES - ABS SOLENOID VALVES	ACTIVATION TIMES NOT CORRECT		ABS valve enabling time incorrect.	Check that the solenoid connectors in the electrical system and the pipes in the pneumatic system have not been inverted.				

DTC	FMI	Failing component	Type of Failure	Visible failure	Possible Cause	Repair action	Checks to be performed	Measuring conditions	Values to be detected	Remarks
0FE	0C	ELECTRONIC CONTROL UNIT	INTERNAL FAULT		Ecu internal failure.	Before replacing the control unit make sure that the control unit is powered correctly.	1- Measure type: Voltage (V) Measure point 1: Connector X1 Pin: 7 Measure point 2: Connector X1 Pin: 4 2- Measure type: Voltage (V) Measure point 1: Connector X1 Pin: 8 Measure point 2: Connector X1 Pin: 4	1- Connector Connected; Key +15 ON; 2- Connector Connected; Key +15 ON;	1- Min. value: 22 V; Max. value: 28 V; 2- Min. value: 22 V; Max. value: 28 V;	Carry out the recommended measurements.

Aquila Trucks Centres

SECTION 2

Visible Failure	Possible cause	Repair action
Insufficient or irregular system charging	Pneumatic system pipes leaking or broken.	Tighten or replace loose or damaged fittings. Replace broken or damaged pipes.
	Air compressor is faulty.	Overhaul or replace air compressor.
	Pressure regulator in drier is faulty.	Overhaul or replace drier.
	Four-way safety valve is faulty.	Overhaul or replace four-way safety valve.
Rear axle service braking is inefficient or irregular	Leaks or breakages in pneumatic system pipes.	Tighten or replace loose or damaged fittings. Replace broken or damaged pipes.
	Braking control is faulty.	Adjust, overhaul and if necessary replace the braking control.
	Worn or vitrified brake linings.	Overhaul or replace the brake linings.
	Rear brakes are faulty.	Overhaul the rear brakes.
	Duplex distributor is faulty.	Overhaul or replace Duplex distributor.
	Brake cylinders are faulty.	Overhaul or replace brake cylinders.
Front axle service braking is inefficient or irregular	Leaks or breakages in pneumatic system pipes.	Tighten or replace loose or damaged fittings. Replace broken or damaged pipes.
	Duplex distributor is faulty.	Overhaul or replace Duplex distributor.
	Worn and/or vitrified brake linings.	Overhaul or replace brake linings.
	Front brakes are faulty.	Overhaul front brakes.
	Diaphragm brake cylinders are faulty.	Overhaul or replace diaphragm brake cylinders.

(Continue)

Aquila Trucks Centres

Visible Failure	Possible cause	Repair action
Trailer service braking is inefficient or irregular	Leaks or breakages in pneumatic system pipes.	Tighten or replace loose or damaged fittings Replace broken or damaged pipes.
	Triple control servo distributor is faulty.	Overhaul or replace triple control servo distributor.
	Duplex distributor is faulty.	Overhaul or replace duplex control valve.
	Pressure reducer is faulty.	Overhaul or replace pressure reducer.
	Worn or vitrified brake linings.	Overhaul or replace brake linings.
	Trailer brakes is faulty.	Overhaul trailer brakes.
Inefficient or no parking braking	Leaks or breakages in pneumatic system pipes.	Tighten or replace loose or damaged couplings. Replace broken or damaged pipes.
	Combined brake cylinders are faulty.	Overhaul or replace combined brake cylinders.
	Parking brake hand lever is faulty.	Overhaul or replace lever.
	Worn or vitrified brake linings.	Overhaul or replace brake linings.
	Relay valve is faulty.	Overhaul or replace relay valve.
Inefficient or no parking braking on trailer	Leaks or breakages in pneumatic system pipes.	Tighten or replace loose or damaged couplings. Replace broken or damaged pipes.
	Triple control servo distributor is faulty.	Overhaul or replace triple action servo control valve.
	Parking brake hand lever is faulty.	Overhaul or replace hand lever.
	Worn or vitrified trailer brake linings.	Overhaul or replace trailer brake linings.
	Trailer brakes are faulty.	Overhaul trailer brakes.

(Continue)

Aquila Trucks Centres

Visible Failure	Possible cause	Repair action
Delayed parking brake release	Leaks or breakages in pneumatic system pipes.	Tighten or replace loose or damaged couplings. Replace broken or damaged pipes.
	Relay valve is faulty.	Overhaul or replace relay valve.
	Combined brake cylinders are faulty.	Overhaul or replace combined brake cylinders.
	Parking brake hand lever is faulty.	Overhaul or replace lever.
	Rear brakes are faulty.	Overhaul rear brakes.
Delayed trailer parking brake release	Leaks or breakages in pneumatic system pipes.	Tighten or replace loose or damaged couplings. Replace broken or damaged pipes.
	Triple control servo distributor is faulty.	Overhaul or replace triple action servo control valve.
	Parking brake hand lever is faulty.	Overhaul or replace hand lever.
	Trailer brakes are faulty.	Overhaul trailer brakes.
The vehicle pulls to one side when braking	Leaks or breakages in pneumatic system pipes.	Tighten or replace loose or damaged connections. Replace broken or damaged pipes.
	Duplex distributor is faulty.	Overhaul or replace Duplex control valve.
	Braking control is faulty.	Adjust, overhaul and if necessary replace load proportioning valve.
	Front brakes are faulty.	Overhaul front brakes.
	Rear brakes are faulty.	Overhaul rear brakes.
	Triple control servo distributor is faulty.	Overhaul or replace triple action control valve.
Insufficient trailer slow-down braking	Leaks or breakages in pneumatic system pipes.	Tighten or replace loose or damaged couplings. Replace broken or damaged pipes.
	Pressure reducer is faulty.	Overhaul or replace pressure reducer.
	Triple control servo distributor is faulty.	Overhaul or replace triple action control valve.
	Parking brake hand lever is faulty.	Overhaul or replace lever.

(Continue)

Aquila Trucks Centres

Visible Failure	Possible cause	Repair action
Brake linings become worn quickly	Duplex distributor is faulty.	Overhaul or replace duplex control valve.
	Braking control is faulty.	Adjust, overhaul and if necessary replace load proportioning valve.
	Brakes are faulty.	Overhaul brakes.
	Triple control servo distributor is faulty.	Overhaul or replace triple action control valve.
	Relay valve is faulty.	Overhaul or replace relay valve.
Brake system failure indicator light switched on	Leaks or breakages in pneumatic system pipes.	Tighten or replace loose or damaged couplings. Replace broken or damaged pipes.
	Four-way safety valve is faulty.	Overhaul or replace four way protection valve.
	Light indicator electric circuit is badly wired.	Find wrong connection and rectify wiring.
Parking brake indicator light switched on with hand lever in running position	Light indicator electric circuit is badly wired.	Find wrong connection and rectify wiring.
	Parking hand lever is faulty.	Overhaul or replace lever.
	Pressure reducer operating normally.	Overhaul or replace pressure reducer.
Noisy brakes	Worn brake linings.	Replace brake linings.
	Shoe return springs are faulty.	Overhaul rear brakes.
	Brake drums are ovalized over prescribed tolerance range.	Face or, if necessary, replace drums.




Aquila Trucks Centres

TIGHTENING TORQUES





DESCRIPTION	TORQUE	
	Nm	(kgm)
Compressor		
Compressor, Knorr type - BREMSE 2 W 460 R, 464 cm ³		
Head fastening screws	30	(3)
Pulley fastening nut	190 $\begin{smallmatrix} +1 \\ -0 \end{smallmatrix}$	(19)
Combined brake cylinder		
Brake cylinder ring nut	300 + 30	(30 ± 3)
Manual brake release screw	15 + 20	(1.5)
Diaphragm brake cylinder (for drum brakes)		
Brake cylinder ring nut	300 + 30	(30±3)
Diaphragm brake cylinder (for disk brakes)		
Nuts to secure cylinder to brake caliper	180 ± 20	(18±2)
Front disc brakes axle 5886/D		
Ring nut fixing wheel bearings	515.5 ± 24.5	(51.5 ± 2.4)
Cylindrical head screws with hex socket to lock wheel bearing adjustment clamp	27.5 ± 2.5	(2.7 ± 0.2)
Self-locking hex screws to fix brake callipers to mount	615.5 ± 61.5	(61.5 ± 6.1)
Self-locking hex screw to fix brake calliper mount to stub axle	312.5 ± 16.5	(31.2 ± 1.6)
Hex screw fixing brake disc to wheel hub	281.5 ± 13.5	(28.1 ± 1.3)
Cover for wheel hub z	130 ± 10	(13 ± 1)
Tapered threaded plug for wheel hub cover	50 ± 5	(5 ± 0.5)
z Deposit a sealer bead only on hub cover ledge surface, using dedicated dispenser. Protect threaded portion. Use LOCTITE TYPE 574 as a sealer		
Rear drum brakes axle 5985/2D		
Wheel securing nut	600 $\begin{smallmatrix} +50 \\ -20 \end{smallmatrix}$	(60 $\begin{smallmatrix} +5 \\ -2 \end{smallmatrix}$)
Brake support securing screw	362.5 ± 33.5	(36.2 ± 3.3)
Cover securing screw	49 ± 5	(4.9 ± 5)
Support securing screw	25 ± 3	(2.5 ± 3)
Axle drum brakes 452191/2D - 453291/2D - 452146/2D - 451391/2D		
Screw fixing drum	25 ± 3	(2.5 ± 0.3)
Cover securing screw H	50 ± 5	(5 ± 0.3)
Flat-head screw	50 ± 5	(5 ± 0.5)
Wheel securing nut	615 ± 35	(61.5 ± 3.5)
Drum brakes on rear axle MT 23 - 155		
Wheel fastening nut	665.5 ± 61.5	(67.8 ± 6.2)
Drum fastening screw	54.5 ± 12.5	(29 ± 1.3)
Half-shaft fastening screw *	262 ± 27	(26.7 ± 2.7)
Wheel hub bearing ring nut	932 ± 98	(95 ± 10)
Nut for brake support fastening screw	289.4 ± 14.5	(29.5 ± 1.5)
Rev sensor support fastening screw D	6 ± 1	
* spread the flange/wheel hub mating surface with sealer IVECO 1905685 (LOCTITE 14780)		
• apply LOCTITE 245 on the threading		

Aquila Trucks Centres





TOOLS

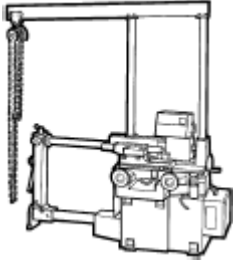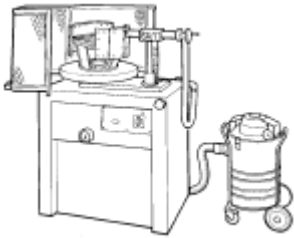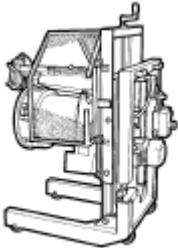TOOL NO.	DESCRIPTION	
99301001		Grinding and turning machine for brake discs and drums
99301005		Brake disc turning device
99301006		Brake shoe turning device
99305079		Brake shoe turning device
99305087		Rivet press
99305117		Instrument to check air circuits

 



Aquila Trucks Centres

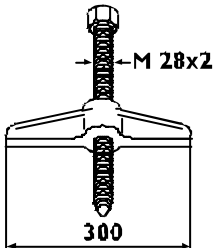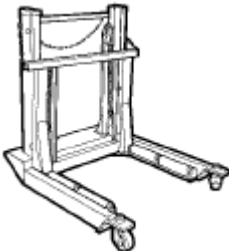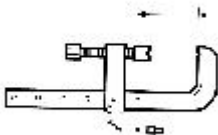TOOL NO.	DESCRIPTION	
99305121		Hot air device
99341003		Single-acting bridge (rear axles 452194/2D - 451391/2D - 453291/2D - 452191/D - 452146/2D)
99321024		Hydraulic trolley to remove and refit wheels
99327030		E.A.S.Y.
99341015		Clamp (rear axles 412191/2D - 451391/2D - 453291/2D - 452146/2D)
99341023		Grips (rear axles 452191/2D - 451391/2D - 453291/2D)






Aquila Trucks Centres

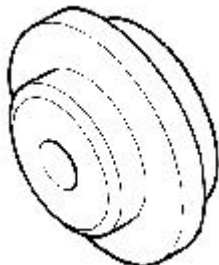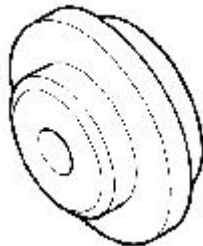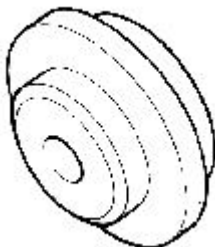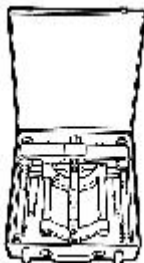TOOL NO.		DESCRIPTION
99345049		Reaction block for extractors (drive axle 5985/2D)
99345053		Reaction block for extractors (drive axle 5985/2D, rear axle 452146/2D)
99345055		Reaction block for extractors (rear axles 452191/2D - 451391/2D - 453291/2D)
99348001		Extractor with locking device (drive axle 5985/2D, rear axles 452146/2D - 452191/2D - 451391/2D - 453291/2D)
9938004		Universal male extractor from 5 to 70 mm (drive axle 5985/2D)
99354207		Wrench for wheel hub caps (front axle 5886/D, drive axle 5985/2D, rear axles 452146/2D - SR145E/2D - 452191/2D - 451391/2D - 453291/2D)






Aquila Trucks Centres

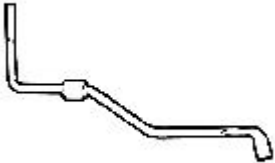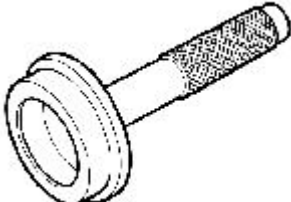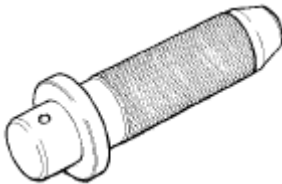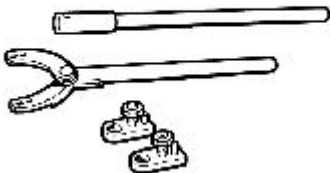TOOL NO.		DESCRIPTION
99356001		Wheel brake shoe adjustment wrench (rear axles 452191/2D - 451391/2D - 453291/2D - 452146/2D)
99356006		Wrench for dismounting and remounting faired brake cylinder ring nut
99370005		Grip for interchangeable drifts (rear axles 452191/2D - 451391/2D - 453291/2D - 452146/2D)
99370006		Grip for interchangeable drifts (front axle 5886/D, drive axle 5985/2D, rear axles 452191/2D - 451391/2D - 453291/2D)
99370007		Grip for interchangeable drifts (front axle 5886/D, drive axle 5985/2D, rear axles 452191/2D - 451391/2D - 453291/2D - 452146/2D)
99370317		Reaction lever with extension to retain flanges (front axle 5886/D, drive axle 5985/2D, rear axles 452191/2D - 451391/2D - 453291/2D - 452146/2D)





Aquila Trucks Centres

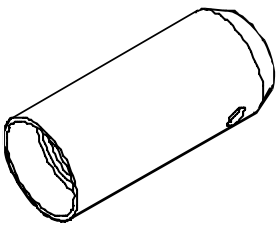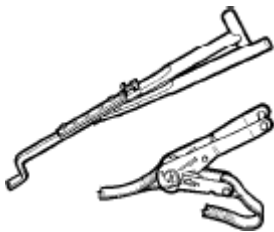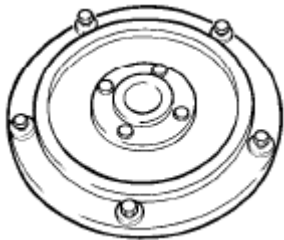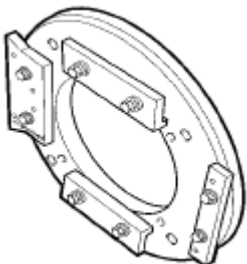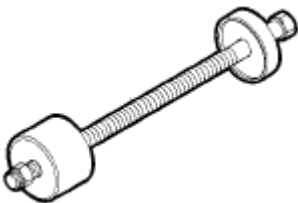TOOL NO.	DESCRIPTION	
99370715		Guide for fitting wheel hub (front axle 5886/D, rear axles 452191/2D - 451391/2D - 453291/2D)
99372211		Tool to remove and refit brake shoe retainer springs
99372213		Tool for turning brake drum (use with 99301001) (drive axle 5985/2D, rear axles 452191/2D - 451391/2D - 453291/2D - 452146/2D, axle 5886/2D)
99372228		Hub for positioning dismantled floating shoe turning tools on lathe 99301001
99372230		Tool for turning dismantled floating shoes (Rockwell 410) (use with 99301001 - 99372228)
99372237		Tool to mount brake calliper sliding bush guard (front axle 5886/D)




Aquila Trucks Centres

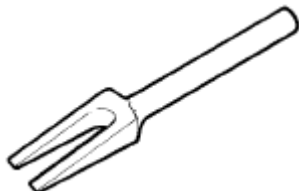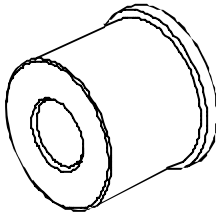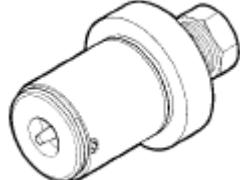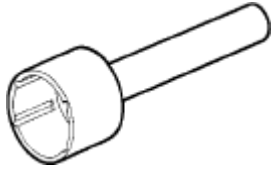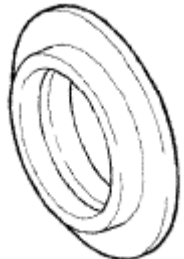TOOL NO.	DESCRIPTION	
99372238		Tool to extract brake calliper thrust units (front axle 5886/D)
99372239		Tool to mount thrust units with brake calliper guard (front axle 5886/D)
99372240		Tool to remove and refit brake calliper sliding bush guide bushings (use with 99372237 for assembly) (front axle 5886/D)
99372241		Tool for notching brake calliper sliding bush guide bushing (front axle 5886/D)
99373004		Key to remove brake cylinder gasket (Rockwell) (rear axles 452191/2D - 451391/2D - 453291/2D - 452146/2D, axle 5985/2D)
99374025		Installer, wheel hub inner seal (use with 99370005)

Aquila Trucks Centres

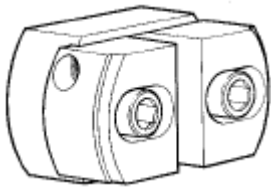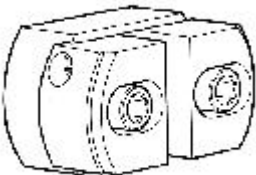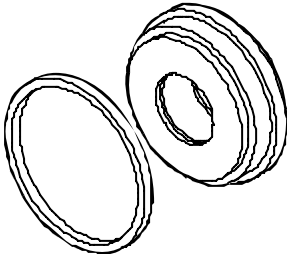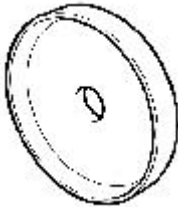TOOL NO.	DESCRIPTION
99374093 	Drift to mount bearing outer races 91-134 mm (use with 99370007) (front axle - 5886/D, drive axle 5985/2D, rear axles 452191/2D - 451391/2D - 453291/2D - 452146/2D)
99374094 	Drift to mount bearing outer races 134-215 mm (use with 99370007) (rear axles 452191/2D - 451391/2D - 453291/2D - 452146/2D, axle 5985/2D)
99374132 	Key to mount wheel hub internal gasket (use with 99370006) (front axles 5886/D)
99374161 	Key to mount wheel hub internal gasket (rear axles 452191/2D - 451391/2D - 453291/2D - 452146/2D)
99374377 	Key to mount wheel hub internal gasket (drive axle 5985/2D)
99374451 	Tool to remove and refit drive shafts (rear axles 452191/2D - 451391/2D - 453291/2D - 452146/2D)

Aquila Trucks Centres

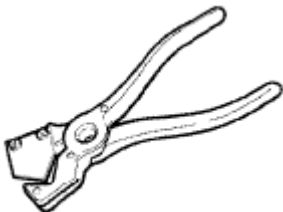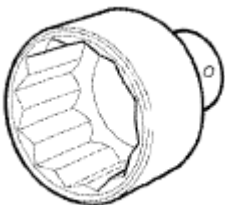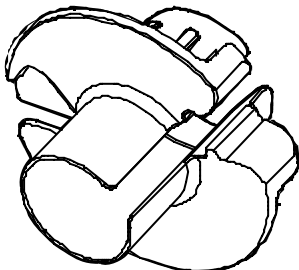TOOL NO.	DESCRIPTION	
99387050		Cutting nippers for polyamide pipes
99388001		Wrench (80 mm) for front wheel hub bearing adjustment nut (front axle 5886/D, drive axle 5985/2D)
99387051		Toolkit to remove polyamide tubes (6-8-10-12 mm) from RAUFOSS joints

Aquila Trucks Centres

MAIN DATA - PNEUMATIC SYSTEM

DESIGNATION

Compressor

- Type: WABCO 412 352 200 8	Single cylinder
Displacement	352 cm ³
- Type: KNORR - BREMSE 2 W 460 R	Two cylinders
Displacement	628 cm ³

APU

- Type: KNORR Z 007035

Max. working pressure	bar	13 bar					
Safety valve opening pressure	bar	13 + 4 bar					
Circuit		1	2	3	4	3	4
Fitting for second		21	22	23	24		26
Opening pressure (The circuit 1+2 are filled first)	bar	7.5 ^{+0.2} ₀		8.0 ⁻⁰ _{0.2}			
Opening pressure of the integrated safety valve	bar			> = 9.2			
Static closing pressure. (Without compensation, with 0 bars in the circuit out of service)	bar	6.5 ± 0.25		6.5 ± 0.25			
Working pressure	bar			8.5 _{-0.3}		8.5 _{-0.5}	
Pressure limiter on/off pressure difference	bar			< = 0.65			

Air tanks

Front axle	20 Litres
Rear axle	20 Litres
Parking + trailer	20 Litres
For regeneration	5 Litres
Services	5 Litres

Engine brake control pedal valve

- Type: BOSCH A 481 110 125 - WABCO 463036019 - BENDIX CP6A
- Maximum working pressure 12 bar

Duplex distributor

- Type: KNORR - DX 60A
- Feed pressure 10.5 bar
- Working pressure 10.5 bar

Proportional reducing valve

- Type: KNORR DB 2116
- Ratio 1.15:1

Relay valve

- Type: KNORR - BREMSE - AC 574 AXY
- Max. working pressure 10.2 bar
- Type: KNORR - BREMSE - RP2A
- Max. working pressure 10 bar

Aquila Trucks Centres

DESIGNATION	
Double-acting relay valve	
- Type: WABCO 973 011 208 0	
Control maximum pressure	10 bar
Variable and automatic coupling heads	
- Type: MARELLI - BOSCH - KNORR - BREMSE - WABCO - GRAU	
Working pressure	8.5 bar
Triple control servo distributor	
- Type: KNORR - BREMSE AC 597 B - WABCO 973009013	
Feed pressure	8.5 bar
Predominance	0.2 bar
Differential control pressure (ducts 41 and 22)	$2.5 \begin{smallmatrix} -0.5 \\ +0.3 \end{smallmatrix}$ bar
Parking brake distributor (towing vehicles)	
- Type: KNORR DPM 60EY	
Supply and working pressure	8.5 bar
Travel of control lever (discharge) with start of emergency braking (point of resistance)	67°
Parking braking	73°
Test braking to check supply to triple control valve	86°
Parking brake distributor (stand-alone vehicles)	
- Type: KNORR DPM 61EY	
Supply pressure	8.5 bar
Travel of control lever (discharge) with start of emergency braking (point of resistance)	67°
Parking braking	73°
Trailer retarder control valve (optional)	
- KNORR DPM 96 DAX	
Supply pressure	8.5 bar
Maximum angular travel of control lever	73°
Air pressure switch	
- TDS F13043 - F13047	
Working pressure	max 15 bar
Setting pressure	
with increasing pressure	5.5 ± 0.5 bar
with decreasing pressure	6.6 ± 0.3 bar
Safety valve (for "Sweden" only)	
- WABCO 434 205 061 0	
Maximum operating pressure	10 bar
Controlled pressure valve	
- WABCO 434 100 199 - KNORR - BREMSE 1B 435 47 - BENDIX VPC 4M	
Opening pressure	$7 \begin{smallmatrix} +0.1 \\ -0.3 \end{smallmatrix}$ bar
ABS wheel anti-lock control valve	
- Type: WABCO 472 195 055 0	
Maximum operating pressure	13 bar
- Type: KNORR - BREMSE IC 57664	
Maximum operating pressure	10,2 bar

Aquila Trucks Centres

DESIGNATION

Check valve

- Type: VOSS 02 68 91 42 00
- Max. working pressure 12 bar
- Impedance pressure 0.2 bar

Twin stop valve

- WABCO 434 208 029 0
- Supply pressure max 10 bar

Pressure test point valve

- Type: RAUFOSS
- Working pressure max 12.5 bar
- Type: SIRIT
- Working pressure max 12.5 bar

Pressure sensor

- WABCO 441 040 015 0
- Measuring principle piezo-resistive
- Permissible overpressure 16 bar

Solenoid valve normally closed ASR control

- WABCO 472 170 606 0
- Working pressure 5.5 ÷ 11 bar
- Feed maximum pressure 13 bar
- Voltage 24V
- Current 0.69 A

Electronic control unit

- WABCO 446 004 320 0
- Supply voltage 24 V

Membrane brake cylinder (for drum brakes)









- Type 14: BENDIX DFR 8944 B
- Maximum working pressure 8.5 bar
- Sleeve length 187 mm
- Stroke min. 53 mm
- Type 14: KNORR EF 141 AY
- Maximum working pressure 8.5 bar
- Sleeve length 152 mm
- Stroke 53 mm
- Type 16: BENDIX DFR 9023 B
- Maximum working pressure 8.5 bar
- Sleeve length 187 mm
- Stroke min. 53 mm
- Type 16: KNORR EF 161 AY
- Maximum working pressure 8.5 bar
- Sleeve length 152 mm
- Stroke min. 53 mm
- Type 18: BENDIX EF 180 BY
- Maximum working pressure 8.5 bar
- Sleeve length 180 mm
- Stroke min. 53 mm

Aquila Trucks Centres










DESIGNATION	
Combined brake cylinder	
- Type 16/24 HF: KNORR 1 C 56449	
Maximum working pressure	8.5 bar
Spring load	7900 N
- Type 18/24 HF: KNORR 1 C 55976	
Maximum working pressure	8.5 bar
Spring load	7900 N
- Type 14/24: HF KNORR - BREMSE BY 9276 (Z 005732)	
Maximum working pressure	8.5 bar
Spring load	10400 N
- Type 16/24: HF KNORR - BREMSE BY 9331 (Z 005733)	
Maximum working pressure	8.5 bar
Spring load	10400 N
Membrane brake cylinder (for disk brakes)	
- Type 22: KNORR - BREMSE Z 011553	
Maximum working pressure	10.7 bar
Sleeve length	141 mm
Stroke	min 64 mm
- Type 24: KNORR - BREMSE Z 010464	
Maximum working pressure	10.7 bar
Sleeve length	141 mm
Stroke	min 64 mm
Membrane brake cylinder (for drum brakes)	
- Type 16: KNORR EF 161 NYX	
Maximum working pressure	8.5 bar
Sleeve length	152 mm
Stroke	min 53 mm
- Type 16: KNORR EF 161 PYX	
Maximum working pressure	8.5 bar
Sleeve length	190 mm
Stroke	min 53 mm
- Type 18: KNORR EF 180 PYX	
Maximum working pressure	8.5 bar
Sleeve length	190 mm
Stroke	min 53 mm
Combined brake cylinder	
- Type 16/24 HF: KNORR - BREMSE Z 007616	
Spring load	7900N
Stroke	min 53 mm
- Type 18/24 HF: KNORR - BREMSE Z 007618	
Spring load	7900N
Stroke	min 53 mm

Aquila Trucks Centres



 
 
 
 

 
 
 
MAIN DATA - BRAKES

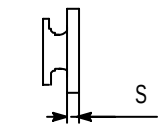	KNORR FRONT DISC BRAKES: FRONT AXLE INTERMEDIATE ADDED AXLE	5886/D
	Brake calliper cylinders: - number - diameter $\varnothing$ mm	2 68
	Brake lining thickness: - standard S mm - minimum permissible S mm	21 2
	Brake disc diameter $\varnothing$ mm	432
	Brake disc thickness: - normal S mm - minimum permissible S mm	45 $\pm$ 0.1 37 (4 mm per side)
	Operating clearance G mm	0.5 $\div$ 1
	WHEEL HUBS	
	Wheel hub bearings	2 with tapered rollers
	Hub bearing end float mm	0.16 max
	Hub bearing end float adjustment	with ring nut
	Rolling torque daNm	0.50 max.
	Oil for wheel hub bearings Tutela W 140/M DA Quantity of oil for each hub Litres Kg	0.35 0.32

     Aquila Trucks Centres

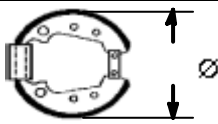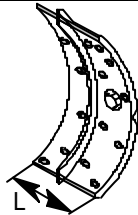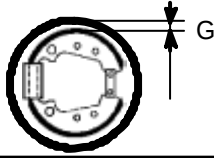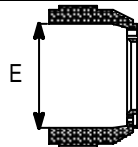MERITOR DUO-DUPLEX DRUM BRAKES		DRIVE AXLE 5985/2D
	Drum diameter: - Nominal $\varnothing$ mm - 1 st uprating $\varnothing$ mm - 2 nd uprating $\varnothing$ mm	410 ÷ 410.4 412 ÷ 412.4 414 ÷ 414.4
	Brake lining thickness: - Nominal S mm - 1 st uprating S mm - 2 nd uprating S mm - minimum permissible S _{1*} mm	22.95 23.95 24.95 6.95
	Diameter of brake linings: - Nominal $\varnothing$ mm - 1 st uprating $\varnothing$ mm - 2 nd uprating $\varnothing$ mm	408 ÷ 409 410 ÷ 411 412 ÷ 413
	Width of brake linings: L mm	179 ÷ 180
	Clearance between brake linings and drum: G mm	0.5 ÷ 1.2
	Maximum error of concentricity in the drum diameter after turning E mm	0.04
	WHEEL HUBS	
	Wheel hub bearings	Two with tapered rollers SET-RIGHT
	Hub bearing end float mm	Not adjustable
	Hub bearing end float adjustment	Tightening to torque with ring nut
	Wheel hub bearing rolling torque	0.50 max -
	Oil for wheel hub bearings Tutela W 140/M DA Litres Quantity of oil for each hub Kg	- -

     Aquila Trucks Centres

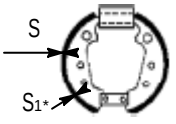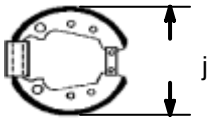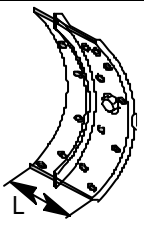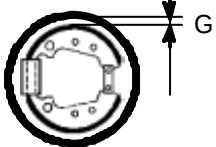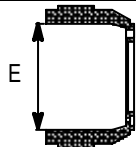MERITOR DUO-DUPLEX REAR DRUM BRAKES		H.R. REAR AXLE				REAR AXLE
		451391/2D	452146/2D	452191/2D	453291/2D	MT 23-155/2D
	Drum diameter: - Nominal $\varnothing$ mm - 1 st uprating $\varnothing$ mm - 2 nd uprating $\varnothing$ mm	410 ÷ 410.4 412 ÷ 412.4 414 ÷ 414.4				
	Brake lining thickness: - Nominal S mm - 1 st uprating S mm - 2 nd uprating S mm - minimum permissible S1* mm	22.95 23.95 24.95 6.95				
	Diameter of brake linings: - Nominal $\varnothing$ mm - 1 st uprating $\varnothing$ mm - 2 nd uprating $\varnothing$ mm	408 ÷ 409 410 ÷ 411 412 ÷ 413				
	Width of brake linings: L mm	199 ÷ 200				
	Clearance between brake linings and drum: G mm	1 ÷ 1.25				
	Maximum error of concentricity in the drum diameter after turning E mm	0.04				
	WHEEL HUBS					
	Wheel hub bearings	SET-RIGHT				Two with tapered rollers (Unit Bearing)
	Hub bearing end float mm	Not adjustable				Not adjustable, tighten according to retaining ring nut torque
	Hub bearing end float adjustment	-				
	Wheel hub bearing rolling torque	-				
	Oil for wheel hub bearings Tutela W 140/M DA Quantity of oil for each hub Litres Kg	- -				

Aquila Trucks Centres

 


BRAKING SYSTEM MAIN COMPONENTS CHECK

Since the vehicle system is approved according to European road code standards, it is necessary that the efficiency and components are periodically checked using tool 99305117.

The checks are carried out with the vehicle at a standstill, using compressed air from the tanks, recharged, with the engine running, by the compressor.








Always block the vehicle before starting any type of operation. Periodically check the gauges comparing them with a master gauge.

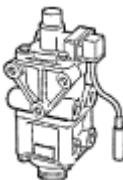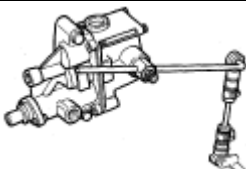DEVICE	DESIGNATION	CHECKS
	Compressor	Check the tightness of fittings and that the compressor is securely fastened. Make sure the cooling fins are not dirty.
	Drier (optional)	Operate on a bleeder valve or loosen a screwed plug (with integrated bleeder hole) to check that the air drier is operating correctly. The air should come from the tank with no signs of condensate water.
	Air tanks for: - Front axle - Rear axle - Parking+trailer - Services - Regeneration	Check the seal and anti-rust protection. Discharge the condensate from the tanks through the bleeder valve
	Four way safety valve	Check : Maximum opening pressure 8 bar Static closing pressure 6.5 ± 0.5 bar
	Duplex distributor	Press the pedal to the end of its stroke, releasing the pedal it should return immediately to its home position. Pressure restriction 7.6 ± 0.3 bar Check that the pedal gasket is not worn, that the brake control rods are well secured and lubricated with no strain. Check that the lever housings are not worn or oxidized.
	Pneumatic pressure control socket	Ensure that the protection plugs are inserted
	Parking brake distributor (with checking position)	Operate on the parking brake distributor until it triggers, the gauge on the control socket is to indicate the pressure discharge 0 bar in 1 second. The automatic coupling joint pipe and the gauge are to indicate at the same time a pressure of 8.5 bar
	Engine brake control pedal distributor	Check functioning and seal
	Load sensing valve	The plate indicates all the set values to be compared to those found when checking and adjusting.


(continued)

Aquila Trucks Centres

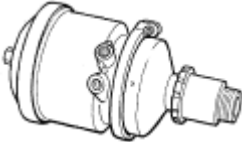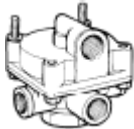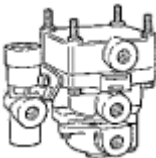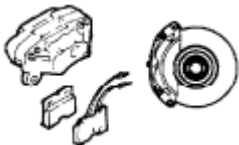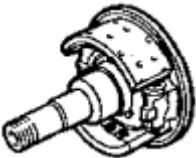	Diaphragm cylinder	Check fastening, integrity and seal The bleeder hole should be directed downwards and not clogged
	Combined cylinder	Check fastening, integrity and seal. The bleeder hole should be directed downwards and not clogged
	Relay valve	Check operation and seal assessing the speed of brake cylinder activation
	Engine brake control operator cylinder	Check operation and seal
	Pressure reducer	Check set pressure (see specifications and data table) Check operation
	Triple control servo distributor for trailer braking, with incorporated modulated power steering	Fill the tank. Connect a gauge to the automatic coupling head and to a variable coupling head. At a pressure of 1 bar, coming from the duplex distributor, the variable coupling head should have a pressure between 0.8 and 1.5 bar. Make a full braking (vehicle at a standstill). Prescribed pressure must result at the coupling head, or a pressure that is 0.5 bar less. Activate the parking brake; at the variable coupling head the pressure should remain the same, or reduced by 0.5 bar.
	Coupling heads	Check there is no dirt or damage on the coupling guides. After coupling, operate the brake pedal and check the seal and stability between the coupling heads when delivering air at 7.5 bar. Check there are no air leaks from the coupling gaskets.
	Rear drum brakes	Releasing the pedal the shoes should return quickly and evenly to home position. Check backlash between shoes and drum. Check thickness of brake linings.
	Disc brake calliper Brake disc Brake linings	Check the wear of the brake linings, scoring and wear of the brake disc, efficiency of the pistons, wear of the dust caps.
	Drum brakes	When the pressure on the pedal stops, the shoes need to return to the rest position quickly and evenly on all the wheels. Check the clearance between shoes and drum. Check the thickness of the brake linings.

(continued)

Aquila Trucks Centres

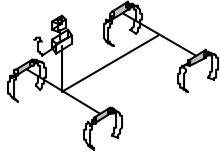

Pipes and fittings

Ensure that metal pipes are in perfect condition, with no dents or cracks. Polyamide hoses must have no cracks, cuts or scores. Also make sure that they are not near sharp edges of the bodywork or chassis that could damage them. Check that all the brackets fastening the pipes are securely fixed - loose fastenings cause vibrations that could give rise to breakages. Check that polyamide hoses are not in contact with oil or mineral grease, rubber solvents. Press hard on the brake pedal and check that the pipes are not blown. Check there are no leaks from fittings, otherwise tighten them fully, taking care when tightening not to cause irregular pipe torsion. In all the above cases the parts are to be replaced if there is a minimum of doubt as to their efficiency. Apart from their condition, it is recommended to replace hoses after considerable mileage, or after a period of long vehicle use. This will avoid sudden breakages due to age and fatigue.

Pneumatic system seal with engine off below the starting pressure

This check is made on threaded couplings. Deliver air at a pressure of not less than 5 bar and spread quite thick soapy water on the joints and couplings using a soft brush, then observe carefully for signs of leaks. An air leak is within tolerance if it corresponds to a soap bubble with a diameter of 25 mm in 5 seconds, or a pressure drop within 10 minutes amounting to 2% of the disengagement pressure (0.22 ± 0.02 bar).

Pneumatic system seal in partial braking range with 3 bar.


For 3 minutes the pressure must remain stabilized in the pneumatic system. The check is made with the parking brake deactivated.

Aquila Trucks Centres

BRAKING SYSTEM MAIN COMPONENTS

790510 Compressor

Figure 24

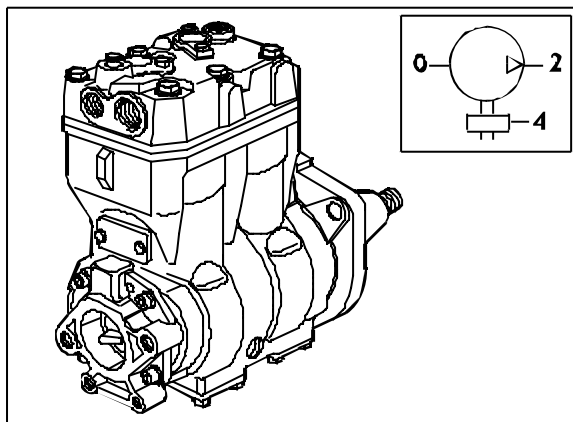


60231

Produces sufficient compressed air to feed the braking system and ancillary services.

Head fastening screws tightening torque

Figure 25

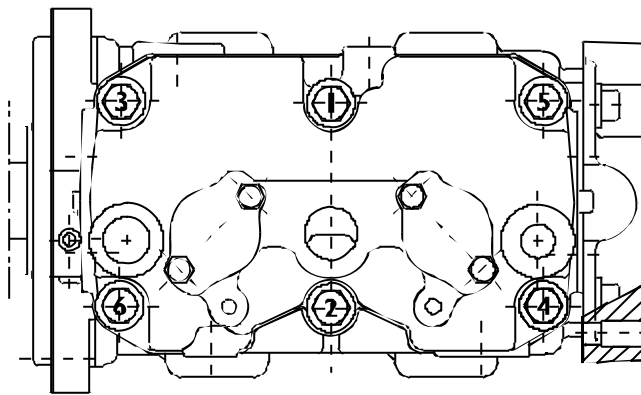

60232

Tighten cylinder head fastening screws to the specified torque following the sequence shown in the figure.


Troubleshooting

TROUBLE	POSSIBLE CAUSES	CURE
Oil leakage from flange on outer side	Incorrect driving torque	Tighten the screws to the prescribed values
	Flange body sealing surface not perfectly flat	Check the sealing surfaces, replace faulty parts or straighten them
	Broken gasket	Replace the gasket
	Shaft gasket damaged	Replace the gasket
Oil leakage from head	Damaged scraper ring (this can be seen because the whole seal seat is shiny)	Replace the entire piston
	Scraper ring is badly fitted	Fit in place with the TOP inscription turned towards the compressor head
	Scraper rings and piston rings are all on the same vertical line.	Fit in place at 120° with reference to each other
	Scored or ovalized cylinder	Grind the cylinder and fit a bigger piston
No compression at all	Deteriorated compression or intake valve	Replace the faulty parts
	Deteriorated compression or intake valve	Fit the rings at 120° with reference to each other
	Piston perforated or piston elements broken	Replace the entire piston
	Damaged gasket	Replace the gaskets
	Energy-saving device set on open during charging stage.	Replace the cylinder heads
Poor efficiency	Worn piston rings	Replace the piston (and piston rings)
	Air leakage between cylinder and head	Replace the gasket and tighten the screws to the prescribed torque
	Deteriorated energy saving unit, intake or compression valves	Replace the faulty parts
	Too much backlash between piston and cylinder	Grind the cylinder and fit a bigger piston
	Particles of carbonized oil between the intake and compression valves	Clean the valves
Mechanical noises	Too much backlash between small end and pin, between pin and piston hole, between shaft and big end, between shaft and bronze caps and between flanges and shaft.	Check the tolerances of the couplings involved
	Too much backlash between piston and cylinder	Grind the cylinder and fit a bigger piston
	Excessive deposits between piston and cylinder head caused by burnt oil.	Clean the incrustations and replace the valves
Water seepage	Head gasket or contact surfaces scored and uneven	Replace the faulty parts

Aquila Trucks Centres

A.P.U. (Air Processing Unit)

Figure 26

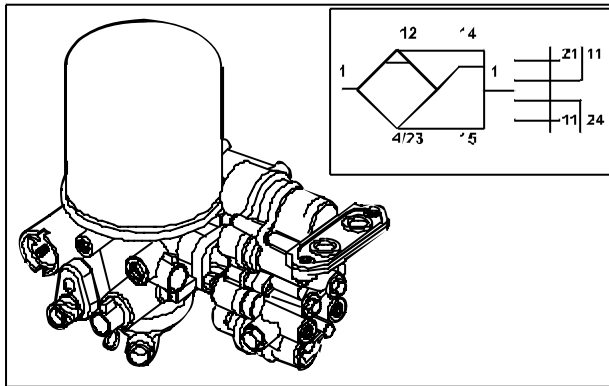

72019

Its function is to keep the air clean and at the right moisture level in the distribution system and keep the pressure needed for the operation of the connected systems at the outlet. This component integrates the functions of 4-way pressure regulator, pressure reduction unit for parking, services and trailer.


A.P.U. Troubleshooting (Drier + four-way protection valve)

PROBLEM	POSSIBLE CAUSE	REMEDY
Too much condensate in the circuit	Clogged filter cartridge	Replace the cartridge
The set pressure is not reached in the tank	Air leaking from safety valve	Overhaul the equipment and replace worn components
	Worn sealing gaskets	Overhaul the equipment and replace worn components
Air loss at discharge	Piston seal is insufficient	Overhaul the equipment and replace worn components
Air leaks around the plugs	Leakage from the valves in the four sections.	Overhaul the device, replacing the worn parts.
Air leaks if a section breaks down	Defective operation of the check valves.	Overhaul the device, replacing the worn parts if necessary or replace the device.

Aquila Trucks Centres

793110 Duplex distributor


Figure 27

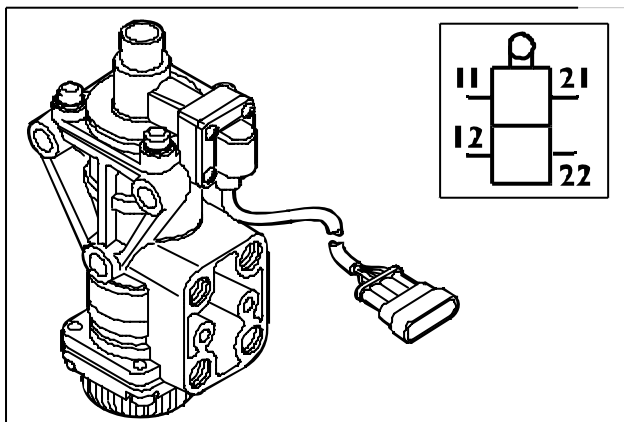

73914

Takes the air from the tank and distributes it to the braking elements. It is autorestrictive i.e. it limits the air output to an established maximum pressure and as a result there is a greater availability of energy and a maximum constant braking pressure regardless of the pressure variations in the tanks. On vehicles fitted out as trucks duplex distributors are fitted to correct the braking force of the front axle elements according to the corrections made by the braking control (where present).

Figure 28

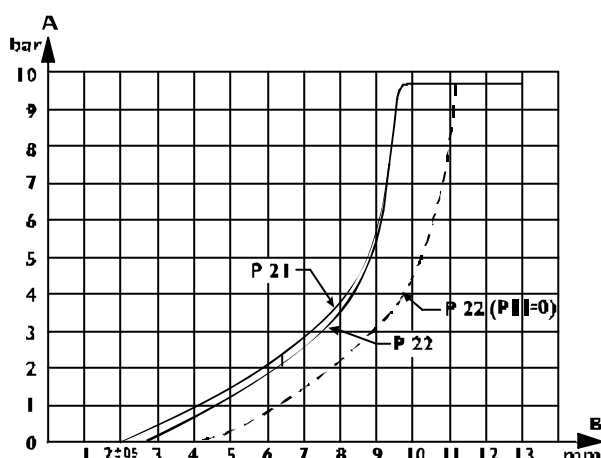

90639

PERFORMANCE DIAGRAM

A = Exit pressure p21/p22 [bar]

B = Shoe travel [mm]


Troubleshooting

PROBLEM	POSSIBLE CAUSE	REMEDY
Air escapes from the discharge hole	Leaks from outlet ducts due to wear on seal gaskets	Overhaul the device and replace worn components
Irregular autorestriction of distributor	Auto restriction higher or lower than required	Adjust the device through the relevant screw
Vibrations when braking	Worn springs	Overhaul the device and replace faulty components
	Air leaks due to piston gasket seals in the two sections	Overhaul the device and replace faulty components
Irregular operation of stop lamp control switch	The electric circuit does not close	Replace the switch
	The electric circuit does not open	Replace the switch

Aquila Trucks Centres

793321 Pressure reducer

Figure 29

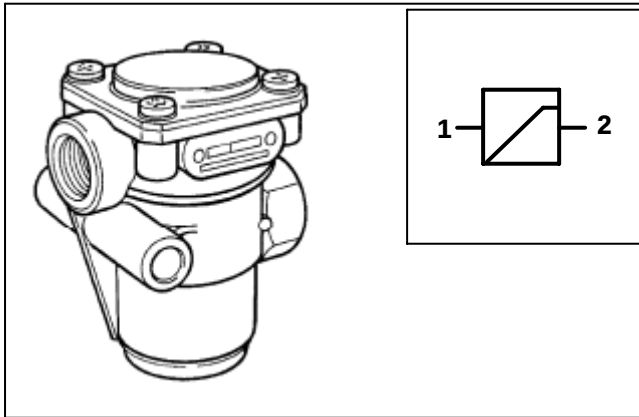

34953

Cuts off the compressed air flow to the user when the pressure in the latter reaches a determined value (set point).

Setting at the bench


Set the element on the test bench and connect fittings 1 and 2 through the pipes to the gauge and the air supply. Correct to the prescribed value through the adjusting screw and at the same time check the perfect seal of the unit.

Troubleshooting

PROBLEM	POSSIBLE CAUSE	REMEDY
Pressure at the outlet fitting is different to the set value	Valve not adjusted properly. Leaks from the seal rings Faulty piston and relevant seat	Adjust the unit Overhaul the unit replacing damaged components Replace the unit

793332 Triple control servo distributor


Figure 30

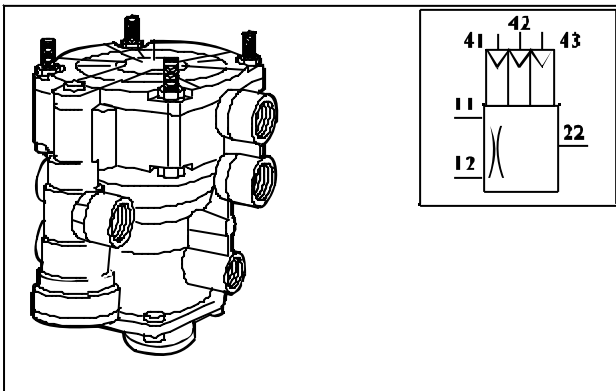

98886

KNORR - BREMSE AC 597B

Figure 31

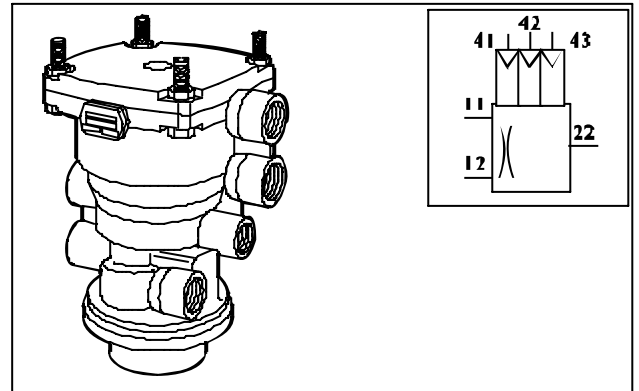

98887

WABCO 973009013

The unit, controlled by two separate circuits of the duplex distributor and the tractor spring brake circuit, controls the trailer braking. It is also equipped with a predominance regulating device fitted on the lower external part. The unit incorporates a device to actuate the trailer brake should there be a fault in the control pipe.

Predominance adjustment


The unit is equipped with a predominance regulating device.

Aquila Trucks Centres

WABCØ73 009 013

KNORR BREMSE AC 597B


Figure 32

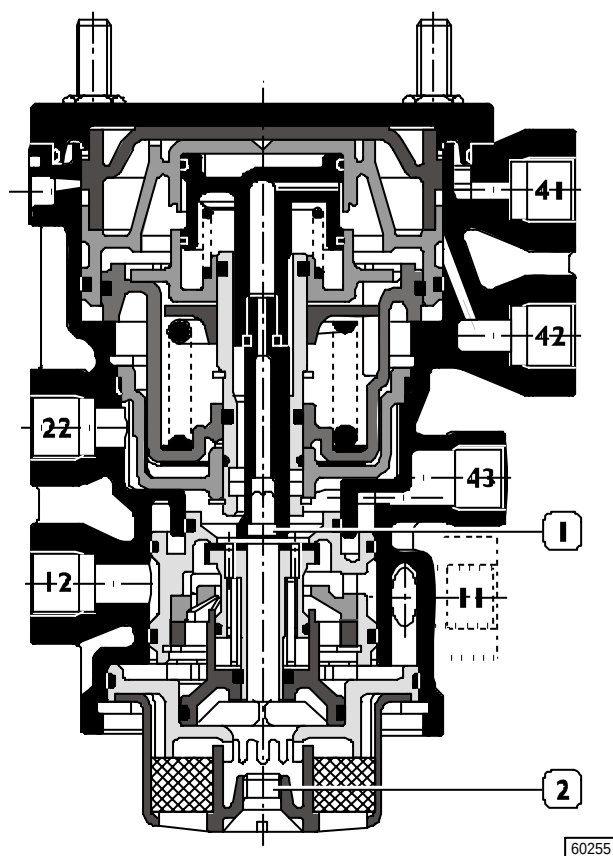

To adjust predominance for servo distributor KNORR - BREMSE AC 597 B, perform the following sequence of operations:

- Remove screw (2) from silencer body.
- Fit a setscrew wrench in the hole through the silencer body and operate on body hexagonal hole (1).
- Rotate CLOCKWISE to increase predominance.
- Rotate COUNTERCLOCKWISE to decrease predominance.

Figure 33

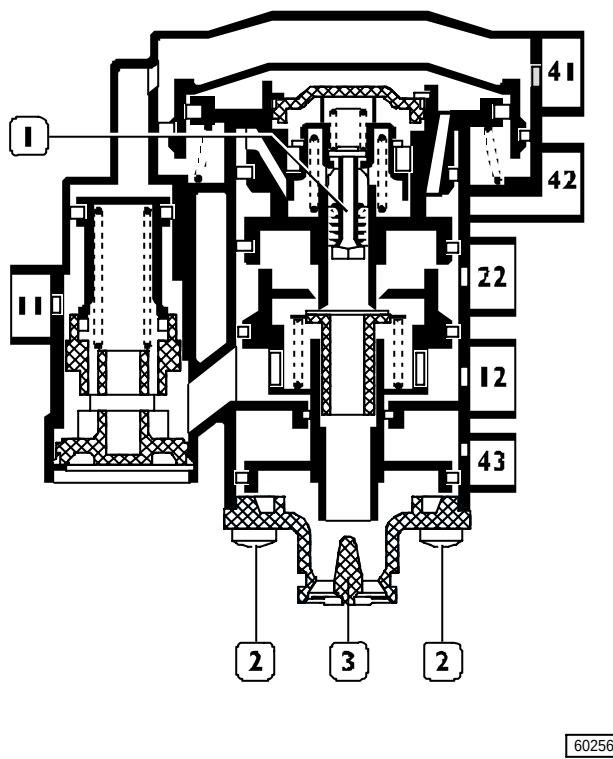

To adjust predominance for servo distributor WABCO 973 009013, perform the following sequence of operations:

- Remove screws (1) and then remove the cover (3).
- Operate on predominance adjusting screw (1).
- Rotate CLOCKWISE to decrease predominance.
- Rotate COUNTERCLOCKWISE to increase predominance.


Troubleshooting

PROBLEM	POSSIBLE CAUSE	REMEDY
Air leakage from exhaust when in resting condition	Leaks from sealing gaskets. Faulty exhaust valve and valve seat.	Overhaul the unit and replace faulty components Overhaul the unit and replace faulty components
Outlet pressures are different from the established values	Wrong predominance value Air leakage from sealing gaskets Worn or faulty pistons and seats Strained springs Wrong predominance value.	Adjust predominance Overhaul the unit and replace faulty components Overhaul the unit and replace faulty components Overhaul the unit and replace faulty components Perform predominance adjustment.

Aquila Trucks Centres

798510 Coupling heads

Figure 34

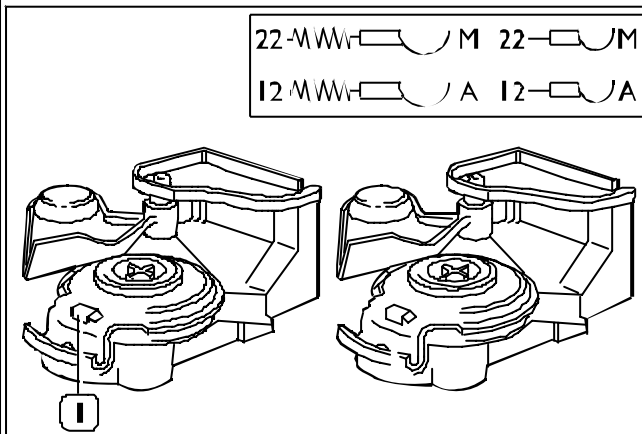


52871

The version for the "Variable" pipe has a yellow cover whereas the version for the "Automatic" pipe has a red cover and a side safety ridge (1). Safety ridges are used to prevent improper coupling.

793319 Check valve (towing vehicles)

Figure 35

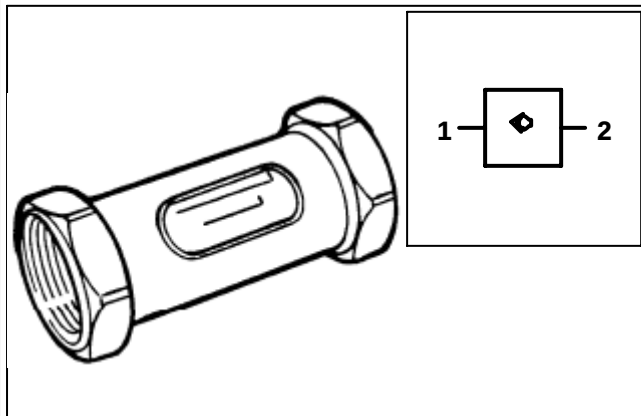


33987

Enables the compressed air to flow in the direction of the arrow marked on the housing and prevents reflux.

794310 Parking brakes control hand distributor (for towing vehicles)

Figure 36

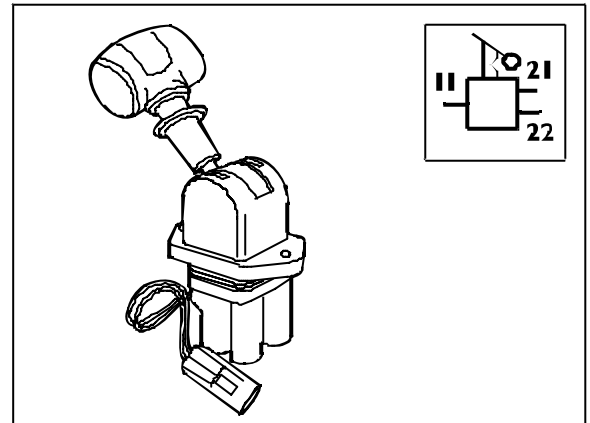

79514

The device enables emergency and parking braking of the tractor and the trailer.
The device also enables the checking of the tractor braking effect. This operation is necessary when the vehicle is parked on very steep roads.


Troubleshooting

PROBLEM	POSSIBLE CAUSE	REMEDY
Air escapes from the exhaust with control lever		
In braking release position	Faulty exhaust valve, relevant seat or seal ring	Check and overhaul the unit, replace faulty components. Carefully clean the components.
In braking position	Worn control valve, seal rings and component control valve	Check and overhaul the unit, replace faulty components. Carefully clean the components.
It is difficult to turn the control lever	Interference inside the distributor	Overhaul the unit and moisten all the sliding parts.

Aquila Trucks Centres

794310 Parking brakes control hand distributor (stand-alone vehicles)

Figure 37

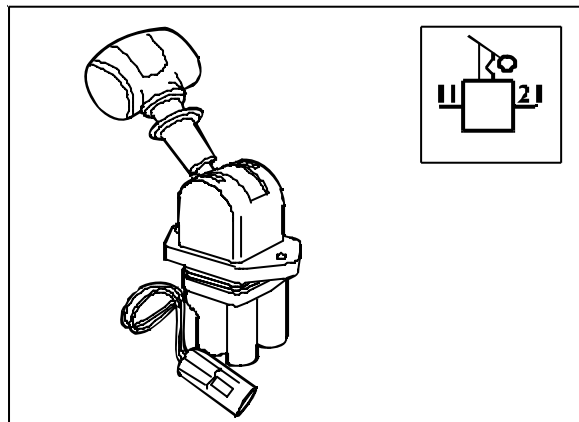

79515

The unit, inserted in the tractor parking brake circuit enables the actuation of the vehicle emergency and parking braking discharging the air contained in the spring cylinders.


Troubleshooting

PROBLEM	POSSIBLE CAUSE	REMEDY
Air leakage from the discharge with distributor lever in braking position	Worn piston, exhaust valve, sealing rings.	Clean carefully, ensure that all the rubber components and relevant seats are in perfect condition. Overhaul the unit and replace faulty components
Air leakage from the discharge with distributor lever in emergency or parking braking position.	Worn piston and relevant seal ring.	Clean carefully and check the components, overhaul the unit and replace faulty parts.
Air leakage from distributor control lever cover.	Worn plate, gaskets seal rings.	Clean the components carefully, check the seal and gasket surfaces. Ensure that the rubber components and relevant seats are in perfect condition. Overhaul the unit and replace faulty or worn components, if necessary restore contact surfaces.
The distributor control lever is difficult to turn	Interference inside the distributor.	Clean carefully and check all the components. Overhaul the unit and replace faulty components When fitting in place, slightly grease all sliding parts. If faults or wear are found that could compromise the functioning, replace the complete unit

Aquila Trucks Centres

793331 Relay valves

Figure 38

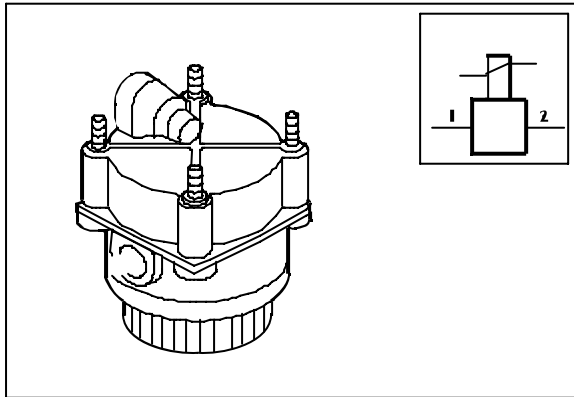

90402

KNORR - BREMSE AC 574 AXY


The apparatus allows for reducing braking system intervention time for front axis (valve of type KNORR BREMSE RP2A) or rear axis (valve of type KNORR - BREMSE AC 574 AXY).

Troubleshooting

PROBLEM	POSSIBLE CAUSE	REMEDY
Air leakage from exhaust with control pipe in discharge condition	Leakage from the delivery or from the seal rings	Overhaul the unit and replace faulty components
Air escapes from the discharge with supply in the control pipe	Leakage from the piston seal rings or from the exhaust valve	Overhaul the unit and replace the faulty parts

794911 Diaphragm brake cylinder

Figure 39

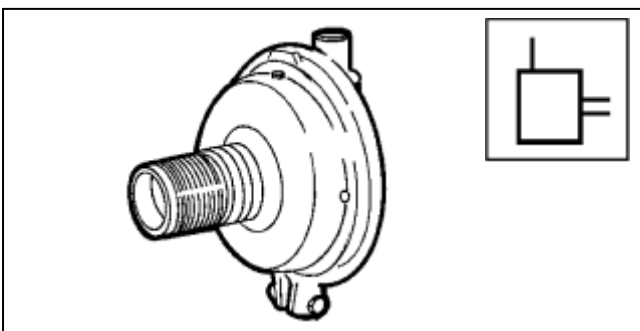


35798

The unit transmits the force impressed by the compressed air when the brake pedal is pressed to the mechanical service braking device. In case of failure, the complete cylinder is to be replaced (the figure shows the drum brakes version).

Aquila Trucks Centres

794922 Combined brake cylinder

Figure 40

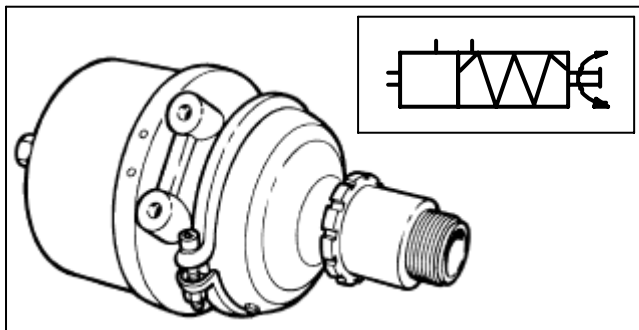


36744

This unit features two parts: one with diaphragm for service braking and one with spring for the parking and emergency braking in the case of failure in the brake system.

Combined cylinder emergency relief device

Figure 41

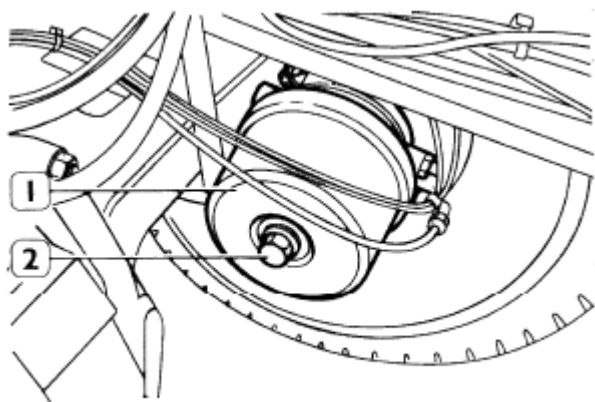

36745


if it is not possible to pneumatically feed the spring section of the combined cylinder (1) it is possible to manually release the braking to permit towing. To release the brake loosen the screw (2) to the end of its stroke.

Troubleshooting

PROBLEM	POSSIBLE CAUSE	REMEDY
Air escapes from the exhaust or from the check ring.	Perforated or broken diaphragm. Diaphragm lip broken. Check ring fastening screws have become loose.	Replace the diaphragm Tighten the screws
Air escapes from the diaphragm section feed	Spring section components are strained.	Overhaul the unit and replace worn components

REPAIR OPERATIONS

Figure 42

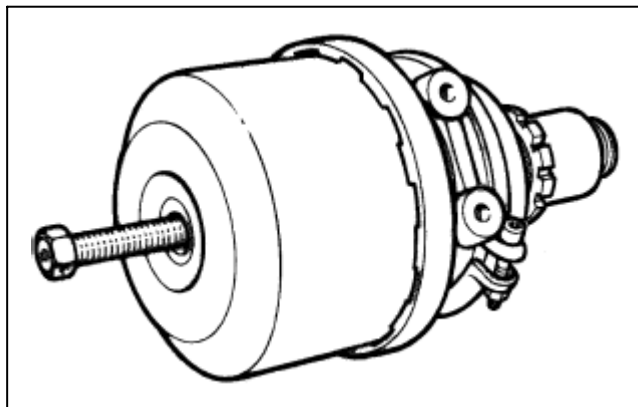

36476

Before removing the combined cylinder from the vehicle manually release the braking of the combined cylinder as described above.



It is recommended, before removal, to carefully clean mud or other impurities from external parts as these could damage the cylinder if they were to infiltrate into it.

If the cylinder spring section is faulty, do not remove this part since this operation could be dangerous for the operator.

Aquila Trucks Centres

Troubleshooting

FAULT	POSSIBLE CAUSE	REMEDY
Air leak from outlet during braking	Gasket on control piston Faulty exhaust valve or relevant seat	Overhaul the unit and replace worn components
Air leakage from couplings	Not tightened to prescribed torque	Tighten couplings to specified torque

ANTI-SKID SYSTEM

ABS (Anti-Lock Brake System)

The braking of a moving vehicle and the consequent deceleration and stopping distances depend above all on the grip between the surfaces of the tyres and the road.

With a fully efficient braking system, a further improvement in braking can only be achieved by acting on the friction of the tyres or on the grade of the road surface.

When faced with especially tricky situations, such as poor grip due to a wet or icy road surface, the driver is forced to moderate use of the brakes in order to avoid partially locking one or more wheels, with the risk of skidding dangerously.

The function of the "ABS" is therefore to ensure vehicle stability (in all braking conditions), preventing the wheels from locking irrespective of the state of the road surface, so as to ensure the available grip is made full use of.

Even in the case of emergency braking, the system makes it possible to keep direction, that is to turn the steering wheel to avoid obstacles with no risk of skidding.

In short, the anti-lock brake system (ABS):

- Prevents the wheels locking when the vehicle is braking, no matter what grip is available on the road.
- Shortens stopping distances.
- Provides safety for the driver who can keep the vehicle's stability and direction.

ASR (Anti-Slip Regulator) system

The driving wheels of an industrial vehicle slipping during acceleration has harmful consequences, such as a reduction in the force of traction, loss of grip between tyres and road surface with consequent loss of control over the vehicle.

The function of the ASR is to prevent undesired wheel slip, both when accelerating and on bends, especially on icy or slippery roads, or for "off-road" use in mud and water.

In short, the ASR anti-slip regulator system:

- Prevents the driving wheels slipping, both on starting and when travelling, with differential braking on the wheels and, if necessary, optimizing the engine torque.
- Keeps an optimal value of traction when the vehicle is on roads with a low grip coefficient.
- Improves stability especially on bends with a low grip coefficient.
- Limits tyre wear.

EBL (Electronic Brakes Limiter)

The EBL function checks the rear axle wheel "slip", comparing it with the speed of the wheels of the front axle.


The control unit input data are the wheel speed and braking pressure measured by the pressure sensor installed upstream from the rear axle ABS modulators.

On the basis of these values, the control unit calculates the speed of the vehicle, the rear axle wheel "slip" and the minimum deceleration contemplated.

The EBL function is activated when the driver applies an excessive braking force for the conditions of load on the vehicle, thereby reducing the braking force on the rear axle.

Pressure sensor

Figure 43

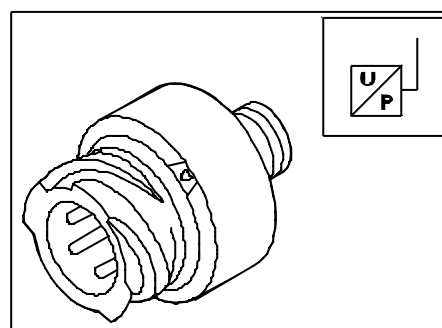


52722

In ABS/EBL systems, its job is to inform the electronic control unit of the extent of action required by the driver. In EBS systems, this component is integrated in the front axle, rear axle and trailer control valves.

Aquila Trucks Centres

526711 Electronic control unit

Figure 44

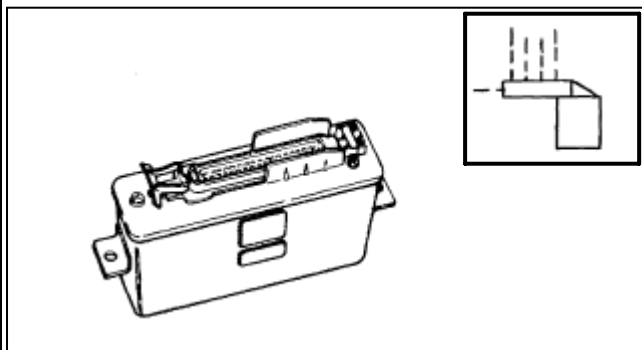

32370

The electronic control unit is the brain of the system. It controls the system solenoid valve according to the signals received from the wheel revolutions sensor.

Each channel features four function circuits; the first is the input circuit that receives the analog signals from the sensor on the relevant wheel, they are debugged and converted to digital data through the measurement of the cycle duration. There is also a main circuit which has a microprocessor to process the information received from the input circuit.

The microprocessor contains a sophisticated program that enables it to determine the wheel acceleration and deceleration values, and to make the logic combinations of the various adjustment signals.


When necessary it sends out two command signals that are sent to the relevant anti-lock distributor through the third control unit circuit, to suitably adjust the braking pressure.

The fourth and last circuit is the safety circuit that checks the efficiency of the various system components.

In the case of a failure, it not only informs the driver by switching on the relevant warning indicator on the dashboard, but it also automatically disconnects the entire ABS system, leaving the conventional braking system fully efficient.

526714 Brake anti-lock distributor

Figure 45

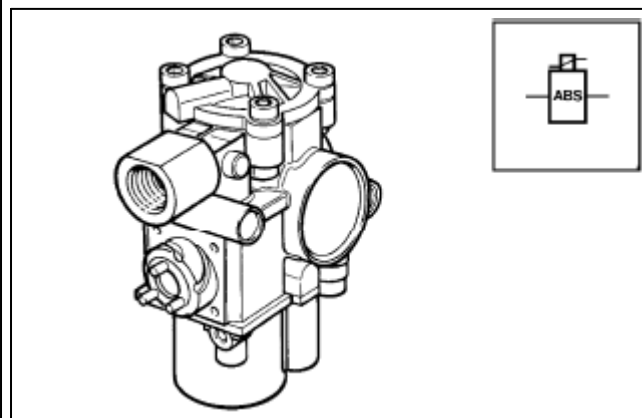


35805

This component modulates the air pressure in the brake circuit. When the electronic control unit detects a wheel with a tendency to lock, the valve intercepts the brake cylinder feed, thus preventing the wheel locking.

526724 Electropneumatic valve for ASR

Figure 46

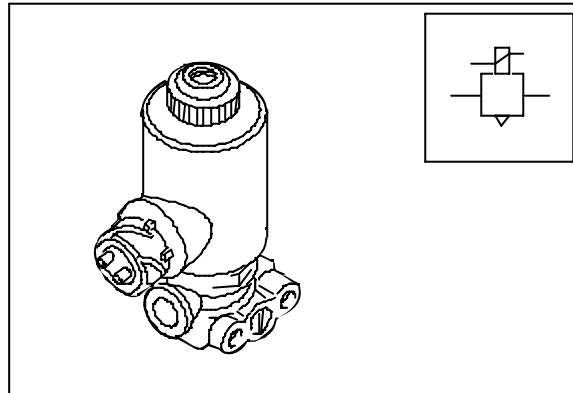

90143


The device brakes the driving wheels, through the brake anti-locking modulator, whenever it detects slipping of one or more wheels under traction.

The valve is a normally closed type.

When the electronic control unit detects slipping of one or more driving wheels, the valve is energized and enables air to pass to the brake anti-lock modulators that brake the relevant wheels. The solenoid valve de-energizes when the wheels reach the correct friction value on the road surface.

526713 Rpm sensors**566712 Phonic wheels**

Figure 47

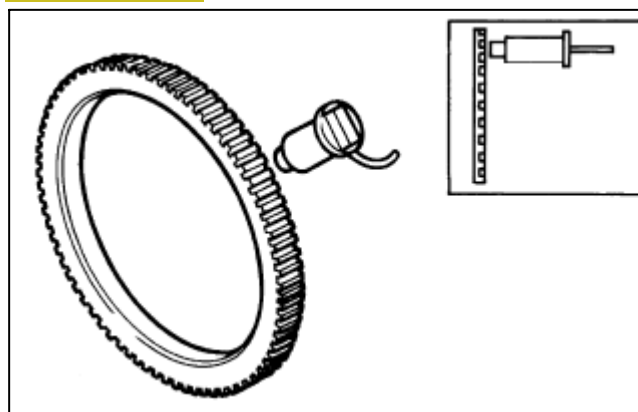

35383

The revolutions sensors and phonic wheels find the revolutions of the respective wheels.


The phonic wheel is housed on the wheel hub and turns at the same speed as the wheel. It generates in the sensors, by induction, alternate voltages having a frequency that is proportional to the rotation speed of the wheel.

These voltage signals are transmitted to the electronic control unit for processing. Each wheel has a sensor and a phonic wheel installed. This enables individual adjustment of the braking pressure for each wheel, thus perfecting the driving stability and braking space.


Aquila Trucks Centres

5274 FRONT DISC BRAKES SN7 TYPE

Figure 48

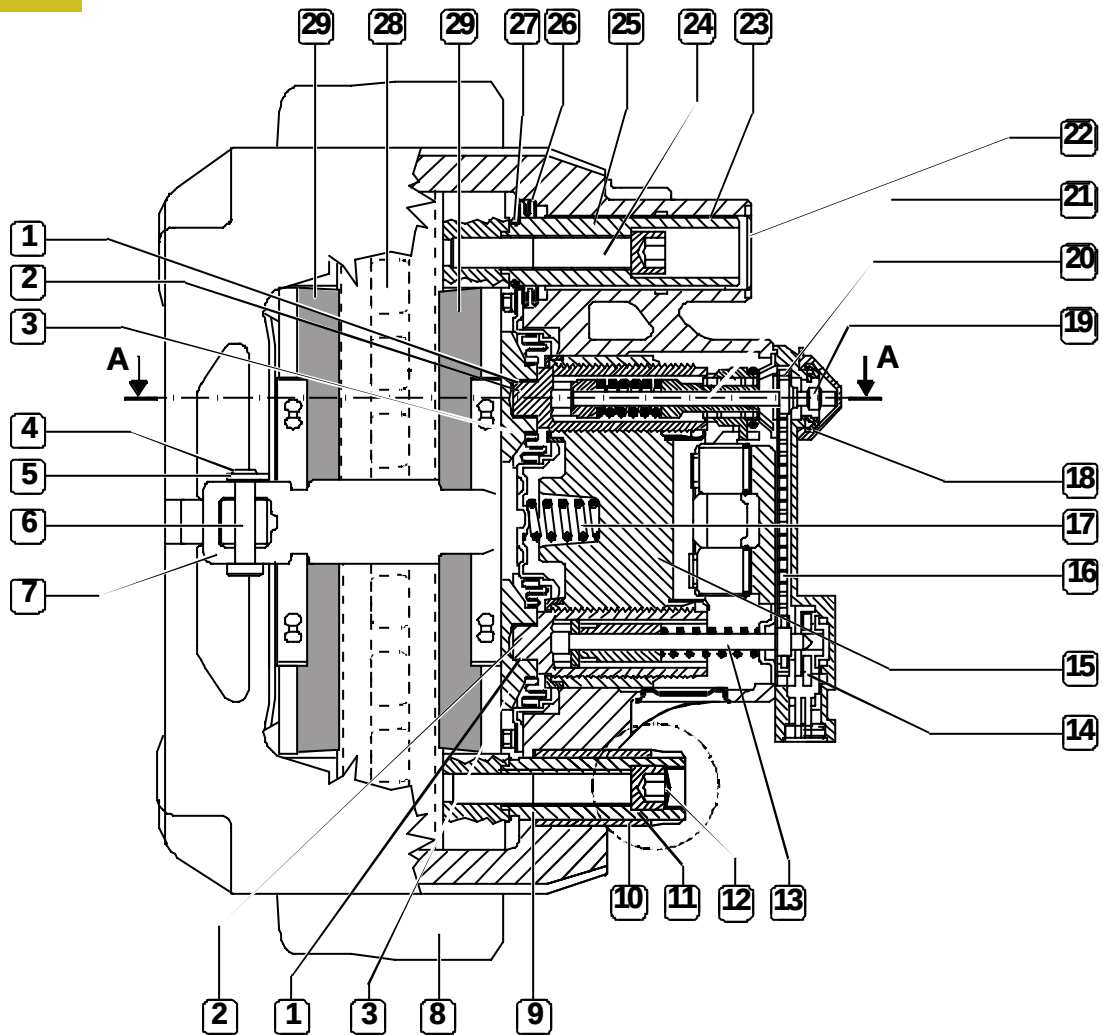

84420

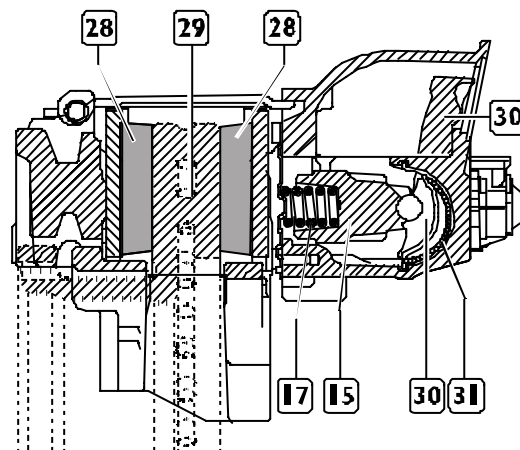

78396

SEC. AA

1. Dry bush - 2. Threaded hose - 3. Piston - 4. Washer - 5. Spring split pin - 6. Pin - 7. Retaining plate - 8. Supporting plate - 9. Guide pin - 10. Guide bush - 11. Sliding pin - 12. Plug - 13. Dragging device - 14. Wear sensor - 15. Rear axle - 16. Chain - 17. Spring - 18. Cover - 19. Adapter - 20. Chain gear - 21. Adjusting device - 22. Cover - 23. Brass bush - 24. Sliding pin - 25. Sliding bush - 26. Inner protection - 27. Ring - 28. Brake lining - 29. Brake disc body - 30. Lever - 31. Cam bearing.

Aquila Trucks Centres

Operation (See previous figure)**Braking stage**

During braking, the diaphragm cylinder rod presses down on the lever (30).

The force is transferred to the axle (15) by the bearing in an off - centered position (31)

Through the threaded sleeves (2) and pistons (3), the force is conveyed to the inner braking lining (28).

Once the play between brake linings (28) and brake disc (29) has been recovered, the force is conveyed to the outer brake lining (28), due to brake caliper displacement.

The brake linings (28) pressing on the brake disc (29) produce the braking power.

Releasing stage

As soon as the pressure on the brake is reduced, the pressure spring (17), the rear axle (15) along with threaded sleeves (2) and lever (32) go back to their original positions.

Automatic play recovery


The brake is equipped with automatic adjustment device, which keeps the operating play between brake linings and brake disc constant.

Every time the brake is operated, the adjustment device (21), which is integral with the lever (32), is automatically started. If worn brake linings and brake discs increase the operating play, the adjustment device (21) and drag link (13) turn the threaded sleeves (2) so to recover said increase in play.

The operating clearance should be between 0.6 and 1.1 mm; lower clearances might cause overheating problems.

CHECKS**Checking the automatic play recovery system efficiency**


Figure 49

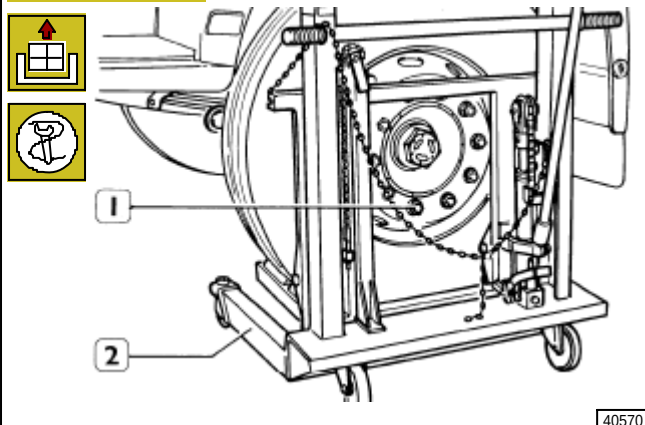

40570

Remove the lock nuts and wheels, using hydraulic stand 99321024 (1).

Figure 50

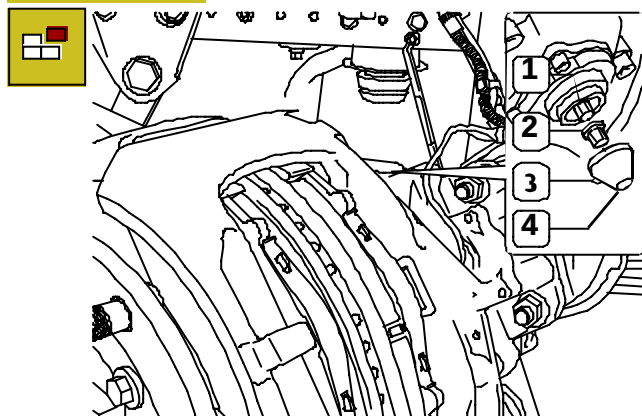

78622


Remove the plug (4) using the tab (3) and make sure the adapter (2) is not lost.



Never turn the adjusting pinion (1) without fitting the adapter (2) first. If the adapter cut torque is overcome, the adapter gets broken.

Try again with a new adapter and if also in this case it gets broken, the caliper should be replaced because there is an inner damage.

Figure 51

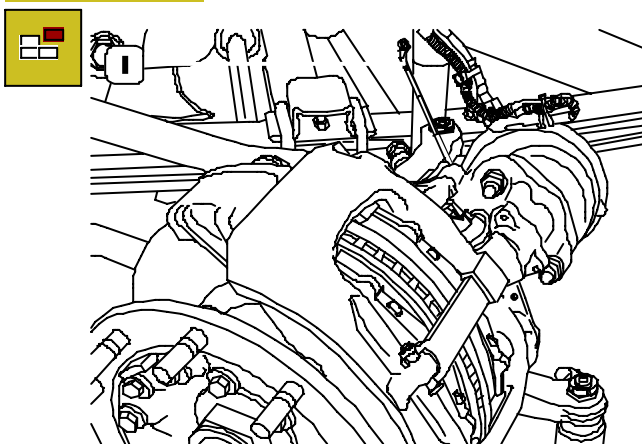

60759

Using a suitable wrench (1), rotate the adjustment pinion counterclockwise by 2-3 with the adapter (2, Figure 50) installed turns, thus increasing the play between brake linings and brake disc.


Operate the brakes for about 5-10 times and make sure the wrench (1) moves clockwise with small increments, up to complete recover of play between braking linings and brake disc.

Otherwise, i.e. if the wrench does not turn, turns just once or turns in both directions, this means the automatic play recovery system is faulty. Replace the caliper, following the procedure given subsequently, then fit back the wheels.

Aquila Trucks Centres

SN7 brake caliper components

Figure 52

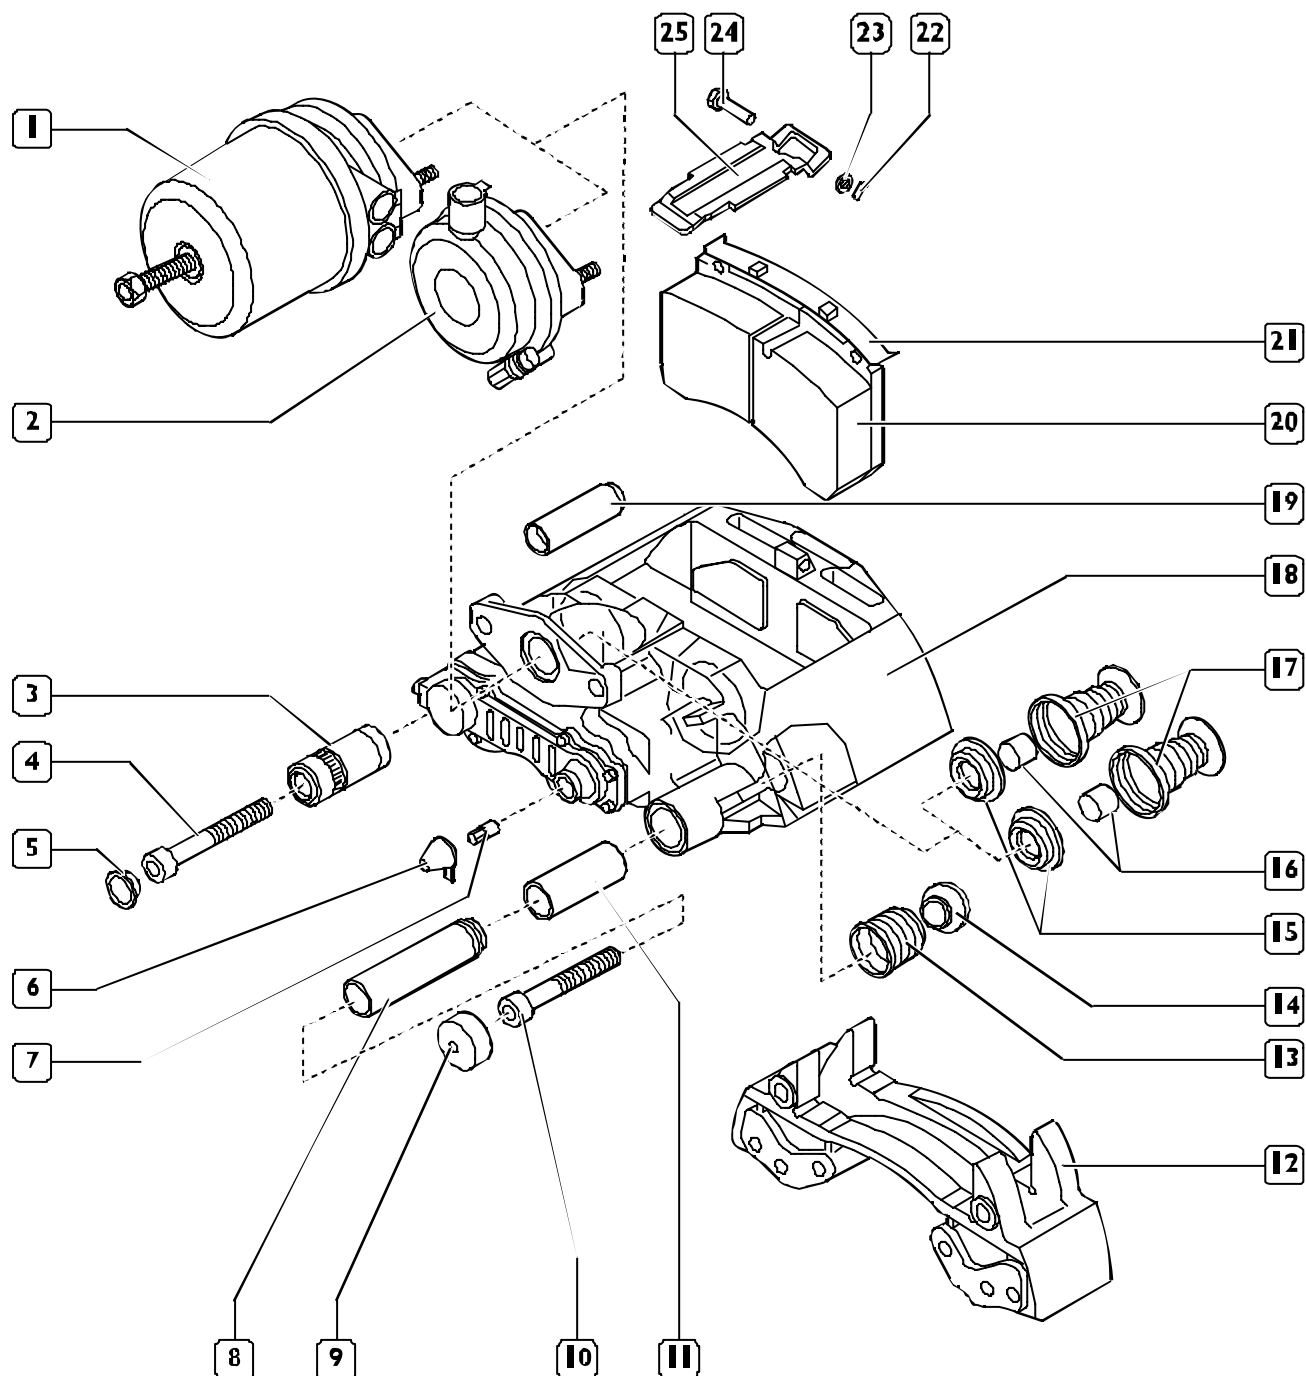


78628

1. Combined brake cylinder - 2. Membrane brake cylinder - 3. Rubber bushes - 4. Sliding pins - 5. Plug - 6. Adjusting unit cover - 7. Adapter - 8. Guide pin - 9. Cover - 10. Sliding pin - 11. Brass bushes - 12. Carrying plate - 13. Protection cowl - 14. Ring - 15. Inner seals - 16. Bushes - 17. Plungers - 18. Brake caliper - 19. Guide pin - 20. Braking seal - 21. Spring - 22. Split pin - 23. Washer - 24. Pintle - 25. Check plate.

Aquila Trucks Centres

SN7 brake calliper braking gaskets thickness check

Figure 53

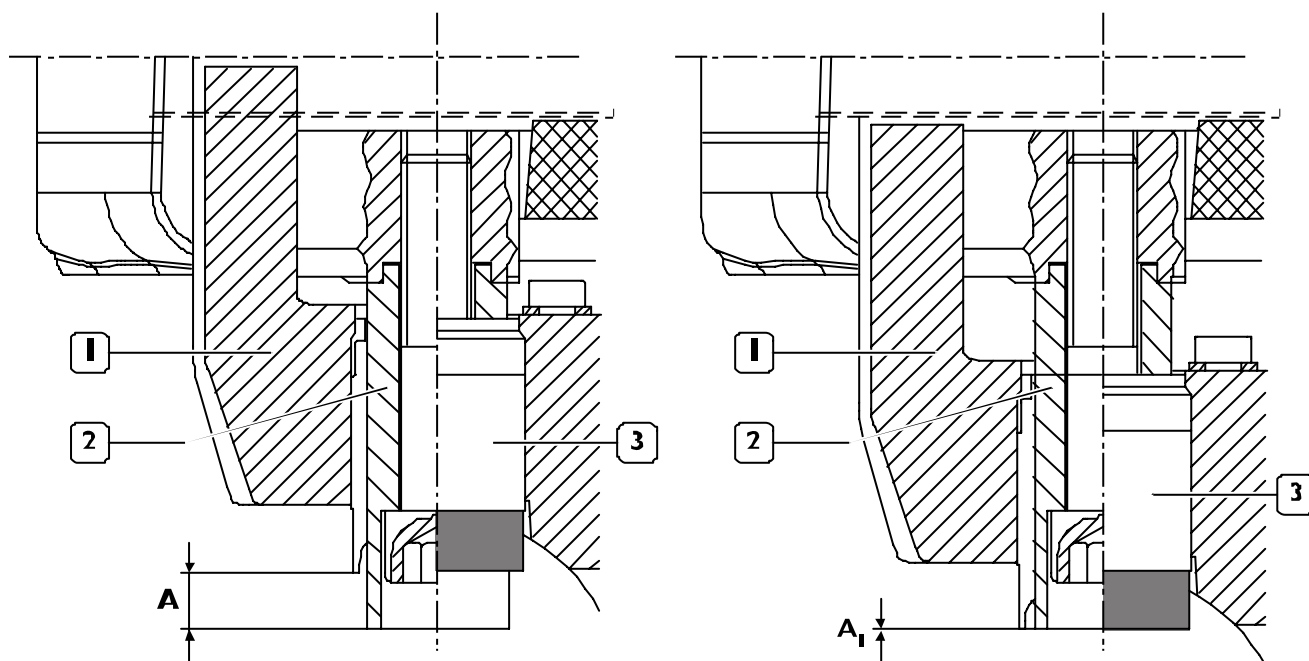

78625


1. Brake caliper - 2. Sliding bush - 3. Rubber bush - A. Bush position with new seals - A_1 . Bush position with worn out braking seals (perform an accurate check with wheels dismantled).

The condition of braking seals can be visually determined without dismantling wheels, by checking that $A > 1$ mm. Otherwise, it is needed to dismantle the wheels and perform an accurate check as described below.

Aquila Trucks Centres


527417 Replacing brake linings

Figure 54

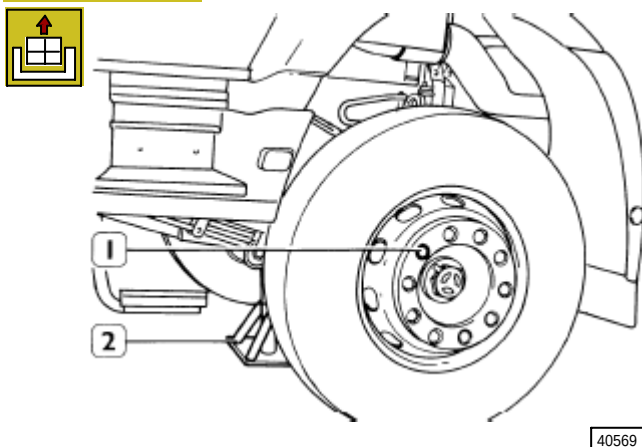


Set the vehicle on flat ground and lock the rear wheels. Loosen the nuts (1) fixing the front wheels. Lift the vehicle at the front with a hydraulic lift and set it on two stands (2).

Figure 55

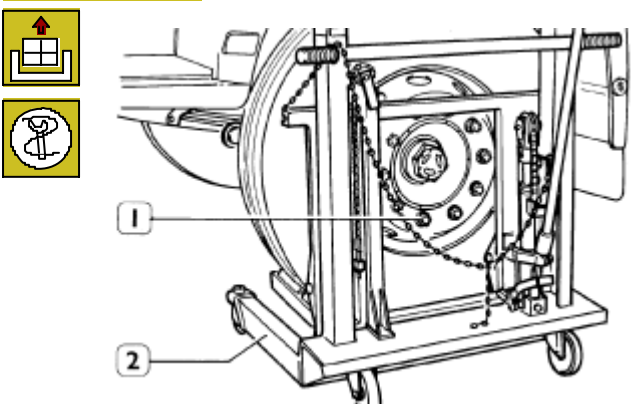


Unscrew the fixing nuts (1) and with the aid of the hydraulic trolley 99321024 (1) remove the wheels.

Figure 56

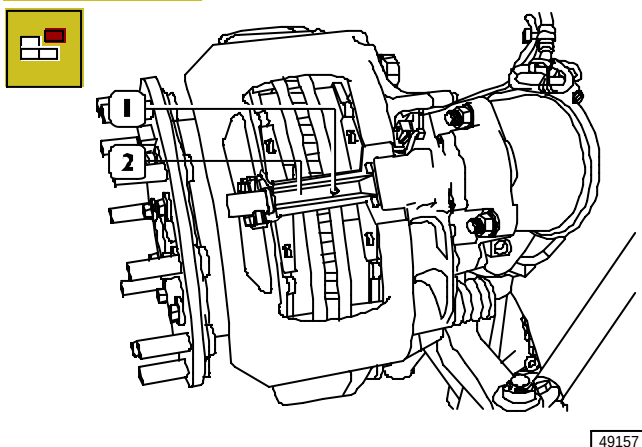


Remove the screw (1) and the wear sensor cable retaining plate (2).

Figure 57

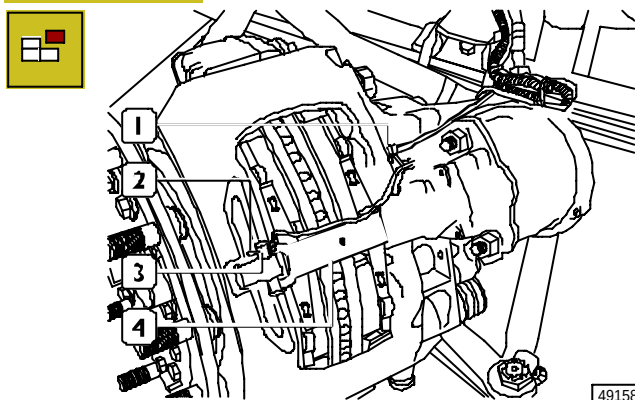

Disconnect the electrical connection (1) from the caliper body. Remove the split pin (2), pin (3) and brake lining retaining plate (4).


Figure 58

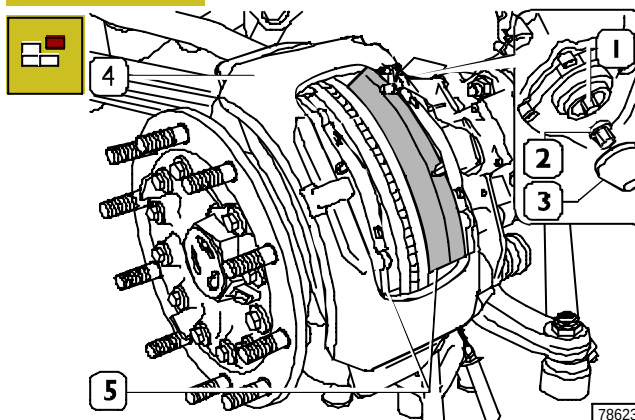

Remove the plug (3). Turn the adjustment device (1) operating on the adapter counterclockwise with a wrench, to insert the pistons within the caliper body and extract brake linings (4), suitably moving the caliper body (3).

NOTE Never operate directly on the registration pinion (1) without having first of all fitted the adapter (2). If the cutting torque of the adapter is exceeded, this will break. Test with a new adapter. If this also breaks, the caliper must be replaced because it is damaged.


Figure 59

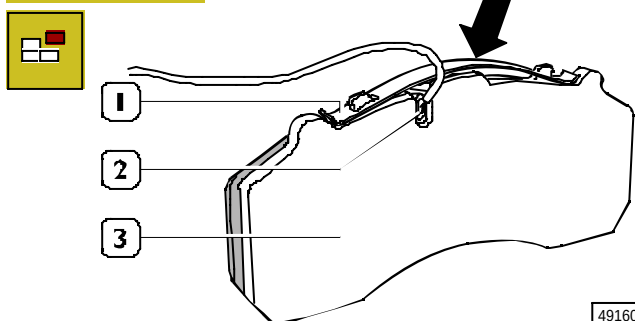

Press (→) on the spring (1) and remove it. Remove the wear sensors (2) from the brake linings (3).

Aquila Trucks Centres

Figure 60

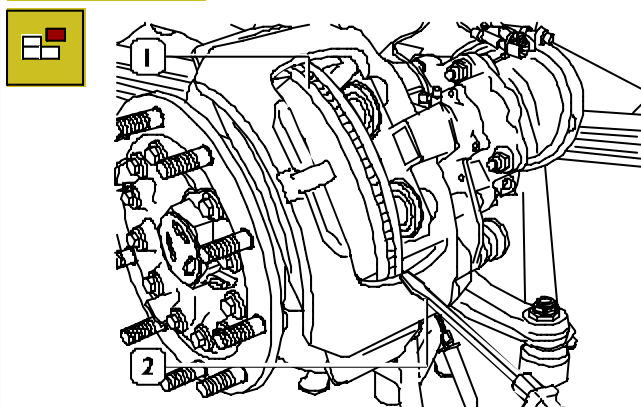

49161

Remove dirt and rust from around the edge of the brake disc with a scraper or an old screwdriver (2) resting on the calliper body, turning the disc (1).

Finish the job with abrasive cloth. Remove the remains with the aid of an aspirator, or rags and a brush.

Do not use petrol or other petroleum products that could cause trouble for the brakes.

Use only methylated spirit or isopropyl alcohol.

Carefully clean the surfaces of the braking area of the brake disc.

NOTE Visually check the conditions of the dust caps, if deformed or broken it is necessary to replace them. This requires removing the brake calliper, so it is recommended to remove the brake calliper body together with the bearing plate for a thorough overhaul.



Check that the calliper slides freely on its guides.

If you find any trouble on a single brake calliper it is wise to overhaul both brake callipers completely.

Remove the dirt from the brake calliper with a wire brush, without damaging the dust caps.


Clean the sliding surfaces of the brake linings.

Check the conditions of the brake disc and make sure it is not corroded, scored or grooved. Light surface cracks are acceptable, but it is necessary to grind the brake disc as described under the relevant section heading. On the contrary, if it is worn, replace the brake disc.

If one needs to be replaced, it is recommended to replace both brake discs.

Check the state of the springs and wear sensors, replace them if necessary.


Figure 61

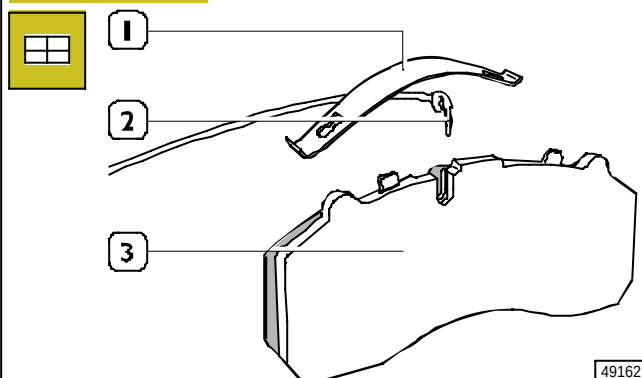

49162

Insert the wear sensor (2) into its seat on the brake lining (3). Mount the spring (1) in the opposite sequence to that for disassembly.

Figure 62

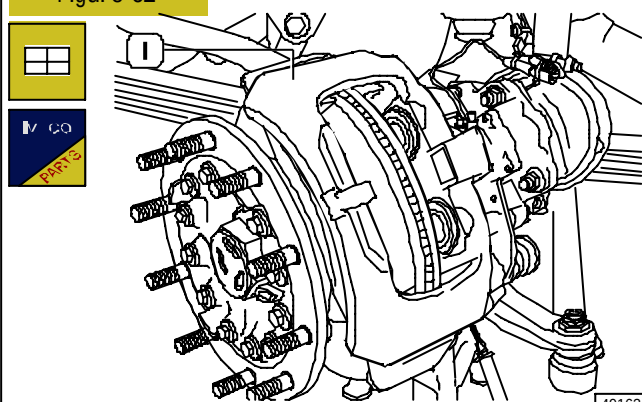


49163

Insert the new linings in the brake calliper (1) and check they slide freely in their seats.



If you find it necessary to replace the pair of brake linings, always replace them with a full set for each axle.

Figure 63

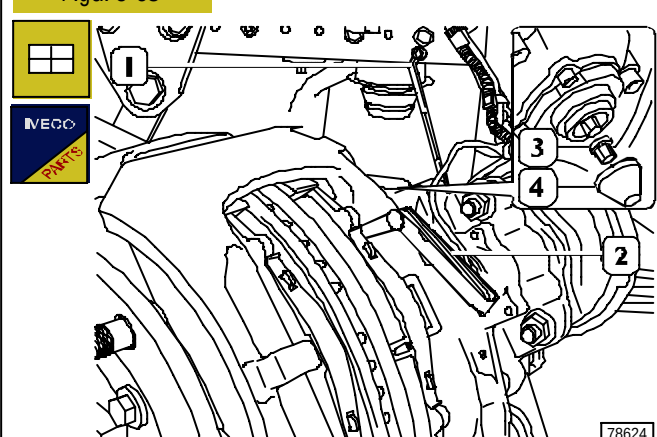

78624


Using the wrench (1), act on the adaptator retriever pin to get a play not lower than 0.7 mm between brake lining and brake disk, which can be measured using the thickness gauge (2). Replace the cover (4) and lubricate it with white grease RENOLIT HLT2.

Aquila Trucks Centres

527413 Removing and refitting brake callipers

NOTE Make sure the external safety plug and the seal are fitted properly in order to prevent water getting inside the automatic clearance recovery device.


Figure 64

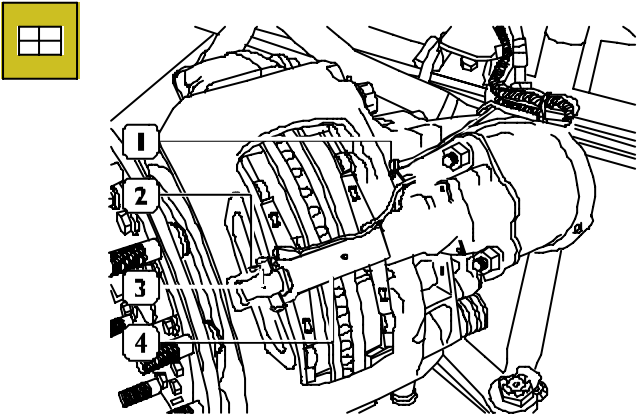

49158

Make the electrical connection (1) and secure it to the calliper body.
Mount the plate (4), pin (3) and split pin (2).


Figure 65

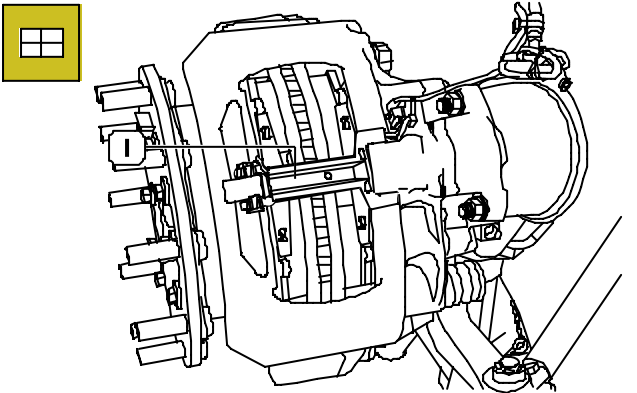

49165

Mount the wear sensor cable retaining plate (1).
Using the hydraulic trolley 99321024, fit on the wheels. Lower the vehicle. Lock the nuts fixing the wheels to the required torque.
Fit the safety cap onto the wheel hubs.
Proceed as described on the opposite side.
After repairing the vehicle brakes, press the brake pedal repeatedly, while the vehicle is moving, in both directions, in order to wear in the brake linings.


Figure 66

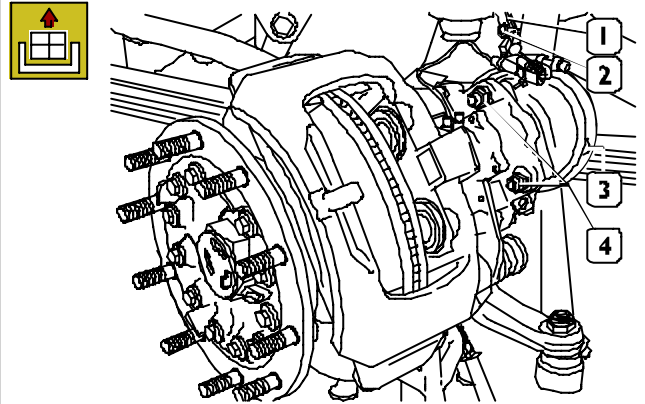

49166

To remove the brake linings, keep to the above description in the paragraph for replacing brake linings. Remove the clamps (2). Disconnect the diaphragm cylinder supply pipe (1). Unscrew the nuts (4) and remove the diaphragm cylinder (3).

Figure 67

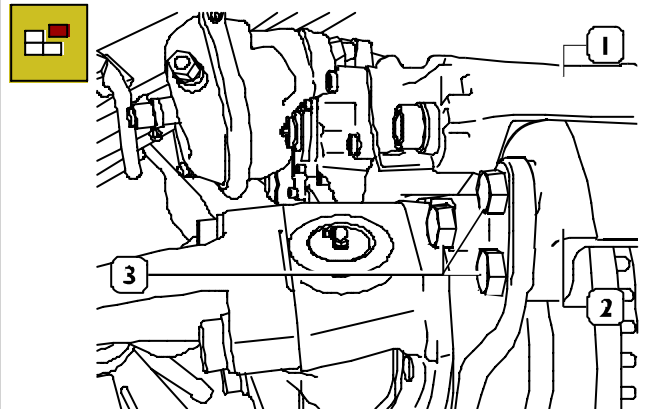

49167

Remove the screws (3) and disconnect the brake calliper (1) together with the bearing plate (2).



Take care when removing and carrying the calliper (1) as it is heavy and floats on the bearing plate (2).

Refitting


For refitting, carry out the steps described for removal in reverse order, keeping to the required tightening torques.

NOTE Before inserting the diaphragm brake cylinder, spread the cap in the brake calliper operating lever with RENOLIT HLT2 white grease.

Aquila Trucks Centres

520620 Removing and refitting wheel hubs**Removal**


Figure 68

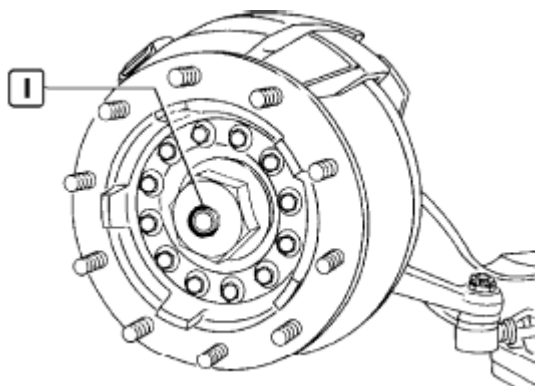

77206

Arrange an oil recover collector as a precaution. Rotate hub so as to take plug (1) downwards. Unscrew the plug and drain oil into the container.


Figure 69

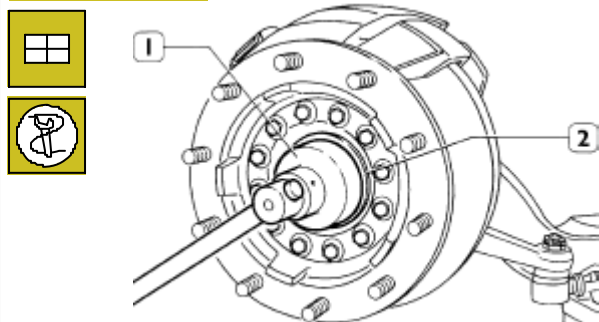

36407

Block rotation of the wheel hub suitably and with the wrench 99354207 (1) unscrew the oil cover (2).


Figure 70

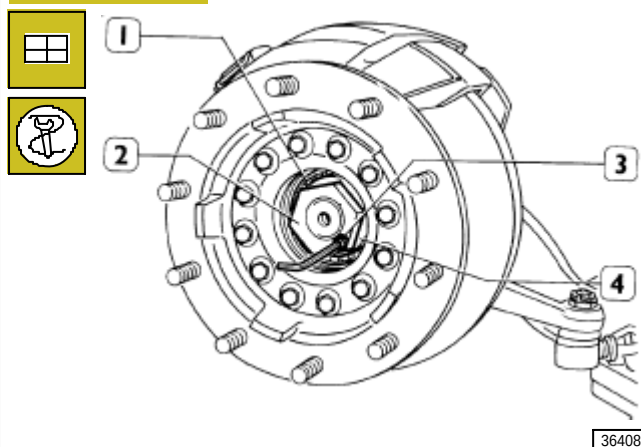

36408

Undo the safety screw (3). With the wrench 99388001, unscrew the adjustment ring nut (2), remove the washer (4), outer bearing (1) and remove the brake disc together with the wheel hub, spacer and internal bearing.

Figure 71

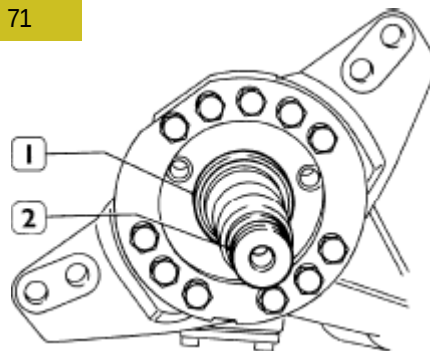

38596

Visually check the diameter of the gasket ring (1) has no accidental dents or scratches.

Replace the internal gaskets of the wheel hubs and, if necessary, the ring (1), keeping to the description given in the "Front axle" section.

Using the adjustment ring nut, check that the thread (2) has no stiffness. If it has, use appropriate means to get rid of the stiffness. Remove the opposite brake assembly, keeping the components separate.

Refitting


NOTE Make sure the surfaces of all the parts inside the hub are thoroughly clean, with no waste or burrs.

Lubricate the bearings with Tutela W 140/M DA oil.

Key the wheel hub on the stub axle together with the brake disc. Insert the internal spacer onto the stub axle then position the external bearing and thrust washer.

Screw down and lock the adjustment ring nut to the required torque.

Figure 72

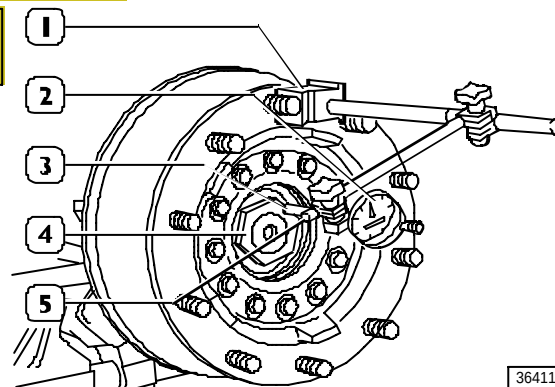

36411

Strike the wheel hub a few times with a mallet in an axial direction, turn it in both directions to free the bearing rollers. Fit the magnetic base (1) together with the dial gauge (2) on the wheel hub. Set the pointer of the dial gauge (3) at right angles to the shank of the stub axle.


Reset the dial gauge with a pre-load of 1.5 - 2 mm.

With the aid of a lever, move the wheel hub axially and measure the end float, which must be 0.16 mm (maximum value).

On obtaining the required end float, lock the screw (5) retaining the adjustment ring nut (4) to the required torque.

Aquila Trucks Centres

Figure 73

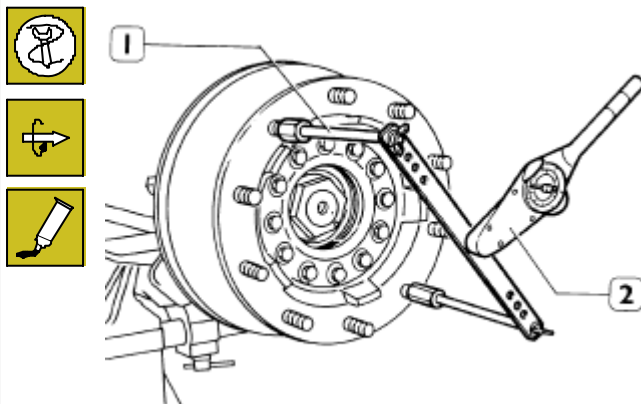

Apply tool (1) 99395026 on wheel hub stud bolts and use torque meter 99389819 (2) to check whether the wheel hub rolling torque is at the set value.




Deposit a sealing bead (Loctite type 574) exclusively on the hub cover ledge surface and protect the threaded part.



Tighten to torque the hub cover (1, Figure 74).

Figure 74

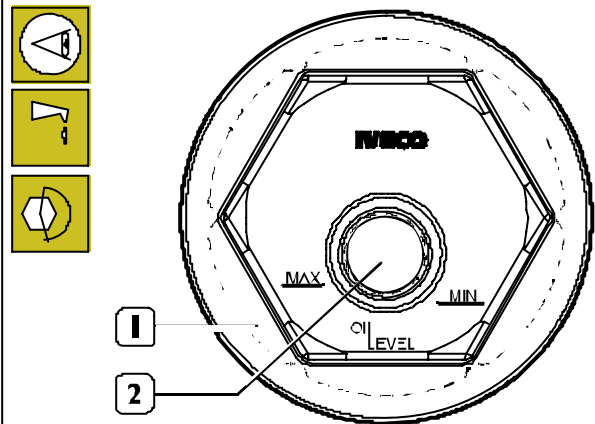


79068

Rotate the wheel hub until when hub cover (1) is positioned as shown in the figure. Restore the prescribed quantity of oil into the hub cover (1) through filling hole (2). Tighten the plug on the hub cover (1) to the set torque.

Aquila Trucks Centres


**SN7 BRAKE CALIPER OVERHAUL
Disassembly**

Figure 75

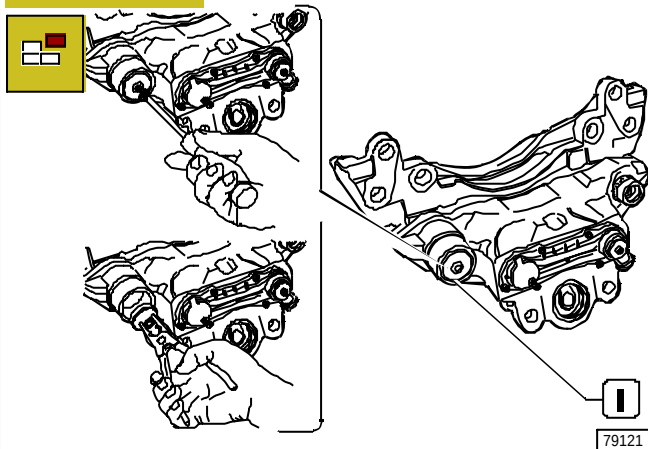


Place the brake caliper on the bench and block it in a vice. Remove the cover (1) and make a hole in it with a Parker screw.

Figure 76

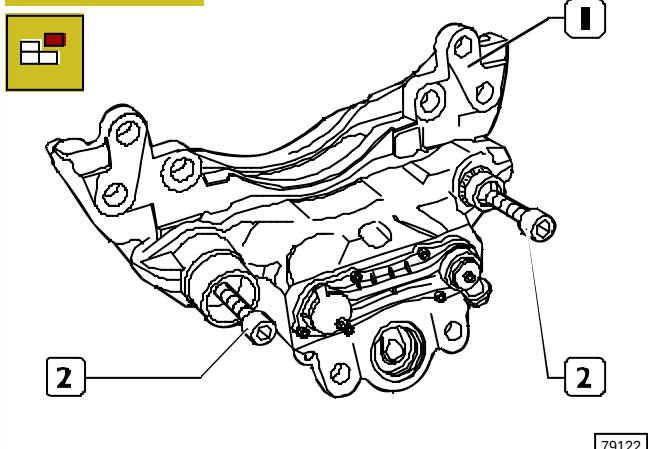


Refit the supporting plate (1) and remove the fastening screws (2).

Figure 77

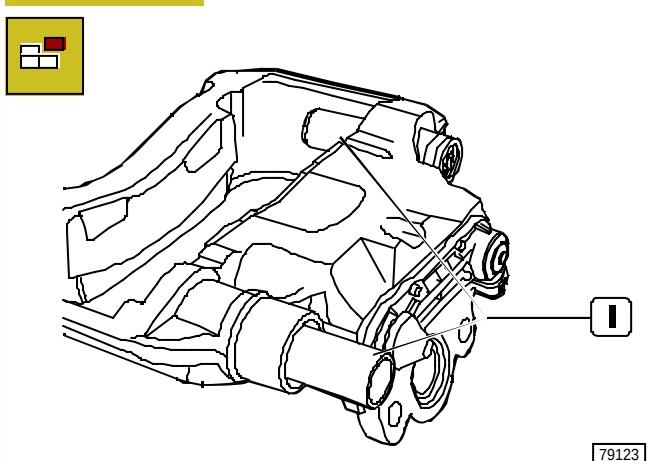


Remove the sliding bushes (1).

Figure 78

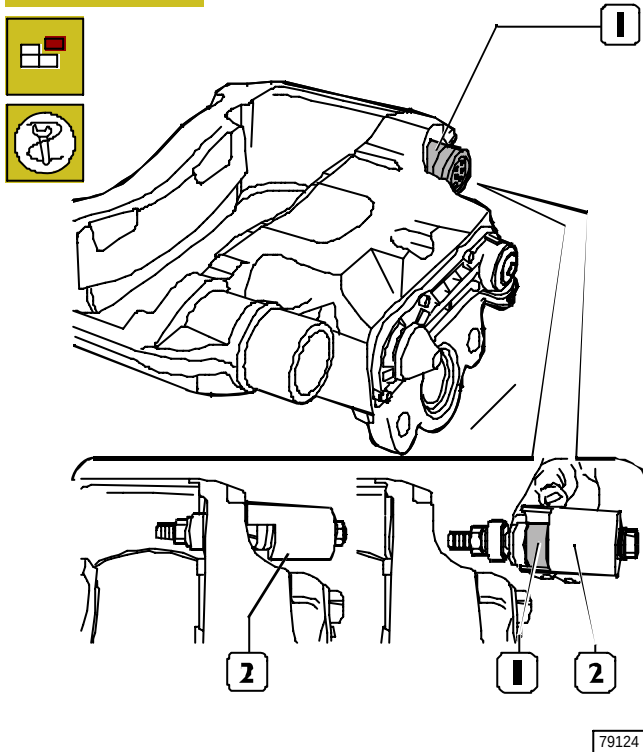

Use tool 99372245 (2) (to be used with screw in tool 99372237) to disassemble the rubber sleeve (1).

Figure 79

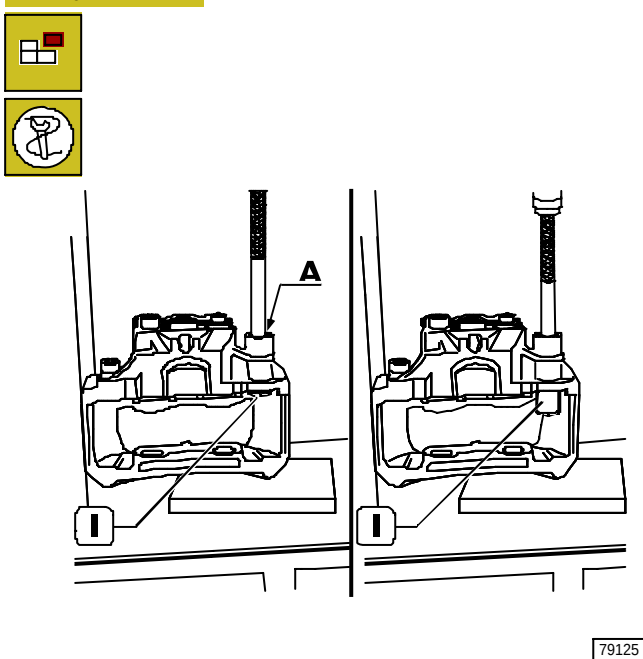


Take the caliper to the press.

Insert the appropriate beater in the brass bush housing (1) (See arrow A). Use the press to remove the bush (1).

Aquila Trucks Centres

Figure 80

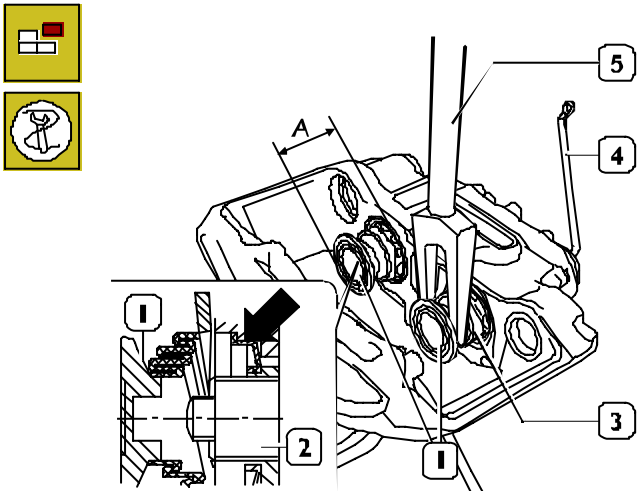

60742

Place the caliper on the bench and block it in a vice. Use the wrench (4) to operate the clearance recovery device so that the piston (1) comes out of the caliper body for a maximum of 30 mm (value A).

Take off the dust-guard from the caliper body and use tool 99372238 (5) to remove the thrust pressing devices (1) of the caliper together with the protection casings (3).

NOTE Value A must not be overcome because threaded hoses (2) are synchronised. If the threaded hoses (2) reach their over-travel, they lose synchronism and the brake caliper must be replaced. The brake caliper inner parts must never be removed. For this reason you are recommended not to slacken or to remove the cover retaining screws.

Component part cleaning and check

To wash metal parts, use a solution of hot water with Fiat LCD detergent. Use a metal brush to remove dirt from the caliper body and then a little brush to remove the residuals and to clear accurately the guide pin and the sliding bush housings.

Use a synthetic brush with the right dimensions to remove the grease left on the sliding bush housings.

Clean the caliper body accurately with compressed air.

Use a piece of cloth soaked with isopropyl alcohol or similar to clean the sliding bushes accurately.

Check the wear conditions of the sliding bushes and their housings on the brake caliper body. Make sure they are not damaged or worn, especially the sliding surfaces. Fit the bushes in their housings and check they slide regularly.

Fit the bushes in their housings, check they slide correctly, otherwise replace or restore their housings on the caliper body, if needed.

NOTE Regular braking depends mainly on the brake caliper sliding on the guide pins.


Check the wear conditions of the brake lining retaining pins and the related safety pins. If they are worn or damaged, replace the worn parts.

It is advisable to replace all rubber and plastic parts and the brass bush even if they do not seem damaged or worn at sight.

Assembly


Make sure all the brake caliper components are perfectly clean. Possible abrasive residuals should be removed with a cloth soaked in isopropyl alcohol or similar.

Figure 81

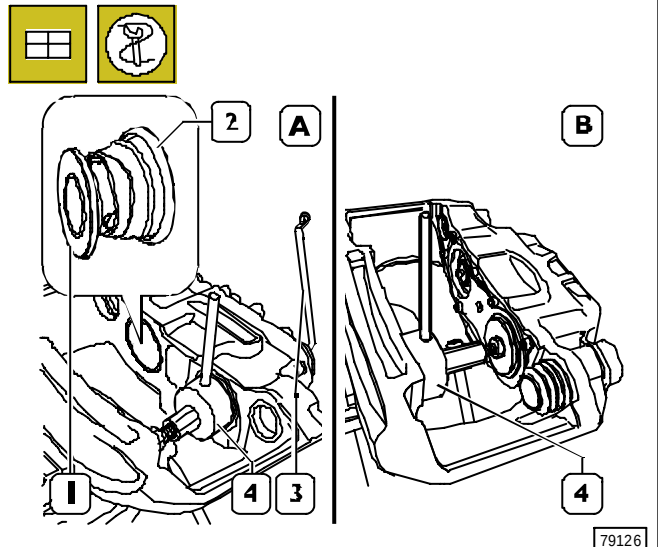

Use tool 99372239 (4) (see figure A) to fit the protection casings (2). Use the same tool 99372239 (4) fitted on the other side (see figure B) to insert the pistons (1). Use the wrench (3) to operate the clearance recovery device and adjust the pistons (1).


Figure 82

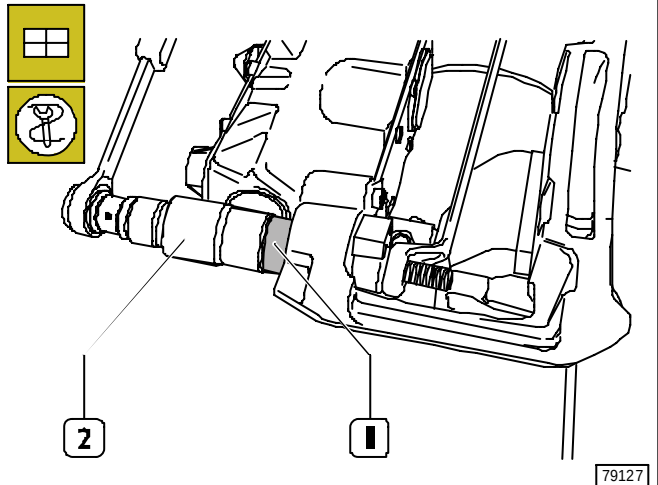

Use tool 99372244 (2) (to be used with the screw in tool 99372237) to assemble the rubber sleeve (1).


Aquila Trucks Centres

Figure 83

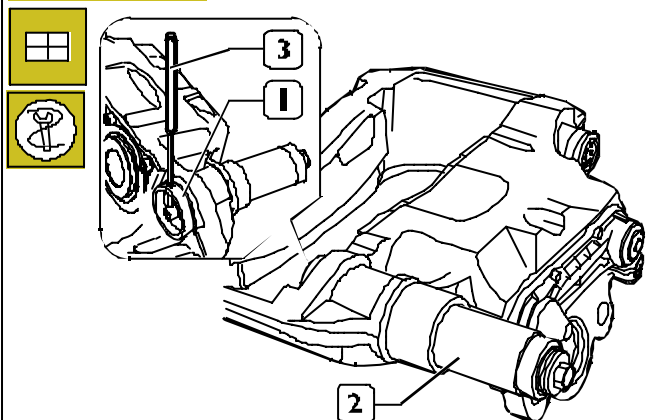


Use tool 99372243 (1) (to be used with tool 99372240 and use screw in tool 99372237) to assemble the brass bush (2) in its seat, by blocking its rotation by means of a suitable tool (3) (punch or screwdriver).

Figure 84

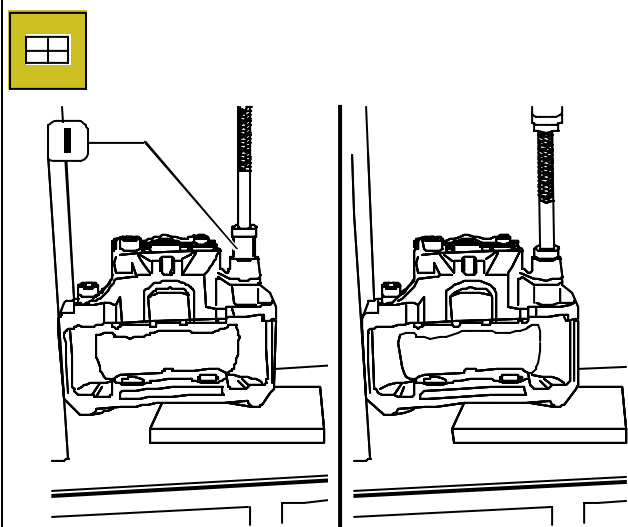

Place the caliper under the press. Use the press to fit the brass bush (1) in its housing until it comes out of the lower side by 1 mm.


Figure 85

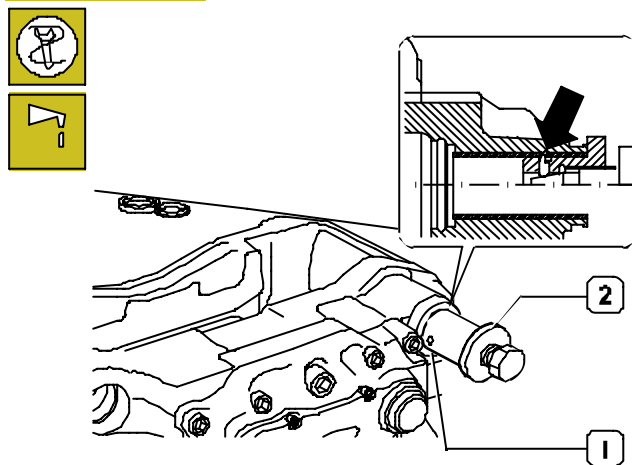

Use the tool 99372242 (2) to carry out bruising in the point (→) next to the caliper body groove, in order to prevent the brass bush (1) from moving.

Make sure there are no burrs in the bush housing, otherwise remove them. Apply white grease RENOLIT HLT2 on the bush.

Figure 86

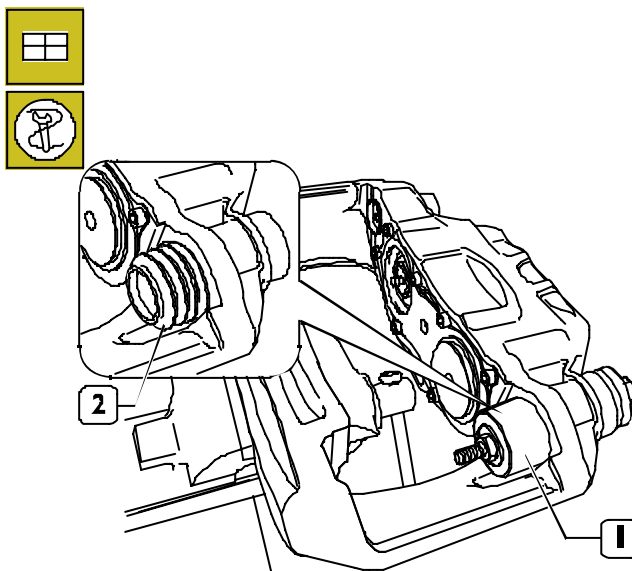


Place the caliper on the bench and block it in the vice. Fit the protection casing (2) by means of tool (1) 99372237.

NOTE Reverse the removal order to fit the sliding bushes and the supporting plate.

Aquila Trucks Centres

527411 OVERHAULING BRAKE DISCS

Figure 87

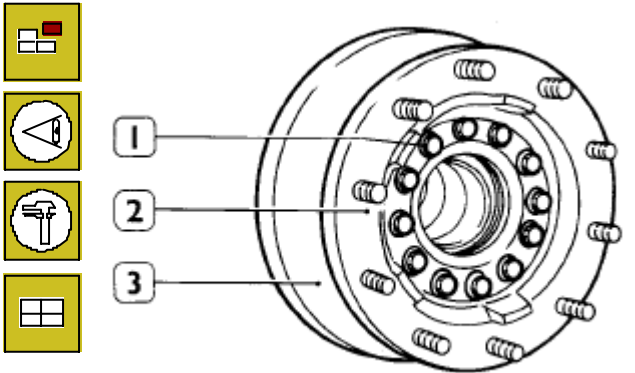

Examine the state of wear of the surfaces of the brake discs. Finding other values to the ones given in the characteristics and data, turn and grind the brake discs or, if necessary, replace them.


Remove the screws (1) and detach the hub (2) from the disc (3). Replace the disc (3) and refit it following the reverse procedure to the one described above.

35037 / 1

NOTE For regular braking, always replace a complete set of disks per axle.

527411 TURNING AND GRINDING BRAKE DISCS ON THE BENCH

Figure 88

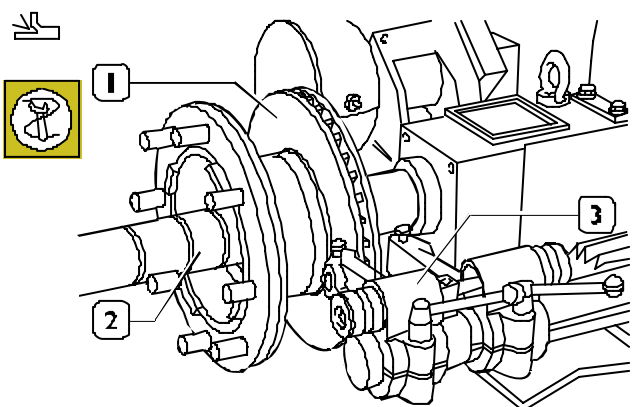


35707

- Key onto the shaft of the lathe 99301001 (2) the brake disc (1) together with the hub.
- Key onto the shaft a set of spacers that eliminate the end float of the assembly; screw on the locking nut and fit the mount of the lathe shaft.
- Position the tool holder (3) in line with the brake disc (1), then adjust the depth of the tools.
- Proceed with turning and grinding the brake disc (1), operating with one or more passes to remove material depending on the scoring found.

527411 TURNING AND GRINDING BRAKE DISCS ON THE VEHICLE

Figure 89

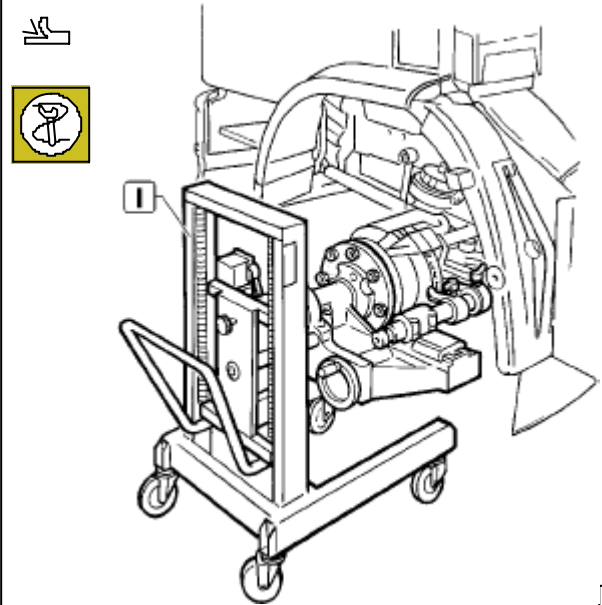

71848

Remove the wheel.


Fit the tool 99301005 (1) onto the wheel hub. Proceed with turning and grinding the brake disc.

NOTE During grinding, proceed gradually, advancing the wheel in sectors to remove the turning remains entirely.

Aquila Trucks Centres

5272 DRUM BRAKES

Figure 90

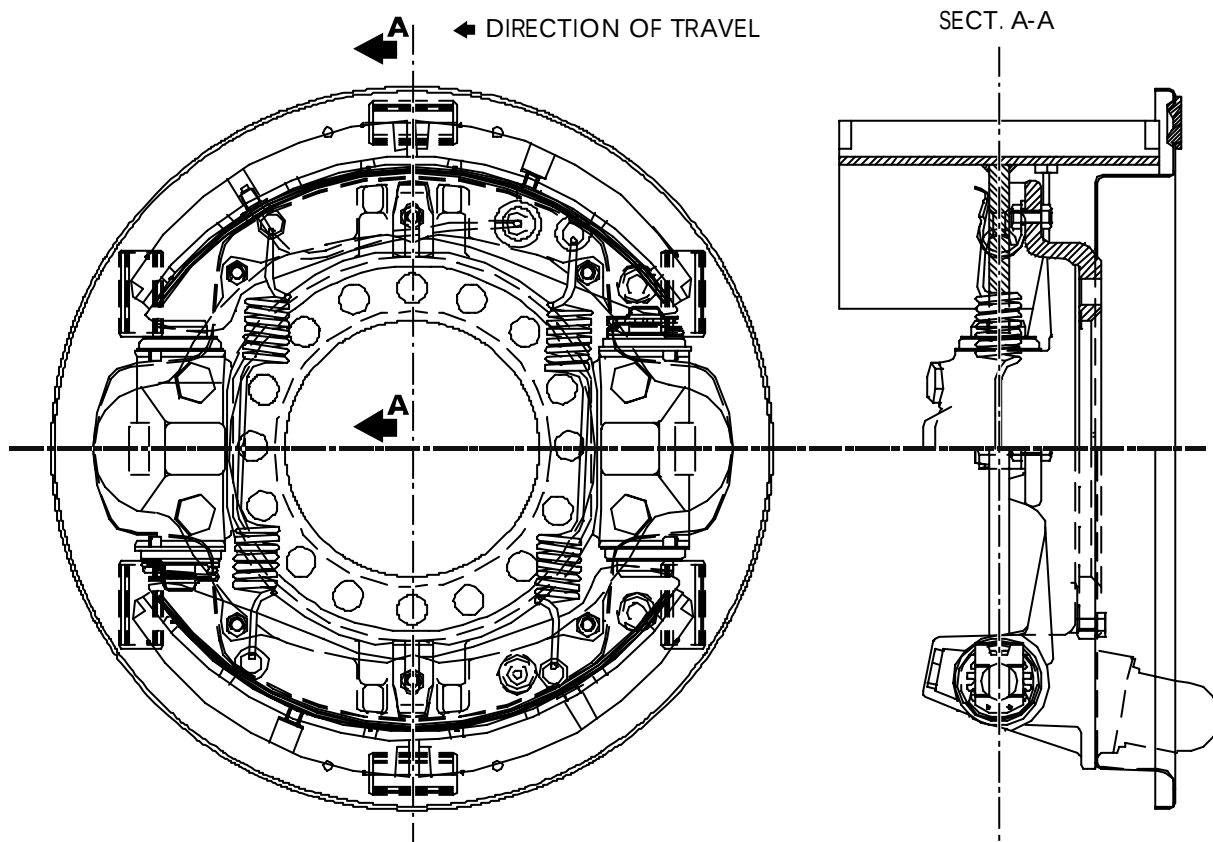

71781

MERITOR DUO-DUPLEX DRUM BRAKE

Aquila Trucks Centres


5272

**DUO DUPLEX DRUM
FRONT/REAR BRAKES**

NOTE Braking assembly overhaul was performed on rear brakes.


Disassembly

Figure 91

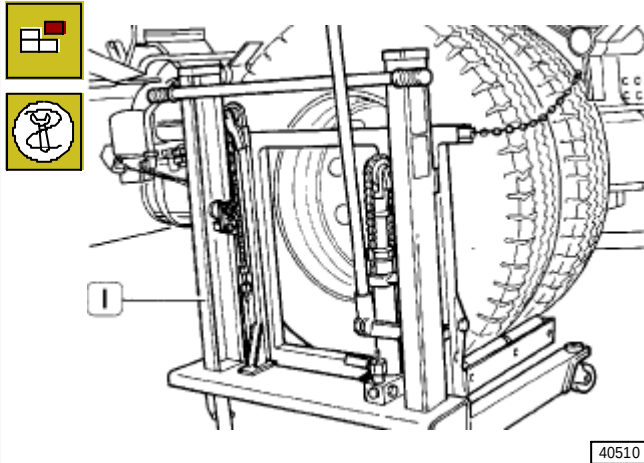


Set the vehicle on level ground. Take the covers off the nuts fixing the wheel and loosen the nuts. Lift the vehicle from the concerned side, then place it on special stands. Position the hydraulic trolley 99321024 under the wheels. Take out the nuts fixing the wheels and take them off.

Figure 92

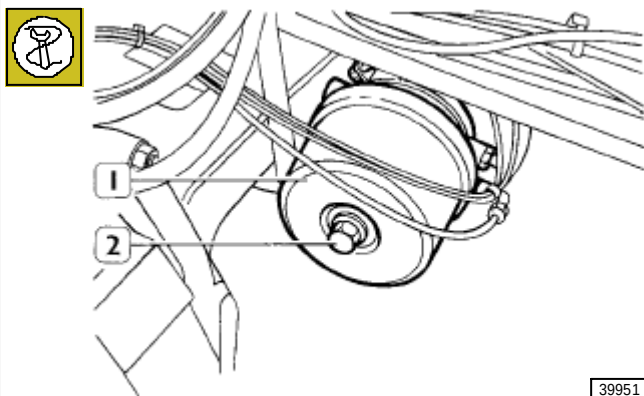


Fully unscrew the manual braking screw (2) of the combined cylinder (1).

Figure 93

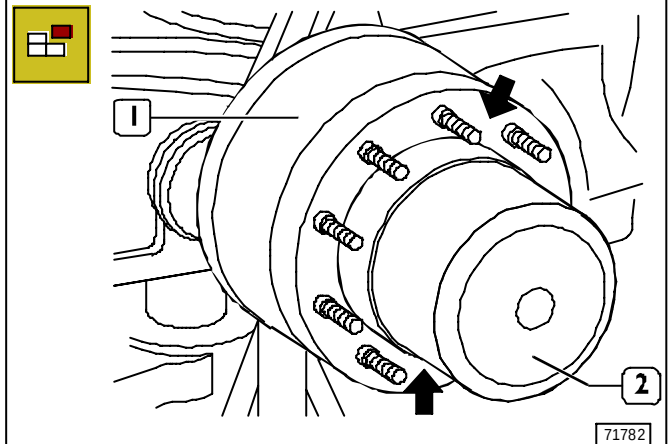


Take out the screws fixing the brake drum (1) to the wheel hub (2). Screw two appropriate screws (⇒) into the holes in the drum and take this out of the wheel hub.

Figure 94

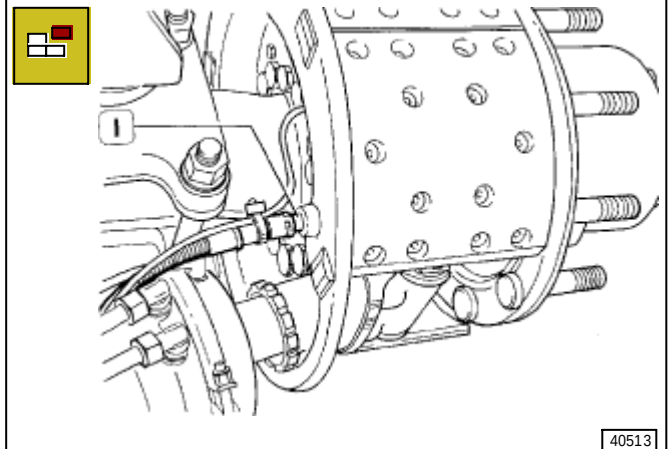

Disconnect the electrical connection (1) for the cable signalling brake lining wear.


Figure 95

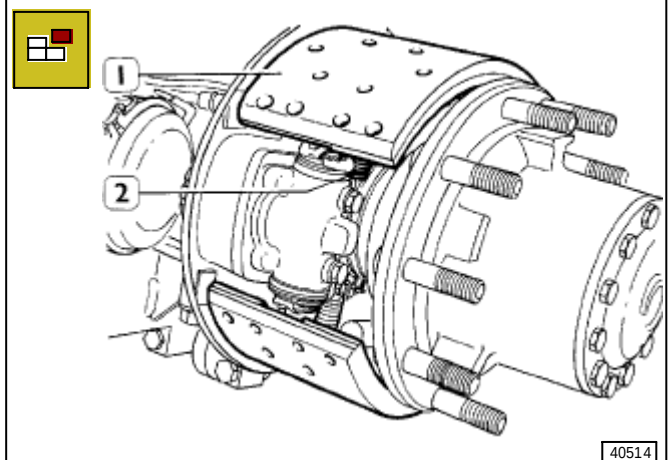

Take out the shoe return springs (2). Remove the top shoe (1).

Aquila Trucks Centres


Figure 96

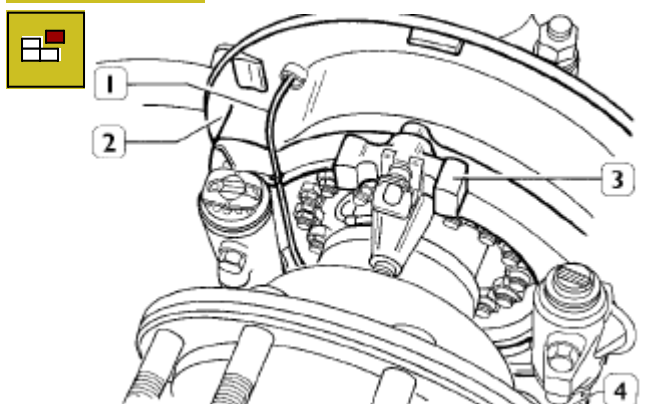

71783

Free the brake wear indicator cable (1) from the clips of the brake plate (3) and take the cable out of the guard (2). Remove the bottom shoe (4).


Figure 97

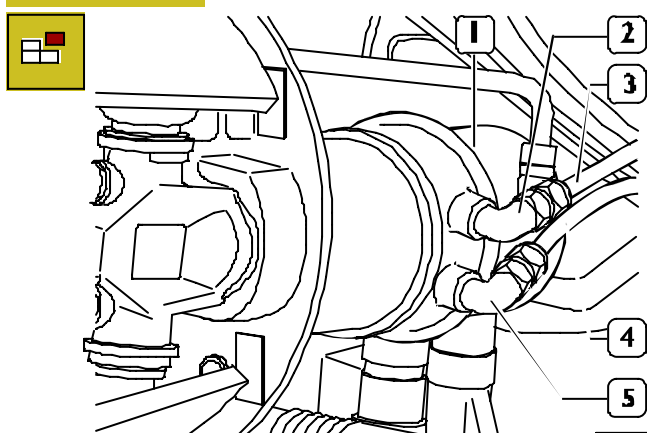

71841

Disconnect the pipes (3 and 4) from the fittings (5 and 2) and remove these from the combined cylinder (1). Using wrench 99356006, loosen the fixing ring nut. Turn the combined cylinder (1) anticlockwise, remove it from the brake body.


Figure 98

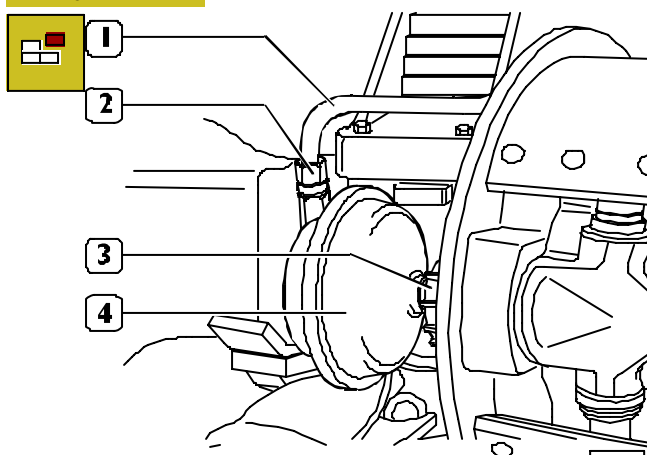

71842

Disconnect the pipe (1) from the fitting (2) and remove this from the diaphragm brake cylinder (4). Using wrench 99366006, loosen the ring nut (3). Turn the diaphragm brake cylinder (4) anticlockwise, remove it from the brake body.


Figure 99

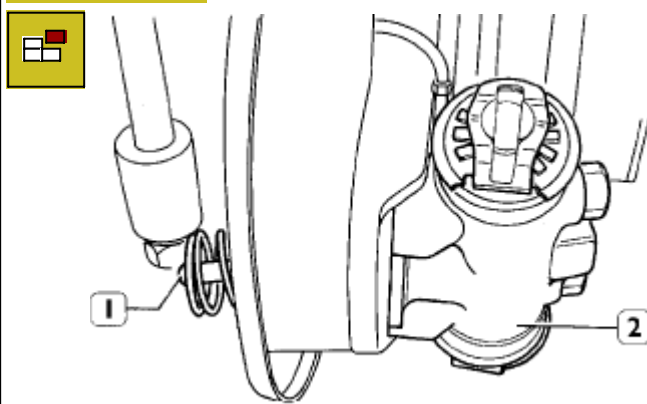

40517

Extract the wedge-shaped control unit (1) from the brake body (2).


Figure 100

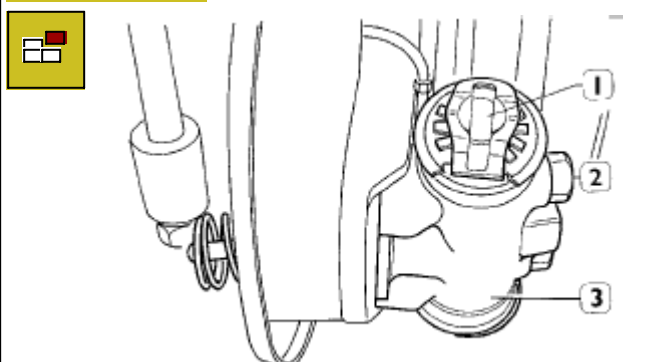

71791

Unscrew the guide pins (2) and take them out. Extract the adjustment unit (1) together with the thrust pin from the brake body (3).

Figure 101

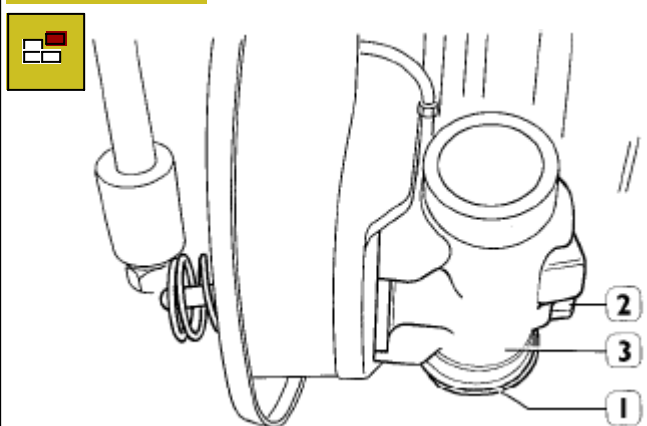


71789

Unscrew the guide pins (2) and take them out. Extract the reaction pin (1) together with the thrust pin from the brake body (3).

Aquila Trucks Centres

Figure 102

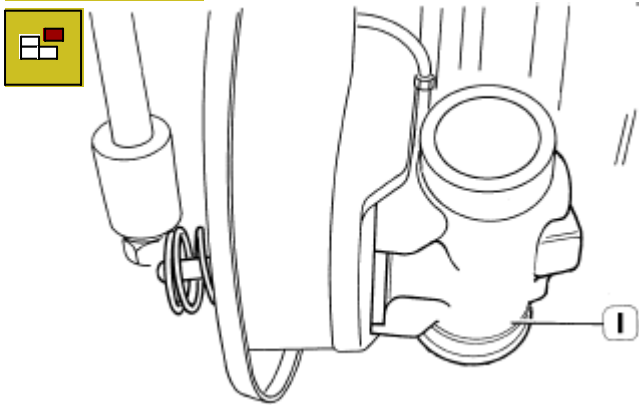

Check the state of wear of the pin seats on the brake body (1), if they are scored or excessively worn, replace the abnormal brake bodies.

Examine the wear of the drums to decide on their reuse.

Measure the diameter of the drums with a sliding gauge without angling the arms.

Measure the diameter at several points to establish roundness and wear, also considering the depth of the scoring on the braking surface.

Admitted tolerance on roundness and/or eccentricity 0.25 mm.

If you find such wear or scoring as not to permit restoring the braking surface by turning, or clear signs of overheating, replace the drum (see Characteristics and Data table).

Check the state of the brake shoes and replace them if cracked.

If the braking surface of the linings shows signs of grease, you need to find the cause and eliminate it.


The minimum admitted thickness of the brake linings is 6.95 mm.

If you find a lower or slightly higher value, replace them.

Check the integrity and/or efficiency of the brake lining wear signal cable.

Check the integrity and/or efficiency of the shoe return springs.

Figure 103

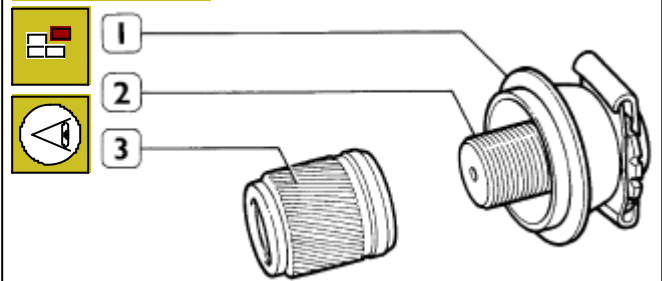


Disassemble the automatic adjustment unit.

Unscrew the adjustment bushes (3) from the adjustment pins (2) and then remove the seals (1).


Check the wear condition of the adjustment bush outer helical toothing and check whether bushes are sliding freely on the relevant adjustment pins when screwing.

Figure 104

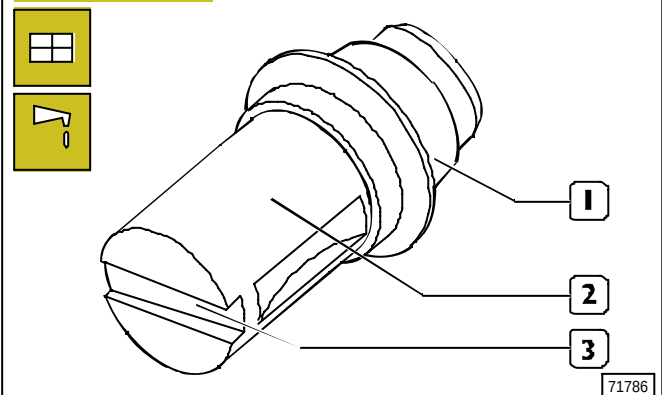

Take seal (1) off thrust pin (2). Check wear conditions for thrust pin (2) and surfaces of sloping planes (3) subjected to the operation of shoe opening drive rollers.


Figure 105

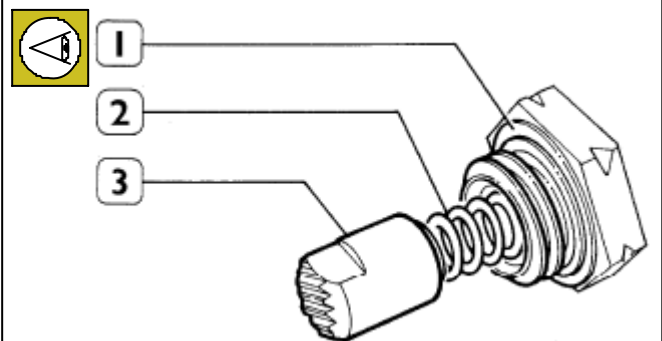

Check the condition of the pressure pin teeth (3), of the relevant compression springs (2) and of the copper washers (1).

Aquila Trucks Centres

Figure 106

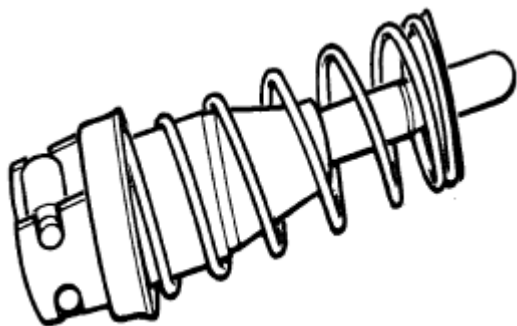

5713

Check that the wedge units slide easily and that there are no abrasions.




If wear is found on the wedge components the complete unit must be replaced.

527231 Drum turning

Measure the drum diameters using a gauge without bending the arms, find the diameter in several points to establish the ovality and wear.

Figure 107

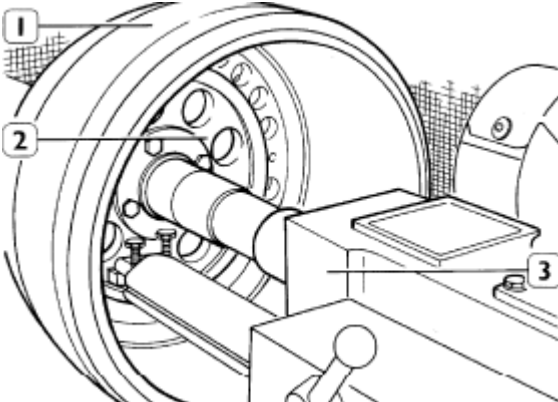

40520

Fit tool 99372213 (2) into the brake drum.
Fit this combined unit onto the lathe shaft 99301001 (3).
Fit a set of spacers on the shaft to remove unit end play, tighten the lock nut and place the lathe support.
Fit the antivibration band on the brake drum.
Turn the drums by stages, removing the amount of material necessary to correct the imperfections found.
After turning remove the drum brake and carefully clean it.




The maximum diametral oversizing admitted for the drum is indicated on the drum itself.
This limit must not for any reason be exceeded as it would jeopardize the braking effect and the drum resistance characteristics.



Couple the brake linings suitable for each drum according to the oversizing.
Each vehicle axle must be fitted with linings of the same type.

527233 Replacing brake linings

Figure 108

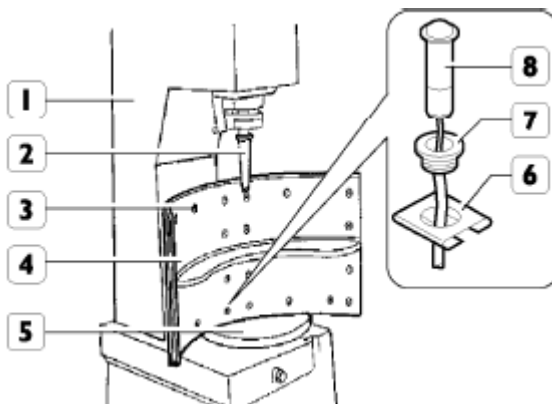


Remove the worn brake linings from the shoes with compressed air press 99305087 (1).

NOTE From the lower shoes open clip tabs (6) releasing the bushing (7). Now remove lining wear sensor (8) and associated cable.

Set the complete shoes (4) on an adjustable stand (5).
With a chisel (2) in the press tooling head (1) shear the rivet heads (3).
Eject the rivets from the shoes.
Carefully wash and blow the shoes to clean them.

Figure 109

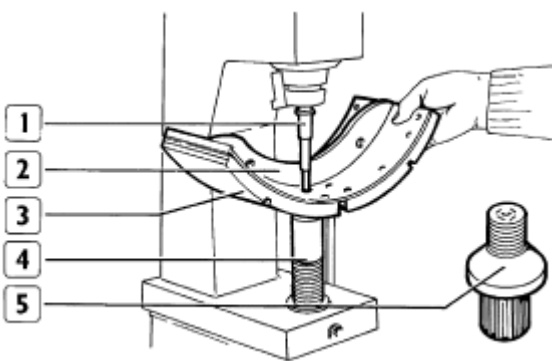

17256

Set the contact pin (5) on the press moving support (4).
Rivet the brake linings (3) onto the shoes (2) with the beater (1) fitted in the press tooling head.


NOTE To rivet the brake linings correctly start in the centre, gradually extending to the braking sectors.

Mount seal wear cable inverting operations described for dismounting.

Aquila Trucks Centres

Turning brake linings

Figure 110

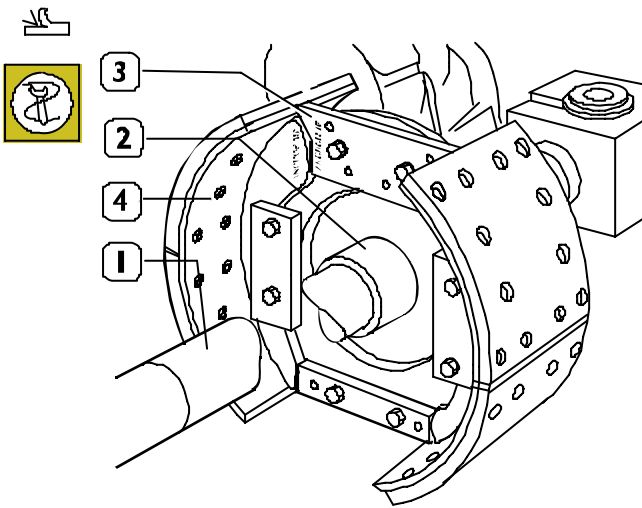


71849

Fit the hub 99372228 (2) on the shaft of the lathe 99301001 (1). Fit the plate 99372230 (3) on the hub (2) and secure the brake linings (4), making the wording "ANCHOR 15" coincide as shown in the figure. Turn the brake linings.

Assembly


Figure 111

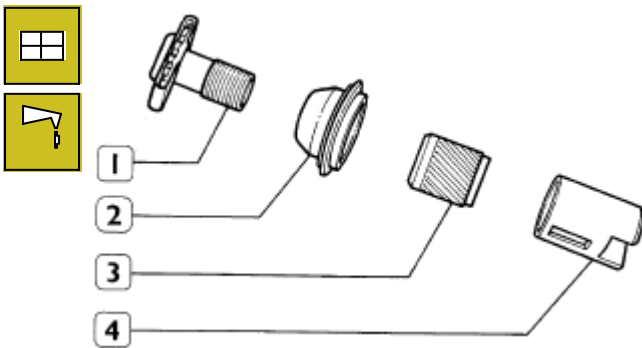

38364

Fit the seals (2) on the units of the adjustment pins (1). Grease the thread of the pins (1). Fully screw down the adjustment bushings (3) and grease them thoroughly on the outside diameter. Grease the inside diameter of the thrust pins (4).

Figure 112

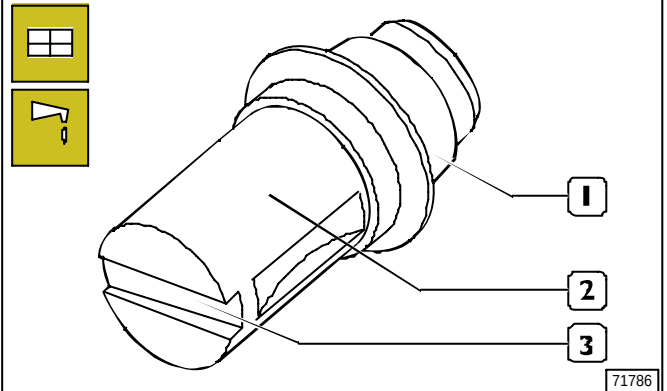

71786


Grease the seal (1) and fit it on the thrust pin (2).



When repairing the brakes, replace the seals of the reaction and thrust pins.

To lubricate the components, use Rockwell RBSK 0253 grease.

Figure 113

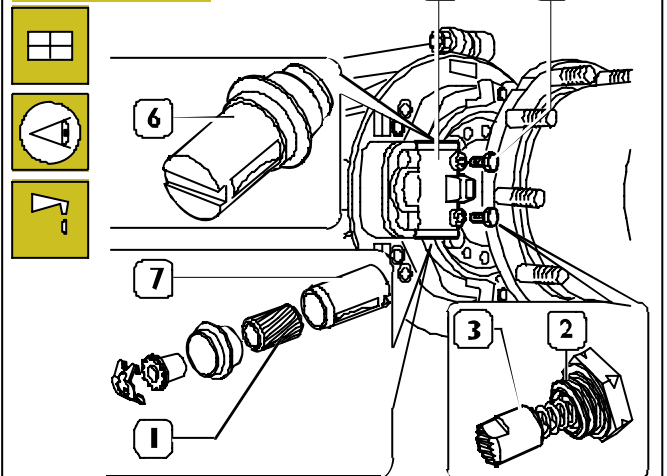

71788

Grease the inside of the brake body (5).

Mount the thrust pin - seal assembly (6) with the slot facing the guiding pin (4).

Insert the thrust pin (7) into the brake body (5) and insert the adjustment pin - seal - adjustment bushing assembly (1).




Take great care to observe the assembly order of the pins that has to be as illustrated in Figure 111.

Grease and insert the guide pin assemblies (4) into the seats on the brake body (5). Check the washers (2) are inserted and screw down by a few turns.

NOTE The guide pins (4) need to be mounted so that the tips (3) slide in the seats of the holes in the brake body (5).

Aquila Trucks Centres


Figure 114

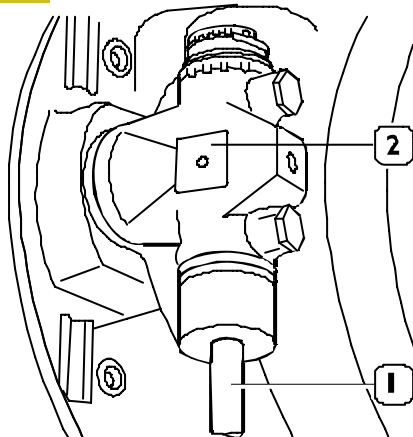

71787

Using the key 99373002 (1), drive the metal rings of the seals onto the brake assembly (2).


Figure 115

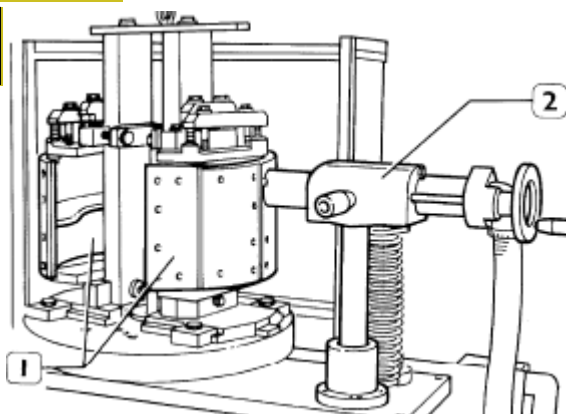

40524

Using device 99301006 (2), turn the brake linings (1).

Figure 116

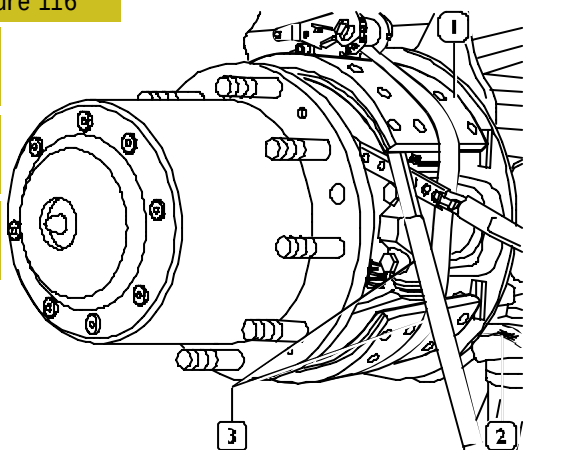


71785

Connect the lining wear indicator cable electrical connection (2) helping the fixing nut on the shoe. Fit the shoes (1) in the seat.

Hook on the shoe return springs with the aid of tool 99372211 (3).



Figure 117

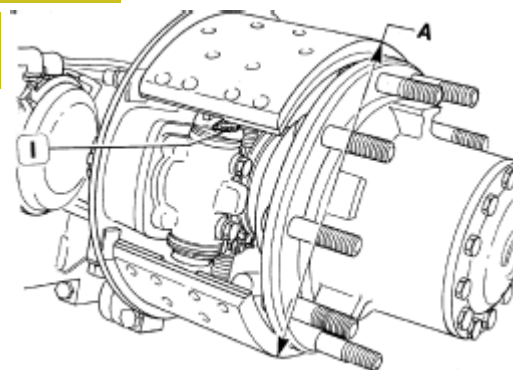

71784

Unscrew the adjustment unit (1) to the same extent to obtain the diameter A, 2 mm less than the diameter of the brake drum to mount.


 
Figure 118

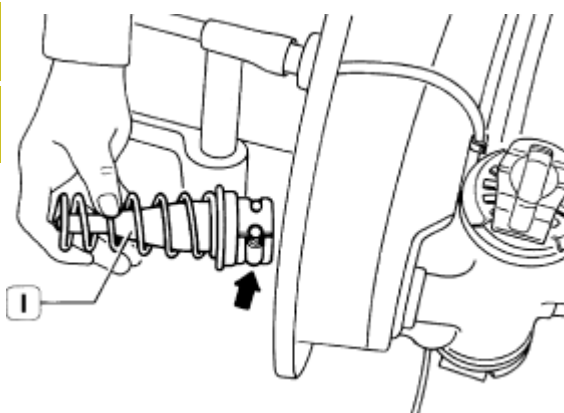

40530

Grease the wedge-shaped control unit (1). Insert it in its seat, taking care that the rollers (2) are positioned in the sliding race.

 Figure 119

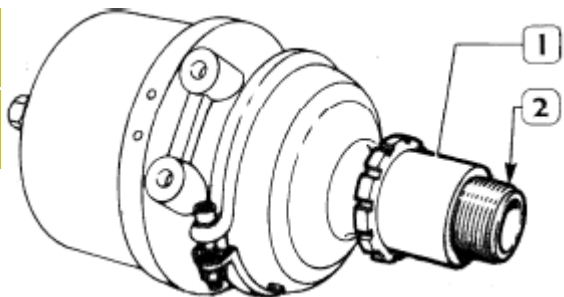


36757

Screw the ring nut (1) by hand onto the sleeve (2) as far as it will go.

Apply non-hardening sealant type LOCTITE 573 on the first few threads of the sleeve (2).


Aquila Trucks Centres

Figure 120

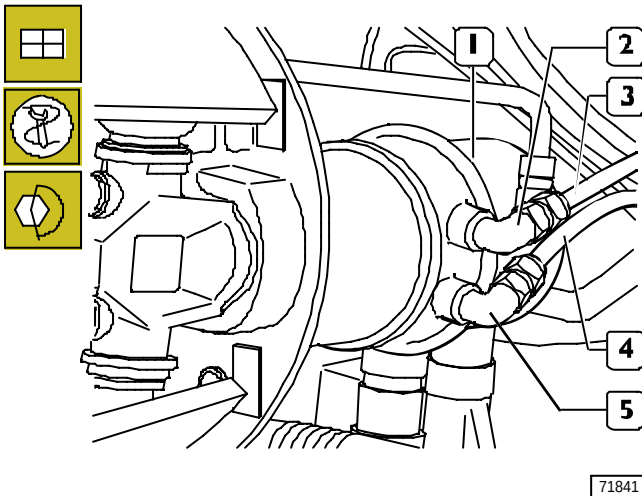


Screw the combined cylinder (1) fully down into its seat. Check that the holes for the supply fittings are in the same position found on removal; if they are not, unscrew the combined cylinder appropriately. Mount the fittings (2 and 5) and connect the supply pipes (3 and 4). Supply the diaphragm sections of the combined cylinder by applying the service brake. With the wrench 99356006, tighten the ring nut to the required torque. Connect the brake lining wear indicator cable electrical connection. Restore the operation of the combined cylinder (1) screwing down the screw (2, Figure 119) fully.

Figure 121

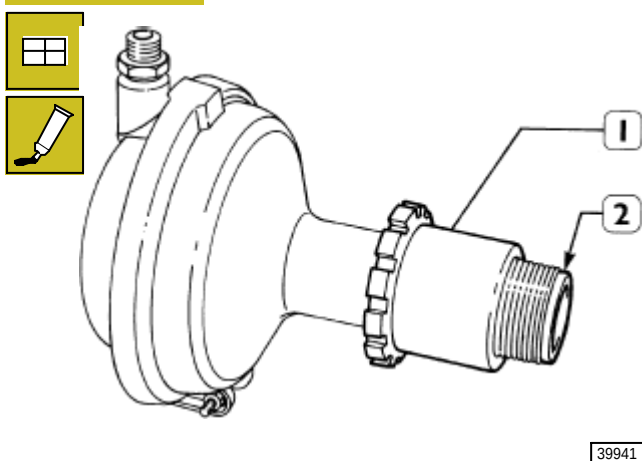


Screw the ring nut (1) by hand onto the sleeve (2) as far as it will go. Apply non setting seal paste of LOCTITE type 573 on the first three threads of pipe (2).

Figure 122

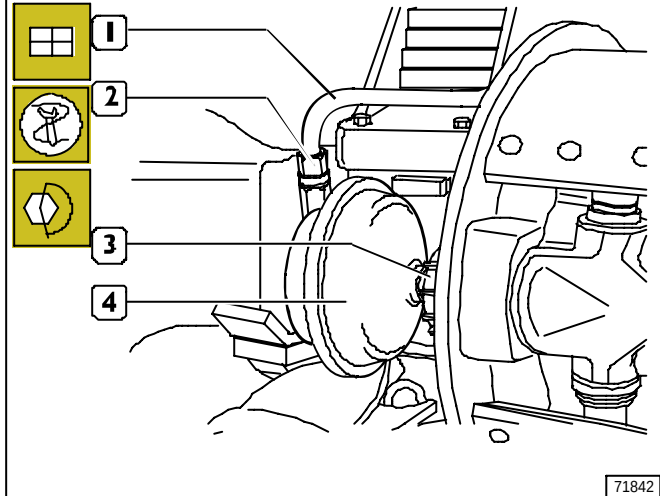

Screw the diaphragm brake cylinder (4) fully down into its seat. Check that the hole for the supply fitting is in the same position found on removal; if it is not, unscrew the diaphragm brake cylinder (4) appropriately. Mount the fitting (2) on the diaphragm brake cylinder (4), hook up the supply pipe (1). Supply the brake cylinder by applying the service brake and with wrench 99356006 tighten the ring nut (3) to the required torque.

Figure 123

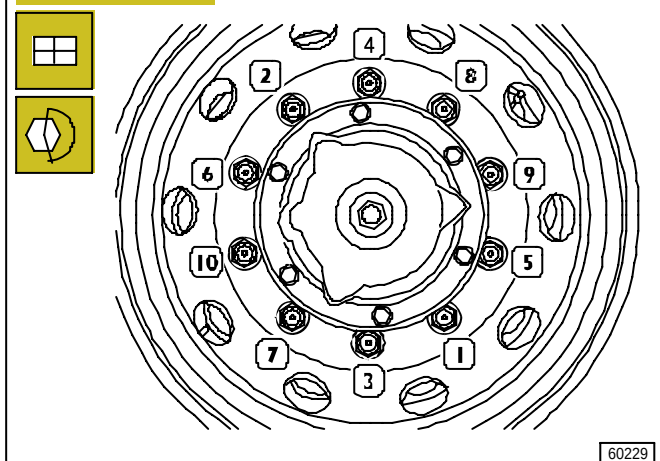

Mount the wheels and tighten the fixing nuts to the required torque according to the diagram shown in the figure. Mount the opposite brake assembly.

Start the vehicle's engine and run it for a sufficiently long time to fill the system.

Brake repeatedly to wear in the brake assembly and recover the clearance between the brake lining and the drum when the vehicle is running.

Aquila Trucks Centres

Aquila Trucks Centres

SECTION 14

5501 Bodywork
5001 Chassis frame

	Page
CAB	7
- General information	7
MAIN DATA	7
TOOLS	7
TIGHTENING TORQUES	8
REPAIR OPERATIONS	13
BUMPER	13
- Removal	13
- Refitting	13
CABIN	14
- Removal the cabin	14
- Refitting	18
REPLACING THE FRONT SHOCK ABSORBER .	19
- Removal	19
- Refitting	19
REPLACING THE CAB SUSPENSION FRONT MOUNTING RUBBER-TYPE BUSHINGS	19
- Removal	19
- Refitting	20
REPLACING CAB FRONT UPPER SUPPORT BUSHINGS	20
- Removal	20
- Refitting	20
REMOVING – REFITTING THE STABILIZER BAR	20
- Removal	20
- Refitting	20

Aquila Trucks Centres

Page

Page

REPLACING REAR CAB SUSPENSION DAMPERS	22
- Removal	22
- Refitting	22
REPLACING THE TRANSVERSE TIE ROD BUSHINGS	22
- Removal	22
- Disassembling/reassembling the bushings	22
- Refitting	22
LEVELLING VALVE	23
- Removal	23
- Refitting	23
CHANGING THE CAB LOCK	23
- Removal	23
- Refitting	23
CAB TILT CYLINDER	23
REPLACING HYDRAULIC CAB TILT CYLINDER	23
- Removal	23
- Refitting	23
- Checking oil level	25
- Bleeding cab tilt system	25
- Cab mechanic suspension	26
- Cab driving position adjustment	26
- Cab pneumatic suspension	27
- Adjusting the levelling valve linkage	27
REPLACING THE WINDSHIELD	28
- Removal	28
- Refitting	28
REPLACING THE WINDING WINDOW	29
- Removal	29
- Refitting	30

REPLACING THE WINDOW WINDER	31
- Removal	31
- Refitting	31
REPLACING THE DOOR LOCK	31
- Removal	31
- Refitting	32
REPLACING THE OUTSIDE HANDLE OF THE DOOR	32
- Removal	32
- Refitting	32
REPLACING THE INSIDE HANDLE	32
- Removal	32
- Refitting	33
REPLACING THE SIDE MIRRORS	33
- Removal	33
- Refitting	33
REPLACING THE DOOR	33
- Removal	33
- Refitting	33
REPLACING THE FIXED WINDOW	34
- Removal	34
- Preparing the window bay	34
- Preparing the window	34
- Refitting	34
INSTRUMENT PANEL	36
- Removal	36
- Refitting	36
CENTRAL SWITCH DASHBOARD	36
- Removal	36
- Refitting	37
PROTECTIONS	37
- Removal	37
- Refitting	40

Aquila Trucks Centres

Page

Page

WINDSCREEN VISOR ROLLING DEVICE	40
- Removal	40
- Refitting	41
WINDSCREEN SUN VISOR REEL MOTOR REPLACEMENT	41
- Removal	41
- Refitting	41
AIR INTAKE LID	42
- Removal	42
- Refitting	42
AIR INTAKE LID MOTOR REPLACEMENT	42
- Removing	42
- Refitting	43
REPLACING SIDE DOOR OPENING CONTROL CABLE (AT VEHICLES)	43
- Removing	43
- Refitting	45
- Lid opening control cable adjustment	45
DRIVER'S SEAT	46
- Removal	46
- Refitting	46
- Component layout	47
REMOVING THE DRIVER'S SEAT	48
- Removing - refitting the cushion	48
- Removing	48
- Refitting	48
- Removing - refitting cushion sliding blocks	48
- Removing	48
- Refitting	48
- Removing - refitting the seatbelt	49
- Refitting	49

- Removing - refitting seatbelt connection and right-hand side upholstery	49
- Refitting	49
- Removing - refitting the left-hand side upholstery, IPS valve and heating switch	50
- Removing	50
- Refitting	50
- Removing - Refitting the back	50
- Removing	50
- Refitting	50
- Removing - Refitting the back adjustment lever	51
- Removing	51
- Refitting	51
- Removing- refitting the height adjustment device	51
- Removing	51
- Refitting	51
- Removing- refitting the seat angle adjustment device	51
- Removing	51
- Refitting	51
- Removing – Refitting the flexible cable of the shock absorber adjustment device	51
- Removing	51
- Refitting	52
- Removing – Refitting the back adjustment lever segment	52
- Removing	52
- Refitting	52
- Removing- refitting the air spring	52
- Removing	52
- Refitting	52
- Removing- refitting the shock absorber	52
- Removing	52
- Refitting	53

Aquila Trucks Centres

Page

Page

- Removing - refitting the height adjustment valve	53
- Removing	53
- Refitting	53
- Removing - refitting the height locking system	53
- Removing	53
- Refitting	53
- Removing - refitting the flexible cable of the horizontal lever suspension	53
- Removing	53
- Refitting	54
- Removing - refitting the fast lowering magnetic valve	54
- Removing	54
- Refitting	54
- Removing - refitting the fast lowering switch ..	54
- Removing	54
- Refitting	54
- Removing - refitting the lumbar support device	54
- Removing	54
- Refitting	54
- Removing - refitting the back upholstery	55
- Removing	55
- Refitting	55
- Removing - refitting the cushion upholstery ..	55
- Removing	55
- Refitting	55
DRIVER'S SEAT PNEUMATIC SCHEME	56
PASSENGER'S SEAT PNEUMATIC DIAGRAM ..	57
CABIN REFRIGERATOR	58
- Preliminary checks	58

- Removal	58
- Refitting	58
OVERHAULING	59
- Removing	59
- Fan removing	59
- Removing the anti-tipping probe with electronic circuit on the control unit	59
- Electronic control unit disassembling	60
- Checks	60
- Refitting	60
CAB AIR-CONDITIONING	61
- General	61
VENTILATION	61
- Description	61
AIR-CONDITIONING AND HEATING	62
- Description	62
- Air-conditioning	62
- Heating	62
- Air-conditioning controls assembly	62
- Manual	62
- Heating and ventilation	62
COMPONENT LAYOUT (WEBASTO AIR CONDITIONER)	63
HEATER ASSEMBLY COMPONENT LAYOUT (WEBASTO)	64
- Outside temperature sensor	65
- Compressor	65
- Condenser and safety pressure switches	66
- Stepper motors	67
- Evaporator temperature sensor	68
- Expansion valve	68
ADDITIONAL AIR HEATER SYSTEM (ON REQUEST)	69
- Description	69
- Operation	69

Aquila Trucks Centres

Page

Page

FAULT DIAGNOSIS	70	AIR-CONDITIONER COMPRESSOR	80
- Troubleshooting	70	- Removal	80
- Introduction	70	- Refitting	81
MAIN DATA	74	AIR-CONDITIONER CONDENSER	81
AUXILIARY AIR HEATER	74	- Removal	81
GENERAL WARNINGS	75	- Refitting	81
TIGHTENING TORQUES	75	OUTSIDE AIR TEMPERATURE SENSOR	81
REPAIR OPERATIONS	76	- Removal	81
HEATER	76	- Refitting	81
- Removal	76	REPLACING THE ELECTROMAGNETIC CLUTCH	82
- Refitting	76	PROCEDURE FOR DRAINING AND RECHARGING AIR CONDITIONING SYSTEMS WITH RECHARGING STATION 99305146 AND RECOVERY OF R134A COOLANT	84
ADDITIONAL AIR HEATER SYSTEM	77	SAFETY STANDARDS	85
- Removal	77	CONTROL FASCIA	86
- Refitting	77	OPERATION FLOW CHART	88
AIR RECIRCULATION DOOR CONTROL MOTOR	77	RECOVERING REFRIGERANT FROM THE VEHICLE SYSTEM	89
- Removal	77	CREATING A VACUUM IN THE SYSTEM	91
- Refitting	77	RESTORING OIL IN THE SYSTEM	93
ELECTRIC FAN	78	FILLING THE SYSTEM WITH REFRIGERANT ...	94
- Removal	78	CHECKING THE PRESSURES IN THE SYSTEM	96
- Refitting	78	OPERATIONS PRIOR TO DISCONNECTING THE STATION FROM THE SYSTEM	96
HEATER RADIATOR	78	PROCEDURE FOR DRAINING AND RECHARGING AIR CONDITIONING SYSTEMS WITH RECHARGING STATION 99305148 AND RECOVERY OF R134A COOLANT	97
- Removal	78	- Main components	97
- Refitting	79	SAFETY STANDARDS	98
TAP	79	CONTROL PANEL	99
- Removal	79	- Keypad functions	99
- Refitting	80	- Emergency warning light panel	99
POLLEN FILTER	80		
- Removal	80		
- Refitting	80		

Aquila Trucks Centres

Page

PRELIMINARY CHECKS	100
AUTOMATIC PROCEDURE	100
ASSISTED PROCEDURE	102
LEAK FINDER FOR AIR-CONDITIONING SYSTEMS WITH HFC R134A (99305147)	104
CHASSIS FRAME	105
TIGHTENING TORQUES	105
REPAIRS	106
CHECKS	106
- Measuring the bend of the chassis frame downwards or upwards	107
- Measuring the side bend of the chassis frame .	107
- Measuring the movement of the chassis frame	107
- Measuring the torsion of the chassis frame ...	108
PRECAUTIONS	108
- Welds on the chassis frame	110

Aquila Trucks Centres

5501 CAB**General information**

The cab is of an advanced type, hydraulically tilting by manual control.

Tilting angle 60°.

Construction in pressed and welded steel.

Protection: Box opening anticorrosive protection.

Door and outer panel inner side framework coated with galvanised metal sheet.

Cab suspension type:



- mechanic
- pneumatic on request only on AT.

CAB TYPE	CAB LENGTH	LOW ROOF	INTERMEDIATE HEIGHT ROOF
AT	LONG (2280x2100 mm)	F	F
AD	SHORT (2280x1660 mm)	F	

MAIN DATA

DESIGNATION	
Cabin with mechanic suspension	
Front suspension made up of:	
- stabilizer bar	1
- shock absorber with coaxial cylindric spring with adjusting device	2
Rear suspension made up of:	
- shock absorber with coaxial cylindric spring with adjusting device	2
- elastic pads	2
Cabin with pneumatic suspension, made up of:	
- stabilizer bar	1
- shock absorber with coaxial air spring	2
- levelling valve	2
Rear suspension made up of:	
- shock absorber with coaxial air spring	2
- levelling valve	1
Levelling valve	
- KNORR - BREMSE:	
- front, type SV1490 - K000264	2
- rear, type SV1491 - K000661	1
Working pressure	8.5 bar
Minimum pressure assured	0,5 ^{+0.8} _{-0.2} bar
Lever working maximum travel	± 20
- KNORR/BREMSE SV 1490-K0002464 (front and rear)	
Working maximum pressure	8.5 bar
Guaranteed minimum pressure	0,5 ^{+0.8} _{-0.2} bar
Lever maximum working travel	± 20


TOOLS

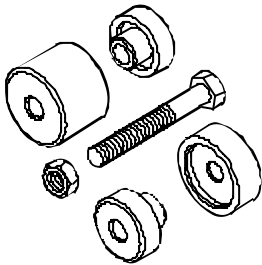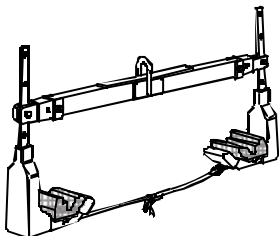TOOL NO.	DESCRIPTION
99346051 	Cabin front suspension bracket rubber bush disassembling/assembling tool
99378039 	Cabin removal-refitting swing bar

Aquila Trucks Centres

TIGHTENING TORQUES

Figure 1

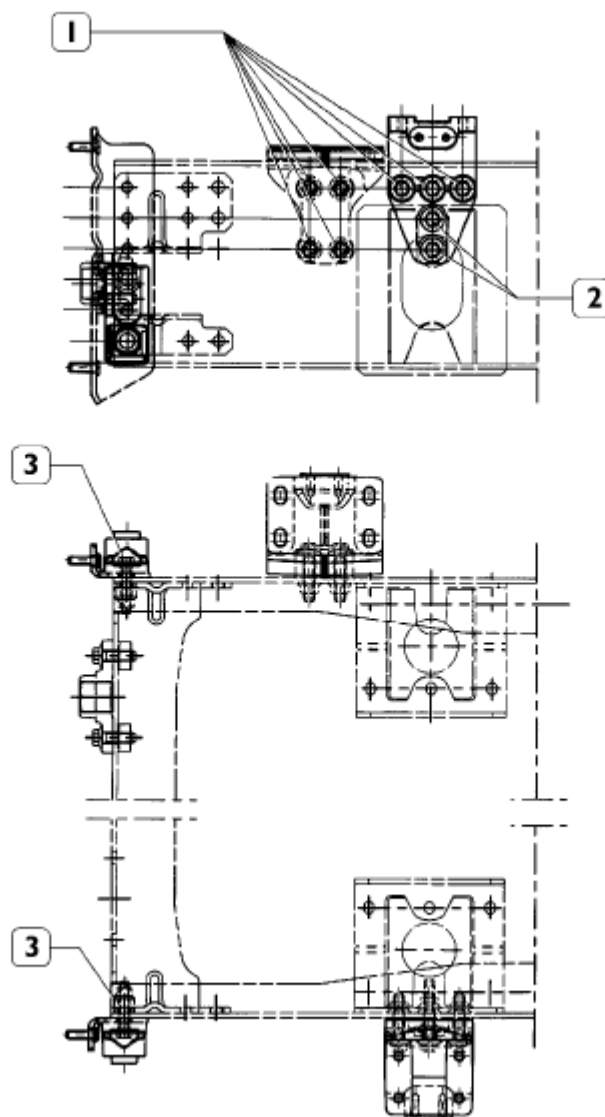

CAB SUPPORT FOR VEHICLES 4X2 - 6X4


19

DESCRIPTION	TORQUE	
	Nm	Kgm
1 Nut	226.5 ± 22.5	22.6 ± 2.2
Screw	278 ± 28	27.8 ± 2.8
2 Nut	226.5 ± 22.5	22.6 ± 2.2
3 Nut	179 ± 18	17.9 ± 1.8
Screw	146.5 ± 14.5	14.6 ± 1.4

Aquila Trucks Centres

TIGHTENING TORQUES

Figure 2

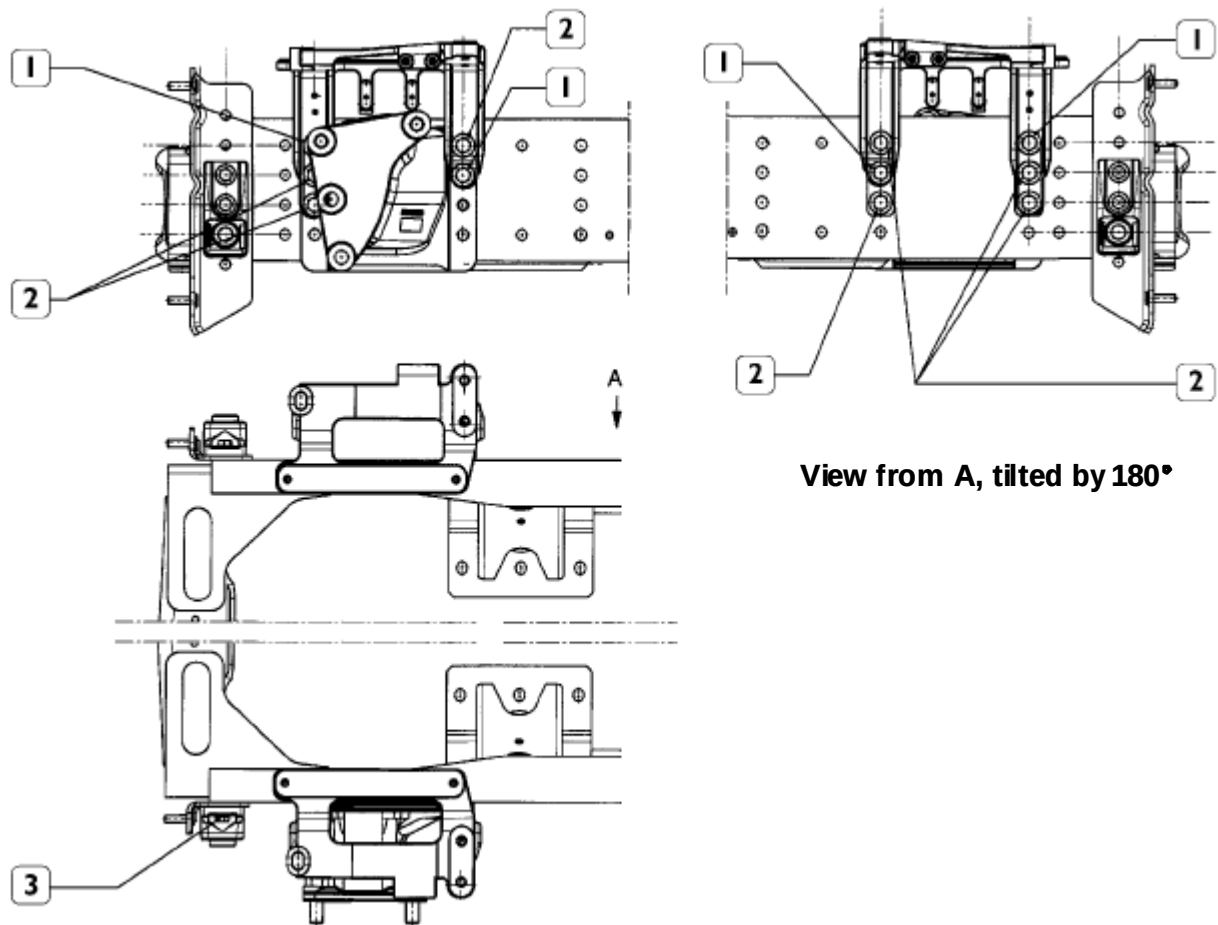

CAB SUPPORT FOR VEHICLES 4x4 - 6x6


20

DESCRIPTION	TORQUE	
	Nm	Kgm
1 Nut	226.5 ± 22.5	22.6 ± 2.2
Screw	278 ± 28	27.8 ± 2.8
2 Nut	226.5 ± 22.5	22.6 ± 2.2
3 Nut	179 ± 18	17.9 ± 1.8
Screw	146.5 ± 14.5	14.6 ± 1.4

Aquila Trucks Centres

TIGHTENING TORQUES

Figure 3

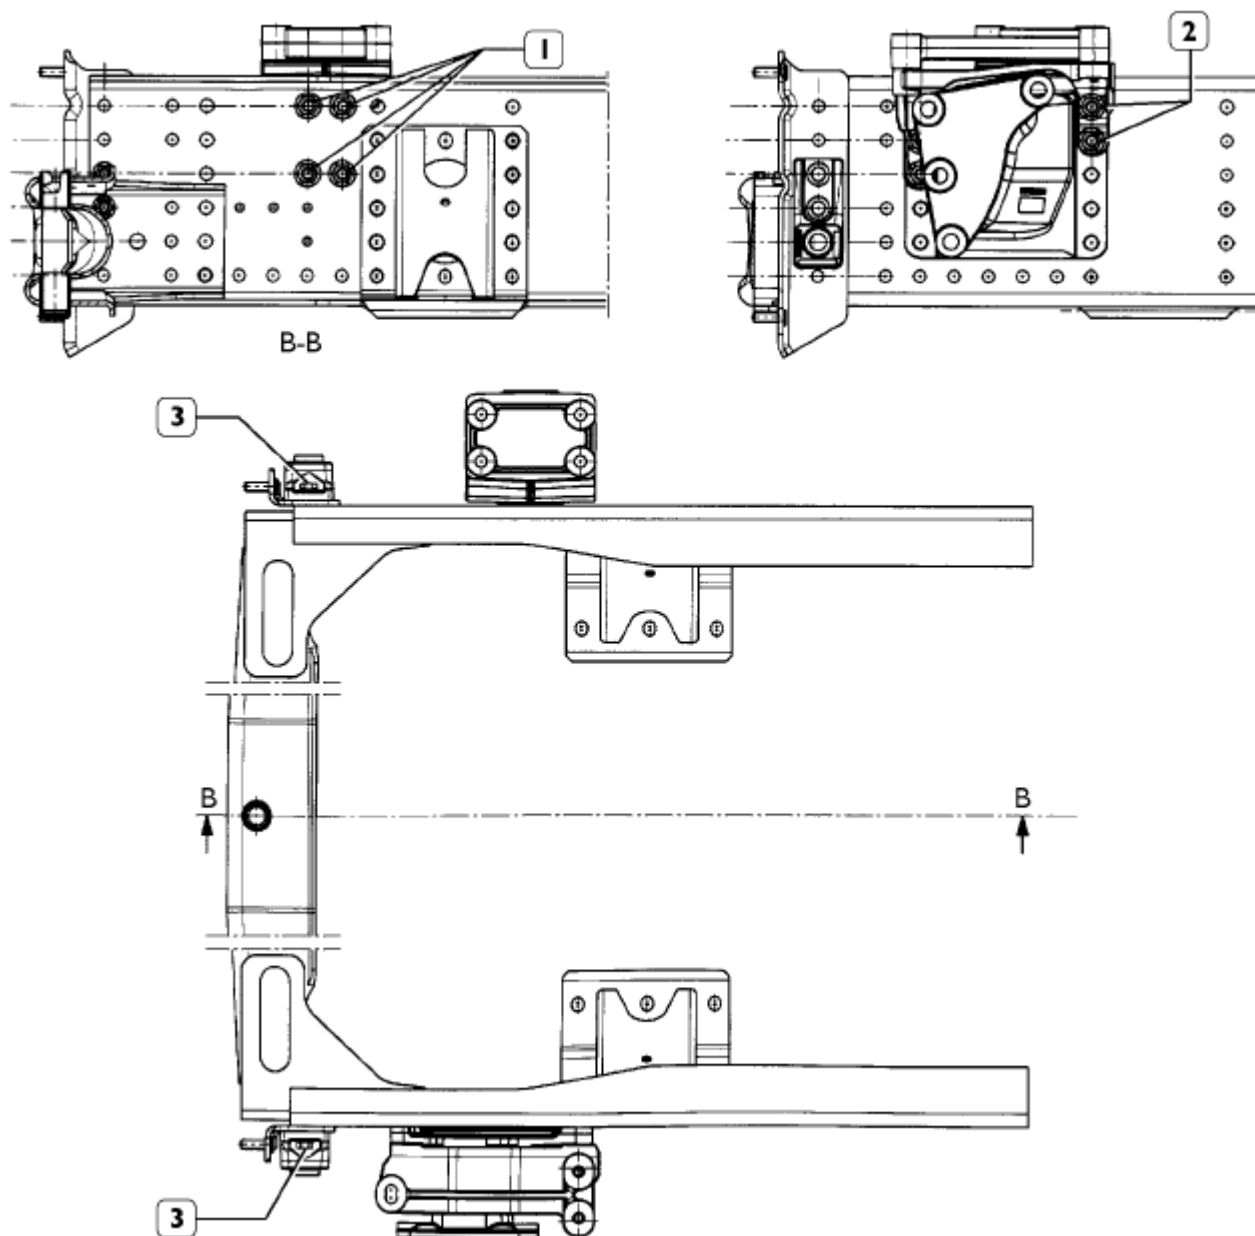

99121


CAB SUPPORT FOR VEHICLES 8x4 - 8x8

DESCRIPTION	TORQUE	
	Nm	Kgm
1 Nut	226.5 ± 22.5	22.6 ± 2.2
Screw	278 ± 28	27.8 ± 2.8
2 Nut	226.5 ± 22.5	22.6 ± 2.2
3 Nut	179 ± 18	17.9 ± 1.8
Screw	146.5 ± 14.5	14.6 ± 1.4

Aquila Trucks Centres

TIGHTENING TORQUE

Figure 4

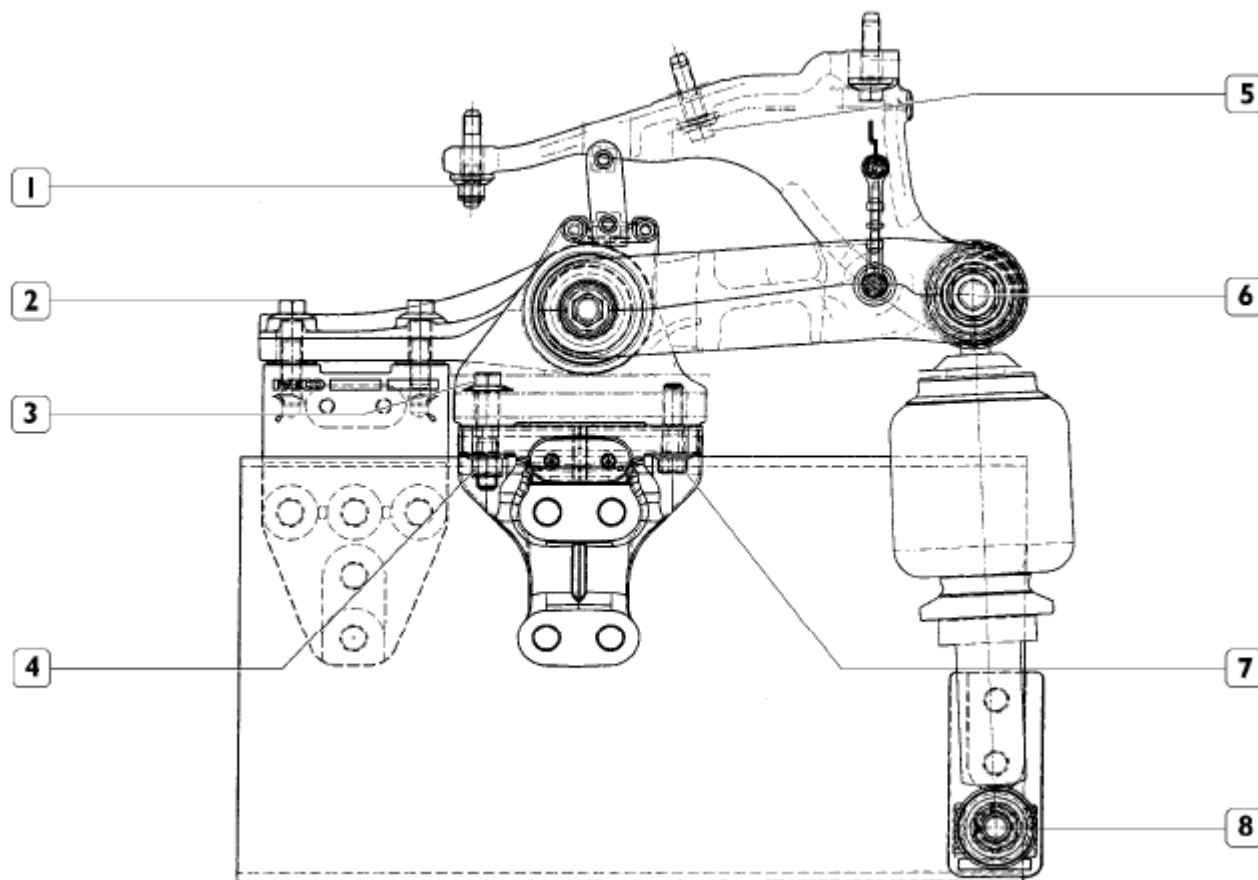

99122


CABIN FRONT SUSPENSION

DESCRIPTION	TORQUE	
	Nm	Kgm
1 Cabin front support fastening nut	83 ÷ 101	8.3 ÷ 10
2 Front left support fastening screw	173 ÷ 212	17.3 ÷ 21.2
3 Front right support fastening screw	161 ÷ 197	16 ÷ 19.7
4 Nut for screw securing right front support	132 ÷ 161	13.2 ÷ 16.1
5 Cabin front support fastening screw	109 ÷ 133	10.9 ÷ 13.3
6 Air spring/shock absorber upper fastening screw	400	40
7 Front right support fastening screw	173 ÷ 212	17.3 ÷ 21.2
8 Air spring/shock absorber upper fastening screw	490 ÷ 600	49 ÷ 60
Air spring/shock absorber upper fastening nut	398 ÷ 487	39.8 ÷ 48.7

Aquila Trucks Centres

TIGHTENING TORQUE

Figure 5

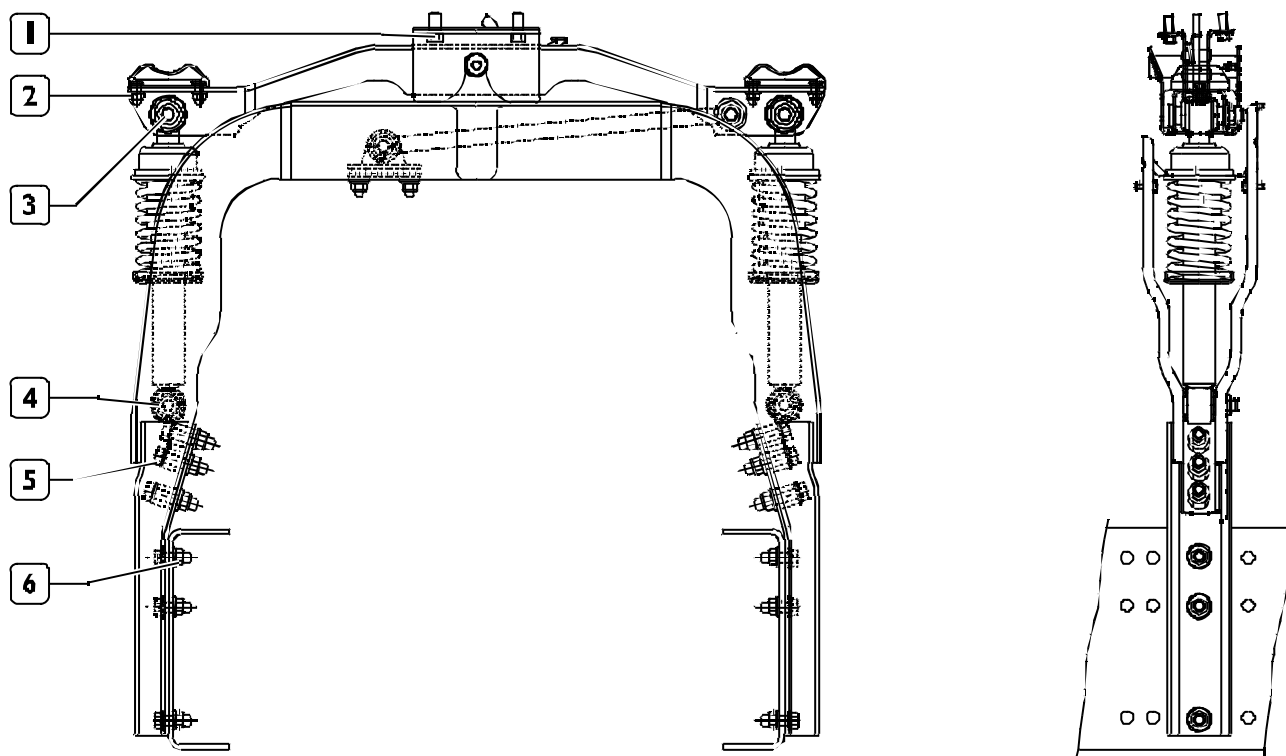

99123

DESCRIPTION		TORQUE	
		Nm	(Kgm)
Cab rear suspension			
1	Flanged hexagonal headed screw retaining lock	82 ± 9	(8.2 ± 0.8)
2	Self-locking hexagonal nut retaining flexible buffer to beam	140 ± 14	(14 ± 1.4)
3	Hexagonal headed screw retaining top of damper	82 ± 8	(8.2 ± 0.8)
4	Self-locking nut and hexagonal headed screw retaining lower end of damper	154 ± 15.5	(15.4 ± 1.5)
5	Hexagonal screw with flange for fastening the bracket to the crossbar	146.5 ± 14.5	(14.6 ± 1.4)
6	Hexagonal nut with self-locking flange and hexagonal headed screw with flange retaining bracket to chassis	179 ± 18	(17.9 ± 1.8)
	Hex screw with flange to secure support to cab (vehicles 8x4)	204.5 ± 21.5	(20.4 ± 2.1)
GAS PIPE FITTINGS			
	5/8" - 18 UNF	15.9	1.6
	3/4" - 18 UNF	15.9	1.6
	1" - 14 UNF	29.8	3


Aquila Trucks Centres

REPAIR OPERATIONS

NOTE Operations described and illustrated in following chapters refer to vehicle Tractor AD 380T having its cab with a mechanical suspension. Unless another indication is provided, these operations are also valid for a cab with a pneumatic suspension. Some operations, or part of them, may be either unnecessary or unsuitable to vehicles of other versions.

500210 BUMPER Removal

Figure 6

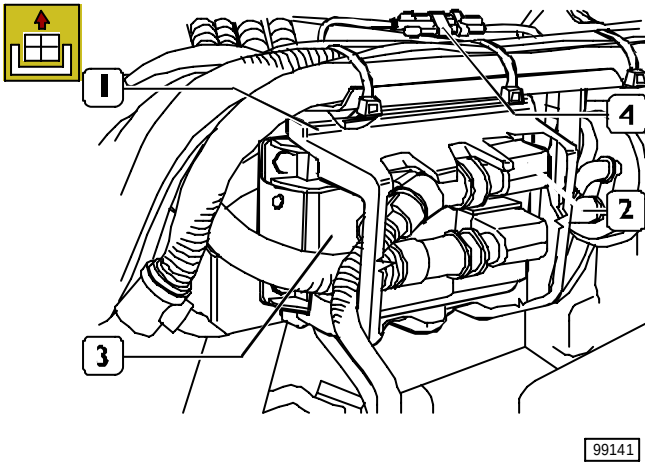

See Figure 6

Operating on main switch, take current off the electric system.

Tilt the cab.

Remove cover (1).

Disconnect the connector (2) from the F.F.C. control unit (3).

Cut wiring harness retaining clamps and disconnect connection (4).

See Figure 7

Lift the cowl.

Remove tow hook pin (1).

Remove the four screws (3) assuring bumper (2).

While supporting it, draw bumper (2) off securing brackets (6).

Remove screw (5) securing earth cable (4) to the chassis and accurately set bumper (2) in order not to damage it.

Refitting




Reattachment is carried out by properly reversing the detachment operations and tightening the nuts and screws to the specified torque



When reattachment operations have been completed, check correct operation of the lights or units affected by detachment.

Figure 7

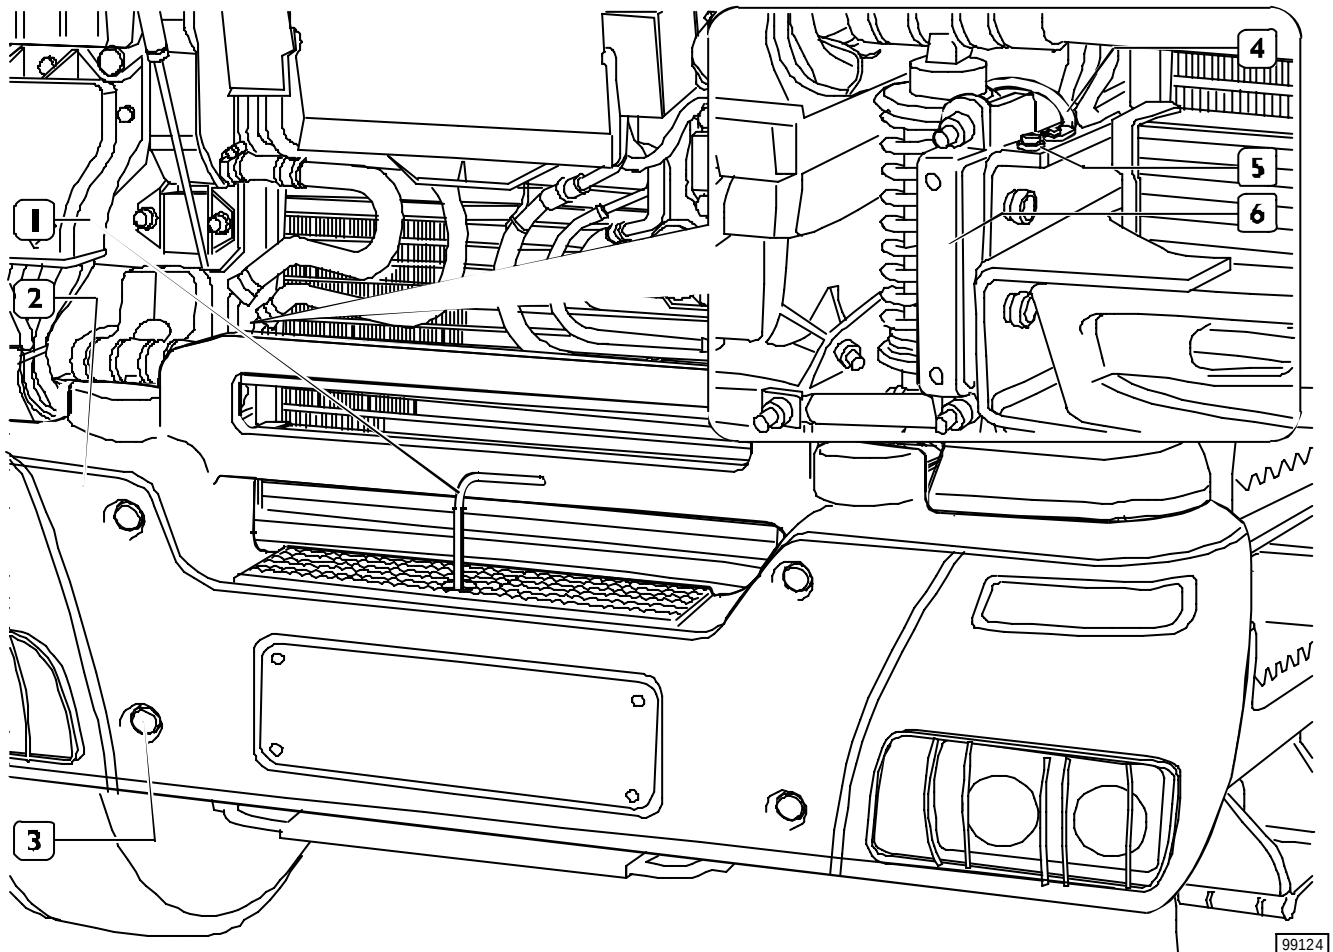

Aquila Trucks Centres

550101 CABIN

Removal the cabin


Position the vehicle with the front wheels in the straight direction of running. Lift the front grille. Remove the expansion tank cap, then partially drain the coolant off the engine cooling system.

If the cabin is equipped with an air-conditioning unit, remove the caps (1 and 2, Figure 8), apply unit 99305146 pipes to the adapters below, then blow the gas off the cabin conditioning system, as described in the respective chapter.

NOTE This operation must be carried out only by authorized, qualified skilled personnel.


Drain the pneumatic system.

Figure 8

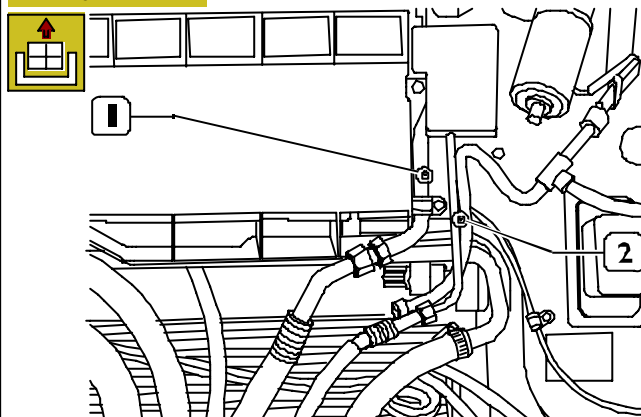

99125

Figure 9

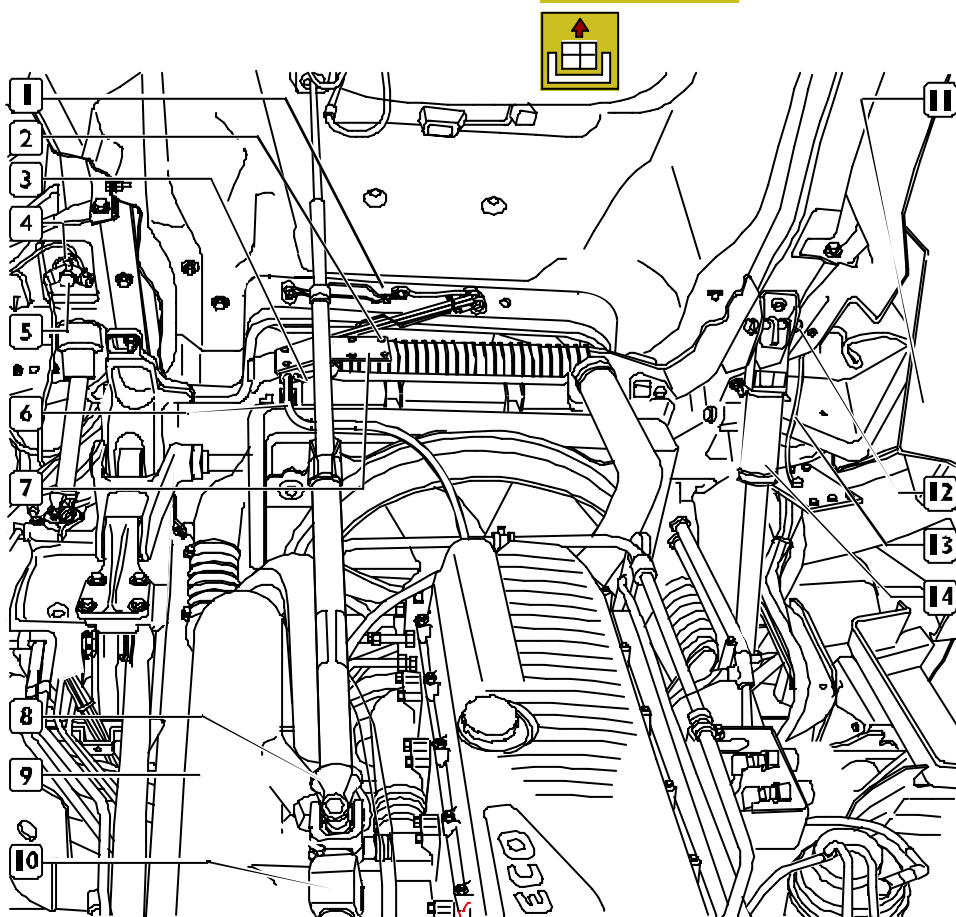

87329

Disconnect the coolant pipes: (6), (3) from radiator (1).

Remove screws (2) fastening the pipe support bracket (7) on radiator (1).

Remove nuts (4), then take off the steering control assembly adjusting pedal distributor (5).

Only for vehicles equipped with mechanic gearbox.

Mark the assembly position of the telescopic tie-rod Cardan joint (8) on gearbox control rod (10), then remove nut (9) with its respective screw and disconnect Cardan joint (8) from rod (10).

Properly secure the telescopic tie-rod to the cabin.

Remove the screws and take wheel splash guard (11) off the cabin.


Disconnect the heater fuel pipe (13), (where available), from the adapter.

Loosen the cabin tilting support cylinder (14) fastening nut (12).

Position the two wooden dowels of suitable thickness onto the cabin supporting rear crossbar, to avoid cabin lock engagement after the cabin has been lowered.
Lower the cabin.

Aquila Trucks Centres

Figure 10

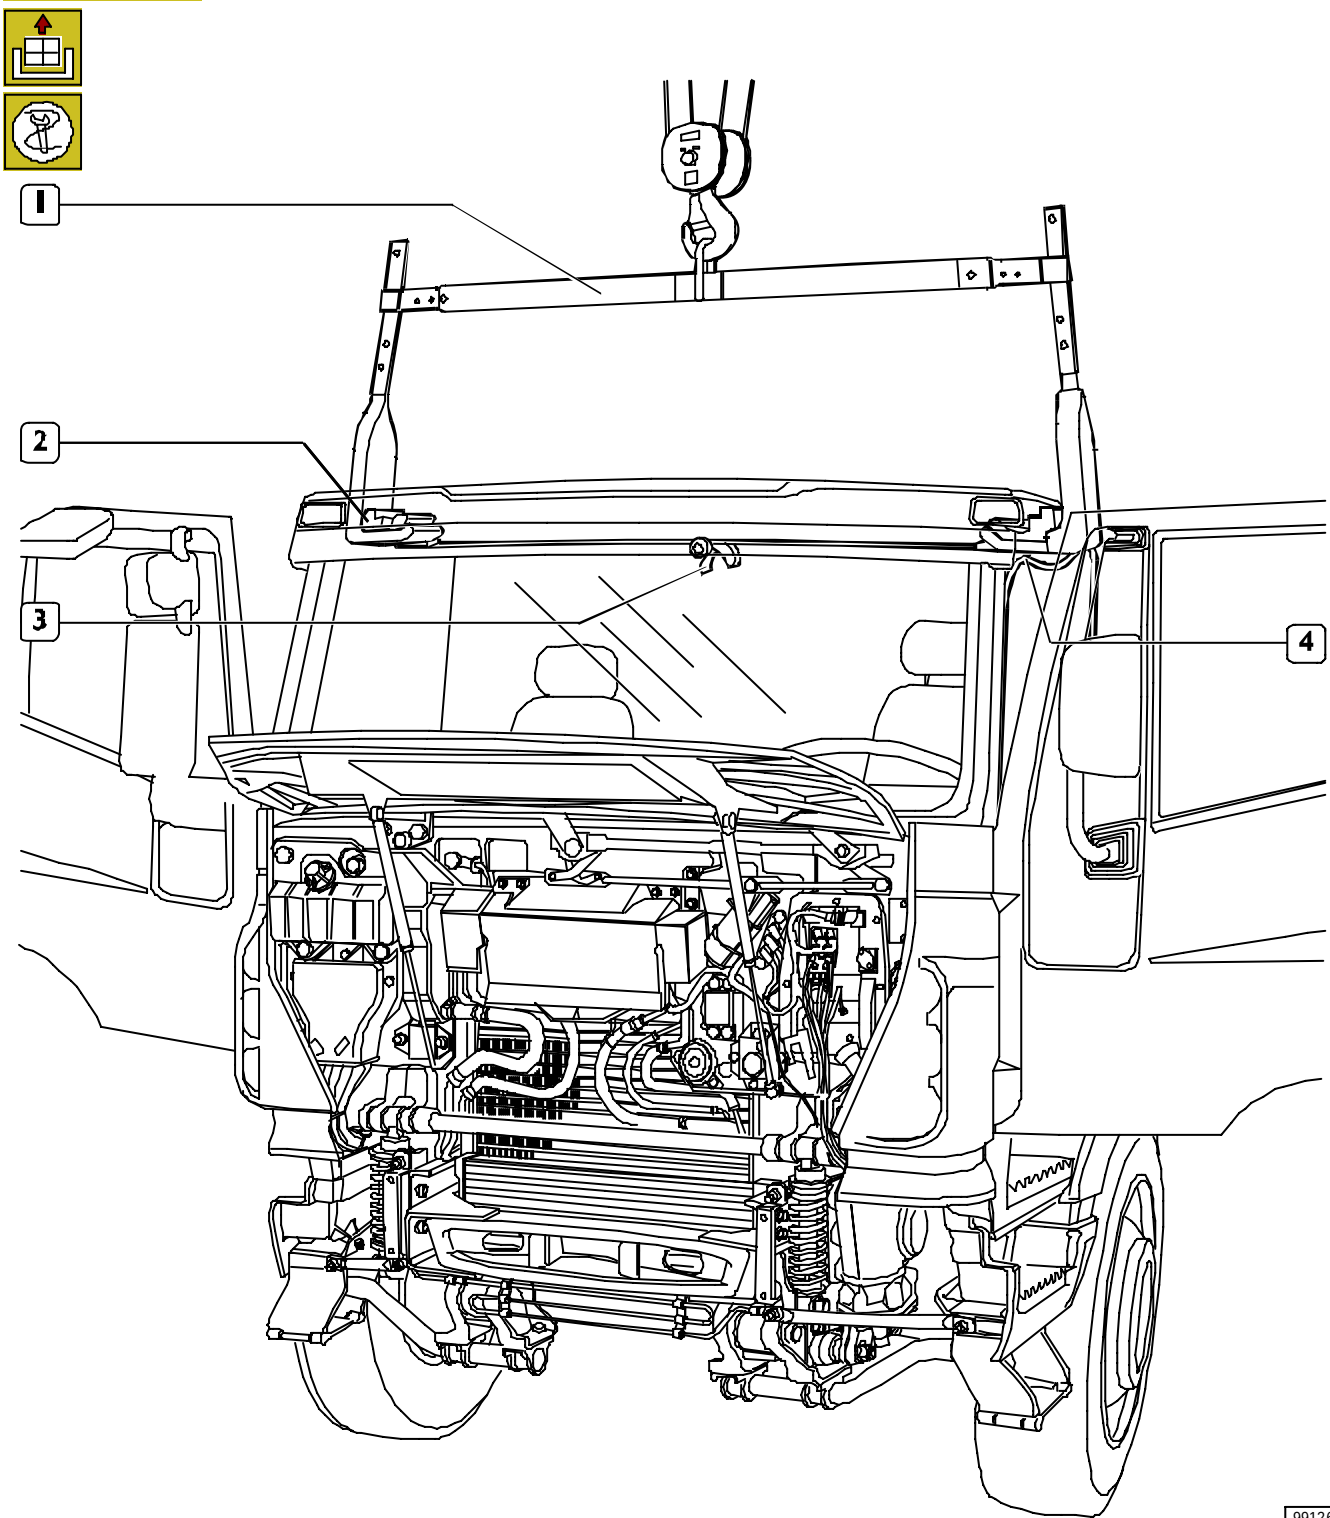


99126

Remove the bumper as described in the respective chapter (operation 500210).
From the door compartment upper side, remove gasket (4).
Hook swing bar 99378039 (1) to a bridge crane or other suitable lifting means, then harness the cabin.

Swing bar (1) hooks (2) must be positioned at about the door compartment centre line and secured to the latter by means of stretching device (3).

Aquila Trucks Centres


Figure 11

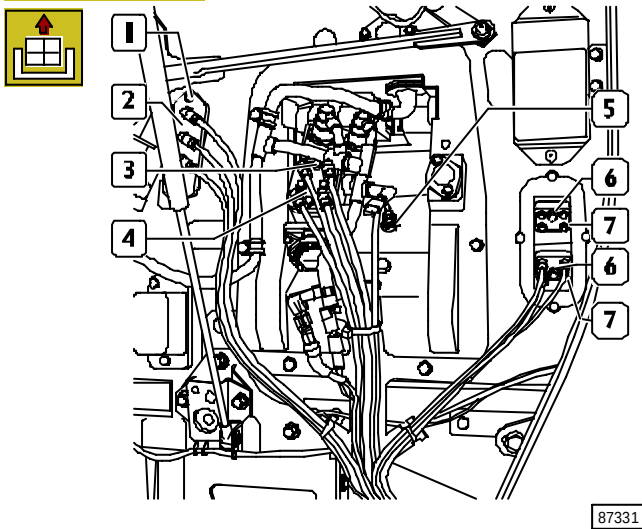

87331

Remove the nuts (1) and detach the cover (2) together with the pipes from the bulkhead connector.
Take out the screws (3) and detach the cover (4) together with the pipe from the control valve.
Remove screws (6), then take cover (7) off the bulkhead complete with pipes from the distributor.
Disconnect the pipe (5) of the steering assembly control device.

Figure 12

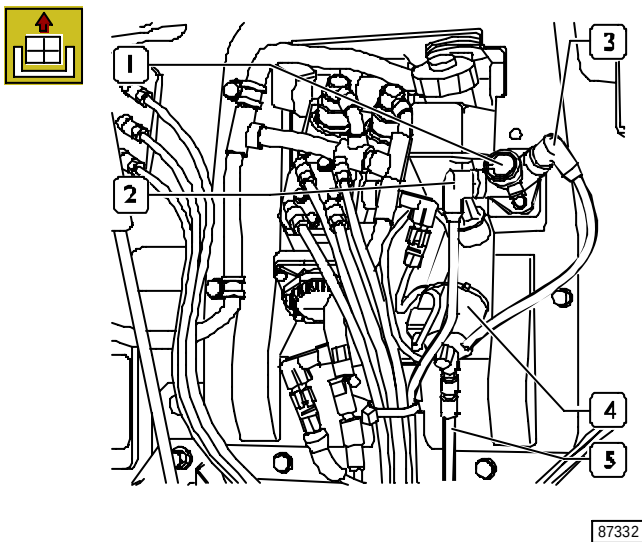

87332


Only for vehicles equipped with automatic gearbox:

- from distributor (1), disconnect pipes (2 and 3).
- place a container below master cylinder (4), disconnect piping (5) from the same, then drain the clutch fluid.



Properly plug the piping (5) and master cylinder (4) adapter, to prevent the clutch fluid from damaging painted parts. The clutch fluid is poisonous and corrosive: in case of contact, wash immediately with water and mild soap.


Figure 13

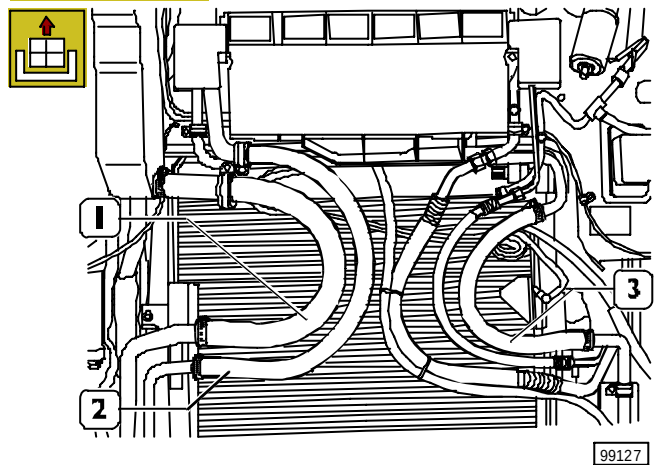

99127

Disconnect engine coolant pipes (1 - 2 and 3).
Cut the pipe-electric cable joining straps.
Disconnect the air-conditioning system gas pipes (3) and (4).

Figure 14

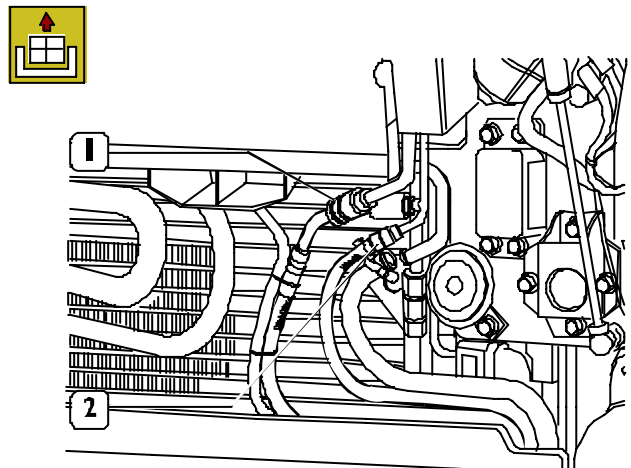


87333

Disconnect quick engagement air-conditioning system gas pipings (1 and 2), if present, by axially pressing them.

NOTE Seal the air-conditioning system pipes so as to prevent moisture or impurities getting into the system.

Aquila Trucks Centres

Figure 15

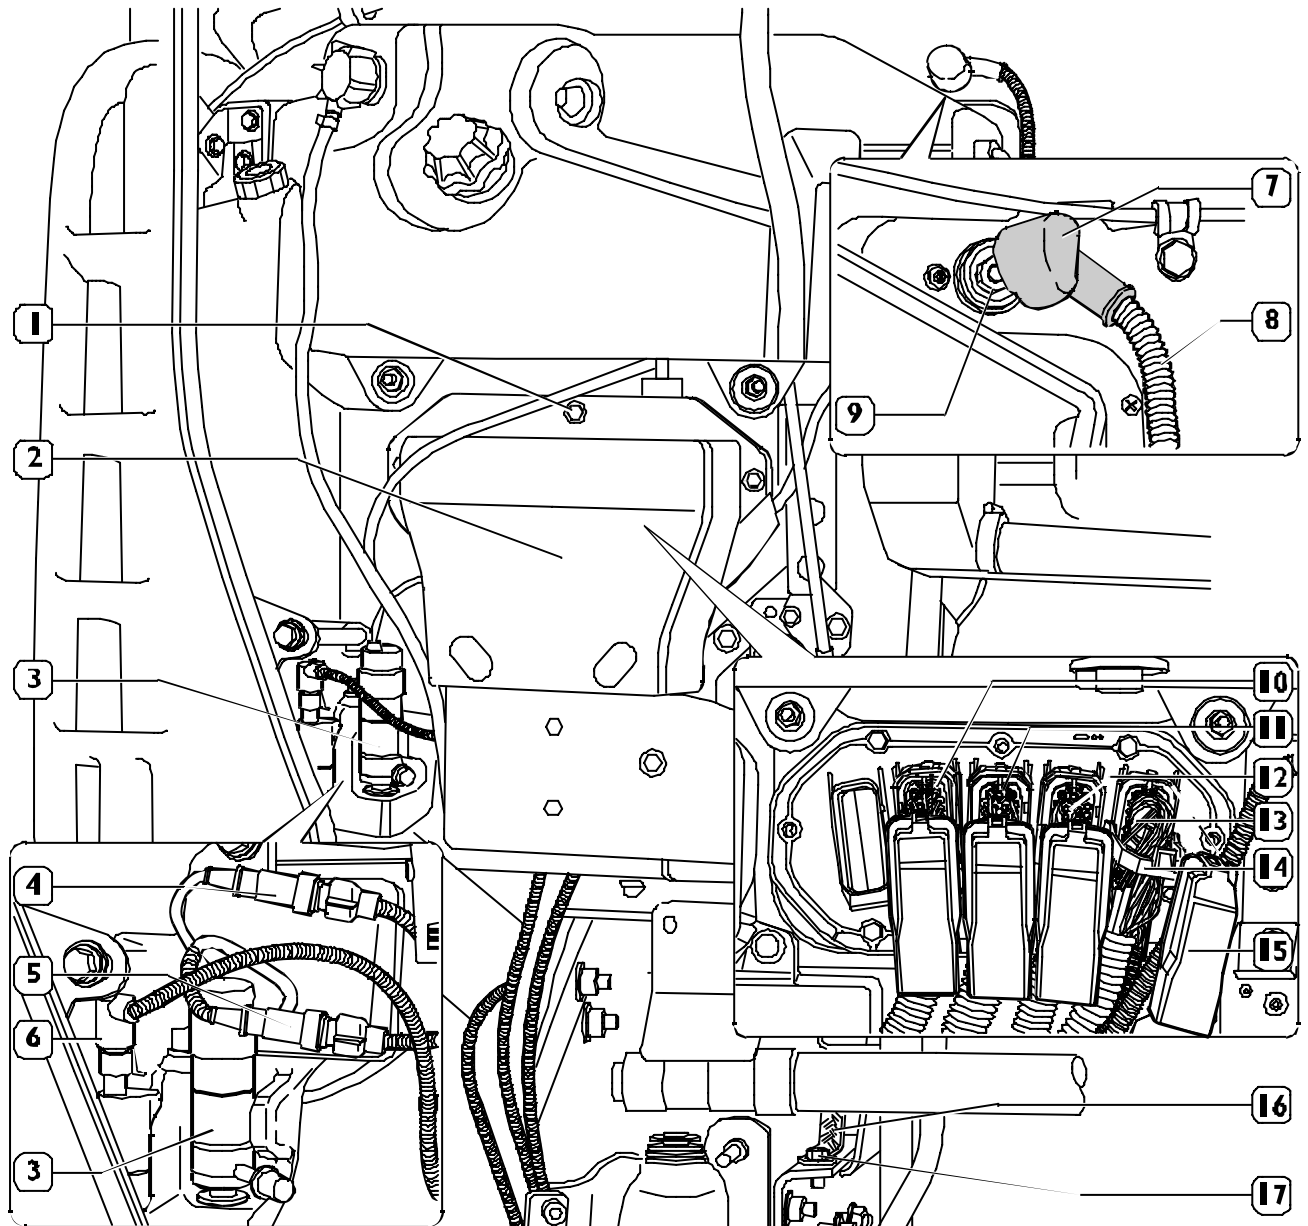

87334

Remove nuts (1) and take off cover (2).
Remove covers (15), release safety levers (14) and disconnect connections (10 - 11 - 12 and 13).

Disconnect the electric connections (4) and (5) of the motor pump (3) for the windscreen-headlight washer fluid.


Disconnect the electric connection (6) for the tank fluid level gauge.

Lift the protective cap (7), remove the nut (9) and disconnect the cable (8) from the cab.

Remove the nut (17) and disconnect the earth cable (16) from the chassis frame.

Aquila Trucks Centres

Figure 16

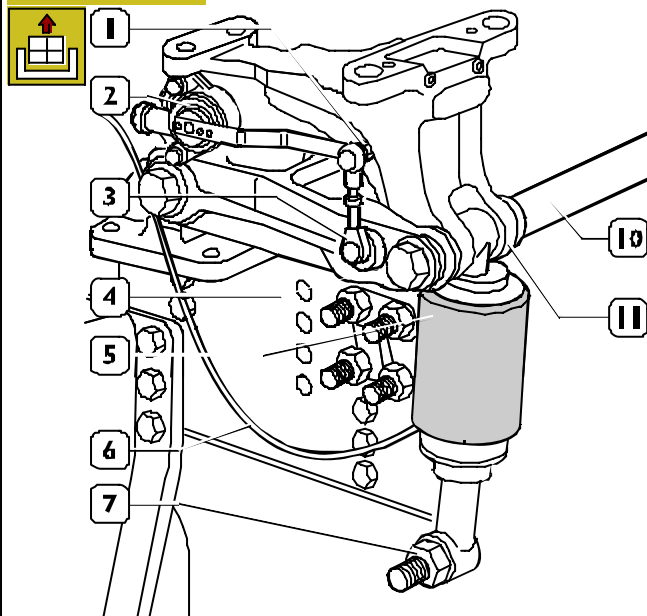

99128

Take out the screw (4) fixing the air spring mating pin (5), bar (8) and mount (9).

* Disconnect the pipe (6) from the shock absorber.


Remove bolt (7) securing the air spring (5) or shock absorber with coaxial spring to the chassis.

Repeat these steps on the opposite side.

* Remove the nut (1) and disconnect the tie rod (3) from the levelling valve (2).

* Only for pneumatic suspension cabins.


Figure 17

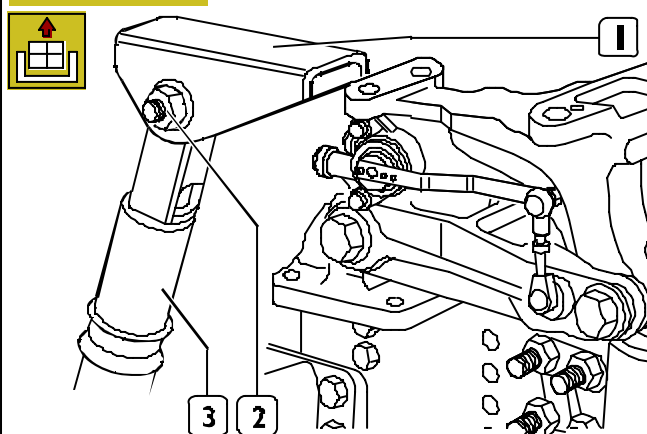

99129

Remove the bolt (2) fixing the cylinder (3) for tilting the cab from the cab mounting (1).


Figure 18

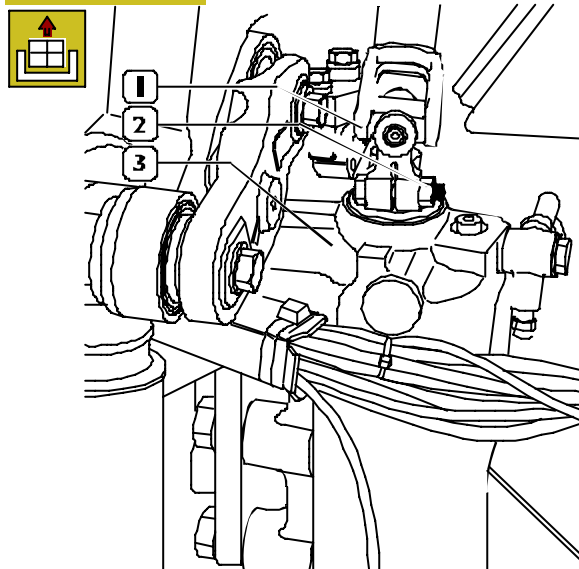

73159

Mark the assembly position of the universal joint (1) on the power steering shaft (3). Remove the bolt (2) and disconnect the universal joint (1) from the power steering shaft (3).

Figure 19

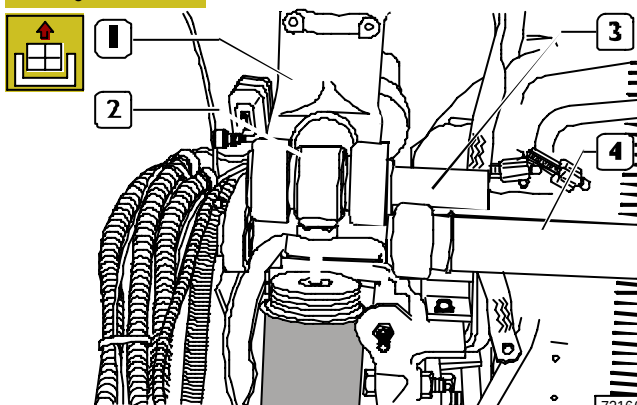

73160

Lift the cab and extract the mating pin (3) of the shock absorber (2), bar (4) and front cab mounting (1). Carefully lift the cab to detach it from the chassis frame and put it aside appropriately.

Refitting

Reattachment is carried out by reversing the order of detachment operations and by taking the following precautions:




- tighten the nuts or screws to the specified torque;
- the pneumatic piping adapter seal rings (O-rings) must not be reused; they must be replaced with new ones upon every reassembling operation;
- seal up the tachometer electric cable ring with proper sealing medium;
- check correct operation of instrument board warning lamps;
- in case of vehicles equipped with mechanic gearbox, restore the clutch hydraulic system oil tank level, then blow off air as described in the relevant chapter;
- restore the engine coolant level.

Fill up the air-conditioning system (where available) as described in the respective chapter.

Aquila Trucks Centres

554243 REPLACING THE FRONT SHOCK ABSORBER**Removal**

Figure 20

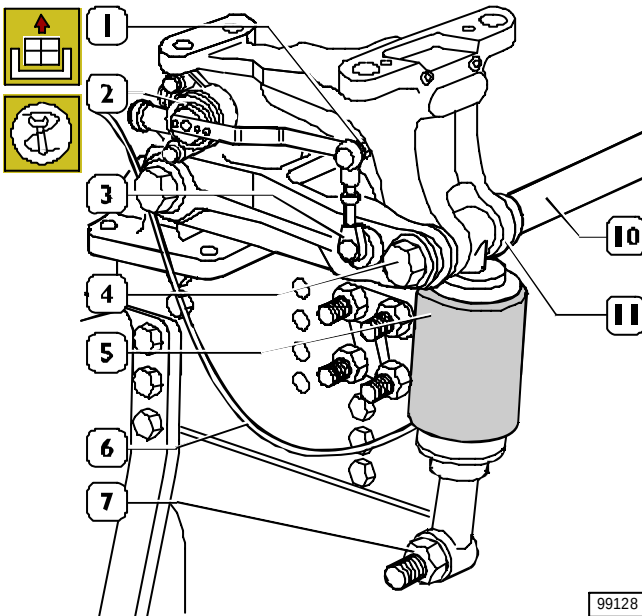

99128

Using the arm 99378039, sling the cab as described under the heading "Cab Removal-Refitting" and proceed as follows:
Remove the front bumper (operation 500210) as described under the relevant heading.

Remove the bolt (7) fixing the shock absorber (5) to the chassis frame.

Disconnect the pipe (6) from the shock absorber (5).


Take out the screw (4) fixing the shock absorber mating pin (5), bar (8) and mounting (9).

Repeat these steps on the opposite side.

For the right-hand air spring only

Remove the nut (1) and disconnect the tie rod (3) from the levelling valve (2).

Figure 21

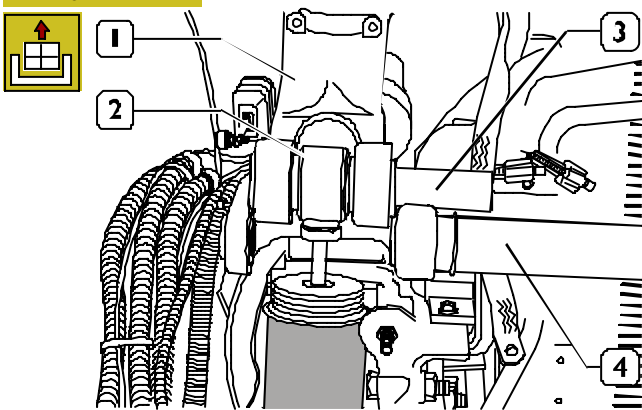

73162


Lift the cab and extract the mating pin (3) of the shock absorber (2), bar (4), front cab mounting (1) and remove the shock absorber (2).

Refitting

Carry out the steps performed for removal in reverse order, observing the required tightening torques.

REPLACING THE CAB SUSPENSION FRONT MOUNTING RUBBERTYPE BUSHINGS**Removal**

Figure 22

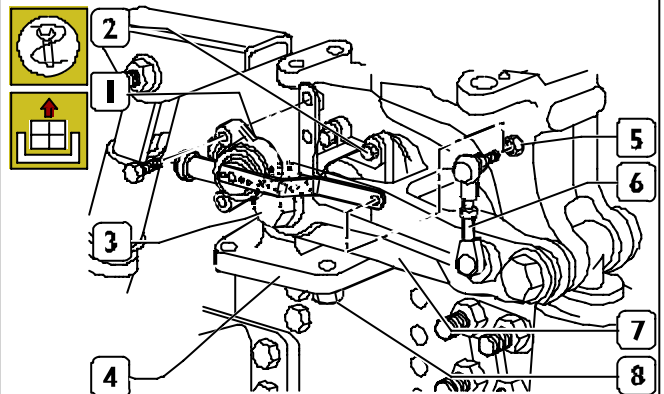

99130

Using the arm 99378039, sling the cab as described under the heading "Cab Removal-Refitting" and proceed as follows:
Remove the front bumper (operation 500210) as described under the same heading.

Removing the right-hand front suspension mounting

* Remove the nut (5) and disconnect the tie rod (6) from the levelling valve (1).

* Take out the screws (2) and remove the bracket together with the levelling valve (1).

* Disconnect the air pipe (6, Figure 20) from the shock absorber (5, Figure 20).

Remove screw (3) joining bar (7) to lower support (4).


Remove the bolt (7, Figure 20) fixing the shock absorber (5, Figure 20) to the chassis frame.

Remove screws (8), and disconnect lower support (4) from the chassis.

* Only for cab with pneumatic suspension

Removing the left-hand front suspension mounting

Figure 23

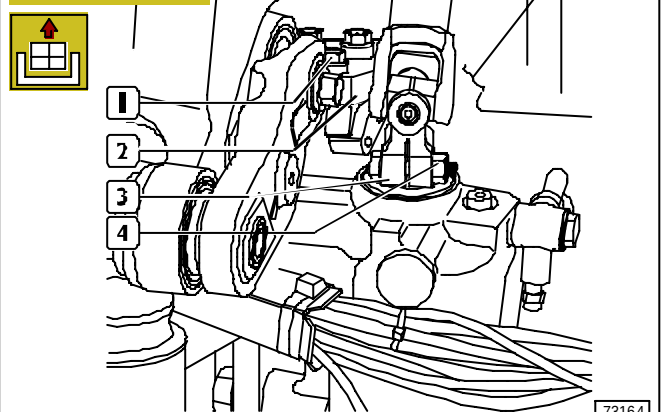

73164

Remove the bolt (4) and disconnect the universal joint (3) from the power steering shaft.


Repeat the operations described for disconnecting right lower support.

Remove screws (1), and disconnect lower support (2) from the chassis.

Aquila Trucks Centres

Refitting

Figure 24

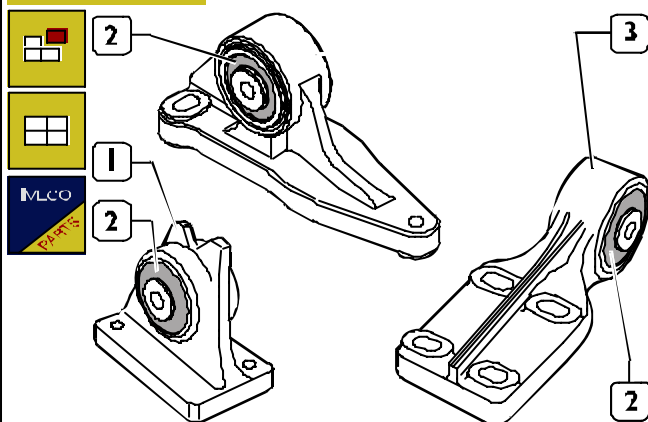

99131

Cab suspension lower supports are of different types and their matching depends on vehicle version. Replacing bushings (2) from supports (1-3) is by using a press and suitable beater.

Refitting




Carry out the steps performed for removal in reverse order, observing the required tightening torques.



REPLACING CAB FRONT UPPER SUPPORT BUSHINGS

Removal

Figure 25

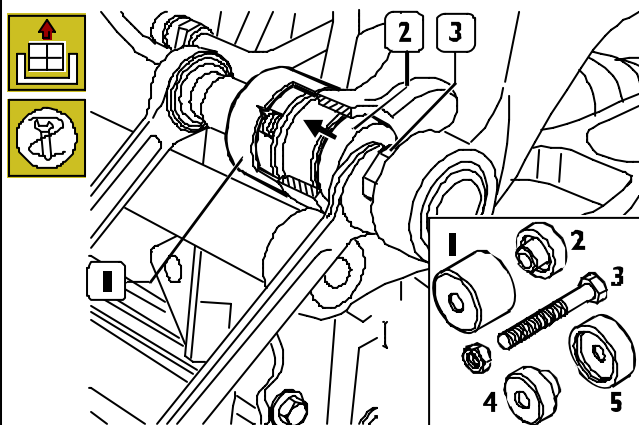


87291

Remove the shock absorbers as described in the "Front shock absorber replacement" chapter.

Extract the bush with elements (1, 2 and 3) of tool 99346051 and remove the bush.

Figure 26

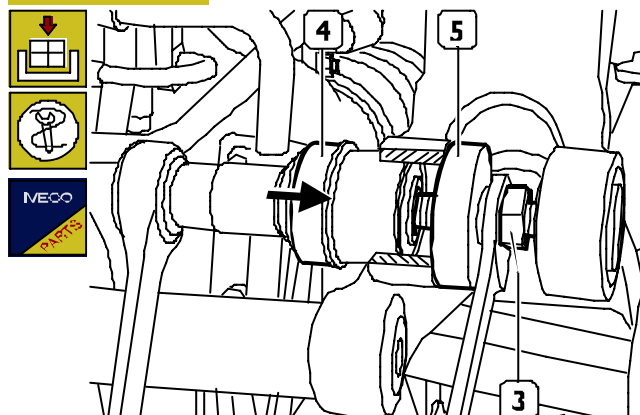


87292

Use elements (3, 4 and 5) of tool 99346051 to fit the bush in its seat.

REMOVING - REFITTING THE STABILIZER BAR

Removal

Figure 27

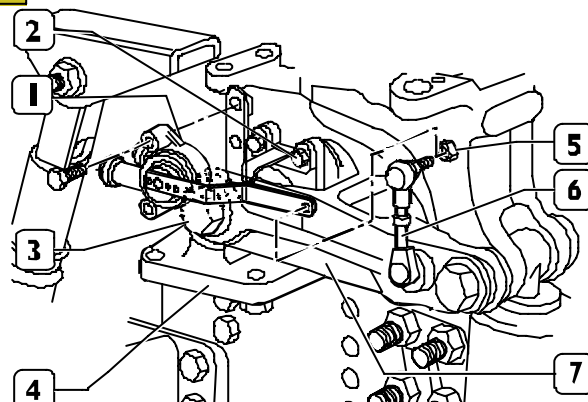

99132

Using the arm 99378039, sling the cab as described under the heading "Cab Removal-Refitting" and proceed as follows. Remove the front bumper, operation 500210 as described under the same heading. * Remove the nut (5) and disconnect the tie rod (6) from the levelling valve (1). * Take out the screws (2) and remove the bracket together with the levelling valve (1). Remove the bolt (4, Figure 23) and disconnect the universal joint (3) from the power steering shaft. Remove the shock absorbers as described under the relevant heading. Take out the screw (3) and remove the stabilizer bar (7) from the mounting (4).

* Cab with pneumatic suspension

Refitting




Carry out the steps performed for removal in reverse order, observing the required tightening torques.



Aquila Trucks Centres

Figure 28

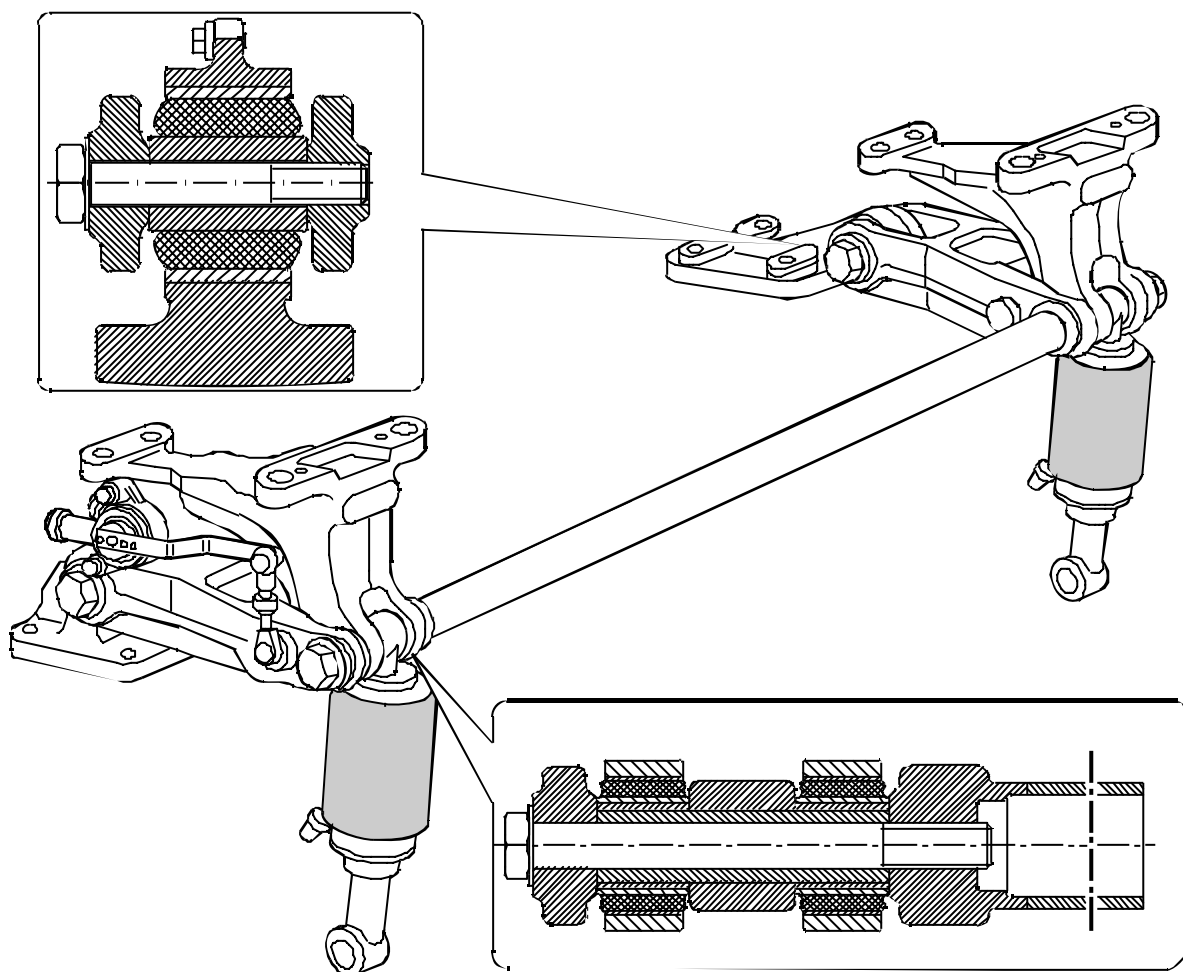


99133

CAB FRONT ANCHORING COMPONENTS

Aquila Trucks Centres

554243 REPLACING REAR CAB SUSPENSION DAMPERS**Removal**

Figure 29

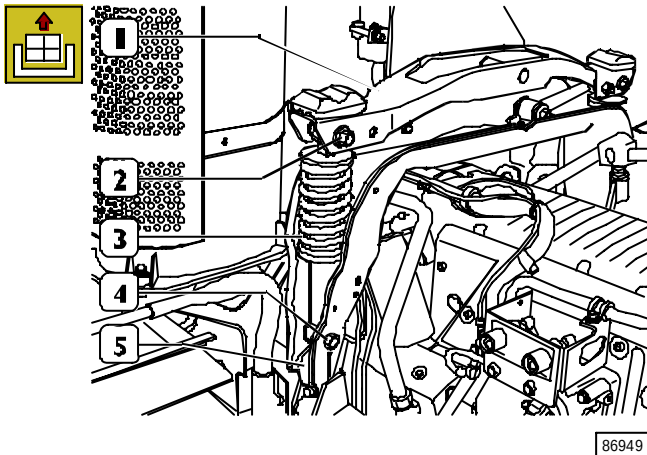

Tilt over the cabin.

On pneumatic suspensions cabins, disconnect the pipe from the air spring.


Remove bolts (2 and 4) and take shock absorber (3) off the upper (1) and lower (5) crossbars.

Refitting

Reattachment is carried out by reversing the order of detachment operations and by following the specified tightening torque values.

**REPLACING THE TRANSVERSE TIE ROD BUSHINGS****Removal**


Figure 30

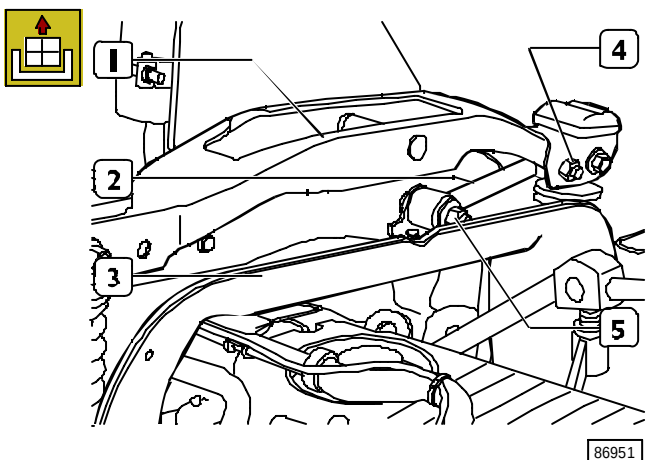

Remove bolts (4 and 5), then take transverse tie rod (2) off crossbars (1 and 3).

Disassembling/reassembling the bushings

Figure 31

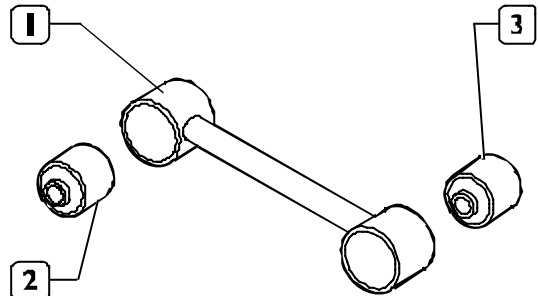


Transverse tie rod (1) elastic bushings (2 and 3) can be replaced by using a suitable beater and press for disassembling/reassembling operations.

Refitting

To reattach the transverse tie rod, reverse the order of detaching operations, by tightening bolt (4, 5, Figure 30) nuts to the specified torque.

Nuts are of the self-braking type; it is recommended that they are replaced with new parts every time disassembling is performed.

Figure 32

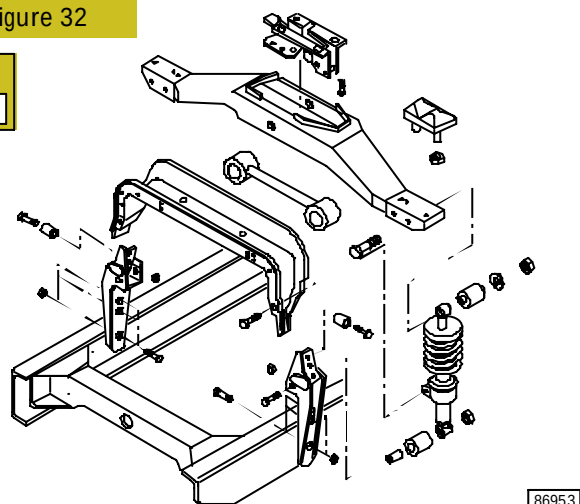


PARTS MAKING UP THE CABIN REAR SUPPORT AND LEFT SIDE MECHANIC SUSPENSION

Aquila Trucks Centres

LEVELLING VALVE


Removal

Figure 33

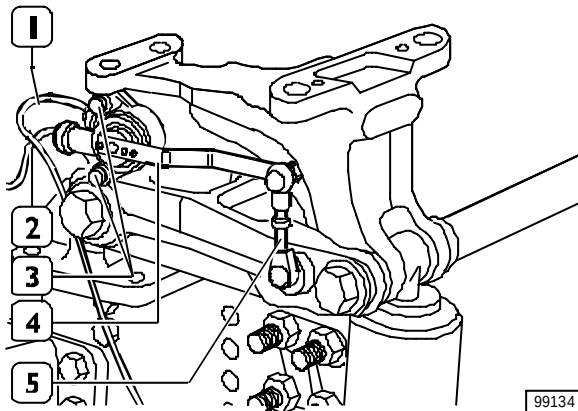

99134

 The figure shows the front levelling valve; similarly, the descriptions of detachment operations also apply to the rear levelling valve. Disconnect pneumatic pipes (1 and 2) from levelling valve (4). Disconnect tie-rod (5) from the articulation pin, then remove the fastening screws (3) and take off levelling valve (4).




Refitting

Reverse the order of detachment operations, and tighten the screws to the specified tightening torque. As far as tie-rod (5) check and adjustment are concerned, see the respective chapter.

CHANGING THE CAB LOCK

Removal

Figure 34

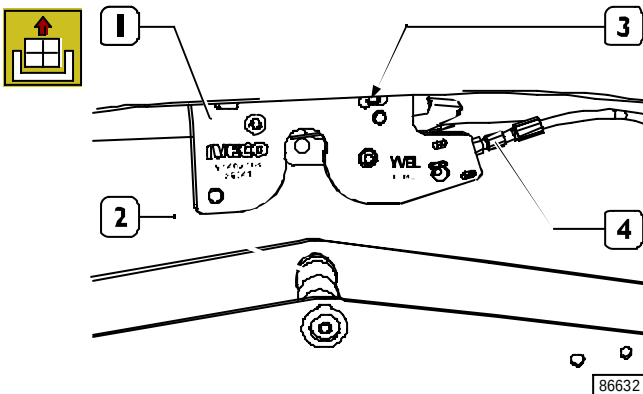

86632

Disconnect piping (4) from lock (1), then recover the oil in a special container.

Remove screws (3), then take off the lock.



Refitting

Carry out the steps performed for removal in reverse order, observing the required tightening torques.

NOTE Lock (4) fastening screws (3) must be locked when cabin anchoring pin (2) is aligned to the respective seat of lock (4).


After reattachment has been completed, check the oil level and proceed with drain as described in the relevant chapter.

CAB TILT CYLINDER

554255 REPLACING HYDRAULIC CAB TILT CYLINDER

Removal

Figure 35

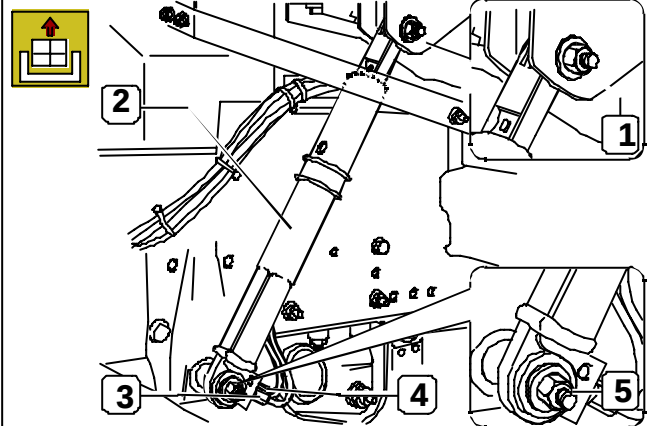

99135

Place a container under oil piping (3 and 4) to recover the oil from the system. Disconnect oil piping (3 and 4) from cabin tilting cylinder (2) adapter. Remove bolt (1) and nut (5), then take off cylinder (2).



This operation must be carried out with the cab lowered.

Refitting




Reattachment is carried out by reversing the order of detachment operations, by tightening the nuts to the specified torque.



After reattachment has been completed, fill up and blow air off the hydraulic system, as described in the relevant chapter.

Aquila Trucks Centres

Figure 36

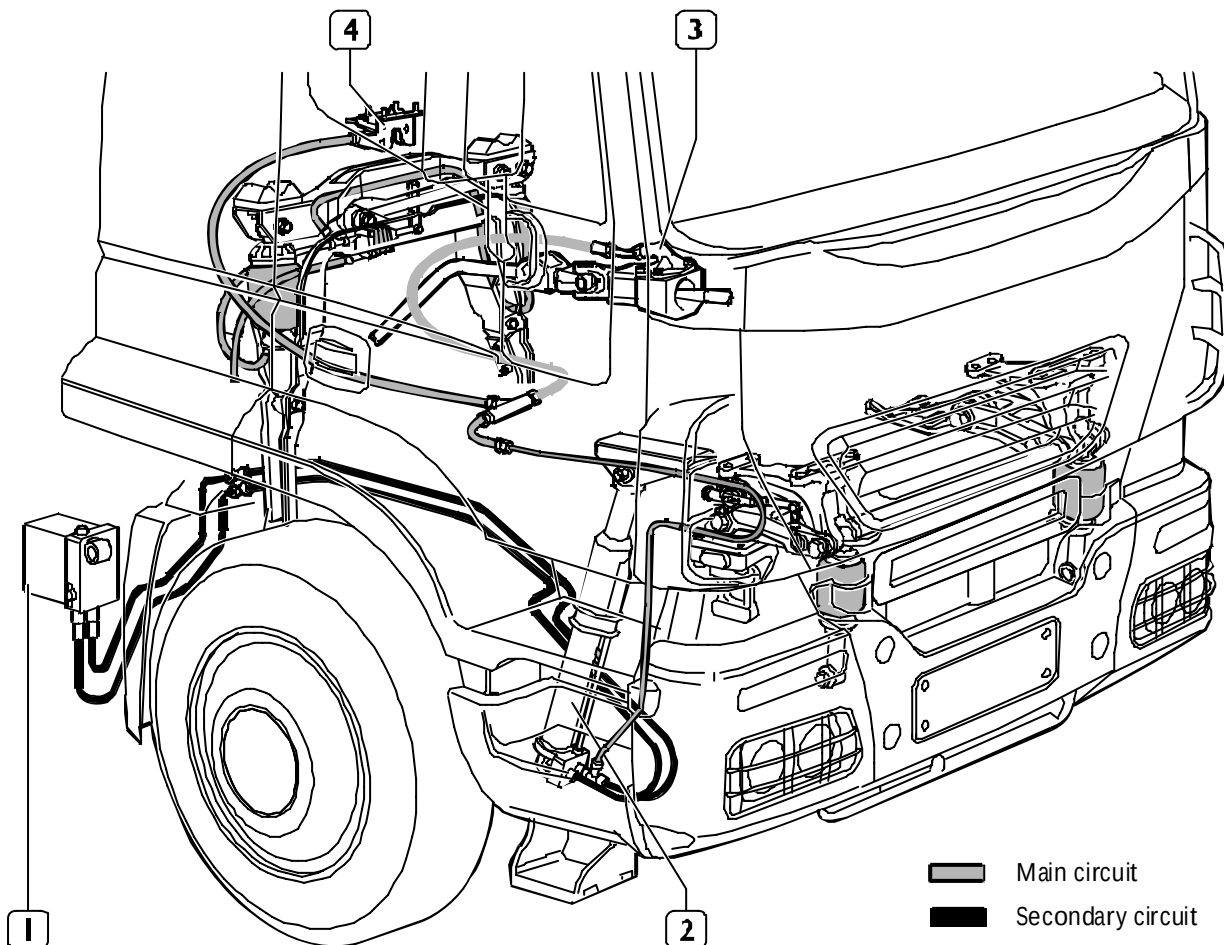

102622


CAB TILTING SYSTEM COMPONENT PARTS

1. Hand driven pump - 2. Cab lifting cylinder - 3. Hydraulic actuator to release gearbox control telescopic tie rod (only for mechanic gearbox) - 4. Cab hitching up lock

Aquila Trucks Centres

Checking oil level

Figure 37

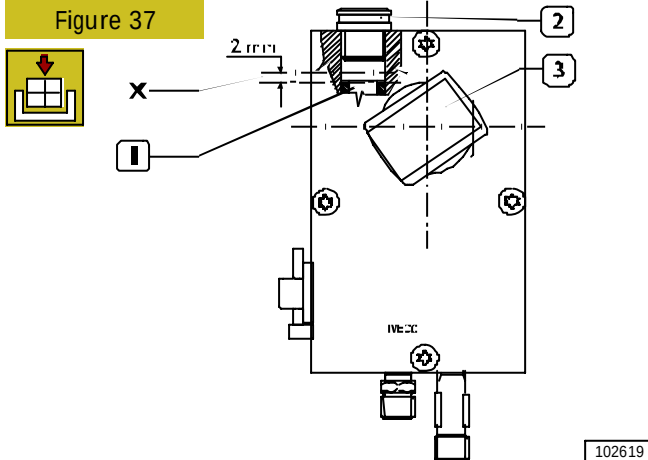

102619

NOTE Cab must be lowered in ride condition.

Position pump drive lever (3) as indicated in figure. Remove plug (2) and check that oil level X results to be above plunger (1) by some 2 mm; otherwise, top up.


Bleeding cab tilt system

NOTE Bleed the air in the event of general tilt system malfunctioning and for the following operations (see Figure 36).

- 1) Replacing manual drive pump (1);
- 2) replacing cab tilting cylinder (2) and main circuit pipings;
- 3) replacing lock (4) and secondary circuit pipings;
- 4) replacing all components of tilting system.

Bleeding air from manual drive pump (point 1)

Figure 38

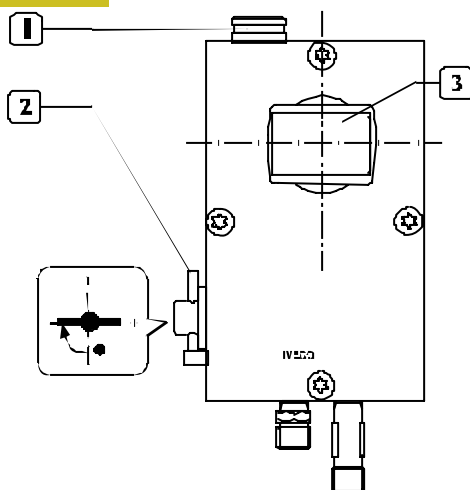


102620

- Rotate tap (2) to the position shown in figure;

- take off plug (1);
- slowly drive lever (3) five times, (through full range);
- check the level as described in relating chapter.

Bleeding air from cab tilting cylinder (point 2)

Figure 39

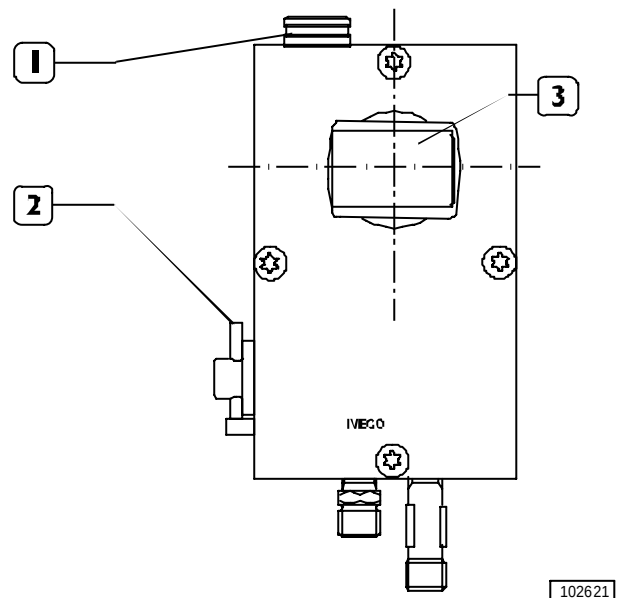

102621

- Cab lowered to drive position
- take off plug (1) and check oil level as described in relating chapter, topping up, if required;
- rotate tap (2) to cab lowered position;
- slowly drive lever (3) at least forty times (through full range);
- check oil level as described in relating chapter

Bleeding air from secondary circuit (point 3)

- Disconnect piping from lock (4, Figure 38) and hydraulic actuator (3, Figure 38);
- drive lever (3) until oil is drained away into special container;
- check oil level as described in relating chapter.


Bleeding air fully

In case all cab tilting system components are replaced, bleed air as described on points 1-2-3.

Aquila Trucks Centres

Cab mechanic suspension

Figure 40

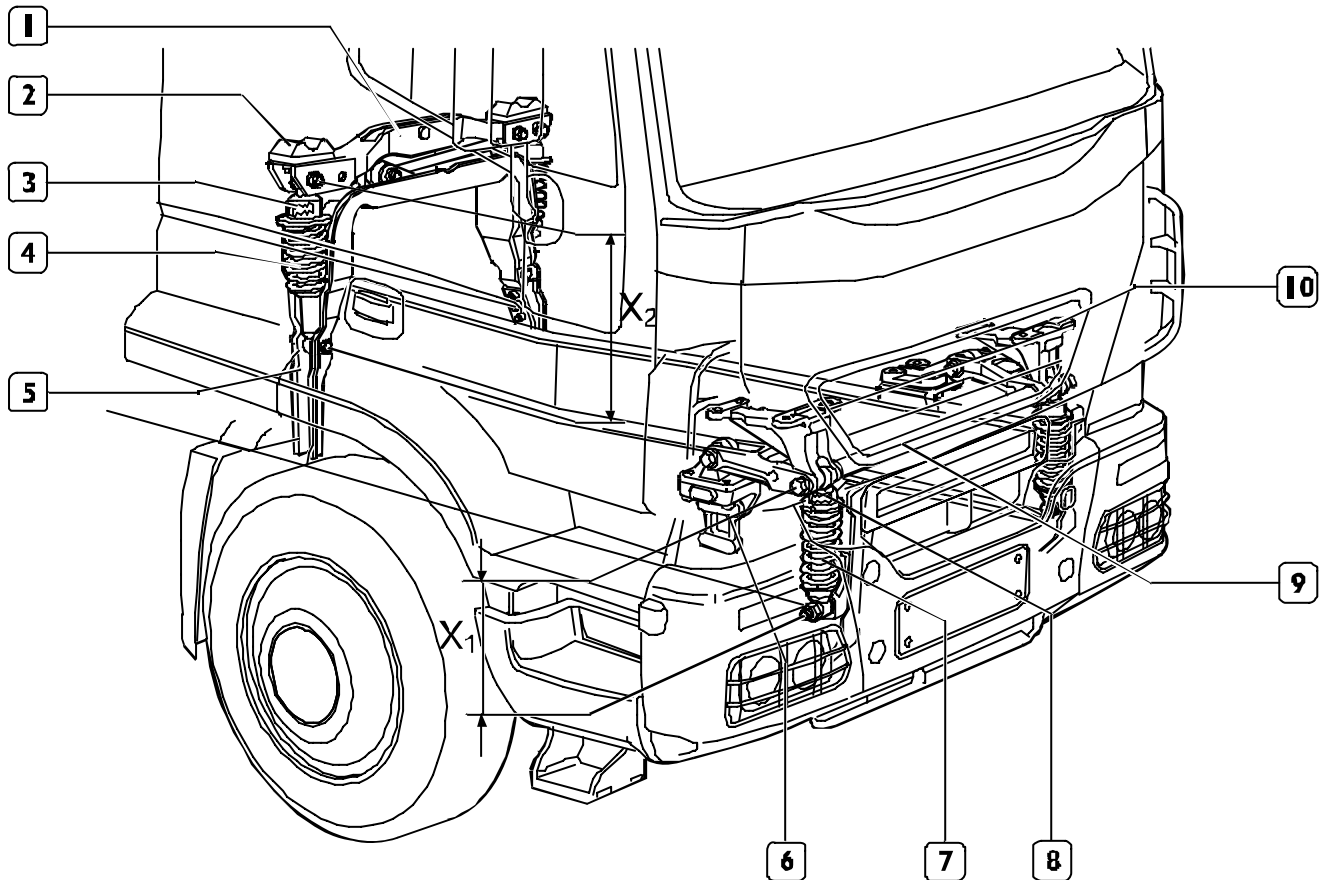

99138

LOCATION OF CAB SUSPENSION COMPONENTS

1. Cross member - 2. Rubber block - 3. Rear shock absorber regulator - 4. Rear shock absorber - 5. Bracket - 6. Support - 7. Front shock absorber - 8. Front shock absorber regulator - 9. Torsion bar - 10. Brackets - 11. Torsion bar

Cab driving position adjustment

With cab under static load condition, check length X_1 of front shock absorbers (7) and length X_2 of rear shock absorbers (4).

NOTE By static load it is only meant the load that is determined by the type of cab fitting.

$$X_1 = 380 \text{ mm}$$

- X₂ :
- vehicles: 4x2 - 6x4 - 8x4 = 400±3 mm
 - vehicles: 4x4 - 6x6 - 8x8 AD (short cab) = 362±3 mm
 - vehicles: 8x8 AT (long cab) = 400±10 mm

If different values are found, rotate the regulator (3 and/or 8) of relevant shock absorbers with a suitable wrench.


NOTE The regulator is provided with 5 marks, each mark, starting from the central reference mark, corresponding to a length shift of 4 mm.

Aquila Trucks Centres

Cab pneumatic suspension

554275 Adjusting the levelling valve linkage

Figure 41

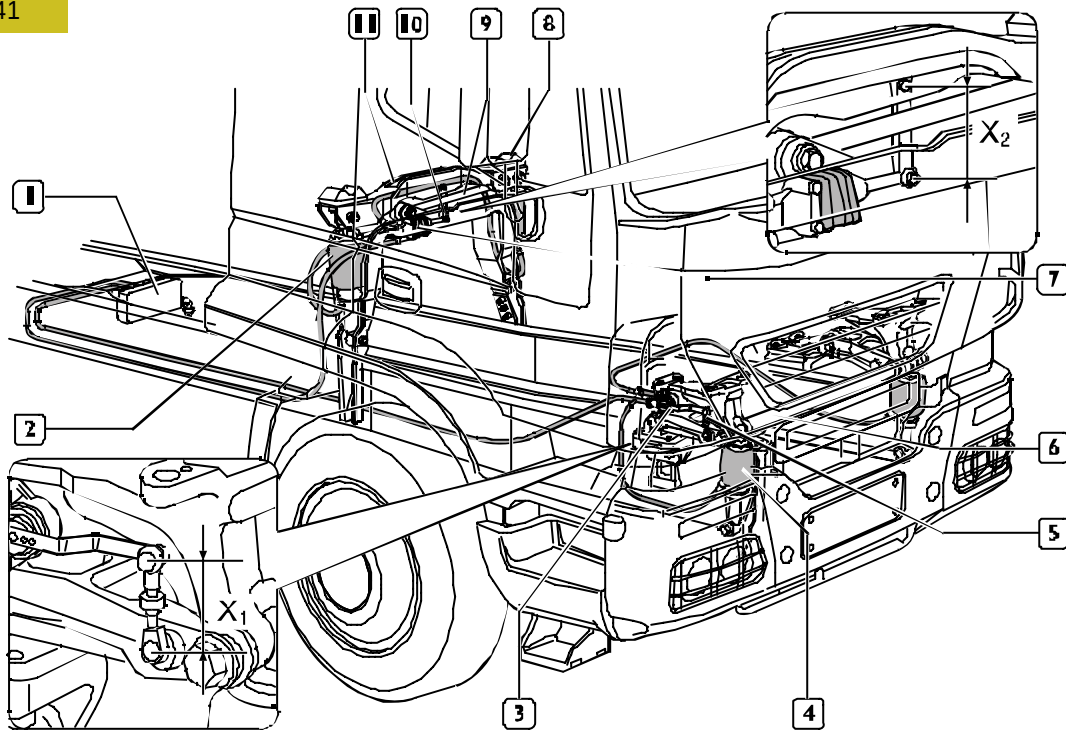


LOCATION OF CAB SUSPENSION COMPONENTS

1. Service supply – 2. Rear shock absorber – 3. Front levelling valve – 4. Front shock absorber – 5. Tie rod for valve (3)
6. Torsion bar – 7. Rear levelling valve – 8. Tie rod for valve (7) – 9. Stabilizer bar.

Check and/or adjust length X_1 of tie rods (5) and length X_2 of tie rod (8). Such length, measured between the center distances of articulated pins, must be:

$$X_1 = 94 \pm 1 \text{ mm} - X_2 = 83 \pm 1 \text{ mm}$$

Figure 42

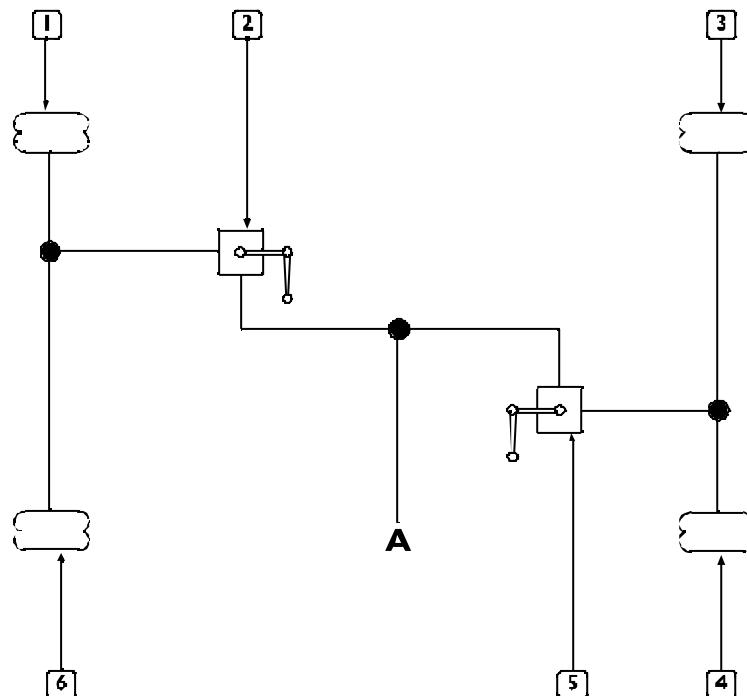

CAB SUSPENSION PNEUMATIC SYSTEM WORKING DIAGRAM

1. Right-hand front air spring – 2. Front levelling valve – 3. Right-hand rear air spring – 4. Left-hand rear air spring
5. Rear levelling valve – 6. Left-hand front air spring – A. Service supply (8.5 bars)


74094

Aquila Trucks Centres

552410 REPLACING THE WINDSHIELD

Removal


Figure 43

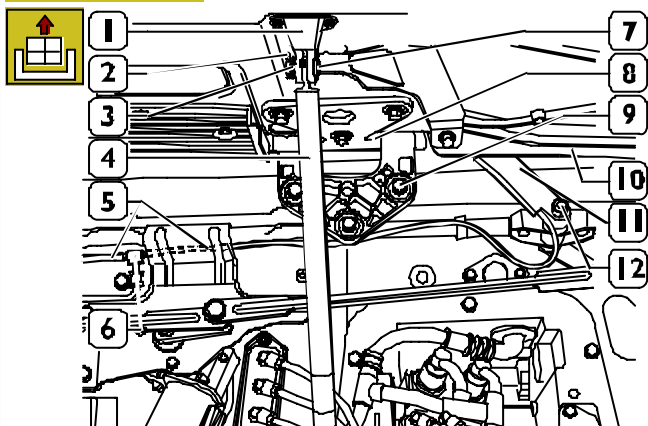

73263

Lift the radiator cowling (10). Take out the split pin (2), extract the pin (7) with the thrust washers (3) and disconnect the shock absorber (4) from the mount (1). Repeat these steps for the other shock absorber. Take out the screws (9) fixing the hinges (8) and remove the radiator cowling (10) from the cab. Disconnect the pipes (5) for the window-washer liquid from the fitting (6). Remove the nuts (12) and disconnect the windscreen wiper (11).

Figure 44

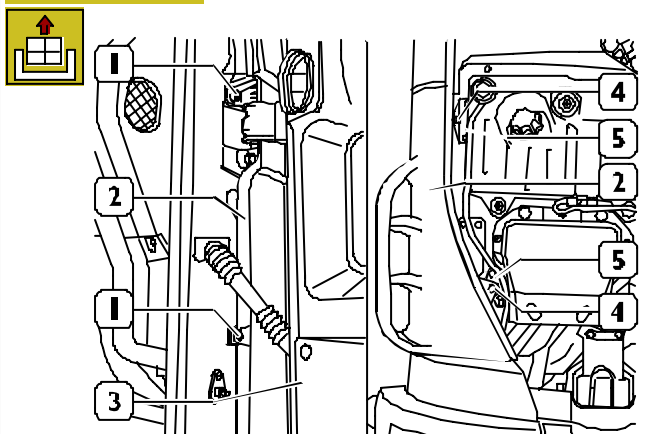


90043

Open door (3) and remove screws (1) to laterally secure right hand vent (2).

From front side, remove screws (4) and take right hand vent (2) off supports (5).

Repeat operations for taking off left hand vent.

Figure 45

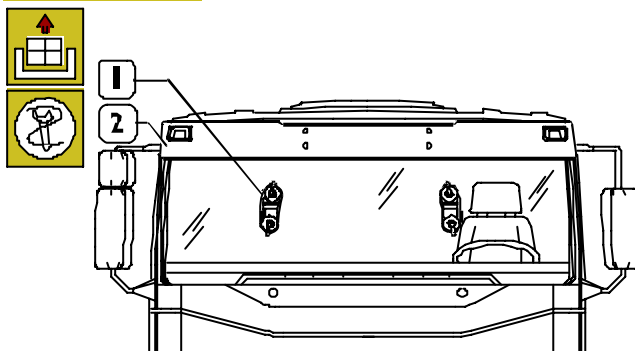


90044

If present, take out the fixing screws. Remove the visor. Put the pair of suction cups 99378031 (1) on the windscreen and with two operators, one inside the cab who, using the right tool, removes the seal while applying pressure on the top corners of the windscreen, while the other, on the outside, pulling on the handles of the suction cups 99378031, removes the windscreen from its housing.

Refitting

Figure 46

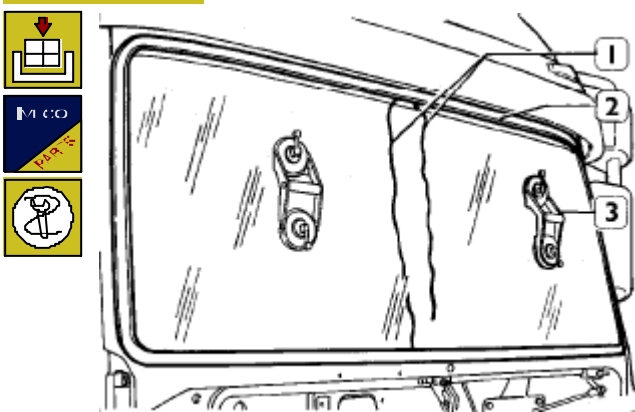

73266


To refit the windscreen, carry out the following operations:

- Fit the rubber seal on the windscreen, insert a cord (1) in the seal (2).
- Put the suction cups of tool 99378031 on the windscreen.
- Position it against the cab flanging.
- Press firmly on the suction cups while pulling both ends of the cord (1) from the inside so that the seal fits onto the flanging of the bodywork.
- Finish fitting the parts taken down during removal.

Aquila Trucks Centres


550740 REPLACING THE WINDING WINDOW**Removal**

Figure 47

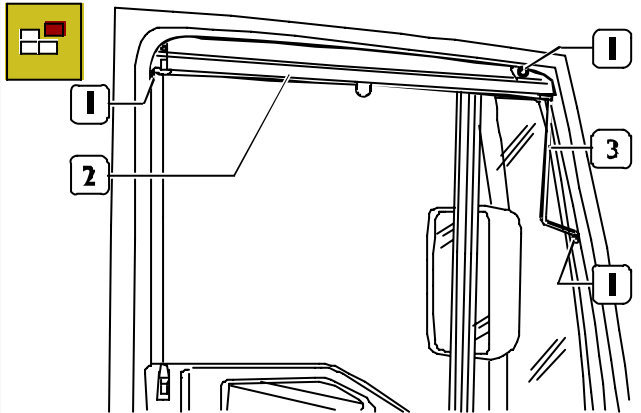


Lower the window.
Remove screws (1), unthread tie rod (3) and take sun roller blind assembly (2) off the door.

Figure 48

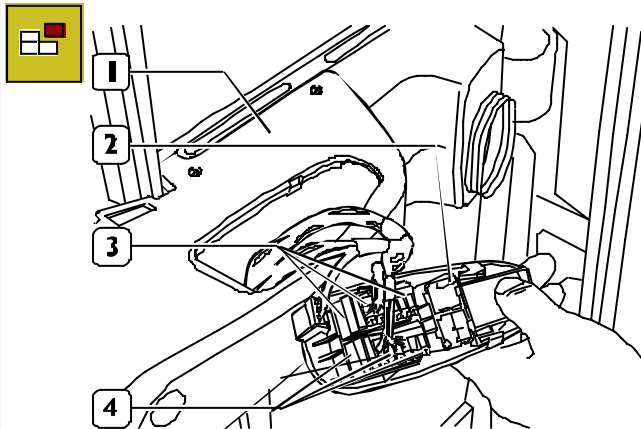


Remove the push-button panel (2) from the armrest (1). Disconnect the electric connections (3), (4), from the push-button panel (2).

Figure 49

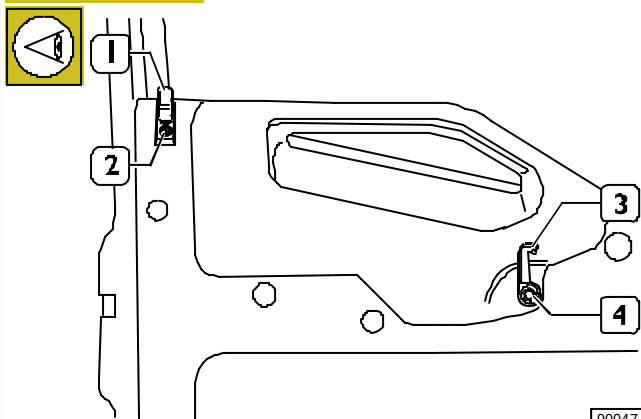


Loosen screw (2) and remove handgrip (1) from door closing tie rod.
Press the fins of stem (4) and remove handle (3).

Figure 50

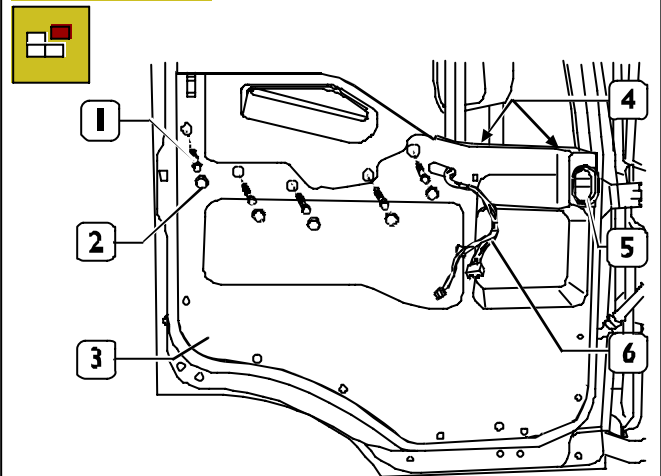

Remove mouth (5) and remove screw under it.
Remove screws (4).
Remove caps (2) and screws (1) under them securing coating (3).
Take coating (2) off the door paying attention on unthreading cables (6) from coating slot.

Figure 51

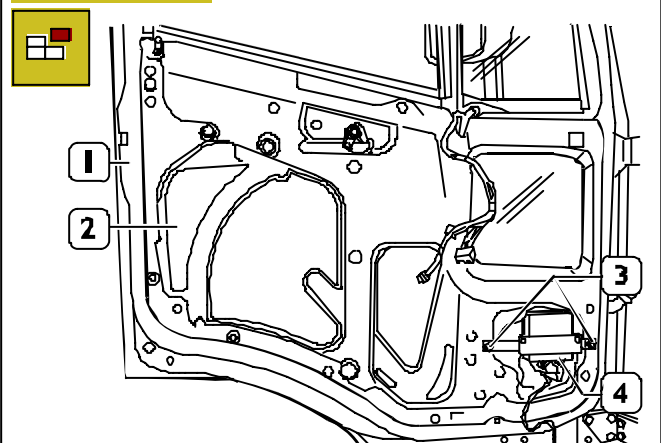


Remove screws (3) securing central unit support bracket (4) to door (1).

Remove sound deadening guard (2) from the door.

Aquila Trucks Centres


Figure 52

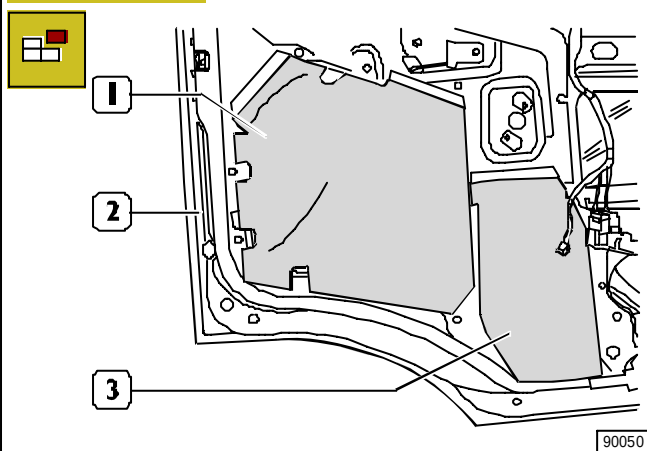

90050

Remove plastic guards (1 and 3) from door (2).


Figure 53

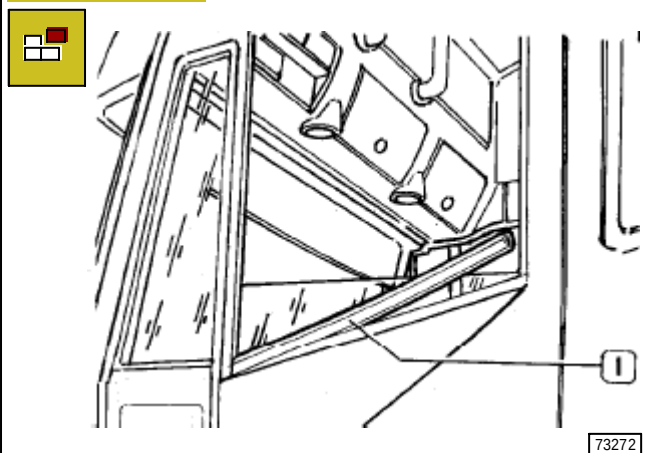

73272

Extract the outside and inside bottom seals (1) from the window compartment.


Figure 54

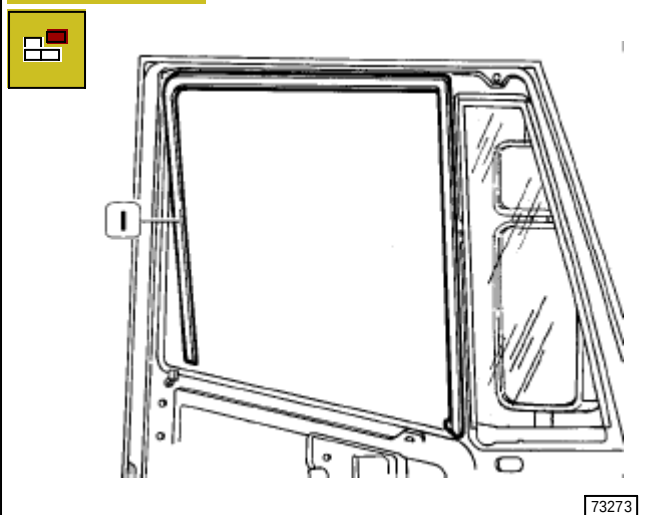

73273

Extract the window guide seal (1).

Figure 55

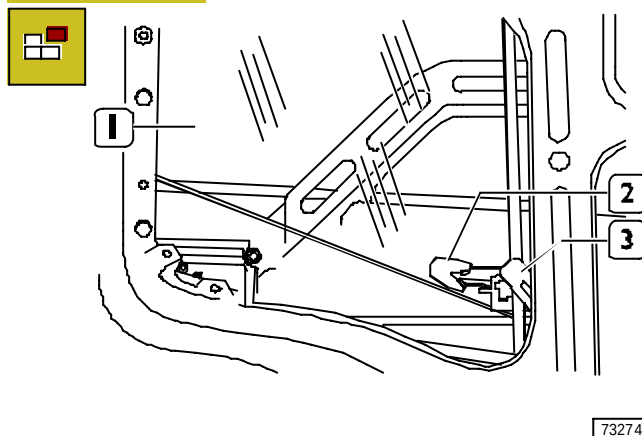


73274

Temporarily connect electric connections to pushbutton panel and lift glass until fastener (2) is made accessible.

Disconnect the electric window device (3) from the window (1) by removing the clamp (2).

Figure 56

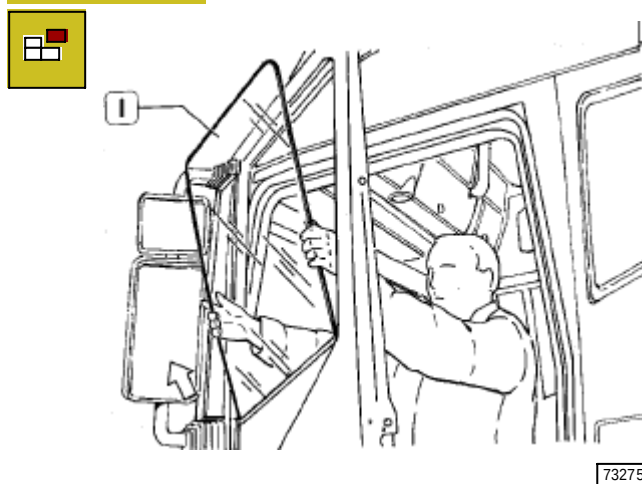

73275

Lift the window (1) and extract it from the top (arrow).

Refitting


Carry out the steps performed for removal in reverse order, observing the required tightening torques.



Aquila Trucks Centres


**550730 REPLACING THE WINDOW WIN-
DER****Removal**

Figure 57

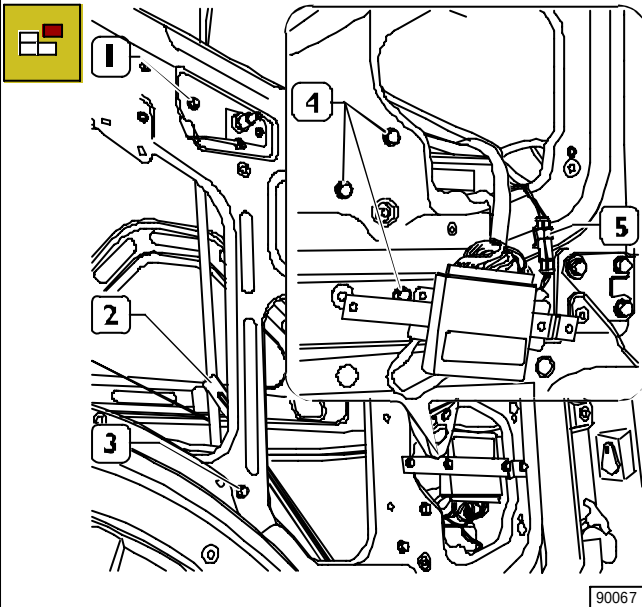

Remove the window as described in operation 550740. Disconnect the electric connection (5). Take out the screws (1), (3) and (4) fixing the electric window device (2) on the door.

Figure 58

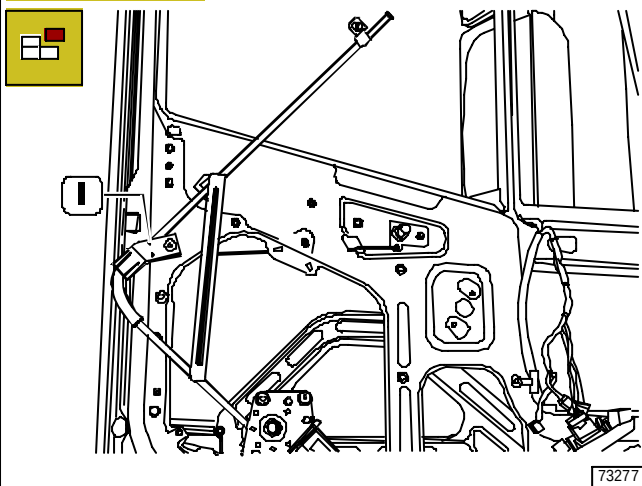


Extract the electric window device (1) from the door.

Refitting

Carry out the steps performed for removal in reverse order, observing the required tightening torques.


550714 REPLACING THE DOOR LOCK**Removal**

Figure 59

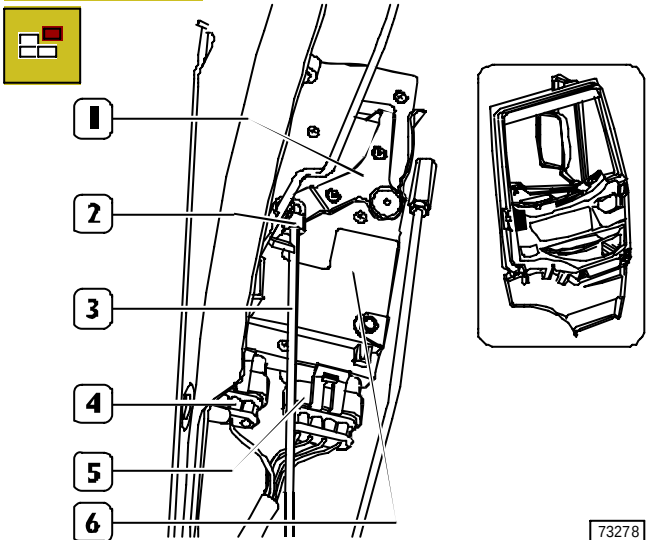

Remove the door trim as described in operation 550740. Unhook the clip (2) from the tie rod (3) and disconnect this from the idler (1). If present, disconnect the electric connections (4) and (5) from the lock (6).


Figure 60

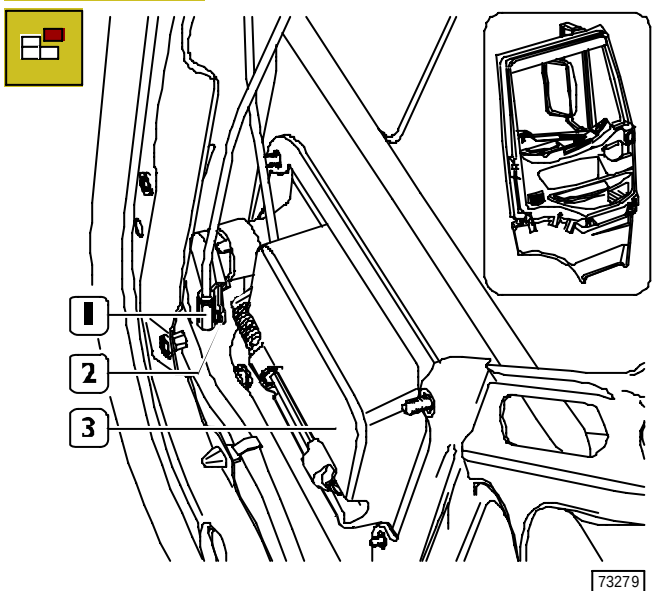

Disconnect the tie rod (1) from the lever (2) of the outside handle (3).

Aquila Trucks Centres

Figure 61

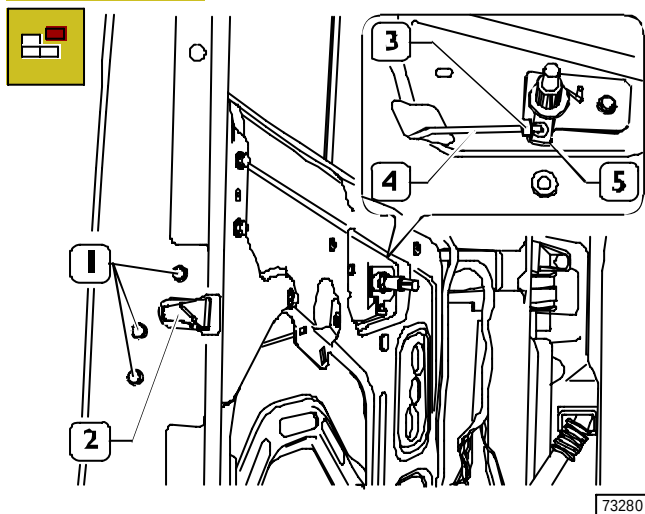


Unhook the clip (3) from the tie rod (4) and disconnect this from the lever (5) of the internal handle.
Take out the screws (1) and remove the lock (2) from the door.

Refitting

Carry out the steps performed for removal in reverse order, observing the required tightening torques.


**550717 REPLACING THE OUTSIDE HANDLE OF THE DOOR****Removal**

Figure 62

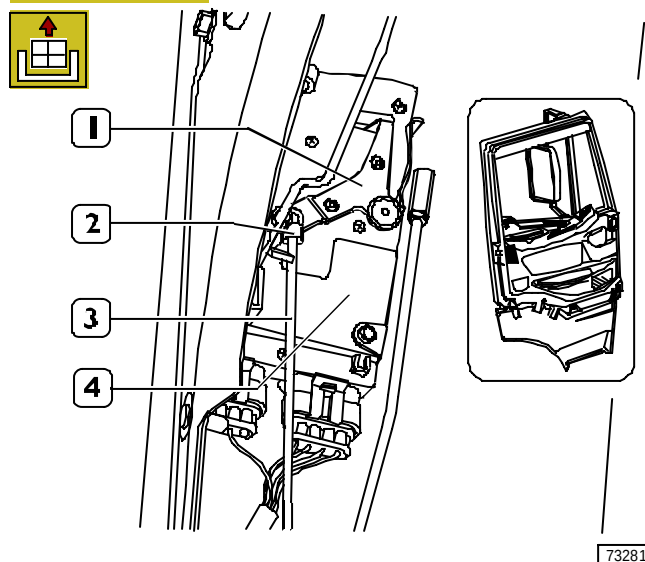


Remove the door trim as described in operation 550740.
Unhook the clip (2) from the tie rod (3) and disconnect this from the idler (1) of the lock (4).

Figure 63

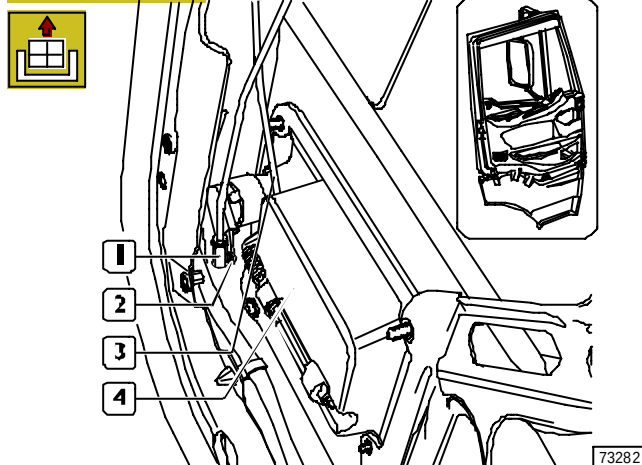

Disconnect the tie rod (1) from the lever (2) of the external handle (3).

Figure 64

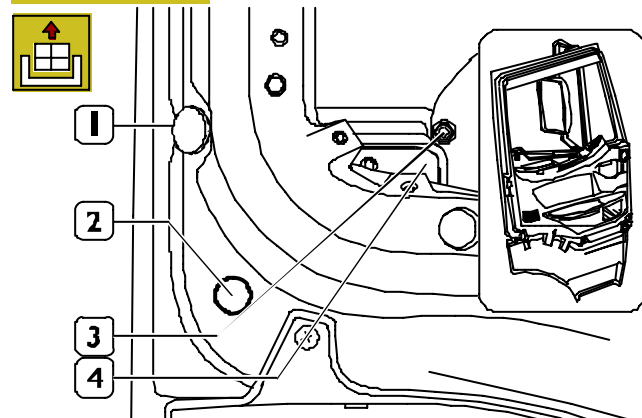


Take off the covers (1) and (2) and the nuts (3) fixing the external handle (4) and detach this from the door.
Remove the tie rod (3, Figure 63) from the handle (4).

Refitting

Carry out the steps performed for removal in reverse order, observing the required tightening torques.

REPLACING THE INSIDE HANDLE**Removal**

Figure 65

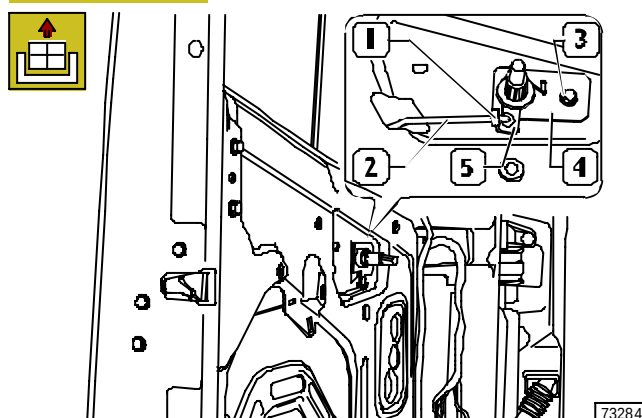

Take off the trim as described in operation 550740.
Unhook the clip (1) from the tie rod (2) and disconnect this from the lever (5) of the inside handle (4). Take out the screws (3) and remove the handle (4) from the door.


Aquila Trucks Centres

Refitting

Carry out the steps performed for removal in reverse order, observing the required tightening torques.

REPLACING THE SIDE MIRRORS**Removal**


Figure 66

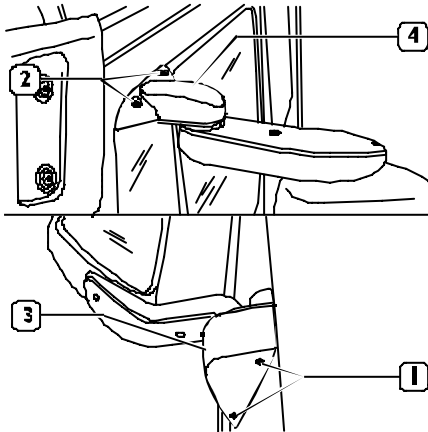

108622

Unscrew screws (1) and (2) and remove plastic guards (3) and (4).

Figure 67

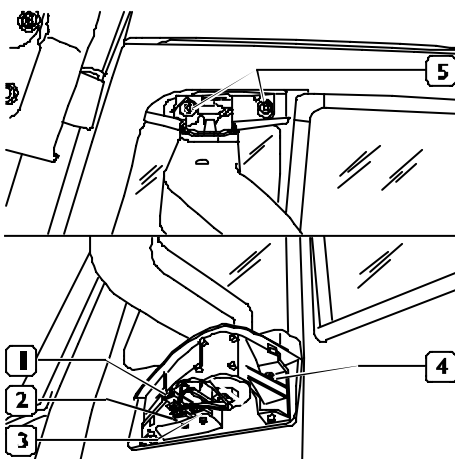

108877


Disconnect electrical connections (1), (2) and (3). Remove screws (4) and (5) and take assembly off the vehicle.

Refitting

Carry out the steps performed for removal in reverse order, observing the required tightening torques.

REPLACING THE DOOR**Removal**

Figure 68

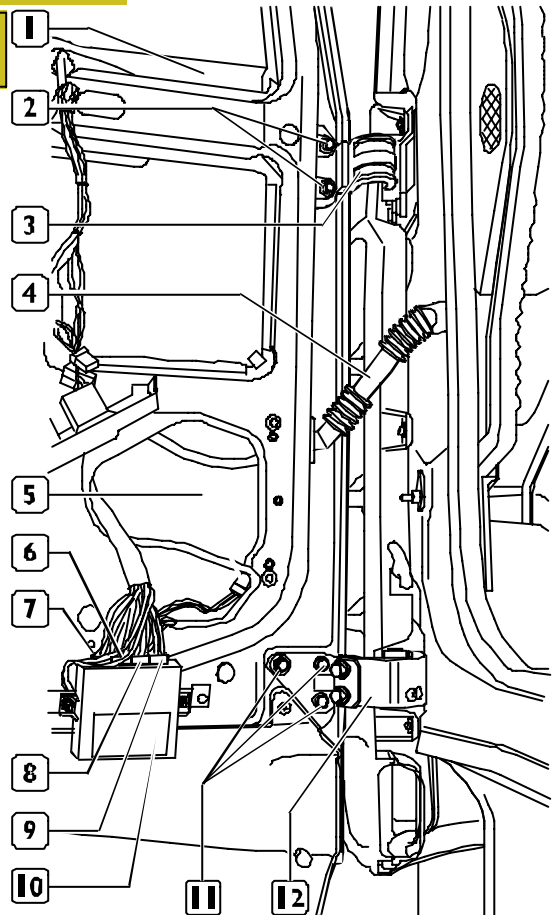

73286

Take off the side mirror mounting as described in the previous operation.

Detach the inside door trim as described in operation 550740.

Remove the electric window device as described in operation 550730.

Disconnect the electric connections (5), (6), (7), (8) and (9) from the control unit and take this out (10).

Support the door (1), take out the screws (2) and (11) and take the door (1) off its hinges (3) and (12).

NOTE When taking off the door (1), extract the wiring (4) from it with great care.

Refitting

Carry out the steps performed for removal in reverse order, observing the required tightening torques.


Aquila Trucks Centres

550748 REPLACING THE FIXED WINDOW**Removal**

Take off the side mirror mounting as described in the related operation.

Detach the inside door trim as described in operation 550740.

Figure 69

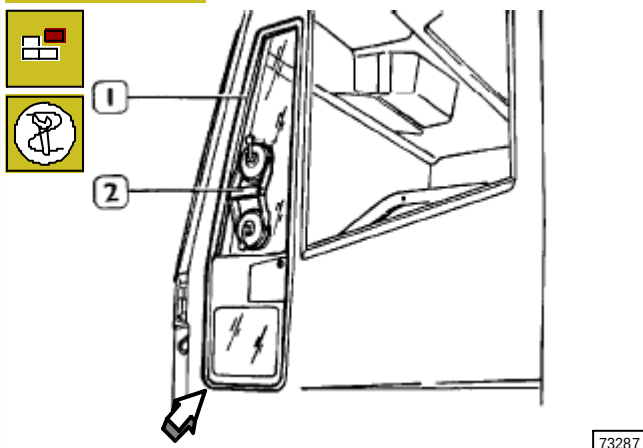

73287

Extract the outside seal (1), apply the suction cup 99378031 (2).

NOTE Before starting to cut, you need to protect the paintwork with adhesive tape to prevent any damage.

Insert a suitable tool through the sealant by a corner (arrow) of the window.

Make the cut all along the perimeter. Remove the window with a suction cup handle (2).

NOTE Do not use any lubricant during cutting. The blades must always be sharp.

Preparing the window bay

Using an appropriate knife, cut and level the sealant of the window bay so as to leave a thickness of between 0.25 and 1 mm to prevent chipping the paintwork.

Get rid of the remaining dust and degrease the window bay with the BETACLEAN 3300 detergent towelette contained in the BETASEAL 1703 Sprint kit (IVECO PARTS 93162553).

NOTE The film of sealant remaining on the windscreen will be a support for subsequent gluing.


NOTE If the window bay has been painted after repair work, treat it with the COMBI primer 5061 contained in the kit and wait for 15 minutes.

Preparing the window

Using an appropriate knife, cut and level the sealant of the window bay so as to leave a thickness of between 0.25 and 1 mm to prevent chipping the paintwork.

Get rid of the remaining dust and degrease the window bay with the BETACLEAN 3300 detergent towelette contained in the BETASEAL 1703 Sprint kit (IVECO PARTS 93162553).

Figure 70

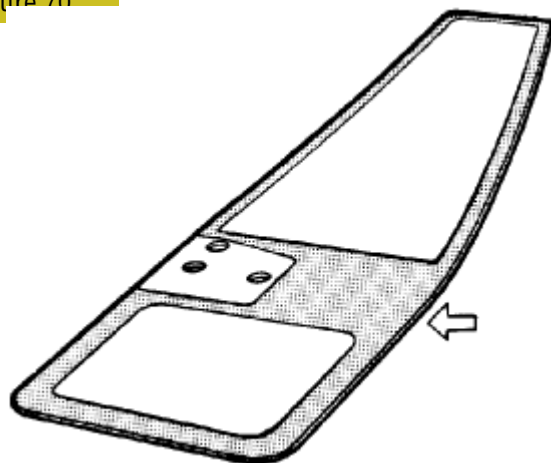

- Degrease the screen-printed portion of the windscreen with the BETACLEAN 3300 detergent towelette contained in the kit.

NOTE If using a new window, it is still necessary to degrease the screen-printed portion with the BETACLEAN 3300 detergent towelette.

- Using the applicator contained in the kit, spread the glass adhesion promoter (COMBI primer 5061) on the screen-printed portion. It is not necessary to use it on the remaining sealant.

- Wait for 15 minutes before going ahead with the operations so as to allow the solvent of the adhesion promoter (COMBI primer 5061) to evaporate.

Refitting

Mount the seals on the inside of the door, without touching the area where the adhesion promoter (primer) has been applied.



Mount the rubber seal on the window.


Perform a trial assembly and centre the window exactly.

After centring the window, mark the reciprocal position between the window and its seat with strips of adhesive tape (1).

Cut the strips of adhesive tape and remove the window.

Aquila Trucks Centres

Figure 71

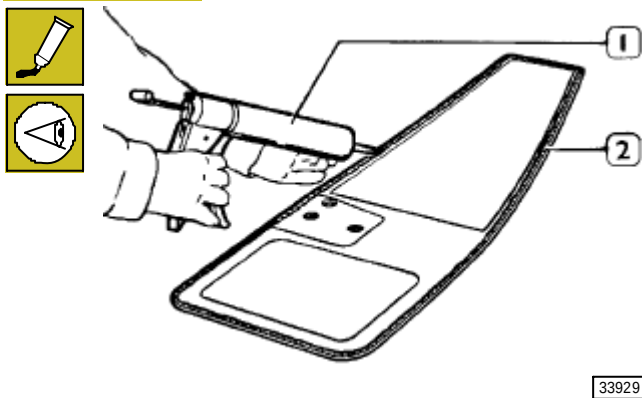


33929

Using an air gun, apply a bead of BETASEAL 1703 SPRINT polyurethane adhesive along the perimeter of the window as evenly as possible.

Start this process from the middle of the bottom side and proceed without stopping all around the perimeter of the window.

Cut off the tip of the adhesive cartridge so that the cross-section of the adhesive bead is triangular in shape with a base of 5-7 mm and a height of 12 mm.

Figure 72

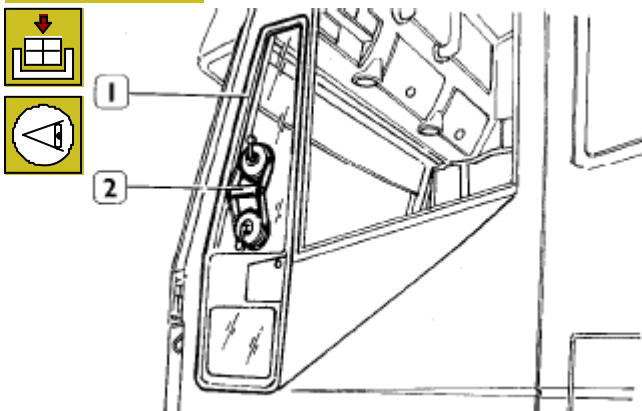


73287

Place the windscreen in its seat with the suction cup handle (2).

- Align the window with its housing bay, using the adhesive tape applied beforehand as a reference.

NOTE The window must be positioned within 15 minutes of applying the adhesive.

Figure 73

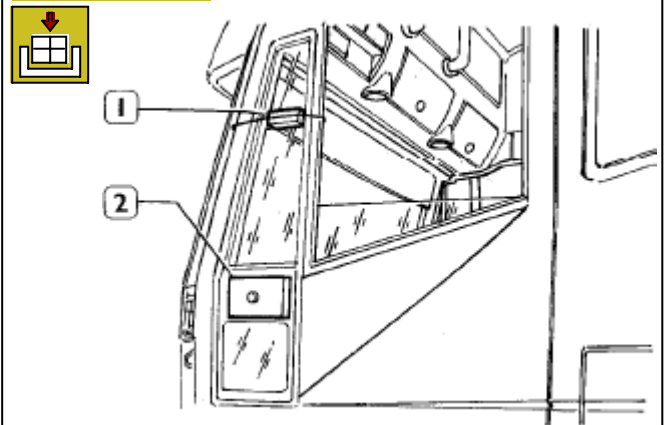

73288

Keep the window under pressure with two wooden plugs (1) and (2) positioned as shown in the figure.

NOTE Keep the window under pressure for at least 1 hour.

Before refitting the parts that had been removed beforehand, check there are no points of infiltration.

Apply soapy water with a sponge along the outer perimeter and blow compressed air from the inside so as to see whether there is any infiltration.

If bubbles form, degrease the relevant part and fill it with adhesive.

Any sealant spilling over on the inside can be removed once it has hardened by cutting it with a knife and detaching it with tweezers.

NOTE Take care not to damage the screen-printing on the window with the knife.

Fit the parts that had been removed back on and clean the window.

NOTE Do not move or deliver the vehicle until one hour and thirty minutes have passed at a temperature of 23°C and relative humidity (RH) of 50%. If the temperature or humidity are lower you need to increase the waiting time.


Aquila Trucks Centres



Before performing repair interventions on the vehicle, disconnect batteries by operating on current main switch and observe safety rules.


553710 INSTRUMENT PANEL Removal

Figure 74

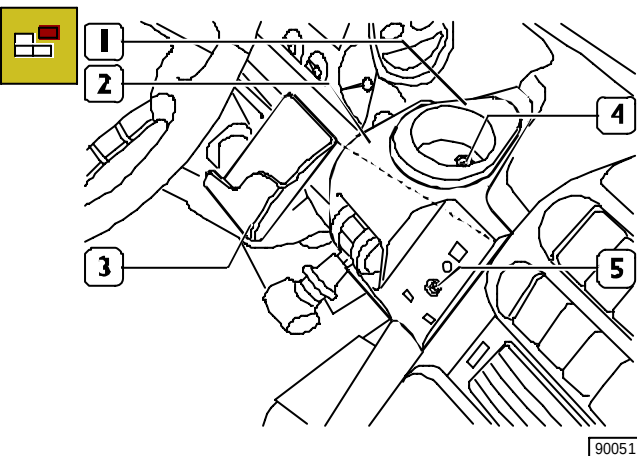


- Remove support (3) from coating (2).
- Remove screws (4 and 5).
- Take off socket holder (1).
- Take coating (2) off dashboard coating.

Figure 75

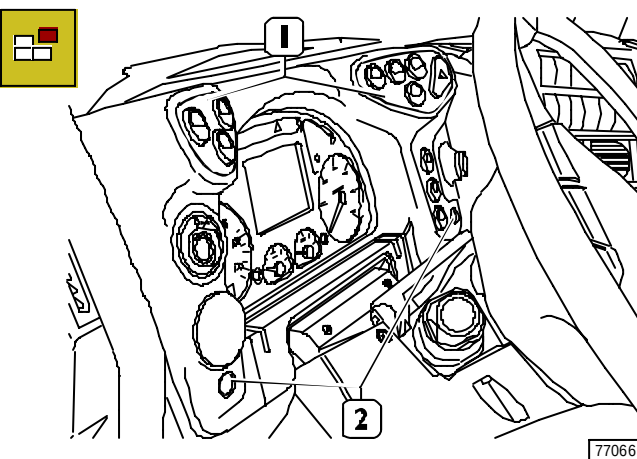

- Remove plugs (2) from seat.
- Undo the fasteners and remove the light switch assemblies (1) from their compartment.

Figure 76

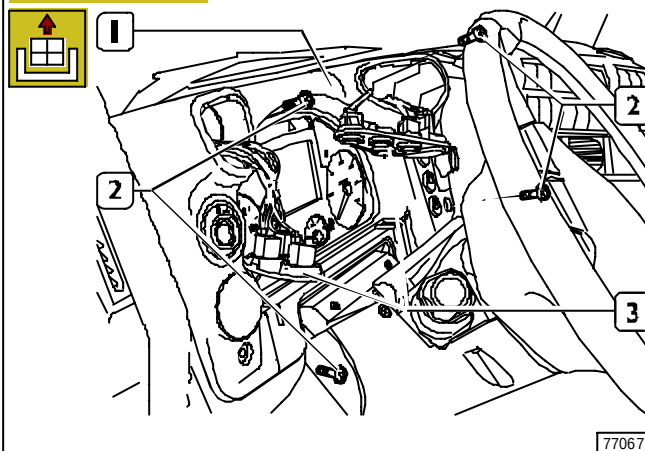

- Disconnect the electric connectors and remove the light switch assemblies (3).
- Unscrew the screws (2) fixing the instrument panel (1).
- Remove instrument panel (1) from seat.
- Disconnect electric connections affecting dashboard removal, marking the respective mounting positions of the electric connections, in order to make their connection easier on reconnection.

Take then instrument panel (1) off the seat.

Refitting




Refit by carrying out the procedures described for removal in reverse order.

553712 CENTRAL SWITCH DASHBOARD

Removal


Figure 77

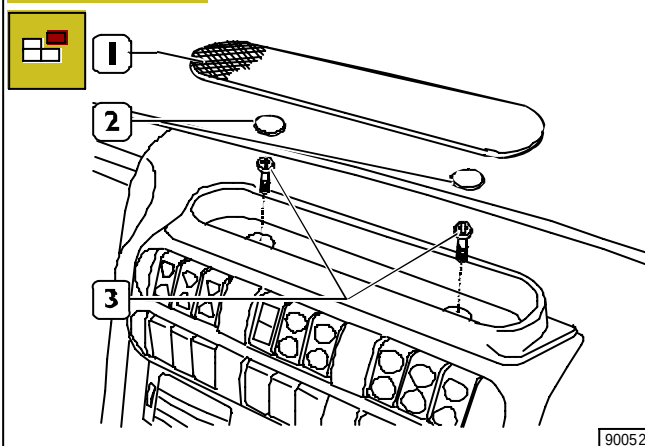

- Remove mat (1), plugs (2) and screws (3) securing central dashboard on top.


Aquila Trucks Centres

Figure 78

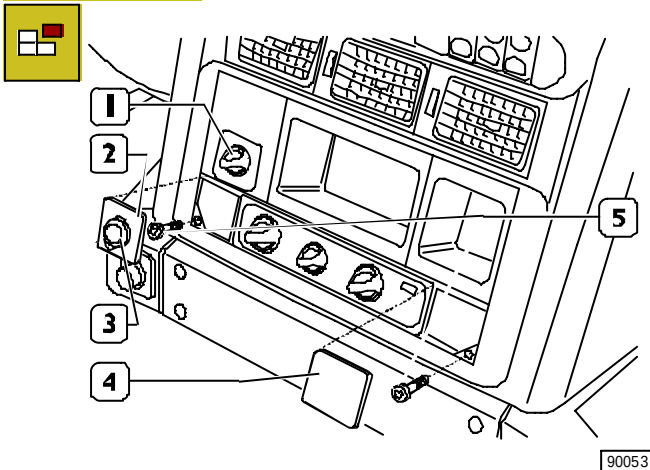

- Remove handgrip (1).
- Remove lid (2) and disconnect the electric connection of socket (3).
- Remove lid (4) and screws (5).

Figure 79

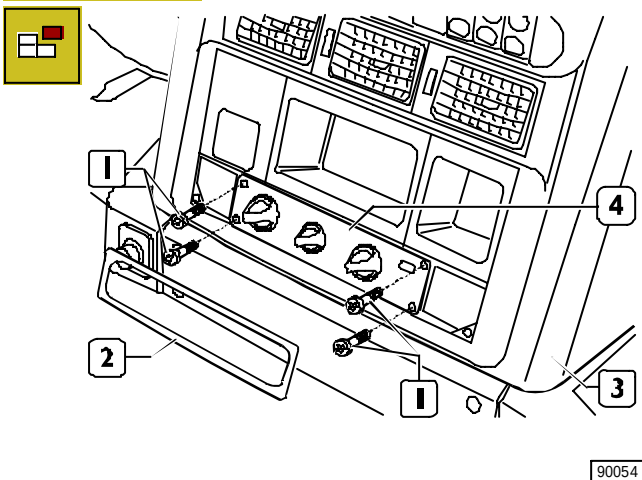

- Remove frame (2).
- Remove screws (1) securing controls (4) to dashboard (3).
- Remove dashboard (3) and disconnect electric connections affecting dashboard removal, marking the respective mounting positions of the electric connections, in order to make their connection easier on mounting.
- Then, take off dashboard (3).

Refitting




Refit by carrying out the procedures described for removal in reverse order.

552211 PROTECTIONS


Removal

Figure 80

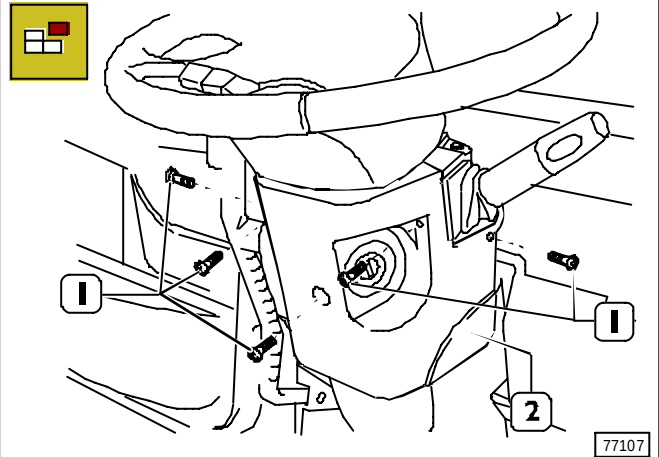

- Take off instrument panel (Op. 553710) as described in relating chapter.
- Unscrew securing screws (1) and take off lights control lever coating (2).


Figure 81

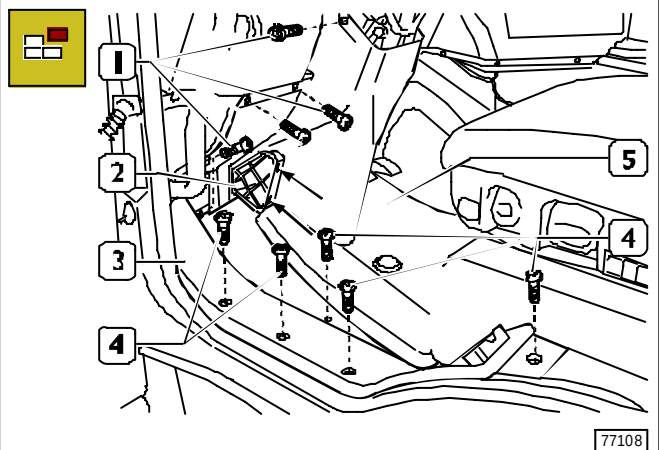

- Unscrew the screws (4) fixing the sill (3).
- Lift the mat (5) to get to one of the fasteners of the sill (3).
- Detach the sill (3) from the vehicle.
- Remove mat.
- Operate on check fins (←) and remove air intake (2) on the floor.
- Unscrew the side screws (1) fixing the steering column guard.


Aquila Trucks Centres

Figure 82

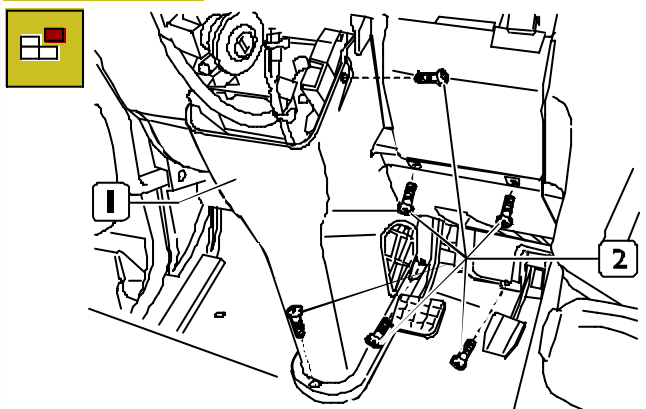


- Unscrew the screws (2) fixing the steering column guard in the area of the pedal board.
- Detach the steering column guard (1) from the vehicle.

Figure 83

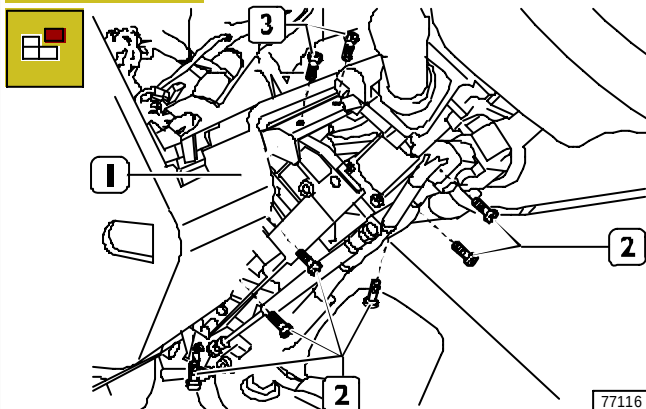


- Unscrew the screws (3) fixing the blind guard (1) on the steering column.
- Unscrew the screws (2) fixing the fascia covering to the steering column and to the body.

Figure 84

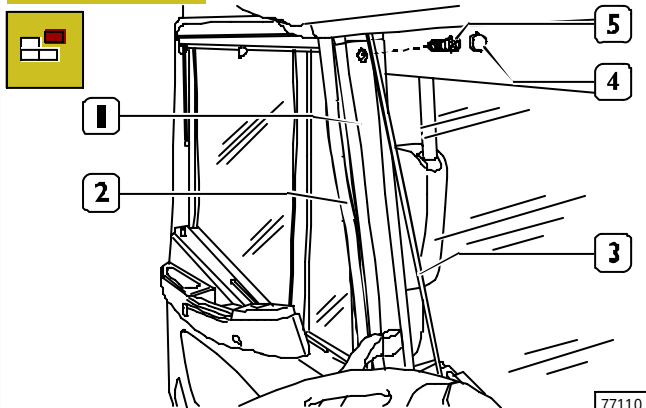


- Partly take off the door seal (2).
- Remove the sunblind rod (3).
- Take off the press-on plug (4) to access the screws beneath.
- Unscrew the fixing screw (5) and remove the windshield upright covering (1).

Figure 85

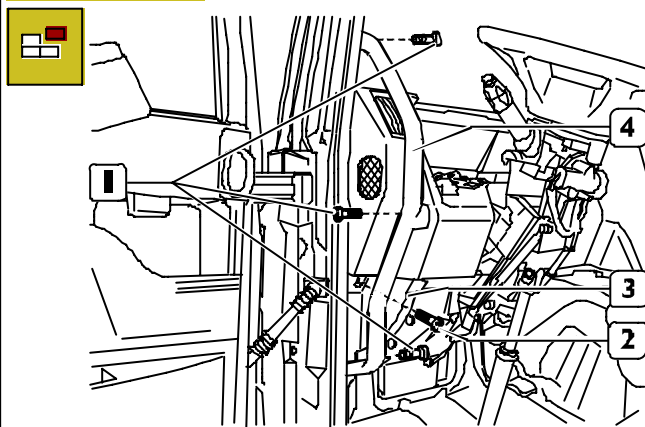


- Take off instrument panel (Op. 553710) as described in relating chapter.
- Unscrew securing screws (1) and take off lights control lever coating (2).

Figure 86

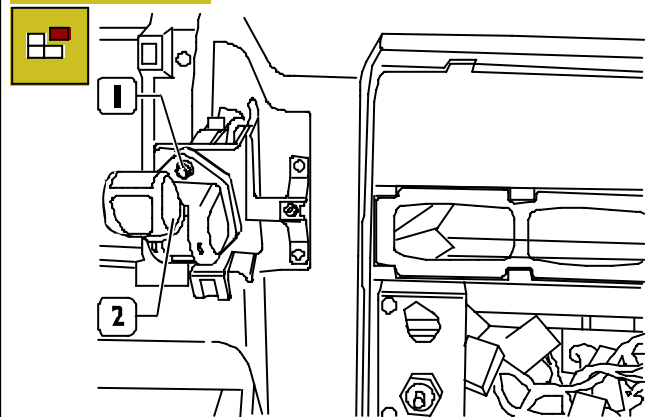

- Take off central switch holder dashboard (Op. 553712) as described in relating chapter.
- Remove screws (1) securing parking brake lever (2) to support.


Figure 87

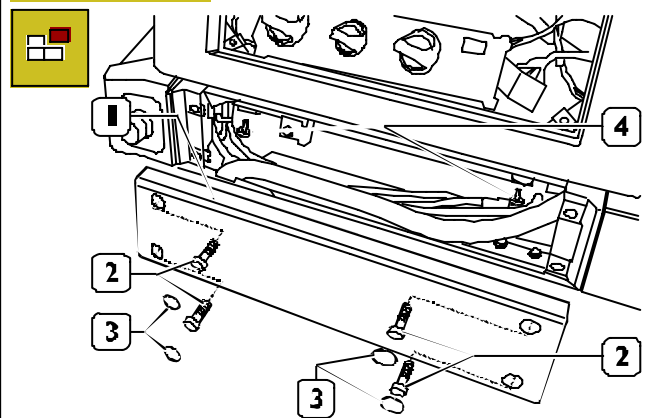

- Remove lids (3) and screws (2) under them, and take off coating (1).
- Remove screws (4).


Aquila Trucks Centres

Figure 88

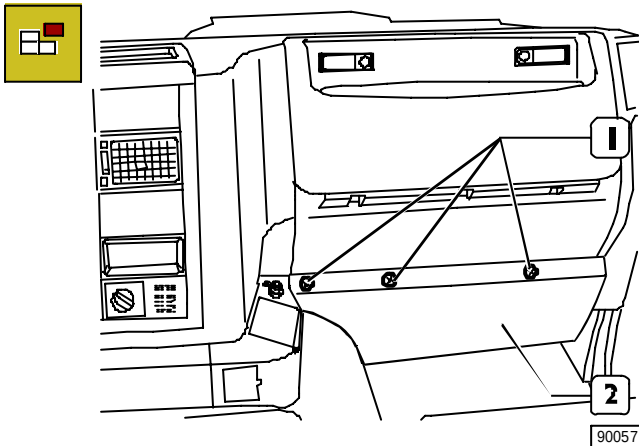


- Remove screws (1) securing lower coating (2) to passenger side.
- Take off coating (2).

Figure 89

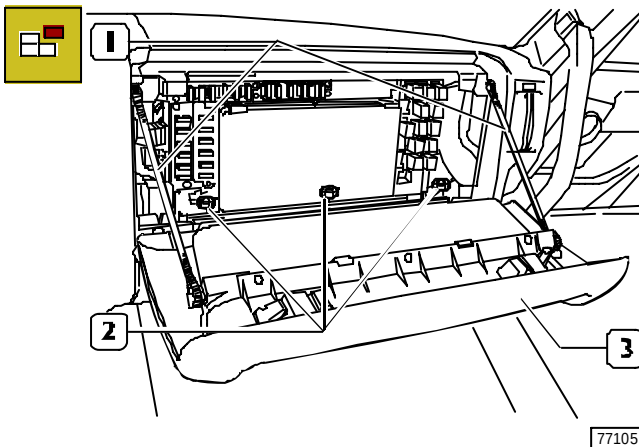


- Open the glove compartment (3).
- Detach the tie rods (1).
- Unscrew the nut (2) and detach the glove compartment (3).

Figure 90

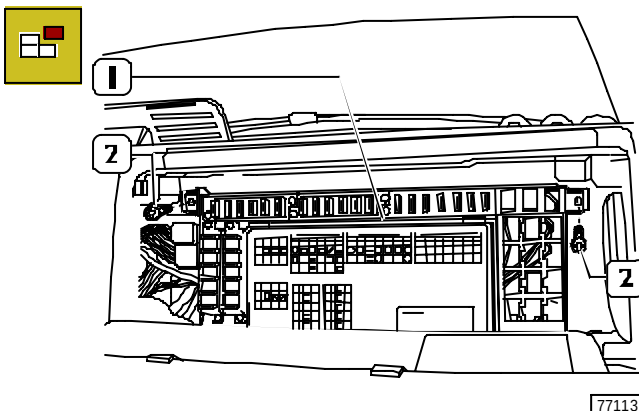


- Unscrew the screws (2) fixing the Body Control.
- Remove the Body Control (1) and set it aside in order to get to the fasteners beneath.

Figure 91

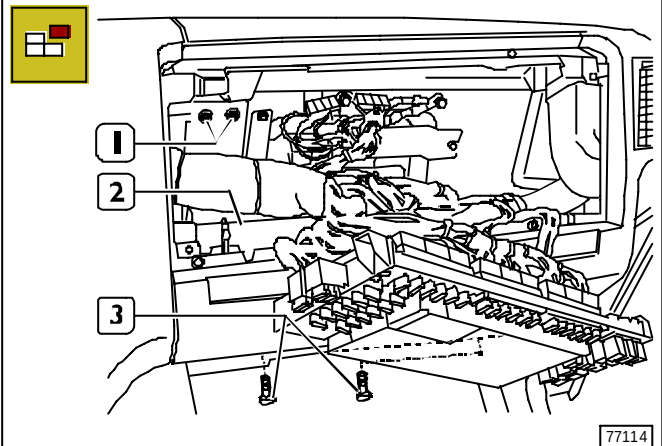

- Unscrew the nuts (1) fixing the fascia covering to the body.
- Free the right-hand air delivery pipe (2) from the retaining clamps and disconnect it from the fan body and right-hand door air opening.
- Unscrew the bottom screws (3) fixing the fascia covering.
- Perform operations described at Figure 84 and Figure 85.


Figure 92

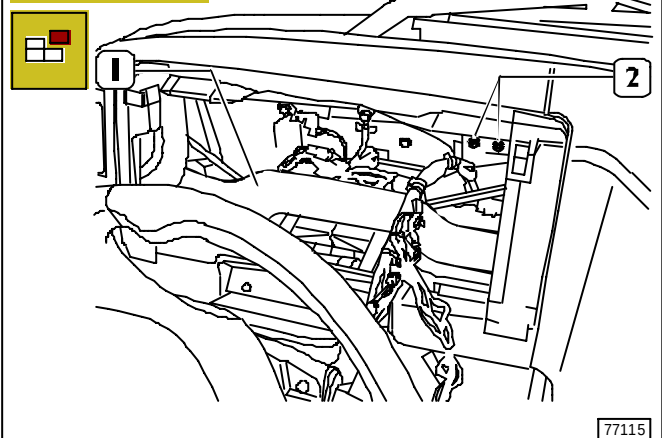

- Operate from the instrument panel compartment and unscrew the nuts (2) fixing the fascia covering to the body.
- Free the left-hand air delivery pipe (1) from the retaining clamps and disconnect it from the fan body and left-hand door air opening.

Aquila Trucks Centres

Figure 93

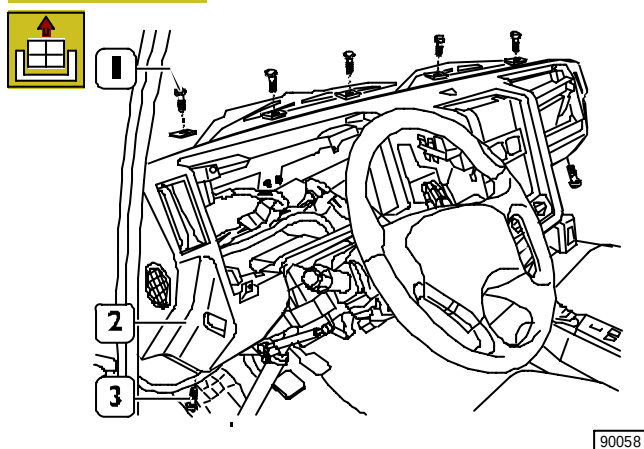

90058

- Unscrew the top screws (1) fixing the fascia covering (2) along the perimeter of the windshield.
- Remove screws (3) securing coating on bottom.
- With the help of an assistant, detach and rotate the panel trim as required.
- Pay attention to the fasteners and extract the fascia covering (2) from the vehicle.

Refitting




For refitting, invert operations described for removal, paying particular attention to electronic cables and their connections.

Once reconnection has been completed, check the functionality of electric/pneumatic controls and relating indicator lamps.

553612 WINDSCREEN VISOR ROLLING DEVICE

Removal


Figure 94

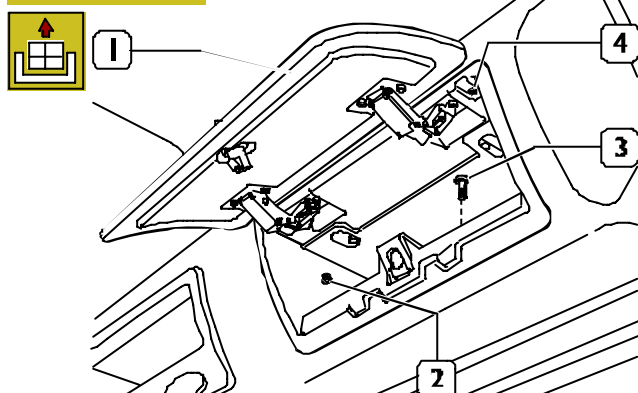

87312

Unscrew upper screws (4), lower screws (3), side screws (2), then remove the side utility compartment (1).


Figure 95

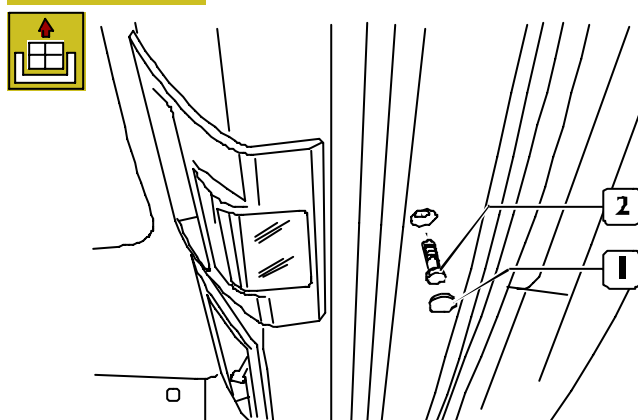

87313

Take off cap (1), then loosen screw (2).

Figure 96

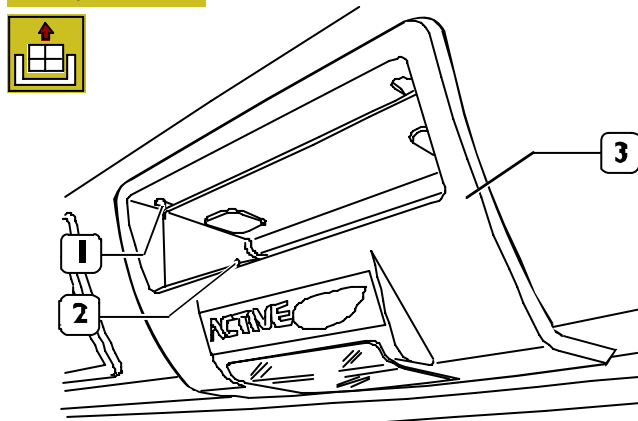


87314

Unscrew upper screws (1) and side screws (2), then carefully take off the utility compartment, disconnect the ceiling light and transformer connections, and remove utility compartment (3).

Aquila Trucks Centres


Figure 97

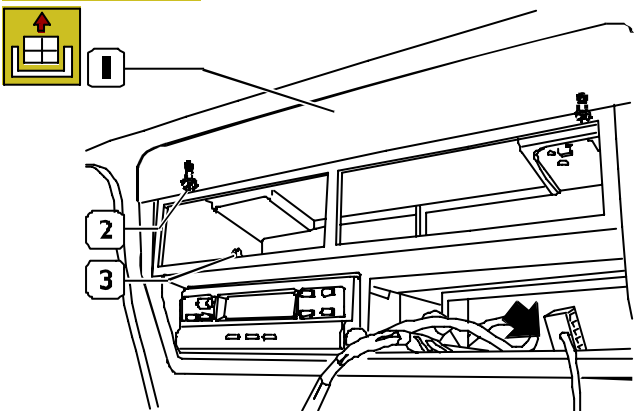

87315

Take off the covers and/or the removed devices (if any). Unscrew upper screws (2), side screws (3) and lower screw (→). Carefully take off console (1).


Figure 98

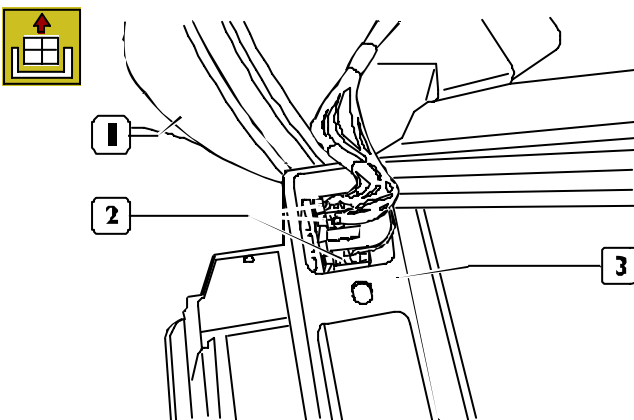

87316

Disconnect tachograph connections (2), then remove console (3). Take off loudspeaker cover (1) and the loudspeaker (where available).


Figure 99

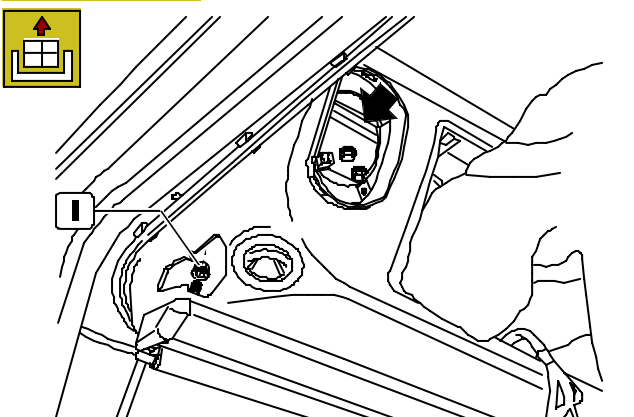

87317

Unscrew the first rolling device fastening nut (1) through the opening from the loudspeaker (→), and the other four nuts through the other openings.

Figure 100

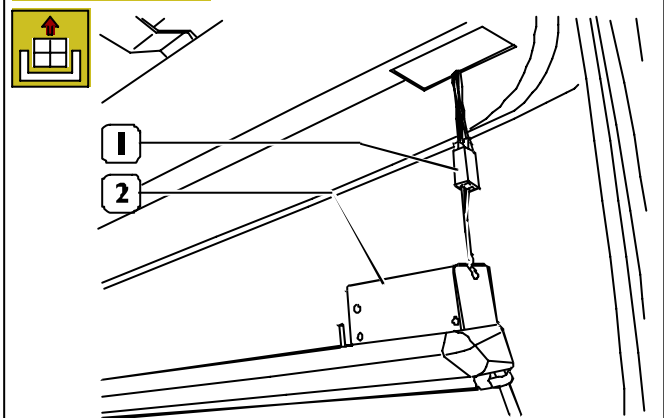

87318


Carefully lower the rolling device assembly (2), disconnect connection (1), then remove the assembly.

Refitting

Reverse the removal procedure.

553651 WINDSCREEN SUN VISOR REEL MOTOR REPLACEMENT**Removal**

Figure 101

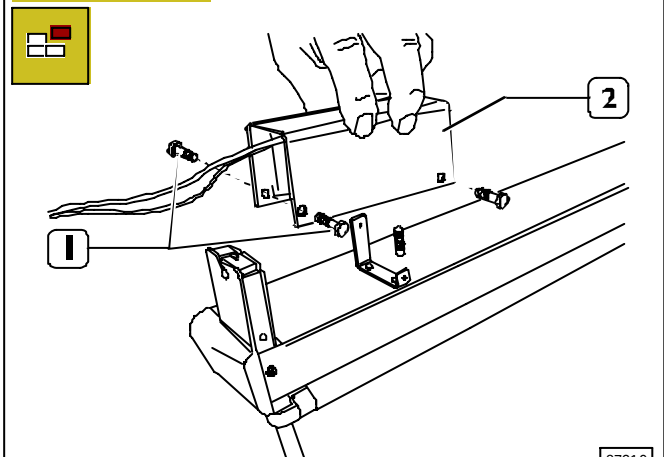

87319

Slacken the four fastening screws (1) and remove the motor (2).

Refitting

Reverse the removal procedure.




Aquila Trucks Centres

550250 AIR INTAKE LID

Removal


Figure 102

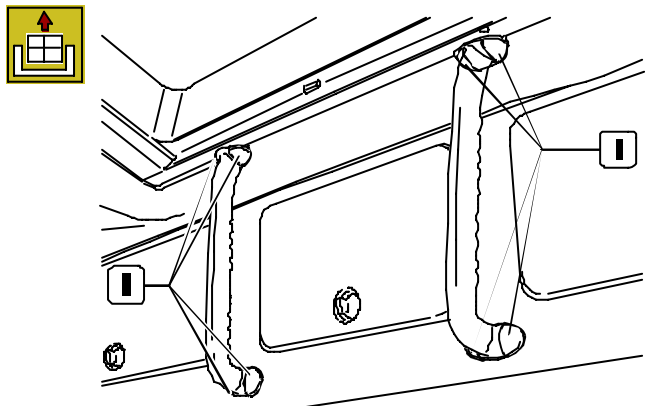

87320

Extract the screw covering trims (1).


Figure 103

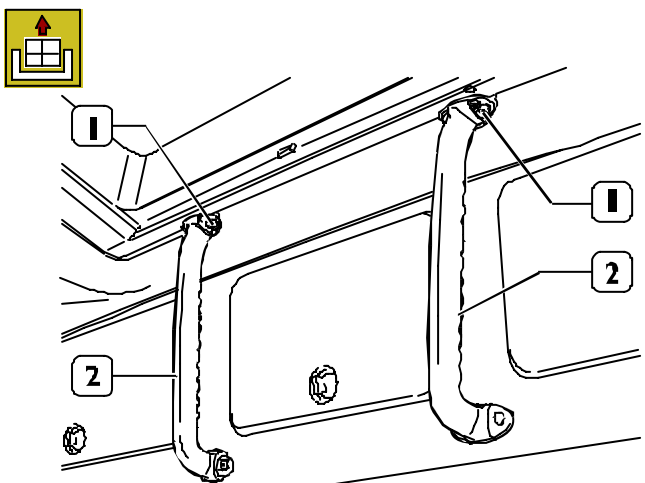

87321

Slacken the fastening screws (1) and remove the handles (2).


Figure 104

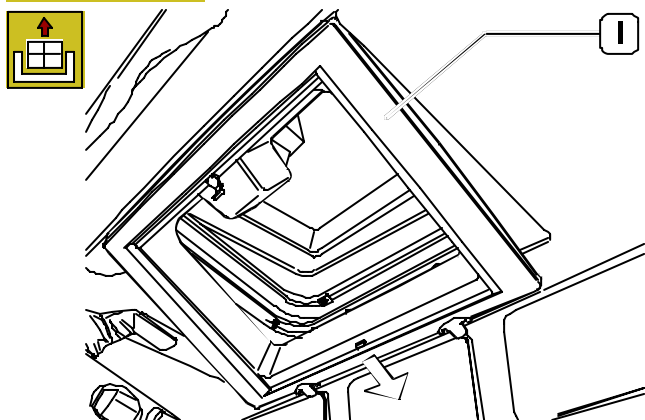

87215

Remove the rim (1).

Figure 105

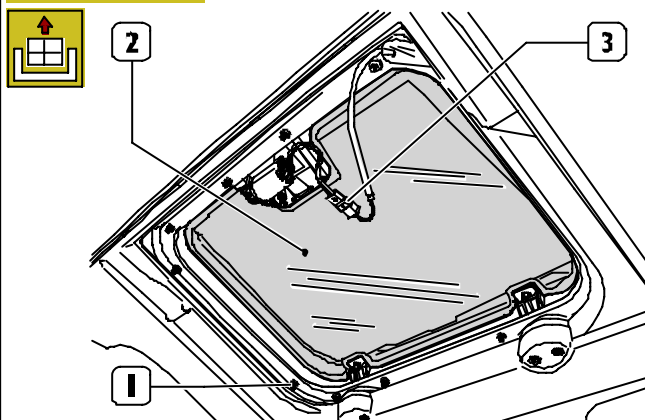

87216

Disconnect the connection (3), slacken the 12 fastening nuts (1) and remove the air intake lid assembly (2).

Refitting




Reverse the removal procedure.

550254 AIR INTAKE LID MOTOR REPLACEMENT

Removing

Figure 106

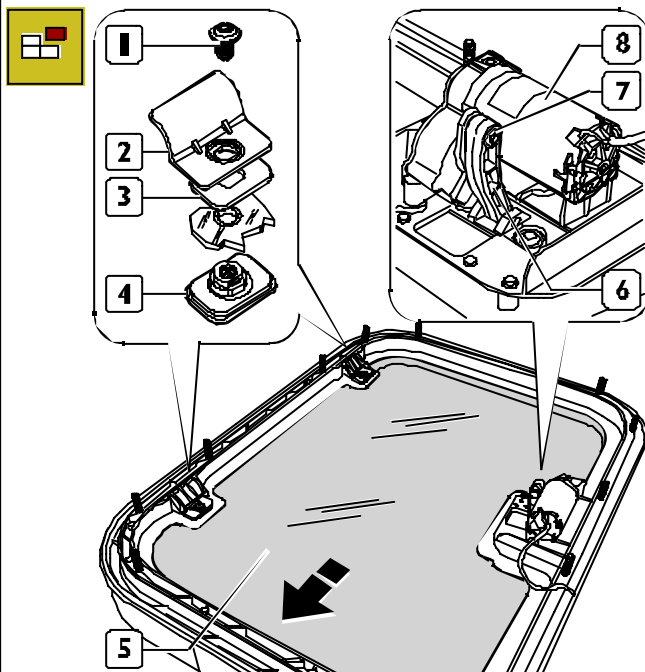

87217


Disconnect the lid as described above and put it on the working stand.

Slacken the screws (1), recover the hinges (2), the gaskets (3) and the bosses (4).

Remove the safety ring (7) and make the window (5) slide in the direction shown by the arrow to release the motor (8) lever (6).

Aquila Trucks Centres

Figure 107

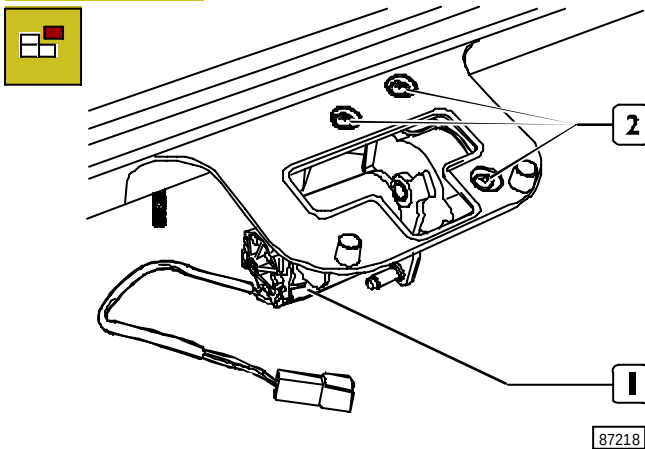


Slacken the screws (2) and remove the motor (1).

Refitting

Reverse the removal procedure except for the following operations.



Figure 108

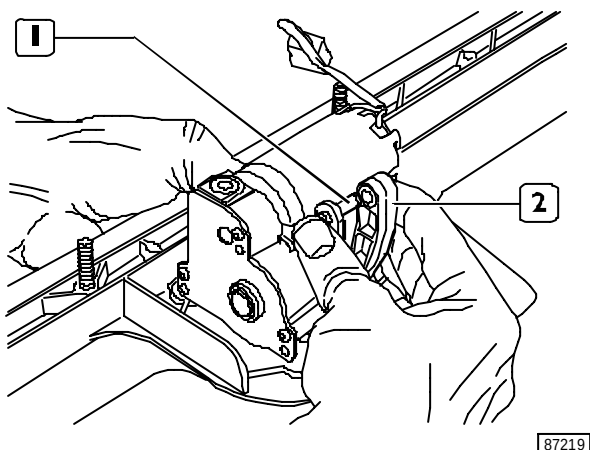


At refitting, press the rim in contact with the window to obtain alignment between the motor lever pin (1) and the window lever hole (2). Make the parts slide until the lever coupling is obtained.

551644 REPLACING SIDE DOOR OPENING CONTROL CABLE (AT VEHICLES)

NOTE Should the lid opening control cable be broken, you can gain access to the glove compartment from the cabin inside behind the driver's seat.


Removing

Figure 109

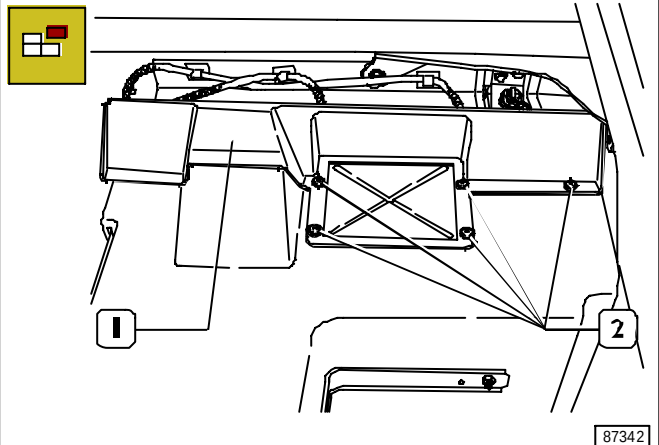

Lift the mattress behind the driver's seat. Loosen screws (2), then remove covering (1).


Figure 110

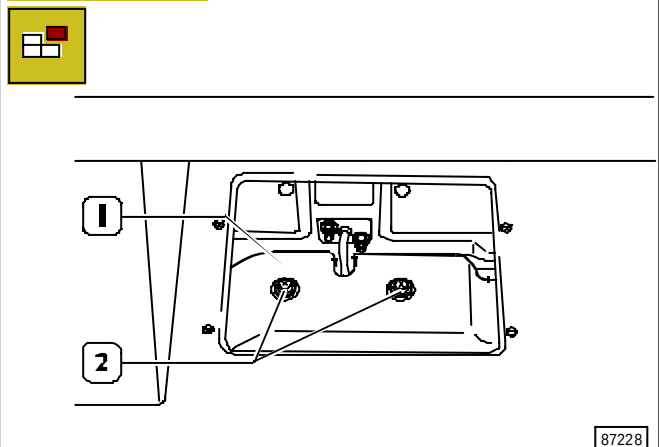

Slacken the screws (2), recover the washers and remove the covering (1).


Aquila Trucks Centres

Figure 111

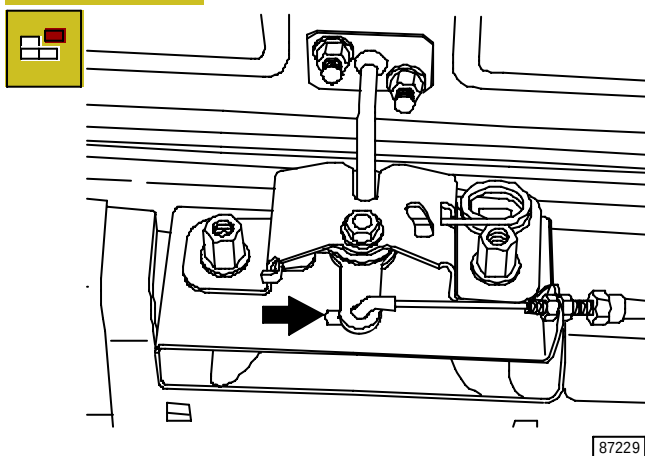


Operate the lever (→) to open the lid.

Figure 112

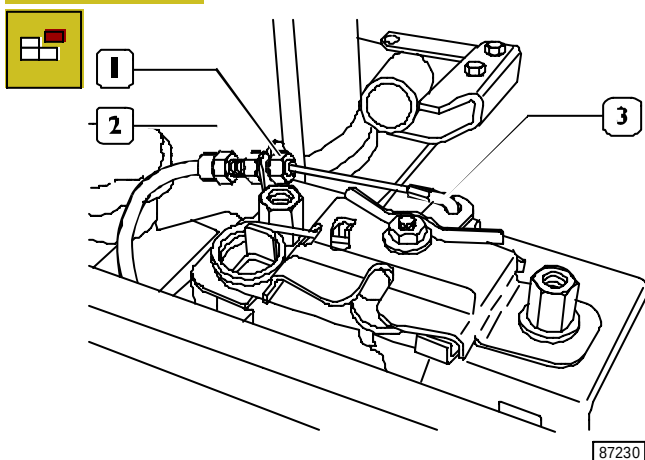


Slacken the lock nut (1) and remove the adjusting terminal (2) from the lock, then release the terminal from the lever cable (3).

Figure 113

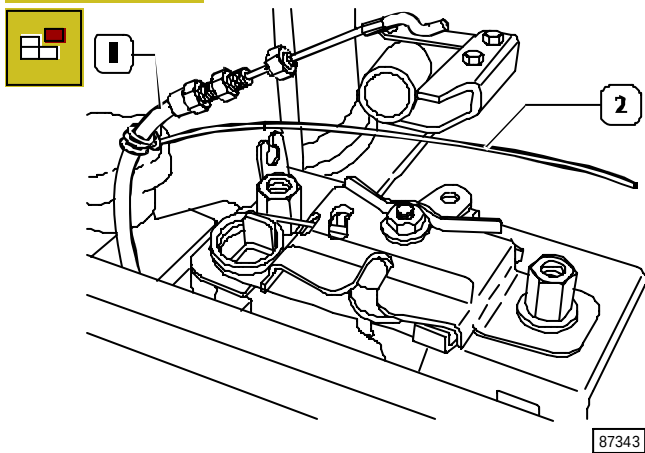


Tie up a probe (2) to the cable (1) to be taken out, so as to allow the new cable to be inserted.

Figure 114

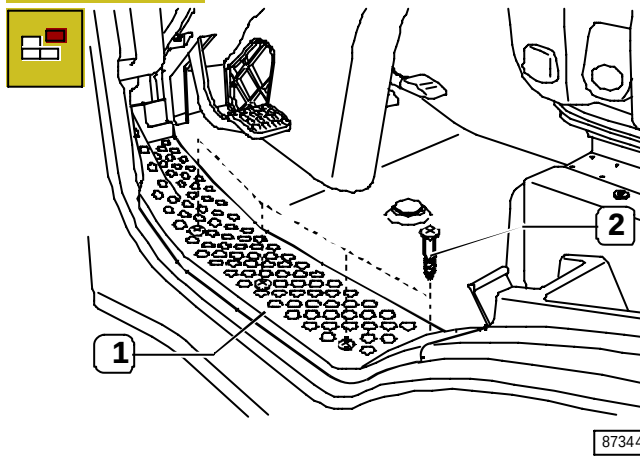


Loosen screws (2), then remove covering (1).

Figure 115

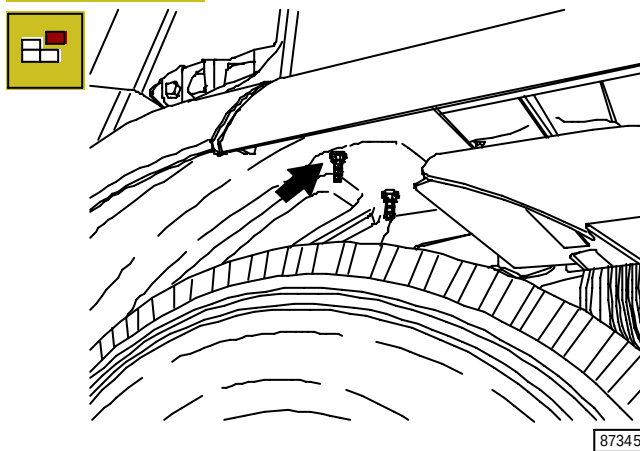

Unscrew nut (→), then recover the washer from below the wheelbox.

Figure 116

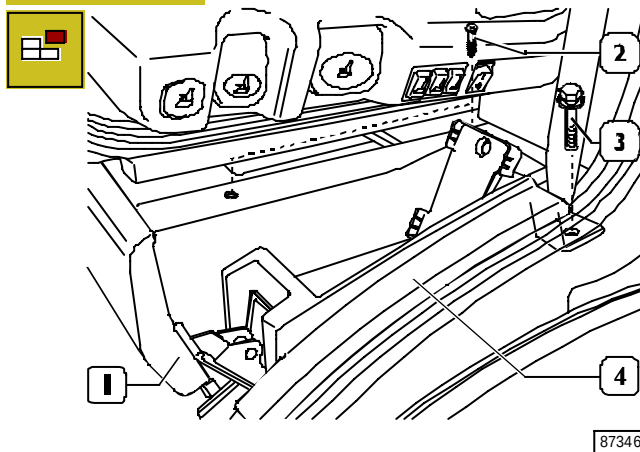


Disconnect and remove the remote control so as not to damage it.

Lower door (1), loosen screws (2) and screw (3), then take off covering (4) carefully

Aquila Trucks Centres

Figure 117

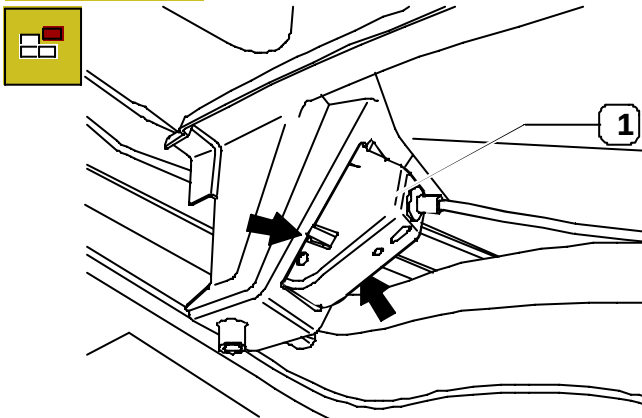

87347

Act on the points shown (→), then take out handle (1).

Take off handle (1) with its respective cable, then untie the probe.

NOTE Leave probe (2, Figure 113) in the space between the cabin and the utility compartment opening.

Refitting




Reverse the removal procedure.



NOTE Before refitting the covering (1, Figure 108) carry out the lid opening control adjustment.

Lid opening control cable adjustment

Figure 118

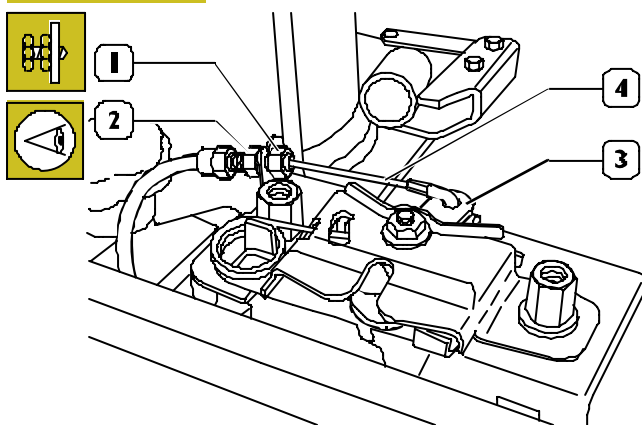

87234



Operate the nut (2) to tension the cable (4) with the lever (3) free and without clearance.

After adjustment, tighten the lock nut (1).

Aquila Trucks Centres

555010 DRIVER'S SEAT

 Figure 119

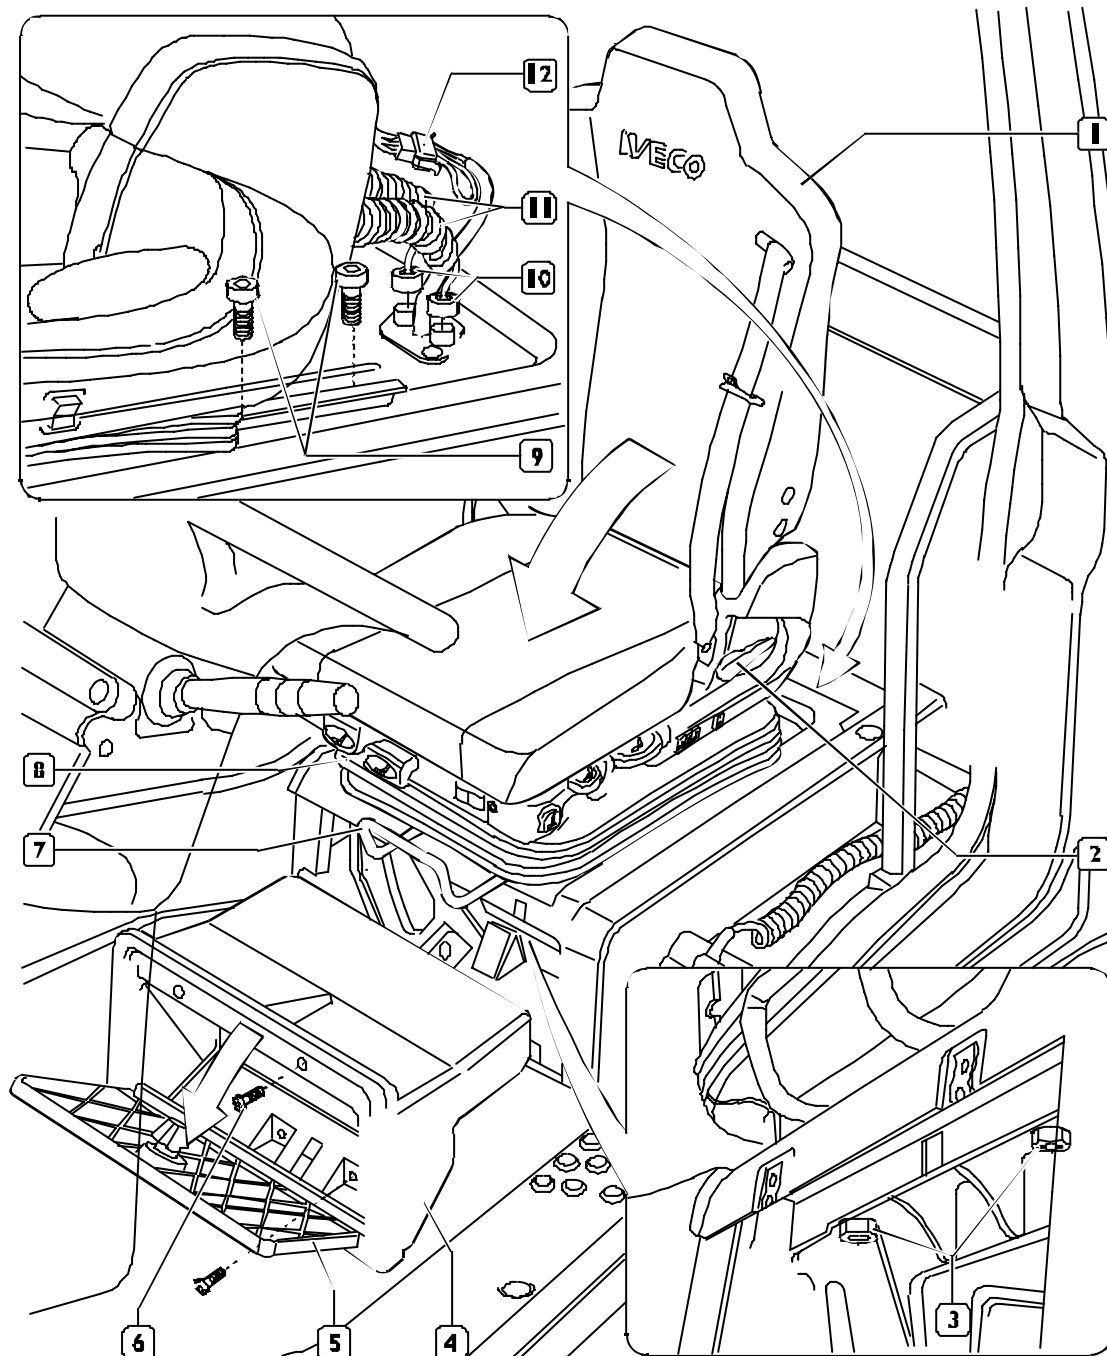

77149

Removal

Open the door (5) of the glove compartment (4).
 Unscrew the fixing screws (6) and remove the glove compartment (4) from the vehicle.
 Operate the lever (7) and bring the seat (8) into the "all forward" position.
 Operate the lever (2) and tilt the back (1).
 Undo the quick couplings (10) and detach the air pipes (11).
 Disconnect the electric system connector (12).
 Unscrew the fixing nuts (3) and screws (9) and remove the seat (8) from the vehicle.


Refitting

Refit by carrying out the procedures described for removal in reverse order.

Aquila Trucks Centres

Component layout

Figure 120

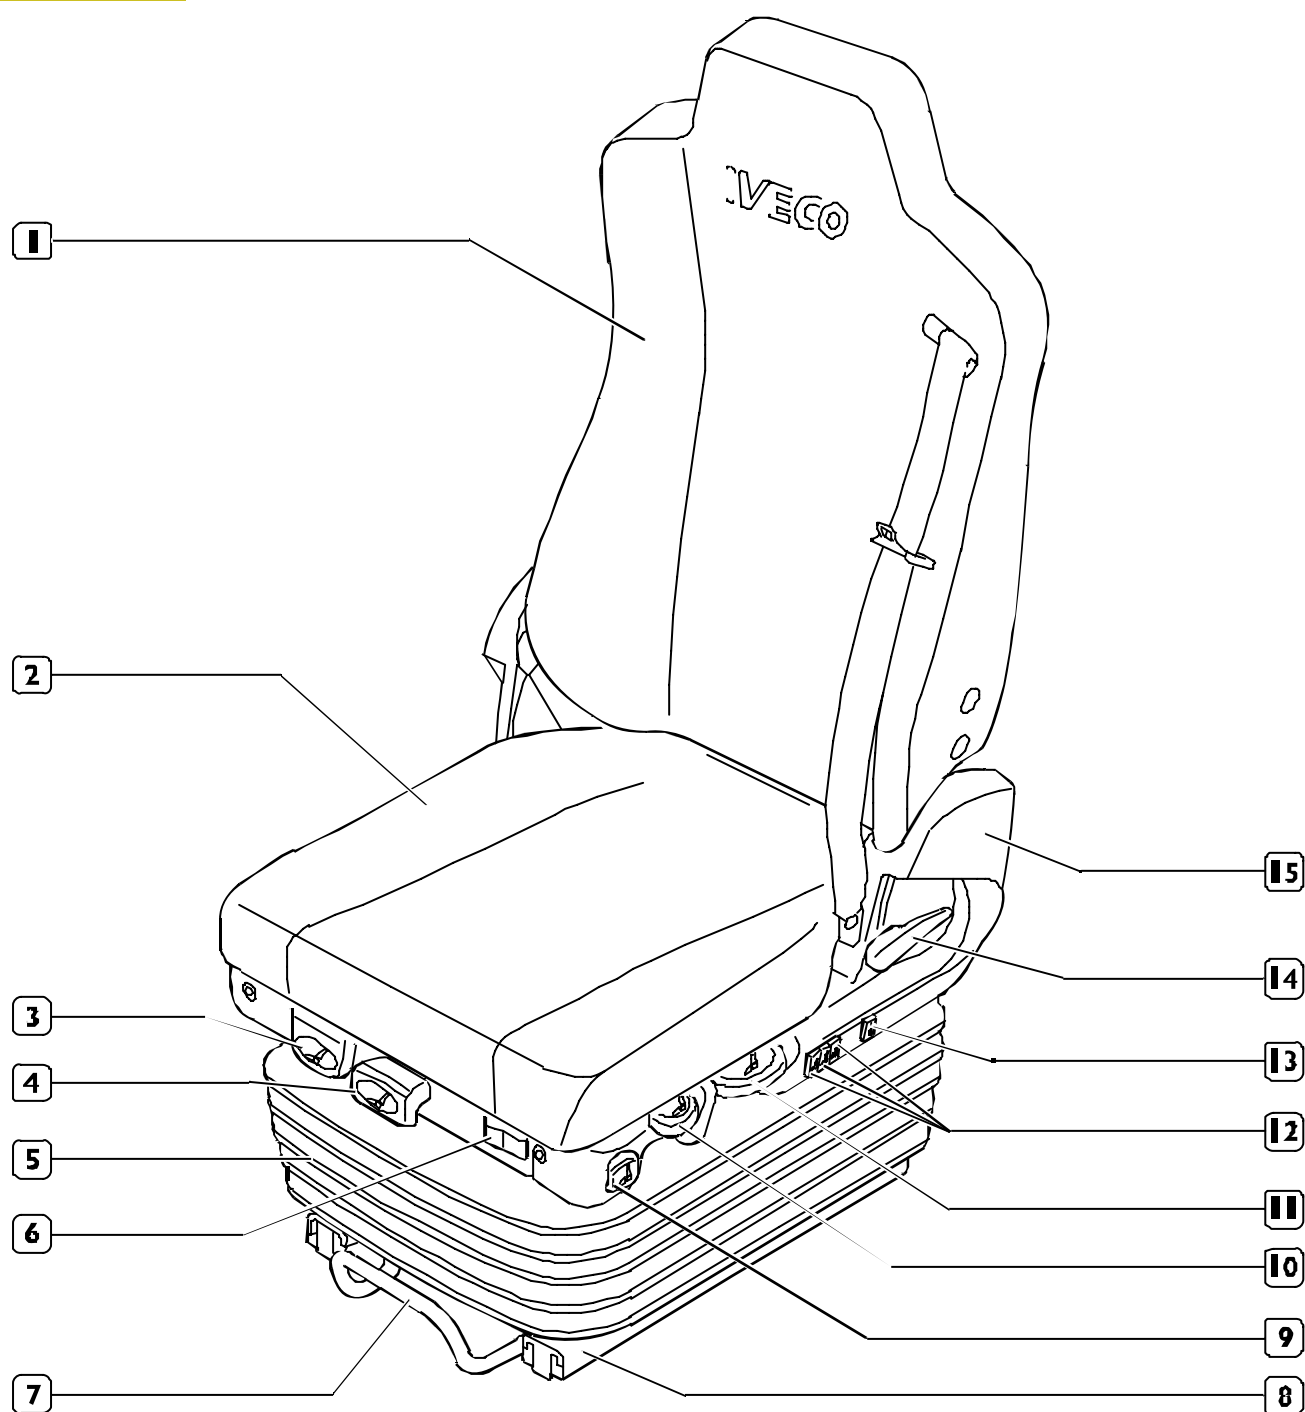


77150

1. Back - 2. Cushion - 3. Seat tilt adjustment - 4. Cushion depth adjustment - 5. Bellows - 6. Horizontal spring - 7. Horizontal adjustment - 8. Guides - 9. Lowering seat - 10. Adjusting the vertical shock absorber - 11. Adjusting the seat height - 12. IPS pneumatic lumbar support - 13. Seat heating - 14. Back adjustment - 15. Upholstery.

Aquila Trucks Centres

REMOVING THE DRIVER'S SEAT
Removing - refitting the cushion

Figure 121

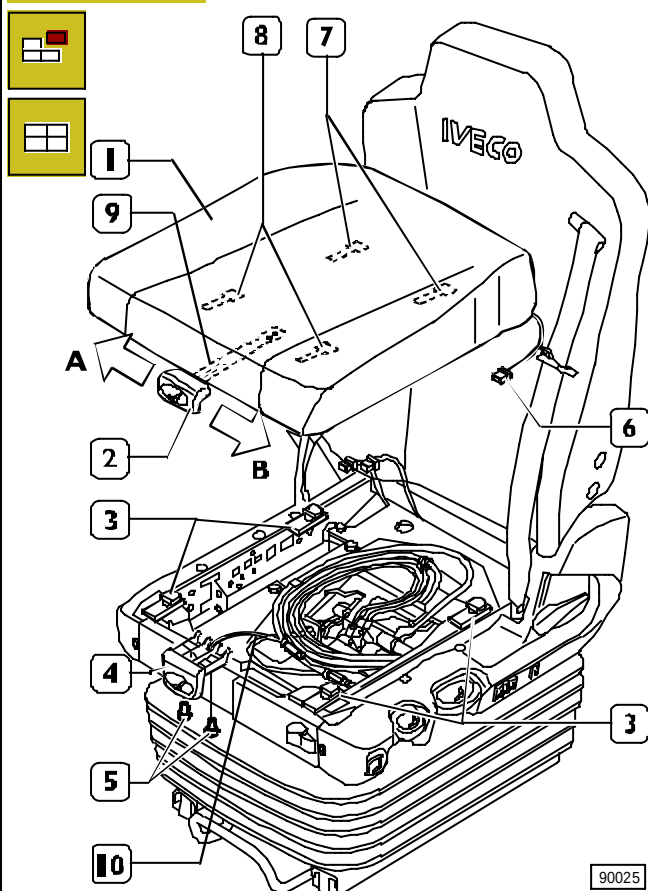**Removing**


- Lift the lever (2) for adjusting the cushion depth.
- Arrange the cushion (1) in its head position.
- Unscrew the screws (5) fixing the seat tilt adjustment lever (4).
- Keep the lever (2) in the top position and push in the direction of the arrow (A).
- Move the cushion (1) of the seat forward and lift it.
- Disconnect the electrical connection (6) of the seat.
- Detach the cushion (1) from the seat.

Refitting

- Bowden flexible cable (10) must be positioned between lever (9) and sitting cushion base plate.
- Press cushion with key holes (7) on rear sliding blocks.
- Draw lever (2) upwards (do not displace cushion).
- Press cushion front key holes (8) on front sliding blocks. Push cushion downwards and at the same time push up to the stop towards the seat back. Now, check that all the four sliding blocks are still anchored in cushion base plate (cushion vertical movements must not be possible).
- Press lever (2) according to the direction of arrow (B) and push the cushion towards the seat back up to the engagement of lever (2).
- Check the cushion to be steadily secured according to both horizontal and vertical directions.

Removing - refitting cushion sliding blocks

Figure 122

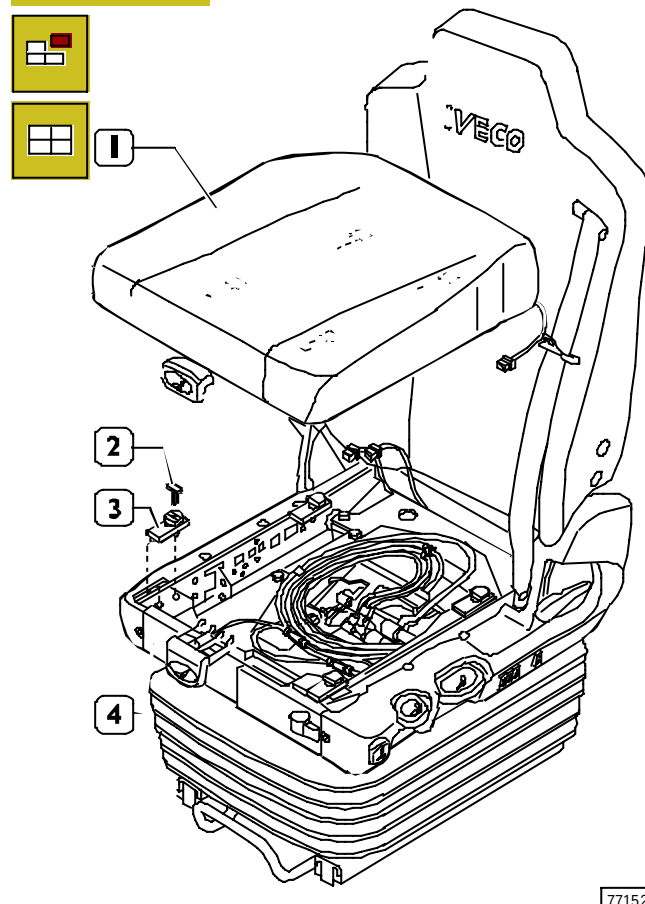**Removing**

- Remove the cushion as shown alongside.
- Take out plug (2) and push out sliding block (3).


Refitting

- Mount sliding block (3) to seat frame (4).
- Put plug (2) into sliding block (3) seat.

Aquila Trucks Centres


Removing - refitting the seatbelt

Figure 123

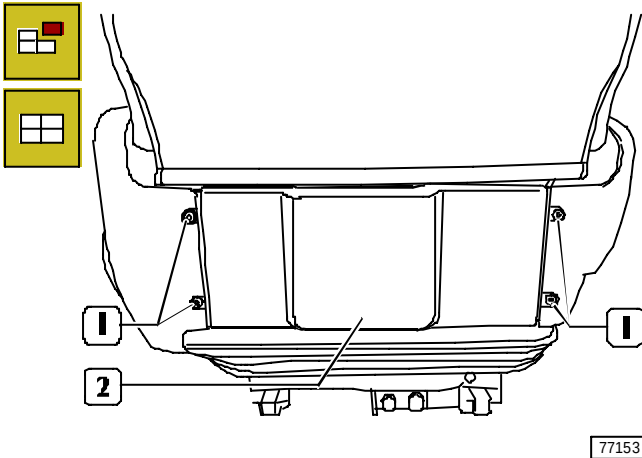

- Detach the seat cushion as described above.
- Unscrew the fasteners (1) and remove the rear upholstery (2) of the back.

Figure 124

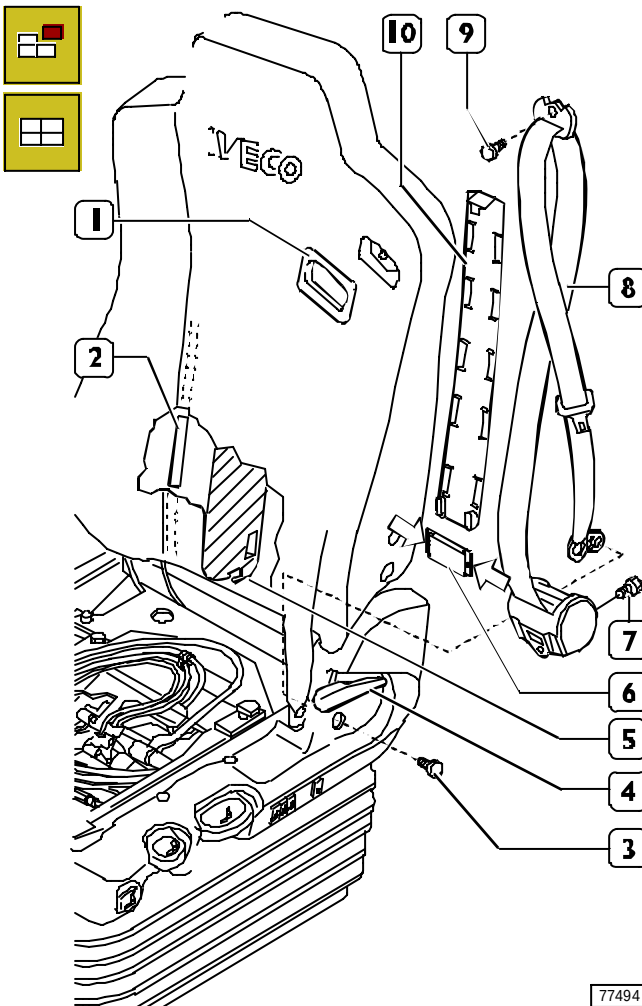

- Lift the back adjustment lever (4) and unscrew the screw (3) fixing the seatbelt hook.


- Unscrew the screw (9) fixing the top of the seatbelt and take off the facing (1).
- Unhook the sections (5) and lift the back upholstery off the fixing tapes (2) (Velcro).
- Remove the retainer (6) of the plastic guide (10) acting in the direction of the arrows.
- Unscrew the screw (7) fixing the reel and remove the seatbelt (8) from the seat.

Refitting

- For fitting, carry out the steps performed for removal in reverse order.

Removing - refitting seatbelt connection and right-hand side upholstery

Figure 125

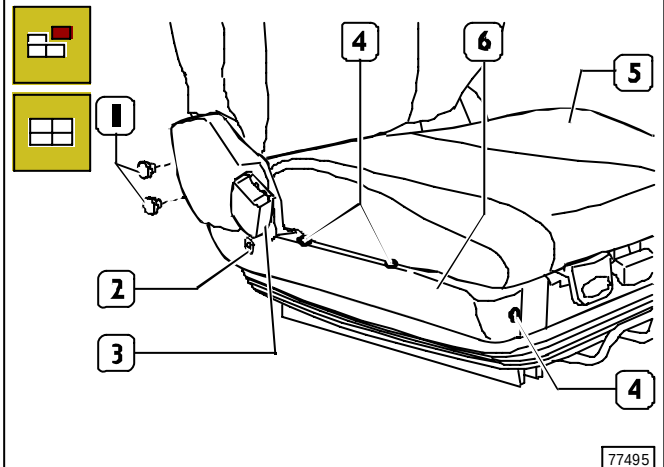

- Position the cushion (5) forwards.
- Unscrew the screws (4) fixing the upholstery (6) and the press-on caps (1).
- Unscrew the screw (2) and remove the belt connection (3) and the side upholstery (4).


Refitting

- For fitting, carry out the steps performed for removal in reverse order.

Aquila Trucks Centres

Removing - refitting the left-hand side upholstery, IPS valve and heating switch

Figure 126

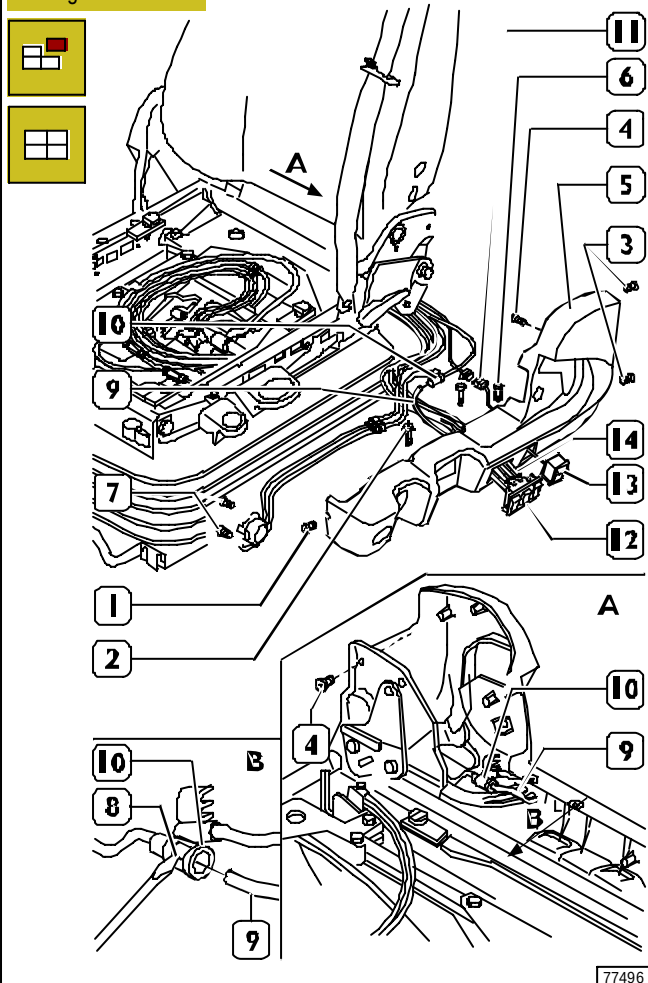

Removing

- Remove the seat cushion as described above.
- Unscrew screws (1), (2) and (3).
- Fold the back fully forwards and unscrew the screw (4).
- Remove the side upholstery (5) from the seat framework.
- Unscrew a screw (6) and two screws (7).
- Lift safety hook (8) in a safe way and dismount air tube (9) from connector (10) (see detail A, B).
- Separate the electric connector (11).
- Push the valve (12) and the switch (13) outside the upholstery (5).
- Disconnect the hoses (14) from the valve (12).


NOTE Mark the hoses to facilitate assembly.

Refitting

- For fitting, carry out the steps performed for removal in reverse order.

Removing - refitting the back

Figure 127

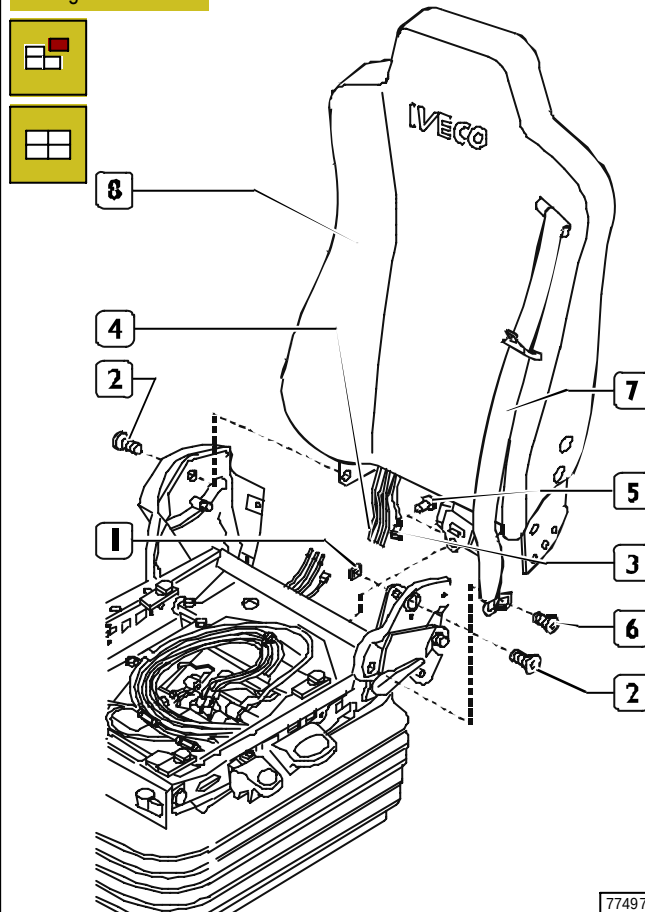

Removing

- Remove the seat cushion as described above.
- Adjust inclination at the highest position.
- Take off the side upholstery.
- Disconnect the connector (3) and three air hoses (4) if applicable.
- Remove the safety lock (1).
- Unscrew the screw (5) fixing the seatbelt reel and the screw (6) fixing the seatbelt (7).
- Unscrew the screws (2) fixing the back (8).
- Remove the back (8) from the seat,


Refitting

- For fitting, carry out the steps performed for removal in reverse order.

Aquila Trucks Centres

Removing - refitting the back adjustment lever

Figure 128

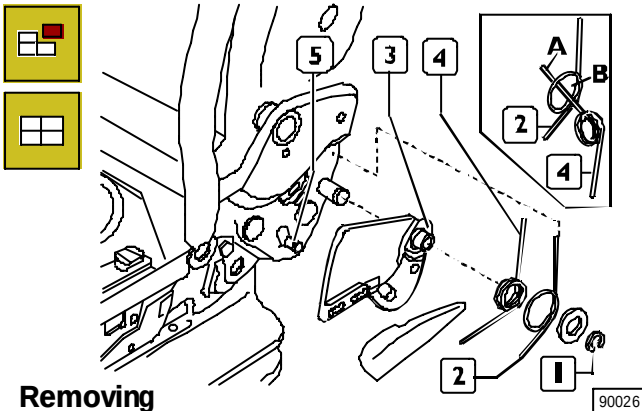

Removing

- Remove the seat cushion and the left-hand side upholstery as described above.
- Remove the safety washer (1).
- Dismount spring (2) from lever (3).
- Remove the spring (4) from the pin (5).
- Remove the lever (3).


Refitting

NOTE Before putting in the springs, thread end (A) of spring (4) into the opening (B) of spring (2).

- For fitting, carry out the steps performed for removal in reverse order.

Removing - refitting the height adjustment device

Figure 129

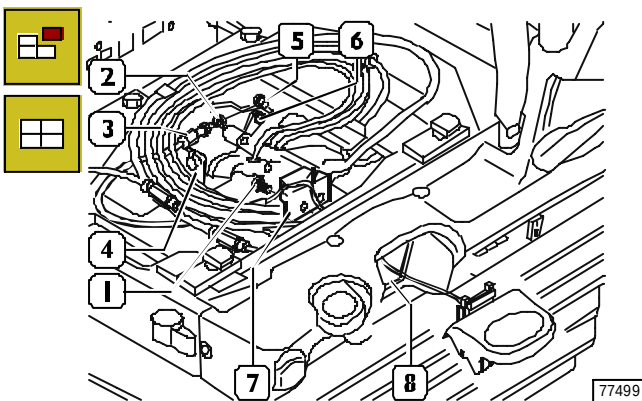

Removing


- Remove the seat cushion as described above.
- Adjust inclination at the highest position.
- Unscrew the fixing screws (1), loosen the nut (2) and remove the flexible cable (3) from the fixing (4).
- Free the threaded coupling of the cable (5) from the lever (6).
- Push the flexible cable out of the mount (7) and extract through the opening (8).

Refitting

- For fitting, carry out the steps performed for removal in reverse order.

Removing - refitting the seat angle adjustment device

Figure 130

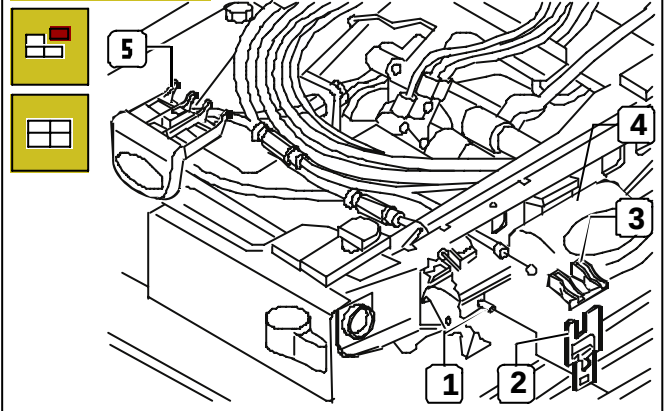

Removing


- Remove the seat cushion and the left-hand side upholstery as described above.
- Take off height adjusting lever (4) as above.
- Free the pin (1) from the lever (2).
- Remove the lever mount (3) from the seat framework.
- Loosen the flexible cable from the lever (2).
- Remove the seat adjustment device (5) from the seat.

Refitting

- For fitting, carry out the steps performed for removal in reverse order.

Removing - refitting the flexible cable of the shock absorber adjustment device

Figure 131

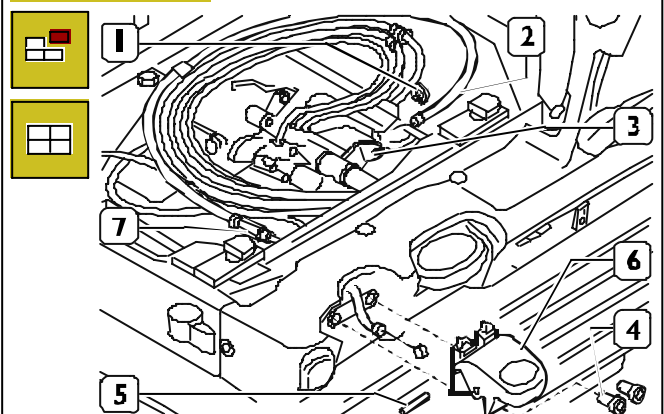

Removing

- Remove the seat cushion as described above.
- Remove the supporting washer (1) and the flexible cable (2) of the lever from the fixing system (3).
- Unscrew the screws (4).
- Extract the pin (5) from the lever (6).
- Extract the flexible cable (2) from the seat framework.

Aquila Trucks Centres


Refitting

NOTE Before fitting the seat cushion, loosen the locking nut (7), adjust the flexible cable (2) so that in the lowest position of the adjustment lever, the stiffest vertical damping is reached, then retighten the locking nut.

- For fitting, carry out the steps performed for removal in reverse order.

Removing - refitting the back adjustment lever segment

Figure 132

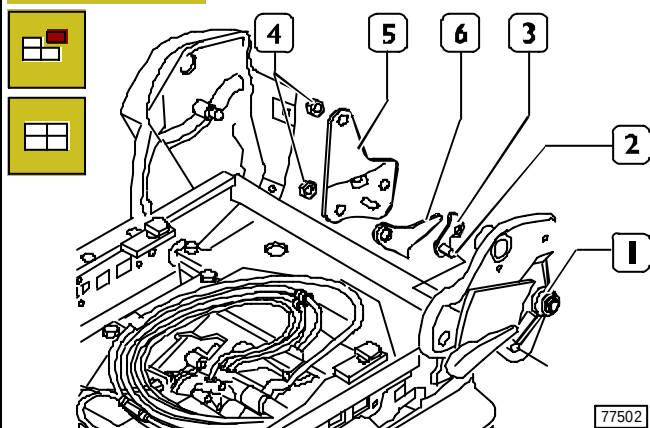

Removing


- Remove the seat cushion, left-hand side upholstery and the back as described above.
- Loosen spring (1) from pin (2) of lever (3).
- Unscrew the nuts (4) and remove the plate (5), the toothed segment (6) and the lever (3).

Refitting

- For fitting, carry out the steps performed for removal in reverse order.

Removing - refitting the air spring

Figure 133

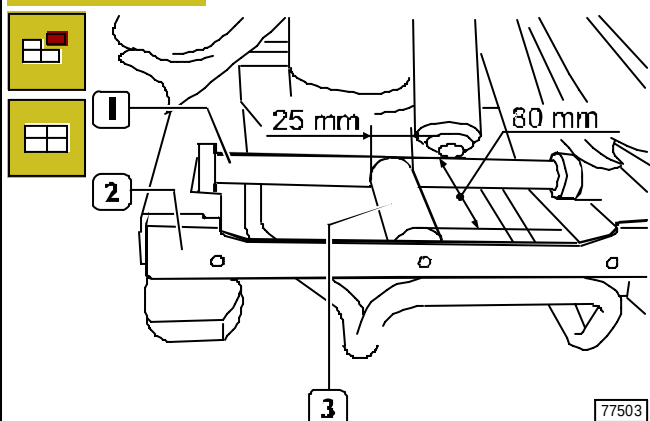


Removing

- Remove the seat cushion as described above.
- Take out the bottom bellows fastener.

- Secure suspension assembly (1) on the highest position, use special spacer (3) with dimensions shown in figure.
- Put in spacer (3) between frame (2) and seat suspension (1).

Figure 134

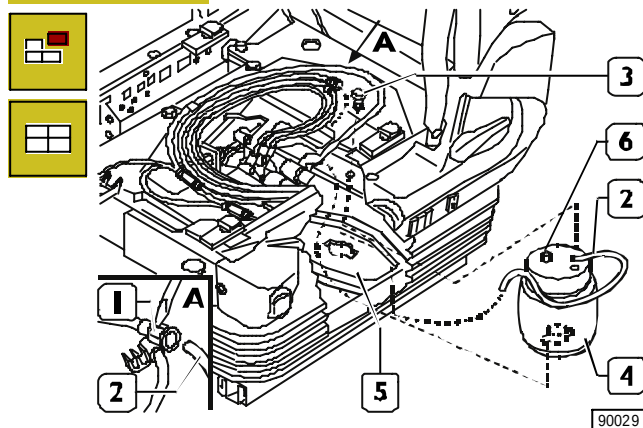

- Lift the fixing hook (1) safely and remove the air pipe (2) as shown in the box.
- Unscrew the screw (3), loosen the shock-absorber fixing and move the air spring toward the front.
- Turn the air spring (4) by 90 degrees and remove it from the bottom mount (5).


Refitting

For fitting, carry out the steps performed for removal in reverse order.

NOTE After mounting a new suspension, projection (6) must engage with the fixing hole of suspension upper support.

Removing - refitting the shock absorber

Figure 135

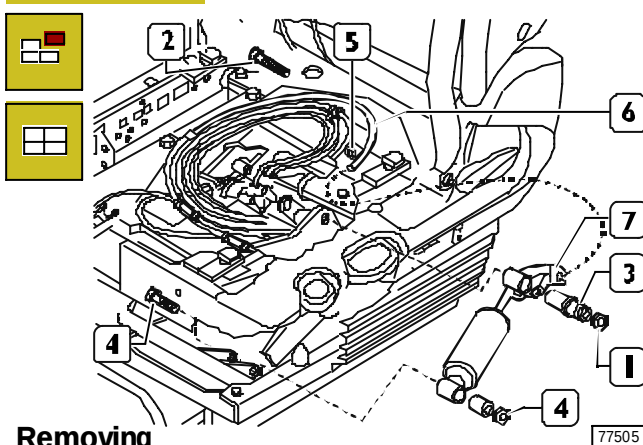

Removing

- Remove the seat cushion as described above.
- Take out the bottom bellows fastener.
- Move the suspension assembly into its lowest position.
- Unscrew nut (1), take out screw (2) and remove bushing (3).
- Position suspension assembly to the highest position (use spacer (3), Figure 133).

Aquila Trucks Centres

- Unscrew the bottom shock absorber fastener (4).
- Remove the supporting washer (5) and the flexible cable of the lever (6) out of the fastener (7).


Refitting

NOTE Before fitting the seat cushion, loosen the locking nut (8), adjust the flexible cable (6) so that in the lowest position of the adjustment lever, the stiffest vertical damping is reached, then retighten the locking nut. (8).

- For fitting, carry out the steps performed for removal in reverse order.

Removing - refitting the height adjustment valve

Figure 136

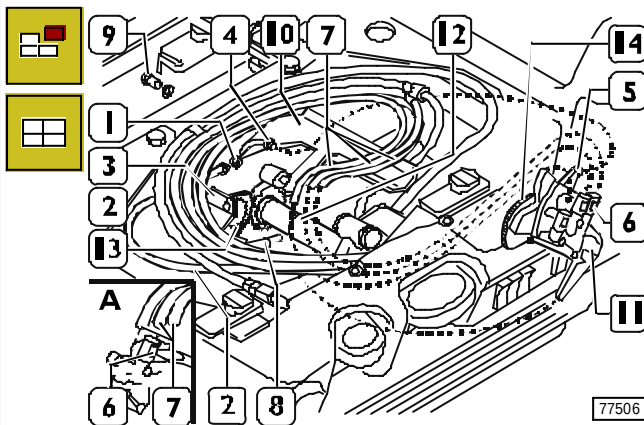

Removing

- Remove the seat cushion, as described above.
- Unscrew the nut (1), remove the flexible cable (2) from the fixing (3) and pull the cable with the threaded coupling (4) out of the valve lever (5).
- Lift the fixing hooks (6) safely and remove the air pipes (7) (see box A).
- Unhook the spring (8), extract the bottom bellow fastener, unscrew the screw (9) and turn the bracket (10) upward.
- Turn the valve (11) on the supporting pipe and pull it above the end of the supporting pipe (12).


Refitting

- For fitting, carry out the steps performed for removal in reverse order.

NOTE After fitting the new valve, the highest tooth of the toothed segment (13) must adapt to the width of the highest space of the toothed segment of the valve (14).

Removing - refitting the height locking system

Figure 137

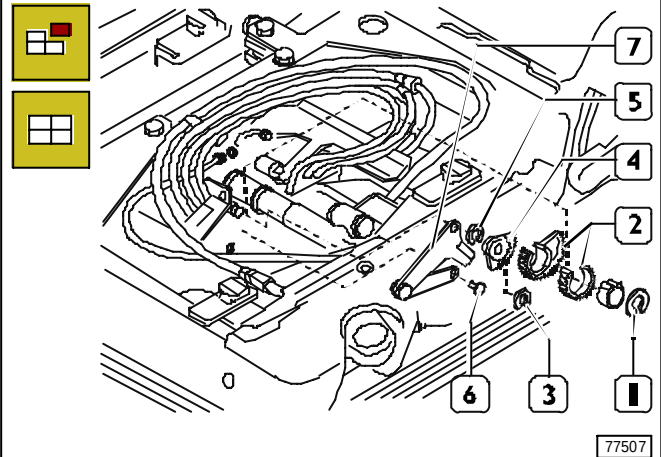

Removing

- Remove the seat cushion, as described above.
- Remove the height adjustment valve.
- Unscrew support washer (1) and remove toothed segment (2).
- Unscrew supporting washer (3) and remove the toothed segment (4).
- Unscrew the supporting washer (5), unscrew the screw (6) and remove the lever (7).


Refitting

- For fitting, carry out the steps performed for removal in reverse order.

NOTE After fitting the new parts, the highest tooth of the toothed segment (2) must adapt to the width of the highest space of the toothed segment of the valve (4).

Removing - refitting the flexible cable of the horizontal lever suspension

Figure 138

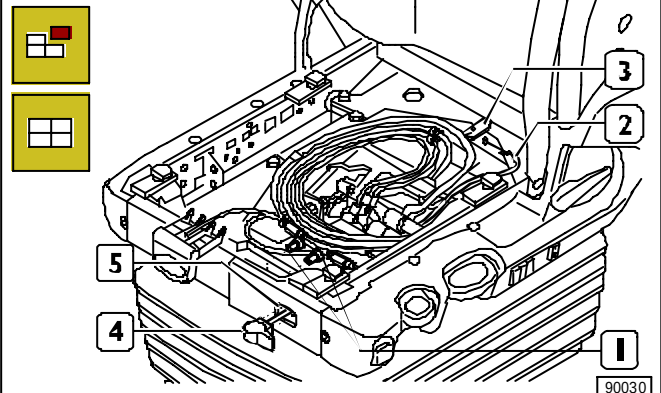

Removing

- Remove the seat cushion, as described above.
- Unscrew screws (1).

Aquila Trucks Centres


- Unhook the cable (2) from the lever (3).
- Extract the flexible cable (2) comprehensive of the lever (4) from the opening (5).

Refitting

- For fitting, carry out the steps performed for removal in reverse order.

Removing - refitting the fast lowering magnetic valve

Figure 139

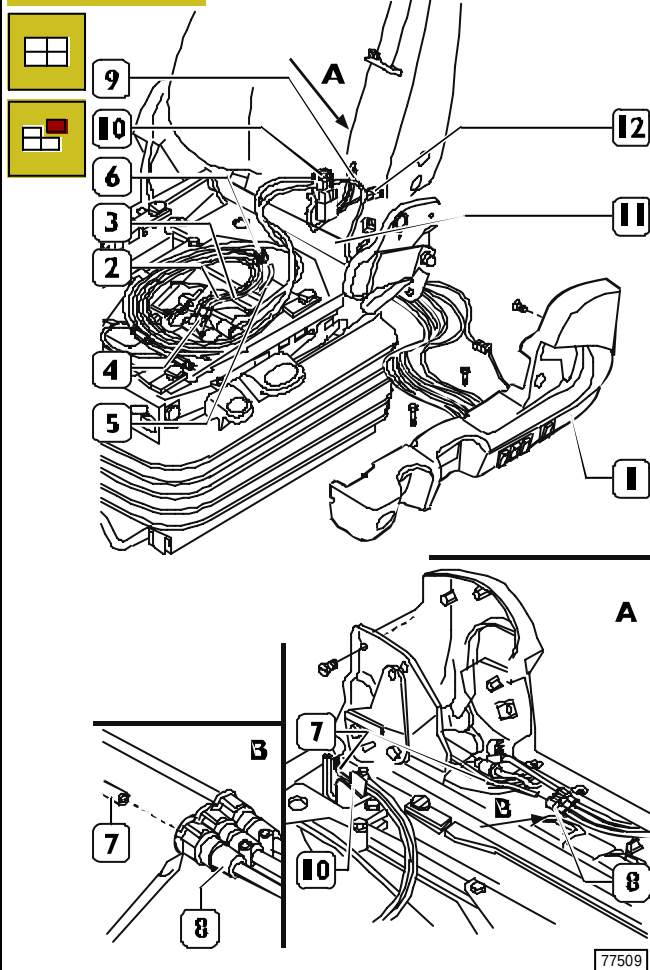**Removing**


- Remove the seat cushion, as described above.
- Loosen the plastic covering (1) as described above.
- Disconnect the hoses (2) and (3) from the valve (4), the hose (5) from the coupling (6) and the hose (7) from the coupling (8) inside the plastic covering (1) (boxes A/B).
- Extract the fixing arm (9) of the magnetic valve (10) from the transverse pipe (11) and lift the valve (10).
- Disconnect the electric connector (12).
- Remove the magnetic valve (10) for fast lowering from its seat.

Refitting

- For fitting, carry out the steps performed for removal in reverse order.

Removing - refitting the fast lowering switch

Figure 140

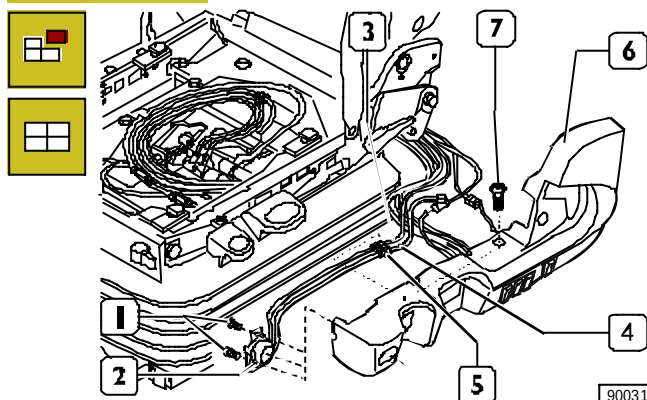**Removing**


- Remove the seat cushion, as described above.
- Loosen the plastic covering (6) as described above.
- Unscrew screw (7).
- Disconnect the hoses (3) (4) from the coupling (5).
- Unscrew the fixing screws (1) and disconnect the switch (2) for fast lowering from its seat.

Refitting

- For fitting, carry out the steps performed for removal in reverse order.

Removing - refitting the lumbar support device

Figure 141

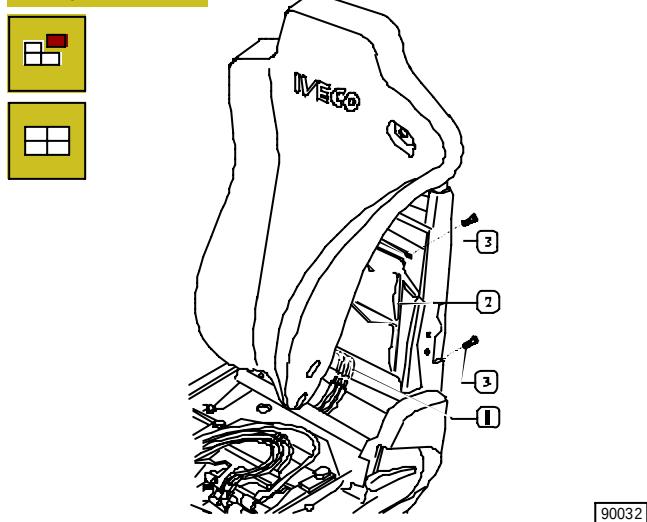**Removing**

- Partially remove the back upholstery.
- Unscrew screws (3) and take the foam off seat back frame.
- Disconnect the hoses (1).
- Remove the lumbar support device (2).


Refitting

- For fitting, carry out the steps performed for removal in reverse order.

Aquila Trucks Centres

Removing - refitting the back upholstery

Figure 142

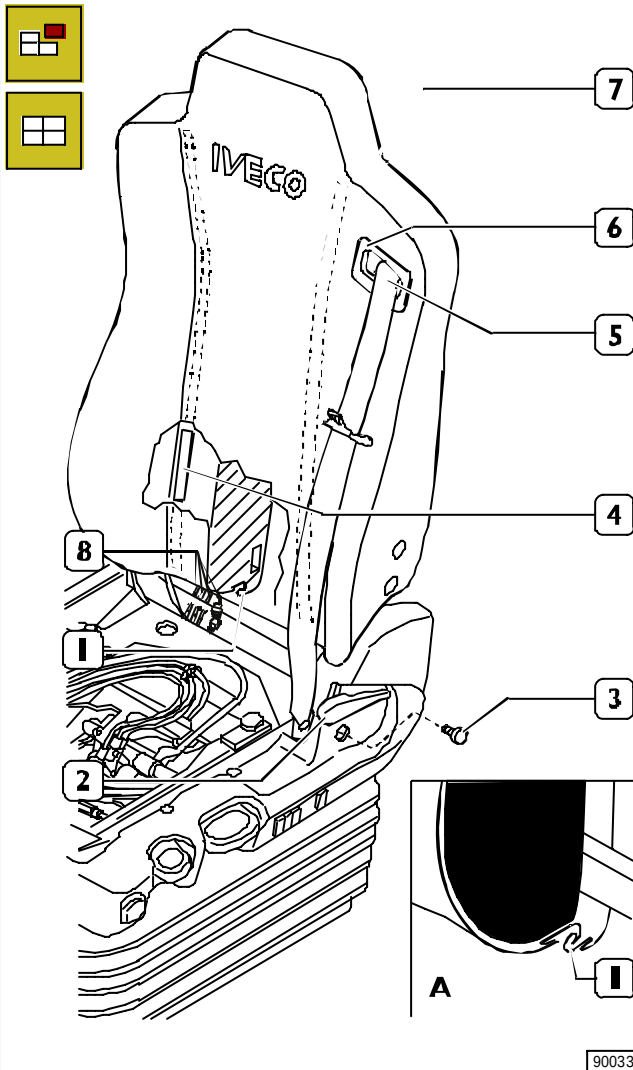

Removing


- Remove the seat cushion, as described above.
- Take off the three hoses and electric connection (1).
- Unhook the C-sections (1) (box A).
- Lift the lever (2) and unscrew the screw (3) fixing the seatbelt.
- Take off the facing (6).
- Lift the back upholstery (7) upwards off the fixing tapes (4) (Velcro),
- Extract the seatbelt through the opening (5).
- Remove the upholstery (7) from the seat.

Refitting

- For fitting, carry out the steps performed for removal in reverse order.

Removing - refitting the cushion upholstery

Figure 143

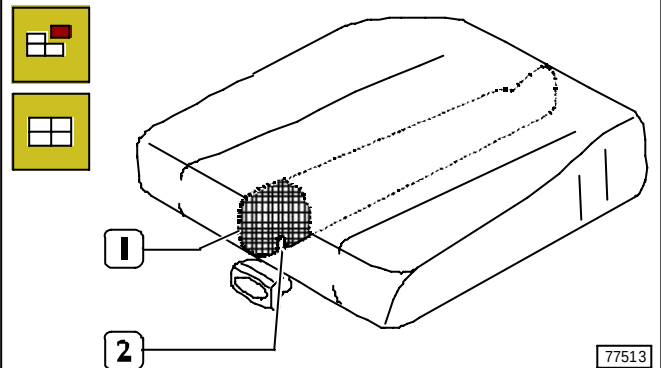

Removing

- Remove the seat cushion, as described above.
- Free the upholstery of the cushion of the seat (1) from the edging (2) passing along the perimeter of the seat bottom.


Refitting

- For fitting, carry out the steps performed for removal in reverse order.

Aquila Trucks Centres


DRIVER'S SEAT PNEUMATIC DIAGRAM

Figure 144

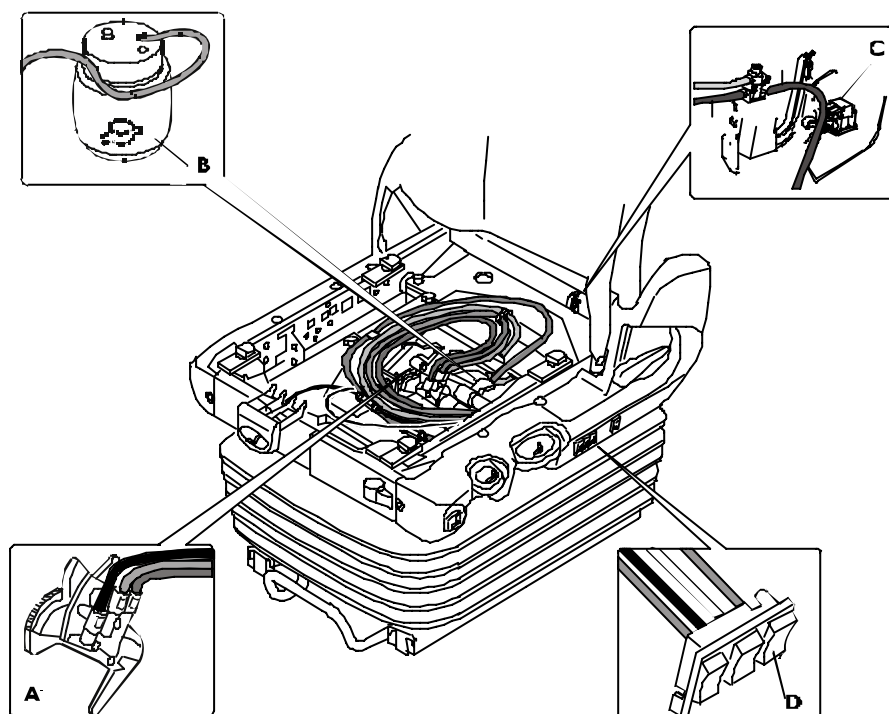

90034

Figure 145

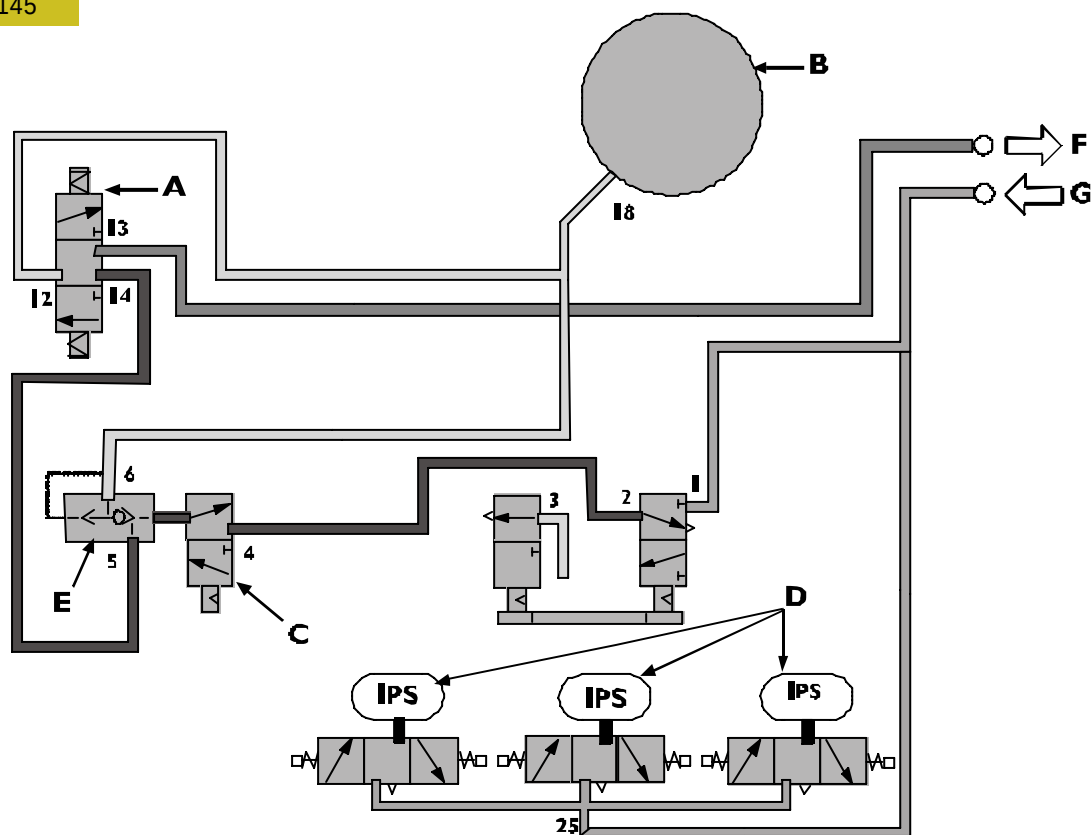


90035

A.Height adjusting valve - B. Pneumatic suspension - C. Magnetic valve for fast lowering - D. IPS valves - E. Selector -
F. Foul air - G. Entering air

Aquila Trucks Centres


PASSENGER'S SEAT PNEUMATIC SCHEME

Figure 146

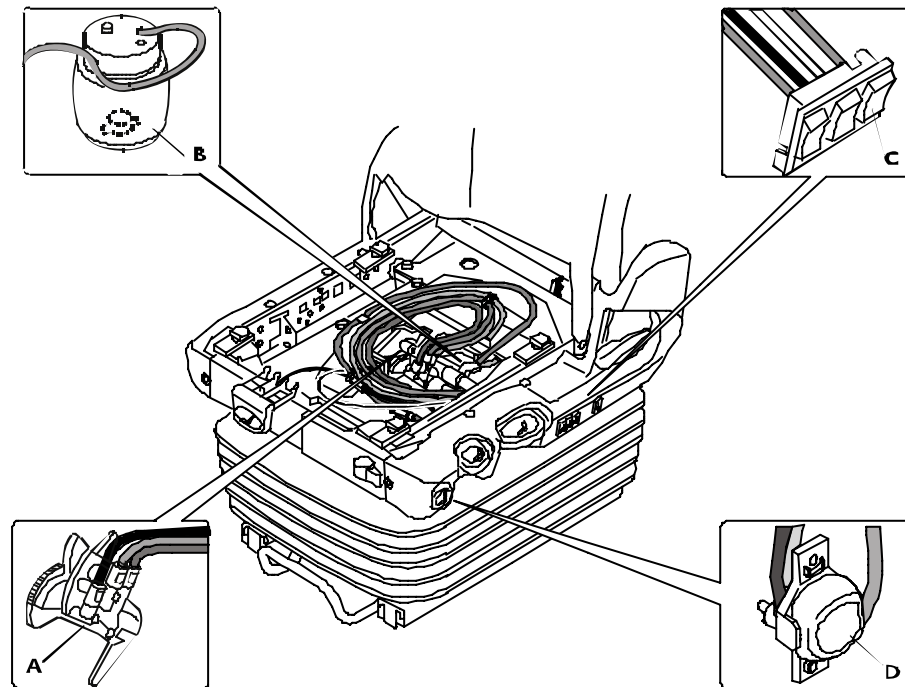

90036

Figure 147

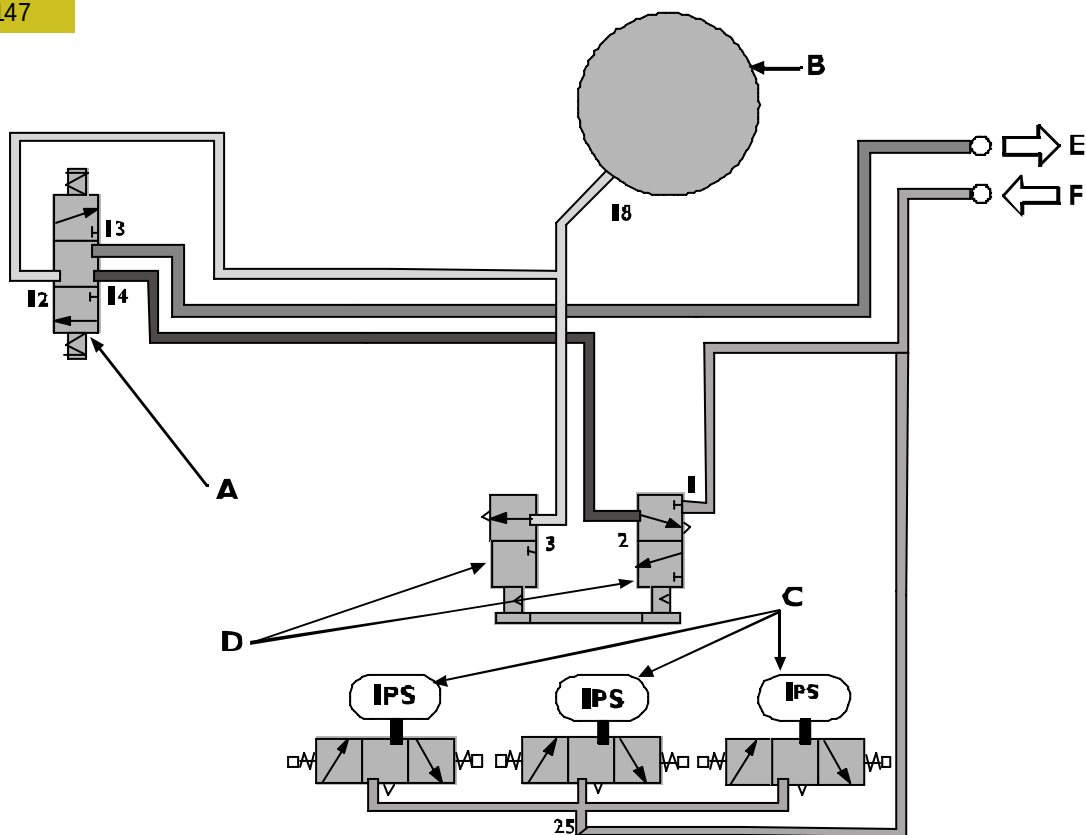

90037

A. Height adjusting valve - B. Pneumatic suspension - C. IPS valves - D. Fast lowering switch - E. Foul air - F. Entering air


Aquila Trucks Centres

CABIN REFRIGERATOR


Preliminary checks

If the fridge does not work or its inner temperature is not enough, check the following conditions prior to making any replacement or maintenance work:

Figure 148

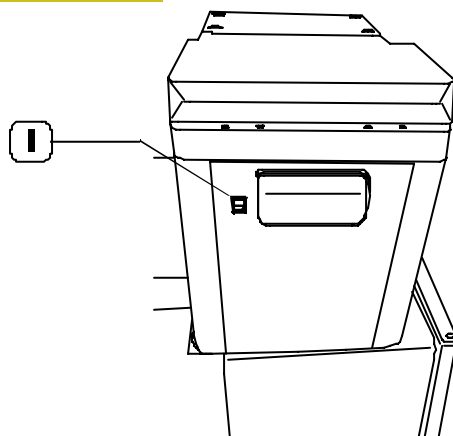

86980

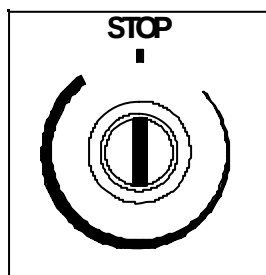

86981

OFF position

- control unit supply voltage equal to 24.1 V;
- switch (1) ON (orange warning lamp ON);
- the thermostat must be not in OFF position (see figure);
- the protection fuse available on the dashboard electric panel must not be blown;
- the space around the refrigerator must be free enough to ensure ventilation.


NOTE A compressor protection device is available for cabin tilting, whereby the installed refrigerator stops working, for safety reasons, if the vehicle (either stationary or running) is tilted by more than 15°.

NOTE The refrigerator may run down the battery when the engine is not working. When the battery level falls too low, the refrigerator will switch off automatically. Correct refrigerator operation is ensured only when the engine is running.

Removal

- Detachment is accomplished by tilting over the cabin, removing the sound-proofing panel below, and taking off the two refrigerator fastening screws.


Figure 149

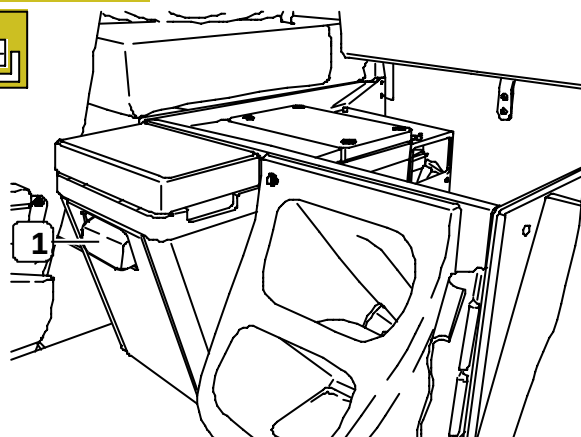

87018

- When the cabin has been lowered, make the refrigerator slide forward by acting on handle (1).

Figure 150

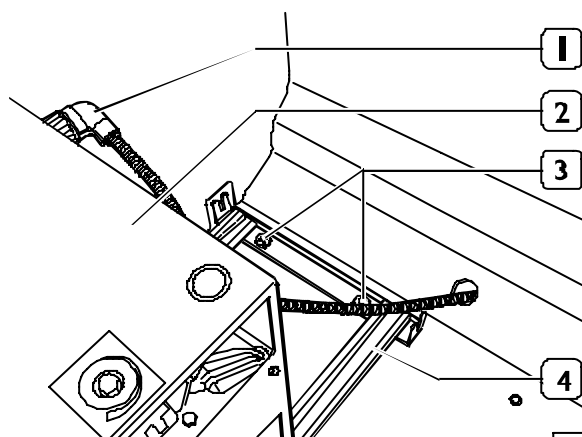

87019

- Disconnect electric connection (1).
- Remove screws (3).
- Take off refrigerator (2) with its respective guide (4).

Refitting




Refitting is carried out by reversing the order of removing operations.

Aquila Trucks Centres

OVERHAULING

Removing


Figure 151

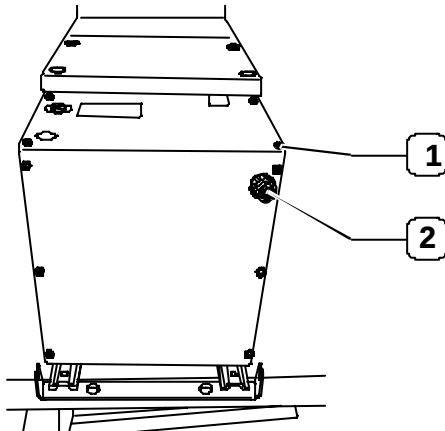

86982

Remove screws (1). Take threaded ring (2) out of the connector.

Figure 152

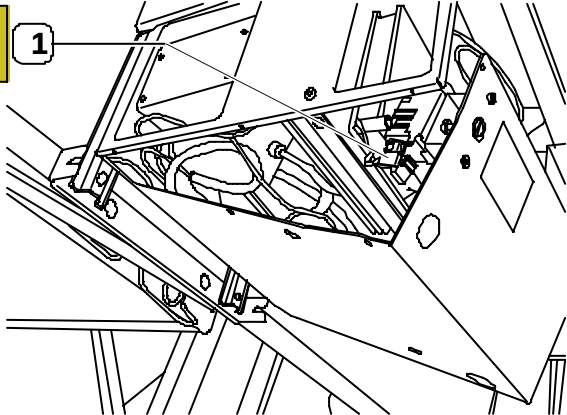


86983

Remove connection (1) from the thermostat.

Fan removing

Figure 153

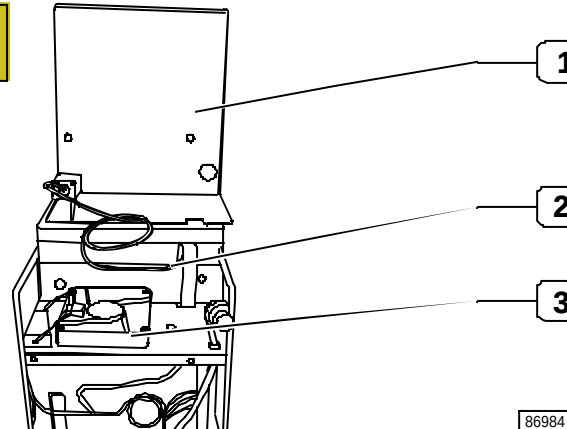


86984

Overturn rear protection (1) as shown on the figure, taking care not to apply tensile stress to the thermostat probe (2).

The fan can be removed by taking out screws (3).


Figure 154

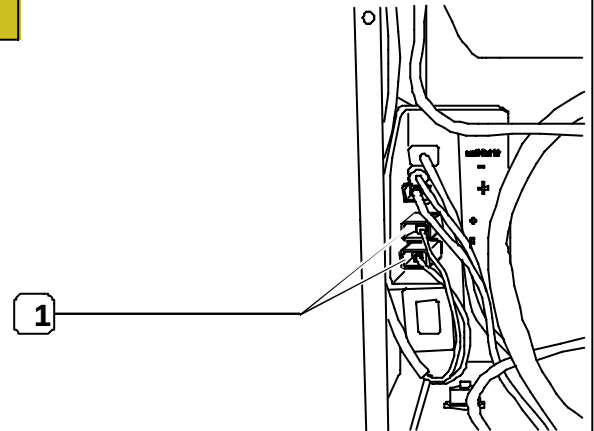

86985

Remove electric connection (1) from the control unit, taking care not to pull the cables.

Figure 155

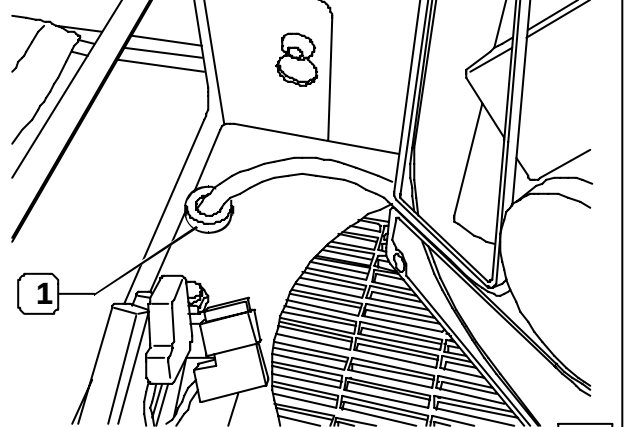


86986

Use a screwdriver to take out core hitch (1), then take out the cables one at a time.

Removing the antitipping probe with electronic circuit on the control unit

Figure 156

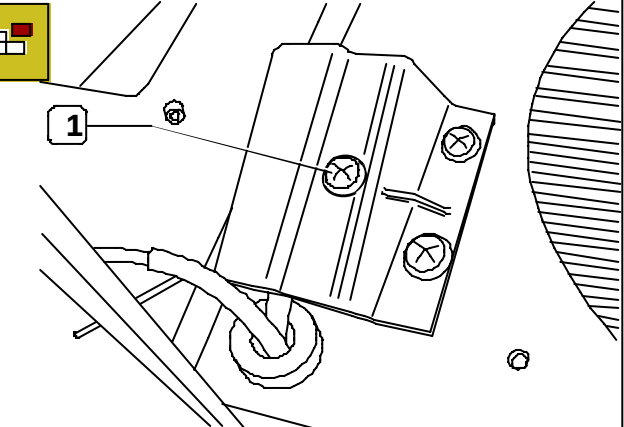


86987

Remove screw (1).

Aquila Trucks Centres


Electronic control unit disassembling

Figure 157

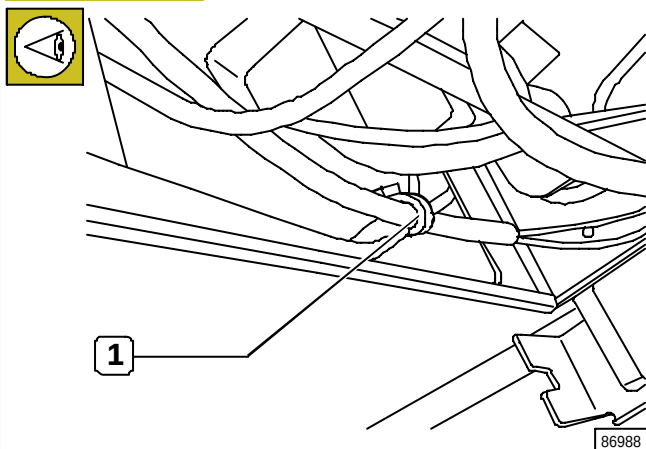

Cut the plastic strap (1) joining the wiring on the electronic control unit front part.


Figure 158

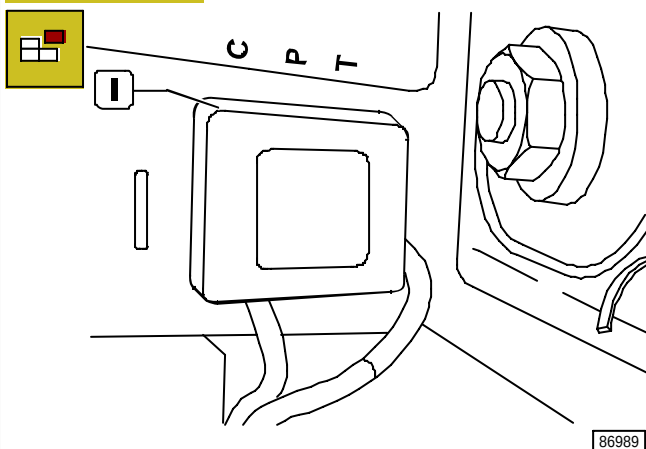

Take non-tilting probe circuit (1) out of the compressor's electronic control unit.


NOTE Do not use blunt tools which could damage the circuit inner face.

Figure 159

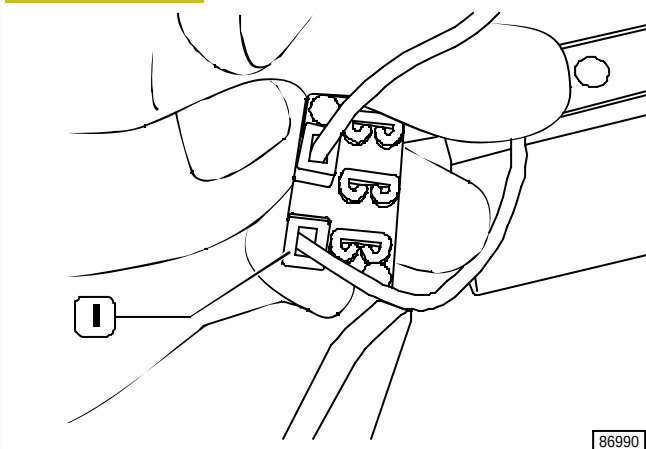


Take off the connector (1) to which the probe cable is secured. Now, the probe can be taken out through the core hitch, thus avoiding connector crawling.

Figure 160

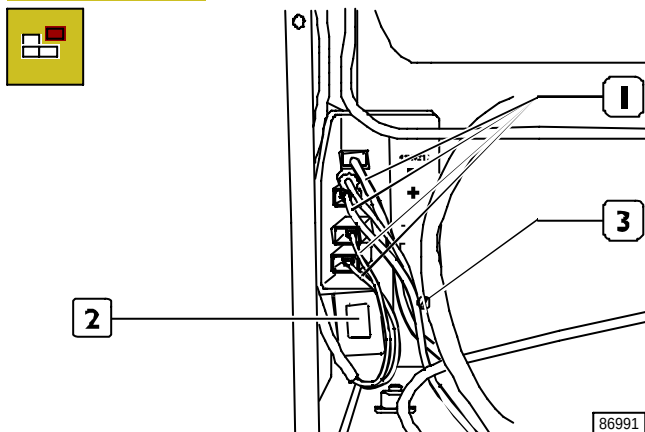

Disconnect all electric cables (1) from the control unit. Take out electronic circuit (2). Remove screw (3).


Figure 161

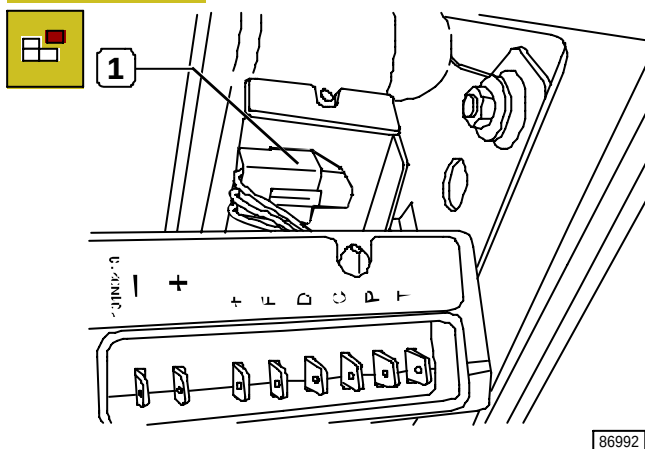

Move the control unit aside, then take connector (1) out of the compressor.

Checks

Figure 162

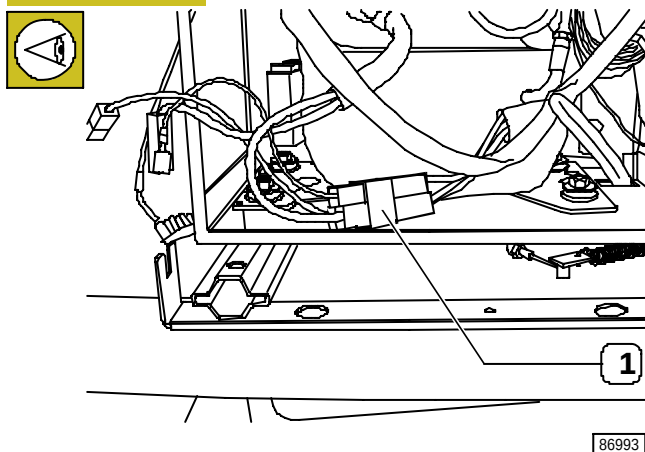

Check proper tightening of connector (1) for connection with the front switch.

Refitting

Assembling is carried out by reversing the order of disassembling operations.

Aquila Trucks Centres

CAB AIR-CONDITIONING

General

The purpose of the air-conditioning system is to make the cab comfortable as regards the following parameters:

- temperature and relative humidity of outside air;
- temperature and relative humidity in the cab.

The system subjects the air to thermodynamic transformations that affect its temperature, relative humidity and purity. This is accomplished by:


- ventilation, or introducing air taken from the outside (therefore with the temperature and humidity of the surrounding environment) into the cab;
- air-conditioning, or cooling and de-humidifying the air, with the possibility of heating it afterwards as preferred so as to change the temperature and humidity in the cab.

VENTILATION Description

Ventilation is the function of drawing in fresh air from the outside, cleaned of pollen and dust by a special filter, or recycling the air in the cab.

This system is composed of a shell, designed to house the electric fan unit, air ducts, fresh air intake and recycled air intake. The electric fan has several speeds to draw in and circulate large masses of air.

Figure 163

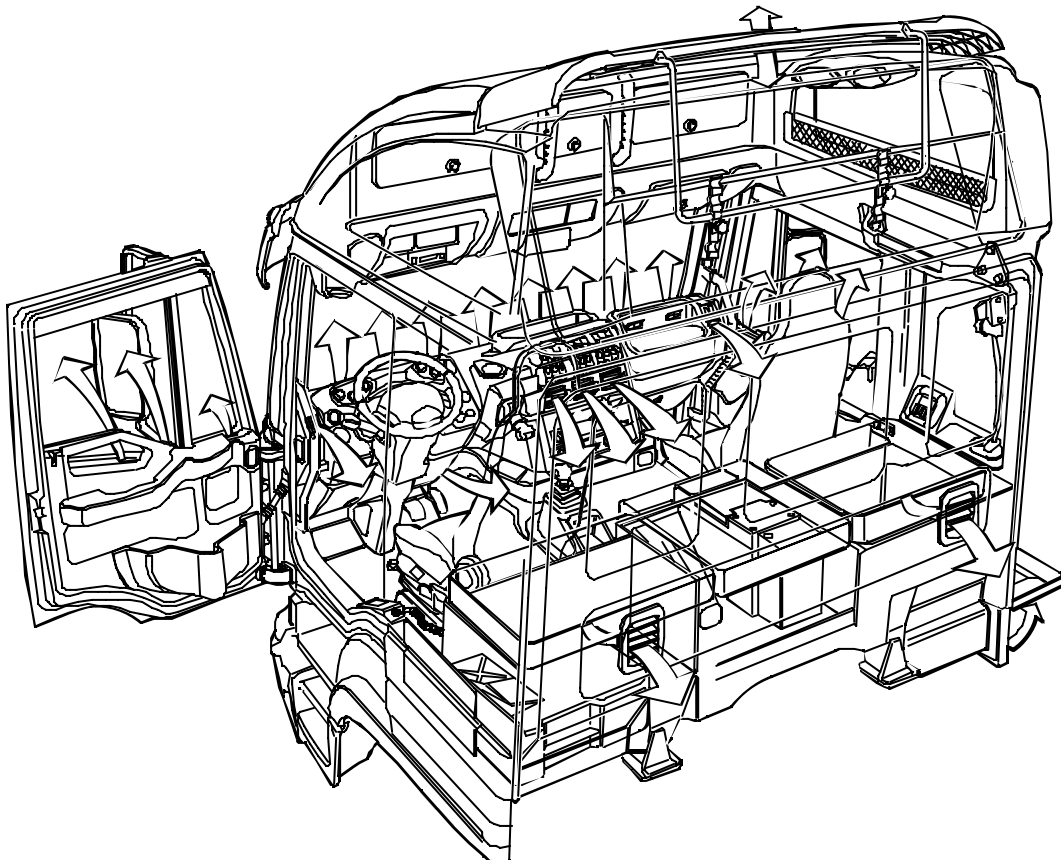

85701

CAB INTERNAL VENTILATION DIAGRAM

Aquila Trucks Centres

AIR-CONDITIONING AND HEATING

Description

This is accomplished by integrating an air-conditioning and a heating system.

This integration makes it possible to change the temperature and humidity in the cab.

Air-conditioning

Air-conditioning is accomplished by taking advantage of the high capacity of some gases to lower temperature considerably in their phase of expansion, thereby making it possible to absorb heat from the cab.

This condition is obtained by two different levels of pressure (high, when the refrigerant fluid is in its liquid state, and low, when the fluid is in its gaseous state) that are established and maintained during operation of the system.

Heating

Heating is accomplished by a radiator, in the heater unit, in which the engine coolant circulates.


Special doors allow air to pass through the radiator only when the heating function is activated.

The main components of the air-conditioning and heating system comprise:

- compressor;
- condenser;
- the dehumidifier filter (incorporated in the condenser);
- three-level pressure switch;
- expansion valve;
- evaporator;
- heater/fan unit;
- pollen filter.

Air-conditioning controls assembly

Figure 164

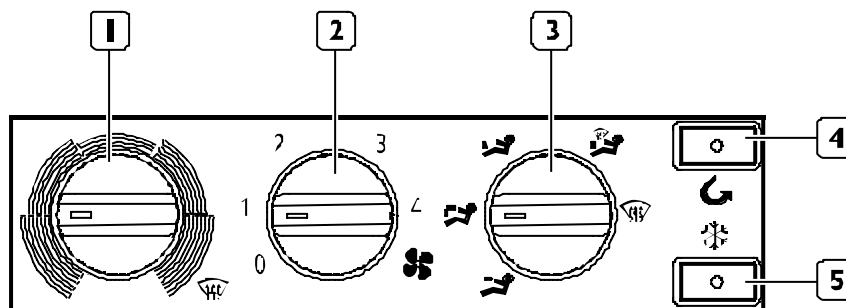

85702

Manual

Heating and ventilation


1. Air temperature control knob, with extreme positions to cut in the HI and LO functions (max and min air temperature / turn to the left for fresh air—turn to the right for warm air).
2. Electric fan knob with relative working speeds and operation selection;
 - off (0);
 - manual operation (1-2-3-4).
3. Air inlet control knob:

- face zone air;
 - face and feet zone air;
 - feet zone air;
 - feet and windshield zone air;
 - windshield zone air.
4. Switch to turn on air recirculation: it prevents air flowing in from outside.
 5. Switch to turn on the air-conditioner.

Aquila Trucks Centres

COMPONENT LAYOUT (WEBASTO AIR CONDITIONER)

Figure 165

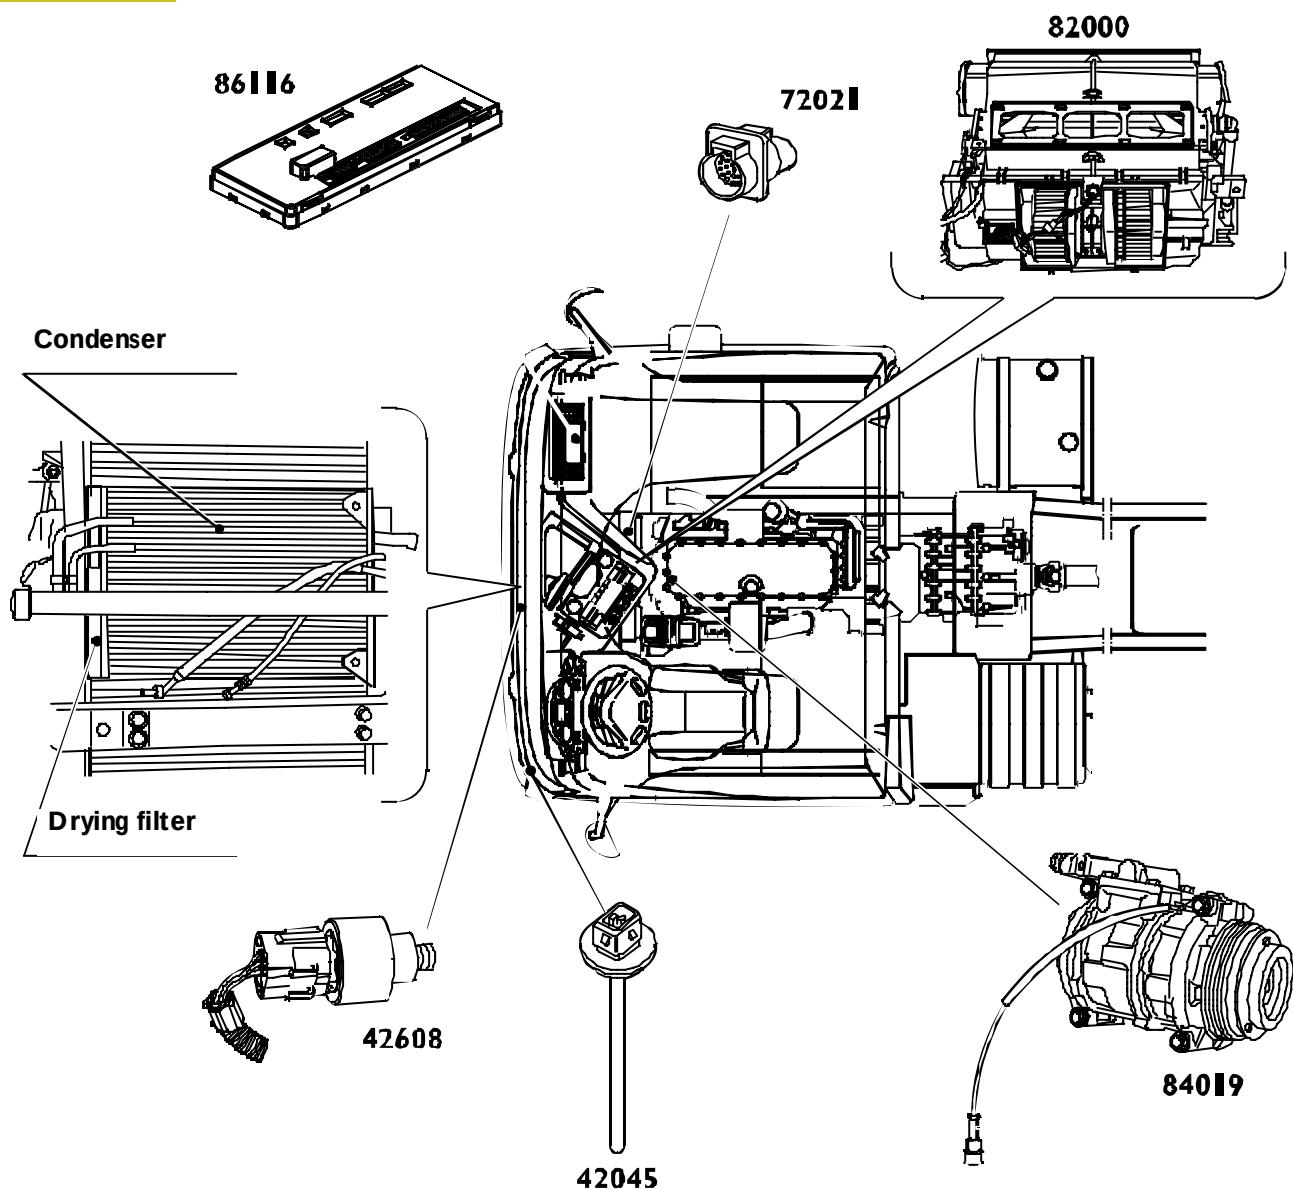


85703

Legend

- 42045 Outside temperature transmitter
- 82000 Heater assembly
- 42608 Coolant pressure switches
- 25332 Compressor insertion remote control switch
- 84019 Compressor
- 86116 Body Computer
- 72021 30-pin diagnosis connector

HEATER ASSEMBLY COMPONENT LAYOUT (WEBASTO)

Figure 166

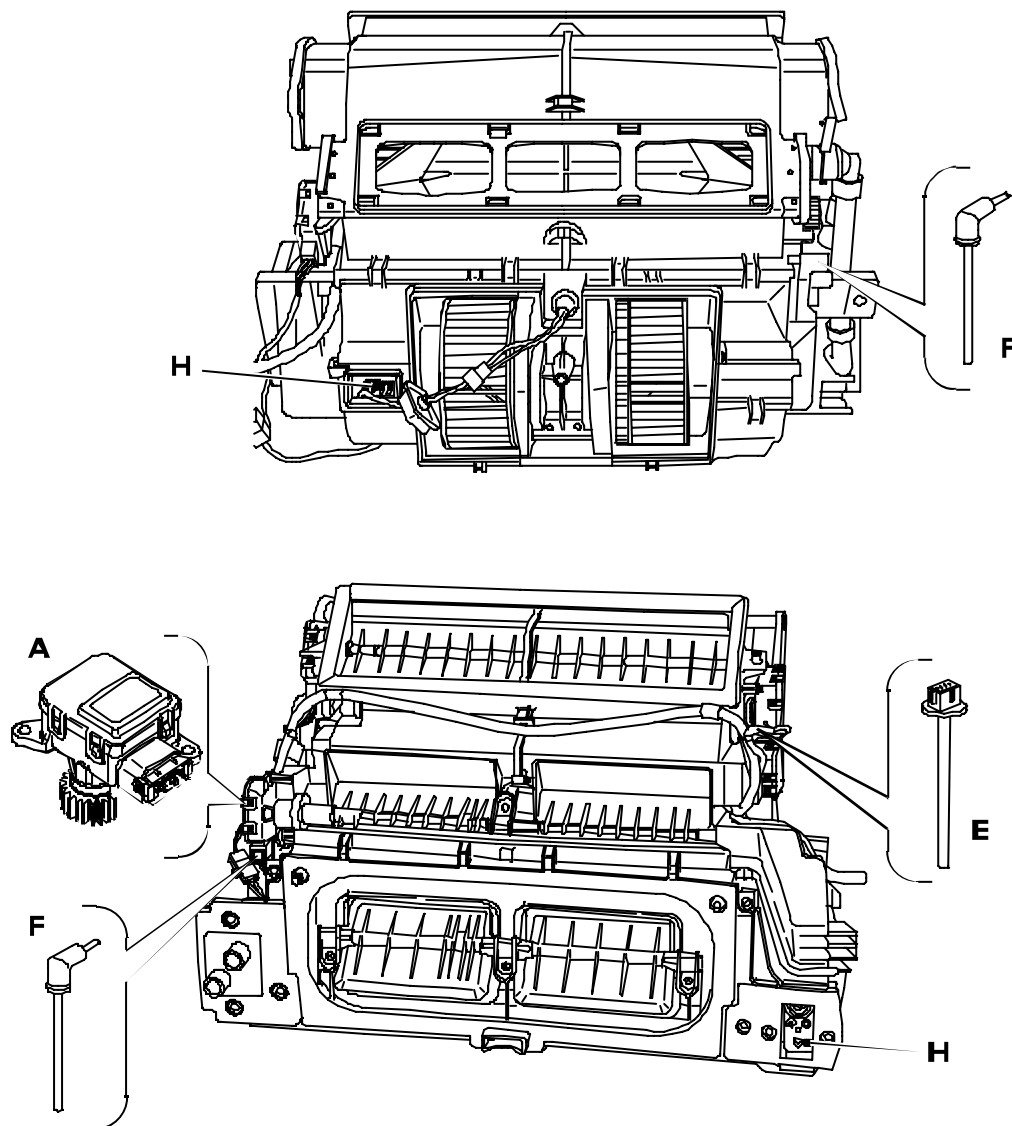


85704

A. Recirculation geared motor (Ric) - E. Evaporator temperature sensor - F. Blown air temperature sensor - G. Modulates blower control - H. Expansion valve.

Aquila Trucks Centres

Outside temperature sensor

Figure 167

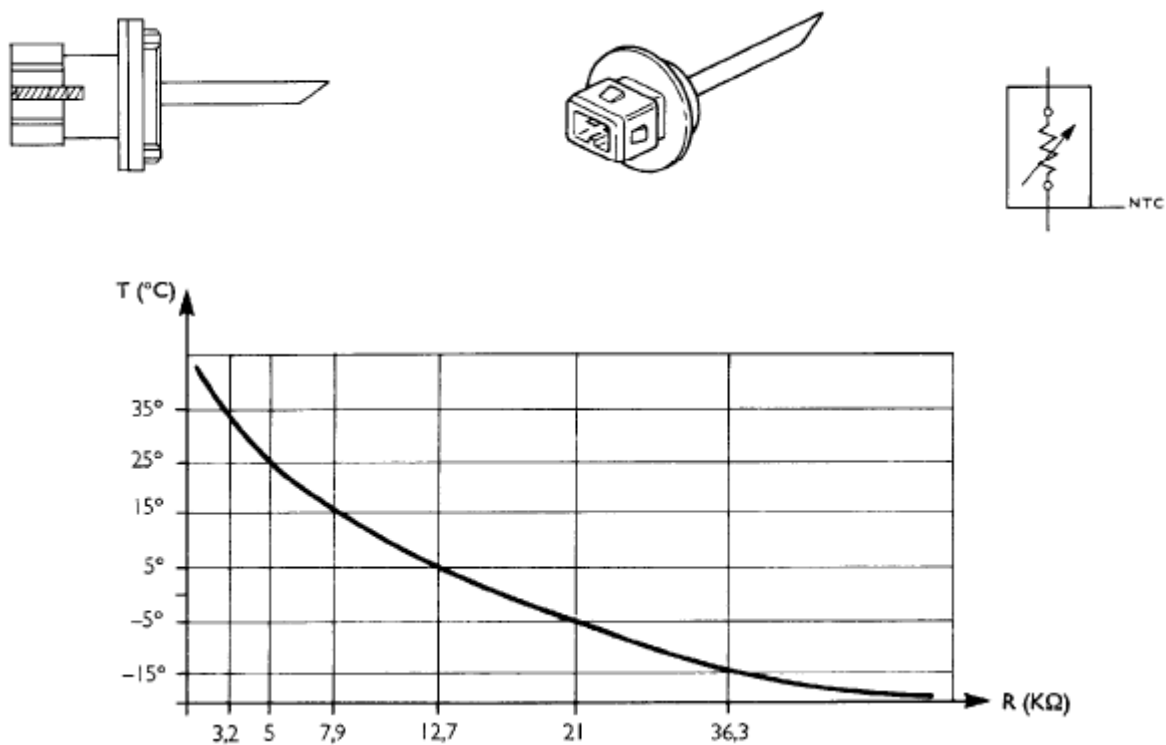


77566

Positioned on the front of the vehicle (driver's side) so as to be affected by a temperature closer to reality.

Compressor

Figure 168

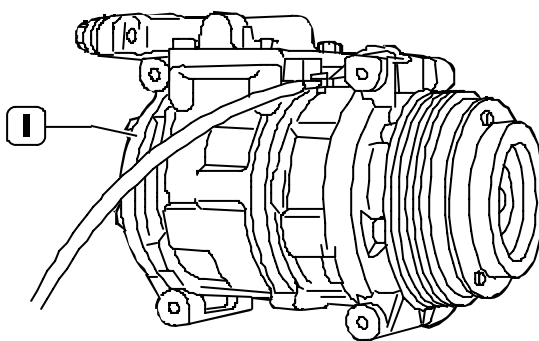


77145

The compressor is situated in the engine bay between the radiator fan and the alternator.

Aquila Trucks Centres


Condenser and safety pressure switches

Figure 169

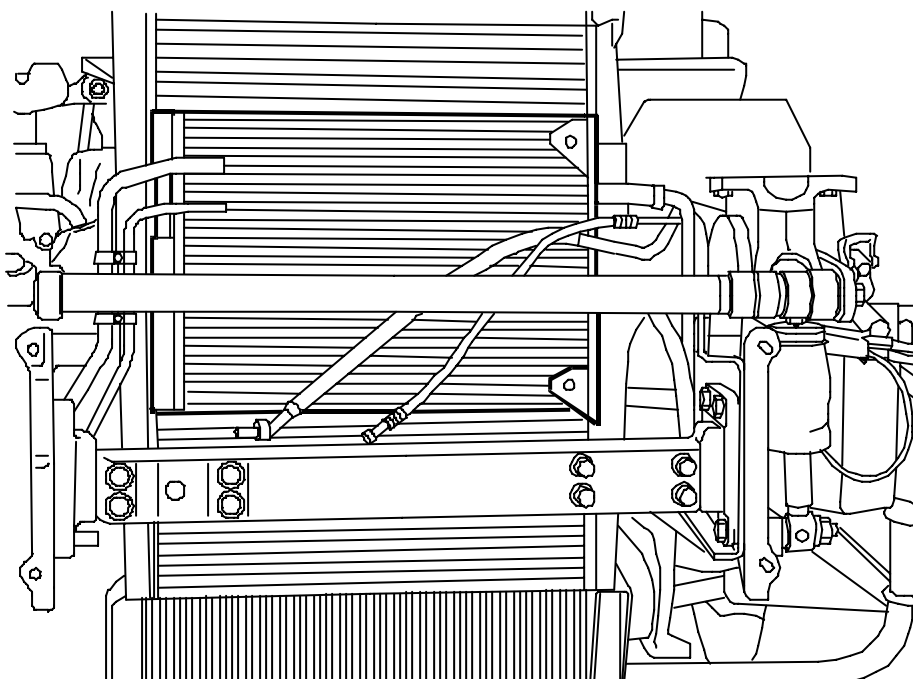


77245

Figure 170

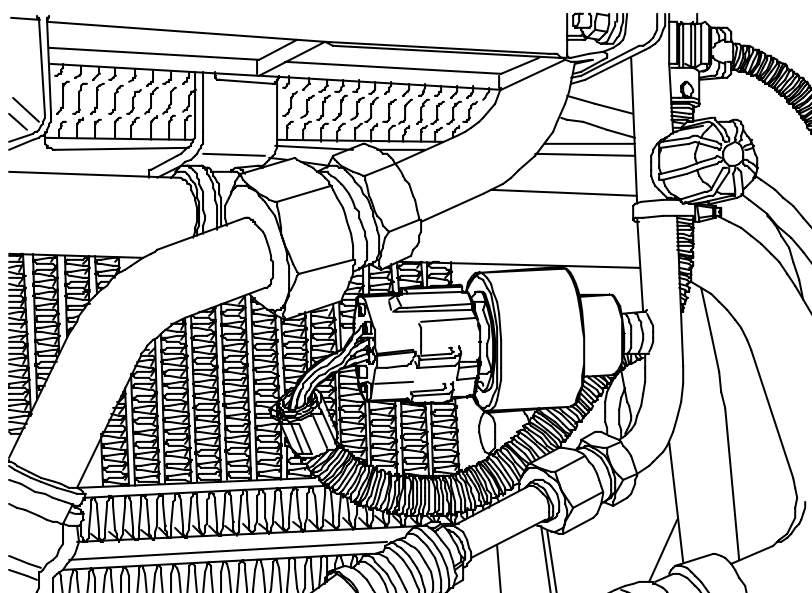

74247

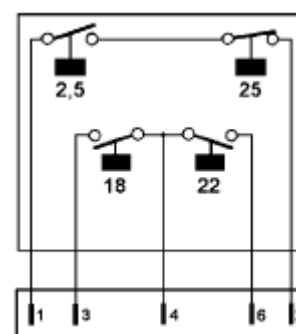

77560

The dehumidifier filter is integrated in the condenser that is found on the front of the vehicle.

The refrigeration system uses R134a fluid highlighted on the plate on its casing.

The safety pressure switch assembly with four levels is fitted on the condenser outlet pipe.


The two pressure switches, which are of the N/C and N/O type, make it possible to keep the pressure in the system constant from a minimum of 2.5 (N/O) to a maximum of 25 bars (N/C); with values outside this range the system is deactivated.

Whereas, the two pressure switches of the N/O type are used to disconnect the engine cooling fan coil when the system pressure is in the interval $18 \div 22$ bars. This is accomplished by an earth signal that the two pressure switches supply to the Body Computer control unit.

Aquila Trucks Centres


Stepper motors

Figure 171

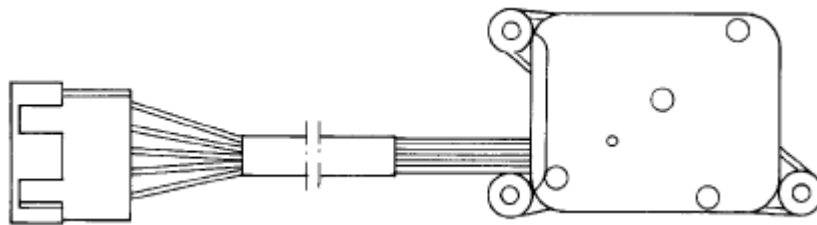


77571

Figure 172

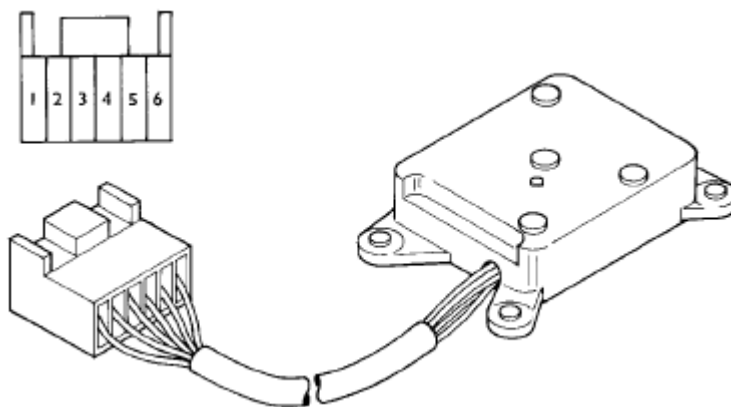

77572

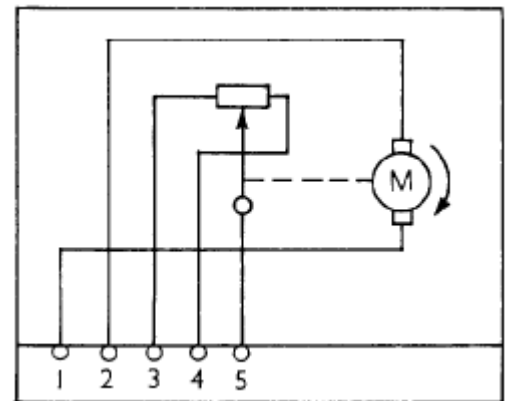

77573

Pin-out

PIN	CABLE COLOUR	SIGNAL
1	White	+/- 24V
2	Purple	+/- 24V
3	Blue	0V
4	Orange	0 ÷ 5V
5	Green	+ 5V
6	---	Free

The recirculation reduction unit is located on Heater/Conditioner unit.

It is directly activated by the electronic central unit with rated voltage (24 V) and it has 20 to 40 mA absorption.

Maximum absorption, on arriving at end of stroke, reaches 200 mA at power supply put off by the central unit.


The potentiometer it is provided with is used for return signal and, on first power on, the central unit detects and stores end of stroke values used to split operation range.

N.B. If the reduction unit is being replaced, it is NECESSARY to RESET system.

Aquila Trucks Centres

Evaporator temperature sensor

Figure 173

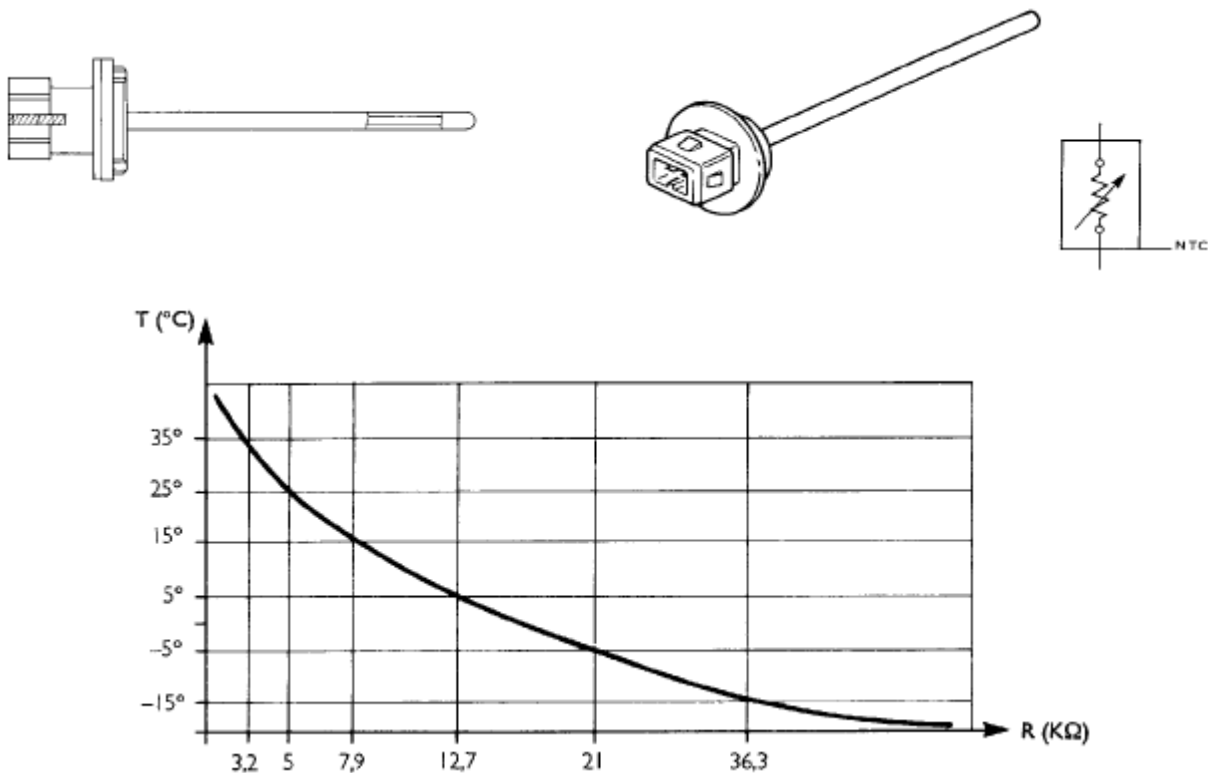

77793

The sensor inside the evaporator causes the compressor to turn on and off, allowing temperatures from 2°C (off) to 3.5°C (on) for VALEO and from 5°C (off) to 10°C (on) for WEBASTO.

The figure shows the same characteristics of the outside temperature sensor except for the connection.

Expansion valve


Figure 174

The expansion valve is the type with a block, its job is to lower the pressure of the fluid at the outlet of the condenser (and therefore of the filter) to a pre-set value so that the same fluid, circulating in the evaporator, can be drawn up by the compressor in a totally gaseous form.

It is therefore possible to state that the expansion valve fulfils three basic functions:

- S METERING
- S MODULATING
- S CHECKING

This is fitted on the Heater/Air-conditioner assembly near the blower control module.

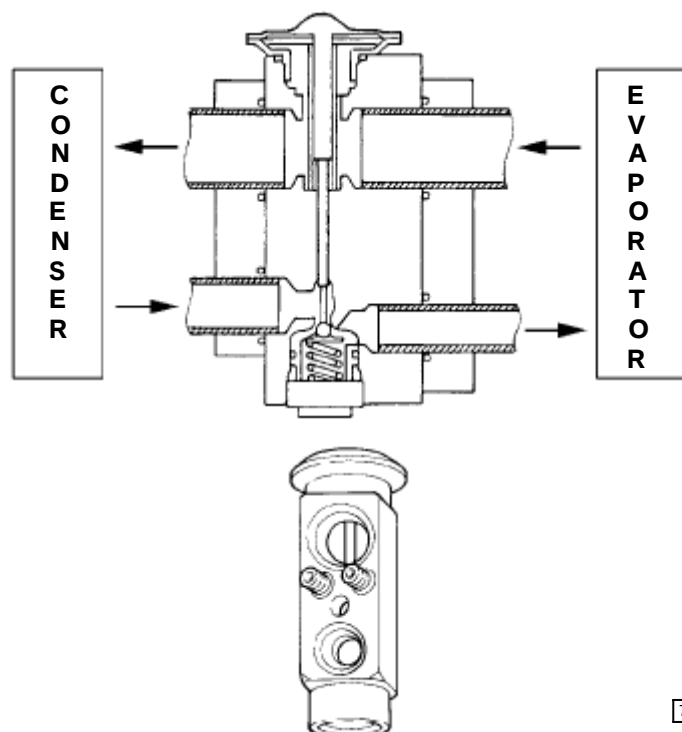

77575

Aquila Trucks Centres

ADDITIONAL AIR HEATER SYSTEM (on request)**Description**

The auxiliary heater works independently of the engine. Its function is to heat the cabin only. The heater is connected to the vehicle fuel tank and electric system, and is located in the cabin.

Operation

Switch-on and switch-off can be done by means of digital timer (4) or ambient thermostat (5). Upon switching on, the warning lamp lights up and combustion chamber (9) preheating is started. After approximately 30 seconds, pump (19) sucks the fuel from the tank and sends it to felt (5) which acts as an evaporator.

At the same time, fan (4) sucks, through pipe (20), the external air and sends it, through passage (18), to felt (5), where air is mixed with the fuel.

Heating plug (6) triggers mix burning.


During combustion, the flame licks exchanger (10). Fan (2) sucks cold air from intake (1) and sends it to exchanger (1) which heats, by yielding heat, the air sent to the cabin.

When combustion is over, photoresistor (7) cuts off heating plug (6) by means of control unit (12).

When the temperature exceeds the required value, a signal sent by ambient thermostat (15) causes reduced-power resistor (13) to come into operation: such resistor acts on the heater by reducing the revs number of engine (3) and the fuel pump rate.

Burnt gas are finally eliminated through silencer (17) and exhaust pipe (16).

Figure 175

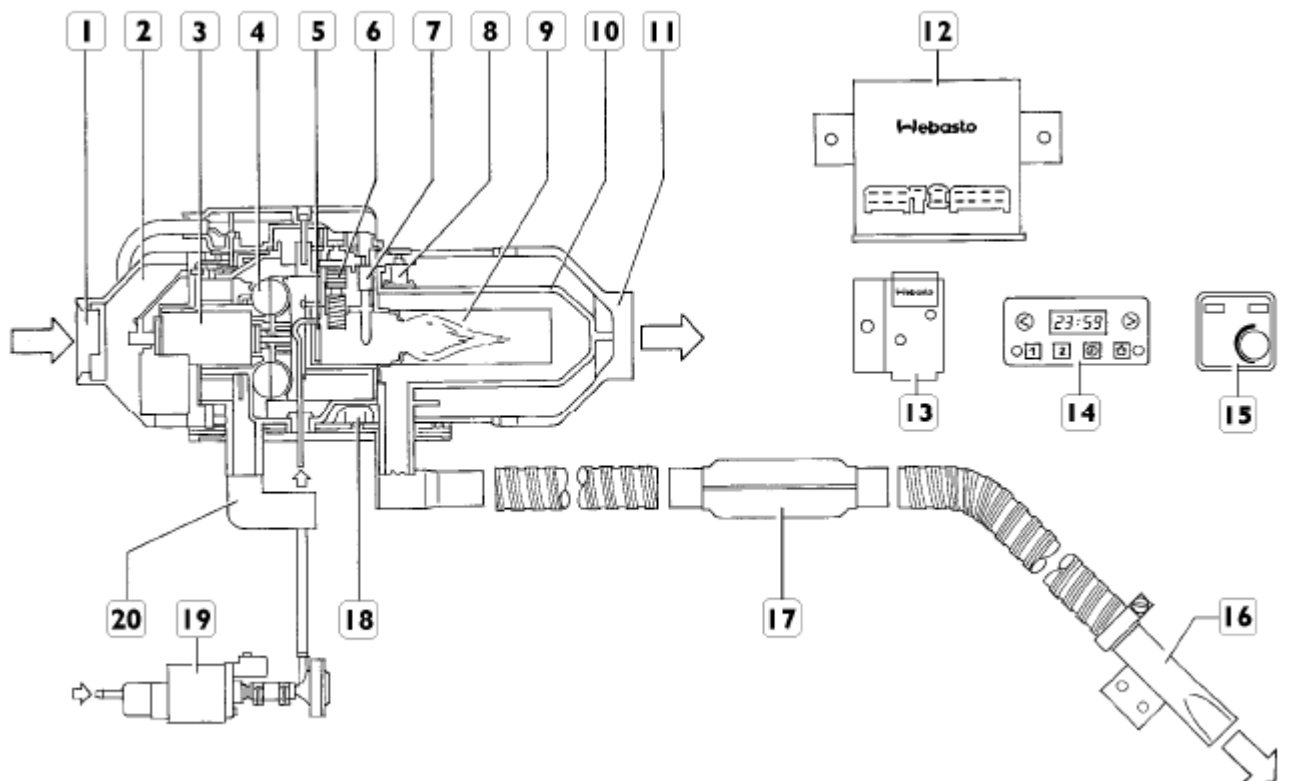

86737

PARTS MAKING UP THE AUXILIARY AIR-TYPE HEATER

Aquila Trucks Centres

FAULT DIAGNOSIS

**Troubleshooting
Introduction**

Diagnosis, i.e. locating the troubles that cause operation faults in the system, makes it possible to identify, by analyzing the fault found, the causes and, therefore, ensure prompt and safe repair so as to restore the system to full efficiency.

Below is the troubleshooting guide for faults mainly of mechanic and hydraulic nature which cannot be recognized by the electronic control unit.

As regards the fault mainly of electric and electronic nature, use the IVECO electronic diagnosis instruments "Modus - E.A.S.Y. - IT 2000", by connecting the instrument to the diagnosis takeoff and following the instructions step by step, as displayed by the instrument itself.

Visible Failure	Possible cause	Repair action
System does not work	Inefficient electric system	Check the electric system.
	Compressor pulling belt not in normal working conditions and inefficient	Check the belt: if it is too loose or stretched, adjust it or, if necessary, replace it.
	Inefficient electromagnetic clutch coil.	Check whether the coil receives current. Replace the coil, if necessary.
	Inefficient system fittings and pipes.	Check and replace, if necessary, defective parts.
	Incorrect distance (play) between the front disc and the electromagnetic clutch.	Check the distance (play). Disconnect the compressor and adjust the distance, if necessary.
	Inefficient compressor.	Drain the system as described in the relevant chapter; disconnect the compressor and replace it.
Noisy system	Low compressor oil level.	Drain and refill the system as described in the relevant chapter.
	Lack of cooling fluid in the system.	Drain and refill the system as described in the relevant chapter.
	Incorrect distance (play) between the front disc and the electromagnetic clutch.	Check the distance (play). Disconnect the compressor and adjust the distance, if necessary.
	Low amount of coolant in the system (green sight glass).	Drain and refill the system as described in the relevant chapter.
	System is not leak-proof.	Use leak-detector 99051147 to check the system and the compressor; remedy the cooling fluid leaks (if any).
	Electromagnetic clutch does not work properly.	Check the clutch electric connections. Replace the electromagnetic clutch, if necessary.
	Humidity in the system.	Drain and refill the system as described in the relevant chapter.

(Continue)

Aquila Trucks Centres

Visible Failure	Possible cause	Repair action
Unusual noise with clutch engaged	Loose compressor fastenings.	Check and tighten to torque the screws and bolts fastening the compressor
	Inefficient electromagnetic clutch.	Check whether the fault is due to mechanic or electric causes, then act accordingly.
	Low compressor oil level.	Drain and refill the system as described in the relevant chapter.
	Inefficient compressor.	Drain the system and refill the compressor.
Unusual noise with disengaged clutch or vibrations	Incorrect distance (play) between the front disc and the electromagnetic clutch pulley.	Check the distance (play). Disconnect the compressor and adjust the distance, if necessary.
	Inefficient electromagnetic clutch supply electric system.	Check the electric system.
Insufficient cooling	Humidity in the system.	Drain and refill the system as described in the relevant chapter.
	High discharge pressure and normal sucking pressure due to the presence of air in the system.	Drain the cooling fluid, replace the drying filter, deaerate the system, then refill, as described in the relevant chapter.
	High discharge pressure and low sucking pressure with presence of water or ice on the drying filter or on the pipes from the condenser outlet to the expansion valve.	Drain the cooling fluid, eliminate the throttling or replace the faulty component, deaerate the system, then refill, as described in the relevant chapter.
	Normal discharge pressure and low/high sucking pressure due to incorrect electromagnetic clutch engagement/disengagement.	Change the trinary pressure gauge.
The heater goes to block	Inefficient electric system.	Check the electric system and replace defective parts.
	Irregular electric voltage.	(Operating voltage $19.5V \pm 5\%$). Charge the battery.
	Incorrect operation of the heating plug.	Check the electric connections, the control unit and the plug, then act on faulty parts.
	Incorrect operation of the metering pump after 30 seconds' preheating.	Check the electric system, the control unit and the metering pump, then act on faulty parts.
	Incorrect operation of the burning unit.	Check the burning unit and the electric system.
	The heating plug is switched off within the safety time.	Check and replace, if necessary, the photoresistor.
	Efficient thermal limiter.	Check the thermal limiter.

(Continue)

Aquila Trucks Centres

Visible Failure	Possible cause	Repair action
The fume exhaust pipe gets hot (heater combustion)	Incorrect operation of the metering pump.	Check and replace, if necessary, the pump.
	Poor fuel pipe seal.	Verify that the fuel pipe does not leak or is not throttled.
	Incorrect fuel connection.	Check the connection.
Heater gets stucked after brief combustion	Incorrect operation of the metering pump.	Check the pump rate.
	Incorrect CO ₂ value.	Check the CO ₂ value and replace the burner, if necessary.
	Inefficient, reduced power resistor.	Inefficient electric system.
Irregular operation of the measuring valve (after 30 seconds of pre-incandescence)	Inefficient photoresistor.	Check the electric cables and verify whether short-circuit occurs.
	Incorrect operation of the metering pump.	Check and replace if necessary.
	Inefficient thermal limiter.	Check and replace if necessary.
	Inefficient safety switch.	Check current flow and replace, if necessary.
Heating plug won't ignite	Inefficient electric system.	Check for breaks in electric cables and fittings.
	Inefficient heating plug.	Check and replace, if necessary, the plug. Check the ambient thermostat.
	Inefficient control unit.	Check the control unit.
Heater does not yield enough heat	Heater not running at full capacity.	Switch set to "reduced power" position.
	Ambient thermostat not set to the desired temperature.	Adjust the ambient thermostat.
	Inefficient electric system.	Check the electric system.
Incorrect CO ₂ (Carbon dioxide) value	Incorrect assembly of fuel pump.	Verify that the fuel pump is positioned on the chassis with an inclination of 30° relative to the horizontal plane and with the power cables facing upwards.
	Inefficient silencer and fume exhaust pipe.	Clean and verify that they are not clogged. Replace them, if necessary.
	Dirty heat exchanger.	Check and clean the heat exchanger.
	Inefficient evaporating felt.	Check and replace, if necessary, the felt.
	Incorrect metering pump rate.	Check the pump rate and adjust the CO ₂ value.

(Continue)

Aquila Trucks Centres

Visible Failure	Possible cause	Repair action
Heater is switched off during operation due to a failure	Inefficient safety switch.	Check the safety switch.
	Inefficient photoresistor.	Check and replace, if necessary, the photoresistor.
	Incorrect heater operating temperature.	Check the ambient thermostat and the combustion air circuit.
	Incorrect fastening of heater to the support.	Check the fastening bolts and tighten them to torque.
	Incorrect combustion.	Check and troubleshoot.
	Incorrect operation of the metering pump.	Check and replace, if necessary, the pump.
	Inefficient combustion air circuit.	Check the combustion air circuit.

Aquila Trucks Centres

MAIN DATA

Cooling fluid				Type	R 134 A
Amount of the system cooling fluid					
VEHICLE	COMPRESSOR	R134 COULANT QUANTITY PROVIDED FOR IN SYSTEM	COULANT QUANTITY CONTAINED IN THE PIPINGS (150 cm length) THAT ARE USED FOR RECHARGING	COULANT TOTAL QUANTITY TO BE SET ON CHARGING TOOL	OIL QUANTITY TO BE ADDED INTO SYSTEM AT EACH ND 8 TYPE CHARGING
TRAKKER AT/AD	DENSO 10 PA 17	700 g	200 g for low pressure pipe, 200 g for high pressure pipe	1000 g	40 g
COMPRESSOR					NIPPONDENSO
Type					10 PA 17
Number of cylinders					10
Bore					mm 29.5
Stroke					mm 6
Revs number: max. min.					rpm rpm 9000
Coolant					R 134 a (ecology)
Type of oil					ND 8
ELECTROMAGNETIC CLUTCH					
Revs number: max. min.					rpm rpm 9000
Disengaging torque					kgm 4
Rated voltage					V 24
Minimum engagement voltage					V 7.5
Play between front disc and pulley					mm 0.4 ÷ 0.8
AUXILIARY HEATER					
Air-type heater with burner					Eberspächer
Type					D3L
Rated voltage					24V
Calorific yield: full capacity reduced capacity					KW (Kcal/h) KW (Kcal/h) 3.2 1.0
Permitted max. temperature at heater air inlet					+ 40 °C
Heating air flow rate at 0.5 mbar: full capacity reduced capacity					m ³ /h m ³ /h 160 65

Aquila Trucks Centres

GENERAL WARNINGS

Make sure that replacement parts (filter, condenser, evaporator, pipes and fittings) are supplied complete with the protection caps against dirt and moisture. These caps must be removed only when the part is ready to be installed.

Compressors – and, sometimes, exchangers and filters, too – are delivered with slight internal pressurization, to prevent moisture penetration.


Verify that gas escapes when the protection cap is opened: this will prove that the component has been stored correctly.

Make sure that the pipe connections, both to one another and to other components, are made so as to ensure perfect tightness of the system. Cooling fluid leaks do not only cause system stoppage, but also fast compressor wear.

Therefore, you should check the presence of the seal ring on the fitting male portion: moisten with oil, the same used for the system (bear in mind, in any case, that it differs according to the type of coolant), and avoid, when assembling, making cuts or burrs between the coupling surfaces, which cause gas leaks.

Follow the instructions below.

Figure 176

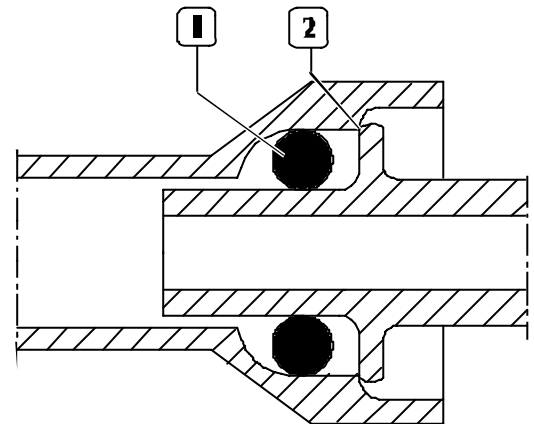

86739

Manually and carefully insert the male portion into the fitting female drill until collar (2) comes into contact with the corresponding metal seat in the female.

Such contact ensures mechanic support to the pipe: seal ring (1) pressed between the internal cylindrical portion and the drill provides hydraulic seal.

Do not use oversized-diameter or twin seal rings: they temporarily perform hydraulic seal, yet prevent the contact between the metal seats, causing, after a short period, fitting loosening and gas leaks.

NOTE When disconnecting the system pipes, plug the pipes and the coolant passages (if any), so as to avoid possible moisture or dirt penetration inside the system. This can badly affect correct operation of the system.

TIGHTENING TORQUES


DESCRIPTION	TORQUE	
	Nm	kgm
GAS PIPES FITTINGS		
5/8" - 18 UNF	15.9	1.6
3/4" - 18 UNF	15.9	1.6
1" - 14 UNF	29.8	3

Aquila Trucks Centres

REPAIR OPERATIONS

**553210 HEATER
Removal**

Figure 177

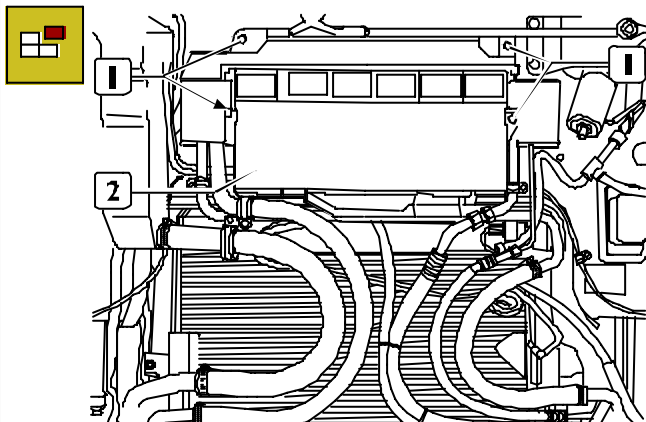


For disconnecting heater assembly, it is needed to:

77122

- For vehicles with air conditioner: position the key of ignition block to "Key On" position and switch air temperature to "LOW".
- For vehicles without air conditioner: from the inside of the cab, turn the knob for adjusting cab heating temperature so as to completely open engine coolant tap.
- partially drain engine coolant.
- detach the fascia covering (552211).
- Lift the radiator cowl.
- Unscrew the fixing screws (1) and separate the pollen filter cover (2) to access the underlying fasteners.

Figure 178

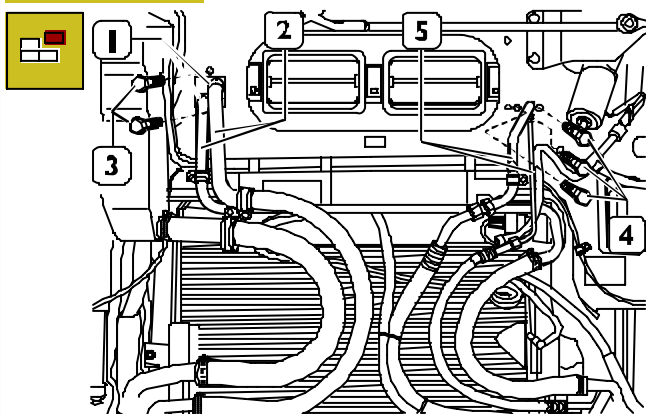

77123


If the cab is provided with air conditioner, blow gas off cab air conditioning system, as described in relating chapter.

NOTE This operation must be carried out only by authorized, qualified skilled personnel.

NOTE Seal air conditioning system pipings to prevent moisture or impurities from entering the system.

- Unscrew screws (4) securing low and high pressure piping (5).
- Remove screws (3) near water pipings.
- Screws (3) near the water pipes.
- Apply special plugs on the high and low pressure pipes and on the expansion valve.


Figure 179

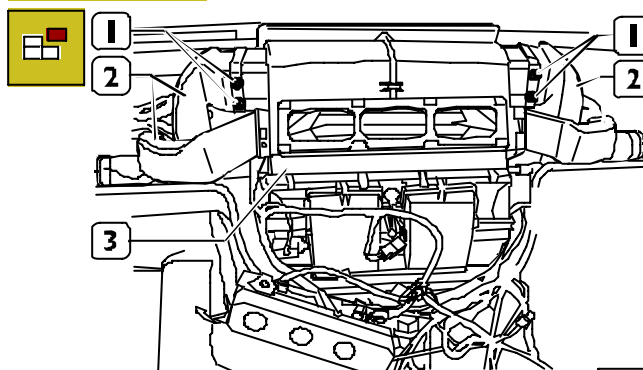

77124

- Working from inside the cab, unscrew the screws (1) fixing the air ducts (2) to the heater (3).
- Disconnect the air ducts (2) from the heater (3).

Figure 180

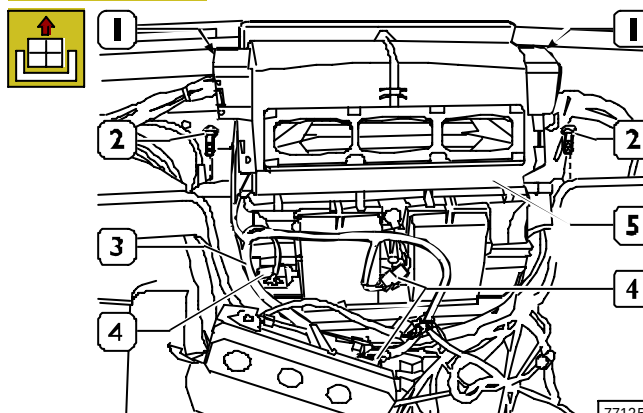

77125

- Unscrew the screws (2) fixing the heater (5) to the cross member on the cab.
- Detach the clamps (1) of the wiring bundles.
- Disconnect the connectors (4) and detach the relative electric wiring (3).
- Detach the heater (5) from the vehicle.

**Refitting**


For reconnection, invert operations described for disconnection, observing following warnings:

- tighten nuts or screws at prescribed torque;
- the engine coolant is at the right level;
- the system and components involved in the described procedure work properly.
- if present, fill air conditioner system as described in relating chapter

Aquila Trucks Centres

507570 ADDITIONAL AIR HEATER SYSTEM**Removal**


Figure 181

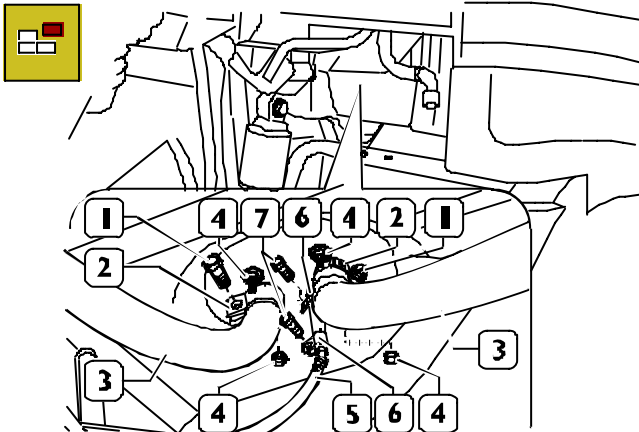

77126

- Lift the radiator cowling.
- Tilt up the cab.
- Unscrew the screws (7) of the clamps (6) and disconnect the fuel pipe (5).
- Unscrew the screws (1).
- Disconnect the clamps (2) and detach the inlet and outlet pipes (3).
- Unscrew the nuts (4) fixing the additional heater to the floor of the cab.
- Lower the cab.
- Close the radiator cowling.
- Operate from inside the cab, advance passenger seat and tilt back rest.

Figure 182

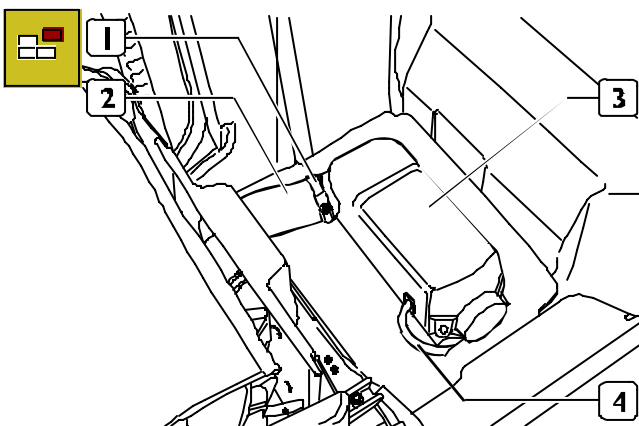

99140

- Disconnect the electrical connection (4).
- Loosen clamp (1) and release piping (2) from heater (3).
- Disconnect additional heater (3) from the cab.


Refitting

Refit by carrying out the procedures described for removal in reverse order.

NOTE To perform interventions on below described components, it could be necessary, owing to difficult access to components, to take off the coatings of dashboard (Op. 552211) and heater (Op. 553210).

553153 AIR RECIRCULATION DOOR CONTROL MOTOR**Removal**

Figure 183

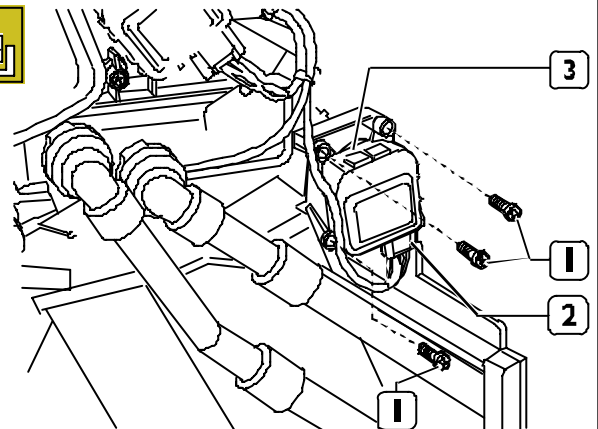

77131

- Take off object holder box, unscrew securing screws, remove the Body Control and put aside as in Figure 90.
- Disconnect the power supply connector (2).
- Unscrew the fixing screws (1).
- Detach the air recirculation door control motor (3).


Refitting

Refit by carrying out the procedures described for removal in reverse order.

Aquila Trucks Centres

553212 ELECTRIC FAN**Removal**


Figure 184

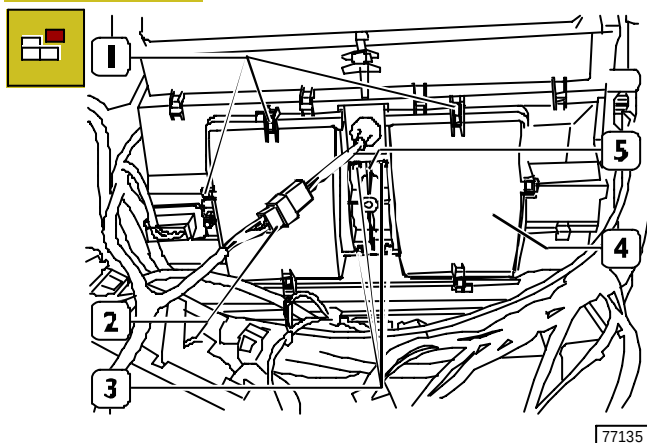

Perform the removal procedure:

- Central instrument panel (OP. 553710).
- Disconnect the connector (2).
- Take off the fixing clips (1), unscrew the screws (3) and detach the covers (4) and (5).

Figure 185

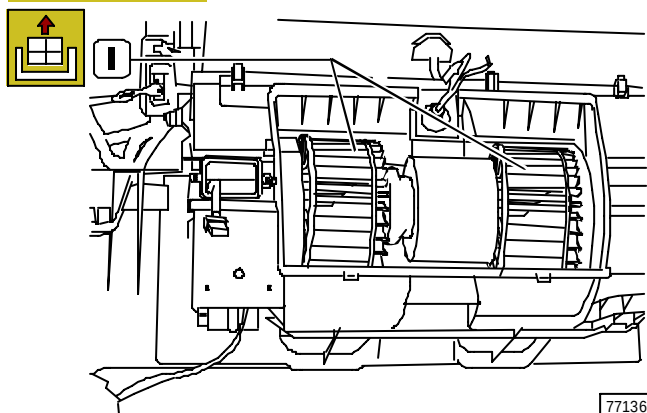


- Detach the electric fan (1) from its seat.

Refitting

Refit by carrying out the procedures described for removal in reverse order.

553215 HEATER RADIATOR**Removal**


Figure 186

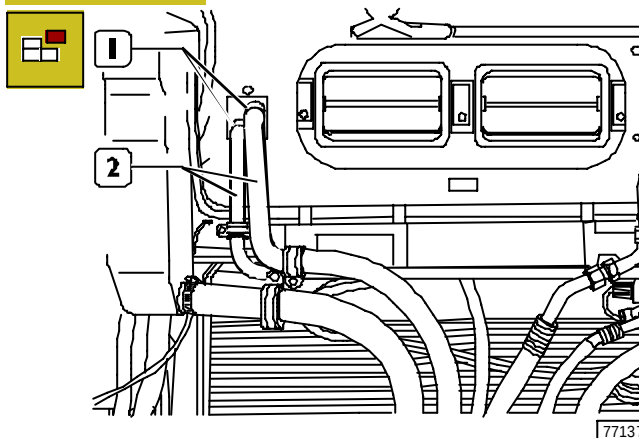

Before proceeding to detach the heater radiator, it is necessary to:

- For vehicles with air conditioner:
position the key of ignition block to "Key On" position and switch air temperature to "LOW".
- For vehicles without air conditioner:
from the inside of the cab, turn the knob for adjusting cab heating temperature so as to completely open engine coolant tap.
- Partially drain engine coolant.
- Detach the pollen filter and cover (Figure 195).
- Detach Body Control as indicated on Figure 90.
- Detach the bottom covering of the fascia on the passenger side.
- Detach two passenger air openings.
- Detach the air delivery pipe from the central body to the rh door opening.
- Disconnect the retaining clamps (1) and separate the water pipes (2).


Figure 187

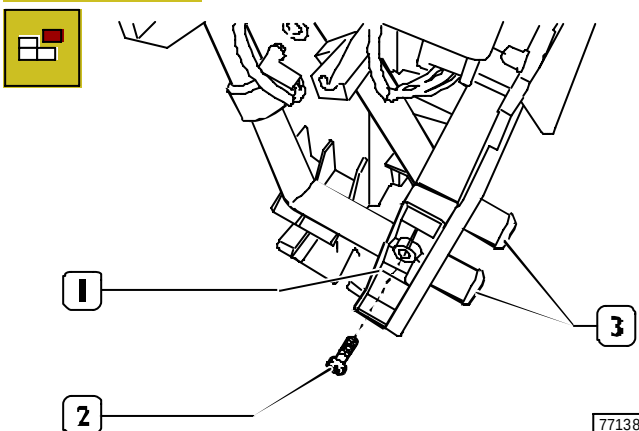

- Operating through the control unit compartment at the bottom of the fascia covering, unscrew the screw (2) fixing the clevis (1) and free the heater water pipes (3).

Aquila Trucks Centres

Figure 188

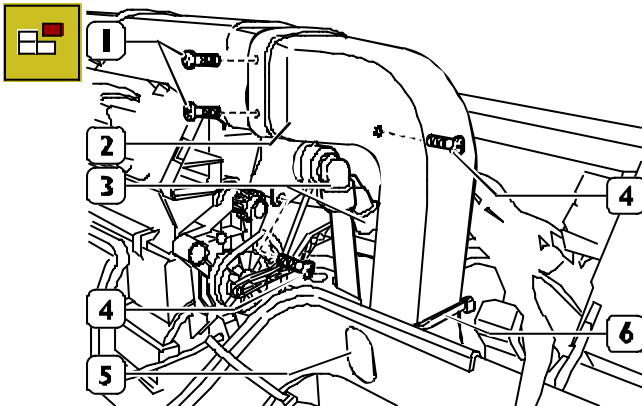

77139

- Detach the connectors (1), (2) indicated to facilitate the outflow from the heater radiator.
- Take off the clips and detach the pipe (3).
- Unscrew the screws (4) fixing the radiator to the heater.


Figure 189



77140

- Detach the connectors (1), (2) indicated to facilitate the outflow from the heater radiator.

Figure 190

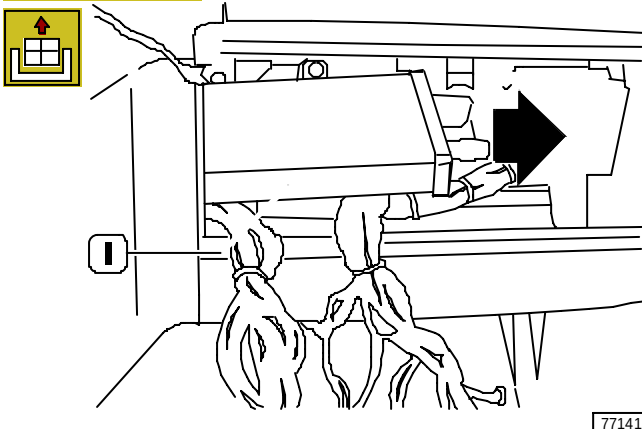

77141

- Extract the heater radiator (1) with due caution from the glove compartment bay.



Refitting


For reconnection, invert operations described for disconnection, observing following warnings:

- tighten nuts or screws at prescribed torque;
- the engine coolant is at the right level;
- the system and components involved in the described procedure work properly.

553216 TAP

Removal

Figure 191

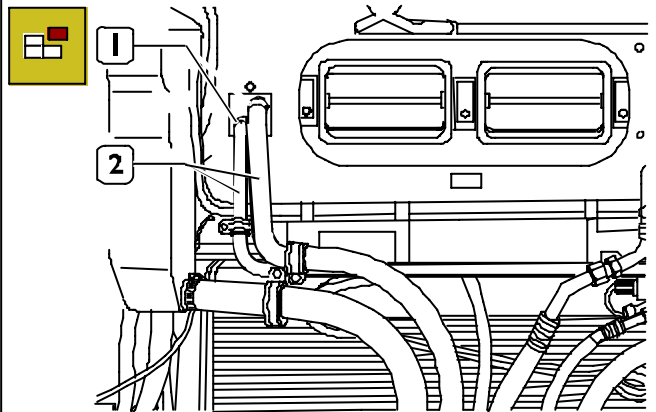


77137

Before proceeding to detach the heater radiator, it is necessary to:

- For vehicles with air conditioner: position the key of ignition block to "Key On" position and switch air temperature to "LOW".
- For vehicles without air conditioner: from the inside of the cab, turn the knob for adjusting cab heating temperature so as to completely open engine coolant tap.
- Partially drain engine coolant.
- Detach the pollen filter and cover (Figure 195).
- Detach Body Control as indicated on Figure 90.
- Detach the bottom covering of the fascia on the passenger side.
- Detach two passenger air openings.
- Detach the air delivery pipe from the central body to the rh door opening.
- Disconnect the retaining clamps (1) and separate the water pipes (2).


Aquila Trucks Centres

Figure 192

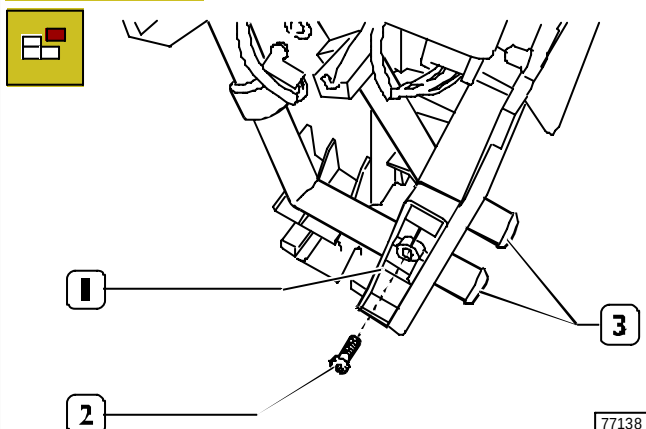


- Operating through the control unit compartment at the bottom of the fascia covering, unscrew the screw (2) fixing the clevis (1) and free the heater water pipes (3).

Figure 193

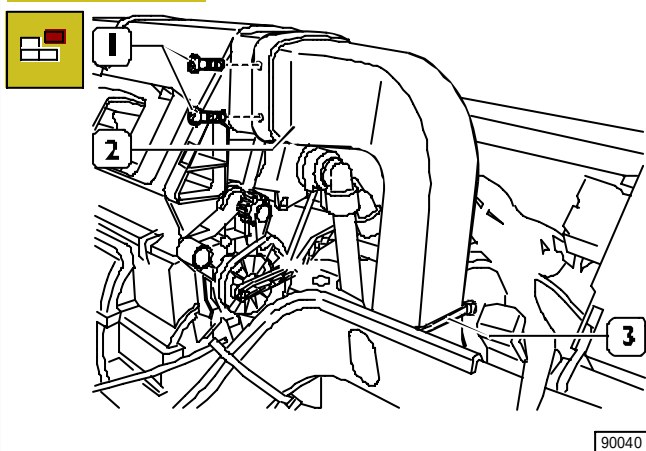

- Unscrew screws (1), take off pressure button, and cut check strap (3) and take off the piping for air duct (2).

Figure 194

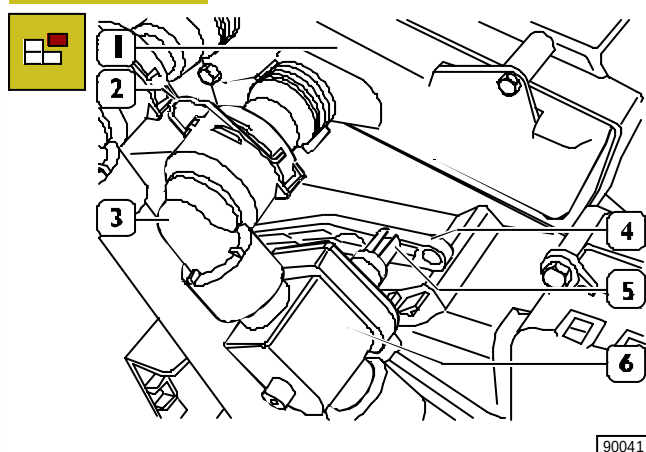

- Lift fastener (2) and disconnect piping (3) from radiator (1). By special pliers, press fins (5) and disconnect tie rod (4). Remove screws and take tap (6) off the heater.


**Refitting**

Refit by carrying out the procedures described for removal in reverse order.

- tighten nuts or screws at prescribed torque;
- the engine coolant is at the right level;
- the system and components involved in the described procedure work properly.

553261 POLLEN FILTER**Removal**

Figure 195

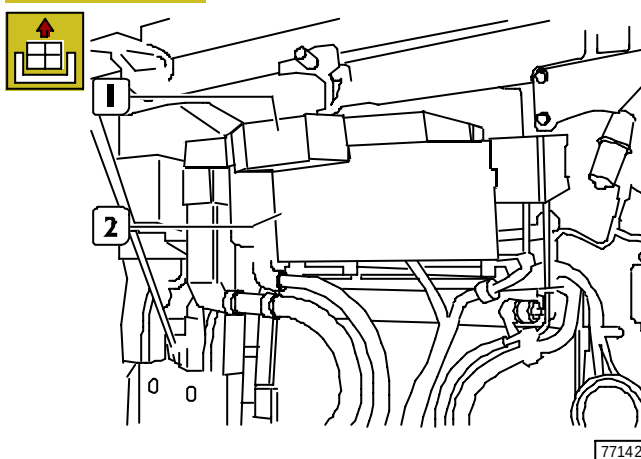


- Lift the cowling, lift cover (1) and remove anti-pollen filter (2).

Refitting

Refit by carrying out the procedures described for removal in reverse order.

553239 AIR-CONDITIONER COMPRESSOR**Removal**

Figure 196

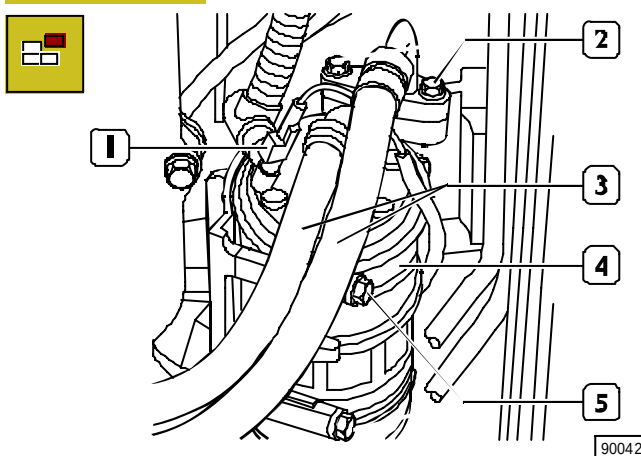

- Discharge the air-conditioning system by following the procedure described under the relevant heading.
- Working from under the vehicle, unscrew the fixing screws (2) and remove the inlet and outlet pipes (3) from the compressor.

Aquila Trucks Centres

NOTE Seal air conditioning system pipings to prevent moisture or impurities from entering the system.

- Loosen the automatic tightener and take off the compressor belt.
- Disconnect the power supply connector (1, Figure 196).
- Unscrew the fixing screws (5, Figure 196).
- Take compressor (4, Figure 196) off the engine.

Refitting

Replace the sealing gasket.



Tighten the fastening screws and the adapters to the specified torque.




Fill air conditioner system as described in relating chapter.

553232 AIR-CONDITIONER CONDENSER

Removal

Figure 197

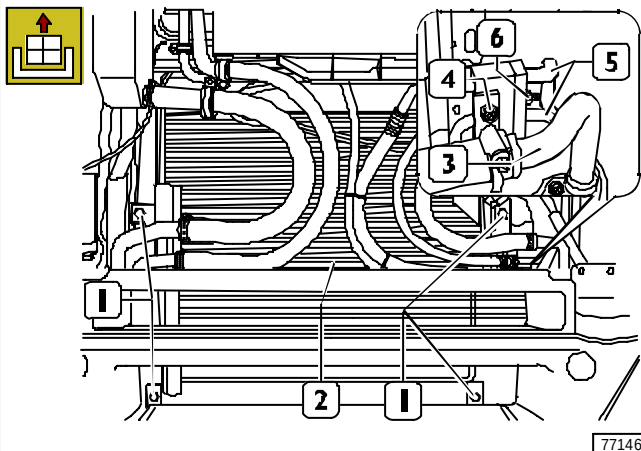

- Lift the cowl and bleed air-conditioning system observing the procedure that is described in relating chapter.
- Unscrew the nut (6) and detach the condenser pipes (5).
- Unscrew the nut (4) fixing the pipe bracket (3).
- Unscrew the fixing screws (1) and remove the condenser (2) from the vehicle.

Refitting

Replace the sealing gasket.



Tighten the fastening screws and the adapters to the specified torque.




Fill air conditioner system as described in relating chapter.

553242 OUTSIDE AIR TEMPERATURE SENSOR


Removal

Figure 198

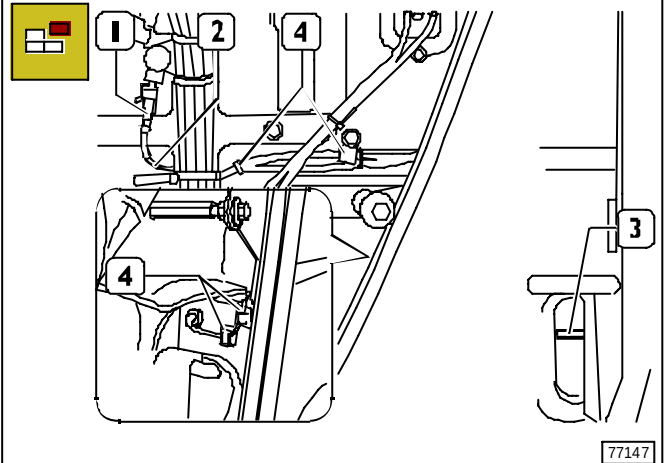

- Lift the radiator cowl and disconnect the connector (1) and free the wiring (2) of the sensor (3) from the retaining clamps (4).

Figure 199

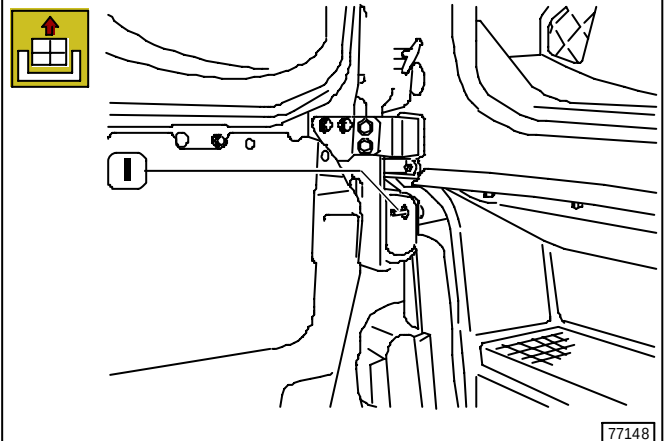

- Detach the outside air temperature sensor (1) from its seat.


Refitting

Refit by carrying out the procedures described for removal in reverse order.

Aquila Trucks Centres


543921 REPLACING THE ELECTROMAGNETIC CLUTCH

Figure 200

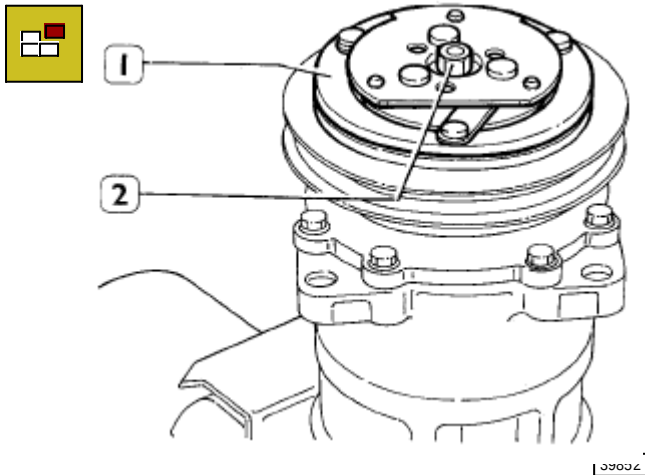


Stop front disc (1) rotation, then unscrew retaining nut (2) and remove the spacer below.

Figure 201

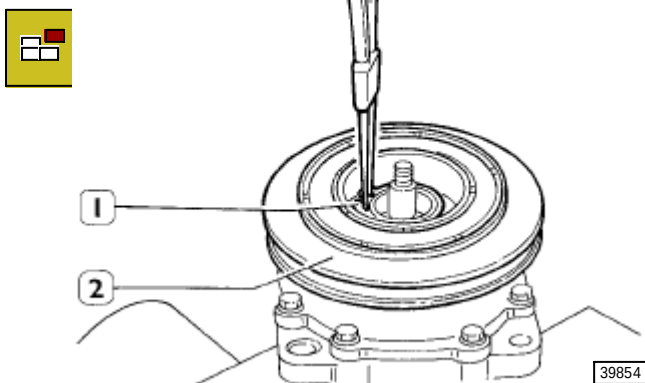


Use special rounded-tip pliers to remove pulley (2) retaining snap ring (1).

Figure 202

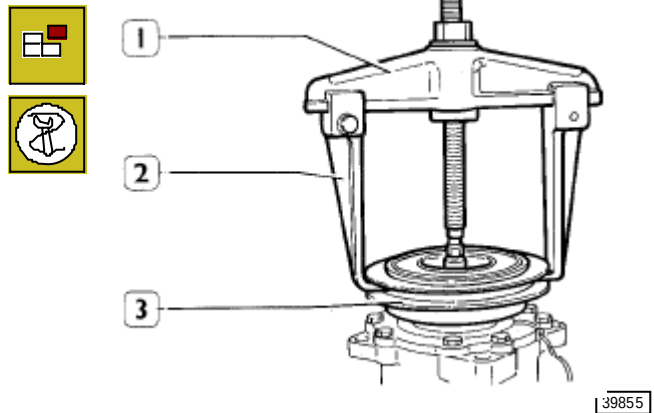


Use extractor 99341001 (1), equipped with brackets 99341009 (2), to take out pulley (3).
Remove the plate fastening screw with the envelope from the compressor.

Figure 203

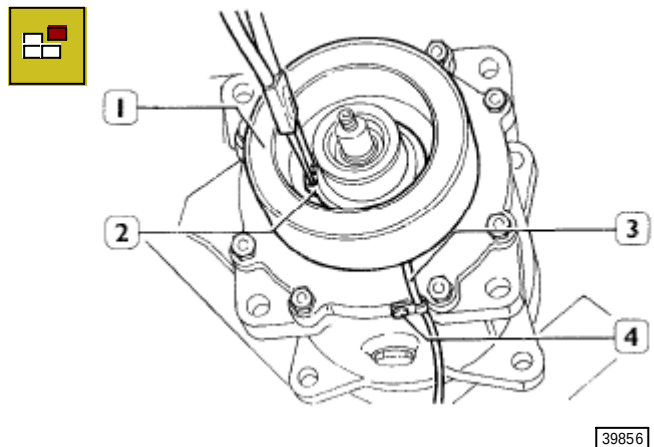

Loosen screw (4), thus releasing magnetic coil (1) supply electric cable (3).
Use special rounded-tip pliers to remove retaining snap ring (2) and take off magnetic coil (1).


Figure 204

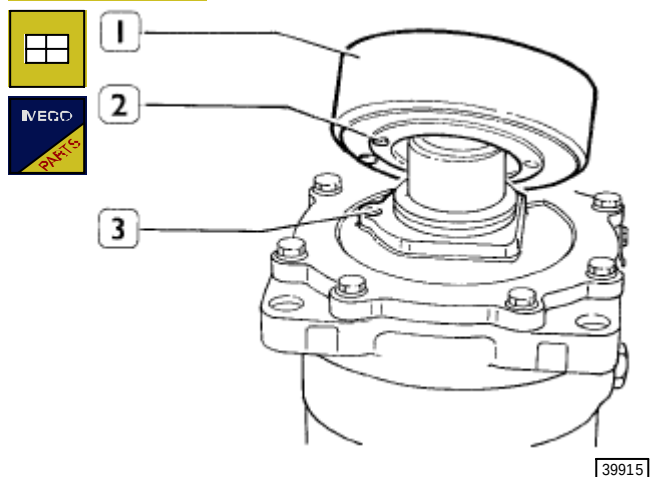

Place the new magnetic coil (1) in position, so that centering pin (2) engages into the respective hole (3).

Aquila Trucks Centres


Figure 205

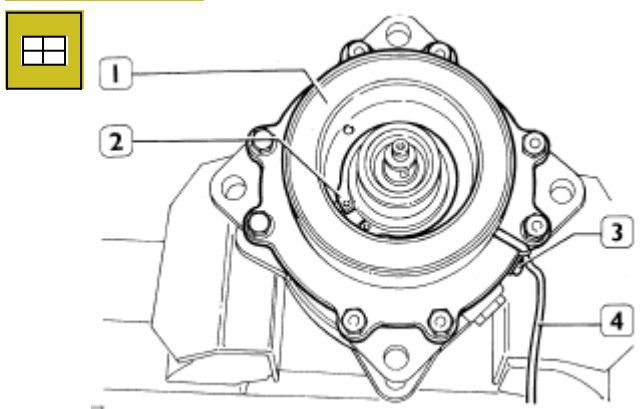

39916

Fit retaining snap ring (2). Tighten screw (3), then secure coil (1) supply electric cable (4) to the compressor body.


Figure 206

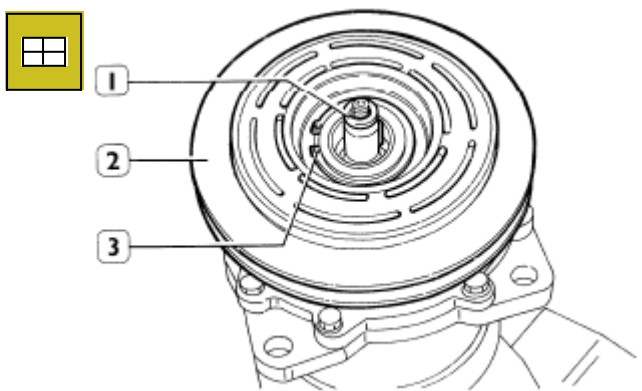

39917

Mount pulley (2), then retaining snap ring (3) and adjusting shim (1).


Figure 207

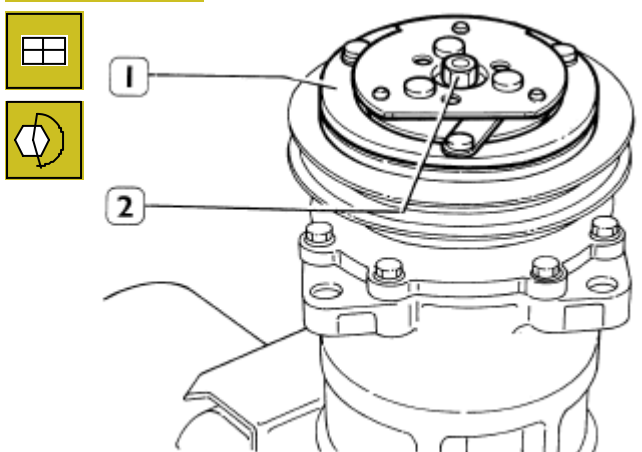

39852


Mount front disc (1), stop rotation, then tighten retaining nut (2) to a torque of $35 \div 40$ Nm ($3,5 \div 4$ Kgm).

Figure 208

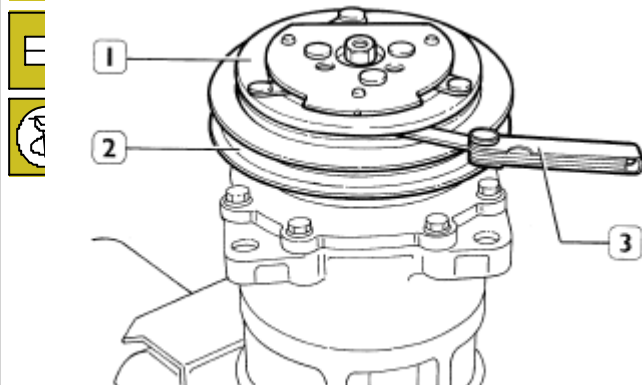

Check, by means of a thickness gauge (3), that the play between front disc (1) and pulley (2) is $0.4 \div 0.8$ mm.

Figure 209

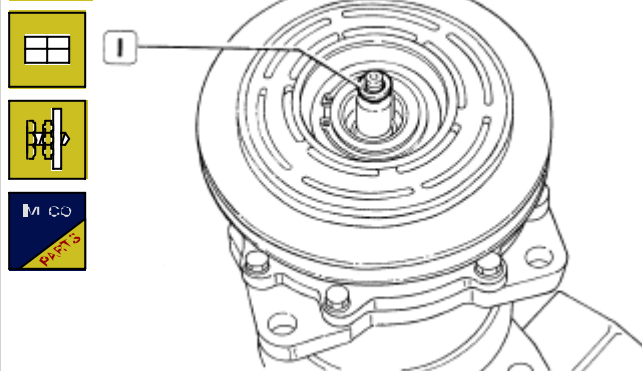

39920

If the clearance between the front disc and the pulley does not correspond to the prescribed value, remove the front disc and replace the adjusting ring (1) with one having the suitable thickness.

Aquila Trucks Centres

PROCEDURE FOR DRAINING AND RECHARGING AIR CONDITIONING SYSTEMS WITH RECHARGING STATION 99305146 AND RECOVERY OF R134A COOLANT

This station has been made to be used on all air-conditioning/heating systems for motor vehicles using R134A gas.

By connecting the station to a refrigerating system the gas it contains can be recovered, cleaned and made ready to be reloaded into the system or be transferred to an external container. In addition, it is possible to see the amount of oil taken from the system, restore it and "empty" the system.

To be operative, the station needs to absorb approximately 3 kg of refrigerant.


For prompt use it is advised to have at least 2 kg of refrigerant in the filler cylinders and to keep the station as level as possible.

NOTE This procedure does not describe the phases of loading and unloading refrigerant to and from external and internal containers or maintenance. Therefore, please refer to the operating and maintenance manual of the appliance.

The station is composed of:

- 1 control panel;
- 2 container to restore any oil recovered when unloading;
- 3 flexible hoses;
- 4 container to collect any oil recovered from the system;
- 5 filler cylinder with graduated scale revolving.

Figure 210

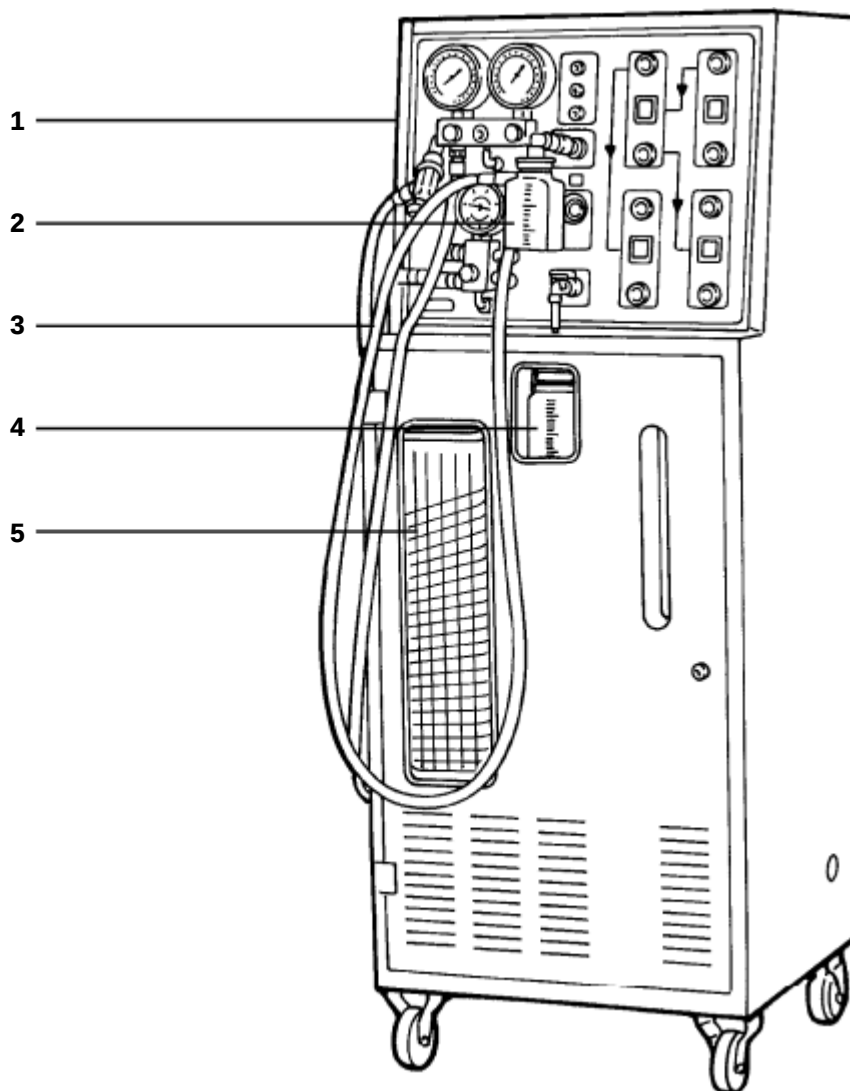

50631

Aquila Trucks Centres

SAFETY STANDARDS



This station is exclusively for professionally trained operators who must be familiar with refrigerating systems, refrigerant gases and the damage pressurized equipment can cause, therefore:

- always wear gloves and goggles when working with refrigerant gases. Contact of refrigerant liquid with the eyes can cause blindness;
- avoid all contact with skin (low boiling point -30°C can cause frostbite);
- never inhale the vapours of refrigerant gases;
- before connecting the station with a system or external container, check that all the valves are closed;
- before disconnecting the station, check that the cycle is over and all the valves are closed. This will prevent dispersing refrigerant gas into the atmosphere;
- never expose the unit or operate it in acidic or wet environments or close to open containers of inflammable substances;
- the unit must operate in places with good ventilation;
- never alter the settings of the safety valves and control systems;
- never use bottles or other storage containers that are not approved and are not fitted with safety valves;
- never load any container over 80% of its maximum capacity;
- never leave the unit powered if it is not to be used immediately. Cut off the mains power supply when it is not planned to use the equipment.

The station is equipped with special fittings to avoid contamination with systems using R12. Do not attempt to adapt this unit for use with R12.

Aquila Trucks Centres

CONTROL FASCIA

Figure 211


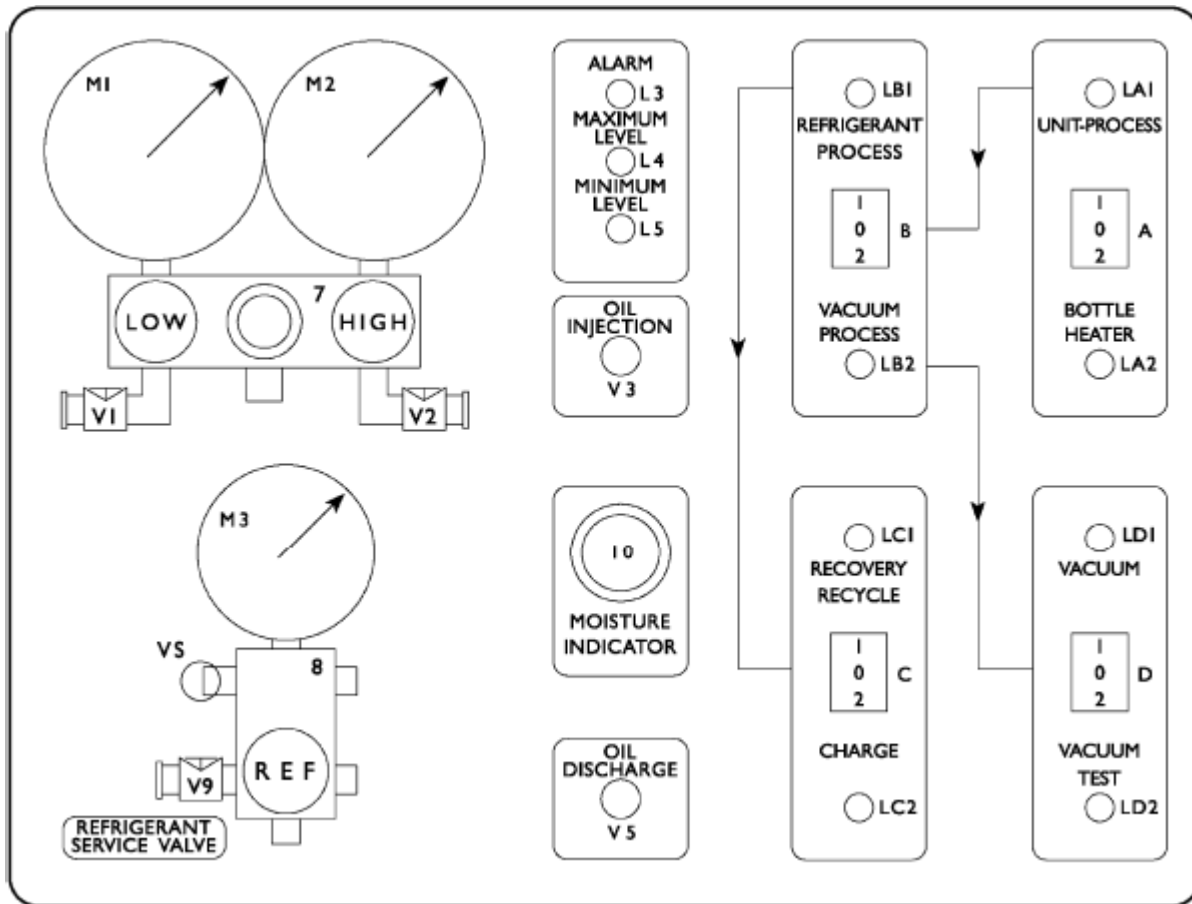


Figure 212

50634

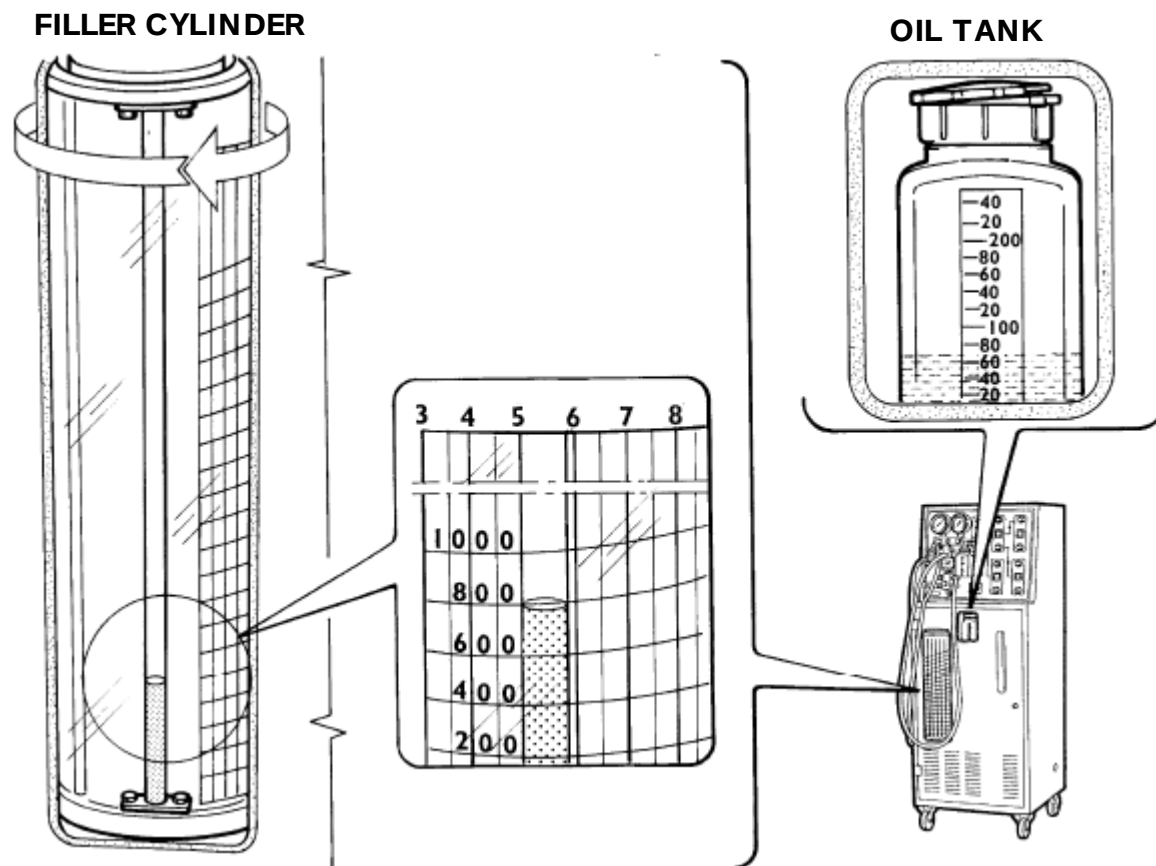

50632

Aquila Trucks Centres

Control fascia diagram legend


M1	Low pressure gauge
M2	High pressure gauge
M3	Filler cylinder pressure gauge
LOW	Low-pressure valve
HIGH	High-pressure valve
REF	Refrigerant filler and drain valve
V1	Valve on low-pressure pipe
V2	Valve on high-pressure pipe
V3	Oil injection valve for A/C system
V5	Oil drainage valve
V9	A/C system washing refrigerant service valve
10	Moisture indicator
VS	Safety and drainage valve
L3	Alarm warning light
L4	Maximum level warning light
L5	Minimum level warning light
A	Unit process / bottle heater switch
LA1	Unit process indicator light
LA2	Bottle heater indicator light
B	Refrigerant process / vacuum process switch
LB1	Refrigerant process indicator light
LB2	Vacuum process indicator light
C	Recovery recycle cycle / Filling switch
LC1	Recovery recycle cycle indicator light
LC2	Filling indicator light
D	Vacuum / vacuum test switch
LD1	Vacuum indicator light
LD2	Vacuum test indicator light

Filler cylinder legend

- 1 Pressure values in bar (vertical lines, revolving top cylinder).
- 2 Weight of load in grams (oblique lines, revolving top cylinder) 50 g division between lines.
- 3 Tank level viewer (internal cylinder).

Aquila Trucks Centres

OPERATION FLOW CHART

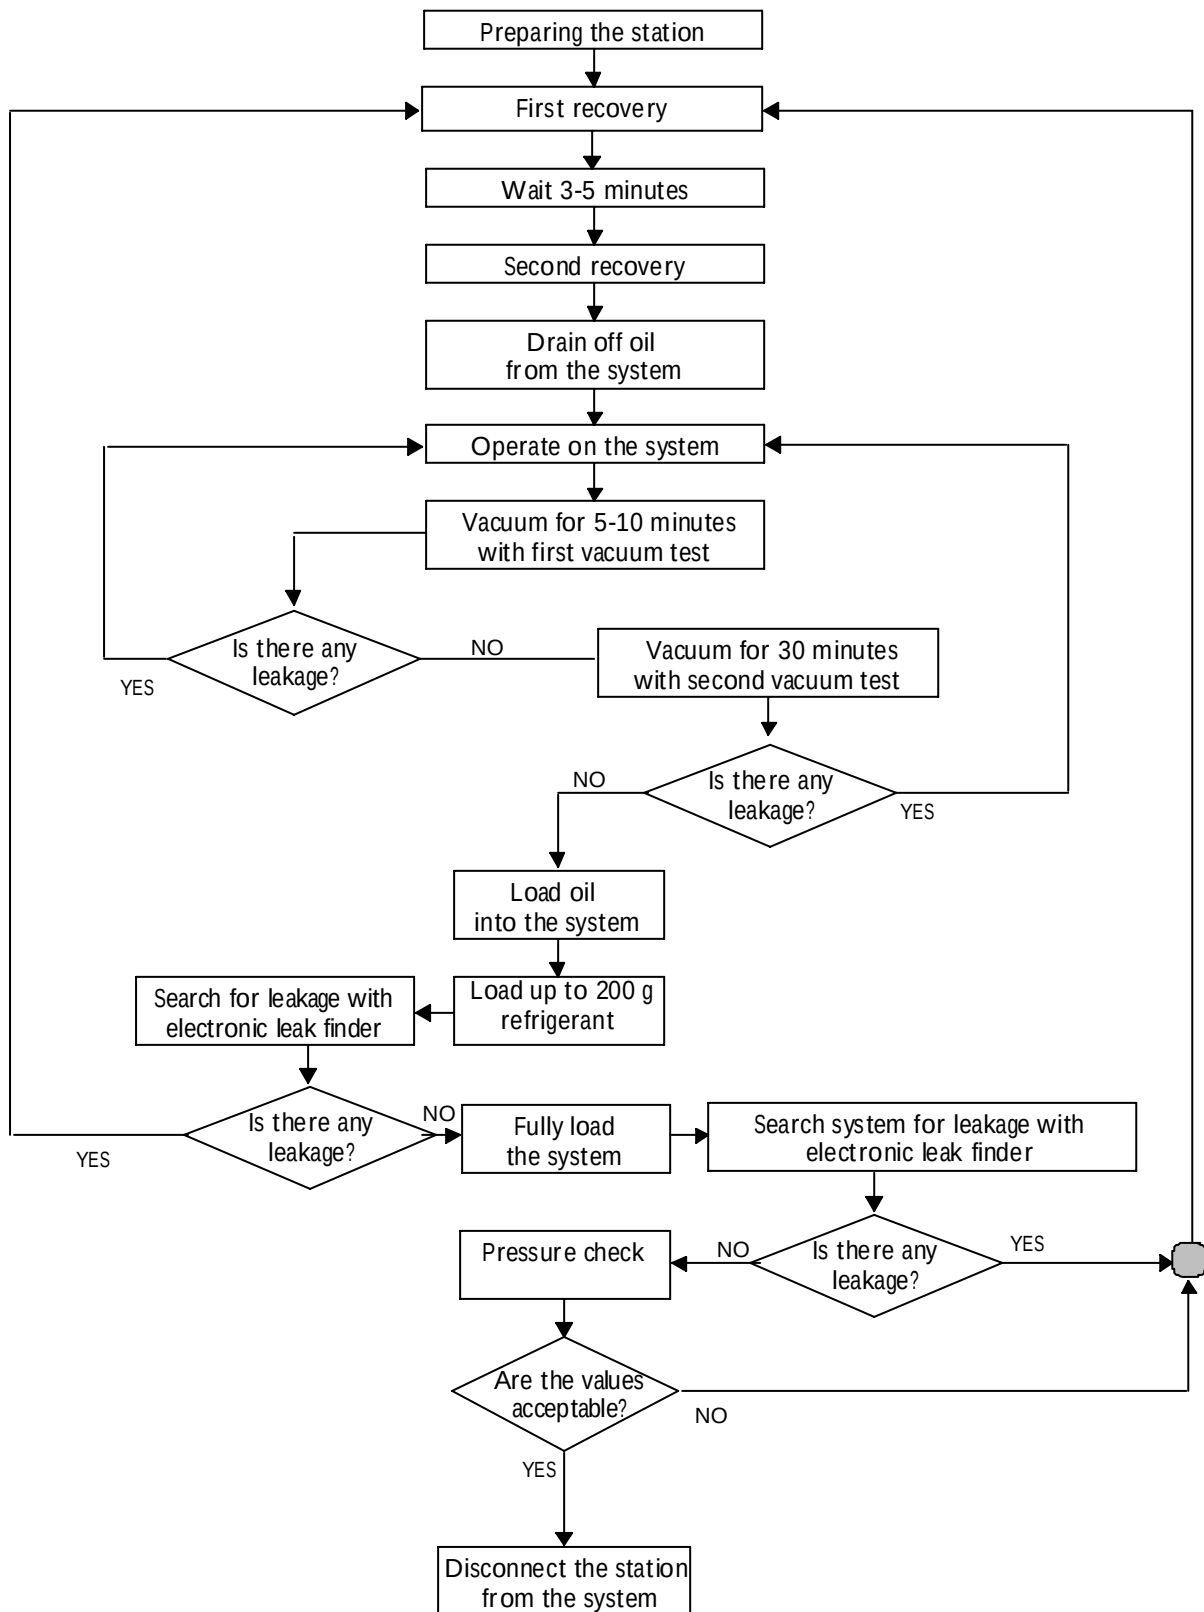

Aquila Trucks Centres

RECOVERING REFRIGERANT FROM THE VEHICLE SYSTEM

Before starting to disconnect the pipes from the air-conditioner, check whether it is possible to do the repairs without discharging the gas.


If this is not possible, the following operations must be carried out:

- connect the pipe marked HIGH under the pressure gauge to the evaporator inlet (the inlet is the one on the

pipe with a smaller diameter (H) connecting the drier filter with the evaporator);

- connect the pipe marked LOW under the pressure gauge to the evaporator outlet (the outlet is the one on the pipe with a larger diameter (L) connecting the evaporator with the drier);
- open the valves V1 and V2;
- open the LOW and HIGH cocks;

Figure 213

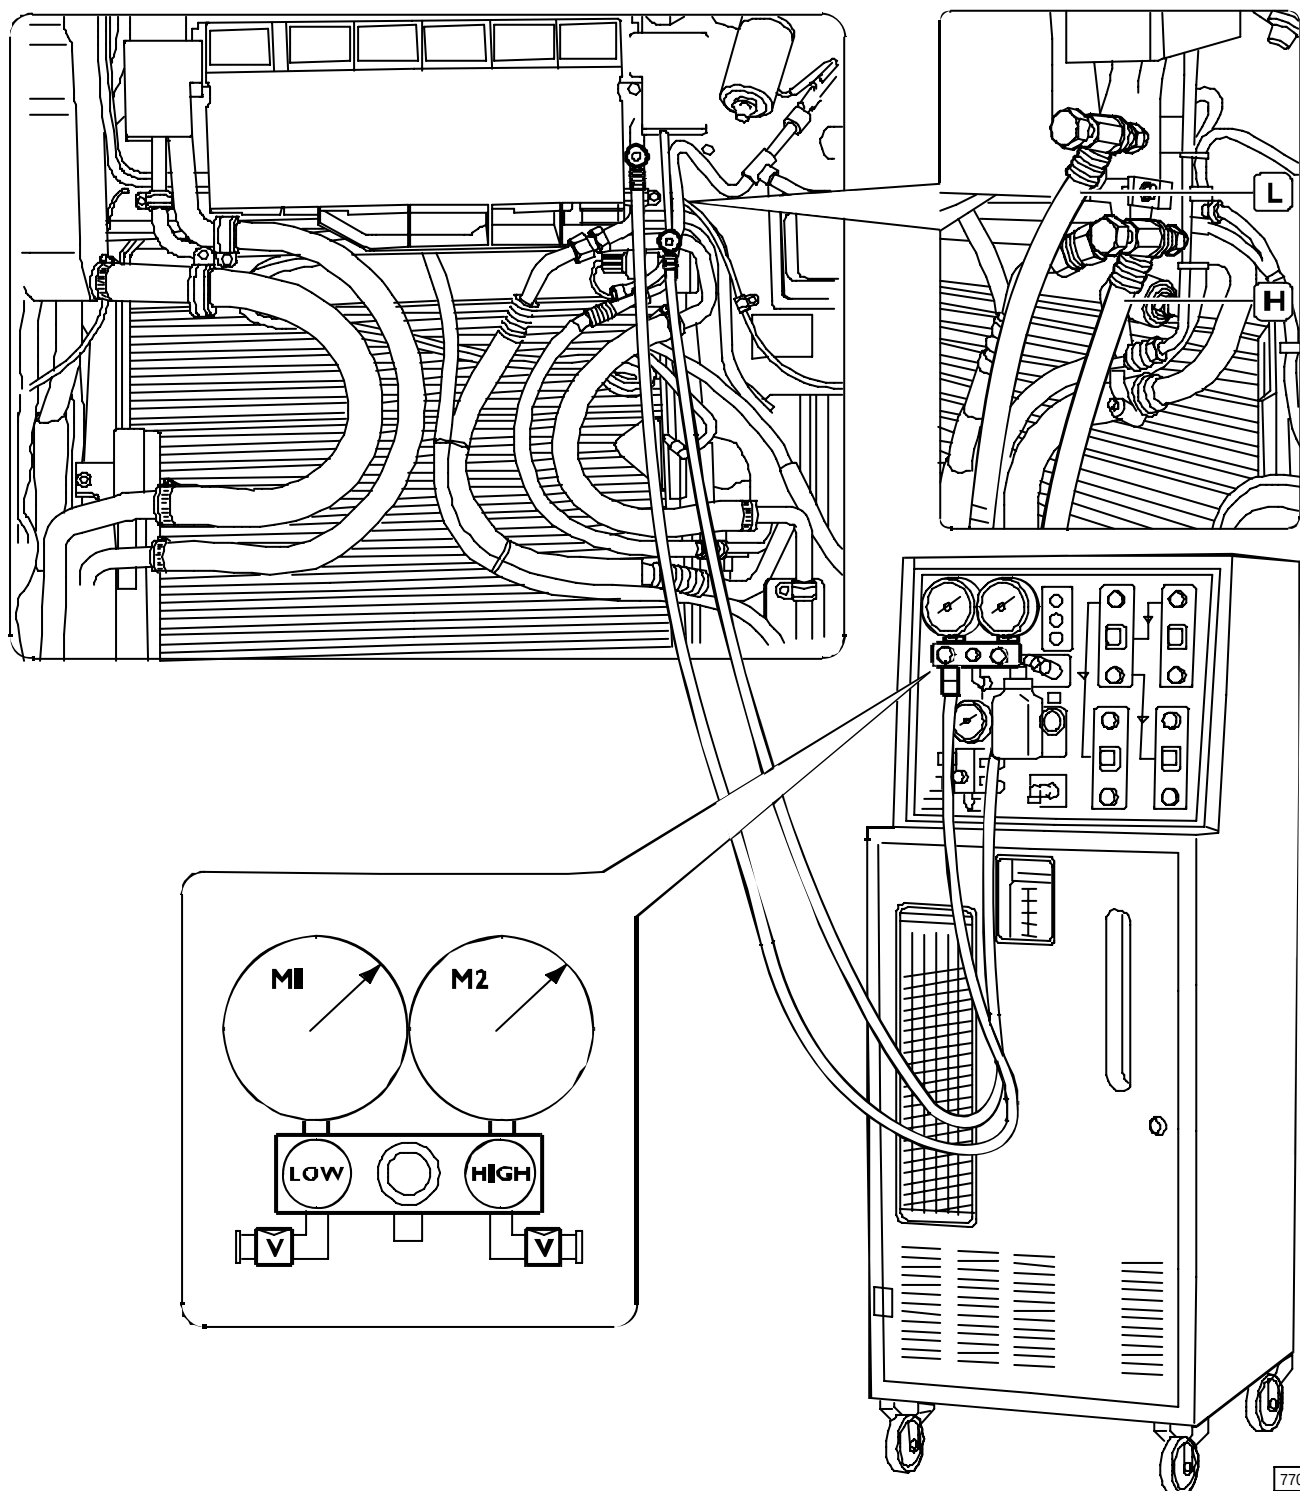

77049

Aquila Trucks Centres


- connect the station to the electricity mains (220 V - 50 Hz);
- press the switch A (Process Unit) onto position 1. The respective indicator light LA1 will come on;
- press the switch B (Refrigerant Process) onto position 1;
- the respective indicator light LB1 will come on;
- press the switch C (Recovery Recycle) onto position 1. The recovery and recycling operation will start automatically. The respective indicator light LC1 will come on to signal the operation in progress. On completing this operation the unit will automatically stop and the indicator light LC1 go out. Wait for a few minutes so that any pockets of refrigerant at low pressure remaining in the system can increase their pressure, by absorbing heat, and be able to be recovered. The station will automatically repeat the recovery cycle if the above conditions occur;

- put the switches A, B and C back onto position 0;
- close the V1, V2, LOW and HIGH valves.

NOTE If the refrigerant reaches the maximum level (maximum level indicator light L4 on), the recovery cycle must be stopped immediately by pressing switch C onto position 0 and transferring the refrigerant from the filler cylinder to a suitable external bottle.

- Continue the operations following the instructions given on the following pages.

Figure 214

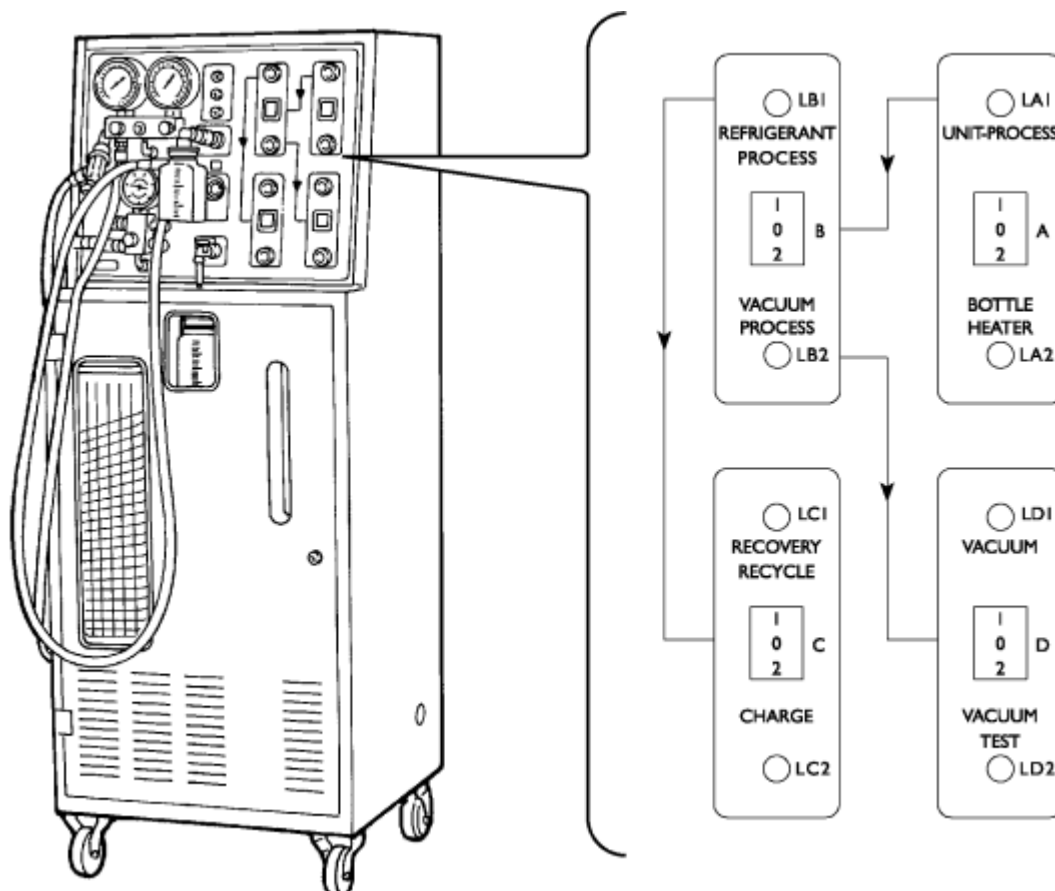

50636

Aquila Trucks Centres

CREATING A VACUUM IN THE SYSTEM

This operation should be carried out if all the repairs have been performed and the system components have been properly refitted. This operation is the phase prior to refilling, therefore proceed as follows:

NOTE Do not run the vacuum cycle when there is even minimal pressure in the station or system.


- connect the pipes to the specific system connections and open the V1-V2/LOW and HIGH valves;
- press the switch A (Process Unit) onto position 1. The respective indicator light LA1 will come on;
- press the switch B (Vacuum Process) onto position 2. The respective indicator light LB2 will come on;
- press the switch D (Vacuum) onto position 1. The system will automatically start being evacuated and the respective indicator light LD1 will come on to signal the operation in progress.

After a few minutes of operation (10 at most) if the system has no leaks the indicator light LD2 VACUUM TEST will also come on. From this time on, evacuation should be continued for at least two hours to obtain a good evacuation;

NOTE The indicator light LD2 vacuum test fails to come on if there is a leak. Stop evacuation, eliminate the leak and repeat the evacuation procedure.

- at the end of the time programmed for evacuation, press the switch D (vacuum test) onto position 2 and leave the system in this state for 3-5 minutes. The indicator light LD2 VACUUM TEST is on if the system has a good seal. The indicator light LD2 VACUUM TEST goes out if there is a leak. Eliminate the leak and repeat the evacuation cycle;
- put the switches D and B back onto position 0 and proceed with the following phase.

Figure 215

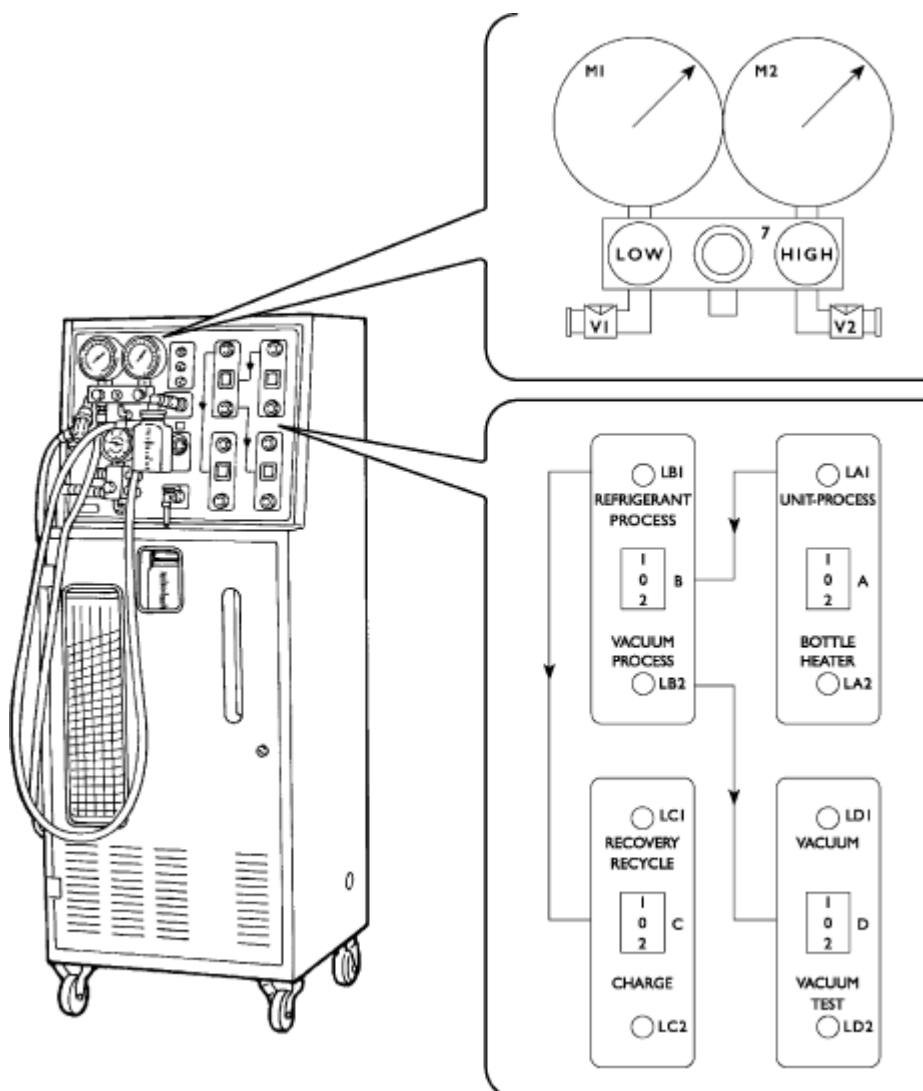

50637


Aquila Trucks Centres

It is possible that at the end of each recovery cycle the station may have recovered lubrication oil from the compressor, which should be drained off into a specific graduated container (1).

- 1 Slowly open the valve V5 (Oil Discharge).
- 2 When all the oil has been discharged into the container (1) close the valve V5.

- 3 Quantify and record the amount of oil discharged.
- 4 Eliminate the recovered oil correctly.
This oil cannot be reused.
The same amount of new oil as has been removed must be added to the system.

Figure 216

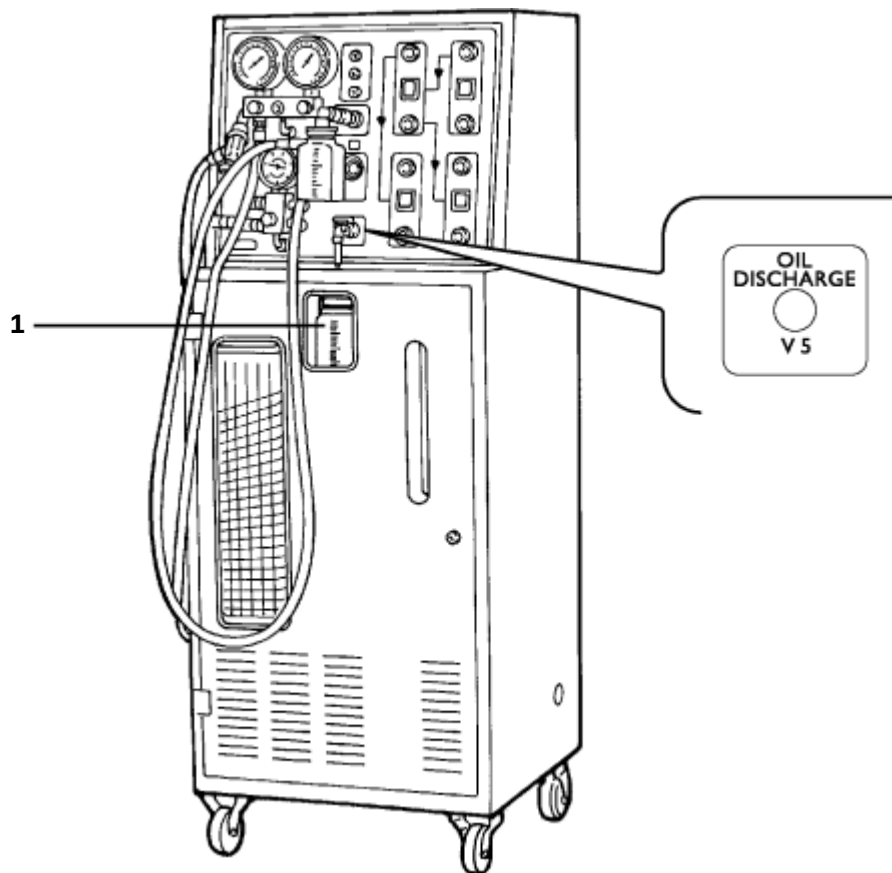

50638

Aquila Trucks Centres

RESTORING OIL IN THE SYSTEM

If during the recovery and recycle phase, oil from the system has been removed, it must now be replenished:


- take the metering device supplied with the right amount of lubricant for the system concerned, or previously measured;
- connect the metering device (1) to the lubricant injection valve V3;
- open the valve V3 and then carry out the system vacuum phase for a few moments;
- open the valve mounted on the metering device container (1). The oil will be drawn into the system;
- close the valve V3 and the valve on the metering device container when the required quantity of lubricant has been drawn in;

- disconnect the metering device (1) from the injection valve V3 and fit the protective cap back on;

NOTE Keep the oil containers well sealed in order to avoid contamination. In particular, remember that oil is extremely hygroscopic:

- never open the oil injection valve V3 if the system has positive pressure;
- oil should only be injected with a vacuum in the system;
- the oil level must never fall under the suction pipe (air would get into the system).

Figure 217

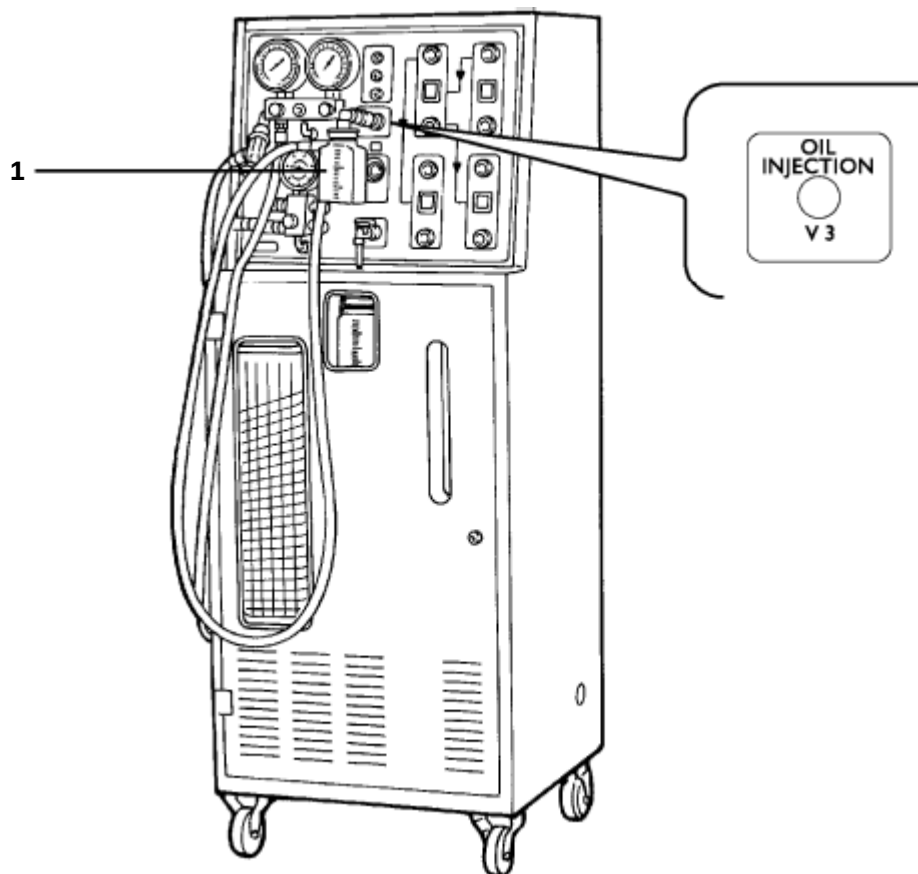

50639

Aquila Trucks Centres

FILLING THE SYSTEM WITH REFRIGERANT

Before refilling, it is wise to be aware of some important rules:

- know the quantity of refrigerant to use (it is normally written on an adhesive plate affixed on the vehicle);
- the filler cylinder is equipped with a minimum level check that prevents introducing incondensable gas into the system.
This is why the last approx. 600 g of refrigerant it contains cannot be used;
- therefore, before filling, check that the cylinder contains a sufficient quantity for filling (maximum quantity that can be used 3800 g);
- if the pressure inside the filler cylinder indicated on the pressure gauge (2) is greater than as required, which can be seen on the filler cylinder window approx. 10 bar max, discharge the excess pressure through the valve (1) on the pressure gauge assembly to bring it down to the right level, reading the value on the pressure gauge.


NOTE To transfer refrigerant from an external bottle to the filler cylinder and vice versa, refer to the equipment manual.

Considering that the amount of refrigerant depends on its pressure, to know the actual weight it is necessary to turn the outside of the filler cylinder so the line of the diagram matches the level viewer. In this way we can know the exact quantity of refrigerant in the cylinder (starting weight).

When calculating the weight of the refrigerant, in addition to the 600 g that cannot be used, remember to increase the load by approximately 100 g (this is the weight of refrigerant contained in the station-system connecting pipes). The right quantity of refrigerant to introduce into the system will therefore be given by: 600 g + 100 g + (quantity referred to the system capacity).

Always check before filling that the indicator on the "console" shows the refrigerant contains no moisture, in which case the indicator will be bright green. If this is not so, replace the filters in the station as instructed in the equipment manual.

Figure 218

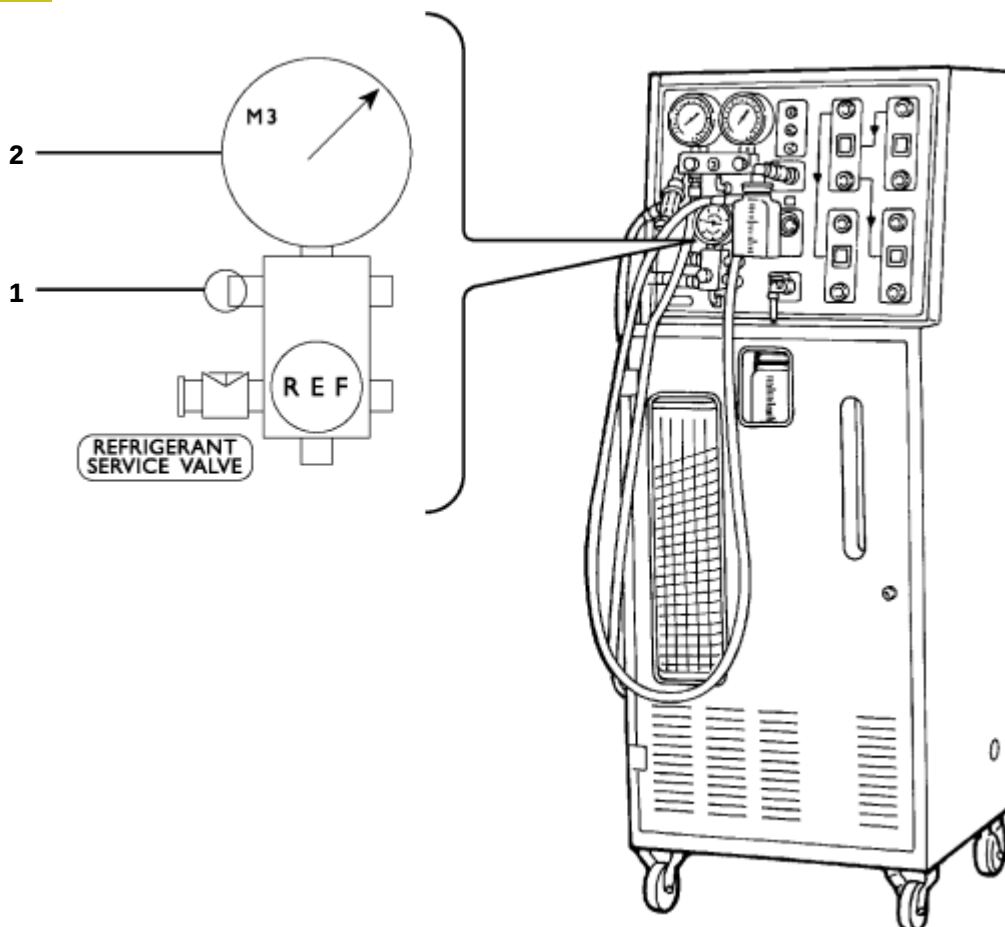

50640

Aquila Trucks Centres


When the cylinder contains the necessary quantity for filling (both pipes must already be connected to the system connectors since the vacuum operation has already been performed), proceed as follows:

- close the LOW valve, keep the HIGH and V1 - V2 valves open;
- press the switch B (Refrigerant process) onto position 1, the indicator light LB1 will come on;
- press the switch C (Charge) onto position 2, the respective indicator light LC2 will come on and refrigerant will flow from the station into the system;

NOTE When filling, if the level of refrigerant in the cylinder falls under the required quantity the system will stop and the Minimum Level indicator light (L5) will come on.

- having loaded $200 \div 500$ g of refrigerant, depending on the size of the system, stop filling by moving the switch C (Charge) onto position 0;
- check the system is properly sealed with the electronic leak finder;
- complete filling the system until the pre-calculated residual weight in the cylinder is reached;
(Residual weight = Total weight - System capacity weight)
- complete filling, move the switches C - B and A onto position 0 (A had been moved for the vacuum). Check again there is no leakage;
- close the HIGH valve.

Figure 219

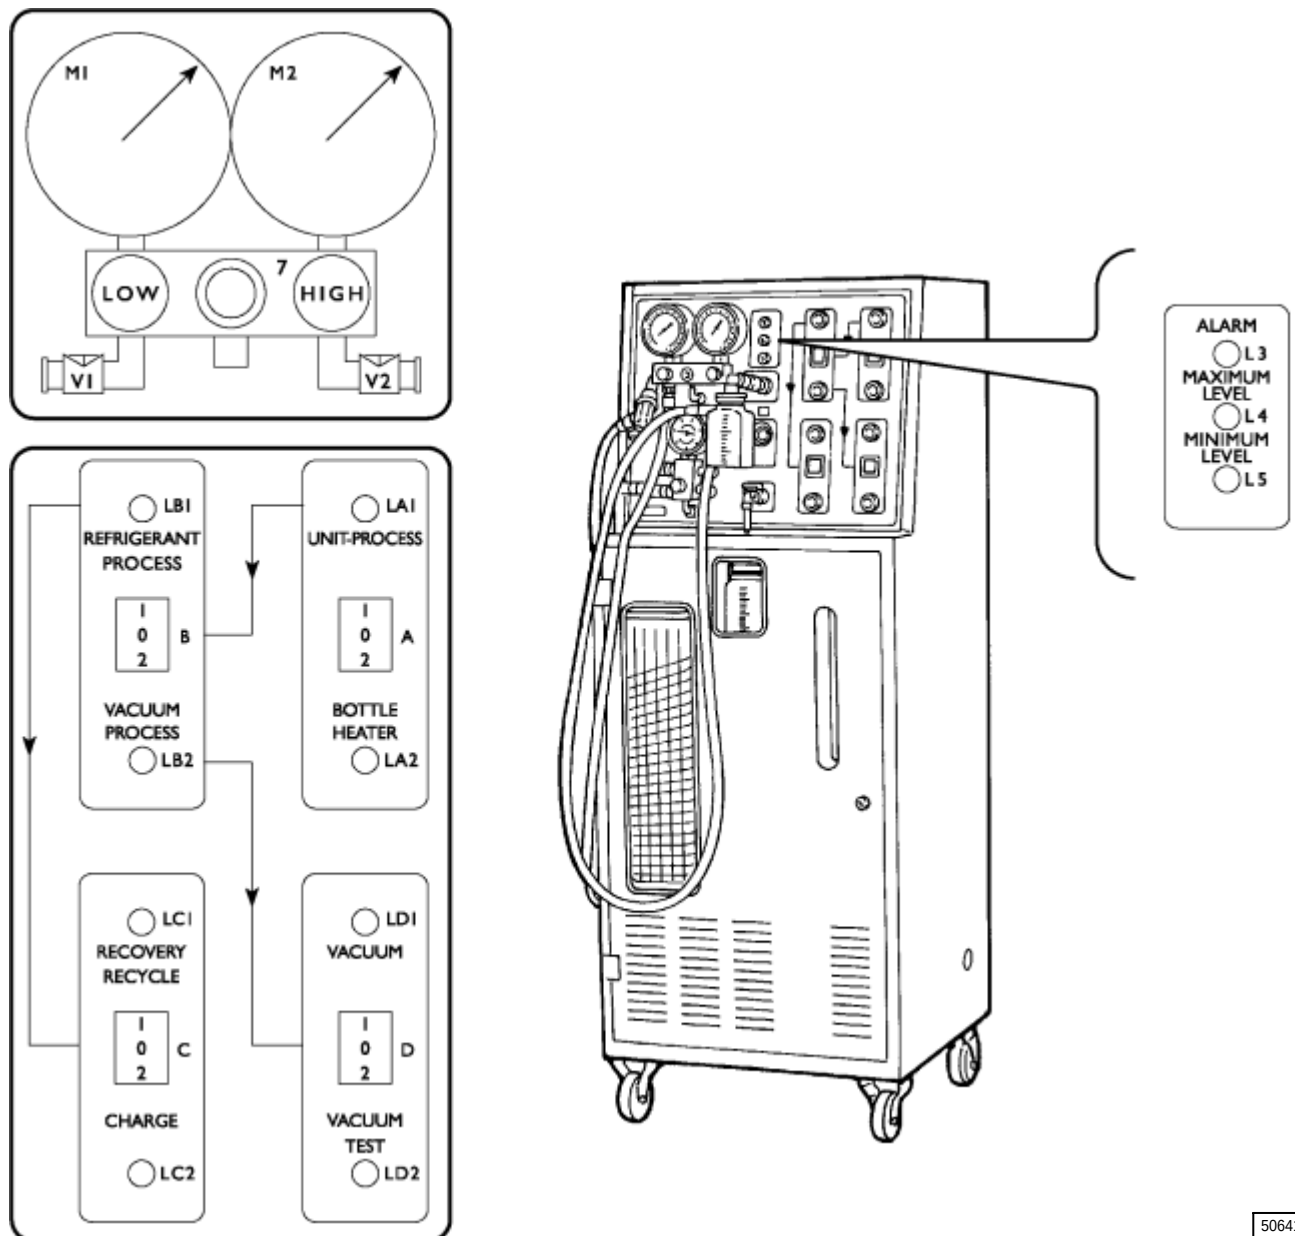

50641

Aquila Trucks Centres

CHECKING THE PRESSURES IN THE SYSTEM

After filling, leave the pipes connected and carry out the following check:

- close the HIGH and LOW valves, V1 and V2 open;
- turn on the engine, switch on the air-conditioner and check on the pressure gauges M1 and M2 that the pressures correspond, normally: low pressure no less than 1 bar, high pressure 15 ÷ 18 bar, depending on the system specifications.


OPERATIONS PRIOR TO DISCONNECTING THE STATION FROM THE SYSTEM

Always observing the above safety rules, carry out the following operations:

- check that all the valves are closed: LOW - HIGH, V1 - V2;
- disconnect the pipes of valves V1 - V2 and put the caps back onto the system valves;
- Check the system again with the leak finder.

NOTE Normally, with the air-conditioner switched on, air should come out of the vents at a temperature lower than 5°C and after a period of operation to stabilize the temperature of the ducts.

Figure 220

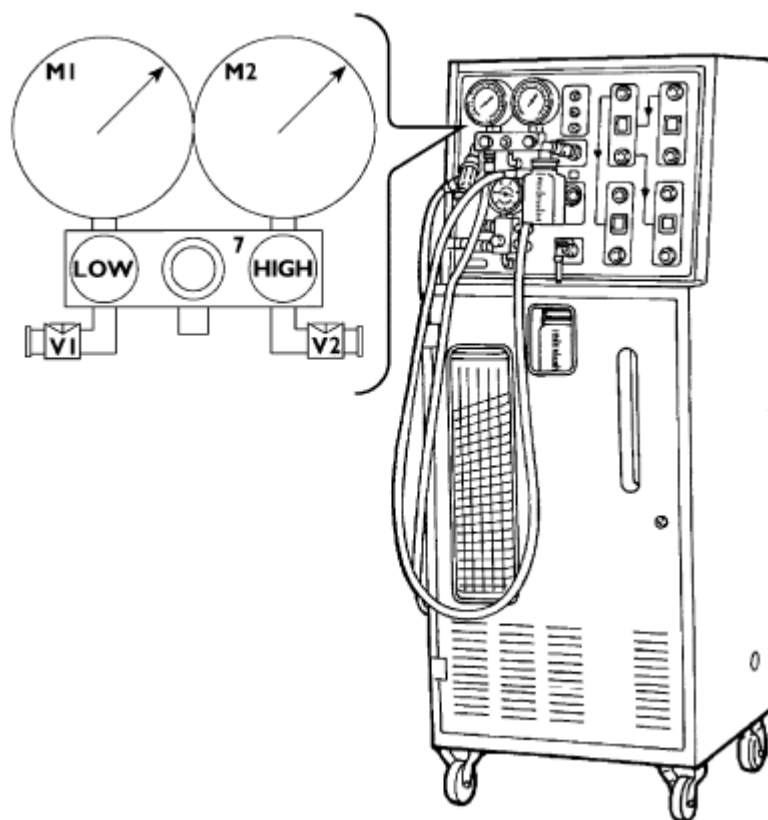

50642

Aquila Trucks Centres

PROCEDURE FOR DRAINING AND RECHARGING AIR CONDITIONING SYSTEMS WITH RECHARGING STATION 99305148 AND RECOVERY OF R134A COOLANT

This station has been made to be used on all air-conditioning/heating systems for motor vehicles using R134A gas.

By connecting the station to a refrigerating system the gas it contains can be recovered, cleaned and made ready to be reloaded into the system or be transferred to an external container. In addition, it is possible to see the amount of oil taken from the system, restore it and "empty" the system.

Main components


To be operative, the station needs to absorb approximately 3 kg of refrigerant.

For prompt use it is advised to have at least 2 kg of refrigerant in the filler cylinders and to keep the station as level as possible.

NOTE This procedure does not describe the charge/drain phases of coolant from internal/external tanks and it does not provide indications on maintenance interventions required.

For these operations, please refer to the equipment supplier use and maintenance manual.

Figure 221

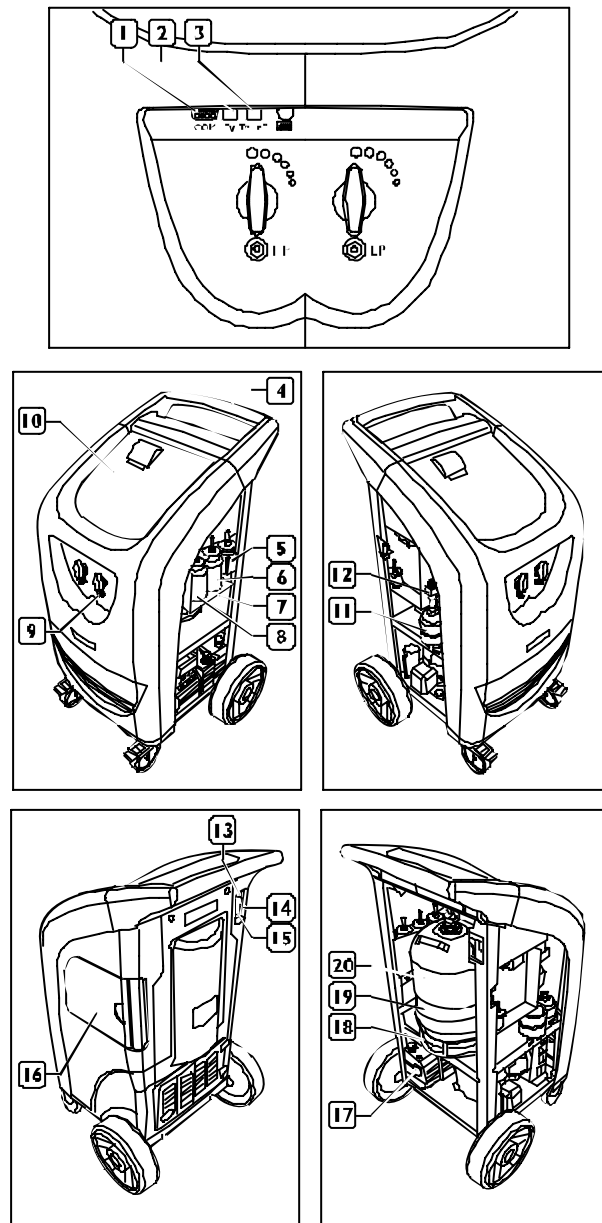

1. Serial port - 2. TV temperature probe connector - 3. Electrical probe connector - 4. Handle - 5. Tracer container - 6. New fluid container - 7. Fluid scales - 8. Used fluid container - 9. Taps - 10. Control console - 11. Dehydrating filters - 12. Moisture gauge - 13. Master switch - 14. Fuse - 15. Electric plug socket - 16. Fluid container flap - 17. Vacuum pump - 18. Electronic scale - 19. Heater coil - 20. Cylinder

115615

Aquila Trucks Centres

SAFETY STANDARDS



This station is exclusively for professionally trained operators who must be familiar with refrigerating systems, refrigerant gases and the damage pressurized equipment can cause, therefore:


- always wear gloves and goggles when working with refrigerant gases. Contact of refrigerant liquid with the eyes can cause blindness;
- avoid all contact with skin (low boiling point -30°C can cause frostbite);
- never inhale the vapours of refrigerant gases;
- before connecting the station with a system or external container, check that all the valves are closed;
- before disconnecting the station, check that the cycle is over and all the valves are closed. This will prevent dispersing refrigerant gas into the atmosphere;
- never expose the unit or operate it in acidic or wet environments or close to open containers of inflammable substances;
- the unit must operate in places with good ventilation;
- never alter the settings of the safety valves and control systems;
- never use bottles or other storage containers that are not approved and are not fitted with safety valves;
- never load any container over 80% of its maximum capacity;
- never leave the unit powered if it is not to be used immediately.
Cut off the mains power supply when it is not planned to use the equipment;

- always connect the pipe with the RED machine quick coupling to the A/C system high pressure branch. Always connect the pipe with the BLUE machine quick coupling to the A/C system low pressure branch. Keep the connection pipes far away from moving or rotating objects or parts (cooling fan, alternator etc.). Keep the connection pipes far away from hot items or parts (engine exhaust pipes, radiator etc.);
- always fill the A/C system with the amount of fluid recommended by the manufacturer. Never exceed this amount. Always check the fluid level before each operation. Always add the correct amount of fluid. Check the electric mains is 220-240V/50Hz before connecting the machine to the mains;
- the cylinder must be filled to 80% of maximum capacity to leave a gas reserve to absorb any pressure increases. Never touch the internal cylinder taps. Dispose of fluid extracted from the A/C system and vacuum pump in special waste fluid containers. Change the filters at the required intervals using only filters recommended by the manufacturer. Only use fluids recommended by the manufacturer. Never swap the vacuum pump fluid with air conditioning system fluid. Any guarantees on the machine will be null and void if the above safety rules are not complied with.

Aquila Trucks Centres

CONTROL PANEL

Figure 222

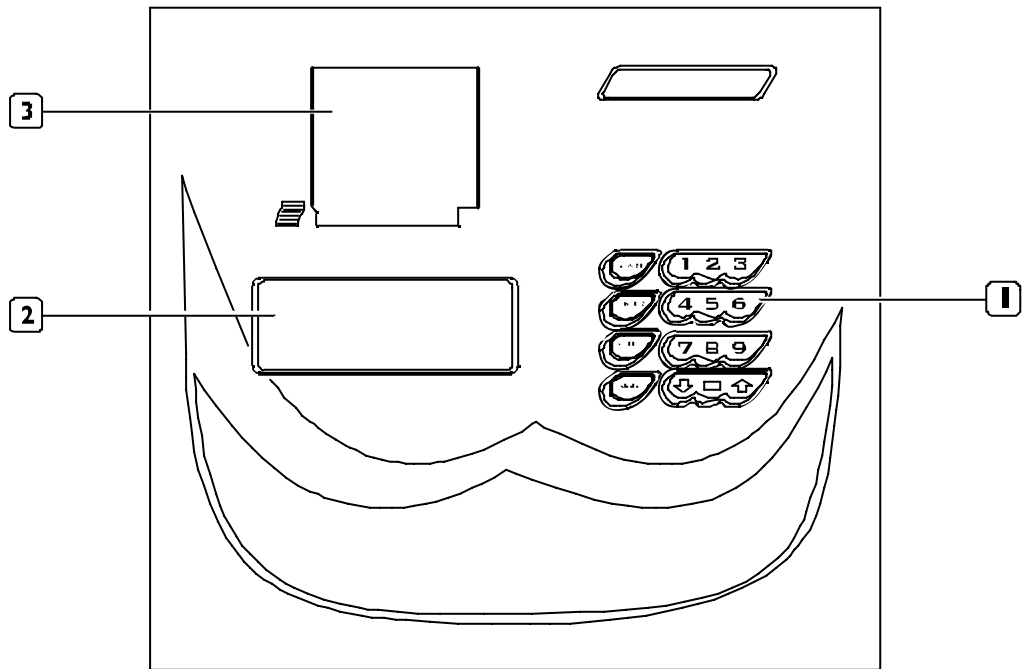

114767

1. Keypad - 2. Alphanumeric LCD - 3. Printer

Keypad functions

STOP: Use this key to stop the current operation (recovery - drain fluid - empty - add fluid - fill). Press the START key again to start again from the previous point.

The horn is switched off if the STOP key is pressed during an alarm, an error or at the end of an operation.

ENTER: This key confirms the procedure or operation flashing on the LCD.

↓: This key is used to move from one procedure to another or from one operation to another, from top to bottom.

↑: This key is used to move from one procedure to another or from one operation to another, from bottom to top.

START: This key activates the confirmed procedure or operation.

NOTE Press START only when requested to by the LCD).

Emergency warning light panel

HIGH PRESSURE ALARM: is displayed and emits an acoustic signal when fluid pressure in the circuit exceeds 17.5 bars. The recovery operation is automatically halted.

CYLINDER FULL ALARM: displayed and emits an acoustic alarm when more than 80% of the maximum capacity is present in the cylinder, i.e. 9.5 kg.

RECOVERY operation is automatically halted (to cancel this alarm, one or more A/C systems must be charged before recovering more coolant).

CYLINDER EMPTY ALARM: displayed and emits an acoustic alarm when too little coolant is present inside the cylinder.

NEW FLUID CONTAINER ALARM: displayed and emits an acoustic alarm when the volume of new fluid drops below approximately 50 cm³.

USED FLUID CONTAINER FULL ALARM: displayed and emits an acoustic alarm when the volume of used fluid drops exceeds approximately 200 cm³.

LEAKS IN A/C SYSTEM ALARM: displayed and emits an acoustic alarm after the first 10 minutes of vacuum if there are leaks in the A/C system.

NOTE Detection of micro-leaks cannot be guaranteed.

SERVICE ALARM: displayed and emits an acoustic alarm when 150 kg of coolant are recovered.

To deactivate, replace the filters and vacuum pump fluid. Together with the filters, a code will be sent to eliminate the alarm.

Aquila Trucks Centres

PRELIMINARY CHECKS

Check that the switch (13, Figure 221) is in position 0.
 Check that all the machine taps are closed.
 Connect the machine to the mains and turn on.
 Check that the pump fluid level gauge indicates at least half full.
 If the level is low, fuel must be added.

Check the additional fluid container (6, Figure 221) contains at least 100 cm³ of fluid.

Check the machine LCD to ensure the cylinder contains at least 3 kg of coolant.

If not, refill the internal cylinder using an external cylinder with appropriate coolant.

AUTOMATIC PROCEDURE

All the operations are carried out automatically in the automatic procedure: recovery and recycling, fluid drain, vacuum, addition of new fluid and refilling.

The amount of gas recovered, recovered fluid, vacuum time, fluid added and the amount of gas injected are printed automatically at the end of each individual operation.

Connect the hoses to the A/C system using the quick couplings, taking care to connect the BLUE hose to the low pressure branch and the RED hose to the high pressure branch.

If the system is equipped with a single high or low pressure quick coupling, only connect the relevant quick coupling.

Check that the high and low taps are closed.


Turn on the vehicle engine and air conditioner for 5-10 minutes, keeping the passenger compartment fan running at maximum speed.

Turn off the vehicle engine.


The instrument has a four-row display with up to 20 characters per row.

The selected item flashes on the option menus.


It is indicated between inverted commas in this manual.

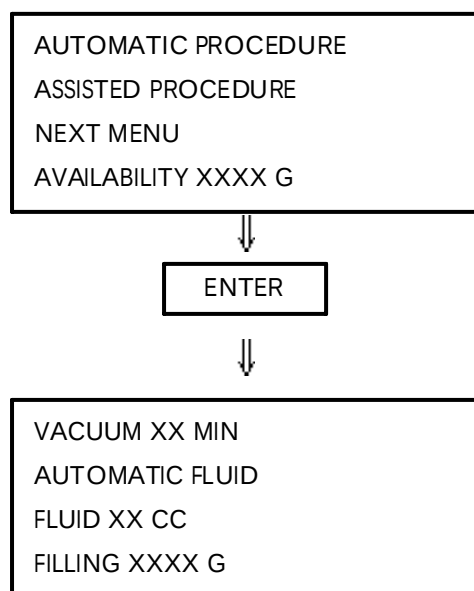

Follow the automatic procedure, i.e. press ENTER when the message "Automatic procedure" flashes on the LCD.

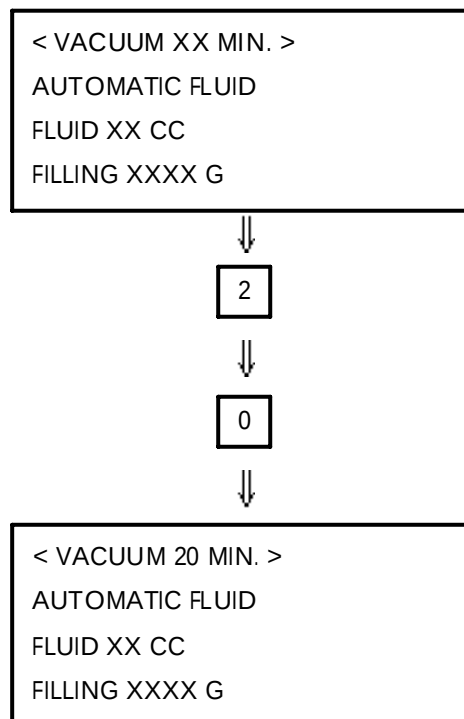


Enter the vacuum time or confirm the previous time. Simply press ENTER to confirm the previous time. Use keys 0-...-9 to set a new time.

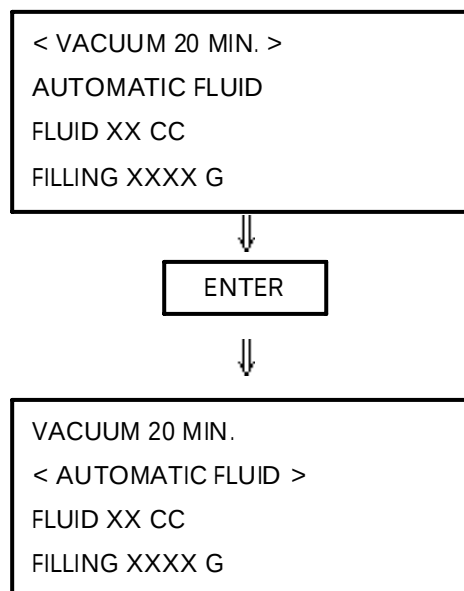


Once the vacuum time has been confirmed, the message "Automatic fluid" begins to flash. Press ENTER to confirm.

Aquila Trucks Centres

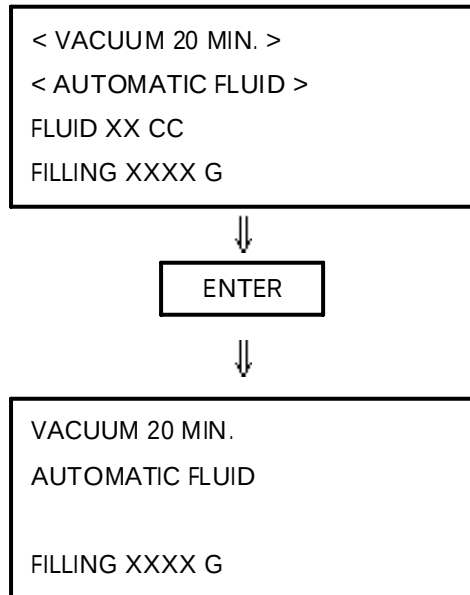


If the automatic fluid is confirmed, the system automatically adds the amount of fluid removed during recovery after the vacuum stage.

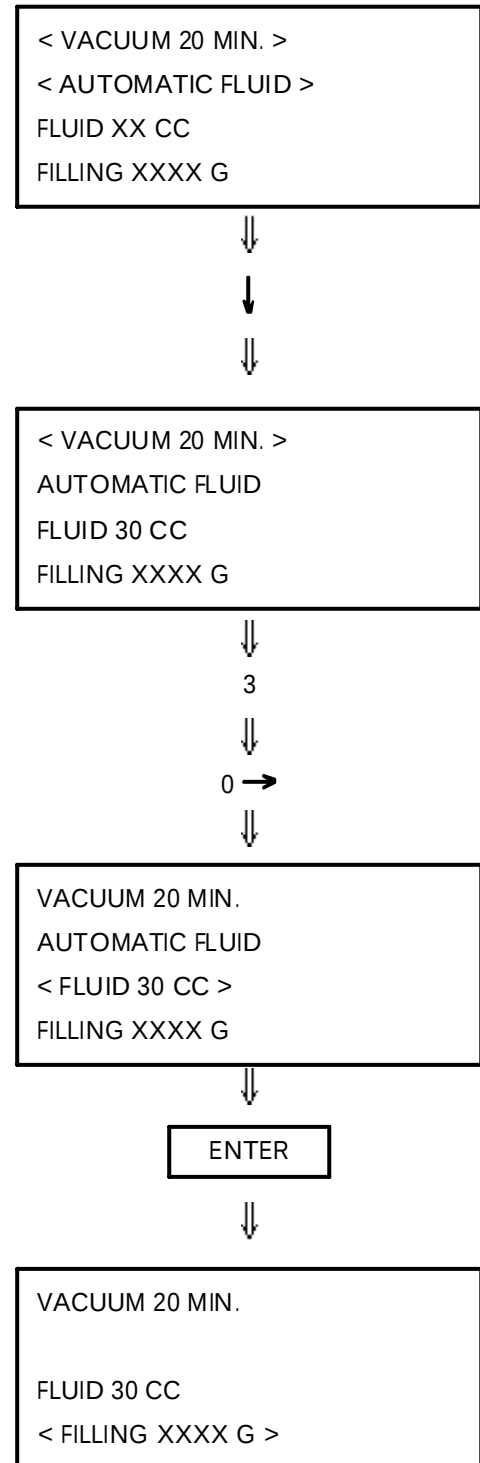

If you need to add a quantity of fluid other than the quantity drained after recovery, set as follows: once the vacuum time has been confirmed, the message "Automatic fluid" begins to flash.

Press the ↓ key to move to the message "Fluid xx cc", enter the volume of fluid you wish to be added automatically after the vacuum using the keys 0-... 9 and press ENTER.

Aquila Trucks Centres

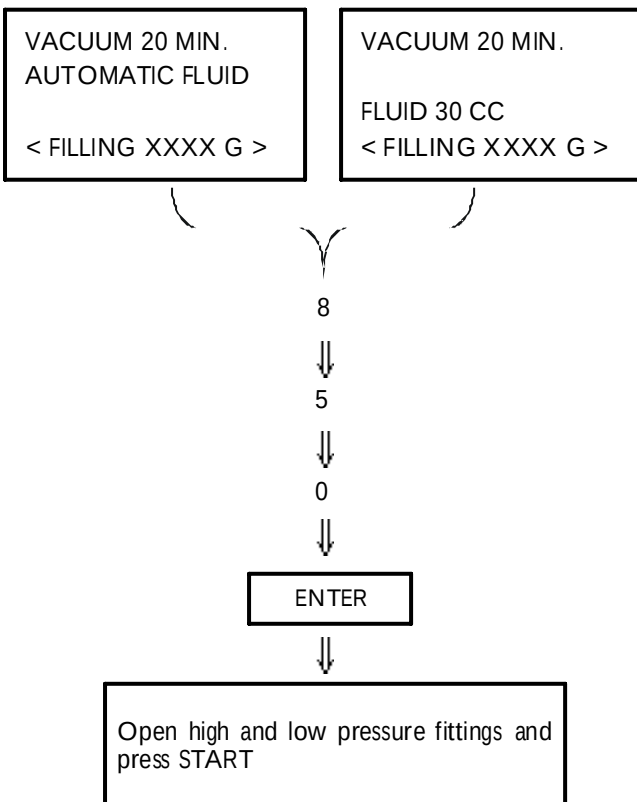

Once the fluid has been confirmed, the message "Filling xxxx g" begins to flash. Set the quantity of coolant in g you wish to add to the A/C system.

For example, if the quantity is 850 g, press the keys 8, 5 and 0 "Filling 850 g".

After setting the quantity, confirm with ENTER.

Open the machine high and low pressure fittings and press the START key.

If a gas analyser is installed, the machine tests the purity of the air conditioning system coolant.

If the coolant is sufficiently pure, recovery begins.

If the A/C system does not achieve the required level of purity, the machine runs a second test.

If the second test fails, the machine displays the alarm message "A/C system contains contaminated coolant".

Contaminated coolant cannot be recovered because it would contaminate the coolant inside the machine cylinder.

During the recovery stage, the system displays the amount of coolant recovered in g.

Once recovery is complete, the machine stops draining and automatically displays the spent fluid removed from the A/C system during recovery.

The fluid drain operation lasts 3 minutes. If some pockets of coolant remaining in the A/C system after this operation cause the pressure to increase, the machine automatically begins to recover the coolant.

After draining, the vacuum operation begins automatically for the preset time. After the first 10 minutes, a check is run for A/C system leaks (attention: if vacuum time is < 10 minutes, the machine will not check for leaks in the A/C system).

If leaks are found in the A/C system, the machine automatically stops and displays the "leaks in A/C system" alarm (detection of microleaks is not guaranteed).

If the A/C system seal is effective, the machine will continue with the vacuum operation.

Once the vacuum stage is complete, new fluid is added automatically according to the amount of fluid drained or according to the volume set by the operator.

At the end, the system automatically switches to refilling and adds the set amount.

Once the refilling operation is complete, close the machine high and low pressure fittings and turn on the A/C system to check the pressures.

During the pressure check, the machine displays "Press ENTER to print a pressure graph".

To obtain a print-out, press ENTER. A pressure graph may be printed for other checks by pressing the START key.

After the pressure check, the machine displays the message "Disconnect the HP fitting and open HP-BP".

Now disconnect the quick coupling only from the A/C system (turn the engine off if necessary) and open the high and low pressure taps with the A/C system running so that the A/C system drains off the coolant in the pipes.

After approximately one minute, remove the machine low pressure fitting from the vehicle A/C system and turn off the engine.

Set the master switch (13, Figure 221) to 0.

NOTE The automatic procedure may be run even if the A/C system is empty. In this case, the system begins directly from the vacuum operation.

If the A/C system only has one high pressure quick coupling, set the filling quantity to +150g.

ASSISTED PROCEDURE

In the assisted procedure, each operation may be carried out individually apart from the recycling recovery stage, which is followed automatically by the spent fuel drain stage and the vacuum for the set time.

The amount of gas recovered, recovered oil, vacuum time, oil added and the amount of gas injected are printed automatically at the end of each individual operation.

Aquila Trucks Centres

Recycling recovery

Connect the hoses to the A/C system using the quick couplings, taking care to connect the BLUE hose to the low pressure branch and the RED hose to the high pressure branch.

If the system is equipped with a single high or low pressure quick coupling, only connect the relevant quick coupling.

Turn on the vehicle engine and air conditioner for 5-10 minutes, keeping the passenger compartment fan running at maximum speed.

Turn off the vehicle engine.

Follow the assisted procedure, i.e. press ENTER when the message "Assisted procedure" flashes on the LCD.

If following the assisted procedure, press ENTER when the message "Recycling recovery" flashes on the LCD.

Open the machine high and low pressure fittings and press the START key.

If a gas analyser is installed, the machine tests the purity of the air conditioning system coolant.

If the coolant is sufficiently pure, recovery begins. If the A/C system does not achieve the required level of purity, the machine runs a second test.

If the second test fails, the machine displays the alarm message "A/C system contains contaminated coolant".

Contaminated coolant cannot be recovered because it would contaminate the coolant inside the machine cylinder.

During the recovery stage, the system displays the amount of coolant recovered in g.

Once recovery is complete, the machine stops draining and automatically displays the spent fluid removed from the A/C system during recovery.

The fluid drain operation lasts 3 minutes.

If some pockets of coolant remaining in the A/C system after this operation cause the pressure to increase, the machine automatically begins to recover the coolant.

Vacuum

Connect the hoses to the A/C system using the quick couplings, taking care to connect the BLUE hose to the low pressure branch and the RED hose to the high pressure branch.

If the system is equipped with a single high or low pressure quick coupling, only connect the relevant quick coupling. Follow the assisted procedure, i.e. press ENTER when the message "Assisted procedure" flashes on the LCD.

To select vacuum, press ENTER when the message "Vacuum xx min" flashes on the LCD.

Set the vacuum time only if you wish to change the previously set time.

Press ENTER to confirm.

Open the machine high and low pressure fittings and press START.

At this point, the vacuum operation begins for the preset time. After the first 10 minutes, a check is run for A/C system leaks (attention: if vacuum time is < 10 minutes, the machine will not check for leaks in the A/C system). Leaks are found in the A/C system, the machine automatically stops and displays the "leaks in A/C system" alarm (detection of microleaks is not guaranteed); in this event, use leak detector 99305147.

If the A/C system seal is effective, the machine will continue with the vacuum operation.

Adding new fluid

This operation may be carried out exclusively following a vacuum operation and before refilling.

Follow the assisted procedure, i.e. press ENTER when the message "Assisted procedure" flashes on the LCD.

Select the fluid, i.e. when the message "Fluid xx cc" flashes on the LCD.

Set the volume of new fluid to be added in cm³.

Press ENTER to confirm.

Open at least one of the two machine high or low pressure valves and press START.

Filling A/C systems

Follow the assisted procedure, i.e. press ENTER when the message "Assisted procedure" flashes on the LCD.

Select refilling, i.e. when the message "Refilling xxxx g" flashes on the LCD.

Set the amount you wish to add to the A/C system in grams (if an A/C system contains 740g press keys 7, 4 and 0.

To check, ensure the message "Filling 740g" is displayed).

Press ENTER to confirm.

Press the START key and open the machine high pressure tap (if the A/C system only has one low pressure fitting, open the machine low pressure tap).

Once the refilling operation is complete, close the machine high and low pressure fittings and turn on the A/C system to check the pressures.

During the pressure check, the machine displays "Press ENTER to print a pressure graph".

To obtain a print-out, press ENTER.

A pressure graph may be printed for other checks by pressing the START key.

After the pressure check, the machine displays the message "Disconnect the HP fitting and open HP-BP".

Now disconnect the quick coupling only from the A/C system (turn the engine off if necessary) and open the high and low pressure taps with the A/C system running so that the A/C system drains off the coolant in the pipes.

After approximately one minute, remove the machine low pressure fitting from the vehicle A/C system and turn off the engine.

Set the master switch (13, Figure 221) to 0.

If the A/C system only has one high pressure quick coupling, set the filling quantity to +150g (this is the amount that may remain in the high pressure pipe).

Aquila Trucks Centres

LEAK FINDER FOR AIR-CONDITIONING SYSTEMS WITH HFC R134A (99305147)

Tool L-780A makes it possible to identify leakage of HFC 134A gas from the system extremely accurately in the order of 3.3 g a year with the switch on maximum sensitivity.

This instrument requires no settings, the operator only needs to select the desired sensitivity.

The instrument warns the operator of any gas leakage with a buzzer and a LED that flashes in proportion to the concentration of gas.

In addition, the LED indicates the battery is flat if it goes out.

Operating temperature is between 0 °C and 50 °C.


The instrument is equipped with a flexible probe to reach particularly difficult fittings or parts.

The two levels of sensitivity are :

- low sensitivity = 16.5 g/year;
- high sensitivity = 3.3 g/year.

NOTE Before checking vehicles, wait for the engine to cool, the hot parts can falsify the test.

Figure 223

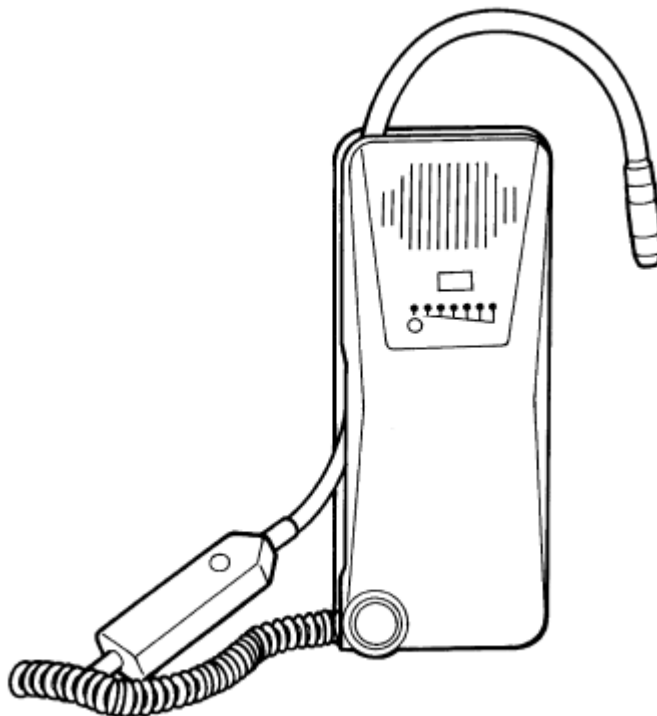

Aquila Trucks Centres

5001 CHASSIS FRAME


Double bottle neck high resistance steel chassis.

Dimensions

Inner distance between side members:		1016 mm (front) 836 (middle) 756 mm (rear)
Note: Indicated distances are independent of thickness.		
Side member section inner height		289 mm (front) 199 mm (rear)
Side member thickness:	6.7 mm	(180W, 190/260/340W, 400IT/WT, 440T, 260/380B)
	7.7 mm	(380T/W/B, 410T/W/B, 720T/WT)

TIGHTENING TORQUES


Figure 224

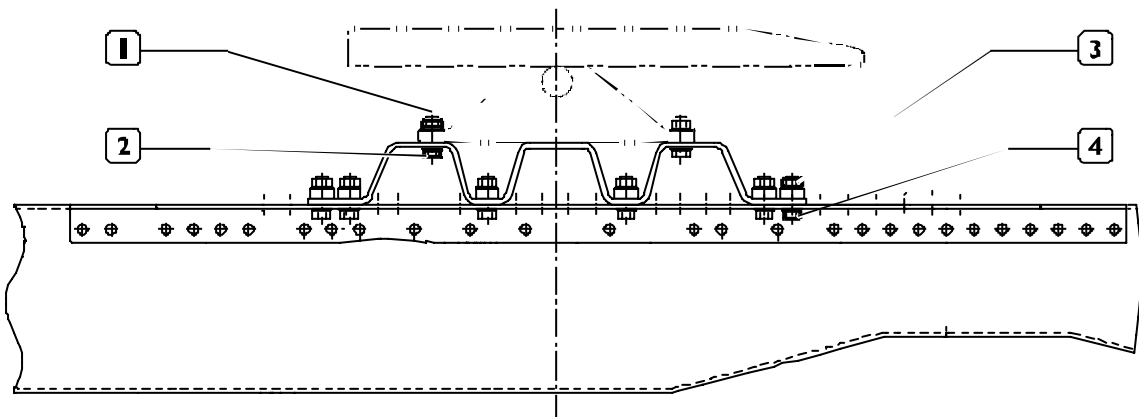

SEMITRAILER FIFTH WHEEL MOUNTING SCHEME

90317

Figure 225

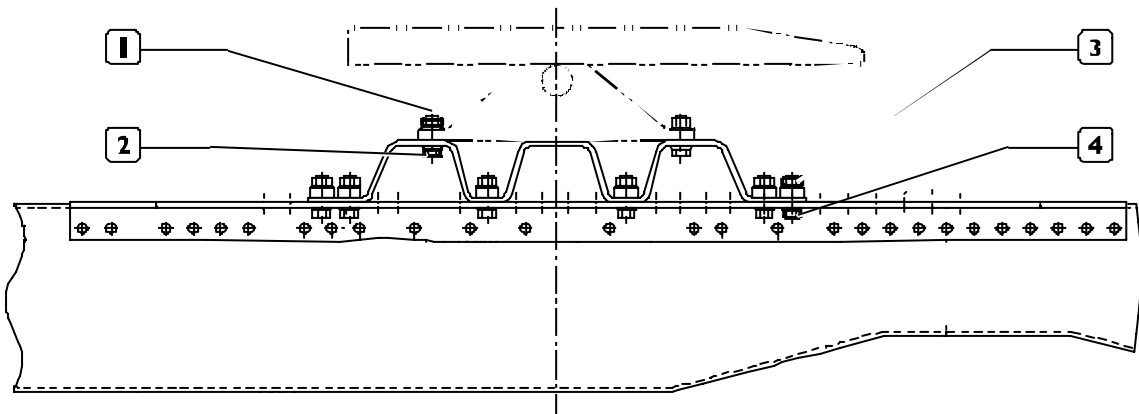

SEMITRAILER PLATE AND FIFTH WHEEL MOUNTING SCHEME

90318

DESCRIPTION	TORQUE	
	Nm	Kgm
Screw with M16x1.5 flange securing fifth wheel to chassis or plate	238 ± 26	23.8 ± 2.6
Nut with M16x1.5 flange securing fifth wheel to chassis or plate	310.5 ± 33.5	31 ± 3.3
Nut with M16x1.5 flange securing plate to chassis	310.5 ± 33.5	31 ± 3.3
Screw with M16x1.5 flange securing plate to chassis	238 ± 26	23.8 ± 2.6


Aquila Trucks Centres

REPAIRS
CHECKS

Inspect the chassis frame, checking its alignment. If even at this stage you detect any deformation you then need to free the relevant part of the chassis frame to help make an exact measurement.

Before the test you need to check all the parts that, with their imperfections, affect the exact measurements (for example, tyre pressure, weak or broken leaf springs, etc.).


Figure 226

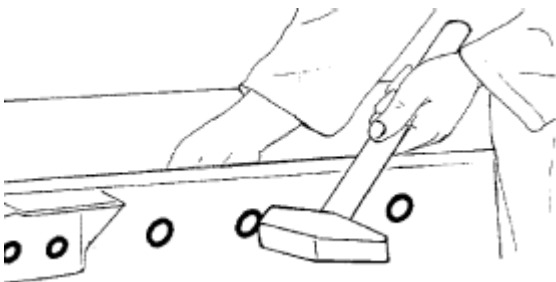

17344

Check the rivets by striking their heads with a mallet and touching the opposite side with your fingers. Mark any loose rivets with paint to help identify them during the repair work.


Figure 227

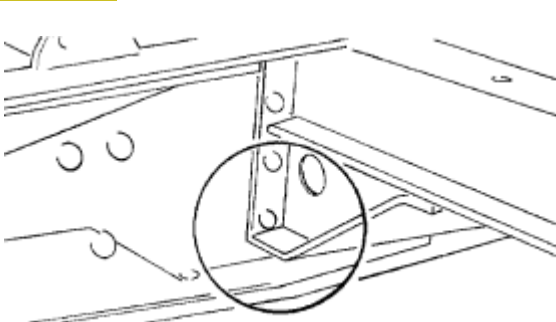

17345

Carefully check for any peeling or cracking all over the chassis frame, paying special attention to joints under great strain, such as: chassis frame cross members, brackets, mounts of leaf springs and chassis frame structural members. Mark any peeled or cracked points straight away.

Figure 228

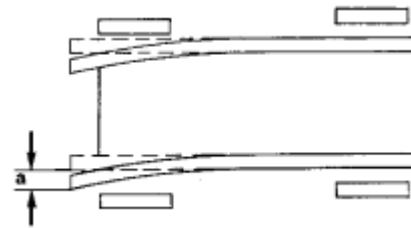

17347

Laterally permissible curvature of chassis frame
"a" = 3 mm/m.


Figure 229



17348

Permissible curvature of chassis frame
"b" = 1 mm/m
Maximum 10 mm.

Figure 230

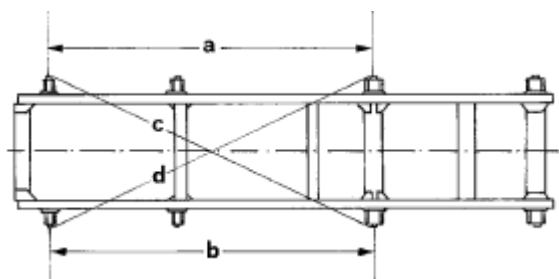

17349

Permissible difference between "a" and "b" = 3 mm.
With diagonal measurement between "c" and "d" = 6 mm.

Aquila Trucks Centres

Measuring the bend of the chassis frame downwards or upwards

Figure 231




17350

Permissible torsion on the chassis frame
"b" = 1 mm each side.

Measuring the side bend of the chassis frame


Figure 232

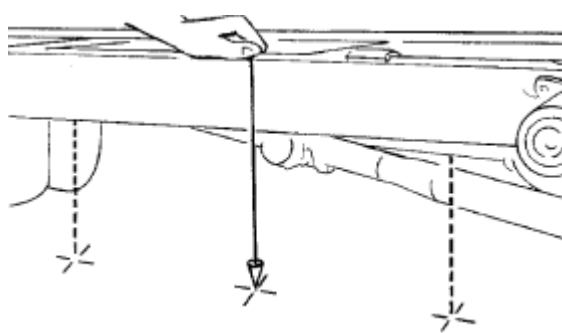

17351

To measure the side bend of the chassis frame you need to plumb the supporting surfaces starting with the two structural members at an interval of approximately 1 m. The points obtained in this way need to be marked accurately on the floor.


Figure 233

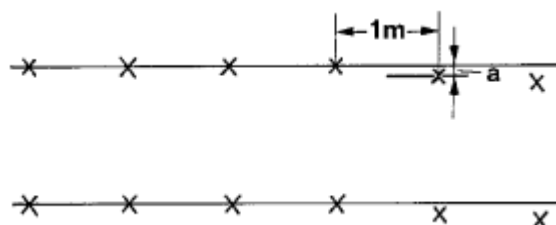

17352

To use the plumbed points you need to stretch out a string passing through the marked points in a line. The points outside the line indicate the start and extent of the actual deformation (a).

Figure 234

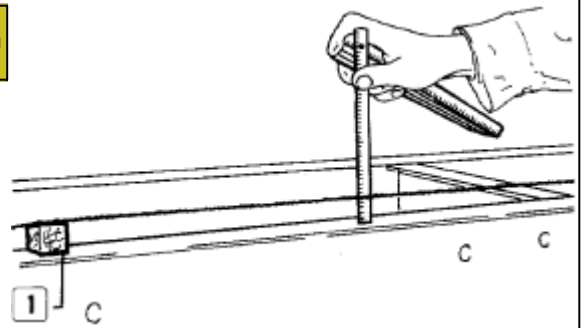


17353

Take two shims (1) of such a size that a string can be stretched along the full length from the straight portion of the bottom or top waist on the structural member of the chassis frame. Measure the distance of the structural member from the string at 1-metre intervals. A different string distance indicates the position and extent of an actual bend in the structural member.

Measuring the movement of the chassis frame

Figure 235

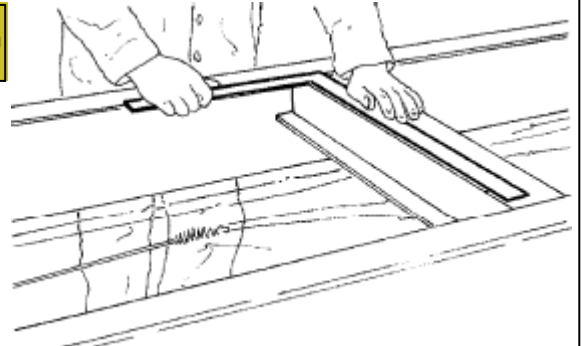


17354

A movement of the chassis frame can be measured by means of a set square. To do this, place the set square at 90° to the structural member of the chassis frame and check the squareness of the cross members of the chassis frame.

Aquila Trucks Centres


Figure 236

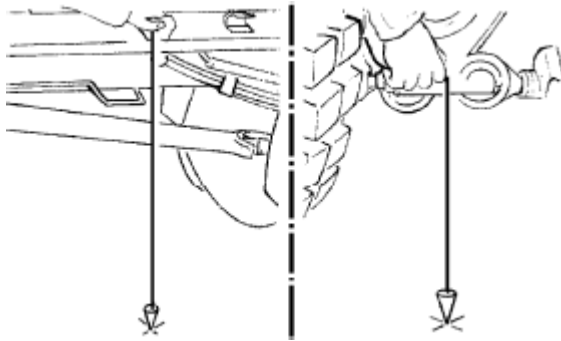

17355

A movement in the position of the axes can be checked by making a diagonal measurement. To do this, plumb the centre of the front mount of the front suspension and the centre of the front support of the rear leaf spring on the flat supporting surface, on both sides.

Figure 237

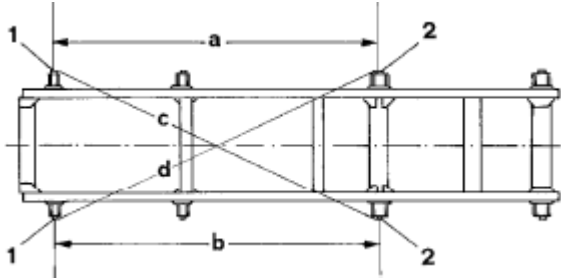


17356

Firstly compare the distance of the points "a" and "b". Then make the diagonal measurement (distance "c" and "d") from point (2) in front to the right to point (2) behind to the left and the opposite.

Measuring the torsion of the chassis frame

Figure 238

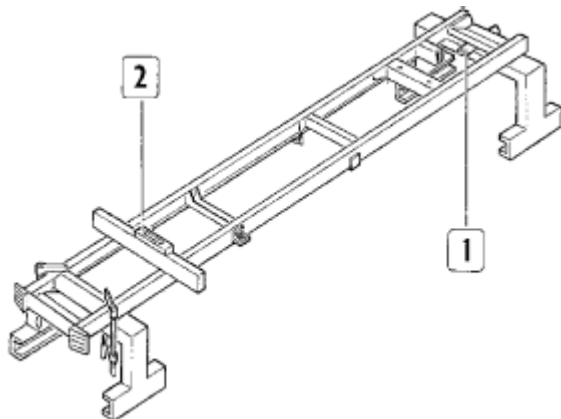

17357

A slight torsion can only be measured with the chassis frame freed of the cab and mechanical assemblies.

To do this check, proceed as follows:


- Set the chassis frame on two stands.
- Using two clamps, secure one side of the chassis frame to the stand.

- Position the other side of the chassis frame, in a central position under the rear cross member, on the knee of an L-shaped iron (1).
- Set a rule crosswise and put a spirit level (2) on this, checking the reading.

At each check point you will need to have the same reading or the chassis frame is out of shape.

PRECAUTIONS

Figure 239

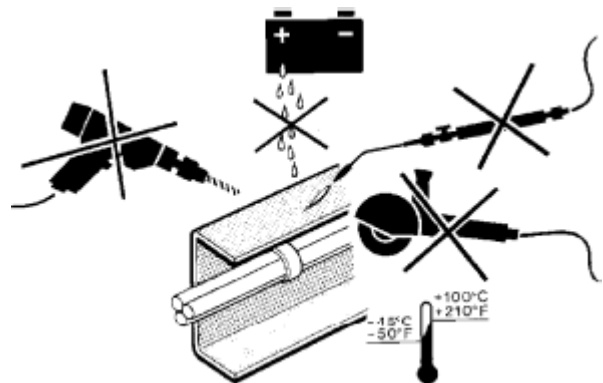


17358

During the work of welding, drilling, grinding, cutting near brake system piping, especially if this is made of plastic, and electric cables, take the appropriate precautions to protect them, contemplating their removal if required. All the parts of the chassis frame subject to reconditioning will need to be protected against oxidation and corrosion.

This protection and painting will need to be done carefully on all the parts concerned, as per any relevant instructions, methods and precautions of the paint manufacturers.

Aquila Trucks Centres

Figure 240

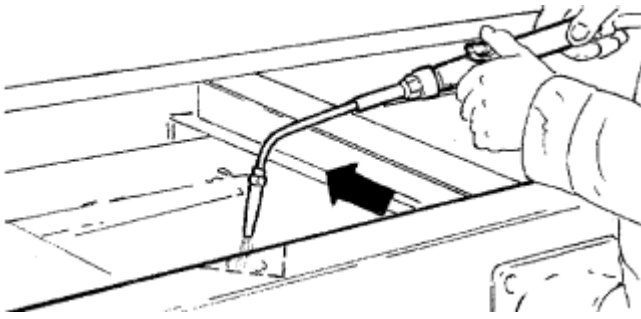

17359


The chassis frame is reconditioned by wedge heating the relevant part with a blowpipe.

During this operation the metal needs to turn cherry red, which corresponds to a temperature of 600 - 680°C.

The heated points must undergo no further heating.

Let the treated parts cool slowly without using any water, compressed air or the like.

Figure 241

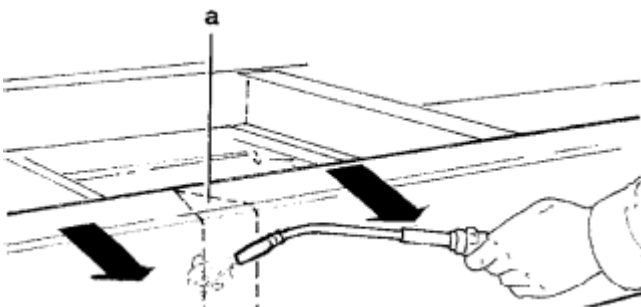


17360

Straighten the side bend of the chassis frame with wedge heating on the top and bottom waist of the part concerning the chassis frame.

The tip of the heating wedge has to lie in the direction of the required bend.

If the base (a, Figure 44) of the two heating wedges is in the top plate of the structural member, then the plate also needs to be heated, but last.

Figure 242

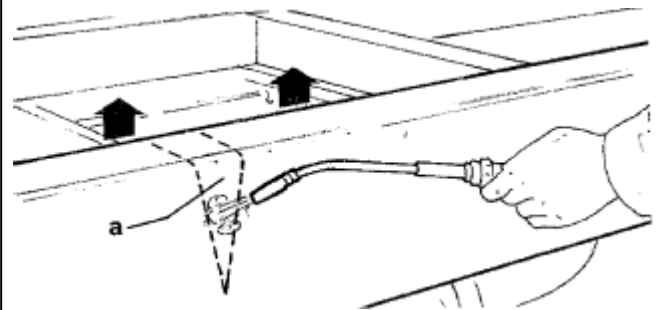

17361


Straighten the sag in the chassis frame downwards or upwards with wedge heating on the top plate of the structural member. In the case of downward bending, the base (a) of the heating wedge is at the bottom. In the case of upward bending, do the opposite.

The relevant bottom or top waist of the structural member has to be heated last in the area of the base of the heating wedge.


Aquila Trucks Centres

Welds on the chassis frame

Figure 243

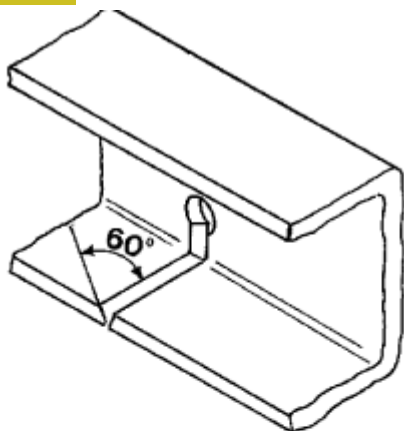

7362

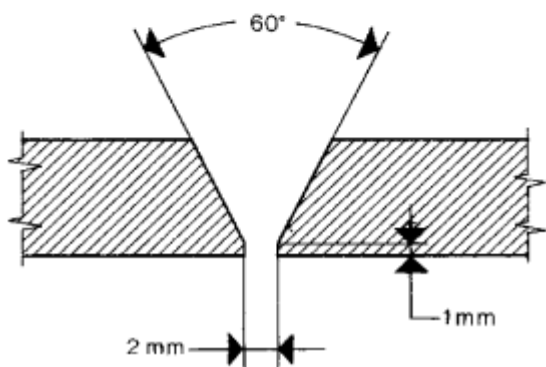

17363

Before starting work, disconnect the negative battery terminal and connect the earth of the welding machine straight onto the piece to weld. Plastic pipes will need to be protected or removed.


Welds will have to be made solely by skilled, trained personnel, with suitable equipment and in workmanlike fashion.

Strip and deoxidize the parts to weld. At the point of breakage, on the inside of the structural member and along the full length of the relevant section, make a V bevel of 60°.




No cuts are permitted on the structural members at areas of changes in profile or at points with a high concentration of stresses; additionally, the line of separation must not concern the holes already in the structural member.

Figure 244

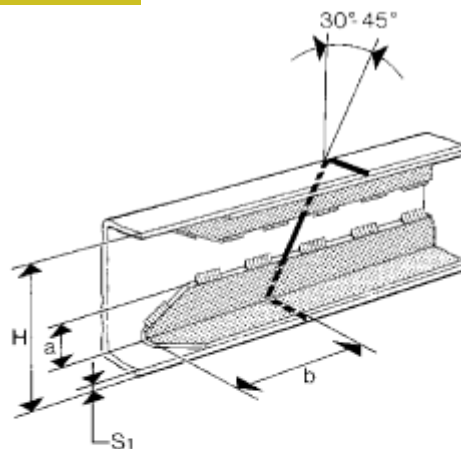

17364

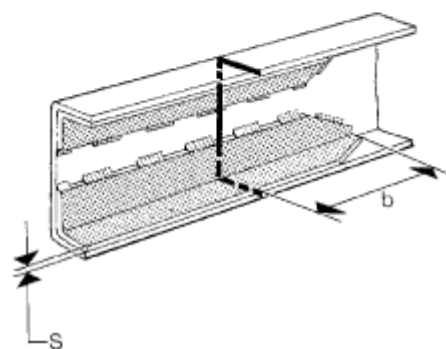

$$S \approx (0.8 \div 1) S_1$$

17365

Here we give the operating instructions for proper welding:

- Heat all around the area to weld (except for QST E 420 material). Do the arc welding with several passes, using thoroughly dried basic electrodes, or MIG-MAG procedures with suitable filler material. Do not overcharge with current. The weld must have no edge cuts or dross.
- Start back welding as specified in point (a).
- Leave the structural members to cool slowly and evenly. It is not permissible to use jets of air or other means.
- Grind off the excess material.
- Apply steel corner strengthening, with the same specifications as the steel used in the chassis frame. The approximate minimum dimensions are given in the above illustrations. They are to be fixed solely on the vertical rib of the structural member and it is possible to use bead welding, dummy spots, screws or rivets. The cross section and length of the weld bead, the number and distribution of the dummy spots, screws or rivets must be suited to transmit the bending and cutting moments of the section. On completing the work, the part involved in welding must be effectively protected with rust proofing.

Aquila Trucks Centres

SECTION 15

Programmed maintenance

	Page
DIAGRAM OF POINTS FOR CHECKS AND/OR MAINTENANCE OPERATIONS	3
MAINTENANCE SERVICES CHART	5
PROGRAMMED MAINTENANCE WITH HOUR INTERVALS (FOR VEHICLES USED IN QUARRIES AND CONSTRUCTION SITES)	5
CHECKS AND/OR MAINTENANCE OPERATIONS	6
- Hour interval schedule for quarries and construction site vehicles and off-road vehicles	6
TIMED OPERATIONS	7
- Plan with hour interval for quarry and building yard vehicles and for off-road vehicles	7
CHECKS AND/OR MAINTENANCE OPERATIONS (PLAN WITH HOUR INTERVALS)	8
M1 SERVICE	8
M2 SERVICE	11
M3 SERVICE	14
TIMED OPERATIONS WITH HOUR INTERVALS	15
T1 SERVICE	15
T2 SERVICE	15
T3 SERVICE	16
T4 SERVICE	17
T5 SERVICE	17
T6 SERVICE	17
T7 SERVICE	18
T8 SERVICE	18
PROGRAMMED MAINTENANCE WITH KM INTERVALS (For vehicles used on the road for medium and long distances)	19
CHECKS AND/OR MAINTENANCE OPERATIONS	20
- Schedule with km intervals for vehicles used on the road for medium and long distances	20

Aquila Trucks Centres


Page

EXTRA PLAN/TIMED OPERATIONS	21
- Plan with kilometer intervals for road use vehicles over middle to long runs	21
CONTROL AND/OR MAINTENANCE INTERVENTIONS (PLAN WITH KM INTERVALS)	22
M1 SERVICE	22
M2 SERVICE	25
M3 SERVICE	29
EXTRA PLAN/TIMED OPERATIONS (PLAN WITH KM INTERVALS)	29
EP1 SERVICE	29
EP2 SERVICE	31
T1 SERVICE	31
T2 SERVICE	32
T3 SERVICE	32
T4 SERVICE	32
T5 SERVICE	32
T6 SERVICE	33

Aquila Trucks Centres

DIAGRAM OF POINTS FOR CHECKS AND/OR MAINTENANCE OPERATIONS


Figure 1

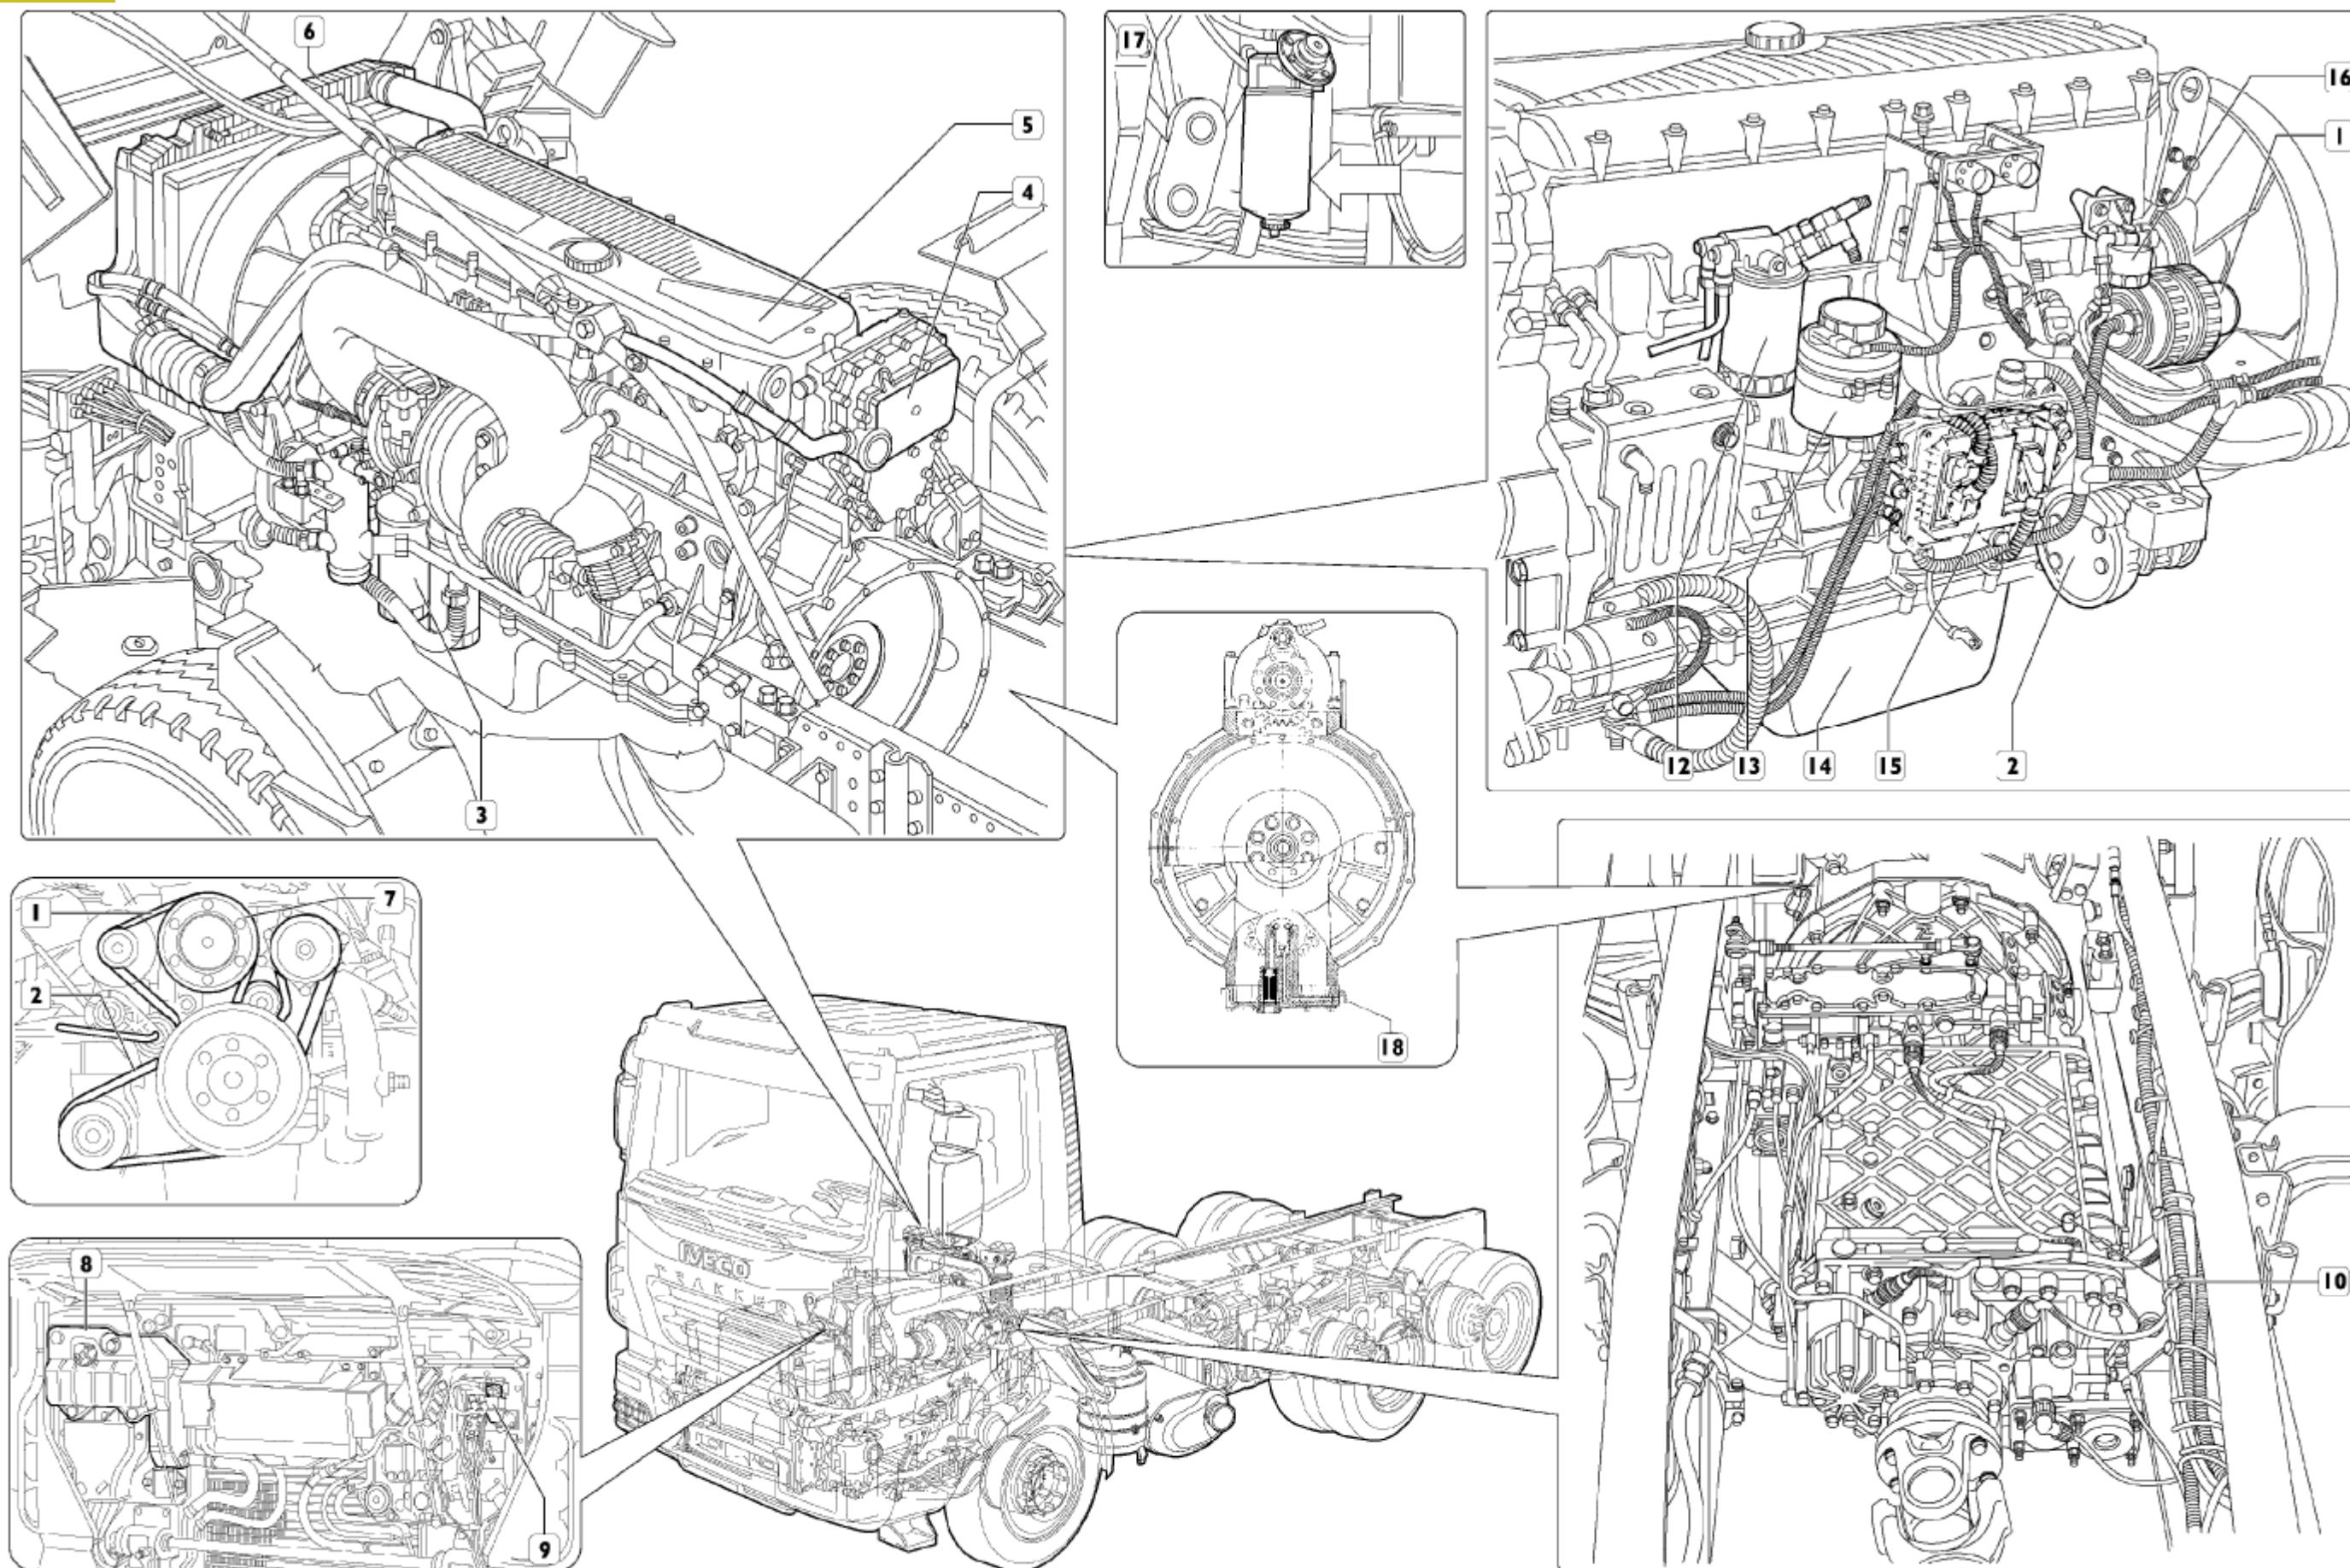

Aquila Trucks Centres

DIAGRAM OF POINTS FOR CHECKS AND/OR MAINTENANCE OPERATIONS

Figure 2

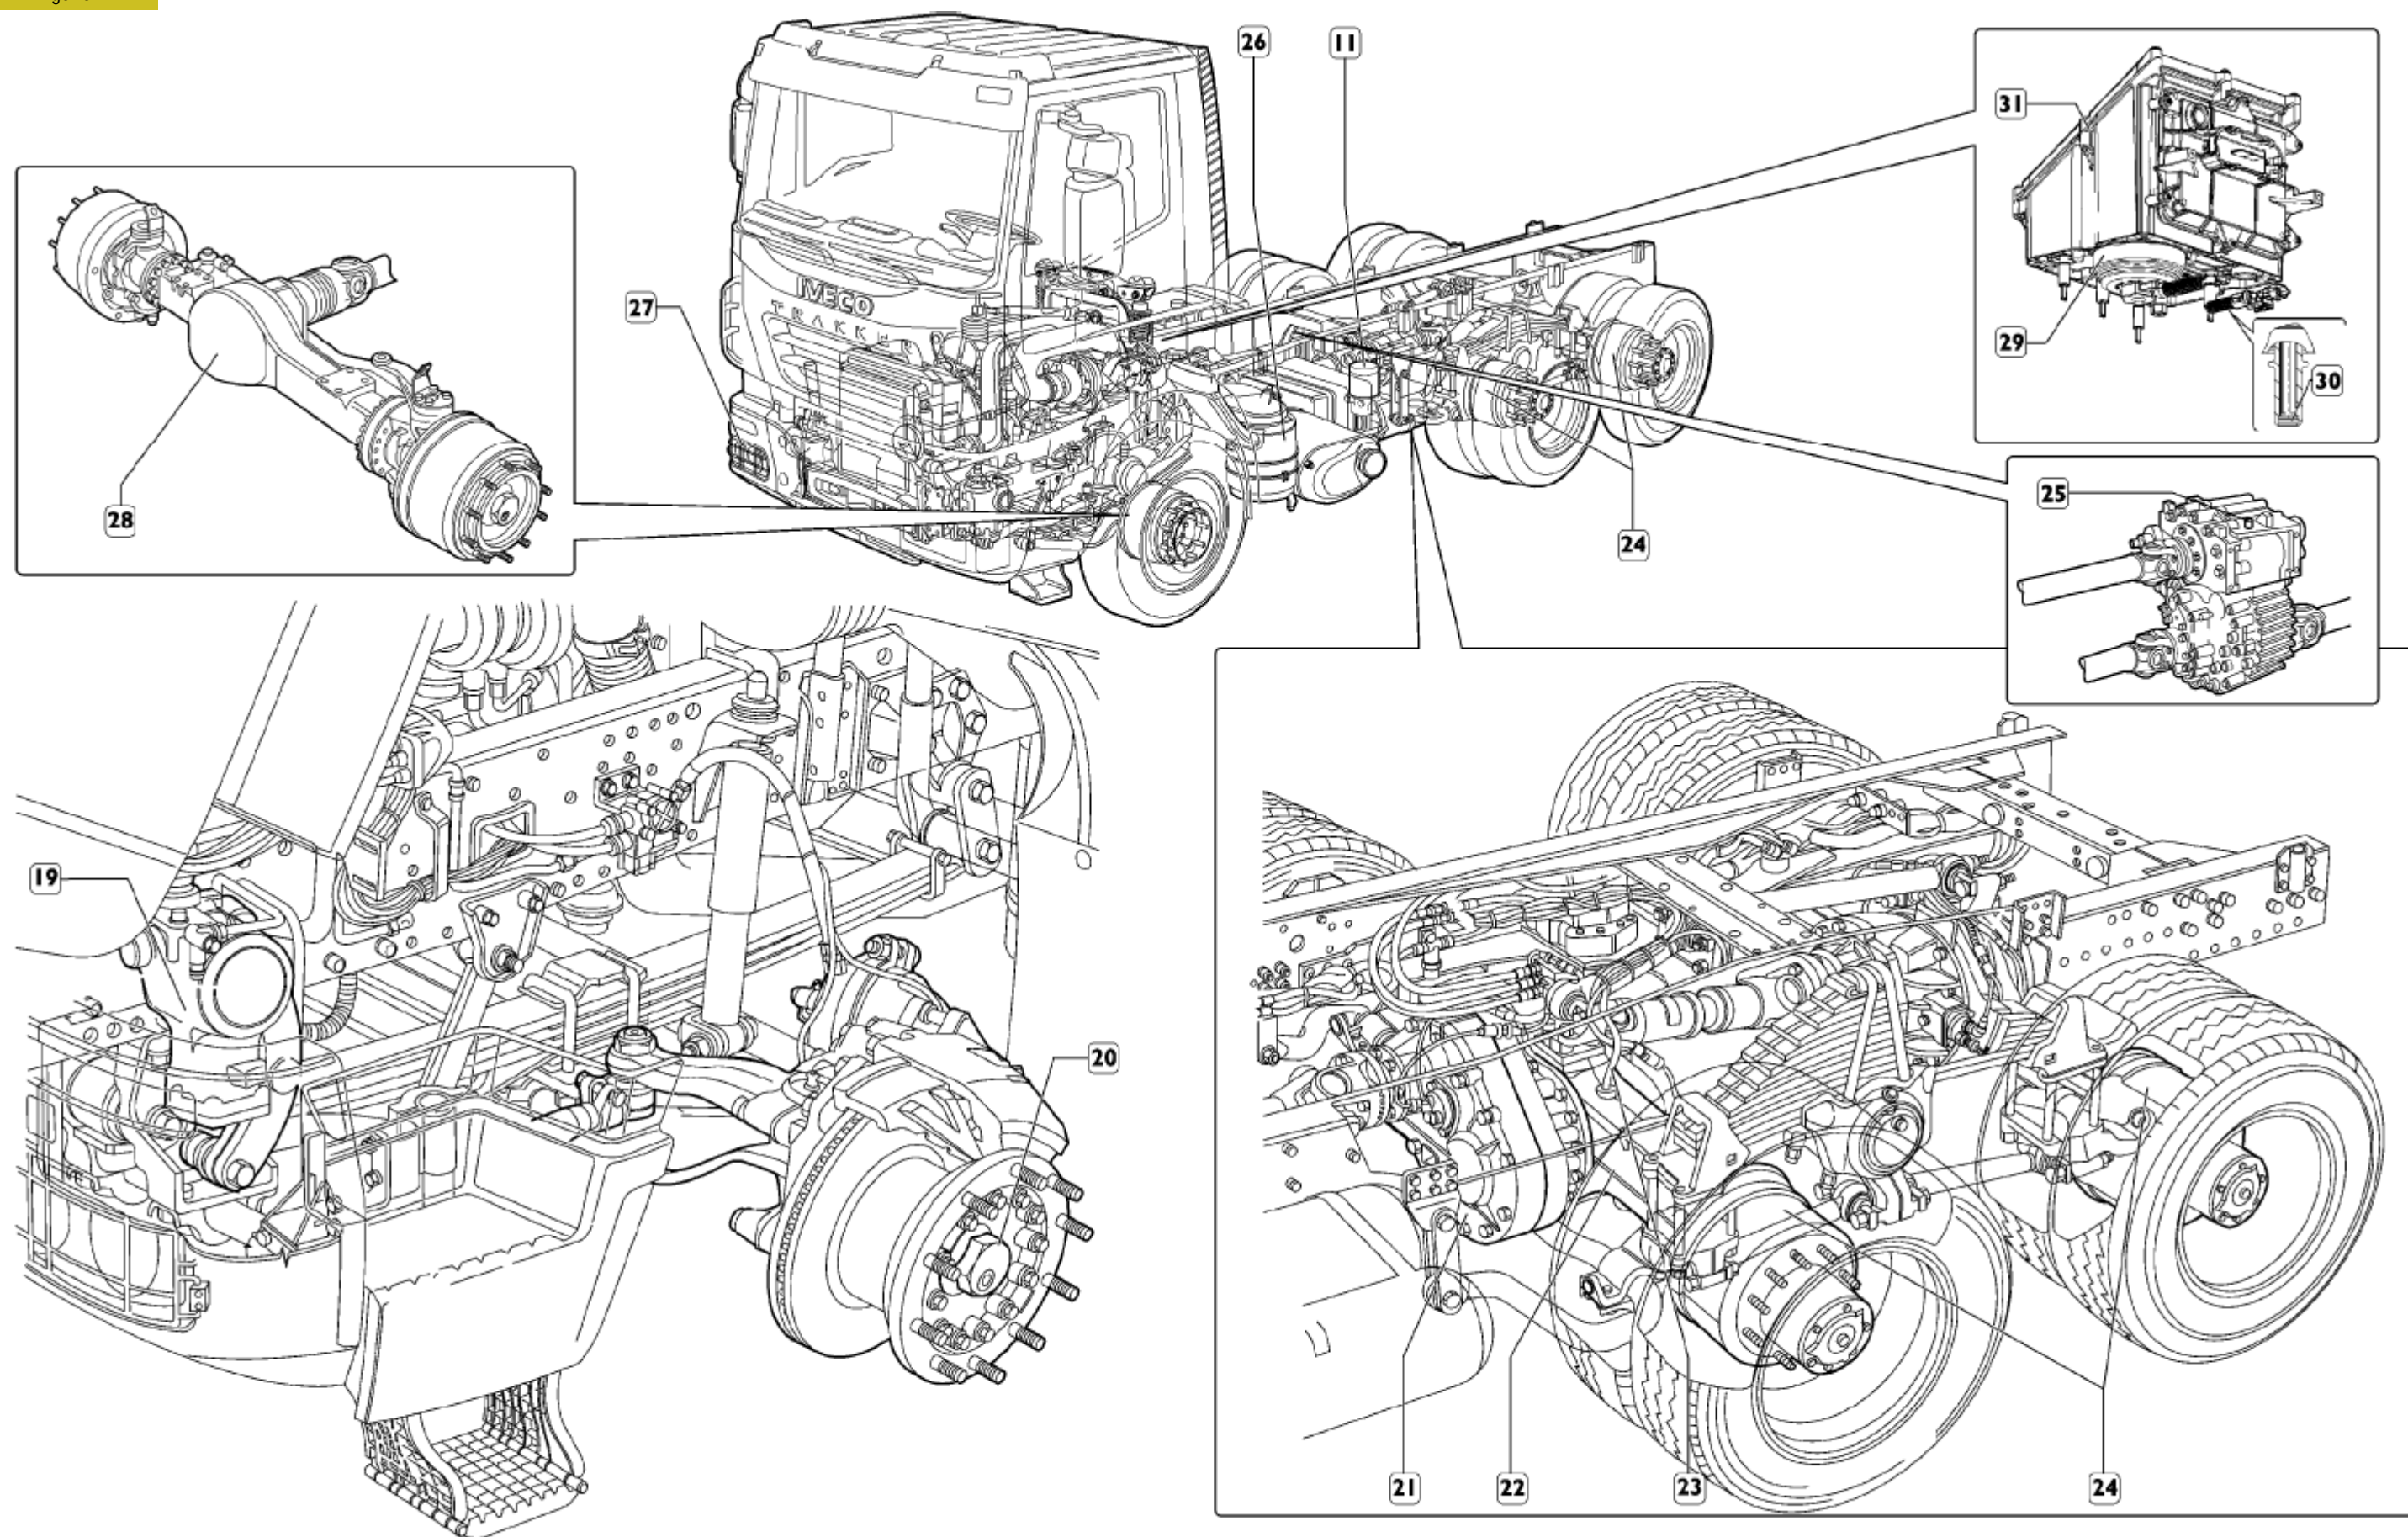

Aquila Trucks Centres

MAINTENANCE SERVICES CHART

The Extra Plan operations (designated with the letters EP) are complementary to standard services.

They are maintenance operations to be carried out at regular time or mileage intervals and concern optional components that are not present on all models.

Important! The correlation between kilometres and months only applies in cases where the distance travelled by the vehicle corresponds roughly to the specified average annual mileage. This is indicated only in order to suggest a hypothetical maintenance programme. Note that the time intervals specified for Extra Plan operations are to be adhered to regardless of the actual mileage covered.



The kilometre frequency for engine lubrication is in relation to a percentage of sulphur in diesel of under 0.5%.
NOTE: If using diesel with a percentage of sulphur above 0.5%, the oil-change frequency has to be halved.

Use engine oil: ACEA E4 (URANIA FE 5 W 30) - ACEA7 (URANIA LD7)

PROGRAMMED MAINTENANCE WITH HOUR INTERVALS (FOR VEHICLES USED IN QUARRIES AND CONSTRUCTION SITES)



- ACEA E4 lubricants classified as ACEA E6 cannot be used according to the change intervals established for class ACEA E4. They shall be changed according to the time intervals established for lubricants ACEA E2, i.e. every 400 hours.
- If class ACEA E7 (Urania LD7) engine oil is used, the engine oil and filters must be changed every 800 hours.
- If class ACEA E2 (Urania Turbo) engine oil is used, the engine oil and filters must be changed every 400 hours.
- In the event of very low annual operating time or anyway below 1000 hours/year, the engine oil and the filters shall be changed every 12 months.
- In the event of operating time below 1000 hours/year, the oil of the rear axles, distributor, transmission, etc. shall be changed at least every 2 years.
- The filter dryer of the pneumatic system must in any case be renewed every year.
- In the case of very low annual mileage, general greasing must be carried out at least once a year.

To schedule the work, keep to the following chart:

OILS	SERVICES			EXTRA PLAN							
				PROGRAMMED OPERATIONS							
	M1	M2	M3	T1	T2	T3	T4	T5	T6	T7	T8
Engine ACEA E4 (1) Urania FE5W30	Every 1000 hours	Every 1500 hours	Every 3000 hours	Multipo wer every 800 hours	Gearbo x oil and filter + Intarder (2)	Every 3 months	Every year before winter	Every year before summer	Every year	Every 2 years	Every 3 years

(1) IVECO suggests the use of these lubricants to raise the vehicle "fuel economy". The new vehicle is already equipped by IVECO with these types of lubricants, suitable also for cold climates (minimum temperature down to -30°). The change intervals depend on the use of these oils.

(2) See note at page 7.

Aquila Trucks Centres

CHECKS AND/OR MAINTENANCE OPERATIONS**Hour interval schedule for quarries and construction site vehicles and off-road vehicles**

Type of operation		M1	M2	M3
References figure 1/2	Engine			
14	Change engine oil	*		*
3	Replace engine oil filter	*		*
12	Replace fuel filter	*		*
1-2	Replace miscellaneous drive belts	*		
13	Replace or clean hydraulic steering system filter	*		*
15	Check-up of engine EDC system via MODUS, IT 2000 or E.A.S.Y.		*	*
5	Check valve clearance and adjust if necessary		*	*
16	Replace variable geometry turbocharger VGT air filter		*	*
1	Replace engine auxiliary member drive belt			*
2	Replace air-conditioner compressor drive belt			*
7	Checking fan electromagnetic joint clutch wear (if applicable)	*		*
	Chassis and mechanical assemblies			
17	Replace fuel pre-filter	*		*
10	Check efficiency and clean gearbox oil bleeds	*		*
9	Check clutch fluid level	*		*
11	Replace pneumatic system drier filter	*		*
*	Grease the VGT control lever		*	*
	Chassis and mechanical assemblies			
28	Check efficiency and clean drive axle oil bleeds (for 4x4, 6x6, 8x8 vehicles)	*		*
25	Clean divider oil bleeds between axles	*		*
23	Clean axle oil bleed	*		*
*	General greasing	*		*
28	Change drive axle oil (for 4x4, 6x6, 8x8 vehicles)		*	*
*	Change front side reduction gear oil (for 4x4, 6x6, 8x8 vehicles)		*	*
22	Change axle oil		*	*
20	Change front wheel hub oil (for 4x2, 6x4, 8x4 vehicles)		*	*
21	Change transmission assembly oil (for 6x4, 6x6, 8x8 vehicles)		*	*
25	Change transfer box oil (for 4x4, 6x6, 8x8 vehicles)		*	*
19	Control of the guide and support fixture		*	*
29-30	AdBlue system filter and pre-filter change		*	*
	Cab and electric appliances			
27	Check headlight adjustment		*	*
31	AdBlue system test with EASY, MODUS or IT2000	*	*	*
	Miscellaneous			
*	Handling operations (1)	*	*	*
*	Functional testing on road	*	*	*
*	Cabin tilting / opening / closure of cowling	*	*	*

(1) Vehicle and tooling handling activity in the workshop.

Aquila Trucks Centres

TIMED OPERATIONS**Plan with hour interval for quarry and building yard vehicles and for off-road vehicles**

T1	Every 800 hours
	Simultaneously with a maintenance service
534501	Replacing total power take-off (Multi-power) oil
T2	Every 1200 hours, gearboxes supplied with mineral oil (1) Every 2400 hours, ZF 9 S 1310 gearboxes supplied with synthetic oil (2) Every 3600 hours, ZF EUROTRONIC gearboxes supplied with synthetic oil (3)
	Together with maintenance operations
530105	Change oil and filter of ZF transmission + Intarder
530105	Change gearbox oil
T3	Every 3 months
553261	Checking anti-pollen filter (4) condition
506011	Washing radiator guard grid
T4	Every year - before Winter
	Possibly, and simultaneously with a maintenance service
506019	Checking coolant density
773130	Replacing additional heater fuel filter
T5	Every year - before Summer
	Possibly, and simultaneously with a maintenance service
506010	Checking possible radiator clogging
T6	Every year
	Possibly, and simultaneously with a maintenance service
505100	Replacing the cartridge and cleaning air filter container (5)
540450	Replacing blow-by filter
T7	Every 2 years
	Possibly, and simultaneously with a maintenance service
506010	Replacing engine coolant
T8	Every 3 years
	Possibly, and simultaneously with a maintenance service
505292	Replacing oil and draining clutch hydraulic control

- 1) ZF Ecosplit gearboxes supplied with mineral oil, in the event of very low annual operating time change the oil every year
- (2) ZF New Ecomid gearboxes supplied with synthetic oil, in the event of very low annual operating time change the oil every 2 years
- (3) ZF Eurotronic gearboxes supplied with synthetic oil, in the event of very low annual operating time change the oil every 3 years
- (4) In case of low runs, perform filters replacement once a year, at every start of Spring.
- (5) Early air filter clogging is generally caused by environmental conditions; for this reason, air filter must be replaced when relating warning from special sensor is issued independently of relevant prescription, which must be anyhow observed in lack of specific indications.


Aquila Trucks Centres

CHECKS AND/OR MAINTENANCE OPERATIONS (PLAN WITH HOUR INTERVALS)

M1 SERVICE

542710 Change engine oil


Figure 3

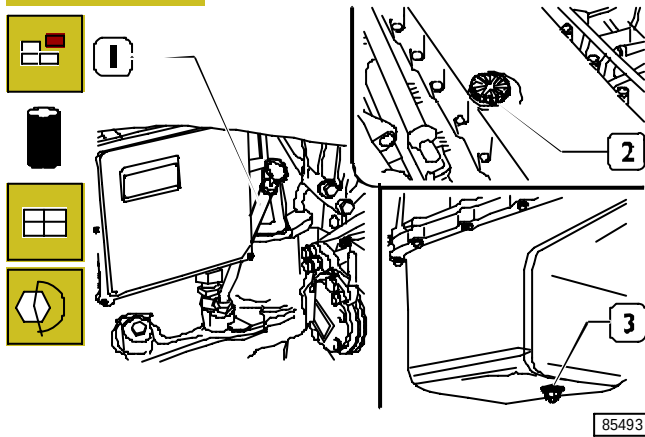

Take out the oil level dipstick (1).
From underneath the vehicle, remove the soundproofing guard.
Unscrew the plug (3) from the oil sump and drain the engine oil off into a specific container.
Screw the plug back on under the sump and tighten it to the required torque.
Fill in with the prescribed oil quantity and quality (see the CAPACITIES table in the GENERAL INFORMATION section) from the tie rod cover pipe union (2).

543420 Replace engine oil filters

Figure 4

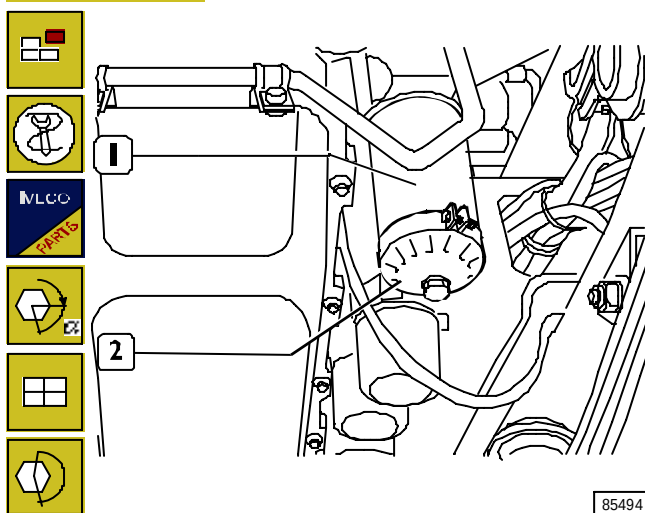


Drain the oil as described in point "Changing engine oil."
Remove the oil filter (1) with tool 99360314 (2).

NOTE Before refitting the new cartridges, moisten the seal with engine oil.

Screw the oil filters (1) on by hand to bring them into contact with the mount and then tighten by 3/4 of a turn to the prescribed torque and proceed as described in point "Changing engine oil."

543450 Check electromagnetic coupling clutch wear


Figure 5

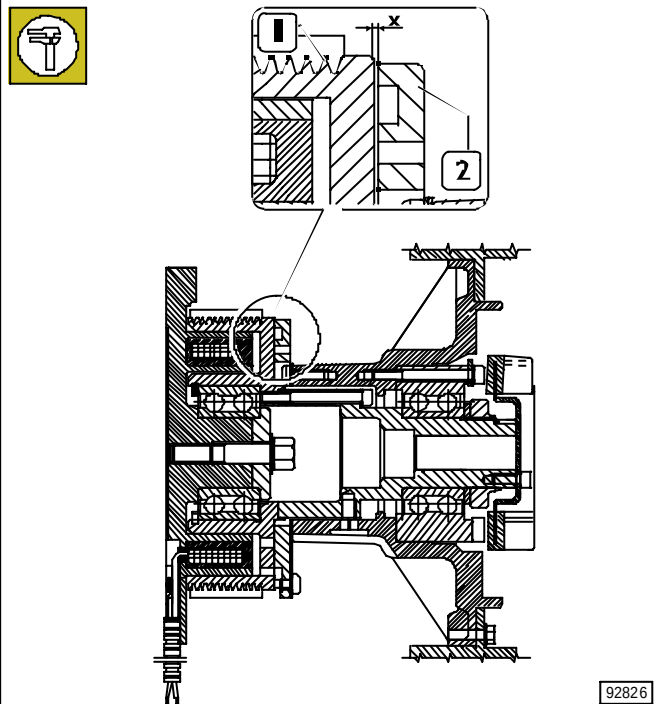

Using a feeler gauge, check the gap between the anchor assembly (2) and the pulley (1), it must be no greater than 2.5 mm.

540843/543934 Check miscellaneous drive belts

Figure 6

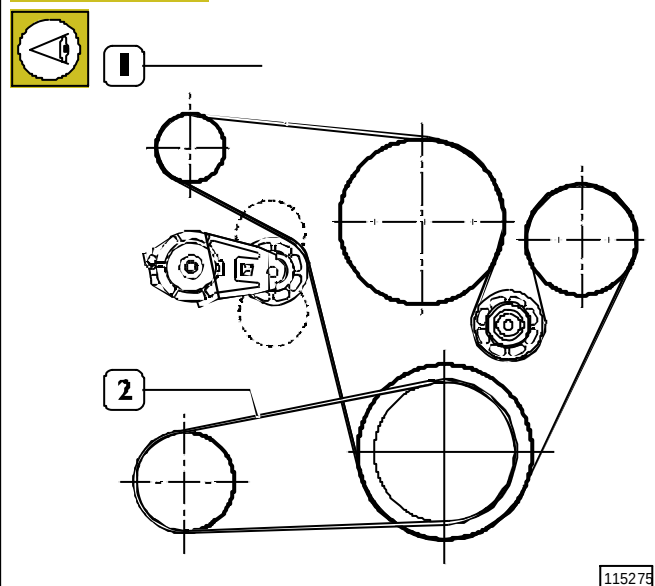


Visually check that the belts (1-2) are neither worn nor deteriorated; if they are, change them as described in the M3 service.

Aquila Trucks Centres

544221 Replace or clean hydraulic steering system filter

Figure 7

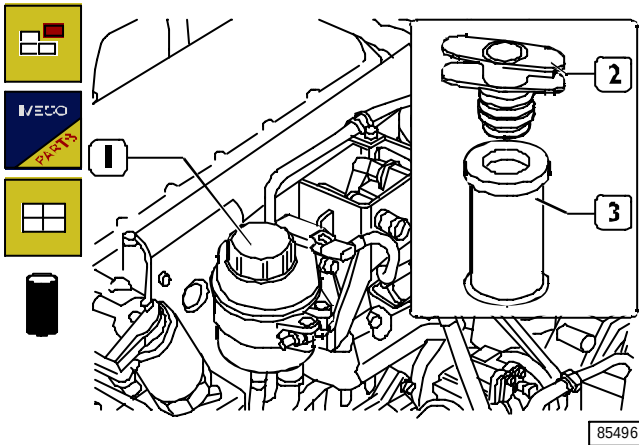

Before taking off the cover (1), thoroughly clean the tank.

This will prevent foreign impurities from coming into contact with the oil of the hydraulic system.

Take the cover (1) off the tank and take out the oil filter (3).


Remove the coupling device (2) from the oil filter (3) and replace the filter.

Take off the plug (1) (after unhooking the transmitter) of the hydraulic power steering tank and check that with the engine running and the wheels travelling in a straight line, the oil level reaches the top reference mark on the dipstick.

With the engine stationary and wheels in a straight line, the oil level has to exceed the top reference mark of the dipstick by 1 or 2 cm; if necessary, top up the level by taking off the cover (1).

507210 Replace pre-filter

Figure 8

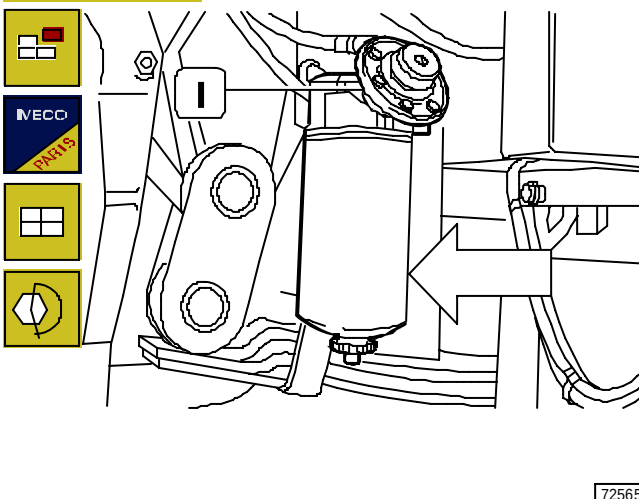

Unscrew the pre-filter (1) and replace it.


Before refitting the new cartridge, moisten the seal with diesel or engine oil. Screw the cartridge on by hand until it is in contact with the mounting and then tighten by 3/4 of a turn to the required tightening torque.



When replacing the cartridge, it must not have been pre-filled. This is to prevent impurities getting into circulation that could damage the injector/pump system components. Bleed the air from the fuel circuit as described on the previous pages.

542093 Replace fuel filter

Figure 9

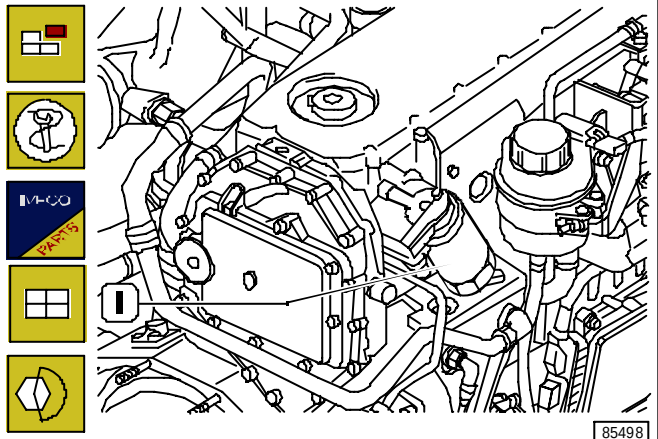

Remove the fuel filter (1) with tool 99360314.


Before refitting the new cartridge, moisten the seal with diesel or engine oil.

Screw the new one on by hand, taking care to check that the rubber seal and the mating surface are clean and in a perfect state of repair. Screw the cartridge on by hand until it is in contact with the mounting and then tighten by 3/4 of a turn to the required tightening torque.

Bleed the air from the supply system as described in the following paragraph.

530105 Clean gearbox oil breather (ZF 9/16S gearboxes)

Figure 10

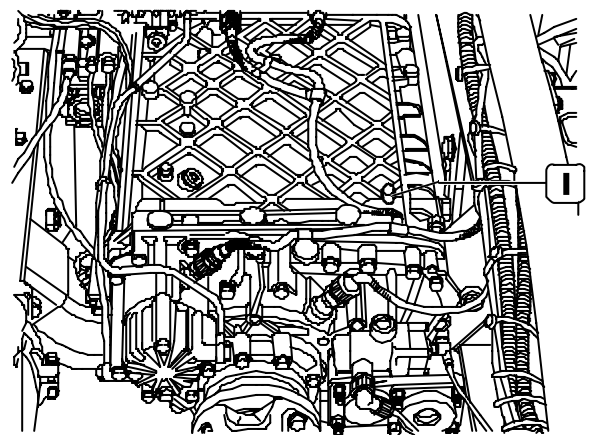


Remove the oil vapour breather (1) and clean it thoroughly. Then fit it back on, checking it is in the right position, and tighten it to the required torque.

Aquila Trucks Centres

(ZF 12AS gearboxes)

Figure 11

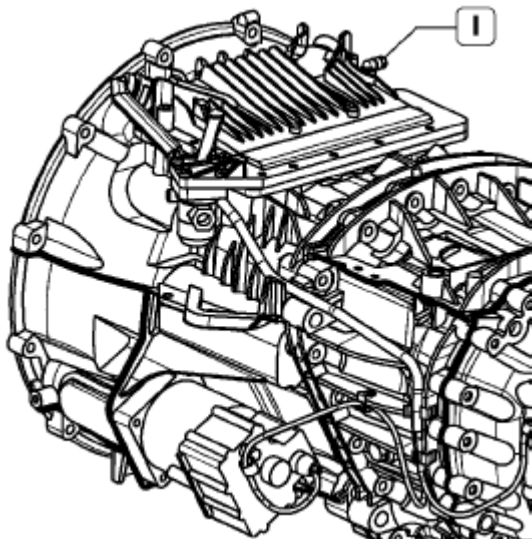


115277

Remove the oil vapour breather (1) and clean it thoroughly. Then fit it back on, checking it is in the right position, and tighten it to the required torque.

**505292 Check clutch fluid level
(Excluding vehicles with EuroTronic gearbox)**

Figure 12

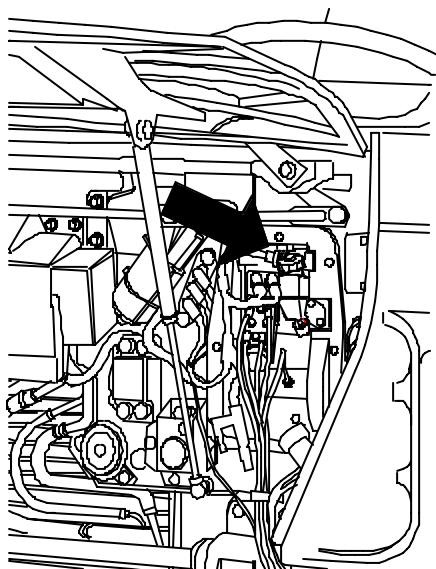

98879


Check the level of the clutch fluid. Top it up if it is too low (see the fluids table in the GENERAL section).



The clutch fluid is poisonous and corrosive: if you accidentally come into contact with it, wash immediately with water and a neutral soap.

503447 Replace pneumatic system drier filter

Figure 13

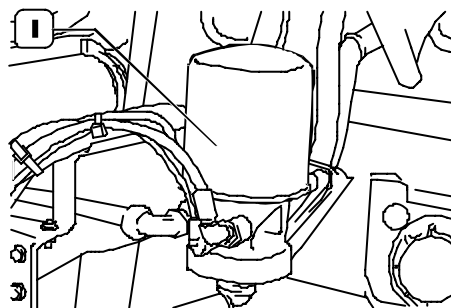


72569

Discharge the pressure from the compressed air system.

Unscrew the drier filter (1) and replace it. Tighten it to the required torque, checking there is no air leakage when pressure is restored.

**522810 Cleaning engine front axle oil
(for versions 4x4/ 6x6/ 8x8 only)**

Figure 14

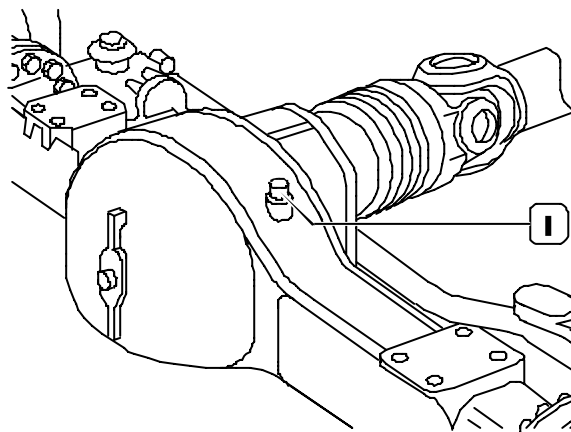


72574

Remove the oil vapour breather (1) and clean it thoroughly. Fit it back on, checking it is in the right position, and tighten it to the required torque.

Aquila Trucks Centres

505401 Clean oil breather on transfer box (with hours intervals)

Figure 15

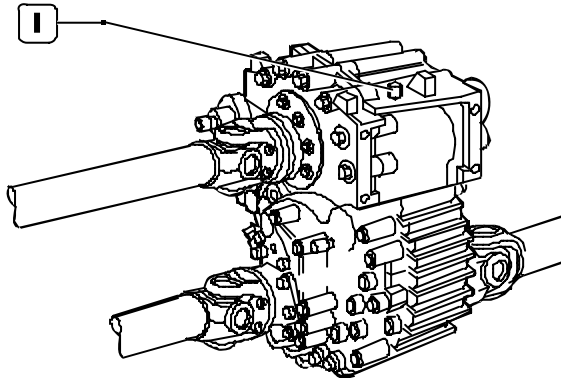


72575

Remove the oil vapour breather (1) and clean it thoroughly. Fit it back on, checking it is in the right position, and tighten it to the required torque.

525013 Clean oil breather on axles

Figure 16

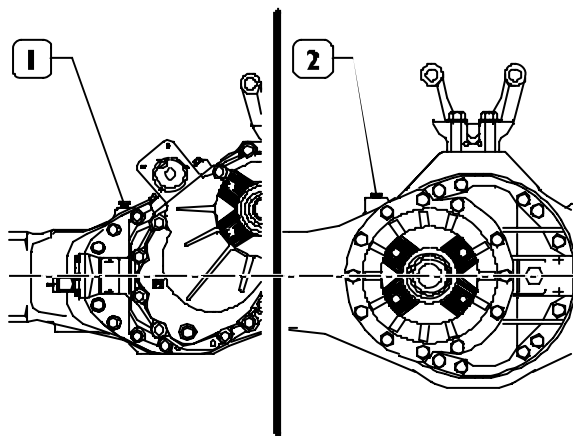

72576

Remove the oil vapour breathers (1) from the middle axle and (2) from the rear axle and clean them thoroughly. Fit them back on, checking they are in the right position, and tighten them to the required torque.


- **General greasing**
- **Handling operations**
- **Functional on road testing**
- **Tilting the cab, opening/closing the front grille**
- **Check AdBlue system using EA.SY. MODUS or IT2000**

M2 SERVICE

- **Check-up on EDC system with MODUS IT2000 or EA.SY.**
- **Check AdBlue system using EA.SY. MODUS or IT2000**

540613 Check valve clearance and adjust if necessary

Figure 17

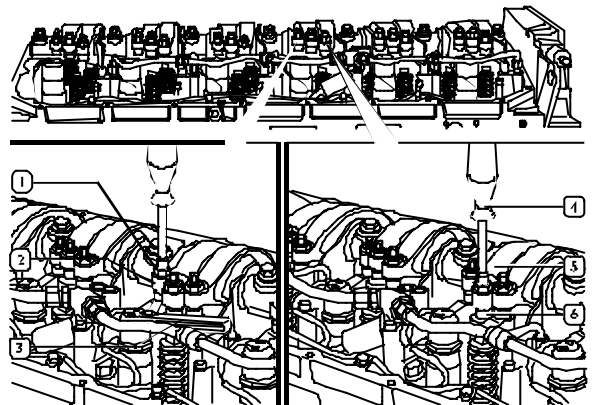


86835

To perform these operations correctly, proceed as described under the relevant heading in the "ENGINE" section.

542406 Replace variable geometry turbocharger (VGT) valve air filter (Cursor Engine)

Figure 18

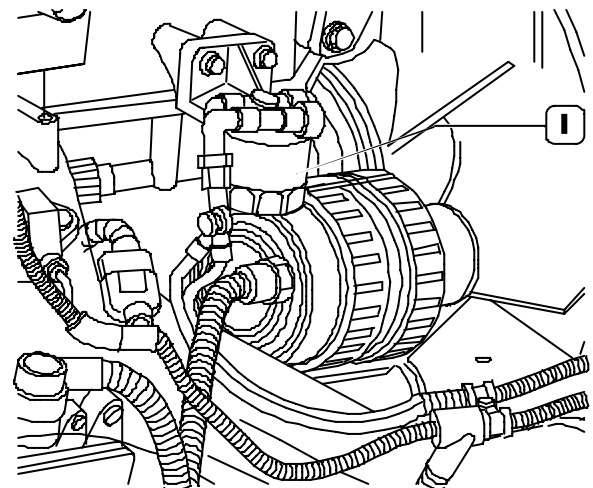

72577


NOTE In versions with Cursor 8 engine the filter is assembled on the chassis.

Using a suitable tool, unscrew the filter (1) and replace it. Before fitting the new cartridge, moisten the seal with diesel or engine oil. Screw it on by hand until it is in contact with the mounting and then tighten by 3/4 of a turn to the required tightening torque.

Aquila Trucks Centres

**522810 Change drive axle oil
(4x4, 6x6, 8x8 versions only)**

Figure 19

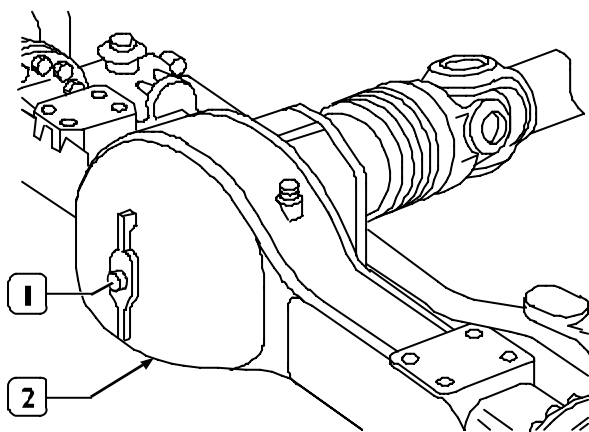


72580

- With the axle warm, take off the plug (2) and drain the oil into a specific container.
- Pour in fresh oil through the hole closed by the plug (1) (see under the FLUIDS heading of the GENERAL section).
- Clean the oil vapour breather.
- Tighten the plugs to the required torque.

**522870 Change front side reduction gear oil
(4x4, 6x6, 8x8 versions only)**

Figure 20

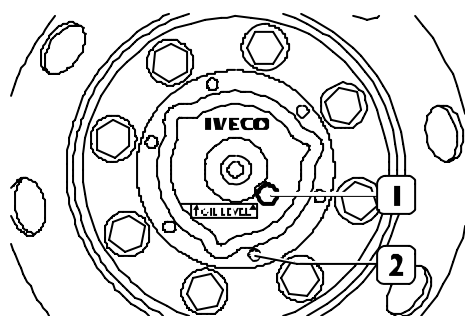


72581

Change the oil as follows:

- Set the plug (1) as shown in the figure and the "OIL LEVEL" line exactly horizontal.
- Open the screw (2) and drain off the oil into a specific container.
- Pour in fresh oil through the hole closed by the plug (1) (see SPECIFICATIONS AND DATA in the "REAR AXLE" section).
- Before screwing the plug (1) and screw (2) back on, spread sealant paste on them and tighten them to the required torque.

**525110/525010 Change axle oil
Transmission and middle axle**

Figure 21

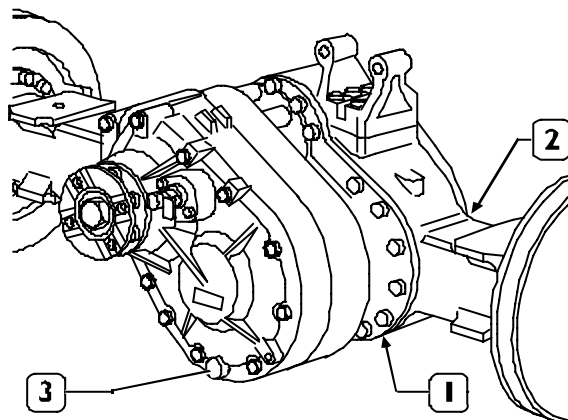


72582

- With the axle warm, unscrew the plugs (1) and (3) and drain off the spent oil into a specific container.
- Screw the plugs back on and pour in fresh oil through the hole closed by the plug (2) (for the quantity, see under the FLUIDS heading of the GENERAL section).
- Clean the oil vapour breather.
- Tighten the plugs to the required torque.

Rear axle

Figure 22

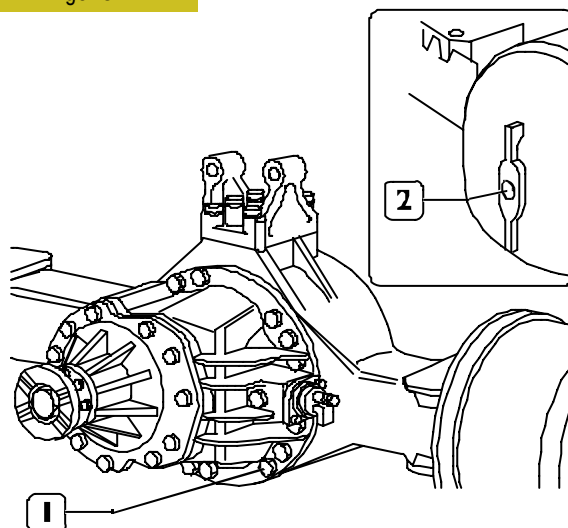


72583

- With the axle warm, unscrew the plug (1) and drain off the oil into a specific container.
- Pour in fresh oil through the hole closed by the plug (2) (see under the FLUIDS heading of the GENERAL section).
- Clean the oil vapour breather of the axle.
- Tighten the plugs to the required torque.

Aquila Trucks Centres

**520620 Change front wheel hub oil
(4x2, 6x4, 8x4 versions only)**

Figure 23

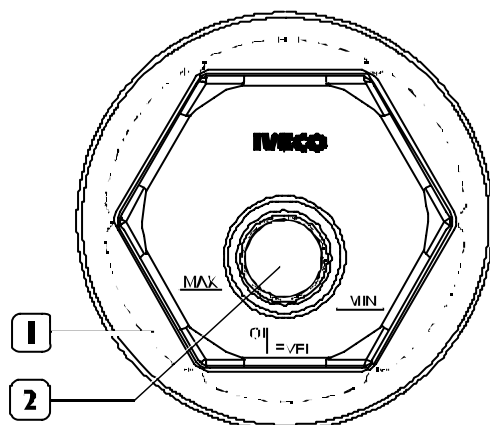

79068

Proceed as follows:

- remove plug (1) and suck oil with suitable syringe;
- fill the wheel hub with new oil (for the quantity and type of oil, see CHARACTERISTICS AND DATA in the "AXLES" section).

Oil level is checked through plug (2) slide with max and min writings on cover (1) in horizontal position.

**505401 Change transmission assembly oil
(6x4, 6x6, 8x8 versions only)**

See the procedures for changing the transmission and middle axle oil described above.


■ **Replace AdBlue filter and prefilter**

In order to carry out these operations correctly, proceed as described in the relevant chapter of section "ENGINE".

■ **Grease the VGT control lever**

**505401 Change reduction gear - divider oil
(4x4, 6x6, 8x8 versions only)**

Figure 24

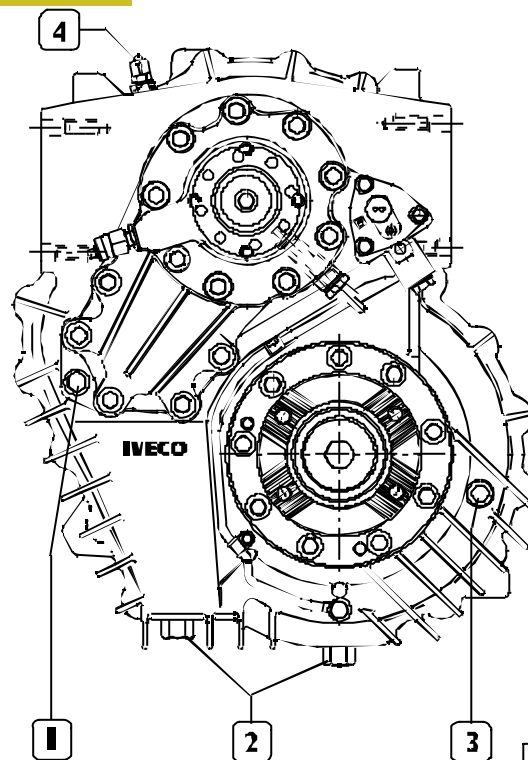


72584

- With hot distributor, slacken the drain plugs (2) and drain the oil in a suitable container.
- Tighten the plugs (2) to torque 60 Nm x TC 1800, 78 Nm x TC 2200 and clean the oil breather (4).
- Remove the plugs (1 and 3), fill through the plug hole (1) the prescribed quantity and type of oil, see chapter GENERALITIES in the "AXLE" section.

Filling is correct when the oil reaches the plug hole (3). Drive in the plugs (1 and 3) and tighten them to the prescribed torque.

501401 Check steering box fixing and mounting

Figure 25

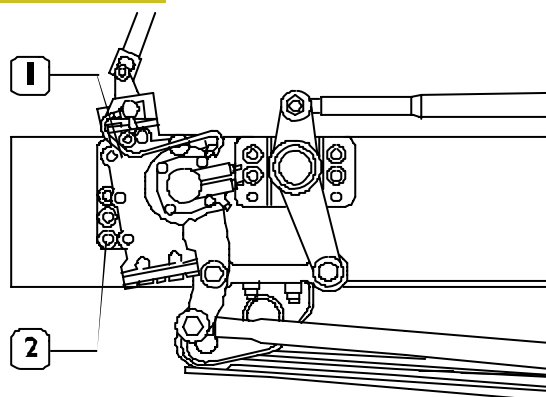

86836


Check that the fastenings of the steering box (1) and mounting (2) are tightened to the required torque.

Aquila Trucks Centres

M3 SERVICE

760044 Check headlight adjustment


Figure 26

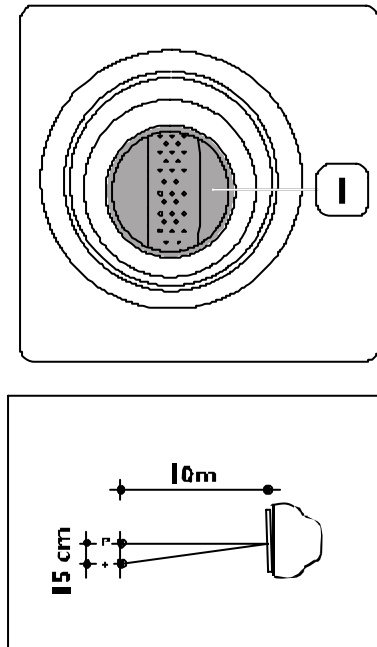

98882

- Place unloaded vehicle, with tyres at prescribed pressure, on flat ground, facing a light colour wall located at 10 metre distance.
- Mark two crosses on the wall corresponding to the centres of the two headlights.
- By using control (1), position headlights with inclination zero. Inclination can be displayed on CLUSTER display unit.

Figure 27

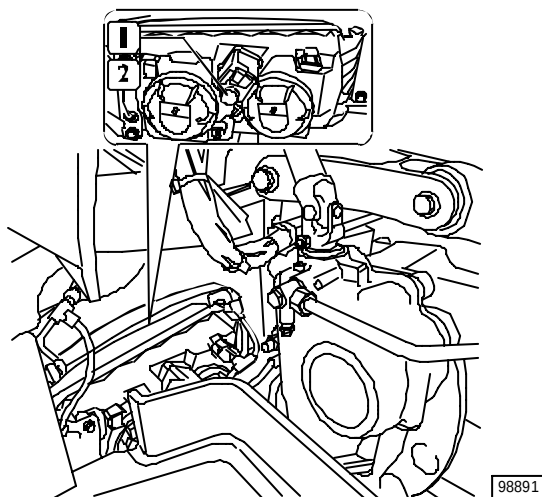

98891


- Tilt the cab and turn on the low beam. The distance between the crosses and the points P, which correspond to the angle of the headlights, has to be 15 cm.
- Adjust light beam according to horizontal and vertical directions by operating on screws (1 and 2).
- **Handling operations**
- **Functional testing on road**
- **Cabin tilting / opening / closure of front grille**

NOTE The M3 service comprises the operations of the M1 and M2 services plus the ones listed here.

543411 Replace auxiliary member drive belt

543910 Replace air-conditioner compressor drive belt

Figure 28

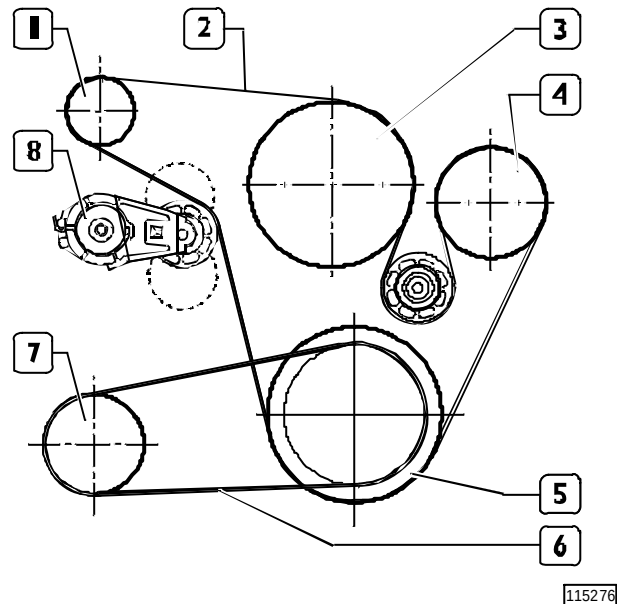

115276

ASSEMBLY DIAGRAM OF BELTS FOR FAN - WATER PUMP - ALTERNATOR AND AIR-CONDITIONER COMPRESSOR


1. Alternator - 2. Drive belt - 3. Fan - 4. Water pump -
5. Crankshaft - 6. Spring belt - 7. Air-conditioner compressor - 8. Drive belt automatic tensioner

In order to carry out these operations correctly, proceed as described in the relevant chapter of section "ENGINE".

Aquila Trucks Centres

TIMED OPERATIONS WITH HOUR INTERVALS**T1 SERVICE****534501 Change "Multipower" total power take-off oil (if applicable)**

Figure 29

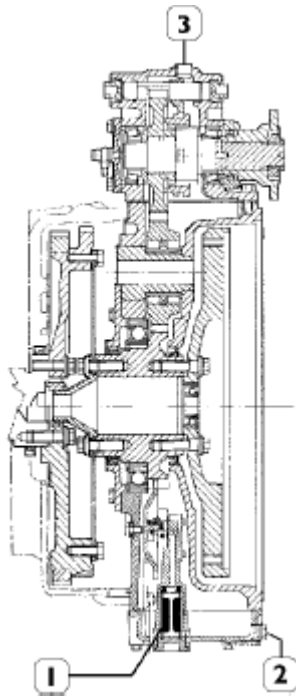

72589

Set the vehicle horizontal and stop the engine. Position a suitable container to collect the oil.

- Unscrew the drain plug (2).
- Unscrew the filter (1) and clean it thoroughly.


To restore the oil level, screw the filter (1) and drain plug (2) back on to the required torque, checking the state of the seals.

Replace them if they have deteriorated. Then:

- Unscrew the plug (3) and add the required amount of oil (see FLUIDS in GENERAL INFORMATION).
- Screw the plug back on to the required torque.

T2 SERVICE**530105 Change oil and filter of ZF 16 S gearbox + Intarder**


Figure 30

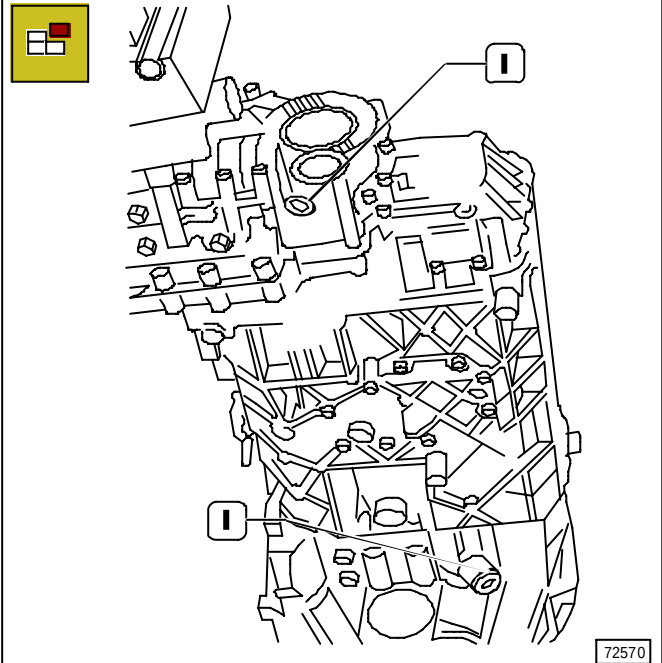

72570

- With the gearbox warm, take off the plugs (1) and drain the oil into a specific container.

Figure 31

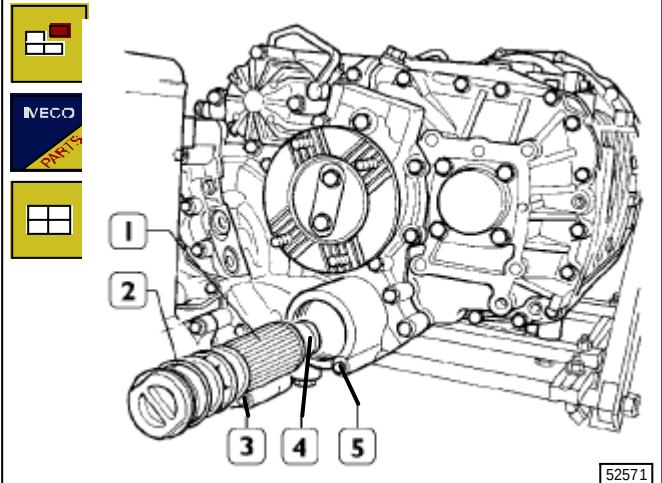

52571


Remove the oil filter as follows:

- unscrew the screw (5) fixing the filter;
- take off the cover and filter (1);
- remove the cover from the filter and replace it. Take care not to lose the magnetic pad (4) on the outer edge of the filter, as it has to be repositioned on the new filter;
- check the state of the o-ring (2) and replace it, if necessary;
- grease the o-ring (3) inserted in the assembly opening of the new filter;
- couple the new filter with its cover and insert it into its seat as far as it will go. Secure the screw (5).

Aquila Trucks Centres

530105 Change gearbox oil (ZF mechanical gearboxes)


Figure 32

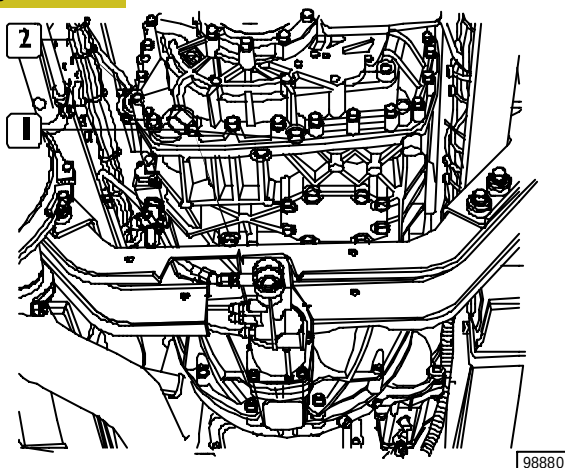

- With the gearbox warm, take off the plug(s) (1) and drain the oil into a specific container.
- The oil should be drained off taking care not to dirty the cross member beneath as it is near the outlet on some types of gearbox.
- It is therefore wise to use a tool to convey the oil away.
- Pour in fresh oil through the hole closed by the plug (2) (for the quantity, see under the FLUIDS heading of the GENERAL section).
- Tighten the plugs to the required torque.

(ZF 12AS gearbox)


Figure 33

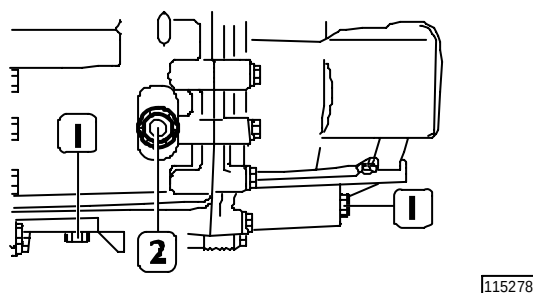

- With the gearbox warm, take off the plug(s) (1) and drain the oil into a specific container.
- The oil should be drained off taking care not to dirty the cross member beneath as it is near the outlet on some types of gearbox.
- It is therefore wise to use a tool to convey the oil away.
- Pour in fresh oil through the hole closed by the plug (2) (for the quantity, see under the FLUIDS heading of the GENERAL section).
- Tighten the plugs to the required torque.

T3 SERVICE**553261 Checking anti-pollen filter condition**

Figure 34

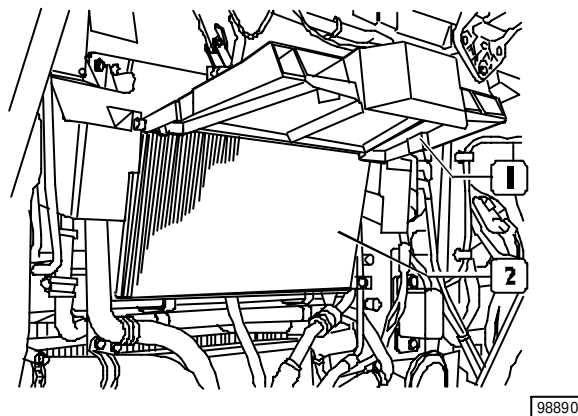

Check the state of clogging of the pollen filter (2). Anti-pollen filter can be accessed by lifting front cowling and under door (1).

NOTE Excessive clogging of the pollen filters can cause a reduction in the flow rate of air into the cab and therefore less ventilation. This will be highlighted especially by a significant reduction in the efficiency of the windscreen defrosting function.


506011 Wash radiator grille

Lift the cab radiator cowling and carefully clean the radiator grille.

Aquila Trucks Centres

T4 SERVICE**506019 Check percentage of antifreeze in the engine coolant**

Figure 35

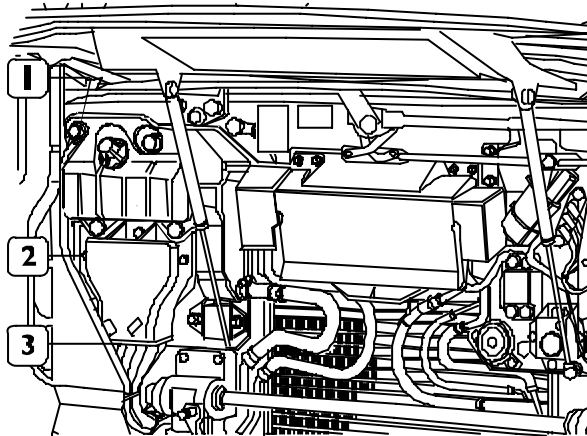

98881



The plug (1) must never be taken out for any reason whatsoever. With the engine warm, the cooling system is in overpressure, therefore take care when taking off the cap (2).

Take off the cap (2) and draw off a sample of the coolant from the expansion tank (3) with the densimeter 99395858.

Depending on the temperature of the liquid, check the percentage of antifreeze in the liquid on the scale of the instrument. The percentage has to be higher than 40% and must not exceed 50%.


If necessary, restore the percentage of antifreeze, bearing in mind that the liquid needs to be replaced every 2 years.



For vehicles fitted with an additional heater, the percentage of antifreeze must never exceed 50%.

773130 Replacing additional heater fuel filter**T5 SERVICE****506010 Checking possible radiator clogging****T6 SERVICE****505100 Replacing air filter cartridge in dry conditions and cleaning the container**


Figure 36

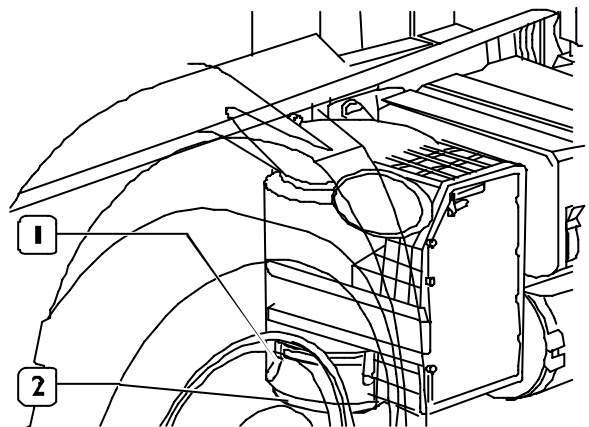

72590

- Unhook the clamps (1) (or, depending on the version, unscrew the nut) and take off the bottom cover (2).

Figure 37

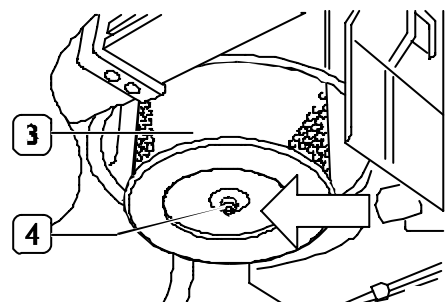

72591


- Unscrew the nut (4) and take out the cartridge of the filter (3).

Before fitting the new cartridge, clean its housing thoroughly.

Aquila Trucks Centres

540450 Replacing engine blow-by filter

Figure 38

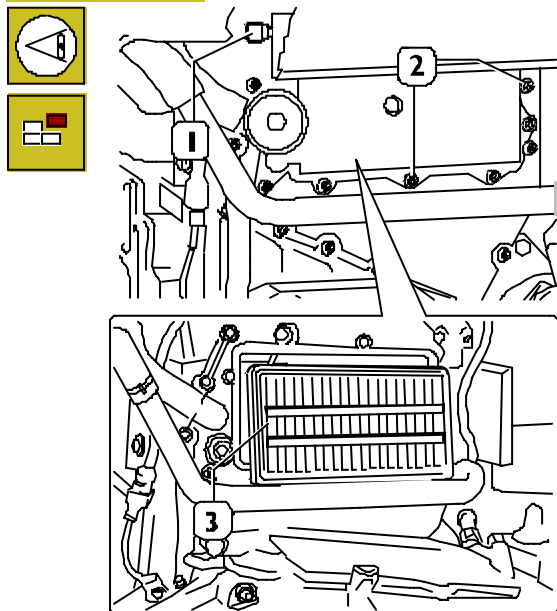

72563

- Unscrew the screws (2), take off the casing, take out the filter (3) and replace it with a new one. The filter works in a single direction, so you need to mount it with the two strengthening bars in view as shown in the figure.

T7 SERVICE**506010 Changing engine coolant**

Perform procedure described in relating paragraph in section "ENGINE".


T8 SERVICE**505292 Change the clutch fluid and make air bleeding (only versions with mechanical transmission)**

Drain off the clutch control fluid and change it (see Fluids table in GENERAL section).



The clutch fluid is poisonous and corrosive: if you accidentally come into contact with it, wash immediately with water and a neutral soap.

Figure 39

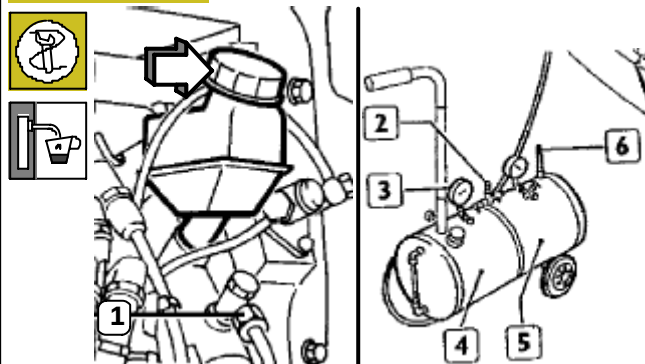


After changing the fluid, bleed the hydraulic clutch control system.

Use the air bleeding tool 99306010 as follows:

- charge reservoir (5) with compressed air;
- fill reservoir (4) with Tutela TRUCK DOT SPECIAL fluid
- replace the cap (⇒) of the clutch fluid reservoir with one of the caps supplied with the tool 99306010 and connect the pipe to the cap.

Figure 40

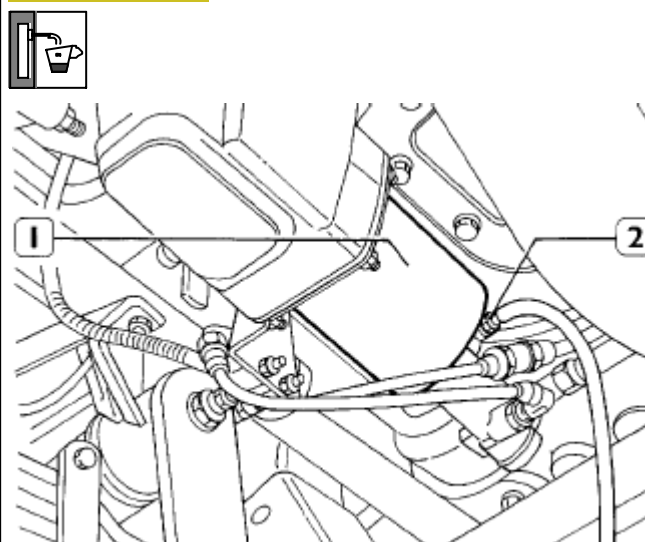

40355

- Attach a plastic tube to the bleed screw (2) on the slave cylinder (1) and immerse the opposite end of the tube in a container containing Tutela TRUCK DOT SPECIAL fluid, unscrew the bleed screw (1) by one full turn, open the valve (2) (see Figure 39) until a pressure reading of 1 to 1.2 bar is obtained on the pressure gauge (3);
- when the clutch fluid flowing through the tube is uniform and free of air bubbles, close the bleed screw and discharge the air from the reservoir (5) through valve (6).

NOTE Whenever the clutch fluid is changed, it will also be necessary to bleed the clutch master cylinder by loosening the fitting (1, Figure 39) before bleeding the clutch servo.

Aquila Trucks Centres

PROGRAMMED MAINTENANCE WITH KM INTERVALS
(For vehicles used on the road for medium and long distances)


- ACEA E4 lubricants classified as ACEA E6 cannot be used according to the change intervals established for class ACEA E4. They shall be changed according to the time intervals established for lubricants ACEA E2, i.e. every 400 hours.
- If class ACEA E7 (URANIA LD7) engine oil is used, the engine oil and filters must be changed every 80,000 km.
- If class ACEA E2 (URANIA TURBO) engine oil is used, the engine oil and filters must be changed every 40,000 km.
- In the event of very low distances travelled per year or anyway below 100,000 km/year, the engine oil and the filters must be changed every 12 months.
- If using diesel with a percentage of sulphur above 0.5%, the oil-change frequency has to be halved.
- In the event of very low distances travelled per year, the oil of the rear axles, distributor, transmission, etc. must be changed at least every 2 years.
- The filter dryer of the pneumatic system must in any case be renewed every year.
- In the case of very low annual mileage, general greasing must be carried out at least once a year.

To schedule the work, keep to the following chart:

OILS	SERVICES			EXTRA PLAN		PROGRAMMED OPERATIONS					
Engine ACEA E4 (1) Urania FE5W30	M1	M2	M3	EP1	EP2	T1	T2	T3	T4	T5	T6
	Every 100,000 km	Every 150,000 km	Every 300,000 km	Change gearbox oil (2)	Every 240,000 km	Every 6 months	Every year before winter	Every year before summer	Every years	Every 2 years	Every 3 years

(1) IVECO suggests the use of these lubricants to raise the vehicle "fuel economy". The new vehicle is already equipped by IVECO with these types of lubricants, suitable also for cold climates (minimum temperature down to -30°). The change intervals depend on the use of these oils.

(2) See note at page 7.

Aquila Trucks Centres

CHECKS AND/OR MAINTENANCE OPERATIONS**Schedule with km intervals for vehicles used on the road for medium and long distances**

Type of operation		M1	M2	M3
References figure 1/2	Engine			
14	Change engine oil	*		*
3	Replace engine oil filter	*		*
12	Replace fuel filter	*		*
4	Blow-by filter replacement		*	*
1-2	Check miscellaneous drive belts	*		*
13	Replace or clean hydraulic steering system filter	*		*
15	Check-up of engine EDC system via MODUS, IT 2000 or E.A.S.Y.		*	*
5	Check valve clearance and adjust if necessary		*	*
16	Replace variable geometry turbocharger VGT air filter		*	*
7	Checking fan electromagnetic joint clutch wear (if applicable)	*		*
*	Grease the VGT control lever		*	*
Chassis and mechanical assemblies				
17	Replace fuel pre-filter	*		*
10	Check efficiency and clean gearbox oil bleeds	*		*
9	Check clutch fluid level	*		*
11	Replace pneumatic system drier filter	*		*
Chassis and mechanical assemblies				
28	Check efficiency and clean drive axle oil bleeds (for 4x4, 6x6, 8x8 vehicles)	*		*
25	Check efficiency and clean divider oil bleeds between axles	*		*
23	Check efficiency and clean axle bleed	*		*
*	General greasing	*		*
28	Change drive axle oil (for 4x4, 6x6, 8x8 vehicles)		*	*
*	Change front side reduction gear oil (for 4x4, 6x6, 8x8 vehicles)		*	*
22	Change axle oil		*	*
20	Change front wheel hub oil (for 4x2, 6x4, 8x4 vehicles)		*	*
21	Change transmission assembly oil (for 6x4, 6x6, 8x8 vehicles)		*	*
25	Change transfer box oil (for 4x4, 6x6, 8x8 vehicles)		*	*
19	Check steering box and mounting		*	*
29-30	AdBlue system filter and pre-filter change		*	*
26	Engine air filter change (dry cartridge) (1)		*	*
Cab and electric appliances				
27	Check headlight adjustment		*	*
31	Ad Blue system test with EASY, MODUS or IT2000	*	*	*
Miscellaneous				
*	Handling operations (2)	*	*	*
*	Functional testing on road	*	*	*
*	Cabin turning / opening / closure of cowling	*	*	*

(1) Early clogging of the air cleaner is generally due to environmental conditions. For this reason it needs to be replaced when signalled by the sensor irrespective of the guidelines that anyhow have to be observed if there are no specific instructions otherwise.

(2) Vehicle and tooling handling activity in the workshop.

Aquila Trucks Centres

EXTRA PLAN/TIMED OPERATIONS**Plan with kilometer intervals for road use vehicles over middle to long runs**

EP1	Every 120000 km, gearboxes supplied with mineral oil (1) Every 240000 km, ZF 9 S 1310 gearboxes supplied with synthetic oil (2) Every 360000 km, ZF EUROTRONIC gearboxes supplied with synthetic oil (3) possibly, simultaneously with a maintenance service
530105	Replacing gearbox oil and filter (only gearboxes ZF + Intarder)
530105	Change gearbox oil
EP2	Every 240.000 Km possibly, simultaneously with a maintenance service
543411	Replace water pump belt and alternator
543910	Replace conditioner compressor control belt
T1	Every 6 months - In particular, at every start of Spring and, possibly, simultaneously with a maintenance service
506011	Washing radiator guard grid
553261	Checking anti-pollen filter (4) condition
T2	Every year - before Winter Possibly, and simultaneously with a maintenance service
506019	Checking coolant density
773130	Replacing additional heater fuel filter
T3	Every year - before Summer Possibly, and simultaneously with a maintenance service
506010	Checking possible radiator clogging
T4	Every year Possibly, and simultaneously with a maintenance service
534501	Replacing total power take-off (Multi-power) oil
T5	Every 2 years Possibly, and simultaneously with a maintenance service
506010	Replacing engine coolant
T6	Every 3 years Possibly, and simultaneously with a maintenance service
505292	Replacing oil and draining clutch hydraulic control

- (1) ZF Ecosplit gearboxes supplied with mineral oil, in the event of very low annual operating time change the oil every year
- (2) ZF New Ecomid gearboxes supplied with synthetic oil, in the event of very low annual operating time change the oil every 2 years
- (3) ZF Eurotronic gearboxes supplied with synthetic oil, in the event of very low annual operating time change the oil every 3 years
- (4) Early air filter clogging is generally caused by environmental conditions; for this reason, air filter must be replaced when relating warning from special sensor is issued independently of relevant prescription, which must be anyhow observed in lack of specific indications.


Aquila Trucks Centres

CONTROL AND/OR MAINTENANCE INTERVENTIONS (PLAN WITH KM INTERVALS)

M1 SERVICE

542710 Change engine oil

Figure 41

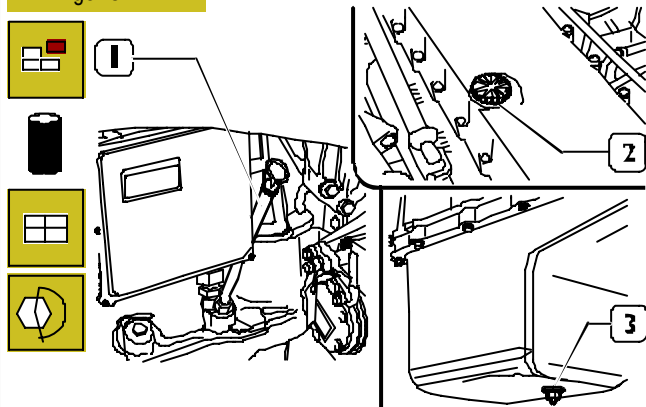


85493

Take out the oil level dipstick (1).
From underneath the vehicle, remove the soundproofing guard.
Unscrew the plug (3) from the oil sump and drain the engine oil off into a specific container.
Screw the plug back on under the sump and tighten it to the required torque.

Fill in with the prescribed oil quantity and quality (see the CAPACITIES table in the GENERAL INFORMATION section) from the tie rod cover pipe union (2).

543420 Replace engine oil filters

Figure 42

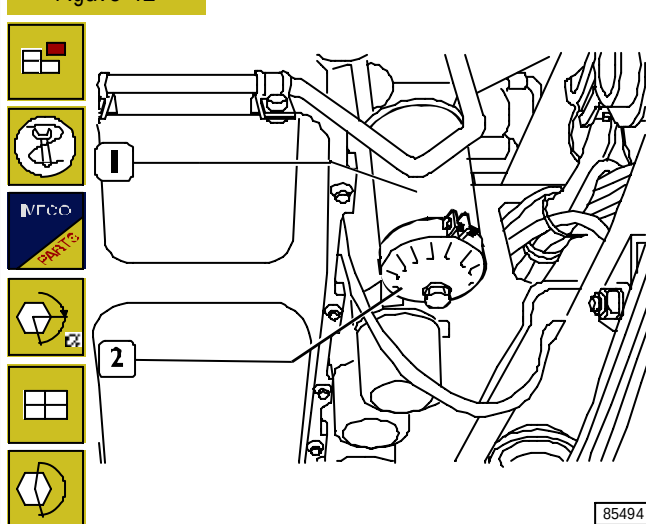

85494


Drain the oil as described in point 14. "Changing engine oil."
Remove the oil filter (1) with tool 99360314 (2).

NOTE Before refitting the new cartridges, moisten the seal with engine oil.

Screw the oil filters (1) on by hand to bring them into contact with the mount and then tighten by 3/4 of a turn to the prescribed torque and proceed as described in point 14. "Changing engine oil."

543450 Check electromagnetic coupling clutch wear

Figure 43

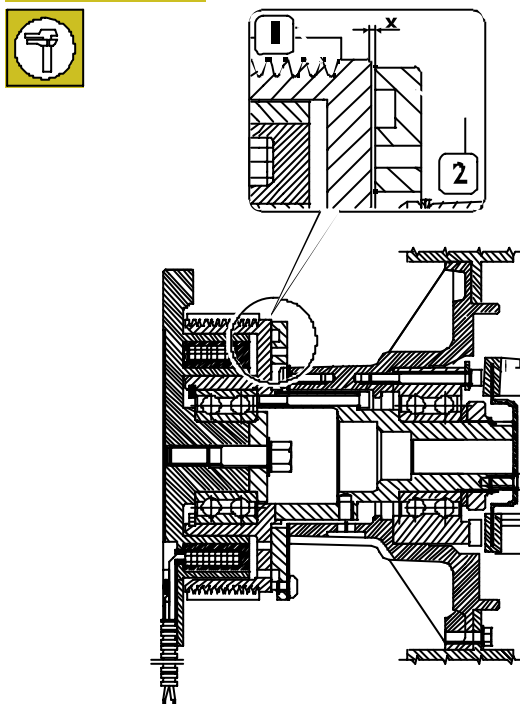


92826

Using a feeler gauge, check the gap between the anchor assembly (2) and the pulley (1), it must be no greater than 2.5 mm.

540843/543934 Check miscellaneous drive belts

Figure 44

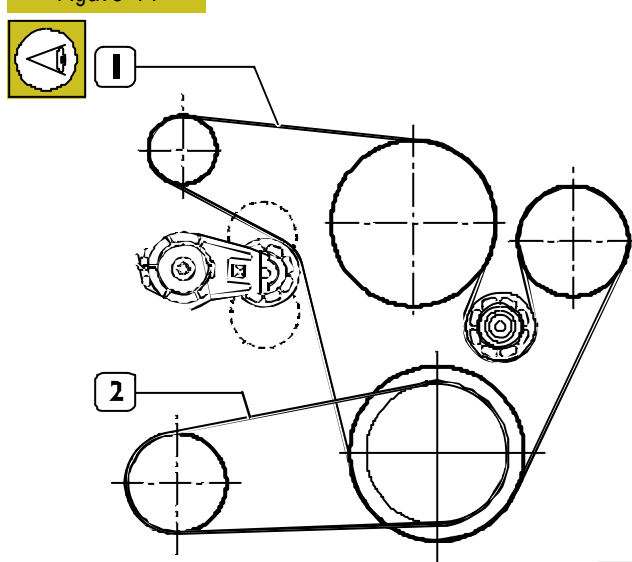


115275

Visually check that the belts (1-2) are neither worn nor deteriorated; if they are, change them as described in the EP2 service.

Aquila Trucks Centres

544221 Replace or clean hydraulic steering system filter

Figure 45

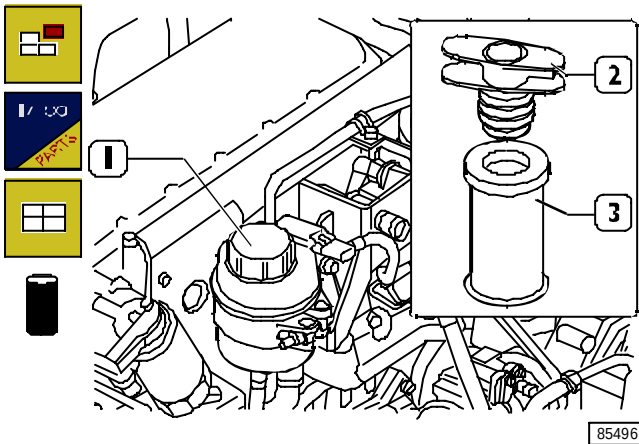

Before taking off the cover (1), thoroughly clean the tank.

This will prevent foreign impurities from coming into contact with the oil of the hydraulic system.

Take the cover (1) off the tank and take out the oil filter (3).


Remove the coupling device (2) from the oil filter (3) and replace the filter.

Take off the plug (1) (after unhooking the transmitter) of the hydraulic power steering tank and check that with the engine running and the wheels travelling in a straight line, the oil level reaches the top reference mark on the dipstick.

With the engine stationary and wheels in a straight line, the oil level has to exceed the top reference mark of the dipstick by 1 or 2 cm; if necessary, top up the level by taking off the cover (1).

507210 Replace pre-filter

Figure 46

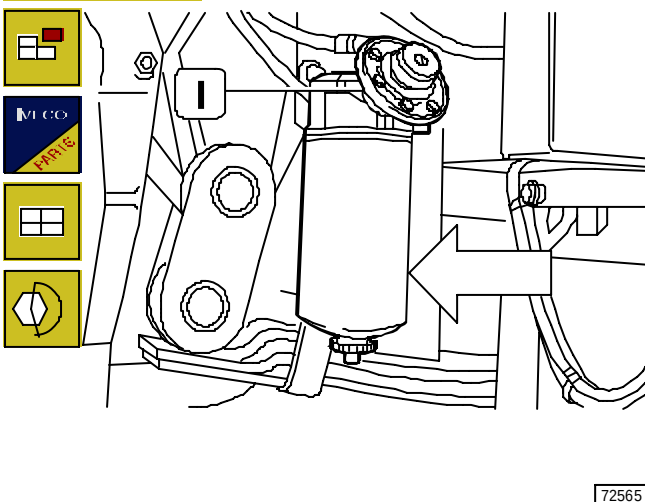

Unscrew the pre-filter (1) and replace it.


Before refitting the new cartridge, moisten the seal with diesel or engine oil. Screw the cartridge on by hand until it is in contact with the mounting and then tighten by 3/4 of a turn to the required tightening torque.



When replacing the cartridge, it must not have been pre-filled. This is to prevent impurities getting into circulation that could damage the injector/pump system components. Bleed the air from the fuel circuit as described on the previous pages.

542093 Replace fuel filter

Figure 47

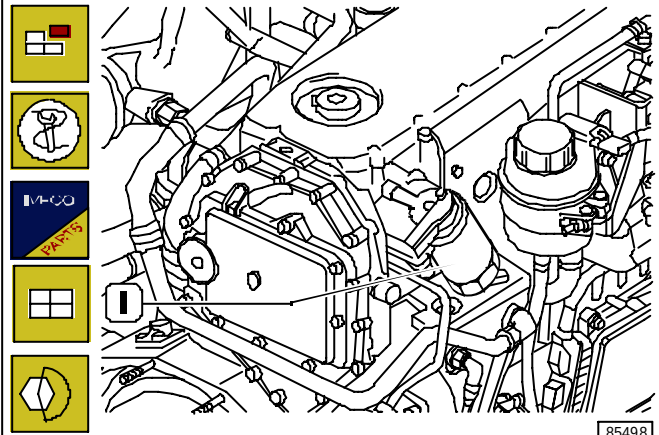

Remove the fuel filter (1) with tool 99360314.


Before refitting the new cartridge, moisten the seal with diesel or engine oil.

Screw the new one on by hand, taking care to check that the rubber seal and the mating surface are clean and in a perfect state of repair. Screw the cartridge on by hand until it is in contact with the mounting and then tighten by 3/4 of a turn to the required tightening torque.

Bleed the air from the supply system as described in the following paragraph.

530105 Clean gearbox oil breather (ZF 9/16S gearboxes)

Figure 48

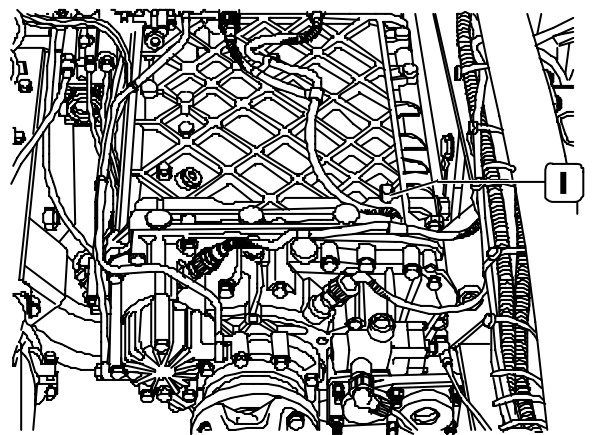


Remove the oil vapour breather (1) and clean it thoroughly. Then fit it back on, checking it is in the right position, and tighten it to the required torque.

Aquila Trucks Centres

(ZF 12AS gearboxes)

Figure 49

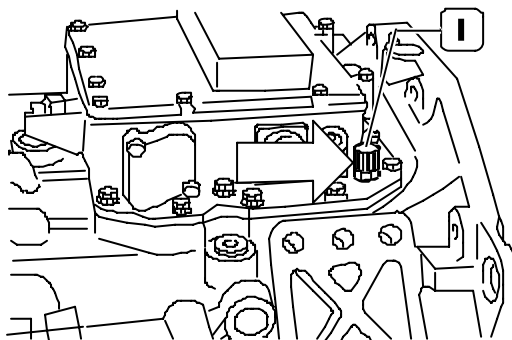


72567

Remove the oil vapour breather (1) and clean it thoroughly. Then fit it back on, checking it is in the right position, and tighten it to the required torque.

**505292 Check clutch fluid level
(Excluding vehicles with EuroTronic gearbox)**

Figure 50

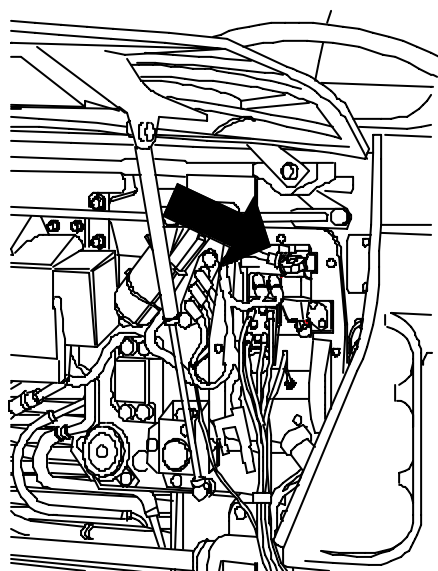

98879


Check the level of the clutch fluid. Top it up if it is too low (see the fluids table in the GENERAL section).



The clutch fluid is poisonous and corrosive: if you accidentally come into contact with it, wash immediately with water and a neutral soap.

503447 Replace pneumatic system drier filter

Figure 51

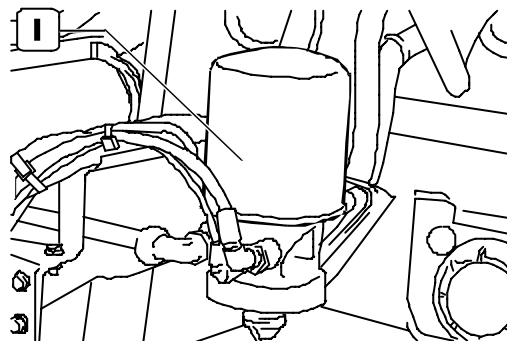


72569

Discharge the pressure from the compressed air system.

Unscrew the drier filter (1) and replace it. Tighten it to the required torque, checking there is no air leakage when pressure is restored.

**522810 Cleaning engine front axle oil
(for versions 4x4/ 6x6/ 8x8 only)**

Figure 52

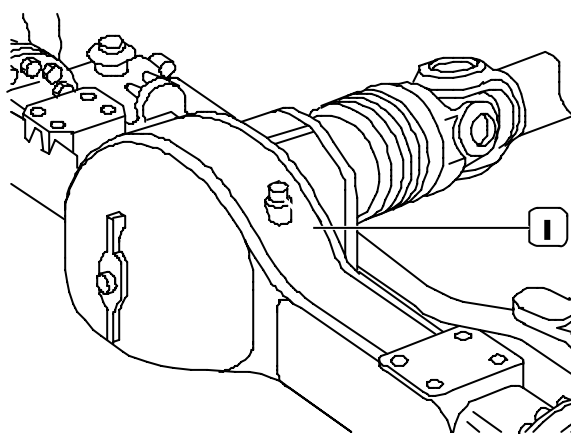


72574

Remove the oil vapour breather (1) and clean it thoroughly. Fit it back on, checking it is in the right position, and tighten it to the required torque.

Aquila Trucks Centres

505401 Clean oil breather on transfer box between axles (with hours intervals)

Figure 53

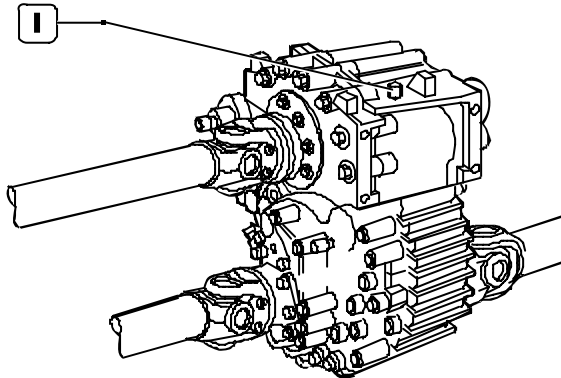


72575

Remove the oil vapour breather (1) and clean it thoroughly. Fit it back on, checking it is in the right position, and tighten it to the required torque.

525013 Clean oil breather on axles

Figure 54

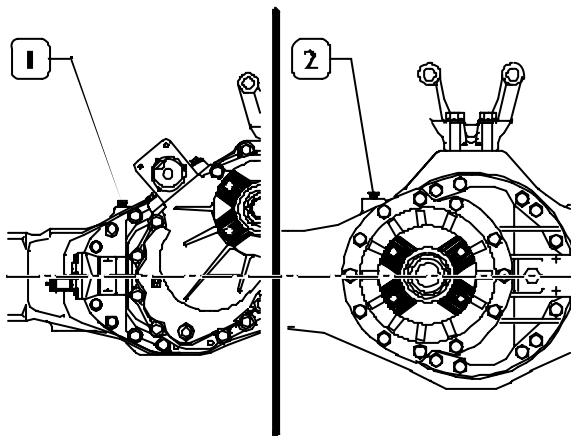

72576

Remove the oil vapour breathers (1) from the middle axle and (2) from the rear axle and clean them thoroughly. Fit them back on, checking they are in the right position, and tighten them to the required torque.


- **Test AdBlue system using EA.SY., MODUS or IT 2000**
- **General greasing**
- **Handling operations**
- **Functional on road testing**
- **Tilting the cab, opening/closing the front grille**

M2 SERVICE

- **Check-up on EDC system with MODUS IT2000 or E.A.SY.**

540613 Check valve clearance and adjust if necessary

Figure 55

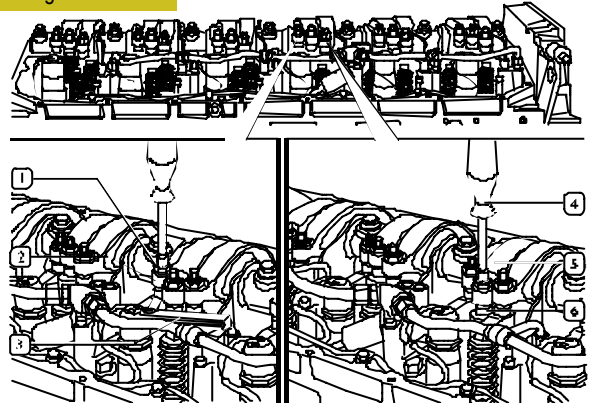


86835

To perform these operations correctly, proceed as described under the relevant heading in the "ENGINE" section.

540450 Replace the blow-by filter

Figure 56

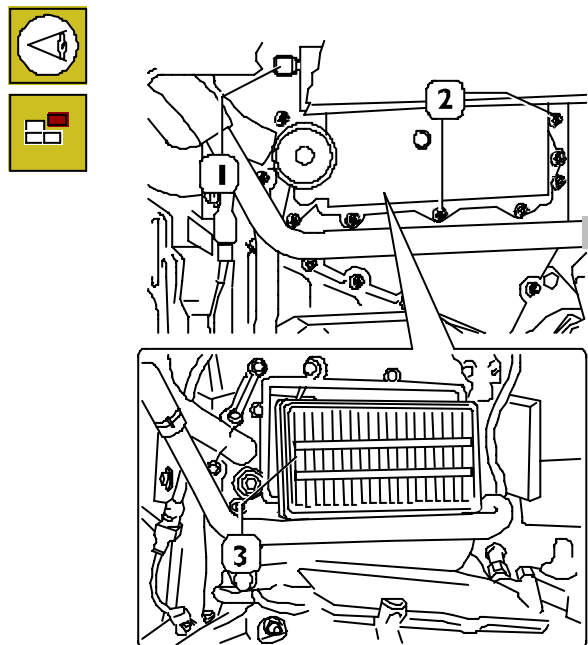


72563

- Unscrew the screws (2), take off the casing, take out the filter (3) and replace it with a new one. The filter works in a single direction, so you need to mount it with the two strengthening bars in view as shown in the figure.

Aquila Trucks Centres

542406 Replace variable geometry turbocharger (VGT) valve air filter

Figure 57

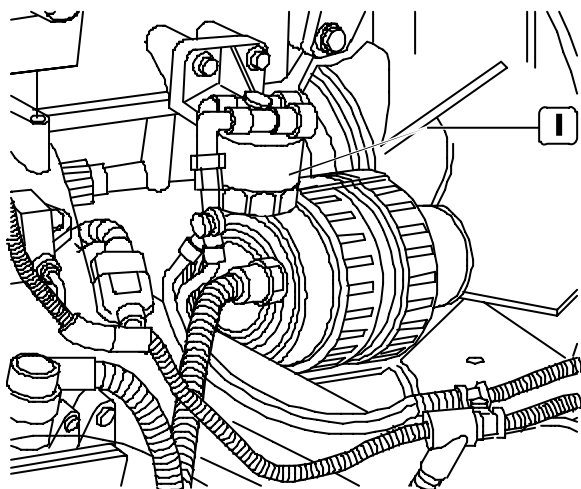


72577

NOTE In the CURSOR 8 versions the filter is mounted on the frame.

Using a suitable tool, unscrew the filter (1) and replace it. Before fitting the new cartridge, moisten the seal with diesel or engine oil. Screw it on by hand until it is in contact with the mounting and then tighten by 3/4 of a turn to the required tightening torque.

505100 Replacing air filter cartridge in dry conditions and cleaning the container


Figure 58

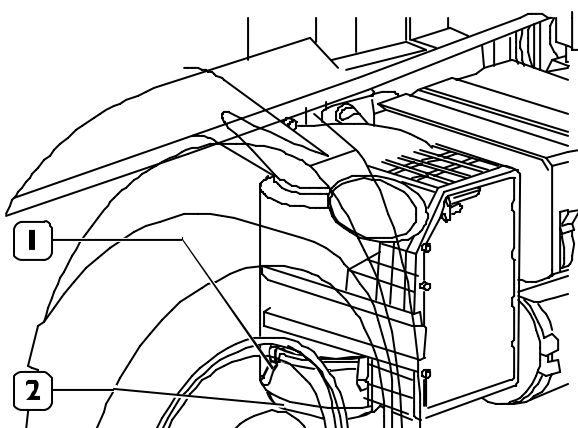

72590

- Unhook the clamps (1) (or, depending on the version, unscrew the nut) and take off the bottom cover (2).

Figure 59

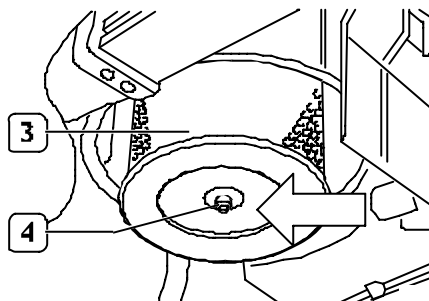


72591

- Unscrew the nut (4) and take out the cartridge of the filter (3).

Before fitting the new cartridge, clean its housing thoroughly.

■ Grease the VGT control lever**522810 Change drive axle oil (4x4, 6x6, 8x8 versions only)**

Figure 60

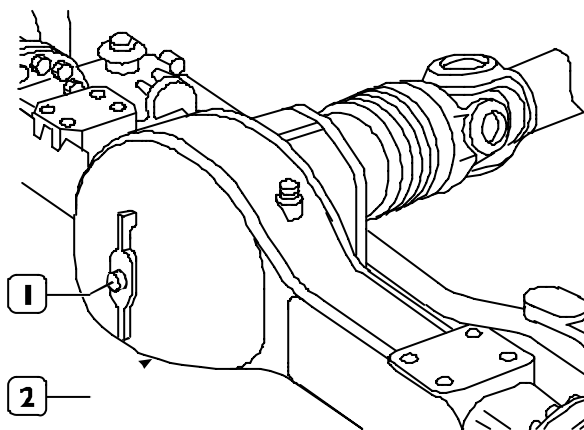


72580

- With the axle warm, take off the plug (2) and drain the oil into a specific container.
- Pour in fresh oil through the hole closed by the plug (1) (see under the FLUIDS heading of the GENERAL section).
- Clean the oil vapour breather.
- Tighten the plugs to the required torque.

Aquila Trucks Centres

522870 Change front side reduction gear oil (4x4, 6x6, 8x8 versions only)

Figure 61

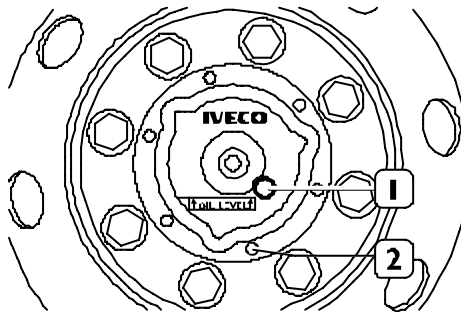

72581


Change the oil as follows:

- Set the plug (1) as shown in the figure and the "OIL LEVEL" line exactly horizontal.
- Open the screw (2) and drain off the oil into a specific container.
- Pour in fresh oil through the hole closed by the plug (1) (see SPECIFICATIONS AND DATA in the "REAR AXLE" section).
- Before screwing the plug (1) and screw (2) back on, spread sealant paste on them and tighten them to the required torque.

525110/525010 Change axle oil

Transmission and middle axle

Figure 62

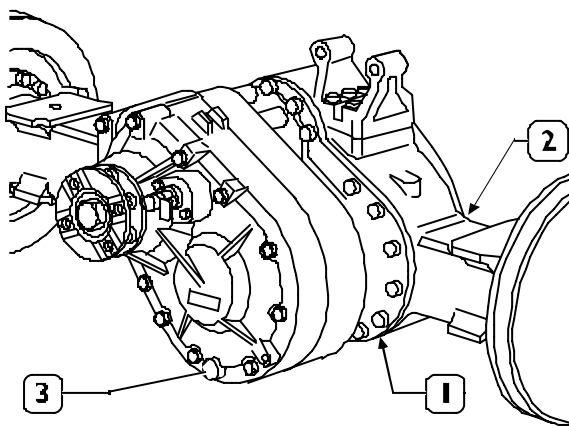


72582

- With the axle warm, unscrew the plugs (1) and (3) and drain off the spent oil into a specific container.
- Screw the plugs back on and pour in fresh oil through the hole closed by the plug (2) (for the quantity, see under the FLUIDS heading of the GENERAL section).
- Clean the oil vapour breather.
- Tighten the plugs to the required torque.

Rear axle

Figure 63

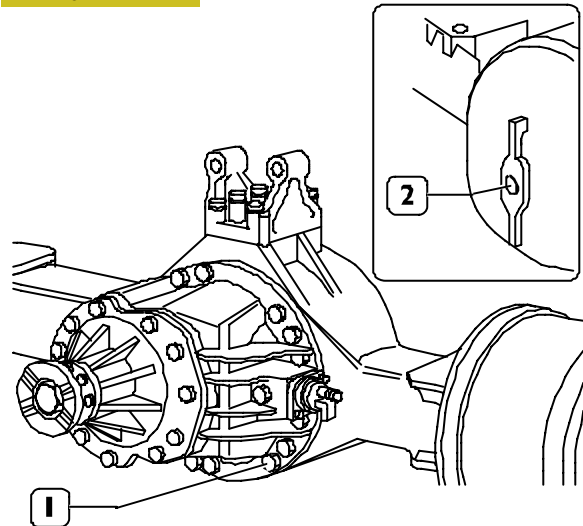


72583

- With the axle warm, unscrew the plug (1) and drain off the oil into a specific container.
- Pour in fresh oil through the hole closed by the plug (2) (see under the FLUIDS heading of the GENERAL section).
- Clean the oil vapour breather of the axle.
- Tighten the plugs to the required torque.

520620 Change front wheel hub oil (4x2, 6x4, 8x4 versions only)

Figure 64

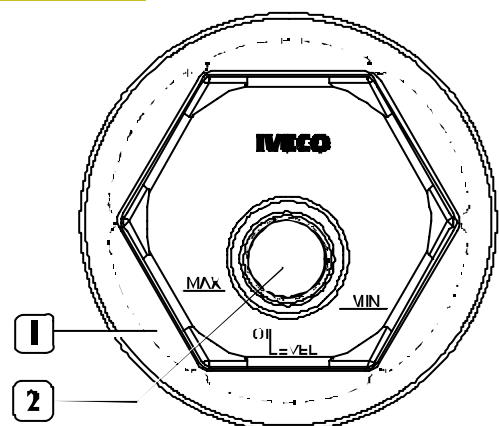

79068

Proceed as follows:

- remove plug (1) and suck oil with suitable syringe;
- fill the wheel hub with new oil (for the quantity and type of oil, see CHARACTERISTICS AND DATA in the "AXLES" section).

Oil level is checked through plug (2) slide with max and min writings on cover (1) in horizontal position.

Aquila Trucks Centres

505401 Change transmission assembly oil (6x4, 6x6, 8x8 versions only)


See the procedures for changing the transmission and middle axle oil described above.

■ Replace AdBlue filter and prefilter

In order to carry out these operations correctly, proceed as described in the relevant chapter of section "ENGINE".

505401 Change transfer box oil (6x4, 6x6, 8x8 versions only)

Figure 65

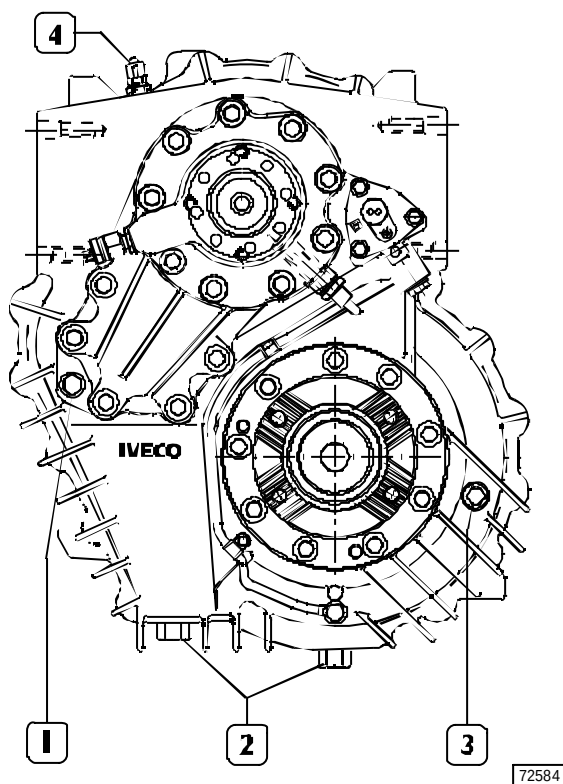


72584

- With hot distributor, slacken the drain plugs (2) and drain the oil in a suitable container.
- Tighten the plugs (2) to torque 60 Nm x TC 1800, 78 Nm x TC 2200 and clean the oil breather (4).
- Remove the plugs (1 and 3), fill through the plug hole (1) the prescribed quantity and type of oil, see chapter GENERALITIES in the "AXLE" section.

Filling is correct when the oil reaches the plug hole (3). Drive in the plugs (1 and 3) and tighten them to the prescribed torque.

501401 Check steering box fixing and mounting

Figure 66


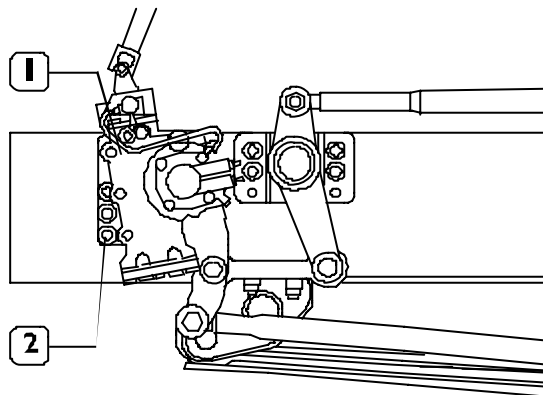


86836

Check that the fastenings of the steering box (1) and mounting (2) are tightened to the required torque.

760044 Check headlight adjustment

Figure 67

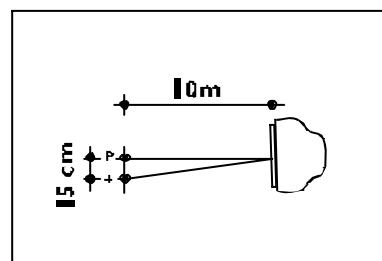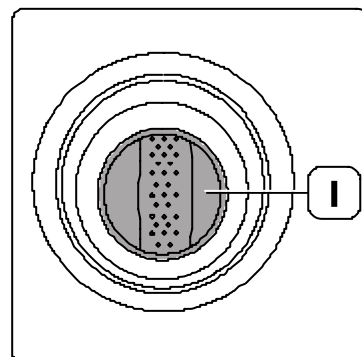


98882

- Place unloaded vehicle, with tyres at prescribed pressure, on flat ground, facing a light colour wall located at 10 metre distance.
- Mark two crosses on the wall corresponding to the centres of the two headlights.
- By using control (1), position headlights with inclination zero. Inclination can be displayed on CLUSTER display unit.

Aquila Trucks Centres

Figure 68

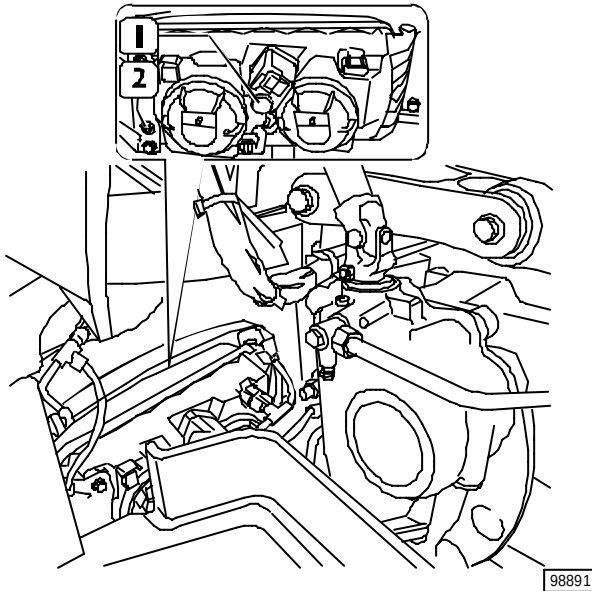

- Tilt the cab and turn on the low beam. The distance between the crosses and the points P, which correspond to the angle of the headlights, has to be 15 cm.
- Adjust light beam according to horizontal and vertical directions by operating on screws (1 and 2).


- **Handling operations**
- **Functional testing on road**

M3 SERVICE

NOTE The M3 service comprises the operations of the M1 and M2 services.

**EXTRA PLAN/TIMED OPERATIONS
(PLAN WITH KM INTERVALS)****EP1 SERVICE****530105 Change gearbox oil
(ZF mechanical gearboxes)**

Figure 69

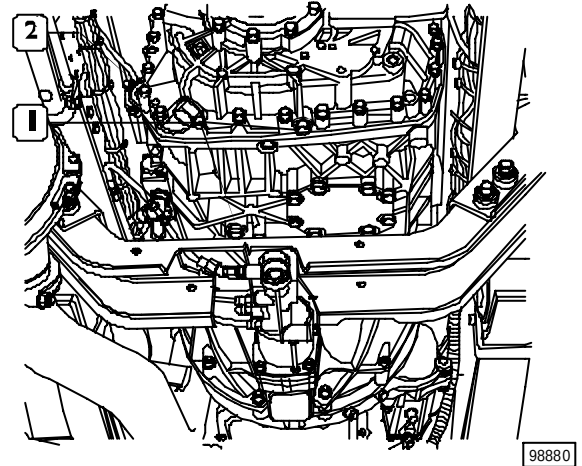


- With the gearbox warm, take off the plug(s) (1) and drain the oil into a specific container.
- The oil should be drained off taking care not to dirty the cross member beneath as it is near the outlet on some types of gearbox.
- It is therefore wise to use a tool to convey the oil away.
- Pour in fresh oil through the hole closed by the plug (2) (for the quantity, see under the FLUIDS heading of the GENERAL section).
- Tighten the plugs to the required torque.

Aquila Trucks Centres

(ZF 12AS gearboxes)

Figure 70

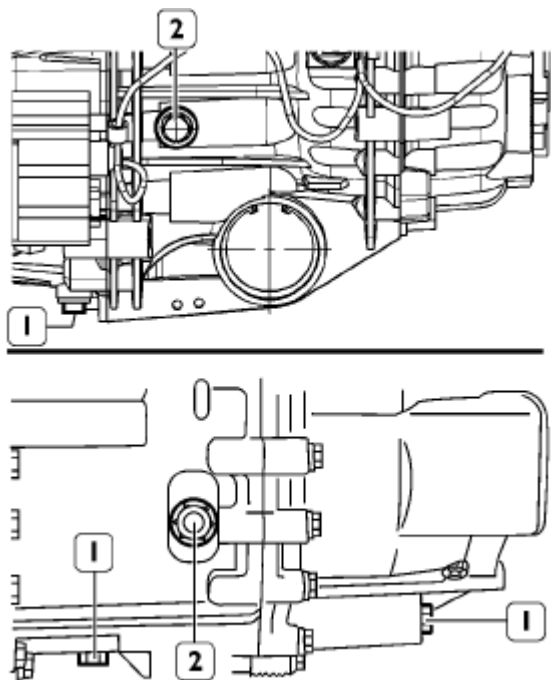


5278

- With the gearbox warm, take off the plug(s) (1) and drain the oil into a specific container.
- The oil should be drained off taking care not to dirty the cross member beneath as it is near the outlet on some types of gearbox.
- It is therefore wise to use a tool to convey the oil away.
- Pour in fresh oil through the hole closed by the plug (2) (for the quantity, see under the FLUIDS heading of the GENERAL section).
- Tighten the plugs to the required torque.

530105 Replace oil and filter of ZF16 S gearbox + Intarder


Figure 71

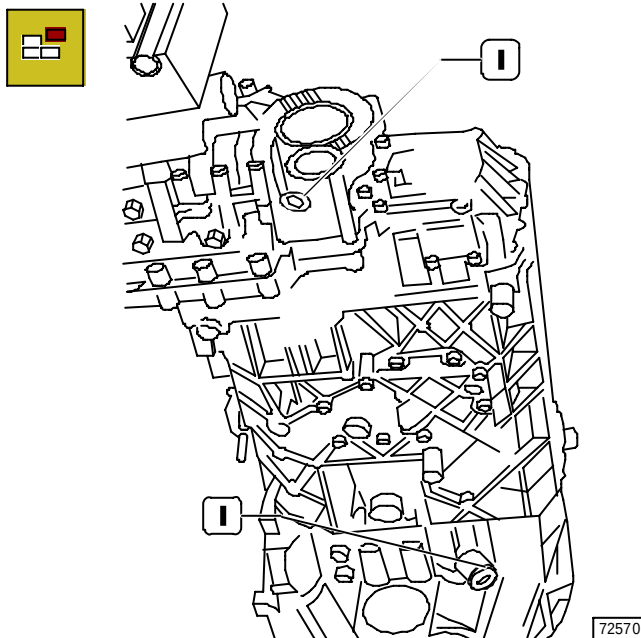

72570

- With the gearbox warm, take off the plugs (1) and drain the oil into a specific container.

Figure 72

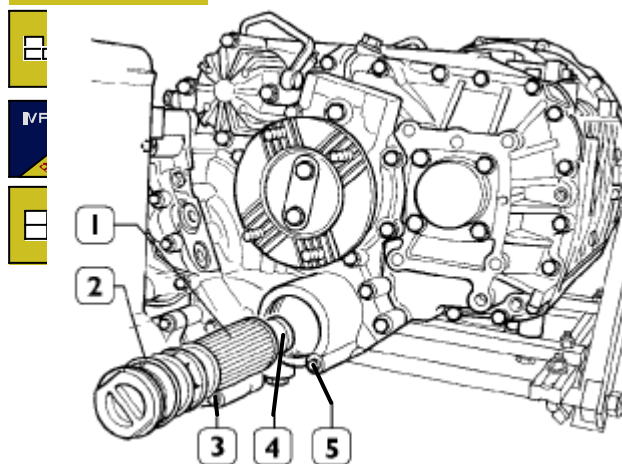

52571


Remove the oil filter as follows:

- unscrew the screw (5) fixing the filter;
- take off the cover and filter (1);
- remove the cover from the filter and replace it. Take care not to lose the magnetic pad (4) on the outer edge of the filter, as it has to be repositioned on the new filter;
- check the state of the o-ring (2) and replace it, if necessary;
- grease the o-ring (3) inserted in the assembly opening of the new filter;
- couple the new filter with its cover and insert it into its seat as far as it will go. Secure the screw (5).

Aquila Trucks Centres

EP2 SERVICE**543411 Replace water pump belt and alternator****543910 Replace air-conditioner compressor drive belt**

Figure 74

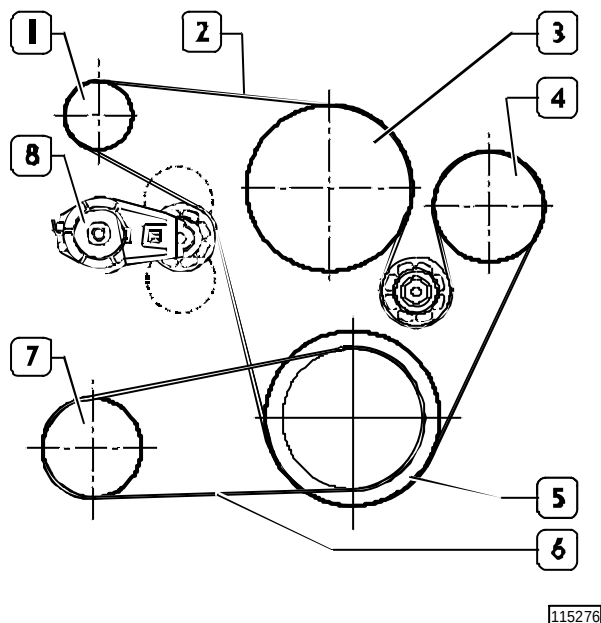
**ASSEMBLY DIAGRAM OF BELTS FOR FAN - WATER PUMP - ALTERNATOR AND AIR-CONDITIONER COMPRESSOR**

1. Alternator - 2. Drive belt - 3. Fan - 4. Water pump -
5. Crankshaft - 6. Spring belt - 7. Air-conditioner compressor - 8. Drive belt automatic tensioner

In order to carry out change operations correctly, proceed as described in the relevant chapter of section "ENGINE".

T1 SERVICE**553261 Checking anti-pollen filter condition**

Figure 73

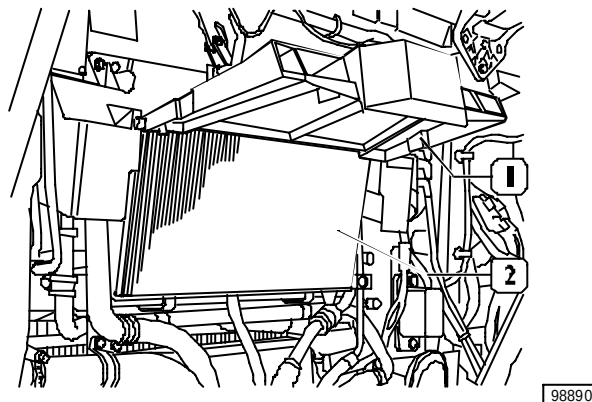

Check the state of clogging of the pollen filter (2). Anti-pollen filter can be accessed by lifting front cowling and under door (1).

NOTE Excessive clogging of the pollen filters can cause a reduction in the flow rate of air into the cab and therefore less ventilation. This will be highlighted especially by a significant reduction in the efficiency of the windscreen defrosting function.


506011 Wash radiator grille

Lift the cab radiator cowling and carefully clean the radiator grille.

Aquila Trucks Centres

T2 SERVICE**506019 Check percentage of antifreeze in the engine coolant**

Figure 75

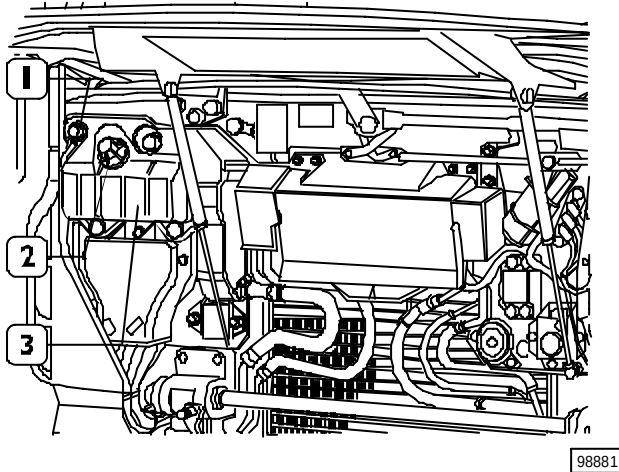

98881



The plug (1) must never be taken out for any reason whatsoever.

With the engine warm, the cooling system is in overpressure, therefore take care when taking off the cap (2).

Take off the cap (2) and draw off a sample of the coolant from the expansion tank (3) with the densimeter 99395858.

Depending on the temperature of the liquid, check the percentage of antifreeze in the liquid on the scale of the instrument. The percentage has to be higher than 40% and must not exceed 50%.


If necessary, restore the percentage of antifreeze, bearing in mind that the liquid needs to be replaced every 2 years.



For vehicles fitted with an additional heater, the percentage of antifreeze must never exceed 50%.

773130 Replacing additional heater fuel filter**T3 SERVICE****506010 Checking possible radiator clogging****T4 SERVICE****534501 Change "Multipower" total power take-off oil (if applicable)**

Figure 76

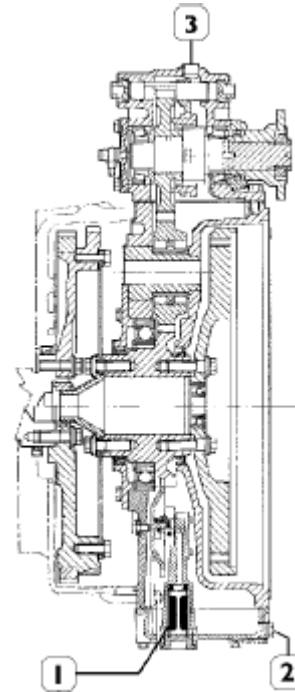

72589

Set the vehicle horizontal and stop the engine. Position a suitable container to collect the oil.

- Unscrew the drain plug (2).
- Unscrew the filter (1) and clean it thoroughly.

To restore the oil level, screw the filter (1) and drain plug (2) back on to the required torque, checking the state of the seals.

Replace them if they have deteriorated. Then:

- Unscrew the plug (3) and add the required amount of oil (see FLUIDS in GENERAL INFORMATION).
- Screw the plug back on to the required torque.

T5 SERVICE**506010 Changing engine coolant**

Perform procedure described in relating paragraph in section "ENGINE".

Aquila Trucks Centres


T6 SERVICE**505292 Change the clutch fluid and make air bleeding (only versions with mechanical transmission)**

Drain off the clutch control fluid and change it (see Fluids table in GENERAL section).



The clutch fluid is poisonous and corrosive: if you accidentally come into contact with it, wash immediately with water and a neutral soap.

Figure 77

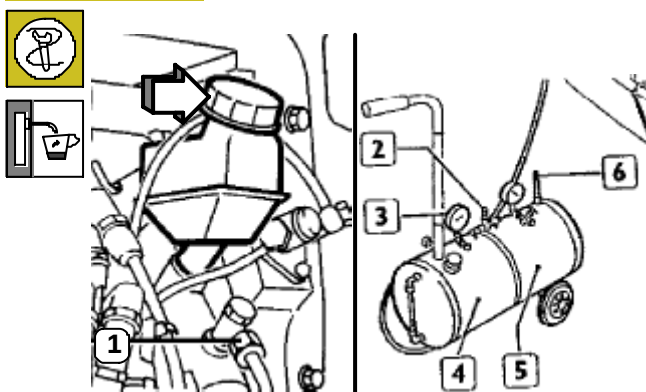


After changing the fluid, bleed the hydraulic clutch control system.

Use the air bleeding tool 99306010 as follows:

- charge reservoir (5) with compressed air;
- fill reservoir (4) with Tutela TRUCK DOT SPECIAL fluid
- replace the cap (⇒) of the clutch fluid reservoir with one of the caps supplied with the tool 99306010 and connect the pipe to the cap.

Figure 78

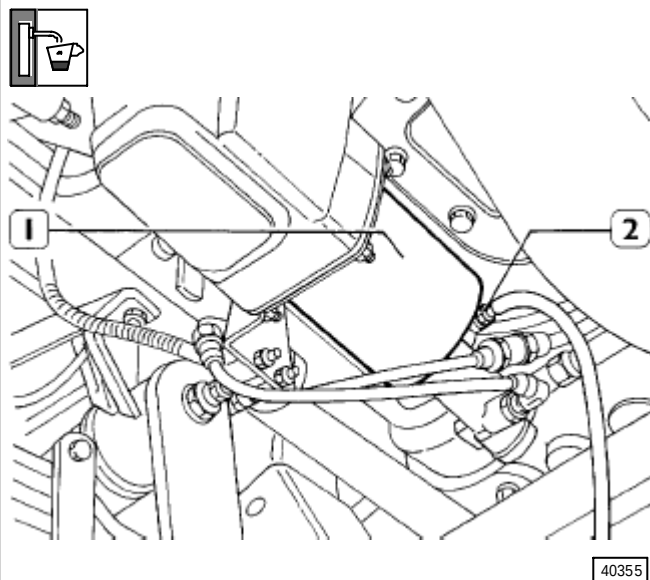

- Attach a plastic tube to the bleed screw (2) on the slave cylinder (1) and immerse the opposite end of the tube in a container containing Tutela TRUCK DOT SPECIAL fluid, unscrew the bleed screw (1) by one full turn, open the valve (2) (see Figure 77) until a pressure reading of 1 to 1.2 bar is obtained on the pressure gauge (3);
- when the clutch fluid flowing through the tube is uniform and free of air bubbles, close the bleed screw and discharge the air from the reservoir (5) through valve (6).

NOTE Whenever the clutch fluid is changed, it will also be necessary to bleed the clutch master cylinder by loosening the fitting (1, Figure 77) before bleeding the clutch servo.

Aquila Trucks Centres

Aquila Trucks Centres

SECTION 16

Electric/Electronic system

	Page
GENERAL WARNINGS FOR ELECTRICAL/ ELECTRONIC COMPONENTS	3
COMPONENT CODE	6
MAIN CHANGES	11
CAN LINES	12
CAN LINE ASSEMBLY DRAWING	17
POWER NETWORK	18
GROUND POINTS	19
ELECTRICAL EQUIPOTENTIAL BRAID	20
ALTERNATOR	23
STARTER MOTOR	25
JUNCTION CONNECTORS	27
DIAGNOSIS CONNECTOR	77
BULKHEAD	79
CENTRAL INTERCONNECTING UNIT	84
FUSE	85
REMOTE SWITCHES	87
FUSE ASSEMBLY BODY CONTROLLER (IBC3) ...	89
SUPPLEMENTARY FUSES (70000)	90
INSTRUMENT BOARD	92
CENTRAL DASHBOARD CONTROLS	93
CONTROLS ON THE STEERING WHEEL	94
REARVIEW MIRRORS AND WINDOW REGULATOR CONTROL ADJUSTMENT	95
LEFT LIGHT CONTROL 54033	96
ENGINE BRAKE CONTROL AND INTARDER	99
GEAR SELECTION FUNCTION	100
FUNCTION ENGAGING EMERGENCY MODE (LIMP HOME)	102

Aquila Trucks Centres

Page

Page

CLUSTER	104
CLUSTER (PIN-OUT)	107
BODY CONTROLLER (IBC3)	113
BODY CONTROLLER	115
- Linking connectors	115
CHASSIS ELECTRONIC MODULE (M.E.T.)	119
D.D.M./P.D.M.	121/1
S.W.I. (STEERING WHEEL / STEERVATOR INTERFACE)	122
SPIRALED CONTACT	125
STEERING COLUMN (COMPONENT LOCATION)	126
B.M. (BED MODULE)	130
E.B.M. (EASY BED MODULE)	131
TACHOGRAPH	133
M.C. NET INTERFACE	134/1
INJECTION SYSTEM ASSEMBLY	134/2
ENGINE CONTROL UNIT OPERATION STRATEGIES	134/4
EDC (ECM) SYSTEMS	135
SYSTEM COMPONENTS	139
VCM (VEHICLE CONTROL MODULE) ELECTRONIC CONTROL UNIT	163
IMMOBILIZER	166
ABS-EBL	168
COMMON COMPONENTS	171

ECAS SUSPENSIONS	178
EUROTRONIC AUTOMATIC TRANSMISSION	184
LIMP - HOME	189
ELECTRONIC CENTER	192
TRANSMISSION ACTUATOR	194
CLUTCH ACTUATOR	196
INTARDER	200
EM (EXPANSION MODULE) ELECTRONIC CONTROL UNIT (PTO)	206
AUTOMATIC AIR CONDITIONER	209
MANUAL AIR CONDITIONER	224
HYDRONIC D 10 WATER HEATER	228
SCR (SELECTIVE CATALYTIC REDUCTION) SYSTEM - DENOX 2	235
CENTRAL LOCKING WITH REMOTE CONTROL	238
DIAGNOSTIC	240
CIRCUIT CHARTS	245

Aquila Trucks Centres

GENERAL WARNINGS FOR ELECTRICAL/ELECTRONIC COMPONENTS



Do not ever disconnect the batteries from the system with the engine running.
Do not start the engine without first having connected the batteries in a permanent manner.

- Before working on the vehicle, immobilise the wheels with chocks.
- Do not use fast chargers to start the engine. Engine starting can be performed either by means of separate batteries or by means of a special truck.
- Incorrect polarisation of the power supply voltage for the electronic control units (e.g. erroneous battery polarisation) may damage the components irreversibly.
- If you have to disconnect the batteries from the system, always disconnect the frame ground cable from the negative terminal of the batteries first.
- Before connecting the batteries to the system, make sure that the system is suitably insulated.
- Disconnect the batteries from the system before recharging them by means of an external unit.
- Disconnect the external recharging unit from the power mains before removing the unit's pliers from the battery terminals.
- At temperatures of over 80 °C (drier ovens), take down the ECU's.
- At the connection stage, tighten the flanged nuts of the connectors (temperature and pressure sensors, etc.) to the required torque. Check the exact polarity of the battery terminals when starting the engine by means of the auxiliary truck.
- Before working on the vehicle's electrical/electronic system disconnect the positive pole of the battery.
- Before disconnecting the connector from an electronic control unit, isolate the system.
- Do not cause sparks to check whether a circuit is live.
- Do not use a test bulb to check the continuity of a circuit. Only use the appropriate testing devices.
- Do not directly power the components associated with electronic control units with the nominal power rating of the vehicle.
- Make sure that the wirings of electronic devices (length, type of cable, location, grouping, connection of screen braiding, earthing, etc.) conform with the IVECO system and that they are carefully restored after repair or maintenance work. To avoid the possible malfunctioning of the electronic systems on board, the wirings of additional devices must follow a different path than that of the above-mentioned systems.
- Do not connect the negative terminals of additional systems to the negative terminals of electronic systems.
- In the event of electric welding on the vehicle, disconnect all the electronic control units and/or disconnect the power cable from the battery positive terminal and connect it to the frame earth.
- Connectors are viewed from the cable side.



Key storage procedures are affected by electromagnetic disturbances such as cell phones and the like.

Therefore, during key memorization:

1. Ensure there are no sources of disturbance in the cab or close to the keys.
2. Keys not inserted in the panel must be at a distance of at least 1 meter.




When working on electronic control units, plug connections and electrical connections to the components, measurements can be made only on suitable testing lines, by means of special plugs and plug-type bushes. Do not under any circumstances make use of improper devices such as metal wires, screwdrivers, clips and the like. In addition to the risk of causing a short circuit, this might damage plug-type connections and this would then give rise to contact problems.

Aquila Trucks Centres



In order to prevent damage or short-circuiting of the on-board electronic control units, the following operations must be always carried out before starting any welding operation on the chassis.

- If electric welding has to be done on the vehicle,

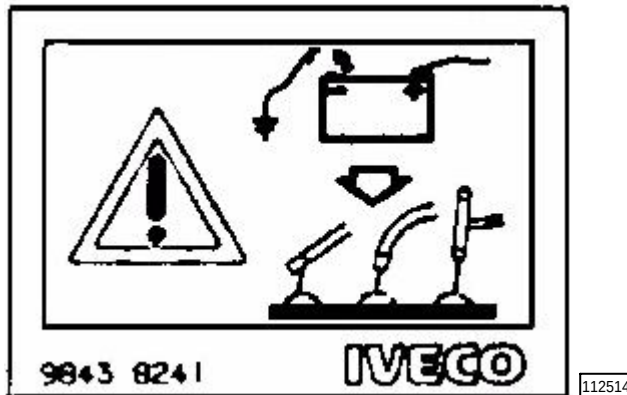

isolate the electric system as follows:

- disconnect the power lead from the battery positive terminal and connect it to the chassis earth;
 - disconnect the power lead from the battery negative terminal;
 - disconnect the electronic control unit connectors, taking care to avoid touching the control unit connector pins.
- Moreover:
 - should it be necessary to carry out welding operations close to the control unit, remove it from its location.
 - whenever possible, earth the welding machine directly to the piece that has to be welded.



In the case of vehicles equipped with a DTCO digital tachograph, do not disconnect the battery leads and then connect them by jumpers to reset the electronic systems.

This operation should be avoided, as it could cause permanent damage to the DTCO tachograph CARD or other on-board electronic systems.

To reset the electronic system without running risks, disconnect the vehicle battery and wait for 10 minutes.



It is strictly forbidden to carry out any modifications or connections to the electronic control unit wiring; in particular, the line interconnecting data between the control units (CAN line) must be considered as untouchable.

Diagnostic and maintenance operations can only be carried out by authorised personnel with IVECO approved equipment.

Aquila Trucks Centres


Practical tips

The negative leads connected to a system grounding point must be as short as possible and connected to one another in "star" configuration; make sure that they are tightened in an orderly and adequate manner (Figure 1, ref. M).

Furthermore, for electronic components, the instructions to be followed very carefully are:

- ECU's must be connected to the system ground if they are provided with a case.
- ECU negative cables must be connected both to a system grounding point, such as for instance the dash compartment ground (with no "serial" or "chain" connections) and to the negative terminal(s) of the battery/batteries.
- Even though they are not connected to the system ground/battery negative terminals, analogue ground elements (sensors) must have excellent insulation. As a result, special care must be devoted to the eddy resistances of the cable terminals: oxidation, seam-folding defects, etc.
- The metal braid of shielded circuits must be in electrical contact at either end with system components.
- Only one end of the shielding braid must be connected to the system ground.
- In the presence of jointing connectors, the non-shielded portion, d, must be as short as possible in the proximity of the connectors (Figure 1).
- The cables must be arranged so as to run parallel to the reference plane, i.e., as close as possible to the frame/body structure.
- Additional electromechanical systems must be connected with the greatest care to the system ground and must not be placed alongside the cables of electronic components.

Figure 1

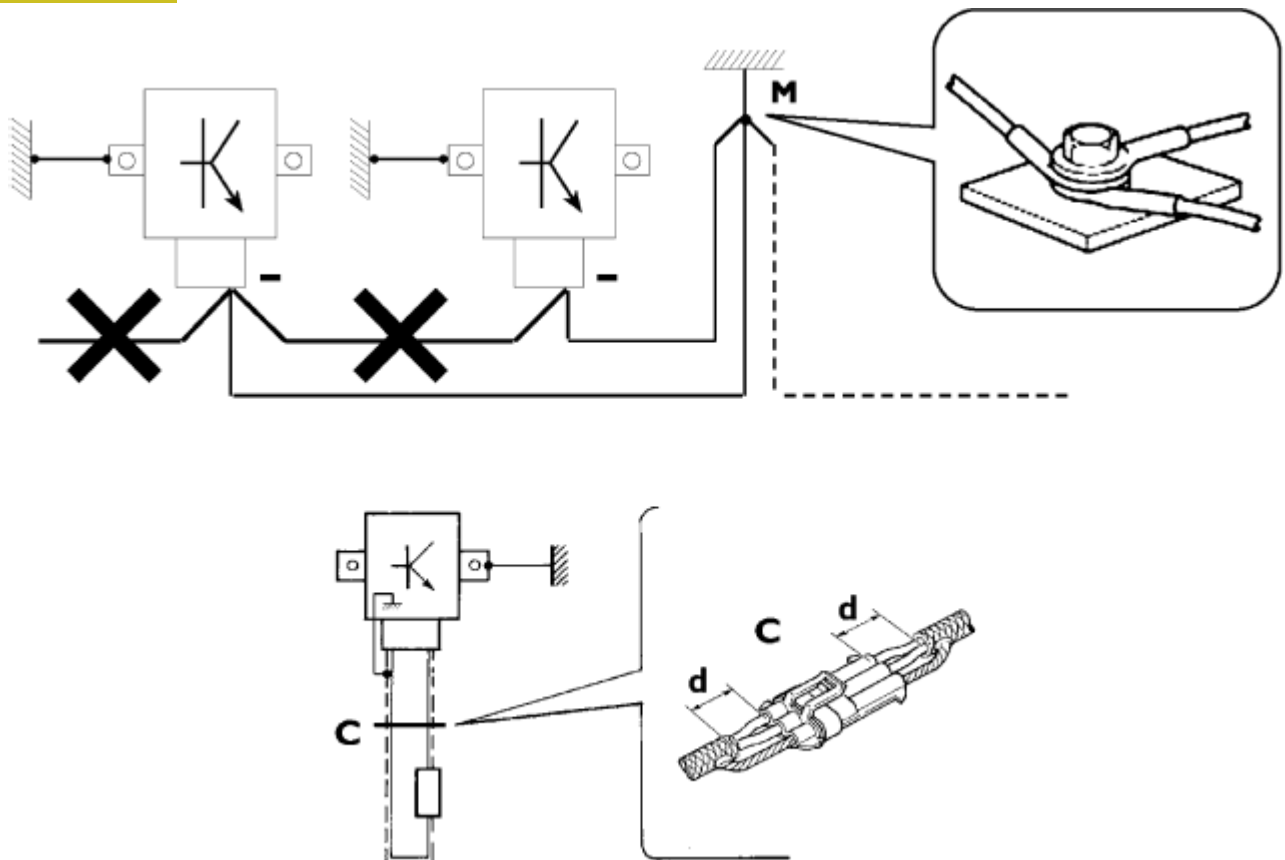

88039

SHIELDING BY MEANS OF A METAL BRAID OF A CABLE LEADING TO AN ELECTRONIC COMPONENT -
C. CONNECTOR - d. DISTANCE ! 0.

Aquila Trucks Centres

COMPONENT CODE

03000	Self-rectifying alternator with built in voltage regulator
08000	Starter Motor
12015	Motor for outside air intake door
12023	Window shade motor
12032	Cab hydraulic release pump motor
20000	Starter battery
22000	Horn
22043	Buzzer for warning that automatic transmission gear selector is not in regular position
25010	Contact for additional high beam lamps engagement
25200	Relay for starter
25201	Relay, preheating
25202	Relay, G.C.R. energizing
25203	Relay, G.C.R. opening
25204	Relay, remote starting enablement, cab unlatched
25205	Relay, engine stopping
25206	Relay, rich mixture control
25207	Relay, alternator D+ earthing
25208	Relay, remote start enablement, gear engaged
25209	Relay for cutting off various components during starting stage
25210	Relay, starting enablement with transmission in neutral
25211	Relay with delayed opening contact for keeping G.C.R. energized
25212	Relay with delayed closing contact for keeping RTE energized
25213	Relay for supply of users connected to ignition switch through battery positive
25222	Relay for allowing connection of thermal starter
25306	Contact for electroheater control and windscreen defrost
25310	Relay for allowing connection of internal heating with power load inhibiting relay
25322	Relay for connection of auxiliary heater (1st speed)
25325	Contact for engine water recycle open with engine running
25327	Relay for connection of air-conditioning system
25332	Relay for connection of air-conditioning system
25337	Contact for engine water recycle close solenoid valve with additional heater on
25351	Electric trap opening contactor
25352	Electric trap closing contactor
25544	Topflap engine polarity reverse contactor for LD
25545	Topflap open/close comand contactor for LD
25705	Contact for vehicle testing
25722	Cab hydraulic release pump switch (lowering)
25723	Cab hydraulic release pump switch (raising)
25737	Contact for fan (Barufaldi) electromagnetic coupling engagement
25740	Headlamp washer enable contactor
25805	Contact for horn control
25818	Contact for heater windscreen control
25866	Relay for terminal 58
25874	Relay for connection of power loads with engine running
25897	Relay for connection of side transmission power takeoff
25898	Relay for connection of rear transmission power takeoff
25900	General current relay
25901	Main current relay with automatic switch
25903	Contact for EDC disengagement
25924	EDC connecting relay "Main Relay"
30001	Dipped and main beam headlamp with side light
30010	High beam headlamp
30011	Fog light
30100	Headlamp aiming control actuator
32002	Front direction indicator
32010	Rotary lamp
33001	Side direction indicator
33004	Side marker lamp
34000	Multifunctional rear light
34011	Trailer light
35000	Number plate light
37000	Front/rear dimensions light
37001	Front dimensions light
39000	Ceiling lamp for cabin inside lighting
39003	Courtesy light for steps
39009	Courtesy light for reading lights
39017	Courtesy light for adjustable cabin interior light
39020	Ashtray lamp

Aquila Trucks Centres

39030	Cab side opening lighting lamp
39030	Cab side opening lighting lamp
39034	White and red internal light unit
40011	Electronic Tachograph
40032	Sender unit for tachometer and tachograph
40046	Inductive type chassis height sensor (rear axle)
40047	Inductive type chassis height sensor (front axle)
42030	Sender unit for engine oil pressure gauge
42045	Sender unit for outdoor temperature gauge
42100	Switch for front brake insufficient air pressure indication
42101	Switch for rear brake insufficient air pressure indication
42102	Switch signalling handbrake applied
42108	Switch for trailer retarder signal
42111	Switch signalling trailer braking system failure
42116	Switch for low air pressure indicator in EBS system
42200	Switch signalling pneumatic suspension system failure
42351	Switch signalling air filter blocked
42374	EDC clutch switch
42379	Switch for PTO engagement enable
42381	Drive axle RH pressure sensor (ECAS)
42382	Lift axle RH pressure sensor (ECAS)
42389	Air pressure sensor on third axle pneumatic lifting system
42551	Switch signalling oil filter blocked
42608	Coolant pressure signalling 3-switch assembly
42622	Circuit 2 hydraulic oil flow indicator switch
42623	Electric switch in front power steering engagement valve (ZF circ. 1,5)
42624	Electric switch in front power steering lock valve (ZF circ. 1,5)
42700	Fuel filter clogged indicator switch
44031	Fuel level gauge sender unit with reserver warning light contact
44035	Insufficient windscreen washer fluid level gauge control
44036	Insufficient radiator coolant level gauge control
44037	Insufficient power steering liquid level indicator ECU
44043	Engine oil level gauge sender unit
47032	Sender unit for engine oil temperature thermometer
47041	Water temperature transmitter for Retarder ECU
47042	Fuel temperature sensor
47043	Engine fan temperature sensor
47113	Thermometric switch for pre-filter and fuel oil sedimentation tank heating
48035	Engine rpm sensor
48042	Engine rpm sensor (on timing gear)
48043	Turbocharger speed sensor
50003	Electronic dashboard with microprocessor for instrument and indicator lamp display
50005	Multiplex instruments unit module
52001	Switch with built in indicator lamp for windscreen defrost heater
52003	Switch with built in indicator lamp for additional heater
52005	Switch with built in w/l for heated rear view mirrors
52009	Switch with built in w/l for trailer light
52013	Switch for internal aerators
52024	Switch with built in w/l for additional headlamps
52029	Central emergency control switch
52035	Switch with integral rotary headlamp engagement indicator lamp
52044	Switch for differential lock engagement
52045	Switch for front drive engagement
52056	Switch with built-in w/lamp for ASR cutout
52057	ABS cut out switch
52059	Automatic transmission speed selector
52070	Switch for engaging side power takeoff
52071	Switch for engaging rear power takeoff
52090	Suspension levelling switch (ECAS)
52091	Switch with integral indicator lamp for heater rear mirror engagement
52092	Switch for engine or cab heater
52093	Switch for tail hatch locking safety
52094	Switch for spot light
52200	Switch for electric or pneumatic horns
52220	Switch for tail hatch locking safety
52300	Switch for tail hatch locking safety
52302	Switch with built in w/l for hazard warning lights
52304	Switch for fog lights and rear fog lights inhibitor
52307	Switch for exterior lights

Aquila Trucks Centres

52312	Switch controlling headlamp alignment adjustment
52324	Engine brake connecting switch
52326	White and red internal lights switch
52502	Ignition switch for services with starting
52600	Main current switch
53006	Switch for starting from engine compartment
53007	Switch for stopping engine from engine compartment
53022	Switch for front differential lock control
53030	Switch for controlling starting assistance
53061	Cab hydraulic release consensus switch
53062	Cab hydraulic release pump switch (lowering)
53063	Cab hydraulic release pump switch (raising)
53068	Unstable switch for idle position (n) with automatic transmission
53069	Unstable switch for reverse (r) with automatic transmission
53070	Unstable switch for forward gears (d) with automatic transmission
53071	Unstable switch for speed limiter with automatic transmission
53300	Switch for driver's side electric window
53302	Switch for passenger side electric window
53303	Push-button panel for sliding door opening device control
53304	Switch for axle pneumatic suspension control
53305	Switch for drive axle pneumatic suspension control
53306	Switch controlling sun roof motor
53309	Switch for 3rd axle raising system
53311	Switch for controlling window blind
53315	Switch with built in telltale to turn on foglights
53316	Current general contactor switch
53501	Switch signalling vehicle stopped
53503	Switch signalling reversing lights
53504	Front differential lock on indicator switch
53506	Four wheel drive engaged indicator switch
53507	Switch signalling reduced gears engaged
53508	Switch for antistarting with reduced gears
53509	Switch for switching on interior lights
53510	Switch for switching on step lights
53511	Switch signalling cabin unlatched
53512	Switch for antistarting engine device with handbrake off
53521	Switch for signalling longitudinal differential lock
53538	Tilted box indicator switch
53547	Switch for secondary signal from brake pedal to EDC ECU
53565	Brake pedal pressed indicator switch
53567	Switch for signalling side power takeoff engaged
53568	Switch for signalling rear power takeoff engaged
53591	Switch for signalling failure of the hydraulic circuit with auxiliary steering third axle
53593	Switch to light cab side opening lamp
53593	Tool compartment light switch
53602	Switch indicating incomplete sunshade closing
53606	Reed switch (control with magnet) on master clutch cylinder for synchronous protection of mechanical transmission, 70% compressed
53607	Reed switch (control with magnet) on clutch master cylinder for EDC
53801	Switch signalling Rockwell axle differential lock engaged
53802	Switch signalling Rockwell axle differential lock engaged (3rd axle)
54030	4 function steering column switch unit
54033	6 function steering column switch unit
61011	3A 1-diode holder container
61101	1 3A diode container
61104	Air braking system drier resistor
61108	Current limiter resistance for heater windscreen system
61110	Pre-filter and fuel oil sedimentation tank pre-heating resistor
61121	Resistance for engine preheating
61126	Termination resistor for CAN bus
61137	Current limiter resistor for additional engine water heater
61147	Resistor container for ACC (Adaptive Cruise Control)
61150	Urea filter outlet heater with SCR (Selective Catalytic Reduction)
64000	Electric windscreen washer pump
65000	Windscreen wiper unit
66005	Headlamp washer pump
68000	Radio equipment
68001	Speaker

Aquila Trucks Centres

68003	Preamplifier
68005	Feeder 24 V 12 V
68007	City Band (C.B.)
70000	Fuse holder 6 (30 A)
70001	Fuse holder 8
70058	1-way 20A fuse carrier
70066	Fuse holder 1-way 1a for ADR
70401	Fuse holder 4-ways
70402	Fuse holder 4-ways
70403	Fuse holder 4-ways
70601	Fuse holder with 6 fuses
70602	Fuse holder with 6 fuses
70603	Fuse holder with 6 fuses
70604	Fuse holder with 6 fuses
70605	Fuse holder with 6 fuses
72006	7-pin coupling for tractor/trailer ABS/EBS electric connection Coupling with 7 poles for electrical connection of trailer ABS
72010	15-pole coupling for electrical connection to trailer
72021	30-pole connector for the electrical connection to the diagnostic equipment located outside the vehicle
72022	2-pole coupling for external engine start
72025	2-pole 12 V connection for general power supply
72026	2-pole 12 V connection for telephone
72069	16-pole coupling for OBD (On Board Diagnose)
78009	Closed circuit to turbine solenoid valve
78016	Engine fan solenoid valve
78050	Engine brake solenoid valve
78052	ABS/EBS solenoid valve
78053	ASR solenoid valve
78054	Solenoid valve for engaging retarder
78055	Solenoid valve for retarder oil accumulator
78057	EBS front axle air pressure control proportional valve
78058	EBS trailer air pressure control proportional valve
78059	Duplex valve for EBS
78060	Solenoid valve to exclude third-axle braking with ASR
78061	Oversize solenoid valve for axle braking in case of EBS ECU failure
78062	ECAD regeneration solenoid valve (Electronic Controlled Air Dryer)
78063	ECAD bleed solenoid valve (Electronic Controlled Air dryer)
78171	Splitter control solenoid valve
78182	Solenoid valve for mechanical transmission synchronous protection
78203	Solenoid valve for pneumatic horns
78205	Solenoid valve for transverse differential lock
78206	Solenoid valve for longitudinal differential lock
78208	Solenoid valve for total PTO engagement on transmission
78227	Solenoid valve for radiator water recirculation
78238	Rear axle solenoid valve assembly for chassis alignment
78239	Front axle solenoid valve assembly for chassis alignment
78243	Rear axle electropneumatic distributor
78245	Solenoid valve for total PTO disengagement on transmission
78247	Solenoid valve for electronic injection
78248	Solenoid valve for variable geometry turbine order
78249	Solenoid valve for third axle pneumatic valve control
78250	Solenoid valve for 3rd axle lowering
78251	Solenoid valve for engaging transmission side power takeoff
78252	Solenoid valve for engaging transmission rear power takeoff
78265	Solenoid valve for axle transverse differential lock engagement
78266	Metering module solenoid valve with SCR (Selective Catalytic Reduction)
78267	Engine water circulation solenoid valve for urea tank heating with SCR (Selective Catalytic Reduction)
80000	Motor for right electric window
80001	Motor for left electric window
82000	Windscreen defrosting control unit
82005	Auxiliary air heater
82010	Air conditioning system control and indication ECU
84000	Water boiler
84001	Air burner
84005	Additional heater ECU
84006	Additional heater control and indication ECU
84009	Internal temperature sensor
84010	Metering device

Aquila Trucks Centres

84019	Electromagnetic pulley
85000	Cigar lighter
85001	Cigar lighter outlet
85003	Heated rearview mirror (trailer)
85004	Heated rearview mirror (wheel)
85005	Heated rearview mirror
85006	Electrically adjustable heated rear view mirror
85007	Wheel electrically adjustable heated rear view mirror
85008	Trailer electrically adjustable heated rear view mirror
85009	Front Heated rearview mirror
85010	Rear view mirror control
85011	Rearview selection and heated rearview mirror engagement control
85023	Electric latch
85036	Heated pneumatic seat (driver side)
85038	Heated pneumatic seat (passenger side)
85065	Remote control for aligning suspensions and raising 3rd axle
85131	Volumetric sensor
85140	Electronic control for SCR pumping module (Selective Catalytic Reduction)
85141	Catalyst outlet temperature sensor with SCR (Selective Catalytic Reduction)
85142	Level and urea tank temperature sensors with SCR (Selective Catalytic Reduction)
85143	Catalyst inlet temperature sensor with SCR (Selective Catalytic Reduction)
85144	NOX detection sensor with SCR
85150	EDC ECU
85152	Accelerator load sensor (EDC)
85153	Coolant temperature sensor (EDC)
85154	Turbofan air temperature sensor (EDC)
85155	Turbofan air temperature sensor (EDC)
85156	Turbo blower air temperature and pressure sensor for EDC
85158	Turbofan air temperature sensor (EDC)
85159	Temperature and ambient air pressure sensor for EDC
85161	Relative humidity combustion air and temperature sensors with EDC
86002	Sensors for front brake shoe wear
86003	Sensors for rear brake shoe wear
86004	Automatic transmission electronic control unit
86013	Sensor for signalling water in fuel filter
86015	Retarder electronic control unit
86023	Vehicle raising/lowering control unit Ecas
86029	Centralized door lock ECU
86030	Sensor detecting heat irradiation
86038	Centralized lube ECU
86053	Multiplex control and signal unit from bed positions
86116	Multiplex body computer control unit
86119	Multiplex driver door module ECU
86053	Multiplex control and indication ECU from stretchers
86116	Multiplex body computer ECU
86117	Multiplex front frame computer ECU
86118	Multiplex rear frame computer ECU
86119	Multiplex Driver Door Module ECU
86120	Multiplex passenger door module ECU
86123	Multiplex ECU for steering control shaft interfacing
86124	Cabin operation with Multiplex ECU
86125	ECU for VDI (Vehicle Data Interface)
86126	ECU for EM (Expansion module)
86127	ECU for DMI (Data Management Interface)
86128	M.E.T. chassis ECU
86129	ECU for MC-NET (Mobile Communication Network)
86130	Navigator ECU
86131	Telematic ECU
86132	VCM (Vehicle Control Module) ECU
88000	ABS ECU
88001	ABS/EBS system sensor
88005	EBS system ECU
88006	EBS rear axle air pressure control modulator
88007	Potentiometric sensor for front wheel shoe position indicator
88008	Potentiometric sensor for rear wheel shoe position indicator
88010	Rear axle brake application pressure sensor
88011	Potentiometric sensor for third axle skid wear signalling
88012	SAS sensor (= Steering Angle Sensor) for EBS
88013	ESC module (= Electronic Stability Control) for EBS
89000	Fridge
89010	Food warmer

Aquila Trucks Centres

MAIN CHANGES

For vehicles with Euro 4 engine the electric/electronic system is subject to important variations.

In order to handle the increased complexity of Euro 4 operations demanded to the engine control system extra hardware and software resources, the VCM (Vehicle Computer Module) has been added so that vehicle functions can be reallocated on it, which up to Euro 3 had been carried out by the EDC engine control unit, therefore more development flexibility is available for vehicle functions. The immobilizer function has been also integrated on this unit.

The New Body Controller (IBC3) unlike the Body Computer (BC) distributes direct positives and key-locked, protected by external fuses (replaceable) or internal (resettable). In the chassis there is the MET control unit (chassis electronic module) which controls the chassis power devices, thus replacing the FFC and RFC control units.

For the automated transmission on the new Euro 4 vehicle range the gear selector has been removed. Its functions are carried out from the control pushbuttons located on the dashboard center panel combined with the power steering lever.

The EM control unit (Expansion Module) replaces the DMI (Data Management Interface). It controls the power takeoffs and makes it possible to implement complex applications and connections to different devices through the CAN-open line. It communicates with the other control units through the CAN DVB line.

The SCR (Selective Catalytic Reduction) - Denox 2 is on the entire Average/Heavy Euro 4 Range with the Urea Dosing System (UDS) positioned on the lower side of the frame.


The ENGINE ECM (Engine Control Module) replaces EDC MS 6.2.

The new Cluster is monochrome with more functions compared to the previous one.

The introduction of the new units and the change of the previous ones require changes of the vehicle system structure. The following CAN lines are on the VCM unit:

- VDB - Vehicle Data Bus
- ECB - Engine Control Bus
- FMB - Fuhrpark Management Bus

Figure 2

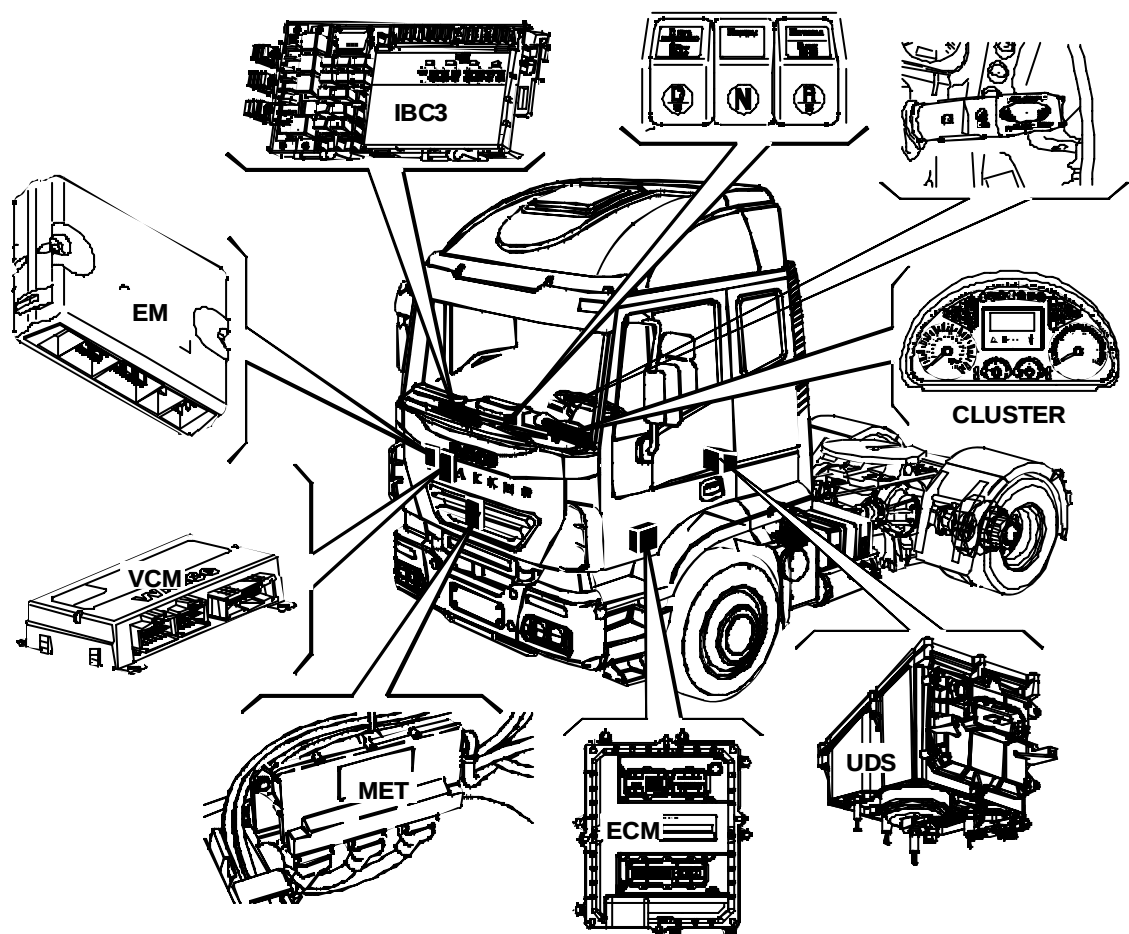

112584

Aquila Trucks Centres

CAN LINES


Dialogue between the Easy Mux system, vehicle systems, engine control unit, SCR system, radio and various setters is carried out by means of the CAN lines:

- BCB - Body Control Bus
- VDB - Vehicle Data Bus
- ECB - Engine Control Bus
- IDB - Infotainment Data Bus
- FMB - Fuhrpark Management Bus

BCB (Body Control Bus) communication line

It enables the communication between the IBC3 and MET control units of the Easy Mux system and the other control units of the different services onboard.

Figure 3

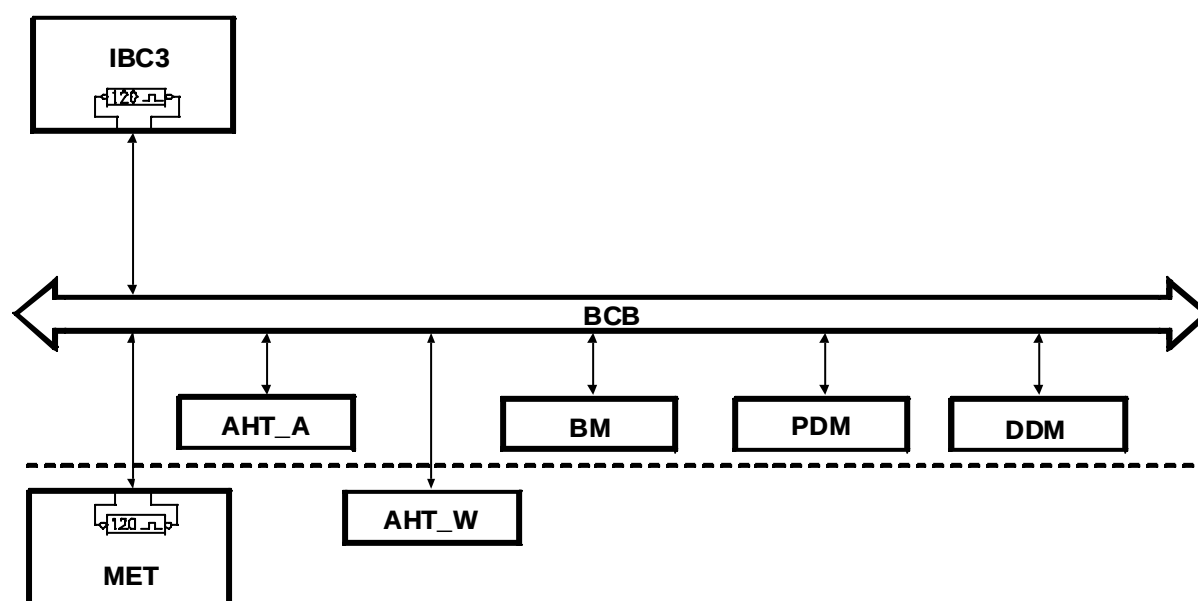

Technical features

- Data transmission speed
- Color of the wire

112585

62.500 (BIT/SEC)

Grey

List of Units


Ref.	Description
IBC3	Body Controller
DDM	Driver Door Module control unit
PDM	Passenger Door Module control unit
BM	Bed Module
MET	MET chassis control unit
AHT-A	Air heater
AHT-W	Water heater

Aquila Trucks Centres

VDB (Vehicle Data Bus) Communication Line

Allows the electronic systems on the vehicle to dialogue. The units connected to it are: Eurotronic Transmission, Retarder, ABS, Ecas, Diagnosis connector, VCM, Tachograph, ACC, SWI, EM, (Mc Net). This line also dialogues with the Cluster and the Body Computer.

Figure 4

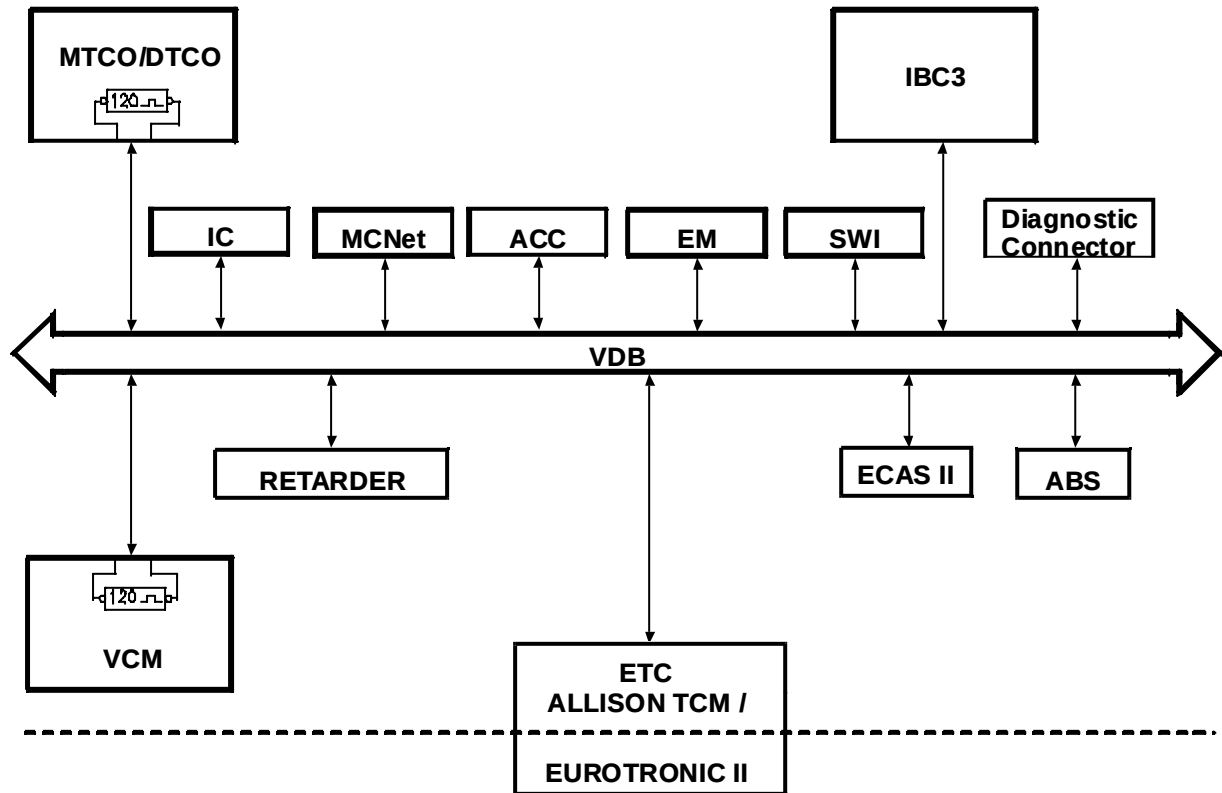

Features

- Data transmission speed 250.000 (BIT/SEC)
- Color of the wire Black

List of Units


Ref.	Description
MTCO	Tachograph
DTCO	Digital tachograph
VCM	Vehicle Control Module control unit
IC	Cluster
IBC3	Body Controller
SWI	Steering Wheel Interface control unit
Diagnostic Connector	30-pole diagnosis connector
ABS	ABS control unit
McNet	Electronic control unit for Mobile Communication Network
RETARDER	Intarder control unit
ECAS II	Air suspension contrl unit
EUROTRONIC II	Eurotronic II automatic gearbox control unit
ALLISON TCM	Allison automatic gearbox control unit
ACC	Radar ACC (Adaptive Cruise Control) control unit

Aquila Trucks Centres

ECB (Engine Control Bus) communication line

Allows the units and the engine control sensors to dialogue together. The units connected to it are:: EDC, VCM, DCU15 and the OBD connector.

Figure 5

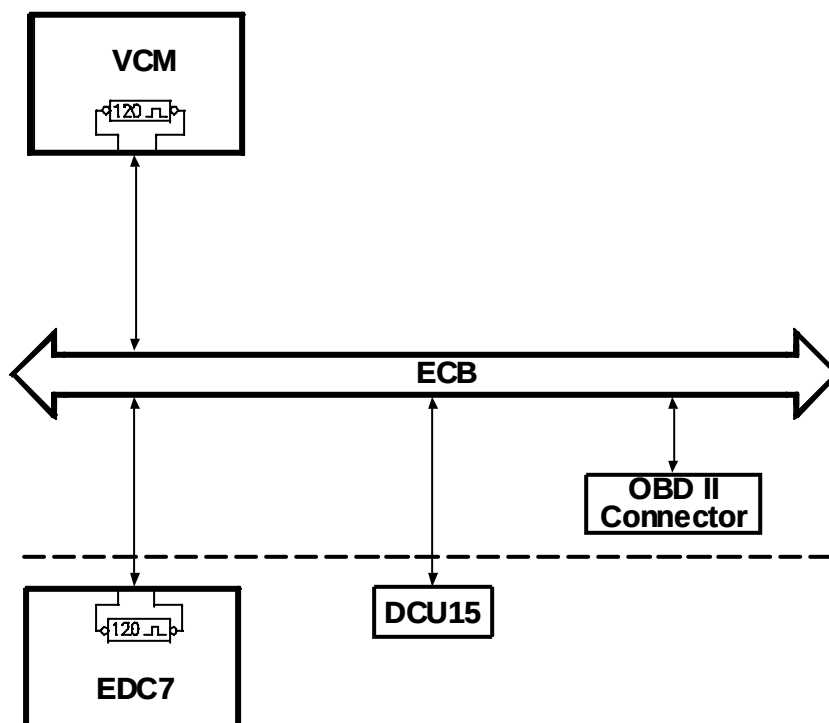

112280

Features

- Data transmission speed 250.000 (BIT/SEC)
- Color of the wire Yellow

List of Units


Ref.	Description
VCM	Vehicle Control Module Unit
EDC7	Engine control unit
DCU15	SCR pumping module unit
OBD II Connector	16 pole connector for OBD (onbord diagnose)

Aquila Trucks Centres

I.D.B. (Infotainment Data Bus) communication line

Allows communication between the Cluster and the Radio. The messages sent are shown on the CLUSTER.

Figure 6

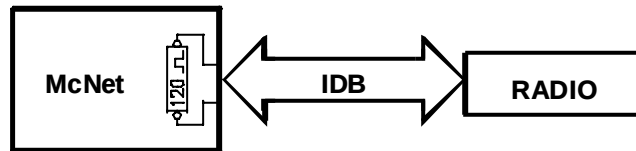

112586

Technical features

- Data transmission speed 100.000 (BIT/SEC)
- Color of the wire Blue

List of Units


Ref.	Description
Radio	Radio
McNet	Electronic control unit for Mobile Communication Network

Aquila Trucks Centres

F.M.B. (Fuhrpark Managemant Bus) communication line

Allows communication between the different electronic systems (accessories) on the vehicle, , FMS (Telephone) connector and VCM unit.

Figure 7

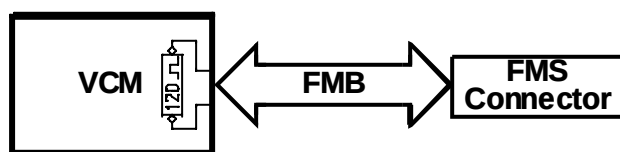

112283

Technical features

- Data transmission speed 250.000 (BIT/SEC)
- Color of the wire White


List of Units

Ref.	Description
VCM	Vehicle Control Module Unit
FMS	Connector FMS

Aquila Trucks Centres

CAN LINE ASSEMBLY DRAWING

Figure 8

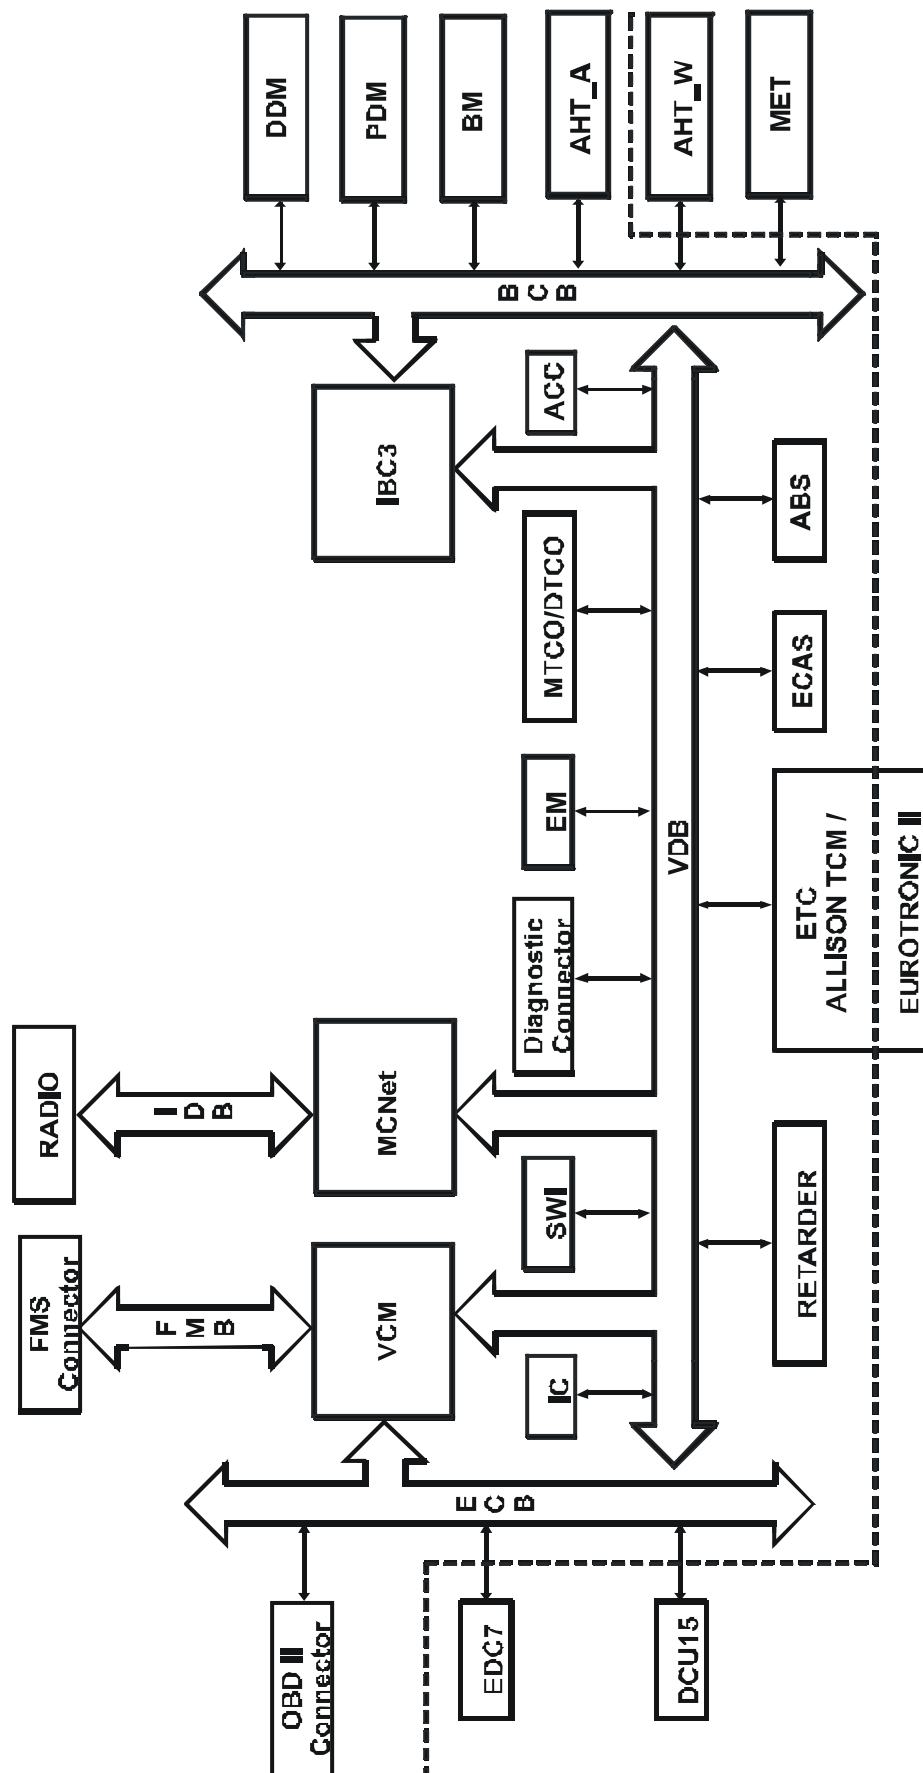

112587

Aquila Trucks Centres

POWER NETWORK



Never disconnect the batteries from the system with the engine running.
Before connecting the batteries to the system, make sure that the system is well insulated.
Disconnect the batteries from the system when charging them.

The purpose of the electric system is to generate, regulate, store and distribute the energy needed to make the vehicle components work.

For this reason the supply of the base electric system is ensured by a generator (28V - 60A -90A alternator) and two batteries, each with 12 V 170 Ah (opt 220 Ah) connected in series.

A mobile fuse holder containing a 20 Amp fuse is located close to the batteries. This fuse supplies:

- Fuse holder 70605/1
- Body Controller (A07)
- Refrigerator
- ACC presetting

This fuse is not present on the ADR version.

Power cable section:

- battery direct cable = 16 mm²
- fuse cables = 4 mm²

Attain to what detected on the vehicle for the remaining sections.


Negative network

The batteries are connected to the frame ground with a brown 70 mm² cable, at ground point M1 on the left sidemember (Figure 9).

The starter motor is connected to the frame ground (M2) through a 70 mm² cable, fastened on the right sidemember near the actual motor.


The same cable serves for connecting the whole engine unit to the frame ground.

Figure 9

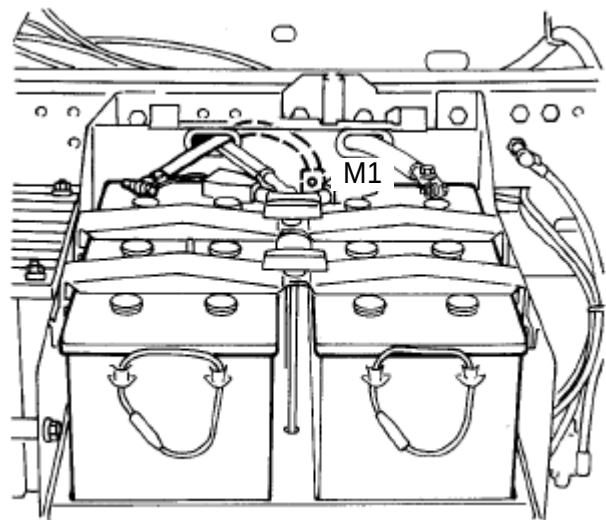

GROUND POINT OF BATTERIES ON LEFT SIDEMEMBER

Figure 10

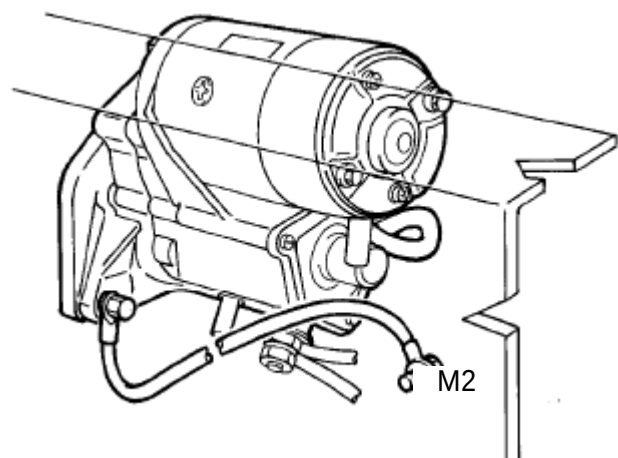


6632

STARTER MOTOR AND ENGINE GROUND POINT

Aquila Trucks Centres

GROUND POINTS

Figure 11

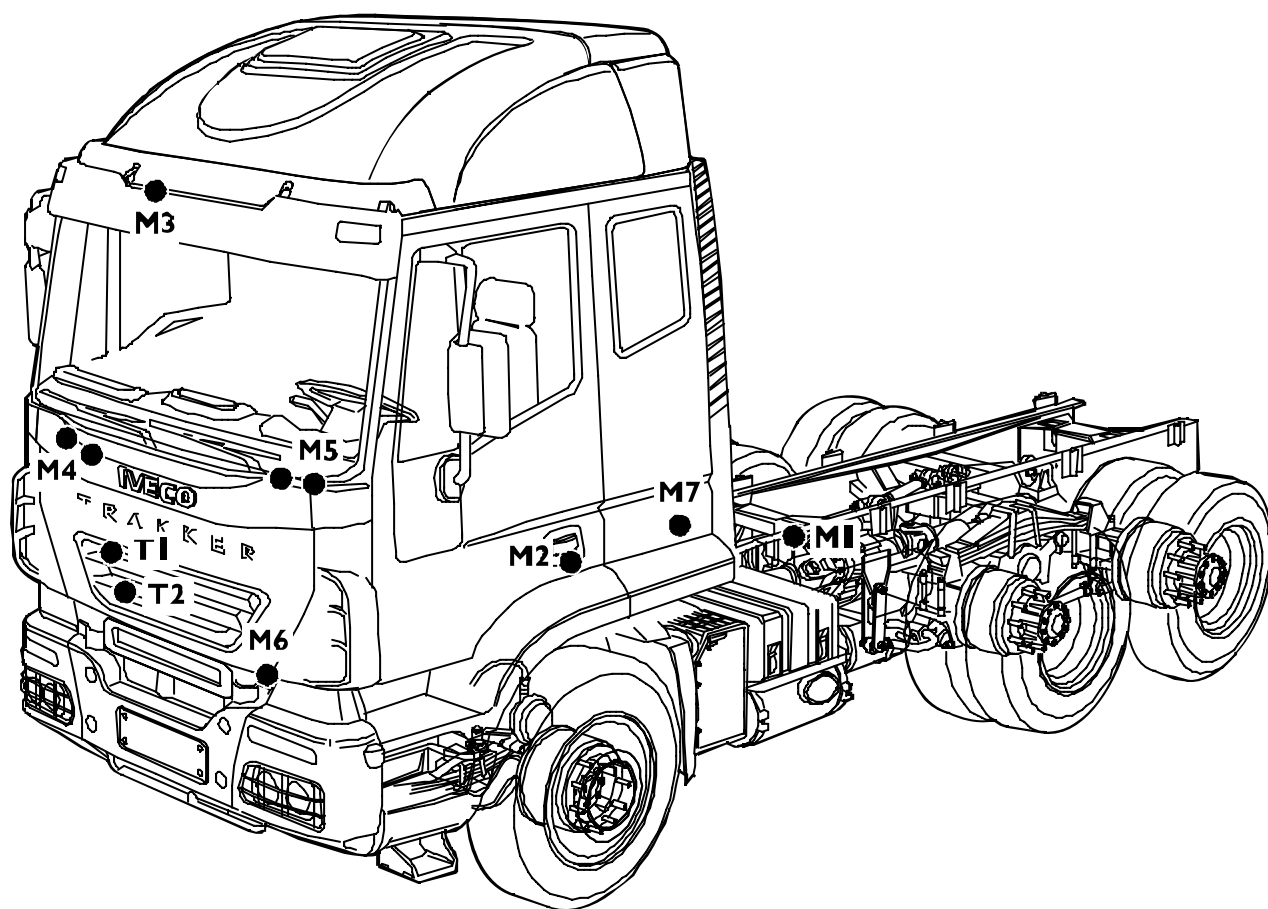

91664

M1. Battery ground - M2. Starter motor ground - M3. Upper cab ground - M4. Right inner cab ground - M5. Left inner cab ground - M6. Front right frame ground - M7. Engine ground - T1 - T2. Equipotential braid

Aquila Trucks Centres

ELECTRICAL EQUIPOTENTIAL BRAID


Though generally protected against the influence of on-board equipment voltage, electronic components nevertheless remain particularly sensitive electromagnetic compatibility issues, of different nature such as:

- generated by the vehicles
- external.

A suitable size flexible electrolytic copper braid has been provided on the vehicles to minimize these phenomena and return main cab and frame structures to the equipotential state.


Check that the braid is properly attached to the frame and the cab, in the event of defective cab grounding.

Figure 12

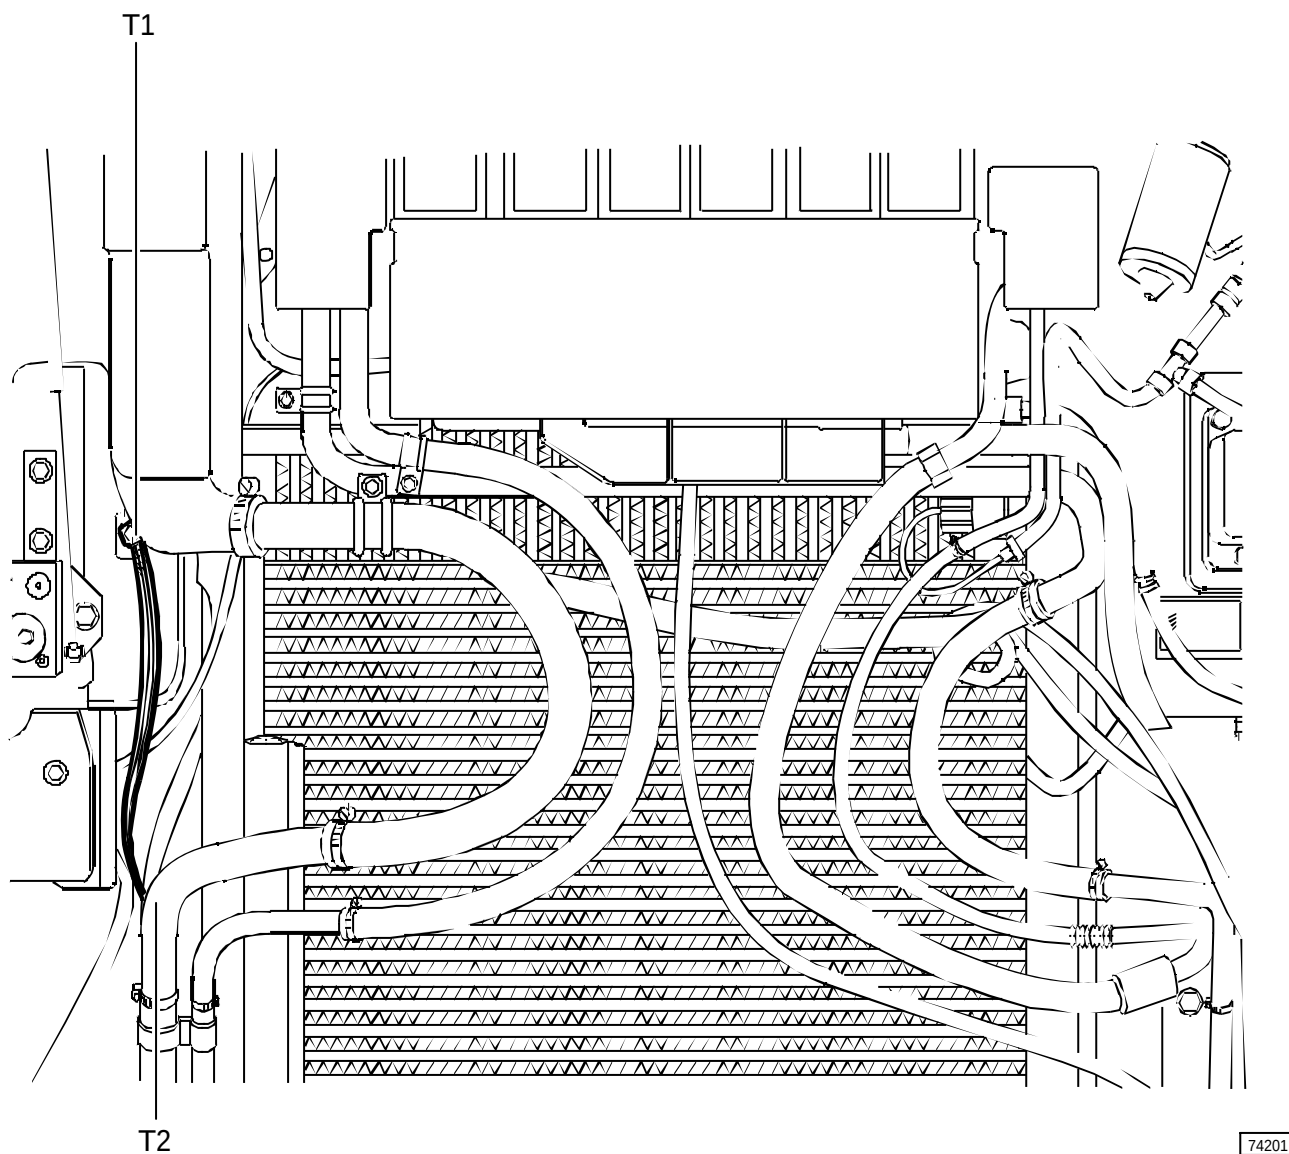

Aquila Trucks Centres


Figure 13

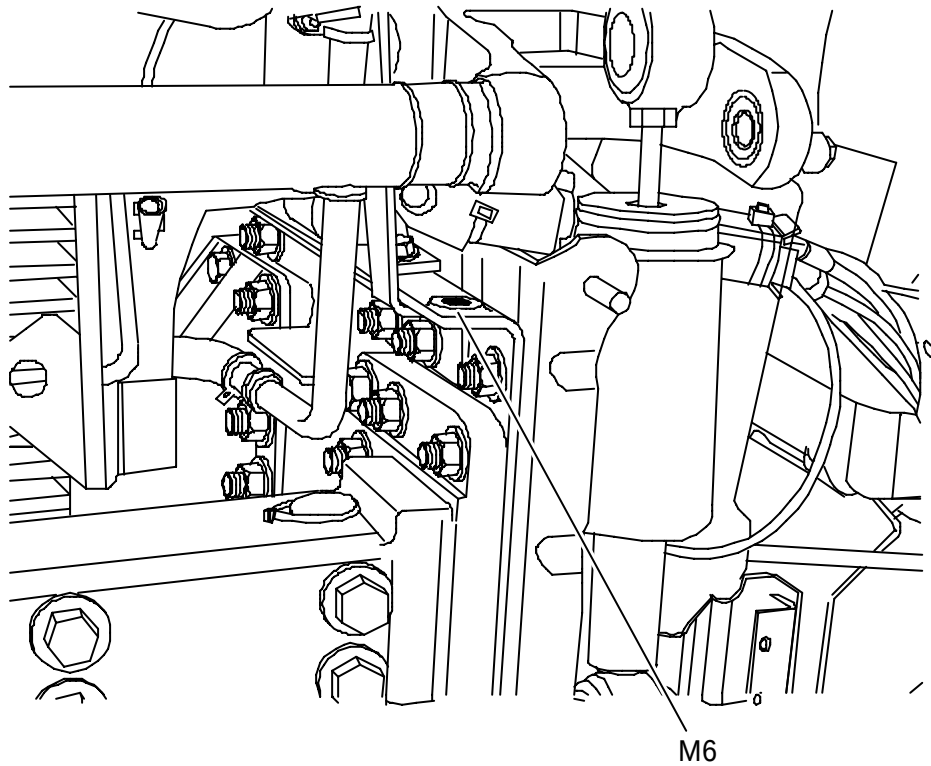

49846

GROUND POINT ON THE LEFT FRONT FRAME

Figure 14

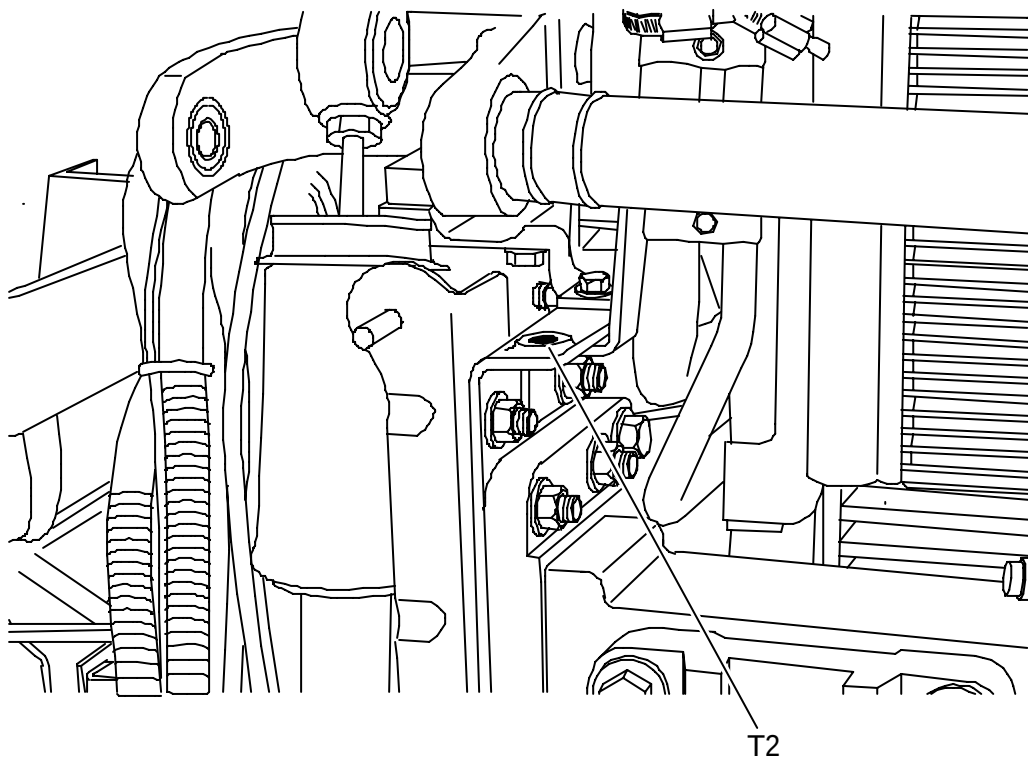


49844

GROUND POINT ON THE RIGHT FRONT FRAME

Aquila Trucks Centres


Figure 15

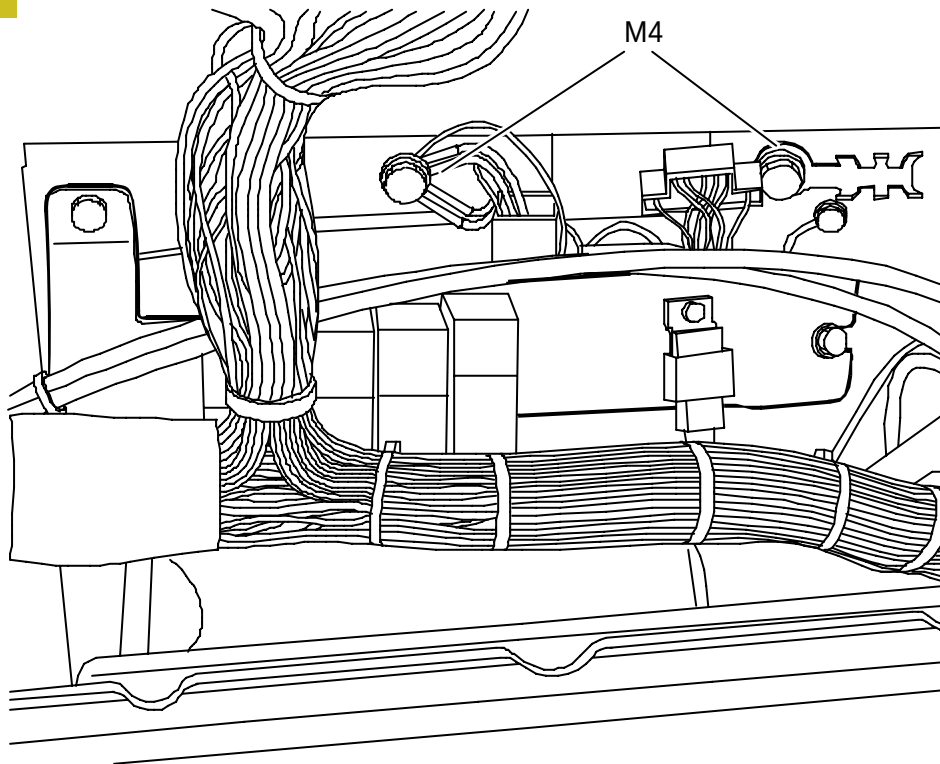

49849

GROUND POINT BEHIND THE BODY COMPUTER

Figure 16

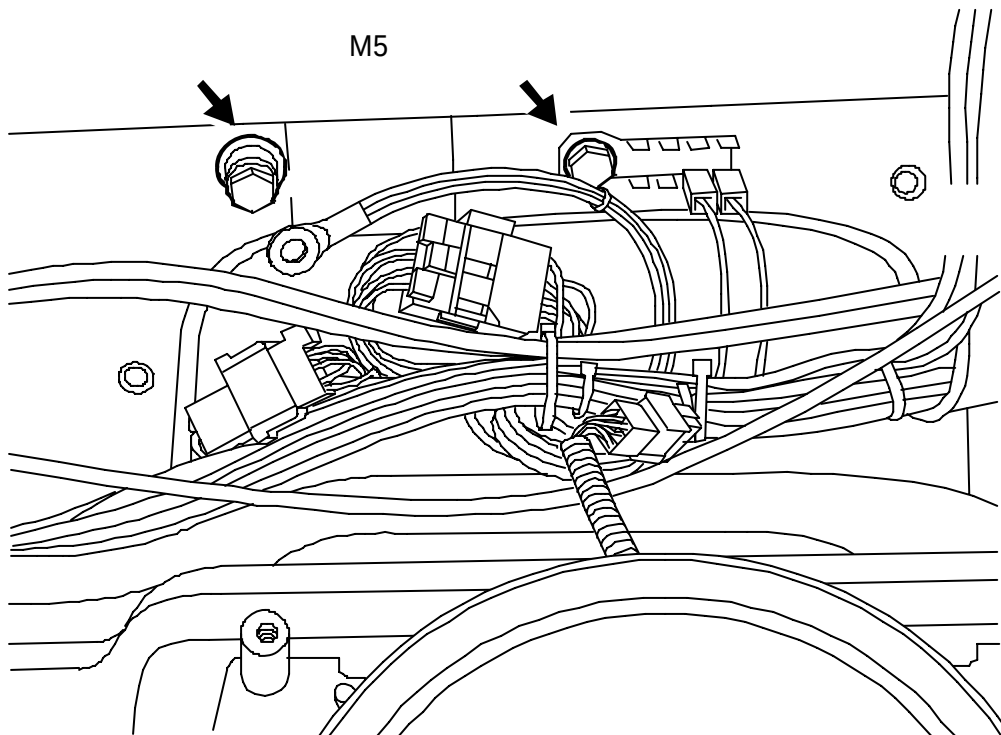

73754


GROUND POINT BEHIND THE CLUSTER

Aquila Trucks Centres

28 V - 40 A ÷ 90 A "BOSCH" ALTERNATOR


Figure 17

03000

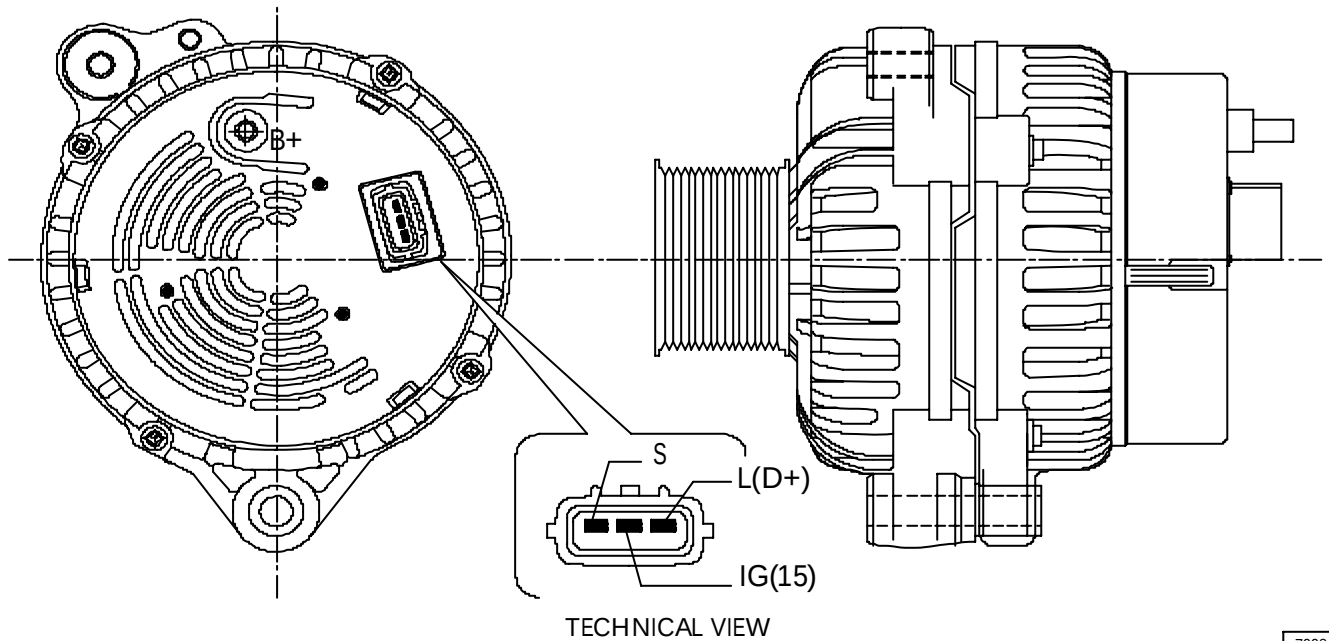


7998

Figure 18

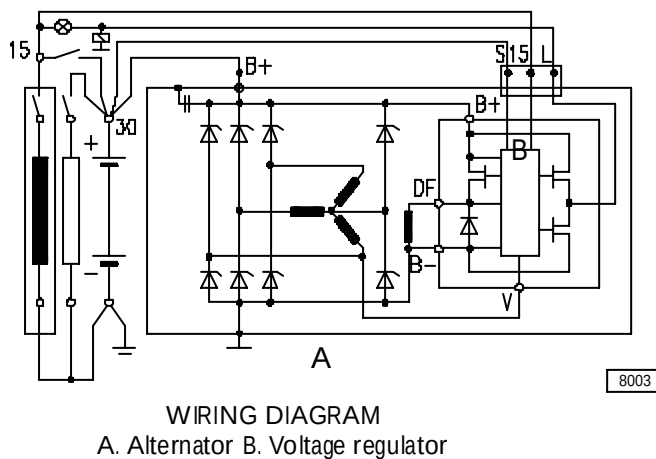


8003

Figure 19

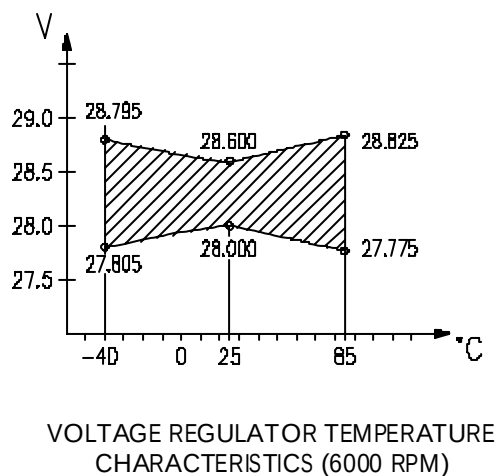

8000

Figure 20

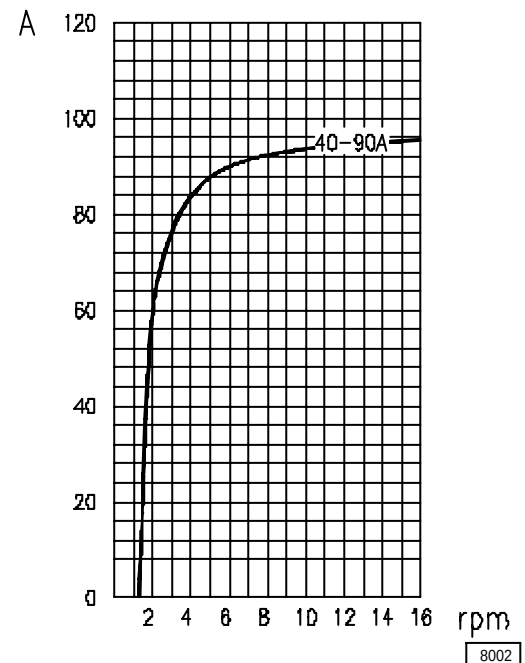


8002

Characteristics

Rated voltage	28 V
Rated power	90 A
Current at environment temperature 1800 RPM/40 A	
At 25 °C and rated voltage	6000 RPM/90 A
Direction of rotation	clockwise, seen from pulley
Weight	7.8 kg

Aquila Trucks Centres

Figure 21

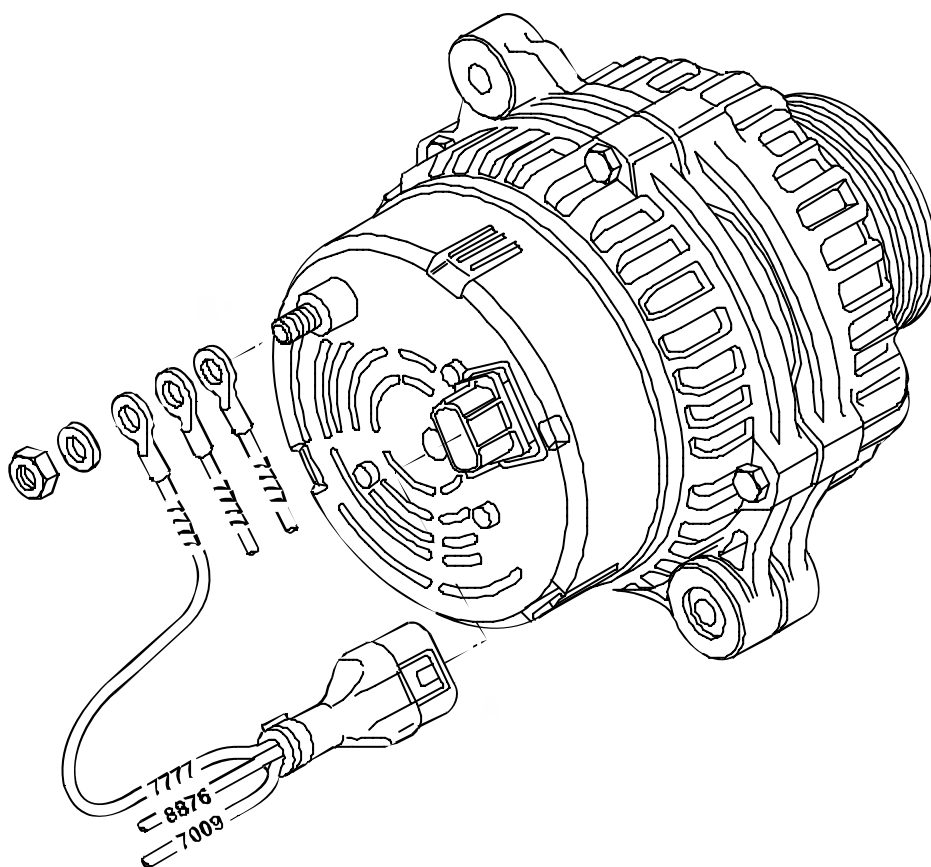

8535

PERSPECTIVE VIEW WITH CORRESPONDING ELECTRICAL CONNECTIONS

Ref.	Function	Cable colour code
L 15 (IG) S	To F.F.C. center clamp J2/B24 To remote switch 25213 clamp 87 (via fuse F6-70601) Positive (+30)	7009 8876 7777
B+	Clamp S alternator Positive +30 power positive +30 positive to starter motor Positive +30	7777 7777 7777

Aquila Trucks Centres

24V - 5.5 KW "NIPPONDENSO" STARTER MOTOR

08000

Figure 22


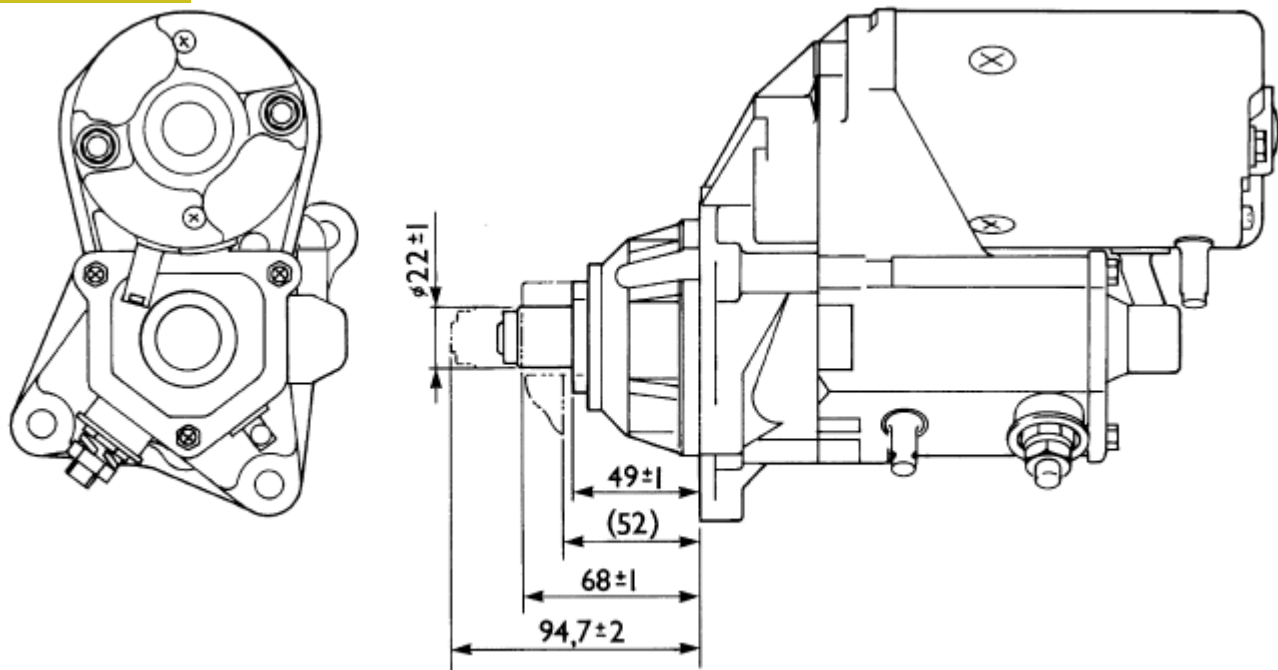



Figure 23

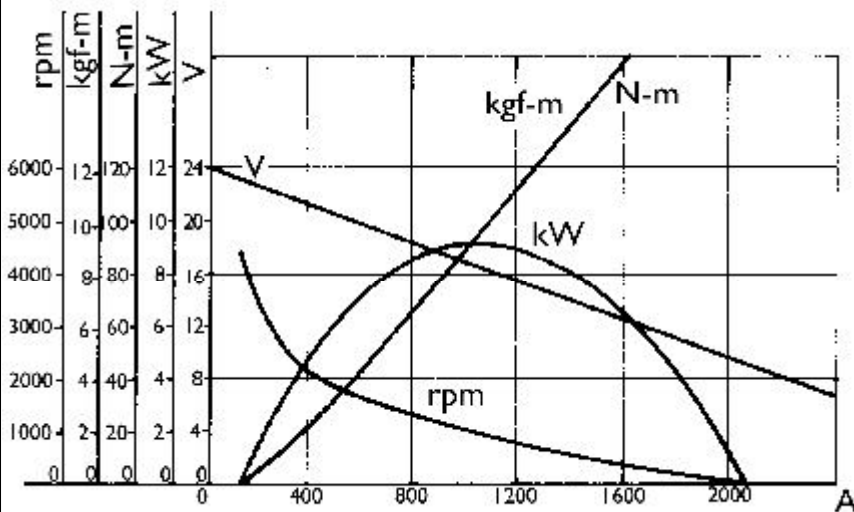

CHARACTERISTIC CURVES

4957

Figure 24

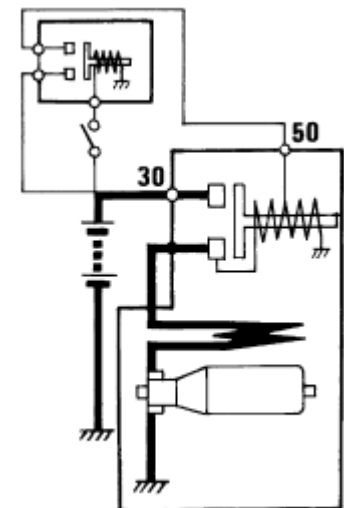


WIRING DIAGRAM

4958

Characteristics		Specific Power (20 °C)	Test cond.	Characteristics
Rated power	5.5 kW	Loadless	23V	120A MAX (3800rpm MIN.)
System voltage	24V	Load	16V (49 N-m)	690A MAX. (900rpm MIN.)
Engagement system	Positive approach control	Stall	6V	1260A MAX. (73.5 N-m MIN.)
Adjusted time	30 sec.			
Direction of rotation	clockwise, seen from end of pinion			
Weight	approx. 10.5 kg			
Operating voltage	16V MAX. (20°C)			
Water resistance	Water spray test to JIS D0203 'SI'			

Aquila Trucks Centres

Figure 25

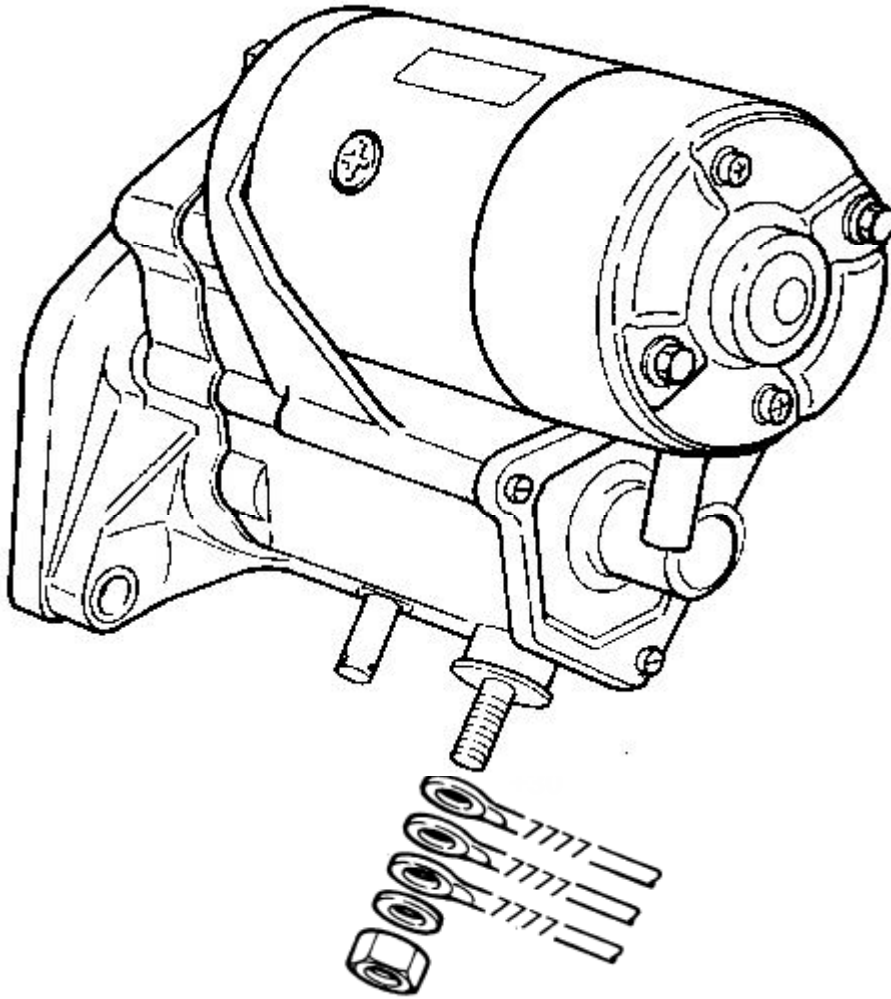

6658


PERSPECTIVE VIEW WITH ASSOCIATED ELECTRICAL CONNECTIONS

Connector	Function	Cable colour code
+30	+30 positive for starter motor power from battery positive clamp (via the T.G.C.)	7777
+30	+30 positive to the alternator	7777
+30	+30 positive to remote switch for engine preheat on consent	7777
+50	+50 positive for key switch	8888

Aquila Trucks Centres

JUNCTION CONNECTORS**Location of the junction connectors - cab**

Figure 26

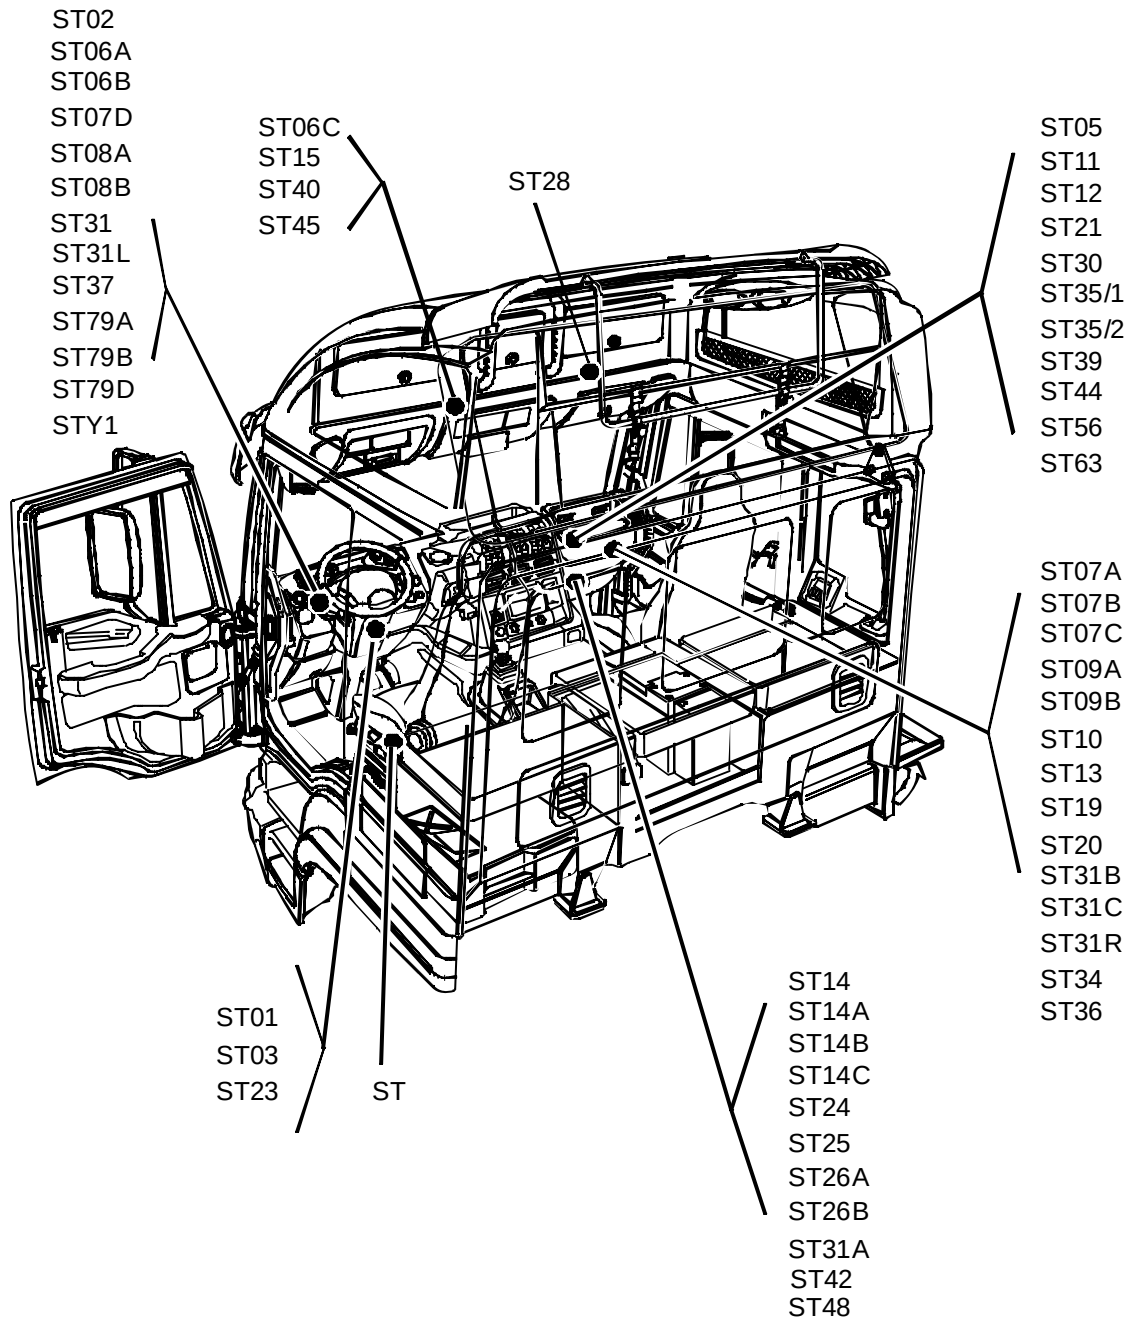


113406

The location of the connectors (cab - chassis) could change to suit wiring needs.

Aquila Trucks Centres

Location of the junction connectors - chassis

Figure 27

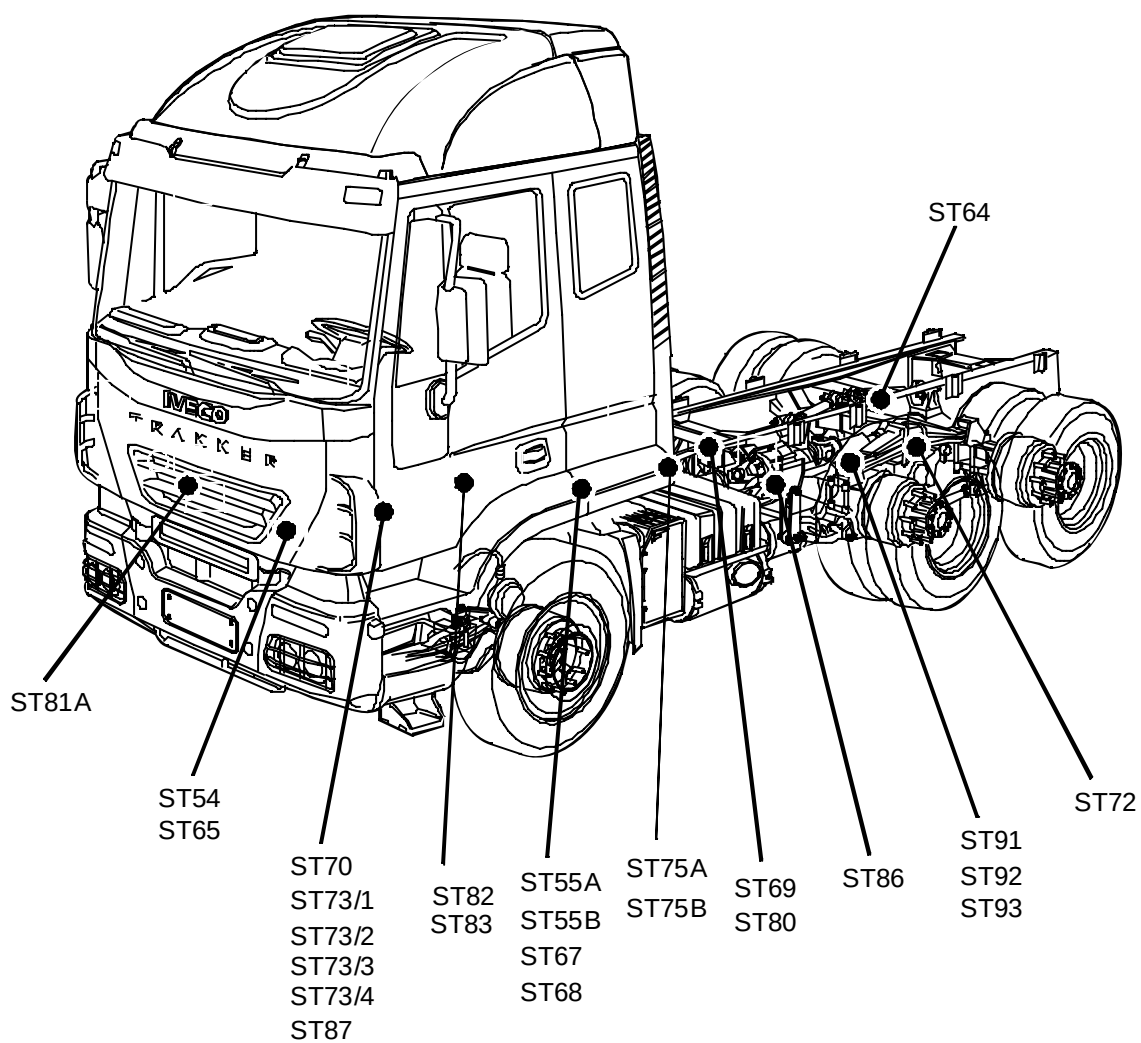

113407

Aquila Trucks Centres

List of connectors

Name	Description
ST 01	Connection for starting commutator
ST 02	Connection for steering column
ST 03	Connection for speed limiter / Cruise control set
ST 05	Connection for Eurotronic
ST 06A	Connection for roof panel wings devices on the driver side
ST 06B	Connection for tachograph
ST 06C	Connection for Toll Collect
ST 07A	Connection for roof panel wings devices on the passenger side
ST 07B	Connection for navigation and for IT tools
ST 07C	Connection for heatable windscreen
ST 07D	Connection for rotating headlights
ST 08A	Connection for DDM control unit
ST 08B	Connection for driver side door
ST 09A	Connection for PDM control unit
ST 09B	Connection for passenger side door
ST 10	Connection for tools lighting
ST 11	Connection for trailer retarder brake
ST 12	Connection for ABS/EBS tractor and trailer electrical connection
ST 13	Connection for auxiliary air heater CAN line
ST 14	Connection for Ecas bodybuilders (cab)
ST 14A	Connection for bodybuilders (cab)
ST 14B	Connection for bodybuilders (cab)
ST 14C	Connection for set up devices (Allison)
ST 15	Connection for couplings in the high roof
ST 19	Connection for heater
ST 20	Connection for air- conditioner
ST 21	Connection for radiator water recirculation solenoid valve
ST 23	Connection for Immobilizer antenna
ST 24	Connection for air conditioning system control unit CAN line
ST 25	Connection for Intarder
ST 26A	Connection for Ecas
ST 26B	Connection for ABS/EBS
ST 28	Connection for rotating headlights
ST 30	Connection for ADR (tachograph) provision
ST 31	Connection for ECAS remote control
ST 31A	Connection for cab rear
ST 31B	Connection for auxiliary air heating
ST 31C	Connection for auxiliary air heating temperature sensor
ST 31L	Connection for pneumatic heated seat
ST 31R	Connection for pneumatic heated seat
ST 34	Connection for ACC provision / simple "H" gearbox control
ST 35/1	Connection for air conditioner with manual control
ST 35/2	Connection for air conditioning with manual control
ST 36	Connection for T.G.C. / I.G.C.
ST 37	Connection for Toll Collect
ST 39	Connection for differential lock
ST 40	Connection for navigation and for IT tools
ST 42	Connection for DDM/PDM supplies


Aquila Trucks Centres

Name	Description
ST 44	Connection for centralized closing with remote control
ST 45	Connection for 24 V radio
ST 48	Connection for DMI / EM control unit for PTO
ST 49	Connection for Allison setup
ST 54	Connection for ACC provision
ST 55A	Connection for SCR system (Urea)
ST 55B	Connection for SCR system (Urea)
ST 56	Connection for ADR (15) Alternator
ST 59	Connection for ECAS breakdown switch/longitudinal blockage of 2 nd front axle (8x8)
ST 63	Connection for auxiliary water heater CAN line (BCB)
ST 64	Connection for 15-poles current output free pins
ST 65	CAN line connection for trailer (PTO with EM)
ST 67	Connection for urea dosing module solenoid valve
ST 68	Connection for Urea temperature sensor
ST 69	Connection for Intarder
ST 70	Connection for ASR solenoid valve
ST 72	Connection for 35 axles for shoes wear and tear / transverse differential blocking
ST 73/1	Connection for indicating 1st front axle wear (right)
ST 73/2	Connection for indicating 1st front axle wear (left)
ST 73/3	Connection for indicating 2nd front axle wear (right)
ST 73/4	Connection for indicating 2nd front axle wear (left)
ST 77	Connection for right hand side SML indicator lamp (Side Marker Lamp)
ST 78	Connection for left hand side SML indicator lamp (Side Marker Lamp)
ST 79A	Connection for external cab front
ST 79B	Connection for windshield washer and warning horn unit
ST 79D	Connection for brake pedal switch (ABS)
ST 80	Connection for mechanic gearbox
ST 81A	Connection for front lights
ST 82	Connection for components on the engine
ST 83	Connection for components on engine
ST 85L	Connection for left hand side plate light
ST 85R	Connection for right hand side plate light
ST 86	Connection for T.G.C. / I.G.C.
ST 88	Connection for trailer connectors
ST 91	Connection for PTO1 (DMI)
ST 92	Connection for PTO2 (DMI)
ST 93	Connection for PTO3 (DMI)
ST 99	Connection for rear axle ECAS
ST	Connection for ECAS
STY/1	Connection for switch on clutch

Aquila Trucks Centres

Junction connector ST01 (black) - turn on key

Figure 28

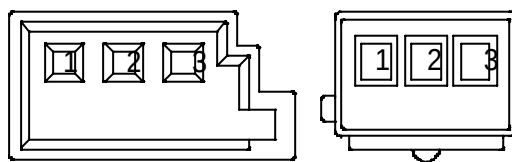


KEY SIDE CONNECTOR VIEW

107169

Pin	Function	Cable colour code
1	Positive +30 for ignition key	7777
2	Terminal 15 ignition key	8887
3	Terminal 50 ignition key	8888

ST02 (green) - connection for steering column

Figure 29

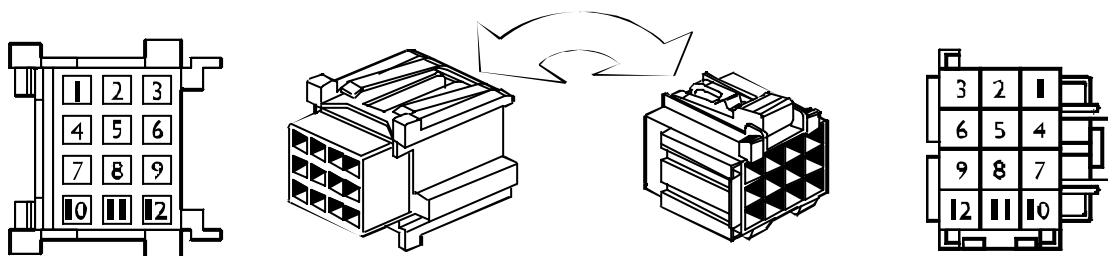

KEY SIDE CONNECTOR VIEW


107538

Pin	Function	Cable colour code
1	CAN L line (ICB)	Green
2	CAN H line (ICB)	White
3	Ground	0000
4	Negative for warning horn	1116
5	Positive +15 from ignition key (15)	8887
6	Positive for steering column switch unit symbols lighting	4442
7	Positive (+30)	7906
8	Positive from ignition key (50)	8888
9	Speed limiter signal	9968
10	Ground	0000
11	-	-
12	-	-

Aquila Trucks Centres

ST03 junction connector - speed limiter signal / Cruise Control Set

Figure 30

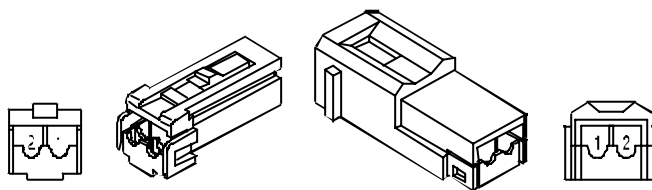

101525


KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	Speed limiter signal	9968
2	-	-

Aquila Trucks Centres

ST05 junction connector (green) - Eurotronic II


Figure 31

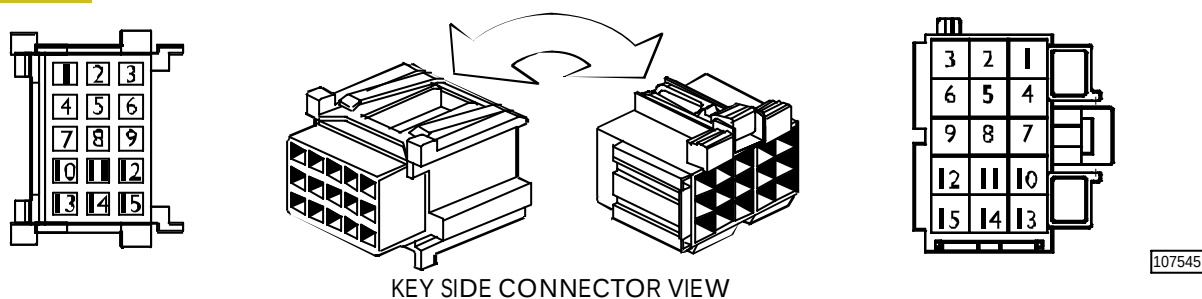

Pin	Function	Cable colour code
1	CAN VDB Line (L)	Green
2	CAN VDB Line (H)	White
3	CAN VDB Line (L)	Green
4	CAN VDB Line (H)	White
5	K line automatic gearbox	2297
6	Automatic gearbox system power supply (Positive +15)	8102
7	Positive symbols lighting	4442
8	Negative signal forward gear with automatic gearbox	0127
9	VCM control unit pin - X3/24	0125
10	Negative signal from neutral position of the automatic gearbox	0147
11	Negative signal reverse gear with automatic gearbox	0128
12	VCM control unit pin - X3/41	0126
13	Automatic gearbox system power supply (Positive +30)	7101
14	Ground	0000
15	Speed limiter signal	9968

ST06A junction connector (yellow) - roof panel wings devices on the driver side

Figure 32

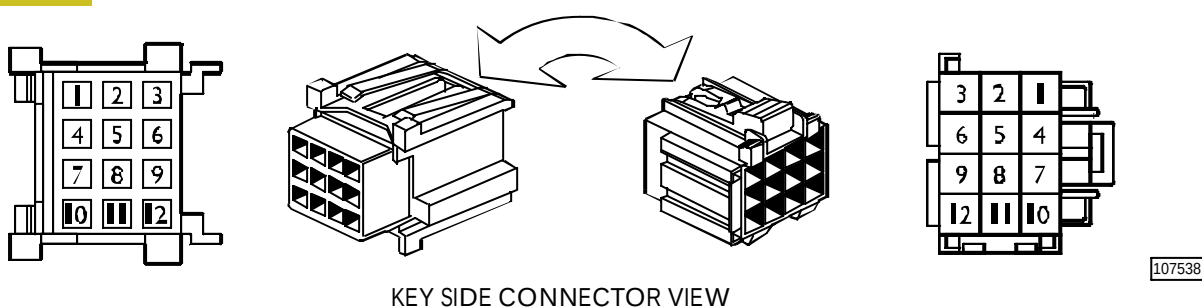


Pin	Function	Cable colour code
1	Positive left loudspeaker (preamplifier)	1188
2	Negative left loudspeaker (preamplifier)	1186
3	Sliding roof closing control power supply	7011
4	Sliding roof opening control power supply	7010
5	Positive for warning horn solenoid valve	1133
6	CAN line (IDB) H	White
7	CAN line (IDB) L	Green
8	Positive symbols lighting	4442
9	Positive +15	8871
10	-	-
11	-	-
12	-	-

Aquila Trucks Centres

ST06B junction connector (yellow) - tachograph


Figure 33

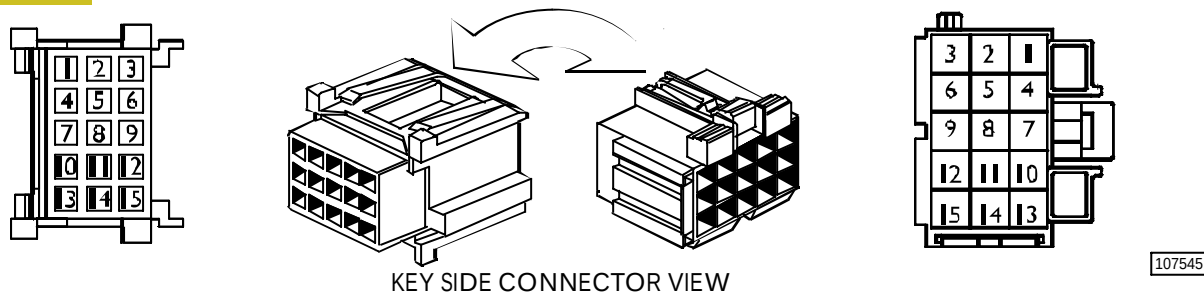

Pin	Function	Cable colour code
1	Isolated negative tachograph transmitter	0058
2	Speed signal tachograph transmitter	5517
3	Inverted signal tachograph transmitter	5516
4	Tachograph transmitter power supply	5514
5	Speed pulse for EDC	5155
6	CAN VDB Line (H)	White
7	CAN VDB Line (L)	Green
8	-	-
9	Ground	0000
10	Tachograph power supply (Positive +15)	8871
11	Positive symbols lighting	4442
12	Tachograph power supply (battery positive +Batt) after fuse 70058	7768
13	K line	2997
14	Tachograph signal distance - travelled for Cluster	5518
15	-	-

ST06C junction connector (yellow) - Toll Collect

Figure 34

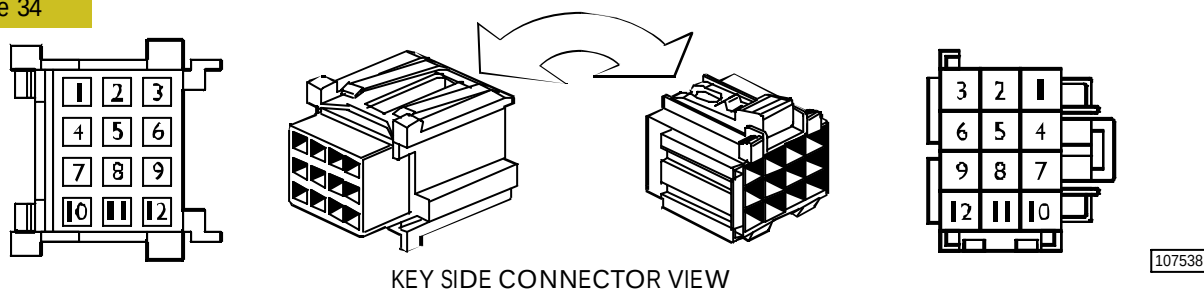


Pin	Function	Cable colour code
1	Positive +30	7772
2	Positive symbols lighting	4442
3	Positive +15	8871
4	Speed signal (tachograph)	5541
5	Ground	0000
6	Positive symbols lighting	4444
7	-	2222
8	CAN line	Yellow
9	CAN line	Red
10	-	6666
11	Positive +30	7777
12	Ground	0000

Aquila Trucks Centres

ST07A junction connector (yellow) - roof panel wings devices on the passenger side


Figure 35

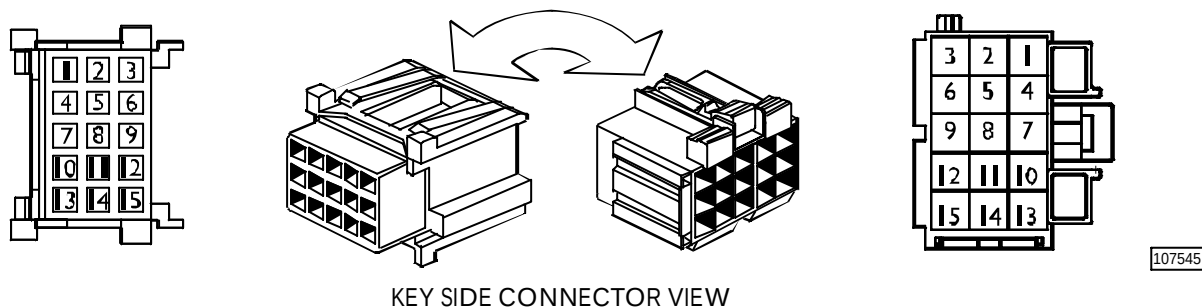

Pin	Function	Cable colour code
1	Positive for front end-outline marker lamps	3339
2	Positive for voltage reducer	7772
3	Loudspeaker signal (preamplifier)	1184
4	Loudspeaker signal (preamplifier)	1183
5	Positive for reading lights (12V)	7712
6	Positive 12V	7712
7	Positive for overhead light (white light)	4423
8	Positive step lighting	4445
9	Positive for overhead light (blue lights)	4410
10	Positive for overhead light (red lights)	4422
11	Negative for sunshade curtain	0974
12	Sunshade curtain closing signal	8065
13	Positive for sunshade curtain motor	8063
14	Positive for sunshade curtain motor	8064
15	-	-

ST07B junction connector (yellow) - navigation and it tools

Figure 36

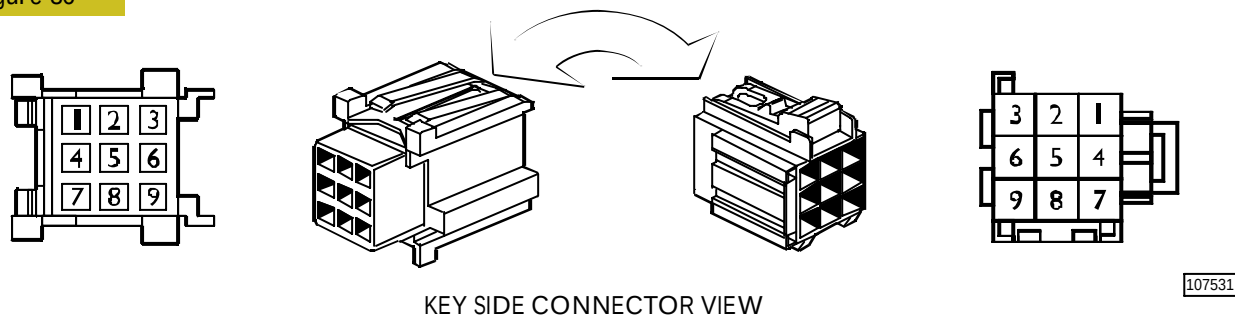


Pin	Function	Cable colour code
1	Positive +30 after TGC	7772
2	Positive +15	8871
3	Speed signal for navigator	5541
4	-	-
5	CAN L line (FMB)	Green
6	CAN H line (FMB)	White
7	Positive for instruments lighting	4442
8	Reverse gear signal	2268
9	-	-

Aquila Trucks Centres

ST07C junction connector (black) - heatable windshield

Figure 37

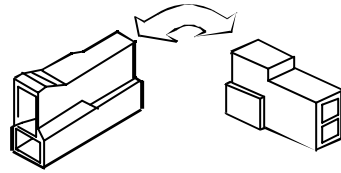


KEY SIDE CONNECTOR VIEW

101529

Pin	Function	Cable colour code
1	Power supply to heatable windshield	8020
2	Power supply to heatable windshield	8020

ST07D junction connector- rotating headlights

Figure 38

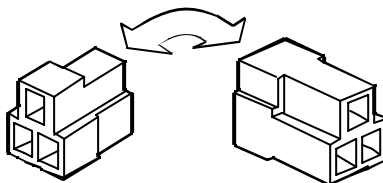

KEY SIDE CONNECTOR VIEW


105228

Pin	Function	Cable colour code
1	Positive for left hand side rotating headlight	1108
2	Ground for rotating headlight	0000
3	Positive for right hand side rotating headlight	1115

Aquila Trucks Centres

ST08A junction connector (blue) - DDM control unit

Figure 39

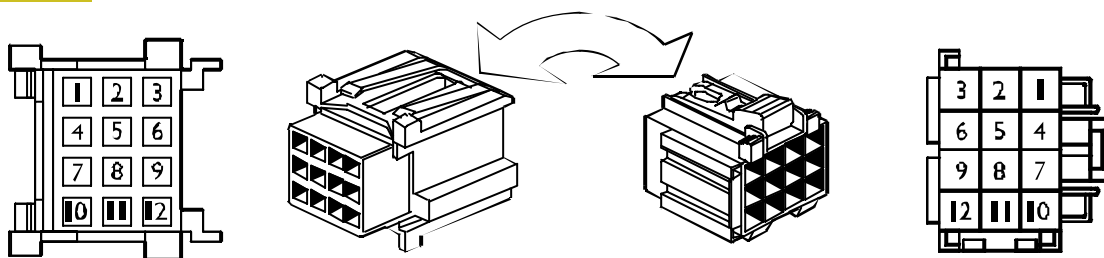


107538

KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	Positive (+30) for control unit power supply	7991
2	Ground	0000
3	Signal for loudspeaker (roof panel)	1188
4	Signal for loudspeaker (roof panel)	1186
5	K line for diagnosis	2991
6	CAN H line (BCB)	White
7	CAN L line (BCB)	Green
8	Centralised locking control signal - opening	0064
9	Centralised locking control signal - closing	0065
10	Signal (+) external temperature sensor	7573
11	Driver side electrical lock bolt	0003
12	External temperature sensor ground	0550

Jointing connector ST08B (blue) - driver side door

Figure 40

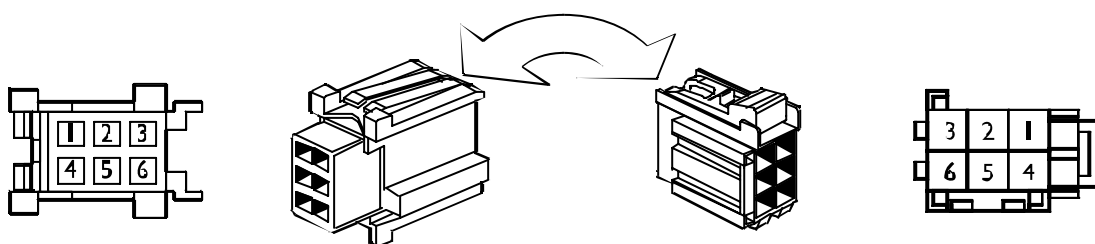

107188


KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	Connection 2 between side window regulator switches	8862
2	Connection 1 between side window regulator switches	8002
3	Mirror heating supply	8830
4	Positive +30 (presetting)	7990
5	-	-
6	-	-

Aquila Trucks Centres

ST09A junction connector (blue) - PDM control unit

Figure 41

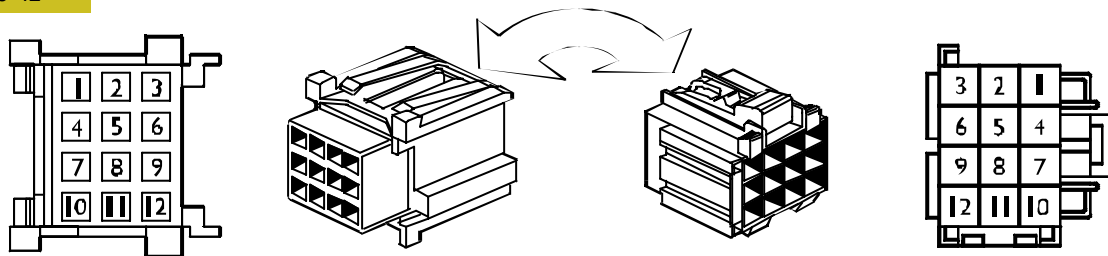


107538

KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	Positive (+30) control unit power supply	7990
2	Ground	0000
3	Positive right hand side loudspeaker	1184
4	Negative right hand side loudspeaker	1183
5	K line for diagnosis	2290
6	CAN H line (BCB)	White
7	CAN L line (BCB)	Green
8	Centralised locking control signal - opening	0064
9	Centralised locking control signal - closing	0065
10	-	-
11	Passenger side electrical lock bolt	0003
12	Free	-

Joining connector ST09B (white) - passenger side door

Figure 42

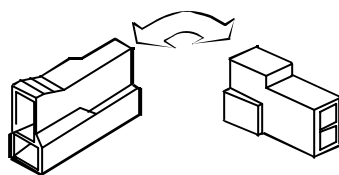

101529


KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	Connection 2 between side window regulator switches	8862
2	Connection 1 between side window regulator switches	8002

Aquila Trucks Centres

ST10 junction connector (green) - Instruments lighting


Figure 43

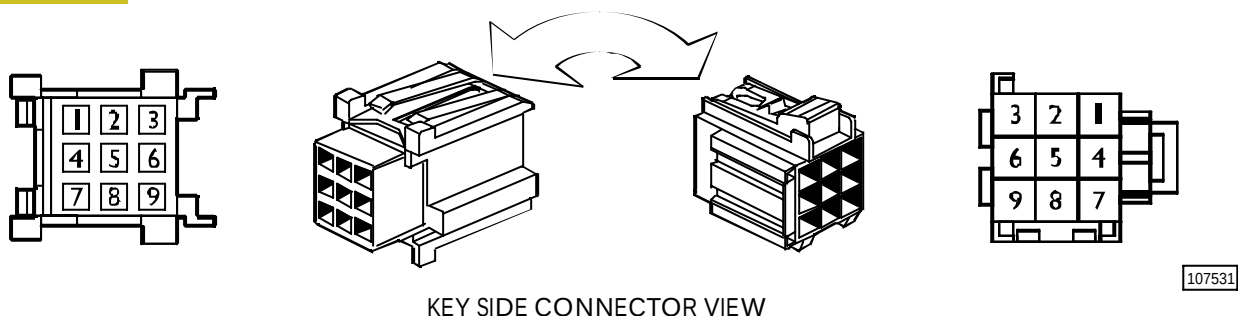

Pin	Function	Cable colour code
1	Positive for instruments lighting	4442
2	Positive for instruments lighting	4442
3	Positive for commutator for third axle lifting.	4442
4	Positive for switch with incorporated warning light for heatable windshield enabling	4442
5	Positive for switch with incorporated warning light for heated rear view mirrors	4442
6	Positive for switch with incorporated warning light for A.S.R. disabling	4442
7	Positive for instruments lighting	4442
8	Positive for instruments lighting	4442
9	Positive for instruments lighting	4442

Connector of junction ST11 - trailer retarder brake

Figure 44

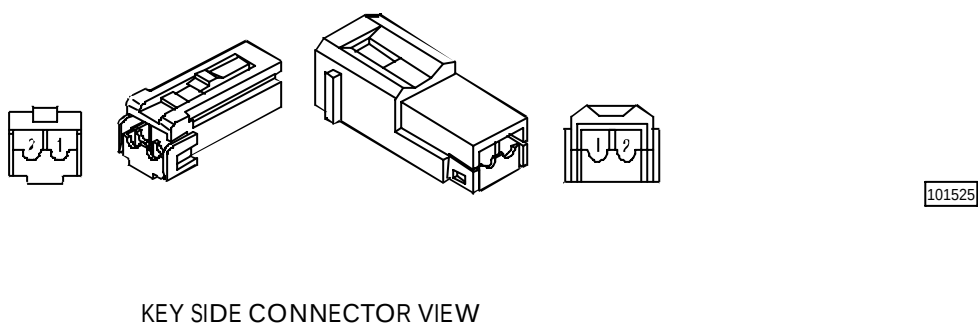


Pin	Function	Cable colour code
1	Ground from trailer brake hand wheel switch (brake light)	0927
2	Ground for trailer brake hand wheel switch (brake light)	0000

Aquila Trucks Centres

ST12 junction connector (green) - tractor and trailer ABS/EBS

Figure 45

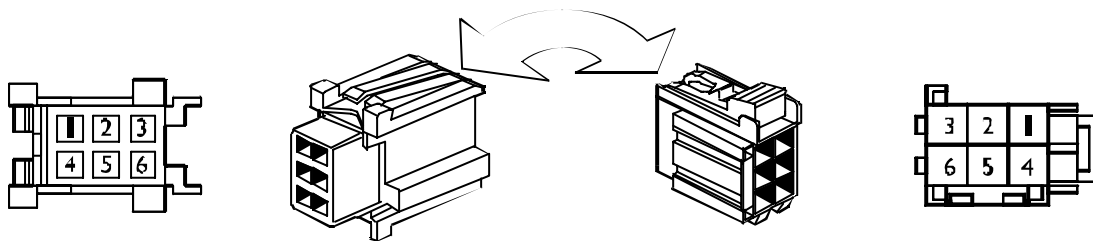


KEY SIDE CONNECTOR VIEW

107188

Pin	Function	Cable colour code
1	-	-
2	-	-
3	-	-
4	-	-
5	Positive pressed pedal signal (ABS)	8153
6	Positive for stop lights (ABS)	8158

ST13 junction connector (black) - auxilliary air heater

Figure 46

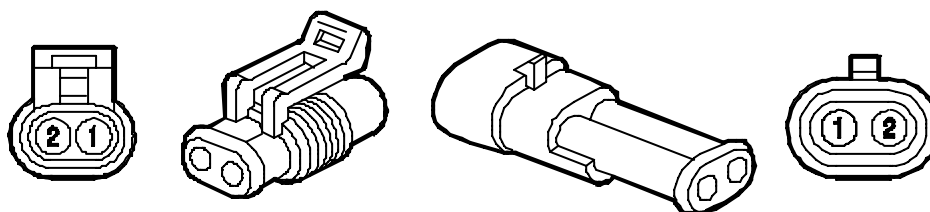

KEY SIDE CONNECTOR VIEW


101531

Pin	Function	Cable colour code
1	CAN BCB Line (L)	Green
2	CAN BCB Line (H)	White

Aquila Trucks Centres

ST14 junction connector - ECAS bodybuilders (cab)

Figure 47

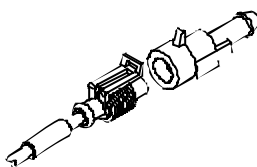


101523

KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	Power supply to liftable axle lowering or lifting switch	8445

ST14A junction connector (blue) - for bodybuilders (cab)

Figure 48

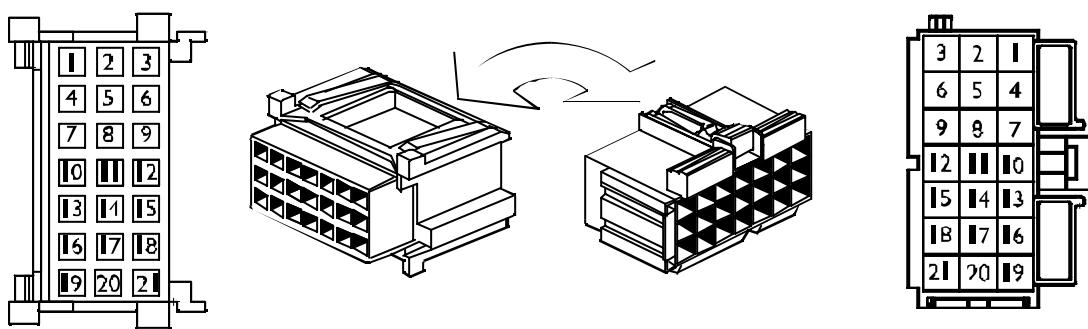

107554


KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	Engine start-up signal input	8892
2	Engine turning off signal input	0151
3	Stop lights signal for bodybuilders	1165
4	Vehicle not in operation signal output	5515
5	Parking brake engaged signal output	6656
6	-	-
7	Speed signal from tachograph	5155
8	Engine condition (output signal) 0 V engine not in operation / 24 V engine in operation	7778
9	Gearbox in neutral position signal	8050
10	Reverse gear signal	2268
11	Positive +15	8871
12	Provision for Cruise Control SET +	8156
13	Provision for Cruise Control SET -	8157
14	Provision for Cruise Control OFF	8154
15	Provision for Cruise Control RESUME	8155
16	Provision Cruise Control (internal /external choice)	0158
17	Ground	0000
18	Provision for P.T.O. 1 control signal	0131
19	Provision for P.T.O. 2 control signal	0132
20	Provision for P.T.O. 3 control signal	0123
21	Positive +30	7772

Aquila Trucks Centres

ST14B junction connector (blue) - for bodybuilders (cab)


Figure 49

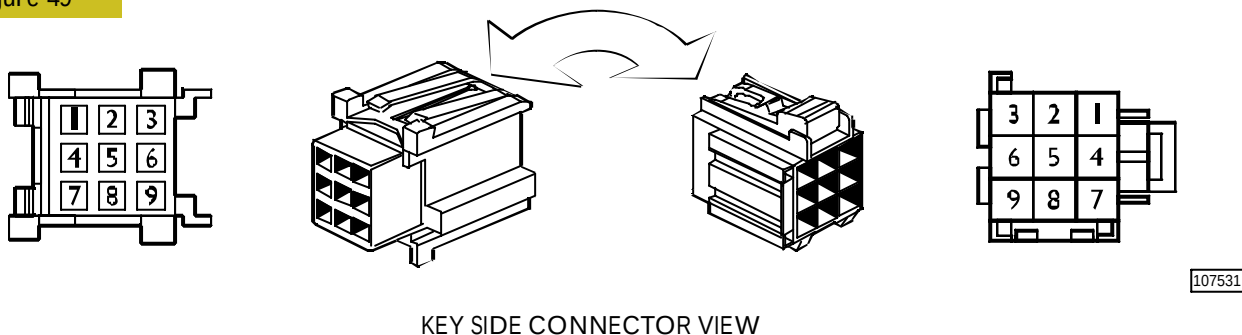

Pin	Function	Cable colour code
1	Signal for the second speed limiter	0172
2	-	-
3	Clutch status signal	9963
4	Programmable speed threshold indicator signal (PTS)	5542
5	Hazard light signal	1113
6	-	-
7	-	-
8	Engine rpm signal	5584
9	External light signal	3333

ST14C junction connector (grey) - for set up devices (Allison)

Figure 50

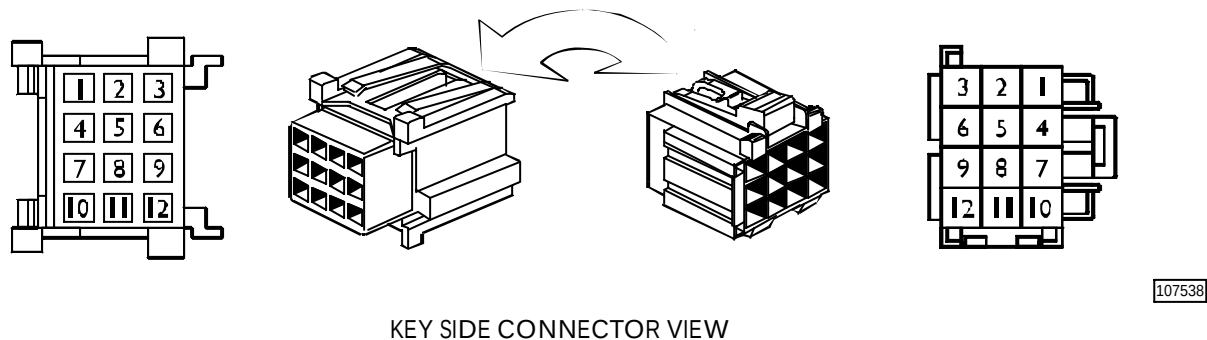


Pin	Function	Cable colour code
1	Neutral signal for PTO	145
2	Stepping switch signal	123
3	-	-
4	PTO signal active	143
5	PTO signal active	130
6	-	-
7	-	-
8	Automatic neutral signal	117
9	Automatic neutral signal	101
10	Digital earth	103
11	Zone indicator signal	113
12	-	-

Aquila Trucks Centres

ST15 - ST19 junction connector

Figure 51

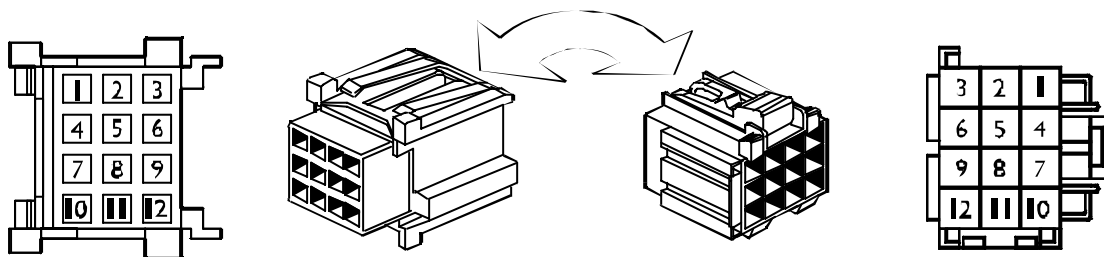

107538

KEY SIDE CONNECTOR VIEW

ST15 (yellow) - Connection for couplings in the high roof

Pin	Function	Cable colour code
1	Ground	0000
2	Positive for sliding roof closing	7011
3	Positive for sliding roof opening	7010
4	Positive for reading light	4412
5	Positive for overhead lights (white light)	4423
6	Positive for overhead lights (red lights)	4422
7	-	-
8	Left hand side loudspeaker	1186
9	Left hand side loudspeaker	1188
10	Right hand side loudspeaker	1183
11	Right hand side loudspeaker	1184
12	-	-


ST19 (green) - connection for heating

Pin	Function	Cable colour code
1	K line	2295
2	Positive symbols lighting	4442
3	with ST 20 - 3	0506
4	with ST 20 - 4	8087
5	Positive for 1st speed auxiliary heating enabling (remote control switch)	8884
6	Positive for heater motor water recirculation enabling (remote control switch)	7778
7	Locked positive	8871
8	-	-
9	Ground	0000
10	Negative for auxiliary heater enabling	0501
11	Positive with starter up engine	7786
12	-	-

Aquila Trucks Centres

ST20 junction connector (green) - air conditioning system

Figure 52

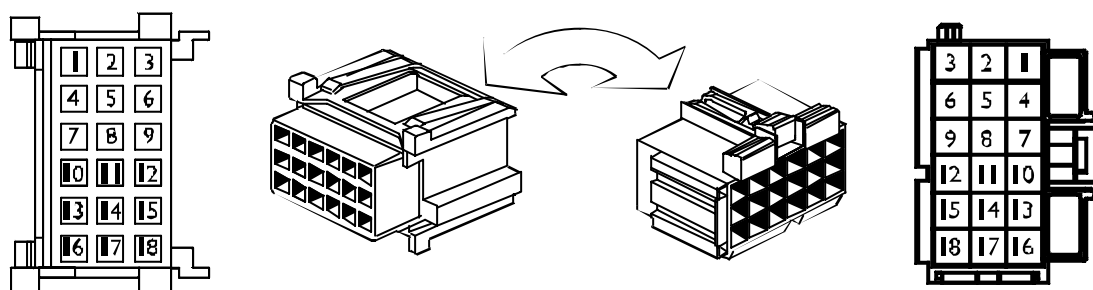

107552


KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	K line	2296/2295
2	Positive instruments lighting	4442
3	with ST 19 - 3	0506
4	with ST 19 - 4	8087
5	Positive for 1st speed heater enabling (remote control switch)	8884
6	Remote control switch signal for compressor enabling (from pressure switches)	9933
7	Remote control switch signal for compressor enabling (from control unit)	9933
8	Positive with starter up engine	7778
9	Ground	0000
10	Positive compressor control	9993
11	Positive +15	8871
12	Positive after TGC	7551
13	Positive after TGC	7551
14	-	-
15	Negative (from control unit) for solenoid valve radiator water recirculation	9552
16	Positive for solenoid valve radiator water recirculation	7550
17	-	-
18	-	-

Aquila Trucks Centres

ST21 junction connector (black) - solenoid valve for radiator water recirculation

Figure 53

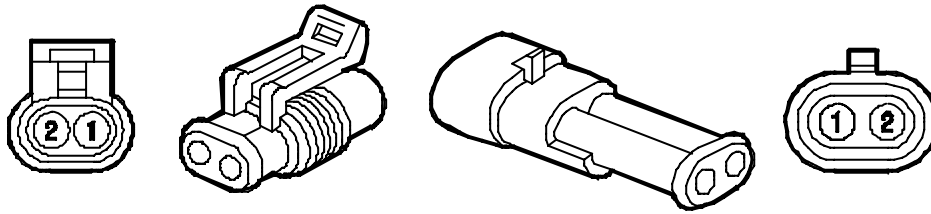


101531

KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	Positive for solenoid valve radiator water recirculation	7550
2	Negative for solenoid valve for radiator water recirculation	9552

ST23 junction connector - immobilizer antenna

Figure 54

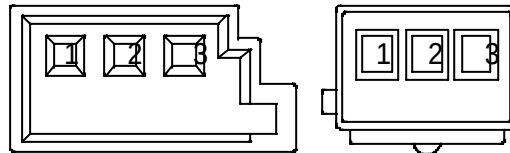

107169


KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	Immobilizer antenna signal (VCM pin - X1/1)	-
2	Immobilizer antenna signal (VCM pin - X1/3)	-
3	-	-

Aquila Trucks Centres

ST24 junction connector (black) - CAN line for air conditioning system

Figure 55

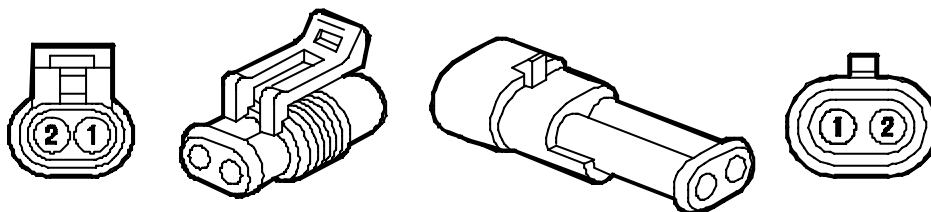


101531

KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	CAN L line (BCB)	Green
2	CAN H line (BCB)	White

ST25 junction connector (black) - Intarder

Figure 56

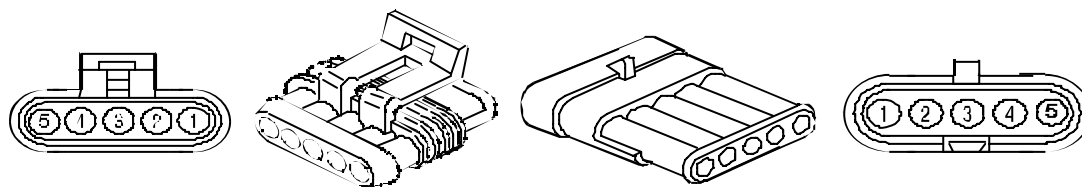

101542


KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	CAN VDB Line (L)	Green
2	CAN VDB Line (H)	White
3	Speed signal for Intarder	5541
4	EOL data entry line for Intarder control unit	3393
5	K line	2293

Aquila Trucks Centres

ST26A - ST26B junction connector

Figure 57

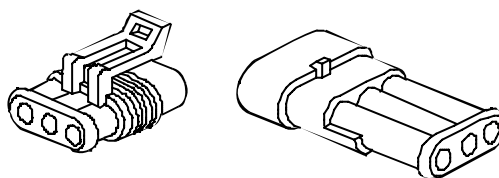

KEY SIDE CONNECTOR VIEW

101536

ST26A (black) - Ecas (CAN)


Pin	Function	Cable colour code
1	CAN VDB Line (L)	Green
2	CAN VDB Line (H)	White
3	K line	2294

ST26B (black) - ABS/EBS (CAN)

Pin	Function	Cable colour code
1	CAN VDB Line (L)	Green
2	CAN VDB Line (H)	White
3	K line	2299

ST28 junction connector- rotating headlights

Figure 58

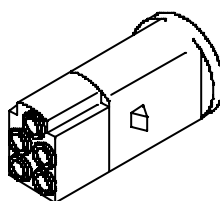

KEY SIDE CONNECTOR VIEW


107183

Pin	Function	Cable colour code
1	Ground for left hand side rotating headlight	0000
2	Positive for left hand side rotating headlight	1108
3	Free	-
4	Positive for right hand side rotating headlight	1115
5	Ground for right hand side rotating headlight	0000

Aquila Trucks Centres

ST30 - ST31 junction connector

Figure 59

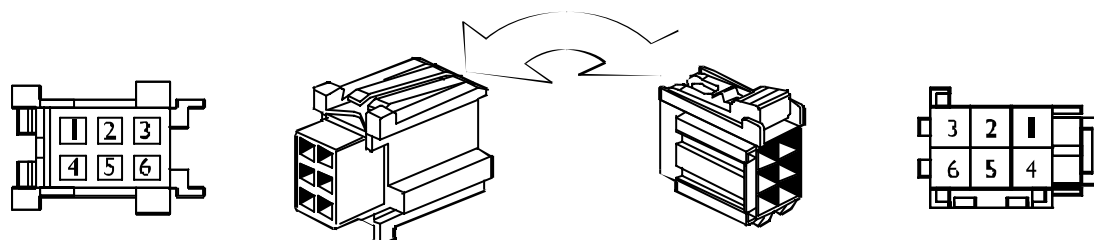

107188

KEY SIDE CONNECTOR VIEW

ST30 (blue) - provision for ADR (tachograph)

Pin	Function	Cable colour code
1	Positive (+Batt) tachograph	7768
2	-	-
3	Positive (+Batt) from IBC3	7768
4	Positive (+Batt) Cluster / Central locking	7768
5	Battery direct positive (+Batt) after fuse 70058 (20A)	7972
6	Positive (+Batt)	7972


ST31 (green) - connection for ECAS (remote control)

Pin	Function	Cable colour code
1	Power supply to equalization adjustment system (+15)	8810
2	Ground	0000
3	Clock line on ECAS suspensions control keyboard	6402
4	Clock line on ECAS suspensions control keyboard	6403
5	-	-
6	-	-

Aquila Trucks Centres

ST31A junction connector (green) - Cab rear

Figure 60

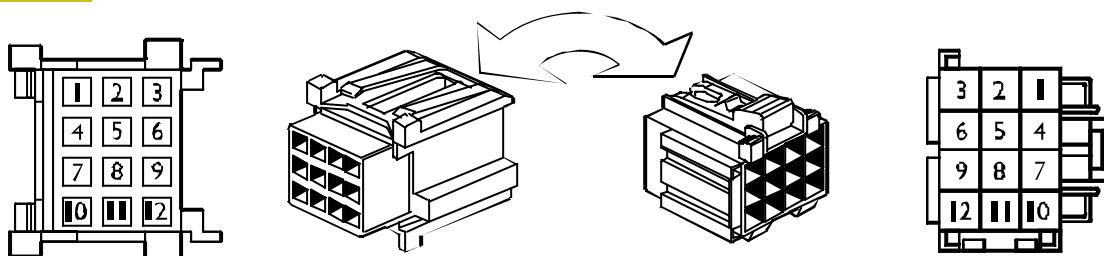


107538

KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	Positive for tool compartment lighting switch	4448
2	Positive for reading over head light	4412
3	Ground	0000
4	Ground for refrigerator	0000
5	Positive for refrigerator (24 V)	7735
6	Positive power supply for Bed Module	7906
7	Ground	0000
8	CAN (H) Line BCB	White
9	CAN Line (L) BCB	Green
10	Positive for telephone plug (12 V)	7712
11	Telephone plug ground	0000
12	Positive for lamp	7772

ST31B junction connector (blue) - auxiliary air heating

Figure 61

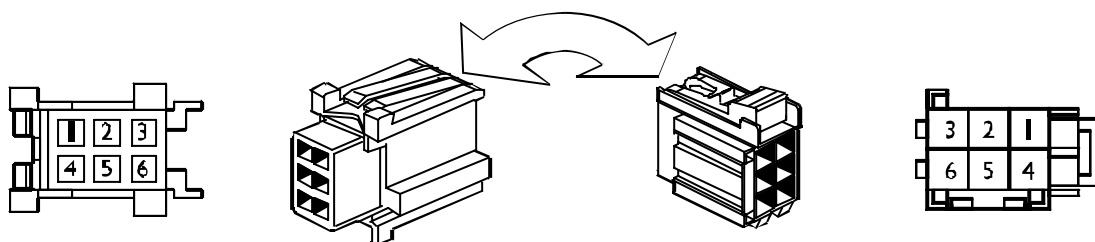

107188


KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	Auxiliary air heater warning light	6655
2	Positive +30	7708
3	Ground	0000
4	Power supply to auxiliary fuel pump for air heater	7783
5	Auxiliary heater K line	2295
6	Power supply to ambient temperature sensor for auxiliary sensor	7512

Aquila Trucks Centres

ST31C junction connector (white) - water heating temperature sensor

Figure 62

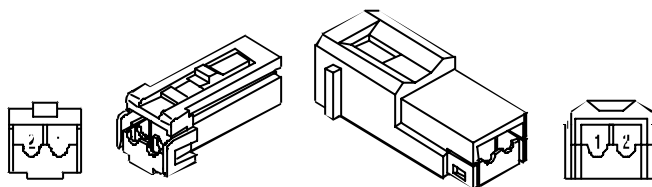


101525

KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	Positive for internal temperature detection probe	7520
2	Negative for internal temperature detection probe	0000

ST31L - ST31R junction connector

Figure 63

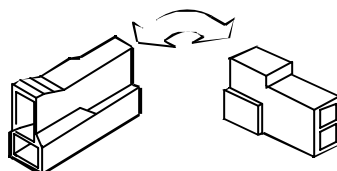

101529

KEY SIDE CONNECTOR VIEW

ST31L - connection for pneumatic heated seat

Pin	Function	Cable colour code
1	Ground	0000
2	Positive for driver side heated pneumatic seat	8031


ST31R - connection for pneumatic heated seat

Pin	Function	Cable colour code
1	Ground	0000
2	Positive for passenger side heated pneumatic seat	8031

Aquila Trucks Centres

ST34 (blue) junction connector- provision for ACC / simple gearbox control ‘H’

Figure 64

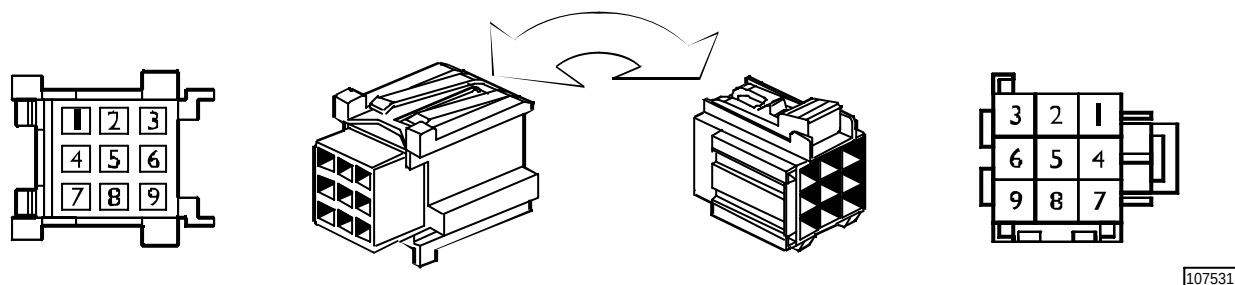


KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	VCM control unit pin X3/7	0179
2	Power supply to warning light for ACC (Adaptive Cruise Control) distance rule signalling / Power supply to splitter control solenoid valve (gear reducer) mechanical gearbox	6179/9973
3	Positive 5 V for distance control with ACC (Adaptive Cruise Control) great distance	8179
4	VCM control unit pin X2/9	0139
5	Return from distance selector with ACC (Adaptive Cruise Control)	6178
6	Power supply to distance alarm buzzer with ACC (Adaptive Cruise Control) / Power supply to splitter control solenoid valve (mechanical gearbox)	1166/9974
7	Positive +15	8871
8	Positive for instruments lighting	4442
9	-	-

Aquila Trucks Centres

ST35/1 junction connector (yellow) - manual control air conditioning system


Figure 65

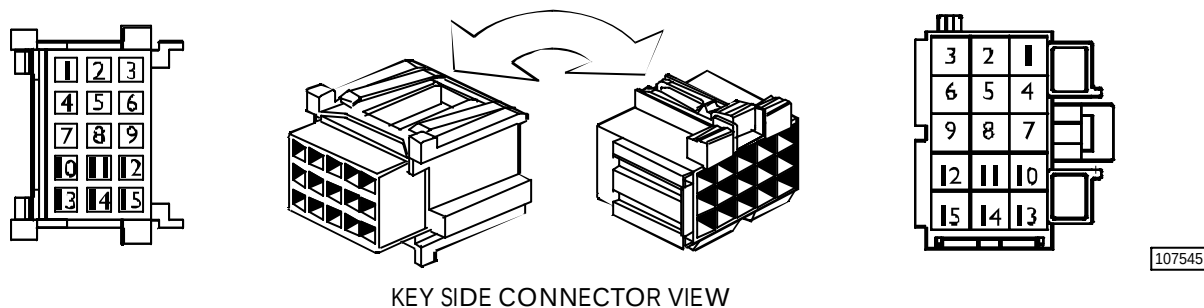

Pin	Function	Cable colour code
1	-	-
2	-	-
3	-	-
4	Positive +30	7550
5	-	-
6	-	-
7	-	-
8	Ambient thermostat signal	9993
9	Negative remote control switches air conditioning enabling command	0555
10	Positive symbols lighting	4442
11	Positive from remote control switch internal heating enabling consent	8004
12	Positive remote control switch air conditioner enabling command	8097
13	Contact of the remote control switch (87) for auxiliary heater 1st speed enabling	8884
14	Positive for Topflap commanding remote switch control	8801
15	-	-

ST35/2 junction connector (yellow) - manual control air conditioning system

Figure 66

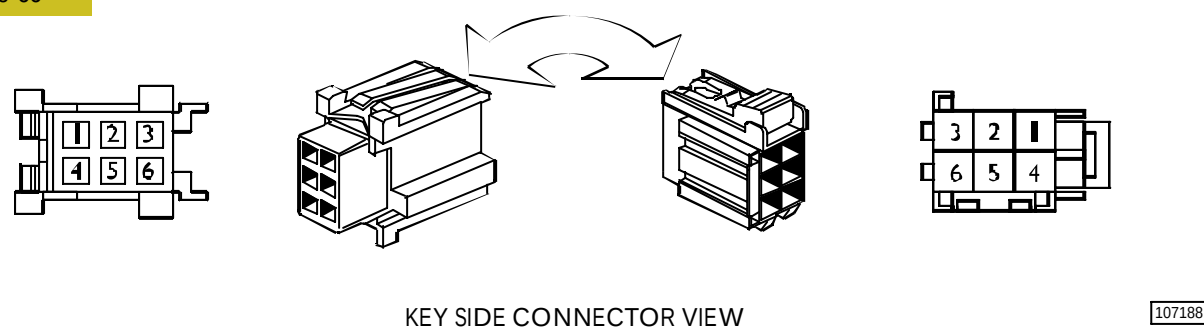


Pin	Function	Cable colour code
1	Positive for windshield electric defroster command unit	8884
2	-	-
3	K line	2296
4	Positive +30 from Body Computer	7786
5	-	-
6	-	-

Aquila Trucks Centres

ST36 junction connector (grey) - T.G.C. / I.G.C.

Figure 67

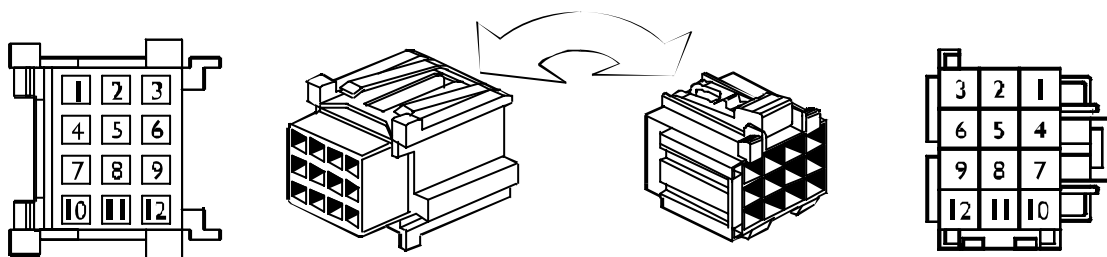


107538

KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	Alternator power supply terminal 15	8876
2	Alternator power supply terminal 15	8876
3	Signal for TGC closing	8035
4	Signal for TGC closing	8035
5	Battery positive (+Batt)	7972
6	Battery positive (+Batt) for tachograph and IC	7768
7	Battery positive (+Batt) for B.C. / B.M. / diagnosis /refrigerator connector	7972
8	CAN (H) line (BCB)	
9	CAN (L) line (BCB)	
10	Telephone socket positive (12 V)	7712
11	Ground for telephone	0000
12	Positive for bulb	7772

SST37C junction connector (yellow) - Toll Collect

Figure 68

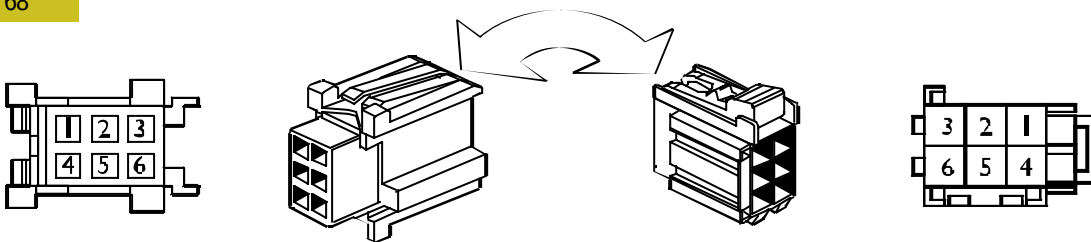

107188


KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	Positive +30 after TGC	7772
2	Positive symbols lighting	4442
3	Positive +15	8871
4	Speed signal (tachograph)	5541
5	Ground	0000
6	-	-

Aquila Trucks Centres

ST39 junction connector (yellow) - differential lock

Figure 69

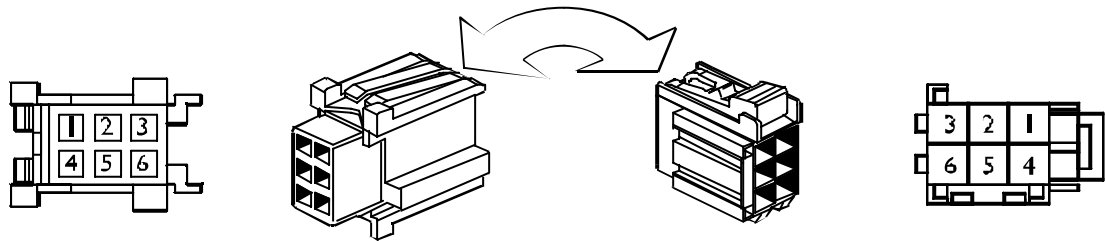

107188


KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	Positive symbols lighting	4442
2	Signal from front transverse differential lock control switch	0902
3	Signal from longitudinal differential lock control switch	0903
4	Signal from rear transverse differential lock control switch	0904
5	Ground	0000
6	-	-

Aquila Trucks Centres

ST40 junction connector - navigation and it tools

Figure 70

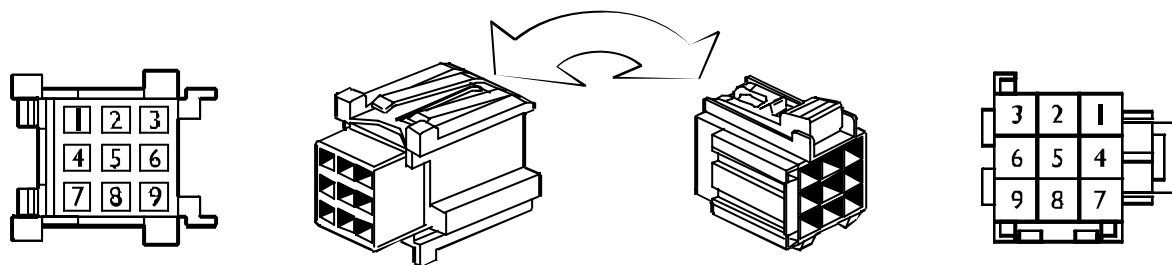


107531

KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	Positive +30 after TGC	7772
2	Positive +15	8871
3	Speed signal for navigator	5541
4	Positive 12V	7712
5	CAN L line (ICB)	Green
6	CAN H line (ICB)	Bianco
7	Positive for instruments lighting	4442
8	Reverse gear signal	2268
9	Ground	0000

Jointing connector ST42 - DDM/PDM supplies

Figure 71

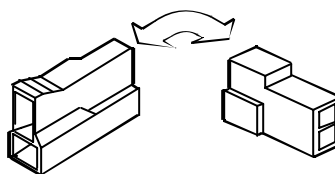

101529


KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	Positive +30	7777
2	Positive +15	8887

Aquila Trucks Centres

ST44 junction connector - centralized locking with remote control

Figure 72

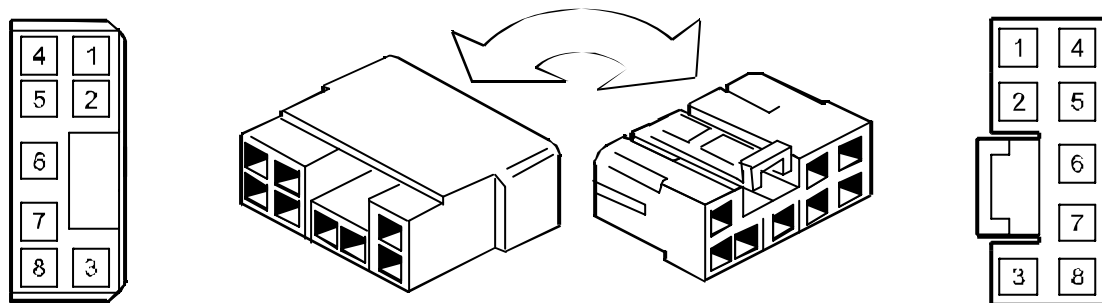


KEY SIDE CONNECTOR VIEW

113250

Pin	Function	Cable colour code
1	Clinker control	1113
2	-	-
3	Battery positive (+Batt)	7772
4	Ground	0000
5	Control for centralized locking to Body Computer (door opening)	0064
6	Control for centralized locking to Body Computer (door closing)	0065
7	Power supply +15	8871
8	-	-

ST45 junction connector- 24V connection for radio

Figure 73

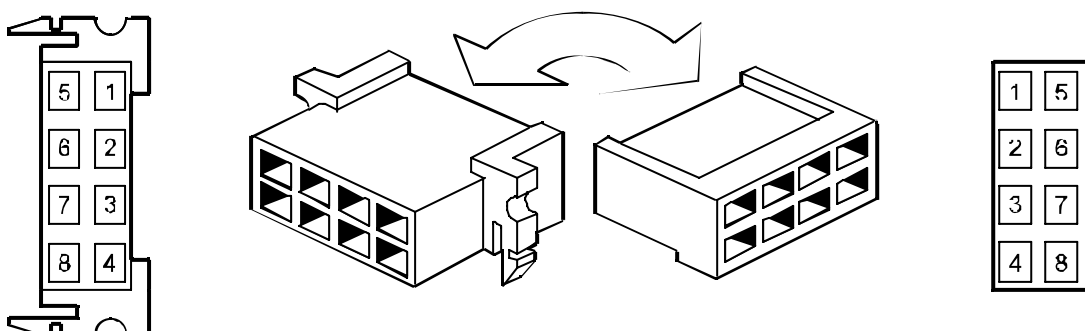

KEY SIDE CONNECTOR VIEW


105243

Pin	Function	Cable colour code
1	Positive +30 for preamplifier	7772
2	Positive +15 for radio receiver	8871
3	Ground	0000
4	Positive symbols lighting	4442
5	CAN line L (IDB)	Green
6	CAN line H (IDB)	White
7	Positive +30 for radio receiver	7770
8	-	-

Aquila Trucks Centres

ST48 junction connector (yellow) - EM control unit (PTO)


Figure 74

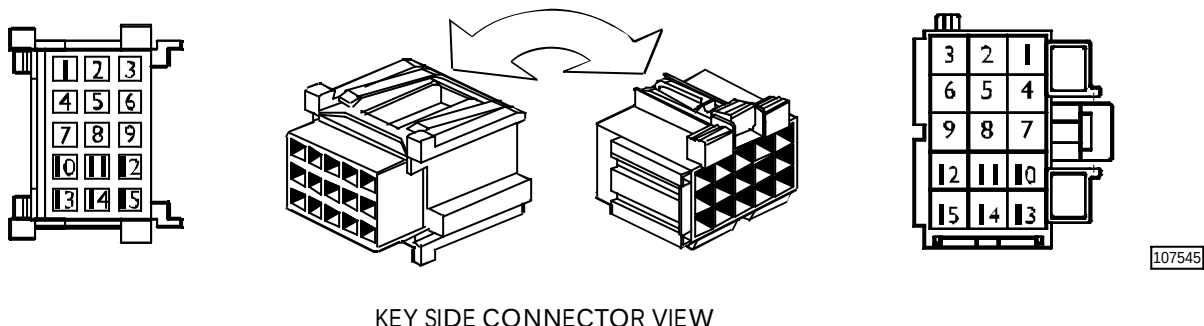

Pin	Function	Cable colour code
1	CAN L line (ICB)	Green
2	CAN H line (ICB)	White
3	K line	Green
4	Positive +30 after TGC	7772
5	Positive +30	7166
6	Positive +15	8166
7	Ground	0000
8	Wiring for CAN L line (SB)	Green
9	Wiring for CAN H line (SB)	White
10	P.T.O. control signal 1	0131
11	P.T.O. control signal 1	0132
12	P.T.O. control signal 1	0123
13	Positive +30 for body builders connector (72072C)	7795
14	Positive +30 for body builders connector (72072D)	7796
15	-	-

Jointing connector ST 49 - Allison transmission setup

Figure 75

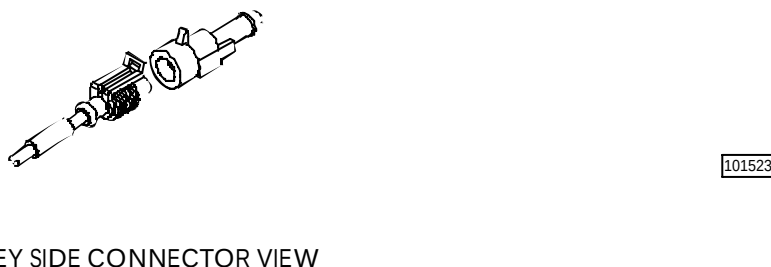


Pin	Function	Cable colour code
1	Starter motor remote control switch ground	0008

Aquila Trucks Centres

ST54 junction connector- provision for ACC

Figure 76

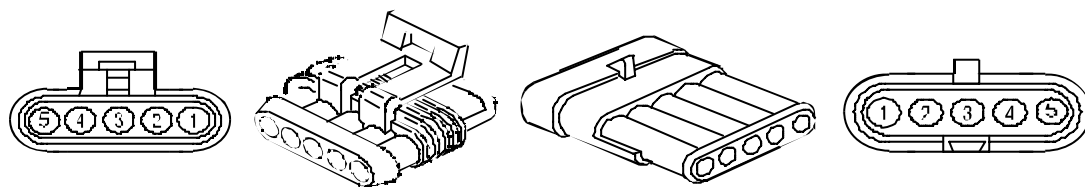


KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	CAN line L (VDB)	Green
2	CAN line H (VDB)	White
3	CAN line L (VDB)	Green
4	CAN line H (VDB)	White
5	Positive +15	8176

ST55A junction connector- SCR system (urea)

Figure 77

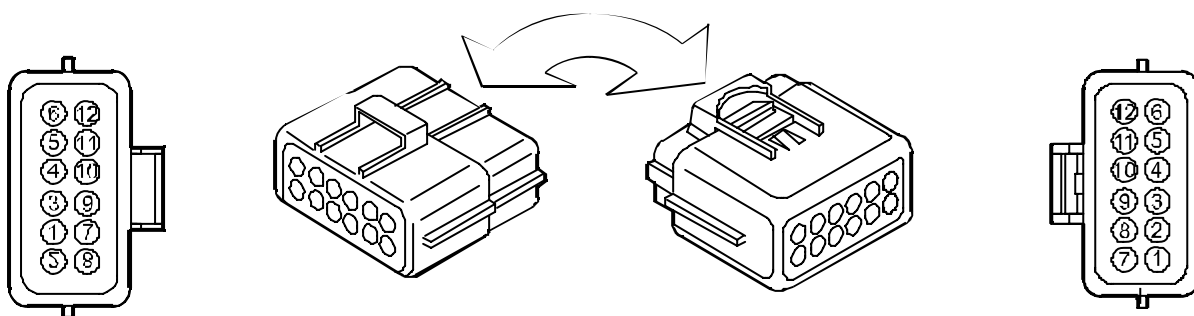


KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	CAN line L (ECB)	Green
2	CAN line H (ECB)	White
3	CAN line L (ECB)	Green
4	CAN line H (ECB)	White
5	K line	2257
6	Positive +15	8540
7	Power supply to combustion air relative humidity and temperature sensor	8173
8	Signal for combustion air relative humidity sensor	5173
9	Combustion air relative humidity and temperature sensor ground	0173
10	Combustion air temperature sensor signal	5174
11	Power supply to engine brake solenoid valve	9966
12	Engine brake solenoid valve ground	0043

Aquila Trucks Centres

ST55B - ST56 junction connector

Figure 78

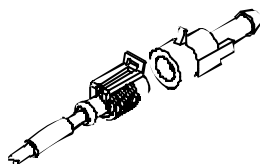

101523

KEY SIDE CONNECTOR VIEW

ST55B - SCR system power supply (urea)


Pin	Function	Cable colour code
1	Battery positive (+Batt) SCR System	7540

ST56 (black) - Connection for ADR cut generator

Pin	Function	Cable colour code
1	Alternator power supply terminal 15	8876

ST59 junction connector - 2nd front axle ECAS fault / longitudinal lock (8x8)

Figure 79

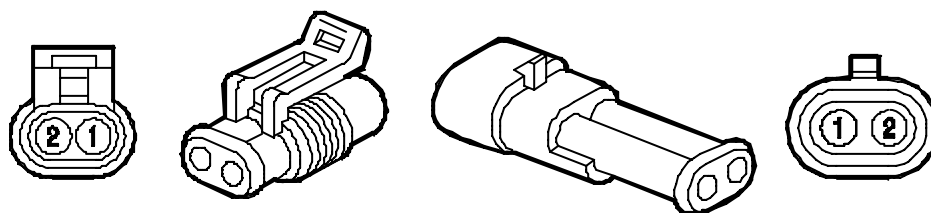

101531


KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	ECAS fault signal / front longitudinal differential locks engaged signal (8x8)	6401 / 6643
2	ECAS fault signal switch earth	0000

Aquila Trucks Centres

ST63 junction connector- auxiliary water heater CAN

Figure 80

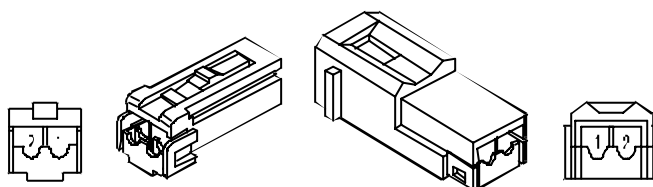


101525

KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	CAN Line (L) BCB	Green
2	CAN (H) Line BCB	White

ST64 junction connector (black) - 15-poles current outlet free pins

Figure 81

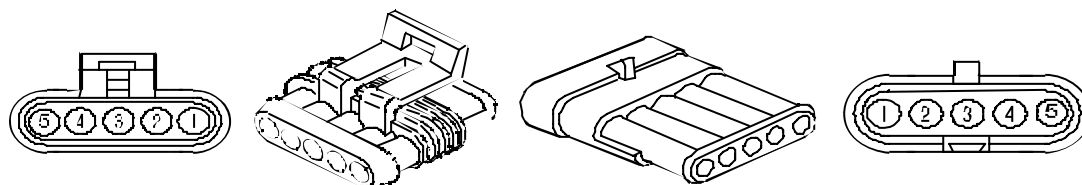

101542


KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	Power supply to current outlet	8021
2	Power supply to current outlet	7021
3	Transverse differential blocking signal	6621
4	Power supply to positive trailer interlocking +15	8075
5	Power supply to positive trailer interlocking +15	8075

Aquila Trucks Centres

ST65 - ST67 junction connector

Figure 82

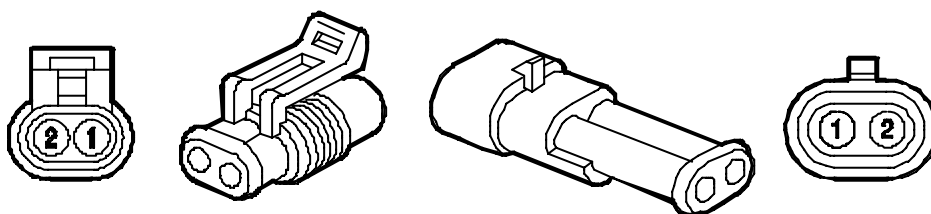

101531

KEY SIDE CONNECTOR VIEW

ST65 - CAN for trailer (PTO with EM)


Pin	Function	Cable colour code
1	CAN SB line (L) (connection for trailer - PTO with EM)	
2	CAN SB line (H) (connection for trailer - PTO with EM)	

ST67 - UREA dosing module solenoid

Pin	Function	Cable colour code
1	Power supply to dosing module solenoid valve with SCR	7541
2	Urea electric dosing unit (-) control	9541

ST68 junction connector- UREA temperature sensor

Figure 83

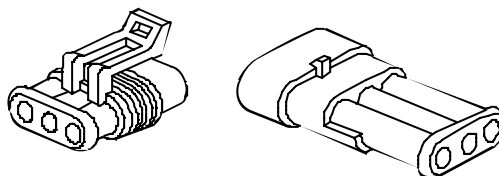

101536


KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	Signal cable to urea tank level sensor with SCR	6543
2	Urea tank with CSR level and temperature sensor ground	0543
3	Signal cable to urea tank temperature sensor with SCR	6542

Aquila Trucks Centres

ST69 junction connector- Intarder

Figure 84

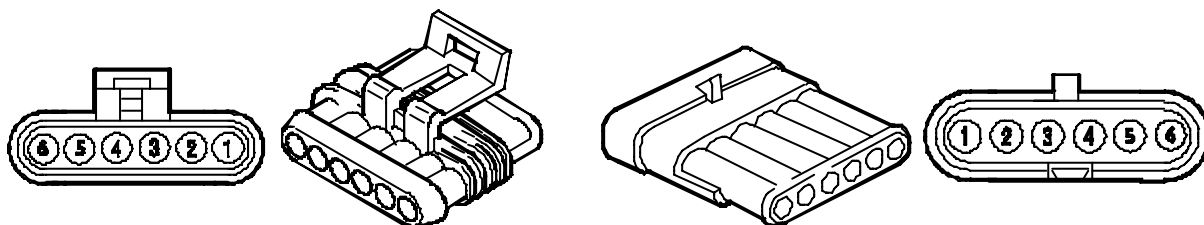


105334

KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	Solenoid valve for retarder oil accumulator	0311
2	Solenoid valve for retarder oil accumulator	9311
3	Water temperature transmitter for retarder	5309
4	Water temperature transmitter for retarder	0309
5	Solenoid valve for retarder enabling	0310
6	Solenoid valve for retarder enabling	9310

ST70 junction connector (black) - ASR solenoid valve

Figure 85

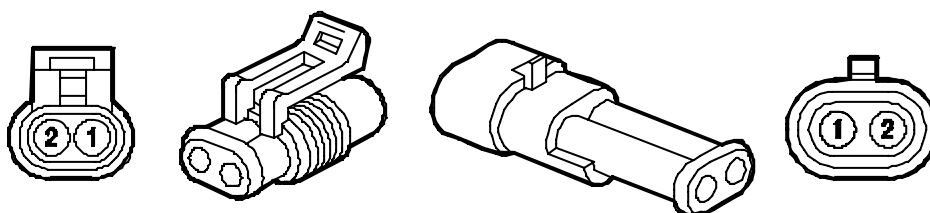

101531


KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	ASR solenoid valve (-) control	0260
2	ASR solenoid valve power supply	9260

Aquila Trucks Centres

ST72 junction connector (black) - rear block wear / transverse differential lock

Figure 86

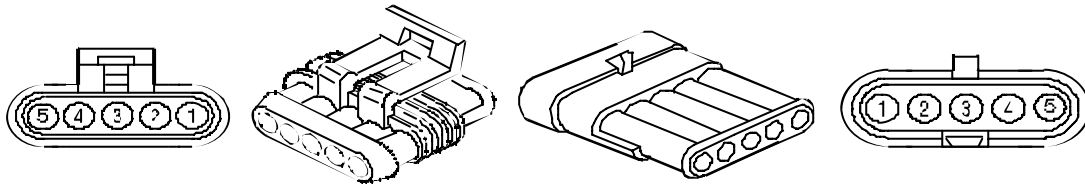


KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	To the deviator for signalling of transverse differential lock of Rockwell rear axles for the third axle	0041
2	To the deviator for signalling of transverse differential lock of Rockwell rear axles for the third axle	0000
3	To the deviator for signalling of transverse differential lock of Rockwell rear axles for the third axle	0040
4	To the sensor for circuit signalling of rear wheel shoes wear	6667
5	To the sensor for circuit signalling of rear wheel shoes wear	6664

Aquila Trucks Centres

Junction connector ST73/1 - ST73/2 - ST73/3 - ST73/4

Figure 87

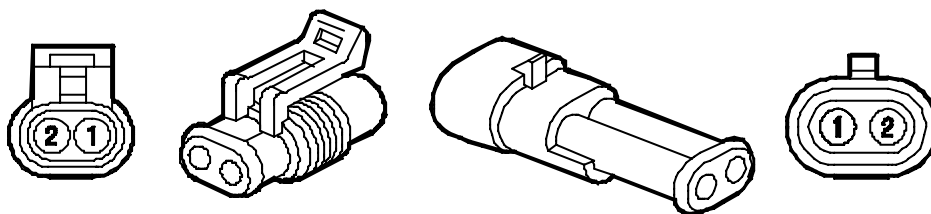

101531

KEY SIDE CONNECTOR VIEW

ST73/1 (black) - 1st front axle block wear (right)

Pin	Function	Cable colour code
1	To the sensor for circuit signalling of front wheel shoes wear	6664
2	To the sensor for circuit signalling of front wheel shoes wear	6664

ST73/2 (black) - 1st front axle block wear (left)

Pin	Function	Cable colour code
1	To the sensor for circuit signalling of front wheel shoes wear	6664
2	To the sensor for circuit signalling of front wheel shoes wear	0000

ST73/3 (black) - 2nd front axle block wear (right)

Pin	Function	Cable colour code
1	To the sensor for circuit signalling of front wheel shoes wear	6664
2	To the sensor for circuit signalling of front wheel shoes wear	6664


ST73/4 (black) - 2nd front axle block wear (left)

Pin	Function	Cable colour code
1	To the sensor for circuit signalling of front wheel shoes wear	6664
2	To the sensor for circuit signalling of front wheel shoes wear	0000

Aquila Trucks Centres

ST75A junction connector - 1st front axle differential lock

Figure 88

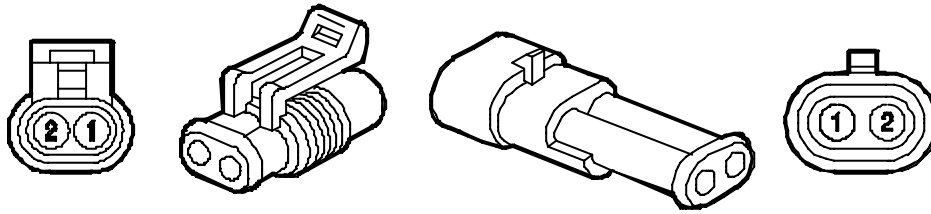


101531

KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	1 st front axle differential lock signal	6659
2	Ground	0000

ST75B junction connector - 2nd front axle differential lock

Figure 89

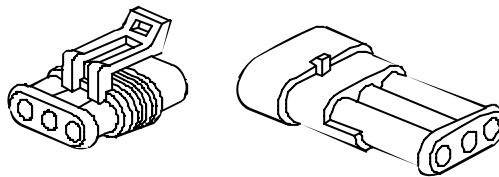

101536


KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	2 nd front axle differential lock signal	6659
2	Ground	0000
3	Front longitudinal differential lock engaged signal (8x8)	6643

Aquila Trucks Centres

ST77 - ST78 JUNCTION CONNECTOR BODYBUILDERS (CHASSIS - TRUCK)

Figure 90

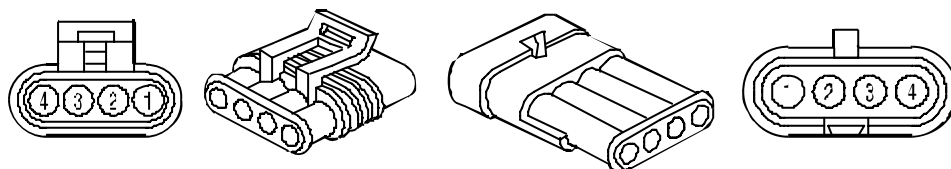

101538

KEY SIDE CONNECTOR VIEW

ST77 (black) - Right hand side SML indicator light (Side Marker Lamp)

Pin	Function	Cable colour code
1	Signal for side lamps	3330
2	Ground for side lamps	0000
3	Signal for side lamps	3330
4	Ground for side lamps	0000


ST78 (black) - Left hand side SML indicator lamp (Side Marker Lamp)

Pin	Function	Cable colour code
1	Signal for side lamps	3339
2	Ground for side lamps	0000
3	Signal for side lamps	3339
4	Ground for side lamps	0000

Aquila Trucks Centres

ST79A junction connector (yellow) - external cab front


Figure 91

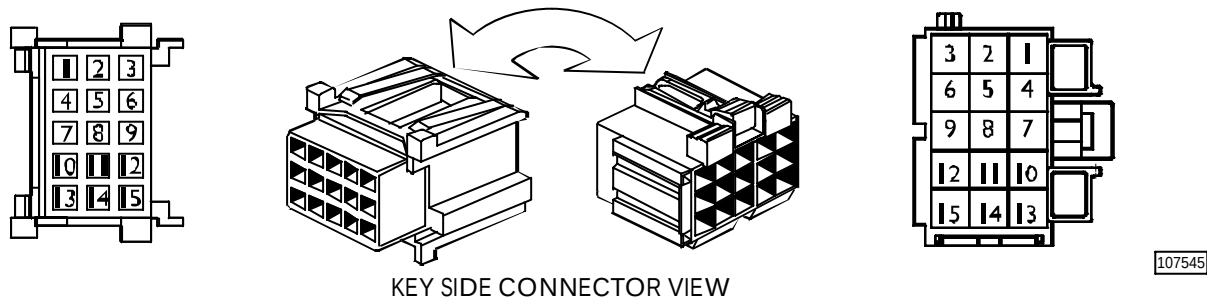

Pin	Function	Cable colour code
1	Ground	0000
2	Positive to refrigerating fluid pressure signalling switch (air conditioner)	9993
3	Positive from refrigerating fluid pressure signalling switch (air conditioner)	9993
4	Positive for solenoid valve radiator water recirculation	7550
5	Signal from switch on clutch for VCM (clutch cylinder 20% compressed)	0160
6	Gearbox synchronous protection solenoid control earth (clutch cylinder 70% compressed)	9975
7	Positive for windscreen unit (high speed)	8881
8	Positive for windscreen unit (low speed)	8882
9	Positive for windscreen unit	8880
10	Positive for windscreen unit	8873
11	Radiator water recirculation solenoid valve command	9552
12	Negative from refrigerating fluid pressure signalling switch (engine cooling)	0583
13	Negative from refrigerating fluid pressure signalling switch (engine cooling)	0582
14	-	-
15	-	-

Jointing connector ST79B (yellow) - windshield washer and warning horn unit

Figure 92

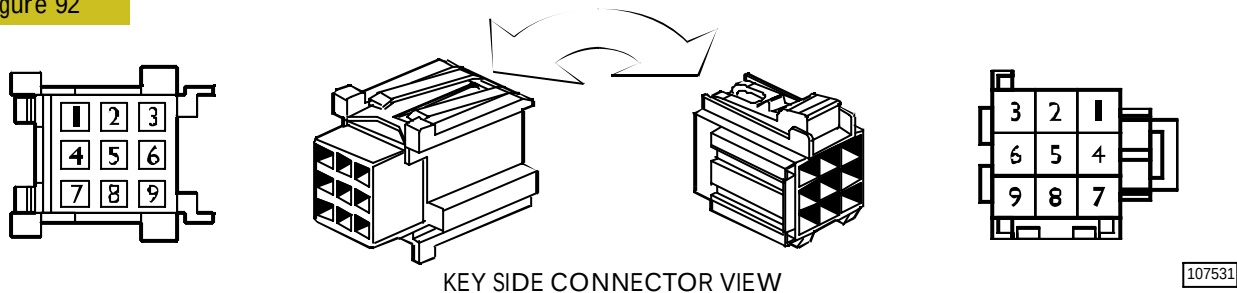


Pin	Function	Cable colour code
1	Signal for warning horn	1116
2	Electrical pump power headlight wipers	8821
3	Signal from the Body Computer for windshield washer liquid low level indicator control	5521
4	Windshield washer control signal	8886
5	-	-
6	-	-
7	-	-
8	-	-
9	-	-

Aquila Trucks Centres

ST79D junction connector (green) - brake pedal switch (ABS)

Figure 93

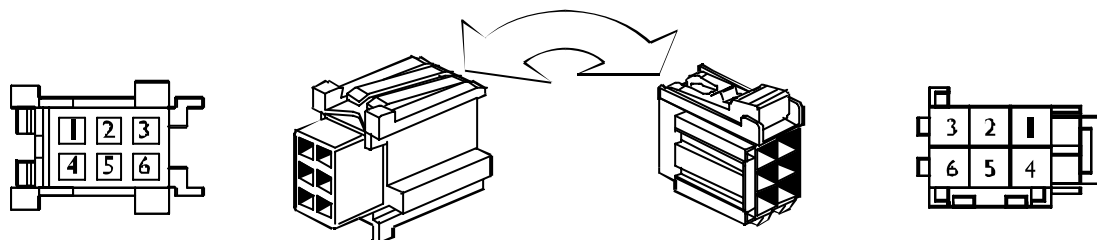

101545


KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	Positive +30	7150
2	Positive for stop lights	8158
3	Positive pressed pedal signal	8153
4	Positive +30	7150
5	-	-
6	-	-

Aquila Trucks Centres

ST80 junction connector (black) - mechanical gearbox

Figure 94

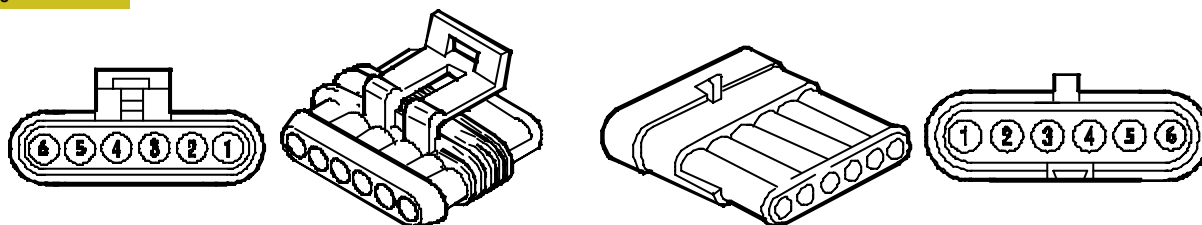


105334

KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	Signal for reverse lights light up switch	2268
2	Ground for reverse lights lighting up switch	0000
3	Ground for anti-start system with gears engaged switch and for reverse light light up switch	0000
4	Ground for anti-start system with gears engaged switch and for reverse light light up switch	8050
5	Signal for reduced gears engaged signalling switch	9992
6	Ground for reduced gears engaged signalling switch	0000

ST81A junction connector (black) - front lights

Figure 95

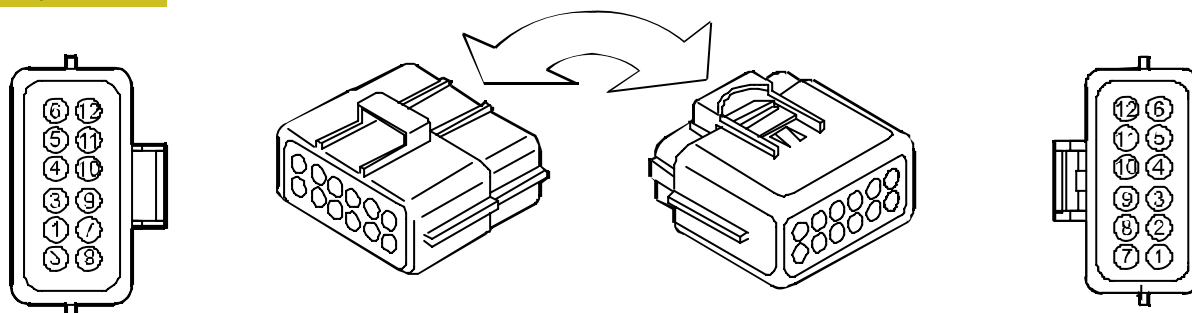

105251


KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	Side / left front direction indicator power supply	1129
2	Right / left front side light power supply	3339
3	Left low beam power supply	2231
4	Left high beam power supply	2219
5	Right / left fog lamp power supply	2228
6	-	-
7	Right side / front direction indicator power supply	1123
8	-	-
9	Right low beam power supply	2223
10	Right high beam power supply	2221
11	Head lamp alignment corrector control	9936
12	Supplementary head lamp power supply	2229

Aquila Trucks Centres

ST82 junction connector (black) - components on engine

Figure 96

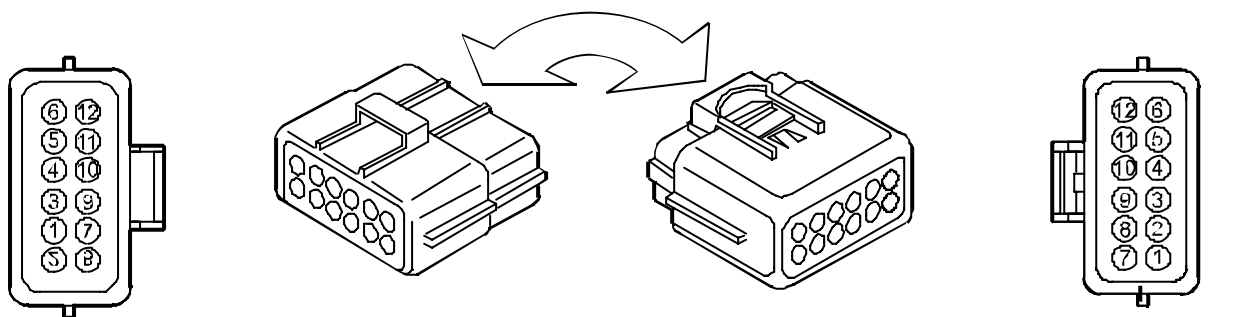


KEY SIDE CONNECTOR VIEW

105251

Pin	Function	Cable colour code
1	-	-
2	-	-
3	Signal for engine ventilation temperature sensor	5166
4	-	-
5	-	-
6	-	-
7	-	-
8	-	-
9	Signal for engine oil level thermometer transmitter	5505
10	Signal for engine oil level thermometer transmitter	5506
11	Ground for fuel filter clogged signalling switch	0000
12	Signal for fuel filter clogged signalling switch	5531

ST83 junction connector (black) - components on engine

Figure 97

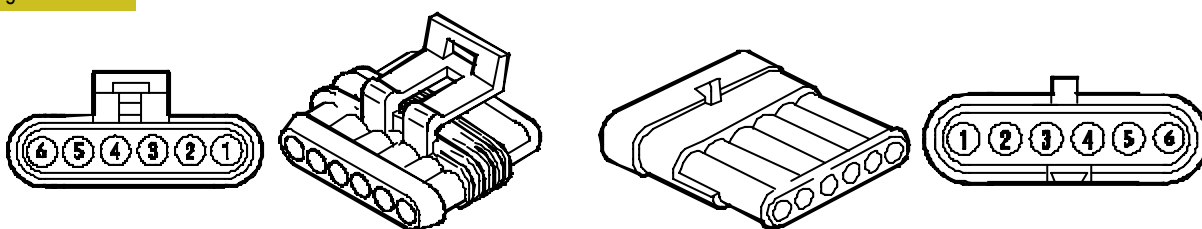

KEY SIDE CONNECTOR VIEW


105334

Pin	Function	Cable colour code
1	Engine oil level transmitter signal	5506
2	Engine oil level transmitter signal	5505
3	Blocked fuel filter switch signal	5531
4	Power drive low oil level switch signal	5525
5	Positive +15 for UDS power unit	8540
6	-	-

Aquila Trucks Centres

ST86 - ST88 junction connector

Figure 98

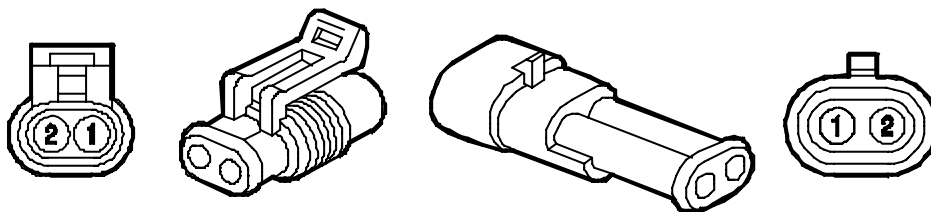

101531

KEY SIDE CONNECTOR VIEW

ST86 (black) - T.G.C. connection


Pin	Function	Cable colour code
1	TGC Off relay excitation	8845
2	TGC On relay excitation	8835

ST86 (black) - I.G.C. connection

Pin	Function	Cable colour code
1	Provision	8045
2	TGC On relay excitation	8035

ST88 (black) - trailer connectors

Figure 99

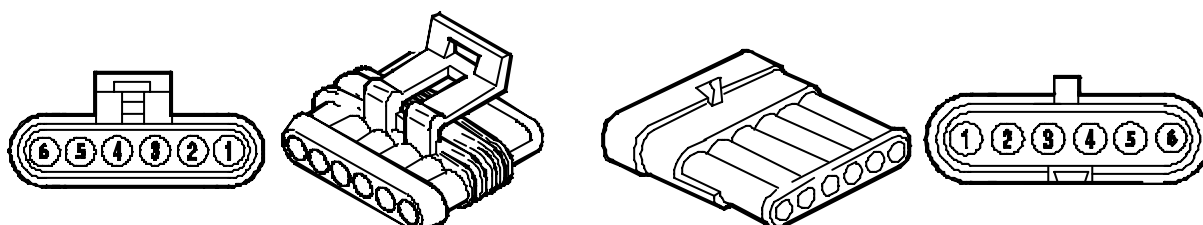

105334


KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	Trailer axle lift signal	6442
2	Trailer brake low air pressure	6689
3	Positive +30 for trailer socket	7790
4	Positive +15 for trailer ABS socket	8847
5	Trailer ABS fault signal	6671
6	Load compartment lighting power supply	2224

Aquila Trucks Centres

ST91 - ST92 - ST93 junction connector

Figure 100

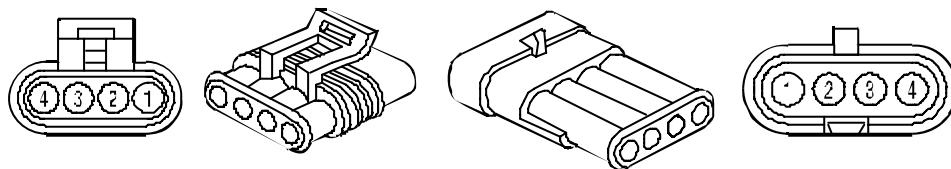

101538

KEY SIDE CONNECTOR VIEW

ST91 (black) - PTO1 (EM)

Pin	Function	Cable colour code
1	PTO 1 power take-off return signal	6131
2	PTO 1 solenoid valve power supply	9131
3	Negative consent for power take-off PTO 1	0391
4	Ground	0000

ST92 (black) - PTO2 (EM)

Pin	Function	Cable colour code
1	PTO 2 power take-off return signal	6132
2	PTO 2 solenoid valve power supply	9132
3	Negative consent for power take-off PTO 2	0392
4	Ground	0000


ST93 (black) - PTO3 (EM)

Pin	Function	Cable colour code
1	PTO 3 power take-off return signal	6133
2	PTO 3 solenoid valve power supply	9133
3	Negative consent for power take-off PTO 3	0393
4	Ground	0000

Aquila Trucks Centres

ST99 junction connector (black) - rear axle ECAS

Figure 101

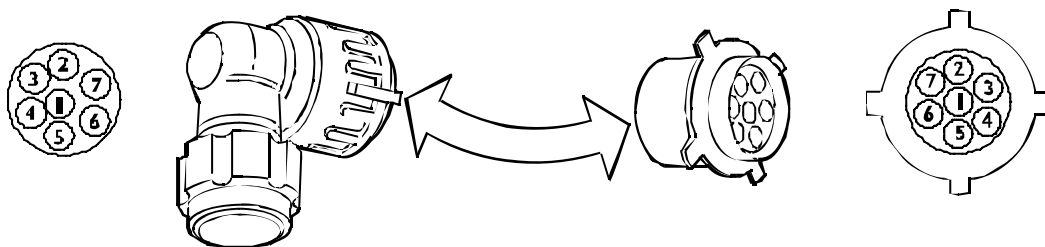

101551


KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	Level sensor ground	0400
2	Right rear axle level sensor signal	5421
3	Left rear axle level sensor signal	5422
4	Rear axle positive electro pneumatic distributor	9400
5	Rear axle ground electro pneumatic distributor	9423
6	Ground for rear axle electro pneumatic distributor left valve command	9425
7	Ground for rear axle electro pneumatic distributor right valve command	9424

Aquila Trucks Centres

ST junction connector- ECAS remote control

Figure 102

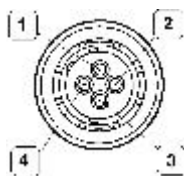


107178

KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	Positive for remote control power supply (pin 1)	7777
2	Negative for remote control (pin 2)	0000
3	Communication line with remote control (pin 3)	3333
4	Communication line with remote control (pin 4)	8888

STY/1 junction connector (black) - switch on clutch

Figure 103

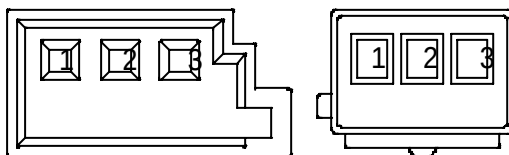

107169


KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	Ground	0000
2	Signal from switch on clutch for VCM	0160
3	-	-

Aquila Trucks Centres

15-pin current outlet for trailer electric connection (72010)

Figure 104

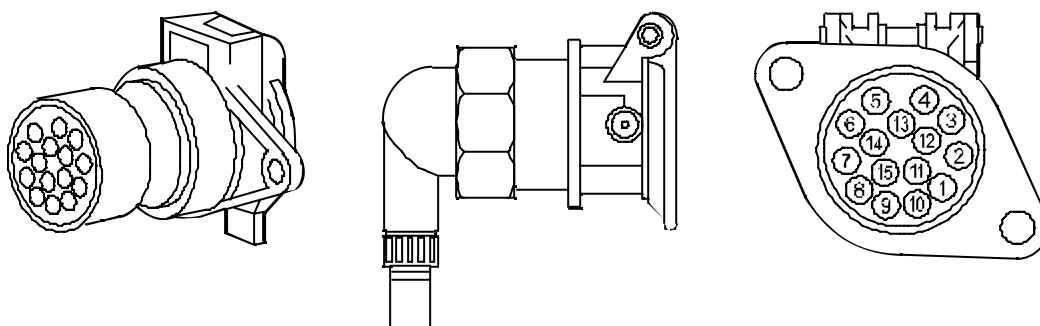

113251


KEY SIDE CONNECTOR VIEW

Pin	Function	Cable colour code
1	Left hand side trailer direction indicators	1180
2	Right hand side trailer direction indicators	1185
3	Trailer back fog light	2283
4	Ground	0000
5	Left trailer end-outline marker	3339
6	Right trailer end-outline marker	3330
7	Trailer stop lights	1179
8	Trailer reverse light	2226
9	Power supply to trailer outlet after fuse for T.M.P. devices	7790
10	Transverse differential blocking signal	6621
11	Power supply to positive trailer interlockings +15	8075
12	Warning light signalling trailer axle lifted	6442
13	Ground	0000
14	Power supply to current outlet	7021
15	Power supply to current outlet	8021

Aquila Trucks Centres

7-pin current outlet for trailer electric connection

Figure 105

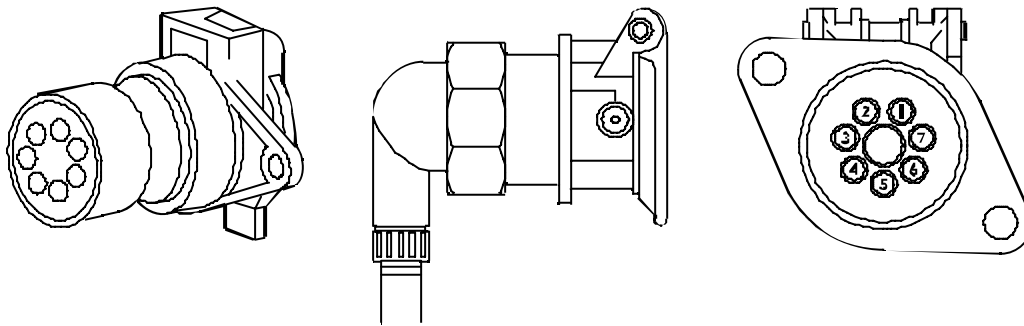

113252

KEY SIDE CONNECTOR VIEW

72000 - normal 7-pin current outlet for trailer electric connection

Pin	Function	Cable colour code
1	Ground	0000
2	Left trailer end-outline marker	3339
3	Left hand side trailer direction indicators	1180
4	Trailer stop lights	1179
5	Right hand side trailer direction indicators	1185
6	Trailer end-outline marker	3330
7	Free	-

72001 - auxiliary 7-pin current outlet for trailer electric connection

Pin	Function	Cable colour code
1	Ground	0000
2	Trailer interlockings power supply with terminal +15	8075
3	Trailer reverse light	2226
4	Free	-
5	Warning light signalling trailer axle lifted	6442
6	Power supply to trailer outlet after fuse for T.M.P. devices	7790
7	Trailer back fog light	2283


72006 - 7-pin current outlet for trailer ABS electric connection

Pin	Function	Cable colour code
1	Positive after fuse for trailer ABS	7772
2	Power supply after fuse for ABS / speed limiter	8847
3	Ground	0000
4	Ground	0000
5	Trailer ABS fault warning light	6671
6	CAN "H" line (SB)	WS/BI
7	CAN "L" line (SB)	GN/VE

Aquila Trucks Centres

DIAGNOSIS CONNECTOR
Diagnosis connector - 72021

Figure 106

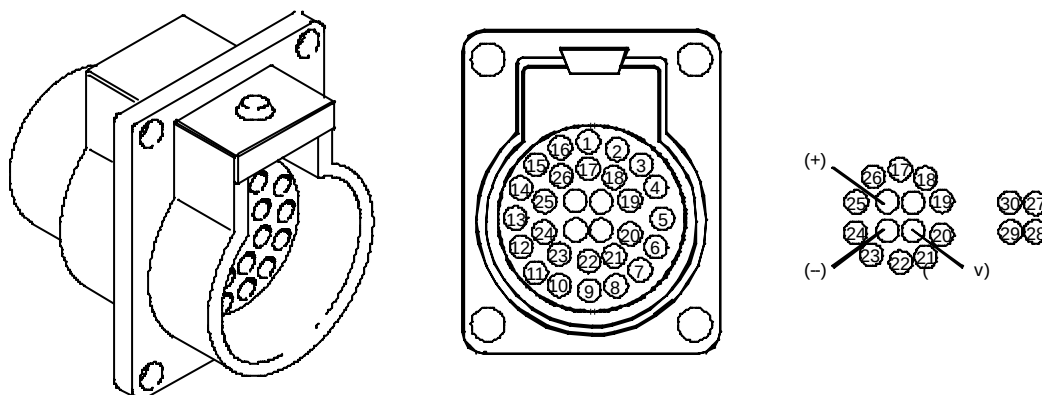

113302

DIAGNOSIS CONNECTOR (FRONT VIEW)


Pins 27,28,29,30 might be printed with different positions from those reported in this picture.

Pin	System	Function	Cable colour code
1	Free	-	-
2	EDC (ECM)	K	2298
3	Free	-	-
4	ABS / EBS + ECAS	K	2299
5	Free	-	-
6	Intarder / EM	K	2293
7	Free	-	-
8	Body Controller / DDM / PDM	K	2295
9	Free	-	-
10	Heater / Air conditioner	K	2296
11	Service actuation Key to "MAR"	+ 15	8802
12	VCM	K	2292
13	Free	-	-
14	Cluster / tachograph	K	2994
15	Free	-	-
16	UREA (SCR system)	K	2257
17	Free	-	-
18	EUROTRONIC / ALLISON	K	2297
19	Free	-	-
20	Programming retarder EOL	-	3393
21	CAN H (VDB)	H	Ws/Bi
22	CAN L (VDB)	L	Gn/Ve
23	Free	-	-
24	Free	-	-
25	Startup signal	-	8050
26	Signal ground	-	0050
27	Free	-	-
28	Speed signal (B7)	v	5542
29	Signal ground	31	0050
30	Positive	+ 30	7772

Aquila Trucks Centres

OBD DIAGNOSIS CONNECTOR (BLUE)

Figure 107

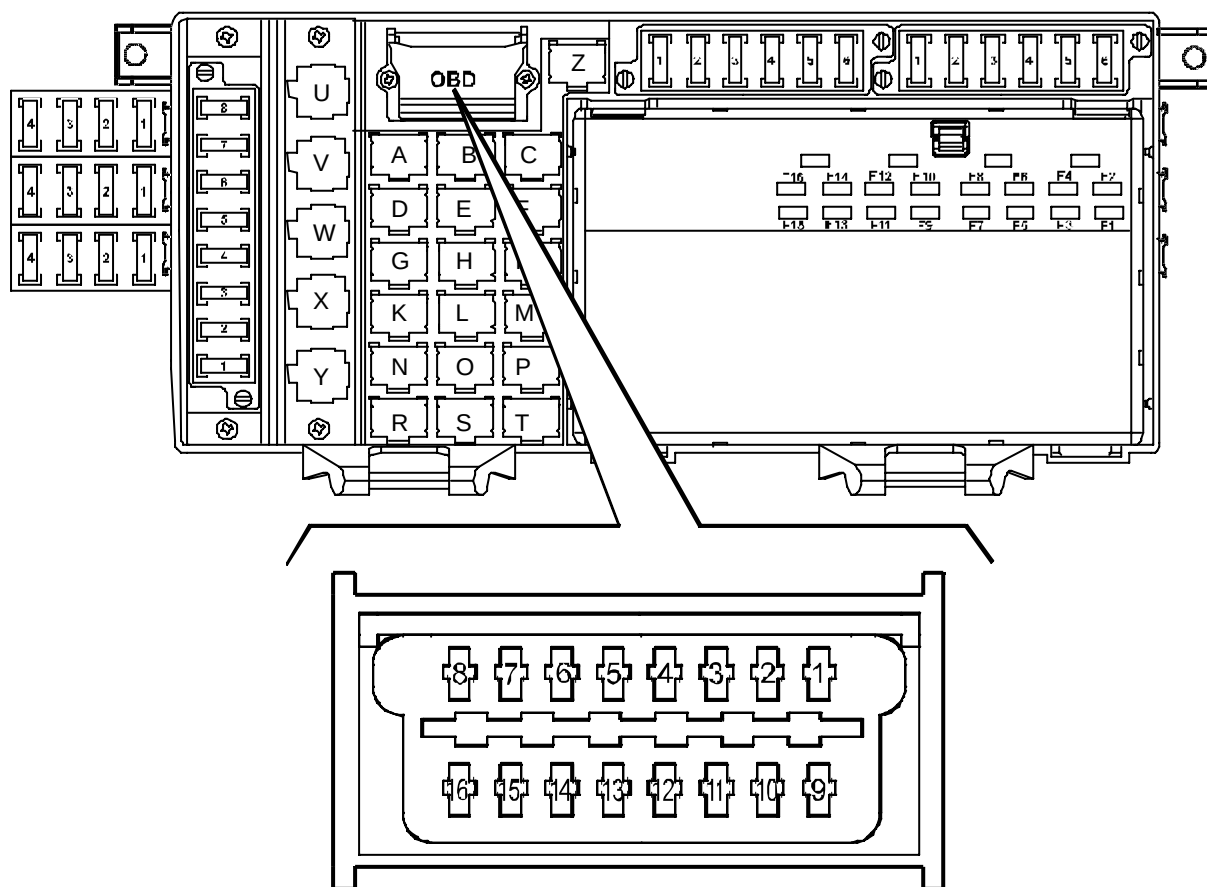

113328

KEY SIDE CONNECTOR VIEW


Pin	Function	Cable colour code
1	-	-
2	-	-
3	-	-
4	Ground	0000
5	Signal ground	0050
6	CAN line H (ECB)	White
7	-	-
8	-	-
9	-	-
10	-	-
11	-	-
12	-	-
13	-	-
14	CAN line L (ECB)	Green
15	-	-
16	Battery direct positive (+ Batt)	7721

Aquila Trucks Centres

BULKHEAD**LEFT-HAND DRIVE**


Connector A	—	White (free)
Connector B	—	Brown (ECAS)
Connector C	—	Yellow (SCR)
Connector D	—	Blue (EuroTronic/PTO/INTARDER)
Connector E	—	Green (EDC/ADR)

Figure 108

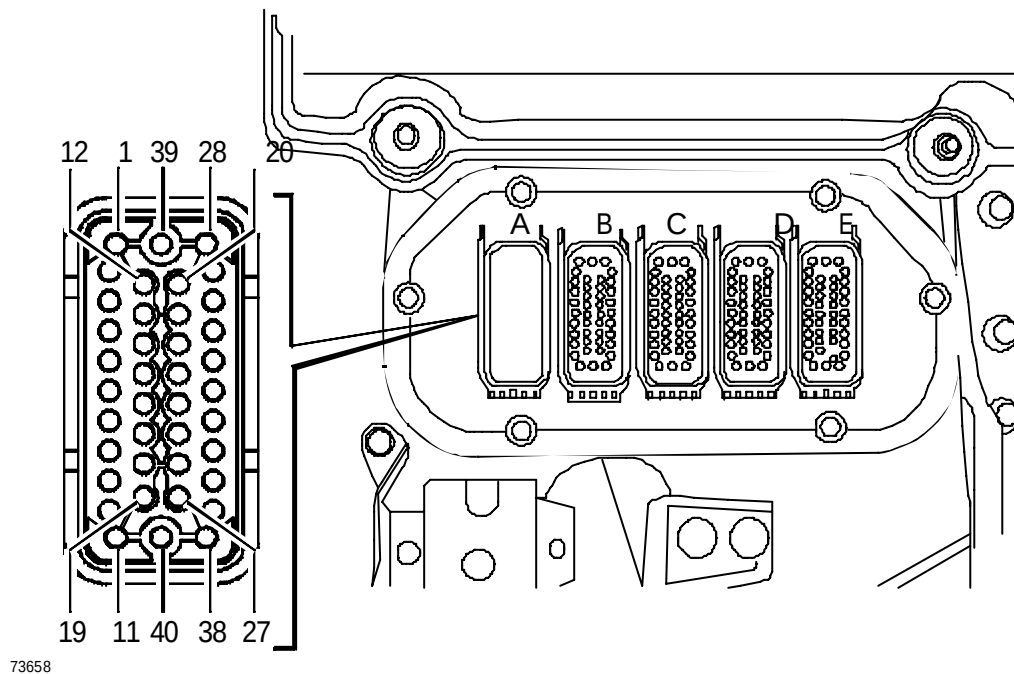**RIGHT-HAND DRIVING**

Connector A	—	White (EDC/ADR)
Connector B	—	Brown (EuroTronic/PTO/INTARDER)
Connector C	—	Yellow (SCR)
Connector D	—	Blue (ECAS)
Connector E	—	Green (free)

Figure 109

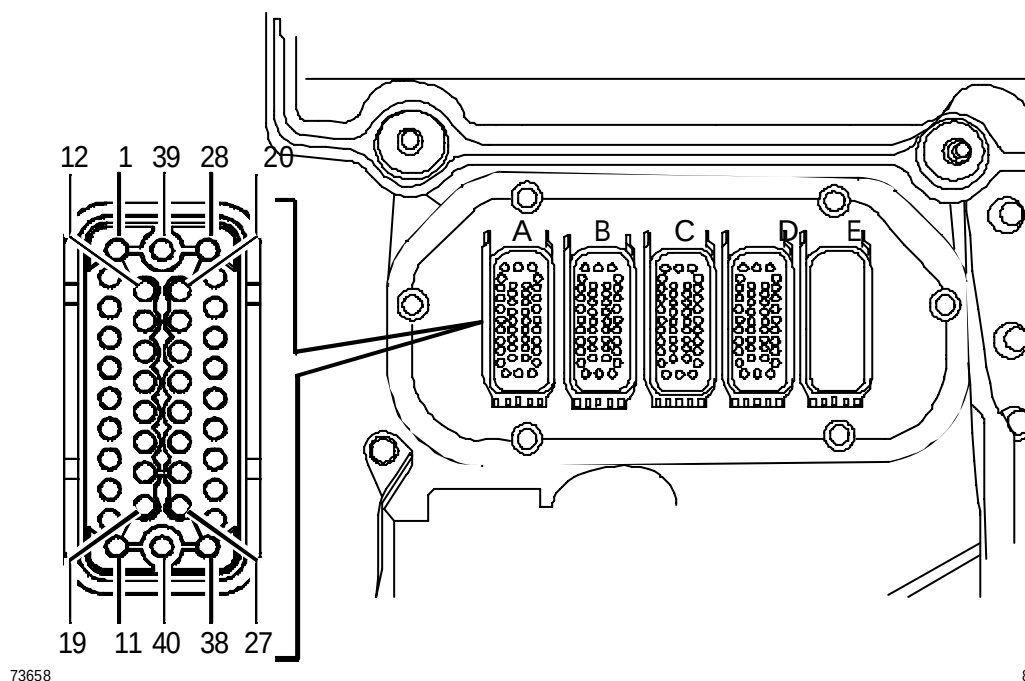

The new bayonet connectors make signal continuity much more reliable than the previous system.

Aquila Trucks Centres

Brown bulkhead “B”

Pin	Description	Cable colour code
1	Ground of level and load pressure on axle sensors	0400
2	Rear right axle level sensor signal	5421
3	Rear left axle level sensor (only truck)	5422
4	-	-
5	CAN - L Line (SB)	Green
6	CAN - H Line (SB)	White
7	Positive for rear axle electro pneumatic distributor	9400
8	Ground for rear axle electro pneumatic distributor loading/unloading command	9423
9	Ground for rear axle electro pneumatic distributor left valve command (only truck)	9425
10	Ground for rear axle electro pneumatic right valve command	9424
11	Air pressure Transmitter signal (rear brakes)	5561
12	Power supply for air pressure transmitter for braking system	5560
13	Ground for air pressure transmitter for braking system	0560
14	Air pressure transmitter signal (front brakes)	5562
15	Sensor signal of load pressure on axles - right axle	5443
16	Sensor signal of load pressure on axles - left axle (only truck)	5444
17	-	-
18	-	-
19	Signal for raised trailer indicator	6442
20	CAN - L Line (BCB)	Green
21	CAN - H Line (BCB)	White
22	Ground from signalling switch gear box in a neutral position	8050
23	Power supply for electronic tachograph transmitter	5514
24	Inverted signal from electronic tachograph transmitter	5516
25	Speed signal from electronic tachograph transmitter	5517
26	Ground for electronic tachograph transmitter	0058
27	Positive +15 for air block turbine VGT (Shut-Off)electro valve	8360
28	Positive +15 for MET control unit	8871
29	Positive +15 for resistance of dryer braking system	8840
30	Positive for TGC closure (TGC On)	8035
31	Positive for TGC aperture (TGC Off)	8045
32	Ground from signalling switch tilted caisson	6607
33	-	-
34	Positive for head lamp illumination loading deck	2224
35	Positive for supplementary depth projectors	2229
36	-	-
37	Failure signal trailer ABS/EBS	6671
38	Positive +15 for power socket trailer ABS/EBS	8847
39	Positive + 30 for 15 pin power socket electrical connection trailer	7790
40	Direct positive +Bat battery for Tachograph	7972

Aquila Trucks Centres

Yellow wall pass "C"

Pin	Description	Cable colour code
1	Ground from connected signalling switch PTO 1	6131
2	Safety sensor signal for max. braking bridge with front axle failure with ABS	6245
3	Positive +15 for safety sensor for max. braking bridge with front axle failure with ABS	8847
4	ABS speed sensor front right wheel	5571
5	ABS speed sensor front right wheel	5571
6	Positive "EV" solenoid valve (unloaded) command front right wheel	9920
7	Positive for solenoid valve command PTO 1	9131
8	Positive "AV" solenoid valve (loaded) command front right wheel	9918
9	Ground for centralised lubrication control unit	0000
10	Positive +15 for centralised lubrication control unit	8898
11	ABS speed sensor rear right wheel	5573
12	ABS speed sensor rear right wheel	5573
13	Positive "EV" (unloaded) solenoid valve command rear right wheel	9930
14	Ground from switch connection consent PTO 1	0391
15	Positive "AV" (loaded) solenoid valve command rear right wheel	9928
16	Ground from signalling switch PTO 2 connected	6132
17	Positive for solenoid valve command PTO 2	9132
18	Ground from switch connection consent PTO 2	0392
19	Ground from signalling switch PTO 3 connected	6133
20	Ground for shielding of CAN outfitted lines	0999
21	CAN-L line(SB) for fitters	Green
22	CAN-H (SB)line for fitters	White
23	Positive for solenoid valve command PTO 3	9123
24	Ground for ASR solenoid valve	0260
25	Positive ASR solenoid valve command	9260
26	Ground from switch connection consent PTO 3	0393
27	Positive +30 for fitters (72072D connector)	7795
28	Ground for e with +15 clamp connected (72072C/D connectors)	0975
29	Positive "AV" (loaded) solenoid valve command left rear wheel	9929
30	Positive for solenoid valve synchronous protection mechanical gear change	8871
31	Positive "EV" (loaded) solenoid valve command left rear wheel	9931
32	Positive "AV" (loaded) solenoid valve command left front wheel	9919
33	Ground for solenoid valve synchronous protection mechanical gear change	9975
34	Positive "EV" (unloaded) solenoid valve command front left wheel	9921
35	ABS speed sensor front left wheel	5570
36	ABS speed sensor front left wheel	5570
37	ABS speed sensor rear left wheel	5572
38	ABS speed sensor rear left wheel	5572
39	-	-
40	Ground for ABS solenoid valves	0000

Aquila Trucks Centres

Blue wall pass "D"

Pin	Description	Cable colour code
1	Positive +15 for Eurotronic 2 / Mass from connected slow gears signalling switch (9 gear changes)	8101 / 0177
2	Ground for Eurotronic 2 / Positive for connection of electro valve reduced gears (9 gear changes)	0000 / 9973
3	Positive for gear change beeper/ Positive for electro valve connection normal gears (9 gear changes)	6100 / 9974
4	Ground for gear change beeper	1101
5	-	-
6	Positive +30 for Eurotronic 2	7101
7	K line Eurotronic 2 (18-pin diagnosis connector)	2297
8	CAN - L Line (VDB)	Green
9	CAN - H Line (VDB)	White
10	CAN - L Line (VDB)	Green
11	CAN - H Line(VDB)	White
12	Speed signal from integral traction tachograph transmitter (Retarder)	5103
13	Positive for integral traction tachograph transmitter (Retarder)	8300
14	Ground for water temperature sensor for Retarder	0309
15	Signal water temperature sensor for Retarder	5309
16	Positive for oil accumulator electro valve Retarder	9311
17	Ground for oil accumulator electro valve Retarder	0311
18	Positive for electro valve connection Retarder	9310
19	Positive for electro valve connection Retarder	0310
20	Positive for Air heater supplementary pump /K Line K water heater (10-pin diagnosis connector)	7783 / 2295
21	Positive for control and signalling unit supplementary heater	7775
22	Command for supplementary heater with passage for micro-switch with command lever heater tap	7506
23	Positive from switch for internal aerator	7711
24	Positive +30 for supplementary water heater	7708
25	Ground for supplementary fuel pump Air heater	0000
26	CAN - L line(BCB)	Green
27	CAN - H line(BCB)	White
28	CAN - L line(BCB)	Green
29	CAN - H line (BCB)	White
30	Positive for electro valve water re-circulation engine block	9506
31	Positive for warning light supplementary connected heater/connection consent electro valve water re-circulation engine block	6605
32	Ground for integral traction tachograph transmitter (Retarder)	0000
33	Positive +15 alternator (TGC with ADR)	8876
34	Positive +15 alternator (TGC with ADR)	8876
35	Ground (TGC ADR)	0000
36	-	-
37	Ground from safety control unit switch - TGC signal (ADR) Off	0176
38	Ground from safety control unit switch - TGC signal (ADR) On	0178
39	-	-
40	-	-

Aquila Trucks Centres


Green wall pass "E"

Pin	Description	Cable colour code
1	CAN - L line (ECB)	Green
2	CAN - H line (ECB)	White
3	-	-
4	-	-
5	-	-
6	-	-
7	Positive +15 alternator	8876
8	Ground from request EDC system diagnosis switch (predisposition)	0163
9	Ground from request EDC system diagnosis switch (predisposition)	5163
10	ACC Power supply	8176
11	Load signal from alternator	7009
12	Positive for front thermal mirror	8830
13	Positive +15 for EDC (from IBC3)	8015
14	Ground for front thermal mirror	0000
15	-	-
16	CAN L line (VDB)	Green
17	CAN H line (VDB)	White
18	CAN L line (VDB)	Green
19	CAN H line (VDB)	White
20	-	-
21	-	-
22	K line EDC control unit (2-pin diagnosis connector)	2298
23	Positive +30 for starting engine connection (clamp 50)	8888
24	Positive for connection electro magnetic compressor joint (Valeo)	9993
25	Direct positive battery (+Bat) for SCR control unit	7540
26	-	-
27	K line SCR control unit (16-pin diagnosis connector)	2257
28	-	-
29	-	-
30	Ground from low cooling water level sensor warning light)	5520
31	-	-
32	Ground from low cooling water level sensor	5527
33	Positive for connection ventilator engine (baruffaldi)	5166
34	Positive for electro magnetic joint connection switch (baruffaldi ventilator)	5187
35	Ground for electro magnetic joint connection switch (baruffaldi ventilator)	0014
36	-	-
37	Engine rpm sensor signal for bodybuilders (ST14B)	5587
38	-	-
39	Positive +30 for EDC	7151
40	Positive +30 for EDC	7151

Aquila Trucks Centres

CENTRAL INTERCONNECTING UNIT

Figure 110

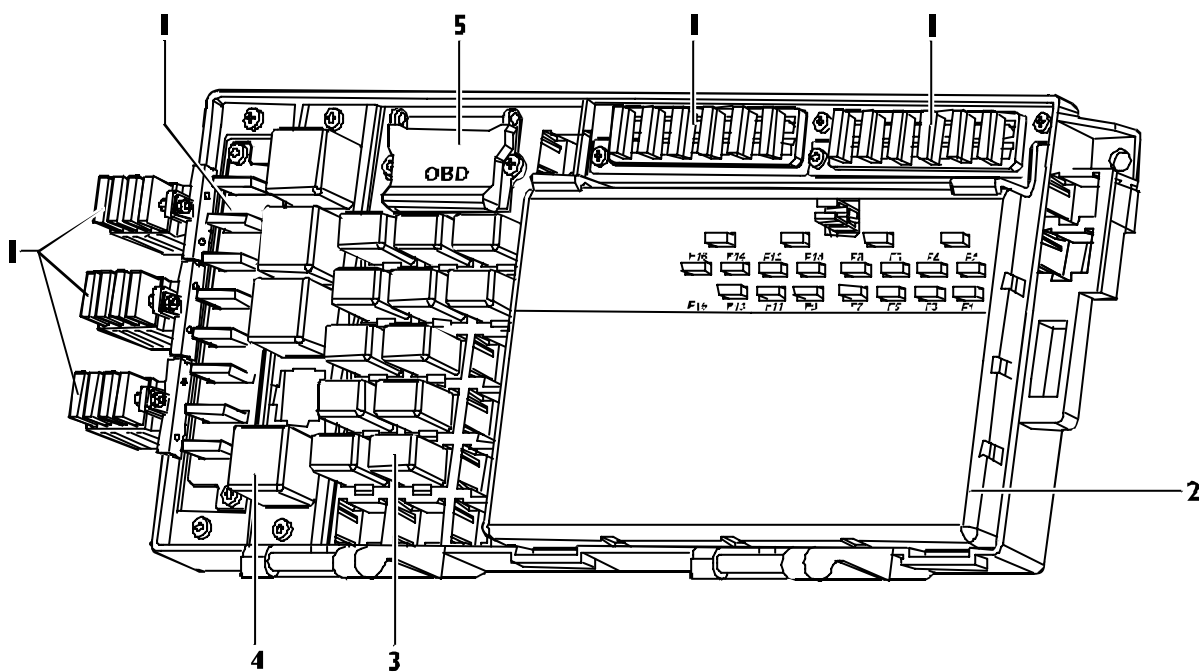


112588

Ref.	Description
1	Fuse holder
2	Body Controller (IBC3)
3	Mini switches
4	Micro remote control switches
5	OBD

Aquila Trucks Centres

FUSE

Figure 111

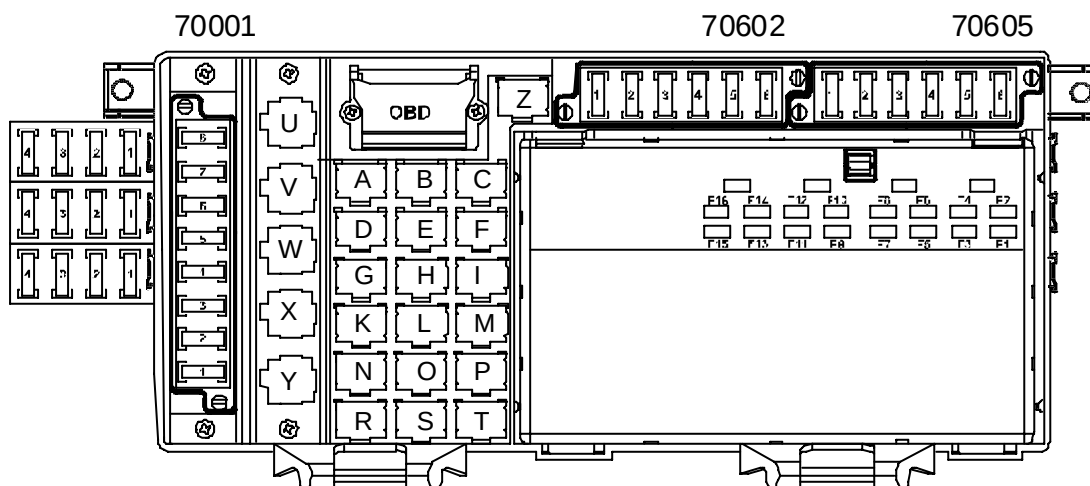

112589

Fuse holder 70602

Ref.	Function	Delivery (A)	Terminal
1	DDM / Driver power windows	20/15	+30/+15
2	PDM / Passenger power windows	20/15	+30/+15
3	EDC	30	+30
4	ABS	5	+15
5	-	15	+30
6	ABS	15	+30

Fuse holder 70605


Ref.	Function	Delivery (A)	Terminal
1	Fridge / tool collect / OBD / Data communication + navigation	10	+BAT
2	ECAS/EM	5	+15
3	ECAS	7.5	+30
4	Retarder / ABS	10	+30
5	Retarder	10	+15
6	Heated seats/central lubrication/door lock with RF	7.5	+15

Fuse holder 70001

Ref.	Function	Delivery (A)	Terminal
1	EUROTRONIC 2	10	+30
2	Air conditioner	15	+30
3	Air conditioner	5	+30
4	Additional heater	15	+30
5	Additional heater	5	+30
6	Courtesy lights	5	+30
7	ACC/Heated windscreen/tool collect/Data communication + navigation	10	+15
8	MC-NET / Beacon lights/headlamp washer pump	10	+30

Aquila Trucks Centres

Figure 112

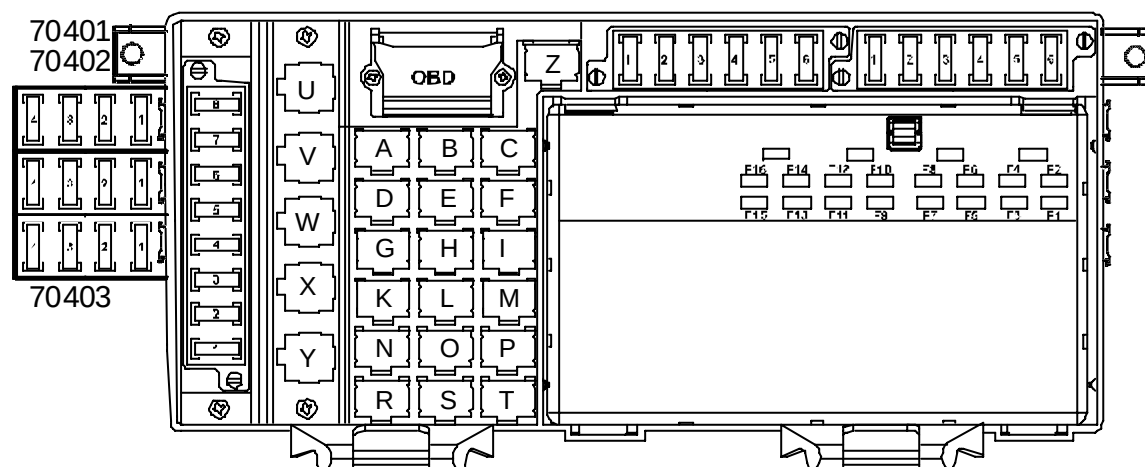

112590

Fuse holder 70401

Ref.	Function	Delivery (A)	Terminal
1	Sun visors	7.5	+15
2	-	-	-
3	-	-	+30
4	12V internal lighting	5	-

Fuse holder 70402

Ref.	Function	Delivery (A)	Terminal
1	Heated windscreen	25	+30
2	VGT solenoid valve/servoshift	10	+15
3	Heated mirrors	15	+15
4	Heated windscreen	25	+30


Fuse holder 70403

Ref.	Function	Delivery (A)	Terminal
1	EM	15	+30
2	EM	15	+30
3	ACC	5	+15
4	SRC (UREA)	20	+ batt.

Aquila Trucks Centres

REMOTE SWITCHES

Figure 113

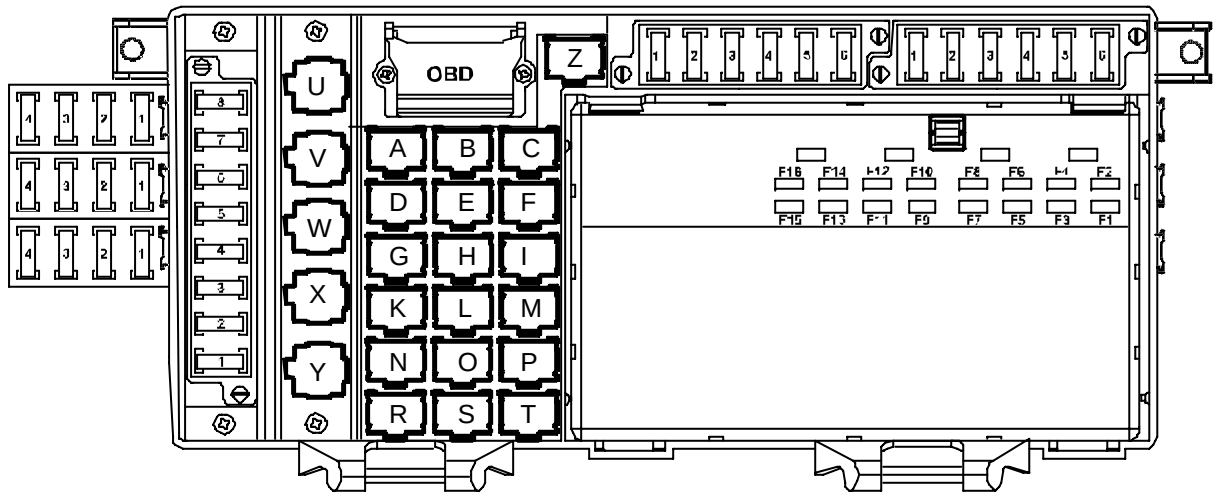

112591


Ref.	Description	Component code
A	Horn remote control switch	25805
B	Remote control switch for water heater (opt.)	25337
C	-	-
D	Remote control switch for electrical bush opening	25352
E	Remote control switch for water heater (opt.)	25325
F	-	-
G	Electrical manhole lock remote control switch	25351
H	Remote control switch for manual climate control system (opt.)	25310
I	Remote control switch for manual climate control system (opt.)	25874
K	Remote control switch for electro-magnetic engagement of baruffaldi fan	25737
L	Remote control switch for manual climate control system	25332B
M	Remote control switch for manual climate control system	25322
N	Remote control switch for vehicle diagnosis (opt.)	25705
O	Remote control switch for manual climate control system (opt.)	25332A
P	Remote control switch for manual climate control system (opt.)	25327
R	Remote control switch for headlamp washer consensus (opt.)	25740
S	Remote control switch for main electric/mechanic switch (opt.)	25203/25903
T	Remote control switch for main electric switch (opt.)	25202
U	Engine start up remote control switch	25200
V	Remote control switch for key 15 distribution	25213
W	-	-
X	-	-
Y	-	-
Z	-	-

Aquila Trucks Centres

Additional remote control switches

Positioned behind the BODY COMPUTER.

Figure 114

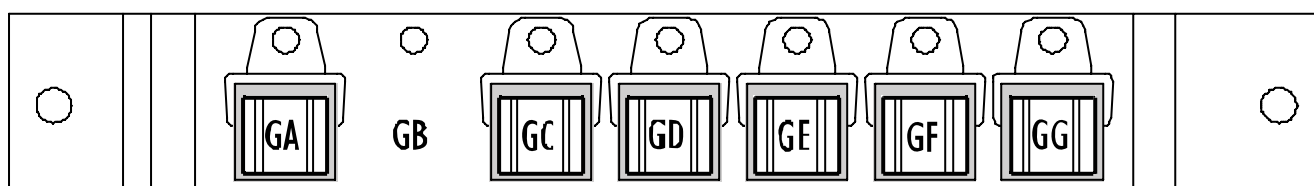


112598

Ref.	Description	Component code
GA	Remote control switch for heated windscreen control	25306
GB	-	-
GC	Remote control switch for heated windscreen	25818
GD	-	-
GE	-	-
GF	-	-
GG	-	-

Aquila Trucks Centres

FUSE ASSEMBLY BODY CONTROLLER (IBC3)

Figure 115

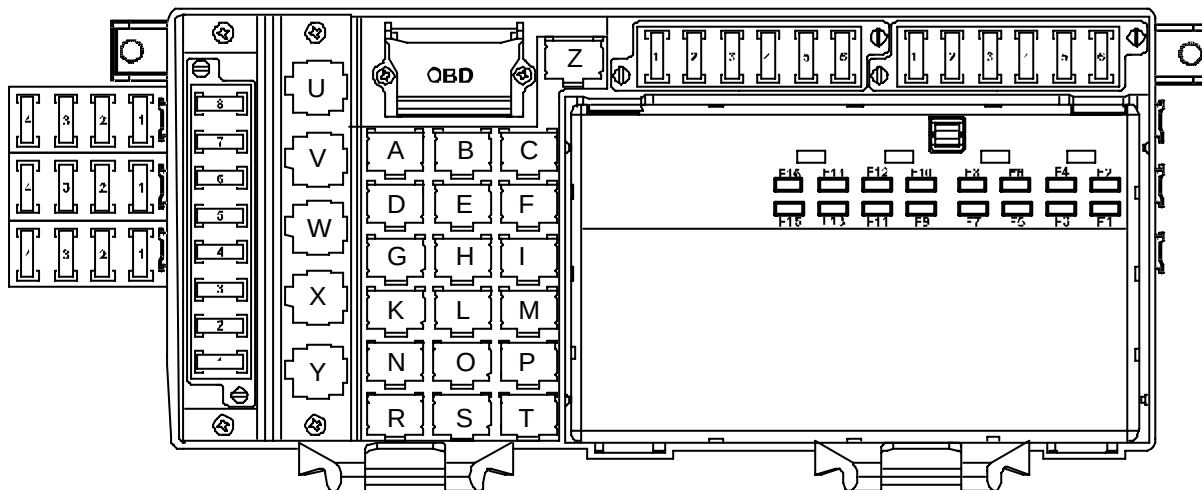

112599

FUSES IBC3



Ref.	Function	Rating (A)	Terminal
F1	-	10	+15/1
F2	-	20	+15
F3	VCM / SWI	10	+30
F4	Tachograph / Bed Module / Cluster / Centralised closure	5	+BAT
F5	-	20	+30
F6	-	20	+30
F7	-	20	+30
F8	-	20	+30
F9	ST14A bodybuilders connector / 72072D (EM -framework)	10	+30
F10	Beeper	10	+30
F11	Tension reducer / Radio	20	+30
F12	Air dryer resistance	10	+15
F13	Bodybuilders connector 72072C (EM - cabin)	10	+30
F14	30-pin junction / Cigarette lighter	10	+30
F15	Radio / Acclimatiser	5	+15/1
F16	-	20	+15/1

Aquila Trucks Centres

SUPPLEMENTARY FUSES (70000)

They are located on the left side of the vehicle, next to the batteries and the TGC. The fuse compartment can be accessed by levering on the two springs available on cover (A).

Figure 116

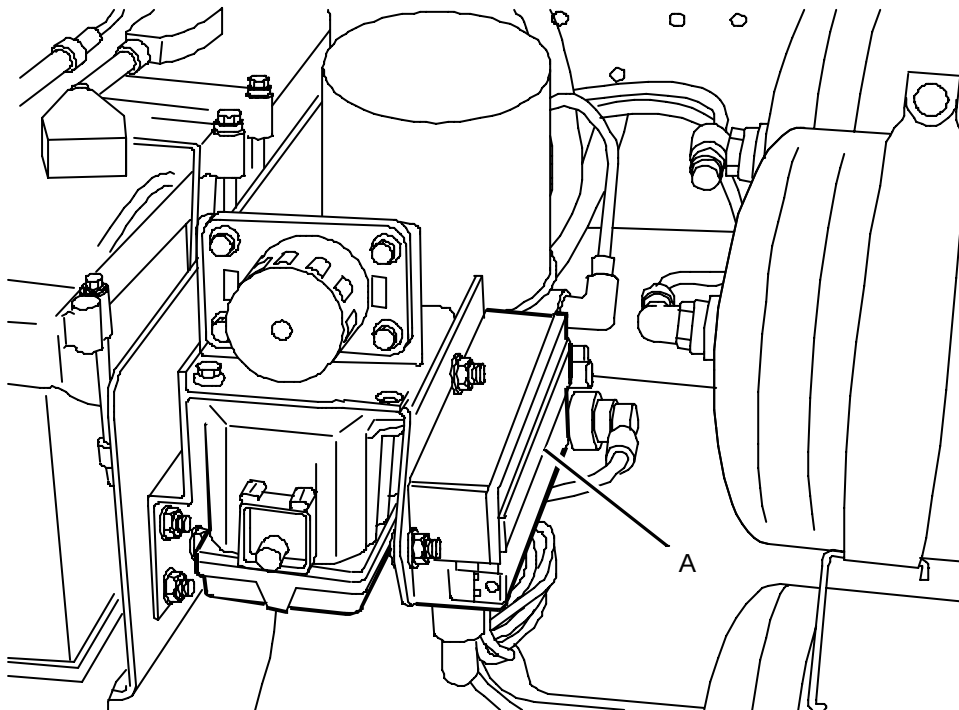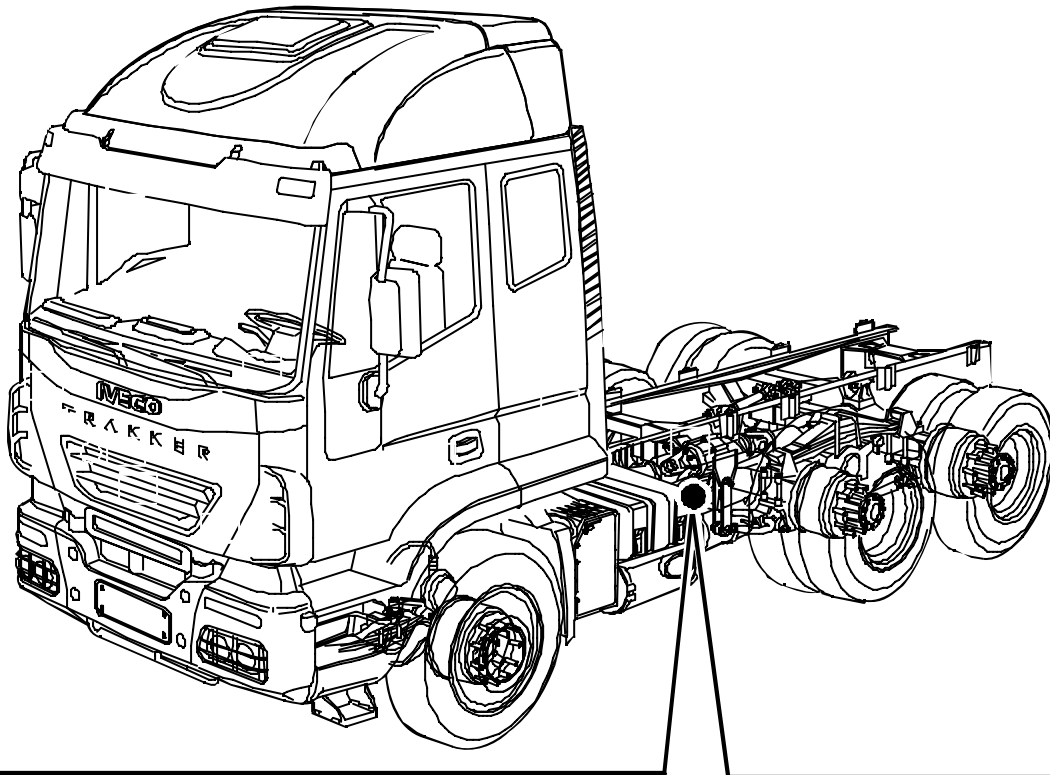


A. Auxiliary fuse holder

113408

Aquila Trucks Centres

Figure 117

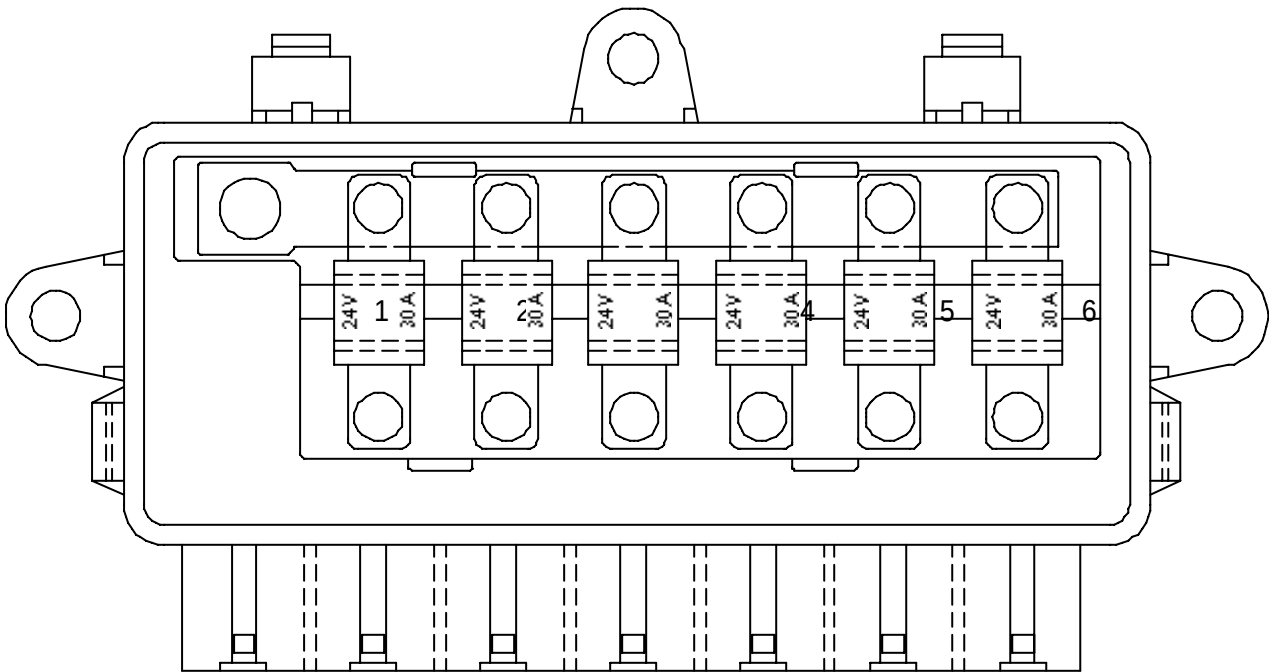


49731

Ref.	Function	Delivery A
1	MET	30
2	MET	30
3	Presetting	30
4	Presetting	30
5	Current tap - ABS/EBS	30
6	Presetting	30

Aquila Trucks Centres

INSTRUMENT BOARD

Figure 118

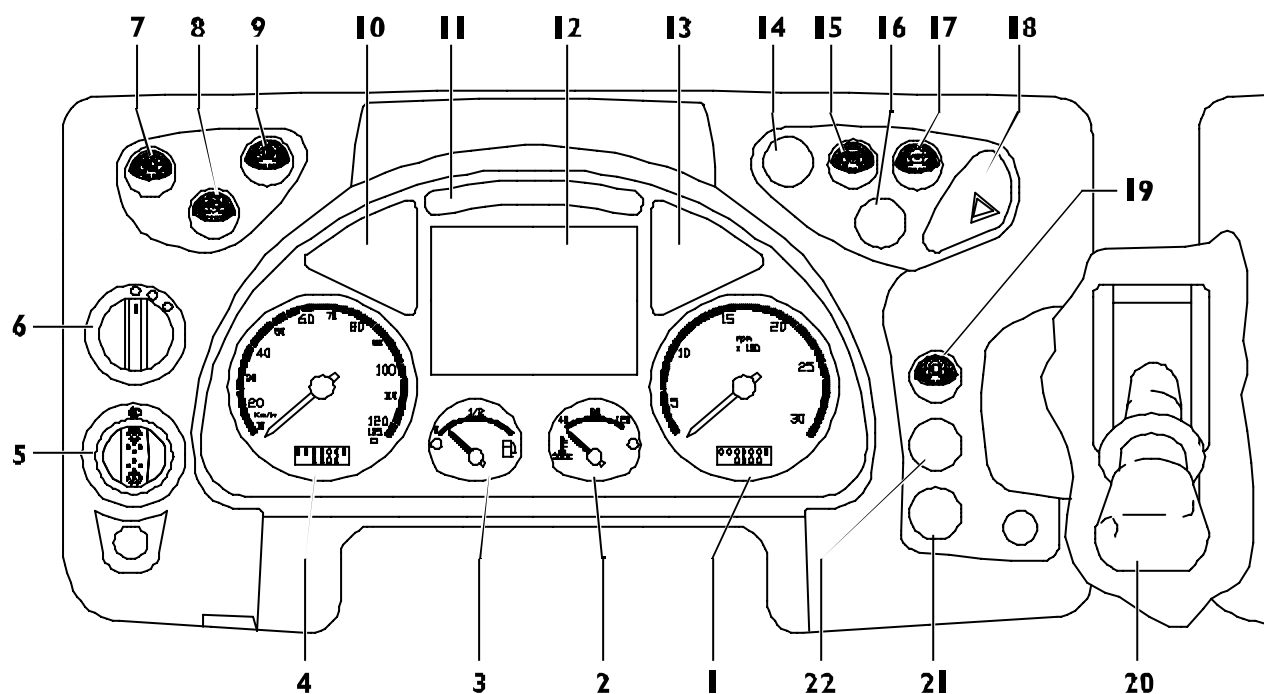


113329

Ref.	Description
1	Revs counter
2	Coolant thermometer
3	Fuel level gauge
4	Speedometer
5	Headlamp trim control
6	External light switch
7	Fog light actuation switch
8	Auxiliary headlamp actuation switch
9	Rear fog light actuation switch
10	Optical indicator cluster
11	Optical indicator cluster
12	Display
13	Optical indicator cluster
14	Free
15	ABS actuation switch (if available)
16	Free
17	ASR actuation switch (if available)
18	Emergency light actuation switch
19	Speed limiter cut-in switch
20	Parking brake
21	Free
22	Free

Aquila Trucks Centres

CENTRAL DASHBOARD CONTROLS

Figure 119

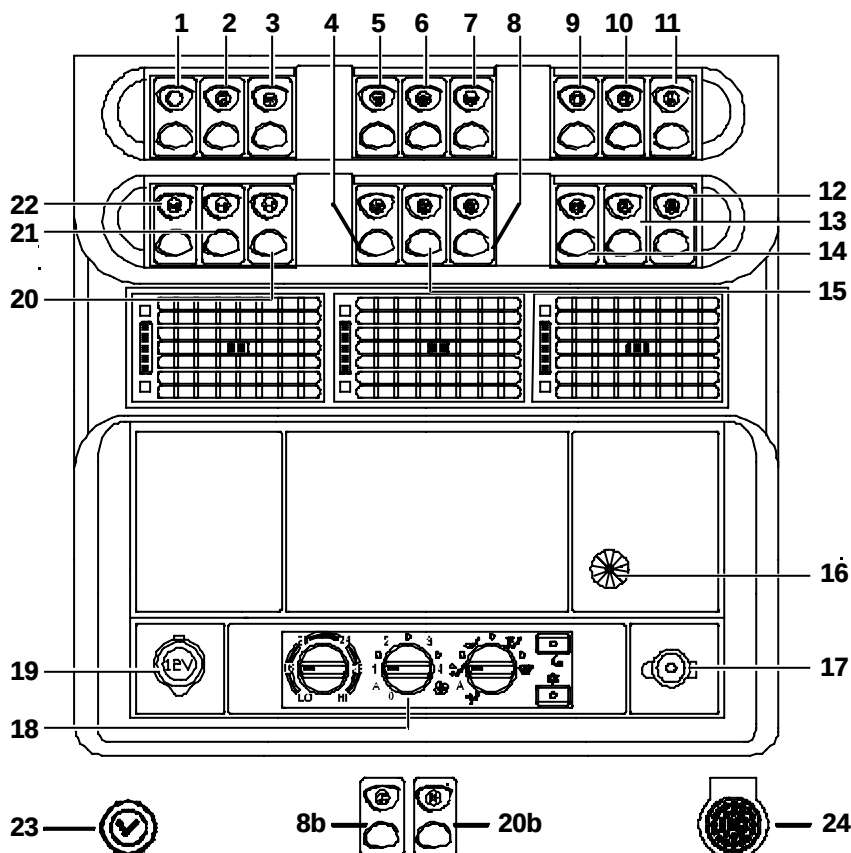

113410


Ref.	Description
1	Switch for engine brake engagement
2	Control for electric hatch pit (OPT)
3	Pneumatic horns
4	Power takeoff switch 1 (OPT)
5	Heated windscreen actuation switch (OPT)
6	Sunshade curtain control (OPT)
7	Central roof lamp cabin lights
8	Multipower power takeoff control (OPT)
8b	Loading platform light actuation switch
9	Roof side roof lamps cabin lights control
10	Fuel heater (OPT)
11	Rearview mirrors heating (before it was embedded into the door)
12	Switch for immediately connecting supplementary water heater (OPT)
13	Engine/cabin pre-heating selector (OPT)
14	Switch for connecting supplementary air heater (OPT - for manual version only)
15	Power takeoff 2 (OPT)
16	Supplementary water heater thermostat (OPT)
17	Key switch for ECO - POWER function
18	Heating/venting or air conditioner controls (OPT)
19	12V current outlet
20	Front differential locking switch
20b	Rotating lamps switch (OPT)
21	Rear differential locking switch
22	Longitudinal differential locking switch
23	Lighter
24	30-pin diagnosis outlet

Aquila Trucks Centres

CONTROLS ON THE STEERING WHEEL

The steering wheel features some keys that enable selecting and controlling certain functions.

Figure 120

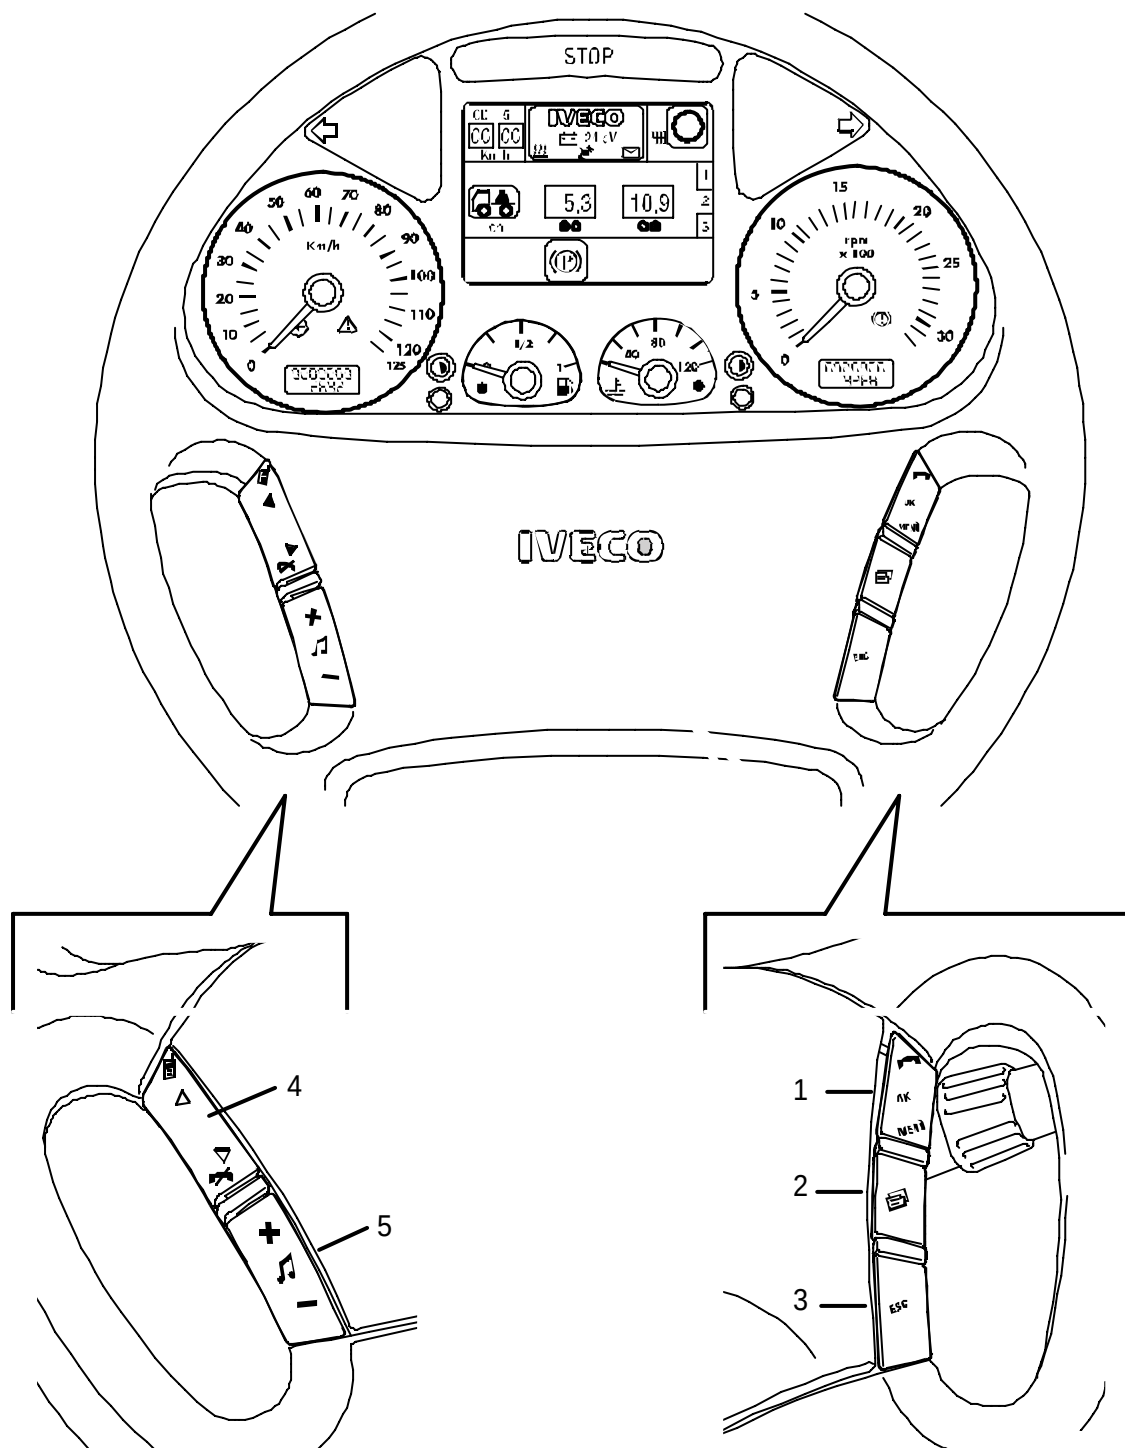

Left hand side:

- 4. KEY y
- KEY b
- 5. KEY +
- KEY -

Right hand side:


- 1. MEBU KEY/OK
- 2. PAGE PUSH BUTTON
- 3. ESCAPE KEY

74202

Aquila Trucks Centres

REARVIEW MIRRORS AND WINDOW REGULATOR CONTROL ADJUSTMENT

Figure 121

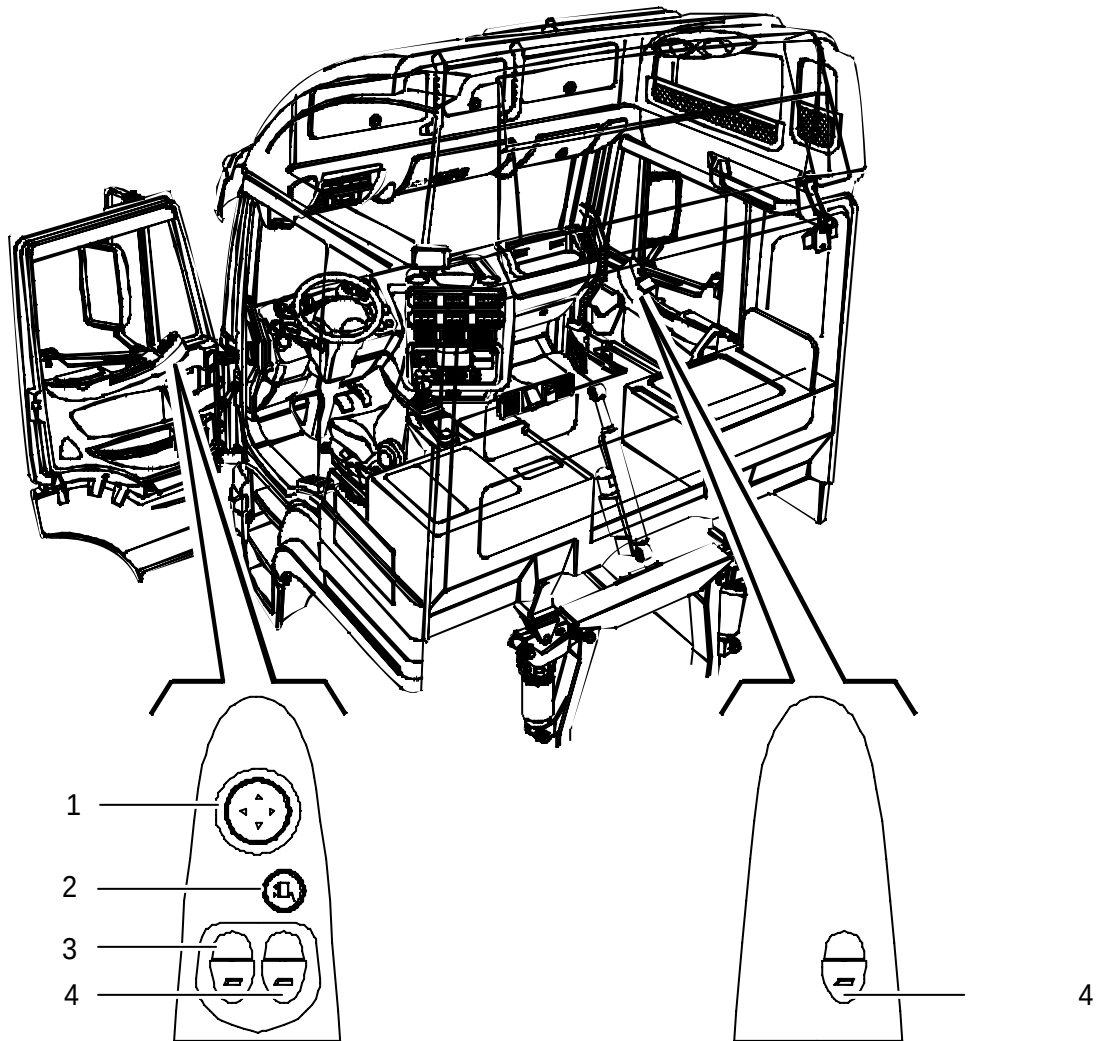

79494

Ref.	Description
1	Rearview mirror orientation control
2	Mirror selector control
3	Driver window regulator
4	Passenger window regulator

Key 2 on AS was placed on the left and in its place there was the mirror heating key that on AT/AD is placed on central dashboard as series.

Adjustment functions for rearview mirrors and window regulator control are managed by DDM and FDM units, and consequently they are present as optionals.


EXTERNAL REARVIEW MIRRORS HEATING

By pressing the related button, the rearview mirrors heating is activated and the related icon is displayed on the display. To deactivate such function, press the button again. The icon will not be displayed any more. It is possible to select this function also with moving vehicle. Heating has a maximum length of 30 minutes.

Aquila Trucks Centres

LEFT LIGHT CONTROL 54033

Figure 122

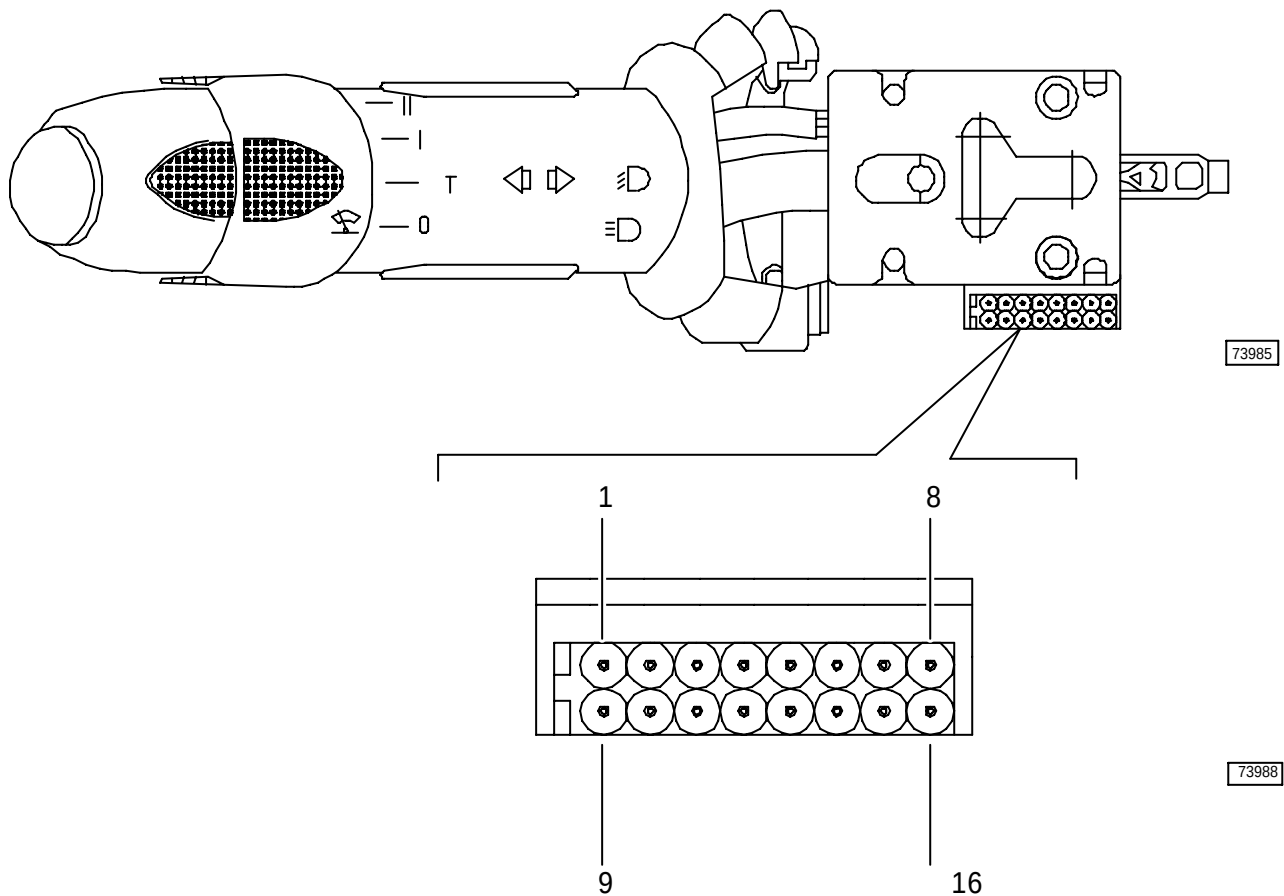


Ref.	Description
1	Windshield wiper (top speed)
2	Windshield wiper (slow speed)
3	Windshield wiper (intermittent)
4	Windshield wiper (one stroke)
5	-
6	Dipped lights on
7	Light flashes
8	Ground
9	Washer electrical pump control
10	-
11	-
12	-
13	-
14	-
15	Right direction indicator
16	Left direction indicator

Aquila Trucks Centres

RIGHT LIGHT CONTROL 54030


Figure 123

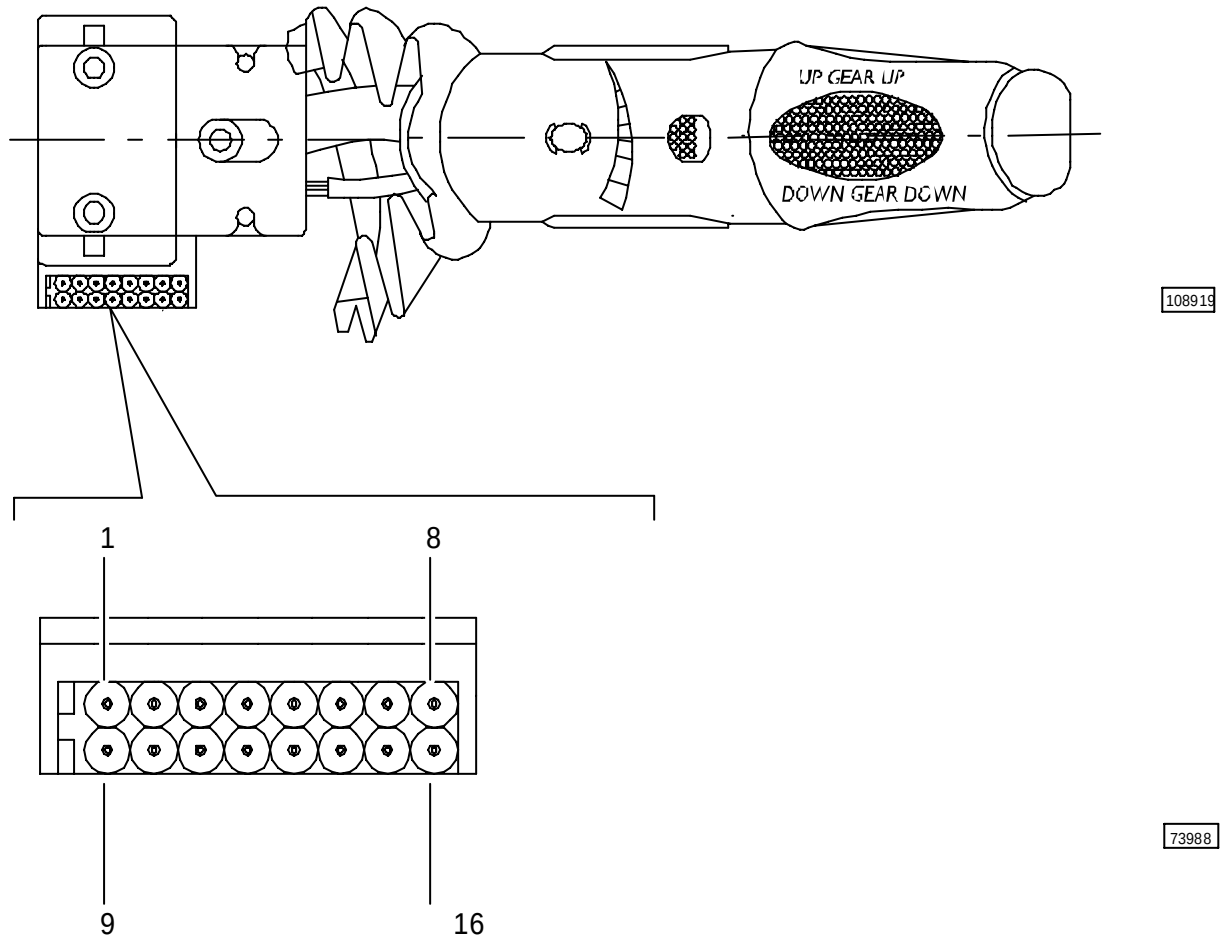

Ref.	Description
1	Intarder (Position 4)
2	Change gear (down)
3	Cruise Control (set/acceleration)
4	Cruise Control (Resume)
5	Intarder (Position 1)
6	Intarder (Position 3)
7	Intarder (Position 2)
8	-
9	Intarder (Position 5)
10	Intarder (Position 6)
11	Cruise Control (deceleration)
12	-
13	-
14	-
15	Change gear (up)
16	Ground (from the SWI)

Aquila Trucks Centres

Figure 124

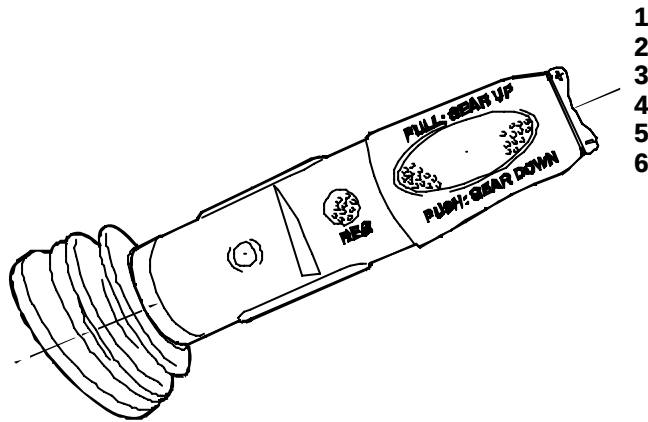

108920

RIGHT MULTIFUNCTION LEVER

The multifunction lever located on the right side of the steering column enables insertion of the engine brake function and the intarder when installed.

The former is selected by moving the lever to positions 1 and 2 and remains on even when the same lever is used to select the intarder function at positions 3, 4, 5 and 6 related to available braking power ratings.

When the engine brake function is selected the control lever signal is transmitted to the (Steering Wheel Interface) S.W.I. center.

Which activates the engine brake on warning light on Instrument Cluster IC, and via Body Computer B.C. sends the request from engine brake to the EDC, EBS and automated EuroTronic center (when present).

When the operator selects the engine brake manually, selection is displayed in the Cluster with a blinking warning light, which goes to steady when the engine brake is turned on. In the manual mode, engine brake action is also conditioned by accelerator pedal release. In the automatic mode, the engine brake is activated by the EDC center on receipt of a request from the EBS center.


In this condition, the EDC center pilots the engine brake electro valve and the VGT actuator to the fully closed position.

Aquila Trucks Centres

ENGINE BRAKE CONTROL AND INTARDER

Vehicles with Intarder mechanical gearshift

Figure 125

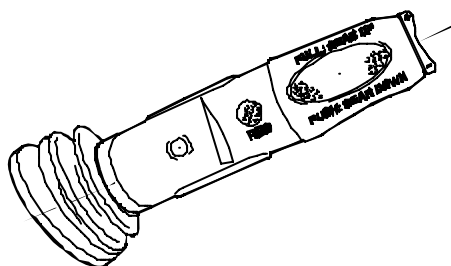


108920

1	Position 0	= disenabled
2	Position 1	= 50% engine brake
3		
4	Position 2	= 100% engine brake + 20% Intarder
5		
6	Position 3	= 100% engine brake + 40% Intarder
	Position 4	= 100% engine brake + 60% Intarder
	Position 5	= 100% engine brake + 80% Intarder
	Position 6	= 100% engine brake + 100% Intarder

Vehicles with Intarder EuroTronic transmission

Figure 126

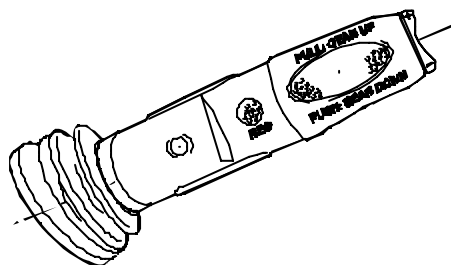


108920

1	Position 0	= disenabled
2	Position 1	= 50% engine brake
3		
4	Position 2	= 100% engine brake + 25% Intarder
5		
6	Position 3	= 100% engine brake + 50% Intarder
	Position 4	= 100% engine brake + 75% Intarder
	Position 5	= 100% engine brake + 100% Intarder
	Position 6	= 100% engine brake + 100% Intarder *

(*) The intarder can be more effective with automatic downshifting managed by the transmission electronic control centre.

Vehicles with mechanical gearshift or Eurotronic transmission in the manual mode without Intarder

Figure 127

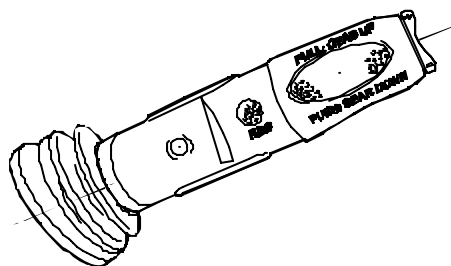


108920

0	Position 0	= disenabled
1	Position 1	= 50% engine brake
2	Position 2	= 100% engine brake

Vehicles with Eurotronic transmission in the automatic mode without Intarder

Figure 128

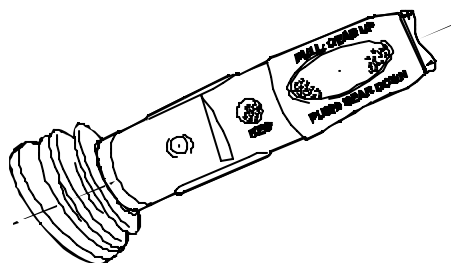

108920


0	Position 0	= disenabled
1	Position 1	= 100% engine brake
2	Position 2	= 100% engine brake + downshifting in the automatic mode

Aquila Trucks Centres

GEAR SELECTION FUNCTION

On the new range of Euro 4 vehicles the gear selector has been eliminated. Its functions are performed by the control pushbutton panel on the central panel of the dashboard, in combination with the drive control system lever.

Figure 129

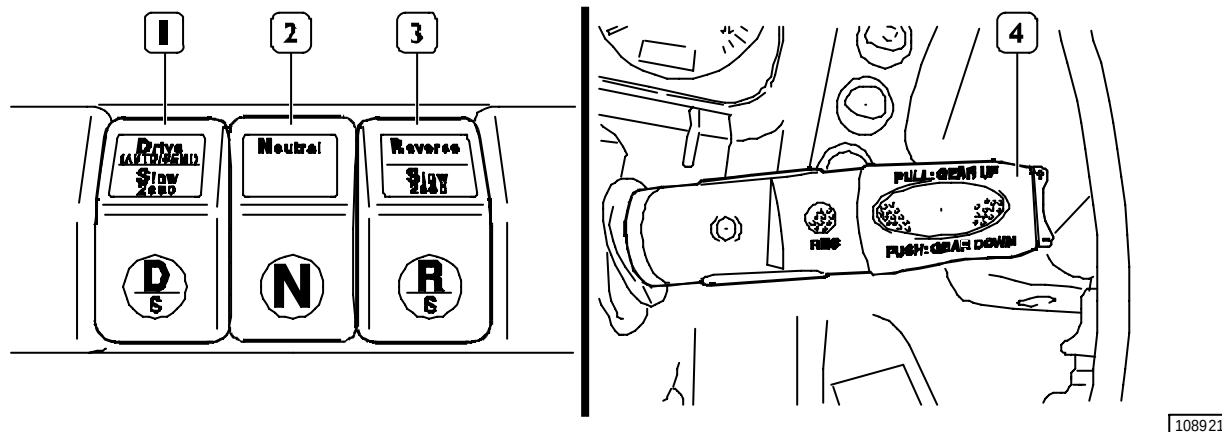

1. Pushbutton D - AUTO/SEMI mode
2. Pushbutton N - neutral
3. Pushbutton R - Reverse gear
4. Drive control system - gear selection

Driving in manual mode (semi)

- 1) Parking brake engaged.
- 2) Start the engine
- 3) Gearbox in neutral (position N).
- 4) Briefly press pushbutton "D" (1). The automatic system is activated and the calculated pick-up gear is engaged. The display shows the pick-up gear together with "AUTO".
- 5) Turn off the automatic system by again pressing button "D". The display passes from showing "AUTO" to "SEMI".
- 6) The pick-up gear can be corrected with the following operations on the drive control system (4): By slightly moving the drive control system upwards (pulling it) the gearbox shifts one ratio up. By slightly moving the drive control system downwards (pressing it) the gearbox shifts one ratio down. By keeping the drive control system in the desired position (pulling / pressing it) the gearbox shifts two ratios up or down respectively.

NOTE The following pick-up gears are available: 1st, 2nd, 3rd, 4th, 5th.

- 7) Press the accelerator pedal releasing the parking brake. The vehicle starts (the clutch engages automatically).

Changing ratio while driving the vehicle

Shifting up to a higher ratio

- By slightly moving the drive control system (4) downwards (pressing it) the gearbox shifts one ratio up.
- By keeping the drive control system (4) in this position the gearbox shifts two ratios up.

Shifting down to a lower ratio

- By slightly moving the drive control system (4) downwards (pressing it) the gearbox shifts one ratio down.
- By keeping the drive control system (4) in this position the gearbox shifts two ratios down.

Aquila Trucks Centres

Driving in automatic mode (Auto)

- 1) Parking brake engaged.
- 2) Start the engine
- 3) Gearbox in neutral (position N).
- 4) Briefly press pushbutton "D" (1). The automatic system is activated and the calculated pick-up gear is engaged. The display shows the pick-up gear together with "AUTO".
- 5) After entering AUTO mode, the same guidelines given for the SEMI mode apply (points 6 and 7) for selecting the pick-up gear.

Changing ratio while driving the vehicle

While driving the vehicle the display shows the engaged ratio. All the ratio changing operations are automatic and depend on the situation of driving the vehicle, the load, the position of the accelerator pedal, the speed and number of revolutions of the engine. The gear can always be changed manually with the drive control system (4), without having to leave automatic mode.

Keeping the engaged ratio

If in automatic mode you want to keep the engaged ratio, you need to briefly press pushbutton "D" (1). The gearbox will pass on to manual mode (SEMI). Later operations on the gearbox are possible only by pulling or pressing the drive control system (4) (as described for driving in manual mode). To pass back into automatic mode, you need to briefly press pushbutton "D" (1).

Pass into neutral (Position N)

Press pushbutton "N" (2). The display shows N. Positioning in neutral "N" has priority over the other operations of changing ratio. It is always possible to pass into neutral starting from any ratio. When the vehicle is driving forwards, from the neutral position (N) it is always possible to engage a gearbox ratio. For this you need to briefly press pushbutton "D" (1).

NOTE So as not to wear out the mechanical parts of the clutch control, if stopping the vehicle for longer than 1 - 2 minutes (for instance, in a queue, at a level crossing, etc.), the gearbox must be put into neutral (N). This closes the clutch and the control system is lightened.

Reverse gear

- With the vehicle stationary, briefly press pushbutton "R" (3). The slow reverse gear ratio (RL) is engaged.
- Press the accelerator pedal. The vehicle starts (the clutch engages automatically).

NOTE With the vehicle stationary and in reverse gear it is possible to change between the two reverse gear ratios RL (slow) and RH (fast) by using the drive control system (4)

By slightly moving the drive control system upwards (pulling it) ⇒ RH

By slightly moving the drive control system downwards (pressing it) ⇒ RL

Operations in slow mode

For manoeuvring in harsh driving conditions (off-road, for instance) there is a supplementary operating mode, with the aid of which the driver can fine tune the clutch according to the travel of the accelerator pedal (up to 100%). In this way the engine speed is limited and rapid vehicle acceleration is prevented.

Turning on

- The vehicle must be stationary

Forward drive manoeuvres

- Press and hold pushbutton "D" (1) (> 2 sec.) The forward drive manoeuvre mode is turned on. The display shows "SLOW"

Reverse drive manoeuvres

- Press and hold pushbutton "R" (> 2 sec.) The reverse drive manoeuvre mode is turned on. The display shows "RL SLOW"

Aquila Trucks Centres

Turning off

With the vehicle stationary

- Briefly press pushbutton "D" (1). The calculated pick-up gear is engaged and automatic mode turned on or briefly press pushbutton "R" (3). The slow reverse gear ratio (RL) is engaged.

During the forward drive manoeuvre:


- Briefly press pushbutton "D" (1). The automatic system is activated or operate the kick-down.

During the reverse drive manoeuvre:

- Briefly press pushbutton "R" (3). or operate the kick-down.

FUNCTION ENGAGING EMERGENCY MODE (LIMP HOME)

Figure 130

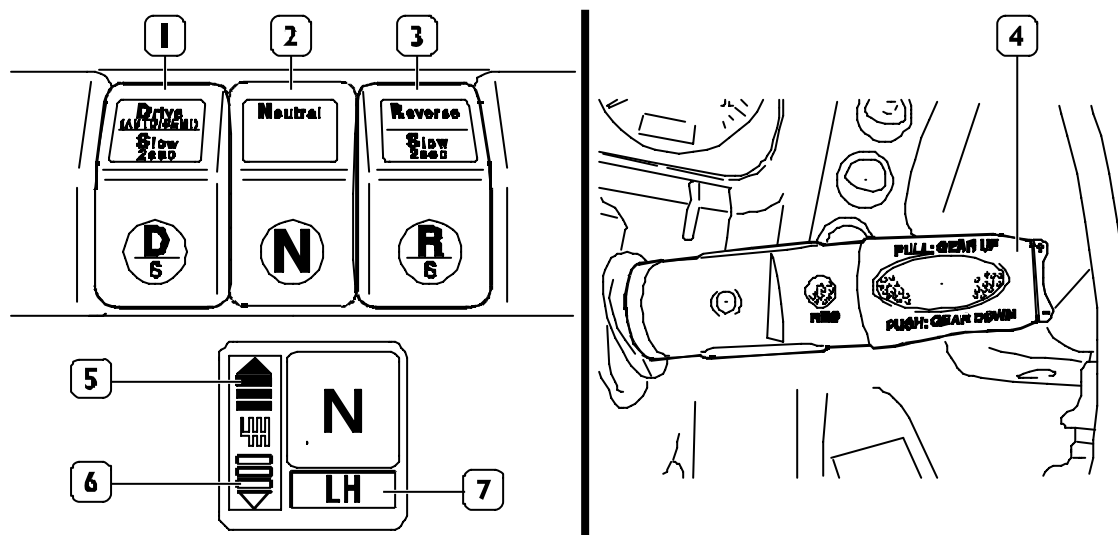

108922

This is an emergency function in which the normal system of automatic control is put out of service.

1) Engagement

Indicator (Display): LH = engage emergency mode (when changing ratio).

2) Activation by the driver

Ignition turned off (until the indicator is turned off).

Ignition turned on, within 5 seconds:

Press pushbutton N (2) for at least 5 seconds.

3) Indicator LH

After turning on emergency mode (when changing ratio).

Gearbox in neutral.

Clutch released (open).

4) "Clutch status" indicator

Bar with arrow tip pointing upwards (5) (blinking) = clutch released.

Bar with arrow tip pointing downwards (6) = the clutch is about to engage or is engaged.

NOTE When changing ratio, blinking stops: (as soon as a new ratio is engaged it starts blinking again!)

5) Operations to perform

After turning on the emergency mode (see point 3), start up the engine.

When the engine is running, press and then release again the brake pedal.

Engage the required pick-up gear.

Aquila Trucks Centres

Forwards:

- By slightly moving the drive control system (4) upwards (pulling it) the gearbox shifts one ratio up.
- By slightly moving the drive control system (4) downwards (pressing it) the gearbox shifts one ratio down.

In reverse gear:

- Briefly press pushbutton "R" (3). (the slow reverse gear ratio "RL" is engaged).
- By slightly moving the drive control system (4) upwards (pulling it) the gearbox passes to the fast reverse gear ratio RH.

Engage the clutch: press pushbutton D (1) until the bars stop blinking with the arrow tip pointing upwards and when the bars appear with the arrow tip pointing downwards (5 / 6).



The clutch can be engaged slowly or even suddenly.

NOTE If the vehicle accidentally moves on a slope with a gear engaged, the clutch will automatically engage

Disengage the clutch: briefly press pushbutton "D" (1) or alternatively press the brake pedal.



If on pressing the brake pedal the clutch is engaged with the pushbutton "D" (1) (for example vehicle pick-up uphill), in order to be able to release the clutch again with the brake pedal, it will be necessary to first briefly take your foot off the brake pedal: a ratio shift will only be possible with the vehicle stationary.

Leaving emergency mode.

Turn off the ignition and wait for the indicator to disappear.

When next starting up the system will be in normal mode.

Aquila Trucks Centres

CLUSTER

Proceed as follows to remove the Cluster:

- Use a screwdriver for leverage inside the two slots in the two groups of switches (A) located in the upper panel.
- Remove the two protection caps.
- Loosen the four panel retainer screws (B).
- Move the panel as far outwards as possible after relocating the steering wheel far from the panel.
- Disconnect the two Cluster attaching screws.
- Loosen the four retainer screws (C).

Figure 131

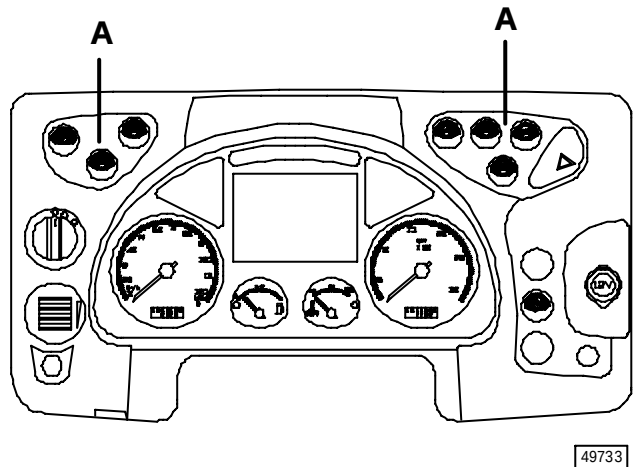


Figure 132


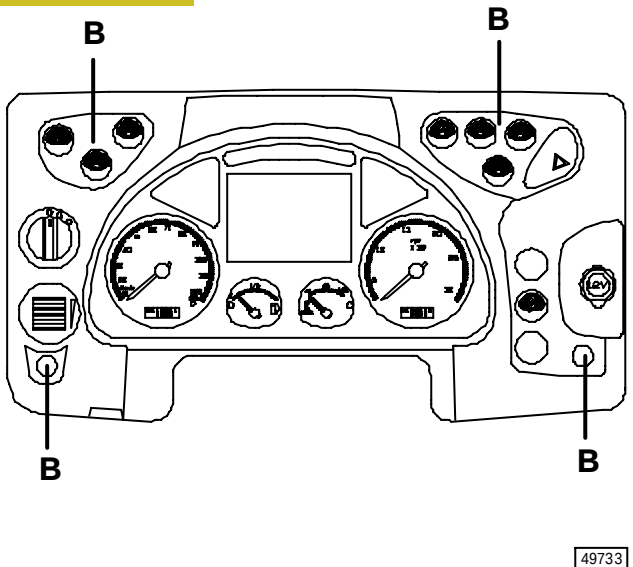



Figure 133

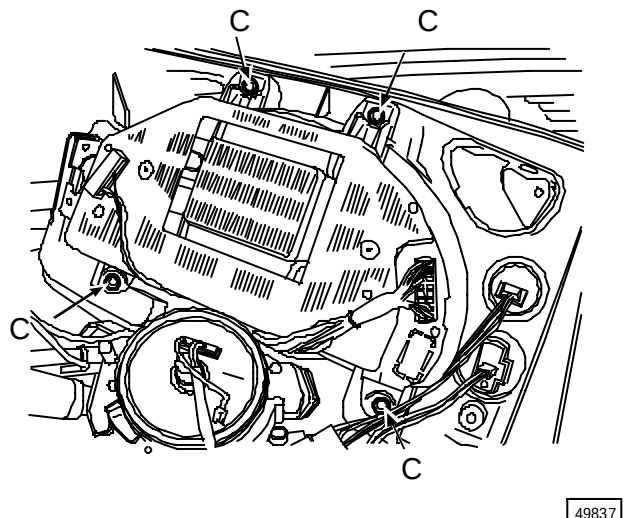

Aquila Trucks Centres

Cluster (optical indicators)

Figure 134

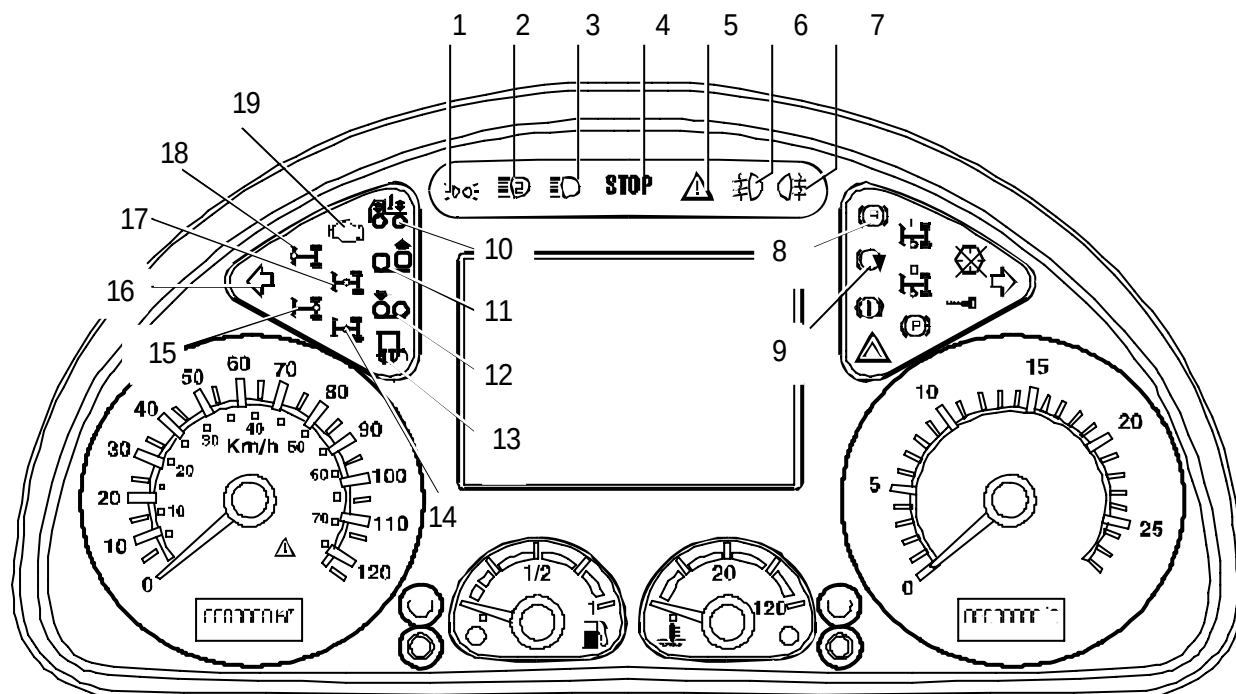


102385

Ref.	Description
1	External lights
2	Auxiliary headlamps
3	High-beam headlamps
4	Generic anomaly/failure signal
5	Generic alarm
6	Fog headlamps
7	Rear fog lights
8	* Retarder
9	* Engine brake
10	Vehicle suspensions not in running trim
11	Third axle lifted
12	Pick-up assist provision
13	Mirror heating
14	Longitudinal tandem differential locking
15	Longitudinal/transverse rear differential locking
16	Left indicator light
17	Longitudinal differential locking
18	Longitudinal/transverse front differential locking
19	OBDII anomaly
*	Warning light: blinking with the function requested by the driver; ON steady with the function actuated

Aquila Trucks Centres

Figure 135

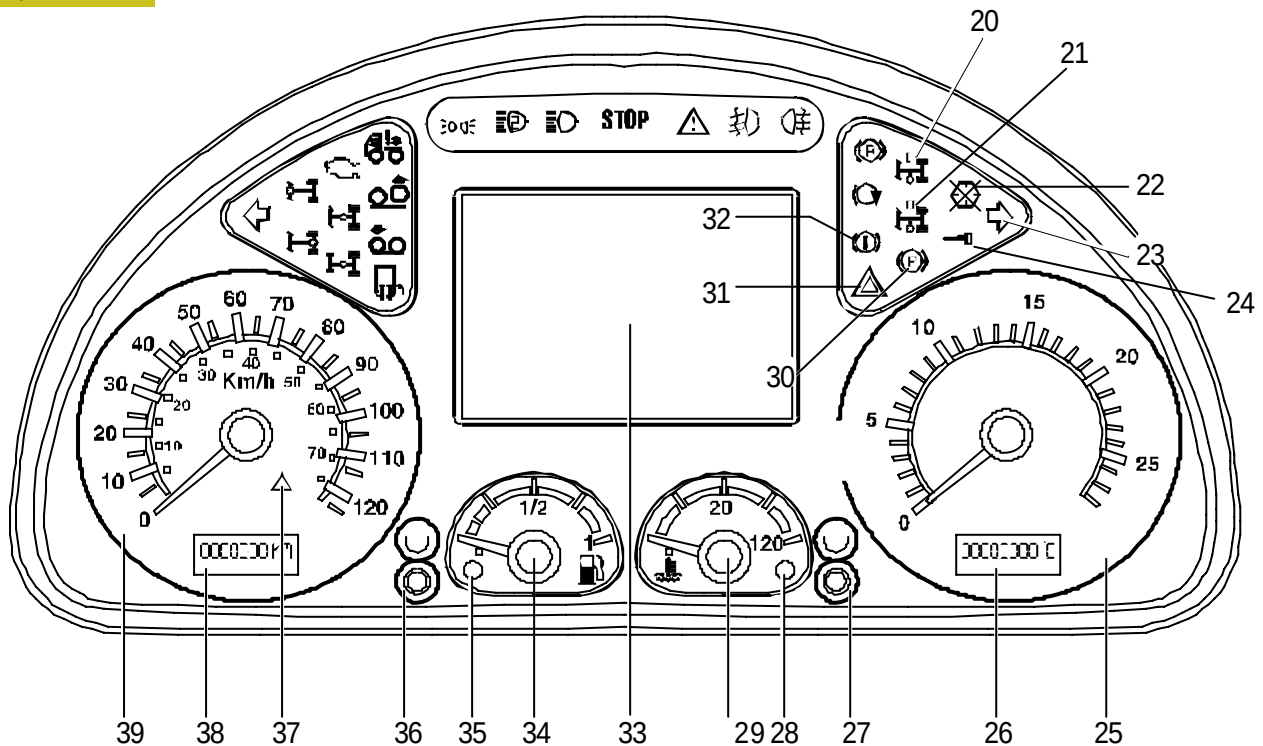


102386

Ref.	Description
20	Power take-off 1 (PTO 1)
21	Power take-off 2 (PTO 2)
22	Instrument panel failure (Cluster)
23	Right indicator light
24	Immobilizer
25	Analog revs counter
26	Temperature/time display
27	Instrument illumination intensity/temperature/time display button
28	Coolant temperature (high temperature warning light)
29	Full/trip odometer display button
30	Hand brake ON
31	Emergency lights
32	Braking system failure
33	Display
34	Fuel level
35	Fuel level (low level warning light)
36	Odometer/mileage indicator display button
37	Tachograph anomaly
38	Full/trip odometer/mileage indicator display
39	Analog speedometer

Aquila Trucks Centres

CLUSTER (PIN-OUT)

Figure 136

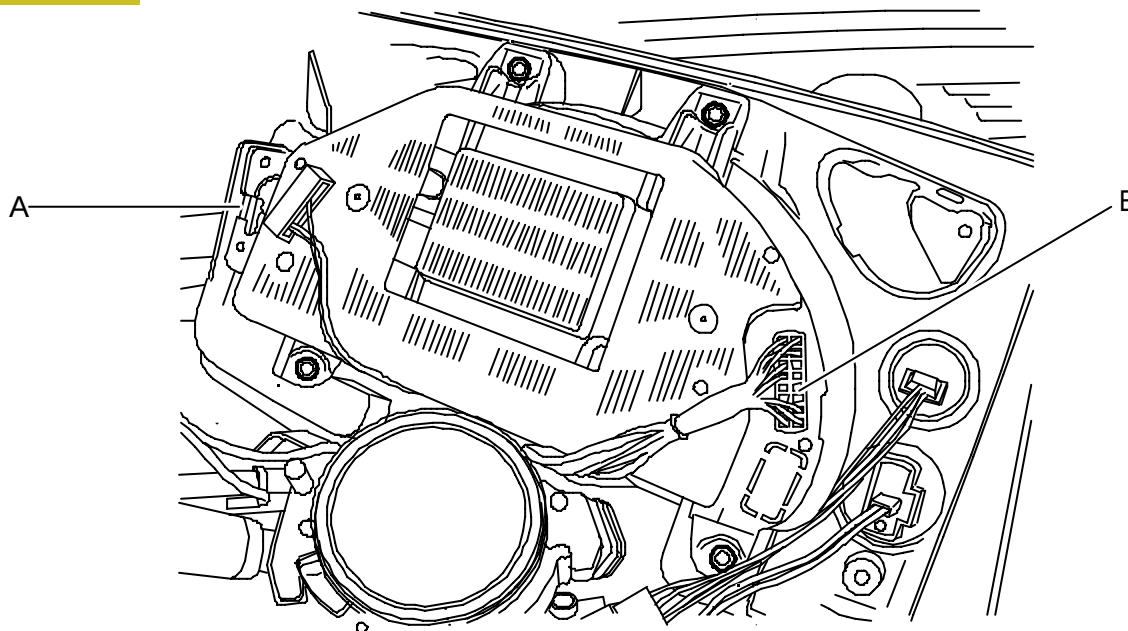

49837/a

Connector A - Blue

Pin	Description	Cable colour code
1	-	-
2	CAN H line (VDB)	White
3	CAN L line (VDB)	Green
4 ÷ 17	-	-
18	Positive +15 (from IBC3)	8871
19	Ground	0000
20	Direct positive battery (+Bat from ICB3)	7906

Connector B - Black

Pin	Description	Cable colour code
1	K line (14-pin diagnosis connector)	2994
2	-	-
3	Trailer ABS failure signal	6671
4	-	-
5	-	-
6	-	-
7	-	-
8	ECM failure signal	6150
9	Speed signal for diagnosis connector (28-pin)	5540
10	Ground from switch for tilted caisson signalling	6607
11	-	-
12 ÷ 17	-	-
18	-	-
19	Speed signal for Toll Collect (predisposition)	5541
20	-	-

Aquila Trucks Centres

Display operation

Display varies subject to the following:

- Key on MAR with engine off
- Key on MAR with engine started and vehicle stationary
- Key on MAR at vehicle speed over 15 Km/h
- Key out

Key in MAR with engine off

Turning the key to MAR displays control of main vehicle systems.

Their presence is indicated in green, if all is OK, or yellow in case of a light anomaly/breakdown, or red in case of a serious anomaly/breakdown, with activation of a buzzer.

The list of systems present on the vehicle and their status can be displayed with the Multiplex system during Start-Up, by receiving the diagnostic message from the various centers.

System Check Ok or System Check Failed information is provided at Start-Up Test end.

The defective system then sends its diagnostic message that is displayed with the icon of the defect under review.

The Multiplex system can indicate vehicle and electronic system errors. In case of an error detected by the Body Computer, it sends the Instrument Cluster a message containing the following information, via the CAN line:

- the status of the light associated to the defect (red for a serious and yellow for a slight anomaly)
- the error code

At receipt of the error message, the Instrument Cluster displays the following in the central display area:

- the colored icon related to the defective component or center
- the related error code

It also advises the operator by activating the Buzzer. After recognizing the error, the operator presses key "OK" and the central display area returns showing the previous information (virtual tool or menu).

The icon related to the error detected is stored in the lower layer of the display or with a specific warning.

No options such as to distract attention or options not related to an operation useful for vehicle operation are available during operation, which is why the Menus available in case of a moving vehicle are reduced to the base essential and scanning of the various displays is obtained simply with the "Menu" key (without reading the list of options).

With the vehicle stationary, scanning of the complete set of menus available is enabled with keys "Arrow up" and "Arrow down".

Breakdown

After acknowledging the error, the operator presses key OK on the steering wheel and the icon appears in the lower display layer.

Yellow color (light anomaly/breakdown):

Proceed with caution and contact a Service Network workshop as soon as possible.

Red color (serious anomaly/breakdown):

Park the vehicle on the roadside in a non-dangerous area or contact the Dealer or the 24 hour Client Center number in unusual hours or in a decentralized area.

Two menus are available:

- TRAVEL MENU
- DIALOG MENU


External mirrors and lights can also be adjusted.

When the key is inserted, the present electronic systems perform a test by activating the related lights, enabling the operator to check their efficiency (and learn of the existence of vehicle systems).

Aquila Trucks Centres

Display structure

Figure 137

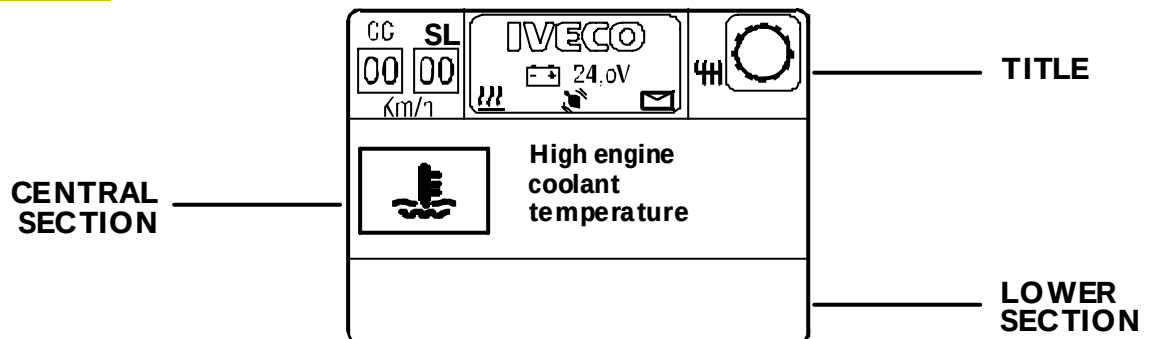

73662

TITLE

- Speed set by Cruise Control
- Speed Limiter set
- Supplementary heater enabled
- Battery voltage
- Radio/RDS information
- Telephone/ EMS message information
- Gears (downshifted/normal gears), suggested gears, auto/manual mode.

CENTRAL SECTION

- Engine oil pressure
- Engine oil level
- Consumption indicator
- Turbo pressure
- Engine oil temperature
- Reservoir, trailer, service air pressure
- Front / rear / trailer brake wear (vehicles with EBS)
- Light setting adjustment
- Mirror positioning
- Failure messages
- Load on the axles (OPT)

LOWER SECTION


- Alarms
- Active functions indications (intarder, etc.)

Aquila Trucks Centres

Optical status indicators on display

The corresponding icon appears at activation of the following functions or occurrence of the following anomalies.

Figure 138

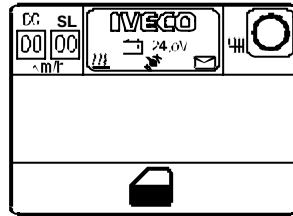

Meaning	Symbol	Colour	Meaning	Symbol	Colour
Pre-heating		yellow	ASR on	ASR	yellow
Cab unhooked Unhooked cab enable		red yellow	ASR off	ASR with a diagonal line through it	yellow
Door open		red	Reduced ABS operation		yellow
Low front axle brake air pressure		red	Automatic chains		yellow
Low rear axle brake air pressure		red	Trailer without EBS/ABS		yellow
Low trailer brake air pressure		red	Tipper body		yellow
Loading deck light (tractor only)		yellow	Instrument Cluster trouble	IC	red
Windscreen defroster		yellow	Low hydraulic pressure of third steering axle		red
Minimum engine coolant level		yellow	Low engine coolant level		red
High engine coolant temperature		yellow	Very high engine coolant temperature		red
Low windscreen washer reservoir level		yellow	Low fuel level / Ad Blue		yellow
Front axle brake wear		red	Rear axle brake wear		red
Rear second axle brake worn		red	Brake wear on a specific wheel		red
Power steering low fuel level		yellow	Air filter clogged		yellow
Oil filter clogged		yellow	Water in fuel filter		yellow
Fuel filter clogged		yellow	Engine oil level too high		yellow
Low engine oil level		red	High engine oil temperature		red
Low engine oil pressure		red	High engine oil temperature		red
Low parking brake air pressure		red	Brake wear on a specific wheel		yellow
Low trailer brake air pressure		red	Low/poor generator charge		yellow red

After recognizing the error, the operator must press OK on the steering wheel and the icon appears in the lower display section.


Aquila Trucks Centres

Meaning	Symbol	Colour	Meaning	Symbol	Colour
TCO ECU failure	TCO	red	BM ECU failure	BM	red
Parking brake failure		red	CM ECU failure	CM	red
Second importance light failure		yellow	Air conditioning system failure		red
BC ECU failure	BC	yellow/red	Additional heater failure		red
ECM failure	ECM	yellow/red	SWI ECU failure	SWI	red
EuroTronic failure		red	RFC ECU trouble/fault	RFC	yellow/red
EBS failure		red	First importance light failure		red
ABS failure		red	Right turn indicator fault		yellow
Intarder failure		red	Left turn indicator fault		yellow
FFC ECU trouble/fault	FFC	yellow/red	Central locking system failure		yellow
DDM ECU failure	DDM	red	EAC defect	EAC	yellow
Distance alarm signalling		yellow	EAC failure	EAC	red
ACC sensor defect		red	Trailer EBS failure		red
ACC sensor dirty		red	Reduced power and engine		yellow
ARB enabled		yellow	Rotating headlights		yellow
TPM steering axle low tire pressure		yellow	VCM failure	VCM	yellow/red
TPM engine axle low tire pressure		yellow	SCR failure	SCR	yellow/red
Trailer: attention thresholds reached		yellow	ASR / ESP disabled		yellow
Trailer: anti-theft enabled		yellow	ESP enabled		yellow
Airbag default/defect		red	Power steering failure		red
EM defect	EM	yellow	Power steering liquid low pressure		yellow
EM failure	EM	red			
CDM ECU failure	CDM	red			

Aquila Trucks Centres

Display instruments

Figure 139

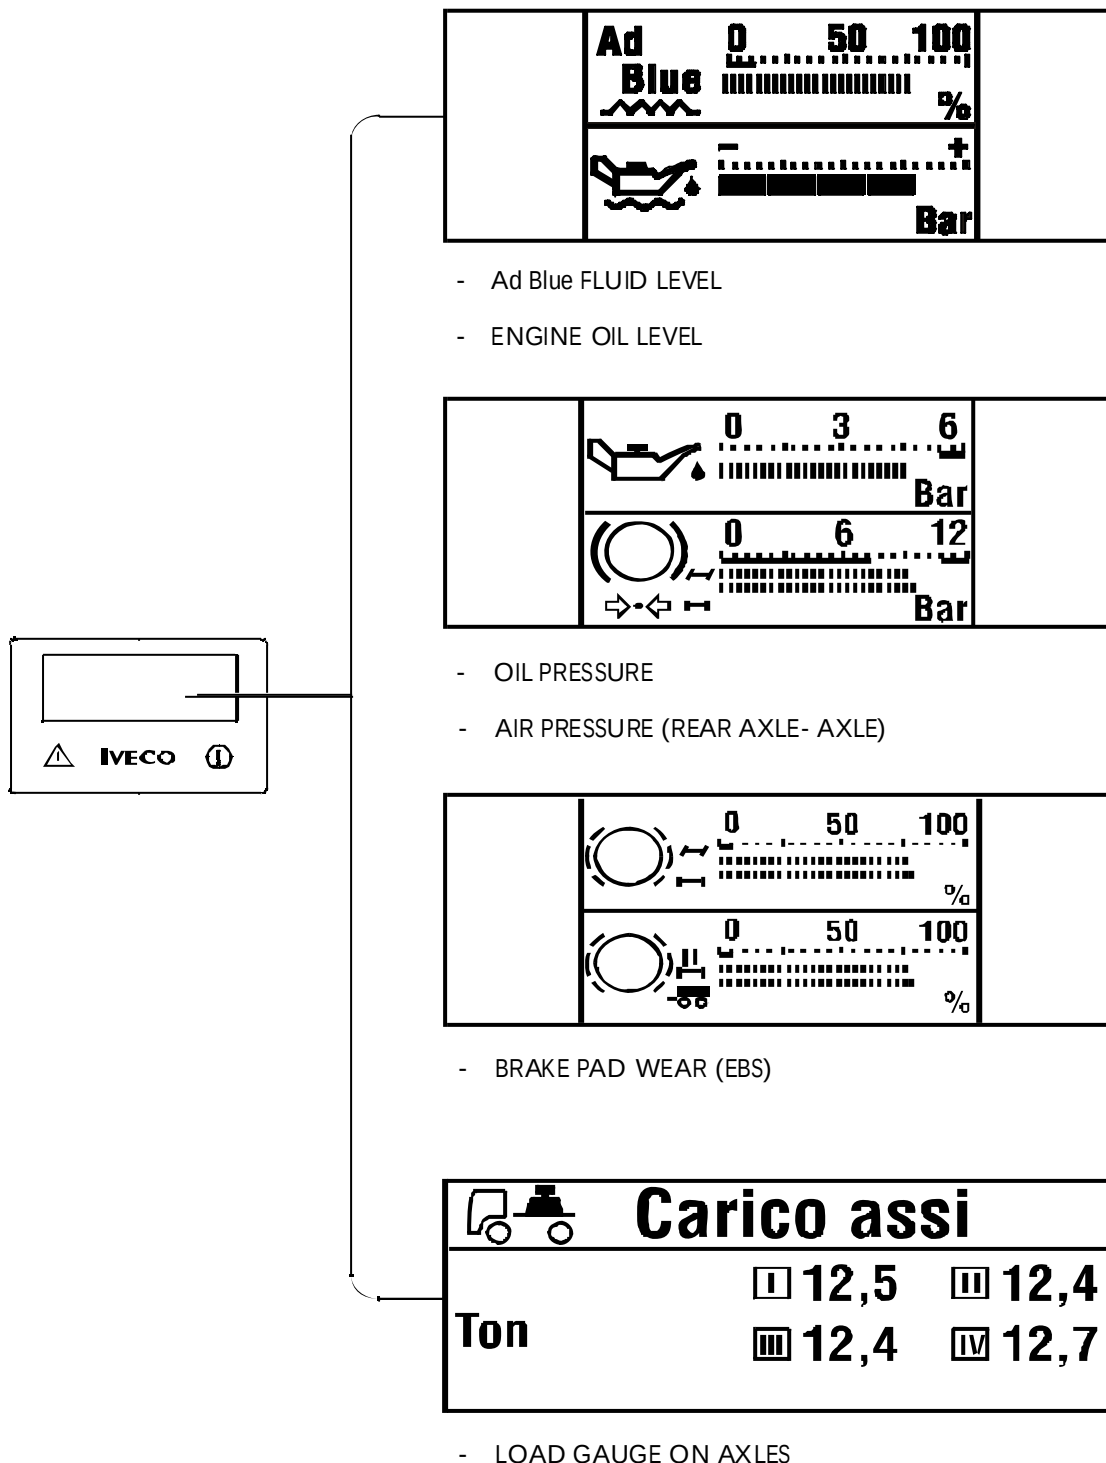

112594

Aquila Trucks Centres

BODY CONTROLLER (IBC3)

The Body Controller is the central unit which represents the heart of electrical system and together with MET central unit make up Easy Mux system.

The two central units communicate between each other via CAN line (BCB).

Instead through the CAN line (VDB), the IBC3 communicates with the vehicle different electronic systems.

Body controller inputs:

- Coolant low level contact
- Windscreen wiper liquid low level contact
- Alternator warning lamp
- Key 15
- Additional heater
- Brake system air low pressure sensor
- Emergency switch
- Door unlocking pushbutton
- Rear fog lights switch
- External lights switch
- Headlamp attitude rectifier
- Sunroof unlock/lock control
- Unfastened seat belts
- TGC unlock/lock
- Rear cross differential locking control
- Front differential locking control
- Longitudinal differential locking control
- Trailer handle pressure gauge
- Heater immediate engagement control

Signals received via CAN network:

- Gear in
- Trailer brake signal

Body controller outputs:

- Controls illumination
- Windscreen washer electric pump
- Lh / rh clearance headlamp
- Steps light
- Internal roof lamp
- Sun roof opening / closing relay
- Horns power supply relays
- Lighter
- Windscreen electric defroster power supply
- Remote control switch for inserting loads with key in
- Fitter outputs
- TGC (Current General Remote Control Switch) / CGE (Emergency General Control) /MBS (Current General Control)
- Central door lock motor control
- Additional main beam headlight control
- Additional heater engagement control

Aquila Trucks Centres

IBC3 displays following information on Instrument Cluster:

- Fuel level
- Oil level
- External air temperature
- Brake circuit air pressure

IBC3 controls following devices:

Lights (parking lights, dipped headlights, additional lights, front fog lights, rear fog lights, blinkers, stop lights, reverse lights, steps lights, cab lights, high roof cab lights, headlights attitude)

- Central locking
- Air-conditioner
- Additional heater
- Air drier

Limp Home:


It identifies central unit status in case of micro processor failure; in this condition, following functions are ensured:

- Power supply (battery voltage, key 30, 15 and 15/1) from central unit to other cab loads
- Switching off of disabled TGC
- Switching on of windscreen wiper at minimum speed (or keeping previous control)
- Switching on steps lights
- Switching on clearance lights

Aquila Trucks Centres

BODY CONTROLLER


Figure 140

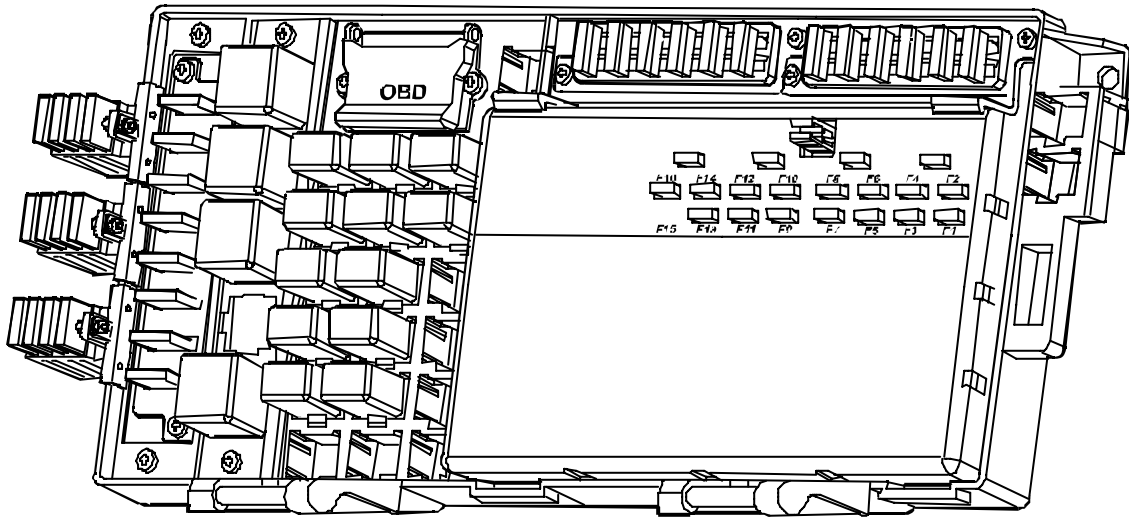

112595

Linking connectors

Figure 141

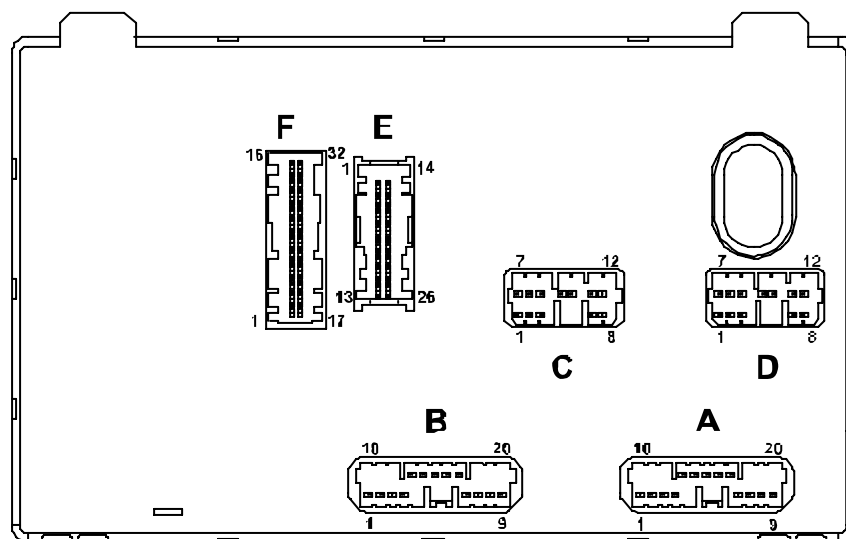

108903

Aquila Trucks Centres

Body controller connector "A"

Pin	Description	Cable colour code
1	-	-
2	Positive from TGC (+30)	7905
3	-	-
4	-	-
5	-	-
6	Positive +30 for VCM / SWI	7906
7	Direct battery positive (+batt)	7768
8	Positive from service relay (+15/1)	8887
9	-	-
10	-	-
11	-	-
12	-	-
13	-	-
14	Positive from TGC (+30)	7905
15	Direct battery positive (+Bat) for DTCO (Tachograph) / central locking	7768
16	Direct battery positive (+batt) for BM (Bed Module)	7906
17	-	-
18	-	-
19	-	-
20	-	-

Body controller connector "B"

Ref.	Description	Cable colour code
1	Positive +15 for air conditioner / body builders (ST14A)	8871
2	Positive from service relay (+15/1)	8887
3	Positive +30 for cigar lighter / diagnostic interface	7772
4	Positive +30 for body builders (connector 72072C)	7796
5	-	-
6	Positive +30 for voltage reducer	7772
7	Positive +15 from ignition key	8887
8	Positive from TGC (+30)	7905
9	Positive +30 for body builders (ST14A / connector 72072D)	7772
10	-	-
11	-	-
12	-	-
13	-	-
14	Positive from TGC (+30)	7905
15	-	-
16	Positive +15 for brake system drier heater coil	8840
17	Positive +30 for horn relay	1116
18	-	-
19	-	-
20	-	-

Aquila Trucks Centres

Body controller connector "C" (grey)

Ref.	Description	Cable colour code
1	Power supply for brake system air pressure sending unit	5560
2	Positive +15 for alternator	8876
3	Air pressure sending unit signal (front brakes)	5562
4	Air pressure sending unit signal (rear brakes)	5561
5	Windscreen wiper motor fixed stop (31B)	8873
6	-	-
7	Positive from TGC (+30)	7905
8	Earth for brake system air pressure sending unit	0560
9	Front marker light power supply	3339
10	Windscreen wiper motor high speed power supply (53B)	8881
11	Windscreen washer pump power supply	8886
12	Windscreen wiper motor low speed power supply (53)	8882

Body controller connector "D" (blue)

Ref.	Description	Cable colour code
1	Earth from windscreen washer fluid low level sensor	5521
2	-	-
3	Ground	0000
4	Charge signal from alternator	7009
5	Signal from external temperature sensor	7573
6	Earth from radiator water low level sensor	5527
7	CAN H line (BCB)	White
8	CAN L line (BCB)	Green
9	CAN L line (VDB)	White
10	CAN H line (VDB)	Green
11	External temperature sensor earth	0550
12	Control unit IBC3 K line (diagnostic connector pin 8)	2995

Aquila Trucks Centres

Body controller connector "E" (blue)

Ref.	Description	Cable colour code
1	Ground from left door button	0003
2	Ground from right door button	0003
3	Ground from parking brake engaged switch	6662
4	Hazard lights signal for body builders (ST14B)	1113
5	-	-
6	-	-
7	-	-
8	Positive + 15 for cab tilt enablement switch	8871
9	Positive for opening TGC (TGC off)	8045
10	Positive +15 for ECM / VCM	8051
11	-	-
12	-	-
13	Positif +15 pour Cluster / DTCO / MET / Eurotronic 2	8871/8802
14	Engine running signal for air conditioner / body builders (ST14A) Signal moteur en route pour climatiseur / dispositifs d'équipement (ST 14A)	7778
15	Vehicle parked signal for body builders (ST14A)	5515
16	Reversing signal for body builders (ST14A)	2268
17	-	-
18	Positive for enablement of supplementary headlight activation relay	2229
19	Positive for sunroof closure control relay	7011
20	Positive for sunroof opening control relay	7010
21	Positive for TGC closure (TGC On)	8035
22	Positive for headlamp washer pump relay	8820
23	-	-
24	Positive for fifth wheel lighting switch / side lights for body builders (ST14B)	3333
25	Positive for interior courtesy light	4440
26	Positive for step light	4445

Body controller connector "F"


Ref.	Description	Cable colour code
1	Positive +30 for Cluster	7906
2	Signal from head light alignment corrector control switch	9936
3	Positive for independent water heating pump enablement	7786
4	Ground from radiator low level sensor (for warning light)	5520
5	Ground from supplementary headlight switch	2229
6	-	-
7	Ground from longitudinal differential lock switch	0903
8	Ground from hatch opening control switch	0970
9	Ground from supplementary heater activation switch	0501
10	-	-
11	Ground from TGC activation switch (TGC On)	0945
12	Ground from exterior lighting switch (exterior light)	3333
13	Ground from rear fog lamp switch	2284
14	-	-
15	-	-
16	-	-
17	Positive for symbol lighting	4442
18	Head lamp alignment corrector control switch power supply	8871
19	-	-
20	Ground from trailer brake hand wheel switch (brake light)	0927
21	-	-
22	Ground from rear transverse differential lock switch	0904
23	Ground from front differential lock switch	0902
24	Ground from hatch opening control switch	0971
25	Control signal for central locking - locking	0064
26	Ground from hazard light switch	1113
27	Ground from TGC off switch (TGC Off)	0946
28	Ground from exterior lighting switch (low-high beams)	2237
29	Ground from fog lamp switch	2228
30	-	-
31	Ground from courtesy light on switch	0941
32	Control signal for central locking - locking	0065

Aquila Trucks Centres

CHASSIS ELECTRONIC MODULE (M.E.T.)

MET central unit is placed on the chassis, actuates the controls and collects signals from sensors installed outside the cab, and communicates with ICB3 through CAN BCB network.

Figure 142

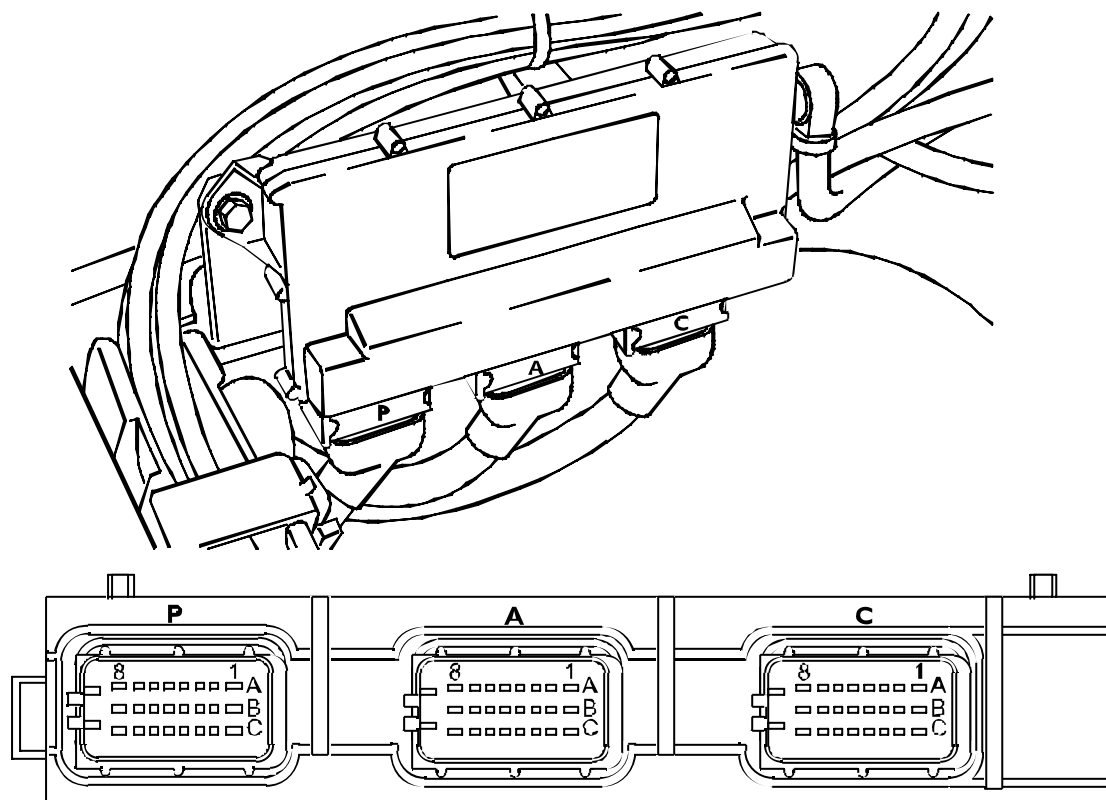

It supplies locked positive (+15) to UDS central unit (Denox 2), trailer, fitters and checks vehicle illumination. It supplies other loads too, such as air-conditioner compressor and fuel filter and pre-filter heating.

Distributes key 15 to:

- UDS (DENOX 2)
- Trailer
- Fitters

Powers the following lights:

- Parking lights
- Parking lights for fitters
- Marker
- Brake lights
- Fog lights and rear fog lights
- Direction indicators
- Reverse gear

Powers other loads:

- The conditioner compressor
- Fuel filter and prefilter heating
- ECAD solenoid valves
- Servoshift solenoid valve

Acquires the following signals:

- Reverse gear engaged
- Front differential locked signals
- Rear differential locked signals
- Longitudinal differential lock signals

Aquila Trucks Centres

- Underdrive gears in
- Engaging 5th and 6th gears
- Suspensions air low pressure
- Hydraulic guide liquid low pressure
- Brake liquid low pressure
- Air-conditioning system high or low pressure
- Air-conditioning system high or low pressure
- Front axle brake pads wear status
- Rear axle brake pads wear status
- Front parking brake
- Front brakes converter cylinder end switch
- Rear brakes converter cylinder end switch
- Side PTO in
- Rear or total PTO in
- Clogged air filter
- Clogged air filter
- Fuel level
- Engine oil level

Pin - Out

Pin	Description	Cable colour code
A-1	Reversing light positive +30	2226
A-2	Positive +30 for trailer brake lights	1179
A-3	Positive +30 for left brake light	1177
A-4	Positive +30 for right brake light	1172
A-5	Positive +30 for number plate light	3307
A-6	Positive +30 for right rear side lights	3315
A-7	Positive +30 for left rear side lights	3330
A-8	Positive +30 for right trailer side lights	3339
B-1	Positive +30 for trailer rear fog lamp	2283
B-2	Positive +30 for rear fog lamps	2283
B-3	Positive +30 for right trailer direction indicators	1185
B-4	Ground from transverse differential lock engaged indicator switch (1st rear axle)	0040
B-5	Ground from transverse differential lock engaged indicator switch (2nd rear axle)	0041
B-6	Ground from longitudinal differential lock engaged indicator switch	6603
B-7	Positive +30 for rear marker lights	3306
B-8	Positive +30 for left rear side lights	3305
C-1	Positive +15 for trailer	8075
C-2	Positive +30 for left rear direction indicators	1120
C-3	Positive +30 for right rear direction indicators	1125
C-4	Positive +30 for left trailer direction indicators	1180
C-5	Ground from ECAS air system low pressure switch / Earth from front longitudinal differential lock indicator switch (8x8)	6401/6643
C-6	Ground from rear brake wear sensor (1st rear axle)	6667
C-7	Ground from rear brake wear sensor (2nd rear axle)	6667
C-8	-	-

Aquila Trucks Centres

A connector

Pin	Description	Cable colour code
A-1	Positive +30 for left high beam	2219
A-2	Positive +30 for right low beam	2223
A-3	Positive +30 for right high beam	2221
A-4	Positive +30 for left low beam	2231
A-5	Signal from water in fuel filter sensor	5530
A-6	Ground from front wheel block wear sensor (2nd axle)	6664
A-7	Ground from front transverse lock engaged signal switch (1st axle)	6659
A-8	Positive +30 for diesel heater coil	7733
B-1	Positive +30 for diesel pre-filter heater coil	7753
B-2	Head lamp alignment corrector control	9936
B-3	Ground from switch for circuit II power steering oil flow indicator	6632
B-4	Ground from power steering fluid low level sensor	5525
B-5	Ground from front transverse lock engaged indicator switch (2nd axle)	6659
B-6	Ground from air filter clog switch	6663
B-7	Ground from front wheel block wear sensor (1st axle)	6664
B-8	Positive +30 for fog lights	2228
C-1	-	-
C-2	Positive +30 for front side lights	3339
C-3	Positive +15 from IBC3	8871
C-4	CAN L line (BCB)	Green
C-5	CAN H line (BCB)	White
C-6	Positive +30 for front / right side direction indicators	1123
C-7	Positive +30 for front / left side direction indicators	1129
C-8	Positive +15 for water in fuel filter presence sensor	8879

C connector


Pin	Description	Cable colour code
A-1	Positive +30 for ECAD regeneration solenoid (air system)	9043
A-2	Positive +30 for ECAD discharge solenoid (air system)	9043
A-3	Positive +30 for rear transverse differential lock solenoid	9325
A-4	Positive +30 for longitudinal differential lock solenoid	9323
A-5	Positive +30 for front transverse differential lock solenoid	9063
A-6	Ground from switch in front power steering lock valve	6631
A-7	Ground from side PTO engaged indicator switch (without EM)	6132
A-8	Ground from low hydraulic circuit pressure indicator with 3rd steering axle	0491
B-1	Ground from trailer brake circuit indicator switch	6689
B-2	Ground from distributor crawler gear engagement indicator switch (4x4)	9976
B-3	Engine oil level sending unit signal	5505
B-5	Fuel level sending unit	5557
B-6	Ground from total/rear PTO engaged indicator switch (without EM)	6131
B-7	Ground from switch in front power steering switch valve	6631
B-8	Positive +15 for UDS control unit (SCR system)	8540
C-1	Ground	0000
C-2	Engine oil level sending unit earth	5506
C-3	Fuel level sending unit	5555
C-4	Ground from four wheel drive engagement indicator switch	6602
C-5	Ground from reverse engagement indicator switch	2268
C-6	Ground from crawler gear engagement indicator switch	9992
C-7	Ground from fuel filter blocked indicator switch	5531
C-8	-	-

Aquila Trucks Centres


D.D.M. / P.D.M.

The D.D.M. is located inside the operator door; the P.D.M. inside the passenger door.

Figure 142/1

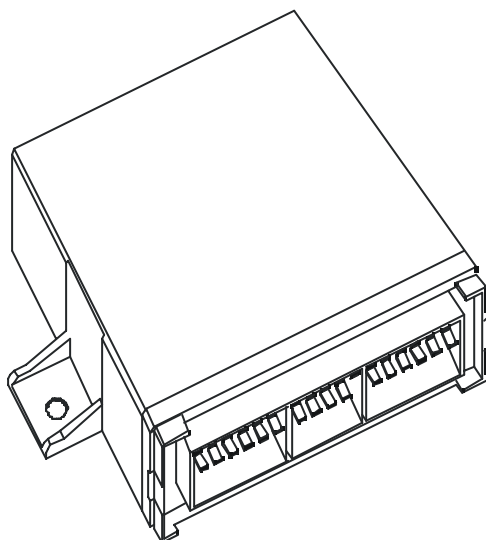

50239

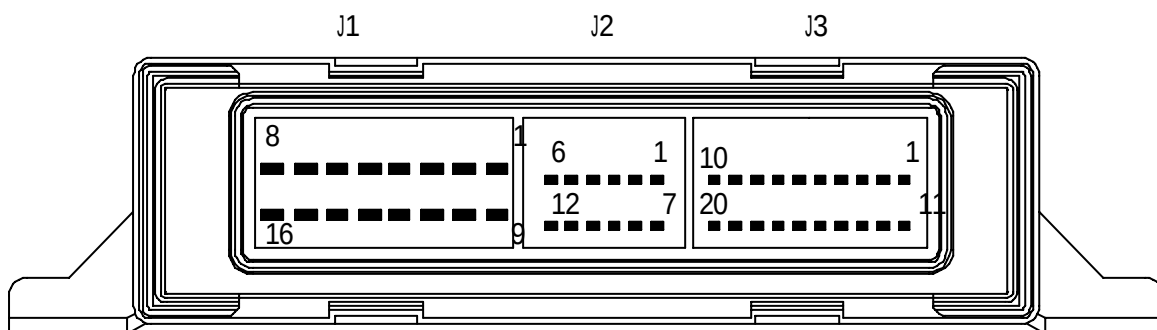

49723


Inputs	Outputs
Rearview mirror heating	Rearview mirror heating
Rearview mirror adjustment	Rearview mirror adjustment
Window lifter	Window lifter
Centralized lock	Centralized lock

The only difference between D.D.M. and P.D.M. is that the P.D.M. pin J2/10 is connected by means of a jumper with pin J1/8 towards the ground for passenger module recognition.

Aquila Trucks Centres

D.D.M. / P.D.M.

Figure 142/2

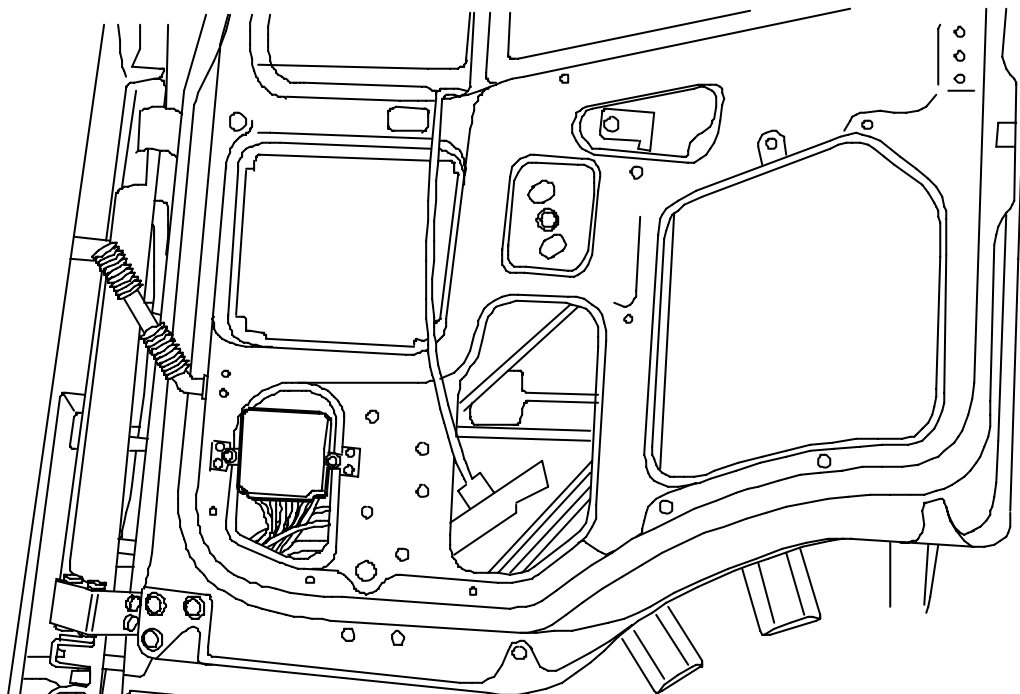

49838

These control unit manage all the functions appertaining to the two vehicle doors, namely:

- mirror heating
- mirror adjustment
- window lifter
- centralized lock

They are located inside the vehicle door and removal is as follows:

1. remove the door lining;
2. disassemble the loudspeaker tray by removing the three fastening screws;
3. take DM off the tray by removing the two fastening screws
4. disconnect the three electric connection adapters.

Disassembling operations are the same for both doors.

Aquila Trucks Centres

P.D.M.

CONNECTOR J1		
Pin	Cable	Function
1	-	Free
2	-	Free
3	-	Free
4	9965	Centralized lock motor control (CDL)
5	9964	Centralized lock motor control (CDL)
6	8863	Window lifter motor control (opening)
7	8865	Window lifter motor control (closing)
8	0000	Mass – Bridge with (J2-I0) for module recognition
9	-	Free
10	-	Free
11	0000	Negative for centralized door lock release push button
12	0000	Negative for main rearview mirror heating
13	0000	Negative for wide angle rearview mirror heating
14	-	Free
15	2990	K line for diagnosis
16	7990	Center power positive
CONNECTOR J2		
Pin	Cable	Function
1	Ws/Bi	CAN H line (BCB)
2	-	Approach rearview mirror control (vertical)
3	-	Approach rearview mirror control (horizontal)
4	8851	Wide angle rearview mirror control (return)
5	8852	Wide angle rearview mirror control (vertical)
6	8857	Main rearview mirror control (return)
7	Gv/Ve	CAN L line (BCB)
8	8853	Wide angle rearview mirror control (horizontal)
9	-	Approach rearview mirror control (return)
10	0000	Mass – Bridge with (J1-8) for passenger side ECU recognition
11	8859	Main rearview mirror control (horizontal)
12	8858	Main rearview mirror control (vertical)
CONNECTOR J3		
Pin	Cable	Function
1	0962	Negative from passenger side glass lifter push button
2 ÷ 9	-	Free
10	4442	Positive for passenger side glass lifter push button light
11	0961	Negative from passenger side glass lower push button
12	0960	Negative for passenger side glass control push button + lighting
13 ÷ 20	-	Free

Aquila Trucks Centres

D.D.M.


CONNECTOR J1		
Pin	Cable	Function
1	-	Free
2	-	Free
3	-	Free
4	9965	Centralized door lock motor control
5	9964	Centralized door lock motor control
6	8863	Window lifter motor control
7	8865	Window lifter motor control
8	0000	Control unit earth
9	-	Free
10	-	Free
11	0000	Negative for Centralized door lock
12	0000	Negative for main rearview mirror heating
13	0000	Negative for wide angle rear view mirror heating
14	-	Free
15	2991	K line for diagnosis
16	7991	Positive for center power
CONNETOR J2		
Pin	Cable	Function
1	Ws/Bi	CAN H line (BCB)
2	-	Free
3	-	Free
4	-	Free
5	-	Free
6	8806	Main rearview mirror control (return)
7	Gv/Ve	CAN L line (BCB)
8	8843	Free
9	-	Free
10	-	Free
11	8809	Main rearview mirror control (horizontal)
12	8808	Main rearview mirror control (vertical)
CONNECTOR J3		
Pin	Cable	Function
1	0962	Negative from passenger side window lifter push button
2	0966	Negative from passenger side window lower push button
3	0967	Negative from operator side window lifter push button
4	-	Free
5	-	Free
6	0953	Negative from right rearview mirror control push button (movement to the right)
7	0954	Negative from left rearview mirror control push button (movement to the left)
8	0951	Negative from right rearview mirror control push button (movement downwards)
9	0952	Negative from left rearview mirror control push button (movement upwards)
10	4442	Positive for passenger/operator side window push button lighting
11	0961	Negative from passenger side window lower push button
12	0960	Negative for passenger side window control push button + lighting
13	0951	Negative for operator side window control push button + lighting
14	-	Free
15	0950	Negative for rearview mirror control joystick push buttons
16	0600	Negative for rearview mirror control joystick push button lighting
17	-	Free
18	-	Free
19	4442	Positive for rearview mirror control joystick push button lighting
20	-	Free

Aquila Trucks Centres

S.W.I. (Steering wheel / steervator interface)


The function of this electronic center located on the steering column is to group together all controls from the two steervator levers and the steering wheel. It is connected to the vehicle electronic system via a CAN line.

Figure 143

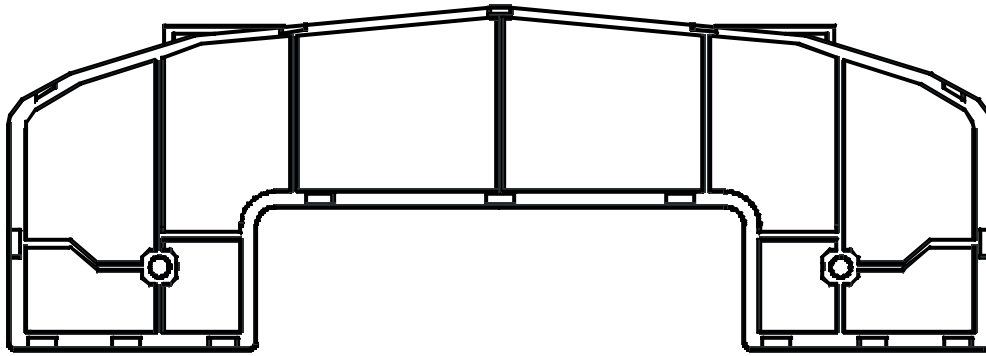

UPPER VIEW

Figure 144

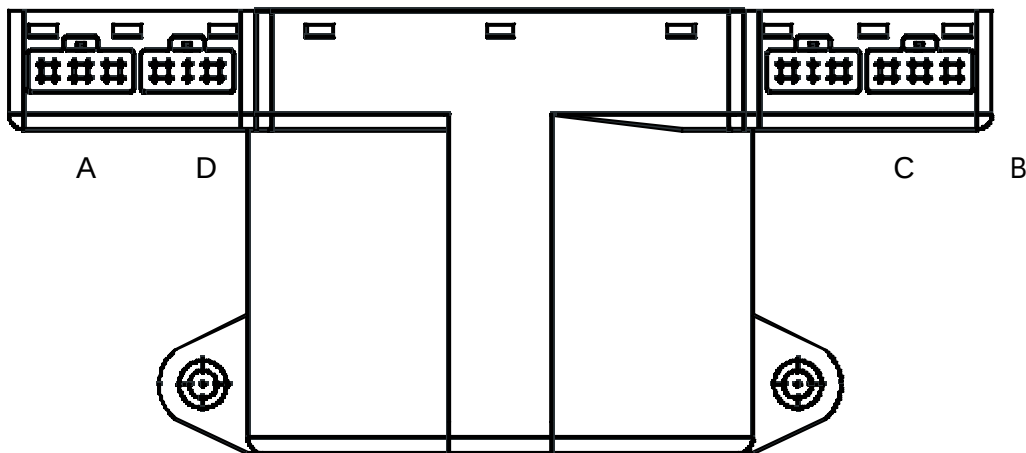


FRONT VIEW

50240

Aquila Trucks Centres

SWI functions

Figure 145

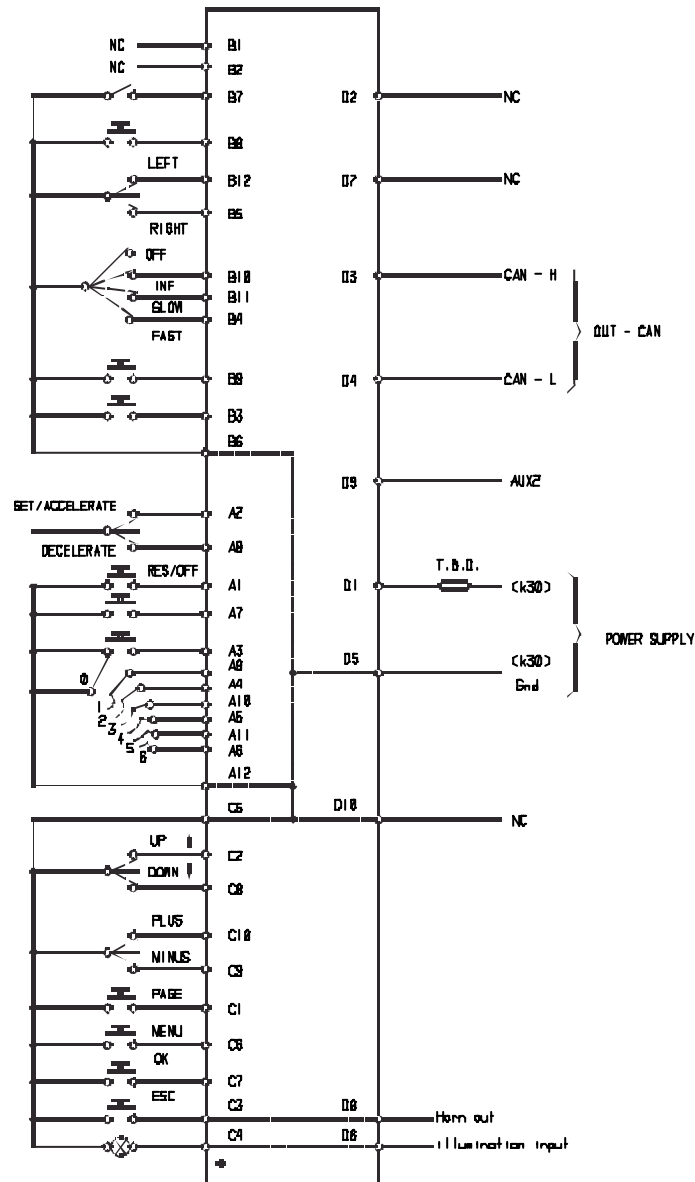


108924

Inputs	Outputs
Key switch	Messages on CAN line
Cruise Control keys	
INTARDER lever	
Change gear	
Flood/dipped lights	
Direction indicators	
Windshield wiper	
Controls on steering wheel	
Control lighting	


Aquila Trucks Centres

Connectors

Figure 146

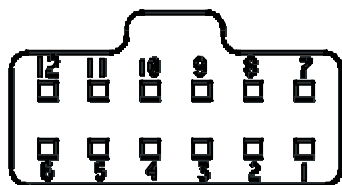

A / B

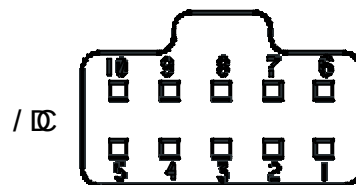

/ D

50240

A - Right lever		B - Left lever		C - Steering wheel		D	
1	Cruise Control (Resume)	1	-	1	Display page selection	1	+ 30
2	Cruise Control (Set/Acc.)	2	-	2	Display cursor movement (high)	2	-
3	Change gear (down)	3	Wiper electro pump controls	3	Horn	3	CAN H
4	Intarder (pos.2)	4	Wiper (top speed)	4	Lever lighting (output)	4	CAN L
5	Intarder (pos.4)	5	Direction indicators (right)	5	Earth	5	Earth
6	Intarder (pos.6)	6	Earth	6	Menu selection / confirmation	6	Lever lighting (input)
7	Change gear (up)	7	Flood lights on	7	Main display return (instruments)	7	-
8	Cruise Control (deceler.)	8	Light flashes	8	Display cursor movement (low)	8	Horn (output)
9	Intarder (pos.1)	9	Wiper (one stroke)	9	Control (-)	9	AUX 2
10	Intarder (pos.3)	10	Wiper (intermittent)	10	Control (+)	10	Earth
11	Intarder (pos.5)	11	Wiper (low speed)				
12	Ground	12	Direction indicators (left)				


Aquila Trucks Centres

SPIRALED CONTACT


Located below the steering wheel.

Its function is to collect all controls present on the steering wheel and send them to the SWI center.

Figure 147

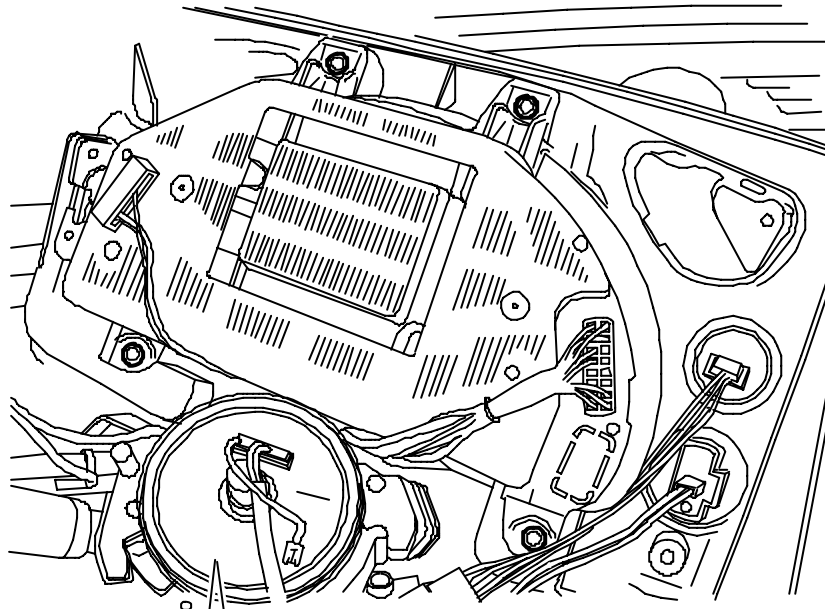


49837

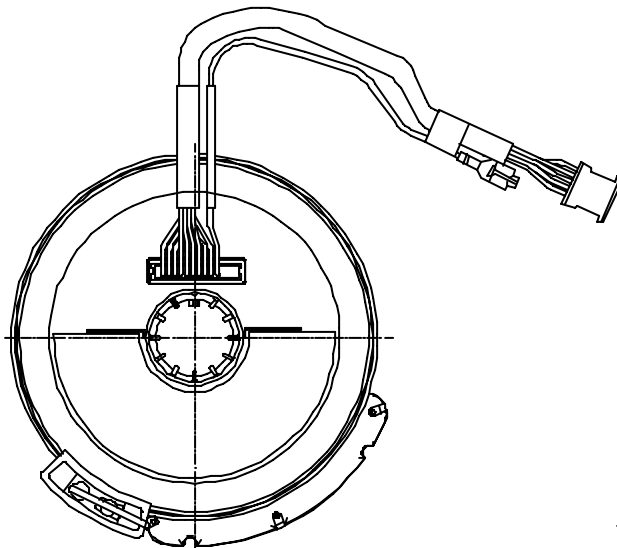

49724

ROTOR UPPER VIEW

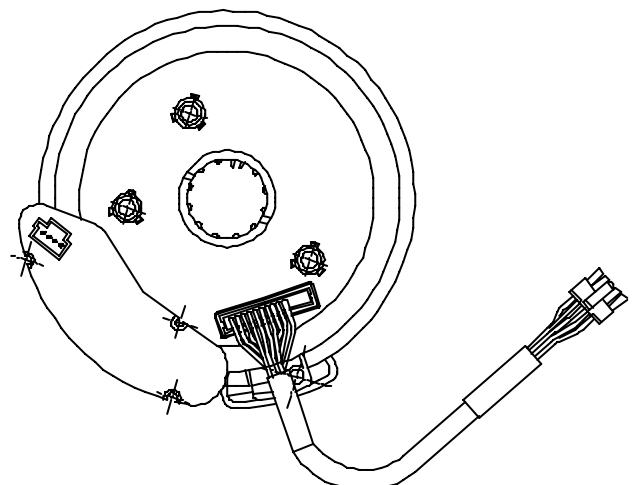


49725

STATOR LOWER VIEW

Aquila Trucks Centres

STEERING COLUMN (COMPONENT LOCATION)

Figure 148

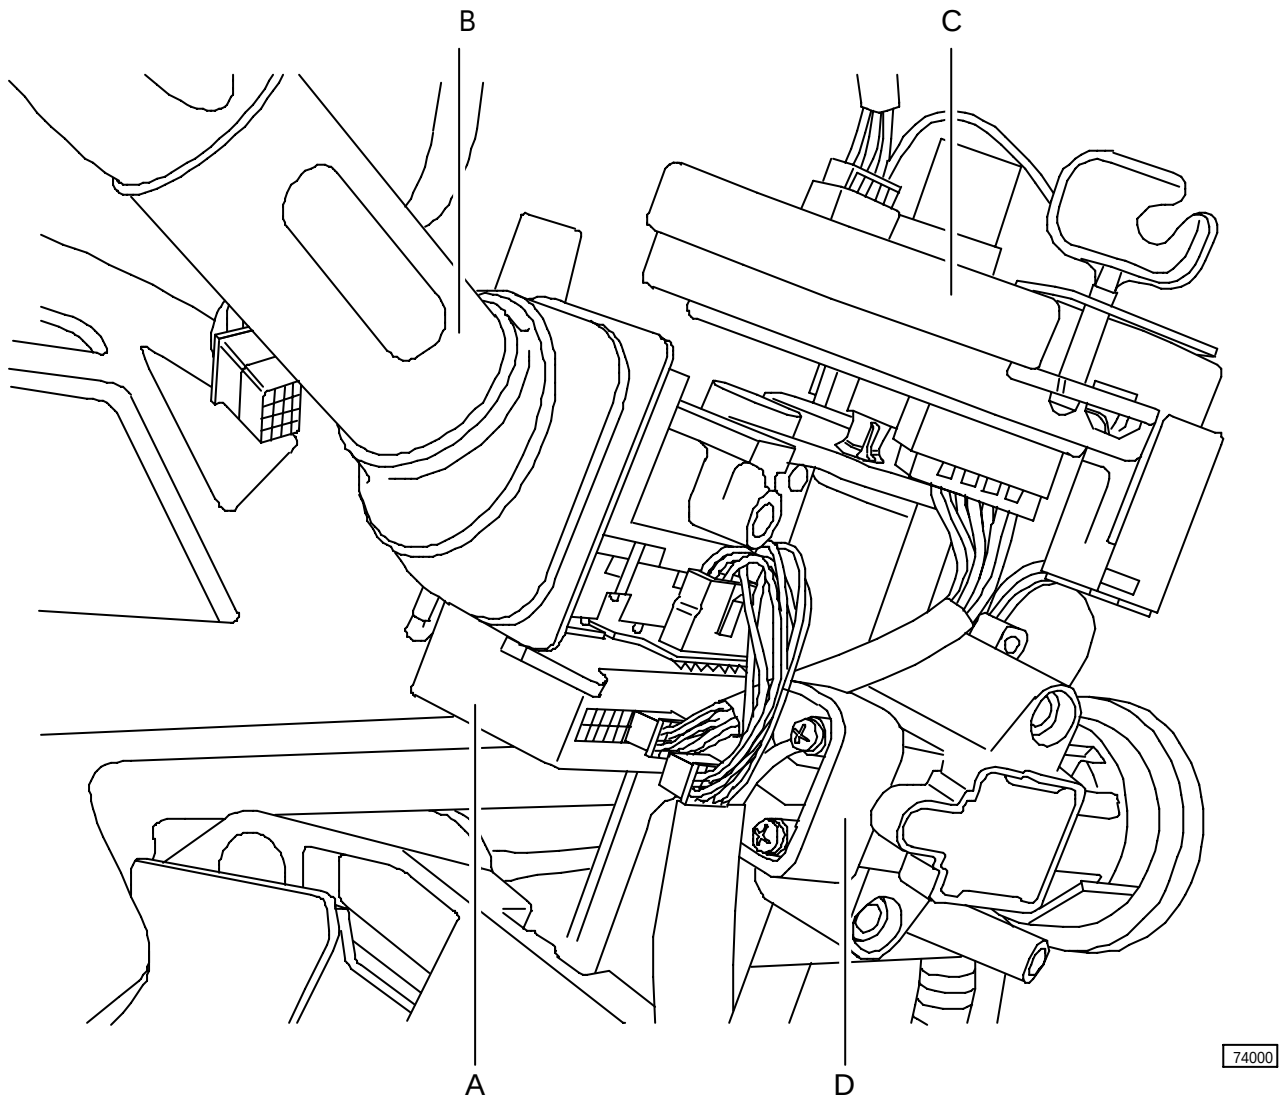


74000

A. S.W.I center. - B. Steervator - C. Spiraled contact - D. Start block

NOTE Follow the procedures described in the following pages in case of spiraled contact disassembly.

Aquila Trucks Centres

Figure 149

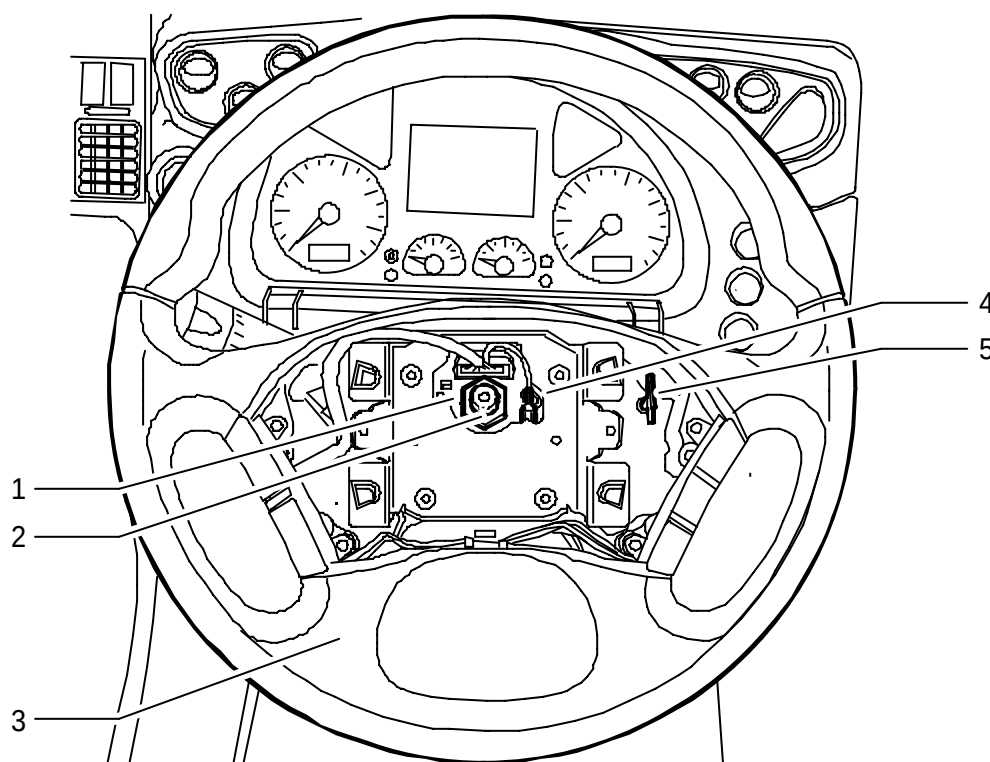

72850


Carefully follow the procedures described hereunder to replace the spiraled contact, to avoid damaging the spiraled cable contained in its box when disassembling and aligning the steering wheel incorrectly.

Disconnect mass cable connection (4).

Remove nut (1) and mark steering wheel assembly position on shaft (2) and remove the steering wheel (3).

Aquila Trucks Centres

Figure 150

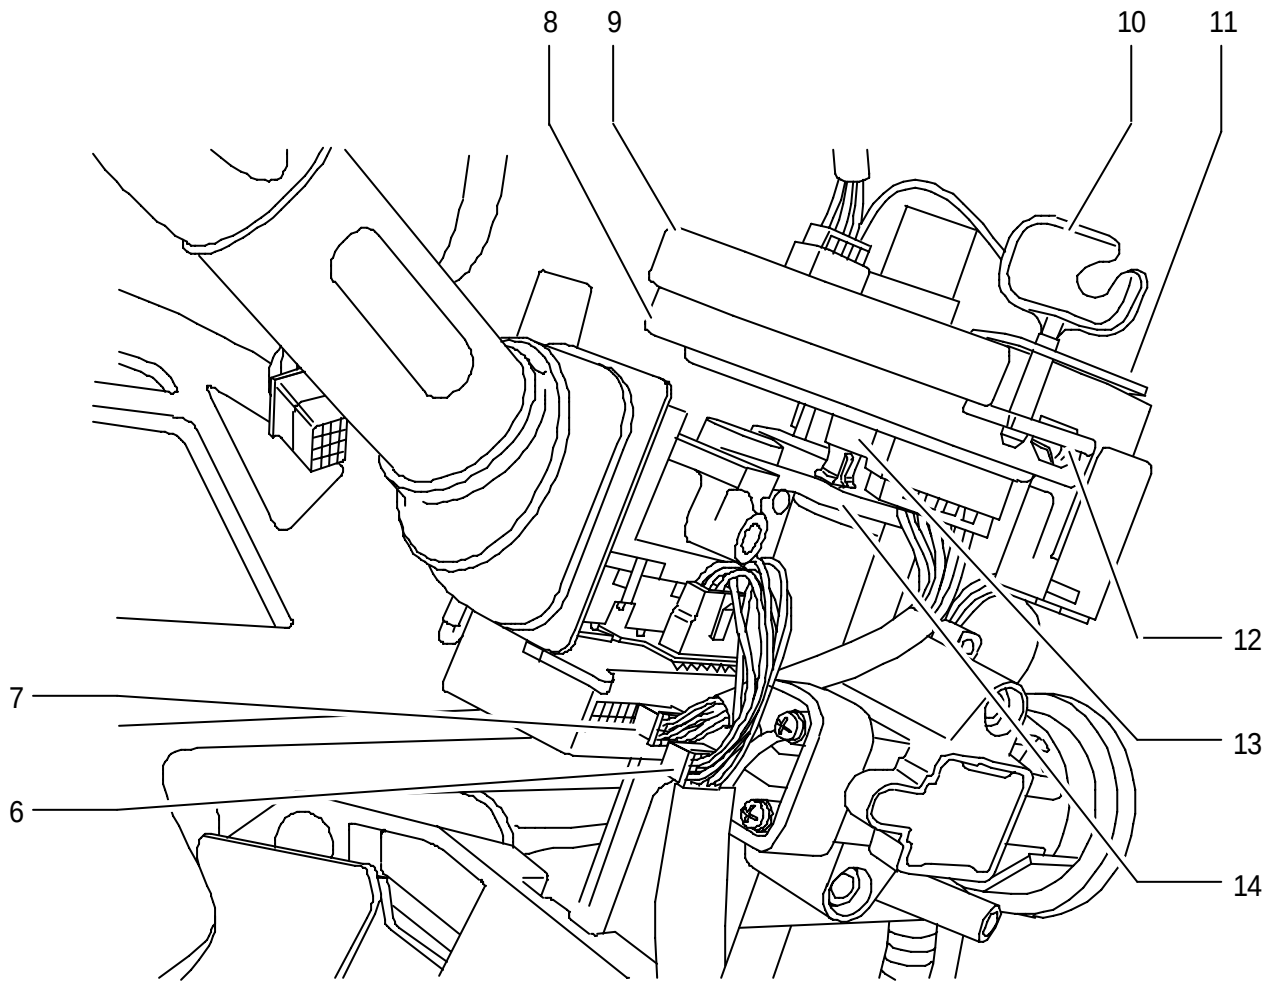

74000

Disconnect electrical connections (6 and 7) from the S.W.I.


Secure contact rotor (9) to its container by inserting key (10) into slots (11 and 12), to prevent rotor (9) and stator (8) from rotating during disassembly.

Keep this situation until assembly. In the lack of a key, use an adequate size nut and bolt.

Carefully raise the contact so elastic retainer pins (13) are removed from support (14). Store it carefully.

Aquila Trucks Centres

Figure 151

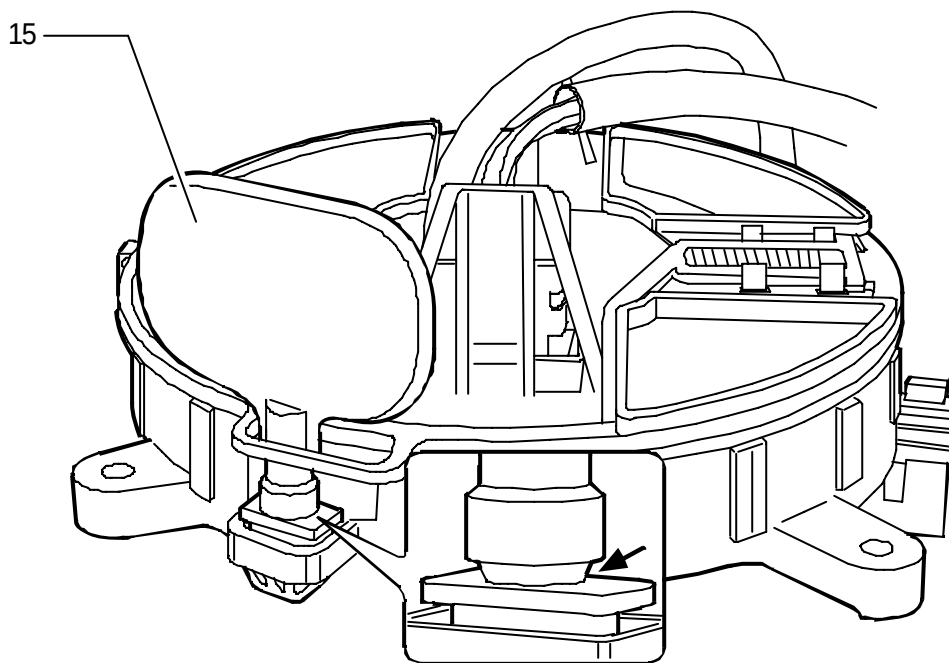

72857

Invert the sequence of operations described above for reassembly.


The spiraled contact is supplied spare with its stop key (15) assembled as shown in the figure. After assembly on the steering wheel control support, rotate the key to cause breakage at the point indicated by the arrow and return it to steering wheel seat (5).

Aquila Trucks Centres

B.M. (BED MODULE)

Positioned at the cab rear

Figure 152

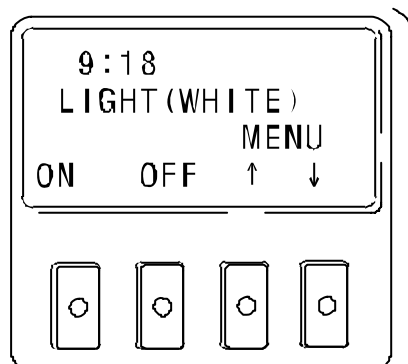

10697

The B.C. identifies its presence but CANNOT be diagnosed.

Its functions are as follows

(variable configuration according to vehicle accessories):

- Time in hours and minutes
- Switching on/off of cab interior lights (selection of white/nighttime lights).
- Opening/closing doors.
- Opening/closing electric windows.
- Opening/closing electric hatch.
- Lowering/raising sun blinds.
- Switching radio on/off
- Radio volume adjustment
- Radio tuning
- Wake up function.
- Switching additional heater on/off.
- Temperature adjustment (only with additional heater switched on). (Automatic).
- Adjustment of heater on time (9 hours max.)


NOTE Press the switch on the instrument panel before adjusting heater temperature.

Aquila Trucks Centres

E.B.M. (EASY BED MODULE)

E.B.M. (Easy Bed Module) substitutes the previous (B.M.) roughly carrying out same functions. It has three keys and a display with icons for the various functions and the visualisation of the time. The B.M.E. connector is the same as the B.M. and the electrical connections are unchanged.

Figure 153

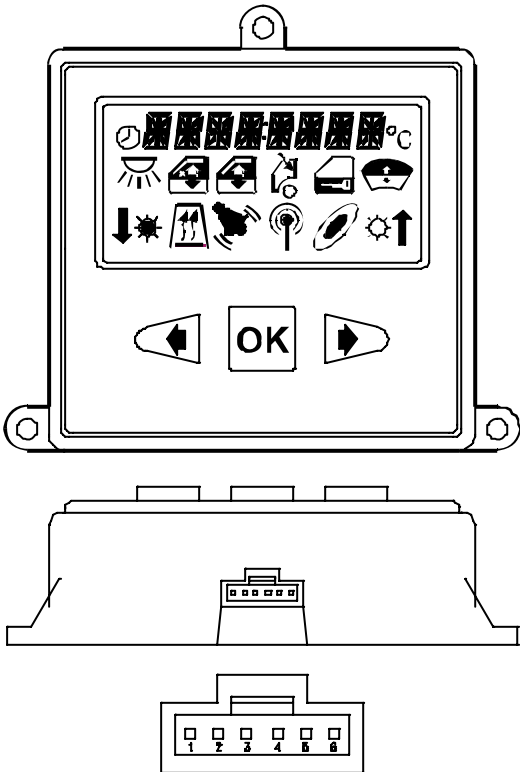

113411

Technical features

- Supplier	ITALAMEC
- Nominal Voltage	24V
- Working Voltage	18V ÷ 32V
- Working Temperature	-30 °C ÷ +60°C
- Absorption - stand by	<200mA
- Absorption - normal display mode	<200mA
- Absorption - sleep mode	<3mA
- Data transmission speed (CAN line)	62,500 (BIT/SEC)

Pin - out


Pin	Description	Cable code colour
1	Direct Positive battery (+Bat)	7906
2	Ground	0000
3	-	-
4	CAN L line (BCB)	Green
5	CAN H line (BCB)	White
6	-	-

Aquila Trucks Centres

E.B.M. Functions

The functions which are carried out by E.B.M. vary according to the configuration of the accessories expected on the vehicle.

Figure 154

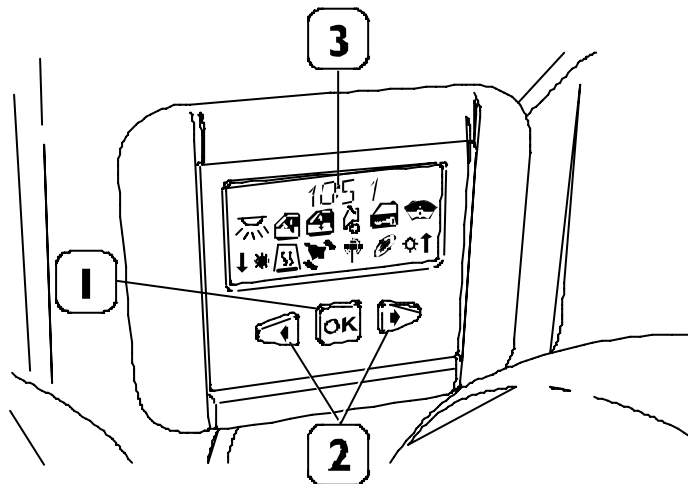

113412

1. Confirmation key - 2. Key for the selection of the desired function - 3. Clock

Function	Symbol	Availability
Indication of hour and minutes		Always
Switching on / off of internal cabin lights (white lights)		Always
Switching on / off of internal cabin lights (red lights)		Only for vehicles with medium-high roofs
Opening/closure doors		Optional
Opening/closure electric windows		Optional
Opening/closure electric trapdoor		Optional
Lowering /raising of sun blinds		Optional
Switching on / off radio Regulation of radio volume Radio tuning		Optional
Switching on / off radio Regulation volume Selection CD tracks		Optional
Alarm clock setting		Only if the alarm clock function is present on the Cluster
Alarm clock repetition (snooze) / switching off (stop)		Only if the alarm clock function is present on the Cluster
Switching on / off supplementary heater Regulation of temperature (if heater is switched on) Regulation of duration of heater functioning (max.9 hours)		Optional

Aquila Trucks Centres

TACHOGRAPH

Digital Tachograph (DTCO)

Digital Tachograph (DTCO) is a series tachograph for new production vehicles and replaces analogue tachographs in case of failure.


DTCO electrical connections are the same as MTCO electrical connections. In the case of DTCO tachograph, the sensor on the gearbox must be replaced; from electrical point of view, this sensor is the same as former sensor.

The sensor being used for MTCO tachograph (KITAS 2170) cannot be used on new DTCO tachograph, for which KITAS 2171 sensor is mounted.

This sensor (KITAS 2171 sensor) is also compatible with MTCO sensor; however, once it has been configured, it can only be used for that tachograph family.

1. Display
2. Keypad (driver-1)
3. Card feeder slot-1
4. Download interface / calibration interface
5. Keypad driver-2
6. Card feeder slot-2
7. Release button, printer drawer
8. Tear-off edge
9. Keys of Display menu


Figure 155

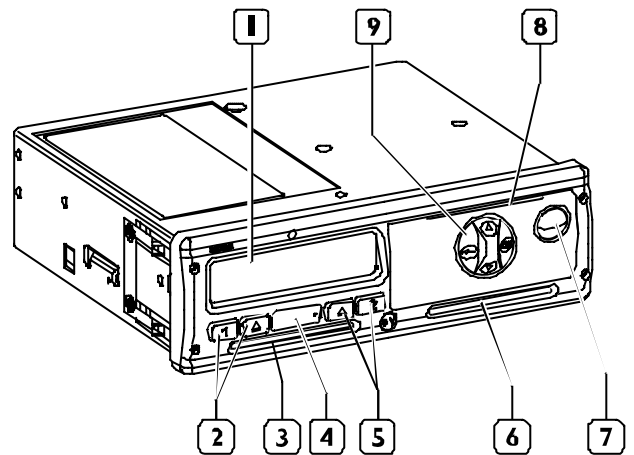

108905

DIGITAL TACHOGRAPH DTCO

Figure 156

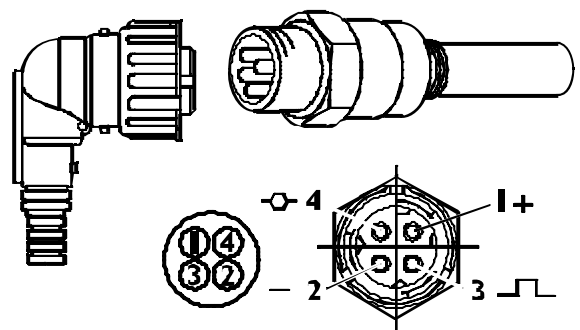


106343

TACHOGRAPH SENSOR (KITAS 2171)

Aquila Trucks Centres

Figure 157

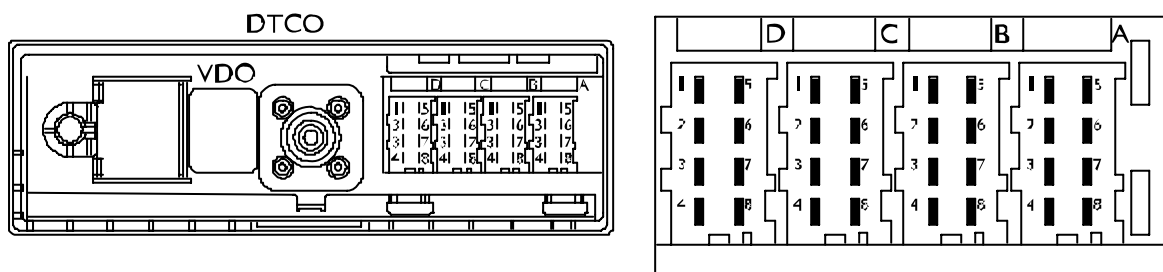

108906


Pin	Description	Cable colour code
A	1 Direct positive battery (+Bat)	7768
	2 Positive ideogram illumination (from IBC3)	4442
	3 Positive +15 (from IBC3)	8871
	4 CAN H line (VDB)	White
	5 Ground	0000
	6 Ground	0000
	7 -	-
	8 CAN L line (VDB)	Green
B	1 Power supply for electronic tachograph transmitter	5514
	2 Ground for electronic tachograph transmitter	0058
	3 Speed signal for electronic tachograph transmitter	5517
	4 Inverted signal from electronic tachograph transmitter	5516
	5 -	-
	6 Speed signal for Intarder / Navigator (pre-disposition)	5540
	7 Speed signal for fitters (ST14A connector)	5155
	8 Space travelled Signal (pre-disposition)	5518
C	1	-
	2	-
	3	-
	4	-
	5	-
	6	-
	7	-
	8	-
D	1	-
	2	-
	3	-
	4	-
	5	-
	6	-
	7 K line (14-pin diagnosis connector)	2297
	8	-

Aquila Trucks Centres

M.C. NET INTERFACE

The M.C. Net Interface control unit is introduced in the vehicles Trakker Euro 4/5 and acts as interface for the SWI control units (controls on wheel), IC (Cluster) and the Radio, by means of the CAN VDB and IDB lines. The CAN ICB line, which in the vehicles Trakker Euro 3 connected the SWI and IC control units has been removed.

Figure 157/1

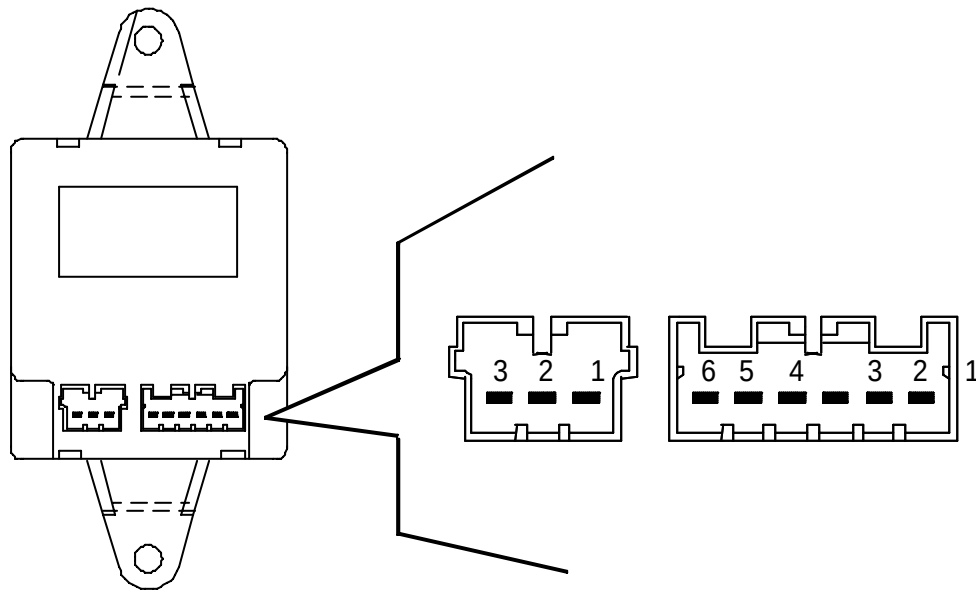

113631

Technical features

- Supplier	ITALAMEC
- Nominal Voltage	24V
- Working Voltage	18V ÷ 32V
- Working Temperature	-30 °C ÷ +60°C
- Absorption - stand by - 27V	<5mA

Pin - out A

Pin	Description	Cable code colour
1	Direct Positive battery (+Bat)	-
2	CAN H line (IDB)	White
3	CAN L line (IDB)	Green


Pin - out B

Pin	Description	Cable code colour
1	-	-
2	Ground	0000
3	-	-
4	CAN H line ((VDB)	7797
5	CAN L line ((VDB)	White
6	-	Green

Aquila Trucks Centres

INJECTION SYSTEM ASSEMBLY

Figure 157/2

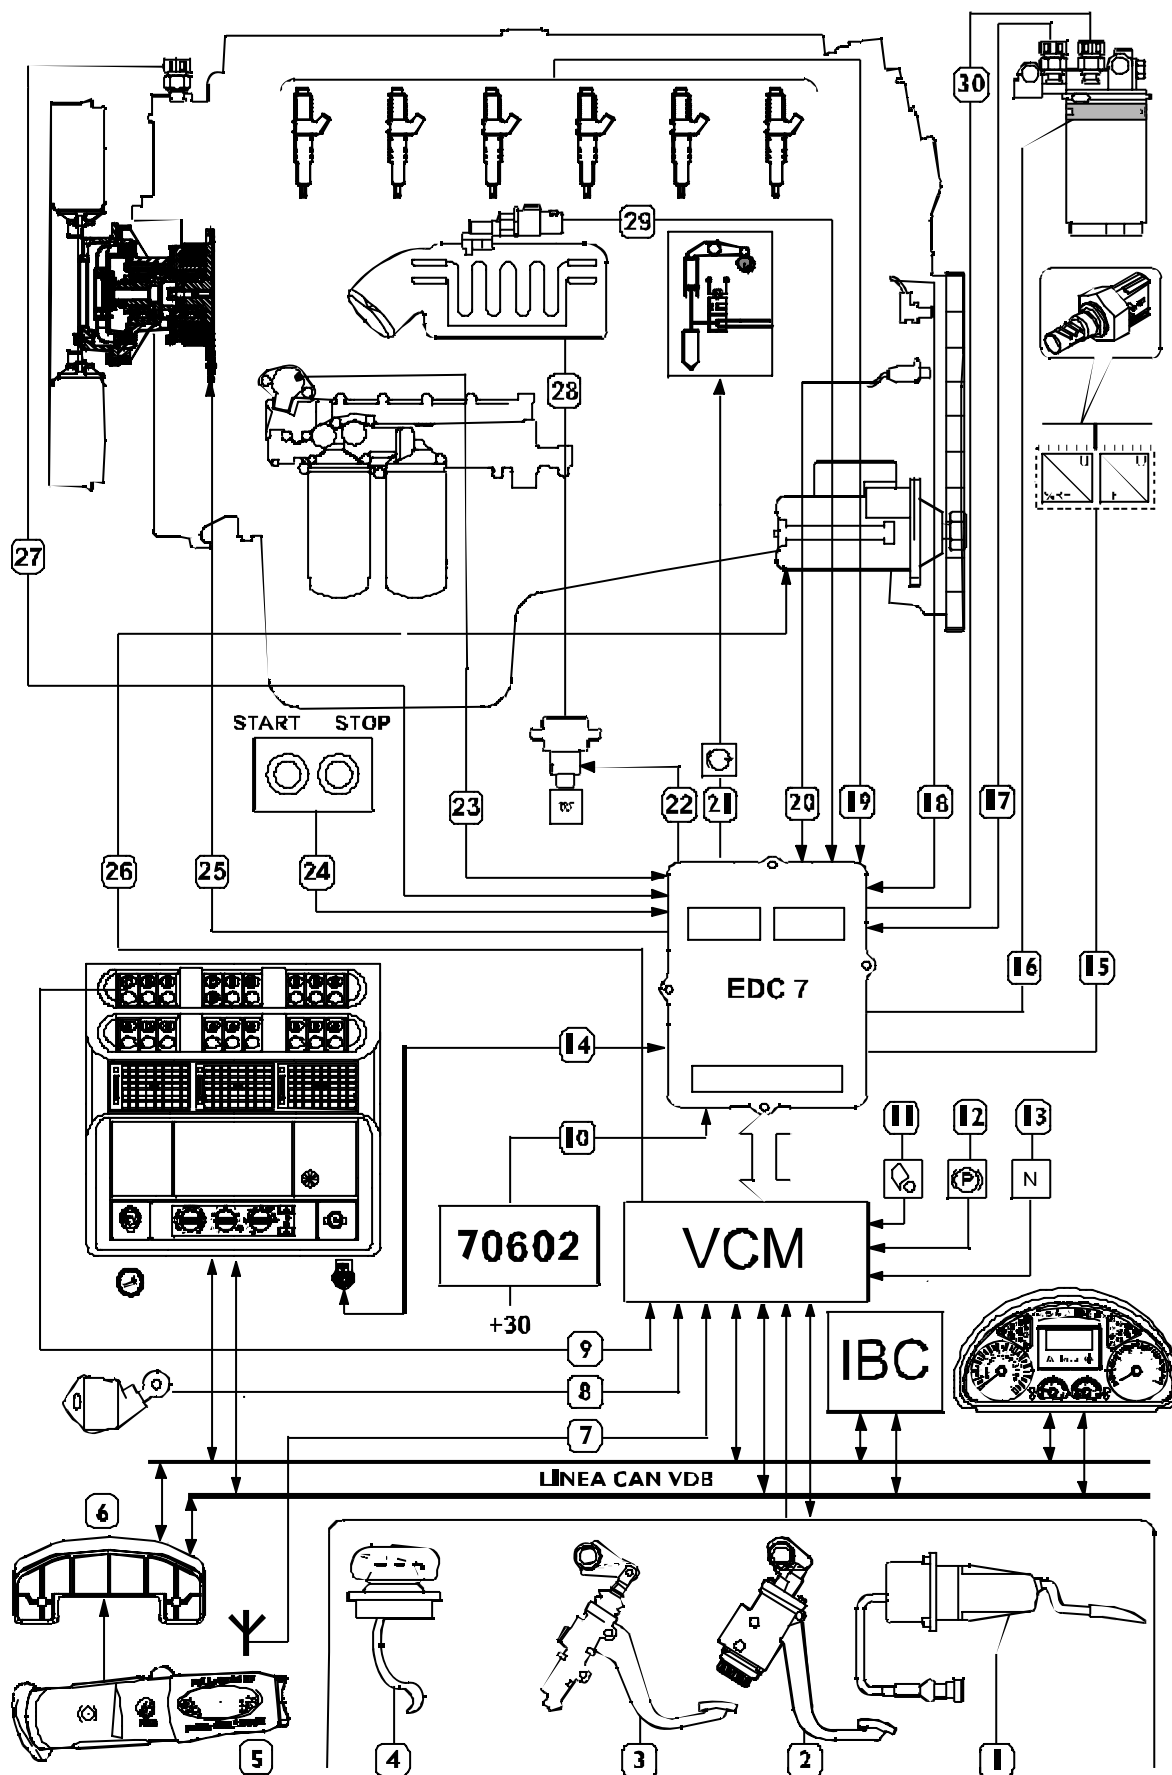

119850

Aquila Trucks Centres

Ref.	Description
1	Position sensor on accelerator pedal
2	Secondary primary brake switch
3	Sensor on clutch pedal
4	Engine brake switch
5	Right stalk
6	SWI control unit
7	Immobilizer antenna
8	Ignition key
9	Engine brake selector
10	Safety fuses (30A)
11	Cab release switch
12	Handbrake engaged
13	Idle switch
14	Diagnostic connector
15	Relative humidity and temperature sensor for EDC
16	Fuel prefilter
17	Water sensor
18	Engine revs sensor
19	Injectors
20	Distribution sensor
21	Engine brake solenoid valve
22	Preheating insertion contactor
23	Oil pressure/temperature sensor
24	Engine start/stop buttons
25	Baruffaldi electromagnetic joint
26	Starter
27	Coolant temperature sensor
28	Pre-heating resistance
29	Air pressure/temperature sensor
30	Fuel temperature sensor

Aquila Trucks Centres

ENGINE CONTROL UNIT OPERATION STRATEGIES

ECM – EDC7UC31 electronic control unit

The EDC7UC31 control unit manages the following main functions:

Fuel injection

Turbine geometry variation

Exhaust brake engagement

Self-diagnosis

Recovery

Also permits:

Interfacing with other on-board electric systems on the CAN EDB line (or ECB) SAE J1939

EOL and Service programming

Diagnosis

Fuel metering

The fuel metering is calculated in function of:

- the accelerator pedal position from the VCM (Vehicle Control Module)
- engine speed
- quantity of introduced air.

The result may be correct in function of:

- the water temperature
- the diesel temperature (DIESEL DENSITY)

or to avoid

- overloading
- overheating
- excessive turbine speed

The delivery may be modified in the case of:

- engine brake or brake pedal activation (signals via CAN)
- the intervention of limitation devices (ASR, speed limiting device, etc.) (signals via CAN)
- the intervention of ANTI-POLLUTION devices: sensor Δp , Sensor NO_x, signals via CAN from the control unit DCU15
- serious problems that involve the reduction in load and engine stalling.

The control unit, after determining the mass of the introduced air and measuring its pressure and temperature, calculates the corresponding fuel mass to inject in the involved cylinder (mg. per delivery), also taking the diesel temperature into account (density)

The fuel mass calculated in this way is converted into crank degrees, that is, before and during injection.

Aquila Trucks Centres

Correction of flow according to water temperature

When cold, the engine encounters greater resistance in operating; there is greater mechanical friction, the oil is still very viscous, the various clearances are not yet optimised.

In addition, the injected fuel tends to condense on the still cold metallic surfaces.

When the engine is cold, more fuel is metered than when the engine is hot.

De-rating

If the engine overheats, the injection is changed, lowering the flow rate in proportion to the temperature reached by the cooling liquid. The control unit considers the oil temperature in the case of a water temperature sensor failure.

Turbine speed adjustment

Turbine speed is adjusted continuously and corrected if needed through geometry variation.

Turbine speed adjustment

Turbine speed is adjusted continuously and corrected if needed through geometry variation.

Injection advance electronic control

The advance (starting moment, expressed in degrees) may be different from an injection to the next one, also in a different manner from a cylinder to another, and is calculated, similarly to the flow rate, in function of engine load (accelerator pedal position, engine speed and introduced air).

The advance is corrected as necessary:

- during acceleration
- based on water temperature

and to obtain:

- reduced emissions, noise and overloading
- improved vehicle acceleration

When starting, a high advance is set based on water temperature.

The delivered starting moment feed-back is provided by the injector solenoid valve impedance variation.

Engine speed regulator

The control unit controls the engine speed at all speeds and in particular:

- minimum speed
- and maximum speed

Aquila Trucks Centres

Starting the engine

During the first engine motoring over revolutions, cylinder N phase and recognition signal synchronisation occurs^{o1} (flywheel sensor and camshaft sensor). When starting, the accelerator pedal signal that arrives via CAN is ignored. The diesel delivery when starting is set exclusively based on the water temperature by means of a specific map. When the control unit detects a number of revolutions and a flywheel acceleration that is such to consider the engine as started and no longer driven by the starting motor, it engages the accelerator pedal signal..

Cold start

If only one of the three temperature sensors (water, air or fuel) registers a temperature lower than 10 °C, the pre-post heating is activated.

Upon activation of the key contact, the pre-heating warning light turns on the electric dashboard (cluster display) and remains on for a variable amount of time depending on the temperature (whereas the resistance at the intake manifold heats the air), then it flashes. At this point, the engine may be started.

With engine running, the warning lamp switches off, while the resistance goes on being powered for a certain (variable) period of time carrying out the post heating.

If, with warning lamp blinking, the engine is not started within 20 ÷ 25 seconds (absence time) the operation is canceled in order not to discharge the batteries.

The preheating curve is also variable based on the battery voltage.

Hot start

If the temperatures of reference all exceed 10 °C, upon activation of the key contact, the indicator lamp turns on for approx. 2 sec. for a brief test, and then turns off. At this point, the engine may be started.

Run Up

Upon activation of the key contact, the central unit transfers the information stored during the last engine stop to the main memory (see: After run), and carried out a system diagnosis.

After Run

Each time the engine is turned off using the key, the central unit remains powered for a few seconds thanks to the internal MAIN RELAY.

This permits the microprocessor to transfer some data from the main memory (volatile) to a non volatile, erasable and rewritable memory (EEPROM), to make it available for the next start (see: Run Up).

The data consists essentially of:

- various settings (engine idling, etc.)
- the calibration of some components
- fault memory.

This procedure lasts a few seconds, typically from 2 to 7 (depending on the quantity of data to save), after which the ECU deactivates the main power supply.

Aquila Trucks Centres



It is very important that this procedure is not interrupted, for example by turning off the engine from the battery cut-off switch, or by disconnecting the battery cut-off switch before at least 10 seconds have passed the engine was turned off.

If this happens, system functionality remains guaranteed up until the fifth time it is turned off incorrectly (also not consecutively) after which an error is stored in the failure memory and upon the following engine startup, the engine will function with degraded services while the EDC warning light remains on.

Repeated interruptions of the procedure could in fact lead to central unit damage.

Cut-off

This function cuts off delivery during deceleration, during exhaust brake, etc.

Cylinder Balancing

This function permits an individual and personalised control of the fuel flow rate and the delivery start for each cylinder, in a different manner from cylinder to cylinder, to compensate for the hydraulic injector tolerances

The fuel flow rate difference by cylinder is not signalled by the central unit but by the instrument IVECO - IRISBUS.

Synchronization Search

If the sensor signal does not arrive to the cam shaft, the central unit can still detect the cylinders into which the fuel must be injected.

If this occurs when the engine is already running, the combustion succession has already been obtained, and therefore the central unit continues with the sequence on which it is already synchronised.

If this occurs when the engine is stopped, the central unit energises a single solenoid valve. At the latest by the 2nd engine shaft revolution, an injection will occur in that cylinder, for which the central unit only has to synchronise itself on the combustion sequence and start the engine..

To reduce the number of connections, the length of the connection cables with the injectors and as a result, disturbances in the transmitted signal, the control unit is assembled directly on the engine by means of a heat exchanger that permit its cooling, using electric dowels that reduce the vibrations transmitted by the engine.

The control unit is connected to the wiring through 3 connectors.

- 89-way connector "1" for the components on the Vehicle
- 36-way connector "2" for the components on the Engine
- 16-way connector "3" for the connection to the injectors and exhaust brake solenoid valve

Internally, there is an ambient pressure sensor that is used to additionally improve injection system management.

The control unit offers an on-board diagnostic system via CAN:

- ODB (On Board Diagnostic)
- Cluster diagnosis.

It is also equipped with a very advanced self-diagnosis system and it is capable of recognizing and memorizing, in function of the environmental conditions, the possible anomalies, even of an intermittent type, that occurred on the system during operation, ensuring a more correct and reliable repair action with the help of the IVECO-IRISBUS diagnostic instruments.


Aquila Trucks Centres

Aquila Trucks Centres

EDC (ECM) SYSTEMS

EDC 7 UC31 electronic control unit

Figure 158

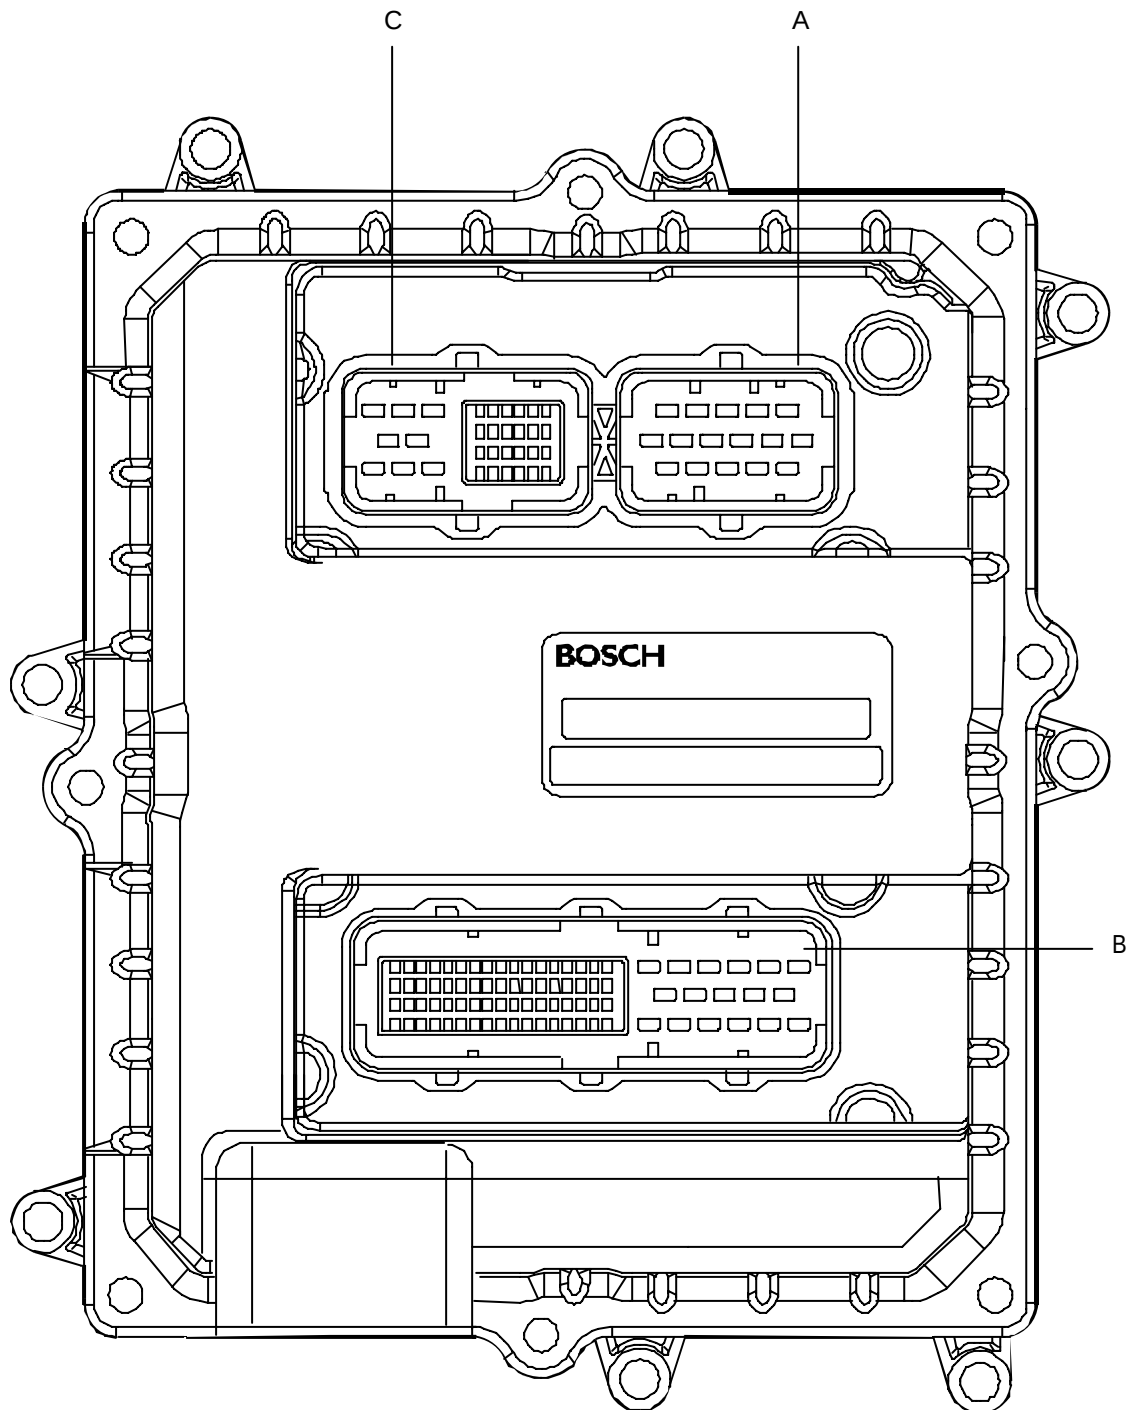


102373

A. Injector connector - B. Chassis connector - C. Sensor connector

Aquila Trucks Centres

Electric injector connector 3 "A"

Figure 159

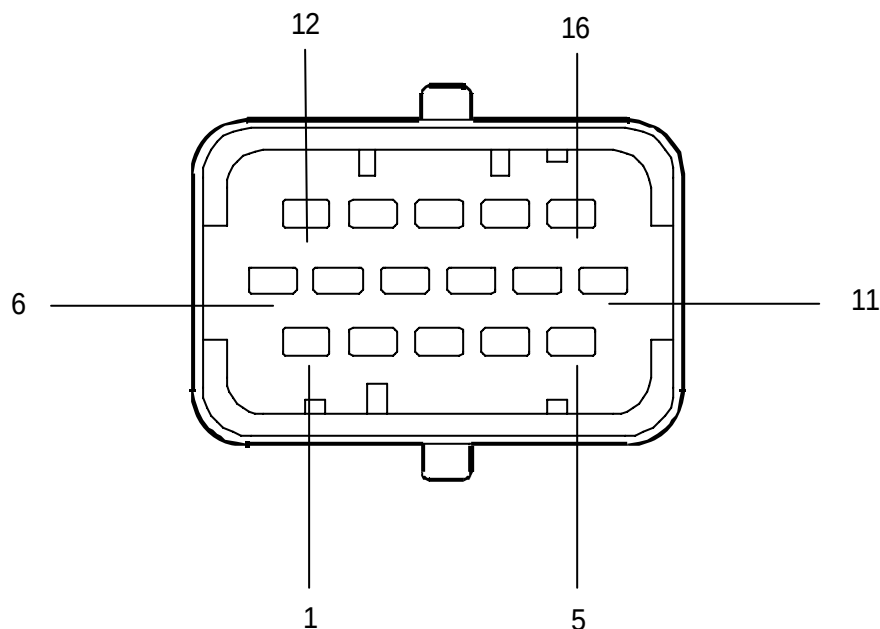

Colour legend

C	ORANGE
A	LIGHT BLUE
B	WHITE
L	BLUE
G	YELLOW
H	GREY
M	DARK BROWN
N	BLACK
W	LIGHT BROWN
S	PINK
R	RED
V	GREEN
Z	PURPLE

102374

Pin	Description (F3B)	Description (F2B)	Cable colour code	
			F3B	F2B
1	-	Cylinder 5 pump injector	-	N
2	-	Cylinder 6 pump injector	-	N
3	Cylinder 4-5-6 pump injector shared cable	Cylinder 4 pump injector	N	N
4	-	Cylinder 1 pump injector control	-	B
5	-	Cylinder 3 pump injector control	-	V
6	Cylinder 2 pump injector control	Cylinder 2 pump injector	B	R
7	Engine brake control solenoid	Engine brake control solenoid	C	C
8	Engine brake control solenoid	Engine brake control solenoid	M	M
9	-	-	-	-
10	-	-	-	-
11	Cylinder 1-2-3 pump injector shared cable	Cylinder 2 pump injector control	R	G
12	Cylinder 3 pump injector control	Cylinder 3 pump injector	V	R
13	Cylinder 1 pump injector control	Cylinder 1 pump injector	B	R
14	Cylinder 4 pump injector control	Cylinder 4 pump injector control	L	L
15	Cylinder 6 pump injector control	Cylinder 6 pump injector control	H	V
16	Cylinder 5 pump injector control	Cylinder 5 pump injector control	Z	Z


Aquila Trucks Centres

Sensor connector 2 "C"

Figure 160

Colour legend

C	ORANGE
A	LIGHT BLUE
B	WHITE
L	BLUE
G	YELLOW
H	GREY
M	DARK BROWN
N	BLACK
W	LIGHT BROWN
S	PINK
R	RED
V	GREEN
Z	PURPLE

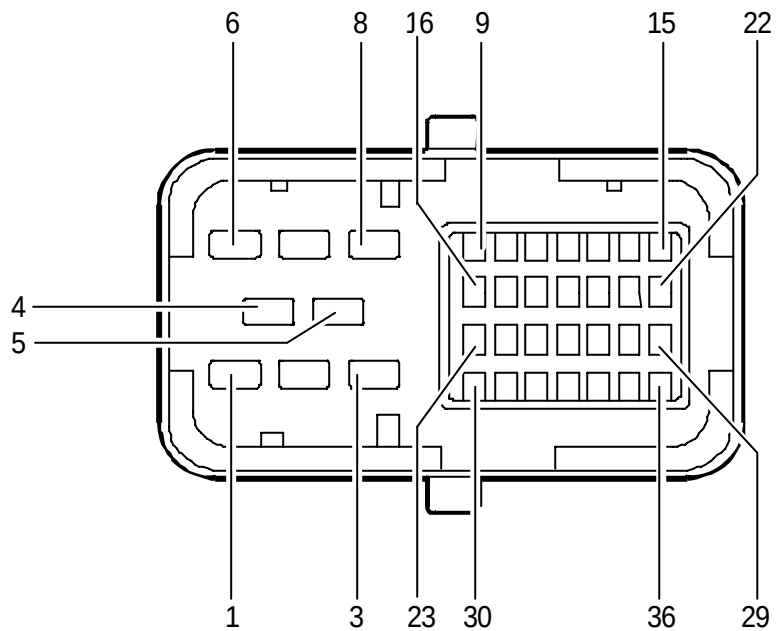


102375

Pin	Description	Cable colour code
1	Variable geometry turbine control solenoid	M
2	-	-
3	Variable geometry turbine control solenoid	N
4÷8	-	-
9	Earth for engine rpm sensor on timing system (timing sensor)	B
10	Engine rpm signal on timing system (timing sensor)	R
11÷14	-	-
15	Water temperature sensor signal	S
16÷17	-	-
18	Fuel temperature sensor earth	CN
19	Engine rpm sensor earth (flywheel sensor)	N
20	Turbocharger speed sensor earth	M
21÷22	-	-
23	Engine rpm sensor signal (flywheel sensor)	B
24	Oil temperature/pressure sensor earth	M
25	Air temperature/pressure sensor earth	B
26	Water temperature sensor earth	G
27	Oil temperature sensor signal	CN
28	Oil pressure sensor signal	L
29	-	-
30	Turbocharger speed sensor signal	B
31	-	-
32	Oil temperature/pressure sensor power supply	C
33	Air temperature/pressure sensor power supply	R
34	Air pressure sensor signal	V
35	Fuel temperature sensor signal	BR
36	Air temperature sensor signal	C

Aquila Trucks Centres

Chassis connector I "B"

Figure 161

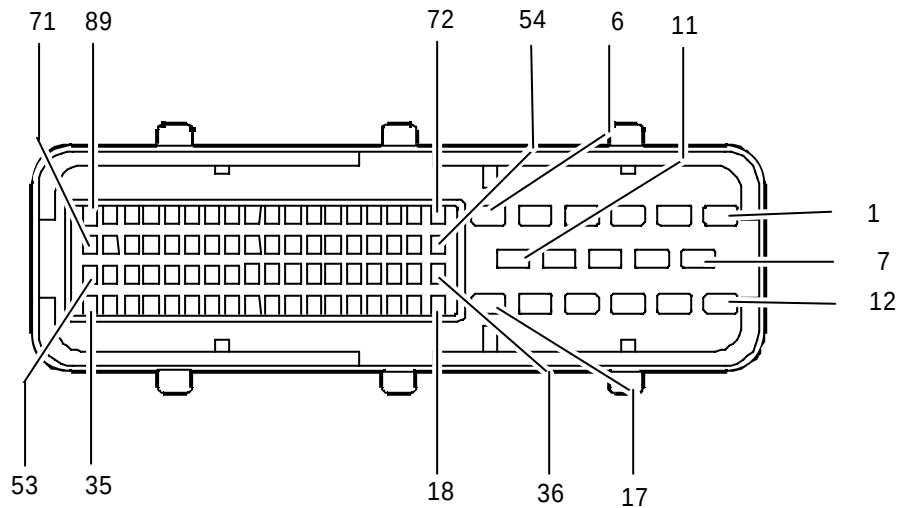

Pin	Description	Cable colour code
1	-	-
2	Control unit power supply positive (+30)	7151
3	Control unit power supply positive (+30)	7151
4	-	-
5	Ground	0151
6	Ground	0151
7	-	-
8	Control unit power supply positive (+30)	7151
9	Control unit power supply positive (+30)	7151
10	Ground	0151
11	Ground	0151
12	Ground enabling preheating activation	0094
13÷15	-	-
16	Ground enabling engine fan activation	0014
17÷25	-	-
26	Signal from fuel air temperature sensor	5173
27	Signal from combustion air humidity sensor	5174
28	Ground for combustion air humidity and temperature sensors	0173
29	Ground from EDC system diagnosis request switch (wiring)	5163
30	-	-
31	-	-
32	Ground from engine bay start-up button	8892
33	Engine rpm signal for bodybuilders (ST14B)	5587
34	Can - L line (ECB)	Green
35	Can - H line (ECB)	White
36÷39	-	-
40	Positive +15 (from IBC3)	8015
41÷46	-	-
47	Ground from engine bay shut-down button	0151
48÷54	-	-
55	Positive for engine brake solenoid (wiring)	9966
56	-	-
57	Positive enabling engine fan activation	5187
58	Ground for engine brake solenoid (wiring)	0043
59÷67	-	-
68	Power for combustion air humidity and temperature sensors	8173
69÷74	-	-
75	Positive enabling preheating activation	9164
76÷84	-	-
85	Ground from EDC system diagnosis request switch (wiring)	5163
86÷88	-	-
89	K line (diagnostic connector pin 2)	2298

Aquila Trucks Centres

SYSTEM COMPONENTS Pump injector (78247)

It mainly consists of three components as follows:

- A) Solenoid valve
- B) Plunger unit
- C) Sprayer

These three parts CANNOT be replaced individually and are NOT subject to overhaul.


The pump is actuated mechanically at each cycle by a rocker arm and compresses the fuel contained in the pressure chamber.

The sprayer features the same assembly and operation as a conventional injector; it is opened by the fuel under pressure and injects it fine pulverized into the combustion chamber.

An electro valve controlled directly by the electronic center sets delivery modalities based on the control signal.

An injector holder houses the lower part of the pump injector in the cylinder head.

Figure 162

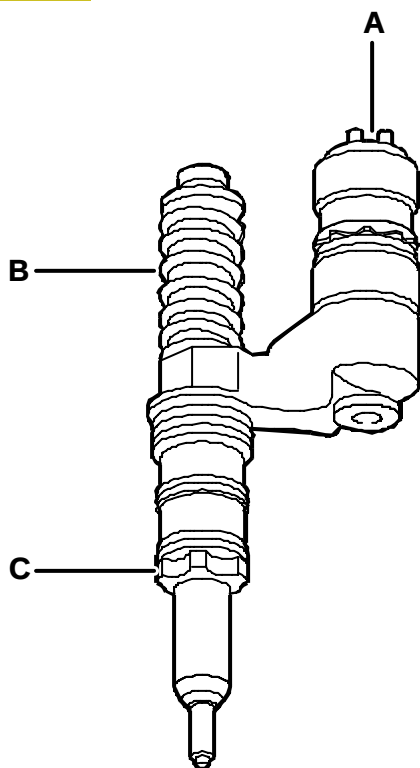


113564

PUMP INJECTOR F2B (CURSOR 8)

1. Fuel/oil seal - 2. Fuel/diesel seal - 3. Fuel/exhaust gas seal -
A. Plunger - B. Nozzle - C. Solenoid valve

Figure 163

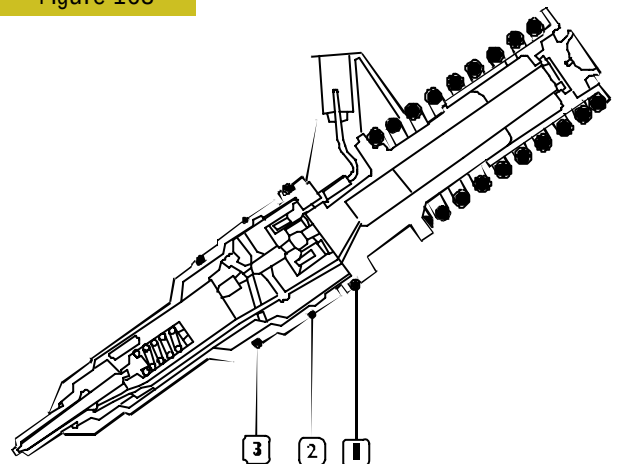

113565

- PUMP INJECTOR F3A / F3B (CURSOR 10 / 13)
1. Fuel/oil seal - 2. Fuel/diesel seal - 3. Fuel/exhaust gas seal
- A. Plunger - B. Nozzle - C. Solenoid valve

Aquila Trucks Centres

The electro valve is of the N.A. type.

Coil resistance is $\sim 0.56 \div 0.57$ Ohm.

Maximum operating voltage is $\sim 12 \div 15$ Amp.

Based on voltage absorbed by the electro valve, the electronic center can identify whether injection was correct or mechanical problems exist.

It can also detect injector errors ONLY with the engine running or during starts.

Injectors are connected to the center with connector ST - E mounted on the engine front with a twisted cable, to avoid possible electromagnetic interference problems, so junctions or repairs on it must NOT be performed.

Figure 164


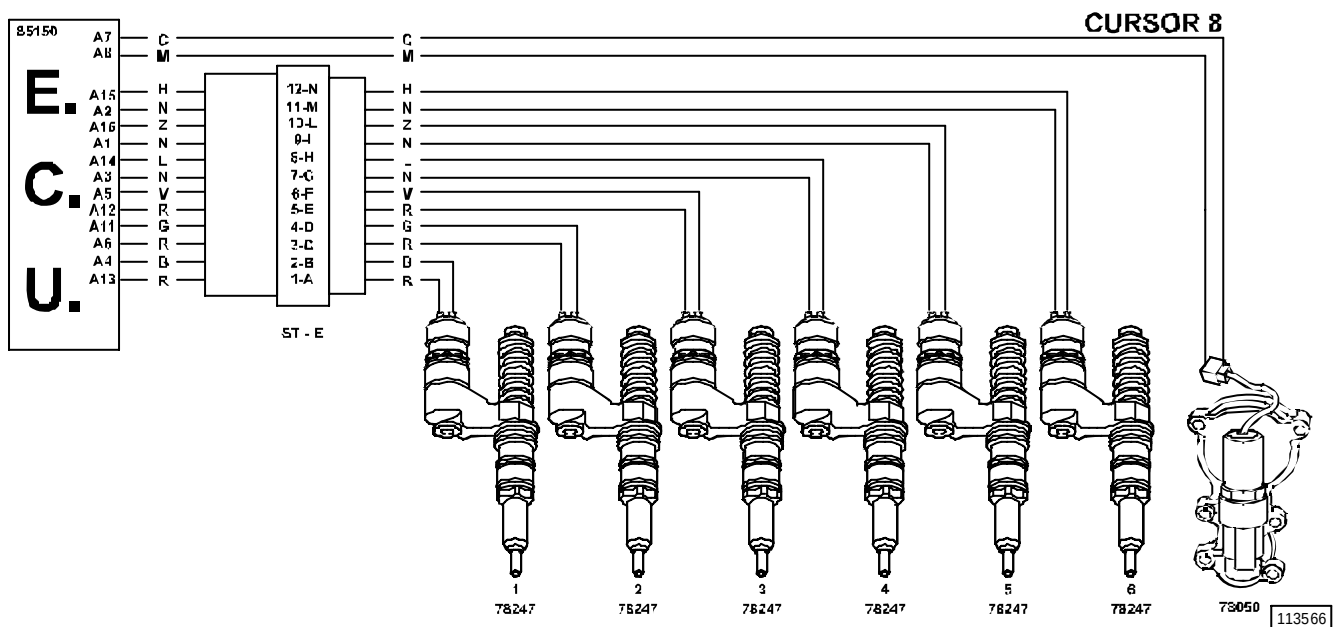



Figure 165

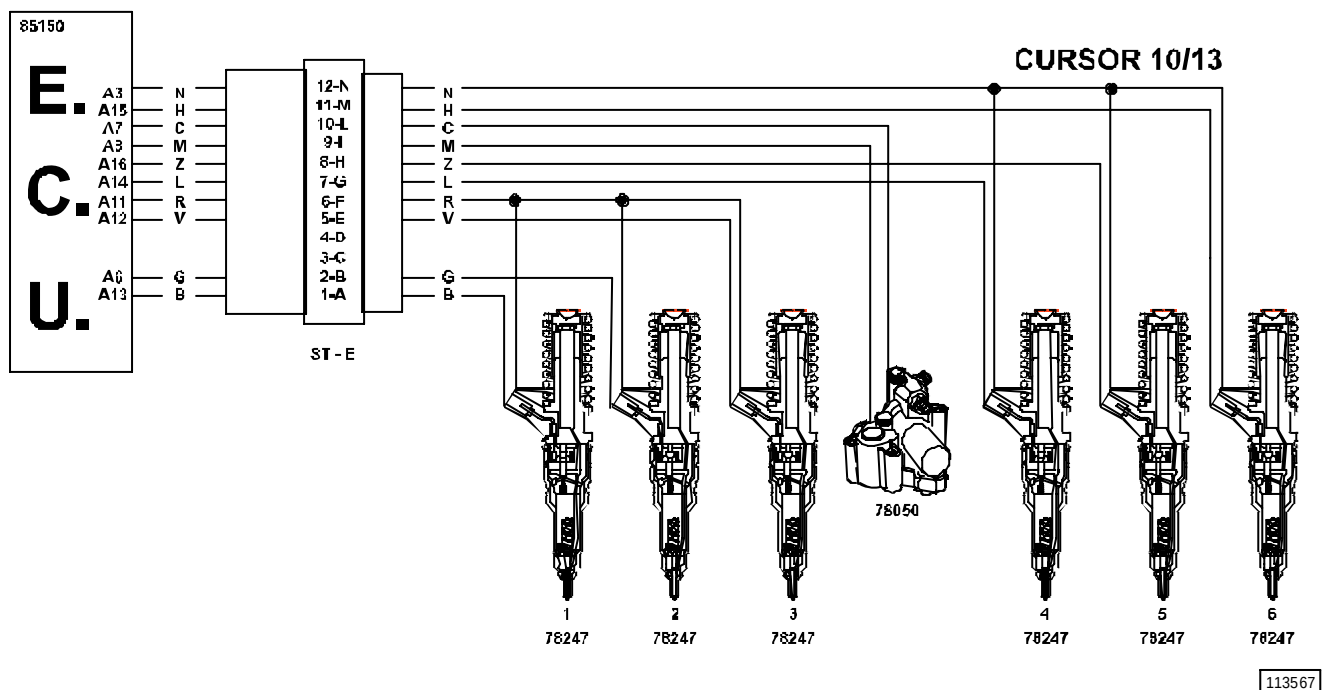

Aquila Trucks Centres

ST-E CONNECTOR

Figure 166

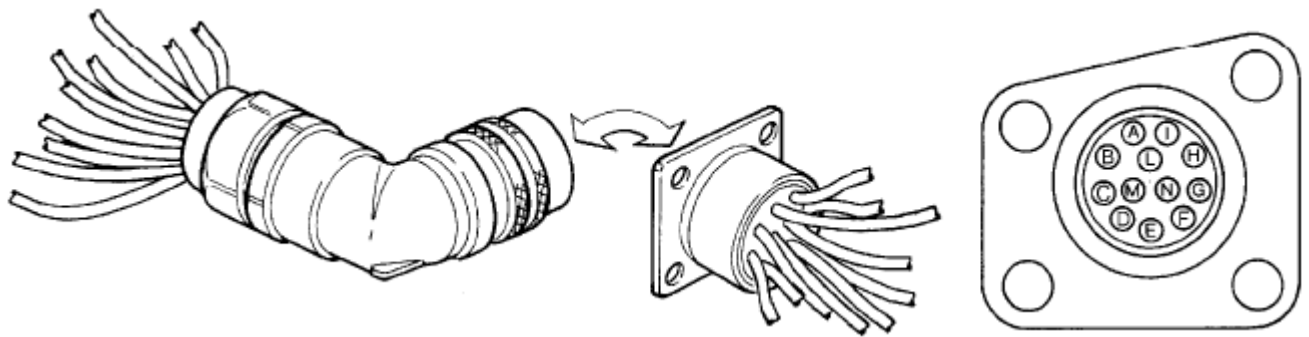

113569

Colour legend

C	ORANGE
A	LIGHT BLUE
B	WHITE
L	BLUE
G	YELLOW
H	GREY
M	DARK BROWN
N	BLACK
W	LIGHT BROWN
S	PINK
R	RED
V	GREEN
Z	PURPLE

Pin ST-E	F2B			F3A / F3B		
	Cable	Function	Pin ECU	Cable	Function	Pin ECU
1-A	R	Injector 1 supply	A13	B	Injector 1 control	A13
2-B	B	Injector 1 control	A6	G	Injector 2 control	A6
3-C	R	Injector 2 supply	-	-	-	-
4-D	G	Injector 2 control	-	-	-	-
5-E	R	Injector 3 supply	A12	V	Injector 3 control	A12
6-F	V	Injector 3 control	A11	R	Injector 1/2/3 supply	A11
7-G	N	Injector 4 supply	A14	L	Injector 4 control	A14
8-H	L	Injector 4 control	A16	Z	Injector 5 control	A16
9-I	N	Injector 5 supply	A8	M	Engine brake control electro valve	A8
10-L	Z	Injector 5 control	A7	C	Engine brake electro valve supply	A7
11-M	N	Injector 6 supply	A15	H	Injector 6 control	A15
12-N	H	Injector 6 control	A3	N	Injector 4/5/6 supply	A3

Aquila Trucks Centres

Engine coolant temperature sensor (85153)

This N.T.C. type sensor located on the water outlet sump on the engine head left measures coolant temperature for the various operating logics with a hot or cold engine and identifies injection enrichment requirements for a cold engine or fuel reduction requirements for a hot engine.

The coolant temperature signal is used for display on the Cluster and to control the fan.


It is connected to electronic control unit pins C 15 / C 26

Sensor behavior as a function of temperature:

- 10 °C	8,10 ÷ 10,77 kOhm
+ 20 °C	2,28 ÷ 2,72 kOhm
+ 80 °C	0,29 ÷ 0,364 kOhm

At 60 to 90 °C, voltage at C 15 and C 26 ranges from 0.6 to 2.4V.


Figure 167

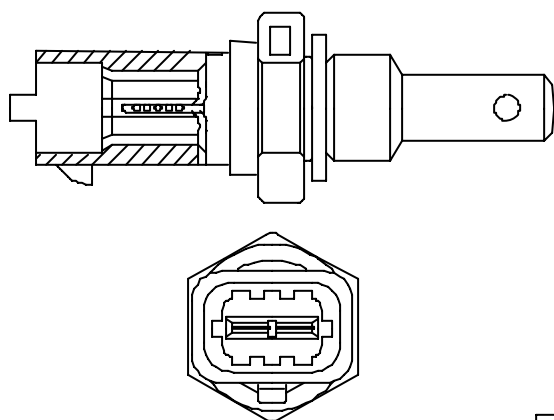

TECHNICAL VIEW

113561


Figure 169

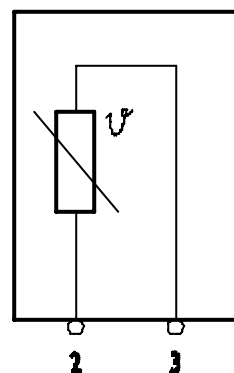

WIRING DIAGRAM

106983

Figure 168

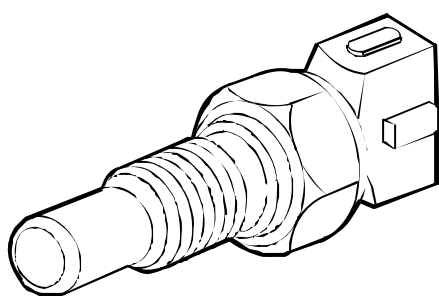

PERSPECTIVE VIEW

113562

Connector	Function	Cable colour
2	To EDC center pin C 15	—
3	To EDC center pin C26	—

Aquila Trucks Centres

Fuel temperature sensor (47042)

Features

Supplier


BOSCH

Maximum torque

35 Nm


This N.T.C. type sensor located on the fuel filter on the engine left side detects fuel temperature and enables the electronic control unit to measure fuel density and volume for delivery correction.

Figure 170

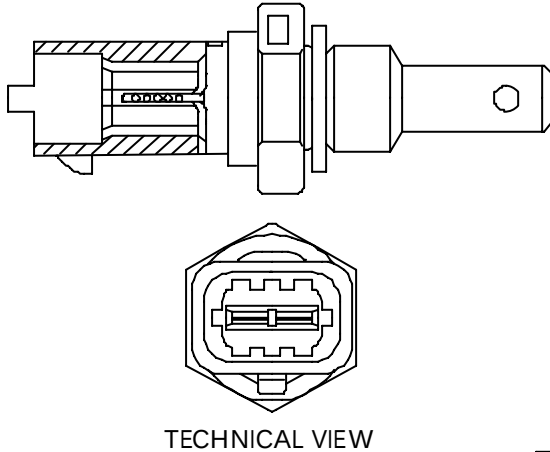


113561

Figure 171

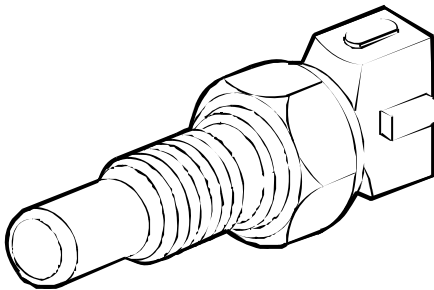


113562

Figure 172

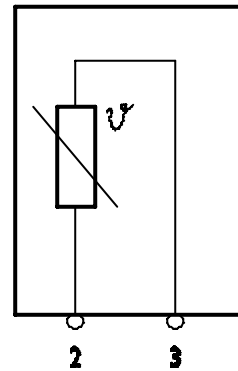

8528

Figure 173

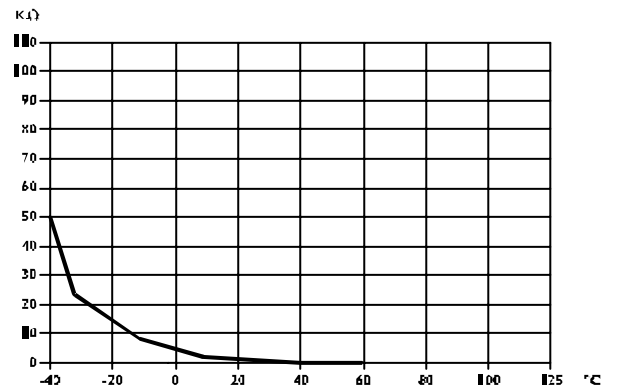

113562

Connector	Function	Cable colour
2	To EDC center pin C18	—
3	To EDC center pin C35	—

Aquila Trucks Centres

Flywheel pulse transmitter (48035)

Features

Supplier

BOSCH

Torque

 $8 \pm 2 \text{ Nm}$

Resistance

 $880 \div 920 \Omega$

This induction type sensor located on the flywheel generates signals obtained from the magnetic flow lines that close through 54 holes in three series of 18 in the flywheel.

The electronic control unit uses this signal to detect the various engine ratings and pilot the electronic rev counter.

The rev counter does not operate in the absence of this signal.

This sensor's air gap is NOT ADJUSTABLE.

Figure 174

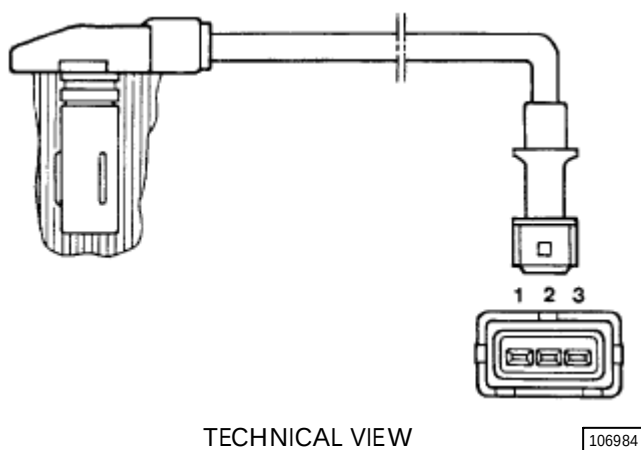


Figure 176

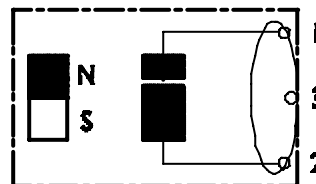


Figure 175


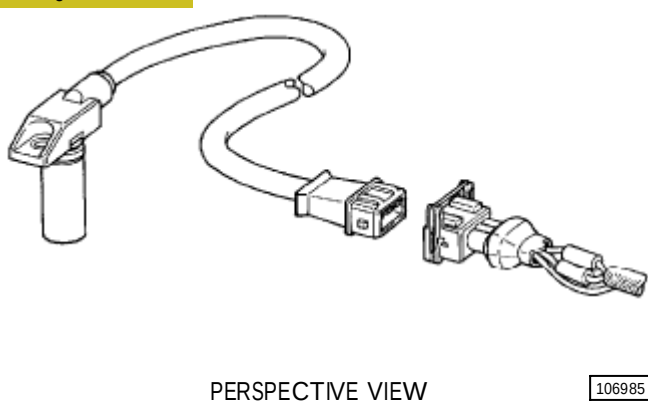


Figure 177

3 x 18

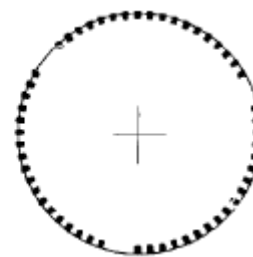

Connector	Function	Cable colour
1	To EDC center pin C 23	—
2	To EDC center pin C 19	—
3	Shields	—

Aquila Trucks Centres

Camshaft pulse transmitter (48042)

Features

Supplier

BOSCH

Torque

 $8 \pm 2 \text{ Nm}$

Resistance

 $880 \div 920 \Omega$


This induction type sensor located on the camshaft generates signals obtained from the magnetic flow lines that close through the 6 plus 1 phase teeth of a impulse wheel mounted on the shaft.

The electronic control unit uses the signal generated by this sensor as an injection step signal.

Though electrically identical to (48035) engine rpm sensor mounted in the camshaft in is NOT interchangeable with it as its cable is shorter and it features a larger diameter.

This sensor's air gap is NOT ADJUSTABLE.


Figure 178

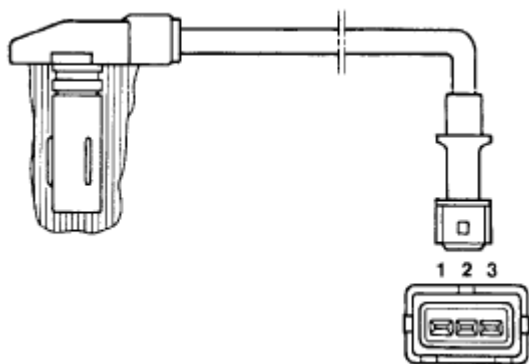

106987

TECHNICAL VIEW


Figure 179

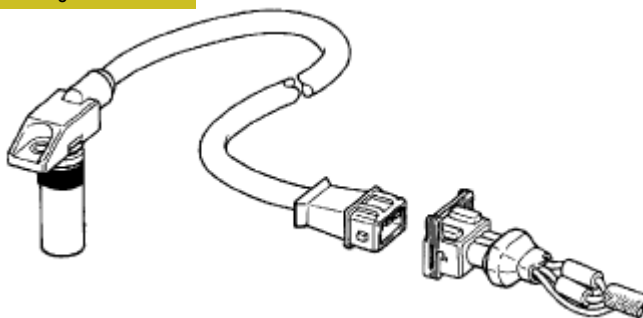

106988

PERSPECTIVE VIEW

Figure 180

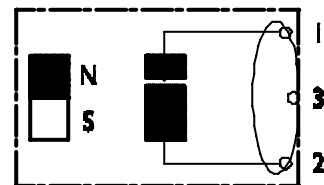


106989

WIRING DIAGRAM

Figure 181

6 + 1

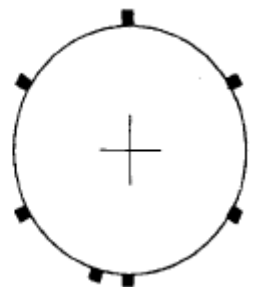

8520


REFERENCE ON SOUND WHEEL

Connector	Function	Cable colour
1	To EDC center pin C 10	—
2	To EDC center pin C 9	—
3	Shields	—

Aquila Trucks Centres

Pre-post reheat resistor (61121)

Figure 182

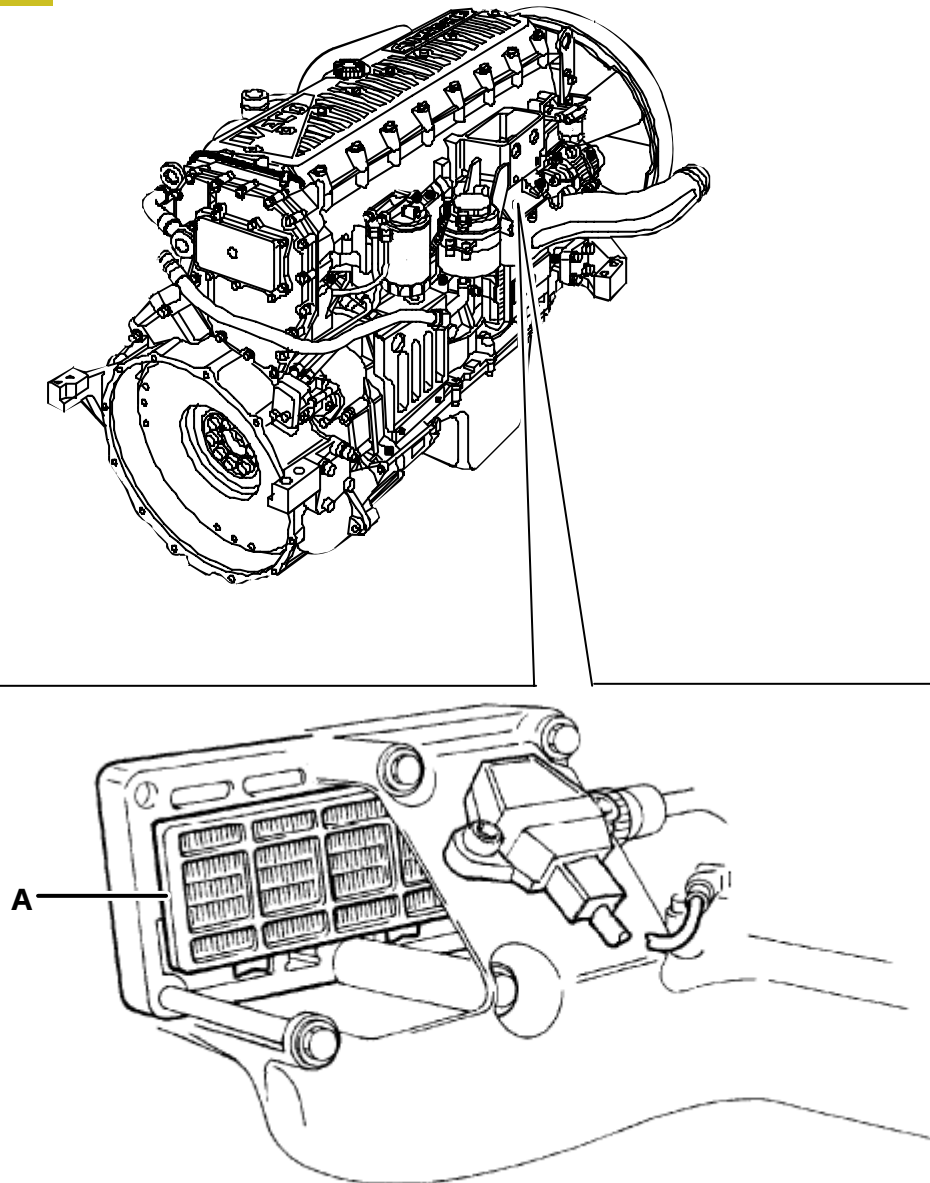

A. Pre/post reheat resistor / 0.7 Ohm

106990

This resistor located between the cylinder head and the intake duct is used to heat air in pre/post reheat operations.

By inserting the key switch, when even only one of the water, air or gas oil temperature sensors record less than 10 °C, the electronic center activates pre/post reheating and switches on the warning light on the cab instrument panel for a variable period according to temperature, after which the light starts blinking to inform the operator that the engine can be started.

The warning light goes off after engine start but the resistor continues being supplied for a variable period of time to complete post reheating.


The operation is cancelled to prevent uselessly discharging the battery if the engine is not started within 20/25 seconds with the warning light blinking.

When reference temperature is above 10 °C, actuating the ignition key makes the warning light go on for some 2 seconds to complete the test and then turns it off to indicate the engine can be started.

Aquila Trucks Centres

VGT control card

Figure 183

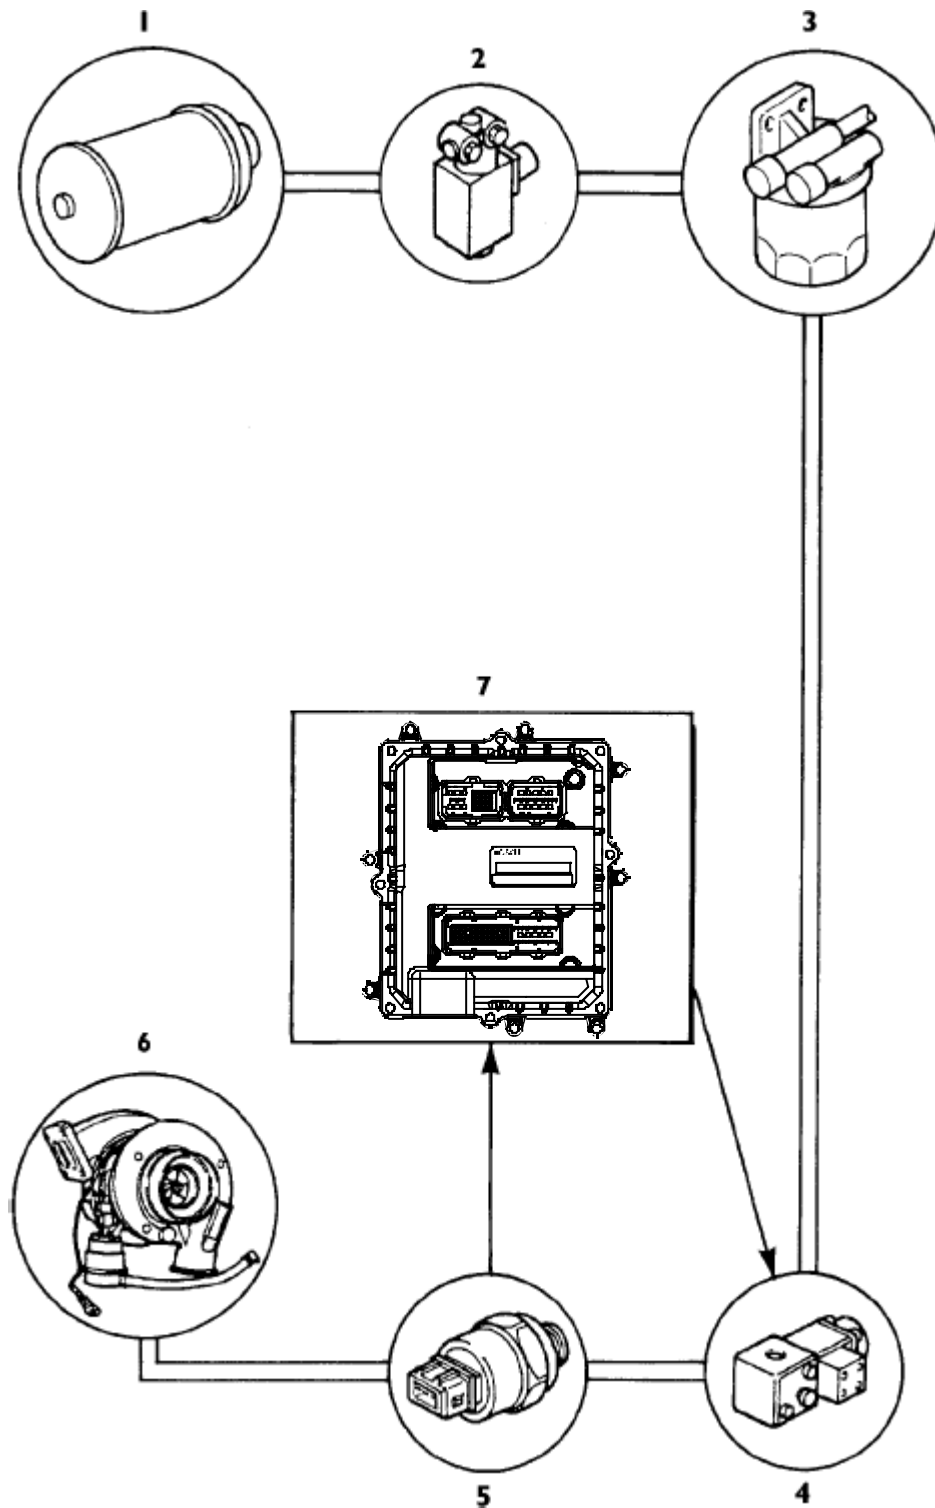


106991

1. Service reservoir - 2. Shut-off electro valve - 3. Air filter - 4. VGT electro valve - 5. Actuator position sensor -
6. Turbine actuator - 7. EDC center

Aquila Trucks Centres


Variable geometry Holset turbo compressor (series HY)

Figure 184

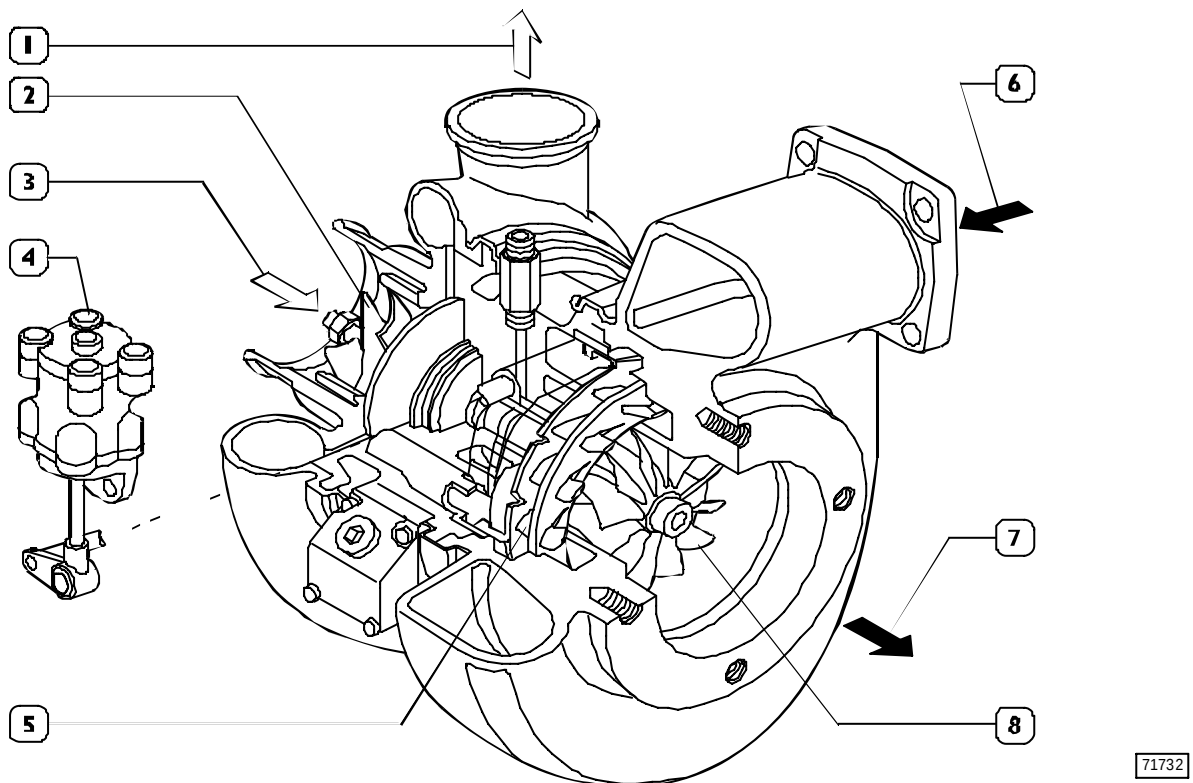

1. Intake duct air delivery - 2. Compressor - 3. Air intake - 4. Actuator - 5. Exhaust gas speed adjustment - 6. Exhaust gas intake - 7. Exhaust gas outlet - 8. Turbine

Figure 185

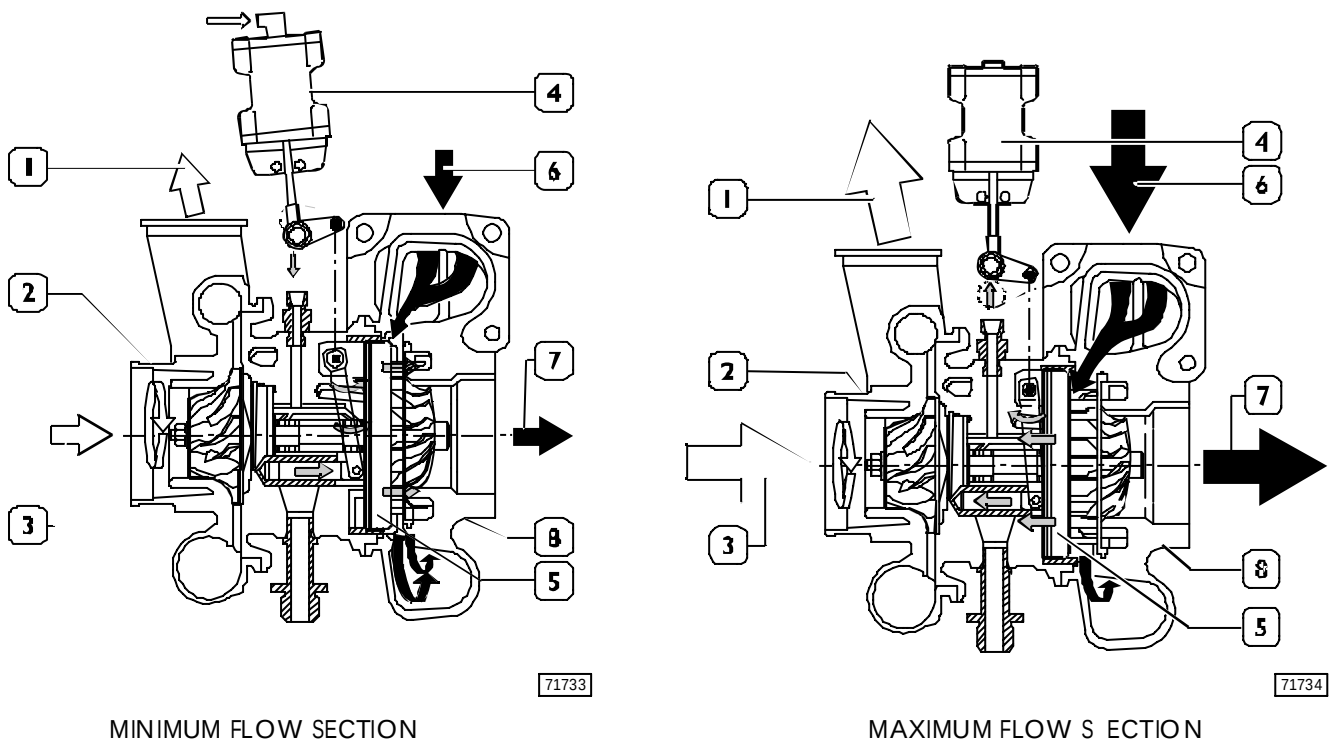

MINIMUM FLOW SECTION

MAXIMUM FLOW SECTION


1. Air delivery to intake manifold - 2. Compressor - 3. Air intake - 4. Actuator - 5. Exhaust gas delivery adjustment ring - 6. Exhaust gas intake - 7. Exhaust gas outlet - 8. Turbine

Aquila Trucks Centres

Operating principle

Figure 186

Exhaust gas section with engine under load

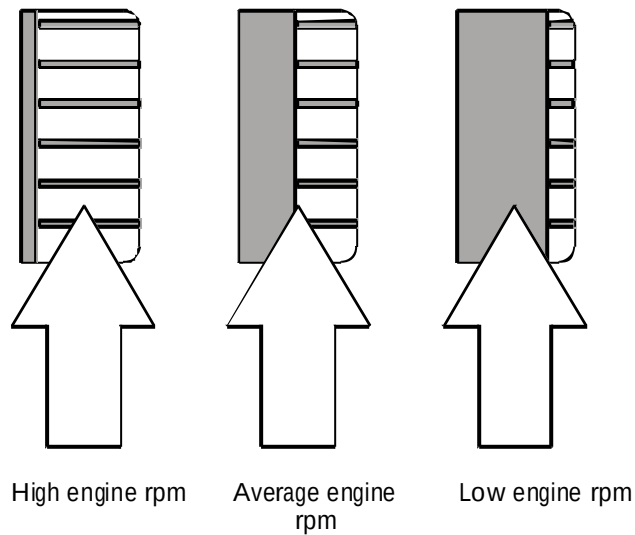

106992

The VGT variable geometry turbo compressor consists of a centrifugal compressor and a turbine provided with a mobile device that adjusts the rate of exhaust gas to the turbine rate by changing the gas passage cross section.

This solution enables keeping gas and turbine rates high even when the engine is operating at low rpm.

Making gasses pass through a reduced cross section in fact increases their rate so the turbine too rotates faster.

Movement of the exhaust gas intake cross section partialization device is obtained by means of a mechanism controlled by a compressed air actuator, which is controlled by a proportional electro valve.


The device is fully closed at low rpm, while at high engine rpm the electronic control system increases cross section to enable incoming gasses to flow without increasing their speed.

A thoroidal chamber is cast into the central body for coolant passage.

Aquila Trucks Centres

Engine components (VGT)

Figure 187

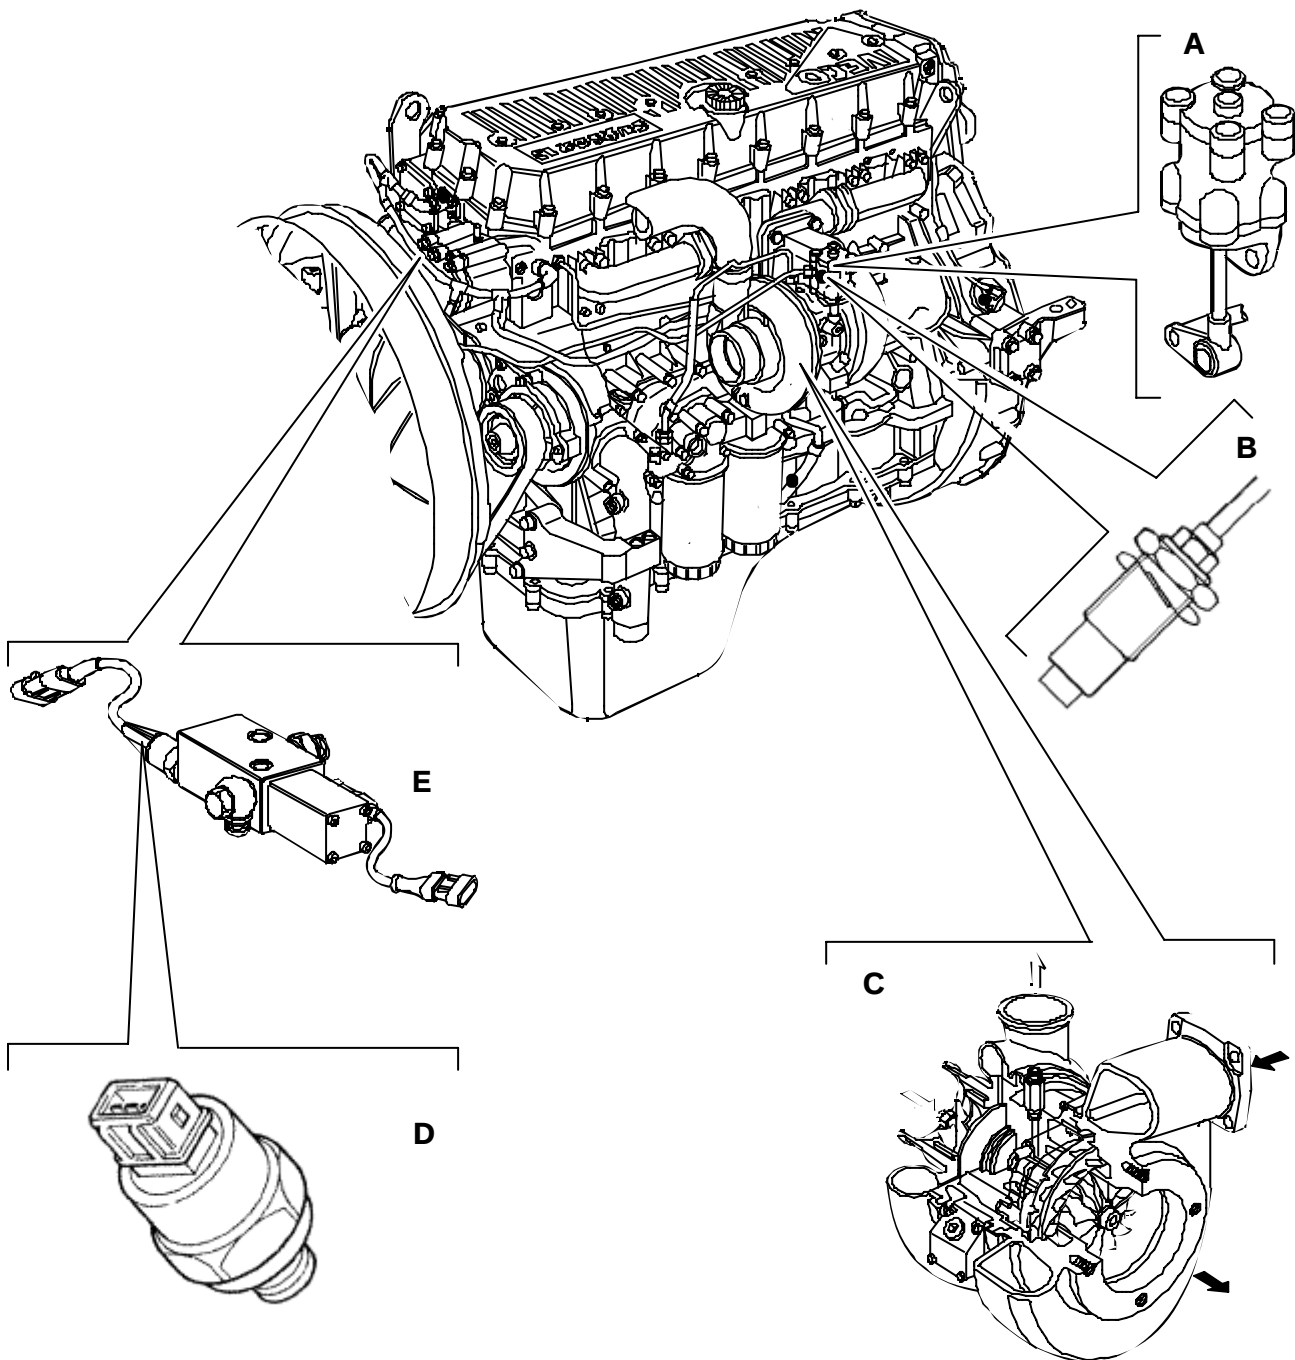


106993

A. Actuator - B. Turbine rpm sensor - C. Turbo compressor - D. VGT actuator position sensor -
E. VGT activator control electro valve

Aquila Trucks Centres

Actuator

Figure 188

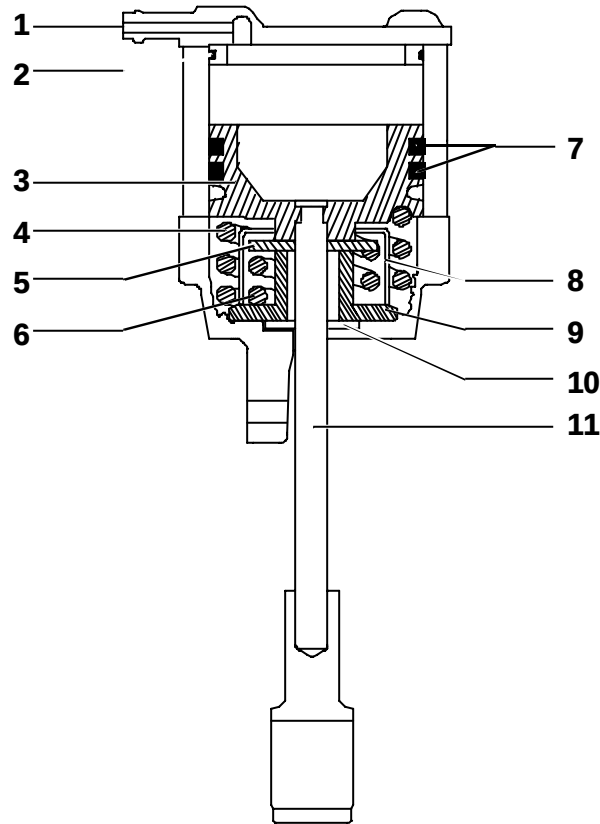

106994

1. Air intake - 2. Washer - 3. Piston - 4. External spring - 5. Internal spring control disc - 6. Internal spring - 7. O-Ring - 8. Spring holder - 9. Run end - 10. Dust cover - 11. Control rod

Operating principle

The actuator piston connected to the control rod is piloted through the compressed air admitted from air intake 1 on the top of the actuator.

Modulating air pressure varies piston and turbine control rod movement.


During its movement, the piston progressively compresses external spring 4 until the piston base reaches internal spring 6 control disc 5.

By further increasing pressure, the piston compresses the internal spring through disc 5 until run end, which is reached when disc 5 interferes with lower run end 10.

Use of the two springs enables changing the ratio between pressure and piston travel. About 85% of rod travel is contrasted by the external spring, the remaining 15% being contrasted by the internal one.

VGT control solenoid valve

Figure 189

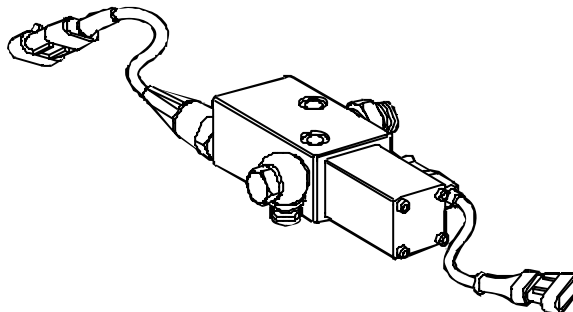

106995

This is an N.C. type proportional solenoid valve mounted on the engine front, behind the fan.

Through a PWM signal, the electronic center pilots this electro valve to adjust turbine actuator feed pressure; actuator position changes modify the exhaust gas intake cross section on the fan blades and thus its speed.

The VGT electro valve is connected between electronic center pins C3/C1.

Coil resistance is $\sim 20 \div 30 \text{ Ohm}$.

Aquila Trucks Centres

Turbine speed sensor (48043)

This is an inductive sensor positioned on the impeller shaft.

It generates signals obtained from the magnetic flow lines, which close through a notch obtained on the shaft itself.

The signal generated by this sensor is used by the electronic control unit to verify that the turbine revs number does not exceed the maximum value.

To control the revs number, the control unit acts on variable geometry.



If the revs number keeps on increasing until it reaches excessive r.p.m. values, the electronic control unit will detect an anomaly.

The gap of this sensor **CANNOT BE ADJUSTED**.

It is connected on electronic control unit pins C30 / C20.

The sensor resistance value is 400 Ohm.

Figure 190

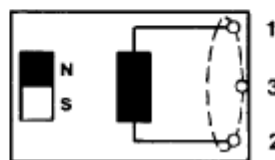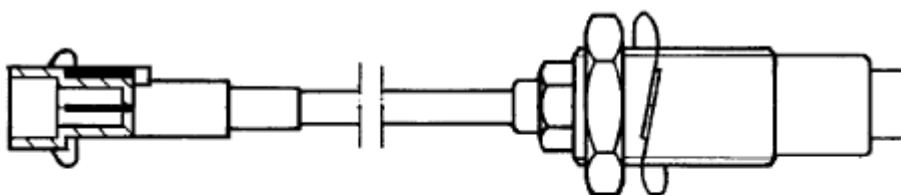


Wiring diagram

106996

Aquila Trucks Centres


Figure 191

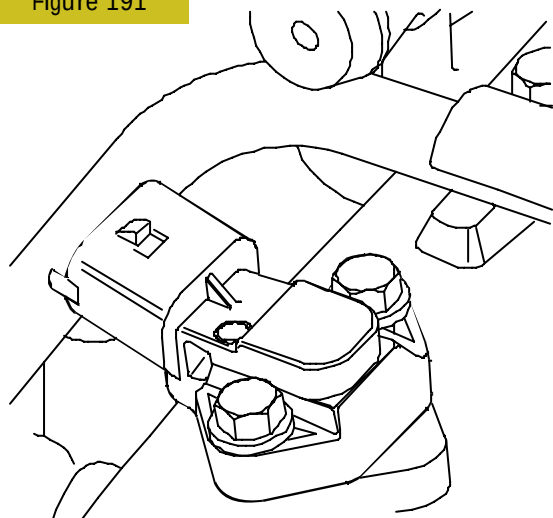

50324

Sensor external view


Figure 192

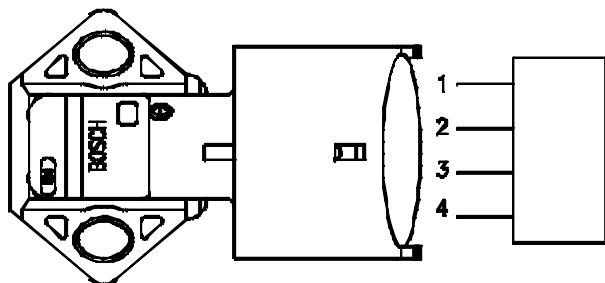

50323

Linking connector

Figure 193

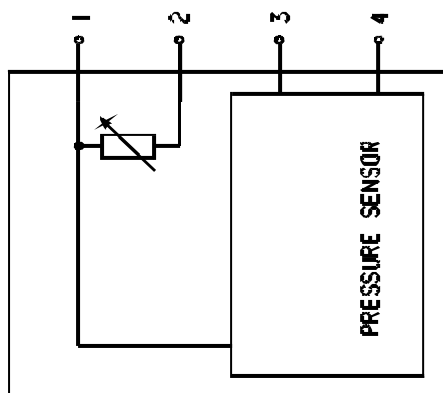

50344

Wiring diagram

Air pressure/temperature sensor (85156).

This component incorporates a temperature sensor and a pressure sensor.

It replaces the temperature sensors (85155) and pressure sensors (85154) available in the preceding systems.

It is fitted onto the intake manifold and measures the maximum supplied air flow rate used to accurately calculate the amount of fuel to be injected at every cycle.

The sensor is powered with 5 V.

The output voltage is proportional to the pressure or temperature measured by the sensor.

Pin (EDC)	25/C - 33/C	Power supply
Pin (EDC)	36/C	Temperature
Pin (EDC)	34/C	Pressure

Oil temperature/pressure sensor (42030 / 47032)

This component is identical to the air pressure/temperature sensor and replaced single sensors 47032 / 42030.

It is fitted onto the engine oil filter, in a horizontal position.

It measures the engine oil temperature and pressure.

The measured signal is sent to the EDC control unit which controls, in turn, the indicator instrument on the dashboard (low pressure warning lights / gauge).

Pin (EDC)	24/C - 32/C	Power supply
Pin (EDC)	27/C	Temperature
Pin (EDC)	28/C	Pressure

The engine oil temperature is used only by the EDC control unit.

Ref.	Description	Control unit pin	
		Oil	Air
1	Ground	24C	25C
2	Temp. Sign.	27C	36C
3	+5	32C	33C
4	Press. Sign.	28C	34C

Aquila Trucks Centres

Fan with electromagnetic joint (F2B)


The fan has an effective speed, called second speed, that is controlled by the EDC control unit by coil (8) excitation. When coil (8) is de-energised, the fan is driven by the four magnets (6) at a speed (called first speed) of about 450 rpm. The first speed is activated when:

- Water temperature is less than 93° C and the Intarder and the air conditioner are off, or
- Water temperature is less than 85° C and the air conditioning system is on but the circuit pressure is below 22 bar, or
- Water temperature is less than 85° C and the Intarder is on with braking power 41% lower than max. power.

The second speed is activated when:

- Water temperature reaches 93° C with Intarder off or on with braking power less than 41%, second speed will deactivate when temperature drops to 88° C, or
- Water temperature reaches 85° C with Intarder on and braking power 41% higher than max. power or air conditioning system on and circuit pressure equal to 22 bar.

Figure 194

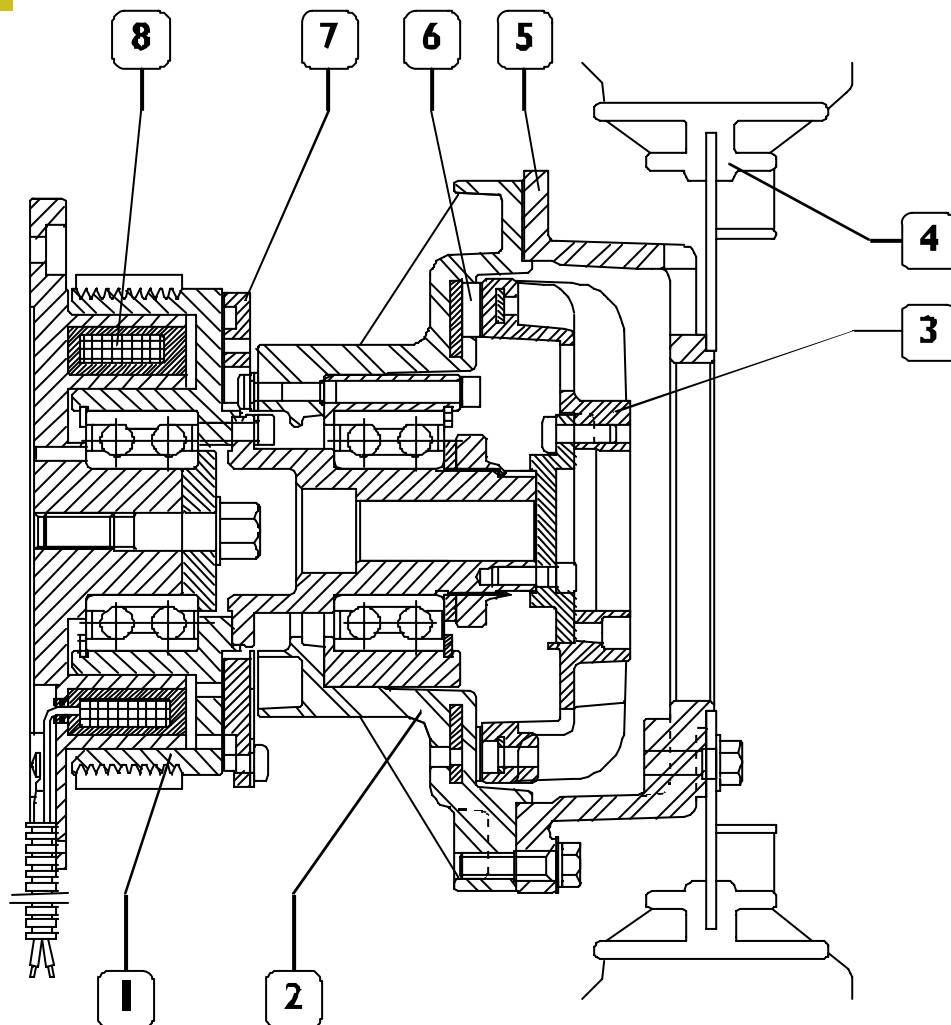


87169

1. Pulley - 2. Support - 3. Disk with fins - 4. Fan - 5. Fan adapter- 6. Round magnets - 7. Floating ring - 8. 24V coil

Aquila Trucks Centres

Fan at first speed position

Figure 195

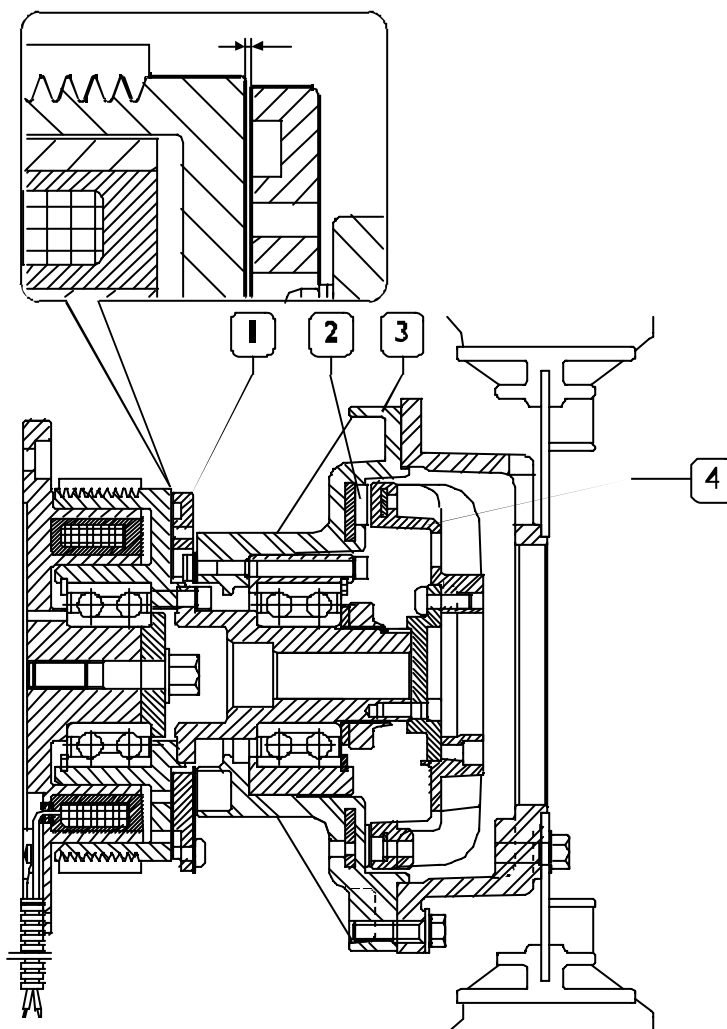


87170

In this condition the floating ring (1) is at rest, fan movement is therefore induced by the 4 magnets (2) keyed into the support. The first speed is therefore always actuated and due to the effect of the magnetic field generated by the magnets (2), the fan can follow the output shaft speed up to 450 rpm. Higher output shaft speeds will produce a slipping between the support (3) and the keyed disk (4).

Aquila Trucks Centres

Fan with second speed on

Figure 196

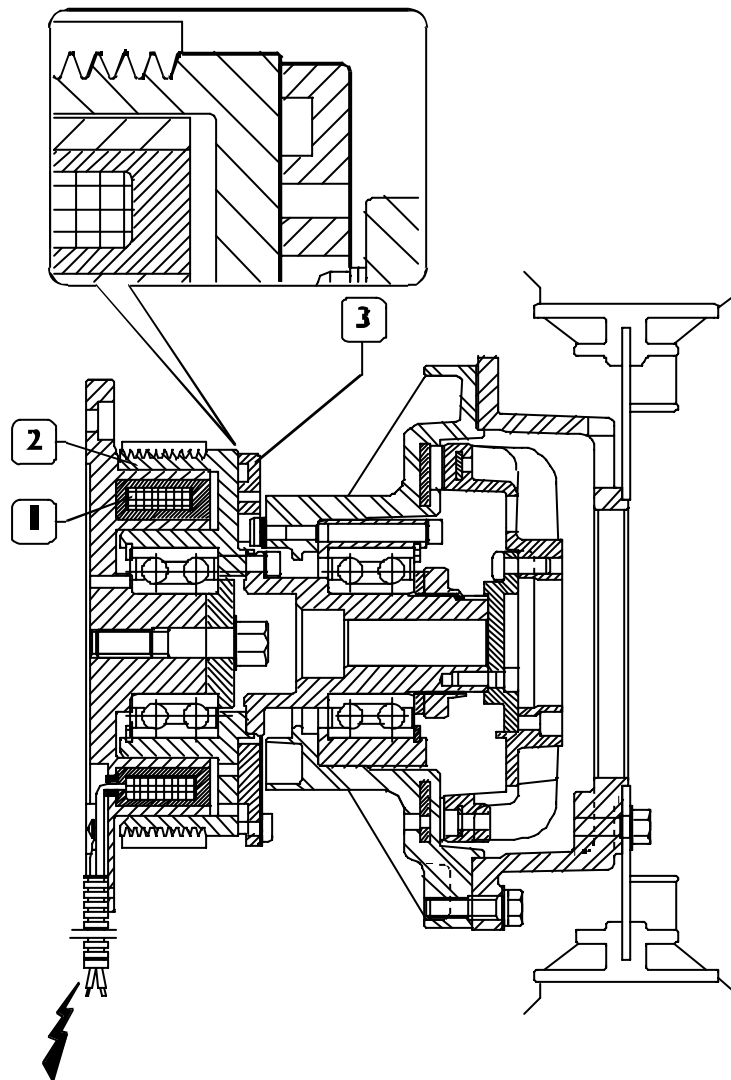

87171

The second speed is activated by the EDC control unit that controls coil (1), the magnetic field generated by the coil attracts the floating ring (3) to the pulley (2), thus making them integral.

Under this condition the fan speed is proportional to the output shaft speed.

Aquila Trucks Centres

Fan with electromagnetic junction (F3A - F3B)

The fan features two possible rotation speeds controlled by the EDC center by exciting the compressed air electro valve for slow speed and by coil (11) for second speed.

When neither low nor second speed is activated, the fan is drawn slowly by friction forces present (neutral position).

The parameters/systems that may require fan action via the BC center are as follows:

- Coolant temperature
- Conditioning system coolant pressure
- Intarder

Low speed is activated when:

- Engine coolant temperature reaches 80 _C and the intarder is cut in at deceleration power under 41% of maximum.
- Conditioner coolant pressure reaches 18 bars.


Second speed is activated when:

- Conditioner coolant pressure reaches 22 bars.
- Engine coolant temperature reaches 80 _C and the intarder is cut in at deceleration power over 41% of maximum.
- Engine coolant temperature is over 88 _C.

When second speed activation is required, the system pilots the fan for 5 seconds at low speed, then second speed is cut in. This operating logic enables increasing belt and fan component reliability in time.

When fan low speed remains cut in for over 1 minute, the system activates second speed until control parameters return below action limits.

Figure 197

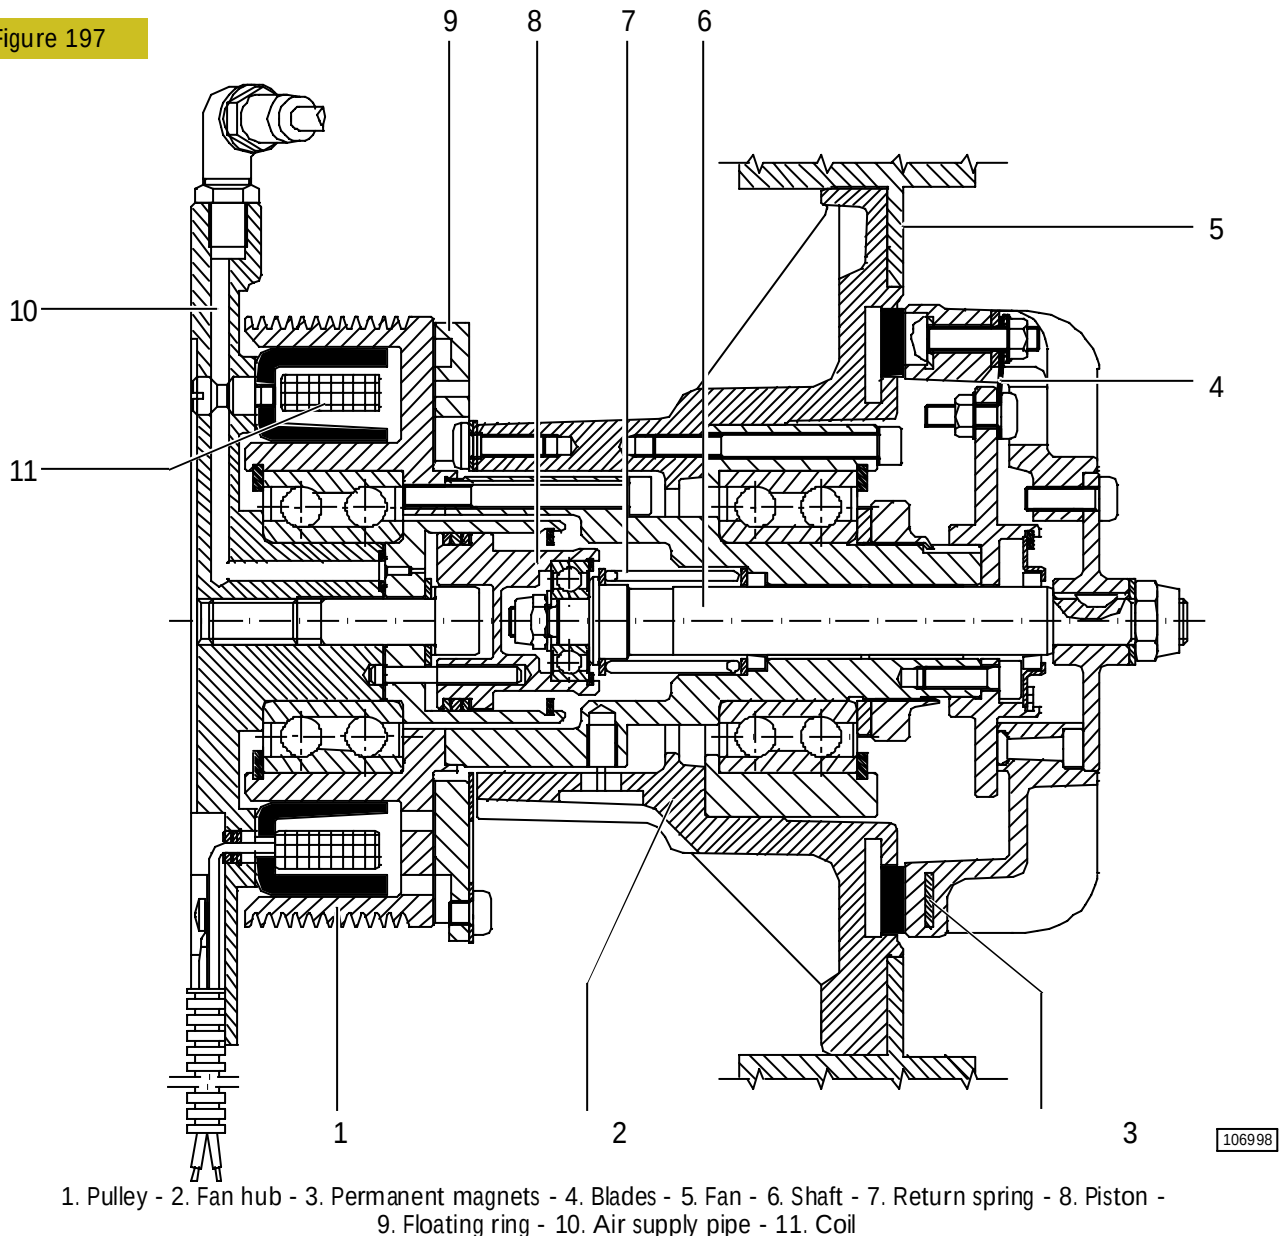


106998

Aquila Trucks Centres

Fan cut out (neutral position)

Figure 198

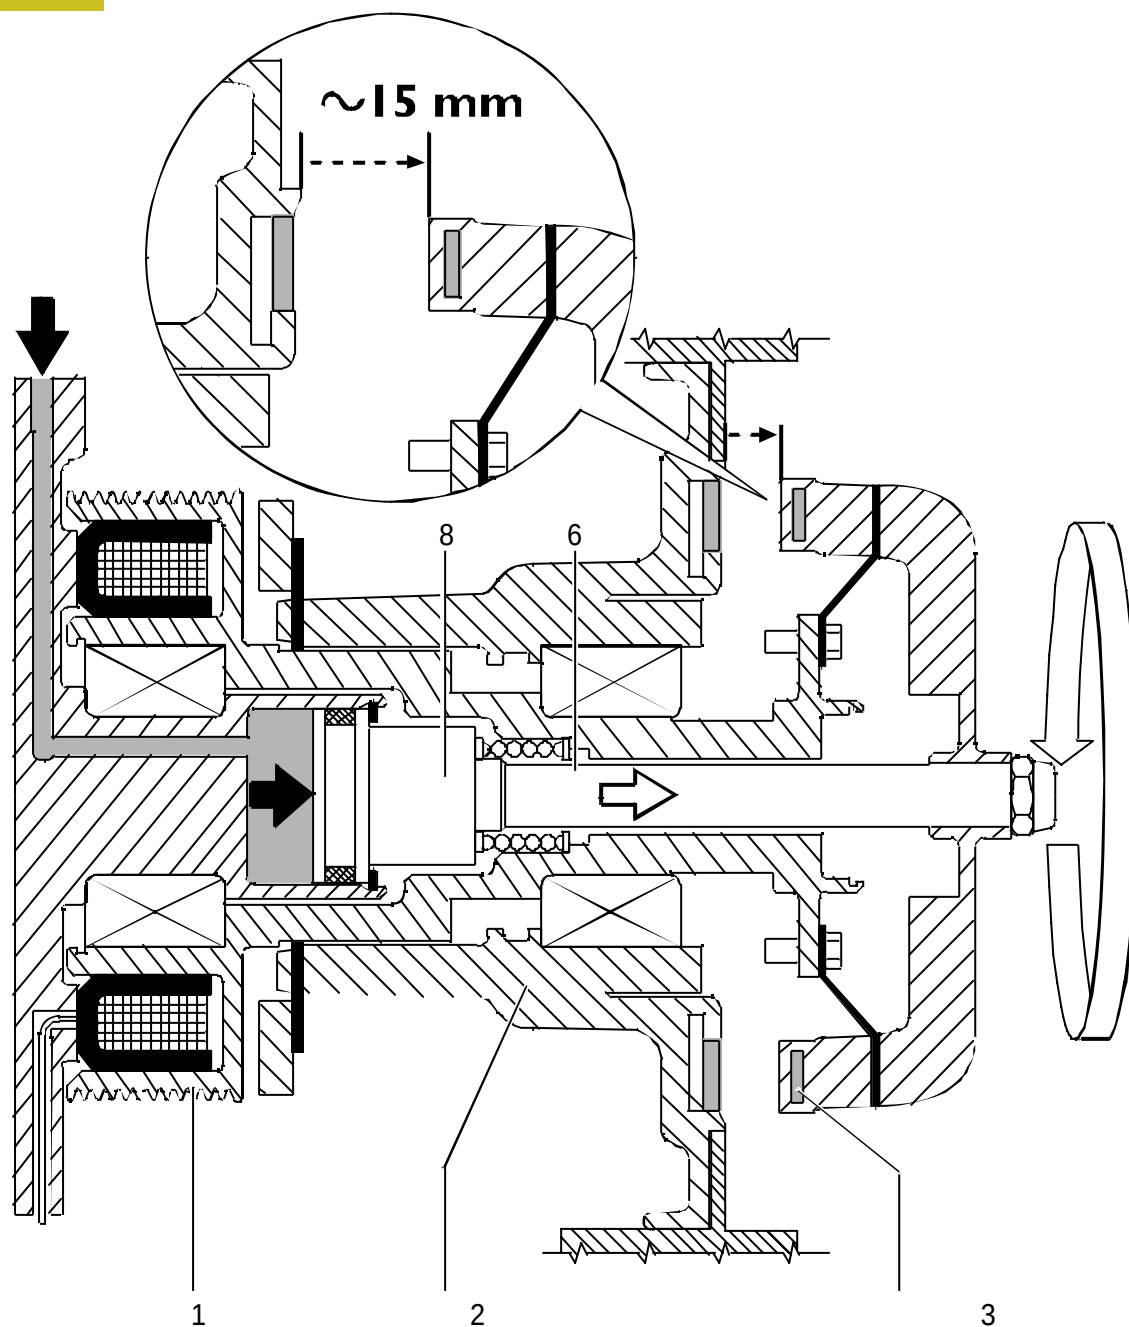

106999


When fan action is not required for proper engine operation, the EDC center pilots the compressed air electro valve to move piston (8), displaces permanent magnets (3) from fan hub (2). The magnetic field generated by magnets (3) is not enough to move fan hub (2) by induction.

The fan may rotate slowly due to friction present.

Aquila Trucks Centres

Fan with first speed engaged

Figure 199

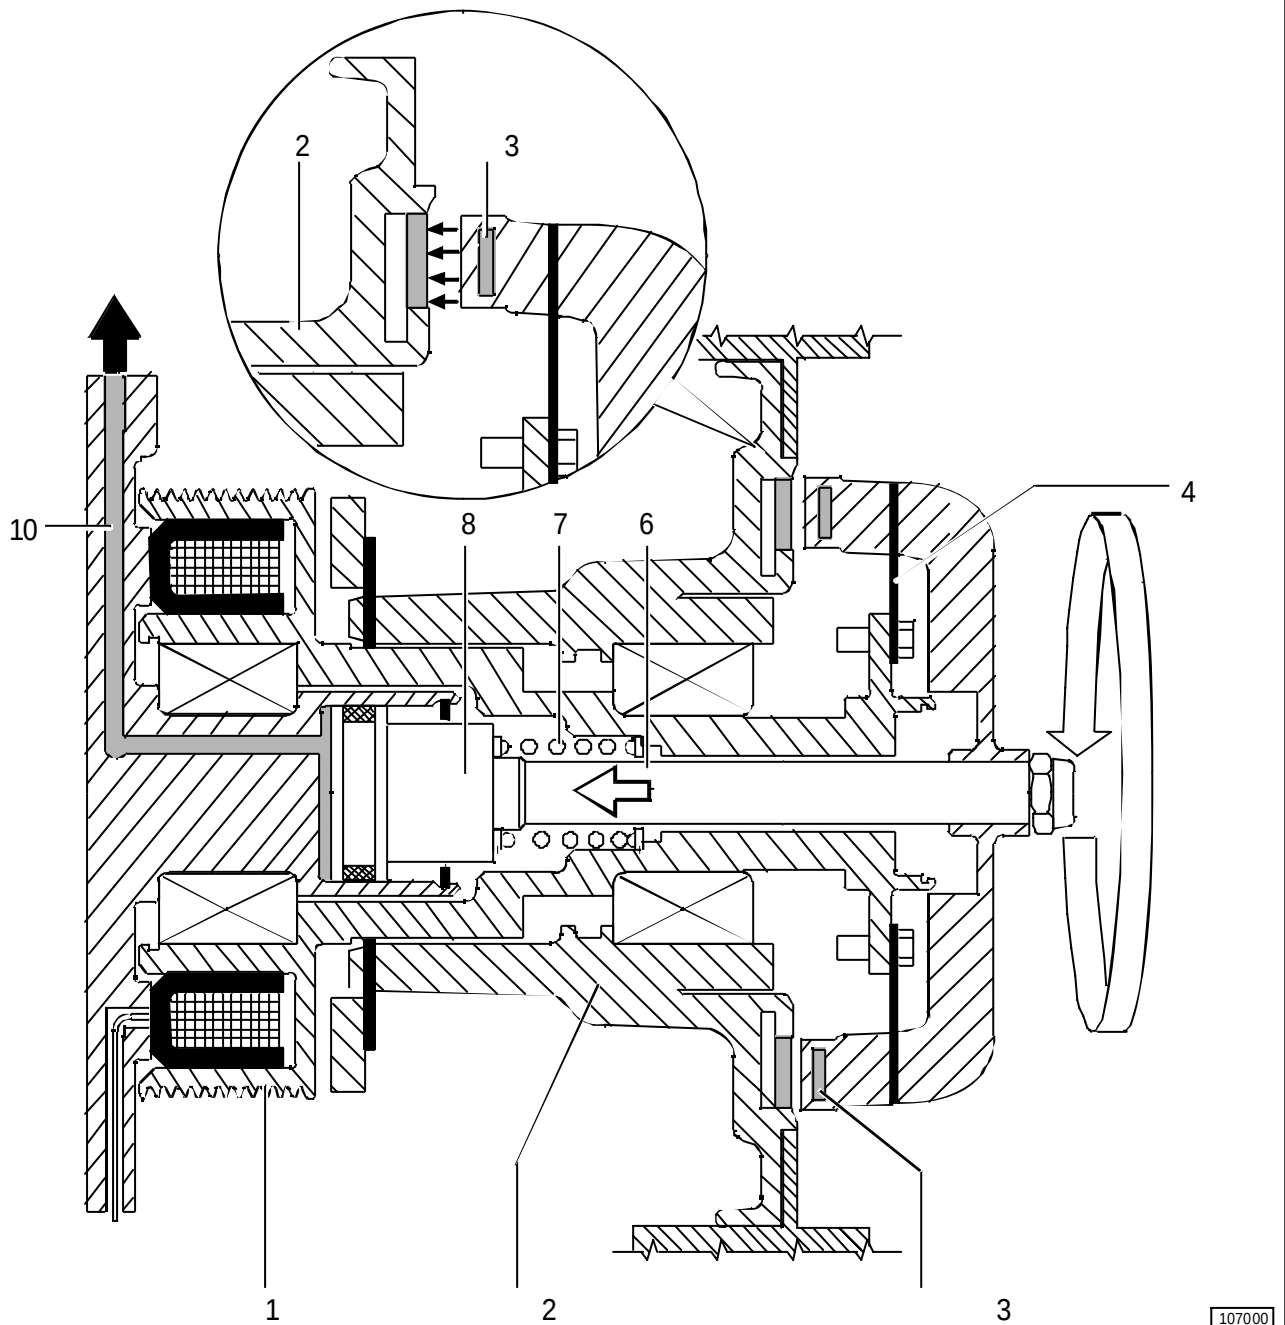

When low speed action is required, the EDC center discharge air from duct (10) through the compressed air electro valve; piston (8) moves and draws permanent magnets (3) towards fan hub (2). Piston travel is ensured by return spring (7) and blades (4).


The shaft rotates at the same speed as pulley (1) and the effect of the magnetic field generated by magnets (3) is to make fan hub (2) rotate at the maximum speed of 650 rpm.

For F2B the first speed is always connected since there are no pneumatic solenoid valve nor air exhaust system inside the assembly.

Aquila Trucks Centres

Fan with second speed cut it

Figure 200

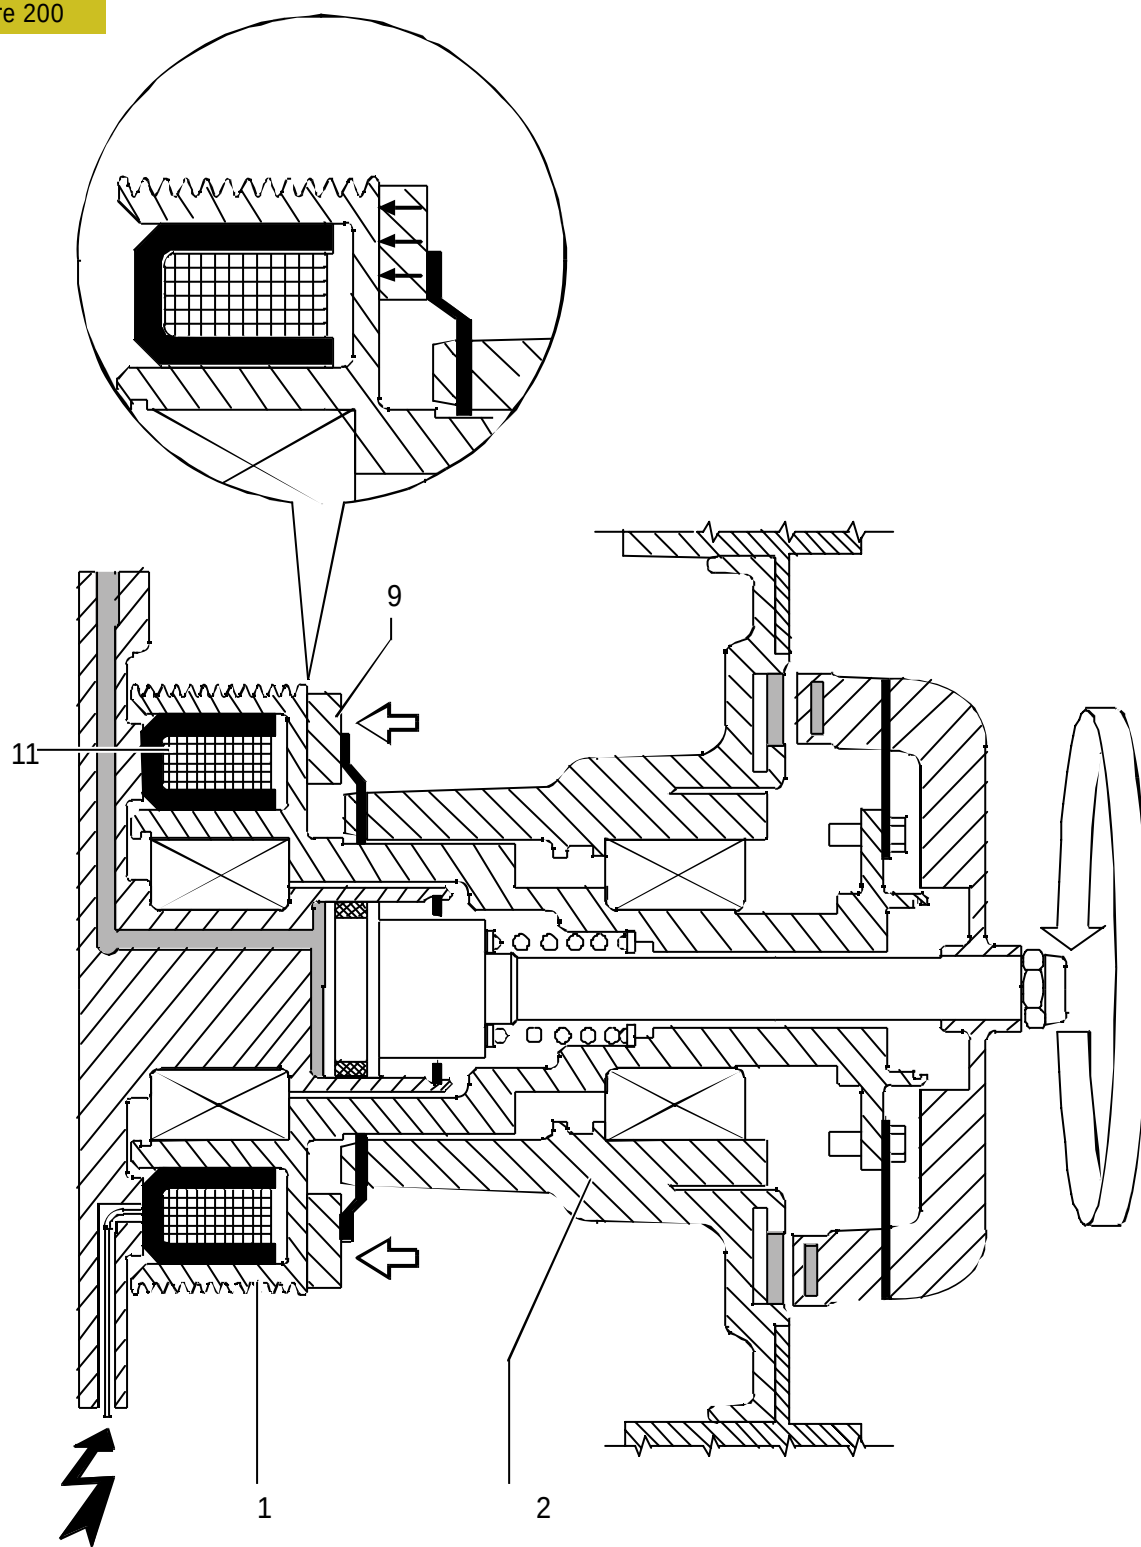


107001

When low speed is not enough to properly cool the engine, the EDC center pilots second speed cut-in by exciting coil (11). The magnetic field generated by the coil attracts fan hub (2) floating ring (9) to pulley (1) making the two units solidal. In this condition fan speed is the same as pulley speed.

Aquila Trucks Centres

Fan control diagram

Figure 201

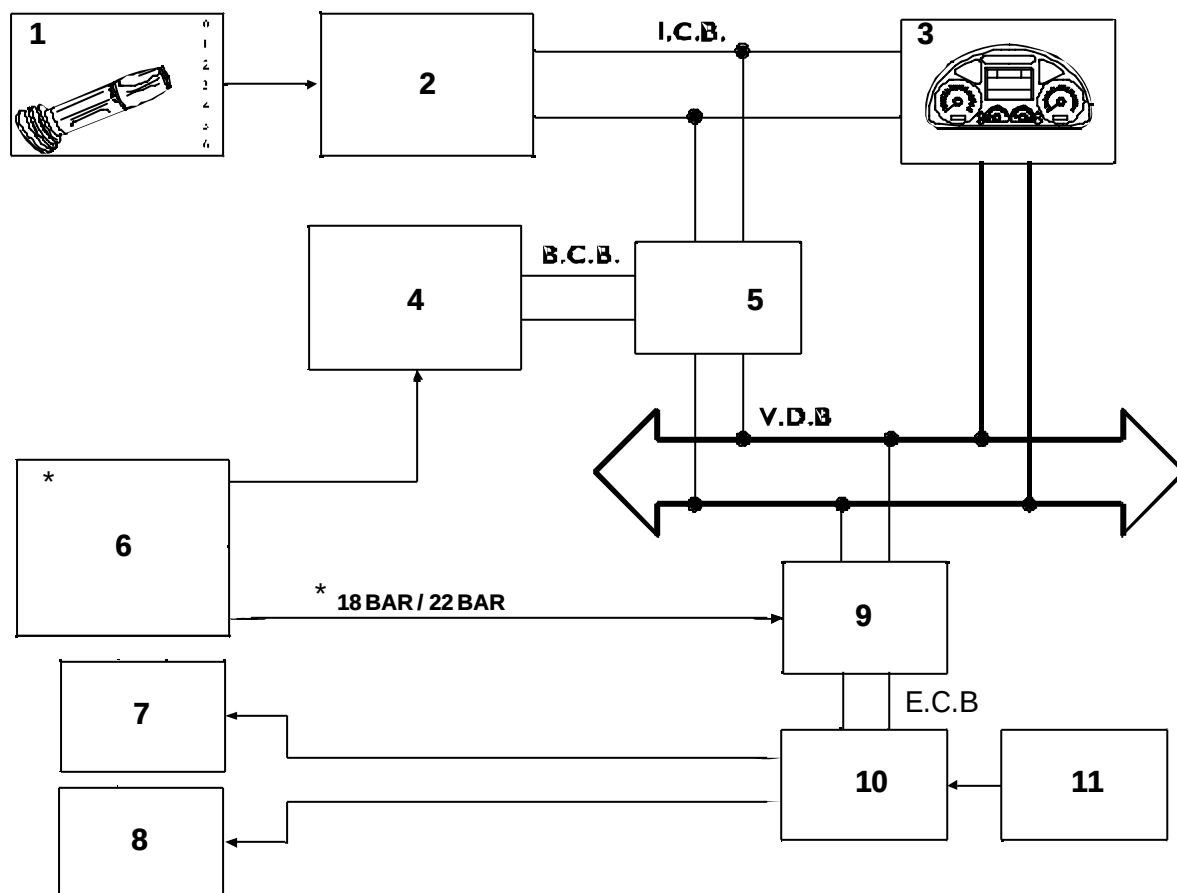

1. Engine brake switch - 2. Steering Wheel Interface - 3. Instrument Cluster - 4. Conditioner - 5. Body Computer - 6. Conditioner pressure switches - 7. Fan electro valve - 8. Fan electro valve - 9. VCM - 10. EDC - 11. Water temperature sensor - * The pressure switches involved in fan control are the (18-22 bar) conditioner coolant pressure warning ones.


Defect identification

Defect	Cause
The fan always rotates at low speed	- Air supply pipe clogged - Air supply pipe broken
The fan does not rotate above 650 rpm (low speed)	- Center output does not pilot the coil - Interruption of the center to coil wire - Coils short-circuited - Improper mechanical parts sliding
The fan always rotates at second speed	- The center output always pilots the coil - Improper mechanical parts sliding

Aquila Trucks Centres

Electric fan wear check

Figure 202

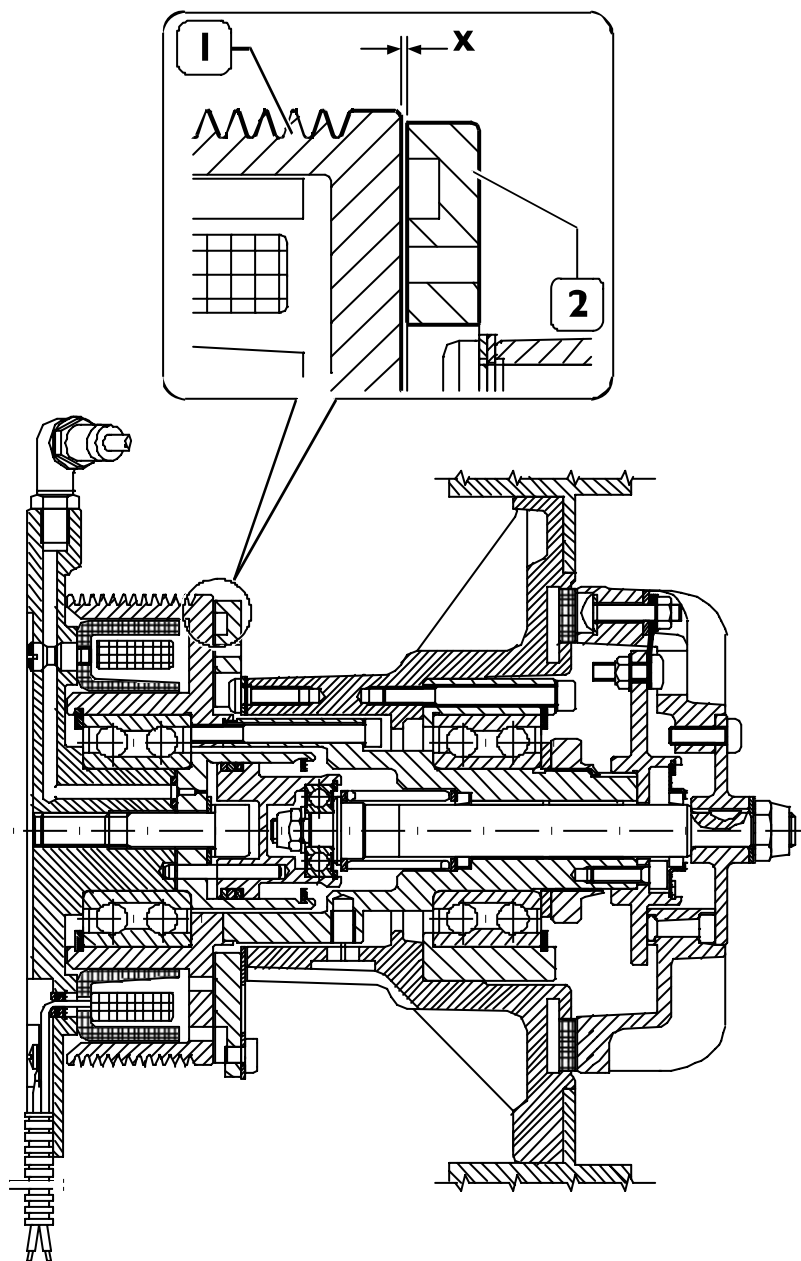

77469

In rest conditions, gap X between pulley (1) and floating ring (2) (subject to wear) must range between 0.5 and 1.2 mm. Wear up to maximum gap thickness of 2.5 mm is permitted.

Aquila Trucks Centres

VCM (VEHICLE CONTROL MODULE) ELECTRONIC CONTROL UNIT

This Electronic Control Unit is interfaced with the other on-board electronic systems through CAN lines:

- ECB - Engine Control Bus
- VDB - Vehicle Data Bus
- ICB - Instrument Cluster Bus
- FMB - Fuhrpark Managemant Bus

Among the Electronic Control Unit input signals we find those of the accelerator pedal sensor, deviator for signalling (ABS) stop, switch on clutch and switch for Economy function, which previously were connected to the EDC Electronic Control Unit.

The Immobilizer Elec. Cont. Unit is eliminated and the immobilizer antenna is connected to the Elec. Cont. Unit VCM.

The VCM operates also Cruise Control which before was connected onto Body Computer.


VCM main functions

- Driveability: accelerator pedal control and generation of torque requirements via CAN towards the engine according to the driveability maps, Required torque = f (Engine Speed, Accelerator Pedal Position).
- Arbitration of the requirements of Torque and Engine Speed: from external systems (Brakes, Transmission, Fitters, etc.) towards the engine during the phases of braking, changing gear, operations in PTO mode, VCM determines the requirement with the highest priority and transmits the corresponding requirement of Torque or Engine Speed via CAN to the engine.
- Speed limiter: (main, programmable and secondary) VCM determines the extent of the requirement of torque towards the engine ensuring that the active speed limits are not exceeded.
- Cruise Control: VCM adjusts the vehicle speed according to the set Cruise speed by modulating the requirement of torque transmitted via CAN to the engine (torque limitation or control), via the requirement of turning on the exhaust brake and Intarder, integrating the control functions of the conditions of engagement and release.
- Adaptive Cruise Control: VCM reads the data of the Radar relating to the distance of the preceding vehicle, adjusts the vehicle speed according to the set Cruise speed, keeping the distance selected by the driver, modulating the requirement of torque transmitted via CAN to the engine (torque limitation or control), via the requirement to turn on the exhaust brake and Intarder, integrating the functions of control of the conditions of engagement and release and in case of risk of collision activating the conventional brakes (interacting with the EBS system).
- Engine starting / stopping control logic and associated safety devices: requirement control from cab, engine bay, fitter connector.
- Power take off (PTO mode): management of the requirement to adjust engine speed via CAN in accordance with the conditions relating to the PTO 0, 1, 2, 3 (pre-programmed) modes with actuation by the engine.
- Low Idle control logic: dynamic High Idle control with requirement relating to the engine via CAN the VCM controls the requirement for engine speed adjustment via CAN with actuation by the engine.
- Exhaust Brake activation logic: control of driver requirements and arbitration of the requirements from external systems (Brakes, Transmission, Fitters, etc.), transmission of the value via CAN and actuation by the engine.
- Engine cooling fan activation logic (Baruffaldi): management of control logic, transmission of the activation request via CAN and actuation by the engine.
- ZF Simple H Gearbox: gearbox control with solenoid activation to pass from low range and high range in conditions of safety
- ALLISON Gearbox: standard CAN interface control on lever side, external requirements (Fitters) and for display logic on Instrument Panel.
- New EUROTRONIC lever (used for ALLISON too): driver requirement control for sending to EUROTRONIC gearbox and recovery in case of breakdown.
- Vehicle security system: Immobilizer
- Communication on CAN bus: Point-to-point communication from external bus for dedicated connection to apparatuses of Fleet Management in accordance with Bus - FMS. Interface for connection to Tester for diagnosis via CAN of the on-board systems.
- Others: Interface towards Instrument Panel on dedicated bus (ICB on Heavy Range) for information / controls to / from Driver. HW signal generation for fitter connector.

Aquila Trucks Centres

Electronic Control Unit location

Figure 203

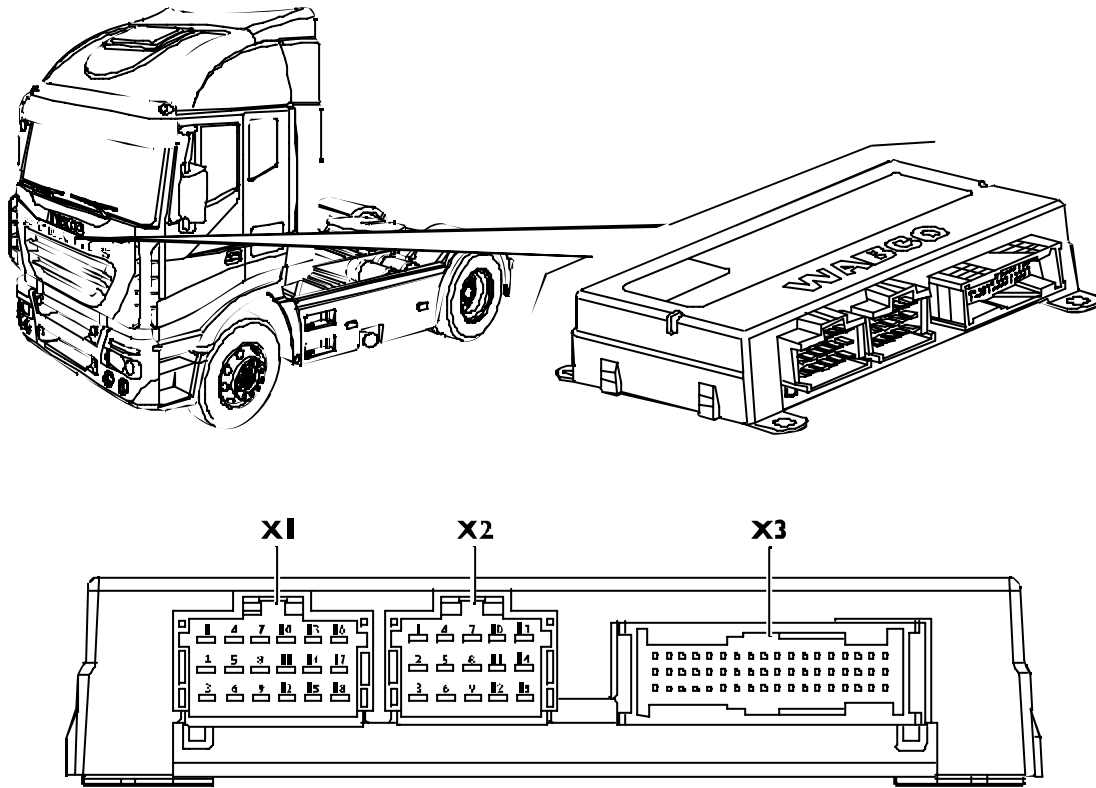

108925

Pin - out

Connector X1

Pin	Description	Cable color code
1	Immobiliser aerial input signal	-
2	-	-
3	Immobiliser aerial output signal	-
4	Positive +30 (from IBC3)	7993
5	Positive +15 (from IBC3)	8802
6	Ground	0000
7	Gearbox in neutral signal for body builders (ST14A)	8050
8	Power to ACC (Adaptive Cruise Control) distance rule reached indicator warning light / Positive for splitter gear activation solenoid (9 speed gearbox)	6179/9973
9	EDC system faulty signal for cluster	6150
10	Handbrake engaged signal for bodybuilders (ST14A)	6656
11	Power to ACC (Adaptive Cruise Control) distance alarm buzzer / Positive for normal gear activation solenoid (9 speed gearbox)	1166/9974
12	Clutch status signal for bodybuilders (ST14B)	9963
13	Brake light signal for bodybuilders (ST14A)	1165
14	Signal indicating programmable speed threshold (PST) for bodybuilders (ST14B)	5542
15	Ground controlling starter motor relay	0008
16	Positive controlling starter motor relay	8888

Connector X2

Pin	Description	Cable color code
7	Positive 5 V for distance control with ACC (Adaptive Cruise Control) at great distance	8179
8	Return from distance selector with ACC (Adaptive Cruise Control)	6178
9	Ground cable for ACC distance control	0139

Aquila Trucks Centres

Pin - out

Connector X3

Pin	Description	Cable color code
1	CAN L line (VDB)	White
2	CAN H line (VDB)	Green
3	-	-
4	Ground from coolant pressure indicator switch (22 bars)	0583
5	Ground from coolant pressure indicator switch (18 bars)	0582
6	-	-
7	Control cable for activating ACC	0179
8	Ground from switch indicating gearbox in neutral	8050
9	-	-
10	Ground from engine brake wiring switch (associated with accelerator pedal release)	0082
11	-	-
12	Positive from ignition key terminal 50 (ignition control)	8888
13	Second speed limiter engagement signal from body builders (ST14B)	0172
14	Positive from brake indicator switch (brake pedal pressed - main brake lights)	8153
15	Positive from brake indicator switch (brake pedal released - secondary brake lights)	8158
16	-	-
17	Positive for accelerator pedal sensor	5158
18	-	-
19	Can H line (ECB)	White
20	Can L line (ECB)	Green
21	-	-
22	-	-
23	Ground from switch (N) for neutral position gear with automatic gearbox	0147
24	Ground from switch (D) for forward gears with automatic gearbox	0125
25	Ground from switch (D) for forward manoeuvre gears with automatic gearbox	0127
26	Engine stop signal (ST14A pin 2)	0151
27	Engine start-up signal from diagnostic interface/body builders (ST14A)	8892
28	Ground from start-up enablement switch	8892
29	Signal from cab release indicator switch	0096
30	Ground from Cruise Control cut-out switch (OFF)	8154
31	Ground from Cruise Control resume switch (RESUME)	8155
32	Ground from Cruise Control speed increase switch (SET+)	8156
33	Ground from Cruise Control speed decrease switch (SET-)	8157
34	Signal from switch indicating engine idling	0159
35	Signal from accelerator pedal sensor	5157
36	-	-
37	CAN H Line (FMB)	White
38	CAN L Line (FMB)	Green
39	-	-
40	-	-
41	Ground from switch (R) for reverse gears with automatic gearbox	0126
42	Ground from switch (D) for reverse manoeuvre gears with automatic gearbox	0128
43	-	-
44	-	-
45	Ground for power take-off 3 request from body builders (ST14A)	0123
46	Ground for power take-off 2 request from body builders (ST14A)	0123
47	Ground for power take-off 1 request from body builders (ST14A)	0131
48	Ground from signalling switch connection of slow gears (9 gear changes)	0117
49	Cruise Control selection signal (INT / EXT) from body builders (ST14A)	0158
50	Signal from switch (SL) for speed limiter with automatic transmission	9968
51	Signal from switch on clutch for VCM (clutch cylinder 20% compressed)	0160
52	Ground from accelerator pedal idle switch	0158
53	Ground for accelerator pedal sensor	0157
54	VCM control unit K line (diagnostic connector pin 12)	2292

Aquila Trucks Centres

IMMOBILIZER

Description and operation

Vehicles are provided with an immobilizer engine lock that is activated automatically by removing the starter key, to increase protection against theft. Keys are provided with an electronic transponder that transmits a coded signal to an ICU centre that only enables engine start at code recognition.

IMMOBILIZER central unit on Euro 4 vehicles is integrated into VCM.

Main technical features are:

- D IMMO central unit integrated into VCM
- D New keys (colour BLUE)
- D Min 2 max 7 programmable keys
- D New antenna connector


VCM / Immobilizer procedures

Replacing a key Adding a key	1) Cut the key into based on existing mechanical profile 2) Provide yourself with Code card 3) Go to environment ENGINE / VCM-IMMOBILIZER / SPECIFIC FUNCTIONS / KEY STORING
Replacing all keys (loss)	CAUTION! <u>In this procedure, also add working remaining keys, otherwise they will not be enabled any more at start-up.</u> Order the new keys and program them as described above. (Replacing or Adding a key)
Replacing VCM-IMMOBILIZER central unit (NOT COMMUNICATING WITH DIAGNOSIS DEVICE)	1) Replace ECM central unit. 2) Go to environment ENGINE \ ECM-EDC7 UC31 / SPECIFIC FUNCTIONS / ACKNOWLEDGING NEW ECM (enter the electronic code that is present on code card). <u>N.B: This operation is necessary to have the new ECM central unit acknowledge the VCM that is present on the vehicle.</u> D If old VCM is out of order and is not communicating any more, ECM must also be either replaced or re-programmed through remote services (Immo code erased). <u>N.B: Only for VCM 5.4 versions</u> D If old VCM is out of order and is not communicating any more with the other vehicle communication BUSES, <u>the emergency start</u> via electronic code insertion is <u>not possible</u> .
Replacing VCM-IMMOBILIZER central unit (NOT COMMUNICATING WITH DIAGNOSIS DEVICE)	1) Cut the keys into based on existing mechanical profile. 2) Perform following operations: a) Go to environment / ENGINE \ VCM IMMOBILIZER / PROGRAMMING / OTHER / REPLACING VCM b) Go to environment ENGINE / VCM IMMOBILIZER / SPECIFIC FUNCTIONS / KEY STORING (2 new keys) c) Mount the old VCM to make VCM / ECM disconnection (present 5.4 version) d) Go to environment ENGINE / VCM IMMOBILIZER / SPECIFIC FUNCTIONS / ACKNOWLEDGING NEW VCM e) Remount the new VCM and perform the start-up operation.

Aquila Trucks Centres

Componentry

Figure 204

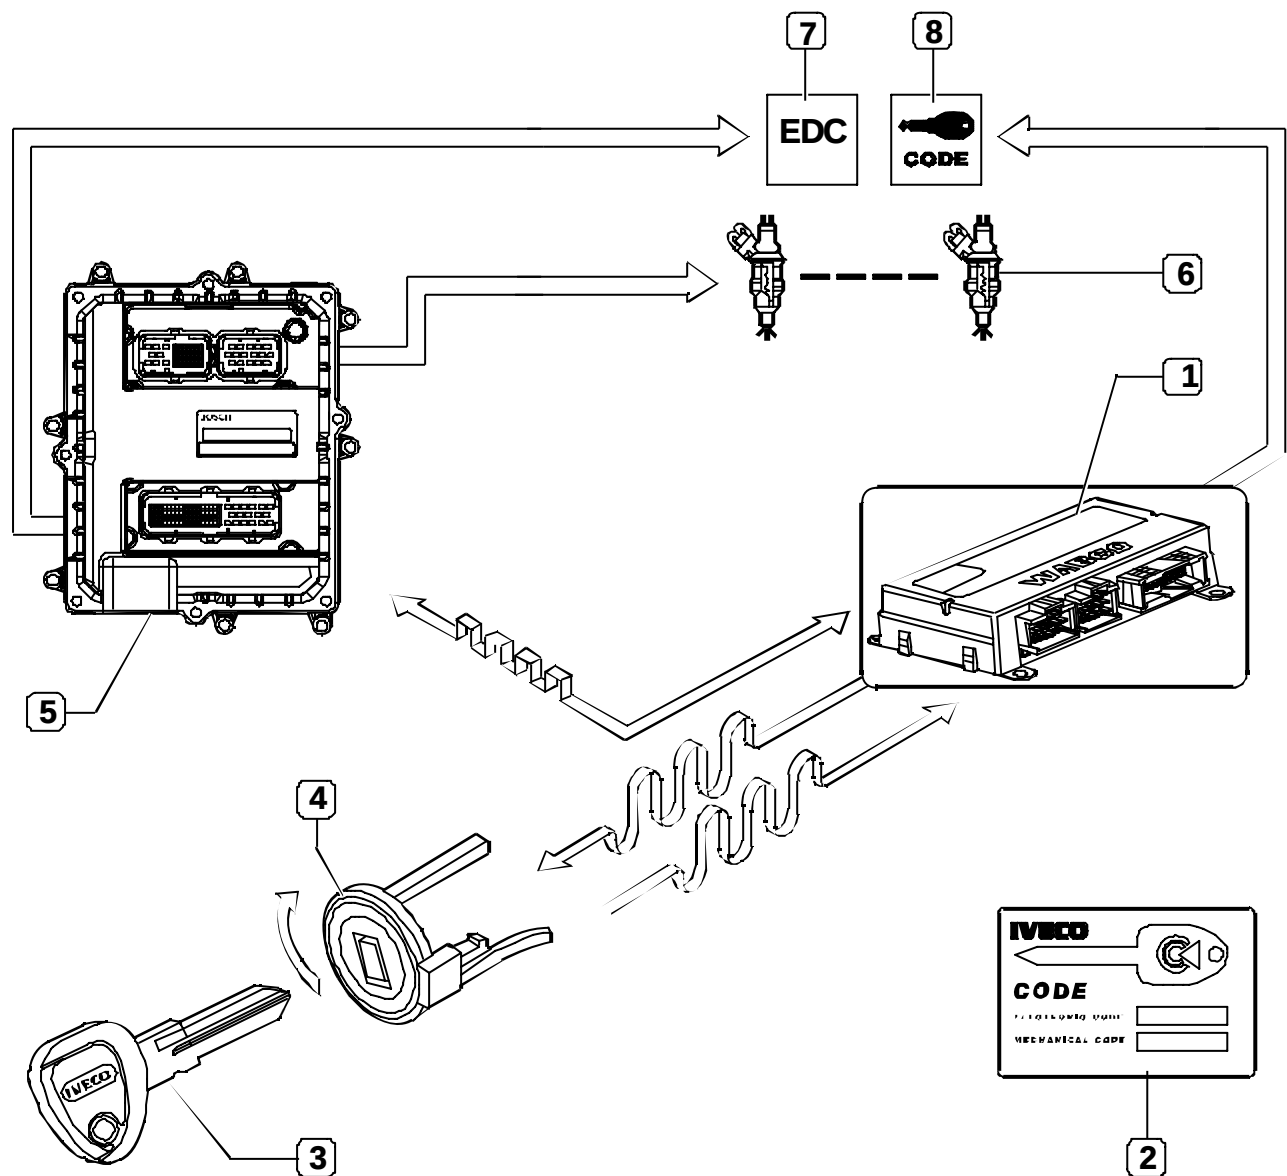

108926

Componentry

Ref.	Description
1	Central unit VCM
2	Code-card
3	Electronic key
4	Antenna
5	EDC injection control electronic centre
6	Electro injectors
7	Indicator light EDC
8	IMMOBILIZER down warning light

Aquila Trucks Centres

ABS-EBL ANTI-LOCK BRAKE SYSTEM - ELECTRONIC BRAKE LIMITER SYSTEM

The ABS – EBL braking system is available as an alternative to the EBS system on 4x2 e 6x2 vehicles.

ABS Anti – Lock Brake System

Braking a moving vehicle and its deceleration and stopping distance are essentially dependant on adherence between tire and road surface. Improved braking with an efficient braking system can only be achieved by acting on tire friction features or road surface quality.

Improved braking with an efficient braking system can only be achieved by acting on tire friction features or road surface quality.

Even in optimum conditions, absolutely safe braking is not guaranteed when critical situations have to be coped with, such as low adherence due on a wet or iced road surface, which obliges the vehicle operator to moderate braking action to prevent possible wheel locks and consequent dangerous loss of vehicle control.

The ABS therefore has the function of ensuring vehicle stability in any braking condition by preventing wheel locks independently of road surface conditions and guarantee full exploitation of available adherence.

In essence, the ABS system:

- prevents wheel locks during vehicle braking in and road adherence conditions
- reduces stop distances
- offers operator safety for stability and vehicle control maintenance.

Electronic Brakes Limiter EBL

The EBL function controls rear axle wheel skidding by comparing it with front wheel speed.

Data entering the center are wheel rpm and braking pressure measured by the pressure sensor installed upstream the rear axle ABS modulators.

The center uses these data to calculate vehicle speed and deceleration, rear axle wheel skid and minimum deceleration required.

The EBL function is activated with rear ABS modulators maintaining set pressure when the operators applies excess braking force than required for vehicle load conditions, in essence when vehicle deceleration and rear axle skid thresholds are passed.


Aquila Trucks Centres

Operating logic

The objective of the electronic center is to slow down the vehicle as fast as possible, guarantee its stability and avoid the tendency to lock wheels. When braking, the center is informed of the following to reach these objectives:


- braking intensity required by the operator via the rear axle pressure sensor
- slowing reaction due to pressures made available via signals from the speed sensors.

Ongoing monitoring and processing of these data referred to the objective set required activation of rear axle modulating valves and consequent braking optimization.

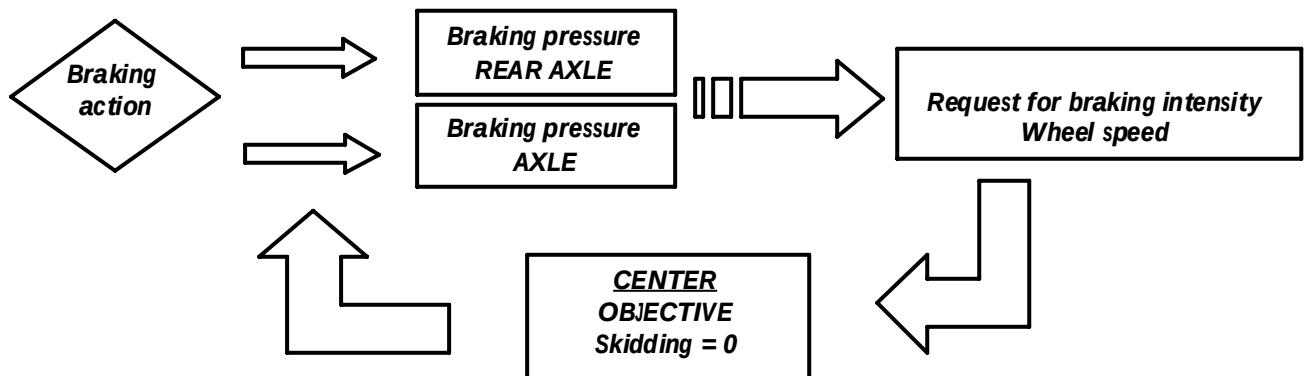


ABS electronic center

Figure 205

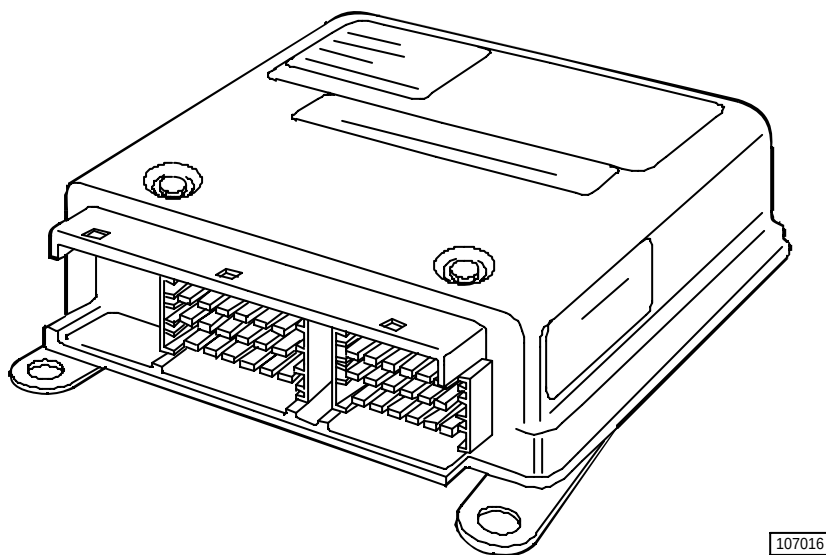

107016

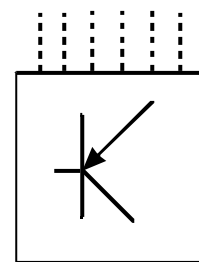

Manages the braking system by setting deceleration to the parameters measured by the various system components.


It communicates with on-board electronic systems via a CAN line and is connected through two polarized connectors.

Though offering the possibility of a blink code displayed via the ASR warning light for preliminary diagnosis, the electronic center is provided with an advanced self-diagnosis system capable of identifying and storing any intermittent anomaly to an operating system subject to environmental conditions, and ensuring proper and reliable repair.

Aquila Trucks Centres

Pin – out ABS center

Figure 206

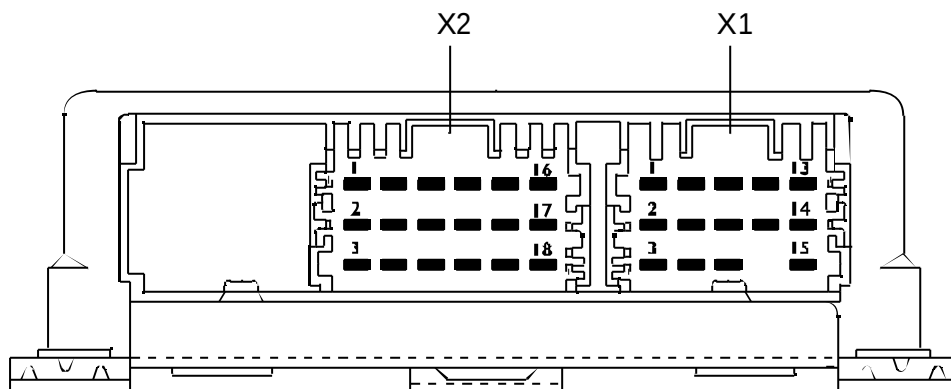

107017

Connector X1

Pin	Description	Cable color code
1	CAN L line (VDB)	Green
2	Safety signal sensor for maximum braking bridge with axle failure with ABS	6245
3	CAN H line (VDB)	White
4	Ground	0000
5	Ground from switch for ABS exclusion	0049
6	Ground from switch ASR exclusion	0048
7	Positive +15	8847
8	Positive +30	7710
9	Ground	0000
10	K line (4-pin diagnosis connector)	2299
11	-	-
12	9/15-pin safety bridge (only when connected X1 is not connected)	-
13	-	-
14	-	-
15	-	-


Connector X2

Pin	Description	Cable color code
1	Positive "EV" (unloaded)electro valve command front right wheel	9920
2	Positive "EV" (unloaded)electro valve command front left wheel	9931
3	Positive "EV" (unloaded)electro valve command front left wheel	9921
4	Positive "AV" (loaded)electro valve command front right wheel	9918
5	Positive "AV" (loaded)electro valve command front left wheel	9929
6	Positive "AV" (loaded) electro valve command front left wheel	9919
7	Ground for ASR electro valve	0260
8	Positive "EV" (unloaded) electro valve command rear right wheel	9930
9	Positive "AV" (loaded) electro valve command rear right wheel	9928
10	ABS speed sensor front right wheel	5571
11	ABS speed sensor rear left wheel	5572
12	ABS speed sensor front left wheel	5570
13	ABS speed sensor front right wheel	5571
14	ABS speed sensor rear left wheel	5572
15	ABS speed sensor front left wheel	5570
16	Positive ASR electro command valve	9260
17	ABS speed sensor rear right wheel	5573
18	ABS speed sensor rear right wheel	5573

Aquila Trucks Centres

COMMON COMPONENTS
A.P.U. (Air processing unit)

Figure 207

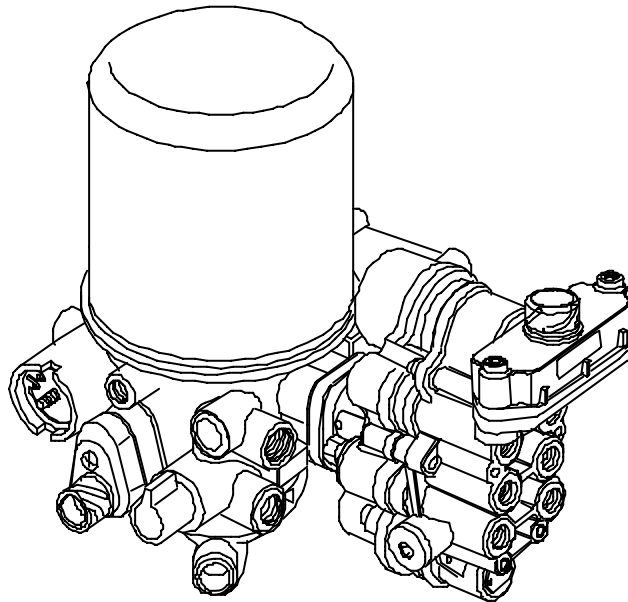


107020

It consists of a drier provided with a filter regeneration timer and a 4-way protection valve incorporating a pressure reducer. The purpose of the drier is to purify and dry compressed air by adjusting system pressure to its rated value. The 4-way protection valve distributes air con the various circuits ensuring their operating pressure even in the event of breakdowns. This component is used in all systems and is rated at $10.5 + 0.2$ bars; for mobile bowl CM vehicle setting is $12.5 + 0.2$ bars. The APU contains two sensors connected to the MUX system for axle pressure display on the Cluster.


Pneumatic connections	Electric connections
11 - From air tank to trailer	6.1 - Positive Pressure sensor
21 - To automatic coupling joint	6.2 - Ground Pressure sensor
22 - To moderable coupling joint	6.3 - Signal Pressure sensor
42 - From (drive) CBU	6.4 - Positive Solenoid
3 - Exhaust	6.5 - Negative Solenoid

Aquila Trucks Centres

Figure 208

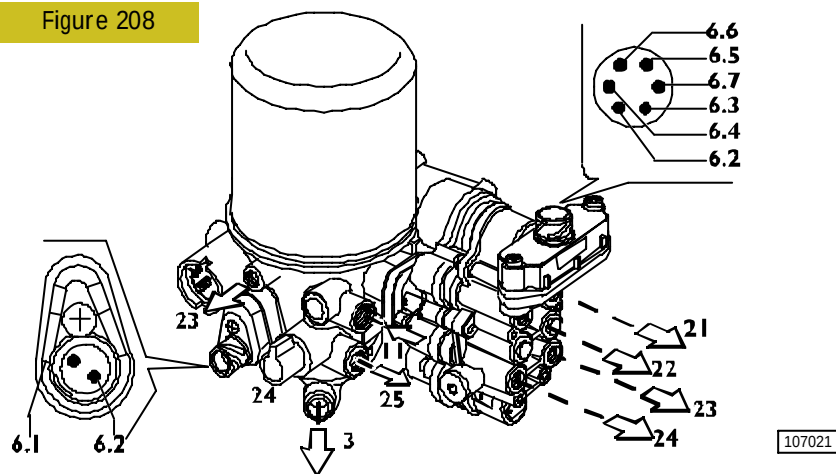

TECHNICAL VIEW

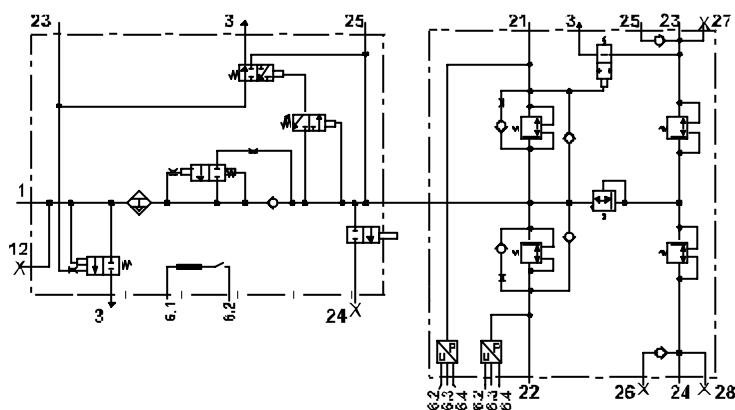

WIRING DIAGRAM

Compressed air connections

- 1 - Power from the compressor
- 24 - PTO
- 25 - Output for 10.5 bar compressed air suspension
- 23 - To the compressor for Energy Saving control
- 3 - Venting to outside air
- 21 - To the 10.5 bar axle reservoir
- 22 - To the 10.5 bar axle reservoir
- 23 - To the 8.5 bar parking brake manual distributor and trailer recharge and parking air reservoir
- 24 - To the 8.5 bar service reservoir

Drier electrical connections

- 6.1 - Negative for thermostatic resistance
- 6.2 - Positive for thermostatic resistance


4-way protection valve electrical connections

- | | |
|---|------|
| 6.2 - Rear circuit air pressure signal | 5561 |
| 6.3 - Positive for power | 5560 |
| 6.4 - Negative | 0000 |
| 6.5 - Front circuit air pressure signal | 5562 |
| 6.6 - Positive for power | 5560 |
| 6.7 - Negative | 0000 |

Aquila Trucks Centres

Duplex distributor (ABS/EBL systems)


Figure 209

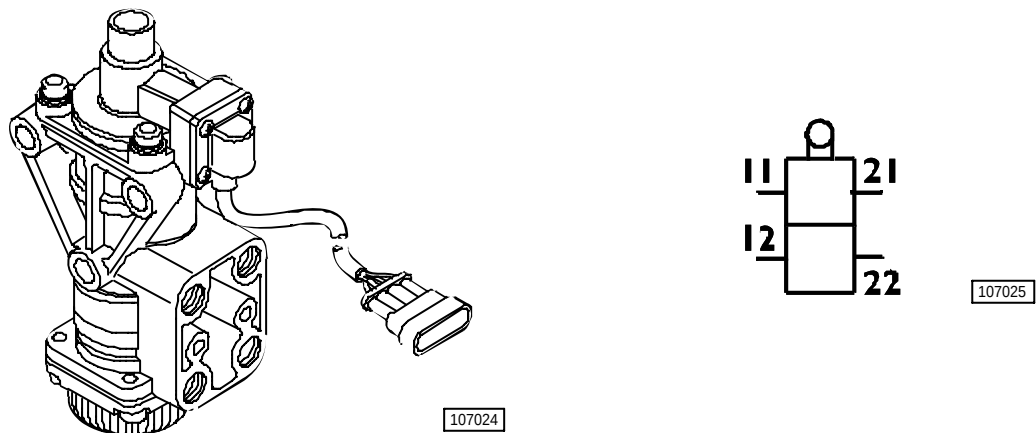

This non self-limited coaxial component consists of a compressed air and an electrical section, the former distributing braking control pressure to the front axle, the rear axle and the trailer control servo distributor.

The electrical section ensures sending the braking signal to the EDC center and to the stop light control relay.

Figure 210

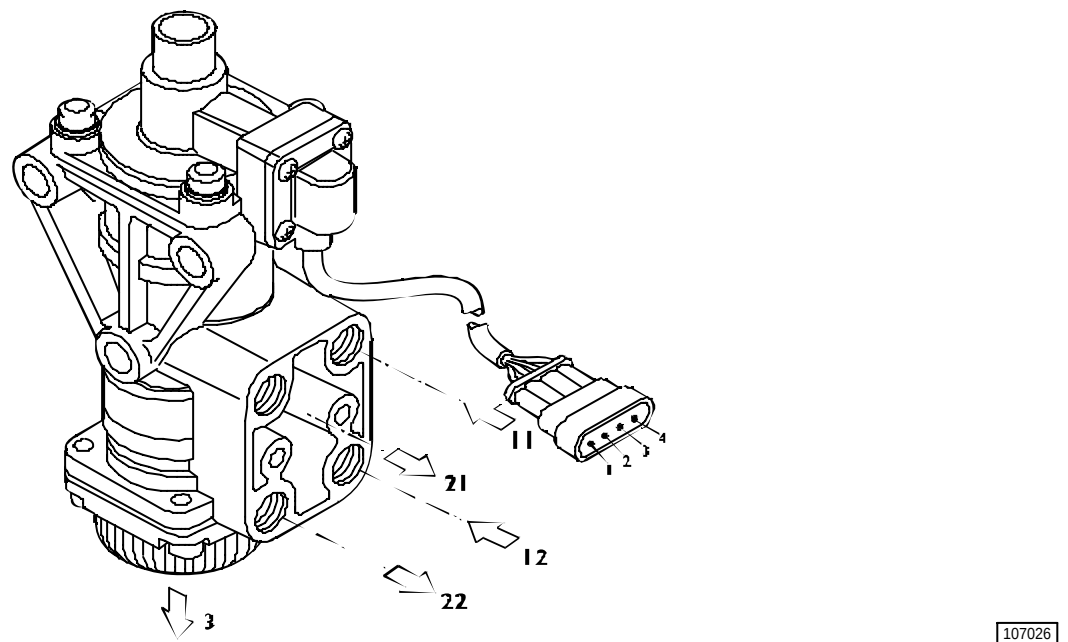**Compressed air connections:**

- 11 - Power from the axle reservoir
- 12 - Power from the axle reservoir
- 21 - Valve output to servo distributor relay valve and trailer control
- 22 - Valve output to axle relay
- 3 - Vent to outside air

Electrical connections:

- 1 - Positive for stop lights/EDC
- 2 - Input positive
- 3 - Positive for EDC
- 4 - Input positive

Aquila Trucks Centres


Electro valve ABS 78052

This normally open electro valve consists of a power coil and a discharge.


It is used to modulate braking pressure when wheel tendency to lock is detected by the speed sensor.

Vehicles with the EBS system feature two of them to control the front axle.


Figure 211

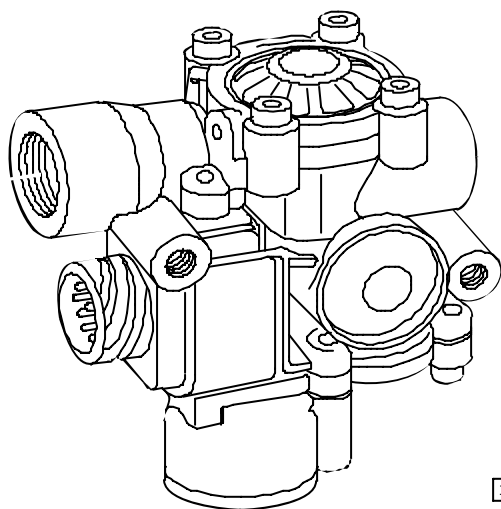

PERSPECTIVE VIEW

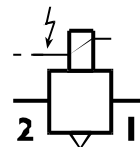

WIRING DIAGRAM

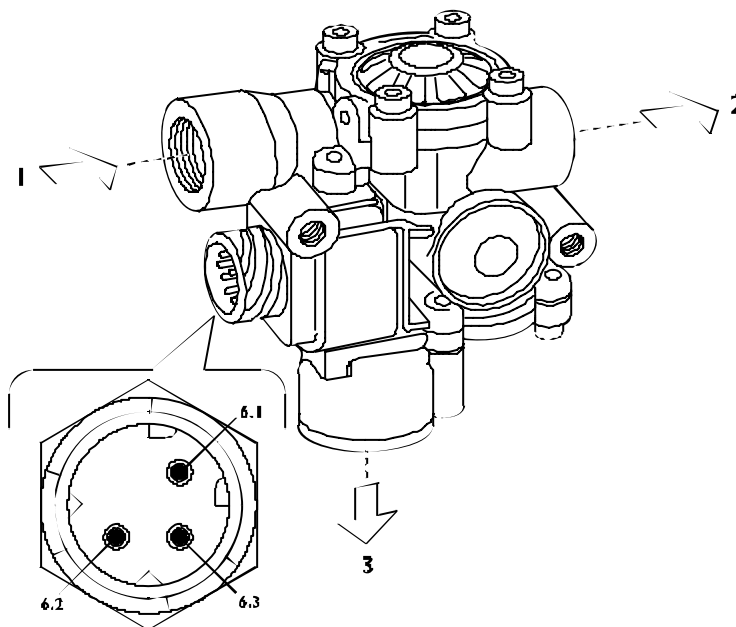

Compressed air connections

- 1 Proportional relay power
- 2 Axle brake cylinder output
- 3 Discharge

Aquila Trucks Centres

Electric connections

Wheel	Solenoid valve pin 78052	ABS		EBS	
		Cable code	ABS pin	Cable code	EBS pin
Left-hand front LHF	1	9919	X2/6	9919	X4/10
	2	0000	-	0122	X4/12
	3	9921	X2/3	9921	X4/11
Right-hand front RHF	1	9918	X2/4	9918	X3/1
	2	0000	-	0118	X3/3
	3	9920	X2/1	9920	X3/2
Left-hand rear LHR	1	9929	X2/5	-	-
	2	0000	-	-	-
	3	9931	X2/2	-	-
Right-hand rear RHR	1	9928	X2/9	-	-
	2	0000	-	-	-
	3	9930	X2/8	-	-

Aquila Trucks Centres

Phonic wheel and speed sensor 88001

Sensors continuously supply the electronic center with all the data it requires to properly pilot the electro valves.

Signals are obtained from magnetic flow lines that close through the teeth of a toothed wheel facing the sensor and rotating together with the wheel.

Passage from full to empty due to the presence or absence of the tooth causes sufficient magnetic flow variation to create induced electromagnetic force at sensor terminals and thus an alternating electrical signal that is sent to the electronic center.


The clearance between the sensor and wheel, called air gap, must obviously be at a pre-set value of 0.8 ± 1.6 mm for proper signals to be sent. Resistance of each sensor at connection terminals is between 1 and 2 k Ω .

The toothed wheel is called phonic wheel because the signal it generates has the same frequency as a sound wave.


The frequency of this signal serves to define wheel rotation speed.

Frequency variations, or the speed at which signals follow one another, define acceleration and deceleration rates.

Figure 212

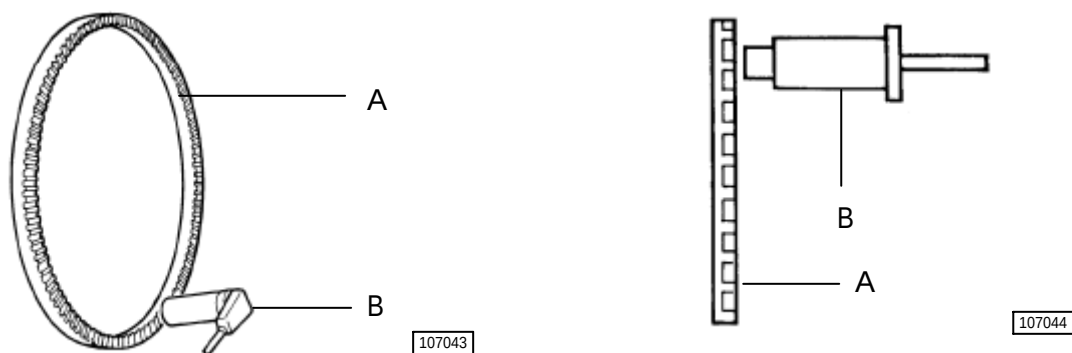

PHONIC WHEEL (A) AND SENSOR (B) PERSPECTIVE VIEWS


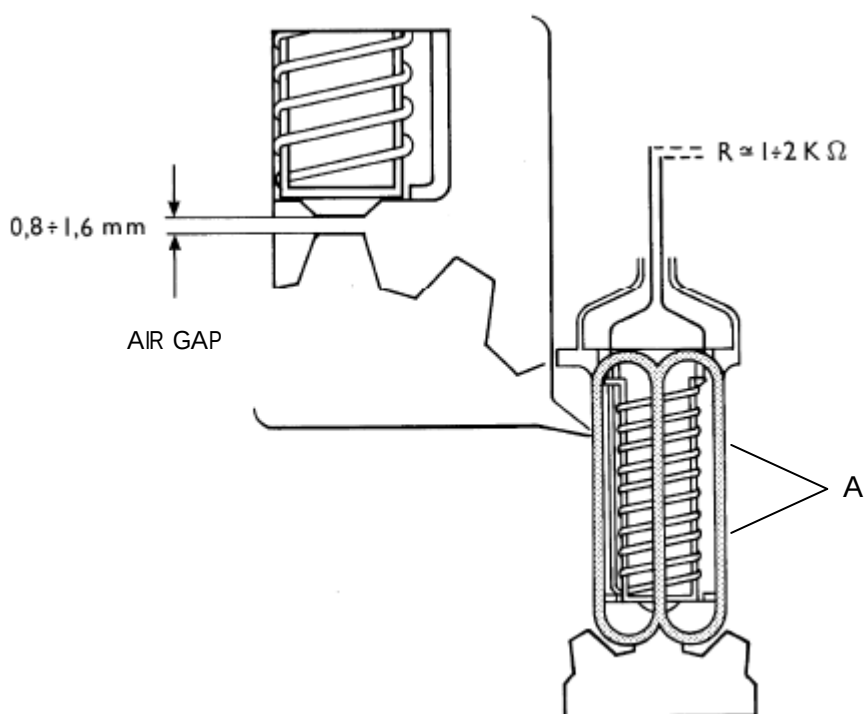


A. Magnetic flow lines

Aquila Trucks Centres

Low pressure switch

Figure 213

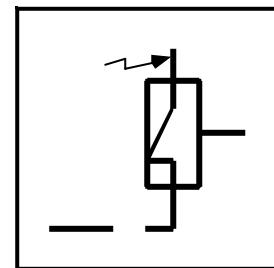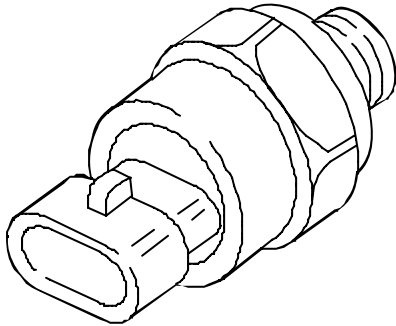

It warns the driver, by the warning lights on the CLUSTER, of low pressure in the following systems:

- Hand brake engaged - N.C. 6.6 ± 0.2 bars
- Low trailer pressure recharge - N.C. 6.6 ± 0.2 bars

A normally closed 6.6 ± 0.2 bar switch is also mounted on the axle reservoir to inform the electronic center of any axle circuit low pressure so as to inhibit differentiated axle braking in the ASR function.

Aquila Trucks Centres

ECAS SUSPENSIONS

Compressed air suspensions

Compressed air suspensions feature high flexibility, high vibration damping and with system self-adjustment constant frame to road level clearance independently of vehicle load, that can be changed as well as vehicle load height with a special push button provided for this purpose.

In addition to the known advantages offered by compressed air suspension, the ECAS system also features:

- minimized air consumption
- prompt response to adjustment
- simple systems
- top safety level
- complete system diagnosis.

The Electronically Controlled Air Suspension ECAS system provides automatic vehicle compressed air suspension rated level monitoring.

All the above operations are subject to operating conditions and connected system safety devices.

The ECAS electronic provides automatic frame ground clearance control via the real values supplied by the sensors, which are compared with stored rated data. In the event of setting deviations or variations, the electronic center pilots the electro-pneumatic units through which it corrects real levels versus those stored previously by the operator.

The system is provided with remote control for frame lifting/lowering and leveling and operations are possible both with the vehicle stationary and moving.

This unit also enables other frame setting level storage and retrieval when required by operating conditions.


Vehicle lifting, lowering and leveling before load and unload operations are via the remote control located on the operator seat side.

The remote control can be extracted from its support so these operations can also be performed from ground level.

When unloading heavy loads or containers with a crane, the frame can be lowered completely.

Aquila Trucks Centres

Figure 214

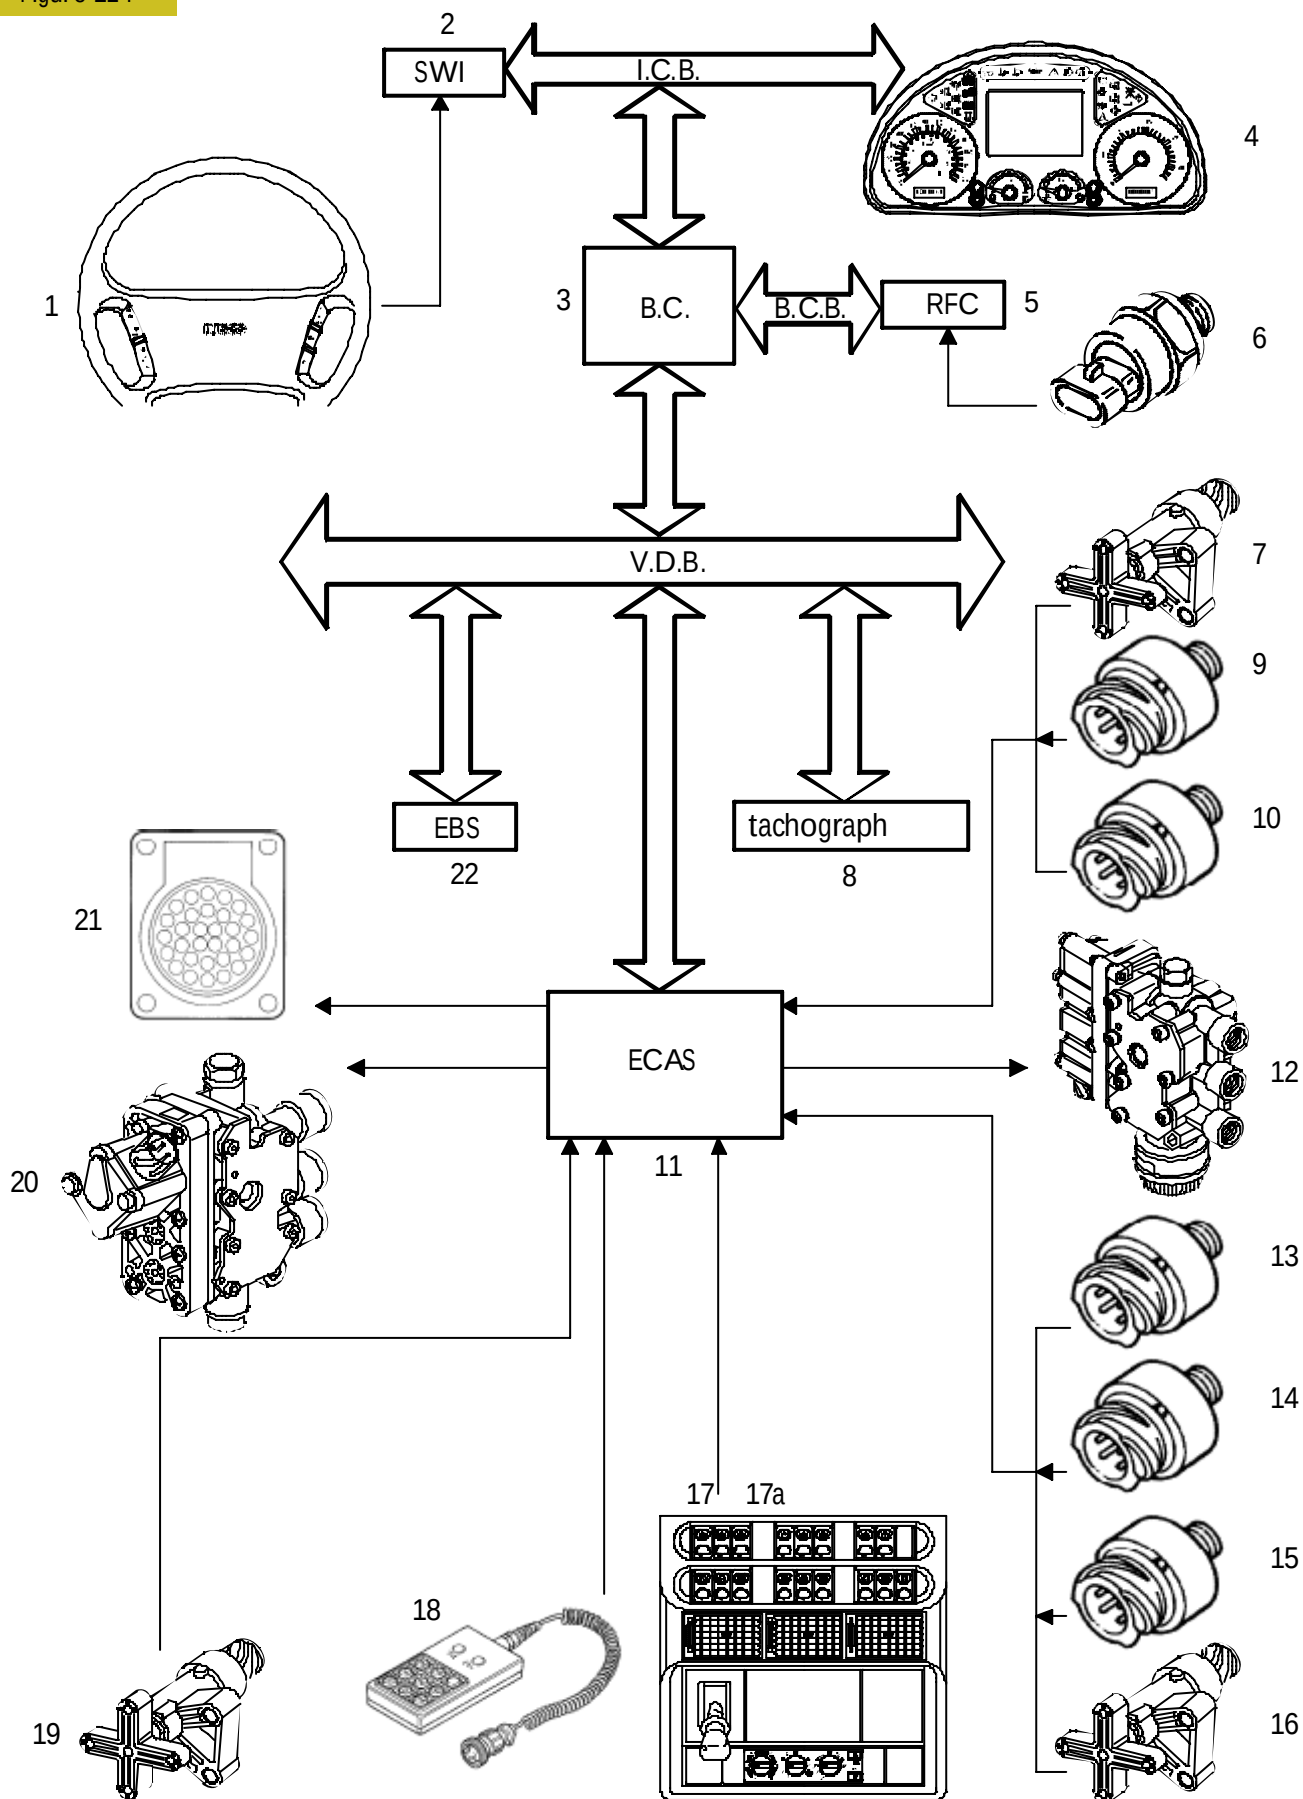

74203

Aquila Trucks Centres


Ref.	Description	Component code
1	Steering wheel	-
2	Steering Wheel Interface	86123
3	Body Computer	86116
4	Cluster	50005
5	Rear Frame Computer	86118
6	Low pressure sensor	42200
7	Right rear axles level sensor	40046
8	Electronic tachograph	-
9	Right drive axle sensor	42381/A
10	Left drive axle sensor	42381/B
11	ECAS electronic control unit	86023
12	Axle solenoid valve unit	-
13	3 rd axle compressed air lift sensor	42389
14	Right 3 rd axle air pressure sensor	42382/A
15	Left 3 rd axle air pressure sensor	42382/B
16	Left axle level sensor	40046/B
17	Start support control switch	53030
17a	3 rd axle left switch remote control	53309
18	Suspension remote control	85065
19	Axle level sensor	40046/A
20	Axle solenoid valve unit	78239
21	Diagnosis connector	72021
22	EBS electronic control unit	88005

Aquila Trucks Centres


ECAS electronic control unit

Vendor WABCO
Voltage 18 ± 30 Vdc
Heat range -40 to 75 _C

Figure 215

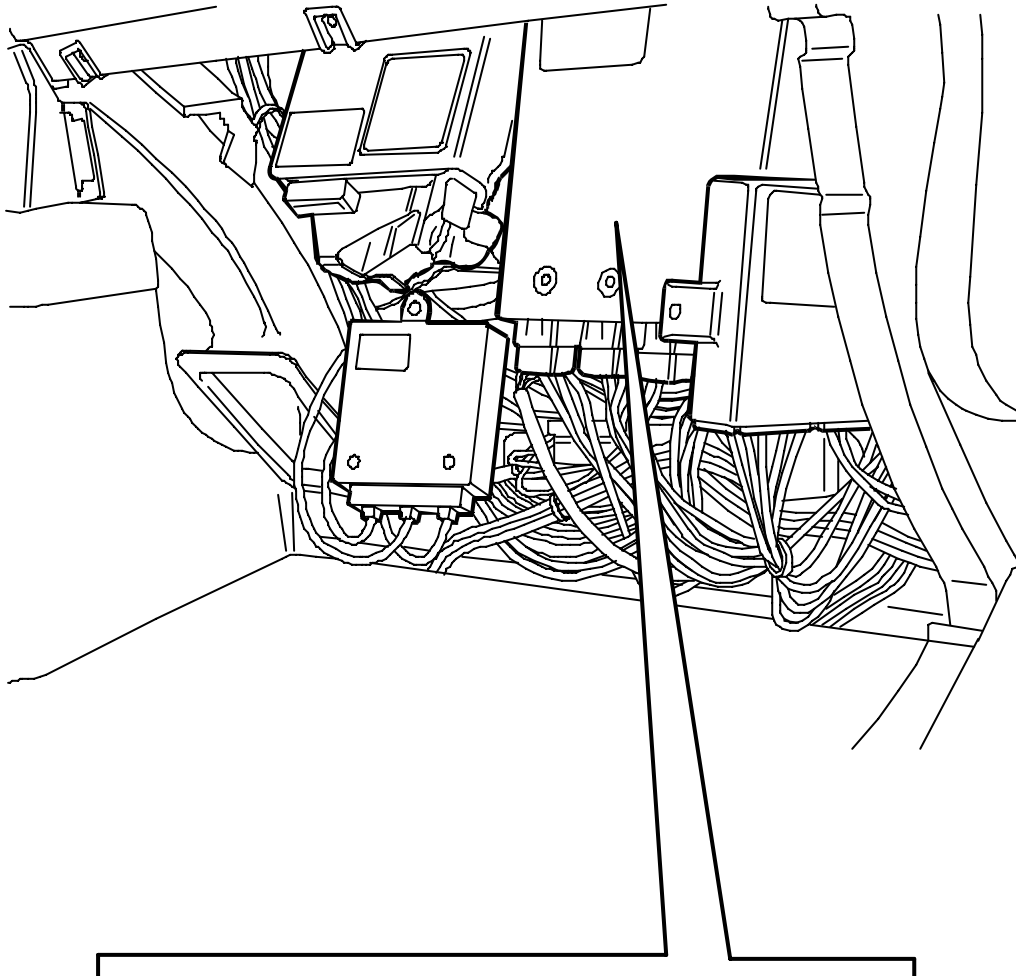

73667

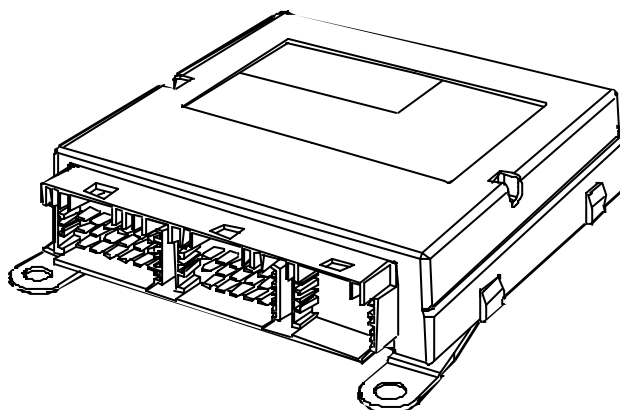


ECAS electronic control unit

107052

Aquila Trucks Centres

Ecas control unit for air suspension system

Figure 216

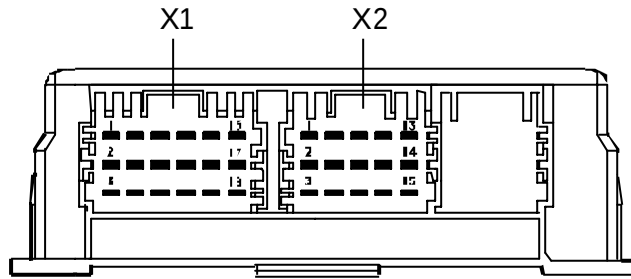

107054

Connector X1

Pin	Description	Cable color code
1	CAN L line (VDB)	Green
2	Ground	0000
3	CAN H line (VDB)	White
4	-	-
5	Positive for manual levelling key (ST14 fitters connector)	8445
6	-	-
7	Positive +30	7440
8	CLOCK line on ECAS remote-control set	6402
9	K line(14-pin diagnosis connector)	2294
10	Positive +15	8810
11	Data line on ECAS remote-control set	6403
12	Ground	0000
13	Positive for ECAS remote-control set	8810
14	-	-
15	Ground for ECAS remote-control set	0050
16	-	-
17	-	-
18	-	-

Connector X2

Pin	Description	Cable color code
1	Positive for load pressure sensors on axles (opt.)	8403
2	Load pressure sensors on axles signal - right axle (opt.)	5443
3	-	-
4	Positive for rear axle electro pneumatic distributor	9400
5	Rear left axle level sensor signal (only truck)	5422
6	Load pressure sensors on axles signal-left axle (opt. - only truck)	5444
7	Ground for load pressure on axles sensors	0400
8	Rear right sensor level signal	5421
9	-	-
10	Ground for electro pneumatic distributor rear axle left valve command (only truck)	9425
11	Ground for electro pneumatic distributor rear axle load/unload valve command	9423
12	-	-
13	Ground for electro pneumatic distributor rear axle right valve command	9424
14	-	-
15	-	-

Aquila Trucks Centres

Electro-pneumatic axle distributor

It consists of three control electro valves “A”, “B” and “C” and the same number of compressed air distributors.




Electro valve “A” manages the input/output distributor.

Electro valve “B” manages the right frame setting distributor.

Electro valve “C” manages the left frame setting distributor.

The electro-pneumatic distributor is connected to the system via a 4-pole connector (A).

Figure 217

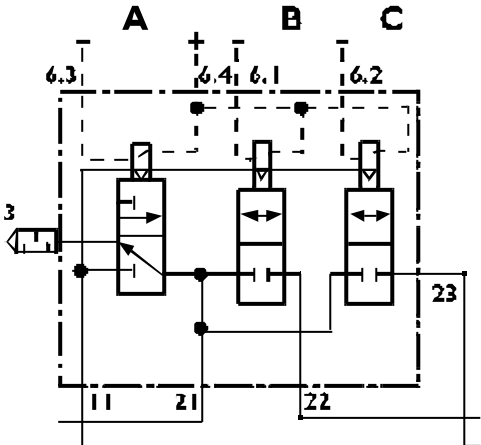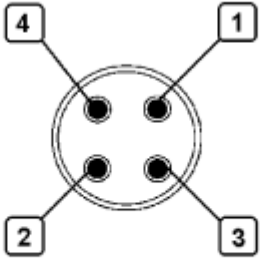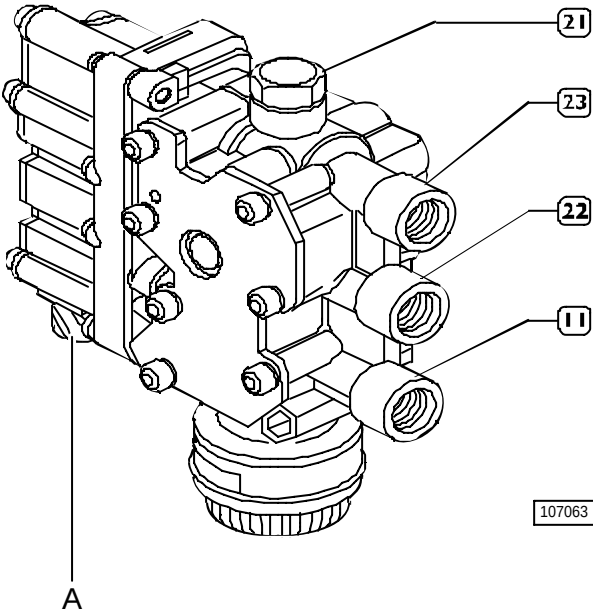

Ref.	Description
1	Electro valve “A” control negative
2	Electro valve “B” control negative
3	Electro valve “C” control negative
4	Common positive

Aquila Trucks Centres


EUROTRONIC AUTOMATIC TRANSMISSION

General

The new generation of Automated EuroTronic transmissions is IVECO's response to new Customer expectations and changed needs. The design of gearshifts with a new inspected and test transmission technology concept combined with advanced electronics has generated a system that guarantees:

- Economic efficiency
- Reliability
- Environmental acceptability

Figure 218

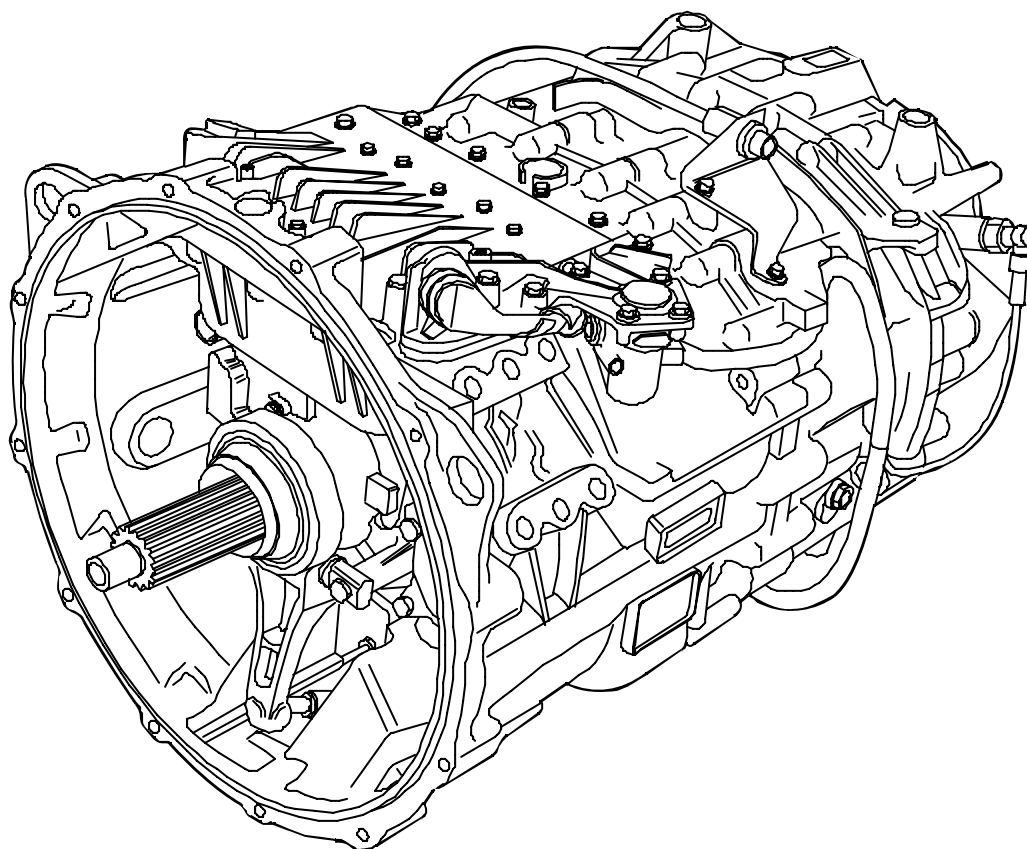

107070

VIEW OF THE AUTOMATED EUROTRONIC TRANSMISSION

These modern and completely automated transmission systems with highly integrated components have already been developed for EDC M6.2 center ELECTRONIC CONTROL DIESEL ENGINES.

Aquila Trucks Centres

The system automates gear selection and meshing by automatically controlling the clutch and engine during gear shifting.

The operator decides when to shift gears by actuating a selector lever with no need to release the accelerator pedal.

Unlike previous versions, the Automated EuroTronic enables the operator to use COMPLETELY AUTOMATIC gear shifting management.

The system enables automatic vehicle start and completely eliminates the clutch pedal. On receipt of vehicle and operator signals, the electronic center controls all components involved, optimizes maneuvers and manages safety.

	PRODUCTIVITY				Comfort	Safety
	Con- sumption	Average com- mercial speed	Maintenance courses	Payload		
Operating comfort and less physical and mental stress	•	•			•	•
Precise and fast gear shifting	•	•			•	
Optimized use	•		•			
No use errors	•	•	•		•	•
Selection of maximum rpm for engine brake use	•	•			•	•
Reduced tare				•		
Longer linkage line life (the clutch especially)			•			
Noise abatement (Db)					•	
Automatic gear shifting	•	•			•	

Design features

The entire transmission shaft and universal joint assembly is relieved of considerable load as gear shifting operations and procedures are automated. The main Automated EuroTronic countershaft gearbox consists of the following:

- A couple of low and high speed gears (SPLITTER)
- 4 forward speeds + 1 reverse

The auxiliary box consists of a G.R.E. epicyclic reduction gear mounted at the back to double the number of gear ratios of the main gearbox and enable 16 forward and 2 reverse speeds.

Aquila Trucks Centres

Description

Automated EuroTronic is a completely automatic transmission featuring a regulated dry clutch that eliminates the clutch pedal. It consists of a reduced noise emission main gearbox with a planetary and split group.

The main unit meshes with front teeth and only the planetary and split group are synchronized.

The 16-speed Automated EuroTronic features sixteen forward and two reverse speeds.

The Instrument cluster supplied the operator with all necessary system information, such as gear meshed, disturbances and the like.

The insert module and the clutch regulator unit are the most important structural elements for complete transmission automation.

The former consists of the transmission electronic system, switching valves, cylinder and sensors.

The transmission electronic system processes all input signals and inserts the speed via the electromagnetic valve and the switching cylinder.

The clutch regulator is set electro-pneumatically and performs all friction actuation operations. In the manual mode, the operator can easily select speeds with the speed selector lever.

In the automatic mode, the operator only has to actuate the accelerator or brake pedal.


Speeds are selected automatically by the system.

To respect anti-pollution regulations, all gears are helical teeth, which enabled abating noise level about 79 db.

Aquila Trucks Centres

Transmission/clutch connection diagram with the compressed air system

Figure 219

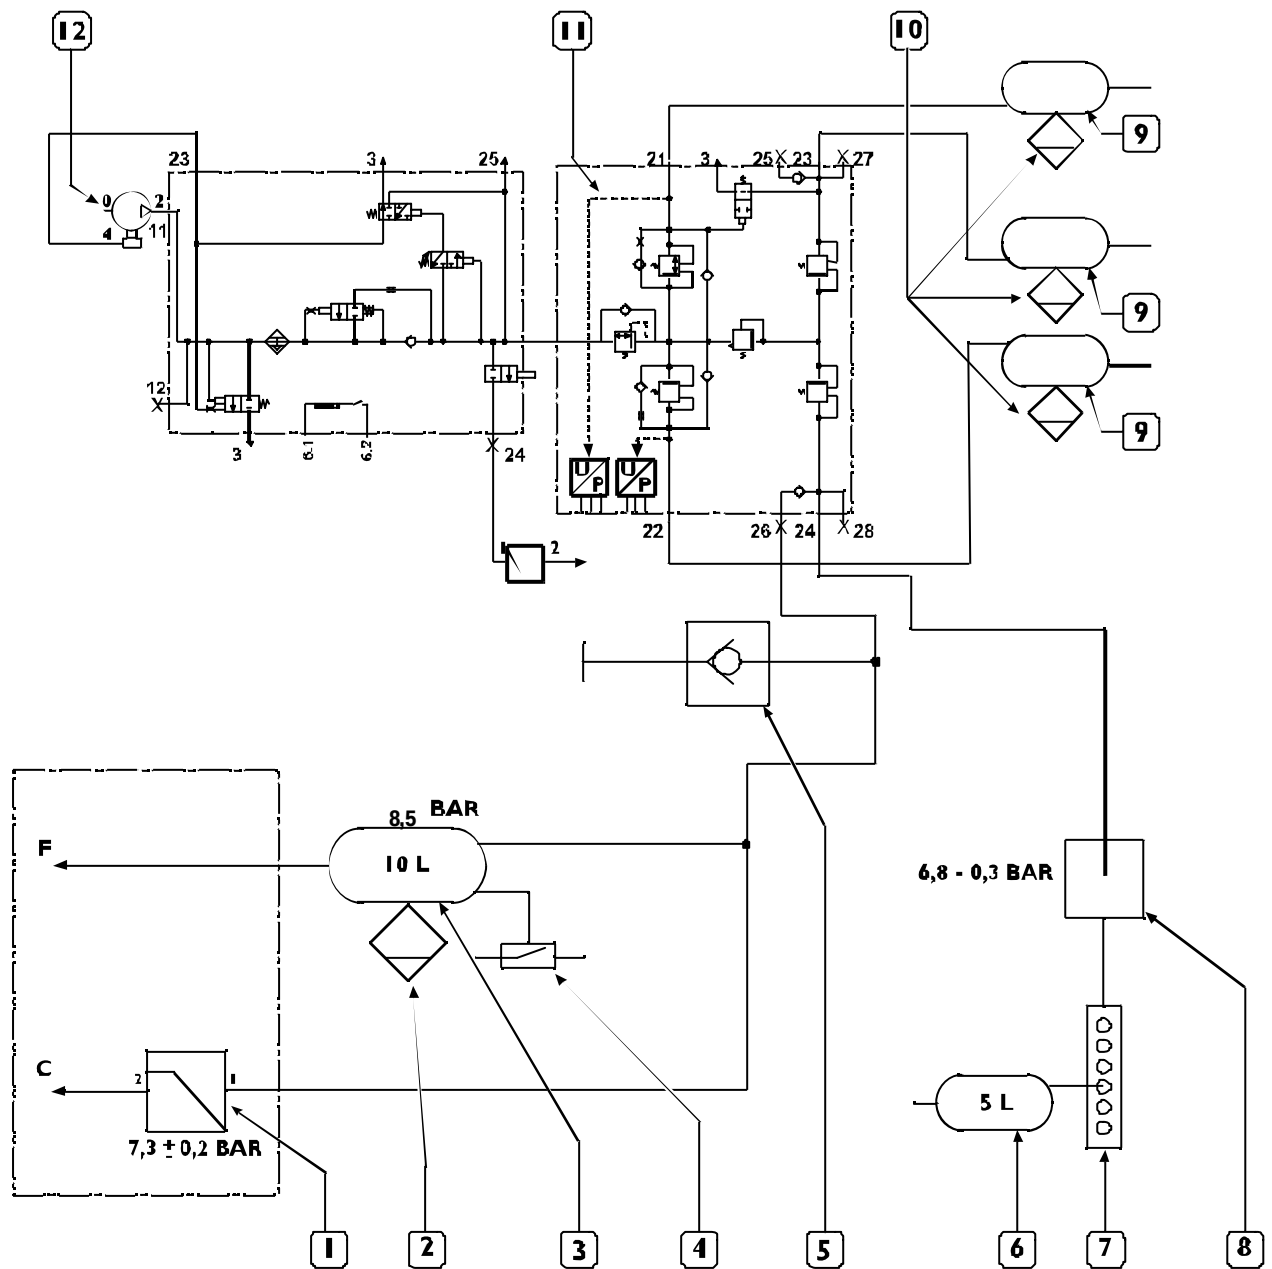

107071

1. Pressure limiter valve - 2. Normal purge valve - 3. 10-l reservoir - 4. Air pressure switch - 5. Pressure control socket -
 6. 5-l reservoir - 7. Distributor element - 8. Controlled pressure valve - 9. Reservoir - 10. Normal purge valve - 11. APU Air
 Processing Unit - 12. Compressor.


F = Clutch
 C = Transmission

Aquila Trucks Centres

Display on the Instrument Cluster

The information required by the operator is displayed by the system on the Instrument Cluster central display.

Figure 220

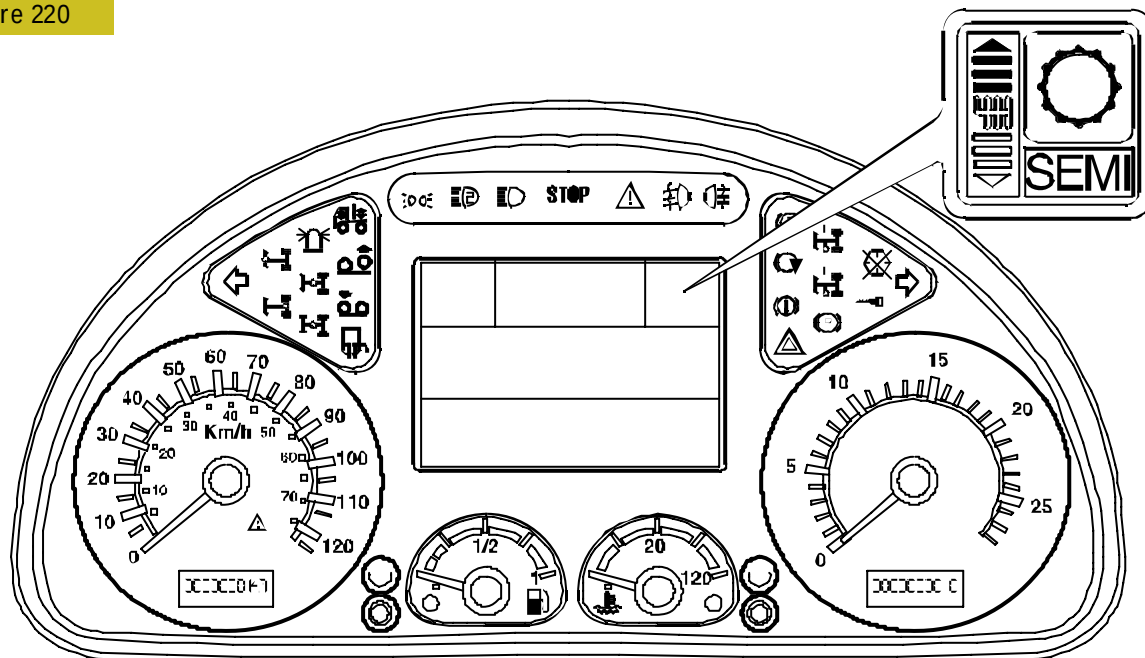

107072

The symbols displayed by the system are as follows:

	System self-diagnosis		Clutch overload
	Gear in neutral		Duct disc wear
	Accelerator pedal pressed before turning the ignition key		Transmission in the manual mode
	Slow reverse selected		Transmission in the automatic mode, with clear display Transmission with the automatic mode pre-selected but not active with shadowed display (moving at low speed)
	Fast reverse selected		Speed number selected (12 th)
	Low system air pressure		Transmission in the manual mode, lower speeds recommended by the system Recommended ratios (as many as 3) are displayed with bars

Aquila Trucks Centres

LIMP - HOME

The Limp Home function enables removing the vehicle when the system presents serious anomalies it cannot manage automatically. It cannot move the vehicle when purely mechanical anomalies are present. The operator can activate the Limp Home function as follows:

1. Key switch on stop
2. Key switch on +15
3. Press the blue color push button on the gear shift lever within 5 seconds
4. Keep the blue color push button pressed for at least 5 seconds.

The operator can select the speed at which to start with gearshift lever, and can select as many as 7 speeds forward and 2 reverse with the 16 speed transmissions and 5 and 2 respectively with the 12-speed one. Selection is managed by the system via an internal delay reaction time and not through the speed with which the gearshift lever sensors identify lever movements. Speed selection must be slow to allow the system to implement each individual speed, as the Cluster displays individual speeds with a delay of a few seconds.

The speeds that can be set with the Limp Home function can only be selected with the vehicle stationary.

After start speed selection, pressing the function push button for at least 2 seconds makes the system control timed clutch engagement.

To prevent the engine from stopping, the clutch disengages automatically when the speed output from the transmission is below a reference threshold. If the clutch sensor is not operating properly, the clutch can only be engaged/disengaged manually with the Function push button.

The system disregards any gearshift lever movement during vehicle movement. In particular, push button function operation is excluded when engine rpm is over 950 and reactivated at under this rating.


Clutch management can thus also be manual with the function push button on the gearshift lever of the brake pedal when engine rpm is under/equal to 950. When the vehicle is stopped with the Limp Home function, the clutch is managed automatically if possible or manually as described above.

At vehicle stop, the system keeps the Limp Home function active with the start speed set previously and the function remains active until system RESET is completed.

Aquila Trucks Centres

Eurotronic Automated transmission operation diagram

Figure 221

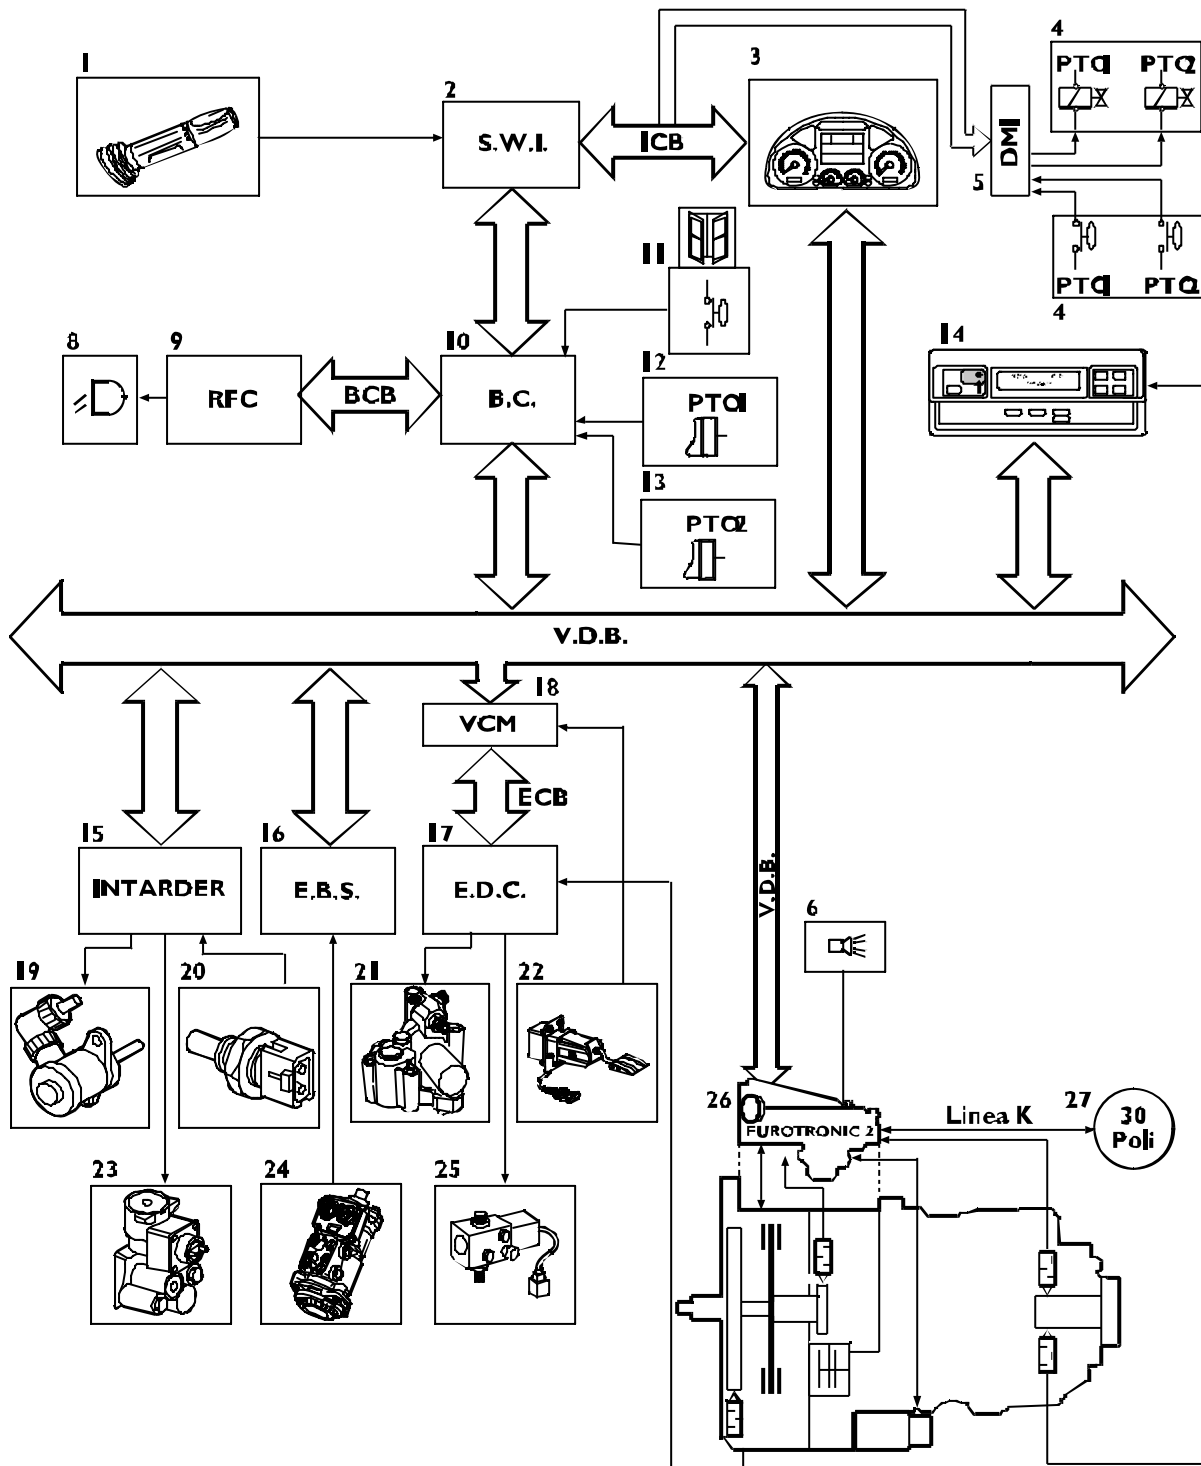


108928

1. Multi-function lever - 2. Steering Wheel Interface - 3. Instrument Cluster - 4. PTO solenoid valves - 5. DMI - 6. External buzzer - 7. PTO on warning switches - 8. Reverse lights - 9. Rear Frame Computer - 10. Body Computer - 11. Door open switch - 12. Switches for PTO1 on request - 13. Switches for PTO2 on request - 14. Tachograph - 15. Intarder Control Unit - 16. EBS Control Unit - 17. EDC Control Unit - 18. VCM - 19. Proportional solenoid valve - 20. Water temperature sensor - 21. Engine stop solenoid valve - 22. Accelerator pedal - 23. ON/OFF solenoid valve - 24. Duplex Distributor (brake pedal) - 25. VGT solenoid valve - 26. Gearbox Electronic Control Unit - 27. Diagnosis socket

Aquila Trucks Centres

Location of main components

Figure 222

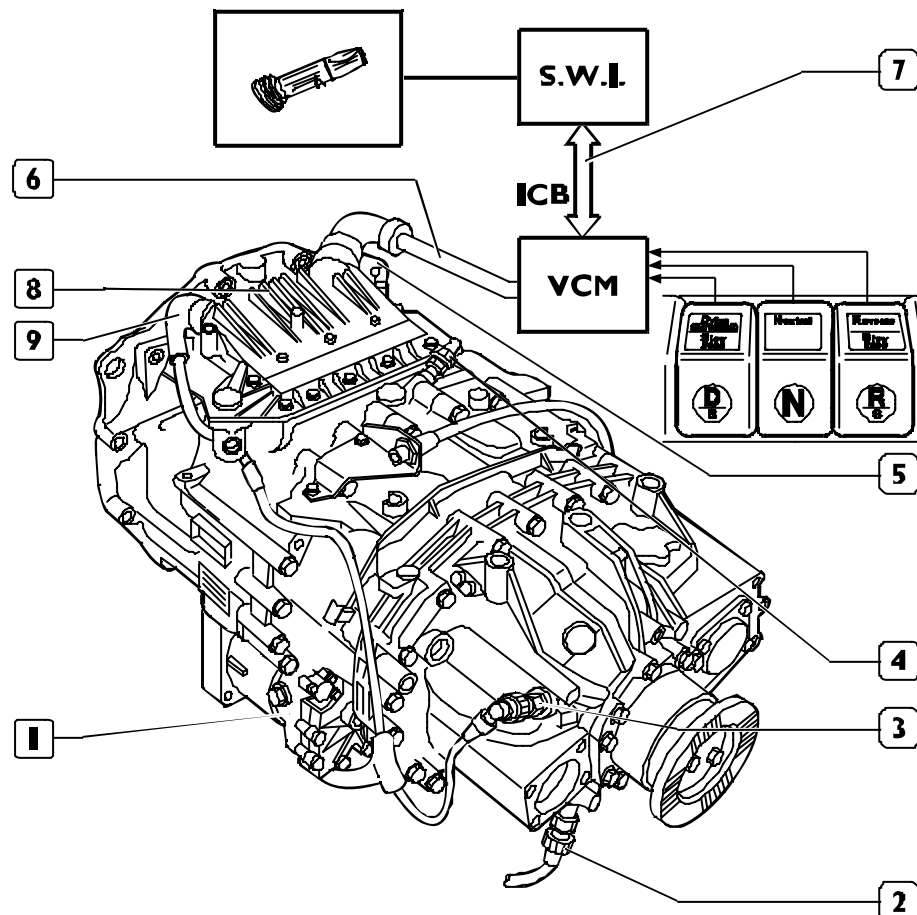

108929

1. Clutch actuator - 2. Tachograph gearshift/transmission outgoing speed sensor - 3. Gearshift/transmission outgoing speed sensor for sensor - 4. Gearshift idling position sensor - 5. Frame side centre connector - 6. Vehicle Data Bus VDB CAN line - 7. System internal CAN line - 8. Gearshift/transmission electronic centre - 9. Gearshift/transmission side centre connector

Aquila Trucks Centres

ELECTRONIC CONTROL UNIT

It is integrated into the gearshift actuator.

Automatic transmission management enables automating speed selection and meshing with automatic clutch and engine control.


It interfaces with the other on-board electronic systems such as the EDC, EBS, INTARDER and Instrument Cluster via a CAN V.D.B. Vehicle Data Bus line.

From connection with the EDC system the transmission electronic control unit can detect accelerator pedal position, fuel delivery, engine rpm and engine brake and kick-down activation.

The control unit inside houses control unit temperature, transmission oil temperature and low air pressure sensors to improve system operation.

Function AL is enabled at <5.8 bar pressure and disabled at > 6 bars. The Automated EuroTronic transmission electronic control unit offers the possibility of a Cluster displayed error code for preliminary diagnosis and is also provided with an advanced self-diagnosis system capable of identifying and storing any even intermittent anomaly dependent on environmental condition the system may have encountered during operation, to ensure more correct and reliable repair.


Figure 223

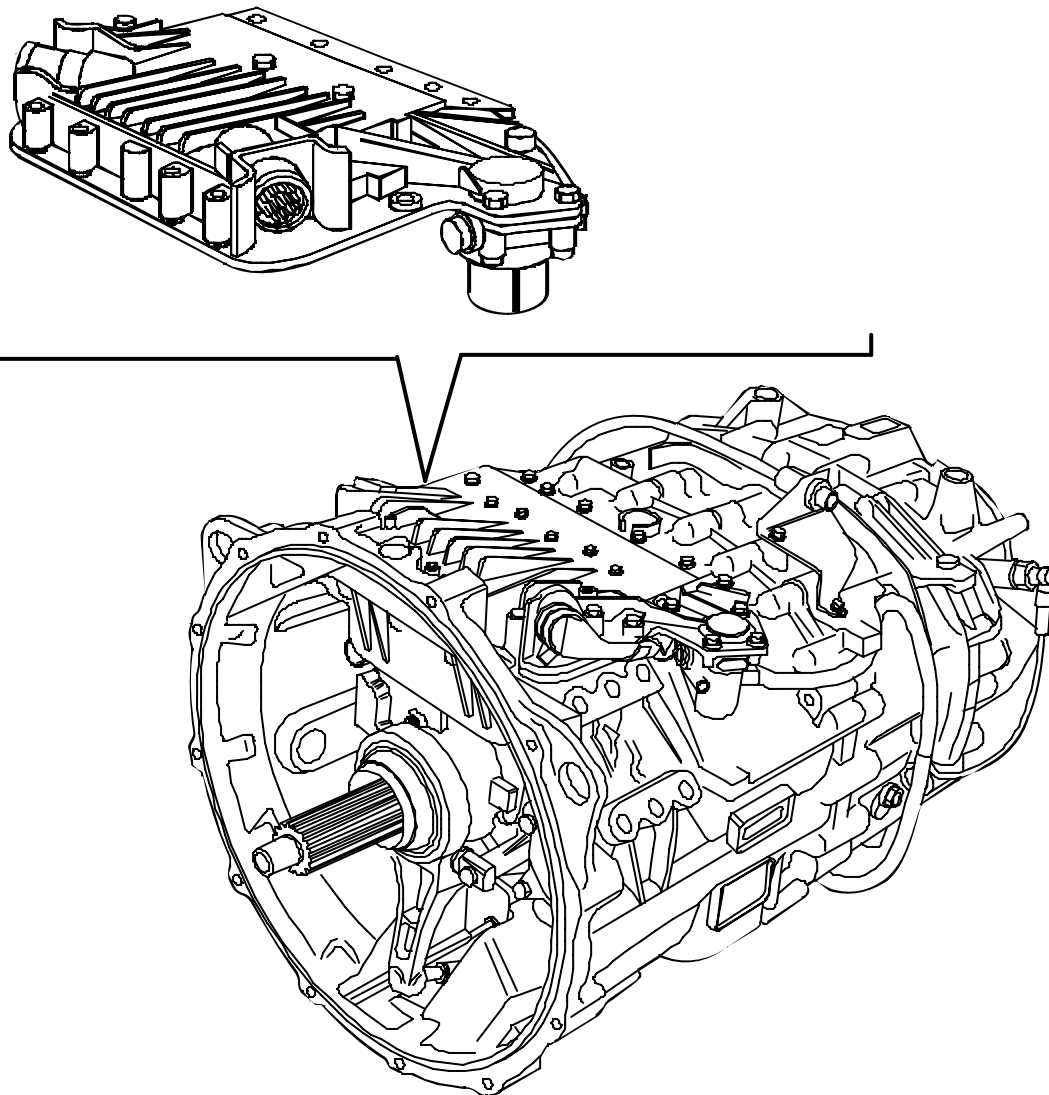

107075

Aquila Trucks Centres

Figure 224

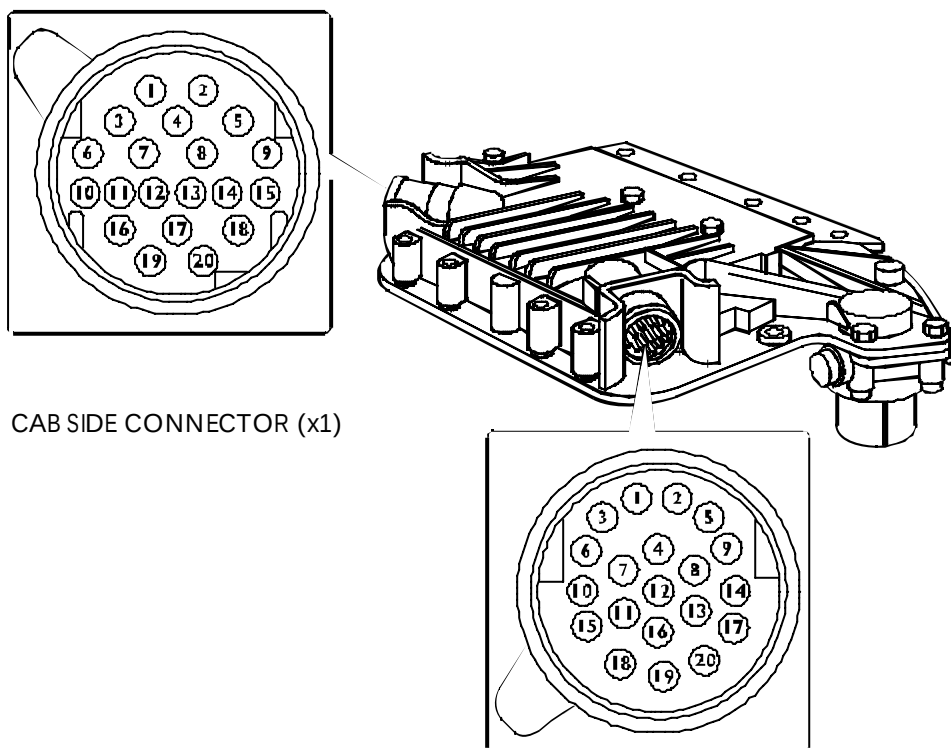

CAB SIDE CONNECTOR (x1)

SENSOR SIDE/CLUTCH ACTUATOR CONNECTOR (x2)

107076

Pin	Cable	Description x1	Pin	Cable	Description x2
1	8801	Power from Body Computer (J 3/6)	1	—	—
2	2297	Positive 30-pole connector for ground diagnosis	2	—	—
3	—	Free	3	—	—
4	7101	Positive from fuse 70602/2 (+30)	4	—	—
5	7101	Positive from fuse 70602/2 (+30)	5	—	—
6	—	Free	6	—	Gearshift speed sensor mass (pin2)
7	—	Free	7	—	Signal electrovalve Y17 (slow opening) (pin A)
8	WS/BI	CAN VDB line	8	—	Signal electrovalve Y16 (fast opening) (pin B)
9	—	Free	9	—	Signal electrovalve Y15 (slow closing) (pin E)
10	1101	Gearbox malfunction beeper earth	10	—	Clutch position sensor analogic signal (pin F)
11	6100	Gearbox malfunction beeper positive	11	—	Gearshift/transmission outgoing speed sensor signal (pin 4)
12	GN/VE	CAN L VDB line	12	—	Signal electrovalve Y14 (fast closing) (pin 0)
13	—	—	13	—	—
14	—	—	14	—	—
15	—	—	15	—	Clutch position sensor power supply (pin G)
16	0000	Negative	16	—	Y15 - Y17 electro valve mass (pin 3)
17	0000	Negative	17	—	Y14 - Y16 electro valve mass (pin C)
18	—	—	18	—	Gearshift/transmission speed sensor power supply (pin 1)
19	—	—	19	—	—
20	—	—	20	—	Clutch position sensor mass (pin H)

Aquila Trucks Centres

TRANSMISSION ACTUATOR

The transmission actuator is mounted on the top of the main gearbox. It consists of a series of electro valves, control cylinder and sensors. The electronic control unit powers the various electro valves to selected gear ratios available by using sensor signals as a feedback. Actuator operating pressure is 7 bars.

Actuator components

- Y1 Inertia brakes control electro valve
- Y2 Fast Splitter control electro valve
- Y3 Slow Splitter control electro valve
- Y4 Speed selection control electro valve
- Y5 Speed selection control electro valve
- Y6 Gear meshing control electro valve
- Y7 Gear meshing control electro valve
- Y8 Downshifted speed epicyclic unit control electro valve
- Y9 Normal speed epicyclic unit control electro valve
- Y10 Compressed air supply electro valve
- B2 Transmission input rpm sensor
- B4 Selected speed sensor
- B5 Selector position sensor
- B6 Normal and downshifted speed epicyclic unit position sensor
- B7 Splitter position sensor



The actuator cannot be overhauled.
For actuator removal, transmission must be on NEUTRA.
The transmission neutral warning switch is located on the gearshift.

Electro valves are of the N.C. on/off type powered at 24 Volt with ~64.2 Ohm resistance at 20 °C.

Induction type transmission input rpm sensor B2 features ~1 Kohm resistance and identified rpm with a 40-teeth sound wheel. This signal is compared with the engine rpm measured by the E.D.C. control unit; if the two values are NOT identical the transmission control unit is enabled to detect clutch slide.



Induction type sensors B4, B5, B6 and B7, respectively selector position, epicyclic unit and splitter, are an integral part of the control cylinders and feature ~ 69 Ohm resistance at 20 °C.

The automatic system pressure sensor located downstream the reduction gear is also integrated inside the control unit.

Aquila Trucks Centres

LOCATION ON THE VEHICLE

Figure 225

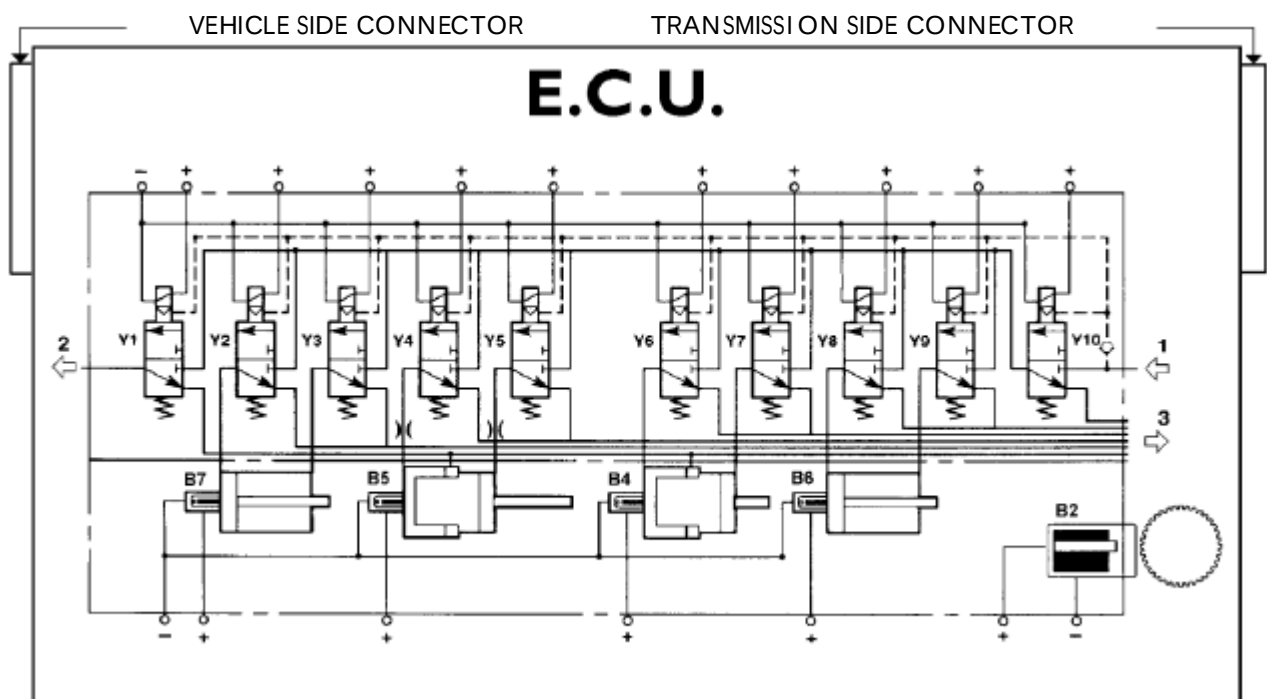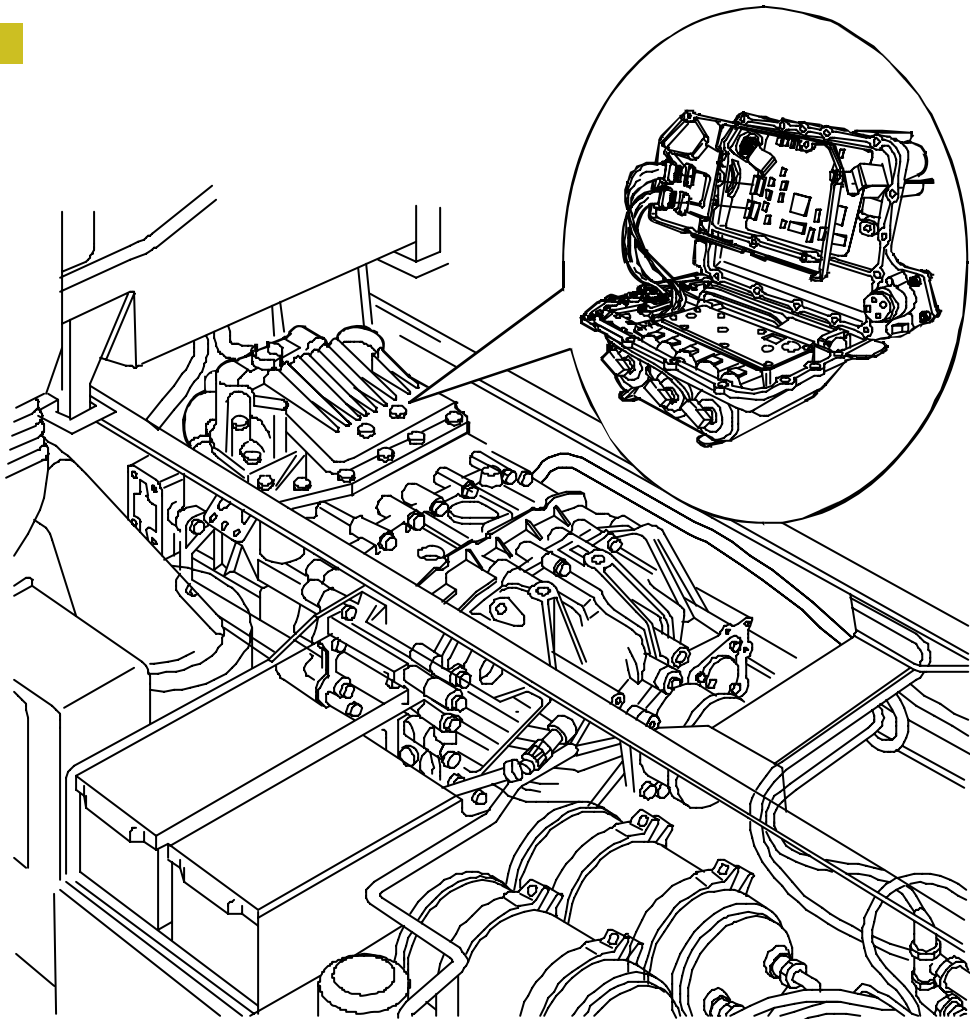

107078

Aquila Trucks Centres

CLUTCH ACTUATOR

The clutch actuator is located on the lower part of the clutch bell.

It consists of four electro valves, an actuator cylinder and a clutch run position sensor and is suitable to actuate 17.5" single-disc clutches via a 2.09 ratio lever.

In the load mode as detected by the accelerator pedal sensor signal from the E.D.C. center, the electronic center powers the various electro valves for slow or fast clutch engagement and release.

The center uses the clutch run position sensor to calculate clutch wear at each vehicle start, to enable fast approaches and overcome empty runs.

Actuator components

- Y14 - Fast clutch engagement electro valve
- Y15 - Slow clutch engagement electro valve
- Y16 - Fast clutch release electro valve
- Y17 - Slow clutch release electro valve
- S - Clutch run position sensor
- T - Air vent cap

Actuator operating pressure is 11 bars.

Internal channel diameters are as follows:

- 2.5 mm for fast engagement/release;
- 1.5 mm for slow engagement/release.

Actuation times at start, subject to load, slope and accelerator pedal position, are as follows:

- Initial engagement: ~ 1 sec.
- Modulated release: ~ 4 sec.

The times change as follows during gear changes to enable fast and precise synchronization:


- Modulated opening: ~ 0.6 sec.
- Complete opening: ~ 0.3 sec.
- Modulated closing: ~ 1 sec.

Actuator features

- | | |
|--|-------------------------------|
| - Operating fluid: | air (min. 6 bar max 11.5 bar) |
| - Power: | 24 Volt |
| - Load on lever in operating conditions: | 382 kg |
| - Operating temperature: | 40 °C + - 120 °C |
| - Cylinder diameter: | 100 mm |
| - Piston travel: | 70 mm |

Aquila Trucks Centres

Figure 226

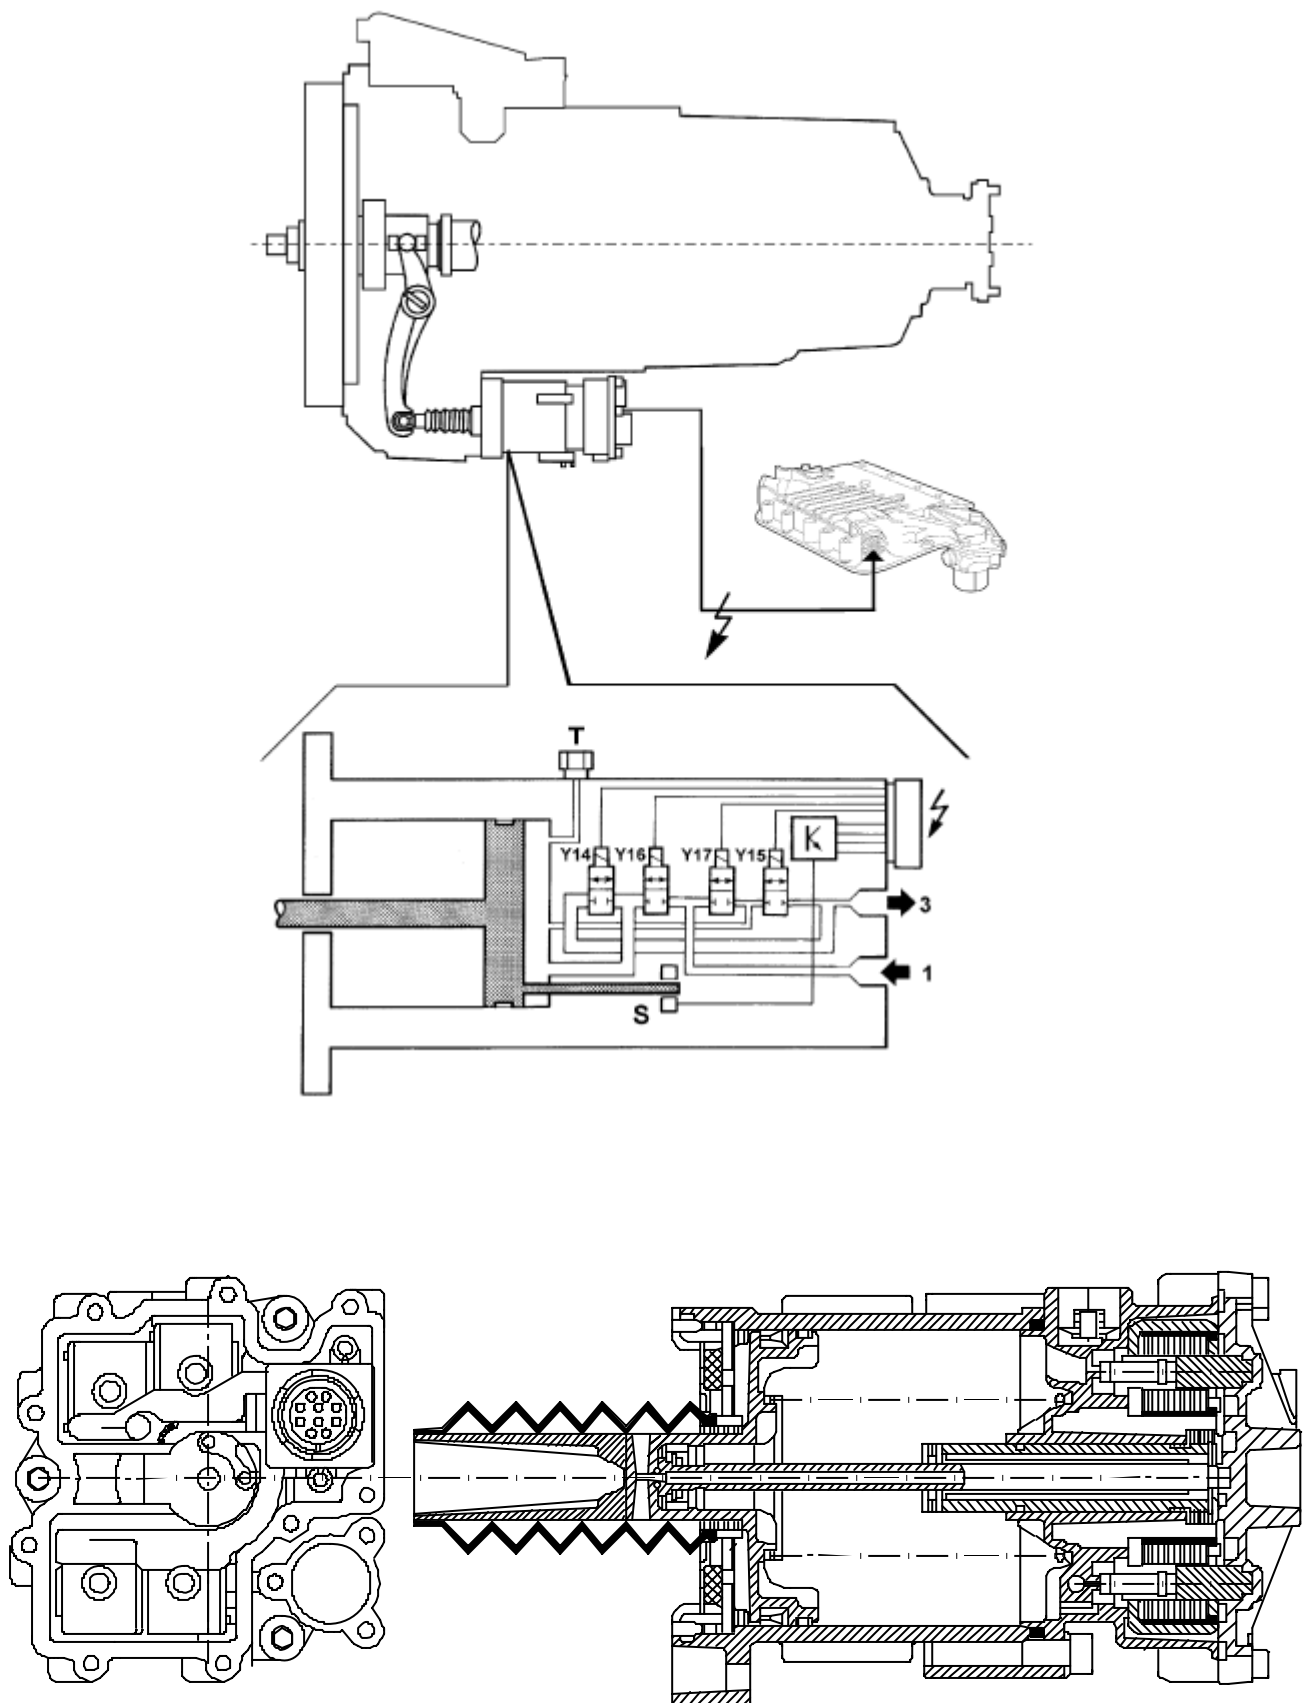

107079

Aquila Trucks Centres


Clutch actuator Pin-out

The N.C. on/off type electro valves are powered at 24 Volt with $\sim 14 \div 20$ Ohm resistance.

The sensor is powered by the center at 5 Volts and the return signal is between 0.5 and 4.5 Volt.

The clutch actuator is connected to the system via a 20-pole connector.

Figure 227

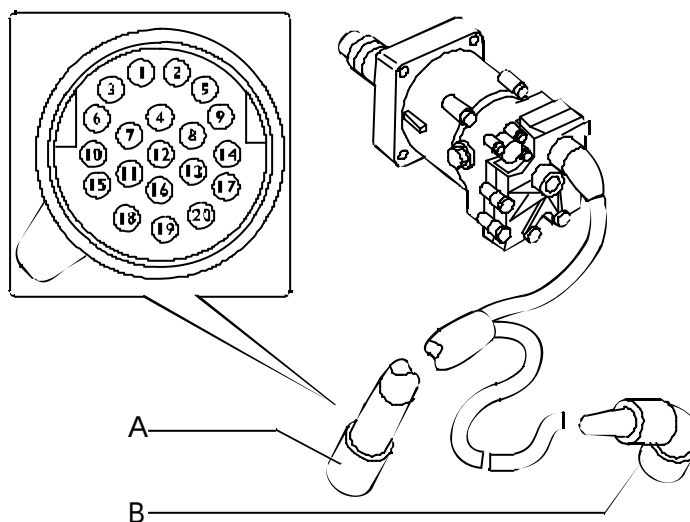

91305

A. 20-pole connector - B. Output transmission rpm sensors

Pin	Function
1	-
2	-
3	-
4	-
5	-
6	Transmission speed sensor mass (pin 2)
7	Y17 electro valve signal (slow opening)
8	Y16 electro valve signal (fast opening)
9	Y15 electro valve signal (slow closing)
10	Clutch position sensor analogic signal
11	Transmission output speed sensor signal (pin 3)
12	Y14 electro valve signal (fast closing)
13	-
14	-
15	Clutch position sensor power
16	Y15 - Y17 electro valve mass
17	Y14 - Y16 electro valve mass
18	Transmission speed sensor power (pin 1)
19	-
20	Clutch position sensor mass

Aquila Trucks Centres

Accelerator pedal


Release pedal NA integrated into the position sensor is used to detect engine idling position and enable clutch engagement at vehicle start.

The signal reaches the VCM electronic center via the CAN VDB Vehicle Data Base line and is sent to the Automated EuroTronic transmission center.

Kick Down is activated with the accelerator pedal in automatic function mode travel. The Kick Down function is activated when accelerator pedal lever (1) move the potentiometer to position 100%, which does not correspond to pedal mechanical travel end.

Stiffened travel end is only mechanical and is used to transmit the feeling Kick Down inserted to the operator.

Figure 228

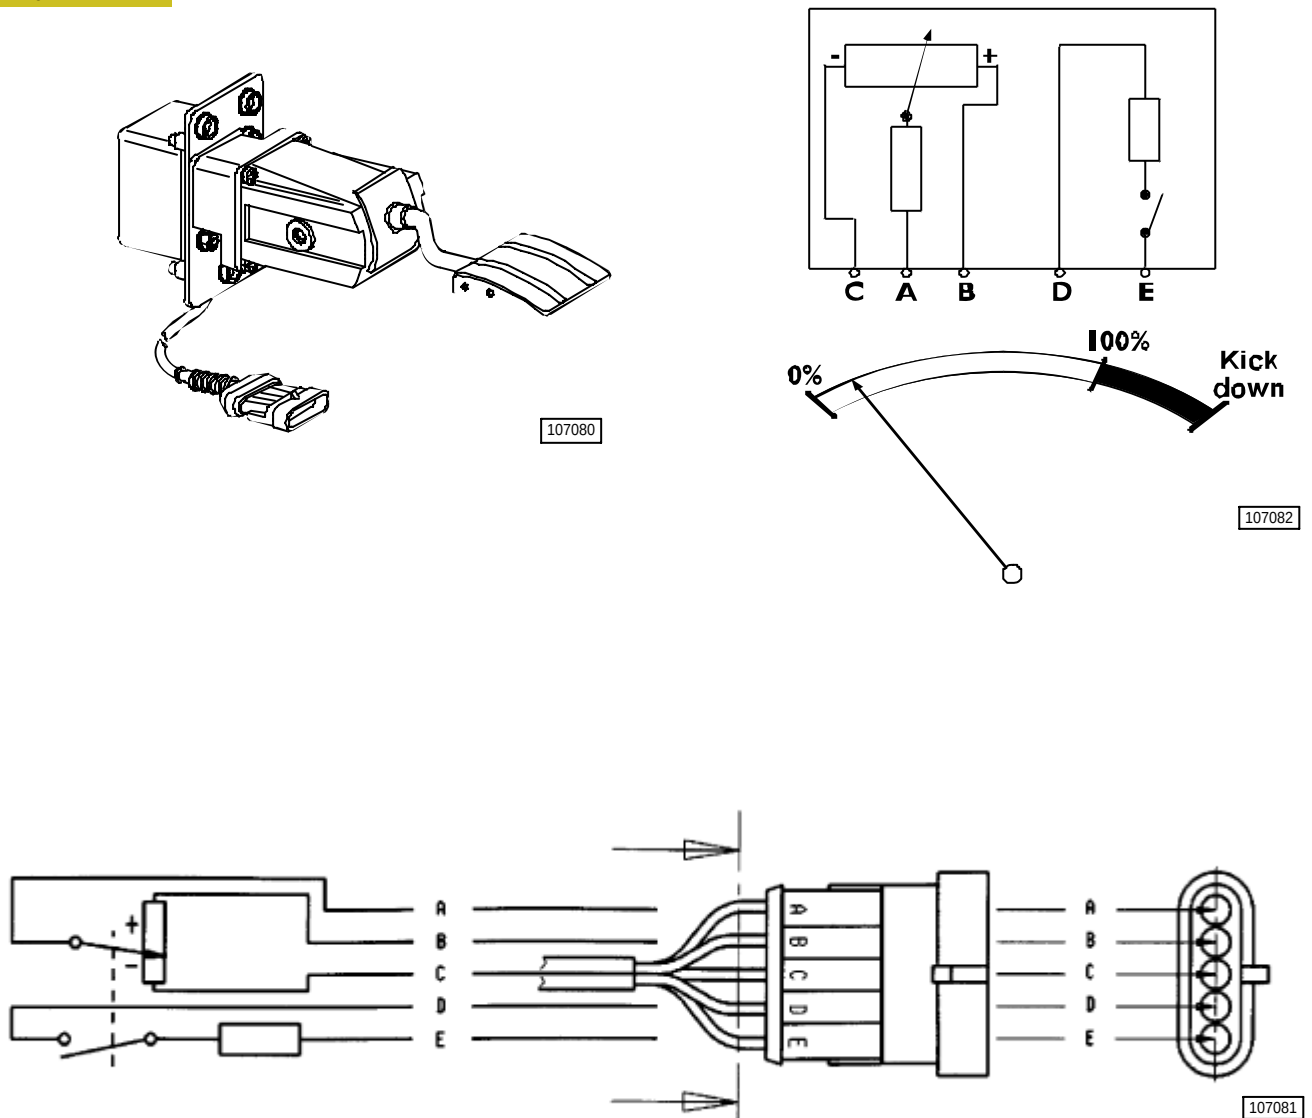

Aquila Trucks Centres

INTARDER

Operation

The intarder is operated with the 7-position selector located in the right direction indicator (1). INTARDER cut-in indication is managed by the CLUSTER (2) via a specific warning.

The system is provided with a Brensomat constant velocity function used for vehicles without EBS. This function enables keeping a vehicle on a downhill slope moving at the speed as selected by the operator. In this case, the intarder electronic centre automatically selects the braking torque required.

The constant velocity function is only activated in position "0" after storing the speed desired.

Storage can be at any of the 7 selector positions by briefly pressing the push button provided; with higher pressure storing speed at that moment and lower pressure decrease of speed set. The speed programmed previously is restored as soon as the selector is returned to position "0".

Pressing the push button once again disables the constant velocity function. The oil contained in the sump is sent to the intarder hydraulic circuit via a filter and the circuit is protected by a safety valve.

By acting on selector (1), electronic centre (4) receives via SWI (3) an electrical signal that it processes and sends to electro valve (7) controlling the accumulator and proportional electro valve (5).

The accumulator control electro valve switches and lets air under pressure pass through its piston to send oil to the hydraulic circuit and reduce action time.

The proportional electro valve acts on the control valve to set its pressure. The adjustment valve is piloted by control valve oil pressure. The rotor is connected to the rear axle via the transmission shaft and the stator is connected to the frame through the intarder case.

The oil contained in the areas between the rotor and the stator is moved by the rotor blades to create a closed circuit oil flow between mobile and fixed parts.

By impacting the stator blades, oil causes rotor and therefore vehicle braking. Reduced oil flow speed between the rotor and the stator transforms kinetic energy into heat, to dissipate which oil passes through an oil/water heat exchanger, where oil heat is transmitted to cooling water and dissipated through the vehicle cooling system.

The heat exchanger water discharge pipe is provided with a temperature sensor (6) that continually sends cooling water temperature data to the electronic centre to ensure maximum temperature allowed for proper engine operation is not exceeded.


If water temperature rises to reach the safety limit for any reason whatsoever, the centre pilots sump control air adjustment to reduce braking torque.

The electronic centre receives a signal from the ABS/EBS system that causes intarder cutout when actuated and it also receives a signal from electronic tachograph (8) enabling constant velocity function use. This signal is sent via a VDB can line.

Switching to position "0" cuts the intarder off and deactivates the proportional and accumulator control electro valves.

Aquila Trucks Centres

Figure 229

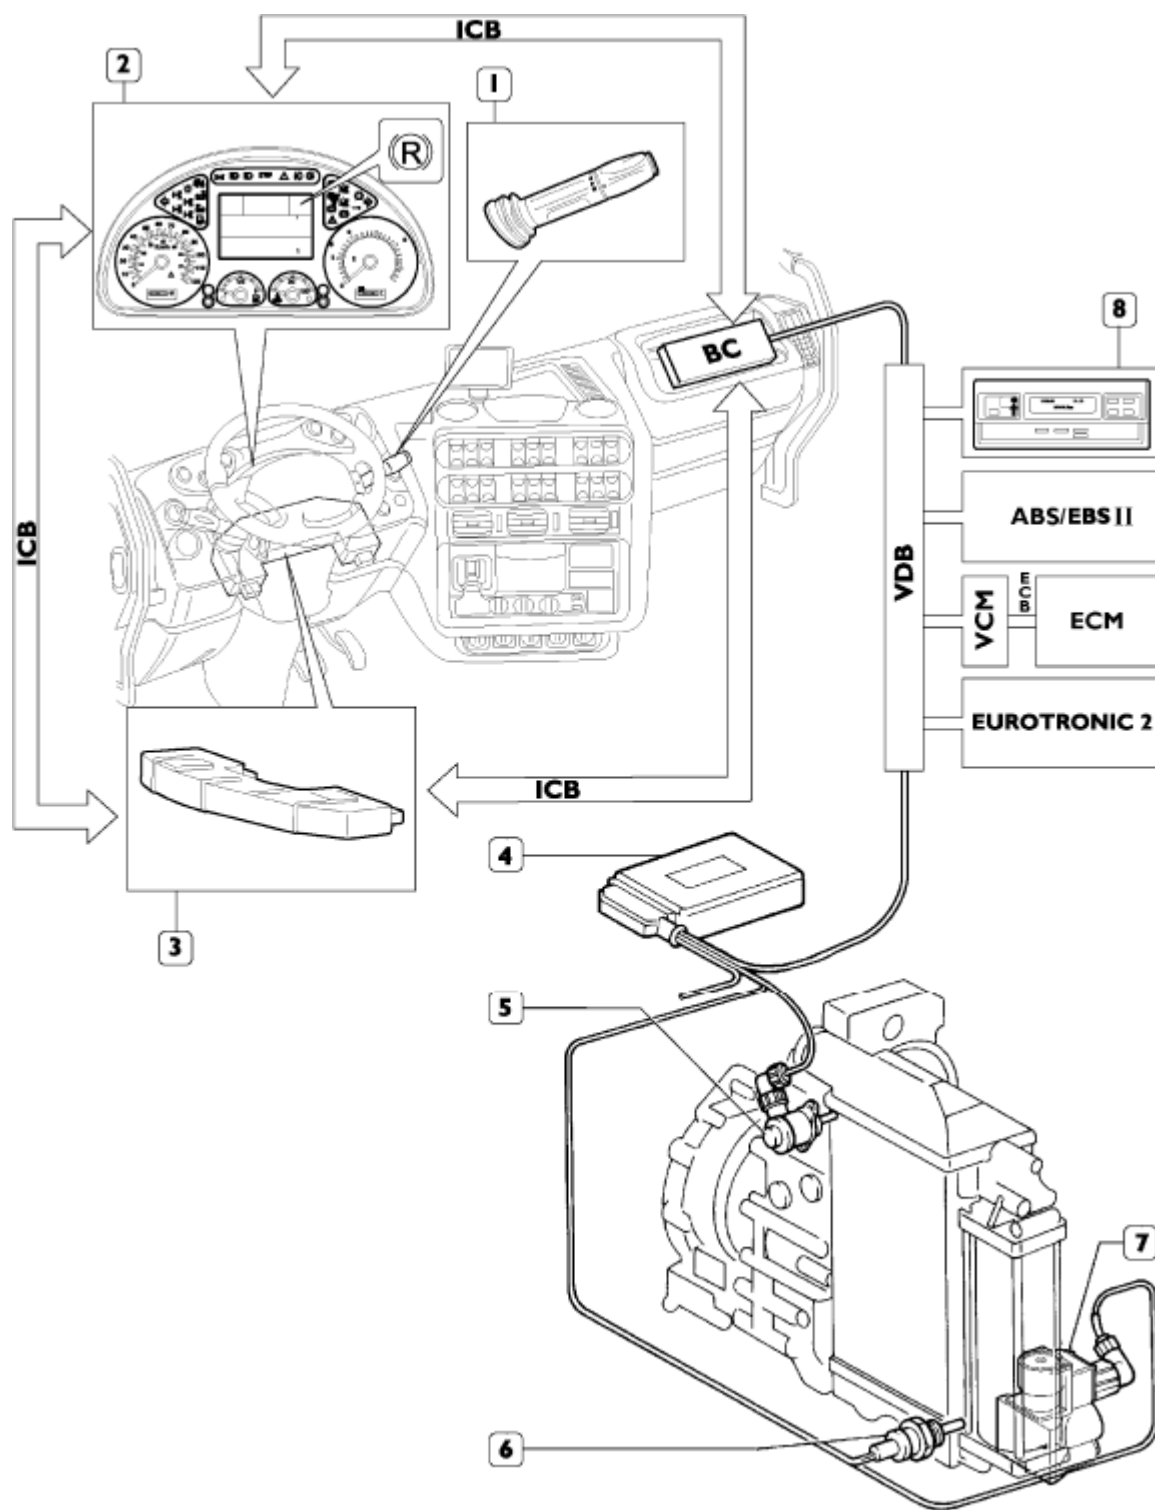

108930

1. Engine brake/Intarder selector - 2. Instrument Cluster - 3. Steering Wheel Interface centre -
 4. Intarder electronic centre - 5. Proportional electro valve - 6. Water temperature sensor -
 7. Accumulator on/off control electro valve - 8. Electronic tachograph

Aquila Trucks Centres

Hydraulic system diagram

Description

The oil contained in the sump is sent to the interarder hydraulic circuit by a pump through a filter and a 12.5 bar pressure limiter valve.

Intarder on

When the intarder is actuated with control (2), the centre supplies electro valve (19) controlling accumulator (10), whose piston is piloted by the service air system at 9.5 bar pressure to send oil faster to the rotor/stator unit.


When excited, proportional electro valve (16) acts on valve (16) by moving its hydraulic spool and moves function control pressure to braking level.

Pressure acts on adjustment valve (14), to create communication between input duct P and output ducts P 1 - R.

Thus, oil from pressure limiter electro valve (4) moves the hydraulic spool of valve (8) and puts duct R₁ 0 into communication with the motor/stator via heat exchanger (9).

Pressure (13) is not affected by oil pressure and closes oil discharge into sump (7).

Figure 230

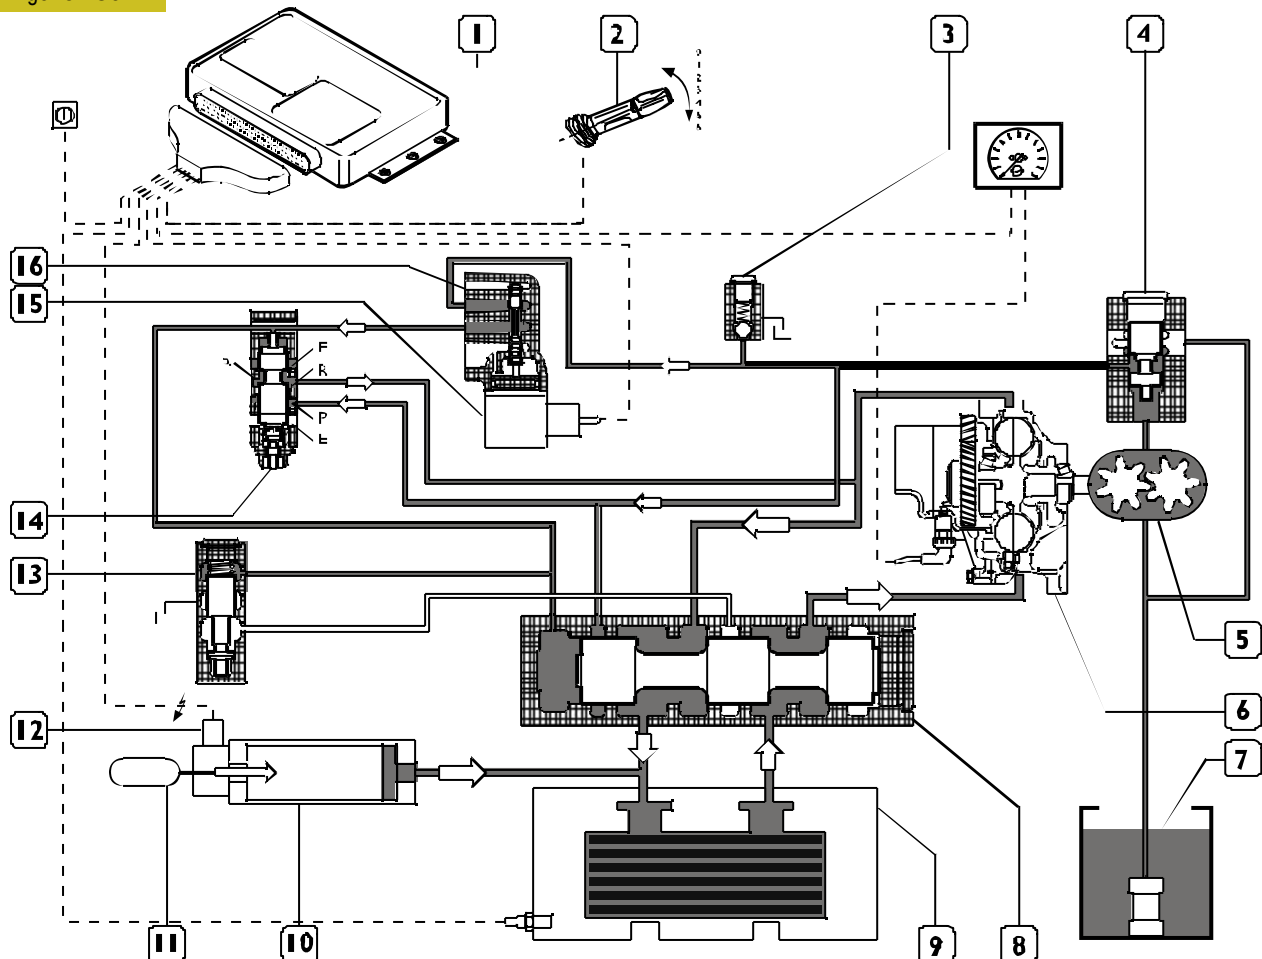


107085

Aquila Trucks Centres

Speed storage and use

By inserting Cruise Control, the system automatically maintains vehicle advance speed without having to use the accelerator pedal. If vehicle speed increases over 2 Km/h more than the speed set, such as when travelling downhill for instance, the engine brake is activated automatically to slow the vehicle down and maintain the speed reached. The intarder is also activated if speed increases by over 3 Km/h.

Figure 231

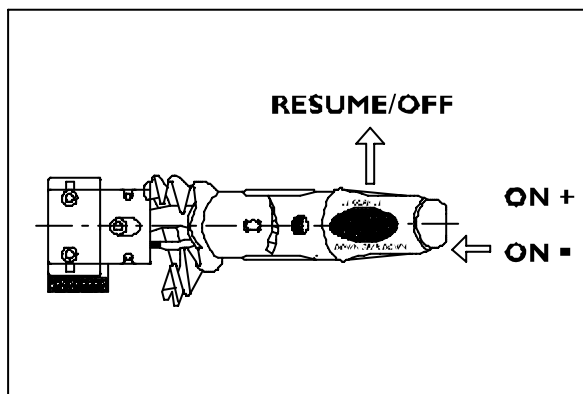

108931

Its function can only be activated when the following conditions are satisfied:

- engine brake/intarder lever cut out;
- vehicle on the move with gear selected;
- vehicle speed over 20 Km/h;
- brake pedal released;
- clutch pedal released.

Control	Vehicle speed adjustment
ON+	Speed increase
ON-	Speed decrease
RESUME	Last stored speed selection
OFF	Speed adjustment cancellation


Adjustment is cut out when the brake or clutch pedal is actuated. The same applies when the minimum speed set is not reached. Top speed is stored in the programme inside the electronic control module and cannot be changed.

- 1 Basculating push button ON has the following functions:
 - a) when pressed once, it activates the function and keeps the speed set at that moment by the accelerator pedal. The accelerator pedal can then be released and the vehicle keeps moving at the cruise speed set.
 - b) with the function already activated, it increases vehicle speed without having to use the accelerator pedal.
- 2 Basculating push button ON has the following function: with the function activated, it decreases vehicle speed.
- 3 The Cruise Control lever actuated OFF towards the steering wheel deactivates the function (CC display shaded).
- 4 Actuating the steering wheel lever once again (RESUME) the value stored is reactivated (CC display clear).

Aquila Trucks Centres

Assembly

Figure 232

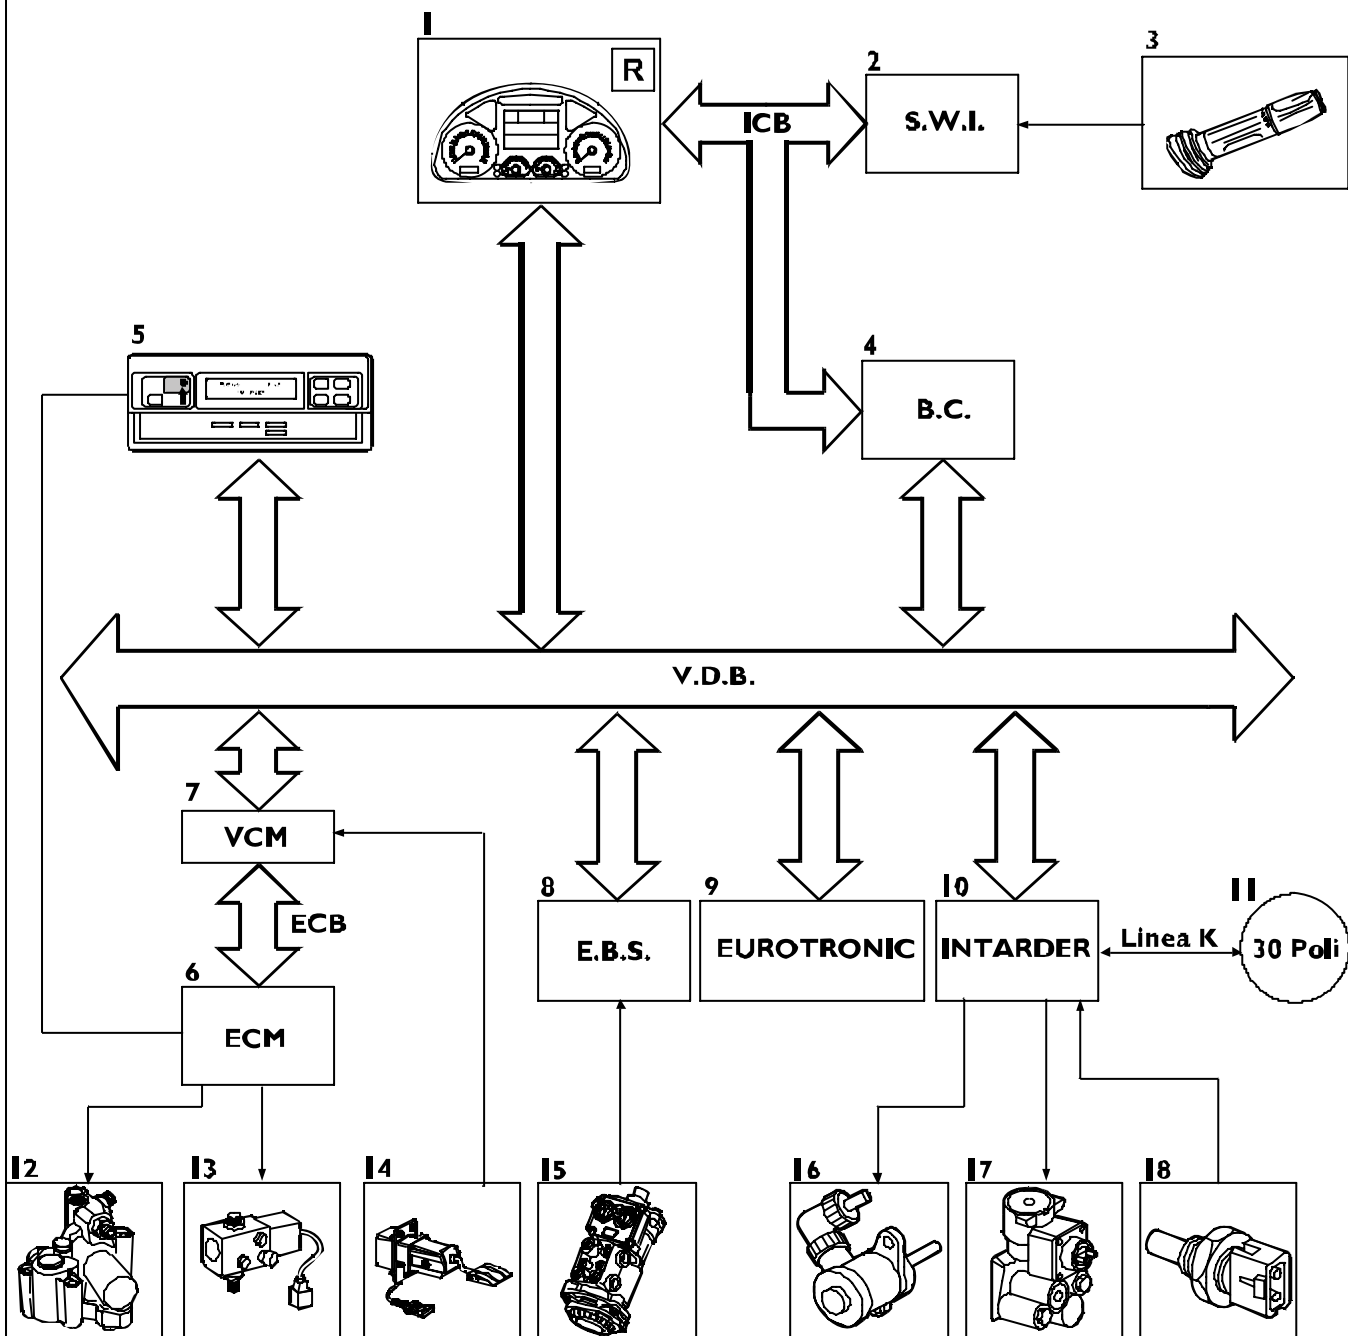



108932

1. Instrument Cluster - 2. Steering Wheel Interface - 3. Engine brake on multi function lever - 4. Body Computer -
5. Tachograph - 6. EDC centre - 7. VCM centre - 8. EBS centre - 9. EuroTronic centre - 10. Intarder centre -
11. Diagnosis connection - 12. Engine brake electro valve - 13. VGT electro valve - 14. Accelerator pedal -
15. Brake pedal Duplex distributor - 16. Proportional electro valve - 17. ON-OFF electro valve -
18. Water temperature sensor

Aquila Trucks Centres

Control unit disposition

Figure 233

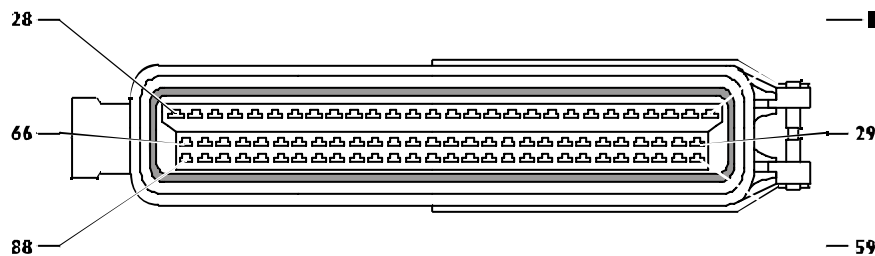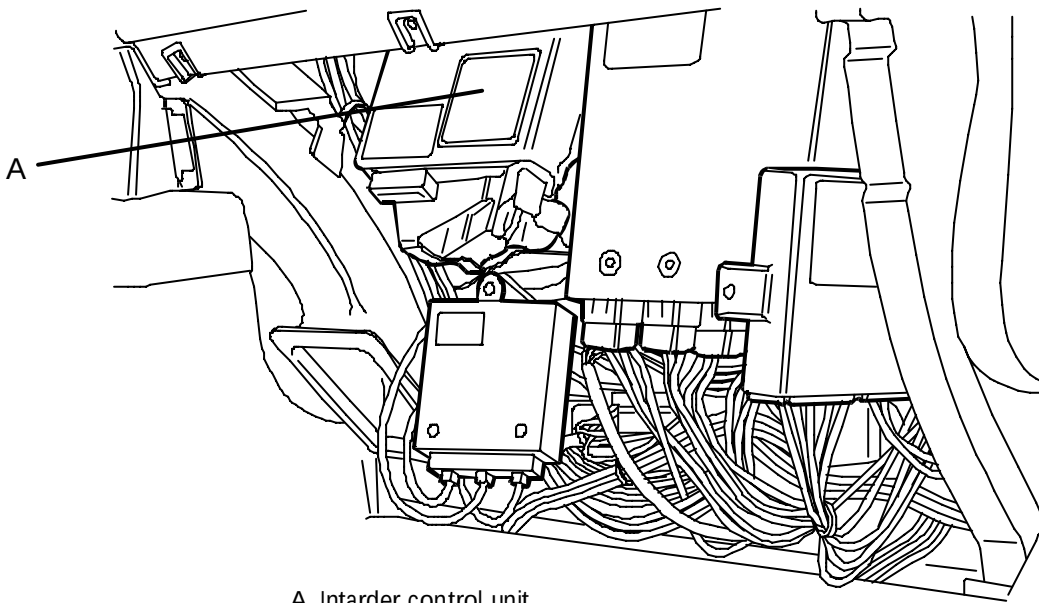

107088

Pin	Cable	Function
1	9311	Oil accumulator solenoid valve positive
3	0310	Proportional solenoid valve negative
4	9310	Proportional solenoid valve positive
8	5541	Cluster
9	5309	Water temperature transmitter positive
12	3393	30-pole diagnosis connection (pin 20)
14	2293	30-pole diagnosis connection (K line - Pin 6)
22		CAN VDB (H) line
27	0000	Cab mass
28	0000	Cab mass
34	0311	Oil accumulator solenoid valve negative
37	0309	Water temperature transmitter negative
49		CAN VDB (L) line
53	8300	+15 power supply
54	7300	+30 power supply


Aquila Trucks Centres

EM (EXPANSION MODULE) ELECTRONIC CONTROL UNIT (PTO)

The EM (Expansion Module) control unit located in the cabin control unit compartment (passenger's side) controls the power takeoffs and, unlike the DMI, makes it possible to carry out complicated applications such as:

- transmission (gearbox) control from external source (TCI message)
- engine control from external sources, like request and limitation of engine rev number, vehicle speed limit, start up and engine stop
- safety logics for waste collection applications
- optimization of braking system for waste collection applications
- additional headlight control
- interface with CAN_open network

Figure 234

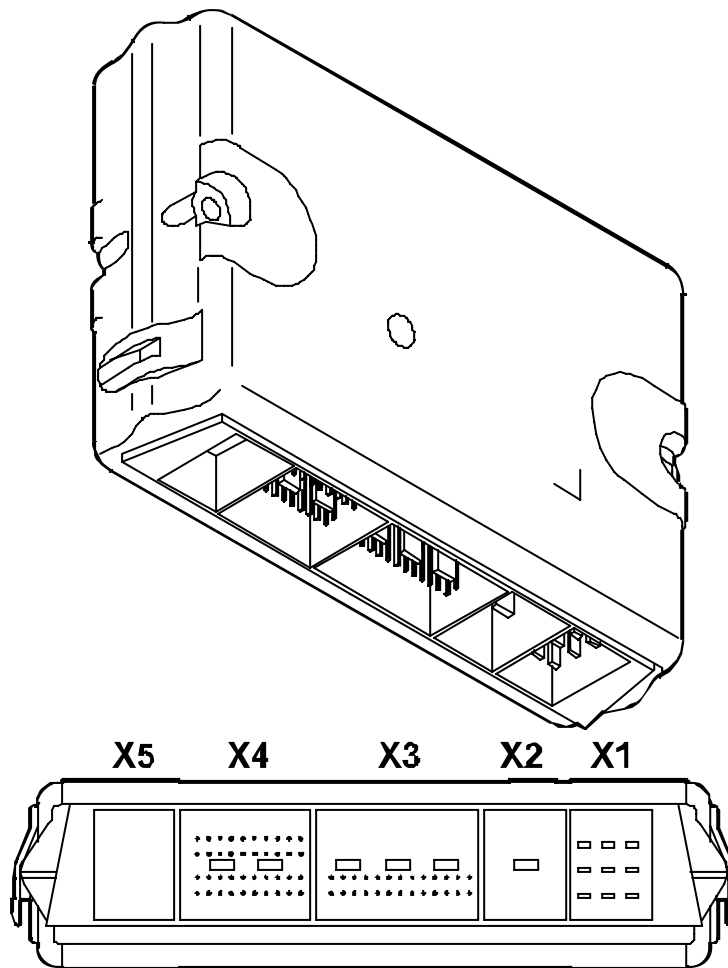

112596

Aquila Trucks Centres

Pin - out

Connector X1

Pin	Description	Cable colour code
1	PTO1 solenoid valve power supply	9131
2	Positive +30	7772
3	Signal for operators (72072B - pin 6)	6985
4	PTO2 solenoid valve power supply	9132
5	Earth	0000
6	PTO3 solenoid valve power supply	9132
7	Clutch solenoid valve signal (72072A - pin 4)	9995
8	Signal for operators (72072B - pin 7)	6986
9	Positive +30	7166

Connector X3

Pin	Description	Cable colour code
1	CAN - H line (VDB)	Sw/Bi
2	CAN - L line (VDB)	Gn/Ve
3	Free	-
4	Line K (diagnosis connector pin 6)	2996
5	PTO1 request	0131
6	PTO2 request	0132
7	PTO3 request	0123
8	Signal of PTO1 engaged	6131
9	Signal of PTO2 engaged	6132
10	Signal of PTO3 engaged	6133
11	PTO1 consensus signal	0391
12	PTO2 consensus signal	0392
13	Positive +15	8166
14	Free	-
15	Free	-
16	PTO3 consensus signal	0393
17	Signal from operators (72072A - pin 3)	0991
18	Signal from operators (72072A - pin 1)	0992
19	Signal from operators (72072A - pin 2)	0993
20	Signal from operators (72072B - pin 3)	0994
21	Signal from operators (72072B - pin 4)	0995
22	Pin 24 jumper	8990
23	Pin 26 jumper	0990
24	Pin 22 jumper	8990
25	Free	-
26	Pin 23 jumper	0990

Aquila Trucks Centres

Connector X4

Pin	Description	Cable colour code
1	Signal for operators (72072B - pin 8)	6987
2	Signal for operators (72072B - pin 9)	6988
3	Signal for operators (72072B - pin 10)	6989
4	Parking brake signal (72072A - pin 1)	6981
5	Neutral gear signal (72072A - pin 2)	6983
6	Signal from operators (72072B - pin 5)	0996
7	Free	-
8	Free	-
9	Signal from operators (72072C / 72072D - pin 5)	0999
10	Free	-
11	Free	-
12	Line CAN - H (SB) - (trailer)	Ws/Bi
13	Line CAN - L (SB) - (trailer)	Gn/Ve
14	-	5981
15	-	5982
16	-	5991
17	Line CAN - H (SB)	Ws/Bi
18	Line CAN - H (SB)	Ws/Bi
19	Line CAN - L (SB)	Gn/Ve
20	Line CAN - L (SB)	Gn/Ve
21	Signal for operators (72072B - pin 11)	6990
22	Signal for operators (72072B - pin 12)	6991
23	Signal for operators (72072B - pin 13)	6992
24	Free	-
25	Free	-
26	Free	-
27	Free	-
28	Signal from operators (72072C / 72072D - pin 3)	0975
29	Signal from operators (72072B - pin 18)	5983
30	Free	-
31	Signal for operators (72072B - pin 14)	6993
32	Signal for operators (72072B - pin 15)	6994
33	Free	-
34	Free	-
35	Free	-
36	Free	-
37	Free	-
38	Signal from operators (72072B - pin 20)	5992
39	Free	-
40	Free	-

Aquila Trucks Centres

AUTOMATIC AIR CONDITIONER


In automatic version the system is managed by an electronic unit placed in the lower part of central dashboard and integrates control knobs.

The electronic unit is connected to vehicle CAN BCB line and is equipped with a very advanced diagnostic system.

The main objective of the unit is adjusting internal cabin temperature (set by the driver) depending on external temperature measured by a suitable sensor.

The system provides for the chance of a completely automatic management, but anyway for the user it is always possible, if he so wishes, to modify the main system operating parameters.

Figure 235

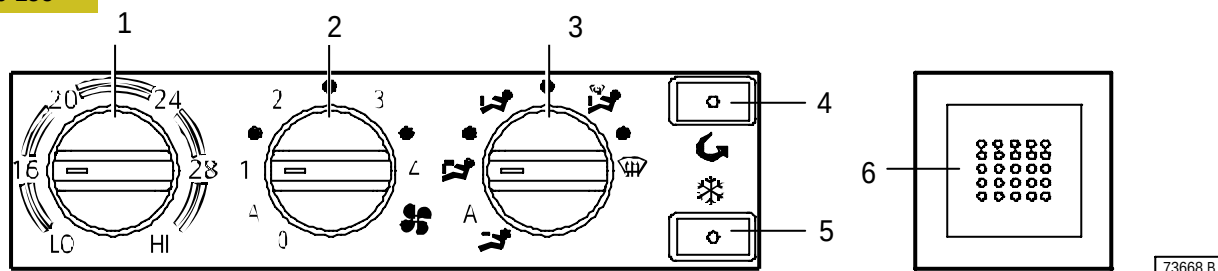

1. Required temperature adjusting knob
2. Fan speed adjusting knob
3. Air flow distribution knob
4. Recirculation function button with embedded led
5. Compressor control button with embedded led
6. Internal temperature sensor

After having set the desired internal temperature, by placing the other two knobs next to letter A, the unit is able to automatically check the following functions:

- Air temperature to unions.
- Fan speed
- Air flows distribution
- Supplementary heater connection if external temperature is $< 5^{\circ}\text{C}$.

In this position the unit does NOT automatically activate either compressor or recirculation function: connection of both of them is manually managed by the driver.

"RECIRCULATION" FUNCTION

Connection of this function is completely manual and is obtained through a suitable button that allows closing the external air intake by placing the baffle at 95% of internal air and 5% of external air.

The unit automatically deactivates this function after about 20 minutes if the compressor is disconnected and after 30 minutes if the compressor is connected.

"COMPRESSOR CONTROL" FUNCTION

Connection of this function is completely manual and is obtained through a suitable button that allows connecting the compressor clutch after a quality check of fluid in the system through safety pressure switches and evaporator temperature by means of the suitable sensor.

The unit does NOT automatically connect the compressor.

"SUPPLEMENTARY HEATER CONTROL" FUNCTION

With moving engine the unit automatically connects the supplementary AIR and/or WATER heater only if the external temperature is $< 5^{\circ}\text{C}$.


With off engine the heater connection depends on driver's setting.

In both cases, the supplementary heater connection is signalled to the driver on Cluster display.

Aquila Trucks Centres

AUTOMATIC AIR CONDITIONER**Automatic air conditioner block diagram**

Figure 236

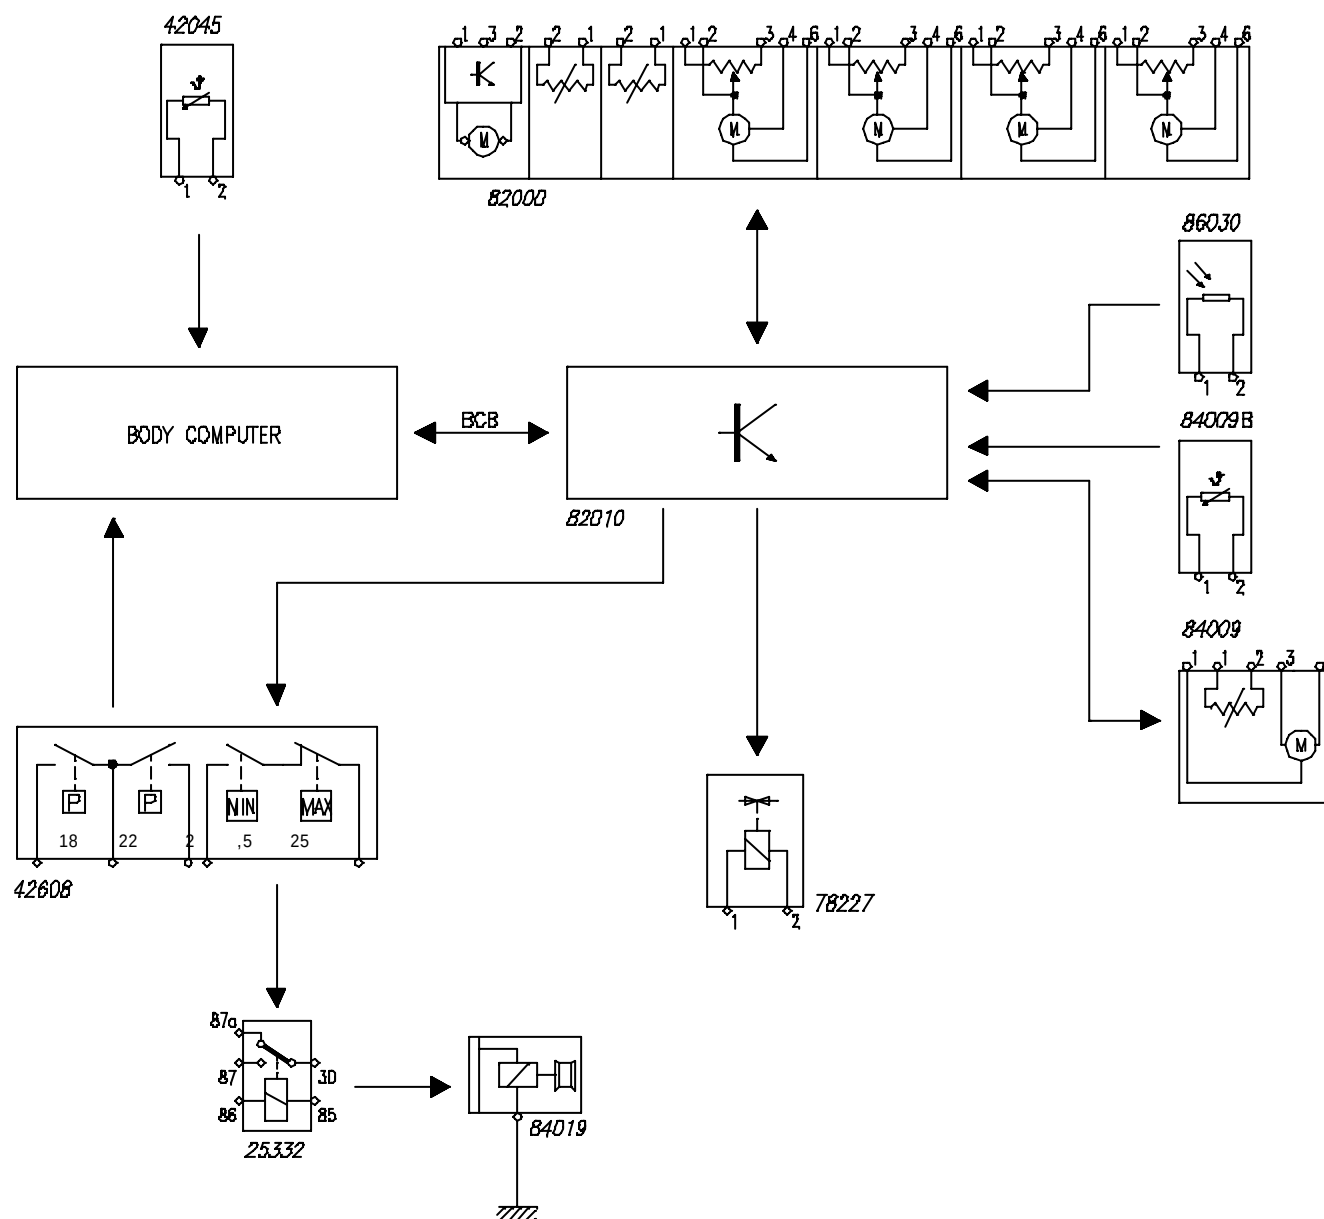

91304


42045. Water temperature transmitter - 82000. Windscreen electric defroster assembly - 82010. Air conditioner control electronic unit - 86030. Sun radiation measuring sensor - 84009. Vented internal temperature measuring sensor - 84009B. Inner temperature detection sensor - 42608. Cooling liquid pressure signaling pressure switches - 25332. Compressor connection remote control switch - 78227. 3-way solenoid valve for radiator water recirculation - 84019. Compressor

Components 82010 - 82000 are placed in the same control assembly.

Aquila Trucks Centres

Component location

Figure 237

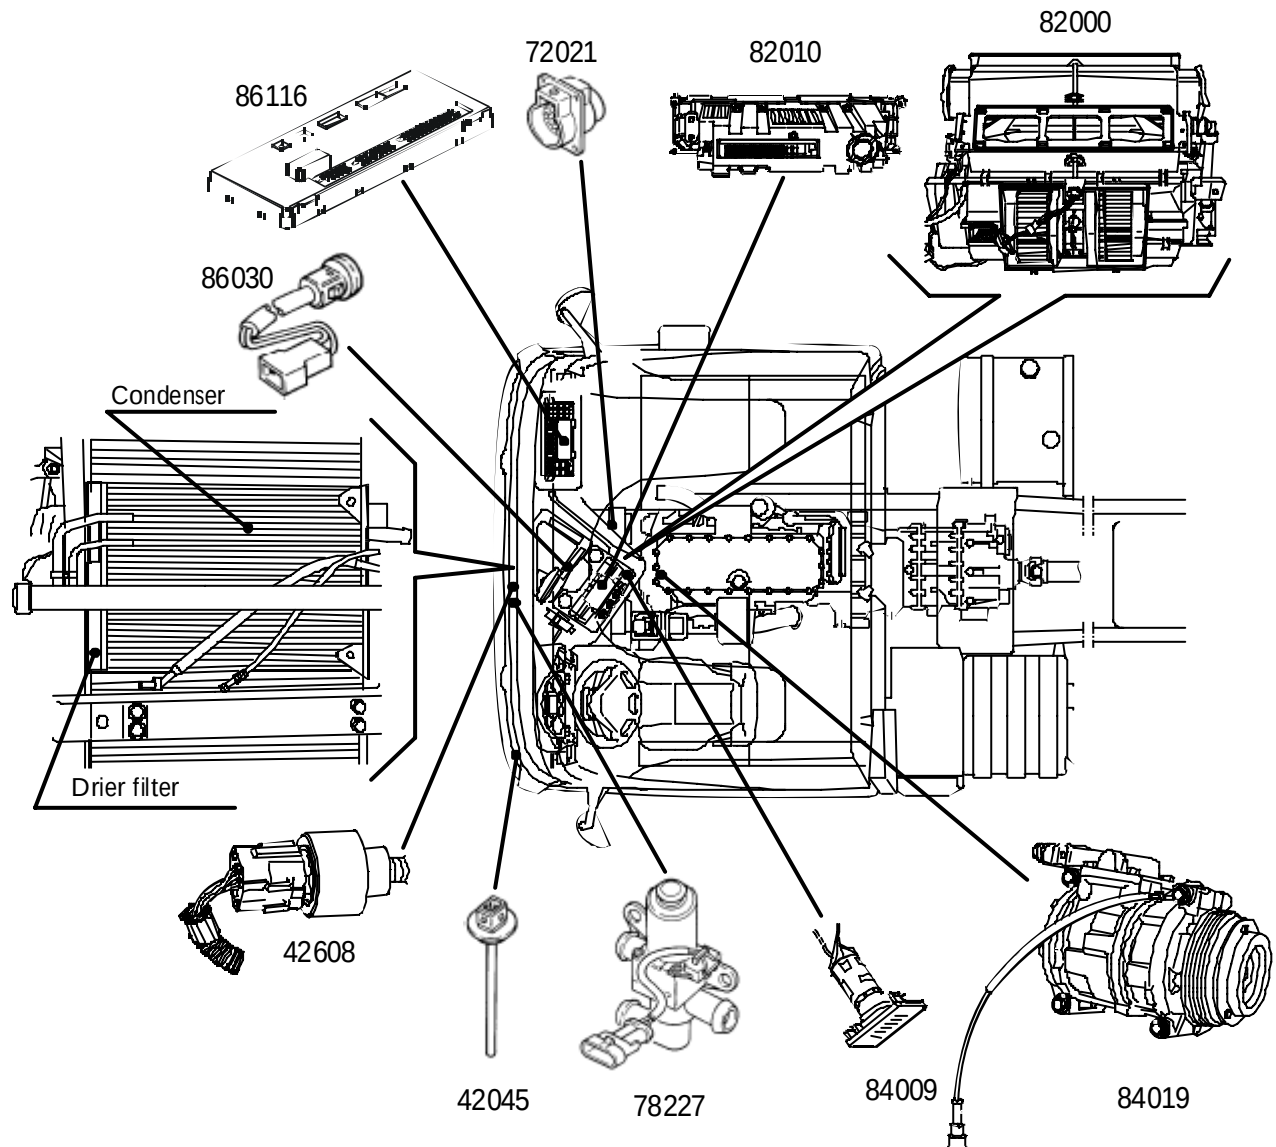


77561

42045. External temperature transmitter - 82000. Windshield defroster unit - 82010. Conditioner electronic control centre - 86030. Sun ray detection sensor - 84009. Internal temperature detection sensor - 42608. Coolant pressure warning pressure switches - 25332. Compressor on remote control switch - 78227. Radiator coolant recirculation electro valve - 84019. Compressor - 86116. Body Computer - 72021. 30-pole connector for diagnosis

Aquila Trucks Centres

Windscreen electric defroster assembly components location

Figure 238

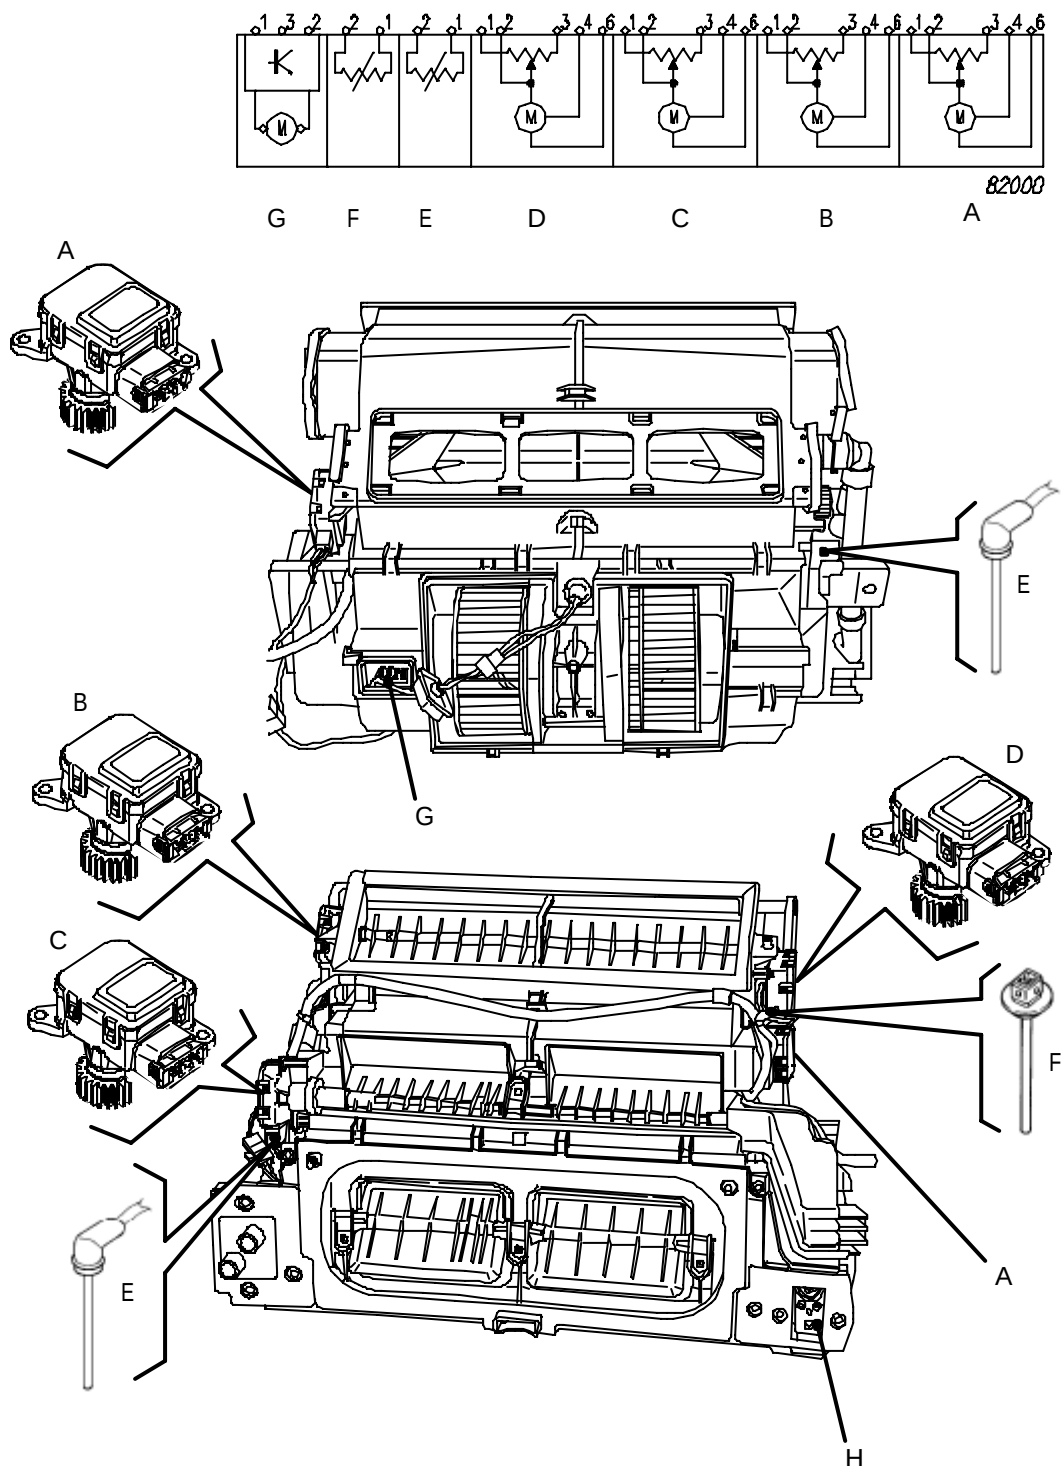

77562


A. Floor reduction gear - B. Windshield defrost reduction gear motor - C. Recirculation reduction gear motor - D. Mixing reduction gear motor - E. Blown temperature sensor - F. Evaporator temperature sensor - G. Blower control module - H. Expansion valve

Aquila Trucks Centres

External temperature sensor

Located on the driver side vehicle front so it is invested by external temperature, as close as possible to reality. Its resistance at 25 °C = ~ 10 Kohm

Figure 239

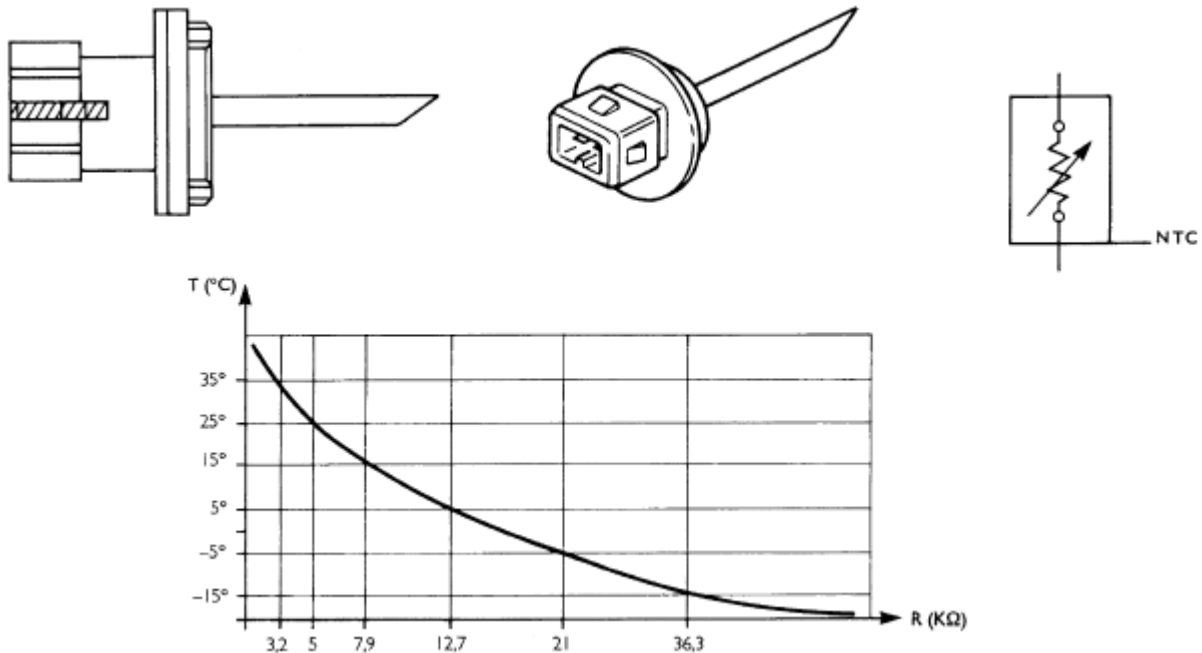


77566

Main interior temperature sensor

Located on the right inside the control module and ventilated by a motor enabling air circulation and preventing erroneous temperature readings between values measured and the cab. Its resistance at 25 °C = ~ 10 Kohm

Figure 240

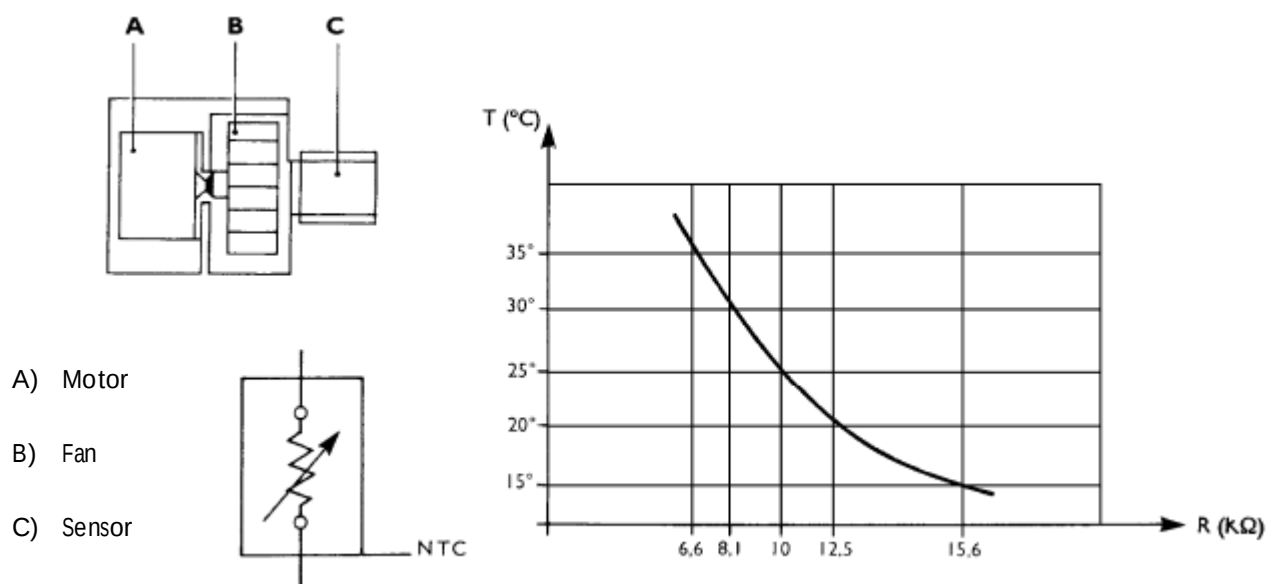

77567


Aquila Trucks Centres

Evaporator temperature sensor

The sensor placed inside the evaporator generates compressor connection and disconnection.

Disconnection to avoid dispenser freezing occurs at a temperature $< 2\text{ }^{\circ}\text{C}$, while connection at a temperature $> 5.5\text{ }^{\circ}\text{C}$. Its resistance at $25\text{ }^{\circ}\text{C} = \sim 3.28\text{ Kohm}$

Figure 241

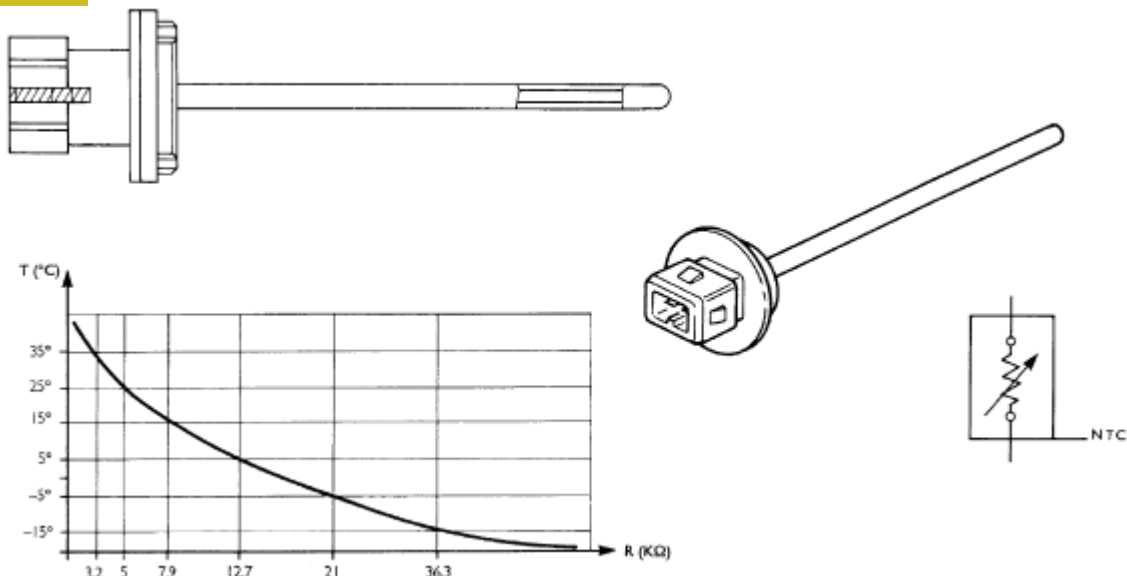


77559

Blown air temperature sensor

Located downstream the heat exchanger, it gives the temperature of air inlet into the cab and enables the centre to adjust more properly. Its resistance at $25\text{ }^{\circ}\text{C} = \sim 10\text{ Kohm}$

Figure 242

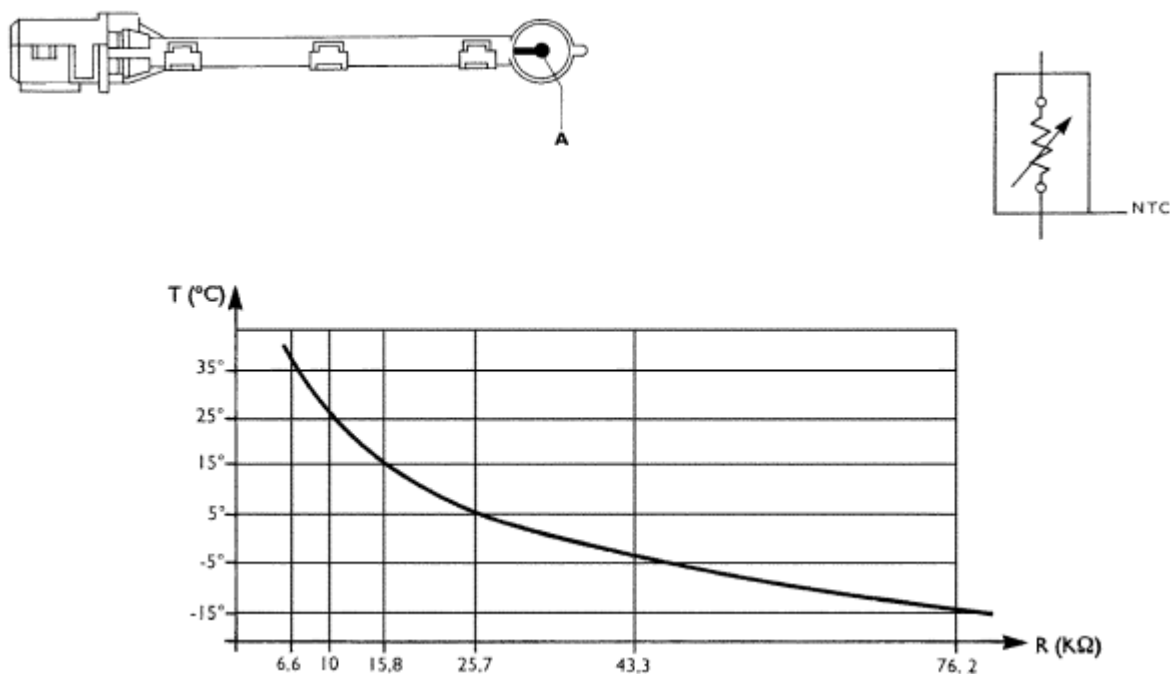


77574

Aquila Trucks Centres

Sun ray sensor


It is a photodiode placed on vehicle dashboard to point out luminous intensity that the cabin receives from outside.

Figure 243

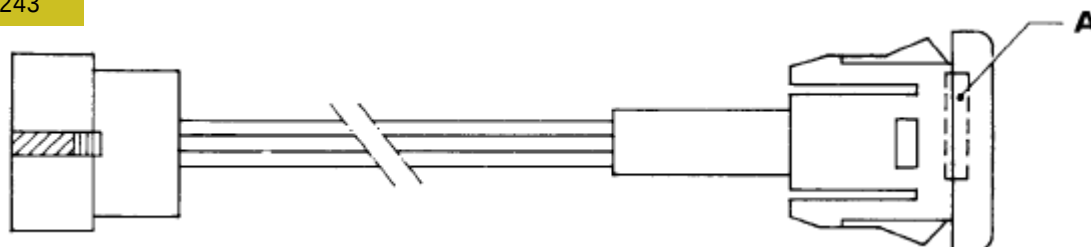


A) Sensor

77563

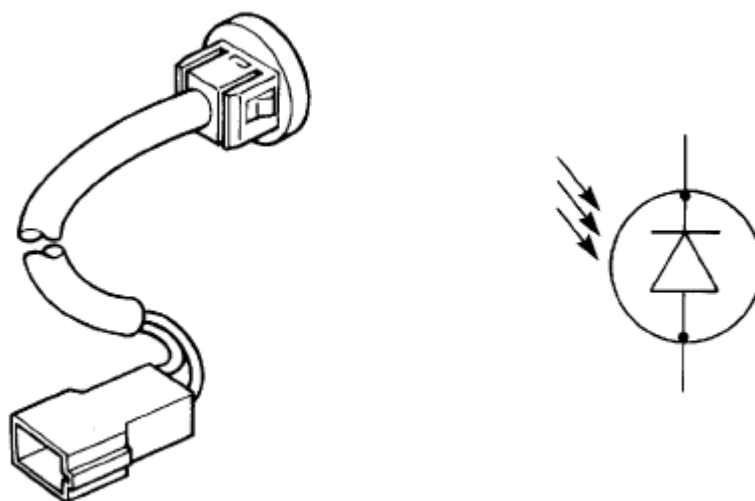

77564

Figure 244

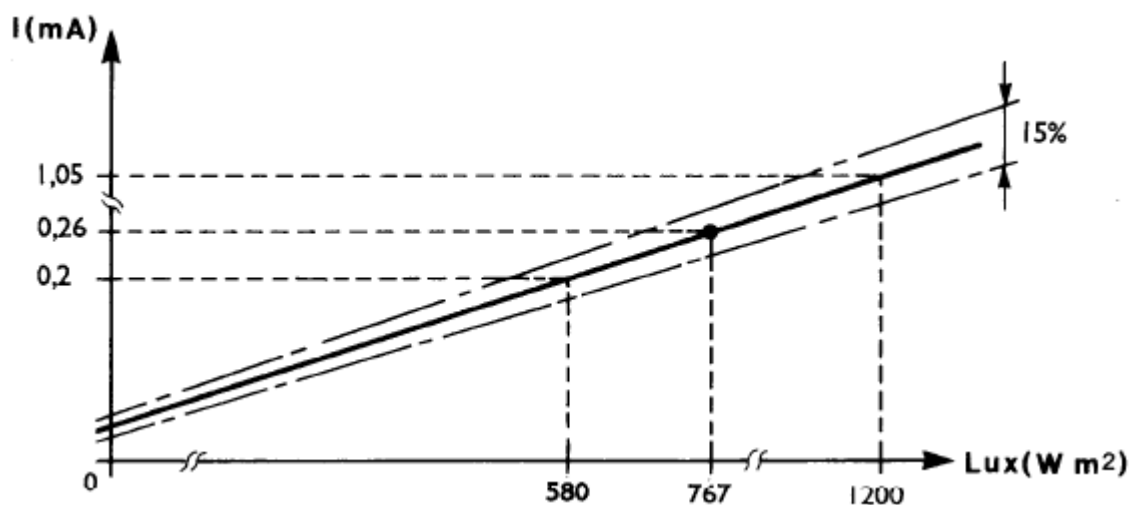

77565

Aquila Trucks Centres

Reduction gear motors

The four automatic system units are located in the heater/conditioner inside the cab, according to their functions. Their electrical features are the same.


They are activated directly by the electronic centre at 24 V rated voltage and absorb from 20 to 40 mA.

Motor resistance = $\sim 112 \text{ Ohm}$.



Maximum absorption at travel end is 200 mA, when the centre cuts supply off.

Their potentiometer is used as a return signal and when first lit, the centre detects and stores end travel values to divide the operating field. It is supplied at 5V, its resistance = $\sim 5 \text{ Kohm}$.

Figure 245

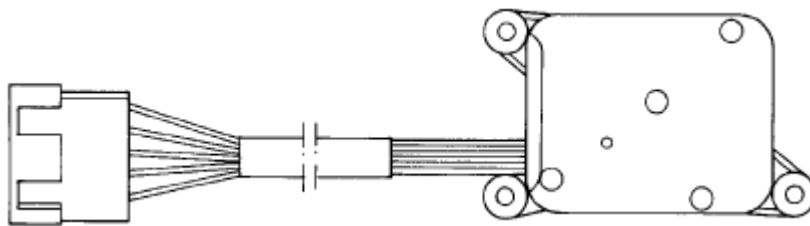

77571

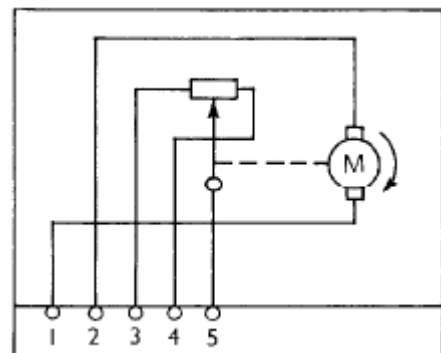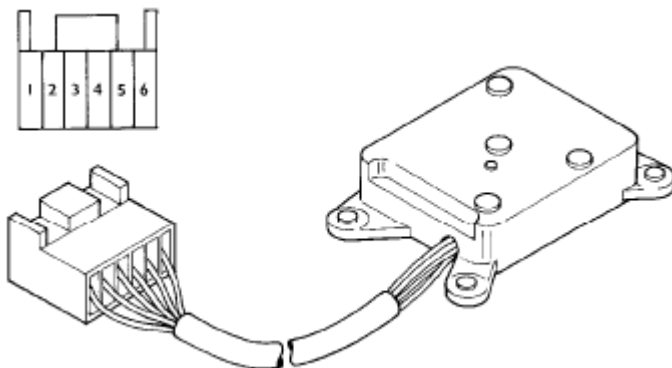

77573

Pin-out

Pin	Cable colour	
1	White	+/- 24V
2	Violet	+/- 24V
3	Blue	0V
4	Orange	0 ÷ 5V
5	Green	+ 5V
6	-	Free

NOTE If a stepper motor is replaced, it is MANDATORY to carry out the system RESET by disconnecting and reconnecting vehicle batteries.


Aquila Trucks Centres

Blower control module

This electronic circuit located in the heater/conditioner unit adjusts double fan radial blower speed with some 200 different rates in the automatic mode and 8 in the manual mode.

The module is driven by the unit with a signal from 0 to 5 Volts while fans with a voltage from 0 to 24 Volts.

Figure 246

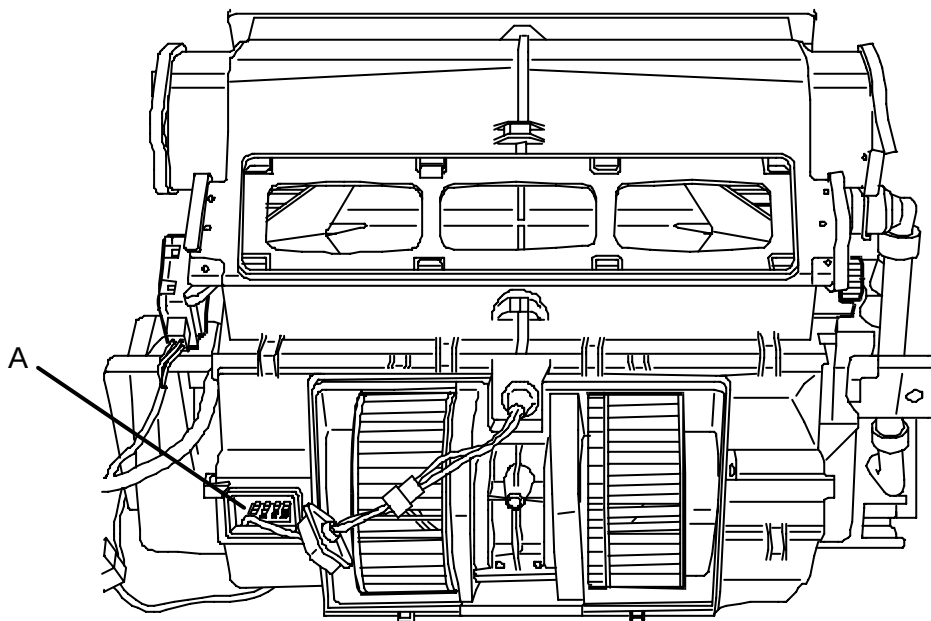

74244

A. Blower control module

Pin	Cable	Function
1	0000	Negative direct from the battery
2	7555	Centre control positive
3	7551	Positive direct from the battery

Aquila Trucks Centres

Solenoid valve (3 ways)


This one-directional NA unit is supplied by a battery-directed positive.

The electronic centre adjusts its duty cycle by supplying a mass.


This three-way valve performs all dosing and by-pass functions.

It is supplied by a battery-directed positive and is piloted by the negative supplied by the centre monitoring the duty cycle.


Figure 247

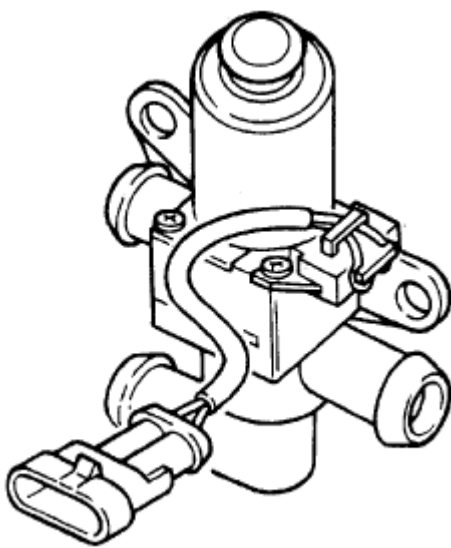

77569

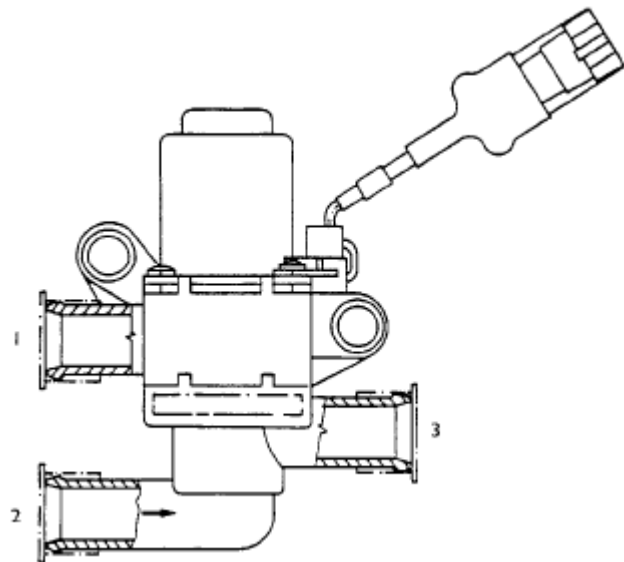

77568

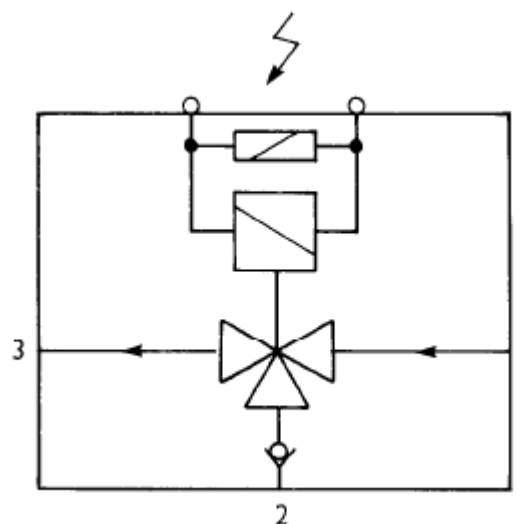


77570

Aquila Trucks Centres

Compressor

Figure 248

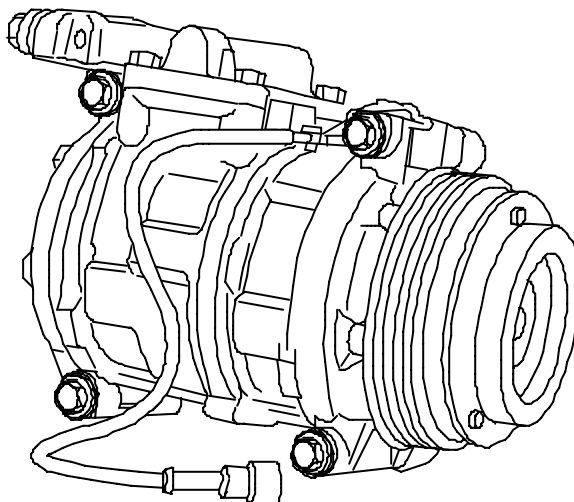

106393

	NIPPONDENSO
	ND 10 PA 17
Coolant	R134a
Lube oil	ND80
Quantity of coolant	700g
Quantity of oil	200cc.

R134a coolant is anyhow exclusively used in the STRALIS range

Aquila Trucks Centres

Drier filter and safety pressure switches

The drier filter is integral with the condenser located on the vehicle front.


The cooling system uses R134a coolant as specified on its cover plate.

The 4-level safety pressure switch unit is installed on the condenser return line.


The two type NC and NA pressure switches keep system pressure constant from a minimum of 2.5 (for the NA) to a maximum of 25 bars (for the NC). The system is cut off when values are outside this range.

The two NA pressure switches are to cutout the engine cooling fan coil when system pressure is between 18 and 22 bars. This is achieved by means of a mass signal the two switches transmit to the Body Computer control centre.


Figure 249

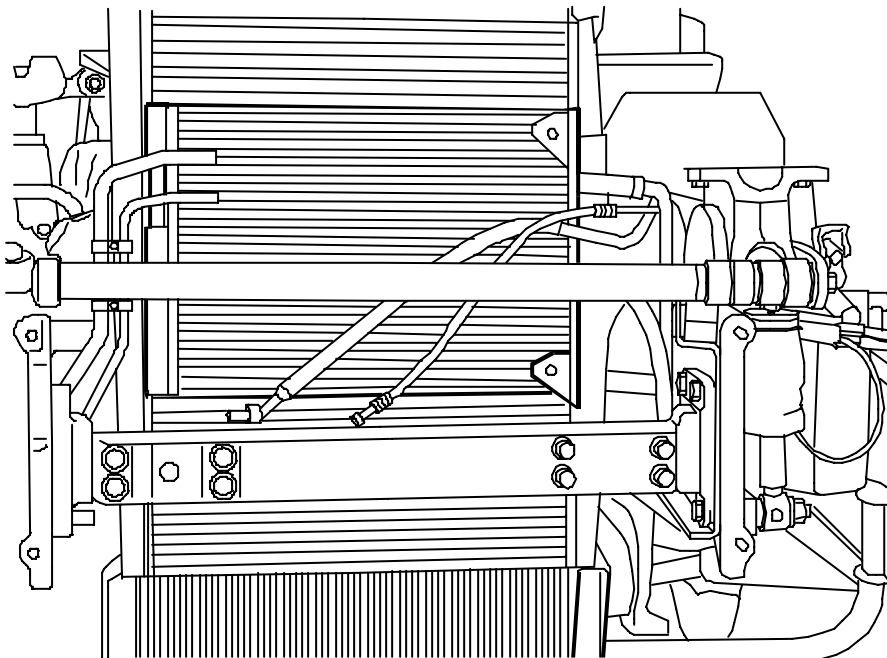

74245

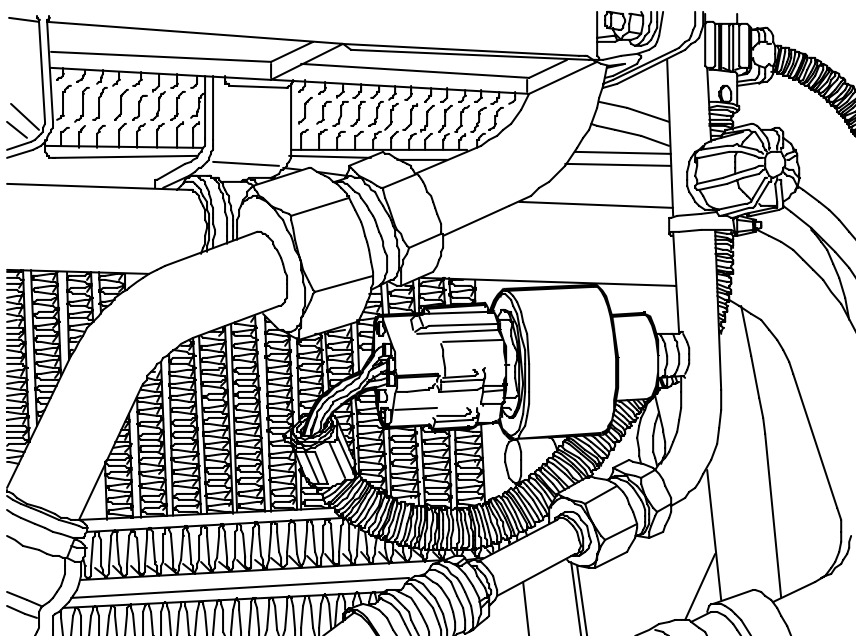

74247

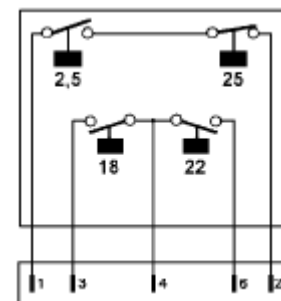

77560

Aquila Trucks Centres

Expansion valve



Its function is to lower liquid pressure from the condenser to a preset value so by circulating inside the evaporator the coolant can be sucked as a gas by the compressor.

It thus completes three basic functions:

- D DOSING
- D MODULATING
- D MONITORING

It is installed on the heater/conditioner unit close to the blower control module.

Figure 250

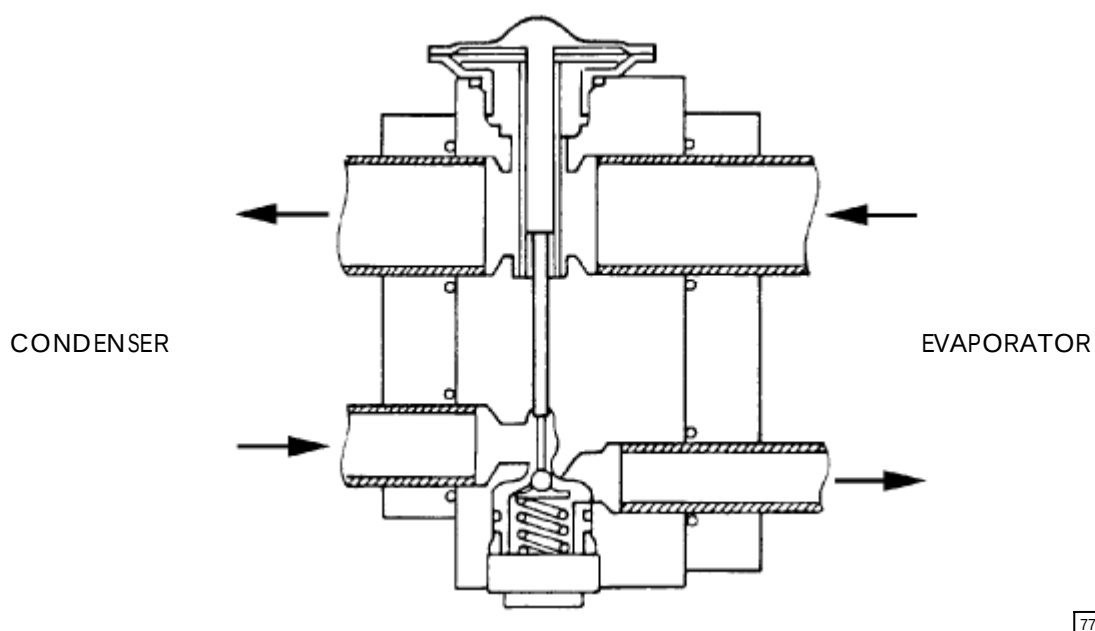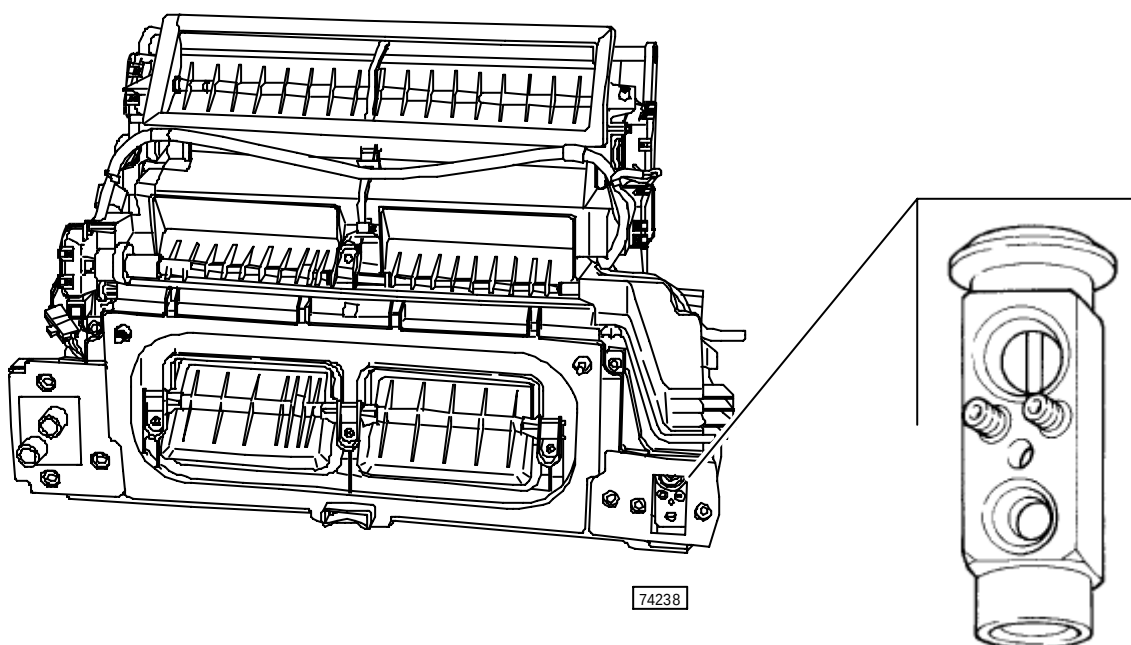

Aquila Trucks Centres


The expansion valve is of the union type and is placed between drier filter and evaporator.

Its task is checking and batching the cooling fluid flow in order to obtain the maximum refrigerating power from the system and to lower the cooling liquid pressure (upon exiting the filter) to a pre-established value, so that the fluid itself, by then circulating into the evaporator, can be sucked by the compressor in a completely gaseous state.

In this valve there are two cooling fluid passages:

- D The lower one that allows the cooling fluid to pass from drier filter (5) to evaporator (2). Along this path a spring (4) is placed that, suitably calibrated, allows obtaining such a temperature jump (overheating) as to ensure that the cooling fluid, upon entry the evaporator, is completely in a gaseous state. Moreover there is also a modulating element, in this case a ball (3) housed in the calibrated duct, that checks the cooling fluid flow rate to the evaporator.
- D The upper one that allows the cooling fluid to pass from evaporator (1) to compressor (6). Along this path instead there is a temperature sensor (7) that, depending on the temperature upon exiting the evaporator, allows obtaining a control action on the cooling fluid flow rate, through the modulating and overheating checking element (3), through the spring (4).

Figure 251

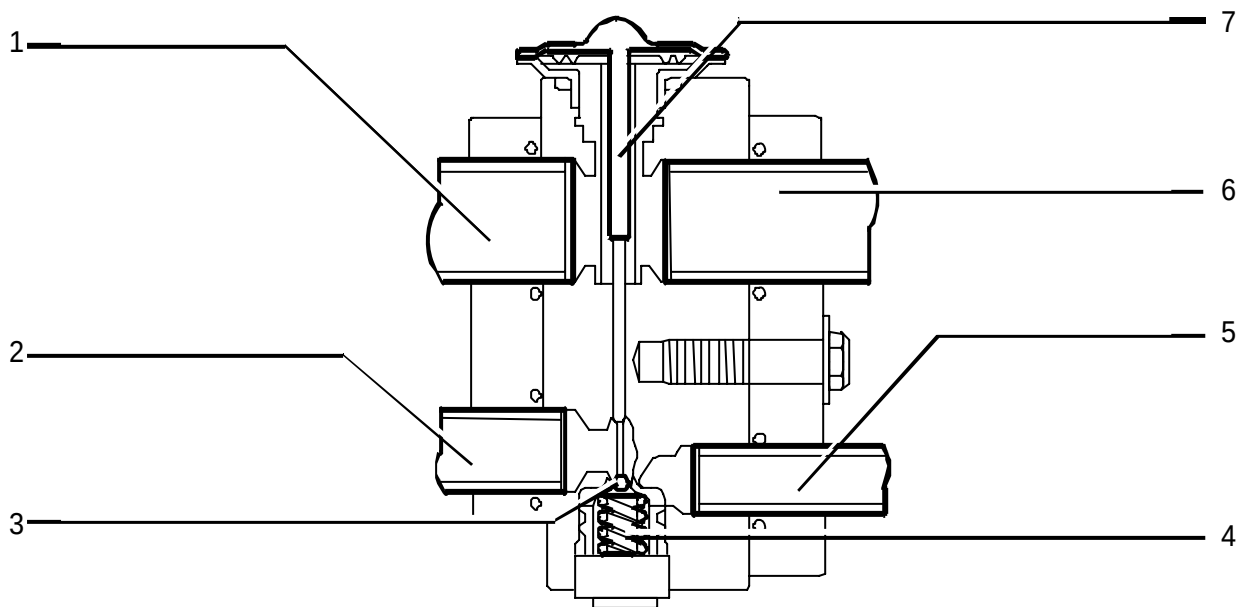


77565


Aquila Trucks Centres

Conditioner control unit

Figure 252

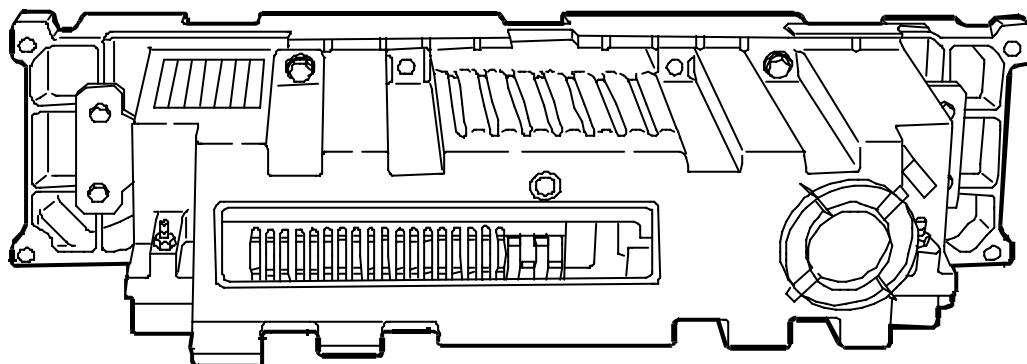

74239

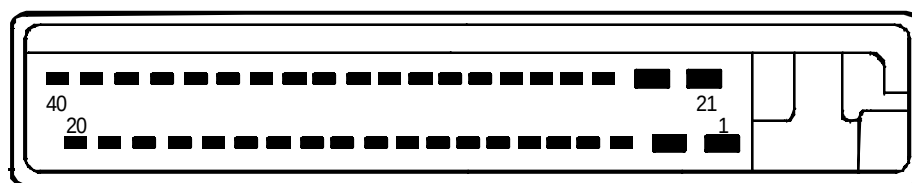

74248

Pin	Cable	Function
1	-	-
2	7550	Positive direct from the battery
3	-	-
4	2296	K line for diagnosis
5	Ws/Bi	CAN - H (BCB) line
6	9993	Outgoing positive compressor electromagnetic clutch signal
7	7568	Mixer reduction gear motor power supply
8	7566	Recirculation reduction gear motor power supply
9	0562	Floor reduction gear motor power supply
10	7564	Windshield defrost reduction gear motor power supply
11	-	-
12	0550	Sensor and reduction gear motor mass
13	7572	Evaporator temperature reference signal
14	7574	Sun ray sensor signal
15	7565	Recirculation potentiometer reference voltage
16	7561	Floor potentiometer reference voltage
17	-	-
18	2290	Internal temperature sensor motor signal
19	-	-
20	7555	Outgoing positive blower control module signal
21	0000	Negative direct from the battery
22	9552	Outgoing negative electro valve signal
23	-	-
24	-	-
25	Gn/Ve	CAN - L (BCB) line
26	0568	Mixer reduction gear motor power supply
27	7569	Internal temperature sensor motor power supply
28	0566	Recirculation reduction gear motor power supply
29	-	-
30	0564	Windshield defrost reduction gear motor power supply
31	7562	Floor reduction gear motor power supply
32	7575	Internal temperature sensor signal
33	7571	Blow air temperature reference signal
34	7567	Recirculation potentiometer reference voltage
35	7563	Windshield defrost potentiometer reference voltage
36	7560	5-Volt Mix / Floor / Rec / Defrost potentiometer signal
37 ÷ 40	-	-


Aquila Trucks Centres

MANUAL AIR CONDITIONER

In the manual version the refrigerating circuit and heater checks occur by means of a device with leverages and knobs placed in the lower part of the central dashboard.

The system is checked by an electronic unit but by means of knob controls used for the following functions:

Figure 253

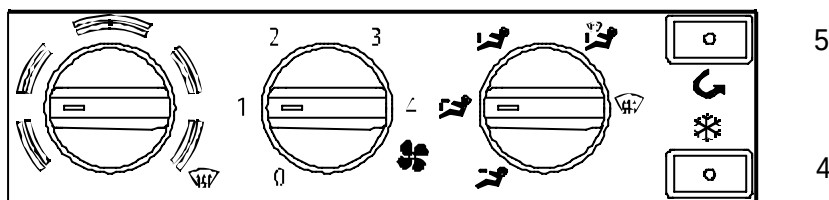

1. Heating water cock control
2. Internal fans speed
3. Air flows distribution
4. Compressor control switch
5. Recirculation function switch

73668 C

CONTROLS DESCRIPTION

Water cock control

The knob rotation adjusts water cock position and consequently the amount circulating inside the cabin radiator.

If supplementary WATER heater is present, this knob controls three microswitches used for the following functions:

- 20% supplementary heater water pump activation
- 60% top flap closing motor activation (TOP FLAP)
- 80% supplementary heater connection

If supplementary AIR heater is present, this knob controls two microswitches used for the following functions:

- 60% top flap closing motor activation (TOP FLAP)
- 85% supplementary heater connection

NOTE The motor for TOP FLAP function is present only in manual version, since in automatic version this function is performed through a bowden cable connected to air mixing motor (MIX).

- Maximum heating = TOP FLAP closed
- Maximum cooling = TOP FLAP open

Internal fan speed

This knob is composed of a multiple switch that controls three adjusting resistances for different motor speeds.

Air flows distributions

This control through bowden cables allows distributing the air flows in the desired cabin areas.

Recirculation function switch

This button allows, through a specific motor, closing the external door with a percentage of 95% of internal air and 5% of external air.

The motor has no position sensors since it works only under the two all-closed or all-opened conditions.

On the button there is a yellow-coloured led that signals its connection.

There is no time limit for this function.

Aquila Trucks Centres

Compressor control switch

This button allows connecting the air conditioner compressor.

The clutch closure is constrained by safety system pressure switches and by fixed-calibration evaporator thermostat

Such thermostat, of the mechanical type, adjusts the temperature inside the evaporator in order to disconnect the compressor clutch upon reaching $\sim 2\text{ }^{\circ}\text{C}$ and reconnect it at $\sim 5.5\text{ }^{\circ}\text{C}$

The compressor operation is constrained by the manual connection of at least one fan speed.

A yellow-amber-coloured led is present on the button and signals the compressor connection.

STEPPER MOTORS

In manual system there are two stepper motors placed on heater assembly

They are composed of a motor without potentiometers and have the same electric characteristics.

The ratio motors are used to perform the following functions:

RECIRCULATION (RIC)

TOP FLAP (TOP FLAP)


MOTORS

- D They are supplied at 24 V.
- D Motor resistance is $\sim 112\text{ }\Omega$.
- D No-load absorption is about 30 mA.
- D Limit absorption is about 200 mA.

Aquila Trucks Centres

Block diagram

Figure 254

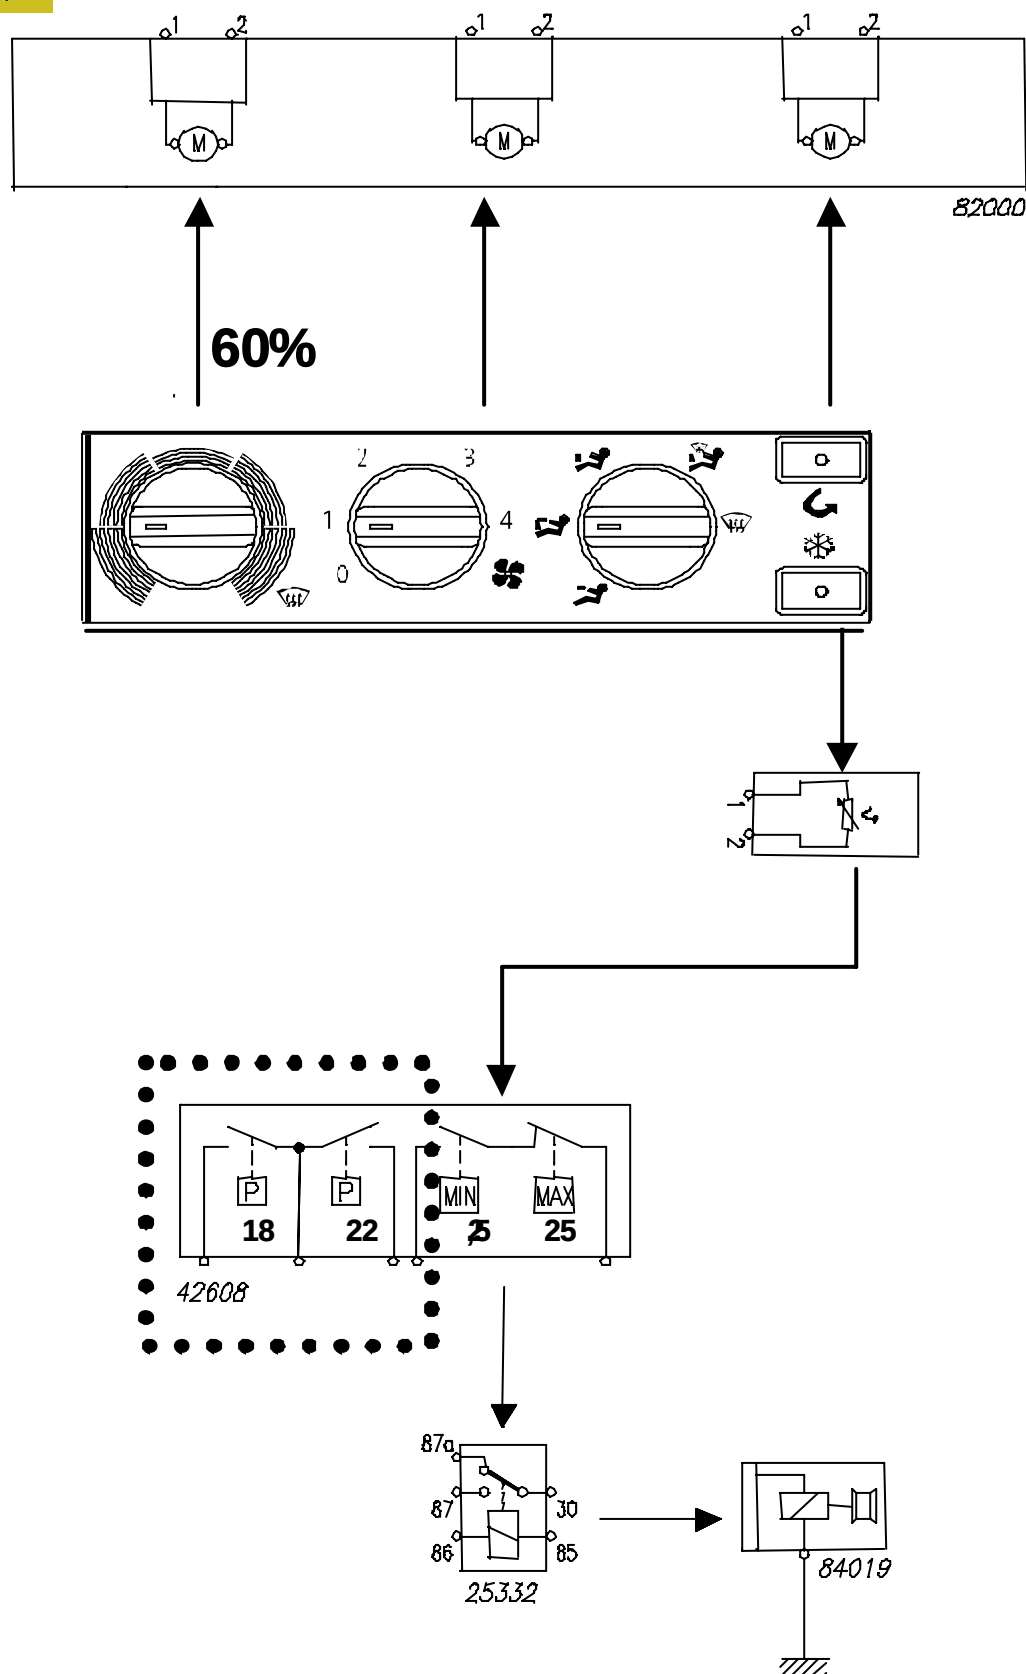


106972

42045. External temperature sensor - 82000. Windscreen defroster assembly - 84009. Internal temperature sensor - 42608. Cooling fluid safety pressure switches - 25332. Compressor connection remote control switch - 84019. Compressor

Aquila Trucks Centres

Air conditioner fuses remote control switches

Figure 255

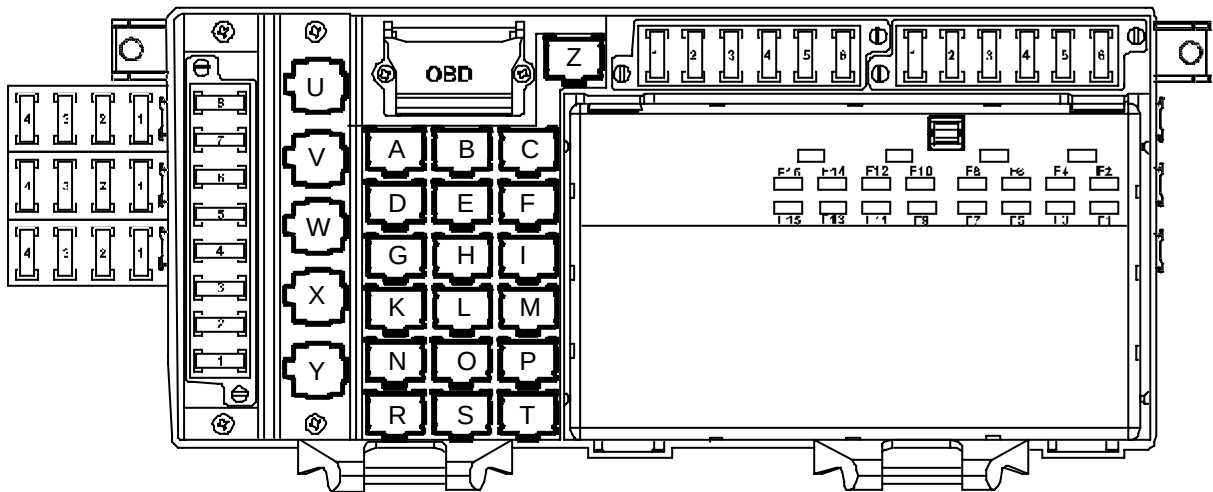

112591

Black-coloured fuse-holder (70604)

Position	Description	Delivery A
2	Air conditioning system	10
3	Air conditioning system	5
4	Supplementary heating	15
5	Supplementary heating	5

Ref.	Description	Component code
B	Water heated remote control switch (opt.)	25337
E	Heated remote control switch (opt.)	25325
H	Manual conditioner remote control switch	25310
I	Manual conditioner remote control switch	25874
L	Manual conditioner remote control switch	25332B
M	Manual conditioner remote control switch	25322
O	Manual conditioner remote control switch (opt.)	25332A
P	Manual conditioner remote control switch (opt.)	25327

Aquila Trucks Centres

HYDRONIC D 10 WATER HEATER

System operation

By connecting the burner, the electronic unit controls water pump, fuel batching pump, burner motor and ignition spark plug.

The water pump circulates the cooling liquid in the cooling circuit of the engine to be heated.

The burner motor sucks and inserts the right amount of air necessary for combustion.

The ignition spark plug heats air and burns fuel injected by the batching pump.

Purpose of the batching pump is taking and injecting fuel onto spark plug.

After 90 seconds, the unit, through the flame sensors, checks that the exhaust gases temperature value is included between 500 and 600 °C, (ignition has correctly occurred).

Upon reaching about 700 °C the unit disconnects the spark plug and the burner works in self-combustion.

If the flame sensor does not measure the above temperature, thereby the burner is not turned on, the unit repeats the ignition procedure. If it does not start again, the unit turns the burner off and it will then be mandatory to manually switch it on again.

If the heater does not start for three consecutive times, it is blocked.

The unit checks, through water temperature sensor and overheating sensor, whether combustion and burner correctly operate.

The water temperature sensor is used by the unit to adjust the burner working power (maximum, medium, minimum and standby).

In the manual version, upon reaching 55 °C, the system connects the fans inside the cabin.

The overheating sensor is used by the unit to turn the burner off in case of excessive water temperature (about 115 °C).

The burner operating time is determined by driver's settings.

Upon turning off, the burner performs a washing phase that lasts for about 3 minutes in order to be ready for the following starting.

The heater is connected with its own control logic in the air conditioning system and is therefore equipped with an electronic unit with related connector.


The unit is directly assembled onto the heater.

The heater can be directly driven by the automatic air conditioning system, by the version with manual control or through the Bed Module unit.

Aquila Trucks Centres

COMPONENTS LOCATION

Figure 256

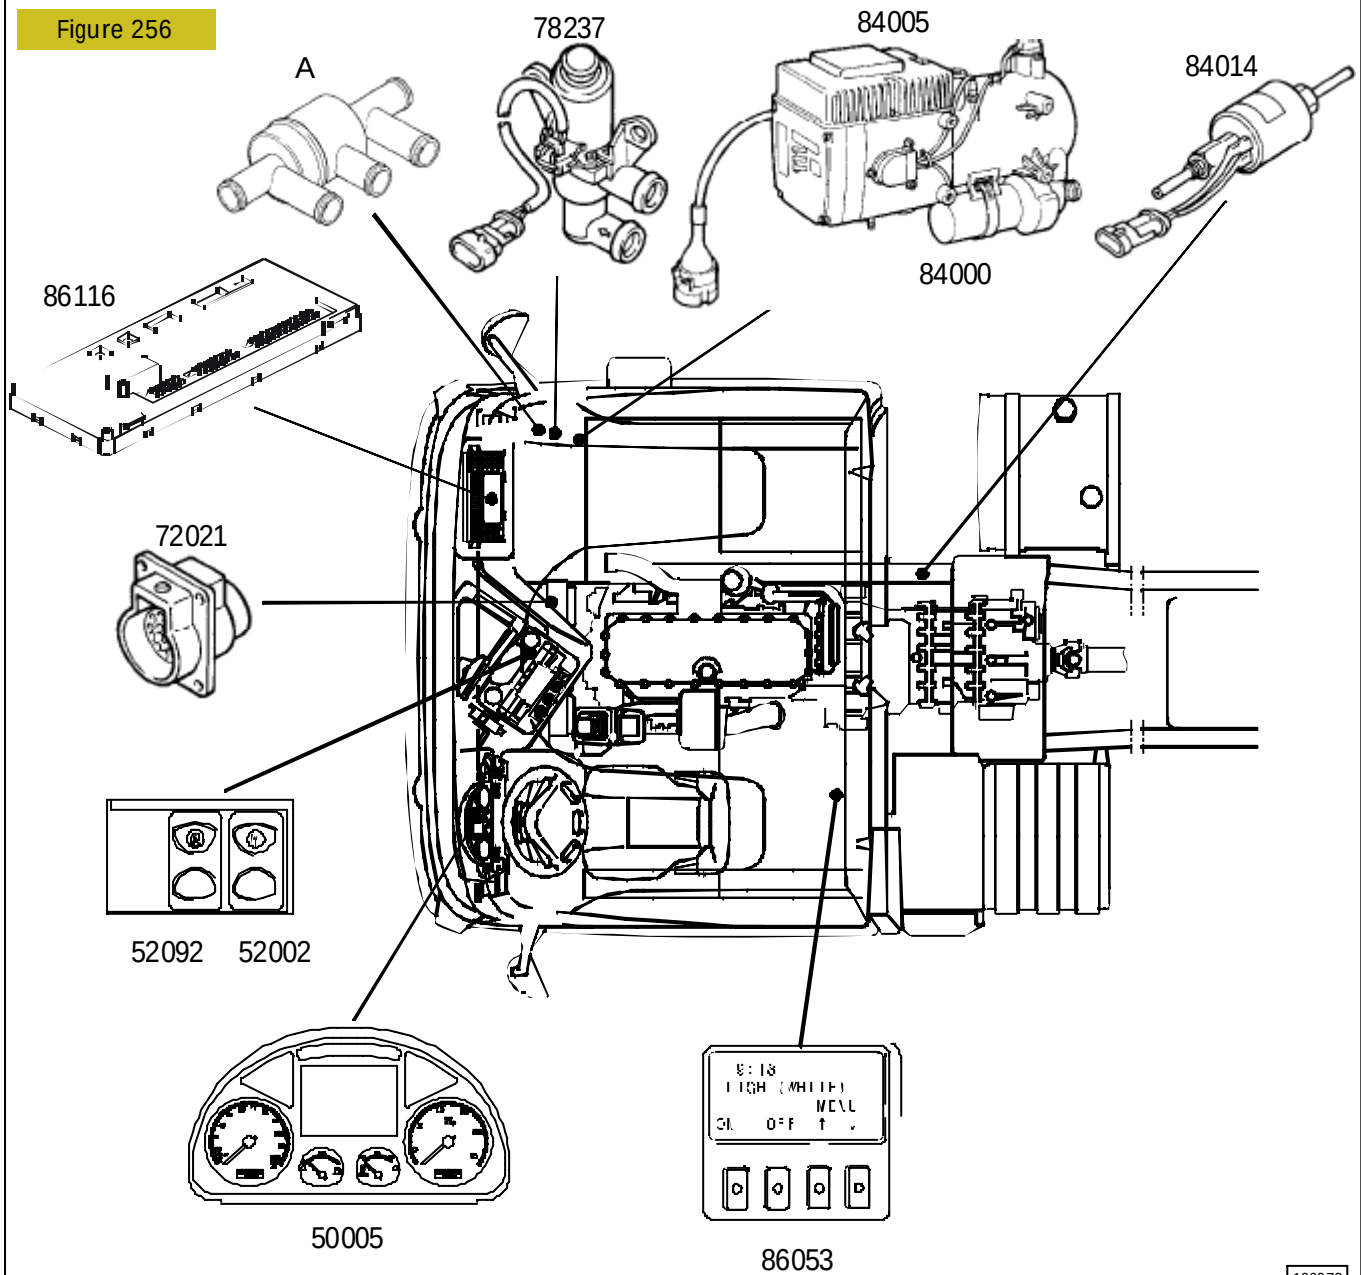

Legenda

A	Thermostat 65 _C
50005	Cluster
52002	Heater connecting switch
52092	Cabin/engine heating switch
72021	30-pole diagnosis connector
78237	Two-way solenoid valve (D+)
84000	Supplementary water heater
84005	Heater control electronic unit
84014	Fuel batching pump
86053	Bed Module
86116	Body Computer

106973

Aquila Trucks Centres

SYSTEM COMPONENTS


- 1) Burner motor
- 2) Flame sensor
- 3) Combustion chamber
- 4) Burner control unit
- 5) Ignition spark plug
- 6) Water temperature sensor
- 7) Flame pipe
- 8) Heat exchanger
- 9) Overheating sensor
- 10) Water pump
- 11) Silencer
- 12) Air suction pipe
- 13) Fuel batching pump
- 14) Bed Module unit
- 15) Automatic Webasto air conditioner electronic unit
- 16) Cabin/engine heating and heater connecting switch
- 17) Air conditioner control dashboard for manual version
- 18) Cluster

Connection to circuit

- WE. Water inlet
WA. Water outlet
V. Comburent air inlet
B. Fuel supply
A. Exhaust gases outlet

Aquila Trucks Centres

Figure 257

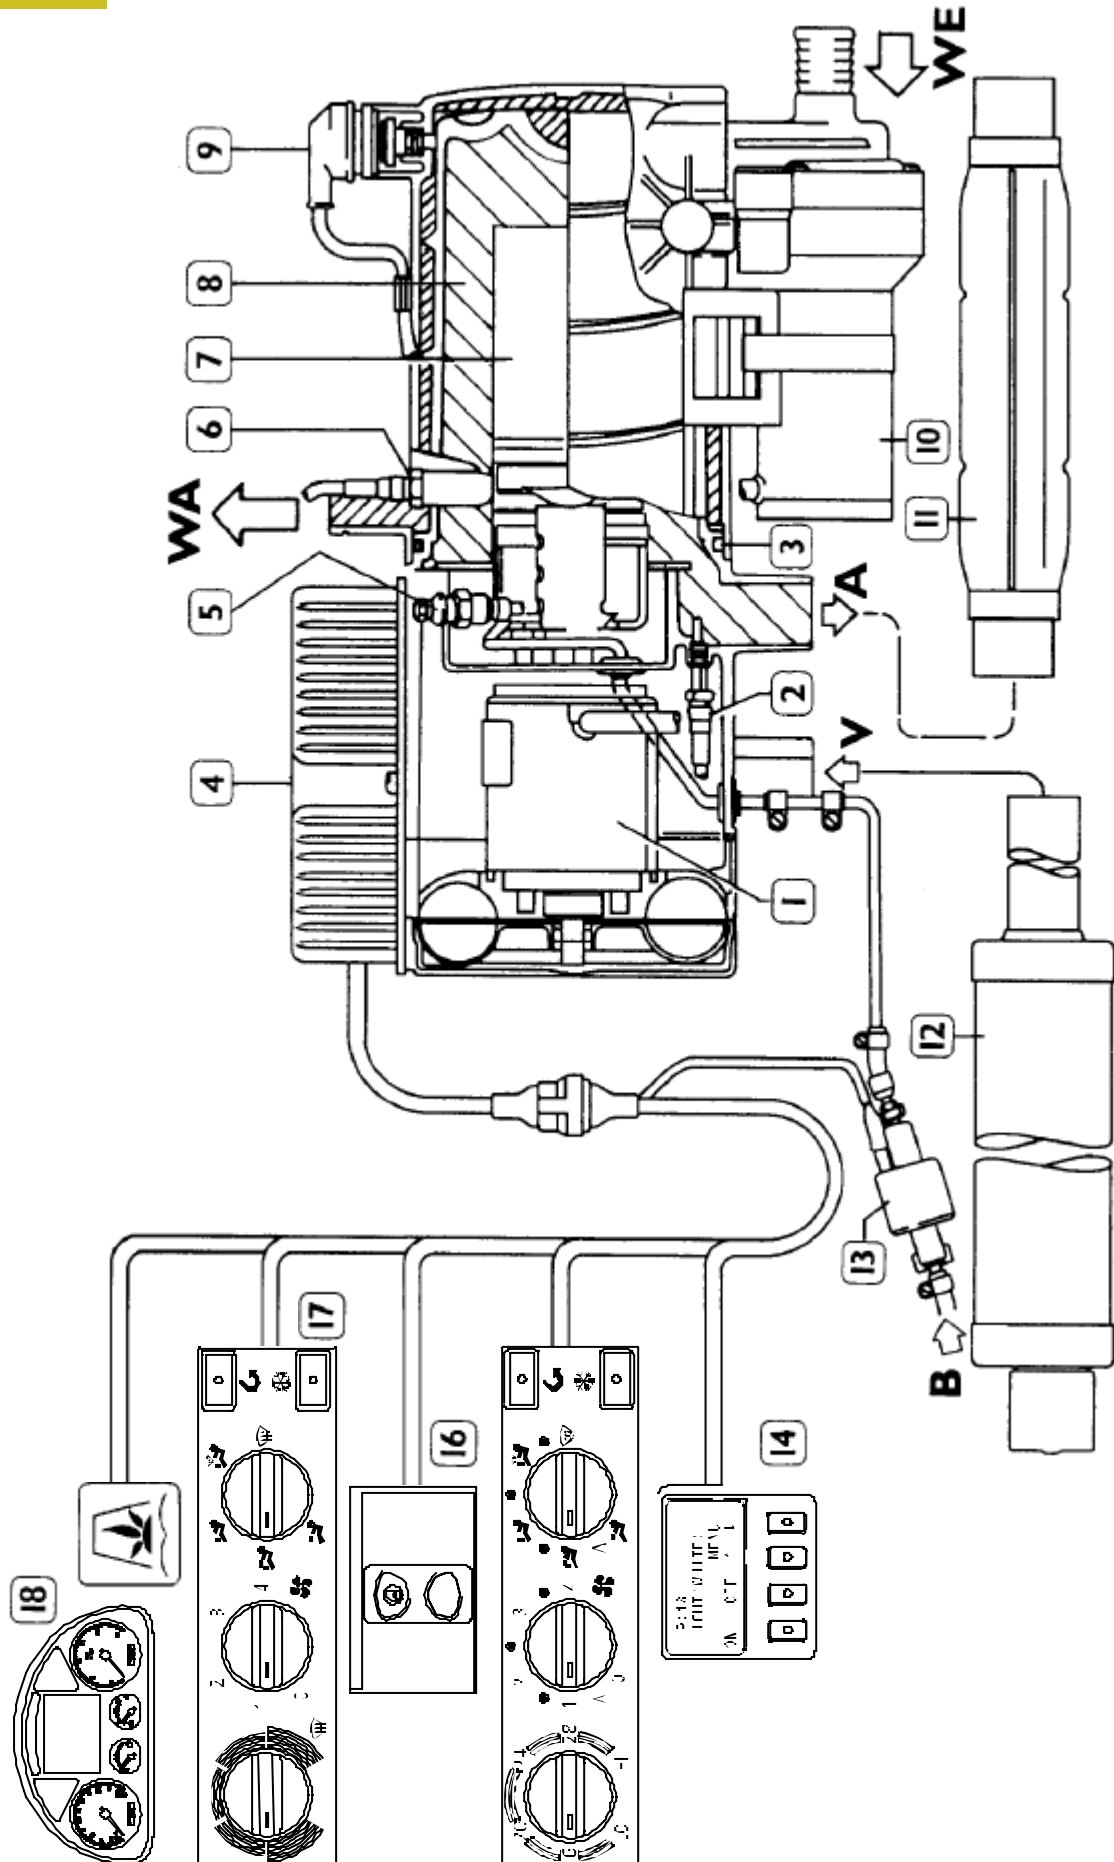

106974

Aquila Trucks Centres

65 °C THERMOSTAT

It is assembled on the right vehicle side near the burner and has been inserted in order to allow quickly heating the cabin when the engine is off.

It is equipped with a temperature-sensitive membrane calibrated at 65 °C.

With temperature < 65 °C water will only circulate in cabin (small circuit).

With temperature > 65 °C the thermostat switches its position, allowing water to circulate both in cabin and in engine, heating them both (big circuit).

3-WAY SOLENOID VALVE

In the WEBASTO air conditioning system there is a single 3-way solenoid valve that performs the function of batching and bypassing cooling water from engine to radiator inside the cabin.

The valve is placed next to the front left side of the engine (driver side).

It is of the Normally Open type at rest and is supplied by a direct battery positive.

The electronic unit, by providing it with a mass, adjusts its working cycle (Duty-Cycle).

WATER PUMP

The water pump is directly assembled on the lower part of the burner.

It is used to circulate the engine cooling water in the circuit.

The supply voltage is 24 Volt.

The minimum flow rate is about 500 l/h.

FUEL BATCHING PUMP

It is assembled on the chassis next to fuel tanks with a slant of 15° to facilitate air drain. It is used to take and inject gas oil inside the burner.

The unit supplies the pump with a pulse signal.

For a correct operation the internal delivery pipe diameter must be 2 mm and must not exceed the length of 5 meters.

It embeds a small fuel filter and a unidirectional check valve.

The fuel flow rate is about 0.2 l/min.

Aquila Trucks Centres

WATER TEMPERATURE SENSOR

It is a PTC sensor assembled on heat exchanger; it measures different water temperatures in order to adjust the burner power and, only in manual version, upon reaching 55 °C, it allows connecting the fans.

The sensor resistance at 20 °C is ~950 Ohm.

FLAME SENSOR

It is a PTC sensor assembled inside the combustion chamber next to the exhaust gas outlet and measures the current temperature, in order to disconnect the spark plug in case the burner has not been turned on.

It disconnects the spark plug at an exhaust gas temperature of about 700 °C

The sensor resistance at 20 °C is ~1080 Ohm.

IGNITION SPARK PLUG

It is a resistance placed inside the combustion chamber.

The unit supplies it with pulses through an internal electronic regulator.

The rated operating voltage is 18 Volt to allow its operation also with battery voltages of ~ 22 Volt.

The resistance at 20 °C must be < 2 Ohm.

OVERHEATING SENSOR

It is a temperature sensor assembled on the heat exchanger, it measures the different water temperatures to possibly disconnect the burner upon reaching about 115 °C

In case of intervention the sensor restores itself autonomously. It is not of the manual restoring type.

The sensor resistance at 20 °C is ~ 10 K Ohm.

BURNER MOTOR

It is embedded into the assembly in the rear burner part.

The rotation speed is managed by the unit by means of an integrated electronic regulator.

It embeds an inductive sensor that measures the engine rotation speed.

Aquila Trucks Centres

ELECTRONIC UNIT

It is directly assembled on heater body and is interfaced with vehicle through a 14-pin connector.

It is connected to CAN BCB line.

It has a very advanced diagnostic system and transmits possible error codes on vehicle Cluster.


Pin	Cable	Function
A1	7506	Positive from water cock knob manual version (25% position)
A2	7711	Positive from boiler activating switch
A3	Ws/Bi	CAN H line
A4	7775	Positive for ambient thermostat control (manual version)
B1	Gn/ve	CAN H line
-	-	-
B3	2296	Diagnosis K line
B4	6605	Positive for cabin/engine heating key warning light
-	-	-
C2	7708	Direct positive from battery
C3	0000	Direct negative
C4	7783	Positive for fuel batching pump control
-	-	-
-	-	-

Aquila Trucks Centres

SCR (SELECTIVE CATALYTIC REDUCTION) SYSTEM - DENOX 2

The system operation is described in the "Engine" section of this manual.

Figure 258

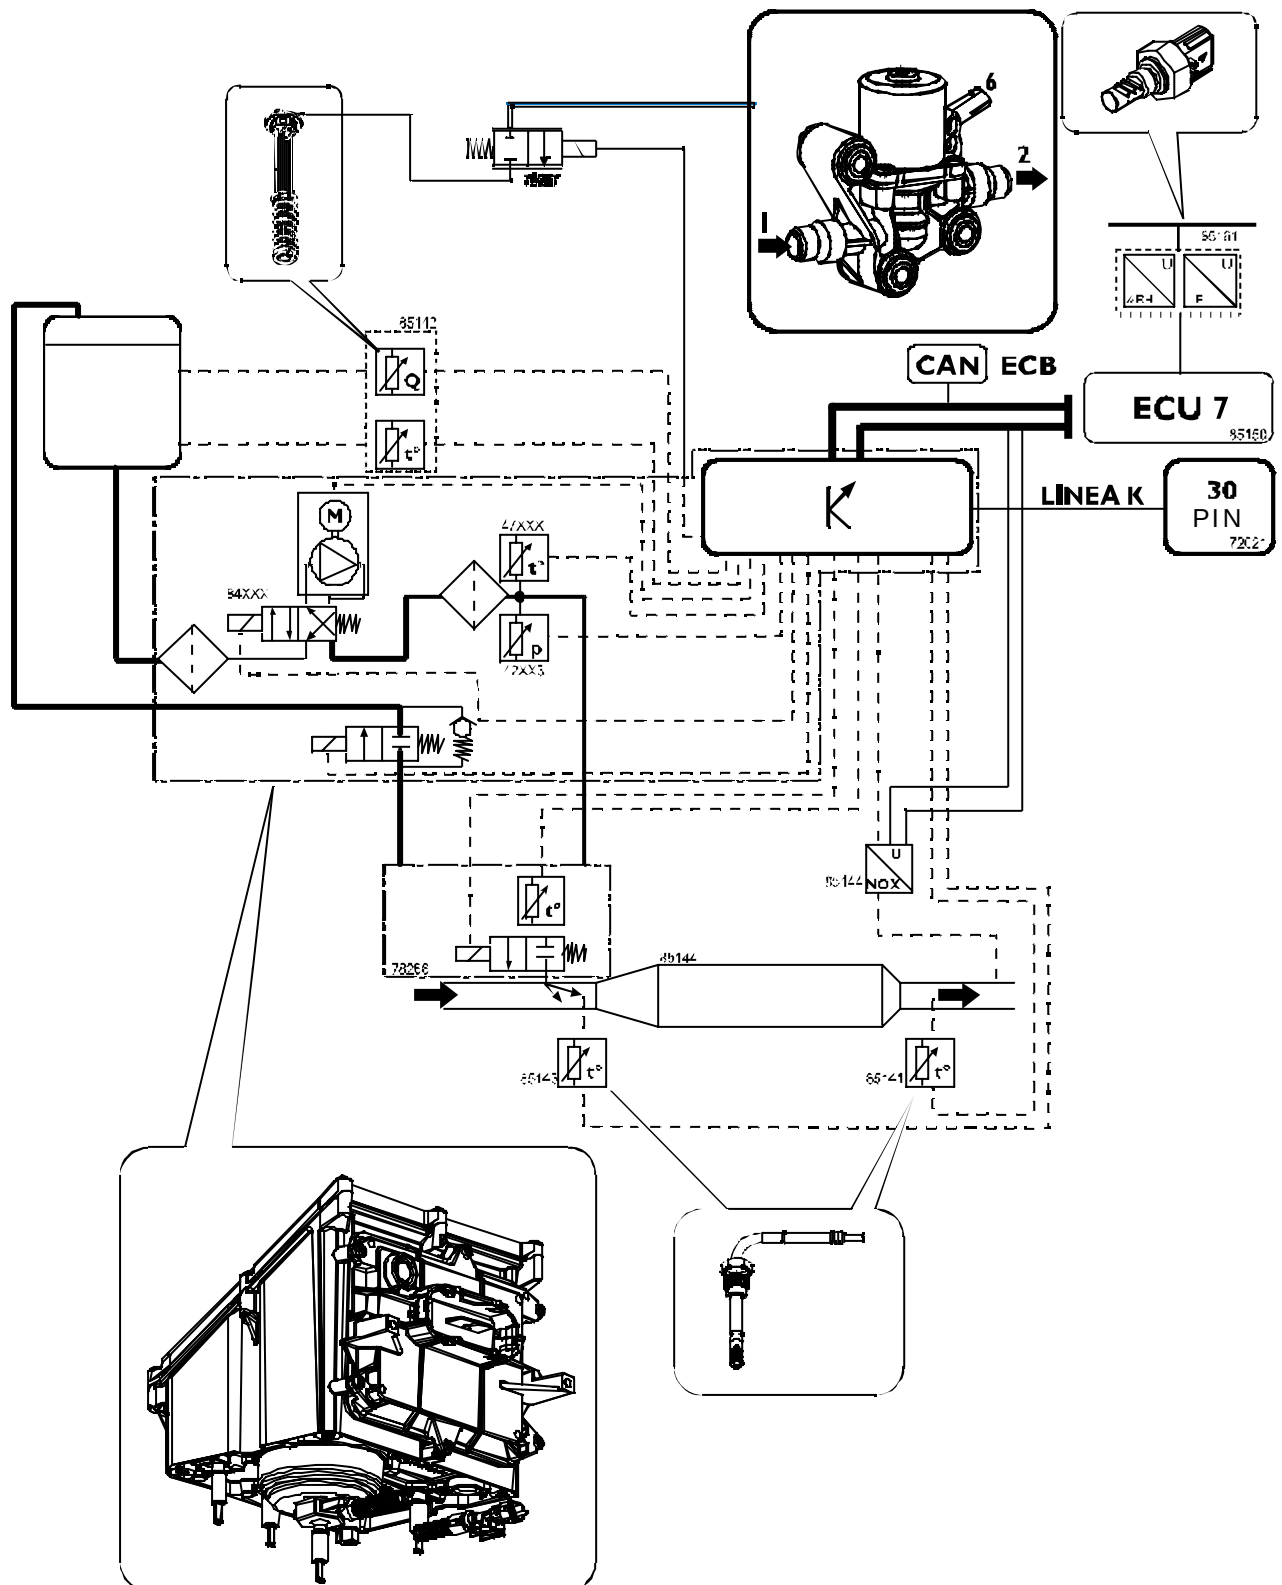

SCR SYSTEM OPERATION DIAGRAM

108913


Aquila Trucks Centres

Name	Description
42XX3	AD-Blue solution pressure sensor
47XXX	AD-Blue solution temperature sensor
72069	16-pole joint for OBD (on-board diagnosis)
78266	Measuring module solenoid valve with SCR
78267	Engine water circulation switch valve for UREA tank heating with SCR
84XXX	Electric displacement pump with pressure control valve and circulation valve
85140	Electronic control for SCR pumping module
85141	Catalyst output temperature sensor with SCR
85142	UREA tank level and temperature sensors with SCR
85143	Catalyst input temperature sensor with SCR
85144	Nitric oxide (NOx) measuring sensor with SCR
85150	EDC control unit
85161	Combustion air relative humidity and temperature sensors with EDC

Aquila Trucks Centres

Pin - out

Figure 259

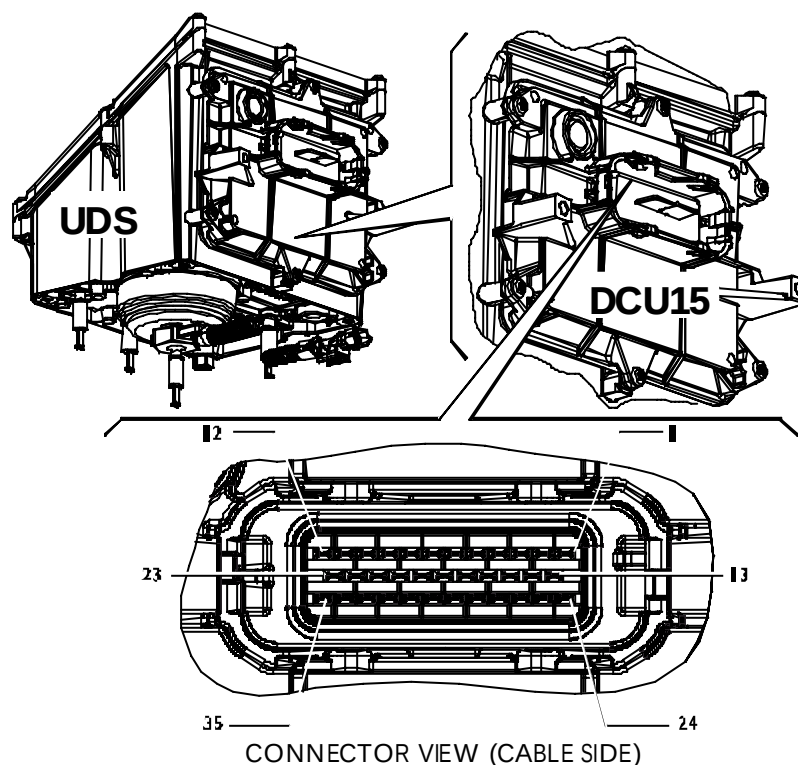

113576

Ref.	Description	Cable colour code
1	+ for engine water circulation solenoid valve for urea tank heating	7542
2	+ for urea filter outlet heater	7546
3	Direct battery + (+ Bat)	7540
4	Urea filter output heater control	7540
5	CAN - H (ECB) line	White
6	CAN - L (ECB) line	Green
7	Spare	-
8	Spare	-
9 ÷ 10	Spares	-
11	Metering module solenoid valve control ground	9541
12	+ for metering module solenoid valve	7541
13	Spare	-
14	Ground	0000
15	Ground	0000
16	Spare	-
17	Inlet catalyst temperature sensor ground	0544
18	Urea tank level sensor signal	6543
19	Urea tank temperature and level sensor ground	0543
20 ÷ 22	Spares	-
23	Engine water circulation solenoid valve control ground for urea tank heater	9542
24	+15	8540
25	Outlet catalyst temperature sensor ground	0541
26	Outlet catalyst temperature sensor signal	6541
27	Spare	-
28	Outlet catalyst temperature sensor signal	6544
29	Urea tank temperature sensor signal	6542
30	Spare	-
31	K line (16-pin test connector)	2257
32	Spare	-
33	Urea filter outlet heater control ground	9546
34 ÷ 35	Spares	-

Aquila Trucks Centres

CENTRAL LOCKING WITH REMOTE CONTROL

The system consists of one or several (max. 8) transmitters and a receiver.

Transmitter

The transmitter has a special container of its own, equipped with an eyelet and ring. The shock-proof transmitter container is also waterproof.

The transmitter sends the receiver a variable code (rolling code) by means of a radiofrequency signal at 433.92 MHz (EC Directive 95/56).

It is equipped with two buttons for door opening and closing, respectively.

By keeping the button pressed down for 50 msec, the variable code will be fully transmitted. If the button is actuated continuously, however, transmission will be interrupted after 5 seconds ($\pm 10\%$).

The transmitter operating range is 10 m.

The battery guarantees a 2 years' service life. Following the replacement, the transmitter may be briefly actuated twice in order to restore synchronism with the receiver. This sequence is also permitted at any time other than battery replacement.

Receiver

The receiver is housed inside a container with a white cover, which includes a transmitter programming button (easily accessible and protected against unintentional actuation), a programming check green LED, and a 8-way connector.

It is housed in instrument panel upper side, in front of passenger's seat.

The receiver antenna is housed inside the container, too.

The receiver receives and decodes the code that was sent by the transmitter, and can store up to eight codes. Doors locking and unlocking commands go from the transmitter to the receiver, which sends the signal to Body Computer central unit, which in turn via CAN line sends a message to Door Modules to activate the locks.

If the vehicle is in the key-ON condition (+15 is available), the receiver will perform no actuation through the remote control.

The receiver manages synchronization between the locks, and resumes correct alignment through a sequence of two or several transmitter or lock key drives.

Blinker control


Door lock locking and opening will be signalled by the lighting of the indicator lights. Therefore, the receiver need be interfaced with the Body Computer control unit that manages the above-mentioned lights.

The receiver features an output (to the ground) that is connected in parallel with the emergency light switch. The latter consists of an unstable button that actuates and deactivates the blinking sequence (blinker signal).

Description of blinker controls:

- T1 = 120 msec (Start)
- T2 = 700 msec (Delay - Lock)
- T2 = 1550 msec (Delay - Unlock)
- T3 = 120 msec (Stop)


Figure 260

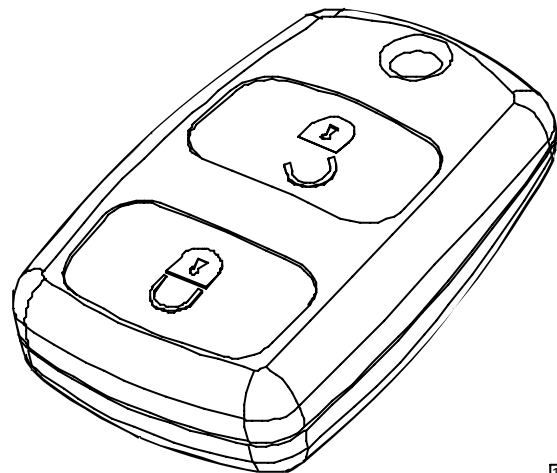

105989

TRANSMITTER

Figure 261

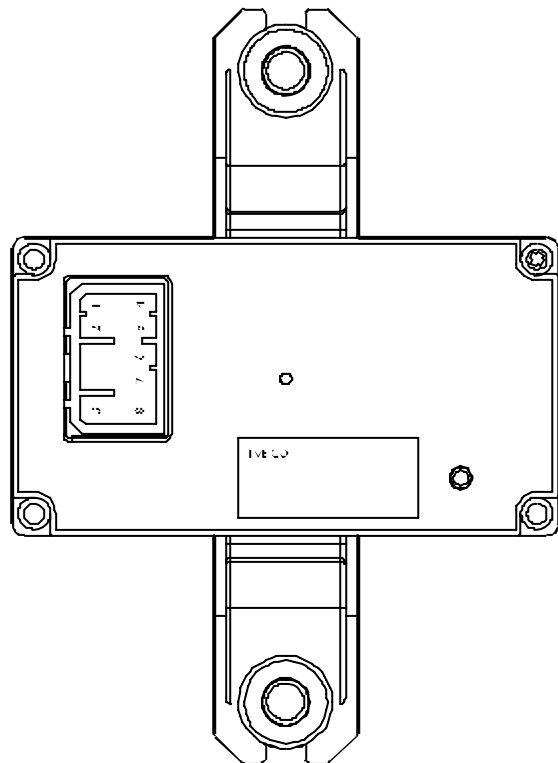

105990

CENTRAL LOCKING CONTROL UNIT (RECEIVER)

Aquila Trucks Centres

Control unit pin-out (receiver)

Pin	Function	Cable colour code
1	Blinker control	1113
2	Engine power supply for centralised closure (door closure)- (without DDM, PDM)	9965
2	Battery positive	7772
4	Ground	0000
5	Central locking control (door closing)	0064
6	Central locking control (door opening)	0065
7	+15 power supply	8871
8	Engine power supply for centralised closure (door opening) - (without DDM, PDM)	9964

Programming

The programming status makes it possible to get the receiver to recognize the transmitters enabled to control the respective functions.

Programming is accessed through the rest state when the +15 signal is not available.

The receiver may be controlled by a transmitter with a universal code as long as at least one transmitter is not programmed.

After a variable code (other than the universal code) has been programmed, the latter will not be recognized any longer.

Transmitters are programmed in the FIFO mode.

Two transmitter programming modes are available:

- simplified programming: it allows you to program the transmitters quickly. It can be actuated until 128 actuations are performed after the first programming, or until it is disabled.
- Protected programming: it guarantees the customer against the risk of other transmitters being programmed without the knowledge of the customer themselves. It involves using a password (shown on the tag enclosed with the transmitter) that can be obtained from the transmitter code.

Simplified programming

The first code (and the subsequent ones as well) are programmed as follows:

- press the button on the receiver: the LED will light up and blink;
- the operator presses, while keeping the button on the receiver pressed down, any of the key of the transmitter, which sends out the code;
- the receiver stores, after detecting three subsequent transmission instances (with the current checksum), the code into the memory;
- the receiver LED will, at the very time when it recognizes the code, light up steadily, thus signalling that the code has been received: now the operator may release the transmitter button to end the programming.

Simplified programming disable

Simplified programming may be disabled by entering the password as follows:

- press the small button on the receiver: the LED will light up and blink;
- release the small button: the LED will blink once;
- enter, by means of the small button, a 4-digit code (password): each digit shall be included between 0 and 9 (code written on the label delivered together with the transmitter). An optical feedback will be generated on the LED every time the small button is pressed;
- after each digit has been entered, wait for the LED to blink again to request the next digit, up to the fourth digit;
- the procedure will be over after the last digit is entered.

Protected programming

Every time a new transmitter is to be recognized after firstly entering the password, you will need to enter the password of any of the transmitters previously stored into the memory. Correct recognition of the password will be signalled by the LED blinking after the password has been entered (if the password is not recognized, the LED will remain ON for 10 seconds). When the LED is blinking, keep the receiver button pressed down, then transmit with the new remote control to be stored into the memory, by following the simplified programming instructions.

Aquila Trucks Centres

DIAGNOSTIC

MODUS

Computer-assisted diagnosis station used for diagnosis of braking systems, pneumatic suspensions, electronically-controlled systems and engines.

The station is equipped with auxiliary functions such as electronic control unit programming, spare list catalogue referencing, time-charts, etc.

IT 2000

The IVECO electronic tester makes it possible to immediately intervene on the vehicle, by recognizing the latter by means of the chassis number.

This tester stores the results of the diagnostic operations carried out.

It can also be used as a portable PC, and is set for remote diagnosis.

By using MODUS as a mother station, IT 2000 can be updated and configured.

IT 2000 is interfaced with the vehicle by means of a 30-pole diagnosis takeoff.


E.A.S.Y.

E.A.S.Y. system allows to simply make the diagnosis and programming of the various electronic central units aboard the vehicle.

E.A.S.Y. system is made up of ECI module communicating with the electronic central units and of a Panasonic PC.

ECI module, exploiting the Panasonic PC, also allows easy on the road interventions: in particular, thanks to Panasonic PC wireless technologies (e.g. GPRS), diagnostic interventions can be assisted by a remote expert centre.

Figure 262

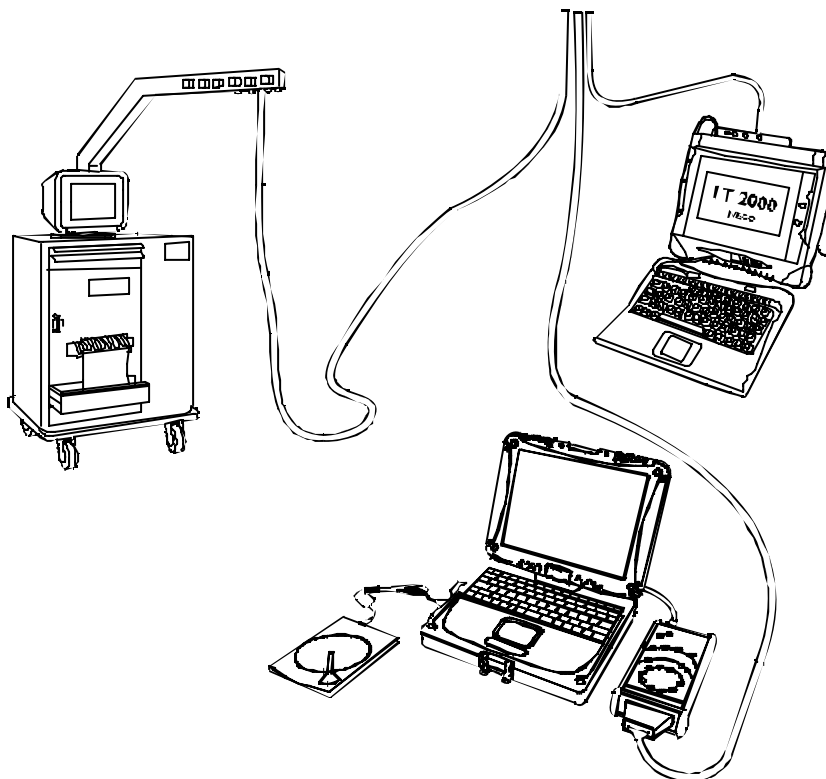


101586

Aquila Trucks Centres

Diagnosis on Cluster

Access to the fault memory is possible through the "menu" function key (2) available on the steering wheel.

Figure 263

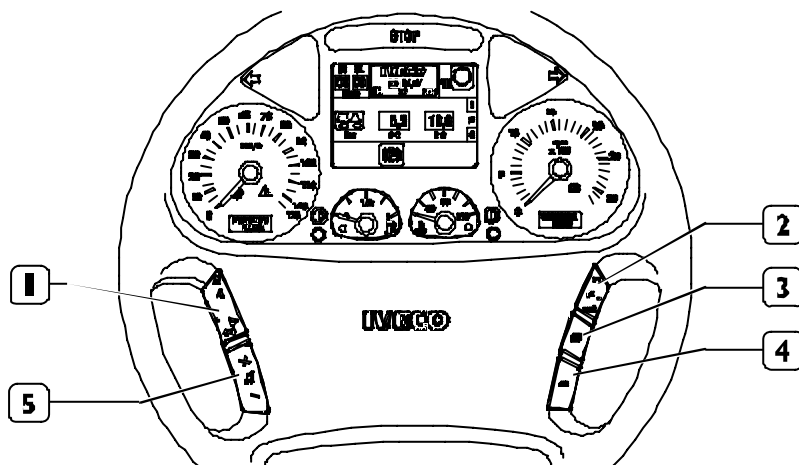

86028

1. Button **y** or **b** - 2. Button MENU/OK - 3. Page button - 4. Escape button - 5. Button **+** and **-**

Turn key switch to MARCIA (+I5), then press "menu" function button (2): the display will show the data exchange menu containing the list of available functions (e.g. HI-FI, telephone, diagnostic, etc.).

Select, by means of function **y** and **b** button (1), the diagnostic function, then confirm correct selection by means of function "OK" button (2).

The available electronic systems can be selected by means of select/confirm buttons (1) and (2).

The diagnosed systems are:

1	EDC	10	FFC (Front Frame Computer)
2	EUROTRONIC	11	RFC (Rear Frame Computer)
3	INTARDER	12	DDM (Drive Door Module)
4	OEBS (or ABS)	13	PDM (Passenger Door Module)
5	ECAS	14	CM (Cabin Module)
6	IMMOBILIZER*	15	0ACLC (Automatic air conditioner)
7	OMTCO (Tachograph*)	16	0AHT_w (Auxiliary water heater)
8	DC (Body Computer)	17	0AHT_a (Auxiliary air heater)
9	IC (Instrument Cluster)		


* Function not active

NOTE EDC control unit errors are not displayed after the engine has been started.

Aquila Trucks Centres

- The anomaly-free system is displayed with a GREEN background.
- The faulty system is displayed with a RED background
- The systems not available on the vehicle or not diagnosed (tachograph and Immobilizer) are displayed with a GREY background.
- If several anomalies related to a system are available, the list can be run through by means of button (5, Figure 262) "+" and "-".


Figure 264

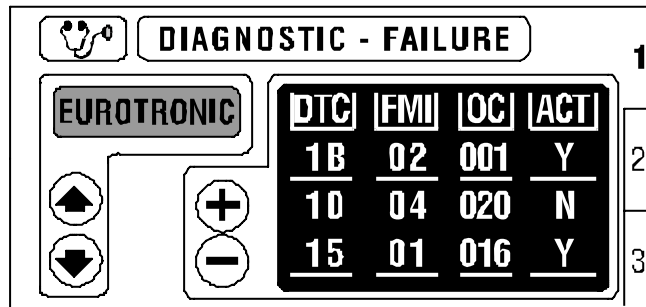

86029

The different codes shown allow you to identify the faulty component, the type of stored error (open circuit, short-circuit, etc.), the error occurrences and, finally, whether the error is currently present or intermittent.

Figure 265

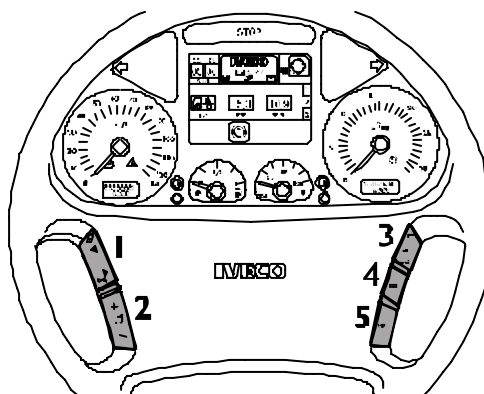

86030

To display intermittent faults, press simultaneously buttons "OK" and "(-)" (2-5).


Aquila Trucks Centres

INFORMATION ON CLUSTER

The diagnosis information shown on the cluster is divided into three screens:

- the first screen allows you to display all the stored/currently present anomalies (if any);
- the second screen allows you to cancel intermittent errors (provided that the respective password is available);
- the third screen allows you to know the software version of the various Multiplex electronic control units.

Figure 266

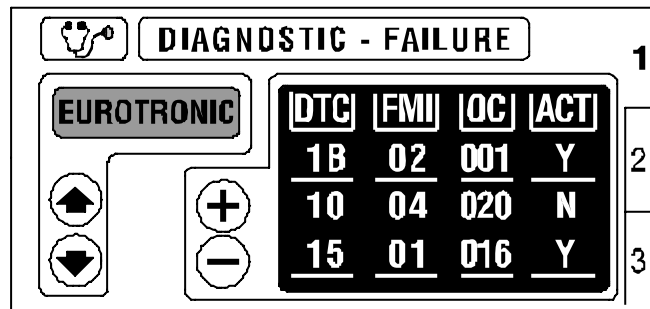

73687

First screen

If several anomalies are found, the respective list can be run through by means of buttons "+" and "-". Information on every single fault is displayed on four columns with the following data:

DTC	FMI	OC	ACT
Displays the anomaly code related to the fault	Indicates the type of fault	Anomaly rate counter	Active/not active anomaly condition
Two digits (hexadecimal)	Two digits (hexadecimal)	Three digits (decimal)	One character (Y=yes, N=no)

Second screen


To select the second screen, press button "page" on the steering wheel.

Cancelling errors

The system can be selected by means of buttons y and b available on the steering wheel. Anomaly display can be cancelled as follows:

- Press "+"
- The display will show the deletion confirm request: press "OK" to continue.
- Enter the requested password (see next paragraph ENTERING THE PASSWORD), then press "OK" to confirm.

Figure 267

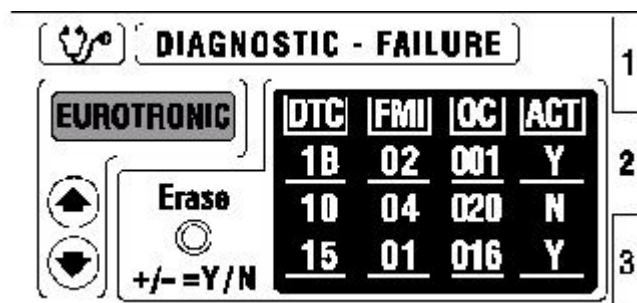


74225

Aquila Trucks Centres

Entering the password

Figure 268

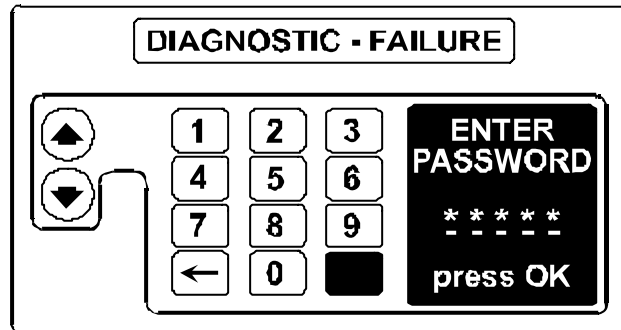

86031


- Select the first number of the password by means of buttons **y** and **b**.
- Press button **OK** to confirm each number.
- Press **a** to cancel the latest selected number.
- After the password has been completed, select the key symbol to confirm it.

Third screen

To select the third screen, press button "page" available on the steering wheel.

Software version

Figure 269

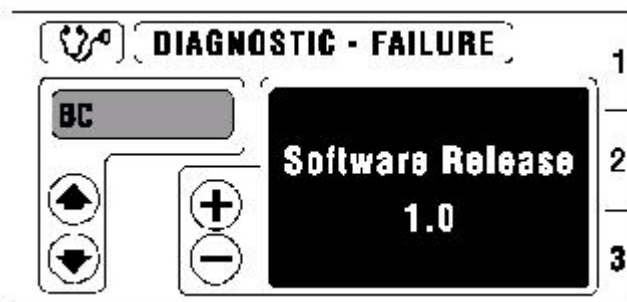

74227

The software version is displayed only for the Multiplex system control units.
The release of the following control units can be selected by means of buttons **y** and **b** :

1. Body Computer
2. Front Frame Computer
3. Rear Frame Computer
4. Driver Door Module
5. Passenger Door Module
6. Instrument Cluster
7. Cabine Module

Aquila Trucks Centres

Circuit charts


		Page
CHART 1	DIRECT POSITIVE TO BATTERY	247
CHART 2	POSITIVE AFTER TGC (+30)	248
CHART 3	POSITIVE AFTER TGC (+30) . . .	249
CHART 4	POSITIVE AFTER TGC (+30) . . .	250
CHART 5	POSITIVE AFTER TGC (+30) . . .	251
CHART 6	POWER SUPPLY (+15)	252
CHART 7	POWER SUPPLY (+15)	253
CHART 8	POWER SUPPLY (+15)	254
CHART 9:	BODY CONTROLLER	255
CHART 10:	BODY CONTROLLER	256
CHART 11:	BODY CONTROLLER	257
CHART 12:	BODY CONTROLLER	258
CHART 13	IC CONTROL UNIT	259
CHART 14	TACHOGRAPH / DIAGNOSIS SOCKET	260
CHART 15	STEERING WHEEL INTERFACE (SWI)	261
CHART 16	DDM-BM CONTROL UNIT	262
CHART 17	PDM CONTROL UNIT	263
CHART 18	THERMAL MIRRORS / CENTRALISED LOCKING / WINDOW WINDERS (WITHOUT DDM-PDM)	264
CHART 19	VCM CONTROL UNIT	265
CHART 20:	EDC (CONNECTOR B)	266
CHART 21:	EDC (CONNECTOR A/C - F2B)	267
CHART 22:	EDC (CONNECTOR A/C - F3B)	268
CHART 23:	CONTROL UNIT UDS (DENOX 2)	269
CHART 24:	CONTROL UNIT MET	270
CHART 25:	CONTROL UNIT MET	271
CHART 26:	CONTROL UNIT MET	272
CHART 27:	LINE CAN-IDB / FMB / CONTROL UNIT / TELEMATICS / NAVIGATOR	273

Aquila Trucks Centres

Page


CHART 28: . . LINE CAN-BCB	274
CHART 29: LINE CAN-VDB	275
CHART 30: LINE CAN-ECB	276
CHART 31 ECAS 4X2 P TRACTOR	277
CHART 32 ECAS 4X2P/4X4P/6X4P/8X4X4P (LORRY)	278
CHART 33 ABS	279
CHART 34: VENTILATION	280
CHART 35: MANUALLY CONTROLLED CLIMATE CONTROL SYSTEM	281
CHART 36: MANUALLY CONTROLLED ADDITIONAL AIR HEATER	282
CHART 37: MANUALLY CONTROLLED ADDITIONAL AIR HEATER	283
CHART 38: EUROTRONIC II	284
CHART 39: RETARDER ZF	285
CHART 40: CONTROL UNIT EM (PTO)	286
CHART 41: RADIO RECEIVER	287
CHART 42: GENERAL MECHANICAL POWER SWITCH (IGC)	288
CHART 43: ADR (2001)	289
CHART 44: ADR (OPT. 0129)	290

Aquila Trucks Centres

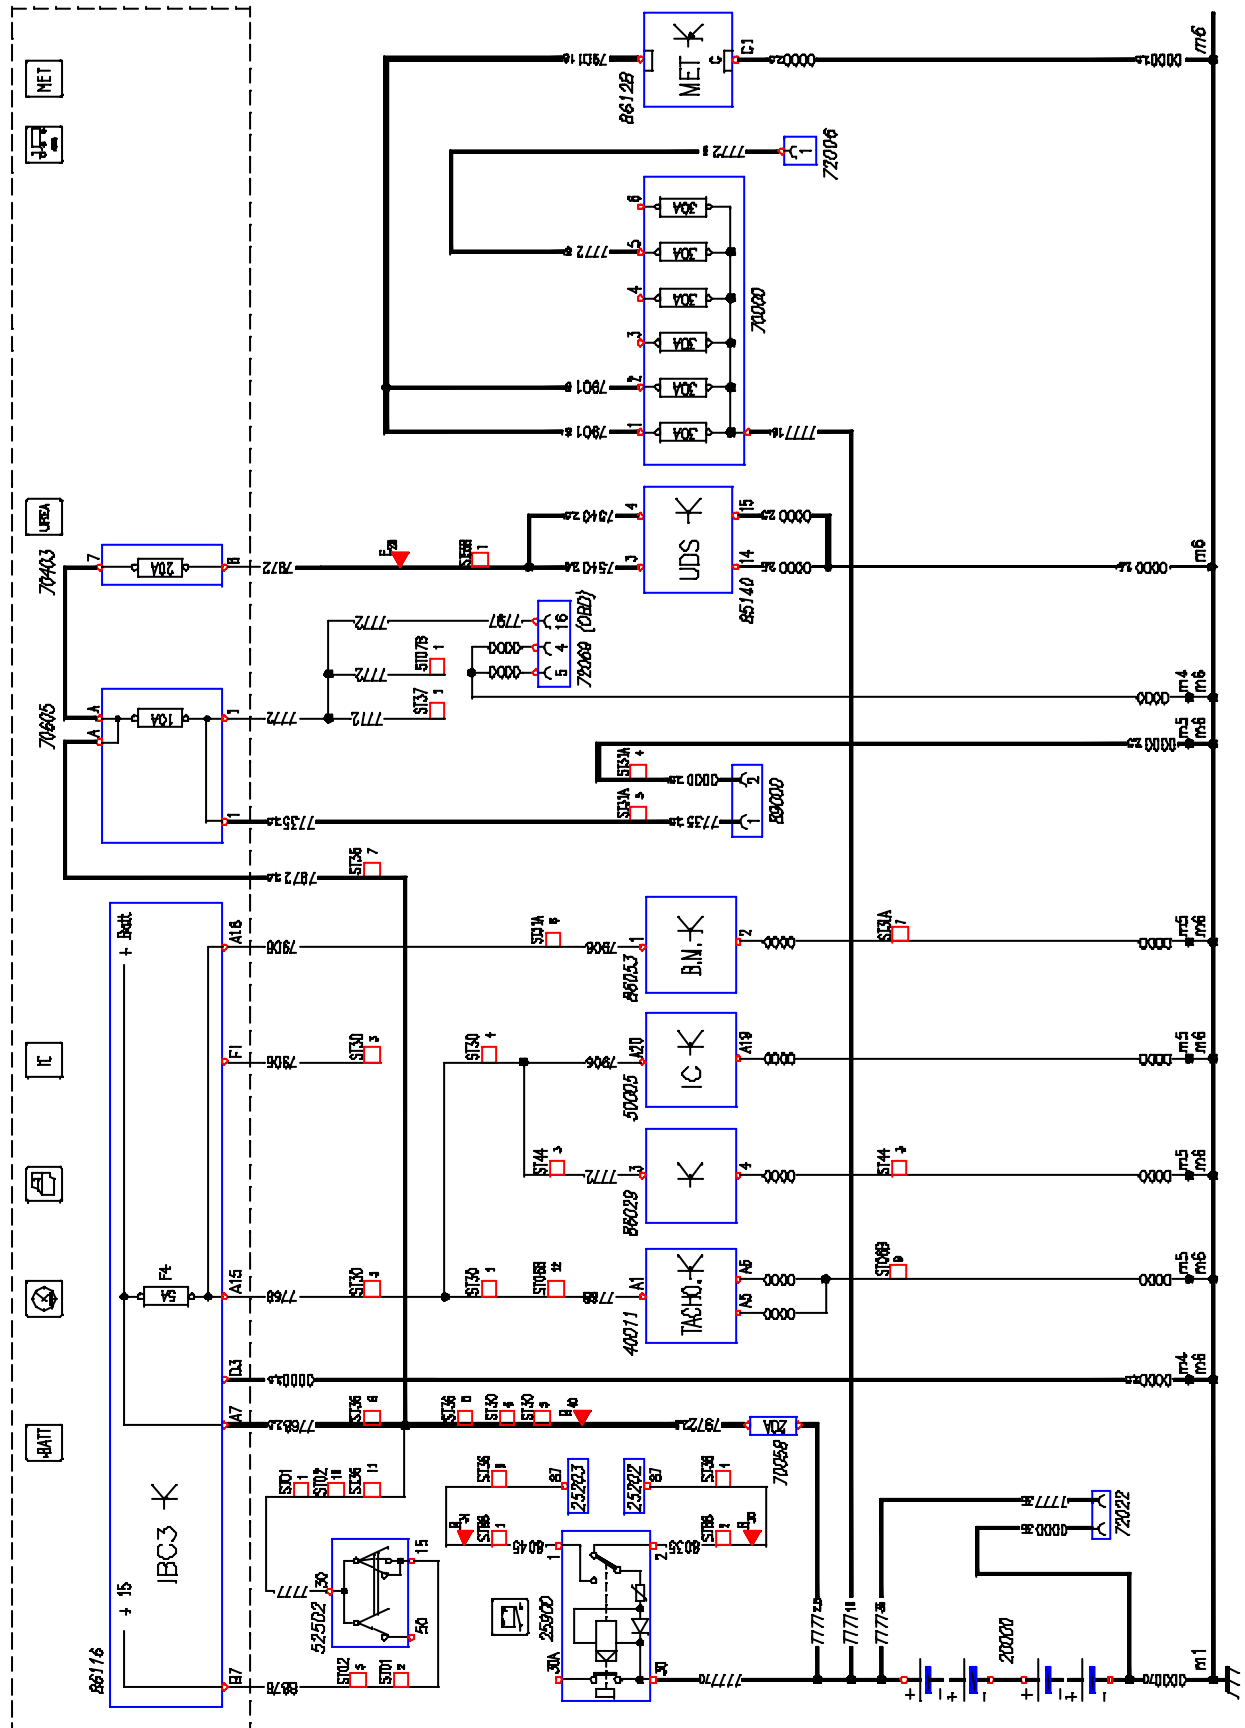Chart 1: Direct positive to battery

Aquila Trucks Centres


Chart 2: Positive after TGC (+30)

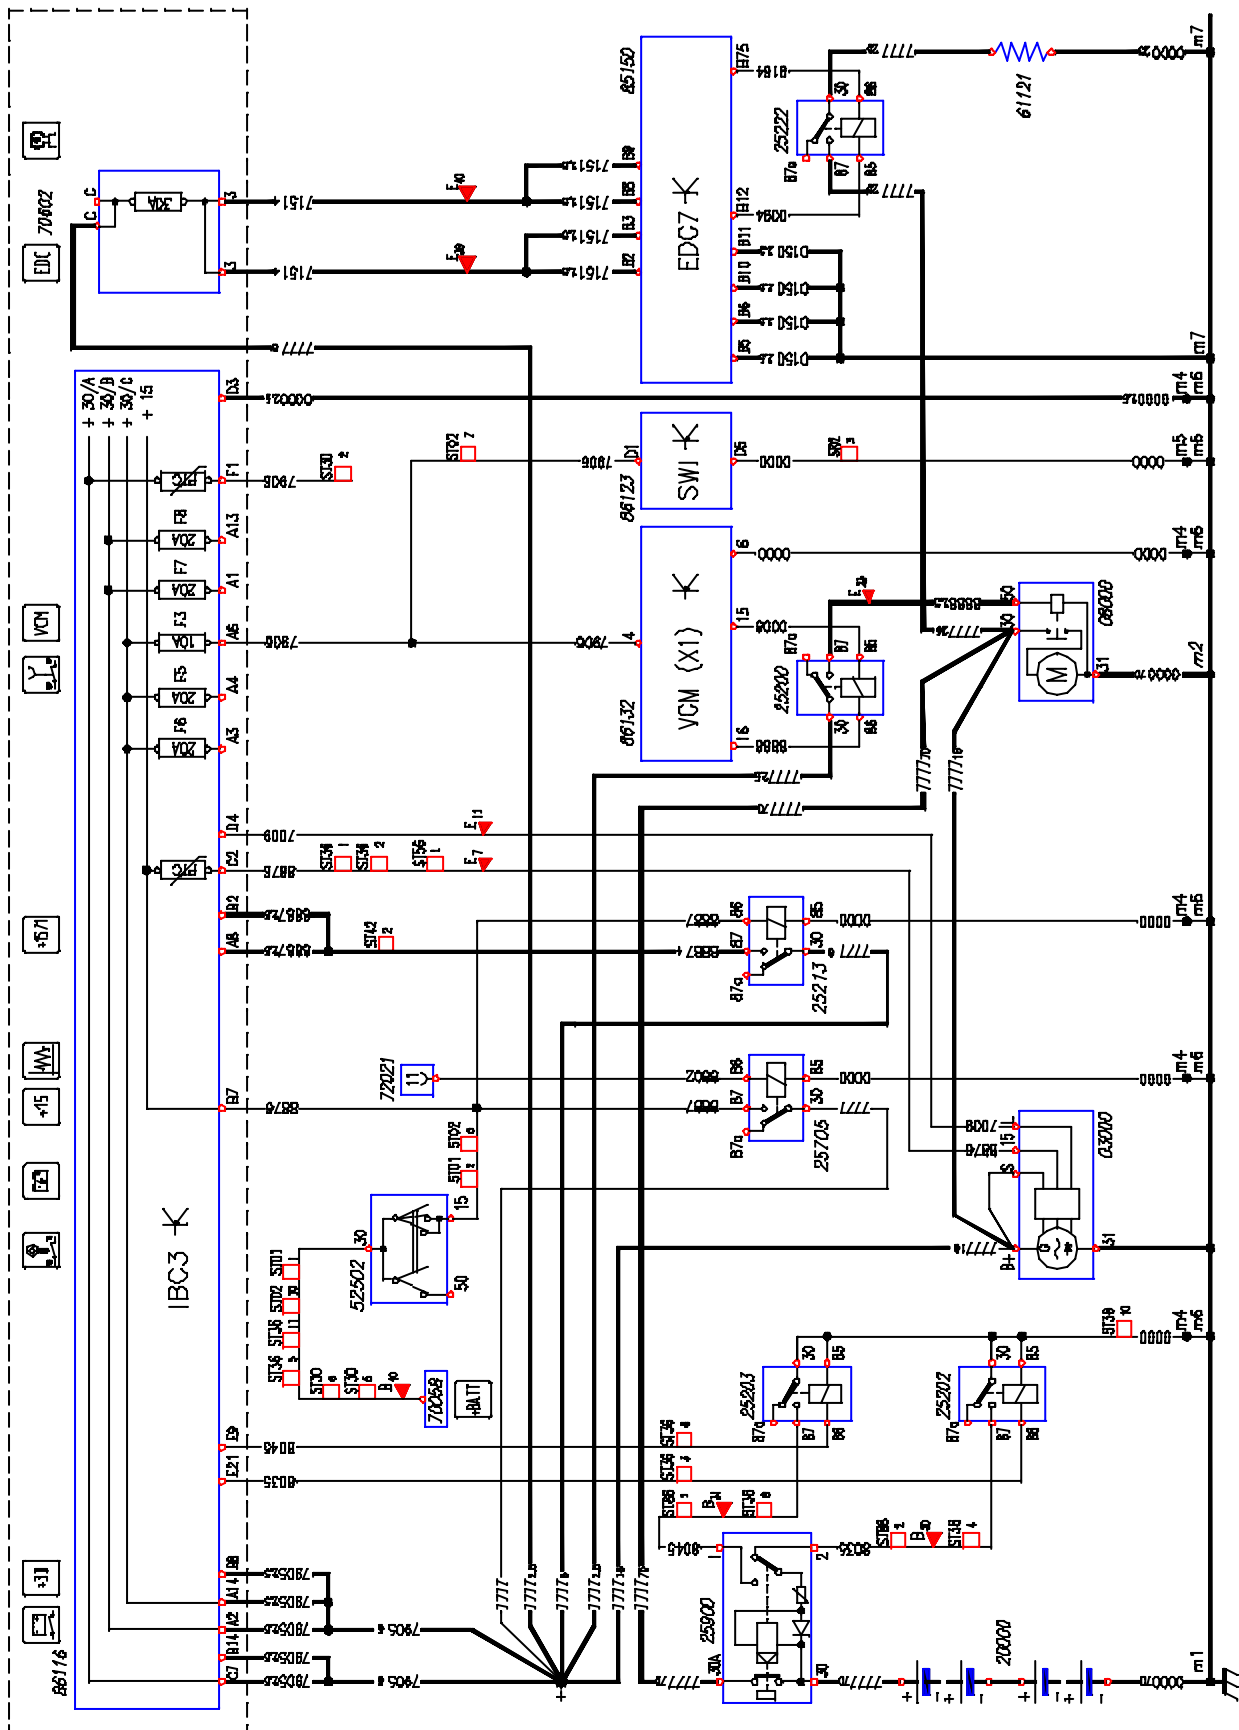

113357


Aquila Trucks Centres

Chart 3: Positive after TGC (+30)

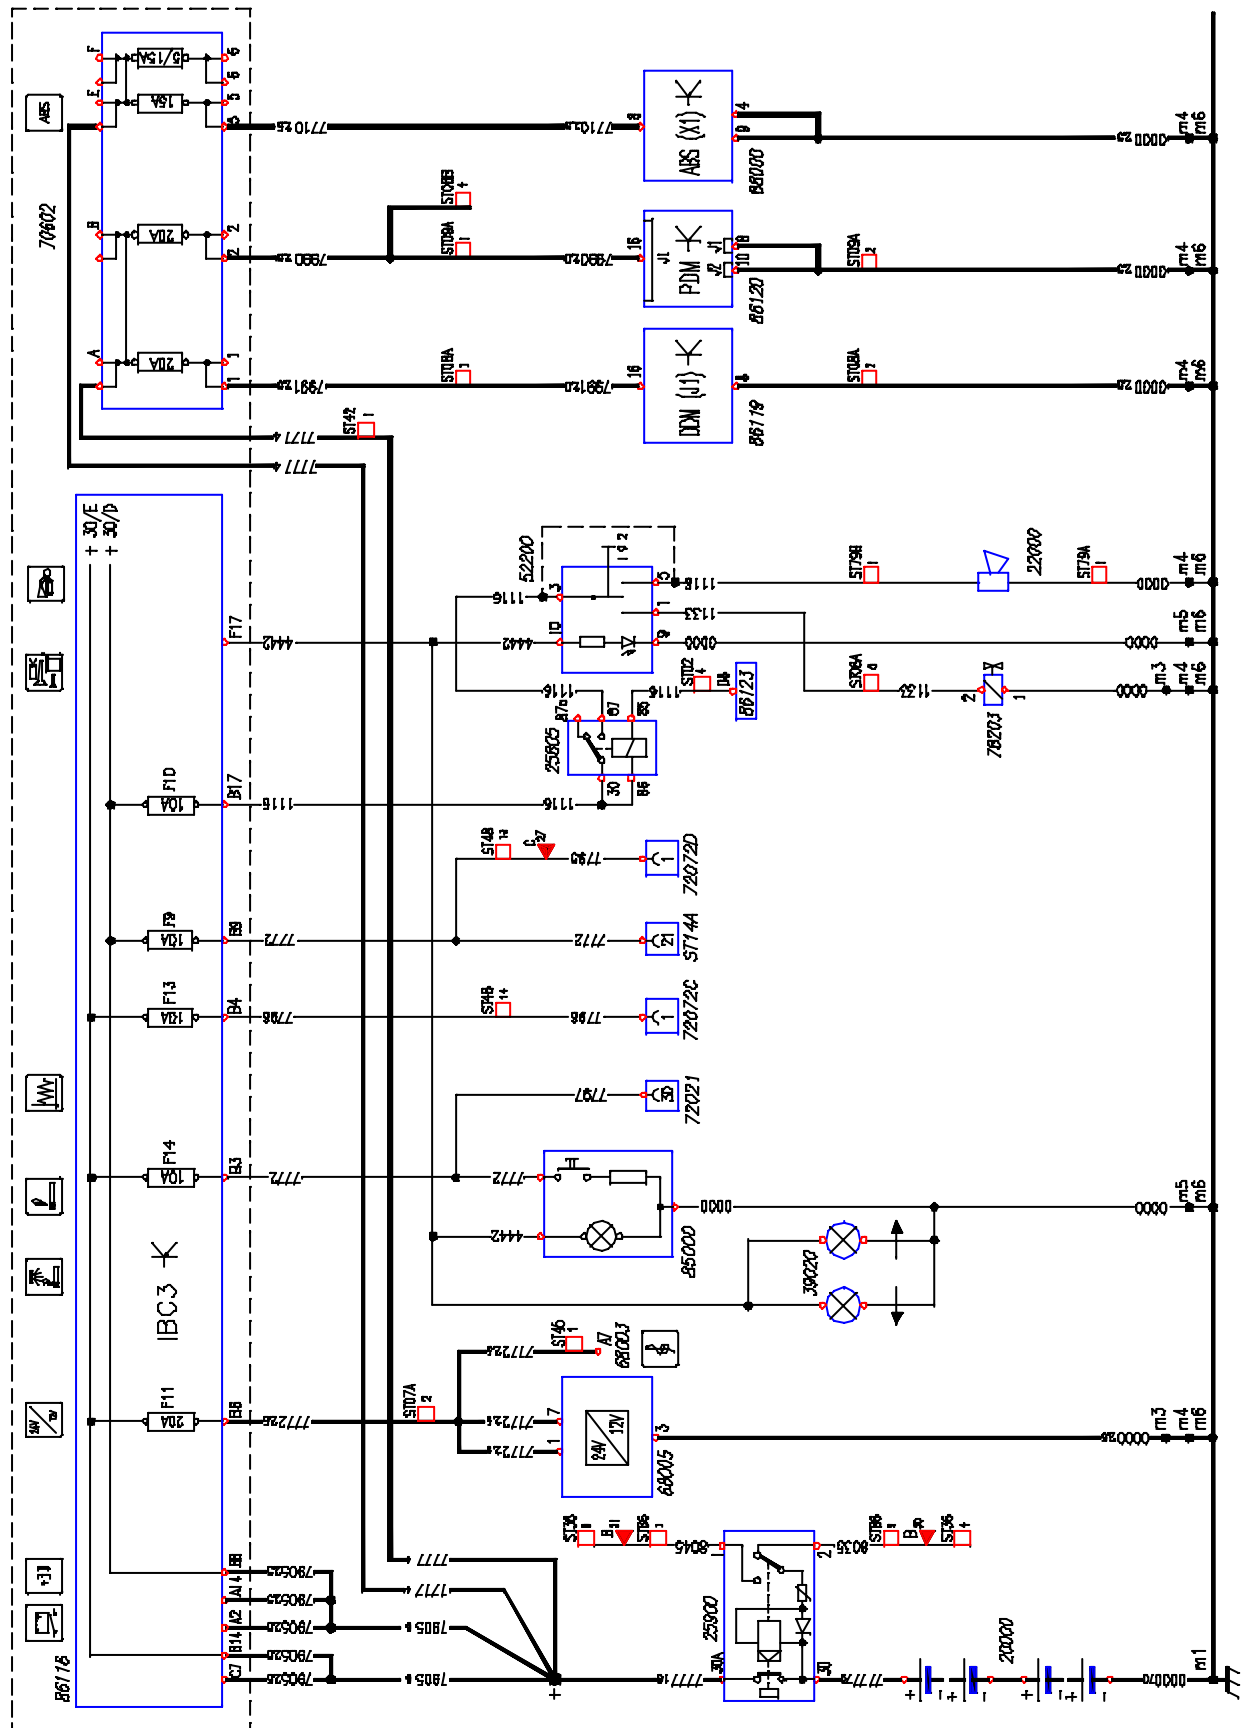


Aquila Trucks Centres

Chart 4: Positive after TGC (+30)

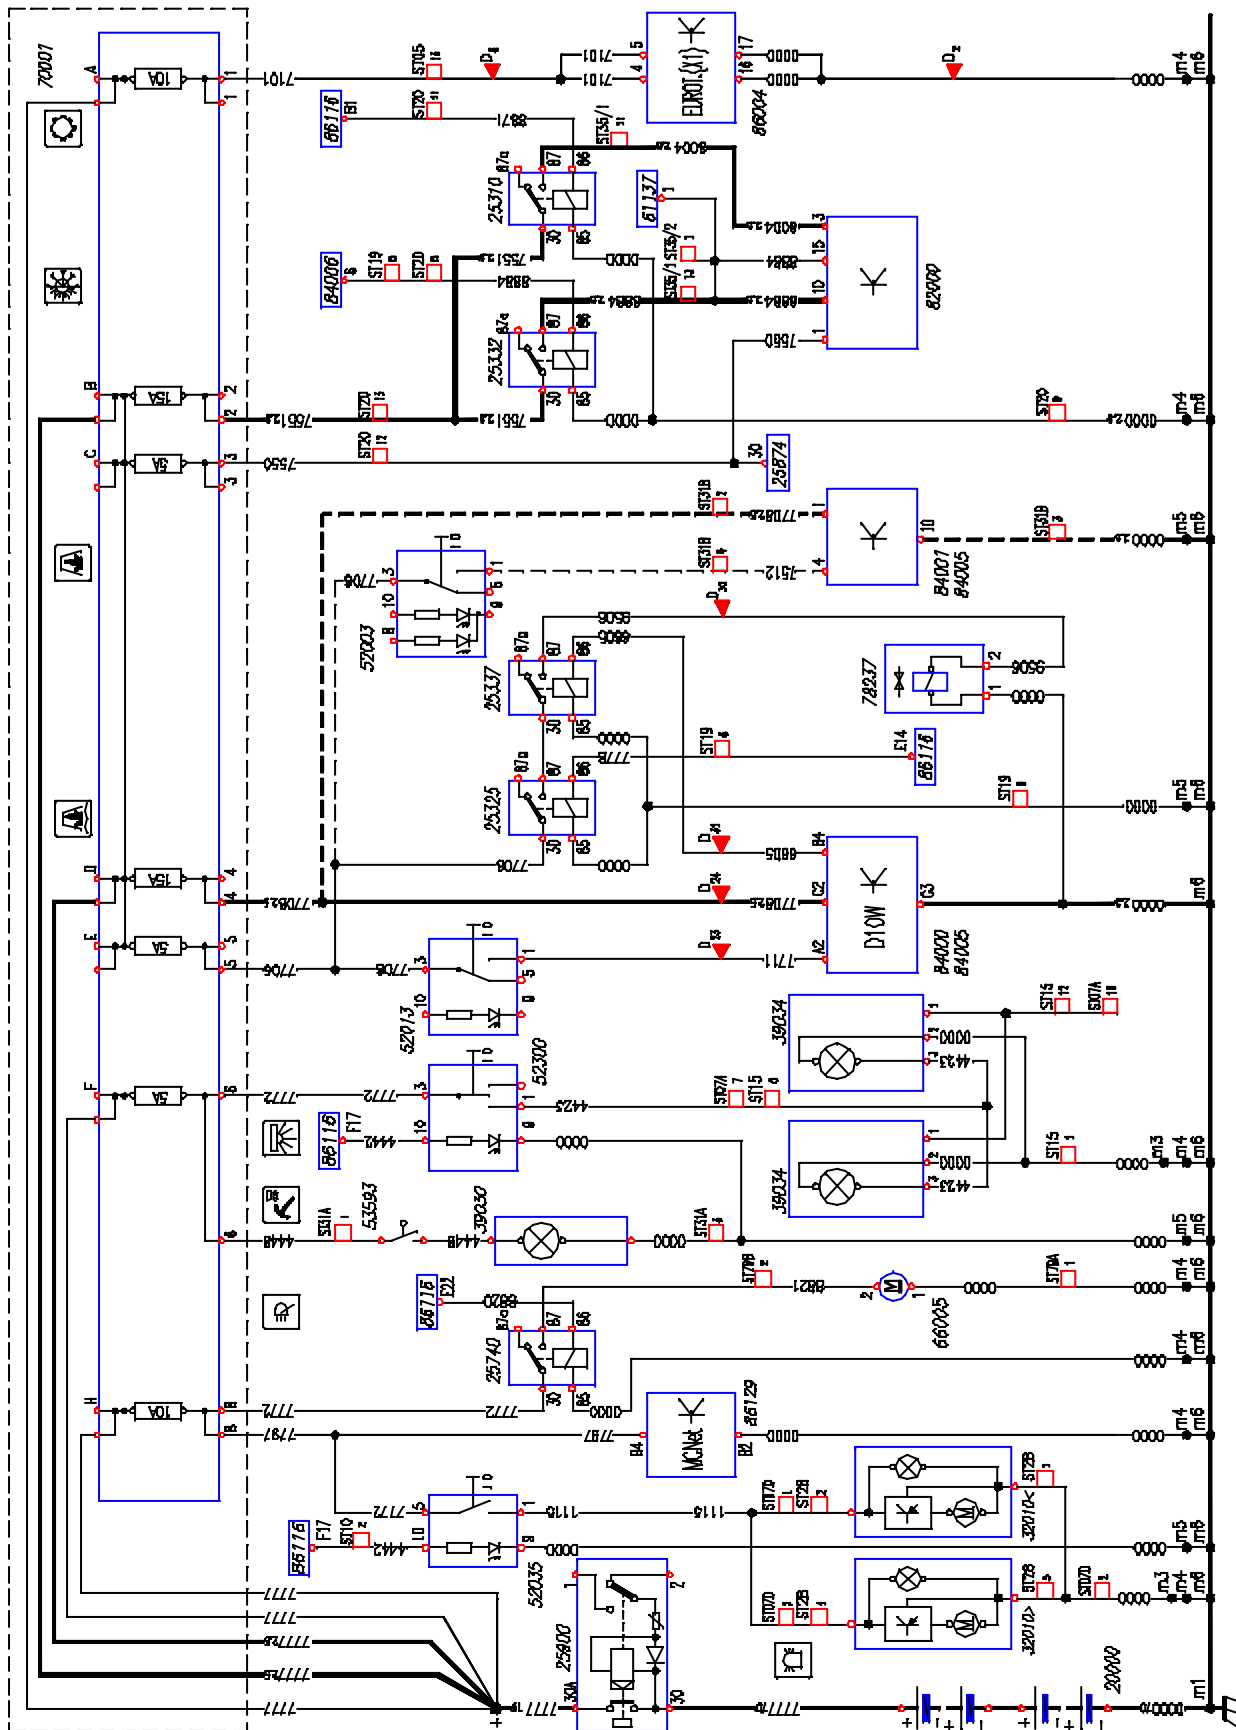

113359

Chart 5: Positive after TGC (+30)

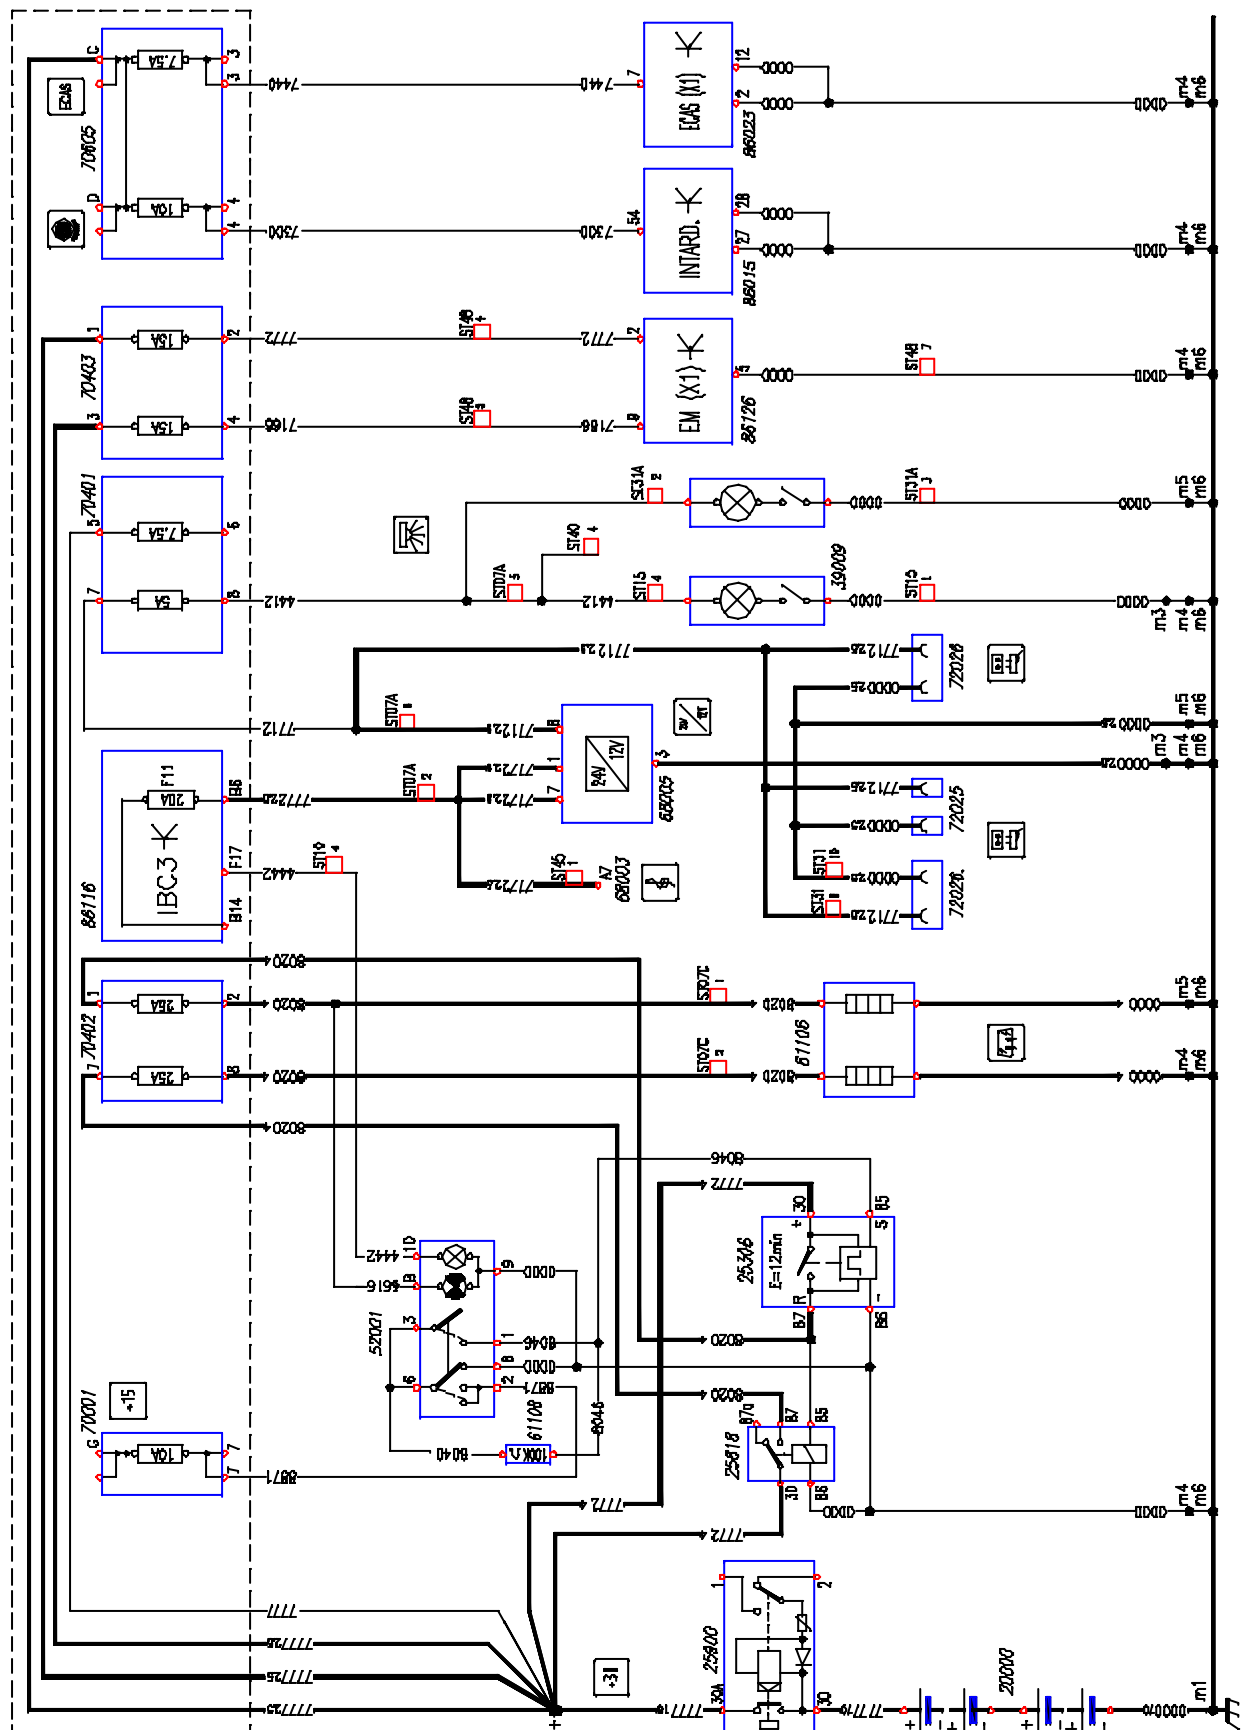

Aquila Trucks Centres

Chart 6: Power supply (+15)

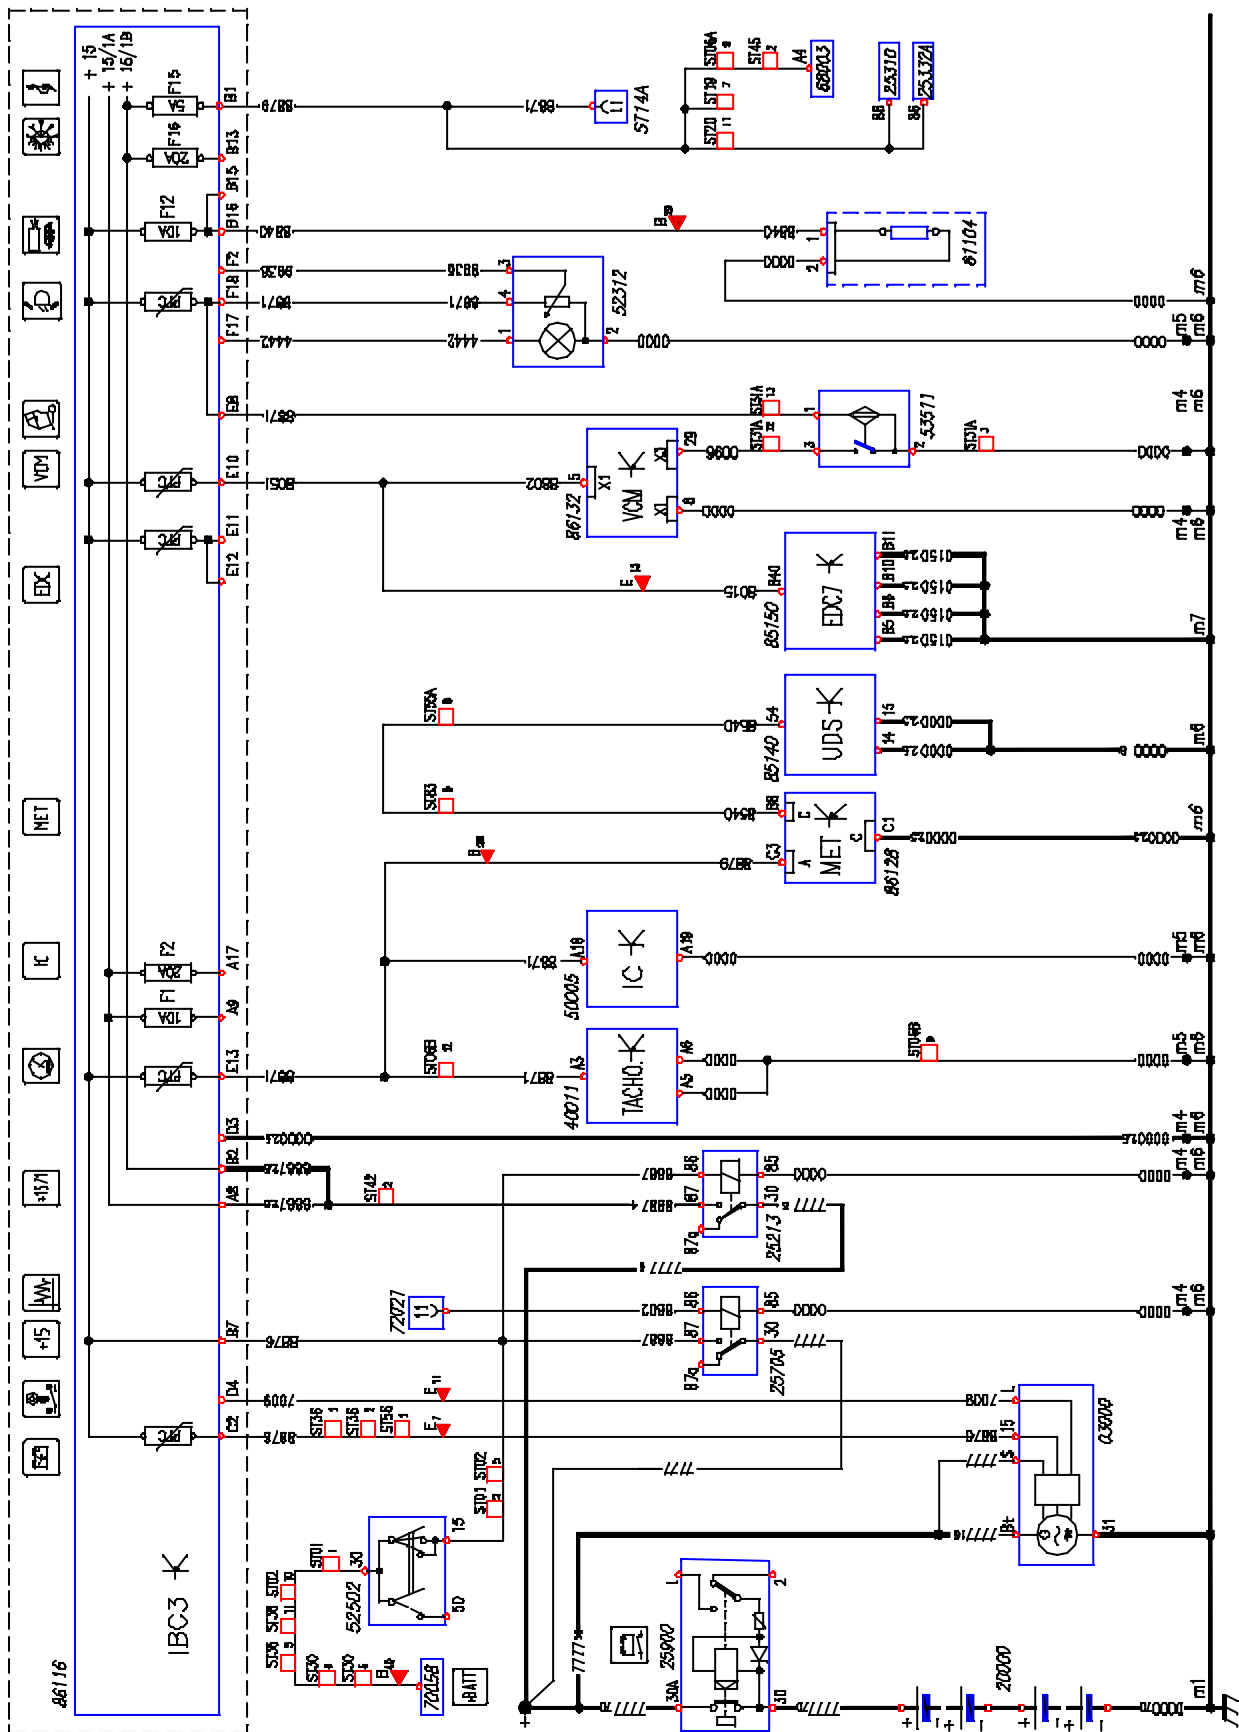


Chart 7: Power supply (+15)

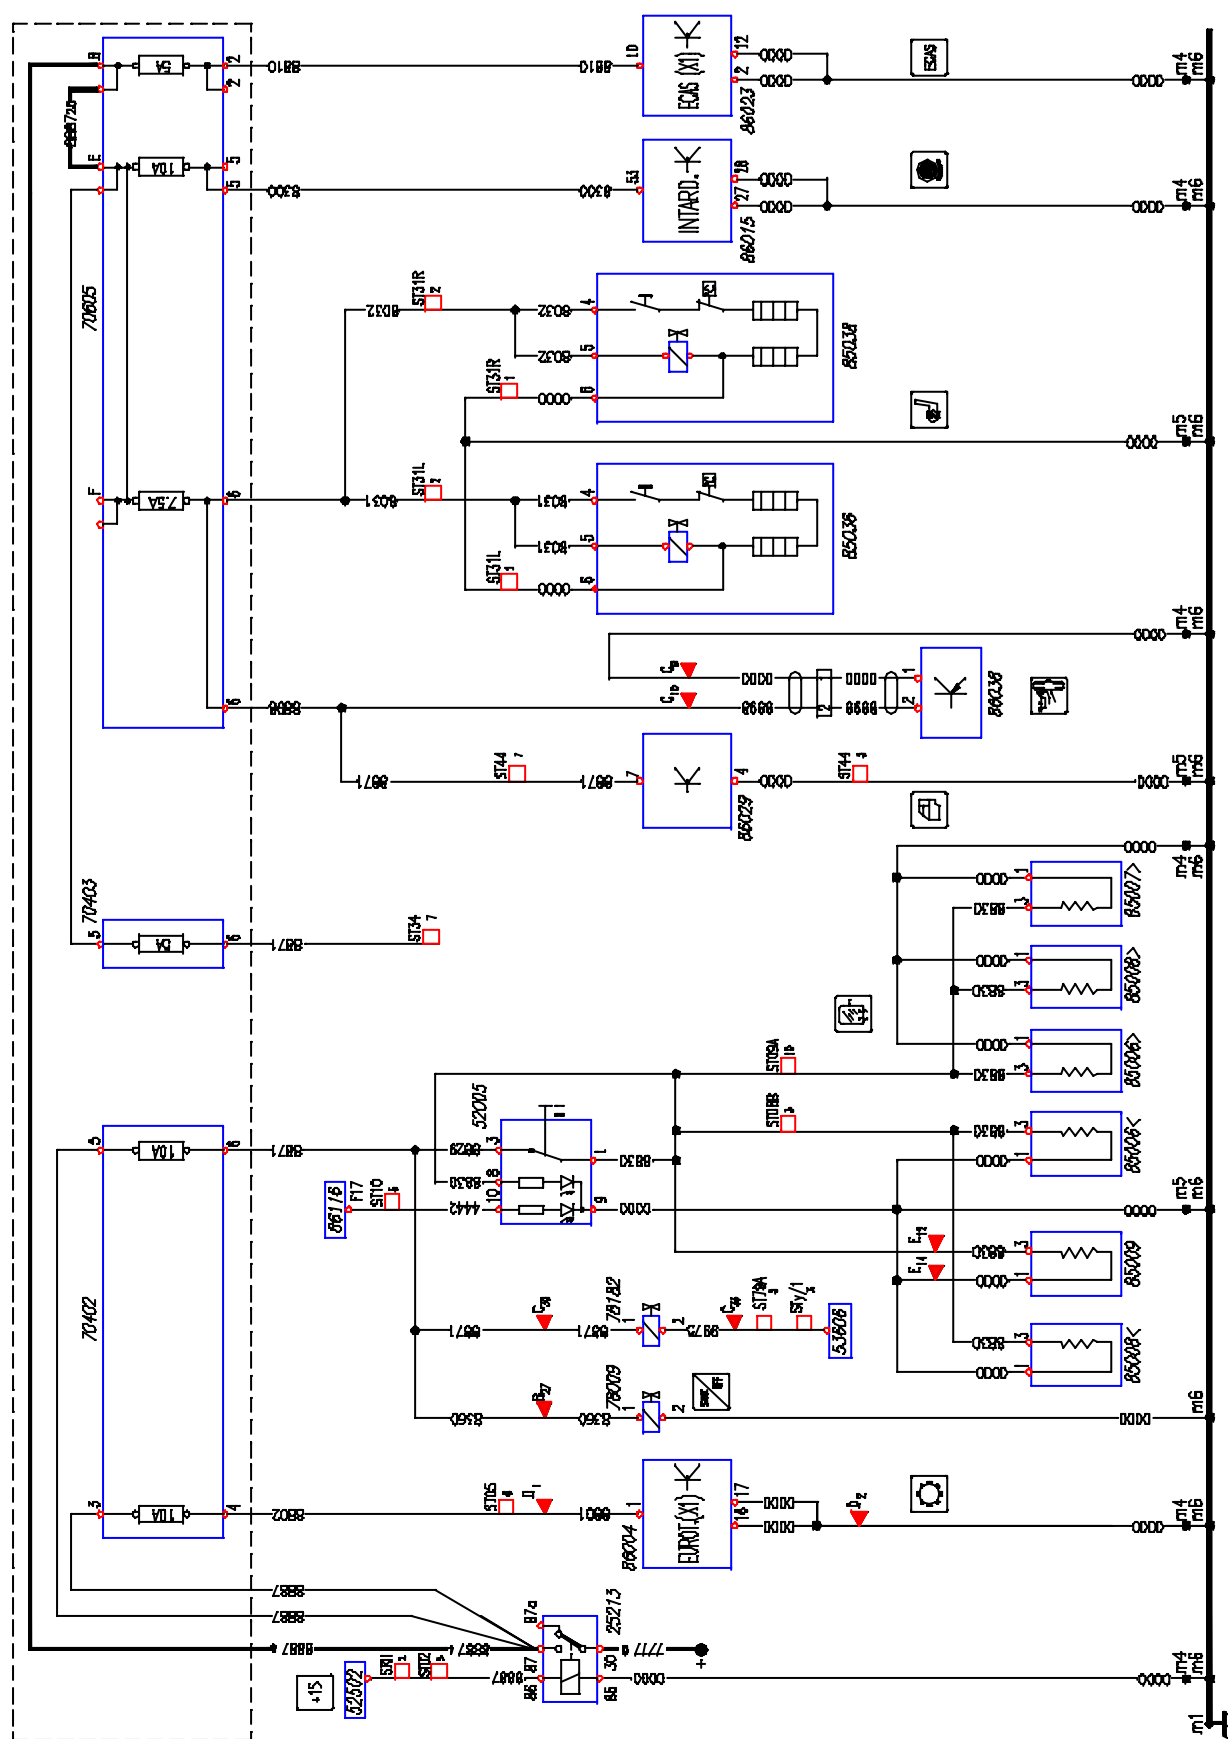


Chart 8: Power supply (+15)


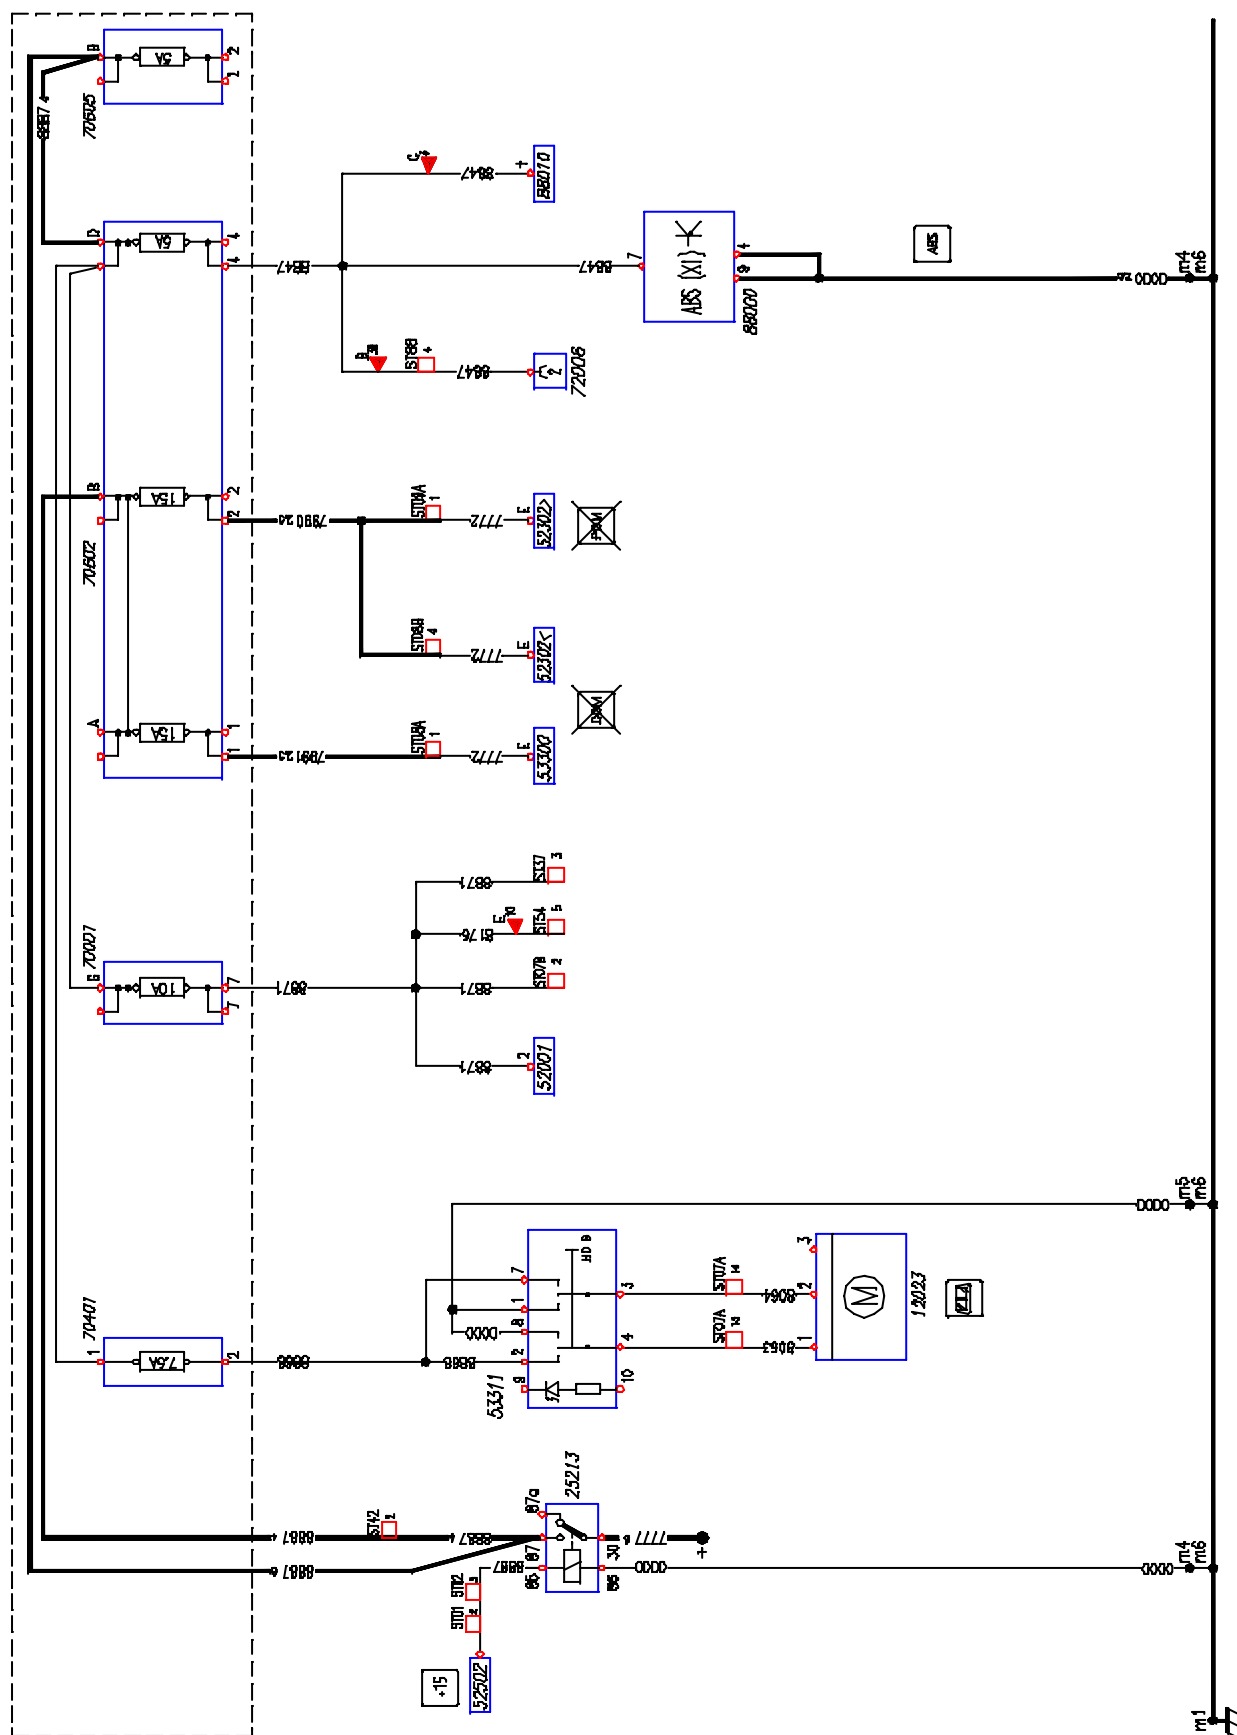


Chart 9: Body controller

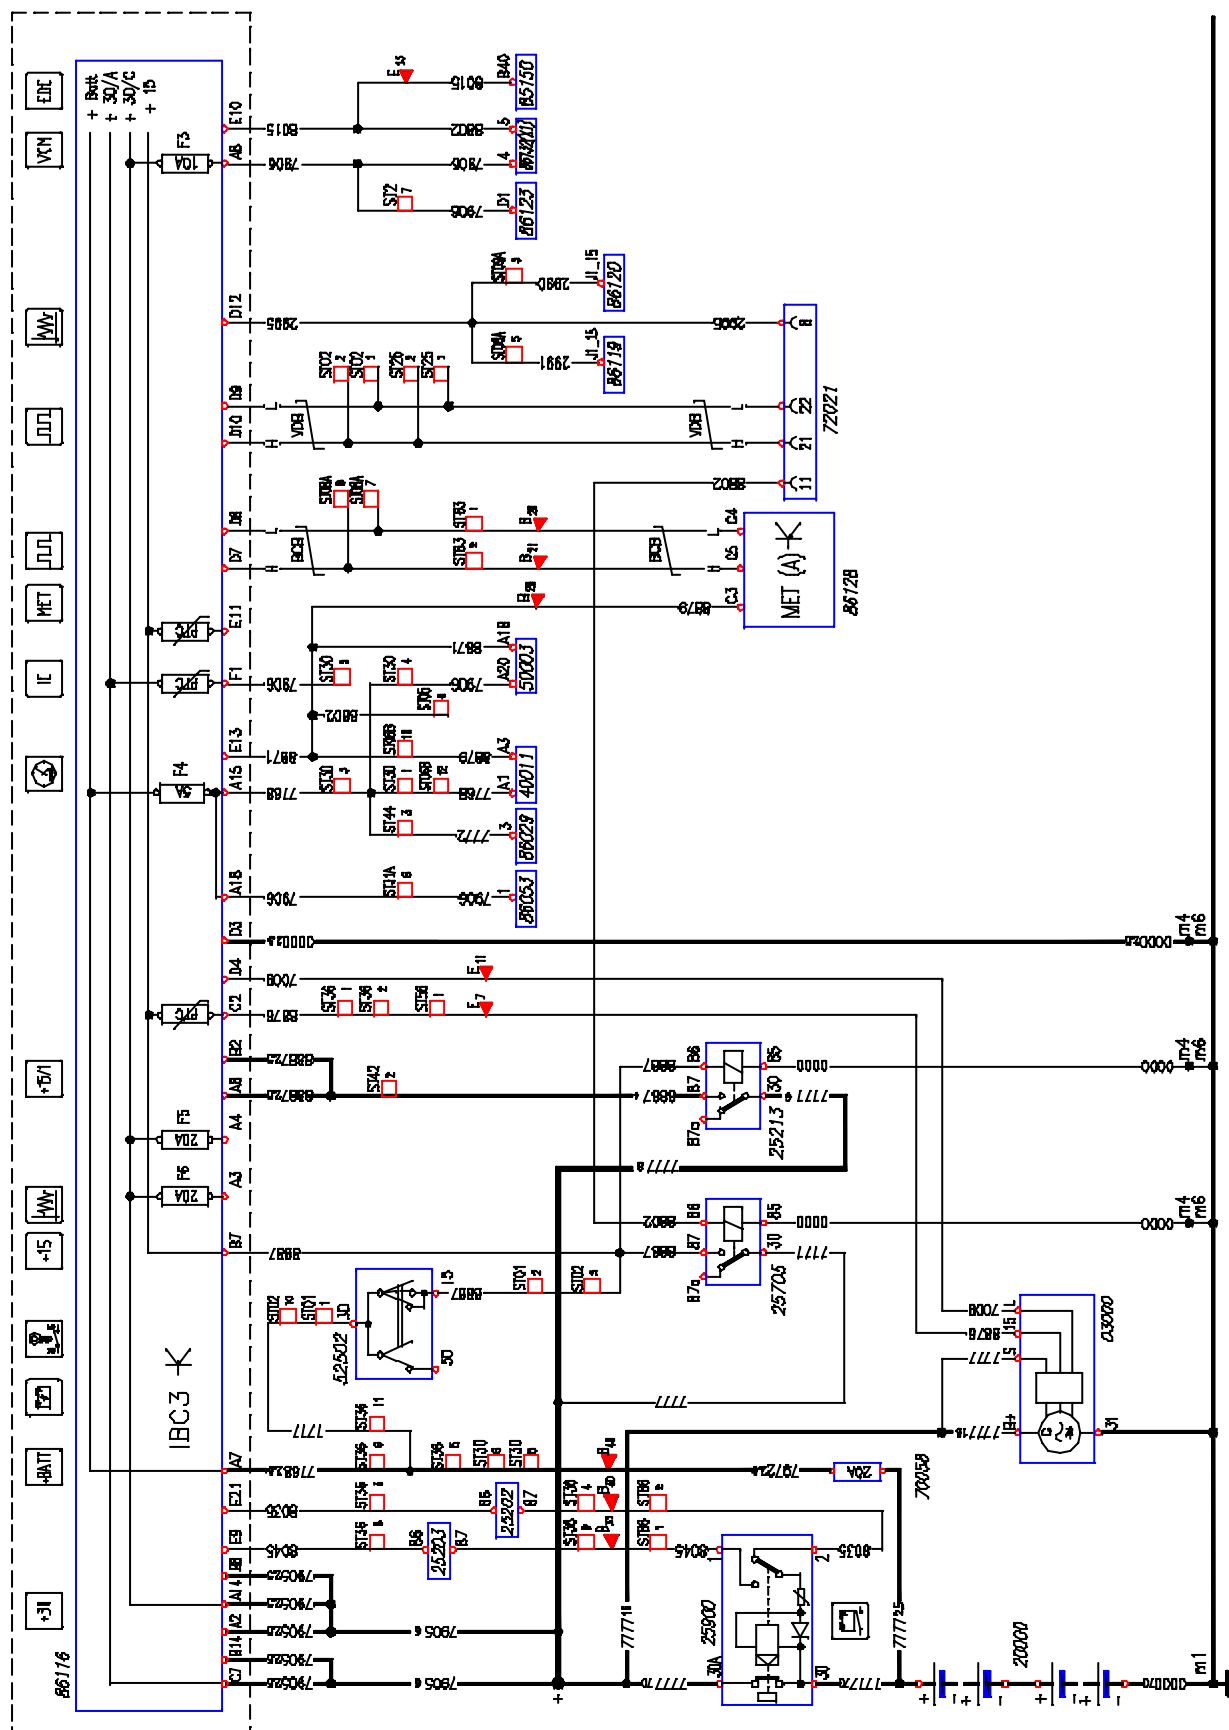

Aquila Trucks Centres

Chart 10: Body controller



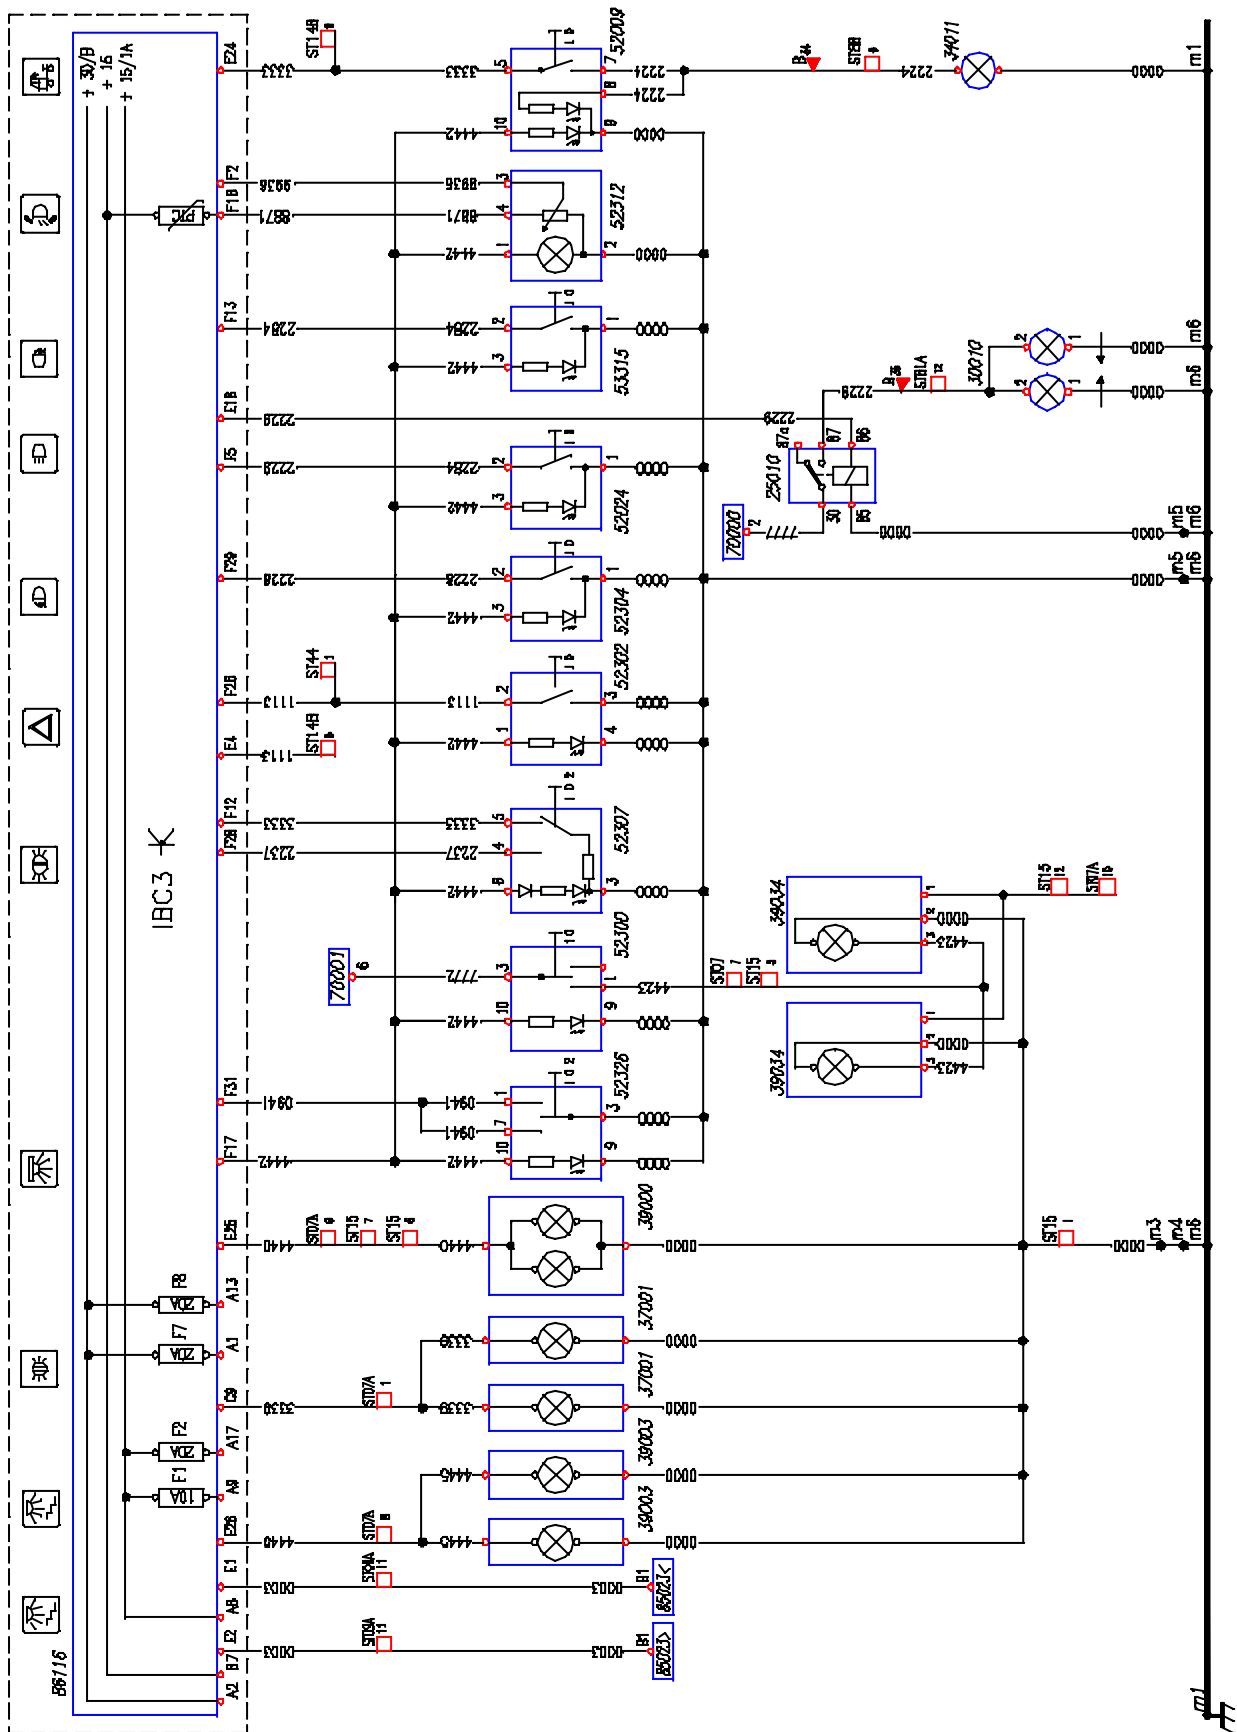


Chart 11: Body controller

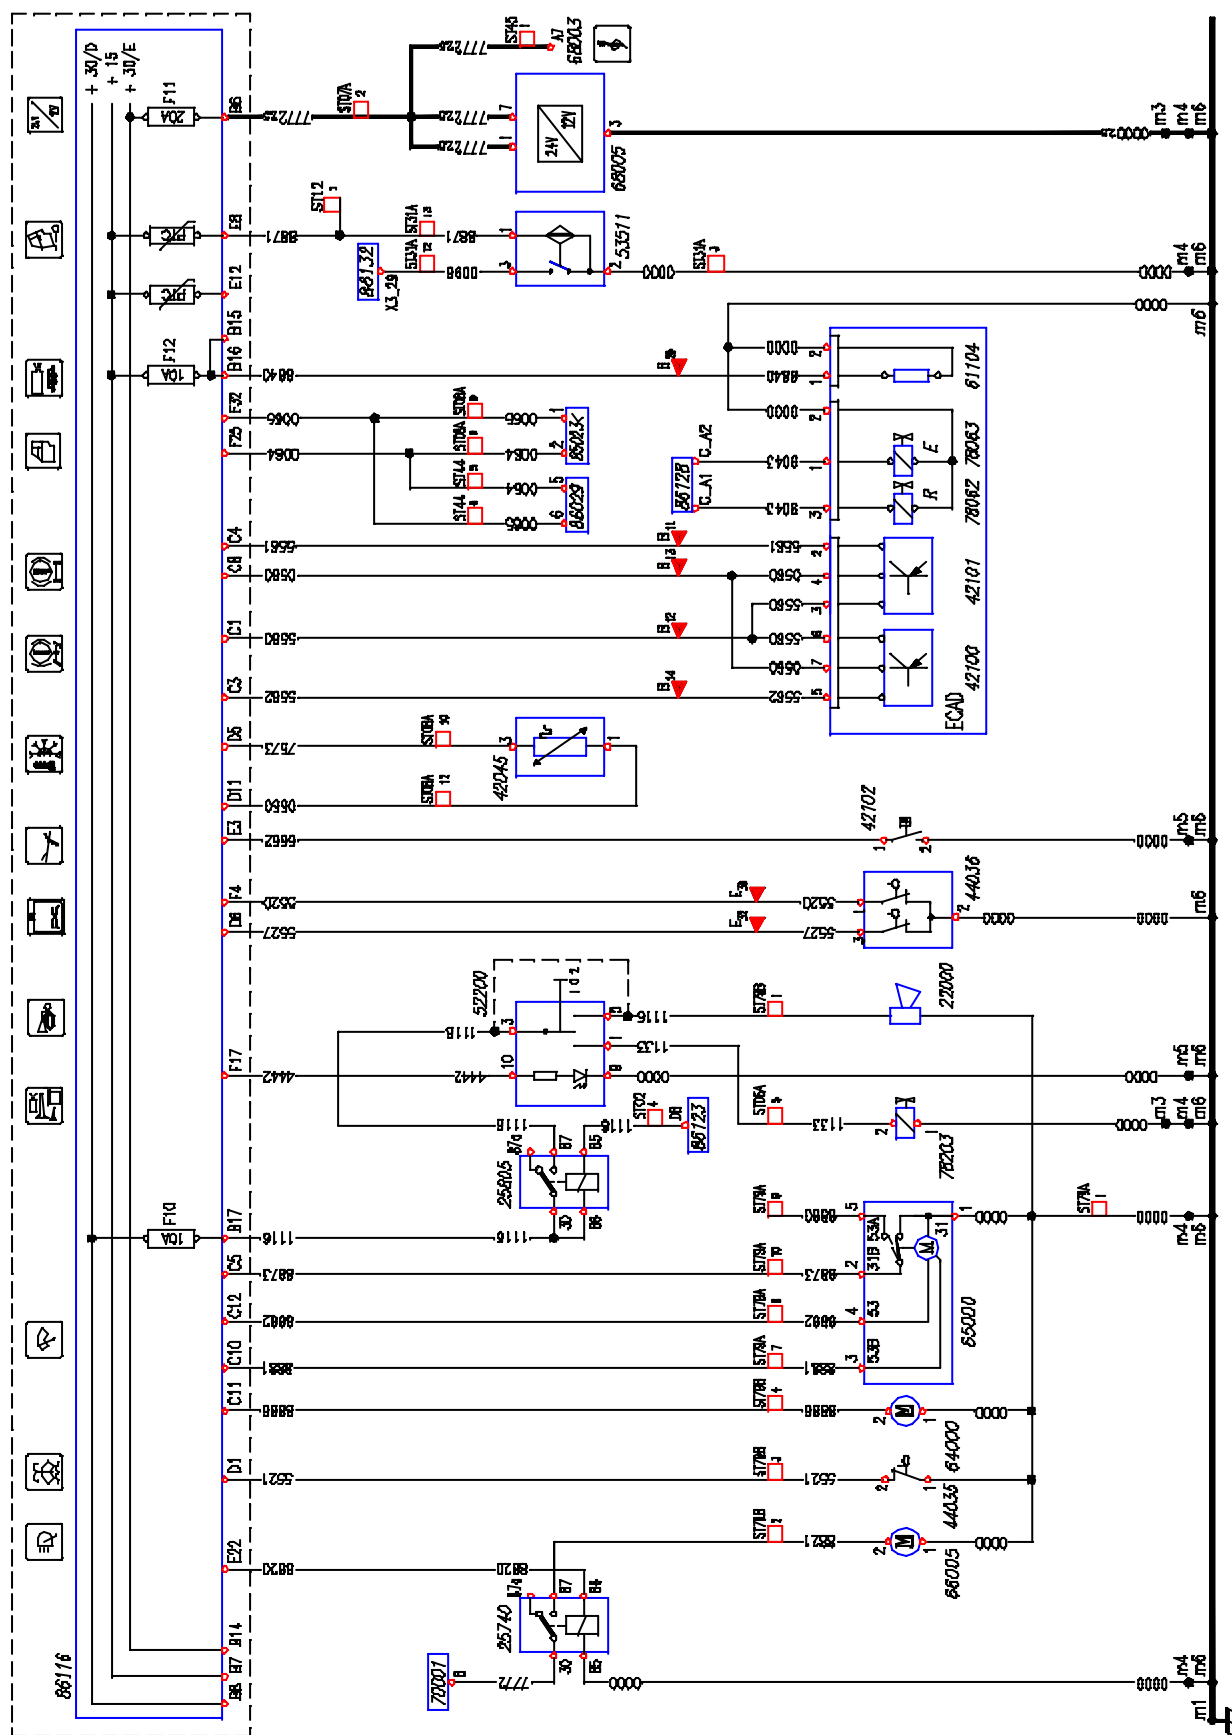

Aquila Trucks Centres


Chart 12: Body controller

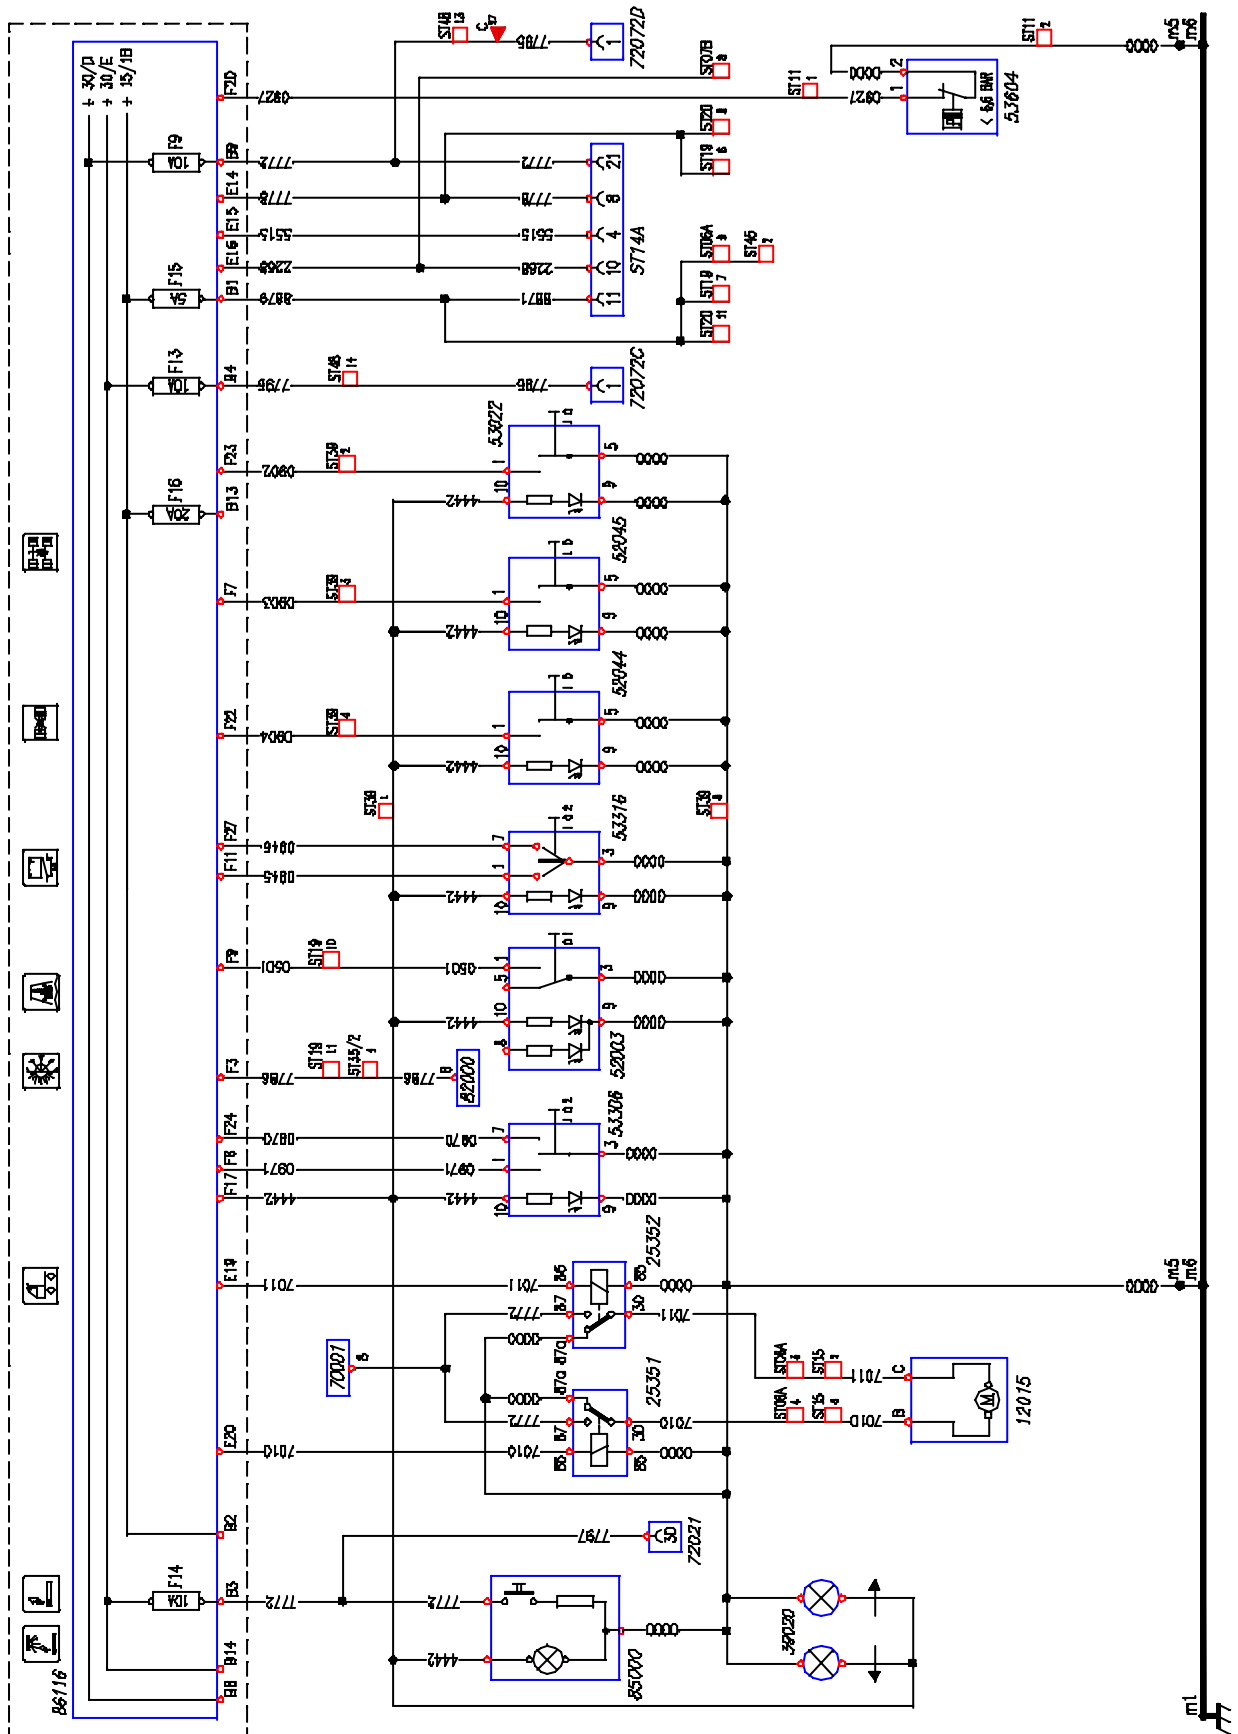

113577


Aquila Trucks Centres

Chart 13: IC central unit

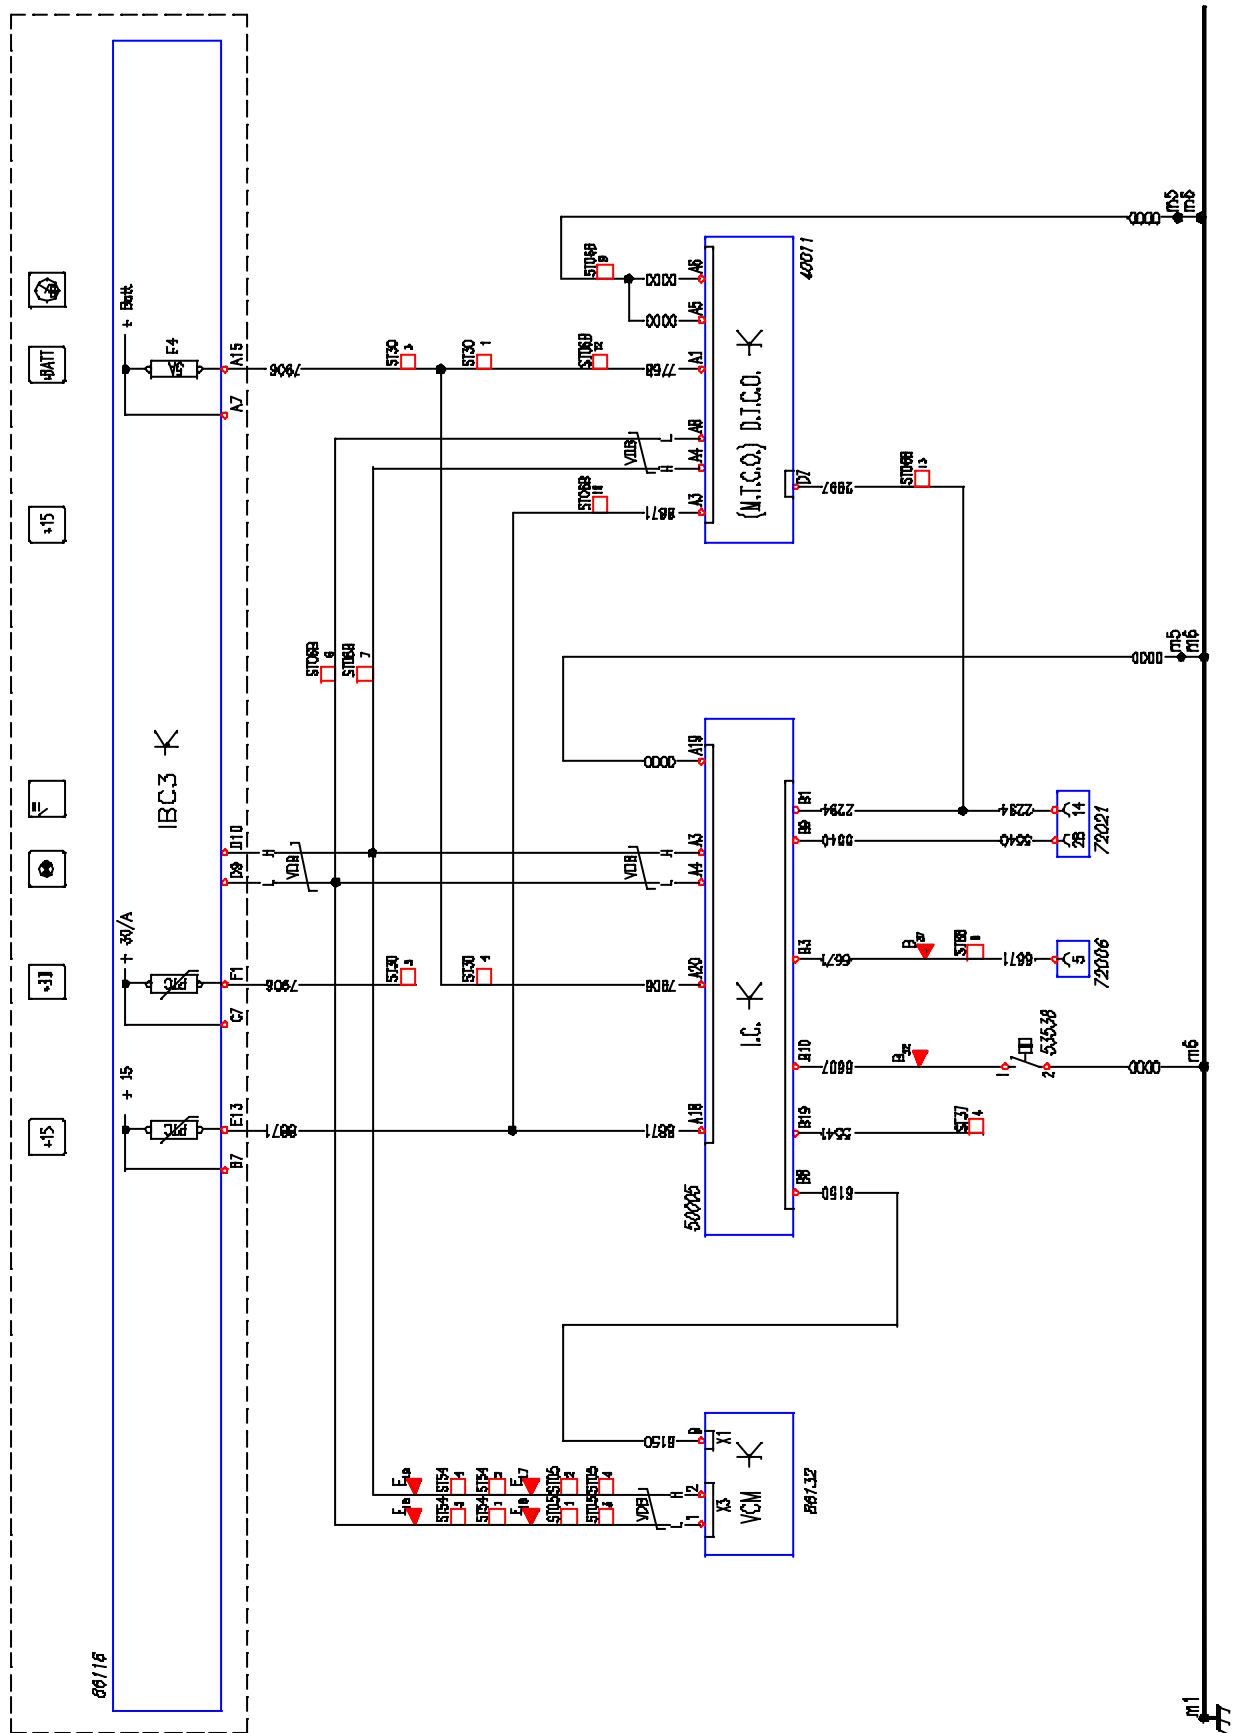


Aquila Trucks Centres

Chart 14: Tachograph / Diagnosis socket

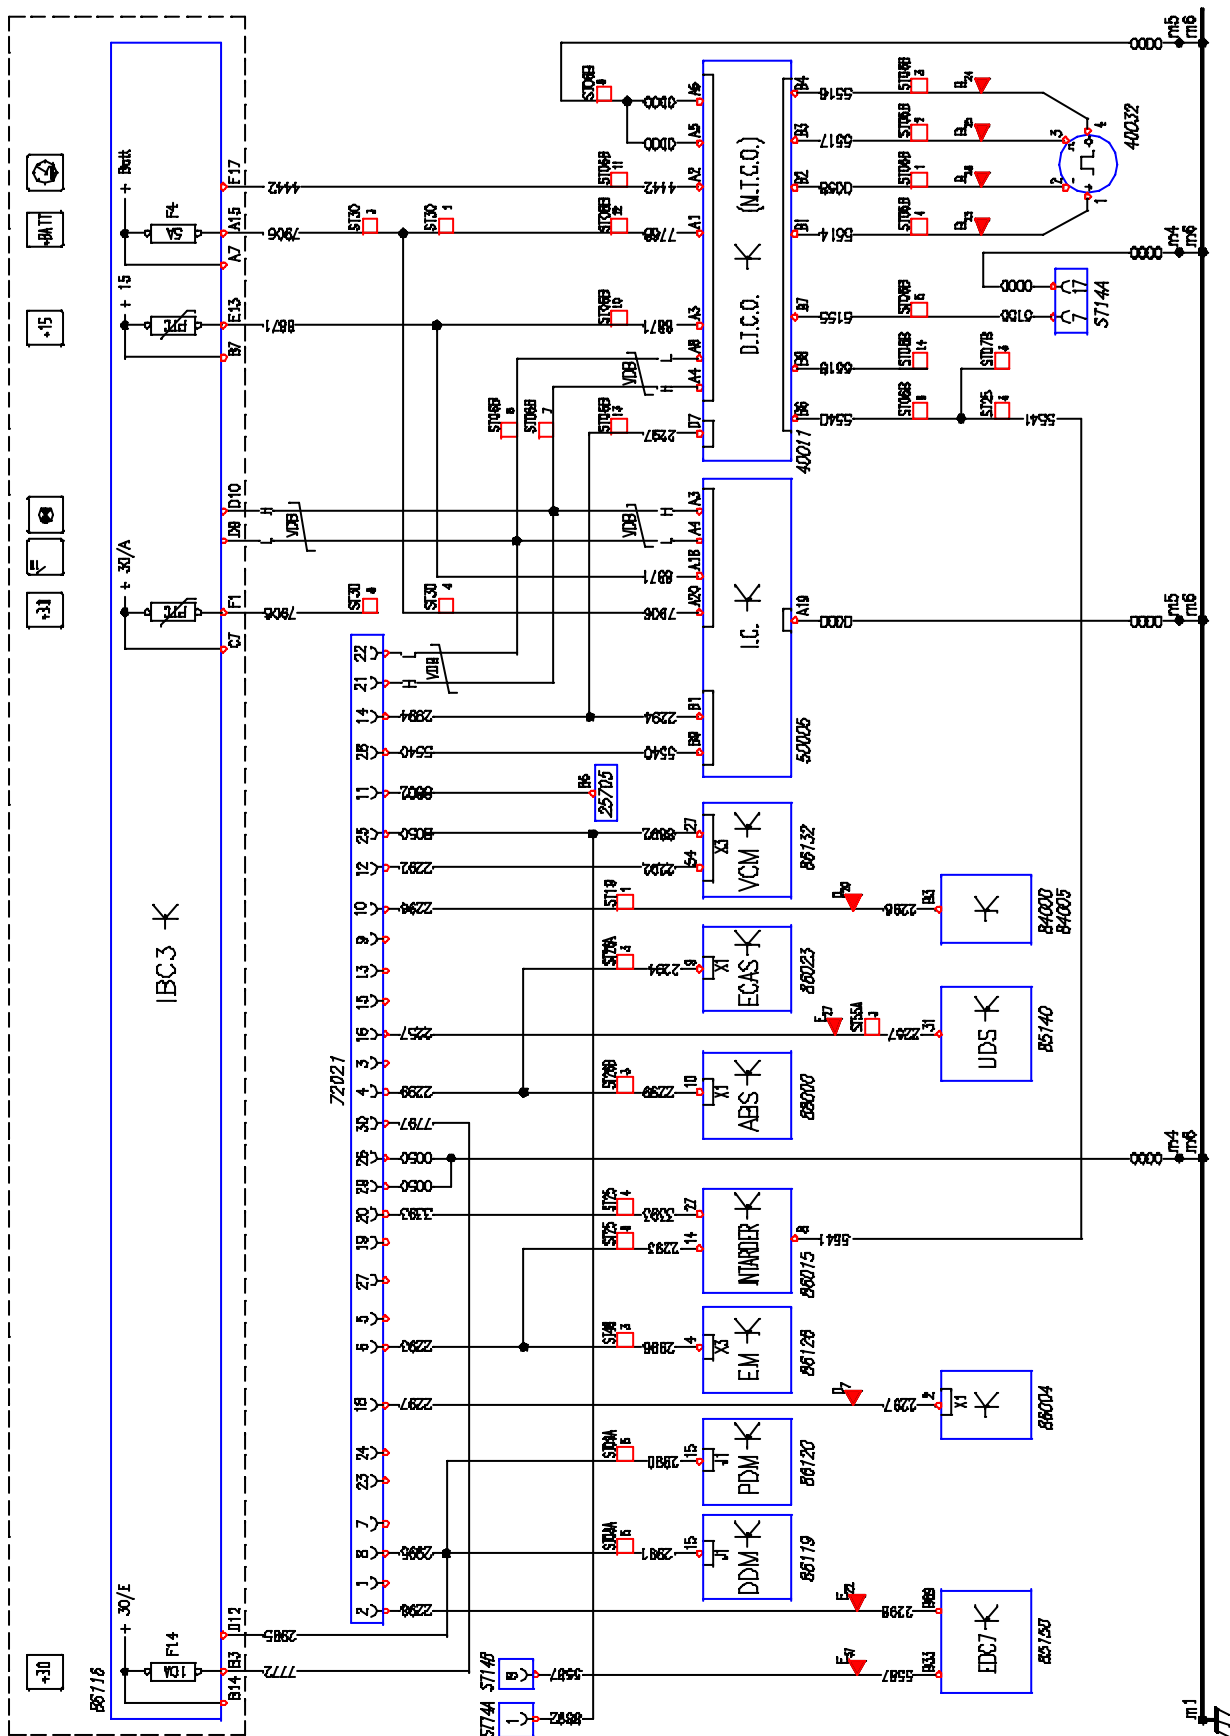


Aquila Trucks Centres

Chart 15: Steering Wheel Interface (SWI)

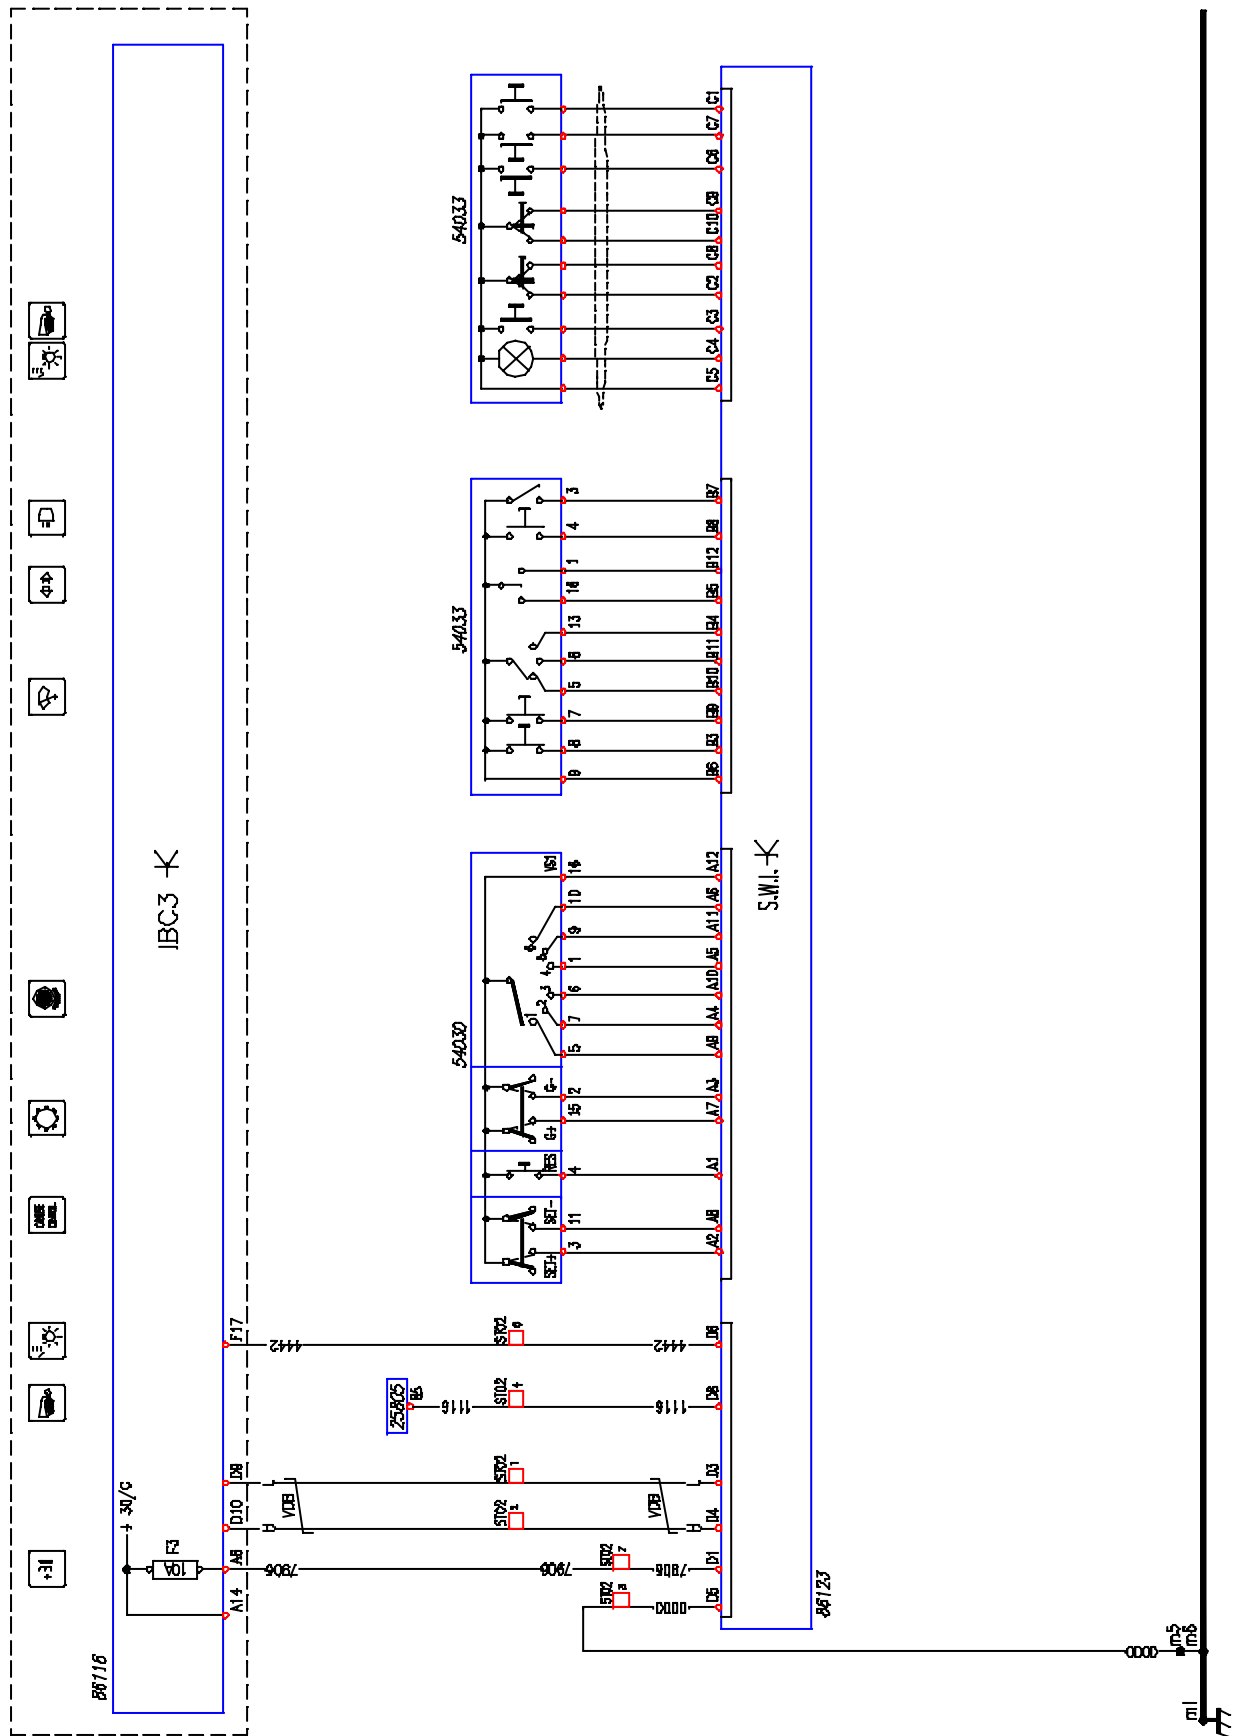

Aquila Trucks Centres


Chart 16: DDM-BM control unit

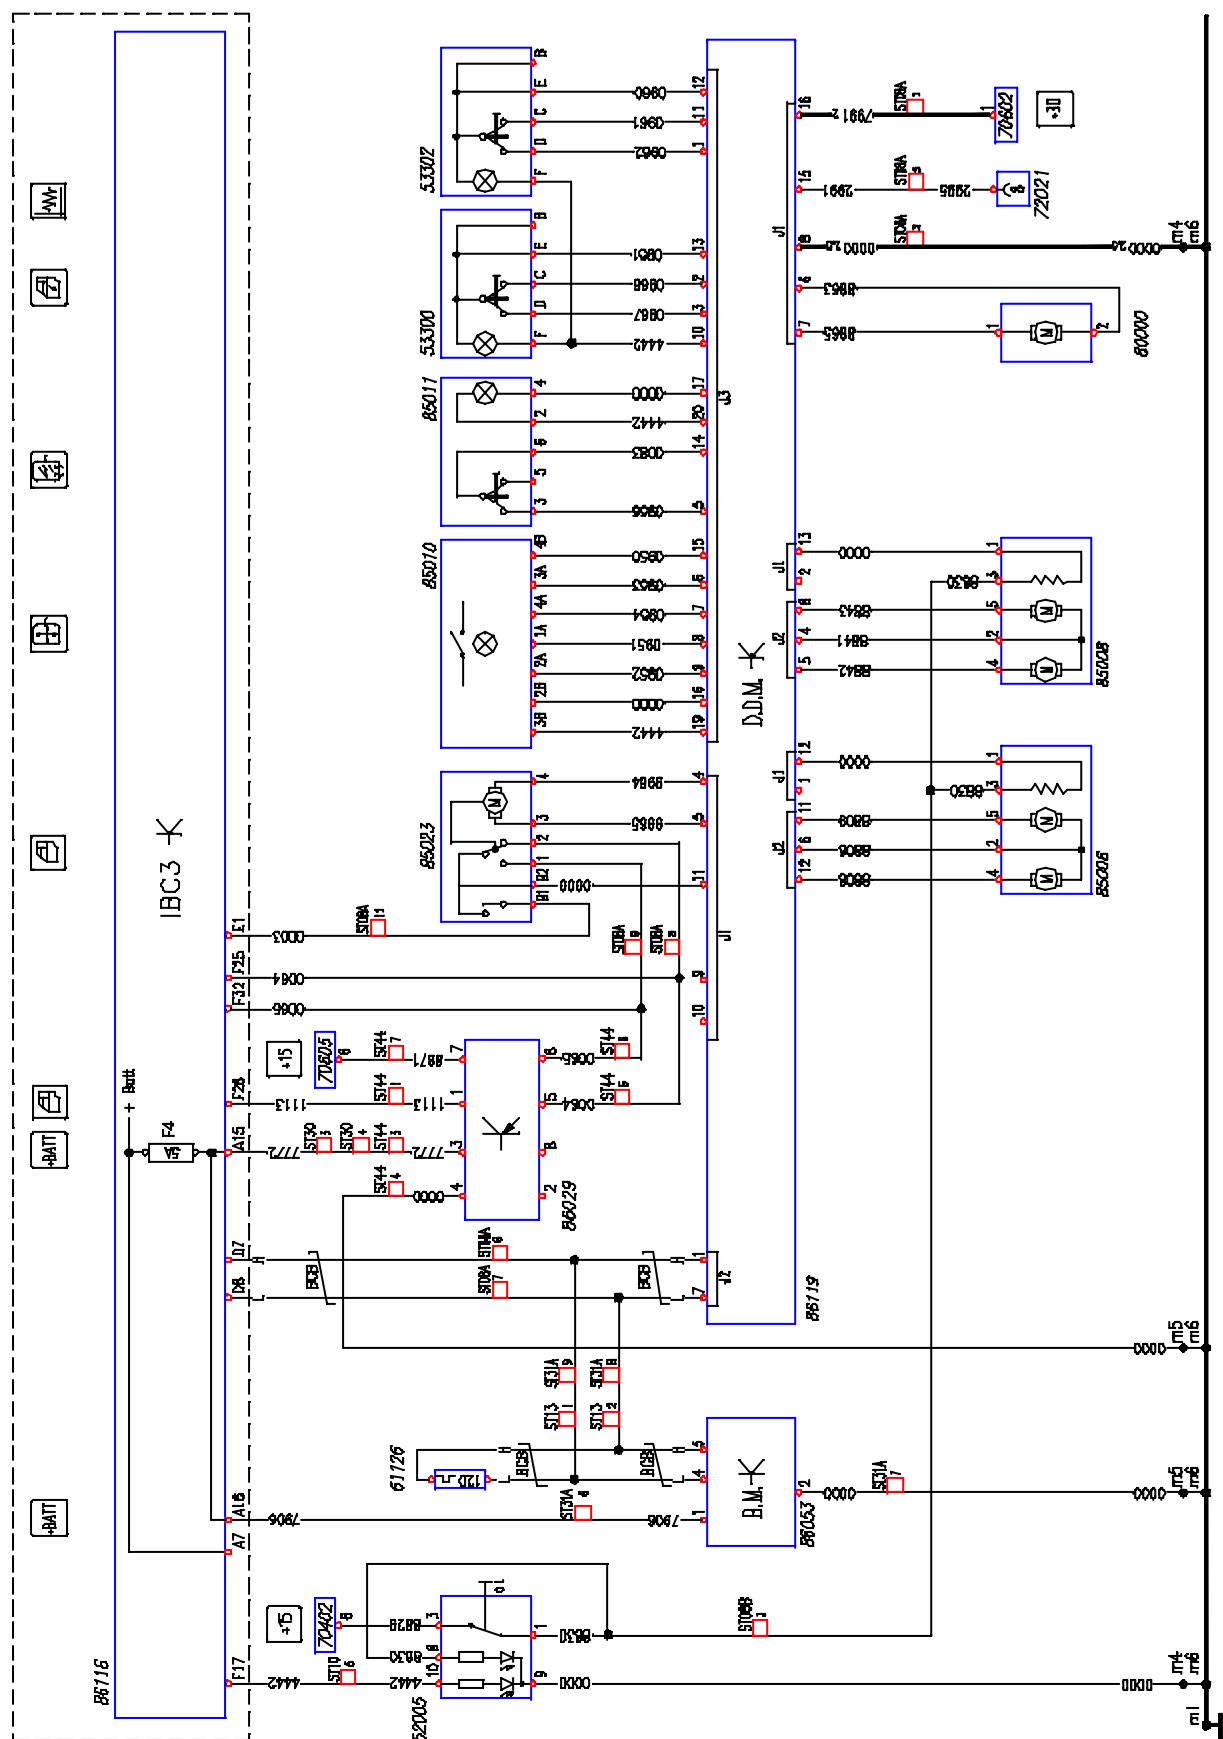


113371

Aquila Trucks Centres

Chart 17: Passenger Door Module (PDM)

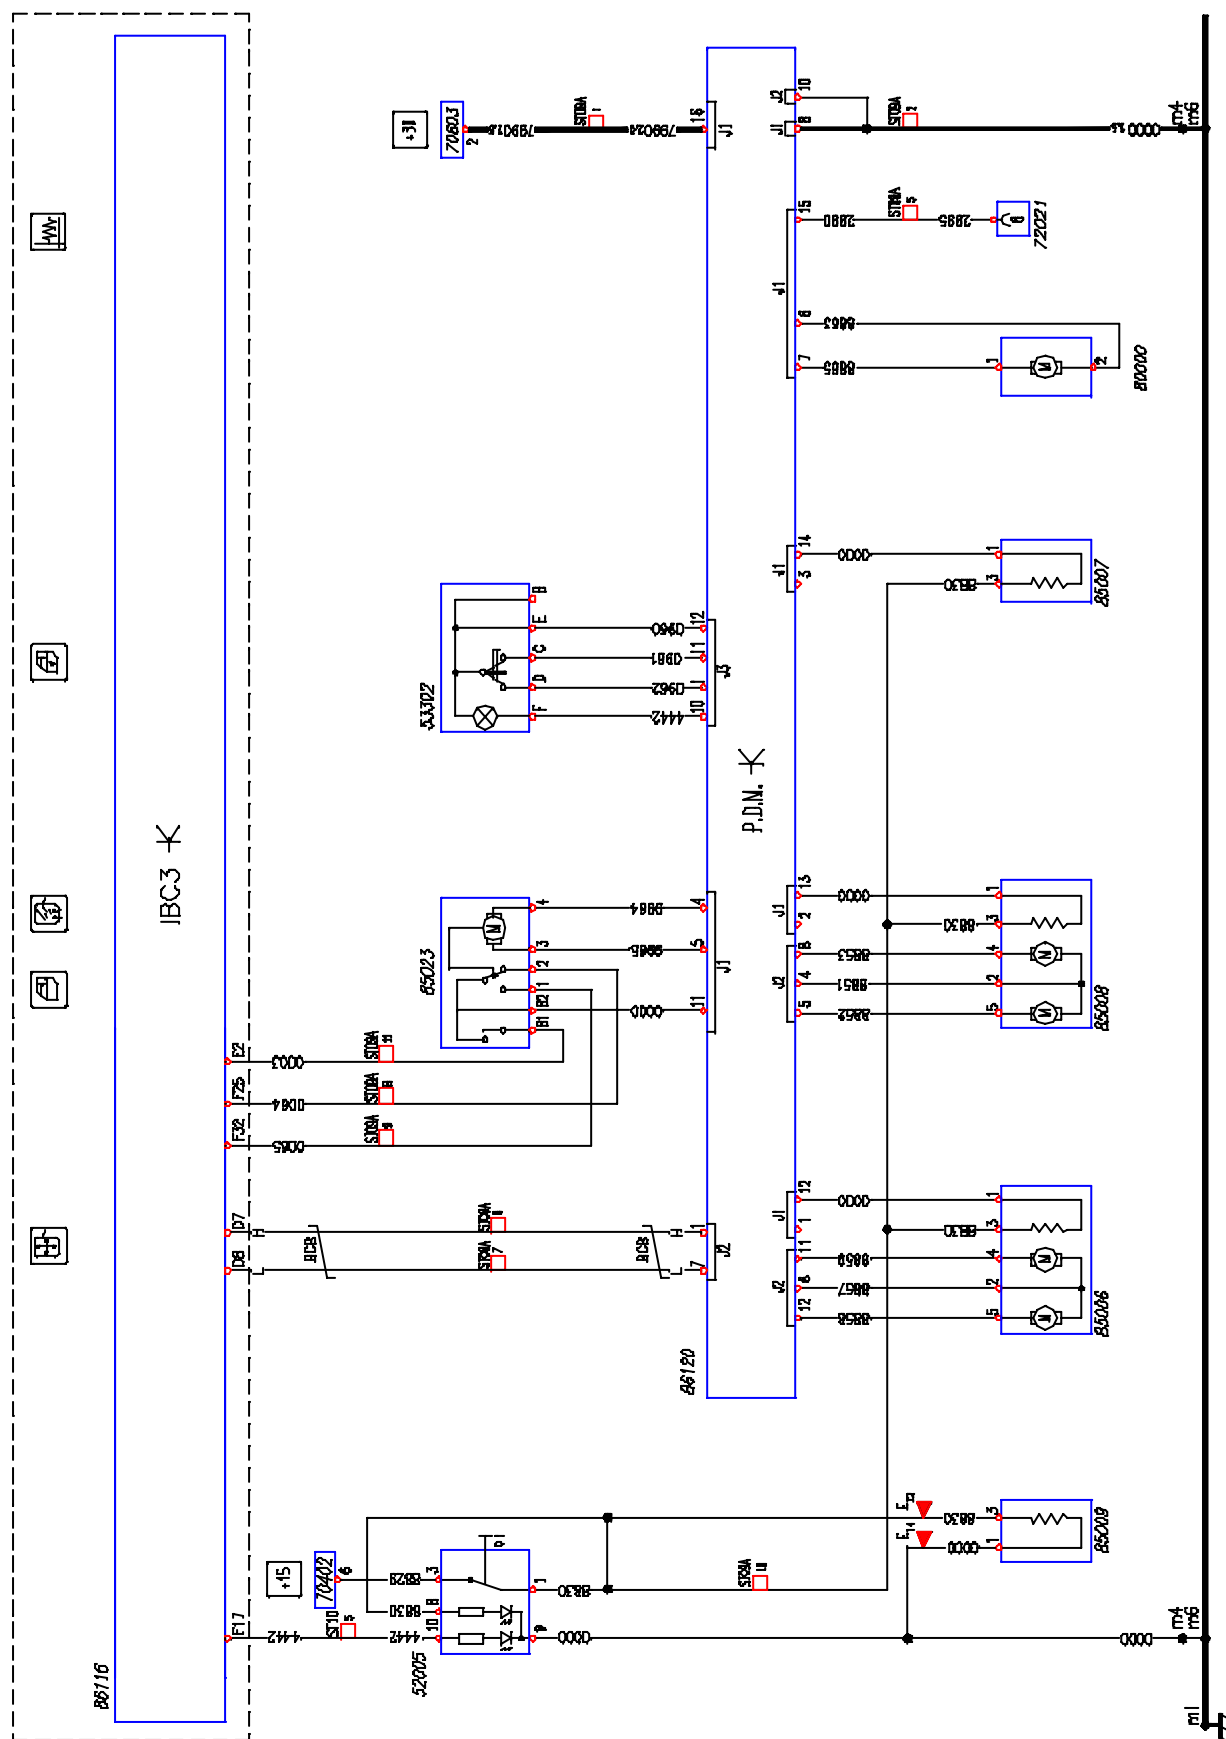


Aquila Trucks Centres

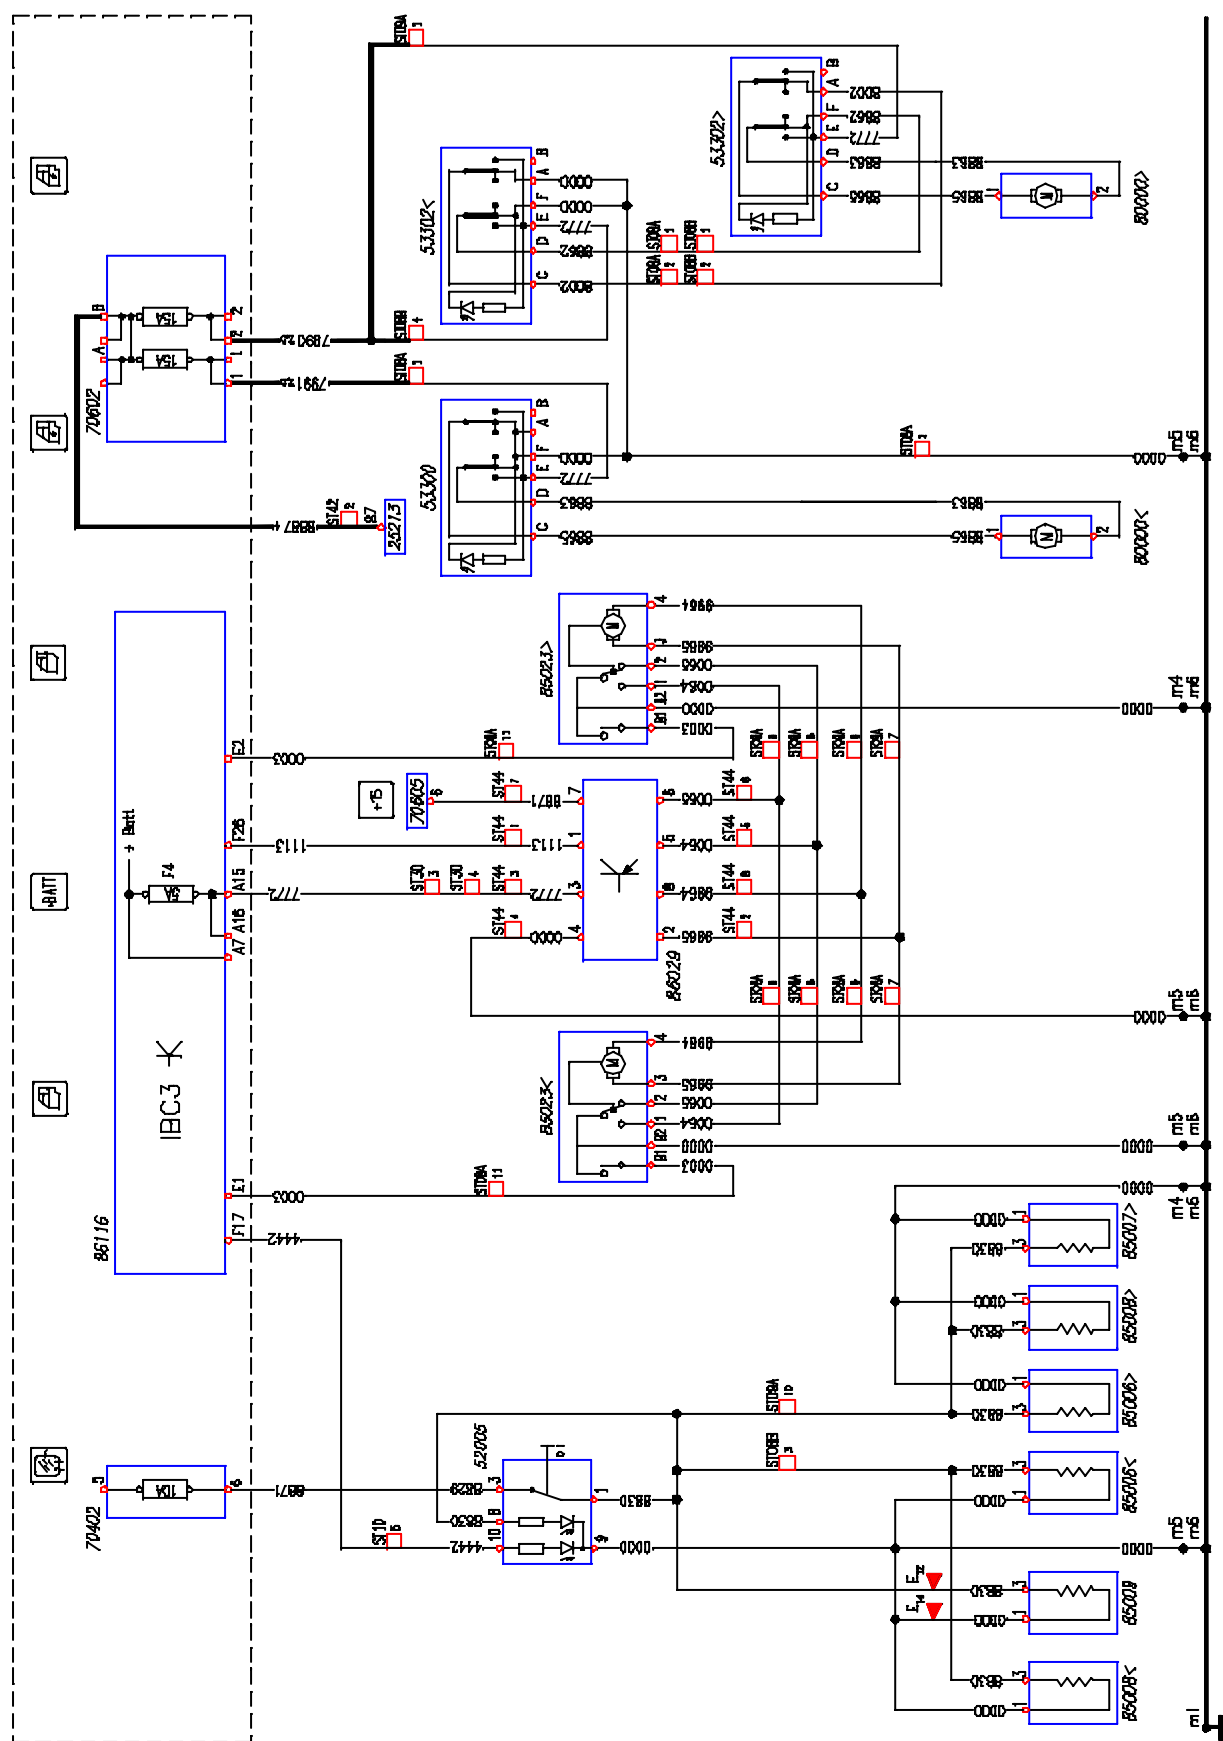Chart 18: Thermal mirrors / Centralised locking / Window winders (without DDM-PDM)

113373


Aquila Trucks Centres

Chart 19: Electronic Control Unit VCM

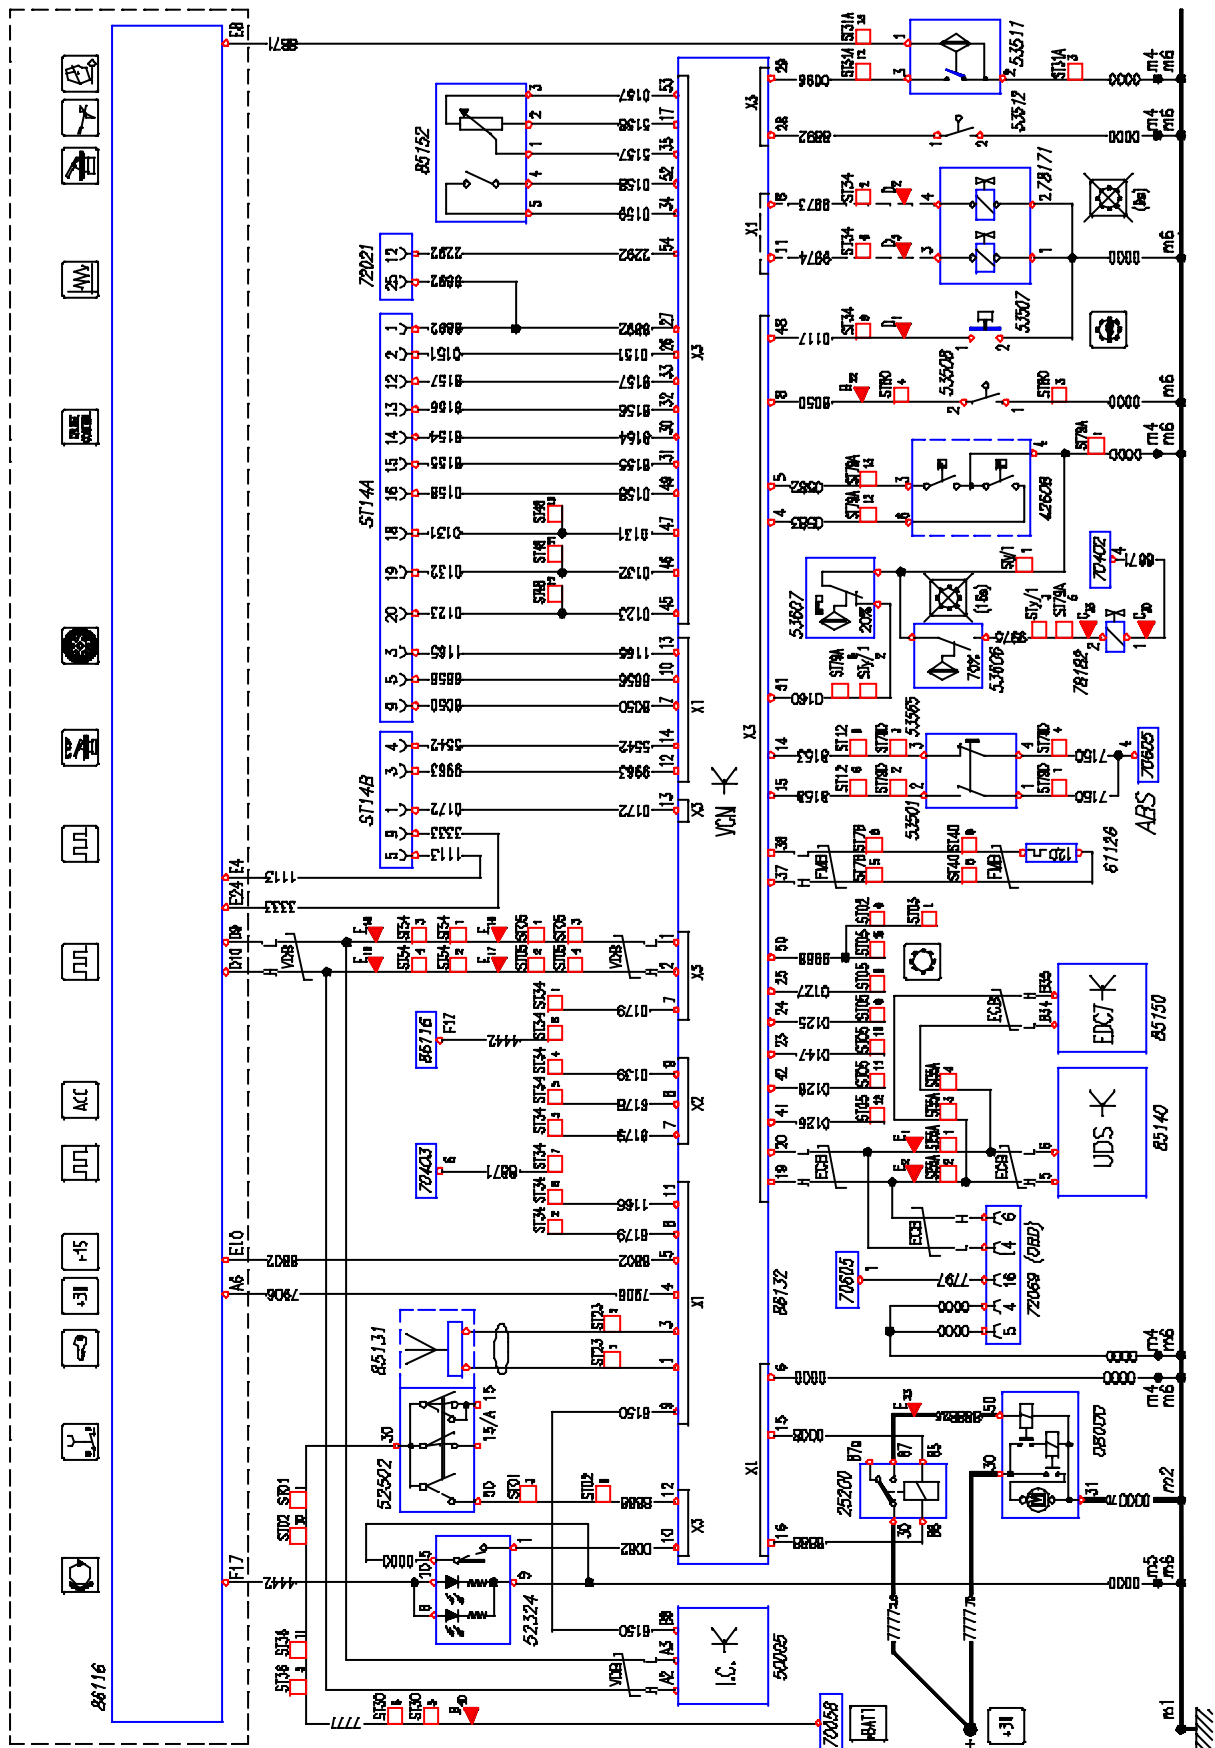

Aquila Trucks Centres

Chart 20: EDC (Connector B)

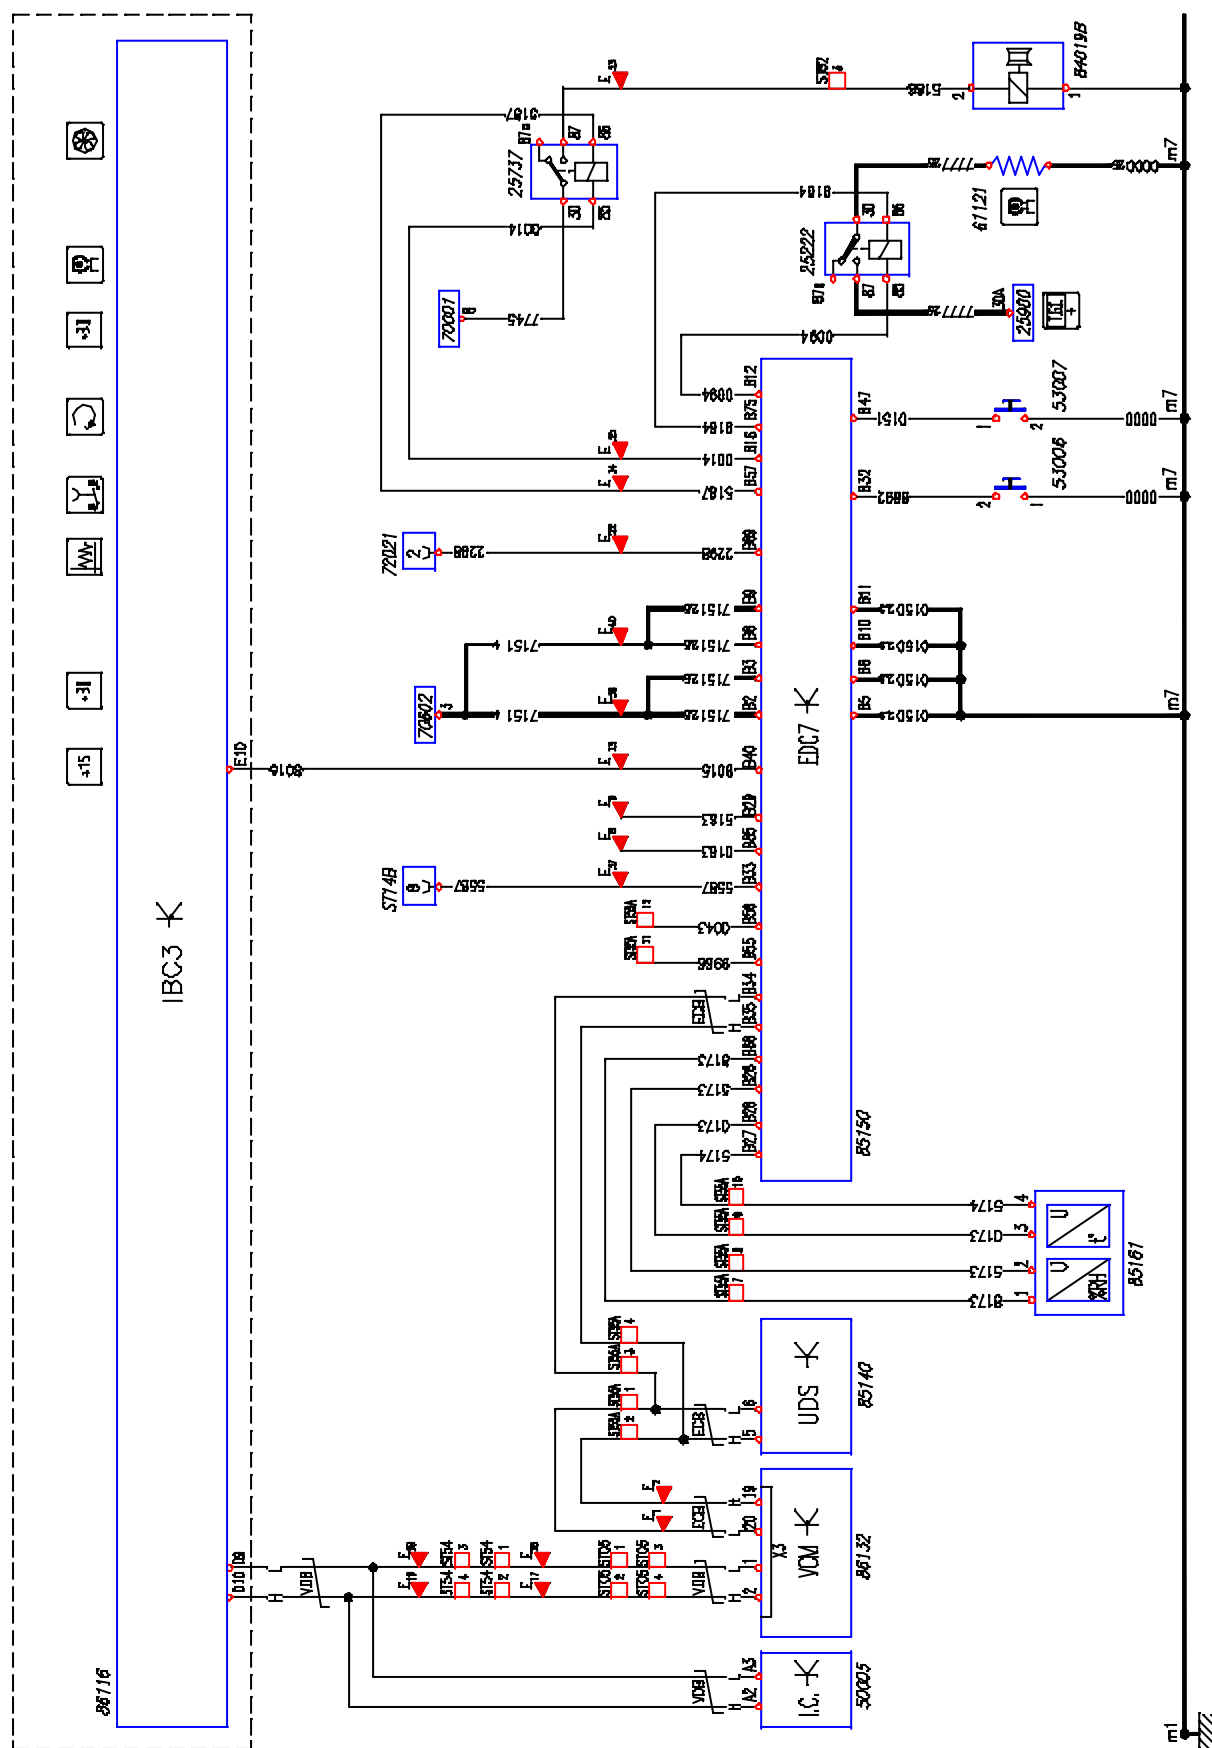

Aquila Trucks Centres

Chart 21: EDC (Connector A/C - F2B)

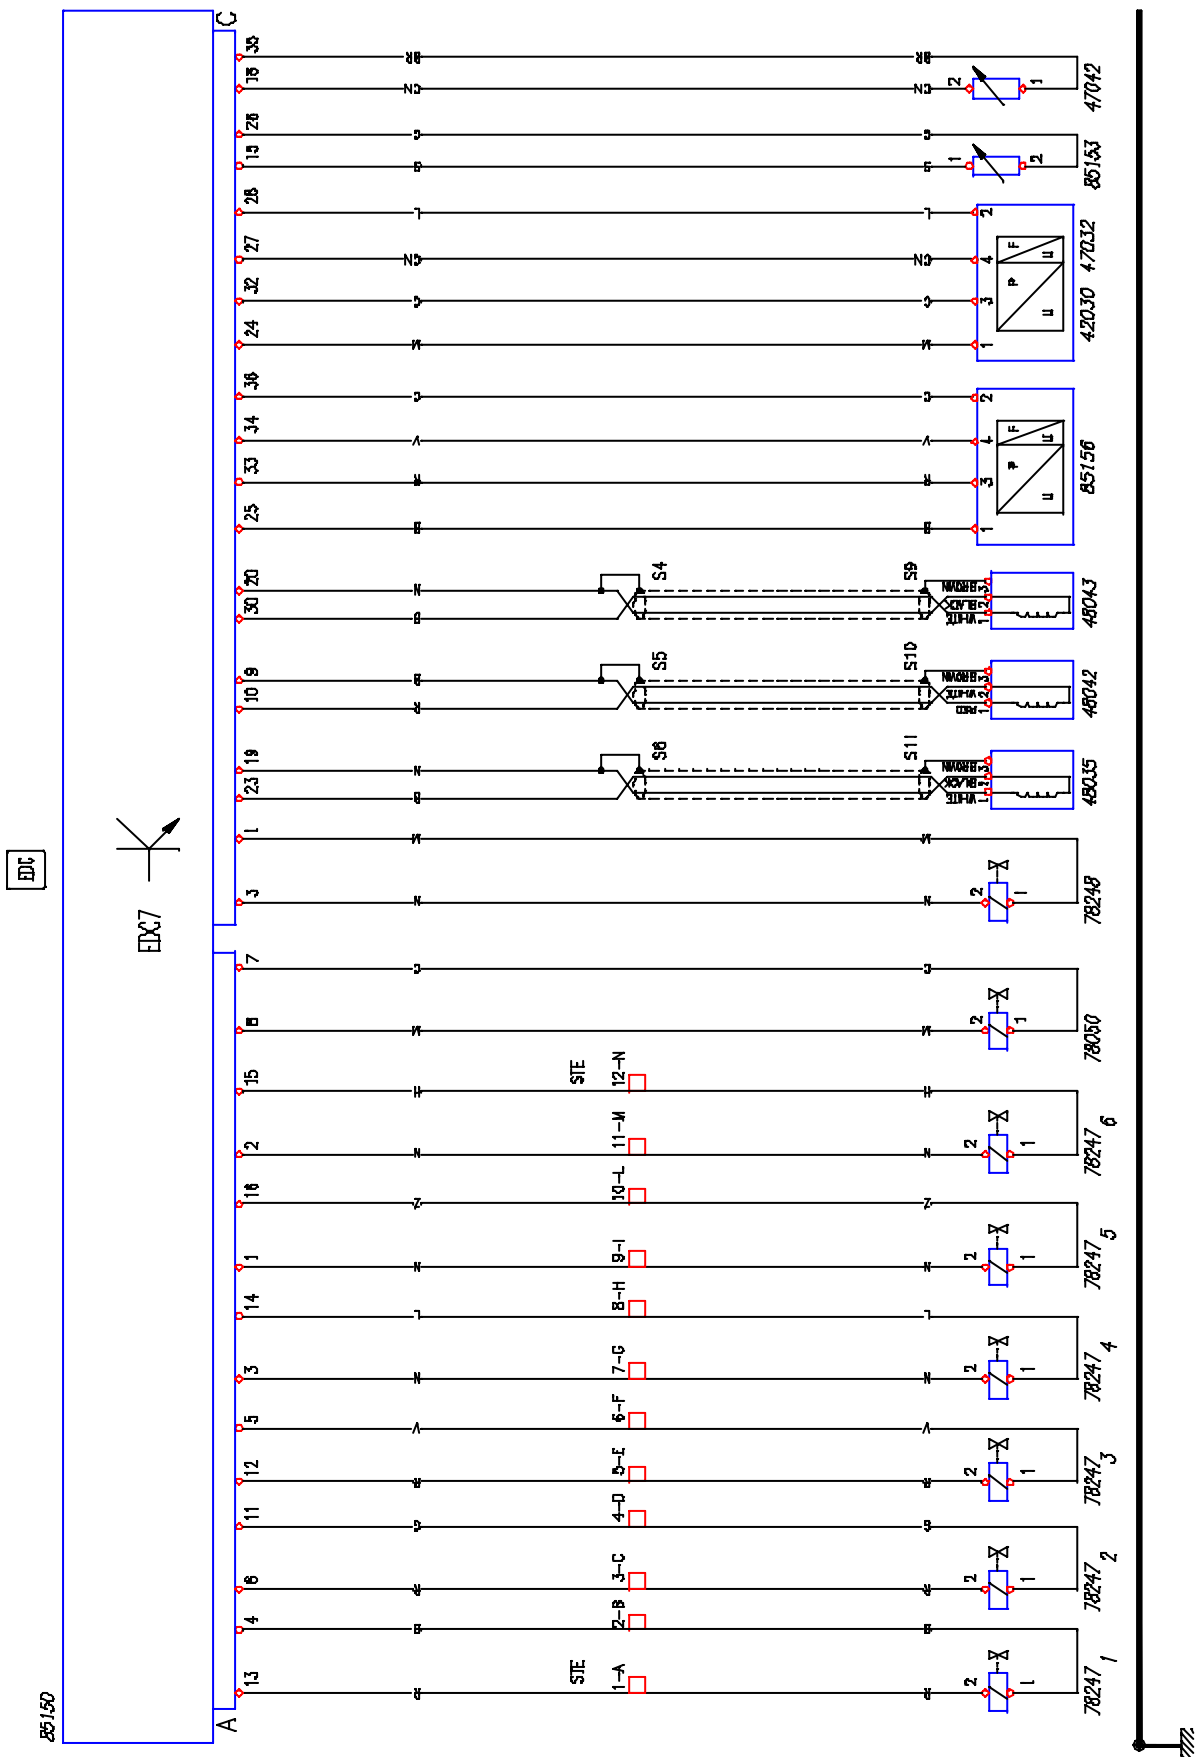


Chart 22: EDC (Connector A/C - F3B)

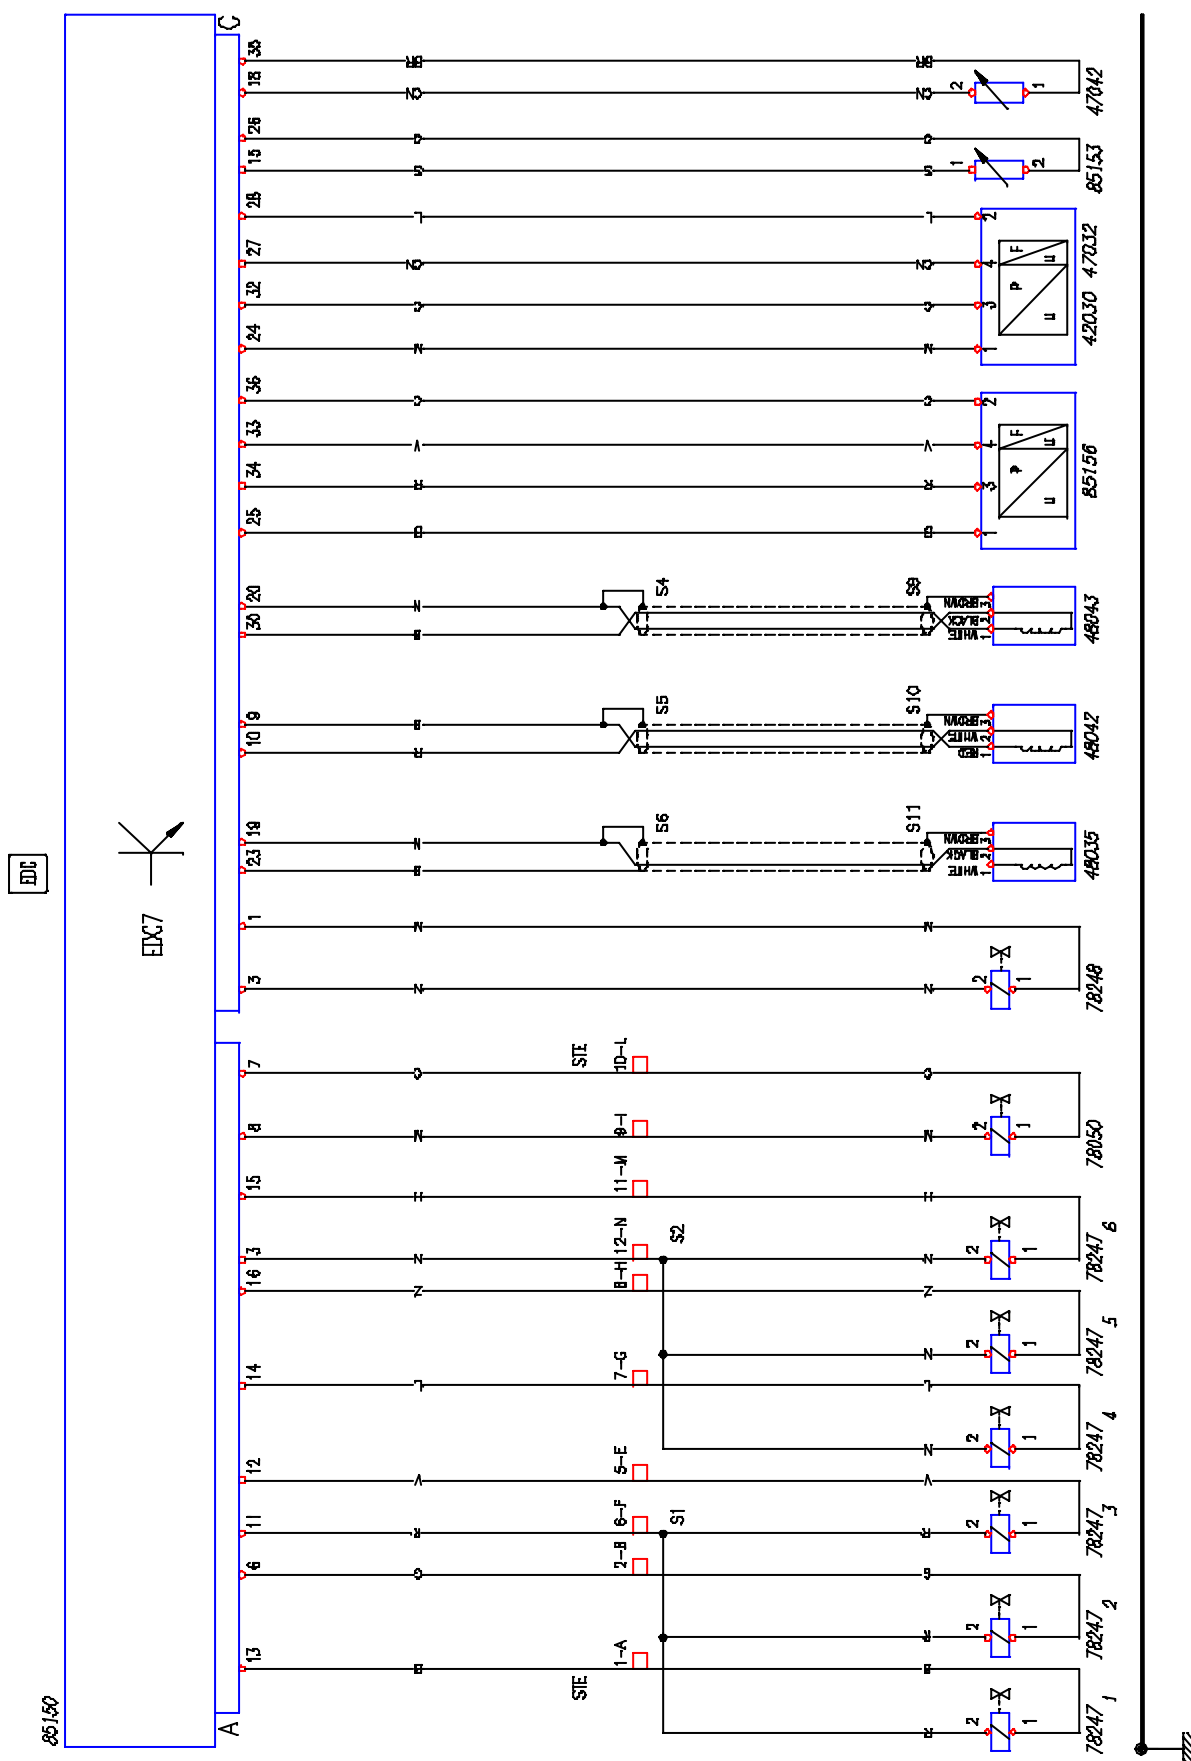


Chart 23: Central unit UDS (DENOX 2)



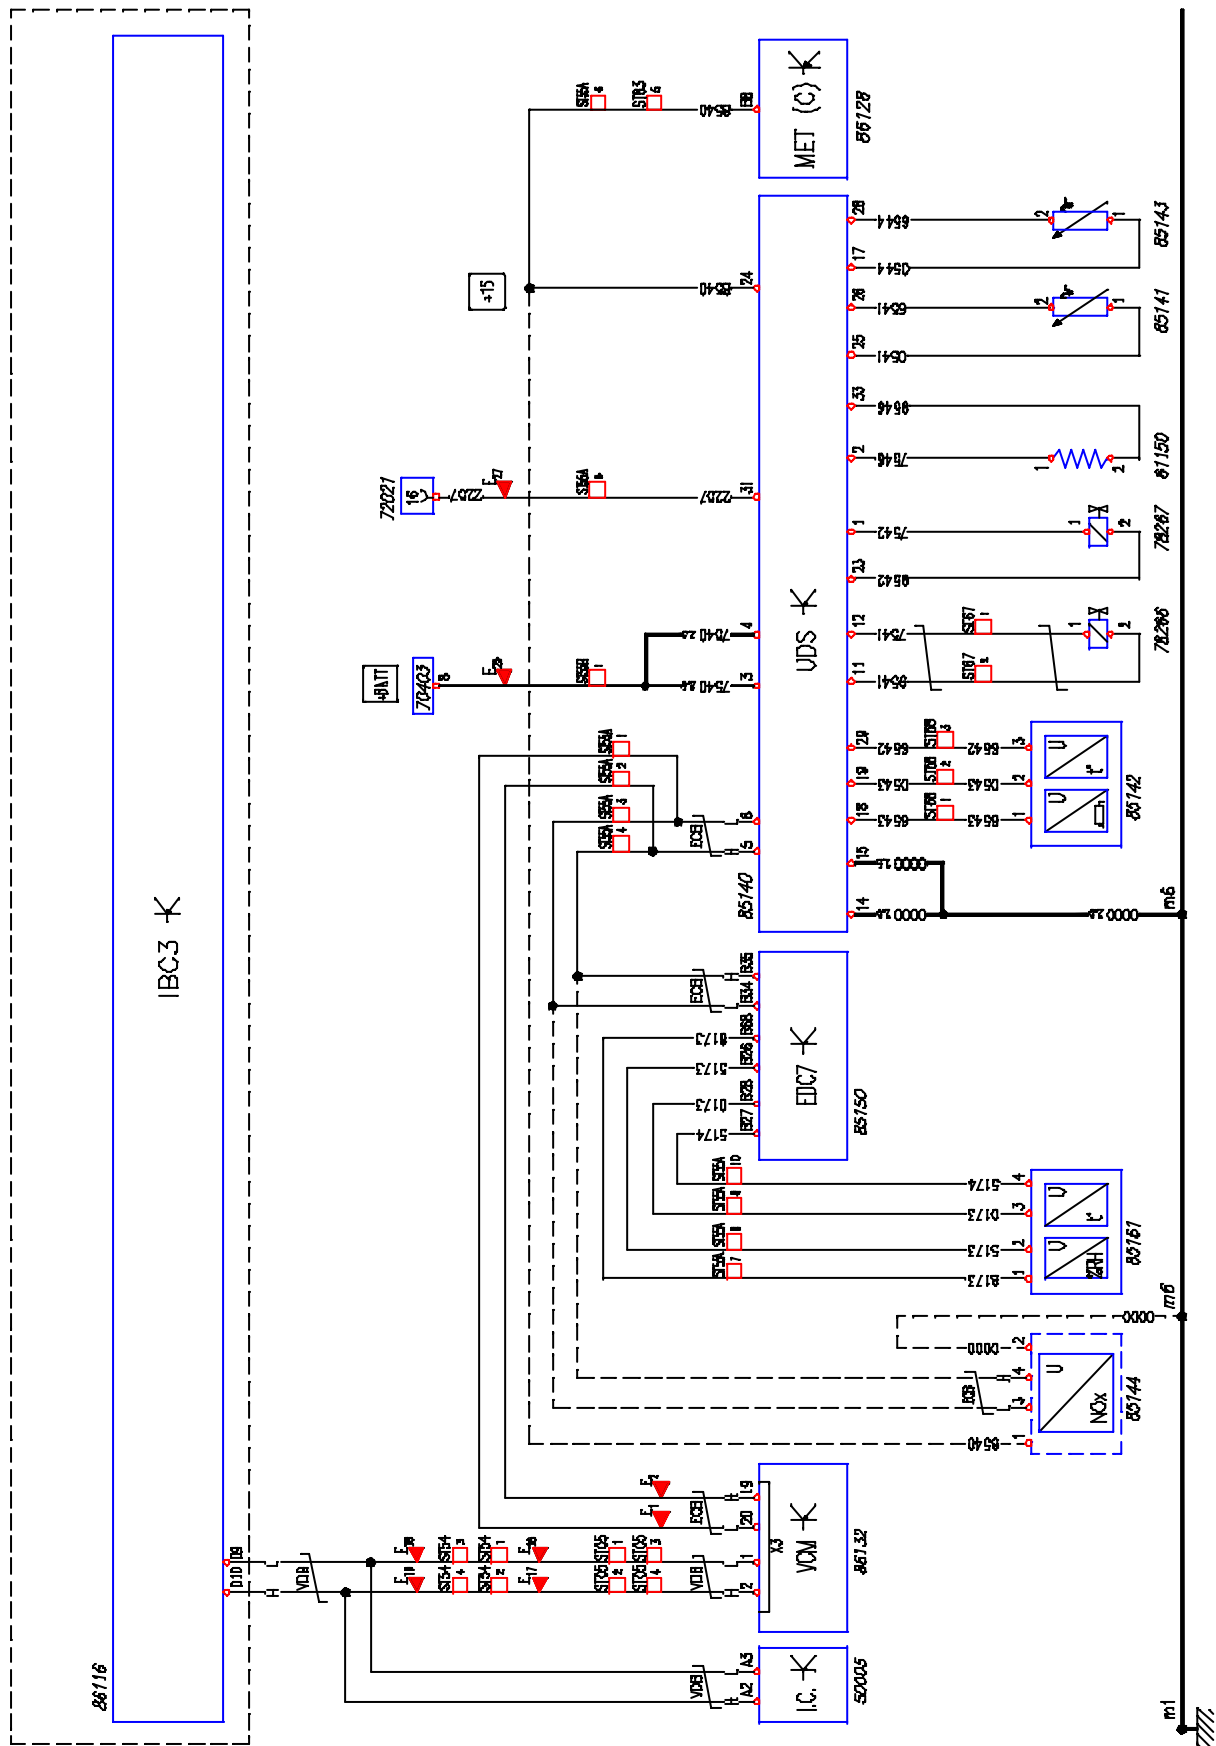


Chart 25: Control unit MET

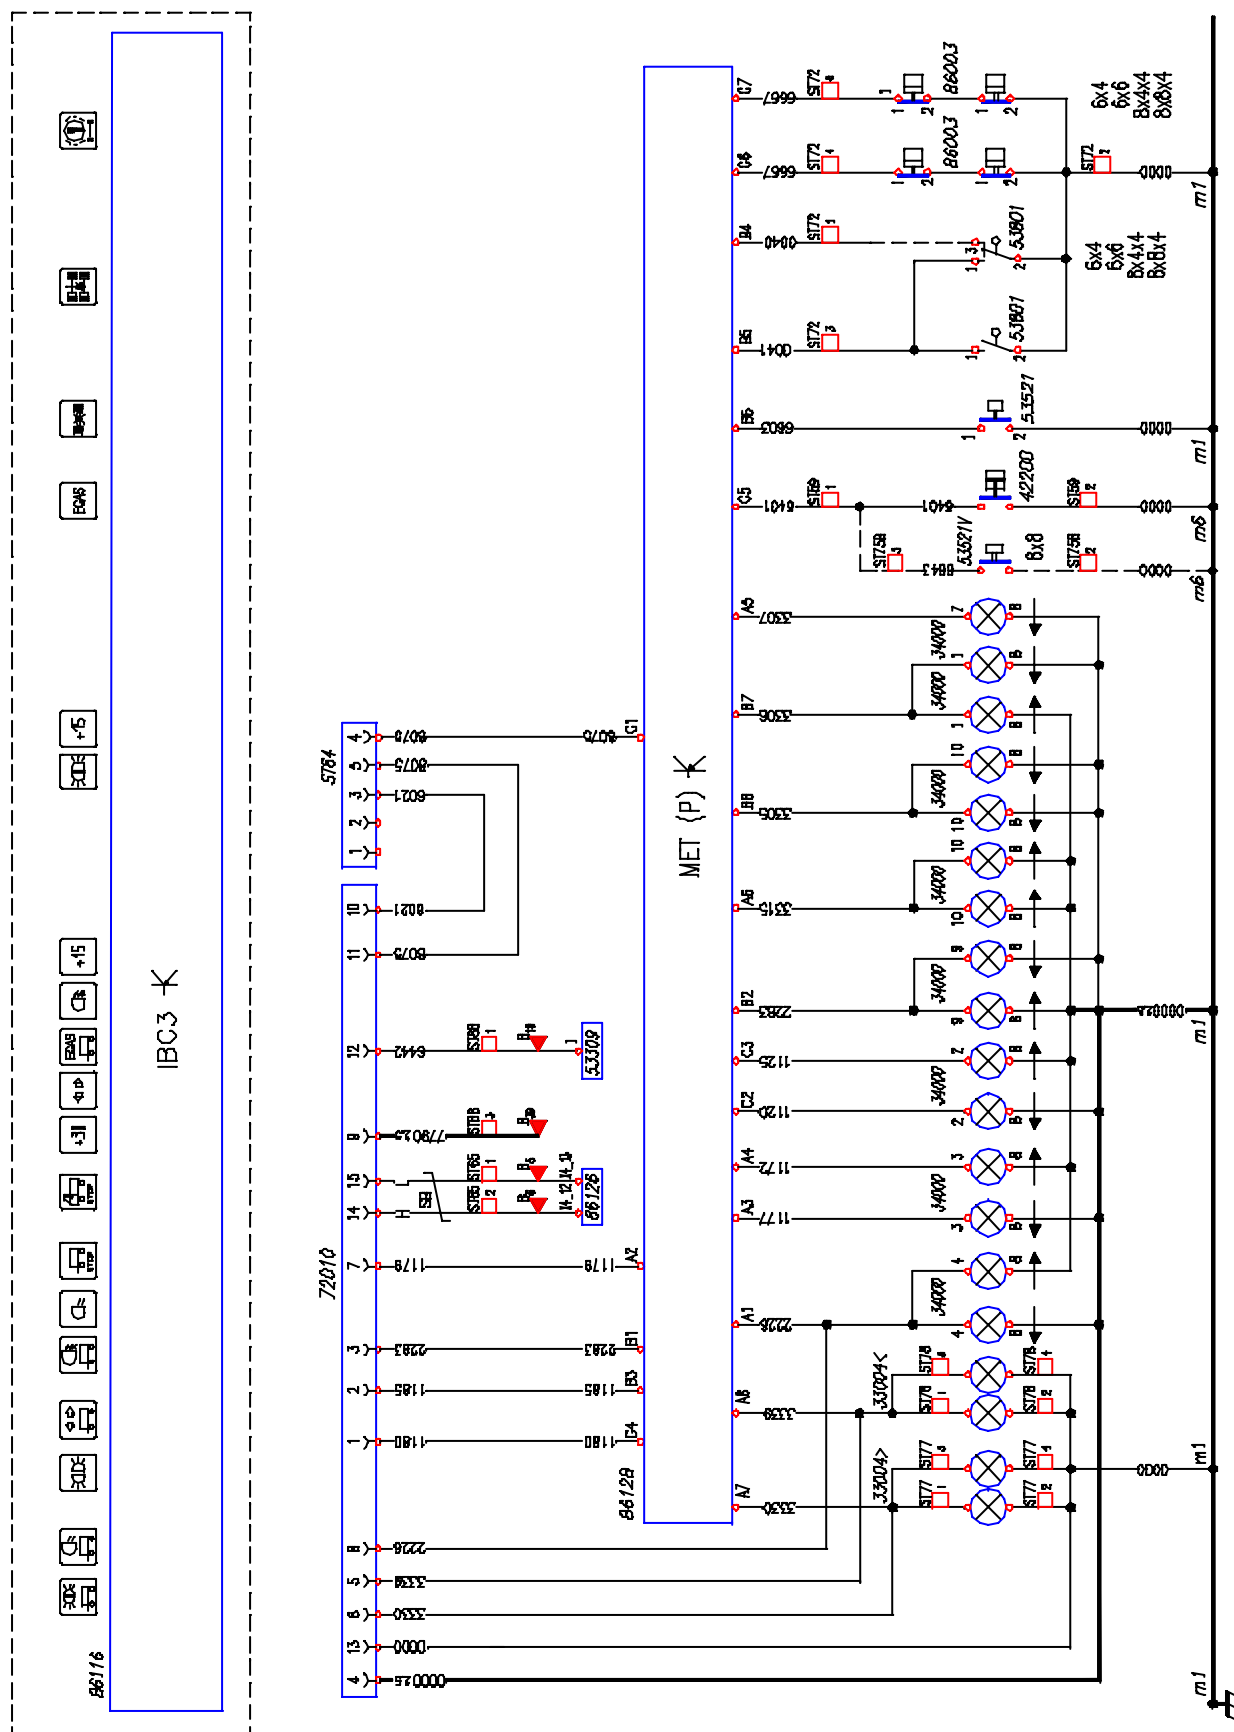


Aquila Trucks Centres

Chart 27: Line CAN-IDB / FMB / Control unit / Telematics / Navigator

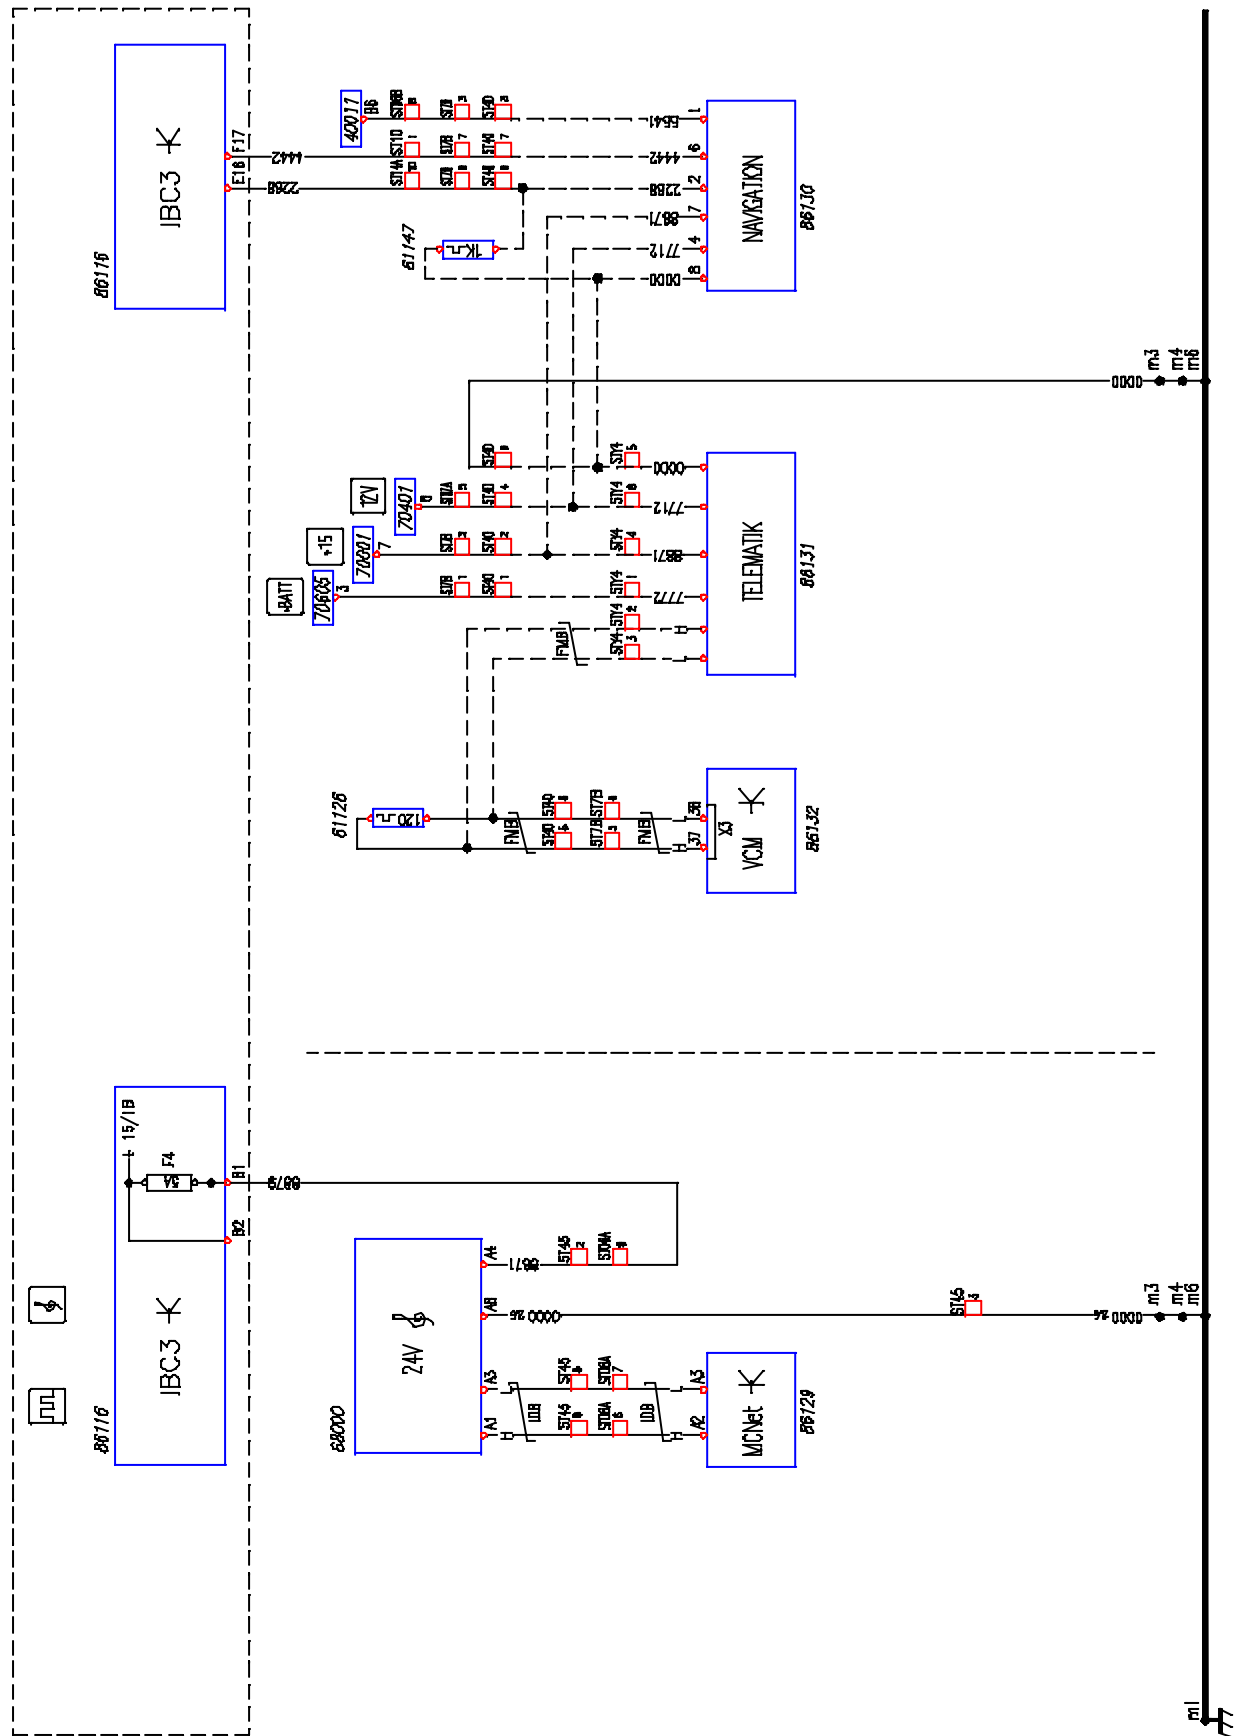


Aquila Trucks Centres

Chart 28: Can line “BCB”

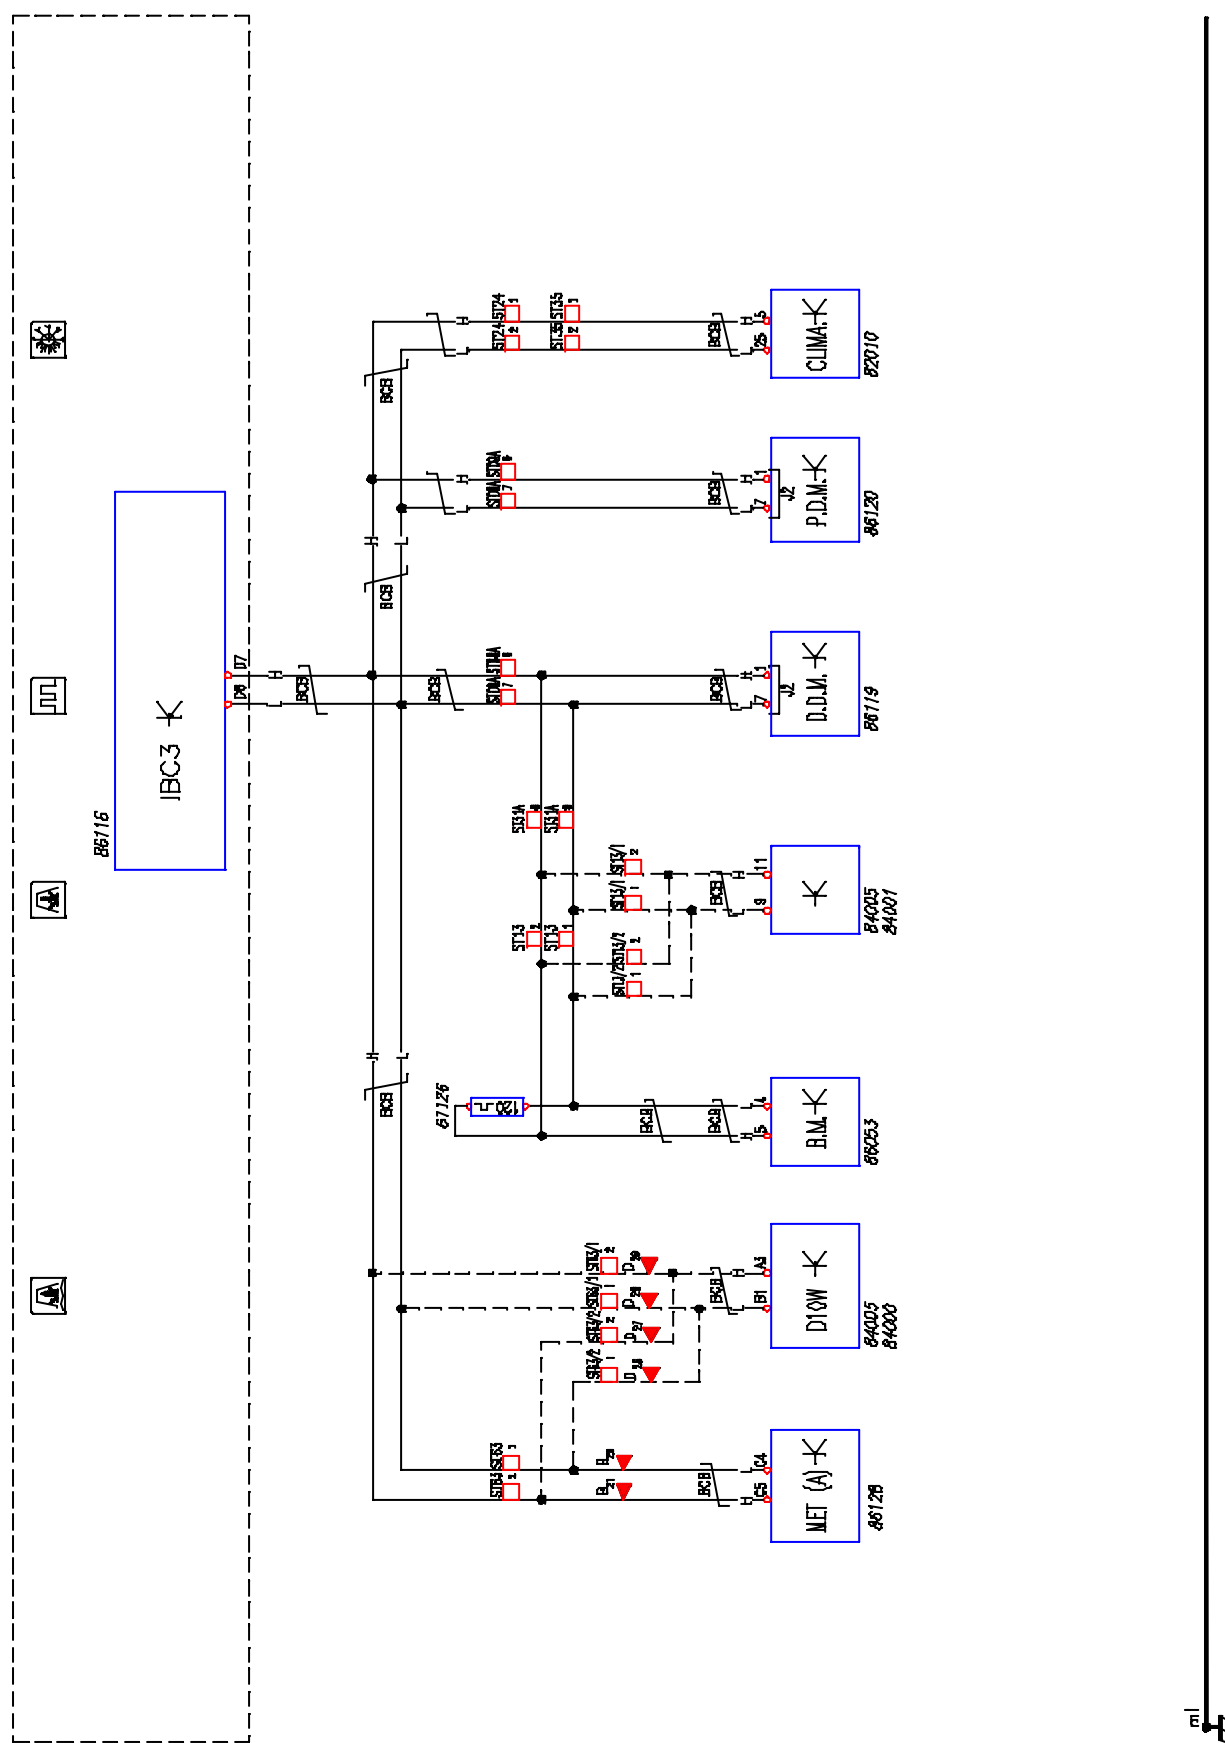

Aquila Trucks Centres

Chart 29: Can line "VDB"

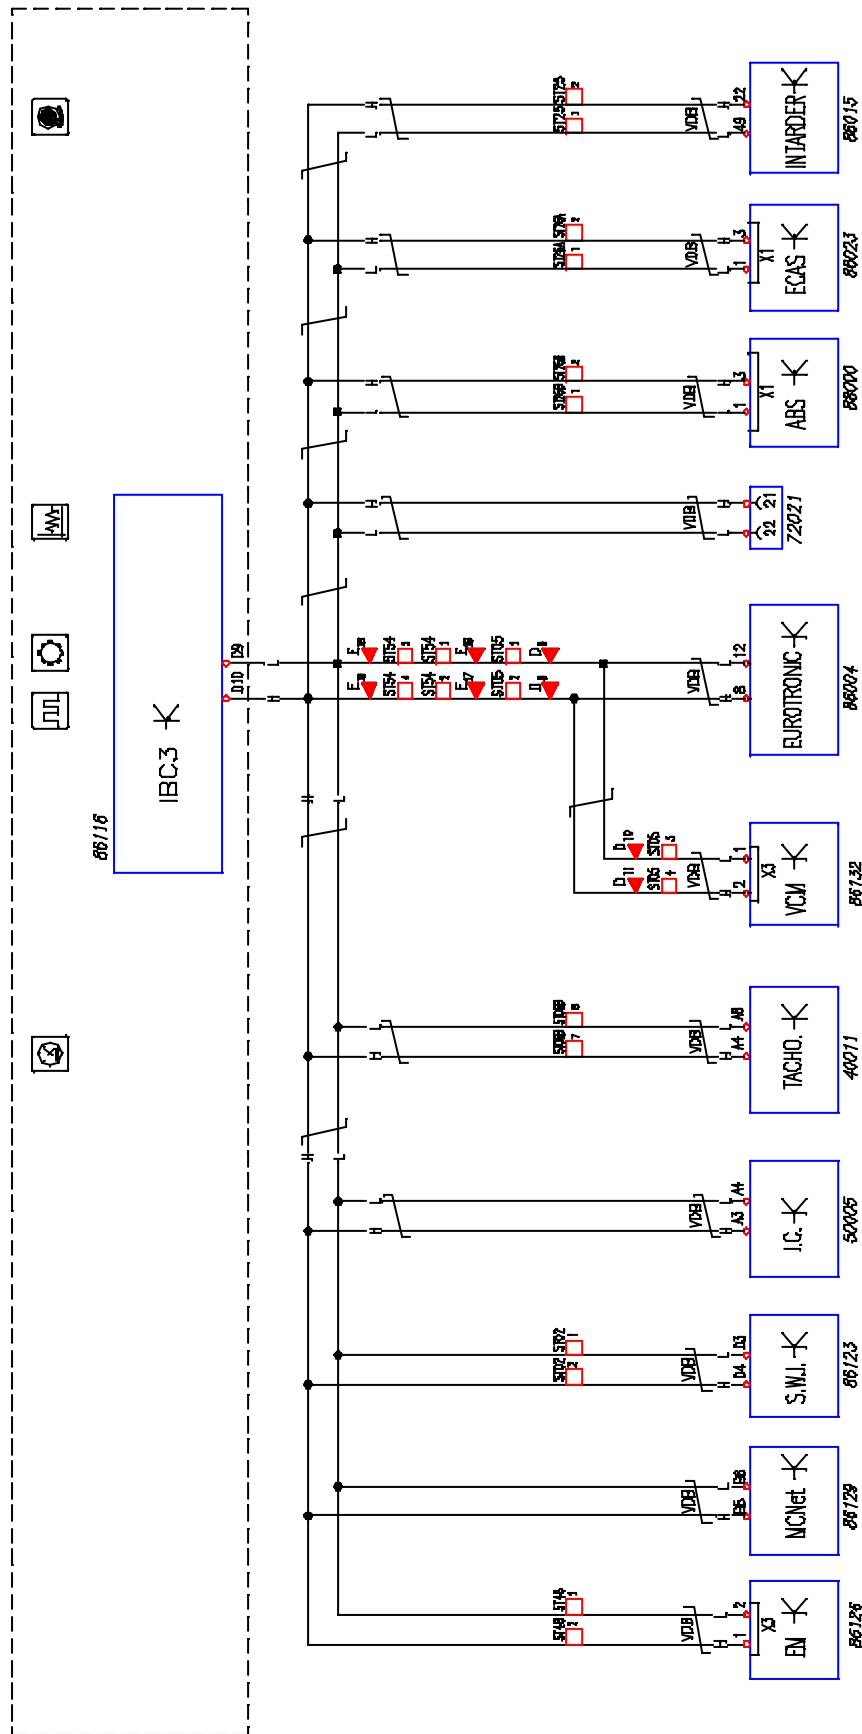

Aquila Trucks Centres

Chart 30: Can line "ECB"


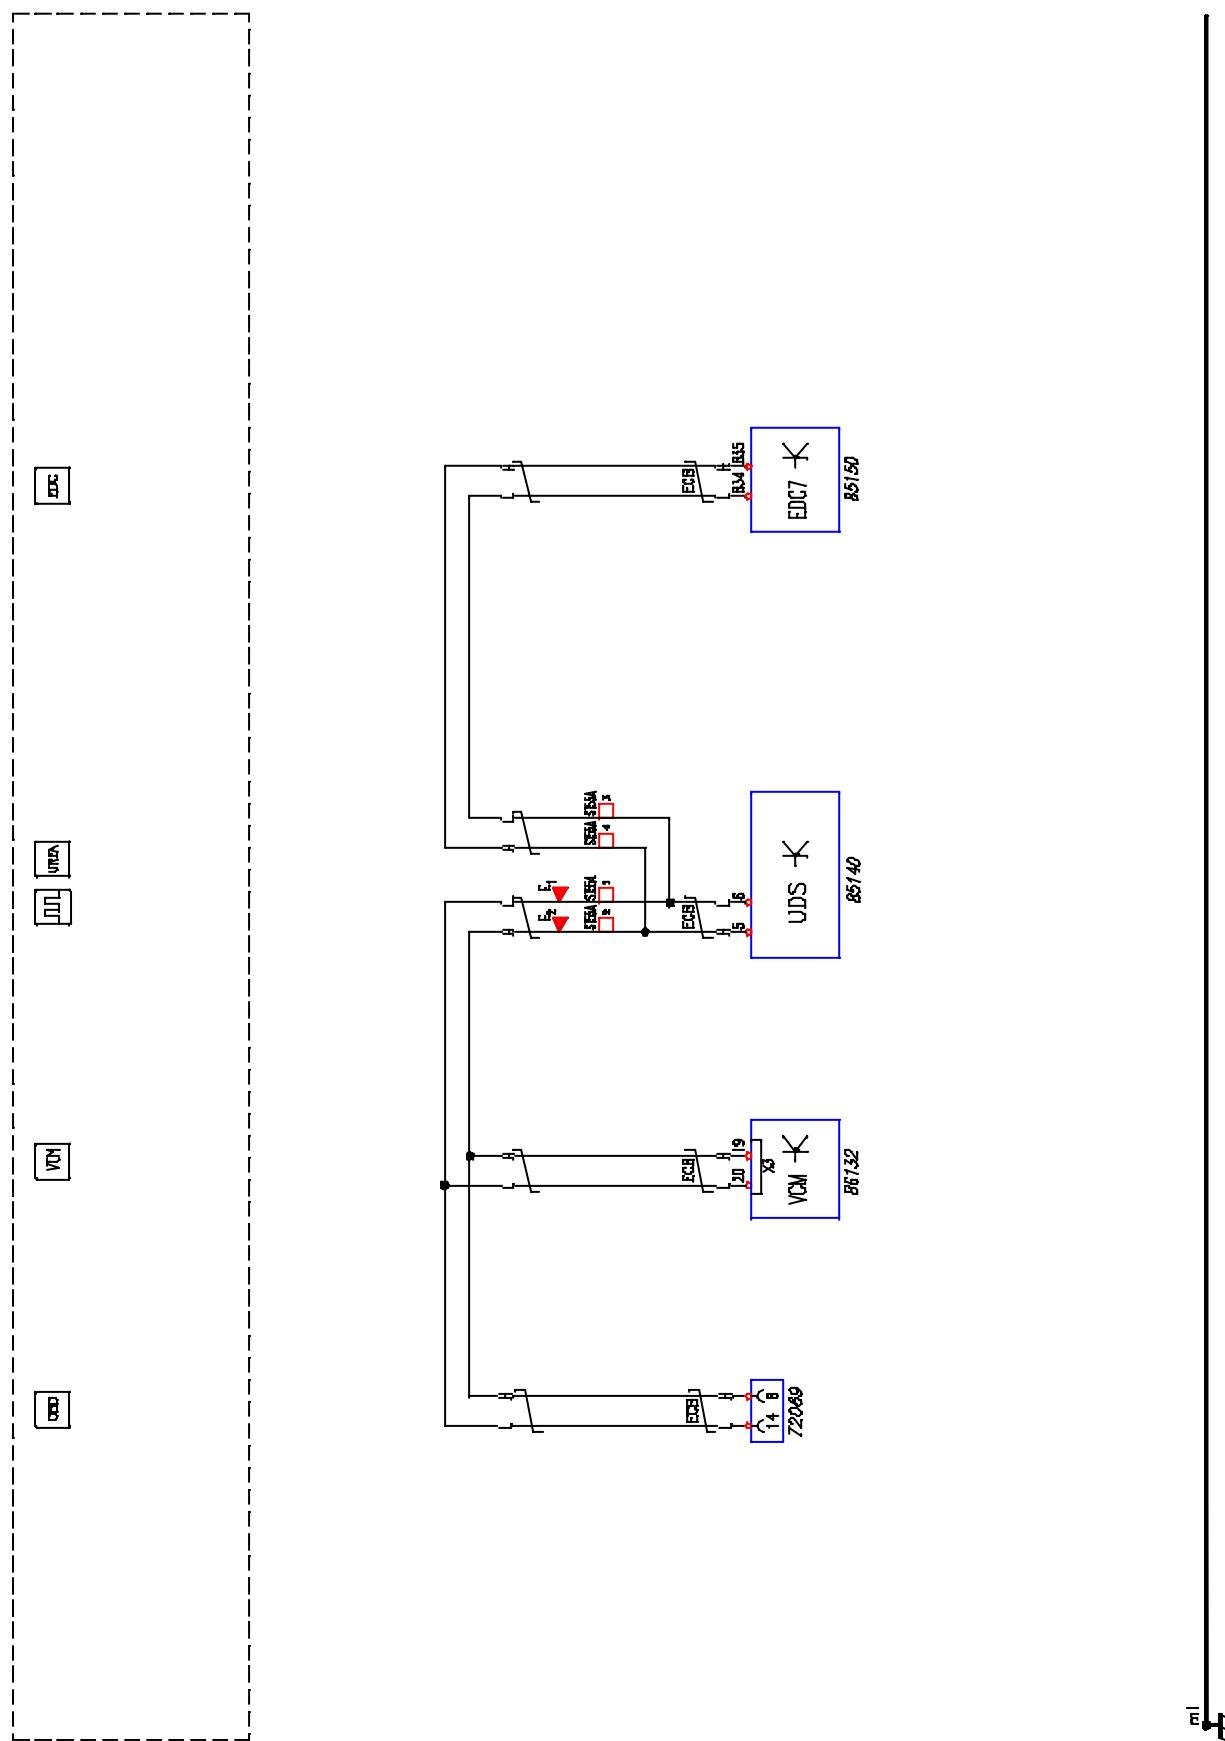


Chart 31: ECAS 4x2 P (TRACTOR)

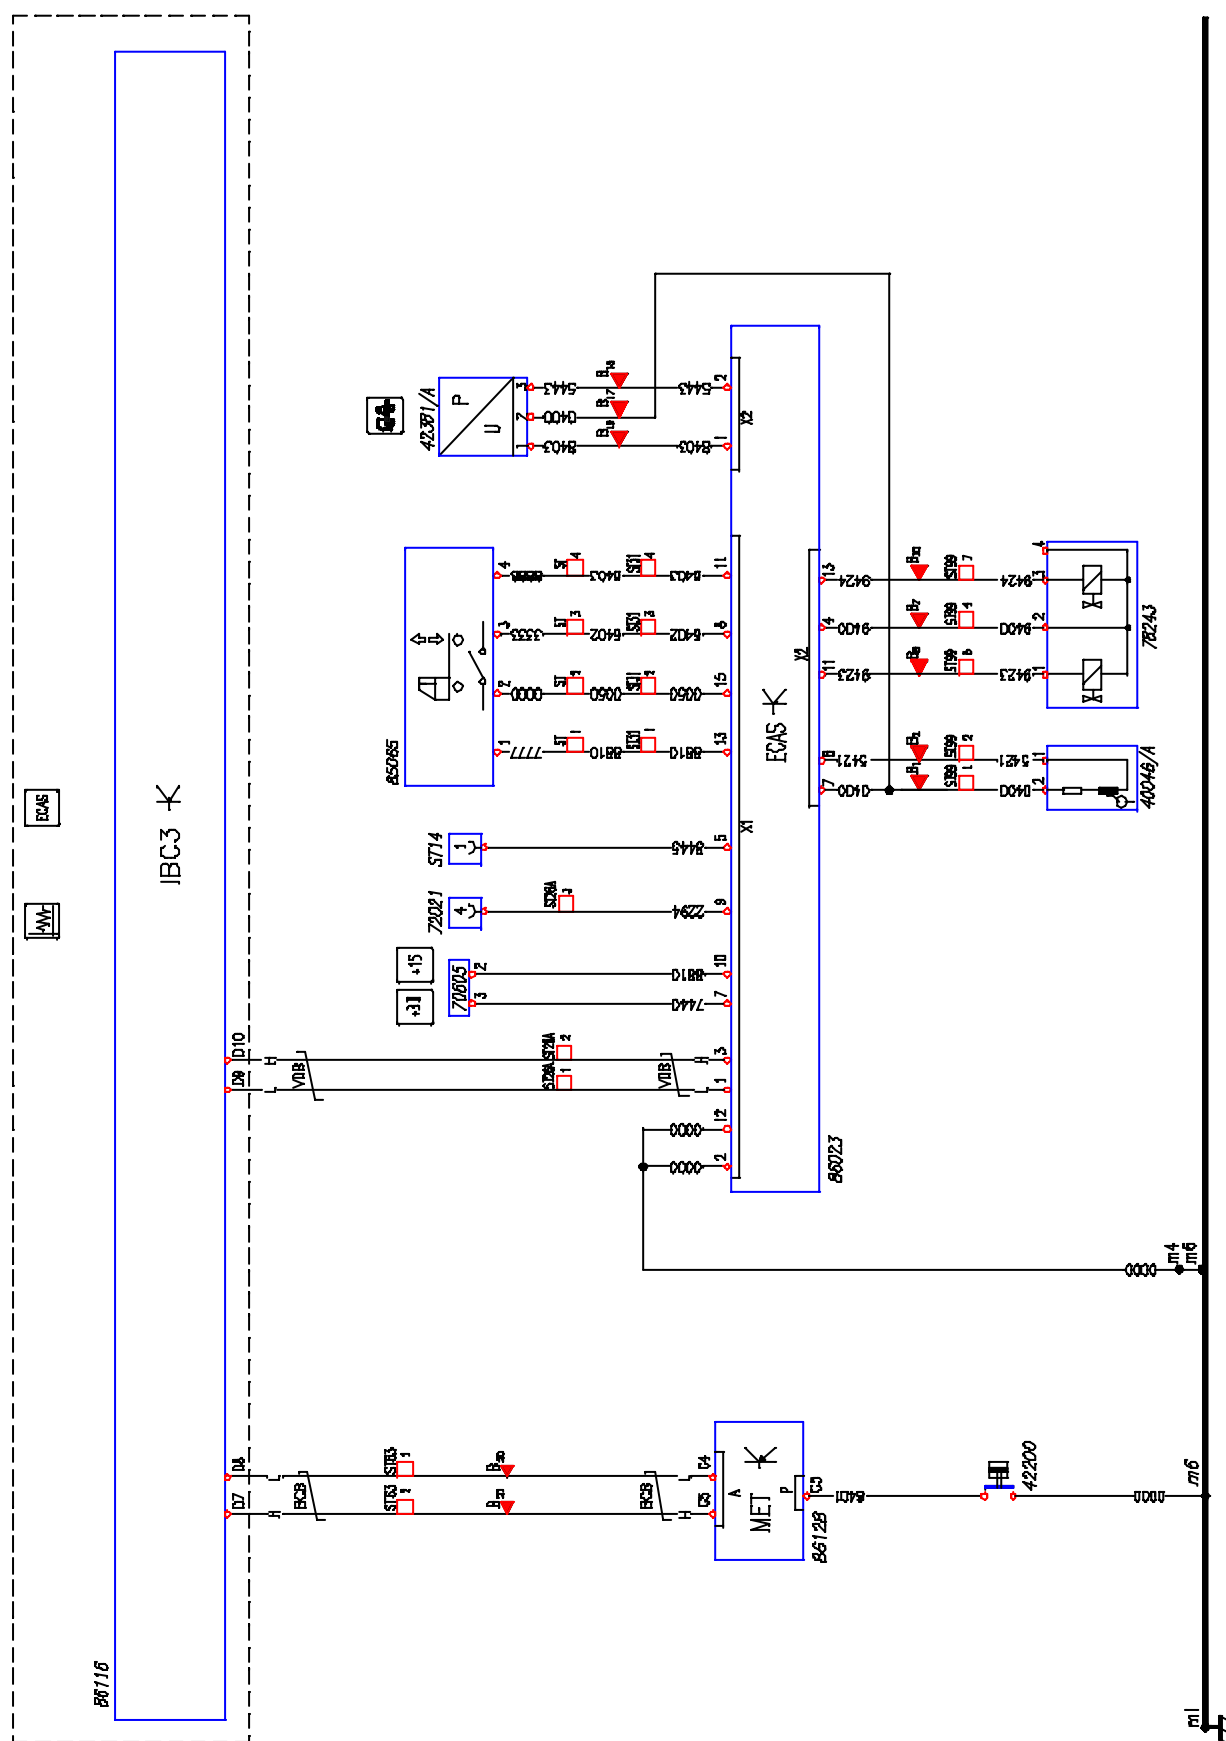

Aquila Trucks Centres

Chart 32: ECAS 4X2P/4X4P/6X4P/8X4X4P (LORRY)



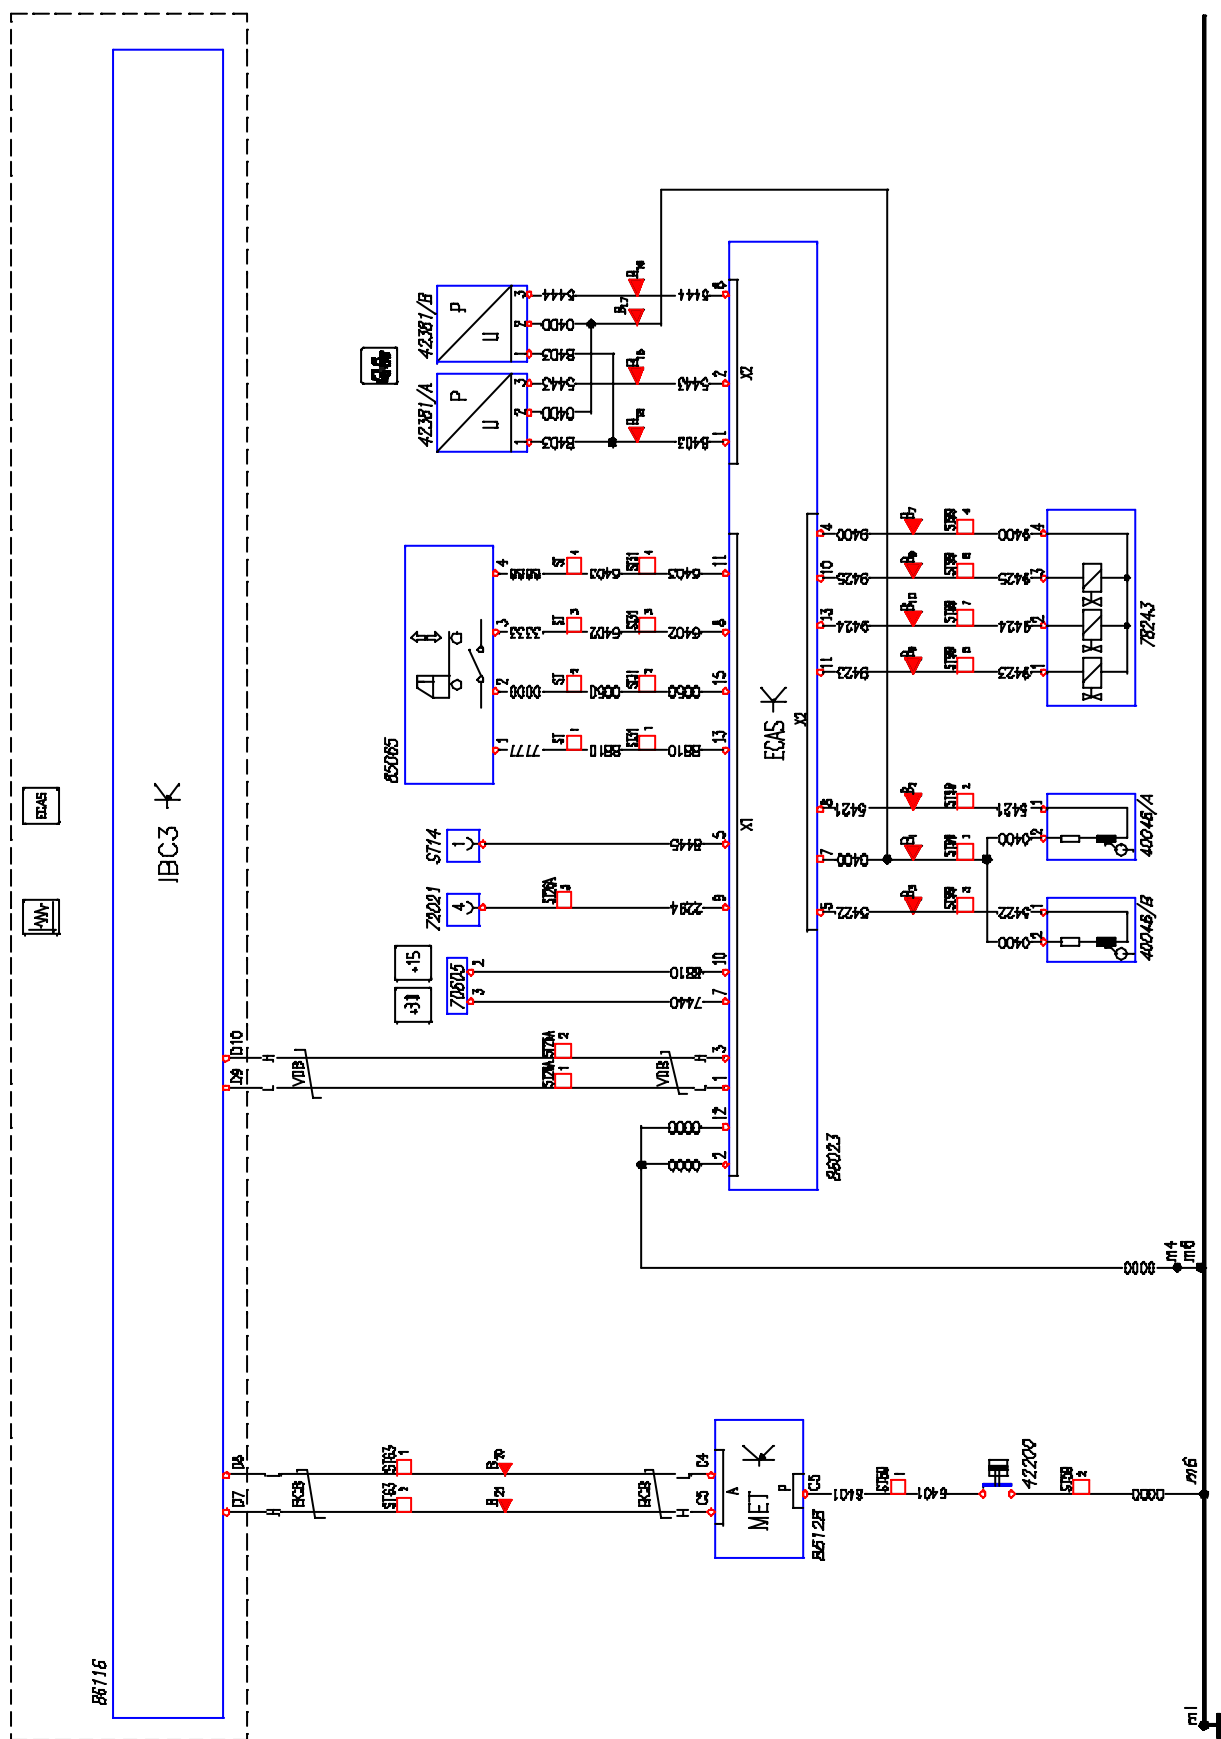


Chart 33: ABS

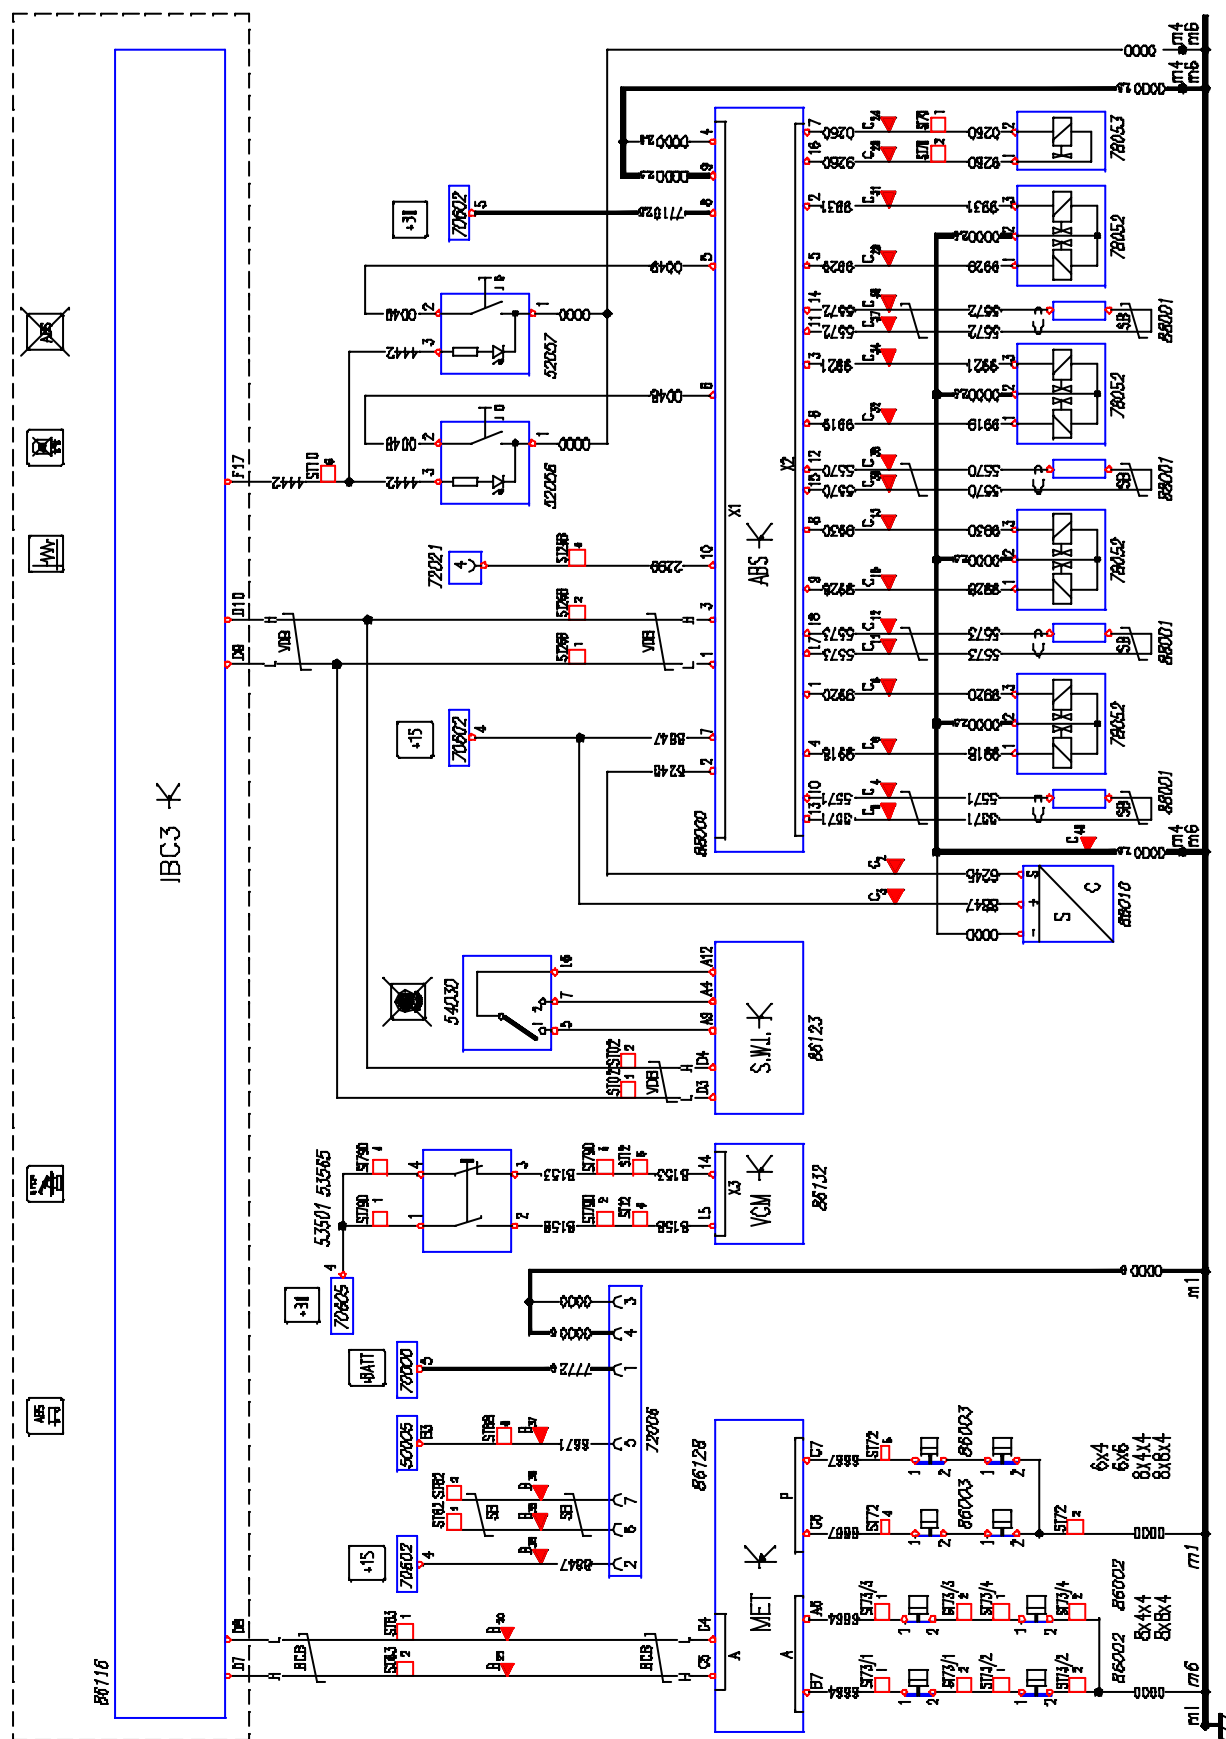


Aquila Trucks Centres

Chart 34: Ventilation

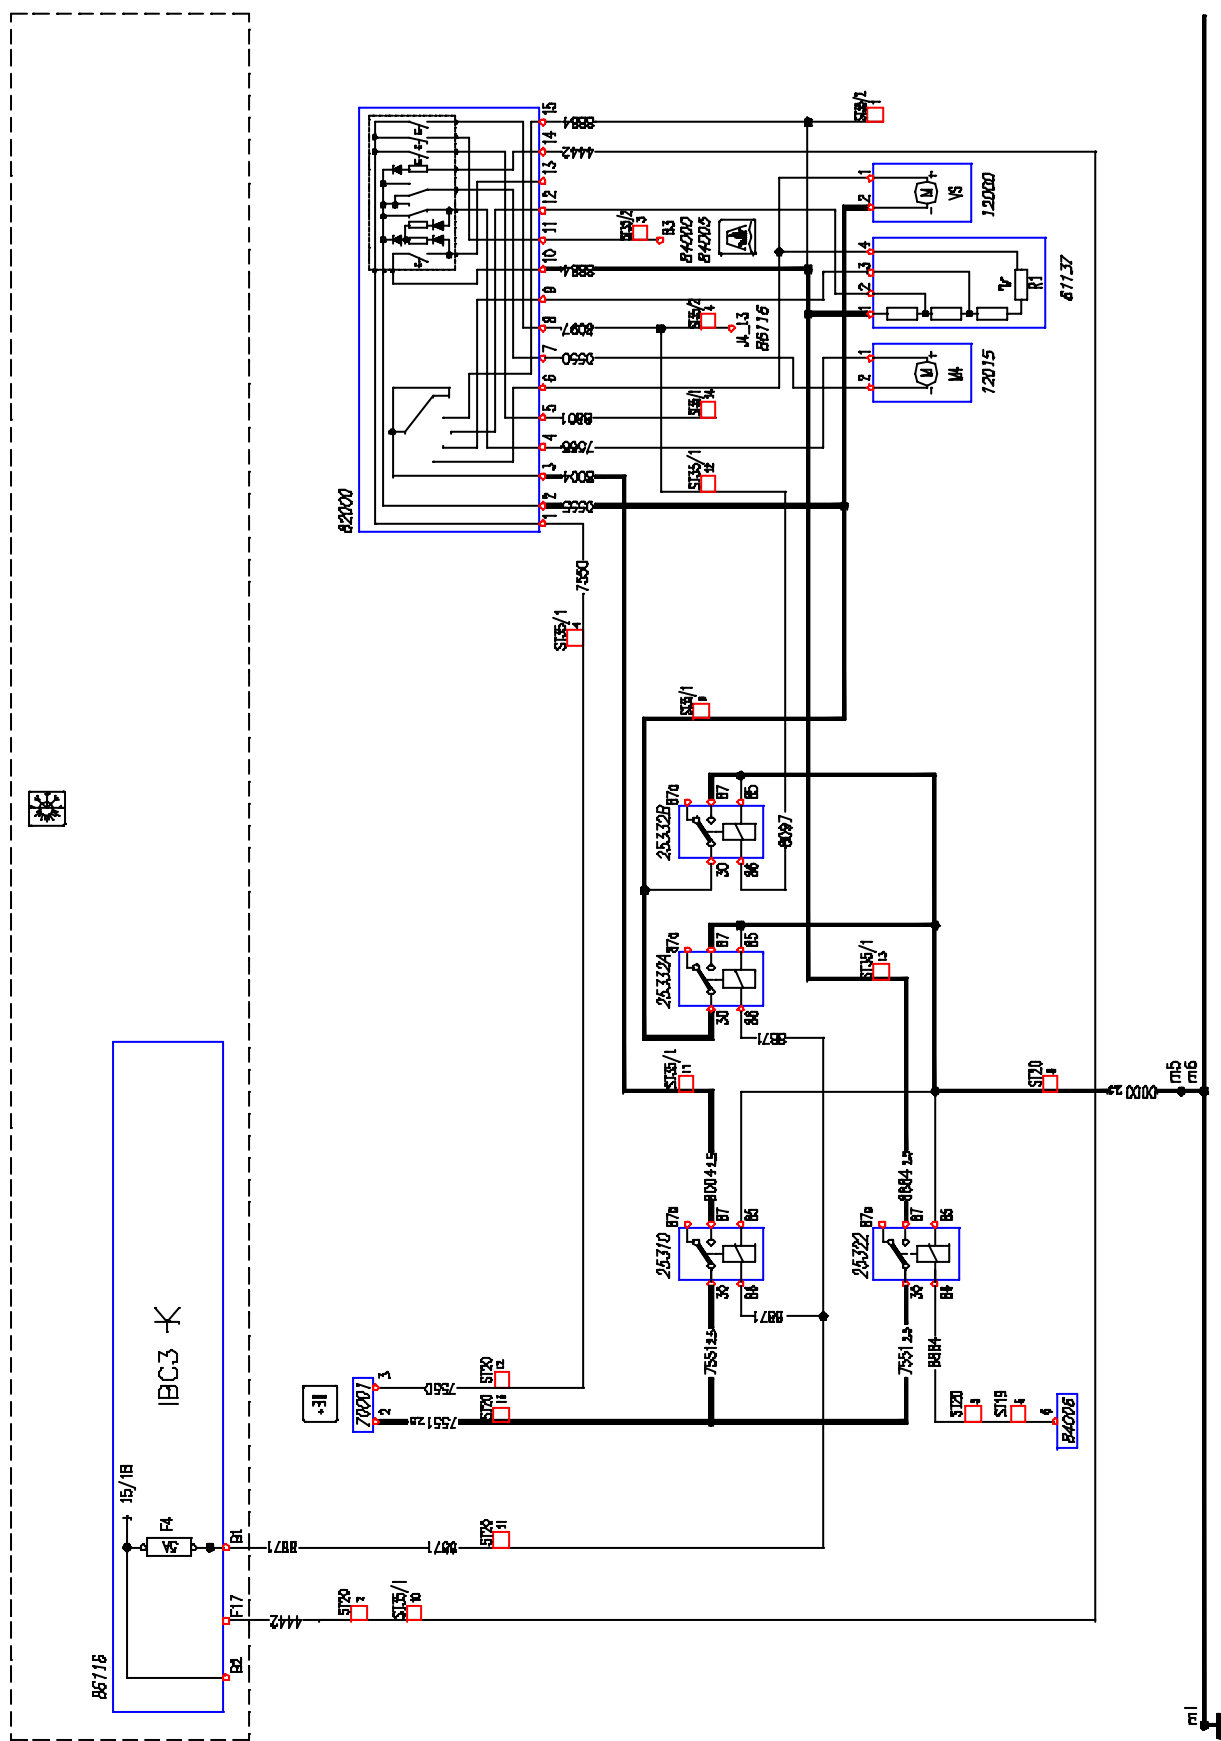


Aquila Trucks Centres

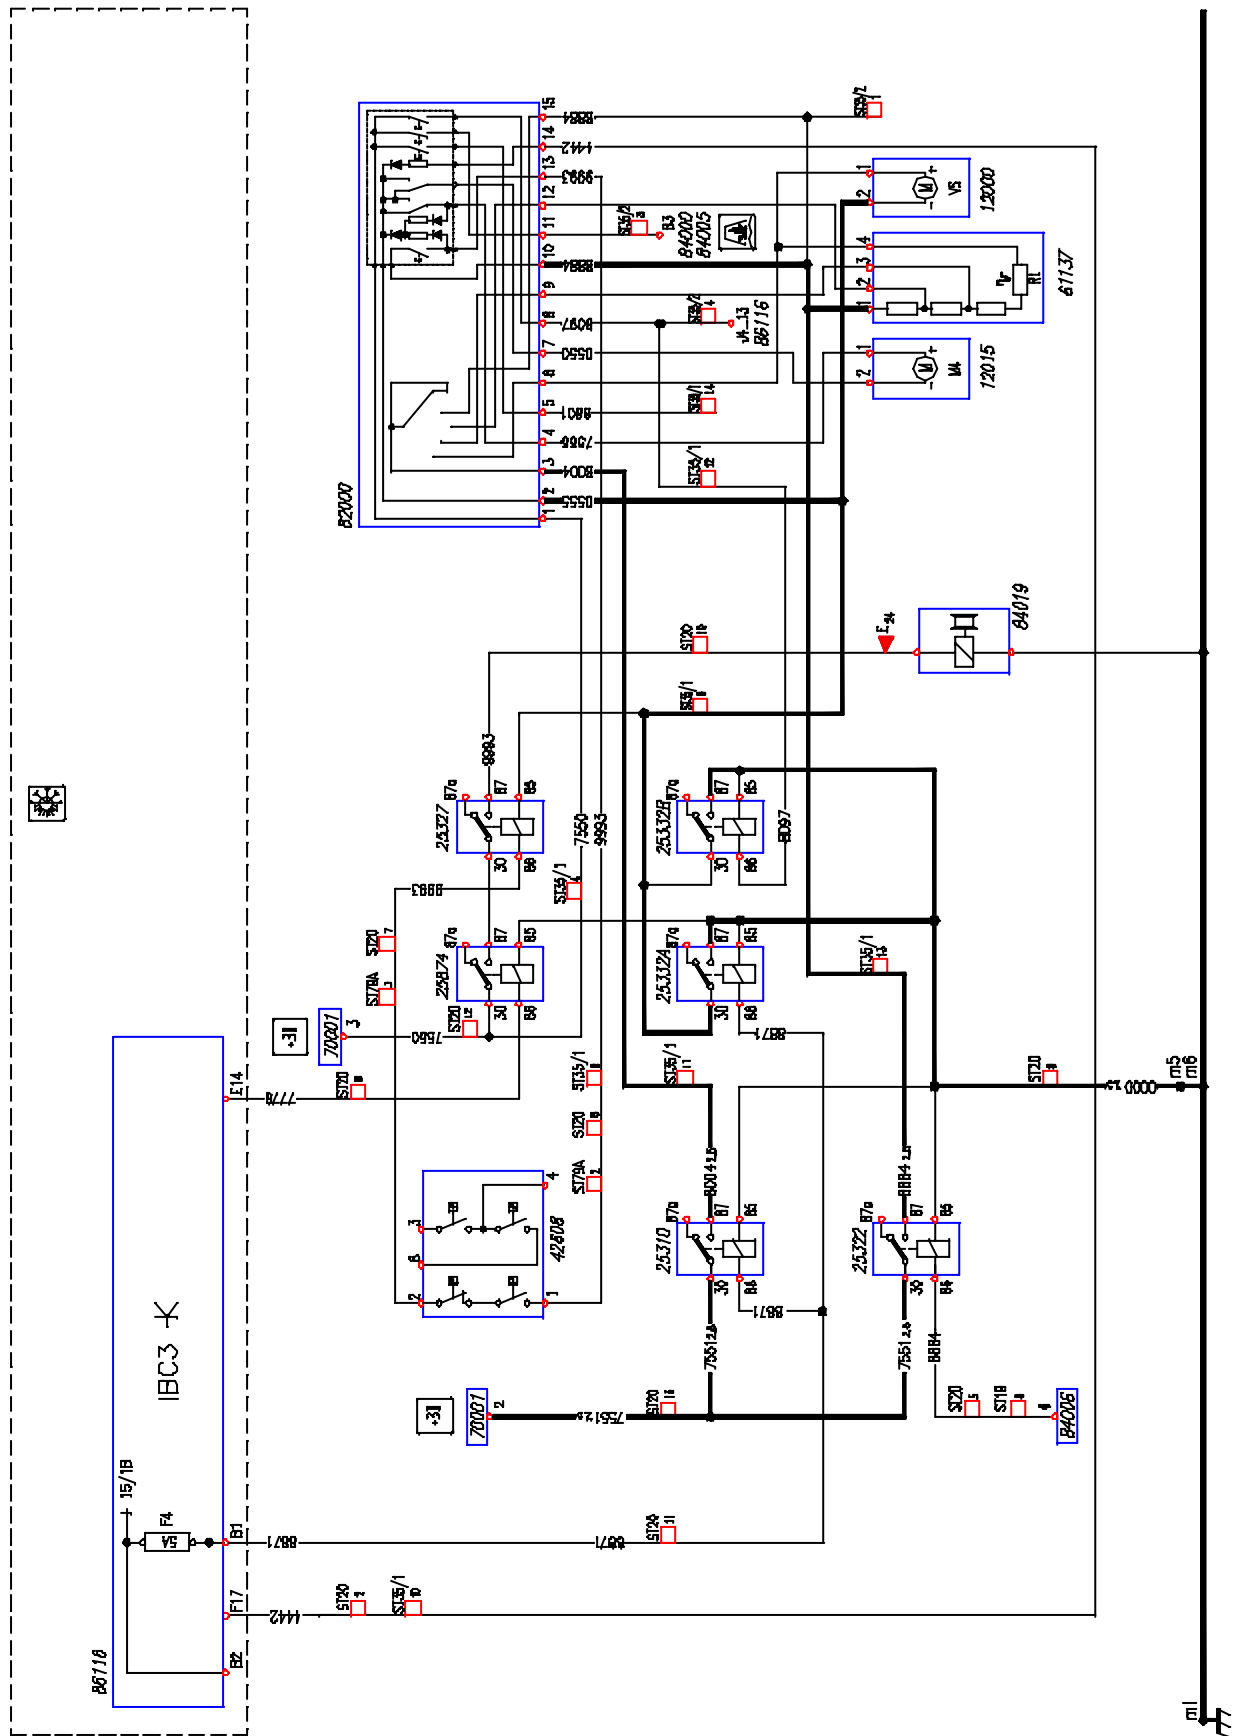Chart 35: Manually controlled climate control system


Aquila Trucks Centres

Chart 36: Manually controlled additional water heater

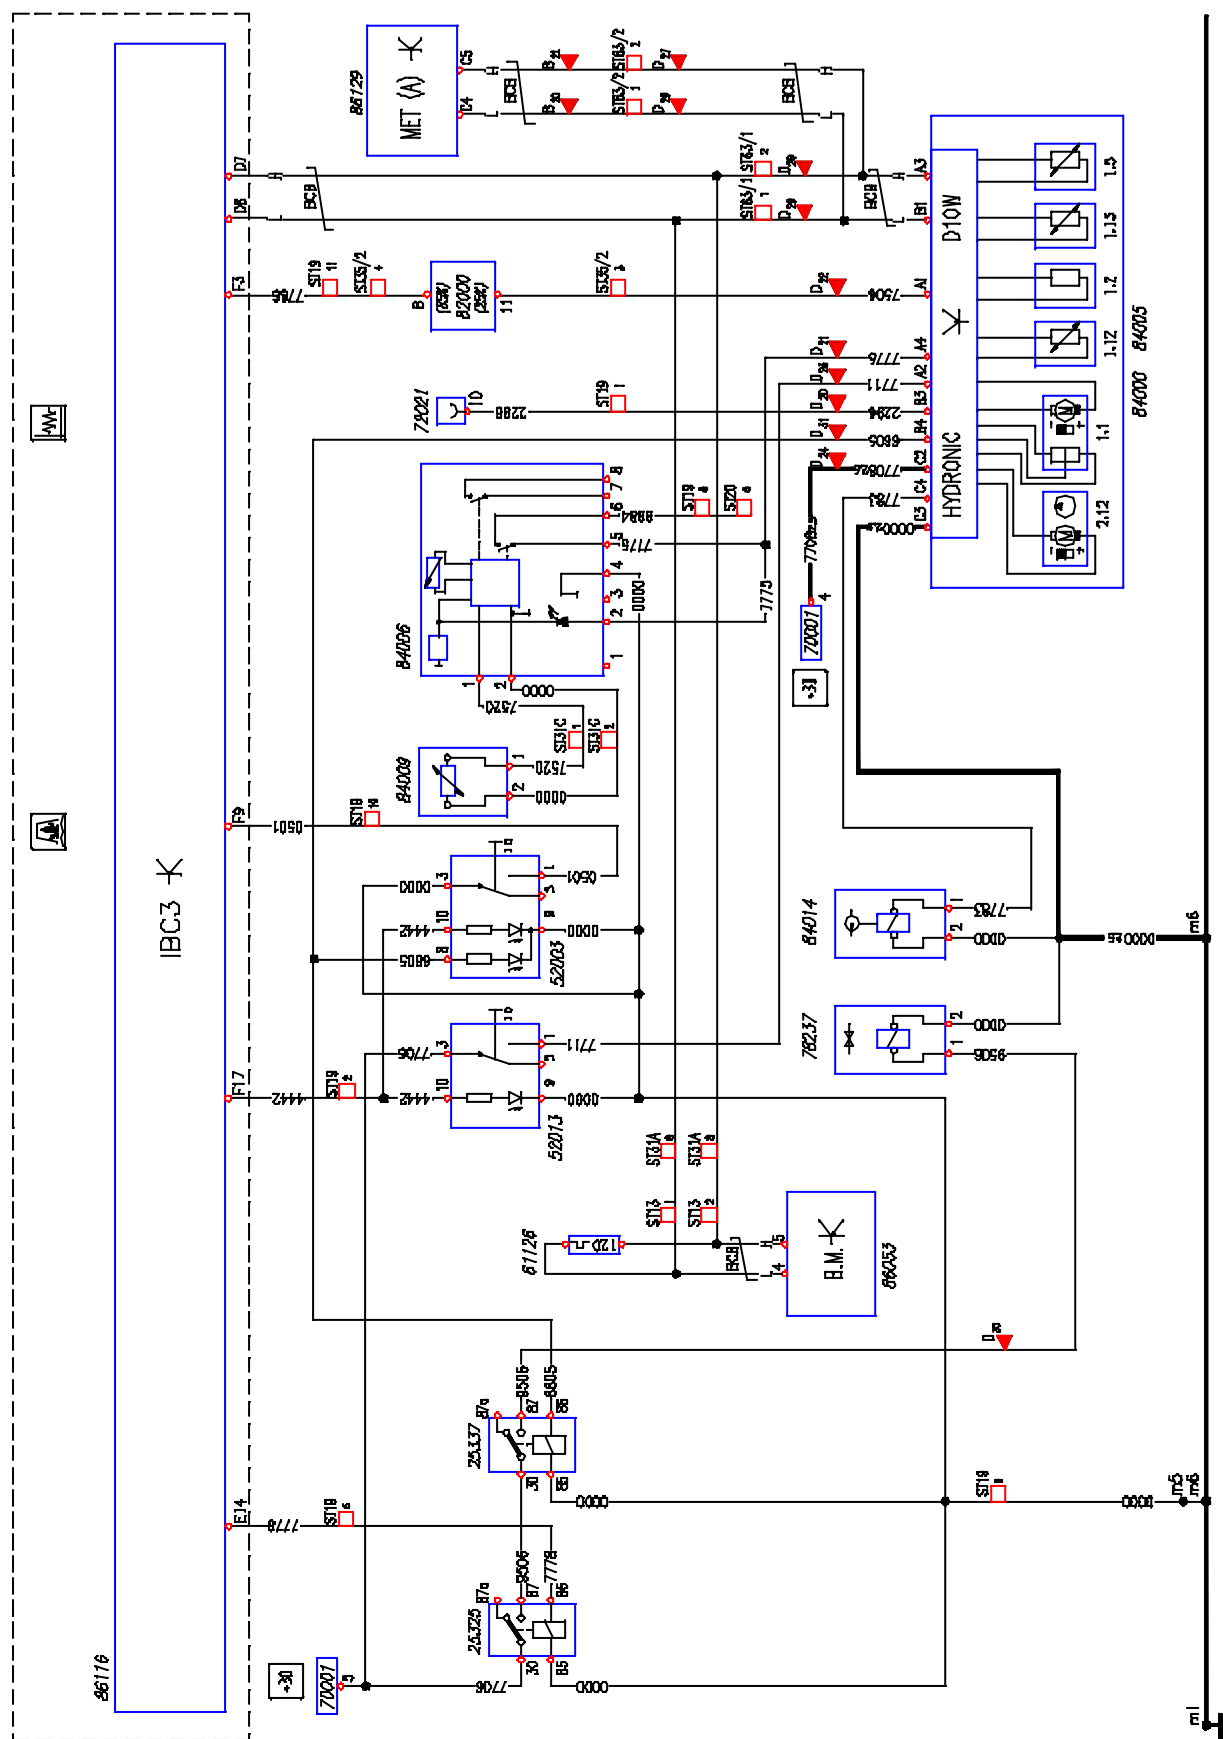


113391

Chart 37: Manually controlled additional air heater

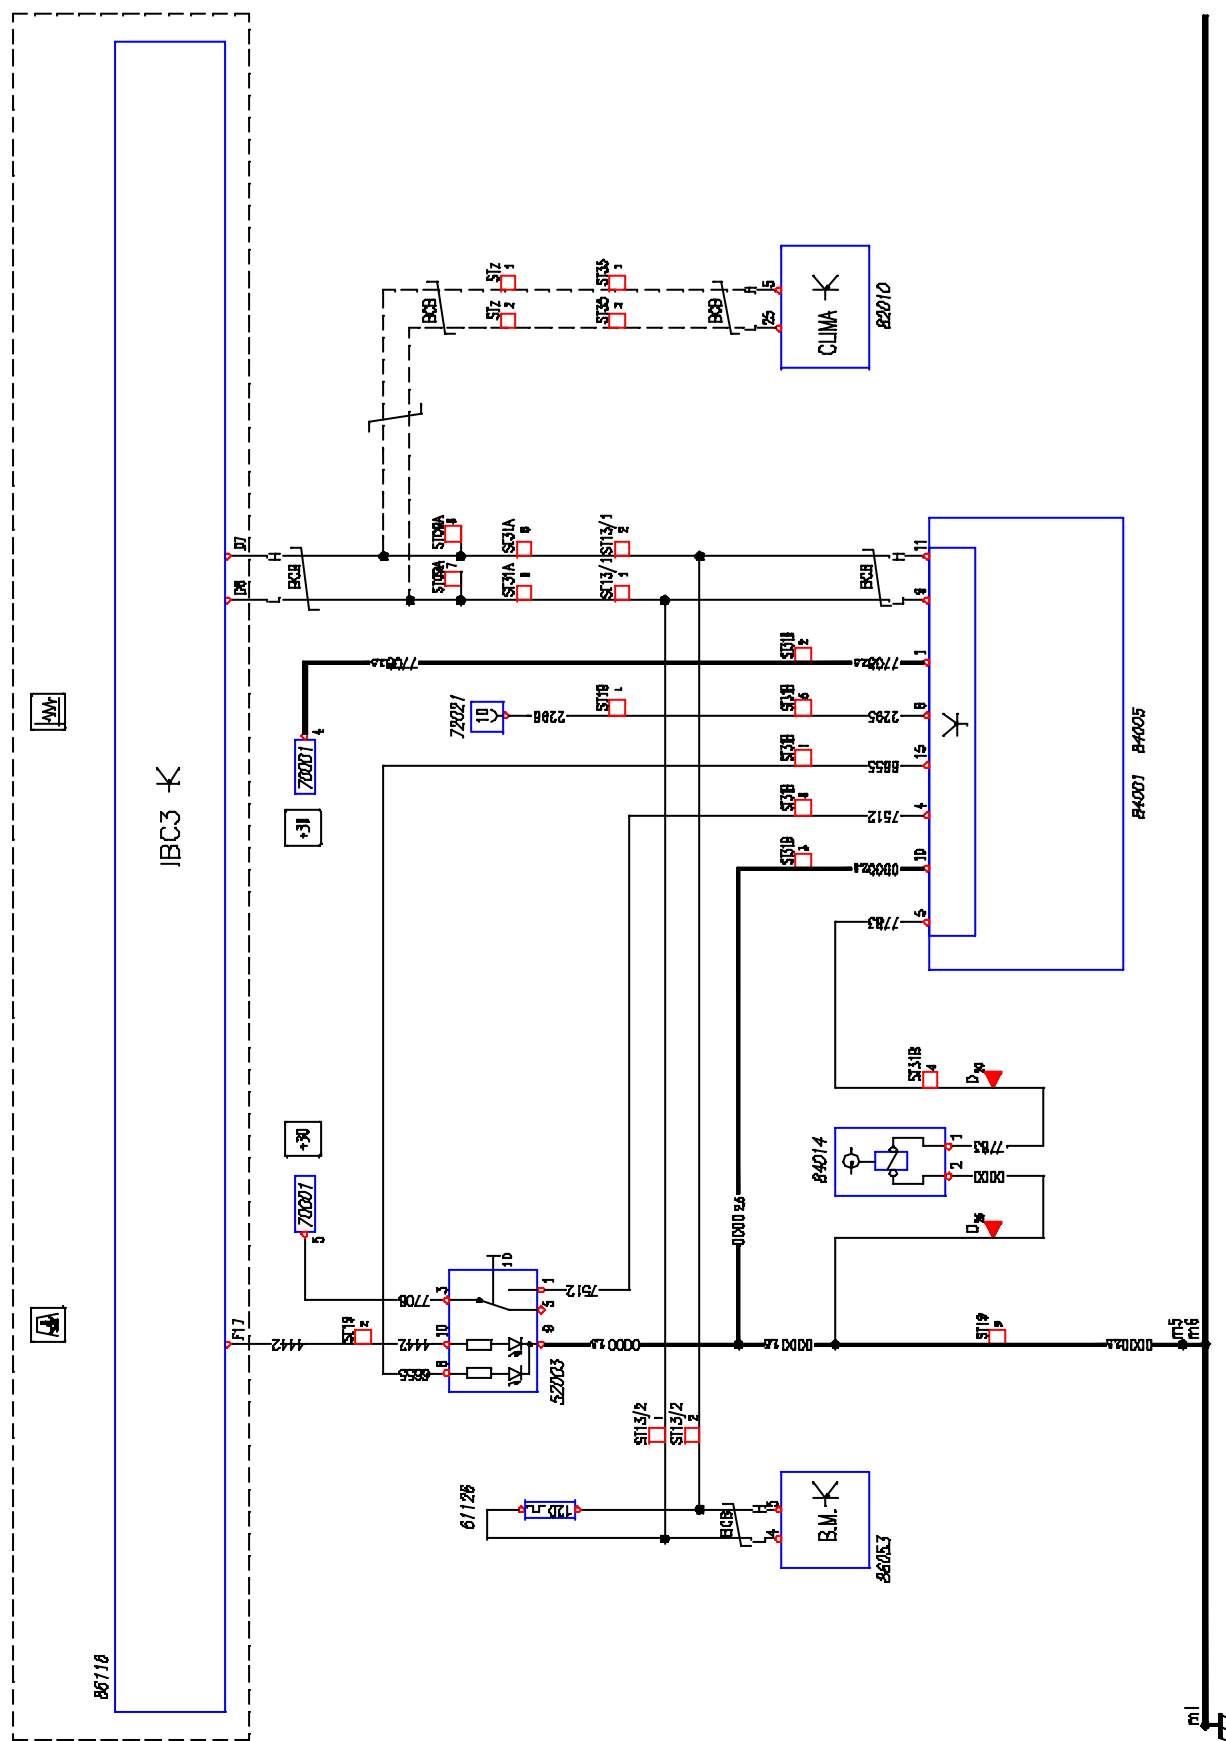


Aquila Trucks Centres

Chart 38: EuroTronic II

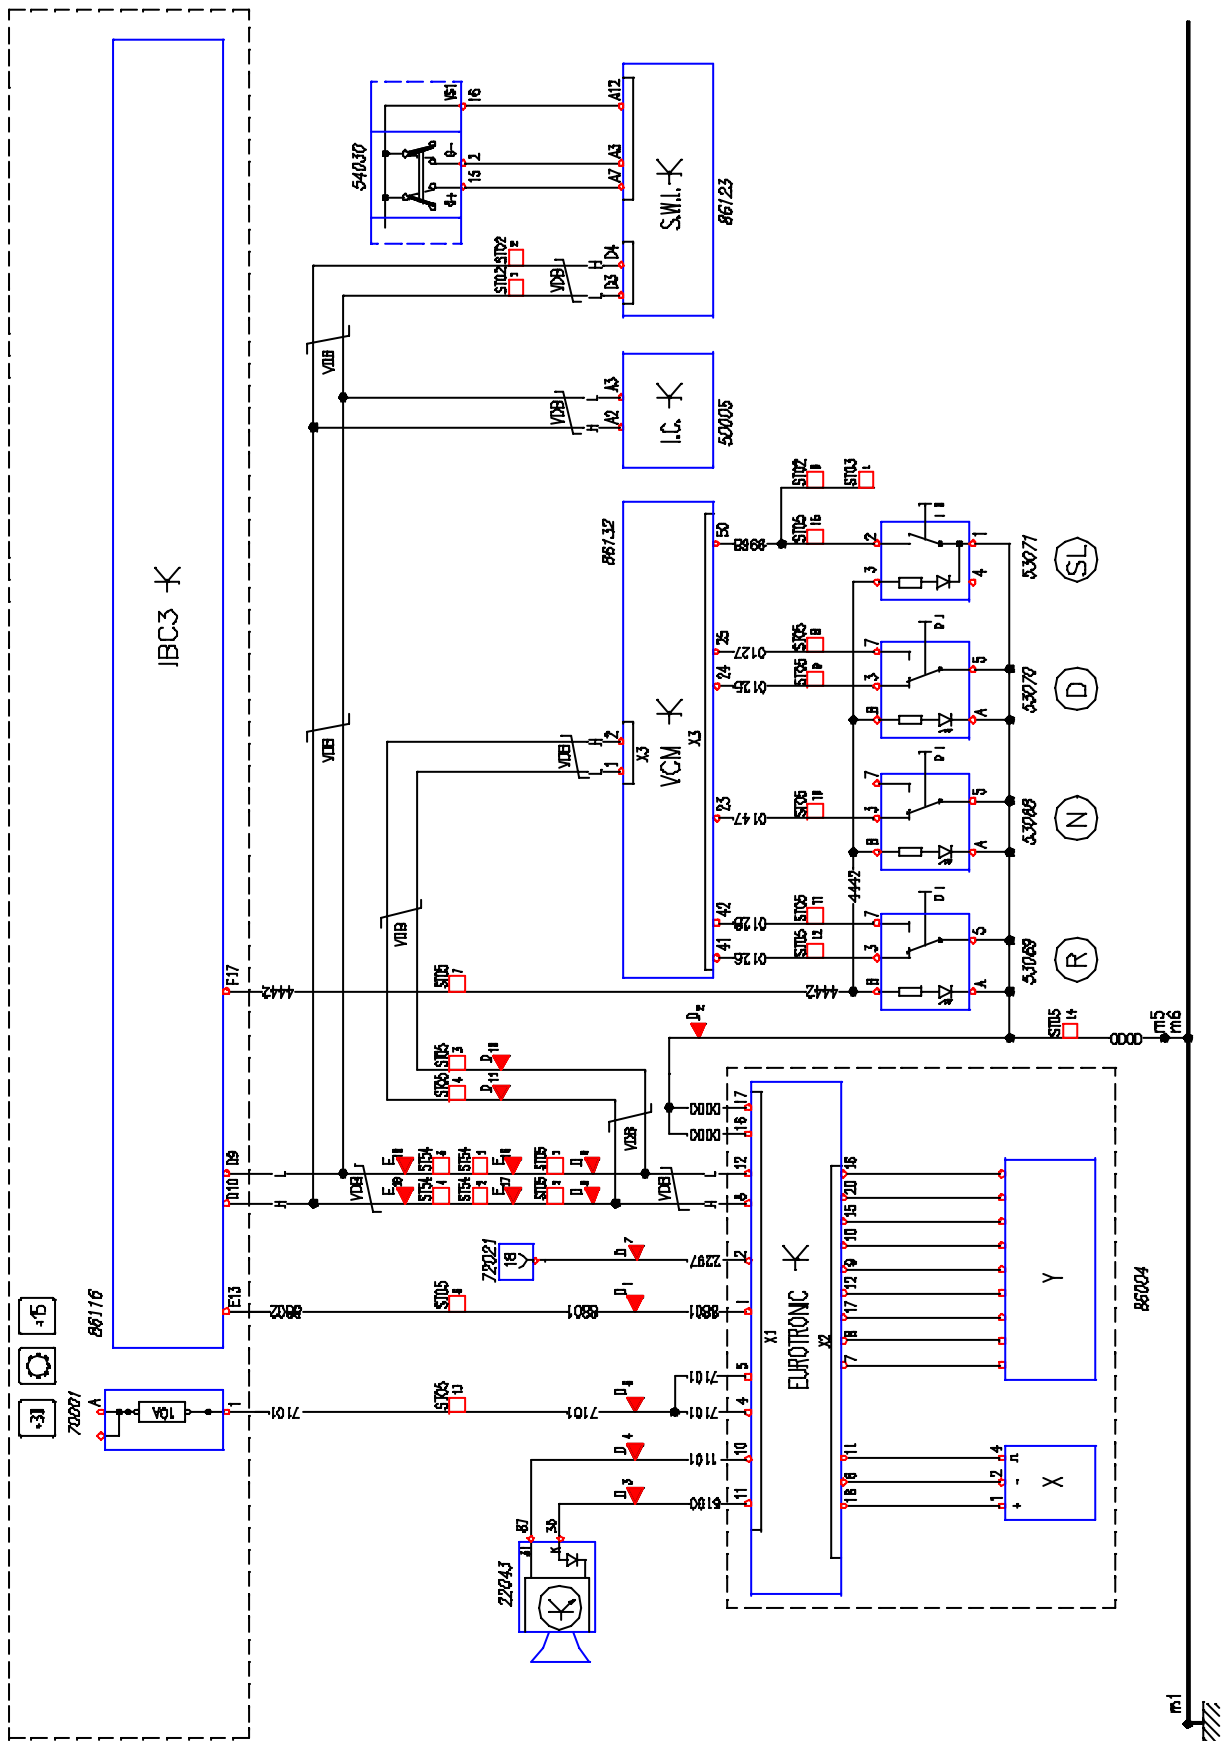


Aquila Trucks Centres

Chart 39: Retarder ZF

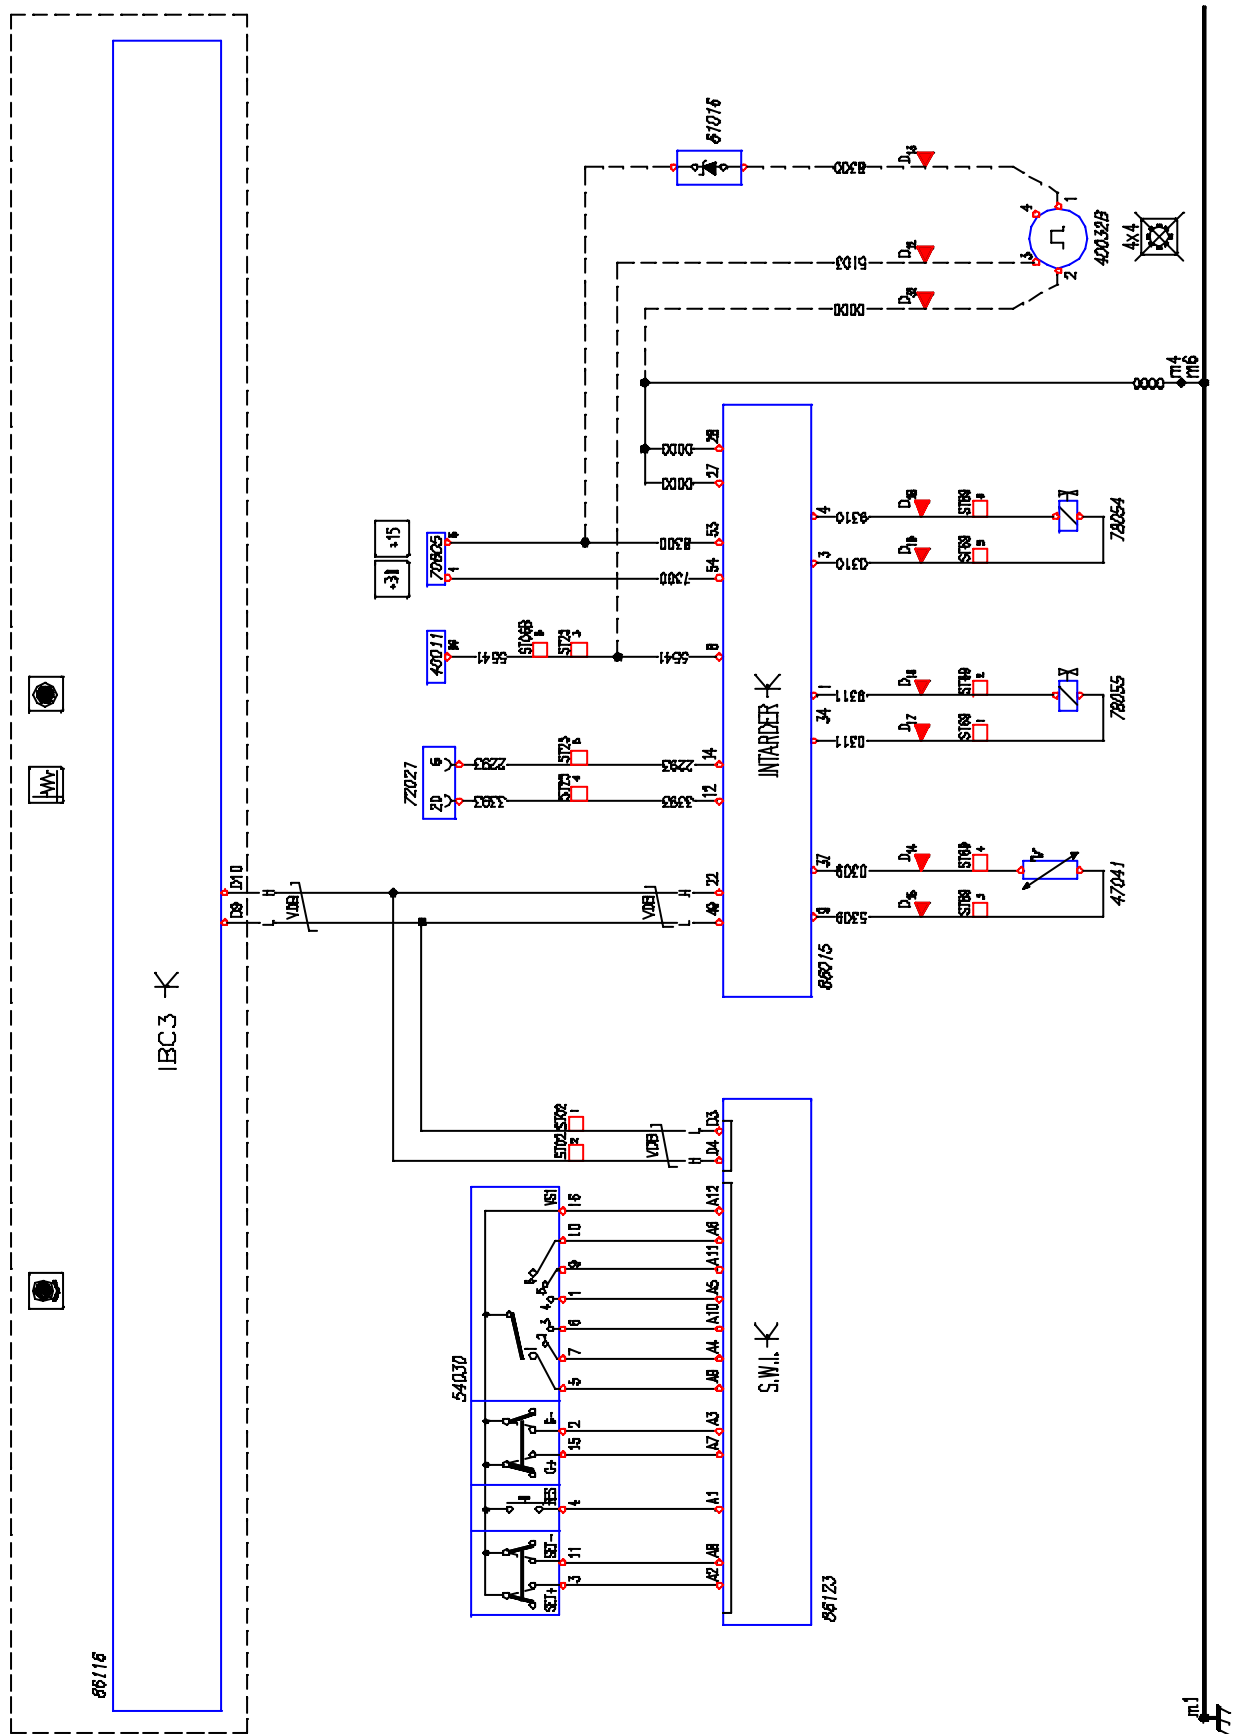

Aquila Trucks Centres


Chart 40: Control unit EM (PTO)

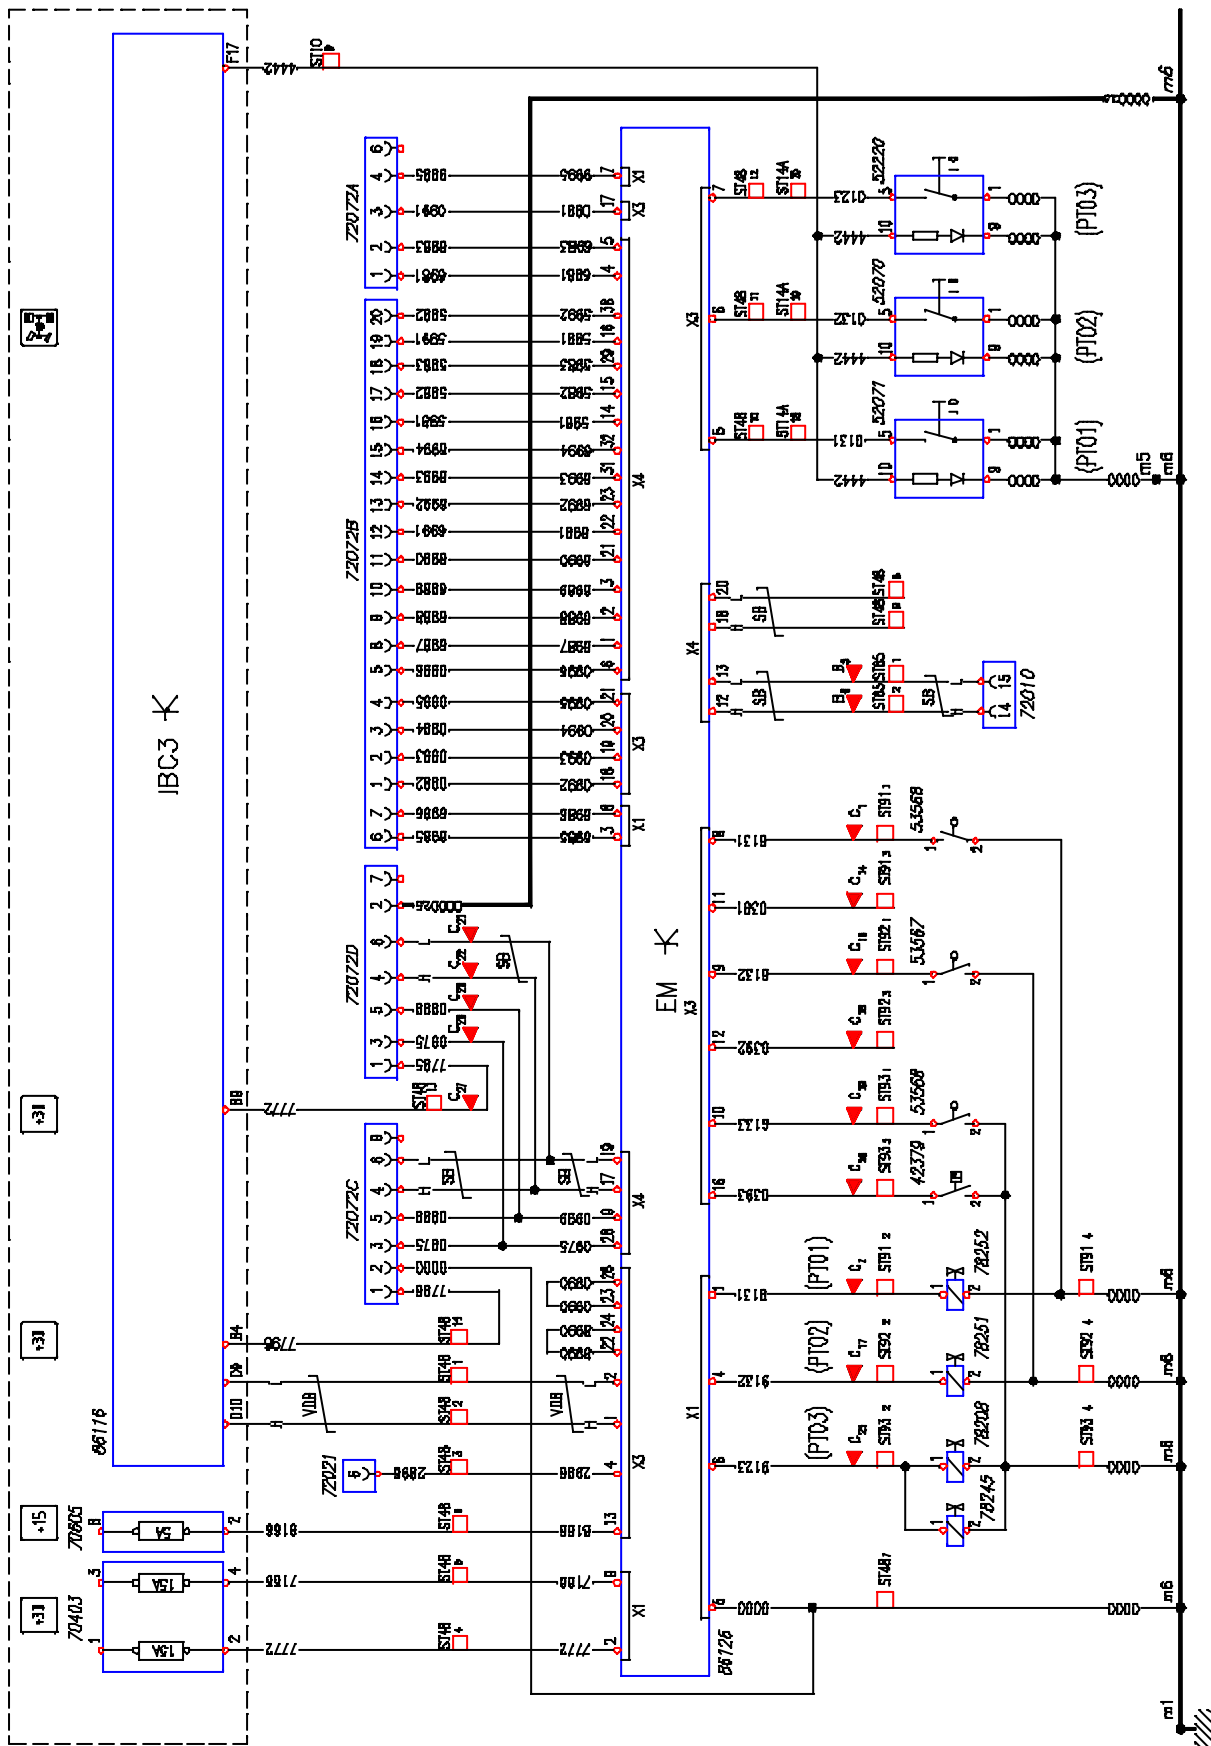

113395


Aquila Trucks Centres

Chart 41: Radio receiver

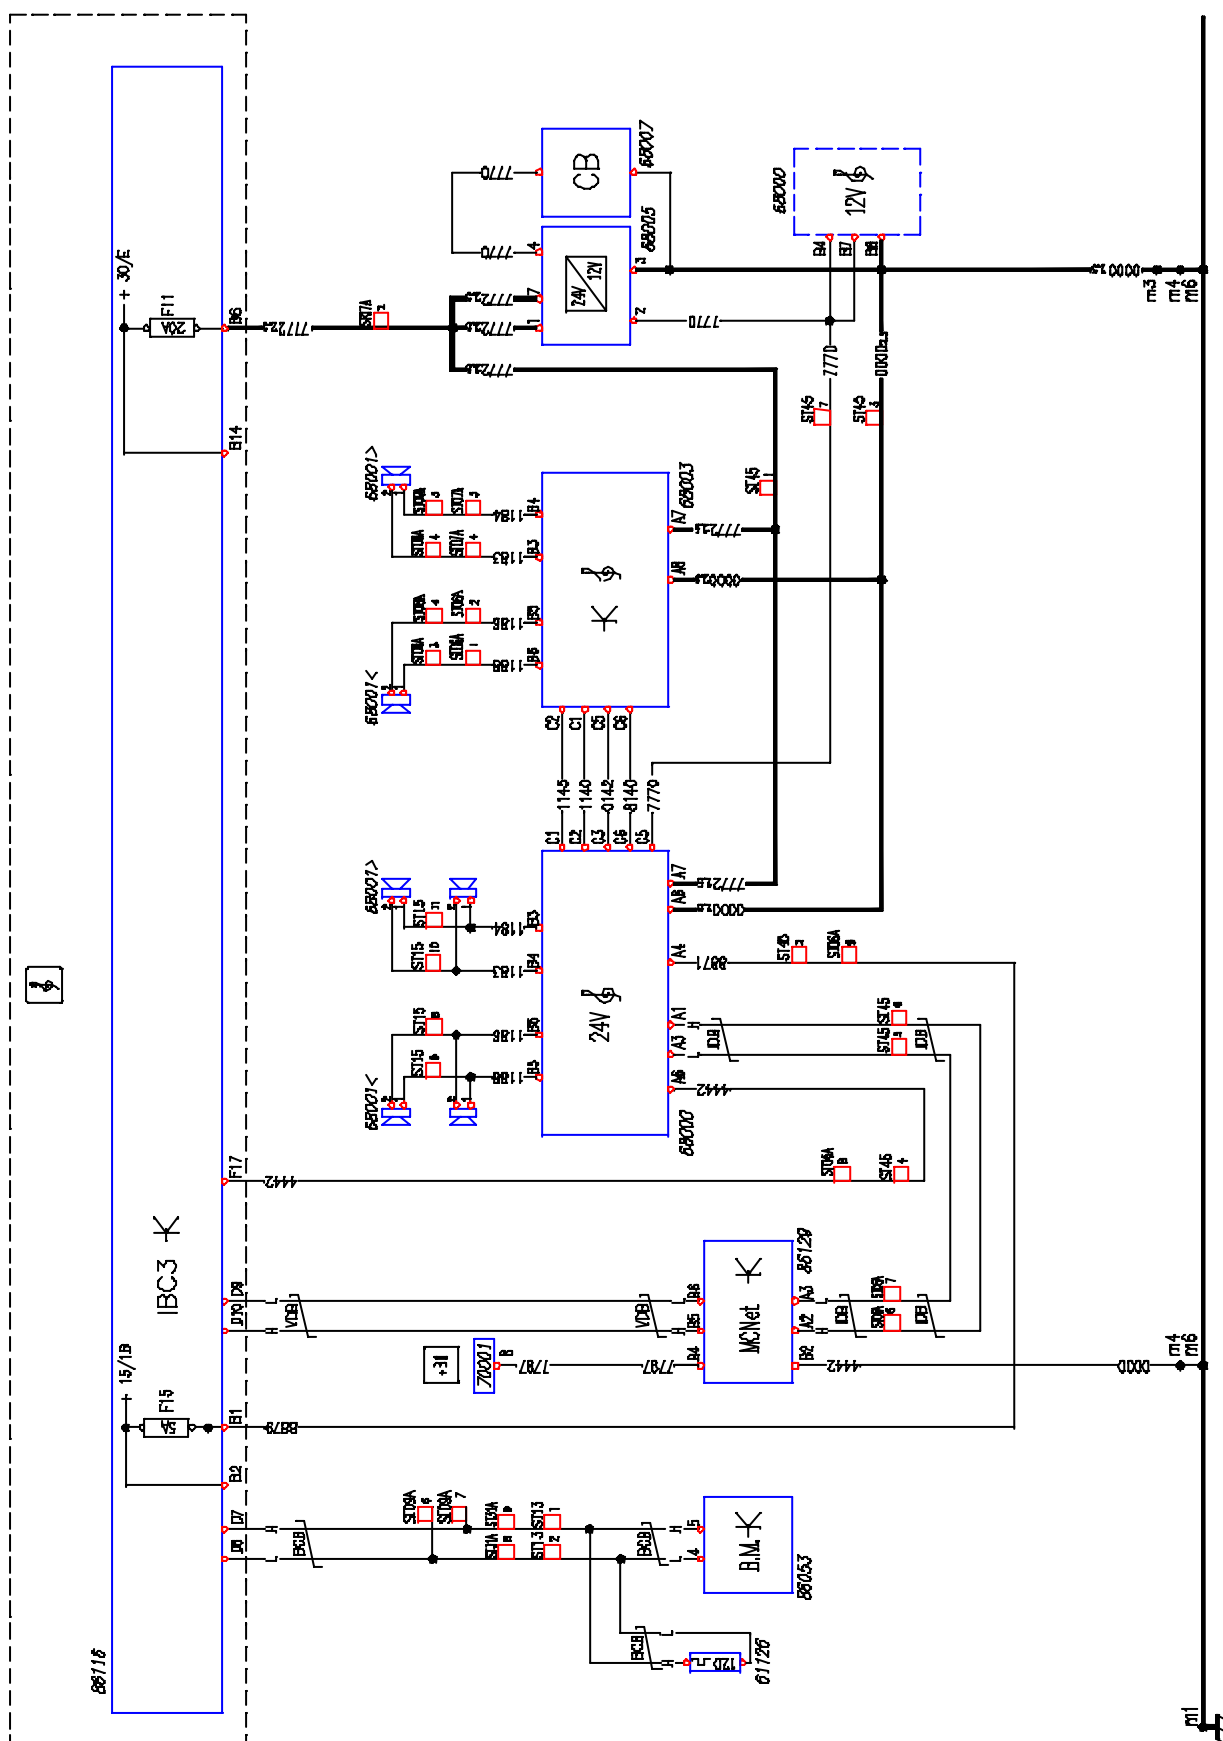

Aquila Trucks Centres


Chart 42: General mechanical power switch (IGC)

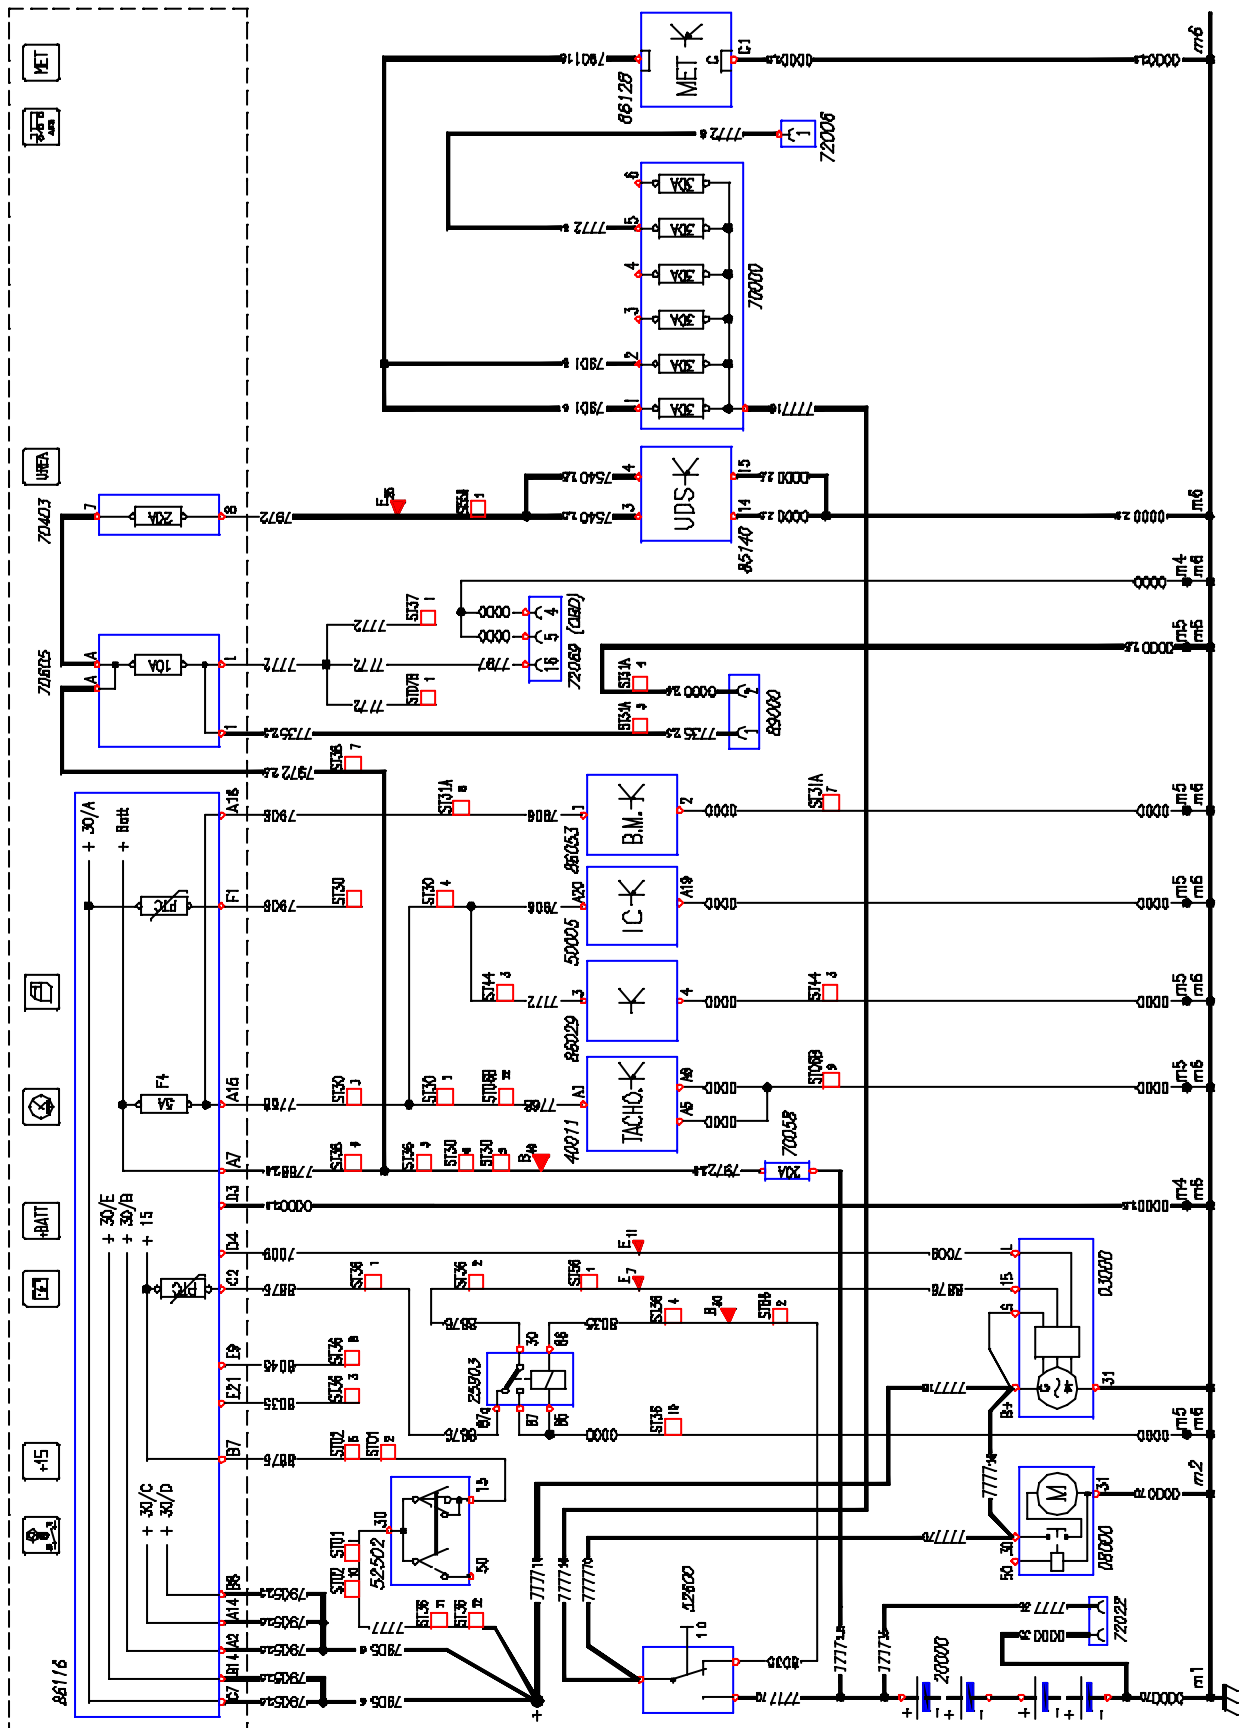

113397

Aquila Trucks Centres

Chart 43: ADR (2001)

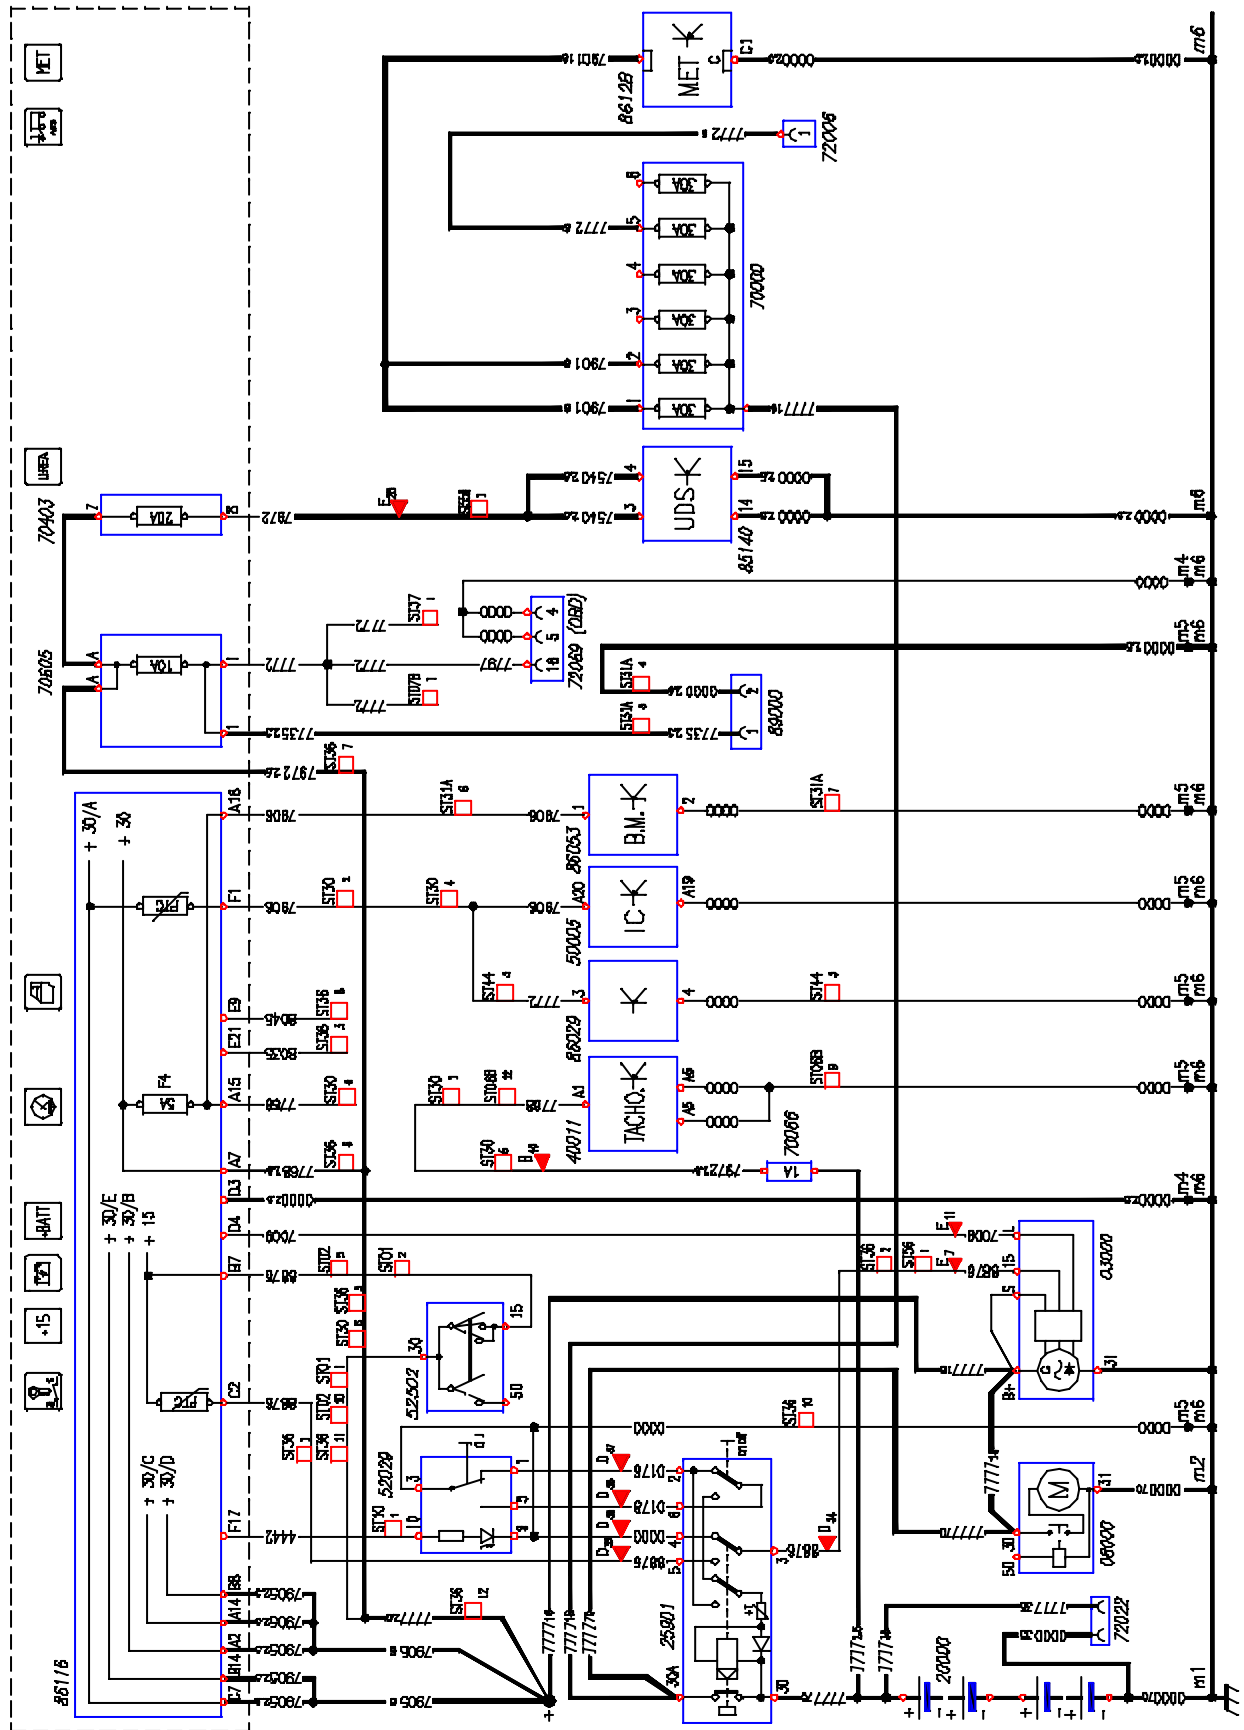

Aquila Trucks Centres

Chart 44: ADR (OPT. 0129)

