

Diagnostic Trouble Codes on Basic Informator (BIF)

Light	Diagnostic trouble code	Description
blue	BIF 000096.03	Fuel gauge sender, shorted or open circuit
blue	BIF 000096.04	Fuel gauge sender, short to ground
blue	BIF 000096.17	Fuel level is low
red	BIF 000100.00	Engine oil pressure is low
blue	BIF 000107.16	Engine air cleaner clogged
red	BIF 000110.00	Coolant temperature is very high
blue	BIF 000110.03	Coolant temperature sender, shorted or open circuit
blue	BIF 000110.04	Coolant temperature sender, short to ground
blue	BIF 000110.16	Coolant temperature is high
blue	BIF 000126.15	Hydraulic oil filter dirty
yellow	BIF 000126.16	Transmission/hydraulic oil filter clogged
red	BIF 000127.00	Transmission oil pressure low
blue	BIF 000167.16	D+ voltage is high (engine running)
blue	BIF 000167.17	D+ voltage too low (engine speed over 1500 rpm)
blue	BIF 000167.18	D+ voltage too low (engine speed up to 1500 rpm)
blue	BIF 000168.16	System voltage too high (engine running)
yellow	BIF 000168.17	System voltage too low (engine speed over 1500 rpm)
blue	BIF 000168.18	System voltage too low (engine speed up to 1500 rpm)
red	BIF 000177.00	Transmission oil temperature very high
blue	BIF 000177.03	Transmission oil temperature sender, shorted or open circuit
blue	BIF 000177.04	Transmission oil temperature sender, short to ground
blue	BIF 000177.16	Transmission oil temperature is high
blue	BIF 000186.16	INFORMATION FOR OPERATOR: Warning, rear PTO speed
blue	BIF 000190.02	No signal from engine speed sender

<https://truckmanualshub.com/>

- blue BIF 000628.02 Controller internal fault
- blue BIF 000639.02 29-BIT CAN BUS, open circuit
- BIF 301141.31 INFORMATION FOR OPERATOR: Switch off worklights while driving on road!
- BIF 301143.31 INFORMATION FOR OPERATOR: Preheat time remaining: xxsec. start engine!

OU12401,0000B29 -19-01JUL02-1/1
