

SHOP MANUAL

KOMATSU

PC210, 210LC-6K PC240, 240LC, PC240NLC-6K

MACHINE MODEL

SERIAL NUMBER

PC210, 210LC-6K

K30001 and up

PC240, 240LC, 240NLC-6K

K30001 and up

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require. Materials and specifications are subject to change without notice.
- PC210, 210LC-6 mount the S6D102L-1 engine;
PC240, 240LC-6 mount the SA6D102L-1 engine.
For details of the engine, see the 102 Service Engine Shop Manual.

The affected pages are indicated by the use of the following marks. It is requested that necessary actions be taken to these pages according to the table below.

Mark	Indication	Action required
○	Page to be newly added	Add
●	Page to be replaced	Replace
()	Page to be deleted	Discard

Pages having no marks are those previously revised or made additions.

LIST OF REVISED PAGES

Mark	Page	Time of revision	Mark	Page	Time of revision	Mark	Page	Time of revision	Mark	Page	Time of revision	Mark	Page	Time of revision
●	00-1	⑤		10-13	①		10-48	①		10-82	①		10-115	①
	00-2			10-14	①		10-49	①		10-83	①		10-116	①
●	00-2-1	⑤		10-15	①		10-50	①		10-84	①		10-117	①
●	00-2-2	⑤		10-16	①		10-51	①		10-85	①		10-118	①
●	00-2-3	⑤		10-17	①		10-52	①		10-86	①		18-119	①
	00-3			10-18	①		10-53	①		10-87	①		10-120	①
	00-4			10-19	①		10-54	①		10-88	①		10-121	①
	00-5			10-20	①		10-55	①		10-89	①		10-122	①
	00-6			10-22	①		10-56	①		10-90	①		10-123	①
	00-7			10-23	①		10-57	①		10-91	①		10-124	①
	00-8			10-24	①		10-58	①		10-92	①		10-125	①
	00-9			10-25	①		10-59	①		10-93	①		10-126	①
	00-10			10-26	①		10-60	①		10-94	①		10-127	①
	00-11			10-27	①		10-61	①		10-95	①		10-128	①
	00-12			10-28	①		10-62	①		10-96	①		10-129	①
	00-13			10-29	①		10-63	①		10-97	①		10-130	①
	00-14			10-30	①		10-64	①		10-98	①		10-131	②
	00-15			10-31	①		10-65	①		10-99	①		10-132	②
	00-16			10-32	①		10-66	①		10-100	①		10-133	②
	00-17			10-33	①		10-67	①		10-101	①		10-134	②
				10-34	①		10-68	①		10-102	①		10-135	②
				10-35	①		10-69	①		10-103	①		10-136	②
	10-1	③		10-36	①		10-70	①		10-104	①		10-136-1	②
	10-2	①		10-38	①		10-71	①		10-105	①		10-136-2	②
	10-3	①		10-39	①		10-72	①		10-106	①		10-136-3	③
	10-4	①		10-40	①		10-73	①		10-107	①		10-136-4	③
	10-5	①		10-41	①		10-74	①		10-108	①		10-136-5	③
	10-6	①		10-42	①		10-76	①		10-109	①		10-136-6	③
	10-7	①		10-43	①		10-77	①		10-110	①		10-138	①
	10-8	①		10-44	①		10-78	①		10-111	①		10-139	①
	10-9	①		10-45	①		10-79	①		10-112	①		10-140	①
	10-10	①		10-46	①		10-80	①		10-113	①		10-141	①
	10-12	①		10-47	①		10-81	①		10-114	①		10-142	①

Mark	Page	Time of revision	Mark	Page	Time of revision	Mark	Page	Time of revision	Mark	Page	Time of revision	Mark	Page	Time of revision
	10-143	②		20-13			20-69			20-125			20-181	
	10-144	②		20-14			20-70			20-126			20-182	
	(10-146)	①		20-15			20-71			20-127			20-183	
	(10-147)	①		20-16			20-72			20-128			20-184	
	(10-148)	①		20-17			20-73			20-129			20-185	
	10-149	①		20-18			20-74			20-130			20-186	
	10-150	①		20-20			20-75			20-131			20-187	
	10-151	①		20-21			20-76			20-132			20-188	
	10-152	①		20-22			20-78			20-133			20-189	
	10-153	①		20-23			20-79			20-134			20-190	
	10-154	①		20-24			20-80			20-135			20-191	
	10-155	①		20-25			20-81			20-136			20-192	
	10-156	①		20-26			20-82			20-137			20-193	
	10-157	①		20-27			20-83			20-138			20-194	
	10-158	①		20-28			20-84			20-139			20-195	
	10-159	①		20-29			20-85			20-140			20-196	
	10-160	①		20-30			20-86			20-141			20-197	
	10-161	①		20-31			20-87			20-142			20-198	
	10-162	①		20-32			20-88			20-143			20-199	
	10-163	①		20-33			20-89			20-144				
	10-164	①		20-34			20-90			20-145			20-201	
	10-165	①		20-35			20-91			20-146			20-202	
	10-166	①		20-36			20-92			20-147			20-203	
	10-167	①		20-37			20-93			20-148			20-204	
	10-168	①		20-38			20-94			20-149			20-205	
	10-169	①		20-39			20-95			20-150			20-206	
	10-170	①		20-40			20-96			20-151			20-207	
	10-171	①		20-41			20-97			20-153			20-208	
	10-172	①		20-42			20-98			20-154			20-209	
	10-173	①		20-43			20-99			20-155			20-210	
	10-174	①		20-44			20-100			20-156			20-211	
	10-175	①		20-45			20-101			20-157			20-212	
	10-176	①		20-46			20-102			20-158			20-213	
	10-177	①		20-47			20-103			20-159			20-214	
	10-178	①		20-48			20-104			20-160			20-215	
	10-179	①		20-49			20-105			20-161			20-216	
	10-180	①		20-50			20-106			20-162			20-217	
	10-184	①		20-51			20-107			20-163			20-218	
	10-185	①		20-53			20-108			20-164			20-219	
	10-186	①		20-54			20-109			20-165			20-220	
				20-55			20-110			20-166			20-221	
				20-56			20-111			20-167			20-222	
	20-1			20-57			20-112			20-168			20-223	
	20-2			20-58			20-113			20-169			20-224	
	20-3			20-59			20-114			20-170			20-225	
	20-4			20-60			20-115			20-171			20-226	
	20-5			20-61			20-116			20-172		•	20-227	⑤
	20-6			20-62			20-118			20-173			20-228	
	20-7			20-63			20-119			20-174			20-229	
	20-8	④		20-64			20-120			20-175			20-231	
	20-9			20-65			20-121			20-176			20-232	
	20-10			20-66			20-122			20-177			20-233	
	20-11			20-67			20-123			20-178			20-235	
	20-12			20-68			20-124			20-180			20-236	


Mark	Page	Time of revision	Mark	Page	Time of revision	Mark	Page	Time of revision	Mark	Page	Time of revision	Mark	Page	Time of revision
	20-237			30-27			30-82			40-17	①			
	20-238			30-28			30-83			40-18	①			
	20-239			30-29			30-84			40-19	①			
	20-240			30-30			30-85			40-20	①			
	20-241			30-31			30-86			40-21	①			
	20-242			30-32			30-87			40-22				
	20-243			30-33			30-88			40-23				
	20-244			30-34			30-89			40-24				
	20-245			30-35			30-90			40-25				
	20-246			30-36			30-91			40-26				
	20-247			30-37			30-92			40-27				
	20-248			30-38			30-93			40-28				
	20-249			30-39			30-94			40-29				
	20-250			30-40			30-95			40-30				
	20-251			30-41			30-96			40-31				
	20-252			30-42			30-97			40-32				
	20-253			30-43			30-98			40-33				
	20-254			30-44			30-99			40-34				
	20-255			30-45			30-100			40-35	④			
	20-256			30-46			30-101			40-36				
	20-257			30-47			30-102			40-37	④			
	20-258			30-48			30-103			40-38				
	20-259			30-49			30-104			40-39	④			
	20-260			30-50			30-105			40-40				
	20-261			30-51			30-106			40-41				
	20-262			30-52			30-107							
	20-263			30-53			30-108							
				30-54			30-109							
				30-55			30-110							
	30-1			30-56			30-111							
	30-2			30-57			30-112							
	30-3			30-58			30-113							
	30-4			30-59			30-114							
	30-5			30-60			30-115							
	30-6			30-61			30-116							
	30-7			30-62			30-117							
	30-8			30-63										
	30-9			30-64										
	30-10			30-65			40-1							
	30-11			30-66			40-2							
	30-12			30-67			40-3							
	30-13			30-68			40-4							
	30-14			30-69			40-5							
	30-16			30-70			40-6							
	30-17			30-72			40-7							
	30-18			30-73			40-8							
	30-19			30-74			40-9							
	30-20			30-75			40-10							
	30-21			30-76			40-11							
	30-22			30-77			40-12							
	30-23			30-78			40-13							
	30-24			30-79			40-14							
	30-25			30-80			40-15							
	30-26			30-81			40-16							

10 STRUCTURE AND FUNCTION

Engine related parts	10- 2
Radiator • oil cooler • aftercooler	10- 3
Powertrain	10- 4
Final drive	10- 5
Swing circle	10- 6
Swing machindery	10- 8
Track frame • recoil spring	10- 9
Hydraulic piping drawing	10- 11
Hydraulic circuit diagram	10- 12
Hydraulic tank	10- 14
Hydraulic pump	10- 15
Control valve	10- 38
CLSS	10- 47
Swing motor	10- 92
Center swivel joint	10- 96
Travel motor	10-105
Work equipment • swing PPC valve	10-106
Travel PPC valve	10-110
Service PPC valve	10-114
Safety lock valve	10-117
PPC accumulator	10-117
PPC shuttle • travel junction valve	10-118
EPC • solenoid valve	10-125
Hydraulic cylinder	10-130
Additional filter for breaker	10-131
Overload warning device	10-132
Hose burst protection valve	10-136
2nd Boom Holding valve	10-136-3
Work equipment	10-136-6
Electrical control system	10-138
Electrical wiring diagram	10-143
Engine control system	10-149
Electronic control system	10-154
Machine monitor system	10-179

K20506

ENGINE RELATED PARTS

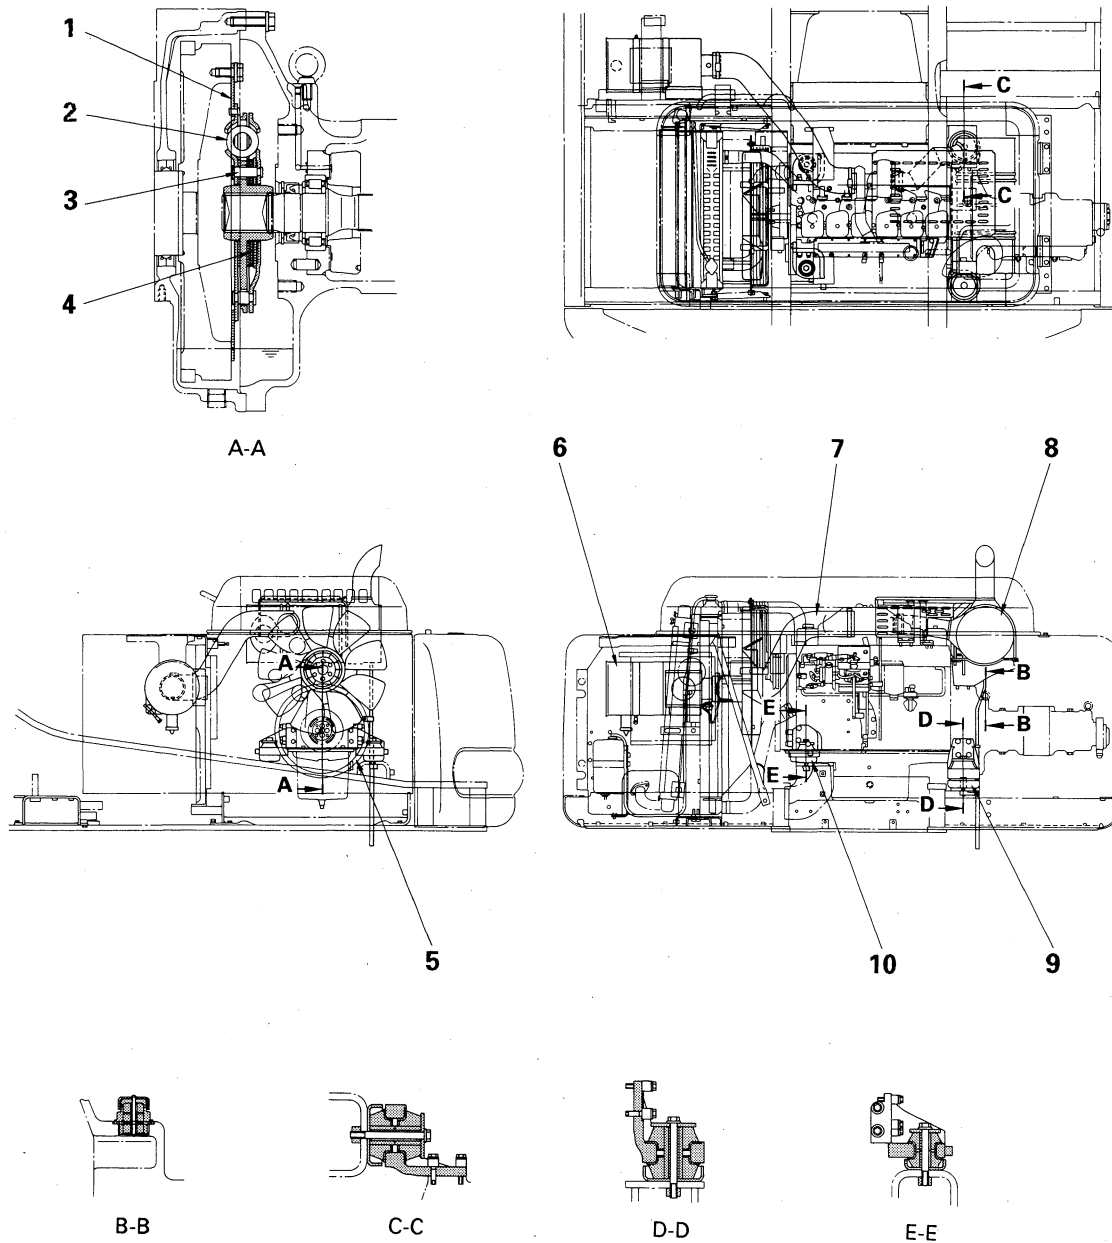

1. Drive plate
2. Torsion spring
3. Stopper pin
4. Friction plate
5. Damper assembly
6. Air cleaner
7. Intake connector
8. Muffler
9. Rear engine mount
10. Front engine mount


OUTLINE

- The damper assembly is a wet type.
Oil capacity: 0.75ℓ



STRUCTURE AND FUNCTION

2ND BOOM HOLDING VALVE





2ND BOOM HOLDING VALVE

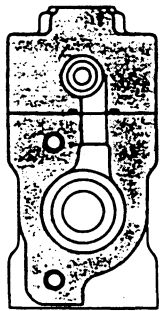

B-B

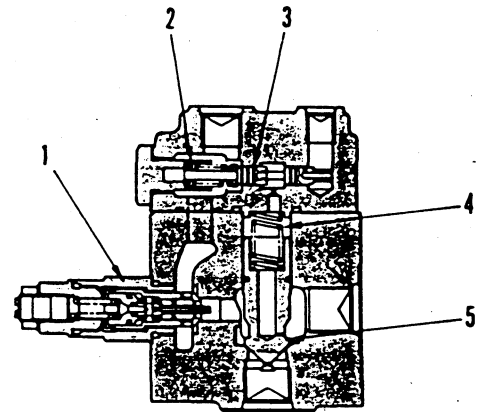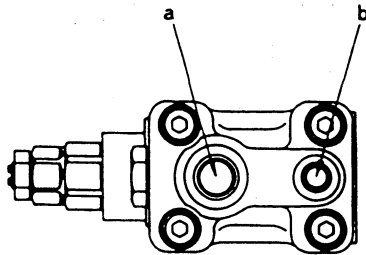

A-A

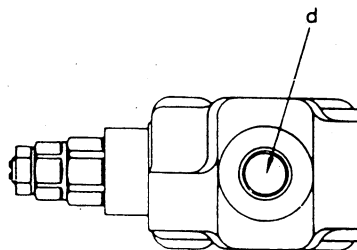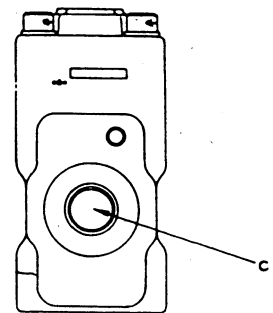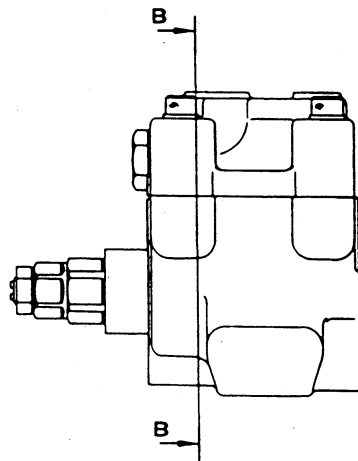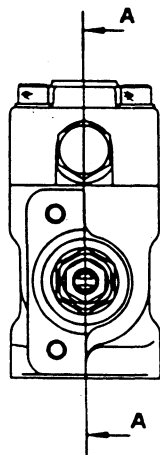

- a. Port **T** (to tank)
- b. Port **Pi** (from boom LOWER PPC valve)
- c. Port **Cy** (to boom cylinder bottom)
- d. Port **V** (from boom control valve)

- 1. Safety-suction valve
- 2. Pilot spring
- 3. Pilot spool
- 4. Poppet spring
- 5. Poppet

STRUCTURE AND FUNCTION


2ND BOOM HOLDING VALVE

Operation

1) At boom EXTEND

When the second boom is extended, the main pressure from the control valve pushes poppet (5) up in the direction of the arrow.


Because of this, the main pressure from the control valve passes through the valve and flows to the bottom end of the boom adjust cylinder.

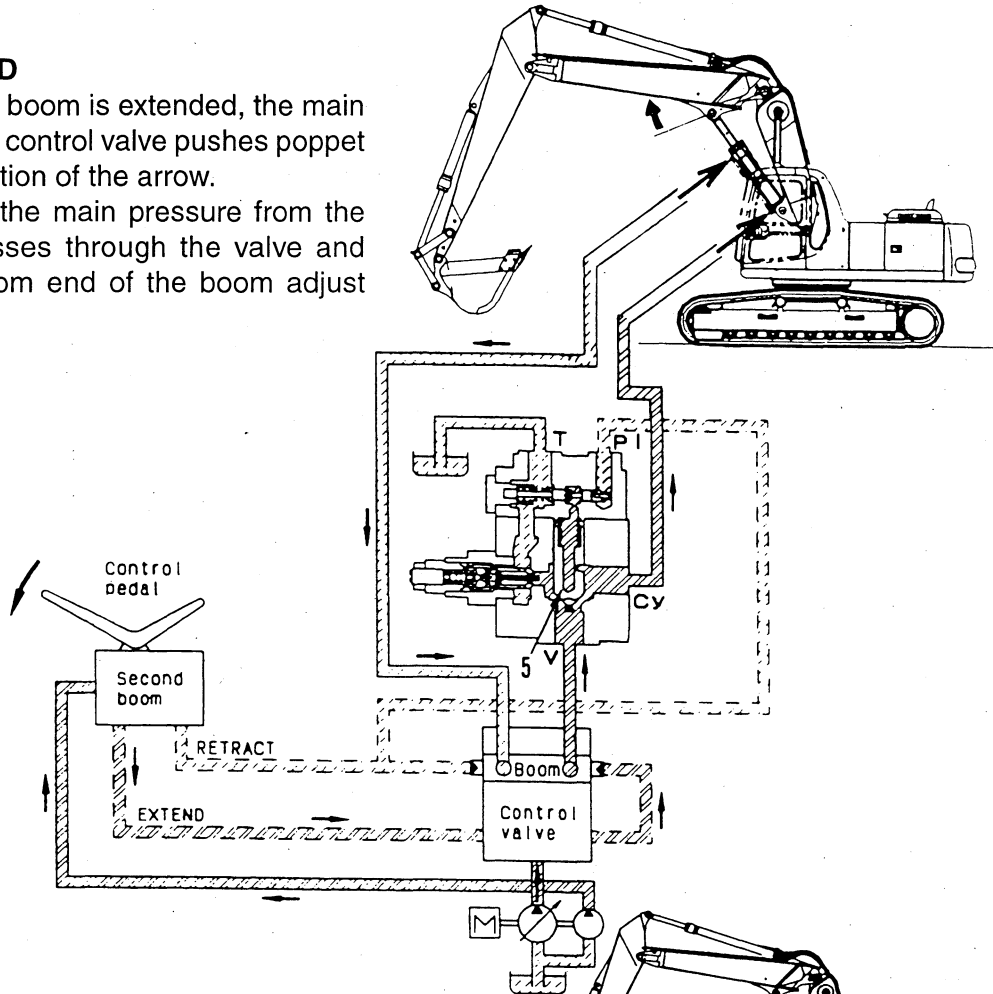

2) Boom pedal at NEUTRAL

When the second boom is raised and the control lever is returned to NEUTRAL, the circuit for the holding pressure at the bottom end of the boom adjust cylinder is closed by poppet (5) and at the same time, the oil flowing into poppet (5) through orifice a of poppet (5) is closed by pilot spool (3).

As a result, the second boom is held in position.

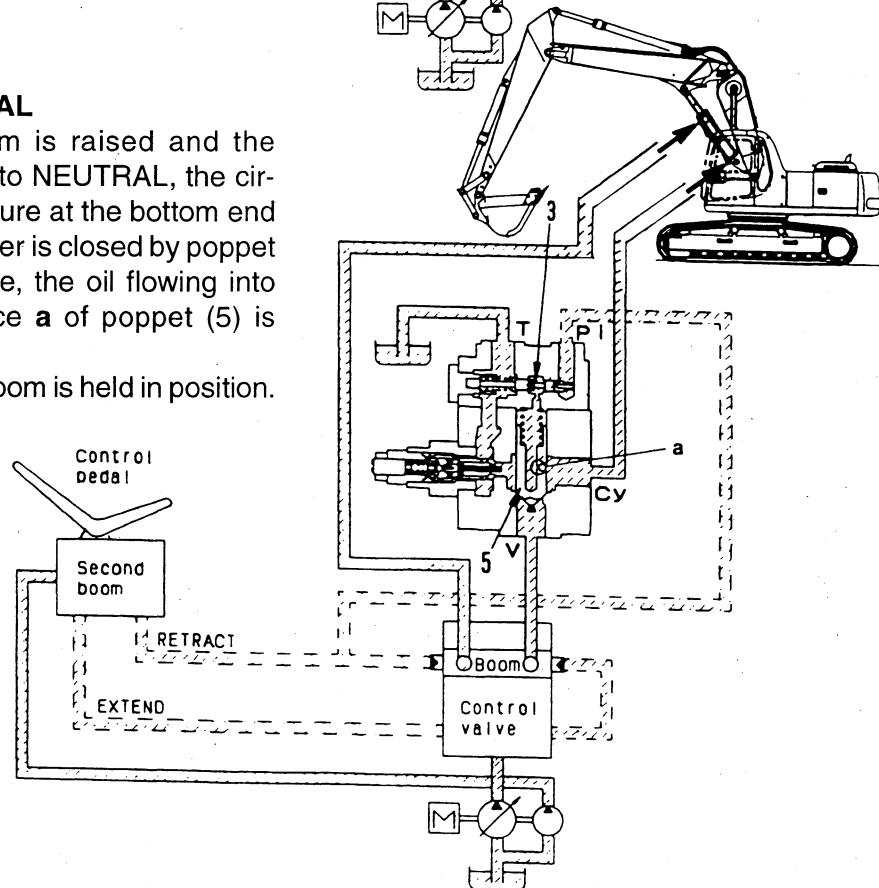

STRUCTURE AND FUNCTION


2ND BOOM HOLDING VALVE

3) At boom RETRACT

When the second boom is retracted, the pilot pressure from the PPC valve pushes pilot spool (3) and the pressurised oil in chamber b inside the poppet is drained.


When the pressure at port **Cy** rises because of the pressurised oil from the bottom end of the adjust cylinder, the difference in pressure between the oil surrounding the lower end of poppet (5) and the oil in chamber b allows the poppet to rise allowing flow from port **Cy** to port **V** which then flows to the control valve.

If any abnormal pressure is generated in the circuit at the bottom end of the boom adjust cylinder, safety valve (1) is actuated.

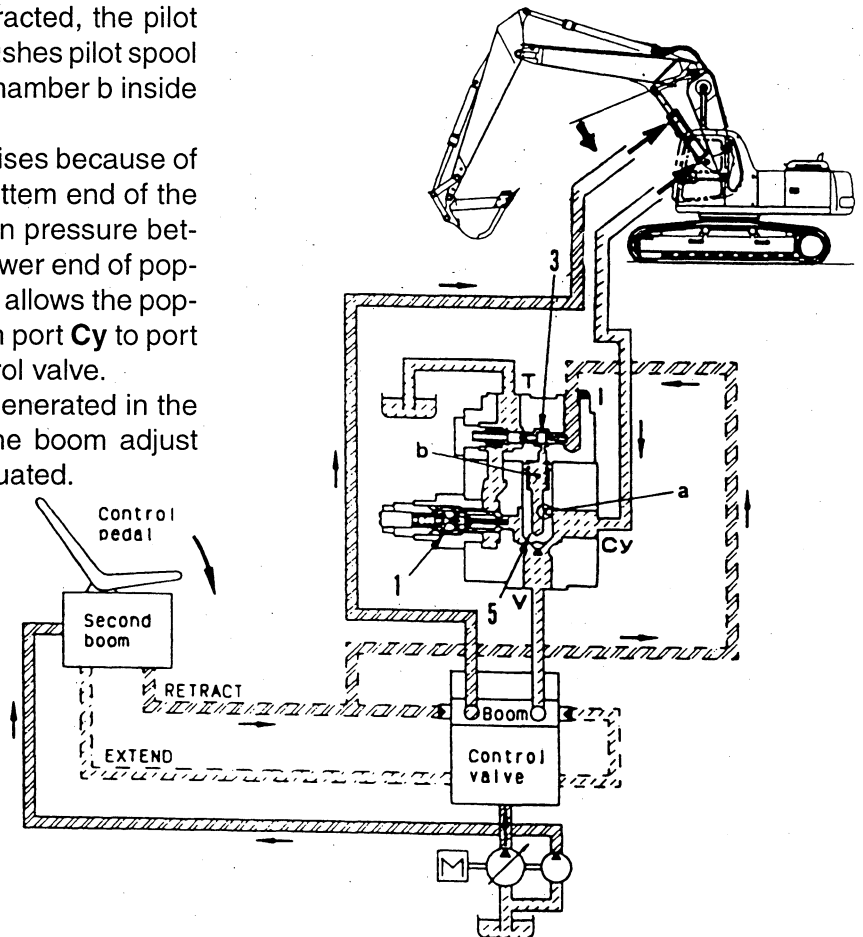

STRUCTURE AND FUNCTION

2ND BOOM HOLDING VALVE

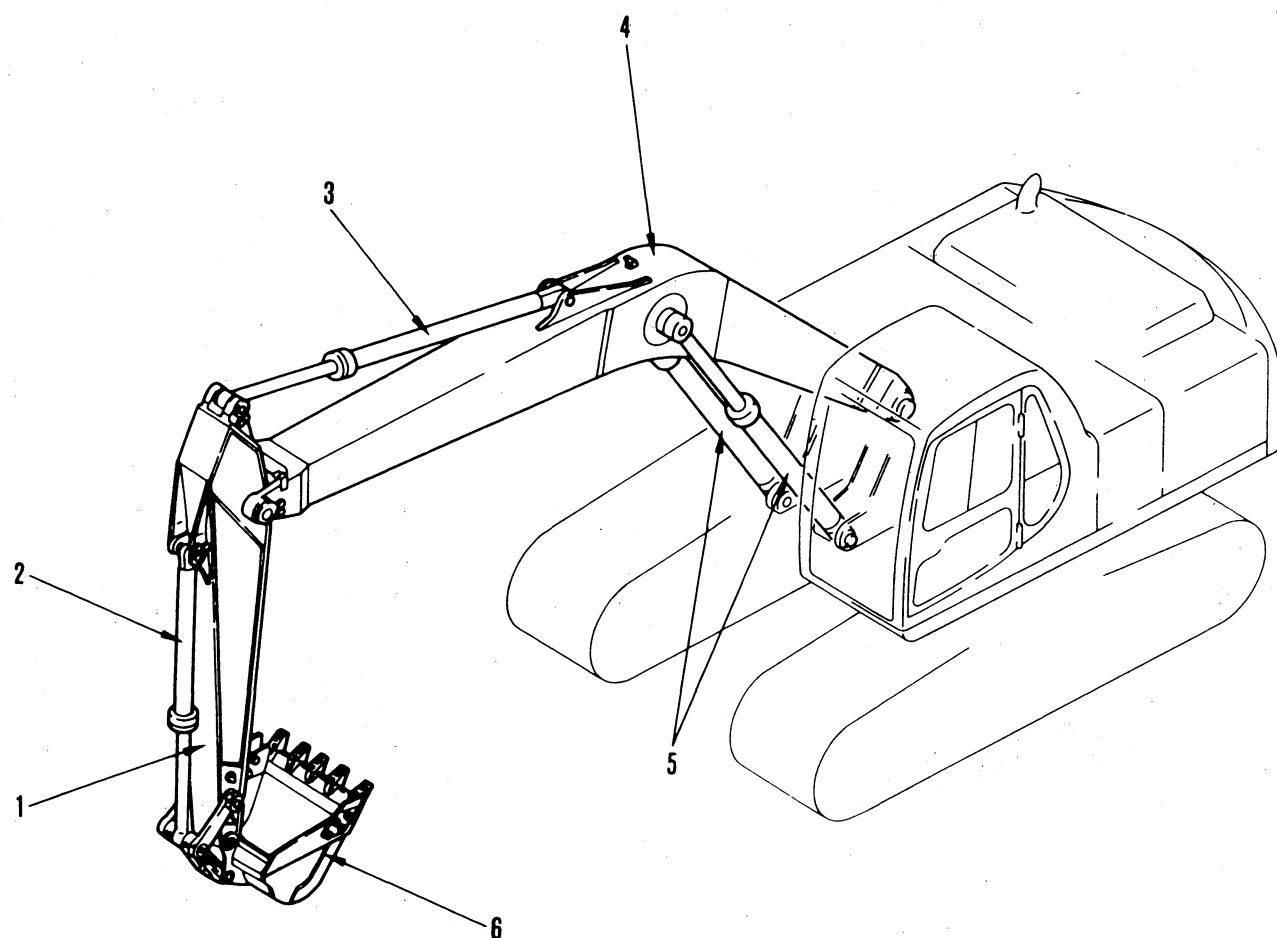

205F06123

1. Arm
2. Bucket cylinder
3. Arm cylinder
4. Boom
5. Boom cylinder
6. Bucket

SHOP MANUAL **KOMATSU** **PC210, 210LC-6K** **PC240, 240LC,** **PC240NLC-6K**

MACHINE MODEL

SERIAL NUMBER

PC210, 210LC-6K

K30001 and up

PC240, 240LC, 240NLC-6K

K30001 and up

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require. Materials and specifications are subject to change without notice.
- PC210, 210LC-6 mount the S6D102L-1 engine;
PC240, 240LC-6 mount the SA6D102L-1 engine.
For details of the engine, see the 102 Service Engine Shop Manual.

CONTENTS

	No. of page
10 STRUCTURE AND FUNCTION	10-1
20 TESTING AND ADJUSTING	20-1
30 DISASSEMBLY AND ASSEMBLY	30-1
40 MAINTENANCE STANDARD	40-1

K20506

The affected pages are indicated by the use of the following marks. It is requested that necessary actions must be taken to these pages according to the list below.

Mark	Indication	Action required
○	Page to be newly added	Add
●	Page to be replaced	Replace
()	Page to be deleted	Discard

Pages having no marks are not revised at this time.

LIST OF REVISED PAGES

Mark	Pages	Revision number	Mark	Pages	Revision number	Mark	Pages	Revision number	Mark	Pages	Revision number	Mark	Pages	Revision number
●	00- 1	②		10-23	①		10- 64	①		10-105	①	●	10-143	②
	00- 2			10-24	①		10- 65	①		10-106	①	●	10-144	②
●	00- 2-1	②		10-25	①		10- 66	①		10-107	①		(10-146)	①
●	00- 2-2	②		10-26	①		10- 67	①		10-108	①		(10-147)	①
●	00- 2-3	②		10-27	①		10- 68	①		10-109	①		(10-148)	①
	00- 3			10-28	①		10- 69	①		10-110	①		10-149	①
	00- 4			10-29	①		10- 70	①		10-111	①		10-150	①
	00- 5			10-30	①		10- 71	①		10-112	①		10-151	①
	00- 6			10-31	①		10- 72	①		10-113	①		10-152	①
	00- 7			10-32	①		10- 73	①		10-114	①		10-153	①
	00- 8			10-33	①		10- 74	①		10-115	①		10-154	①
	00- 9			10-34	①		10- 76	①		10-116	①		10-155	①
	00-10			10-35	①		10- 77	①		10-117	①		10-156	①
	00-11			10-36	①		10- 78	①		10-118	①		10-157	①
	00-12			10-38	①		10- 79	①		10-119	①		10-158	①
	00-13			10-39	①		10- 80	①		10-120	①		10-159	①
	00-14			10-40	①		10- 81	①		10-121	①		10-160	①
	00-15			10-41	①		10- 82	①		10-122	①		10-161	①
	00-16			10-42	①		10- 83	①		10-123	①		10-162	①
	00-17			10-43	①		10- 84	①		10-124	①		10-163	①
●	10- 1	②		10-44	①		10- 85	①		10-125	①		10-164	①
	10- 2	①		10-45	①		10- 86	①		10-126	①		10-165	①
	10- 3	①		10-46	①		10- 87	①		10-127	①		10-166	①
	10- 4	①		10-47	①		10- 88	①		10-128	①		10-167	①
	10- 5	①		10-48	①		10- 89	①		10-129	①		10-168	①
	10- 6	①		10-49	①		10- 90	①		10-130	①		10-169	①
	10- 7	①	●	10-50	②		10- 91	①	○	10-131	②		10-170	①
	10- 8	①		10-51	①		10- 92	①	○	10-132	②		10-171	①
	10- 9	①		10-52	①		10- 93	①	○	10-133	②		10-172	①
	10-10	①		10-53	①		10- 94	①	○	10-134	②		10-173	①
	10-11	①		10-54	①		10- 95	①	○	10-135	②		10-174	①
	10-12	①		10-55	①		10- 96	①	○	10-136	②		10-175	①
	10-14	①		10-56	①		10- 97	①	○	10-136-1	②		10-176	①
	10-15	①		10-57	①		10- 98	①	○	10-136-2	②		10-177	①
	10-16	①		10-58	①		10- 99	①	○	10-136-3	②		10-178	①
	10-17	①		10-59	①		10-100	①		10-138	①		10-179	①
	10-18	①		10-60	①		10-101	①		10-139	①		10-180	①
	10-19	①		10-61	①		10-102	①		10-140	①		10-181	①
	10-20	①		10-62	①		10-103	①		10-141	①		10-182	①
	10-22	①		10-63	①		10-104	①		10-142	①		10-183	①

K20506

Mark	Pages	Revision number	Mark	Pages	Revision number	Mark	Pages	Revision number	Mark	Pages	Revision number	Mark	Pages	Revision number
	10-184	①		20- 54			20-110			20-167			20-225	
	10-185	①		20- 55			20-111			20-168			20-226	
	10-186	①		20- 56			20-112			20-169			20-227	
				20- 57			20-113			20-170			20-228	
	20- 1			20- 58			20-114			20-171			20-229	
	20- 2			20- 59			20-115			20-172			20-231	
	20- 3			20- 60			20-116			20-173			20-232	
	20- 4			20- 61			20-118			20-174			20-233	
	20- 5			20- 62			20-119			20-175			20-235	
	20- 6			20- 63			20-120			20-176			20-236	
	20- 7			20- 64	①		20-121			20-177			20-237	
	20- 8			20- 65	①		20-122			20-178			20-238	
	20- 9			20- 66	①		20-123			20-180			20-239	
	20-10			20- 67	①		20-124			20-181			20-240	
	20-11			20- 68			20-125			20-182			20-241	
	20-12			20- 69			20-126			20-183			20-242	
	20-13			20- 70			20-127			20-184			20-243	
	20-14			20- 71			20-128			20-185			20-244	
	20-15			20- 72			20-129			20-186			20-245	
	20-16			20- 73			20-130			20-187			20-246	
	20-17			20- 74			20-131			20-188			20-247	
	20-18			20- 75			20-132			20-189			20-248	
	20-19			20- 76			20-133			20-190			20-249	
	20-20			20- 77			20-134			20-191			20-250	
	20-21			20- 78			20-135			20-192			20-251	
	20-22			20- 79			20-136			20-193			20-252	
	20-23			20- 80			20-137			20-194			20-253	
	20-24			20- 82			20-138			20-195			20-254	
	20-25			20- 83			20-139			20-196			20-255	
	20-26			20- 84			20-140			20-197			20-256	
	20-27			20- 85			20-141			20-198			20-257	
	20-28			20- 86			20-142			20-199			20-258	
	20-29			20- 87			20-143			20-201			20-259	
	20-30			20- 88			20-144			20-202			20-260	
	20-32			20- 89			20-145			20-203			20-261	
	20-33			20- 90			20-146			20-204			20-262	
	20-34			20- 91			20-147			20-205			20-263	
	20-35			20- 92			20-148			20-206				
	20-36			20- 93			20-149			20-208			30- 1	
	20-37			20- 94			20-150			20-209			30- 2	
	20-38			20- 95			20-151			20-210			30- 3	
	20-39			20- 96			20-153			20-211			30- 4	
	20-40			20- 97			20-154			20-212			30- 5	
	20-41			20- 98			20-155			20-213			30- 6	
	20-42			20- 99			20-156			20-214			30- 7	
	20-43			20-100			20-157			20-215			30- 8	
	20-44			20-101			20-158			20-216			30- 9	
	20-45			20-102			20-159			20-217			30-10	
	20-46			20-103			20-160			20-218			30-11	
	20-47			20-104			20-161			20-219			30-12	
	20-48			20-105			20-162			20-220			30-13	
	20-49			20-106			20-163			20-221			30-14	
	20-50			20-107			20-164			20-222			30-16	
	20-51			20-108			20-165			20-223			30-17	
	20-53			20-109			20-166			20-224			30-18	

K20506

K20506


Mark	Pages	Revision number	Mark	Pages	Revision number	Mark	Pages	Revision number	Mark	Pages	Revision number	Mark	Pages	Revision number
30-19			30- 75		①	40-12								
30-20			30- 76		①	40-13								
30-21			30- 77			40-14								
30-22			30- 78			40-15								
30-23			30- 79			40-17		①						
30-24			30- 80			40-18		①						
30-25			30- 81			40-19		①						
30-26			30- 82			40-20		①						
30-27			30- 83			40-21								
30-28			30- 84			40-22								
30-29			30- 85			40-23								
30-30			30- 86			40-24								
30-31			30- 87			40-25								
30-32			30- 88			40-26								
30-33			30- 89			40-27								
30-34			30- 90			40-28								
30-35			30- 91			40-29								
30-36			30- 92			40-30								
30-37			30- 93			40-31								
30-38			30- 94			40-32								
30-39			30- 95			40-34								
30-40			30- 96			40-35								
30-41			30- 97			40-36								
30-42			30- 98			40-37								
30-43			30- 99			40-38								
30-44			30-100			40-39								
30-45			30-101			40-40								
30-46			30-102			40-41								
30-47			30-103											
30-48			30-104											
30-49			30-105											
30-50			30-106											
30-51			30-107											
30-52			30-108											
30-53			30-109											
30-54			30-110											
30-55			30-111											
30-56			30-112											
30-57			30-113											
30-58			30-114											
30-59			30-115											
30-60			30-116											
30-61			30-117											
30-62														
30-63			40- 1											
30-64			40- 2											
30-65			40- 3											
30-66			40- 4											
30-67		①	40- 5											
30-68			40- 6											
30-69		①	40- 7											
30-70			40- 8											
30-72			40- 9											
30-73		①	40- 10											
30-74		①	40- 11											

10 STRUCTURE AND FUNCTION

K20506

Engine related parts	10- 2
Radiator • oil cooler • aftercooler	10- 3
Power train	10- 4
Final drive	10- 5
Swing circle	10- 6
Swing machinery	10- 7
Track frame • recoil spring	10- 8
Track shoe	10- 9
Hydraulic piping drawing	10- 11
Hydraulic circuit diagram	10- 12
Hydraulic tank	10- 14
Hydraulic pump	10- 15
Control valve	10- 38
CLSS	10- 47
Swing motor	10- 92
Center swivel joint	10- 95
Travel motor	10- 96
Valve control	10-105
Work equipment • swing PPC valve	10-106
Travel PPC valve	10-110
Service PPC valve	10-114
Safety lock valve	10-117
PPC accumulator	10-117
PPC shuttle • travel junction valve	10-118
EPC • solenoid valve	10-125
Hydraulic cylinder	10-130
Additional filter for breaker	10-131
Overload warning device	10-132
Hose burst protection valve	10-136
Work equipment	10-136-3
Electrical control system	10-138
Electrical wiring diagram	10-143
Engine control system	10-149
Electronic control system	10-154
Machine monitor system	10-179

ENGINE RELATED PARTS

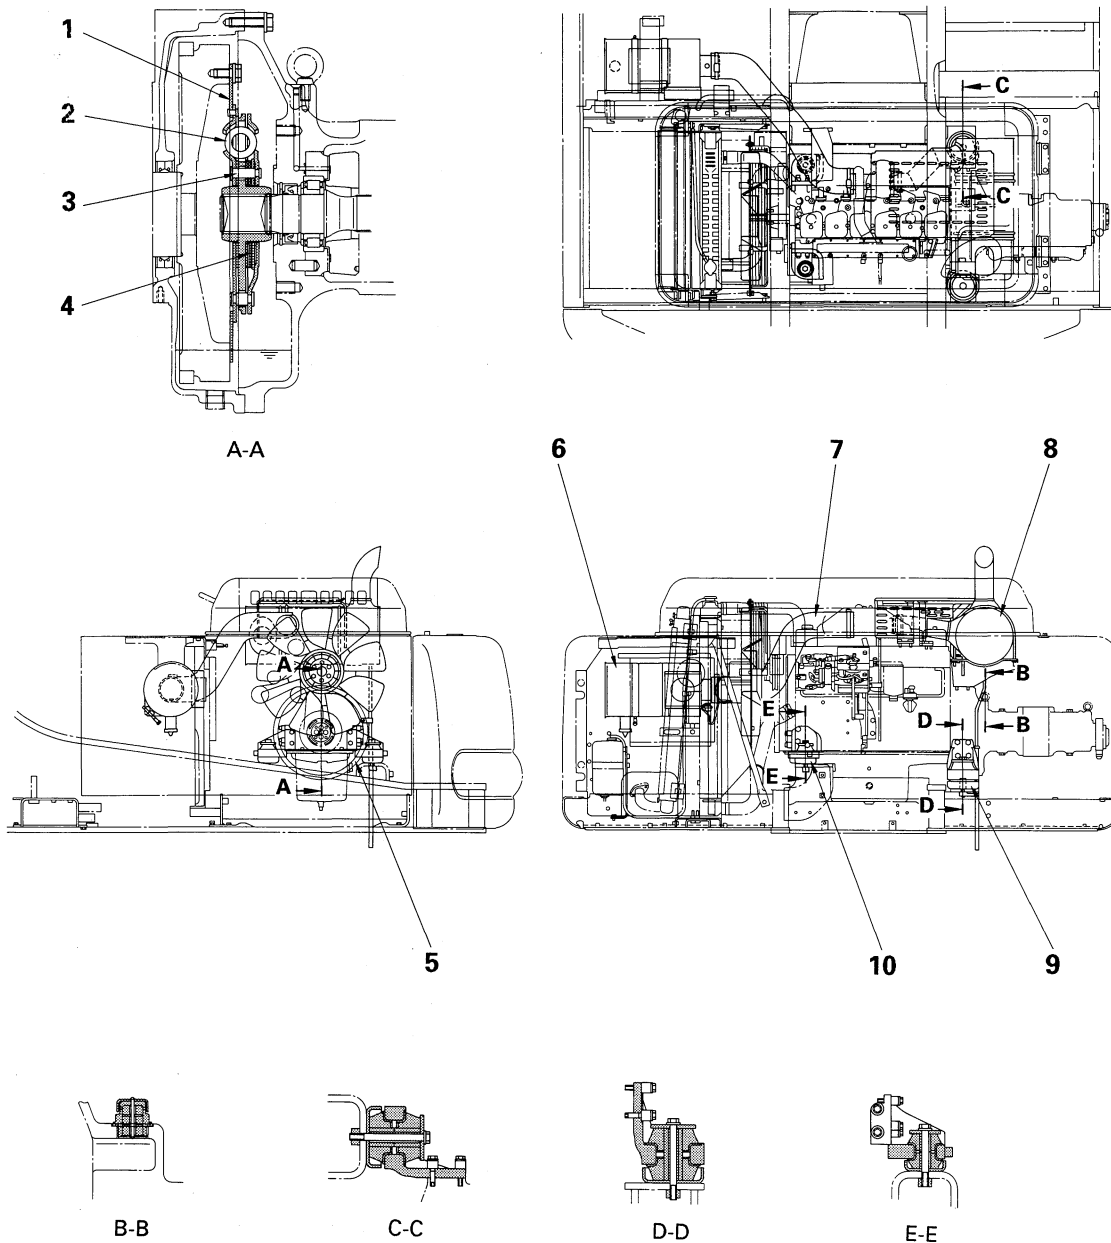

K20506

1. Drive plate
2. Torsion spring
3. Stopper pin
4. Friction plate
5. Damper assembly
6. Air cleaner
7. Intake connector
8. Muffler
9. Rear engine mount
10. Front engine mount

OUTLINE


- The damper assembly is a wet type.
Oil capacity: 0.75ℓ

2) Pressure compensation

A valve (pressure compensation valve) is installed to the outlet port side of the control valve to balance the load.

When there is compound operation of the actuators, this valve acts to make pressure difference ΔP constant for the upstream flow (inlet port) and downstream flow (outlet port) of the spool of each valve.


In this way, the flow of oil from the pump is divided in proportion to area of opening **S1** and **S2** of each valve.

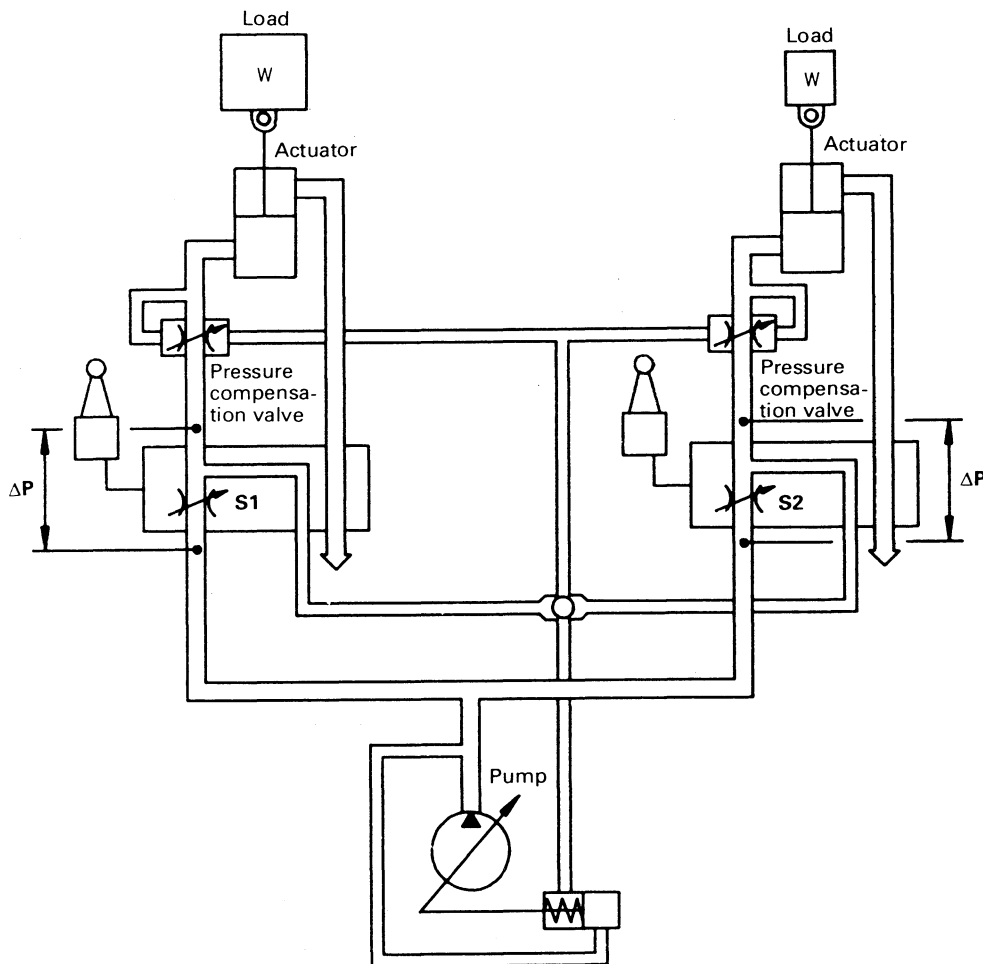

202F06061

OPERATION FOR EACH FUNCTION OF CLSS

Hydraulic circuit diagram for system

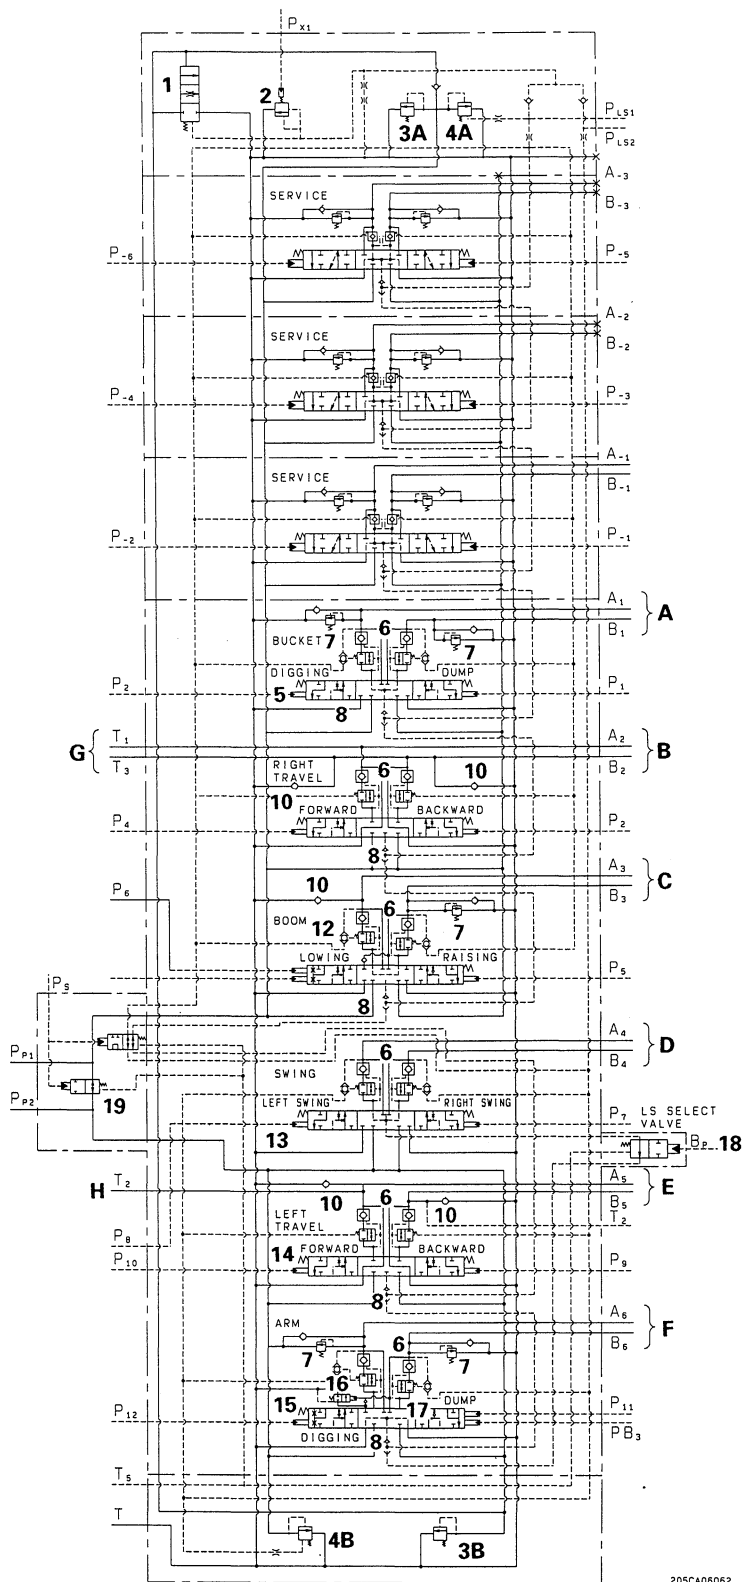


205CA08062

K20506

ADDITIONAL FILTER FOR BREAKER

★ FOR MACHINE EQUIPPED WITH BREAKER

K20506

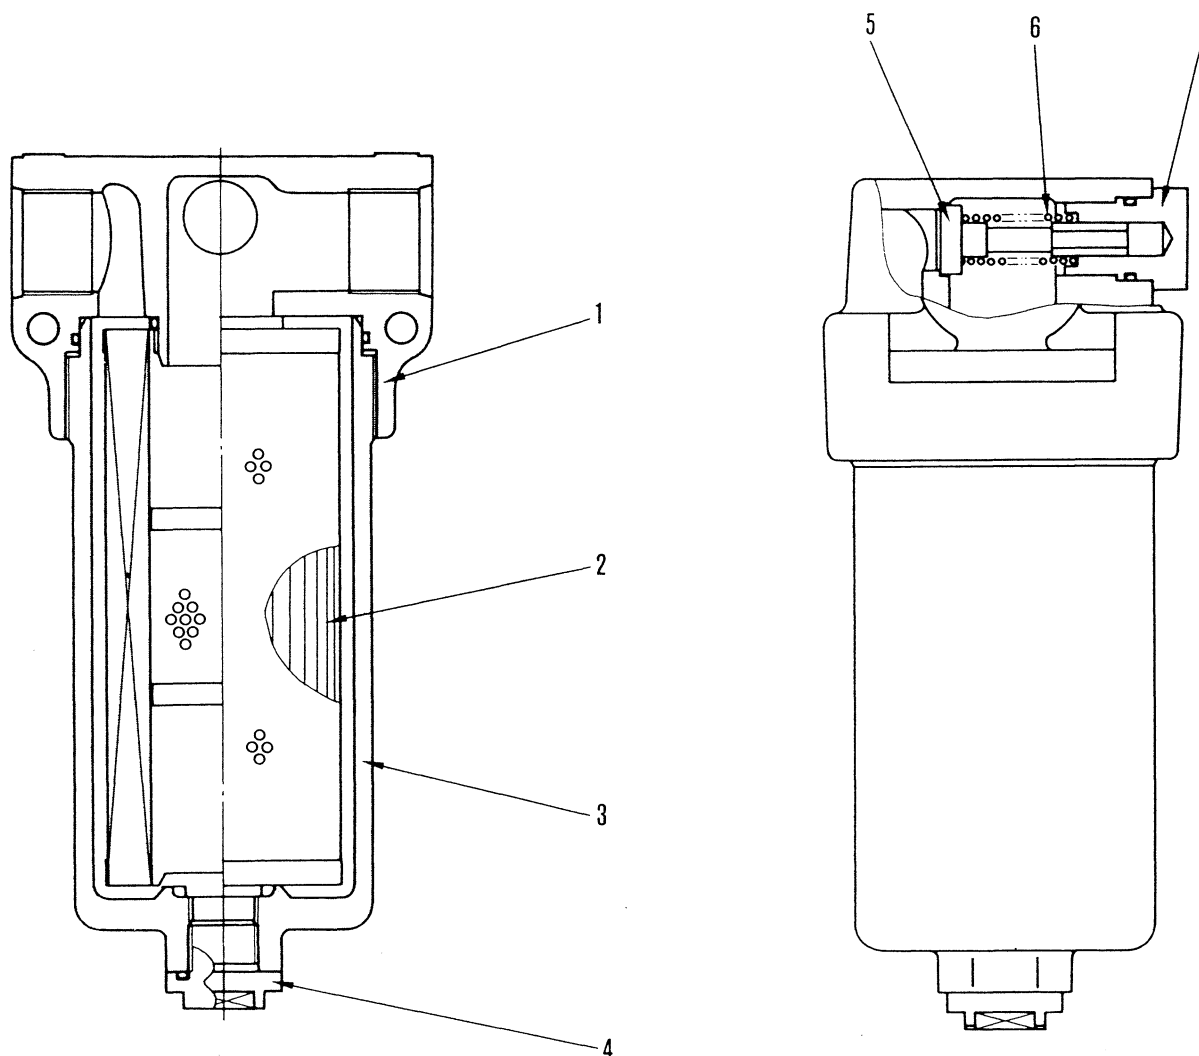

205F06096


1. Head cover
2. Element
3. Case
4. Drain plug
5. Valve
6. Spring
7. Spring set plug

SPECIFICATIONS

Rated pressure : 6.86 MPa (70 kg/cm²)
 Flow : 107ℓ/min
 Relief valve cracking pressure: 0.34 ± 0.049 MPa
 (3.5 ± 0.5 kg/cm²)
 Filter mesh size : 6 μm
 Filtering area : 3160 cm²

OVERLOAD WARNING DEVICE

1. OUTLINE

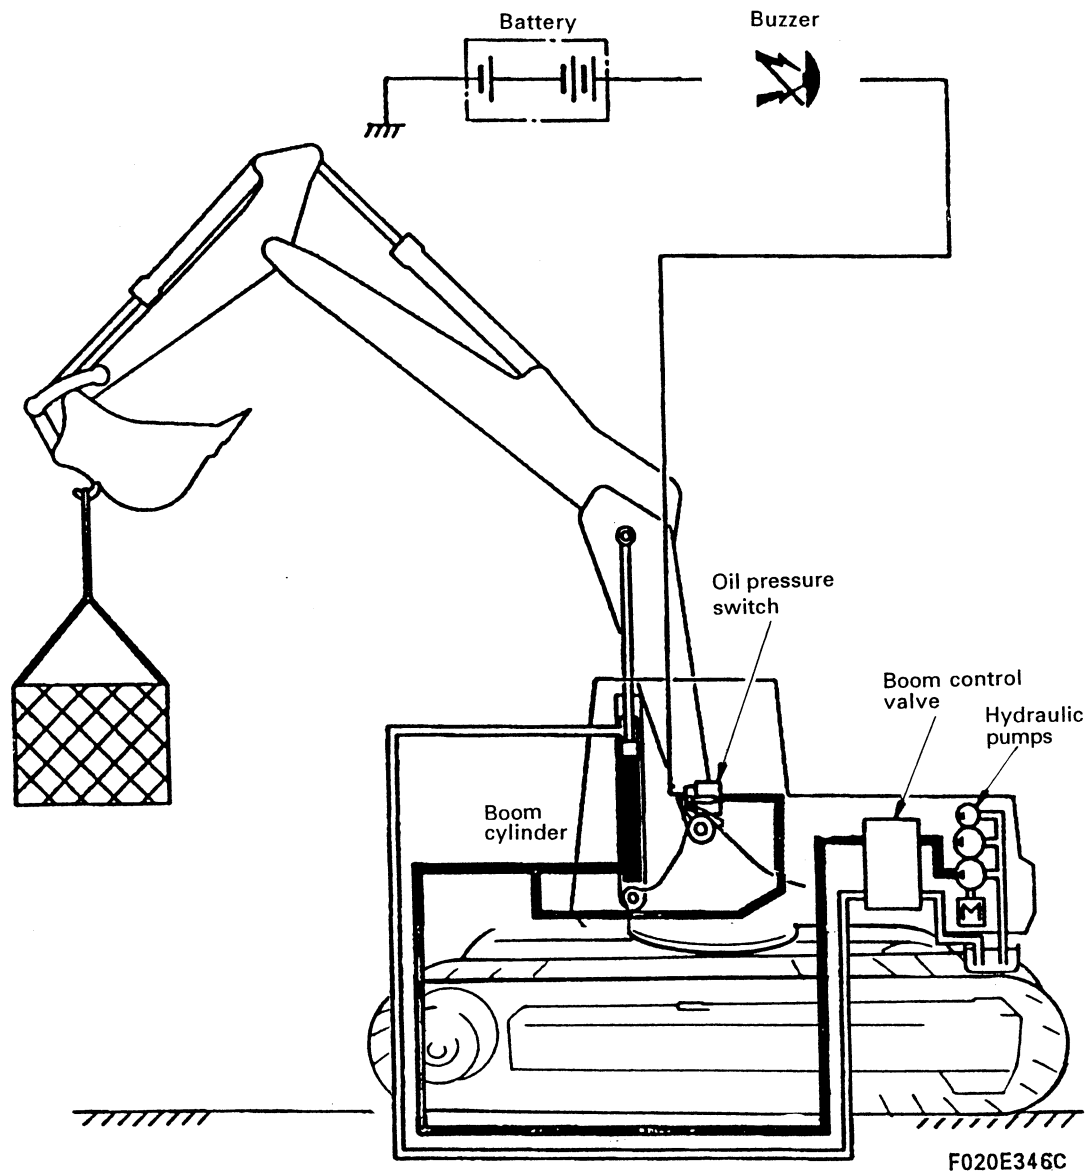

FUNCTION


- This device is installed to warn the operator when the machine is close to tipping over when it lifts an excessive weight while being used as a crane.

STRUCTURE

- When an excessive weight is lifted, the oil pressure goes up at the bottom side of the boom cylinders. When this happens, the pressure switch senses the rising pressure, turns the pressure switch on, and lights the monitor lamp to warn the operator. When the monitor lamp lights, immediately lower the weight to the ground or bring the arm closer in to the operator to prevent the machine from tipping over.

Control panel

K20506

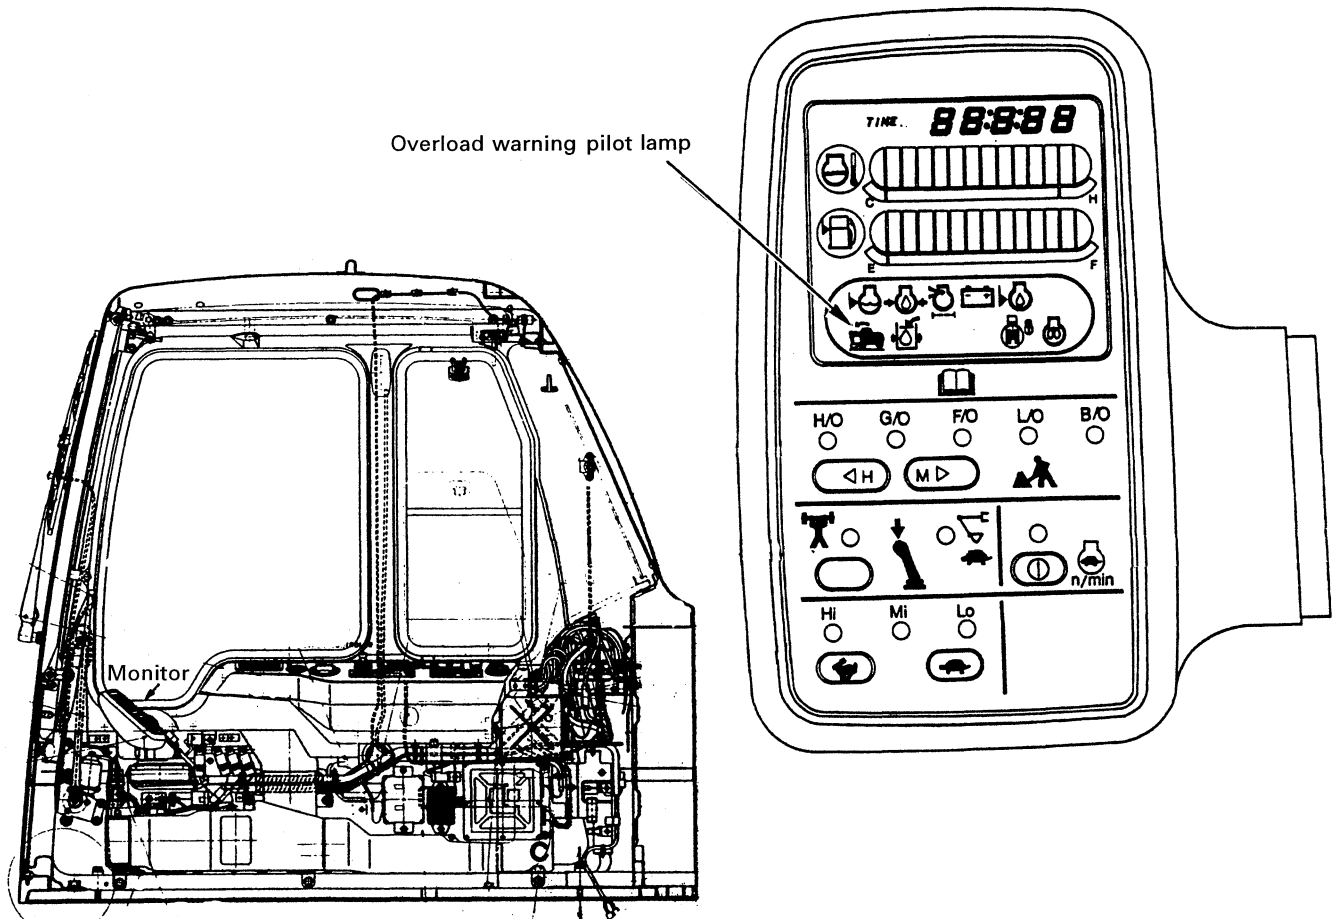

2. OPERATION

- Hose (2) directs the oil pressure from the bottom side of the boom cylinders to pressure switch (3).
- a. When the boom is in the lowest position**
 - When boom (5) is in the lowest position, lever (4) takes position **A** in Fig. 1 and the pressure to activate its switch (closed and open) becomes 60 kg/cm².
- b. When the boom is in the highest position**
 - When the boom is in the highest position, lever (4) takes position **B** in Fig. 1 and the pressure to activate the switch becomes 360 kg/cm².
- c. When the boom is in an arbitrary position**
 - When the boom is in a position anywhere between the lowest and the highest points, the operating pressure of switch (3) will be somewhere between 60 kg/cm² and 360 kg/cm², based on the boom position.

For instance, when the boom is in a certain position between the lowest and the highest points, lever (4) takes a position which corresponds to that boom position.

If lever (4) is in the position to make the operating pressure of the pressure switch 150 kg/cm² (which is the same pressure as the bottom side of the boom cylinder), the pressure switch will turn on when excessive weight is lifted by the boom and the oil pressure of the bottom of the boom cylinders exceeds 150 kg/cm².

! When the machine is performing any kind of operation other than lifting loads, fasten the pressure switch lever (4) with the bolt (6) to prolong the life at the pressure switch.

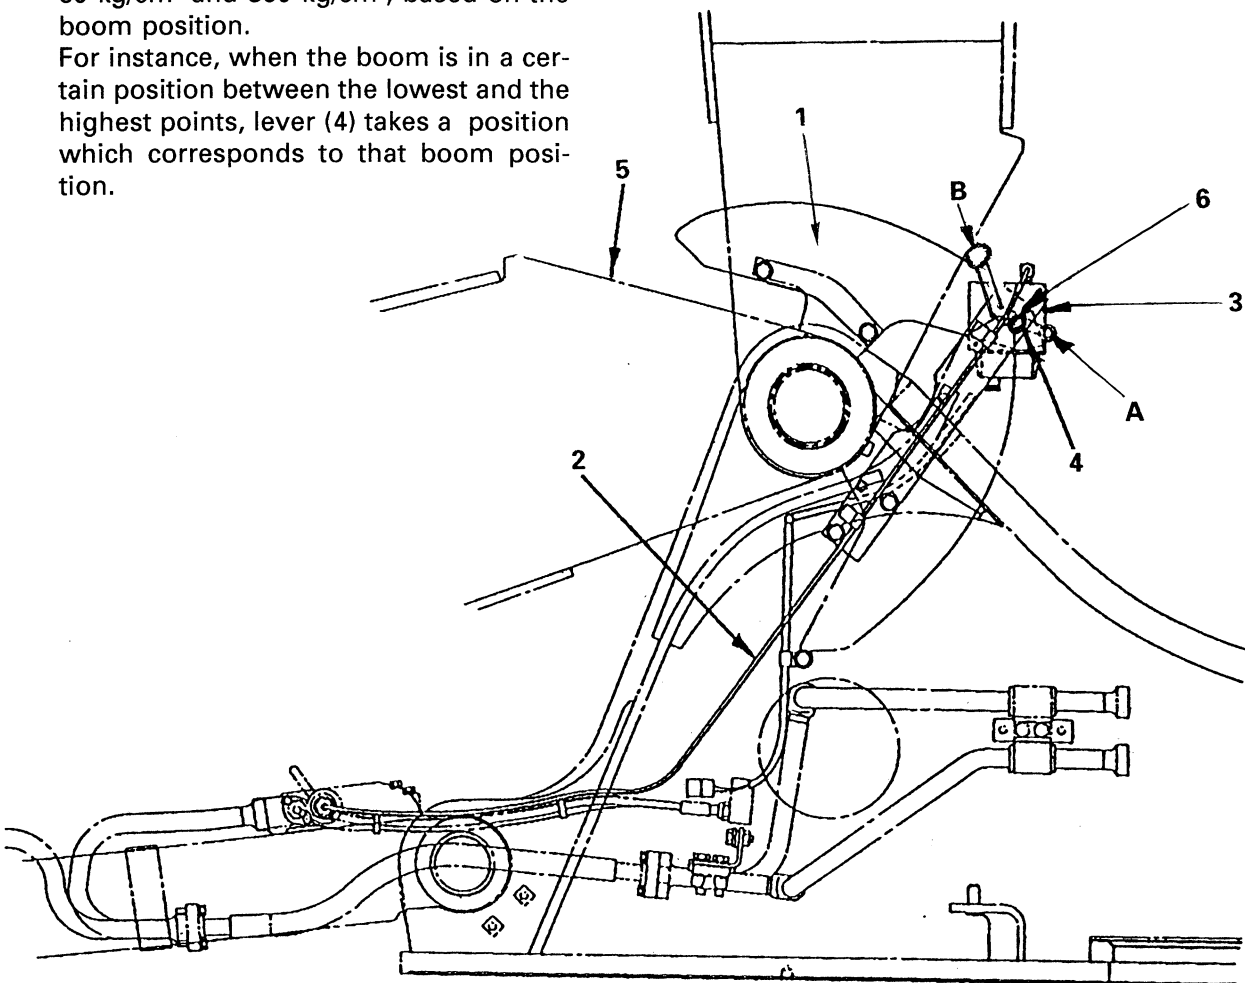


FIG.1

K20506

3. ADJUSTING PRESSURE OF THE OIL PRESSURE SWITCH

- **Screw D: Pressure range adjustment screw**

To make an adjustment so that the oil pressure switch acts normally when checking the operation of the overload warning device.


Turning to the left makes the pressure range wider.

- **Screw E: Zero point adjustment screw**



Turning to the right one complete turn raises the pressure by 57 kg/cm².

Each complete turn to the left lowers the pressure by 57 kg/cm².


⚠ When an adjustment is required, contact your Komatsu distributor and have him make the adjustment.

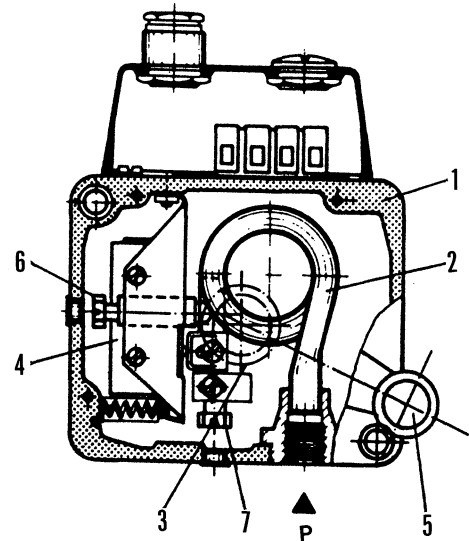

1. Body
2. Bourdon tube
3. Eccentric disc
4. Microswitch
5. Lever and roller
6. Adjustment screw (E)
7. Adjustment screw (D)

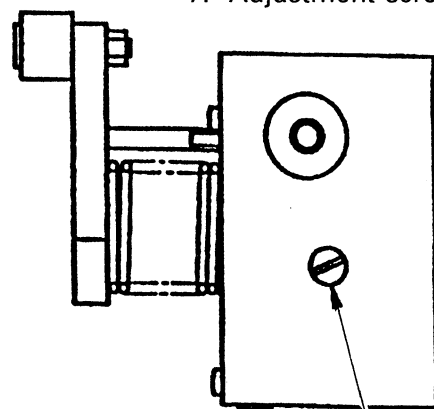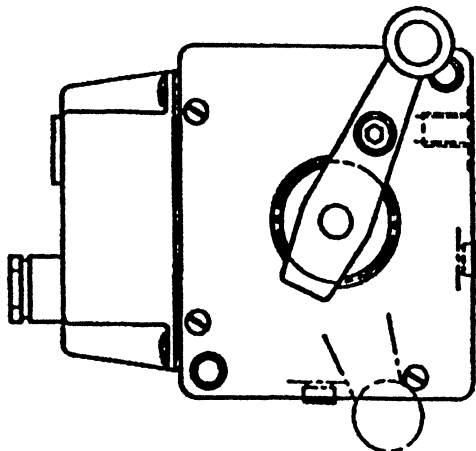


Screw D

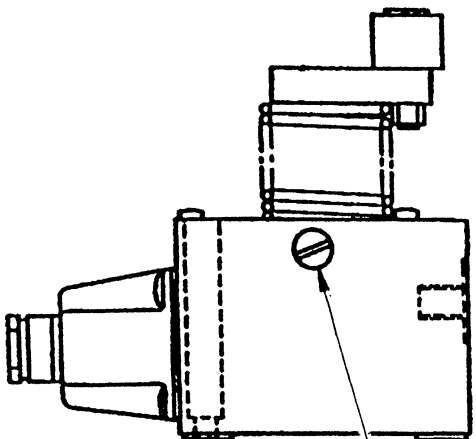

Screw E

F020E351

HOSE BURST PROTECTION VALVE (BOOM)

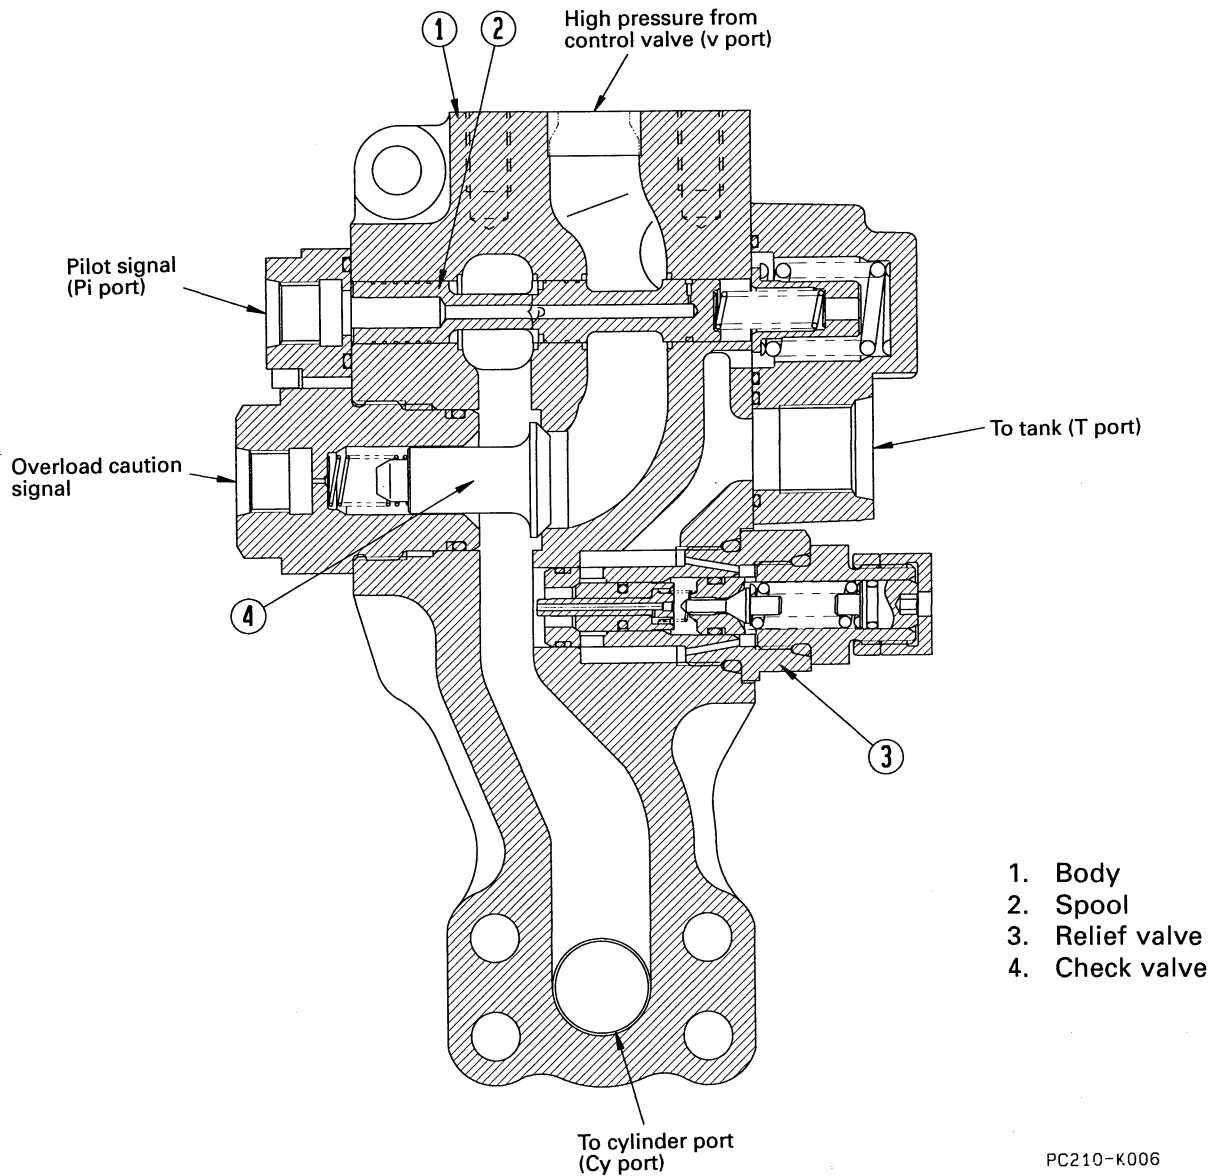

K20506

FUNCTION

- This valve prevents sudden uncontrolled lowering of the boom, when lifting, due to the burst of a hose in the boom cylinder line. In such a condition this valve will hold the load until operator lowers the boom in a controlled way using the normal wrist control.

PC210-K006


STRUCTURE AND FUNCTION

HOSE BURST PROTECTION VALVE (BOOM)

When hose burst occurs

(Operation to lower safety)

- The sudden loss of pressure at port **V** will cause check valve (4) to re-seat and so the valve is locked.
- The boom can be lowered in a controlled way by operating the wrist control in the normal way.

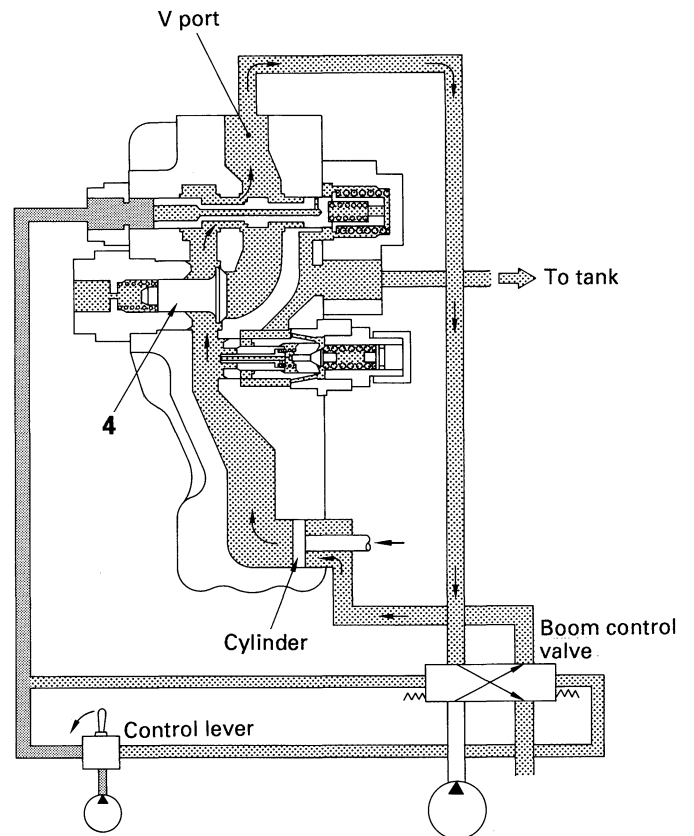

K20506


STRUCTURE AND FUNCTION

HOSE BURST PROTECTION VALVE (BOOM)

OPERATION


BOOM RAISE

- During boom raising the pilot signal from wrist control operates control valve spool to direct high pressure oil to port **V** of hose burst valve.
- This pressure lifts check valve (4) from seat & high pressure oil flows in the bottom of the cylinder raising the boom.

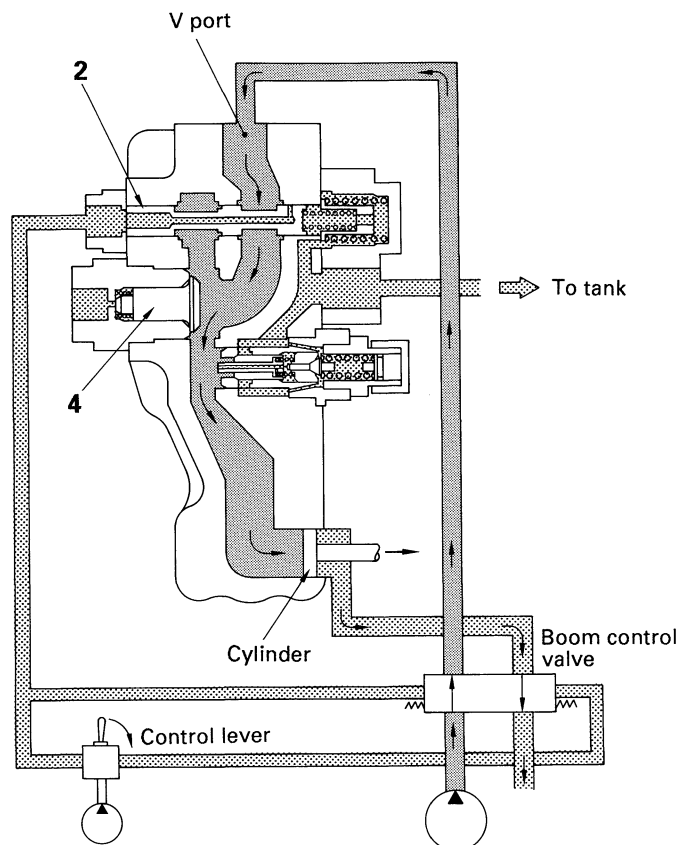


BOOM LOWER

- During boom lowering the pilot signal reverses the front through the control valve spool. High pressure oil flows to the head side of the cylinder. Oil in the bottom side of the cylinder flows through the port **Cy** of the valve but cannot flow past the check valve. The pilot signal also opens the spool (2) of the hose burst valve and allows oil to flow back to tank.

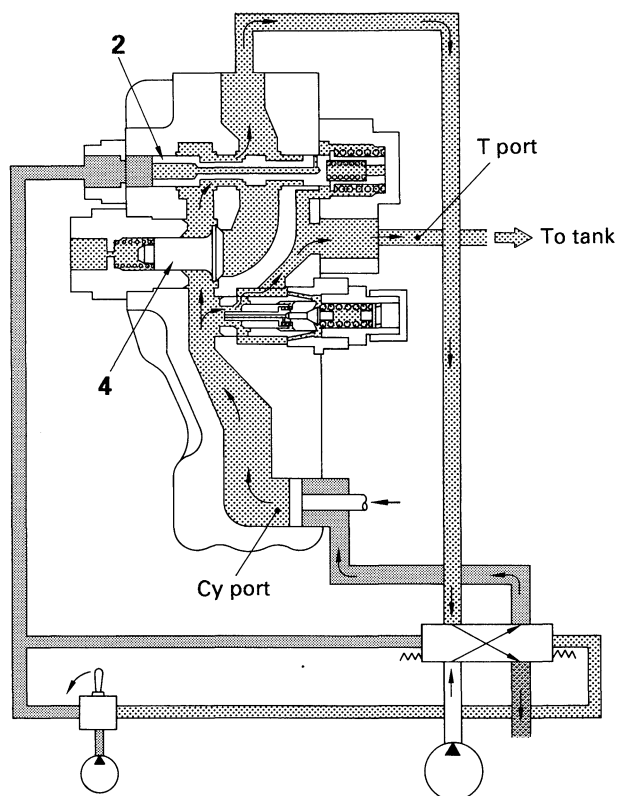

K20506

WORK EQUIPMENT

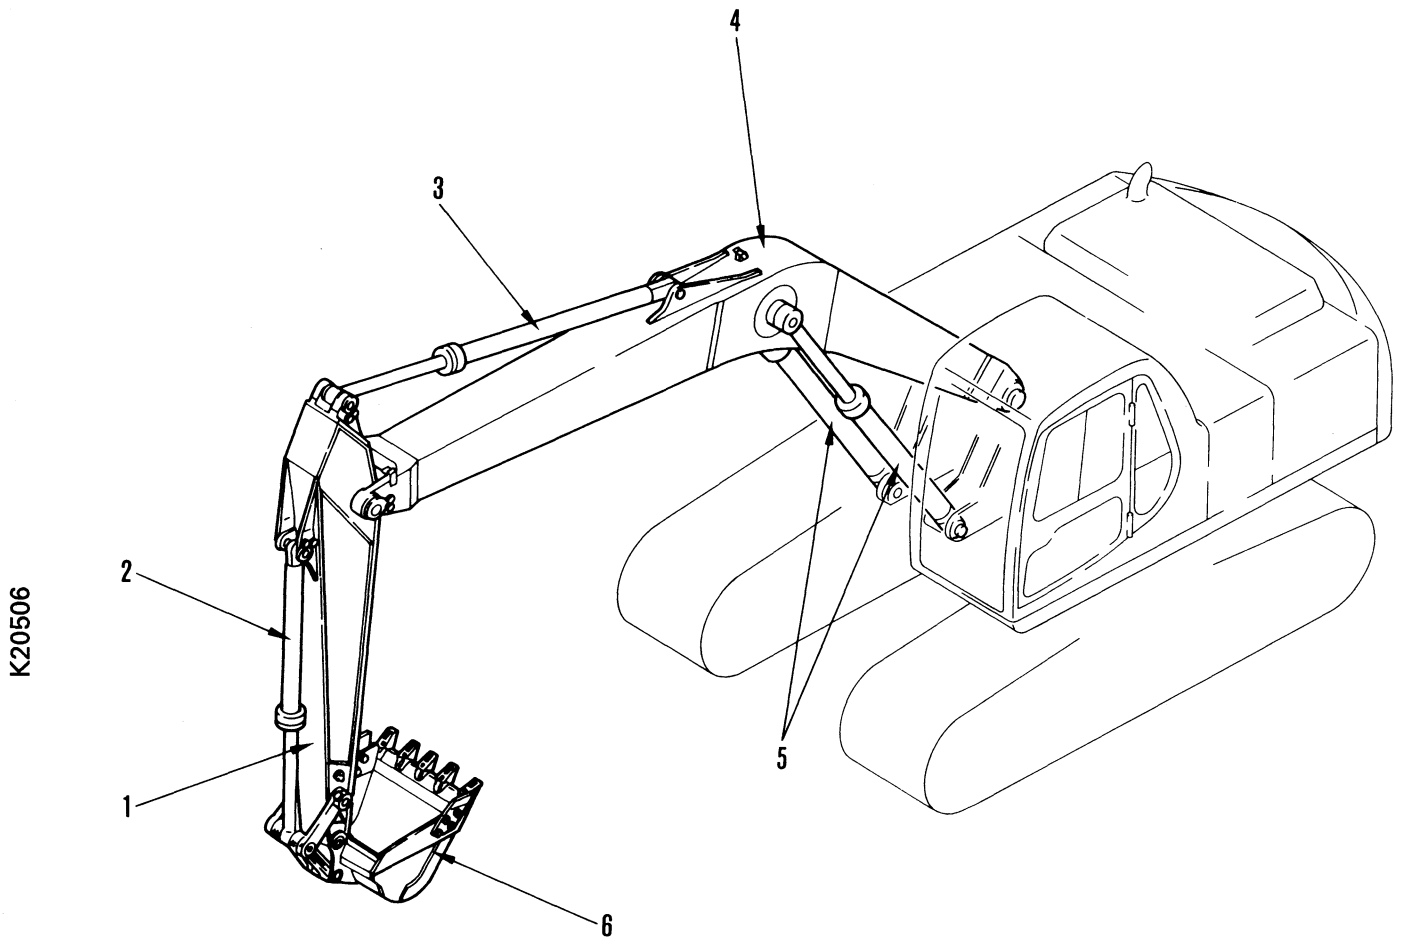

205F06 I 23

1. Arm
2. Bucket cylinder
3. Arm cylinder
4. Boom
5. Boom cylinder
6. Bucket

SHOP MANUAL **KOMATSU** **PC210,210LC-6K** **PC240,240LC,** **PC240NLC-6K**

MACHINE MODEL

SERIAL NUMBER

PC210, 210LC-6K

K30001 and up

PC240, 240LC, 240NLC-6K

K30001 and up

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require. Materials and specifications are subject to change without notice.
- PC210, 210LC-6 mount the S6D102L-1 engine;
PC240, 240LC-6 mount the SA6D102L-1 engine.
For details of the engine, see the 102 Service Engine Shop Manual.

CONTENTS

	No. of page
10 STRUCTURE AND FUNCTION	10-1
20 TESTING AND ADJUSTING	20-1
30 DISASSEMBLY AND ASSEMBLY	30-1
40 MAINTENANCE STANDARD	40-1

K20506

The affected pages are indicated by the use of the following marks. It is requested that necessary actions must be taken to these pages according to the list below.

Mark	Indication	Action required
○	Page to be newly added	Add
●	Page to be replaced	Replace
()	Page to be deleted	Discard

Pages having no marks are not revised at this time.

LIST OF REVISED PAGES

Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number
●	00- 1	①	○	10-18	①	○	10-58	①	○	10-97	①	○	10-135	①
	00- 2		○	10-19	①	○	10-59	①	○	10-98	①	○	10-136	①
○	00- 2-1	①	○	10-20	①	○	10-60	①	○	10-99	①	○	10-138	①
○	00- 2-2	①	○	10-22	①	○	10-61	①	○	10-100	①	○	10-139	①
○	00- 2-3	①	○	10-23	①	○	10-62	①	○	10-101	①	○	10-140	①
			○	10-24	①	○	10-63	①	○	10-102	①	○	10-141	①
	00-3		○	10-25	①	○	10-64	①	○	10-103	①	○	10-142	①
●	00-4		○	10-26	①	○	10-65	①	○	10-104	①	○	10-143	①
	00-5		○	10-27	①	○	10-66	①	○	10-105	①	○	10-144	①
	00-6		○	10-28	①	○	10-67	①	○	10-106	①	○	10-146	①
	00-7		○	10-29	①	○	10-68	①	○	10-107	①	○	10-147	①
	00-8		○	10-30	①	○	10-69	①	○	10-108	①	○	10-148	①
	00-9		○	10-31	①	○	10-70	①	○	10-109	①	○	10-149	①
	00-10		○	10-32	①	○	10-71	①	○	10-110	①	○	10-150	①
	00-11		○	10-33	①	○	10-72	①	○	10-111	①	○	10-151	①
	00-12		○	10-34	①	○	10-73	①	○	10-112	①	○	10-152	①
	00-13		○	10-35	①	○	10-74	①	○	10-113	①	○	10-153	①
	00-14		○	10-36	①	○	10-76	①	○	10-114	①	○	10-154	①
	00-15		○	10-38	①	○	10-77	①	○	10-115	①	○	10-155	①
	00-16		○	10-39	①	○	10-78	①	○	10-116	①	○	10-156	①
	00-17		○	10-40	①	○	10-79	①	○	10-117	①	○	10-157	①
			○	10-41	①	○	10-80	①	○	10-118	①	○	10-158	①
○	10-1	①	○	10-42	①	○	10-81	①	○	10-119	①	○	10-159	①
○	10-2	①	○	10-43	①	○	10-82	①	○	10-120	①	○	10-160	①
○	10-3	①	○	10-44	①	○	10-83	①	○	10-121	①	○	10-161	①
○	10-4	①	○	10-45	①	○	10-84	①	○	10-122	①	○	10-162	①
○	10-5	①	○	10-46	①	○	10-85	①	○	10-123	①	○	10-163	①
○	10-6	①	○	10-47	①	○	10-86	①	○	10-124	①	○	10-164	①
○	10-7	①	○	10-48	①	○	10-87	①	○	10-125	①	○	10-165	①
○	10-8	①	○	10-49	①	○	10-88	①	○	10-126	①	○	10-166	①
○	10-9	①	○	10-50	①	○	10-89	①	○	10-127	①	○	10-167	①
○	10-10	①	○	10-51	①	○	10-90	①	○	10-128	①	○	10-168	①
○	10-11	①	○	10-52	①	○	10-91	①	○	10-129	①	○	10-169	①
○	10-12	①	○	10-53	①	○	10-92	①	○	10-130	①	○	10-170	①
○	10-14	①	○	10-54	①	○	10-93	①				○	10-171	①
○	10-15	①	○	10-55	①	○	10-94	①				○	10-172	①
○	10-16	①	○	10-56	①	○	10-95	①				○	10-173	①
○	10-17	①	○	10-57	①	○	10-96	①				○	10-174	①

K20506

Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number
○	10-175	①		20-41			20-95			20-148			20-203	
○	10-176	①		20-42			20-96			20-149			20-204	
○	10-177	①		20-43			20-97			20-150			20-205	
○	10-178	①		20-44			20-98			20-151			20-206	
○	10-179	①		20-45			20-99			20-153			20-208	
○	10-180	①		20-46			20-100			20-154			20-209	
○	10-181	①		20-47			20-101			20-155			20-210	
○	10-182	①		20-48			20-102			20-156			20-211	
○	10-183	①		20-49			20-103			20-157			20-212	
○	10-184	①		20-50			20-104			20-158			20-213	
○	10-185	①		20-51			20-105			20-159			20-214	
○	10-186	①		20-53			20-106			20-160			20-215	
				20-54			20-107			20-161			20-216	
	20-1			20-55			20-108			20-162			20-217	
	20-2			20-56			20-109			20-163			20-218	
	20-3			20-57			20-110			20-164			20-219	
	20-4			20-58			20-111			20-165			20-220	
	20-5			20-59			20-112			20-166			20-221	
	20-6			20-60			20-113			20-167			20-222	
	20-7			20-61			20-114			20-168			20-223	
	20-8			20-62			20-115			20-169			20-224	
	20-9			20-63			20-116			20-170			20-225	
	20-10		●	20-64	①		20-118			20-171			20-226	
	20-11		●	20-65	①		20-119			20-172			20-227	
	20-12		●	20-66	①		20-120			20-173			20-228	
	20-13		●	20-67	①		20-121			20-174			20-229	
	20-14			20-68			20-122			20-175			20-231	
	20-15			20-69			20-123			20-176			20-232	
	20-16			20-70			20-124			20-177			20-233	
	20-17			20-71			20-125			20-178			20-235	
	20-18			20-72			20-126			20-180			20-236	
	20-19			20-73			20-127			20-181			20-237	
	20-20			20-74			20-128			20-182			20-238	
	20-21			20-75			20-129			20-183			20-239	
	20-22			20-76			20-130			20-184			20-240	
	20-23			20-77			20-131			20-185			20-241	
	20-24			20-78			20-132			20-186			20-242	
	20-25			20-79			20-133			20-187			20-243	
	20-26			20-80			20-134			20-188			20-244	
	20-27			20-82			20-135			20-189			20-245	
	20-28			20-83			20-136			20-190			20-246	
	20-29			20-84			20-137			20-191			20-247	
	20-30			20-85			20-138			20-192			20-248	
	20-32			20-86			20-139			20-193			20-249	
	20-33			20-87			20-140			20-194			20-250	
	20-34			20-88			20-141			20-195			20-251	
	20-35			20-89			20-142			20-196			20-252	
	20-36			20-90			20-143			20-197			20-253	
	20-37			20-91			20-144			20-198			20-254	
	20-38			20-92			20-145			20-199			20-255	
	20-39			20-93			20-146			20-201			20-256	
	20-40			20-94			20-147			20-202			20-257	

K20506

K20506


Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number
	20-258			30-47			30-100			40-36				
	20-259			30-48			30-101			40-37				
	20-260			30-49			30-102			40-38				
	20-261			30-50			30-103			40-39				
	20-262			30-51			30-104			40-40				
	20-263			30-52			30-105			40-41				
				30-53			30-106							
	30-1			30-54			30-107							
	30-2			30-55			30-108							
	30-3			30-56			30-109							
	30-4			30-57			30-110							
	30-5			30-58			30-111							
	30-6			30-59			30-112							
	30-7			30-60			30-113							
	30-8			30-61			30-114							
	30-9			30-62			30-115							
	30-10			30-63			30-116							
	30-11			30-64			30-117							
	30-12			30-65										
	30-13			30-66			40-1							
	30-14		●	30-67	①		40-2							
	30-16			30-68			40-3							
	30-17		●	30-69	①		40-4							
	30-18			30-70			40-5							
	30-19			30-72			40-6							
	30-20		○	30-73	①		40-7							
	30-21		○	30-74	①		40-8							
	30-22		○	30-75	①		40-9							
	30-23		○	30-76	①		40-10							
	30-24			30-77			40-11							
	30-25			30-78			40-12							
	30-26			30-79			40-13							
	30-27			30-80			40-14							
	30-28			30-81			40-15							
	30-29			30-82		○	40-17	①						
	30-30			30-83		○	40-18	①						
	30-31			30-84		○	40-19	①						
	30-32			30-85		○	40-20	①						
	30-33			30-86			40-21							
	30-34			30-87			40-22							
	30-35			30-88			40-23							
	30-36			30-89			40-24							
	30-37			30-90			40-25							
	30-38			30-91			40-26							
	30-39			30-92			40-27							
	30-40			30-93			40-28							
	30-41			30-94			40-29							
	30-42			30-95			40-30							
	30-43			30-96			40-31							
	30-44			30-97			40-32							
	30-45			30-98			40-34							
	30-46			30-99			40-35							

10 STRUCTURE AND FUNCTION

K20506

Engine related parts	10- 2
Radiator • oil cooler • aftercooler	10- 3
Power train	10- 4
Final drive	10- 5
Swing circle	10- 6
Swing machinery	10- 7
Track frame • recoil spring	10- 8
Track shoe	10- 9
Hydraulic piping drawing	10- 11
Hydraulic circuit diagram	10- 12
Hydraulic tank	10- 14
Hydraulic pump	10- 15
Control valve	10- 38
CLSS	10- 47
Swing motor	10- 92
Center swivel joint	10- 95
Travel motor	10- 96
Valve control	10-105
Work equipment • swing PPC valve	10-106
Travel PPC valve	10-110
Service PPC valve	10-114
Safety lock valve	10-117
PPC accumulator	10-117
PPC shuttle • travel junction valve	10-118
EPC • solenoid valve	10-125
Hydraulic cylinder	10-130
Additional filter for breaker	10-131
Overload warning device	10-132
Work equipment	10-136
Electrical wiring diagram	10-138
Electrical control system	10-145
Engine control system	10-149
Electronic control system	10-154
Machine monitor system	10-179

ENGINE RELATED PARTS


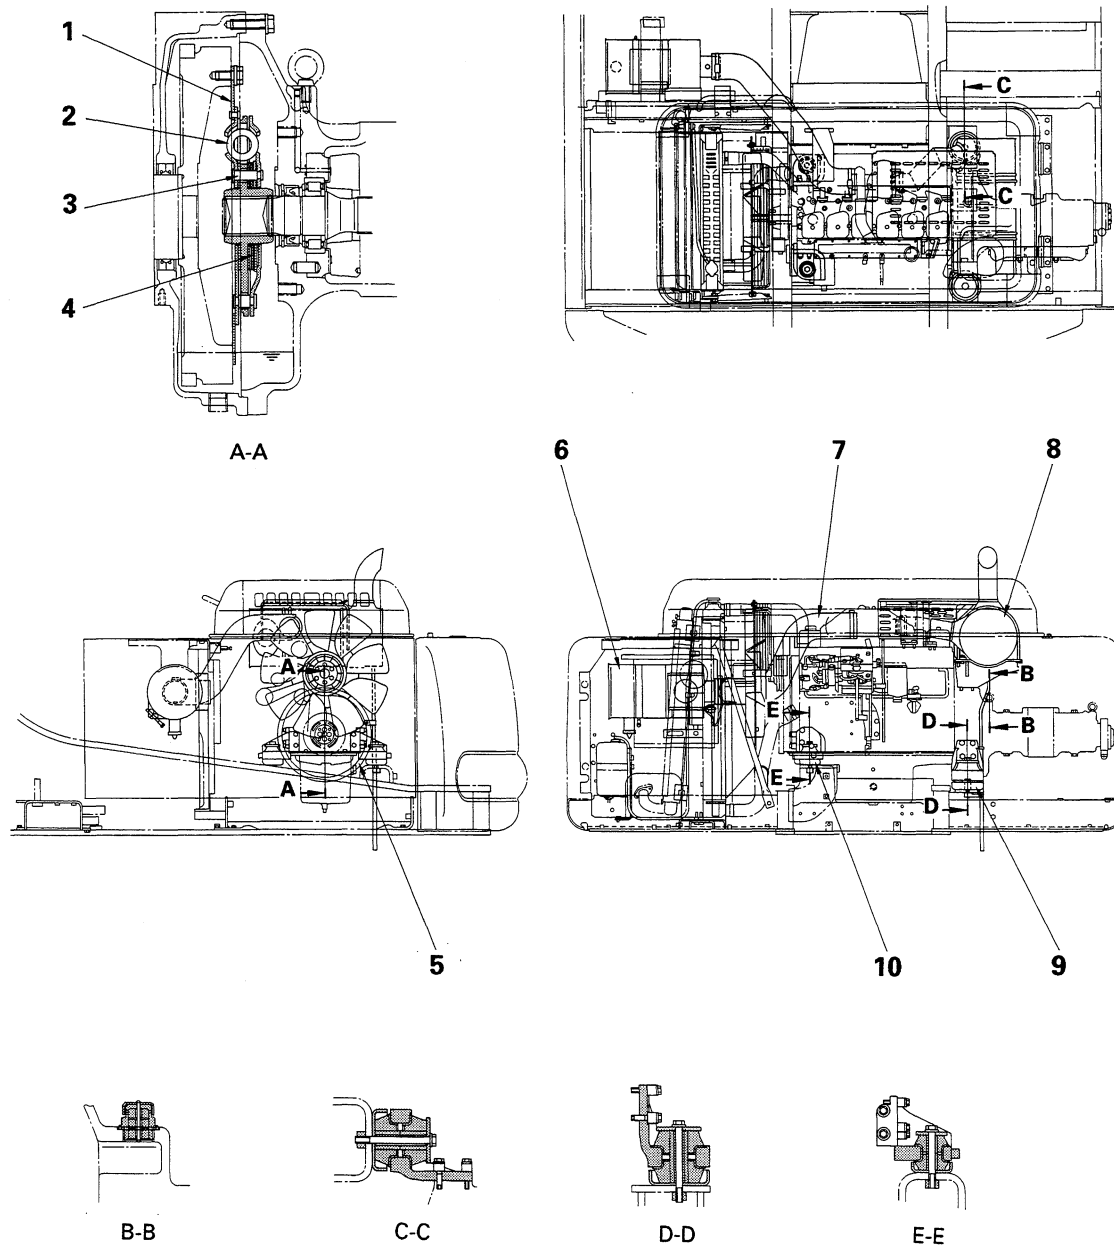


K20506

OUTLINE

- The damper assembly is a wet type.
Oil capacity: 0.75ℓ

RADIATOR • OIL COOLER • AFTERCOOLER

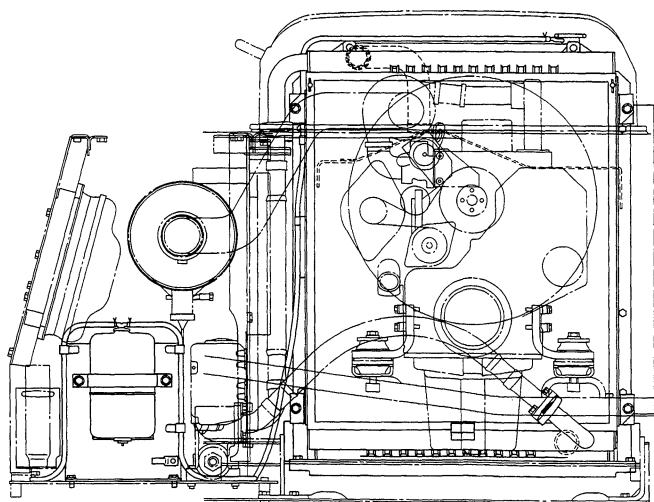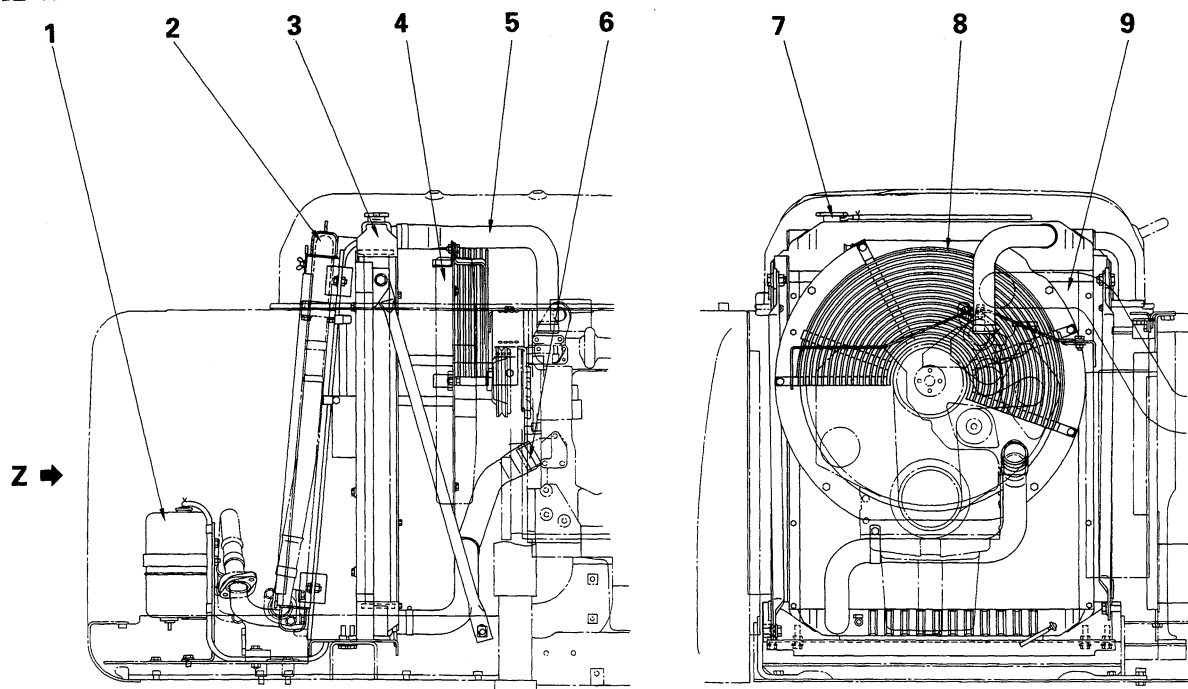

Z

1. Reservoir tank
2. Oil cooler
3. Radiator
4. Fan
5. Radiator inlet hose
6. Radiator outlet hose
7. Radiator cap
8. Net
9. Shroud



SPECIFICATIONS

Radiator: CWX-4

Oil cooler: SF-3

K20506

POWER TRAIN

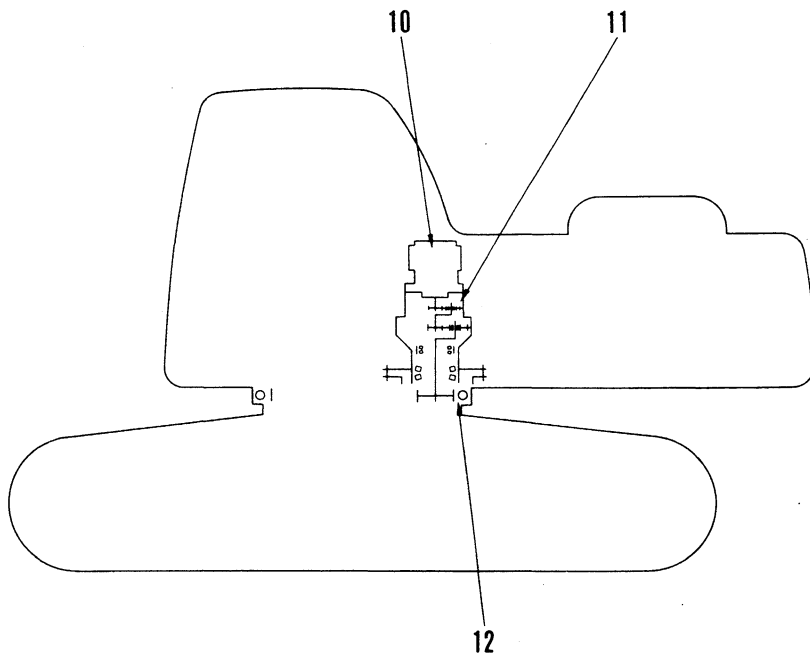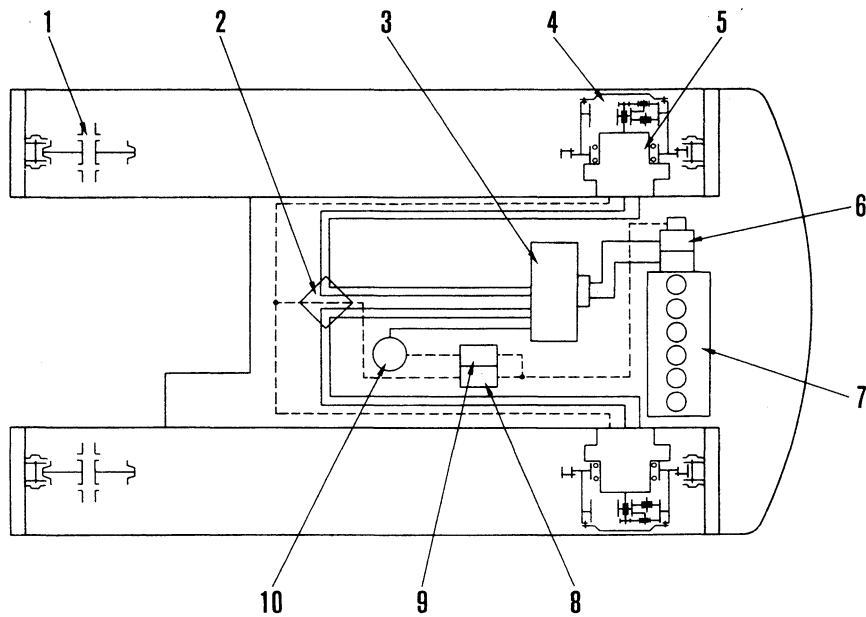


K20506

205F06001

- | | |
|------------------------|--------------------------------|
| 1. Idler | 7. Engine |
| 2. Center swivel joint | 8. Travel speed solenoid valve |
| 3. Control valve | 9. Swing brake solenoid valve |
| 4. Final drive | 10. Swing motor |
| 5. Travel motor | 11. Swing machinery |
| 6. Hydraulic pump | 12. Swing circle |

FINAL DRIVE

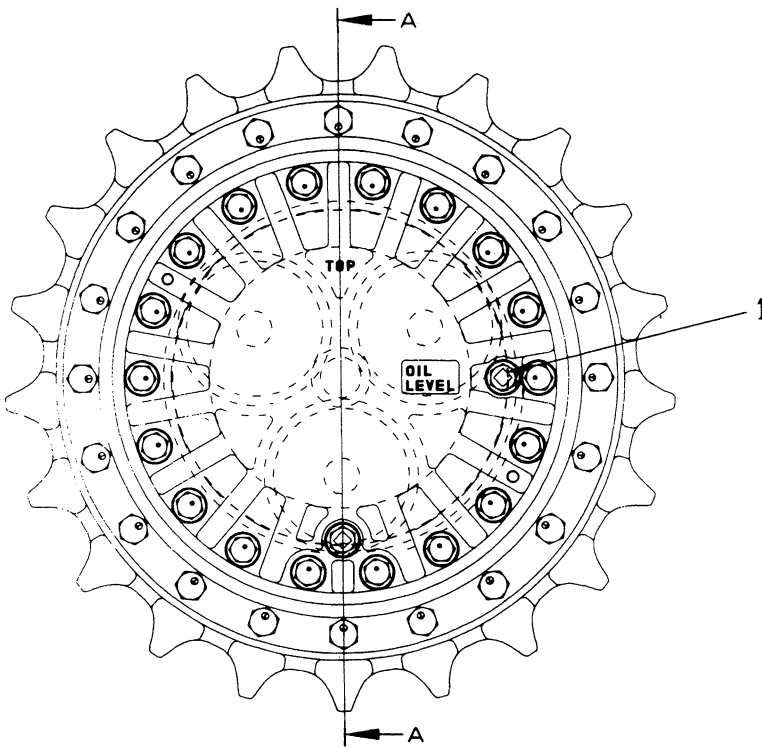


1. Level plug
2. Drain plug
3. No. 2 sun gear (No. of teeth: 12)
4. No. 1 sun gear (No. of teeth: 21)
5. No. 1 planetary carrier
6. Cover
7. No. 2 planetary carrier
8. Sprocket
9. Floating seal
10. Travel motor
11. Hub
12. No. 2 planetary gear (No. of teeth: 36)
13. Ring gear (No. of teeth: 84)
14. No. 1 planetary gear (No. of teeth: 31)

SPECIFICATIONS

Reduction ratio:



$$- \left(\frac{12+84}{12} \right) \times \left(\frac{12+84}{21} \right) + 1 = -39.000$$

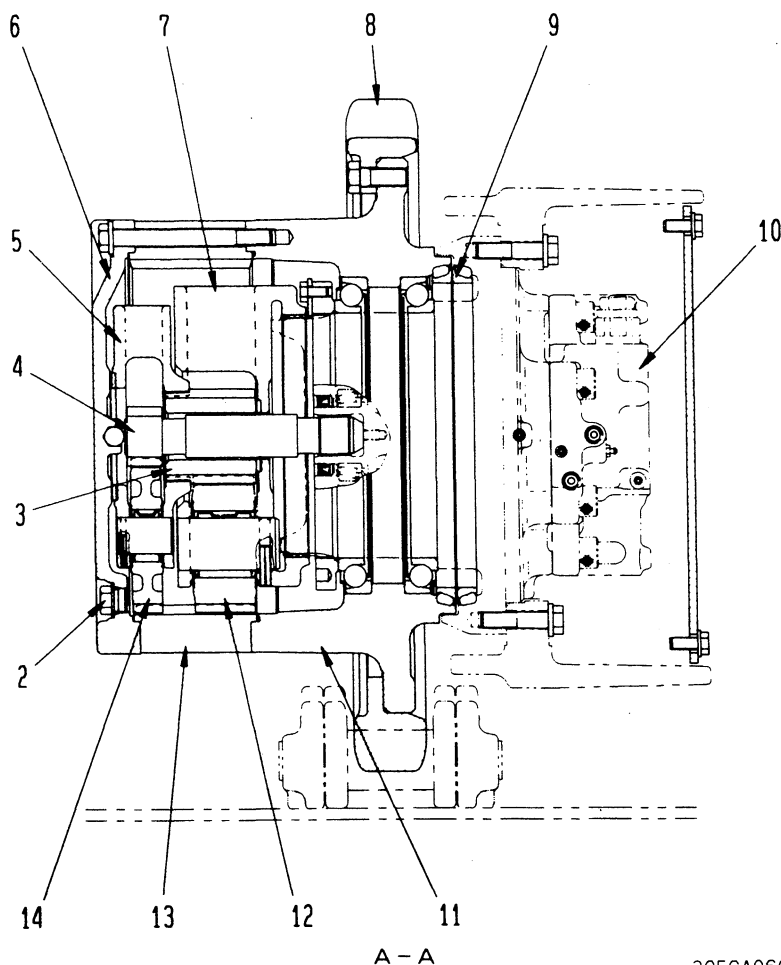


205CA06012

K20506

SWING CIRCLE

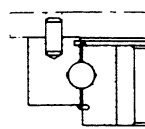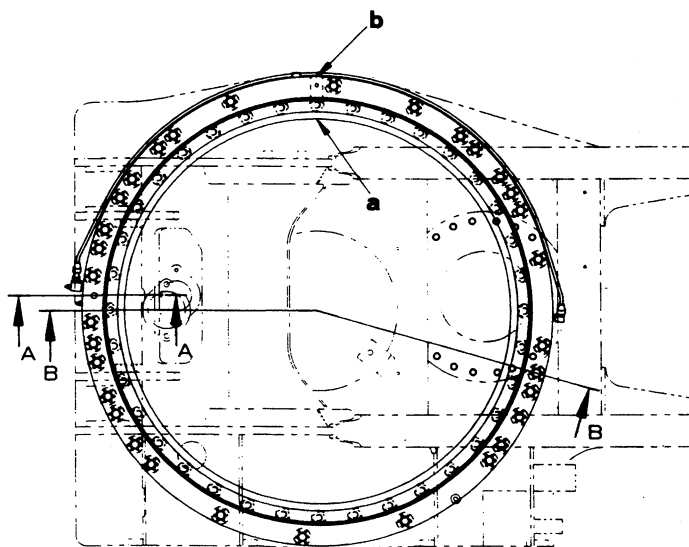

A - A

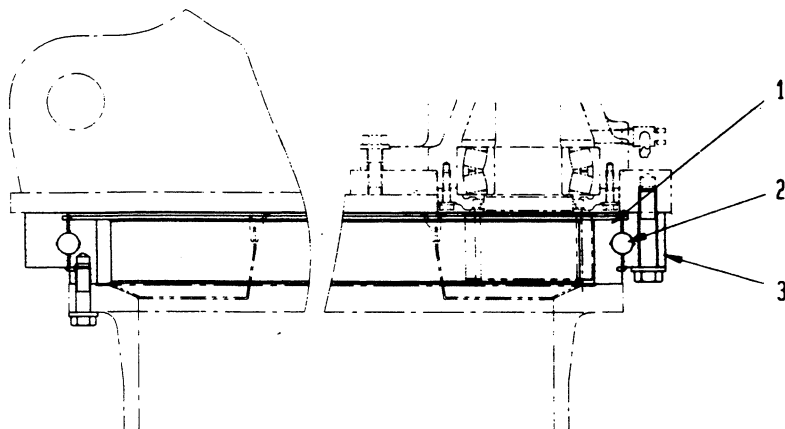

B - B

205CA06013

1. Swing circle inner race (No. of teeth: 110)
2. Ball
3. Swing circle outer race

- a. Inner race soft zone **S** position
- b. Outer race soft zone **S** position


SPECIFICATIONS

Reduction ratio: $\frac{110}{15} = 7.333$

Amount of grease: 21ℓ (G2-LI)

K20506

SWING MACHINERY

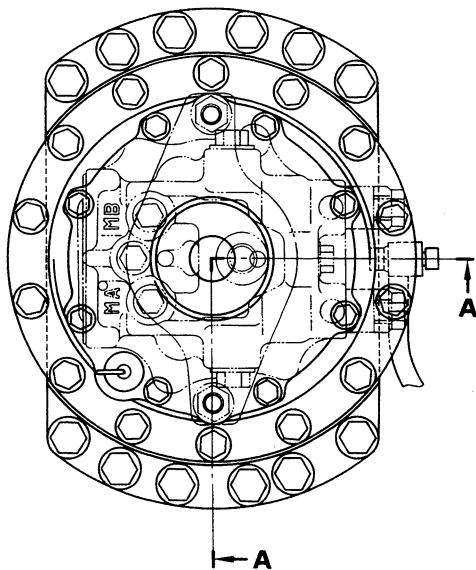


1. Swing pinion (No. of teeth: 15)
2. Cover
3. Case
4. No. 2 of planetary carrier
5. No. 2 sun gear (No. of teeth: 15)
6. No. 2 ring gear (No. of teeth: 72)
7. Case
8. No. 1 ring gear (No. of teeth: 72)
9. No. 1 sun gear (No. of teeth: 21)
10. Swing motor
11. Oil level gauge
12. Cover
13. No. 1 planetary gear (No. of teeth: 25)
14. No. 1 planetary carrier
15. Coupling
16. No. 2 planetary gear (No. of teeth: 28)
17. Drain plug

SPECIFICATIONS

Reduction ratio:

$$\frac{21+72}{21} \times \frac{15+72}{15} = 25.686$$

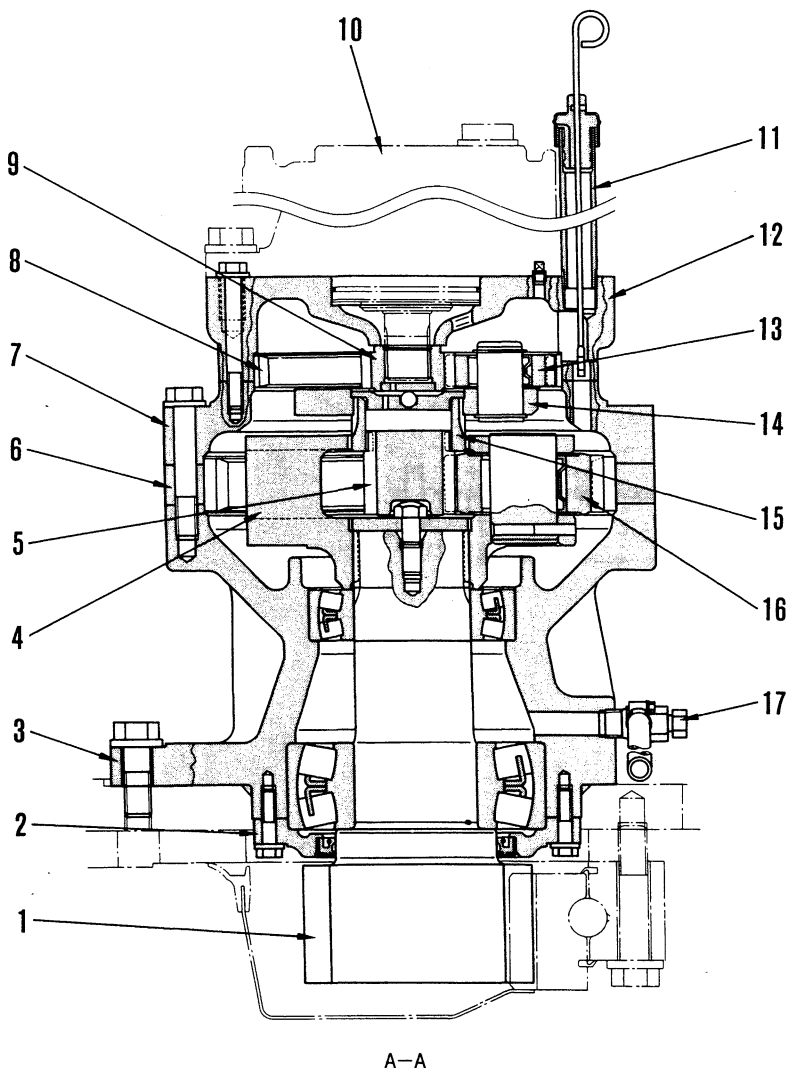


A-A

205F06002

K20506

TRACK FRAME • RECOIL SPRING

★ The diagram shows the PC210-6K.

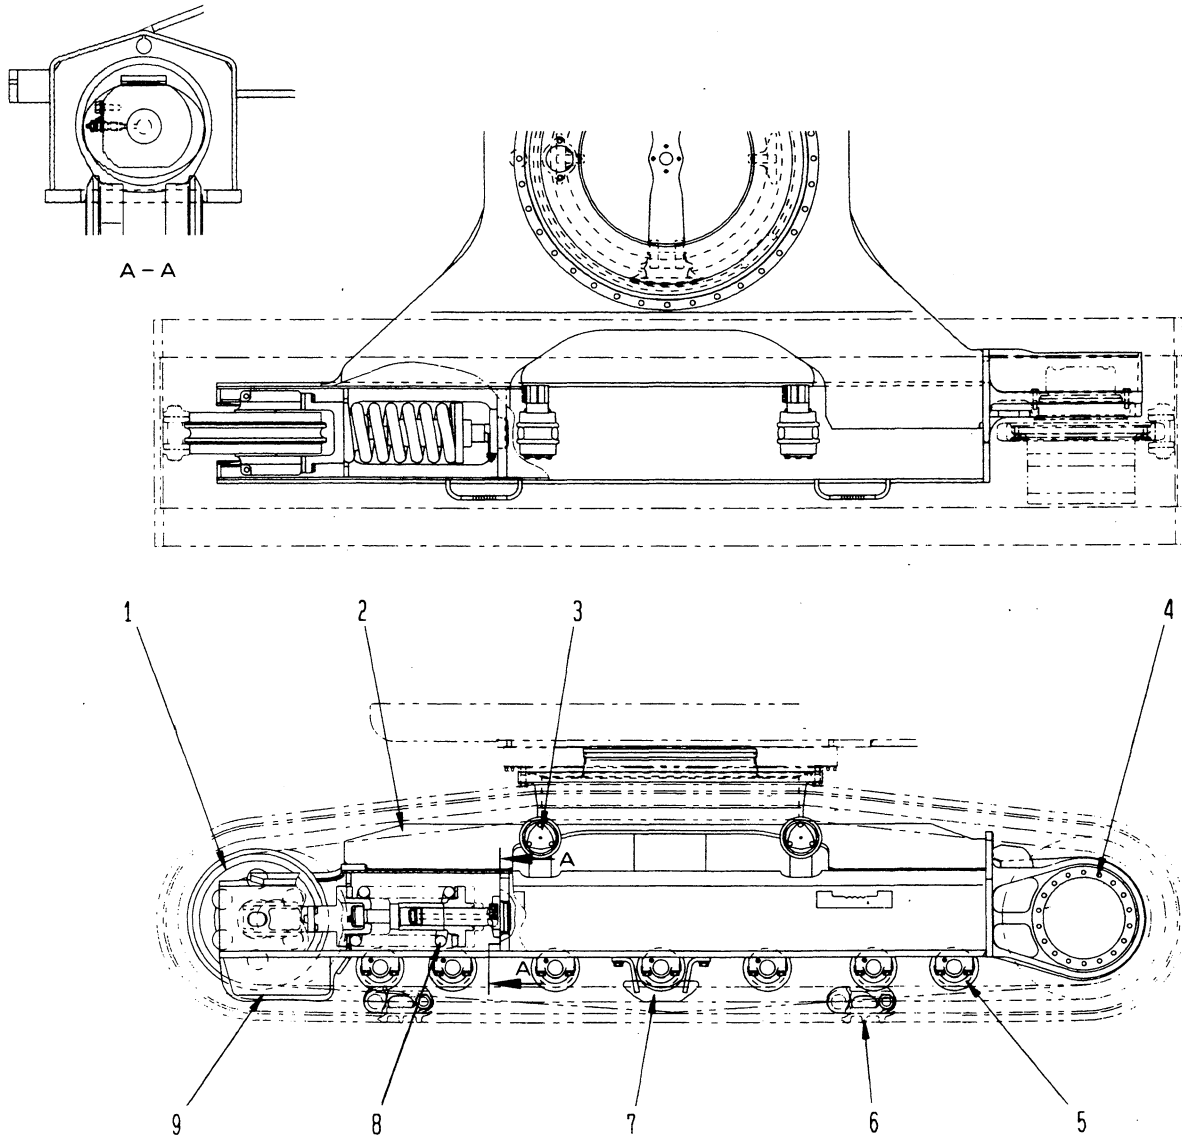

205CA06015

K20506

1. Idler
2. Track frame
3. Carrier roller
4. Final drive
5. Track roller
6. Track shoe
7. Center guard
8. Recoil spring
9. Front guard

- The dimensions and number of track rollers may differ according to the model, but the basic structure is the same.

- No. of track rollers

Model	No. of rollers (each side)
PC210-6K	7
PC210LC-6K	9
PC240-6K	8
PC240LC-6K	10
PC240NLC-6K	9

TRACK SHOE

STANDARD SHOE

Item \ Model	PC210-6K	PC210LC-6K	PC240-6K	PC240LC-6K	PC240NLC-6K
Shoe width (triple shoe)	600 mm	700 mm	600 mm	700 mm	600 mm
Link pitch	190 mm	190 mm	190 mm	190 mm	190 mm
No. of rollers (each side)	45	49	47	51	49

SELECTION OF TRACK SHOE

- Select the most suitable track shoe from the following table.

Model	PC210-6K		PC210LC-6K		PC240-6K		PC240LC-6K		PC240NLC-6K	
	Specification	Category	Specification	Category	Specification	Category	Specification	Category	Specification	Category
Standard	600 mm triple	A	700 mm triple	A	600 mm triple	A	700 mm triple	B	600 mm triple	A
Option	700 mm triple	B	600 mm triple	B	700 mm triple	B	600 mm triple	A	700 mm triple	B
Option	800 mm triple	C	800 mm triple	C	—	—	800 mm triple	C	800 mm triple	C
Option	—	—	900 mm triple	C	—	—	—	—	900 mm triple	C
Option	—	—	—	—	—	—	900 mm triple	C	—	—
Option	—	—	—	—	—	—	—	—	—	—
Option	—	—	—	—	—	—	—	—	—	—

STRUCTURE AND FUNCTION**TRACK SHOE**




Category	Use	Precautions when using
A	Rocky ground, normal river soil	• Travel in Lo speed when traveling on rough ground with obstacles such as large boulders and fallen trees.
B	Normal soil, soft land	• Cannot be used on rough ground where there are large obstacles such as boulders and fallen trees. • Travel in Hi speed only on flat ground, and when it is impossible to avoid traveling obstacles, lower the travel speed to approx. half of Lo speed.
C	Extremely soft ground (swampy ground)	• Use only for ground where "A" and "B" sink and are impossible to use. • Cannot be used on rough ground where there are large obstacles such as boulders and fallen trees. • Travel in Hi speed only on flat ground, and when it is impossible to avoid traveling over obstacles, lower the travel speed to approx. half of Lo speed.

★ Categories "B" and "C" are wide shoes, so there are restrictions on their use. Therefore, before using, check the restrictions and consider carefully the conditions of use before recommending a suitable shoe width. If necessary, give the customer guidance in their use.

★ When selecting the shoe width, select the narrowest shoe possible within the range that will give no problem with flotation and ground pressure.
If a wider shoe than necessary is used, there will be a large load on the shoe, and this may lead to bending of the shoe, cracking of the links, breakage of the pins, loosening of the shoe bolts, or other problems.

K20506

HYDRAULIC TANK

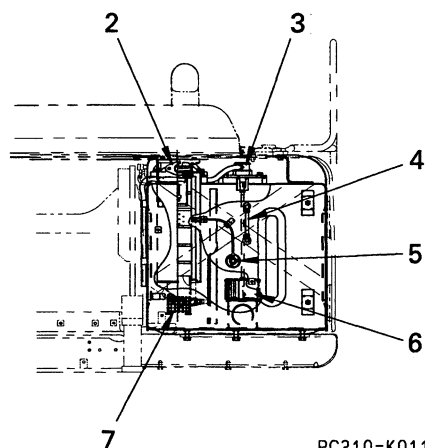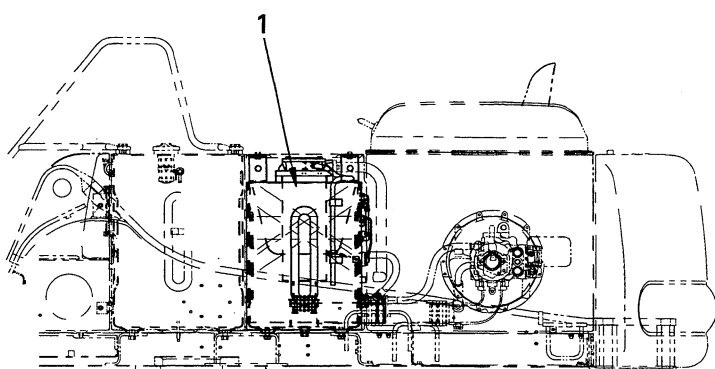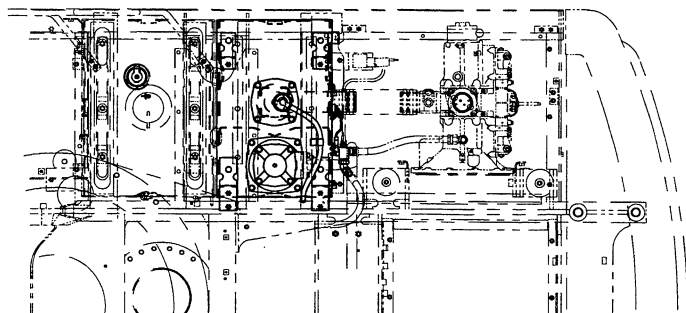

PC210-K011

K20506

1. Hydraulic tank
2. Bypass valve
3. Oil filter cap
4. Sight gauge
5. Hydraulic oil level sensor
6. Suction strainer
7. Filter element

SPECIFICATIONS

Tank capacity: 230ℓ

Amount of oil inside tank: 166ℓ


Pressure valve

Relief cracking pressure: 0.017 ± 0.004 MPa
(0.17 ± 0.04 kg/cm²)

Suction cracking pressure: $0 - 0.0005$ MPa
($0 - 0.005$ kg/cm²)

Bypass valve set pressure: 0.103 ± 0.02 MPa
(1.05 ± 0.2 kg/cm²)

HYDRAULIC PUMP

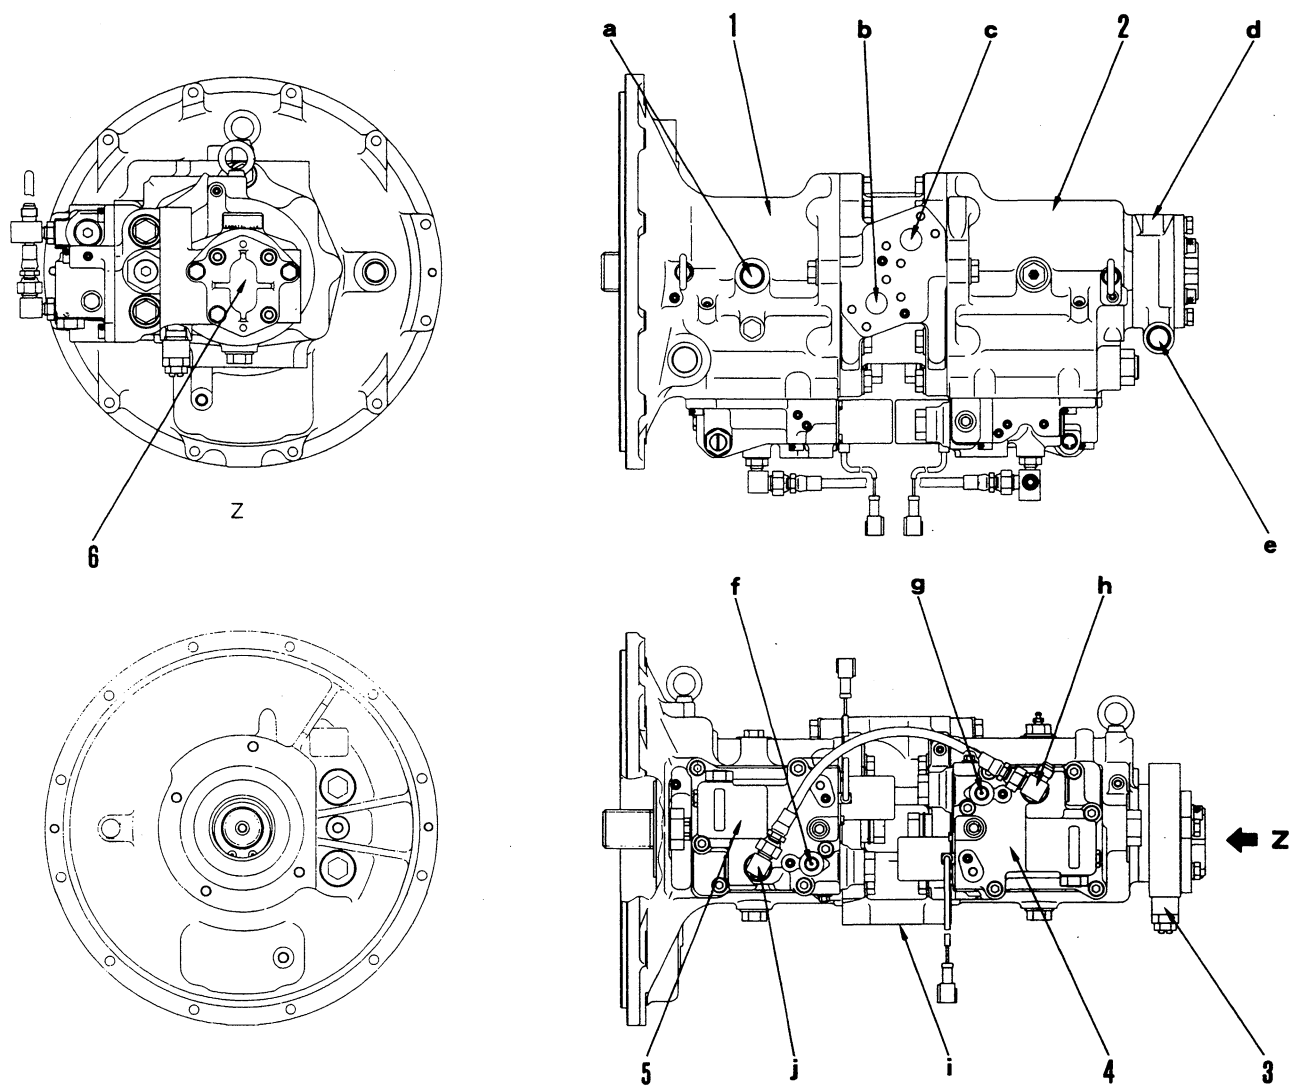


205F06005




- a. Pump drain port **PDF**
- b. Front delivery port **PAF**
- c. Rear delivery port **PAR**
- d. Control pump suction port **PGS**
- e. Control pump delivery port **PGA**
- f. Front LS pressure port **PLSF**
- g. Rear LS pressure port **PLSR**
- h. LS control EPC pressure port **PSIGR**
- i. Main pump suction port **PS**
- j. LS control EPC pressure port **PSIGF**

- 1. Front main pump
- 2. Rear main pump
- 3. Control relief valve
- 4. Rear TVC•LS valve
- 5. Front TVC•LS valve
- 6. Control pump

1. MAIN PUMP (HPV95+95)

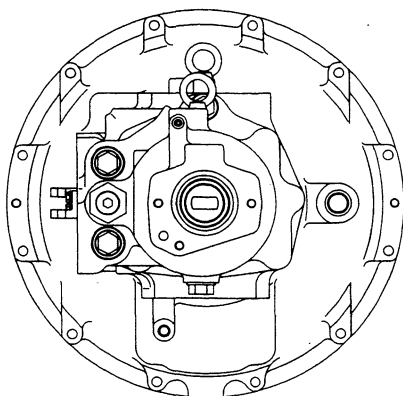

Z

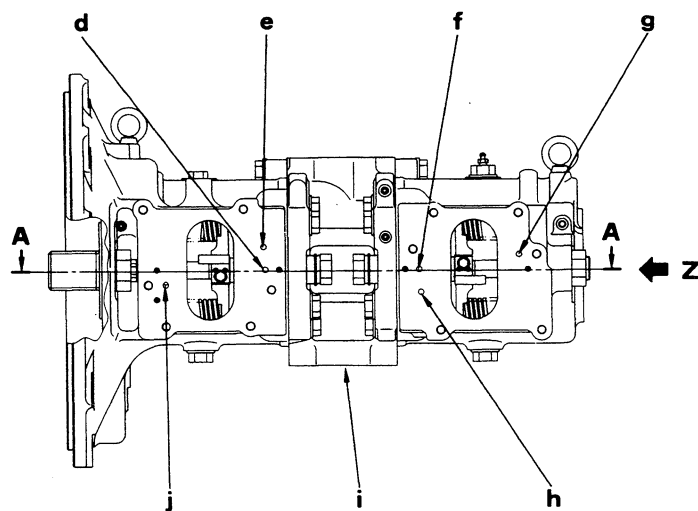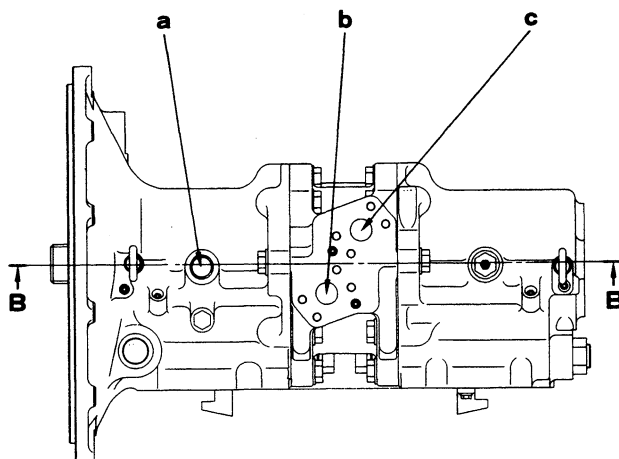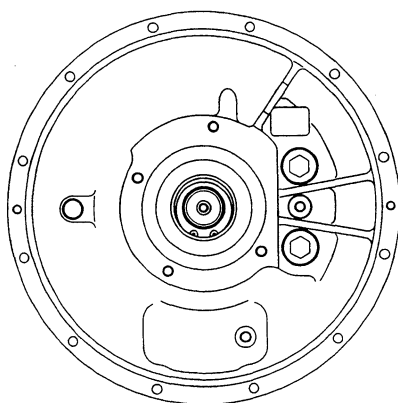

K20506

205F06006

- a. Pump drain port **PDF**
- b. Front delivery port **PAF**
- c. Rear delivery port **PAR**
- d. Front control pressure **PENF**
- e. Rear delivery pressure port **PA2R**
- f. Front delivery pressure port **PA2F**
- g. Rear delivery pressure port **PA1R**
- h. Rear control pressure port **PENR**
- i. Suction port **PS**
- j. Front delivery pressure port **PA1F**

OPERATION

1. Operation of pump

- 1) Cylinder block (7) rotates together with shaft (1), and shoe (5) slides on flat surface A.


When this happens, rocker cam (4) moves along cylindrical surface B, so angle α between center line X of rocker cam (4) and the axial direction of cylinder block (7) changes. (Angle α is called the swash plate angle.)

- 2) Center line X of rocker cam (4) maintains swash plate angle α in relation to the axial direction of cylinder block (7), and flat surface A moves as a cam in relation to shoe (5).


In this way, piston (6) slides on the inside of cylinder block (7), so a difference between volume E and F is created inside cylinder block (7). The suction and discharge is carried out by this difference F - E.

In other words, when cylinder block (7) rotates and the volume of chamber E becomes smaller, the oil is discharged during that stroke. On the other hand, the volume of chamber F becomes larger, and as the volume becomes bigger, the oil is sucked in.


- 3) If center line X of rocker cam (4) is in line with the axial direction of cylinder block (7) (swash plate angle = 0), the difference between volumes E' and F' inside cylinder block (7) becomes 0, so the pump does not carry out any suction or discharge of oil. (In actual fact, the swash plate angle never becomes 0.)

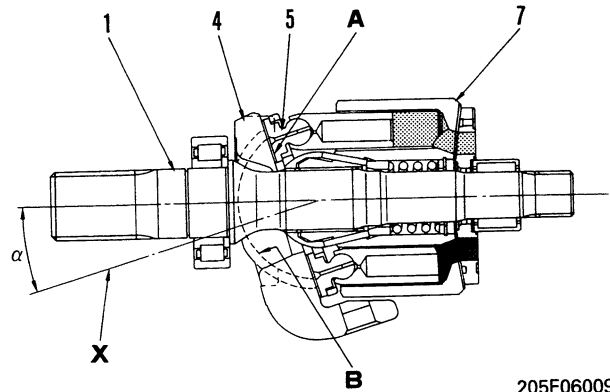

205F06009

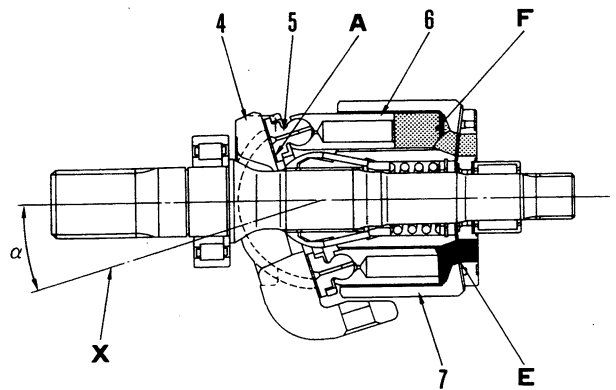


205F06010

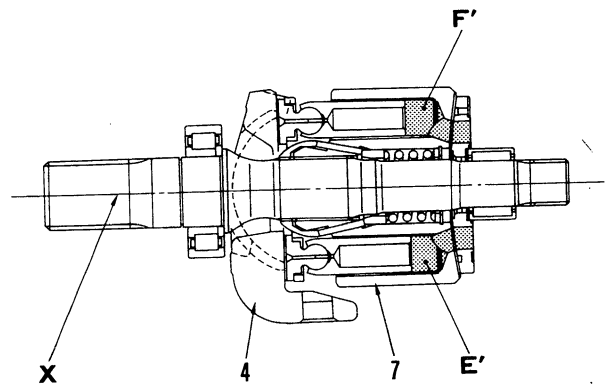

205F06011



2. Control of discharge amount

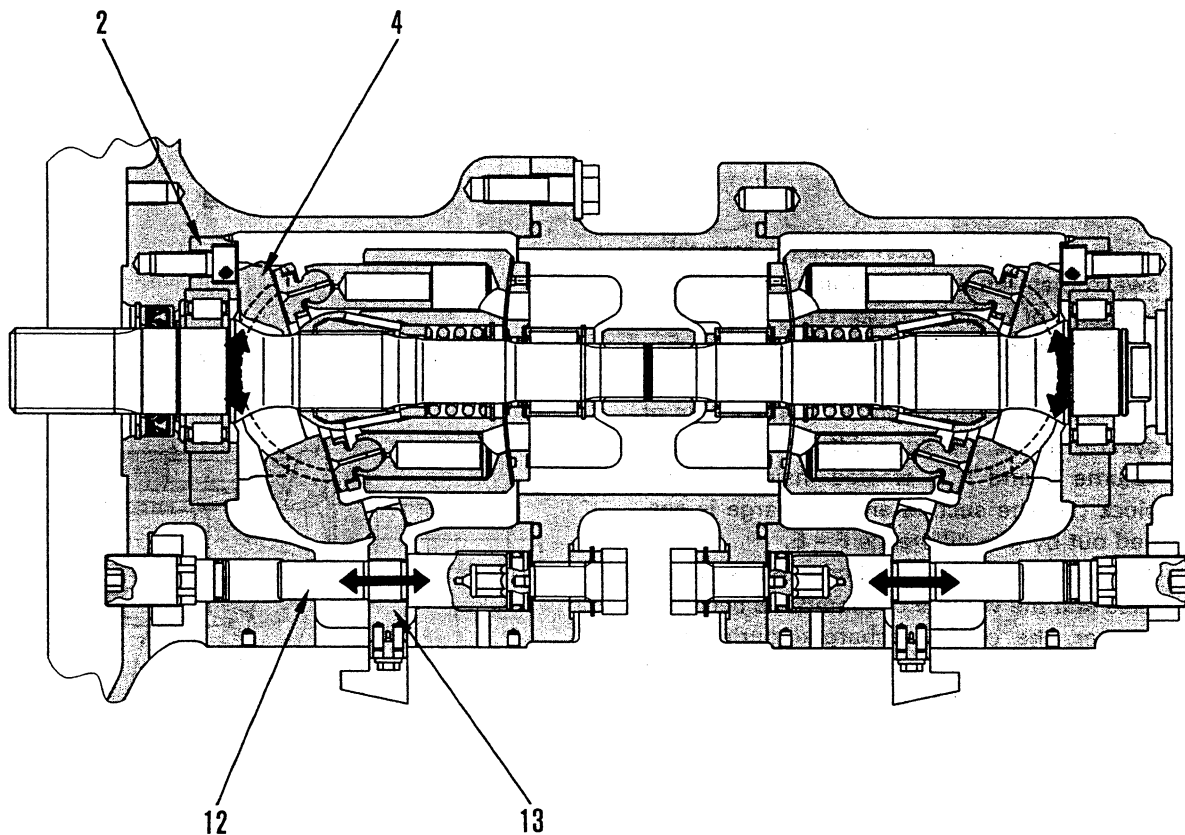

K20506

205F06012


- If swash plate angle α becomes larger, the difference in volumes **E** and **F** becomes larger and discharge volume **Q** increases.
- Swash plate angle α is changed by servo piston (12).
- Servo piston (12) moves in a reciprocal movement ($\leftrightarrow$) according to the command from the TVC•LS valve.
- This straight line movement is transmitted through rod (13) to rocker cam (4), and rocker cam (4), which is supported by the cylindrical surface to cradle (2), moves in a swinging movement on the cylindrical surface in ($\curvearrowright$ direction).
- With servo piston (12), the area receiving the pressure is different on the left and right, so main pump discharge pressure (self-pressure) **PP** is always connected to the chamber receiving the pressure on the small diameter piston side (the self-pressure is brought in).
- Output pressure **PEN** of the LS valve is brought to the chamber receiving the pressure at the large diameter piston end.
- The relationship in the size of self-pressure **PP** and the pressure at the small diameter piston end, and the ratio between the area receiving the pressure of the small diameter piston and the large diameter piston controls the movement of servo piston (12).

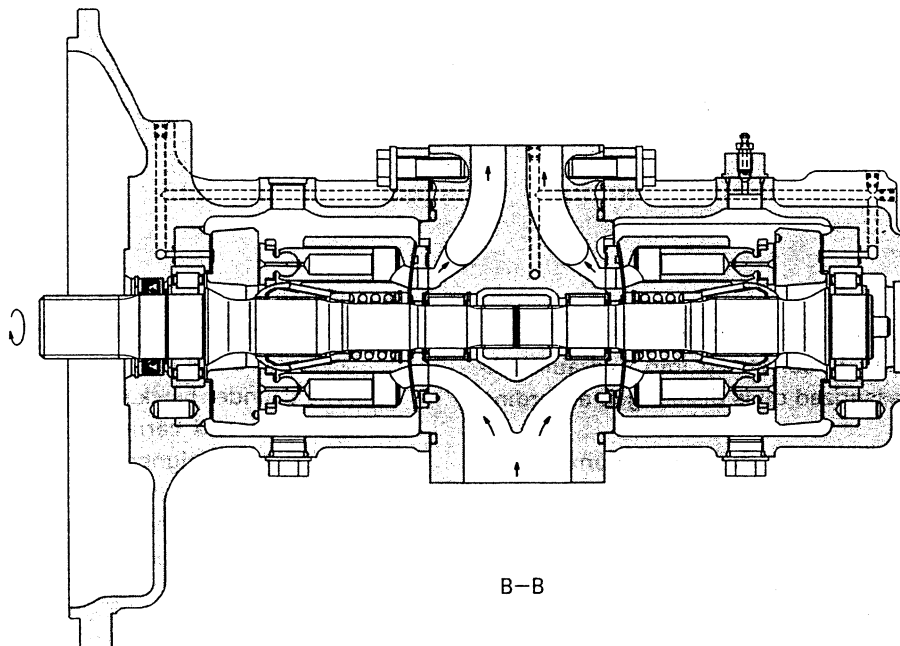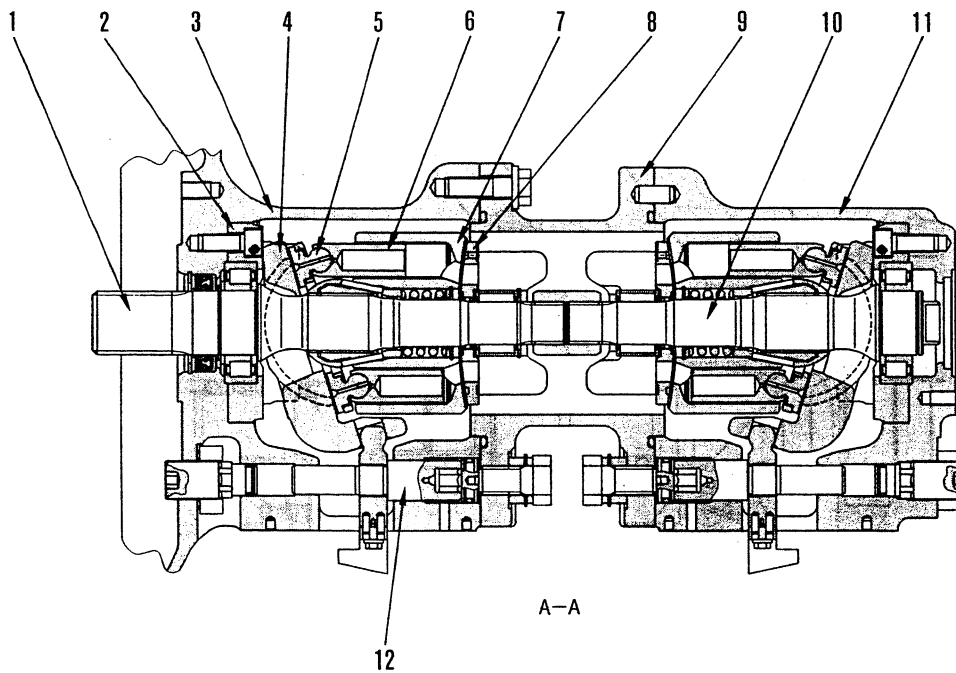

1. Front shaft
2. Cradle
3. Front case
4. Rocker cam
5. Shoe
6. Piston

7. Cylinder block
8. Valve plate
9. End cap
10. Rear shaft
11. Rear case
12. Servo piston

205F06007

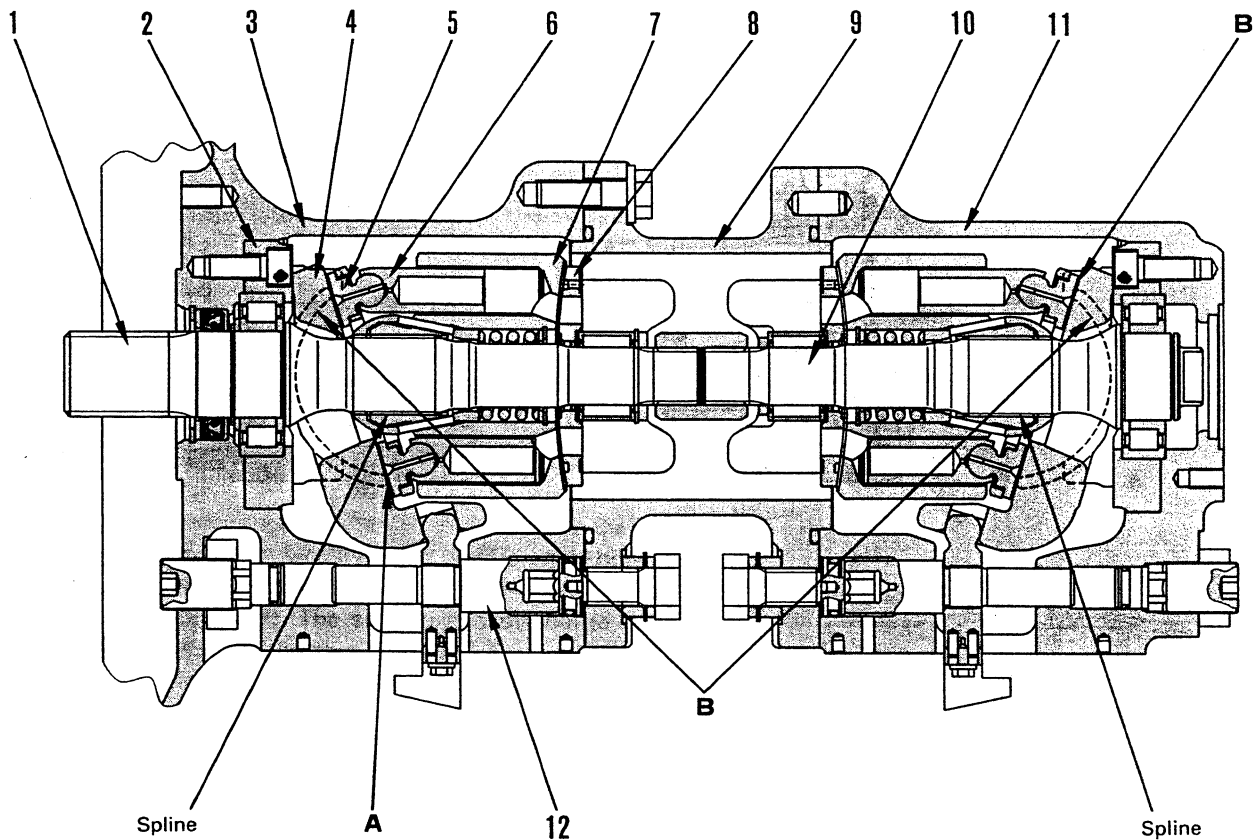

205F06008

FUNCTION

- The engine rotation and torque transmitted to the pump shaft is converted into hydraulic energy, and pressurized oil is discharged according to the load.
- It is possible to change the delivery amount by changing the swash plate angle.


STRUCTURE

- Cylinder block (7) is supported to shaft (1) by a spline, and shaft (1) is supported by the front and rear bearings.
- The tip of piston (6) is a concave ball, and shoe (5) is caulked to it to form one unit. Piston (6) and shoe (5) form a spherical bearing.
- Rocker cam (4) has flat surface A, and shoe (5) is always pressed against this surface while sliding in a circular movement.
- Rocker cam (4) brings high pressure oil at cylindrical surface B with cradle (2), which is secured to the case, and forms a static pressure bearing when it slides.

- Piston (6) carries out relative movement in the axial direction inside each cylinder chamber of cylinder block (7).
 - The cylinder block seals the pressure oil to valve plate (8) and carries out relative rotation. This surface is designed so that the oil pressure balance is maintained at a suitable level.
- The oil inside each cylinder chamber of cylinder block (7) is sucked in and discharged through valve plate (8).

K20506

2. TVC • LS VALVE

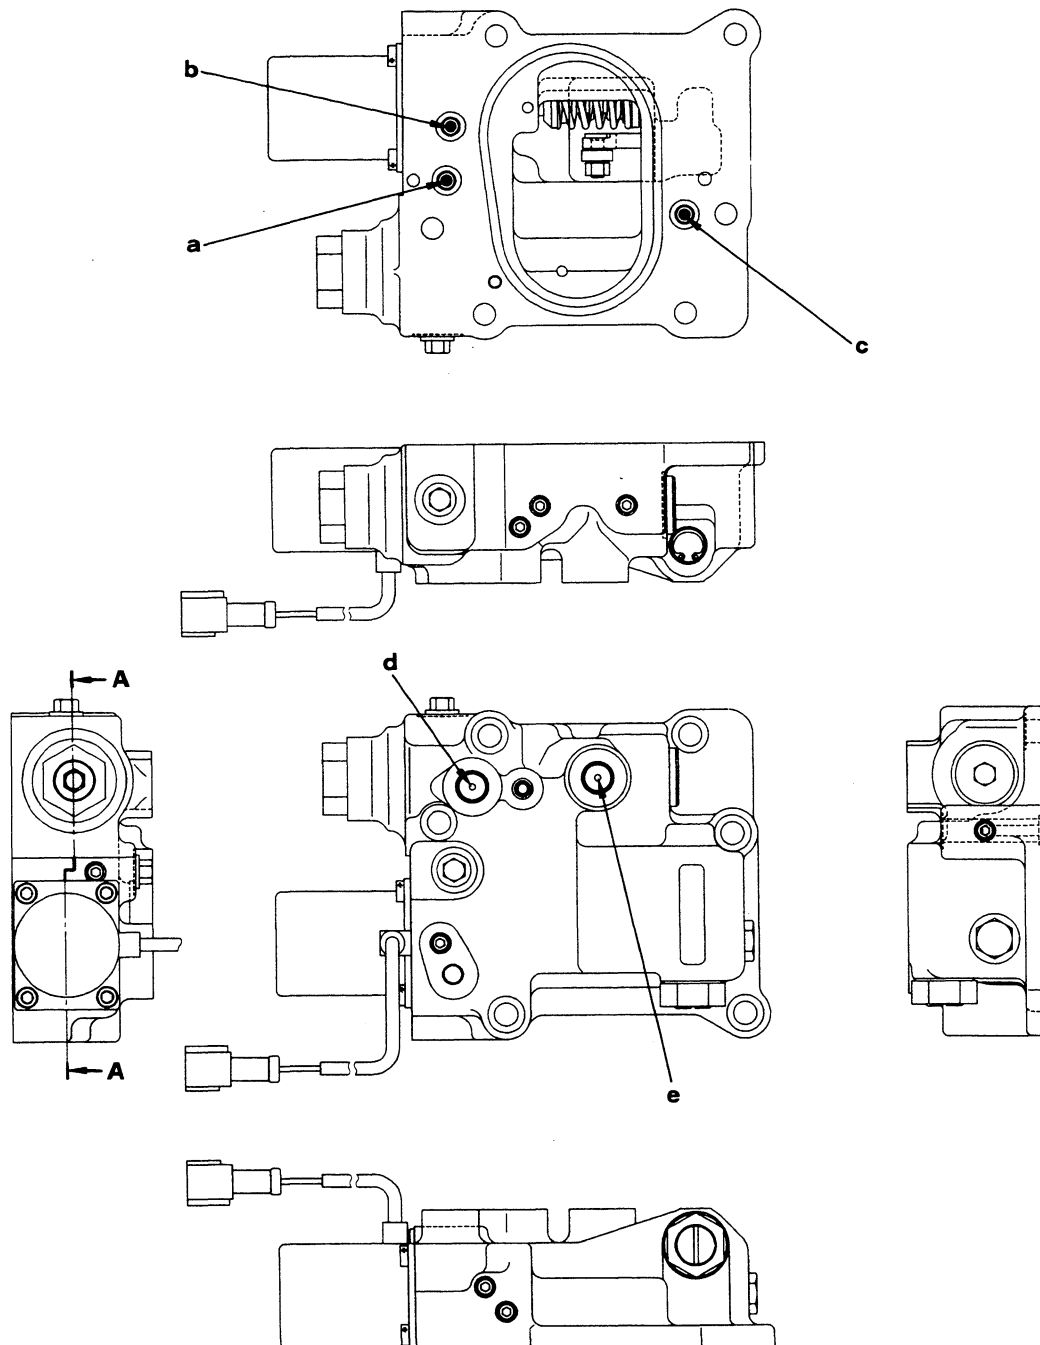


K20506


205F06015

- a. Port **PA2** (Pump delivery pressure inlet port)
- b. Port **PEN** (TVC•LS valve signal pressure outlet port)
- c. Port **PA1** (Pump delivery pressure inlet port)


- d. Port **PLS** (Control valve LS pressure inlet port)
- e. Port **PSIG** (LS control EPC valve pressure inlet port)

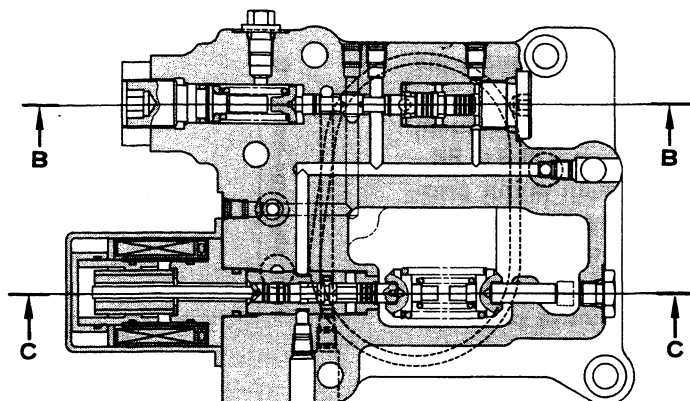

A - A

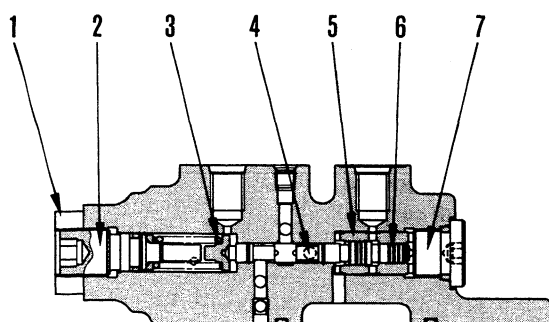

B - B

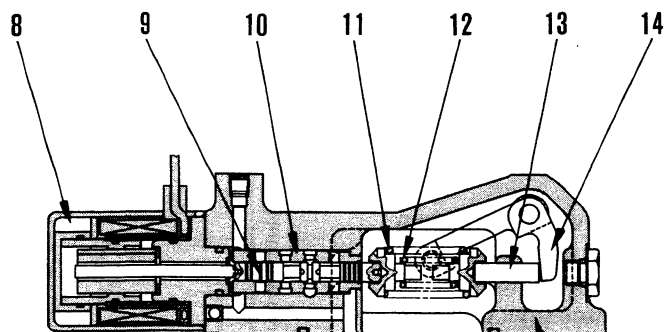

C - C

15

205F06289

LS VALVE

1. Locknut
2. Plug
3. Spring
4. Spool
5. Sleeve
6. Piston
7. Plug

TVC VALVE


8. Solenoid
9. Piston
10. Sleeve
11. Spring
12. Spring
13. Spring
14. Lever
15. Valve body

K20506

FUNCTION

1. LS VALVE


- The **LS** valve detects the load and controls the discharge amount.
This valve controls main pump discharge amount **Q** according to differential pressure ΔPLS ($= \text{PP} - \text{PLS}$) (the difference between main pump pressure **PP** and control valve outlet port pressure **PLS**) (called the **LS** differential pressure).
- Main pump pressure **PP**, pressure **PLS** (called the **LS** pressure) coming from the control valve output, and pressure **PSIG** (called the **LS** selection pressure) from the proportional solenoid valve enter this valve. The relationship between discharge amount **Q** and differential pressure ΔPLS , (the difference between main pump pressure **PP** and **LS** pressure **PLS**) ($= \text{PP} - \text{PLS}$) changes as shown in the diagram on the right according to **LS** selector pressure **PSIG**.
- When **PSIG** changes between 0 and 2.94 MPa (0 and 30 kg/cm²), the spool load changes according to this, and the selector point for the pump discharge amount changes at the rated central value between 0.64 and 2.11 MPa (6.5 and 21.5 kg/cm²).

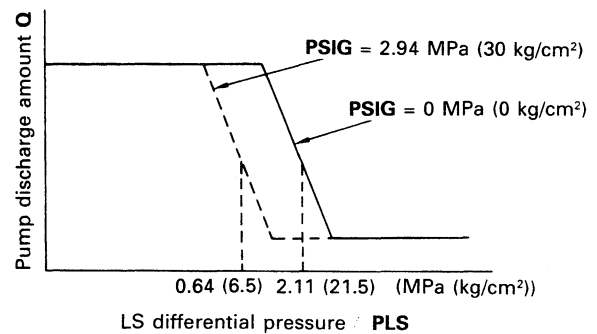

205F06017

2. TVC VALVE

- When the pump discharge pressure **PP1** (self-pressure) and **PP2** (other pump pressure) are high, the TVC valve controls the pump so that no more oil than the constant flow (in accordance with the discharge pressure) flows even if the stroke of the control valve becomes larger. In this way it carries out equal horsepower control so that the horsepower absorbed by the pump does not exceed the engine horsepower.
- In other words, if the load during the operation becomes larger and the pump discharge pressure rises, it reduces the discharge amount from the pump; and if the pump discharge pressure drops, it increases the discharge amount from the pump. The relationship between the average of the front and rear pump discharge pressures $(\text{PP1} + \text{PP2})/2$ and pump discharge amount **Q** is shown on the right, with the current given to the TVC valve solenoid shown as a parameter. However, in the heavy-duty operation mode, there are cases where it is given the function of sensing the actual speed of the engine, and if the speed drops because

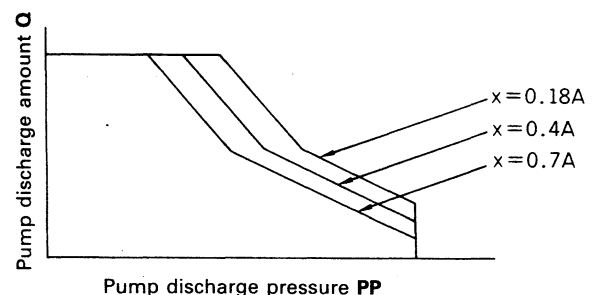

205F06018

of an increase in the load, it reduces the pump discharge amount to allow the speed to recover. In other words, when the load increases and the engine drops below the set value, the command to the TVC valve solenoid from the controller increases according to the drop in the engine speed to reduce the pump swash plate angle.


STRUCTURE AND FUNCTION

HYDRAULIC PUMP

OPERATION


1. LS VALVE

1) When control valve is at neutral position

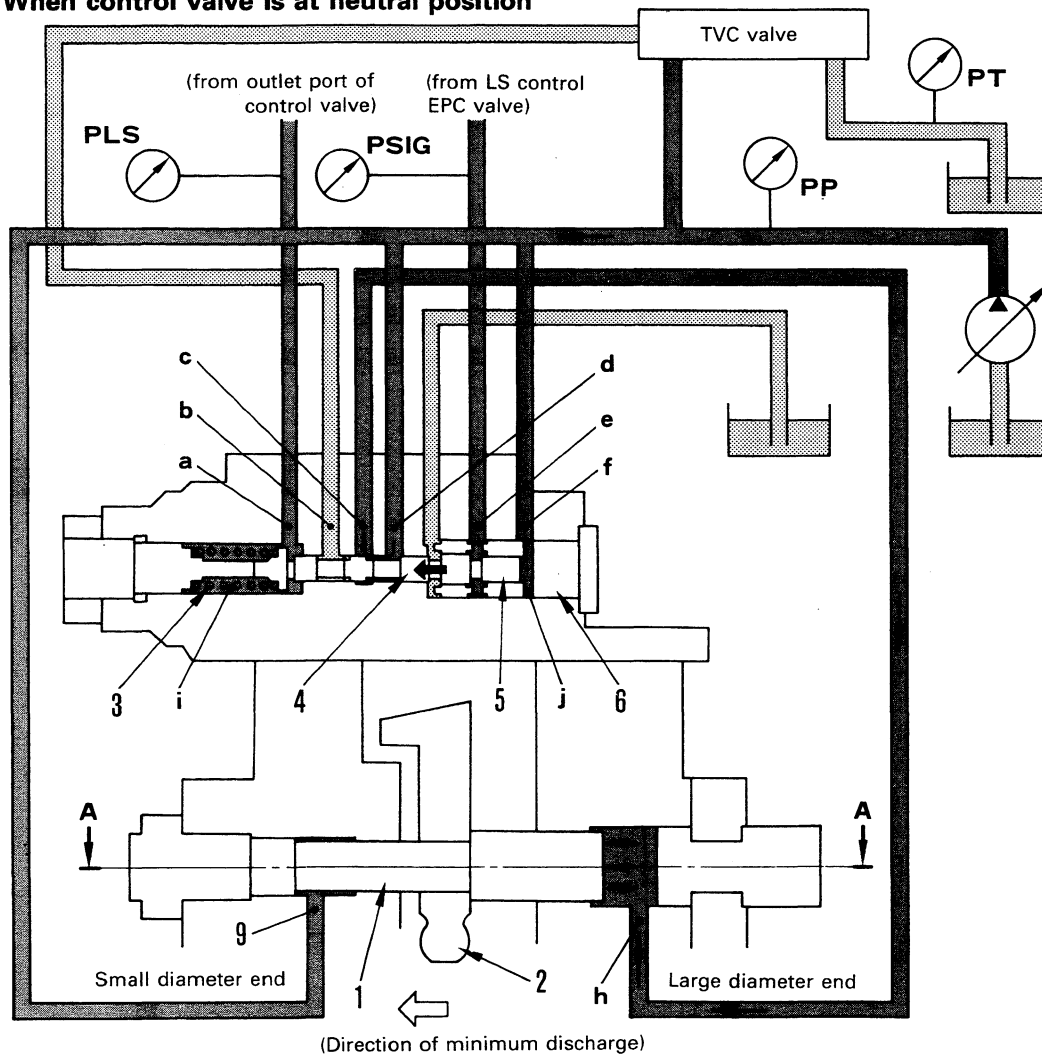

205F06019

- The LS valve is a three-way selector valve, with pressure **PLS** (LS pressure) from the outlet port of the control valve brought to spring chamber "i", and main pump discharge pressure **PP** brought to chamber "j" of plug (6). The size of this LS pressure **PLS** + force **F** of spring (3) and the main pump pressure (self- pressure) **PP** determines the position of spool (4). However, the size of the output pressure **PSIG** (the LS selection pressure) of the EPC valve for the LS valve entering port "e" also changes the position of spool (4). (The set pressure of the spring changes.)
- Before the engine is started, servo piston (1) is pushed to the right by spring (7) installed to rod (2). (See the diagram on the right)
- When the engine is started and the control lever is at the neutral position, LS pressure **PLS** is 0 MPa (0 kg/cm²). (It is interconnected with the drain circuit through the control valve spool.)

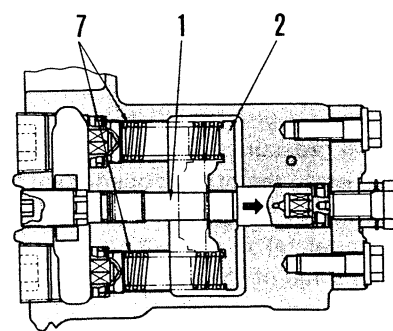


A — A

205F06020

- At this point, spool (4) is pushed to the left, and port "d" and port "c" are connected. Pump pressure **PP** enters the large diameter end of the piston from port "h", and the same pump pressure **PP** also enters the small diameter end of the piston, so the swash plate is moved to the minimum angle by the difference in area of piston (1).


2) Operation in maximum direction for pump discharge amount

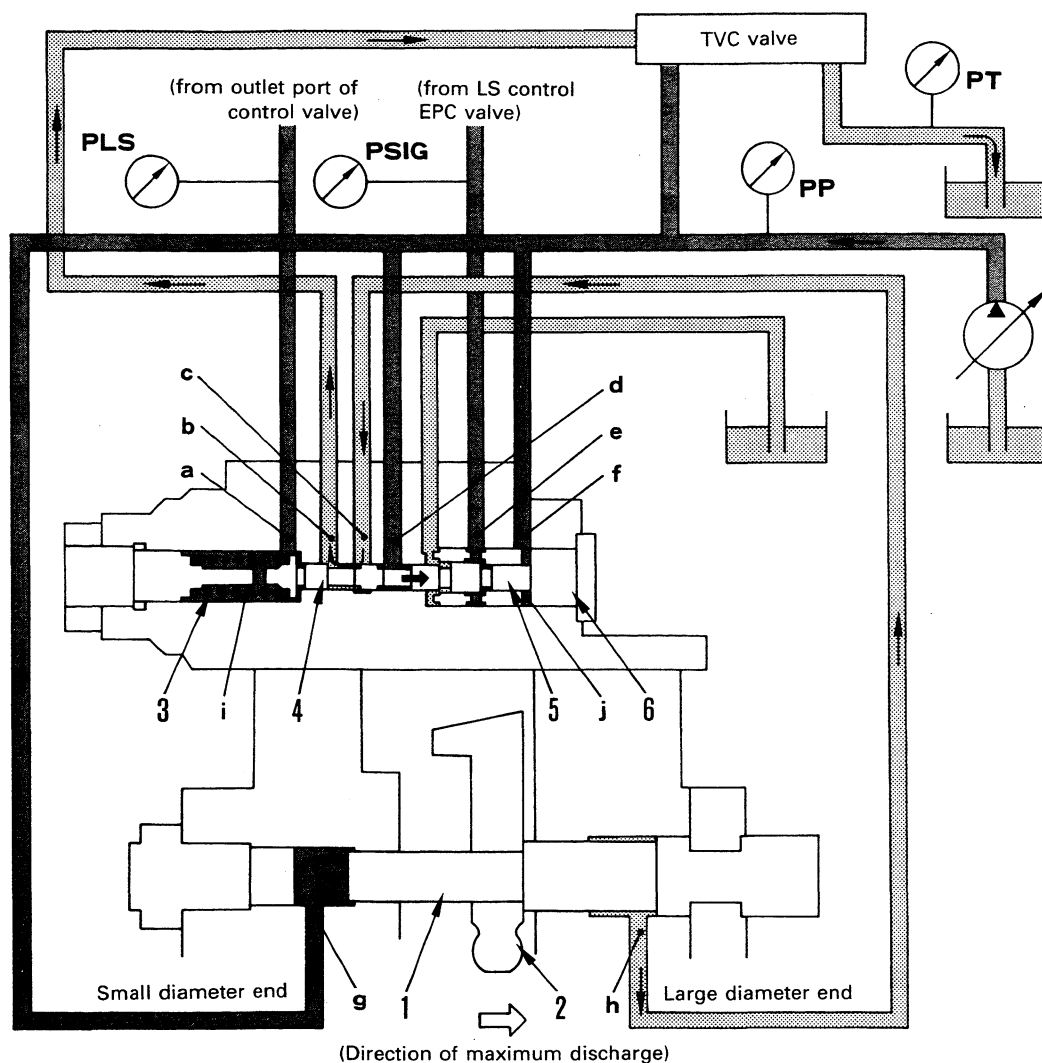

205F06021

- When the difference between main pump pressure **PP** and LS pressure **PLS**, in other words, LS differential pressure ΔPLS , becomes smaller (for example, when the area of opening of the control valve becomes larger and pump pressure **PP** drops), spool (4) is pushed to the right by the combined force of LS pressure **PLS** and the force of spring (3).
- When spool (4) moves, port "b" and port "c" are joined and connected to the TVC valve. When this happens, the TVC valve is connected to the drain port, so circuit "c" - "h" becomes drain pressure **PT**. (The operation of the TVC valve is explained later.)
- For this reason, the pressure at the large piston diameter end of servo piston (1) becomes drain pressure **PT**, and pump pressure **PP** enters the small diameter end, so servo piston (1) is pushed to the right. Therefore, rod (2) moves to the right and moves the swash plate in the direction to make the discharge amount larger.
- If the output pressure **PSIG** of the EPC valve for the LS valve enters port "e", this pressure creates a force to move piston (5) to the left. If piston (5) is pushed to the left, it acts to make the set pressure of spring (3) weaker, and the difference between **PLS** and **PP** changes when ports "b" and "c" of spool (4) are connected.

3) Operation in minimum direction for pump discharge amount

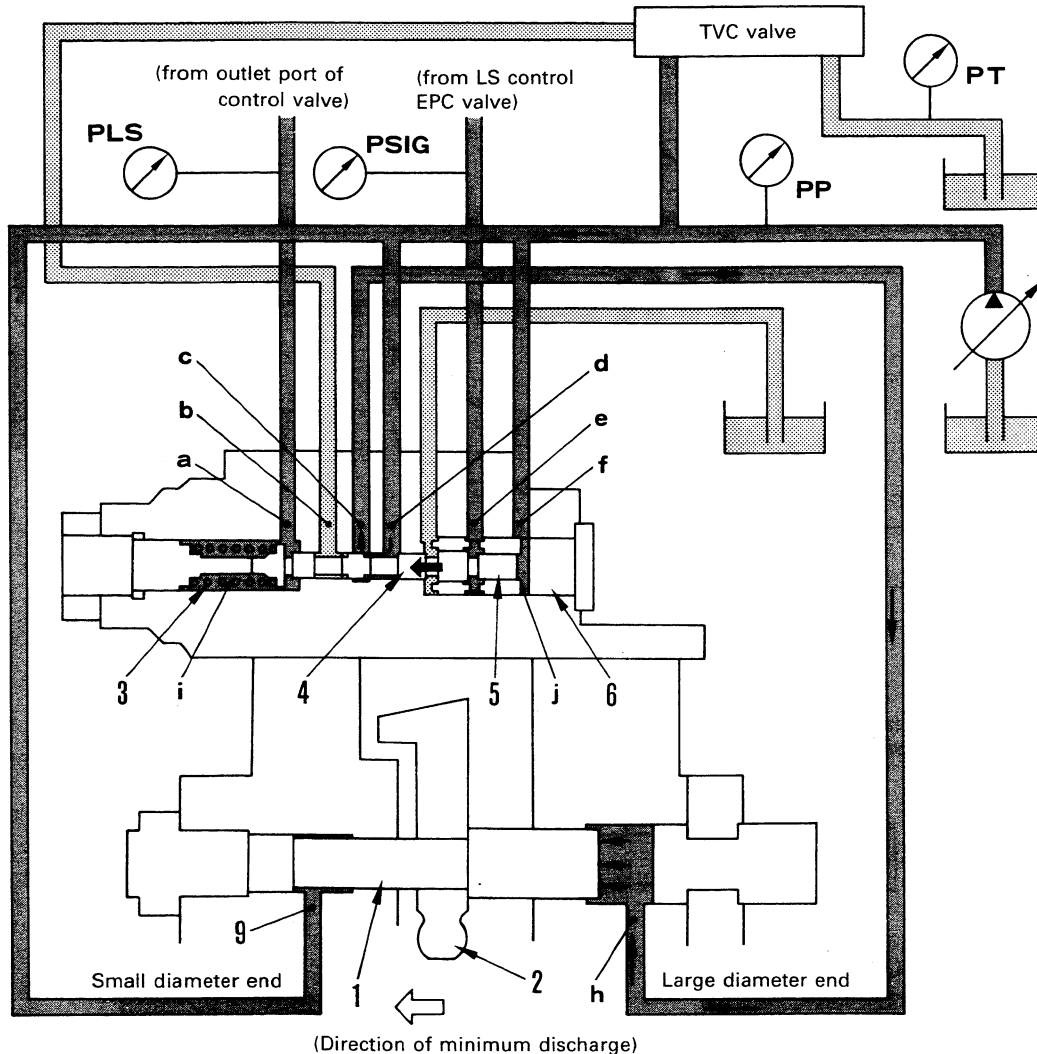


205F06022

- The following explains the situation if servo piston (1) moves to the left (the discharge amount becomes smaller). When LS differential pressure Δ PLS becomes larger (for example, when the area of opening of the control valve becomes smaller and pump pressure PP rises), pump pressure PP pushes spool (4) to the left.
- When spool (4) moves, main pump pressure PP flows from port "d" to port "c", and from port "h", it enters the large piston diameter end.
- Main pump pressure PP also enters the small piston diameter end, but because of the difference in area between the large piston diameter end of servo piston (1) and the small piston diameter end, servo piston (1) is pushed to the left. As a result, rod (2) moves in the direction to make the swash plate angle smaller.
- If LS selection pressure PSIG enters port "e", it acts to make the set pressure of spring (3) weaker.

TVC VALVE

When pump controller is normal

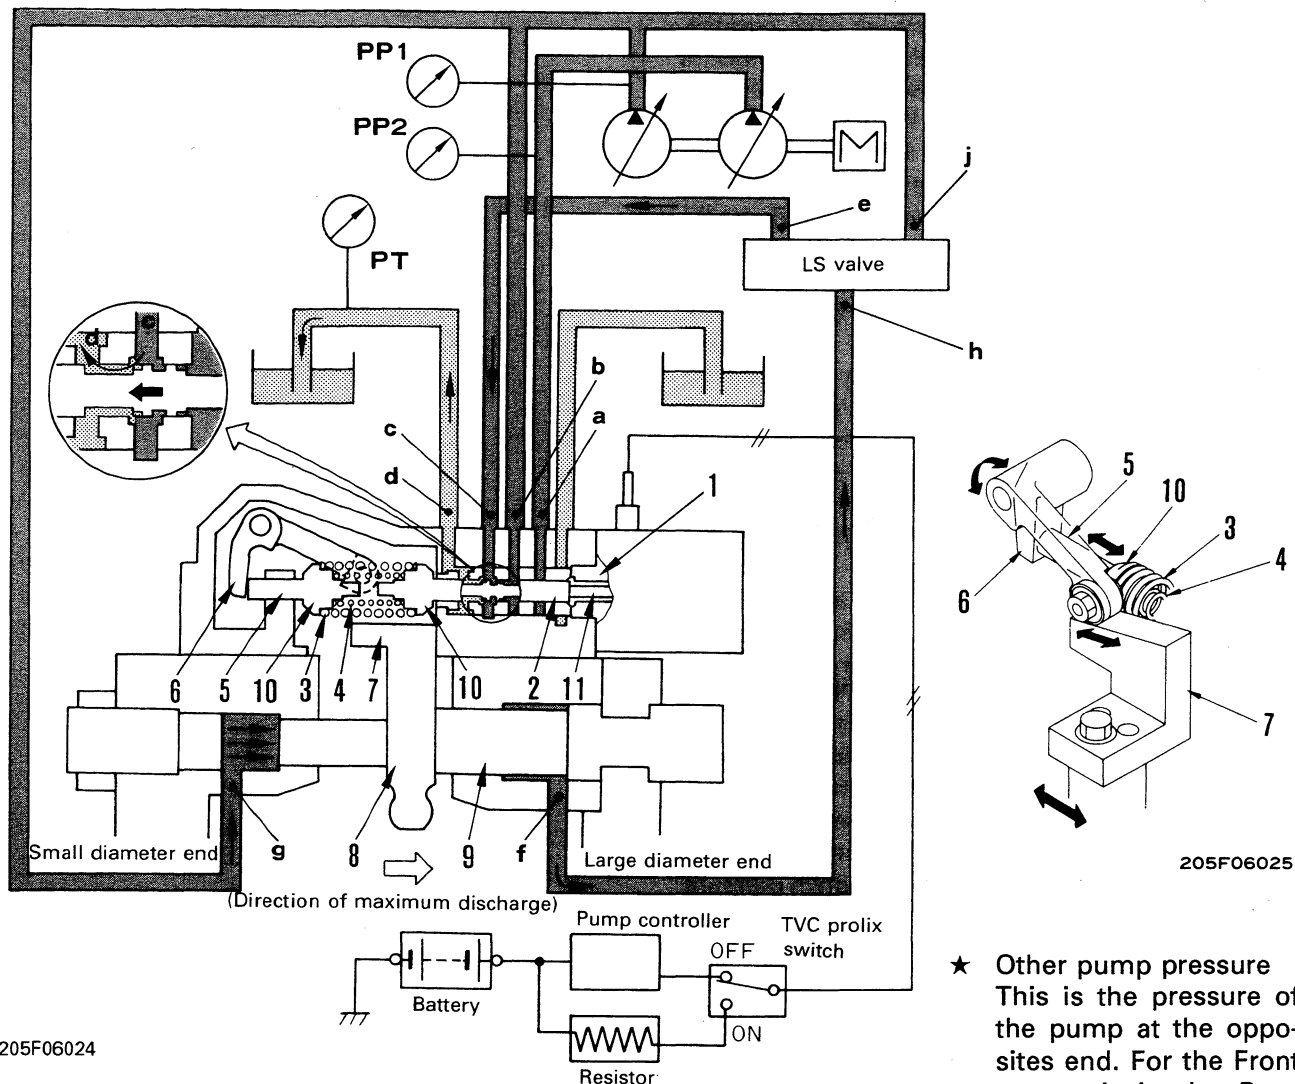


When the load on the actuator is small and pump pressures PP1 and PP2 are low

- Movement of solenoid (1)
Command current **X** from the pump controller flows to solenoid (1). This command current changes the internal force pushing solenoid push pin (11).
On the opposite side to the force pushing this solenoid push pin (11) is the spring set pressure of springs (3) and (4) and pump pressure **PP1** and other pump (see ★) pressure **PP2**. Piston (2) stops at a position where the combined force pushing piston (2) is balanced, and the pressure (pressure of port "c") output from the TVC valve changes according to this position.
- The size of command current **X** is determined by the nature of the operation (lever operation), the selection of the working mode, and the set value and actual value for the engine speed.

(2) Movement of spring

- The spring load springs (3) and (4) in the TVC valve is determined by the swash plate position
- When servo piston (9) moves, cam (7), which is connected to rod (8), also moves. When this happens, lever (6) is rotated by the angle of cam (7), and piston (5) moves to the right and left.
- If piston (5) moves to the right, spring (3) is compressed, and if it moves further to the right, spring (4) contacts seat (10), so both spring (3) and spring (4) function. In other words, the spring load is changed by piston (5) extending or contracting springs (3) and (4).
- If command current **X** input to solenoid (1) changes further, the force pushing solenoid push pin (11) changes, and the spring load of springs (3) and (4) also changes according to the value of the solenoid command current.
- Port "c" of the TVC valve is connected to port "e" of the LS valve (see 1. LS valve). Self pressure **PP1** enters port "b" and the small piston diameter end of servo piston (9), and the other pump pressure enters port "a".
- When pump pressures **PP1** and **PP2** are small, piston (2) is on the right. At this point, port "c" and port "d" are connected, and the pressure entering the LS valve becomes drain pressure **PT**. If port "h" and port "e" of the LS valve are connected (see 1. LS valve), the pressure entering the large piston diameter end from port "f" becomes drain pressure **PT**, and servo piston (9) moves to the right. In this way, the pump discharge amount moves in the direction of increase.
- As servo piston (9) moves further, piston (5) is moved to the left by rod (8), cam (7), and lever (6). Springs (3) and (4) expand and the spring force becomes weaker. When the spring force becomes weaker, piston (2) moves to the left, so the connection between port "c" and port "d" is cut, and the pump discharge pressure is connected to port "b". As a result, the pressure at port "c" rises, and the pressure at the large piston diameter end also rises, so the movement of piston (9) to the right is stopped. In other words, the stop position for piston (9) (= pump discharge amount) is decided at the point where the force of springs (3) and (4) and the pushing force from the solenoid and the pushing force created by pressure **PP1** and **PP2** acting on piston (2) are in balance.

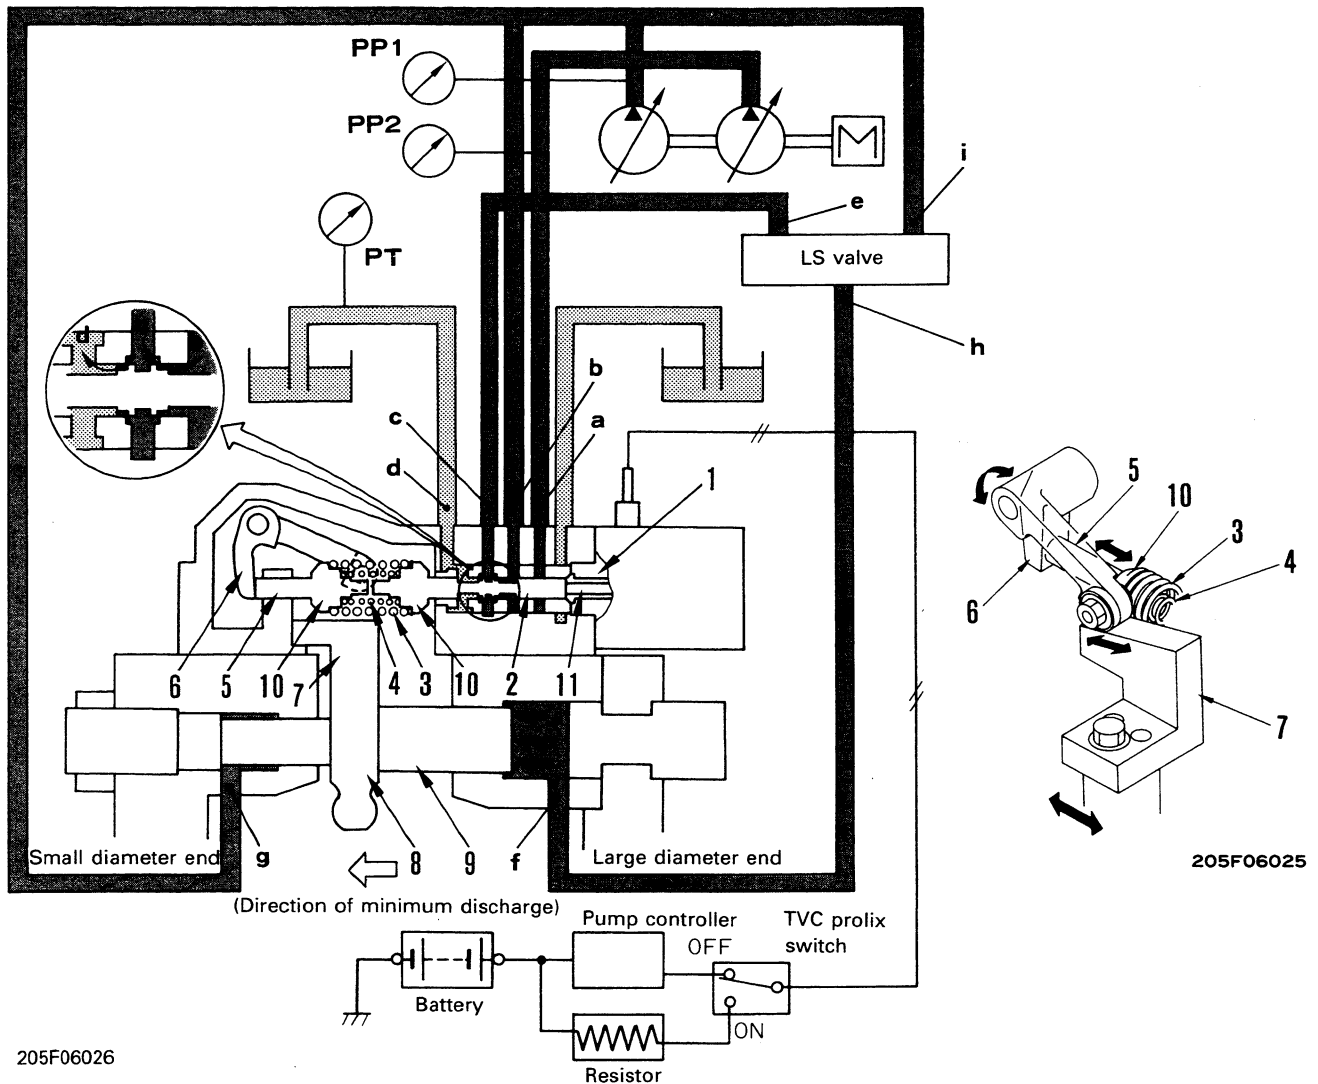


b. When load on actuator is small and pump discharge pressure is high

- When the load is large and pump discharge pressures **PP1** and **PP2** are high, the force pushing piston (2) to the left becomes larger and piston (2) moves to the position shown in the diagram above.
- When this happens, as shown in the diagram above, part of the pressurized oil from port "b" flows out to port "d" and the pressurized oil flowing from port "c" to the LS valve becomes approximately half of main pump pressure **PP1**. When port "h" and port "e" of the LS valve are connected (see 1. LS valve), the pressure from port "f" enters the large piston diameter end of servo piston (9), and servo piston (9) stops.

- If main pump pressures **PP1** and **PP2** increase further and piston (2) moves further to the left, main pump pressure **PP1** flows to port "c" and acts to make the discharge amount the minimum.


When piston (9) moves to the left, piston (5) is moved to the right by cam (7) and lever (6). For this reason, springs (3) and (4) are compressed and push back piston (2). Because of this force, piston (2) cuts off the connection from port "b" to port "c", and port "c" and port "d" are connected. As a result, the pressure at port "c" (= "f") drops, and piston (9) stops moving to the left. The position in which piston (9) stops when this happens is further to the left than the position when pump pressures **PP1** and **PP2** are low.

- The relation of pump pressures **PP1 + PP2** and the position of servo piston (9) forms a bent line because of the double-spring effect of springs (3) and (4). The relationship between pump pressures **PP1 + PP2** and pump discharge amount **Q** is shown in the figure on the right.

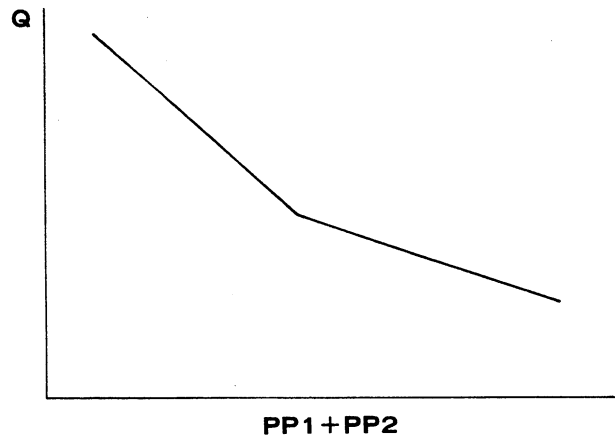

205F06027


- If command voltage **x** sent to solenoid (1) increase further, the relationship between pump pressures **PP1** and **PP2**, and pump discharge amount **Q** is proportional to the pushing force of the solenoid and moves in parallel. In other words, if the pushing force of solenoid (1) is added to the force pushing to the left because of the pump pressure applied to the piston (2), the relationship between **PP** and **Q** moves from **A** to **B** in accordance with the increase in **x**.

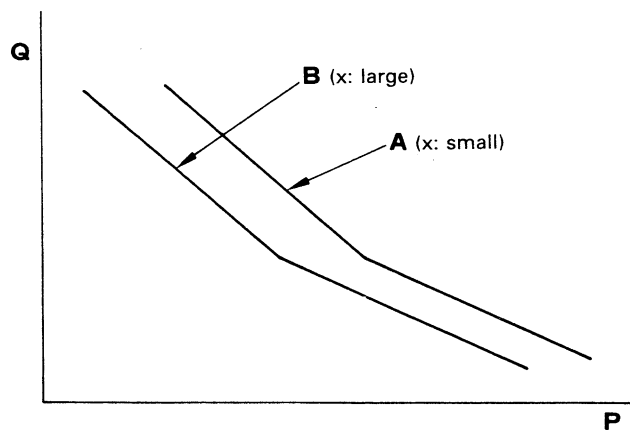

205F06028


K20506

2) When pump controller is abnormal and TVC prolix switch is ON

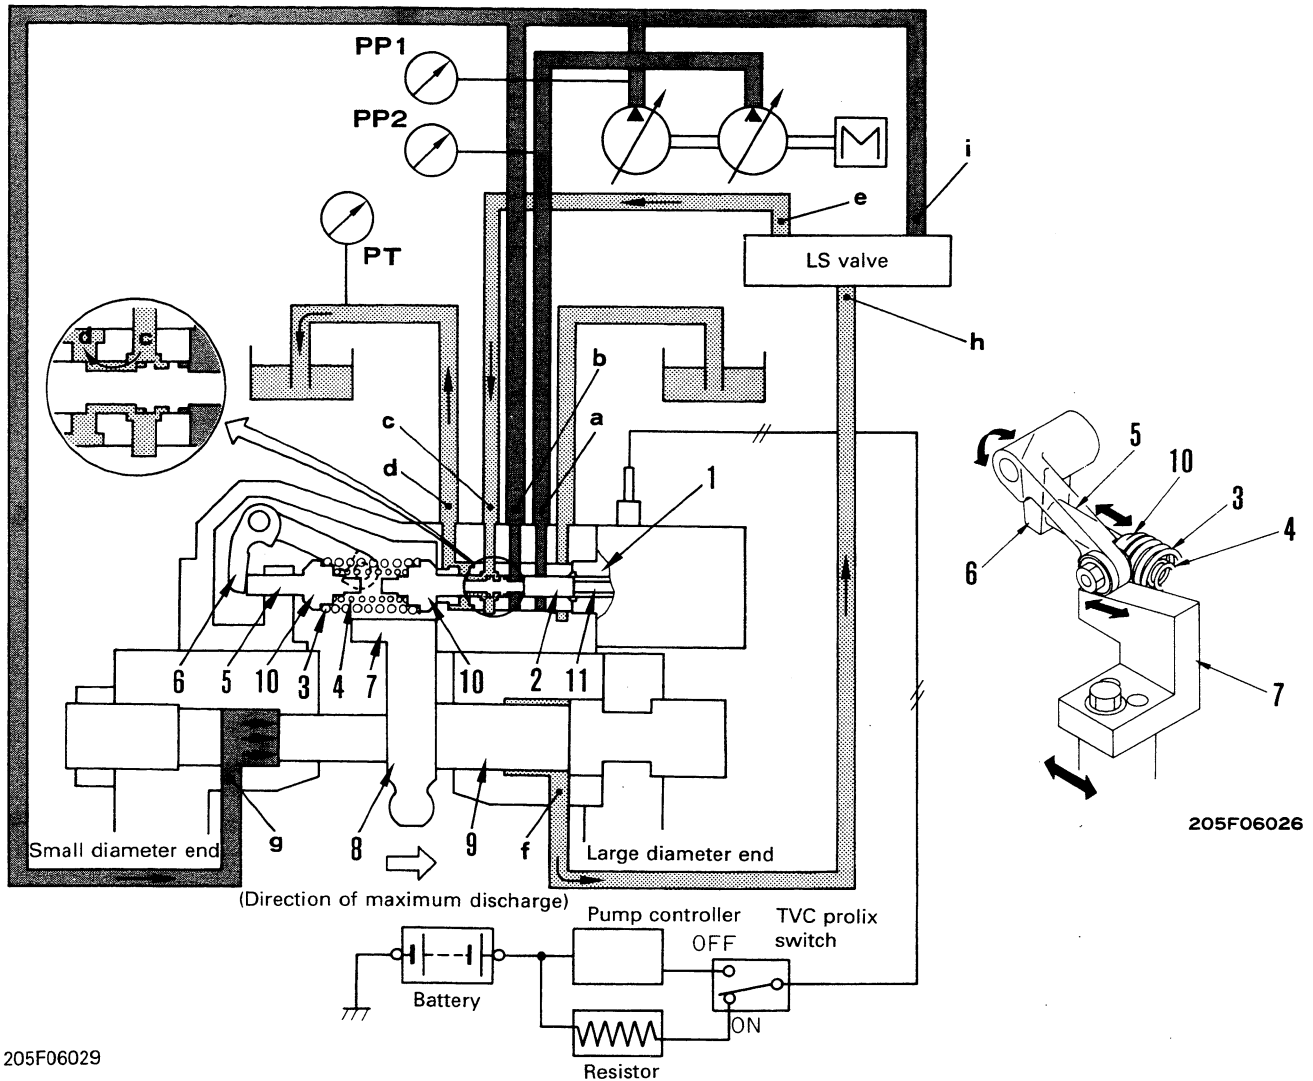


a. When load on main pump is light

- If there is a failure in the pump controller, turn TVC prolix switch ON to switch to the resistor side. In this case, the power source is taken directly from the battery. But if the current is used as it is, it is too large, so use the resistor to control the current flowing to solenoid (1).
- When this is done, the current becomes constant, so the force pushing solenoid push pin (11) is also constant.
- If main pump pressures **PP1** and **PP2** are low, the combined force of the pump pressure and the force of solenoid (1) is weaker than the spring set force, so piston (2) is balanced at a position to the right.
- At this point, port "c" is connected to the drain pressure of port "d", and the large piston diameter end of servo piston (9) also becomes the drain pressure **PT** through the LS valve. When this happens, the pressure at the small piston diameter end is large, so servo piston (9) moves in the direction to make the discharge amount larger.

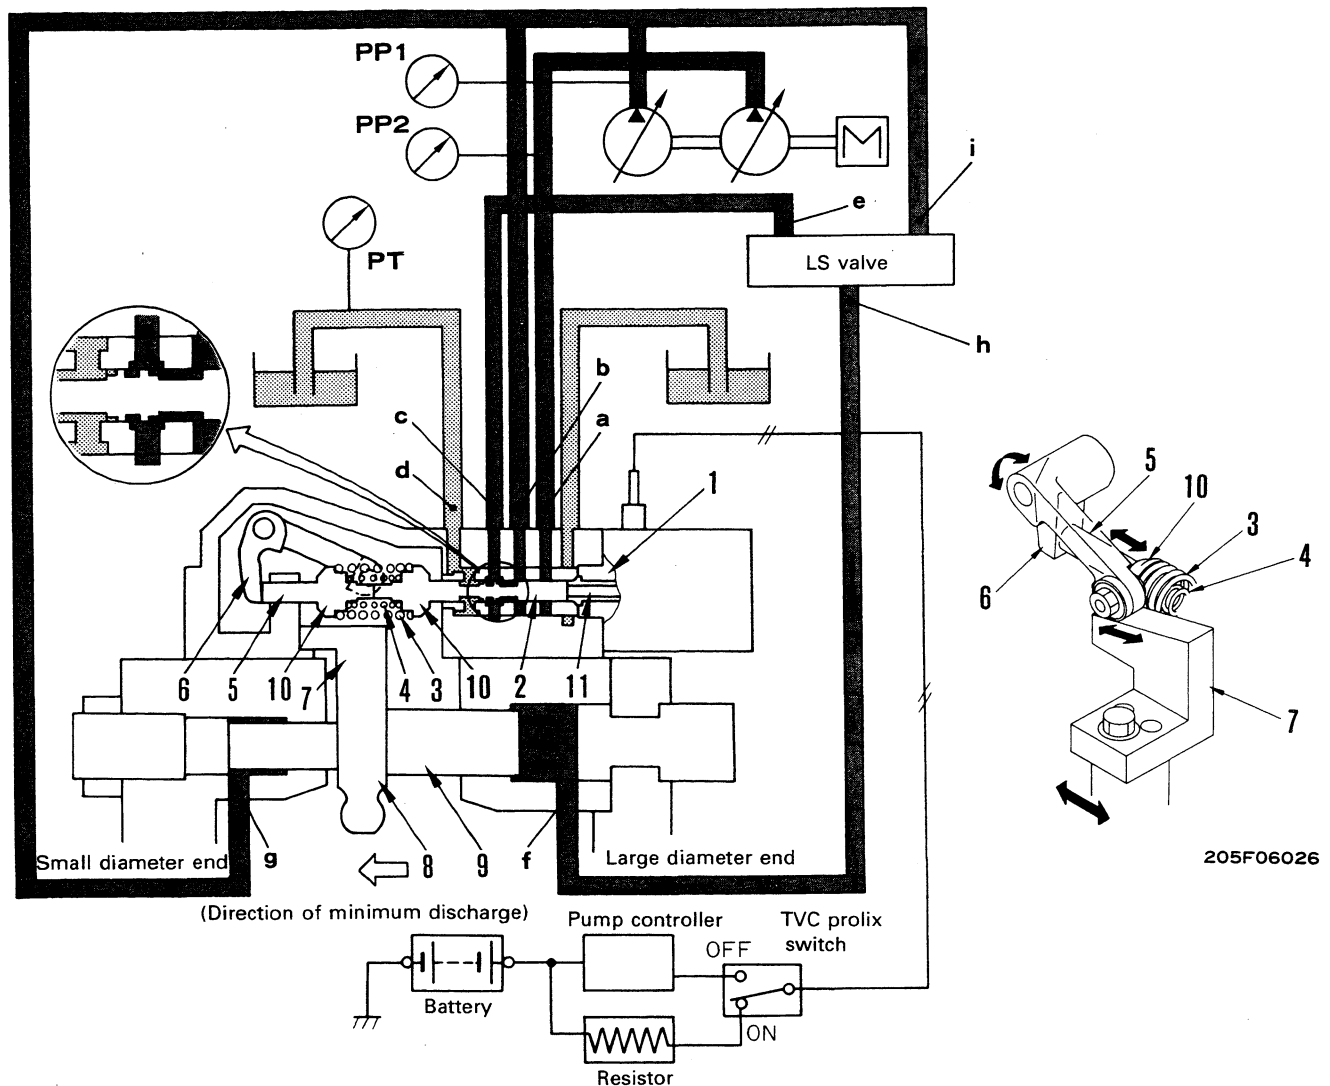

b. When main pump load is heavy





- In the same way as in the previous item, when the TVC prolix switch is ON, the command current X sent to solenoid (1) becomes constant. For this reason, the force of solenoid push pin (11) pushing piston (2) is constant.
- If main pump pressures **PP1** and **PP2** increase, piston (2) moves further to the left than when the main pump load is light, and is balanced at a position towards the left.
- In this case, the pressure from port "b" flows to port "c", so servo piston (9) moves to the left (to make the discharge amount smaller) by the same mechanism as explained in Item 2.1)-b. In other words, even when the TVC prolix switch is ON, the curve for the pump pressure P and discharge amount Q is determined as shown in the diagram for the

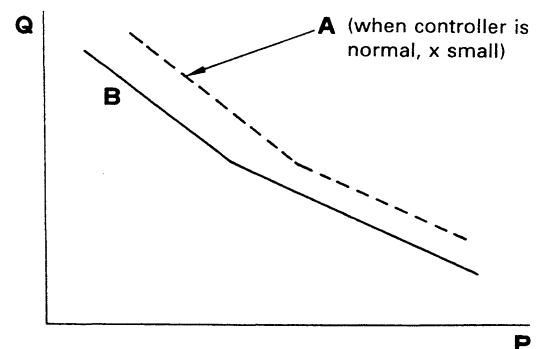

value of the current sent to the solenoid through the resistor.

The curve when the TVC prolix switch is ON is curve **B**, which is to the left of curve **A** for when the pump controller is normal.

3. CONTROL PUMP (BAR-016)

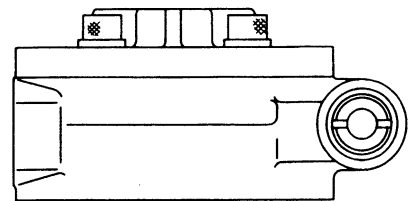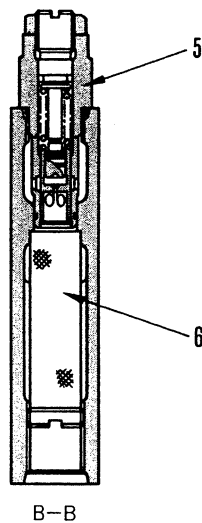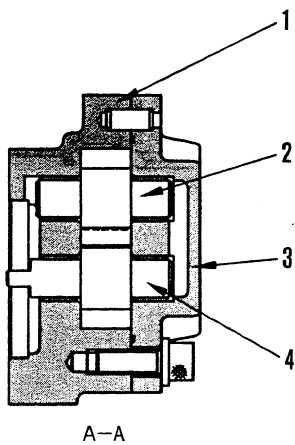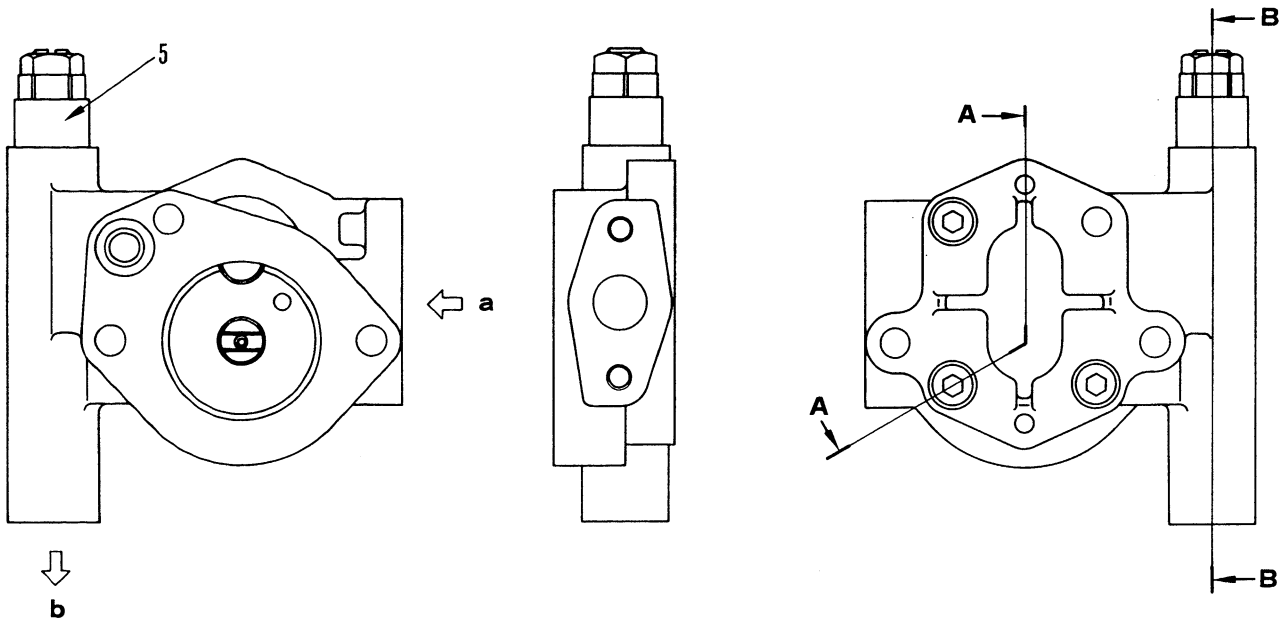

K20506

205F06013

1. Body
 2. Driven gear
 3. Housing
 4. Drive gear
 5. Relief valve
 6. Filter
- a. Suction port
b. Delivery port


SPECIFICATIONS

Type: BAR- 016

Theoretical delivery: 16.0 cc/rev

Max. delivery pressure: 3.23 MPa (33 kg/cm²)

RELIEF VALVE

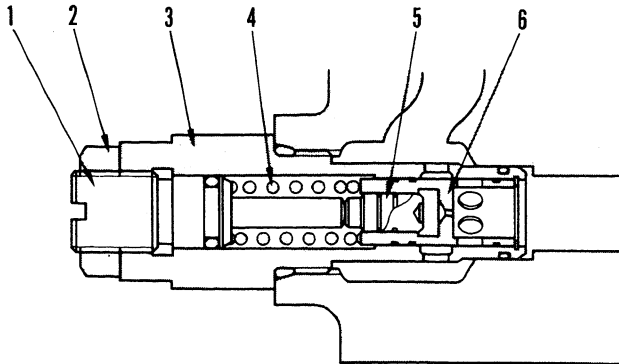

021KF150

1. Adjustment screw
2. Locknut
3. Sleeve
4. Main valve spring
5. Pilot piston
6. Main valve


Set pressure: 3.33 MPa (34 kg/cm²)
(at 33 l/min)

FUNCTION

The relief valve is assembled in the body of the control pump, and when the PPC valve is at neutral, the oil sent from the pump is relieved through this valve. (It sets the maximum pressure in the circuit during operations.)


OPERATION

- Chamber **A** is the pump circuit and chamber **C** is the drain circuit. The oil passes through the orifice in the main valve and fills chamber **B**.

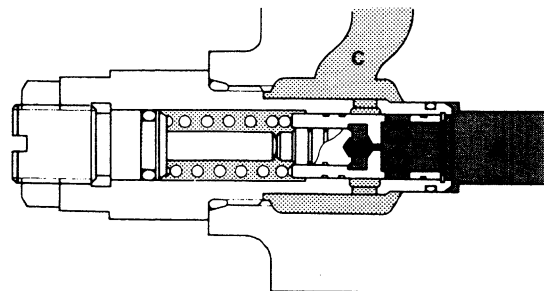

021KF151

K20506

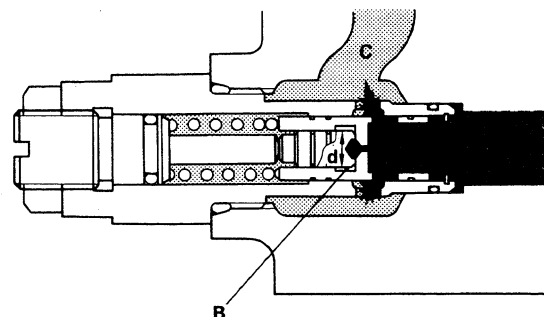


021KF152

- If any abnormal pressure is generated, and the differential pressure $[\pi/4(D^2 - d^2) \times \text{pressure of chamber A}]$ created by the difference in the area of "d" and diameter D reaches the pressure set by the main valve spring, the main valve opens, and the oil in chamber A is released to chamber C. This suppresses the rise in the pressure in chamber A.

CONTROL VALVE

9-SPOOL VALVE (STANDARD + 3 SERVICE VALVE)

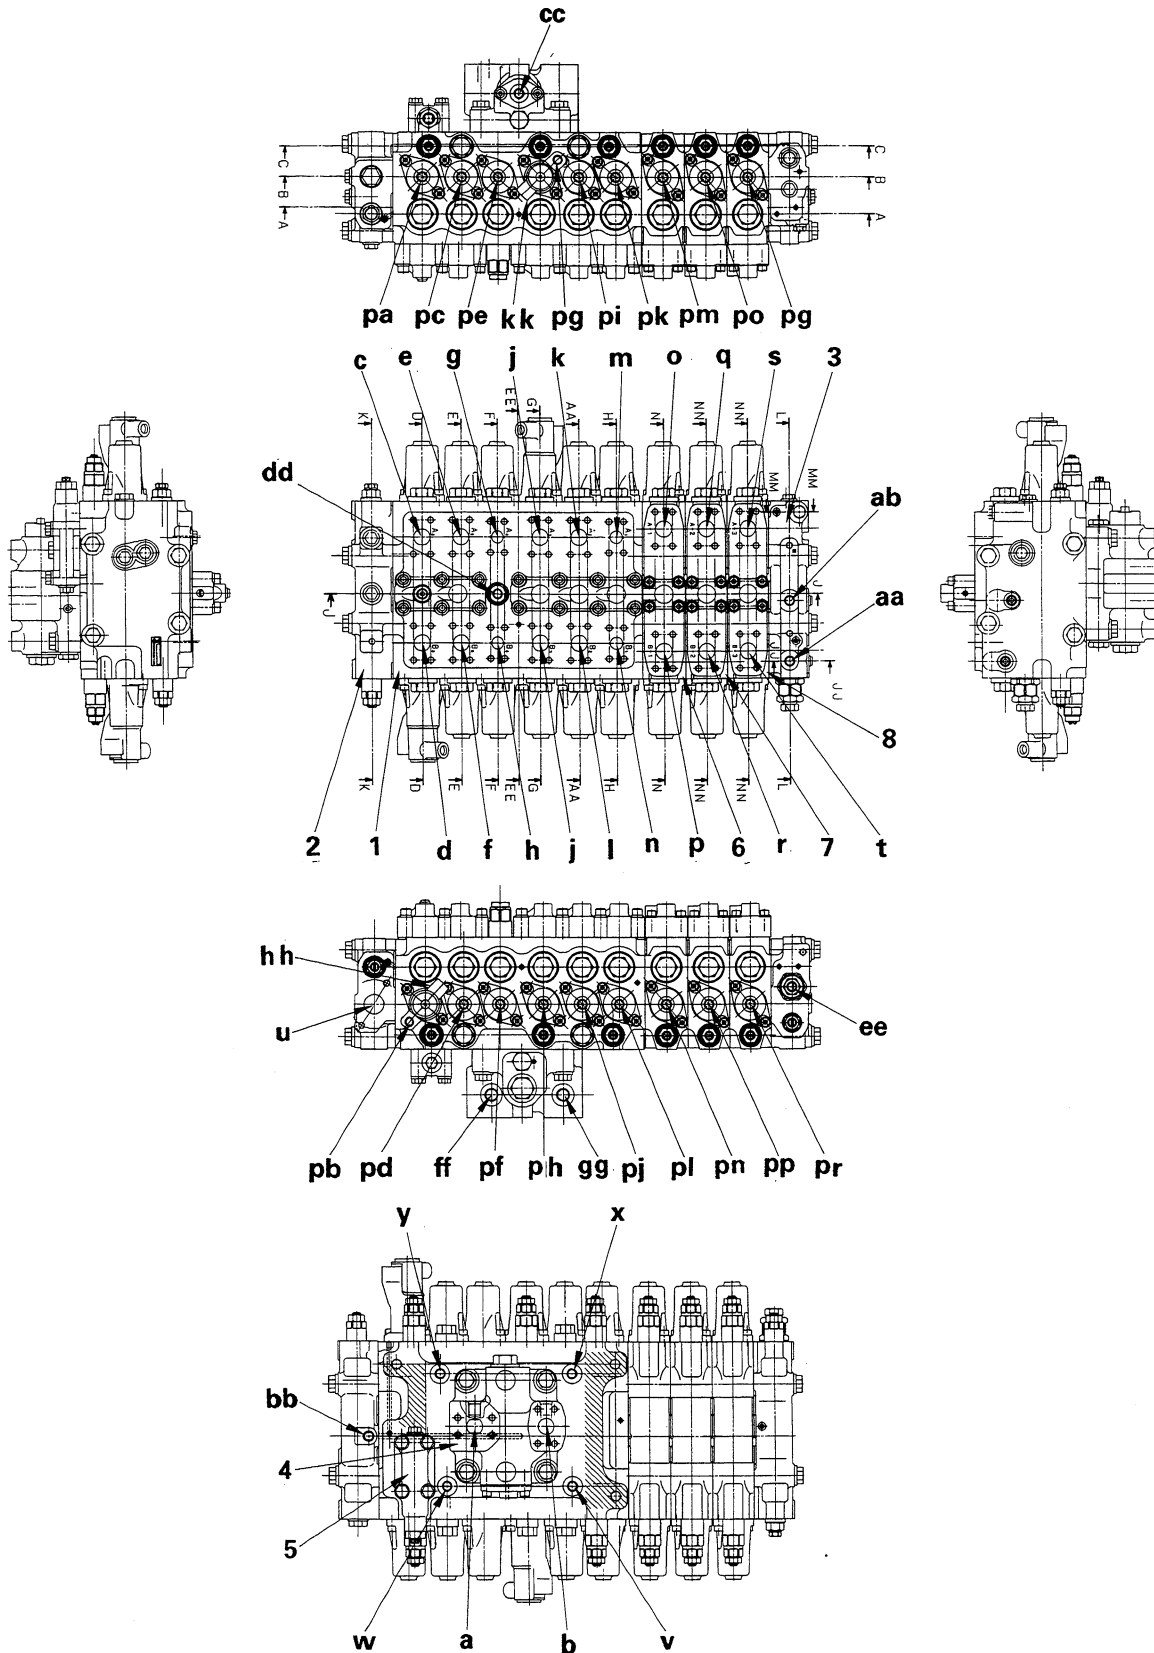

K20506

STRUCTURE AND FUNCTION**CONTROL VALVE**

1. 6-spool valve
2. Cover 1
3. Cover 2
4. Pump merge-divider valve
5. Arm counterbalance valve
6. No. 1 Service valve
7. No. 2 Service valve
8. No. 3 Service valve

- a. Port **PP1** (from rear main pump)
- b. Port **PP2** (from front main pump)
- c. Port **A6** (to arm cylinder head)
- d. Port **B6** (to arm cylinder bottom)
- e. Port **A5** (to L.H. travel motor)
- f. Port **B5** (to L.H. travel motor)
- g. Port **A4** (to swing motor)
- h. Port **B4** (to swing motor)
- i. Port **A3** (to boom cylinder bottom)
- j. Port **B3** (to boom cylinder head)
- k. Port **A2** (to R.H. travel motor)
- l. Port **B2** (to R.H. travel motor)
- m. Port **A1** (to bucket cylinder head)
- n. Port **B1** (to bucket cylinder bottom)
- o. Port **A-1** (to attachment)
- p. Port **B-1** (to attachment)
- q. Port **A-2** (to attachment)
- r. Port **B-2** (to attachment)
- s. Port **A-3** (to attachment)
- t. Port **B-3** (to attachment)
- u. Port **T** (to tank)
- v. Port **T1** (to travel junction valve)
- w. Port **T2** (to travel junction valve)
- x. Port **T3** (to travel junction valve)
- y. Port **T4** (to travel junction valve)



OUTLINE

- This control valve consists of the 6-spool valve (an integrated composition) and 3 service valves. The pump merge-divider valve and arm counterbalance valve are installed to this.
- Each valve forms one unit with the connection bolt, and the passages are internally connected, so the structure is compact and is very easy to service.
- This control valve consists of one spool for one item of the work equipment, so it has a simple structure.

- aa. Port **PLS1** (to rear pump control)
- ab. Port **PLS2** (to front pump control)
- bb. Port **TS** (to tank)
- cc. Port **PS** (from solenoid valve)
- dd. Port **BP** (from solenoid valve)
- ee. Port **PX** (from solenoid valve)
- pa. Port **P12** (from arm PPC/EPC valve)
- pb. Port **P11** (from arm PPC/EPC valve)
- pc. Port **P10** (from L.H. travel PPC valve)
- pd. Port **P9** (from L.H. travel PPC valve)
- pe. Port **P8** (from swing PPC/EPC valve)
- pf. Port **P7** (from swing PPC/EPC valve)
- pg. Port **P6** (from boom PPC/EPC valve)
- ph. Port **P5** (from boom PPC/EPC valve)
- pi. Port **P4** (from R.H. travel PPC valve)
- pj. Port **P3** (from R.H. travel PPC valve)
- pk. Port **P2** (from bucket PPC/EPC valve)
- pl. Port **P1** (from bucket PPC/EPC valve)
- pm. Port **P-2** (from service PPC valve)
- pn. Port **P-1** (from service PPC valve)
- po. Port **P-4** (from service PPC valve)
- pp. Port **P-3** (from service PPC valve)
- pq. Port **P-6** (from service PPC valve)
- pr. Port **P-5** (from service PPC valve)
- ff. Port **SA** (pressure sensor mount port)
- gg. Port **SB** (pressure sensor mount port)
- hh. Port **BP3** (from travel PPC)
- kk. Port **BP2** (from arm PPC)

K20506



MAIN STRUCTURE

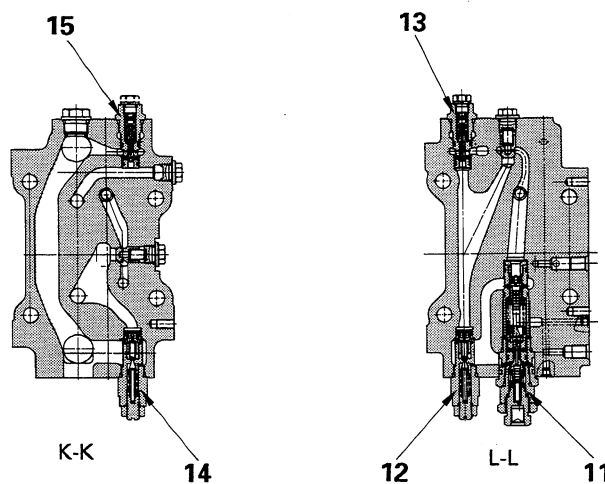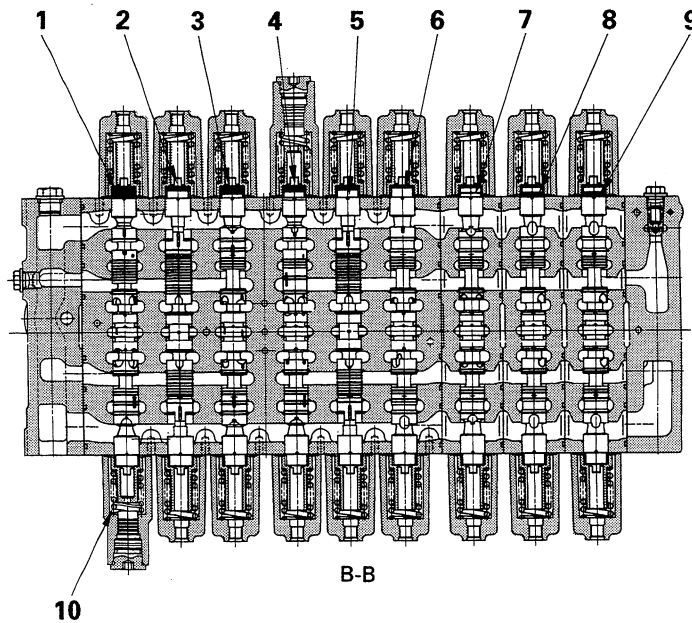

1. Spool (arm)
2. Spool (L.H. travel)
3. Spool (swing)
4. Spool (boom)
5. Spool (R.H. travel)
6. Spool (bucket)
7. Spool (service 1)
8. Spool (service 2)

9. Spool (service 3)
10. Spool return spring
11. Main unload • LS relief valve
12. Main relief valve (bucket end group)
13. Sub-unload valve (bucket end group)
14. Main relief valve (arm end group)
15. Sub-unload valve (arm end group)


K20506

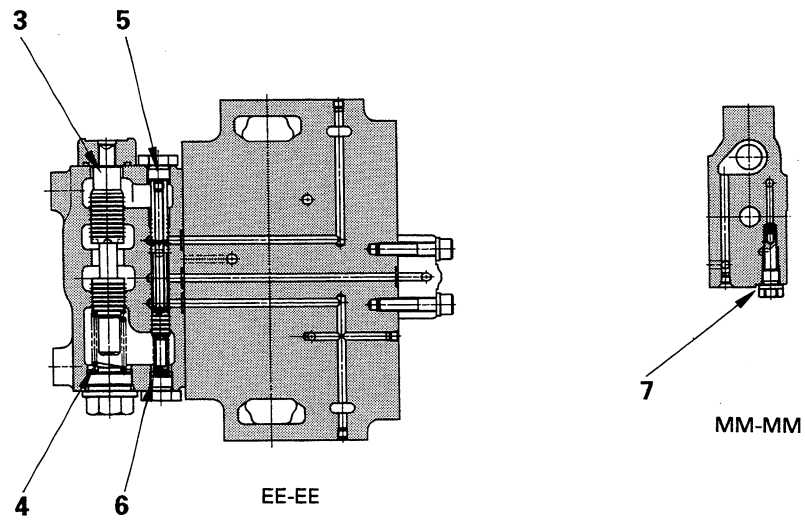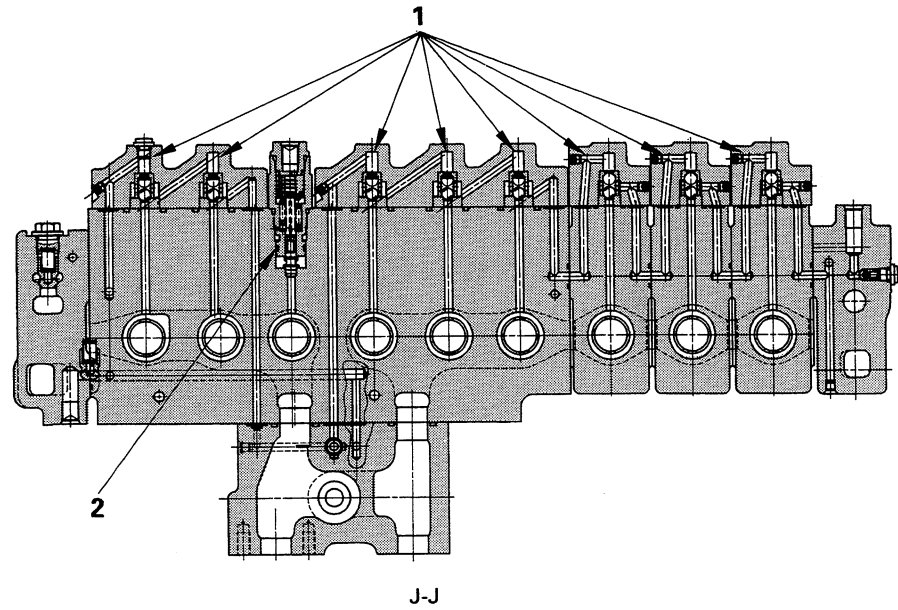


1. LS shuttle valve
2. LS select valve
3. Pump merge-divider valve (for main)
4. Return spring
5. Pump merge-divider valve (for LS)
6. Return spring
7. LS bypass valve

STRUCTURE AND FUNCTION


CONTROL VALVE

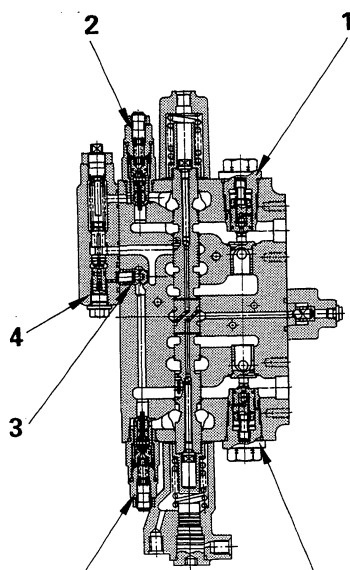


D-D

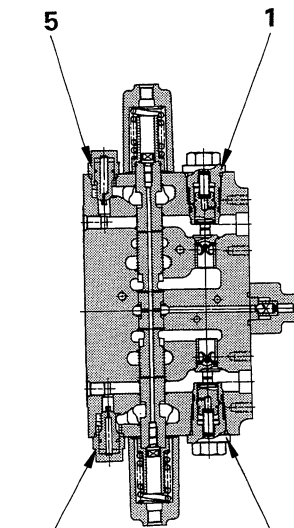


E-E

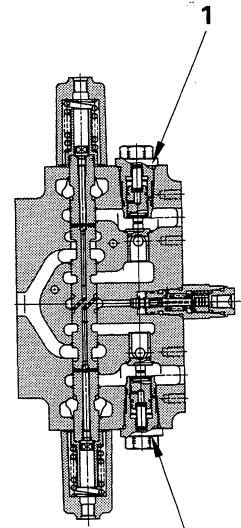


F-F

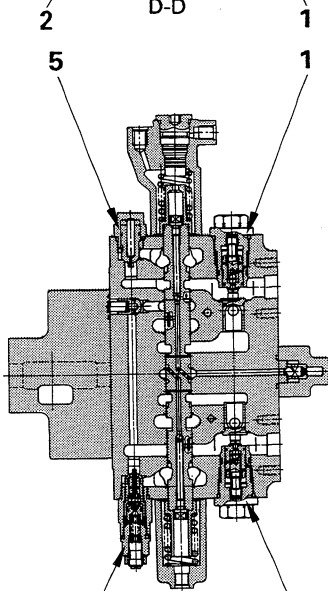

G-G

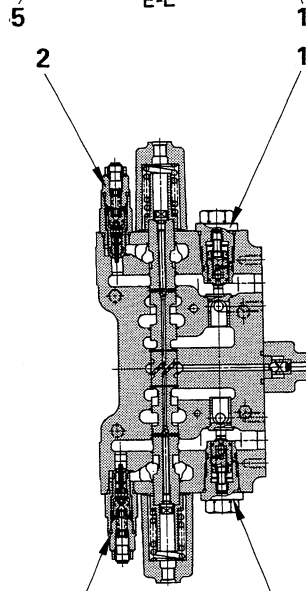

H-H

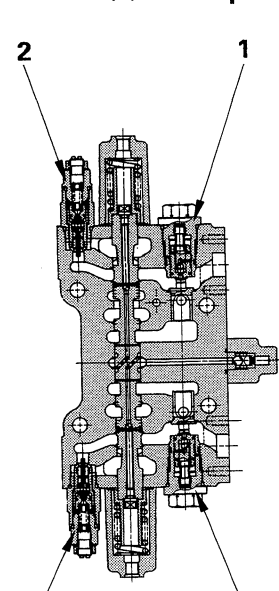


N-N

1. Pressure compensation valve
2. Safety-suction valve
3. Check valve for arm regeneration circuit
4. Arm counterbalance valve
5. Suction valve
6. Check valve for boom regeneration circuit

K20506

6-SPOOL VALVE (STANDARD)


- ★ For details of the names of the ports and the main structure, see 9-SPOOL VALVE.

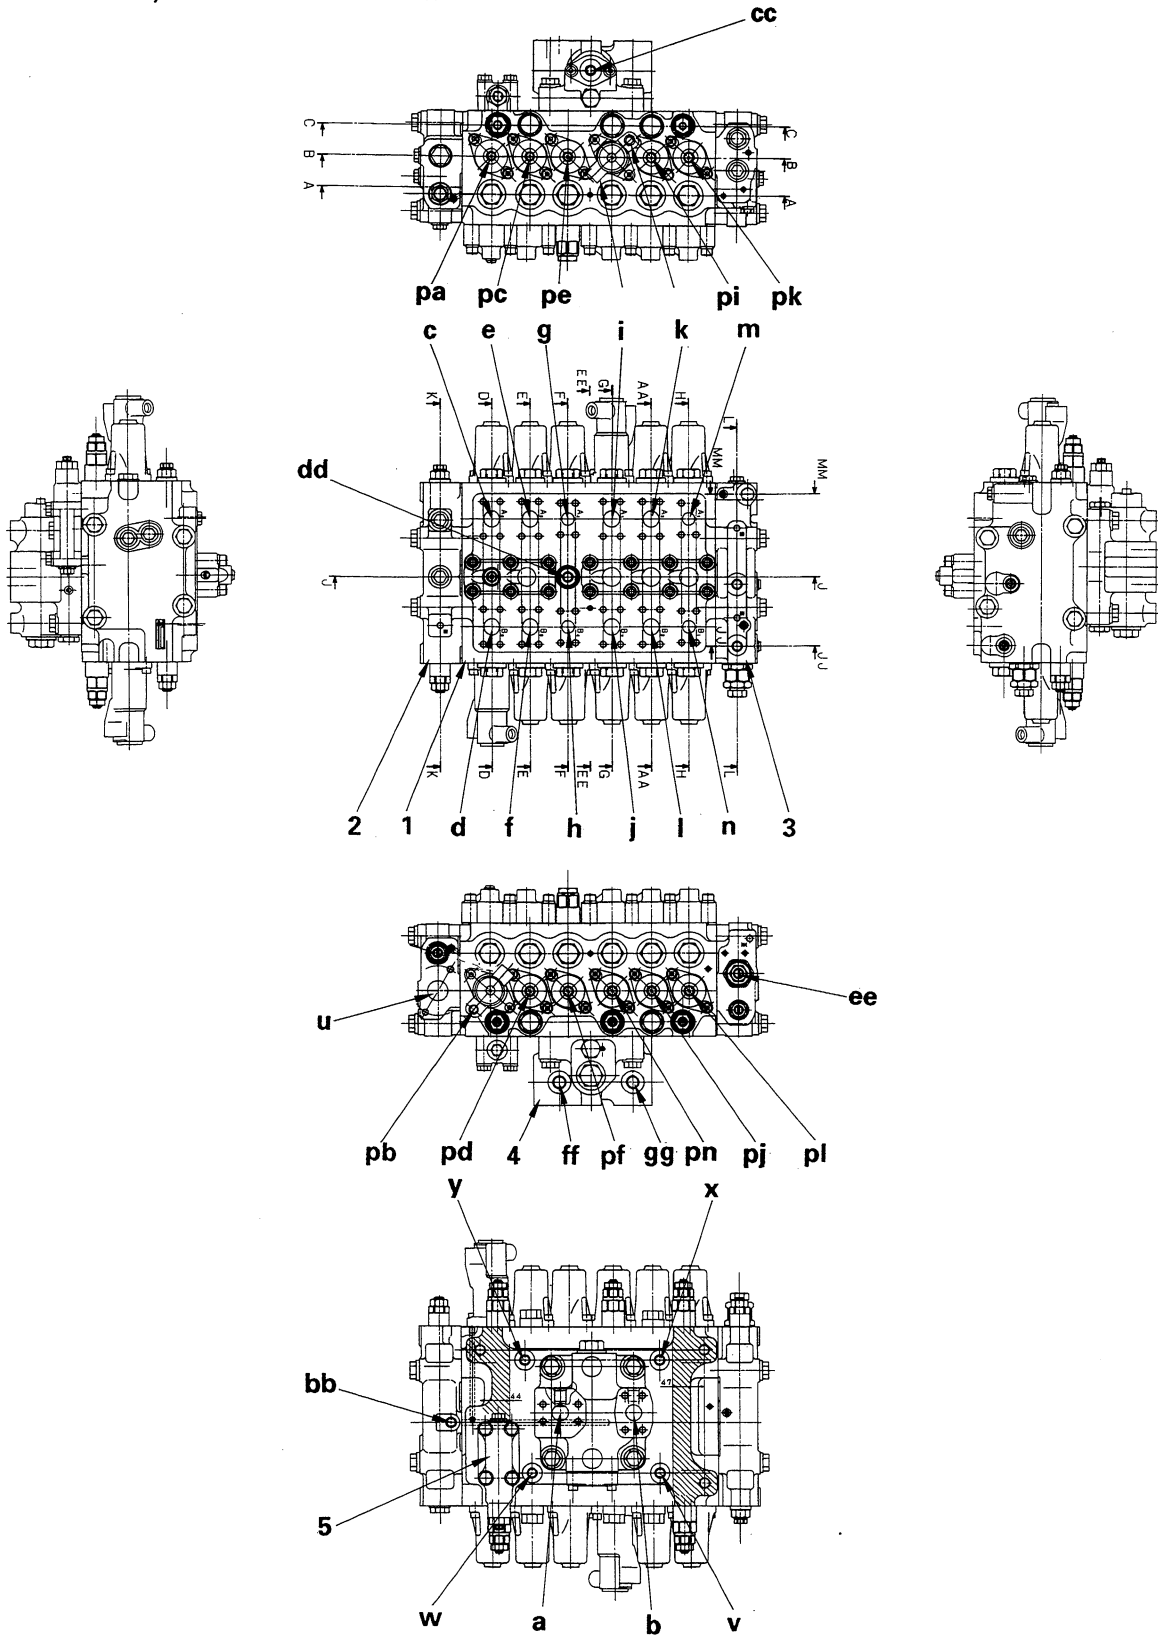

K20506

7-SPOOL VALVE (STANDARD + 1 SERVICE VALVE)

- ★ For details of the names of the ports and the main structure, see 9-SPOOL VALVE.

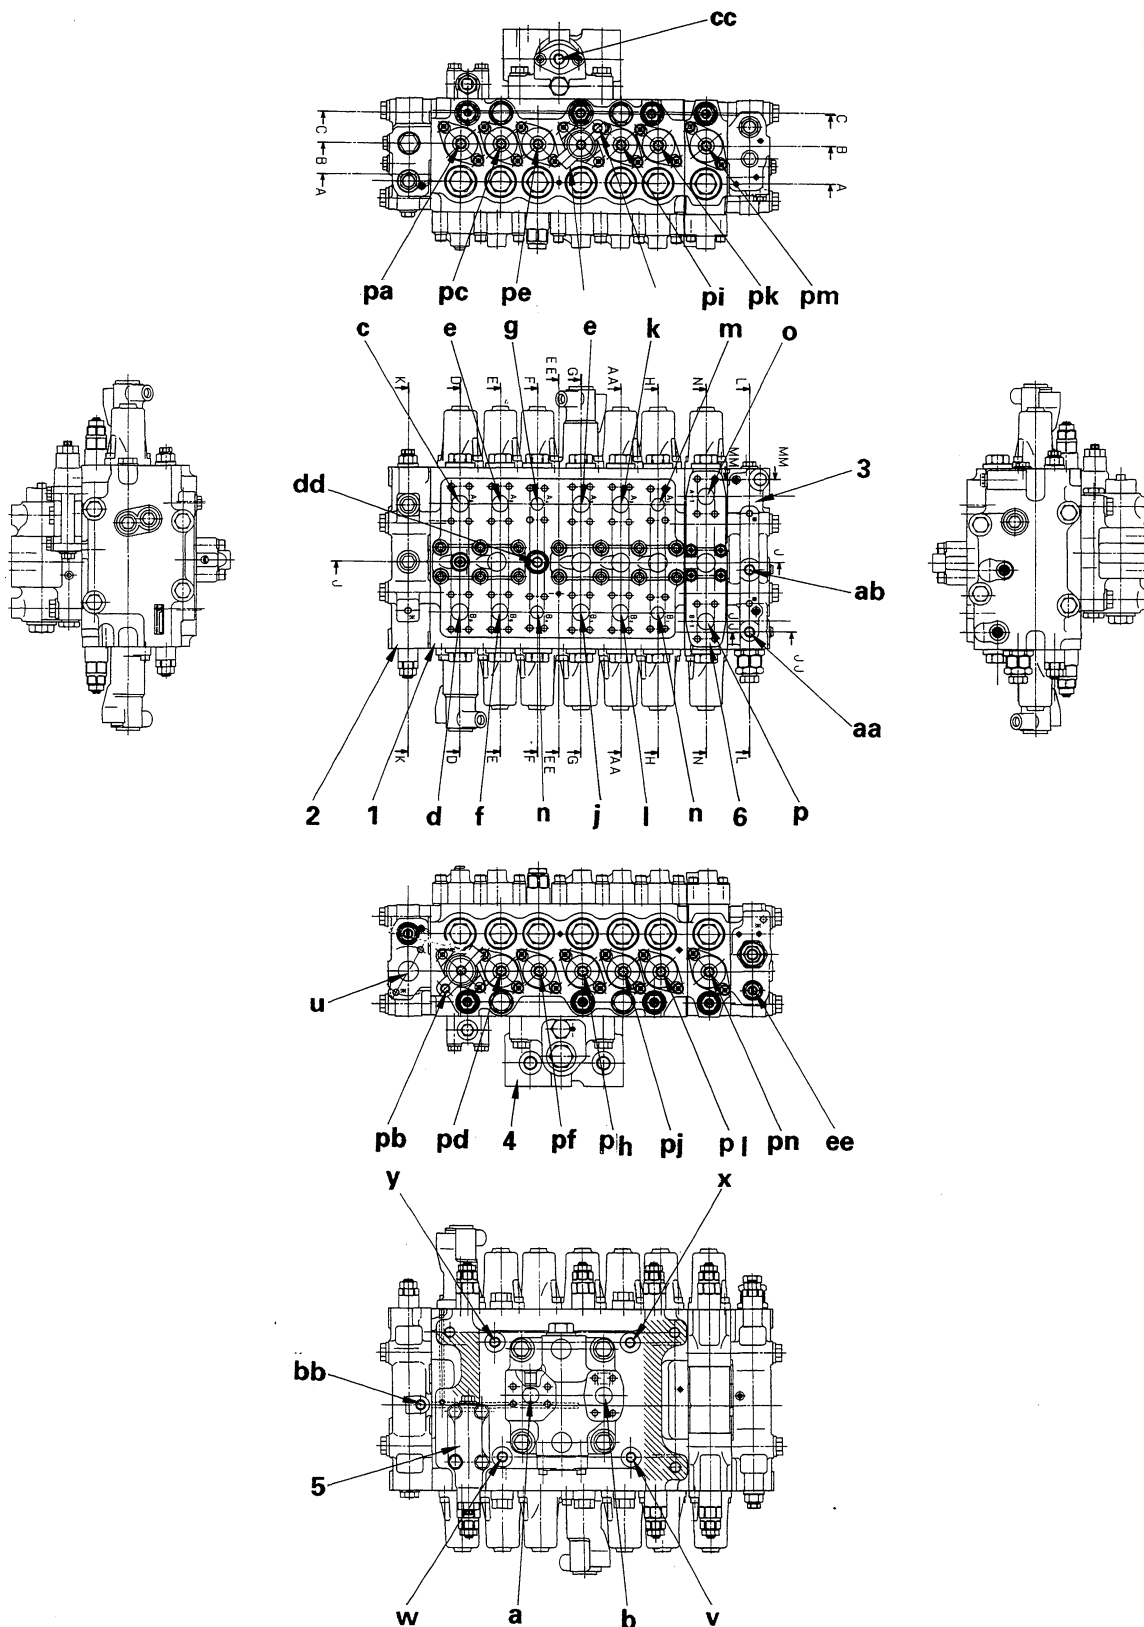


K20506


8-SPOOL VALVE (STANDARD + 2 SERVICE VALVE)

★ For details of the names of the ports and the main structure, see 9-SPOOL VALVE.

K20506

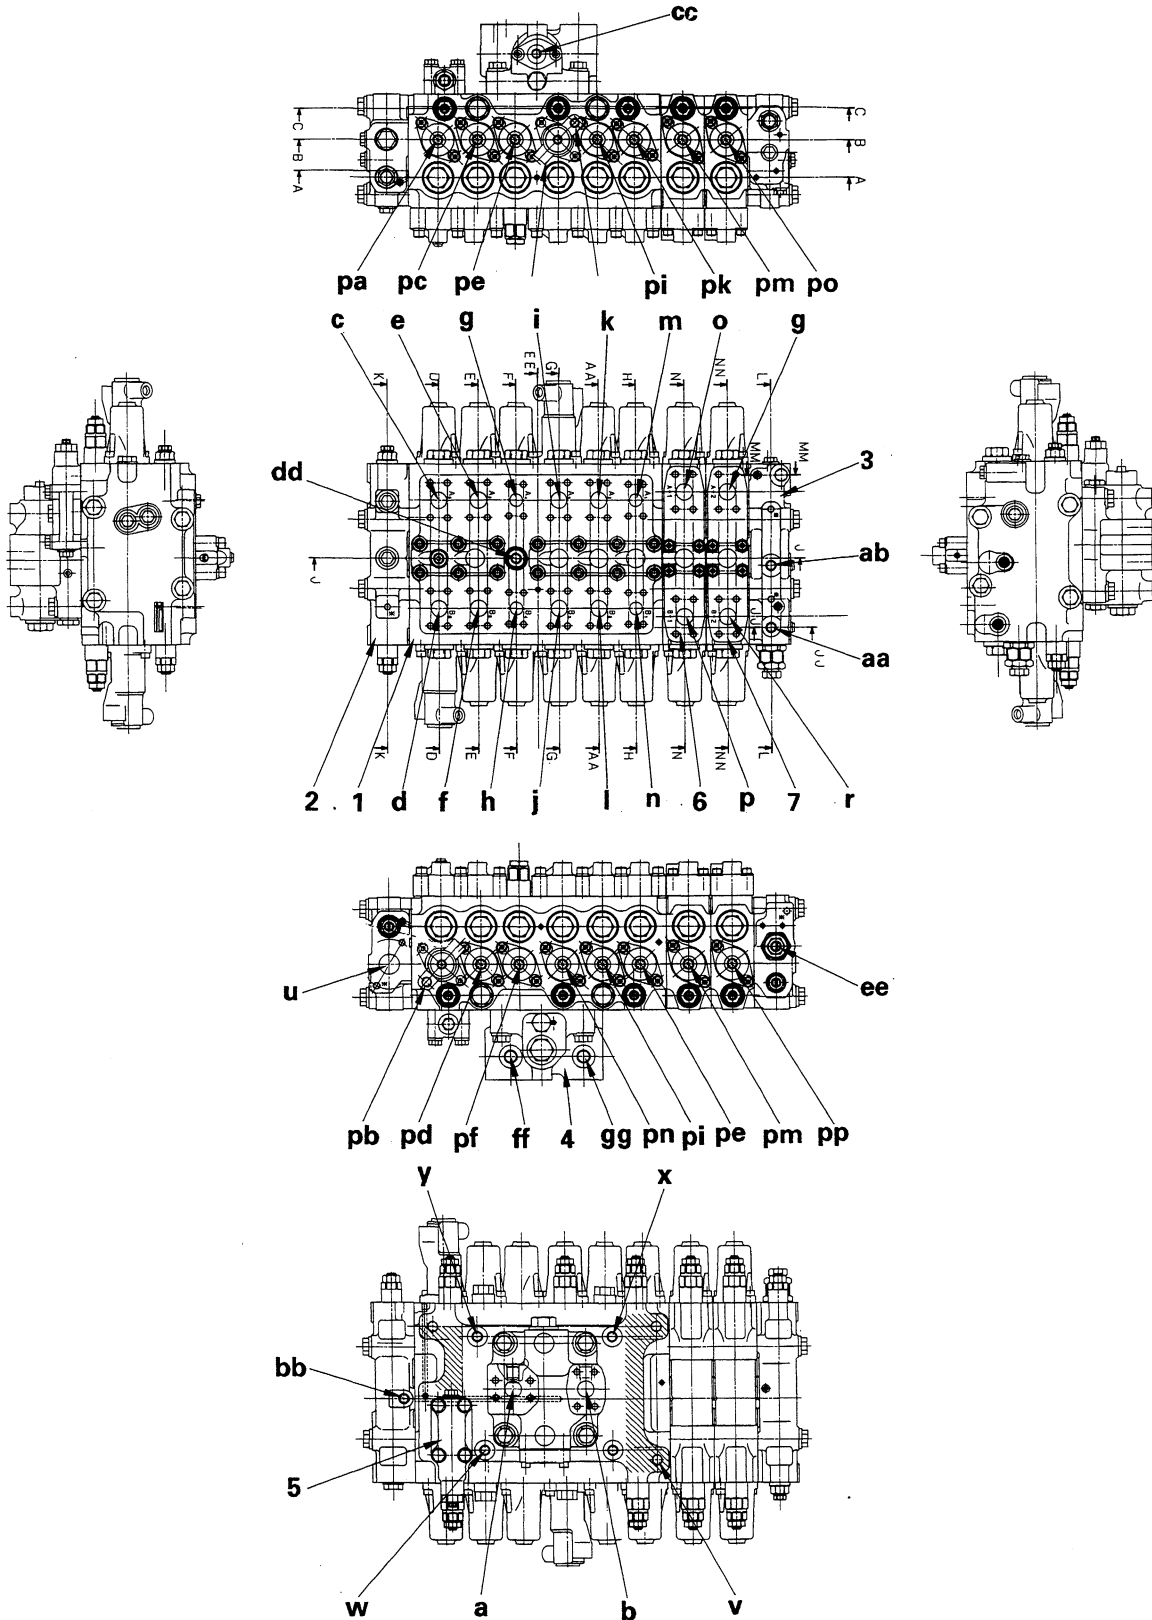

SAFETY-SUCTION VALVE FOR SERVICE VALVE

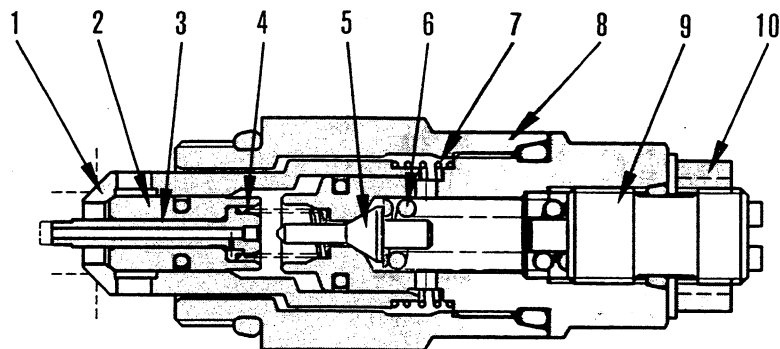

1. Suction valve
2. Main valve
3. Piston
4. Piston spring
5. Poppet
6. Poppet spring
7. Suction valve spring
8. Sleeve
9. Adjustment screw
10. Locknut


205F06038

Part No.	Set Pressure	Use
709-70-74600	24.5 MPa (250 kg/cm ²) at 5 ℓ/min	For crusher (Okada)

K20506

CLSS

OUTLINE OF CLSS

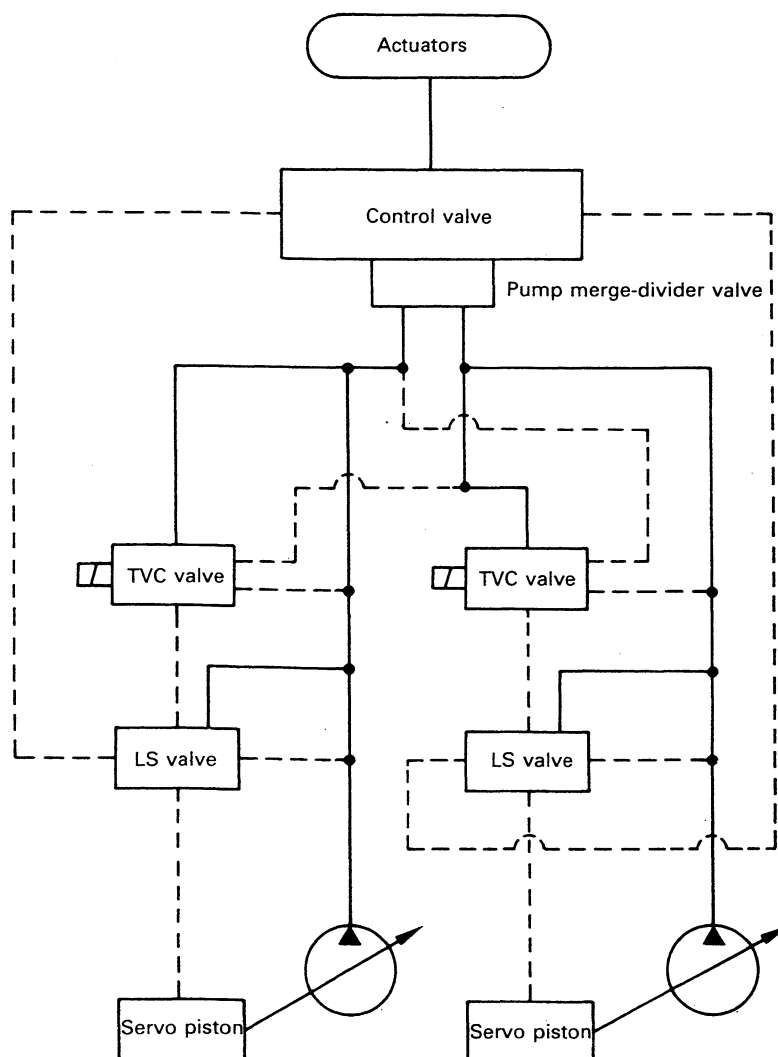

205F06039

Features

- CLSS stands for **C**losed center **L**oad **S**ensing **S**ystem, and has the following features.
 - 1) Fine control not influenced by load
 - 2) Control enabling digging even with fine control
 - 3) Ease of compound operation ensured by flow divider function using area of opening of spool during compound operations
 - 4) Energy saving using variable pump control


Structure

- The CLSS consists of a main pump (2 pumps), control valve, and actuators for the work equipment.
- The main pump body consists of the pump itself, the TVC valve and LS valve.


BASIC PRINCIPLE

1) Control of pump swash plate angle

- The pump swash plate angle (pump discharge amount) is controlled so that LS differential pressure ΔPLS is constant. LS differential pressure ΔPLS , which is the differential pressure between pump discharge pressure **PP** and LS pressure **PLS** (actuator load pressure) at the outlet port of the control valve (LS differential pressure ΔPLS = Pump discharge pressure **PP** – LS pressure **PLS**)
- If LS differential pressure ΔPLS becomes lower than the set differential pressure of the LS valve, the pump swash plate angle becomes greater, and if it becomes higher, the pump swash plate angle becomes smaller.

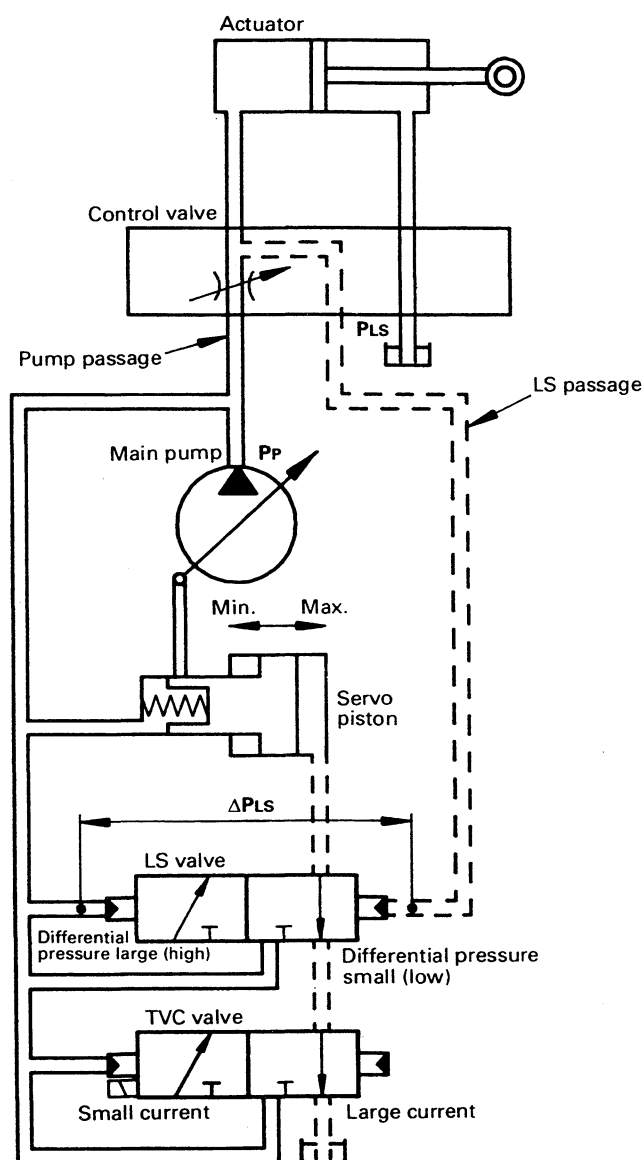

202F06059

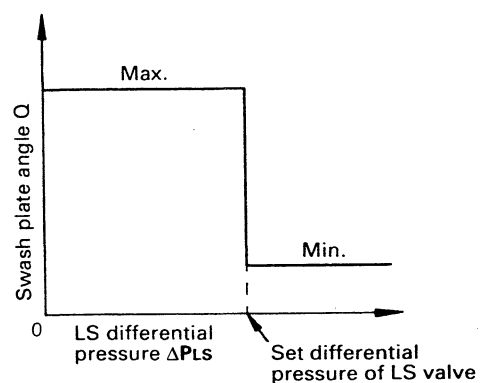

202F06060


K20506

2) Pressure compensation

A valve (pressure compensatin valve) is installed to the outlet port side of the control valve to balance the load.

When there is compound operation of the actuators, this valve acts to make pressure difference ΔP constant for the upstream flow (inlet port) and downstream flow (outlet port) of the spool of each valve.


In this way, the flow of oil from the pump is divided in proportion to area of opening **S1** and **S2** of each valve.

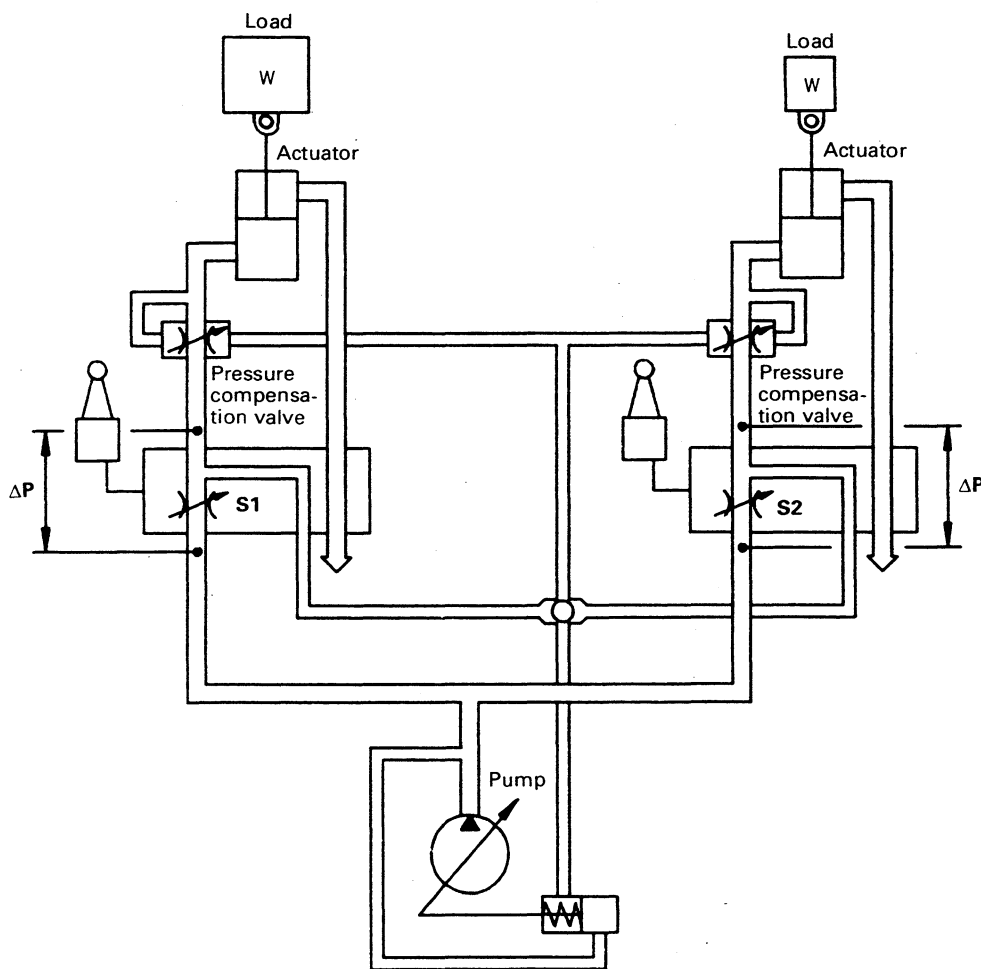

202F06061

OPERATION FOR EACH FUNCTION OF CLSS

Hydraulic circuit diagram for system

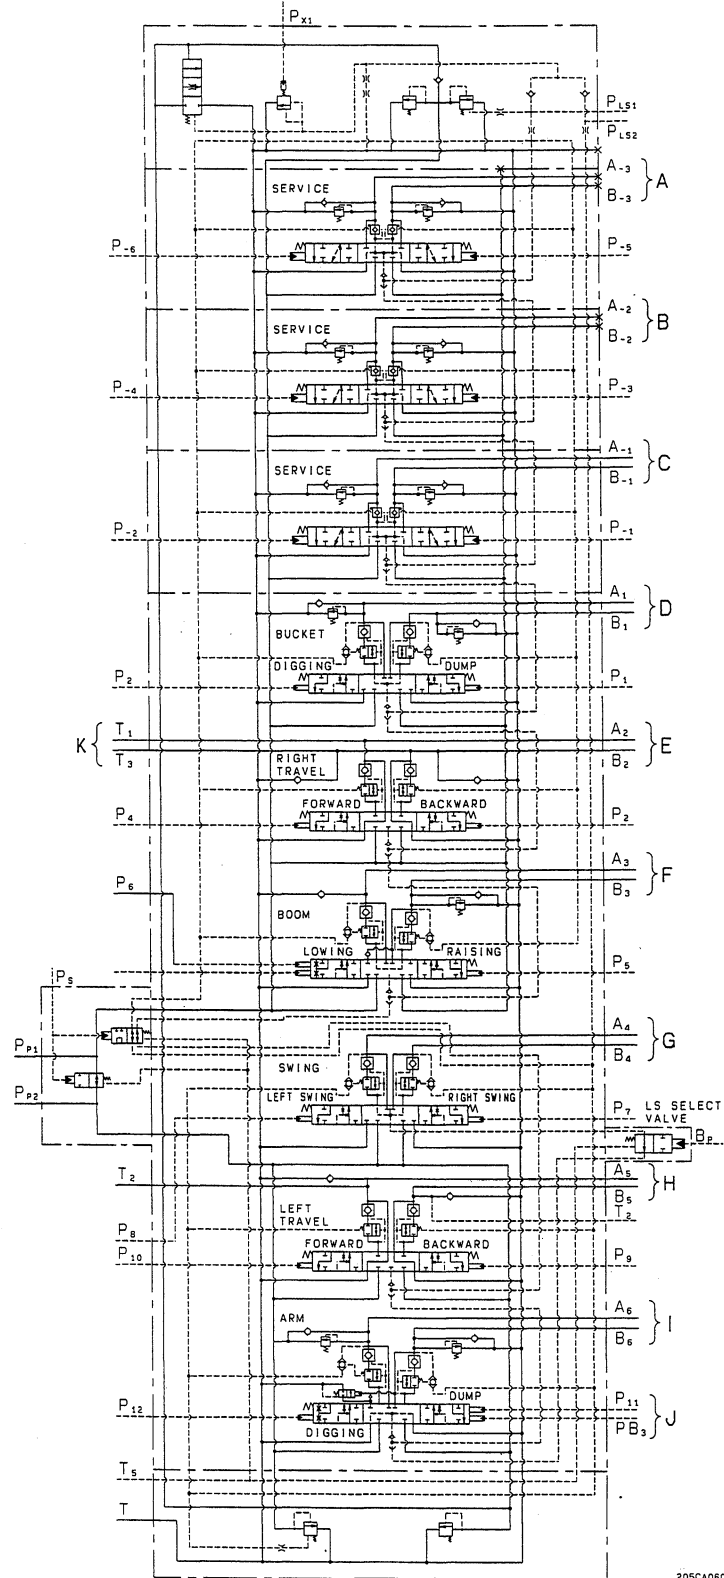

K20506


1. Main unload valve
2. LS relief valve
- 3A. Main relief valve (group at bucket end)
- 3B. Main relief valve (group at arm end)
- 4A. Sub-unload valve (group at bucket end)
- 4B. Sub-unload valve (group at arm end)
5. Bucket spool
6. Pressure compensation valve
7. Safety-suction valve
8. LS shuttle valve
9. R.H. travel spool
10. Suction valve
11. Boom spool
12. Check valve (for boom regeneration circuit)
13. Swing spool
14. L.H. travel spool
15. Arm spool
16. Arm counterbalance valve
17. Check valve (for arm regeneration circuit)
18. LS select valve
19. Pump merge-divider valve

K20506

- A. To bucket cylinder
- B. To R.H. travel motor
- C. To boom cylinder
- D. To swing motor
- E. To L.H. travel motor
- F. To arm cylinder
- G. To travel junction valve
- H. To travel junction valve

SYSTEM DIAGRAM

- ★ This shows actuator (6A) and the stroke end relief in the merge mode.

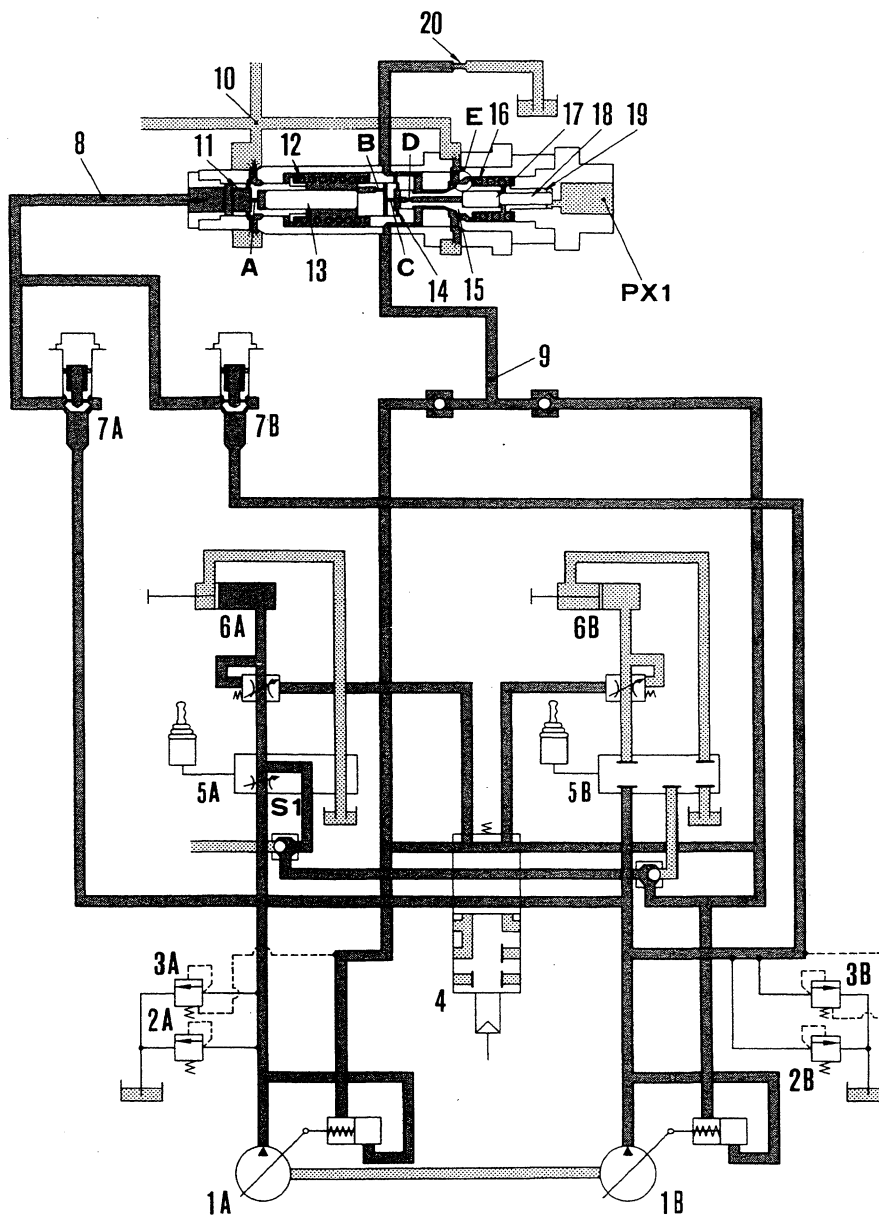


K20506

205F06043

- | | | |
|--|------------------|----------------------|
| 1A. Main pump | 6A. Actuator | 13. Piston |
| 1B. Main pump | 6B. Actuator | 14. Clearance filter |
| 2A. Main relief valve (for power max.) | 7A. Check valve | 15. Poppet |
| 2B. Main relief valve (for power max.) | 7B. Check valve | 16. Spring |
| 3A. Sub unload valve | 8. Pump passage | 17. Piston |
| 3B. Sub unload valve | 9. LS circuit | 18. Piston |
| 4. Pump merge-divider valve | 10. Tank passage | 19. Piston |
| 5A. Control valve | 11. Valve | 20. LS bypass valve |
| 5B. Control valve | 12. Spring | |

1. Main unload valve + LS relief valve
- 1) When main unload valve is actuated

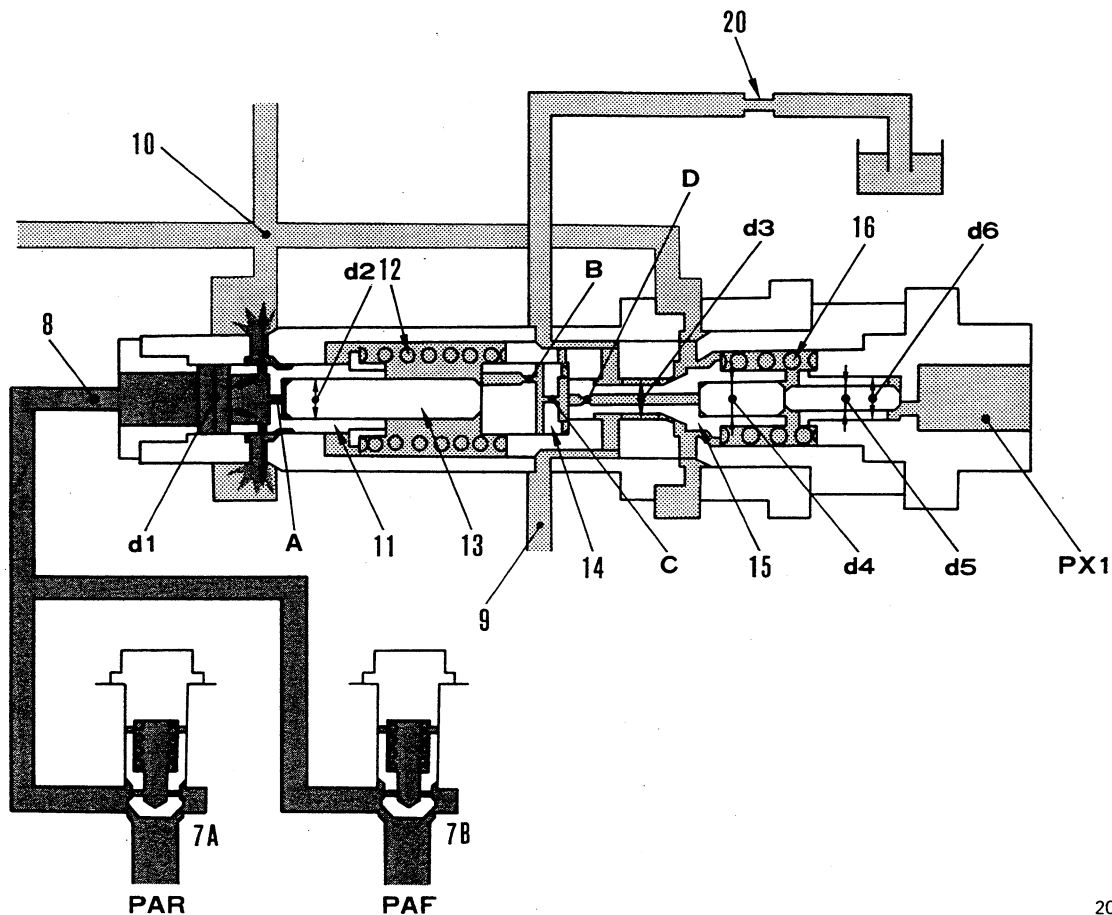

K20506

205F06044


Function

- When all the control valves are at neutral, the oil discharged when the pump is at the minimum swash plate angle is drained. When this happens, the pump pressure becomes a pressure that matches the set load of spring (12) inside the valve (**P1** pressure): The LS pressure is drained from LS bypass valve (20), so LS pressure = tank pressure = 0 MPa (0 kg/cm²).
- When operated (for operations in the discharge range for the minimum swash plate angle), the discharge pressure of the oil discharged with the pump at the minimum swash plate angle is LS pressure + **P1** pressure. In other words, the LS control differential pressure (Δ PLS) of the oil discharged at the minimum swash plate angle is the **P1** pressure.

Operation

- The pressure in pump passage (8) is received by area **d1** at the end face of the valve and area **d2** at the end face of piston (13). The pressure in LS circuit (9) is drained to the tank from LS bypass valve (20), so LS pressure $\approx$ 0 MPa (0 kg/cm²).
- There is no way for the pressurized oil discharged by the pump to escape, so the pressure in pump passage (8) rises. This pressure acts on surface differential portion **A1** between area **d1** at the end face of the valve and area **d2** at the end face of piston (13), and this is received by force **F1** of spring (12) (condition: **d1** > **d2**). Therefore, if passage pressure **P1** x area difference **A1** > spring force **F1**, the valve is pushed to the right, and the pressurized oil flows from the valve to tank passage (10).
- The LS differential pressure (pump discharge pressure – LS circuit pressure) is greater than the pump LS control pressure at the time of the unload operation, so a signal is sent to move the pump swash plate in the direction of the minimum angle.

2) At LS relief (standard mode relief, cut-off control)

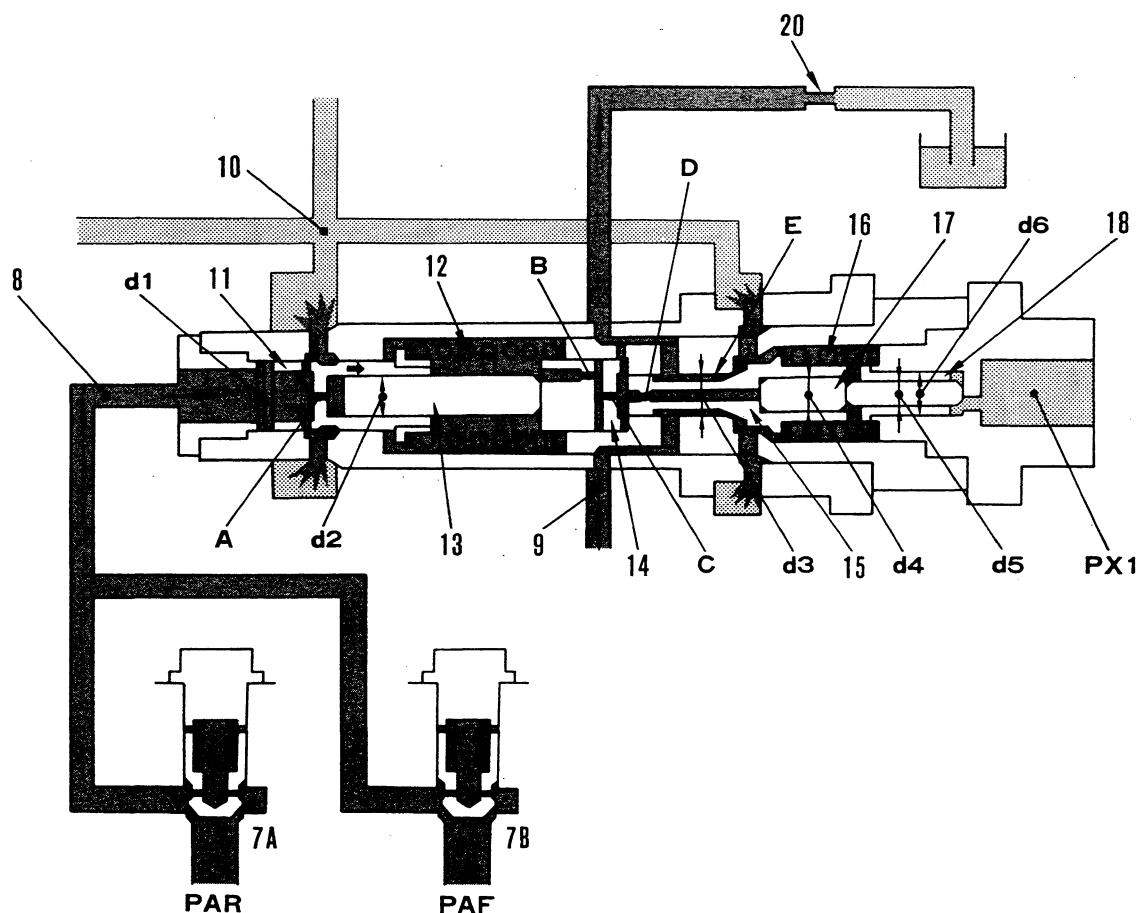

205F06045

K20506

Function

- When the control valve is actuated, the maximum pressure in LS circuit (9) is controlled to the specified pressure (the specified maximum pressure for the pump circuit). That is, the cut-off control is carried out.

Operation

- When the control valve is operated, the LS pressure passes through throttle S1 of spool (5A) and is sent to LS circuit (9). This LS pressure goes from clearance filter (14) through orifice B to spring chamber (12). Part also goes through orifices C and D, and the poppet end portion d3, and is sent to end portion d4 of piston (17). Piston (19) acts as a stopper for piston (17). Therefore, the LS pressure is applied to area difference A2 between area d3 at the end of the poppet and area d4 at the end of the piston, and this is received by force F2 of spring (16) (condition: $d3 > d4$).
- When LS pressure rises, and the condition becomes $LS \text{ pressure} \times \text{area difference } A2 > \text{force } F2 \text{ of spring (16)}$, the poppet moves to the right and seat E opens. As a result the


pressurized oil in LS circuit (9) passes through the notched groove in the outside circumference of poppet (15) and flows to tank passage (10).

- ★ Clearance filter (14) is set to diameter clearance $<$ orifice diameter, and prevents the entry of dirt which might block the orifice.

Pump circuit pressure

- When the pressurized oil in LS circuit (9) flows to tank passage (10) in operation (2) above, the pressure difference from the pump passage becomes greater because of the pressure loss in the LS circuit.
- When the pressure difference becomes P1 pressure as explained in Item 1) "When main unload valve is actuated", the valve moves to the right, and the pressurized oil discharged from the pump flows to tank passage (10). In this way, the maximum pressure of the pump passage is controlled.
- When this unload operation is carried out, pump discharged pressure - LS circuit pressure is greater than the pump LS control pressure, so a signal is sent to set the pump swash plate to the minimum angle.


3) When power max. function is actuated

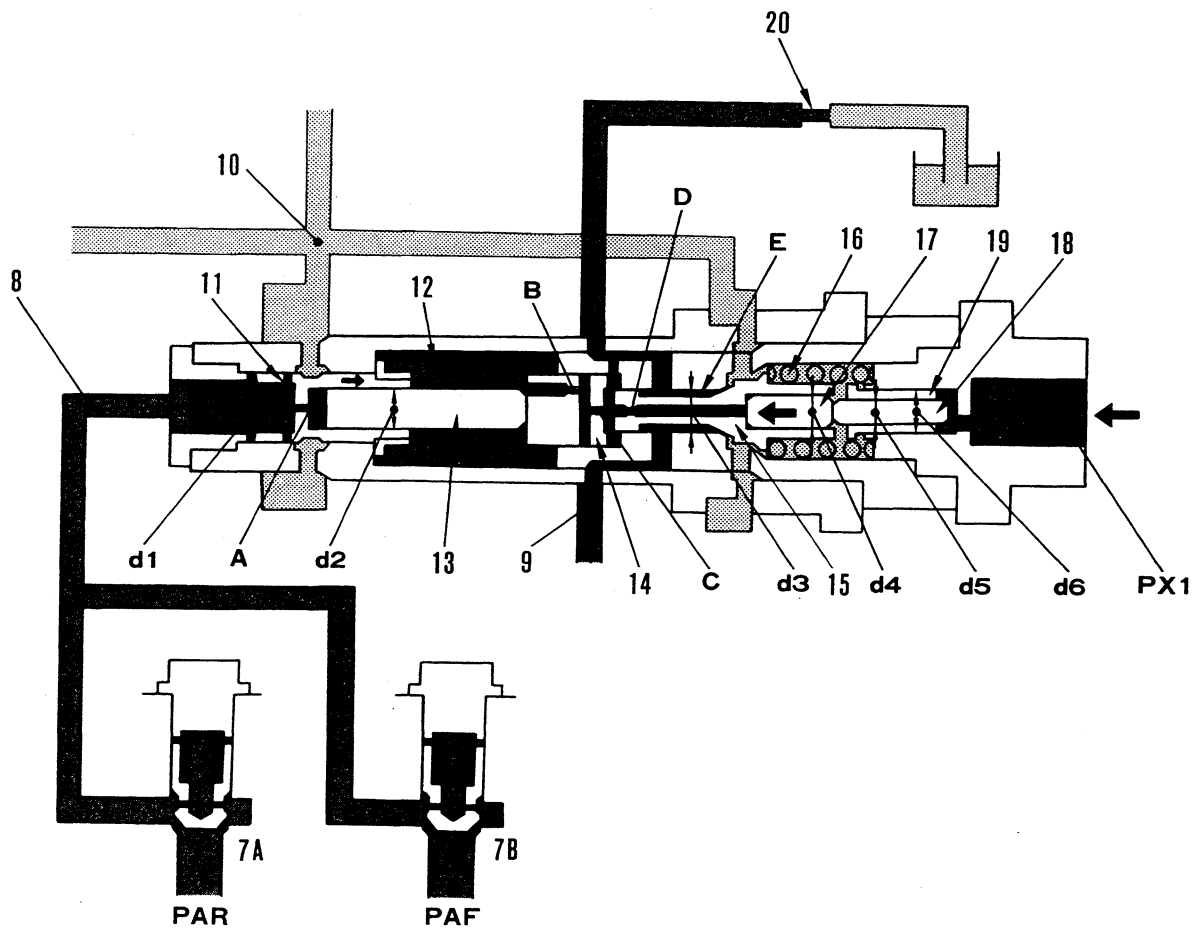

205F06046

- When the pilot pressure is applied to port **PX1**, piston (18) and piston (19) move to the left, and poppet (15) and piston (17) are brought into close contact, so poppet (15) cannot move and the LS control pressure rises.

2. Sub-unload valve

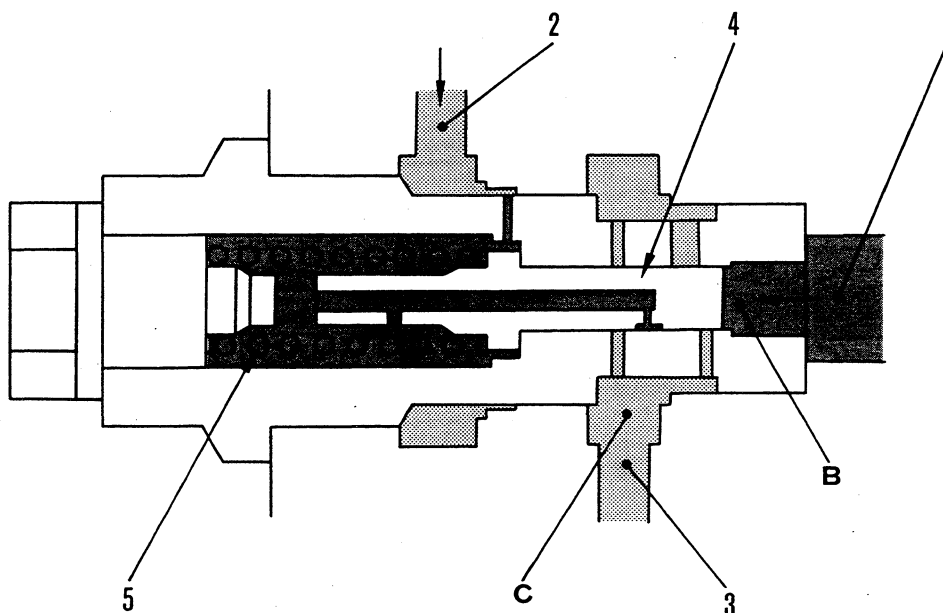

205F06047


K20506

Function

- When the pump flow is divided and the control valve group on one side is actuated (with the remaining control valve group at neutral), the sub-unload valve drains the pump flow to the group that is at neutral.

Operation


- The pressure in pump passage (1) is received at the end portion of valve (4). The control valve is at neutral, so the pressure of LS circuit (2) is 0 MPa (0 kg/cm²).
- The pressurized oil in pump passage (1) is stopped by valve (4) and cannot escape, so the pressure rises. When this pressure becomes larger than the force of spring (5), valve (4) moves to the left, ports B and C are interconnected, and the pump pressure flows to tank passage (3). In addition, the pressurized oil in LS circuit (2) passes from orifice A through port C and is drained to tank passage (3). Therefore, in this operation, LS pressure = tank pressure.
- In this unload operation, pump discharge pressure – LS circuit pressure is greater than the pump LS control pressure, so a signal is sent to set the pump swash plate to the minimum angle.

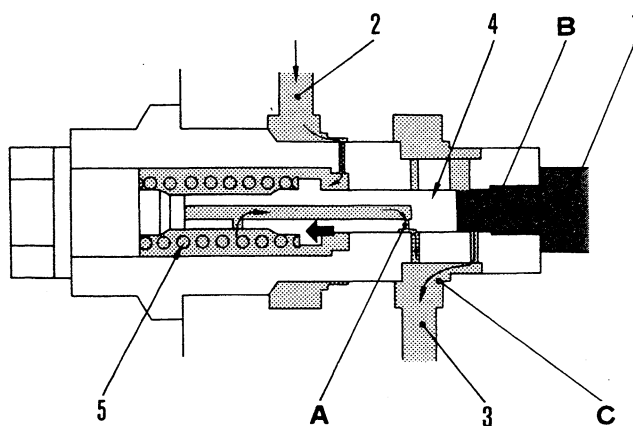

205F06048

3. Introduction of LS pressure

- ★ The diagram shows the condition for arm IN.

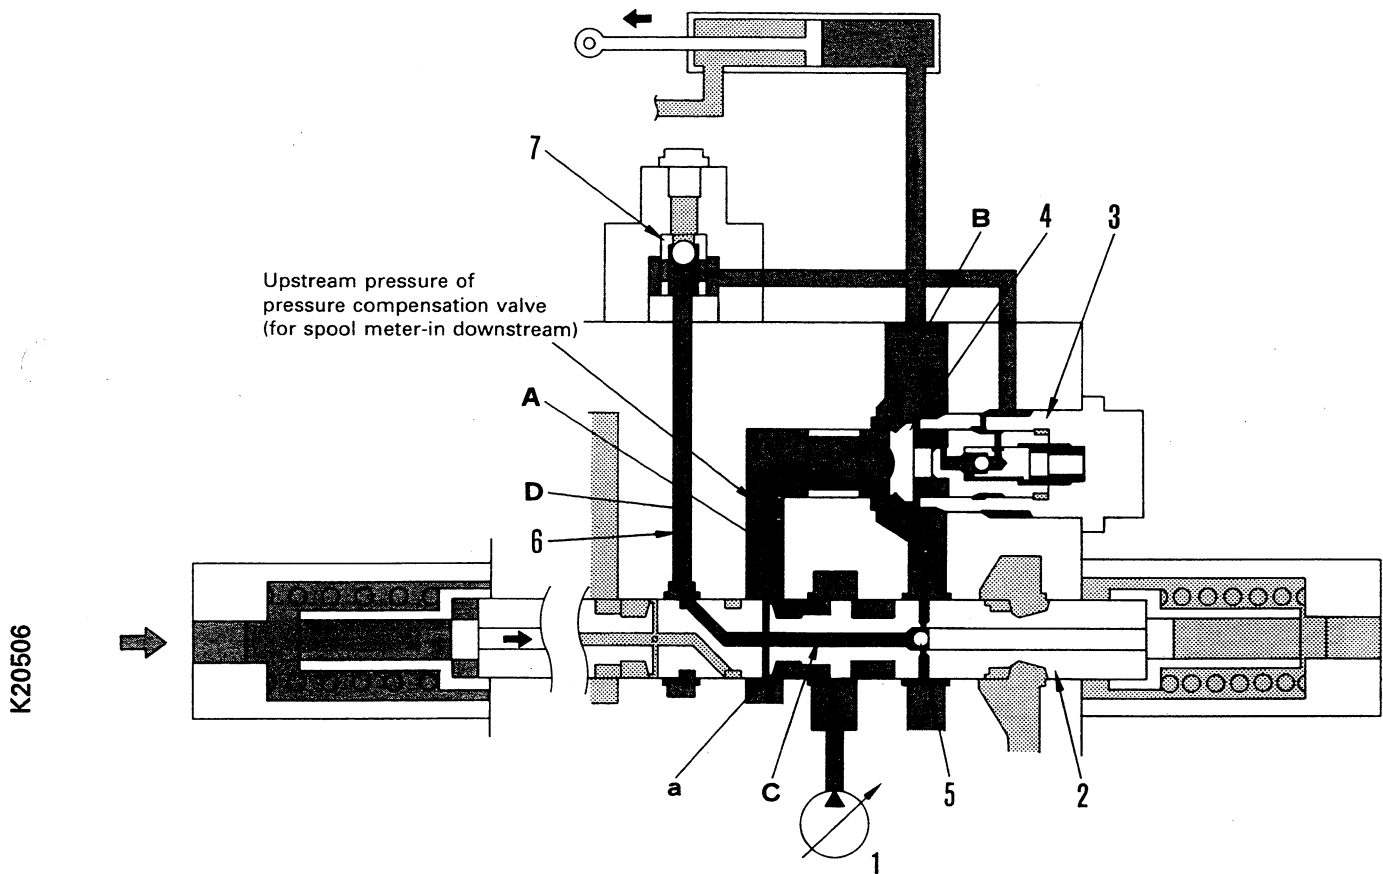

205F06049

1. Main pump
2. Main spool
3. Pressure compensation valve
4. Valve
5. Ball valve
6. LS shuttle valve


Function

- The upstream pressure (= spool meter-in downstream pressure) of pressure compensation valve (3) is introduced and goes to shuttle valve (7) as the LS pressure. When this happens, it is connected to port **B** of the actuator through valve (4), and LS pressure = actuator load pressure. Introduction hole **a** inside the spool has a small diameter, so it also acts as a throttle.

Operation

- When spool (2) is operated, the pump pressure passes through introduction hole **a**, enters port **C**, and is taken to the LS circuit. When the pump pressure rises and reaches the load pressure of port **B**, ball valve (5) opens.

4. LS bypass valve

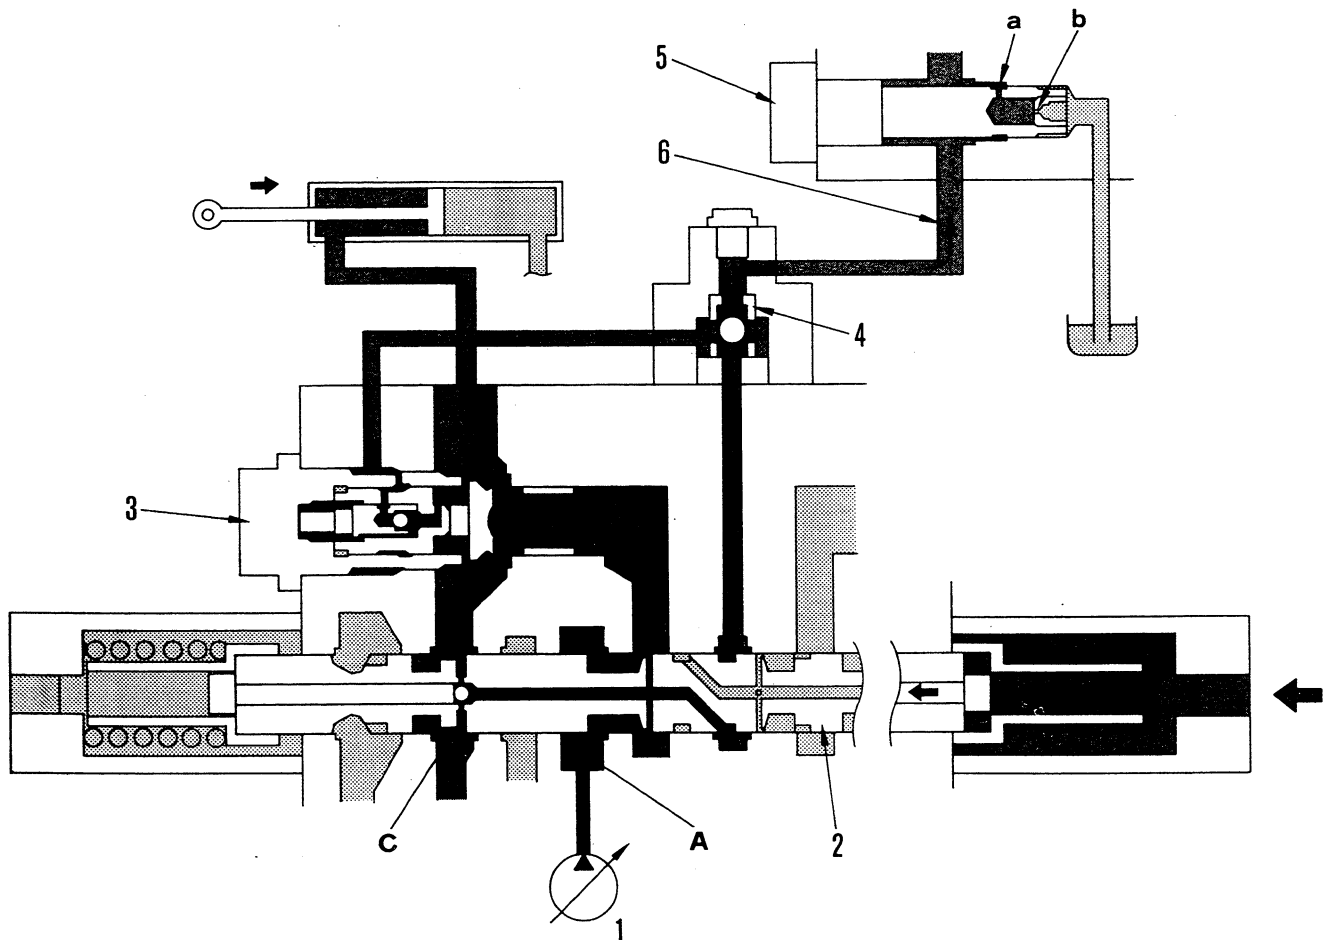

K20506


205F06050

1. Main pump
2. Main spool
3. Pressure compensation valve
4. LS shuttle valve
5. LS bypass valve
6. LS circuit

Function

- The residual pressure in LS circuit (6) is released from orifices **a** and **b**.
- This reduces the speed of the rise in the LS pressure, and prevents any sudden change in the oil pressure. Furthermore, a pressure loss is generated by the circuit resistance between LS shuttle valve (4) and throttle **c** of main spool (2) according to the bypass flow from LS bypass valve (5). As a result, the effective LS differential pressure drops, and the dynamic stability of the actuator is increased.

5. Pressure compensation valve

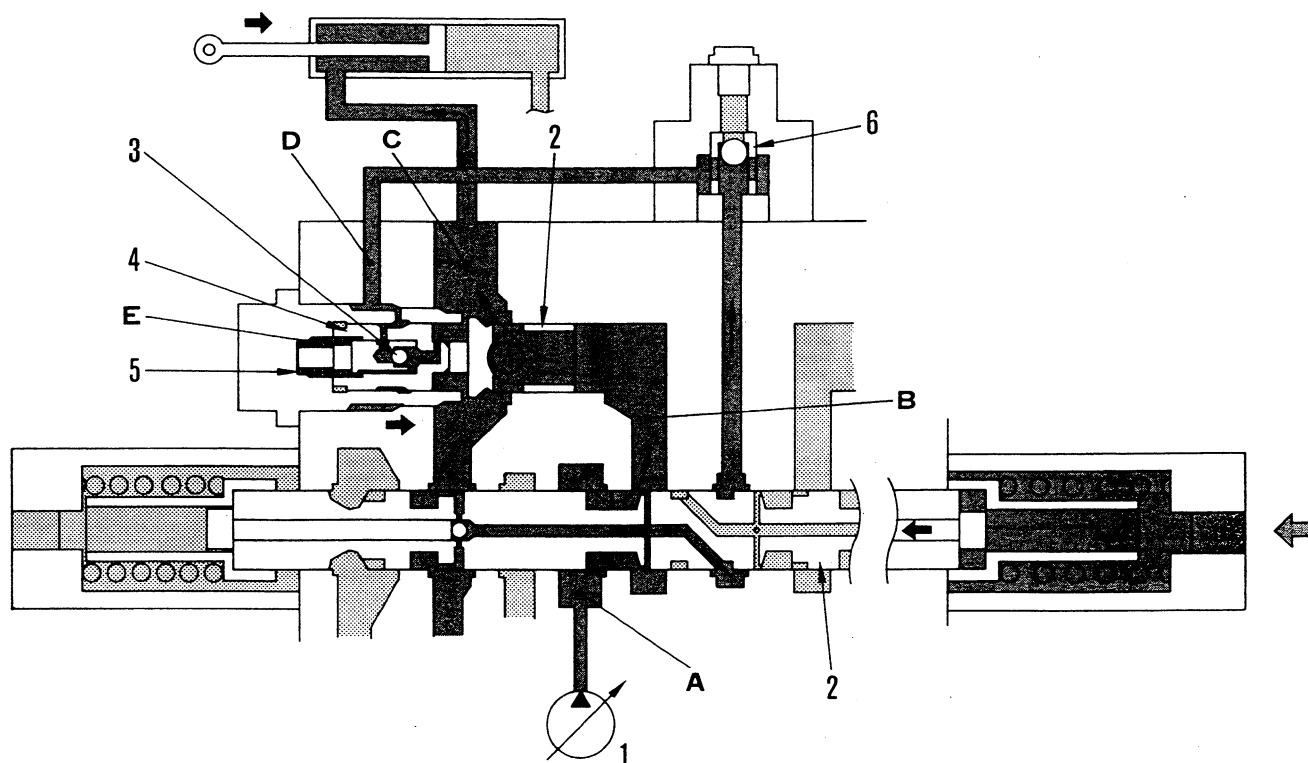

K20506

205F06051


1. Main pump
2. Valve
3. Shuttle valve
4. Piston
5. Spring
6. LS shuttle valve

Function

- 1) **During independent operation and at maximum load pressure (during compound operations, when load pressure is higher than other work equipment)**
 - The pressure compensation valve acts as a load check valve.

Operation

- If the pump pressure (LS pressure) is lower than the load pressure at port C, shuttle valve (3) inside pressure compensation valve piston (4) moves to interconnect spring chamber E and port C. From this condition, the force of spring (5) acts to move piston (4) and valve (2) in the direction of closing.

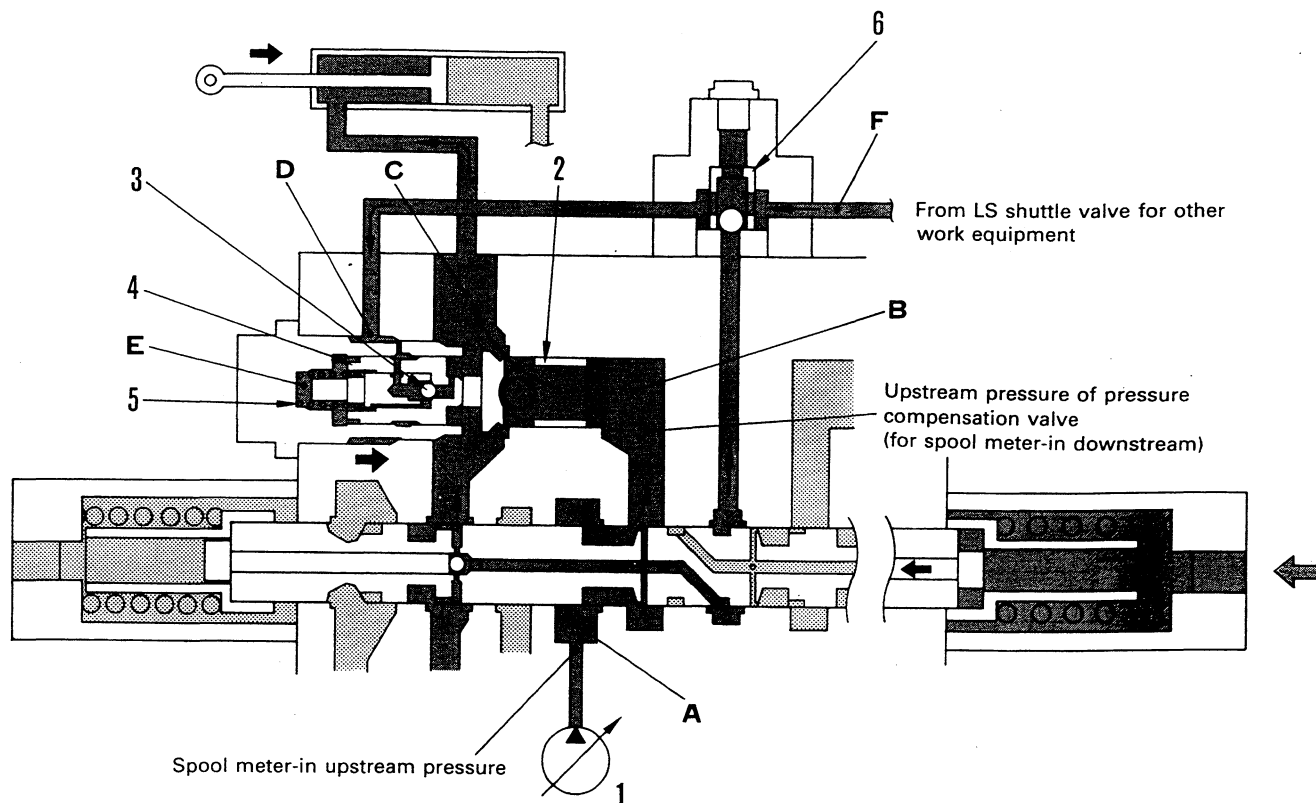

K20506

205F06052

2) When receiving compensation (during compound operations, when load pressure is lower than other work equipment)


- The pressure compensation valve is closed by the LS pressure of port D, and the spool meter-in downstream pressure of port B becomes the same as the maximum pressure of the other work equipment. The spool meter-in upstream pressure of port A is the pump pressure, so spool meter-in differential pressure (upstream pressure (pressure of port A) – downstream pressure (pressure of port B)) becomes the same for all spools that are being operated. Therefore, the pump flow is divided in proportion to the area of the meter-in opening.

Operation

- Spring chamber E is interconnected with port D. Piston (4) and valve (2) are actuated by the LS circuit pressure from the other work equipment at port F in the direction of closing (to the right). In other words, the valve upstream pressure of port B (= spool meter-in downstream pressure) is controlled by the LS pressure.

6. Shuttle valve inside pressure compensation valve

K20506

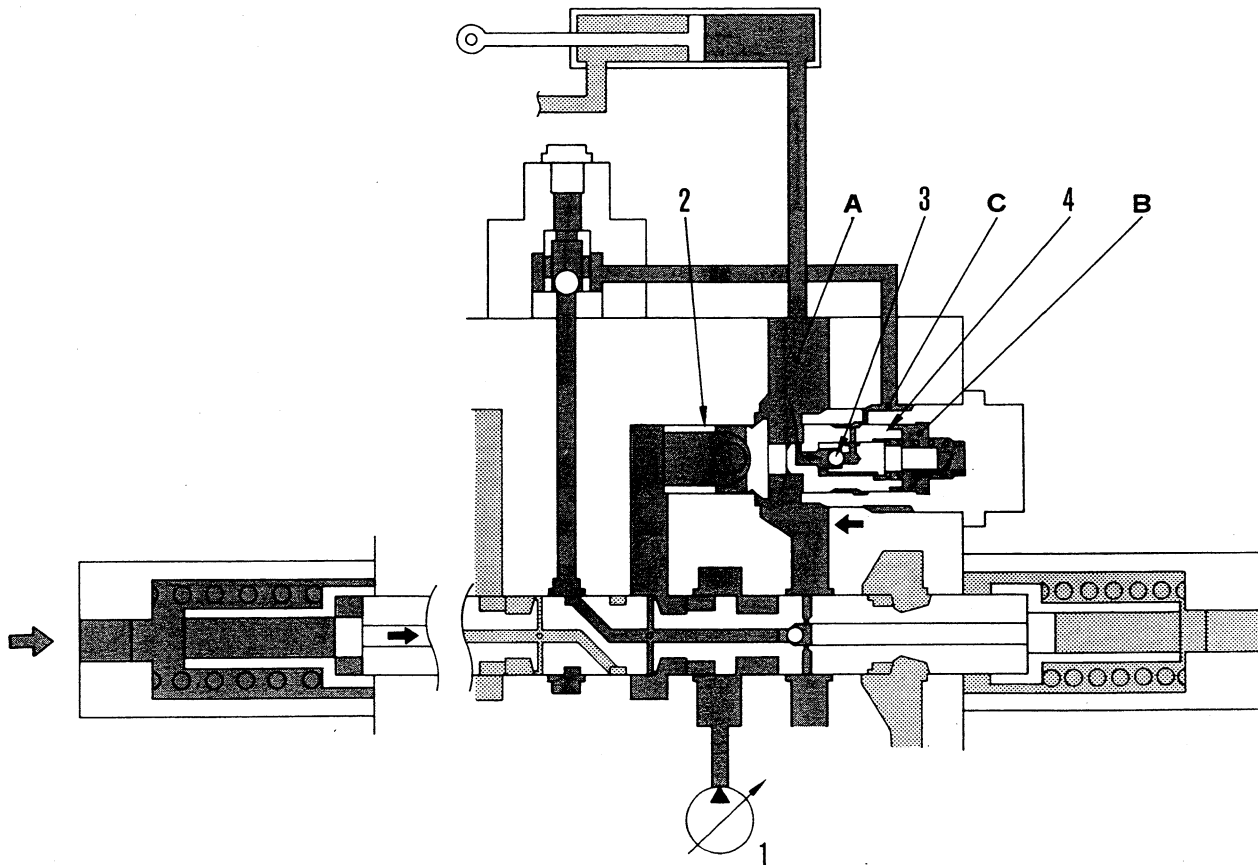


205F06053

1. Main pump
2. Valve
3. Shuttle valve inside pressure compensation valve
4. Piston

Function

When holding pressure at port A > LS pressure in spring chamber B

- Shuttle valve (3) is pushed to the right by the pressure of port A, and the circuit between ports A and C is shut off. In this condition, the holding pressure at port A is taken to spring chamber B, and pushes piston (4) to the left to prevent piston (4) and valve (2) from separating.

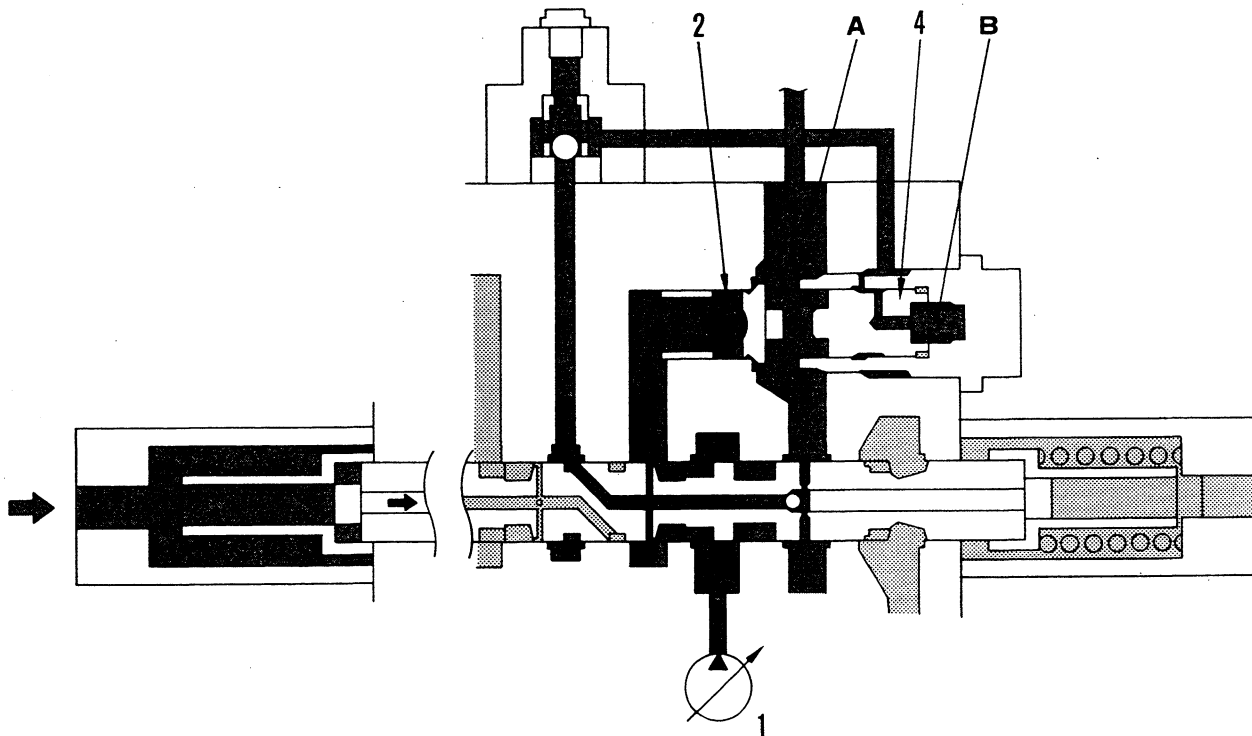


205F06054

K20506

For travel, swing

Travel: No holding pressure is generated at port A in the travel circuit, so a pressure compensation valve without a shuttle valve is used.


Swing: The holding pressure at the swing port is low, so a pressure compensation valve without a shuttle valve is used.

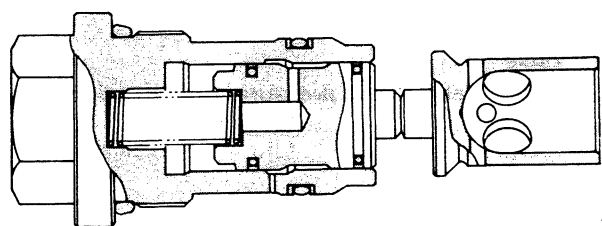


205F06055

Reference: When there is no shuttle valve

- If there is no shuttle valve, piston (4) and valve (2) will separate. In this condition, if another actuator is operated, the piston acts as an accumulator, so there is a time lag.

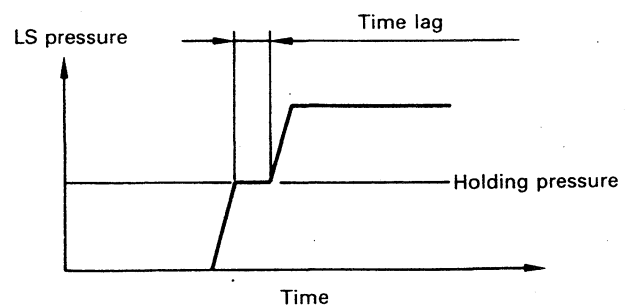

205F06056

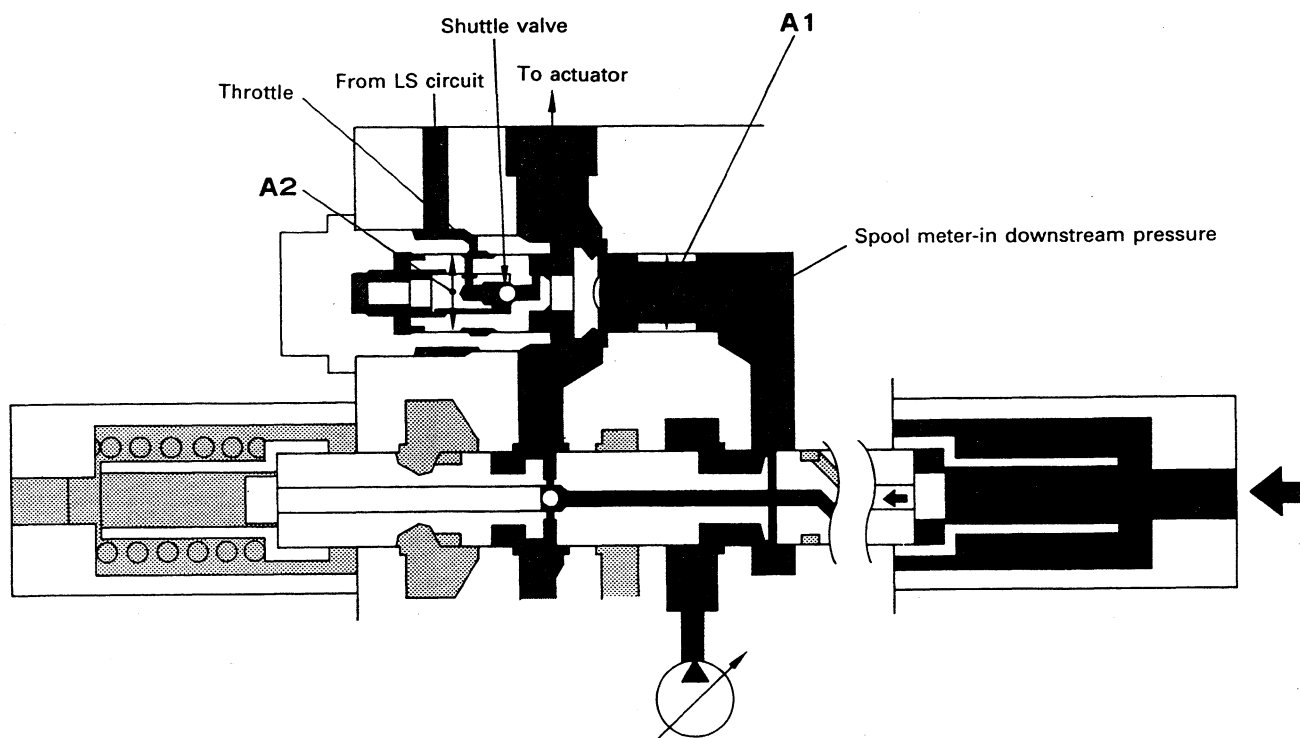

K20506

205F06057


Surface area ratio of pressure compensation valve

The condition of the flow division changes according to the ratio of the area of portion **A1** and portion **A2** of the pressure compensation valve.

Area ratio = $A2/A1$

- When area ratio = 1:
Spool meter-in downstream pressure = Max. load pressure, and oil flow is divided in proportion to area of opening of spool.
- When ratio is more than 1:
Spool meter-in downstream pressure > Max. load pressure, and oil flow is divided in a proportion less than area of opening of spool.
- When ratio is less than 1:
Spool meter-in downstream pressure < Max. load pressure, and oil flow is divided in a proportion more than area of opening of spool.

7. Boom regeneration circuit

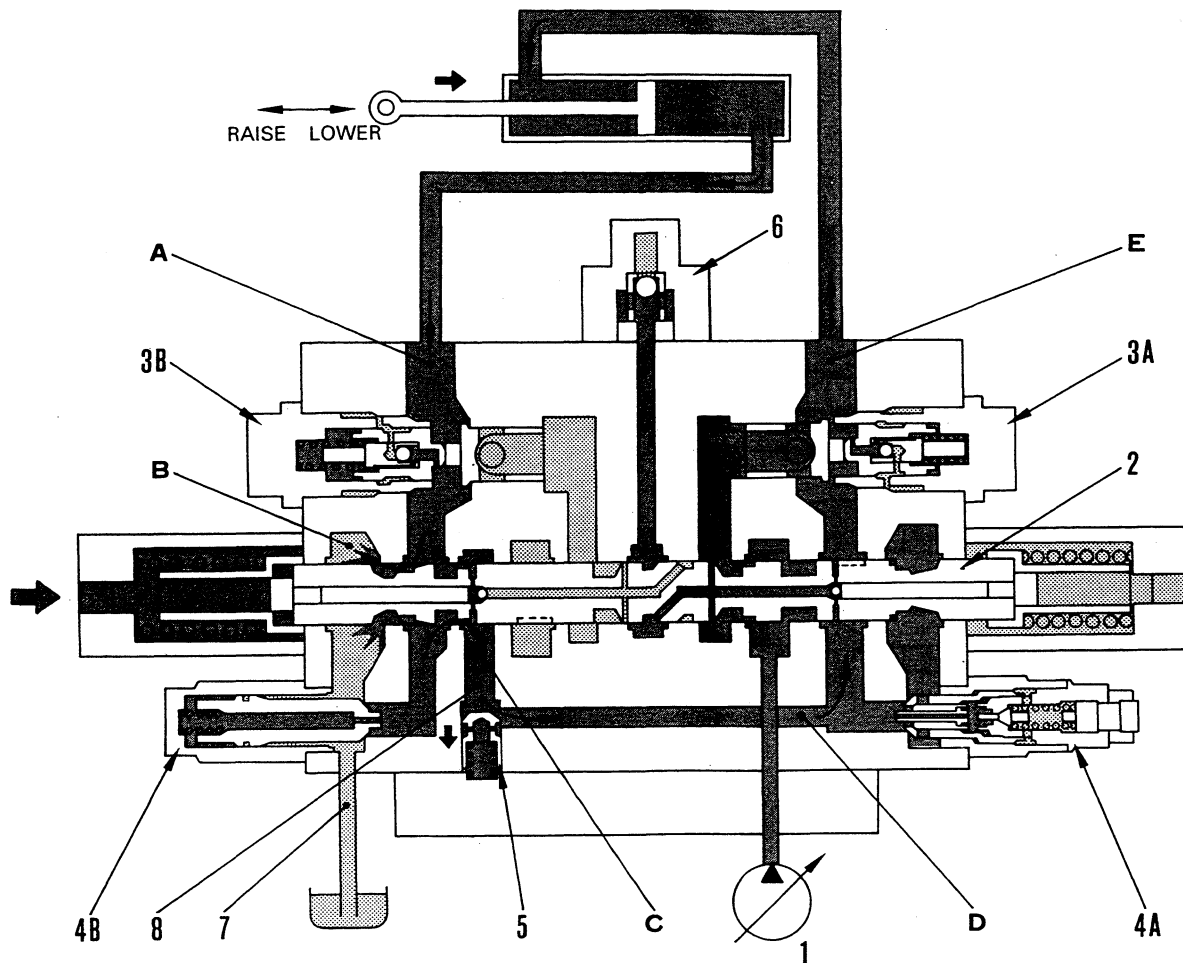

K20506

205F06058


1. Main pump
2. Main spool
- 3A. Pressure compensation valve
- 3B. Pressure compensation valve
- 4A. Safety-suction valve
- 4B. Suction valve
5. Check valve
6. LS shuttle valve
7. Drain circuit
8. Regeneration circuit

Function**1) Cylinder head pressure < cylinder bottom pressure (free fall, etc.)**

- A return flow circuit is provided from the cylinder bottom to the cylinder head so that when the boom is lowered, the return flow can be used to increase the flow of oil from the pump to the cylinder bottom.

Operation


- When the cylinder head pressure < cylinder bottom pressure, part of the pressurized oil from the cylinder bottom passes through the notch in spool (2), goes through port B, and enters drain circuit (7). The rest of the oil goes from port C, enters regeneration circuit (8), opens check valve (5), and passes through ports C and D to flow back to the cylinder head.

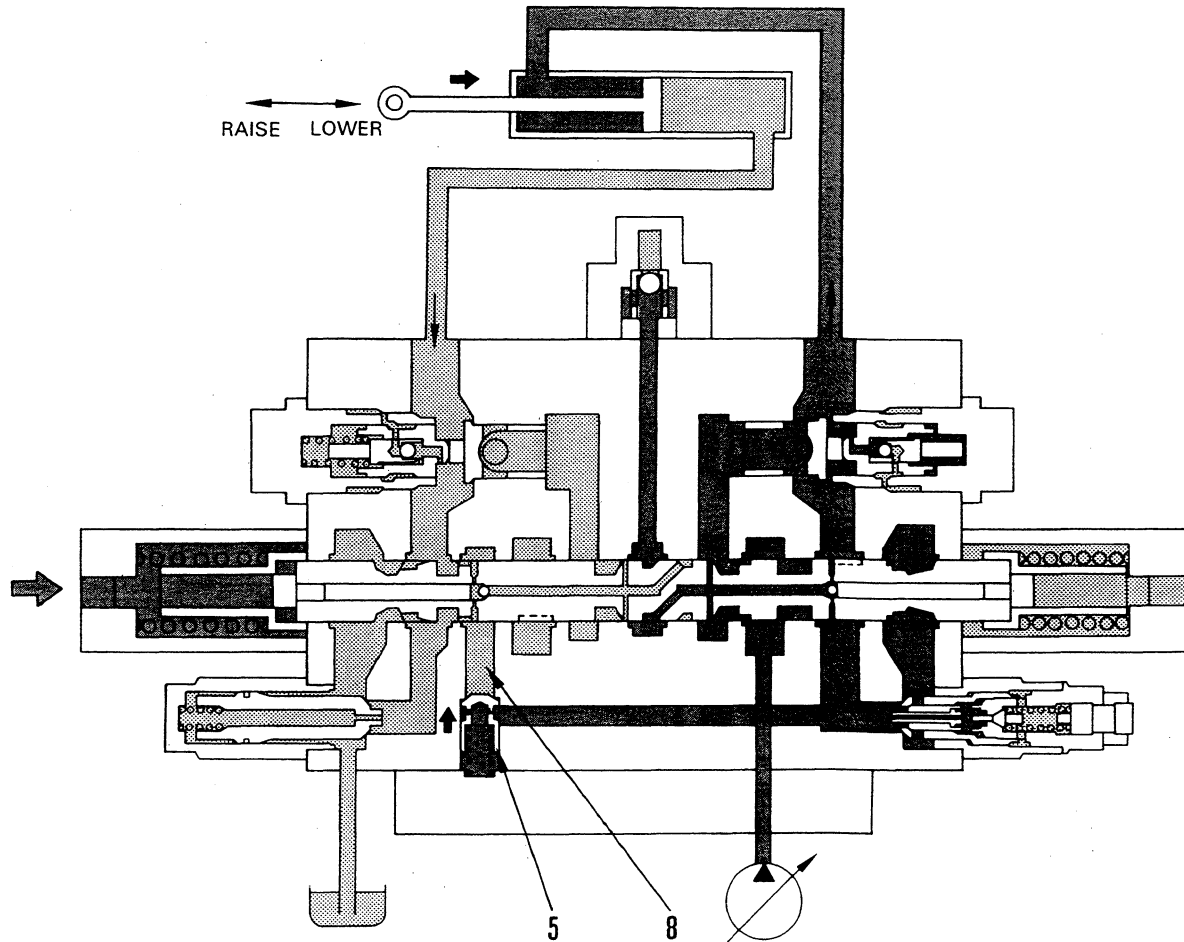

205F06059

- 2) **Cylinder head pressure > Cylinder bottom pressure (digging operations, etc.)**
- Check valve (5) in regeneration circuit (8) acts to shut off the flow from the cylinder head to the cylinder bottom.

8. Arm regeneration circuit

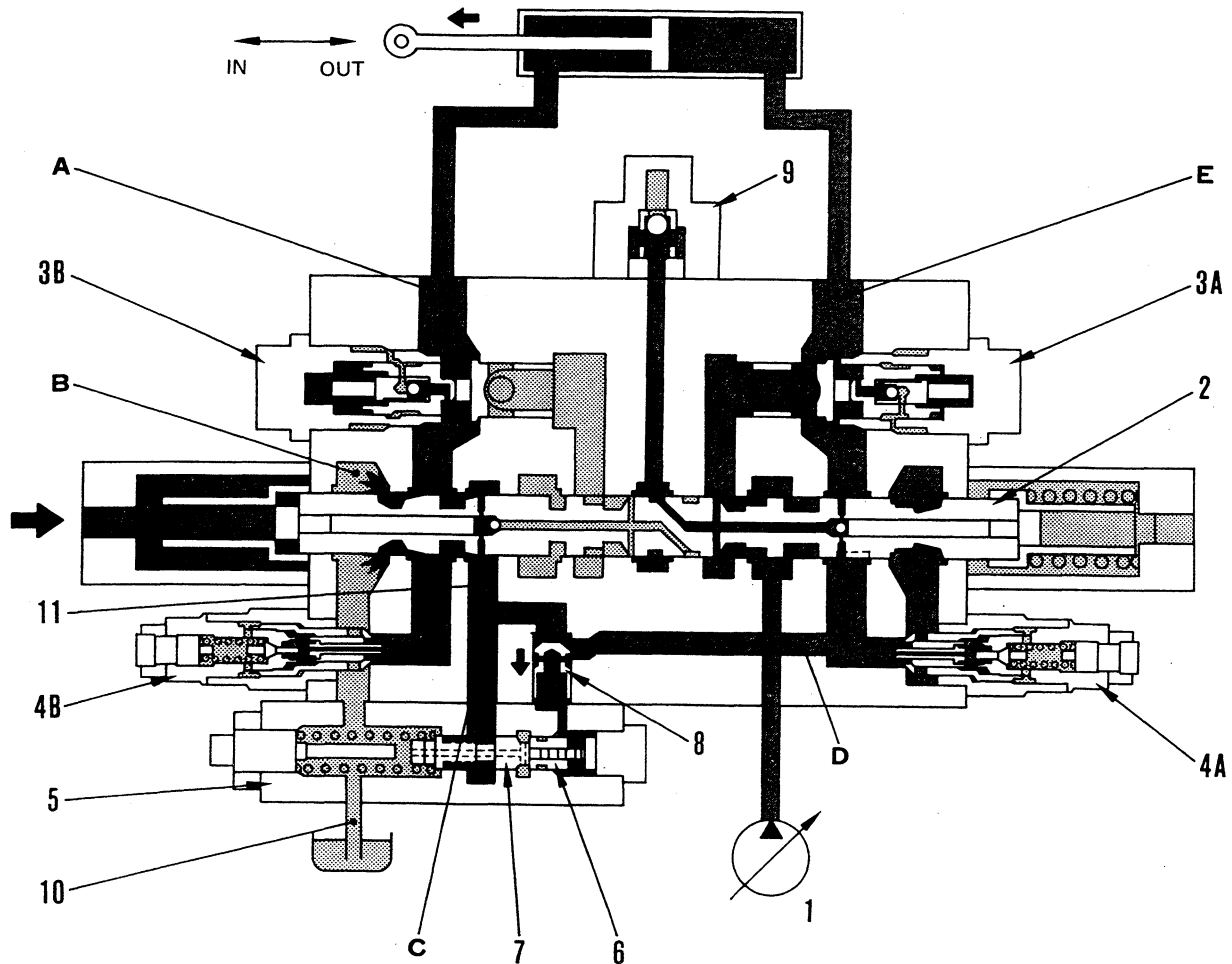

K20506

205F06060


1. Main pump
2. Main spool
- 3A. Pressure compensation valve
- 3B. Pressure compensation valve
- 4A. Safety valve
- 4B. Safety valve
5. Arm counterbalance valve
6. Piston
7. Spool
8. Check valve
9. LS shuttle valve
10. Drain circuit
11. Regeneration circuit

Function**1) Cylinder head pressure > cylinder bottom pressure**

- A return flow circuit is provided from the cylinder head to the cylinder bottom so that when the arm is moved in, the flow of oil to the cylinder becomes the pump discharge amount + the return flow, and this increases the cylinder speed.

Operation

- When the cylinder head pressure > cylinder bottom pressure, the pressurized oil from the cylinder head passes through the notch in spool (2), enters port C and opens check valve (8), then passes through ports D and E to flow back to the cylinder bottom.

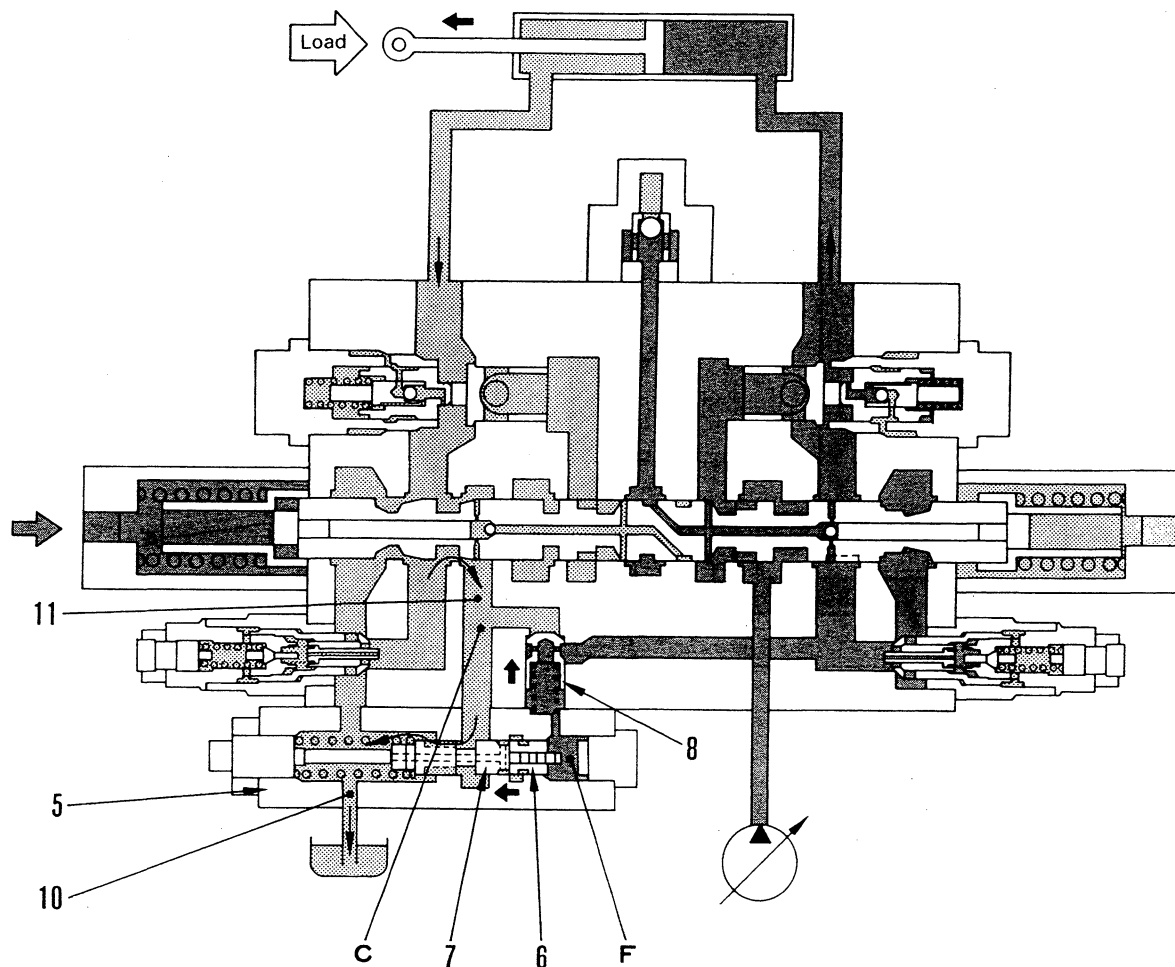

K20506

205F06061

2) When load is large

- During arm IN operations, if the load increases and the cylinder bottom pressure exceeds 16.6 MPa (170 kg/cm²), counterbalance valve (5) is actuated to increase the meter-out opening at the cylinder head. This reduces the pressure loss between the cylinder head and the hydraulic tank, and ensures the digging force.


3) Cylinder bottom pressure > Cylinder head pressure

- When the cylinder bottom pressure > cylinder head pressure, check valve (8) is closed by the cylinder bottom pressure and prevents any oil flowing back from the cylinder bottom to the head end.

Operation

- The cylinder bottom pressure enters port **F** and pushes piston (6) to the left. Spool (7) moves fully to the left and interconnects port **C** of regeneration circuit (11) and tank drain circuit (10). As a result, the pressure loss in the drain circuit is reduced.

9. Arm counterbalance valve

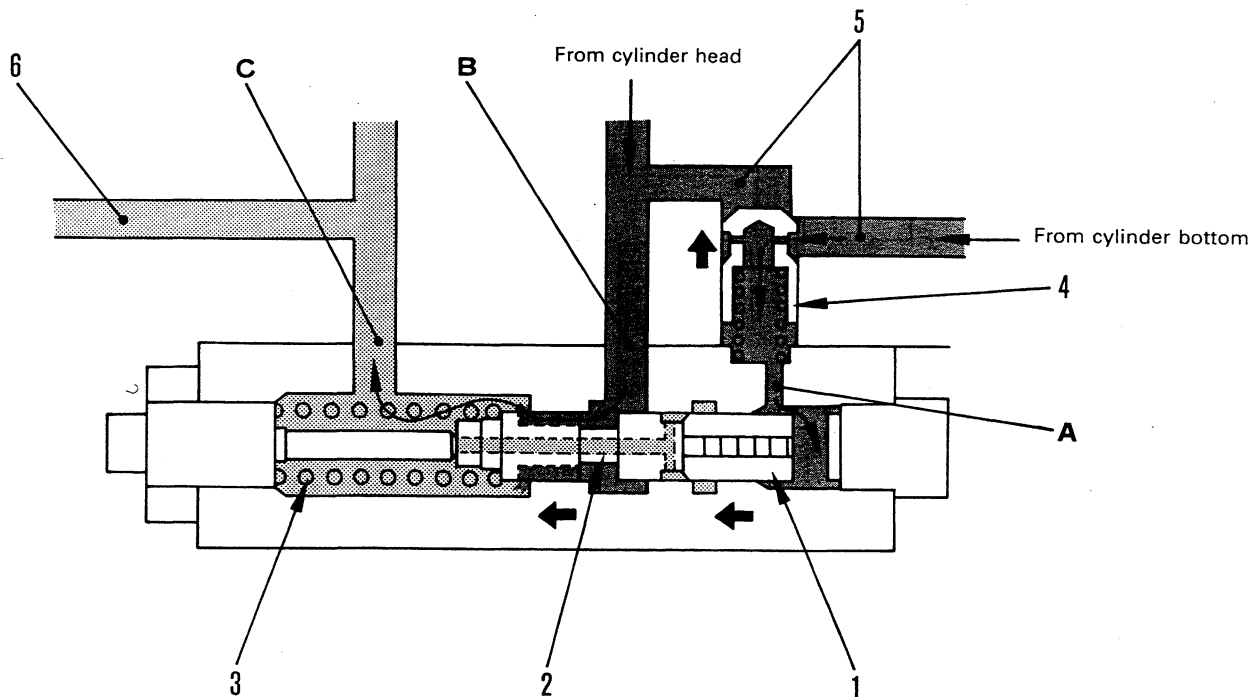

K20506

205F06062



1. Piston
2. Spool
3. Spring
4. Check valve
5. Regeneration circuit
6. Tank drain circuit

Operation

- During arm IN operations, if the actuating pressure at the arm cylinder bottom rises, the pressure at port A also rises. When the force received by piston (1) from the pressure at port A becomes greater than the force of spring (3), piston (1) moves to the left.
- Spool (2) is pushed by piston (1) and also moves to the left, so ports B and C are interconnected. When this happens, the pressurized oil from the cylinder head passes through ports B and C, and flows directly to drain circuit (6). (The pressure loss is removed when draining.)
- When this happens, check valve (4) is closed by the pressure at port A, so it shuts off regeneration circuit (5), and prevents the oil from flowing back from the cylinder bottom to the head end.

10. Spool stroke modulation

(1) Boom raise modulation

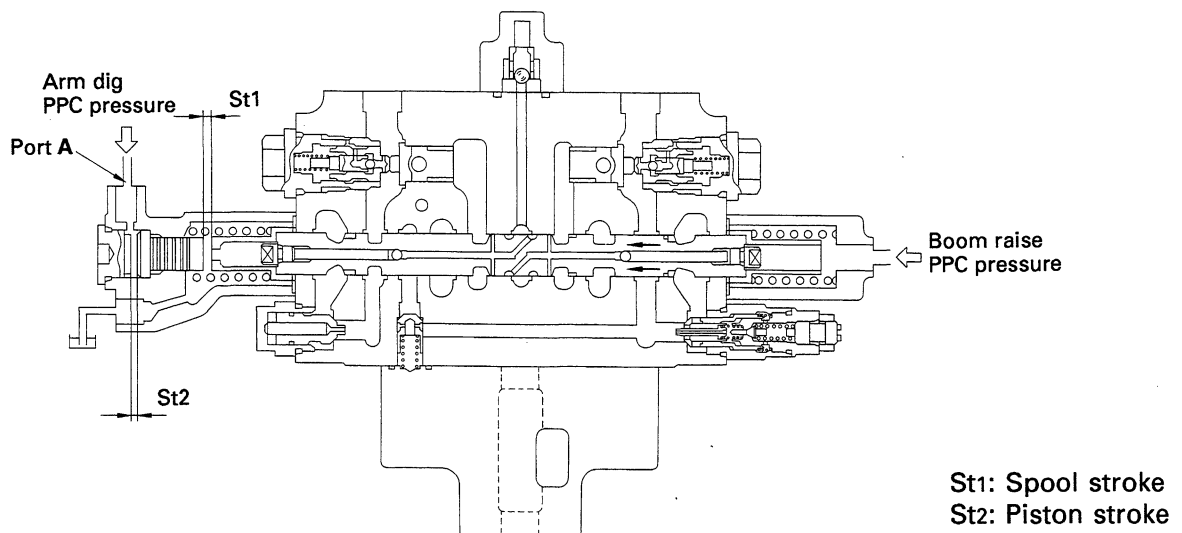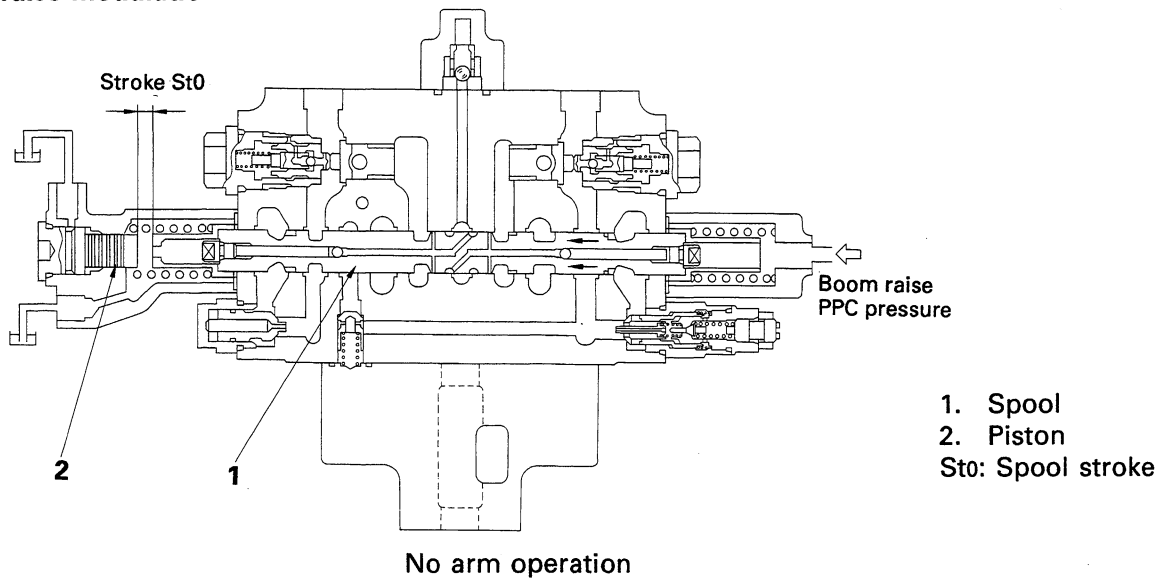

Function



When boom RAISE and arm DIG are operated simultaneously, good simultaneous operation is achieved by restriction of boom spool max. stroke.

Operation

1. **When no arm operation**
When boom raises, spool (1) goes to left (←) by stroke **St0** to touch piston (2)
2. **When arm digs**
 - (1) Arm DIG PPC pressure goes to L.H. of piston (2) from Port A, and pushes piston (2) to right (→).
 - (2) When boom raises, spool (1) goes to left (←), but spool max. stroke is restricted to **St1** because piston (2) moves by **St2**.

K20506

(3) Arm dig modulation I

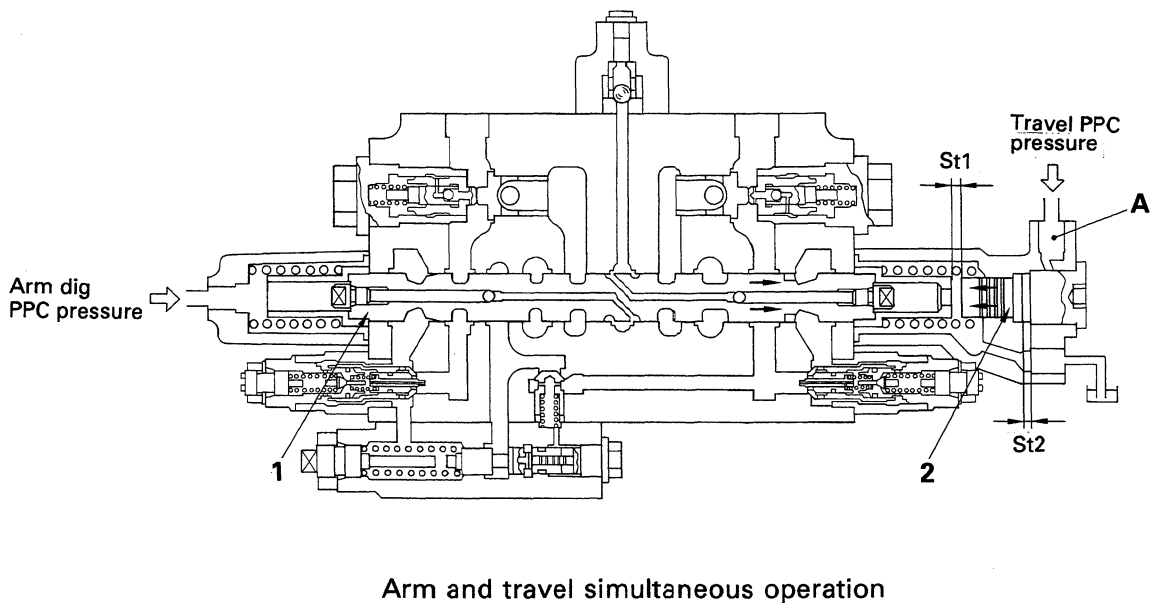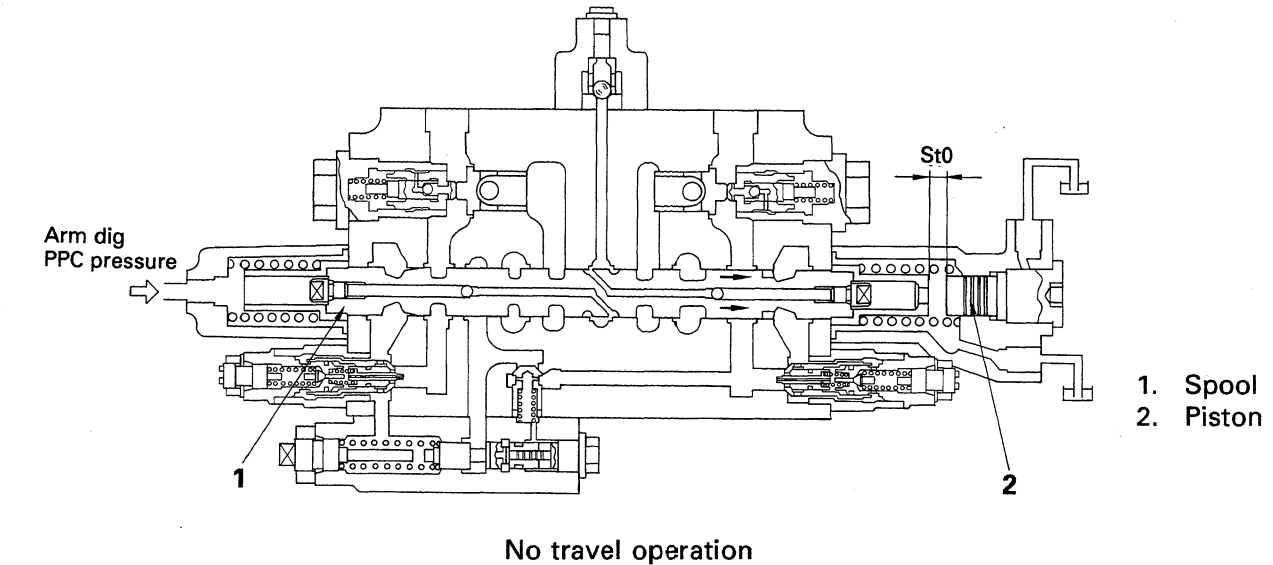**Function**

When machine goes up high slope and arm digs, flow to arm cylinder is restricted by limitation of arm spool stroke to avoid pressure drop of pump. F pump flow goes to L.H. travel motor through travel junction valve.



Operation**1. With no travel operation**

When arm digs, spool (1) goes to R.H. (→) by stroke **St0** to touch piston (2).

2. With travel operation

(1) Travel PPC pressure goes to R.H. of piston (2) from port **A**, and pushes piston (2) to left.


(2) When arm digs, spool (1) goes to right (→), but spool max. stroke is restricted to **St1** because piston (2) moves by **St2**.

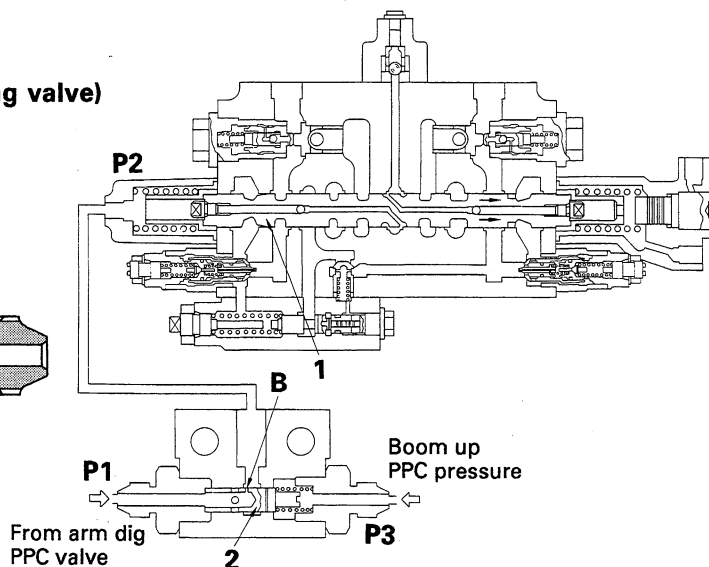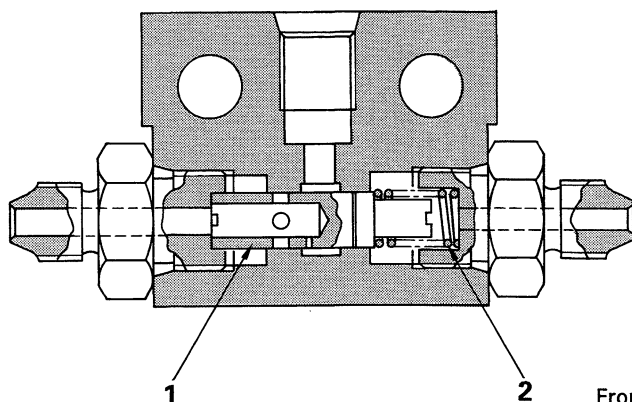(4) Arm dig modulation II (Arm dig PPC timing valve)**Function**

In simultaneous operation of boom and arm, such as finishing, arm spool speed is delayed to prevent sudden speed change of arm and machine operates smoothly.

Operation

When arm digs and boom raises simultaneously, spool is delayed because PPC circuit is reduced by arm timing valve and pressure which forces spool (1) is reduced.

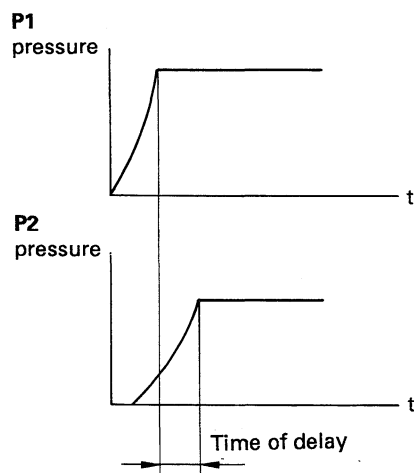8. Movement of arm timing valve

During simultaneous operation

Function

Reduce arm PPC pressure to M/V for simultaneous operation of arm dig and boom up.

Operation**1. Simple operation of arm dig**

PPC pressure goes to **P1** port and pushes spool (1) to right against spring (2) and **P1** port through **P2** port via **B**.


2. Simultaneous operation of arm dig and boom up

- (i) When boom raises, PPC pressure goes to **P3** port and pushes spool (1) to left. When levers are fully stroked towards arm dig and boom raise simultaneously, spool (1) is pushed to left by force according to following formula.

$$P1 \text{ pressure} \leq P2 \text{ pressure} + \text{spring force}$$

$$(P1 \text{ pressure} = P2 \text{ pressure})$$
- (ii) Then **B** is intercepted and PPC pressure of arm dig goes to **P2** port from **P1** port via orifice **A**.

11. Pump merge-divider valve

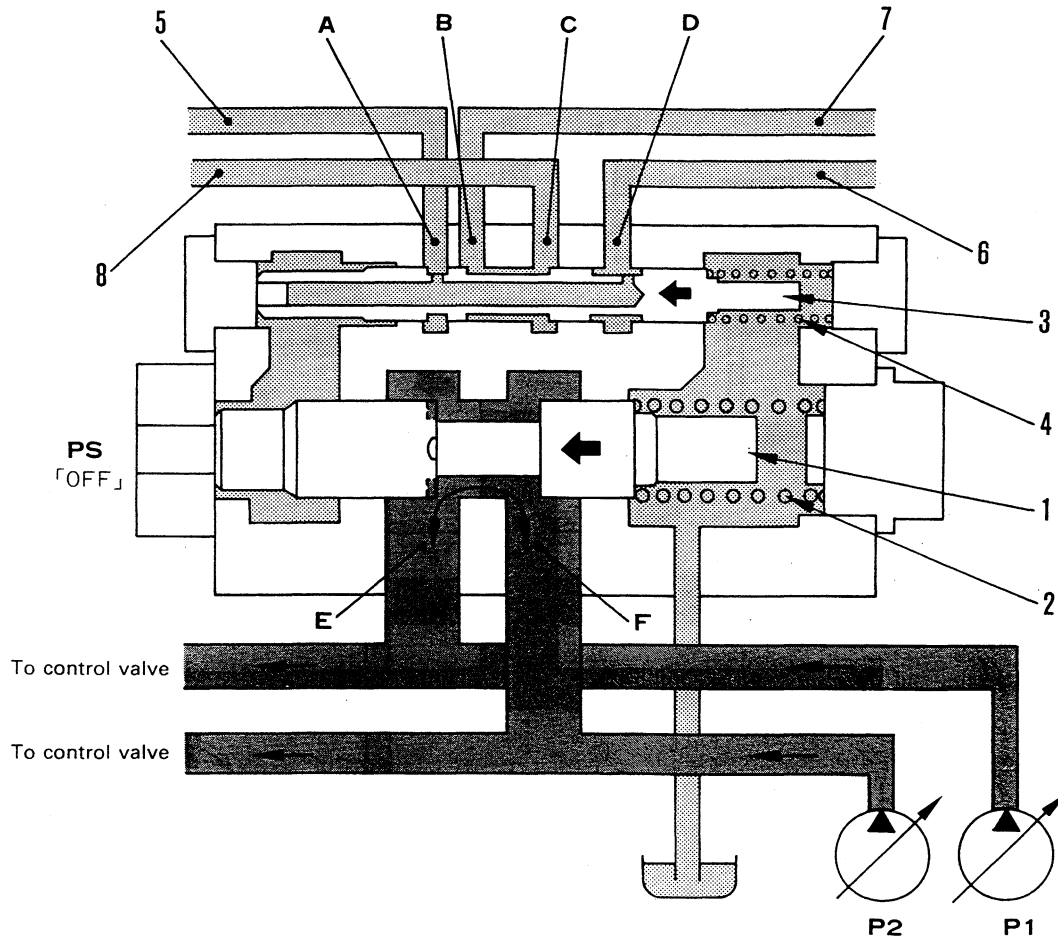

K20506

205F06063


1. Main spool
2. Spring
3. LS spool
4. Spring
5. LS circuit (bucket end)
6. LS circuit (arm end)
7. LS circuit (arm end)
8. LS circuit (bucket end)

Function

- This acts to merge or divide (send to its own control valve group) oil flows **P1** and **P2** of pressurized oil discharged from the two pumps.
- At the same time, it also carries out merging and dividing of the LS circuit pressure.

Operation**1) When merging pump flow (when pilot pressure PS is OFF)**

- Pilot pressure **PS** is OFF, so main spool (1) is pushed to the left by spring (2), and ports **E** and **F** are interconnected. Therefore, pressurized oil **P1** and **P2** discharged from the two pumps is merged at ports **E** and **F**, and is sent to the control valve that demands the oil.
- In the same way, LS spool (3) is also pushed to the left by spring (4), so the ports are connected as follows.
Connected ports: **A ↔ D, B ↔ C**
- Therefore, the LS pressure supplied from the spools of each control valve to LS circuits (5), (6), (7), and (8) is all sent to the pressure compensation valve and other valves.

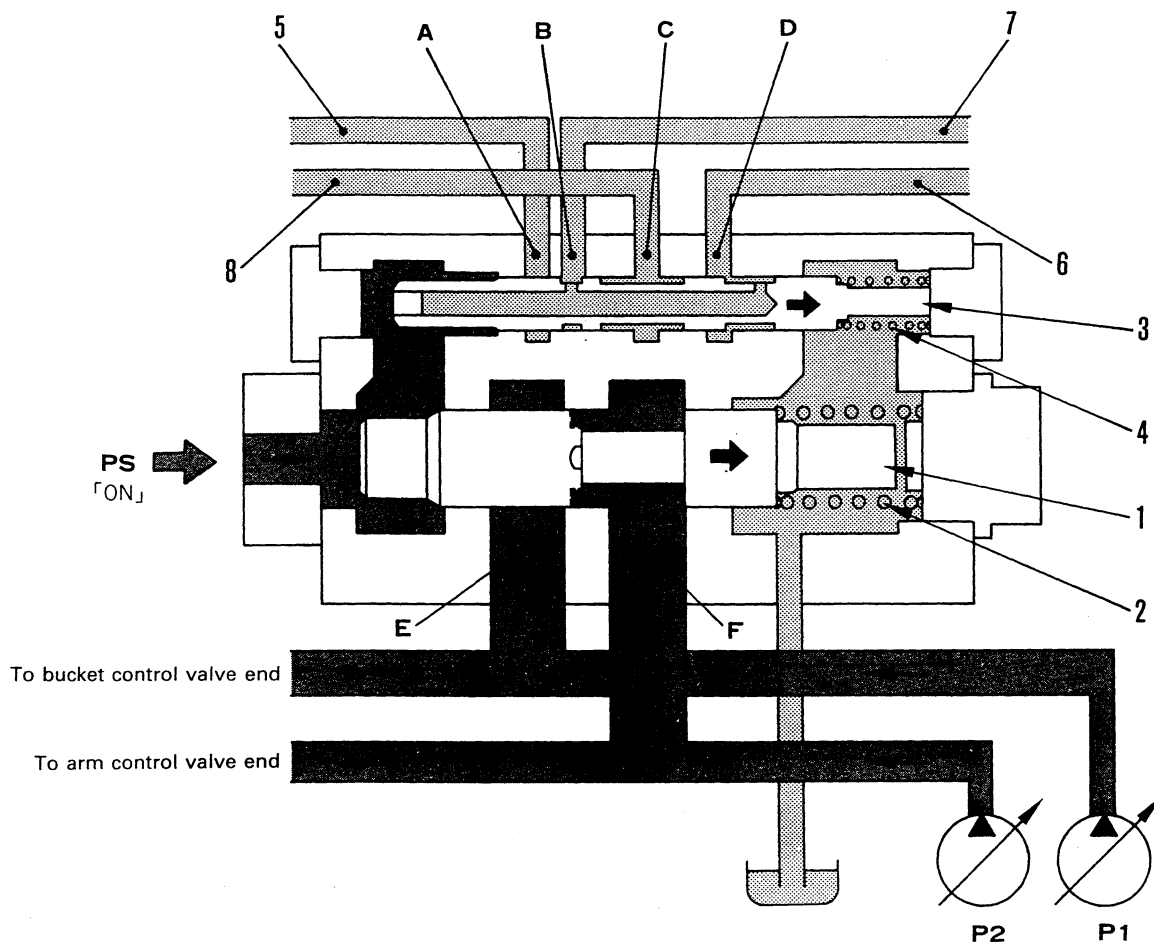STRUCTURE AND FUNCTION

205F06064

2) When dividing pump flow (when pilot pressure PS is ON)

- When pilot pressure **PS** is ON, main spool (1) is moved to the right by the **PS** pressure, and ports **E** and **F** are disconnected. Therefore, the pressurized oil discharged from each pump is sent to its own control valve group.

Pressure **P1**:

To bucket, R.H. travel, boom group

Pressure **P2**:

To swing, L.H. travel, arm group

- In the same way, LS spool (3) is also moved to the right by the **PS** pressure, and the prots are connected as follows.


Connected ports:

B ↔ D, others are not connected.

Therefore, LS circuits (5), (6), (7) and (8) are all sent to their own control valve group.

12. LS select valve

- ★ The diagram shows the situation when the swing and left travel are operated at the same time. (BP pressure ON)

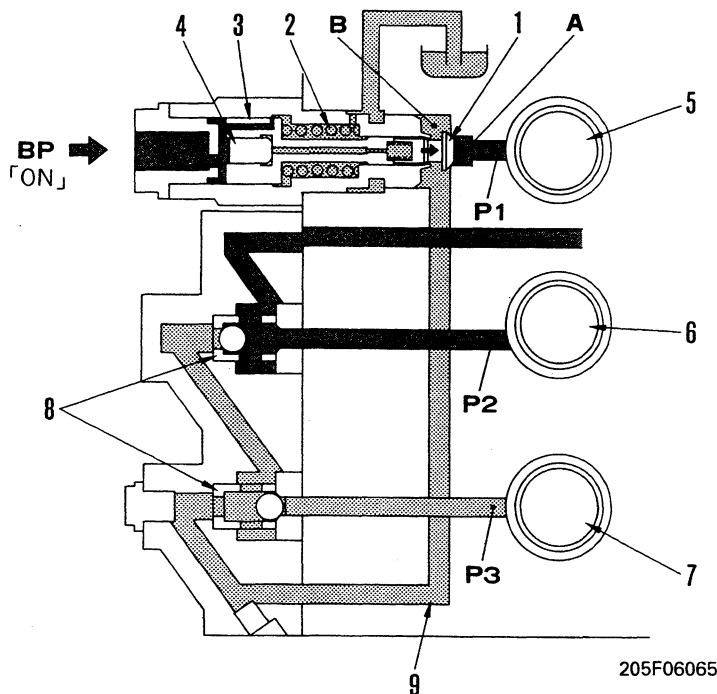**Function**



- This valve is used to increase the ease of operating the work equipment. It prevents high pressure from being generated when the swing is operated. It also prevents the high LS pressure from the swing circuit from flowing into any other LS circuit when the swing is operated together with the work equipment.

Operation**1) When pilot pressure BP is OFF**

- Pilot pressure BP is OFF, so piston (3) is pushed to the left by spring (2). If the swing is then operated, swing LS pressure P1 passes through swing spool (5) and enters port A. It pushes valve (1) to the left and connects ports A and B. Therefore, swing LS pressure P1 flows to LS shuttle valve (8).

2) When pilot pressure BP is ON

- When pilot pressure BP is ON, piston (3) is moved to the right against spring (2) by the BP pressure. It pushes valve (1) to the right and closes the circuit between ports A and B. As a result, swing LS pressure P1 stops flowing to LS shuttle valve (8), and even if swing LS pressure P1 rises to a high pressure, it does not influence any other LS circuit.

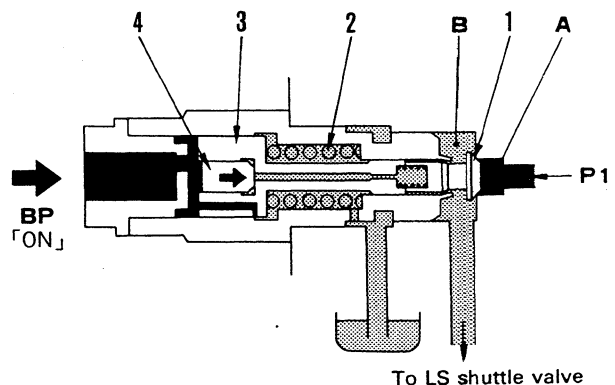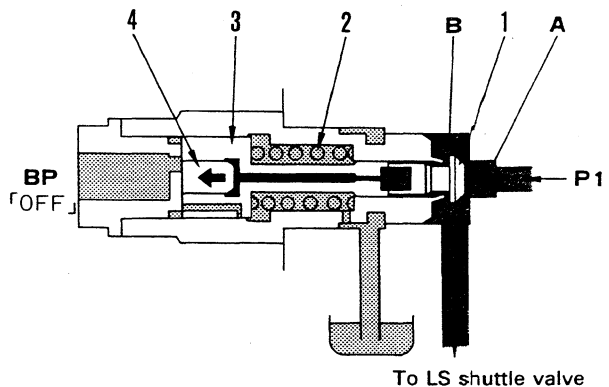


Operation

- 1) When the arm and boom are operated simultaneously, the swash plate angle for both pumps becomes the maximum.
When this happens, the load pressure at the boom RAISE side is higher than at the arm side, so the LS pressure passes through ports **E** and **F** of boom spool (8), enters LS shuttle valve (22) and is sent to the LS circuit. This LS pressure is transmitted to port **G** of arm pressure compensation valve (17), and acts to increase the set pressure of the pressure compensation valve. Because of this, the pressure between port **H** or arm spool (11) and port **I** or pressure compensation valve (17) rises, and spool meter-in LS differential pressure (pump pressure – LS pressure = ΔPLS) becomes the same as that at the boom end.
- 2) Because of the above operation, the oil flow is divided in proportion to the size of the opening area of boom spool (8) and the opening area of arm spool (11).
Meter-in LS differential pressure ΔPLS during boom RAISE + arm IN is $\Delta PLS < \text{boom LS control pressure}$, so the main pump swash plate angle is set to maximum.

K20506

SWING MOTOR

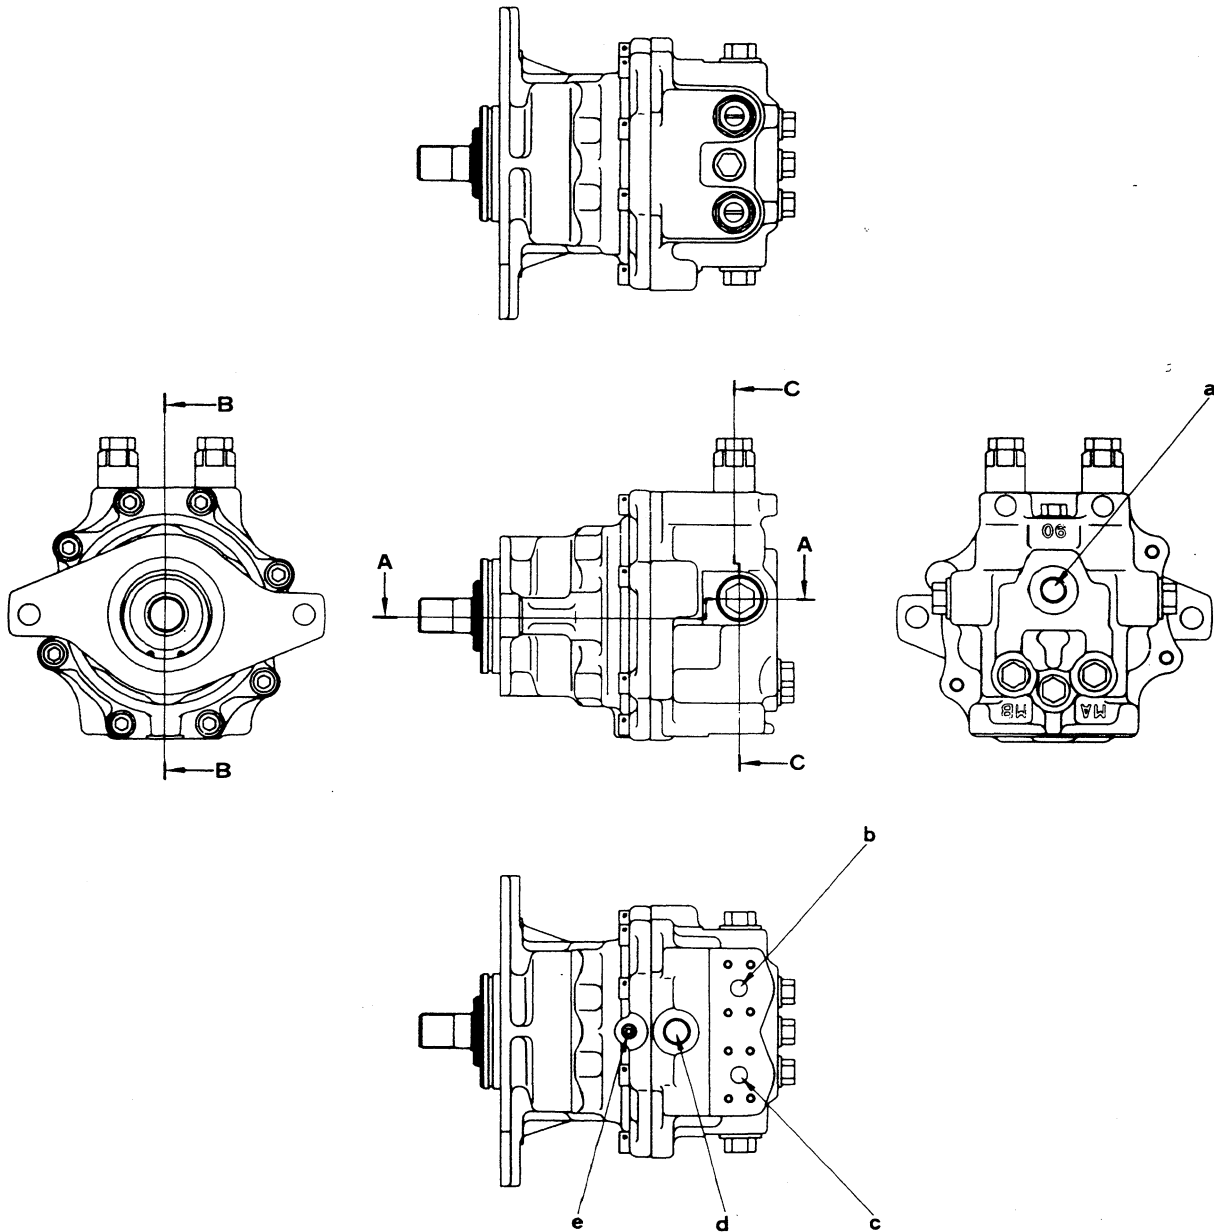


F205C5015

- a. Port **S**
- b. Port **MB** (from control valve)
- c. Port **MA** (from control valve)
- d. Port **T** (to tank)
- e. Port **B** (from swing brake solenoid valve)


SPECIFICATIONS

Item \ Model	PC210-6K	PC240-6K
Type	KMF90AB-2	
Theoretical delivery	87.8 cc/rev	
Safety valve set pressure	27.44 MPa (280 kg/cm ²)	
Rated speed	2,298 rpm	2,403 rpm
Brake releasing pressure	1.37 MPa (14 kg/cm ²)	


K20506

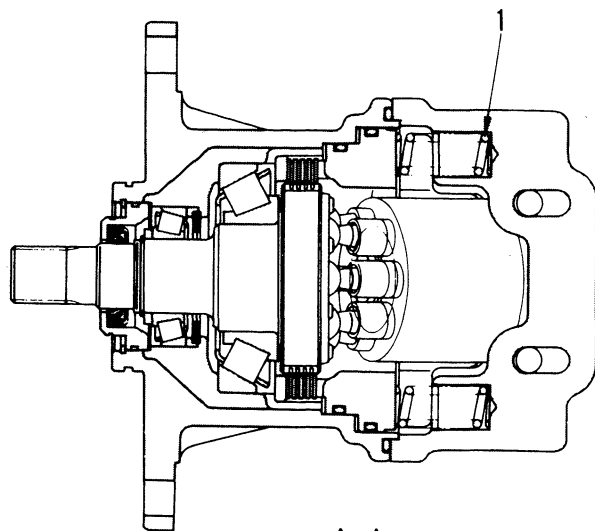

A-A

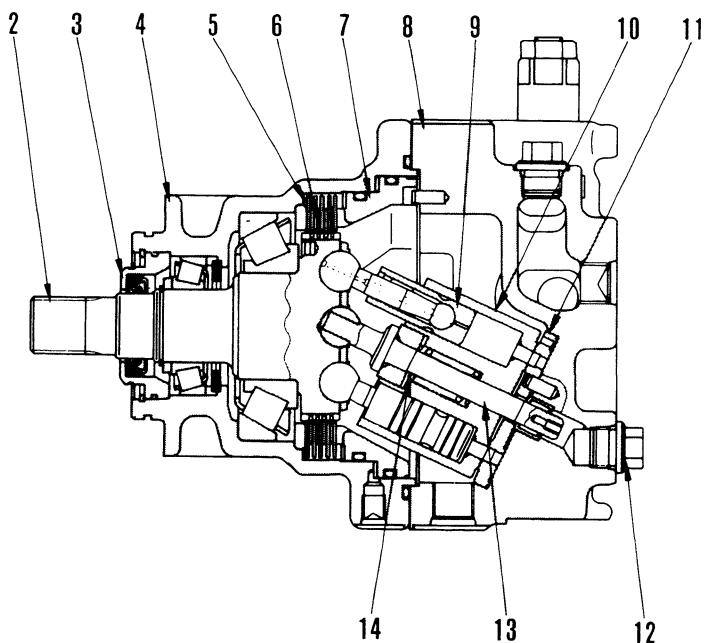

B-B

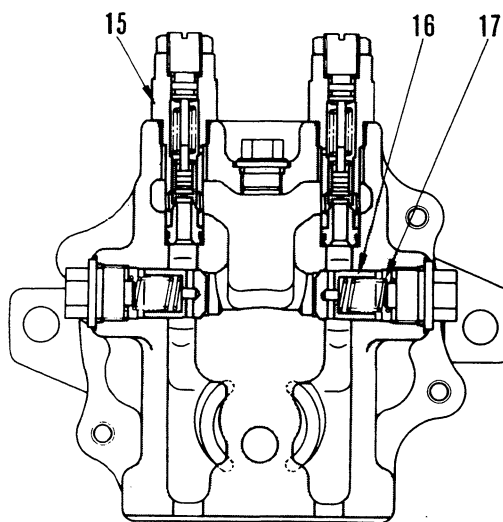

C-C

1. Brake spring
2. Drive shaft
3. Cover
4. Case
5. Disc
6. Plate
7. Brake piston
8. End cover
9. Piston

10. Cylinder
11. Valve plate
12. Air bleed plug
13. Center shaft
14. Center spring
15. Safety valve
16. Check valve
17. Check valve spring

F205C5016


SWING HOLDING BRAKE

OPERATION

1) When swing brake solenoid valve is deactivated

When the swing brake solenoid valve is deactivated, the pressurized oil from the control pump is shut off and port **B** is connected to the tank circuit.

Because of this, brake piston (7) is pushed down in the direction of the arrow by brake spring (1), so disc (5) and plate (6) are pushed together and the brake is applied.

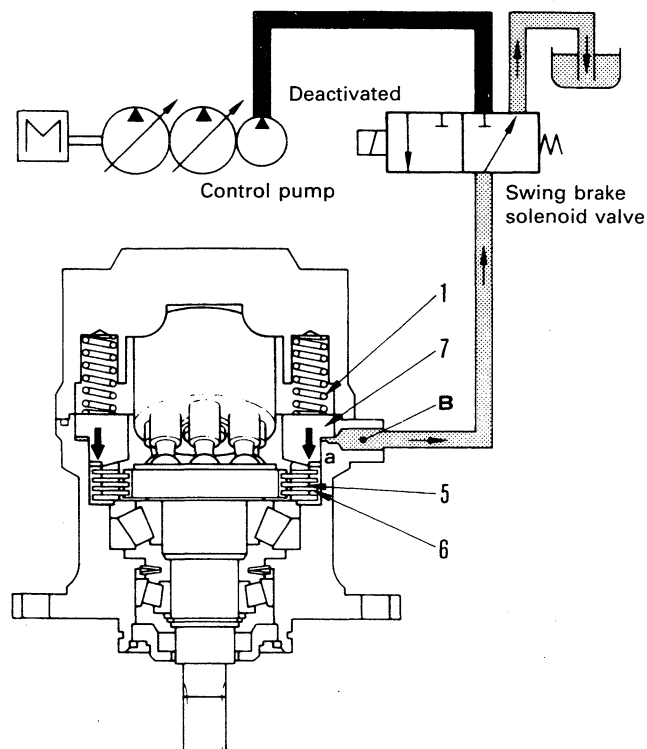


205F05050

2) When swing brake solenoid valve is excited

When the swing solenoid valve is excited, the valve is switched, and the pressurized oil from the control pump enters port **B** and flows to brake chamber "a".

The pressurized oil entering chamber "a" overcomes the force of brake spring (1), and brake piston (7) is pushed up in the direction of the arrow. Because of this, disc (5) and plate (6) separate, and the brake is released.

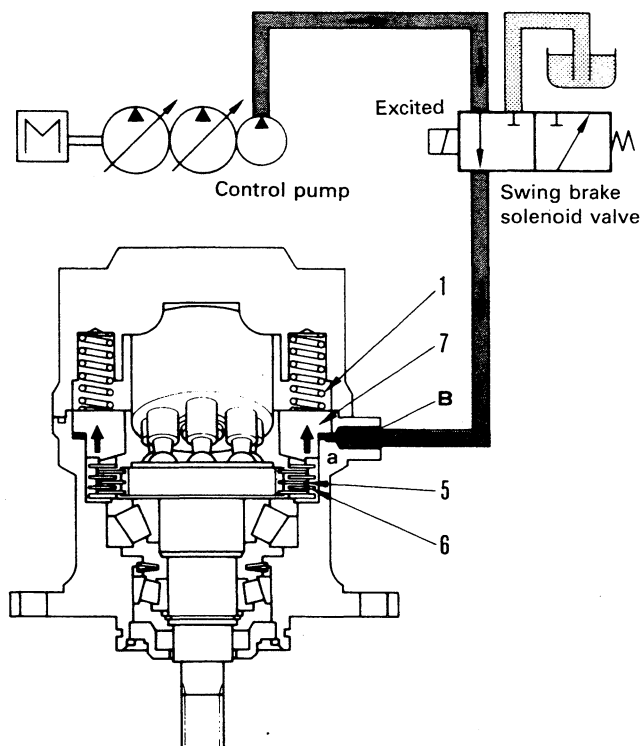


205F05051

K20506

CENTER SWIVEL JOINT

4-PORT SWIVEL

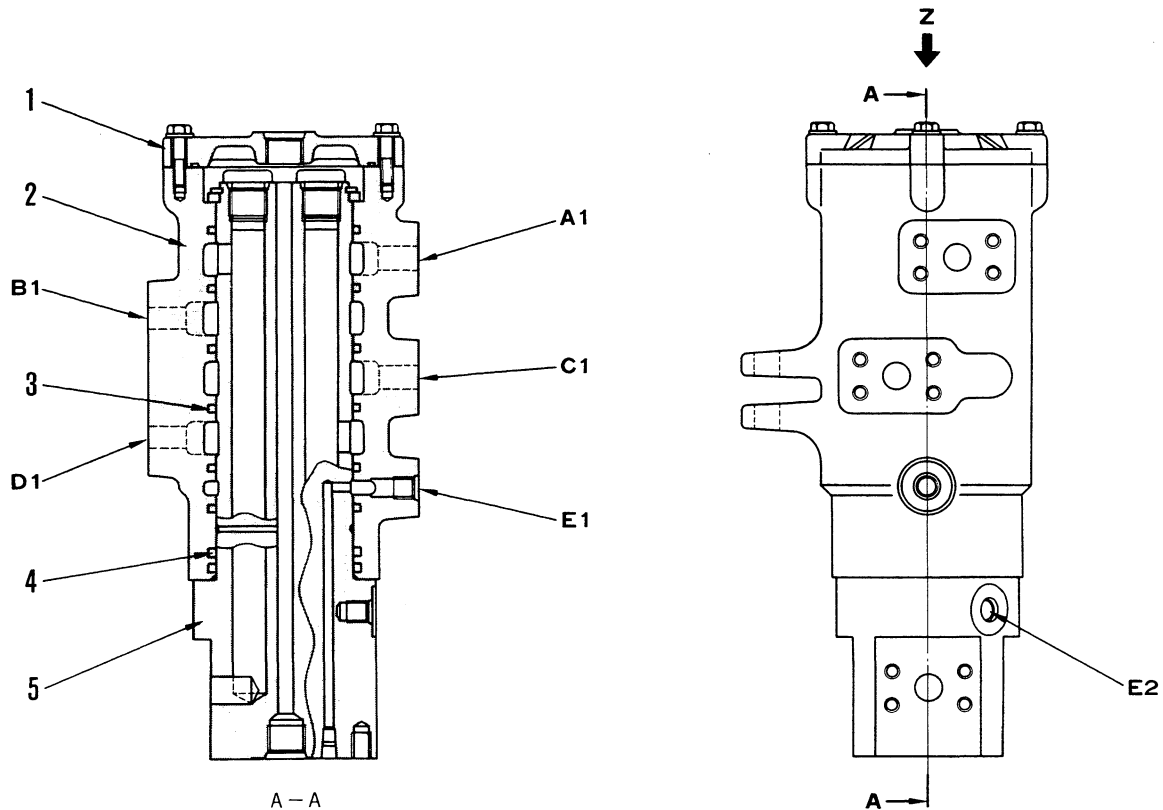


K20506

1. Cover
2. Body
3. Slipper seal
4. O-ring
5. Shaft

- A1. From control valve port **B2**
- A2. To R.H. travel motor port **PB**
- B1. From control valve port **B5**
- B2. To L.H. travel motor port **PA**
- C1. From control valve port **A2**
- C2. To R.H. travel motor port **PA**
- D1. From control valve port **A5**
- D2. To L.H. travel motor port **PB**
- E1. From travel speed solenoid valve
- E2. To L.H. and R.H. travel motors port **P**
- T1. To tank
- T2. From L.H. and R.H. travel motors port **T**

205F06076

TRAVEL MOTOR

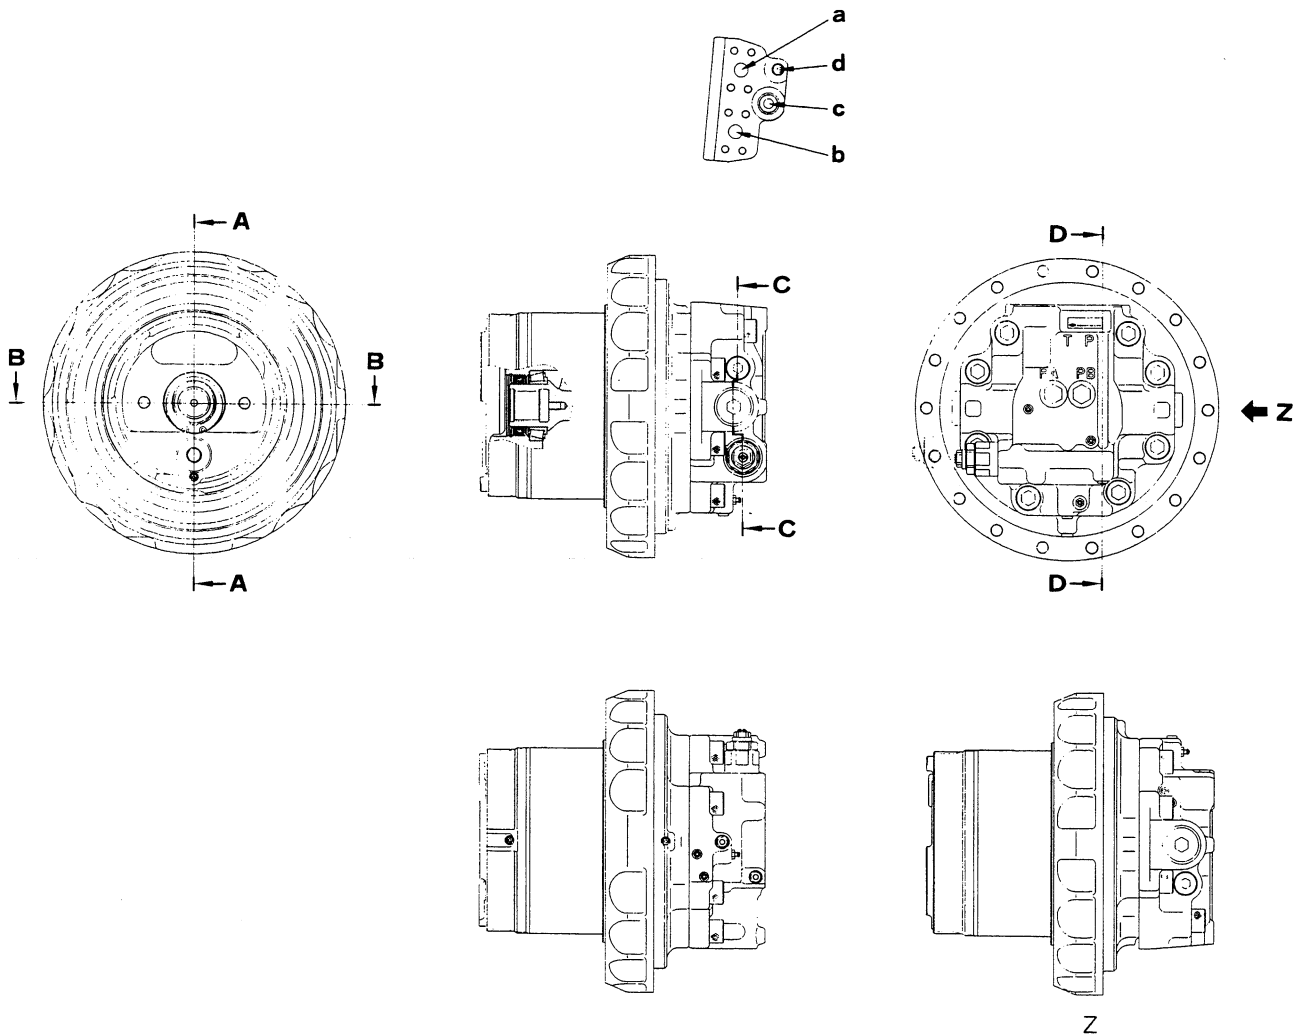


K20506

205F06078


- a. Port **PB** (from control valve)
- b. Port **PA** (from control valve)
- c. Port **T** (to tank)
- d. Port **P** (from travel speed solenoid valve)

SPECIFICATIONS


Item \ Model		PC210-6K	PC240-6K
Type		HMV160ADT-2	
Theoretical delivery	Min.	110.1 cc/rev	118.4 cc/rev
	Max.	160.8 cc/rev	
Set pressure		34.79 MPa (355 kg/cm ²)	
Rated speed	Min. capacity	1,834 rpm	1,780 rpm
	Max. capacity	1,004 rpm	1,048 rpm
Brake releasing pressure		1.18 MPa (12 kg/cm ²)	
Travel speed switching pressure		0.78 MPa (8 kg/cm ²)	
Differential pressure			

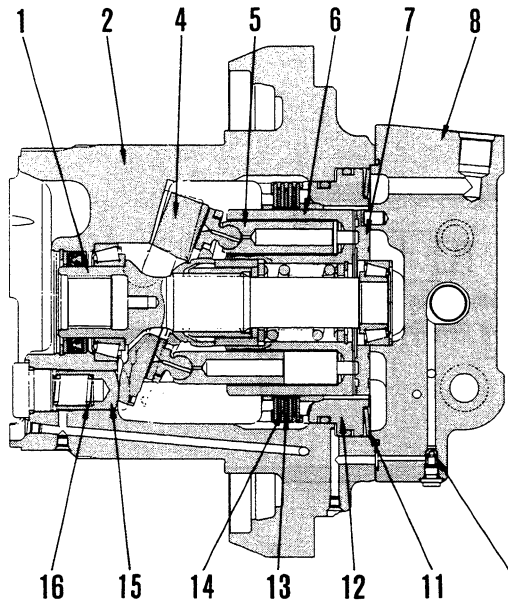


A - A

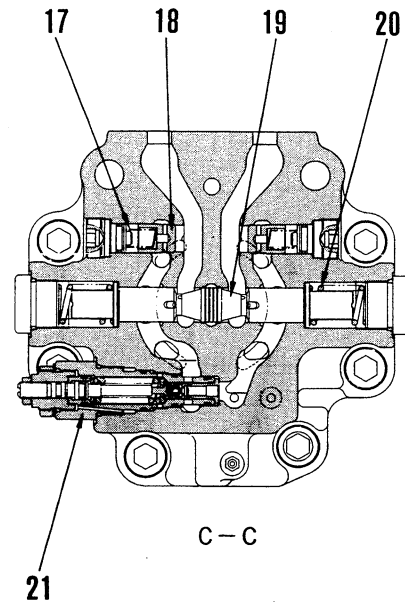

C - C

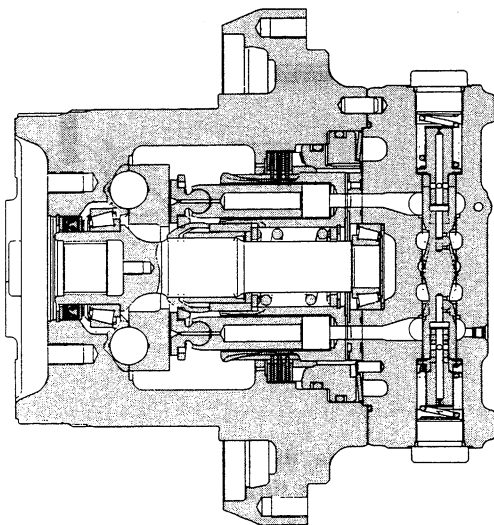

B - B

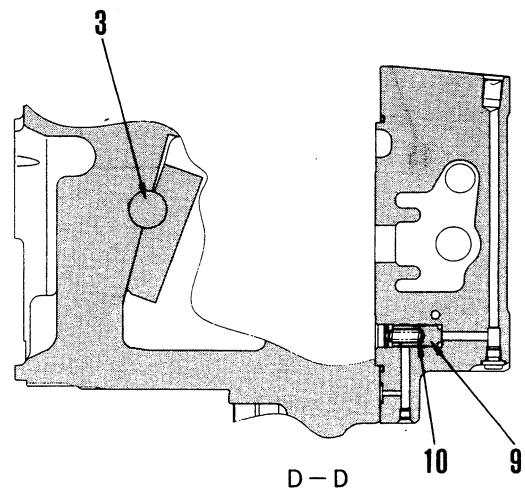

D - D


- | | |
|-----------------|----------------------|
| 1. Output shaft | 9. Regulator valve |
| 2. Motor case | 10. Spring |
| 3. Ball | 11. Brake spring |
| 4. Rocker cam | 12. Brake piston |
| 5. Piston | 13. Plate |
| 6. Cylinder | 14. Disc |
| 7. Valve plate | 15. Regulator piston |
| 8. End cover | 16. Spring |

- | |
|--------------------------|
| 17. Check valve spring |
| 18. Check valve |
| 19. Counterbalance valve |
| 20. Spool return spring |
| 21. Safety valve |
| 22. Slow return valve |

205F06079

OPERATION OF MOTOR

1) Motor swash plate angle (capacity) at maximum

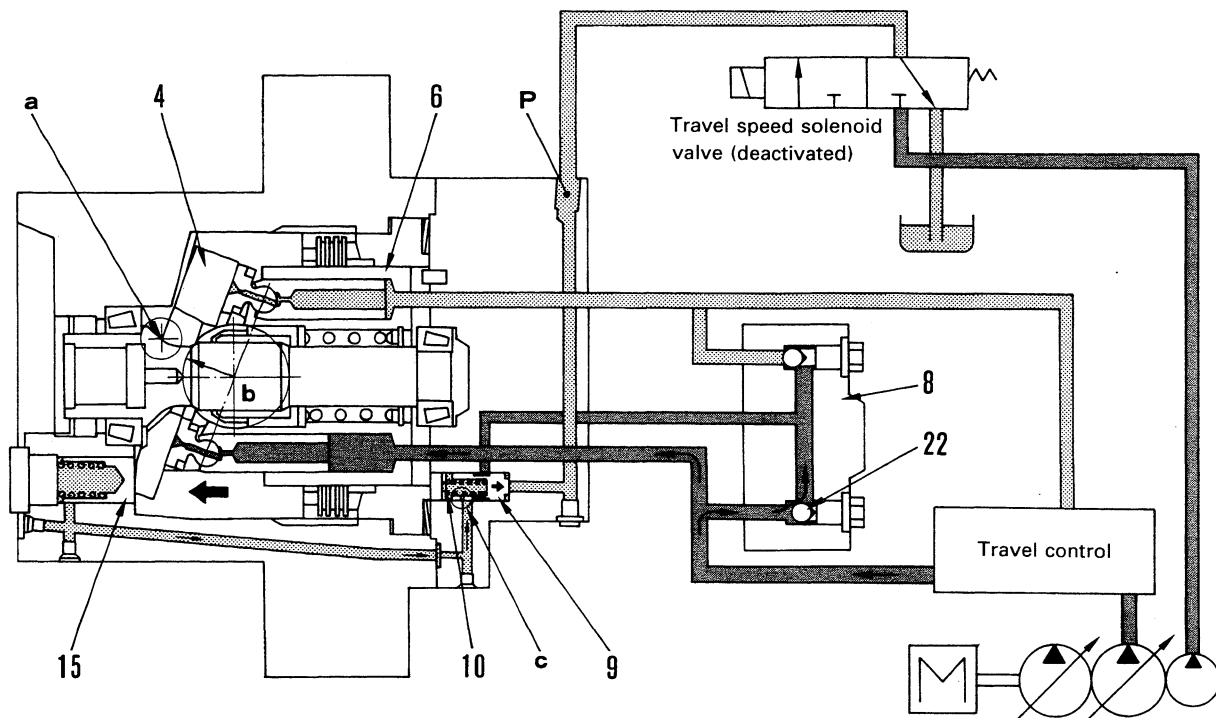


205F06080

- The solenoid valve is deactivated, so the pilot pressure oil from the control pump does not flow to port **P**. For this reason, regulator valve (9) is pushed to the right in the direction of the arrow by spring (10).
- Because of this, it pushes check valve (22), and the main pressure oil from the control valve going to end cover (8) is shut off by regulator valve (9).
- Fulcrum "a" of rocker cam (4) is eccentric to point of force "b" of the combined force of the propulsion force of cylinder (6), so the combined force of the piston propulsion force acts as a moment to angle rocker cam (4) in the direction of the maximum swash plate angle.
- At the same time, the pressurized oil at regulator piston (15) passes through orifice "c" in regulator valve (9) and is drained to the motor case.
- As a result, rocker cam (4) moves in the maximum swash plate angle direction, the motor capacity becomes maximum.

K20506

2) Motor swash plate angle (capacity) at minimum

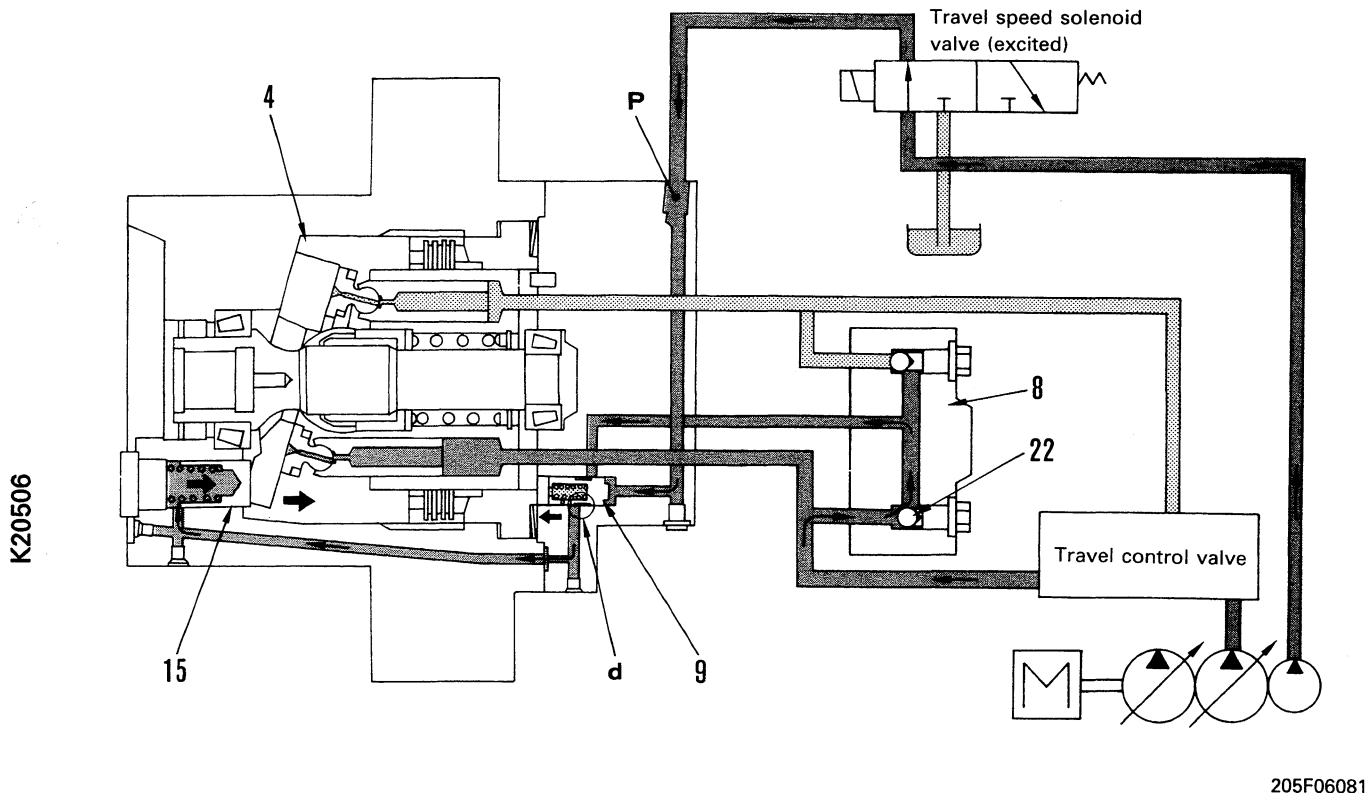

- When the solenoid valve is excited, the pilot pressure oil from the control pump flows to port **P**, and pushes regulator valve (9) to the left in the direction of the arrow.
- Because of this, the main pressure oil from the control valve passes through passage "d" in regulator valve (9), enters regulator piston (15) at the bottom, and pushes regulator piston (15) to the right in the direction of the arrow.
- As a result, rocker cam (4) moves in the minimum swash plate angle direction, the motor capacity becomes minimum.


OPERATION OF PARKING BRAKE

1) When starting to travel

When the travel lever is operated, the pressurized oil from the pump actuates counterbalance valve spool (19), opens the circuit to the parking brake, and flows into chamber A of brake piston (12).

If overcomes the force of spring (11), and pushes piston (12) to the right in the direction of the arrow.

When this happens, the force pushing plate (13) and disc (14) together is lost, so plate (13) and disc (14) separate and the brake is released.

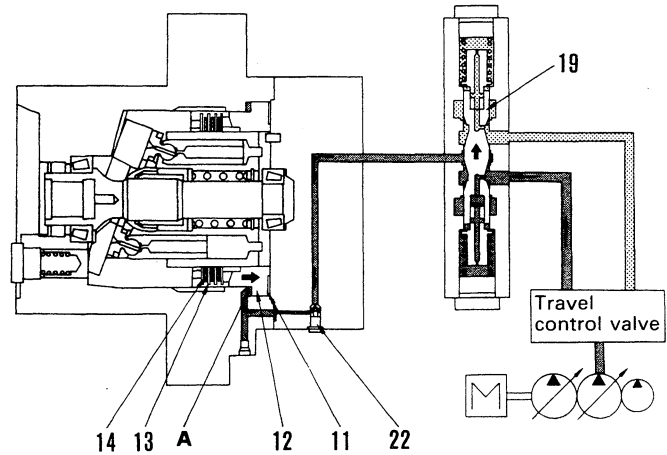

205F06082


2) When stopping travel

When the travel lever is placed in neutral, counterbalance valve spool (19) returns to the neutral position and the circuit to the parking brake is closed.

The pressurized oil in chamber A of brake piston (12) is drained to the case from the orifice in the brake piston, and brake piston (12) is pushed to the left in the direction of the arrow by spring (11).

As a result, plate (13) and disc (14) are pushed together, and the brake is applied.


A time delay is provided by having the pressurized oil pass through a throttle in slow return valve (22) when the brake piston returns, and this ensures that the brake still effective after the machine stops.

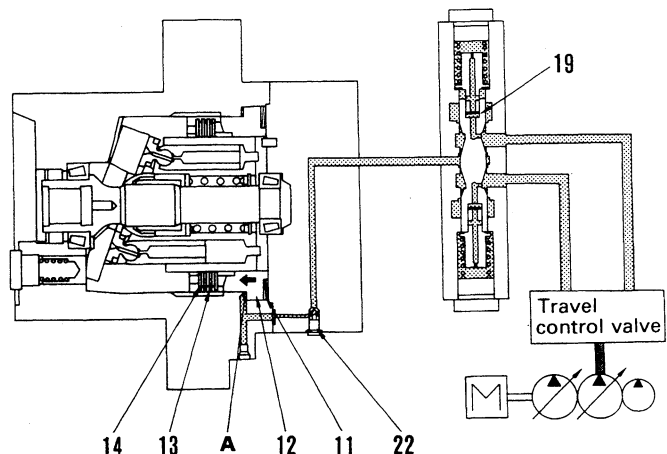

205F06083

OPERATION OF BRAKE VALVE

- The brake valve consists of a check valve, counterbalance valve, and safety valve in a circuit as shown in the diagram on the right. (Fig. 1)
- The function and operation of each component is as given below.

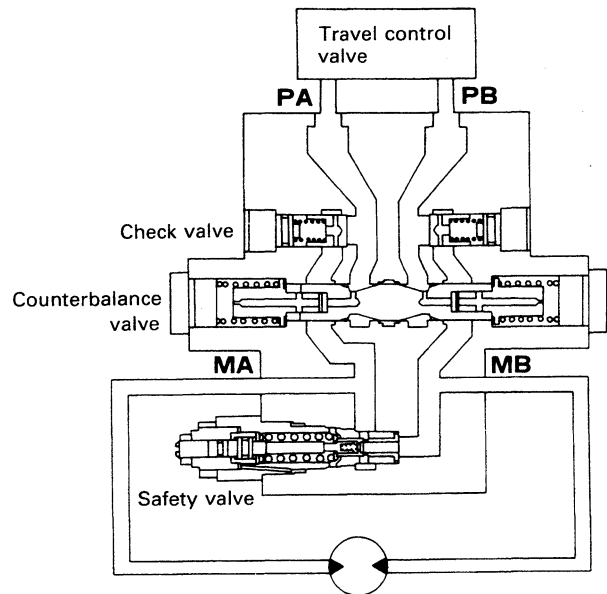


(Fig. 1)

205F06084

1) Counterbalance valve, check valve Function

- When traveling downhill, the weight of the machine makes it try to travel faster than the speed of the motor. As a result, if the machine travels with the engine at low speed, the motor will rotate without load and the machine will run away, which is extremely dangerous. To prevent this, these valves act to make the machine travel according to the engine speed (pump discharge amount).

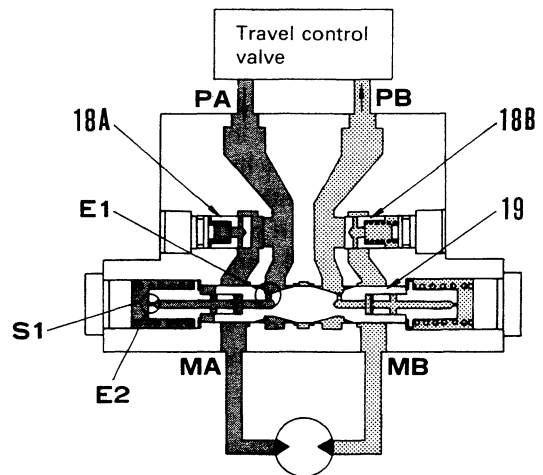


(Fig. 2)

205F06085

Operation when pressure oil is supplied

- When the travel lever is operated, the pressurized oil from the control valve is supplied to port PA. It pushes open check valve (18A) and flows from motor inlet port MA to motor outlet port MB. However, the motor outlet port is closed by check valve (18B) and spool (19), so the pressure at the supply side rises. (Fig. 2)
- The pressurized oil at the supply side flows from orifice E1 in spool (19) and orifice E2 in the piston to chamber S1. When the pressure in chamber S1 goes above the spool switching pressure, spool (19) is pushed to the right in the direction of the arrow. As a result, port MB and PB are connected, the outlet port side of the motor is opened, and the motor starts to rotate. (Fig. 3)

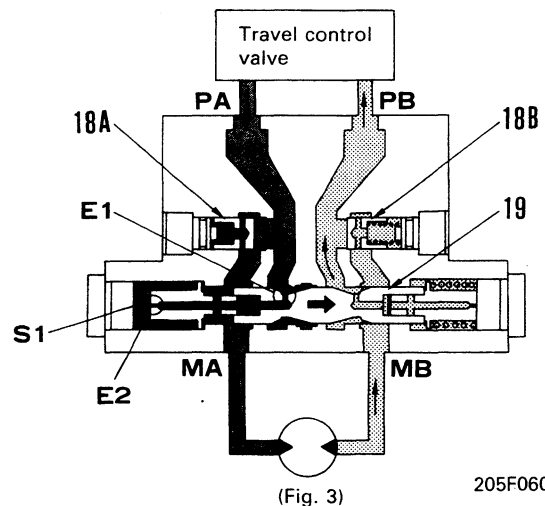

(Fig. 3)


205F06086

Operation of brake when traveling downhill

- If the machine tries to run away when traveling downhill, the motor will turn under no load, so the pressure at the motor inlet port will drop, and the pressure in chamber **S1** through orifices **E1** and **E2** will also drop. When the pressure in chamber **S1** drops below the spool switching pressure, spool (19) is returned to the left in the direction of the arrow by spring (20), and outlet port **MB** is throttled.

As a result, the pressure at the outlet port side rises, resistance is generated to the rotation of the motor, and this prevents the machine from running away.

In other words, the spool moves to a position where the pressure at outlet port **MB** balances the pressure at the inlet port and the force generated by the weight of the machine. It throttles the outlet port circuit and controls the travel speed according to the amount of oil discharged from the pump. (Fig. 4)

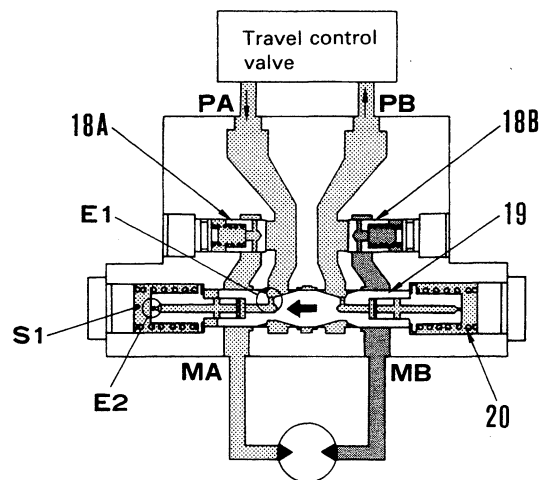


(Fig. 4)

205F06087

2) Safety valve (2-way operation, 2-stage set safety valve)**Function**

- When travel is stopped (or when traveling downhill), the circuits at the inlet and outlet ports of the motor are closed by the counterbalance valve, but the motor is rotated by inertia, so the pressure at the outlet port of the motor will become abnormally high and damage the motor or piping. The safety valve acts to release this abnormal pressure and send it to the inlet port side of the motor to prevent damage to the equipment.

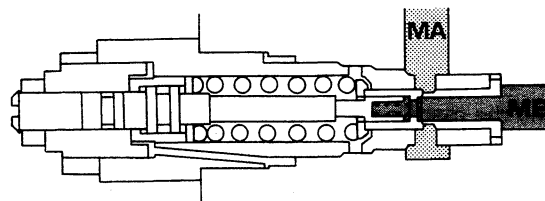


(Fig. 5)

205F06088

Operation in both directions**1) When pressure in chamber MB has become high (when rotating clockwise)**

- When the travel is stopped (or when traveling downhill), chamber **MB** in the outlet port circuit is closed by the check valve of the counterbalance valve, but the pressure at the outlet port rises because of inertia. (Fig. 5)
- If the pressure goes above the set pressure, the force produced by the difference in area between **D1** and **D2** [$\pi/4(D1^2 - D2^2) \times \text{pressure}$] overcomes the force of the spring and moves the poppet to the left, so the oil flows to chamber **MA** in the circuit on the opposite side. (Fig. 6)

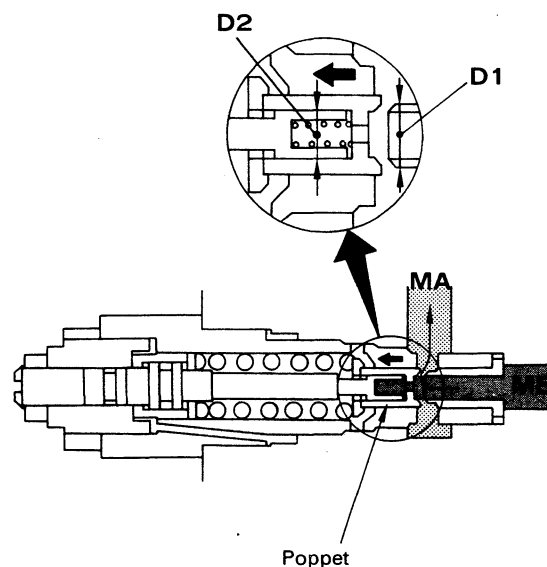


(Fig. 6)

205F06089

K20506


2) When pressure in chamber MA has become high (when rotating counterclockwise)

- When the travel is stopped (or when traveling downhill), chamber **MA** in the outlet port circuit is closed by the check valve of the counterbalance valve, but the pressure at the outlet port rises because of inertia. (Fig. 7)
- If the pressure goes above the set pressure, the force produced by the difference in area between **D1** and **D3** [$\pi/4 (D3^2 - D1^2) \times \text{pressure}$] overcomes the force of the spring and moves the poppet to the left, so the oil flows to chamber **MB** in the circuit on the opposite side. (Fig. 8)

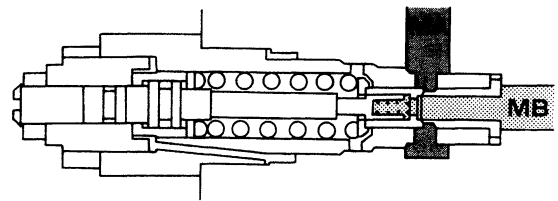

(Fig. 7)

205F06090

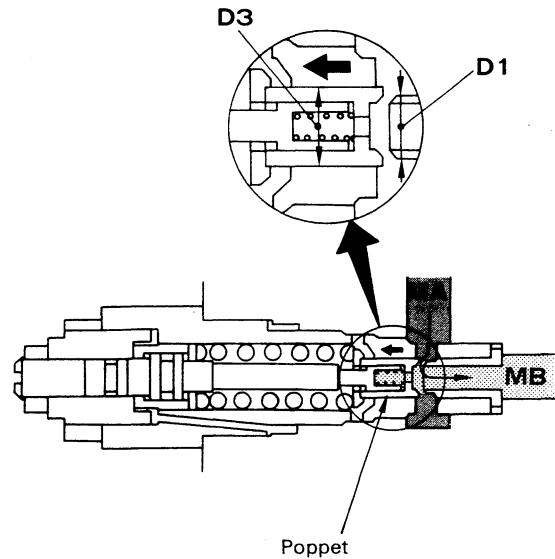


(Fig. 8)

205F06091

Operation of mechanism for varying set pressure

1) When starting travel (high pressure setting)

When the travel lever is operated, the pressurized oil from the pump actuates counterbalance valve spool (19), and opens the pilot circuit to the safety valve. The oil passes from chamber **G** to passage **H** and flows into chamber **J**, pushes the piston to the right in the direction of the arrow, and compresses the spring to make the set load larger. Because of this, the set pressure of the safety valve is switched to the high pressure setting, and a large drawbar pull is made available.

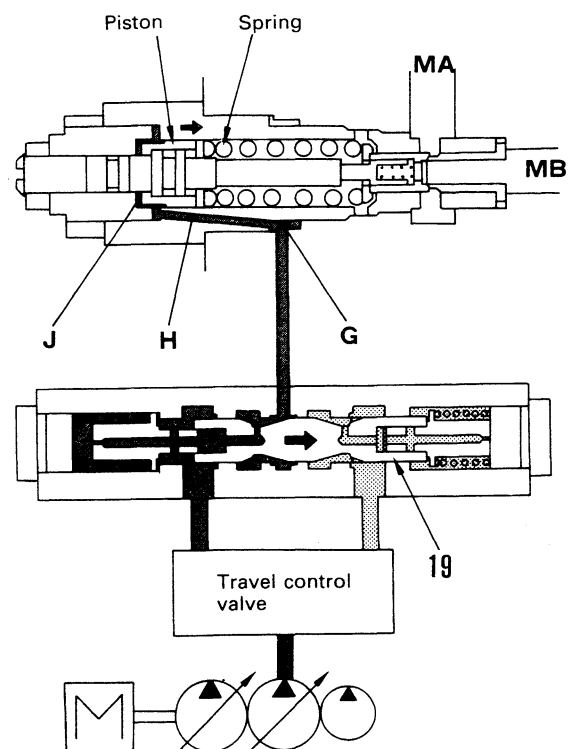

(Fig. 9)


205F06092

2) When stopping travel (low pressure setting)

When the travel lever is placed at neutral, the pressure in chamber **PA** drops and counterbalance valve spool (19) returns to the neutral position. While the counterbalance valve spool is returning to the neutral position, the pressurized oil in chamber **J** passes through passage **H**, and escapes to chamber **PA** from chamber **G**. The piston moves to the left in the direction of the arrow, and the set load becomes smaller. Because of this, the set pressure of the safety valve is switched to the low pressure setting in order to relieve the shock when reducing speed.

[Set pressure of safety valve]

When starting, when traveling	When stopping
High pressure setting 37.73 MPa (385 kg/cm ²)	Low pressure setting 27.44 MPa (280 kg/cm ²)

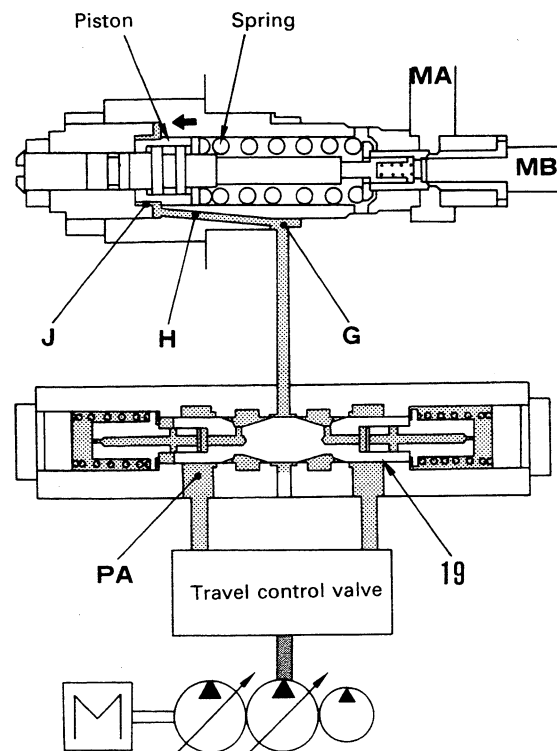

(Fig. 10)


205F06093

K20506

VALVE CONTROL

PC210, 210LC-6K

PC240, 240LC, 240NLC-6K

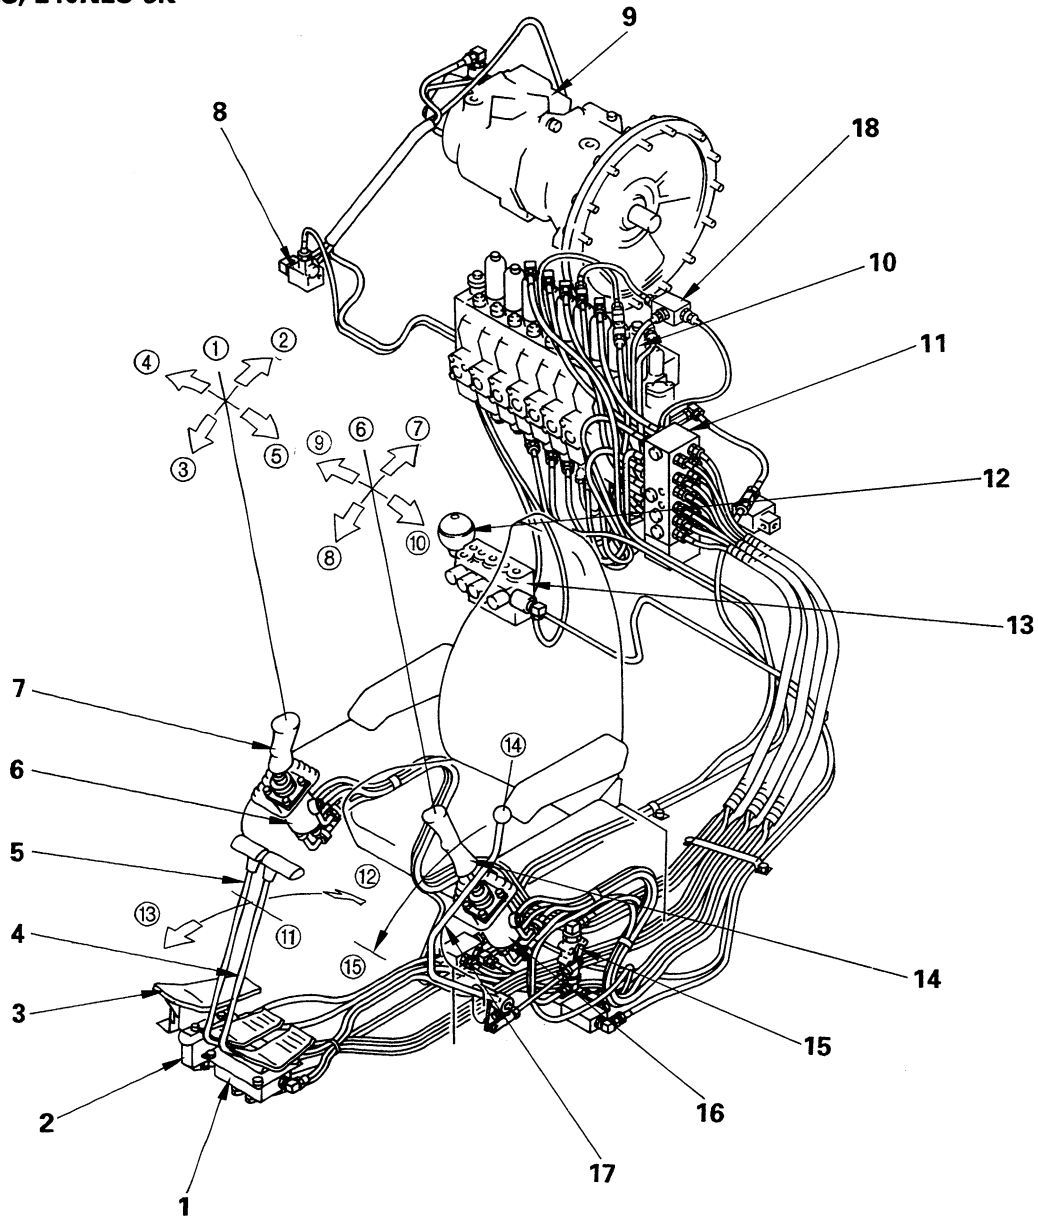

- | | |
|------------------------------|-------------------------------|
| 1. Travel PPC valve | 10. Control valve |
| 2. Service PPC valve | 11. PPC shuttle valve |
| 3. Service pedal | 12. Accumulator |
| 4. L.H. travel lever | 13. Solenoid valve |
| 5. R.H. travel lever | 14. L.H. work equipment lever |
| 6. R.H. PPC valve | 15. Safety lock valve |
| 7. R.H. work equipment lever | 16. L.H. PPC valve |
| 8. LS control EPC valve | 17. Safety lock lever |
| 9. Hydraulic pump | 18. Timing valve |

Lever positions


- | | |
|---------------|------------------|
| ① Neutral | ⑨ Swing RIGHT |
| ② Boom RAISE | ⑩ Swing LEFT |
| ③ Boom LOWER | ⑪ Neutral |
| ④ Bucket DUMP | ⑫ Travel REVERSE |
| ⑤ Bucket CURL | ⑬ Travel FORWARD |
| ⑥ Neutral | ⑭ LOCK |
| ⑦ Arm IN | ⑮ FREE |
| ⑧ Arm OUT | |

K20506

WORK EQUIPMENT • SWING PPC VALVE

PC210, 210LC-6K






PC240, 240LC, 240NLC-6K

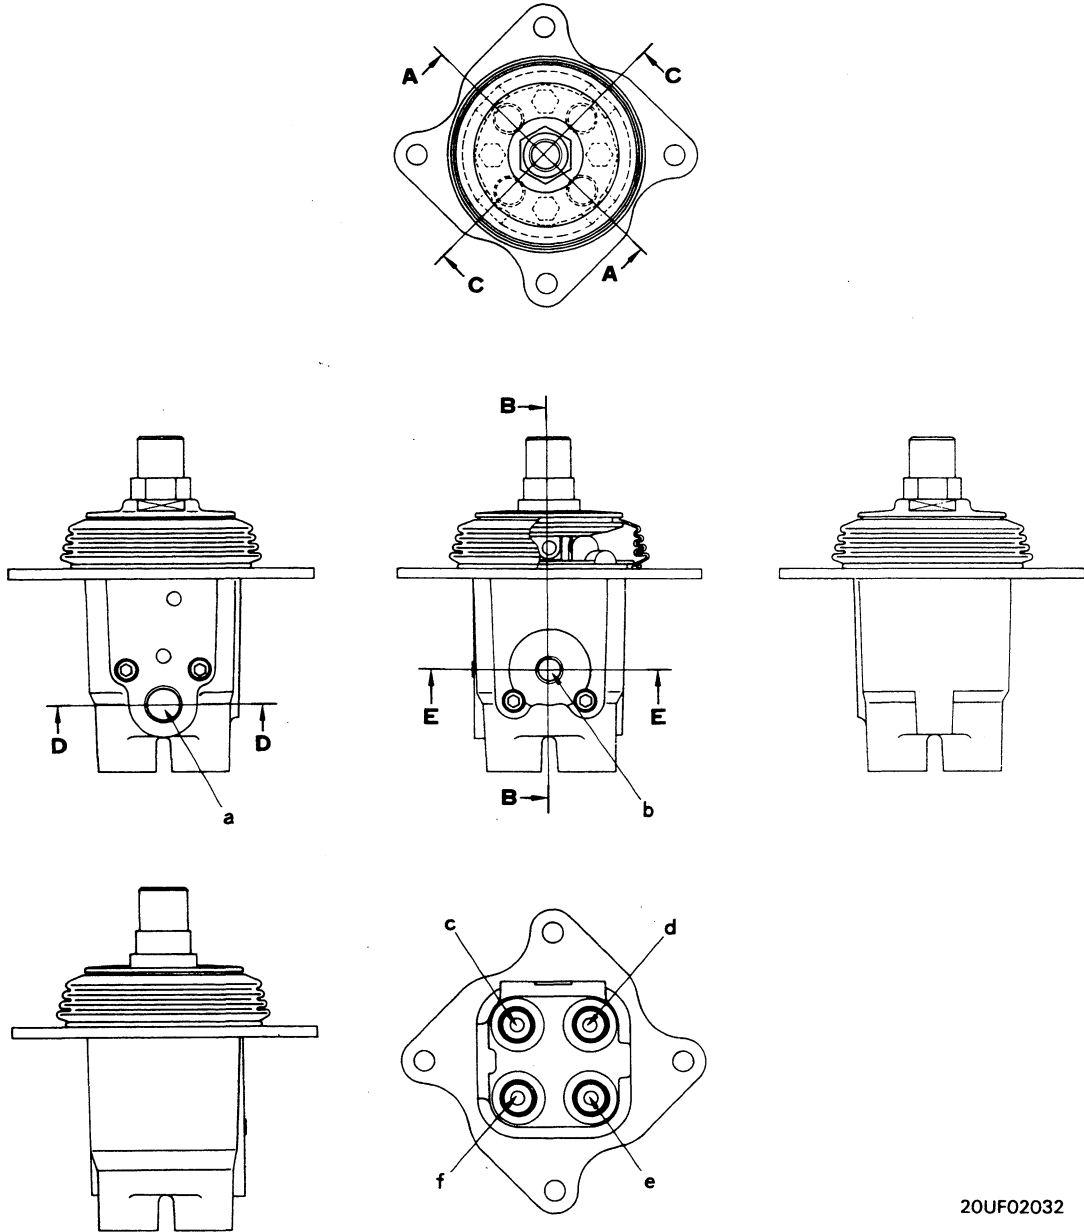

- a. Port **P** (from control pump)
- b. Port **T** (to tank)
- c. Port **P2** (L.H.: Arm IN / R.H.: Boom RAISE)
- d. Port **P4** (L.H.: Swing LEFT / R.H.: Bucket DUMP)
- e. Port **P1** (L.H.: Arm OUT / R.H.: Boom LOWER)
- f. Port **P3** (L.H.: Swing RIGHT / R.H.: Bucket CURL)

20UF02032

K20506

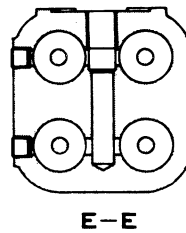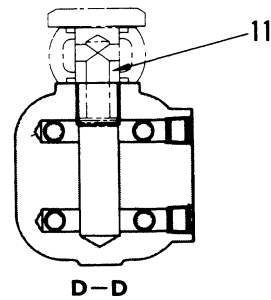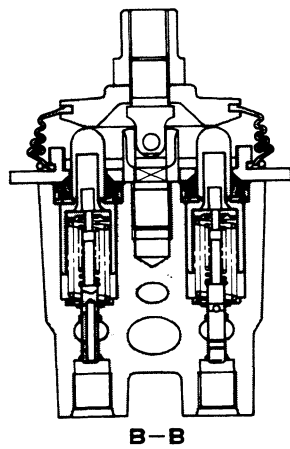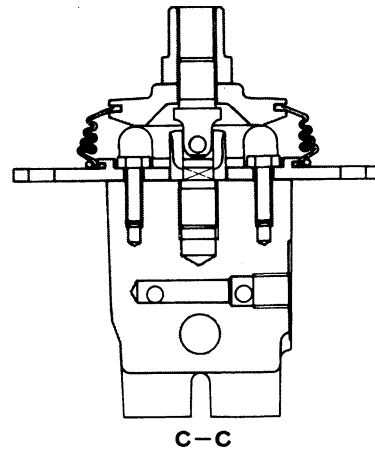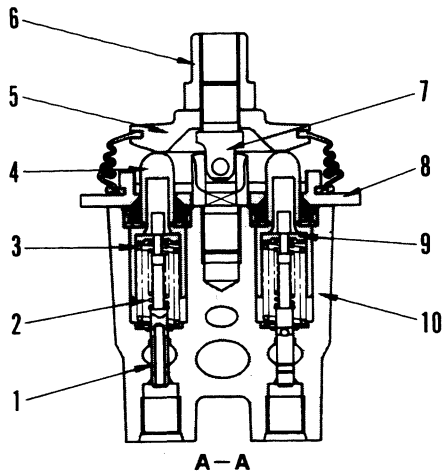

20UF02033

1. Spool
2. Metering spring
3. Centering spring
4. Piston
5. Disc
6. Nut (for connecting lever)

7. Joint
8. Plate
9. Retainer
10. Body
11. Filter

OPERATION

1) At neutral

Ports **A** and **B** of the control valve and ports **P1** and **P2** of the PPC valve are connected to drain chamber **D** through fine control hole "f" in spool (1). (Fig. 1)

2) During fine control (neutral → fine control)

When piston (4) starts to be pushed by disc (5), retainer (9) is pushed; spool (1) is also pushed by metering spring (2), and moves down.

When this happens, fine control hole "f" is shut off from drain chamber **D**, and at almost the same time, it is connected to pump pressure chamber **PP**, so pilot pressure oil from the control pump passes through fine control hole "f" and goes from port **P1** to port **A**.


When the pressure at port **P1** becomes higher, spool (1) is pushed back and fine control hole "f" is shut off from pump pressure chamber **PP**.

At almost the same time, it is connected to drain chamber **D** to release the pressure at port **P1**.

When this happens, spool (1) moves up or down so that the force of metering spring (2) is balanced with the pressure at port **P1**. The relationship in the position of spool (1) and body (10) (fine control hole "f" is at a point midway between drain hole **D** and pump pressure chamber **PP**) does not change until retainer (9) contacts spool (1).


Therefore, metering spring (2) is compressed proportionally to the amount of movement of the control lever, so the pressure at port **P1** also rises in proportion to the travel of the control lever.

In this way, the control valve spool moves to a position where the pressure in chamber **A** (the same as the pressure at port **P1**) and the force of the control valve spool return spring are balanced. (Fig. 2)

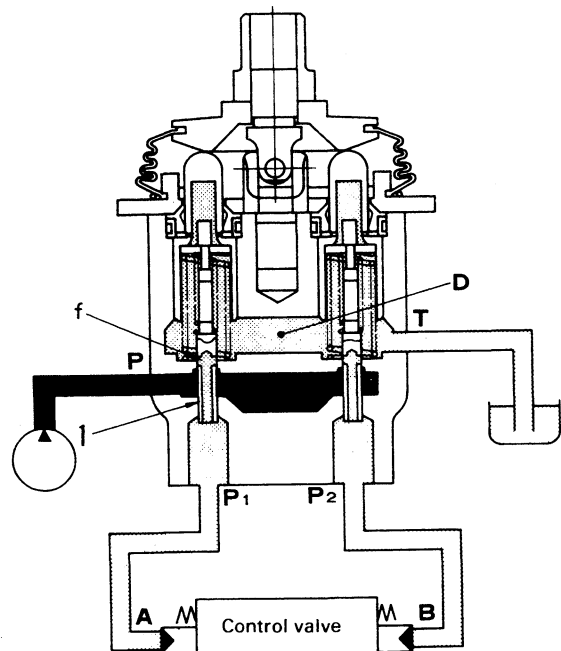

20TF01044

(Fig.1)

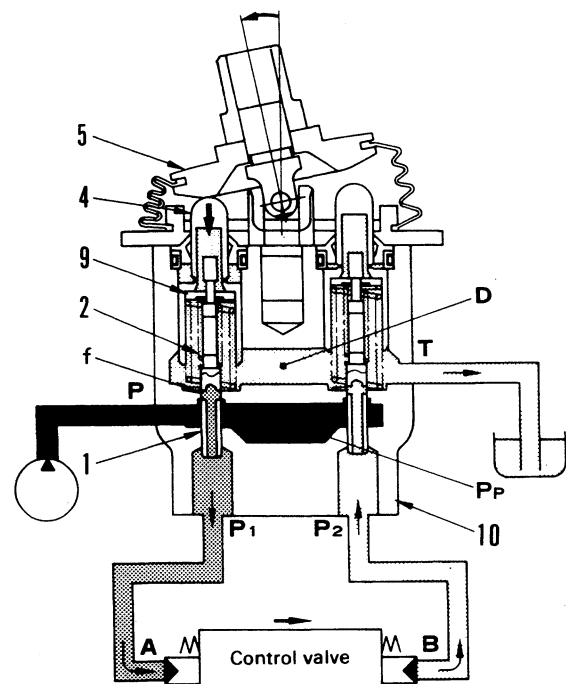

20TF01045

(Fig.2)


3) During fine control**(when control lever is returned)**

When disc (5) starts to be returned, spool (1) is pushed up by the force of centering spring (3) and the pressure at port **P1**.

When this happens, fine control hole "f" is connected to drain chamber **D** and the pressure oil at port **P1** is released.

If the pressure at port **P1** drops too far, spool (1) is pushed down by metering spring (2), and fine control hole "f" is shut off from drain chamber **D**. At almost the same time, it is connected to pump pressure chamber **PP**, and the pump pressure is supplied until the pressure at port **P1** recovers to a pressure that corresponds to the lever position. When the spool of the control valve returns, oil in drain chamber **D** flows in from fine control hole "f" in the valve on the side that is not working.

The oil passes through port **P2** and enters chamber **B** to fill the chamber with oil. (Fig. 3)

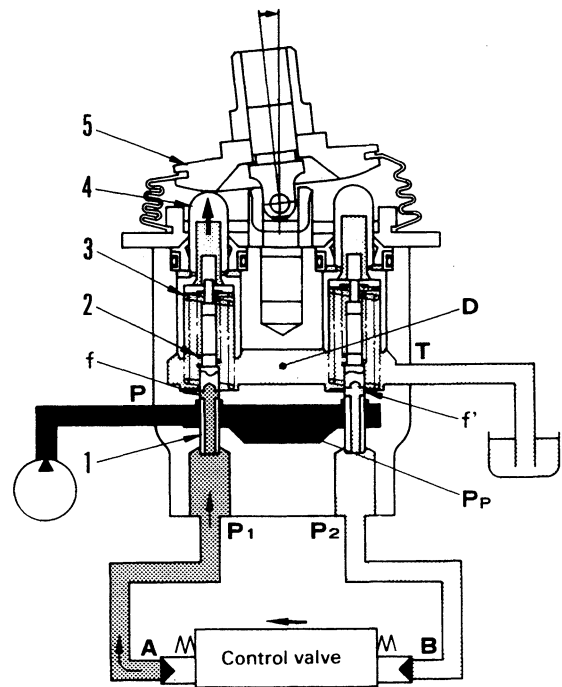

20TF01046


(Fig.3)

4) At full stroke

When disc (5) pushes down piston (4), and retainer (9) pushes down spool (1), fine control hole "f" is shut off from drain chamber **D**, and is connected with pump pressure chamber **PP**.

Therefore, the pilot pressure oil from the control pump passes through fine control hole "f" and flows to chamber **A** from port **P1**, and pushes the control valve spool.


The oil returning from chamber **B** passes from port **P2** through fine control hole "f" and flows to drain chamber **D**. (Fig. 4)

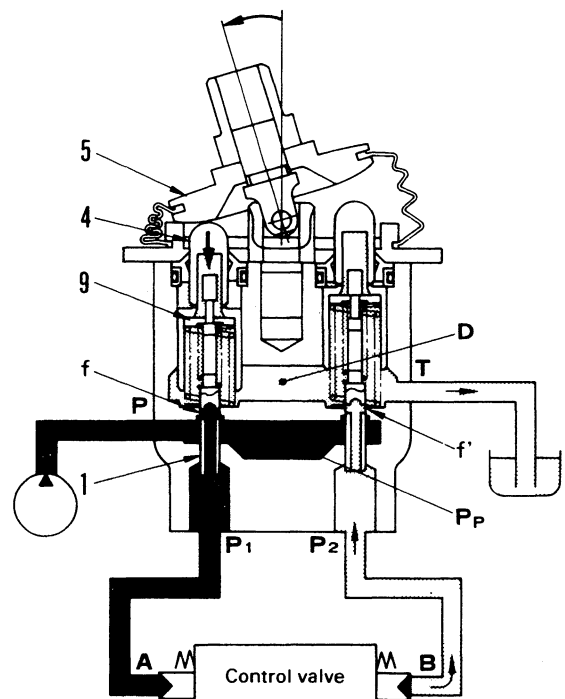

20TF01047

(Fig.4)


TRAVEL PPC VALVE

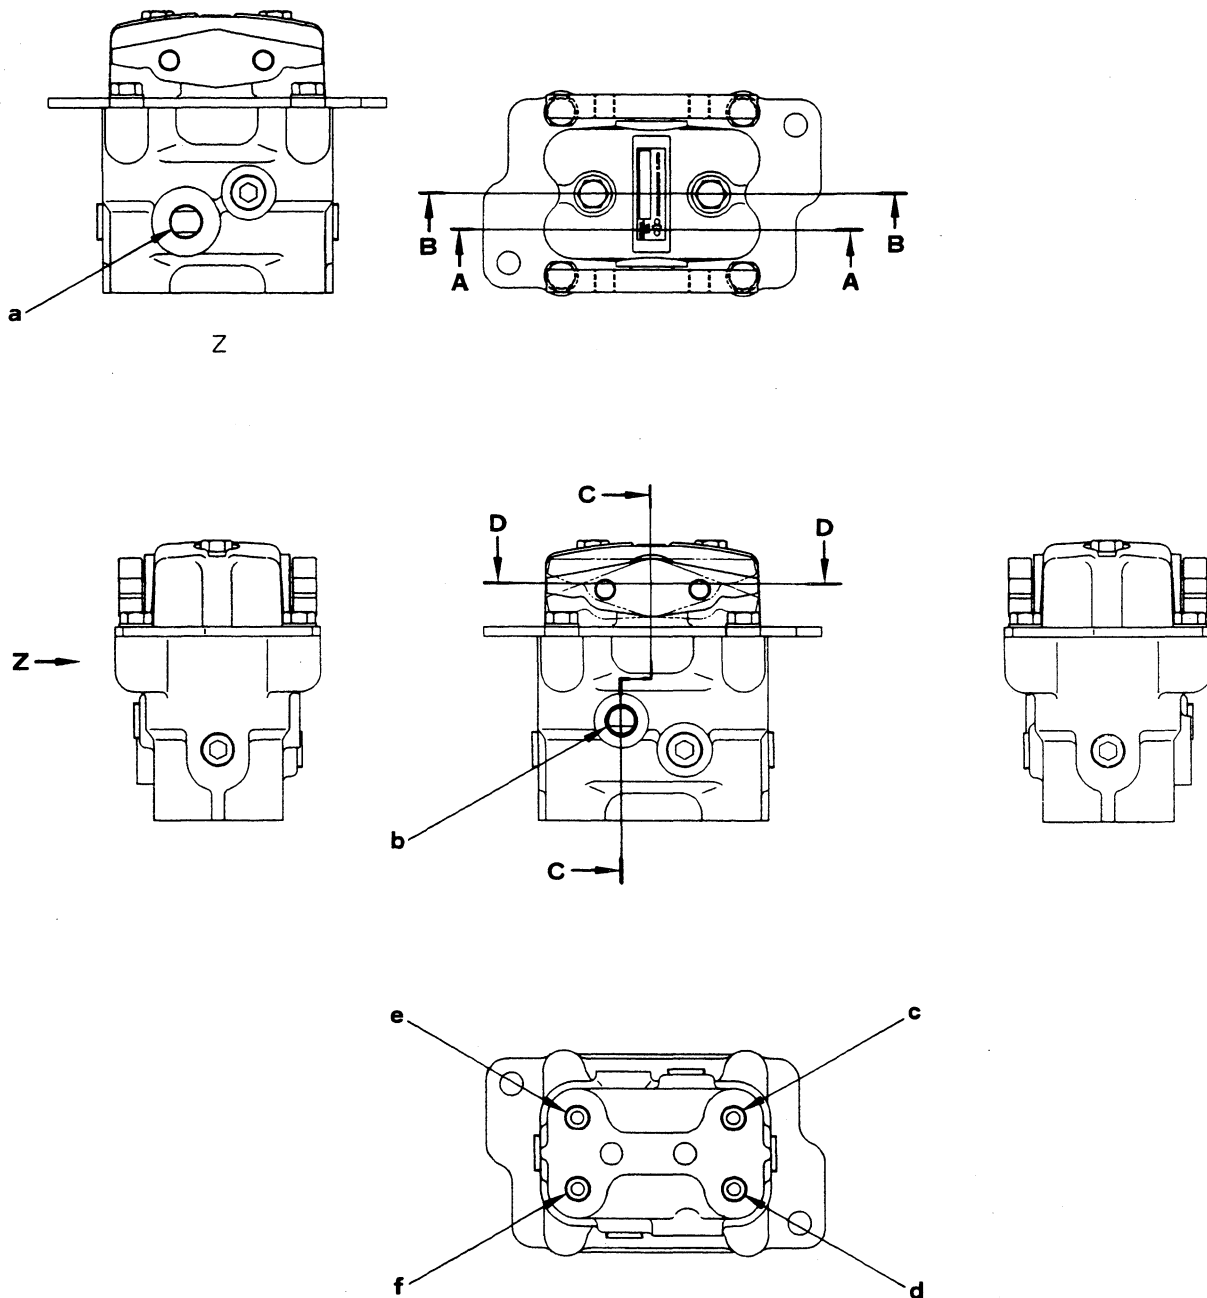


K20506

205F06102


- a. Port **P** (from control pump)
- b. Port **T** (to tank)
- c. Port **P1** (L.H. travel REVERSE)
- d. Port **P3** (R.H. travel REVERSE)
- e. Port **P2** (L.H. travel FORWARD)
- f. Port **P4** (R.H. travel FORWARD)

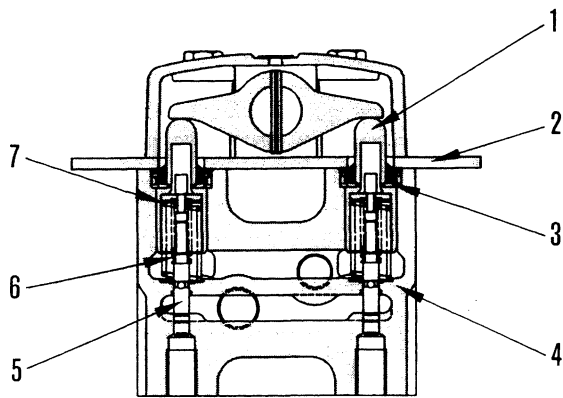


A-A

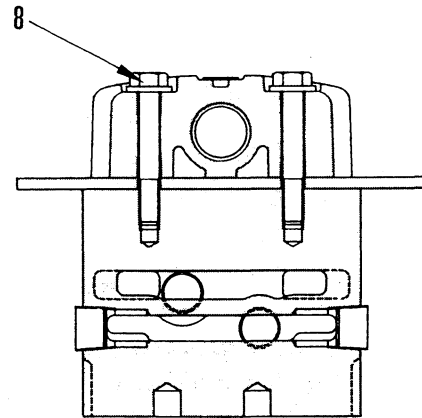

B-B

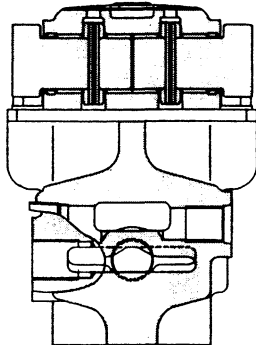

C-C

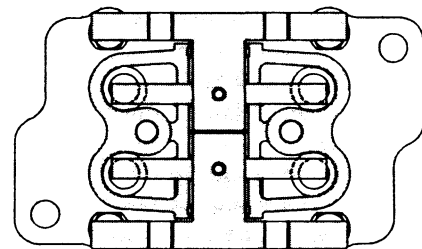

D-D

205F06103


1. Piston
2. Plate
3. Collar
4. Body

5. Valve
6. Metering spring
7. Centering spring
8. Bolt

OPERATION

1. At neutral

Ports **A** and **B** of the control valve and ports **P1** and **P2** of the PPC valve are connected to drain chamber **D** through fine control hole "f" in spool (1). (Fig. 1)

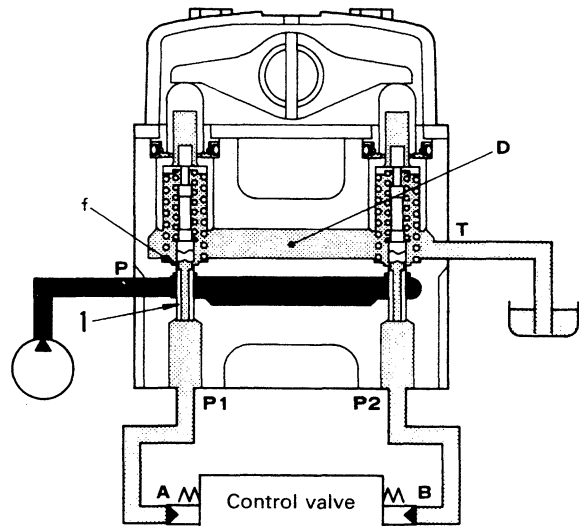

22TF01094

(Fig. 1)

2. Fine control (neutral → fine control)

When piston (4) starts to be pushed by disc (5), retainer (9) is pushed. Spool (1) is also pushed by metering spring (2) and moves down.


When this happens, fine control hole "f" is shut off from drain chamber **D**. At almost the same time, it is connected to pump pressure chamber **PP**, and the pilot pressure of the control pump is sent from port **A** through fine control hole "f" to port **P1**.

When the pressure at port **P1** rises, spool (1) is pushed back. Fine control hole "f" is shut off from pump pressure chamber **PP**. At almost the same time, it is connected to drain chamber **D**, so the pressure at port **P1** escapes.

As a result, spool (1) moves up and down until the force of metering spool (2) is balanced with the pressure of port **P1**.

The relationship of the positions of spool (1) and body (10) (fine control hole "f" is in the middle between drain hole **D** and pump pressure chamber **PP**) does not change until retainer (9) contacts spool (1).

Therefore, metering spring (2) is compressed in proportion to the travel of the control lever, so the pressure at port **P1** also rises in proportion to the travel of the control lever. In this way, the spool of the control valve moves to a position where the pressure of chamber **A** (same as pressure at port **P1**) and the force of the return spring of the control valve spool are balanced. (Fig. 2)

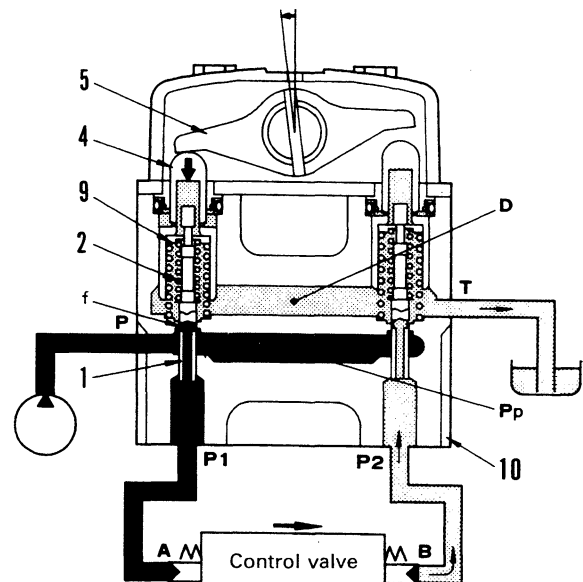

22TF01095

(Fig. 2)

3. Fine control (control lever returned)


When disc (5) starts to be returned, spool (1) is pushed up by the force of centering spring (3) and the pressure at port **P1**.

Because of this, fine control hole "f" is connected to drain chamber **D**, and the pressurized oil at port **P1** is released.

If the pressure at port **P1** drops too much, spool (1) is pushed up by metering spring (2), so fine control hole "f" is shut off from drain chamber **D**.

At almost the same time, it is connected to pump pressure chamber **PP**, so the pressure at port **P1** supplies the pump pressure until the pressure recovers to a pressure equivalent to the position of the lever.

When the control valve returns, oil in drain chamber **D** flows in from fine control hole "f" of the valve on the side that is not moving. It passes through port **P2** and goes to chamber **B** to charge the oil. (Fig. 3)

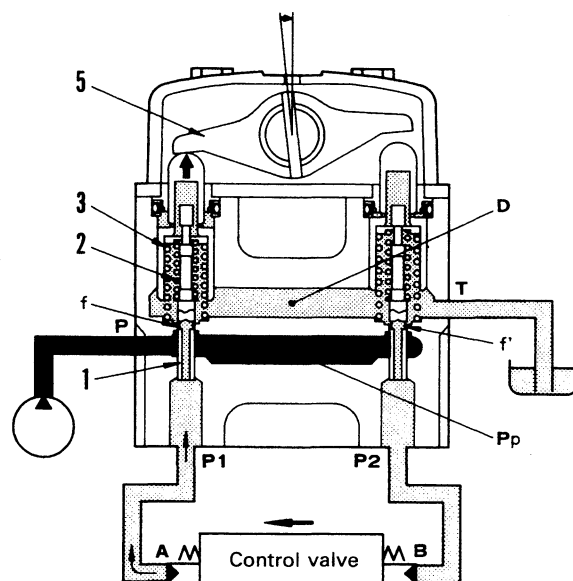


22TF01096

(Fig. 3)

4) At full stroke


Disc (5) pushes down piston (4), and retainer (9) pushes down spool (1). Fine control hole "f" is shut off from drain chamber **D**, and is connected to pump pressure chamber **PP**. Therefore, the pilot pressure oil from the control pump passes through fine control hole "f" and flows to chamber **A** from port **P1** to push the control valve spool. The return oil from chamber **B** passes from port **P2** through fine control hole "f'" and flows to drain chamber **D**. (Fig. 4)

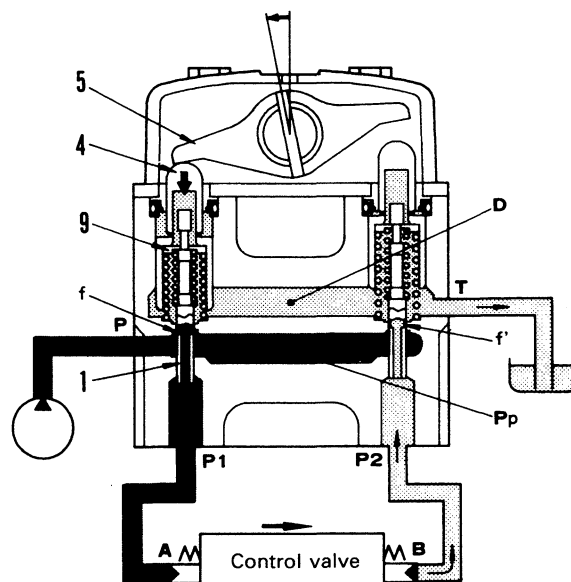

22TF01097


(Fig. 4)

SERVICE PPC VALVE

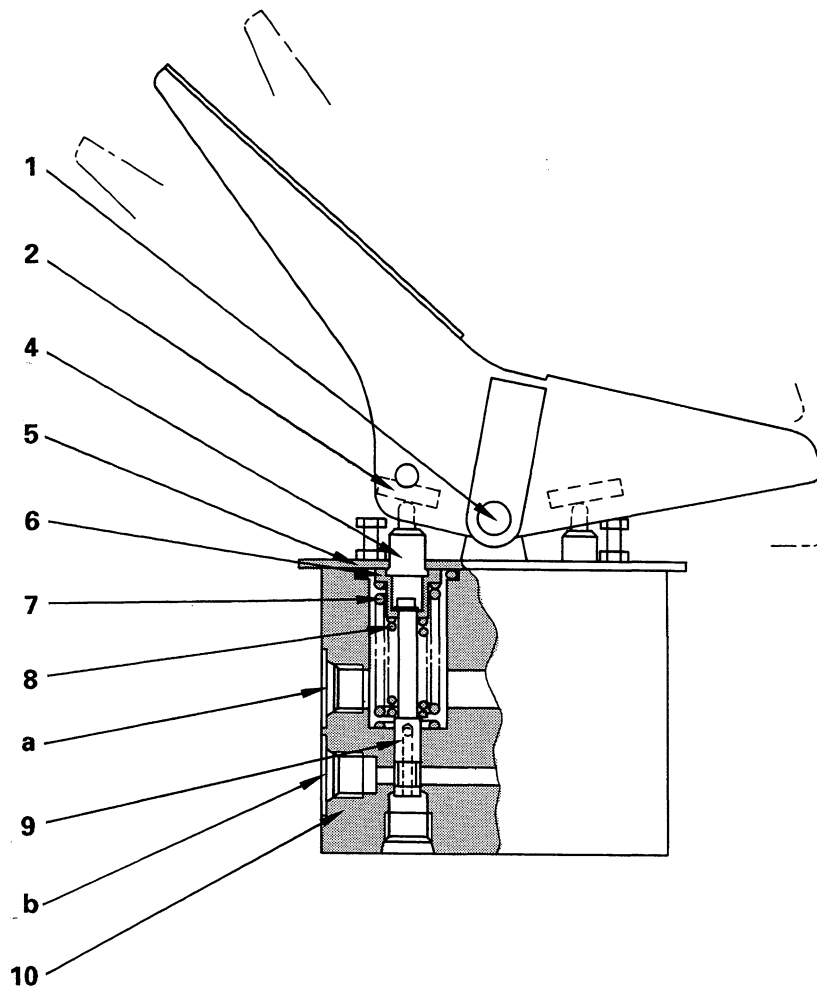

1. Pin
2. Cam
3. Ball
4. Piston
5. Cover
6. Sleeve
7. Centering spring
8. Metering spring
9. Spool
10. Body

- a. Port T (to tank)
- b. Port P (from control pump)
- c. Port A (to service valve P1)
- d. Port B (to service valve P2)

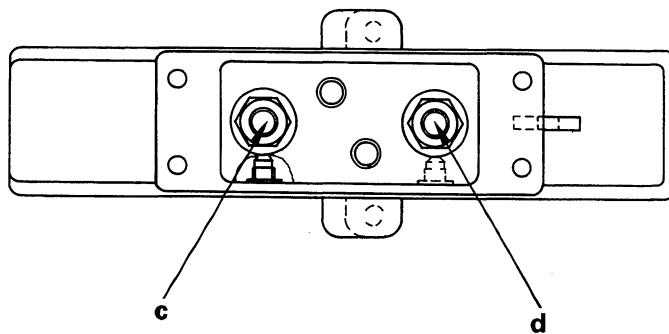


K20506

OPERATION

At neutral


- The pressurized oil from the control pump enters from port **P** and is blocked by spool (9).
- Port **A** and **B** of the control valve and port "a" and "b" of the PPC valve are connected to drain port **T** through fine control hole **X** of spool (9).

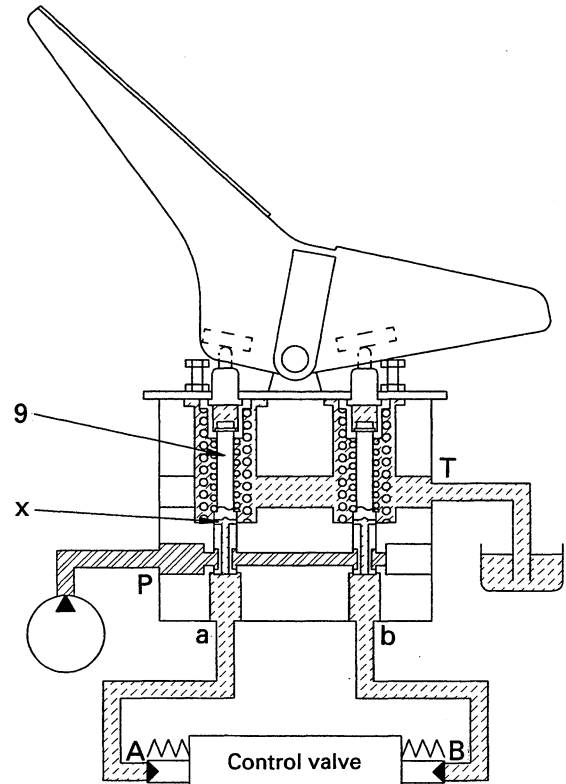

PC210-K003


When operated

- When cam (2) is moved, metering spring (8) is pushed by ball (3), piston (4), and sleeve (6), and spool (9) is also pushed down by this.
- As a result, fine control hole **X** is shut off from the drain circuit. At almost the same time, fine control portion **Y** is connected with port "a", and the pressurized oil from port **P** flows from port "a" to port **A** of the control valve.

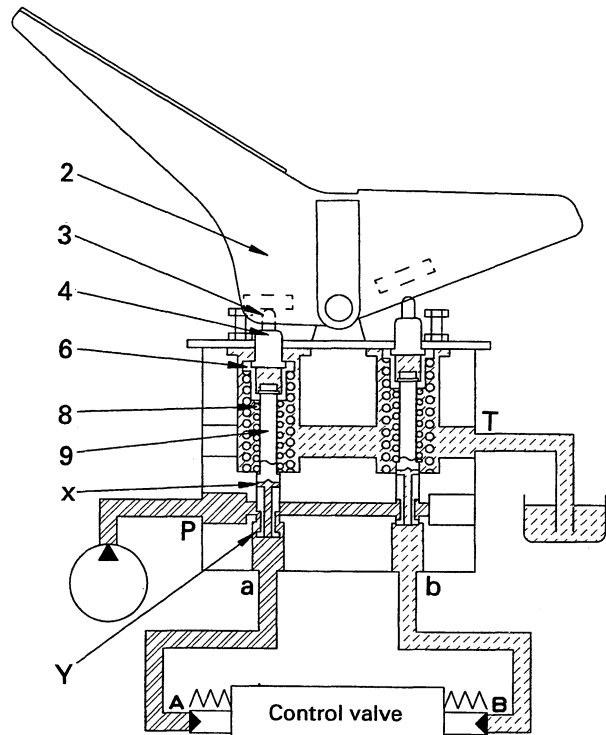

PC210-K004


- When the pressure at port "a" becomes higher, spool (9) is pushed back by the force acting on the end of the spool. When fine control portion Y closes, fine control hole X is connected to the drain circuit at almost the same time.
- As a result, spool (9) moves up and down to balance the force at port "a" and the force at metering spring (8).
- Therefore, metering spring (8) is compressed in proportion to the amount the control lever is moved. The spring force becomes larger, so the pressure at port "a" also increases in proportion to the amount the control lever is operated.
- In this way, the control valve spool moves to a position where the pressure of port A (the same as the pressure at port "a") is balanced with the force of the return spring of the control valve spool.

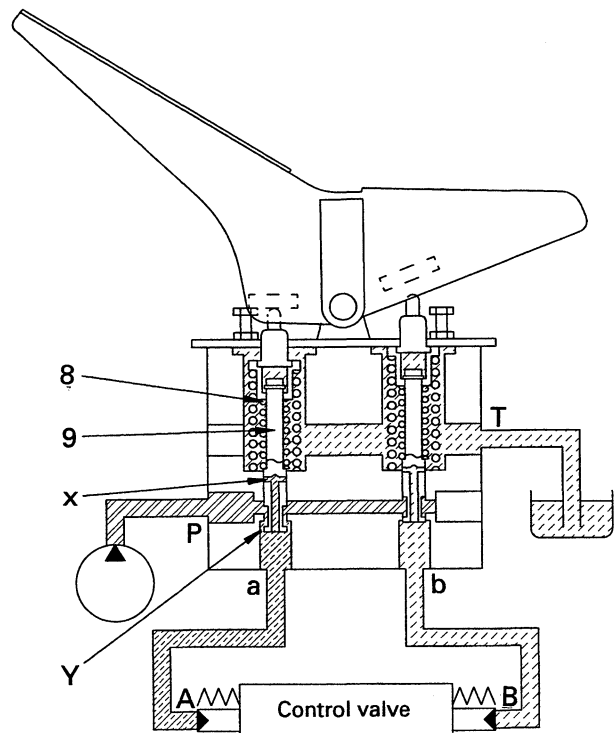


PC210-K005

K20506

SAFETY LOCK VALVE

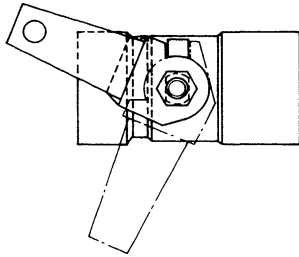


1. Lever
2. Body
3. Seat
4. Ball
5. End cap

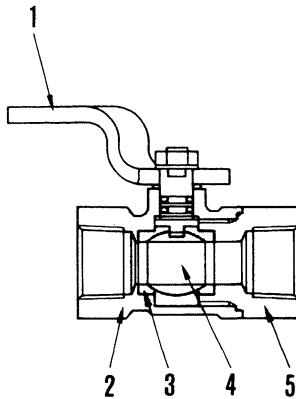

F205C5018

PPC ACCUMULATOR

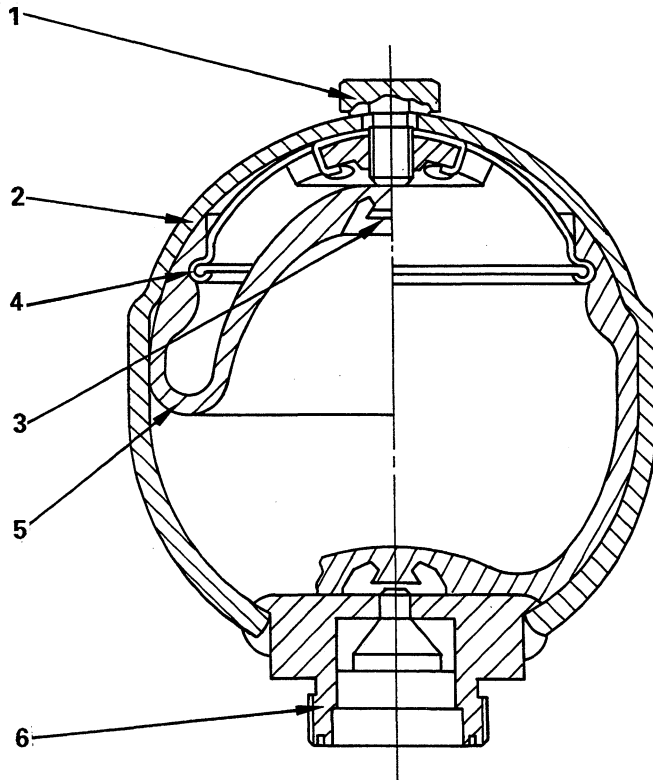


1. Gas plug
2. Shell
3. Poppet
4. Holder
5. Bladder
6. Oil port

SPECIFICATIONS

Gas capacity: 400 cc

K20506

PPC SHUTTLE • TRAVEL JUNCTION VALVE

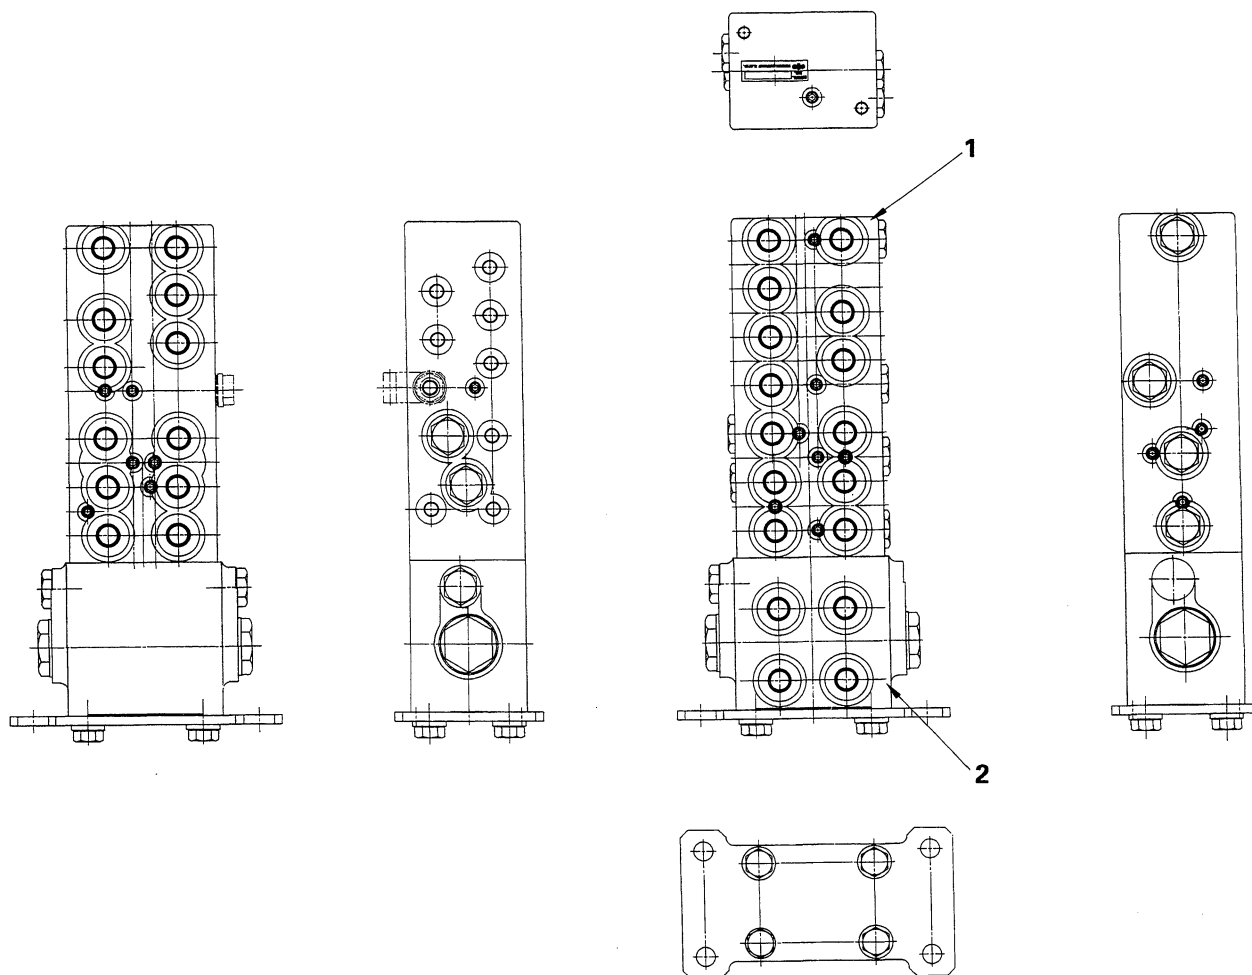


K20506

1. PPC shuttle valve
2. Travel junction valve

OUTLINE

- The PPC shuttle valve and travel junction valve form a combined structure.

PPC SHUTTLE VALVE

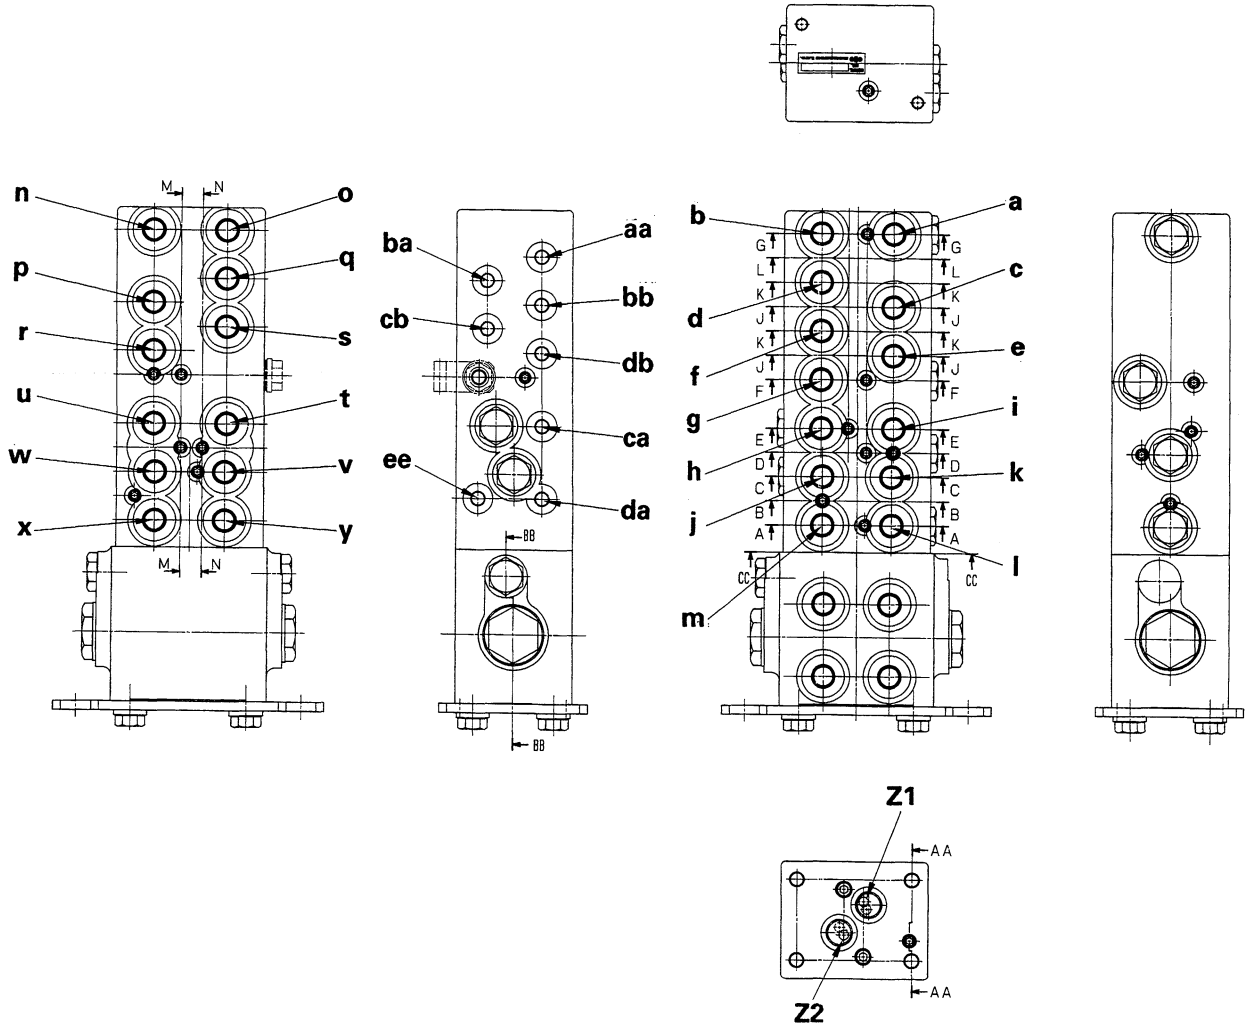

FUNCTION

This sends the PPC valve output pressure or EPC valve output pressure to the control valve and travel junction valve. It is provided with a mount port for the pressure switch for detecting the pilot pressure.

STRUCTURE AND FUNCTION


PPC SHUTTLE • TRAVEL JUNCTION VALVE

- a. Port **P11** (from swing PPC valve)
- b. Port **P21** (from swing PPC valve)
- c. Port **P31** (from bucket PPC valve)
- d. Port **P41** (from bucket PPC valve)
- e. Port **P51** (from boom PPC valve)
- f. Port **P61** (from arm PPC/EPC valve)
- g. Port **PLS** (to LS select valve)
- h. Port **P71** (from arm PPC/EPC valve)
- i. Port **P81** (from boom PPC/EPC valve)
- j. Port **PA1** (from R.H. travel PPC valve)
- k. Port **PB1** (from L.H. travel PPC valve)
- l. Port **PC1** (from L.H. travel PPC valve)
- m. Port **P91** (from R.H. travel PPC valve)
- n. Port **P12** [to control valve (swing)]
- o. Port **P22** [to control valve (swing)]
- p. Port **P32** [to control valve (bucket)]
- q. Port **P42** [to control valve (bucket)]
- r. Port **P52** [to control valve (boom)]
- s. Port **P62** [to control valve (arm)]
- t. Port **P72** [to control valve (arm)]
- u. Port **P82** [to control valve (boom)]
- v. Port **PA2** [to control valve (R.H. travel)]
- w. Port **PB2** [to control valve (L.H. travel)]
- x. Port **PC2** [to control valve (L.H. travel)]
- y. Port **P92** [to control valve (R.H. travel)]
- z1. Port **PR** (to travel junction valve)
- z2. Port **PF** (to travel junction valve)
- aa. Port **A1** (mount port for swing oil pressure switch)
- ba. Port **A8** (mount port for bucket DUMP oil pressure switch)
- bb. Port **A2** (mount port for bucket CURL oil pressure switch)
- ca. Port **A4** (mount port for arm OUT oil pressure switch)
- cb. Port **A3** (mount port for arm IN oil pressure switch)
- da. Port **A5** (mount port for boom RAISE oil pressure switch)
- db. Port **A7** (mount port for boom LOWER oil pressure switch)
- ee. Port **A6** (mount port for travel oil pressure switch)

K20506

STRUCTURE AND FUNCTION

PPC SHUTTLE • TRAVEL JUNCTION VALVE

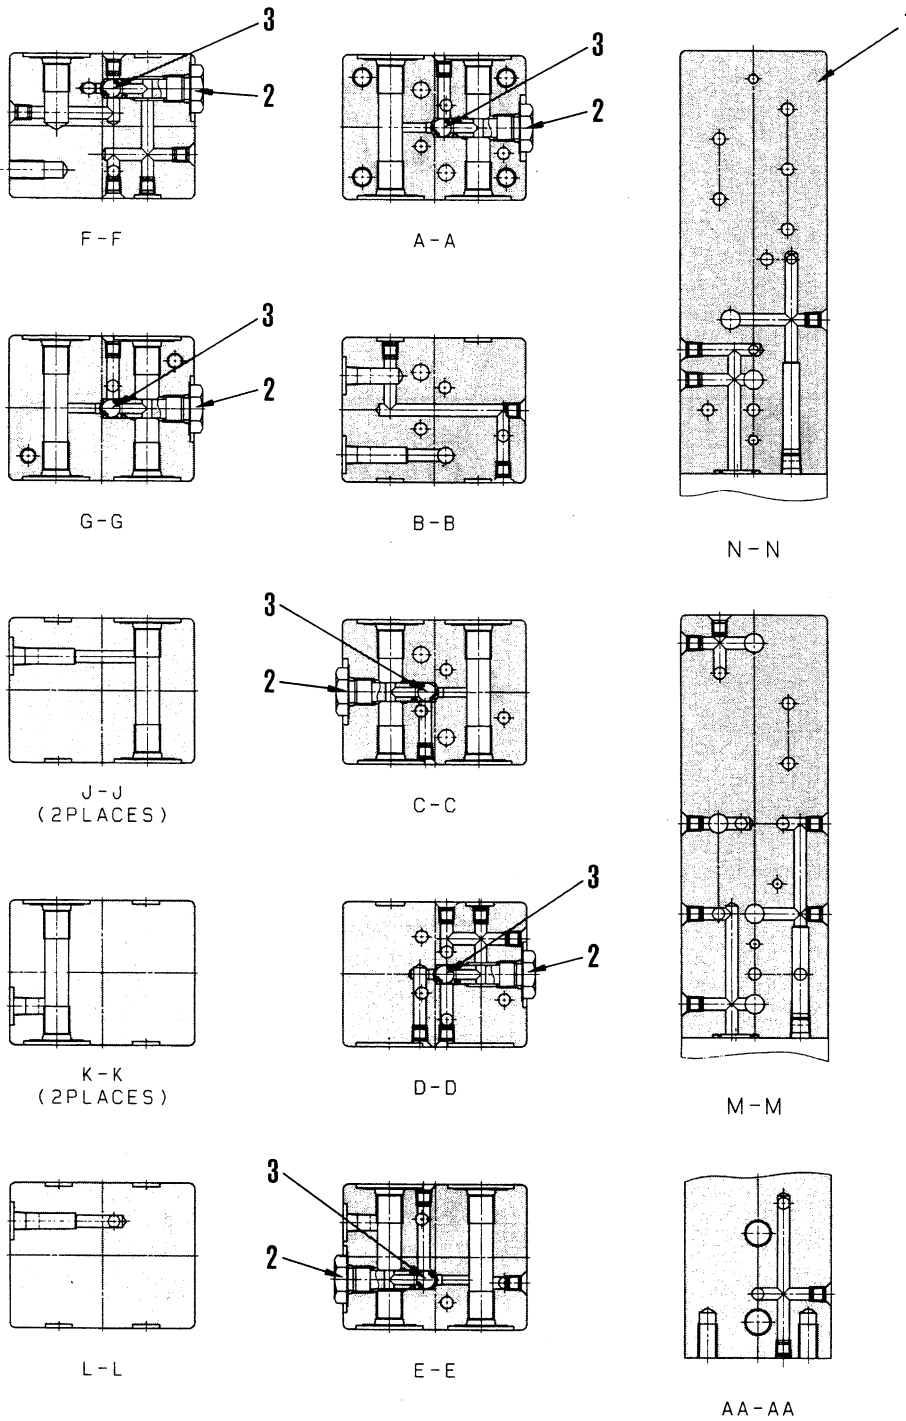


K20506

205F06106

1. Body
2. Plug
3. Ball

TRAVEL JUNCTION VALVE

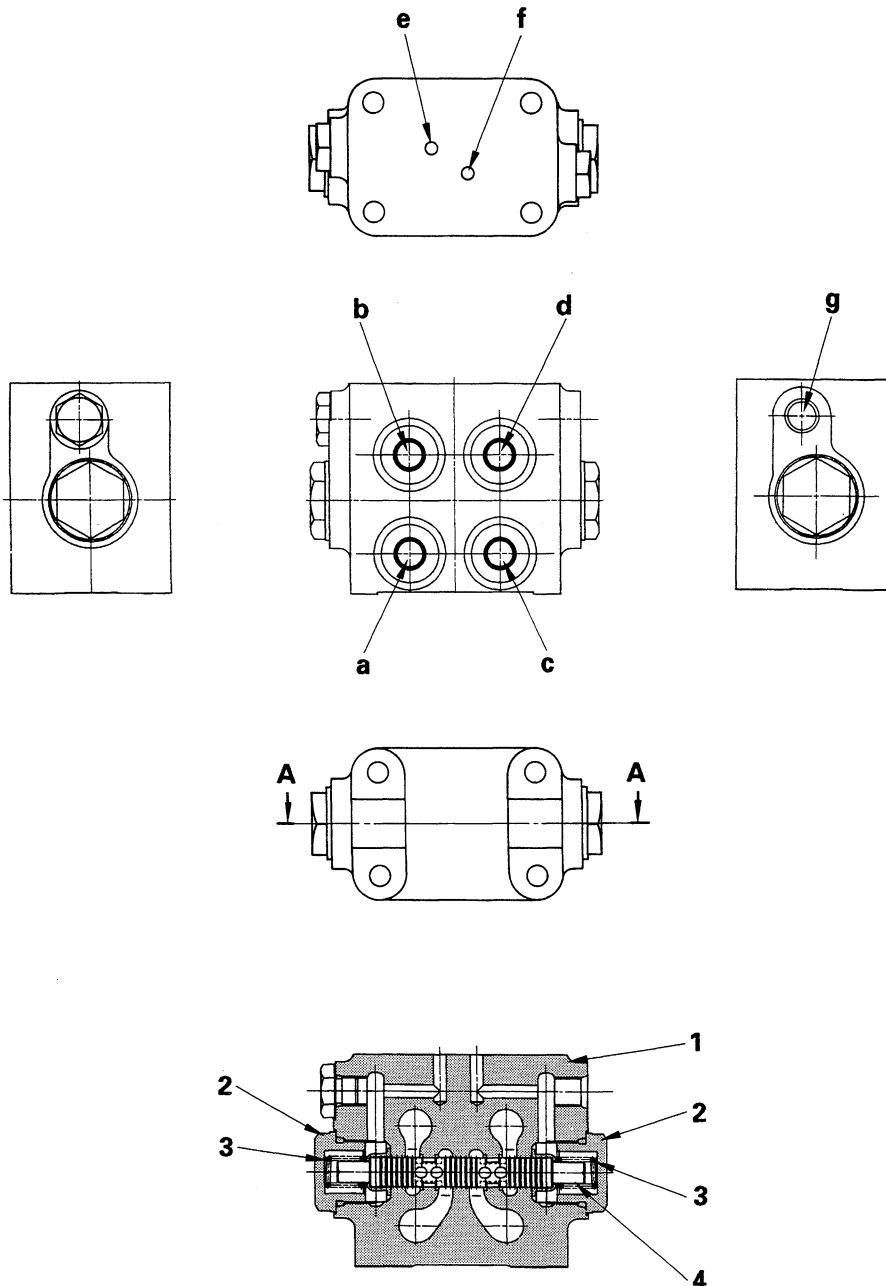


1. Body
2. Plug
3. Spring
4. Spool

- a. Port **T1** (from R.H. travel control valve)
- b. Port **T2** (from L.H. travel control valve)
- c. Port **T3** (from R.H. travel control valve)
- d. Port **T4** (from L.H. travel control valve)
- e. Port **PF** (from PPC shuttle valve)
- f. Port **PR** (from PPC shuttle valve)
- g. Port **PS** (to control valve (arm))

K20506

STRAIGHT-TRAVEL SYSTEM

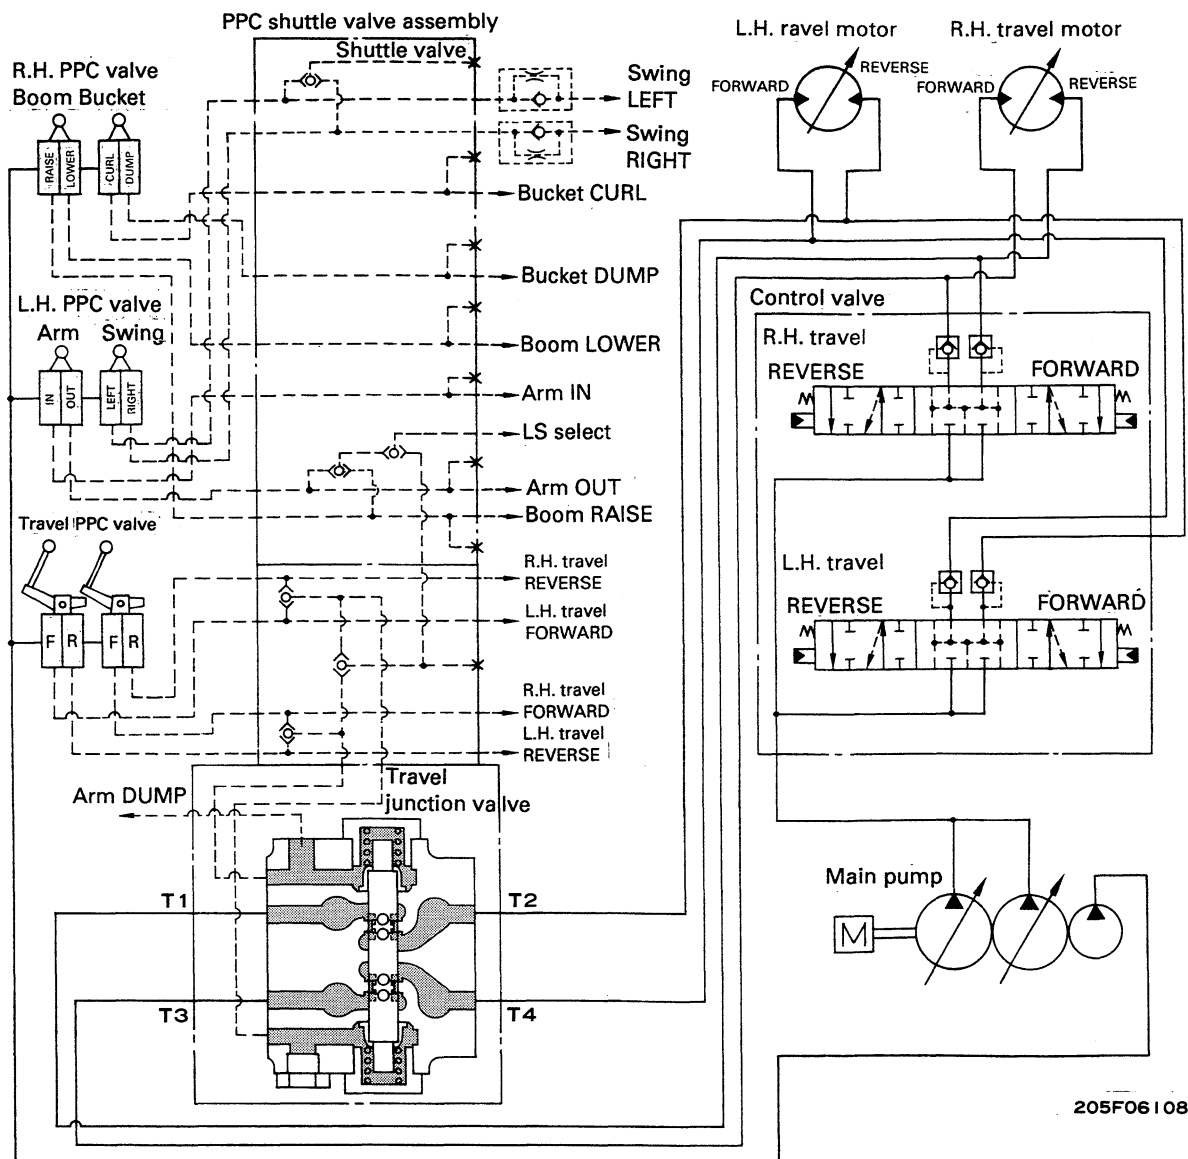

205F06108

FUNCTION

- A travel junction valve is installed between the travel valve and travel motor to compensate for any difference in the oil flow to the left and right travel circuits when traveling in a straight line.
- Because of this, the flow of oil to the left and right travel motors when traveling in a straight line is almost the same, so there is no travel deviation.
- The travel junction valve interconnects the travel circuit when the straight-travel is operated independently or when the straight travel + another actuator are operated simultaneously.
- When steering, if the difference in the movement of the travel levers is more than approx. 10 mm, the travel junction valve is switched, and the left and right travel circuits are shut off.

STRUCTURE AND FUNCTION


PPC SHUTTLE • TRAVEL JUNCTION VALVE

OPERATION

- A:** PPC output pressure (R.H. travel REVERSE or L.H. travel FORWARD)
- B:** PPC output pressure (R.H. travel FORWARD or L.H. travel REVERSE)

When traveling in a straight line in forward or reverse


- When traveling forward (or in reverse), there is no difference in the pilot pressure from the PPC shuttle valve (the output pressure of each PPC valve), so the spool is balanced in the middle. In this condition, the R.H. FORWARD and L.H. FORWARD, and R.H. REVERSE and L.H. REVERSE are interconnected through the spool.

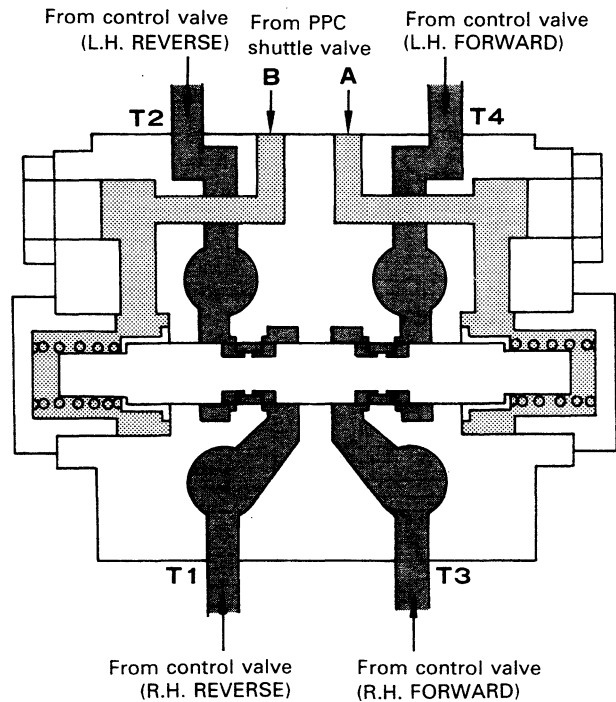

205F06109

When steering in forward or reverse

- When the steering is operated in forward (or reverse), if the difference in the pilot pressure from the PPC shuttle valve becomes greater than the switching pressure (spring force), the spool moves to the right or left and the L.H. and R.H. forward and L.H. and R.H. reverse passages are separated. Because of this, a difference in pressure is created in the L.H. and R.H. circuits, and the steering can be operated.

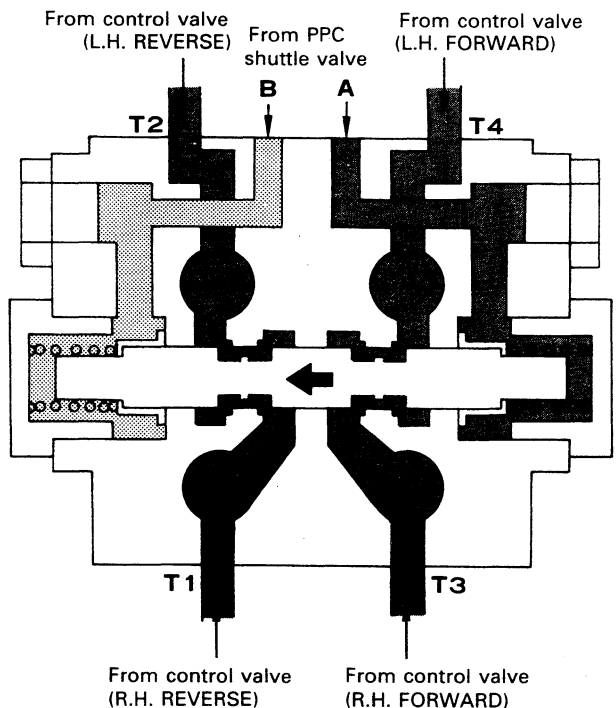


205F06110

K20506


EPC • SOLENOID VALVE

LS SELECT, PUMP MERGE-DIVIDER, 2-STAGE RELIEF, TRAVEL SPEED, SWING BRAKE SOLENOID VALVE

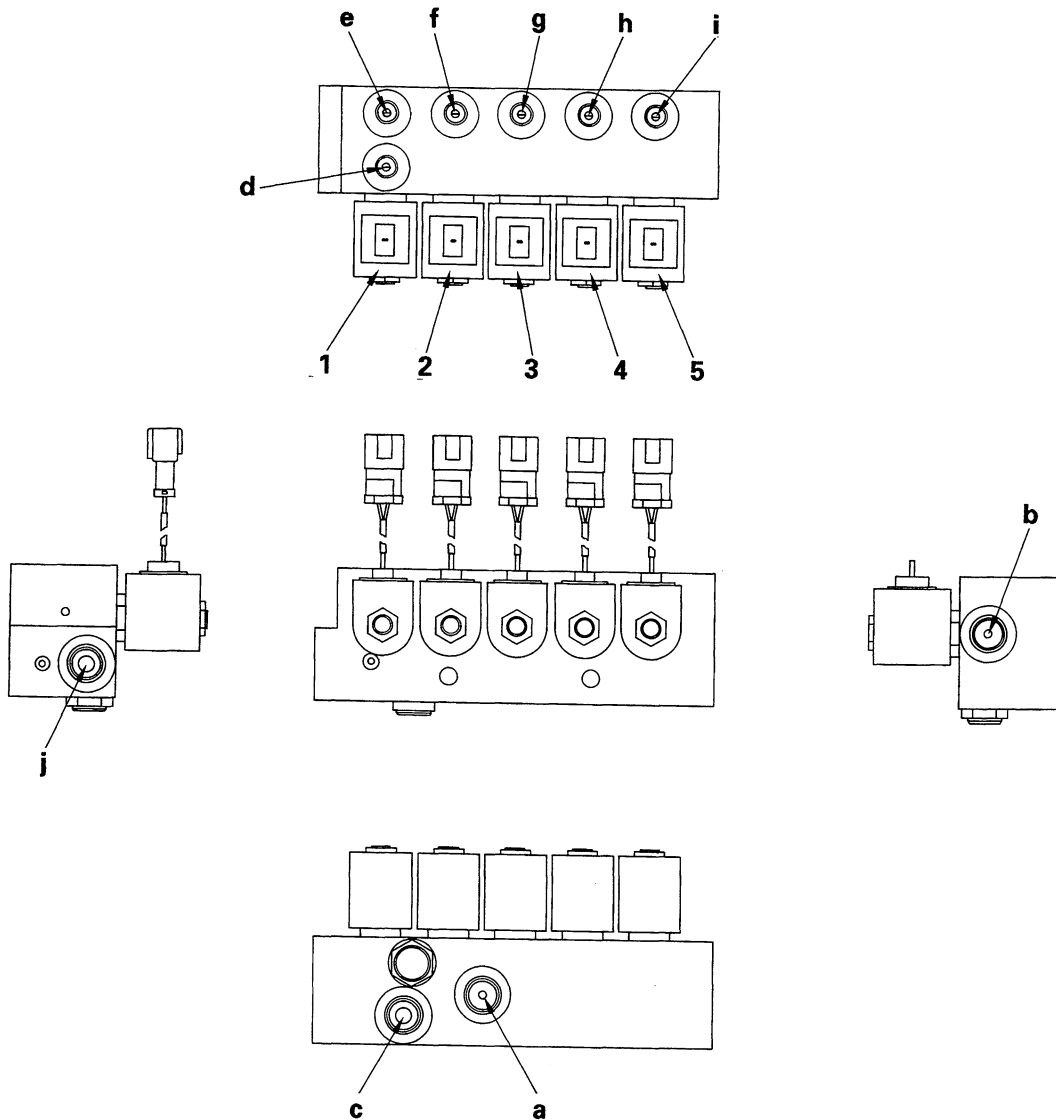

1. LS select solenoid valve
2. 2-stage relief solenoid valve
3. Pump merge-divider solenoid valve
4. Travel speed solenoid valve
5. Swing brake solenoid valve

- a. To tank
- b. From control pump
- c. To PPC/EPC valve
- d. From PPC shuttle valve
- e. To LS select valve
- f. To LS relief valve
- g. To pump merge-divider valve
- h. To L.H. and R.H. travel motor
- i. To swing motor
- j. To accumulator

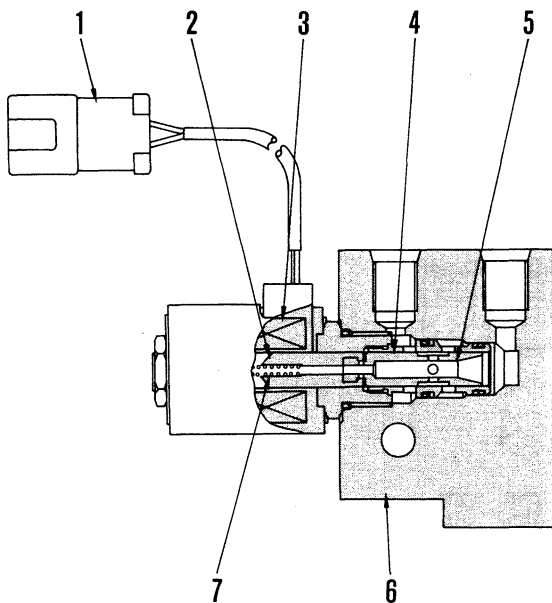


1. Connector
2. Variable core
3. Coil
4. Cage
5. Spool
6. Block
7. Spring

205F06112

OPERATION

When solenoid is deactivated


- The signal current does not flow from the controller, so coil (3) is deactivated. For this reason, spool (5) is pushed to the right in the direction of the arrow by spring (6). As a result, the circuit between ports **P** and **A** closes and the pressurized oil from the control pump does not flow to the actuator. At the same time, the pressurized oil from the actuator flows from port **A** to port **T**, and is then drained to the tank.

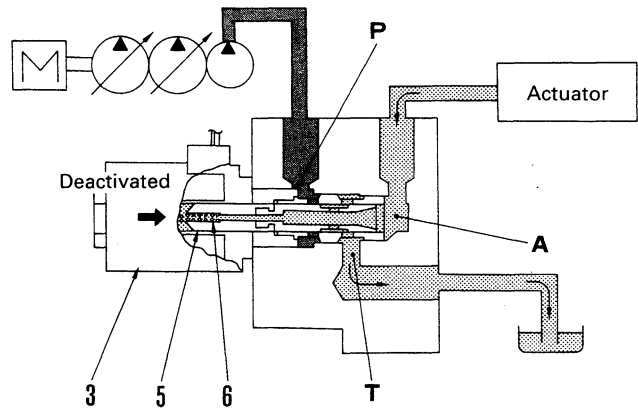

205F06113

When solenoid is excited





- When the signal current flows from the controller to coil (3), coil (3) is excited. For this reason, spool (5) is pushed to the left in the direction of the arrow. As a result, the pressurized oil from the control pump flows from port **P** through the inside of spool (5) to port **A**, and then flows to the actuator. At the same time, port **T** is closed, and this stops the oil from flowing to the tank.

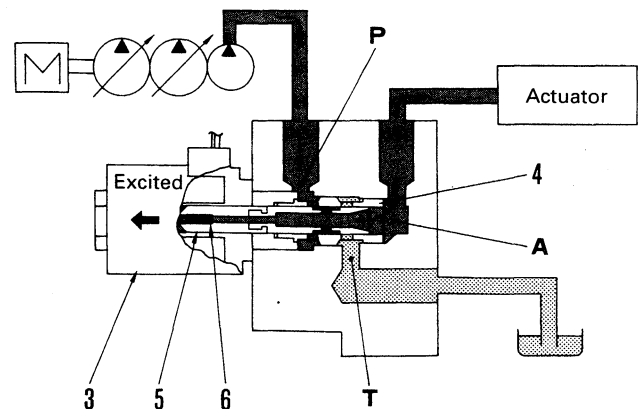

205F06114

K20506

LS CONTROL EPC VALVE

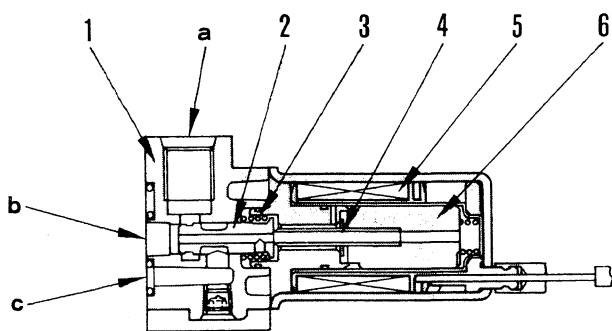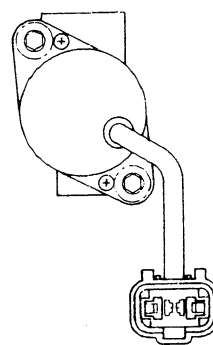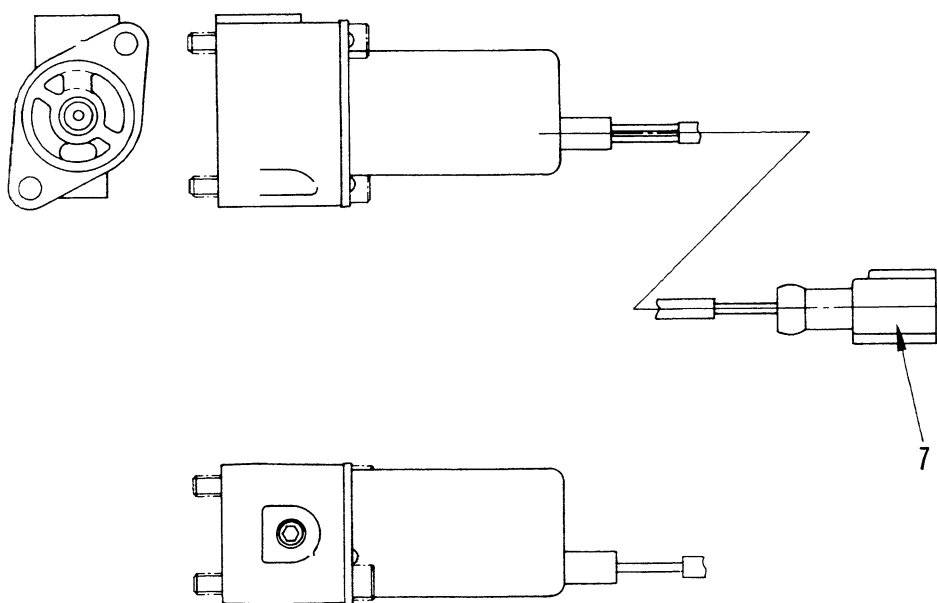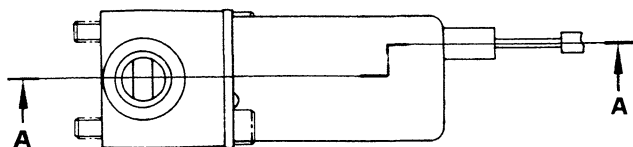

A-A

205F06115


1. Body
2. Spool
3. Spring
4. Push pin

5. Coil
6. Plunger
7. Connector

- a. Port C (to LS valve)
- b. Port T (to tank)
- c. Port P (from control pump)


FUNCTION

- The EPC valve consists of the proportional solenoid portion and the hydraulic valve portion.
- When it receives signal current "i" from the valve controller, it generates the EPC output pressure in proportion to the size of the signal, and outputs it to the control valve.

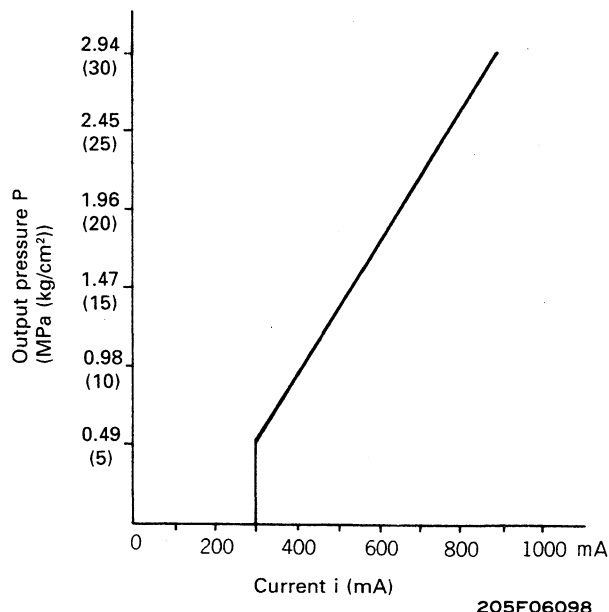**OPERATION****1. When signal current is 0 (coil deactivated)**


- There is no signal current flowing from the controller to coil (5), coil (5) is deactivated.
- For this reason, spool (2) is pushed to the right in the direction of the arrow by spring (3).
- As a result, port P closes and the pressurized oil from the control pump does not flow to the LS valve.

At the same time, the pressurized oil from the LS valve passes from port C through port T and is drained to the tank.

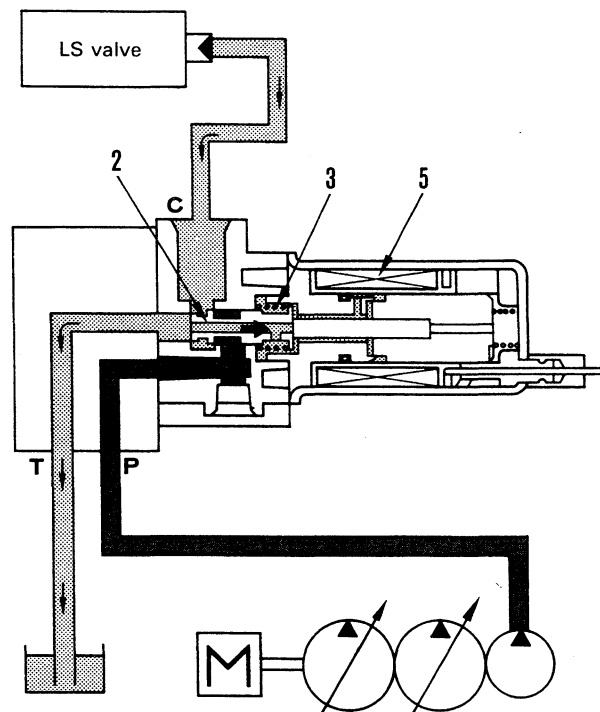

2. When signal current is very small (coil excited)


- When a very small signal current flows to coil (5), coil (5) is excited, and a propulsion force is generated, which pushes plunger (6) to the left in the direction of the arrow.
- Push pin (4) pushes spool (2) to the left in the direction of the arrow, and pressurized oil flows from port **P** to port **C**.
- When the pressure at port **C** rises and the load of spring (3) + the force acting on surface "a" of spool (2) becomes greater than the propulsion force of plunger (6), spool (2) is pushed to the right in the direction of the arrow. The circuit between port **P** and port **C** is shut off, and at the same time, port **C** and port **T** are connected.
- As a result, spool (2) is moved to the left or right until the propulsion force of plunger (6) is balanced with the load of spring (3) + pressure of port **C**.
- Therefore, the circuit pressure between the EPC valve and the LS valve is controlled in proportion to the size of the signal current.

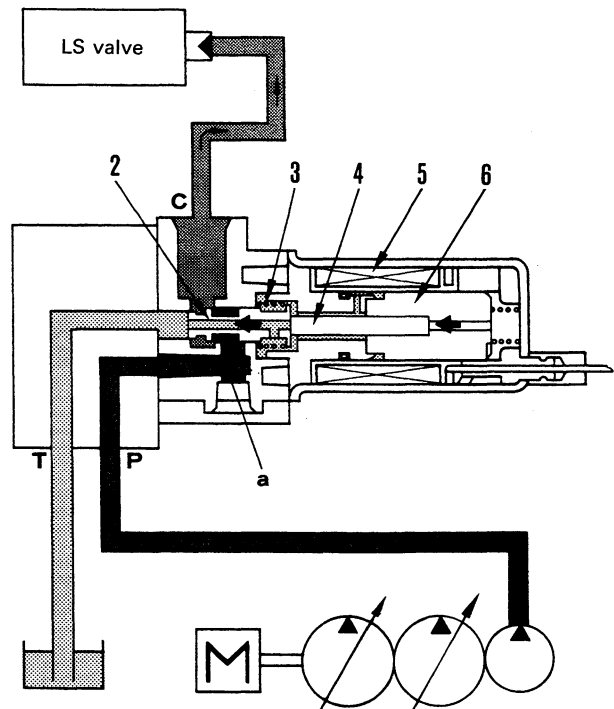

205F06100

3. When signal current is maximum (coil excited)

- When the signal current flows to coil (5), coil (5) is excited.
- When this happens, the signal current is at its maximum, so the propulsion force of plunger (6) is also at its maximum.
- For this reason, spool (1) is pushed to the left in the direction of the arrow by push pin (4).
- As a result, the maximum flow of pressurized oil from port **P** flows at its maximum to port **C**, and the circuit pressure between the EPC valve and LS valve becomes the maximum.
- At the same time, port **T** closes and stops the oil from flowing to the tank.

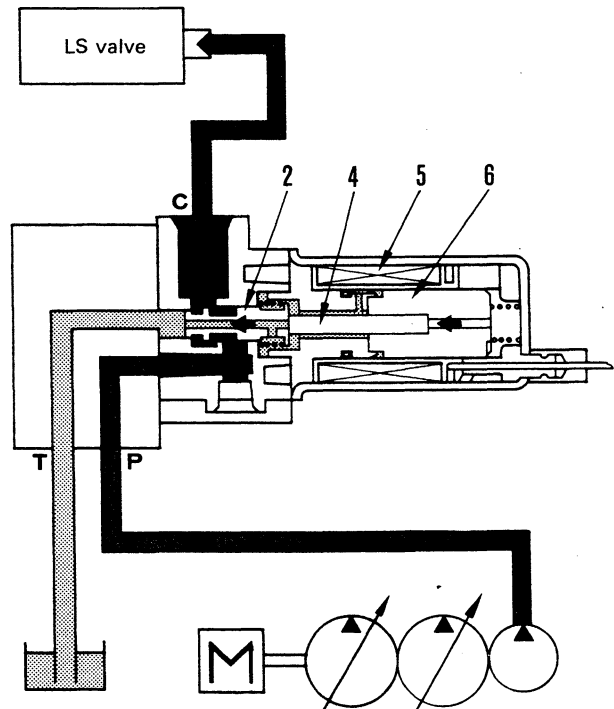

HYDRAULIC CYLINDER

SPECIFICATIONS

Unit: mm

Item	Boom		Arm		Bucket	
	PC210	PC240	PC210	PC240	PC210	PC240
Outside diameter of piston rod	120	135	135	140	125	140
Inside diameter of cylinder	85	95	95	100	85	100
Stroke	1,285	1,285	1,490	1,635	1,110	1,009
Max. stroke	3,155	3,155	3,565	3,870	2,801	2,626
Min. stroke	1,870	1,870	2,075	2,235	1,691	1,617
Width across flats of piston nut	85	95	95	95	85	95

K20506

3. ADJUSTING PRESSURE OF THE OIL PRESSURE SWITCH

- **Screw D: Pressure range adjustment screw**

To make an adjustment so that the oil pressure switch acts normally when checking the operation of the overload warning device.


Turning to the left makes the pressure range wider.

- **Screw E: Zero point adjustment screw**



Turning to the right one complete turn raises the pressure by 57 kg/cm².

Each complete turn to the left lowers the pressure by 57 kg/cm².


⚠ When an adjustment is required, contact your Komatsu distributor and have him make the adjustment.

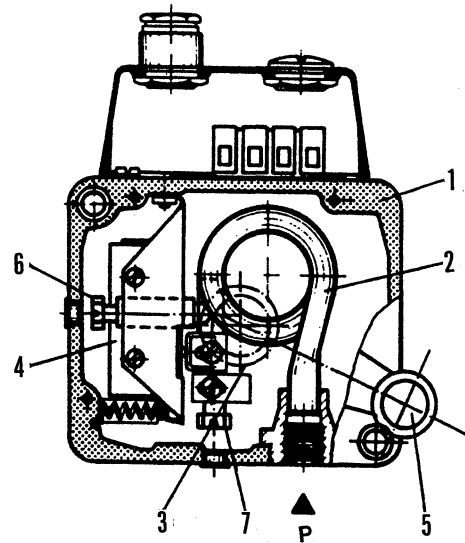

1. Body
2. Bourdon tube
3. Eccentric disc
4. Microswitch
5. Lever and roller
6. Adjustment screw (E)
7. Adjustment screw (D)

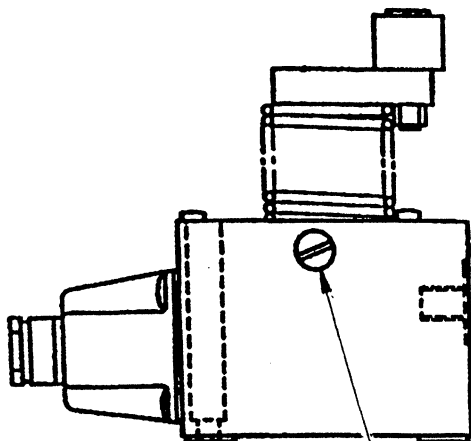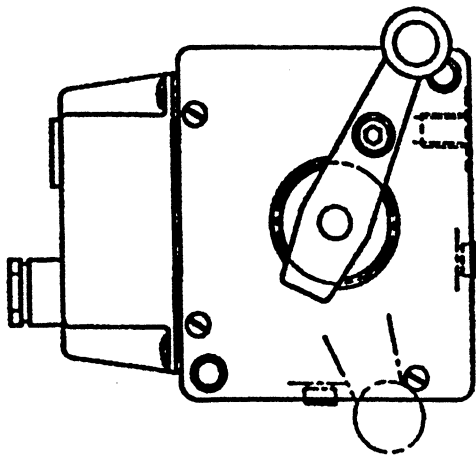


Screw E

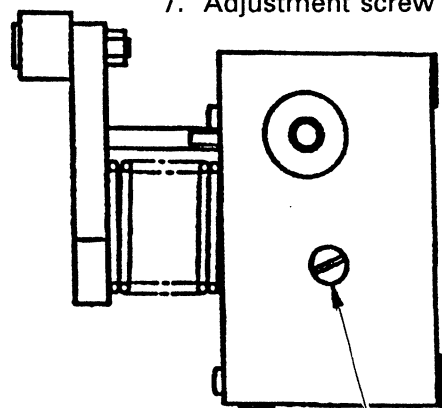

Screw D


F020E351

WORK EQUIPMENT

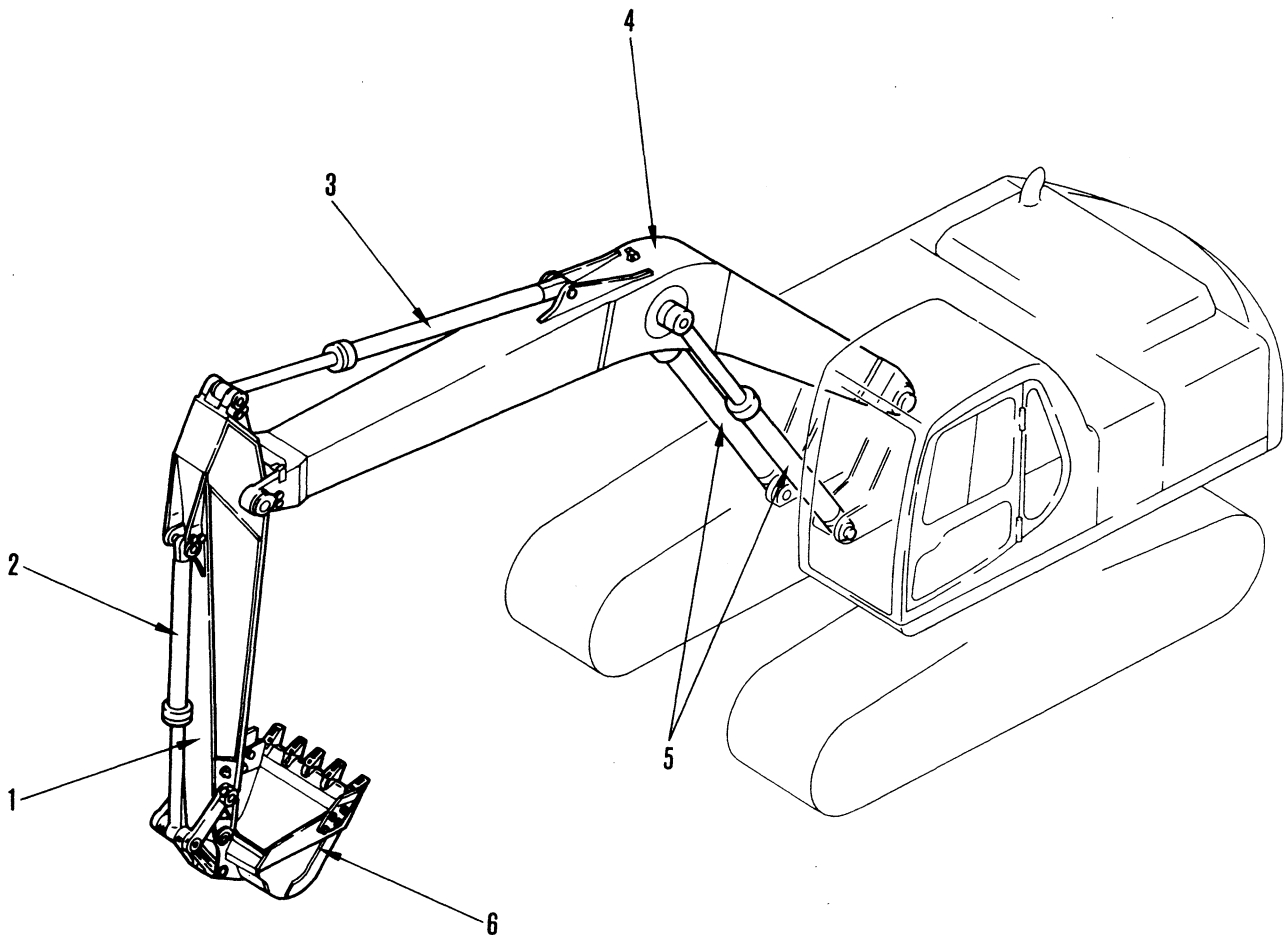



1. Arm
2. Bucket cylinder
3. Arm cylinder
4. Boom
5. Boom cylinder
6. Bucket

205F06 | 23

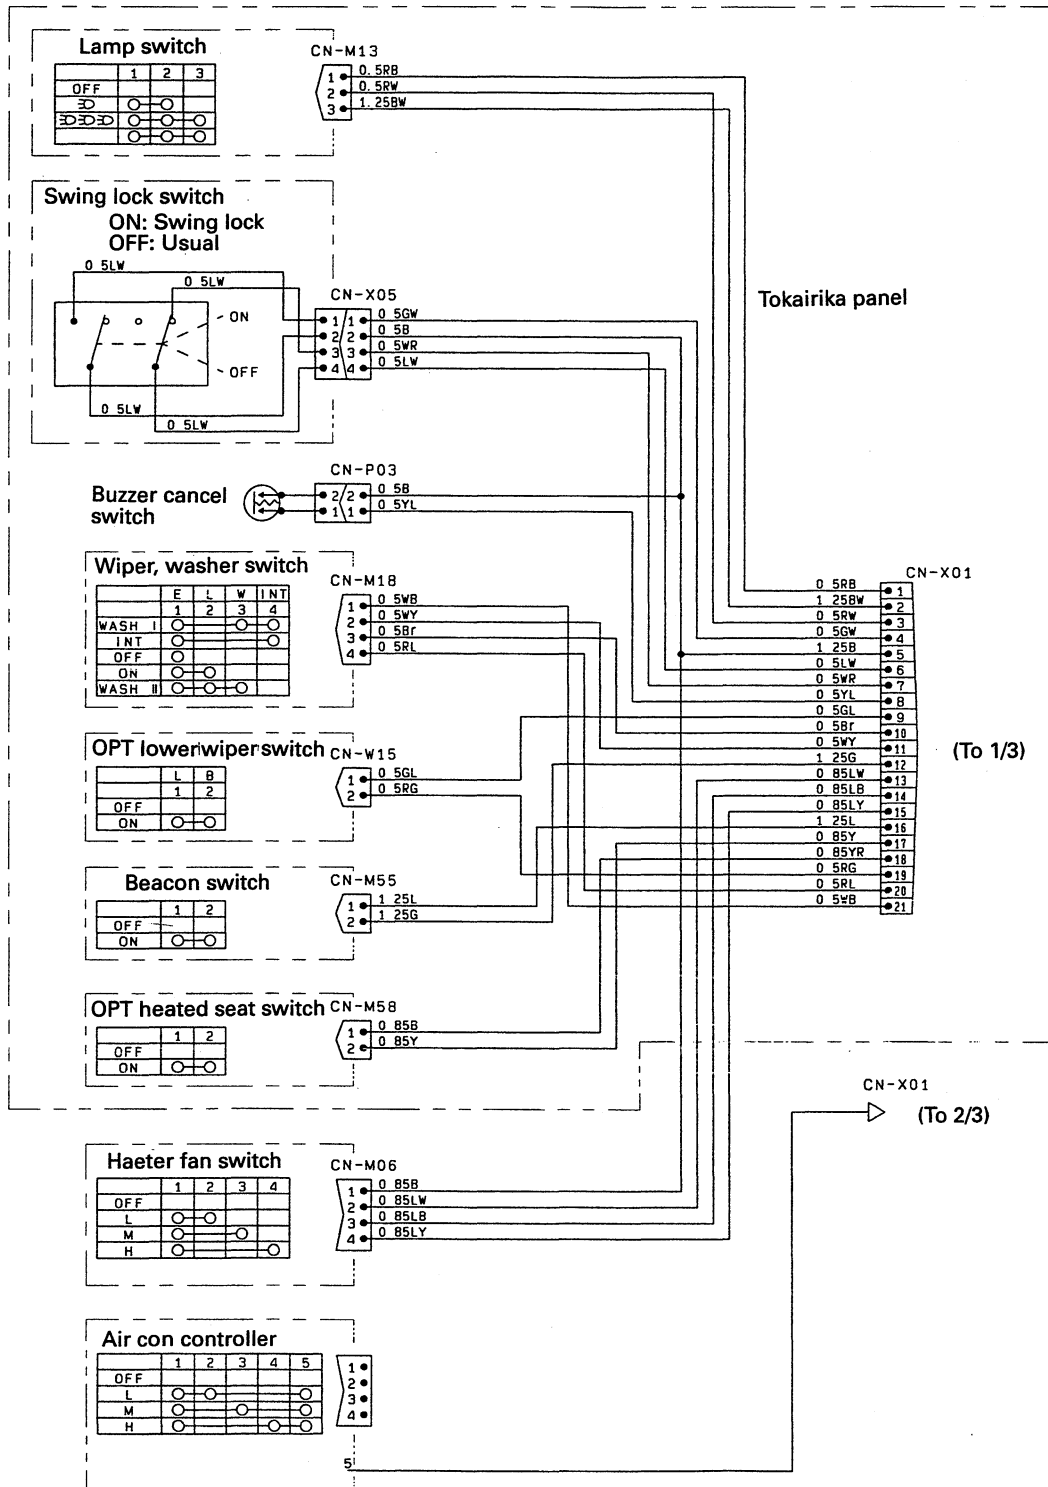

K20506

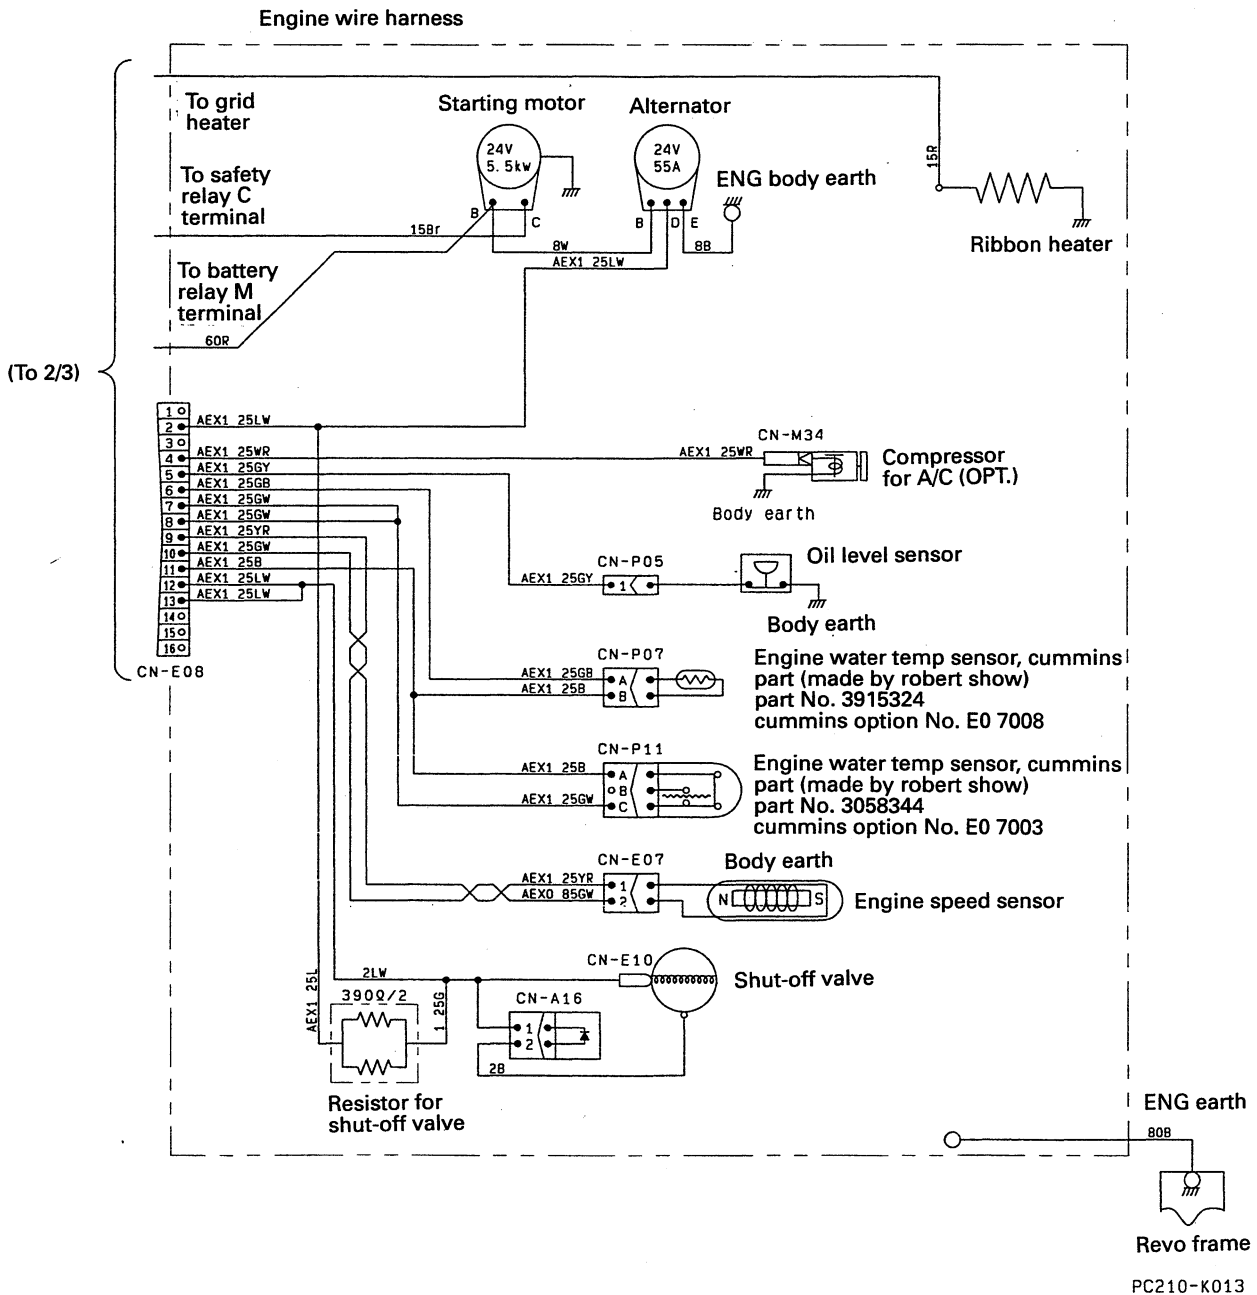

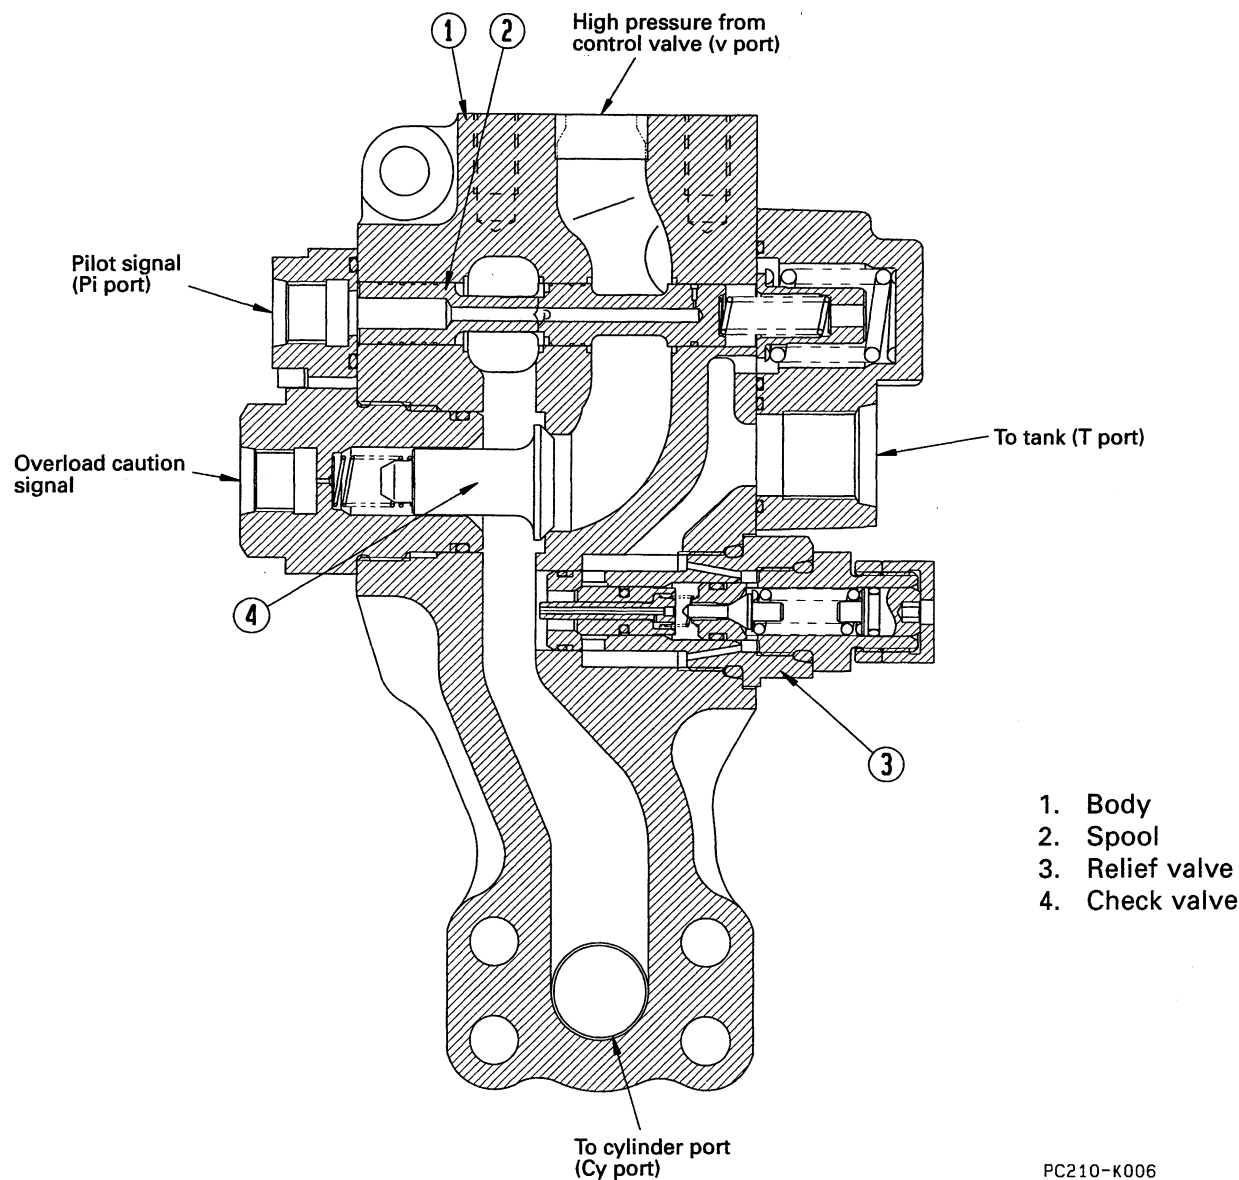


K20506

FUNCTION

- This valve prevents sudden uncontrolled lowering of the boom, when lifting, due to the burst of a hose in the boom cylinder line. In such a condition this value will hold the load until operator lowers the boom in a controlled way using the normal wrist control.

**When hose burst occurs
(Operation to lower safety)**


- The sudden loss of pressure at port **V** will cause check valve (4) to re-seat and so the valve is locked.
- The boom can be lowered in a controlled way by operating the wrist control in the normal way.

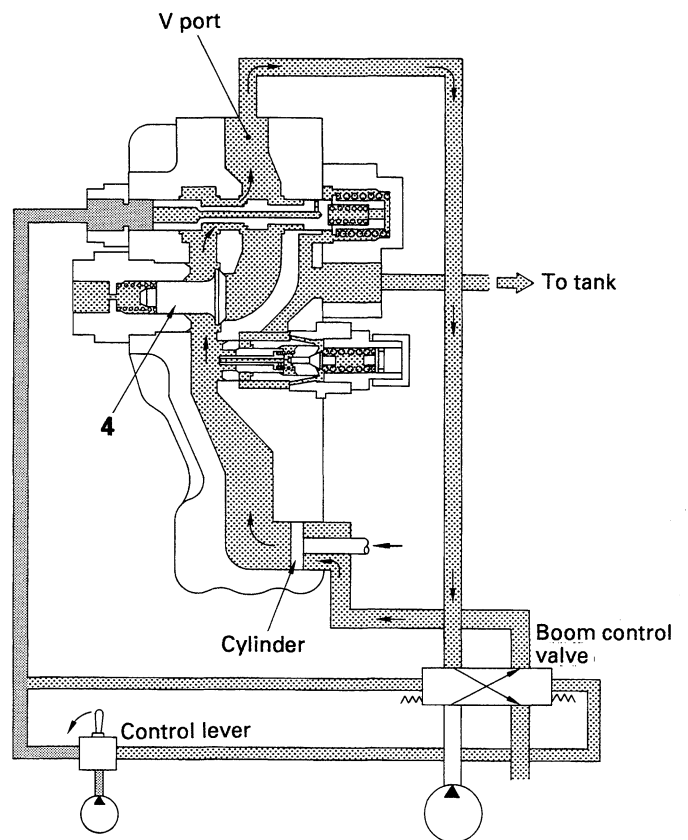

K20506


OPERATION BOOM RAISE

- During boom raising the pilot signal from wrist control operates control valve spool to direct high pressure oil to port V of hose burst valve.
- This pressure lifts check valve (4) from seat & high pressure oil flows in the bottom of the cylinder raising the boom.

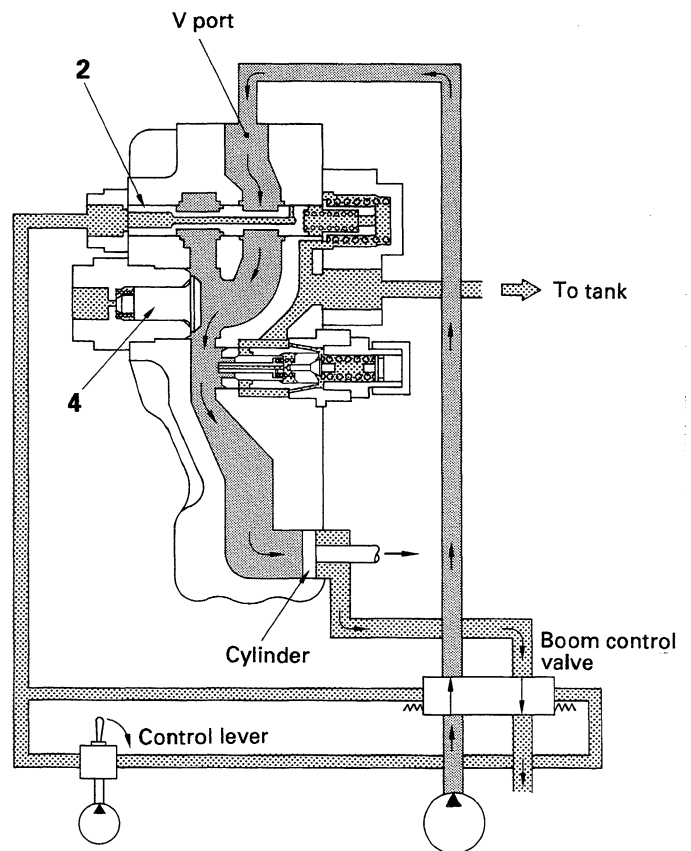

BOOM LOWER


- During boom lowering the pilot signal reverses the front through the control valve spool. High pressure oil flows to the head side of the cylinder. Oil in the bottom side of the cylinder flows through the port Cy of the valve but cannot flow past the check valve. The pilot signal also opens the spool (2) of the hose burst valve and allows oil to flow back to tank.

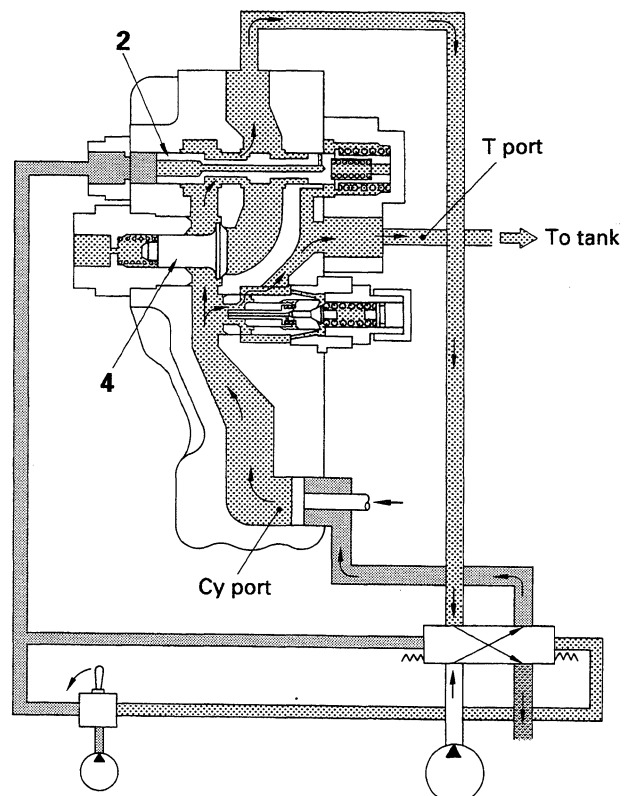

K20506

ENGINE CONTROL SYSTEM

K20506

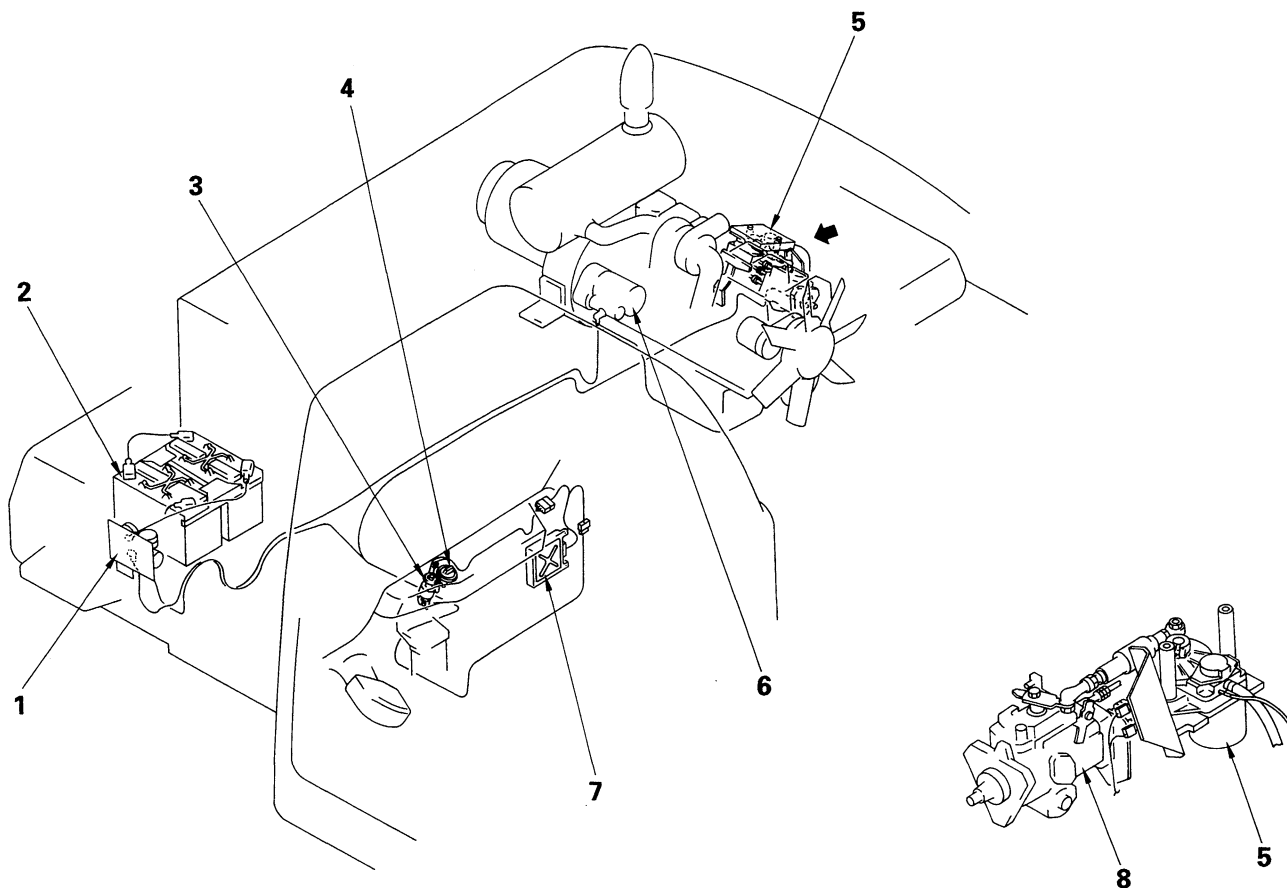

1. Battery relay
2. Battery
3. Starting switch
4. Fuel control dial
5. Governor motor
6. Starting motor
7. Engine throttle controller
8. Fuel injection pump


FUNCTION

- The engine can be started and stopped simply by using the starting switch.
- A dial type engine control is used to control the engine speed. The engine throttle controller receives the control signal from the fuel control dial, sends a drive signal to the governor motor, and controls the angle of the governor lever in the fuel injection pump.
- At the same time, the engine throttle controller also receives signals from other controllers to control the engine speed.

1. OPERATION OF SYSTEM

Starting engine


- When the starting switch is turned to the START position, the starting signal flows to the starting motor, and the starting motor turns to start the engine. When this happens, the engine throttle controller checks the signal from the fuel control dial and sets the engine speed to the speed set by the fuel control dial.

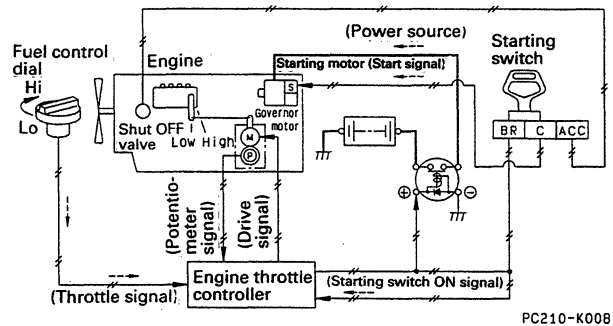

PC210-K008

Engine speed control


- The fuel control dial sends a signal to the engine throttle controller according to the position of the dial. The engine throttle controller calculates the angle of the governor motor according to this signal, and sends a signal to drive the governor motor so that it is at that angle. When this happens, the operating angle of the governor motor is detected by the potentiometer, and feedback is sent to the engine throttle controller, so that it can observe the operation of the governor motor.

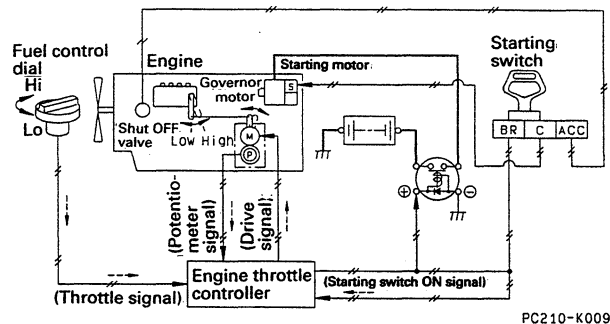

PC210-K009

Stopping engine

- When the starting switch is placed at the OFF position, the shut off valve is closed so the supply of fuel to the engine is shut off and the engine stops.

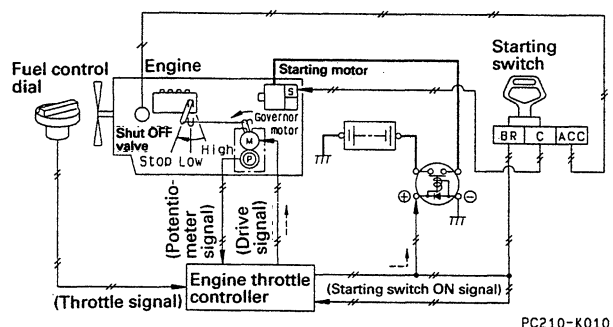


PC210-K010




K20506

2. COMPONENTS OF SYSTEM


1) FUEL CONTROL DIAL

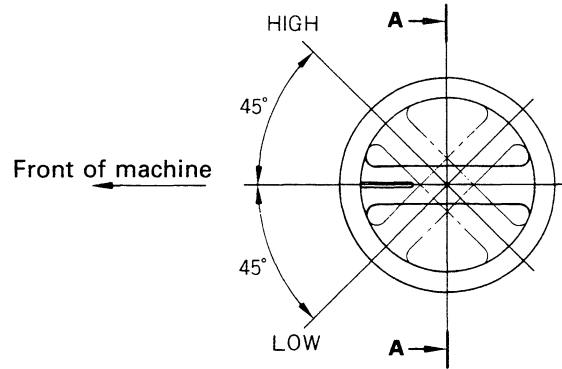

1. Knob
2. Dial
3. Spring
4. Ball
5. Potentiometer
6. Connector

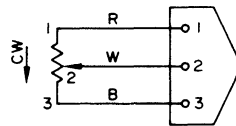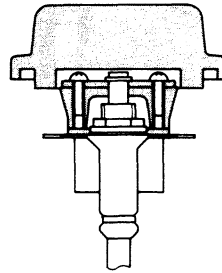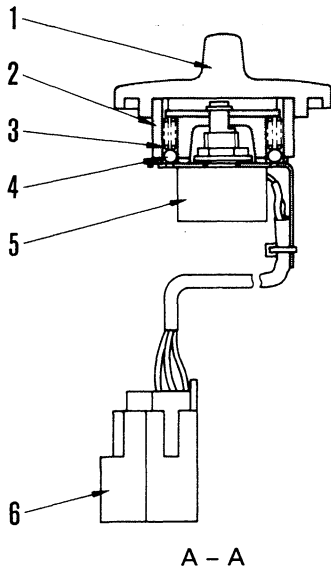

Composition of circuit

 


205F05113

FUNCTION

- The fuel control dial is installed at the bottom of the monitor panel. A potentiometer is installed under the knob, and when the knob is turned, it rotates the potentiometer shaft.



When the shaft rotates, the resistance of the variable resistor inside the potentiometer changes, and the desired throttle signal is sent to the engine throttle controller.

The shaded area in the graph on the right is the abnormality detection area and the engine speed is set at low idling.

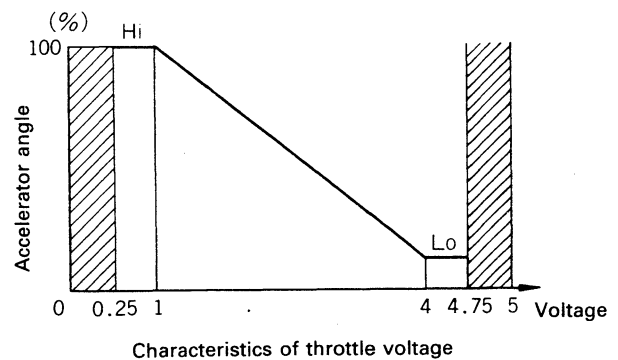


205F05114

2) GOVERNOR MOTOR

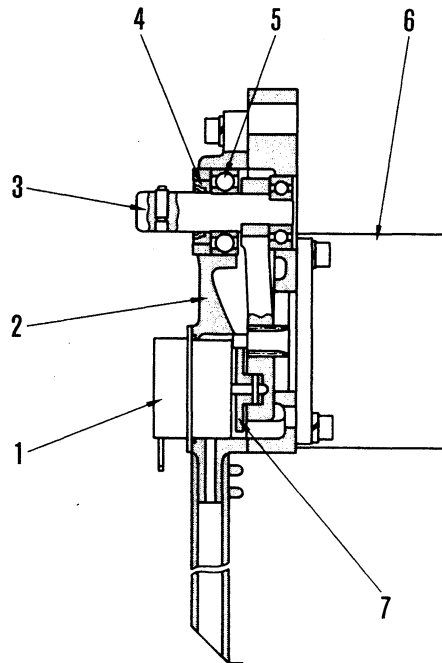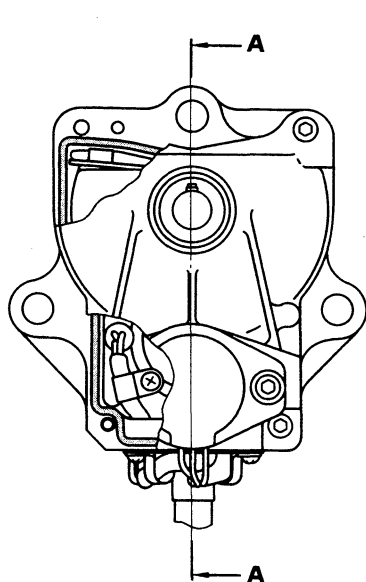

A-A

1. Potentiometer
2. Cover
3. Shaft
4. Dust seal
5. Bearing
6. Motor
7. Gear
8. Connector

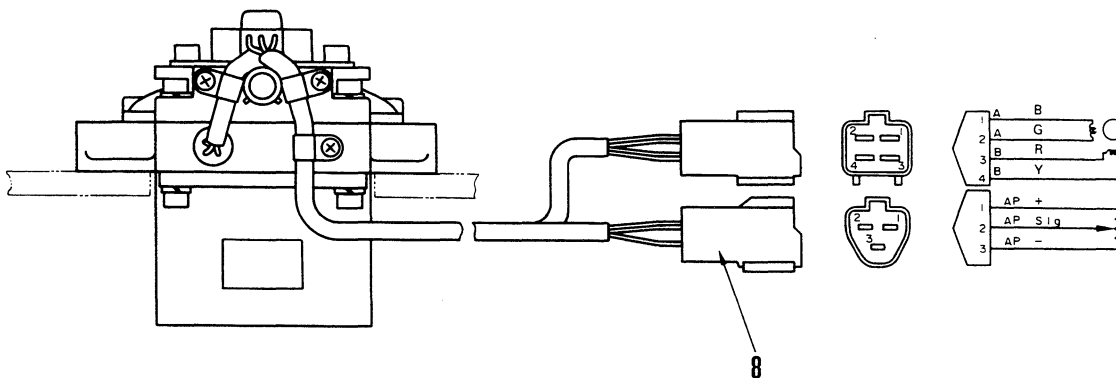

205F06134

FUNCTION

- The motor is rotated and the governor lever of the fuel injection pump is controlled by the drive signal from the engine throttle controller.
- A stepping motor is used for the motor which provides the motive power. In addition, a potentiometer for giving feedback is installed to allow observation of the operation of the motor.
- The rotation of the motor is transmitted to the potentiometer through a gear.

OPERATION


Motor stationary

- Both **A** phase and **B** phase of the motor are continuous, and a holding torque is generated in the motor.

Motor rotating

- A pulse current is applied to the **A** phase and **B** phase from the engine throttle controller to give synchronous rotation with the pulse.

3) ENGINE THROTTLE CONTROLLER

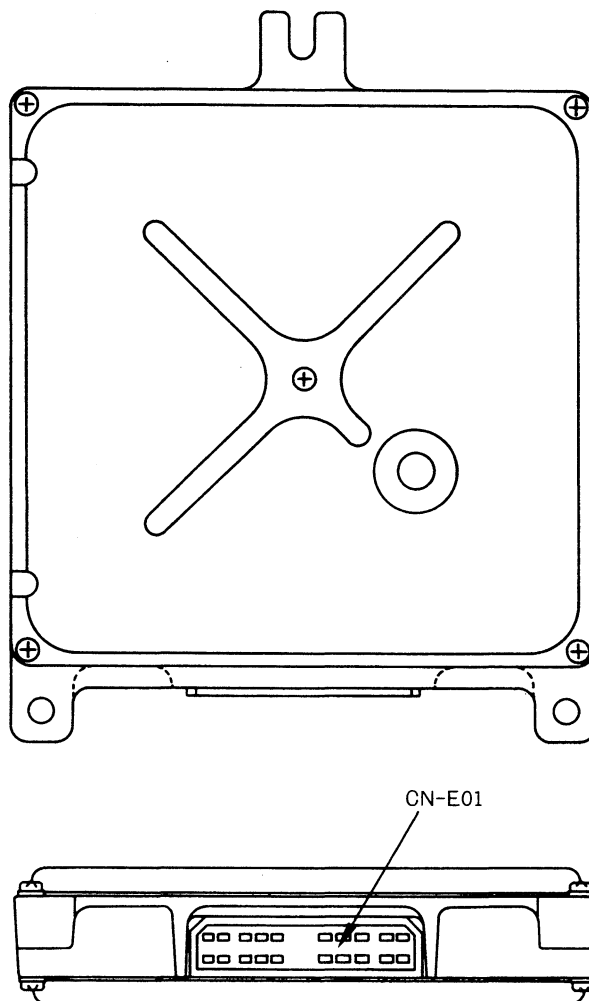

Input and output signals
CN-E01


205F06135

No.	Name of signal	Input/output
1	Controller power source (24V)	—
2	Controller power source (24V)	—
3	Network circuit (-)	—
4	Auto deceleration	Input
5	Potentiometer power source (5V)	—
6	Starting switch ON signal	Input
7	Fuel control dial	Input
8	Model selection 1	Input
9	Model selection 3	Input
10	Governor motor drive A (+)	Output
11	Governor motor drive B (+)	Output

No.	Name of signal	Input/output
12	GND	Input
13	Battery relay drive	Output
14	Network circuit (pump +)	—
15	Network circuit (monitor +)	—
16	Potentiometer GND	—
17	Governor motor potentiometer signal	Input
18	Model selection 2	Input
19	Model selection 4	Input
20	Governor motor drive A (-)	Output
21	Governor motor drive B (-)	Output

ELECTRONIC CONTROL SYSTEM

CONTROL FUNCTION

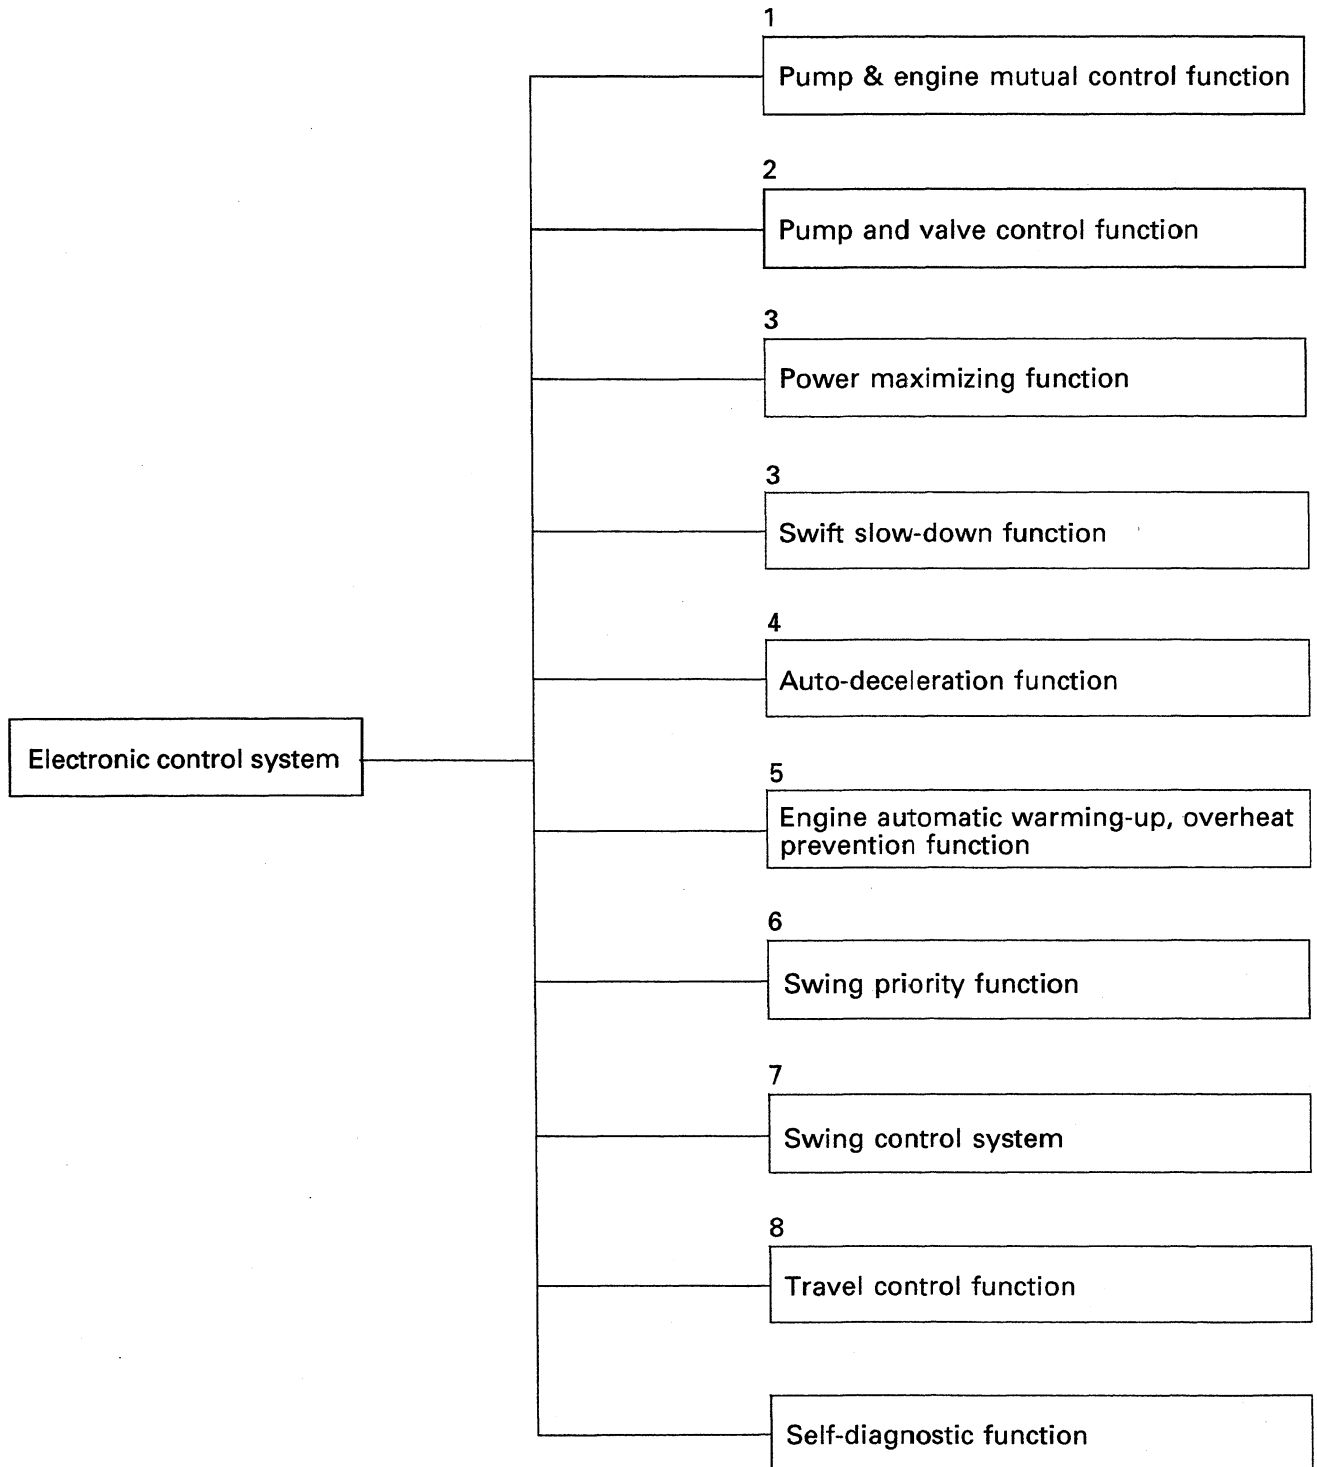


K20506


★ For details of the self-diagnostic function, see TROUBLESHOOTING.

1) Control method in each mode


Heavy-duty operation (H/O) mode

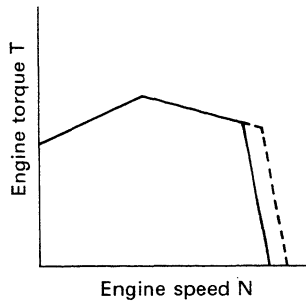

205F06141

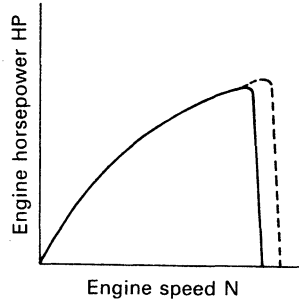

205F06142

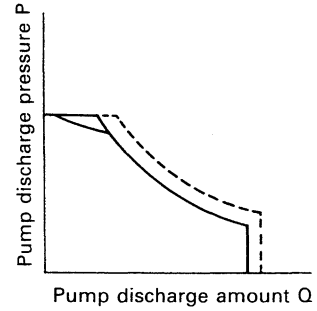


205F06143

- Matching point in heavy-duty operation mode:
96% partial output point


Model	PC210	PC240
Mode		
Heavy-duty operation (H/O)	96 kW (128 HP) /2,000 rpm	114 kW (153 HP) /2,200 rpm

- When the load on the pump rises and the pressure rises, the engine speed goes down. When this happens, the pump discharge amount is reduced, and the engine speed is controlled so that it becomes near the 96% partial output point. If the reverse happens and the pressure goes down, the system is controlled so that the pump discharge amount is increased until the engine speed becomes near the 96% partial output point. By repeating this control, the engine can always be used at near the 96% partial output point.


General operation (G/O), finishing operation (F/O), breaker operation (B/O) mode

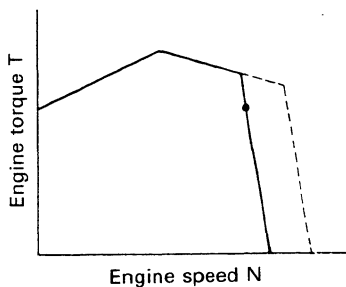

205F06144

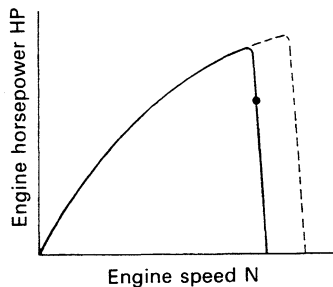

205F06145

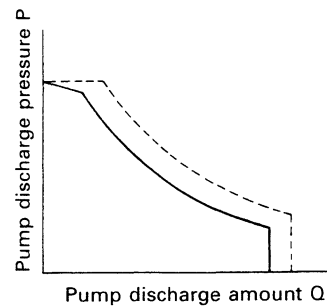


205F06146


- Matching point in general operation, finishing operation, and breaker operation modes:
80% partial output point.

Model	PC210	PC240
Mode		
General operation (G/O), finishing operation (F/O), breaker operation (B/O)	81 kW (108 HP) /1,900 rpm	96 kW (128 HP) /2,000 rpm


- When the load on the pump rises and the pressure rises, the engine speed goes down. When this happens, mutual control of the engine and pump is used to control the system so that the pump absorption torque follows the equal horsepower curve of the engine, and the engine speed is lowered while keeping the torque constant. In this way, the engine is used in a range which provides good fuel efficiency.

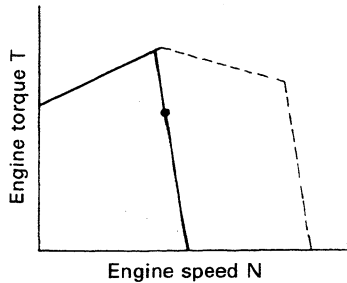Lifting operation (L/O) mode

205F06147

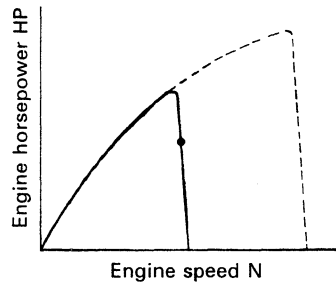

205F06148

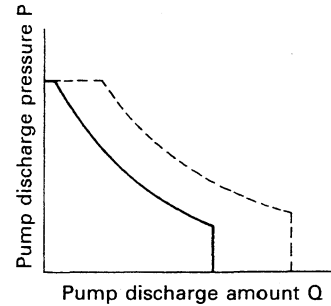


205F06149

- Matching point in lifting operation mode:
60% partial output point


Mode \ Model	PC210	PC240
Lifting operation (H/O)	57 kW (76 HP) /1,500 rpm	76 kW (102 HP) /1,500 rpm

- When the lifting operation mode is selected, the engine speed is automatically lowered to the partial position. In this condition, control is carried out in the same way as for the general operation, finishing operation, and breaker operation modes to match the load on the pump. In this way, the fuel consumption is reduced and the fine control ability is improved.


K20506

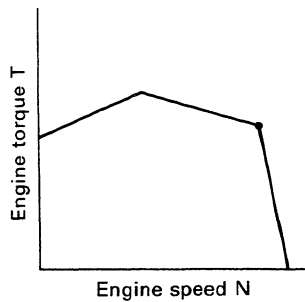Power maximizing mode

205F06150

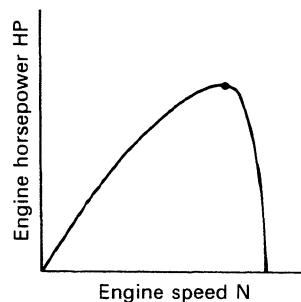

205F06151

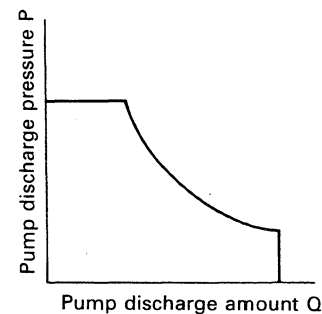


205F06152

- Matching point in power max. mode:
Rated output point


Mode \ Model	PC210	PC240
Power max.	99 kW (133 HP) /2,200 rpm	117 kW (158 HP) /2,300 rpm

- When the pump load increases, the engine speed drops. When this happens, the pump discharge is reduced to prevent the engine speed from going down and to ensure that the engine is used at near the rated output point.

2) Pump control function when traveling

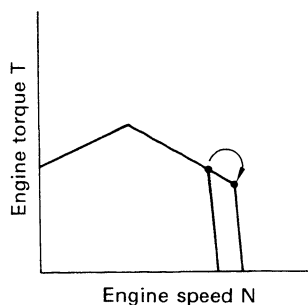


205F06153

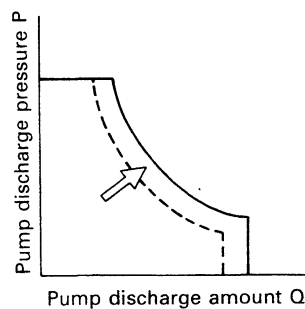


205F06154

- When the machine travels in the heavy-duty operation (H/O) mode, the engine speed rises, and the pump is controlled in the same way as when in the power maximizing mode.

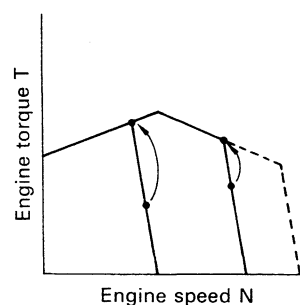


205F06155

- When the machine travels in any mode other than the heavy-duty operation (H/O) mode, the working mode and engine speed are kept as they are, and the pump absorption torque is increased.

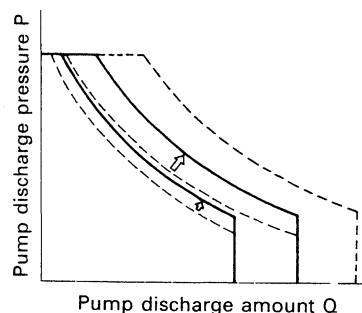


205F06156

3) Control function when TVC prolix switch is ON

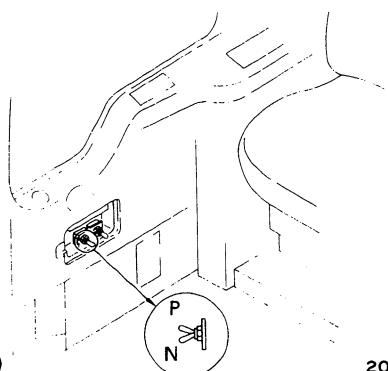


205F06157

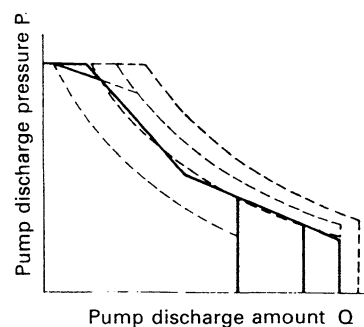

205F06158

- Even if any abnormality should occur in the controller or sensors, the TVC prolix switch can be turned ON to provide an absorption torque more or less equivalent to the general operation (G/O) mode, thereby allowing the machine to maintain its functions.
- In this case, it is designed to allow a constant current to flow from the battery to the TVC valve, so oil pressure sensing is carried out only by the TVC valve.

2. PUMP AND VALVE CONTROL FUNCTION

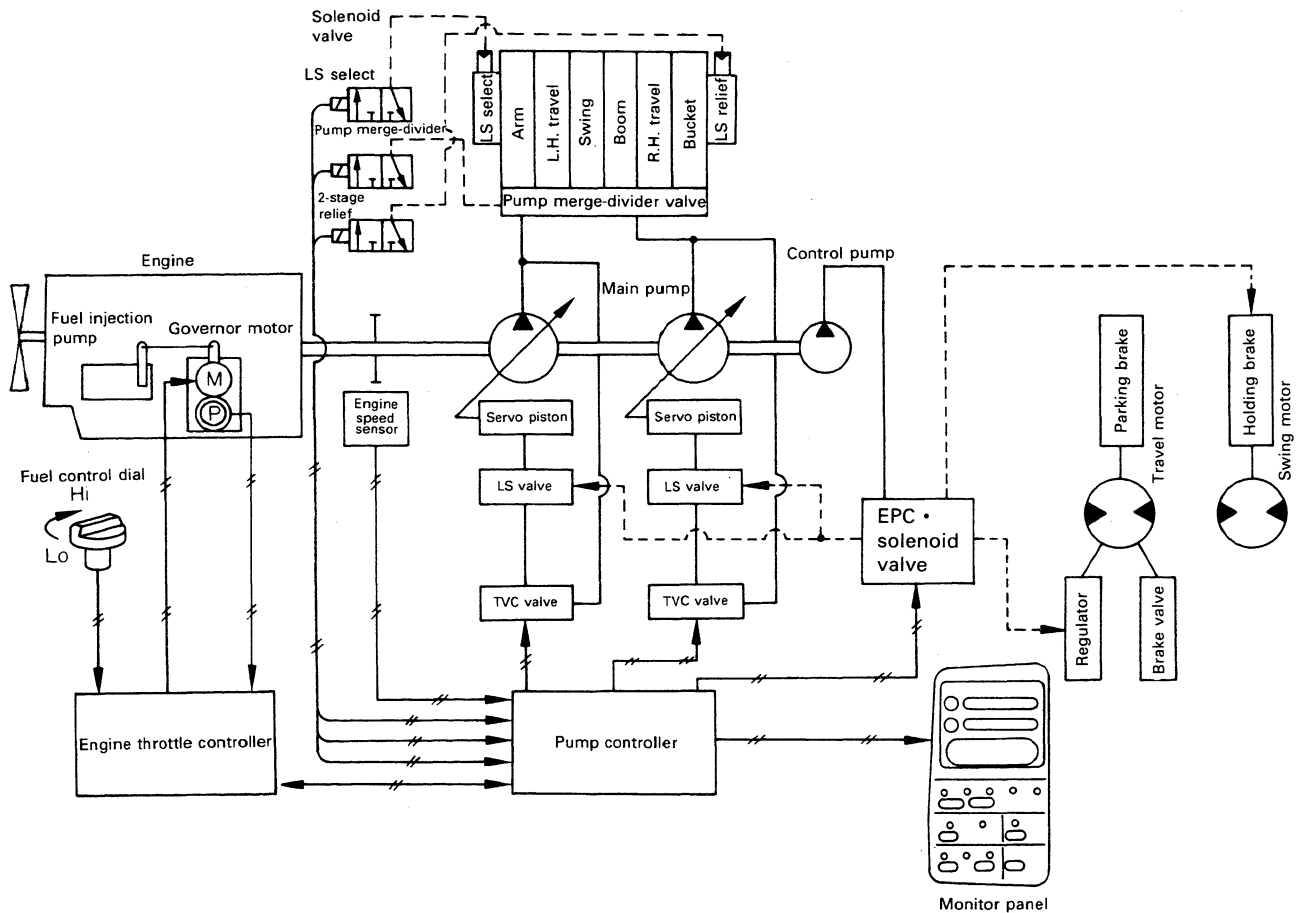

K20506


205F06159

FUNCTION

- The following two functions are available to provide the optimum matching under various working conditions: a 2-stage relief function which increases the digging power, and a fine control mode function which improves the ease of fine control.

1) LS control function

- The switching point (LS set differential pressure) for the pump discharge amount inside the LS valve is changed by changing the output pressure from the LS control EPC valve to the LS valve according to the engine speed and operating condition of the actuator.
- Because of this, the timing for starting the discharge amount from the pump can be optimized, to give excellent ease of compound operation and fine control.

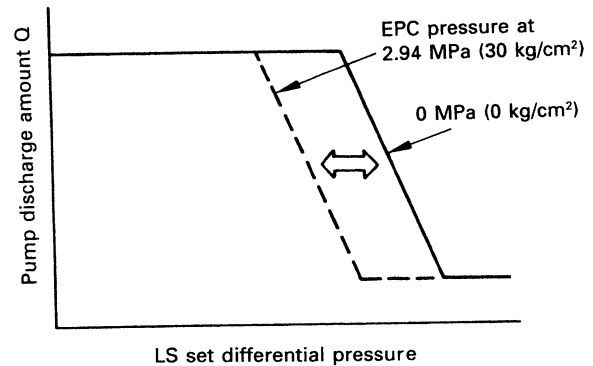

205F06160

2) Cut-off function

For details of the operation, see CLSS.

3) 2-stage relief function

- The relief pressure for normal operation is 31.85 MPa (325 kg/cm²), but when the 2-stage relief function is actuated, the relief pressure rises to approx. 34.79 MPa (355 kg/cm²).

Because of this, the hydraulic pressure is increased by one stage.

- Actuating conditions for 2-stage relief function

Conditions	Relief pressure
- When traveling - When swing lock switch is ON - In lifting operation (L/O) mode - When power max. function or swift slow-down function are actuated	31.85 MPa (325 kg/cm²) ↓ 34.79 MPa (355 kg/cm²)

K20506

STRUCTURE AND FUNCTION**ELECTRONIC CONTROL SYSTEM****4) Fine control mode function**

- When the finishing operation (F/O) mode is selected from the working mode, the pump LS valve is controlled, and the pump discharge amount is reduced to improve the ease of fine control and the precision when finishing.
- Relationship between working mode and pump discharge amount (for independent operation)


(%)

Mode \ Actuator	Boom		Arm		Bucket	Swing	Breaker
	RAISE	LOWER	IN	OUT			
Heavy-duty operation (H/O)	100	40	100	100	50	50	—
General operation (G/O)							
Finishing operation (F/O)	100 <50>	40	50	100	40 (50)	40 (50)	—
Lifting operation (L/O)	50		50	50	35	35	—
Breaket operation (B/O)	100	40	100	100	50	50	60

- ★ The figures in () are for the PC210.
- ★ The figures in < > are for when arm IN is operated.
- ★ In each working mode, the full flow of the pump at the set engine speed is taken as 100%.

K20506

3. POWER MAXIMIZING. SWIFT SLOW-DOWN FUNCTION

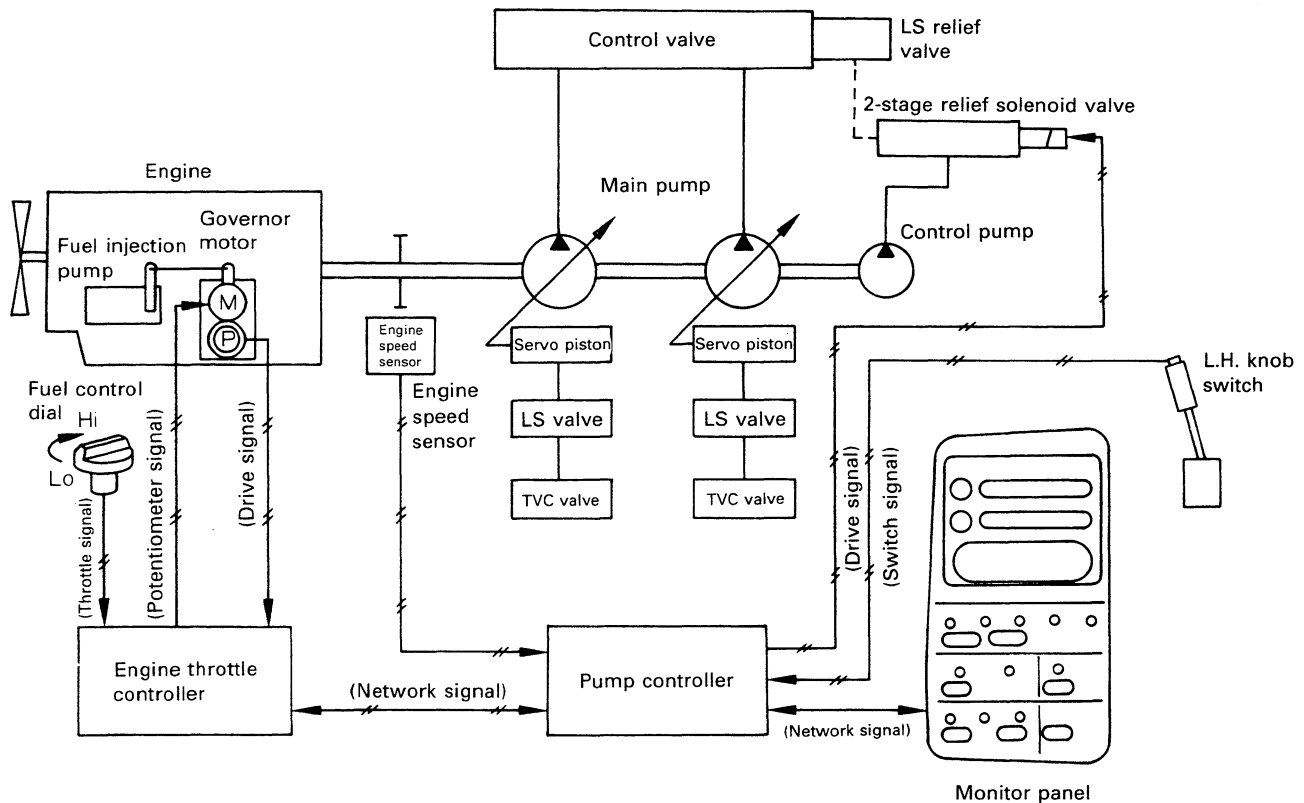

205F06163

FUNCTION

- This function provides an increase in the digging power for a certain time or switches the working mode to the lifting operation (L/O) and reduces the speed. It is operated using the L.H. knob switch to momentarily match the operating conditions.
- ★ The power max. function and swift slow-down function are operated with the same switch. Only one of these functions can be selected at any time; they cannot both be operated together.

1) Power maximizing function

- During digging operations, when that extra bit of digging power is needed (for example, when digging up boulders), the L.H. knob switch can be pressed to raise the hydraulic pressure by approx.10 % and increase the digging force.
- If the L.H. knob switch is pressed ON when the working mode is at H/O or G/O, each function is automatically set as follows.



Working mode	Engine, pump control	2-stage relief function	Actuating time
Heavy-duty operation	Matching at rated output point	Actuated (31.85 → 34.79 MPa) (325 → 355 kg/cm ²)	Automatically canceled after 8.5 sec.

2) Swift slow-down function


- During normal operations, if it is desired to carry out lifting operations or finishing operations for a moment, the working mode can be switched to lifting operation (L/O) mode by operating the L.H. knob switch.
- If the L.H. knob switch is pressed ON when the working mode is at H/O or G/O, each function is automatically set as follows.



Working mode	Actuating time
Lifting operation	While switch is kept pressed.

4. AUTO-DECELERATION FUNCTION

K20506

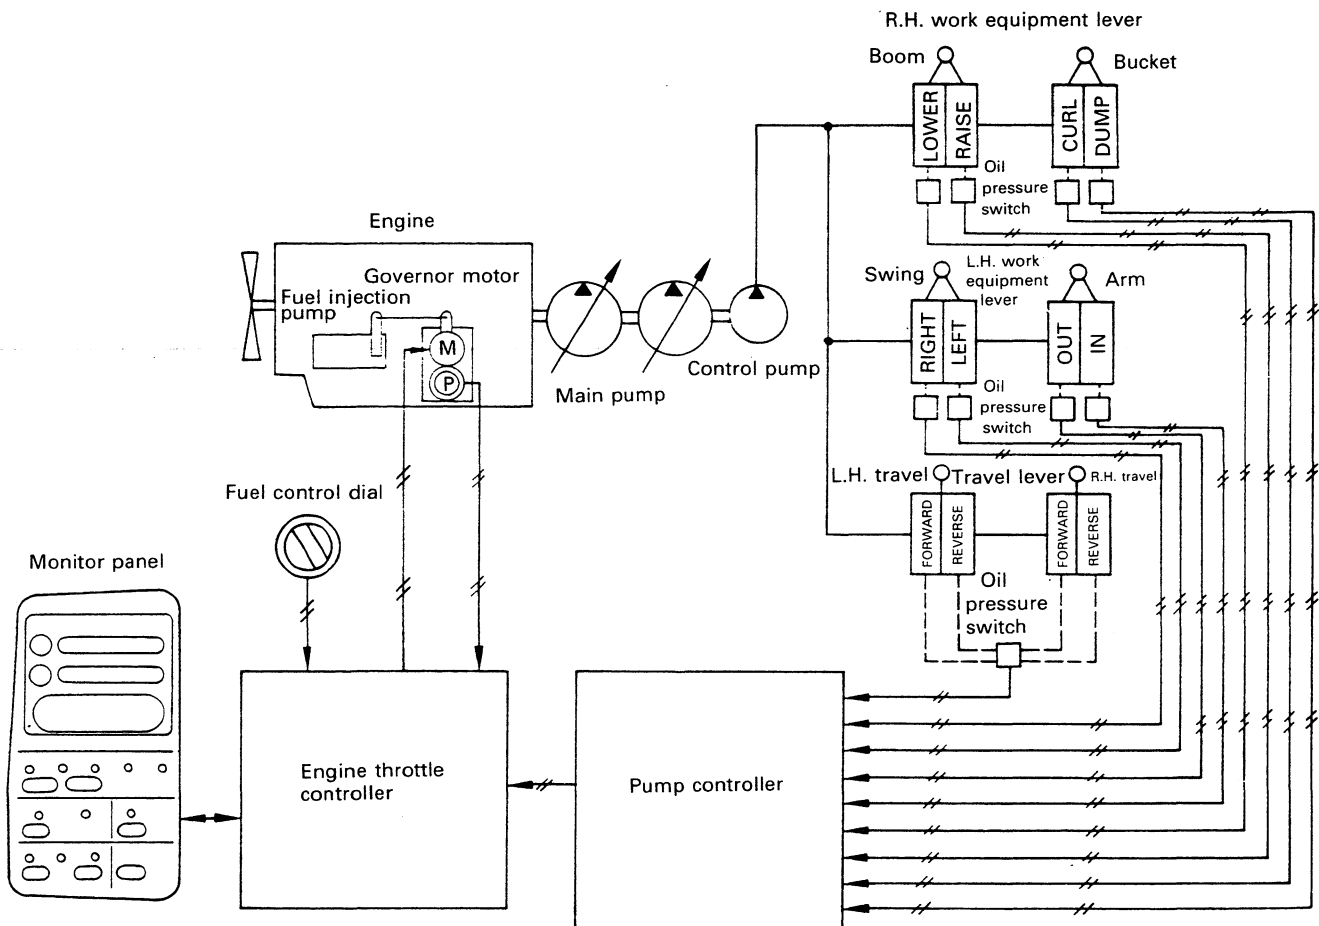

205F06164

FUNCTION


- If all the control levers are at neutral when waiting for work or waiting for a dump truck, the engine speed is automatically reduced to a midrange speed to reduce fuel consumption and noise.
- If any lever is operated, the engine speed returns immediately to the set speed.

OPERATION**Control levers at neutral**

- If the engine is running at above the deceleration actuation speed (approx. 1400 rpm), and all the control levers are returned to neutral, the engine speed drops immediately to approx. 100 rpm below the set speed to the No. 1 deceleration position.
- If another 4 seconds passes, the engine speed is reduced to the No. 2 deceleration position (approx. 1400 rpm), and is kept at that speed until a lever is operated.

When control lever is operated


- If any control lever is operated when the engine speed is at No. 2 deceleration, the engine speed will immediately rise to the speed set by the fuel control dial.

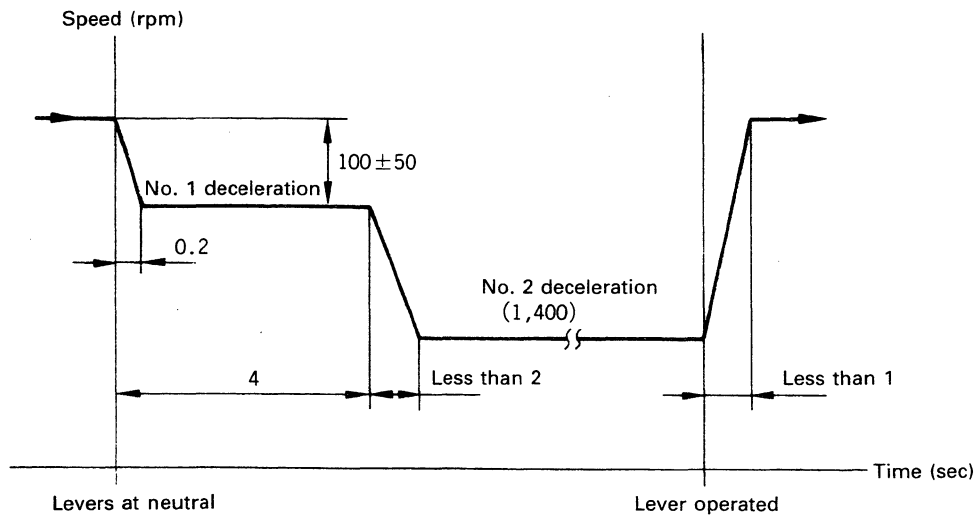

205F06165

K20506

5. AUTOMATIC WARMING-UP AND ENGINE OVERHEAT PREVENTION FUNCTION

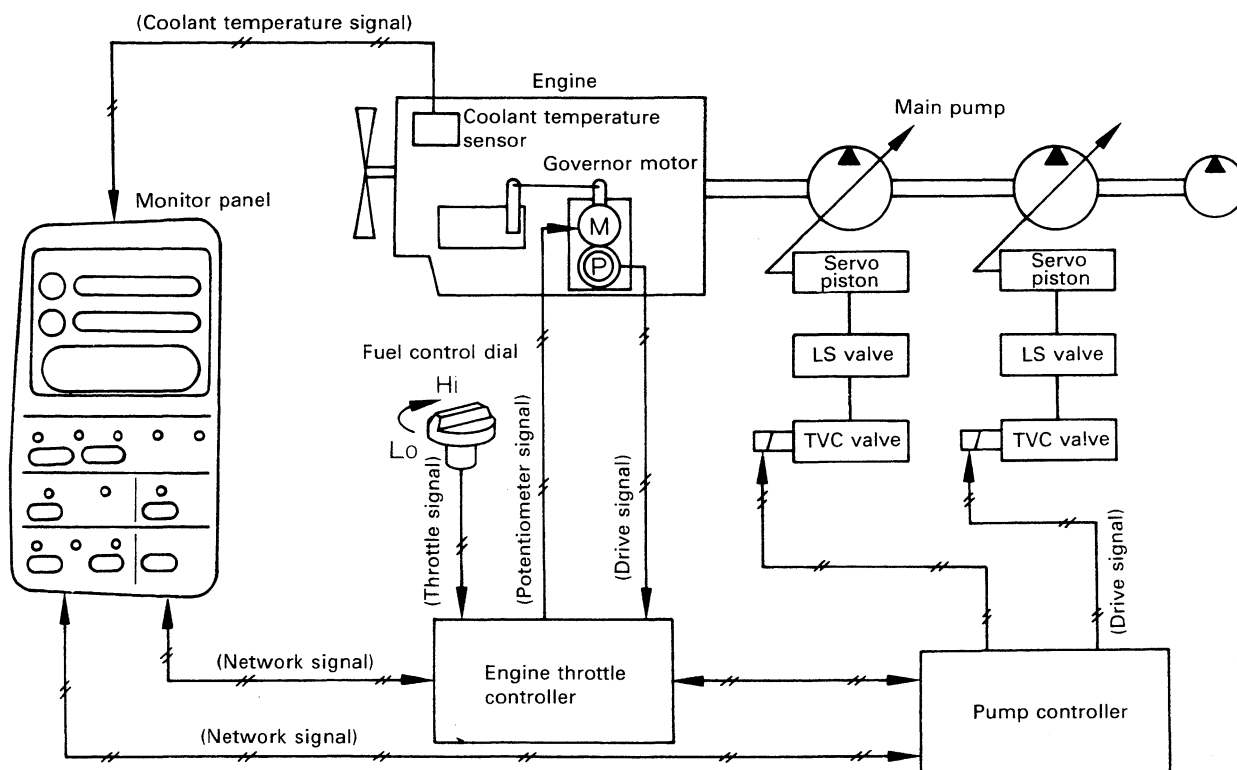

K20506


205F06166

FUNCTION

- If the coolant temperature is low, this automatically raises the engine speed to warm up the engine after it is started. (Automatic warming-up function)
- In addition, if the coolant temperature rises too high during operations, it reduces the load of the pump to prevent overheating. (Engine overheat prevention function)

STRUCTURE AND FUNCTION**ELECTRONIC CONTROL SYSTEM****1) Engine automatic warming-up function**

- After the engine is started, if the engine coolant temperature is low, the engine speed is automatically raised to warm up the engine.

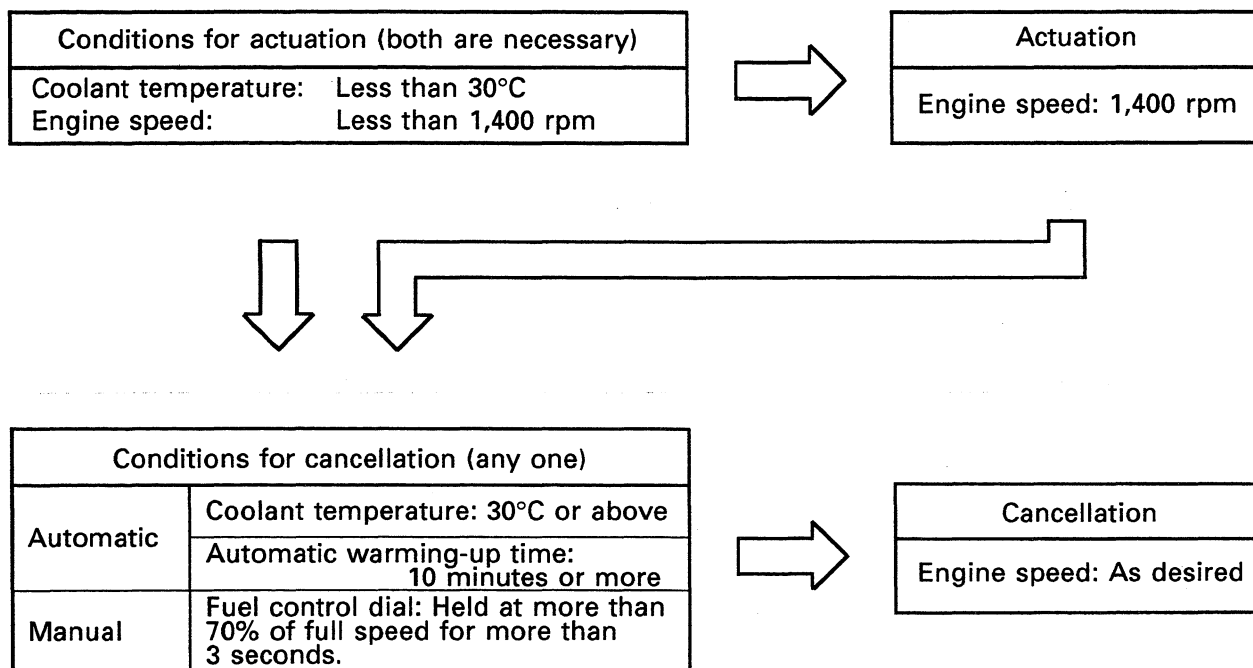


K20506

2) Engine overheat prevention function

- This function protects the engine by lowering the pump load and engine speed to prevent overheating when the engine coolant temperature has risen too far.
- This system is actuated in two stages. The first stage is when the water temperature is between 102°C and 105°C, and the second stage is when the water temperature is 105°C and above.

Normal operation (coolant temperature below 102°C)

Normal operation	Coolant temperature: Below 102°C (Coolant temperature gauge: Green range)
------------------	--

 

1st stage (Coolant temperature between 102°C and 105°C)


Actuation condition	
1st stage	Coolant temperature: Below 102°C and 105°C (Coolant temperature gauge: Red range)



Actuation, remedy		
Working mode	PC210	PC240
Heavy-duty, general, finishing, breaker	Mode kept as it is, output reduced	
Lifting	Lifting operation kept as it is	



Cancel condition
Coolant temperature: Below 102°C
• When the above condition is met, the system returns to the condition before the overheat prevention function was actuated (automatic reset).

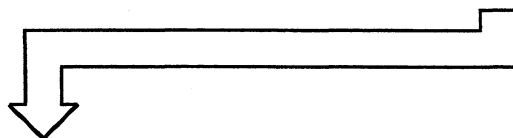

2nd stage (Coolant temperature 105°C and above)

Actuation condition	
2nd stage	Coolant temperature: 105°C and above (Coolant temperature gauge: Red range)



Actuation, remedy	
Working mode	In any mode
Engine speed	Low idling
Monitor caution lamp	Lights up
Caution buzzer	Sounds



Cancel condition
Coolant temperature: Below 102°C
Fuel control dial: Return temporarily to low idling position
• When the above conditions are met, the system returns to the condition before the overheat prevention function was actuated (manual reset).

K20506

6. SWING PRIORITY FUNCTION

- There is a SWING ACCEL switch on the monitor panel for the boom/swing priority selection mode. This switch can be turned ON or OFF to change the matching of the boom RAISE and swing operations.


The oil flow is divided and sent to the swing to match the swing angle to allow compound operations to be carried out easily.

Boom/swing priority selection mode OFF:


90° swing and loading of dump truck

Boom/swing priority selection mode ON:

180° swing and loading of dump truck

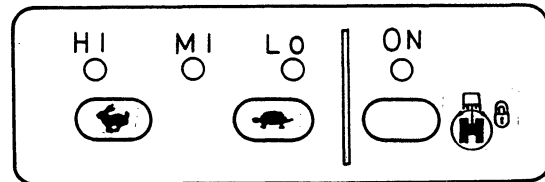


205F06167

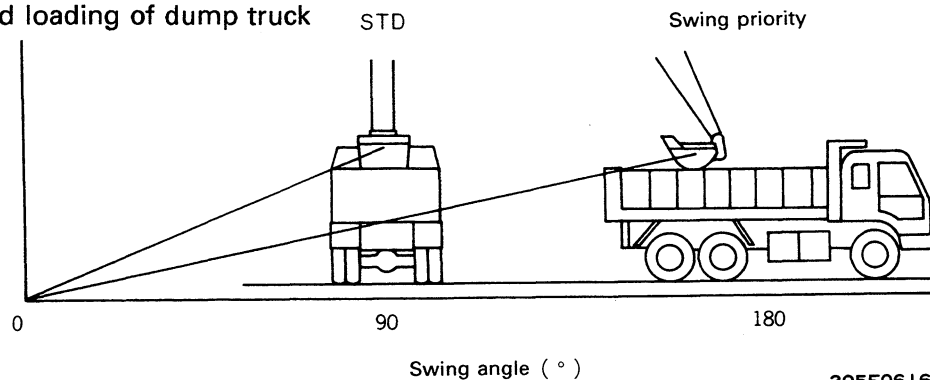

205F06168

- The change in the matching between the boom RAISE and swing is carried out by changing the signal to the pump merge-divider valve.


When boom/swing priority selection mode is OFF

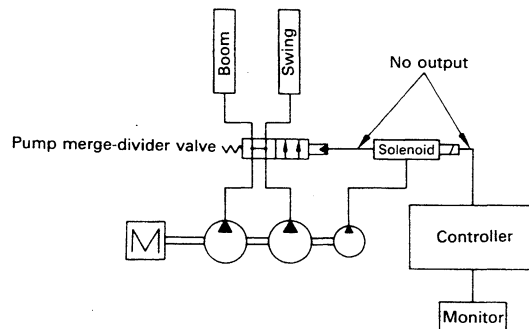

Boom RAISE and swing are parallel

205F06169


When boom/swing priority selection mode is ON

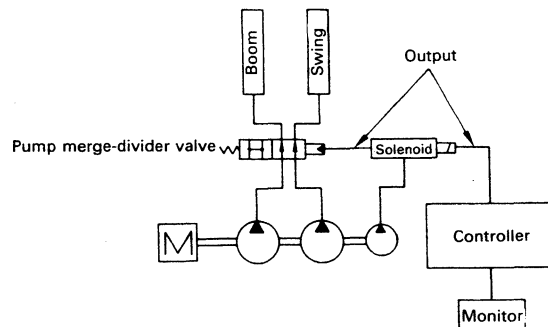

205F06170

The boom RAISE and swing use separate pumps, so swing is independent

7. SWING CONTROL FUNCTION

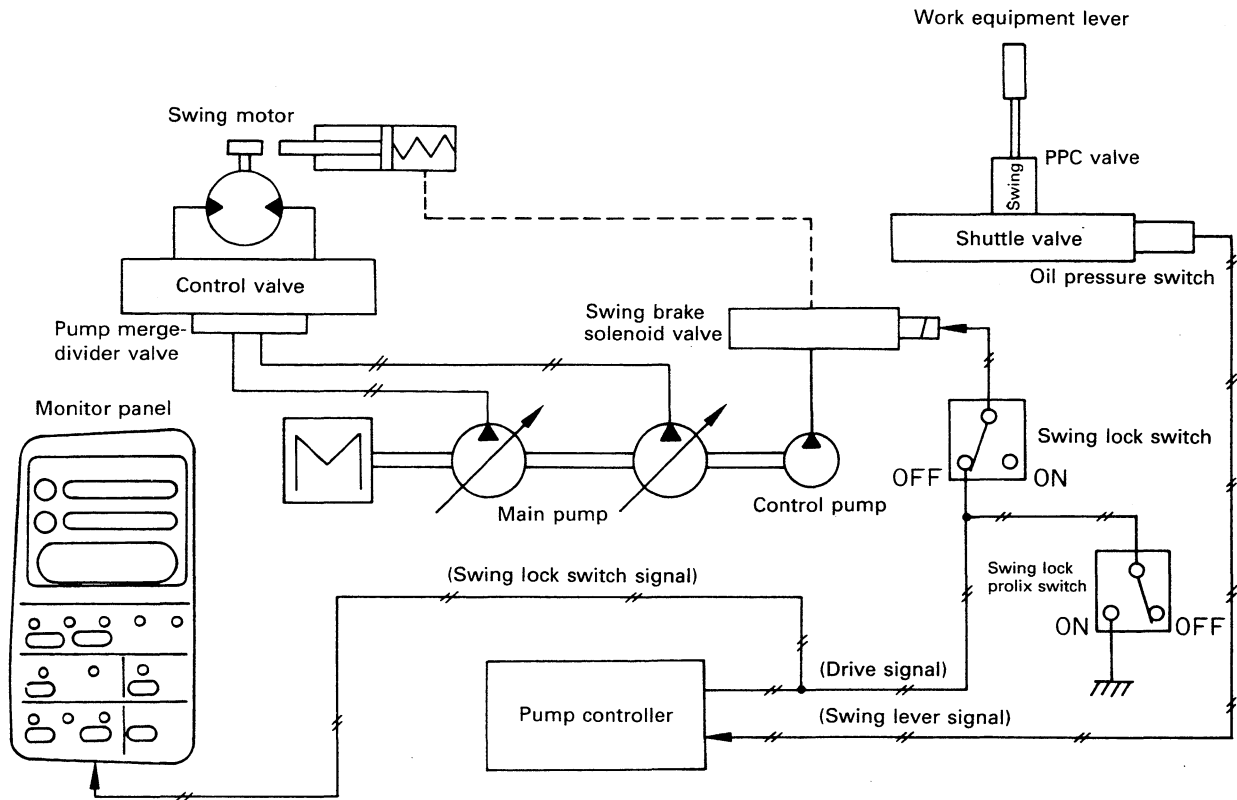

205F06171

FUNCTION

- The system is provided with a swing lock and swing holding brake function.

STRUCTURE AND FUNCTION**ELECTRONIC CONTROL SYSTEM****1) Swing lock, swing holding brake function**

- The swing lock (manual) can be locked at any desired position, and the swing holding brake (automatic) is interconnected with the swing, so it prevents any hydraulic drift after the swing is stopped.

Lock switch	Lock lamp	Function	Operation
OFF	OFF	Swing holding brake	When swing lever is placed at neutral, swing brake is applied after approx. 4 sec; when swing lever is operated, brake is canceled and swing can be operated freely
ON	ON	Swing lock	Swing lock is actuated and swing is held in position. Even when swing lever is operated, swing lock is not canceled and swing does not move.


※ **Operation of swing lock prolix switch**

- If any abnormality should occur in the controller, and the swing holding brake is not actuated normally and the swing cannot be operated, the swing lock prolix switch can be operated to cancel the swing lock and allow the swing to be operated.
- ★ Even when the swing lock prolix switch is turned ON, the swing lock switch stays ON and the swing brake is not canceled.
- ★ When the swing brake is canceled, the swing has only a hydraulic brake operated by the safety valve, so if the swing is stopped on a slope, there may be hydraulic drift.

Swing lock prolix switch	ON (when controller is abnormal)		OFF (when controller is normal)	
Swing lock switch	ON	OFF	ON	OFF
Swing brake	Swing lock applied	Swing lock canceled	Swing lock applied	Swing holding brake applied

2) Hydraulic oil quick warm-up function when swing lock switch is ON


- When the swing lock switch is turned ON, the relief pressure rises from 31.85 MPa (325 kg/cm²) to 34.79 MPa (355 kg/cm²). If the work equipment is relieved in this condition, the hydraulic oil temperature will rise more quickly and the warming-up time can be reduced.

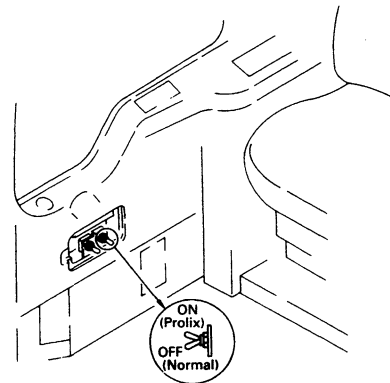

205F06172

K20506

8. TRAVEL CONTROL FUNCTION

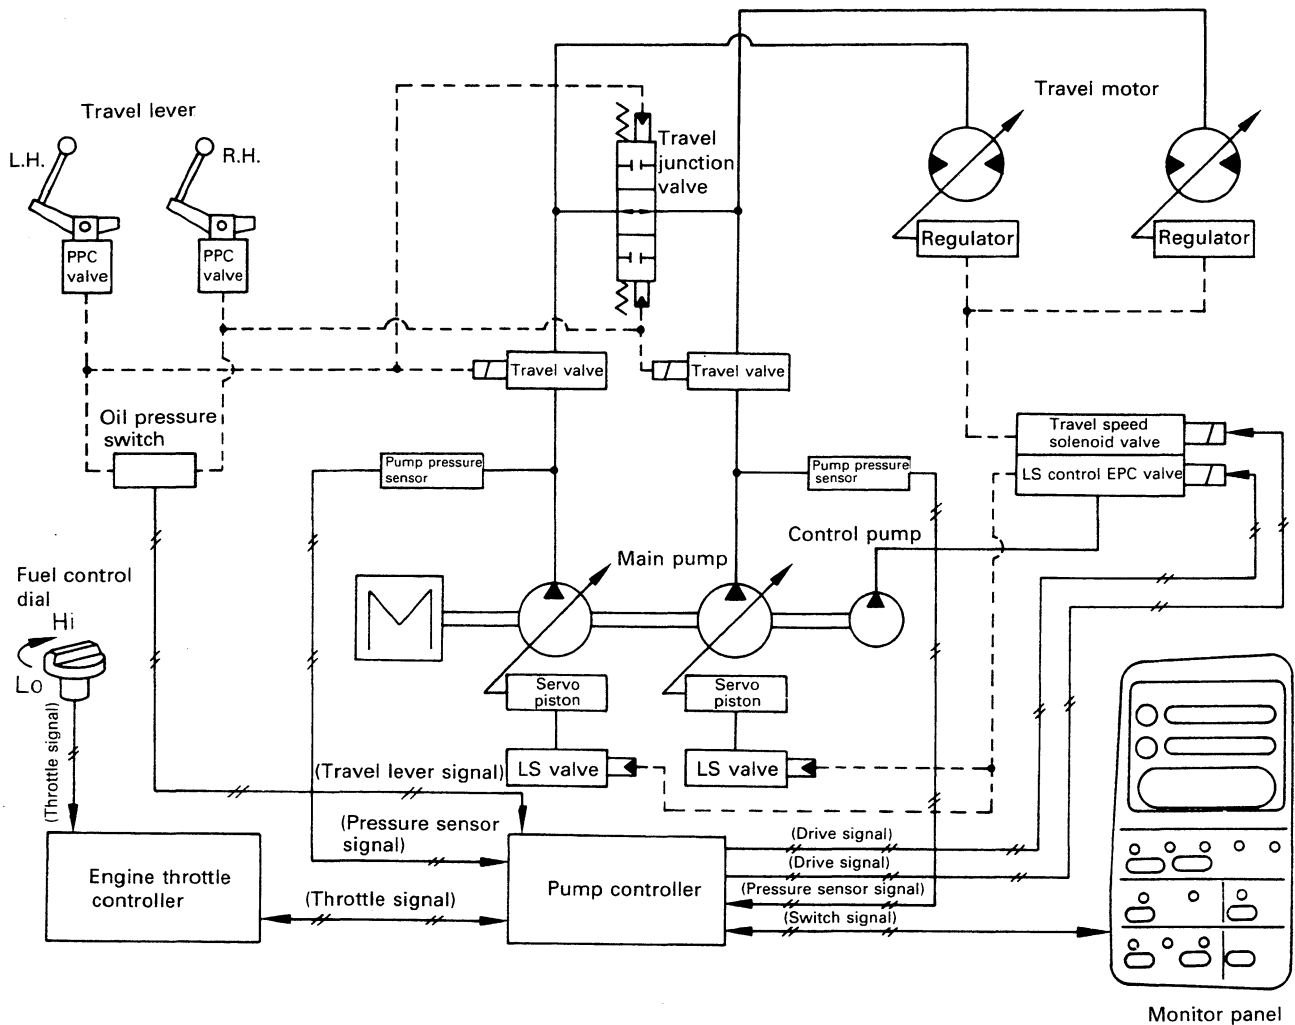

205F06 I 73

FUNCTION

- When traveling, the pump control is carried out, and the travel speed can be selected manually or automatically to give a travel performance that suits the nature of the work of the jobsite.

1) Pump control function when traveling

- If the travel is operated in any working mode other than the heavy-duty operation (H/O) mode, this increases the pump absorption torque while keeping the working mode and engine speed as they are.
- ★ For details, see PUMP & ENGINE MUTUAL CONTROL SYSTEM.

2) Travel speed selection function

- i) **Manual selection using travel speed switch**
If the travel speed switch is set to Lo, Mi, or Hi, the pump controller controls the pump flow and motor volume at each speed range as follows to switch the travel speed.

- ii) **Automatic selection according to engine speed**

If the engine speed is reduced to below 1400 rpm by the fuel control dial:


- If the machine is traveling in Lo, it will not shift even if Mi or Hi are selected.
- If the machine is traveling in Mi, it will not shift even if Hi is selected.
- If the machine is traveling in Hi, it will automatically shift to Mi.

- iii) **Automatic selection according to pump discharge pressure**

If the machine is traveling with the travel speed switch at Hi, and the load increases, such as when traveling up a steep hill, if the travel pressure continues at 33.32 MPa (340 kg/cm²) for more than 0.5 sec. the motor volume is automatically switched and the travel speed changes to Mi. (The travel speed switch stays at Hi.)

The machine continues to travel in Mi, and when the load is reduced, such as when the machine travels again on flat ground or goes downhill, and the travel pressure stays at 17.64 MPa (180 kg/cm²) or less for more than 0.5 sec, the motor volume is automatically switched and the travel speed returns to Hi.

Travel speed switch	Lo (Low speed)		Mi (Mid-range speed)		Hi (High speed)	
Pump flow (%)	80		80		100	
Motor volume	Max.		Min.		Min.	
Travel speed (km/h)	PC210	PC240	PC210	PC240	PC210	PC240
	3.2	3.4	4.5	4.5	5.6	5.5


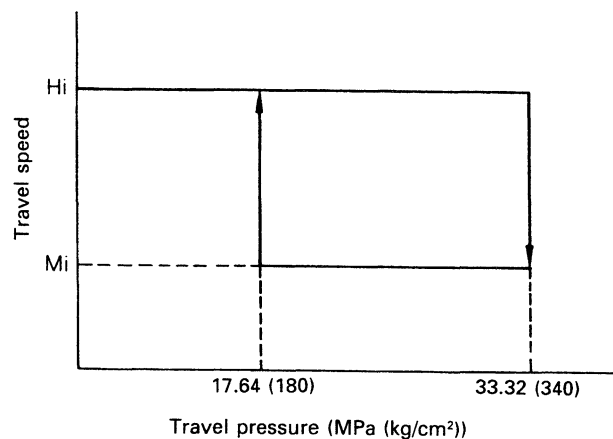


205F06286

K20506

9. COMPONENTS OF SYSTEM

1) ENGINE SPEED SENSOR

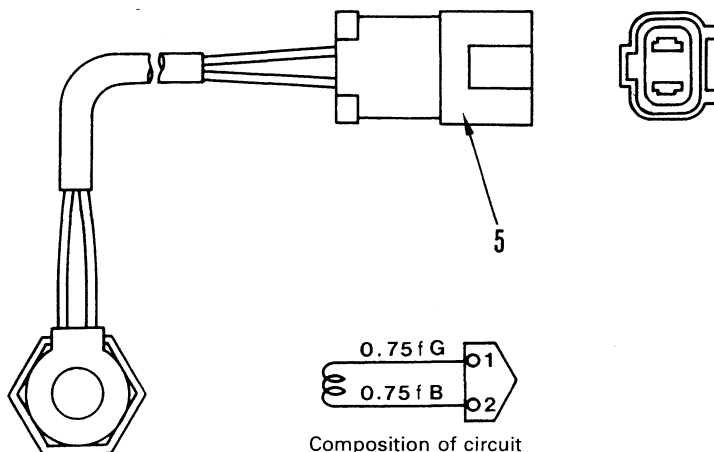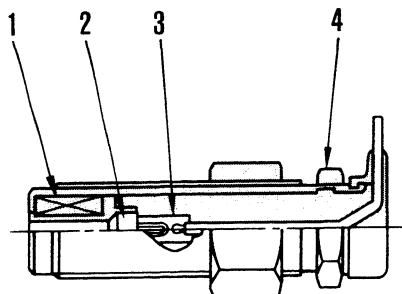


205F06174

1. Wire
2. Magnet
3. Terminal
4. Housing
5. Connector

FUNCTION

- The engine speed sensor is installed to the ring gear portion of the engine flywheel. It counts electrically the number of gear teeth that pass in front of the sensor, and sends the results to the pump controller.
- This detection is carried out by a magnet, and an electric current is generated every time the gear tooth passes in front of the magnet.

2) PPC OIL PRESSURE SWITCH

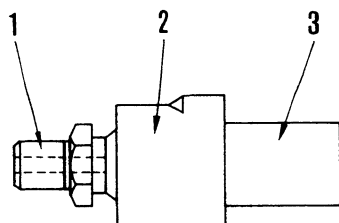



1. Plug
2. Switch
3. Connector

SPECIFICATIONS

Composition of points: N.O. points
 Actuation (ON) pressure: 0.49 ± 0.1 MPa
 (5.0 ± 1.0 kg/cm²)
 Reset (OFF) pressure: 0.29 ± 0.05 MPa
 (3.0 ± 0.5 kg/cm²)

FUNCTION

 

- There are 8 switches installed to the PPC shuttle valve. The operating condition of each actuator is detected from the PPC pressure, and this is sent to the pump controller.

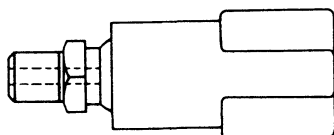

205F06175

K20506

3) PUMP PRESSURE SENSOR

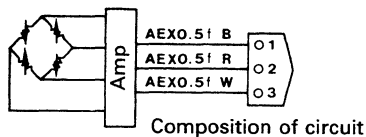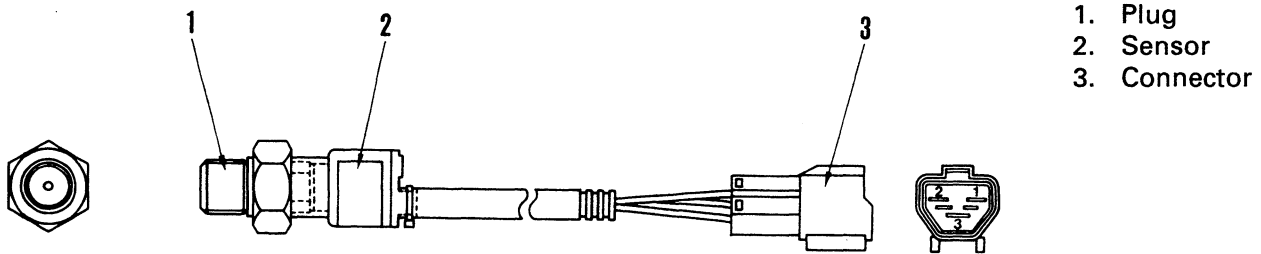

205F06176

FUNCTION


- This sensor is installed to the inlet port circuit of the control valve. It converts the pump discharge pressure to a voltage and sends this to the controller.

OPERATION


- When the pressurized oil entering from the pressure introduction portion pressurizes the diaphragm of the pressure detection portion, the diaphragm deflects and changes shape.
- A gauge layer is installed to the face opposite the diaphragm, and the resistance of the gauge layer converts the deflection of the diaphragm into an output voltage and sends it to the amp (voltage amplifier).
- The voltage is further amplified by the amplifier and is sent to the pump controller.
- Relationship between P (kg/cm²) and output voltage (V)

$$V = 0.008 \times P + 1.0$$

$$\star 1 \text{ kg/cm}^2 = 0.098 \text{ MPa}$$

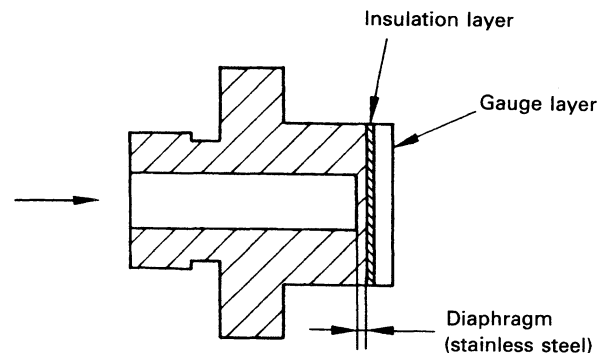




205F06177

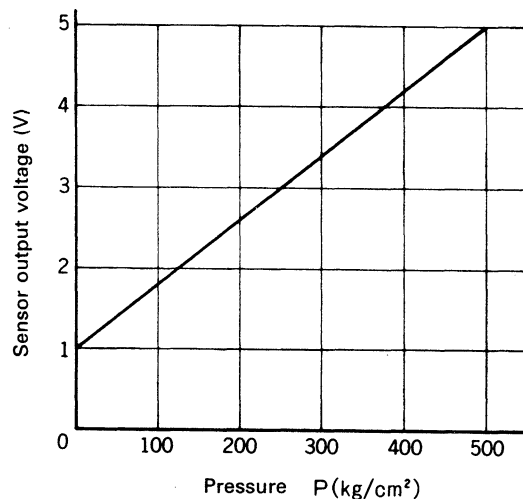

205F05161

K20506

 4) PUMP CONTROLLER

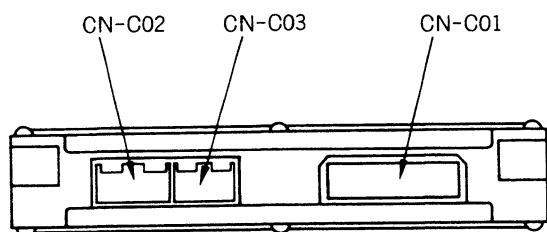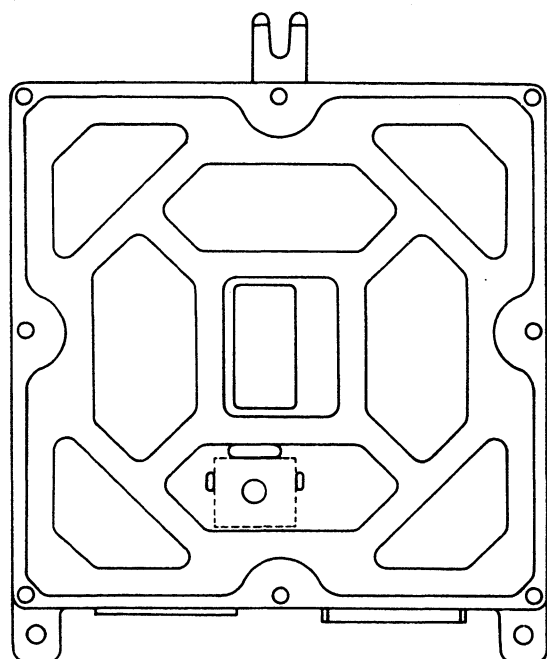

K20506

205F06178

Input and output signals

CN-C01

No.	Name of signal	Input/Output
1	GND	—
2	GND	—
3	LS select solenoid	Output
4	Pump merge-divider solenoid	Output
5	—	—
6	Travel speed solenoid	Output
7	LC control EPC (-)	Output
8	TVC1 (-)	Output
9	TVC2 (-)	Output
10	Controller power source 24V	—
11	Controller power source 24V	—
12	LS bypass solenoid	Output
13	Swing brake solenoid	Output
14	2-stage relief solenoid	Output
15	LS control EPC (+)	Output
16	TVC1 (+)	Output
17	TVC2 (+)	Output


CN-C02

No.	Name of signal	Input/Output
1	Swing switch	Input
2	Boom LOWER switch	Input
3	Travel switch	Input
4	Boom RAISE switch	Input
5	Arm IN switch	Input
6	Arm OUT switch	Input
7	Bucket CURL switch	Input
8	Bucket DUMP switch	Input
9	Swing lock switch	Input
10	Service switch	Input
11	Model selection 5	Input
12	Swing lock prolix switch	Input
13	Model selection 1	Input
14	Model selection 2	Input
15	Model selection 3	Input
16	Model selection 4	Input
17	—	—
18	L.H. knob switch	Input
19	—	—
20	—	—

CN-C03

No.	Name of signal	Input/Output
21	Pressure sensor 1 (SIG)	Input
22	Pressure sensor 2 (SIG)	Input
23	Pressure sensor power 24V	—
24	—	—
25	Auto deceleration	Output
26	Speed sensor (+)	Input
27	Network circuit (monitor +)	—
28	Monitor circuit (engine +)	—
29	Pressure sensor 1 (GND)	—
30	Pressure sensor 2 (GND)	—
31	—	—
32	—	—
33	—	—
34	Speed sensor (-)	Input
35	Network circuit (-)	—
36	—	—

5) TVC PROLIX RESISTOR

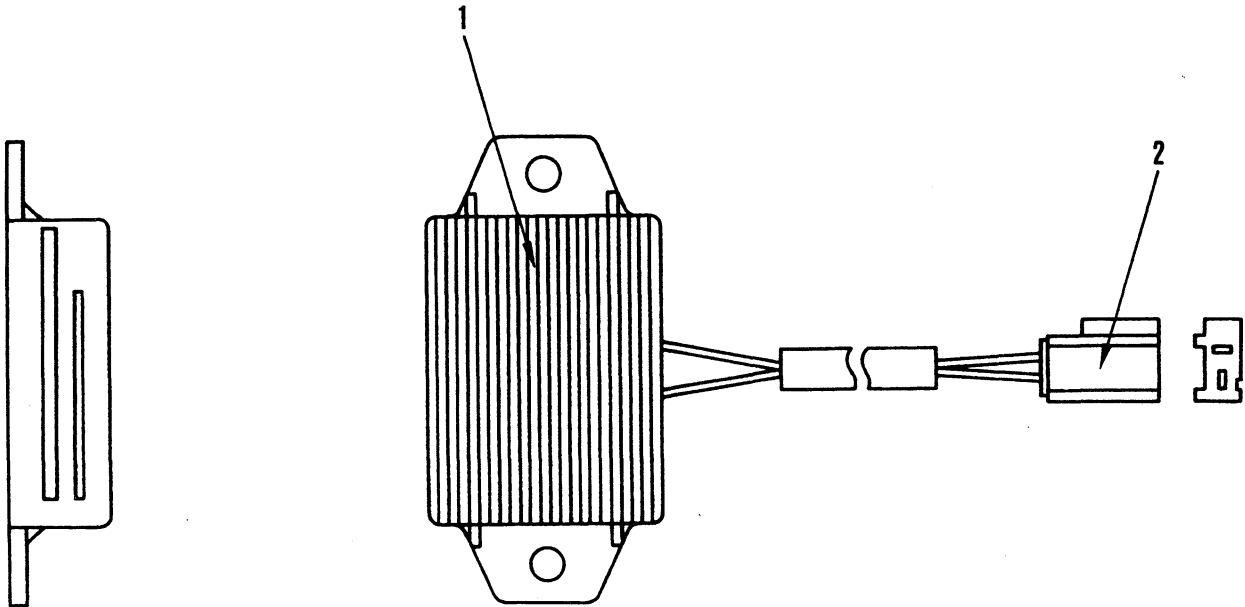

205F06179

K20506

1. Resistor
2. Connector

SPECIFICATION

Resistance; 30Ω

FUNCTION

- This resistor acts to allow a suitable current to flow to the TVC solenoid when the TVC prolux switch is ON.
- No current flows when the TVC prolux switch is OFF.

6) FUEL CONTROL DIAL, GOVERNOR MOTOR, ENGINE THROTTLE CONTROLLER

- ★ See ENGINE CONTROL SYSTEM.

7) MONITOR PANEL

- ★ See MONITORING SYSTEM.

8) TVC VALVE

- ★ See HYDRAULIC PUMP.


9) LS CONTROL EPC VALVE

LS SELECT SOLENOID VALVE
PUMP MERGE-DIVIDER SOLENOID VALVE
2-STAGE RELIEF SOLENOID VALVE
TRAVEL SPEED SOLENOID VALVE
SWING BRAKE SOLENOID VALVE

- ★ See EPC. SOLENOID VALVE.

MACHINE MONITOR SYSTEM

Monitor panel

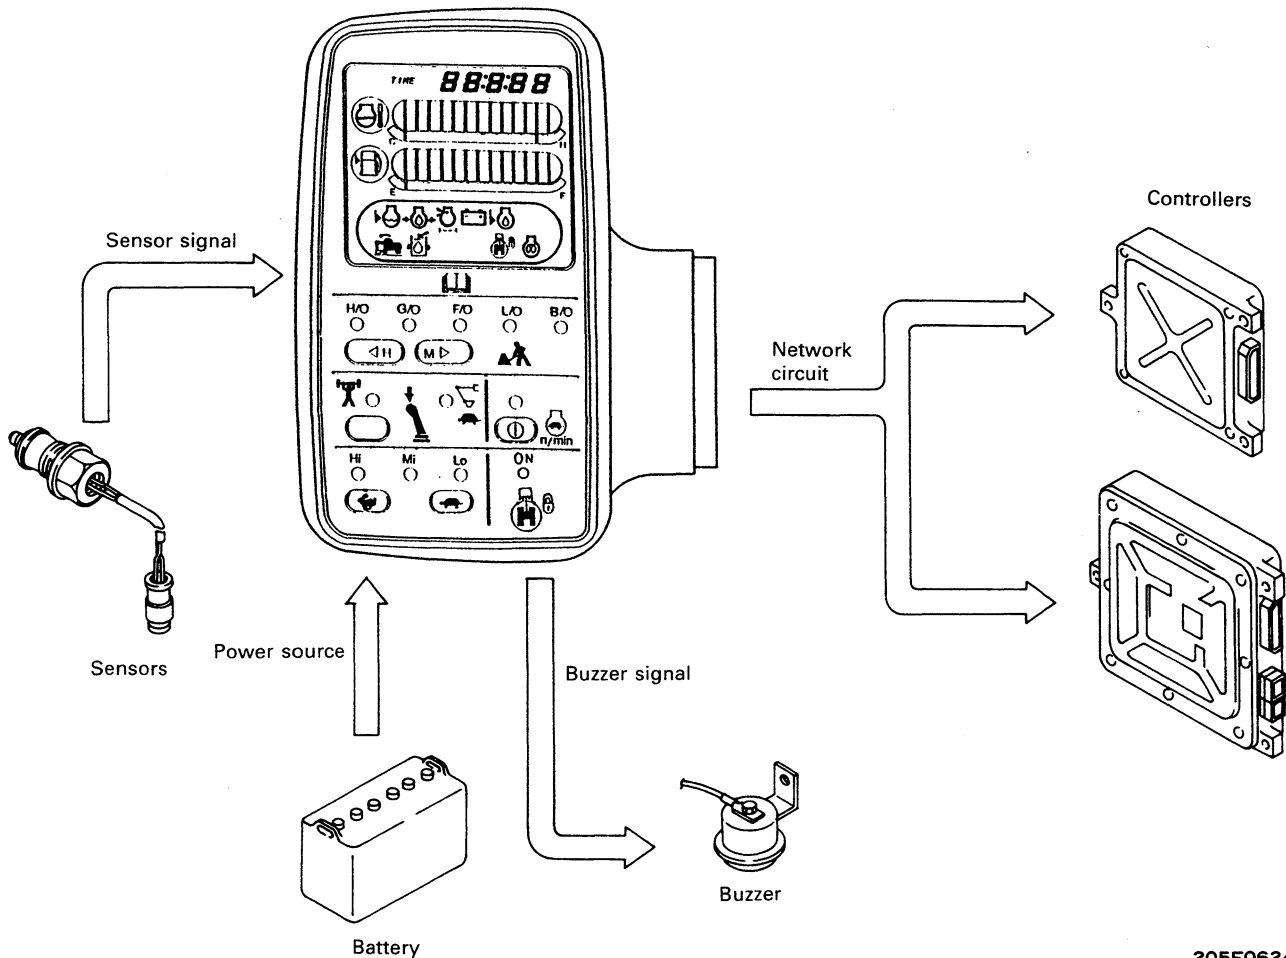

205F06249

FUNCTION


- The machine monitor system uses the network circuits between the controllers and sensors installed to all parts of the machine to observe the condition of the machine. It processes this information, and displays it on a panel to inform the operator of the condition of the machine.
- The content of the information displayed on the machine can broadly be divided as follows.
 1. Monitor portion

This gives an alarm if any abnormality occurs in the machine.
 2. Gauge portion

This always displays the coolant temperature and fuel level.
 3. Time display
 - 1) This normally displays the time.
 - 2) If this is set to the machine data monitoring mode, internal data from each controller, including the monitor panel itself, are displayed.
 - 3) If it is set to the trouble data memory mode, the trouble data for each controller, including the monitor panel itself, are displayed.
 - 4) It displays that the system has been set to the governor motor adjustment mode and automatic vibration offset adjustment mode.
 - 5) In emergencies, it displays abnormalities in any controller.
 - ★ For details of the content of the display and the method of operation, see TROUBLESHOOTING.
- The monitor panel has various built-in mode selector switches, and also functions as the control panel for the electronic control system.

1. MONITOR PANEL

PC210, 210LC-6K
PC240,240LC, 240NLC-6K

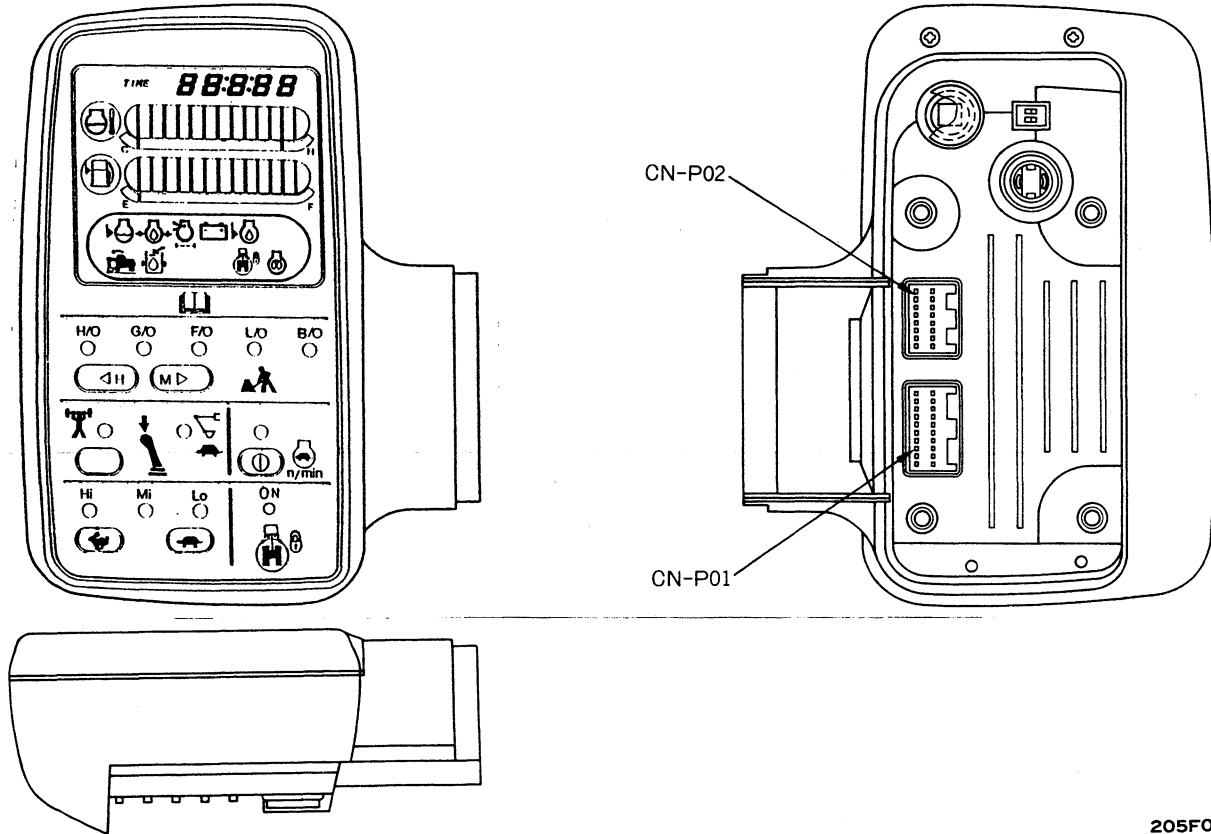

OUTLINE

- The monitor panel consists of the time display, monitor display, and mode selector switches.
- It has a built-in CPU (Central Processing Unit), and processes, displays, and outputs the data from the sensors and controllers.
- The time display and monitor display panels use a liquid crystal display (LCD). The mode switches are flat sheet switches.

Input and output signals

CN-P01

Pin No.	Name of signal	Input/Output
1	Monitor power source	—
2	Monitor power source	—
3	Hydraulic oil level	Input
4	Model selection 5	Input
5	Air cleaner clogging	Input
6	Starting switch ON	Input
7	Lamp	Input
8	Preheating	Input
9	Start signal	Input
10	Coolant level	Input
11	GND	—
12	GND	—
13	Buzzer	Output
14	EPC relay	Input
15	Model selection 4	Input
16	Engine oil pressure Hi	Input
17	Engine oil pressure Lo	Input
18	Engine oil level	Input
19	—	—
20	—	—

CN-P02

Pin No.	Name of signal	Input/Output
1	PPC oil pressure	Input
2	Overload	Input
3	Swing prolix	Input
4	Model selection 1	Input
5	Model selection 2	Input
6	Model selection 3	Input
7	Network (pump +)	Input
8	Network (engine +)	Input
9	Swing lock	Input
10	Buzzer cancel	Input
11	Fuel level	Input
12	Coolant temperature	Input
13	Charge level	Input
14	Engine speed (-)	Input
15	Engine speed (+)	Input
16	Network (-)	—


205F06250

K20506

STRUCTURE AND FUNCTION

MACHINE MONITOR SYSTEM

MONITOR DISPLAY

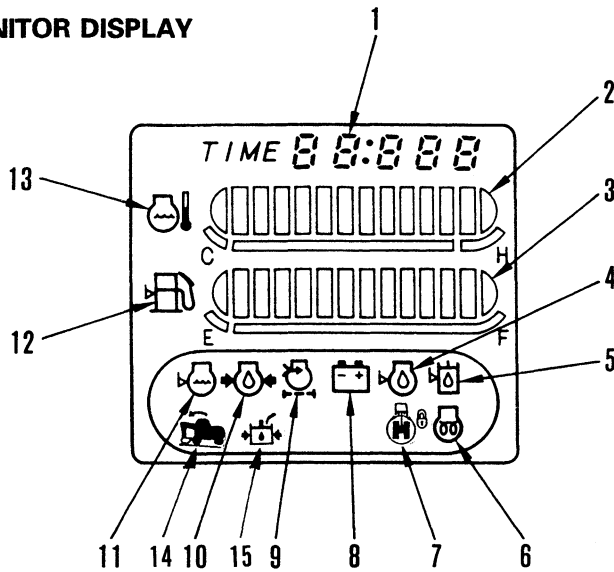

1. Clock
2. Coolant temperature gauge
3. Fuel level gauge
4. Engine oil level caution lamp
5. Hydraulic oil level caution lamp
6. Preheating pilot lamp
7. Swing holding brake pilot lamp
8. Battery charge caution lamp
9. Air cleaner clogging caution lamp
10. Engine oil pressure caution lamp
11. Coolant level caution lamp
12. Fuel level caution lamp
13. Coolant temperature caution lamp
14. Overload caution (when lifting)
15. Low PPC pressure

Content of display


205F0625 I

Symbol	Display item	Display range	When engine is stopped	When engine is running
	Coolant level	Below low level	Flashes when abnormal	Flashes and buzzer sounds when abnormal
	Engine oil pressure	Below 1,500 rpm: below 0.05 MPa (0.5 kg/cm ²) Above 1,500 rpm: below 0.15 MPa (1.5 kg/cm ²)	Lights up when normal (goes out when engine starts)	Flashes and buzzer sounds when abnormal
	Air cleaner clogging	When clogged	OFF	Flashes when abnormal
	Charge level	When charging is defective	Lights up when normal (goes out when engine starts)	Flashes when abnormal
	Engine oil level	Below low level	Flashes when abnormal	OFF
	Hydraulic oil level	Below low level	Flashes when abnormal	OFF
	Swing lock	When swing is locked	Lights up when swing lock switch is ON, flashes when swing lock prolix switch is ON	
	Preheating	During preheating	Lights up for 30 seconds when starting switch is at HEAT, then flashes for 10 seconds to indicate that preheating is completed	

K20506


STRUCTURE AND FUNCTION

 MACHINE MONITOR SYSTEM

Symbol	Display item	Display range	When engine is stopped	When engine is running
	Coolant temperature	Flashes when above 102°C, flashes and buzzer sounds when above 105°C		
	Fuel level	Flashes when below low level		
	Overload caution	When machine is close to tipping or near hydraulic unit		
	Low PPC pressure	When pilot control pressure is low		

- ★ When the starting switch is turned ON, the buzzer sounds for 1 second, all the monitor display lamps light up for 3 seconds, and after this, all lamps except "Engine oil pressure" and "Charge level" go out.
The "Engine oil pressure" and "Charge level" go out when the engine is started.

SWITCHES

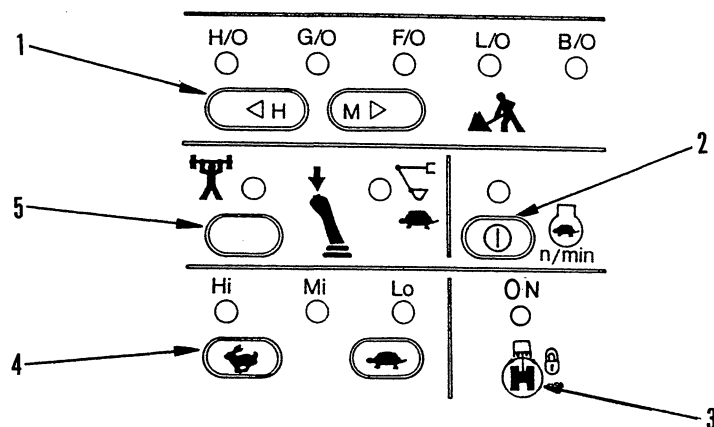

1. Working mode switch
2. Auto-deceleration switch
3. Boom/swing priority mode switch
4. Travel speed switch
5. Power max./Swift slow-down switch

205F06252

- The switch portion consists of five mode selection switches, and the condition of the machine changes each time that any switch is pressed. The LED above the switch lights up to display the present condition of the machine.

Switch actuation table

Symbol	Item	Action
	WORKING MODE	H/O ↔ G/O ↔ F/O ↔ L/O ↔ B/O
	KNOB BUTTON	POWER UP ↔ SPEED DOWN
	AUTO DECEL	ON ↔ OFF
	TRAVEL SPEED	Hi ↔ Mi ↔ Lo
	SWING ACCEL	OFF ↔ ON


- ★ The bold letters indicate the default position of the switch when the starting switch is turned ON.

2. SENSORS

- The signals from the sensors are input directly to the monitor panel.
- The contact type sensors are always connected at one end to the chassis GND.


Name of sensor	Type of sensor	When normal	When abnormal
Coolant level	Contact type	ON (close)	OFF (open)
Engine oil level	Contact type	ON (close)	OFF (open)
Hydraulic oil level	Contact type	ON (close)	OFF (open)
Engine oil pressure	Contact type	OFF (open)	ON (close)
Coolant temperature	Resistance type	—	—
Fuel level	Resistance type	—	—
Air cleaner clogging	Contact type	ON (close)	OFF (open)

1) COOLANT LEVEL SENSOR

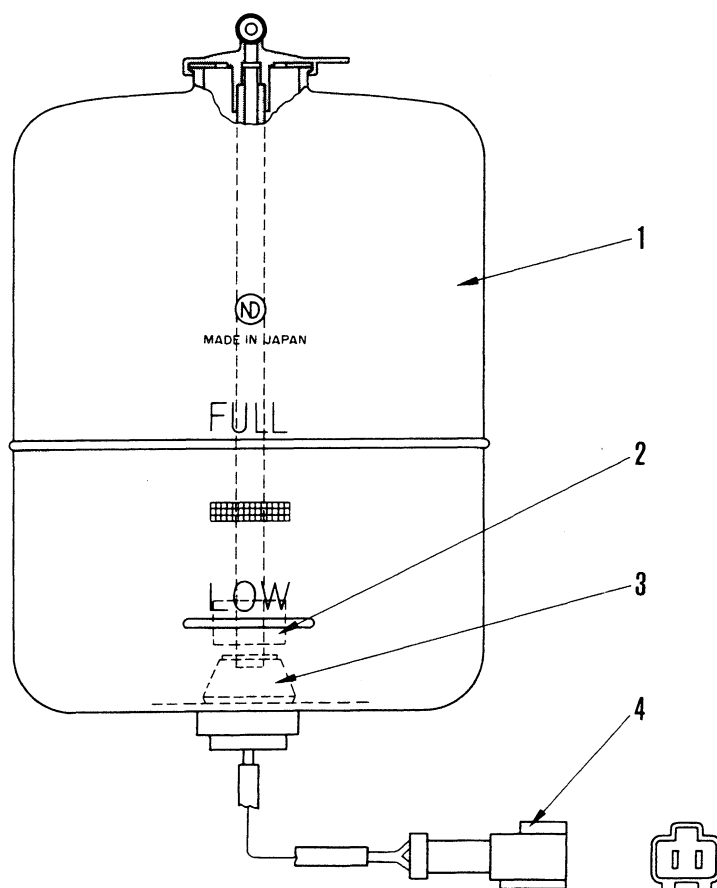


1. Sub tank
2. Float
3. Sensor
4. Connector

- 2) ENGINE OIL LEVEL SENSOR
- 3) HYDRAULIC OIL LEVEL SENSOR

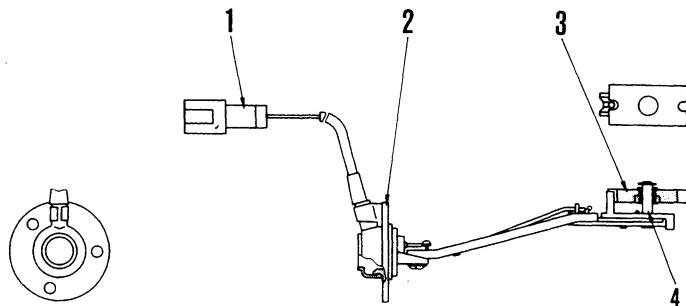

 
1. Connector
2. Bracket
3. Float
4. Switch



205F05167A

K20506

- 4) ENGINE OIL PRESSURE SENSOR (COMMON FOR BOTH Lo AND Hi)

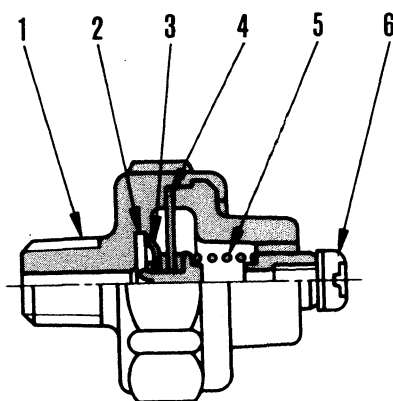

1. Plug
2. Contact ring
3. Contact
4. Diaphragm
5. Spring
6. Terminal


Actuation (ON) pressure
 Lo: 0.05 ± 0.02 MPa
 (0.5 ± 0.2 kg/cm²) or less
 Hi: 0.15 ± 0.02 MPa
 (1.5 ± 0.2 kg/cm²) or less




Composition of circuit

205F05169



5) COOLANT TEMPERATURE SENSOR

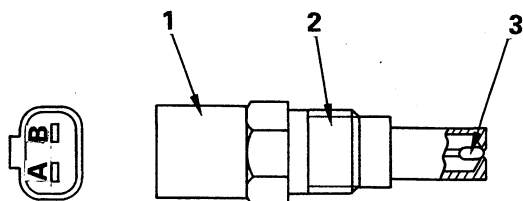



- 1. Connector
- 2. Plug
- 3. Thermistor

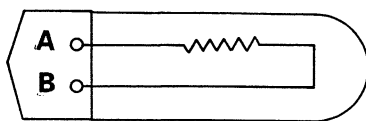

6) FUEL LEVEL SENSOR

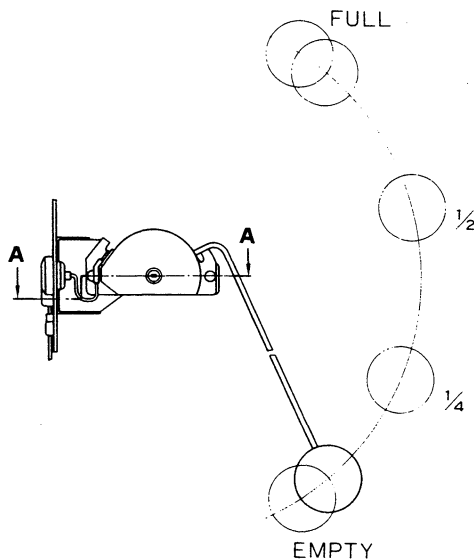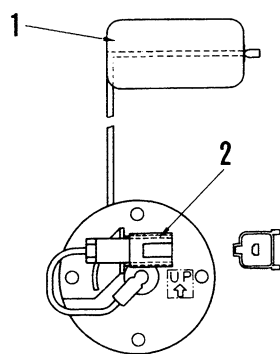




- 1. Float
- 2. Connector
- 3. Cover
- 4. Variable resistor

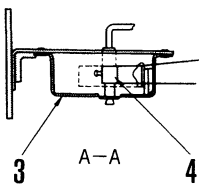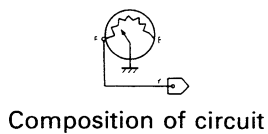

205F06253

7) AIR CLEANER CLOGGING SENSOR

Actuation (OFF) pressure:
 $-7.47 \pm 0.49 \text{ kPa}$ ($-762 \pm 50 \text{ mmH}_2\text{O}$)

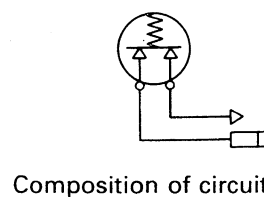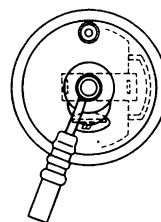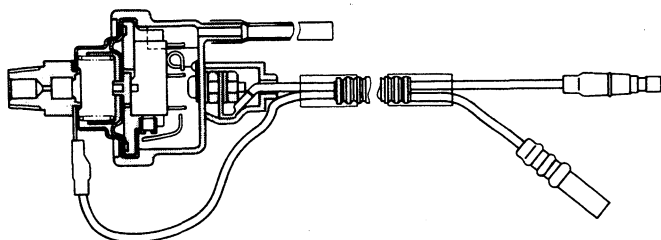

205F06254

CHECKS BEFORE TROUBLESHOOTING

	Item	Judgement standard	Remedy
Lubricating oil, cooling water	1. Check fuel level	–	Add fuel
	2. Check for dirt or water in fuel	–	Clean, drain
	3. Check hydraulic oil level	–	Add oil
	4. Check hydraulic oil strainer	–	Clean, drain
	5. Check swing machinery oil level	–	Add oil
	6. Check engine oil level (Level of oil in oil pan)	–	Add oil
	7. Check cooling water level	–	Add water
	8. Check condition of dust indicator	–	Clean or replace
	9. Check hydraulic oil filter	–	Replace
Electrical equipments	1. Check for loose or corroded battery terminals	–	Tighten or replace
	2. Check for loose or corroded alternator terminals	–	Tighten or replace
	3. Check for loose or corroded straight motor terminals	–	Tighten or replace
Hydraulic, mechanical equipments	1. Check for abnormal noise or smell	–	Repair
	2. Check for oil leakage	–	Repair
	3. Bleed air from system	–	Bleed air
Electrical components	1. Check battery voltage (engine stopped)	20 – 30 V	Replace
	2. Check level of battery electrolyte	–	Add or replace
	3. Check for discolored, burnt, or bare wiring	–	Replace
	4. Check for missing wiring clamps, hanging wires	–	Repair
	5. Checks for getting wet onto wiring (check carefully getting wet at connectors and terminals)	–	Disconnect connector and dry connection
	6. Check for broken or corroded fuses	–	Replace
	7. Check alternator voltage (engine running at over half throttle)	27.5 – 29.6 V	Replace
	8. Noise when battery relay is operated (switch starting switch from ON to OFF)	–	Replace

K20506

TROUBLESHOOTING



CONNECTOR TYPES AND MOUNTING LOCATIONS

CONNECTOR TYPES AND MOUNTING LOCATIONS

Con- nector No.	Type	No. of pins	Electrical component	Add- ress	Con- nector No.	Type	No. of pins	Electrical component	Add- ress
A01	KES1	2	Window washer circuit	J5	E11	RING	1	Heater relay	A2
A03	KES1	2	LS select solenoid circuit	Q6	H01	S	16	Intermediate connector	R9,G9
A04	KES1	2	Pump merge-divider sole- noid circuit	R6	H02	S	16	Intermediate connector	—
A05	KES1	2	Swing brake solenoid circuit	—	H03	S	16	Intermediate connector	Q9,I4
A06	KES1	2	2-stage relief solenoid circuit	—	H04	S	16	Intermediate connector	R8,G4
A07	KES1	2	Travel speed solenoid circuit	—	H05	M	6	Intermediate connector	—,F9
A08	KES1	2	Heater circuit	R7	H06	L	2	Intermediate connector	R9,G9
A09	KES1	2	Lower wiper circuit	—	H07	S	12	Intermediate connector	Q9,G9
A11	KES1	2	Alarm buzzer circuit	M6	H08	M	6	Intermediate connector	—,G4
A13	KES1	2	Starter relay circuit	R7	H09	M	2	Intermediate connector	—,I5
A14	KES1	2	Battery relay drive circuit	—	K01	—	1	Aircon switch	G4,R7
A16	KES1	2	Fuel shut off circuit	—	K02	X	4	Aircon pressure switch	I5
A17	KES1	2	Starter circuit	R7	M02	X	2	Safety relay	C1
C01	MIC	17	Pump controller	Q5	M06	M	4	Heater switch	P5
C02	040	20	Pump controller	—	M08	KES1	2	Right front light	E5
C03	040	16	Pump controller	P5	M09	KES1	2	Working lamp (boom)	D6
C04	X	2	Rear pump TVC valve	H9	M10	M	1	Intermediate connector	F5
C05	S	10	TVC prolix switch	N5	M11	L	2	Fusible link	E5
C06	M	2	TVC prolix resistor	P5	M12	KES1	4	Heater	H4
C07	X	3	Rear pump pressure sensor	I9	M13	AMP	8	Speaker	R9
C08	X	3	Front pump pressure sensor	—	M14	L	2	Fusible link	E5
C09	S	8	Model selection connector	Q6	M16	—	1	Horn (high sound)	F4
C10	X	2	LS control EPC solenoid valve	F8	M17	—	1	Horn (low sound)	—
C13	X	2	Front pump TVC valve	H9	M18	M	4	Wiper, washer switch	O8
E01	MIC	21	Engine throttle controller	R8	M20	—	—	Cigarette lighter	N8
E04	X	3	Governor potentiometer	—	M23	M	2	Horn switch, R.H. knob switch	H4,F1
E05	X	4	Governor motor	I9	M26	AMP	11	Air conditioner	H4
E06	M	3	Fuel control dial	H9,N8	M28	KES0	2	Window washer motor	J5
E07	X	2	Engine speed sensor	I9,K2	M34	Simple connector	1	Electromagnetic clutch for air conditioner compressor	H2
E08	SWP	14	Intermediate connector	K3,I5	M35	X	4	Condenser for air conditioner	I5
E10	—	1	Fuel shut off	I1	M38	M	3	Light switch	O8









- ★ The Address column in the table above shows the address in the connector arrangement drawing (2-dimensional drawing).
- ★ This table includes connectors that are not shown in the drawing.

K20506

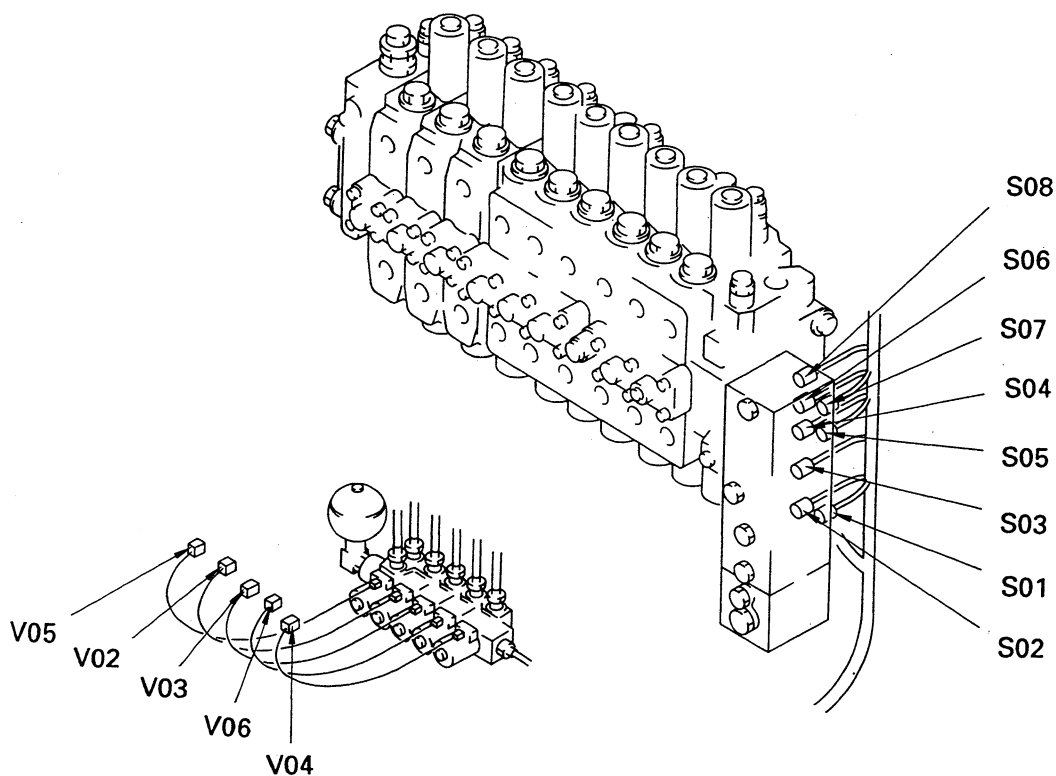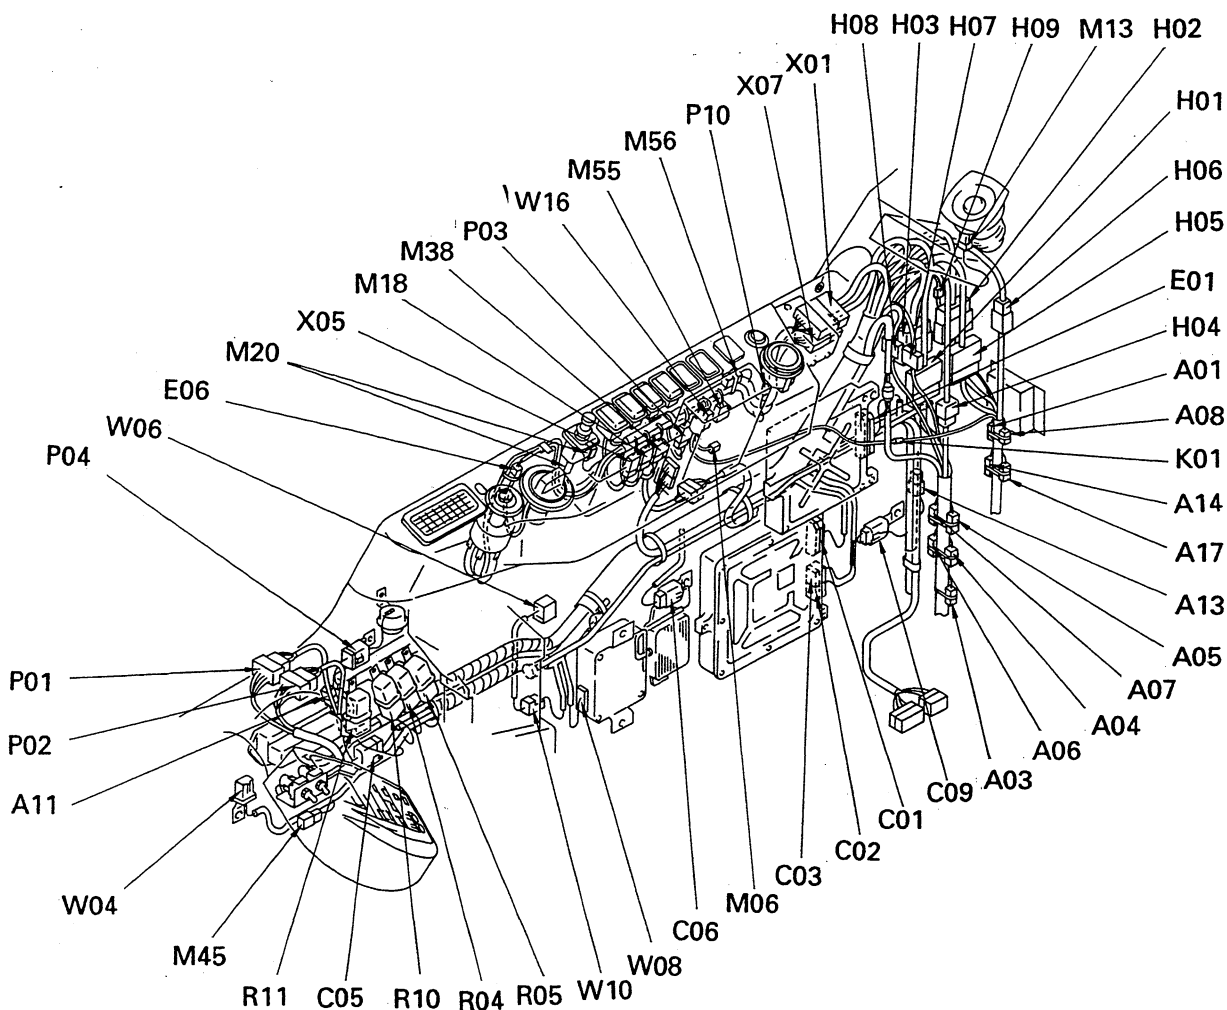

CONNECTION TABLE FOR CONNECTOR PIN NUMBERS

 ★ The terms male and female refer to the pins, while the terms male housing and female housing refer to the mating portion of the housing.

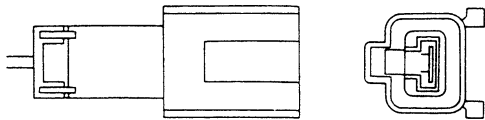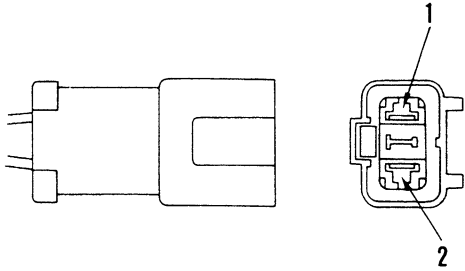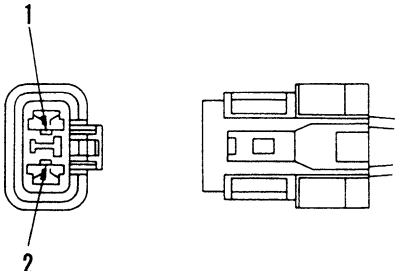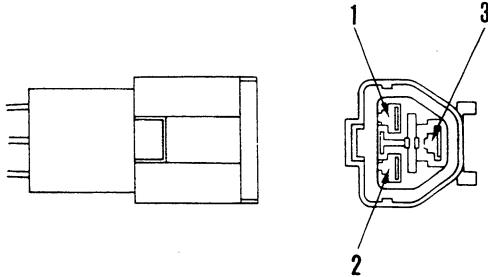
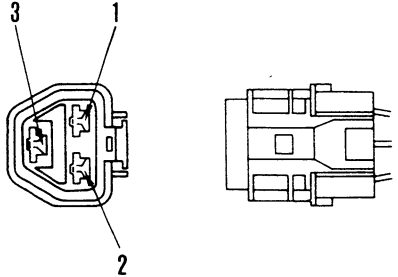
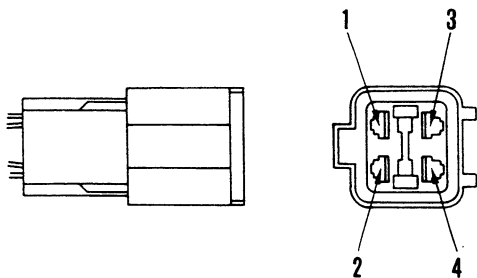
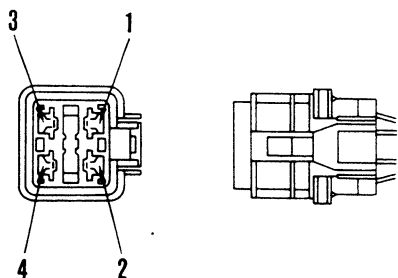
No. of pins	X type connector	
	Male (female housing)	Female (male housing)
1	 205F05309	 205F05310
2	 205F05311	 205F05312
3	 205F05313	 205F05314
4	 205F05315	 205F05316

K20506

REMOVAL OF CONTROL VALVE ASSEMBLY


⚠ Run the engine at low idling, operate the cylinder to the end of its stroke without relieving the circuit, lower the work equipment to the ground, then stop the engine. For details, see TESTING AND ADJUSTING, Releasing pressure in hydraulic circuit. After stopping the engine, do as follows.

- Loosen the oil filler cap slowly to release the pressure inside the tank.
 - Operate the control levers.
 - ★ Operate the control levers several times to release the pressure in the accumulator.
 - Start the engine and run at low idling for approx. 5 seconds, then stop the operation and operate the control levers.
 - ★ Repeat the above operation several times to release the remaining pressure completely.
1. Open engine hood, and remove divider covers (1), then disconnect intake connector.
 2. Disconnect hoses (2), (3), and (4), remove 2 connectors (5) from holder, then disconnect.
 - ★ Remove the hose mounting elbow from the valve body.
 3. Remove block (6).
 4. Disconnect hoses (7) and (8), and block (9).
 - ★ When disconnecting block (9), loosen the mounting bolts of the block tube flange first.

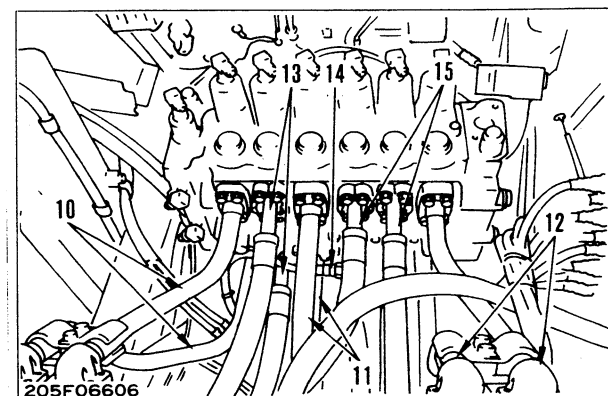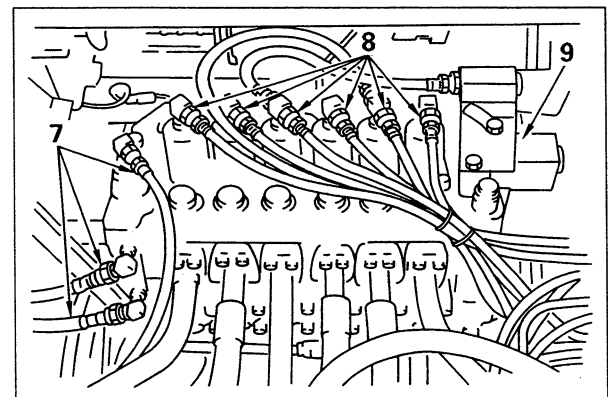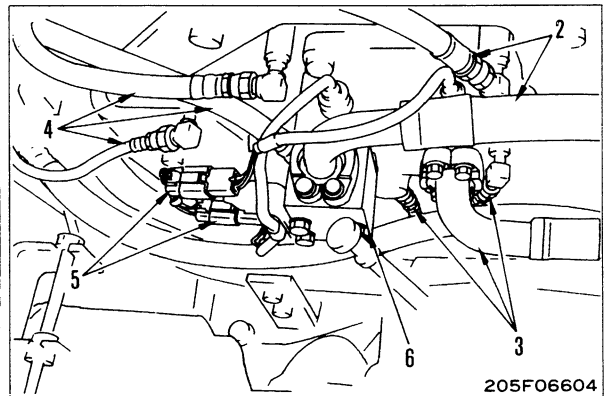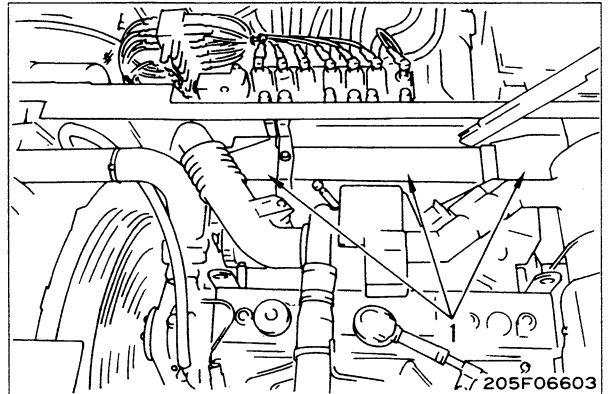

K20506


6. Disconnect hoses (16) and (17).

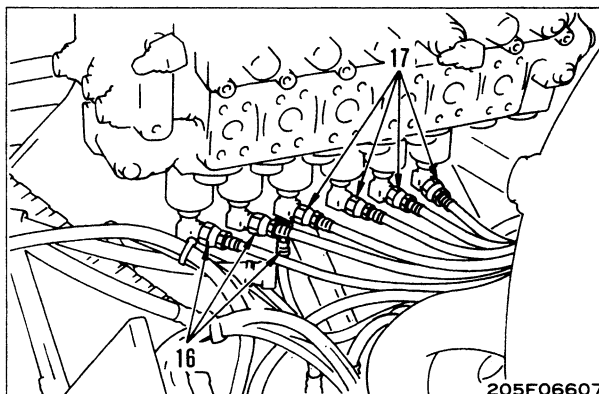

7. Sling control valve assembly (18), then remove mounting bolts, and lift off control valve assembly.



Control valve assembly: 170 kg

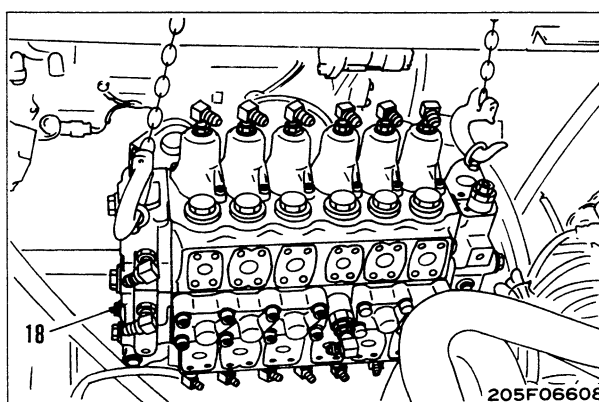

INSTALLATION OF CONTROL VALVE ASSEMBLY

- Carry out installation in the reverse order to removal.
- Refilling with oil (hydraulic tank)
 - ★ Add oil through the oil filler to the specified level. Run the engine to circulate the oil through the system. Then check the oil level again.
- Bleeding air
 - ★ Bleed the air from the circuit between the valve and the hydraulic cylinder. For details, see TESTING AND ADJUSTING, Bleeding air.

K20506


REMOVAL OF CONTROL VALVE ASSEMBLY

★ 7-spool control valve (1 service valve)



Release the remaining pressure in the hydraulic circuit. For details, see TESTING AND ADJUSTING, Releasing pressure in hydraulic circuit.


1. Open engine hood and chassis bodywork cover, remove divider cover (1), then disconnect intake connector (2).

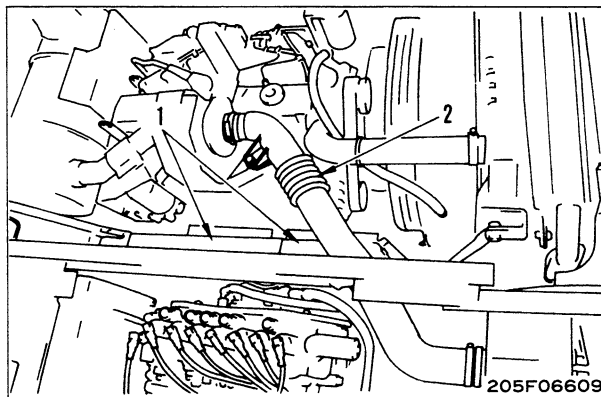

2. Disconnect hoses (3), (4), and (5), and remove 2 connectors (6) from clip, then disconnect.

★ Remove the hose mounting elbow from the valve body.


3. Remove block (7).

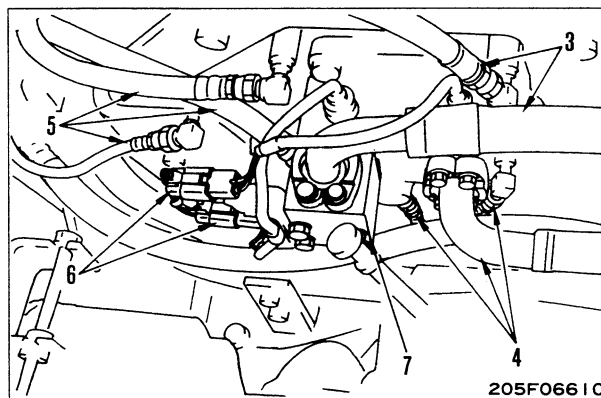


4. Disconnect hoses (8) and block (9).

★ When disconnecting block (9), loosen the mounting bolts of the flange for the tubes at the bottom first.

5. Disconnect hose (10), and remove tube (11) and block (12).

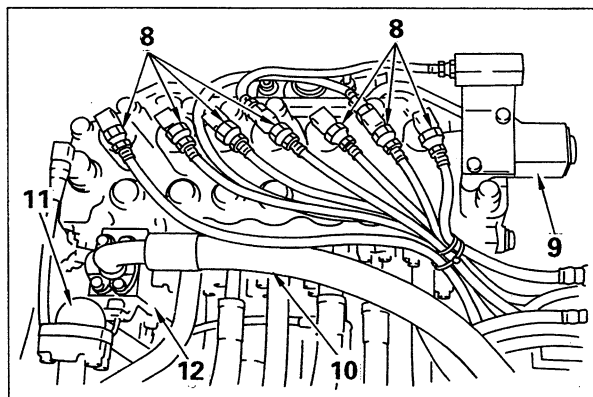

6. Disconnect hoses (13) and (14), and remove tubes (15) and (16).

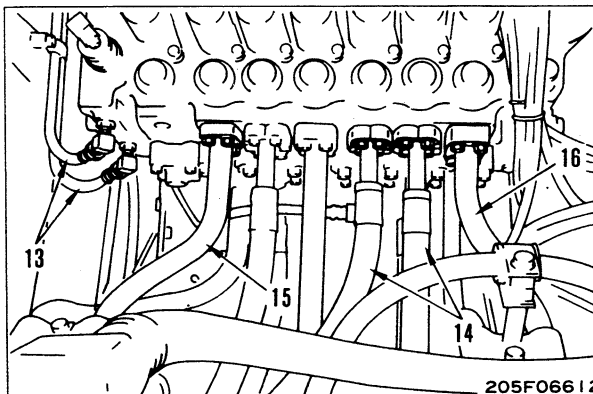


K20506

DISASSEMBLY AND ASSEMBLY

CONTROL VALVE

7. Remove tubes (17), (18), and (19), and disconnect hoses (20) and (21).

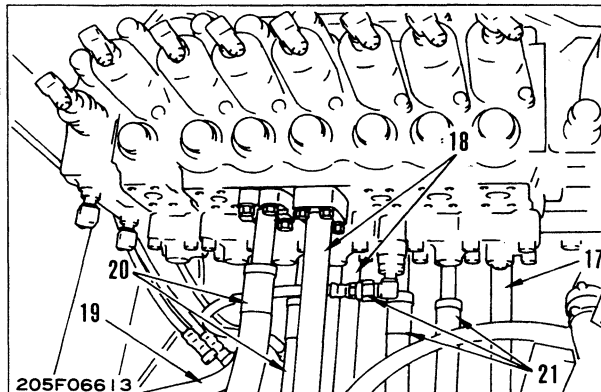


8. Disconnect hoses (22), (23), and (24) mounted to bottom of valve.

9. Lift off control valve assembly (25).




Control valve assembly: 185 kg

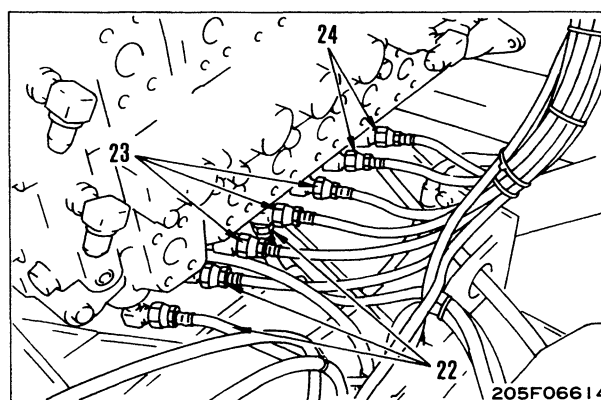



INSTALLATION OF CONTROL VALVE ASSEMBLY

★ 7-spool control valve (1 service valve)

- Carry out installation in the reverse order to removal.
- Refilling with oil (hydraulic tank)
 - ★ Add oil through the oil filler to the specified level. Run the engine to circulate the oil through the system. Then check the oil level again.
- Bleeding air
 - ★ Bleed the air from the circuit between the valve and the hydraulic cylinder. For details, see TESTING AND ADJUSTING, Bleeding air.

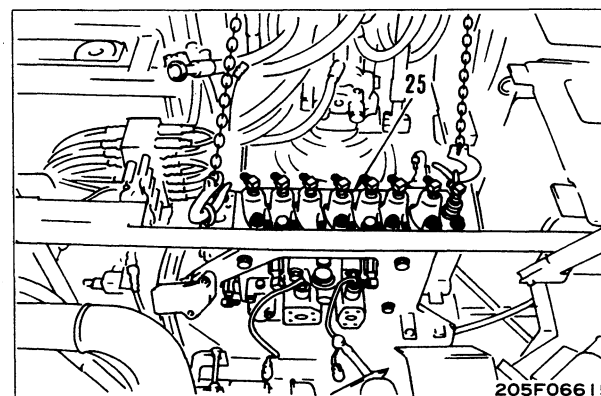

K20506

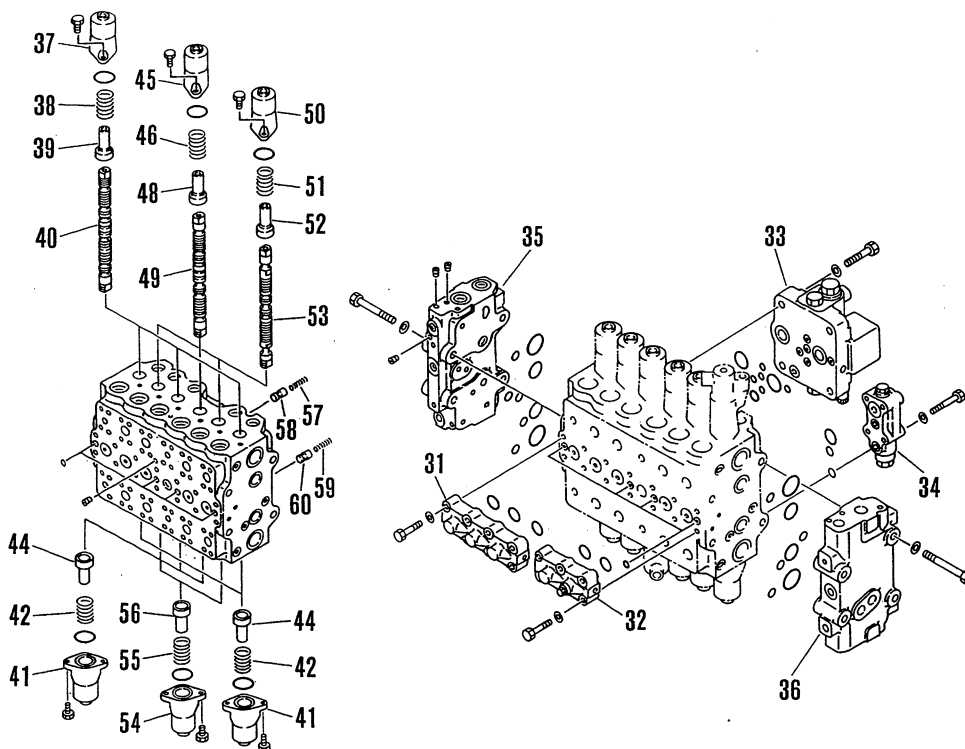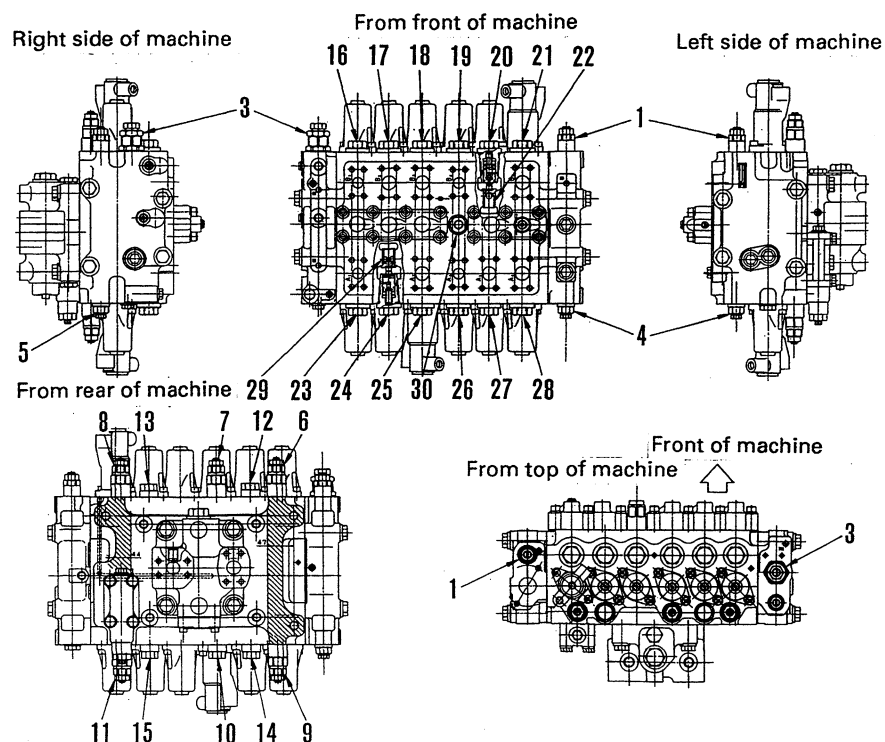

K20506

DISASSEMBLY AND ASSEMBLY


ASSEMBLY OF CONTROL VALVE ASSEMBLY

- Before assembling, coat the sliding surface with engine oil.
1. **R.H.travel control valve, L.H. travel control valve**
 - 1) Assemble spool assembly (53) to valve body.
 - 2) Assemble retainer (56) and spring (55) to spool, then fit O-ring to case (54) and install.
 Case mounting bolt:
 $30.9 \pm 3.4 \text{ Nm } (2.9 \pm 0.5 \text{ kgm})$
 - 3) Assemble retainer (52) and spring (51) to spool, then fit O-ring to case (50) and install.
 Case mounting bolt:
 $30.9 \pm 3.4 \text{ Nm } (2.9 \pm 0.5 \text{ kgm})$
 2. **Swing control valve**
 - 1) Assemble spool assembly (49) to valve body.
 - 2) Assemble retainer (44) and spring (42) to spool, then fit O-ring to case (41) and install.
 Case mounting bolt:
 $30.9 \pm 3.4 \text{ Nm } (2.9 \pm 0.5 \text{ kgm})$
 - 3) Assemble retainer (48), and spring (46) to spool, then fit O-ring to case (45) and install.
 Case mounting bolt:
 $30.9 \pm 3.4 \text{ Nm } (2.9 \pm 0.5 \text{ kgm})$
 3. **Arm control valve, boom control valve, bucket control valve**
 - 1) Assemble spool assembly (40) to valve body.
 - 2) Assemble retainer (44), and spring (42) to spool, then fit O-ring to case (41) and install.
 Case mounting bolt:
 $30.9 \pm 3.4 \text{ Nm } (2.9 \pm 0.5 \text{ kgm})$
 - 3) Assemble retainer (39) and spring (38) to spool, then fit O-ring to case (37) and install.
 Case mounting bolt:
 $30.9 \pm 3.4 \text{ Nm } (2.9 \pm 0.5 \text{ kgm})$
 4. **Covers**
 - 1) Fit O-ring to cover (36) and install.
 - 2) Fit O-ring to cover (35) and install.
 Mounting bolt:
 $166.7 \pm 9.8 \text{ Nm } (17 \pm 1 \text{ kgm})$
 - ★ Tighten the mounting bolts in the order shown in the diagram.
 5. **LS shuttle valve, pump merge-divider valve, arm counterbalance valve**
 - 1) Assemble valve (60) and spring (59) to valve body, and install arm counterbalance valve (34).
 Mounting bolt:
 $66.2 \pm 7.4 \text{ Nm } (6.8 \pm 0.8 \text{ kgm})$
 - ★ Tighten the mounting bolts in the order shown in the diagram.
 - 2) Assemble valve (58) and spring (57) to valve body, and install pump mergedivider valve (33).
 Mounting bolt:
 $166.3 \pm 9.4 \text{ Nm } (17 \pm 1 \text{ kgm})$
 - ★ Tighten the mounting bolts in the order shown in the diagram.
 - 3) Install LS shuttle valves (32) and (31).
 Mounting bolt:
 $66.2 \pm 7.4 \text{ Nm } (6.8 \pm 0.8 \text{ kgm})$
 6. **LS select valve**
 Install LS select valve(30).
 LS select valve:
 $127.5 \pm 19.6 \text{ Nm } (13 \pm 2 \text{ kgm})$
 7. **Pressure compensation valves**
 - Check marks made on each pressure compensation valve when disassembling, and install in correct position.
 - 1) Before installing pressure compensation valves below, install check valves (29) and (22).
 - 2) Fit O-rings, then install arm IN pressure compensation valve (28), L.H. travel FORWARD pressure compensation valve (27), left swing pressure compensation valve (26) boom LOWER pressure compensation valve (25), R.H. travel FORWARD pressure compensation valve (24), and bucket CURL pressure compensation valve (23).
 - 3) Fit O-rings, then install arm OUT pressure compensation valve (21), L.H. travel REVERSE pressure compensation valve (20), right swing press (19), boom RAISE pressure compensation valve (18), R.H. travel REVERSE pressure compensation valve (17), and bucket DUMP pressure compensation valve (16).
 Pressure compensation valve:
 $225.5 \pm 19.6 \text{ Nm } (23 \pm 2 \text{ kgm})$
 8. **Unload valves, safety-suction valves, suction valves**
 - 1) Fit O-rings and install suction valves (15), (14), (13), and (12).
 Suction valve:
 $147.1 \pm 9.8 \text{ Nm } (15 \pm 1 \text{ kgm})$
 - 2) Fit O-ring and installs afety-suction valves (11), (10), (9), (8), (7), and (6).
 Safety-suction valve:
 $147.1 \pm 9.8 \text{ Nm } (15 \pm 1 \text{ kgm})$
 - 3) Fit O-ring and install unload valves (5) and (4).
 Unload valve:
 $98.1 \pm 9.8 \text{ Nm } (10 \pm 1 \text{ kgm})$
 9. **Main reliefvalve, mair unload • LS relief valve**
 - 1) Fit O-ring and install main unload • LS relief valve (3).
 Main unload • LS relief valve:
 $85.9 \pm 7.4 \text{ Nm } (8.8 \pm 0.8 \text{ kgm})$
 - 2) Fit O-ring and install main relief valve (1).
 Main relief valve:
 $53.9 \pm 4.9 \text{ Nm } (5.5 \pm 0.5 \text{ kgm})$

K20506



DISASSEMBLY OF PUMP MERGE-DIVIDER VALVE ASSEMBLY

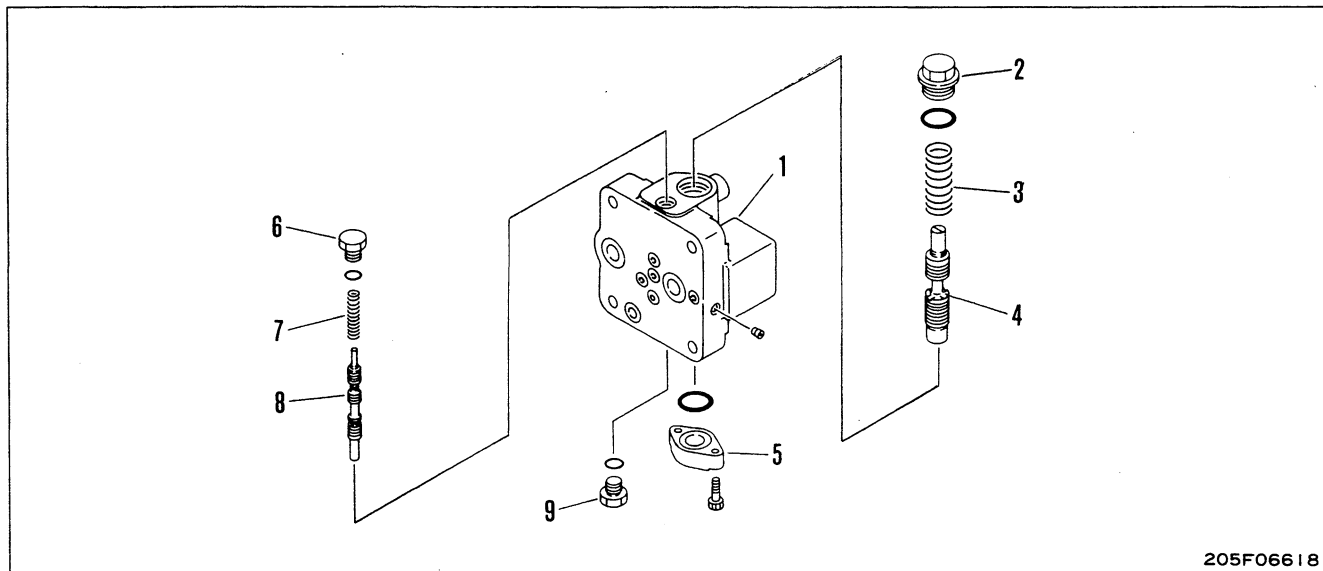

205F06618


1. Remove plug (2) from valve body (1), then remove spring (3) and spool (4).
2. Remove plate (5).
3. Remove plug (6), then remove spring (7) and spool (8).
4. Remove plug (9).
- ★ After disassembling, if there is any abnormality in body (1) or spools (4) or (8), replace the whole pump merge-divider valve assembly.

ASSEMBLY OF PUMP MERGE-DIVIDER VALVE ASSEMBLY


- Before assembling, coat the sliding surface with engine oil.
1. Fit O-ring to plug (9) and install to valve body (1).
 kgm Plug (9): $38.7 \pm 5.4 \text{ Nm}$ ($4.0 \pm 0.6 \text{ kgm}$)
 2. Assemble spool (8) and spring (7), then fit O-ring to plug (6) and install.
 kgm Plug (6): $38.7 \pm 5.4 \text{ Nm}$ ($4.0 \pm 0.6 \text{ kgm}$)
 3. Fit O-ring to plate (5) and install to valve body.
 4. Assemble spool (4) and spring (3), then fit O-ring to plug (2) and install.
 kgm Plug (2): $152.3 \pm 24.8 \text{ Nm}$ ($15.5 \pm 2.5 \text{ kgm}$)

CONTROL VALVE

- ★ Figure shows 9-spool control valve (with 3 service valve).
9-spool control valve includes 6-spool, 7-spool and 8-spool control valves.

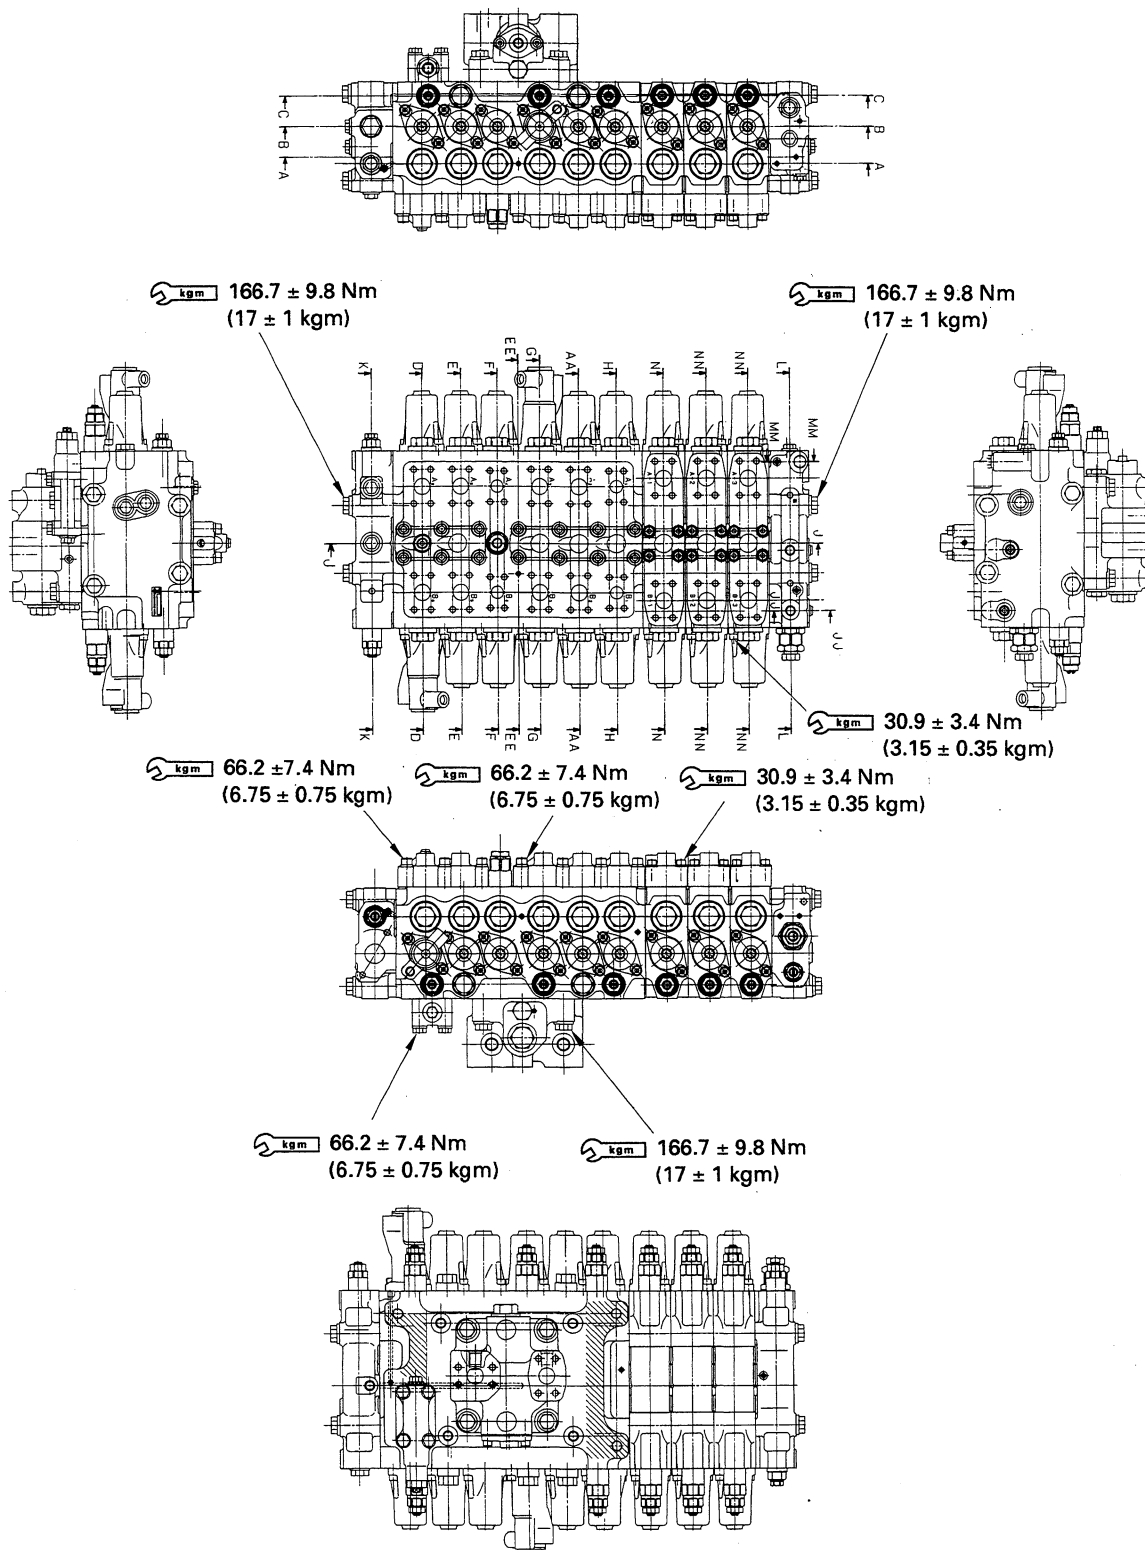


K20506

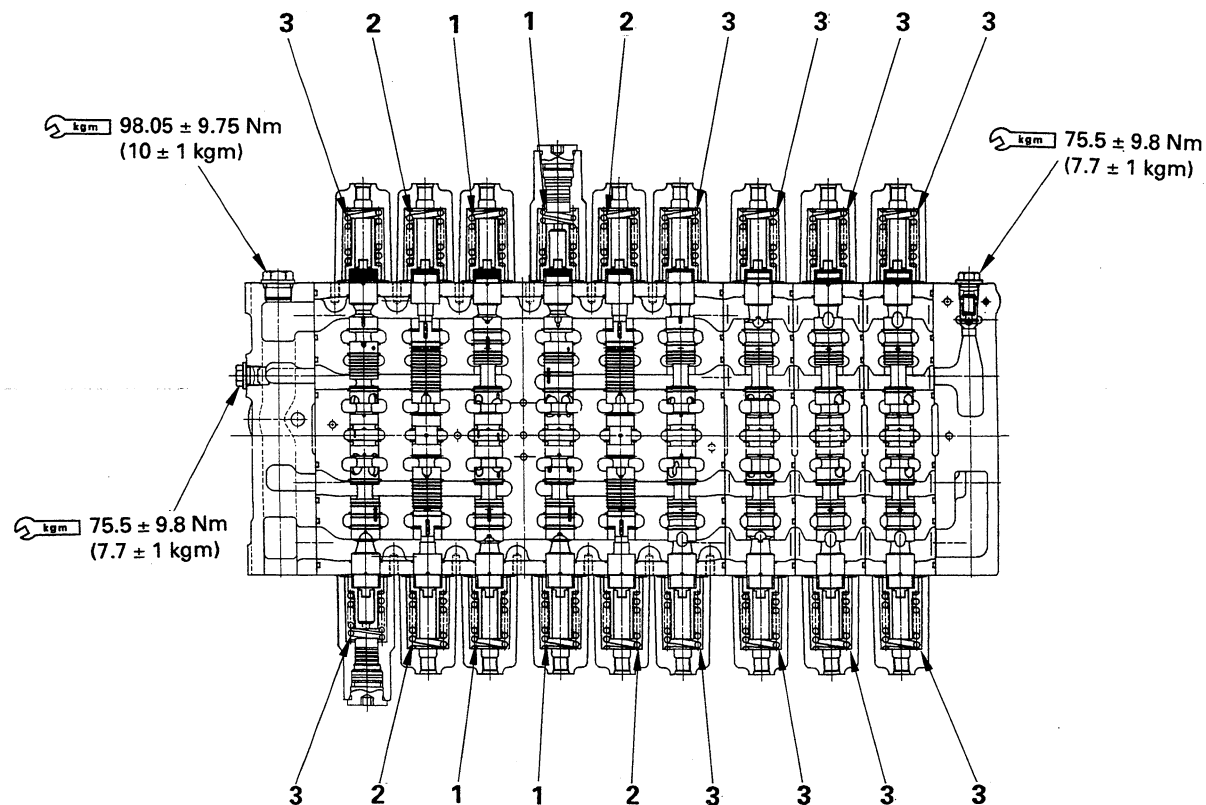

K20506

Unit: mm



No.	Check item	Criteria					Remedy
1	Spool return spring	Standard size			Repair limit		Replace spring if any damages or deformations are found.
		Free length x O.D.	Installed length	Installed load	Free length	Installed load	
		54.2 x 34.8	51.2	416.5 N (42.5 kg)	—	333.2 N (34 kg)	
2	Spool return spring	54.6 x 34.8	51.2	420.4 N (42.9 kg)	—	336.1 N (34.3 kg)	
3	Spool return spring	54.5 x 34.8	51.2	393.0 N (40.1 kg)	—	314.6 N (32.1 kg)	

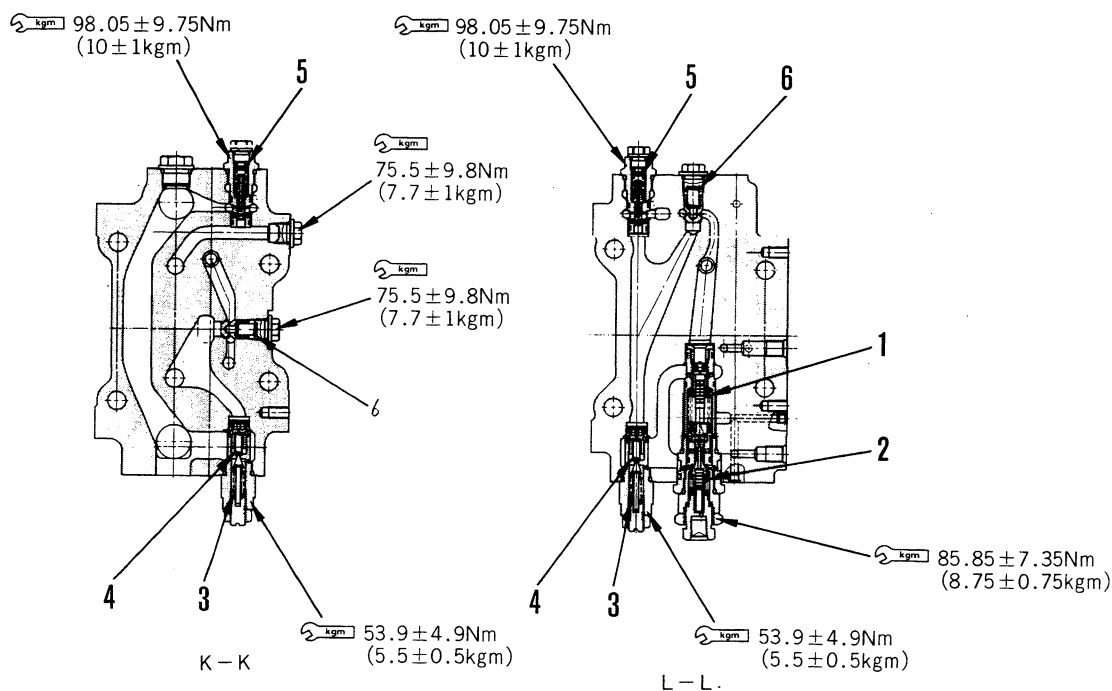

205F06264

Unit: mm

No.	Check item	Criteria					Remedy
1	Main unload spring	Standard size			Repair limit		Replace spring if any damages or deformations are found.
		Free length x O.D.	Installed length	Installed load	Free length	Installed load	
		43 x 19.4	32	260.7 N (26.6 kg)	—	208.7 N (21.3 kg)	
2	LS relief spring	20.9 x 17.2	18	431.2 N (44.0 kg)	—	345.0 N (35.2 kg)	
3	Valve spring	23.2 x 7.2	19	41.2 N (4.2 kg)	—	33.3 N (3.4 kg)	
4	Relief spring	30.7 x 9.6	26.3	369.5 N (37.7 kg)	—	296.0 N (30.2 kg)	
5	Unload spring	35 x 10.4	26	138.2 N (14.1 kg)	—	110.7 N (11.3 kg)	
6	Check valve spring	31.5 x 10.3	19.5	103.9 N (10.6 kg)	—	4.4 N (0.45 kg)	

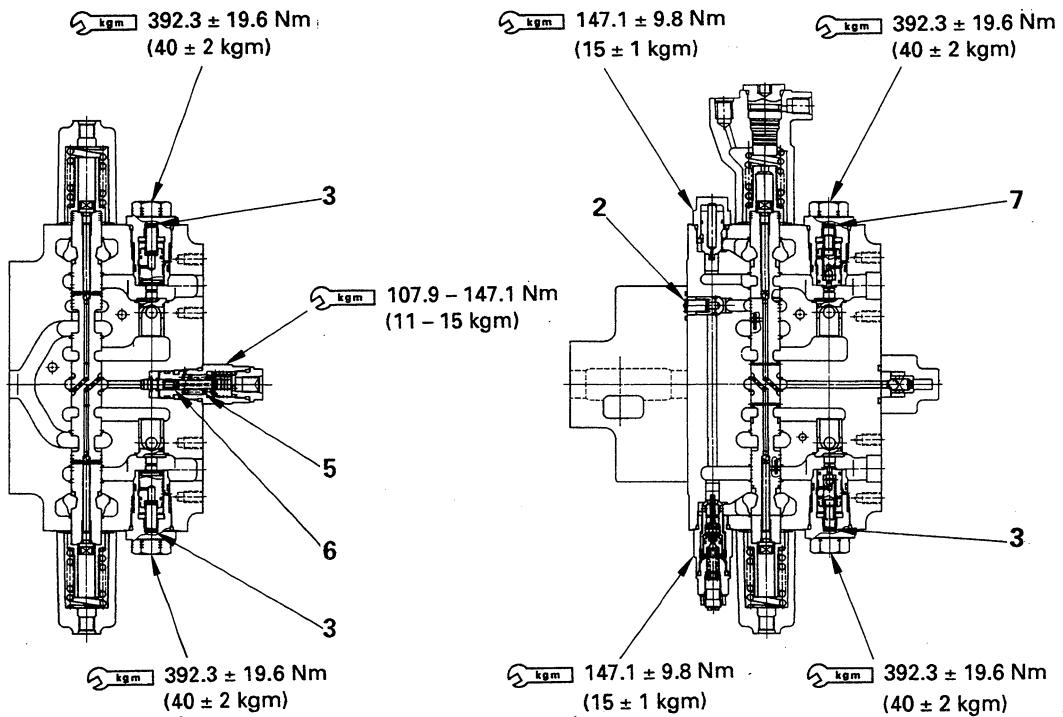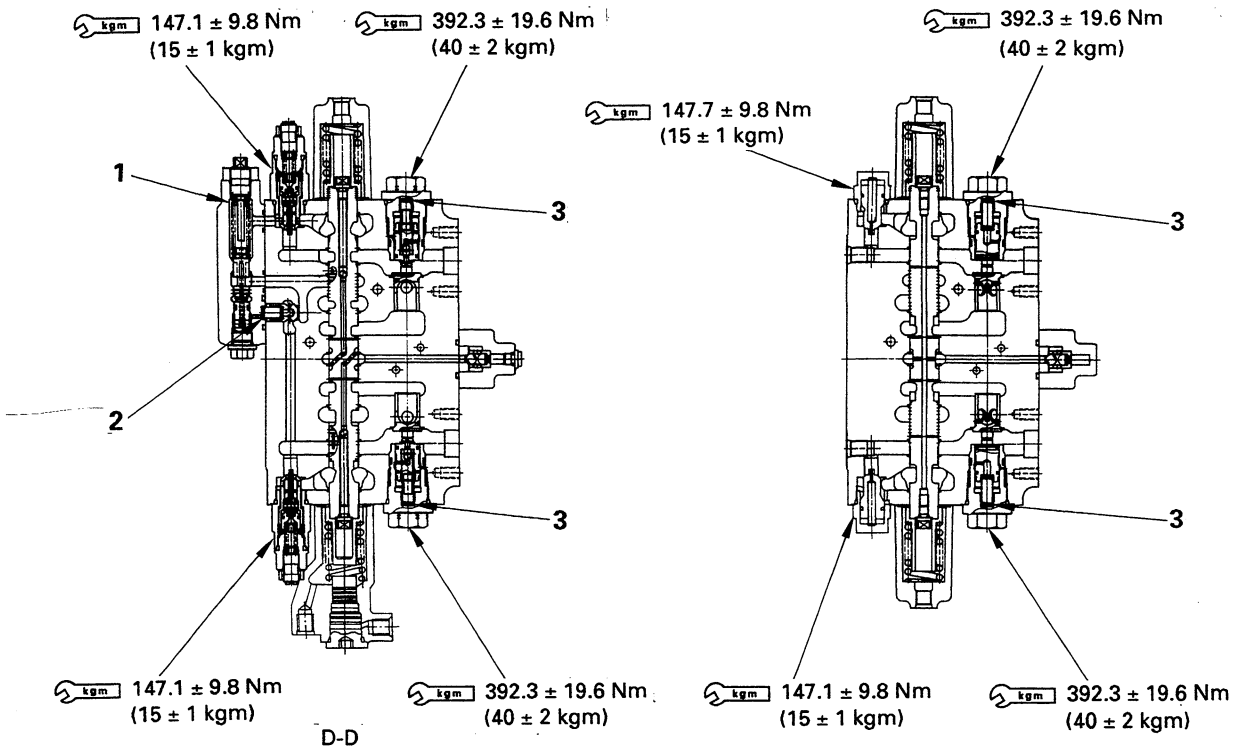

K20506

SHOP

MANUAL

KOMATSU

PC210, 210LC-6K

PC240, 240LC, PC240NLC-6K

MACHINE MODEL

SERIAL NUMBER

PC210, 210LC-6K

K30001 and up

PC240, 240LC, 240NLC-6K

K30001 and up

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require. Materials and specifications are subject to change without notice.
- PC210, 210LC-6 mount the S6D102L-1 engine;
PC240, 240LC-6 mount the SA6D102L-1 engine.
For details of the engine, see the 102 Service Engine Shop Manual.

CONTENTS

	No. of page
10 STRUCTURE AND FUNCTION	10-1
20 TESTING AND ADJUSTING	20-1
30 DISASSEMBLY AND ASSEMBLY	30-1
40 MAINTENANCE STANDARD	40-1

K20506

SAFETY

SAFETY NOTICE

IMPORTANT SAFETY NOTICE

Proper service and repair is extremely important for safe machine operation. The service and repair techniques recommended by Komatsu and described in this manual are both effective and safe. Some of these techniques require the use of tools specially designed by Komatsu for the specific purpose.

To prevent injury to workers, the symbol  is used to mark safety precautions in this manual. The cautions accompanying these symbols should always be followed carefully. If any dangerous situation arises or may possibly arise, first consider safety, and take the necessary actions to deal with the situation.

GENERAL PRECAUTIONS

Mistakes in operation are extremely dangerous. Read the Operation and Maintenance Manual carefully BEFORE operating the machine.

1. Before carrying out any greasing or repairs, read all the precautions given on the decals which are fixed to the machine.
2. When carrying out any operation, always wear safety shoes and helmet. Do not wear loose work clothes, or clothes with buttons missing.
 - Always wear safety glasses when hitting parts with a hammer.
 - Always wear safety glasses when grinding parts with a grinder, etc.
3. If welding repairs are needed, always have a trained, experienced welder carry out the work. When carrying out welding work, always wear welding gloves, apron, glasses, cap and other clothes suited for welding work.
4. When carrying out any operation with two or more workers, always agree on the operating procedure before starting. Always inform your fellow workers before starting any step of the operation. Before starting work, hang UNDER REPAIR signs on the controls in the operator's compartment.
5. Keep all tools in good condition and learn the correct way to use them.
6. Decide a place in the repair workshop to keep tools and removed parts. Always keep the tools and parts in their correct places. Always keep the work area clean and make sure that there is no dirt or oil on the floor. Smoke only in the areas provided for smoking. Never smoke while working.

PREPARATIONS FOR WORK

7. Before adding oil or making any repairs, park the machine on hard, level ground, and block the wheels or tracks to prevent the machine from moving.
8. Before starting work, lower blade, ripper, bucket or any other work equipment to the ground. If this is not possible, insert the safety pin or use blocks to prevent the work equipment from falling. In addition, be sure to lock all the control levers and hang warning signs on them.
9. When disassembling or assembling, support the machine with blocks, jacks or stands before starting work.
10. Remove all mud and oil from the steps or other places used to get on and off the machine. Always use the handrails, ladders or steps when getting on or off the machine. Never jump on or off the machine. If it is impossible to use the handrails, ladders or steps, use a stand to provide safe footing.

SAFETY

SAFETY NOTICE

PRECAUTIONS DURING WORK

11. When removing the oil filler cap, drain plug or hydraulic pressure measuring plugs, loosen them slowly to prevent the oil from spurting out.
Before disconnecting or removing components of the oil, water or air circuits, first remove the pressure completely from the circuit.
12. The water and oil in the circuits are hot when the engine is stopped, so be careful not to get burned.
Wait for the oil and water to cool before carrying out any work on the oil or water circuits.
13. Before starting work, remove the leads from the battery. Always remove the lead from the negative (-) terminal first.
14. When raising heavy components, use a hoist or crane.
Check that the wire rope, chains and hooks are free from damage.
Always use lifting equipment which has ample capacity.
Install the lifting equipment at the correct places. Use a hoist or crane and operate slowly to prevent the component from hitting any other part. Do not work with any part still raised by the hoist or crane.
15. When removing covers which are under internal pressure or under pressure from a spring, always leave two bolts in position on opposite sides. Slowly release the pressure, then slowly loosen the bolts to remove.
16. When removing components, be careful not to break or damage the wiring. Damaged wiring may cause electrical fires.
17. When removing piping, stop the fuel or oil from spilling out. If any fuel or oil drips onto the floor, wipe it up immediately. Fuel or oil on the floor can cause you to slip, or can even start fires.
18. As a general rule, do not use gasoline to wash parts. In particular, use only the minimum of gasoline when washing electrical parts.
19. Be sure to assemble all parts again in their original places.
Replace any damaged parts with new parts.
 - When installing hoses and wires, be sure that they will not be damaged by contact with other parts when the machine is being operated.
20. When installing high pressure hoses, make sure that they are not twisted. Damaged tubes are dangerous, so be extremely careful when installing tubes for high pressure circuits. Also, check that connecting parts are correctly installed.
21. When assembling or installing parts, always use the specified tightening torques. When installing protective parts such as guards, or parts which vibrate violently or rotate at high speed, be particularly careful to check that they are installed correctly.
22. When aligning two holes, never insert your fingers or hand. Be careful not to get your fingers caught in a hole.
23. When measuring hydraulic pressure, check that the measuring tool is correctly assembled before taking any measurements.
24. Take care when removing or installing the tracks of track-type machines.
When removing the track, the track separates suddenly, so never let anyone stand at either end of the track.

FOREWORD

GENERAL

This shop manual has been prepared as an aid to improve the quality of repairs by giving the serviceman an accurate understanding of the product and by showing him the correct way to perform repairs and make judgements. Make sure you understand the contents of this manual and use it to full effect at every opportunity.

This shop manual mainly contains the necessary technical information for operations performed in a service workshop. For ease of understanding, the manual is divided into the following chapters; these chapters are further divided into the each main group of components.

STRUCTURE AND FUNCTION

This section explains the structure and function of each component. It serves not only to give an understanding of the structure, but also serves as reference material for troubleshooting.

TESTING AND ADJUSTING

This section explains checks to be made before and after performing repairs, as well as adjustments to be made at completion of the checks and repairs.

Troubleshooting charts correlating "Problems" to "Causes" are also included in this section.

DISASSEMBLY AND ASSEMBLY

This section explains the order to be followed when removing, installing, disassembling or assembling each component, as well as precautions to be taken for these operations.

MAINTENANCE STANDARD

This section gives the judgement standards when inspecting disassembled parts.

NOTICE

The specifications contained in this shop manual are subject to change at any time and without any advance notice. Use the specifications given in the book with the latest date.

HOISTING INSTRUCTIONS

HOISTING

! Heavy parts (25 kg or more) must be lifted with a hoist, etc. In the **DISASSEMBLY AND ASSEMBLY** section, every part weighing 25 kg or more is indicated clearly with the symbol .

- If a part cannot be smoothly removed from the machine by hoisting, the following checks should be made:
 - 1) Check for removal of all bolts fastening the part to the relative parts.
 - 2) Check for existence of another part causing interference with the part to be removed.

WIRE ROPES


- 1) Use adequate ropes depending on the weight of parts to be hoisted, referring to the table below:

Wire ropes (Standard "Z" or "S" twist ropes without galvanizing)	
Rope diameter (mm)	Allowable load (tons)
10	1.0
11.2	1.4
12.5	1.6
14	2.2
16	2.8
18	3.6
20	4.4
22.4	5.6
30	10.0
40	18.0
50	28.0
60	40.0

- ★ The allowable load value is estimated to be one-sixth or one-seventh of the breaking strength of the rope used.

- 2) Sling wire ropes from the middle portion of the hook.

Slinging near the edge of the hook may cause the rope to slip off the hook during hoisting, and a serious accident can result. Hooks have maximum strength at the middle portion.

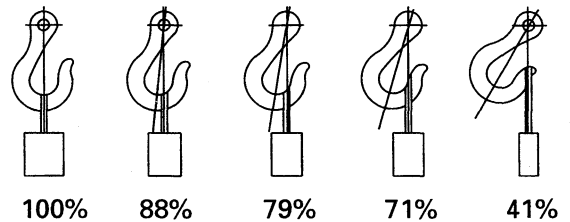


SAD00479

- 3) Do not sling a heavy load with one rope alone, but sling with two or more ropes symmetrically wound onto the load.

! Slinging with one rope may cause turning of the load during hoisting, untwisting of the rope, or slipping of the rope from its original winding position on the load, which can result in a dangerous accident.

- 4) Do not sling a heavy load with ropes forming a wide hanging angle from the hook. When hoisting a load with two or more ropes, the force subjected to each rope will increase with the hanging angles. The table below shows the variation of allowable load (kg) when hoisting is made with two ropes, each of which is allowed to sling up to 1000 kg vertically, at various hanging angles.

When two ropes sling a load vertically, up to 2000 kg of total weight can be suspended. This weight becomes 1000 kg when two ropes make a 120° hanging angle. On the other hand, two ropes are subjected to an excessive force as large as 4000 kg if they sling a 2000 kg load at a lifting angle of 150°.

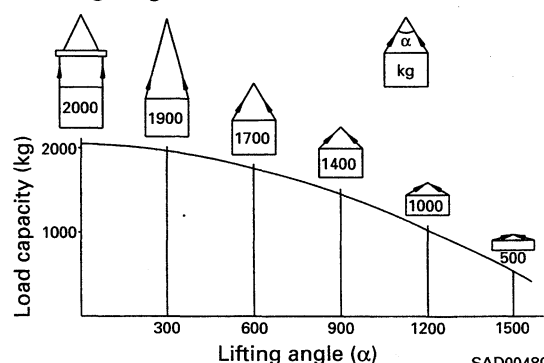

SAD00480

FOREWORD
COATING MATERIALS
COATING MATERIALS

The recommended coating materials prescribed in Komatsu Shop Manuals are listed below.

Category	Komatsu code	Part No.	Q'ty	Container	Main applications, features
Adhesive	LT-1A	790-129-9030	150 g	Tube	Used to prevent rubber gaskets, rubber cushions, and cork plugs from coming out
	LT-1B	790-129-9050	20 g (x2)	Plastic container	Used in places requiring an immediately effective, strong adhesive. Used for plastics (except polyethylene, polypropylene, tetrafluoroethylene, and vinyl chloride), rubber, metal, and non-metal.
	LT-2	09940-00030	50 g	Plastic container	- Features: Resistance to heat, chemicals - Used for anti-loosening and sealant purposes for bolts and plugs.
	LT-3	790-129-9060 (Set of adhesive and hardening agent)	Adhesive :1 Kg Hardening agent: :500 g	Can	Used as adhesive or sealant for metal, glass, plastic
	LT-4	790-129-9040	250 g	Plastic container	Used as sealant for machined holes
	(Loctite 648-50)	79A-129-9110	50 cc	—	- Features: Resistance to heat, chemicals - Used at joint portions subject to high temperature
Gasket sealant	LG-1	790-129-9010	200 g	Tube	Used as adhesive or sealant for gaskets and packings of power train case, etc.
	LG-3	790-129-9070	1 Kg	Can	- Features: Resistance to heat - Used as sealant for flange surfaces and bolts at high temperature locations, used to prevent seizure - Used as sealant for heat resistant gasket for high temperature locations such as engine precombustion chamber, exhaust pipe
	LG-4	790-129-9020	200 g	Tube	- Features: Resistance to water, oil - Used as sealant for flange surface, thread - Also possible to use as sealant for flanges with large clearance - Used as sealant for mating surfaces of final drive case, transmission case
	LG-5	790-129-9080	1 Kg	Plastic container	- Used as sealant for various threads, pipe joints, flanges - Used as sealant for tapered plugs, elbows, nipples of hydraulic piping
	LG-6	09940-00011	250 g	Tube	- Features: Silicon based, resistance to heat, cold - Used as sealant for flange surface, thread - Used as sealant for oil pan, final drive case, etc.
	LG-7	09920-00150	150 g	Tube	- Features: Silicon based, quick hardening type - Used as sealant for flywheel housing, intake manifold, oil pan, thermostat housing, etc.
Rust prevention lubricant	—	09940-00051	60 g	Can	Used as lubricant for sliding parts (to prevent squeaking)
Molybdenum disulphide lubricant	—	09940-00040	200 g	Tube	- Used to prevent seizure or scuffing of the thread when press fitting or shrink fitting - Used as lubricant for linkage, bearings, etc.
Lithium grease	G2-LI	SYG-350LI SYG-400LI SYG-400LI-A SYG-160LI SYGA-160CNLI	Various	Various	General purpose type
Calcium grease	G2-CA	SSG2-400CA SYG2-350CA SYG2-400CA-A SYG2-160CA SYGA-16CNCA	Various	Various	Used for normal temperature, light load bearing at places in contact with water or steam
Molybdenum disulphide grease	—	SYG2-400M	400 g (10 per case)	Bellows type	Used for places with heavy load

FOREWORD
STANDARD TIGHTENING TORQUE
STANDARD TIGHTENING TORQUE
STANDARD TIGHTENING TORQUES OF BOLTS AND NUTS

The following charts give the standard tightening torques of bolts and nuts. Exceptions are given in section of **DISASSEMBLY AND ASSEMBLY**.

1 Kgm = 9.806 Nm

Thread diameter of bolt	Width across flats	 SAD00481	 SAD00482
		kgm	Nm
6	10	1.35 ± 0.15	13.2 ± 1.4
8	13	3.2 ± 0.3	31.4 ± 2.9
10	17	6.7 ± 0.7	65.7 ± 6.8
12	19	11.5 ± 1.0	112 ± 9.8
14	22	18.0 ± 2.0	177 ± 19
16	24	28.5 ± 3	279 ± 29
18	27	39 ± 4	383 ± 39
20	30	56 ± 6	549 ± 58
22	32	76 ± 8	745 ± 78
24	36	94.5 ± 10	927 ± 98
27	41	135 ± 15	1320 ± 140
30	46	175 ± 20	1720 ± 190
33	50	225 ± 25	2210 ± 240
36	55	280 ± 30	2750 ± 290
39	60	335 ± 35	3280 ± 340

★ This torque table does not apply to the bolts with which nylon packings or other nonferrous metal washers are to be used, or which require tightening to otherwise specified torque.

FOREWORD

STANDARD TIGHTENING TORQUE


TIGHTENING TORQUE OF SPLIT FLANGE BOLTS

Use these torques for split flange bolts.

Thread diameter of bolt	Width across flats	Tightening torque	
mm	mm	kgm	Nm
10	14	6.7 ± 0.7	65.7 ± 6.8
12	17	11.5 ± 1	112 ± 9.8
16	22	28.5 ± 3	279 ± 29

TIGHTENING TORQUE FOR FLARED NUTS

Use these torques for flared part of nut.

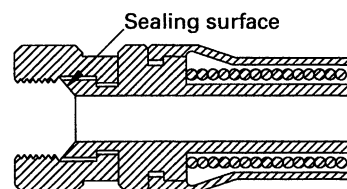

SAD00483

Thread diameter of nut part	Width across flats of nut part	Tightening torque	
mm	mm	kgm	Nm
14	19	2.5 ± 0.5	24.5 ± 4.9
18	24	5 ± 2	49 ± 19.6
22	27	8 ± 2	78.5 ± 19.6
24	32	14 ± 3	137.3 ± 29.4
30	36	18 ± 3	176.5 ± 29.4
33	41	20 ± 5	196.1 ± 49
36	46	25 ± 5	245.2 ± 49
42	55	30 ± 5	294.2 ± 49

FOREWORD**ELECTRIC WIRE CODE****ELECTRIC WIRE CODE**

In the wiring diagrams, various colors and symbols are employed to indicate the thickness of wires. This wire code table will help you understand WIRING DIAGRAMS.

Example: 5WB indicates a cable having a nominal number 5 and white coating with black stripe.

CLASSIFICATION BY THICKNESS

Nominal number	Copper wire			Cable O.D. (mm)	Current rating (A)	Applicable circuit
	Number of strands	Dia. of strands (mm)	Cross section (mm ²)			
0.85	11	0.32	0.88	2.4	12	Starting, lighting, signal etc.
2	26	0.32	2.09	3.1	20	Lighting, signal etc.
5	65	0.32	5.23	4.6	37	Charging and signal
15	84	0.45	13.36	7.0	59	Starting (Glow plug)
40	85	0.80	42.73	11.4	135	Starting
60	127	0.80	63.84	13.6	178	Starting
100	217	0.80	109.1	17.6	230	Starting

CLASSIFICATION BY COLOR AND CODE

Priority	Circuits		Charging	Ground	Starting	Lighting	Instrument	Signal	Other
	Classi- fication								
1	Pri- mary	Code	W	B	B	R	Y	G	L
		Color	White	Black	Black	Red	Yellow	Green	Blue
2	Auxi- liary	Code	WR	—	BW	RW	YR	GW	LW
		Color	White & Red	—	Black & White	Red & White	Yellow & Red	Green & White	Blue & White
3		Code	WB	—	BY	RB	YB	GR	LR
		Color	White & Black	—	Black & Yellow	Red & Black	Yellow & Black	Green & Red	Blue & Red
4		Code	WL	—	BR	RY	YG	GY	LY
		Color	White & Blue	—	Black & Red	Red & Yellow	Yellow & Green	Green & Yellow	Blue & Yellow
5		Code	WG	—	—	RG	YL	GB	LB
		Color	White & Green	—	—	Red & Green	Yellow & Blue	Green & Black	Blue & Black
6		Code	—	—	—	RL	YW	GL	—
		Color	—	—	—	Red & Blue	Yellow & White	Green & Blue	—

CONVERSION TABLE

METHOD OF USING THE CONVERSION TABLE

The Conversion Table in this section is provided to enable simple conversion of figures. For details of the method of using the Conversion Table, see the example given below.

EXAMPLE

- Method of using the Conversion Table to convert from millimeters to inches

1. Convert 55 mm into inches.

- Locate the number 50 in the vertical column at the left side, take this as (A), then draw a horizontal line from (A).
- Locate the number 5 in the row across the top, take this as (B), then draw a perpendicular line down from (B).
- Take the point where the two lines cross as (C). This point (C) gives the value when converting from millimeters to inches. Therefore, 55 mm = 2.165 inches.

2. Convert 550 mm into inches.

- The number 550 does not appear in the table, so divide by 10 (move the decimal point one place to the left) to convert it to 55 mm.
- Carry out the same procedure as above to convert 55 mm to 2.165 inches.
- The original value (550 mm) was divided by 10, so multiply 2.165 inches by 10 (move the decimal point one place to the right) to return to the original value. This gives 550 mm = 21.65 inches.

Millimeters to inches

1 mm = 0.03937 in

	0	1	2	3	4	5	6	7	8	9
0	0	0.039	0.079	0.118	0.157	0.197	0.236	0.276	0.315	0.354
10	0.394	0.433	0.472	0.512	0.551	0.591	0.630	0.669	0.709	0.748
20	0.787	0.827	0.866	0.906	0.945	0.984	1.024	1.063	1.102	1.142
30	1.181	1.220	1.260	1.299	1.339	1.378	1.417	1.457	1.496	1.536
40	1.575	1.614	1.654	1.693	1.732	1.772	1.811	1.850	1.890	1.929
50	1.969	2.008	2.047	2.087	2.126	2.165	2.205	2.244	2.283	2.323
60	2.362	2.402	2.441	2.480	2.520	2.559	2.598	2.638	2.677	2.717
70	2.756	2.795	2.835	2.874	2.913	2.953	2.992	3.032	3.071	3.110
80	3.150	3.189	3.228	3.268	3.307	3.346	3.386	3.425	3.465	3.504
90	3.543	3.583	3.622	3.661	3.701	3.740	3.780	3.819	3.858	3.898

FOREWORD**CONVERSION TABLE****Millimeters to Inches**

1 mm = 0.03937 in

	0	1	2	3	4	5	6	7	8	9
0	0	0.039	0.079	0.118	0.157	0.197	0.236	0.276	0.315	0.354
10	0.394	0.433	0.472	0.512	0.551	0.591	0.630	0.669	0.709	0.748
20	0.787	0.827	0.866	0.906	0.945	0.984	1.024	1.063	1.102	1.142
30	1.181	1.220	1.260	1.299	1.339	1.378	1.417	1.457	1.496	1.536
40	1.575	1.614	1.654	1.693	1.732	1.772	1.811	1.850	1.890	1.929
50	1.969	2.008	2.047	2.087	2.126	2.165	2.205	2.244	2.283	2.323
60	2.362	2.402	2.441	2.480	2.520	2.559	2.598	2.638	2.677	2.717
70	2.756	2.795	2.835	2.874	2.913	2.953	2.992	3.032	3.071	3.110
80	3.150	3.189	3.228	3.268	3.307	3.346	3.386	3.425	3.465	3.504
90	3.543	3.583	3.622	3.661	3.701	3.740	3.780	3.819	3.858	3.898

Kilogram to Pound

1 kg = 2.2046 lb

	0	1	2	3	4	5	6	7	8	9
0	0	2.20	4.41	6.61	8.82	11.02	13.23	15.43	17.64	19.84
10	22.05	24.25	26.46	28.66	30.86	33.07	35.27	37.48	39.68	41.89
20	44.09	46.30	48.50	50.71	51.91	55.12	57.32	59.53	61.73	63.93
30	66.14	68.34	70.55	72.75	74.96	77.16	79.37	81.57	83.78	85.98
40	88.18	90.39	92.59	94.80	97.00	99.21	101.41	103.62	105.82	108.03
50	110.23	112.44	114.64	116.85	119.05	121.25	123.46	125.66	127.87	130.07
60	132.28	134.48	136.69	138.89	141.10	143.30	145.51	147.71	149.91	152.12
70	154.32	156.53	158.73	160.94	163.14	165.35	167.55	169.76	171.96	174.17
80	176.37	178.57	180.78	182.98	185.19	187.39	189.60	191.80	194.01	196.21
90	198.42	200.62	202.83	205.03	207.24	209.44	211.64	213.85	216.05	218.26

FOREWORD
CONVERSION TABLE
Liter to U.S. Gallon
 $1\ell = 0.2642 \text{ U.S. Gal}$

	0	1	2	3	4	5	6	7	8	9
0	0	0.264	0.528	0.793	1.057	1.321	1.585	1.849	2.113	2.378
10	2.642	2.906	3.170	3.434	3.698	3.963	4.227	4.491	4.755	5.019
20	5.283	5.548	5.812	6.076	6.340	6.604	6.869	7.133	7.397	7.661
30	7.925	8.189	8.454	8.718	8.982	9.246	9.510	9.774	10.039	10.303
40	10.567	10.831	11.095	11.359	11.624	11.888	12.152	12.416	12.680	12.944
50	13.209	13.473	13.737	14.001	14.265	14.529	14.795	15.058	15.322	15.586
60	15.850	16.115	16.379	16.643	16.907	17.171	17.435	17.700	17.964	18.228
70	18.492	18.756	19.020	19.285	19.549	19.813	20.077	20.341	20.605	20.870
80	21.134	21.398	21.662	21.926	22.190	22.455	22.719	22.983	23.247	23.511
90	23.775	24.040	24.304	24.568	24.832	25.096	25.361	25.625	25.889	26.153

Liter to U.K. Gallon
 $1\ell = 0.21997 \text{ U.K. Gal}$

	0	1	2	3	4	5	6	7	8	9
0	0	0.220	0.440	0.660	0.880	1.100	1.320	1.540	1.760	1.980
10	2.200	2.420	2.640	2.860	3.080	3.300	3.520	3.740	3.950	4.179
20	4.399	4.619	4.839	5.059	5.279	5.499	5.719	5.939	6.159	6.379
30	6.599	6.819	7.039	7.259	7.479	7.699	7.919	8.139	8.359	8.579
40	8.799	9.019	9.239	9.459	9.679	9.899	10.119	10.339	10.559	10.778
50	10.998	11.281	11.438	11.658	11.878	12.098	12.318	12.528	12.758	12.978
60	13.198	13.418	13.638	13.858	14.078	14.298	14.518	14.738	14.958	15.178
70	15.398	15.618	15.838	16.058	16.278	16.498	16.718	16.938	17.158	17.378
80	17.598	17.818	18.037	18.257	18.477	18.697	18.917	19.137	19.357	19.577
90	19.797	20.017	20.237	20.457	20.677	20.897	21.117	21.337	21.557	21.777

FOREWORD**CONVERSION TABLE****kgm to ft. lb**

1 kgm = 7.233 ft. lb

	0	1	2	3	4	5	6	7	8	9
0	0	7.2	14.5	21.7	28.9	36.2	43.4	50.6	57.9	65.1
10	72.3	79.6	86.8	94.0	101.3	108.5	115.7	123.0	130.2	137.4
20	144.7	151.9	159.1	166.4	173.6	180.8	188.1	195.3	202.5	209.8
30	217.0	224.2	231.5	238.7	245.9	253.2	260.4	267.6	274.9	282.1
40	289.3	296.6	303.8	311.0	318.3	325.5	332.7	340.0	347.2	354.4
50	361.7	368.9	376.1	383.4	390.6	397.8	405.1	412.3	419.5	426.8
60	434.0	441.2	448.5	455.7	462.9	470.2	477.4	484.6	491.8	499.1
70	506.3	513.5	520.8	528.0	535.2	542.5	549.7	556.9	564.2	571.4
80	578.6	585.9	593.1	600.3	607.6	614.8	622.0	629.3	636.5	643.7
90	651.0	658.2	665.4	672.7	679.9	687.1	694.4	701.6	708.8	716.1
100	723.3	730.5	737.8	745.0	752.2	759.5	766.7	773.9	781.2	788.4
110	795.6	802.9	810.1	817.3	824.6	831.8	839.0	846.3	853.5	860.7
120	868.0	875.2	882.4	889.7	896.9	904.1	911.4	918.6	925.8	933.1
130	940.3	947.5	954.8	962.0	969.2	976.5	983.7	990.9	998.2	1005.4
140	1012.6	1019.9	1027.1	1034.3	1041.5	1048.8	1056.0	1063.2	1070.5	1077.7
150	1084.9	1092.2	1099.4	1106.6	1113.9	1121.1	1128.3	1135.6	1142.8	1150.0
160	1157.3	1164.5	1171.7	1179.0	1186.2	1193.4	1200.7	1207.9	1215.1	1222.4
170	1129.6	1236.8	1244.1	1251.3	1258.5	1265.8	1273.0	1280.1	1287.5	1294.7
180	1301.9	1309.2	1316.4	1323.6	1330.9	1338.1	1345.3	1352.6	1359.8	1367.0
190	1374.3	1381.5	1388.7	1396.0	1403.2	1410.4	1417.7	1424.9	1432.1	1439.4

FOREWORD**CONVERSION TABLE****kg/cm² to lb/in²**1kg/cm² = 14.2233 lb/in²

	0	1	2	3	4	5	6	7	8	9
0	0	14.2	28.4	42.7	56.9	71.1	85.3	99.6	113.8	128.0
10	142.2	156.5	170.7	184.9	199.1	213.4	227.6	241.8	256.0	270.2
20	284.5	298.7	312.9	327.1	341.4	355.6	369.8	384.0	398.3	412.5
30	426.7	440.9	455.1	469.4	483.6	497.8	512.0	526.3	540.5	554.7
40	568.9	583.2	597.4	611.6	625.8	640.1	654.3	668.5	682.7	696.9
50	711.2	725.4	739.6	753.8	768.1	782.3	796.5	810.7	825.0	839.2
60	853.4	867.6	881.8	896.1	910.3	924.5	938.7	953.0	967.2	981.4
70	995.6	1010	1024	1038	1053	1067	1081	1095	1109	1124
80	1138	1152	1166	1181	1195	1209	1223	1237	1252	1266
90	1280	1294	1309	1323	1337	1351	1365	1380	1394	1408
100	1422	1437	1451	1465	1479	1493	1508	1522	1536	1550
110	1565	1579	1593	1607	1621	1636	1650	1664	1678	1693
120	1707	1721	1735	1749	1764	1778	1792	1806	1821	1835
130	1849	1863	1877	1892	1906	1920	1934	1949	1963	1977
140	1991	2005	2020	2034	2048	2062	2077	2091	2105	2119
150	2134	2148	2162	2176	2190	2205	2219	2233	2247	2262
160	2276	2290	2304	2318	2333	2347	2361	2375	2389	2404
170	2418	2432	2446	2460	2475	2489	2503	2518	2532	2546
180	2560	2574	2589	2603	2617	2631	2646	2660	2674	2688
190	2702	2717	2731	2745	2759	2773	2788	2802	2816	2830
200	2845	2859	2873	2887	2901	2916	2930	2944	2958	2973
210	2987	3001	3015	3030	3044	3058	3072	3086	3101	3115
220	3129	3143	3158	3172	3186	3200	3214	3229	3243	3257
230	3271	3286	3300	3314	3328	3343	3357	3371	3385	3399
240	3414	3428	3442	3456	3470	3485	3499	3513	3527	3542

FOREWORD

CONVERSION TABLE

Temperature

Fahrenheit-Centigrade Conversion ; a simple way to convert a Fahrenheit temperature reading into a Centigrade temperature reading or vice versa is to enter the accompanying table in the center or boldface column of figures.

These figures refer to the temperature in either Fahrenheit or Centigrade degrees.

If it is desired to convert from Fahrenheit to Centigrade degrees, consider the center column as a table of Fahrenheit temperatures and read the corresponding Centigrade temperature in the column at the left.

If it is desired to convert from Centigrade to Fahrenheit degrees, consider the center column as a table of Centigrade values, and read the corresponding Fahrenheit temperature on the right.

$$1^{\circ}\text{C} = 33.8^{\circ}\text{F}$$

°C		°F	°C		°F	°C		°F	°C		°F
-40.4	-40	-40.0	-11.7	11	51.8	7.8	46	114.8	27.2	81	117.8
-37.2	-35	-31.0	-11.1	12	53.6	8.3	47	116.6	27.8	82	179.6
-34.4	-30	-22.0	-10.6	13	55.4	8.9	48	118.4	28.3	83	181.4
-31.7	-25	-13.0	-10.0	14	57.2	9.4	49	120.2	28.9	84	183.2
-28.9	-20	-4.0	-9.4	15	59.0	10.0	50	122.0	29.4	85	185.0
-28.3	-19	-2.2	-8.9	16	60.8	10.6	51	123.8	30.0	86	186.8
-27.8	-18	-0.4	-8.3	17	62.6	11.1	52	125.6	30.6	87	188.6
-27.2	-17	1.4	-7.8	18	64.4	11.7	53	127.4	31.1	88	190.4
-26.7	-16	3.2	-7.2	19	66.2	12.2	54	129.2	31.7	89	192.2
-26.1	-15	5.0	-6.7	20	68.0	12.8	55	131.0	32.2	90	194.0
-25.6	-14	6.8	-6.1	21	69.8	13.3	56	132.8	32.8	91	195.8
-25.0	-13	8.6	-5.6	22	71.6	13.9	57	134.6	33.3	92	197.6
-24.4	-12	10.4	-5.0	23	73.4	14.4	58	136.4	33.9	93	199.4
-23.9	-11	12.2	-4.4	24	75.2	15.0	59	138.2	34.4	94	201.2
-23.3	-10	14.0	-3.9	25	77.0	15.6	60	140.0	35.0	95	203.0
-22.8	-9	15.8	-3.3	26	78.8	16.1	61	141.8	35.6	96	204.8
-22.2	-8	17.6	-2.8	27	80.6	16.7	62	143.6	36.1	97	206.6
-21.7	-7	19.4	-2.2	28	82.4	17.2	63	145.4	36.7	98	208.4
-21.1	-6	21.2	-1.7	29	84.2	17.8	64	147.2	37.2	99	210.2
-20.6	-5	23.0	-1.1	30	86.0	18.3	65	149.0	37.8	100	212.0
-20.0	-4	24.8	-0.6	31	87.8	18.9	66	150.8	40.6	105	221.0
-19.4	-3	26.6	0	32	89.6	19.4	67	152.6	43.3	110	230.0
-18.9	-2	28.4	0.6	33	91.4	20.0	68	154.4	46.1	115	239.0
-18.3	-1	30.2	1.1	34	93.2	20.6	69	156.2	48.9	120	248.0
-17.8	0	32.0	1.7	35	95.0	21.1	70	158.0	51.7	125	257.0
-17.2	1	33.8	2.2	36	96.8	21.7	71	159.8	54.4	130	266.0
-16.7	2	35.6	2.8	37	98.6	22.2	72	161.6	57.2	135	275.0
-16.1	3	37.4	3.3	38	100.4	22.8	73	163.4	60.0	140	284.0
-15.6	4	39.2	3.9	39	102.2	23.3	74	165.2	62.7	145	293.0
-15.0	5	41.0	4.4	40	104.0	23.9	75	167.0	65.6	150	302.0
-14.4	6	42.8	5.0	41	105.8	24.4	76	168.8	68.3	155	311.0
-13.9	7	44.6	5.6	42	107.6	25.0	77	170.6	71.1	160	320.0
-13.3	8	46.4	6.1	43	109.4	25.6	78	172.4	73.9	165	329.0
-12.8	9	48.2	6.7	44	111.2	26.1	79	174.2	76.7	170	338.0
-12.2	10	50.0	7.2	45	113.0	26.7	80	176.0	79.4	175	347.0

20 TESTING AND ADJUSTING

Table of judgement standard value.....	20- 2	Testing EPC valve, solenoid valve	
Standard value table for electrical parts	20- 13	output pressure	20- 39
Checking and adjusting belt tension		Measuring PPC valve output pressure	
for air conditioner compressor	20- 22	and testing PPC shuttle valve	20- 41
Adjusting engine speed sensor	20- 23	Adjusting work equipment •	
Testing and adjusting governor motor		swing PPC valve	20- 43
lever stroke	20- 24	Adjusting travel lever	20- 44
Testing clearance of swing circle bearing	20- 26	Testing travel deviation.....	20- 45
Testing and adjusting track shoe tension	20- 27	Testing locations causing hydraulic drift	
Testing and adjusting hydraulic pressure		of work equipment	20- 46
in work equipment, swing, travel circuit ...	20- 28	Measuring oil leakage	20- 48
Testing and adjusting TVC valve output		Releasing remaining pressure	
pressure (servo piston input pressure)	20- 32	in hydraulic circuit	20- 49
Testing and adjusting LS valve output		Bleeding air	20- 50
pressure (servo piston input pressure)		TROUBLESHOOTING	20- 53
and LS differential	20- 34		
Testing and adjusting control pump circuit			
oil pressure	20- 37		

-  When carrying out testing, adjusting, or troubleshooting, park the machine on level ground and use the safety pins and blocks to prevent the machine from moving.
-  When carrying out work together with other workers, always use signals and do not let unauthorized people near the machine.
-  When checking the water level, always wait for the water to cool down. If the radiator cap is removed when the water is still hot, the water will spurt out and cause burns.
-  Be careful not to get caught in the fan, fan belt, or other rotating parts.


TABLE OF JUDGEMENT STANDARD VALUE

● FOR ENGINE

Machine model				PC210-6K		PC240-6K	
Engine				S6D102L		SA6D102L	
Item	Measurement conditions		Unit	Standard value	Permissible value	Standard value	Permissible value
Engine speed	High idling	Working	rpm	2,130 ± 60	—	2,300 ± 60	—
		Traveling	rpm	2,390 ± 60	—	2,490 ± 60	—
	Low idling		rpm	1,066 ± 66	—	1,066 ± 66	—
	Rated speed	Working	rpm	1,950	—	2,100	—
		Traveling	rpm	2,200	—	2,300	—

TESTING AND ADJUSTING**TABLE OF JUDGEMENT STANDARD VALUE**● **FOR CHASSIS**

★ The standard values and permissible values shown in this table are all values for H/O (heavy-duty operation) mode.

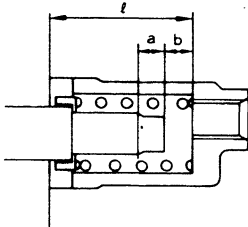Machine model					PC210, 240-6K					
Category	Item		Measurement conditions	Unit	Standard value			Permissible value		
Engine speed	At 2-pump relief	Normal	- Engine at high idling - Hydraulic oil temperature: 45 – 55°C - Coolant temperature: Within operating range 2-pump relief: Arm relief	rpm	PC210	PC240		PC210	PC240	
					2,150 ± 100	2,350 ± 100		–	–	
		At travel lever operate	- Arm relief - Travel lever operated in small movements - Engine at high idling		2,200 ± 100	2,300 ± 100		2,200 ± 100	2,300 ± 100	
	Speed when auto-deceleration is operated		- Fuel control dial at MAX. - Control lever at neutral		1,400 ± 120			1,400 ± 120		
Spool stroke	Boom control valve		 202F2302	mm	ℓ	a	b	ℓ	a	b
	Arm control valve									
	Bucket control valve				–	9.5 ± 0.5	9.5 ± 0.5	–	9.5 ± 0.5	9.5 ± 0.5
	Swing control valve									
	Travel control valve									
Travel of control levers	Boom control lever		- Center of lever knob - Read max. value to end of travel - Engine stopped - Excluding neutral play	mm	76 ± 8			Max. 84 Min. 68		
	Arm control lever				76 ± 8			Max. 84 Min. 68		
	Bucket control lever				76 ± 8			Max. 84 Min. 68		
	Swing control lever				76 ± 8			Max. 84 Min. 68		
	Travel control lever				115 ± 11			Max. 126 Min. 104		
	Play of control lever				Max. 10			Max. 15		
Operating force of control levers	Boom control lever		- Engine at high idling - Oil temperature: 45 – 55°C - Fit push-pull scale to center of control lever knob to measure - Measure max. value to end of travel	N (kg)	17.7 ± 3.9 (1.8 ± 0.4)			Max. 24.5 (Max. 2.5)		
	Arm control lever				17.7 ± 3.9 (1.8 ± 0.4)			Max. 24.5 (Max. 2.5)		
	Bucket control lever				14.7 ± 3.9 (1.5 ± 0.4)			Max. 21.6 (Max. 2.2)		
	Swing control lever				14.7 ± 3.9 (1.5 ± 0.4)			Max. 2.6 (Max. 2.2)		
	Travel control lever				Lever	24.5 ± 5.9 (2.5 ± 0.6)			Max. 39.2 (Max. 4.0)	
			Pedal	74.5 ± 18.6 (7.6 ± 1.9)			Max. 107.8 (Max. 11)			

K20506

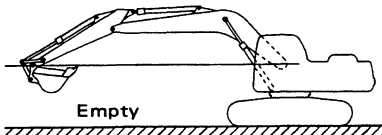
 
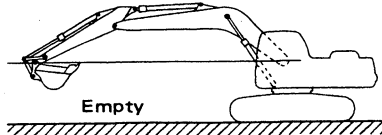
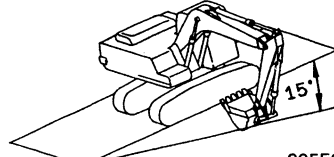
TESTING AND ADJUSTING

TABLE OF JUDGEMENT STANDARD VALUE

Machine model					PC210, 240-6K	
Category	Item	Measurement conditions		Unit	Standard value	Permissible value
Hydraulic pressure	Boom	- Hydraulic oil temperature: 45 – 55°C - Relief pressure with engine at high idling (Relieve only circuit to be measured) - In H/O mode - Figures in [] are when power max. function is used (reference) - Pump outlet port pressure ★ 1: For travel, measure oil pressure for relief on one side		MPa (kg/cm ²)	31.85 ± 0.98 (325 ± 10)	Max. 33.81 (Max.345) Min. 30.38 (Min. 310)
	Arm				$\left[\begin{array}{cc} 34.79 & +1.47 \\ & -0.98 \end{array} \right]$ $\left(\begin{array}{cc} 355 & +15 \\ & -10 \end{array} \right)$	$\left[\begin{array}{cc} \text{Max. 37.24} & (\text{Max.380}) \\ \text{Min. 33.81} & (\text{Min. 345}) \end{array} \right]$
	Bucket					
	Swing				$28.91 \begin{array}{c} +1.47 \\ -0.98 \end{array} \left(\begin{array}{c} 295 \\ -10 \end{array} \right)$	Max. 30.87 (Max. 315) Min. 27.44 (Min. 280)
	Travel				$34.79 \begin{array}{c} +1.47 \\ -0.98 \end{array} \left(\begin{array}{c} 355 \\ -10 \end{array} \right)$	Max. 37.24 (Max. 380) Min. 33.81 (Min. 345)
	Control pump				$2.94 \begin{array}{c} +0.59 \\ 0 \end{array} \left(\begin{array}{c} 30 \\ 0 \end{array} \right)$	Max. 3.53 (Max. 36) Min. 2.94 (Min. 30)
	LS differential pressure	- Hydraulic oil temperature: 45 – 55°C - Engine at high idling - In H/O mode	Levers at neutral		2.94 ± 0.98 (30 ± 10)	2.94 ± 0.98 (30 ± 10)
			Travel speed Hi, rotating under no load		2.16 ± 0.098 (22 ± 1)	2.16 ± 0.098 (22 ± 1)
	TVC valve output pressure (servo piston input pressure)	- Engine at high idling - Hydraulic oil temperature: 45 – 55°C - In H/O mode	Control lever at neutral			
			1-pump relief		Normal operation	
			when power max. function is used			

K20506




TESTING AND ADJUSTING
TABLE OF JUDGEMENT STANDARD VALUE

Machine model				PC210, 240-6K			
Category	Item	Measurement conditions	Unit	Standard value		Permissible value	
Swing	Swing brake angle	Work equipment posture Max. reach  • Engine at high idling • Hydraulic oil temperature: 45 – 55°C • Stop after swinging one turn and measure distance that swing circle moves	Deg. (mm)	PC210 Max. 100	PC240 Max. 130	PC210 Max. 130	PC240 Max. 160
	Time taken to start swing	Work equipment posture Max. reach  • Engine at high idling • Hydraulic oil temperature: 45 – 55°C • In H/O mode • Time taken to swing 90° and 180° from starting position	90°	3.1 ± 0.3	3.2 ± 0.3	Max. 3.7	Max. 3.8
			180°	4.5 ± 0.5	4.6 ± 0.5	Max. 5.4	Max. 5.5
	Time taken to swing	Work equipment posture Max. reach  • Engine at high idling • Hydraulic oil temperature: 45 – 55°C • In H/O mode. • Swing one turn, and measure time taken to swing next 5 turns	sec.	24.2 ± 2	24.0 ± 2.5	Max. 30	Max. 30
	Hydraulic drift of swing	 • Engine stopped • Hydraulic oil temperature: 45 – 55°C • Set machine on 15° slope, and set upper structure at 90° to the side. • Make match marks on swing circle outer race and track frame. • Measure distance that match marks move apart after 5 minutes.	mm	0		0	
	Leakage from swing motor	• Engine at high idling • Hydraulic oil temperature: 45 – 55°C • Swing lock switch ON • Relieve swing circuit.	ℓ/min.	Max. 5		Max. 10	

K20506

TESTING AND ADJUSTING




TABLE OF JUDGEMENT STANDARD VALUE

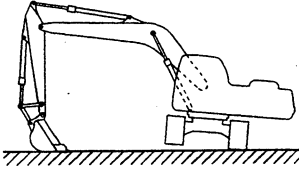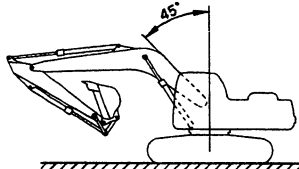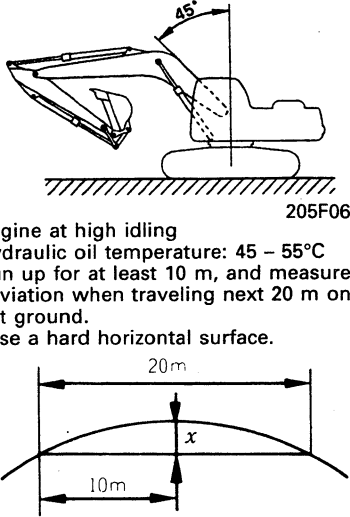Machine model					PC210, 240-6K			
Category	Item	Measurement conditions		Unit	Standard value		Permissible value	
Travel	Travel speed (1)	 205F06703 - Engine at high idling - Hydraulic oil temperature: 45 – 55°C - In H/O mode - Raise track on one side at a time, rotate one turn, then measure time taken for next 5 turns with no load.	Lo	sec.	PC210 STD: 50 ± 7 LC: 54.5 ± 8	PC240 STD: 52 ± 7 LC: 56.5 ± 8	PC210 STD: 43 – 61 LC: 46.5 – 66.5	PC240 STD: 45 – 63 LC: 48.5 – 68.5
			Mi		STD: 36.5 ± 5.5 LC: 39.5 ± 5.5	STD: 38 ± 5.5 LC: 41.5 ± 5.5	STD: 31 – 44 LC: 34 – 47	STD: 32.5 – 45.5 LC: 35.5 – 49
			Hi		STD: 27.5 ± 2 LC: 30 ± 2.5	STD: 29 ± 2 LC: 31 ± 2.5	STD: 25.5 – 31.5 LC: 27.5 – 35	STD: 27 – 33 LC: 28.5 – 36
	Travel speed (2)	 205F06704 - Engine at high idling - Hydraulic oil temperature: 45 – 55°C - In H/O mode - Run up for at least 10 m, and measure time taken to travel next 20 m on flat ground.	Lo	sec.	22.5 ± 3.5	21.0 ± 3.5	20 - 28	20 - 28
			Mi		16.0 ± 2.5	16.0 ± 2.5	14.5 - 21	14.5 - 21
			Hi		12.9 ± 1	13 ± 1	12 - 15	12 - 15
	Travel deviation	 205F06704 - Engine at high idling - Hydraulic oil temperature: 45 – 55°C - Run up for at least 10 m, and measure deviation when traveling next 20 m on flat ground. ★ Use a hard horizontal surface. ★ Measure dimension x 205F2402		mm	Max. 200		300	






K20506

TESTING AND ADJUSTING

TABLE OF JUDGEMENT STANDARD VALUE

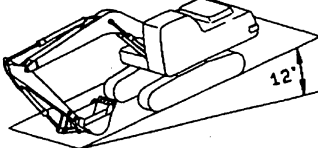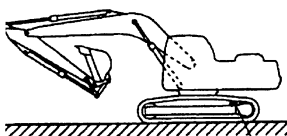
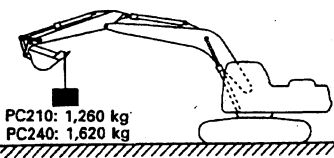
Machine model				PC210, 240-6K	
Category	Item	Measurement conditions	Unit	Standard value	Permissible value
Travel	Hydraulic drift of travel	 205F06705 - Engine stopped - Hydraulic oil temperature: 45 - 55 °C - Stop machine on 12° slope with sprocket facing straight up the slope. - Measure the distance the machine moves in 5 minutes.	mm	0	0
	Leakage of travel motor	 Lock pin 205F06706 - Engine at high idling - Hydraulic oil temperature: 45 - 55°C - Lock shoes and relieve travel circuit.	ℓ/mm	13.6	27.2
Work equipment	Total work equipment (hydraulic drift at tip of bucket teeth)	Posture for measurement  PC210: 1,260 kg PC240: 1,620 kg 205F06707	mm	Max. 600	Max.900
	Boom cylinder (amount of retraction of cylinder)	Place in above posture and measure extension or retraction of each cylinder downward movement at tip of bucket teeth.		Max. 18	Max. 27
	Arm cylinder (amount of extension of cylinder)	- Bucket: Rated load - Horizontal, flat ground - Levers at neutral - Engine stopped		Max. 160	Max. 240
	Bucket cylinder (amount of retraction of cylinder)	- Hydraulic oil temperature: 45 - 55°C - Start measuring immediately after setting. - Measure hydraulic drift every 5 minutes, and judge from results for 15 minutes.		Max. 35	Max. 53

 TESTING AND ADJUSTING
TABLE OF JUDGEMENT STANDARD VALUE

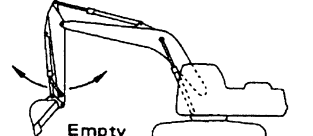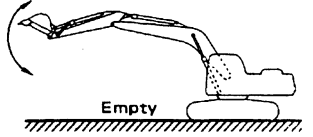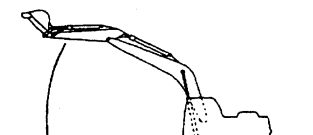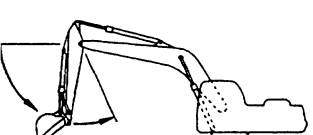Applicable model					PC210, 240-6K			
Category	Item	Measurement	Unit		Standard value		Permissible value	
Work equipment	Work equipment speed	Boom Bucket teeth in contact with ground  Empty 205F06708 RAISE	sec		PC210	PC240	PC210	PC240
		Cylinder fully extended 2.8 ± 0.3 2.4 ± 0.3 • Engine at high idling • Hydraulic oil temperature: 45 - 55°C • In H/O mode LOWER			3.5 ± 0.4	3.7 ± 0.4	Max 4.3	Max. 4.3
		Arm Cylinder fully retracted  Empty 205F06709 IN			2.8 ± 0.3 2.4 ± 0.3	3.2 ± 0.3	Max 3.2 Max. 2.8	Max. 3.5
		Fully extended • Engine at high idling • Hydraulic oil temperature: 45 - 55°C • In H/O mode OUT			3.6 ± 0.4	3.8 ± 0.4	Max 4.5	Max. 4.7
	Bucket	Cylinder fully retracted  Empty 205F06710 CURL	sec		2.9 ± 0.3	3.1 ± 0.3	Max. 3.7	Max. 3.9
		Fully extended • Engine at high idling • Hydraulic oil temperature: 45 - 55°C • In H/O mode DUMP			3.5 ± 0.4	3.7 ± 0.4	Max 4.2	Max. 4.5
	Time lag	Boom  205F06711 • Lower boom and measure time taken from point where bucket contracts ground to point where chassis rises from ground • Engine at low idling • Hydraulic oil temperature: 45 - 55°C	sec		Max. 1.0		Max. 1.2	
		Arm  205F06712 • Stop arm suddenly and measure time taken for arm to stop • Engine at low idling • Hydraulic oil temperature: 45 - 55°C			Max. 1.0		Max. 2.8	

TESTING AND ADJUSTING

TABLE OF JUDGEMENT STANDARD VALUE

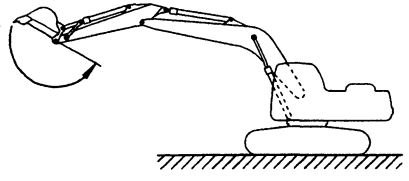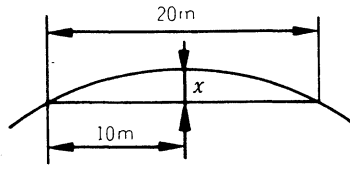Machine model					PC210, 240-6K			
Category	Item		Measurement conditions	Unit	Standard value		Permissible value	
Work equipment	Time lag	Bucket	 205F06713	sec.	Max. 1.0	Max. 3.6		
			- Stop bucket suddenly and measure time taken for bucket to stop at bottom and then start again - Engine at low idling - Hydraulic oil temperature: 45 – 55°C					
	Internal leakage	Cylinders	- Hydraulic oil temperature: 45 – 55°C - Engine at high idling - Relieve circuit to be measured	cc/min	4.5	20		
Center swivel joint			10		50			
Performance in compound operation	Travel deviation when work equipment + travel are operated		- Engine at high idling - Hydraulic oil temperature: 45 – 55°C ★ Use a hard horizontal surface.  205F2402	mm	Max. 200	Max. 220		
		★ Measure dimension x						
Performance of hydraulic pump	Hydraulic pump delivery	Control pump	- Oil temperature: 45 – 55°C - Measure with engine at rated speed - At relief valve set pressure 3.14 MPa (32 kg/cm²)	ℓ/min.	PC210	PC240	PC210	PC240
		Main pump	See next page		Min. 27.2	Min. 29.9	Min. 24.5	Min. 26.9
						See next page		

K20506


TESTING AND ADJUSTING

TABLE OF JUDGEMENT STANDARD VALUE

Category

PC210: Discharge amount of main piston pump (in H/O mode)

Performance of hydraulic pump

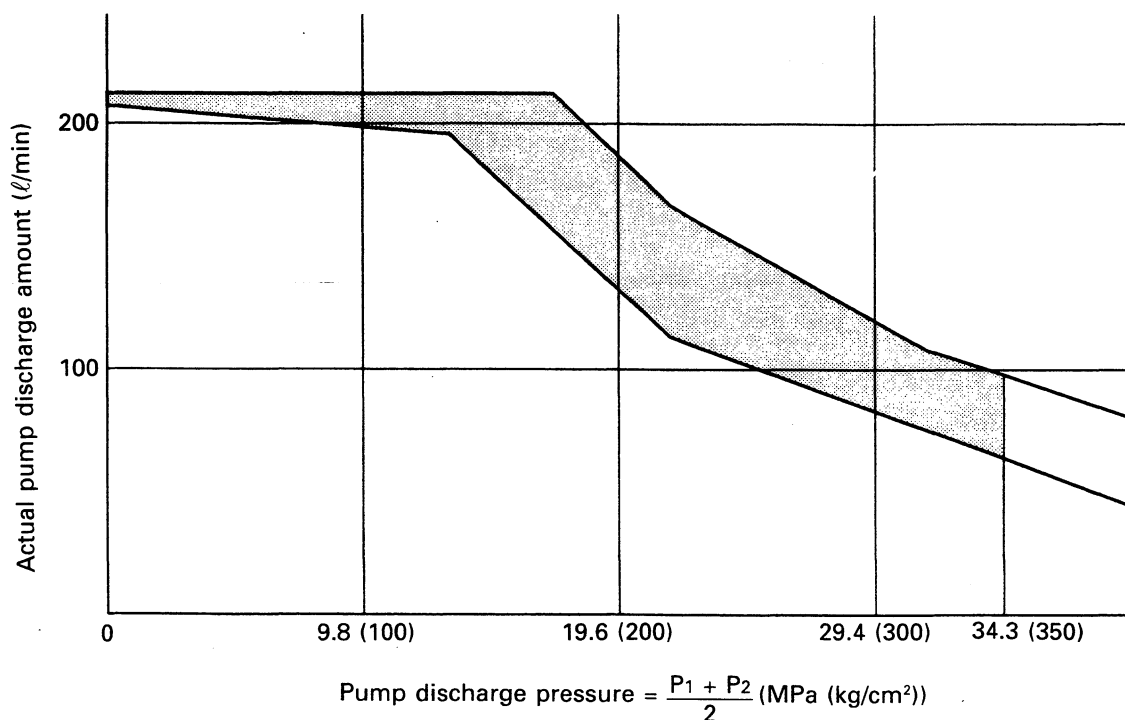

205F06300

- Pump speed: At 2200 rpm, TVC current 180 mA

Check point	Test pump discharge pressure (MPa (kg/cm ²))	Discharge pressure of other pump (MPa (kg/cm ²))	Average pressure (MPa (kg/cm ²))	Standard value for discharge amount Q (ℓ/min)	Judgement standard lower limit Q (ℓ/min)
As desired	P ₁	P ₂	$\frac{P_1 + P_2}{2}$	See graph	See graph


- ★ As far as possible, bring pump discharge pressures P₁ and P₂ as close as possible to the average pressure when measuring.
The error is large near the point where the graph curves, so avoid measuring at this point.
- ★ When measuring with the pump mounted on the machine, if it is impossible to set the engine speed to the specified speed with the fuel control dial, take the pump discharge amount and the engine speed at the point of measurement, and use them as a base for calculating the pump discharge amount at the specified speed.

K20506

Cate-
gory

PC240: Discharge amount of main piston pump (in H/O mode)

Performance of hydraulic pump

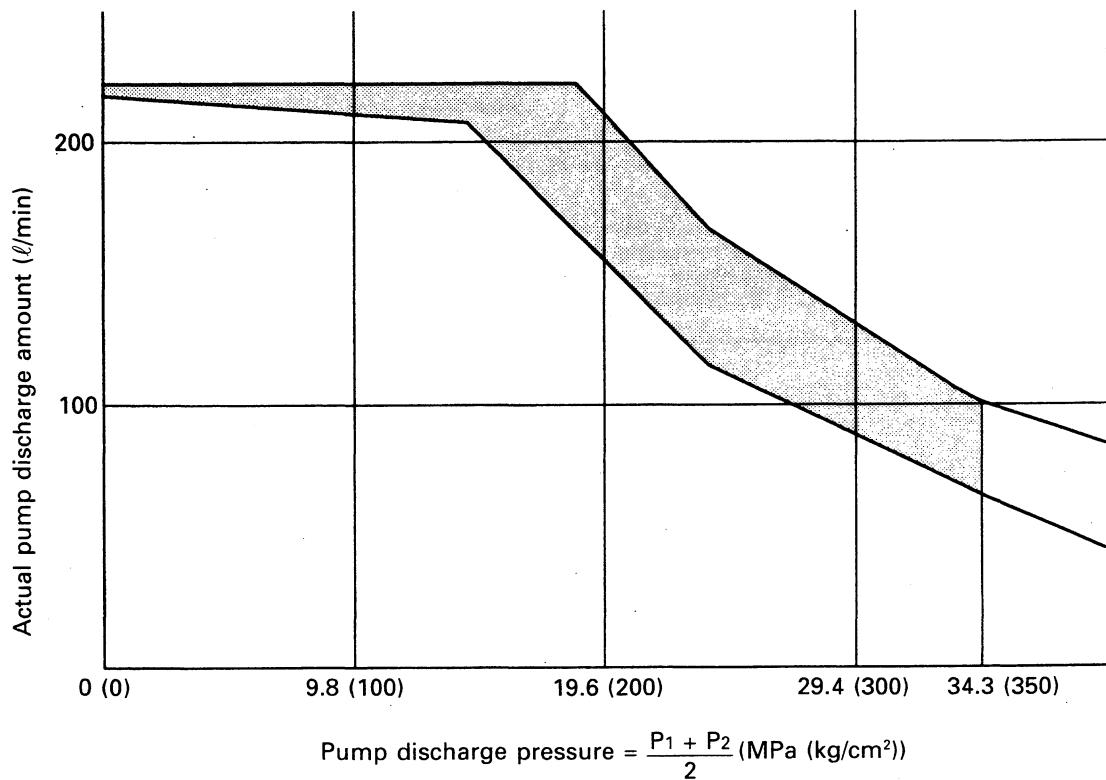

205F06301

- Pump speed: At 2300 rpm, TVC current 180 mA

Check point	Test pump discharge pressure (MPa (kg/cm ²))	Discharge pressure of other pump (MPa (kg/cm ²))	Average pressure (MPa (kg/cm ²))	Standard value for discharge amount Q (ℓ/min)	Judgement standard lower limit Q (ℓ/min)
As desired	P ₁	P ₂	$\frac{P_1 + P_2}{2}$	See graph	See graph


- ★ As far as possible, bring pump discharge pressures P₁ and P₂ as close as possible to the average pressure when measuring.
The error is large near the point where the graph curves, so avoid measuring at this point.
- ★ When measuring with the pump mounted on the machine, if it is impossible to set the engine speed to the specified speed with the fuel control dial, take the pump discharge amount and the engine speed at the point of measurement, and use them as a base for calculating the pump discharge amount at the specified speed.

TESTING AND ADJUSTING

TABLE OF JUDGEMENT STANDARD VALUE

Flow control characteristics of TVC valve (STD)

★ The values in this table are used as reference values when carrying out troubleshooting.

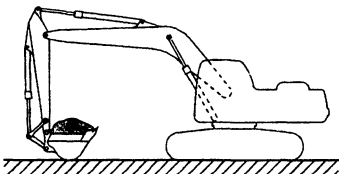Category	Item	Measurement conditions	Unit	PC210	PC240
Performance in compound operations	Time taken for swing for boom RAISE + starting swing	 205F06714 • Engine at high idling • Hydraulic oil temperature: 45 – 55°C • In H/O mode • Load the bucket with the rated load and measure the time taken from the position of starting the swing to the point of passing the 90° position.	sec.	4.2 ± 0.4	

K20506

STANDARD VALUE TABLE FOR ELECTRICAL PARTS

System	Component		Connector No.	Inspection method	Judgement table	Measurement conditions									
Engine throttle controller system	Fuel control dial		E06 (male)	Measure resistance	If the condition is as shown in the table below, it is normal. <table><tr><td>Between (1) – (2)</td><td>0.25 – 7 kΩ</td></tr><tr><td>Between (2) – (3)</td><td>0.25 – 7 kΩ</td></tr><tr><td>Between (1) – (3)</td><td>4 – 6 kΩ</td></tr></table>	Between (1) – (2)	0.25 – 7 kΩ	Between (2) – (3)	0.25 – 7 kΩ	Between (1) – (3)	4 – 6 kΩ	1) Turn starting switch OFF. 2) Disconnect connector E06.			
	Between (1) – (2)	0.25 – 7 kΩ													
	Between (2) – (3)	0.25 – 7 kΩ													
	Between (1) – (3)	4 – 6 kΩ													
	Governor motor	Potentiometer	E04 (male)	Measure resistance	If the condition is as shown in the table below, it is normal. <table><tr><td>Between (1) – (2)</td><td>0.25 – 7 kΩ</td></tr><tr><td>Between (2) – (3)</td><td>0.25 – 7 kΩ</td></tr><tr><td>Between (1) – (3)</td><td>4 – 6 kΩ</td></tr></table>	Between (1) – (2)	0.25 – 7 kΩ	Between (2) – (3)	0.25 – 7 kΩ	Between (1) – (3)	4 – 6 kΩ	1) Turn starting switch OFF. 2) Disconnect connector.			
		Between (1) – (2)	0.25 – 7 kΩ												
		Between (2) – (3)	0.25 – 7 kΩ												
		Between (1) – (3)	4 – 6 kΩ												
	Motor	E05 (male)	Measure resistance	If the condition is as shown in the table below, it is normal. <table><tr><td>Between (1) – (2)</td><td>2.5 – 7.5 Ω</td></tr><tr><td>Between (3) – (4)</td><td>2.5 – 7.5 Ω</td></tr><tr><td>Between (1) – (3)</td><td>No continuity</td></tr><tr><td>Between (1) – chassis</td><td>No continuity</td></tr><tr><td>Between (3) – chassis</td><td>No continuity</td></tr></table>	Between (1) – (2)	2.5 – 7.5 Ω	Between (3) – (4)	2.5 – 7.5 Ω	Between (1) – (3)	No continuity	Between (1) – chassis	No continuity	Between (3) – chassis	No continuity	1) Turn starting switch OFF. 2) Disconnect connector E05.
				Between (1) – (2)	2.5 – 7.5 Ω										
				Between (3) – (4)	2.5 – 7.5 Ω										
				Between (1) – (3)	No continuity										
				Between (1) – chassis	No continuity										
	Between (3) – chassis	No continuity													
	Engine throttle controller	Power source voltage	E01	Measure voltage	If the condition is as shown in the table below, it is normal. <table><tr><td>Between (1) – (12)</td><td>20 – 30 V</td></tr><tr><td>Between (2) – (12)</td><td>20 – 30 V</td></tr></table>	Between (1) – (12)	20 – 30 V	Between (2) – (12)	20 – 30 V	1) Turn starting switch ON. 2) Insert T-adapter.					
		Between (1) – (12)		20 – 30 V											
		Between (2) – (12)		20 – 30 V											
Fuel control dial		Measure voltage		If the condition is as shown in the table below, it is normal. <table><tr><td rowspan="2">Between (5) – (16)</td><td>Power source</td><td>4.75 – 5.25 V</td></tr><tr><td>Low idling</td><td>4.0 – 4.75 V</td></tr><tr><td rowspan="2">Between (7) – (16)</td><td>High idling</td><td>0.25 – 1.0 V</td></tr></table>	Between (5) – (16)	Power source	4.75 – 5.25 V	Low idling	4.0 – 4.75 V	Between (7) – (16)	High idling	0.25 – 1.0 V	1) Turn starting switch ON. 2) Insert T-adapter.		
Between (5) – (16)		Power source		4.75 – 5.25 V											
		Low idling		4.0 – 4.75 V											
Between (7) – (16)		High idling		0.25 – 1.0 V											
	Potentiometer	Measure voltage	If the condition is as shown in the table below, it is normal. <table><tr><td rowspan="2">Between (17) – (16)</td><td>Low idling</td><td>2.9 – 3.3 V</td></tr><tr><td>High idling</td><td>0.5 – 0.9 V</td></tr></table> Between (5) – (16)4.75 – 5.25 V	Between (17) – (16)	Low idling	2.9 – 3.3 V	High idling	0.5 – 0.9 V	1) Turn starting switch ON. 2) Insert T-adapter.						
Between (17) – (16)	Low idling	2.9 – 3.3 V													
	High idling	0.5 – 0.9 V													
Warming-up signal	Network		There must be no network error message on the monitor display.												

K20506

TESTING AND ADJUSTING

STANDARD VALUE TABLE FOR ELECTRICAL PARTS

System	Component		Connector No.	Inspection method	Judgement table	Measurement conditions													
Engine throttle controller system	Engine throttle controller	Auto-deceleration signal	E01	Measure voltage	If the condition is as shown in the table below, it is normal. <table><tr><td rowspan="2">Between (4) – (12)</td><td>At deceleration</td><td>Max. 1 V</td></tr><tr><td>When canceled</td><td>8 – 12 V</td></tr></table>	Between (4) – (12)	At deceleration	Max. 1 V	When canceled	8 – 12 V	1) Turn starting switch ON. 2) Insert T-adapter.								
		Between (4) – (12)		At deceleration	Max. 1 V														
				When canceled	8 – 12 V														
		Governor motor	Measure voltage	If the condition is as shown in the table below, it is normal. <table><tr><td>Between (10) – (20)</td><td>1.8 – 4.6 V</td></tr><tr><td>Between (11) – (21)</td><td>1.8 – 4.6 V</td></tr></table>	Between (10) – (20)	1.8 – 4.6 V	Between (11) – (21)	1.8 – 4.6 V	1) Turn starting switch ON. 2) Insert T-adapter.										
	Between (10) – (20)	1.8 – 4.6 V																	
Between (11) – (21)	1.8 – 4.6 V																		
Battery relay	Measure voltage	If the condition is as shown in the table below, it is normal. <table><tr><td>Between (13) – (12)</td><td>20 – 30 V</td></tr></table> ★ This is only for 2.5 sec after the starting switch is operated ON→OFF; at other times it must be 0 V.	Between (13) – (12)	20 – 30 V	1) Turn starting switch ON. 2) Insert T-adapter.														
Between (13) – (12)	20 – 30 V																		
Model selection	E01 (female)	Continuity	If the condition is as shown in the table below, it is normal. <table><tr><td></td><td>PC210</td><td>PC240</td></tr><tr><td>Between (8) – (12) (selection 1)</td><td>No continuity</td><td>Continuity</td></tr><tr><td>Between (18) – (12) (selection 2)</td><td>No continuity</td><td>No continuity</td></tr><tr><td>Between (9) – (12) (selection 3)</td><td>Continuity</td><td>Continuity</td></tr><tr><td>Between (19) – (12) (selection 4)</td><td>No continuity</td><td>No continuity</td></tr></table>		PC210	PC240	Between (8) – (12) (selection 1)	No continuity	Continuity	Between (18) – (12) (selection 2)	No continuity	No continuity	Between (9) – (12) (selection 3)	Continuity	Continuity	Between (19) – (12) (selection 4)	No continuity	No continuity	1) Turn starting switch OFF. 2) Disconnect connector E01.
	PC210	PC240																	
Between (8) – (12) (selection 1)	No continuity	Continuity																	
Between (18) – (12) (selection 2)	No continuity	No continuity																	
Between (9) – (12) (selection 3)	Continuity	Continuity																	
Between (19) – (12) (selection 4)	No continuity	No continuity																	

K20506

TESTING AND ADJUSTING

STANDARD VALUE TABLE FOR ELECTRICAL PARTS

Pump controller system

System	Component	Connector No.	Inspection method	Judgement table	Measurement conditions								
Pump controller system	Network (monitor, engine throttle controller)	C03	Measure voltage	If the condition is as shown in the table below, it is normal. <table><tr><td>Between (7), (8) – (15)</td><td>4 – 8 V</td></tr></table>	Between (7), (8) – (15)	4 – 8 V	1) Turn starting switch ON. 2) Insert T-adapter.						
	Between (7), (8) – (15)	4 – 8 V											
	Engine speed sensor	E07	Measure resistance	If the condition is as shown in the table below, it is normal. <table><tr><td>Between (female) (1) – (2)</td><td>500 – 1000 Ω</td></tr><tr><td>Between (female) (2) – chassis</td><td>Min. 1 MΩ</td></tr></table>	Between (female) (1) – (2)	500 – 1000 Ω	Between (female) (2) – chassis	Min. 1 MΩ	1) Turn starting switch OFF. 2) Disconnect connector E07.				
			Between (female) (1) – (2)	500 – 1000 Ω									
			Between (female) (2) – chassis	Min. 1 MΩ									
			Measure voltage	Measure with AC range <table><tr><td>Between (1) – (2)</td><td>0.5 – 3.0 V</td></tr></table>	Between (1) – (2)	0.5 – 3.0 V	1) Start engine. 2) Insert T-adapter.						
	Between (1) – (2)	0.5 – 3.0 V											
	Adjust	1) Screw in rotation sensor until it contacts ring gear, then turn back one turn. 2) It must work normally when adjusted as above.											
	PPC oil pressure switch	Travel S01 Boom RAISE S02 Arm OUT S03 Boom LOWER S04 Arm IN S05 Bucket CURL S06 Bucket DUMP S07 Swing S08	Measure resistance	If the condition is as shown in the table below, it is normal. <table><tr><td rowspan="2">Between (1) – (2)</td><td>Levers at neutral</td><td>Min. 1 MΩ</td></tr><tr><td>Lever operated</td><td>Max. 1 Ω</td></tr><tr><td colspan="2">Between (1), (2) – chassis</td><td>Min. 1 MΩ</td></tr></table>	Between (1) – (2)	Levers at neutral	Min. 1 MΩ	Lever operated	Max. 1 Ω	Between (1), (2) – chassis		Min. 1 MΩ	1) Start engine (charge accumulator) 2) Disconnect connectors S01 – S08.
	Between (1) – (2)	Levers at neutral	Min. 1 MΩ										
Lever operated		Max. 1 Ω											
Between (1), (2) – chassis		Min. 1 MΩ											
Pump pressure sensor	C07 (rear) C08 (front)	Measure voltage	If the condition is as shown in the table below, it is normal. <table><tr><td>Between (1) – (2)</td><td>18 – 28V</td></tr><tr><td rowspan="2">Between (1) – (3)</td><td>All levers at neutral</td><td>0.5 – 1.5 V</td></tr><tr><td>At arm IN relief</td><td>3.1 – 4.5 V</td></tr></table>	Between (1) – (2)	18 – 28V	Between (1) – (3)	All levers at neutral	0.5 – 1.5 V	At arm IN relief	3.1 – 4.5 V	1) Start engine. 2) Turn fuel control dial to MAX position. 3) Insert T-adapter.		
Between (1) – (2)	18 – 28V												
Between (1) – (3)	All levers at neutral	0.5 – 1.5 V											
	At arm IN relief	3.1 – 4.5 V											
Swing lock switch	C02 (female)	Measure resistance	If the condition is as shown in the table below, it is normal. <table><tr><td rowspan="2">Between (9) – GND</td><td>When switch is OFF</td><td>Min. 1 MΩ</td></tr><tr><td>When switch is ON</td><td>Max. 1 Ω</td></tr></table>	Between (9) – GND	When switch is OFF	Min. 1 MΩ	When switch is ON	Max. 1 Ω	1) Turn starting switch OFF. 2) Disconnect connector C02.				
Between (9) – GND	When switch is OFF	Min. 1 MΩ											
	When switch is ON	Max. 1 Ω											
TVC valve	C04 (rear) (male) C13 (front) (male)	Measure resistance	If the condition is as shown in the table below, it is normal. <table><tr><td>Between (1) – (2)</td><td>10 – 22 Ω</td></tr><tr><td>Between (2) – chassis</td><td>Min. 1 MΩ</td></tr></table>	Between (1) – (2)	10 – 22 Ω	Between (2) – chassis	Min. 1 MΩ	1) Set TVC prolix switch OFF. 2) Turn starting switch OFF. 3) Disconnect connectors C04, C13.					
Between (1) – (2)	10 – 22 Ω												
Between (2) – chassis	Min. 1 MΩ												
Swing brake solenoid valve	V04 (male)	Measure resistance	If the condition is as shown in the table below, it is normal. <table><tr><td>Between (1) – (2)</td><td>20 – 60 Ω</td></tr><tr><td>Between (2) – chassis</td><td>Min. 1 MΩ</td></tr></table>	Between (1) – (2)	20 – 60 Ω	Between (2) – chassis	Min. 1 MΩ	1) Turn starting switch OFF. 2) Disconnect connector V04.					
Between (1) – (2)	20 – 60 Ω												
Between (2) – chassis	Min. 1 MΩ												

TESTING AND ADJUSTING

STANDARD VALUE TABLE FOR ELECTRICAL PARTS

System	Component	Connector No.	Inspection method	Judgement table	Measurement conditions														
Pump controller system	Travel speed solenoid valve	V06(male)	Measure resistance	If the condition is as shown in the table below, it is normal. <table><tr><td>Between (1) – (2)</td><td>20 – 60 Ω</td></tr><tr><td>Between (2) – chassis</td><td>Min. 1 MΩ</td></tr></table>	Between (1) – (2)	20 – 60 Ω	Between (2) – chassis	Min. 1 MΩ	1) Turn starting switch OFF. 2) Disconnect connector V06.										
	Between (1) – (2)	20 – 60 Ω																	
	Between (2) – chassis	Min. 1 MΩ																	
	2-stage relief solenoid valve	V05(male)	Measure resistance	If the condition is as shown in the table below, it is normal. <table><tr><td>Between (1) – (2)</td><td>20 – 60 Ω</td></tr><tr><td>Between (2) – chassis</td><td>Min. 1 MΩ</td></tr></table>	Between (1) – (2)	20 – 60 Ω	Between (2) – chassis	Min. 1 MΩ	1) Turn starting switch OFF. 2) Disconnect connector V05.										
	Between (1) – (2)	20 – 60 Ω																	
	Between (2) – chassis	Min. 1 MΩ																	
	LS select solenoid valve	V02(male)	Measure resistance	If the condition is as shown in the table below, it is normal. <table><tr><td>Between (1) – (2)</td><td>20 – 60 Ω</td></tr><tr><td>Between (2) – chassis</td><td>Min. 1 MΩ</td></tr></table>	Between (1) – (2)	20 – 60 Ω	Between (2) – chassis	Min. 1 MΩ	1) Turn starting switch OFF. 2) Disconnect connector V02.										
	Between (1) – (2)	20 – 60 Ω																	
Between (2) – chassis	Min. 1 MΩ																		
Pump merge-divider solenoid valve	V03(male)	Measure resistance	If the condition is as shown in the table below, it is normal. <table><tr><td>Between (1) – (2)</td><td>20 – 60 Ω</td></tr><tr><td>Between (2) – chassis</td><td>Min. 1 MΩ</td></tr></table>	Between (1) – (2)	20 – 60 Ω	Between (2) – chassis	Min. 1 MΩ	1) Turn starting switch OFF. 2) Disconnect connector V03.											
Between (1) – (2)	20 – 60 Ω																		
Between (2) – chassis	Min. 1 MΩ																		
LS control EPC valve	C10 (male)	Measure resistance	If the condition is as shown in the table below, it is normal. <table><tr><td>Between (1) – (2)</td><td>7 – 14 Ω</td></tr><tr><td>Between (2) – chassis</td><td>Min. 1 MΩ</td></tr></table>	Between (1) – (2)	7 – 14 Ω	Between (2) – chassis	Min. 1 MΩ	1) Turn starting switch OFF. 2) Disconnect connector C10.											
Between (1) – (2)	7 – 14 Ω																		
Between (2) – chassis	Min. 1 MΩ																		
Pump controller	Power source voltage	C01	Measure voltage	If the condition is as shown in the table below, it is normal. <table><tr><td>Between (12), (13) – (3), (4)</td><td>20 – 30 V</td></tr></table>	Between (12), (13) – (3), (4)	20 – 30 V	1) Turn starting switch ON. 2) Insert T-adapter.												
	Between (12), (13) – (3), (4)	20 – 30 V																	
	L.H. knob switch	C02	Measure voltage	If the condition is as shown in the table below, it is normal. <table><tr><td rowspan="2">Between (18) – GND</td><td>When switch is OFF</td><td>20 – 28 V</td></tr><tr><td>When switch is ON</td><td>0 – 1 V</td></tr></table>	Between (18) – GND	When switch is OFF	20 – 28 V	When switch is ON	0 – 1 V	1) Turn starting switch ON. 2) Insert T-adapter.									
Between (18) – GND	When switch is OFF	20 – 28 V																	
	When switch is ON	0 – 1 V																	
Model selection	C02 (female)	Measure voltage	If the condition is as shown in the table below, it is normal. <table><tr><td></td><td>PC210</td><td>PC240</td></tr><tr><td>Between (13) – GND (selection 1)</td><td>No continuity</td><td>Continuity</td></tr><tr><td>Between (14) – GND (selection 2)</td><td>No continuity</td><td>No continuity</td></tr><tr><td>Between (15) – GND (selection 3)</td><td>Continuity</td><td>Continuity</td></tr><tr><td>Between (16) – GND (selection 4)</td><td>No continuity</td><td>No continuity</td></tr></table>		PC210	PC240	Between (13) – GND (selection 1)	No continuity	Continuity	Between (14) – GND (selection 2)	No continuity	No continuity	Between (15) – GND (selection 3)	Continuity	Continuity	Between (16) – GND (selection 4)	No continuity	No continuity	1) Turn starting switch ON. 2) Disconnect connector C02.
	PC210	PC240																	
Between (13) – GND (selection 1)	No continuity	Continuity																	
Between (14) – GND (selection 2)	No continuity	No continuity																	
Between (15) – GND (selection 3)	Continuity	Continuity																	
Between (16) – GND (selection 4)	No continuity	No continuity																	

K20506

TESTING AND ADJUSTING

STANDARD VALUE TABLE FOR ELECTRICAL PARTS

System	Component		Connector No.	Inspection method	Judgement table	Measurement conditions																								
Pump controller system	Pump controller	Auto-deceleration output signal	C03	Measure voltage	If the condition is as shown in the table below, it is normal. <table><tr><td>Auto-deceleration switch OFF</td><td rowspan="2">Between (5) – GND</td><td>8 – 12 V</td></tr><tr><td>Auto-deceleration switch ON</td><td>0 – 1 V</td></tr></table>	Auto-deceleration switch OFF	Between (5) – GND	8 – 12 V	Auto-deceleration switch ON	0 – 1 V	1) Start engine. 2) Insert T-adapter. 3) Place all levers at neutral.																			
		Auto-deceleration switch OFF	Between (5) – GND	8 – 12 V																										
		Auto-deceleration switch ON		0 – 1 V																										
		No. 2 throttle signal	Monitoring code 16, 10	Engine speed	If the condition is as shown in the table below, it is normal. High idling speed (rpm) <table><tr><td></td><td>PC210</td><td>PC240</td></tr><tr><td>H/O (working)</td><td>Approx. 2230</td><td>Approx. 2420</td></tr><tr><td>H/O (traveling)</td><td>Approx. 2420</td><td>Approx. 2530</td></tr><tr><td>G/O</td><td>Approx. 2100</td><td>Approx. 2200</td></tr><tr><td>F/O</td><td>Approx. 2100</td><td>Approx. 2200</td></tr><tr><td>L/O</td><td>Approx. 1700</td><td>Approx. 1750</td></tr><tr><td>Power max. (H/O) (G/O)</td><td>Approx. 2420</td><td>Approx. 2530</td></tr><tr><td>Swift slow-down (H/O) (G/O)</td><td>Approx. 1700</td><td>Approx. 1750</td></tr></table>		PC210	PC240	H/O (working)	Approx. 2230	Approx. 2420	H/O (traveling)	Approx. 2420	Approx. 2530	G/O	Approx. 2100	Approx. 2200	F/O	Approx. 2100	Approx. 2200	L/O	Approx. 1700	Approx. 1750	Power max. (H/O) (G/O)	Approx. 2420	Approx. 2530	Swift slow-down (H/O) (G/O)	Approx. 1700	Approx. 1750	1) Turn starting switch ON. 2) Set monitor panel to monitoring code 10 or 16. 3) Operate working mode switch and L.H. knob switch.
			PC210	PC240																										
		H/O (working)	Approx. 2230	Approx. 2420																										
		H/O (traveling)	Approx. 2420	Approx. 2530																										
		G/O	Approx. 2100	Approx. 2200																										
F/O	Approx. 2100	Approx. 2200																												
L/O	Approx. 1700	Approx. 1750																												
Power max. (H/O) (G/O)	Approx. 2420	Approx. 2530																												
Swift slow-down (H/O) (G/O)	Approx. 1700	Approx. 1750																												
Swing brake solenoid valve	C01	Measure voltage	If the condition is as shown in the table below, it is normal. <table><tr><td>Approx. 4 sec after swing lever is placed at neutral</td><td rowspan="2">Between (13) – (1), (2)</td><td>20 – 30 V</td></tr><tr><td>Swing operated</td><td>0 – 3 V</td></tr></table>	Approx. 4 sec after swing lever is placed at neutral	Between (13) – (1), (2)	20 – 30 V	Swing operated	0 – 3 V	1) Start engine. 2) Turn swing lock switch OFF. 3) Set swing lock prolix switch OFF. 4) Insert T-adapter.																					
Approx. 4 sec after swing lever is placed at neutral	Between (13) – (1), (2)	20 – 30 V																												
Swing operated		0 – 3 V																												
Travel speed solenoid valve	C01	Measure voltage	If the condition is as shown in the table below, it is normal. <table><tr><td>Travel speed switch at Lo</td><td rowspan="2">Between (6) – (1), (2)</td><td>20 – 30 V</td></tr><tr><td>Travel speed switch at Hi</td><td>0 – 3 V</td></tr></table>	Travel speed switch at Lo	Between (6) – (1), (2)	20 – 30 V	Travel speed switch at Hi	0 – 3 V	1) Start engine. 2) Insert T-adapter. 3) Turn fuel control dial to MAX position. 4) Travel on level ground.																					
Travel speed switch at Lo	Between (6) – (1), (2)	20 – 30 V																												
Travel speed switch at Hi		0 – 3 V																												
2-stage relief solenoid valve	C01	Measure voltage	If the condition is as shown in the table below, it is normal. <table><tr><td>All levers at neutral</td><td rowspan="2">Between (14) – (1), (2)</td><td>20 – 30 V</td></tr><tr><td>Travel lever operated</td><td>0 – 3 V</td></tr></table>	All levers at neutral	Between (14) – (1), (2)	20 – 30 V	Travel lever operated	0 – 3 V	1) Turn starting switch ON. 2) Insert T-adapter. 3) Charge accumulator.																					
All levers at neutral	Between (14) – (1), (2)	20 – 30 V																												
Travel lever operated		0 – 3 V																												
LS select solenoid valve	C01	Measure voltage	If the condition is as shown in the table below, it is normal. <table><tr><td>All levers at neutral</td><td rowspan="2">Between (3) – (1), (2)</td><td>20 – 30 V</td></tr><tr><td>Swing + travel lever operated simultaneously</td><td>0 – 3 V</td></tr></table>	All levers at neutral	Between (3) – (1), (2)	20 – 30 V	Swing + travel lever operated simultaneously	0 – 3 V	1) Turn starting switch ON. 2) Insert T-adapter. 3) Charge accumulator.																					
All levers at neutral	Between (3) – (1), (2)	20 – 30 V																												
Swing + travel lever operated simultaneously		0 – 3 V																												
Pump merge-divider solenoid valve	C02	Measure voltage	If the condition is as shown in the table below, it is normal. <table><tr><td>Lever at neutral</td><td rowspan="2">Between (4) – (1), (2)</td><td>20 – 30 V</td></tr><tr><td>S/O mode</td><td>0 – 3 V</td></tr></table>	Lever at neutral	Between (4) – (1), (2)	20 – 30 V	S/O mode	0 – 3 V	1) Turn starting switch ON. 2) Insert T-adapter.																					
Lever at neutral	Between (4) – (1), (2)	20 – 30 V																												
S/O mode		0 – 3 V																												

TESTING AND ADJUSTING

STANDARD VALUE TABLE FOR ELECTRICAL PARTS

System	Component		Connector No.	Inspection method	Judgement table	Measurement conditions							
Pump controller system	Pump controller	TVC valve (default value)	C01	Measure current	If the condition is as shown in the table below, it is normal. • Working mode in G/O mode <table><tr><td></td><td>PC210</td><td>PC240</td></tr><tr><td>Front Between (16) – (8)</td><td rowspan="2">510 ± 80 mA</td><td rowspan="2">410 ± 80 mA</td></tr><tr><td>Rear Between (17) – (9)</td></tr></table>		PC210	PC240	Front Between (16) – (8)	510 ± 80 mA	410 ± 80 mA	Rear Between (17) – (9)	1) Turn starting switch ON. 2) Turn fuel control dial to MAX position.
			PC210	PC240									
Front Between (16) – (8)	510 ± 80 mA	410 ± 80 mA											
Rear Between (17) – (9)													
		LS control EPC valve (default value)	C01	Measure current	If the condition is as shown in the table below, it is normal. • Working mode in G/O mode <table><tr><td>Between (15) – (7)</td><td>900 ± 80</td></tr></table>	Between (15) – (7)	900 ± 80	1) Turn starting switch ON. 2) Turn fuel control dial to MAX position.					
Between (15) – (7)	900 ± 80												

K20506

 
 
 
20-19

K20506

TESTING AND ADJUSTING

STANDARD VALUE TABLE FOR ELECTRICAL PARTS

Machine monitor system

System	Component	Connector No.	Inspection method	Judgement table	Measurement conditions					
	Alternator	Between alternator terminal R and chassis	Measure voltage	When engine is running (half throttle or above) ▷ 27.5 – 29.5 V ※ If the battery is old, or after starting in cold areas, the voltage may not rise for some time.	1) Start engine.					
	Air cleaner clogging sensor	P11 (male) P12 (female)	Continuity	If the condition is as shown in the table below, it is normal. <table border="1" style="margin-top: 5px;"> <tr> <td>Air cleaner normal</td><td rowspan="2">Between P11 – P12</td><td>Continuity</td></tr> <tr> <td>Air cleaner clogged</td><td>No continuity</td></tr> </table>	Air cleaner normal	Between P11 – P12	Continuity	Air cleaner clogged	No continuity	1) Start engine. 2) Disconnect P11, P12.
	Air cleaner normal	Between P11 – P12	Continuity							
	Air cleaner clogged		No continuity							
	Engine speed sensor	E07	Measure resistance	If the condition is within the range shown in the table below, it is normal. <table border="1" style="margin-top: 5px;"> <tr> <td>Between (female)(1) – (2)</td><td>500 – 1000 Ω</td></tr> <tr> <td>Between (female)(2) – chassis</td><td>Min. 1 MΩ</td></tr> </table>	Between (female)(1) – (2)	500 – 1000 Ω	Between (female)(2) – chassis	Min. 1 MΩ	1) Turn starting switch OFF. 2) Disconnect connector E07.	
			Between (female)(1) – (2)	500 – 1000 Ω						
			Between (female)(2) – chassis	Min. 1 MΩ						
	Measure voltage	Measure with AC range <table border="1" style="margin-top: 5px;"> <tr> <td>Between (1) – (2)</td><td>0.5 – 3.0 V</td></tr> </table>	Between (1) – (2)	0.5 – 3.0 V	1) Start engine. 2) Insert T-adapter.					
Between (1) – (2)	0.5 – 3.0 V									
Adjust	1) Screw in rotation sensor until it contacts the ring gear, then turn back one turns. 2) It must work normally when adjusted as above.									
Coolant level sensor	P08(male)	Measure resistance	If the condition is as shown in the table below, it is normal. <table border="1" style="margin-top: 5px;"> <tr> <td>Above LOW level in reservoir tank</td><td>Max. 1 Ω</td></tr> <tr> <td>Below LOW level in reservoir tank</td><td>Min. 1 MΩ</td></tr> </table>	Above LOW level in reservoir tank	Max. 1 Ω	Below LOW level in reservoir tank	Min. 1 MΩ	1) Turn starting switch OFF. 2) Disconnect connector P08. 3) Insert T-adapter into connector at sensor end.		
Above LOW level in reservoir tank	Max. 1 Ω									
Below LOW level in reservoir tank	Min. 1 MΩ									
Engine oil level sensor	P05(male)	Measure resistance	If the condition is as shown in the table below, it is normal. <table border="1" style="margin-top: 5px;"> <tr> <td>  ↑ Raise float </td><td>Max. 1 Ω</td></tr> <tr> <td>  ↓ Lower float </td><td>Min. 1 MΩ</td></tr> </table>	 ↑ Raise float	Max. 1 Ω	 ↓ Lower float	Min. 1 MΩ	1) Turn starting switch OFF. 2) Disconnect connector P05. 3) Drain oil, then remove sensor. 4) Insert T-adapter into sensor. ★ Connect the T-adapter to the connector and sensor flange.		
 ↑ Raise float	Max. 1 Ω									
 ↓ Lower float	Min. 1 MΩ									
Coolant temperature sensor	P07(male)	Measure resistance	If the condition is as shown in the table below, it is normal. <table border="1" style="margin-top: 5px;"> <tr> <td>Normal temperature (20°C)</td><td>Approx. 70 – 78 kΩ</td></tr> <tr> <td>100°C</td><td>Approx. 3Ω</td></tr> </table>	Normal temperature (20°C)	Approx. 70 – 78 kΩ	100°C	Approx. 3Ω	1) Turn starting switch OFF. 2) Disconnect connector P07. 3) Put tester in contact between sensor terminals and check resistance.		
Normal temperature (20°C)	Approx. 70 – 78 kΩ									
100°C	Approx. 3Ω									

K20506

TESTING AND ADJUSTING

STANDARD VALUE TABLE FOR ELECTRICAL PARTS

System	Component	Connector No.	Inspection method	Judgement table	Measurement conditions				
Machine monitor system	Engine oil pressure sensor	-	Measure resistance	If the condition is as shown in the table below, it is normal. Low pressure sensor <table><tr><td>Pressure rising</td><td>Opens at 0.110 ± 0.014 MPa (Non continuity) (1.12 ± 0.14 kg/cm²)</td></tr><tr><td>Pressure dropping</td><td>Closes at 0.08 ± 0.014 MPa (Continuity) (0.85 ± 0.14kg/cm²)</td></tr></table> Sensor connector	Pressure rising	Opens at 0.110 ± 0.014 MPa (Non continuity) (1.12 ± 0.14 kg/cm ²)	Pressure dropping	Closes at 0.08 ± 0.014 MPa (Continuity) (0.85 ± 0.14 kg/cm ²)	1) Install oil pressure measuring gauge. 2) Remove wiring harness terminal. 3) Start engine. 4) Put tester in contact between sensor terminals A & C.
	Pressure rising	Opens at 0.110 ± 0.014 MPa (Non continuity) (1.12 ± 0.14 kg/cm ²)							
	Pressure dropping	Closes at 0.08 ± 0.014 MPa (Continuity) (0.85 ± 0.14 kg/cm ²)							
	Fuel level sensor	P06 (male)	Measure resistance	If the condition is as shown in the table below, it is normal. <table><tr><td> ↑ Raise float to stopper </td><td>Approx. 12 Ω or below</td></tr><tr><td> ↓ Lower float to stopper </td><td>Approx. 85 – 110 Ω</td></tr></table>	 ↑ Raise float to stopper	Approx. 12 Ω or below	 ↓ Lower float to stopper	Approx. 85 – 110 Ω	1) Turn starting switch OFF. 2) Disconnect connector P06. 3) Drain fuel, then remove sensor. 4) Insert T-adaptor into sensor. ★ Connect the T-adaptor to the connector and sensor flange.
	 ↑ Raise float to stopper	Approx. 12 Ω or below							
 ↓ Lower float to stopper	Approx. 85 – 110 Ω								
Hydraulic oil level sensor	P09 (male)	Measure resistance	If the condition is as shown in the table below, it is normal. <table><tr><td> ↑ Raise float </td><td>Max. 1 Ω</td></tr><tr><td> ↓ Lower float </td><td>Min. 1 MΩ</td></tr></table>	 ↑ Raise float	Max. 1 Ω	 ↓ Lower float	Min. 1 MΩ	1) Turn starting switch OFF. 2) Disconnect connector P09. 3) Drain oil, then remove sensor. 4) Insert T-adaptor into sensor.	
 ↑ Raise float	Max. 1 Ω								
 ↓ Lower float	Min. 1 MΩ								
Air cleaner clogging sensor	P11 (female) P12 (male)	Measure resistance	If the condition is as shown in the table below, it is normal. <table><tr><td>Air cleaner normal</td><td>Continuity</td></tr><tr><td>Air cleaner clogged</td><td>No continuity</td></tr></table>	Air cleaner normal	Continuity	Air cleaner clogged	No continuity	1) Start engine. 2) Disconnect P11, P12. 3) Put tester in contact with connector at sensor end to measure.	
Air cleaner normal	Continuity								
Air cleaner clogged	No continuity								


K20506

TESTING AND ADJUSTING

CHECKING AND ADJUSTING BELT TENSION FOR AIR CONDITIONER COMPRESSOR


CHECKING

1. Remove belt guard ①.
2. Press compressor drive belt midway between fan pulley and compressor pulley. The belt should normally deflect by about 15~18 mm (0.60~0.70 inch) when pressed with the finger (with a force of approx. 6kg (13 lb)).

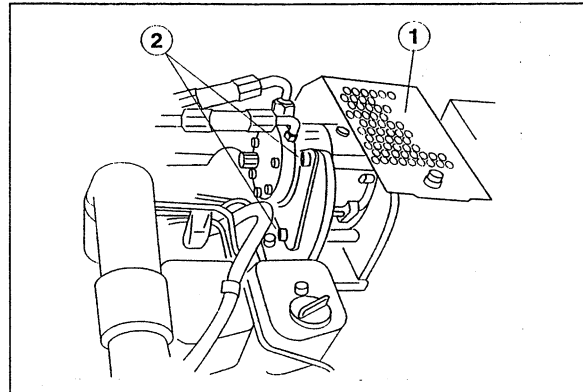

ADJUSTING



1. Loosen two nuts and bolts ②.
2. Carefully lever compressor housing as shown to tighten belt to tightness criteria. Tighten lower bolt to hold in position.
3. Tighten upper bolt.
4. Check each pulley for damage, wear of the V-groove and wear of the V-belt. In particular, be sure to check the V-belt is not touching the bottom of the V-groove.
5. Replace belt if it has stretched, leaving no allowance for adjustment, or if there is a cut or crack on belt.
6. Refit belt guard.
7. When the new belt is set, readjust it after operating for one hour.

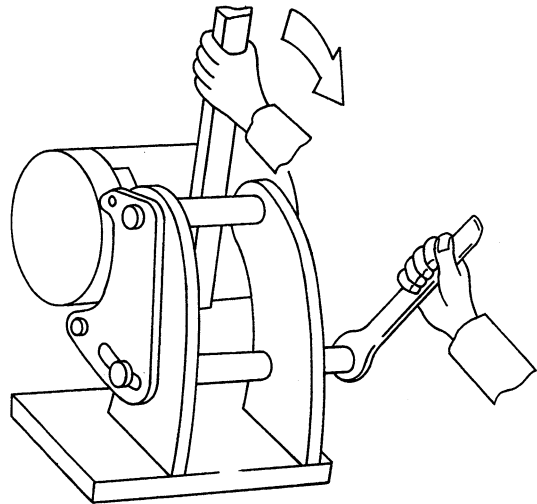

K20506

ADJUSTING ENGINE SPEED SENSOR

1. Screw in until the tip of sensor (1) contacts gear (2).
 2. When gear (2) contacts sensor (1), turn back one turn.
 3. Tighten locknut (3).
- ★ Be particularly careful when securing the sensor wiring to ensure that no excessive force is brought to bear on the wiring.
 - ★ Be careful not to let the tip of the sensor be scratched or to let any iron particles stick to the sensor tip.

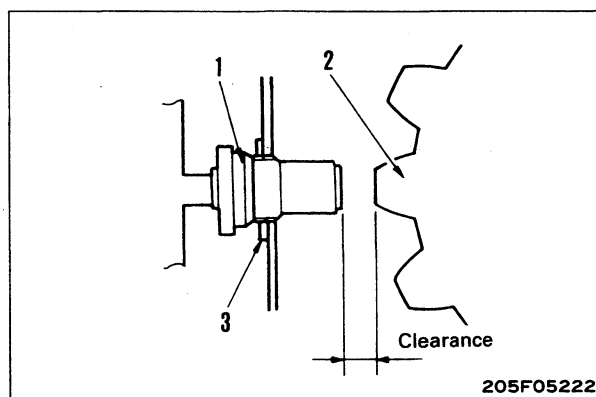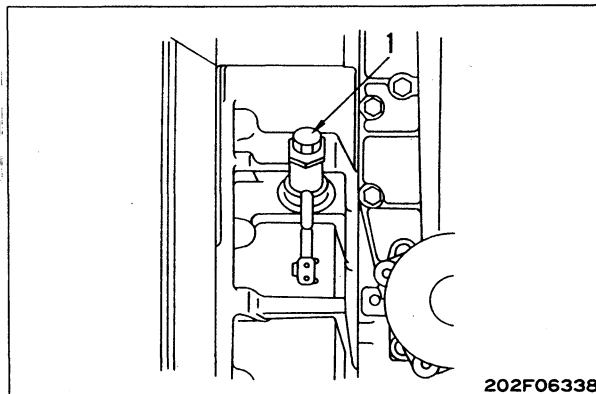


TESTING AND ADJUSTING GOVERNOR MOTOR LEVER STROKE

TESTING

★ Use the governor motor adjustment mode.

1. In the time mode display, keep the time switch + travel speed R.H. switch + working mode R.H. switch pressed for 2.5 seconds.
2. In this condition, check the governor lever and spring rod.
3. After checking, repeat the procedure in Step 1) to finish the governor motor adjustment mode.


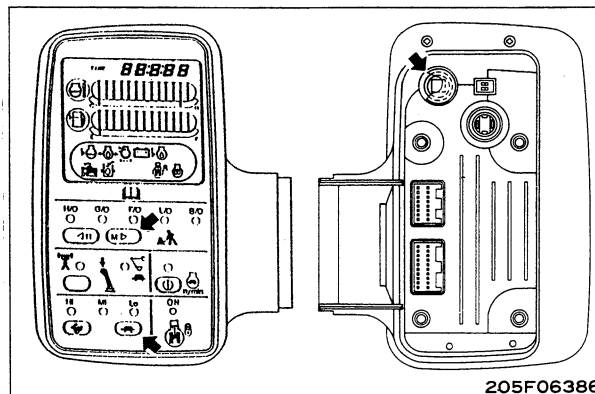


ADJUSTING

1. Turn the starting switch OFF, then remove the nut and disconnect joint (1) from governor lever (4).
2. Repeat the procedure in Step 1-1) above to set to the governor motor adjustment mode.
3. Set governor lever (4) to a position where it contacts the full speed stopper (5) of the injection pump, then adjust the length of spring assembly (2) and rod (3), and connect joint (1) with the nut.
4. From the above position, turn joint (1) back 4 turns, and secure in position with locknut (6).

★ Caution

When the spring assembly is removed and the starting switch is at the OFF position, if the governor motor lever is moved suddenly, the governor motor will generate electricity, and this may cause a failure in the engine throttle controller.

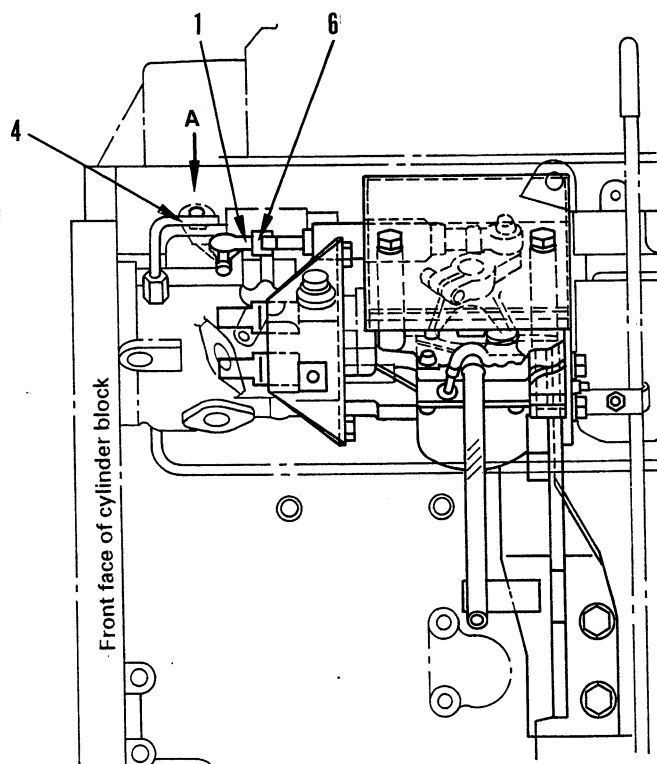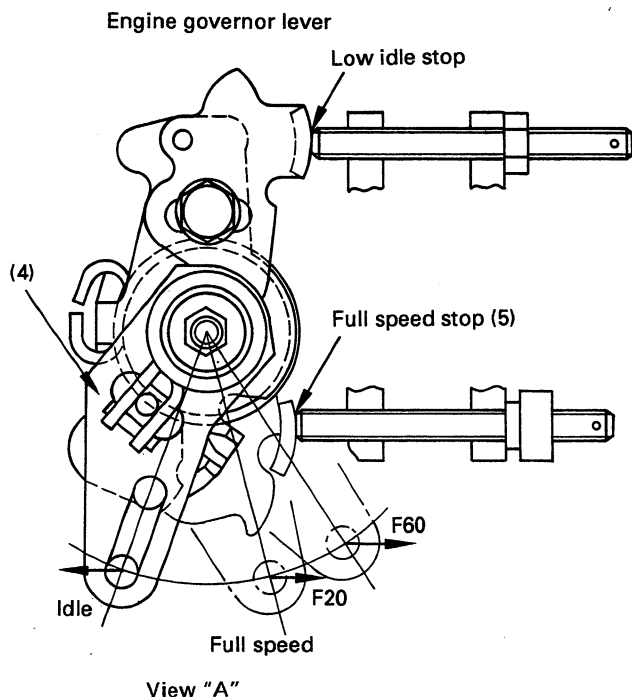

TESTING AND ADJUSTING

TESTING AND ADJUSTING GOVERNOR MOTOR LEVER STROKE

5. Confirm engine speeds are within tolerance according to:

No load engine speeds




Condition	Fuel dial	PC210	PC240
Low idle	Min.	1,066 ± 66	1,066 ± 66
Auto warm up	Min.	1,200 ± 60	1,200 ± 60
Auto decel	Max.	1,400 ± 60	1,400 ± 60
L.O.	Max.	1,710 ± 60	1,800 ± 60
G.O, F.O.	Max.	2,050 ± 60	2,120 ± 60
H.O.	Max.	2,130 ± 60	2,300 ± 60
Travel *	Max.	2,390 ± 60	2,490 ± 60

- * To check travel condition, ensure H.O. working mode is selected then move travel lever so that auto decel is cancel but machine does not move.

TESTING CLEARANCE OF SWING CIRCLE BEARING

Method of testing clearance of swing circle bearing when mounted on machine

1. Fix a magnet-type dial gauge to the outer circle (or inner circle) of the swing circle, and put the tip of the probe in contact with the inner circle (or outer circle). Set the dial gauge at the front or rear.
 2. Extend the work equipment to the maximum reach, and set the tip of the bucket to the same height as the bottom of the revolving frame. When this is done, the upper structure will tilt forward, so the front will go down and the rear will rise.
 3. Set the dial gauge to the zero point.
 4. Set the arm more or less at right angles to the ground surface, then lower the boom until the front of the machine comes off the ground. When this is done, the upper structure will tilt back, so the front will rise and the rear will go down.
 5. Read the value on the dial gauge at this point. The value on the dial gauge is the clearance of the swing circle bearing.
- ⚠** When carrying out the measurement, do not put your hand or feet under the undercarriage.
6. Return to the condition in Step 2, and check that the dial gauge has returned to the zero point. If it has not returned to the zero point, repeat Steps 2 to 5.

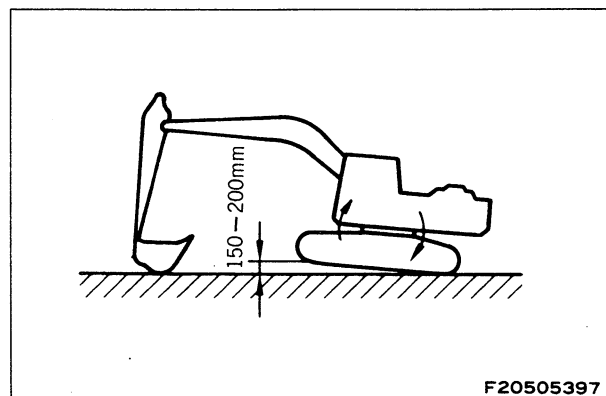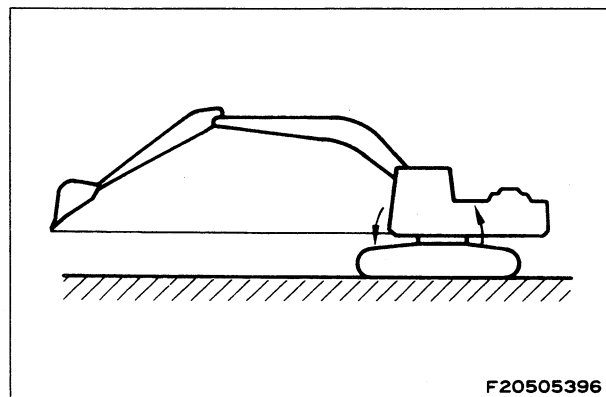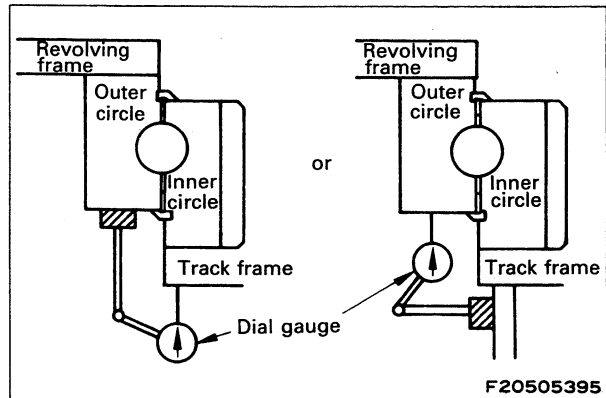

TESTING AND ADJUSTING TRACK SHOE TENSION

TESTING

1. Raise the track frame using the arm and boom, and measure the clearance between the bottom of the track frame and the top of the track shoe.

- Clearance: 303 ± 20 mm

Measurement position


PC210 : 4th track roller from the sprocket.

PC210LC : 5th track roller from the sprocket.

PC240 : Midway between the 4th and 5th track roller from the sprocket.

PC240LC : Midway between the 5th and 6th track roller from the sprocket.

PC240NLC: 5th track roller from the sprocket.

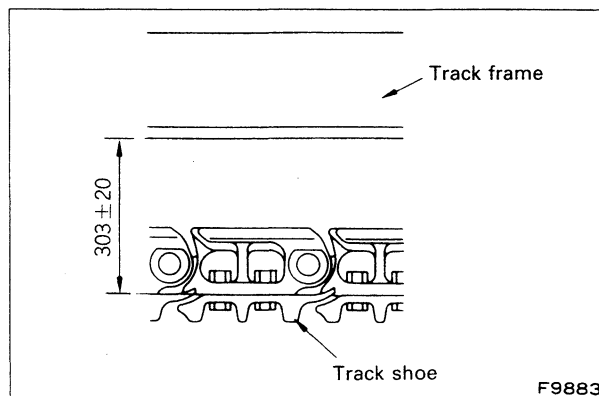

ADJUSTING


- ★ If the track shoe tension is not within the standard value, adjust as follows.

1. When the tension is too high:

Loosen plug (1) gradually, and release the grease.

⚠ There is danger that the plug may fly out under the high internal pressure of the grease, so never loosen plug (1) more than 1 turn.

- ★ If the grease does not come out easily, move the machine backwards or forwards slowly.

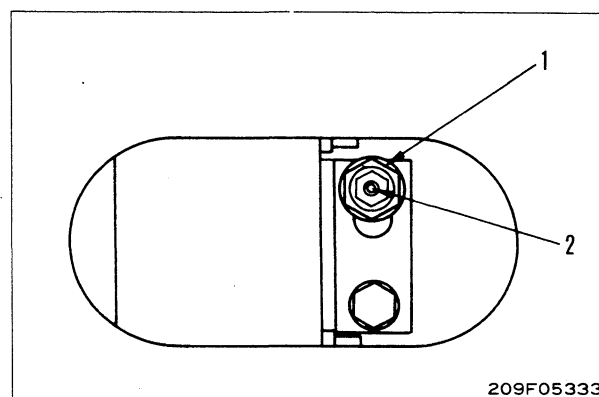

2. If track is too loose:

Pump in grease through grease fitting (2).

- ★ If the grease cannot be pumped in easily, move the machine backwards and forwards slowly.

TESTING AND ADJUSTING HYDRAULIC PRESSURE IN WORK EQUIPMENT, SWING, TRAVEL CIRCUIT

MEASURING

- ★ Hydraulic oil temperature when measuring: 45 – 55°C

! Lower the work equipment to the ground and stop the engine. Loosen the oil filler cap slowly to release the pressure inside the hydraulic tank. Then put the safety lock lever in the LOCK position.

Remove pressure pick-up plug (1) or (2) (Thread dia.=10mm, Pitch=1.25mm) from the circuit to be measured, then install oil pressure gauge **C₁** (58.8 MPa (600 kg/cm²)).

- Measuring main unload pressure

- ★ Unload pressure when front and rear pump flows are merged

Measure the oil pressure in H/O mode with the engine at high idling and the control levers at neutral.

- Measuring sub-unload pressure

- ★ The unload pressure in the circuit which is not under load when the front and rear pump flows are divided.

1. Set to H/O mode + boom/swing priority selection mode ON.

2. Measure the pressure in the pump circuit on the opposite side when the arm or bucket circuit is relieved.

Arm relief : load on front pump, rear pump unloaded.

Bucket relief : load on rear pump, front pump unloaded.

- Measuring pump relief pressure

1. When LS relief valve is actuated

When hydraulic pressure is 31.9 MPa (325 kg/cm²)

1) Measure the pressure when each actuator except the travel actuator is relieved in H/O mode with the engine at high idling.

- ★ Note that the set pressure of the safety valve for the swing motor and head end of the boom is lower than the LS relief pressure, so the value measured will be the relief pressure of the safety valve.

If the swing lock switch is ON, the pressure will rise, so always keep the lock switch OFF when measuring.



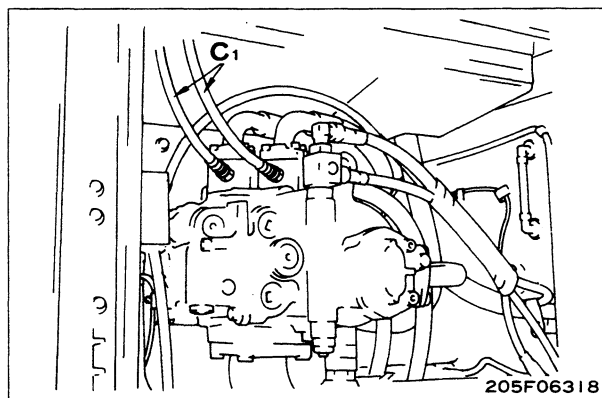


Table 1 Combination of pumps and actuators controlled when flow from front and rear pumps is divided

Pump	Controlled actuator
Front pump	• Arm cylinder • Swing motor ※ • L.H. travel motor
Rear pump	• Boom cylinder ※ • Bucket cylinder • R.H. travel motor

※ The set pressure of the safety valve at the head end and the swing motor is lower than the set pressure of the main relief valve.

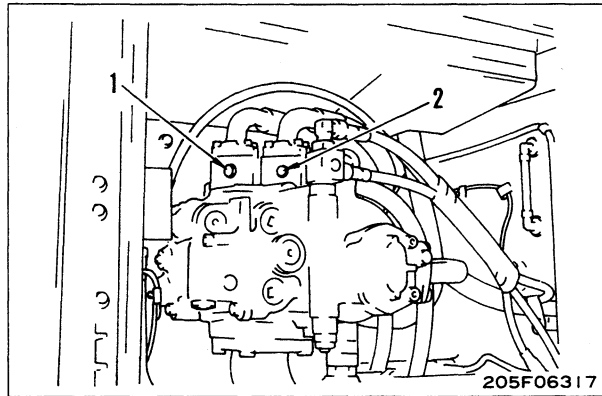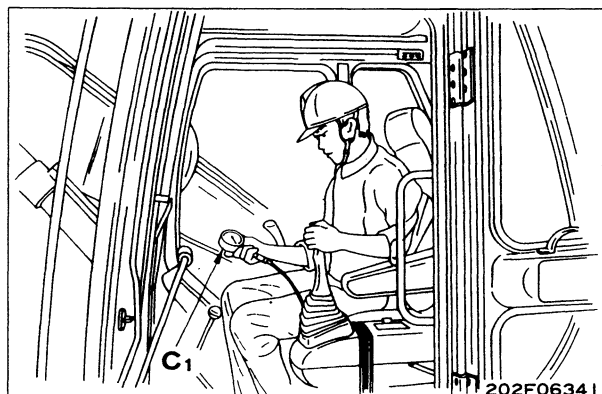

TESTING AND ADJUSTING



TESTING AND ADJUSTING HYDRAULIC PRESSURE IN WORK EQUIPMENT, SWING, TRAVEL CIRCUIT

2. When pressure rises to 34.8 MPa (355 kg/cm²)
 - ★ Main relief valve actuated
 - 1) When travel is operated

Measure the hydraulic pressure when the travel is relieved on each side separately in H/O mode with the engine at high idling.

 - ★ To relieve the travel circuit, put block ① under the track shoe grouser, or put block ② between the sprocket and frame to lock the track.
 - 2) When power max. function is actuated

When measuring the oil pressure in G/O or H/O mode with the engine at high idling and the power max. function actuated, relieve one of the boom, arm, or bucket circuits, and measure the oil pressure.

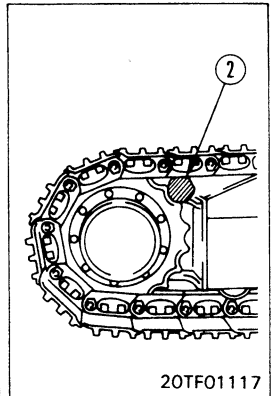
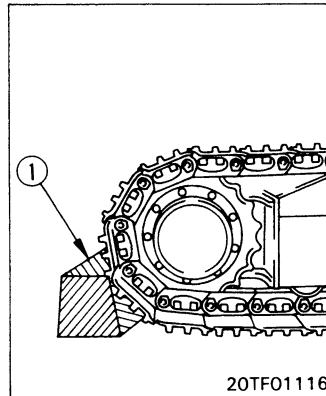


ADJUSTING

1. LS relief valve
 - 1) Loosen nut (1) so that elbow (2) can move.
 - 2) Loosen locknut (3), then turn holder (4) to adjust.
 - ★ Turn the holder to adjust as follows.
 - To INCREASE pressure, turn CLOCKWISE.
 - To DECREASE pressure, turn COUNTERCLOCKWISE.
2. Main relief valve
 - Loosen locknut (1), then turn adjustment screw (2) to adjust.
 - ★ Turn the adjustment screw to adjust as follows.

To INCREASE pressure, turn CLOCKWISE.

To DECREASE pressure, turn COUNTERCLOCKWISE.
 - ★ Amount of adjustment for one turn of adjustment screw: 12.6 MPa (128 kg/cm²)

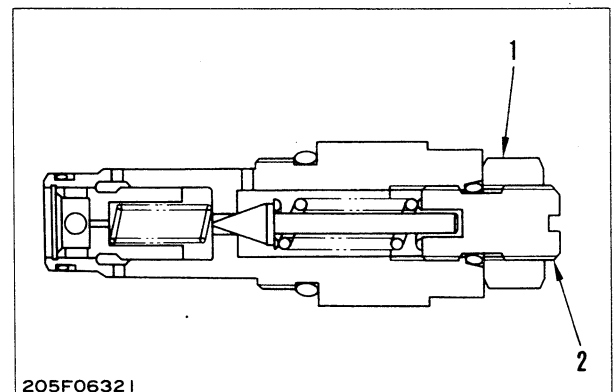
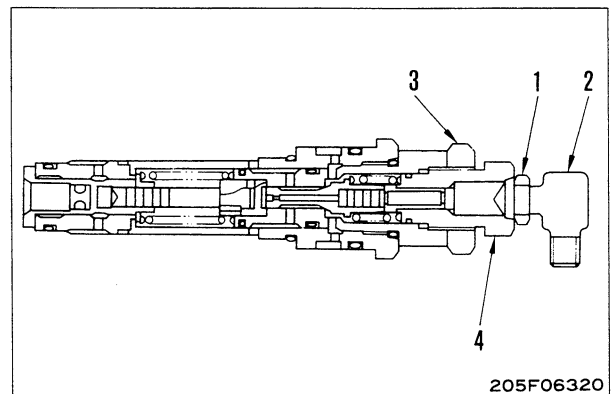


TESTING AND ADJUSTING

TESTING AND ADJUSTING HYDRAULIC PRESSURE IN WORK EQUIPMENT, SWING, TRAVEL CIRCUIT

3. Swing motor safety valve

- Loosen locknut (1), then turn adjustment screw (2) to adjust.
- ★ Turn the adjustment screw to adjust as follows.
 - To INCREASE pressure, turn CLOCKWISE.
 - To DECREASE pressure, turn COUNTERCLOCKWISE.

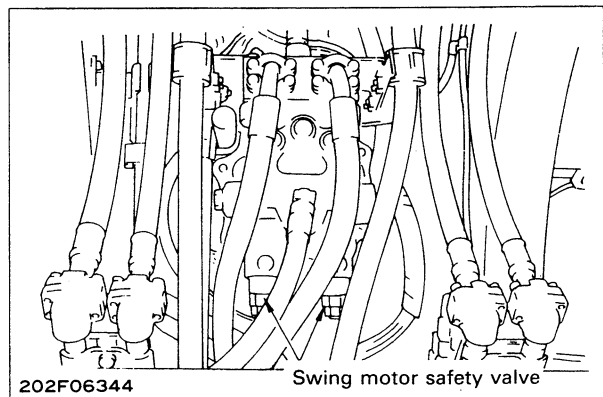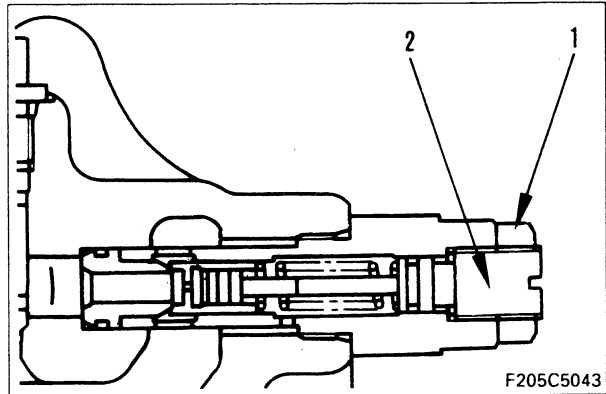

K20506






TESTING AND ADJUSTING TVC VALVE VALVE OUTPUT PRESSURE (SERVO PISTON INPUT PRESSURE)

MEASURING

- ★ Hydraulic oil temperature when measuring: 45 – 55°C
- Measure the oil pressure when the circuit is relieved in the power max. mode.
 - 1) Remove pressure measurement plugs (1), (2), (3), and (4) (Thread dia.=10 mm, Pitch=1.5 mm), and install oil pressure gauge C₁.
 - ★ Install a 39.2 MPa (400 kg/cm²) gauge to the servo valve end, and a 58.8 MPa (600 kg/cm²) gauge to the pump outlet port end.
 - 2) Set the swing lock switch ON.
 - 3) Set the working mode to H/O mode.
 - 4) Run the engine at high idling, turn the L. H. knob switch ON, and measure the oil pressure when the arm IN circuit is relieved.
 - ★ Check that the servo piston input pressure is 1/2 of the pump discharge pressure.

[Reference]

If there is any abnormality in the LS valve or servo piston, the servo piston input pressure will be almost the same or 0 of the pump discharge pressure.

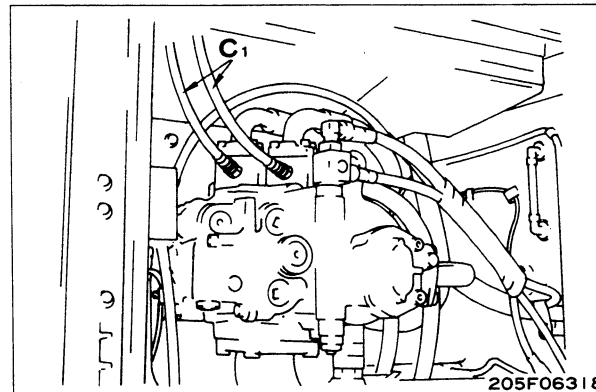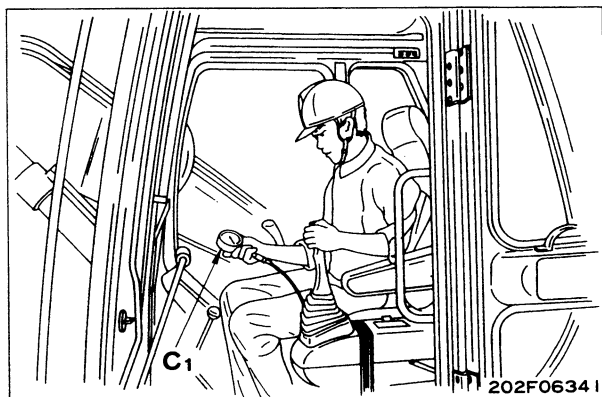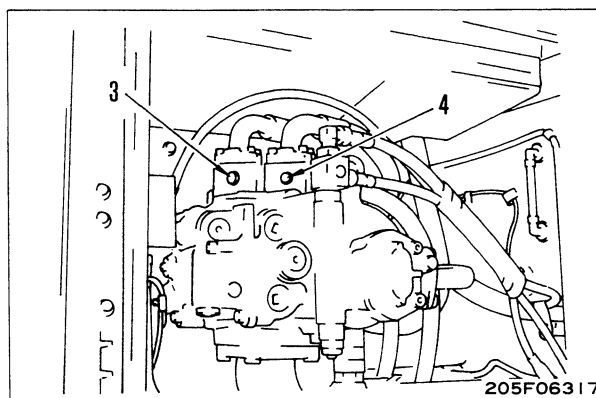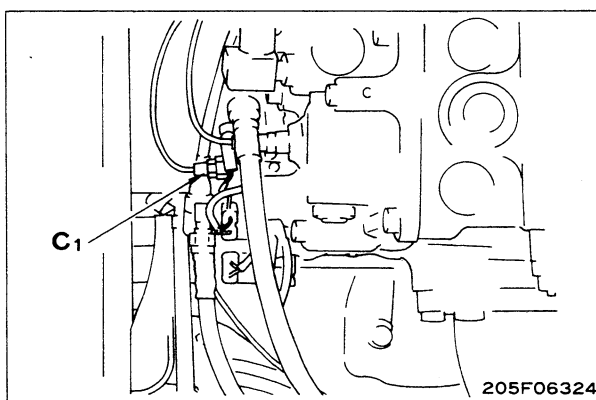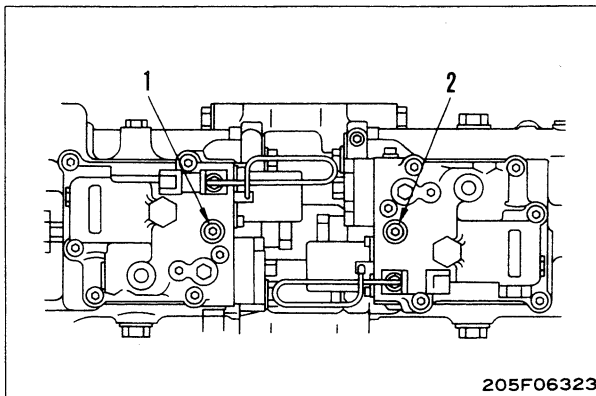

K20506

ADJUSTING

- ★ If the load becomes larger, the engine speed will drop. Or if the engine speed remains normal, the work equipment speed will drop. In such cases, if the pump discharge pressure and LS differential pressure are normal, adjust the TVC valve as follows.
- ★ There are two sets, so adjust both the front and rear to the same angle.

1. Loosen locknut (3), and if the speed is slow, turn screw (4) to the left; if the engine speed drops, turn the screw to the right.

- ★ If the screw is turned to the left, the pump absorption torque will be increased, and if it is turned to the right, the pump absorption torque will be reduced.




There is also a connection with the angle, so see Note below.

- ★ The adjustment range for the screw is a maximum of 90° to both the left and right.

2. After completing the adjustment, tighten the locknut.

 Locknut : $29.4 \pm 4.9 \text{ Nm}$ ($3.0 \pm 0.5 \text{ kgm}$)

Note: The screw is an eccentric cam, so if it is turned from position ① in the graph, the stroke of the servo piston will move as shown in the graph. If it is turned one full turn, it will return to the original position, but the screw will become looser, so there will be play in the screw. Therefore, turn the screw a maximum of 90° to the left and right from the position ① set when the machine was shipped.

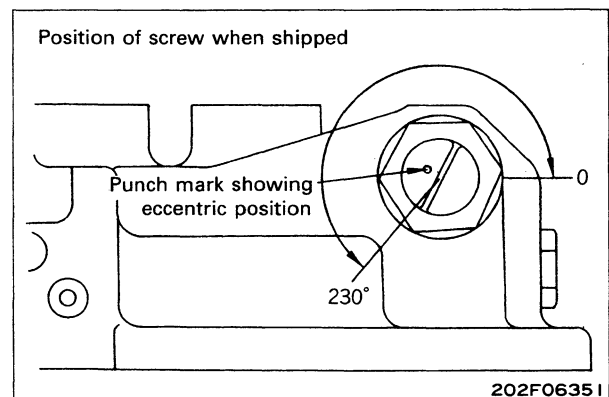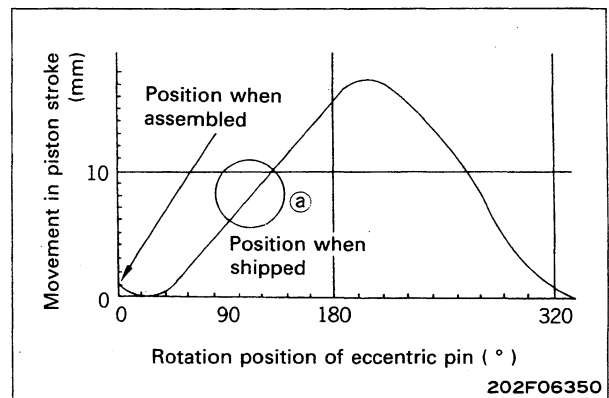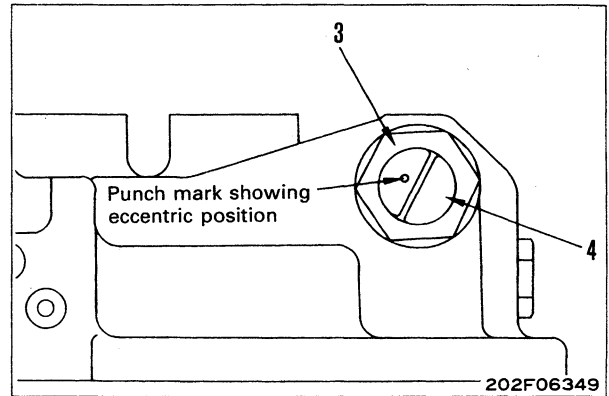

TESTING AND ADJUSTING LS VALVE OUTPUT PRESSURE (SERVO PISTON INPUT PRESSURE) AND LS DIFFERENTIAL PRESSURE

★ Hydraulic oil temperature when measuring: 45 – 55°C
MEASURING

1. Measuring LS valve output pressure (servo piston input pressure)

- 1) Remove pressure measurement plugs (1), (2), (3), and (4) (Thread dia.= 10 mm, Pitch=1.5 mm), and install oil pressure gauge **C₁**.






★ Install a 39.2 MPa (400 kg/cm²) gauge to the servo valve end, and a 58.8 MPa (600 kg/cm²) gauge to the pump outlet port end.

- Oil pressure when travel is rotating under no load on one side
 - i) Set the working mode to H/O mode, and set the travel speed switch to **Hi**.
 - ii) Use the work equipment to raise the track assembly on one side.
 - iii) Measure the oil pressure with the engine at high idling and the travel lever operated to the end of its stroke to rotate the track under no load.

Run the engine at high idling, operate the travel lever to the end of its stroke, and measure the oil pressure when the working mode and travel speed are switched as shown in Table 1.

Table 1

Working mode	Travel lever	Pump pressure (MPa (kg/cm ²))	Servo piston inlet port pressure (MPa (kg/cm ²))	Remarks
H/O mode	Neutral	3.72 ± 0.69 (38 ± 7)	3.72 ± 0.69 (38 ± 7)	About same pressure
H/O mode	Full	8.82 ± 1.96 (90 ± 20)	4.41 ± 0.98 (45 ± 10)	About 1/2 of pressure

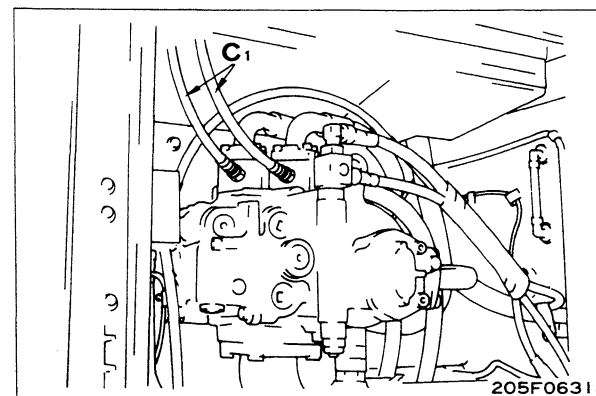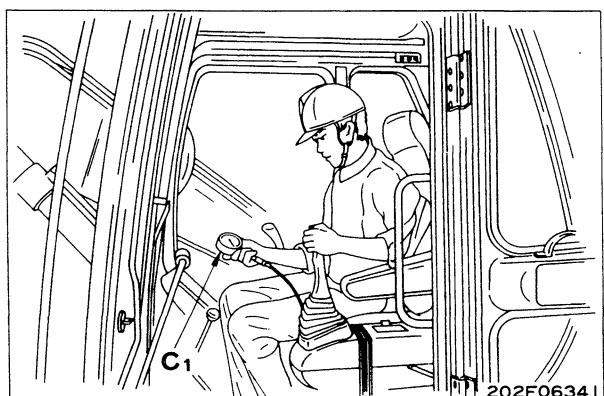
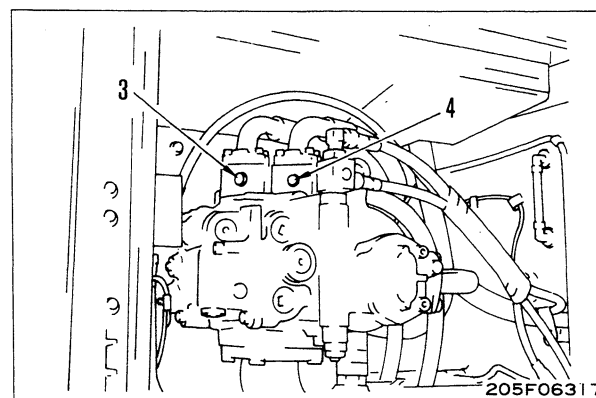
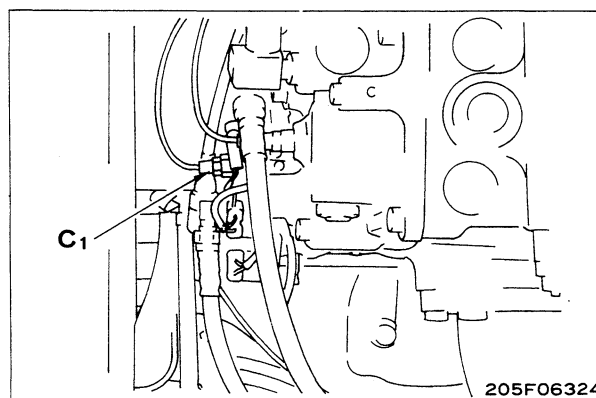
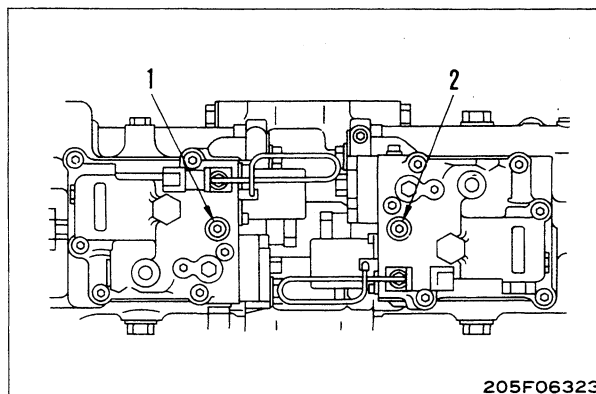


2. Measuring LS differential pressure**1) Measuring with a differential pressure gauge**

- i) Remove oil pressure measurement plugs (5) and (6) (Thread dia.=10mm, Pitch=1.5mm), and install differential pressure gauge **C4**.
- ii) Set to the conditions in Table 2 and measure the LS differential pressure.

Table 2

Working mode	Fuel control dial	Operation	Differential pressure (MPa(kg/cm ²))
H/O mode	MAX	Levers at neutral	2.94 ± 0.98 (30 $\pm$ 10)
H/O mode	MAX	Travel speed: Hi Travel circuit under no load (lever fully operated)	2.16 ± 0.1 (22 $\pm$ 1)

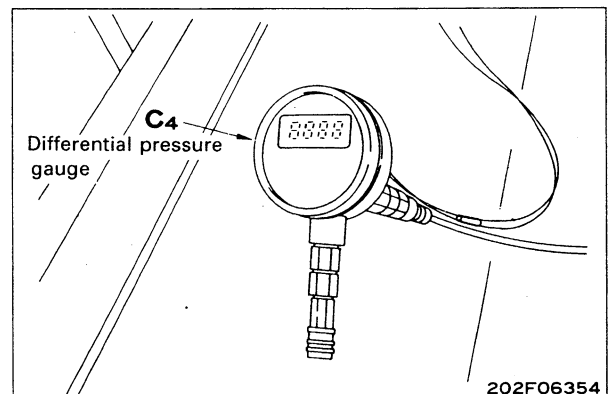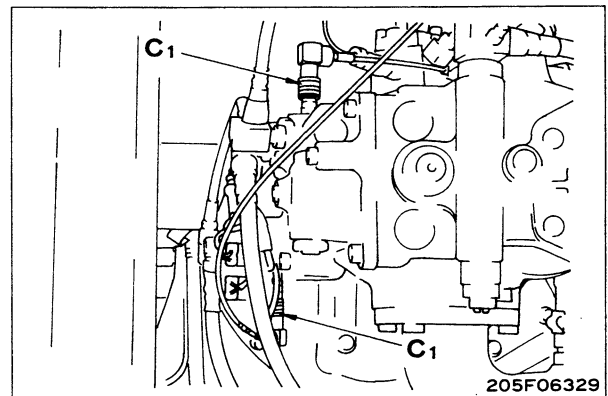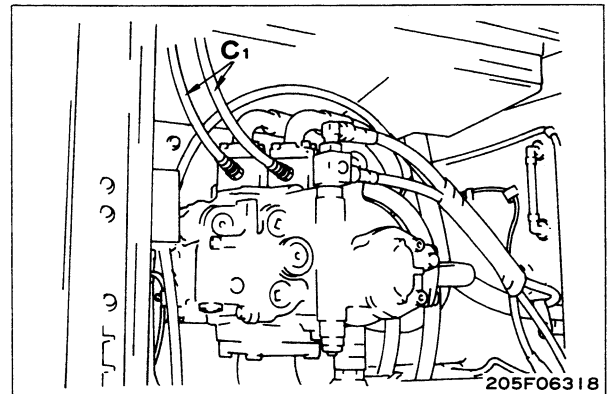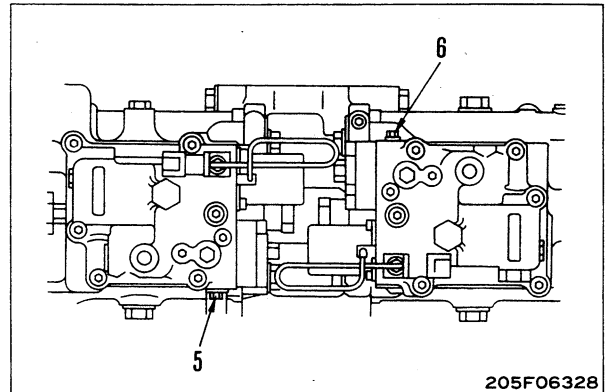**2) Measuring with oil pressure gauge**

- ★ The maximum differential pressure is 2.94 MPa (30 kg/cm²), so measure with the same gauge.

- i) Remove oil pressure measurement plugs (5) and (6) (thread dia.=10mm, pitch=1.5mm), and install the plug inside hydraulic tester **C1**.
- ii) Install oil pressure gauge **C1** (58.8 MPa (600 kg/cm²)) to the measurement plug for the pump discharge pressure.

- ★ Use a gauge with a scale in units of 0.98 MPa (10 kg/cm²).
(If no 58.8 MPa (600 kg/cm²) pressure gauge is available, a 39.2 MPa (400 kg/cm²) pressure gauge can be used.)

- iii) Set to the conditions in Table 2 and measure the pump discharge pressure.

- ★ Stand directly in front of the indicator and be sure to read it correctly.

- iv) Remove oil pressure gauge **C1**, then install to the LS pressure measurement plug.

- v) Set to the conditions in Table 2 and measure the LS pressure.

- ★ Stand directly in front of the indicator and be sure to read it correctly.

- Pump discharge pressure – LS pressure = Differential pressure

ADJUSTING

1. Adjusting LS valve

When the differential pressure is measured under the conditions above, and the results show that the differential pressure is not within the standard value, adjust as follows.

- 1) Loosen locknut (7) and turn screw (8) to adjust the differential pressure.


★ Turn the screw to adjust the differential pressure as follows.

- To INCREASE pressure, turn CLOCKWISE
- To DECREASE pressure, turn COUNTERCLOCKWISE

- 2) After adjusting, tighten locknut (7).

 Locknut : 29.4 ± 4.9 Nm (3.0 ± 0.5 kgm)

Note: Always measure the differential pressure while adjusting.


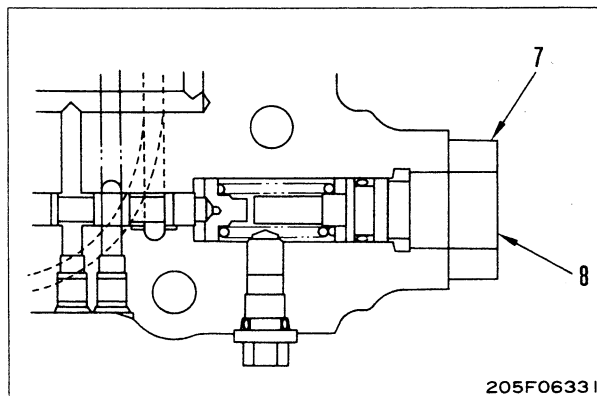


TESTING AND ADJUSTING CONTROL PUMP CIRCUIT OIL PRESSURE


MEASURING

- ★ Hydraulic oil temperature when measuring: 45 – 55°C
- 1. Remove pressure pick-up plug (1) (Thread dia.=10mm, Pitch=1.25mm), and install oil pressure gauge C₁ (5.88 MPa (60 kg/cm²)).
- 2. Start the engine and measure with the engine at high idling.
- ★ When testing for internal leakage of the equipment in the control circuit, use the parts given below to shut off the circuit for the following sections when measuring the relief pressure.

No.	Section of hydraulic circuit shut off	Component that can be checked
1	Control pump outlet port	Control pump
2	Solenoid valve inlet port	Solenoid valve
3	Travel PPC valve inlet port	Travel PPC valve
4	R.H. PPC valve inlet port	R.H. PPC valve
5	L.H. PPC valve inlet port	L.H. PPC valve

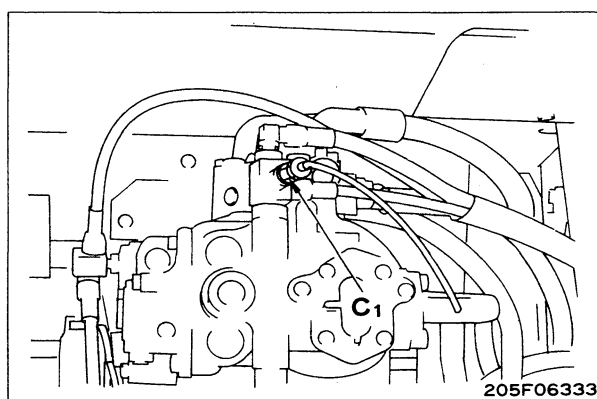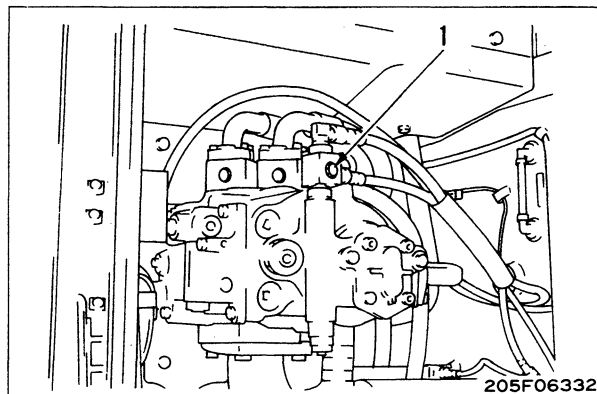

- ★ Items No.2 and below can be checked if the equipment in the previous number is normal.
- ★ Use the following parts to shut off the circuit.
 - For elbow
 - Sleeve nut : 07221 – 20210, 07221 – 20315
 - 07221 – 20422
 - Plug : 07222 – 00210, 07222-00315
 - 07222 – 00414
 - For hose
 - Plug : 07376 – 50210, 07376 – 50315
 - 07376 – 50422

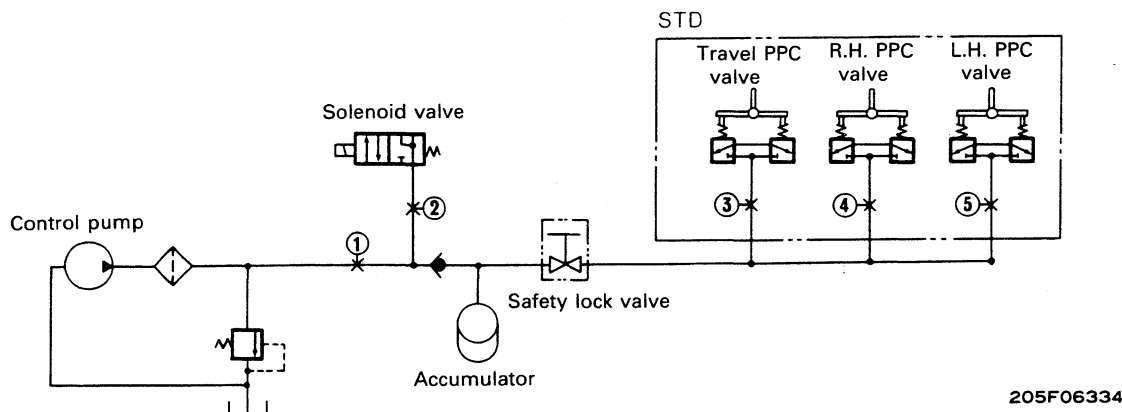

TESTING AND ADJUSTING TESTING AND ADJUSTING CONTROL PUMP CIRCUIT OIL PRESSURE

ADJUSTING


1. Loosen locknut (2) and turn adjustment screw (3) to adjust.

- ★ Turn the adjustment screw as follows.
 - To INCREASE pressure, turn CLOCKWISE
 - To DECREASE pressure, turn COUNTERCLOCKWISE

★ Amount of adjustment for one turn of adjustment screw: 0.53 MPa (5.4 kg/cm²).

 Locknut : 63.7 ± 9.8 Nm (6.5 ± 1.0 kgm)

★ After completion of adjustment, repeat the procedure in Item 1 to check the set pressure again.

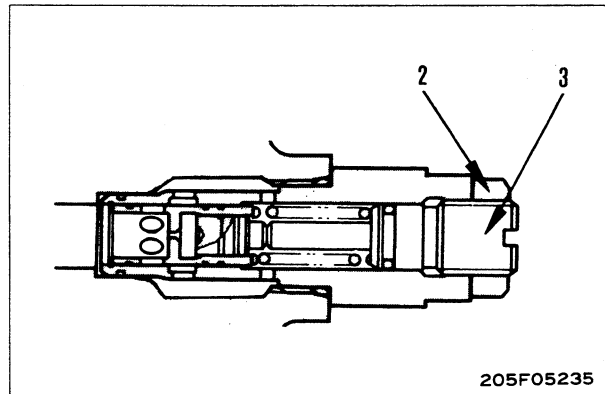

TESTING EPC VALVE, SOLENOID VALVE OUTPUT PRESSURE



MEASURING

- ★ Hydraulic oil temperature when measuring: 45 – 55°C
- 1. Measuring output pressure of LS control EPC valve
 - 1) Disconnect output hose (1) of the LS control EPC valve, then use adapter C₃ in the oil pressure gauge kit to install oil pressure gauge C₁ (5.88 MPa (60 kg/cm²)).
 - 2) Measure the output pressure under the conditions in Table 1.

Table 1

Operation and working mode	Engine speed (rpm)	Output pressure (MPa (kg/cm ²))	[Reference] Current (A)
All control levers at neutral	Min. 1,500	2.94 (30)	900 ± 30
H/O mode or G/O mode Travel circuit at neutral, any work equipment lever is operated	Min. 2,000	0 (0)	0

- ★ Monitoring code 10 or 40 for engine speed
- Monitoring code 15 for LS control EPC current

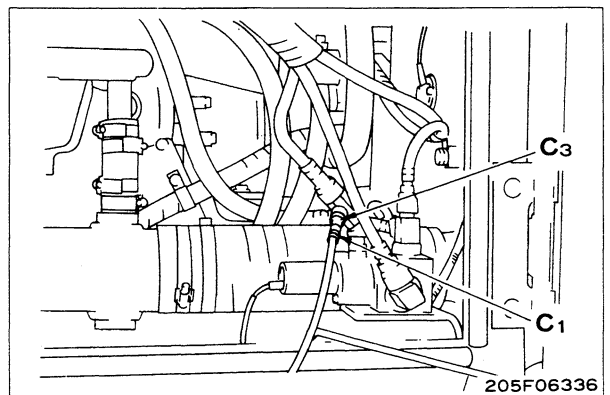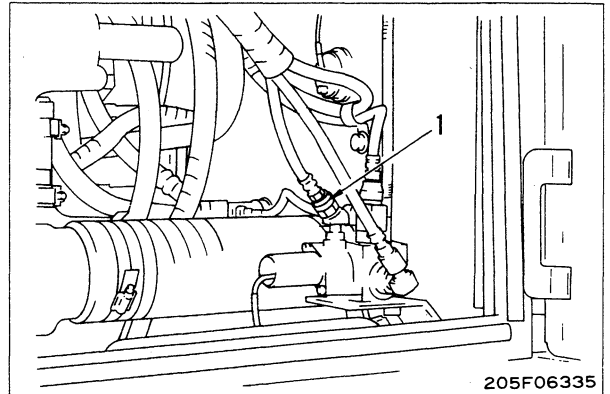

TESTING AND ADJUSTING

TESTING EPC VALVE, SOLENOID VALVE OUTPUT PRESSURE

2. Measuring output pressure of ON/OFF solenoid valve
 - 1) Disconnect outlet hose (2) of the solenoid valve, then use adapter **C₃** in the oil pressure gauge kit to install oil pressure gauge **C₁** (5.88 MPa (60 kg/cm²)).
 - 2) Measure the output pressure under the conditions in Table 2.


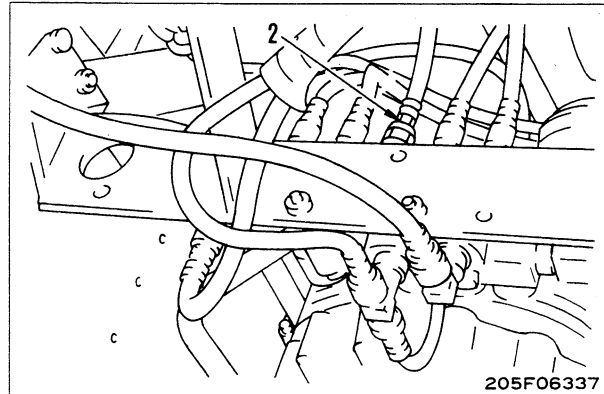


Table 2

Name of solenoid		Measurement conditions	Operating condition	Condition of solenoid	Oil pressure (MPa (kg/cm ²))	Remarks
1	Swing brake solenoid	Swing or work equipment lever operated	Brake canceled	ON	Min. 2.74 (Min. 28)	
		All levers except travel at neutral (5 sec after returning to neutral)	Brake actuated	OFF	0 (0)	
2	Travel speed solenoid	Travel speed switch at Hi or Mi Engine speed 1500rpm or above Travel lever operated	Travel speed Hi	ON	Min. 2.74 (Min. 28)	Motor swash plate angle at minimum
		Travel speed switch at Lo or engine speed 1500 rpm or below	Travel speed Lo	OFF	0	Motor swash plate angle at maximum
3	2-stage relief solenoid	Swing lock switch ON + work equipment lever operated	Pressure rise	ON	Min. 2.74 (Min. 28)	
		All levers at neutral	Normal pressure	OFF	0	
4	LS select solenoid	Swing lock switch OFF, compound operation of swing + travel or arm OUT or boom RAISE	LS circuit divided	ON	Min. 2.74 (Min. 28)	Divided only for compound operation of swing + travel, arm OUT, boom RAISE
		All levers at neutral	LS circuit not divided	OFF	0	
5	Pump merge-divider solenoid	Lever at neutral, or boom, arm, bucket operated independently	Flow from front and rear pumps merged	OFF	0	LS pump merge-divider valve actuated at same time
		Travel or swing operated independently	Flow from front and rear pumps divided	ON	Min. 2.74 (Min. 28)	

- ★ The basic pressure of the LS select solenoid valve is supplied from the PPC shuttle valve. Therefore, the oil pressure is not supplied unless one of the travel or arm OUT or boom RAISE is operated.
- ★ Operation of solenoid valve
 ON: Continuous (oil pressure generated)
 OFF: Not continuous (oil pressure: 0)

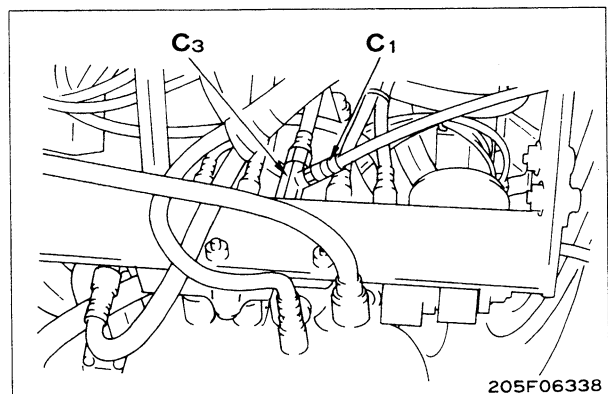


K20506

MEASURING PPC VALVE OUTPUT PRESSURE AND TESTING PPC SHUTTLE VALVE

★ Hydraulic oil temperature when measuring: 45 – 55°C

1. Measuring PPC valve output pressure

- 1) Disconnect the hose of the circuit to be measured (see next page).
- 2) Install adapter **C₃** between the hose and elbow.
- 3) Install oil pressure gauge **C₁** (5.88 MPa (60 kg/cm²)) to adapter **C₃**.
- 4) Run the engine at high idling, operate the control lever of the circuit to be measured, and measure the oil pressure.

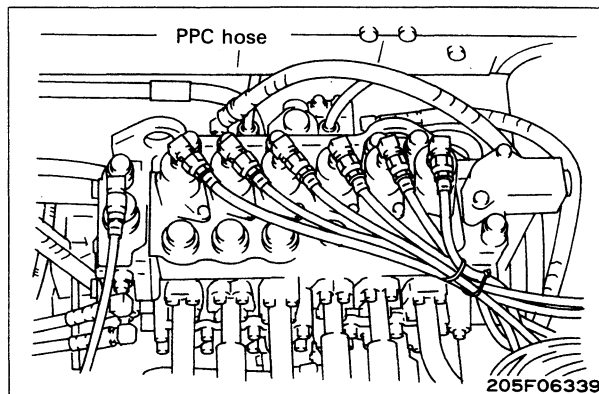


2. Checking PPC shuttle valve

If the output pressure at the control valve end is low, check for leakage of oil from the PPC shuttle valve as follows.



- 1) Disconnect the hose between the PPC valve and the shuttle block at the block end.
- 2) Install an adapter for measuring the oil pressure to the tip of the hose, then install blind plugs to the tip and shuttle block end.
- 3) Operate the control lever and measure the output pressure.

★ If the output pressure becomes normal, there is leakage from the PPC shuttle valve; if there is no change, the PPC valve is defective.

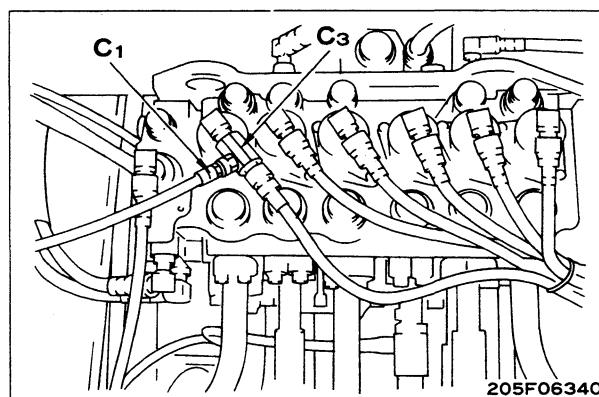

3. Checking defective operation of PPC shuttle valve

- 1) Remove the oil pressure switch, fit adapter **C₅**, then install oil pressure gauge **C₁** (5.88 MPa (60 kg/cm²)).
 - 2) Operate the applicable lever.
- If no oil pressure is generated or if oil pressure is generated when another lever is operated, the operation of the PPC shuttle valve is defective.

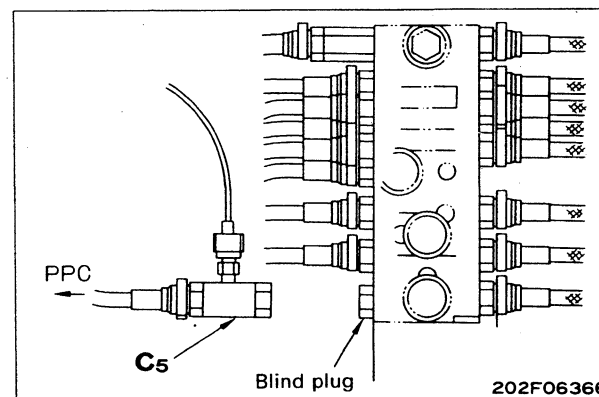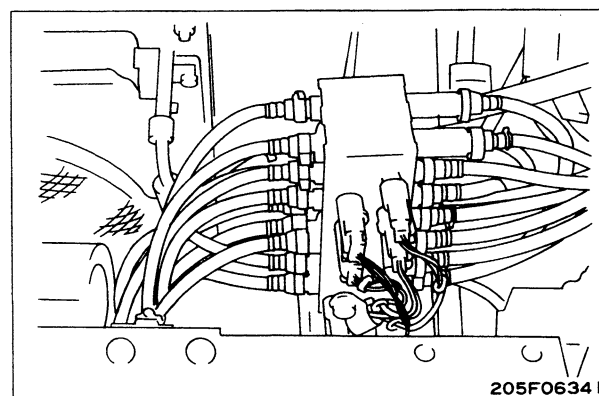


TESTING AND ADJUSTING

MEASURING PPC VALVE OUTPUT PRESSURE AND TESTING PPC SHUTTLE VALVE


Oil pressure switch location diagram

Shuttle block seen from rear of machine

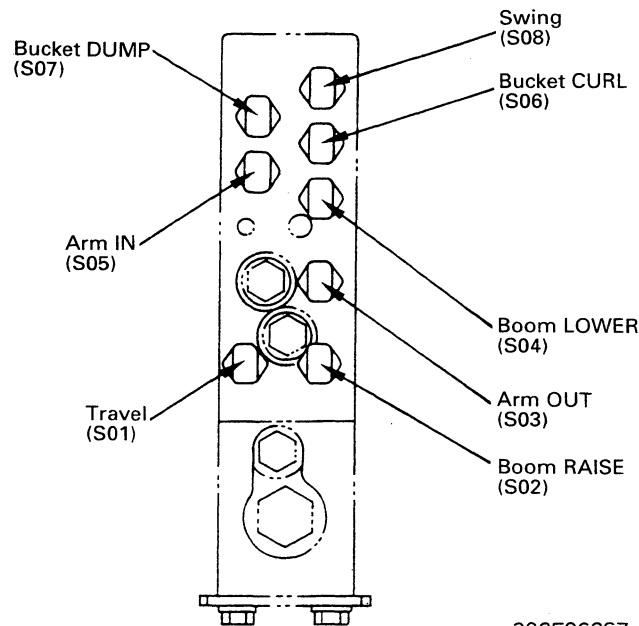

202F06367

● Circuit diagram

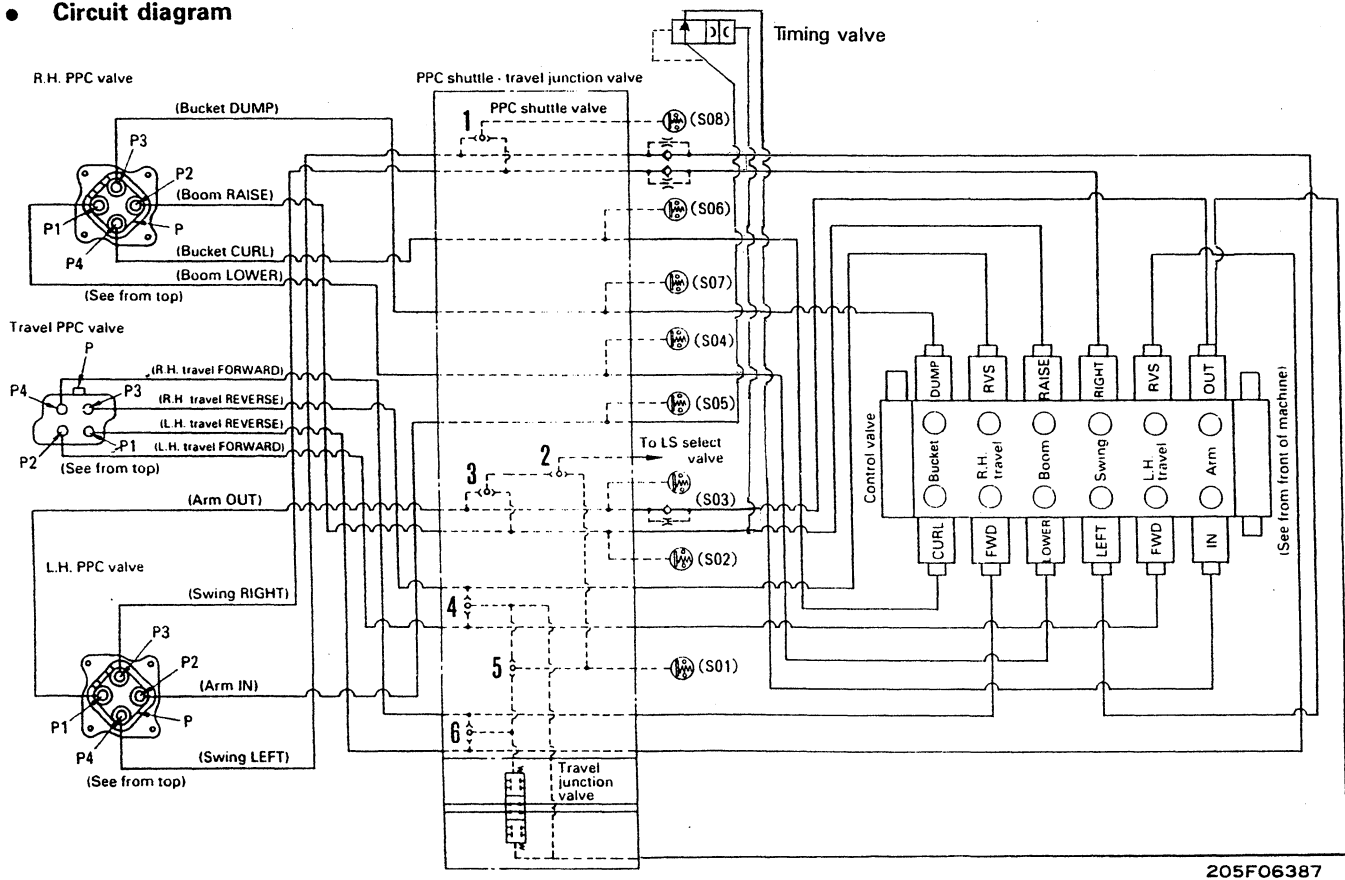

205F06387

1. Swing PPC shuttle valve
2. PPC shuttle valve for LS select
3. PPC shuttle valve for arm OUT, boom RAISE
4. PPC shuttle valve for L.H. travel FORWARD, R.H. travel REVERSE
5. Travel PPC shuttle valve
6. PPC shuttle valve for R.H. travel FORWARD, L.H. travel REVERSE

ADJUSTING WORK EQUIPMENT • SWING PPC VALVE

★ If there is excessive play in the work equipment or swing lever, adjust as follows.

⚠ Lower the work equipment to the ground and stop the engine. Loosen the oil filler cap slowly to release the pressure inside the hydraulic tank. Then set the safety lock lever to the LOCK position.

1. Remove the PPC valve.
2. Remove boot (1).
3. Loosen locknut (2), then screw in disc (3) until it contacts the 4 heads of piston (4).


★ When doing this, do not move the piston.

4. Secure disc (3) in position, then tighten locknut (2) to the specified torque.

 Locknut : 107.8 ± 9.8 Nm (11 ± 1 kgm)


5. Install boot (1).

★ With the above adjustment, the clearance between disc (3) and piston (4) becomes 0.

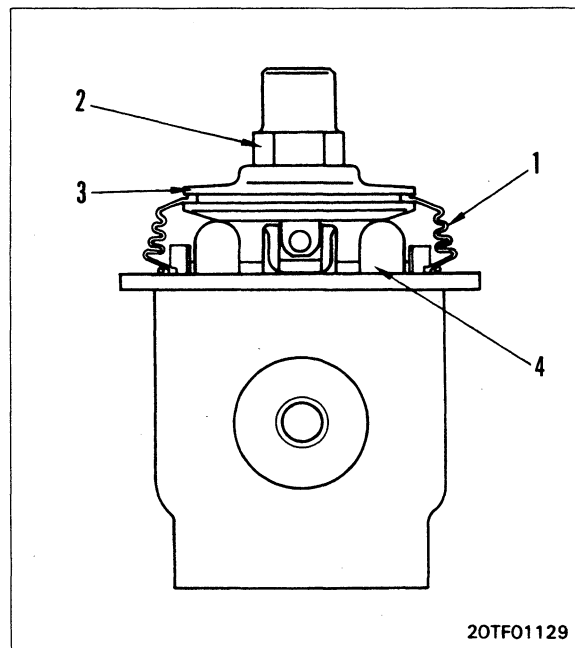

ADJUSTING TRAVEL LEVER

1. Use bolt (2) to install lever (1) to the PPC valve.
2. In this condition, move left and right travel levers (3) forward and backward, and check that the levers are fitted securely in the stopper (bolt head) of the PPC valve.
3. Check also that cover (3) is not contacting portion (b).
 - ★ If it is contacting, adjust with the PPC mounting bolt or cover mounting bolt.


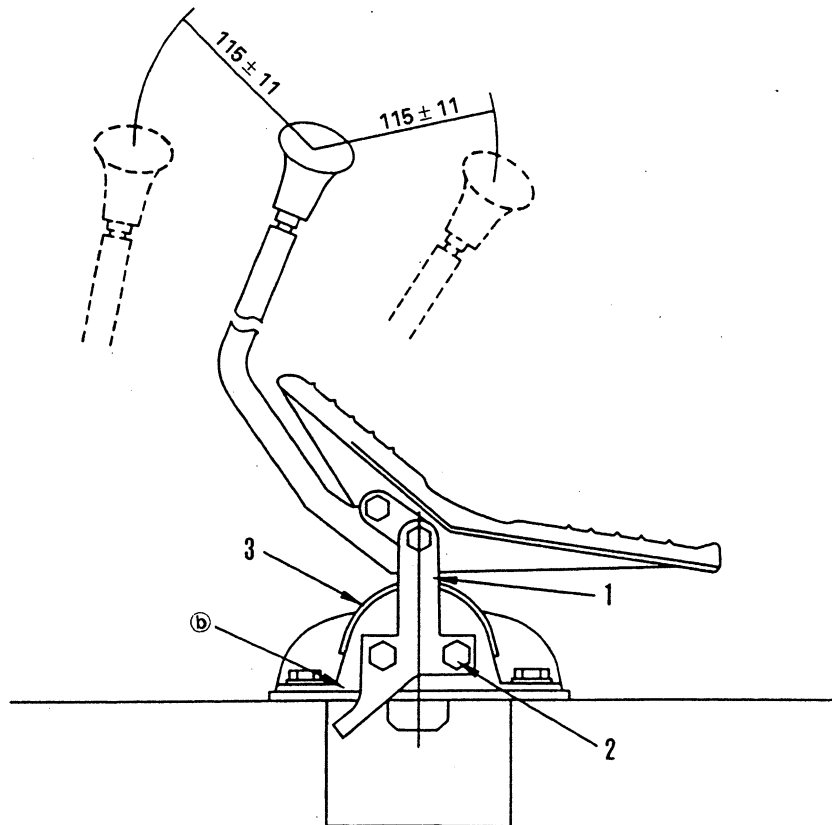


202F06372

K20506

TESTING TRAVEL DEVIATION

- ★ When traveling on level ground.
- 1. Set the machine in the travel posture.
 - ★ For the travel posture, extend the bucket and arm cylinder rods fully, and hold the boom angle at 45° .
- 2. Travel for 10 m, then measure the deviation when traveling for the next 20 m.
 - ★ Set to H/O mode and measure with the engine at high idling.
 - ★ Install the hydraulic pressure gauge and measure the pump discharge pressure at the same time.

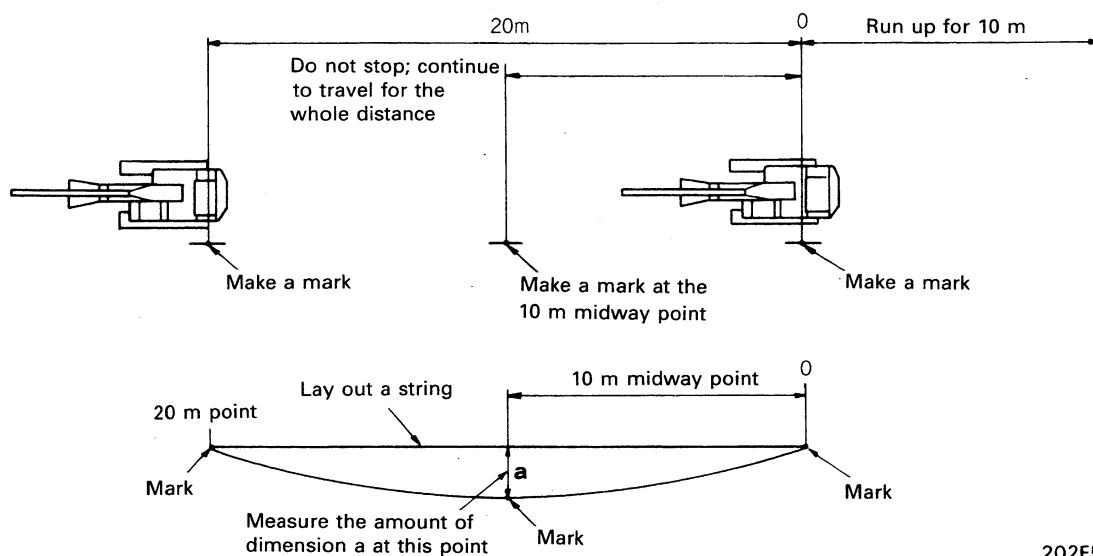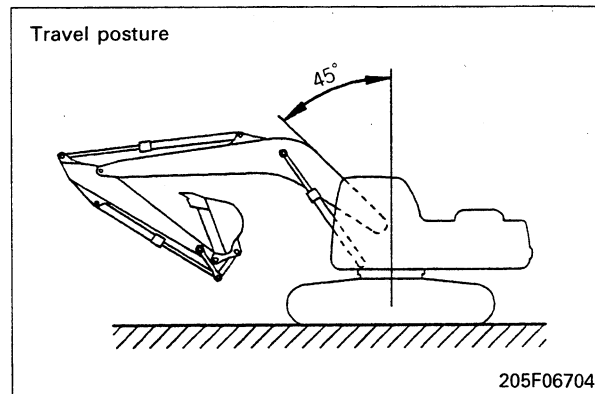

202F5258

TESTING AND ADJUSTING

TESTING LOCATIONS CAUSING HYDRAULIC DRIFT OF WORK EQUIPMENT

★ If there is any hydraulic drift in the work equipment (cylinders), check as follows to determine if the cause is in the cylinder packing or in the control valve.


1. Checking for defective cylinder packing

- 1) Checking boom and bucket cylinders
 - i) Set in the same posture as when measuring hydraulic drift, and stop the engine.
 - ii) Operate the boom control lever to RAISE or the bucket control lever to CURL.
 - If the lowering speed increases, the packing is defective.
 - If there is no change, the boom holding valve (boom) or the control valve (bucket) is defective.
 - 2) Checking arm cylinder
 - i) Operate the arm cylinder to move the arm in fully, then stop the engine.
 - ii) Operate the control lever to arm IN.
 - If the lowering speed increases, the packing is defective.
 - If there is no change, the control valve is defective.
- ★ If the pressure in the accumulator has dropped, run the engine for approx. 10 seconds to charge the accumulator again before operating.

[Reference] If the cause of the hydraulic drift is in the packing, and the above operation is carried out, the downward movement becomes faster for the following reasons.


- 1) If the work equipment is set to the above posture (holding pressure applied to the bottom end), the oil at the bottom end leaks to the head end. However, the volume at the head end is smaller than the volume at the bottom end by the volume of the rod, so the internal pressure at the head end increases because of the oil flowing in from the bottom end.
- 2) When the internal pressure at the head end increases, the pressure at the bottom end also rises in proportion to this. The balance is maintained at a certain pressure (this differs according to the amount of leakage) by repeating this procedure.
- 3) When the pressure is balanced, the downward movement becomes slower. If the lever is then operated according to the procedure given above, the circuit at the head end is opened to the drain circuit (the bottom end is closed by the check valve), so the oil at the head end flows to the drain circuit and the downward movement becomes faster.

Boom, bucket checking posture

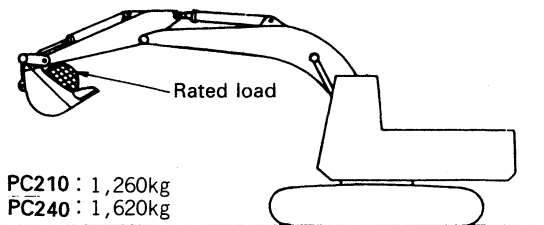

205F05264

Arm checking posture

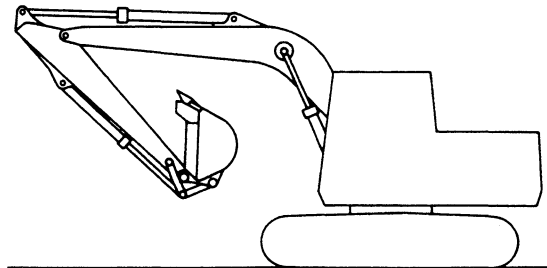

205F05265

K20506

2. Checking PPC valve

If the hydraulic drift differs when the safety lock lever is in the LOCK or FREE position, (engine running), the PPC valve is defective.

K20506

MEASURING OIL LEAKAGE

★ Hydraulic oil temperature when measuring: 45 – 55°C

1. Work equipment cylinder

★ If the hydraulic drift of the work equipment is outside the standard value, measure the leakage inside the cylinder as follows, and judge if the cause of the hydraulic drift is in the cylinder or in the control valve.


- If the leakage is within the standard value, the problem is in the control valve.
- If the leakage is greater than the standard value, the problem is in the cylinder.

- 1) Fully extend the rod of the cylinder to be measured, then stop the engine.
- 2) Disconnect piping (1) at the head end, then block the piping at the chassis end with a blind plug.






⚠ Be careful not to disconnect the piping at the bottom end.

- 3) Start the engine and apply the relief pressure to the bottom end of the cylinder with the engine at high idling.
- 4) Continue this condition for 30 seconds, then measure the oil leakage for the next one minute.

Posture for measuring boom cylinder

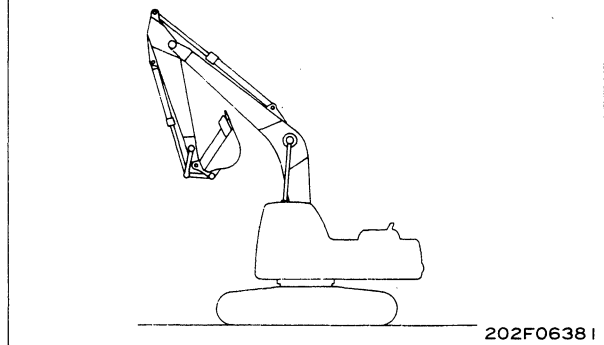


Posture for measuring arm, bucket cylinder

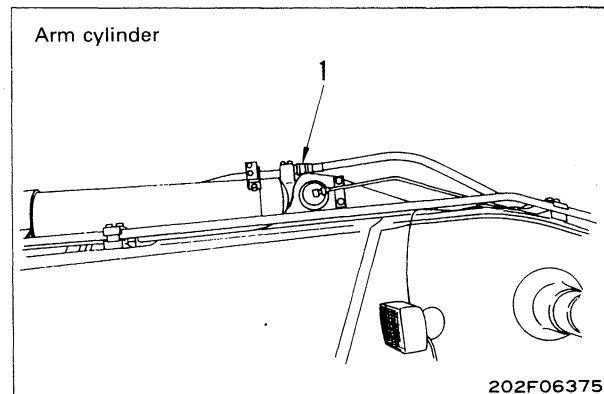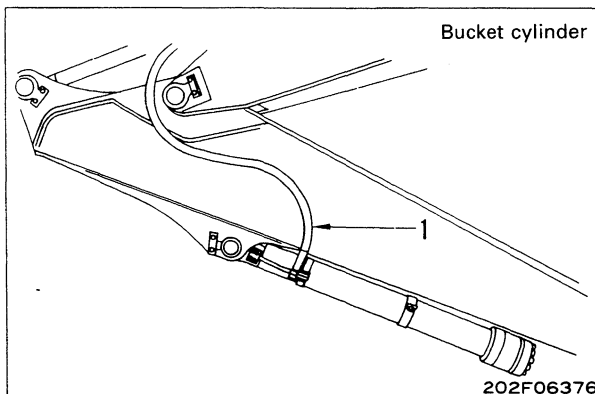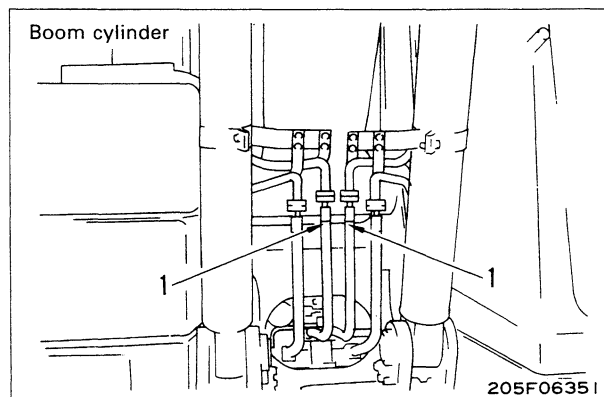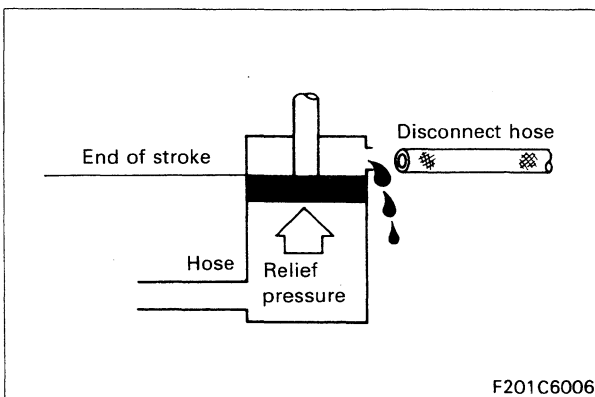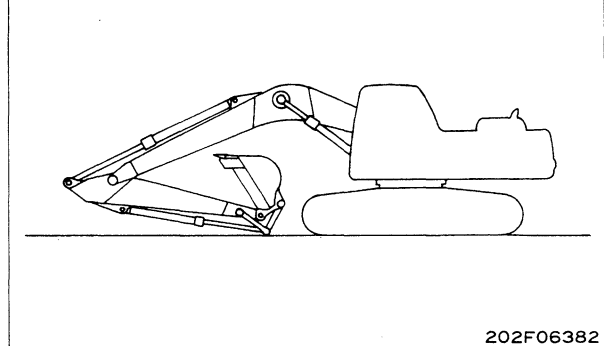

2. Swing motor



- 1) Disconnect drain hose (1) from the swing motor, then fit a blind plug at the tank end.
 - 2) Set the swing lock switch ON.
 - 3) Start the engine and operate the swing relief with the engine at high idling.
 - 4) Continue this condition for 30 seconds, then measure the oil leakage for the next one minute.
- ★ After measuring, swing 180° and measure again.

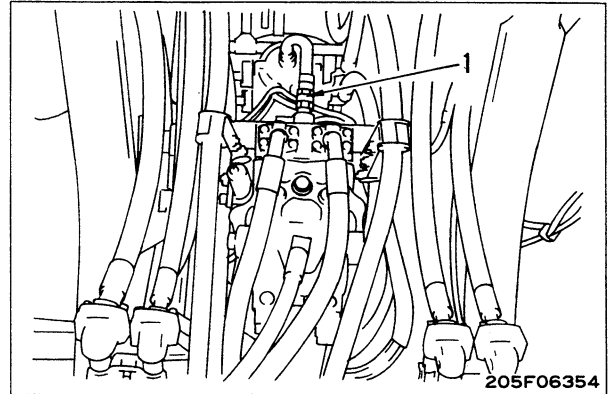

3. Travel motor

- 1) Disconnect drain hose (2) from the travel motor, then fit a blind plug at the hose end.
 - 2) Fit block ① under the track shoe grouser, or fit block ② between the sprocket and frame to lock the track.
 - 3) Start the engine and operate the travel relief with the engine at high idling.

⚠ When measuring the oil leakage from the travel motor, mistaken operation of the control lever may lead to a serious accident, so always use signals and check when carrying out this operation.
 - 4) Continue this condition for 30 seconds, then measure the oil leakage for the next one minute.
- ★ When measuring, move the motor slightly (to change the position between the valve plate and cylinder, and piston and cylinder), and measure several times.

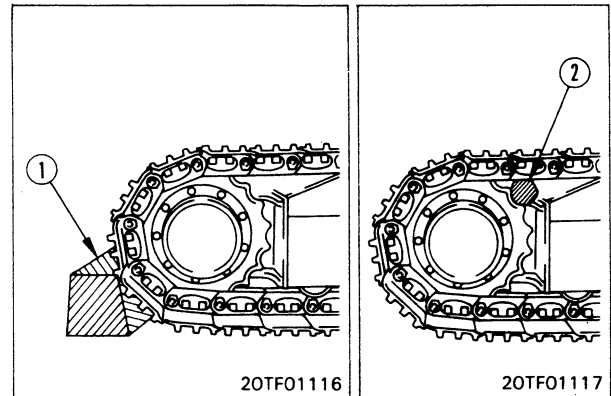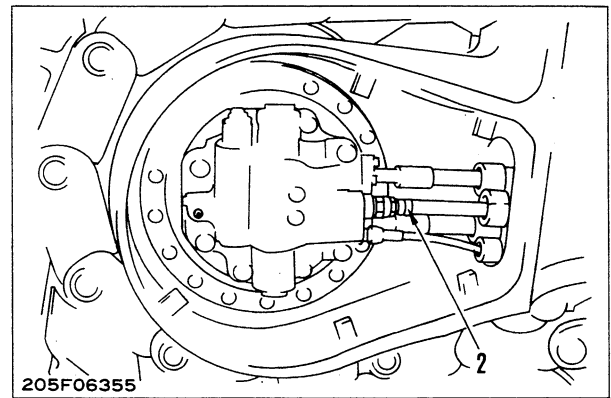

RELEASING REMAINING PRESSURE IN HYDRAULIC CIRCUIT

- ★ If the piping between the hydraulic cylinder and the control valve is disconnected, release the remaining pressure from the circuit as follows.
- The travel circuit is an open circuit, so there is no remaining pressure. It is enough to remove the oil filler cap.
1. Loosen the oil filler cap slowly to release the pressure inside the tank.
 2. Operate the control levers.

★ When the levers are operated 2 – 3 times, the pressure stored in the accumulator is removed.
 3. Start the engine, run at low idling for approx. 5 minutes, then stop the engine and operate the control levers.

★ Repeat the above operation 2 – 3 times to release all the remaining pressure.

K20506

BLEEDING AIR

Order for operations and procedure for bleeding air

Air bleeding item Nature of work	Air bleeding procedure						
	1	2	3	4	5	6	7
	Bleeding air from pump	Start engine	Bleeding air from cylinder	Bleeding air from swing motor	Bleeding air from travel motor	Start operations	Bleeding air between EPC valve and control valve
● Replace hydraulic oil. ● Clean strainer	○ →	○ →	○ →	○ → (Note 1)	○ → (Note 1)	○	
● Replace return filter element		○	→	→	→	○	
● Replace, repair pump ● Remove suction piping	○ →	○ →	○ →	→	→	○	
● Replace, repair control valve		○ →	○ →	→	→	○	
● Replace cylinder ● Remove cylinder piping		○ →	○ →	→	→	○	
● Replace swing motor ● Remove swing motor piping		○ →	→	○ →	→	○	
● Replace travel motor, swivel ● Remove travel motor, swivel piping		○ →	→	→	○ →	○	
● Replace EPC valve		○ →	→	→	→	→	○

Note 1: Bleed the air from the swing and travel motors only when the oil inside the motor case has been drained.

1. Bleeding air from pump

1) Loosen air bleed plug (1), and check that oil oozes out from the plug.

2) When oil oozes out, tighten plug(1).

 Plug : $17.15 \pm 2.45 \text{ Nm}$
($1.75 \pm 0.25 \text{ kgm}$)

★ If no oil oozes out from the air bleed plug:

3) Leave plug (1) loosened and remove hose (2) and elbow (3).

4) Pour in oil through the elbow mount hole until oil oozes out from plug (1).

5) Fit elbow (3) and install hose (2).


6) Tighten air bleed plug (1).

 Plug : $17.15 \pm 2.45 \text{ Nm}$
($1.75 \pm 0.25 \text{ kgm}$)

★ Precautions when starting the engine

After completing the above procedure and starting the engine, run the engine at low idling for 10 minutes.

★ If the coolant temperature is low and automatic warming-up is carried out, cancel it by using the fuel control dial after starting the engine.

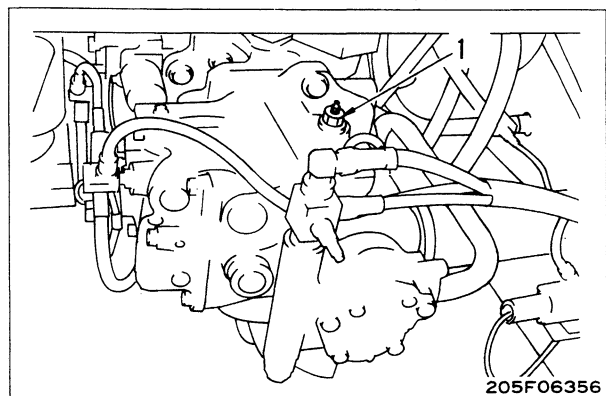

K20506

2 Bleeding air from hydraulic cylinders

- 1) Start the engine and run at idling for approx. 5 minutes.
- 2) Run the engine at low idling, then raise and lower the boom 4 ~ 5 times in succession.
 - ★ Operate the piston rod to approx. 100 mm before the end of its stroke. Do not relieve the circuit under any circumstances.
- 3) Run the engine at high idling and repeat Step 2). After that, run the engine at low idling, and operate the piston rod to the end of its stroke to relieve the circuit.
- 4) Repeat Steps 2) and 3) to bleed the air from the arm and bucket cylinders.
- ★ When the cylinder has been replaced, bleed the air before connecting the piston rod. Be particularly careful not to operate the cylinder to the end of its stroke when the piston rod has been connected to the LOWER end of the boom cylinder.



3. Bleeding air from swing motor

- 1) Run the engine at low idling, loosen air bleed plug (1), and check that oil oozes out.
- ★ If no oil oozes out from the air bleed plug:
- 2) Stop the engine, and pour oil into the motor case from plug (1).
- 3) Tighten air bleed plug (1).

 Plug : $166.6 \pm 19.6 \text{ Nm}$ ($17 \pm 2 \text{ kgm}$)

4. Bleeding air from travel motor

Run the engine at low idling, loosen air bleed plug (2), and when oil oozes out, tighten the plug again.

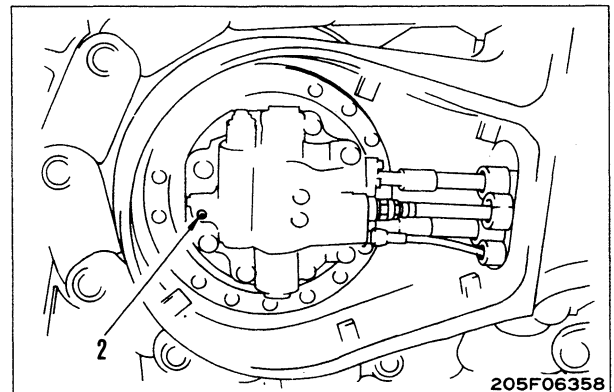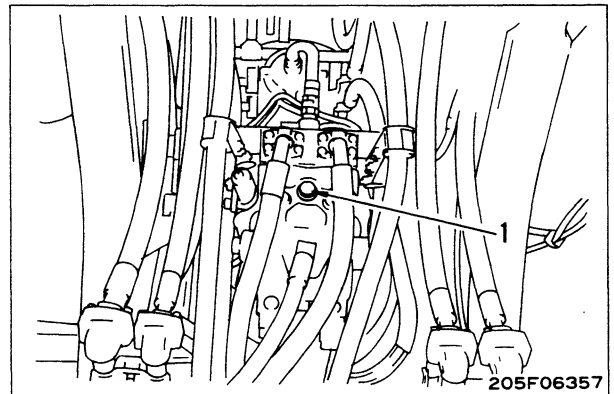

TROUBLESHOOTING

Points to remember when troubleshooting	20- 54
Sequence of events in troubleshooting	20- 55
Precautions when carrying out maintenance	20- 56
Checks before troubleshooting	20- 63
Connector types and mounting locations	20- 64
Connection table for connector pin numbers	20- 68
Explanation of control mechanism for electrical system	20- 82
Display method and special functions of monitor panel	20- 83
Method of using judgement table	20- 92
Method of using troubleshooting charts	20- 94
Details of troubleshooting and troubleshooting procedure	20- 96
Troubleshooting of engine throttle controller system (E mode)	20- 101
Troubleshooting of engine (S mode)	20- 129
Troubleshooting of pump controller system (C mode)	20- 153
Troubleshooting of pump controller input signal system (F mode)	20- 185
Troubleshooting of hydraulic and mechanical system (H mode)	20- 197
Troubleshooting of machine monitor system (M mode)	20- 231

K20506

POINTS TO REMEMBER WHEN TROUBLESHOOTING

- ⚠ Stop the machine in a level place, and check that the safety pin, blocks, and parking brake are securely fitted.
- ⚠ When carrying out the operation with two or more workers, keep strictly to the agreed signals, and do not allow any unauthorized person to come near.
- ⚠ If the radiator cap is removed when the engine is hot, hot water may spurt out and cause burns, so wait for the engine to cool down before starting troubleshooting.
- ⚠ Be extremely careful not to touch any hot parts or to get caught in any rotating parts.
- ⚠ When disconnecting wiring, always disconnect the negative (–) terminal of the battery first.
- ⚠ When removing the plug or cap from a location which is under pressure from oil, water, or air, always release the internal pressure first. When installing measuring equipment, be sure to connect it properly.


The aim of troubleshooting is to pinpoint the basic cause of the failure, to carry out repairs swiftly, and to prevent reoccurrence of the failure.

When carrying out troubleshooting, an important point is of course to understand the structure and function. However, a short cut to effective troubleshooting is to ask the operator various questions to form some idea of possible causes of the failure that would produce the reported symptoms.

1. When carrying out troubleshooting, do not hurry to disassemble the components.
If components are disassembled immediately any failure occurs:
 - Parts that have no connection with the failure or other unnecessary parts will be disassembled.
 - It will become impossible to find the cause of the failure.

It will also cause a waste of manhours, parts, or oil or grease, and at the same time, will also lose the confidence of the user or operator.
For this reason, when carrying out troubleshooting, it is necessary to carry out thorough prior investigation and to carry out troubleshooting in accordance with the fixed procedure.
2. Points to ask user or operator
 - 1) Have any other problems occurred apart from the problem that has been reported?
 - 2) Was there anything strange about the machine before the failure occurred?
 - 3) Did the failure occur suddenly, or were there problems with the machine condition before this?
 - 4) Under what conditions did the failure occur?
 - 5) Had any repairs been carried out before the failure?
When were these repairs carried out?
 - 6) Has the same kind of failure occurred before?
3. Check before troubleshooting
 - 1) Check the oil level
 - 2) Check for any external leakage of oil from the piping or hydraulic equipment.
 - 3) Check the travel of the control levers.
 - 4) Check the stroke of the control valve spool.
 - 5) Other maintenance items can be checked externally, so check any item that is considered to be necessary.
4. Confirming failure
 - Confirm the extent of the failure yourself, and judge whether to handle it as a real failure or as a problem with the method of operation, etc.
 - ★ When operating the machine to reenact the troubleshooting symptoms, do not carry out any investigation or measurement that may make the problem worse.
5. Troubleshooting
 - Use the results of the investigation and inspection in Items 2 – 4 to narrow down the causes of failure, then use the troubleshooting flowchart to locate the position of the failure exactly.
 - ★ The basic procedure for troubleshooting is as follows.
 - 1) Start from the simple points.
 - 2) Start from the most likely points.
 - 3) Investigate other related parts or information.
6. Measures to remove root cause of failure
 - Even if the failure is repaired, if the root cause of the failure is not repaired, the same failure will occur again.
To prevent this, always investigate why the problem occurred. Then, remove the root cause.

SEQUENCE OF EVENTS IN TROUBLESHOOTING

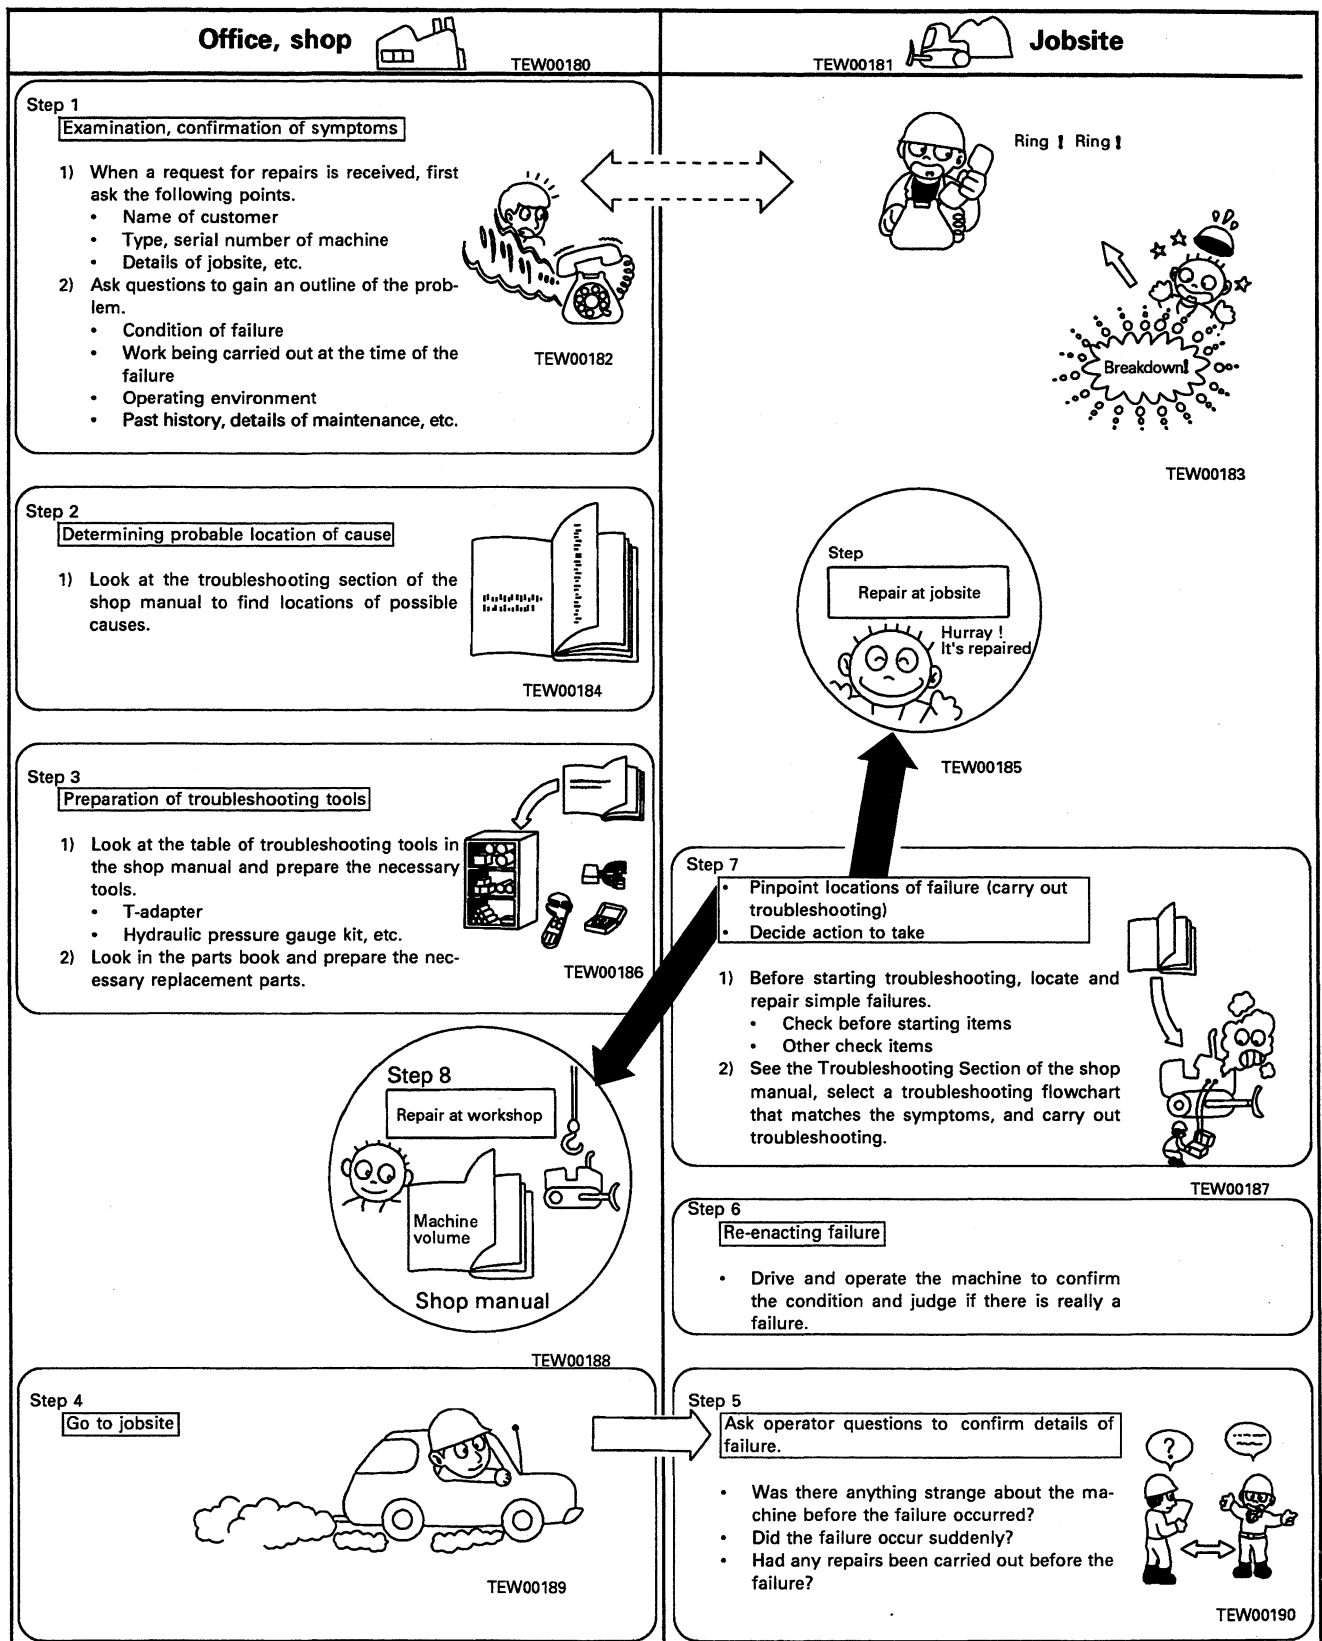

K20506

PRECAUTIONS WHEN CARRYING OUT MAINTENANCE

To maintain the performance of the machine over a long period, and to prevent failures or other troubles before they occur, correct operation, maintenance and inspection, troubleshooting, and repairs must be carried out. This section deals particularly with correct repair procedures for mechatronics and is aimed at improving the quality of repairs. For this purpose, it gives sections on "Handling electric equipment" and "Handling hydraulic equipment" (particularly hydraulic oil).


1. PRECAUTIONS WHEN HANDLING ELECTRIC EQUIPMENT

1) Handling wiring harnesses and connectors


Wiring harnesses consist of wiring connecting one component to another component, connectors used for connecting and disconnecting one wire from another wire, and protector or tubes used for protecting the wiring. Compared with other electrical components fitted in boxes or cases, wiring harnesses are more likely to be affected by the direct effects of rain, water, heat, or vibration. Furthermore, during inspection and repair operations they are frequently removed and installed again, so they are likely to suffer deformation or damage. For this reason, it is necessary to be extremely careful when handling wiring harnesses.

Main failures occurring in wiring harness

- (1) Defective contact of connectors (defective contact between male and female)
Problems with defective contact are likely to occur because the male connector is not properly inserted into the female connector, or because one or both of the connectors is deformed or the position is not correctly aligned, or because there is corrosion or oxidization of the contact surfaces.

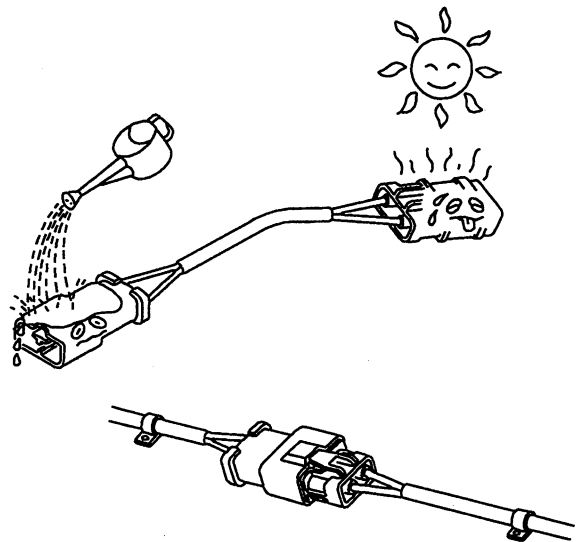

TEW00191

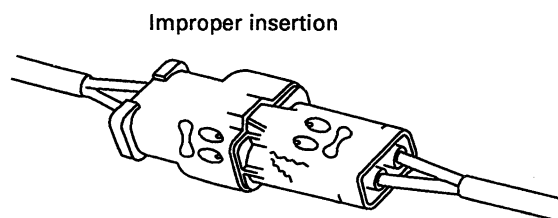


TEW00192

K20506


(2) Defective compression or soldering of connectors

The pins of the male and female connectors are in contact at the compressed terminal or soldered portion, but there is excessive force on the wiring, and the plating peels to cause improper connection or breakage.

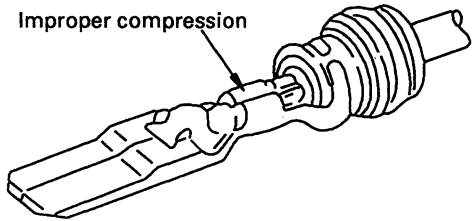

(3) Disconnections in wiring


If the wiring is held and the connectors are pulled apart, or components are lifted with a crane with the wiring still connected, or a heavy object hits the wiring, the compression of the connector may be lost, or the soldering may be damaged, or the wiring may be broken.

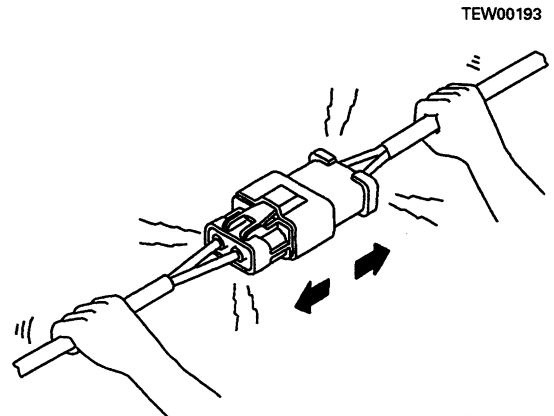

(4) High pressure water entering connector

The connector is designed to make it difficult for water to enter (drip-proof structure), but if high-pressure water is sprayed directly on the connector, water may enter the connector depending on the direction of the water jet.

The connector is designed to prevent water from entering, but at the same time, if the water does enter, it is difficult for it to be drained. Therefore, if water should get into the connector, the pins will be short-circuited by the water, so if any water gets in, immediately dry the connector or take other appropriate action before passing electricity through it.

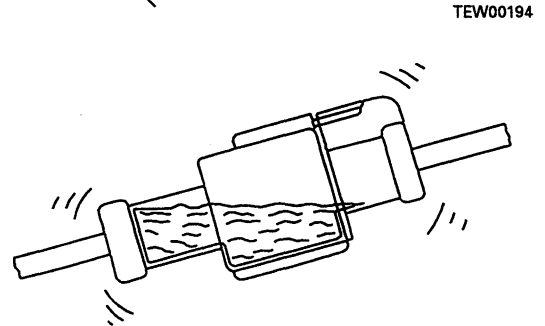


(5) Oil or dirt stuck to connector

If oil or grease are stuck to the connector and an oil film is formed on the mating surface between the male and female pins, the oil will not let the electricity pass, so there will be defective contact.

If there is oil or grease or dirt stuck to the connector, wipe it off with a dry cloth or blow dry with air, and spray it with a contact restorer.

- ★ When wiping the mating portion of the connector, be careful not to use excessive force or deform the pins.
- ★ If there is water or oil in the air, it will increase the contamination of the points, so clean with air from which all the water and oil has been removed.

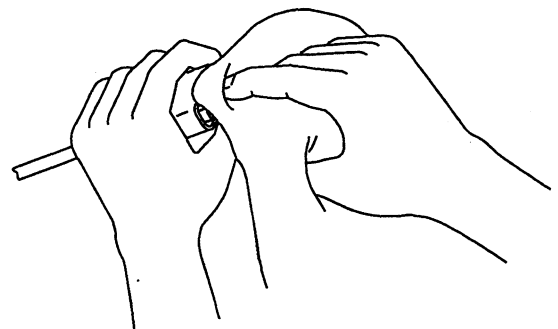

TEW00196

TROUBLESHOOTING

PRECAUTIONS WHEN CARRYING OUT MAINTENANCE


2) Removing, installing, and drying connectors and wiring harnesses

Disconnecting connectors

- (1) Hold the connectors when disconnecting.

When disconnecting the connectors, hold the connectors and not the wires.


For connectors held by a screw, loosen the screw fully, then hold the male and female connectors in each hand and pull apart. For connectors which have a lock stopper, press down the stopper with your thumb and pull the connectors apart.

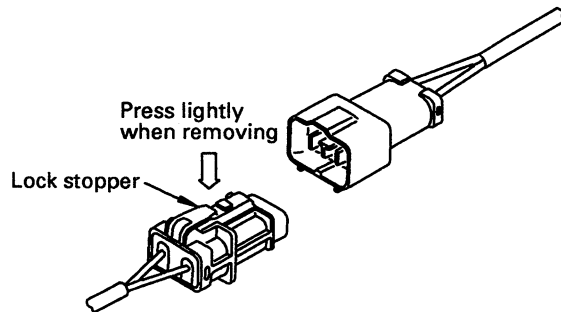

TEW00197

- (2) Action to take after removing connectors

After removing any connector, cover it with a vinyl bag to prevent any dust, dirt, oil, or water from getting in the connector portion.

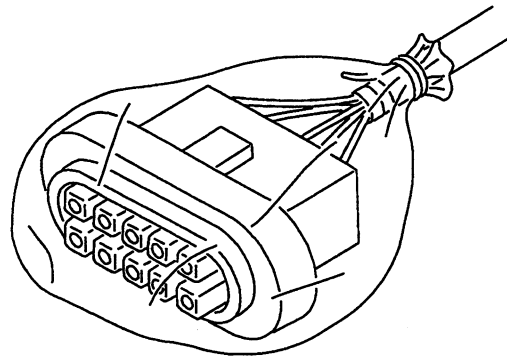

TEW00198


Connecting connectors

- (1) Check the connector visually.

- Check that there is no oil, dirt, or water stuck to the connector pins (mating portion).
 - Check that there is no deformation, defective contact, corrosion, or damage to the connector pins.
 - Check that there is no damage or breakage to the outside of the connector.
- ★ If there is any oil, water, or dirt stuck to the connector, wipe it off with a dry cloth. If any water has got inside the connector, warm the inside of the wiring with a dryer, but be careful not to make it too hot as this will cause short circuits.
- ★ If there is any damage or breakage, replace the connector.

K20506


- (2) Fix the connector securely.
Align the position of the connector correctly, then insert it securely.
For connectors with lock stopper
Push in the connector until the stopper clicks into position.

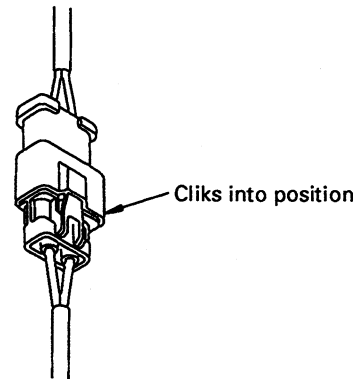

TEW00199

- (3) Correct any protrusion of the boot and any misalignment of the wiring harness
For connectors fitted with boots, correct any protrusion of the boot. In addition, if the wiring harness is misaligned, or the clamp is out of position, adjust it to its correct position.

- ★ When blowing with dry air, there is danger that the oil in the air may cause improper contact, so clean with air from which all the water and oil has been removed.

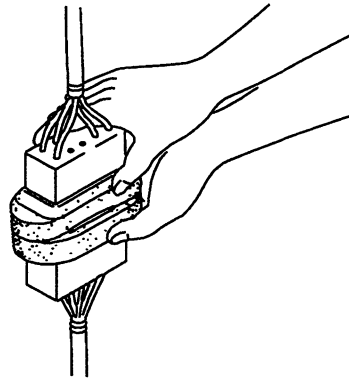


TEW00200

Drying wiring harness

If there is any oil or dirt on the wiring harness, wipe it off with a dry cloth. Avoid washing it in water or using steam. If the connector must be washed in water, do not use high pressure water or steam directly on the wiring harness. If water gets directly on the connector, do as follows.

- (1) Disconnect the connector and wipe off the water with a dry cloth.

- ★ If the connector is blown dry with air, there is the risk that oil in the air may cause defective contact, so avoid blowing with air.

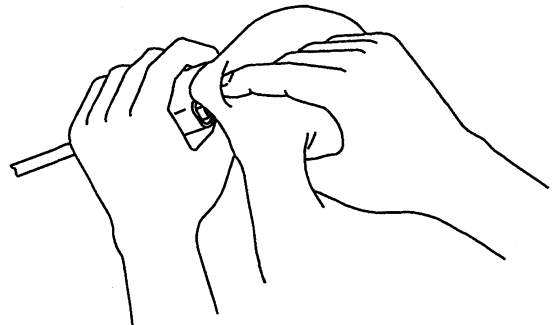


TEW00196

- (2) Dry the inside of the connector with a dryer.

If water gets inside the connector, use a dryer to dry the connector.

- ★ Hot air from the dryer can be used, but be careful not to make the connector or related parts too hot, as this will cause deformation or damage to the connector.

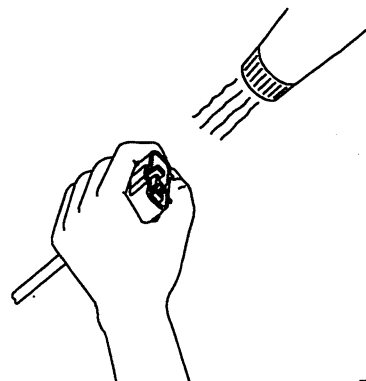


TEW00202

- (3) Carry out a continuity test on the connector.

After drying, leave the wiring harness disconnected and carry out a continuity test to check for any short circuits between pins caused by water.

- ★ After completely drying the connector, blow it with contact restorer and reassemble.

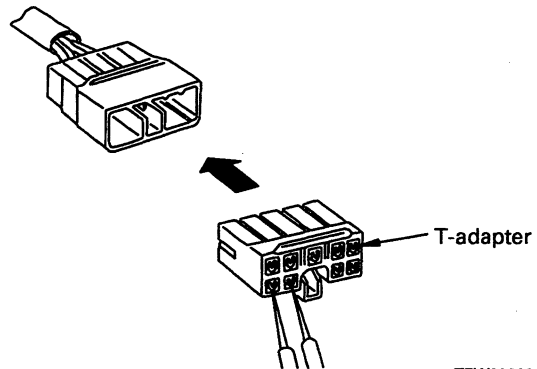


TEW00203


3) Handling control box

- (1) The control box contains a microcomputer and electronic control circuits. These control all of the electronic circuits on the machine, so be extremely careful when handling the control box.
- (2) Do not open the cover of the control box unless necessary.
- (3) Do not place objects on top of the control box.
- (4) Cover the control connectors with tape or a vinyl bag.
- (5) During rainy weather, do not leave the control box in a place where it is exposed to rain.
- (6) Do not place the control box on oil, water, or soil, or in any hot place, even for a short time. (Place it on a suitable dry stand)
- (7) Precautions when carrying out arc welding


When carrying out arc welding on the body, disconnect all wiring harness connectors connected to the control box. Fit an arc welding ground close to the welding point.

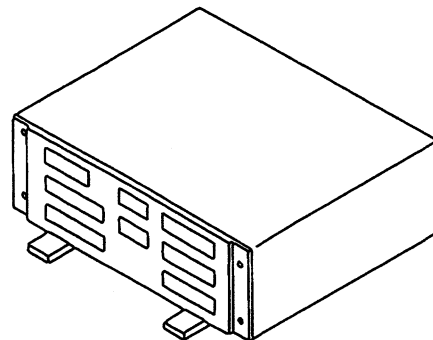

TEW00204

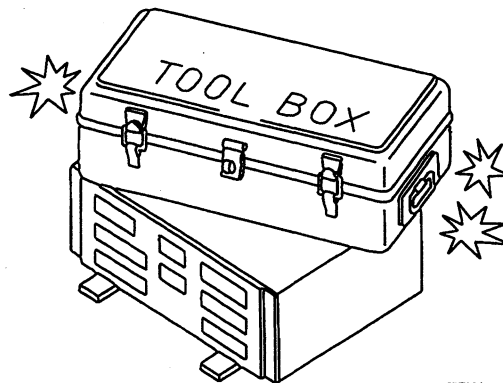

TEW00205

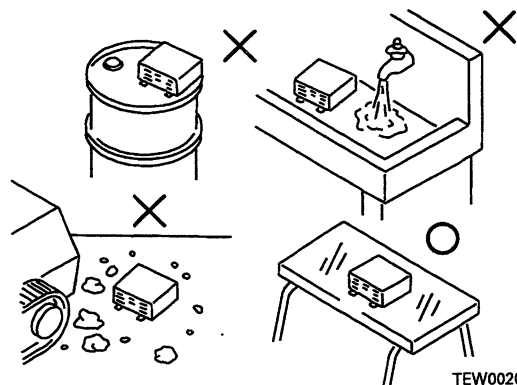

TEW00206

K20506

2. POINTS TO REMEMBER WHEN HANDLING HYDRAULIC EQUIPMENT


With the increase in pressure and precision of hydraulic equipment, the most common cause of failure is dirt (foreign material) in the hydraulic circuit. When adding hydraulic oil, or when disassembling or assembling hydraulic equipment, it is necessary to be particularly careful.

1) Be careful of the operating environment.

Avoid adding hydraulic oil, replacing filters, or repairing the machine in rain or high winds, or places where there is a lot of dust.

2) Disassembly and maintenance work in the field

If disassembly or maintenance work is carried out on hydraulic equipment in the field, there is danger of dust entering the equipment. It is also difficult to confirm the performance after repairs, so it is desirable to use unit exchange. Disassembly and maintenance of hydraulic equipment should be carried out in a specially prepared dustproof workshop, and the performance should be confirmed with special test equipment.

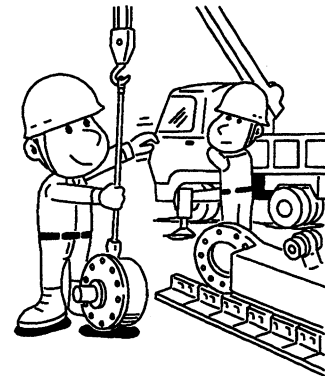

TEW00207

3) Sealing openings

After any piping or equipment is removed, the openings should be sealed with caps, tapes, or vinyl bags to prevent any dirt or dust from entering. If the opening is left open or is blocked with a rag, there is danger of dirt entering or of the surrounding area being made dirty by leaking oil so never do this.


Do not simply drain oil out on to the ground, collect it and ask the customer to dispose of it, or take it back with you for disposal.



TEW00208

4) Do not let any dirt or dust get in during refilling operations.

Be careful not to let any dirt or dust get in when refilling with hydraulic oil. Always keep the oil filler and the area around it clean, and also use clean pumps and oil containers. If an oil cleaning device is used, it is possible to filter out the dirt that has collected during storage, so this is an even more effective method.

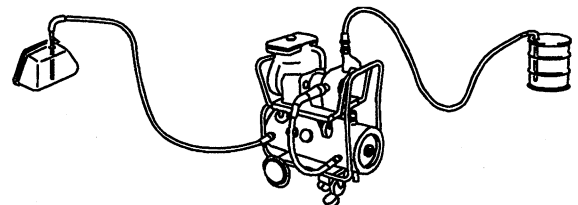

TEW00209


5) Change hydraulic oil when the temperature is high.

When hydraulic oil or other oil is warm, it flows easily. In addition, the sludge can also be drained out easily from the circuit together with the oil, so it is best to change the oil when it is still warm. When changing the oil, as much as possible of the old hydraulic oil must be drained out. (Do not drain the oil from the hydraulic tank; also drain the oil from the filter and from the drain plug in the circuit.) If any old oil is left, the contaminants and sludge in it will mix with the new oil and will shorten the life of the hydraulic oil.

6) Flushing operations

After disassembling and assembling the equipment, or changing the oil, use flushing oil to remove the contaminants, sludge, and old oil from the hydraulic circuit.


Normally, flushing is carried out twice: primary flushing is carried out with flushing oil, and secondary flushing is carried out with the specified hydraulic oil.

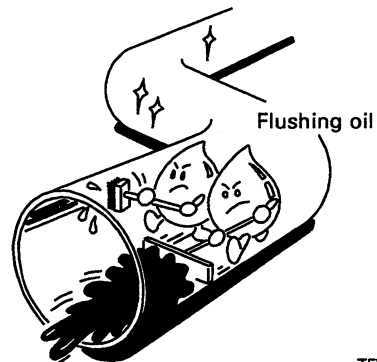

7) Cleaning operations

After repairing the hydraulic equipment (pump, control valve, etc.) or when running the machine, carry out oil cleaning to remove the sludge or contaminants in the hydraulic oil circuit.

The oil cleaning equipment is used to remove the ultrafine (about 3 μ) particles that the filter built into the hydraulic equipment cannot remove, so it is an extremely effective device.

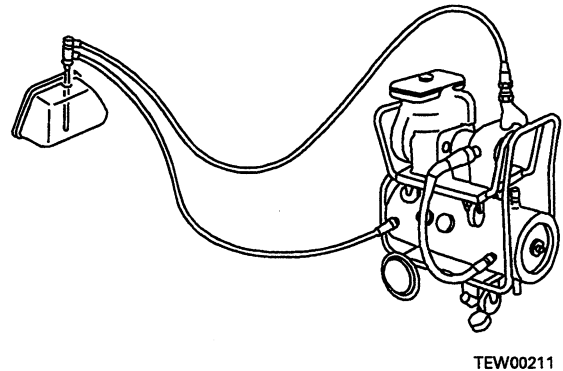

K20506

TROUBLESHOOTING**CHECKS BEFORE TROUBLESHOOTING****CHECKS BEFORE TROUBLESHOOTING**

	Item	Judgement standard	Remedy
Lubricating oil, cooling water	1. Check fuel level	–	Add fuel
	2. Check for dirt or water in fuel	–	Clean, drain
	3. Check hydraulic oil level	–	Add oil
	4. Check hydraulic oil strainer	–	Clean, drain
	5. Check swing machinery oil level	–	Add oil
	6. Check engine oil level (Level of oil in oil pan)	–	Add oil
	7. Check cooling water level	–	Add water
	8. Check condition of dust indicator	–	Clean or replace
	9. Check hydraulic oil filter	–	Replace
Electrical equipments	1. Check for loose or corroded battery terminals	–	Tighten or replace
	2. Check for loose or corroded alternator terminals	–	Tighten or replace
	3. Check for loose or corroded straight motor terminals	–	Tighten or replace
Hydraulic, mechanical equipments	1. Check for abnormal noise or smell	–	Repair
	2. Check for oil leakage	–	Repair
	3. Bleed air from system	–	Bleed air
Electrical components	1. Check battery voltage (engine stopped)	20 – 30 V	Replace
	2. Check level of battery electrolyte	–	Add or replace
	3. Check for discolored, burnt, or bare wiring	–	Replace
	4. Check for missing wiring clamps, hanging wires	–	Repair
	5. Checks for getting wet onto wiring (check carefully getting wet at connectors and terminals)	–	Disconnect connector and dry connection
	6. Check for broken or corroded fuses	–	Replace
	7. Check alternator voltage (engine running at over half throttle)	27.5 – 29.6 V	Replace
	8. Noise when battery relay is operated (switch starting switch from ON to OFF)	–	Replace

K20506

CONNECTOR TYPES AND MOUNTING LOCATIONS

Connector No.	Type	No. of pins	Electrical component
A01	KES1	2	Window washer circuit
A03	KES1	2	LS select solenoid circuit
A04	KES1	2	Pump merge-divider solenoid circuit
A05	KES1	2	Swing brake solenoid circuit
A06	KES1	2	2-stage relief solenoid circuit
A07	KES1	2	Travel speed solenoid circuit
A08	KES1	2	Heater circuit
A09	KES1	2	Lower wiper circuit
A11	KES1	2	Alarm buzzer circuit
A13	KES1	2	Starter relay circuit
A14	KES1	2	Battery relay drive circuit
A16	KES1	2	Fuel shut off circuit
A17	KES1	2	Starter circuit
C01	MIC	17	Pump controller
C02	040	20	Pump controller
C03	040	16	Pump controller
C04	X	2	Rear pump TVC valve
C05	S	10	TVC prolix switch
C06	M	2	TVC prolix resistor
C07	X	3	Rear pump pressure sensor
C08	X	3	Front pump pressure sensor
C09	S	8	Model selection connector
C10	X	2	LS control EPC solenoid valve
C13	X	2	Front pump TVC valve
E01	MIC	21	Engine throttle controller
E04	X	3	Governor potentiometer
E05	X	4	Governor motor
E06	M	3	Fuel control dial
E07	X	2	Engine speed sensor
E08	SWP	14	Intermediate connector
E10	–	1	Fuel shut off



Connector No.	Type	No. of pins	Electrical component
E11	RING	1	Heater relay
H01	S	16	Intermediate connector
H02	S	16	Intermediate connector
H03	S	16	Intermediate connector
H04	S	16	Intermediate connector
H05	M	6	Intermediate connector
H06	L	2	Intermediate connector
H07	S	12	Intermediate connector
H08	M	6	Intermediate connector
H09	M	2	Intermediate connector
K01	–	1	Aircon switch
K02	X	4	Aircon pressure switch
M02	X	2	Safety relay
M06	M	4	Heater switch
M08	KES1	2	Right front light
M09	KES1	2	Working lamp (boom)
M10	M	1	Intermediate connector
M11	L	2	Fusible link
M12	KES1	4	Heater
M13	AMP	8	Speaker
M14	L	2	Fusible link
M16	–	1	Horn (high sound)
M17	–	1	Horn (low sound)
M18	M	4	Wiper, washer switch
M20	–	–	Cigarette lighter
M23	M	2	Horn switch, R.H. knob switch
M26	AMP	11	Air conditioner
M28	KES0	2	Window washer motor
M34	Simple connector	1	Electromagnetic clutch for air conditioner compressor
M35	X	4	Condenser for air conditioner
M38	M	3	Light switch

★ The Address column in the table above shows the address in the connector arrangement drawing (2-dimensional drawing).

★ This table includes connectors that are not shown in the drawing.









K20506

K20506

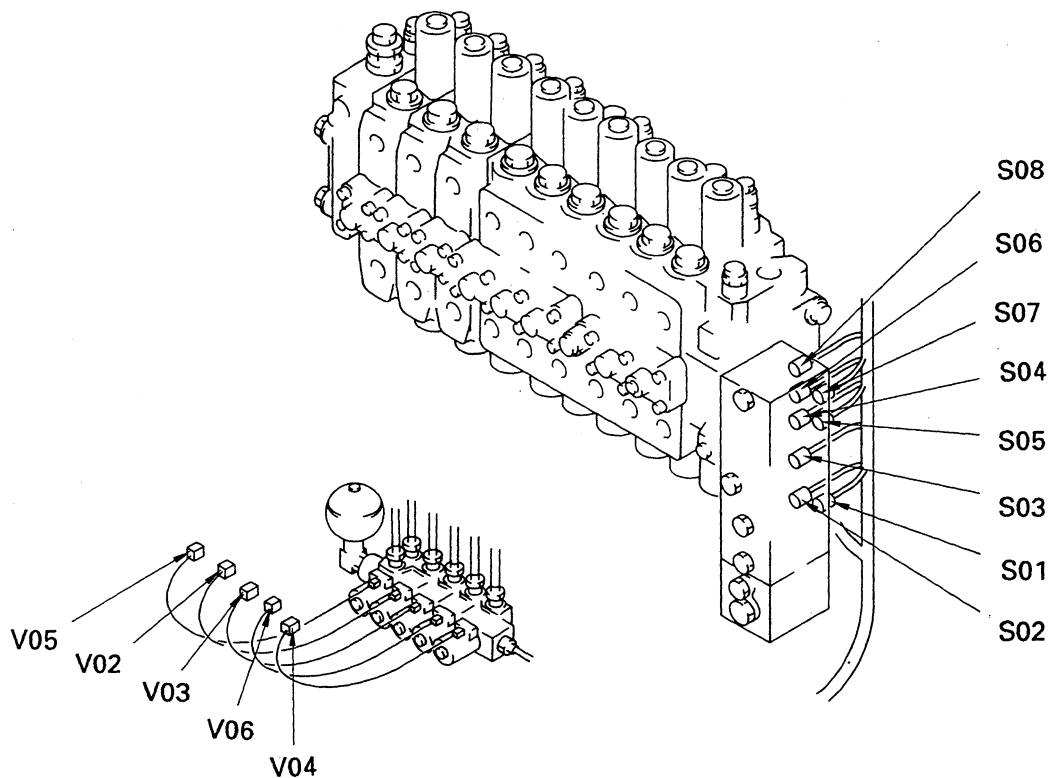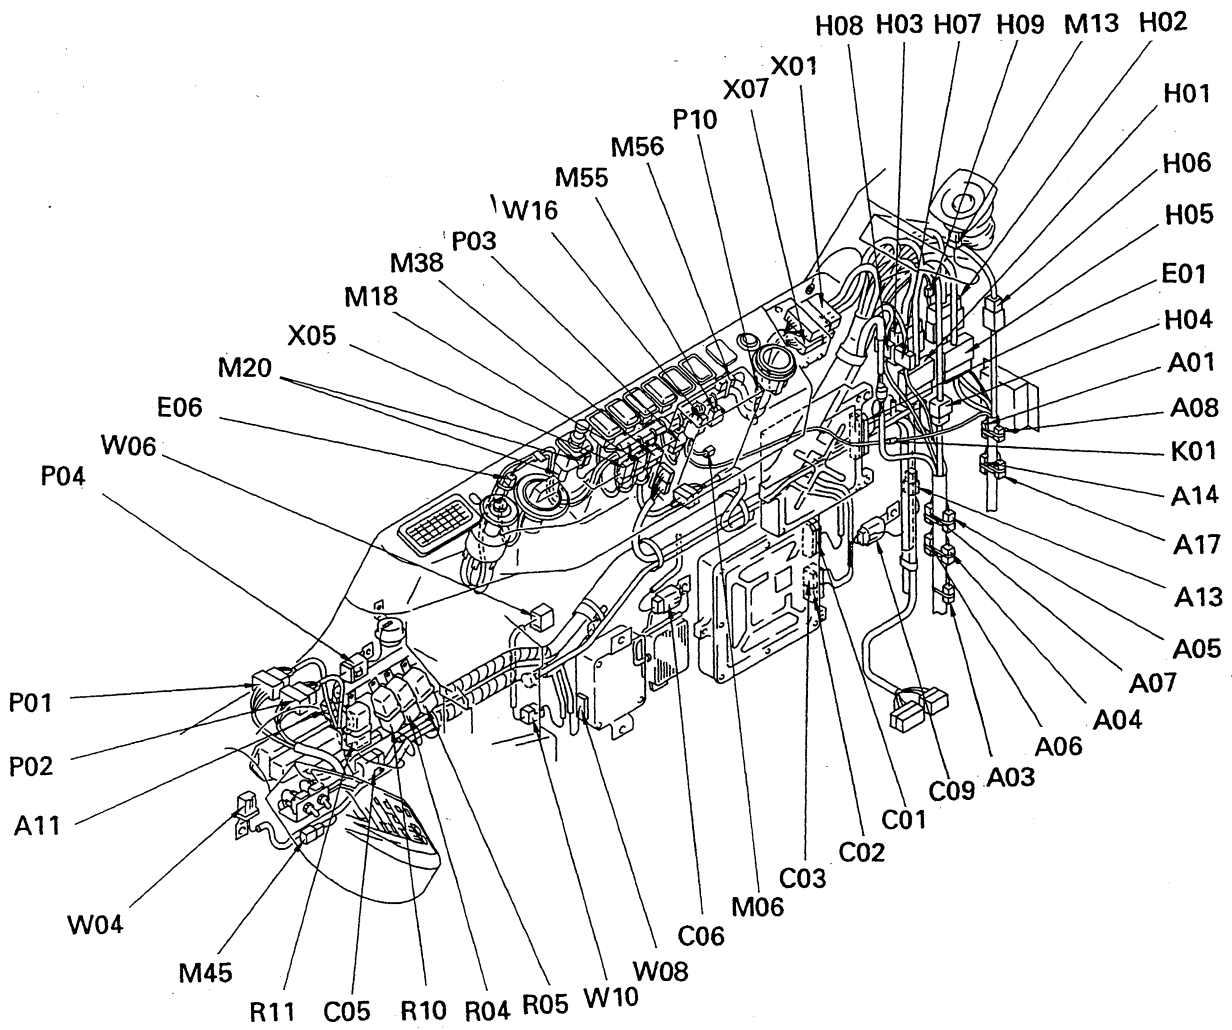

CONNECTION TABLE FOR CONNECTOR PIN NUMBERS
















★ The terms male and female refer to the pins, while the terms male housing and female housing refer to the mating portion of the housing.

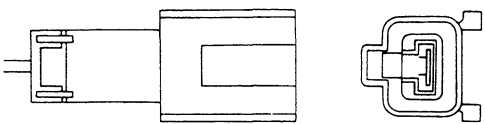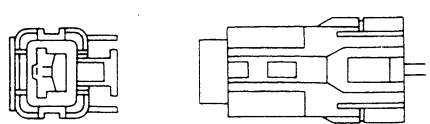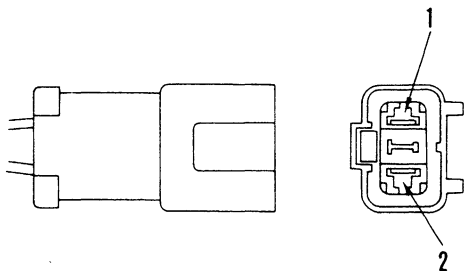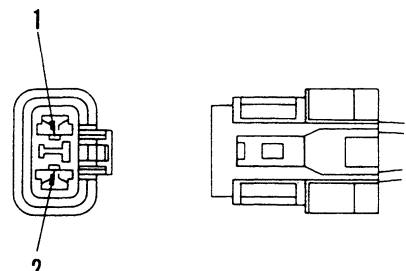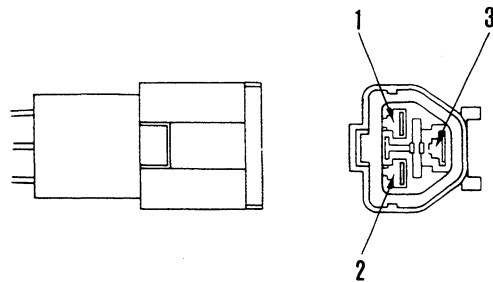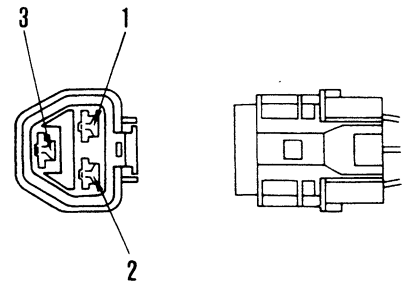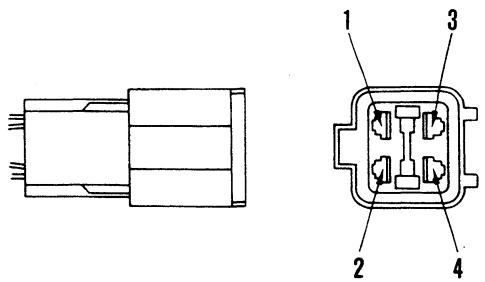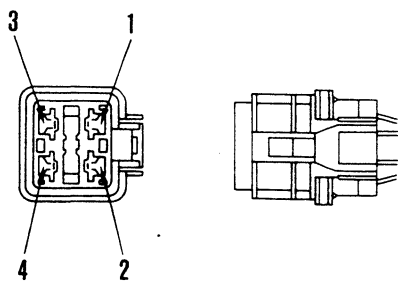No. of pins	X type connector	
	Male (female housing)	Female (male housing)
1	 205F05309	 205F05310
2	 205F05311	 205F05312
3	 205F05313	 205F05314
4	 205F05315	 205F05316

K20506

TROUBLESHOOTING

          
 
CONNECTION TABLE FOR CONNECTOR PIN NUMBERS

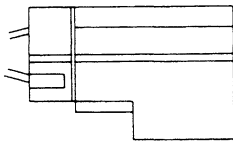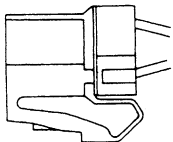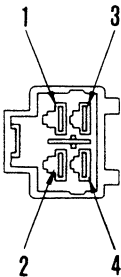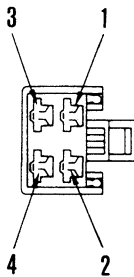No. of pins	M type connector	
	Male (female housing)	Female (male housing)
1	  205F05317	  205F05318
2	  205F05319	  205F05320
3	  205F05321	  205F05322
4	  205F05323	  205F05324

K20506

TROUBLESHOOTING







CONNECTION TABLE FOR CONNECTOR PIN NUMBERS

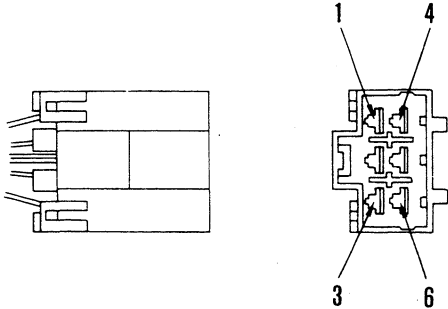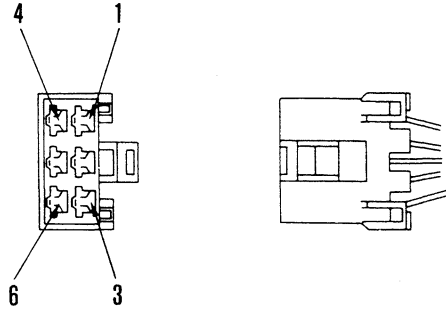No. of pins	M type connector	
	Male (female housing)	Female (male housing)
6	 205F05325	 205F05326

K20506

TROUBLESHOOTING





CONNECTION TABLE FOR CONNECTOR PIN NUMBERS

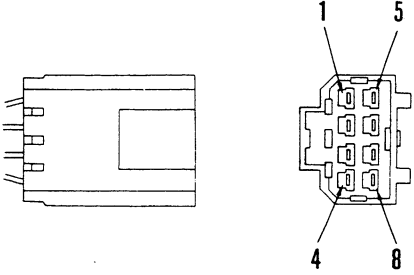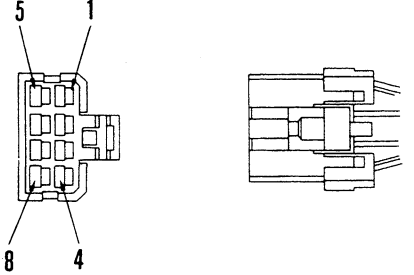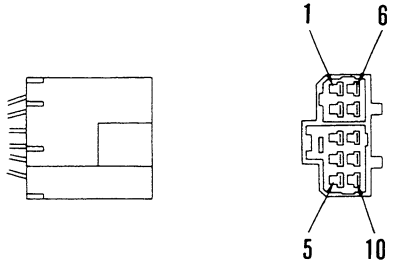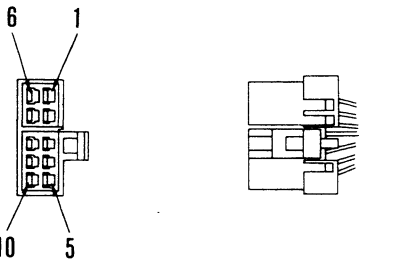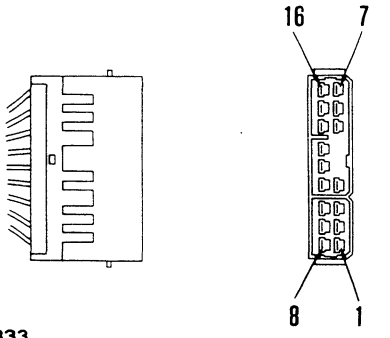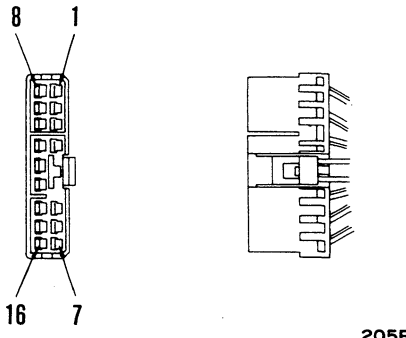No. of pins	S type connector	
	Male (female housing)	Female (male housing)
8	 205F05327	 205F05328
10	 205F05329	 205F05330
16	 205F05333	 205F05334

K20506

TROUBLESHOOTING









CONNECTION TABLE FOR CONNECTOR PIN NUMBERS

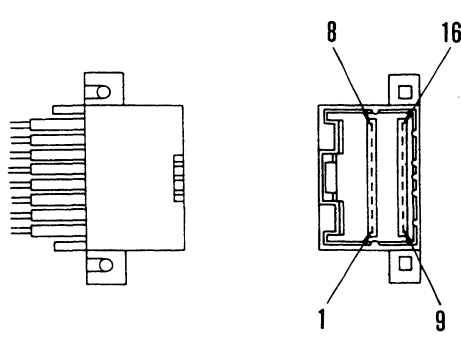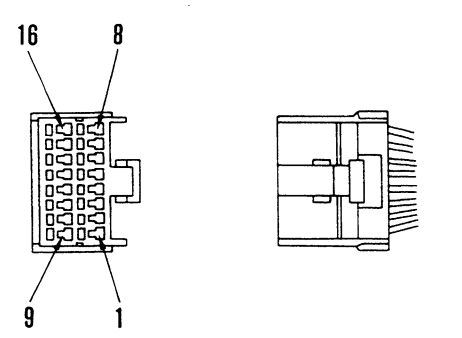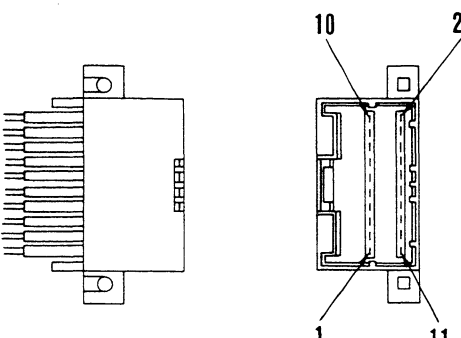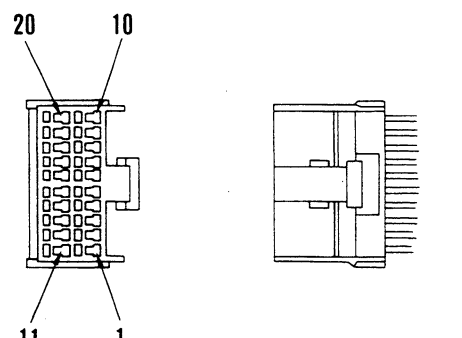No. of pins	AMP040 type connector	
	Male (female housing)	Female (male housing)
16	 205F05335	 205F05336
20	 205F05337	 205F05338

K20506

TROUBLESHOOTING

   

CONNECTION TABLE FOR CONNECTOR PIN NUMBERS

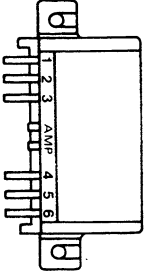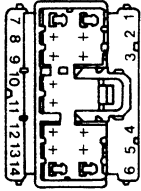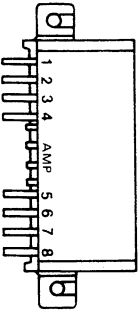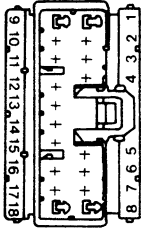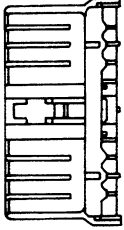No. of pins	AMP070 type connector	
	Male (female housing)	Female (male housing)
14	  205F06364	  205F06365
18	  205F06366	  205F06367

K20506

TROUBLESHOOTING



CONNECTION TABLE FOR CONNECTOR PIN NUMBERS

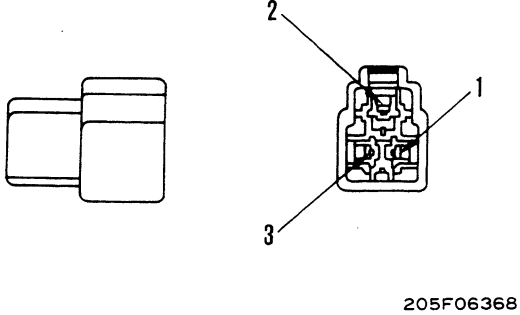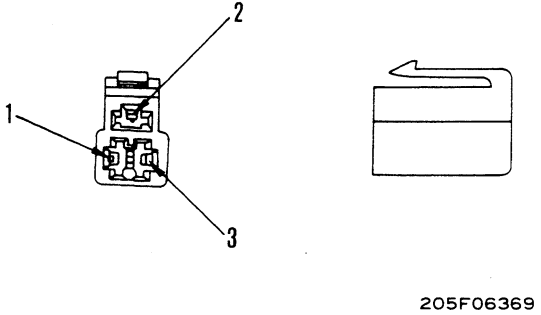No. of pins	AMP250 type connector	
	Male (female housing)	Female (male housing)
3	 205F06368	 205F06369

K20506

TROUBLESHOOTING





CONNECTION TABLE FOR CONNECTOR PIN NUMBERS

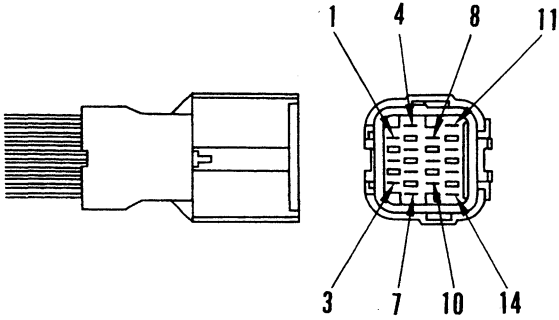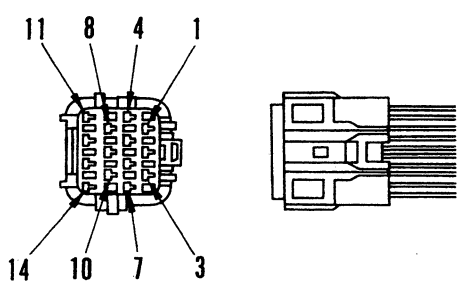No. of pins	SWP type connector	
	Male (female housing)	Female (male housing)
14	 F56103087	 F56103088

K20506

TROUBLESHOOTING


CONNECTION TABLE FOR CONNECTOR PIN NUMBERS

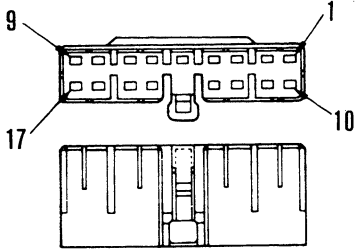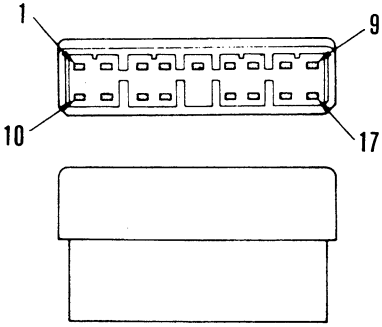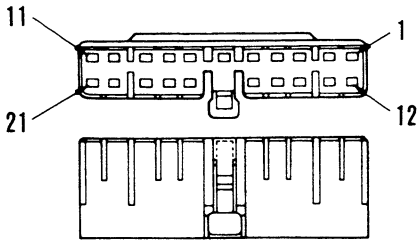
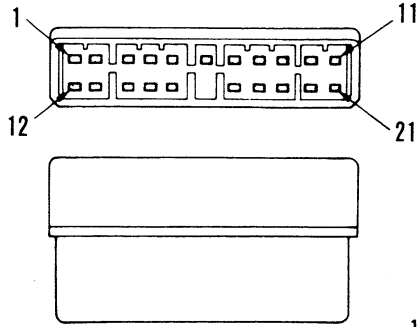
No. of pins	MIC connector	
	Male (female housing)	Female (male housing)
17	 142F414	 142F415
21	 142F416	 142F417


K20506

TROUBLESHOOTING

CONNECTION TABLE FOR CONNECTOR PIN NUMBERS

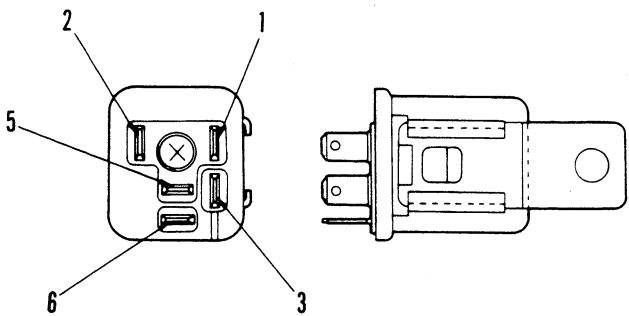No. of pins	Relay connector
5	 423F348

 
 
No. of pins	Simple connector	
	Male (male housing)	Female (female housing)
1	 195F05128	 195F05129


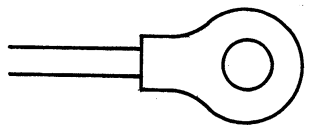
No. of pins	Ring connector
1	

K20506

TROUBLESHOOTING

CONNECTION TABLE FOR CONNECTOR PIN NUMBERS

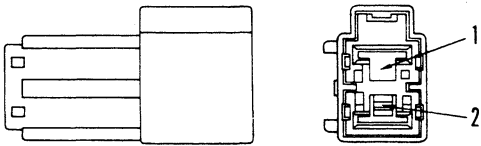
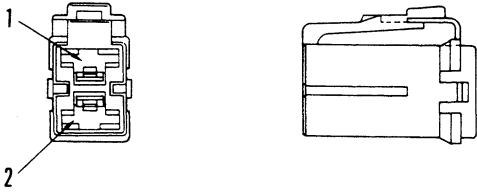
No. of pins	L type connector	
	Male (female housing)	Female (male housing)
2	 20TF01149	 20TF01150

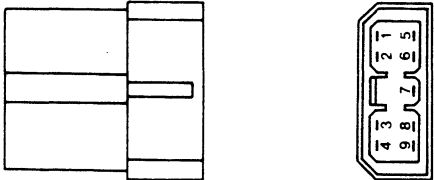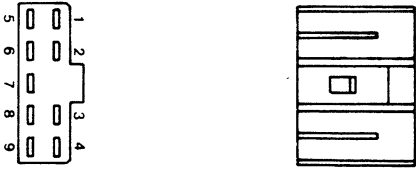No. of pins	PA type connector	
	Male (female housing)	Female (male housing)
9	 205F06370	 205F06371

K20506

TROUBLESHOOTING













CONNECTION TABLE FOR CONNECTOR PIN NUMBERS

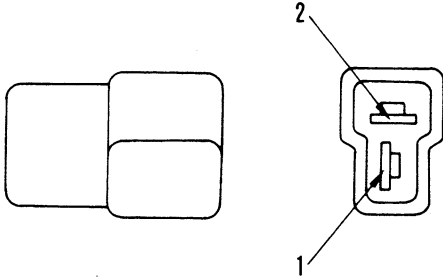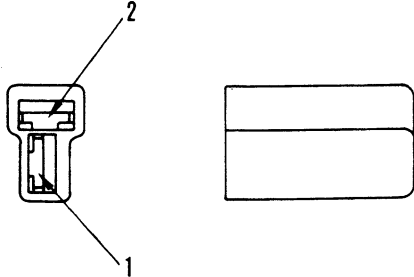No. of pins	Automobile connector (KES0)	
	Male (female housing)	Female (male housing)
2	 205F06372	 205F06373

K20506

TROUBLESHOOTING

CONNECTION TABLE FOR CONNECTOR PIN NUMBERS

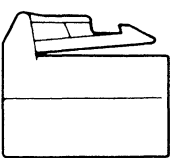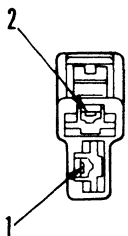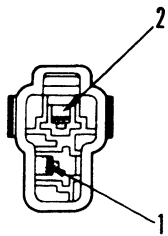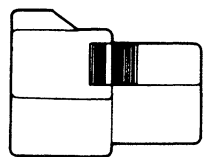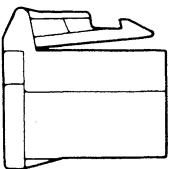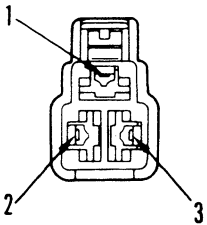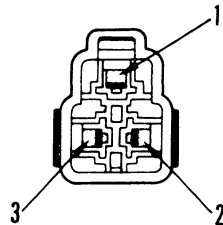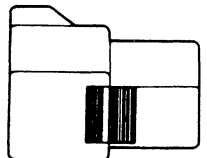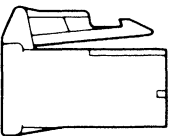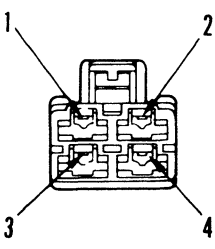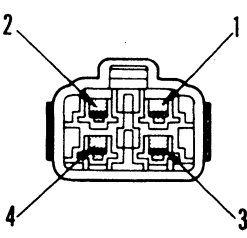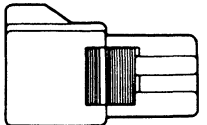
No. of pins	Automobile connector (KES1)	
	Female (female housing)	Male (male housing)
2	  423F349	  423F350
3	  423F351	  423F352
4	  423F353	  423F354

K20506

EXPLANATION OF CONTROL MECHANISM FOR ELECTRICAL SYSTEM

1. Explanation of machine control functions

The control mechanism for the electrical system consists of the monitor panel, pump controller and engine throttle controller. The monitor panel and the each controllers all input the signals that are necessary, and together with the signals selected by the monitor panel, the controllers output or input the necessary signals and control the pump absorption torque and engine output.

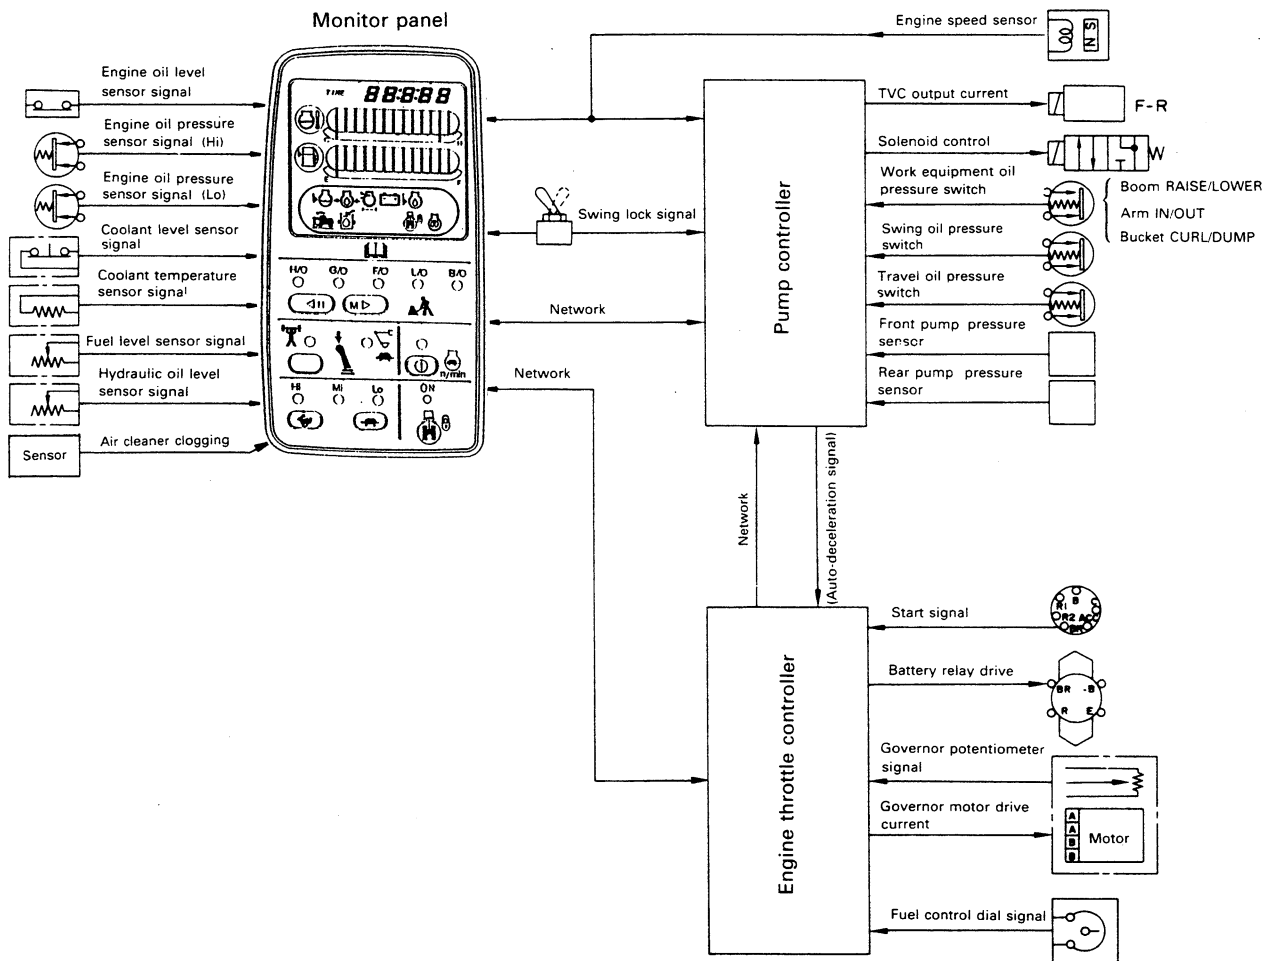

205F06375

2. Explanation of networking functions

With this system, a networking method has been adopted for the first time for the transmission and reception of data between the controllers. With the conventional system, the necessary data is transmitted and received through an independent signal line between each controller. With the new method, this system has been replaced by two dedicated networking wires; in this new system, all the data that is needed is transmitted and received between the controllers by using these networking wires.

K20506

DISPLAY METHOD AND SPECIAL FUNCTIONS OF MONITOR PANEL

1. Display on machine monitor

When the starting switch is turned ON, all the monitor gauge lamps light up for approx. 3 seconds, and the buzzer sounds for approx. 1 second. During this time, the monitor itself carries out self diagnosis, and after it has finished, it gives the normal display.

2. Recording of service codes and user code display function

- 1) All the abnormality data for the engine throttle controller and pump controller is received by the monitor panel. When the monitor panel receives this data, it records the abnormality data, and at the same time, depending on the nature of the abnormality, it displays the user code on the time display panel to advise the operator of the action to take.

However, in cases of abnormalities which are not urgent and do not require the user code to be displayed, only the content of the abnormality is recorded, and no display is given.

2) Type of user code and system


E02	Pump TVC system
E03	Swing holding brake system
E05	Governor motor system

- ★ For details of the service codes included in the user code, see ACTION TAKEN BY THE CONTROLLER WHEN AN ABNORMALITY OCCURS, THE SYMPTOMS ON THE MACHINE or JUDGEMENT TABLE.

3) Displaying user code

If it becomes necessary to display the user code, the time displayed panel is automatically switched to advise the operator to take the necessary action.

- Actual display i) Example: Disconnection in the swing brake solenoid system

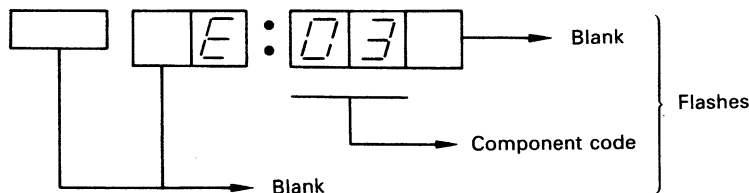


TROUBLESHOOTING**DISPLAY METHOD AND SPECIAL FUNCTIONS OF MONITOR PANEL**

4) Display of service code

The monitor panel records both service codes which are included in the user code, and service codes which are not included. This data can be displayed on the time display as follows.

- ★ For details of the service codes that are not included in the user code, see ACTION TAKEN BY CONTROLLER WHEN ABNORMALITY OCCURS AND PROBLEMS ON MACHINE.

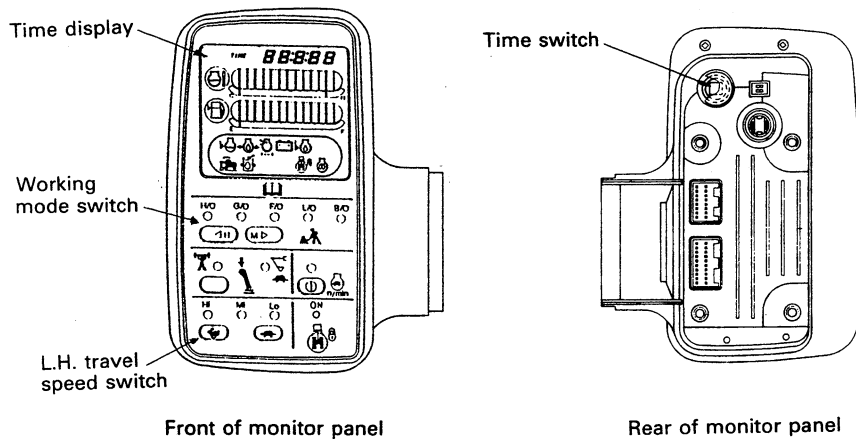

205F06378


i) Method of displaying service code

Operation	Display
1. To set to the service code display mode, Keep the time switch + L.H. travel speed switch pressed for 2.5 seconds. Note: It is possible to call it up at the following times. 1) In the time display mode (normal mode) 2) In the user code mode 3) In the machine data monitoring mode 4) In the time adjustment mode	1. Time display goes out On the display panel, the service code and number of hours (service meter hours) since the occurrence of the abnormality are displayed in turn. ★ Example of display When E2: 12 occurs 12 hours ago (service meter) 1) Display of service code 2) Elapsed time (service meter display) Blank Service code Component code Blank Elapsed time data

K20506


TROUBLESHOOTING

 DISPLAY METHOD AND SPECIAL FUNCTIONS OF MONITOR PANEL


Operation	Display
2. To go to the next service code display, Press the time switch + R.H. working mode switch. 3. To go back to the previous service code display, Press the time switch + L.H. working mode switch. 4. To finish with the service code mode, Use the same procedure as in Item 1. 5. To erase the memory, Keep the time switch pressed, turn the starting switch from OFF to ON, and keep the time switch pressed for 5 seconds.	3) If any abnormality exists at this time, the E mark is displayed.  If there is an abnormality, or the controller is carrying out self diagnosis, the output is shut off, and E is displayed. 4) If there is no service code in memory  is displayed.

3. Machine data monitoring mode function

The input signals from the monitor panel and controller sensors and the output signals to drive the solenoid can be checked by displaying them on the time display.

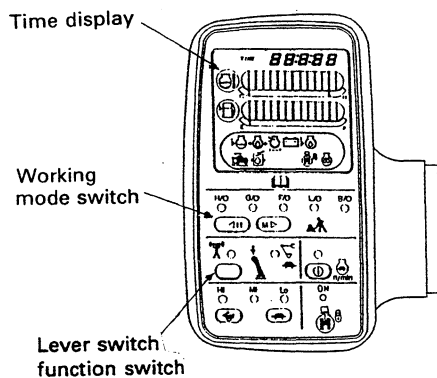

Front of monitor panel

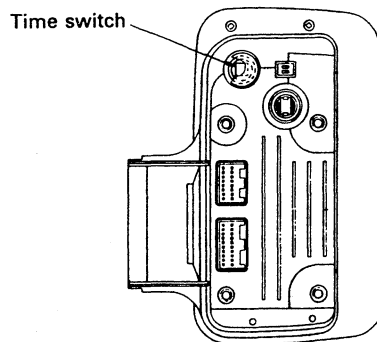

Rear of monitor panel

205F06378

1) Method of displaying monitoring mode

Operation	Display
1. To set to the monitoring mode, do as follows. Keep the time switch + lever switch function switch pressed for 2.5 seconds. Note: This is possible at the following times. - During the time display mode (normal mode) - During the user code mode - During the time adjustment mode - During the service code mode 2. To go to the next monitoring code display, Press the time switch + R.H. working mode switch. 3. To go back to the previous monitoring code display, Press the time switch + L.H. working mode switch. 4. Bit pattern display 1) Set to the bit pattern display code 5. To finish with the machine data monitoring mode, use the same procedure as in Item 1.	1. Goes off the time display, and display as follows. 2. Example of display 1) When pump controller engine speed is monitored 2) When front TVC output current is displayed 3. Example of bit pattern display 1) For code 08 (connection of S-NET components) If the display is set to code 08, the applicable bits light up. 2) For code 20 (input condition of pump controller oil pressure switch) Set to code 20, and operate the lever of the system to be displayed. When the switch is turned ON, the applicable bits light up.

205F06382

K20506

TROUBLESHOOTING
DISPLAY METHOD AND SPECIAL FUNCTIONS OF MONITOR PANEL

2) Table of machine data monitoring codes

★ For details of the B in the Unit column, see the bit pattern chart.

Code No.	Item	Unit	Name of component
01	Monitor panel model code	–	Monitor panel
02	Pump controller model code	–	Pump controller
03	Engine throttle controller model code	–	Engine throttle controller
08	S-NET condition display	B	Monitor panel
10	Engine speed	10rpm	Pump controller
11	Front pump discharge pressure input	kg/cm ²	Pump controller
12	Rear pump discharge pressure input	kg/cm ²	Pump controller
13	Front TVC current output	10mA	Pump controller
14	Rear TVC current output	10mA	Pump controller
15	LS control EPC current output	10mA	Pump controller
16	No. 2 throttle signal value	10rpm	Pump controller
20	Oil pressure switch input signal (1)	B	Pump controller
21	Oil pressure switch input signal (2)	B	Pump controller
22	Oil pressure switch input signal (3)	B	Pump controller
23	Pump controller solenoid actuation	B	Pump controller
30	Fuel control dial input value	10mV	Engine throttle controller
31	Governor potentiometer voltage	10mV	Engine throttle controller
32	VBB voltage (battery voltage)	100mV	Engine throttle controller
33	Governor motor A phase current	10mA	Engine throttle controller
34	Governor motor B phase current	10mA	Engine throttle controller
35	Battery relay output voltage	100mV	Engine throttle controller
36	Engine throttle controller input condition	B	Engine throttle controller
37	Engine throttle controller output condition	B	Engine throttle controller
38	Engine throttle controller internal condition	B	Engine throttle controller
40	Engine speed	10rpm	Monitor panel
41	Coolant temperature sensor voltage	10mV	Monitor panel
42	Fuel level sensor input voltage	10mV	Monitor panel
43	Battery charge input voltage	10mV	Monitor panel
44	Monitor panel input 1	B	Monitor panel
45	Monitor panel input 2	B	Monitor panel
46	Monitor panel input 3	B	Monitor panel
47	Monitor panel output	B	Monitor panel


K20506

TROUBLESHOOTING

DISPLAY METHOD AND SPECIAL FUNCTIONS OF MONITOR PANEL

3) Bit pattern chart

As shown in the diagram below, the time display has bit numbers which light up to show that the signal is being transmitted. (For details, see method of displaying monitoring code.)

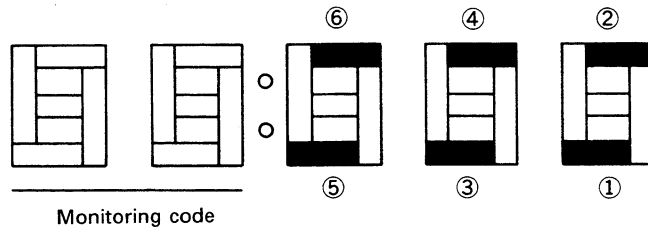

205F06382

Code No.	Content	Bit	Details (condition when lighted up)
08	Connection of S-NET components	①	Pump controller connected (ID=2)
		②	Engine throttle controller connected (ID=3)
		③	
		④	
		⑤	
		⑥	
20	Input condition of pump controller PPC oil pressure switches	①	Swing switch ON
		②	Travel switch ON
		③	Boom LOWER switch ON
		④	Boom RAISE switch ON
		⑤	Arm IN switch ON
		⑥	Arm OUT switch ON
21	Input condition of pump controller PPC oil pressure switches and other switches	①	Bucket CURL switch ON
		②	Bucket DUMP switch ON
		③	Swing lock switch ON
		④	Service switch ON
		⑤	TVC prolix switch ON
		⑥	Swing lock prolix switch ON
22	Input condition of pump controller model selection, etc.	①	Model selection 1 GND connected
		②	Model selection 2 GND connected
		③	Model selection 3 GND connected
		④	Model selection 4 GND connected
		⑤	Kerosene mode input GND connected
		⑥	L.H. knob switch ON

K20506

TROUBLESHOOTING
DISPLAY METHOD AND SPECIAL FUNCTIONS OF MONITOR PANEL

K20506

Code No.	Content	Bit	Details (condition when lighted up)
23	Drive condition of pump controller ON/OFF solenoid valves	①	
		②	LS select solenoid ON
		③	Swing brake solenoid ON
		④	Pump merge-divider solenoid ON
		⑤	2-stage relief solenoid ON
		⑥	Travel speed solenoid ON
36	Input condition of engine throttle controller	①	Model selection 1 GND connected
		②	Model selection 2 GND connected
		③	Model selection 3 GND connected
		④	Model selection 4 GND connected
		⑤	Starting switch ON
		⑥	Auto-deceleration signal ON
37	Output condition of engine throttle controller	①	Battery relay driven
		②	
		③	
		④	
		⑤	
		⑥	
38	Internal condition of engine throttle controller	①	
		②	
		③	
		④	
		⑤	
		⑥	
44	Input condition of monitor panel 1.	①	Coolant level sensor OPEN
		②	Swing lock switch OFF
		③	Buzzer cancel switch OFF
		④	
		⑤	
		⑥	
45	Input condition 2 of monitor panel	①	
		②	Starting switch ON
		③	Swing lock prolix switch OFF
		④	Time set switch OFF
		⑤	Hydraulic oil level sensor OPEN
		⑥	

TROUBLESHOOTING

DISPLAY METHOD AND SPECIAL FUNCTIONS OF MONITOR PANEL

Code No.	Content	Bit	Details (condition when lighted up)
46	Input condition of monitor panel 3.	①	Starting switch HEAT
		②	Light switch ON
		③	Air cleaner clogging sensor OPEN
		④	Engine oil level sensor OPEN
		⑤	Engine oil pressure Lo sensor OPEN
		⑥	Engine oil pressure Hi sensor OPEN
47	Output condition 1 of monitor panel	①	
		②	Alarm buzzer actuated
		③	
		④	
		⑤	
		⑥	
68	Input condition of valve controller (HYPER GX)	①	L.H. knob switch signal 1 ON
		②	L.H. knob switch signal 2 ON
		③	Model selection 1 GND connected
		④	Model selection 2 GND connected
		⑤	Model selection 3 GND connected
		⑥	Option selection terminal GND connected
69	Input condition of valve controller (HYPER GX)	①	Safety relay 1 actuated
		①	Safety relay 2 actuated
		③	
		④	
		⑤	
		⑥	


K20506

4. Governor motor adjustment mode

This is used when adjusting the linkage between the governor motor and the injection pump. For details of the procedure, see TESTING AND ADJUSTING.

5. Time adjustment mode

To adjust the time, do as follows.

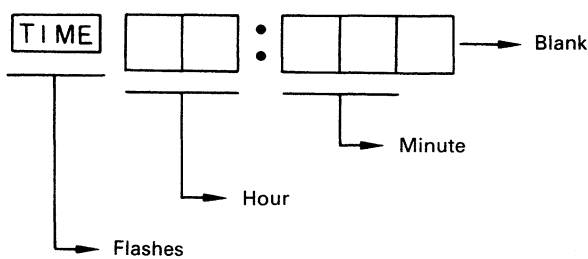Operation	Display
- To set to the time adjustment mode, Keep the time switch depressed for 2.5 seconds. - Use the L.H. working mode switch to advance the hour. - Use the R.H. working mode switch to advance the minute. - To return to the time display mode use the same procedure as in Step 1.	The time display flashes 

METHOD OF USING JUDGEMENT TABLE

This judgement table is a tool to determine if the problem with the machine is caused by an abnormality in the electrical system or by an abnormality in the hydraulic or mechanical system. The symptoms are then used to decide which troubleshooting table (E-OO, S-OO, F-OO, H-OO, K-OO, M-OO) matches the symptoms.

The judgement table is designed so that it is easy to determine from the user code and service code which troubleshooting table to go to.

★ The abnormality display (caution) given by the monitor panel leads directly to troubleshooting of the machine monitor (M-OO). (See troubleshooting of the machine monitor system)

1. When using judgement table for engine throttle controller and engine related parts

- If a service code is displayed on the monitor panel, go to the troubleshooting code at the bottom of the judgement table (E-OO).
(A ● mark is put at the places where the failure mode and service code match.)
- If a problem has appeared but no service code is displayed on the monitor panel, go to the point where the failure mode matches the troubleshooting code on the right of the judgement table (E-OO or S-OO).

<Example> Failure mode "Engine does not start".

Procedure: Check if the service code is being displayed on the monitor panel.

Figure in ○ shows position of bit pattern

Failure mode	User code	Service code	Engine throttle controller, engine related parts (E3:system)										Checking monitoring, check items										Machine monitor check item		Does starting motor turn?	Troubleshooting code if no service code
			Abnormality in engine throttle controller power source system	Self-diagnostic display										Auto-deceleration	Battery relay drive signal	No. 2 throttle signal value	Fuel control dial signal value	Governor motor potentiometer	Governor motor A phase current	Governor motor B phase current	Coolant temperature voltage	Is red range displayed?				
				Abnormality in fuel control dial input value system	Abnormality (disconnection) in motor drive system	Abnormality (short circuit) in motor drive system	Abnormality in network signal reception system	Abnormality in model code	Abnormality in governor potentiometer system	Abnormality in pump throttle system	Abnormality (short circuit) in battery relay output	Abnormality (step-out) in motor	102°C or above									105°C or above				
			E308	E317	E318	E301	E305	E306	E307	E315	E316	36	35	16	30	31	35	34	41							
1	Engine does not start easily																								S-1	
2	Engine does not start																								S-2	
3	Engine speed stays at low idling, and does not follow accelerator; or engine pickup is poor		●	●	●	●		●								*	*	*	*			○			S-3	
4	Engine stops during operation																								S-4	
5	Engine rotation is irregular When idling speed is irregular When there is hunting			●	●	●		●		●							*								E-12a) · S-5	
6	Lack of output (engine high idling speed is too low)			●				●								*	*			○					S-6	
7	Auto-deceleration does not work											○													E-3 · E-4	
8	Engine does not stop		●		●	●		●	●	●	●			○				*	*						E-14	
9	Warming-up operation is defective																			○		○			E-3 · E-4	
10	Exhaust gas is black																								S-7	
11	Oil consumption is excessive, or exhaust gas is blue																								S-8	
12	Oil becomes dirty prematurely																								S-9	
13	Fuel consumption is excessive, or exhaust gas is blue																								S-10	
14	Oil is mixed in coolant																								S-11	
15	Oil pressure caution lamp lights up																								S-12	
16	Oil level rises																								S-13	
17	Coolant temperature rises too high																			○	○				S-14	
18	Abnormal noise is generated																								S-15	
19	There is excessive vibration																								S-16	
20	Engine speed does not change even when working mode is switched						●									*									E-3 · E-4	
Troubleshooting code when service code is displayed			E-1	E-2	E-3	E-4	E-5	E-6	E-7	E-8	E-9	E-10	-	-	-	-	-	-	-	-	-	-	-	-		
Troubleshooting code when there is abnormality in monitoring mode or machine monitor check			-	-	-	-	-	-	-	-	-	-	C-15	E-15	-	-	-	-	-	-	M-14	M-13	M-11	E-11		

● : This shows applicable item for service code

○ : This shows item to check with monitoring mode or machine monitor

* : This shows item that needs only checking with monitoring mode

[Judgement]

- If a service code is being displayed on the monitor panel:
go to troubleshooting E-OO for the engine throttle controller system.
- If no service code is displayed on the monitor panel, and the engine does not start:
 - Check that starting motor rotates
 - Starting motor rotates ... Go to troubleshooting S-2 of mechanical system
 - Starting motor does not rotate ... Go to troubleshooting E-11 of electrical system

- If a service code is displayed on the monitor panel, go to the troubleshooting code at the bottom of the judgement table (C-OO).
(A ● mark is put at the places where the failure mode and service code match.)
- If a problem has appeared but no service code is displayed on the monitor panel, go to the point where the failure mode matches the input signal, and check the display for the input signal (the display at the place with a ○ mark).
 - If it is displayed normally, go to the troubleshooting code on the right of the judgement table (H-OO).
 - If the input signal is not displayed on the monitor panel, go to the troubleshooting code at the bottom of the judgement table (F-OO).

Procedure: Check if the service code is being displayed on the monitor panel.

- 1) If a service code is being displayed on the monitor panel:
go to troubleshooting C-OO for the pump controller system.
- 2) If no service code is displayed on the monitor panel, and the auto-deceleration does not work:
 - Check pump controller input signal
 - There is a signal ... Go to troubleshooting H-5 of mechanical system
 - There is no signal ... Go to troubleshooting F-OO of electrical system
(F mode for applicable system)

METHOD OF USING TROUBLESHOOTING CHARTS

1. Category of troubleshooting code number

Troubleshooting Code No.	Component	Service code
E-OO	Troubleshooting of electrical system for engine throttle controller	E3: OO
S-OO	Troubleshooting of engine related parts	-
C-OO	Troubleshooting of electrical system for pump controller	E2: OO
F-OO	Troubleshooting of input signal system for pump controller	-
H-OO	Troubleshooting of hydraulic, mechanical system for pump controller	-
K-OO	Troubleshooting of electrical system for valve controller (HYPER GX)	E4: OO
M-OO	Troubleshooting of machine monitor system	E1: OO

2. Method of using troubleshooting table for each troubleshooting mode

1) Troubleshooting code number and problem

The title of the troubleshooting chart gives the troubleshooting code, service code, and failure mode (problem with the machine). (See Example (1))

2) Distinguishing conditions

Even with the same failure mode (problem), the method of troubleshooting may differ according to the model, component, or problem. In such cases, the failure mode (problem) is further divided into sections marked with small letters (for example, a)), so go to the appropriate section to carry out troubleshooting. If the troubleshooting table is not divided into sections, start troubleshooting from the first check item in the failure mode. (See Example (2))

3) Method of following troubleshooting chart

- Check or measure the item inside ☐ YES
NO and according to the answer follow either the YES line or the NO line to go to the next ☐. (Note: The number written at the top right corner of the ☐ is an index number; it does not indicate the order to follow.)
- Following the YES or NO lines according to the results of the check or measurement will lead finally to the Cause column. Check the cause and take the action given in the Remedy column on the right. (See Example (3))
- Below the ☐ there are the methods for inspection or measurement, and the judgement values. If the judgement values below the ☐ are correct or the answer to the question inside the ☐ is YES, follow the YES line; if the judgement value is not correct, or the answer to the question is NO, follow the NO line.
- Below the ☐ is given the preparatory work needed for inspection and measurement, and the judgement values. If this preparatory work is neglected, or the method of operation or handling is mistaken, there is danger that it may cause mistaken judgement, or the equipment may be damaged. Therefore, before starting inspection or measurement, always read the instructions carefully, and start the work in order from Item 1).

4) General precautions

When carrying out troubleshooting for the failure mode (problem), precautions that apply to all items are given at the top of the page and marked with ★. (See Example (4))

The precautions marked ★ are not given in the ☐, but must always be followed when carrying out the check inside the ☐.

5) Troubleshooting tools

When carrying out the troubleshooting, prepare the necessary troubleshooting tools. For details, see TOOLS FOR TESTING, ADJUSTING, AND TROUBLESHOOTING.

TROUBLESHOOTING**METHOD OF USING TROUBLESHOOTING CHARTS**

6). Installation position, pin number


A diagram or chart is given for the connector type, installation position, and connector pin number connection. When carrying out troubleshooting, see this chart for details of the connector pin number and location for inspection and measurement of the wiring connector number appearing in the troubleshooting flow chart for each failure mode (problem).

<Example>

(1) **M-7 When starting switch is turned ON (engine stopped), check item flashes**

- (4) ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
 ★ Always connect any disconnected connectors before going on the next step.
 ★ Check that the coolant is at the specified level before carrying out troubleshooting

- (2) a)  (coolant level) flashes
 b)  (engine oil level) flashes
- } Divided into sections a) and b)
- (3)

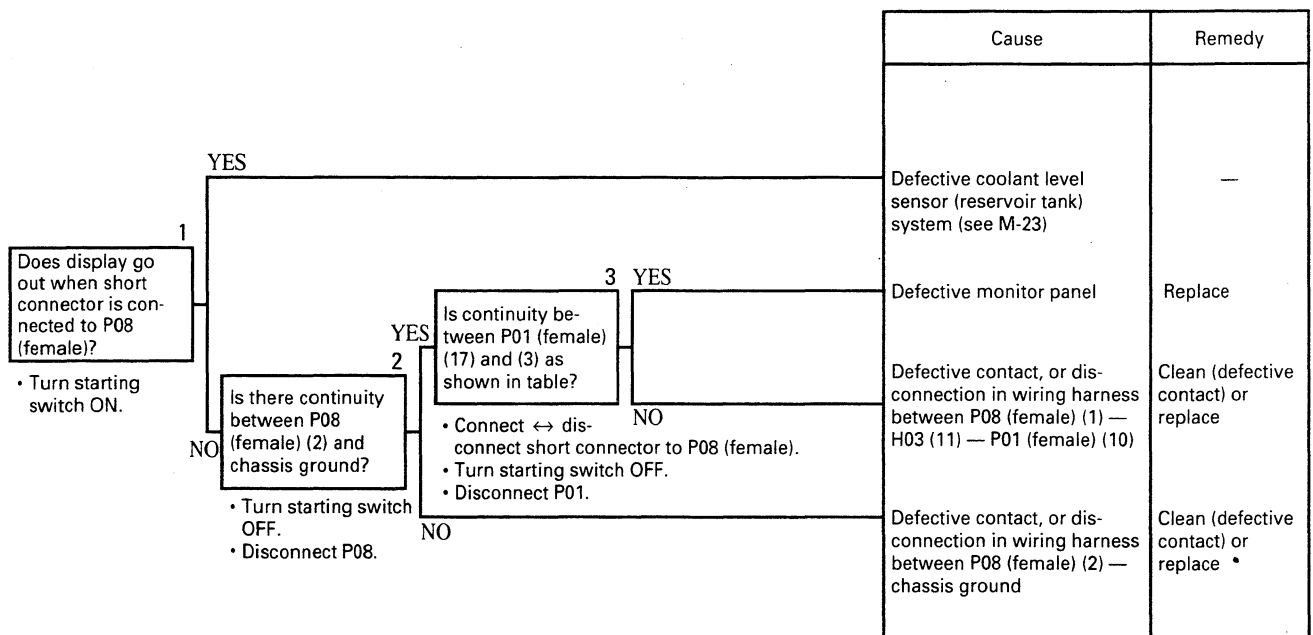

Table

Short connector	Continuity
Connected	Yes
Disconnected	No

K20506

20-96

★ NOTE

If there is no abnormality display in the networking system transmitted in S-NET, it can be taken that the output signal from the monitor panel has been transmitted. However, even if there is no abnormality display, if the operation is defective, use the following procedure when checking directly.

If any abnormality occurs in the S-NET system, the system is automatically switched to the following default mode, so be careful when carrying out troubleshooting.

- Default mode**

- When networking cannot be carried out for the monitor and engine throttle controller + pump controller

Set mode		Pump controller	Engine throttle controller
1	Working mode	G/O mode	H/O mode
2	Throttle signal	FULL	FULL
3	Auto-deceleration	ON (deceleration mode)	ON (deceleration mode)
4	Coolant temperature signal	OFF	—
5	Priority mode	OFF	—
6	Power max. mode	ON (power max. possible)	—
7	Travel speed	LO	—
8	Automatic warming-up	—	ON (automatic warming-up mode)

- When networking cannot be carried out for the monitor and engine throttle controller
Only throttle signal is recognized as FULL; normal control is carried out for others.

- Procedure for checking monitor panel output signal**

★ For details of operating the monitoring mode, see MONITOR PANEL DISPLAY AND SPECIAL FUNCTIONS.

- Connection condition of components
 - Set to the monitoring mode and display monitoring code 08.
 - The time display (bits) will light up to display the components that are connected.
 - ★ ① Pump controller, ② engine throttle controller, ③ valve controller will light up.
- Checking working mode signal (check No. 2 throttle signal at the same time)
 - Set to the monitoring mode and display monitoring code 40.
 - Switch the working mode as shown in Table 1 and check that the engine speed changes.

(rpm)

Table 1		Engine speed (high idling) [The figures in () are the rated speed]	
Working mode	Operation	PC210	PC240
H/O	Work equipment	Approx. 2,230 (2,000)	Approx. 2,420 (2,200)
	Travel	Approx. 2,420 (2,200)	Approx. 2,520 (2,300)
G/O, F/O	Work equipment	Approx. 2,100 (1,900)	Approx. 2,200 (2,000)
	Travel	Approx. 2,100 (—)	Approx. 2,200 (—)
L/O	Work equipment	Approx. 1,700 (1,500)	Approx. 1,750 (1,500)
	Travel	Approx. 1,750 (—)	Approx. 1,750 (—)

TROUBLESHOOTING DETAILS OF TROUBLESHOOTING AND TROUBLESHOOTING PROCEDURE

3. Checking travel speed selection signal
 - 1) Set to the monitoring mode and display monitoring code 23.
 - 2) Change the travel speed switch to Mi or Hi, run the engine at 1500 rpm or above, and operate the control lever. Check that bit ⑥ lights up when this is done.
4. Checking boom/swing priority selection mode signal (swing boost 2 for HYPER GX)
 - ★ If the travel oil pressure switch signal is not input to the controller, the flow from the front and rear pumps will remain divided.
 - 1) Turn the boom/swing priority switch to ON (swing boost 2 for HYPER GX)
 - 2) Set to the monitoring mode and display monitoring code 23.
 - 3) Check that bit ④ lights up when the boom, arm, bucket, and swing are operated independently or together.
 - ★ Check the operating condition of the pump merge-divider solenoid valve
- **Checking input signal of engine throttle controller, pump controller, valve controller (HYPER GX)**
 - ★ Check the input signal for each controller as follows.
 - Pump controller
 1. Checking input signal
 - 1) Check oil pressure switch
 - i) Set to the monitoring mode and display monitoring codes 20 and 21.
 - ii) Operate each work equipment lever, and check how the bit pattern lights up.
 - ★ For details of the bit pattern chart, see MONITOR PANEL DISPLAY AND SPECIAL FUNCTIONS.
 - 2) Check engine speed sensor (check engine speed)
 - i) Set to the monitoring mode and display monitoring code 10.
 - ii) Use the fuel control dial to change the speed, and measure the engine speed when this is done.
 - 3) Check pump pressure sensor
 - i) Set to the monitoring mode and display monitoring codes 11 and 12.
 - ★ Code 11 is for the front pump, and code 12 is for the rear pump.
 - ii) Refer to Table 2 and measure the hydraulic pressure at the front and rear pumps.

Table 2. Pump merge-divided flow logic and pumps actuated by control levers

	Boom/swing priority selection mode OFF		Boom/swing priority selection mode ON ★	
	Basically flow is merged		Flow merged if there is no travel + compound operation input	
	Front pump	Rear pump	Front pump	Rear pump
L.H. travel	○		○	
Swing	○		○	
Arm	○	○	○	
Boom	○	○		○
Bucket	○	○		○
R.H. travel		○		○

- ★ When the travel is operated independently divided flow, travel + compound operations becomes the merged flow.

K20506

- 4) Check kerosene mode input signal
 - i) Set to the monitoring mode, and display monitoring code 22.
 - ii) Connect the CN-M36 connector and check that bit ⑤ lights up.
- 5) Check L.H. knob switch input signal
 - i) Set to the monitoring mode, and display monitoring code 22.
 - ii) Push the L.H. knob switch ON and check that bit ⑥ lights up.

2. Check output signals

- 1) Check LS control EPC solenoid output current
 - i) Set to the monitoring mode, and display monitoring code 15.
 - ii) Run the engine at high idling with all the levers at neutral and in the G/O or H/O mode, and measure the current.
 - ★ All levers at neutral: 900 ± 80 mA
 - Engine at high idling, travel speed Hi, travel lever operated: 0 A
- 2) Check No. 2 throttle signal
 - i) Set to the monitoring mode, and display monitoring code 16.
 - ii) Use the procedure in Item 2 for checking the monitor panel output signal, and measure the engine speed.
- 3) Check ON $\leftrightarrow$ OFF solenoid condition
 - i) Set to the monitoring mode, and display monitoring code 23.
 - ii) Refer to Table 3 and check that the applicable bit lights up.

Table 3. Types of solenoid and conditions for actuation

Name of solenoid	Actuation condition	Bit that lights up
LS select	Swing + travel lever operated	②
Swing brake	Swing operated	③
Pump merge-divider	L/O mode	④
2-stage relief	Travel lever operated	⑤
Travel speed	Travel speed switch: Hi Fuel control dial at midway position or above Travel lever operated	⑥

- 4) Check TVC solenoid output current
 - i) Set to the monitoring mode, and display monitoring codes 13 and 14.
 - Code 13 is for the front pump, and code 14 is for the rear pump.
 - ii) With the starting switch kept at the ON position and in the G/O mode, measure the current when the fuel control dial is turned to the MAX position.
 - : PC200 510 ± 80 mA
 - PC220 410 ± 80 mA

● **Engine throttle controller**

1. Check input signal
 - 1) Check fuel control dial input voltage
 - i) Set to the monitoring mode, and display monitoring code 30.
 - ii) Measure the voltage when the fuel control dial is turned from low idling to high idling.
 - ★ Voltage: 0.25 – 4.75 V
 - 2) Check governor potentiometer voltage
 - i) Set to the monitoring mode, and display monitoring code 31.
 - ii) Measure the potentiometer voltage when the fuel control dial is turned from low idling to high idling.
 - ★ Voltage: 0.5 – 4.5 V
2. Check output signal
 - 1) Check governor motor drive current
 - i) Set to the monitoring mode, and display monitoring codes 33 and 34.
 - ★ Code 33 is the A phase (direction for increasing engine speed), and code 34 is the B phase (direction for reducing engine speed)
 - ii) Measure the governor motor drive current when the fuel control dial is turned in the acceleration direction and deceleration direction.
 - ★ Current: 700 ± 70 mA
 - 2) Measure battery relay drive voltage
 - i) Set to the monitoring mode, and display monitoring code 35.
 - ii) Measure the battery relay drive voltage when the starting switch is turned from ON to OFF.
 - or
 - iii) Set to the monitoring mode, and display monitoring code 37.
 - iv) Check that bit ① lights up when the starting switch is turned from ON to OFF.
 - (Min. 4 seconds – Max. 7 seconds)

TROUBLESHOOTING OF ENGINE THROTTLE CONTROLLER SYSTEM (E MODE)

Points to remember when carrying out troubleshooting of engine throttle controller system	20-102
Engine throttle controller system circuit diagram	20-103
Action taken by controller when abnormality occurs and problems on machine	20-105
Judgement table for engine throttle controller and engine related parts	20-106
Troubleshooting flow charts for each failure mode	
E- 1 Abnormality in engine throttle controller power source system (engine speed stays at low idling)	20-107
E- 2 [E3:08] Abnormality in fuel control dial input value is displayed	20-108
E- 3 [E3:17] Abnormality (disconnection) in governor motor drive system is displayed	20-109
E- 4 [E3:18] Abnormality (short circuit) in governor motor drive system is displayed	20-110
E- 5 [E3:01] Abnormality in network reception system is displayed	20-111
E- 6 [E3:05] Abnormality in model code is displayed	20-113
E- 7 [E3:06] Abnormality in governor potentiometer system is displayed	20-114
E- 8 [E3:07] Abnormality in pump controller throttle system is displayed	20-115
E- 9 [E3:15] Abnormality (short circuit) in battery relay output system is displayed	20-115
E-10 [E3:16] Abnormality (step-out) in governor motor system is displayed	20-116
E-11 Engine does not start.....	20-118
E-12 Engine speed is irregular	20-120
a) Idling speed is irregular	20-120
b) There is hunting	20-122
E-13 Lack of output (engine high idling speed is too low)	20-124
E-14 Engine does not stop	20-126
E-15 Defective operation of battery relay system (engine does not stop)	20-128

K20506

POINTS TO REMEMBER WHEN CARRYING OUT TROUBLESHOOTING OF ENGINE THROTTLE CONTROLLER SYSTEM


1. Points to remember when there is abnormality which is not displayed by user code

The engine is controlled by an engine throttle controller.

The problems that may occur with this system include the following.

1. Idling speed is too high (too low)
2. High idling speed is too low
3. Auto-deceleration speed is too high (too low)
4. Engine speed for automatic warming-up operation is too high (too low)
5. There is hunting
6. Engine does not stop

If any abnormality occurs, and the abnormality is displayed on the time display portion of the monitor panel, use the troubleshooting table to determine the appropriate troubleshooting flow chart from E1 to E10. However, if there is any abnormality in the machine and no abnormality display is given, it is necessary to determine whether the problem is in the mechanical system or in the electrical system. If the linkage between the governor motor and the injection pump is not properly adjusted, problems 1 to 6 listed above may occur. Therefore, if there is no abnormality display, but one of problems 1 to 6 above has occurred, carry out troubleshooting as follows.

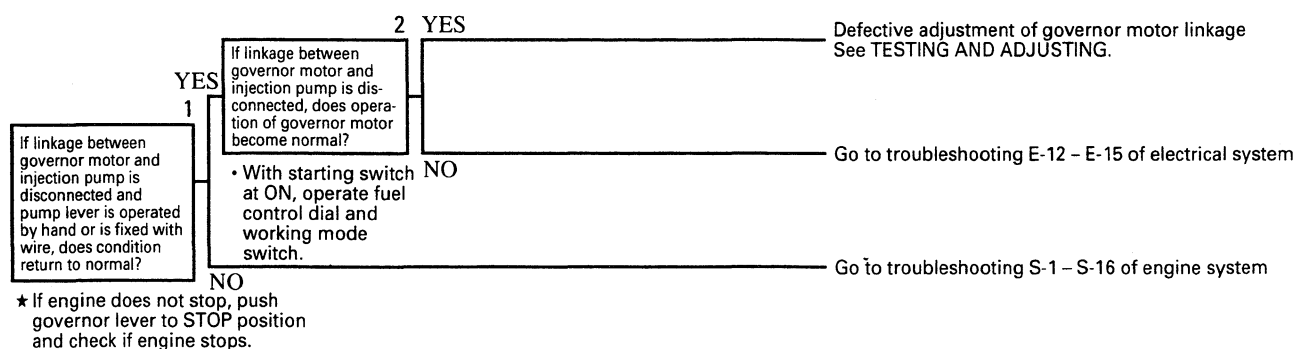

Disconnect the linkage as explained above, or check the adjustment and go to the troubleshooting flow chart for the mechanical system or electrical system.

★ For details of the procedure for adjusting the linkage, see TESTING AND ADJUSTING.

2. Points to remember if abnormality returns to normal by itself

In the following cases, there is a high probability that the same problem will occur again, so it is desirable to follow up this problem carefully.

- 1) If any abnormality returns to normal by itself,
- 2) If the connector is disconnected and the T-adapter is inserted, or if the T-adapter is removed and the connector is returned to its original position when carrying out troubleshooting of the failure, and the service code is no longer displayed, or if the monitor display returns to normal.

★ After completing troubleshooting, always erase the user code from memory.

3. Service code memory retention function

When displaying the service code in memory and carrying out troubleshooting, note down the content of the display, then erase the display. After trying to re-enact the problem, carry out troubleshooting according to the service code that is displayed.


(There are cases where mistaken operation or abnormalities that occur when the connector is disconnected are recorded by the memory retention function. Erasing the data in this way saves any wasted work.)

E-1 Abnormality in engine throttle controller power source system (engine speed stays at low idling)

- ★ This troubleshooting is carried out when there is still an abnormality, so when disconnecting the connector and inserting the T-adapter, or when removing the T-adapter and returning the connector to its original position, if the service code is not displayed, the problem has been removed.
- ★ Check that fuses 2 and 14 are not blown.
- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.
- ★ When the starting motor rotates correctly. (If the starting motor also does not rotate, go to E-11.)

		Cause	Remedy
1 Is voltage between E01 (1)(2) and (12) normal? • 20 – 30V • Turn starting switch ON. YES NO 2 Is voltage between E01 (6) and (12) normal? • 20 – 30V • Turn starting switch ON. YES NO 3 Is voltage between starting switch terminal ACC and chassis normal? • 20 – 30V • Turn starting switch ON. YES NO 4 Is voltage between fuse 2 outlet port and GND normal? • 20 – 30V • Turn starting switch ON. YES NO	Defective engine throttle controller Defective contact, or disconnection in wiring harness between starting switch ACC – X07 (17) – E01 (female) (6) Defective starting switch (between B and ACC) Defective contact, or disconnection in wiring harness between fuse 2 and E01 (female) (1) (2) Defective contact, or disconnection in wiring harness between fuse 2 – H06 (2) – M14 (2) (1) – battery relay M	Replace Repair or replace Replace Repair or replace Repair or replace	

E-1 Related electric circuit diagram

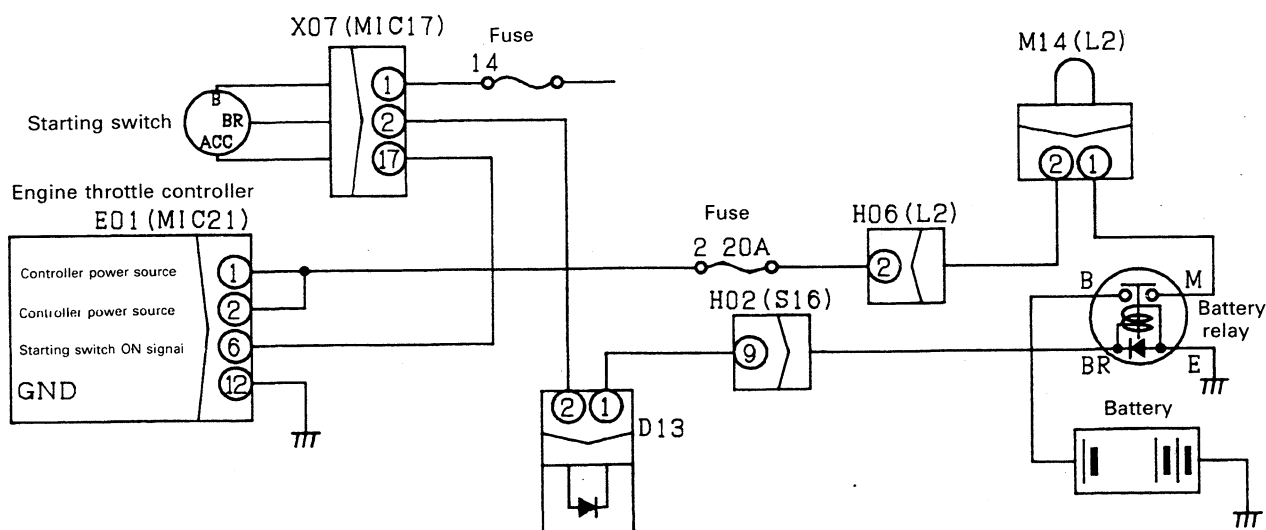

202CK06501

E-2 [E3:08] Abnormality in fuel control dial input value is displayed

- ★ This troubleshooting is carried out when there is still an abnormality, so when disconnecting the connector and inserting the T-adapter, or when removing the T-adapter and returning the connector to its original position, if the service code is not displayed, the problem has been removed.
- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.

		Cause	Remedy
Is resistance between E06 (male) (1) – (2), (2) – (3) as shown in Table 1? • Turn starting switch OFF. • Disconnect E06. 1 YES Is resistance between each pin of E01 (female) (5) (7) (16), or between each pin and chassis as shown in Table 1? • Turn starting switch OFF. • Disconnect E01. 2 YES NO		Defective engine throttle controller	Replace
		Defective wiring harness in system with defective resistance	Repair or replace
		Defective fuel control dial	Replace


Note: If E3:06 also occurs at the same time, check the wiring harness below.

- Wiring harness between E01 (female) (5) – H02 (1) – E04 (female) (1) short circuiting with ground, or contact with other wiring harness

Table 1

E01(female)	E06(male)	Resistance value
(5) – (7)	(1) – (2)	0.25 – 7 kΩ
(7) – (16)	(2) – (3)	0.25 – 7 kΩ
(5) – (16)	–	2 – 3 kΩ
–	(1) – (3)	4 – 6 kΩ
Between each pin and chassis	–	Min. 1 MΩ

E-2 Related electric circuit diagram

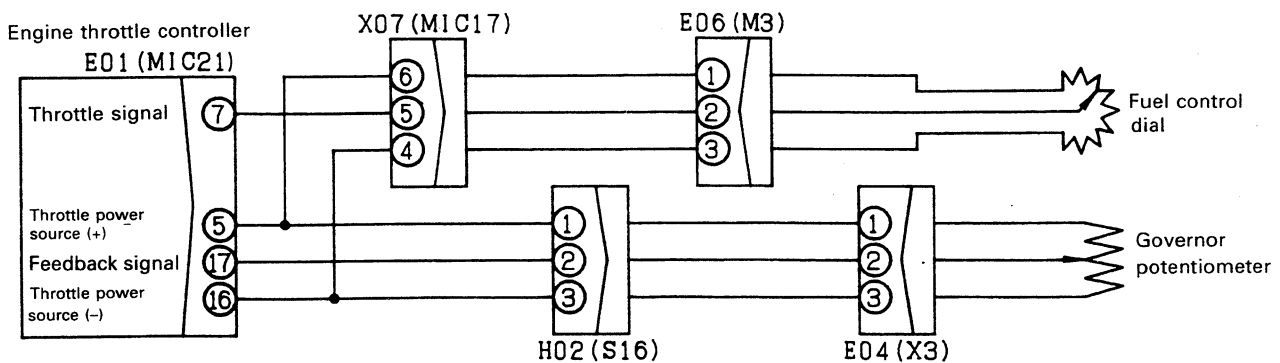

202CK06502

E-3 [E3:17] Abnormality (disconnection) in governor motor drive system is displayed

- ★ This troubleshooting is carried out when there is still an abnormality, so when disconnecting the connector and inserting the T-adapter, or when removing the T-adapter and returning the connector to its original position, if the service code is not displayed, the problem has been removed.
- ★ During operation, if there is
 - 1) a simultaneous disconnection in A phase and B phase:
 - ① the engine will run at low idling
 - ② the engine will not stop
 - 2) a disconnection in either A phase or B phase:

the engine speed will remain the same as before the abnormality occurred
- ★ If the problem occurs when the engine is stopped,
 - 1) the engine can be started, but it stays in low idling, or 2) it will not stop after it is started.
- ⚠ Stop the engine (push the governor lever of the fuel injection pump to the NO INJECTION position) before checking.
- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.

K20506


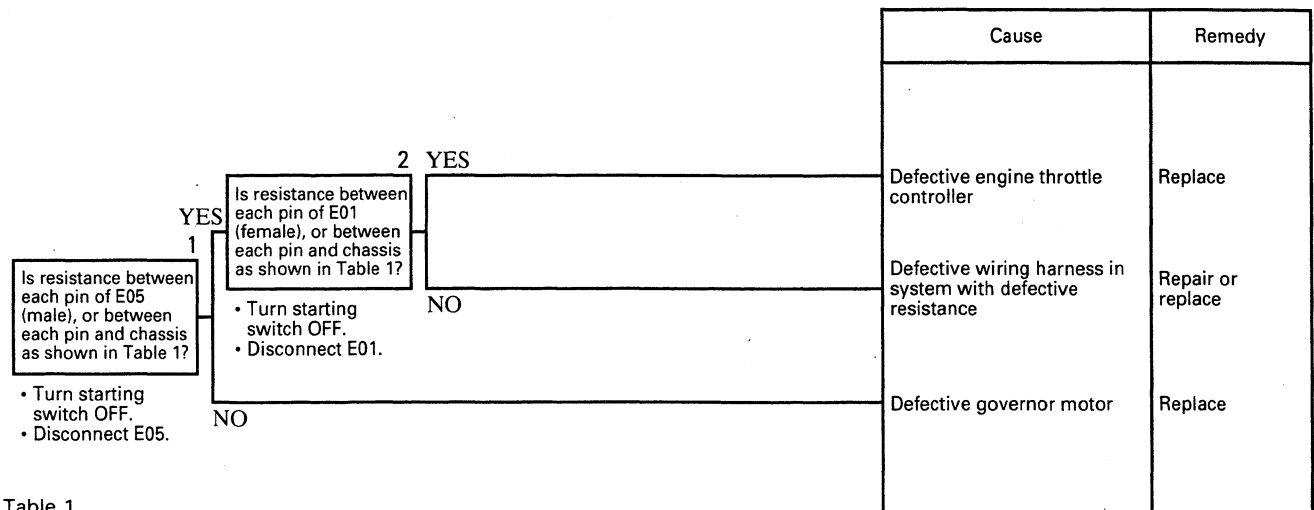


Table 1

E05 (male)	E01(female)	Resistance value
(1) – (2)	(10) – (20)	2.5 – 7 Ω
(3) – (4)	(11) – (21)	2.5 – 7 Ω
(1) – (3)	(10) – (11)	Min. 1MΩ
(1) – (4)	(10) – (21)	Min. 1MΩ
Between pins (1) (2) (3) (4) and chassis	Between pins (10) (11) (20) (21) and chassis	Min. 1MΩ

E-3 Related electric circuit diagram

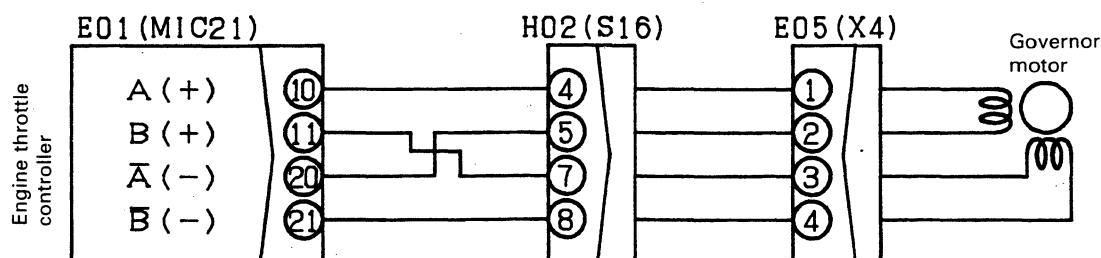

E-4 [E3:18] Abnormality (short circuit) in governor motor drive system is displayed


- ★ This troubleshooting is carried out when there is still an abnormality, so when disconnecting the connector and inserting the T-adaptor, or when removing the T-adaptor and returning the connector to its original position, if the service code is not displayed, the problem has been removed.
- ★ If the abnormality occurs during operation, because of the force of the spring,
 - 1) the engine will run at low idling, or 2) the engine will not stop
- ★ If the problem occurs when the engine is stopped,
 - 1) the engine can be started, but it stays in low idling, or 2) it will not stop after it is started.
- ⚠ Stop the engine (push the governor lever of the fuel injection pump to the NO INJECTION position) before checking.
- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.

		Cause	Remedy
Is resistance between each pin of E05 (male), or between each pin and chassis as shown in Table 1? YES 1 • Turn starting switch OFF. • Disconnect E05.	Is resistance between each pin of E01 (female), or between each pin and chassis as shown in Table 1? YES 2	Defective engine throttle controller	Replace
	NO	Defective wiring harness in system with defective resistance	Repair or replace
	NO	Defective governor motor	Replace

Table 1

E05 (male)	E01 (female)	Resistance value
(1) – (2)	(10) – (20)	2.5 – 7 Ω
(3) – (4)	(11) – (21)	2.5 – 7 Ω
(1) – (3)	(10) – (11)	Min. 1MΩ
(1) – (4)	(10) – (21)	Min. 1MΩ
Between pins (1) (2) (3) (4) and chassis	Between pins (10) (11) (20) (21) and chassis	Min. 1MΩ

E-4 Related electric circuit diagram

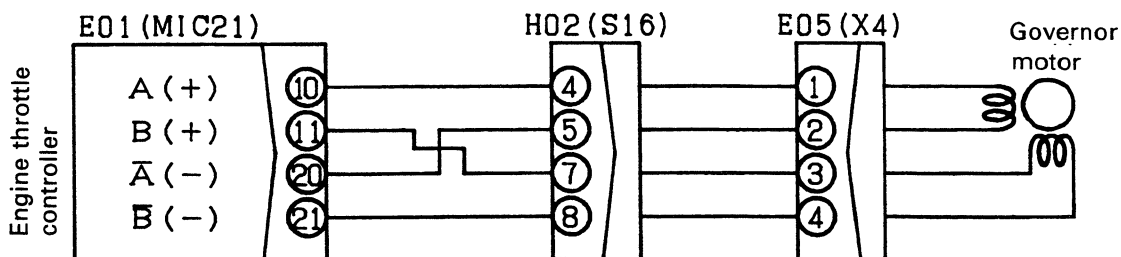


202CK06503


E-5 [E3:01] Abnormality in network reception system is displayed

- ★ This troubleshooting is carried out when there is still an abnormality, so when disconnecting the connector and inserting the T-adapter, or when removing the T-adapter and returning the connector to its original position, if the service code is not displayed, the problem has been removed.
- ★ If the starting switch is turned ON when there is a disconnection in the wiring harness between the monitor panel and the controller, or the positive end (+) of the network wiring harness or the inside of the controller are short circuited, the controller cannot carry out networking, so the monitor panel does not display any abnormality.
- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.


When E3:01 is displayed independently

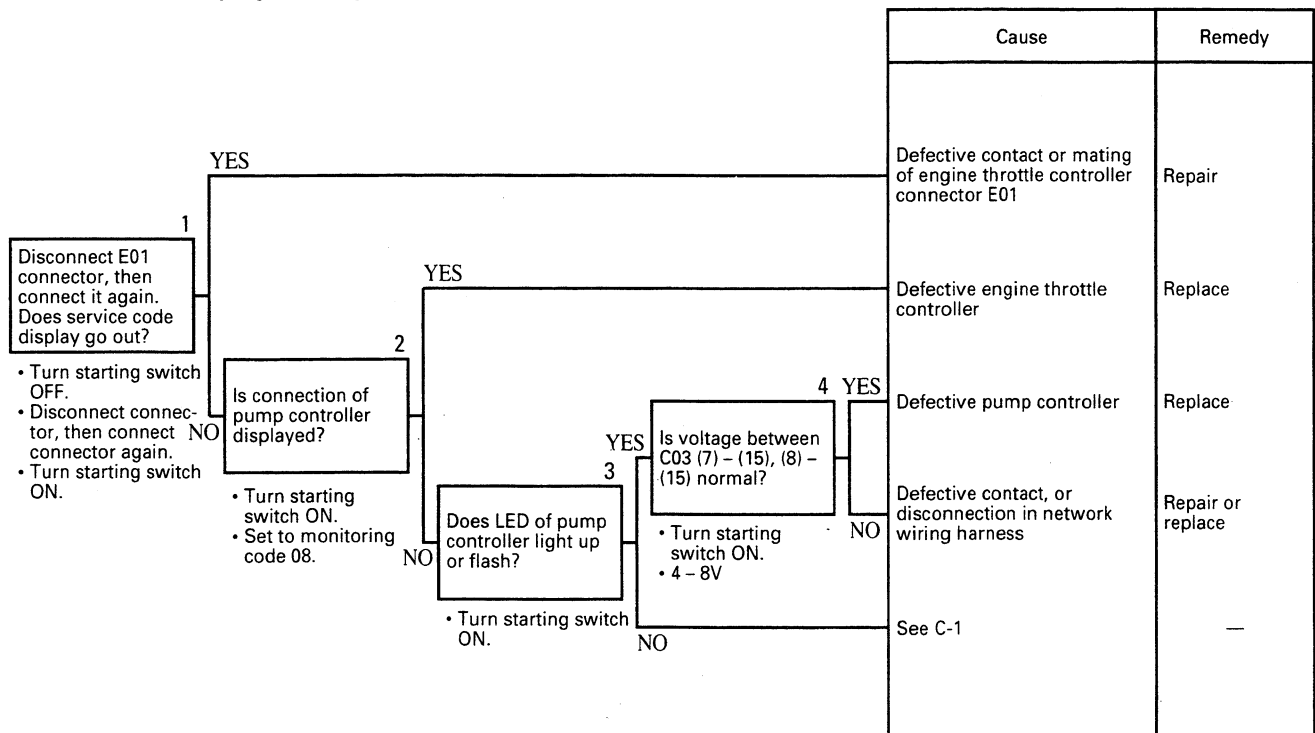


When E2:18 and E3:01 are displayed simultaneously

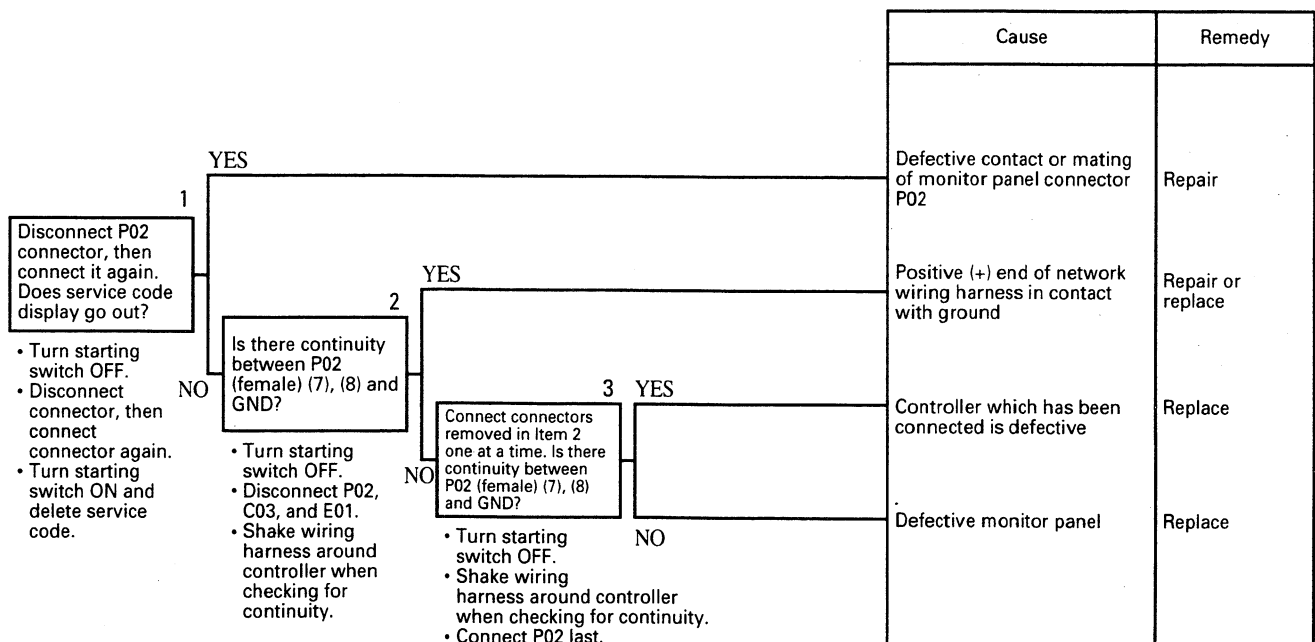

Monitoring display (Time display portion)

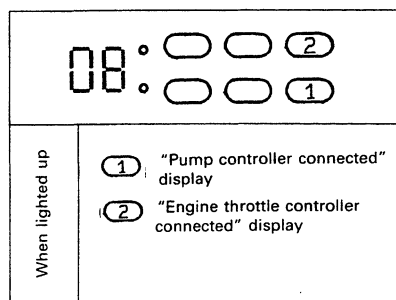

E-5 Related electric circuit diagram

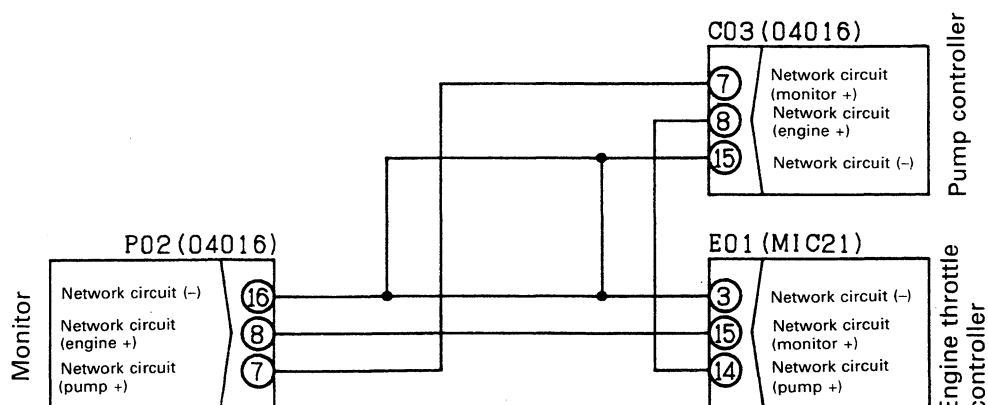


202CK06504

K20506

- ★ Check for the LED display for the engine throttle controller and pump controller from the direction of the arrow as shown in the diagram on the right.

Note 1: Push the operator's seat down to the front, then remove the two rear covers to check.


Note 2: The LED display for the pump controller is difficult to see, so use a mirror.

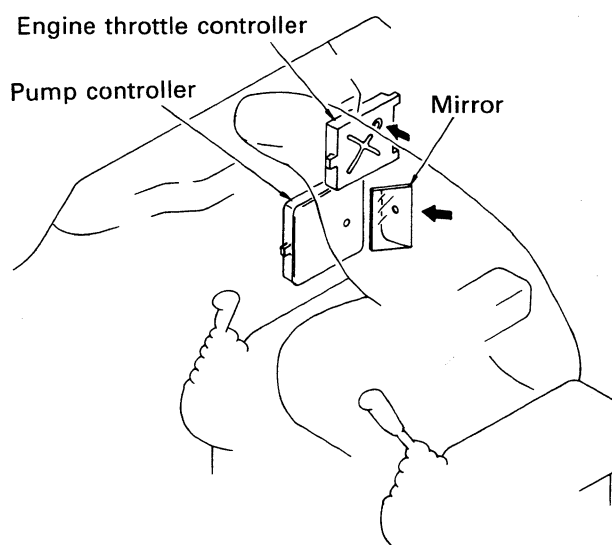

205F06384

E-6 [E3:05] Abnormality in model code is displayed

- ★ This troubleshooting is carried out when there is still an abnormality, so when disconnecting the connector and inserting the T-adapter, or when removing the T-adapter and returning the connector to its original position, if the service code is not displayed, the problem has been removed.
- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.

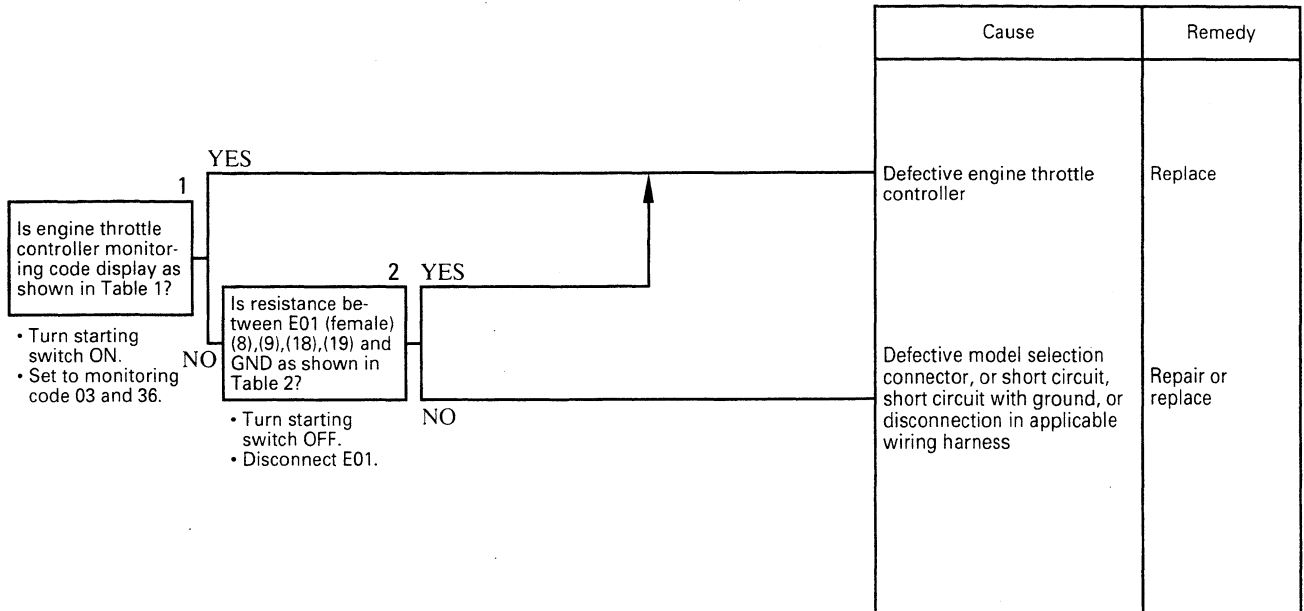

K20506

Table 1 Monitoring display (Time display portion)


	Condition of engine throttle controller input	Engine throttle controller model code
PC210	36: 	03:200
PC240	36: 	03:220

● : ON
○ : OFF

Table 2 Resistance value

Applicable wiring harness	PC210	PC240
Between E01 (female) (8) and GND	Min. 1 MΩ	Max. 1 Ω
Between E01 (female) (18) and GND	Min. 1 MΩ	Min. 1 MΩ
Between E01 (female) (9) and GND	Max. 1 Ω	Max. 1 Ω
Between E01 (female) (19) and GND	Min. 1 MΩ	Min. 1 MΩ

E-6 Related electric circuit diagram

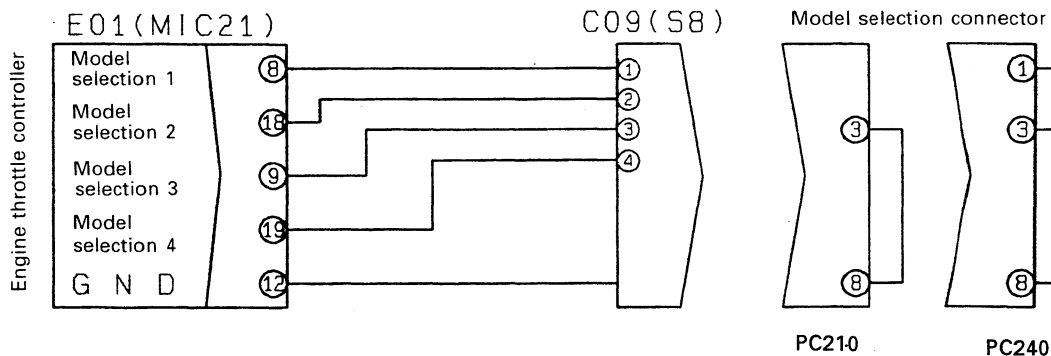

205CA06501

E-7 [E3:06] Abnormality in governor potentiometer system is displayed

- ★ This troubleshooting is carried out when there is still an abnormality, so when disconnecting the connector and inserting the T-adapter, or when removing the T-adapter and returning the connector to its original position, if the service code is not displayed, problem has been removed.
- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.

		Cause	Remedy	
Is resistance between E06 (male) (1) – (2), (2) – (3) as shown in Table 1? • Turn starting switch OFF. • Disconnect E04.	YES 1	Defective engine throttle controller	Replace	
	Is resistance between each pin of E01 (female) (5)(16)(17), or between each pin and chassis as shown in Table 1? • Turn starting switch OFF. • Disconnect E01.	2 YES	Defective wiring harness in system with defective resistance	Repair or replace
	NO	Defective governor motor	Replace	


Note: If E3:08 also occurs at the same time, check the wiring harness below.

Wiring harness between E01 (female) (5) – X07 (6) – E06 (female) (1) short circuiting with ground, or contact with other wiring harness

Table 1

E01 (female)	E04 (male)	Resistance value
(5) – (17)	(1) – (2)	0.25 – 7 kΩ
(17) – (16)	(2) – (3)	0.25 – 7 kΩ
(5) – (16)	–	2 – 3 kΩ
–	(1) – (3)	4 – 6 kΩ
Between each pin and chassis	–	Min. 1 MΩ

E-7 Related electric circuit diagram

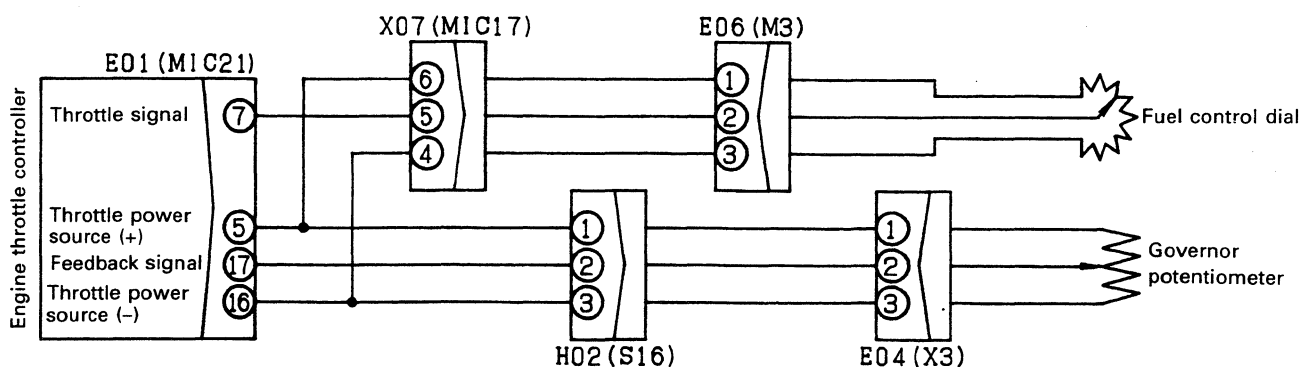

202CK06502

K20506

E-8 [E3:07] Abnormality in pump controller throttle system is displayed

- ★ Start troubleshooting from E-6 [E3:05] or C-8 [E2:17].

E-9 [E3:15] Abnormality (short circuit) in battery relay output system is displayed

- ★ This troubleshooting is carried out when there is still an abnormality, so when disconnecting the connector and inserting the T-adapter, or when removing the T-adapter and returning the connector to its original position, if the service code is not displayed, the problem has been removed.


⚠ Stop the engine (push the governor lever of the fuel injection pump to the NO INJECTION position).

- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.

- ★ Always connect any disconnected connectors before going on the next step.

Note: This only occurs when the engine is stopped and the starting switch is turned OFF.


		Cause	Remedy
K20506 Is resistance between E01 (female) (13) and chassis normal? 1 YES Is resistance between E01 (female) (13) and battery relay terminal BR, and between wiring harness and chassis normal? 2 YES NO - Between E01 (female) (13) and battery relay BR: Max 1 Ω - Between wiring harness and chassis: Min. 1 MΩ - Turn starting switch OFF. - Disconnect E01 and battery relay BR. NO • Approx. 100 Ω • Turn starting switch OFF. • Disconnect E01.		Defective engine throttle controller	Replace
		Defective battery relay	Replace
		1) Contact between other wiring harness and wiring harness between E01 (female) (13) – H02 (9) – battery relay BR 2) When light is connected	Repair or replace

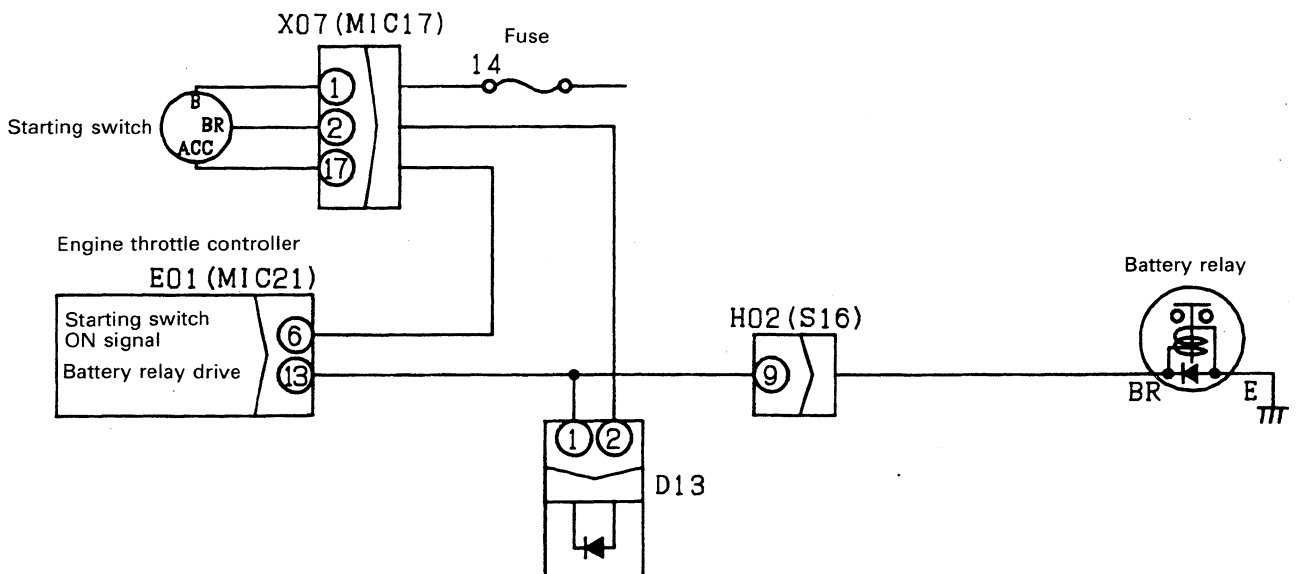E-9 Related electric circuit diagram

202CK06505

E-10 [E3:16] Abnormality (step-out) in governor motor system is displayed


- ★ This troubleshooting is carried out when there is still an abnormality, so when disconnecting the connector and inserting the T-adapter, or when removing the T-adapter and returning the connector to its original position, if the service code is not displayed, the problem has been removed.
- ★ If any other service code [E3:01] – [E3:18] has occurred at the same time, start troubleshooting from that code.
- ★ Check that fuse 2 is normal.
- ★ Read the precautions given in TESTING AND ADJUSTING, “Adjusting stroke of governor motor lever” before carrying out the troubleshooting.
- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.

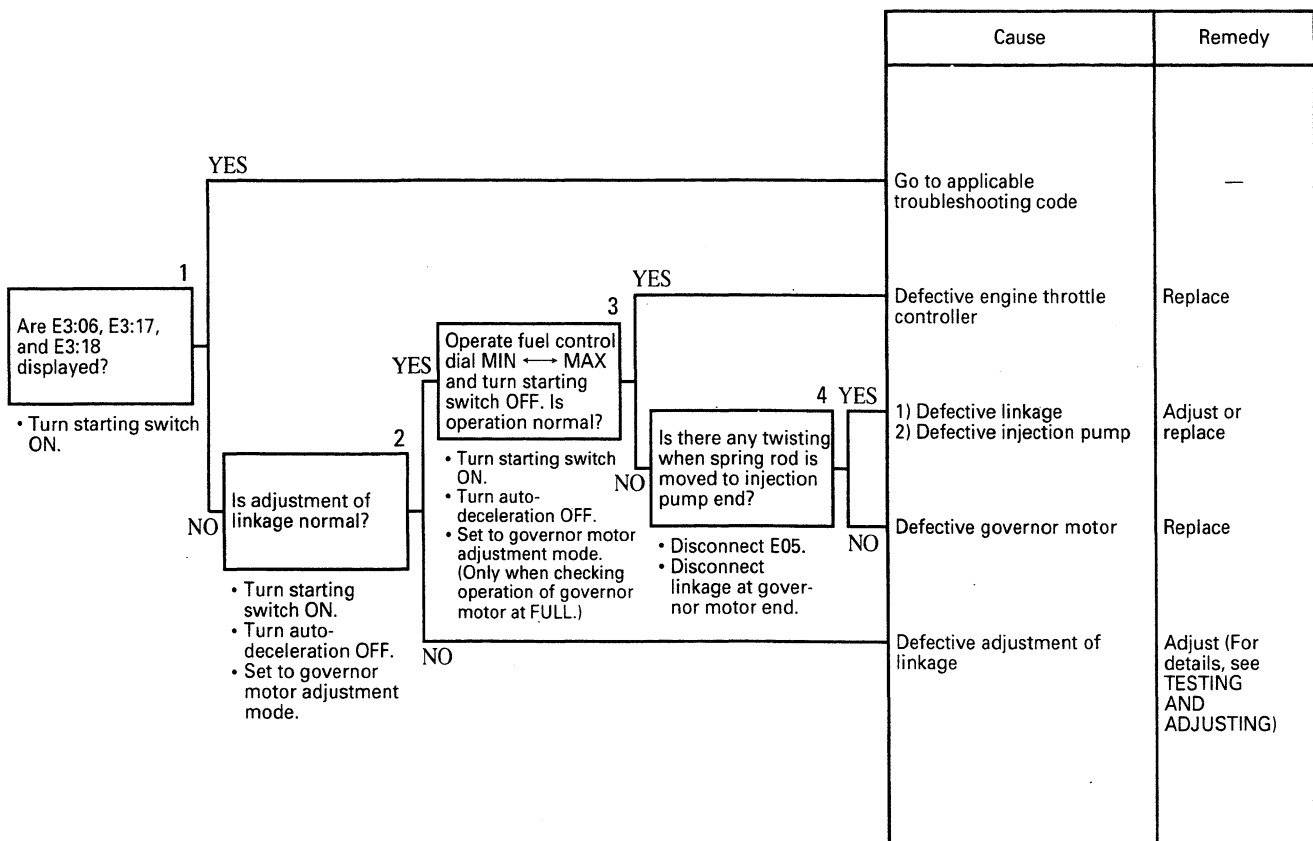

K20506


E-11 Engine does not start

- ★When starting motor does not rotate.
- ★Check that fuse 14 is not blown before starting troubleshooting.
- ★Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★Always connect any disconnected connectors before going on the next step.

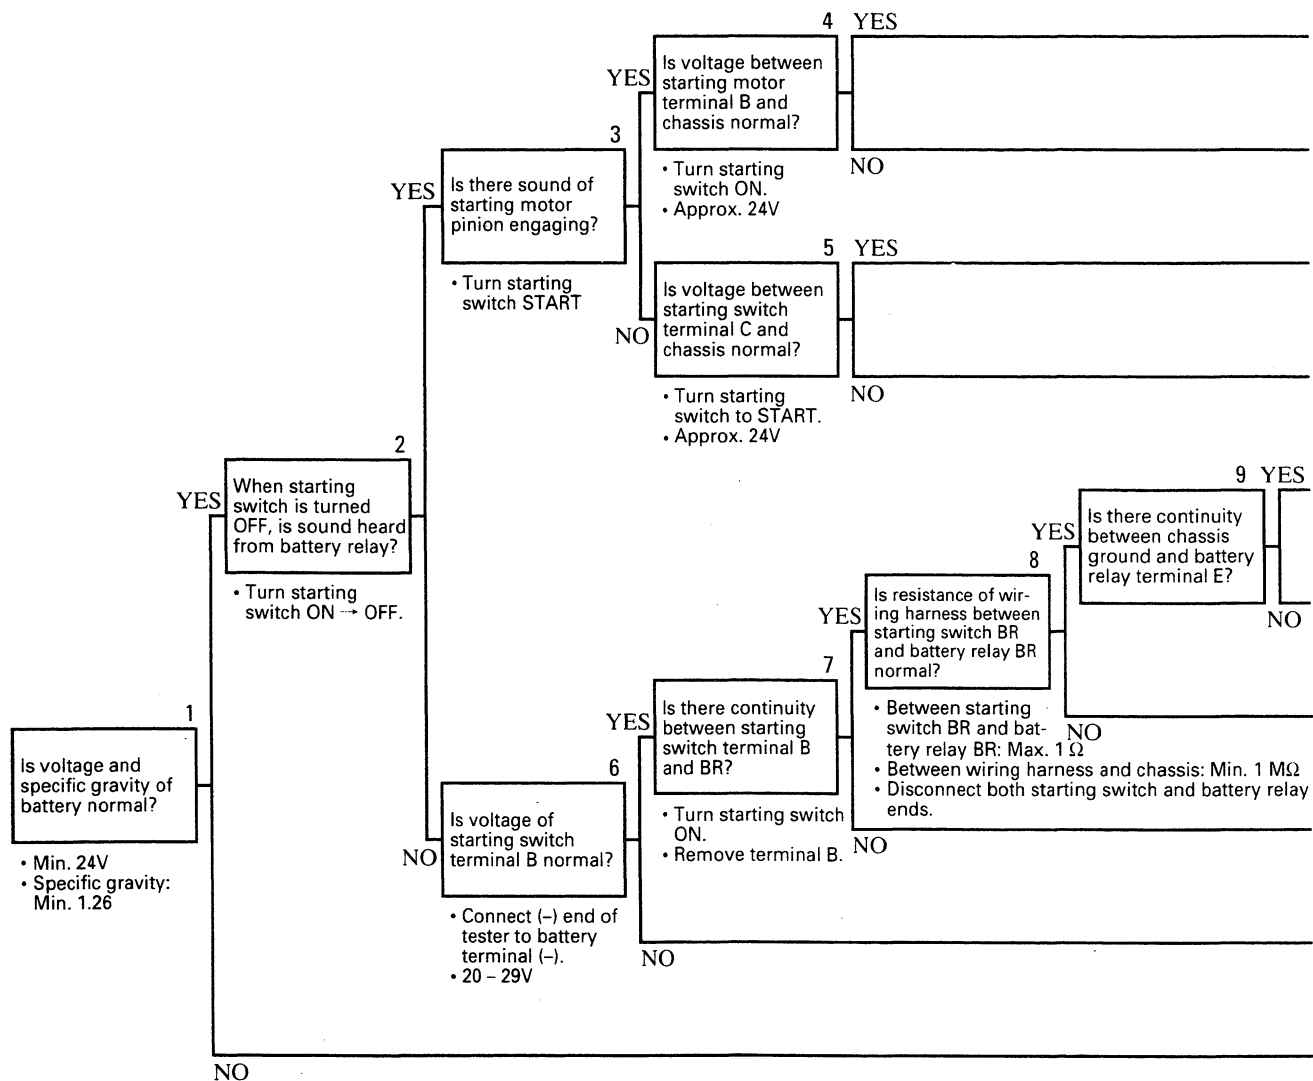

K20506

E-11 Related electric circuit diagram

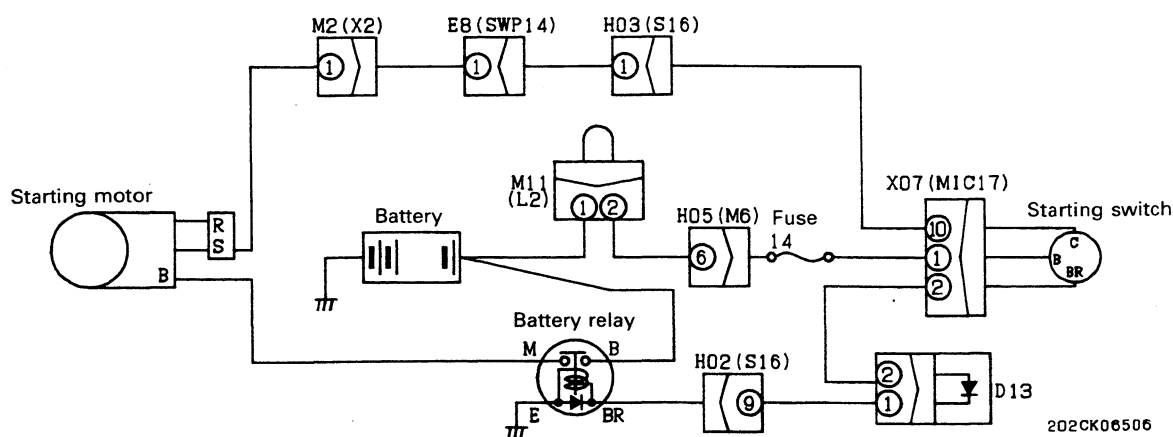

202CK06506

K20506

	Cause	Remedy
	Defective starting motor	Replace
	Defective contact of wiring harness between battery (+) – battery relay B – battery relay M – starting motor terminal B (including battery relay)	Repair or replace
	Defective contact, or disconnection in wiring harness between starting switch terminal C – X07 (10) – H03 (1) – E8 (1) – M2 (1) – starting motor terminal S	Repair or replace
	Defective starting switch (between terminals B and C)	Replace
	Defective battery relay	Replace
	Defective contact of wiring harness between battery relay terminal E and revolving frame ground connection terminal	Repair or replace
	Defective contact, or disconnection in wiring harness between starting switch terminal BR – D13 – H02 (9) – battery relay terminal BR	Repair or replace
	Defective starting switch (between B and BR)	Replace
	Defective contact, or disconnection in wiring harness between battery terminal (+) – M11 – H05 (6) – X07 (1) – starting switch terminal B (including fusible link)	Repair or replace
	Lack of battery capacity	Charge or replace

E-12 Engine speed is irregular

- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.

a) Idling speed is irregular

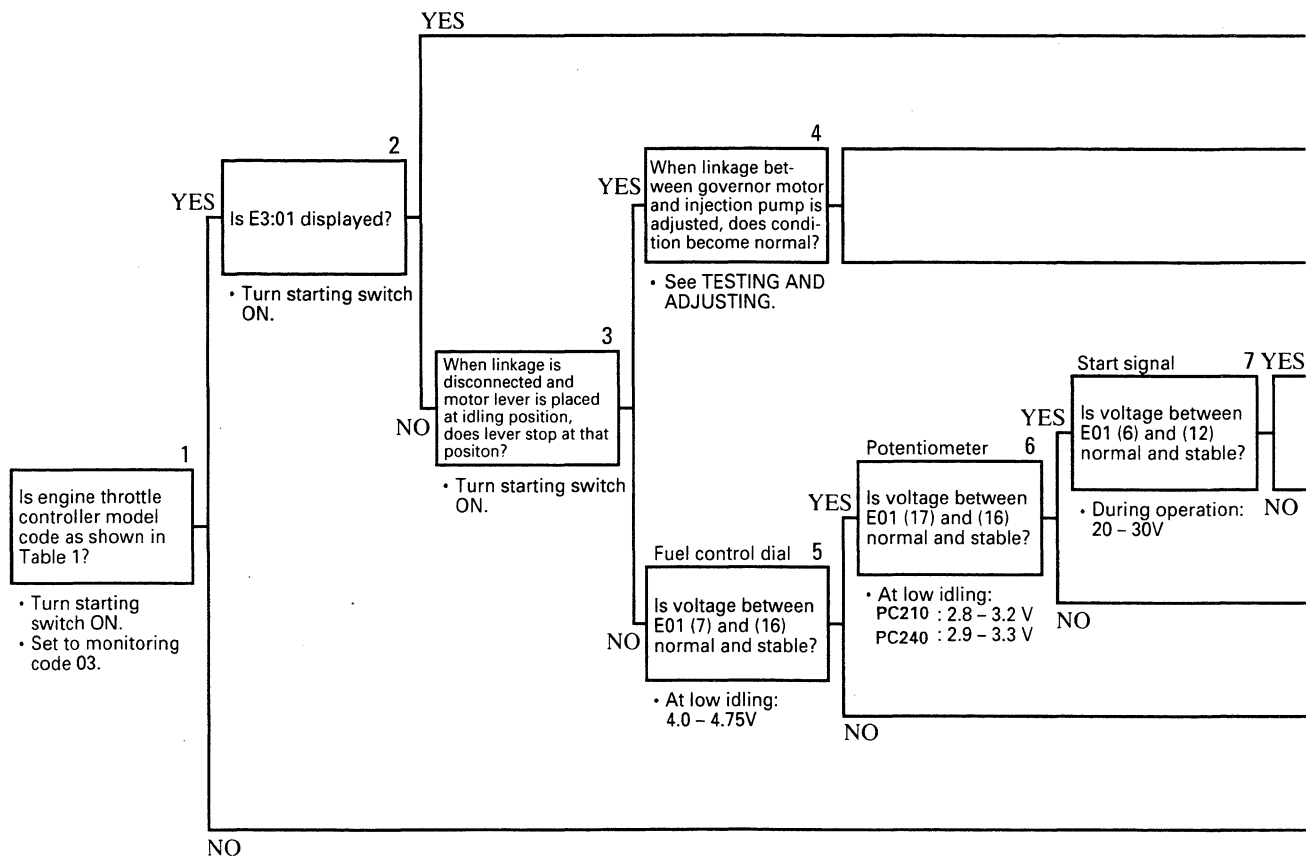



Table 1

	Engine throttle controller model code
PC210	03:200
PC240	03:220

K20506

	Cause	Remedy
	See E-5	—
	Defective adjustment of linkage	Adjust
	Defective injection pump	See S mode
	Defective governor motor	Replace
	Defective contact of wiring harness between starting switch ACC – X07 (17) – E01 (female) (6), or defective starting switch	Repair or replace
	See E-7	—
	See E-2	—
	See E-6	—

E-12 Related electric circuit diagram

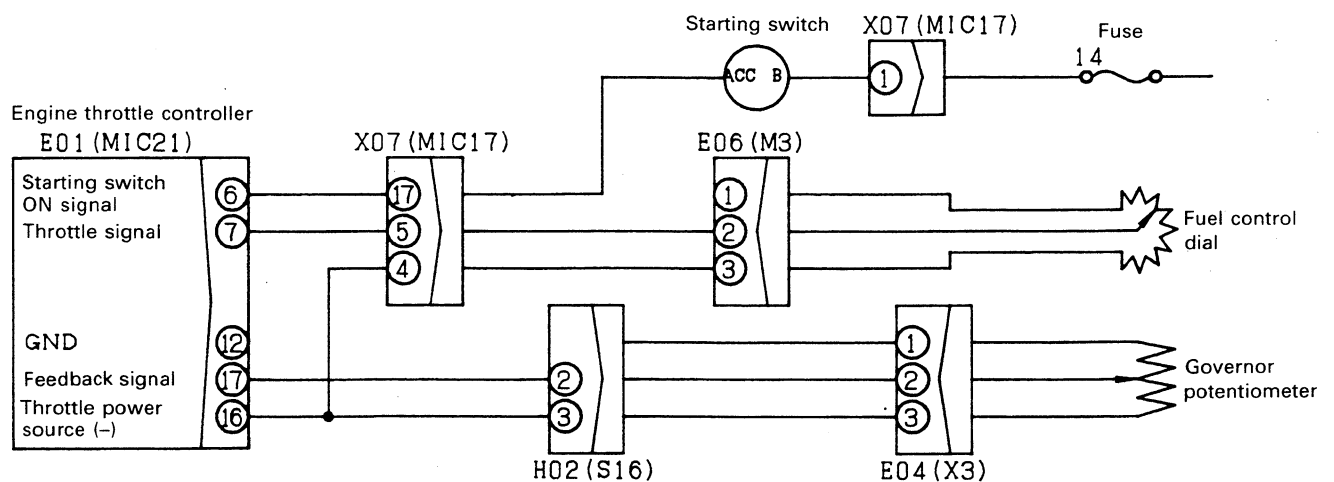

202CK06507

b) There is hunting


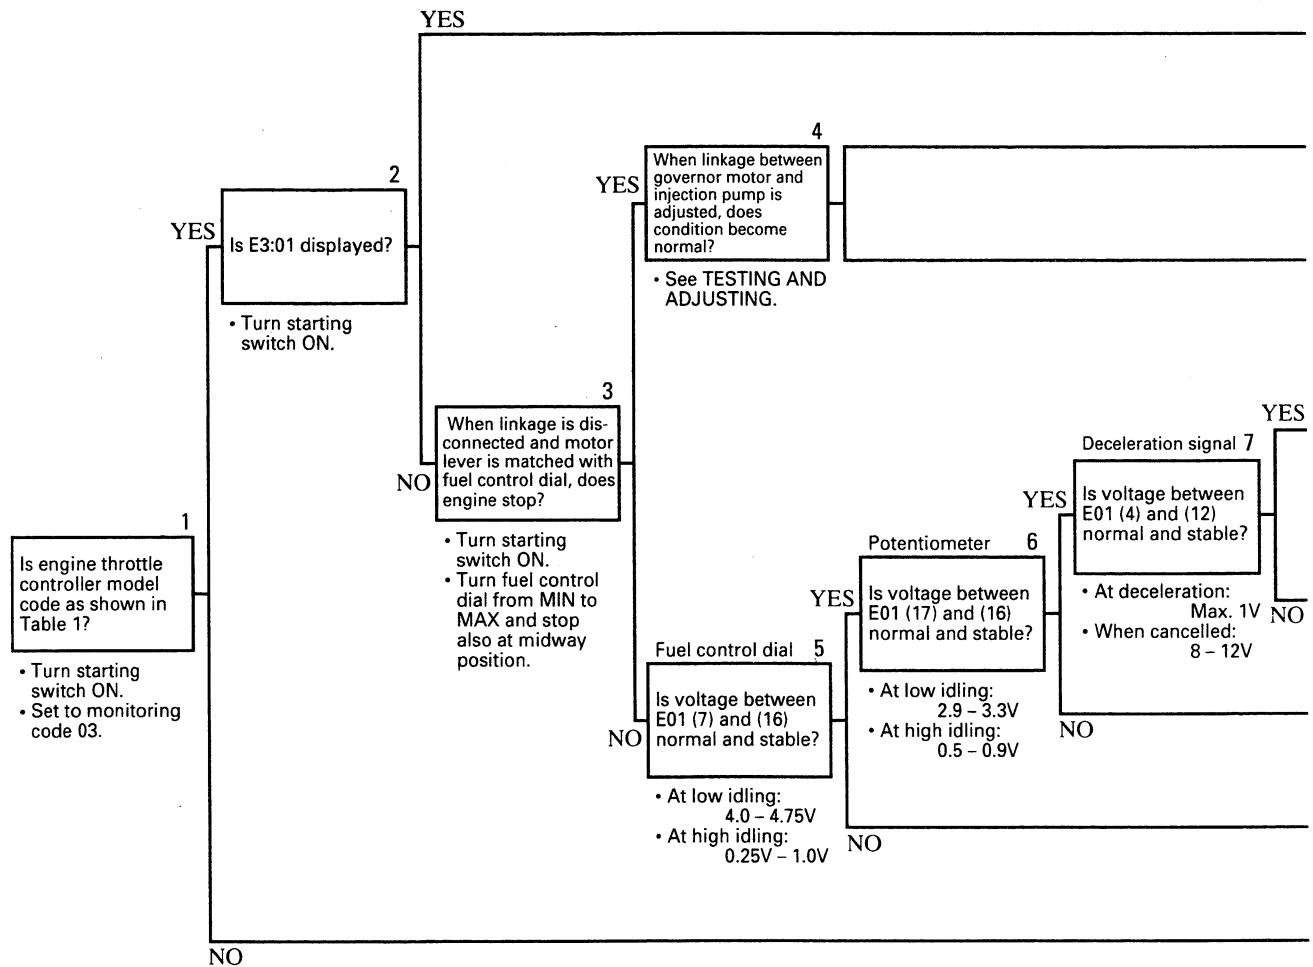


Table 1

	Engine throttle controller model code
PC210	03:200
PC240	03:220


			Cause	Remedy
K20506	Start signal 8 YES Is voltage between E01 (6) and (12) normal and stable? • During operation: 20 – 30V		See E-5	—
			Defective adjustment of linkage	Adjust
			Defective injection pump	See S mode
			Defective governor motor	Replace
			Defective contact of wiring harness between starting switch ACC – X07 (17) – E01 (female) (6), or defective starting switch	Repair or replace
			See C-15	—
			See E-7	—
			See E-2	—
			See E-6	—

E-12 Related electric circuit diagram

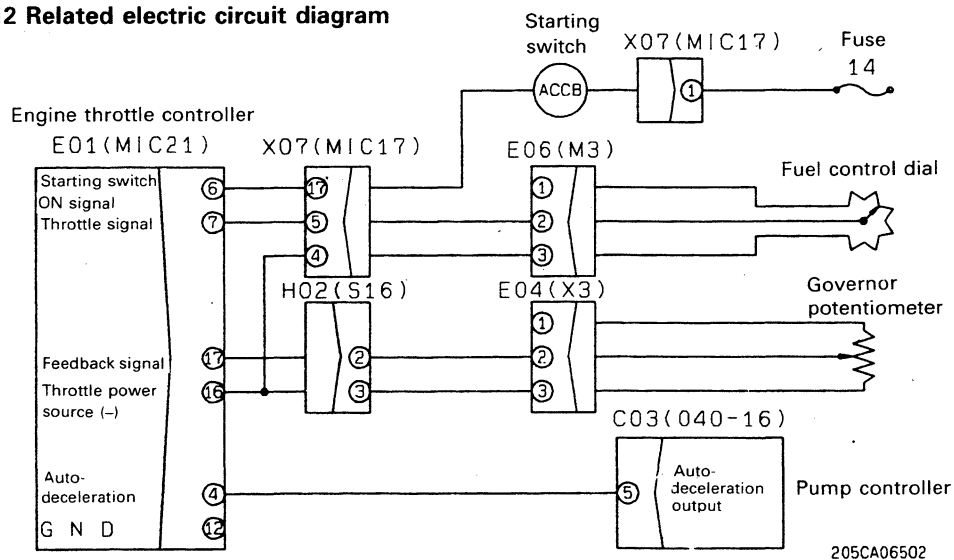

E-13 Lack of output (engine high idling speed is too low)

- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.

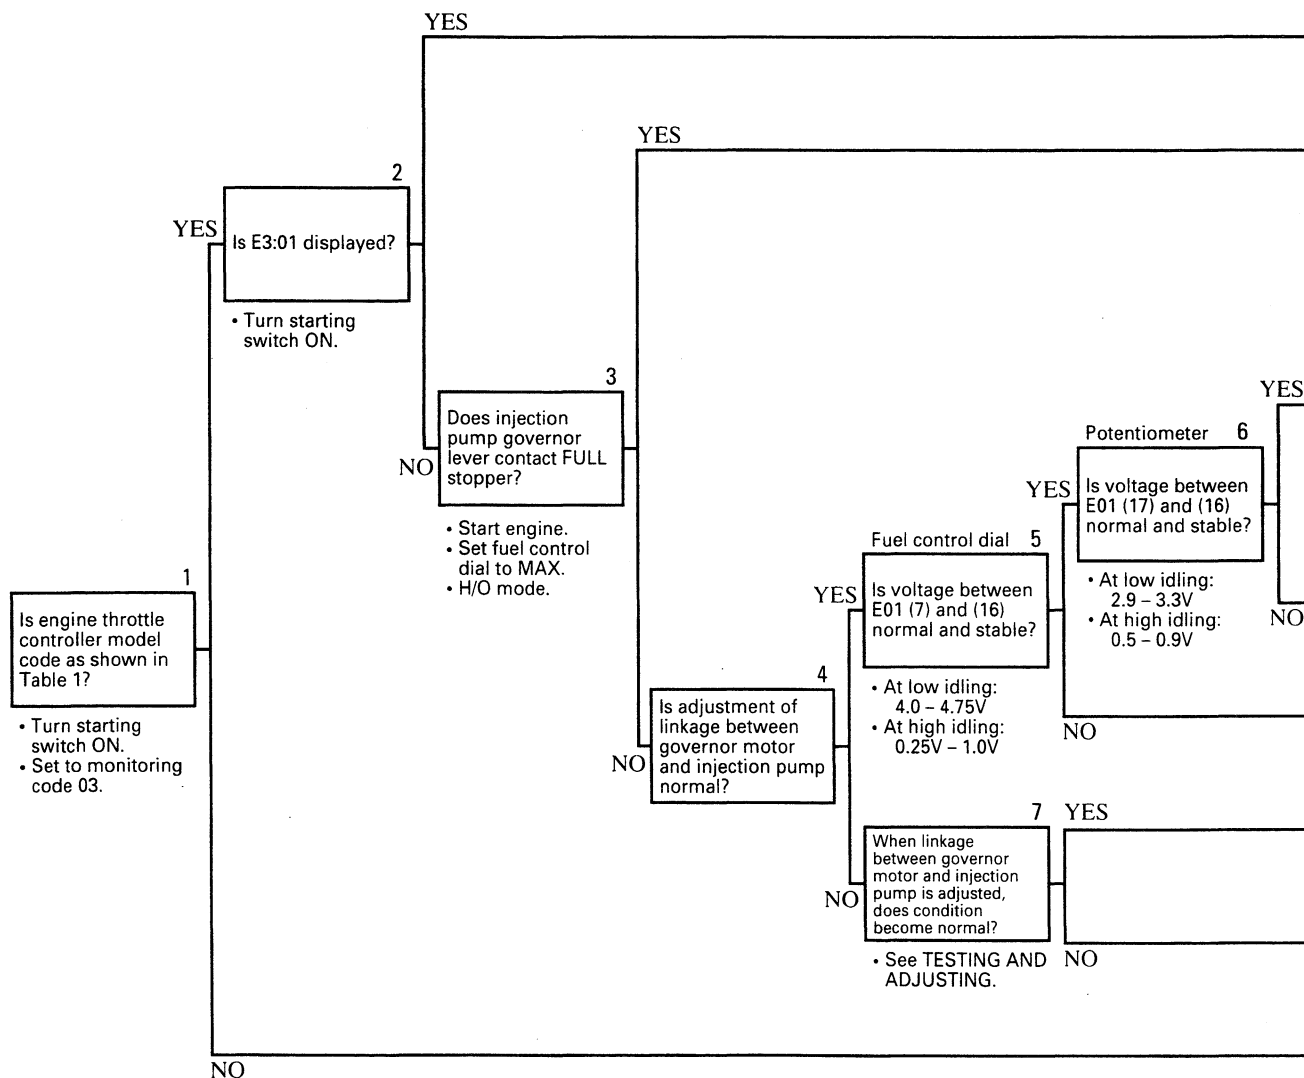


K20506

Table 1

	Engine throttle controller model code
PC210	03:200
PC240	03:220

	Cause	Remedy
	See E-5	—
	Defective injection pump	See S mode
	Defective governor motor	Replace
Deceleration signal 8 Is voltage between E01 (4) and (12) normal and stable? • At deceleration: Max. 1V • When cancelled: 8 – 12V	YES Is voltage between E01 (6) and (12) normal and stable? • During operation: 20 – 30V NO	YES Defective contact of wiring harness between starting switch ACC – X07 (17) – E01 (female) (6), or defective starting switch Repair or replace NO See C-15
	See E-7	—
	See E-2	—
	Defective adjustment of governor motor linkage	Adjust
	See S mode	—
	See E-6	—

E-13 Related electric circuit diagram

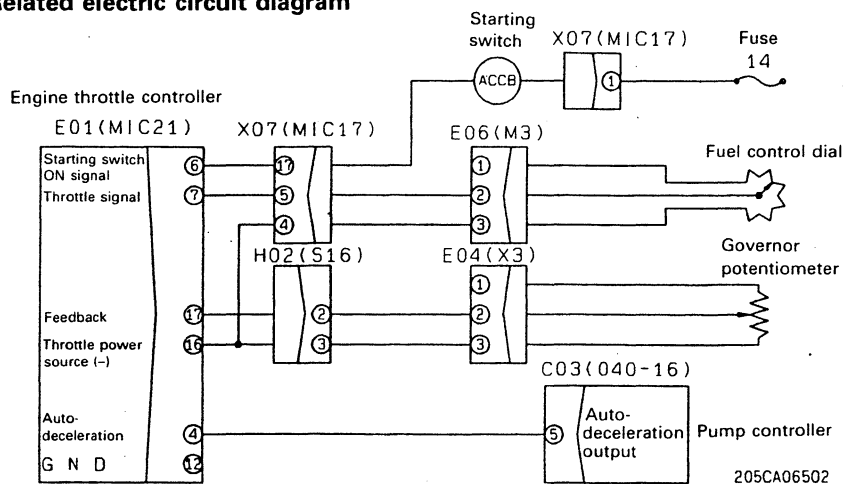

E-14 Engine does not stop

⚠ Stop the engine (push the fuel control lever of the fuel injection pump to the NO INJECTION position) before checking.

- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.
- ★ Read the precautions given in TESTING AND ADJUSTING, "Adjusting stroke of governor motor lever" before carrying out the troubleshooting.


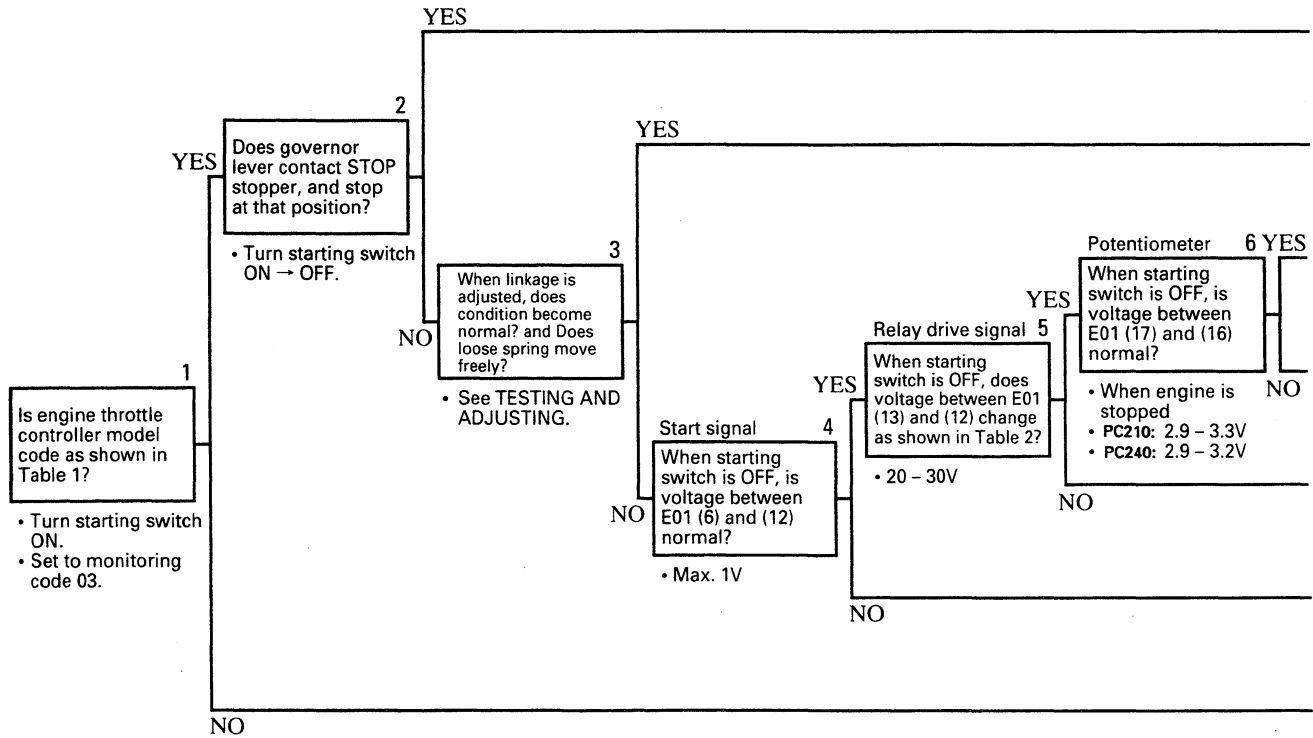


Table 1

	Engine throttle controller model code
PC210	03:200
PC240	03:220

Table 2

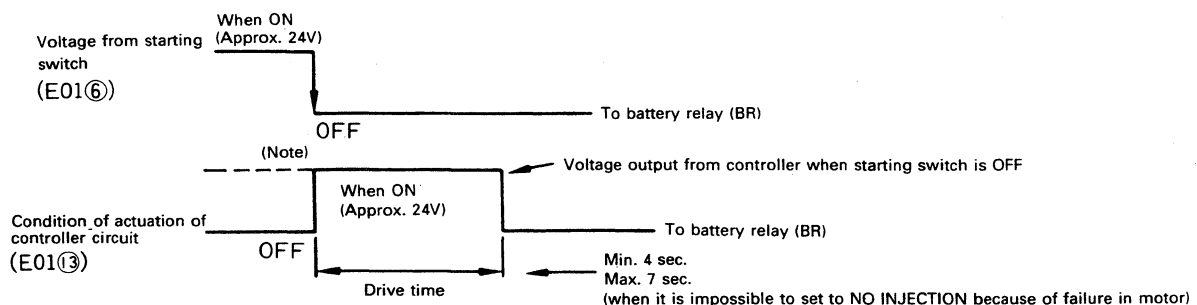


Note: When the starting switch is ON, the controller end is OFF, but a voltage of approx. 20 – 30V is always flowing from starting switch BR, so if the voltage is measured at E01 (13), there is a voltage of 20 – 30V.

K20506

	Cause	Remedy
	Defective injection pump	See S mode
	Defective adjustment of linkage	Adjust
	Defective governor motor	Replace
	See E-7	—
	Defective engine throttle controller	Replace
	Contact with 24V wiring harness of wiring harness between starting switch ACC - X07 (17) - E01 (female) (6), or defective starting switch	Repair or replace
	See E-6	—

E-14 Related electric circuit diagram

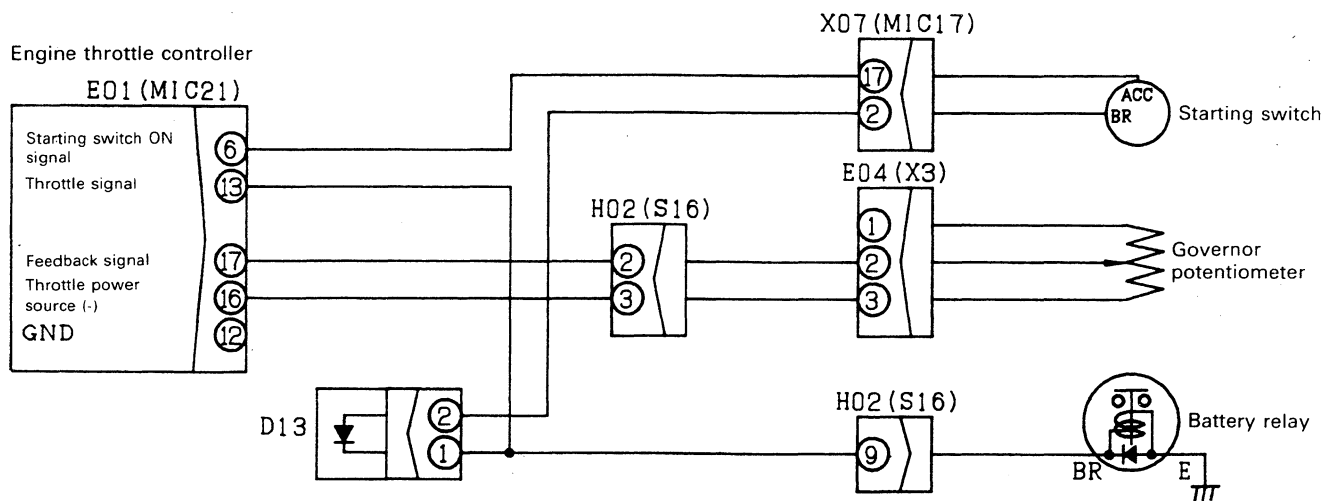

202CK06508

E-15 Defective operation of battery relay system (engine does not stop)


Note: This only occurs when the engine is stopped and the starting switch is turned OFF.

⚠ Stop the engine (push the governor lever of the fuel injection pump to the NO INJECTION position) before checking.

- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.


		Cause	Remedy
1 Is E3:15 displayed? • Turn starting switch ON. YES NO 2 Relay drive signal Is display of monitoring code 35 as shown in Table 1? • Turn starting switch OFF. • 20 – 30V YES NO 3 Is resistance between E01 (female) (13) and battery relay terminal BR, and between wiring harness and chassis normal? • Between E01 (female) (13) and battery relay BR: Max. 1 Ω • Between wiring harness and chassis: Min. 1 MΩ • Turn starting switch OFF. • Disconnect E01 and battery relay BR. YES NO		See E-9	—
		Defective engine throttle controller	Replace
		Defective battery relay	Replace
		1) Disconnection in wiring harness between E01 (female) (13) – H02 (9) – battery relay BR 2) When light is connected	Repair or replace

Table 1

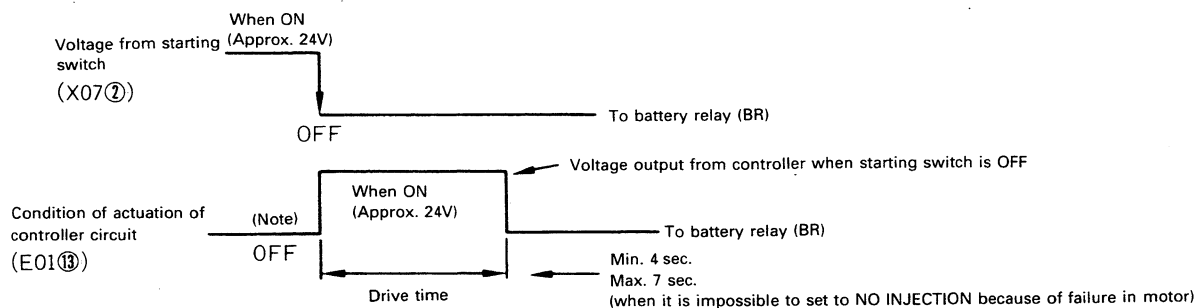

Note: When the starting switch is ON, the controller end is OFF, but a voltage of approx. 20 – 30V is always flowing from starting switch BR, so if the voltage is measured at E01 (13), there is a voltage of 20 – 30V.

E-15 Related electric circuit diagram

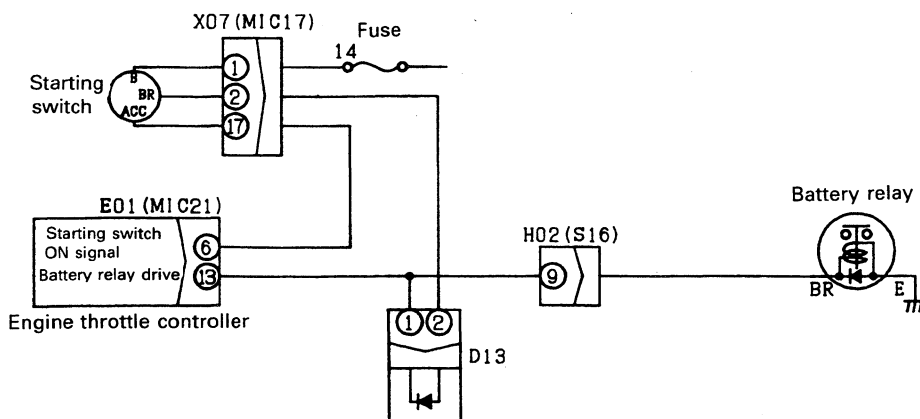

202CK06505

TROUBLESHOOTING OF ENGINE (S MODE)

Method of using troubleshooting chart	20-130
S- 1 Starting performance is poor (Starting always takes time)	20-134
S- 2 Engine does not start	20-135
① Engine does not turn	20-135
② Engine turns but no exhaust gas comes out (Fuel is not being injected)	20-136
③ Exhaust gas comes out but engine does not start (Fuel is being injected)	20-137
S- 3 Engine does not pick up smoothly (Follow-up is poor)	20-138
S- 4 Engine stops during operations	20-139
S- 5 Engine does not rotate smoothly	20-140
S- 6 Engine lacks output (no power)	20-141
S- 7 Exhaust gas is black (incomplete combustion)	20-142
S- 8 Oil consumption is excessive (or exhaust gas is blue)	20-143
S- 9 Oil becomes contaminated quickly	20-144
S-10 Fuel consumption is excessive	20-145
S-11 Oil is in cooling water, or water spurts back, or water level goes down	20-146
S-12 Oil pressure lamp lights up (drop in oil pressure)	20-147
S-13 Oil level rises	20-148
S-14 Water temperature becomes too high (overheating)	20-149
S-15 Abnormal noise is made	20-150
S-16 Vibration is excessive	20-151

K20506

METHOD OF USING TROUBLESHOOTING CHART

This troubleshooting chart is divided into three sections: questions, check items, and troubleshooting. The questions and check items are used to pinpoint high probability causes that can be located from the failure symptoms or simple inspection without using troubleshooting tools.

Next, troubleshooting tools or direct inspection are used to check the high probability causes to make final confirmation.

[Questions]

Sections ① + ② in the chart on the right corresponds to the items where answers can be obtained from the user. The items in ② are items that can be obtained from the user, depending on the user's level.

[Check items]

The serviceman carries out simple inspection to narrow down the causes. The items under ③ in the chart on the right correspond to this.

The serviceman narrows down the causes from information ① that he has obtained from the user and the results of ③ that he has obtained from his own inspection.

[Troubleshooting]

Troubleshooting is carried out in the order of probability, starting with the causes that have been marked as having the highest probability from information gained from [Questions] and [Check items].

		Causes		
		(1)	(2)	(3)
Questions	(a)	⊗		
	(b)			⊗
	(c)		⊗	
	(d)	○		
	(e)			○
Check items				
Troubleshooting	i	●		
	ii		●	
	iii			●

TROUBLESHOOTING**METHOD OF USING TROUBLESHOOTING CHART**

The basic method of using the troubleshooting chart is as follows.

Items listed for [Questions] and [Check items] that have a relationship with the Cause items are marked with ○, and of these, causes that have a high probability are marked with ◎.

Check each of the [Questions] and [Check items] in turn, and marked the ○ or ◎ in the chart for items where the problem appeared. The vertical column (Causes) that has the highest number of points is the most probable cause, so start troubleshooting for that item to make final confirmation of the cause.

- ※1. For (Confirm recent repair history) in the [Questions] Section, ask the user, and mark the Cause column with △ to use as reference for locating the cause of the failure. However, do not use this when making calculations to narrow down the causes.
- ※2. Use the △ in the Cause column as reference for (Degree of use (Operated for long period)) in the [Questions] section as reference. As a rule, do not use it when calculating the points for locating the cause, but it can be included if necessary to determine the order for troubleshooting.

		Causes					
		Seized turbocharger, interference	Clogged air cleaner element	Worn piston ring, cylinder	Clogged, seized injection nozzle	Improper injection timing	Defective injection pump (excessive injection)
※1	Confirm recent repair history						
※2	Degree of use		△	△	△		
	Operated for long period						

K20506

TROUBLESHOOTING**METHOD OF USING TROUBLESHOOTING CHART**

• **Example of troubleshooting when exhaust gas is black**


Let us assume that [Clogged air cleaner] is taken to be the cause of black exhaust gas. Three symptoms have causal relationship with this problem: [Exhaust gas slowly became black], [Power slowly became weaker], and [Dust indicator is red].

If we look from these three symptoms to find the causes, we find that there is a relationship with five causes. Let us explain here the method of using this causal relationship to pinpoint the most probable cause.

			Causes									
			Siezed turbocharger, interference	Worn piston ring, cylinder	Clogged, siezed injection nozzle	Improper injection timing	Defective injection pump (excessive injection)	Improper valve clearance	Crushed, clogged muffler	Leakage of air between turbocharger and head	Defective contact of valve, valve seat	Defective injection pump (rack, plunger seized)
Questions	Confirm recent repair history											
	Degree of use	Operated for long period		△	△						△	
	Color of exhaust gas	Suddenly became black	◎	○								○
		Blue under light load		◎								
	Engine oil must be added more frequently			◎								
	Power was lost	Suddenly	◎	○				○				○
	Non-specified fuel has been used			○								○
	Noise of interference is heard from around turbocharger	◎										
	Blow-by gas is excessive		◎									
	Engine pickup is poor and combustion is irregular	○		◎			○	○	◎			○
Check items	When exhaust manifold is touched immediately after starting engine, temperature of some cylinders is low			◎								○
	Match marks on fuel injection pump are out of alignment				◎							
	Seal on injection pump has come off					◎						
	Clanging sound is heard from around cylinder head						◎					
	Exhaust noise is abnormal	○		○				◎				
	Muffler is crushed							◎				
	Leakage of air between turbocharger and head, loose clamp								◎			
	When turbocharger is rotated by hand, it is found to be heavy	●										
	When air cleaner is inspected directly, it is found to be clogged											
	When compression pressure is measured, it is found to be low		●								●	
Troubleshooting	Speed of some cylinders does not change when operating on reduced cylinders			●								
	When check is made using delivery method, injection timing is found to be incorrect					●						
	Injection pump test shows that injection amount is incorrect						●					
	When valve clearance is checked directly it is found to be outside standard value							●				
	When muffler is removed, exhaust gas color returns to normal								●			
	When control rack is pushed, it is found to be heavy or does not return											●
	Remedy	Replace	Replace	Replace	Adjust	Adjust	Adjust	Replace	Repair	Replace	Replace	Replace

K20506

K20506

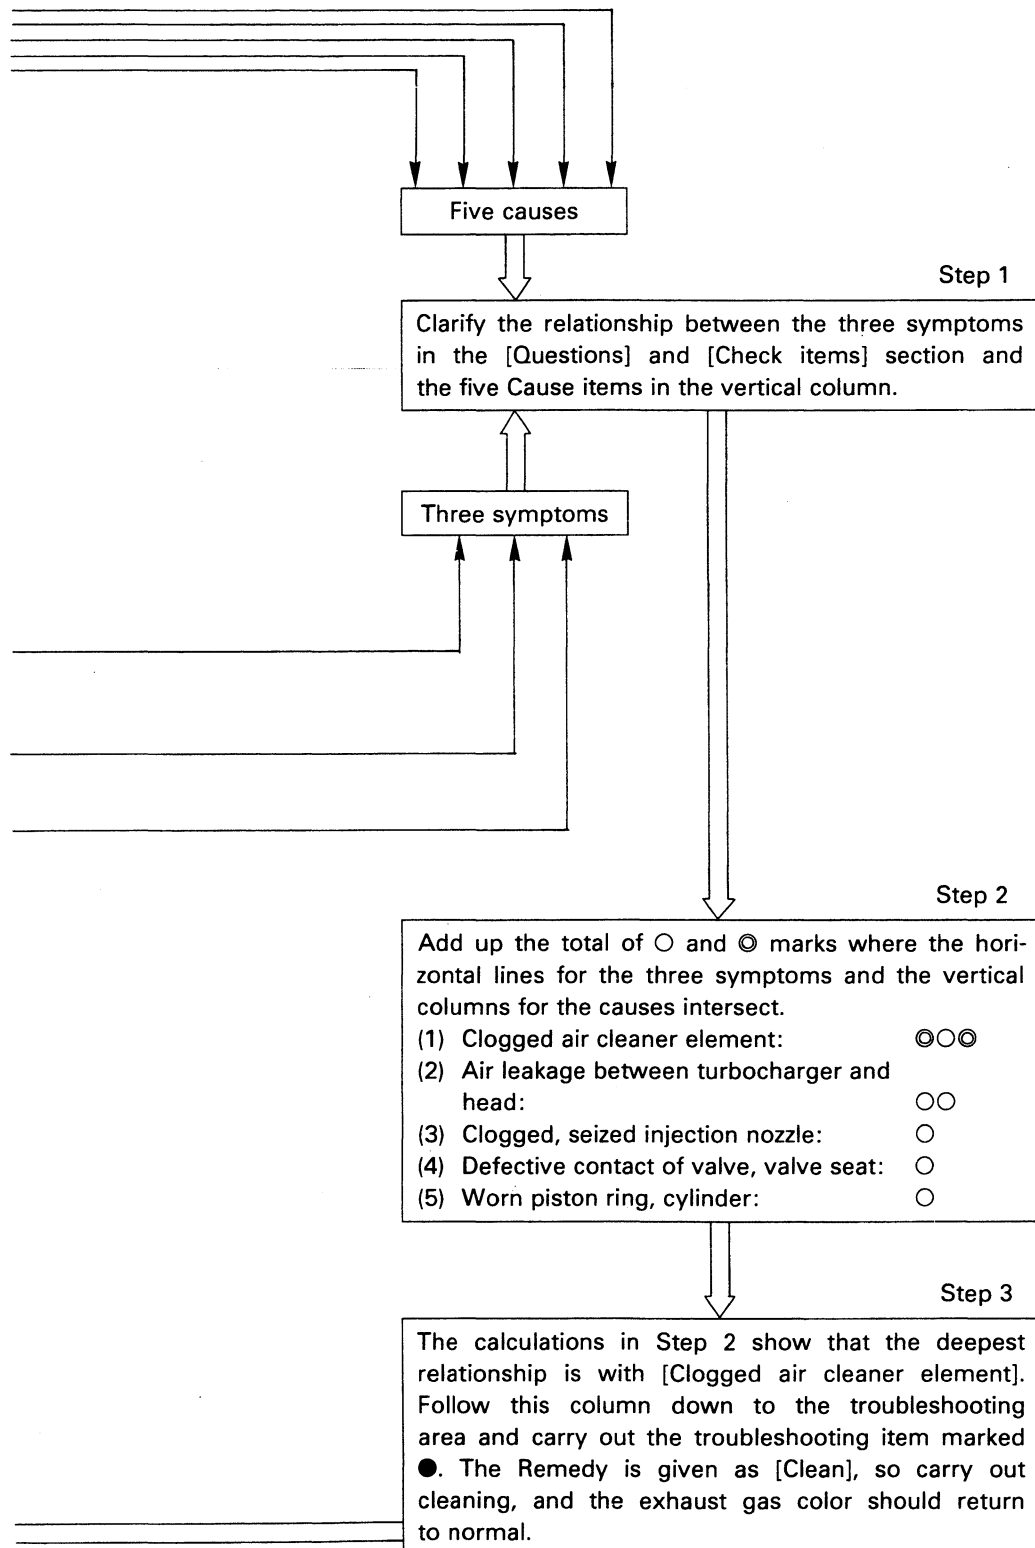

S-1 Starting performance is poor (Starting always takes time)

- ★ Check that there is no abnormality display for the engine throttle controller on the monitor panel.

General causes why starting performance is poor

- Defective electrical system
 - Insufficient supply of fuel
 - Insufficient intake of air
 - Improper selection of fuel
- (At ambient temperature of – 10°C or below, use ASTM D975 No. 1, and – 10°C or above, use ASTM D975 No.2 diesel fuel.)

- ★ Charging rate of battery.

Charging rate Ambient temperature	100%	90%	80%	75%	70%
20°C	1.28	1.26	1.24	1.23	1.22
0°C	1.29	1.27	1.25	1.24	1.23
-10°C	1.30	1.28	1.26	1.25	1.24

- The specific gravity should be for the charging rate of 70% or more in the above table.
- In cold weather the specific gravity must be for the charging rate of at least 75% in the above table.

No.2 diesel fuel.)

ing rate of battery.

Charging rate	100%	90%	80%	75%	70%
0°C	1.28	1.26	1.24	1.23	1.22
0°C	1.29	1.27	1.25	1.24	1.23
0°C	1.30	1.28	1.26	1.25	1.24

ific gravity should be for the charging rate of 70% or more in
e table.

Whether the specific gravity must be for the charging rate of at
in the above table.

Causes											
Worn piston ring, cylinder											
Defective contact of valve, valve seat											
Clogged air cleaner element											
Clogged fuel filter, strainer											
Clogged feed pump pre-filter											
Intake heater (ribbon heater type)											
Defective regulator											
Defective alternator											
Defective or deteriorated battery											
Defective injection nozzle											
Defective injection timing											
Defective injection pump (rack, plunger stuck)											
Leakage, clogging, air in fuel system											
Clogged fuel tank air breather hole											

Ambient temperature	Check items													
	Confirm recent repair history													
	Degree of use	Operated for long period				△	△	△			△			
	Ease of starting	Gradually became worse				○	○	○						
		Starts when warm												
	Indicator lamp does not light up													
	Engine oil must be added more frequently													
	Replacement of filters has not been carried out according to operation manual										○		○	
	Air cleaner clogging lamp lights up													
	Non-specified fuel has been used						○	○			○		○	
Check items	Battery charge lamp is ON													
	Starting motor cranks engine slowly													
	When exhaust manifold is touched immediately after starting engine, temperature of some cylinders is low													
	Engine does not pick up smoothly, and combustion is irregular					○	○							
	Blow-by gas is excessive													
	Match marks on fuel injection pump are out of alignment													
	Mud is stuck to fuel tank cap													○
	When engine is cranked with starting motor, 1) Little fuel comes out even when injection pump sleeve nut is loosened													
	2) Little fuel comes out even when fuel filter air bleed plug is loosened													
	Leakage from fuel piping												○	
Troubleshooting	When compression pressure is measured, it is found to be low					●	●							
	When air element is inspected directly, it is found to be clogged						●							
	When fuel filter, strainer are inspected directly, they are found to be clogged							●					●	
	When feed pump pre-filter is inspected directly, it is found to be clogged								●					
	Heater mount does not become warm													
	Voltage is 26 — 30V between alternator terminal B and terminal E with engine at low idling	Yes							●					
		No								●				
	Either specific gravity of electrolyte or voltage of battery is low										●			
	Speed of some cylinders does not change when operating on reduced cylinders											●		
	When check is made using delivery method, injection timing is found to be incorrect												●	
Remedy	When control rack is pushed, it is found to be heavy or does not return (when blind plug at rear of pump is removed, it can be seen that plunger control sleeve does not move)												●	
	When fuel cap is inspected directly, it is found to be clogged													●
	Replace													
	Repair													
	Clean													
	Clean													
	Clean													
	Replace													
	Replace													
	Replace													
Remedy	Adjust													
	Replace													
	Replace													
	Repair													
	Clean													
	Clean													
	Clean													
	Clean													
	Clean													
	Clean													

S-2 Engine does not start

① Engine does not turn

General causes why engine does not turn

- Internal parts of engine seized
 - ★ If internal parts of the engine are seized, carry out troubleshooting for "Engine stops during operations".
- Failure in power train
- Defective electrical system

			Causes							
			Defective wiring of starting circuit Defective or deteriorated battery Defective starting motor Broken ring gear Defective safety relay or safety switch Defective battery relay Defective battery terminal connection Defective starting switch							
Questions	Confirm recent repair history									
	Degree of use	Operated for long period		△		△				
	Condition of horn when starting switch is turned ON	Horn does not sound	○						○	○
		Horn sound level is low		☆						
	When starting switch is turned to START, pinion moves out, but	Rotating speed is slow		☆						
		Makes grating noise			☆	☆				
		Soon disengages again				☆				
		Makes rattling noise and does not turn		○	○		○			
	When starting switch is turned to START, pinion does not move out		☆	○						○
	When starting switch is turned to ON, there is no clicking sound			○				☆		
Check items	Battery terminal is loose		Carry out troubleshooting for defective wiring of starting circuit							
	When battery is checked, battery electrolyte is found to be low			○						
Troubleshooting	Specific gravity of electrolyte, voltage of battery is low		Carry out troubleshooting for defective wiring of starting circuit	●						
	For the following conditions 1) -- 5), turn the starting switch OFF, connect the cord, and carry out troubleshooting at ON									●
	1) When terminal B and terminal C of starting switch are connected, engine starts									
	2) When terminal B and terminal C of starting motor are connected, engine starts				●					
	3) When terminal B and terminal C of safety relay are connected, engine starts						●			
	4) When terminal of safety switch and terminal B of starting motor are connected, engine starts						●			
	5) There is no 24V voltage between terminal b and terminal E of battery relay							●		
When ring gear is inspected directly, tooth surface is found to be chipped				●						
Remedy			—	Replace	Replace	Replace	Replace	Replace	Replace	Replace

K20506

② Engine turns but no exhaust gas comes out (Fuel is not being injected)

- ★ Check that there is no abnormality display for the engine throttle controller system on the monitor panel.

General causes why engine turns but no exhaust gas comes out

- Supply of fuel impossible
- Supply of fuel is extremely small
- Improper selection of fuel (particularly in winter)

Standards for use of fuel

Type of fuel	Ambient temperature					
	-20	-10	0	10	20	30°C
Diesel fuel			ASTM D975 No. 2			
	No. 1					

Causes

Broken injection pump drive shaft, key	Defective injection pump (rack, plunger seized)	Seized, broken feed pump lever/diaphragm	Clogged fuel filter, pre-filter	Clogged feed pump pre-filter	Clogged, leaking fuel piping	Clogged fuel tank air breather hole	Improper fuel used
--	---	--	---------------------------------	------------------------------	------------------------------	-------------------------------------	--------------------

Questions	Confirm recent history								
	Degree of use	Operated for long period			△	△		△	
	Exhaust gas suddenly (when starting again) stops coming out	⊙	⊙	⊙					
	Replacement of filters has not been carried out according to operation manual				⊙	⊙			
	There is leakage from fuel piping					⊙			
	Mud is stuck to fuel tank cap						⊙		
	When starting switch is turned ON, linkage does not move								
	When fuel filter is drained, fuel does not come out							⊙	
	When engine is cranked with starting motor,								
	1) injection pump coupling does not rotate	⊙							
Check items	2) No fuel comes out even when fuel filter air bleed plug is loosened	⊙			○	○			○
	3) No fuel spurts out even when injection pipe sleeve nut is loosened	⊙	⊙	⊙					
	Rust and water are found when fuel is drained				○	○			

Troubleshooting	Check injection pump directly	●							
	When control rack is pushed, it is found to be heavy or does not return		●						
	Check feed pump directly			●					
	When fuel filter, strainer are inspected directly, they are found to be clogged				●				●
	When feed pump strainer is inspected directly, it is found to be clogged					●			
	When fuel cap is inspected directly, it is found to be clogged						●		
Remedy		Replace	Replace	Replace	Clean	Clean	Repair	Repair	Replace

K20506

③ Exhaust gas comes out but engine does not start
(Fuel is being injected)

General causes why exhaust gas comes out but engine does not start

- Lack of rotating force due to defective electrical system
- Insufficient supply of fuel
- Insufficient intake of air
- Improper selection of fuel

Causes										
Defective, broken valve system (valve, rocker lever, etc.)										
Defective injection pump (rack, plunger stuck)										
Piston ring, cylinder										
Clogged fuel filter, pre-filter										
Clogged feed pump pre-filter										
Clogged air cleaner element										
Intake heater (ribbon heater type)										
Defective or deteriorated battery										
Leakage clogging, air in fuel system										
Clogged injection nozzle, defective spray										
Clogged fuel tank air breather hole										
Improper fuel used										

Questions	Confirm recent repair history																			
	Degree of use	Operated for long period																		
	Suddenly failed to start																			
	When engine is cranked, abnormal noise is heard from around head																			
	Engine oil must be added more frequently																			
	Non-specified fuel has been used																			
	Replacement of filters has not been carried out according to operation manual																			
	Rust is found when fuel is drained																			
	Air cleaner clogging lamp lights up																			
	Indicator lamp does not light up																			
	Starting motor cranks engine slowly																			
	Mud is stuck to fuel tank cap																			
	When fuel lever is placed at FULL position, it does not contact stopper																			
	When engine is cranked with starting motor, 1) Little fuel comes out even when injection pump sleeve nut is loosened 2) Little fuel comes out even when fuel filter air bleed plug is loosened																			
Check items	There is leakage from fuel piping																			
	When exhaust manifold is touched immediately after starting engine, temperature of some cylinder is low																			
	When fuel filter is drained, no fuel comes out																			

Troubleshooting	Remove head cover and check directly																			
	When control rack is pushed, it is found to be heavy or does not return																			
	When compression pressure is measured, it is found to be low																			
	When fuel filter, pre-filter are inspected directly, they are found to be clogged																			
	When feed pump pre-filter is inspected directly, it is found to be clogged																			
	When air element is inspected directly, it is found to be clogged																			
	Heater mount does not become warm																			
	Either specific gravity of electrolyte or voltage of battery is low																			
	When feed pump is operated, there is no response or pump is heavy																			
	Speed of some cylinders does not change when operating on reduced cylinders																			
	When fuel cap is inspected directly, it is found to be clogged																			
Remedy		Replace	Replace	Replace	Clean	Clean	Clean	Replace	Replace	Repair	Clean	Clean								

S-3 Engine does not pick up smoothly (Follow-up is poor)

- ★ Check that there is no abnormality display for the engine throttle controller system on the monitor panel.

General causes why engine does not pick up smoothly

- Insufficient intake of air
- Insufficient supply of fuel
- Improper condition of fuel injection.
- Use of improper fuel

panel.

General causes why engine does not pick up smoothly

- Insufficient intake of air
- Insufficient supply of fuel
- Improper condition of fuel injection.
- Use of improper fuel

			Causes											
			Clogged air cleaner element	Clogged fuel filter, pre-filter	Clogged feed pump pre-filter	Clogged injection nozzle, defective spray	Seized injection pump plunger	Worn piston ring, cylinder	Seized turbocharger, interference	Improper valve clearance	Clogged fuel tank air breather hole	Defective contact of valve, valve seat		
Questions	Confirm recent repair history													
	Degree of use	Operated for long period	△	△	△		△						△	
	Replacement of filters has not been carried out according to operation manual		⊙	⊙	⊙									
	Non-specified fuel has been used			⊙	⊙	⊙	⊙							
	Engine oil must be added more frequently						⊙							
	Rust and water are found when fuel is drained			⊙	⊙									
	Dust indicator is red		⊙											
	Noise of interference is heard from around turbocharger							⊙						
	Engine pick-up suddenly became poor					○		⊙		○	○			
	Color of exhaust gas	Blue under light load					⊙							
		Black	⊙		⊙			⊙					○	
	Clanging sound is heard from around cylinder head								⊙					
	Mud is stuck to fuel tank cap									⊙				
	There is leakage from fuel piping											⊙		
Check items	High idling speed under no load is normal, but speed suddenly drops when load is applied			⊙	⊙					○				
	There is hunting from engine (rotation is irregular)			○	⊙	○				○				
	When exhaust manifold is touched immediately after starting engine, temperature of some cylinders is low				⊙	○								
	Blow-by gas is excessive						⊙							
Troubleshooting	When air element is inspected directly, it is found to be clogged		●											
	When fuel filter, pre-filter are inspected directly, they are found to be clogged			●										
	When feed pump pre-filter is inspected directly, it is found to be clogged				●									
	Speed of some cylinders does not change when operating on reduced cylinders					●								
	When control rack is pushed, it is found to be heavy or does not return						●							
	When compression pressure is measured, it is found to be low							●					●	
	When turbocharger is rotated by hand, it is found to be heavy								●					
	When valve clearance is checked directly, it is found to be outside standard value									●				
	When fuel cap is inspected directly, it is found to be clogged										●			
	When feed pump is operated, operation is too light or too heavy											●		
			Remedy	Clean	Clean	Clean	Repair	Replace	Replace	Replace	Adjust	Clean	Repair	Replace

K20506

S-4 Engine stops during operations

- ★ Check that the display for the fuel level on the monitor panel indicates that there is still fuel left.

General causes why engine stops during operations

- Seized parts inside engine
- Insufficient supply of fuel
- Overheating
 - ★ If there is overheating and insufficient output, carry out troubleshooting for overheating.
- Failure in power train
 - ★ If the engine stops because of a failure in the power train, carry out troubleshooting for the chassis.

carry out troubleshooting for overheating.															
Failure in power train															
★ If the engine stops because of a failure in the power train, carry out troubleshooting for the chassis.															
			Causes												
			Broken, seized piston, connecting rod												
			Broken, seized crankshaft bearing												
			Broken valve system (valve, rocker lever, etc.)												
			Broken, seized gear train												
			Broken fuel pump drive shaft, key												
			Clogged fuel filter, pre-filter												
			Broken, seized feed pump pre-filter												
			Clogged, leaking feed pump lever/diaphragm												
			Clogged fuel tank air breather hole												
			Defective injection pump (rack, plunger stuck)												
			Failure in main pump												
Questions	Confirm recent repair history														
	Degree of use	Operated for long period							△	△					
	Condition when engine stopped	Abnormal noise was heard and engine stops suddenly	⊙	⊙	⊙	⊙	⊙				○			○	⊙
		Engine overheated and stopped	⊙	○											
		Engine stopped slowly							○	○					
		There was hunting and engine stopped							○	○			○		
	Replacement of filters has not been carried out according to operation manual								⊙	⊙					
	Non-specified fuel has been used								○	○	○			○	
	When feed pump is operated, there is no response or it is heavy								○	○		⊙			
	Mud is stuck to fuel tank cap												⊙		
Check items	Try to turn by hand using bar ring tool	Does not turn at all	⊙	⊙											
		Turns in opposite direction			⊙										
		Moves amount of backlash				⊙									
		Shaft does not turn					⊙								
	Rust and water are found when fuel is drained								⊙	⊙					
	Metal particles are found when oil is drained		⊙	⊙					○	○					
	Troubleshooting	Remove oil pan and check directly		●	●										
Remove head cover and check directly				●											
When gear train is inspected, it does not turn					●										
When fuel filter, pre-filter are inspected directly, they are found to be clogged								●							
When feed pump pre-filter is inspected directly, it is found to be clogged									●						
Check feed pump directly										●					
When control rack is pushed, it is found to be heavy or does not return												●			
		Go to troubleshooting for hydraulic, mechanical system													
		Remedy	Replace	Replace	Replace	Replace	Replace	Clean	Clean	Replace	Repair	Clean	Replace	—	

K20506

S-5 Engine does not rotate smoothly

- ★ Check that there is no abnormality display for engine throttle controller system on the monitor panel.

General causes why engine does not rotate smoothly (hunting)

- Air in fuel system
 - Defective governor mechanism
 - Defective electrically controlled throttle mechanism (electrically controlled throttle type)
- ★ If there is no hunting when the electrically controlled throttle rod is disconnected, carry out troubleshooting for the electrical system.

			Defective operation of governor Defective adjustment of governor Defective operation of control rack Low speed is too low Clogged feed pump pre-filter Clogged fuel filter, pre-filter Clogged, air in circuit between fuel tank and feed pump Clogged, air in circuit between feed pump and nozzle Clogged fuel tank air breather hole										
Questions	Confirm recent repair history												
	Degree of use	Operated for long period						△	△				
	Condition of hunting	Occurs at fixed speed range	☉	☉	☉	○							
		Occurs at low idling	○			☉	○	○	○	○			
		Occurs even when speed is raised	○	○	○							○	
		Occurs on slopes											
	Replacement of filters has not been carried out according to operation manual							☉	☉				
	Rust is found when fuel is drained							○	○				
	Leakage from fuel piping									☉	☉		
	When feed pump is operated, 1) No response, light, return is quick 2) No response, light, return is normal									☉	☉		
Check items	Engine speed sometimes rises too high		☉	☉									
	Sometimes is difficult to stop engine		☉		☉								
	Seal on injection pump has come off			☉		☉							
Troubleshooting	When governor lever is moved it is found to be stiff		●		●								
	When injection pump is tested, governor is found to be improperly adjusted			●									
	When control rack is pushed, it is found to be heavy or does not return				●								
	When fuel cap is inspected directly, it is found to be clogged					●						●	
	When feed pump pre-filter is inspected directly, it is found to be clogged						●						
	When fuel filter, pre-filter are inspected directly, they are found to be clogged							●					
			Remedy	Adjust	Adjust	Adjust	Adjust	Claen	Clean	Repair	Repair	Clean	

K20506

S-6 Engine lacks output (no power)

- ★ Check that there is no abnormality display for the engine throttle controller system on the monitor panel.

General causes why engine lacks output

- Insufficient intake of air
 - Insufficient supply of fuel
 - Improper condition of fuel injection
 - Use of improper fuel
(if non-specified fuel is used, output drops)
 - Lack of output due to overheating
- ★ If there is overheating and insufficient output, carry out troubleshooting for overheating.

Causes												
Clogged air cleaner element	Seized turbocharger, interference	Worn piston ring, cylinder	Clogged fuel filter	Clogged feed pump pre-filter	Clogged injection nozzle, defective spray	Seized injection pump plunger	Improper valve clearance	Defective contact of valve, valve seat	Bent fuel lever linkage, defective adjustment	Clogged, leaking fuel piping	Clogged fuel tank air breather hole	

Questions	Confirm recent repair history											
	Degree of use	Operated for long period	△		△	△	△			△		
	Power was lost	Suddenly		◎								
		Gradually	○		○	○	○		○			
	Engine oil must be added more frequently				◎							
	Replacement of filters has not been carried out according to operation manual		◎			◎	◎					
	Non-specified fuel has been used					◎	◎	◎	◎			
	Air cleaner clogging lamp lights up		◎									
	Color of exhaust gas	Black	◎	◎								
		Blue under light load			◎							
	Noise of interference is heard from around turbocharger			◎								
	Blow-by gas is excessive				◎							
	Engine pickup is poor and combustion is irregular			◎			○			○	○	
	High idling speed under no load is normal, but speed suddenly drops when load is applied					◎	◎				○	
Check items	When exhaust manifold is touched immediately after starting engine, temperature of some cylinders is low						◎	○				
	There is hunting from engine (rotation is irregular)					○	○			○	○	
	Clanging sound is heard from around cylinder head							◎				
	High idling speed of engine is low							○		◎		
	Leakage from fuel piping									◎		

Troubleshooting	When air element is inspected directly, it is found to be clogged	●										
	When turbocharger is rotated by hand, it is found to be heavy		●									
	When compression pressure is measured, it is found to be low			●					●			
	When fuel filter, pre-filter are inspected directly, they are found to be clogged				●							
	When feed pump pre-filter is inspected directly, it is found to be clogged					●						
	Speed of some cylinders does not change when operating on reduced cylinders						●					
	When control rack is pushed, it is found to be heavy or does not return							●				
	When valve clearance is checked directly, it is found to be outside standard value								●			
	When lever is placed at FULL position, it does not contact stopper									●		
	When feed pump is operated, operation is too light or too heavy										●	
	When fuel cap is inspected directly, it is found to be clogged											●
Remedy		Clean	Replace	Replace	Clean	Clean	Repair	Replace	Adjust	Replace	Adjust	Repair

S-7 Exhaust gas is black (incomplete combustion)

General causes why exhaust gas is black

- Insufficient intake of air
- Improper condition of fuel injection
- Excessive injection of fuel

Excessive injection of fuel			Causes											
			Sized turbocharger, interference Clogged air cleaner element Worn piston ring, cylinder Clogged, seized injection nozzle Improper injection timing Defective injection pump Improper valve clearance Crushed, clogged muffler Leakage of air between turbocharger and head Defective contact of valve, valve seat Defective injection pump (rack, plunger seized)											
Questions	Confirm recent repair history													
	Degree of use	Operated for long period		△	△	△							△	
	Color of exhaust gas	Suddenly became black	◎			○								○
		Gradually became black	◎			○						○		
		Blue under light load			◎									
	Engine oil must be added more frequently				◎									
	Power was lost	Suddenly	◎			○					○			○
		Gradually		○	○							○	○	
	Non-specified fuel has been used					○								○
	Noise of interference is heard from around turbocharger		◎											
Check items	Air cleaner clogging lamp lights up			◎										
	Blow-by gas is excessive				◎									
	Engine pickup is poor and combustion is irregular		○			◎			○	○	○		○	
	When exhaust manifold is touched immediately after starting engine, temperature of some cylinders is low					◎							○	
	Match marks on fuel injection pump are out of alignment						◎							
	Seal on injection pump has come off							◎						
	Clanging sound is heard from around cylinder head									◎				
	Exhaust noise is abnormal		○			○					◎			
	Muffler is crushed										◎			
	Leakage of air between trubocharger and head, loose clamp											◎		
Troubleshooting	When turbocharger is rotated by hand, it is found to be heavy		●											
	When air cleaner is inspected directly, it is found to be clogged			●										
	When compression pressure is measured, it is found to be low				●								●	
	Speed of some cylinders does not change when operating on reduced cylinders					●								
	When check is made using delivery method, injection timing is found to be incorrect						●							
	Injection pump test shows that injection amount is incorrect							●						
	When valve clearance is checked directly it is found to be outside standard value								●					
	When muffler is removed, exhaust gas color returns to normal									●				
	When control rack is pushed, it is found to be heavy or does not return													●
		Remedy	Replace	Clean	Replace	Replace	Adjust	Adjust	Adjust	Replace	Repair	Replace	Replace	

K20506

S-8 Oil consumption is excessive (or exhaust gas is blue)

- ★ Do not run the engine at idling for more than 20 minutes continuously. (Both low and high idling)

General causes why oil consumption is excessive

- Abnormal combustion of oil
- External leakage of oil
- Wear of lubrication system

[illegible]

S-9 Oil becomes contaminated quickly

General causes why oil becomes contaminated quickly

- Intake of exhaust gas due to internal wear
- Clogging of lubrication passage
- Improper combustion
- Use of improper oil
- Operation under excessive load

			Causes									
			Worn piston ring, cylinder Clogged breather, breather tube Clogged oil filter Worn valve, valve guide Clogged oil cooler Clogged turbocharger drain pipe Defective seal at turbocharger turbine end Defective safety valve Exhaust gas is black									
Questions	Confirm recent repair history											
	Degree of use	Operated for long period	△			△			△			
	Engine oil must be added more frequently		○									
	Non-specified fuel has been used				○							
	Color of exhaust gas	Blue under light load	○									
		Black									◎	
	Amount of blow-by gas	Abnormally excessive	◎			○		○	○			
		None		◎								
	Oil filter caution lamp stays on even when oil pressure rises					○					○	
	When oil filter is inspected, metal particles are found		○		◎	○						
Check items	When exhaust pipe is removed, inside is found to be dirty with oil					○						
	Engine oil temperature rises quickly						◎					
	When compression pressure is measured, it is found to be low		●			●						
	When breather element is inspected directly, it is found to be clogged with dirty oil, or hose is broken			●								
	When oil filter is inspected directly, it is found to be clogged				●							
	When oil cooler is inspected directly, it is found to be clogged					●						
	Turbocharger drain tube is clogged							●				
	Excessive play of turbocharger shaft								●			
Troubleshooting	When safety valve is directly inspected, spring is found to be catching or broken									●		
			Carry out troubleshooting for "Exhaust is black".									
			Remedy	Replace	Clean	Replace	Replace	Clean	Clean	Replace	Replace	—

K20506

S-10 Fuel consumption is excessive

General causes why fuel consumption is excessive

- Leakage of fuel
- Improper condition of fuel injection
- Excessive injection of fuel

K20506

			Causes								
Questions	Confirm recent repair history										
	Degree of use	Operated for long period		△	△				△		
	Condition of fuel consumption	More than for other machines of same model				○					
		Gradually increased		○	○						
Suddenly increased						○	○				
Check items	Exhaust gas color	Black	●	○		○				○	
		White						○			
	Seal on injection pump has come off		●								
	There is irregular combustion			●							
	When exhaust manifold is touched immediately after starting engine, temperature of some cylinders is low			●	○						
	Match mark on injection pump is misaligned					●					
	There is external leakage of fuel from engine						●				
	Engine oil level rises and smells of diesel fuel		○								
	Engine low idling speed is high		○							●	
	Troubleshooting	Injection pump test shows that injection amount is incorrect		●							
		Speed of some cylinders does not change when operating on reduced cylinders			●						
		When control rack is pushed, it is found to be heavy or does not return				●					
When check is made using delivery method, injection timing is found to be incorrect					●						
Remove head cover and check directly							●				
Remove feed pump and check directly								●			
When engine speed is measured, low idling speed is found to be high									●		
Remedy		Adjust	Replace	Replace	Adjust	Repair	Repair	Repair	Adjust		

S-11 Oil is in cooling water, or water spurts back, or water level goes down

General causes why oil is in cooling water

- Internal leakage in lubrication system
- Internal leakage in cooling system

			Causes						
Questions									
Check items	Confirm recent repair history								
	Degree of use	Operated for long period	△					△	
	Increase in oil level	Suddenly increased	○	○			○		
		Gradually increased							○
	Hard water is being used as cooling water		○					○	
	Engine oil level has risen, oil is cloudy white		◎					○	○
	Excessive air bubbles inside radiator, spurts back			◎	◎				
	Hydraulic oil, torque converter transmission oil is cloudy white						◎		
When hydraulic oil, torque converter transmission oil is drained, water comes out						◎			
Trouble-shooting	Pressure-tightness test of oil cooler shows there is leakage		●				●		
	Pressure-tightness test of cylinder head shows there is leakage			●					
	Remove cylinder head and check directly				●				
	Remove oil pan and check directly							●	●
			Remedy	Replace	Replace	Replace	Replace	Replace	Replace

K20506

- ★ If engine oil level lamp on monitor panel is not lighted up.
- ★ If oil pressure sensor is normal (see item for M mode).

- Leakage, clogging, wear of lubricating system
- Defective oil pressure control
- Use of improper oil (improper viscosity)
- Deterioration of oil due to overheating
- ★ Standards for engine oil selection

Causes	
Clogged oil filter	
Worn bearing journal	
Clogged strainer inside oil pan	
Clogged, broken oil pipe inside oil pan	
Broken suction pipe inside oil pan	
Defective oil pump	
Defective regulator valve	
Leaking relief valve	
Defective, crushed hydraulic piping	
Defective oil pressure sensor	
Water, fuel in oil	

20-147

S-13 Oil level rises

- ★ If there is oil in the cooling water, carry out troubleshooting for "Oil in cooling water".
- Water in oil (cloudy white)
 - Fuel in oil (diluted, and smells of diesel fuel)
 - Entry of oil from other component

			Causes										
			Broken oil cooler core, O-ring Defective nozzle holder sleeve Broken head, head gasket Clogged water pump breather hole, defective seal Worn, damaged rear seal surface Defective seal of pump Leakage of fuel from piping inside head cover Defective inside injection pump (flange type) Damaged thermostat seat Cracks inside cylinder block										
Questions	Confirm recent repair history												
	Degree of use	Operated for long period		△		△	△	△				△	
	There is oil in radiator cooling water		○	○								○	○
	Exhaust gas is white		○					○		○			
	When engine is first started, drops of water come from muffler		○										
	Leave radiator cap open. When engine is run at idling, an abnormal number of bubbles appear, or water spurts back			○							○		
	Water pump breather hole is clogged with mud				○								
	When water pump breather hole is clean, water comes out				○								
	Oil level goes down in damper chamber					○							
	Oil level goes down in hydraulic tank						○						
	Engine oil smells of diesel fuel							○	○	○	○		
	Fuel is added more frequently							○	○	○			
Troubleshooting	Pressure-tightness test of oil cooler shows there is leakage		●										
	Pressure-tightness test of cylinder head shows there is leakage			●									
	When compression pressure is measured, it is found to be low				●								
	Remove water pump and check directly					●							
	Check rear seal directly						●						
	When pump is removed, seal is found to be broken							●					
	Remove head cover and check directly								●				
	Remove injection pump and check directly									●			
	There is improper contact of thermostat seat valve										●		
	Remove oil pan and check directly											●	●
Remedy			Replace	Replace	Replace	Replace	Repair	Replace	Repair	Replace	Repair	Replace	Replace

K20506

S-14 Water temperature becomes too high (overheating)

- ★ If coolant level lamp on monitor panel is not lighted up.
- ★ If coolant temperature gauge on monitor panel is normal (see M mode).

General causes why water temperature becomes too high

- Lack of cooling water (deformation, damage of fan)
- Drop in heat dissipation efficiency
- Defective in cooling circulation system
- Rise in oil temperature of power train
- ★ Carry out troubleshooting for chassis.

Causes									
Broken water pump									
Clogged, crushed radiator fin									
Clogged radiator core									
Defective thermostat (does not open)									
Defective water temperature gauge									
Fan belt slipping, worn fan pulley									
Clogged, broken oil cooler									
Defective pressure valve									
Broken head, head gasket									
Damaged liner O-ring, holes made by pitting									
External leakage from coolant piping									

Questions	Confirm recent repair history																		
	Degree of use	Operated for long period			△	△									△	△			
	Condition of overheating	Suddenly overheated	◎					○											
		Always tends to overheat		◎	◎	○		○											
	Water temperature gauge	Rises quickly				◎													
		Does not go down from red range					◎												
	Fan belt whines under sudden load							◎											
	Cloudy white oil is floating on cooling water								◎										
	Cooling water flows out from overflow hose									◎									
	Excessive air bubbles inside radiator, water spurts back										◎								
Check items	Engine oil level has risen, oil is cloudy white							○							◎				
	There is play when fan pulley is rotated		◎																
	Radiator shroud, inside of underguard are clogged with dirt or mud			◎				◎											
	When light bulb is held behind radiator, no light passes through			◎															
	Water is leaking because of cracks in hose or loose clamps																	◎	
	Belt tension is found to be slack							◎											

Troubleshooting	Temperature difference between top and bottom radiator tanks is excessive	●																	
	Temperature difference between top and bottom radiator tanks slight		●																
	When water filler port is inspected, the core is found to be clogged			●															
	When a function test is carried out on the thermostat, it does not open even at the cracking temperature				●														
	When water temperature is measured, it is found to be normal					●													
	When oil cooler is inspected directly, it is found to be clogged						●												
	When measurement is made with radiator cap tester, set pressure is found to be low								●										
	When compression pressure is measured, it is found to be low										●								
	Remove oil pan and check directly													●					
	Remedy	Replace	Repair	Repair	Replace	Replace	Repair	Replace	Replace	Replace	Replace	Replace	Replace	Replace	Replace	Replace	Replace	Replace	—

S-15 Abnormal noise is made

- ★ Judge if the noise is an internal noise or an external noise.

General causes why abnormal noise is made

- Abnormality due to defective parts
- Abnormal combustion noise
- Air sucked in from intake system

			Causes											
			Worn piston ring, cylinder liner	Seized turbocharger, interference	Missing, seized bushing	Clogged, seized injection nozzle	Defective injection pump (rack, plunger seized)	Deformed fan, interference of fan belt	Improper adjustment of valve clearance	Broken valve system (valve, rocker lever, etc.)	Leakage of air between turbocharger and head	Defect inside muffler (dividing board out of position)		
Questions	Confirm recent repair history													
	Degree of use	Operated for long period	△											
	Condition of abnormal noise	Gradually occurred	○					○						
		Suddenly occurred		○	○					○				
	Non-specified fuel has been used					○	○							
	Engine oil must be added more frequently													
	Color of exhaust gas	Blue under light load												
		Black							○			○		
	Metal particles are found in oil filter													
	Blow-by gas is excessive													
Check items	Noise of interference is heard from around turbocharger													
	Engine pickup is poor and combustion is irregular													
	When exhaust manifold is touched immediately after starting engine, temperature of some cylinders is low						○							
	Seal on injection pump has come off						○							
	Abnormal noise is loud when accelerating engine					○	○	○	○		○			
	Clanging sound is heard from around cylinder head								○	○				
	Leakage of air between turbocharger and head, loose clamp										○			
	Vibrating noise is heard from around muffler												○	

Troubleshooting	When compression pressure is measured, it is found to be low	●												
	When turbocharger is rotated by hand, it is found to be heavy		●											
	Remove gear cover and check directly			●							●			
	Speed of some cylinders does not change when operating on reduced cylinders				●									
	When control rack is pushed, it is found to be heavy or does not return					●								
	Injection pump test shows that injection amount is incorrect						●							
	Fan is deformed, or belt is loose							●						
	When valve clearance is checked directly, it is found to be outside standard value								●					
	Remove cylinder head cover and check directly									●				
	When muffler is removed, abnormal noise disappears												●	
Remedy		Replace	Replace	Replace	Replace	Replace	Adjust	Repair	Adjust	Replace	Repair	Repair	Replace	

K20506

S-16 Vibration is excessive

- ★ If there is abnormal noise together with the vibration, carry out troubleshooting for "Abnormal noise is made".

General causes why vibration is excessive

- Defective parts (abnormal wear, breakage)
- Improper alignment
- Abnormal combustion

		Causes									
		Worn connecting rod, main bearing Worn balancer, cam bushing Worn support pilot Loose engine mounting bolts, broken cushion Broken part inside output shaft (damper) Misalignment between engine and power train Improper gear train backlash Valve system (valve, rocker lever, etc.) stuck Defective injection pump (excessive injection)									
Questions	Confirm recent repair history										
	Degree of use	Operated for long period	△	△	△	△					
	Condition of vibration	Suddenly increased				○				○	
		Gradually increased	○	○	○	○					
	Non-specified fuel has been used		○	○							
	Metal particles are found in oil filter		●	●							
	Metal particles are found when oil is drained		●	●							
	Oil pressure is low at low idling		○	○							
	Vibration occurs at mid-range speed					○	○				
	Vibration follows engine speed				○	○	○	○	○		
	Exhaust gas is black										○
	Seal on injection pump has come off										
Troubleshooting	Remove oil pan and check directly		●								
	Remove side cover and check directly			●							
	Check directly for worn support pilot, play				●						
	Check directly for loose engine mounting bolts, broken cushion					●					
	Check inside of output shaft (damper) directly						●				
	When radial runout, face runout are measured, they are found to be outside standard							●			
	Remove front cover and check directly								●		
	Remove head cover and check directly									●	
	Injection pump test shows that injection amount is incorrect										●
Remedy		Replace	Replace	Replace	Replace	Replace	Repair	Repair	Replace	Adjust	

K20506

TROUBLESHOOTING OF PUMP CONTROLLER SYSTEM (C MODE)

Points to remember when troubleshooting pump controller system	20-154
Action taken by controller when abnormality occurs and problems on machine.....	20-155
Judgement table for pump controller and hydraulic related parts	20-159
Pump controller system circuit diagram	20-160
Troubleshooting flow charts for each failure mode	
C- 1 Abnormality in pump controller power source system (swing brake is not canceled, etc.)	20-161
C- 2 [E2:32] Short circuit in front pump TVC solenoid system is displayed [E2:36] Short circuit in rear pump TVC solenoid system is displayed	20-162
C- 3 [E2:33] Disconnection in front pump TVC solenoid system is displayed [E2:37] Disconnection in rear pump TVC solenoid system is displayed	20-164
C- 4 [E2:03] Short circuit in swing brake solenoid system is displayed	20-166
C- 5 [E2:13] Disconnection in swing brake solenoid system is displayed	20-168
C- 6 [E2:02] Short circuit in LS select solenoid system is displayed [E2:04] Short circuit in pump merge-divider solenoid system is displayed [E2:05] Short circuit in 2-stage relief solenoid system is displayed [E2:06] Short circuit in travel speed solenoid system is displayed	20-170
C- 7 [E2:12] Disconnection in LS select solenoid system is displayed [E2:14] Disconnection in pump merge-divider solenoid system is displayed [E2:15] Disconnection in 2-stage relief solenoid system is displayed [E2:16] Disconnection in travel speed solenoid system is displayed	20-172
C- 8 [E2:17] Model selection input error is displayed	20-174
C- 9 [E2:18] Network response overtime error is displayed	20-175
C-10 [E2:22] Short circuit in LS control EPC solenoid system is displayed.....	20-177
C-11 [E2:23] Disconnection in LS control EPC solenoid system is displayed.....	20-178
C-12 [E2:24] Abnormality in front pump pressure sensor system is displayed [E2:25] Abnormality in rear pump pressure sensor system is displayed	20-180
C-13 [E2:26] Abnormality in pump pressure sensor power source system is displayed	20-182
C-14 [E2:27] Abnormality in engine speed sensor system is displayed	20-183
C-15 [E2:28] Abnormality in auto-deceleration output system is displayed	20-184

K20506

POINTS TO REMEMBER WHEN TROUBLESHOOTING PUMP CONTROLLER SYSTEM

1. Points to remember if abnormality returns to normal by itself

In the following cases, there is a high probability that the same problem will occur again, so it is desirable to follow up this problem carefully.

- 1) If any abnormality returns to normal by itself, or
- 2) If the connector is disconnected and the T-adapter is inserted, or if the T-adapter is removed and the connector is returned to its original position when carrying out troubleshooting of the failure, and the service code is no longer displayed, or if the monitor display returns to normal.
- 3) After completing troubleshooting, always erase the user code from memory.

2. Service code memory retention function


When displaying the service code in memory and carrying out troubleshooting, note down the content of the display, then erase the display. After trying to re-enact the problem, carry out troubleshooting according to the service code that is displayed.

(There are cases where mistaken operation or abnormalities that occur when the connector is disconnected are recorded by the memory retention function. Erasing the data in this way saves any wasted work.)

Table 1

Service code	Measurement location			Resistance value
Service code	Troubleshooting 2	Troubleshooting 3	Troubleshooting 4	
E2 : 32	Between C13 (male) (1) and (2)	Between C01 (female) (16) and (8)	Between C05 (female) (3) and (4)	10 – 22 Ω
	Between C13 (male) (2) and chassis	Between C01 (female) (8) and chassis	Between C05 (female) (4) and chassis	Min. 1 M Ω
E2 : 36	Between C04 (male) (1) and (2)	Between C01 (female) (17) and (9)	Between C05 (female) (8) and (9)	10 – 22 Ω
	Between C04 (male) (2) and chassis	Between C01 (female) (9) and chassis	Between C05 (female) (9) and chassis	Min. 1 M Ω
Troubleshooting 5:		Between C05 (male) (1) – (3), (2) – (4), (6) – (8), (7) – (9)		Max. 1 Ω


C-2 Related electric circuit diagram

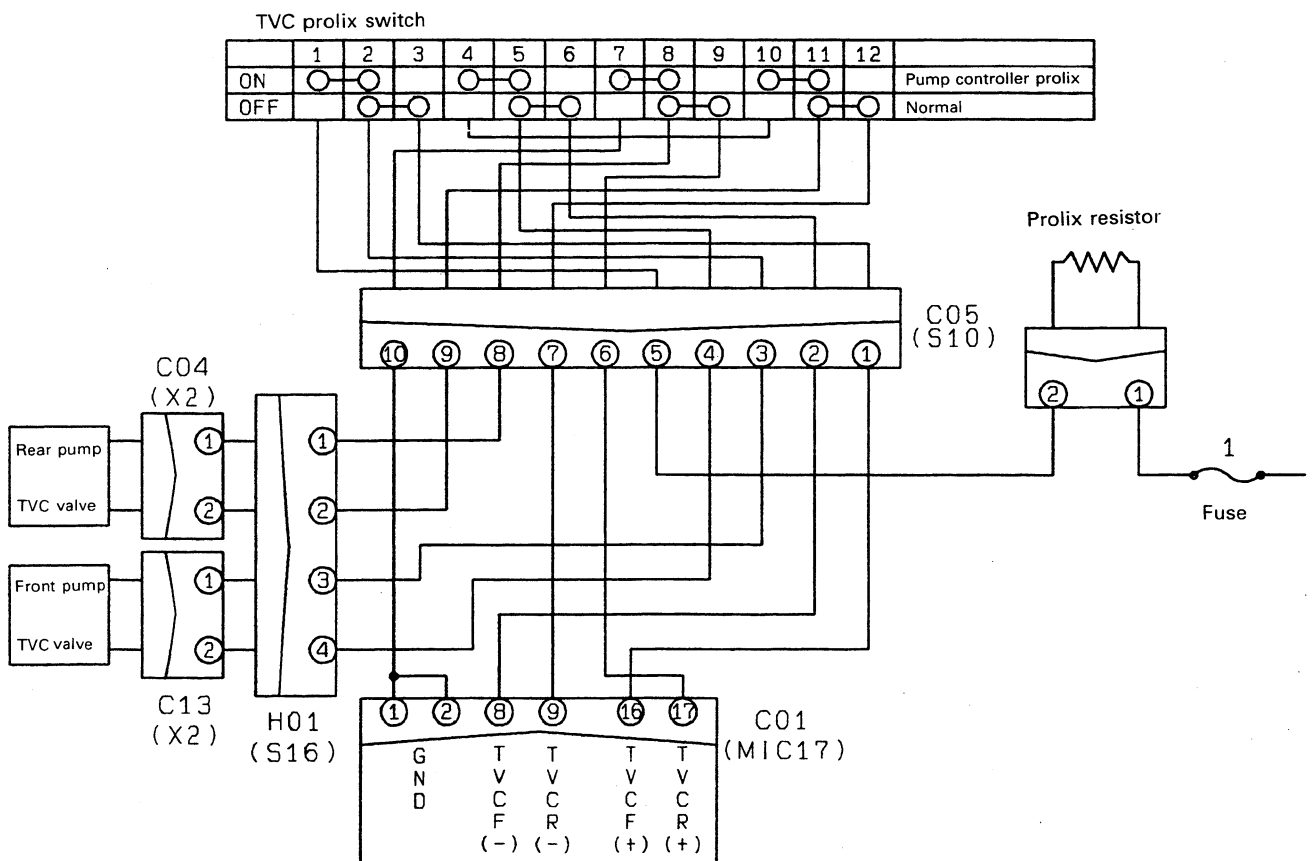

205CA06503

Service code	Measurement location			Resistance value
Service code	Troubleshooting 2	Troubleshooting 3	Troubleshooting 4	
E2 : 33	Between C13 (male) (1) and (2)	Between C01 (female) (16) and (8)	Between C05 (female) (3) and (4)	10 – 22 Ω
	Between C13 (male) (2) and chassis	Between C01 (female) (8) and chassis	Between C05 (female) (4) and chassis	Min. 1 MΩ
E2 : 37	Between C04 (male) (1) and (2)	Between C01 (female) (17) and (9)	Between C05 (female) (8) and (9)	10 – 22 Ω
	Between C04 (male) (2) and chassis	Between C01 (female) (9) and chassis	Between C05 (female) (9) and chassis	Min. 1 MΩ
Trobleshooting 5:		Between C05 (male) (1) – (3), (2) – (4), (6) – (8), (7) – (9)		Max. 1 Ω

K20506

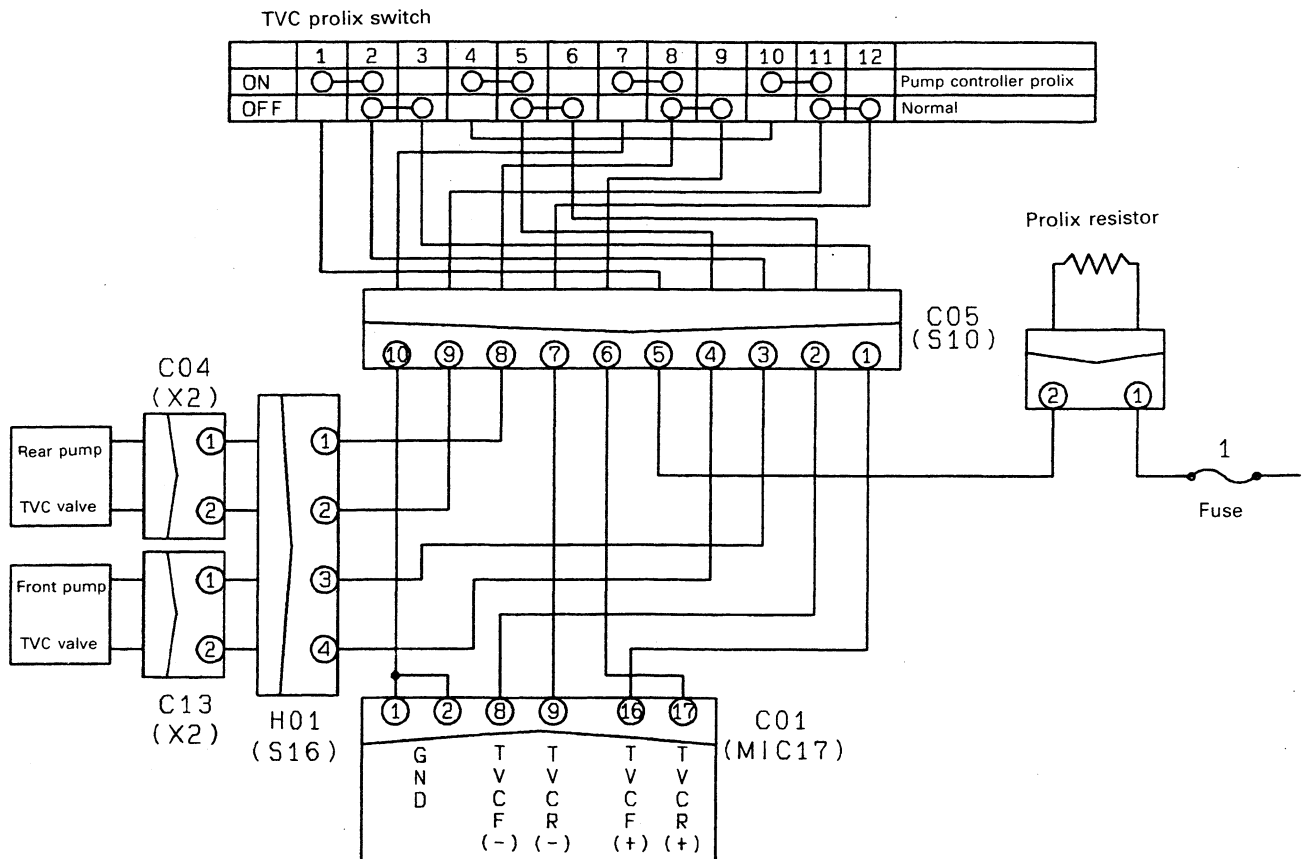

20-165

C-4 [E2:03] Short circuit in swing brake solenoid system is displayed

- ★ This troubleshooting is carried out when there is still an abnormality, so when disconnecting the connector and inserting the T-adapter, or when removing the T-adapter and returning the connector to its original position, if the service code is not displayed, the problem has been removed.
- ★ If the starting switch is turned OFF after an abnormality occurs, start the engine, operate the swing, and check if E2:03 is displayed. (If it is not displayed, the problem has been removed.)
- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.
- ★ Always turn the swing lock prox switch OFF, then turn the swing lock switch OFF before checking.


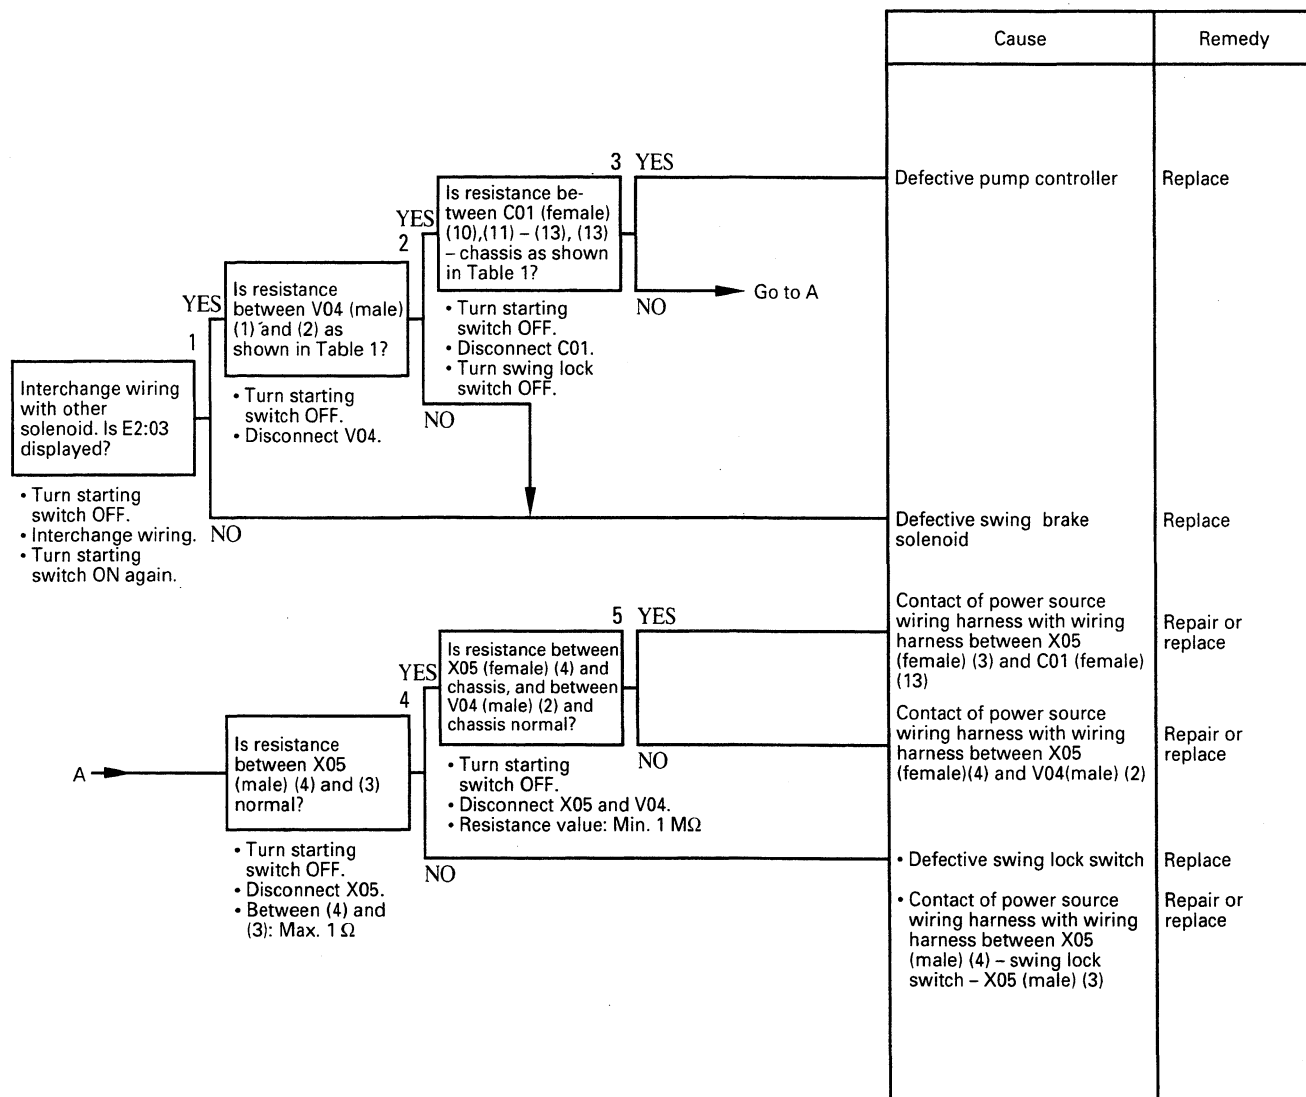


Table 1

V04 (male)	C01 (female)	Resistance value
Between (1) and (2)	Between (10)(11) and (13)	20 - 60 Ω
Between (2) and chassis	Between (13) and chassis	Min. 1 MΩ

C-4 Related electric circuit diagram

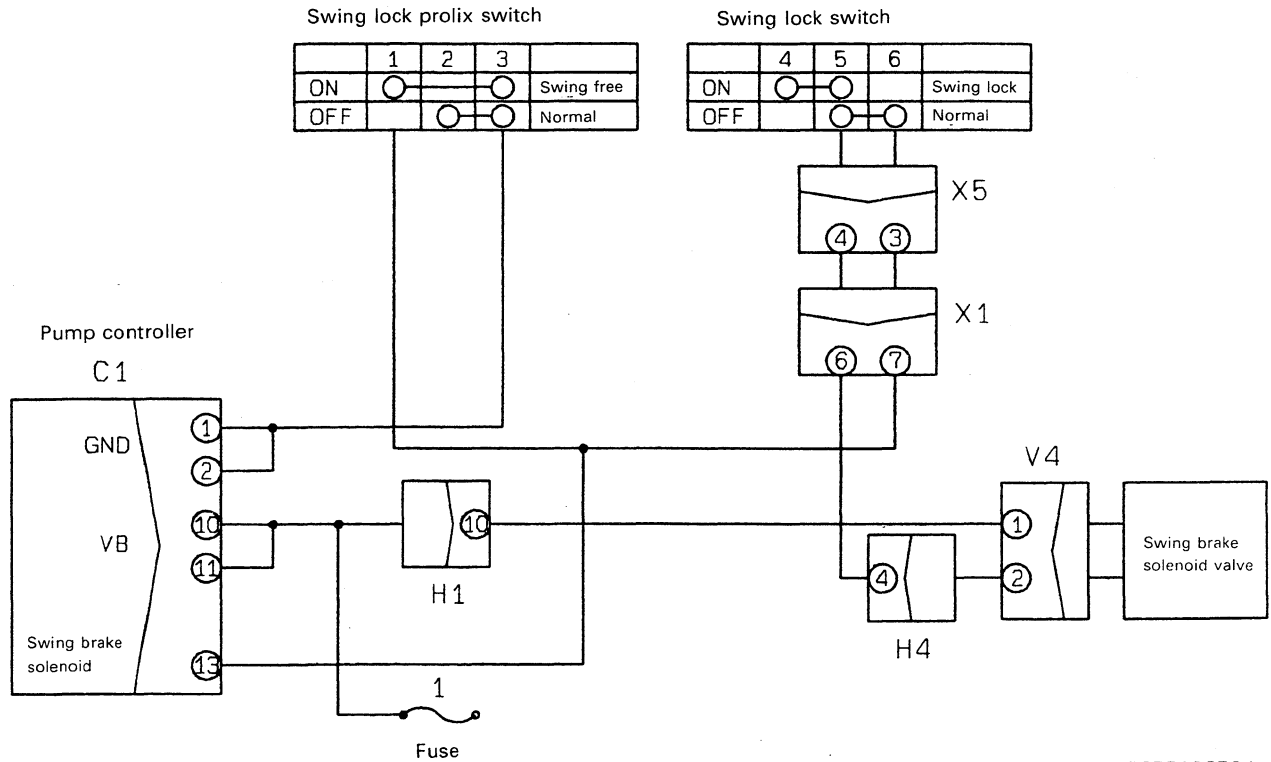


205CA06504

K20506


C-5 [E2:13] Disconnection in swing brake solenoid system is displayed

- ★ This troubleshooting is carried out when there is still an abnormality, so when disconnecting the connector and inserting the T-adapter, or when removing the T-adapter and returning the connector to its original position, if the service code is not displayed, the problem has been removed.
- ★ If there is a disconnection in the solenoid or wiring harness, the solenoid is not actuated.
If the No. 2 pin of the solenoid is short circuiting with the ground, the solenoid continues to be actuated.
- ★ If the starting switch is turned OFF after an abnormality occurs, start the engine, operate the swing lever slightly (not enough to move the swing), and check if E2:13 is displayed. (If it is not displayed, the problem has been removed.)
- ★ Always turn the swing lock prolix switch OFF, then turn the swing lock switch OFF before checking.
- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.
- ★ Check that fuse 1 is normal.

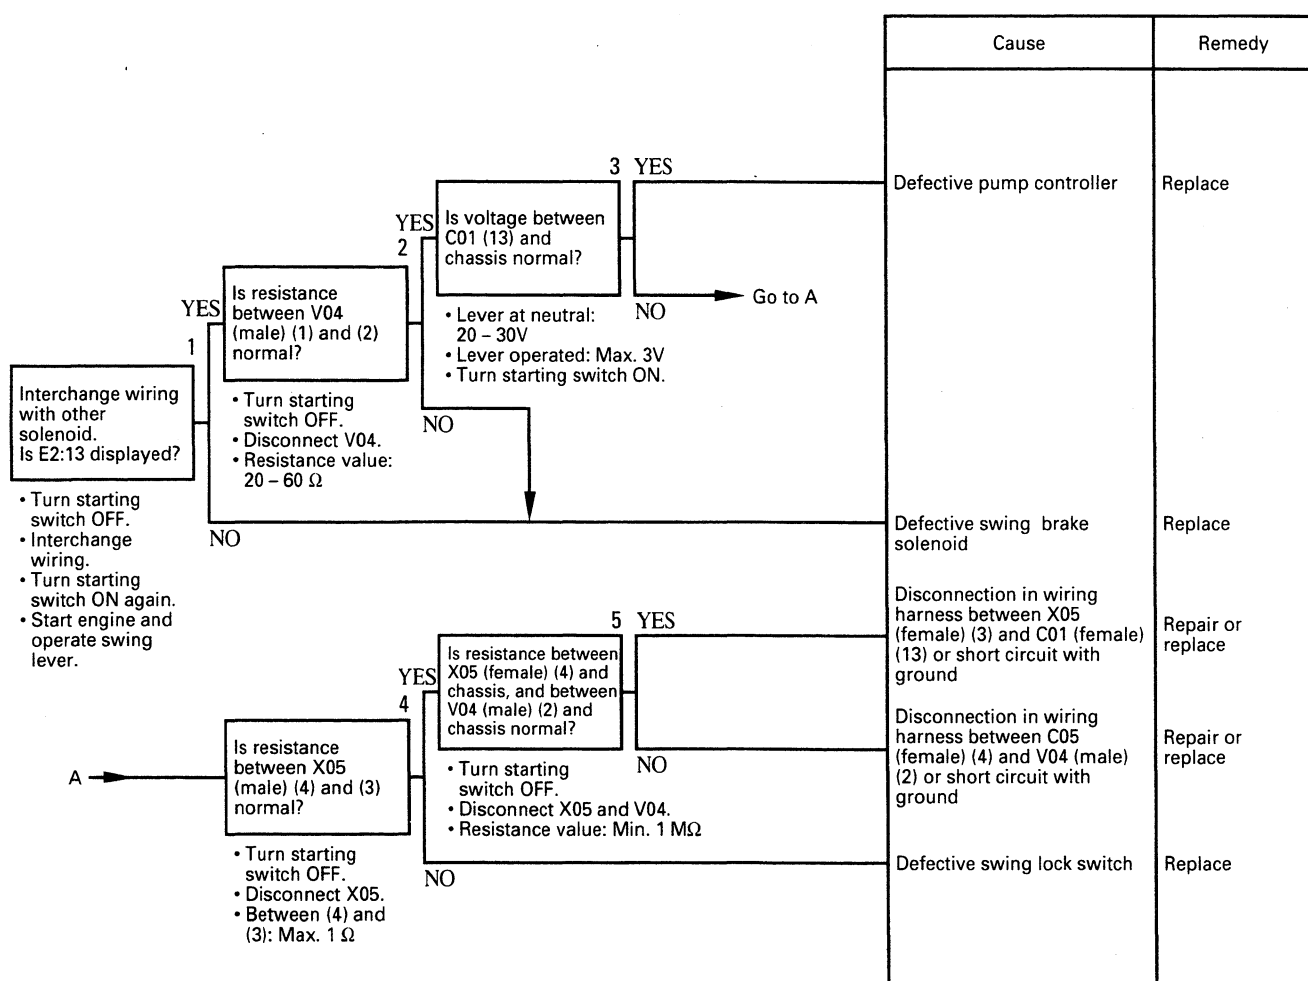

K20506

C-5 Related electric circuit diagram

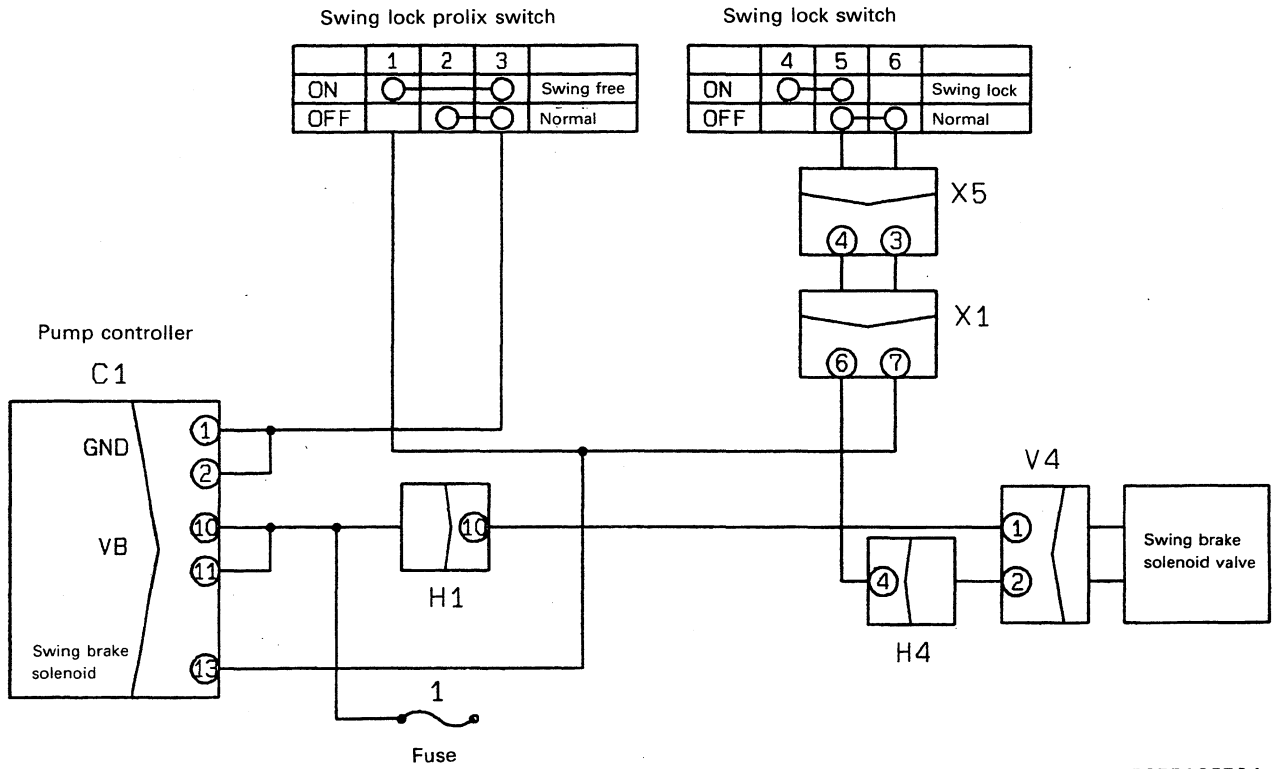


205CA06504

K20506

C-6 [E2:02] Short circuit in LS select solenoid system is displayed
[E2:04] Short circuit in pump merge-divider solenoid system is displayed
[E2:05] Short circuit in 2-stage relief solenoid system is displayed
[E2:06] Short circuit in travel speed solenoid system is displayed

- ★ This troubleshooting is carried out when there is still an abnormality, so when disconnecting the connector and inserting the T-adapter, or when removing the T-adapter and returning the connector to its original position, if the service code is not displayed, the problem has been removed.
- ★ If the starting switch is turned OFF after an abnormality occurs, turn the starting switch ON and check if any service code is displayed. (If it is not displayed, the problem has been removed.)
- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.

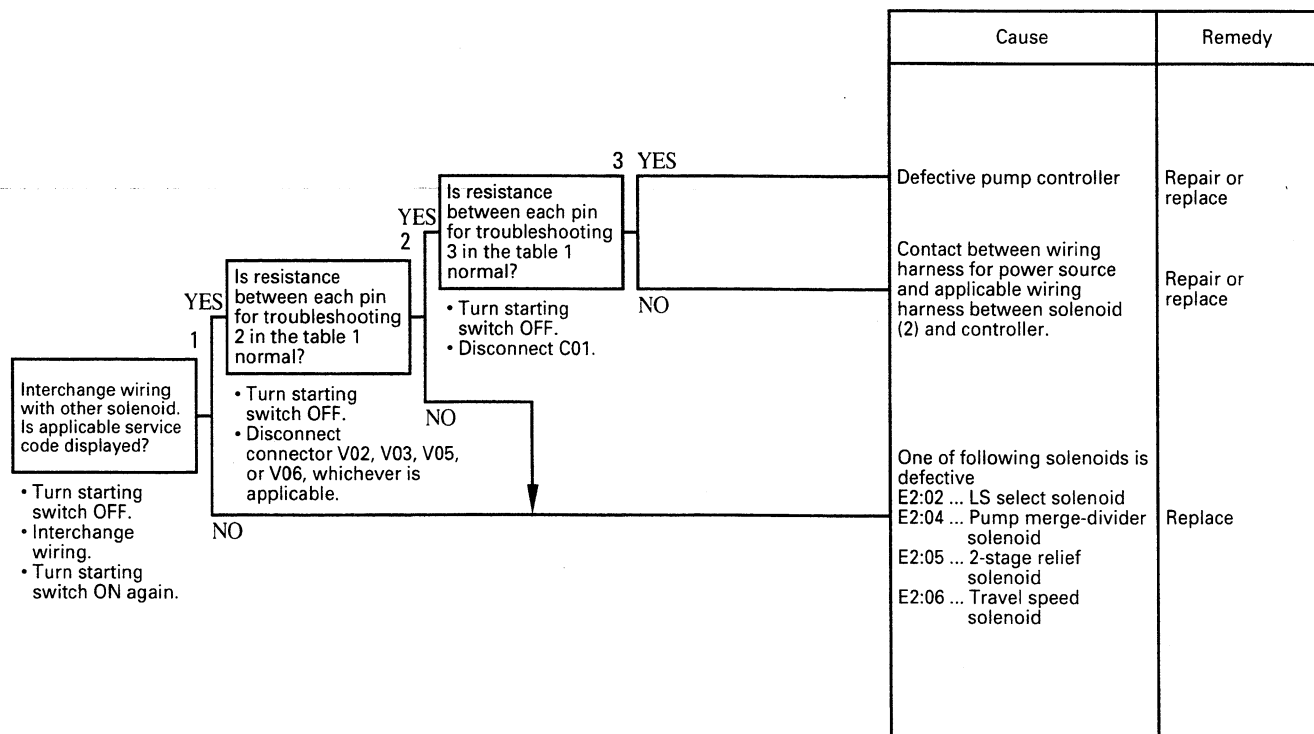


K20506

Table 1

Service code	Measurement location			
	Troubleshooting 2		Troubleshooting 3	
E2 : 02	Between V02 (male) (1) and (2)	20 – 60 Ω	Between C01 (female) (10), (11) and (3)	20 – 60 Ω
			Between C01 (female) (3) and chassis	Min. 1 MΩ
E2 : 04	Between V03 (male) (1) and (2)	20 – 60 Ω	Between C01 (female) (10), (11) and (4)	20 – 60 Ω
			Between C01 (female) (4) and chassis	Min. 1 MΩ
E2 : 05	Between V05 (male) (1) and (2)	20 – 60 Ω	Between C01 (female) (10), (11) and (14)	20 – 60 Ω
			Between C01 (female) (14) and chassis	Min. 1 MΩ
E2 : 06	Between V06 (male) (1) and (2)	20 – 60 Ω	Between C01 (female) (10), (11) and (6)	20 – 60 Ω
			Between C01 (female) (6) and chassis	Min. 1 MΩ

C-6 Related electric circuit diagram

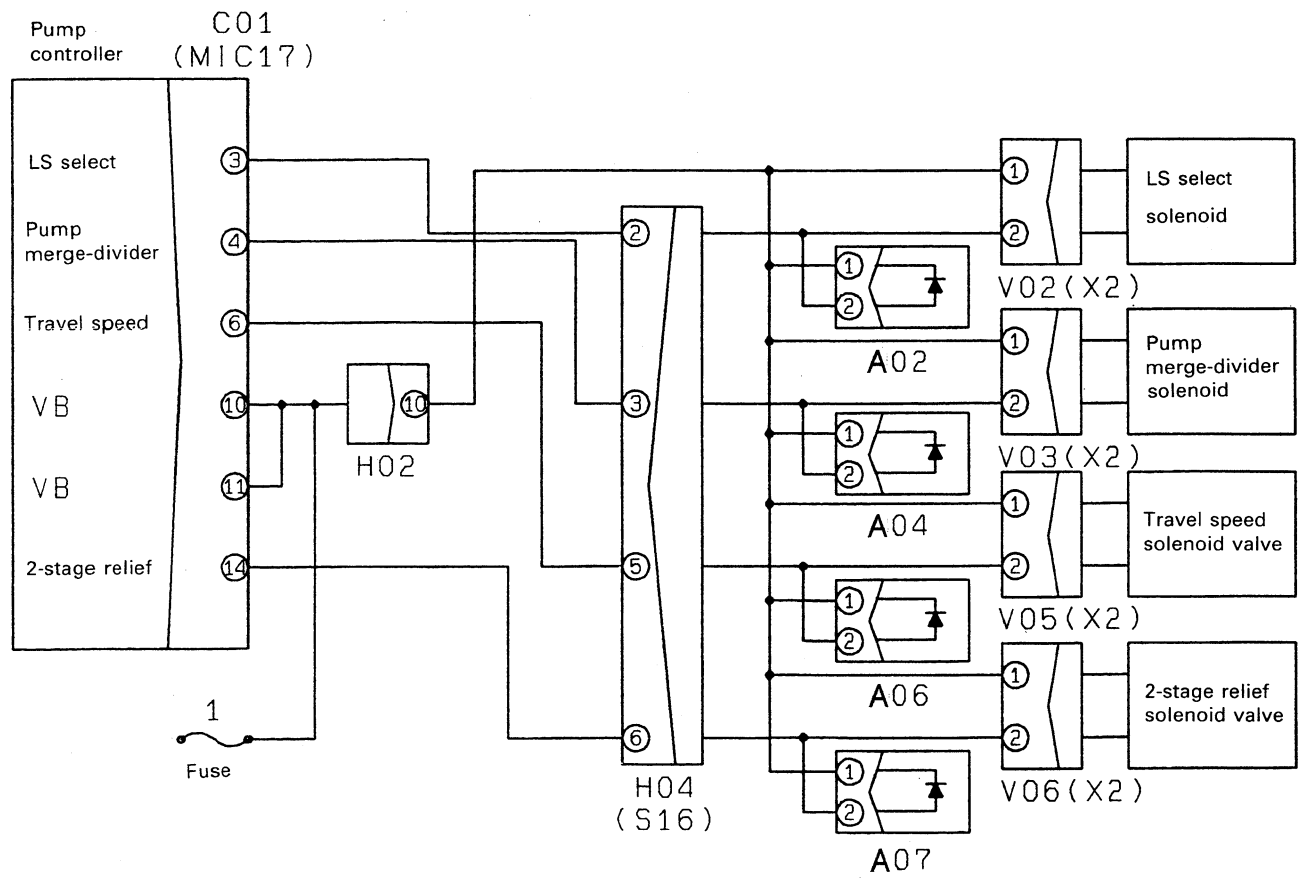


K20506

205CA06505

C-7 [E2:12] Disconnection in LS select solenoid system is displayed
[E2:14] Disconnection in pump merge-divider solenoid system is displayed
[E2:15] Disconnection in 2-stage relief solenoid system is displayed
[E2:16] Disconnection in travel speed solenoid system is displayed

- ★ This troubleshooting is carried out when there is still an abnormality, so when disconnecting the connector and inserting the T-adapter, or when removing the T-adapter and returning the connector to its original position, if the service code is not displayed, the problem has been removed.
- ★ If there is a disconnection in the solenoid or wiring harness, the solenoid is not actuated.
If the No. 2 pin of the solenoid is short circuiting with the ground, the solenoid continues to be actuated.
- ★ If the starting switch is turned OFF after an abnormality occurs, turn the starting switch ON, operate according to Condition 2 in Table 1, and check if any service code is displayed.(If it is not displayed, the problem has been removed.)
- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.
- ★ Check that fuse 1 is normal.

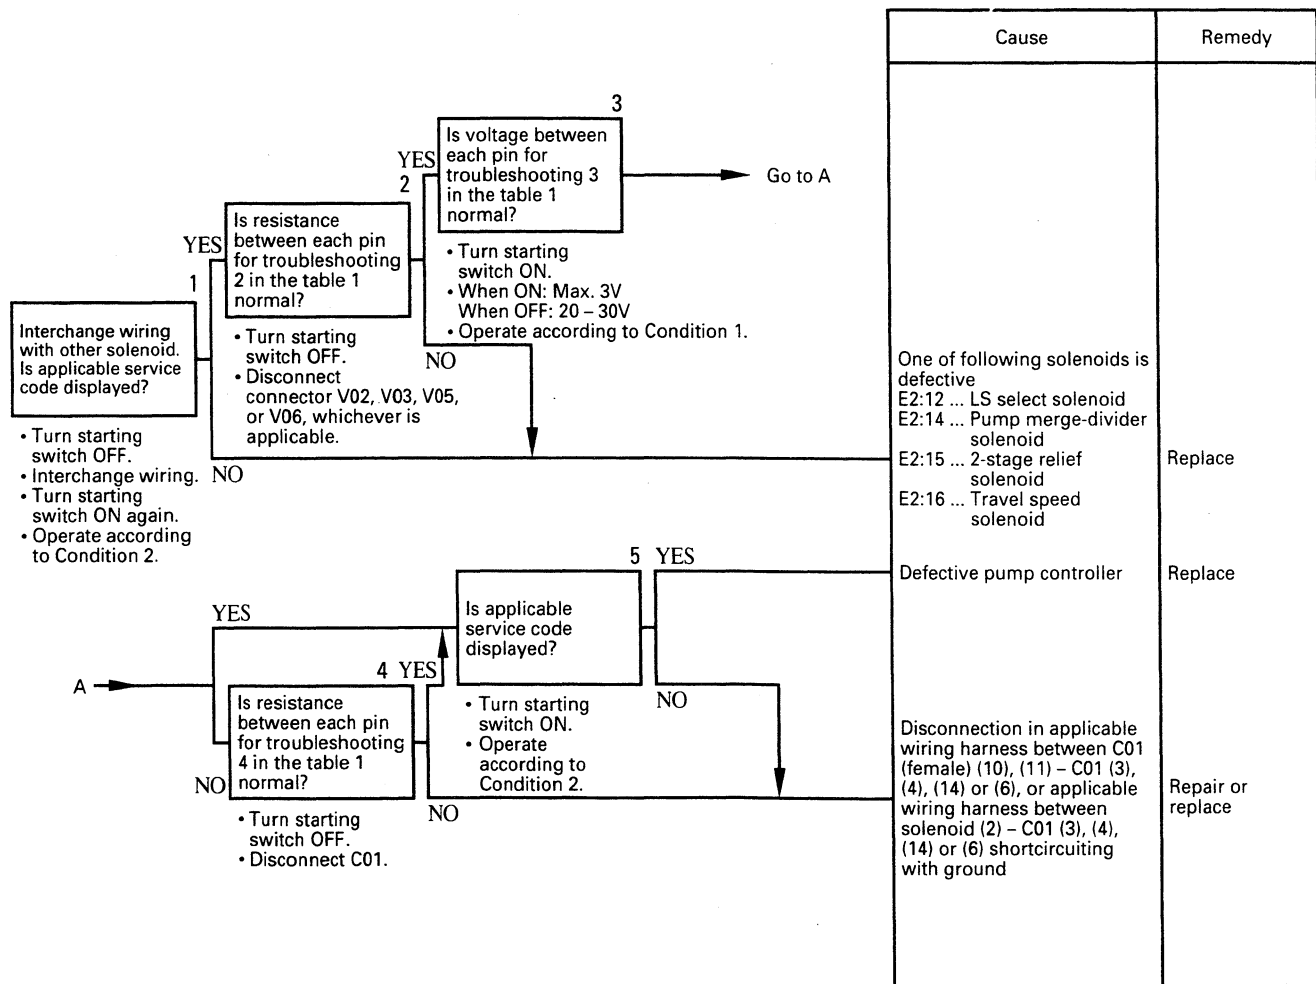


K20506

Table 1

Service code	Measurement location						Condition 2
	Troubleshooting 2		Troubleshooting 3		Troubleshooting 4		
			Voltage between each pin	Condition 1			
E2:12	Between V02 (male) (1) and (2)	20 – 60 Ω	Between C01 (female) (3) and chassis	When ON: Same as Condition 2 When OFF: Swing lever at neutral	Between C01 (female)(10), (11) and (3) Between C01 (female) (3) and chassis	20 – 60 Ω Min. 1 MΩ	Turn starting switch to START to start engine, then turn boom/swing priority selection mode OFF, and operate boom lever slightly to RAISE position (but do not move boom) ★(Note)
E2:14	Between V03 (male) (1) and (2)	20 – 60 Ω	Between C01 (female) (4) and chassis	When ON: Same as Condition 2 When OFF: When control levers are at neutral in mode other than L/O	Between C01 (female) (10), (11) and (4) Between C01 (female) (4) and chassis	20 – 60 Ω Min. 1 MΩ	Set working mode switch to L/O mode
E2:15	Between V05 (male) (1) and (2)	20 – 60 Ω	Between C01 (female) (14) and chassis	When ON: Same as Condition 2 When OFF: Swing lock switch OFF	Between C01 (female) (10), (11) and (14) Between C01 (female) (14) and chassis	20 – 60 Ω Min. 1 MΩ	Turn swing lock switch ON
E2:16	Between V06 (male) (1) and (2)	20 – 60 Ω	Between C01 (female) (6) and chassis	When ON: Same as Condition 2 When OFF: Travel levers at neutral	Between C01 (female) (10), (11) and (6) Between C01 (female) (6) and chassis	20 – 60 Ω Min. 1 MΩ	Start engine Set travel speed switch to Mi Turn fuel control dial to MAX. Operate travel lever slightly

Note: When the accumulator is charged, it is possible to carry out the same operation with the starting switch at ON.

C-7 Related electric circuit diagram

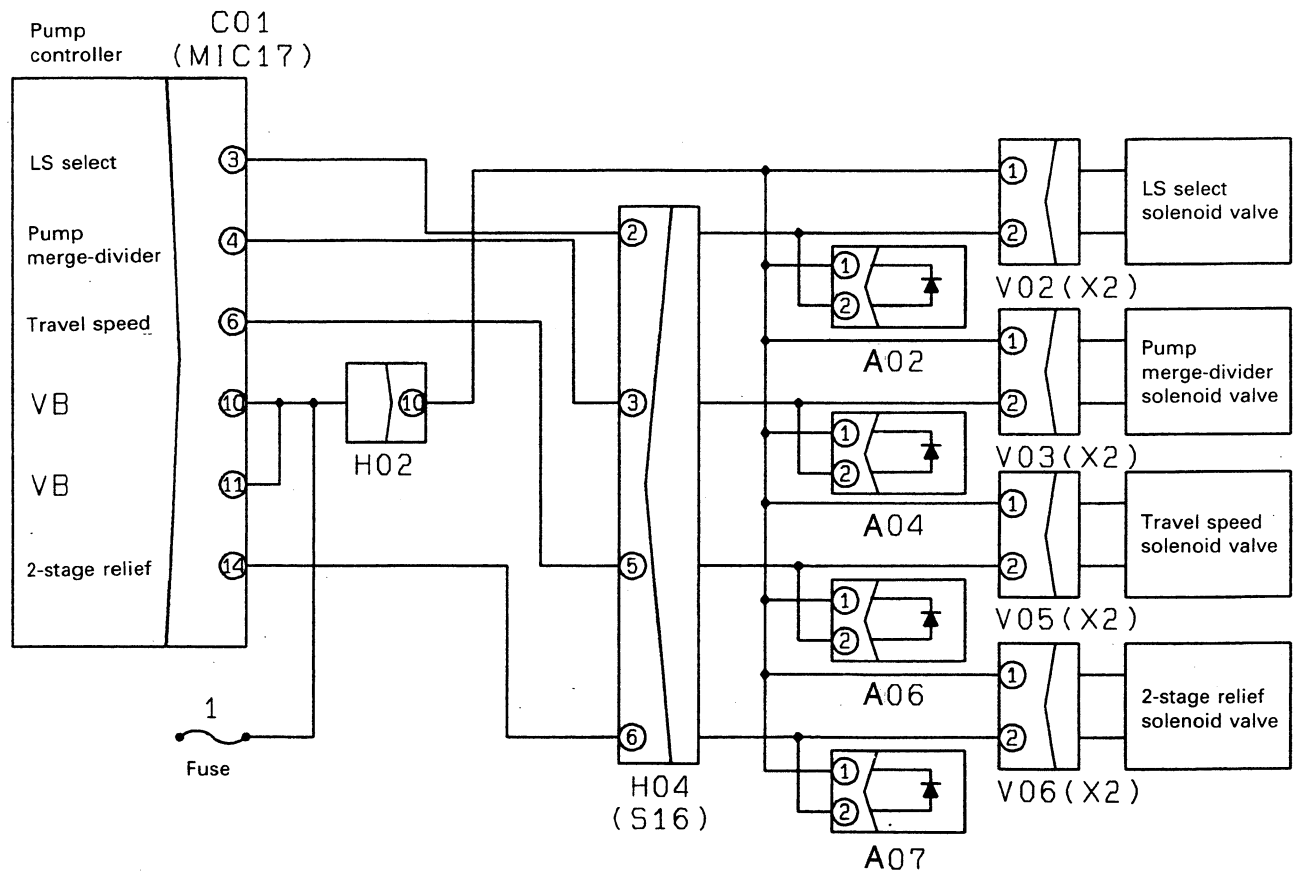


205CA06505


C-9 [E2:18] Network response overtime error is displayed

- ★ This troubleshooting is carried out when there is still an abnormality, so when disconnecting the connector and inserting the T-adapter, or when removing the T-adapter and returning the connector to its original position, if the monitor code display returns to normal, the problem has been removed.
- ★ If the starting switch is turned ON when there is a disconnection in the wiring harness between the monitor panel and the controller, or the positive end (+) of the network wiring harness or the inside of the controller are short circuited, the controller cannot carry out networking, so the monitor panel does not display any abnormality.
- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.


When E2:18 is displayed independently

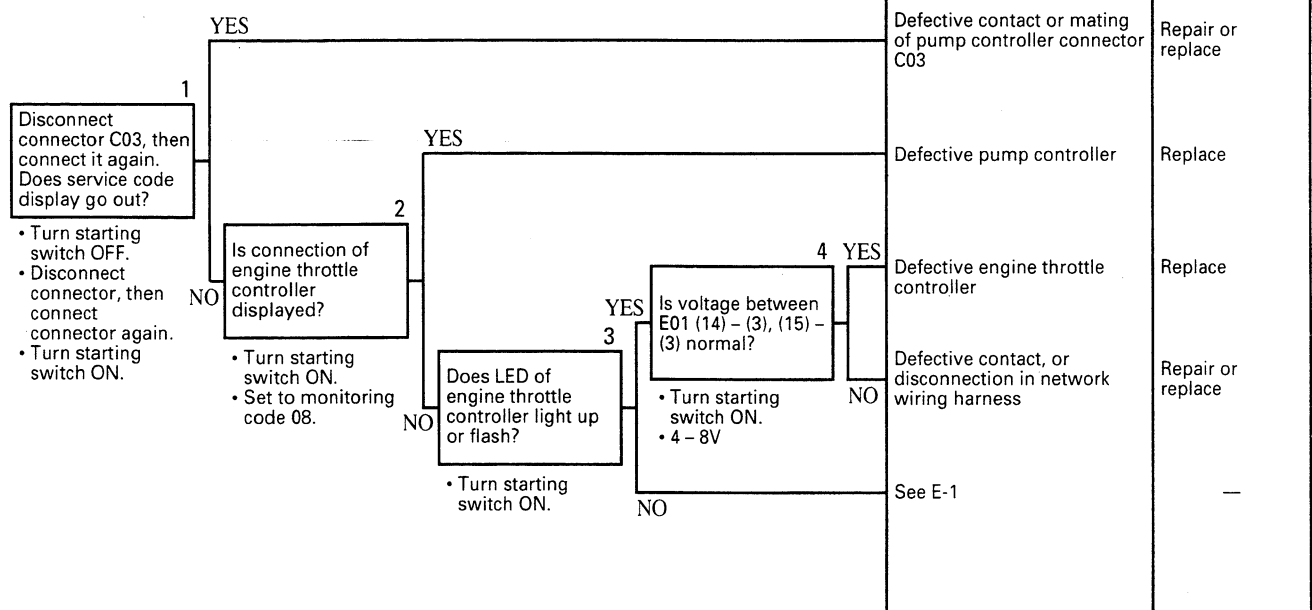


When E2:18 and E3:01 are displayed simultaneously

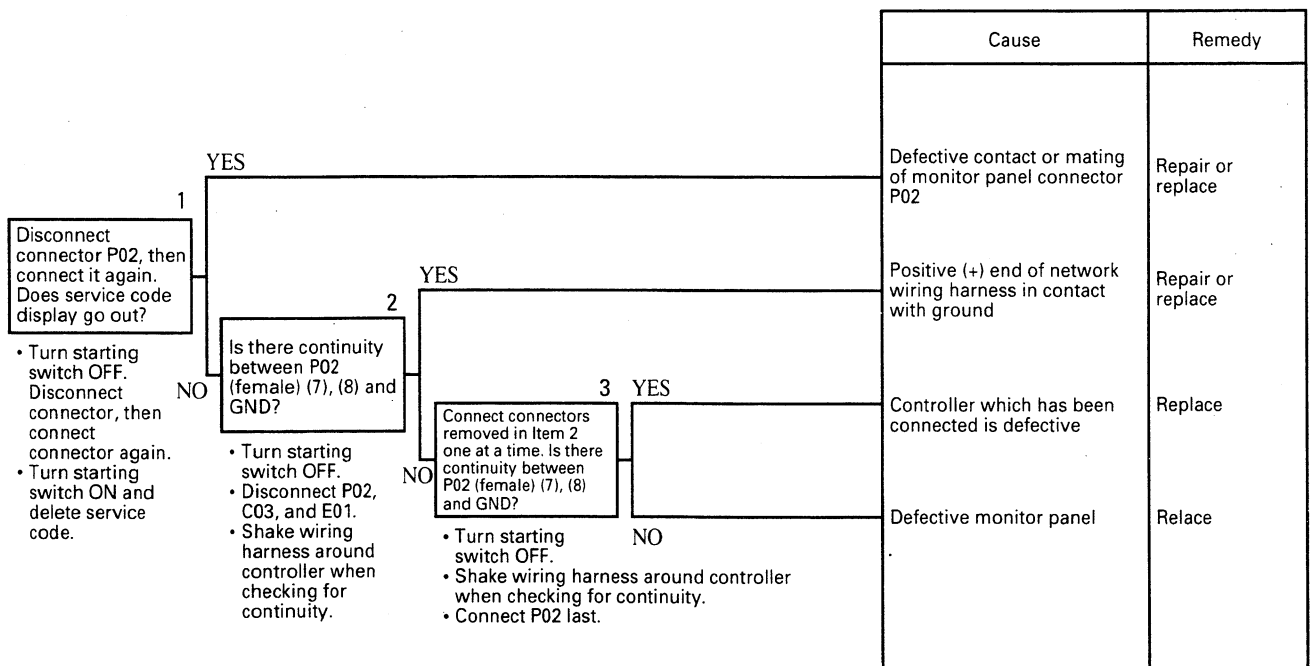

Monitoring code display (Time display portion)

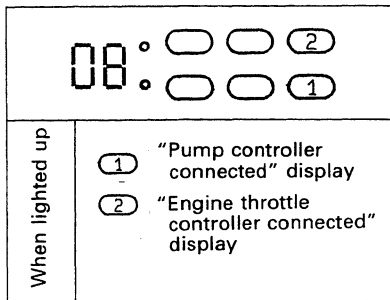


C-9 Related electric circuit diagram

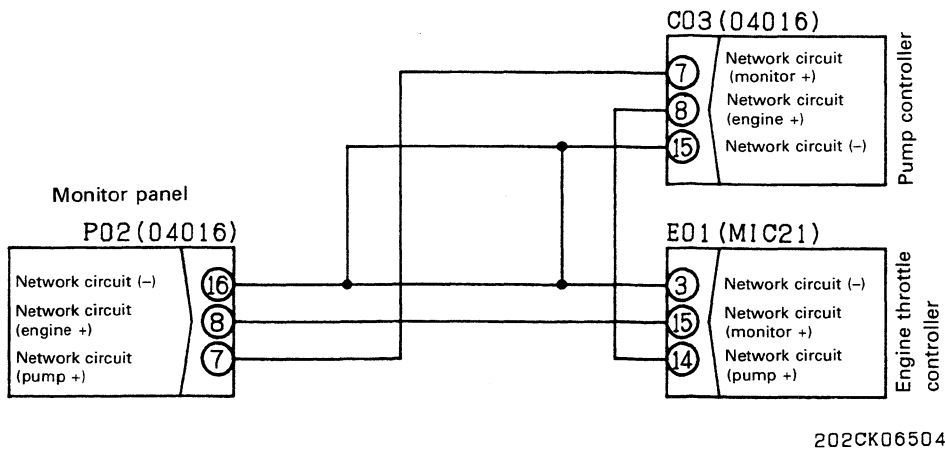

- ★ Check for the LED display for the engine throttle controller and pump controller from the direction of the arrow as shown in the diagram on the right.

Note 1: Push the operator's seat down to the front, then remove the two rear covers to check.

Note 2: The LED display for the pump controller is difficult to see, so use a mirror.

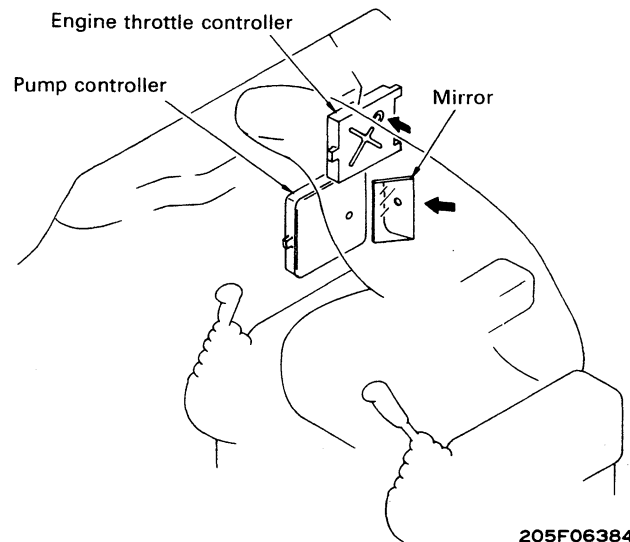

K20506


C-10 [E2:22] Short circuit in LS control EPC solenoid system is displayed

- ★ This troubleshooting is carried out when there is still an abnormality, so when disconnecting the connector and inserting the T-adapter, or when removing the T-adapter and returning the connector to its original position, if the service code is not displayed, the problem has been removed.
- ★ If the starting switch is turned OFF after an abnormality occurs, turn the starting switch ON and check if E2:22 is displayed. (If it is not displayed, the problem has been removed.)
- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.

		Cause	Remedy
1 Is resistance between C10 (male) (1) – (2), (2) – chassis as shown in Table 1? • Turn starting switch OFF. • Disconnect C10. YES 2 Is resistance between C01 (female) (15) – (7), (7) – chassis as shown in Table 1? • Turn starting switch OFF. • Disconnect C01. NO	YES	Defective controller	Replace
	NO	Contact of power source wiring harness with wiring harness between C01 (female) (7) and C10 (female) (2)	Repair or replace
	NO	Defective LS control EPC solenoid	Replace

Table 1

C10 (male)	C01 (female)	Resistance value
Between (1) and (2)	Between (15) and (7)	7 – 14 Ω
Between (2) and chassis	Between (7) and chassis	Min. 1 M Ω

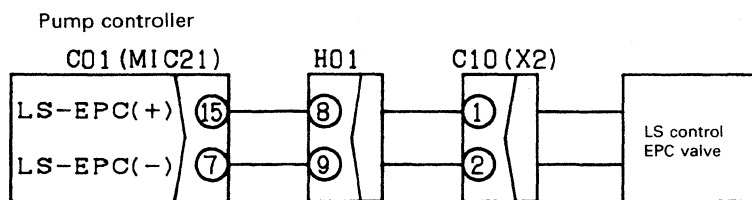C-10 Related electric circuit diagram

202CK06510

K20506

C-11 [E2:23] Disconnection in LS control EPC solenoid system is displayed

- ★ This troubleshooting is carried out when there is still an abnormality, so when disconnecting the connector and inserting the T-adapter, or when removing the T-adapter and returning the connector to its original position, if the service code is not displayed, the problem has been removed.
- ★ If the starting switch is turned OFF after an abnormality occurs, turn the starting switch ON and check if E2:23 is displayed. (If it is not displayed, the problem has been removed.)
- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.


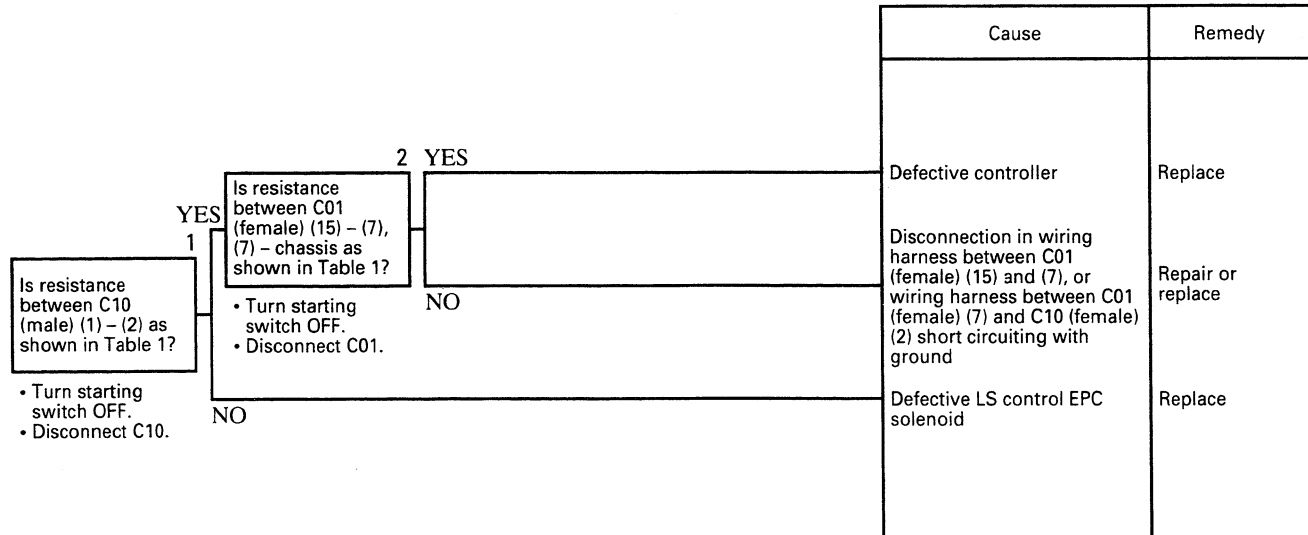


Table 1

C10 (male)	C01 (female)	Resistance value
Between (1) and (2)	Between (15) and (7)	7 – 14 Ω
Between (2) and chassis	Between (7) and chassis	Min. 1 MΩ

C-11 Related electric circuit diagram

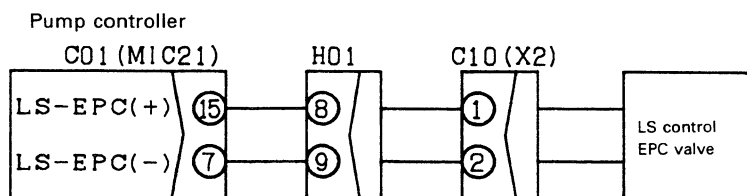


202CK06510

K20506

C-12 [E2:24] Abnormality in front pump pressure sensor system is displayed [E2:25] Abnormality in rear pump pressure sensor system is displayed

- ★ This troubleshooting is carried out when there is still an abnormality, so when disconnecting the connector and inserting the T-adaptor, or when removing the T-adaptor and returning the connector to its original position, if the service code is not displayed, the problem has been removed.
- ★ If the starting switch is turned OFF after an abnormality occurs, turn the starting switch ON, start the engine, and check if any service code is displayed. (If it is not displayed, the problem has been removed.)
- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.

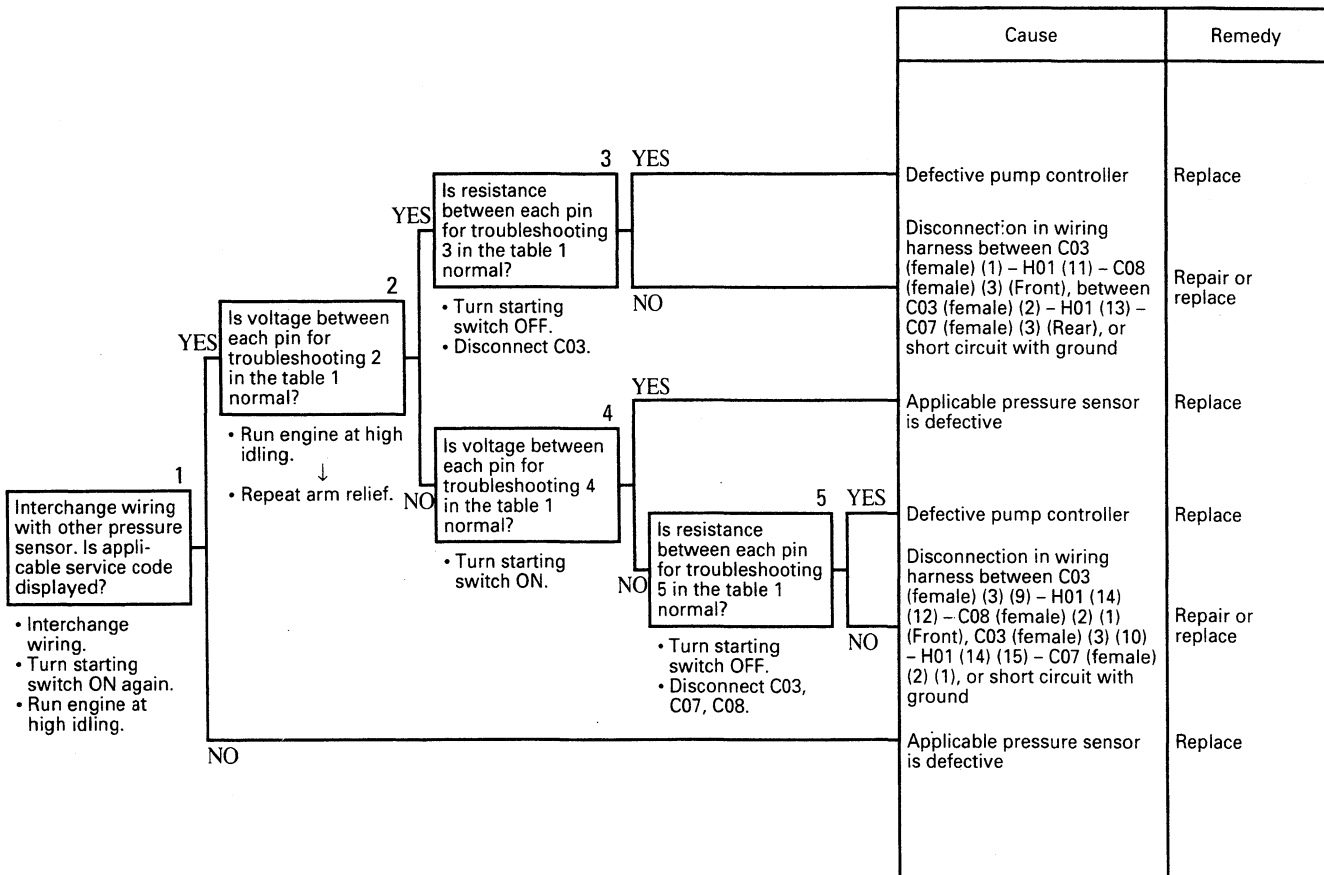


K20506

Table 1

Service code	Measurement location						
	Troubleshooting 2	Troubleshooting 3		Troubleshooting 4		Troubleshooting 5	
E2 : 24	Between C08 (3) and (1)	0.5 - 4.5V	Between C03 (female) (1) and (9)	Between C08 (2) and (1)	18 - 28V	Between C03 (female) (3) and (9)	Min. 1 MΩ
			Between C03 (female) (1), (9) and chassis			Between C03 (female) (3), (9) and chassis	
E2 : 25	Between C07 (3) and (1)		Between C03 (female) (2) and (10)			Between C03 (female) (3) and (10)	
			Between C03 (female) (2), (10) and chassis	Between C07 (2) and (1)		Between C03 (female) (3), (10) and chassis	

C-12 Related electric circuit diagram

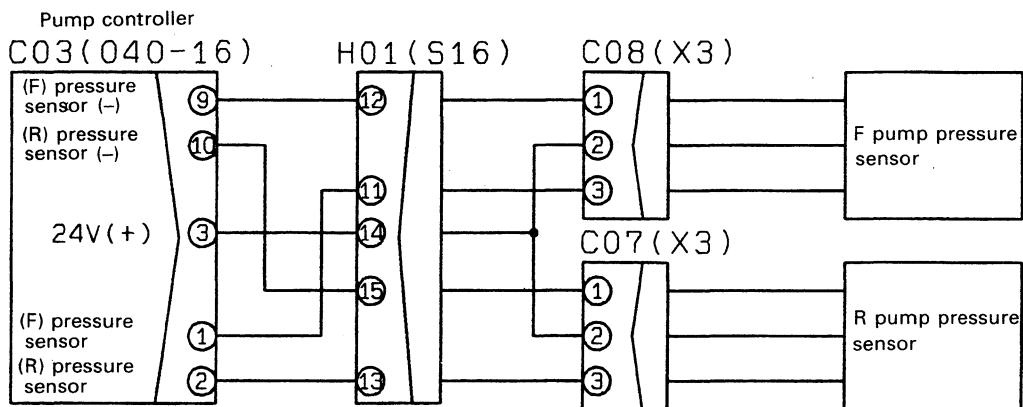


205CA06507

K20506


C-13 [E2:26] Abnormality in pump pressure sensor power source system is displayed

- ★ This troubleshooting is carried out when there is still an abnormality, so when disconnecting the connector and inserting the T-adapter, or when removing the T-adapter and returning the connector to its original position, if the service code is not displayed, the problem has been removed.
- ★ If the starting switch is turned OFF after an abnormality occurs, turn the starting switch ON and check if E2:26 is displayed. (If it is not displayed, the problem has been removed.)
- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.

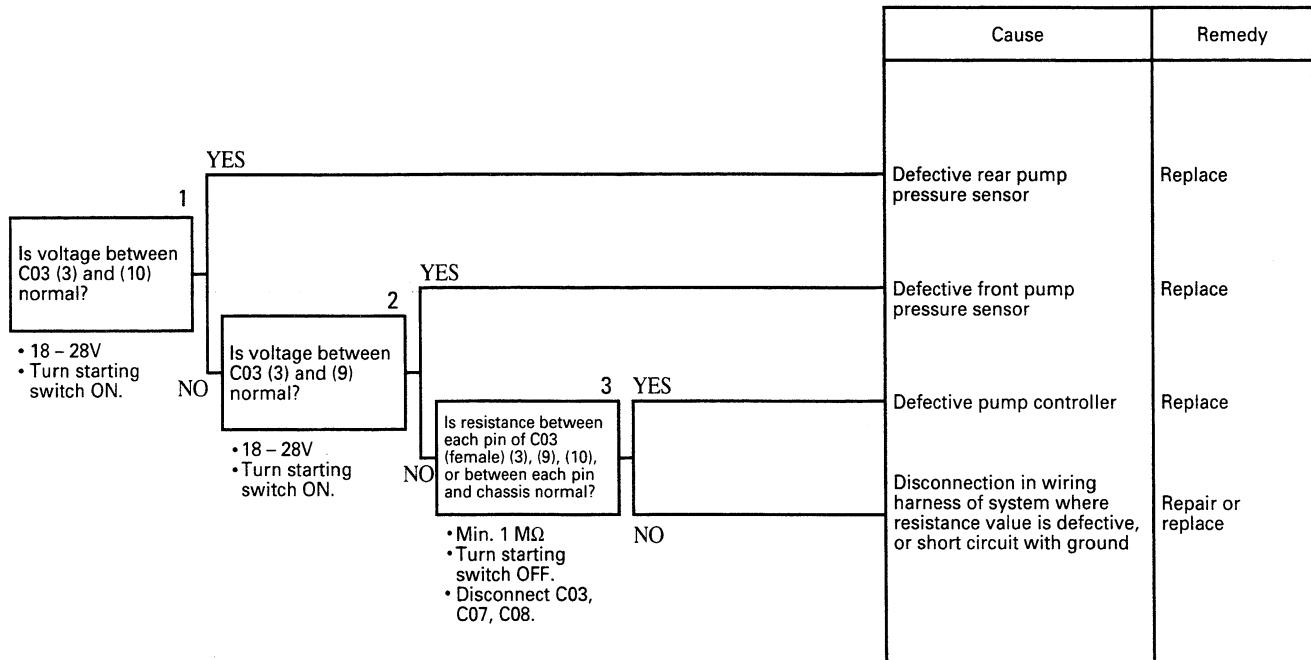

K20506

C-13 Related electric circuit diagram

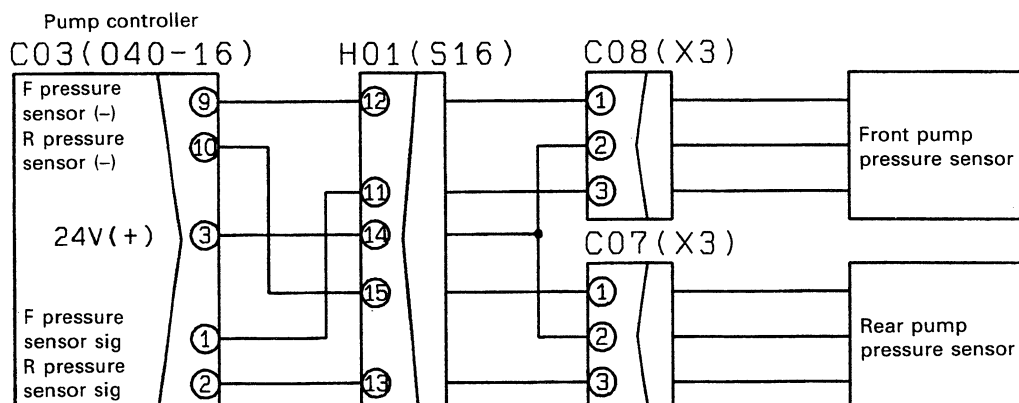


205CA06507

C-14 [E2:27] Abnormality in engine speed sensor system is displayed

- ★ This troubleshooting is carried out when there is still an abnormality, so when disconnecting the connector and inserting the T-adapter, or when removing the T-adapter and returning the connector to its original position, if the service code is not displayed, the problem has been removed.
- ★ If the starting switch is turned OFF after an abnormality occurs, turn the starting switch ON and check if E2:27 is displayed. (If it is not displayed, the problem has been removed.)
- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.

		Cause	Remedy
Is resistance between E07 (male) (1) – (2) normal? • 500 – 1000 Ω • Turn starting switch OFF. • Disconnect E07. 1 YES Is resistance between C03 (female) (6) – (14) normal? • 500 – 1000 Ω • Turn starting switch OFF. • Disconnect C03. 2 YES NO NO	Defective pump controller	Replace	
	Disconnection in wiring harness between C03 (female) (6), (14) –E07 (1), (2) or short circuit with ground	Repair or replace	
	Defective engine speed sensor	Replace	

C-14 Related electric circuit diagram

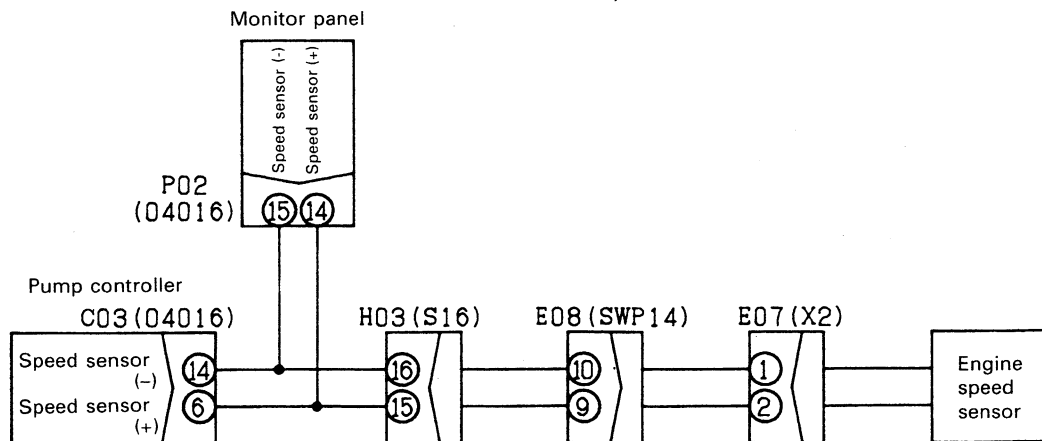

202CK06511

K20506

C-15 [E2:28] Abnormality in auto-deceleration output system is displayed

- ★ This troubleshooting is carried out when there is still an abnormality, so when disconnecting the connector and inserting the T-adapter, or when removing the T-adapter and returning the connector to its original position, if the service code is not displayed, the problem has been removed.
- ★ When the auto-deceleration switch is ON.
- ★ If the starting switch is turned OFF after an abnormality occurs, start the engine, operate the control lever (neutral → operated) with the auto-deceleration ON, and check if E2:28 is displayed. (If it is not displayed, the problem has been removed.)
- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.

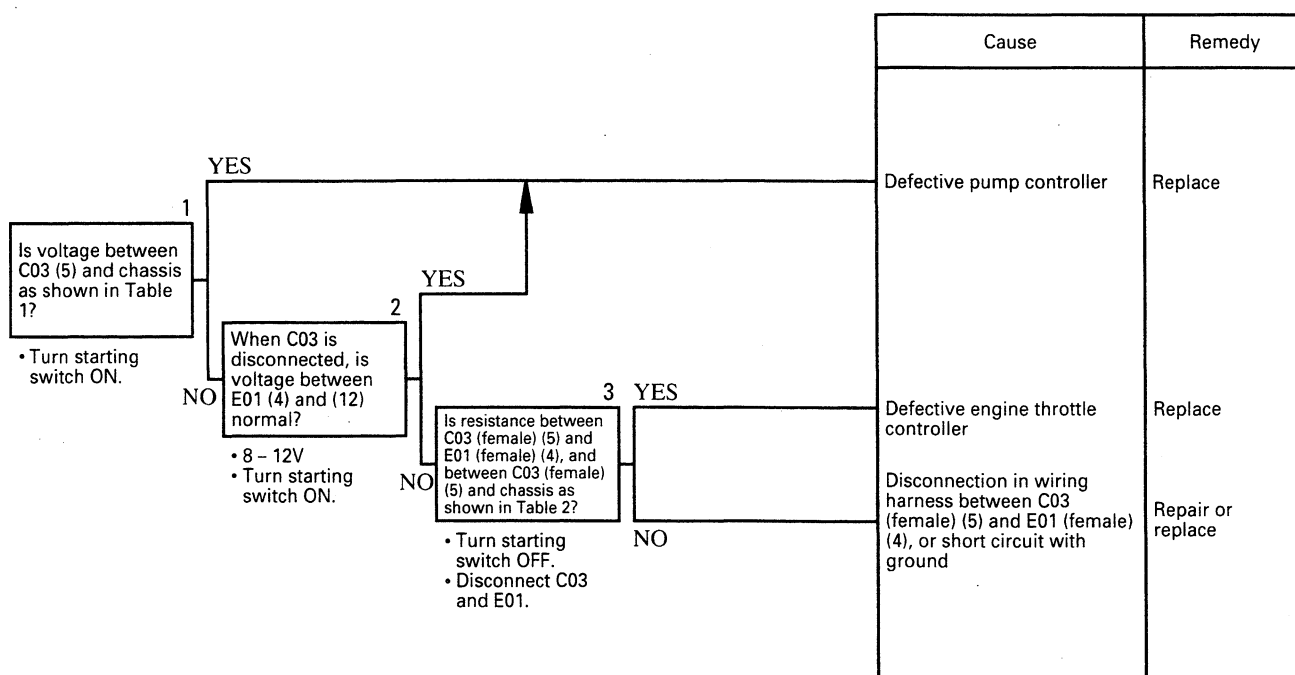



Table 1

Operation	Voltage between C03 (female) (5) and chassis
Auto-deceleration switch ON, levers at neutral	8 – 12V
Auto-deseleration switch OFF, levers at neutral	0 – 1V

Table 2

Connector	Resistance value
Between C03 (female) (5) and C01 (female) (4)	Max. 1Ω
Between C03 (female) (5) and chassis	Min. 1MΩ

C-15 Related electric circuit diagram

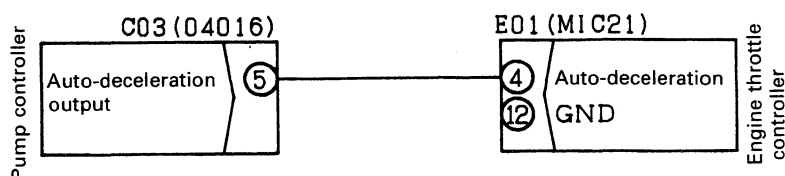

202CK06512

TROUBLESHOOTING OF PUMP CONTROLLER INPUT SIGNAL SYSTEM (F MODE)

- ★ When the monitoring mode is checked, if the following input signals are not displayed or do not light up, carry out troubleshooting for that item.


Troubleshooting flow charts for each failure mode

F- 1	Bit pattern 20-(1) Swing oil pressure switch does not light up	20-186
F- 2	Bit pattern 20-(2) Travel oil pressure switch does not light up	20-187
F- 3	Bit pattern 20-(3) Boom LOWER oil pressure switch does not light up	20-188
F- 4	Bit pattern 20-(4) Boom RAISE oil pressure switch does not ight up	20-189
F- 5	Bit pattern 20-(5) Arm IN oil pressure switch does not light up	20-190
F- 6	Bit pattern 20-(6) Arm OUT oil pressure switch does not light up	20-191
F- 7	Bit pattern 21-(1) Bucket CURL oil pressure switch does not light up	20-192
F- 8	Bit pattern 21-(2) Bucket DUMP oil pressure switch does not light up	20-193
F- 9	Bit pattern 21-(3) Swing lock switch does not light up	20-194
F-10	Engine speed is not displayed in monitoring code 10 (abnormality in engine speed sensor system)	20-195
F-12	Bit pattern 22-(6) L.H. knob switch does not light up	20-196

K20506


F-1 Bit pattern 20-(1) Swing oil pressure switch does not light up

- ★ This troubleshooting is carried out when there is still an abnormality, so when disconnecting the connector and inserting the T-adapter, or when removing the T-adapter and returning the connector to its original position, if the monitoring code display returns to normal, the problem has been removed.
- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.
- ⚠ Turn the swing lock switch ON before operating the swing lever.
- ★ If there is no display when the lever is operated on one side, the PPC shuttle valve is defective.

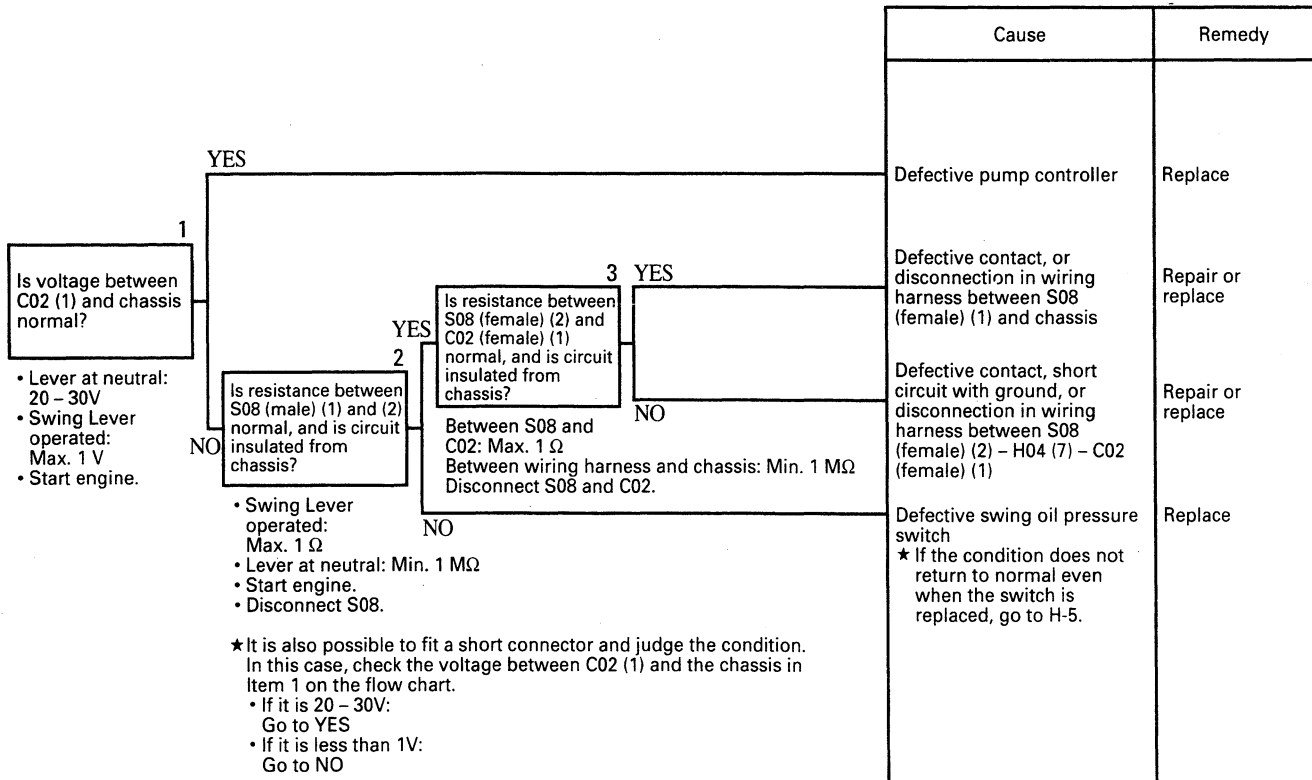

K20506

F-1 Related electric circuit diagram

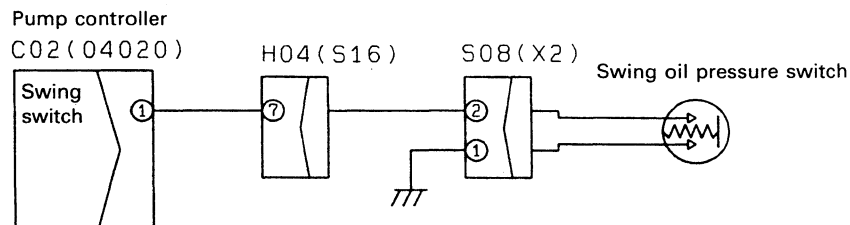


205CA06509

F-2 Bit pattern 20-(2) Travel oil pressure switch does not light up

- ★ This troubleshooting is carried out when there is still an abnormality, so when disconnecting the connector and inserting the T-adapter, or when removing the T-adapter and returning the connector to its original position, if the monitoring code display returns to normal, the problem has been removed.
- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.
- ⚠ Before operating the travel lever, check that the surrounding area is safe.
- ★ If there is no display when the travel lever is operated on one side, the PPC shuttle valve is defective.

		Cause	Remedy
1 Is voltage between C02 (3) and chassis normal? • Lever at neutral: 20 – 30V • Travel Lever operated: Max. 1 V • Start engine. YES NO 2 Is resistance between S01 (male) (1) and (2) normal, and is circuit insulated from chassis? • Travel lever operated: Max. 1 Ω • Lever at neutral: Min. 1 MΩ • Start engine. • Disconnect S01. YES NO 3 Is resistance between S01 (female) (2) and C02 (female) (3) normal, and is circuit insulated from chassis? • Between S01 and C02: Max. 1 Ω • Between wiring harness and chassis: Min. 1 MΩ • Disconnect S01 and C02. YES NO ★ It is also possible to fit a short connector and judge the condition. In this case, check the voltage between C02 (3) and the chassis in Item 1 on the flow chart. • If it is 20 – 30V: Go to YES • If it is less than 1V: Go to NO	Defective pump controller	Replace	
	Defective contact, or disconnection in wiring harness between S01 (female) (1) and chassis	Repair or replace	
	Defective contact, short circuit with ground, or disconnection in wiring harness between S02 (female) (3) – H04 (11) – S01 (female) (2)	Repair or replace	
	Defective travel oil pressure switch ★ If the condition does not return to normal even when the switch is replaced, go to H-5.	Replace	

F-2 Related electric circuit diagram

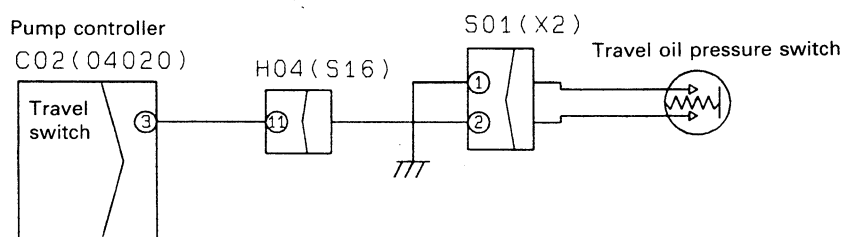

205CA06510

F-3 Bit pattern 20-(3) Boom LOWER oil pressure switch does not light up

- ★ This troubleshooting is carried out when there is still an abnormality, so when disconnecting the connector and inserting the T-adapter, or when removing the T-adapter and returning the connector to its original position, if the monitoring code display returns to normal, the problem has been removed.


⚠ When measuring with the engine running, make sure that the work equipment does not move when the lever is operated.

- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
 ★ Always connect any disconnected connectors before going on the next step.
 ★ When measuring with the engine stopped, charge the accumulator before starting.

		Cause	Remedy
1 Is voltage between C02 (2) and chassis normal? • Lever at neutral: 20 – 30V • Boom LOWER operated: Max. 1 V • Start engine. YES 2 Is resistance between S04 (male) (1) and (2) normal, and is circuit insulated from chassis? • Boom LOWER operated: Max. 1 Ω • Lever at neutral: Min. 1 MΩ . • Start engine. • Disconnect S04. NO 3 Is resistance between S04 (female) (2) and C02 (female) (2) normal, and is circuit insulated from chassis? • Between S04 and C02: Max. 1 Ω • Between wiring harness and chassis: Min. 1 MΩ • Disconnect S04 and C02. YES NO ★ It is also possible to fit a short connector and judge the condition. In this case, check the voltage between C02 (2) and the chassis in Item 1 on the flow chart. • If it is 20 – 30V: Go to YES • If it is less than 1V: Go to NO	Defective pump controller	Replace	
	Defective contact, or disconnection in wiring harness between S04 (female) (1) and chassis	Repair or replace	
	Defective contact, short circuit with ground, or disconnection in wiring harness between S04 (female) (2) – H04 (9) – C02 (female) (2)	Repair or replace	
	Defective boom LOWER oil pressure switch ★ If the condition does not return to normal even when the switch is replaced, go to H-5.	Replace	

K20506

F-3 Related electric circuit diagram

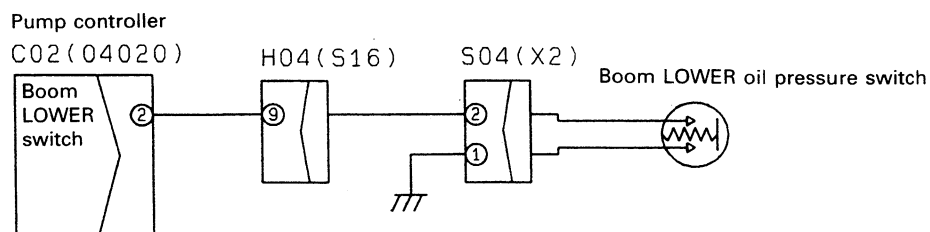

205CA06511

F-4 Bit pattern 20-(4) Boom RAISE oil pressure switch does not light up


- ★ This troubleshooting is carried out when there is still an abnormality, so when disconnecting the connector and inserting the T-adaptor, or when removing the T-adaptor and returning the connector to its original position, if the monitoring code display returns to normal, the problem has been removed.

⚠ When measuring with the engine running, make sure that the work equipment does not move when the lever is operated.

- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.
- ★ When measuring with the engine stopped, charge the accumulator before starting.

		Cause	Remedy
1 Is voltage between C02 (4) and chassis normal? • Lever at neutral: 20 – 30V • Boom RAISE operated: Max. 1 V • Start engine. YES NO 2 Is resistance between S02 (male) (1) and (2) normal, and is circuit insulated from chassis? YES NO • Boom RAISE operated: Max. 1 Ω • Lever at neutral: Min. 1 MΩ • Start engine. • Disconnect S02. ★ It is also possible to fit a short connector and judge the condition. In this case, check the voltage between C02 (4) and the chassis in Item 1 on the flow chart. • If it is 20 – 30V: Go to YES • If it is less than 1V: Go to NO	3 Is resistance between S02 (female) (2) and C02 (female) (4) normal, and is circuit insulated from chassis? YES NO • Between S02 and C02: Max. 1 Ω • Between wiring harness and chassis: Min. 1 MΩ • Disconnect S02 and C02.	Defective pump controller	Replace
		Defective contact, or disconnection in wiring harness between S02 (female) (1) and chassis	Repair or replace
		Defective contact, short circuit with ground, or disconnection in wiring harness between S02 (female) (2) – H04 (10) – C02 (female) (4)	Repair or replace
		Defective boom RAISE oil pressure switch ★ If the condition does not return to normal even when the switch is replaced, go to H-5.	Replace

F-4 Related electric circuit diagram

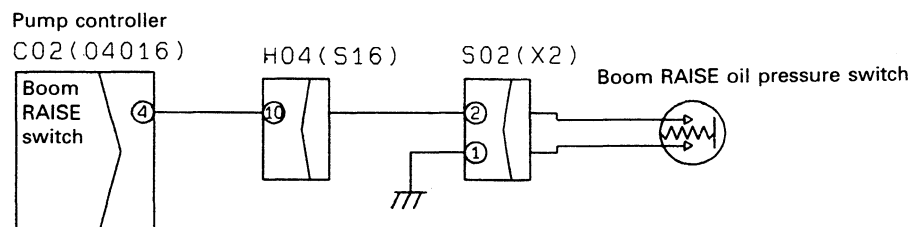

205CA06512

F-5 Bit pattern 20-(5) Arm IN oil pressure switch does not light up

- ★ This troubleshooting is carried out when there is still an abnormality, so when disconnecting the connector and inserting the T-adapter, or when removing the T-adapter and returning the connector to its original position, if the monitoring code display returns to normal, the problem has been removed.


⚠ When measuring with the engine running, make sure that the work equipment does not move when the lever is operated.

- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.
- ★ When measuring with the engine stopped, charge the accumulator before starting.

		Cause	Remedy
1 Is voltage between C02 (5) and chassis normal? • Lever at neutral: 20 – 30V • Arm IN operated: Max. 1 V • Start engine. YES NO 2 Is resistance between S05 (male) (1) and (2) normal, and is circuit insulated from chassis? • Arm IN operated: Max. 1 Ω • Lever at neutral: Min. 1 MΩ • Start engine. • Disconnect S05. YES NO 3 Is resistance between S05 (female) (2) and C02 (female) (5) normal, and is circuit insulated from chassis? • Between C02 and S05: Max. 1 Ω • Between wiring harness and chassis: Min. 1 MΩ • Disconnect C02 and S05. YES NO ★ It is also possible to fit a short connector and judge the condition. In this case, check the voltage between C02 (5) and the chassis in Item 1 on the flow chart. • If it is 20 – 30V: Go to YES • If it is less than 1V: Go to NO	Defective pump controller	Replace	
	Defective contact, or disconnection in wiring harness between S05 (female) (1) and chassis	Repair or replace	
	Defective contact, short circuit with ground, or disconnection in wiring harness between S05 (female) (2) – H04 (12) – C02 (female) (5)	Repair or replace	
	Defective Arm IN oil pressure switch ★ If the condition does not return to normal even when the switch is replaced, go to H-5.	Replace	

K20506

F-5 Related electric circuit diagram

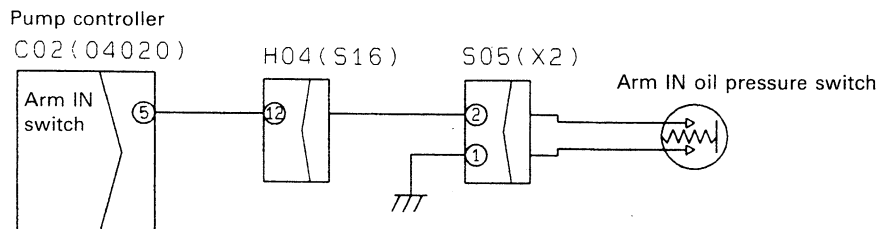


205CA06513

F-6 Bit pattern 20-(6) Arm OUT oil pressure switch does not light up


- ★ This troubleshooting is carried out when there is still an abnormality, so when disconnecting the connector and inserting the T-adapter, or when removing the T-adapter and returning the connector to its original position, if the monitoring code display returns to normal, the problem has been removed.

⚠ When measuring with the engine running, make sure that the work equipment does not move when the lever is operated.

- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
 ★ Always connect any disconnected connectors before going on the next step.
 ★ When measuring with the engine stopped, charge the accumulator before starting.

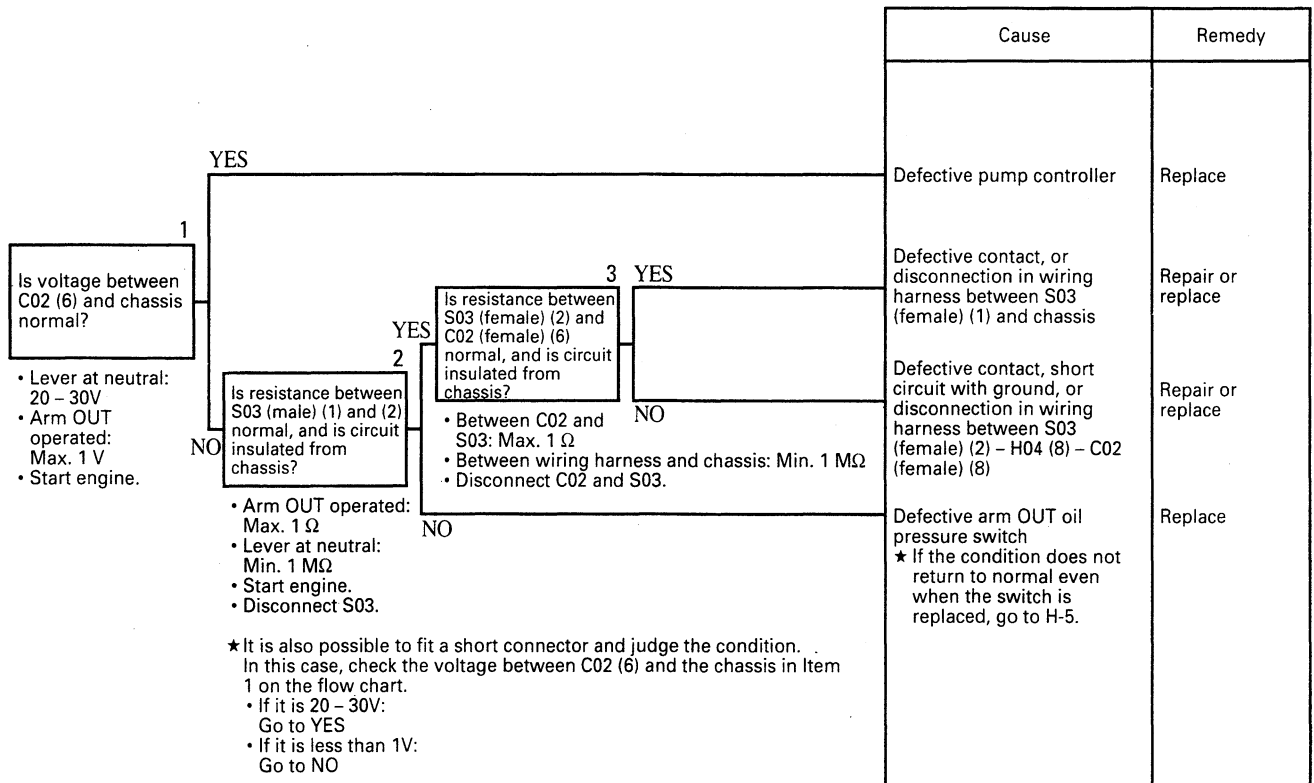

F-6 Related electric circuit diagram

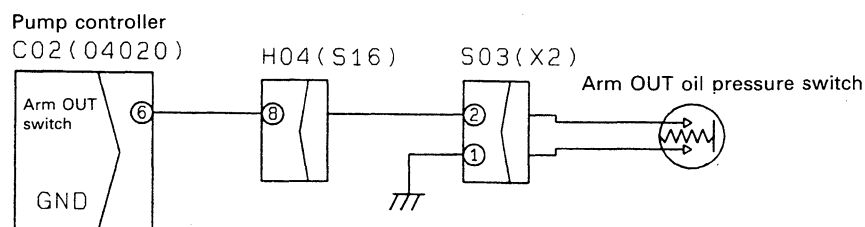

205CA06514

F-7 Bit pattern 21-(1) Bucket CURL oil pressure switch does not light up

- ★ This troubleshooting is carried out when there is still an abnormality, so when disconnecting the connector and inserting the T-adapter, or when removing the T-adapter and returning the connector to its original position, if the monitoring code display returns to normal, the problem has been removed.


⚠ When measuring with the engine running, make sure that the work equipment does not move when the lever is operated.

- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.
- ★ When measuring with the engine stopped, charge the accumulator before starting.

		Cause	Remedy
1 Is voltage between C02 (7) and chassis normal? • Lever at neutral: 20 – 30V • Bucket CURL operated: Max. 1 V • Start engine. YES NO 2 Is resistance between S06 (male) (1) and (2) normal, and is circuit insulated from chassis? • Bucket CURL operated: Max. 1 Ω. • Lever at neutral: Min. 1 MΩ . • Start engine. • Disconnect S06. ★ It is also possible to fit a short connector and judge the condition. In this case, check the voltage between C02 (7) and the chassis in Item 1 on the flow chart. • If it is 20 – 30V: Go to YES • If it is less than 1V: Go to NO 3 Is resistance between S06 (female) (2) and C02 (female) (7) normal, and is circuit insulated from chassis? • Between C02 and S06: Max. 1 Ω • Between wiring harness and chassis: Min. 1 MΩ • Disconnect C02 and S06. YES NO	Defective pump controller	Replace	
	Defective contact, or disconnection in wiring harness between S06 (female) (1) and chassis	Repair or replace	
	Defective contact, short circuit with ground, or disconnection in wiring harness between S06 (female) (2) – H04 (14) – C02 (female) (7)	Repair or replace	
	Defective bucket CURL oil pressure switch ★ If the condition does not return to normal even when the switch is replaced, go to H-5.	Replace	

K20506

F-7 Related electric circuit diagram

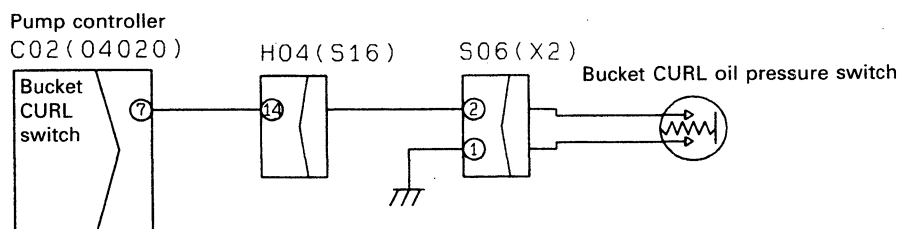


205CA06515

F-8 Bit pattern 21-(2) Bucket DUMP oil pressure switch does not light up

- ★ This troubleshooting is carried out when there is still an abnormality, so when disconnecting the connector and inserting the T-adapter, or when removing the T-adapter and returning the connector to its original position, if the monitoring code display returns to normal, the problem has been removed.


⚠ When measuring with the engine running, make sure that the work equipment does not move when the lever is operated.

- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
 ★ Always connect any disconnected connectors before going on the next step.
 ★ When measuring with the engine stopped, charge the accumulator before starting.

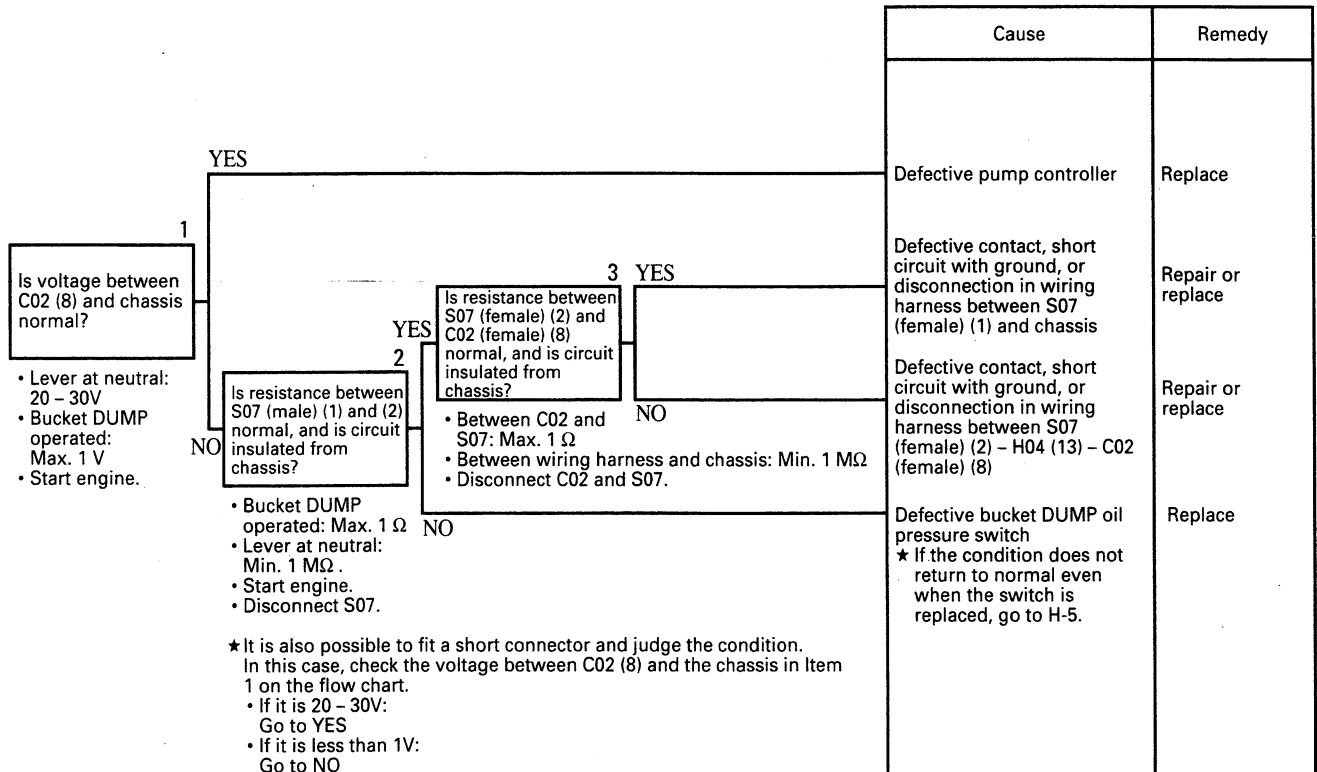

K20506


F-8 Related electric circuit diagram

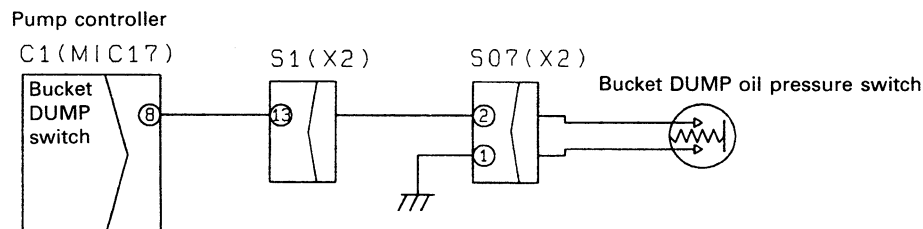

205CA06516


F-9 Bit pattern 21-(3) Swing lock switch does not light up

- ★ This troubleshooting is carried out when there is still an abnormality, so when disconnecting the connector and inserting the T-adapter, or when removing the T-adapter and returning the connector to its original position, if the monitoring code display returns to normal, the problem has been removed.
- ★ If the panel display is normal, go to M-22 When panel swing lock lamp does not light up.
- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.

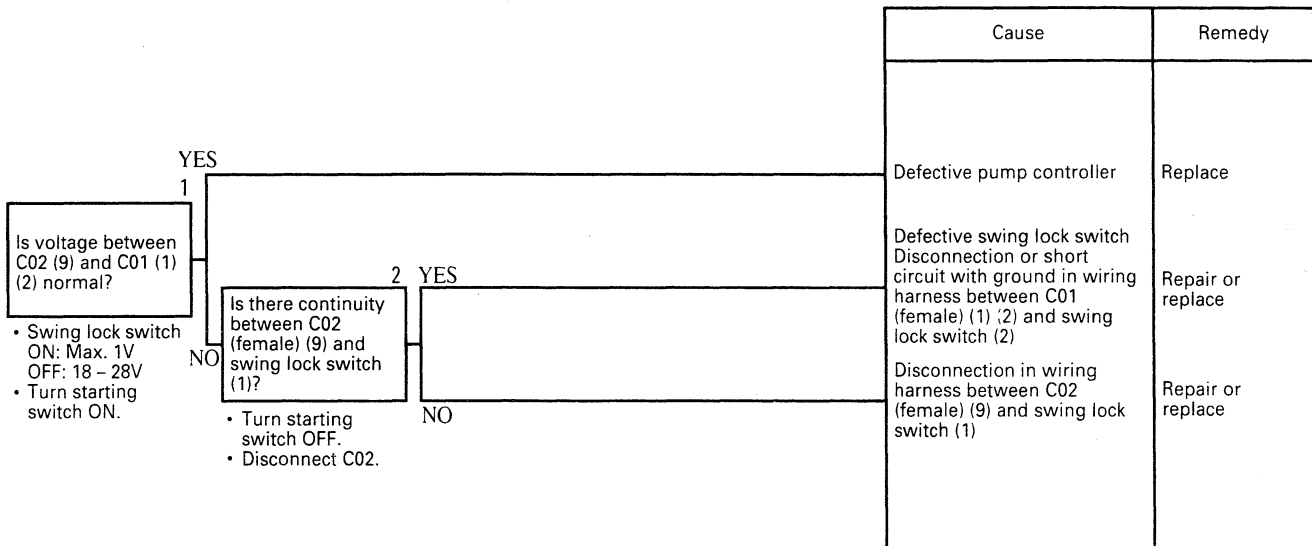

K20506


F-9 Related electric circuit diagram

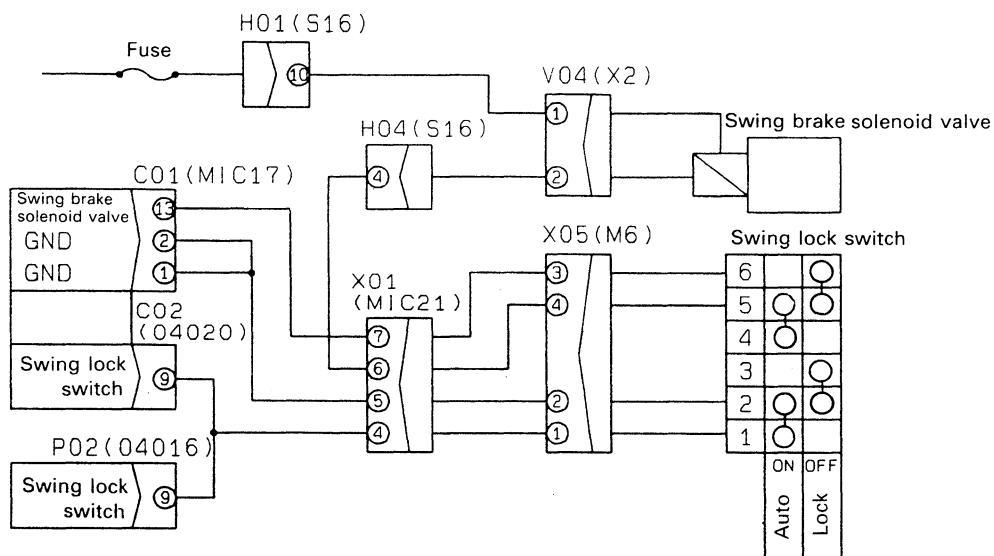


205CA06517

F-10 Engine speed is not displayed in monitoring code 10 (abnormality in engine speed sensor system)

- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.

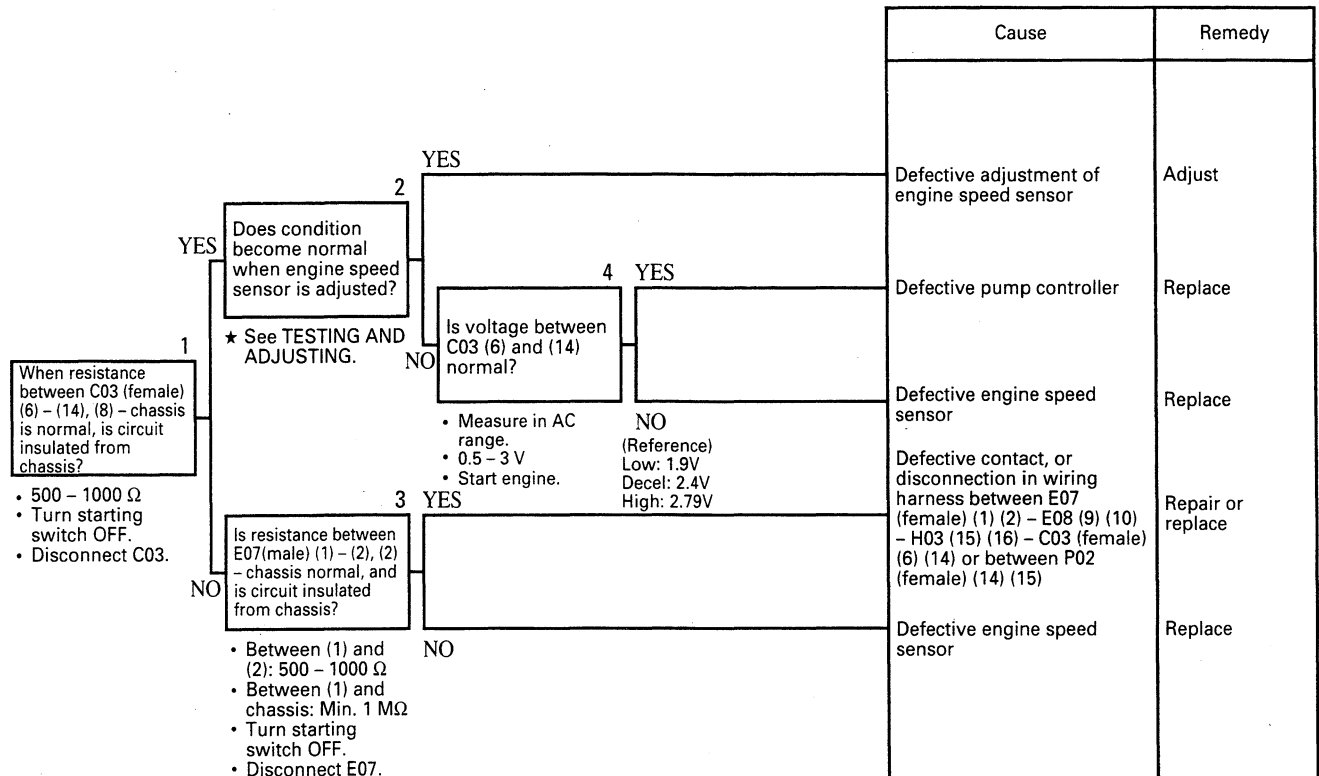


F-10 Related electric circuit diagram

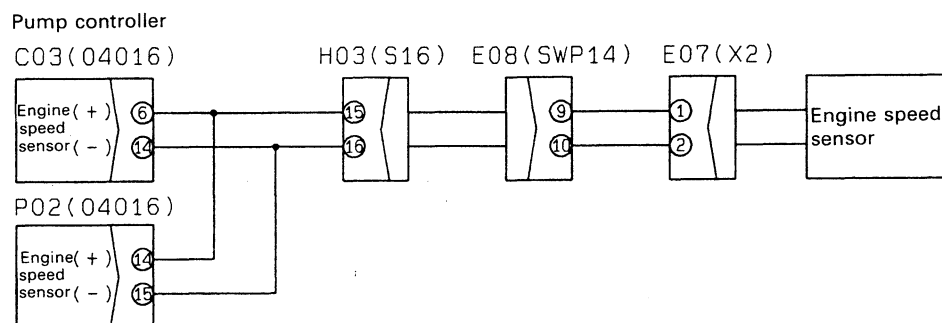


205CA06518

F-12 Bit pattern 22-(6) L.H. knob switch does not light up

- ★ This troubleshooting is carried out when there is still an abnormality, so when disconnecting the connector and inserting the T-adaptor, or when removing the T-adaptor and returning the connector to its original position, if the monitoring code display returns to normal, the problem has been removed.
- ★ Set the working mode to G/O or H/O and the power max./ swift slow-down switch to the power max. position.
- ★ When fuse 5 is not blown.
- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.

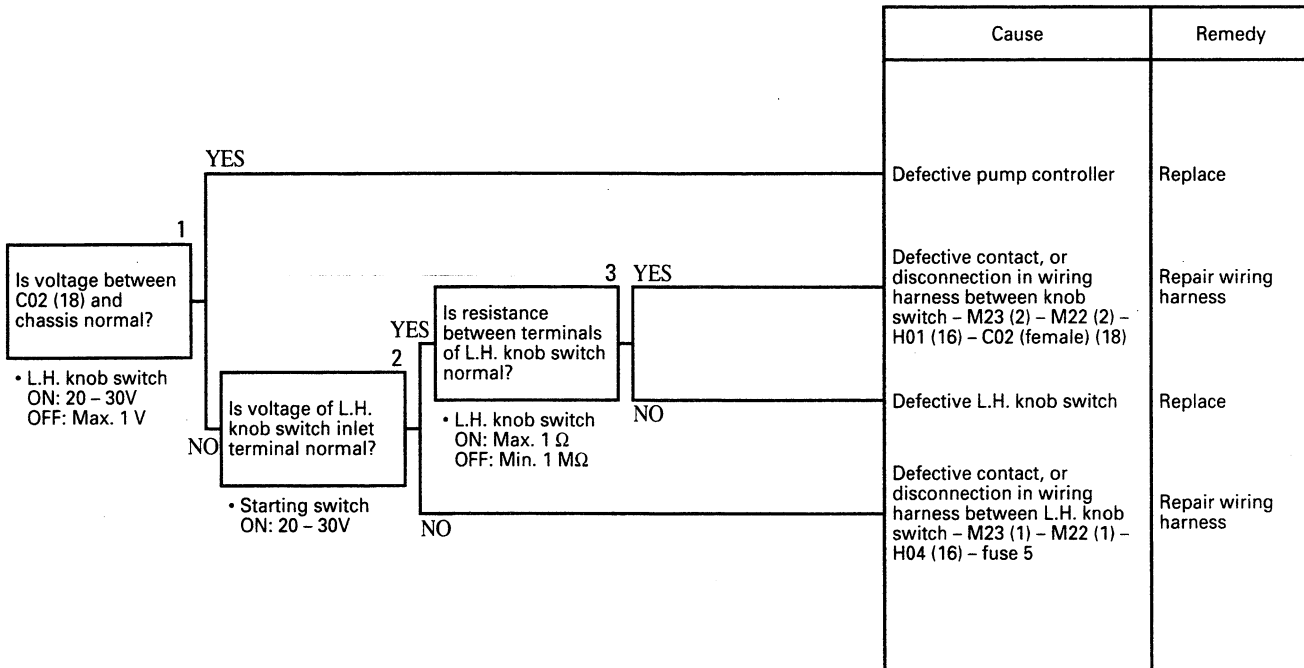

F-12 Related electric circuit diagram

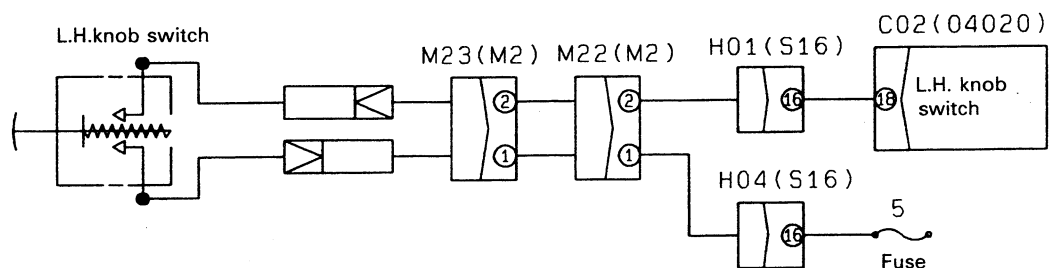

205CA06520

PUMP MERGE-DIVIDER LOGIC

Category		Flow divided		Flow merged		Flow divided		Flow merged	
Mode		Boom/swing priority selection mode OFF				Boom/swing priority selection mode ON			
		Pump merge-divider solenoid ON		Pump merge-divider solenoid OFF		Pump merge-divider solenoid ON		Pump merge-divider solenoid OFF	
Working mode	L/O	• All operations		×		•Independent operation of travel •Independent operation of boom, arm, bucket, service, swing with travel OFF, and compound operation of each of these		Compound operation with travel	
	F/O	With travel ON • Independent operation of travel • Independent operation of swing Operations A, B and C with travel OFF and swing lock switch OFF		With travel ON •Except independent operation of travel (compound operation with travel) •Except independent operation of swing (compound operation with travel) Operations except operations A, B and C with travel OFF and swing lock switch OFF					
		A	Arm IN	Except operations A, B, C	•Compound operation with travel •Swing + arm IN •Swing + arm OUT •Swing + boom RAISE •Independent operation of boom •Independent operation of arm •Independent operation of bucket •Arm IN + bucket CURL with pressure less than 14.7 MPa (150 kg/cm ²) or more than 24.5 MPa (250 kg/cm ²) (except ★) •Arm OUT + bucket DUMP and pressure less than 3.92 MPa (40kg/cm ²) •Arm OUT + service and pressure less than 19.6 MPa (200kg/cm ²) •All others				
		B	•Swing + boom LOWER •Swing + bucket CURL •Swing + bucket DUMP •Swing + service •Arm IN + bucket CURL when condition is ★ •Arm OUT + bucket DUMP and front or rear pump pressure more than 3.92 MPa (40 kg/cm ²) •Arm OUT + service and front or rear pump pressure more than 19.6MPa (200 kg/cm ²)						
		C	•For HYPER GX : Boom priority 2 mode + boom RAISE + arm OUT						
	G/O H/O	With travel ON • Independent operation of travel • Independent operation of swing •Operations B and C with travel OFF and swing lock switch OFF		Except operation D					
LS select	With swing lock OFF: •Separated for swing + travel, boom RAISE, arm OUT (solenoid ON), not separated for other operations				With swing lock OFF: •Separated for swing + travel (solenoid ON), not separated for other operations (solenoid OFF)				

★ The pressure of the front or rear pumps is as follows:
 When pressure rises: 24.5 MPa (250 kg/cm²), When pressure goes down: 14.7 MPa (150 kg/cm²)
 (For details, see Fig. 1)


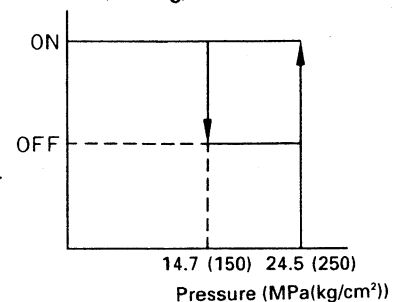


Fig. 1 205F06288

H-1 Speeds of all work equipment, swing, travel are slow or lack power

- ★ Carry out troubleshooting with the swing priority mode OFF and in the H/O mode.
- ★ Check that no abnormal noise is being generated from the main pump before carrying out troubleshooting.
(If there is any abnormal noise, carry out troubleshooting for H-4.)

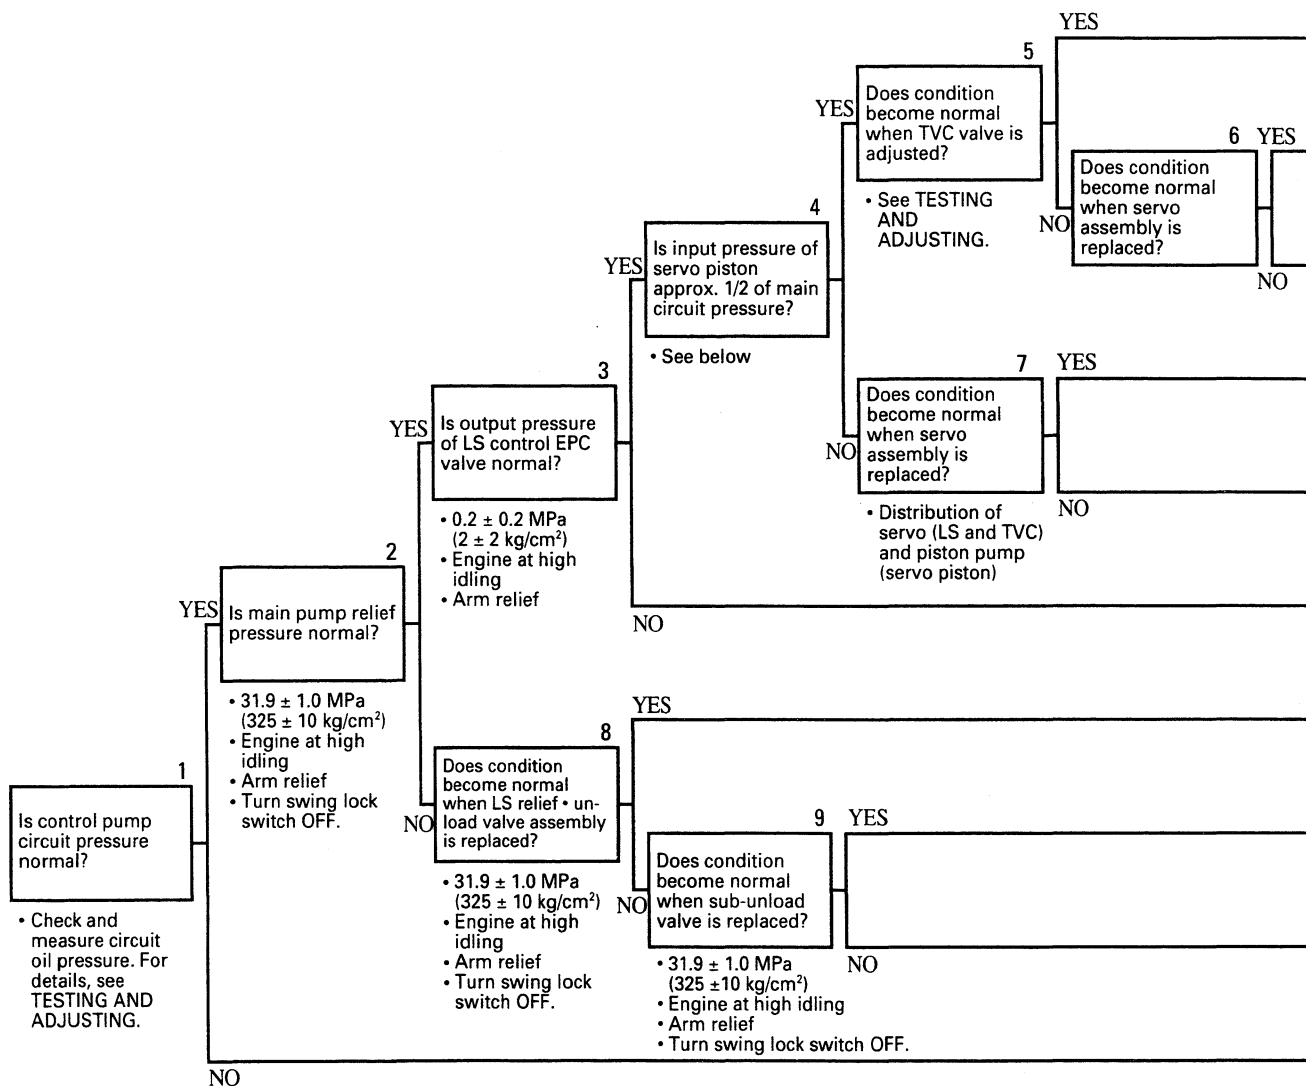

K20506


- ★ Measuring servo piston inlet port pressure
Measure the input pressure to the large diameter end of the servo piston when the pressure rises and the arm is relieved. (Approx. 17.64 MPa (Approx. 180 kg/cm²))
[Basically, the pressure at the large diameter end is approx. 1/2 of the small diameter end. For details, see TESTING AND ADJUSTING.]

K20506

	Cause	Remedy
	Defective adjustment of TVC valve	Adjust
	Defective servo assembly	Repair or replace
	Defective piston pump	Repair or replace
	Defective servo assembly	Repair or replace
	Defective piston pump (servo piston)	Correct or replace
	Defective operation of LS control EPC solenoid valve	Replace
	Defective operation of LS relief • main unload valve assembly	Replace
	Defective operation of sub-unload valve	Repair or replace
	Defective operation of main relief valve	Replace
	Defective hydraulic equipment in control pump circuit (See TESTING AND ADJUSTING)	Adjust or replace

H-2 There is excessive drop in engine speed, or engine stalls

- ★ Carry out troubleshooting with the swing priority mode OFF and in the H/O mode.
- ★ Check that the main relief pressure is normal.

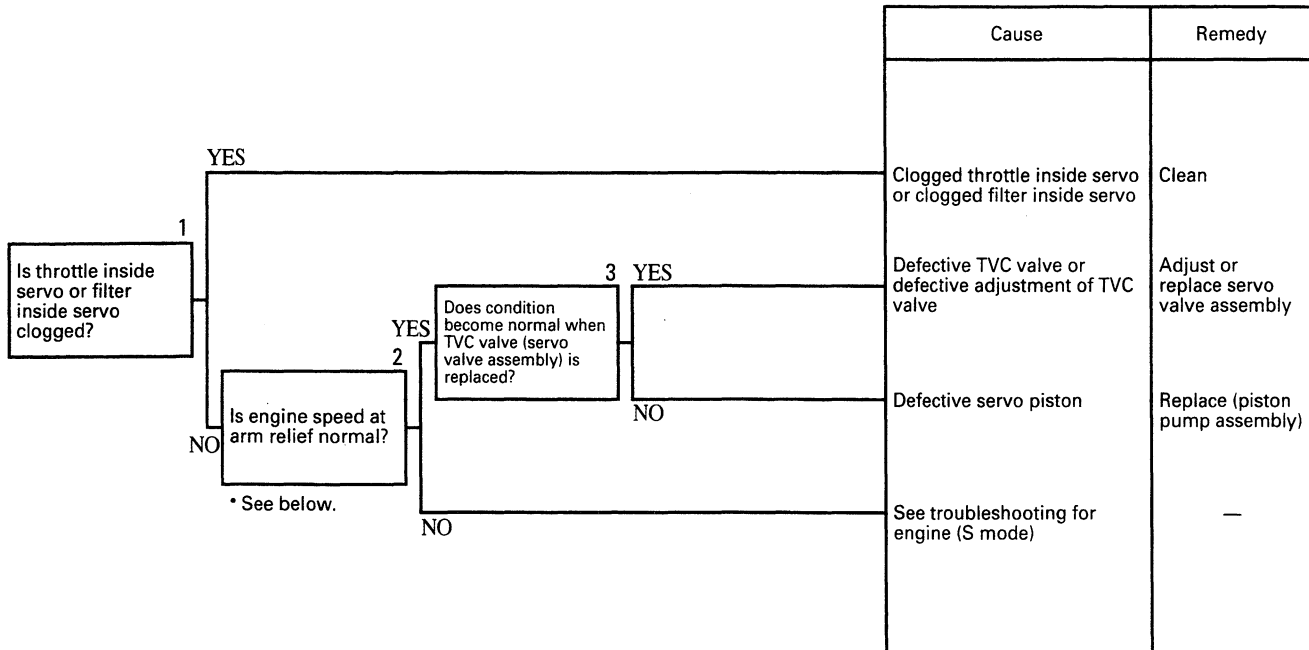

- ★ Replace the servo valve assembly on the defective side with a new part, and if the engine speed is lower than the reference value below, carry out troubleshooting for S mode. If it is higher, it can be judged that the TVC valve (servo valve assembly) is defective, so replace it.


Engine speed (reference) at arm relief when engine and pump are normal

Model	Engine speed at arm relief	Conditions
PC210	Min. 2050 rpm	•Engine at high idling •Swing lock switch ON
PC240	Min. 2150 rpm	•Measure the speed at the point where the drop in engine speed is greatest when the arm cylinder is at end of stroke and the lever is operated slowly to the full position.


TROUBLESHOOTING

H-3, H-4

H-3 No work equipment, travel, swing move

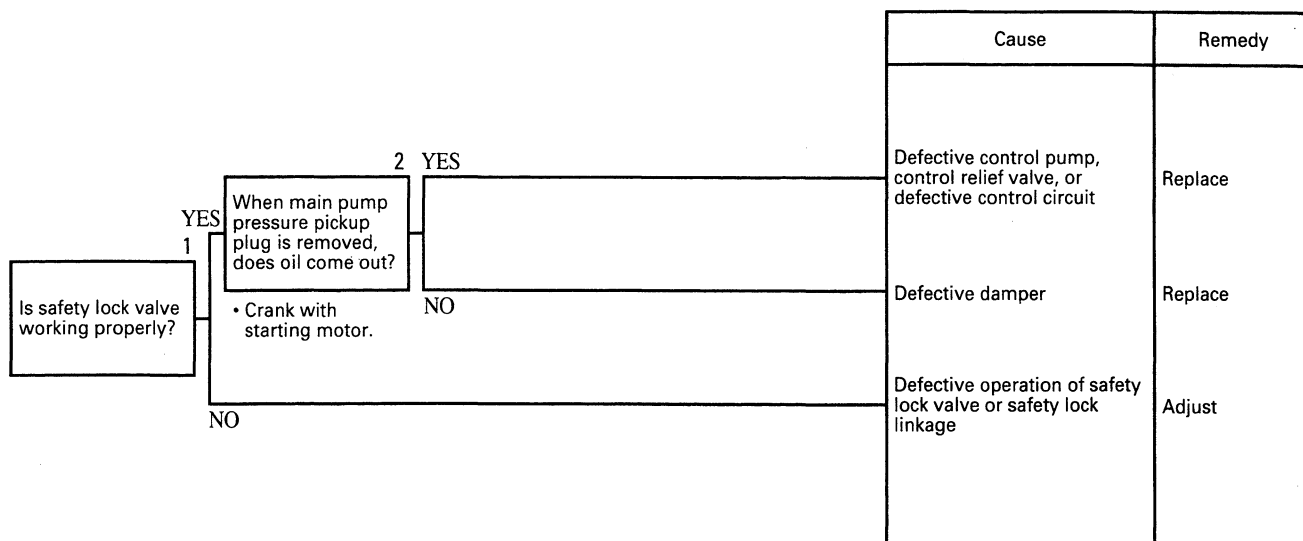

H-4 Abnormal noise generated (around pump)

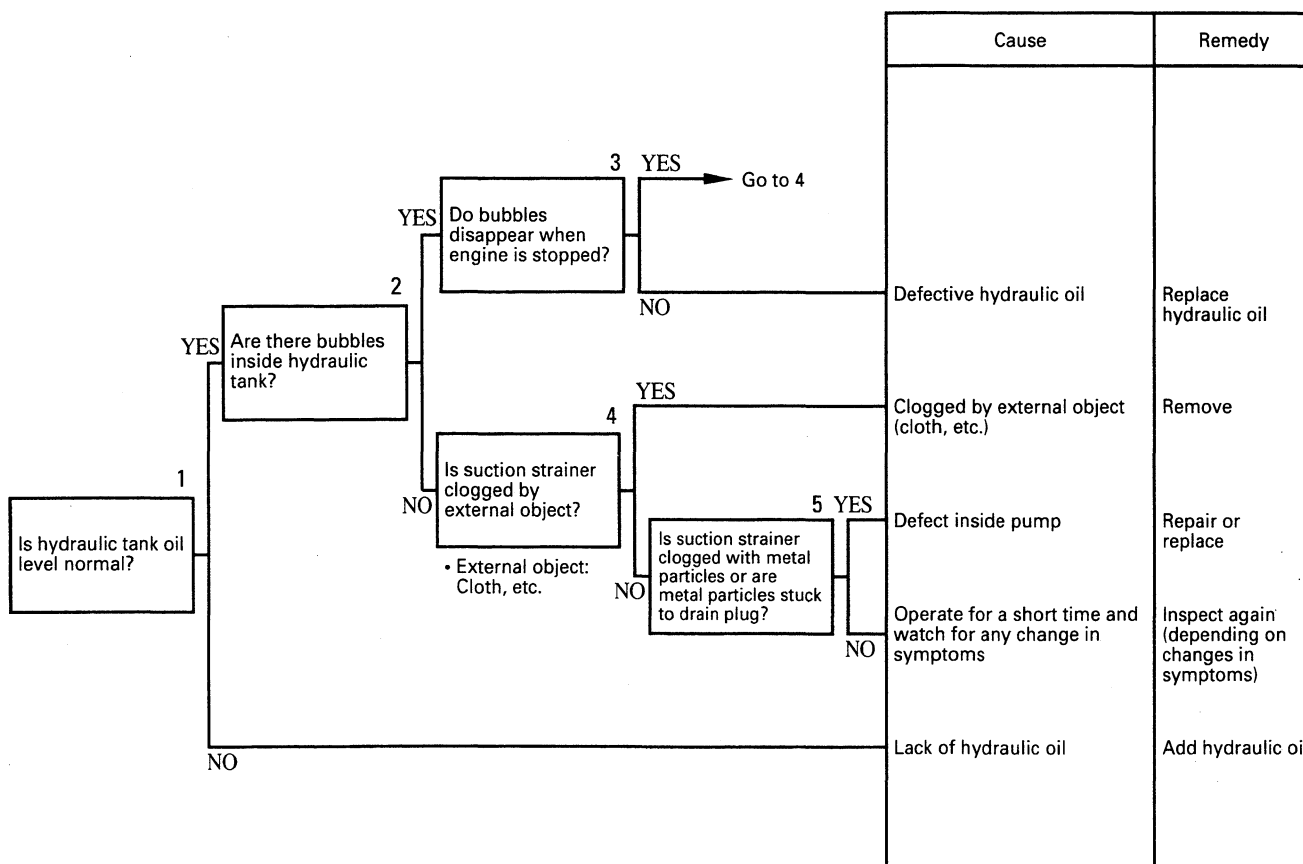

K20506

H-5 Auto-deceleration does not work (when PPC shuttle valve is cause)

- ★ The control pressure for the travel and swing passes through the PPC shuttle valve and is supplied to the oil pressure switch.

		Cause	Remedy
Does condition become normal when oil pressure switch is replaced? 1 YES	YES	Defective oil pressure switch	Replace
	NO	Defective operation of PPC shuttle valve in applicable system (swing or travel)	Repair or replace


H-6 Fine control ability is poor or response is poor

		Cause	Remedy
Is throttle in LS circuit clogged? 1 YES	YES	Clogged throttle in LS circuit	Clean
	NO	Defective servo valve assembly (LS valve), or defective servo piston	Replace

K20506

H-7 Boom is slow or lacks power

- ★ When travel and swing speeds are normal.
- ★ Carry out troubleshooting with the swing priority mode OFF and in the H/O mode.

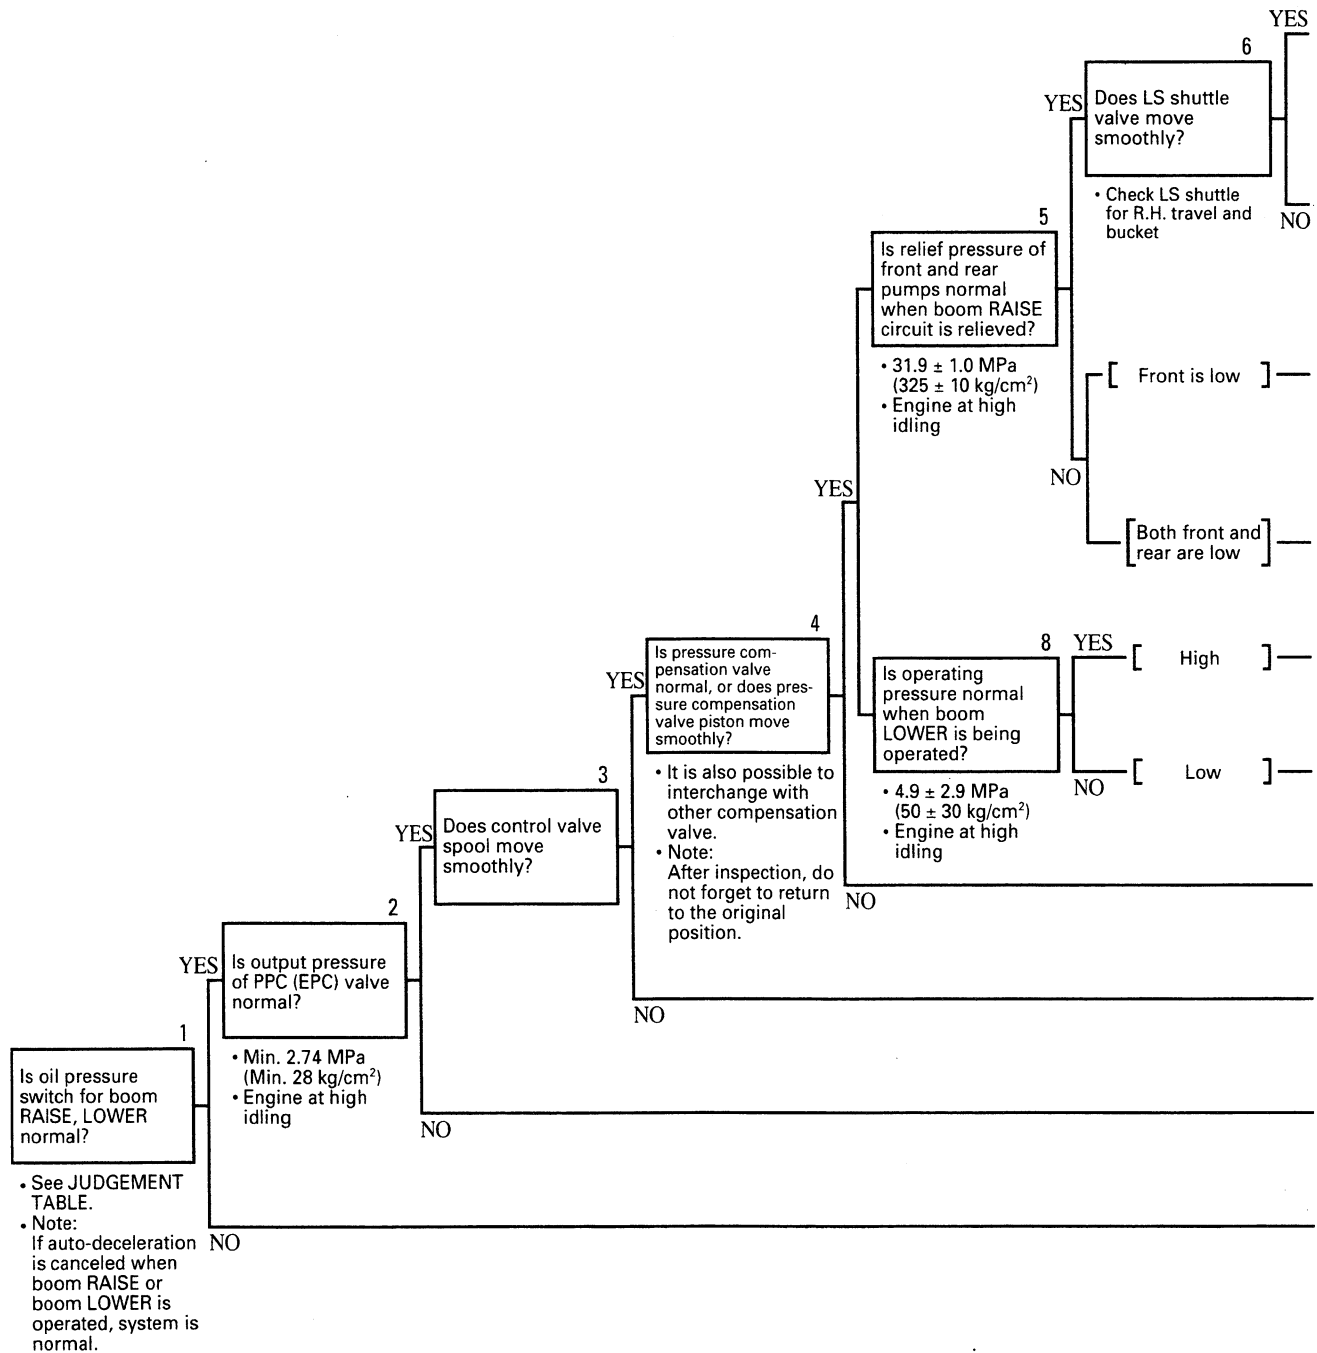


K20506

		Cause	Remedy
7 YES Is operating pressure normal when boom RAISE is being operated? NO • PC210: 14.7 ± 1.5 MPa (150 ± 15 kg/cm²) • PC240: 16.7 ± 1.5 MPa (170 ± 15 kg/cm²) • Engine at high idling • At max. reach, no load		Defective boom cylinder piston packing	Repair or replace
		Defective operation of boom holding valve	Repair or replace
		Defective operation of LS shuttle valve (LS shuttle for R.H. travel or bucket)	Repair or replace
9 YES Is pump merge-divider solenoid valve output pressure normal? NO • When boom is raised: 0 MPa (0 kg/cm²)		Defective operation of main merge-divider valve or LS merge-divider valve	Repair or replace
		Defective operation of pump merge-divider solenoid valve	Repair or replace
		Defective boom holding valve or suction valve of control valve	Replace
		Defective operation of boom holding valve	Repair or replace
		Defective operation of boom regeneration valve	Repair or replace
		Defective operation of pressure compensation valve or pressure compensation valve piston	Repair or replace
		Defective operation of control valve spool	Repair or replace
		Defective PPC valve	Replace
		Defective boom RAISE or boom LOWER oil pressure switch	Replace

K20506

H-8 Arm is slow or lacks power

- ★ When travel and swing speeds are normal.
- ★ Carry out troubleshooting with the swing priority mode OFF and in the H/O mode.

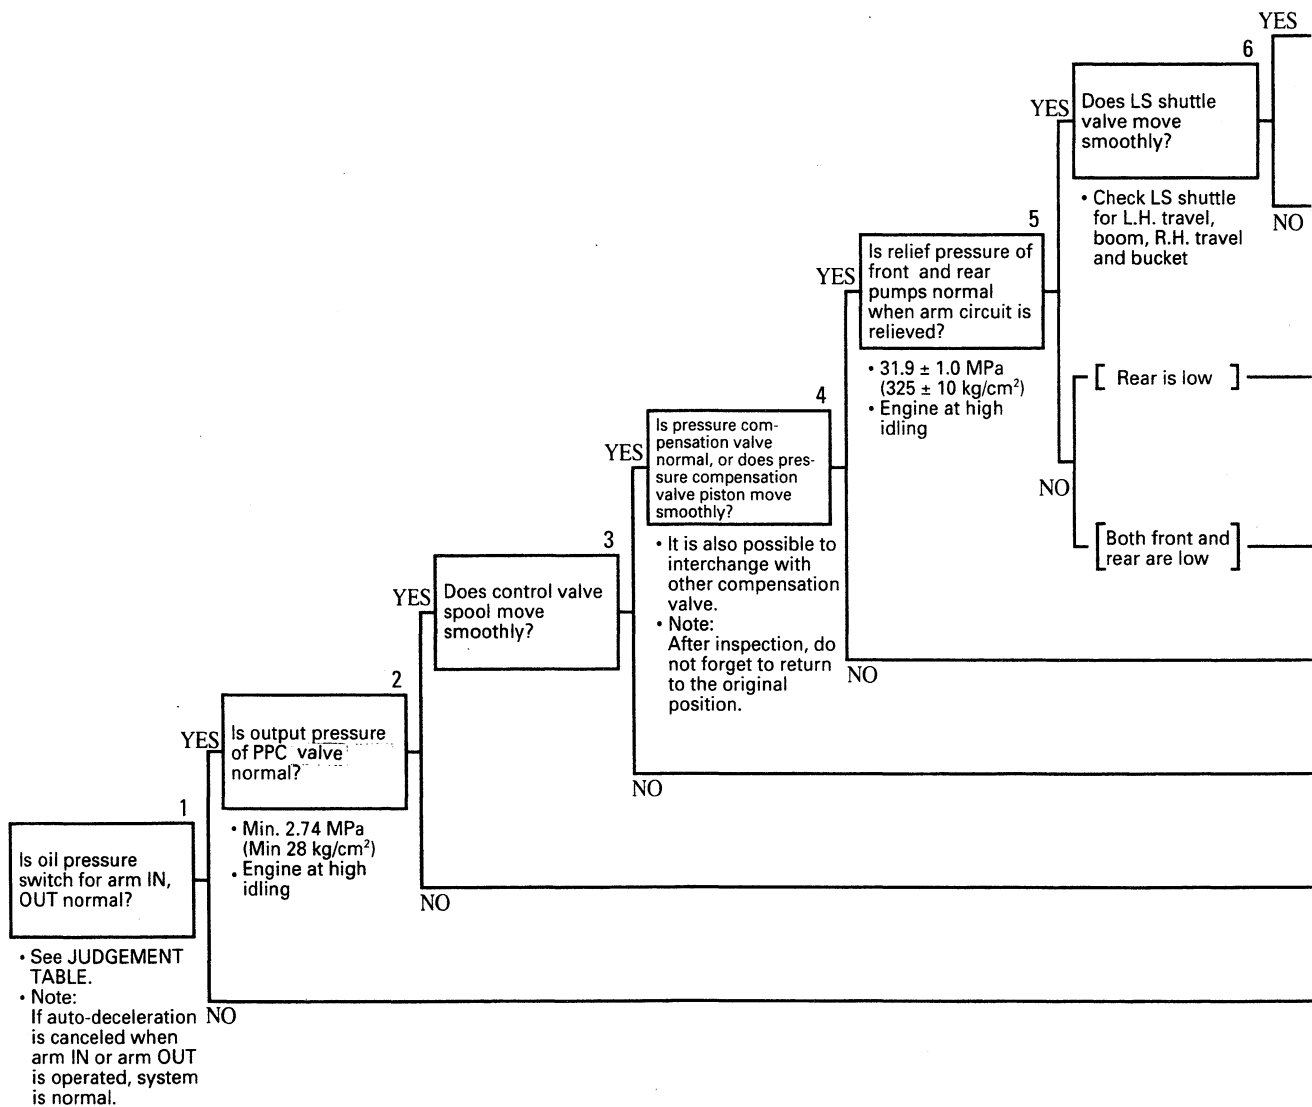


K20506

		Cause	Remedy
7 YES Is leakage from arm cylinder normal? • Max. 20 cc/min • Engine at high idling		Defective operation of arm regeneration valve or arm counterbalance valve	Repair or replace
	NO	Defective arm cylinder piston packing	Repair or replace
8 YES Is pump merge-divider solenoid valve output pressure normal? • 0 MPa (0 kg/cm²) • Arm lever operated • Engine at high idling		Defective operation of LS shuttle valve (LS shuttle for L.H. travel, boom, R.H. travel or bucket)	Repair or replace
		Defective operation of main merge-divider valve or LS merge-divider valve	Repair or replace
	NO	Defective operation of pump merge-divider solenoid valve	Repair or replace
		Defective operation of safety-suction valve	Replace
		Defective operation of pressure compensation valve or pressure compensation valve piston	Repair or replace
		Defective operation of control valve spool	Repair or replace
		Defective PPC valve	Replace
		Defective arm IN or arm OUT oil pressure switch	Replace

K20506

H-9 Bucket is slow or lacks power

- ★ When travel and swing speeds are normal.
- ★ Carry out troubleshooting with the swing priority mode OFF.

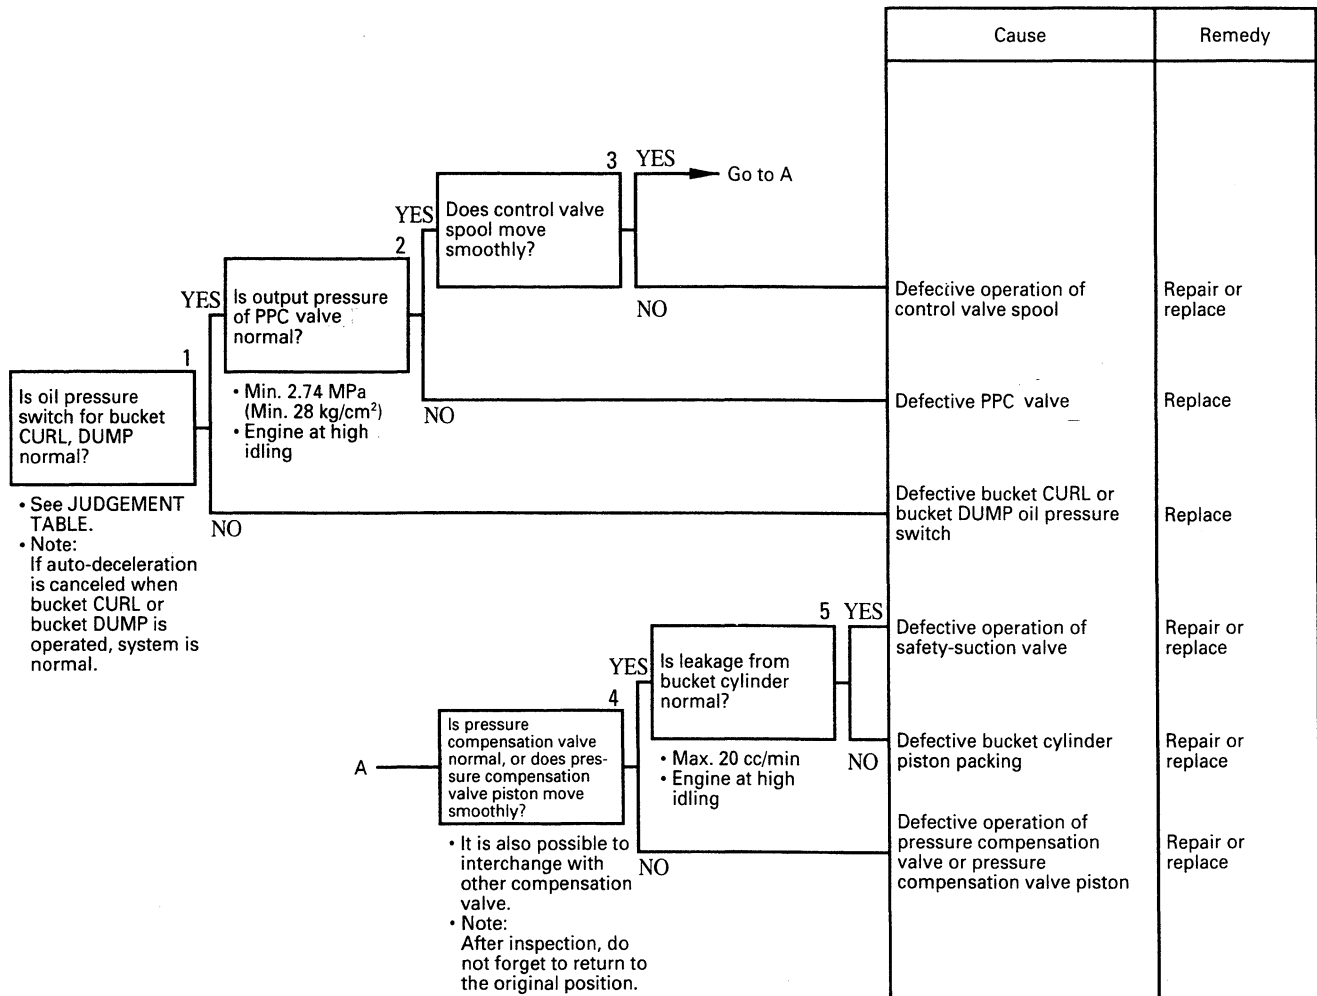

K20506

H-10 Work equipment (boom, arm, bucket) does not move (but travel and swing are normal)

★ When boom, arm, and bucket are each operated independently.


		Cause	Remedy
1 YES Is output pressure of PPC valve normal? • Min. 2.74 MPa (Min. 28 kg/cm²) • Engine at high idling	YES	Defective control valve spool	Repair or replace
	NO	Defective PPC valve	Replace

H-11 Excessive hydraulic drift (boom, arm, bucket)

		Cause	Remedy	
1 Does speed of downward movement become faster when lever is operated? • See TESTING AND ADJUSTING. • It is also possible to measure leakage of cylinder. • Max. 20 cc/min • At relief • Engine at high idling	YES	Defective hydraulic cylinder piston packing	Replace	
	2 Does condition become normal when safety-suction valve is interchanged?	YES	Defective operation of safety-suction valve	Replace
		3 Is slipper seal of pressure compensation valve free of damage? Or does pressure compensation valve piston move smoothly? • It is also possible to interchange with other compensation valve. • Note: After inspection, do not forget to return to the original position.	YES	Go to A
	A [Arm, bucket] [Boom]		NO	Damaged slipper seal of pressure compensation valve, or defective operation of pressure compensation valve piston
				Defective control valve spool
			Defective operation of boom holding valve	Repair or replace

K20506

H-12 Excessive time lag (engine at low idling)

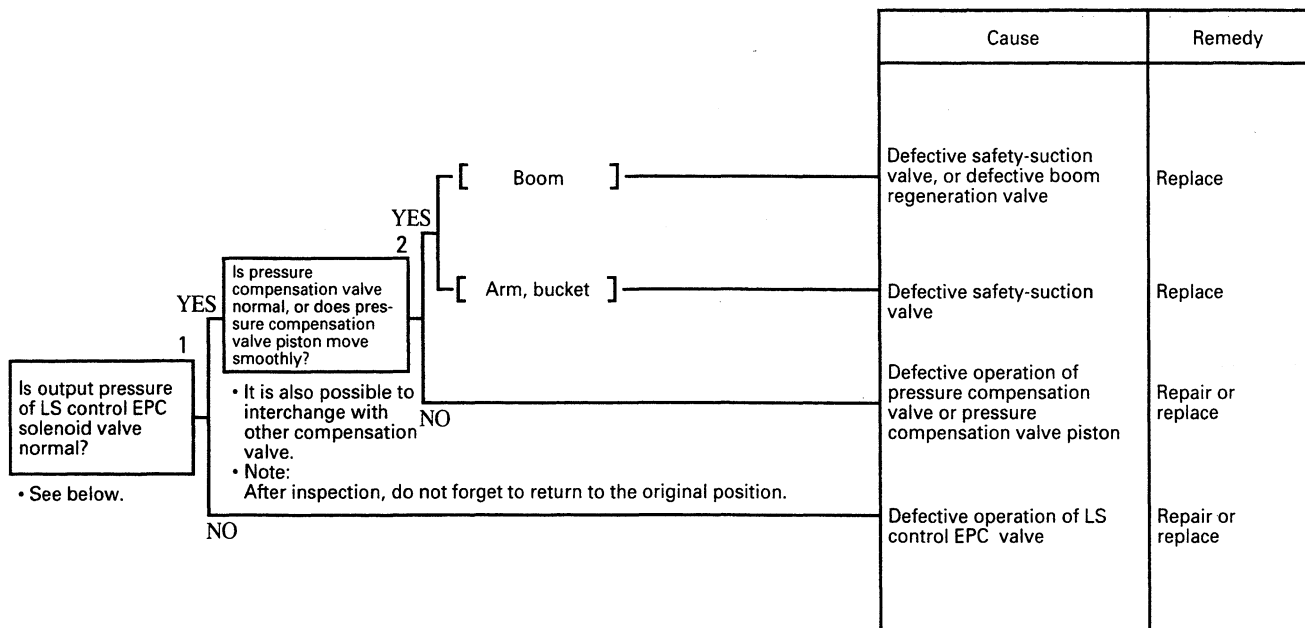


★ Output pressure of LS control EPC solenoid

Approx. 2.06 MPa (Approx. 21kg/cm²) output from the LS control EPC solenoid when the engine is at low idling (approx. 1300 rpm or below) regardless of the working mode.


H-13 Lack of power when pressure rises

- ★ If condition is normal except when pressure rises
- ★ Carry out troubleshooting with the swing priority mode OFF.

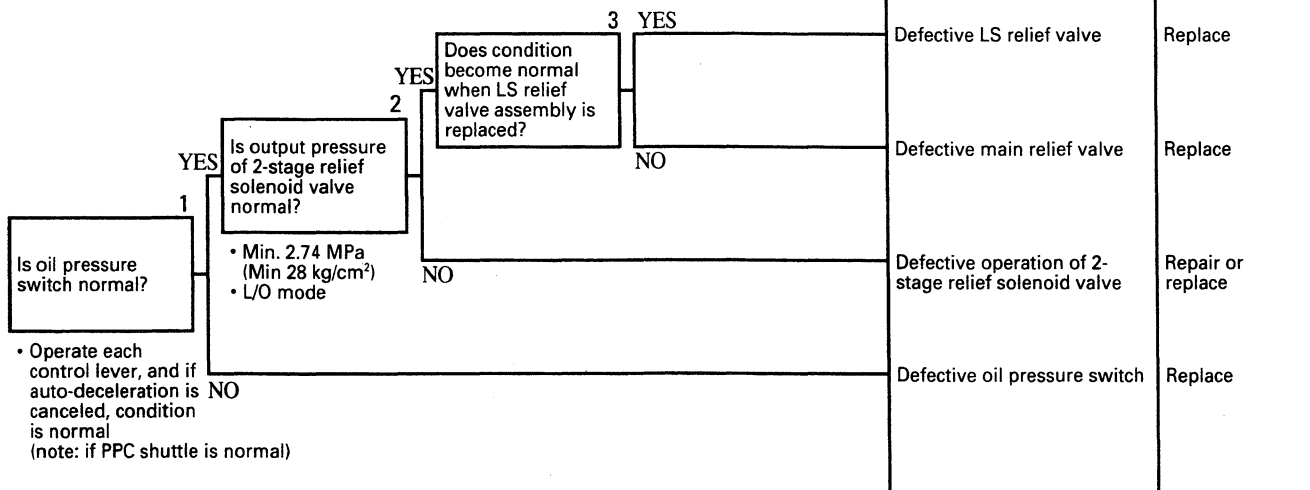


K20506

H-14 Other equipment moves when single circuit is relieved

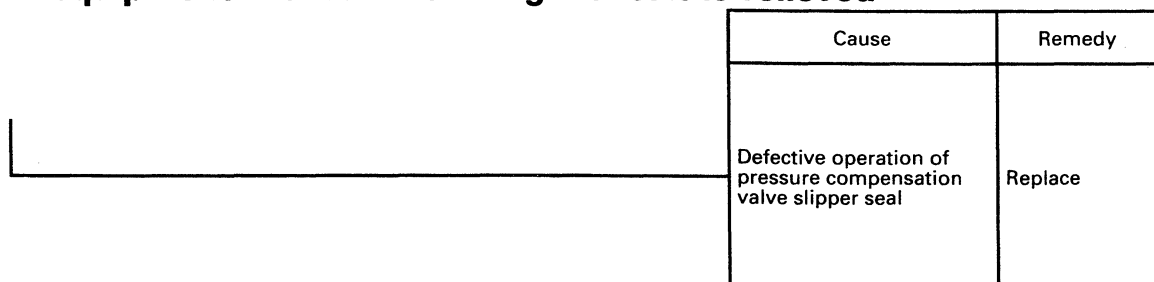

- ★ The slipper seal in the pressure compensation valve of the circuit that moved is defective.

H-15 In L/O, F/O modes, work equipment speed is faster than specified speed

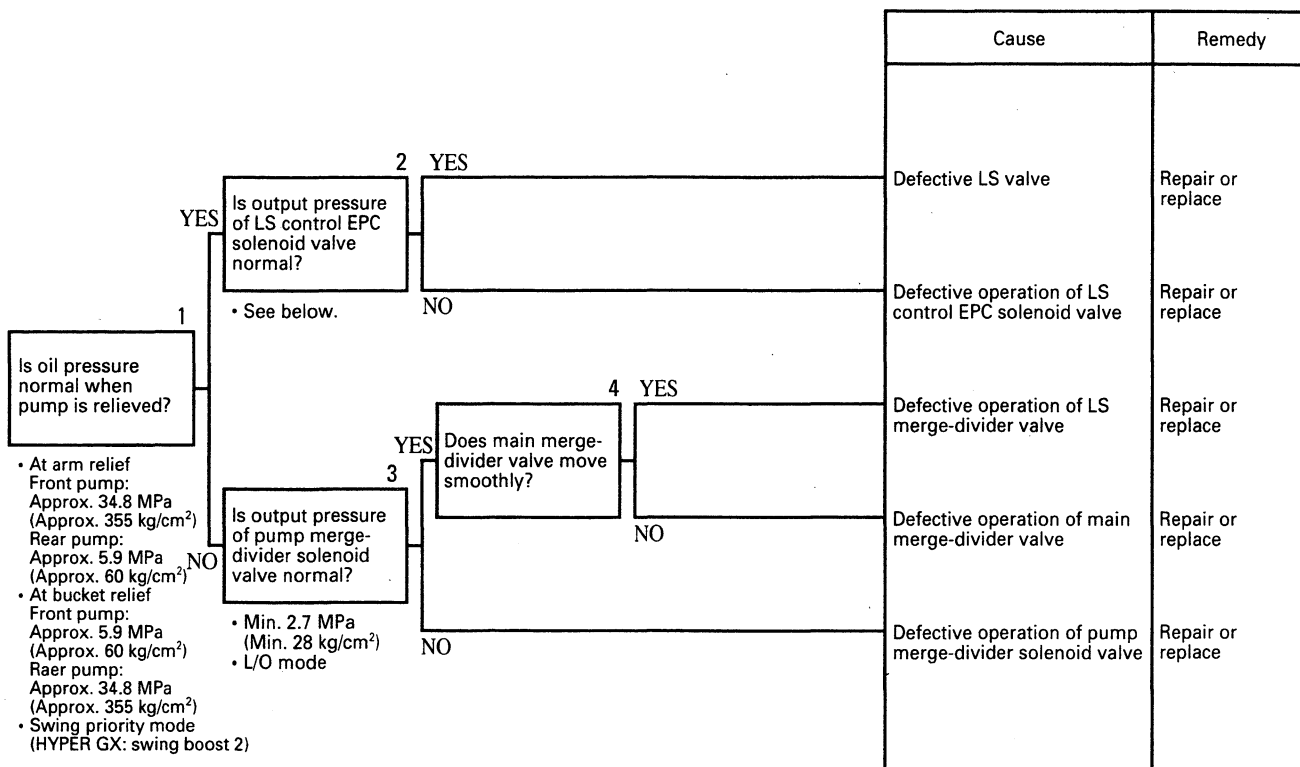

★ Output pressure of LS control EPC solenoid (travel OFF)

- Approx. 2.06 MPa (Approx. 21 kg/cm²) is output from the LS control EPC solenoid when the engine is at low idling (approx. 1300 rpm or below) regardless of the working mode.

H-16 In compound operations, work equipment with larger load is slow

Cause	Remedy
Defective operation of pressure compensation valve	Replace (replace pressure compensation valve on side where load is lower)

	Combination of compound operation	Side where load is larger
1	Boom RAISE + arm IN	Boom RAISE
2	Boom RAISE + arm OUT	Arm OUT
3	Boom RAISE + bucket CURL	Boom RAISE
4	Arm OUT + bucket CURL	Arm OUT
5	Boom LOWER + arm OUT	Arm OUT

H-17 In swing + boom RAISE, boom RAISE is slow

- ★ If swing and boom RAISE work normally when operated independently.
- ★ Carry out troubleshooting with the swing priority mode OFF.

		Cause	Remedy
Is output pressure of LS select solenoid valve normal? • Min. 2.74 MPa (Min. 28 kg/cm²) • Operate boom RAISE (operate lever slightly)	1 YES	Defective operation of LS select valve	Repair or replace
	2 YES	Defective operation of LS select solenoid valve	Repair or replace
	NO	Defective operation of LS shuttle valve (LS shuttle for boom RAISE, LS select)	Repair or replace

H-18 In swing + arm OUT, arm OUT is slow

- ★ See H-17
- (If the operation is normal when the swing and arm OUT are operated independently, carry out troubleshooting with the swing priority mode OFF. If the Cause column shows that there is defective operation of the LS shuttle valve, the cause is in the shuttle valve for the arm OUT and LS select.


H-19 In swing + travel, travel speed drops excessively

- ★ See H-17
- (If the operation is normal when the swing and travel are operated independently, carry out troubleshooting with the swing priority mode OFF. If the Cause column shows that there is defective operation of the LS shuttle valve, the cause is in the shuttle valve for the LS select.

H-20 Travel deviation

★ Carry out troubleshooting in the H/O mode.

a) When there is deviation in normal travel

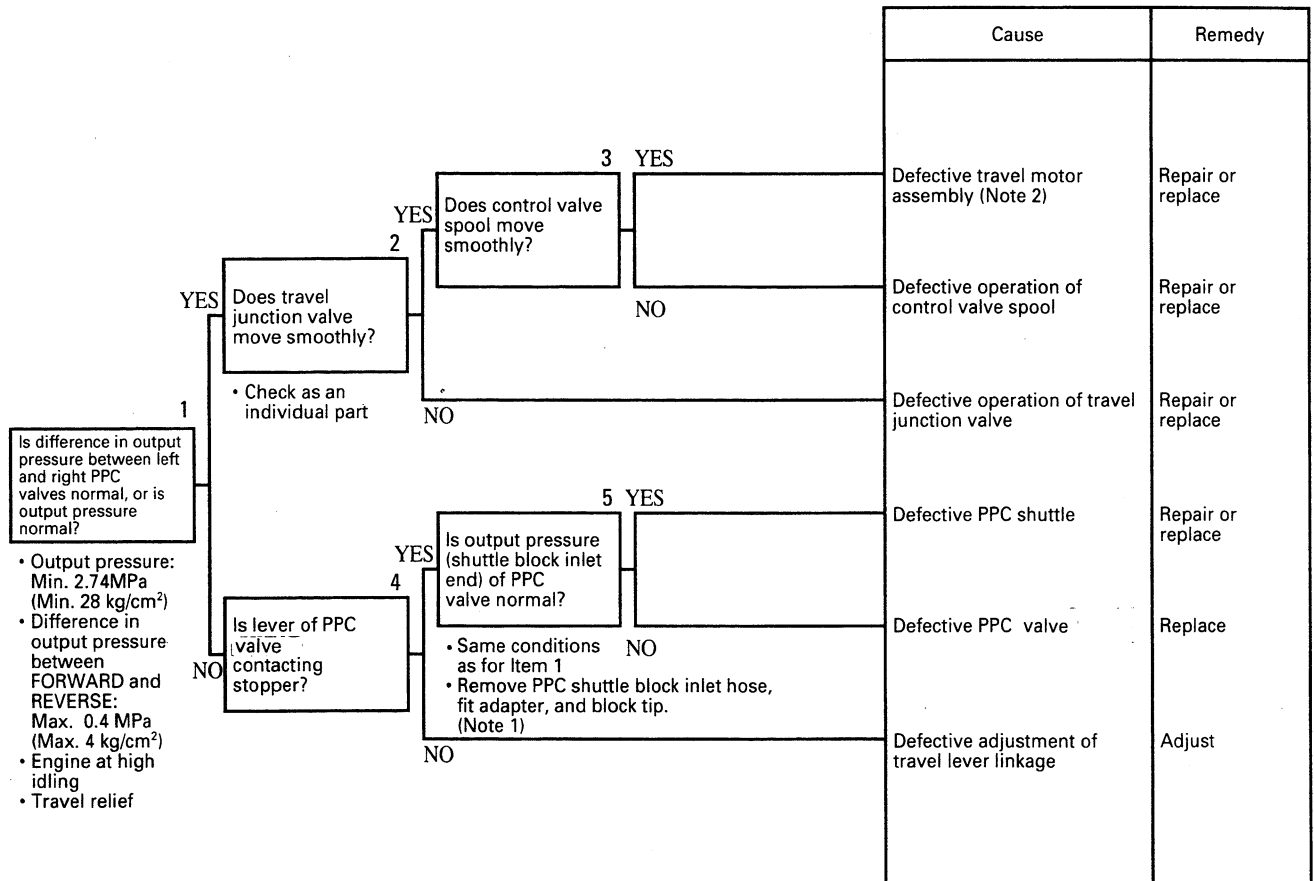

Note 1: If the adapter for blocking the circuit is not available, interchange swing with one of arm (IN), boom (LOWER), or bucket (CURL, DUMP).


Note 2: When measuring the speed of the travel motor under no load ⇨ Remove connector of LS control EPC valve solenoid, and measure travel speed in Lo and Hi.

b) Excessive travel deviation when starting

Cause	Remedy
Defective operation of travel counterbalance valve	Repair or replace

H-21 Travel speed is slow

- ★ Check that the spool of the travel PPC valve is moving the full stroke before carrying out troubleshooting.
- ★ Carry out troubleshooting in the H/O mode.

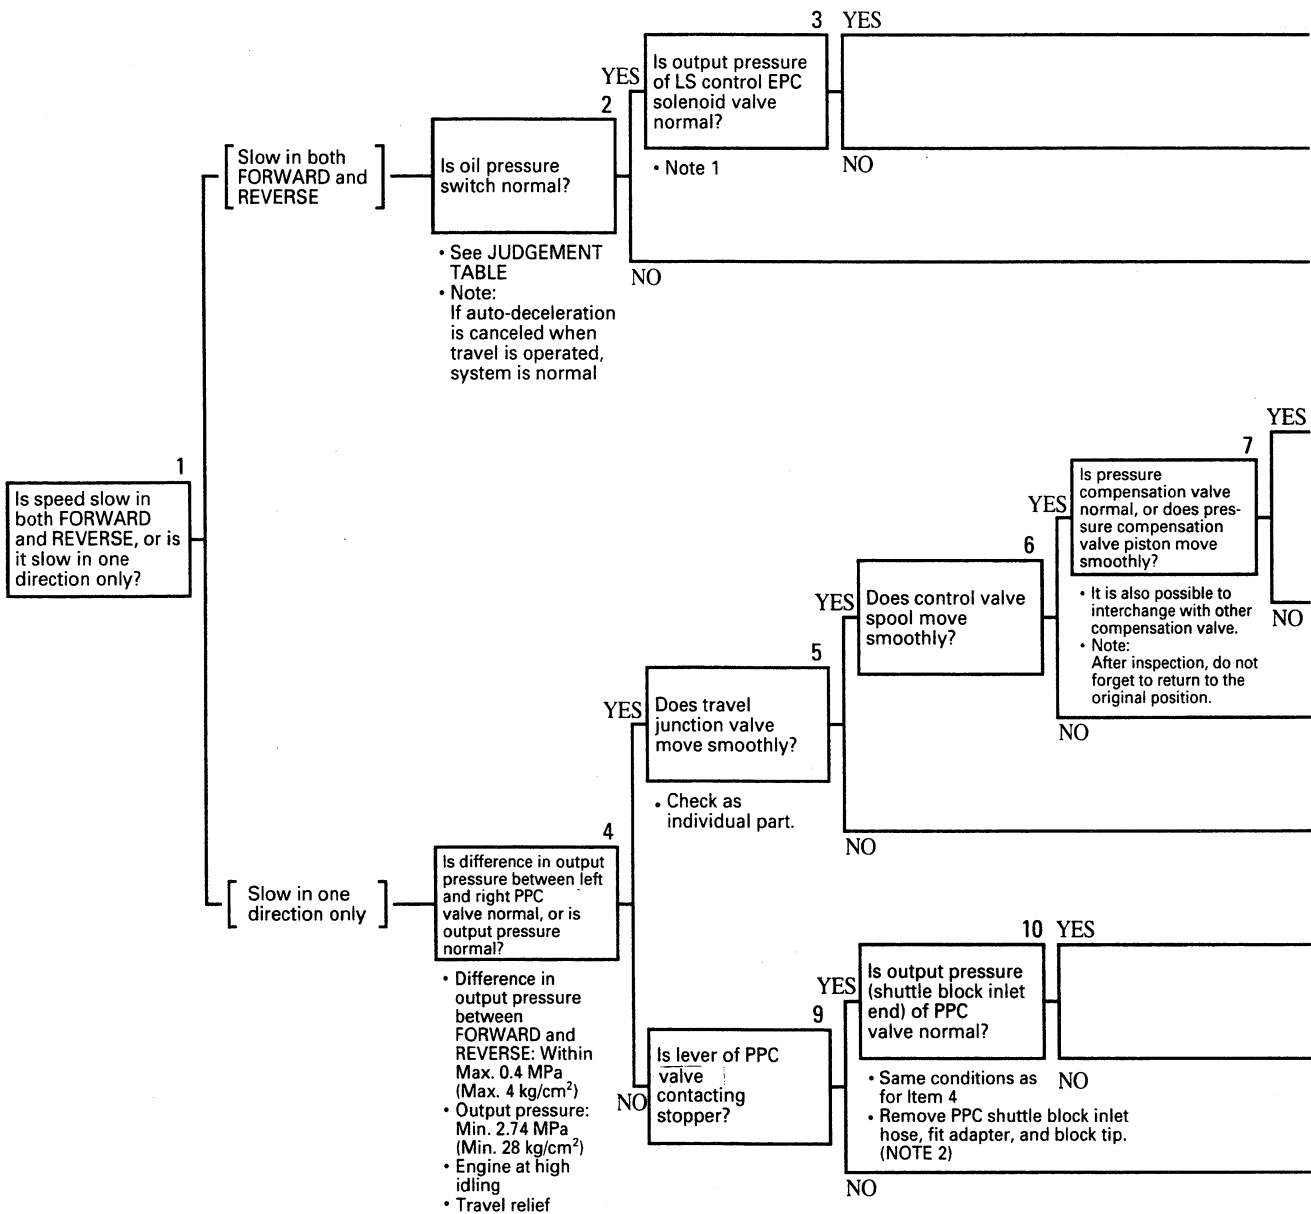

K20506

Note 1: Output pressure of LS control EPC solenoid (travel OFF) Approx. 2.06 MPa. (Approx. 21 kg/cm²) is output from the LS control EPC solenoid when the engine is at low idling (approx. 1300 rpm) regardless of the working mode.


Note 2: When measuring the speed of the travel motor under no load ⇨ Remove connector of LS control EPC valve solenoid, and measure travel speed in Lo and Hi.

		Cause	Remedy
		Defective operation of LS shuttle valve (for boom, bucket)	Repair or replace
		Defective operation of LS control EPC solenoid valve	Repair or replace
		Defective travel oil pressure switch	Replace
8 YES Does condition become normal when suction valve is replaced? NO		Defective operation of control valve suction valve	Repair or replace
		Defective travel motor assembly	Repair or replace
		Defective pressure compensation valve, or defective operation of pressure compensation valve piston	Repair or replace
		Defective operation of control valve spool	Repair or replace
		Defective operation of travel junction valve	Repair or replace
		Defective PPC shuttle	Repair or replace
		Defective PPC valve	Replace
		Defective adjustment of travel lever linkage	Adjust

K20506

H-22 Steering does not turn easily or lacks power

★ Carry out troubleshooting in the H/O mode.

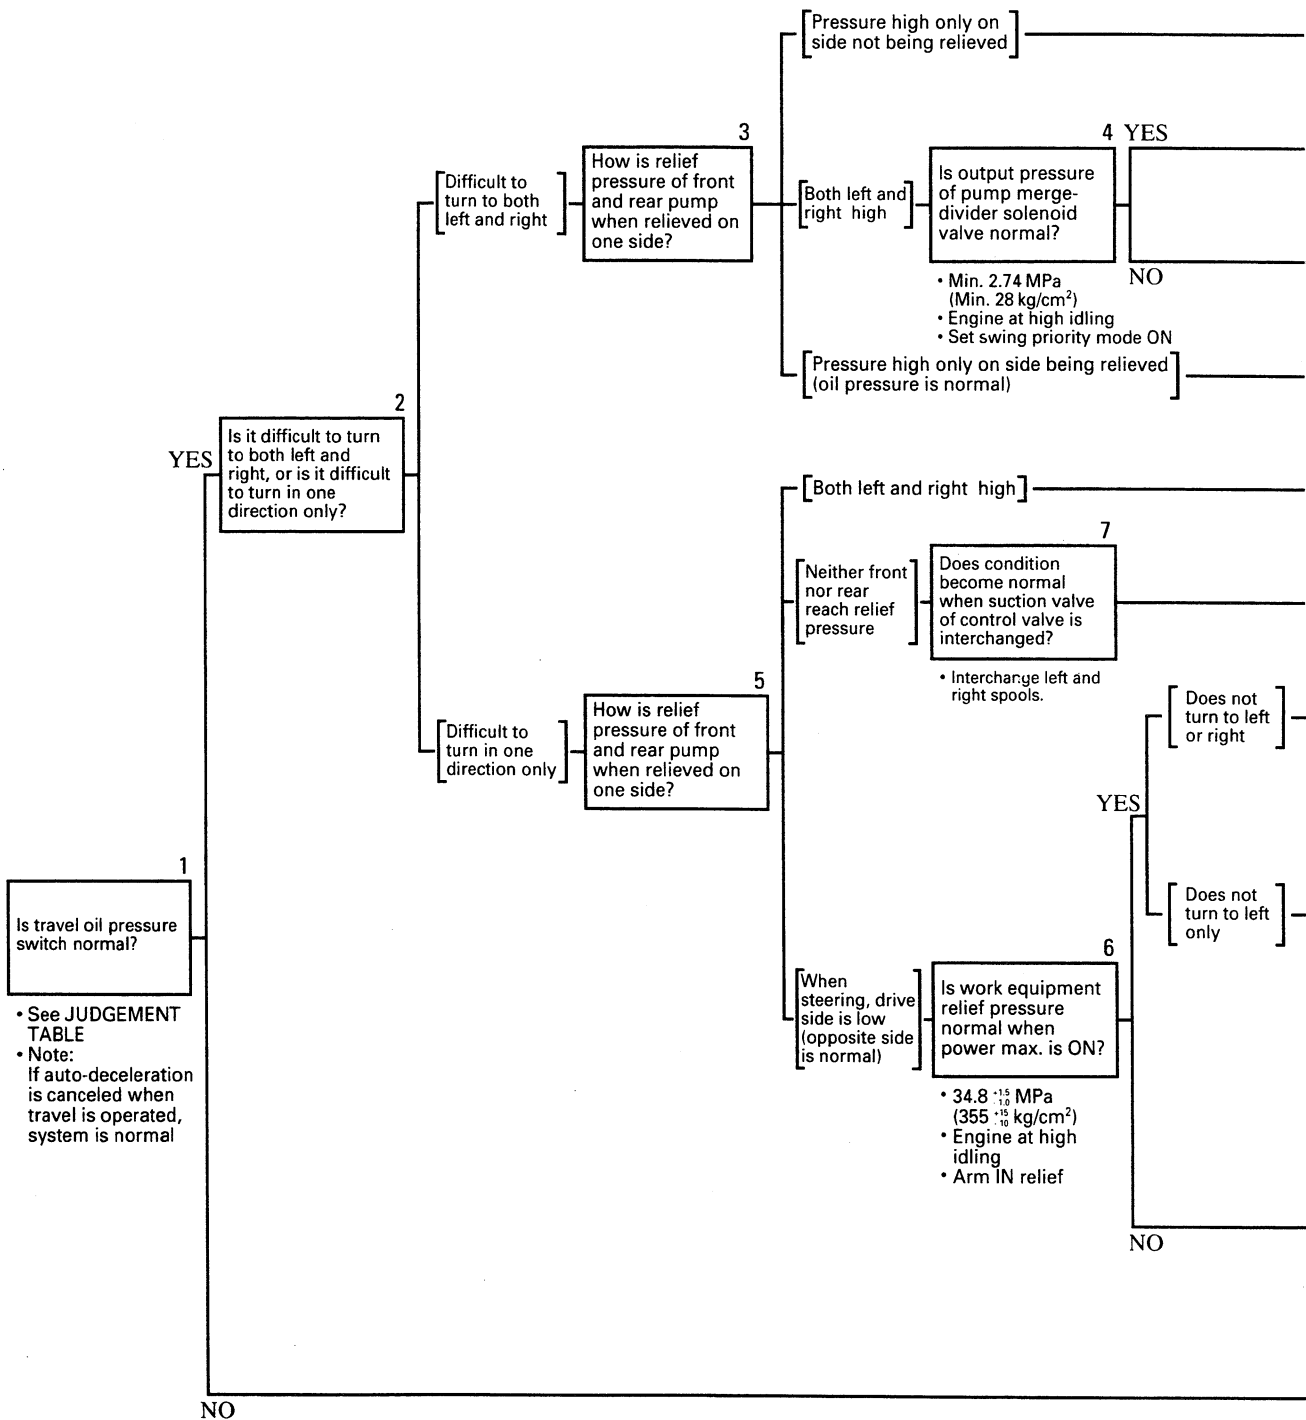

K20506

K20506

		Cause	Remedy
		Mistaken connection of LS pilot hose (F and R are connected in reverse)	Connect correctly
		Defective operation of main merge-divider valve or defective LS merge-divider valve	Repair or replace
		Defective operation of pump merge-divider solenoid valve	Repair or replace
		Defective operation of travel junction valve spool	Repair or replace
		Defective operation of LS circuit check valve	Repair or replace
		Defective operation of control valve main circuit check valve (remains open)	Repair or replace
		Defective control valve suction valve	Replace
YES		Defective travel motor check valve	Repair or replace
	8 YES	Defective travel motor safety valve	Replace
NO	Does condition become normal when suction valve of motor is interchanged?	See troubleshooting for H-13 Lack of power when pressure rises	—
	9 YES		
	Does bucket LS shuttle valve move smoothly?	Defective operation of LS shuttle valve for bucket	Repair or replace
	NO	Defective travel oil pressure switch	Replace

H-23 Travel speed does not switch or is faster than specified speed

★ Carry out troubleshooting in the H/O mode.


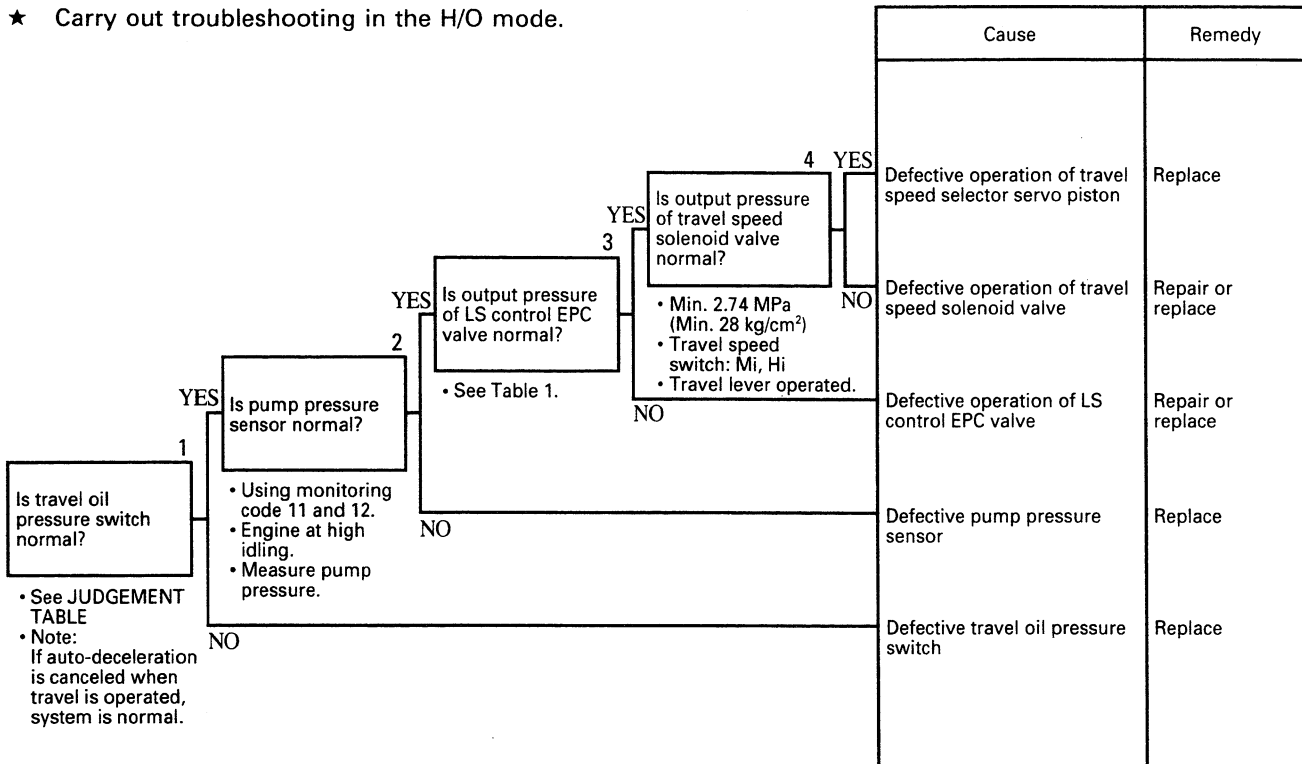


Table 1 Output pressure of LS control EPC valve


	Lo	Mi	Hi
PC210	2.0 ± 0.2MPa (20 ± 2kg/cm ²)	2.0 ± 0.2MPa (20 ± 2kg/cm ²)	0.2 ± 0.2MPa (2 ± 2kg/cm ²)
PC240	1.8 ± 0.2MPa (18 ± 2kg/cm ²)	1.8 ± 0.2MPa (18 ± 2kg/cm ²)	0.2 ± 0.2MPa (2 ± 2kg/cm ²)
Remarks	•Engine at high idling •Travel lever at fine control position (auto-deceleration canceled)		

H-24 Travel does not move (one side only)

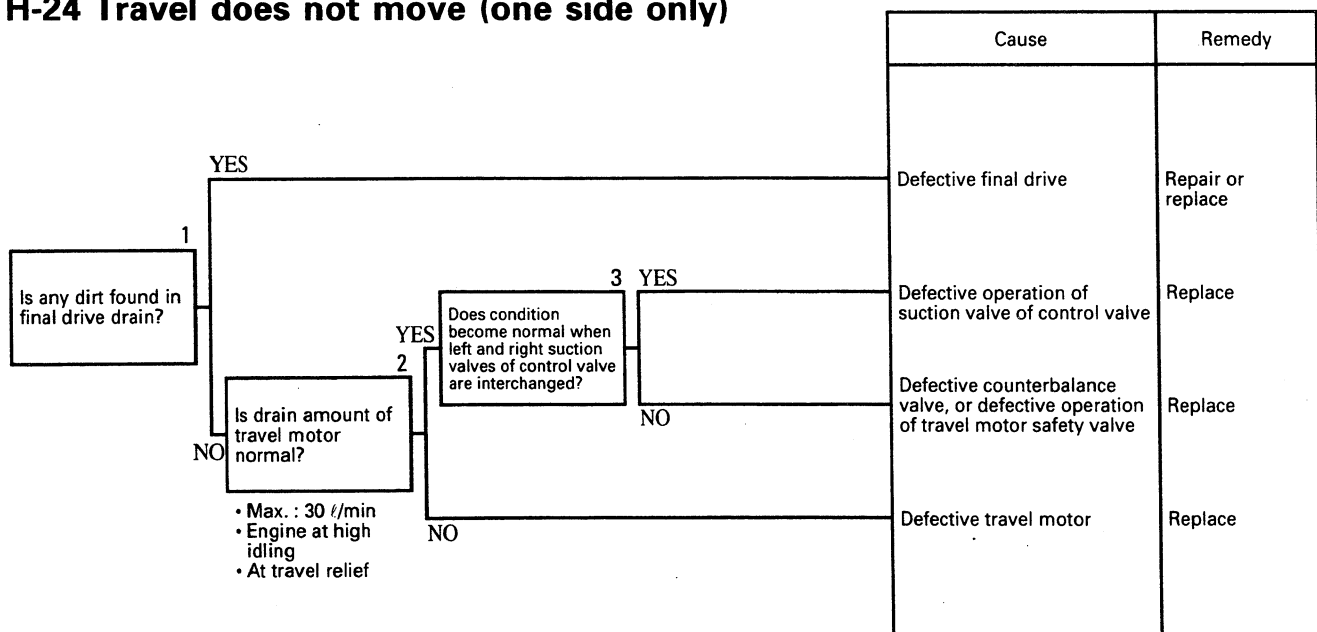


H-25 Does not swing

a) Does not swing to either left or right

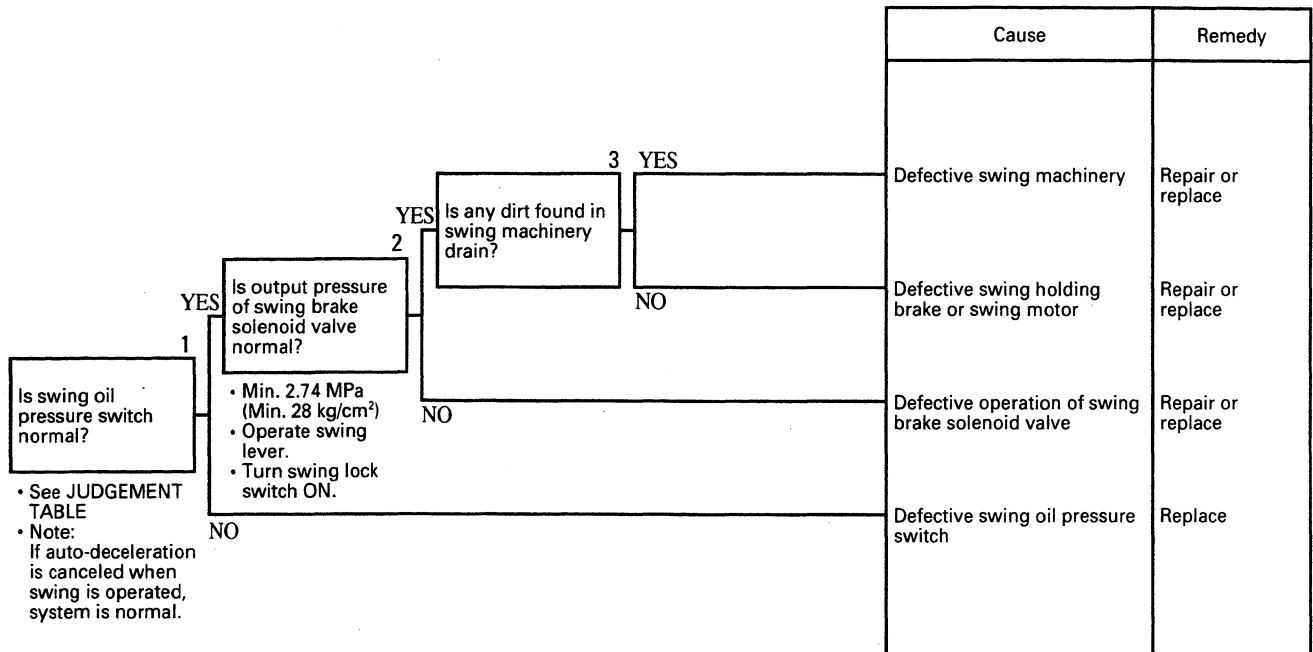


b) Does not swing in one direction

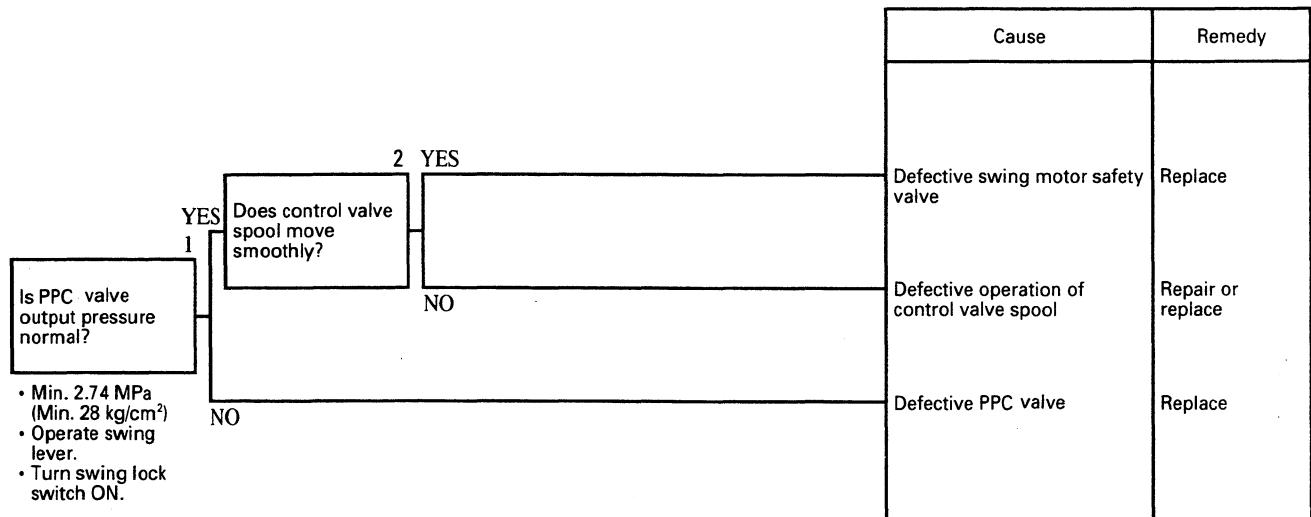

H-26 Swing acceleration is poor or swing speed is slow (both left and right, one direction only)

★ Carry out troubleshooting in the H/O mode.

a) Swing acceleration is poor

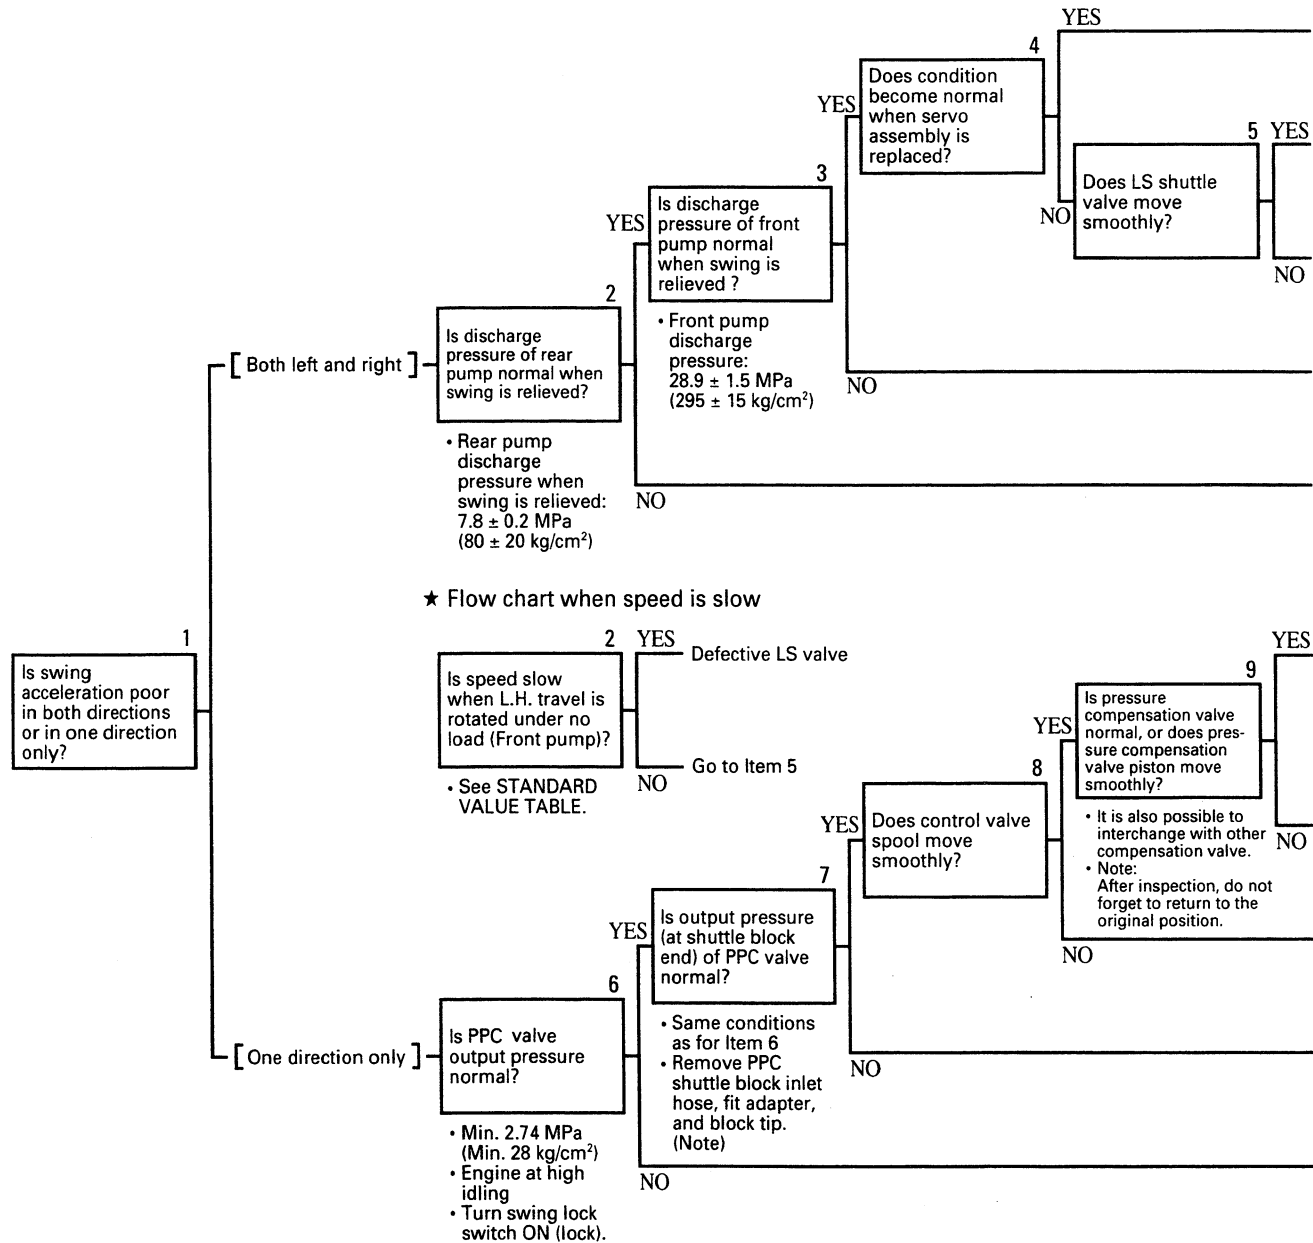

Note : If the adapter for blocking the circuit is not available, interchange PPC hose of swing with one of bucket (CURL, DUMP), boom (LOWER), or arm (IN).

b) When swing speed is slow


Change Item 2 marked with ★ under the flow for a) Swing acceleration is poor, and omit Item 4 when carrying out troubleshooting.

		Cause	Remedy
		Defective servo assembly	Replace
		Defective swing motor assembly	Replace
		Defective operation of LS shuttle valve (all LS shuttles)	Repair or replace
		Defective LS circuit check valve	Repair or replace
		Defective main circuit check valve	Repair or replace
10 YES Does condition become normal when left and right safety valves of motor are interchanged? NO • It is also possible to measure relief pressure of motor. • Relief pressure: 27.4 – 29.4 MPa (280 – 310 kg/cm²) • Note: After inspection, do not forget to return to the original position.		Defective swing motor safety valve	Replace
		Defective swing motor suction valve	Replace
		Defective pressure compensation valve, or defective operation of compensation valve piston	Repair or replace
		Defective operation of control valve spool	Repair or replace
		Defective operation of PPC shuttle valve	Repair or replace
		Defective PPC valve	Replace

K20506

H-27 Excessive overrun when stopping swing

a) One direction only

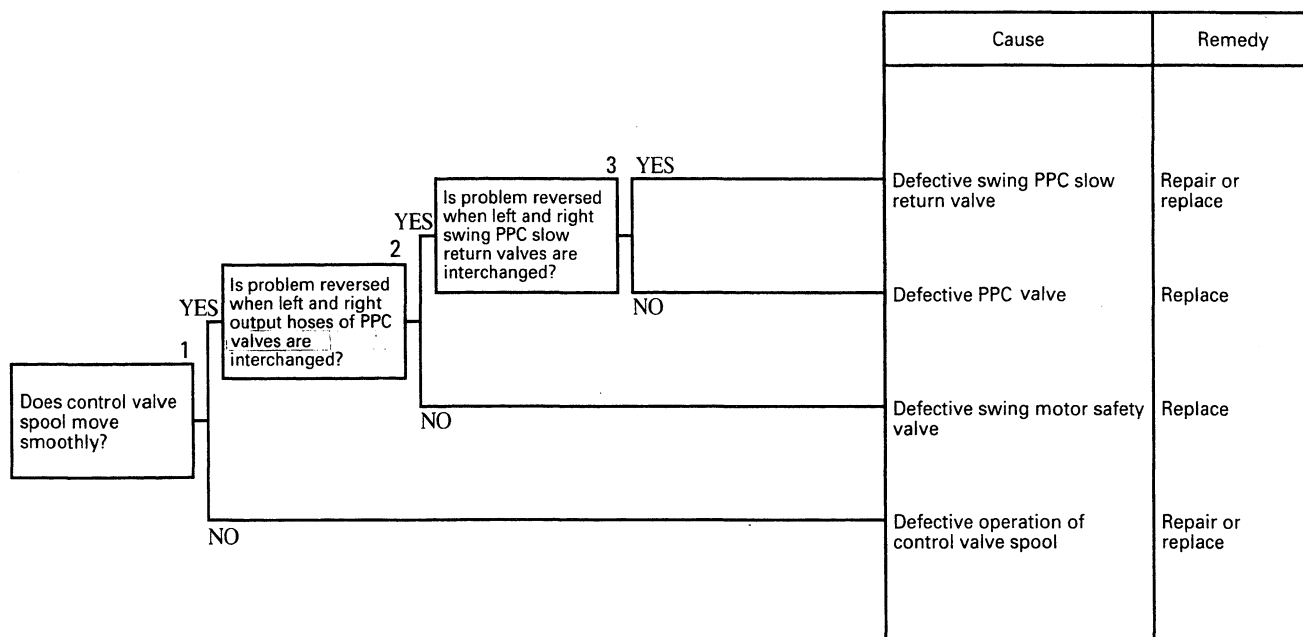

b) Both directions

Cause	Remedy
Defective swing motor	Correct or replace

K20506

H-28 Excessive shock when stopping swing (one direction only)


		Cause	Remedy
1 Does condition become normal when left and right swing PPC slow return valves are interchanged?	YES	Defective swing PPC slow return valve (check valve)	Repair or replace
	NO	Defective PPC valve	Replace

H-29 Excessive abnormal noise when stopping swing


		Cause	Remedy
1 Does condition become normal when safety valve is replaced?	YES	Defective swing motor safety valve	Replace
	2 Does condition become normal when suction valve is cleaned?	Defective swing motor suction valve	Replace
		Defective swing machinery	Repair or replace
	NO	Defective back pressure valve	Repair or replace

H-30 Excessive hydraulic drift of swing

a) When swing brake is released

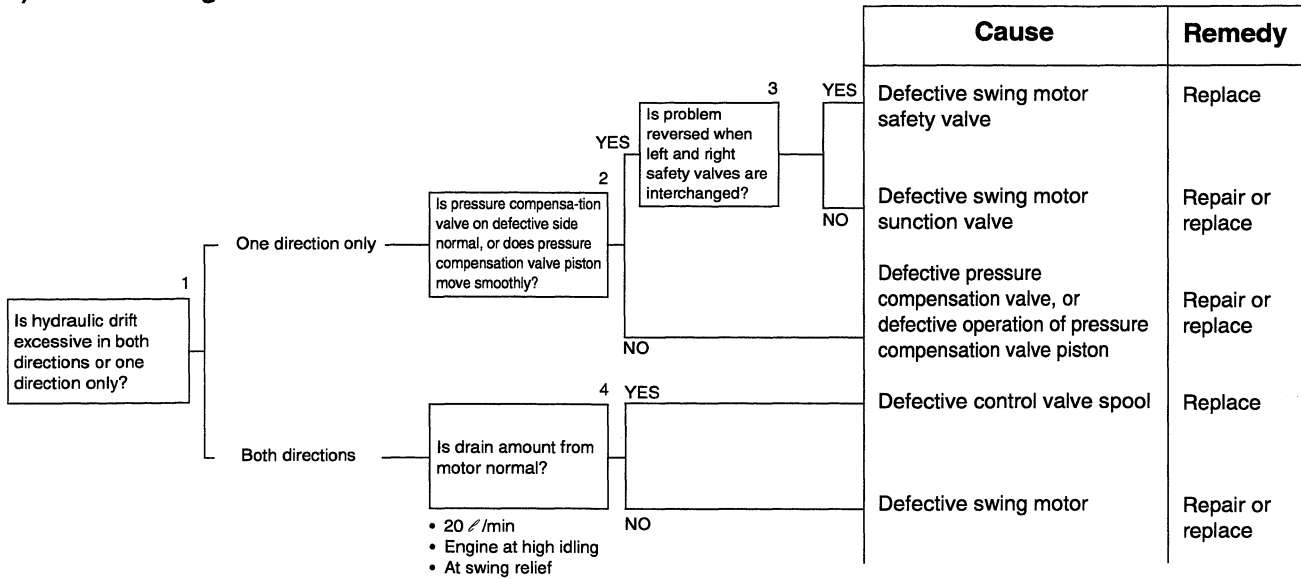

b) When swing brake is applied

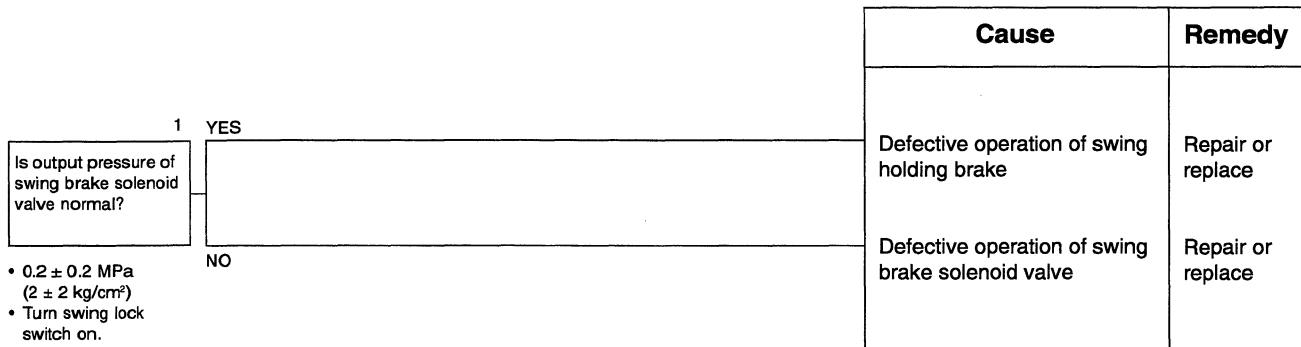

H-31 Swing speed is faster than specified swing speed

★ Carry out troubleshooting in the H/O mode.

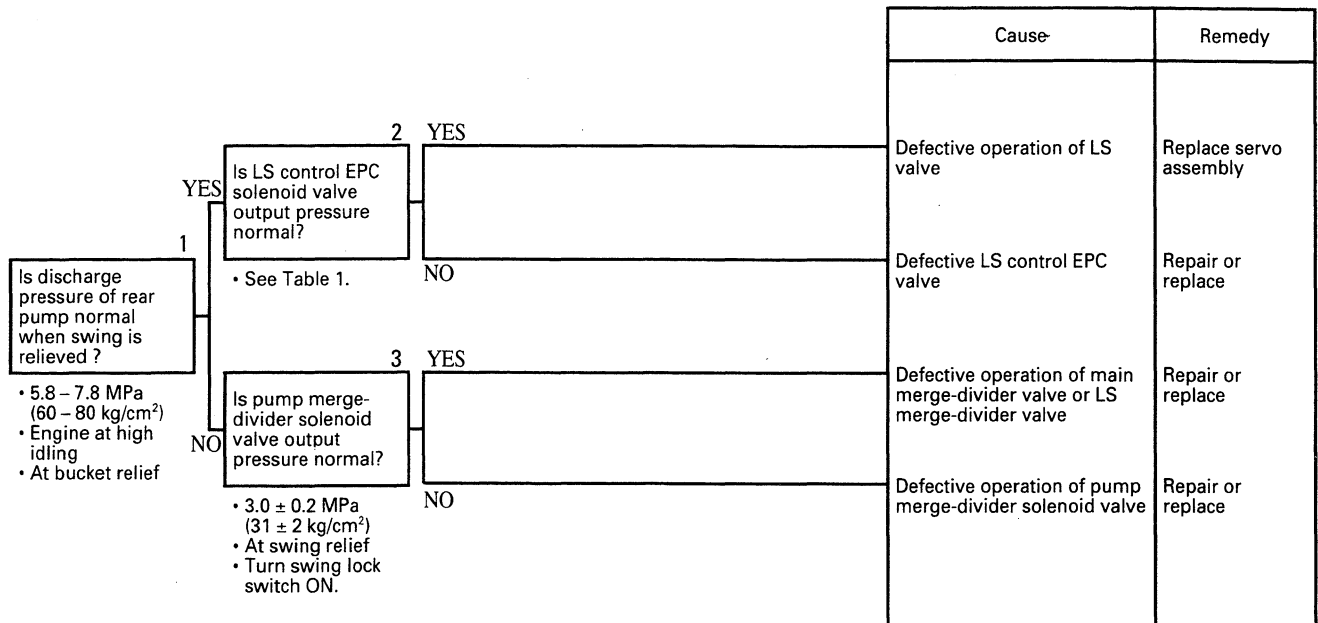


Table 1 Output pressure of LS control EPC valve

• Engine at high idling

	H/O mode	G/O mode	F/O mode	L/O mode
PC210	0.2 ± 0.2MPa (2.0 ± 2.0kg/cm ²)	0.2 ± 0.2MPa (2.0 ± 2.0kg/cm ²)	1.5 ± 0.2MPa (15.5 ± 2.0kg/cm ²)	1.5 ± 0.2MPa (15.5 ± 2.0kg/cm ²)
PC240	0.2 ± 0.2MPa (2.0 ± 2.0kg/cm ²)	0.2 ± 0.2MPa (2.0 ± 2.0kg/cm ²)	0.2 ± 0.2MPa (2.0 ± 2.0kg/cm ²)	1.5 ± 0.2MPa (15.5 ± 2.0kg/cm ²)

M-1 [E1:01] Abnormality in error data is displayed

- ★ This is not a mechanical failure.

It is not an abnormality if this occurs when the system has been reset after disconnecting connector P01 from the monitor panel, or after fuse 13 has blown, or after connector H05 has been disconnected.

- Turn the starting switch OFF. Then keep the time switch depressed, switch the starting switch ON again, and keep the time switch depressed for 5 seconds to return the system to normal.

M-2 [E1:02] Error in clock data is displayed



- ★ This is not a mechanical failure.

It is not an abnormality if this occurs when the system has been reset after disconnecting connector P01 from the monitor panel, or after fuse 13 has blown, or after connector H05 has been disconnected.

- Turn the starting switch OFF. Then keep the time switch depressed, switch the starting switch ON again, and keep the time switch depressed for 5 seconds to return the system to normal.

M-3 [E1:03] Short circuit in buzzer output or contact of 24V wiring harness with buzzer drive harness is displayed

- ★ If the starting switch is turned OFF after an abnormality occurs, turn the starting switch ON and check if E1:03 is displayed. (If it is not displayed, the system has been reset.)
- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.

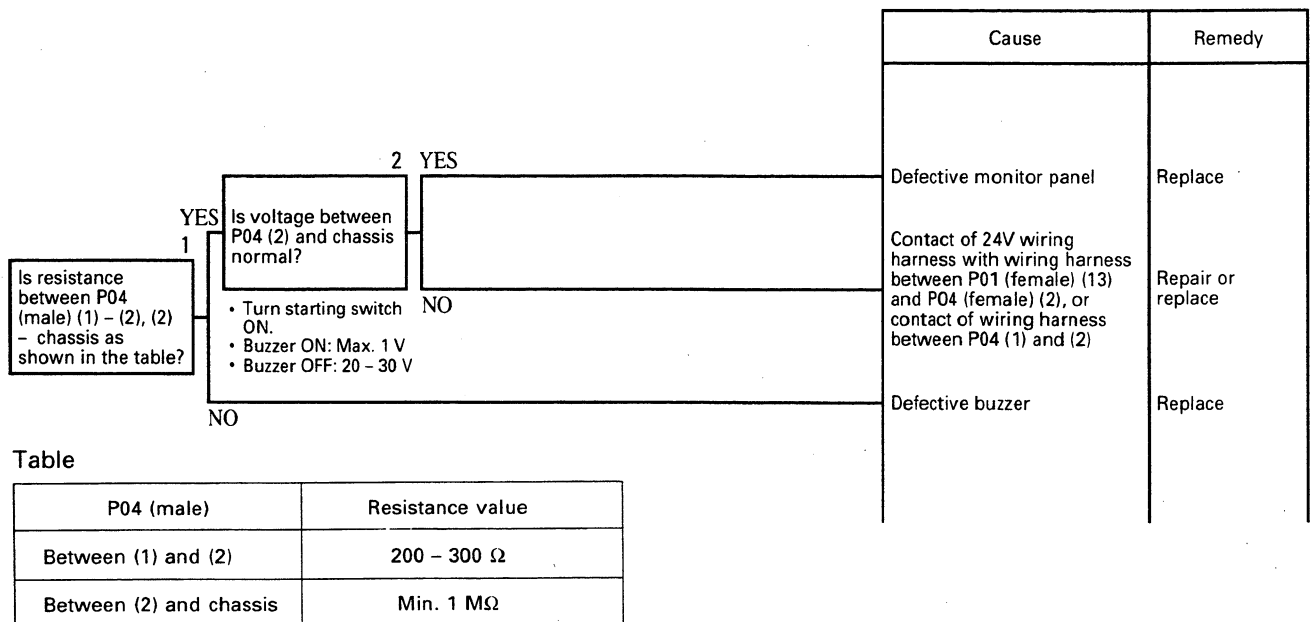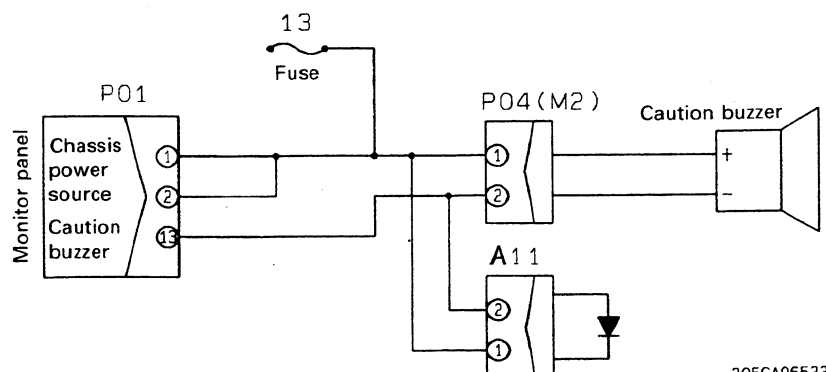**M-3 Related electric circuit diagram**

205CA06522

M-4 When starting switch is turned on, none of lamps on monitor panel light up for 3 seconds

- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.

a) None of lamps on monitor panel light up

		Cause	Remedy
Is voltage between fuse 13 and chassis ground normal? • Voltage: 20 – 30 V • Turn starting switch ON. 1 YES Is voltage between P02 (1)(2)(6) – (11)(12) normal? • Voltage: 20 – 30 V • Turn starting switch ON. 2 YES NO NO		Defective monitor panel	Replace
		Defective contact, or disconnection in wiring harness between fuse 13 – P01 (female) (1)(2) or P01 (female) (11)(12) – H05 (3)(4) – chassis ground, or between fuse 6 – P01 (6)	Repair or replace
		Blown fuse	Check for cause of blown fuse, then replace

M-4 Related electric circuit diagram

Monitor panel
P01 (04020)

Power source

GND

①

②

⑪

⑫

⑥

Fuse
13

6

H05 (M6)

③

④

///

205CA06523

b) Some of lamps on monitor panel (gauge display, time display) do not light up		Defective monitor panel	Replace
---	--	-------------------------	---------

M-5 When starting switch is turned ON, monitor panel lamps all stay lighted up and do not go out

Cause	Remedy
Defective monitor panel	Replace

M-6 When starting switch is turned ON, items lighted up on monitor panel are different from machine model

- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.

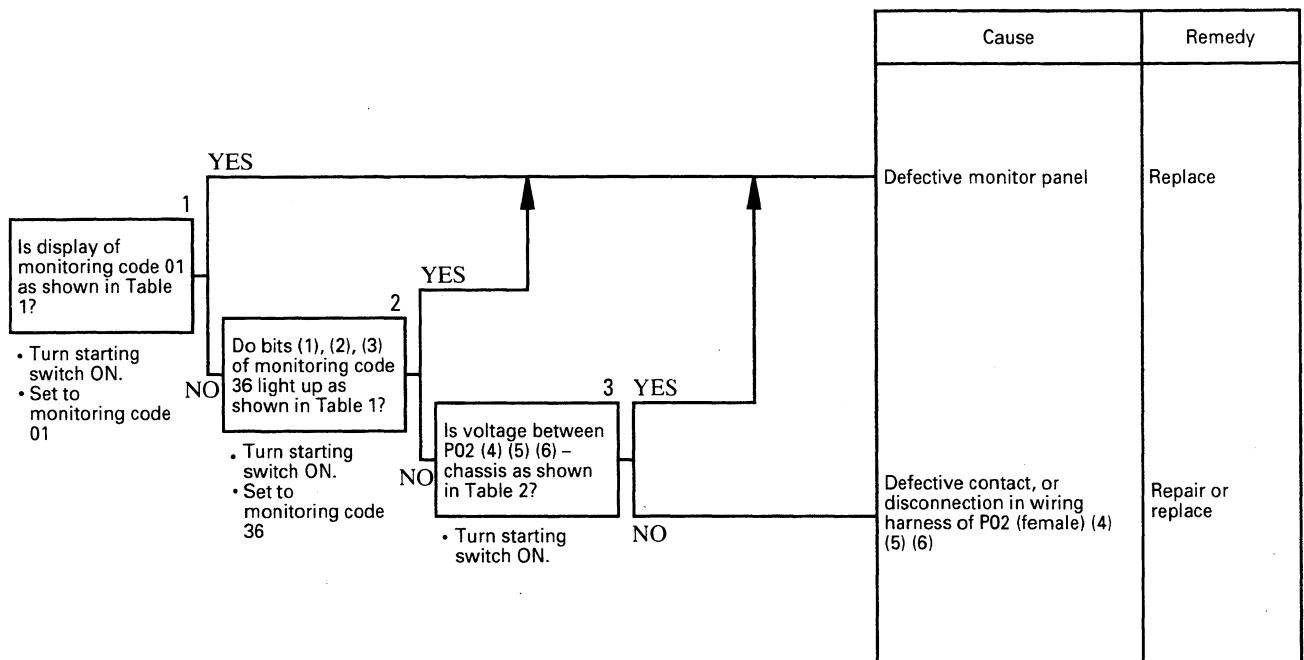


Table 1

Model	Monitor panel model code	36:
PC210	01:200	36:
PC240	01:220	36:

● : ON
○ : OFF


Table 2

Connector P02	PC210	PC240
Between (4) - GND	20 - 30V	Max. 1V
Between (5) - GND	20 - 30V	20 - 30V
Between (6) - GND	Max. 1V	Max. 1V

M-7 When starting switch is turned ON (engine stopped), CHECK items flash (Fluid levels for CHECK items are at specified level)

- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.
- ★ Check that the coolant is at the specified level before carrying out troubleshooting.

a) (coolant level) flashes

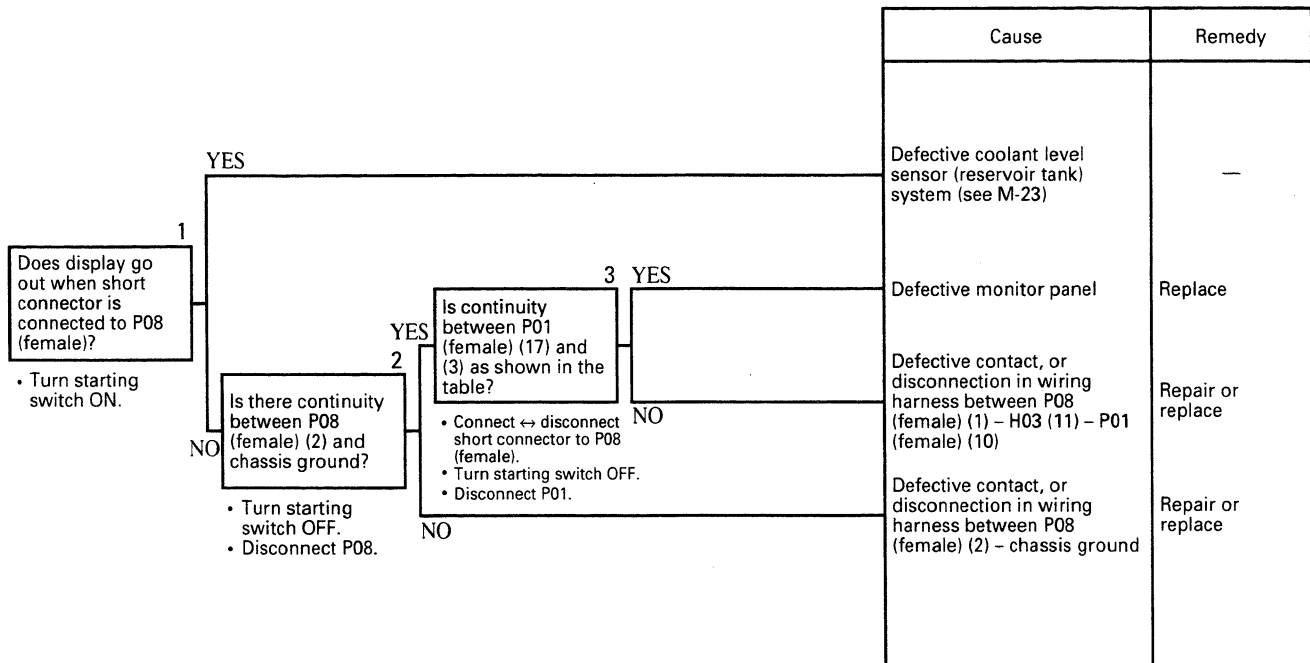


K20506

Table

Short connector	Continuity
Connected	Yes
Disconnected	No

M-7 a) Related electric circuit diagram

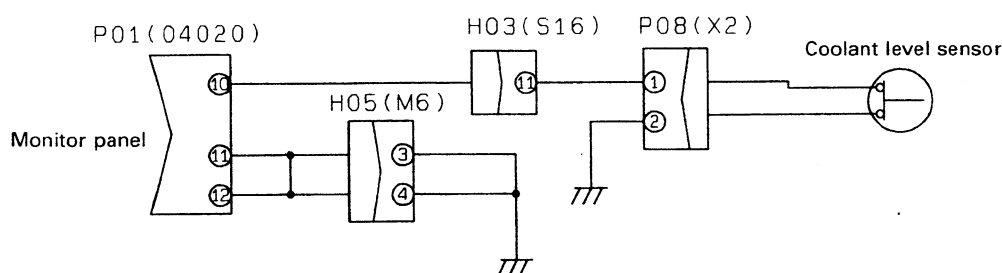

205CA06524

b) (engine oil level) flashes


★ Use the level gauge to check that the engine oil level is correct before carrying out troubleshooting.

		Cause	Remedy
1 When P05 (female) (1) is connected to chassis ground, does display go out? • Connect P05 (female) (1) and chassis ground. • Turn starting switch ON. • Disconnect P01, P05.	YES	Defective engine oil level sensor system (see M-22)	—
	2 Is continuity between P01 (female) (18) and (11),(12) as shown in table? • Connect ↔ disconnect P05 (female) (1) and chassis ground. • Disconnect P01, P05. • Turn starting switch OFF.	Defective monitor panel	Replace
		Defective contact, or disconnection in wiring harness between P05 (female) (1) – E08 (5) – (18)	Repair or replace

Table

Connection with ground	Continuity
Connected	Yes
Disconnected	No

M-7 b) Related electric circuit diagram

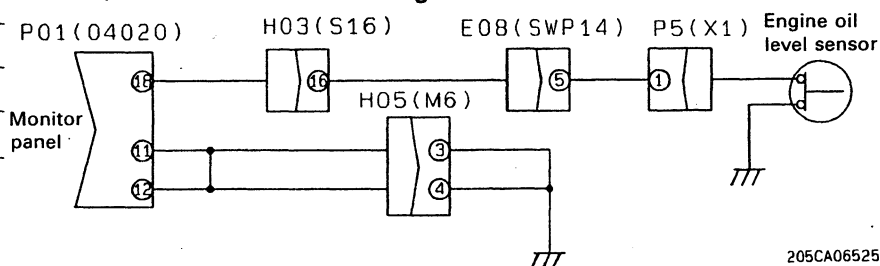

205CA06525


c) (hydraulic oil level) flashes

		Cause	Remedy
1 When P09 (female) (1) is connected to chassis ground, does display go out? • Turn starting switch ON. • Disconnect P09.	YES	Defective hydraulic oil level sensor system (see M-24)	—
	2 Is continuity between P01 (female) (3) – (11)(3) as shown in the table? • Turn starting switch OFF. • Disconnect P01.	Defective monitor panel	Replace
		Defective contact, or disconnection in wiring harness between P09 (female) (1) – H02 (15) – P01 (female) (3)	Repair or replace

Table

Between P09 (female) and chassis	Continuity
Connected	Yes
Disconnected	No

M-7 c) Related electric circuit diagram

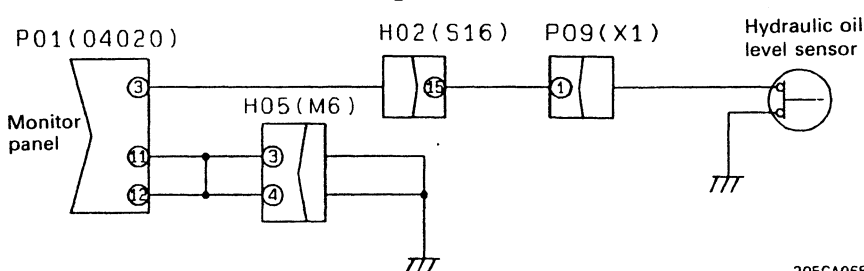

205CA06526


M-8 Preheating is not being used but preheating display lights up

- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.

		Cause	Remedy
Is voltage between wiring of starting switch terminal R1 and chassis ground normal? • 0 V • Turn starting switch ON. • Disconnect terminal R1.	1 YES	Defective monitor panel	Replace
	2 YES	Contact of 24V wiring harness with wiring harness between starting switch terminal R1 – H03 (2), or between P01 (8) – H03 (2) – E11 (male) (1)	Repair or replace
	NO	Defective starting switch (contact between terminal B and terminal R1)	Replace

K20506

M-8 Related electric circuit diagram

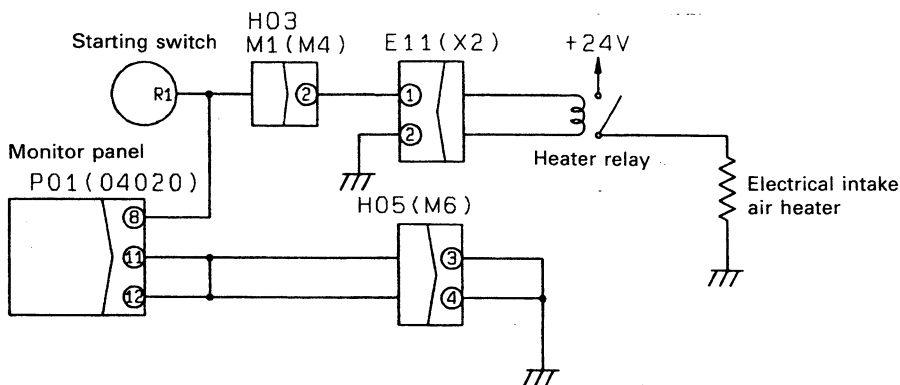


205CA06527

M-9 When starting switch is turned ON and engine is started, CHECK items flash

- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.
- ★ Check both the alternator system and the engine oil pressure system.

a) Alternator system

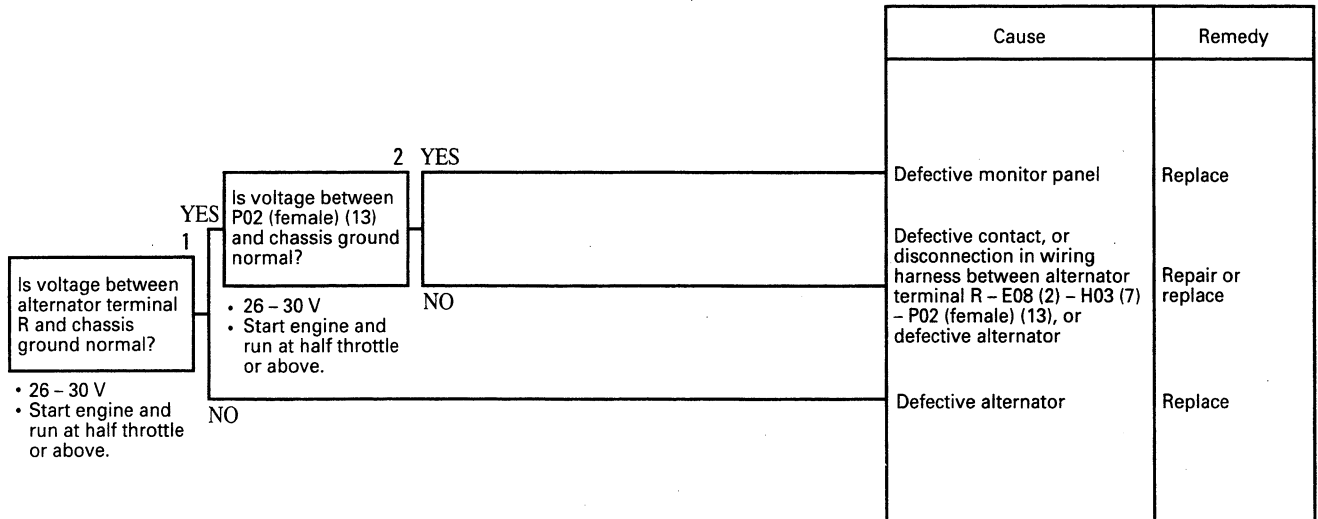

b) Engine oil pressure system


★ When engine oil pressure is normal

1) Pressure sensor

		Cause	Remedy
When engine is running at low idling and wiring harness of oil pressure sensor is removed, does display go out? • Engine at low idling 1 YES NO 2 YES NO Is there continuity between P01 (16) (female) (17) and chassis ground? • Turn starting switch OFF. • Disconnect wiring harness P01 of oil pressure sensor.		Defective oil pressure sensor	Replace
		Contact of chassis ground with wiring harness between P01 (female) (17) – H03 (13) – E08 (8) – oil pressure sensor P01 (female) (16) – H03 (12) – E08 (7)	Repair or replace
		Defective monitor panel	Replace

K20506

M-9 Related electric circuit diagram

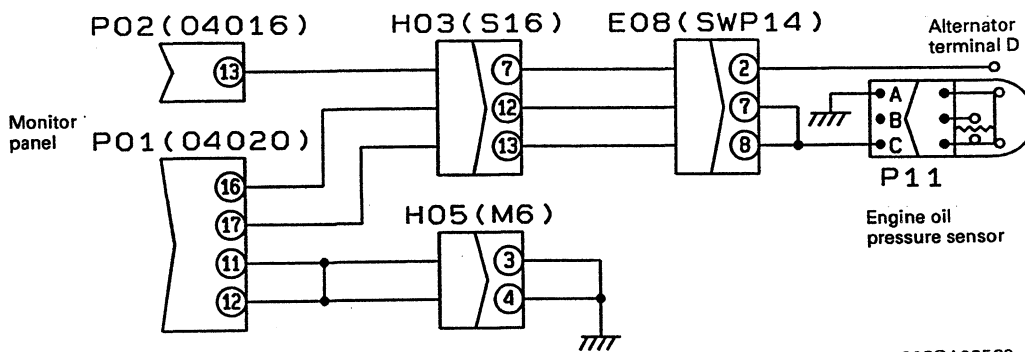

M-10 When starting switch is turned ON (engine stopped), CAUTION items flash (but when charge level, engine oil pressure do not light up)

- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.

a) Alternator system

		Cause	Remedy
Is voltage between alternator terminal R and chassis ground normal? 1 YES • When engine is stopped: Max. 3 V • Turn starting switch ON. • Remove wiring harness from terminal R.	Is voltage between P02 (female) (13) and chassis ground normal? 2 YES	Defective monitor panel	Replace
	NO	Contact of 24V wiring harness with wiring harness between alternator terminal R – E08 (2) – H03 (7) – P02 (female) (13)	Repair or replace
	NO	Defective alternator	Replace
Is there continuity between oil pressure sensor terminal and chassis ground? 1 YES • Turn starting switch OFF. • Remove wiring harness from oil pressure sensor terminal.	Is there continuity between wiring harness of P01 (17) (female) (16) and terminal of oil pressure sensor? 2 YES	Defective monitor panel	Replace
	NO	Defective contact, or disconnection in wiring harness between oil pressure sensor terminal – E08 (8) – H03 (13) – P01 (female) (17) P11 () E08 (7) – H03 (12) – P01 (female) (16)	Repair or replace
	NO	Defective oil pressure sensor	Replace

b) Engine oil pressure sensor system

- ★ When engine oil pressure is normal

Pressure sensor


K20506

M-11 When starting switch is turned ON and engine is started, CAUTION items flash (but when there is no abnormality in engine or CHECK items)


- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.

a) (engine oil pressure) flashes

1) Pressure sensor

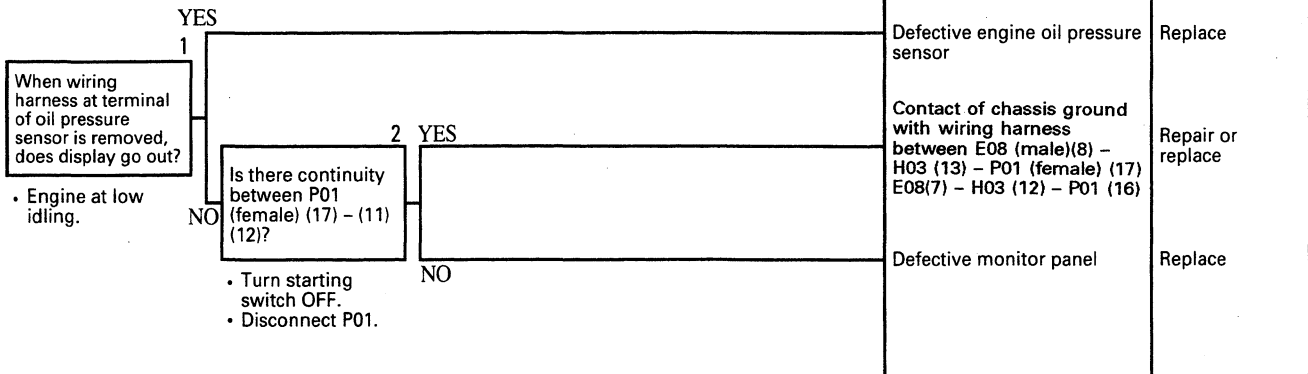

M-11 a)-1 Related electric circuit diagram

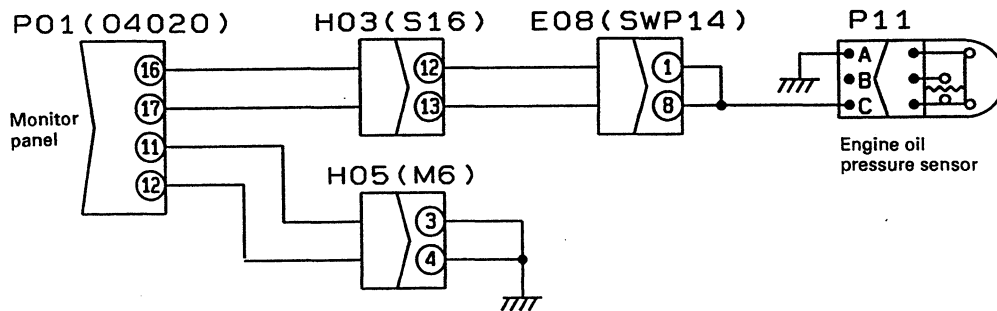

205CA06531


K20506

b) (coolant level) flashes


Cause	Remedy
See Item M-7 a).	—

c) (coolant temperature) flashes

Cause	Remedy
Defective coolant temperature sensor system (see M-21)	—
Defective monitor panel	Replace
Defective monitor panel	Replace

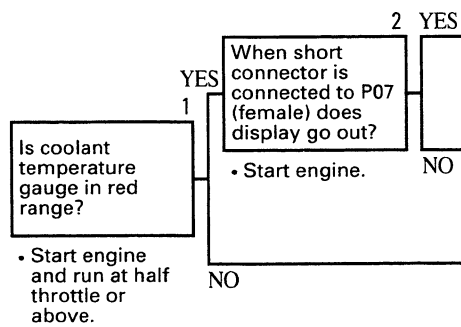

M-11 c) Related electric circuit diagram

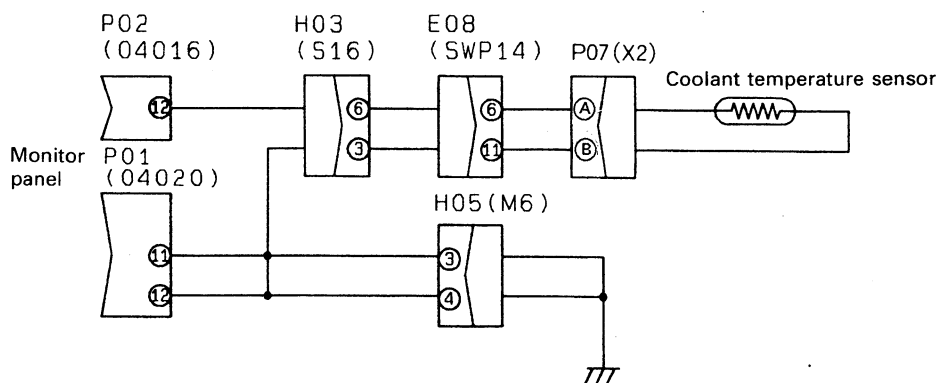


205CA06532

d) (battery charge) flashes

		Cause	Remedy
Is voltage between alternator terminal R and chassis ground normal? • 20 – 30 V • Start engine and run at half throttle or above.	1 YES	Is voltage between P02 (female) (13) and chassis ground normal?	
	2 YES	Defective monitor panel	Replace
	NO	Defective contact, or disconnection in wiring harness between alternator terminal R and P02 (female)(13)	Repair or replace
	NO	Defective alternator	Replace

M-11 d) Related electric circuit diagram

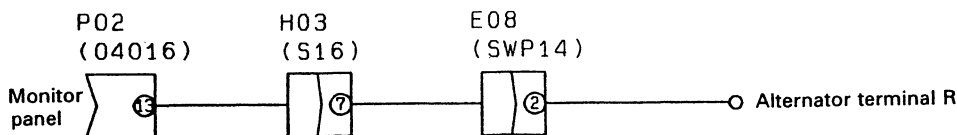


205CA06533

e) (fuel level) flashes

★ Check that there is fuel before carrying out troubleshooting.

		Cause	Remedy
Is fuel gauge in red range? • Start engine and run at half throttle or above.	1 YES	When P06 is removed, does display go out?	
	2 YES	Defective fuel level sensor system (see M-20) or interference with sensor inside fuel tank	—
	NO	Defective monitor panel	Replace
	NO	Defective monitor panel	Replace

M-11 e) Related electric circuit diagram

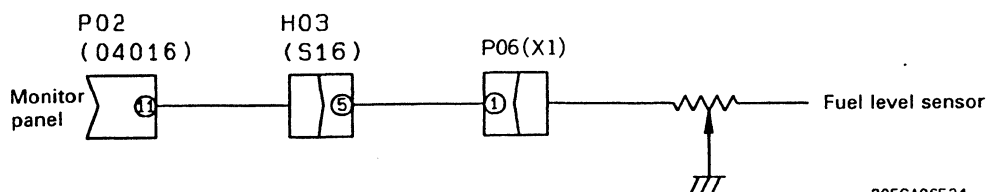

205CA06534

K20506

M-12 (a) When starting switch is turned ON (engine stopped), buzzer does not sound for 1 second
CAUTION items are flashing but buzzer does not sound


- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.
- ★ Of the CAUTION items, the buzzer will not sound even if there is an abnormality in the battery charge or fuel level.

		Cause	Remedy
When P01 (female) (13) and chassis are connected, does buzzer sound? 1 YES • Turn starting switch ON.	NO	Defective monitor panel	Replace
		Disconnection in wiring harness between P01 (female) (13) – P04 (2) – buzzer, or between +24V – P04 (1) – buzzer +, or defective buzzer	Repair or replace

M-12 (b) No abnormality is displayed on monitor but buzzer sounds

		Cause	Remedy
When P01 is removed, does buzzer sound? 1 YES • Remove P01. • Turn starting switch ON.	NO	Contact of chassis ground with wiring harness between P01 (female) (13) and buzzer	Repair or replace
		Defective monitor panel	Replace

M-12 Related electric circuit diagram

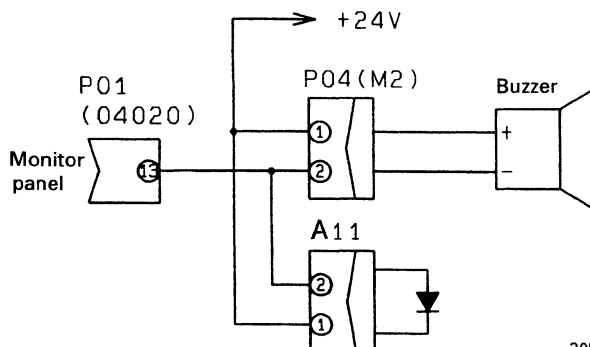


205CA06535

M-13 Liquid crystal night lighting on monitor panel does not light up (Liquid crystal display is normal)

★ When the working light lights up normally.

		Cause	Remedy
<pre> graph TD Q1[Is bulb blown, or is there defective contact?] -- YES --> C1[Blown bulb or defective contact of bulb] Q1 -- NO --> Q2[Does bit (2) of monitoring code 46 light up?] Q2 -- YES --> C2[Defective monitor panel] Q2 -- NO --> C3[Defective contact, or disconnection in wiring harness between M07 (male) (1) - X01 (1) - P01(female) (7)] </pre>	1	Blown bulb or defective contact of bulb	Repair or replace
	2 YES	Defective monitor panel	Replace
	NO	Defective contact, or disconnection in wiring harness between M07 (male) (1) - X01 (1) - P01(female) (7)	Repair or replace

M-13 Related electric circuit diagram

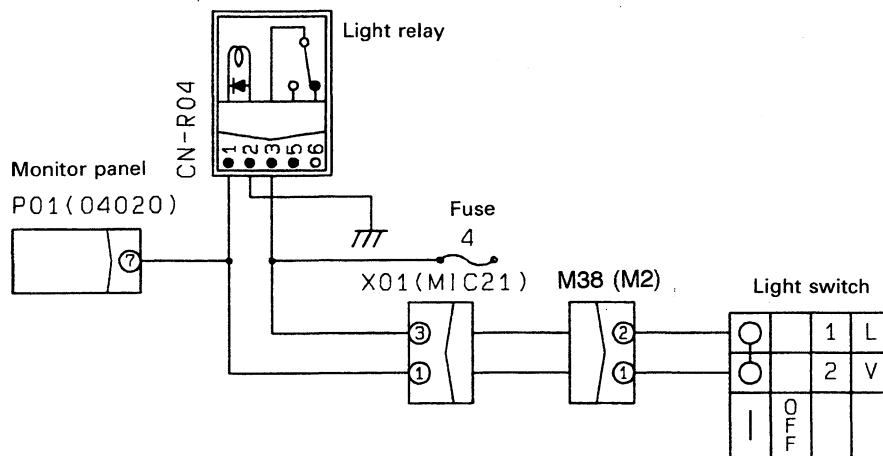

205CA06536

K20506


M-14 Coolant temperature gauge does not rise

- ★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
- ★ Always connect any disconnected connectors before going on the next step.
- ★ If the coolant temperature actually does not rise, check the engine system.

		Cause	Remedy
1 When short connector is connected to P07, do all gauge level lamps go out? • Turn starting switch ON. YES NO 2 Is there continuity between P02 (female) and chassis when short connector is connected to P07? • Turn starting switch OFF. • Disconnect P02. YES NO		Defective coolant temperature sensor system (see M-21)	—
		Defective monitor panel	Replace
		Defective contact, or disconnection in wiring harness between P02 (female) (12) – H03 (6) – E08 (6) – P07 (female) (A) or P07 (female) (B) – E08 (11) – H03 (3) – H05 (4)(3) – chassis ground	Repair or replace

K20506

M-14 Related electric circuit diagram

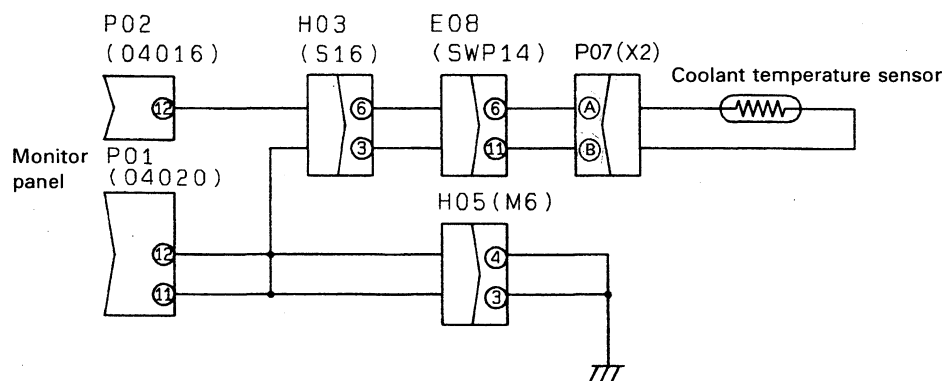

205CA06537


M-15 Coolant temperature gauge does not give any display (none of gauge lamps light up during operation)

		Cause	Remedy
When P07 is removed, does coolant temperature gauge display appear? • Turn starting switch ON.	1 YES	Defective coolant temperature sensor system (see M-21)	—
	2 YES	Contact of chassis ground with wiring harness between P07 (female)(A) – E08 (6) – H03 (6) – P02 (female) (6)	Repair or replace
	NO	Defective monitor panel	Replace

Is there continuity between P02 (12) and chassis ground?

• Turn starting switch OFF.
• Disconnect P02, P07.

M-15 Related electric circuit diagram

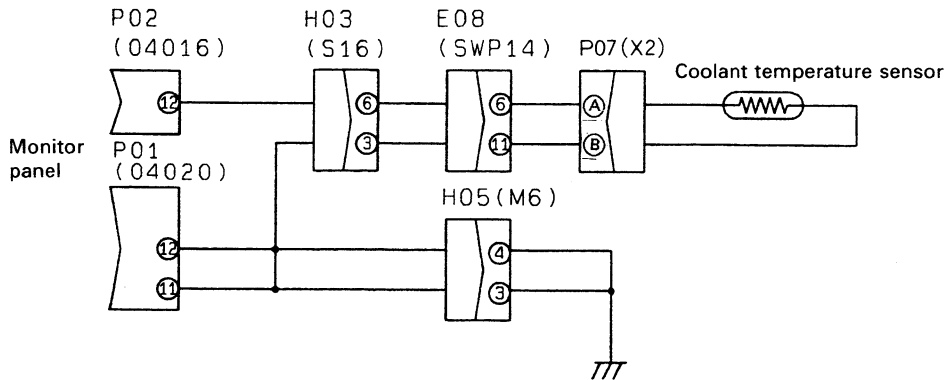

205CA06537

K20506

M-16 Fuel level gauge always displays FULL

★ Check if the tank is actually full before carrying out troubleshooting.


		Cause	Remedy
When P06 is removed, does fuel gauge display disappear? 1 YES NO • Turn starting switch ON. • Wait for approx. 2 minutes. • The fuel level may vary, so the display is given a time delay.	Is there continuity between P02 (11) and chassis ground? 2 YES NO • Turn starting switch OFF. • Disconnect P02, P06.	Defective fuel level sensor system (see M-20)	—
		Contact of chassis ground with wiring harness between P06 (female) (1) – H03 (5) – P02 (female) (11)	Repair or replace
		Defective monitor panel	Replace

M-17 Fuel level gauge does not give display

★ Check that there is actually no fuel before carrying out troubleshooting.

		Cause	Remedy
Does display appear when P06 (female)(1) and chassis ground are connected? 1 YES NO • Turn starting switch ON. • Disconnect P06. • Wait for approx. 2 minutes.	Is there continuity between P02 (female) (11) and chassis ground when P06 (female) (1) and chassis ground are connected? 2 YES NO • Turn starting switch OFF. • Disconnect P02, P06.	Defective fuel level sensor system (see M-20)	—
		Defective monitor panel	Replace
		Defective contact, or disconnection in wiring harness between P06 (female) (1) – H03 (5) – P02 (female) (11)	Repair or replace

M-16, 17 Related electric circuit diagram

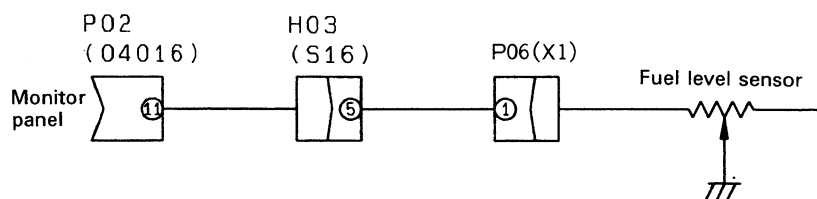

205CA06539


M-18 Swing lock switch is turned ON (LOCK) but monitor panel parking display does not light up

★ Carry out this troubleshooting only if the swing lock is actually being actuated.

		Cause	Remedy
1 YES Is voltage between P02 (9) and (16) as shown in Table 1? • Turn starting switch ON.	YES	Defective monitor panel	Replace
	NO	Disconnection in wiring harness between swing lock switch (1) – X05 (1) – X01 (4) – P02 (female) (9)	Repair or replace

Table 1	Voltage
Swing lock switch ON	Max. 1 V
Swing lock switch OFF	20 – 30 V

M-18 Related electric circuit diagram

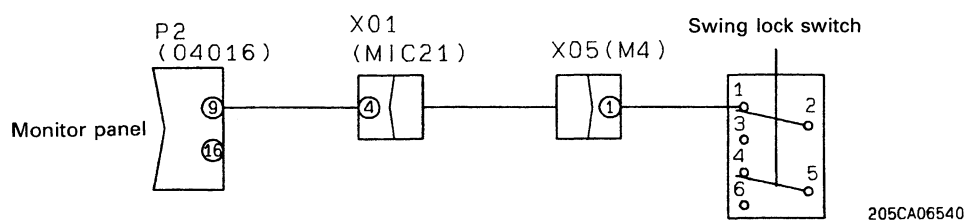

K20506


M-19 Swing lock prolix switch is ON (prolix), but monitor panel parking display does not flash

★ Carry out this troubleshooting only if the swing prolix is actually being actuated.

		Cause	Remedy
1 YES Is voltage between P02 (3) and (16) as shown in Table 1? • Turn starting switch ON.	YES	Defective monitor panel	Replace
	NO	Disconnection in wiring harness between swing lock prolix switch (4) and P02 (female) (3)	Repair or replace

Table 1	Voltage
Swing lock prolix switch ON	Max. 1 V
Swing lock prolix switch OFF	20 – 30 V

M-19 Related electric circuit diagram

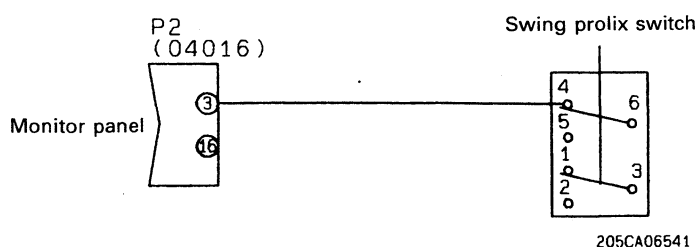

M-20 Defective fuel level sensor system

Note 1: Difference between fuel level and gauge display


For gauge display position 10 (F), the amount of fuel is 78–100%; and for display position 1 (E) it is below 14.5%. If the chassis is at an angle, the displayed amount of fuel will be different from the actual amount. Therefore, when checking, stop the machine at a horizontal place and wait for at least 2 minutes before checking the gauge. (The display is given a time delay so that the gauge can deal with sudden changes in the fuel level.)

- ★ Remove the fuel level sensor when carrying out the troubleshooting.

			Cause	Remedy
When float is moved up and down, is resistance between connector (1) and flange as shown in table? 1 YES Does arm move smoothly? 2 YES Is there any large crack, chip, or damage to float? 3 YES NO NO Defective sensor (Note 2) Replace NO Check wiring harness visually. Is it broken? 4 YES NO Defective sensor Replace	Interference with sensor inside tank	Replace (Note 2)		
	Defective contact of connector	Clean connector or replace		
	Defective sensor (Note 2)	Replace		
	Disconnection in wiring harness (Note 3) (defective clamp) (external force applied)	Replace sensor		
	Defective sensor	Replace		

Table 1

Top (FULL) stopper position	Max. 12Ω
Bottom (EMPTY) stopper position	Approx. 85 – 110 Ω

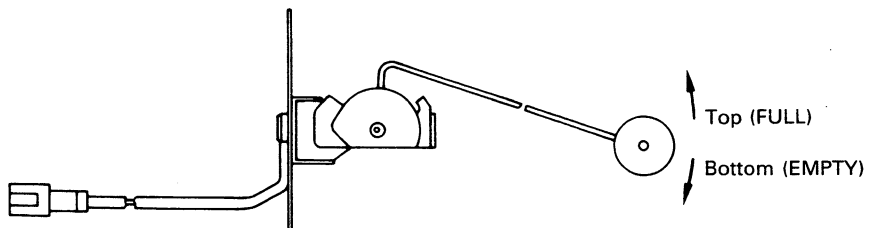

F20205053

Note 2: There is the possibility of defective installation or interference with the sensor inside the tank, so be careful when installing.

Note 3: Check for vibration at the connector mount. If there is excessive vibration, take the appropriate action.

M-21 Defective coolant temperature sensor system


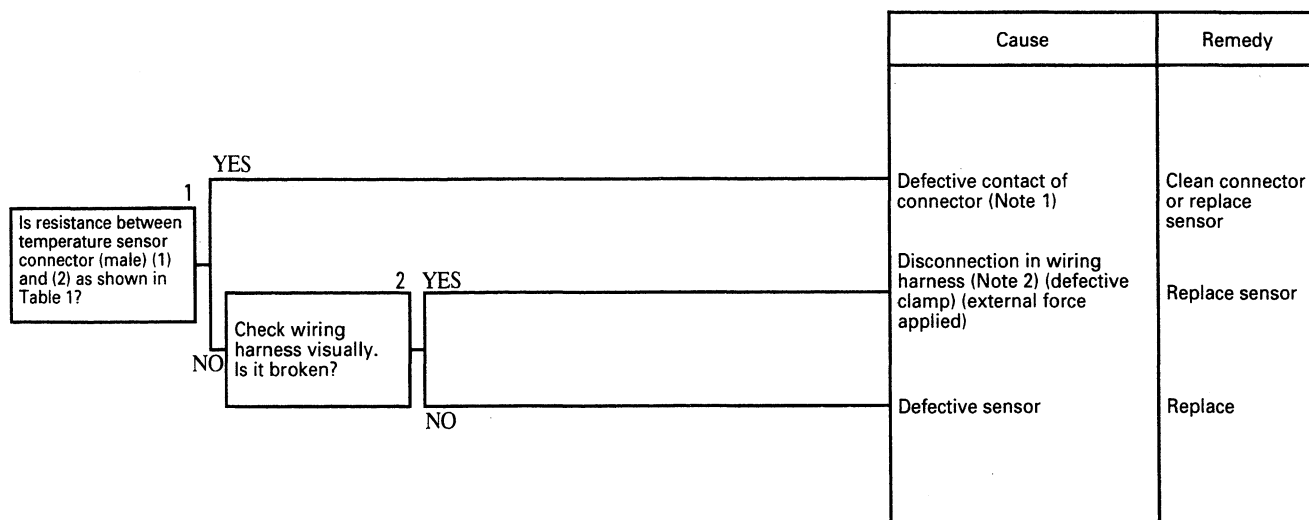



Table 1

Normal temperature (20°C)	Approx. 70 ~ 78 kΩ
100°C	Approx. 3 Ω

Sensor

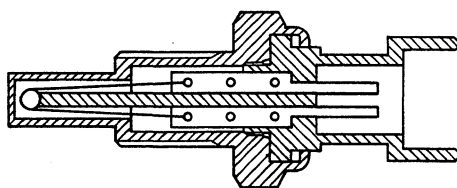

Connector

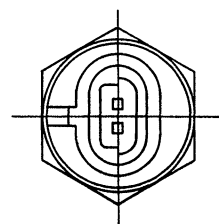

Note1: If the problem occurs again, the connector (female) at the chassis end is probably defective, so check the connector and wiring harness at the chassis end.

Note2: Check for vibration at the connector mount. If there is excessive vibration, take the appropriate action.

K20506

M-22 Defective engine oil level sensor system

Note 1: Variations in oil level

The oil level may change according to the angle of the machine, the engine speed, or the temperature of the oil, so if there is any display, check the oil level again with the machine at a horizontal place.

★ Remove the engine oil level sensor when carrying out troubleshooting.


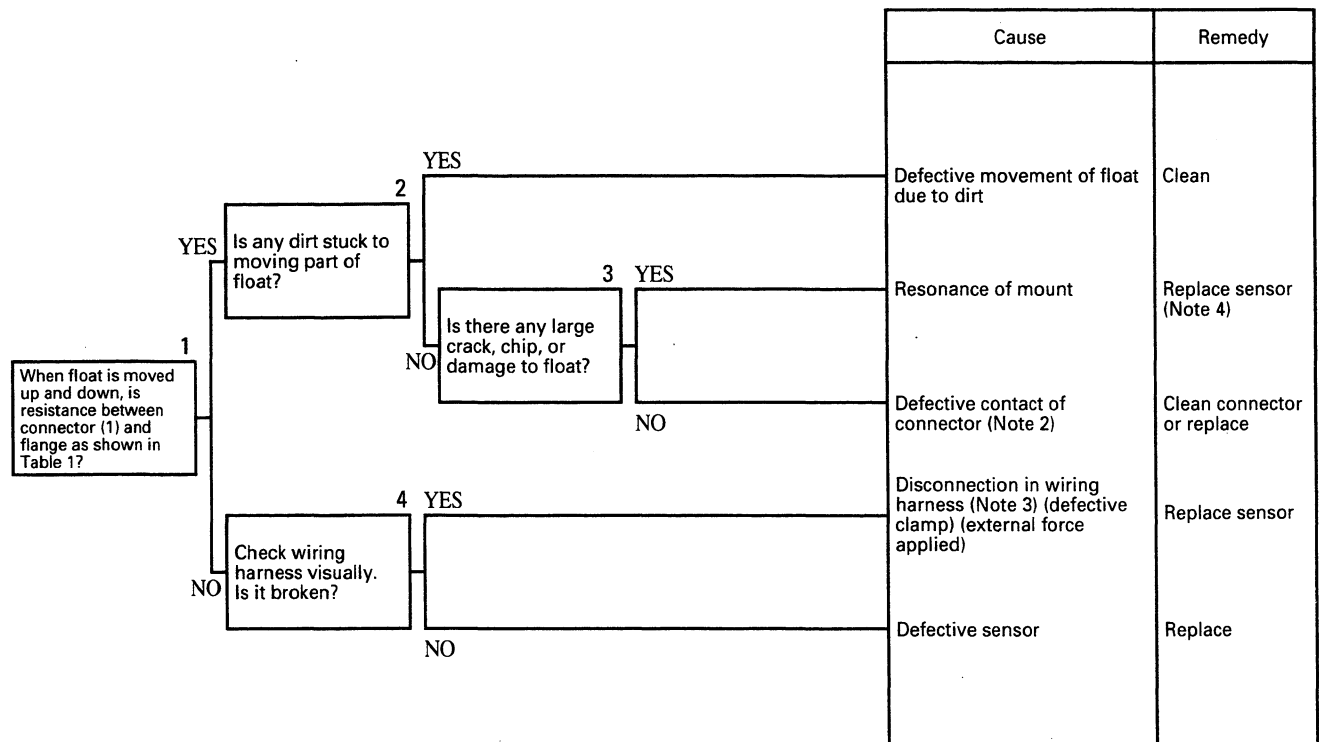


Table 1

Float UP	Max. 1 Ω
Float DOWN	Min.1 MΩ

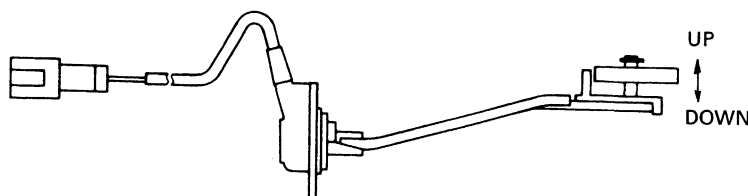

F20205055

Note 2: If the problem occurs again, the connector (female) at the chassis end is probably defective, so check the connector and wiring harness at the chassis end.

Note 3: Check for vibration at the connector mount. If there is excessive vibration, take the appropriate action.


Note 4: Defective installation is a possible cause, so be careful when installing. If the problem occurs again, check for any vibration of the mount, and if there is excessive vibration, take the appropriate action.

M-23 Defective coolant level sensor system

Note 1: Variations in coolant level

The coolant level may change according to the angle of the machine, or the swaying of the machine, so if there is any display, check the coolant level again with the machine at a horizontal place.


★ Remove the coolant level sensor when carrying out troubleshooting.

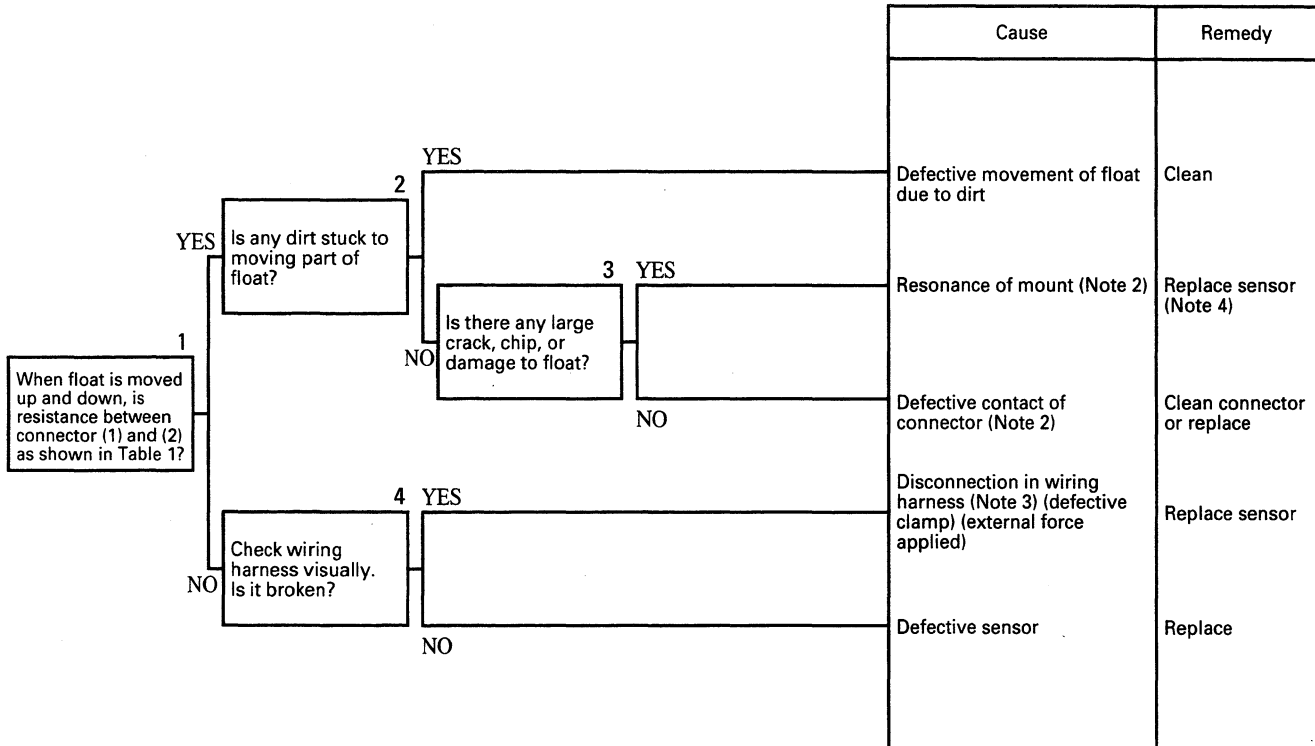

K20506

Table 1

Float UP	Max. 1 Ω
Float DOWN	Min. 1 M Ω

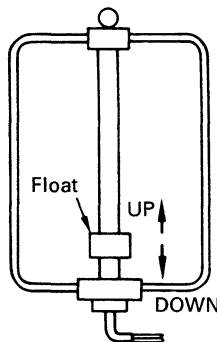

F20205056

Note 2: If the problem occurs again, the connector (female) at the chassis end is probably defective, so check the connector and wiring harness at the chassis end.

Note 3: Check for vibration at the connector mount. If there is excessive vibration, take the appropriate action.

Note 4: Defective installation is a possible cause, so be careful when installing. If the problem occurs again, check for any vibration of the mount, and if there is excessive vibration, take the appropriate action.

M-24 Defective hydraulic oil level sensor system

Note 1: Variations in hydraulic oil level

The hydraulic oil level may change according to the angle of the machine, or the swaying of the machine, so if there is any display, check the hydraulic oil level again with the machine at a horizontal place.

★ Remove the hydraulic oil level sensor when carrying out troubleshooting.


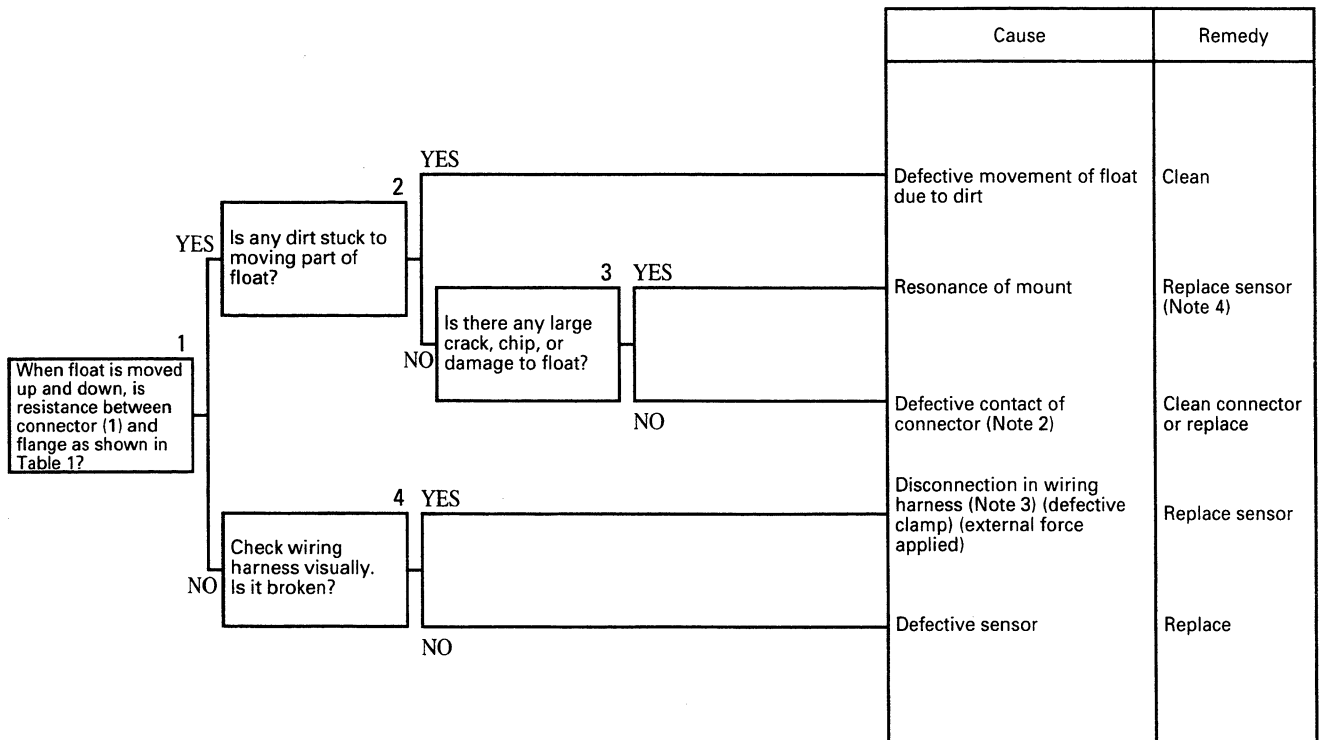


Table 1

Float UP	Max. 1 Ω
Float DOWN	Min.1 MΩ

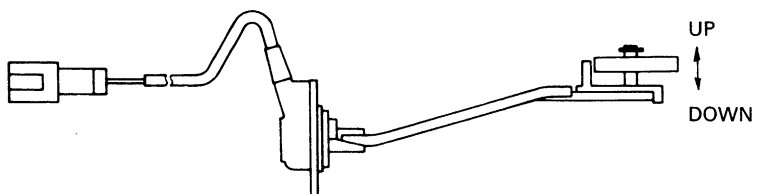

F20205055

Note 2: If the problem occurs again, the connector (female) at the chassis end is probably defective, so check the connector and wiring harness at the chassis end.


Note 3: Check for vibration at the connector mount. If there is excessive vibration, take the appropriate action.

Note 4: Defective installation is a possible cause, so be careful when installing. If the problem occurs again, check for any vibration of the mount, and if there is excessive vibration, take the appropriate action.

M-25 Working light, panel lighting do not light up, or switch is not being used but lights light up

a) Working light does not light up


- ★ Check that fuse 4 is normal.

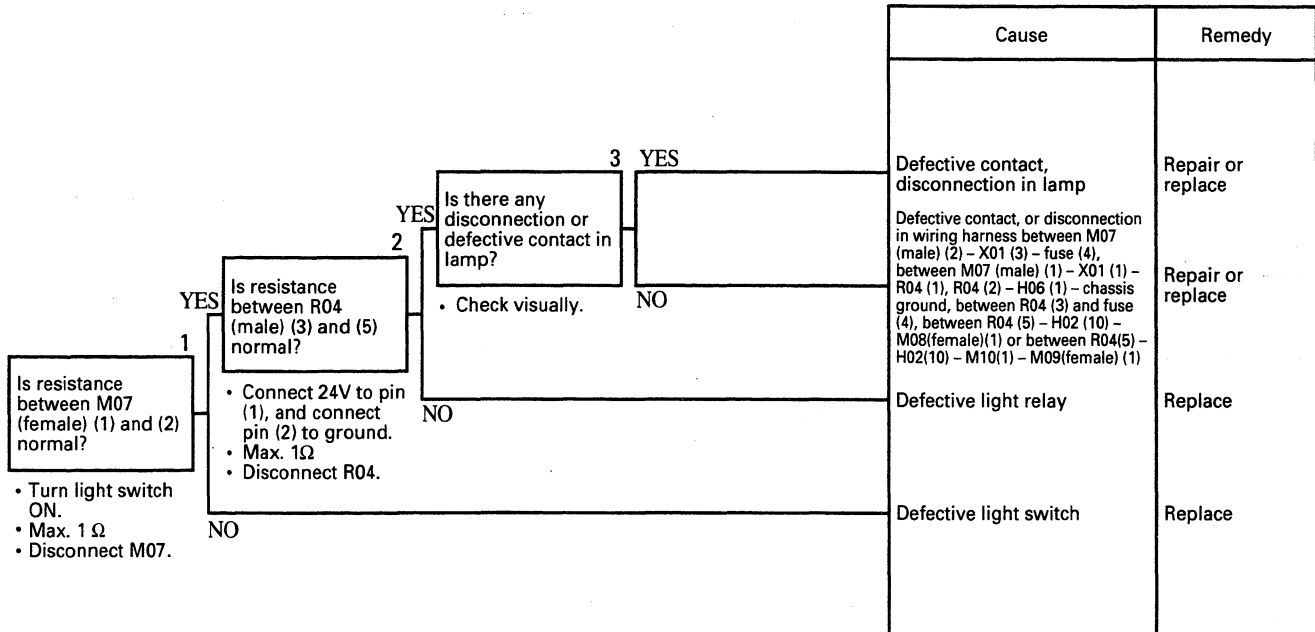


K20506

b) Panel lighting does not light up


- ★ When the lamp lights up normally.

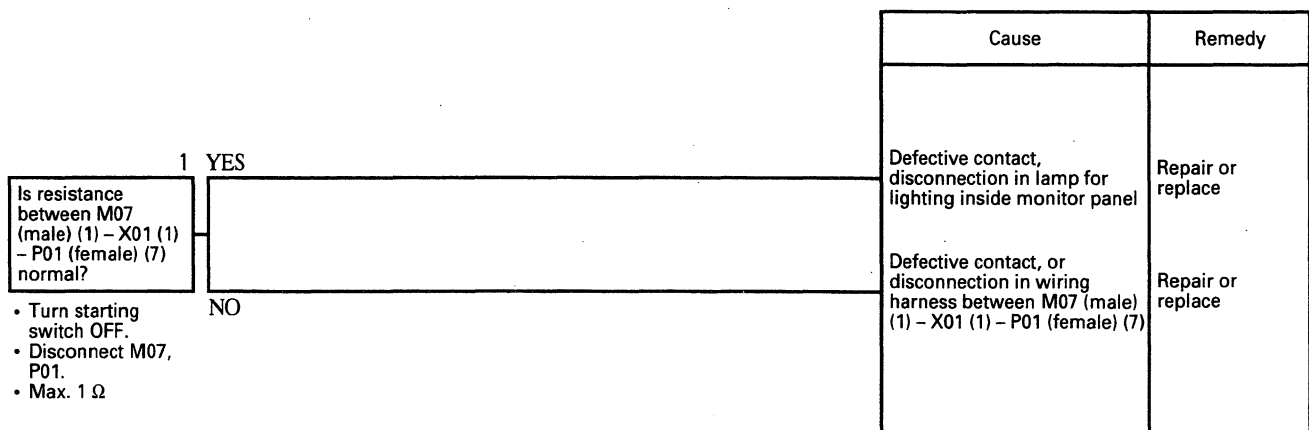

c) Light switch is not being used but working light lights up

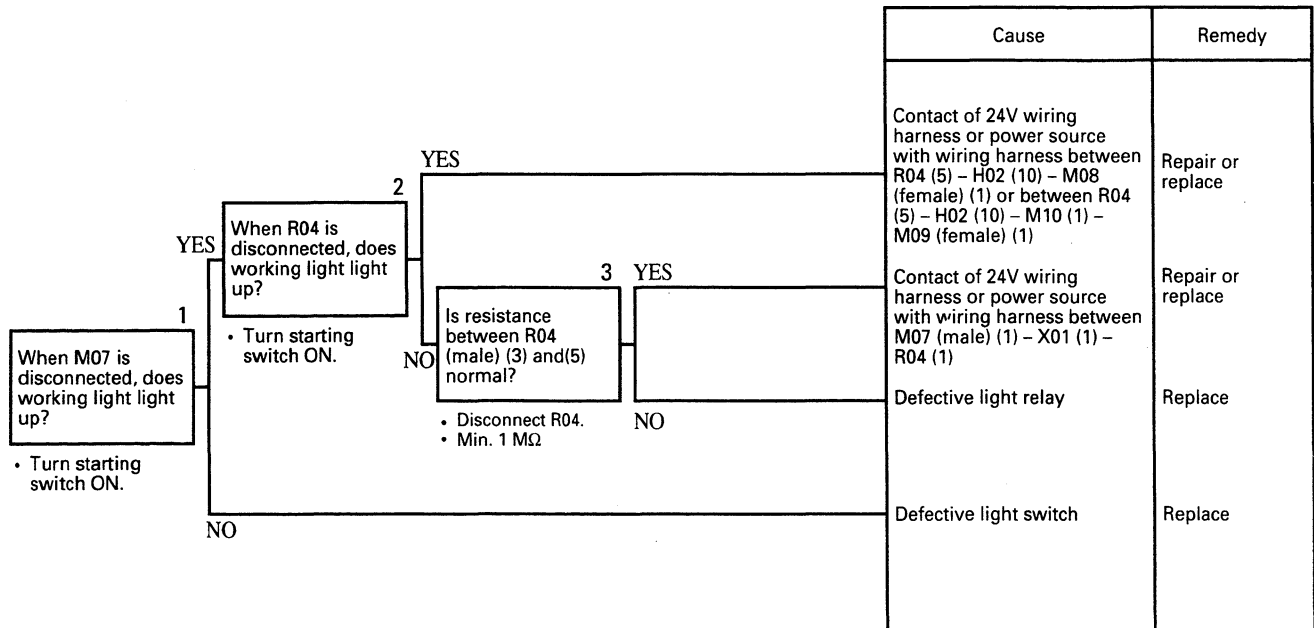


M-25 Related electric circuit diagram

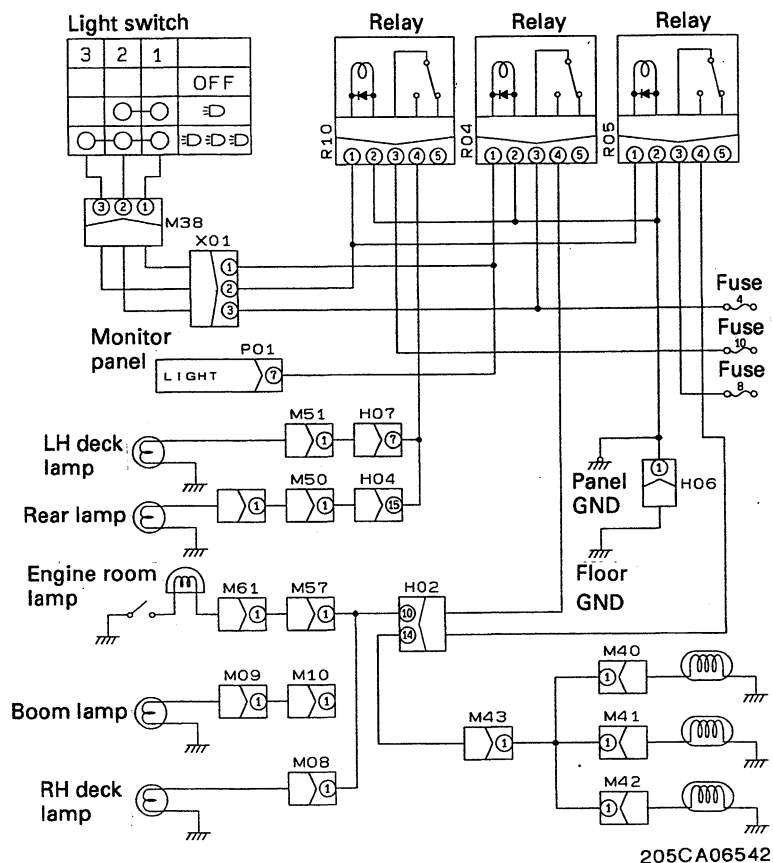

M-26 Wiper does not work or switch is not being used but wiper is actuated

a) Wiper does not work

- ★ Check that fuse 7 is normal.

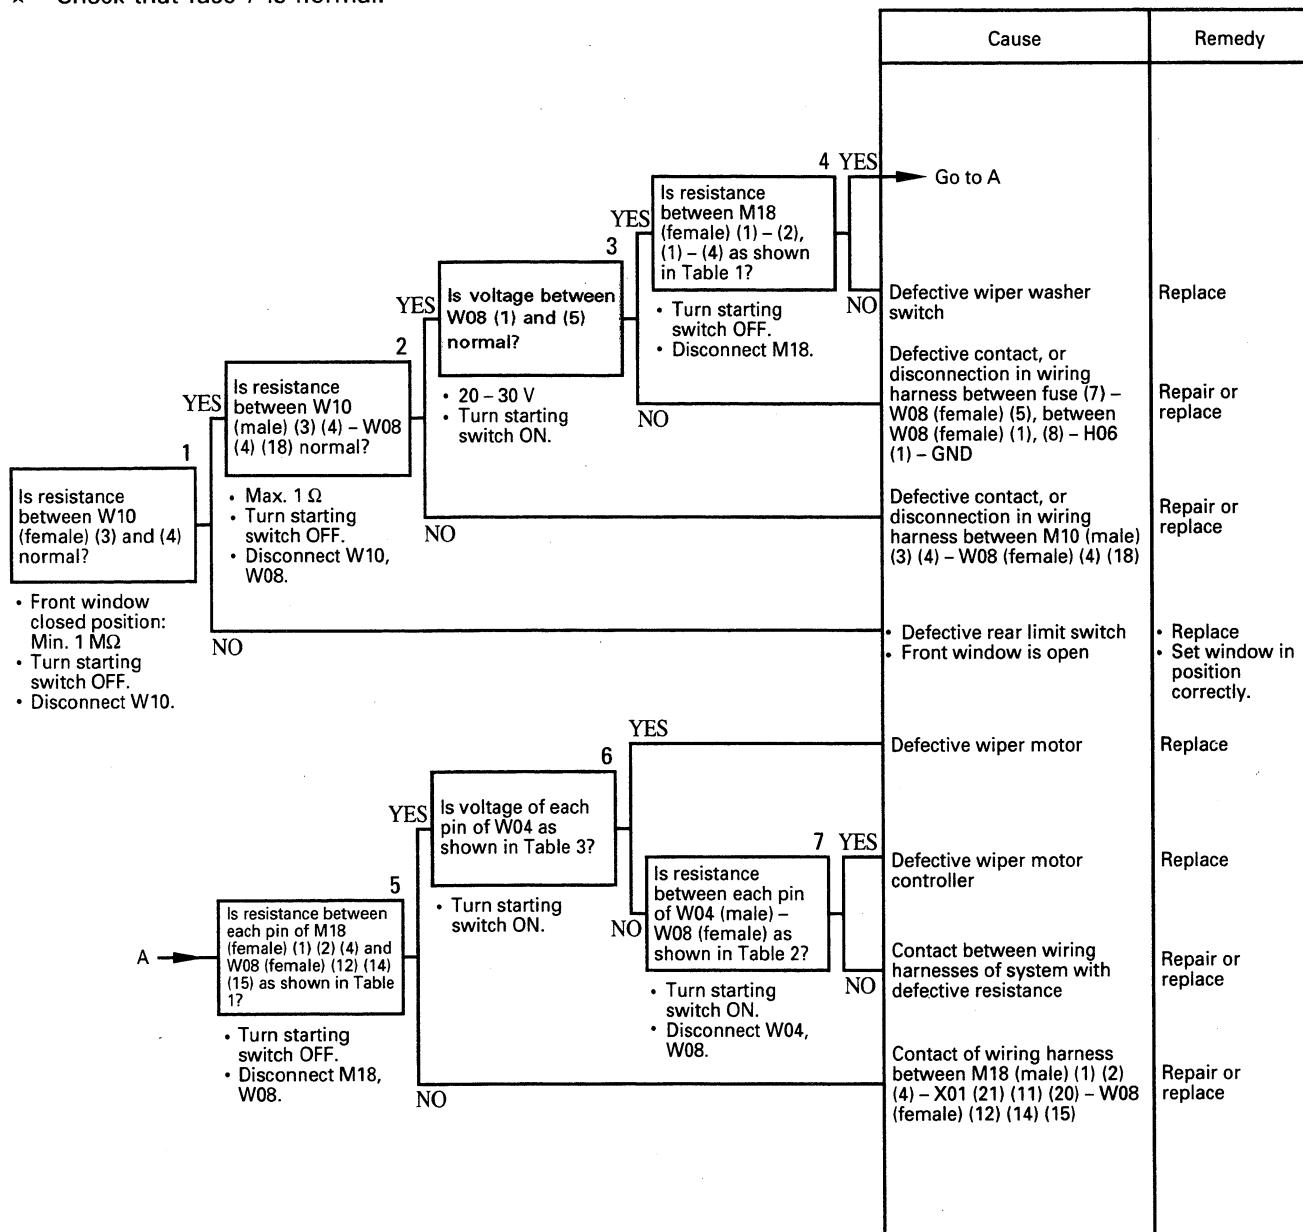

K20506

Table 1

Actuation mode	M18 (female)	W08 (female)	Resistance
INT mode	Between (1) - (4)	Between (12) - (15)	Max. 1 Ω
	Between (1) - (2)	Between (12) - (14)	Min 1 MΩ
	Between (2) - (4)	Between (14) - (15)	
OFF mode	Between (1) - (2)	Between (12) - (14)	Min 1 MΩ
	Between (1) - (4)	Between (12) - (15)	
	Between (2) - (4)	Between (14) - (15)	
ON mode	Between (1) - (2)	Between (12) - (14)	Max. 1 Ω
	Between (1) - (4)	Between (12) - (15)	Min 1 MΩ
	Between (2) - (4)	Between (14) - (15)	

Table 2


Between W04 (female) (1) - W08 (female) (7)	Max. 1Ω
Between W04 (female) (3) - W08 (female) (6)	
Between W04 (female) (4) - W08 (female) (11)	
Between W04 (female) (5) - W08 (female) (9)	
Between W04 (female) (6) - W08 (female) (10)	
Between W04 (female) (1)(3)(4)(5)(6) - GND	Min. 1 MΩ

TROUBLESHOOTING

M-26


Table 3

Timing chart (when wiper switch is ON)

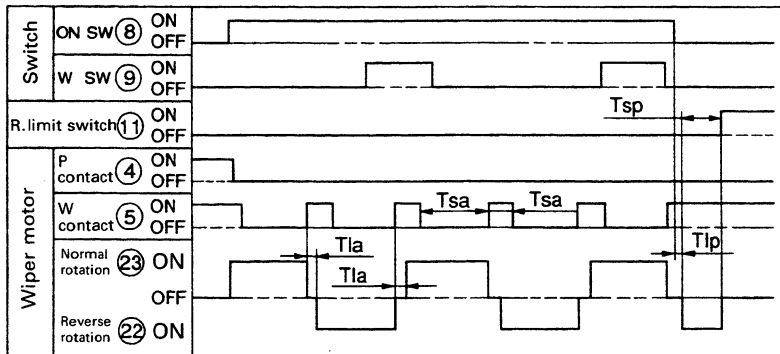


Item	Symbol	Set time
Length of pause until next actuation	Tla	0.13 sec
Safety circuit during operation of wiper [safety function (1)]	Tsa	10 sec
Length of pause when stowing wiper blade	Tlp	1.5 sec
Safety circuit during operation of wiper [safety function (2)]	Tsp	10 sec

Timing chart (when wiper switch is INT)

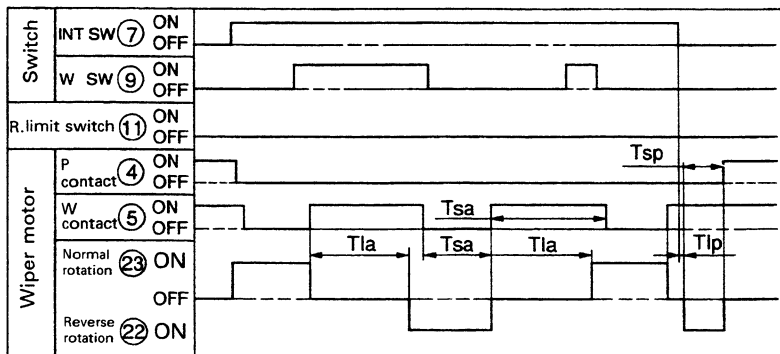


Item	Symbol	Set time
Length of pause until next actuation	Tla	4 sec
Safety circuit during operation of wiper [safety function (1)]	Tsa	10 sec
Length of pause when stowing wiper blade	Tlp	1.5 sec
Safety circuit during operation of wiper [safety function (2)]	Tsp	10 sec

M-26 Related electric circuit diagram

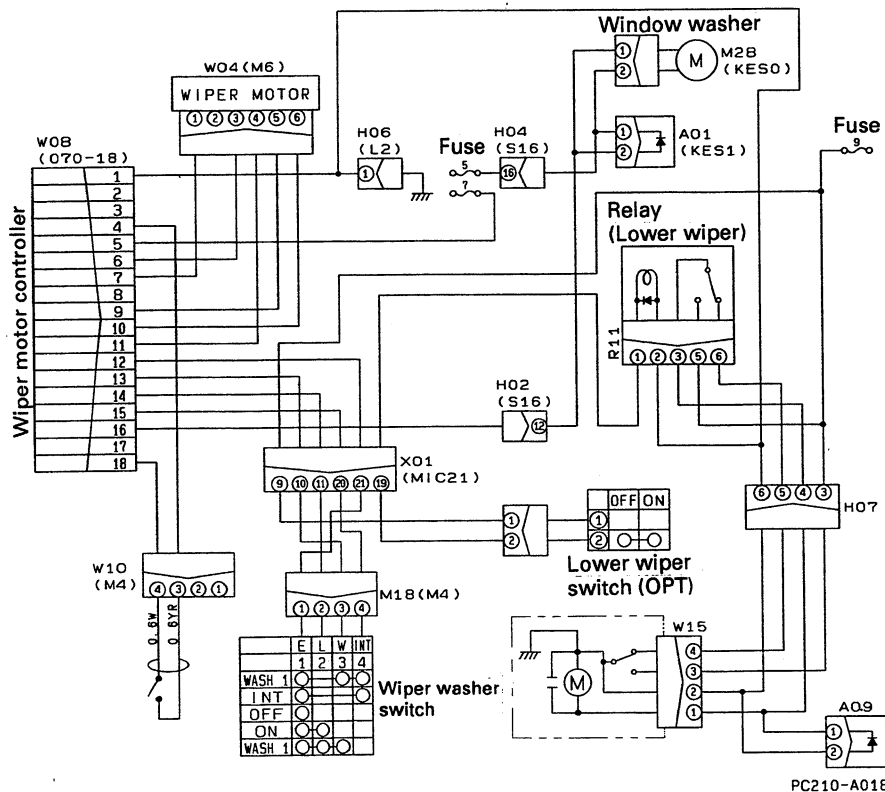

b) Wiper switch is not being used but wiper is actuated

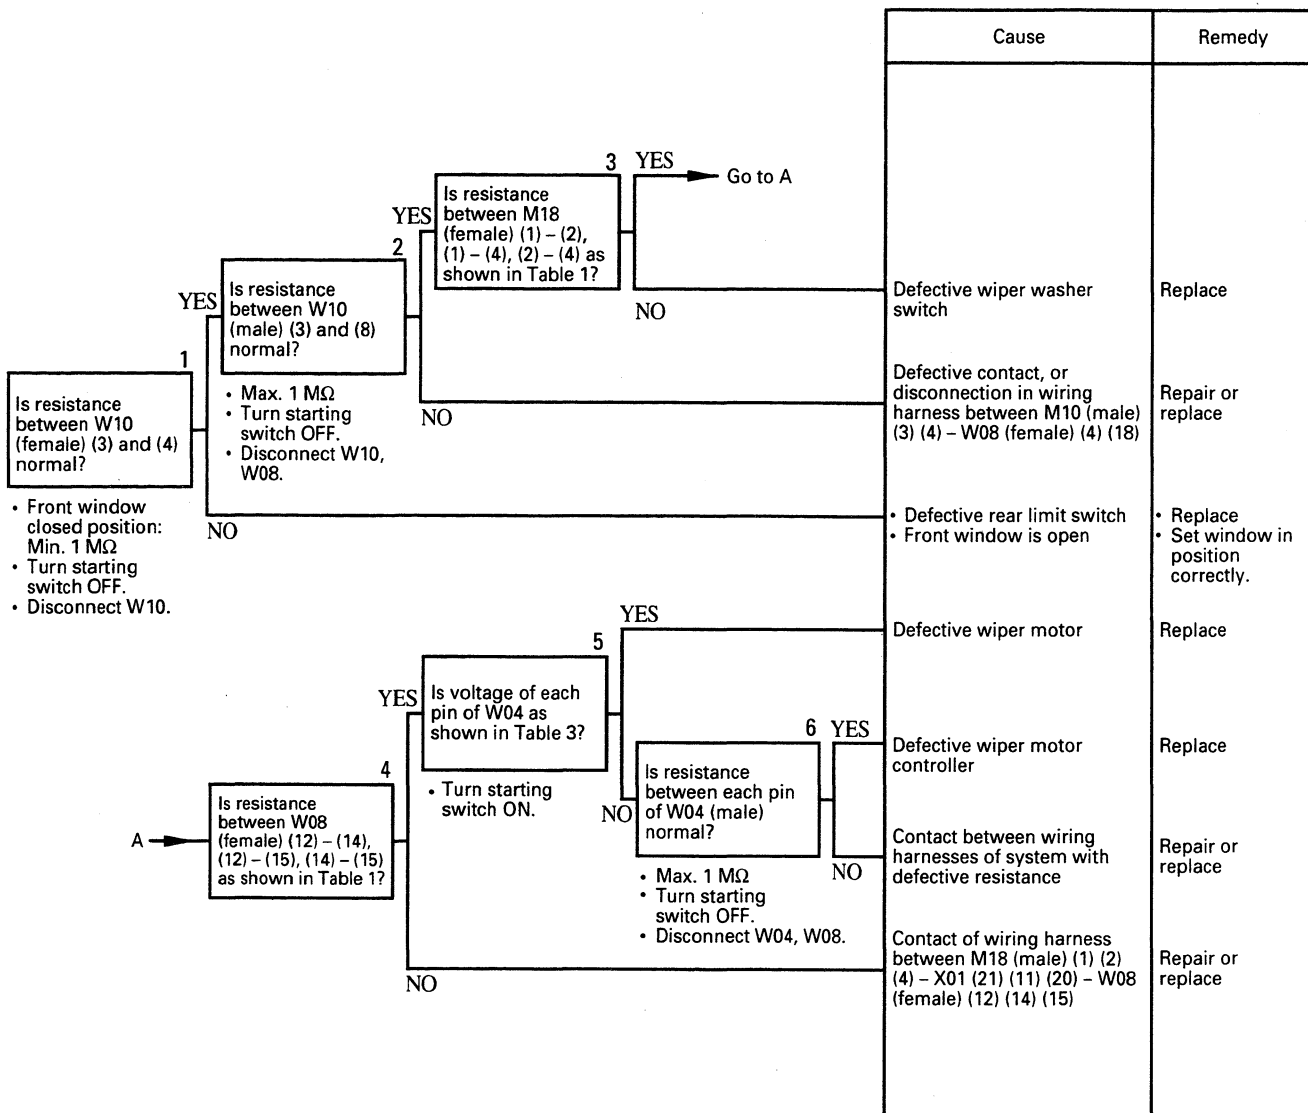


K20506


Table 1

Actuation mode	M18 (female)	W08 (female)	Resistance
INT mode	Between (1) - (4)	Between (12) - (15)	Max. 1 Ω
	Between (1) - (2)	Between (12) - (14)	Min 1 M Ω
	Between (2) - (4)	Between (14) - (15)	
OFF mode	Between (1) - (2)	Between (12) - (14)	Min 1 M Ω
	Between (1) - (4)	Between (12) - (15)	
	Between (2) - (4)	Between (14) - (15)	
ON mode	Between (1) - (2)	Between (12) - (14)	Max. 1 Ω
	Between (1) - (4)	Between (12) - (15)	Min 1 M Ω
	Between (2) - (4)	Between (14) - (15)	

Table 3

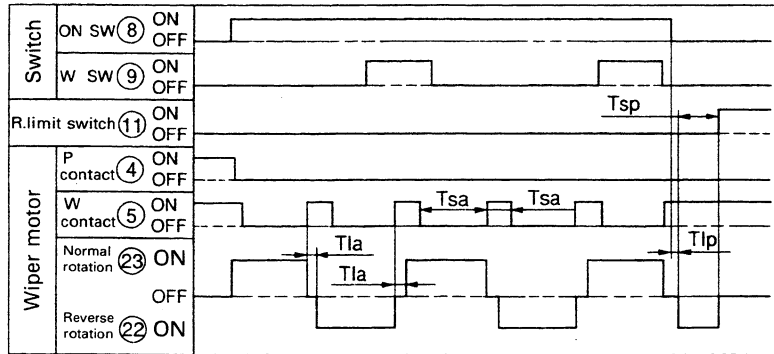Timing chart (when wiper switch is ON)

Item	Symbol	Set time
Length of pause until next actuation	Tla	0.13 sec
Safety circuit during operation of wiper [safety function (1)]	Tsa	10 sec
Length of pause when stowing wiper blade	Tlp	1.5 sec
Safety circuit during operation of wiper [safety function (2)]	Tsp	10 sec

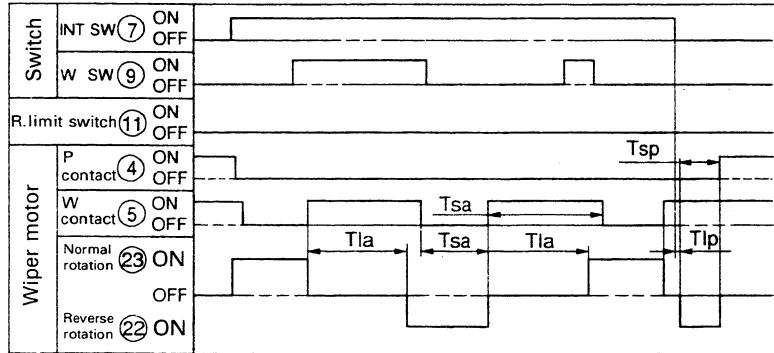Timing chart (when wiper switch is INT)

Item	Symbol	Set time
Length of pause until next actuation	Tla	4 sec
Safety circuit during operation of wiper [safety function (1)]	Tsa	10 sec
Length of pause when stowing wiper blade	Tlp	1.5 sec
Safety circuit during operation of wiper [safety function (2)]	Tsp	10 sec

30 DISASSEMBLY AND ASSEMBLY

METHOD OF USING MANUAL	30- 3	SWING CIRCLE ASSEMBLY	
PRECAUTIONS WHEN CARRYING OUT		Removal	30- 44
OPERATION	30- 4	Installation	30- 45
SPECIAL TOOL LIST	30- 6	IDLER • RECOIL SPRING ASSEMBLY	
AIR CONDITIONER COMPRESSOR		Removal and installation	30- 46
ASSEMBLY		RECOIL SPRING ASSEMBLY	
Removal and Installation	30- 9	Disassembly	30- 47
CONDENSER ASSEMBLY		Assembly	30- 48
Removal and Installation	30- 10	IDLER ASSEMBLY	
GOVERNOR MOTOR ASSEMBLY		Disassembly	30- 49
Removal and Installation	30- 11	Assembly	30- 50
HYDRAULIC OIL COOLER ASSEMBLY		TRACK ROLLER ASSEMBLY	
Removal and Installation	30- 12	Removal and Installation	30- 52
RADIATOR • HYDRAULIC OIL COOLER ASSEMBLY		Disassembly	30- 53
Removal	30- 13	Assembly	30- 54
Installation	30- 14	CARRIER ROLLER ASSEMBLY	
ENGINE • HYDRAULIC PUMP ASSEMBLY		Removal and Installation	30- 56
Removal	30- 16	Disassembly	30- 57
Installation	30- 19	Assembly	30- 58
DAMPER ASSEMBLY		TRACK SHOE ASSEMBLY	
Removal and Installation	30- 20	Removal and Installation	30- 60
FUEL TANK ASSEMBLY		HYDRAULIC TANK ASSEMBLY	
Removal and Installation	30- 21	Removal	30- 61
CENTER SWIVEL JOINT ASSEMBLY		Installation	30- 62
Removal and Installation	30- 22	CONTROL PUMP ASSEMBLY	
CENTER SWIVEL JOINT ASSEMBLY		Removal and Installation	30- 63
Disassembly and Assembly	30- 23	MAIN PUMP ASSEMBLY	
FINAL DRIVE ASSEMBLY		Removal	30- 64
Removal and Installation	30- 24	Installation	30- 65
FINAL DRIVE ASSEMBLY		MAIN PUMP INPUT SHAFT OIL SEAL	
Disassembly	30- 25	Removal and Installation	30- 66
Assembly	30- 28	CONTROL VALVE ASSEMBLY	
SPROCKET		Removal	30- 67
Removal and Installation	30- 32	Installation	30- 68
SWING MOTOR ASSEMBLY		Removal (7-spool control valve)	30- 69
Removal and Installation	30- 33	Installation (7-spool control valve)	30- 70
SWING MACHINERY ASSEMBLY		Disassembly	30- 72
Removal and Installation	30- 34	Assembly	30- 74
SWING MACHINERY ASSEMBLY		PUMP MERGE-DIVIDER VALVE ASSEMBLY	
Disassembly	30- 35	Disassembly and Assembly	30- 76
Assembly	30- 38	PRESSURE COMPENSATION VALVE	
REVOLVING FRAME ASSEMBLY		ASSEMBLY .	
Removal	30- 42	Disassembly and Assembly	30- 77
Installation	30- 43		

K20506

MAIN RELIEF VALVE ASSEMBLY	
Disassembly	30- 78
Assembly	30- 79
TVC • LS VALVE ASSEMBLY FOR FRONT PUMP	
Removal and Installation	30- 80
TVC • LS VALVE ASSEMBLY FOR REAR PUMP	
Removal and Installation	30- 81
LS CONTROL EPC VALVE ASSEMBLY	
Removal and Installation	30- 82
SOLENOID VALVE ASSEMBLY	
Removal and Installation	30- 83
WORK EQUIPMENT • SWING PPC VALVE ASSEMBLY	
Removal and Installation	30- 84
WORK EQUIPMENT • SWING PPC VALVE ASSEMBLY	
Disassembly	30- 85
Assembly	30- 86
TRAVEL PPC VALVE ASSEMBLY	
Removal and Installation	30- 87
Disassembly and Assembly	30- 88
BOOM CYLINDER ASSEMBLY	
Removal	30- 90
Installation	30- 91
ARM CYLINDER ASSEMBLY	
Removal	30- 92
Installation	30- 93
BUCKET CYLINDER ASSEMBLY	
Removal	30- 94
Installation	30- 95
HYDRAULIC CYLINDER ASSEMBLY	
Disassembly	30- 96
Assembly	30- 98
WORK EQUIPMENT ASSEMBLY	
Removal	30- 101
Installation	30- 102
BUCKET ASSEMBLY	
Removal	30- 103
Installation	30- 104
ARM ASSEMBLY	
Removal	30- 105
Installation	30- 106
BUCKET • ARM ASSEMBLY	
Removal	30- 107
Installation	30- 108
BOOM ASSEMBLY	
Removal	30- 109
Installation	30- 110
OPERATOR'S CAB ASSEMBLY	
Removal	30- 111
Installation	30- 113
COUNTERWEIGHT ASSEMBLY	
Removal and Installation	30- 114

ENGINE THROTTLE CONTROLLER ASSEMBLY	
Removal and Installation	30- 115
PUMP CONTROLLER ASSEMBLY	
Removal and Installation	30- 116
MONITOR ASSEMBLY	
Removal and Installation	30- 117

METHOD OF USING MANUAL

1. When removing or installing unit assemblies

- (1) When removing or installing a unit assembly, the order of work and techniques used are given for the removal operation; the order of work for the installation operation is not given.
- (2) Any special techniques applying only to the installation procedure are marked , and the same mark is placed after the relevant step in the removal procedure to indicate which step in the installation procedure it applies to.

(Example)

REMOVAL OF ○○○ ASSEMBLY Title of operation



..... Precautions related to safety when carrying out the operation

1. XXXX (1) Step in operation



..... Technique or important point to remember when removing XXXX (1).

2. △△△ (2):  Indicates that a technique is listed for use during installation

3. □□□□ assembly (3)



..... See Lubricant and Coolant Table

INSTALLATION OF ○○○ ASSEMBLY Title of operation

- Carry out installation in the reverse order to removal.



..... Technique used during installation



..... Technique or important point to remember when installing △△△ (2).

- Adding water, oil Step in operation



..... Point to remember when adding water or oil



..... Quantity of filling oil and water

2. General precautions when carrying out installation or removal (disassembly or assembly) of units are given together as PRECAUTION WHEN CARRYING OUT OPERATION, so be sure to follow these precautions when carrying out the operation.

3. Listing of special tools

- (1) For details of the description, part number, and quantity of any tools (A₁, etc.) that appear in the operation procedure, see the SPECIAL TOOLS LIST given in this manual.

PRECAUTIONS WHEN CARRYING OUT OPERATION

[When carrying out removal or installation (disassembly or assembly) of units, be sure to follow the general precautions given below when carrying out the operation.]

1. Precautions when carrying out removal work

- If the coolant contains antifreeze, dispose of it correctly.
- After disconnecting hoses or tubes, cover them or fit blind plugs to prevent dirt or dust from entering.
- When draining oil, prepare a container of adequate size to catch the oil.
- Confirm the match marks showing the installation position, and make match marks in the necessary places before removal to prevent any mistake when assembling.
- To prevent any excessive force from being applied to the wiring, always hold the connectors when disconnecting the connectors.
- Fit wires and hoses with tags to show their installation position to prevent any mistake when installing.
- Check the number and thickness of the shims, and keep in a safe place.
- When raising components, be sure to use lifting equipment of ample strength.
- When using forcing screws to remove any components, tighten the forcing screws alternately.
- Before removing any unit, clean the surrounding area and fit a cover to prevent any dust or dirt from entering after removal.

★ Precautions when handling piping during disassembling

Fit the following blind plugs into the piping after disconnecting it during disassembly operations.

1) Hoses and tubes using sleeve nuts


Nominal number	Plug (nut end)	Sleeve nut (elbow end) Use the two items below as a set
02	07376-50210	07221-20210 (Nut), 07222-00210 (Plug)
03	07376-50315	07221-20315 (Nut), 07222-00312 (Plug)
04	07376-50422	07221-20422 (Nut), 07222-00414 (Plug)
05	07376-50522	07221-20522 (Nut), 07222-00515 (Plug)
06	07376-50628	07221-20628 (Nut), 07222-00616 (Plug)
10	07376-51034	07221-21034 (Nut), 07222-01018 (Plug)
12	07376-51234	07221-21234 (Nut), 07222-01219 (Plug)

2) Split flange type hoses and tubes

Nominal number	Flange (hose end)	Sleeve head (tube end)	Split flange
04	07379-00400	07378-10400	07371-30400
05	07379-00500	07378-10500	07371-30500

3) If the part is not under hydraulic pressure, the following corks can be used.

Nominal number	Part number	Dimensions		
		D	d	L
06	07049-00608	6	5	8
08	07049-00811	8	6.5	11
10	07049-01012	10	8.5	12
12	07049-01215	12	10	15
14	07049-01418	14	11.5	18
16	07049-01620	16	13.5	20
18	07049-01822	18	15	22
20	07049-02025	20	17	25
22	07049-02228	22	18.5	28
24	07049-02430	24	20	30
27	07049-02734	27	22.5	34

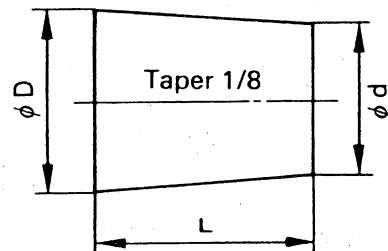

202F2001

K20506

2. Precautions for installation operations

- Tighten all bolts and nuts (sleeve nuts) to the specified (KES) torque.
- Install the hoses without twisting or interference.
- Replace all gaskets, O-rings, cotter pins, and lock plates with new parts.
- Bend the cotter pin or lock plate securely.
- When coating with adhesive, clean the part and remove all oil and grease, then coat the threaded portion with 2 — 3 drops of adhesive.
- When coating with gasket sealant, clean the surface and remove all oil and grease, check that there is no dirt or damage, then coat uniformly with gasket sealant.
- Clean all parts, and correct any damage, dents, burrs, or rust.
- Coat rotating parts and sliding parts with engine oil.
- When press fitting parts, coat the surface with antifriction compound (LM-P).
- After fitting snap rings, check that the snap ring is fitted securely in the ring groove.
- When connecting wiring connectors, clean the connector to remove all oil, dirt, or water, then connect securely.
- When using eyebolts, check that there is no deformation or deterioration, screw them fully, and align the direction of the hook.
- When tightening split flanges, tighten uniformly in turn to prevent excessive tightening on one side.
- ★ When operating the hydraulic cylinders for the first time after reassembling cylinders, pumps and other hydraulic equipment removed for repair, always bleed the air as follows:
 1. Start the engine and run at low idling.
 2. Operate the work equipment control lever to operate the hydraulic cylinder 4 — 5 times, stopping 100 mm from the end of its stroke.
 3. Next, operate the hydraulic cylinder 3 — 4 times to the end of its stroke.
 4. After doing this, run the engine at normal speed.
- ★ When using the machine for the first time after repair or long storage, follow the same procedure.

3. Precautions when completing the operations

- If the coolant has been drained, tighten the drain valve, and add water to the specified level. Run the engine to circulate the water through the system. Then check the water level again.
- If the hydraulic equipment has been removed and installed again, add engine oil to the specified level. Run the engine to circulate the oil through the system. Then check the oil level again.
- If the piping or hydraulic equipment, such as hydraulic cylinders, pumps, or motors, have been removed for repair, always bleed the air from the system after reassembling the parts.
 - ★ For details, see TESTING AND ADJUSTING, Bleeding air.
- Add the specified amount of grease (molybdenum disulphide grease) to the work equipment related parts.

SPECIAL TOOL LIST

Nature of work	Symbol	Part No.	Part Name	Q'ty	Remarks	
· Engine · hydraulic pump assembly · Radiator · hydraulic oil cooler assembly · Control pump assembly · Hydraulic pump assembly · Removal, installation of TVC · LS valve assembly	B	796-460-1210	Oil stopper	1		
Disassembly of center swivel joint assembly	D	790-101-2501	Push-puller	1		
Removal, installation of swing circle	E	790-331-1110	Wrench	1	Tightening of circle bolt	
Disassembly, assembly of swing machinery assembly	F	796-426-1120	Push tool	1	Press fitting of bearing	
Disassembly, assembly of final drive assembly	G	1	796-427-1120	Wrench	1	Press fitting of bearing inner race
		2	796-427-1130	Push tool	1	
			790-101-2510	Block	1	
			792-104-3940	Bolt	2	
			01580-11631	Nut	2	
			01643-31645	Washer	2	
			790-105-2100	Jack	1	
			790-101-1102	Pump	1	
		3	790-331-1110	Wrench	1	
		4	791-545-1510	Installer	1	
Removal, installation of recoil spring assembly	H	1	791-600-2001 or 791-685-8005	Compressor (A) Compressor (B)	1 1	Removal, press fitting of master pin
			791-635-3160	Extension	1	
			790-101-1600	Cylinder (70 ton)	1	
			790-101-1102	Pump	1	
		2	790-201-1500	Push tool kit	1 1 1	Installation of recoil spring piston dust seal
			· 790-201-1620	· Plate		
			· 790-101-5021	· Grip		
			· 01010-50816	· Bolt		
Removal, installation of track shoe assembly	I	790-630-3000	Remover & Installer	1	Removal, press fitting of master pin	
		790-101-1300	Cylinder (70 ton)	1		
		790-101-1102	Pump	1		

K20506

DISASSEMBLY AND ASSEMBLY

SPECIAL TOOL LIST

Nature of work	Symbol	Part No.	Part Name	Q'ty	Remarks		
Assembly of idler assembly	J	1	790-434-1630	Installer	1	Installation of floating seal	
		2	791-601-1000	Oil pump	1	Charging with oil, checking for air leakage	
Disassembly, assembly of track roller assembly	k	1	790-434-1640	Installer	1	Installation of floating seal	
		2	791-601-1000	Oil pump	1	Charging with oil, checking for air leakage	
		3	790-331-1110	Wrench	1	Tightening of track roller assembly mounting bolt	
Disassembly, assembly of carrier roller assembly	L	1	797-101-1121	Wrench	1	Removal, installation of nut	
		2	796-430-1110	Push tool	1	Press fitting of bearing	
		3	791-434-1650	Installer	1	Installation of floating seal	
		4	791-601-1000	Oil pump	1	Charging with oil, checking for air leakage	
Installation of track roller	M	790-331-1110	Wrench	1	Tightening of track roller bolt		
Replacement of pump shaft oil seal	N	791-463-1141	Push tool	1			
		790-201-2740	Spacer	1			
Disassembly, assembly of hydraulic cylinder	O	1	790-502-1003	Cylinder repair stand	1		
			790-101-1102	Pump	1		
		2	790-302-1450	Socket (width across flats: 95mm)	1	PC210 Arm PC240 Arm PC240 Boom	Removal, installation of piston nut
			790-302-1350	Socket (width across flats: 85mm)	1	PC210 Boom	
		3	790-720-1000	Expander	1	Expansion of piston ring	
		4	796-720-1680 07281-01589	Ring Clamp	1 1	PC240 Arm	Installation of piston ring
			796-720-1670 07281-01279	Ring Clamp	1 1	PC210 Boom PC240 Boom PC210 Boom PC240 Bucket	
			796-720-1660 07281-01159	Ring Clamp	1 1	PC210 Bucket	
		5	790-201-1702 • 790-201-1831 • 790-101-5021 • 01010-50816	Push tool kit • Push tool • Grip • Bolt	1 1 1 1	PC210 Bucket	Press fitting of bushing
			790-201-1702 • 790-201-1841 • 790-101-5021 • 01010-50816	Push tool kit • Push tool • Grip • Bolt	1 1 1	PC240 Boom PC240 Bucket	

K20506

DISASSEMBLY AND ASSEMBLY

SPECIAL TOOL LIST



Nature of work	Symbol		Part No.	Part Name	Q'ty	Remarks		
Disassembly, assembly of hydraulic cylinder	O	5	790-201-1702 • 790-201-1851 • 790-101-5021 • 01010-50816	Push tool kit • Push tool • Grip • Bolt	1 1 1	PC210 Arm	Press fitting of bushing	
			790-201-1702 • 790-201-1930 • 790-101-5021 • 01010-50816	Push tool kit • Push tool • Grip • Bolt	1 1 1	PC210 Arm		
			790-201-1702 • 790-201-1940 • 790-101-5021 • 01010-50816	Push tool kit • Push tool • Grip • Bolt	1 1 1	PC210 Boom		
		6	790-201-1500 • 790-201-1640 • 790-101-5021 • 01010-50816	Push tool kit • Push tool • Grip • Bolt	1 1 1	PC210 Bucket	Insertion of dust seal	
			790-201-1500 • 790-201-1650 • 790-101-5021 • 01010-50816	Push tool kit • Push tool • Grip • Bolt	1 1 1	PC240 Boom PC240 Bucket		
			790-201-1500 • 790-201-1660 • 790-101-5021 • 01010-50816	Push tool kit • Push tool • Grip • Bolt	1 1 1	PC240 Arm		
			790-201-1980 790-101-5021 01010-50816	Plate Grip Bolt	1 1 1	PC210 Boom		
			790-201-1990 790-101-5021 01010-50816	Plate Grip Bolt	1 1 1	PC210 Arm		
		• Removal, installation of work equipment assembly • Boom assembly	P	796-900-1200 790-101-4000 790-101-1102	Remover Puller (50 ton long) Pump (30 ton)	1 1 1	Removal of boom foot pin	

K20506

REMOVAL OF AIR CONDITIONER COMPRESSOR ASSEMBLY

⚠ Under pressure, precautions must be taken to protect eyes and skin. Never loosen any part of the refrigerant circuit while charged with gas. The air conditioner system should only be serviced by qualified personnel.

1. Remove refrigerant gas (R134a) using gas recovery equipment. Don't release gas to the atmosphere.
2. Remove hose support bracket (2).
3. Disconnect hoses (3) and (4) and disconnect electrical connector.
4. Loosen bolts (5) and (6) and rotate compressor about bolt (5) towards the engine and remove drive belt (7).
5. Remove bolts (8) then remove air conditioner compressor (9).

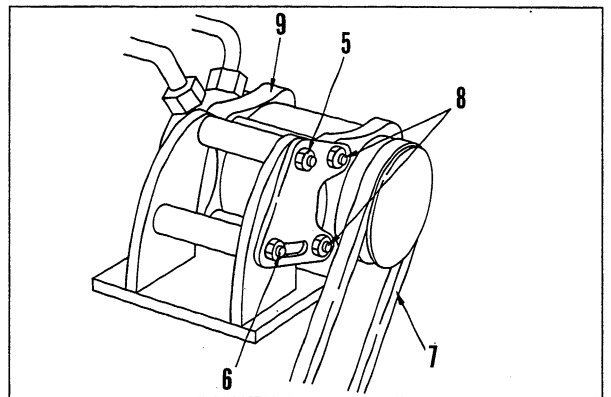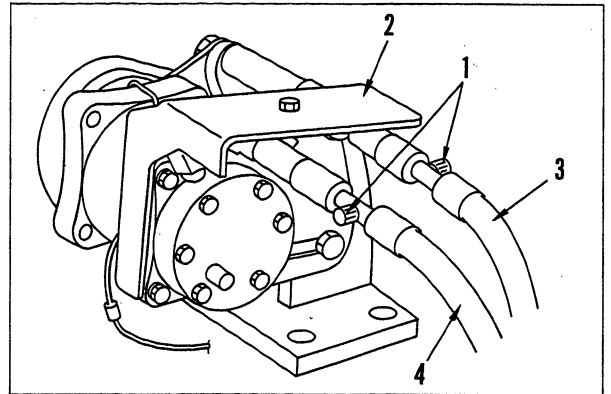


INSTALLATION OF AIR CONDITIONER COMPRESSOR ASSEMBLY

- Carry out installation in reverse order of removal.
 - ★ Check O-rings of hoses are not damaged or deteriorated.
 - ★ Adjust the belt tension (see TESTING AND ADJUSTING).
- Fill with refrigerant (R-134a).

K20506

REMOVAL OF CONDENSOR ASSEMBLY

1. Open forward left side cover and remove top cover.
2. Disconnect electrical connector and hoses (1) and (2) and tube (3).
 - ★ Loosen the sleeve nut slightly and release the refrigerant (R134a) completely before disconnecting hoses and tubes.
 - ★ Fit plugs to hoses and tubes to prevent ingress of moisture, dust or dirt.
3. Remove receiver/dryer tank (4).
4. Remove condensor assembly (5) by removing bolts and washers (6).

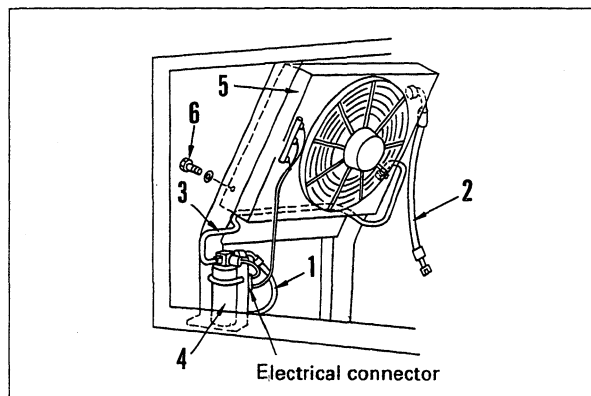


INSTALLATION OF CONDENSOR ASSEMBLY

- Carry out installation in the reverse order to remove.
 - ★ Check that the O-ring is not damaged or deteriorated
- Fill with refrigerant (R134a)

REMOVAL OF GOVERNOR MOTOR ASSEMBLY

⚠ Disconnect the cable from the negative (–) terminal of the battery.

1. Open engine hood and disconnect governor motor connector (1).
2. Remove motor cover (4).
3. Remove motor rod (2).
4. Remove governor motor assembly (3). ※ 1
 - ★ Rotate the shaft of the governor motor and do not stop it suddenly.

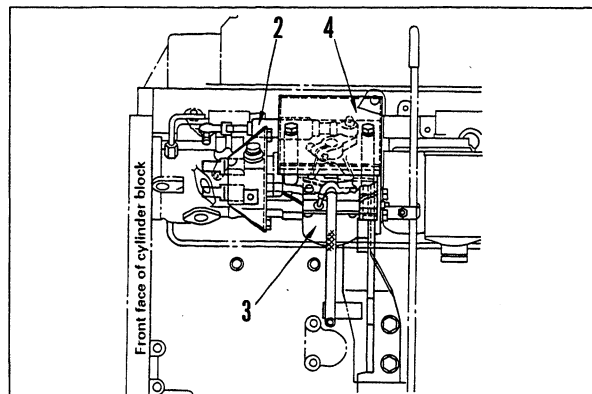

INSTALLATION OF GOVERNOR MOTOR ASSEMBLY

- Carry out installation in the reverse order to removal.

※ 1

- ★ Adjust the rod. For details, see TESTING AND ADJUSTING, Testing and adjusting of governor motor lever stroke.



K20506

REMOVAL OF HYDRAULIC OIL COOLER ASSEMBLY

1. Remove tool box and under cover, and set oil container under chassis.
2. Disconnect hoses (4) and (5).
 - ★ Disconnect hose (4) at the cooler end, and hose (5) at the chassis end.
 - ★ Put blind plugs in the places that have been disconnected.
3. Remove mounting bolts (6) at side of hydraulic oil cooler assembly.
4. Sling hydraulic oil cooler assembly (7), remove 2 mounting bolts each on left and right, then lift off hydraulic oil cooler assembly (7).




Hydraulic oil cooler assembly: 55 kg

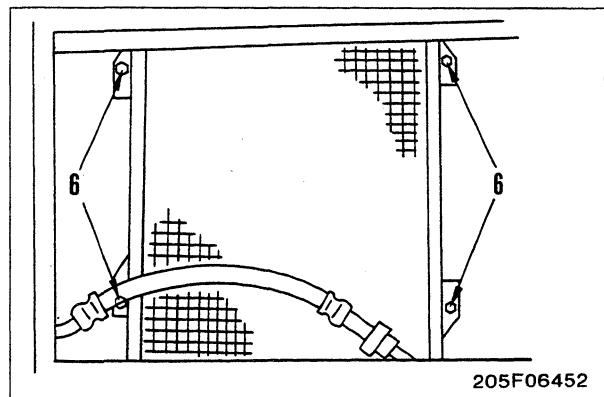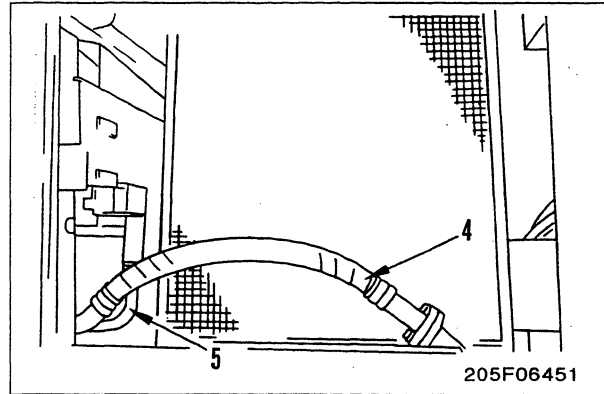

INSTALLATION OF HYDRAULIC OIL COOLER ASSEMBLY

- Carry out installation in the reverse order to removal.
- Refilling with oil (hydraulic tank)
 - ★ Add oil through the oil filler to the specified level. Run the engine to circulate the oil through the system. Then check the oil level again.

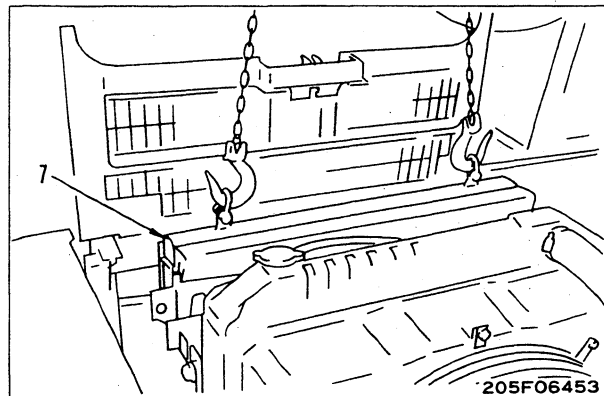

K20506

REMOVAL OF RADIATOR • HYDRAULIC OIL COOLER ASSEMBLY



! Lower the work equipment completely to the ground and stop the engine. Then loosen the oil filler cap slowly to release the pressure inside the hydraulic tank.

- Remove the hydraulic tank strainer, and using tool **B**, stop the oil.
 - When not using tool **B**, remove the drain plug, and drain the oil from the hydraulic tank and inside the system.




Hydraulic tank: Approx. 170 l

- Drain engine coolant.
1. Remove undercover under radiator.
 2. Disconnect small diameter from radiator (near cap) to reservoir tank.
 3. Disconnect cooler hoses (4) and (5).

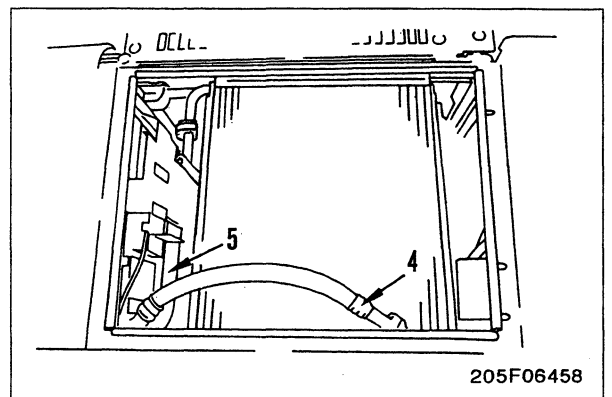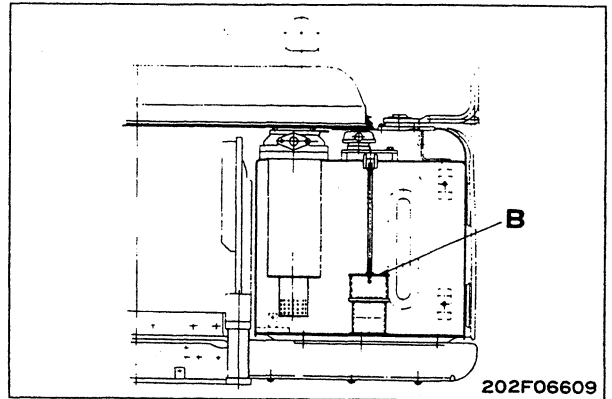


4. Disconnect radiator upper hose (9), and remove clamps of heater hose (10) from right side of radiator assembly.
5. Remove fan guard (11).

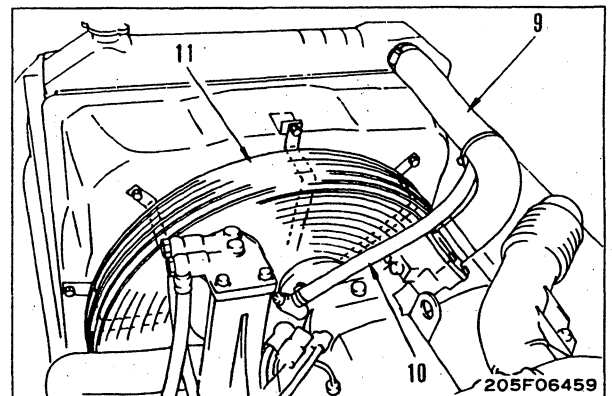

K20506



6. Disconnect radiator support rods (12) and (13).
 - ★ Loosen the mounting bolts, then remove the top mounting bolts and move the rods towards the rear of the engine.

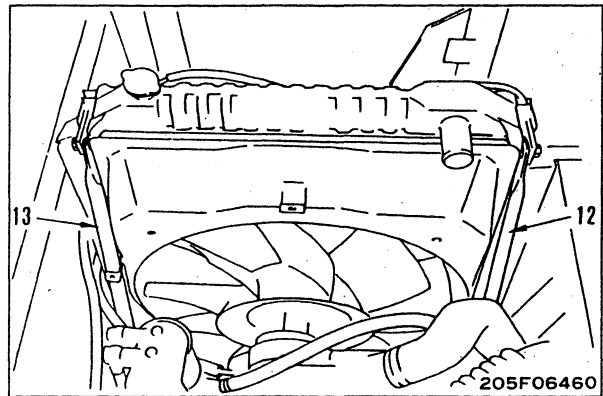

7. Disconnect radiator lower hose (14) and heater hose (15).
 - ★ The radiator lower hose is fixed by a clamp to the radiator, so always disconnect the clamp.
8. Sling radiator and hydraulic oil cooler assembly (16), remove 4 bottom mounting bolts, then lift off radiator and hydraulic oil cooler assembly.
 - ★ When raising the radiator and hydraulic oil cooler assembly, check the position carefully and do not let it hit the fan when removing it.



Radiator • hydraulic oil cooler assembly
: 125 kg

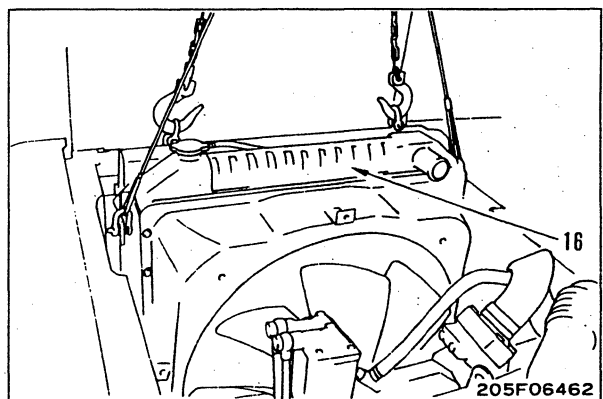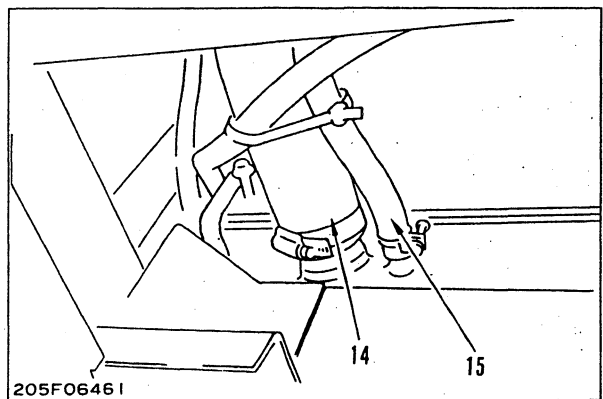

INSTALLATION OF RADIATOR • HYDRAULIC OIL COOLER ASSEMBLY

- Carry out installation in the reverse order to removal.
- Refilling with water
 - ★ Add water through the water filler to the specified level. Run the engine to circulate the water through the system. Then check the water level again.
- Refilling with oil (hydraulic tank)
 - ★ Add oil through the oil filler to the specified level. Run the engine to circulate the oil through the system. Then check the oil level again.

K20506

REMOVAL OF ENGINE • HYDRAULIC PUMP ASSEMBLY



- ⚠ Disconnect the cable from the negative (−) terminal of the battery.
- ⚠ Lower the work equipment completely to the ground and stop the engine. Then loosen the oil filler cap slowly to release the pressure inside the hydraulic tank.

- Remove the hydraulic tank strainer, and using tool B, stop the oil.
 - When not using tool B, remove the drain plug, and drain the oil from the hydraulic tank and inside the system.




Hydraulic tank: Approx. 170 l


- ★ Mark all the piping with tags to prevent mistakes in the mounting position when installing.
 - Drain engine coolant.
1. Remove cotter pin (1) of stopper, then remove engine hood (2).

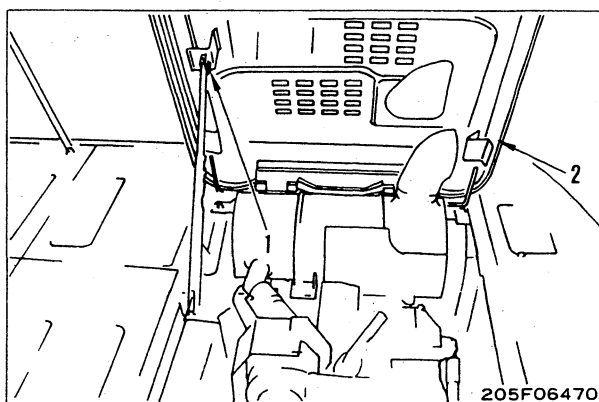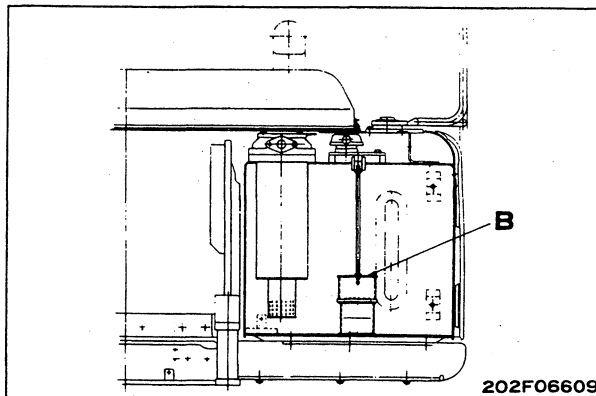

2. Remove side cover and mounting frame (3).

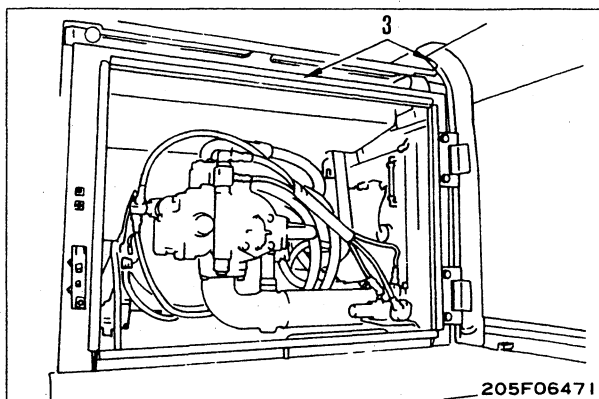


3. Remove engine hood mounting bracket (4), cover (5), and engine room partition plate (6).

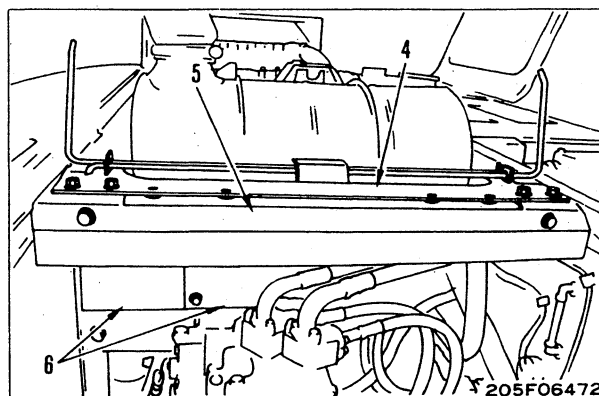


K20506


4. Disconnect hoses (7), (8), and (9) from TVC · LS valve.
5. Pull out connectors (10) and (11) from holder and disconnect.
 - ★ Remove the connector wiring clamps completely.

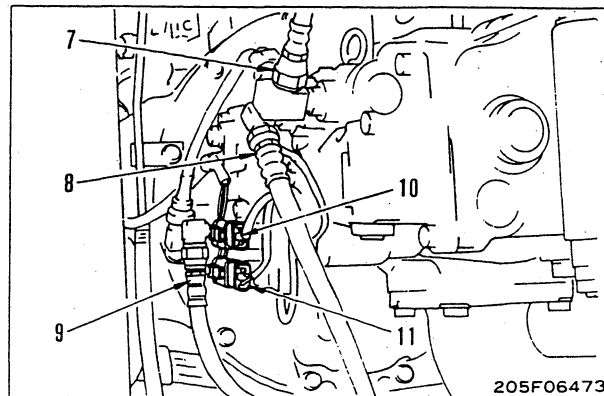


6. Disconnect hoses (12) and (13) from control pump.
7. Remove suction tubes (14) and (15).

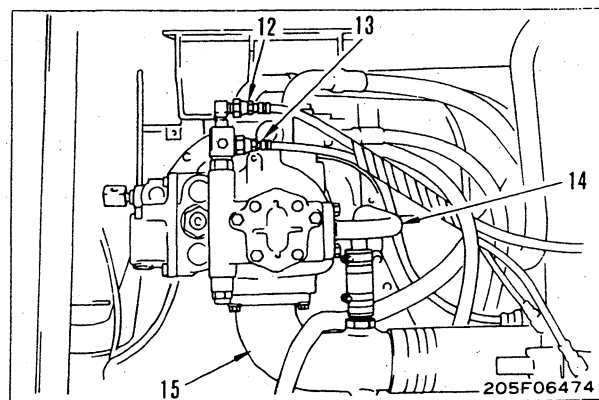

8. Disconnect hoses (16) and (17) installed to top of main pump assembly.
9. Remove cover (18), and disconnect hose bracket (19) from pump.

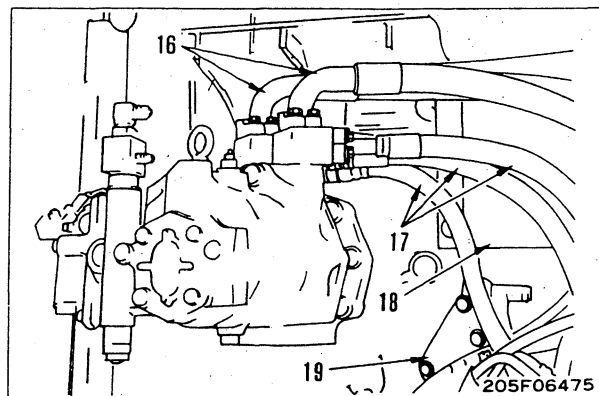


10. Remove bracket (20) at counterweight end.

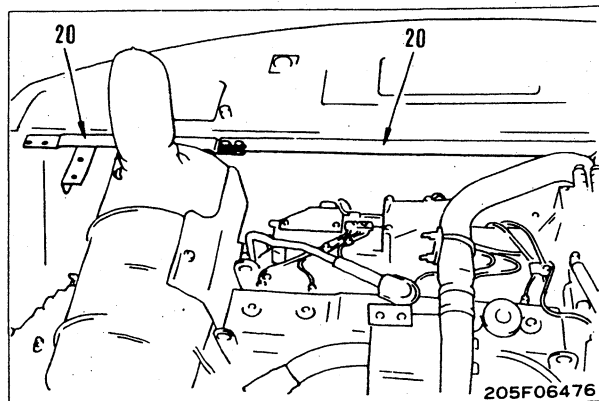


K20506

11. Disconnect connector (21).

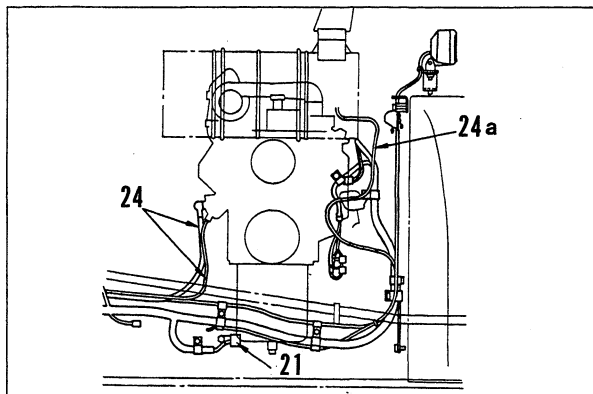

12. Disconnect governor motor connectors (22), and remove wiring clamp (23).


13. Disconnect starting motor wiring (24). Disconnect intake heat wiring (24A) and engine earth (24B).

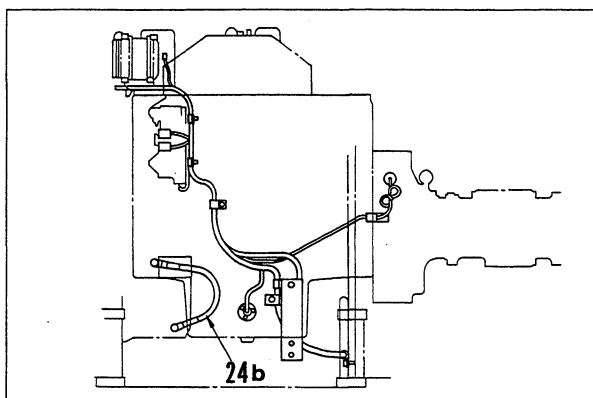


14. Disconnect air conditioner compressor hoses (25) and (26). (If fitted)

- ★ Loosen the sleeve nut slightly and release the refrigerant (gas) completely before disconnecting the hoses.
- ★ Fit blind plugs to prevent the entry of moisture, dust or dirt into the hoses.

15. Disconnect fuel hoses (27) and ground connection (28).

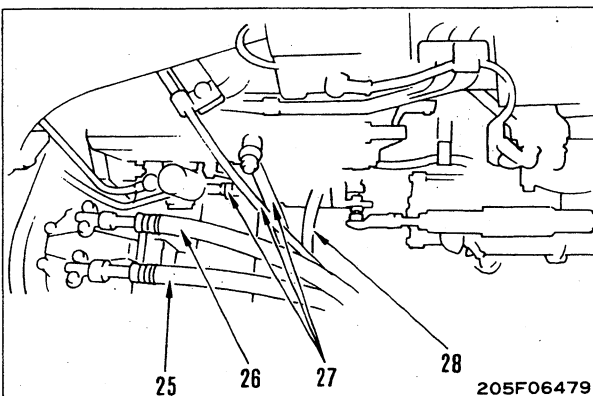

16. Remove radiator upper hose (29), heater hose (30), air cleaner connector (31) and fan guard (32).

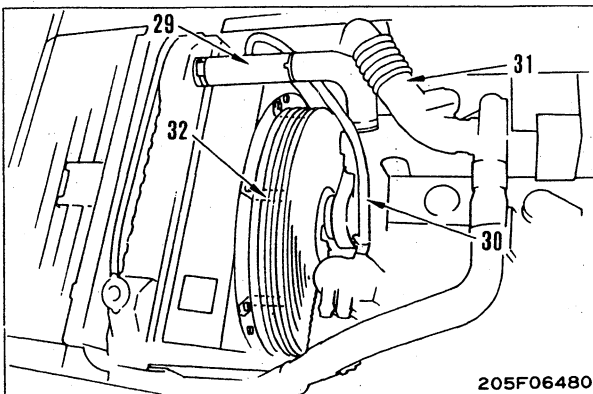


K20506

17. Remove fan (33), and disconnect radiator lower hose (34).
18. Remove mount bolt, and raise engine and hydraulic pump assembly (36) slowly, then move to right side of chassis and lift off.
 - ★ When removing the engine and hydraulic pump assembly, check that all the wiring and piping has been disconnected.



Engine • hydraulic pump assembly: 750 kg

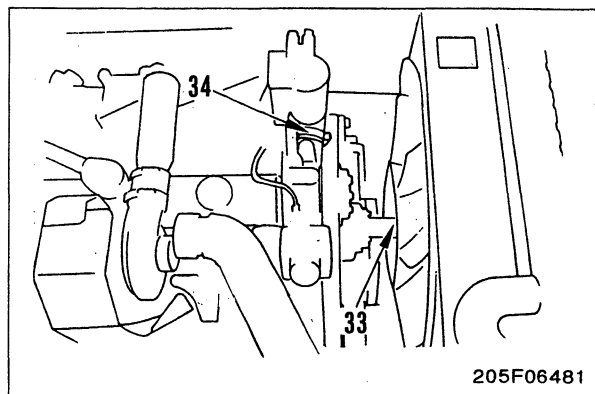

INSTALLATION OF ENGINE • HYDRAULIC PUMP ASSEMBLY

- Carry out installation in the reverse order to removal.


※ 1



Engine mount bolt:


$276.9 \pm 31.9 \text{ Nm}$ ($28.3 \pm 3.3 \text{ kgm}$)

- Refilling with water
 - ★ Add water through the water filler to the specified level. Run the engine to circulate the water through the system. Then check the water level again.
- Refilling with oil (hydraulic tank)
 - ★ Add oil through the oil filler to the specified level. Run the engine to circulate the oil through the system. Then check the oil level again.
- Bleeding air
 - ★ Bleed the air from the hydraulic pump. For details, see TESTING AND ADJUSTING, Bleeding air.

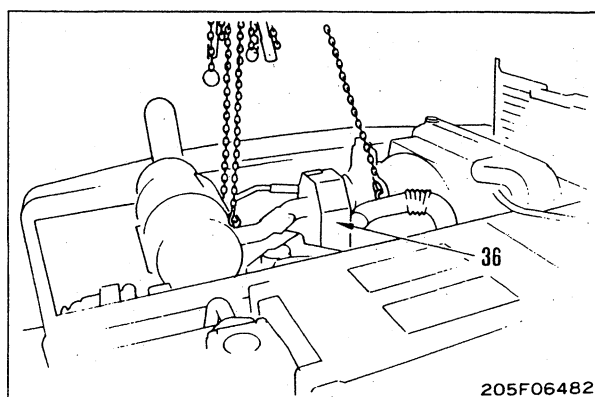

REMOVAL OF DAMPER ASSEMBLY

1. Remove main pump assembly. For details, see REMOVAL OF MAIN PUMP ASSEMBLY.
2. Remove damper assembly (1).

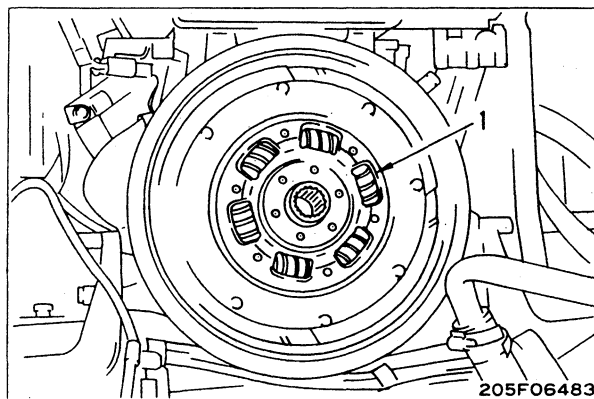

INSTALLATION OF DAMPER ASSEMBLY

- Carry out installation in the reverse order to removal.

REMOVAL OF FUEL TANK ASSEMBLY

- ⚠** Disconnect the cable from the negative (–) terminal of the battery.

1. Loosen drain valve (1) of fuel tank and drain fuel.



Fuel tank: Approx. 315 ℓ (when tank is full)

2. Disconnect fuel supply hose (2) and return hose (3).
3. Remove handrail (4), battery case (5), and cover (6).



4. Remove connector (7) from holder, and disconnect it.
★ Remove the wiring from the clamp, then disconnect from the fuel tank.

5. If refueling pump is fitted disconnect hose (9) from tank tube.

6. Remove mounting bolts, and lift off fuel tank assembly (8) ※ 1



Fuel tank assembly: 120 kg

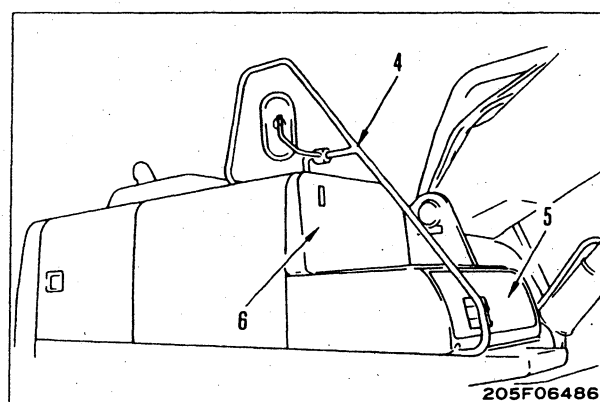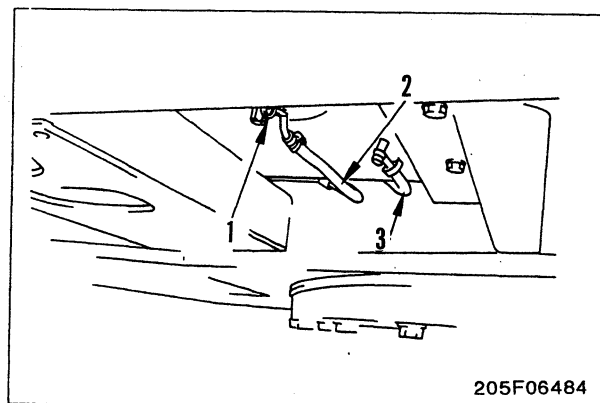

INSTALLATION OF FUEL TANK ASSEMBLY

- Carry out installation in the reverse order to removal.



※ 1



Fuel tank mounting bolt:

$276.9 \pm 31.9 \text{ Nm}$ ($28.25 \pm 3.25 \text{ kgm}$)

- Refilling with oil (fuel tank)
Add fuel.

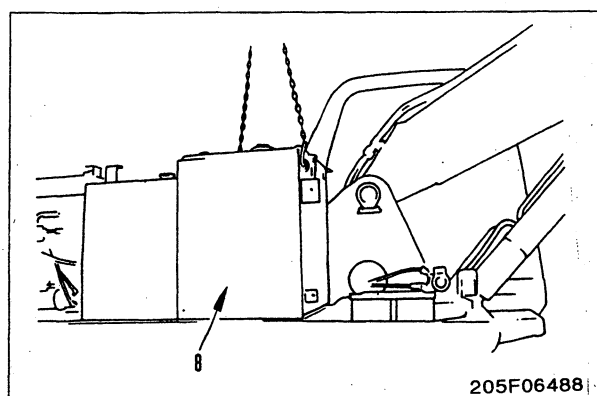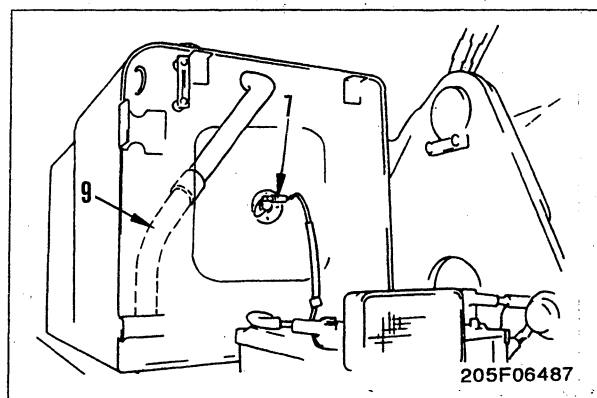

K20506

REMOVAL OF CENTER SWIVEL JOINT ASSEMBLY

⚠ Release the remaining pressure in the hydraulic circuit. For details, see TESTING AND ADJUSTING, Releasing remaining pressure from hydraulic circuit.

★ Mark all the piping with tags to prevent mistakes in the mounting position when installing.

1. Disconnect hoses (1), (2), (3), and (4) and tubes (5) and (6), and remove filter and bracket assembly.

★ Machines equipped with additional attachment circuit.



Filter, bracket assembly: 95 kg

2. Disconnect hoses (7), (8), (9), and (10) between travel motor and swivel joint.

3. Remove elbow (11).

4. Disconnect drain hose (12).

5. Disconnect hoses (13) and (14) between control valve and swivel joint.

6. Disconnect travel speed selector hose (15).





7. Disconnect plate (16).

8. Remove center swivel joint assembly (17).

※ 1



Center swivel joint assembly: 45 kg

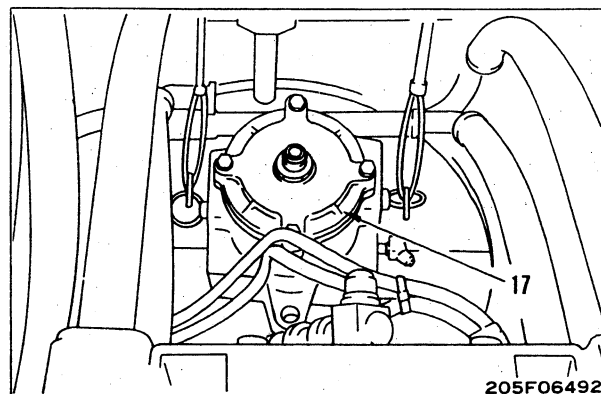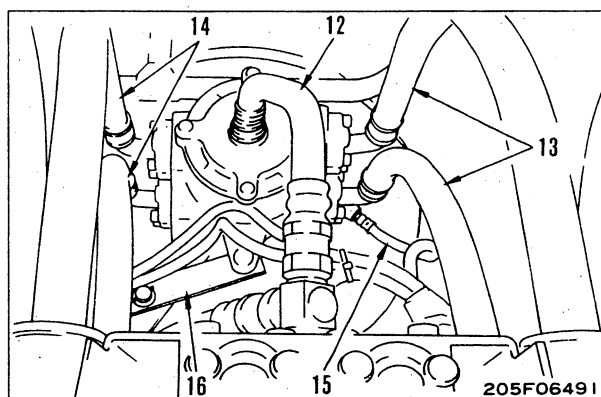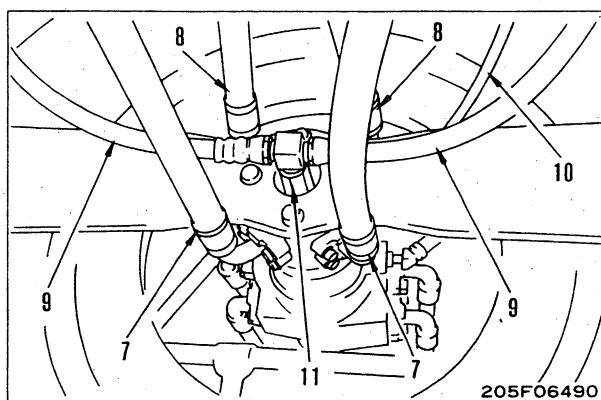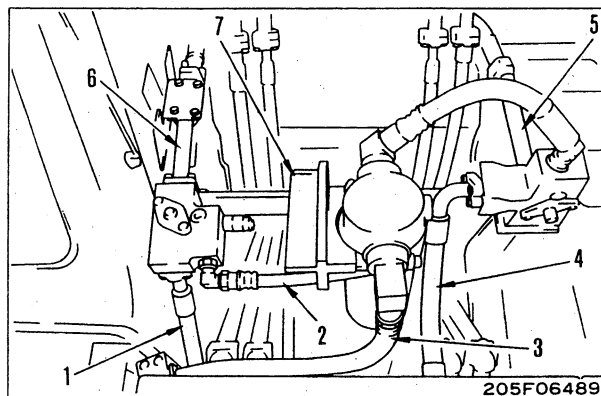


INSTALLATION OF CENTER SWIVEL JOINT ASSEMBLY

• Carry out installation in the reverse order to removal.

※ 1

★ Assemble the center swivel as shown in the diagram below.

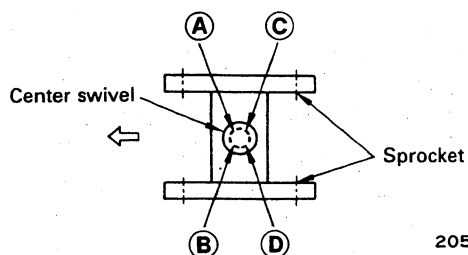

205F06653

• Refilling with oil (hydraulic tank)


★ Add oil through the oil filler to the specified level. Run the engine to circulate the oil through the system. Then check the oil level again.

• Bleeding air

★ Bleed the air from the travel motor. For details, see TESTING AND ADJUSTING, Bleeding air.

DISASSEMBLY OF CENTER SWIVEL JOINT ASSEMBLY


1. Remove cover (1).
2. Remove snap ring (2).
3. Using tool **D**, pull out swivel rotor (4) and ring (3) from swivel shaft (5).
4. Remove O-ring (6) and slipper seal (7) from swivel rotor.

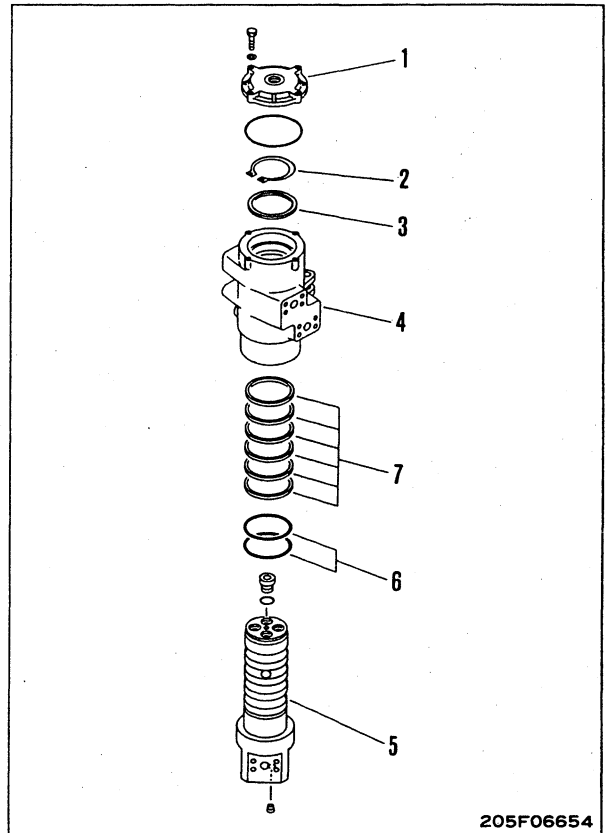

ASSEMBLY OF CENTER SWIVEL JOINT ASSEMBLY

1. Assemble slipper seal (7) and O-ring (6) to swivel rotor.
2. Set swivel shaft (5) to block, then using push tool, tap swivel rotor (4) with a plastic hammer to install.
 -  Contact surface of rotor, shaft: Grease (G2-LI)
 - ★ When installing the rotor, be extremely careful not to damage the slipper seal and the O-ring.
3. Install ring (3) and secure with snap ring (2).
4. Fit O-ring and install cover (1).

 Mounting bolt: $31.4 \pm 2.9 \text{ Nm}$ ($3.2 \pm 0.3 \text{ kgm}$)

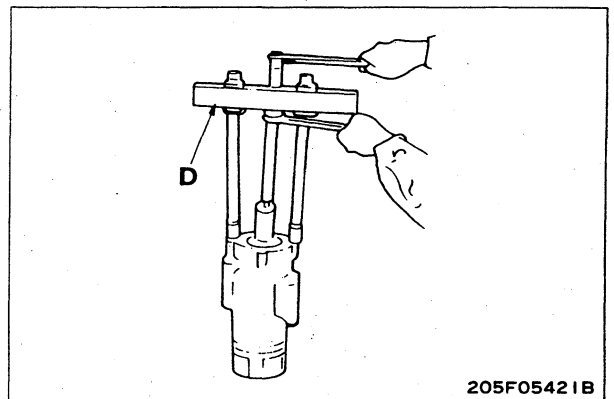

REMOVAL OF FINAL DRIVE ASSEMBLY



1. Remove sprocket. For details, see REMOVAL OF SPROCKET.

! Lower the work equipment completely to the ground and stop the engine. Then loosen the oil filler cap slowly to release the pressure inside the hydraulic tank.

2. Remove cover (1).
3. Disconnect 4 travel motor hoses (2), and lift off final drive assembly (3). **※ 1**
 ★ Be extremely careful not to damage the nipple tool surface of the hose mount.



Final drive assembly: 425 kg

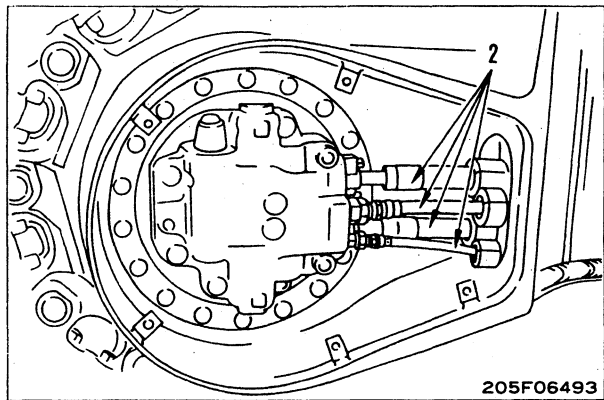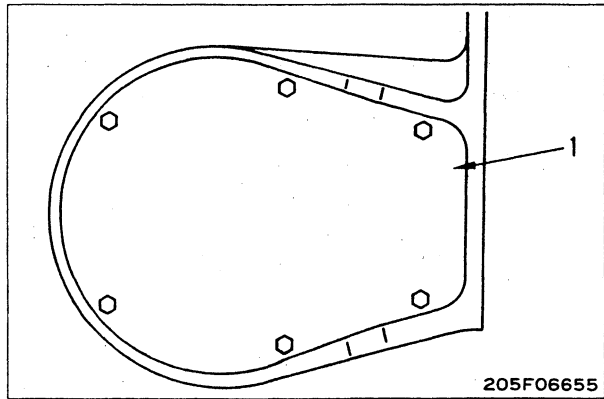

INSTALLATION OF FINAL DRIVE ASSEMBLY

- Carry out installation in the reverse order to removal.


※ 1



Final drive mounting bolt:

$276.9 \pm 31.9 \text{ Nm}$ ($28.25 \pm 3.25 \text{ kgm}$)

- Bleeding air
 - ★ Bleed the air from the travel motor. For details, see TESTING AND ADJUSTING, Bleeding air.
- Refilling with oil (hydraulic tank)
 - ★ Add oil through the oil filler to the specified level. Run the engine to circulate the oil through the system. Then check the oil level again.

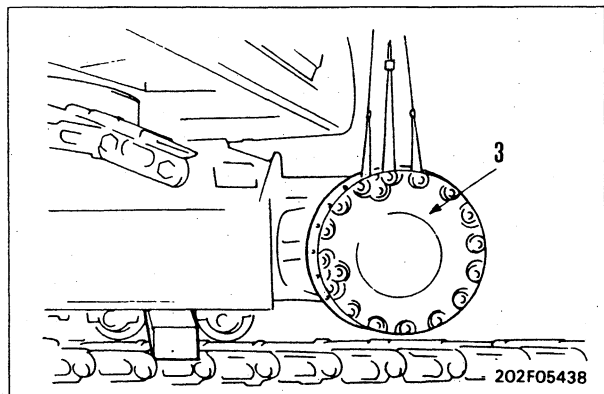

K20506

DISASSEMBLY OF FINAL DRIVE ASSEMBLY

1. Draining oil

Remove drain plug and drain oil from final drive case.



Final drive case: Approx. 5.5 l

2. Cover




Remove mounting bolts, then remove cover (1) using eyebolts ①.

3. Spacer

Remove spacer (2).


4. No. 1 sun gear shaft

Remove No. 1 sun gear shaft (3).

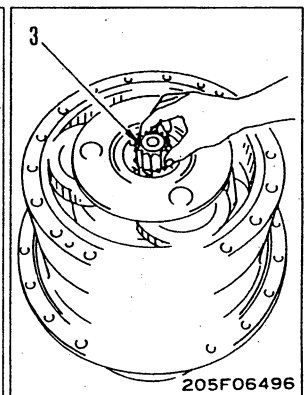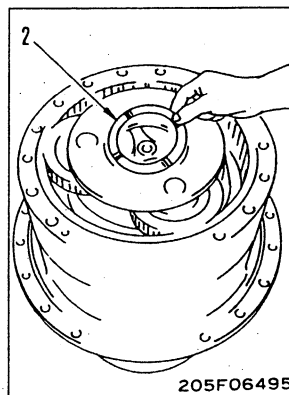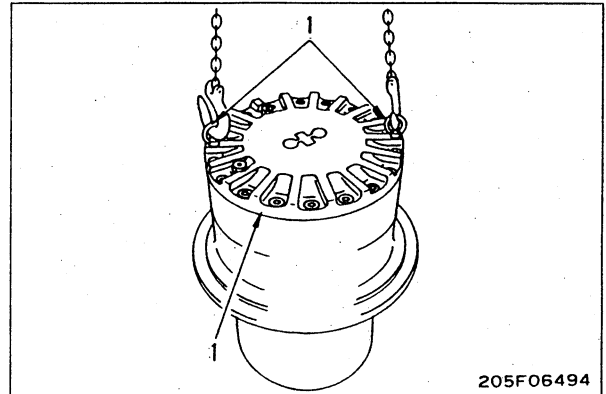

5. No. 1 carrier assembly

1) Remove No. 1 carrier assembly (4).

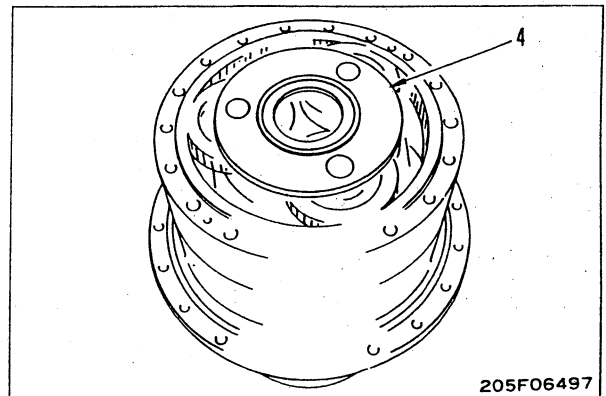


2) Disassemble No.1 carrier assembly as follows.

i) Push in pin (5), and pull out shaft (6) from carrier (7).

★ After removing the shaft, remove pin (5).

ii) Remove thrust washer (8), gear (9), bearing (10), and thrust washer (11).

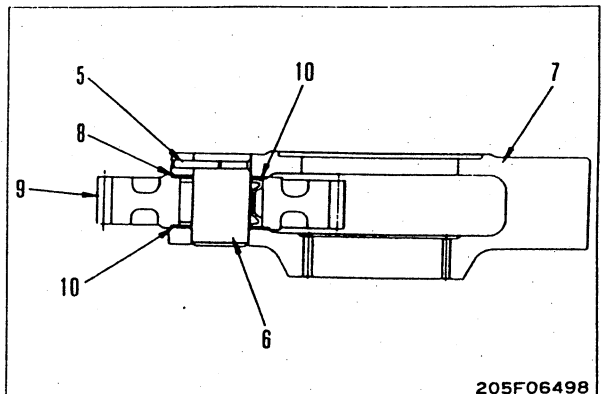


6. Ring gear

Using eyebolts ②, remove ring gear (12).

7. No. 2 sun gear


Remove No. 2 sun gear (13).

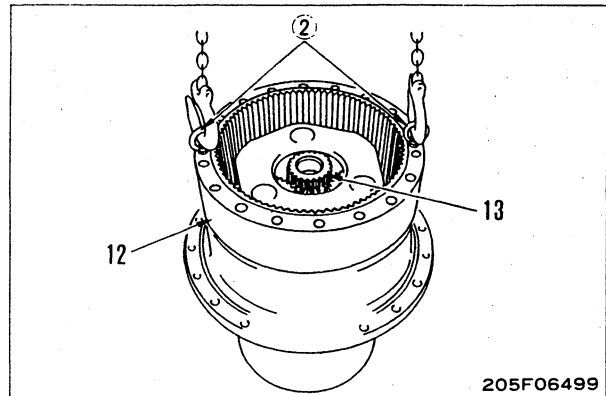**8. Thrust washer**

Remove thrust washer (14).

9. No. 2 carrier assembly

1) Remove No. 2 carrier assembly (15).

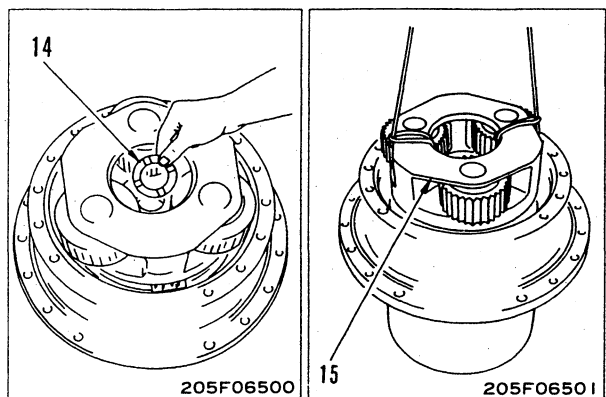


2) Disassemble No. 2 carrier assembly as follows.

i) Push in pin (16) and pull out shaft (17) from carrier (18).


★ After removing the shaft, remove pin (16).

ii) Remove thrust washer (19), gear (20), bearing (21), and thrust washer (22).

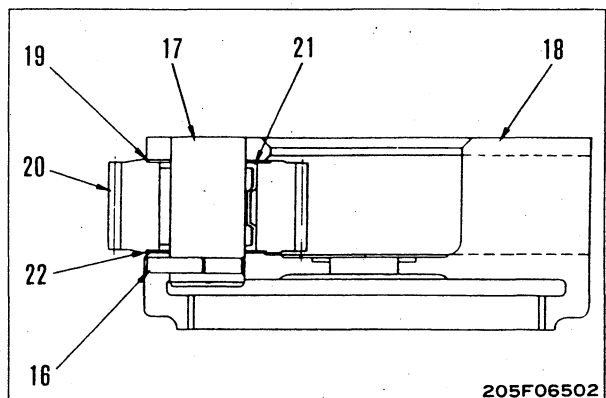**10. Nut**


1) Remove lock plate (23).

2) Using tool G₁, remove nut (24).

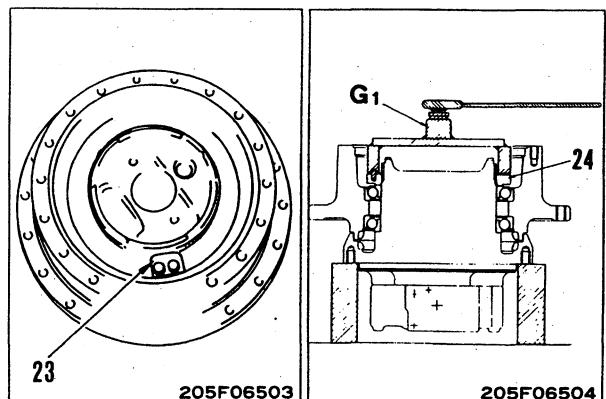


11. Hub assembly


- 1) Using eyebolts ③, remove hub assembly (25) from travel motor.

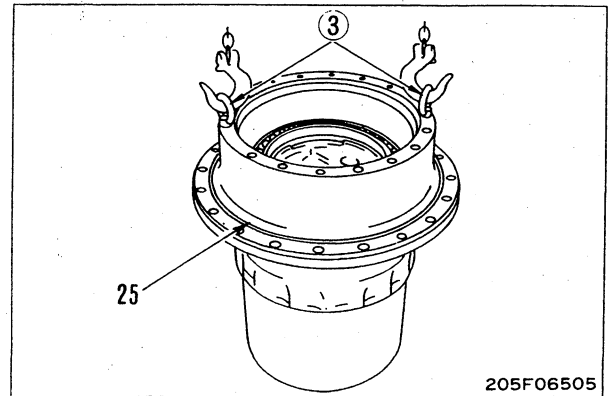

- 2) Disassemble hub assembly as follows.
 - i) Remove floating seal (26).
 - ii) Remove bearings (27) and (28) from hub (29).

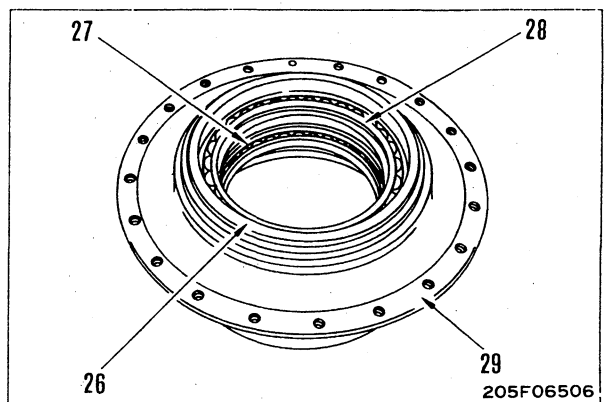

- 3) Remove floating seal (30) from travel motor (31).

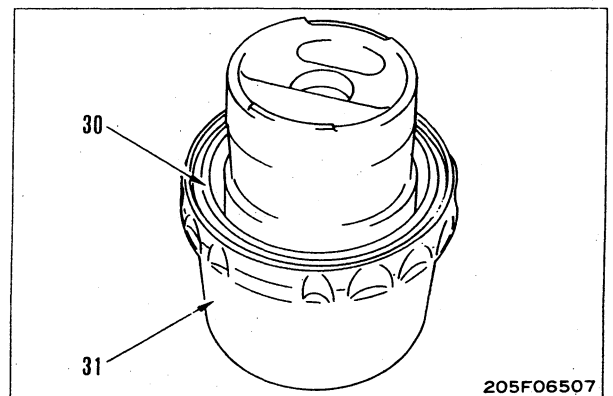



K20506

ASSEMBLY OF FINAL DRIVE ASSEMBLY

- ★ Clean all parts, and check for dirt or damage. Coat the sliding surfaces of all parts with engine oil before installing.

1. Hub assembly

- 1) Using push tool, press fit bearings (27) and (28) to hub (29).
- 2) Using tool G₄, install floating seal (26).

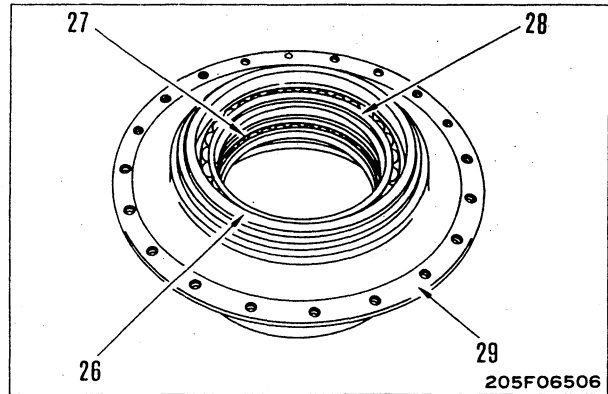
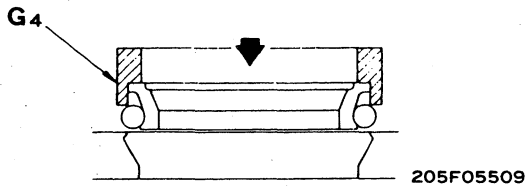


- ★ Remove all oil and grease from the O-ring and O-ring contact surface, and dry the parts before installing the floating seal.
- ★ After installing the floating seal, check that the angle of the floating seal is within 1 mm.
- ★ After installing the floating seal, coat the sliding surface thinly with engine oil.

- 3) Using tool G₄, install floating seal (30) to travel motor (31).


- ★ The procedure for installation is the same as in Step 2) above.

- 4) Using eyebolts ③, set hub assembly (25) to travel motor, then using push tool, tap to press fit bearing portion.

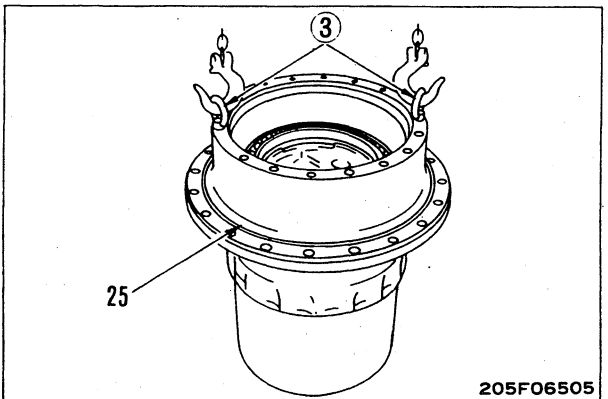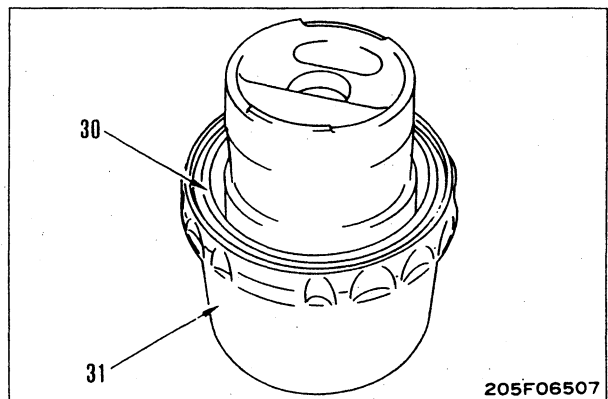


2. Nut



- 1) Install nut as follows.
 - i) Using tool G₂, push bearing inner race portion.
 - ★ Pushing force:
8.82 – 12.74 kN (0.9 – 1.3 ton)
 - ★ Rotate the hub 2 – 3 times before applying the pushing force to the bearing inner race.
 - ii) Measure dimension "a" in the condition in Step i) above.

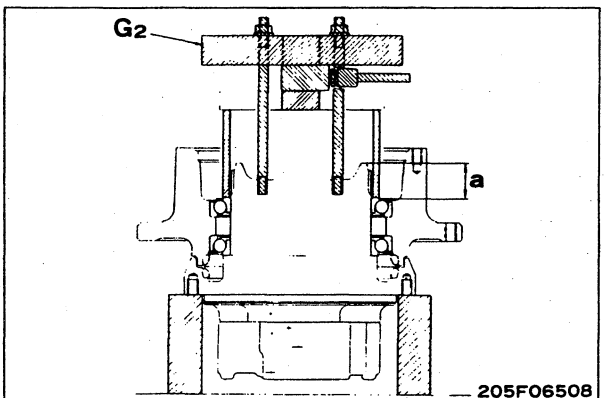

- iii) Measure thickness "b" of nut itself.
- iv) Calculate $a - b = c$.
- v) Using tool G₁, tighten nut (24) to a point where dimension "d" is $c_{-0.1}^0$.

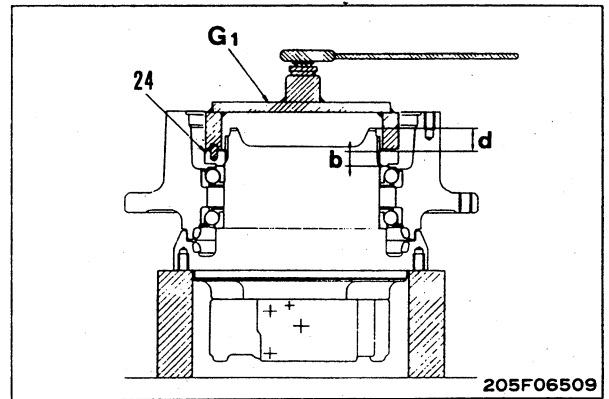


- vi) Using push-pull scale ⑤, measure tangential force in direction of rotation of hub in relation to motor case.
 - ★ Tangential force: Max. 294.2 N (30 kg)
 - ★ The tangential force is the maximum force when starting rotation.
- vii) Install lock plate (23).
 - ★ Install the lock plate as shown in the diagram below.

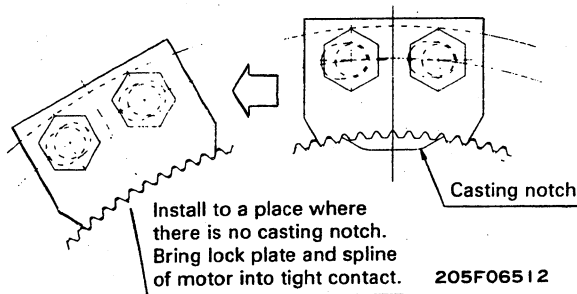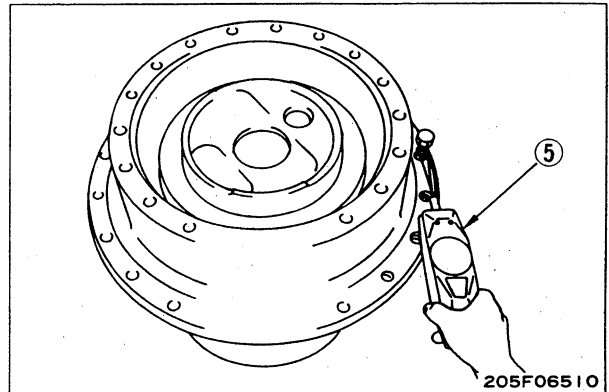

Thread of mounting bolt:


Thread tightener (LT-2)

- ★ Do not coat the tap portion of the nut with thread tightener (LT-2).

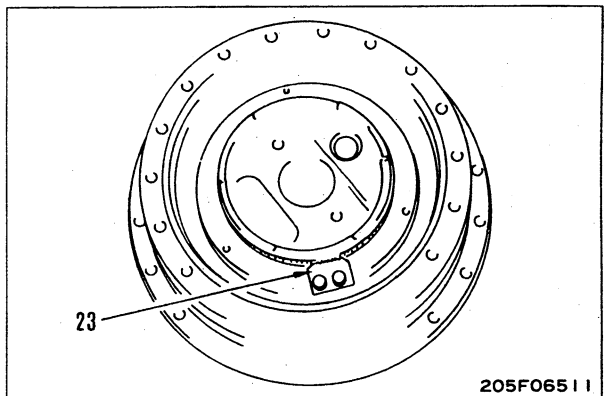

3. No. 2 carrier assembly

- 1) Assemble No. 2 carrier assembly as follows.
 - ★ There are the remains of the caulking when the pin is inserted at the end face of hole h at the side of the carrier, so remove the caulked metal from the inside diameter of the hole before starting to assemble.
- i) Assemble bearing (21) to gear (20), fit top and bottom thrust washers (19) and (20), and set gear assembly in carrier (18).

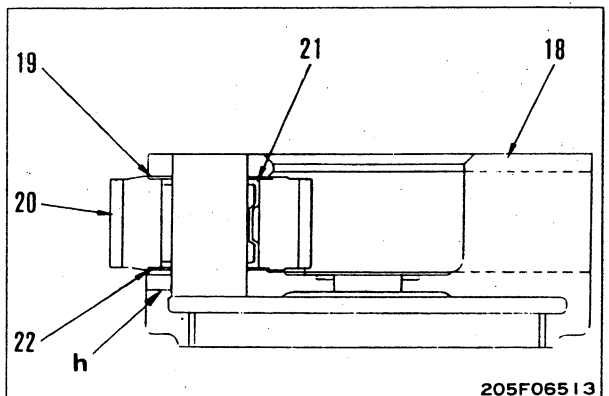

K20506


- ii) Align position of pin holes of shaft and carrier, then tap with a plastic hammer to install shaft (17).

★ When installing the shaft, rotate the planetary gear. Be careful not to damage the thrust washer.


- iii) Insert pin (16).

★ After inserting the pin, caulk the pin portion of the carrier.

- ★ After assembling the carrier assembly, check that gear (20) rotates smoothly.

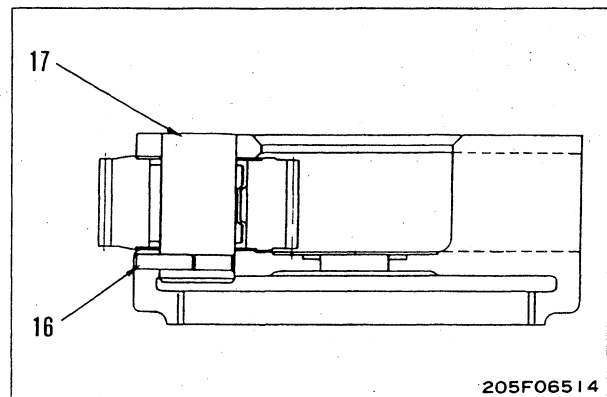

- 2) Install No. 2 carrier assembly (15).

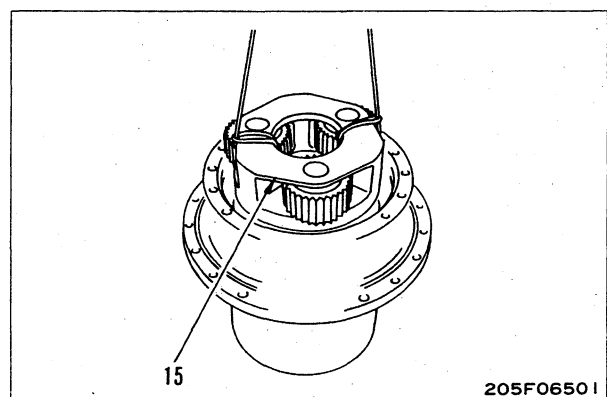


4. Thrust washer

Install thrust washer (14).

5. No. 2 sun gear

Install No. 2 sun gear (13).

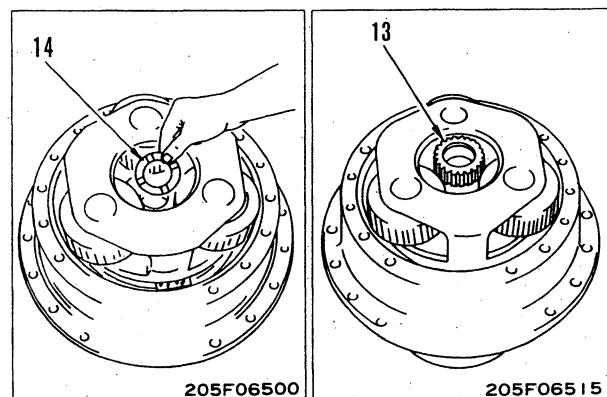


6. No. 1 carrier assembly

- 1) Assemble No. 1 carrier assembly as follows.

★ There are the remains of the caulking when the pin is inserted at the end face of hole **h** at the side of the carrier, so remove the caulked metal from the inside diameter of the hole before starting to assemble.

- i) Assemble bearing (10) to gear (9), fit top and bottom thrust washers (8) and (11) and set gear assembly to carrier (7).

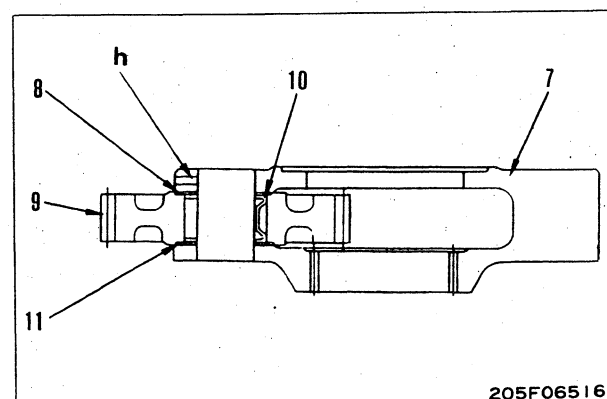

- ii) Align position of pin holes of shaft and carrier, then tap with a plastic hammer to install shaft (6).


★ When installing the shaft, rotate the planetary gear. Be careful not to damage the thrust washer.

- ii) Insert pin (5).

★ After inserting the pin, caulk the pin portion of the carrier.

- ★ After assembling the carrier assembly, check that gear (9) rotates smoothly.

- 2) Install No. 1 carrier assembly (14).

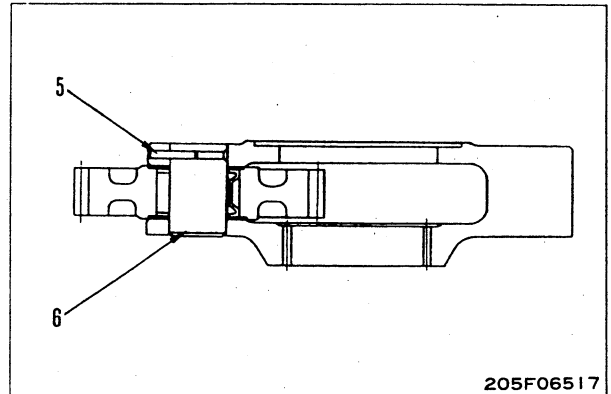

7. No. 1 sun gear shaft

Install No. 1 sun gear shaft (3).

8. Spacer



Install spacer (2).

9. Ring gear

Fit O-ring to hub end, then using eyebolts ②, align position of bolt holes of hub and ring gear (12), and install.

★ Remove all grease and oil from the mating surface of the ring gear and hub.

★ Do not put any gasket sealant on the mating surface of the ring gear and hub under any circumstances.

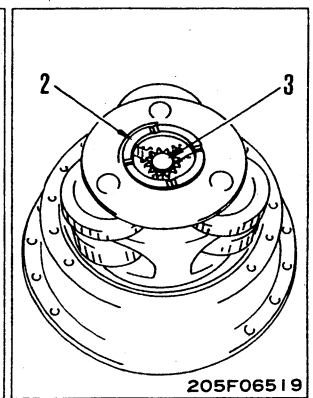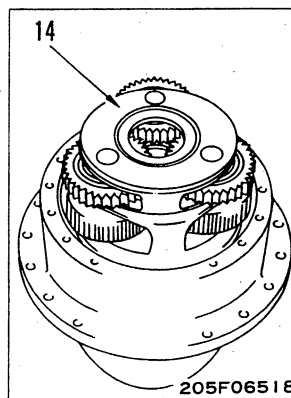

10. Cover

Using eyebolts ①, fit cover (1), then tighten mounting bolts with angle tightening wrench G₃.





Mounting surface of cover:

Gasket sealant (LG-6)



Mounting bolt: 1st pass 98 Nm (10 kgm)
2nd pass Turn 70 – 80°

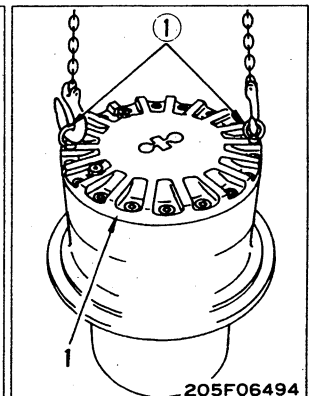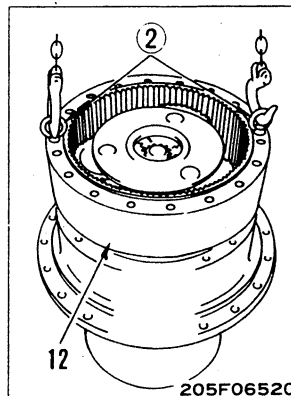


11. Refilling with oil

Tighten drain plug and add engine oil through oil filler.



Final drive case: Approx. 5.5 ℓ


- ★ Carry out a final check of the oil level at the determined position after installing the final drive assembly to the chassis.

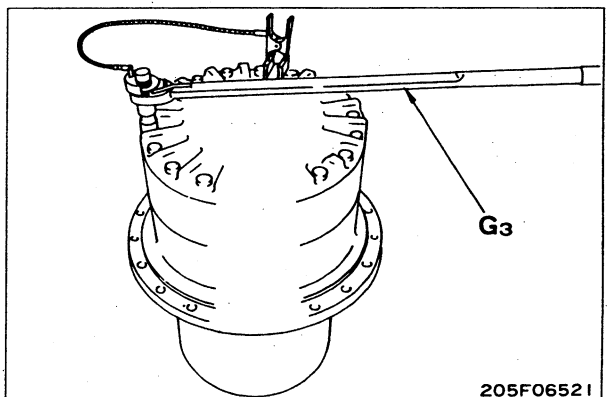

REMOVAL OF SPROCKET

1. Remove track shoe assembly. For details, see REMOVAL OF TRACK SHOE ASSEMBLY.
2. Swing work equipment 90°, then push up chassis with work equipment and set block ① between track frame and track shoe.
3. Lift off sprocket (1).

※ 1

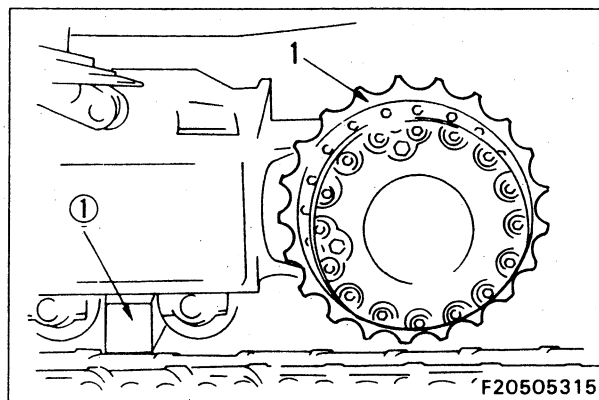

INSTALLATION OF SPROCKET

- Carry out installation in the reverse order to removal.

※ 1



Thread of sprocket mounting bolt:
Thread tightener (LT-2)



Sprocket mounting bolt:
465.8 ± 24.5 Nm (47.5 ± 2.5 kgm)

REMOVAL OF SWING MOTOR ASSEMBLY





- !** Lower the work equipment completely to the ground and stop the engine. Loosen the oil filler cap slowly to release the pressure inside the hydraulic tank. Then set the safety lock lever to the LOCK position.

1. Disconnect hoses (1), (2), (3), and (4), and tubes (5) and (6), then remove filter and bracket assembly.
★ machines equipped with additional attachment circuit

 Filter, bracket assembly: 95 kg

2. Remove hose clamps (7) and (8).
3. Disconnect swing motor inlet and outlet hoses (9), (10), and (11).
4. Remove bracket (12).
5. Disconnect drain hoses (13) and (14).
6. Disconnect pilot hose (15).
7. Remove swing motor assembly (16).

 Swing motor assembly: 65 kg

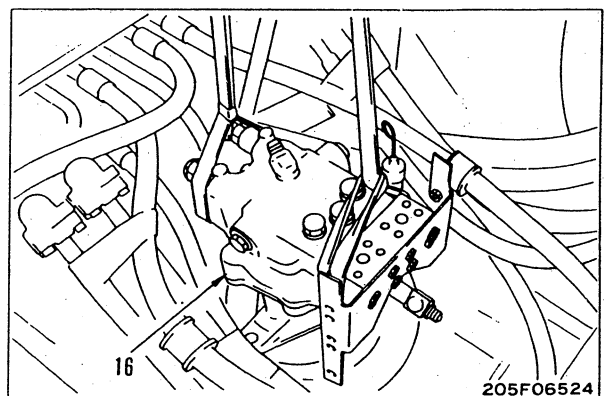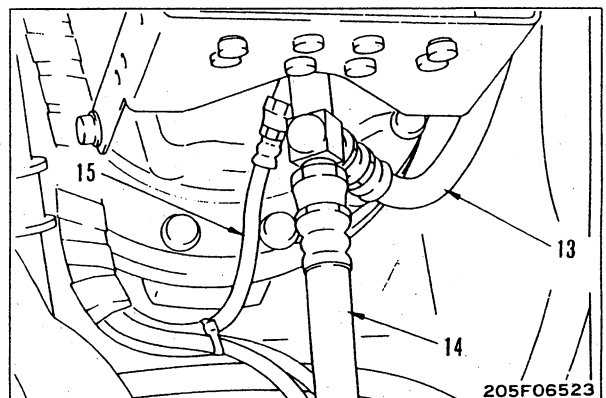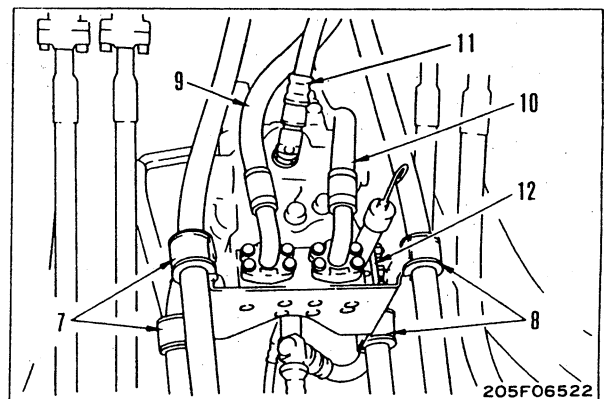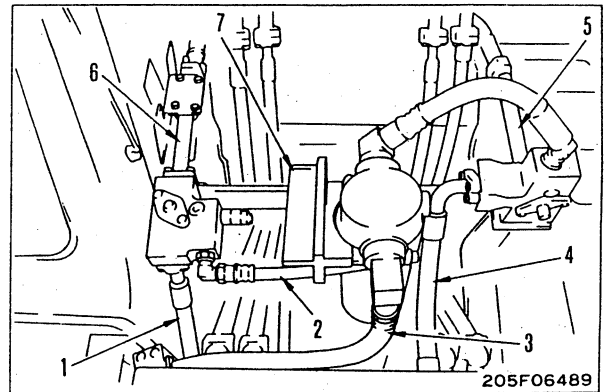

INSTALLATION OF SWING MOTOR ASSEMBLY


- Carry out installation in the reverse order to removal.
- Refilling with oil (hydraulic tank)
★ Add oil through the oil filler to the specified level. Run the engine to circulate the oil through the system. Then check the oil level again.
- ★ Bleeding air
★ Bleed the air from the swing motor. For details, see TESTING AND ADJUSTING, Bleeding air.

REMOVAL OF SWING MACHINERY ASSEMBLY

1. Remove swing motor assembly. For details, see REMOVAL OF SWING MOTOR ASSEMBLY.
2. Using eyebolts ①, remove swing machinery assembly (1).
 - ★ When removing the swing machinery assembly, lift off slowly and be careful not to damage the hoses.



Swing machinery assembly: 215 kg

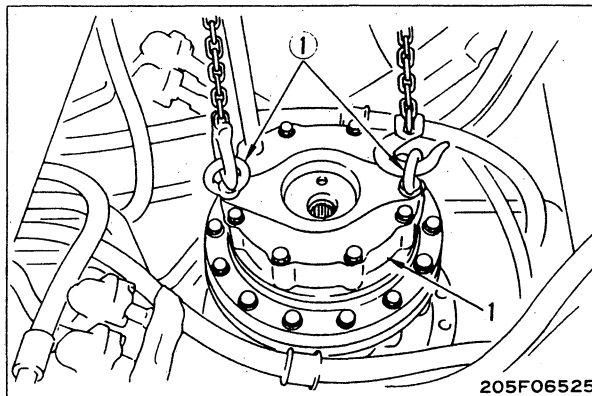

INSTALLATION OF SWING MACHINERY ASSEMBLY

- Carry out installation in the reverse order to removal.

※ 1



Swing machinery mounting bolt:

$548.8 \pm 49 \text{ Nm}$ ($56 \pm 5 \text{ kgm}$)

- Refilling with oil (hydraulic tank)
 - ★ Add oil through the oil filler to the specified level. Run the engine to circulate the oil through the system. Then check the oil level again.
- Bleeding air
 - ★ Bleed the air from the swing motor. For details, see TESTING AND ADJUSTING, Bleeding air.

DISASSEMBLY OF SWING MACHINERY ASSEMBLY

1. Draining oil


Remove drain plug and drain oil from swing machinery.



Swing machinery case: Approx. 6.8 l


2. Cover

Remove mounting bolts, then remove cover (1).

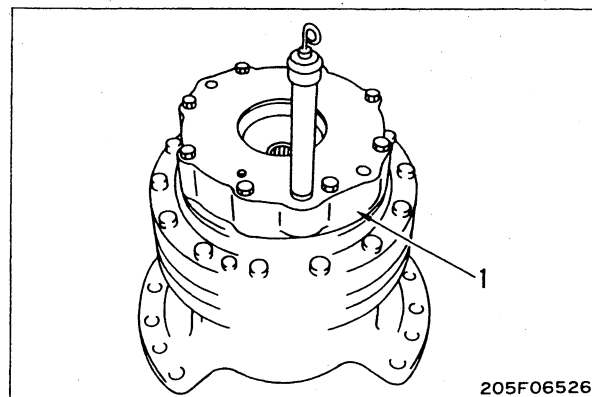

3. No. 1 ring gear

Remove No. 1 ring gear (2).

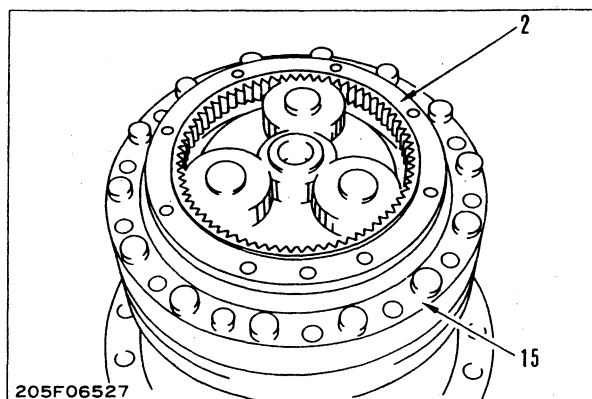


4. No. 1 sun gear

Remove No. 1 sun gear (3).


5. No. 1 carrier assembly

1) Remove No. 1 carrier assembly (4).

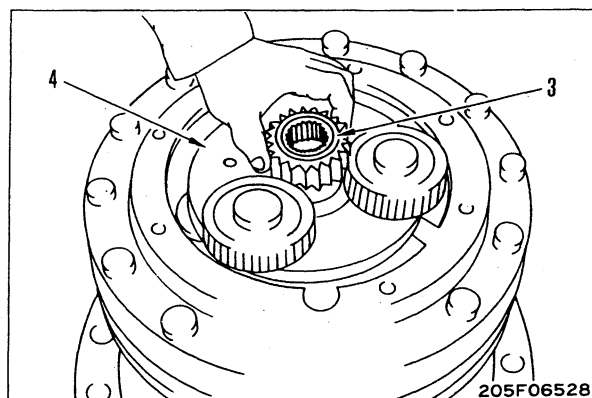


2) Disassemble No. 1 carrier assembly as follows

- i) Remove snap ring (5), then remove thrust washer (6), gear (7), bearing (8), and thrust washer (9).

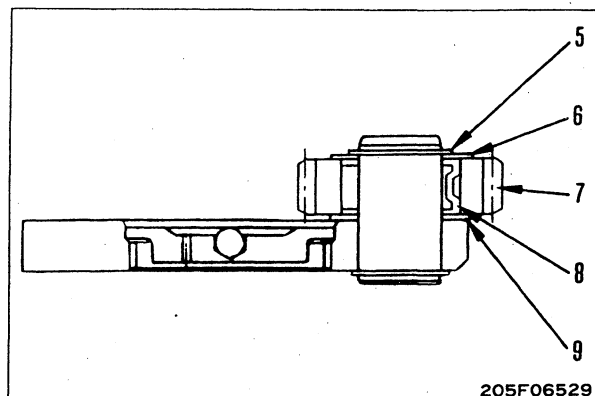

- ii) Remove holder (10).
- iii) Remove shaft (11) from carrier (12).
- iv) Remove snap ring (13) from shaft.

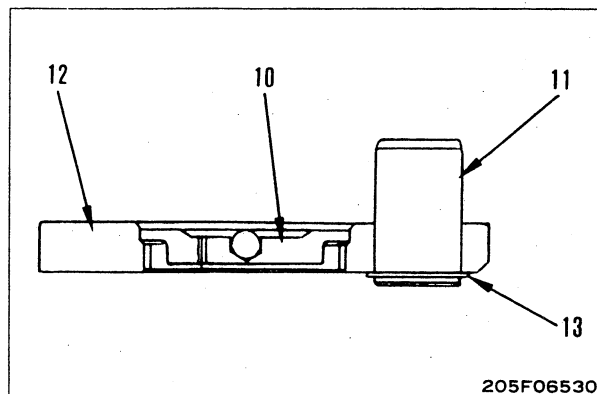


6. Coupling

Remove coupling (14).

7. Cover

Remove mounting bolts, then using eyebolts ①, remove cover (15).

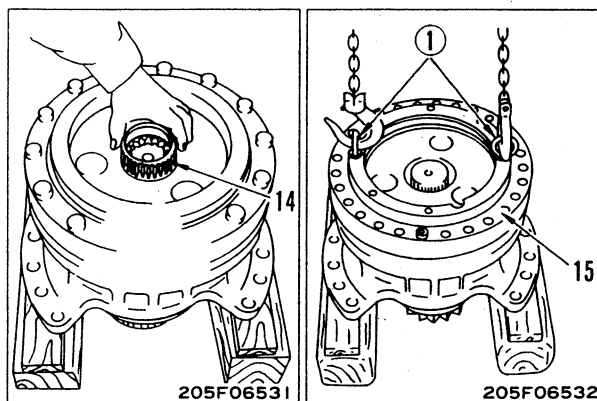


8. No. 2 ring gear

Remove No. 2 ring gear (16).

9. No. 2 sun gear

Remove No. 2 sun gear (17).

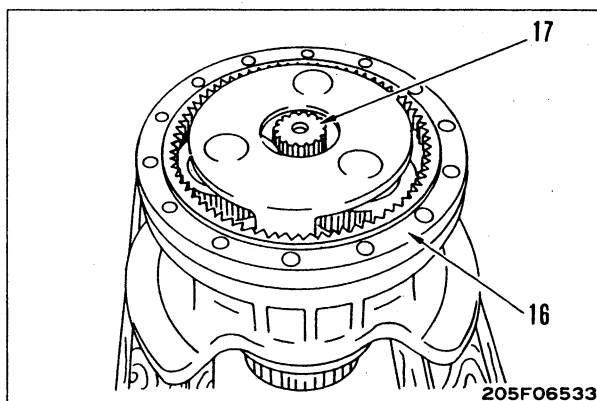


10. Bolt

Remove holder mounting bolt (18).


11. No. 2 carrier assembly

- 1) Remove No. 2 carrier assembly (19).

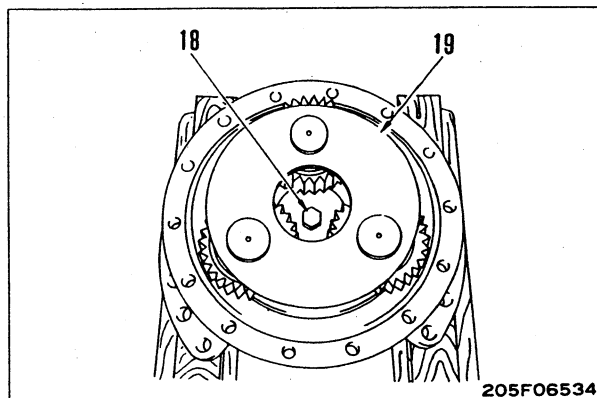



K20506

- 2) Disassemble No. 2 carrier assembly as follows.
- Push in pin (20), and knock out shaft (21) from carrier (22).
 - After removing the shaft, remove pin (20).
 - Remove thrust washer (23), gear (24), bearing (25), and thrust washer (26).
 - Remove plate (27).


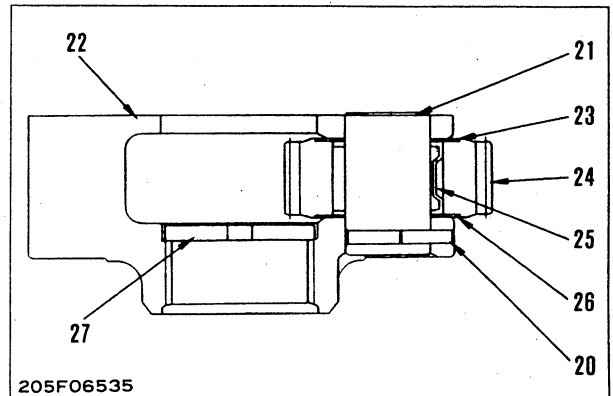


12. Shaft assembly

- Remove mounting bolts (28).
- Set shaft and case assembly to press, then using push tool ②, remove shaft assembly (29) from case assembly (30).

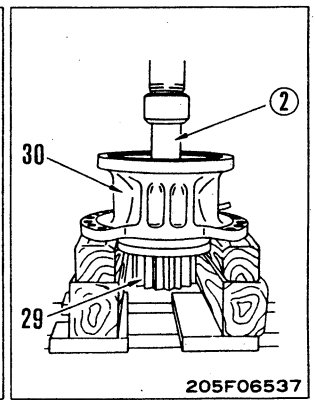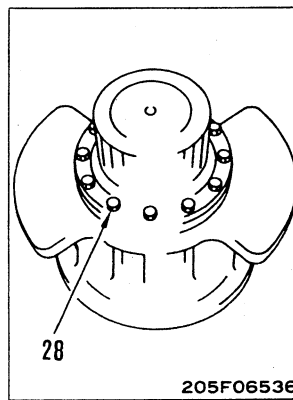


- Disassemble shaft assembly as follows.
 - Using push tool ③, remove cover assembly (31) and bearing (32) from shaft (33).
 - Remove oil seal (34) from cover (35).

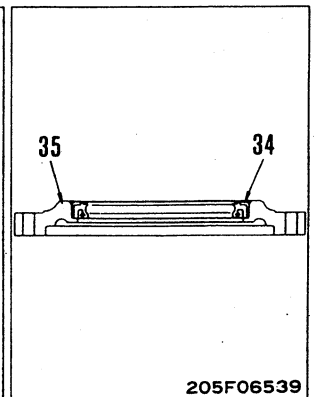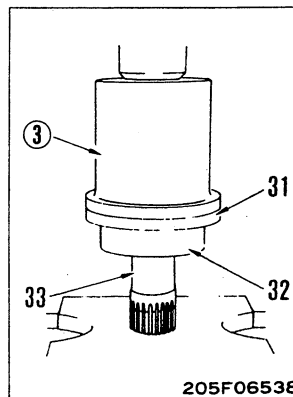

13. Bearing

Using push tool, remove bearing (36) from case (37).

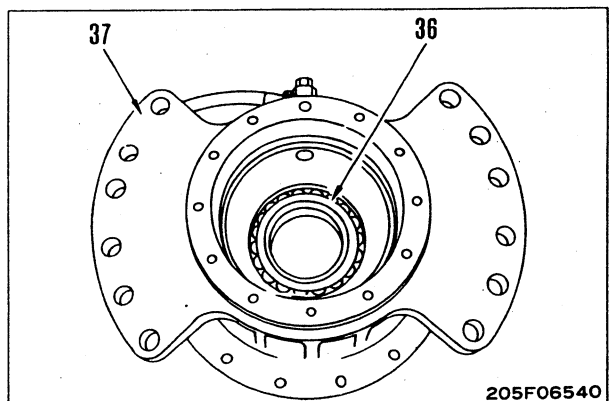


ASSEMBLY OF SWING MACHINERY ASSEMBLY

- ★ Clean all parts, and check for dirt or damage. Coat the sliding surfaces of all parts with engine oil before installing.

1. Bearing

Using push tool ④, press fit bearing (32) to case (37).

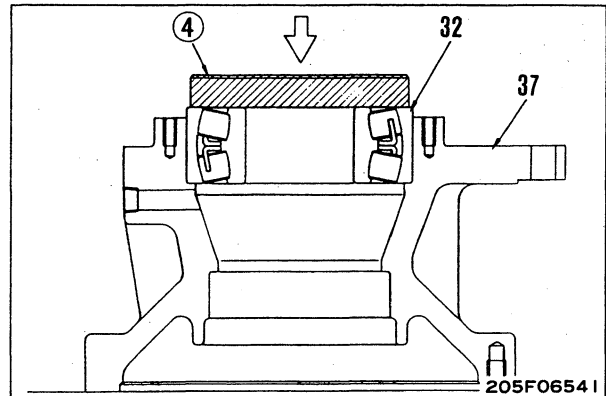

2. Cover assembly


- Using push tool ⑤, press fit oil seal (34) to cover (35).



Outside circumference of oil seal:

Gasket sealant (LG-6)

- ★ Be careful not to let the gasket sealant (LG-6) get on the oil seal lip when press fitting.

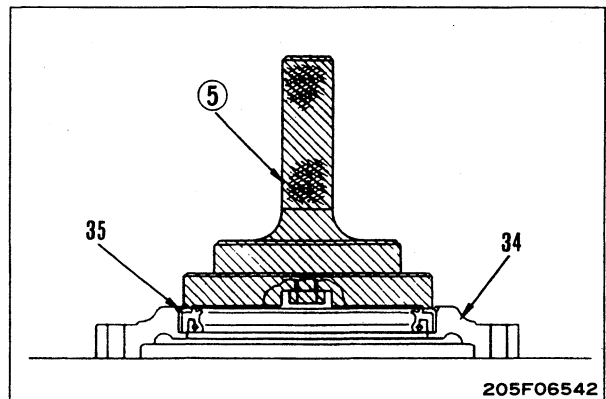

- Fit cover assembly (31) to case (37), and tighten mounting bolts (28).



Cover mounting surface:

Gasket sealant (LG-6)




Mounting bolt:

$66.2 \pm 7.4 \text{ Nm}$ ($6.75 \pm 0.75 \text{ kgm}$)




Lip of oil seal: Grease (G2-LI)

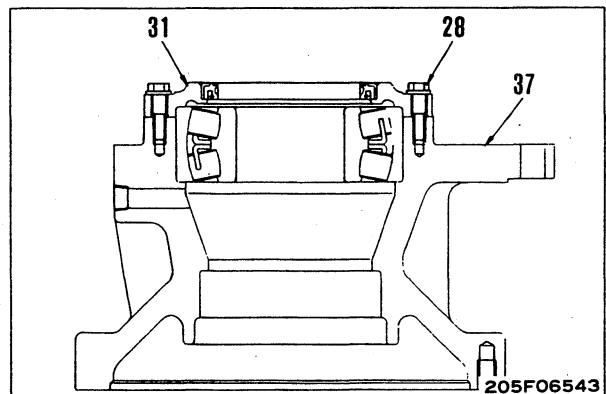

3. Case assembly

Set case assembly (30) to shaft (33), then using push tool ⑥, press fit bearing inner race portion.


- ★ When setting the case assembly to the shaft, be extremely careful not to damage the oil seal.

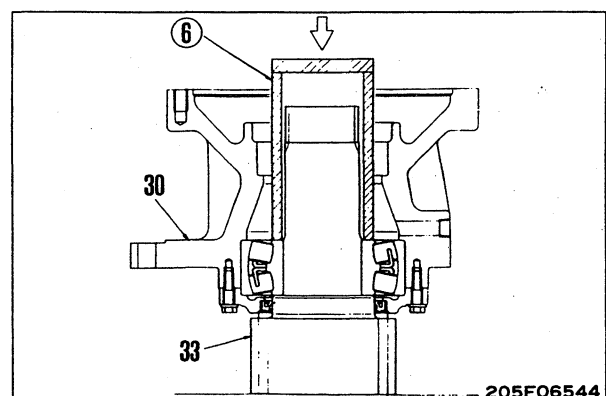

4. Bearing

Using tool F, press fit bearing (36).

- ★ Press the bearing inner race and outer race at the same time when press fitting. Do not press only the inner race when press fitting.
- ★ After press fitting the bearing, check that the case rotates smoothly.

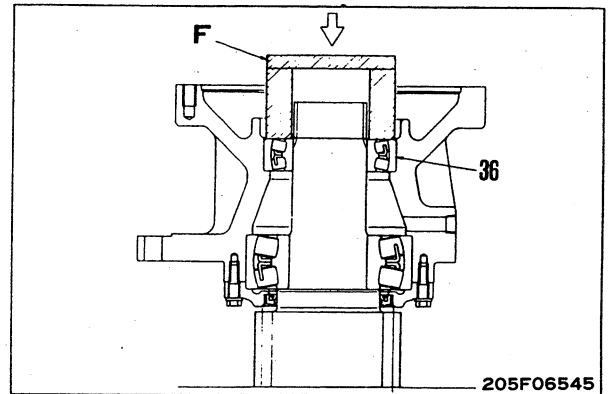**5. No. 2 carrier assembly**

1) Assemble No. 2 carrier assembly as follows.



- ★ There are the remains of the caulking when the pin is inserted at the end face of hole h at the side of the carrier, so remove the caulked metal from the inside diameter of the hole before starting to assemble.

- i) Assemble plate (27) to carrier (22).
- ii) Assemble bearing (25) to gear (24), fit top and bottom thrust washers (23) and (26) and set gear assembly to carrier (22).
- iii) Align position of pin holes of shaft and carrier, then tap with a plastic hammer to install shaft (21).

- ★ When installing the shaft, rotate the planetary gear. Be careful not to damage the thrust washer.

iv) Insert pin (20).

- ★ After inserting the pin, caulk the pin portion of the carrier.

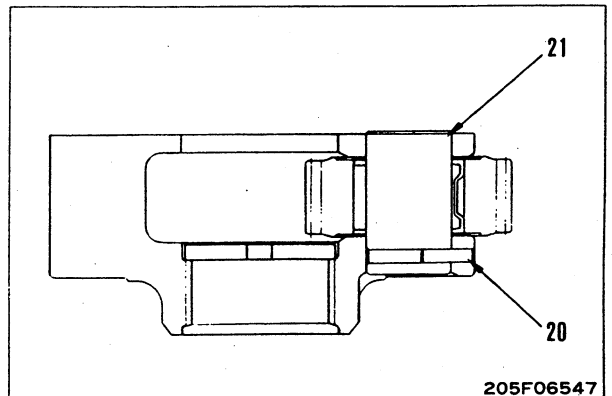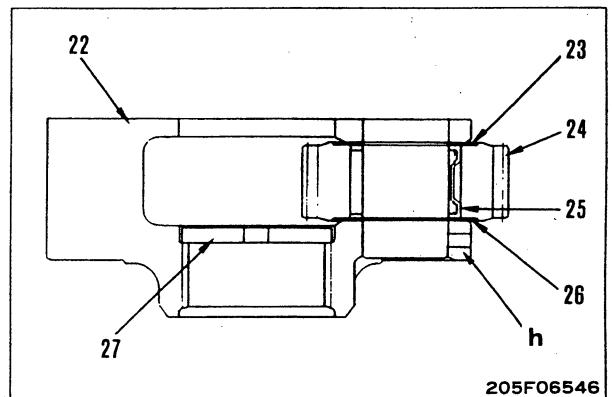

2) Install No. 2 carrier assembly (19).

6. Bolt

Tighten bolt (18).




Thread of mounting bolt:

Thread tightener (LT-2)



Mounting bolt:

$176.4 \pm 19.6 \text{ Nm}$ ($18 \pm 2.0 \text{ kgm}$)

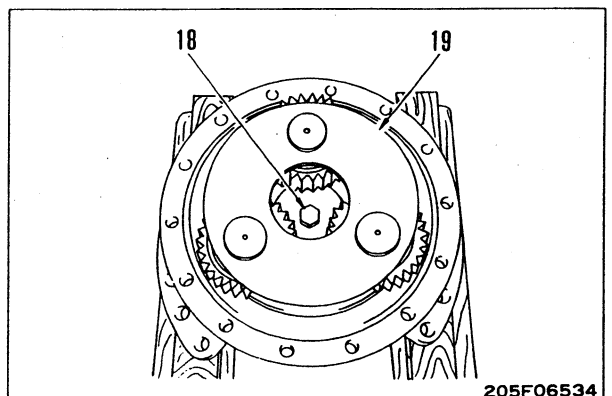

7. No. 2 sun gear


Install No. 2 sun gear (17).

8. No. 2 ring gear

Install No. 2 ring gear (16).

 Ring gear mounting surface:

Gasket sealant (LG-6)

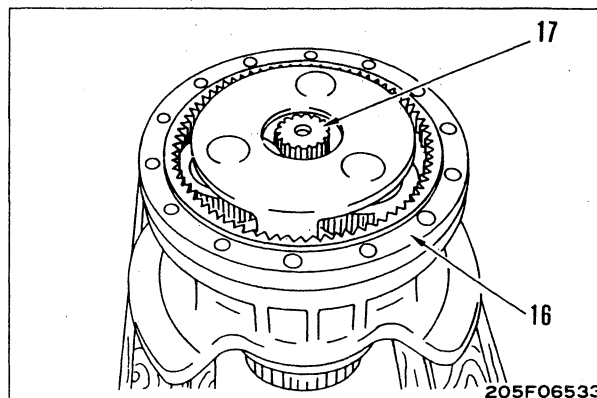

9. Cover


Using eyebolts ①, sling cover (15), align position of holes for oil filler port as shown in diagram, then install.

 Cover mounting surface:

Gasket sealant (LG-6)


 Mounting bolt:

$276.9 \pm 31.9 \text{ Nm}$ ($28.25 \pm 3.25 \text{ kgm}$)

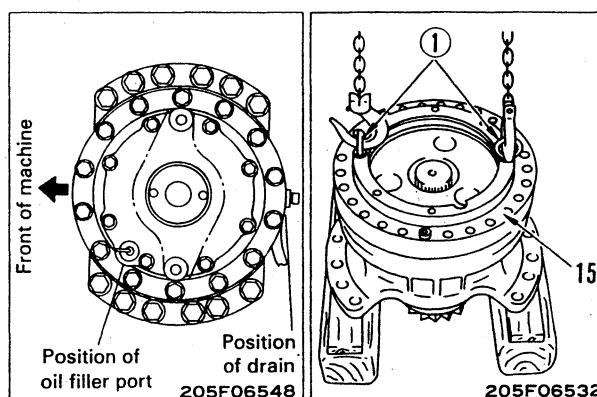

10. Coupling

Install coupling (14).

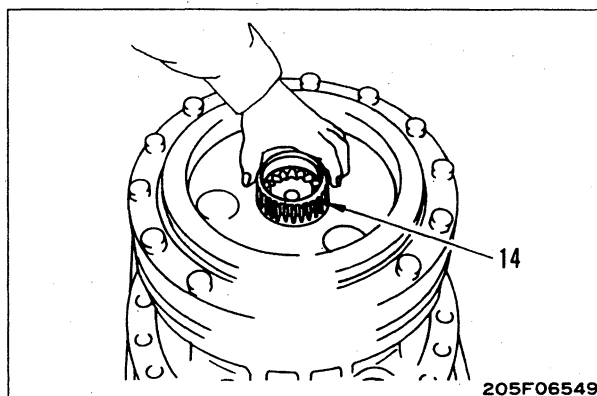


11. No. 1 carrier assembly

1) Assemble No. 1 carrier assembly as follows.

i) Fit snap ring (13) to shaft (11), and tap with a plastic hammer to install shaft to carrier (12).


ii) Assemble holder (10).

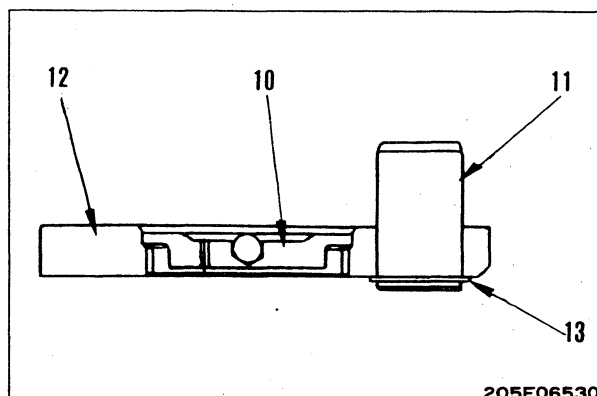

- iii) Assemble thrust washer (9), bearing (8), gear (7), and thrust washer (6), and install snap ring (5).

★ After assembling the carrier assembly, check that gear (7) rotates smoothly.


★ Replace thrust washer (6) with a new part.

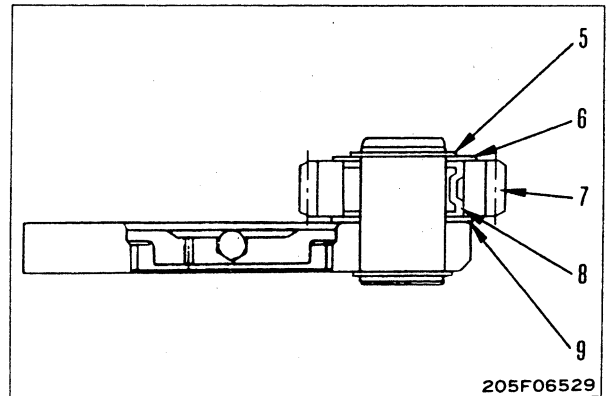

- iv) Install No. 1 carrier assembly (4).

12. No. 1 sun gear

Install No. 1 sun gear (3).

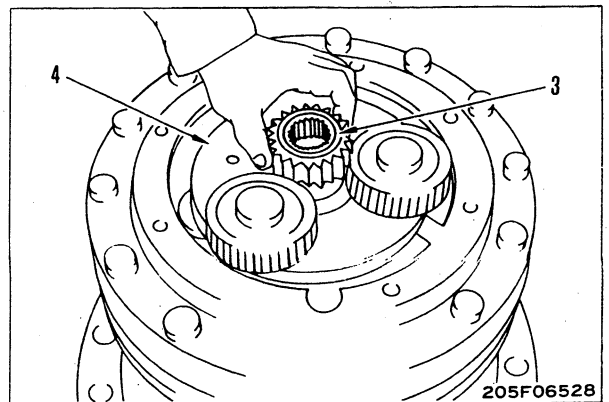


13. No. 1 ring gear

Align position of holes for oil filler port of No. 1 ring gear (2) with cover (15), then install.

 Ring gear mounting surface:

Gasket sealant (LG-6)

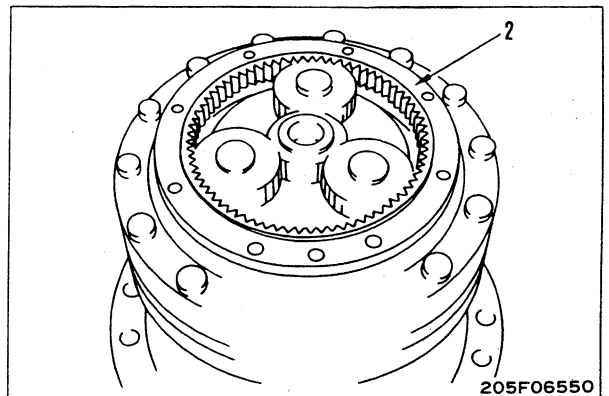

14. Cover


Install cover (1).

 Cover mounting surface:

Gasket sealant (LG-6)

 Mounting bolt:

$110.3 \pm 12.3 \text{ Nm}$ ($11.25 \pm 1.25 \text{ kgm}$)

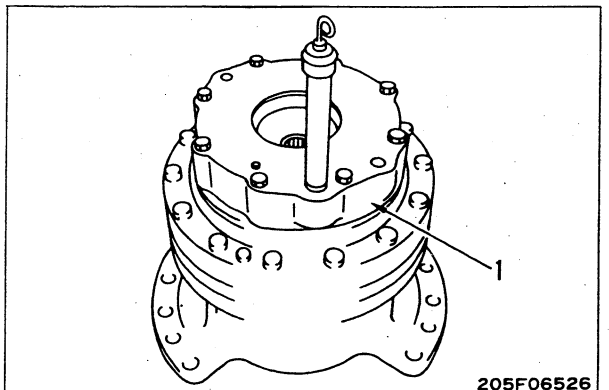

15. Refilling with oil


Tighten drain plug and add engine oil through oil filler.



Swing machinery case: Approx. 6.8 l

REMOVAL OF REVOLVING FRAME ASSEMBLY

1. Remove 2 boom cylinder assemblies. For details, see REMOVAL OF BOOM CYLINDER ASSEMBLY.
2. Remove work equipment assembly. For details, see REMOVAL OF WORK EQUIPMENT ASSEMBLY.
3. Remove counterweight assembly. For details, see REMOVAL OF COUNTERWEIGHT ASSEMBLY.
4. Disconnect top mounting hoses (1), (2), and (3) of swivel joint assembly at swivel joint assembly end.

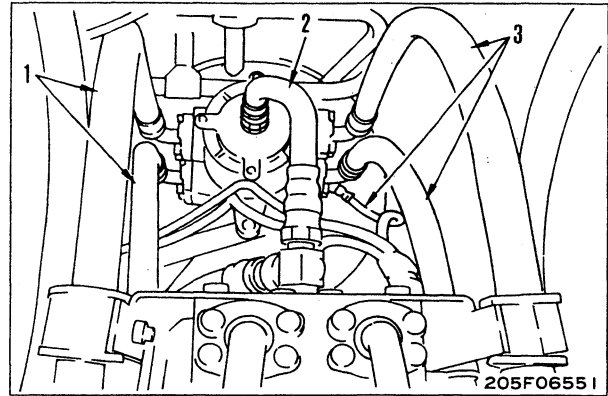



5. Remove stopper link (4).
6. Remove mounting bolts, then lift off revolving frame assembly (5). ※ 1

★ Leave 2 bolts ① each at the front and rear, use a lever block to adjust the balance of the revolving frame assembly to the front and rear, and left and right, then remove the remaining bolts, and lift off.

⚠ When removing the revolving frame assembly, be careful not to hit the center swivel joint assembly.



Revolving frame assembly: 5,200 kg

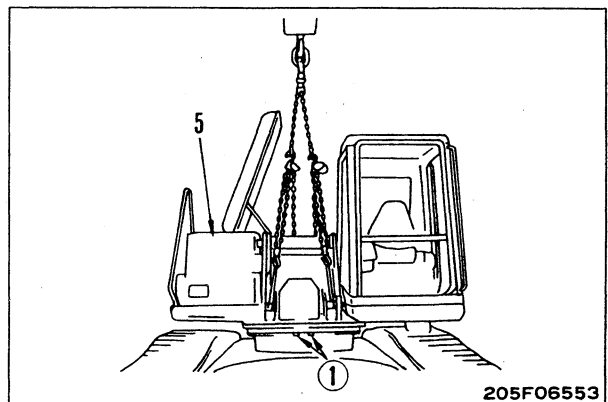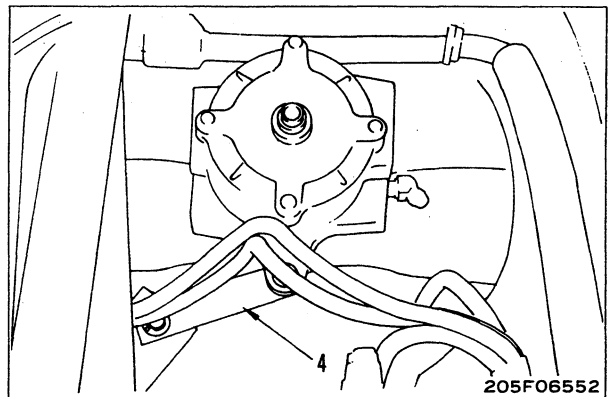

K20506

INSTALLATION OF REVOLVING FRAME ASSEMBLY

- Carry out installation in the reverse order to removal.

※ 1



Mating surface of swing circle:

Gasket sealant (LG-1)



Thread of revolving frame mounting bolt:

Thread tightener (LT-2)



Revolving frame mounting bolt:





Item Model	Mounting bolt		Mounting bolt tightening torque
	Size	Q'ty	Nm (kgm)
PC210	22-110	32	804.4 ± 83.4 (82 ± 8.5)
PC240	24-150	32	1000.5 ± 103 (102 ± 10.5)

- Refilling with oil (hydraulic tank)
 - ★ Add oil through the oil filler to the specified level. Run the engine to circulate the oil through the system. Then check the oil level again.
- Bleeding air
 - ★ Bleed the air. For details, see TESTING AND ADJUSTING, Bleeding air.

K20506

REMOVAL OF SWING CIRCLE ASSEMBLY

1. Remove revolving frame assembly. For details, see REMOVAL OF REVOLVING FRAME ASSEMBLY.
2. Remove swing circle mounting bolts (1), leaving 1 bolt each in front and rear direction. ※ 1
★ Swing circle assembly mounting bolts: 36
3. Sling swing circle assembly (2) at three points, then remove remaining mounting bolts.
4. Lift off swing circle assembly (2). ※ 2
kg Swing circle assembly: 280 kg

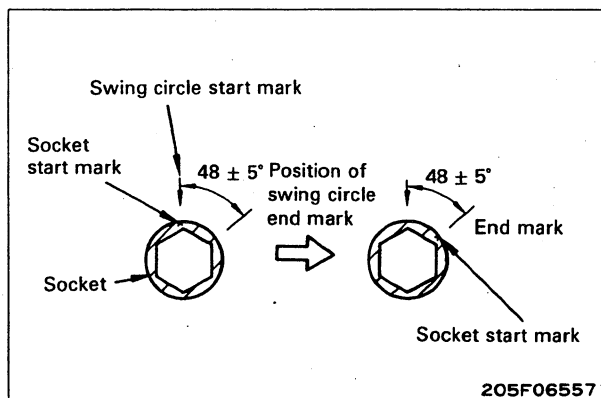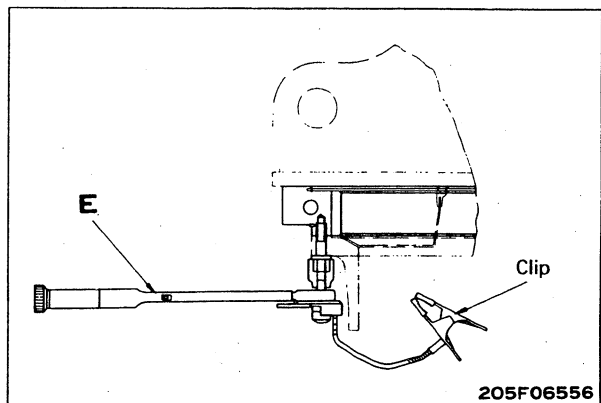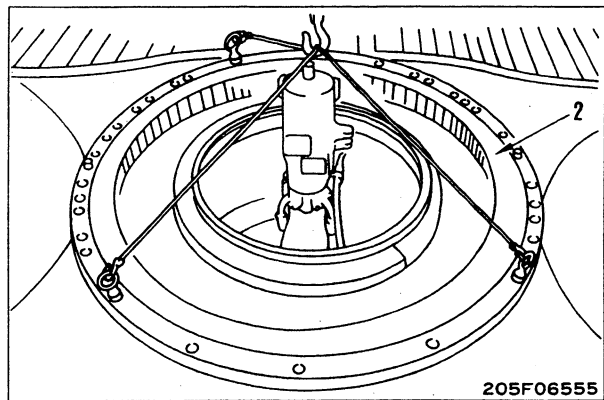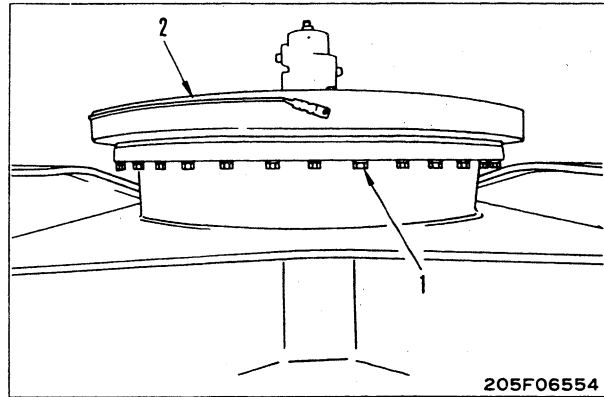

K20506

INSTALLATION OF SWING CIRCLE ASSEMBLY

- Carry out installation in the reverse order to removal.

※ 1

 Thread of swing circle mounting bolt:
Thread tightener (LT-2)

  Swing circle mounting bolt:

1st pass: Tighten to 191.3 ± 19.6 Nm (19.5 ± 2 kgm)

2nd pass: 1) When using tool E.

- Set tool E to bolt (1), install clip to other bolt, then tighten bolt $48 \pm 5^\circ$.


2) When not using tool E.

- Using the angle of the bolt head as the base, make start marks on the swing circle and socket.
- Make an end mark at a point (on swing circle) $48 \pm 5^\circ$ from the start mark.
- Tighten so that the start mark on the socket is aligned with the end mark on the swing circle at the $48 \pm 5^\circ$ position.

※ 2

- ★ Set the soft zone S mark on the inside ring of the inner race facing the right side as shown in the diagram, then install to the track frame.

 Swing circle: Grease (G2-LI) 21 g

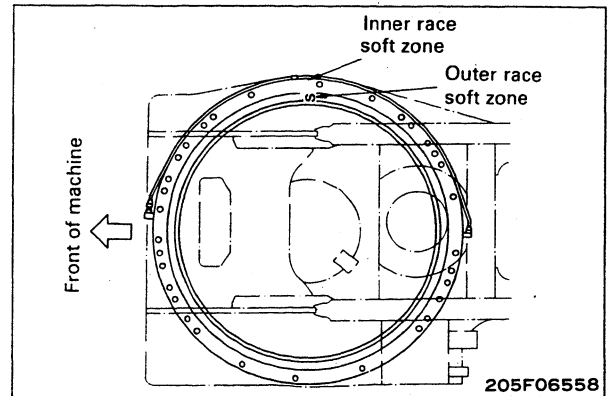

REMOVAL OF IDLER • RECOIL SPRING ASSEMBLY

1. Remove track shoe assembly. For details, see REMOVAL OF TRACK SHOE ASSEMBLY.
2. Sling idler and recoil spring assembly (1), and pull out to the front to remove.



Idler • recoil spring assembly: 275 kg

3. Disconnect recoil spring assembly (3) from idler assembly (2).



※ 1



Idler assembly: 140 kg



Recoil spring assembly: 135 kg

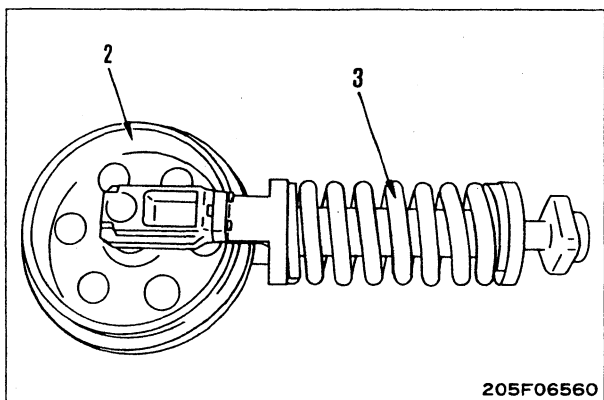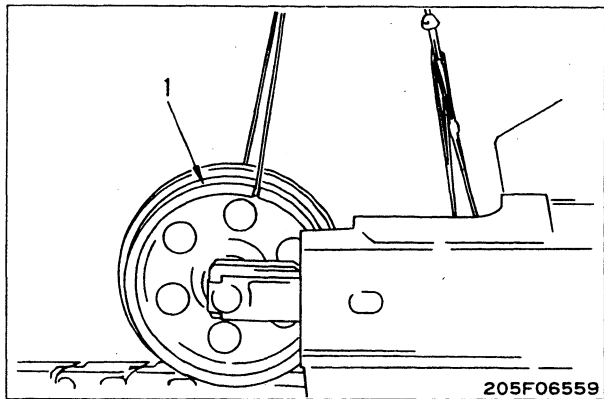

INSTALLATION OF IDLER • RECOIL SPRING ASSEMBLY


- Carry out installation in the reverse order to removal.

※ 1

- ★ When installing the idler assembly and recoil spring assembly, assemble so that the position of the greasing plug on the idler is on the outside for the right side of the machine and on the inside for the left side of the machine.

K20506

DISASSEMBLY OF RECOIL SPRING ASSEMBLY

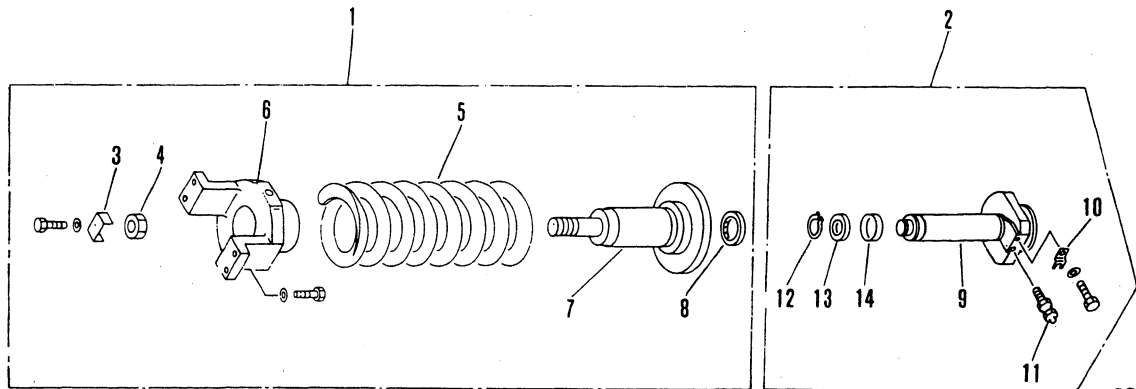

205F05479

1. Remove piston assembly (2) from recoil spring assembly (1).

2. Disassembly of recoil spring assembly


- 1) Set recoil spring assembly (1) to tool H₁.

⚠ The recoil spring is under large installed load, so be sure to set the tool properly. Failure to do this is dangerous.

- ★ Installed load of spring: 133,000 N (13,610 kg).

- 2) Apply hydraulic pressure slowly to compress spring, and remove lock plate (3), then remove nut (4).

- ★ Compress the spring to a point where the nut becomes loose.
- ★ Release the hydraulic pressure slowly and release the tension of the spring.
- ★ Free length of spring: 587.5 mm

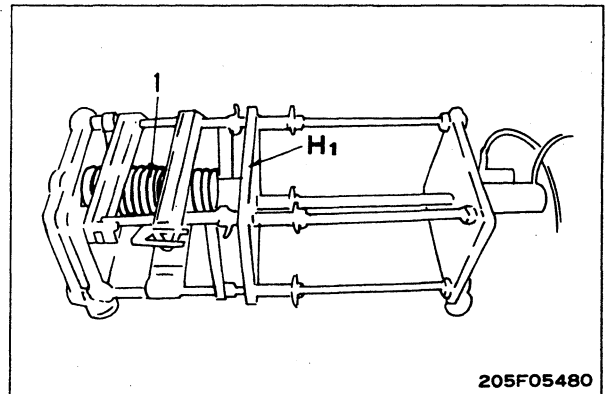

205F05480

- 3) Remove yoke (6), cylinder (7), and dust seal (8) from spring (5).

3. Disassembly of piston assembly

- 1) Remove lock plate (10) from piston (9), then remove valve (11).
- 2) Remove snap ring (12), then remove U-packing (13) and ring (14).

K20506

ASSEMBLY OF RECOIL SPRING ASSEMBLY

1. Assembly of piston assembly

- 1) Assemble ring (14) and U-packing (13) to piston (9), and secure with snap ring (12).
- 2) Tighten valve (11) temporarily, and secure with lock plate (10).

2. Assembly of recoil spring assembly

- 1) Using tool H₂, install dust seal (8) to cylinder (7).
- 2) Assemble cylinder (7) and yoke (6) to spring (5), and set in tool H₁.

 Sliding portion of cylinder: Grease (G2-LI)

- 3) Apply hydraulic pressure slowly to compress spring, and tighten nut (4) so that installed length of spring is dimension "a", then secure with lock plate (3).

★ Installed length "a" of spring : 466 mm.



- 4) Remove recoil spring assembly (1) from tool H₁.

3. Assemble piston assembly (2) to recoil spring assembly (1).

 Sliding portion of piston, wear ring:


Grease (G2-LI)

- ★ Assemble the cylinder assembly so that the mounting position of the valve is 90° to the side.
- ★ Fill the inside of the cylinder with 300 cc of grease (G2-LI), then bleed the air and check that grease comes out of the grease hole.

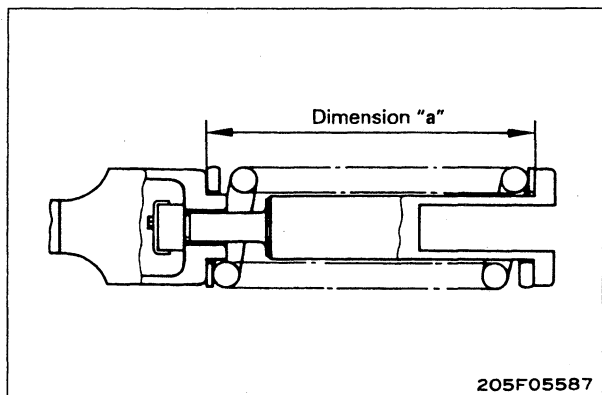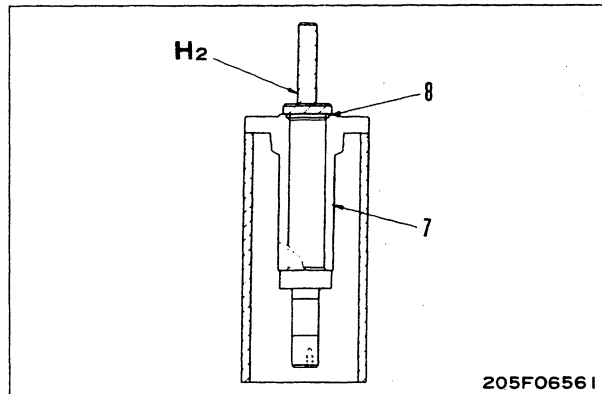


DISASSEMBLY OF IDLER ASSEMBLY


1. Remove dowel pin (1), then remove support (2).
2. Remove floating seal (3) from support (2) and idler (4).
3. Pull out idler (4) from shaft (5) and support (7) assembly.
★ It is filled with 80 cc. of oil, so drain the oil at this point or lay a cloth to prevent the area from becoming dirty.

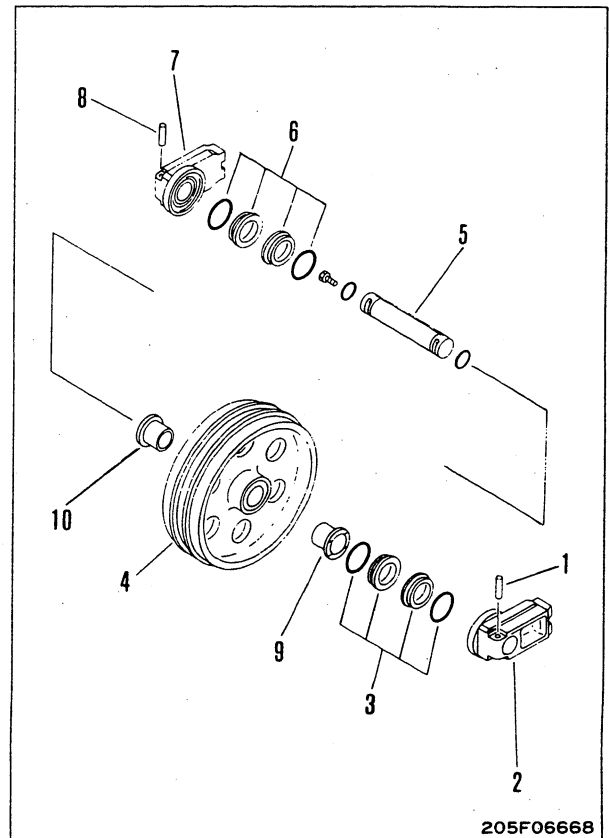

4. Remove floating seal (6) on opposite side from idler (4) and shaft (5) and support (7) assembly.

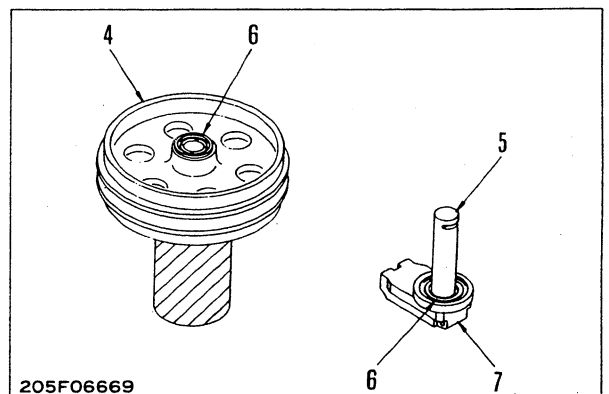


5. Remove dowel pin (8), then remove support (7) from shaft (5).
6. Remove bushings (9) and (10) from idler (4).

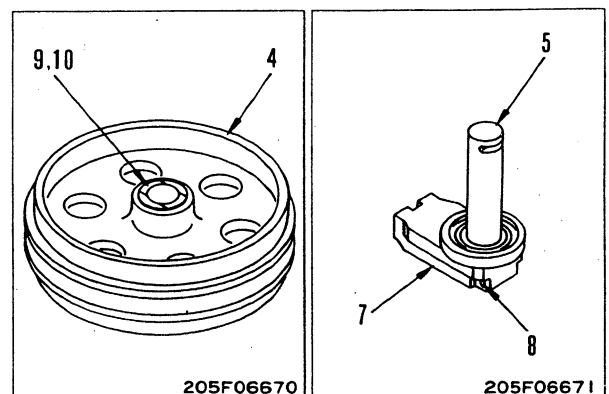

K20506

ASSEMBLY OF IDLER ASSEMBLY



1. Press fit bushings (9) and (10) to idler (4).

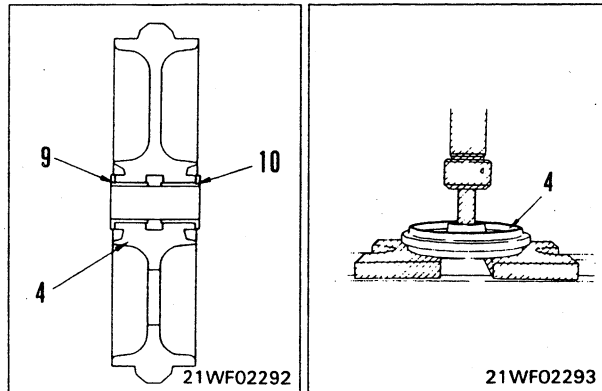


2. Fit O-ring and install support (7) to shaft (5) with dowel pin (8).

3. Using tool G₁, install floating seal (6) to idler (4) and shaft (5) and support (7) assembly.

- ★ Coat the sliding surface of the floating seal with oil, and be careful not to let any dirt or dust get stuck to it.
- ★ Remove all grease and oil from the contact surface of the O-ring and the floating seal.

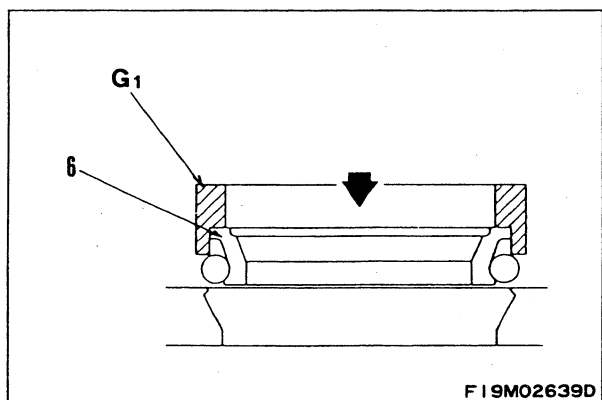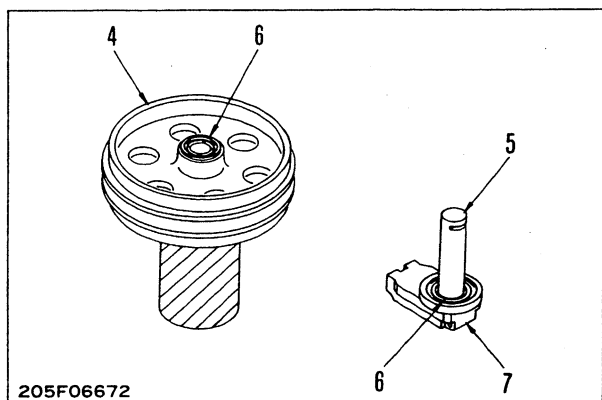



4. Assemble shaft (5) and support (7) assembly to idler (4).

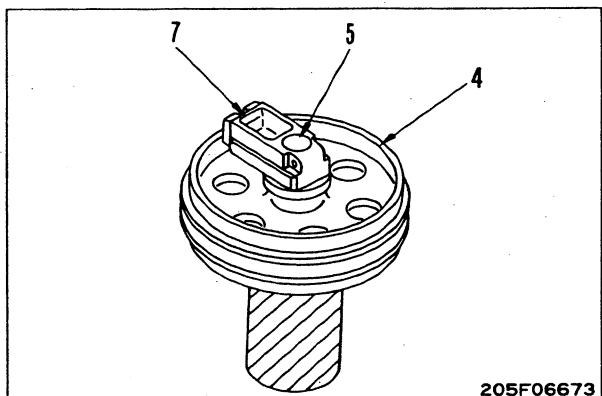

K20506

5. Using tool **G1**, install floating seal (3) to idler (4) and support (2).

- ★ Coat the sliding surface of the floating seal with oil, and be careful not to let any dirt or dust get stuck to it.
- ★ Remove all grease and oil from the contact surface of the O-ring and the floating seal.

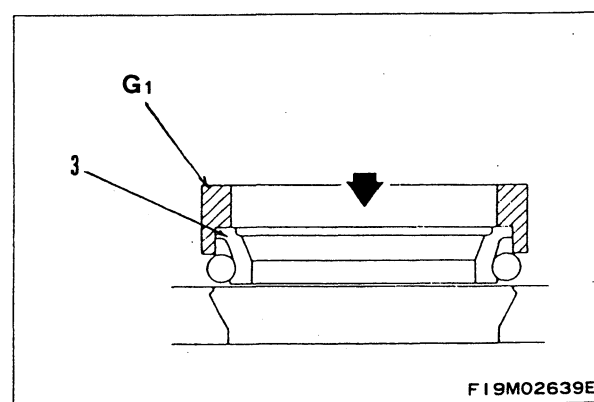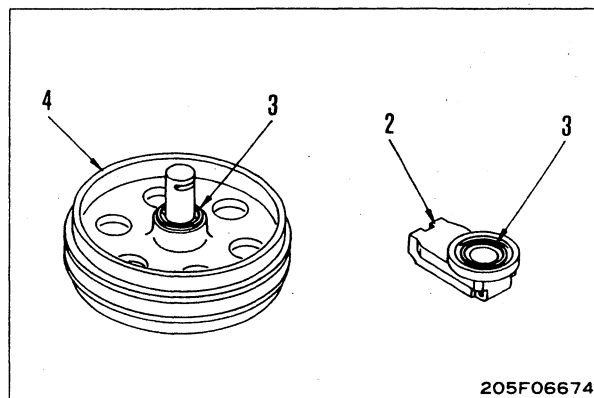

6. Install O-ring, then install support (2) with dowel pin (1).


7. Add oil and tighten plug.



Oil: Approx. 80 cc (SAE30)



Plug: 205.9 ± 49 Nm (21 ± 5 kgm)

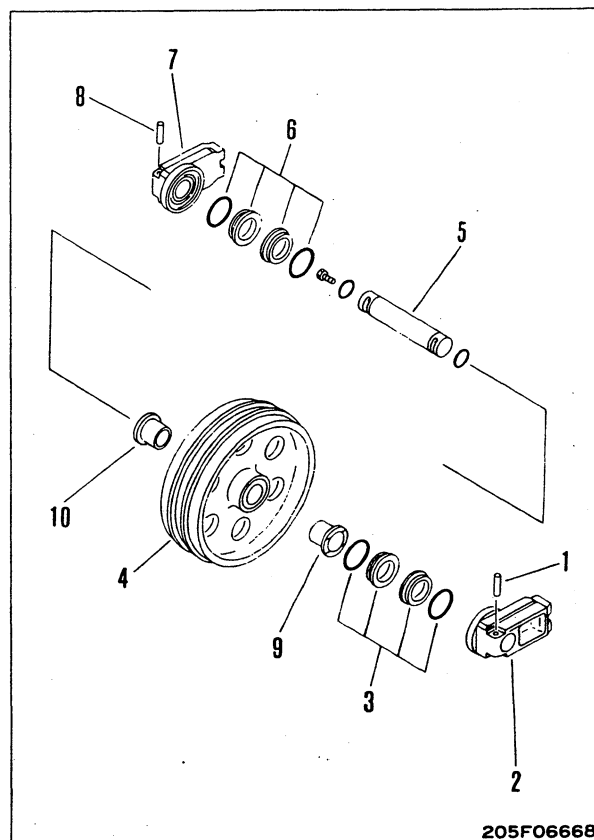

K20506

REMOVAL OF TRACK ROLLER ASSEMBLY


1. Lower work equipment, then loosen lubricator (1), and relieve track tension. ※ 1

⚠ The adjustment cylinder is under extremely high pressure. Never loosen the lubricator more than one turn. If the grease does not come out easily, move the machine backwards and forwards.

2. Remove mounting bolts of track roller, then swing work equipment 90°, jack up machine, and remove track roller assembly (2) towards outside of machine. ※ 2



Track roller assembly: 40 kg

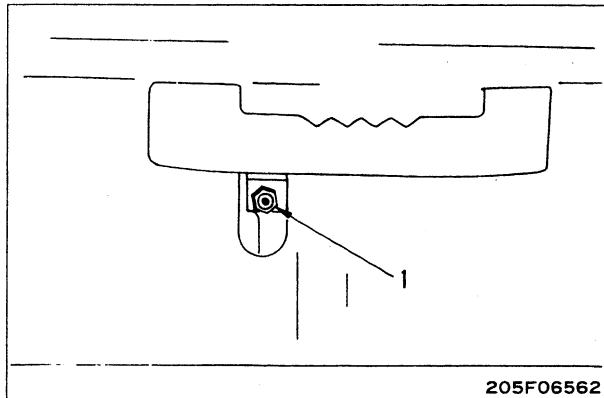

INSTALLATION OF TRACK ROLLER ASSEMBLY

- Carry out installation in the reverse order to removal.

※ 1

- ★ Adjust the track tension. For details, see TESTING AND ADJUSTING, Testing and adjusting track tension.

※ 2

- ★ Place the plug on the outside of the chassis, and set the track roller assembly in the mounting position.
- ★ Operate the work equipment levers to lower the machine slowly, then tighten the mounting bolts temporarily.
- ★ Operate the work equipment levers to lower the machine completely to the ground, then tighten the mounting bolts fully.



Track roller assembly mounting bolt:




1st pass: Tighten to 196.1 ± 19.6 Nm (20 ± 2 kgm)

2nd pass: 1. When using tool K₃.

- Using an angle tightening wrench, tighten bolt $90 \pm 5^\circ$.


2. When not using tool K₃.

- 1) Using the angle of the bolt head as the base, make start marks on the track roller and socket.
- 2) Make an end mark at a point $90 \pm 5^\circ$ from the start mark.
- 3) Tighten so that the start mark on the socket is aligned with the end mark on the track roller at the $90 \pm 5^\circ$ position.

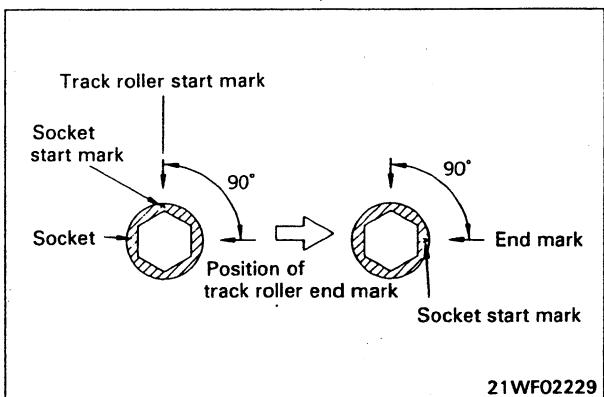
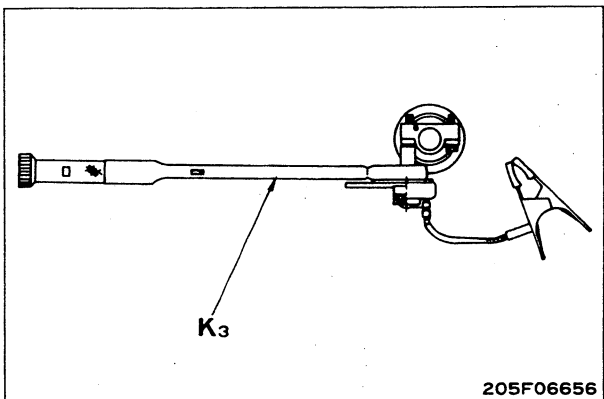
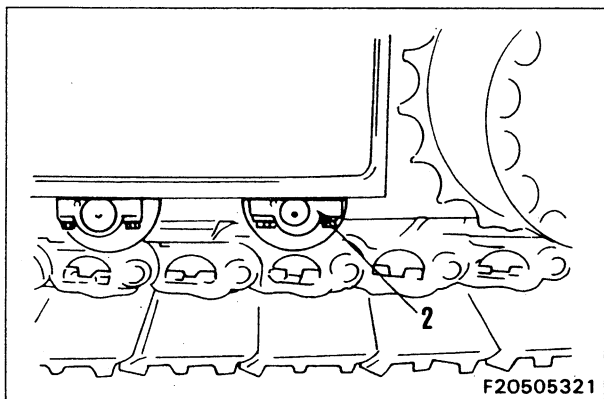


K20506



DISASSEMBLY OF TRACK ROLLER ASSEMBLY

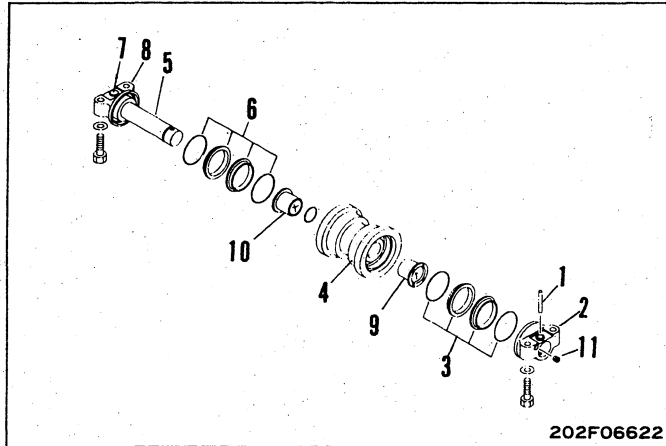



1. Remove pin (1), then remove collar (2).
2. Remove floating seal (3) from collar (2) and roller (4).

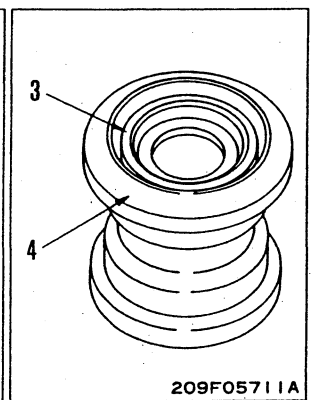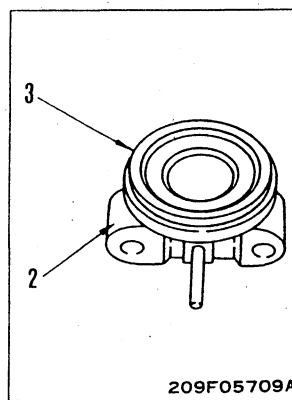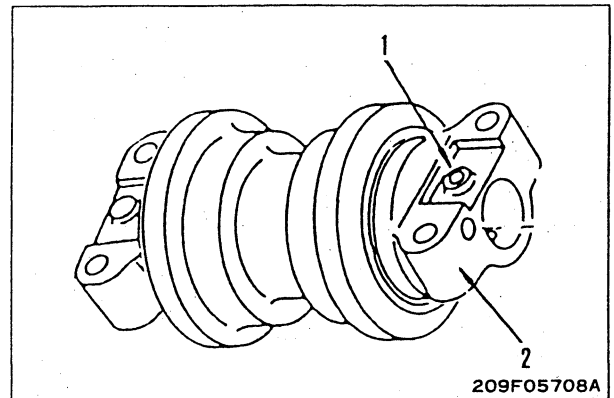

3. Pull out roller (4) from shaft (5).
 - ★ It is filled with 190 — 215 cc. of oil, so drain the oil at this point or lay a cloth to prevent the area from becoming dirty.
4. Remove floating seal (6) on opposite side from roller (4) and shaft (5).

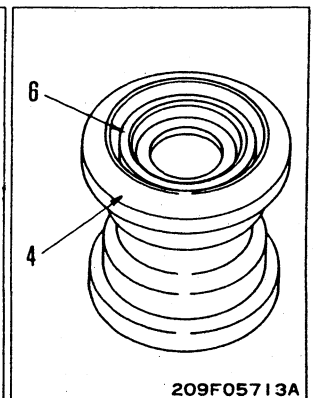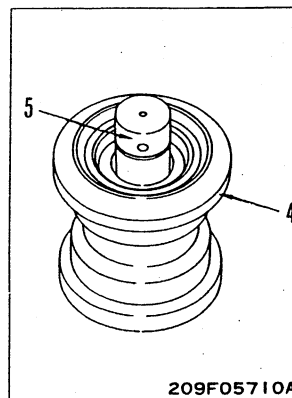





5. Remove pin (7), then remove collar (8) from shaft (5).
6. Remove bushings (9) and (10) from roller (4).

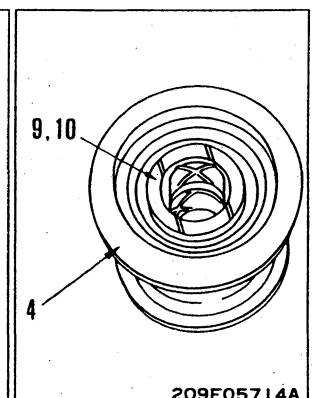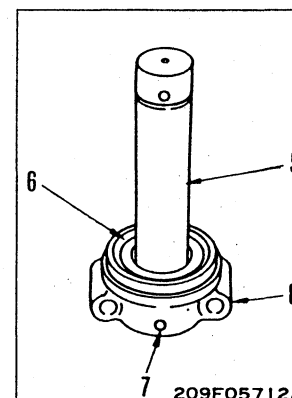

K20506

ASSEMBLY OF TRACK ROLLER ASSEMBLY

1. Using push tool ①, press fit bushings (9) and (10) to roller (4).
2. Assemble collar (8) to shaft (5), and install pin (7).
3. Using tool K₁, install floating seal (6) to shaft (5).
 - ★ When assembling the floating seal, clean the contact surface of O-ring (6c) and floating seal (6a), remove all grease and oil, and dry it. Make sure that no dirt or dust sticks to the contact surface of the floating seal.
4. Using tool K₁, install floating seals (6) and (3) to roller (4).
 - ★ For details of the precautions when installing floating seals (6b) and (6d), and (3b) and (3d), see the precaution for Step 3.
5. Assemble shaft (5) to roller (4).
6. Turn over roller (4) and shaft (5) assembly.
7. Using tool K₁, install floating seal (3) to collar (2).
 - ★ For details of the precautions when installing floating seals (3a) and (3c), see the precaution for Step 3.
8. Assemble collar (2) to shaft (5), and install pin (1).

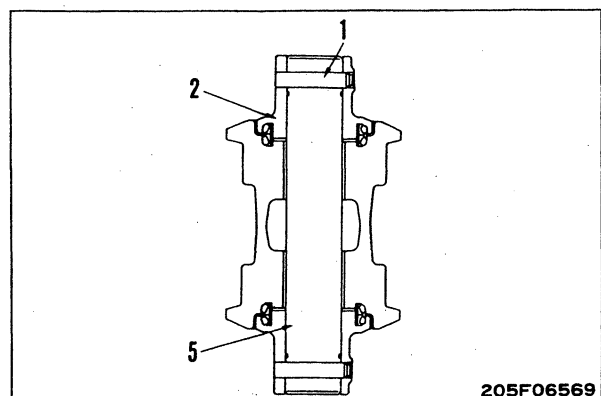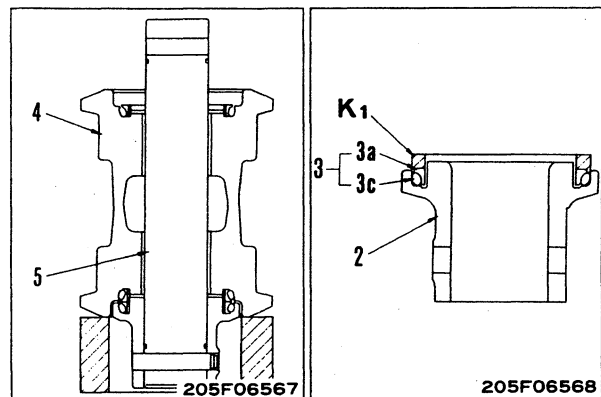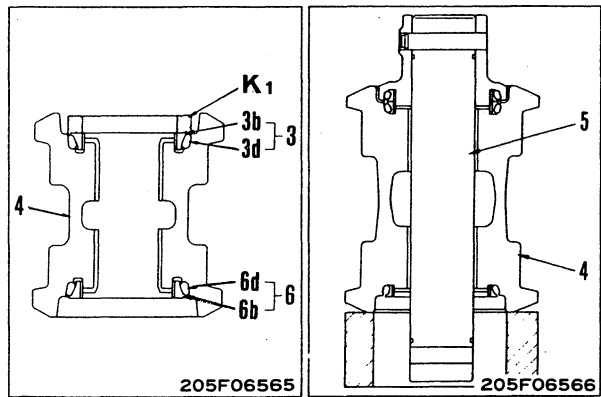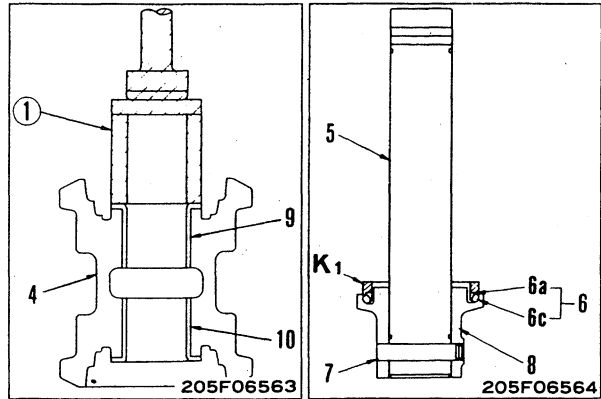


K20506

9. Using tool K2, apply basic pressure to roller oil filler port, and check for leakage of air from seal.

★ Basic pressure: 98 kPa (1 kg/cm²)

★ Method of checking



The basic pressure shall be maintained for 10 seconds and the indicator of the gauge shall not go down.

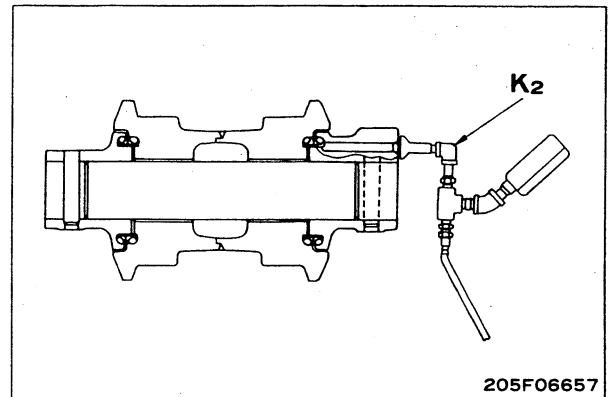

10. Using tool K2, fill track roller assembly with oil, then tighten plug (11).

 Plug: 14.7 ± 4.9 Nm (1.5 ± 0.5 kgm)

 Track roller oil: 190 – 215 cc (SAE30)

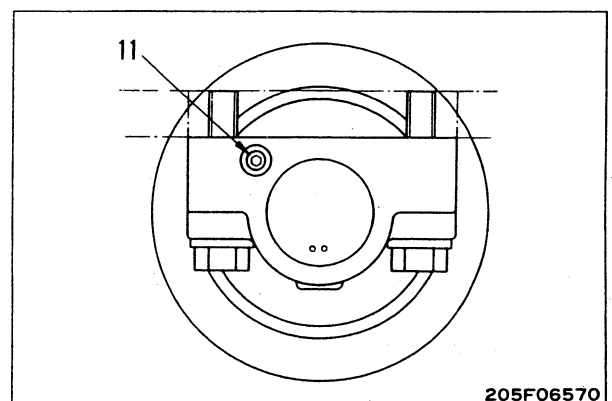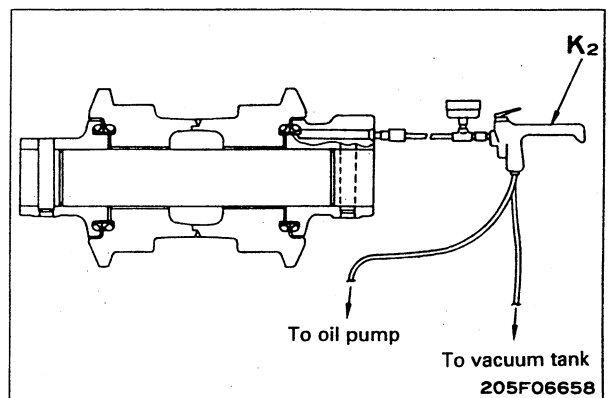


K20506

REMOVAL OF CARRIER ROLLER ASSEMBLY

1. Lower work equipment, then loosen lubricator (1), and relieve track tension. ※ 1

⚠ The adjustment cylinder is under extremely high pressure. Never loosen the lubricator more than one turn. If the grease does not come out, move the machine backwards and forwards.

2. Using hydraulic jack ①, push up track to a position where carrier roller assembly can be removed, then remove carrier roller assembly (2). ※ 2

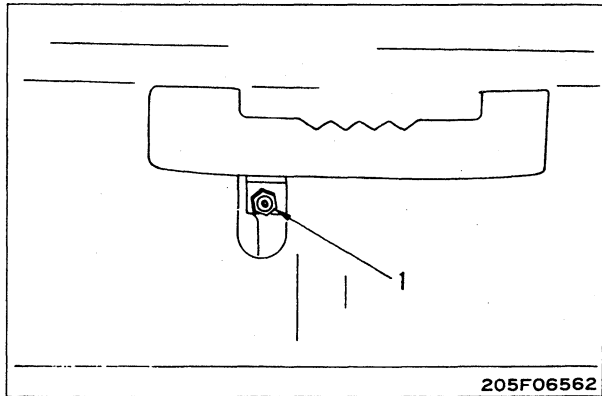

INSTALLATION OF CARRIER ROLLER ASSEMBLY


- Carry out installation in the reverse order to removal.

※ 1

- ★ Adjust the track tension. For details, see TESTING AND ADJUSTING, Testing and adjusting track tension.


※ 2

- Thread of carrier roller assembly mounting bolt:
Thread tightener (LT-2)

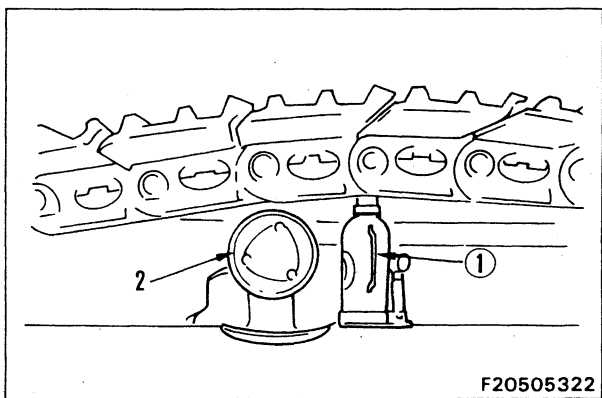

K20506

DISASSEMBLY OF CARRIER ROLLER ASSEMBLY








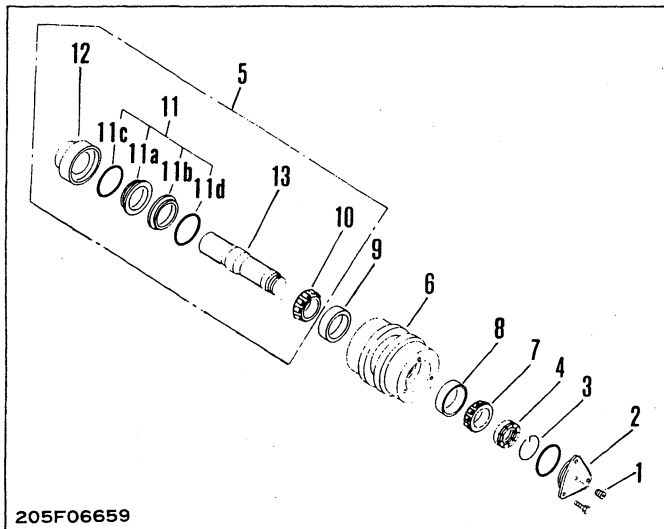


1. Remove plug (1) and drain oil.
 Carrier roller assembly : 230 — 250 cc
2. Set carrier roller assembly on stand ①.
3. Remove cover (2).
4. Remove ring (3).
5. Using tool L₁, remove nut (4).
6. Using push tool ②, pull out shaft assembly (5) from roller (6) with press, then remove inner race (7).
7. Remove outer races (8) and (9) from roller (6).

8. Disassembly of shaft assembly





- 1) Using puller ③, remove inner race (10).

- 2) Remove floating seals (11).
- 3) Using push tool ④, remove collar (12) from shaft (13).

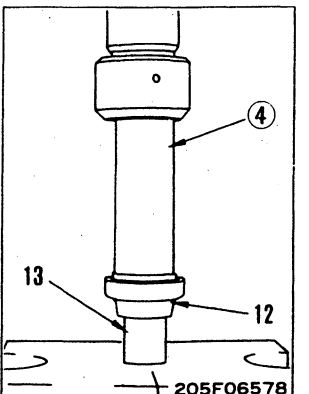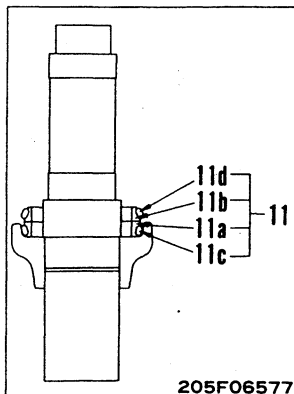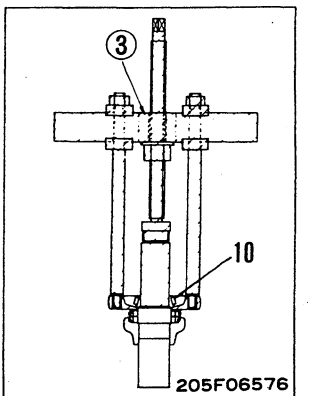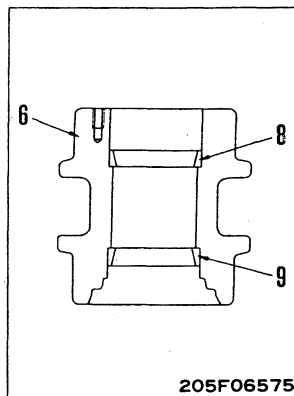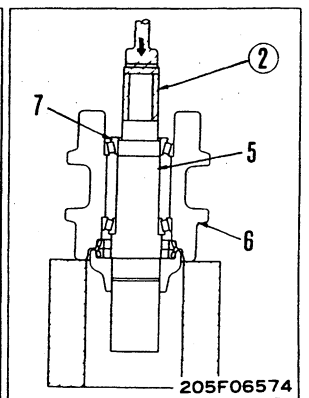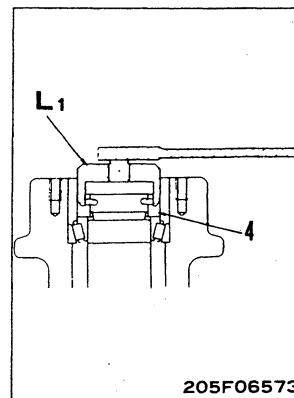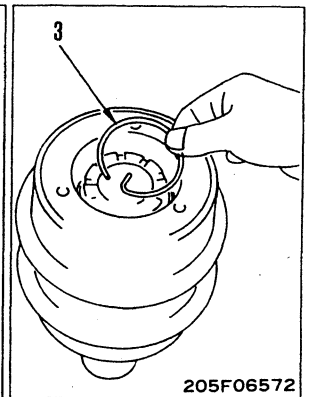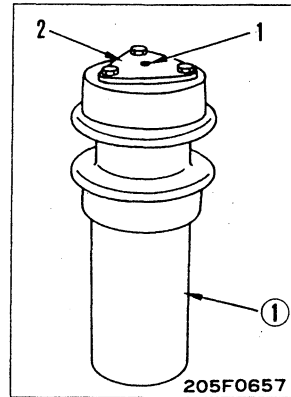


ASSEMBLY OF CARRIER ROLLER ROLLER ASSEMBLY

1. Using push tool ⑤, press fit outer races (8) and (9) to roller (6).
2. **Assembly of shaft assembly**
 - 1) Using push tool ⑥, press fit collar (12) to shaft (13).
 - ★ When press fitting, be careful that there is no scuffing.
 -  Fitting portion of shaft: SAE30
 - 2) Using tool L3, assemble floating seals (11).
 - ★ When assembling the floating seal, clean the contact surface of O-ring (11c) and floating seal (11a), remove all grease and oil, and dry it. Make sure that no dirt or dust sticks to the contact surface of the floating seal.
 - 3) Assemble floating seals (11), then using push tool ⑦, press fit inner race (10).
 - ★ For details of the precautions when installing floating seals (11b) and (11d), see the precaution for Step 2).
3. Assemble roller (6) to shaft assembly (5).
4. Using push tool ⑧, press fit inner race (7).
 - ★ When press fitting the bearing, rotate the roller, and press fit to a point where the rotation becomes slightly heavier.
5. Using tool L1, tighten nut (4) to a point where drill hole in shaft is aligned with drill hole in nut.
6. Install ring (3).
7. Using push scale ⑨, check that it rotates smoothly.

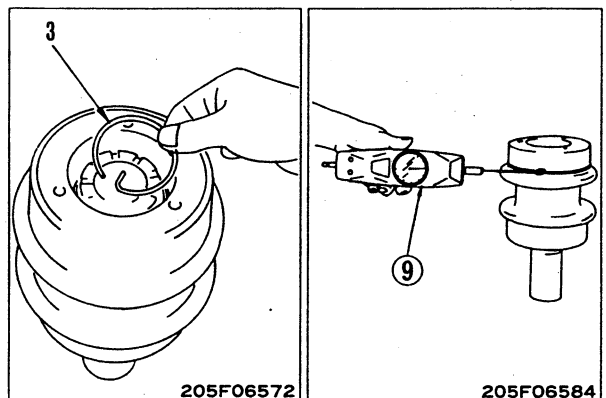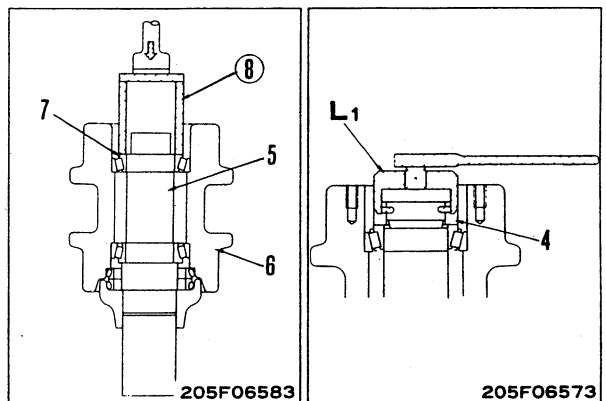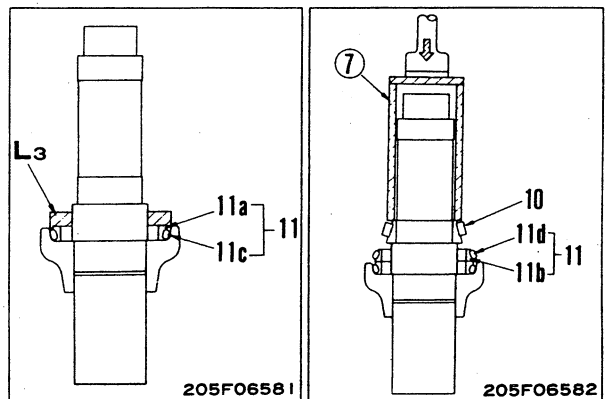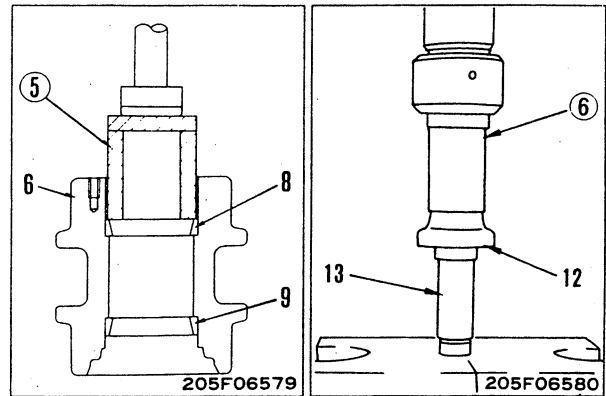

K20506

8. Fit O-ring and install cover (2).

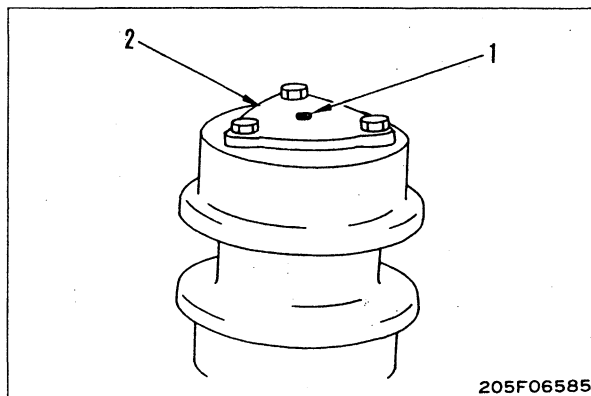


9. Using tool L2, apply basic pressure to roller oil filler port, and check for leakage of air from seal.

★ Basic pressure: 98 kPa (1 kg/cm²)

★ Method of checking


The basic pressure shall be maintained for 10 seconds and the indicator of the gauge shall not go down.

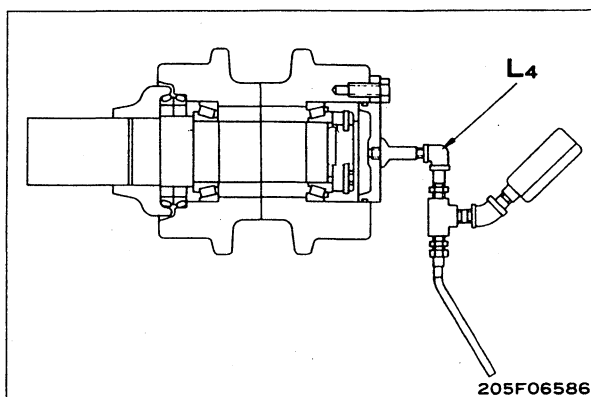

10. Using tool L4, fill carrier roller assembly with oil, then tighten plug (1).



Carrier roller oil: 230 – 250 cc (SAE30)

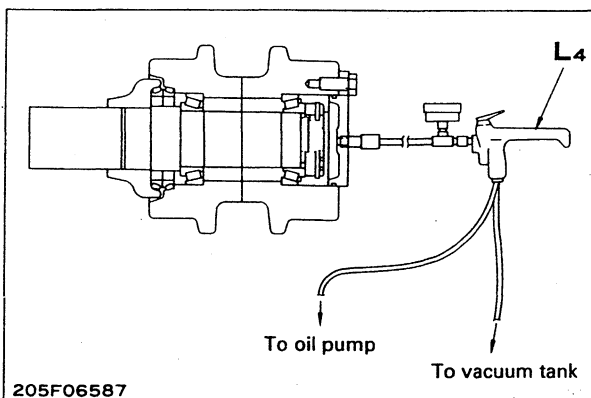

K20506



REMOVAL OF TRACK SHOE ASSEMBLY

1. Stop machine at a point where master pin is mid-way between idler and carrier roller, and where there is space to lay out track assembly on ground.
2. Lower work equipment, then loosen lubricator (1), and relieve track tension. ※ 1





The adjustment cylinder is under extremely high pressure. Never loosen the lubricator more than one turn. If the grease does not come out, move the machine backwards and forwards.

3. Using tool I, pull out master pin (2) ※ 2
4. Remove tool I, and move machine forward so that position of temporary pin ② is at front of idler, and set block ① in position.
5. Remove temporary pin ②, and remove dust seal, then drive machine in reverse to lay out track (3). ※ 3

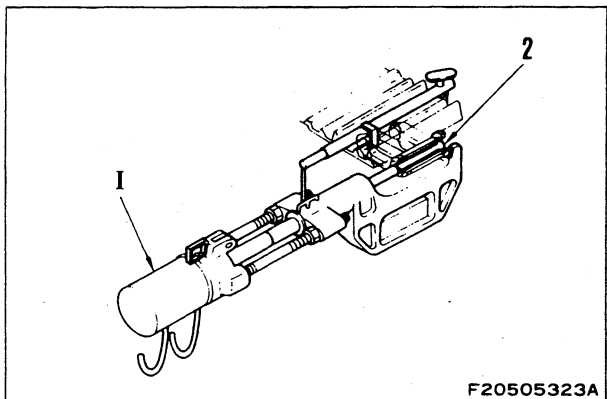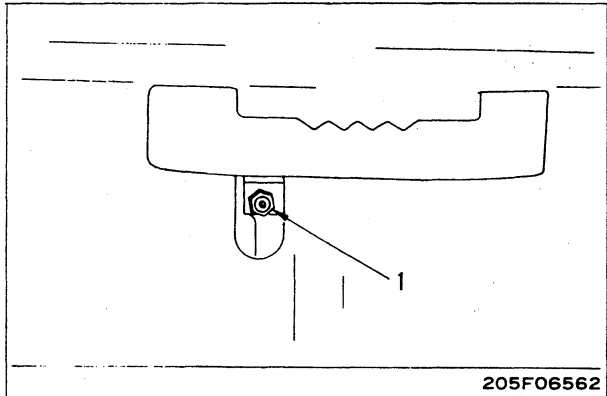

INSTALLATION OF TRACK SHOE ASSEMBLY

- ※ 1
 - ★ Adjust the track tension. For details, see TESTING AND ADJUSTING, Testing and adjusting track tension.
- ※ 2
 - ★ Use tool I and press fit so that the protrusion of the master pin is dimension "a".
Protrusion "a" of master pin: 4 ± 2 mm
- ※ 3
 - ★ When assembling the dust seal, coat the bushing contact surface with grease (G2-LI).

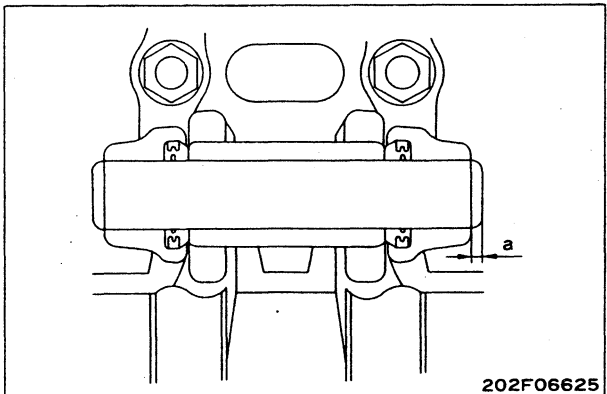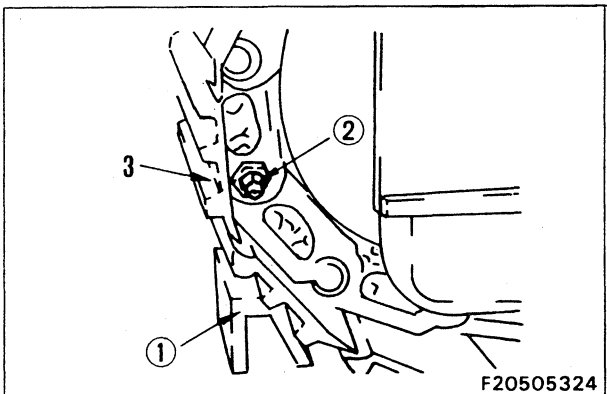

K20506


REMOVAL OF HYDRAULIC TANK ASSEMBLY

1. Drain oil from hydraulic tank.




Hydraulic tank: Approx. 170 l


2. Remove R.H. side cover together with cover mounting frame.
3. Remove engine hood (1), hood mounting bracket (2), cover (3), and engine room divider board (4).

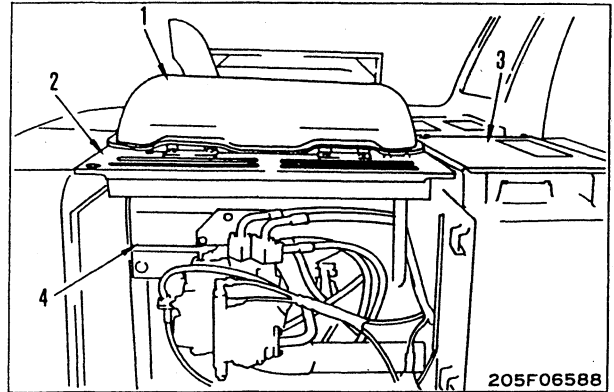


4. Disconnect pump outlet hoses (5).
5. Remove pump suction tube (6) together with joint hose (7).

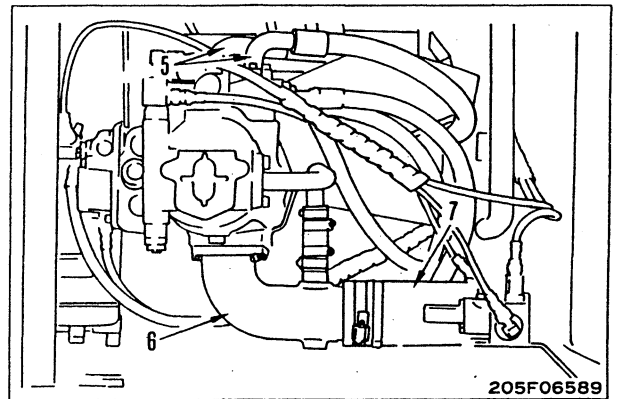

6. Remove connector (8) at side of hydraulic tank from holder and disconnect, then open wiring harness mounting clamp ① and disconnect wiring harness (9) from hydraulic tank.

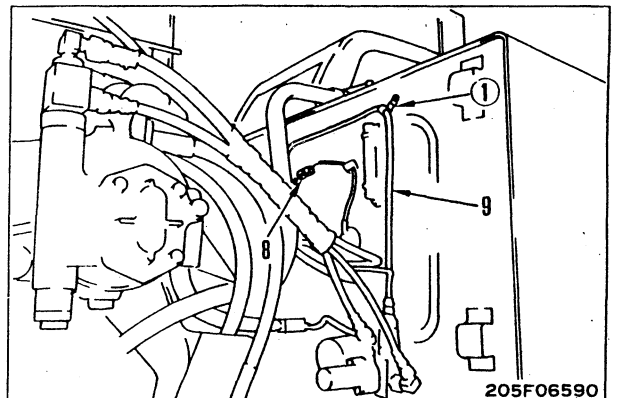

7. Disconnect house (10), (11), (12) and (12A).

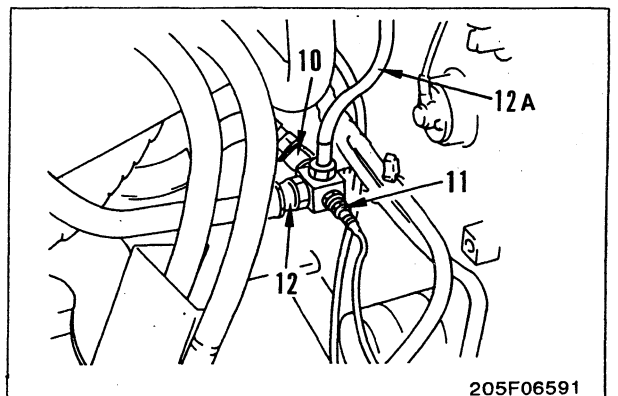


K20506

- 8. Remove nut of U-bolt (14) for clamp of hydraulic oil return tube (13), then disconnect tube (13) from hydraulic tank, and pull towards muffler with rope.

- 9. Remove mounting bolts, and lift off hydraulic tank assembly (15). ※ 1



Hydraulic tank: 135 kg

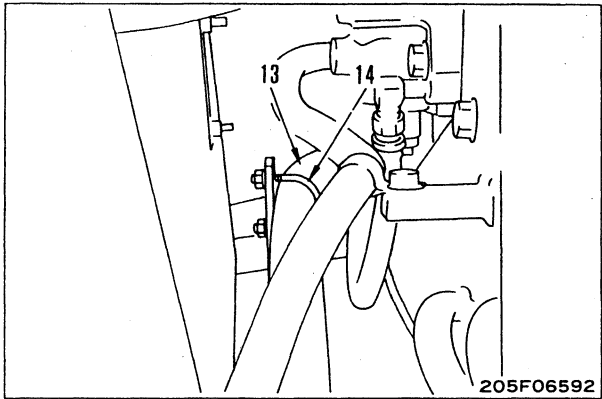

INSTALLATION OF HYDRAULIC TANK ASSEMBLY

- Carry out installation in the reverse order to removal.



※ 1



Hydraulic tank mounting bolt:

$276.9 \pm 31.9 \text{ Nm}$ ($28.25 \pm 3.25 \text{ kgm}$)

- Refilling with oil (hydraulic tank)
 - ★ Add oil through the oil filler to the specified level. Run the engine to circulate the oil through the system. Then check the oil level again.
- Bleeding air
 - ★ For details, see TESTING AND ADJUSTING, Bleeding air.

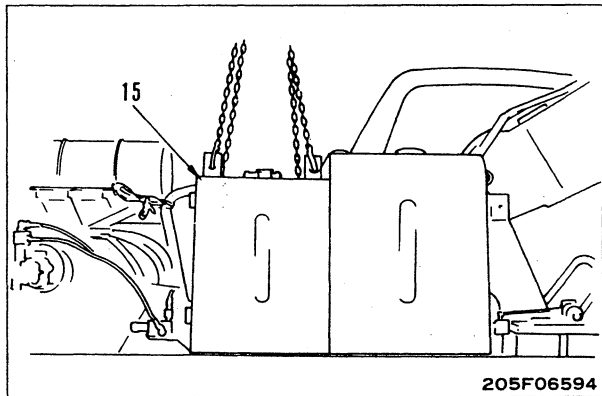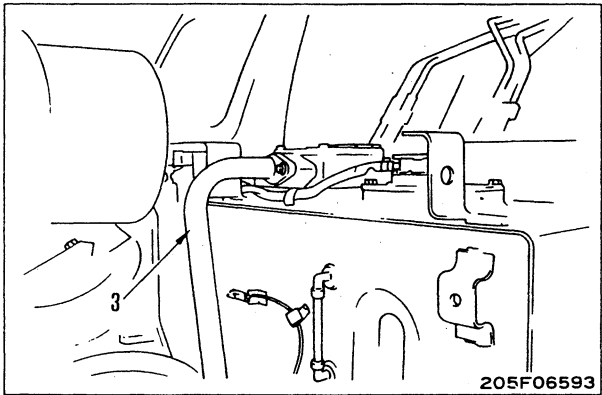

REMOVAL OF CONTROL PUMP ASSEMBLY




Lower the work equipment completely to the ground and stop the engine. Then loosen the oil filler cap slowly to release the pressure inside the hydraulic tank.

- Remove the hydraulic tank strainer, and using tool **B**, stop the oil.
 - When not using tool **B**, remove the drain plug, and drain the oil from the hydraulic tank and inside the system.




Hydraulic tank: Approx. 170 ℓ

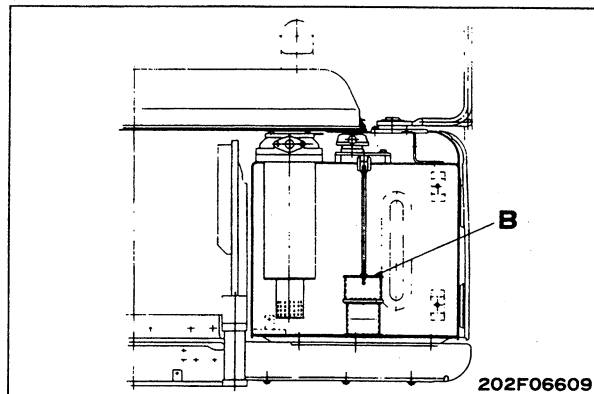

- Remove control pump inlet tube (1).
- Disconnect control pump outlet hoses (2).
- Remove control pump assembly (3), then remove coupling (4).

※ 1

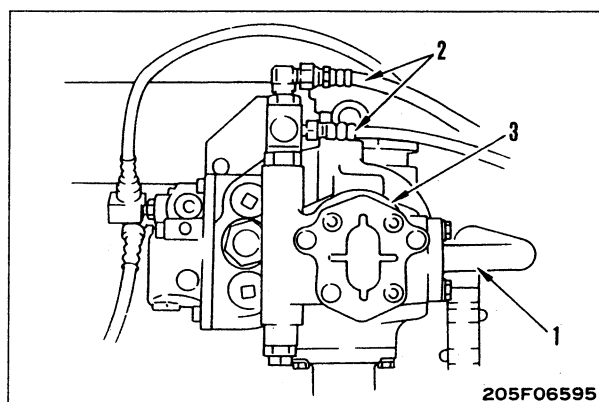

INSTALLATION OF CONTROL PUMP ASSEMBLY


- Carry out installation in the reverse order to removal.

※ 1



Control pump mounting bolt:
 $66.2 \pm 7.4 \text{ Nm}$ ($6.75 \pm 0.75 \text{ kgm}$)

- Refilling with oil (hydraulic tank)
 - ★ Add oil through the oil filler to the specified level. Run the engine to circulate the oil through the system. Then check the oil level again.

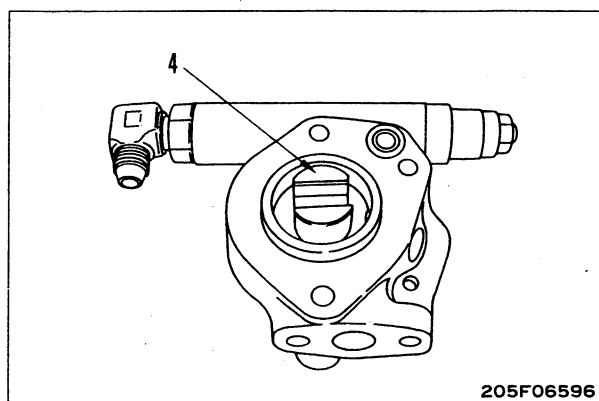


REMOVAL OF MAIN PUMP ASSEMBLY




Lower the work equipment completely to the ground and stop the engine. Then loosen the oil filler cap slowly to release the pressure inside the hydraulic tank.


- Remove the hydraulic tank strainer, and using tool **B**, stop the oil.
 - When not using tool **B**, remove the drain plug, and drain the oil from the hydraulic tank and inside the system.
- Drain oil from damper case.

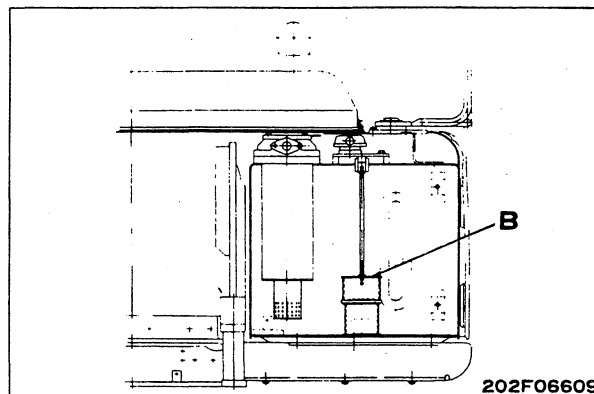


1. Remove engine hood cover, side cover by pump, chassis cover on top of main pump assembly, and mounting frame.
2. Disconnect control pump hoses (1) and (2), and F servo hoses (3) and (4), then disconnect tube (5) at pump end.

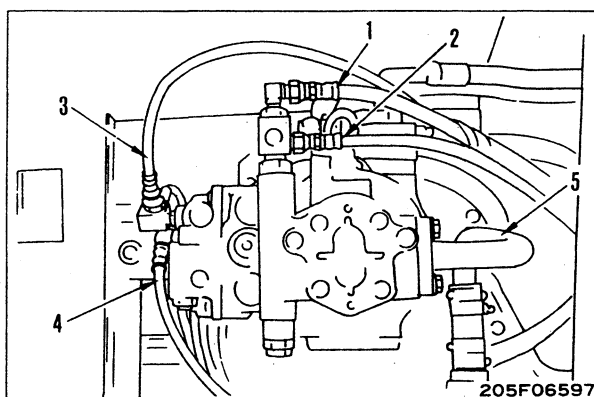

3. Remove connectors (6) and (7) from holder and disconnect.
 - ★ Disconnect the clamps of the connector wiring from the body also.
4. Disconnect R servo hose (8) and remove divider board (9) between engine and pump.

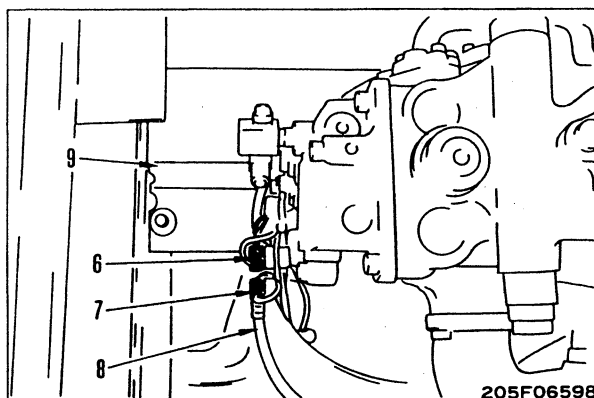

5. Disconnect top mounting hoses (10), (11), (12), (13), and (14) of main pump assembly.
6. Disconnect suction tube (15) at bottom of main pump, move towards down together with tube (5), and secure.
7. Remove cover (16) behind hoses (10) – (15).

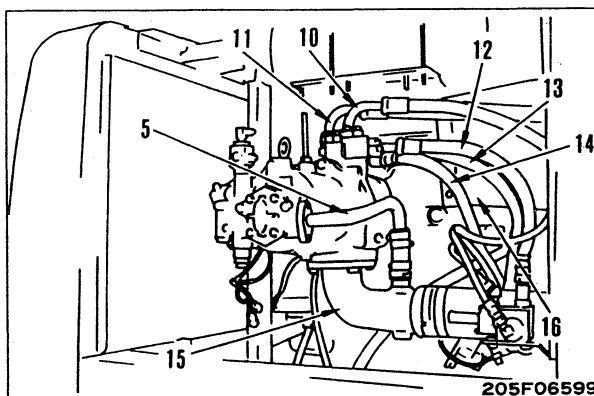


K20506

8. Remove main pump assembly as follows.
 - 1) Leaving 2 – 3 bolts, remove mounting bolts.
 - 2) Sling main pump assembly (17) and remove remaining mounting bolts.
 - 3) Install 2 guide bolts ① on diametrically opposite sides.
 - 4) Using forcing screws ②, disconnect main pump assembly (17).
 - 5) Lift off main pump assembly (17).

※ 1



Main pump assembly: 147 kg

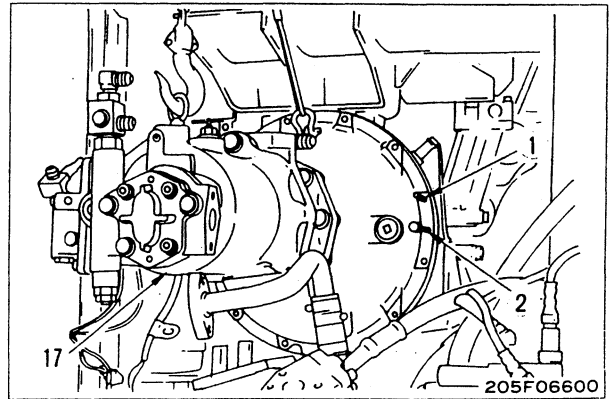

INSTALLATION OF MAIN PUMP ASSEMBLY

- Carry out installation in the reverse order to removal.

※ 1

- Involute spline of main pump:
Anti-friction compound (LM-G)
- Mating surface of main pump case:
Gasket sealant (LG-6)

- Refilling with oil (damper)
 - ★ Add engine oil through the oil filler to the specified level. Then check the oil level again.
- Refilling with oil (hydraulic tank)
 - ★ Add oil through the oil filler to the specified level. Run the engine to circulate the oil through the system. Then check the oil level again.
- Bleeding air
 - ★ Bleed the air from main pump. For details, see TESTING AND ADJUSTING, Bleeding air.


K20506

REMOVAL OF MAIN PUMP INPUT SHAFT OIL SEAL

1. Remove main pump assembly. For details, see REMOVAL OF MAIN PUMP ASSEMBLY.
2. Remove snap ring (1), then remove spacer (2).
3. Lever up oil seal (3) with a screwdriver to remove.

※ 1

- ★ When removing the oil seal, be extremely careful not to damage the shaft.

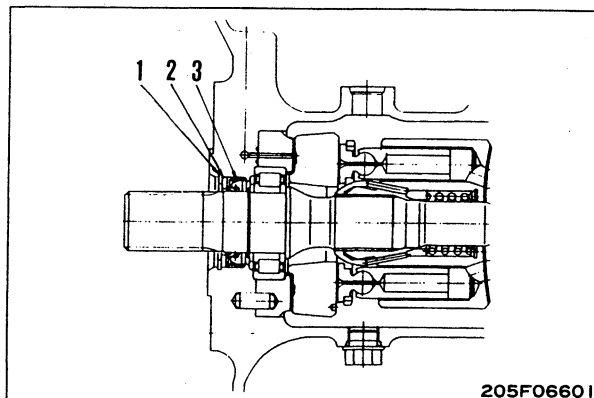


205F06601

INSTALLATION OF MAIN PUMP INPUT SHAFT OIL SEAL

- Carry out installation in the reverse order to removal.

※ 1

- Lip of oil seal: Grease (G2-LI)
- Coat the outside circumference of the oil seal with grease (G2-LI) thinly, then press fit.
- ★ Using tool N, press fit oil seal (3).

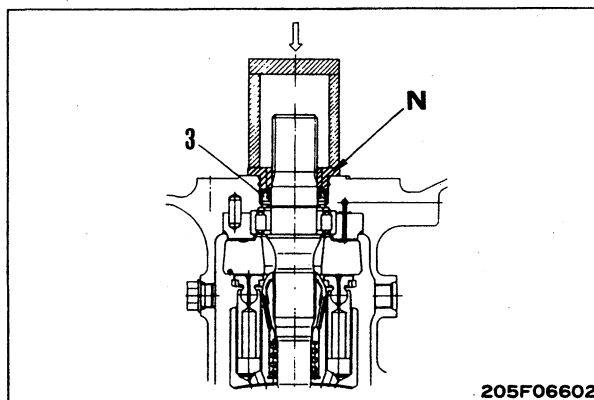

205F06602

K20506




REMOVAL OF CONTROL VALVE ASSEMBLY

⚠ Run the engine at low idling, operate the cylinder to the end of its stroke without relieving the circuit, lower the work equipment to the ground, then stop the engine. For details, see TESTING AND ADJUSTING, Releasing pressure in hydraulic circuit. After stopping the engine, do as follows.

- Loosen the oil filler cap slowly to release the pressure inside the tank.
- Operate the control levers.
 - ★ Operate the control levers several times to release the pressure in the accumulator.
- Start the engine and run at low idling for approx. 5 seconds, then stop the operation and operate the control levers.
 - ★ Repeat the above operation several times to release the remaining pressure completely.


1. Open engine hood, and remove divider covers (1), then disconnect intake connector.
2. Disconnect hoses (2), (3), and (4), remove 2 connectors (5) from holder, then disconnect.
 - ★ Remove the hose mounting elbow from the valve body.
3. Remove block (6).
4. Disconnect hoses (7) and (8), and block (9).
 - ★ When disconnecting block (9), loosen the mounting bolts of the block tube flange first.

5. Disconnect tubes (10), (11), and (12), and hoses (13), (14), and (15).
 - ★ Disconnect 6 tubes and 7 hoses.
 - ★ With hoses (15) there is another hose under each of the hoses.

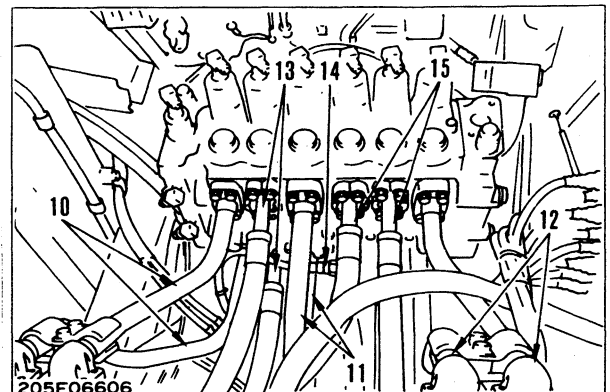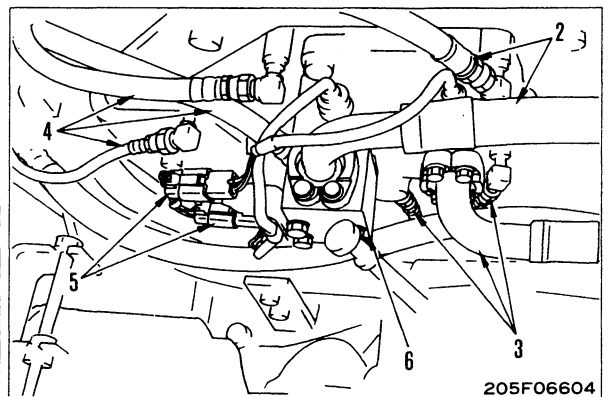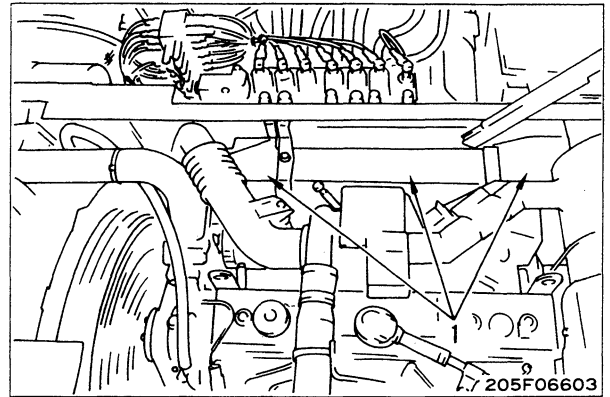

K20506


6. Disconnect hoses (16) and (17).

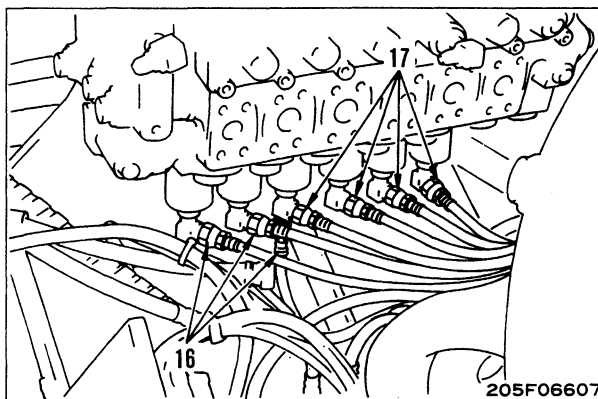

7. Sling control valve assembly (18), then remove mounting bolts, and lift off control valve assembly.



Control valve assembly: 170 kg

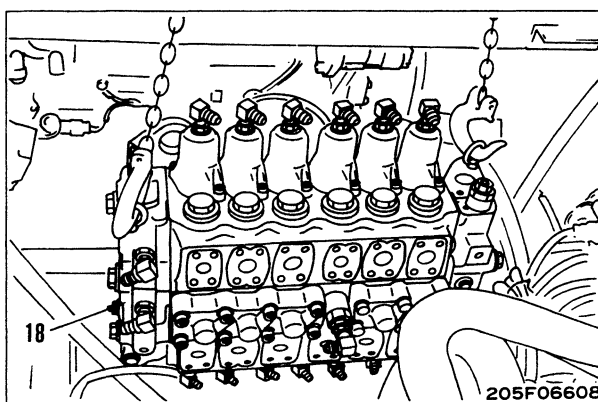

INSTALLATION OF CONTROL VALVE ASSEMBLY

- Carry out installation in the reverse order to removal.
- Refilling with oil (hydraulic tank)
 - ★ Add oil through the oil filler to the specified level. Run the engine to circulate the oil through the system. Then check the oil level again.
- Bleeding air
 - ★ Bleed the air from the circuit between the valve and the hydraulic cylinder. For details, see TESTING AND ADJUSTING, Bleeding air.

K20506


REMOVAL OF CONTROL VALVE ASSEMBLY

★ 7-spool control valve (1 service valve)



Release the remaining pressure in the hydraulic circuit. For details, see TESTING AND ADJUSTING, Releasing pressure in hydraulic circuit.


1. Open engine hood and chassis bodywork cover, remove divider cover (1), then disconnect intake connector (2).

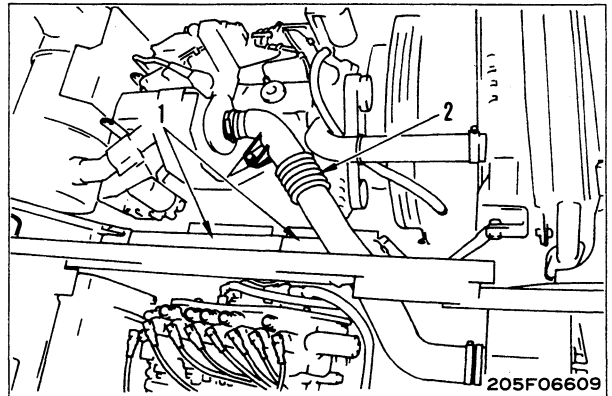

2. Disconnect hoses (3), (4), and (5), and remove 2 connectors (6) from clip, then disconnect.

★ Remove the hose mounting elbow from the valve body.

3. Remove block (7).

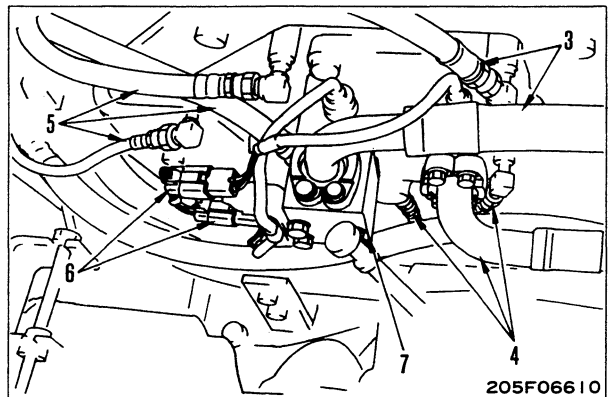


4. Disconnect hoses (8) and block (9).

★ When disconnecting block (9), loosen the mounting bolts of the flange for the tubes at the bottom first.


5. Disconnect hose (10), and remove tube (11) and block (12).

6. Disconnect hoses (13) and (14), and remove tubes (15) and (16).

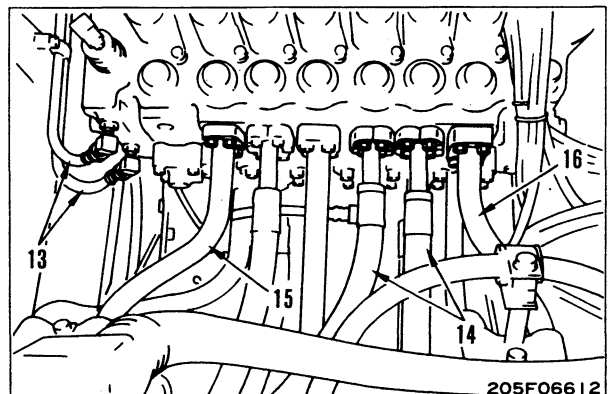

K20506

7. Remove tubes (17), (18), and (19), and disconnect hoses (20) and (21).

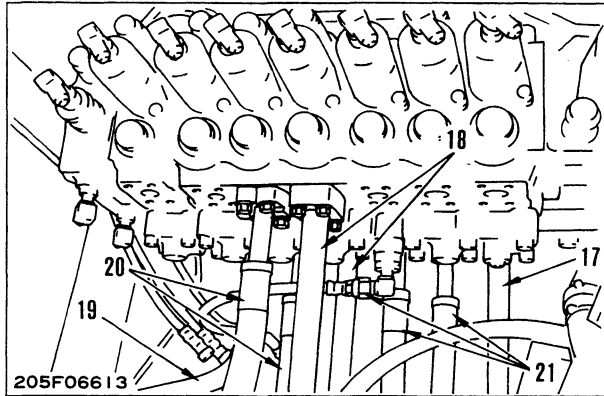


8. Disconnect hoses (22), (23), and (24) mounted to bottom of valve.

9. Lift off control valve assembly (25).



Control valve assembly: 185 kg

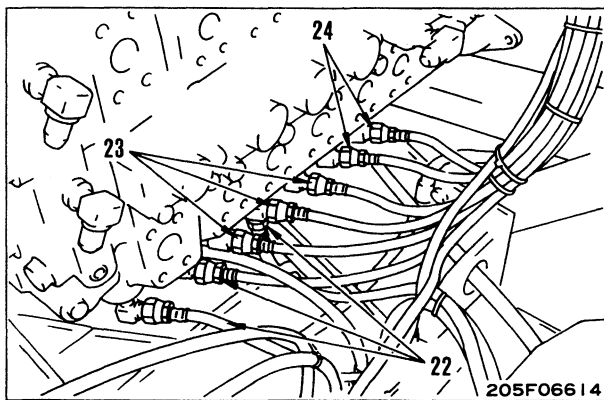

INSTALLATION OF CONTROL VALVE ASSEMBLY

★ 7-spool control valve (1 service valve)

- Carry out installation in the reverse order to removal.
- Refilling with oil (hydraulic tank)
 - ★ Add oil through the oil filler to the specified level. Run the engine to circulate the oil through the system. Then check the oil level again.
- Bleeding air
 - ★ Bleed the air from the circuit between the valve and the hydraulic cylinder. For details, see TESTING AND ADJUSTING, Bleeding air.



K20506

DISASSEMBLY AND ASSEMBLY

DISASSEMBLY OF CONTROL VALVE ASSEMBLY

- ★ The set pressure of the safety valve and arm counterbalance valve cannot be adjusted when they are installed on the machine, so do not disassemble.
- The following explanation describes the 6-spool control valve.

1. Main relief valve, main unload • LS relief valves

- 1) Remove main relief valve(1).
- 2) Remove main unload • LS relief valve (3).

2. Unload valves, safety-suction valves, suction valves

- 1) Remove unload valves (4) and (5).
- 2) Remove safety-suction valves(6), (7), (8), (9), (10), and (11).
- 3) Remove suction valves(12), (13), (14), and (15).

3. Pressure compensation valves

- ★ Before moving any pressure compensation valve, check and mark its mounting position.
- 1) Remove bucket DUMP pressure compensation valve (16), R.H. travel REVERSE pressure compensation valve (17), boom RAISE pressure compensation valve (18), right swing pressure compensation valve (19), L.H. travel REVERSE pressure compensation valve (20), and arm IN pressure compensation valve(21).
 - ★ After removing the pressure compensation valves, remove check valve (22) from each pressure compensation valve mount.
- 2) Remove bucket CURL pressure compensation valve (23), R.H. travel FORWARD pressure compensation valve (24), boom LOWER pressure compensation valve (25), left swing pressure compensation valve (26), L.H. travel FORWARD pressure compensation valve (27), and arm OUT pressure compensation valve(28).
 - ★ After removing the pressure compensation valves, remove check valve (29) from each pressure compensation valve mount.

4. LS selectvalve

- Remove LS select valve (30).

5. LS shuttle valves, pump merge-divider valve, arm counterbalance valve

- 1) Remove LS shuttle valves (31) and (32).
- 2) Remove pump merge-divider valve (33), then remove spring (57) and valve (58).
- 3) Remove arm counterbalance valve (34), then remove spring (59) and valve (60).

6. Remove covers (35) and (36).

7. Arm control valve, boom control valve, bucket control valve

- 1) Remove case (37), then remove spring (38) and retainer (39).
- 2) Remove spool assembly (40).
 - ★ Do not disassemble spool assembly (40).
- 3) Remove case (41), then remove spring (42), and retainer (44).

8. Swing controlvalve


- 1) Remove case (45), then remove spring (46), and retainer (48).
- 2) Remove spool assembly(49).
 - ★ Do not disassemble spool assembly (49).
- 3) Remove case (41), then remove spring (42) and retainer(44).

9. R.H. travel control valve, L.H. travel control valve

- 1) Remove case (50), then remove spring (51) and retainer (52).
- 2) Remove spool assembly(53).
 - ★ Do not disassemble spool assembly (53).
- 3) Remove case (54), spring (55), and retainer (56).

K20506

DISASSEMBLY OF PRESSURE COMPENSATION VALVE ASSEMBLY

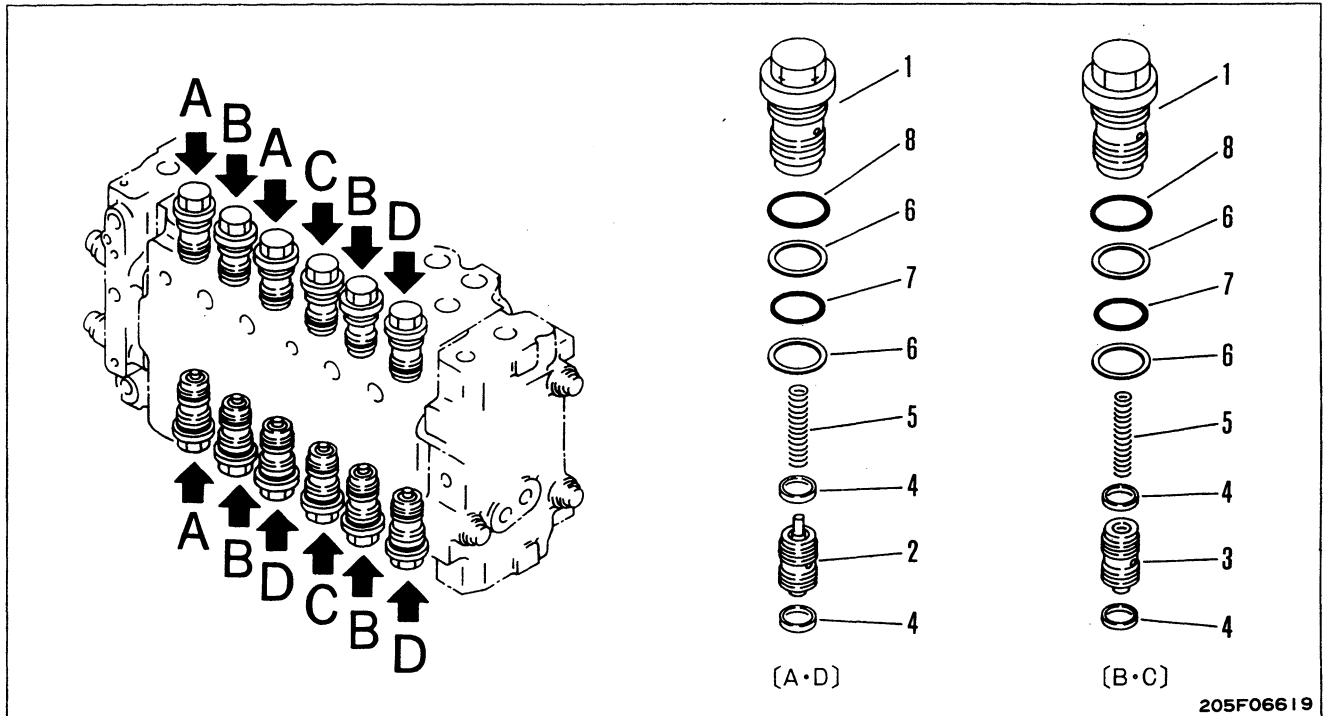

- The structure of the parts for pressure compensation valves A, B, C, and D is the same, but the part number for the assembly is different, so be careful when assembling.
- 1. Remove piston sub-assembly (2) and piston (3) from sleeve (1), then remove seals (4).
 - ★ Sub-piston assembly (2) is assembled to pressure compensation valves A and D, and piston assembly (3) is assembled to pressure compensation valves B and C.
- 2. Remove spring (5), then remove ring (6) and O-rings (7) and (8) from sleeve (1).
- ★ After disassembling, if there is any abnormality in sleeve (1), seal (4), piston sub-assembly (2), or piston (3), replace the whole pressure compensation valve assembly.


Pressure compensation valves

- A: For bucket CURL/DUMP, boom RAISE
- B: For R.H. travel FORWARD/REVERSE, L.H. travel FORWARD/REVERSE
- C: For left/right swing
- D: For boom LOWER, arm IN/OUT

ASSEMBLY OF PRESSURE COMPENSATION VALVE ASSEMBLY

- Before assembling, coat the sliding surface with engine oil.
- 1. Install O-rings (8) and (7), and ring (6) to sleeve (1).
- 2. Assemble spring (5), then assemble seals (4) to piston sub-assembly (2) and piston (3), and install to sleeve.


DISASSEMBLY OF MAIN RELIEF VALVE ASSEMBLY

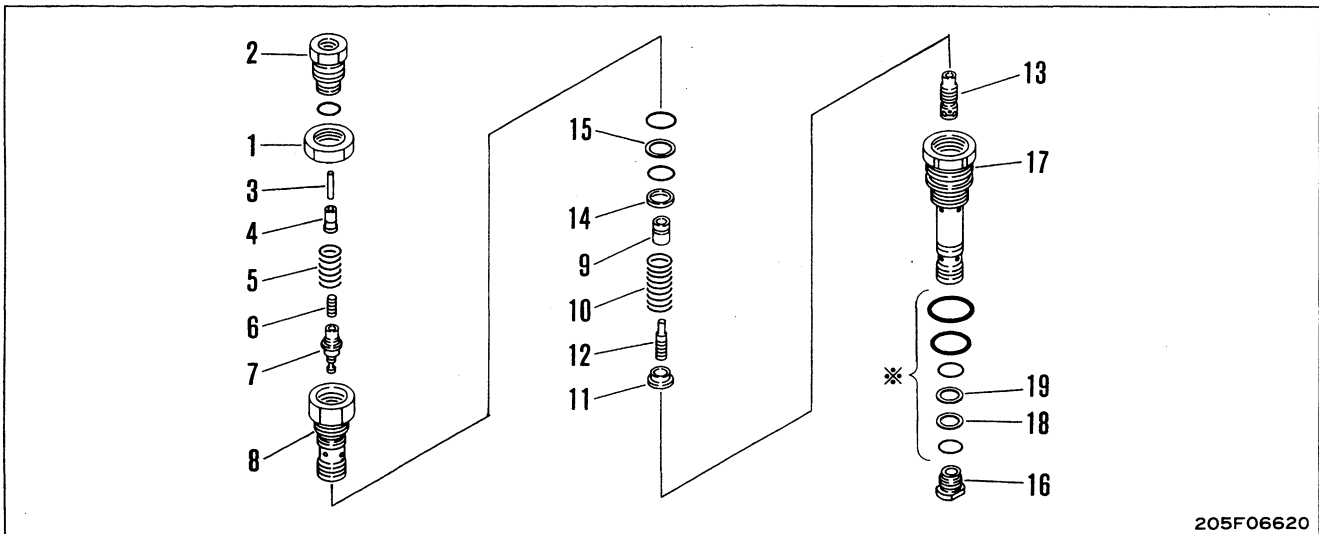

1. Loosen nut (1), and remove sleeve (2), piston (3), retainer (4), spring (5), piston (6), and poppet (7), then remove nut (1) from sleeve (2).
 2. Remove sleeve (8), then remove sleeve (9), spring (10), retainer (11), piston valve (12), and valve (13).
 3. Remove seal (4), backup ring (15), and O-ring from sleeve (8).
 4. Remove plug (16), then remove rings (18) and (19), and O-ring from sleeve (17).
- ★ After disassembling, if there is any abnormality in any part marked ※, replace the whole main relief valve assembly.

K20506

ASSEMBLY OF MAIN RELIEF VALVE ASSEMBLY

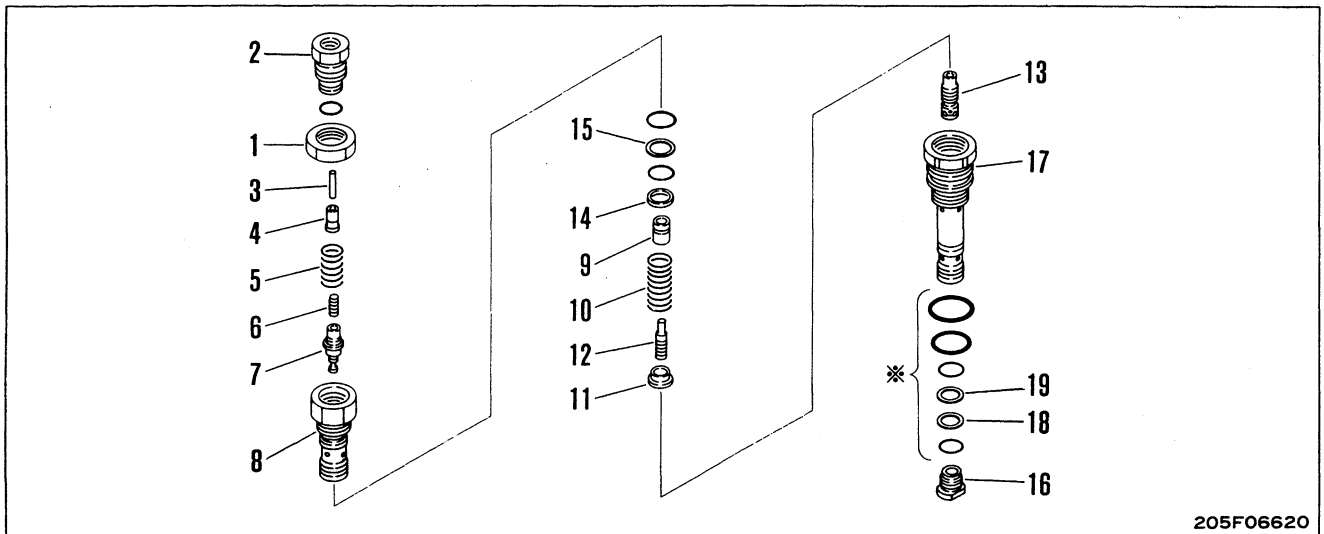

205F06620

- Before assembling, coat the sliding surface with engine oil.

1. Fit plug (16) to sleeve (17) and install rings (19) and (18), and O-ring.

kgm Plug: $22.1 \pm 2.5 \text{ Nm}$ ($2.25 \pm 0.25 \text{ kgm}$)

2. Assemble valve (13) to sleeve (17), and install piston (12), retainer (11), spring (10), and sleeve (9).

3. Install sleeve (8), and assemble poppet (7), piston (6), and spring (5).

kgm Sleeve: $85.9 \pm 7.4 \text{ Nm}$ ($8.8 \pm 0.8 \text{ kgm}$)

4. Assemble nut (1), O-ring, retainer (4), and piston (3) to sleeve (2), and install to sleeve (8).

5. Tighten nut (1) to specified torque.

kgm Nut: $68.7 \pm 9.9 \text{ Nm}$ ($7 \pm 1 \text{ kgm}$)

- ★ After installing to the control valve assembly, adjust the pressure. For details, see TESTING AND ADJUSTING, Testing and adjusting oil pressure of work equipment, swing, travel circuits.

K20506



REMOVAL OF TVC • LS VALVE ASSEMBLY FOR FRONT PUMP

- ⚠ Disconnect the cable from the negative (–) terminal of the battery.
- ⚠ Lower the work equipment completely to the ground and stop the engine. Then loosen the oil filler cap slowly to release the pressure inside the hydraulic tank.
- Remove the hydraulic tank strainer, and using tool **B**, stop the oil.
 - When not using tool **B**, remove the drain plug, and drain the oil from the hydraulic tank and inside the system.

 Hydraulic tank: Approx. 170 ℓ

1. Disconnect TVC • LS valve inlet hose (1).
2. Disconnect TVC solenoid wiring connectors (2).
3. Remove TVC • LS valve assembly (3).

※ 1

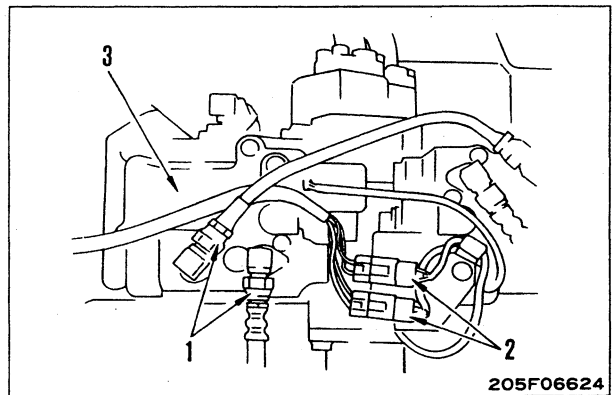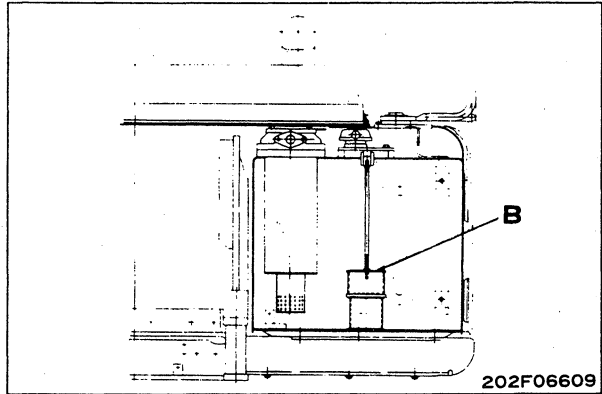

INSTALLATION OF TVC • LS VALVE ASSEMBLY FOR FRONT PUMP

- Carry out installation in the reverse order to removal.

※ 1

- ★ Be careful not to let the O-ring or filter fall out when installing.
- ★ Tighten the mounting bolts gradually on opposite sides in turn.

 TVC • LS valve mounting bolt:
 $66.2 \pm 7.4 \text{ Nm}$ ($6.75 \pm 0.75 \text{ kgm}$)

- Refilling with oil (hydraulic tank)
 - ★ Add oil through the oil filler to the specified level. Run the engine to circulate the oil through the system. Then check the oil level again.

REMOVAL OF TVC • LS VALVE ASSEMBLY FOR REAR PUMP

⚠ Disconnect the cable from the negative (–) terminal of the battery.

⚠ Lower the work equipment completely to the ground and stop the engine. Then loosen the oil filler cap slowly to release the pressure inside the hydraulic tank.



- Remove the hydraulic tank strainer, and using tool B, stop the oil.
 - When not using tool B, remove the drain plug, and drain the oil from the hydraulic tank and inside the system.



Hydraulic tank: Approx. 170 l

1. Disconnect TVC • LS valve inlet hose (1).
2. Disconnect hose (2).
3. Disconnect TVC solenoid wiring connectors (3).
4. Remove bracket (4).
5. Remove TVC • LS valve assembly (5).

※ 1

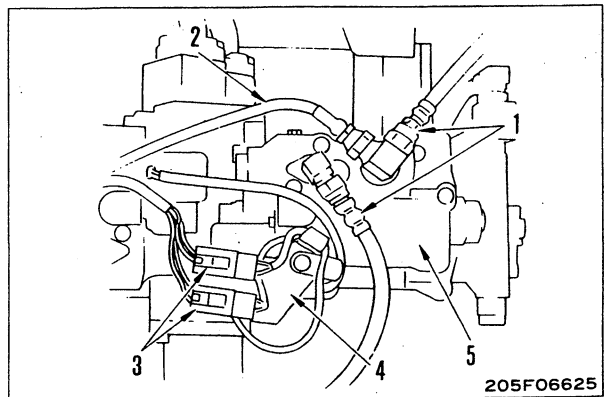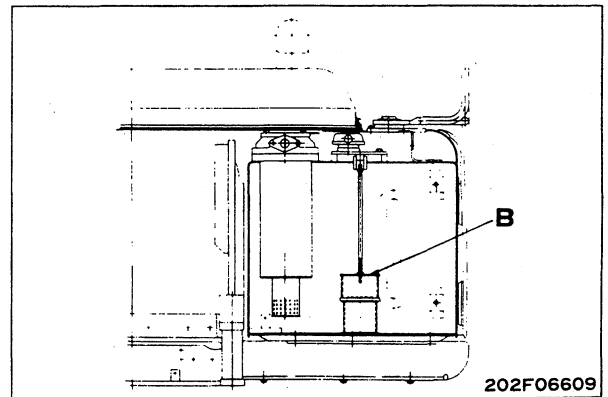

INSTALLATION OF TVC • LS VALVE ASSEMBLY FOR REAR PUMP

- Carry out installation in the reverse order to removal.

※ 1

- ★ Be careful not to let the O-ring or filter fall out when installing.
- ★ Tighten the mounting bolts gradually on opposite sides in turn.




TVC • LS valve mounting bolt:
 $66.2 \pm 7.4 \text{ Nm}$ ($6.75 \pm 0.75 \text{ kgm}$)

- Refilling with oil (hydraulic tank)
 - ★ Add oil through the oil filler to the specified level. Run the engine to circulate the oil through the system. Then check the oil level again.

REMOVAL OF LS CONTROL EPC VALVE ASSEMBLY

1. Remove cover.
2. Disconnect wiring connector (1).
3. Disconnect hose (2).
4. Remove LS control EPC valve assembly (3).

※ 1

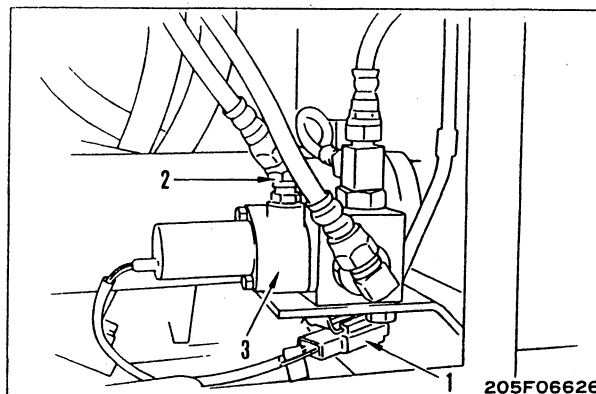

INSTALLATION OF LS CONTROL EPC VALVE ASSEMBLY

- Carry out installation in the reverse order to removal.

※ 1



 LS control EPC valve mounting bolt:
 $11.3 \pm 1.5 \text{ Nm}$ ($1.15 \pm 0.15 \text{ kgm}$)

K20506

REMOVAL OF SOLENOID VALVE ASSEMBLY

⚠ Disconnect the cable from the negative (–) terminal of the battery.

1. Remove 5 solenoid wiring connectors (1) from clip and disconnect.
 - ★ Mark the male and female ends of each connector with tags to prevent mistakes when connecting.
2. Disconnect hoses (2) and (3) installed to bottom of valve.
 - ★ Fit tags on the hoses.
3. Disconnect hoses (4) installed to top of valve.
 - ★ Fit tags on the hoses.
4. Remove mounting bolts, then remove solenoid valve assembly (5).
- When removing solenoid valve as an individual part
 - i) If mounting nut (6) is removed, only coil assembly needs to be removed. **※ 1**
 - ii) When washing valve, loosen mounting nut (7) and remove. **※ 2**

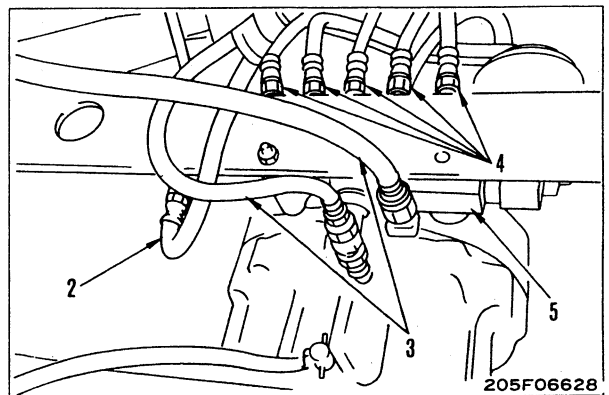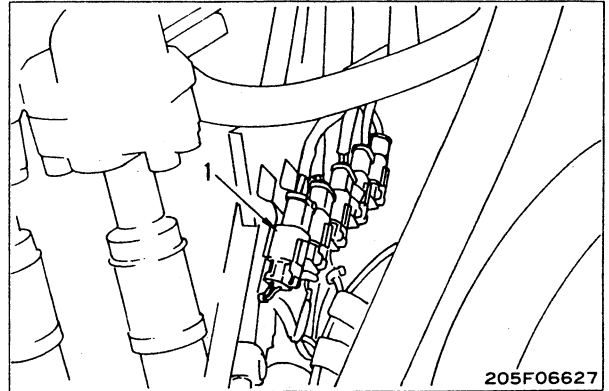

INSTALLATION OF SOLENOID VALVE ASSEMBLY


- Carry out installation in the reverse order to removal.

※ 1

kgm Nut (6): $7.4 \pm 0.98 \text{ Nm}$ ($0.8 \pm 0.1 \text{ kgm}$)

※ 2

kgm Nut (7): $50.5 \pm 3.4 \text{ Nm}$ ($5.2 \pm 0.35 \text{ kgm}$)



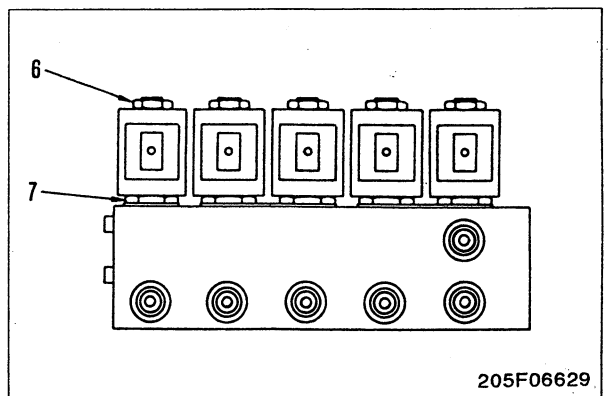


K20506

REMOVAL OF WORK EQUIPMENT • SWING PPC VALVE ASSEMBLY

⚠ Lower the work equipment completely to the ground and stop the engine. Then loosen the oil filler cap slowly to release the pressure inside the hydraulic tank.

1. Remove armrest and rubber boot, remove cover, and disconnect wiring connector (1).
2. Remove boot (2) from cover, raise boot, then remove lever (3).
 - ★ Mark the mounting position of the lever before removing.
3. Remove 4 mounting bolts (5) of cover (4), then remove.
 - ★ Remove the lock with a screwdriver and gradually lift the cover up to remove.
4. Remove joint bolt (6), and disconnect hose (7). ※ 1
5. Remove mounting bolts, raise PPC valve assembly (8), then disconnect hoses (9) and (10), and remove. ※ 2
 - ★ Mark the connecting position of the hoses before disconnecting.

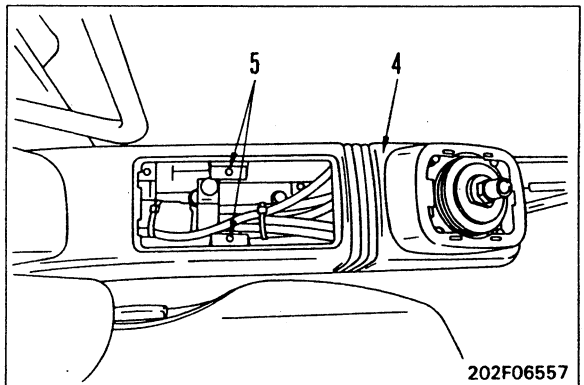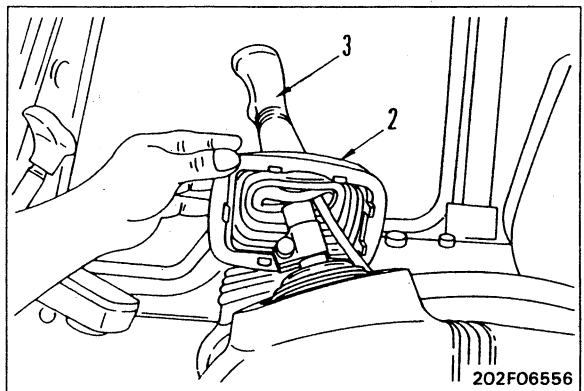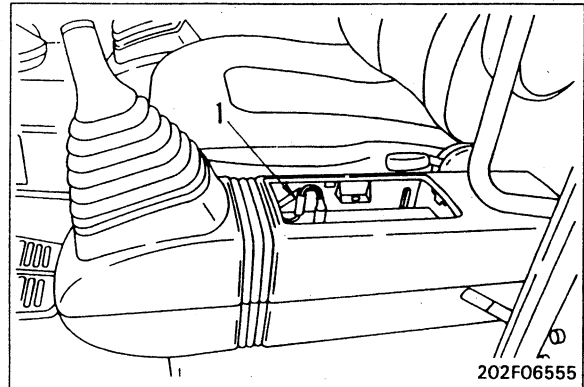

INSTALLATION OF WORK EQUIPMENT • SWING PPC VALVE ASSEMBLY

- Carry out installation in the reverse order to removal.


※ 1

Hose mounting joint bolt:
 $29.4 \pm 4.9 \text{ Nm}$ ($3.0 \pm 0.5 \text{ kgm}$)

※ 2


Hose mounting joint bolt:
 $39.2 \pm 4.9 \text{ Nm}$ ($4.0 \pm 0.5 \text{ kgm}$)

- ★ If there is excessive play in the control levers, adjust the PPC valve. For details, see TESTING AND ADJUSTING, Adjusting PPC valve.

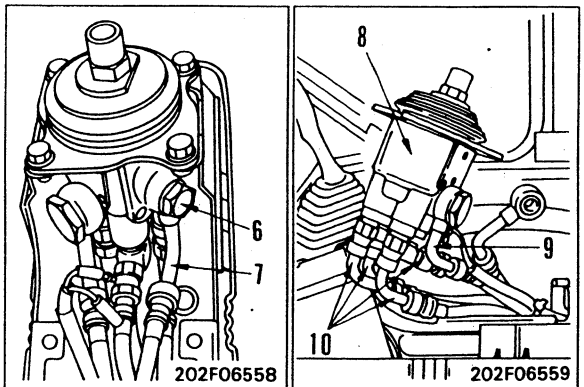

DISASSEMBLY OF WORK EQUIPMENT • SWING PPC VALVE ASSEMBLY

1. Remove nut (1), then remove disc (2) and boot (3).
2. Remove bolts, then remove plate (5).
 - ★ Do not remove joint (4) unless it is to be replaced.
3. Remove seal (6) and collar (7).
4. Pull out piston (8), and remove retainer (9), springs (10) and (11), and shim (12).
 - ★ Spring (10) consists of a set of two types of springs with different installed loads, so check the mounting position (oil port) and mark with tags to prevent mistakes when installing.
5. Pull out valve (13) from body (14).

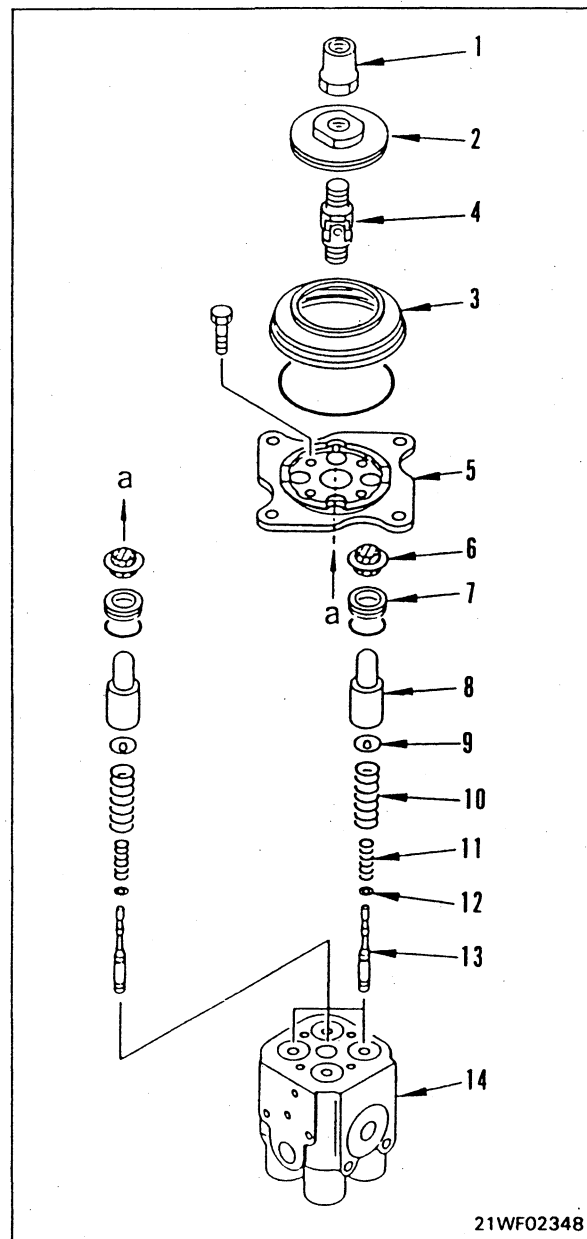

K20506

ASSEMBLY OF WORK EQUIPMENT • SWING PPC VALVE ASSEMBLY

1. Assemble valve (13) to body (14).
2. Assemble shim (12) and spring (11) to valve (13).
 - ★ When assembling spring (11), set the end with the small coil diameter (inside diameter) at shim (12) end.
3. Assemble spring (10), retainer (9), and piston (8).
 - ★ The number of loops in the coil for spring (10) is different for each of the hydraulic ports below, so be careful when installing.

Position of port	Free length of spring
P1, P2	44.4 mm
P3, P4	42.4 mm

- ★ The position of each port is marked on the bottom of the valve body.

 Piston: Grease (G2-LI)

- ★ When assembling piston (8), coat the outside of the piston and the inside of the hole in the body with grease.

4. Fit O-ring to collar (7) and assemble in body (14), then install seal (6).
5. Install plate (5).

 Mounting bolt:

$13.2 \pm 1.5 \text{ Nm}$ ($1.35 \pm 0.15 \text{ kgm}$)


6. Install joint (4).

 Sliding portion of joint: Grease (G2-LI)

 Female thread of body:

Thread tightener (LT-2)

- ★ Coat two places on the female thread with one drop each of Loctite as shown in the diagram below.

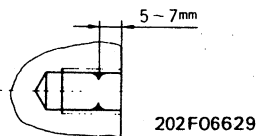

 Joint: $44.1 \pm 4.9 \text{ Nm}$ ($4.5 \pm 0.5 \text{ kgm}$)

- ★ Keep strictly to the tightening torque.

7. Assemble boot (3) and disc (2), and tighten with nut (1).

 Nut: $112.7 \pm 14.7 \text{ Nm}$ ($11.5 \pm 1.5 \text{ kgm}$)

- ★ After assembling the disc, adjust the height of the disc. For details, see TESTING AND ADJUSTING, Adjusting PPC valve.



REMOVAL OF TRAVEL PPC VALVE ASSEMBLY

- ⚠** Lower the work equipment completely to the ground and stop the engine. Loosen the oil filler cap slowly to release the pressure inside the hydraulic tank. Then set the safety lock lever to the LOCK position.

1. Remove floor mat.
2. Remove travel PPC valve bottom cover.
3. Remove pedals (1) and levers (2).
4. Remove cover (3).
5. Remove covers (4), then remove springs (5).
6. Disconnect 6 PPC hoses (7), and remove travel PPC valve assembly (8).

※ 1
※ 2

※ 4

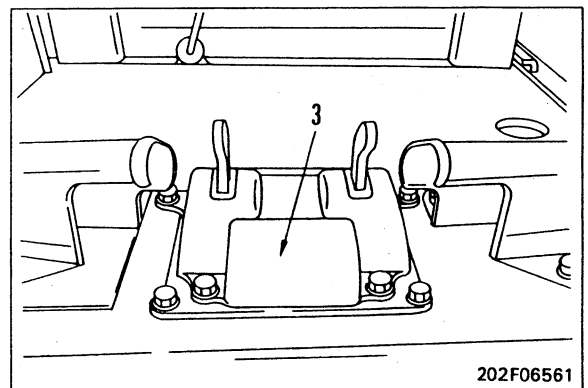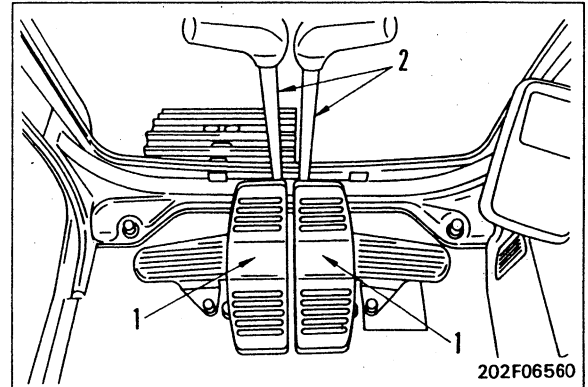

INSTALLATION OF TRAVEL PPC VALVE ASSEMBLY

- Carry out installation in the reverse order to removal.

※ 1

- ★ Adjust the travel lever. For details, see TESTING AND ADJUSTING, Adjusting travel lever.

※ 2



-  Cover mounting bolt:
 $19.6 \pm 2 \text{ Nm}$ ($2.0 \pm 0.2 \text{ kgm}$)

※ 3

-  Sliding portion of pin: Grease (G2-LI)

※ 4

-  Hose mounting joint bolt (width across flats: 30 mm): $39.2 \pm 4.9 \text{ Nm}$ ($4.0 \pm 0.5 \text{ kgm}$)
-  Hose mounting joint bolt (width across flats: 22 mm): $29.4 \pm 4.9 \text{ Nm}$ ($3.0 \pm 0.5 \text{ kgm}$)

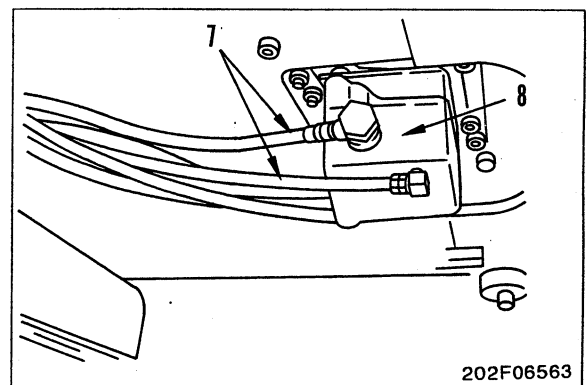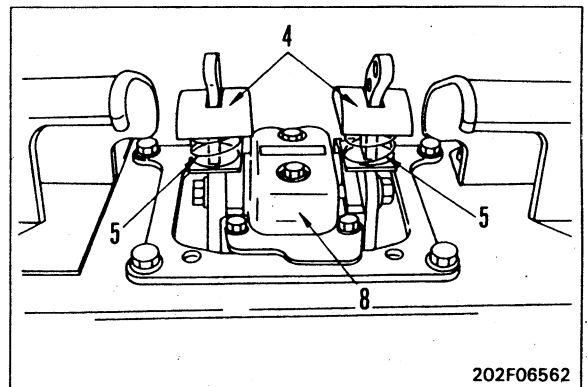


DISASSEMBLY OF TRAVEL PPC VALVE ASSEMBLY

1. Remove cover and cam assembly (1), then remove shims (2).
 - ★ Check the number and thickness of shims (2) for each mounting position, and keep in a safe place.
2. Remove plate (3).
3. Remove seal (4) and collar (5).
4. Pull out piston (6), and remove retainer (7), springs (8) and (9), and shims (10).
 - ★ Check the number and thickness of shims (10) for each mounting position, and keep in a safe place.
5. Pull out valve (11) from body (12).

ASSEMBLY OF TRAVEL PPC VALVE ASSEMBLY

1. Assemble valve (11) in body (12).
2. Assemble shims (10) and spring (9) to valve (11).
 - ★ Assemble the same number and thickness of shims (10) as was removed during disassembly.
Standard shim thickness: 0.3 mm
 - ★ Spring (9) is not symmetrical at the top and bottom, so assemble with the small coil diameter (inside diameter) at the shim end.
3. Assemble spring (8), retainer (7), and piston (6).
 -  Outside circumference of piston, body hole:
Grease (G2-LI)
4. Fit O-ring to collar (5) and assemble in body (11), then install seal (4).
5. Assemble plate (3).
6. Fit cover and cam assembly (1) and assemble shims (2), then tighten with bolt.
 -  Sliding portion of shaft, connecting portion of lever and piston: Grease (G2-LI)

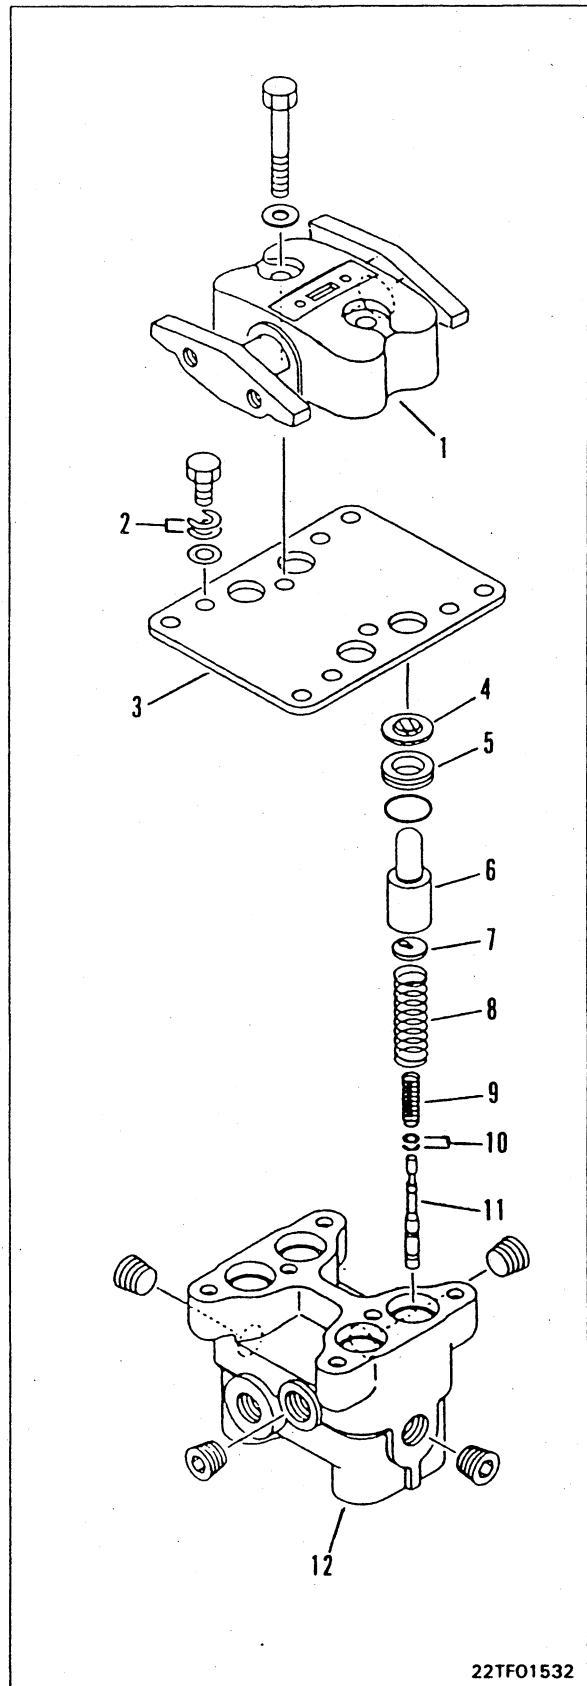

K20506


22TF01532

- ★ Assemble the same number and thickness of shims (2) as was removed during disassembly.

Standard shim thickness : 1.6 mm

 **kgm** Mounting bolt (a): 27.9 ± 3.4 Nm (2.85 ± 0.35 kgm)

 **kgm** Mounting bolt (b): 30.9 ± 3.4 Nm (3.15 ± 0.35 kgm)

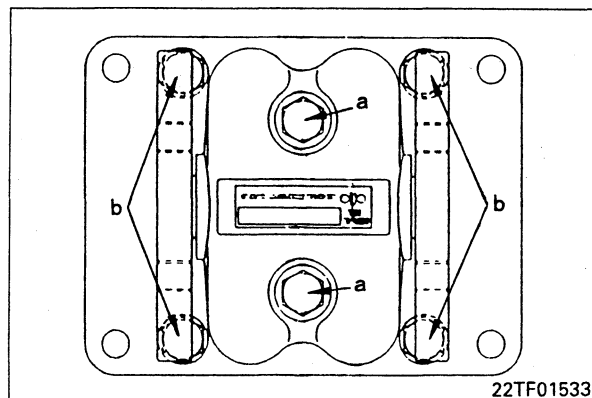

K20506

REMOVAL OF BOOM CYLINDER ASSEMBLY

- !** Extend the arm and bucket fully, lower the work equipment completely to the ground, and put the safety lock lever in the LOCK position.

1. Disconnect grease hose (1).
2. Sling boom cylinder assembly (2), and remove lock bolt (3).



※ 1

3. Remove plate, then remove head pin (4).
- ★ There are shims installed, so check the number and thickness, and keep in a safe place.

※ 2

4. Start engine, and retract piston rod, then tie piston rod with wire to prevent it from coming out.
- ★ Set stand ① under the cylinder assembly, and adjust the position for slinging.

- !** Release the remaining pressure in the hydraulic circuit. For details, see TESTING AND ADJUSTING, Releasing remaining pressure in hydraulic circuit.

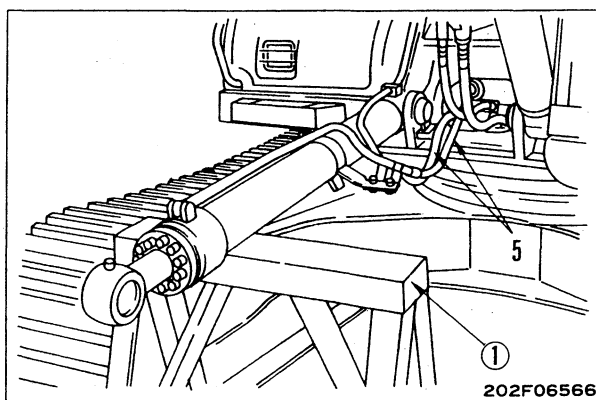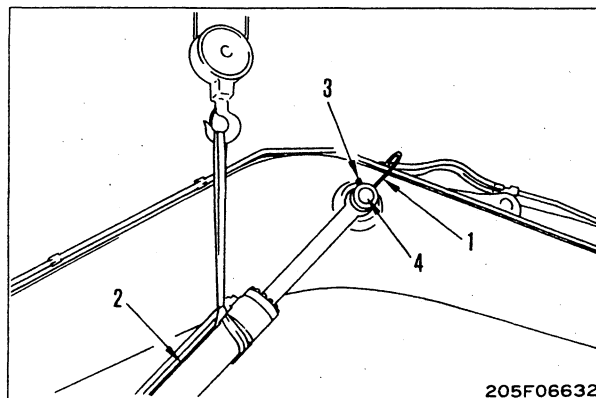

5. Disconnect hoses (5).
6. Remove plate, then using forcing screws (②), remove bottom pin (6), and remove boom cylinder assembly (2).

※ 3


- ★ There are shims installed, so check the number and thickness, and keep in a safe place.



Boom cylinder assembly

: PC210-6 : 200 kg

: PC240-6 : 250 kg

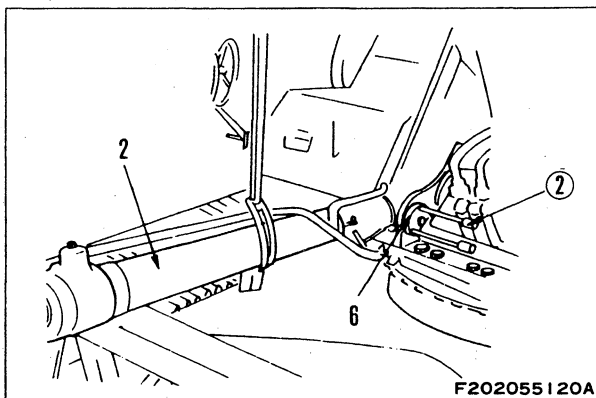

K20506

INSTALLATION OF BOOM CYLINDER ASSEMBLY

- Carry out installation in the reverse order to removal.

※ 1

- ★ When tightening the locknut, tighten so that the clearance between the plate and nut is 0.5 – 1.5 mm.

※ 2

- Inside surface of bushing when assembling pin: Anti-friction compound (LM-P)
- Greasing after assembling pin:

Grease (LM-G)



When aligning the position of the pin hole, never insert your fingers in the pin hole.

- ★ Adjust the shim thickness so that the clearance between cylinder rod (7) and plate (8) is below 1 mm.
- ★ Standard shim thickness: 0.8 mm, 1.5 mm

※ 3

- Inside surface of bushing when assembling pin: Anti-friction compound (LM-P)
- Greasing after assembling pin:




Grease (LM-G)



When aligning the position of the pin hole, never insert your fingers in the pin hole.

- ★ Adjust the shim thickness so that the clearance between cylinder bottom (9) and bracket (10) is below 1 mm.
- ★ Standard shim thickness: 0.8 mm, 1.5 mm

- Refilling with oil (hydraulic tank)
 - ★ Add oil through the oil filler to the specified level. Run the engine to circulate the oil through the system. Then check the oil level again.
- Bleeding air
 - ★ Bleed the air from the cylinder. For details, see TESTING AND ADJUSTING, Bleeding air from hydraulic cylinder.

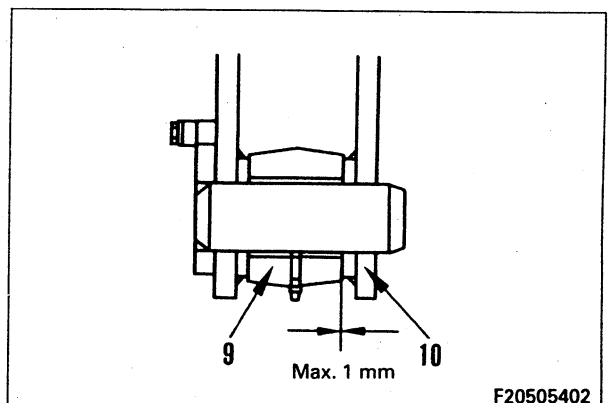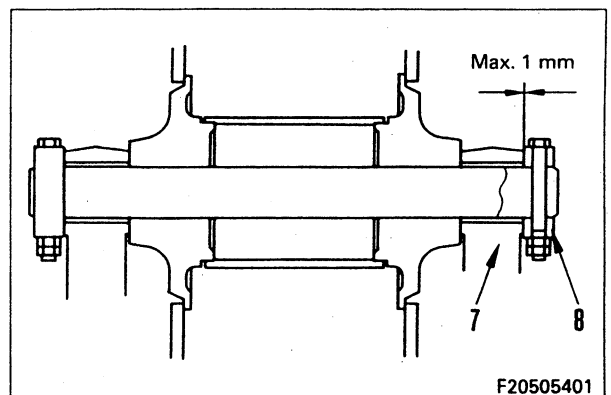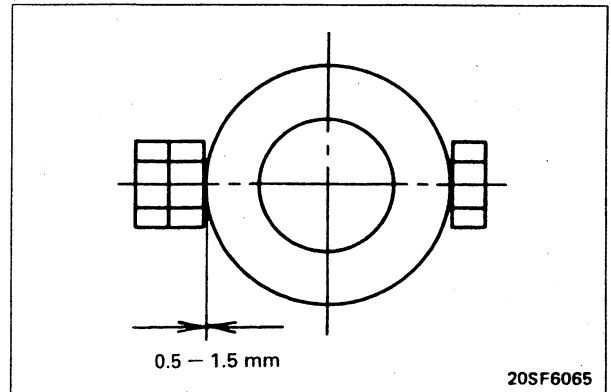

REMOVAL OF ARM CYLINDER ASSEMBLY

- !** Extend the arm cylinder piston rod approx. 200 mm, lower the work equipment completely to the ground, then set the remaining safety lock lever to the LOCK position.

1. Set block ① between arm cylinder and boom.
2. Remove plate, then remove head pin (1). ※ 1
3. Start engine, and retract piston rod, then tie piston rod with wire to prevent it from coming out.

- !** Release the remaining pressure in the hydraulic circuit. For details, see TESTING AND ADJUSTING, Releasing remaining pressure in hydraulic circuit.


4. Disconnect hoses (2).
5. Disconnect grease hose (3).
6. Raise arm cylinder assembly, remove plate, remove bottom pin (4), then remove arm cylinder assembly (5). ※ 2

- ★ There are shims installed, so check the number and thickness, and keep in a safe place.



Arm cylinder assembly

: PC210-6 : 270 kg
: PC240-6 : 310 kg

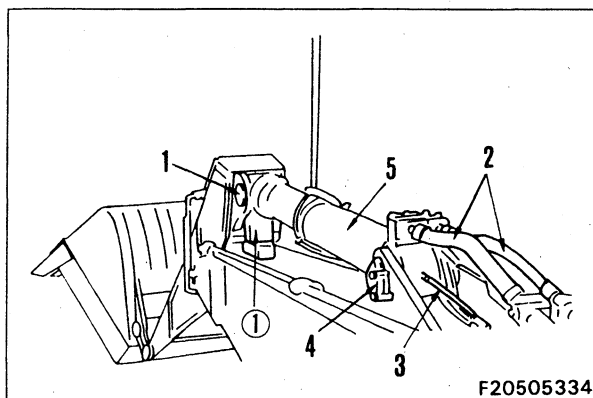

INSTALLATION OF ARM CYLINDER ASSEMBLY


- Carry out installation in the reverse order to removal.

※ 1

- Inside surface of bushing when assembling pin: Anti-friction compound (LM-P)
- Greasing after assembling pin: Grease (LM-G)
- ⚠ When aligning the position of the pin hole, never insert your fingers in the pin hole.

※ 2

- Inside surface of bushing when assembling pin: Anti-friction compound (LM-P)
- Greasing after assembling pin: Grease (LM-G)
- ⚠ When aligning the position of the pin hole, never insert your fingers in the pin hole.
- ★ Adjust the shim thickness so that the clearance between cylinder bottom (6) and bracket (7) is below 1 mm.
- ★ Standard shim thickness: 0.8 mm, 1.5 mm

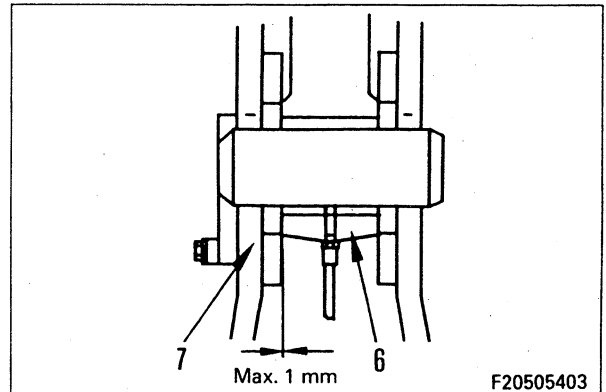

- Refilling with oil (hydraulic tank)
 - ★ Add oil through the oil filler to the specified level. Run the engine to circulate the oil through the system. Then check the oil level again.
- Bleeding air
 - ★ Bleed the air from the cylinder. For details, see TESTING AND ADJUSTING, Bleeding air from hydraulic cylinder.

REMOVAL OF BUCKET CYLINDER ASSEMBLY

- ⚠** Extend the bucket cylinder piston rod approx. 200 mm, lower the work equipment completely to the ground, then set the safety lock lever to the LOCK position.



1. Set block ① under arm top.
2. Set block ② between link and arm, and block ③ between bucket cylinder and arm.
3. Remove lock bolt (1). ※ 1
4. Remove plate, then remove head pin (2). ※ 2
 - ★ There are shims installed, so check the number and thickness, and keep in a safe place.
5. Start engine, and retract piston rod, then tie piston rod with wire to prevent it from coming out.

- ⚠** Release the remaining pressure in the hydraulic circuit. For details, see TESTING AND ADJUSTING, Releasing remaining pressure in hydraulic circuit.

6. Disconnect 2 hoses (3).
7. Raise bucket cylinder assembly, remove plate, remove bottom pin (4), then remove bucket cylinder assembly (5). ※ 3
 - ★ There are shims installed, so check the number and thickness, and keep in a safe place.



Bucket cylinder assembly: PC210-6 : 190 kg
: PC240-6 : 220 kg

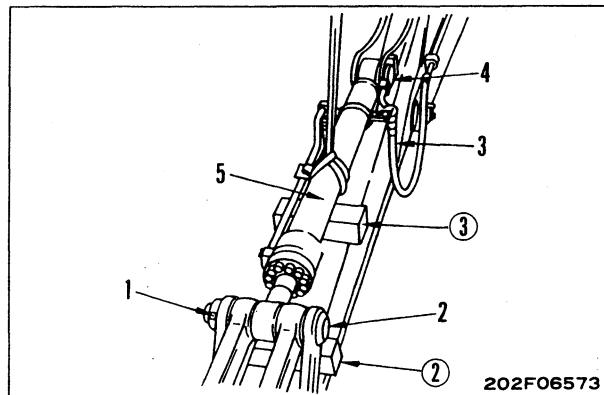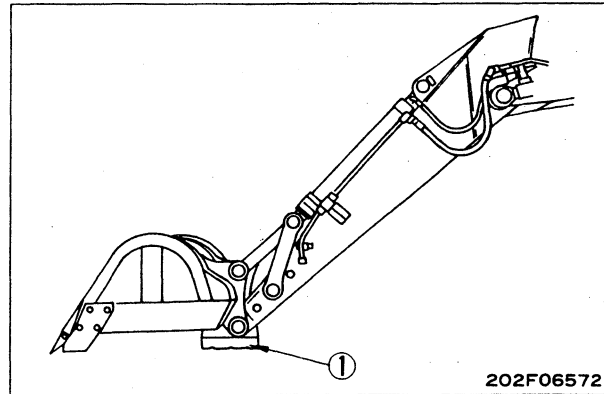

INSTALLATION OF BUCKET CYLINDER ASSEMBLY

- Carry out installation in the reverse order to removal.

※ 1

- ★ When tightening the locknut, tighten so that the clearance between the plate and nut is 0.5 – 1.5 mm.

※ 2

- Inside surface of bushing when assembling pin : Anti-friction compound (LM-P)

- Grease after assembling pin: Grease (LM-G)

- ⚠ When aligning the position of the pin hole, never insert your fingers in the pin hole.

- ★ Adjust the shim thickness so that the clearance between link (6) and link (7) is below 1 mm.

- ★ Standard shim thickness: 0.8 mm, 1.5 mm

※ 3

- Inside surface of bushing when assembling pin: Anti-friction compound (LM-P)




- Grease after assembling pin: Grease (LM-G)

- ⚠ When aligning the position of the pin hole, never insert your fingers in the pin hole.

- ★ Adjust the shim thickness so that the clearance between cylinder bottom (8) and bracket (9) is below 1 mm.

- ★ Standard shim thickness: 0.8 mm, 1.5 mm

- Refilling with oil (hydraulic tank)
 - ★ Add oil through the oil filler to the specified level. Run the engine to circulate the oil through the system. Then check the oil level again.
- Bleeding air
 - ★ Bleed the air from the cylinder. For details, see TESTING AND ADJUSTING, Bleeding air from hydraulic cylinder.

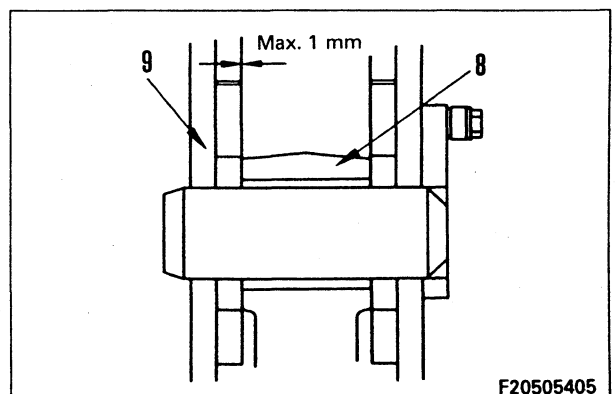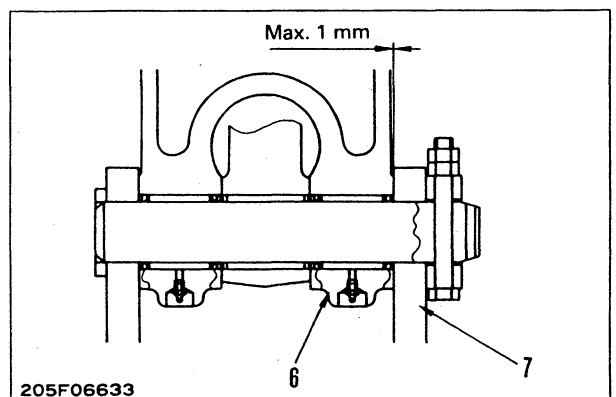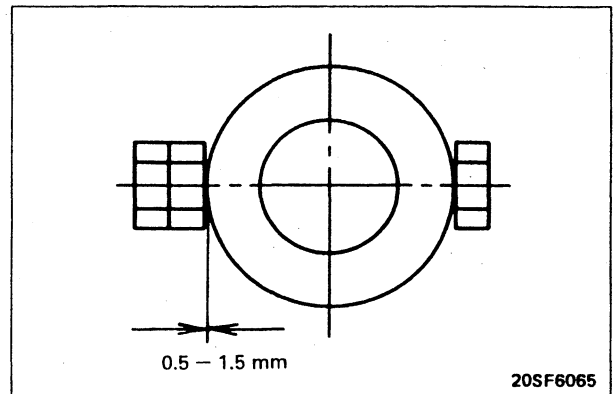

DISASSEMBLY OF HYDRAULIC CYLINDER ASSEMBLY

1. Piston rod assembly

- 1) Remove piping from cylinder assembly.
- 2) Remove mounting bolts, and disconnect head assembly (1).
- 3) Pull out piston rod assembly (2).
 - ★ Place a container to catch the oil under the cylinder.





4) Disassemble piston rod assembly as follows.

- i) Set piston rod assembly (2) in tool **O₁**.
- ii) Using tool **O₂**, remove nut (3).
 - ★ Width across flats of nut

Unit: mm

Model	Cylinder	Boom	Arm	Bucket
PC210		85	95	85
PC240		95	95	95


- iii) Remove piston assembly (4).
- iv) Remove plunger (5).
 - Boom and arm cylinder only
- v) Remove collar (6).
 - Boom and arm cylinder only
- vi) Remove head assembly (7).
- vii) Remove cap (8), and pull out 12 balls (9), then remove plunger (10).
 - Arm cylinder only

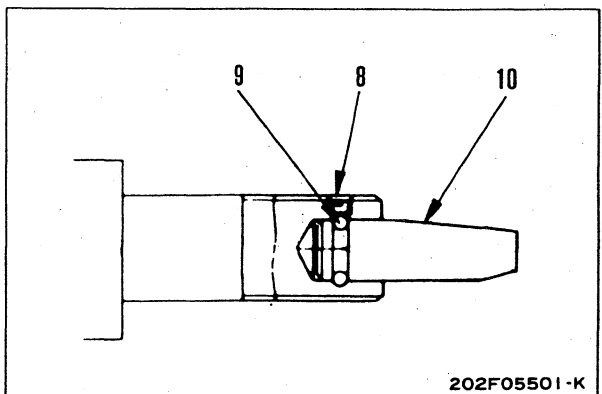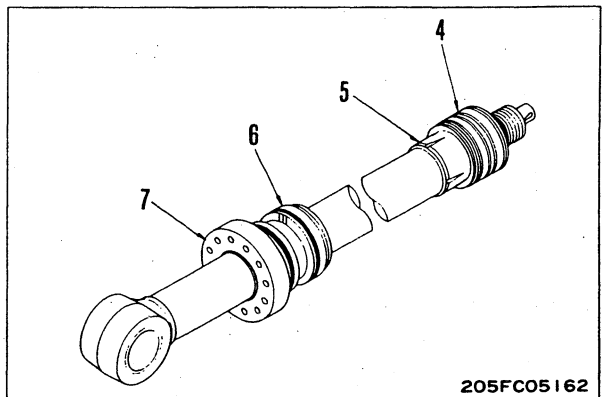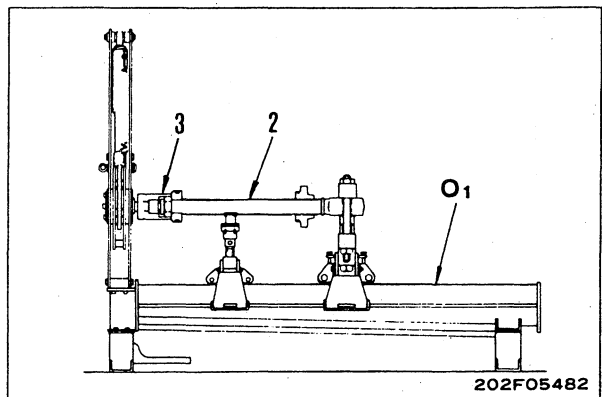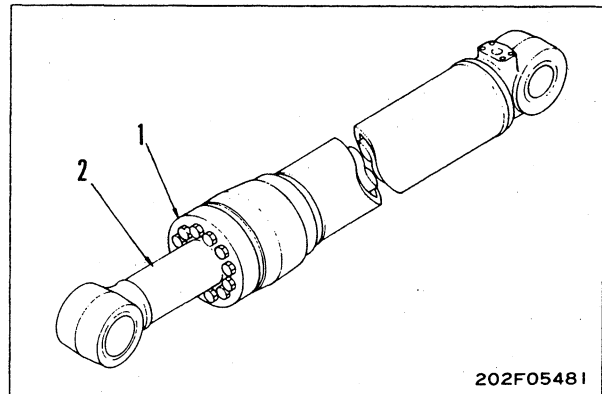

K20506


2. Disassembly of piston assembly

- 1) Remove rings (11).
- 2) Remove wear rings (12).
- 3) Remove piston ring (13).

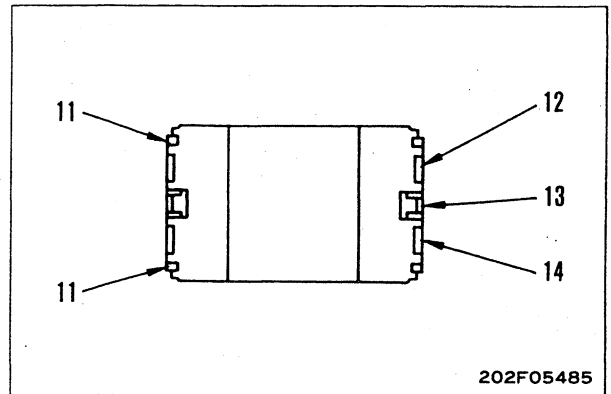

3. Disassembly of cylinder head assembly

- 1) Remove O-ring and backup ring (14).
- 2) Remove snap ring (15), then remove dust seal (16).
- 3) Remove rod packing (17).
- 4) Remove buffer ring (18).
- 5) Remove bushing (19).

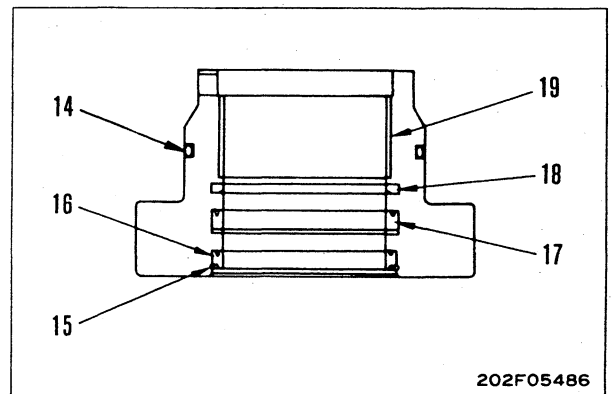



K20506

ASSEMBLY OF HYDRAULIC CYLINDER ASSEMBLY

- ★ Be careful not to damage the packings, dust seals, and O-rings.
- ★ Do not try to force the backup ring into position. Warm it in warm water (50 — 60°C) before fitting it.


1. Assembly of cylinder head assembly

- 1) Using tool O₅, press fit bushing (19).
- 2) Assemble buffer ring (18).
- 3) Assemble rod packing (17).
- 4) Using tool O₆, install dust seal (16), and secure with snap ring (15).
- 5) Install backup ring and O-ring (14).

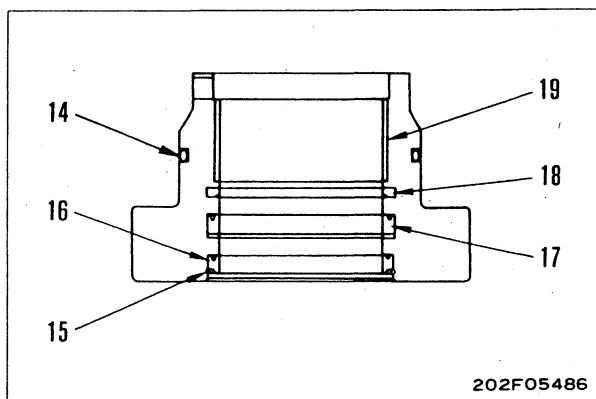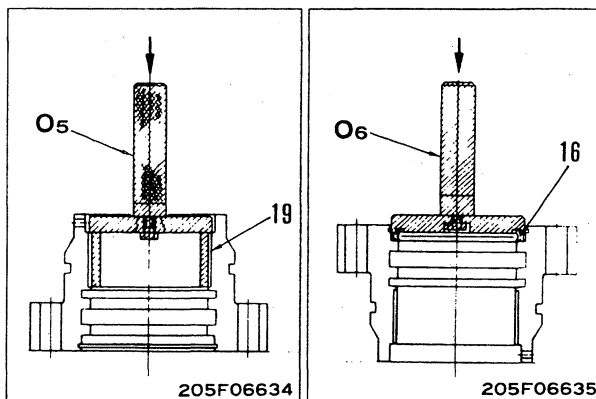


2. Assembly of piston assembly

- 1) Using tool O₃, expand piston ring (13).
 - ★ Set the piston ring on the tool O₃, and turn the handle 8 — 10 times to compress the ring.
- 2) Set tool O₄ in position, and retract piston ring (13).

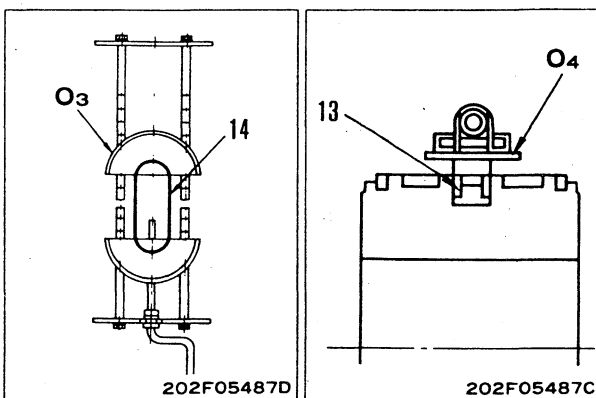

- 3) Assemble wear ring (12).
- 4) Assemble ring (11).
 - ★ Be careful not to open the end gap of the ring too wide.


 Ring groove: Grease (G2-LI)

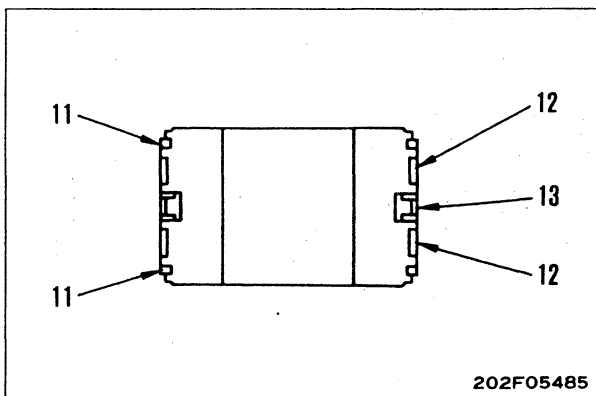


K20506

3. Piston rod assembly

- 1) Set plunger (10) to piston rod, and assemble 12 balls (9), then secure with cap (8).
 - ★ Check that there is a slight play at the tip of the plunger.
 - Arm cylinder only

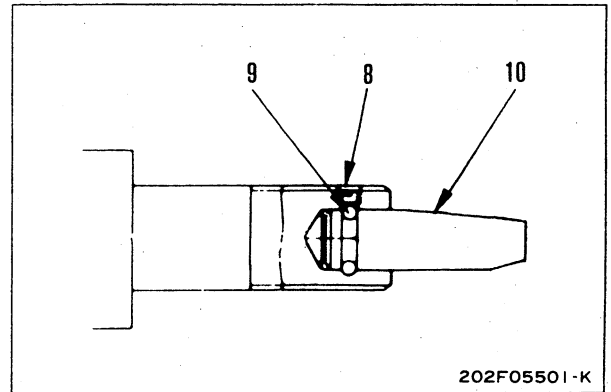

- 2) Assemble head assembly (7).
- 3) Fit O-ring and backup ring, and assemble collar (6).
 - Boom and arm cylinder only
- 4) Assemble plunger (5).
 - Boom and arm cylinder only
- 5) Assemble piston assembly (4).

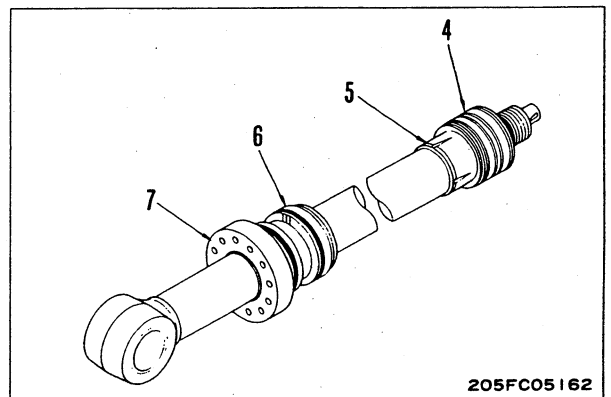


- 6) Set piston rod assembly (2) to tool O₁.
- 7) Using tool O₂, tighten nut (3).

Nut: Thread tightener (LT-2)

Nut:

Unit: kNm (kgm)


Cylinder Model	Boom	Arm	Bucket
PC210	5.2 ± 0.5 (530 ± 53)	10.2 ± 1.0 (1,040 ± 104)	7.1 ± 0.7 (720 ± 72)
PC240	8.6 ± 0.9 (880 ± 88)	10.2 ± 1.0 (1,040 ± 104)	10.2 ± 1.0 (1,040 ± 104)

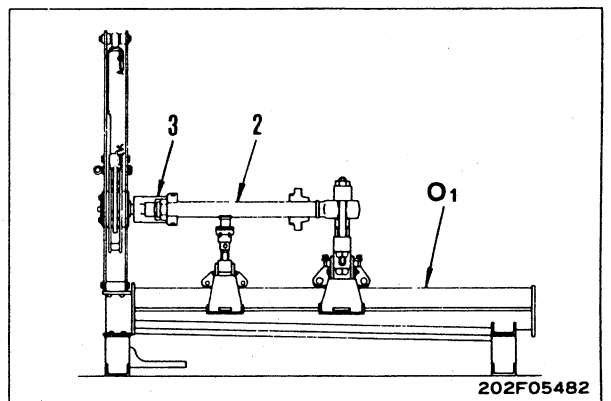

- 8) Assemble piston rod assembly (2).

Seal: Grease (G2-LI)

- ★ Set the end gap of the ring at the horizontal (side) position, align the center of shaft and cylinder tube, then insert.
- ★ After inserting, check that the ring is not broken and has not come out, then push in fully.

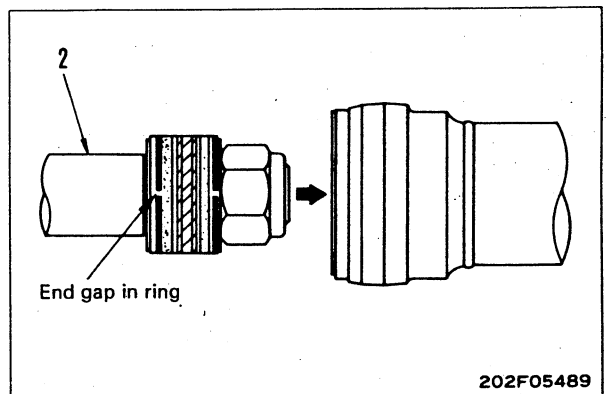


- 9) Tighten head assembly (1) with mounting bolts.

 Mounting bolt:

Cylinder	Tightening torque
Boom	$270 \pm 39 \text{ Nm}$ ($27.5 \pm 4.0 \text{ kgm}$)
Arm	$373 \pm 54 \text{ Nm}$ ($38.0 \pm 5.5 \text{ kgm}$)
Bucket	$270 \pm 39 \text{ Nm}$ ($27.5 \pm 4.0 \text{ kgm}$)

- 10) Install piping.

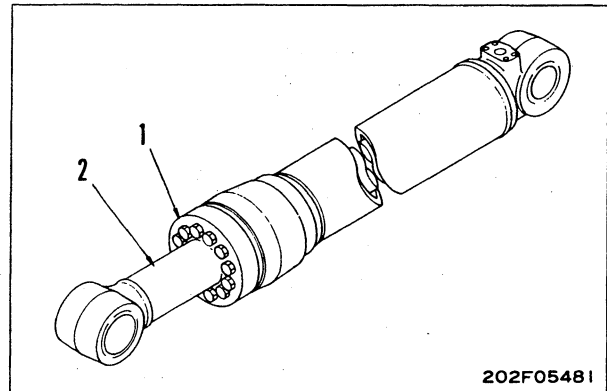

202F05481

REMOVAL OF WORK EQUIPMENT ASSEMBLY

! Extend the arm and bucket fully, lower the work equipment to the ground, and set the safety lock lever to the LOCK position.

1. Disconnect grease hose (1).
2. Sling boom cylinder assembly (2), and remove lock bolt (3). ※ 1
3. Remove plate, then remove head pin (4). ※ 2
 - ★ There are shims installed, so check the number and thickness, and keep in a safe place.
4. Start engine, and retract piston rod, then tie piston rod with wire to prevent it from coming out, and lower it onto block.
 - ★ Disconnect the boom cylinder on the opposite side in the same way.





! Release the remaining pressure in the hydraulic circuit. For details, see TESTING AND ADJUSTING, Releasing remaining pressure in hydraulic circuit.

5. Disconnect hoses (5) and (6), and secure it to valve with rope.
 - ★ Hoses (6) are for machines equipped with an additional attachment circuit.
6. Disconnect wiring connector (7) for working lamp.
7. Sling work equipment assembly, remove plate, then remove foot pin (8) using tool P, and remove work equipment assembly (9). ※ 3
 - ★ There are shims installed, so check the number and thickness, and keep in a safe place.



Work equipment assembly:

PC210-6 : 3,300 kg
PC240-6 : 3,850 kg

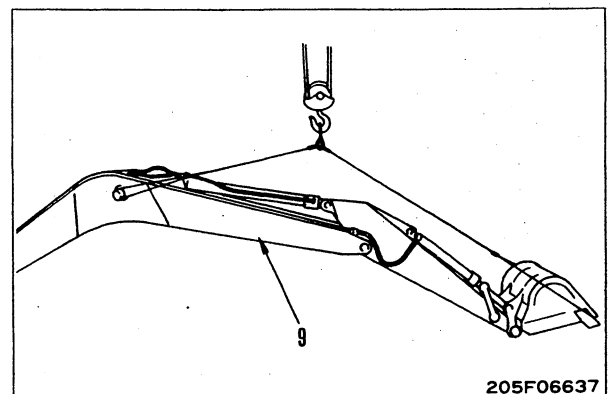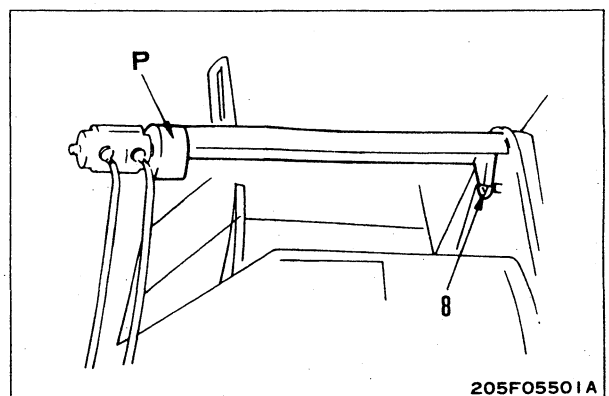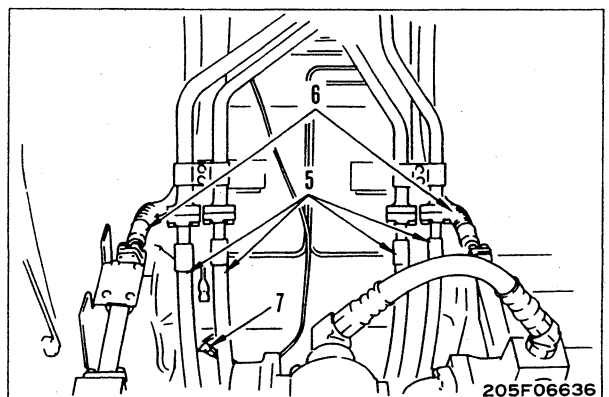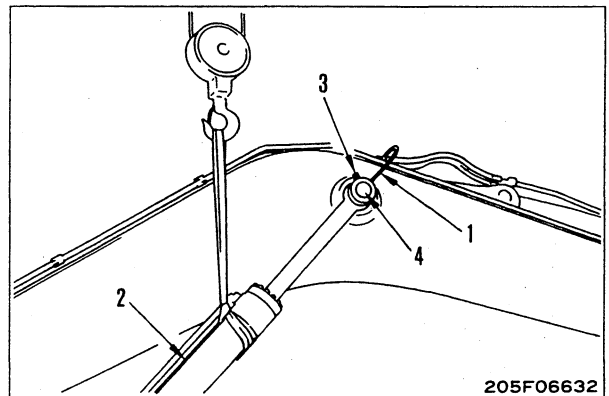

K20506

INSTALLATION OF WORK EQUIPMENT ASSEMBLY

- Carry out installation in the reverse order to removal.

※ 1

- ★ When tightening the locknut, tighten so that the clearance between the plate and nut is 0.5 – 1.5 mm.

※ 2

 Inside surface of bushing when assembling pin: Anti-friction compound (LM-P)

 Grease after assembling pin: Grease (LM-G)

 When aligning the position of the pin hole, never insert your fingers in the pin hole.

- ★ Adjust the shim thickness so that the clearance between cylinder rod (10) and plate (11) is below 1 mm.

★ Standard shim thickness: 0.8 mm, 1.5 mm

※ 3

 Inside surface of bushing when assembling pin: Anti-friction compound (LM-P)

 Grease after assembling pin: Grease (LM-G)

 When aligning the position of the pin hole, never insert your fingers in the pin hole.

- ★ Adjust the shim thickness so that the clearance between boom (12) and bracket (13) is below 1 mm.




★ Standard shim thickness: 0.8 mm, 1.0 mm, 1.5 mm

- Refilling with oil (hydraulic tank)

- ★ Add oil through the oil filler to the specified level. Run the engine to circulate the oil through the system. Then check the oil level again.

- Bleeding air

- ★ Bleed the air from the cylinder. For details, see TESTING AND ADJUSTING, Bleeding air from hydraulic cylinder.

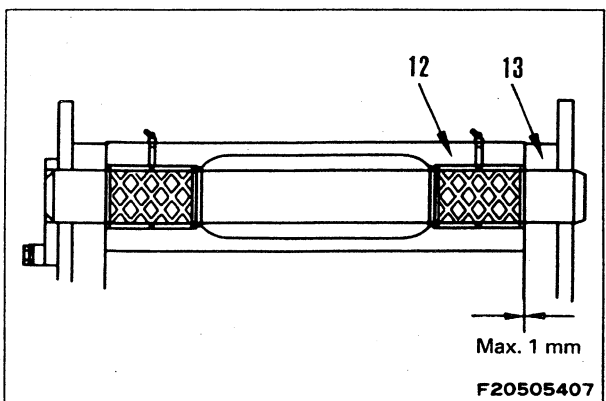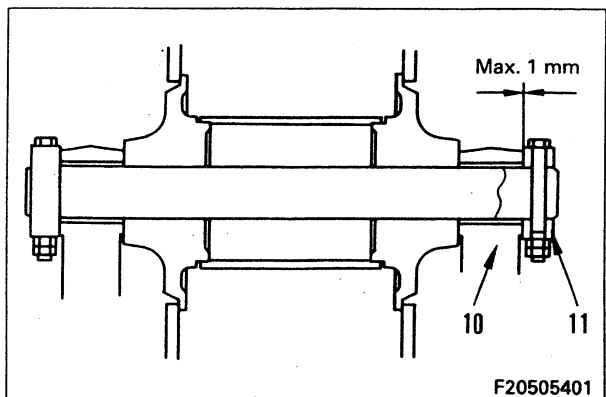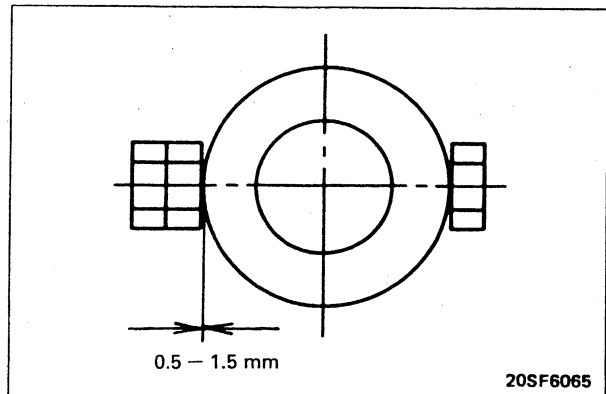

K20506




REMOVAL OF BUCKET ASSEMBLY

! Set the back of the bucket facing down, lower the work equipment completely to the ground, and set the safety lock lever to the LOCK position.

1. Remove lock bolt (1). ※ 1
2. Remove connecting pin (2) between link and bucket. ※ 2
 - ★ There are shims installed, so check the number and thickness, and keep in a safe place.
3. Start engine, and retract piston rod, then tie piston rod with wire to prevent it from coming out.
4. Remove lock bolt (3). ※ 3
5. Remove plate (4), then remove connecting pin (5) between arm and bucket. ※ 4
 - ★ There are shims installed, so check the number and thickness, and keep in a safe place.
6. After raising work equipment, swing to disconnect bucket assembly (6).



Bucket assembly: PC210-6 : 680 kg
PC240-6 : 750 kg

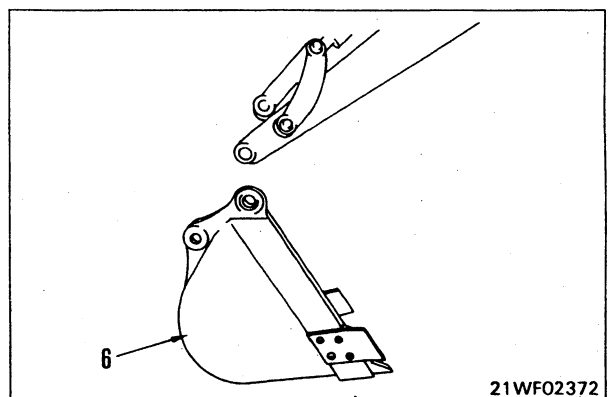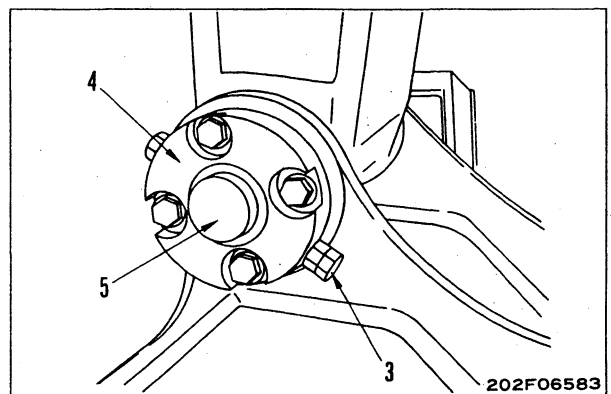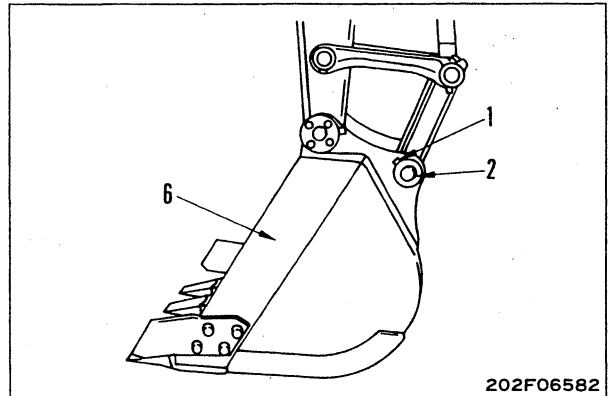

INSTALLATION OF BUCKET ASSEMBLY

- Carry out installation in the reverse order to removal.

※ 1 ※ 3

- ★ When tightening the locknut, tighten so that the clearance between the plate and nut is 0.5 – 1.5 mm.

※ 2

- Inside surface of bushing when assembling pin: Anti-friction compound (LM-P)

- Grease after assembling pin: Grease (LM-G)

- ⚠ When aligning the position of the pin hole, never insert your fingers in the pin hole.

- ★ Adjust the shim thickness so that the clearance between bucket boss (7) and link (8) is below 1 mm.

- ★ Standard shim thickness: 0.8 mm, 1.5 mm

※ 4

- Inside surface of bushing when assembling pin, inside surface, end face of collar (10): Anti-friction compound (LM-P)




- Grease after assembling pin: Grease (LM-G)

- ⚠ When aligning the position of the pin hole, never insert your fingers in the pin hole.

- ★ Set the O-ring at the end face of the bucket boss securely.

- ★ Adjust the shim thickness so that the clearance between arm top (9) and spacer (10) is 0.5 – 1.0 mm.

- ★ Standard shim thickness: 0.5 mm, 1.0 mm

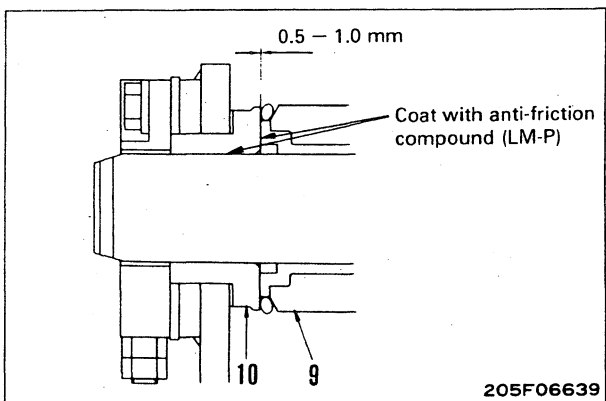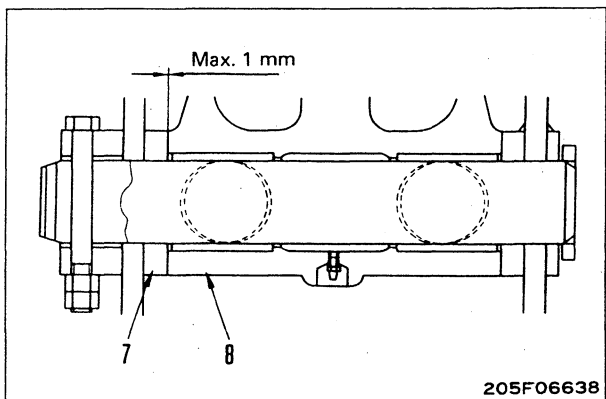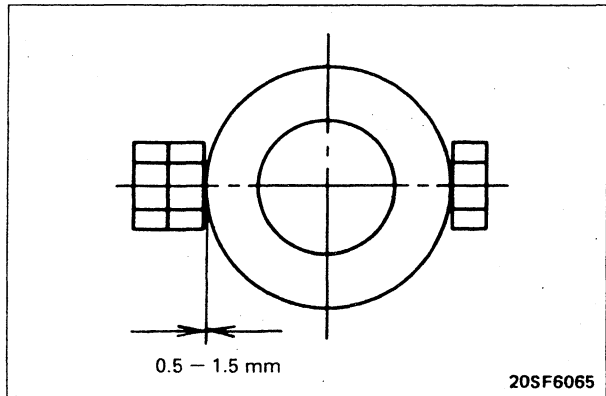

K20506

REMOVAL OF ARM ASSEMBLY


1. Remove bucket assembly. For details, see REMOVAL OF BUCKET ASSEMBLY.
2. Secure front link to arm with wire.
3. Pull in arm so that it is easy to remove pin at arm cylinder head, then lower arm and bucket cylinder assembly (1) on to block ①.
- ⚠ Set the safety lock lever to the LOCK position.
4. Set block ② between arm cylinder and boom.
5. Remove plate, then remove arm cylinder head pin (2). ※ 1
6. Start engine, and retract piston rod, then tie piston rod with wire to prevent it from coming out.
- ⚠ Release the remaining pressure in the hydraulic circuit. For details, see TESTING AND ADJUSTING, Releasing remaining pressure in hydraulic circuit.
7. Disconnect 2 hoses (3) and 2 hoses (4).
 - ★ Install blind plugs at the male end and in the disconnected hoses.
 - ★ Hoses (4) are for machines equipped with an additional attachment circuit.
8. Remove plate, then remove connecting pin (5) between arm and boom. ※ 2
 - ★ There are shims installed, so check the number and thickness, and keep in a safe place.
9. After raising boom, swing to remove arm and bucket cylinder assembly (1).



Arm, bucket cylinder assembly

PC210-6 : 950 kg

PC240-6 : 1,100 kg

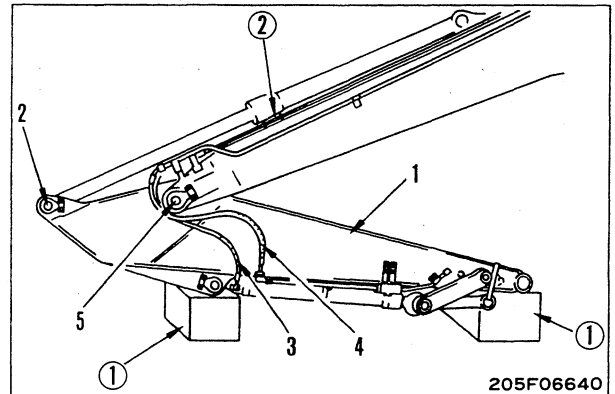

K20506

INSTALLATION OF ARM ASSEMBLY

- Carry out installation in the reverse order to removal.

※ 1



Inside surface of bushing when assembling pin: Anti-friction compound (LM-P)



Grease after assembling pin: Grease (LM-G)



When aligning the position of the pin hole, never insert your fingers in the pin hole.

※ 2



Inside surface of bushing when assembling pin: Anti-friction compound (LM-P)



Grease after assembling pin: Grease (LM-G)




When aligning the position of the pin hole, never insert your fingers in the pin hole.

- ★ Adjust the shim thickness so that the clearance between boom top (6) and arm bottom (7) is below 1.0 mm.

- ★ Standard shim thickness: 0.8 mm

- Refilling with oil (hydraulic tank)
 - ★ Add oil through the oil filler to the specified level. Run the engine to circulate the oil through the system. Then check the oil level again.
- Bleeding air
 - ★ Bleed the air from the cylinder. For details, see TESTING AND ADJUSTING, Bleeding air from hydraulic cylinder.

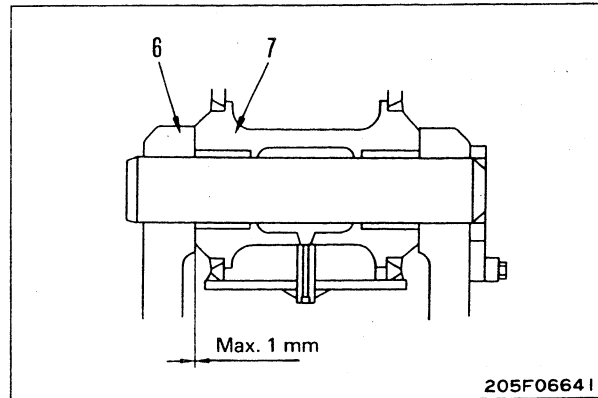

REMOVAL OF BUCKET • ARM ASSEMBLY



- ⚠** Extend the arm cylinder piston rod approx. 200 mm, lower the work equipment completely to the ground, then set the safety lock lever to the LOCK position.

1. Set block ① between arm cylinder and boom.
2. Remove plate, then remove arm cylinder head pin (1). ※ 1
3. Start engine, and retract piston rod, then tie piston rod with wire to prevent it from coming out.

- ⚠** Release the remaining pressure in the hydraulic circuit. For details, see TESTING AND ADJUSTING, Releasing remaining pressure in hydraulic circuit.

4. Disconnect 2 hoses (2) and 2 hoses (3).
 - ★ Install blind plugs at the male end and in the disconnected hoses.
 - ★ Hoses (3) are for machines equipped with an additional attachment circuit.
5. Raise bucket and arm assembly, remove plate, then remove connecting pin (4) between arm and boom, and remove bucket and arm assembly (5). ※ 2
 - ★ There are shims installed, so check the number and thickness, and keep in a safe place.

 Bucket, arm assembly: PC210-6 : 1,650 kg
PC240-6 : 1,900 kg

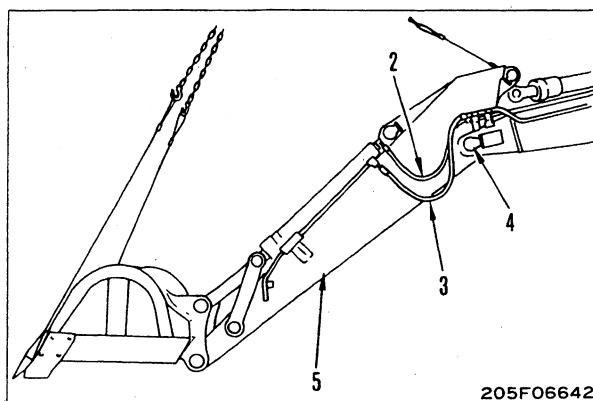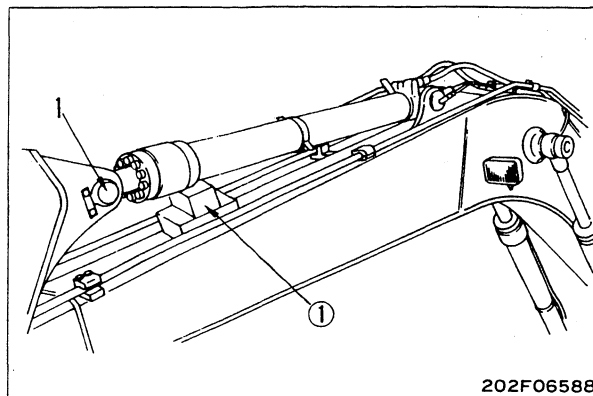

K20506

INSTALLATION OF BUCKET • ARM ASSEMBLY


- Carry out installation in the reverse order to removal.

※ 1

-  Inside surface of bushing when assembling pin: Anti-friction compound (LM-P)
-  Grease after assembling pin: Grease (LM-G)
-  When aligning the position of the pin hole, never insert your fingers in the pin hole.

※ 2

-  Inside surface of bushing when assembling pin: Anti-friction compound (LM-P)
-  Grease after assembling pin: Grease (LM-G)
-  When aligning the position of the pin hole, never insert your fingers in the pin hole.
- ★ Adjust the shim thickness so that the clearance between boom top (6) and arm bottom (7) is below 1 mm.
- ★ Standard shim thickness: 0.8 mm

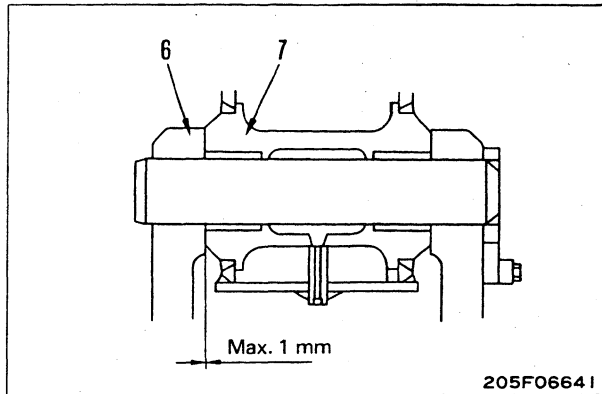





- Refilling with oil (hydraulic tank)
 - ★ Add oil through the oil filler to the specified level. Run the engine to circulate the oil through the system. Then check the oil level again.
- Bleeding air
 - ★ Bleed the air from the cylinder. For details, see TESTING AND ADJUSTING, Bleeding air from hydraulic cylinder.

REMOVAL OF BOOM ASSEMBLY

1. Remove bucket and arm assembly. For details, see REMOVAL OF BUCKET, ARM ASSEMBLY.
2. Lower boom assembly completely to ground, and set safety lock lever to LOCK position.
3. Disconnect grease hose (1).
4. Sling boom cylinder assembly (2), and remove lock bolt (3). ※ 1
5. Remove plate, then remove head pin (4). ※ 2
 - ★ There are shims installed, so check the number and thickness, and keep in a safe place.
6. Start engine, and retract piston rod, then tie piston rod with wire to prevent it from coming out, and lower it onto block.
 - ★ Disconnect the boom cylinder on the opposite side in the same way.
- ⚠ Release the remaining pressure in the hydraulic circuit. For details, see TESTING AND ADJUSTING, Releasing remaining pressure in hydraulic circuit.
7. Disconnect hoses (5) and (6), and secure to valve with rope.
 - ★ Hoses (6) are for machines equipped with an additional attachment circuit.
8. Disconnect wiring connector (7) for working lamp.
9. Raise boom assembly and remove plate, remove foot pin (8) using tool P, then remove boom assembly (9). ※ 3
 - ★ There are shims installed, so check the number and thickness, and keep in a safe place.



Boom assembly: PC210-6 : 1,650 kg
PC240-6 : 1,950 kg

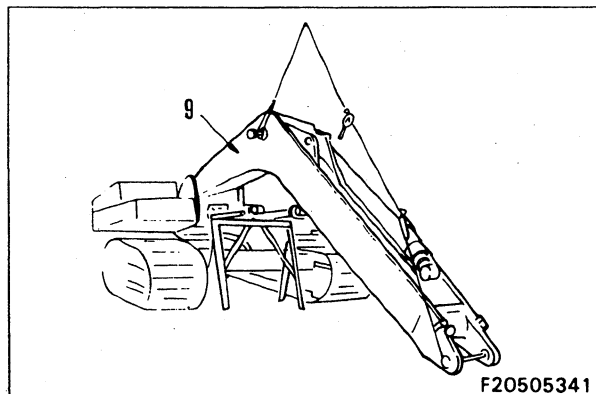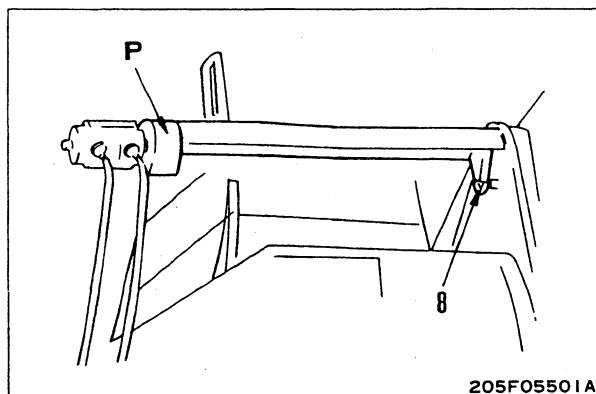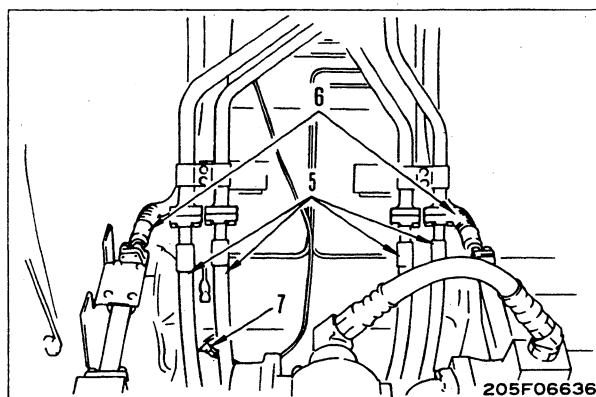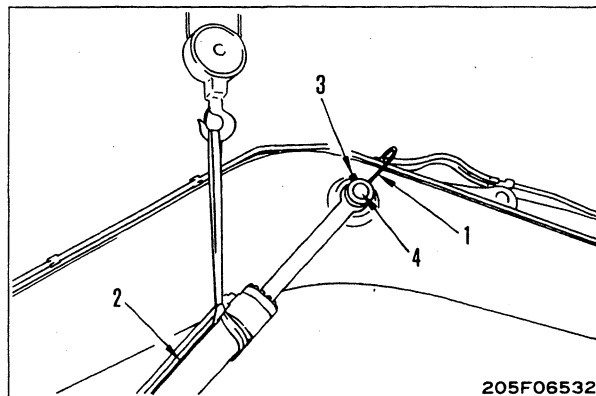

INSTALLATION OF BOOM ASSEMBLY

- Carry out installation in the reverse order to removal.

※ 1

- ★ When tightening the locknut, tighten so that the clearance between the plate and nut is 0.5 – 1.5 mm.

※ 2

 Inside surface of bushing when assembling pin: Anti-friction compound (LM-P)

 Grease after assembling pin: Grease (LM-G)

 When aligning the position of the pin hole, never insert your fingers in the pin hole.

- ★ Adjust the shim thickness so that the clearance between cylinder rod (10) and plate (11) is below 1 mm.

★ Standard shim thickness: 0.8 mm, 1.5 mm

※ 3

 Inside surface of bushing when assembling pin: Anti-friction compound (LM-P)

 Grease after assembling pin: Grease (LM-G)

 When aligning the position of the pin hole, never insert your fingers in the pin hole.

- ★ Adjust the shim thickness so that the clearance between boom (12) and bracket (13) is below 1 mm.




★ Standard shim thickness: 0.8 mm, 1.0 mm, 1.5 mm

- Refilling with oil (hydraulic tank)

- ★ Add oil through the oil filler to the specified level. Run the engine to circulate the oil through the system. Then check the oil level again.

- Bleeding air

- ★ Bleed the air from the cylinder. For details, see TESTING AND ADJUSTING, Bleeding air from hydraulic cylinder.

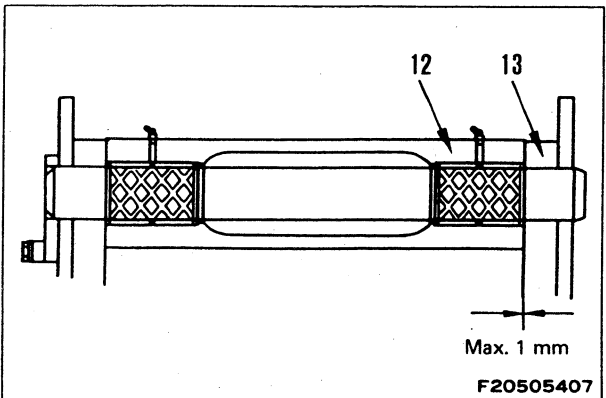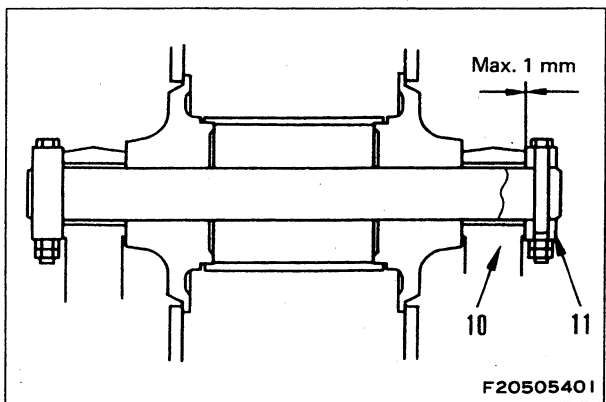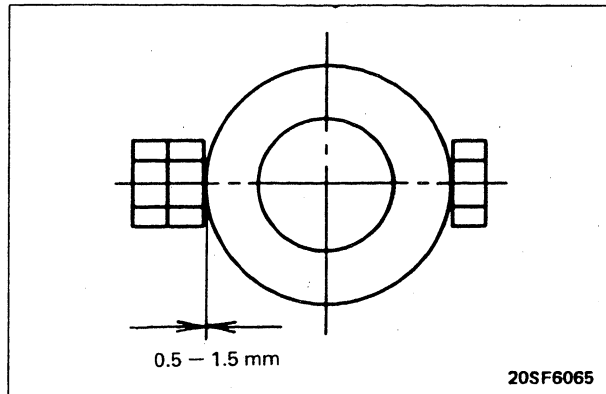

K20506


REMOVAL OF OPERATOR'S CAB ASSEMBLY

! Disconnect the cable from the negative (–) terminal of the battery.


1. Remove floor mat (1).
2. Remove operator's seat assembly (2).




Operator's seat assembly: 40 kg

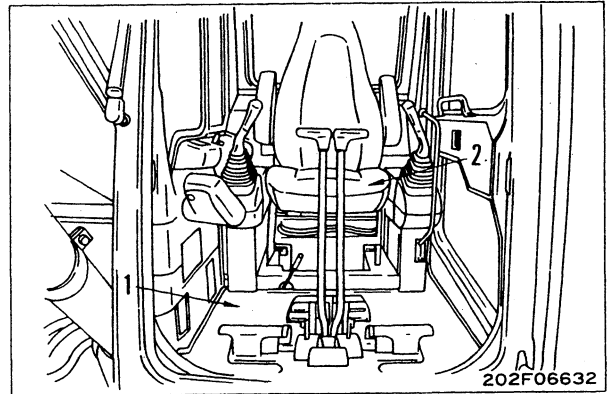


3. Remove knob (3).
4. Remove 4 caps (4) and clip (5), then remove middle panel (6).
5. Remove bottom panel (7).
 - ★ The panel is held by a clip, so remove the clip when removing the panel and be careful not to damage it.

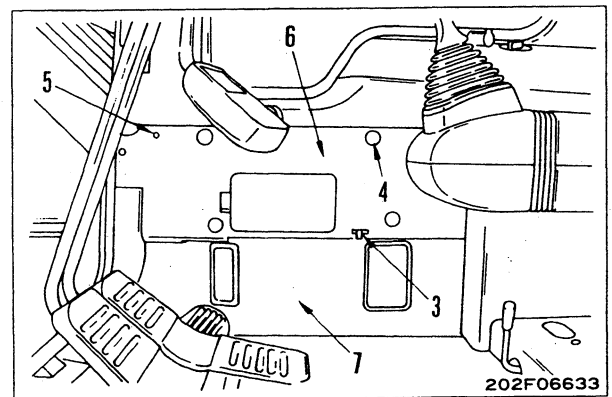



6. Disconnect washer hose (8).

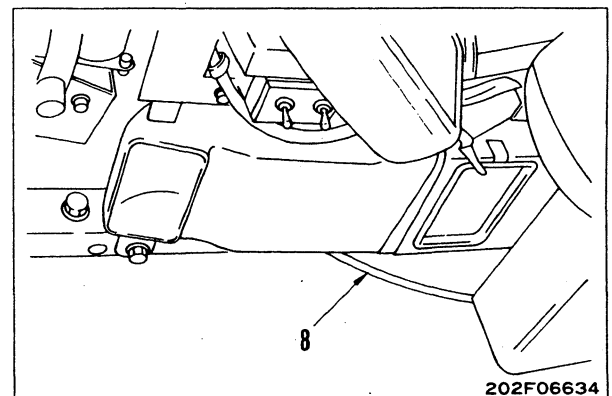

7. Remove radio (11) if fitted (refer to radio operation manual).
 - ★ Remove plate (9), then remove cover (10).
8. Lift cover (10) away carefully to locate speaker harness connector. Disconnect and remove panel completely.

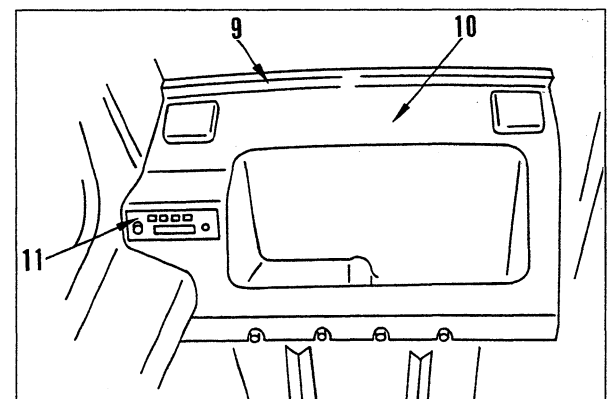


9. Remove divider board (13).
10. Remove heater duct of air conditioner ducts (14) and (15) (if fitted).
11. Disconnect wiring connectors CN-H01 (16), CN-H02 (17), CN-H03 (18), CN-H04 (19), CN-H05 (20), CN-H06 (21), CN-K01 (22), CN-H07 CN-H08 CN-H09

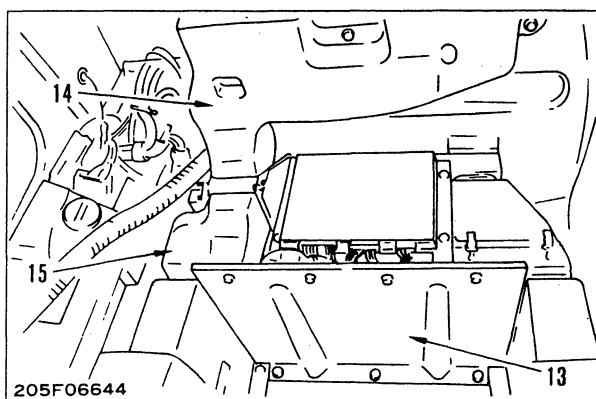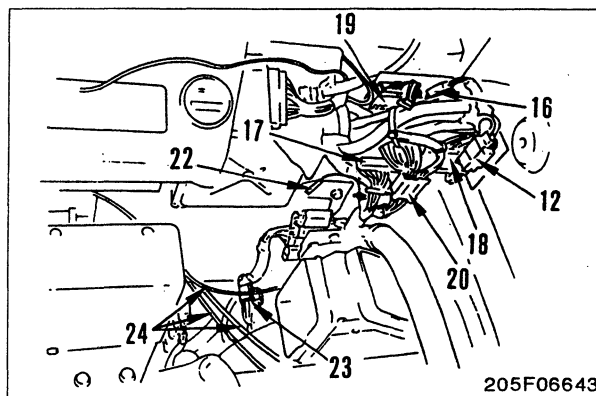

12. Disconnect heater cables or air conditioner cables (24) (if fitted).

K20506

13. Remove 11 cab mounting bolts (marked ※).

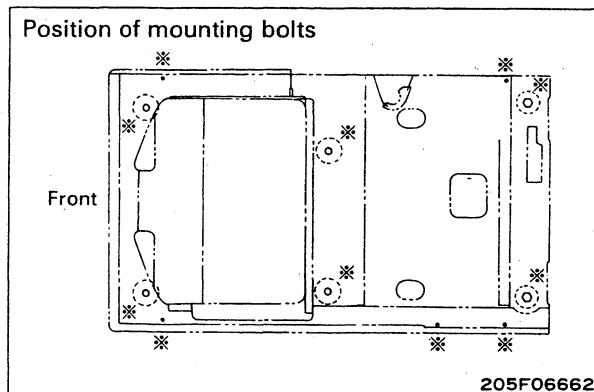


14. Using eyebolts ①, remove operator's cab assembly (25).



Operator's cab assembly: 300 kg

- ★ When raising the cab assembly, check that all the wiring has been disconnected, then lift off slowly and be careful not to hit any part.

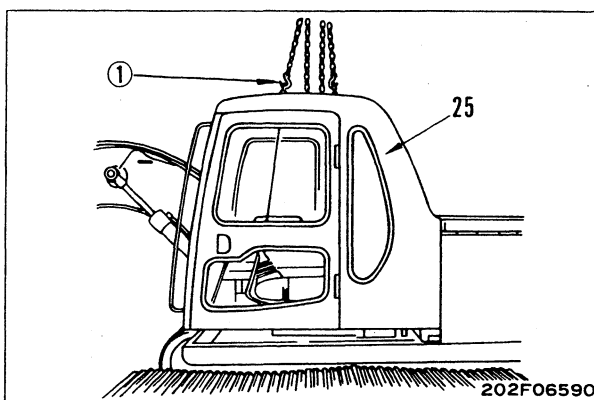

INSTALLATION OF OPERATOR'S CAB ASSEMBLY


- Carry out installation in the reverse order to removal.

REMOVAL OF COUNTERWEIGHT ASSEMBLY

1. Set eyebolts ① to counterweight assembly (1), and sling.
2. Remove mounting bolts (2) and (3). ※ 1
★ Be careful not to lose the shims when removing.
3. Lift off counterweight (1) horizontally with wire or chain block. ※ 2
★ Be careful not to hit the engine, radiator and cooler assembly.



Counterweight assembly: 4,300 kg

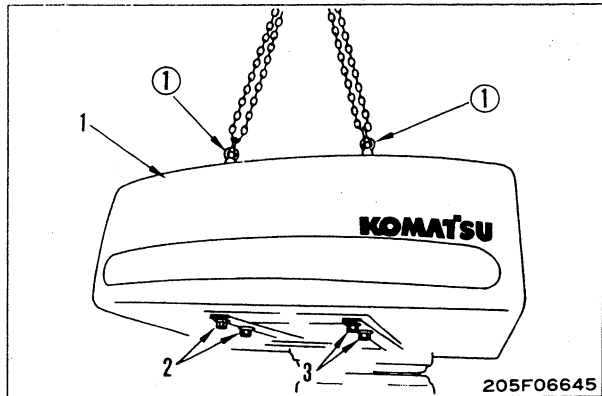

INSTALLATION OF COUNTERWEIGHT ASSEMBLY

- Carry out installation in the reverse order to removal.


※ 1


Thread of counterweight mounting bolt:

Thread tightener (LT-2)




Counterweight mounting bolt:

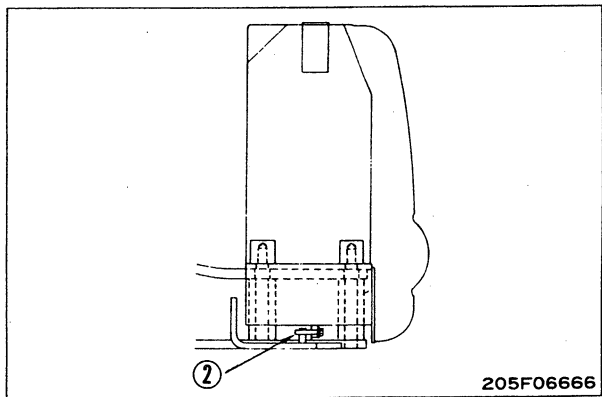 $1,325 \pm 145 \text{ Nm}$ ($135 \pm 15 \text{ kgm}$)
※ 2

- ★ Installing and adjusting counterweight

- 1) Sling counterweight with crane and set in position on frame.
- 2) Use counterweight pusher bolt ②, and align mounting bolts holes. Then install shim and mounting bolts (2) and (3), and adjust to following dimensions.

- Clearance from revolving frame:
 $10 \pm 5 \text{ mm}$ (left and right)
 - Clearance from bodywork door:
 $10 \pm 5 \text{ mm}$ (left and right)
 - Stepped difference ⑥ from revolving frame in left-to-right direction:
Max. 5 mm
 - Stepped difference ⑦ from bodywork door in left-to-right direction:
 $10 \pm 4 \text{ mm}$
 - Stepped difference ⑧ from bodywork top cover in up-down direction:
Max. 5 mm
- 3) After adjusting, remove counterweight pusher bolt ②.

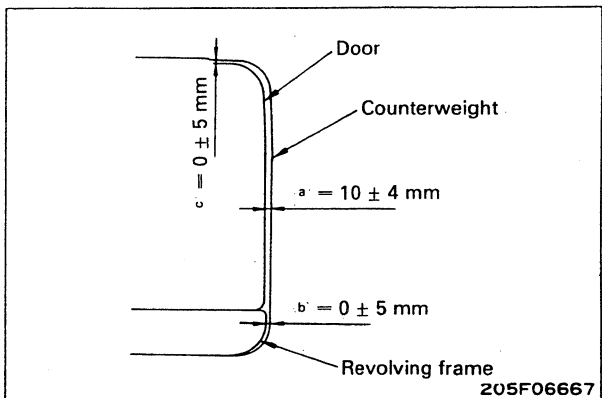


K20506

REMOVAL OF ENGINE THROTTLE CONTROLLER ASSEMBLY

⚠ Disconnect the cable from the negative (–) terminal of the battery.


1. Remove Radio (2) if fitted.
2. Remove plate (1), then remove cover (2), (3).
3. Lift cover (3) away carefully to locate speaker harness connector. Disconnect and remove panel completely.

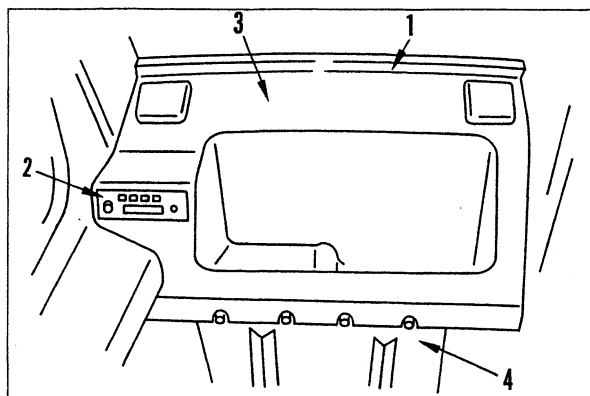

4. Remove divider board (5).
5. Disconnect wiring connector (6), and remove engine throttle controller assembly (7).

INSTALLATION OF ENGINE THROTTLE CONTROLLER ASSEMBLY



- Carry out installation in the reverse order to removal.

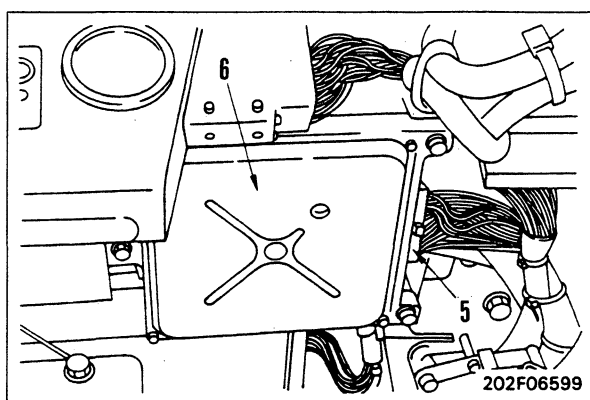

REMOVAL OF PUMP CONTROLLER ASSEMBLY


⚠ Disconnect the cable from the negative (–) terminal of the battery.

1. Remove radio (2) if fitted.
2. Remove plate (1), then remove cover (3).
3. Lift cover (3) away carefully to locate speaker harness connector. Disconnect and remove panel completely.
4. Remove divider board (5).
5. Remove heater / air conditioner duct (5).
6. Disconnect 3 wiring connectors (6), then remove pump controller assembly (7).

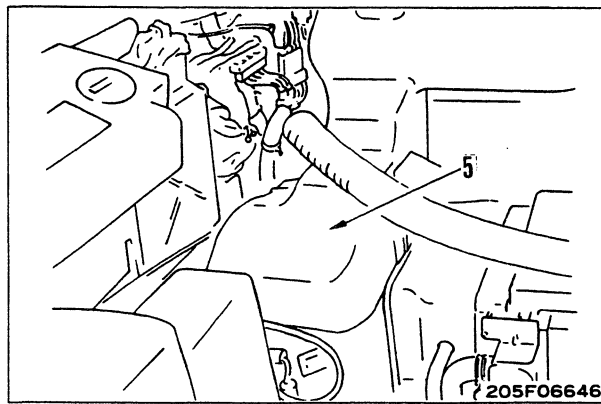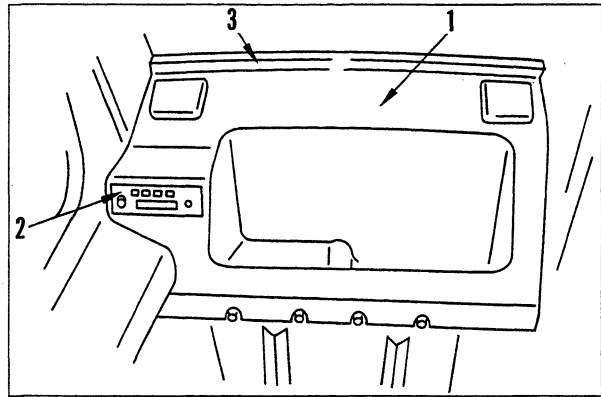

INSTALLATION OF PUMP CONTROLLER ASSEMBLY

- Carry out installation in the reverse order to removal.

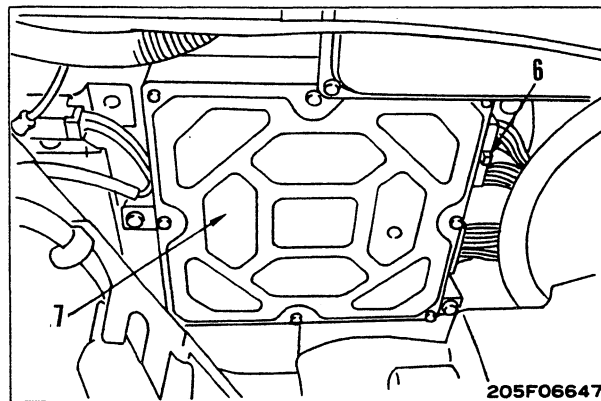


K20506

REMOVAL OF MONITOR ASSEMBLY


⚠ Disconnect the cable from the negative (–) terminal of the battery.

1. Remove screws (1), then lift up monitor assembly (2).
2. Disconnect wiring connectors (3), then remove monitor assembly (2).

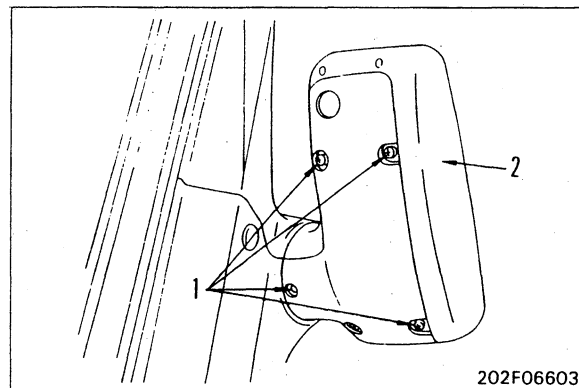

INSTALLATION OF MONITOR ASSEMBLY

- Carry out installation in the reverse order to removal.

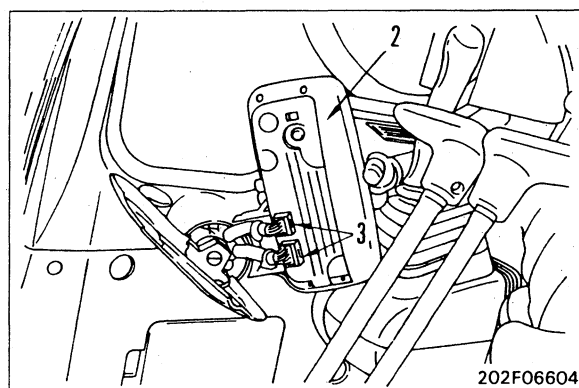


40 MAINTENANCE STANDARD

Final drive	40- 2
Swing machinery	40- 4
Swing circle	40- 6
Track frame, recoil spring	40- 7
Idler	40- 8
Carrier roller	40-10
Track roller	40-11
Track shoe	40-12
Hydraulic pump	40-14
Control valve	40-17
Swing motor	40-24
Travel motor	40-25
Work equipment, swing PPC valve	40-26
Travel PPC valve	40-27
PPC shuttle, travel junction valve	40-28
EPC, solenoid valve	40-30
Center swivel joint	40-31
Hydraulic cylinder	40-34
Work equipment	40-38

K20506

FINAL DRIVE

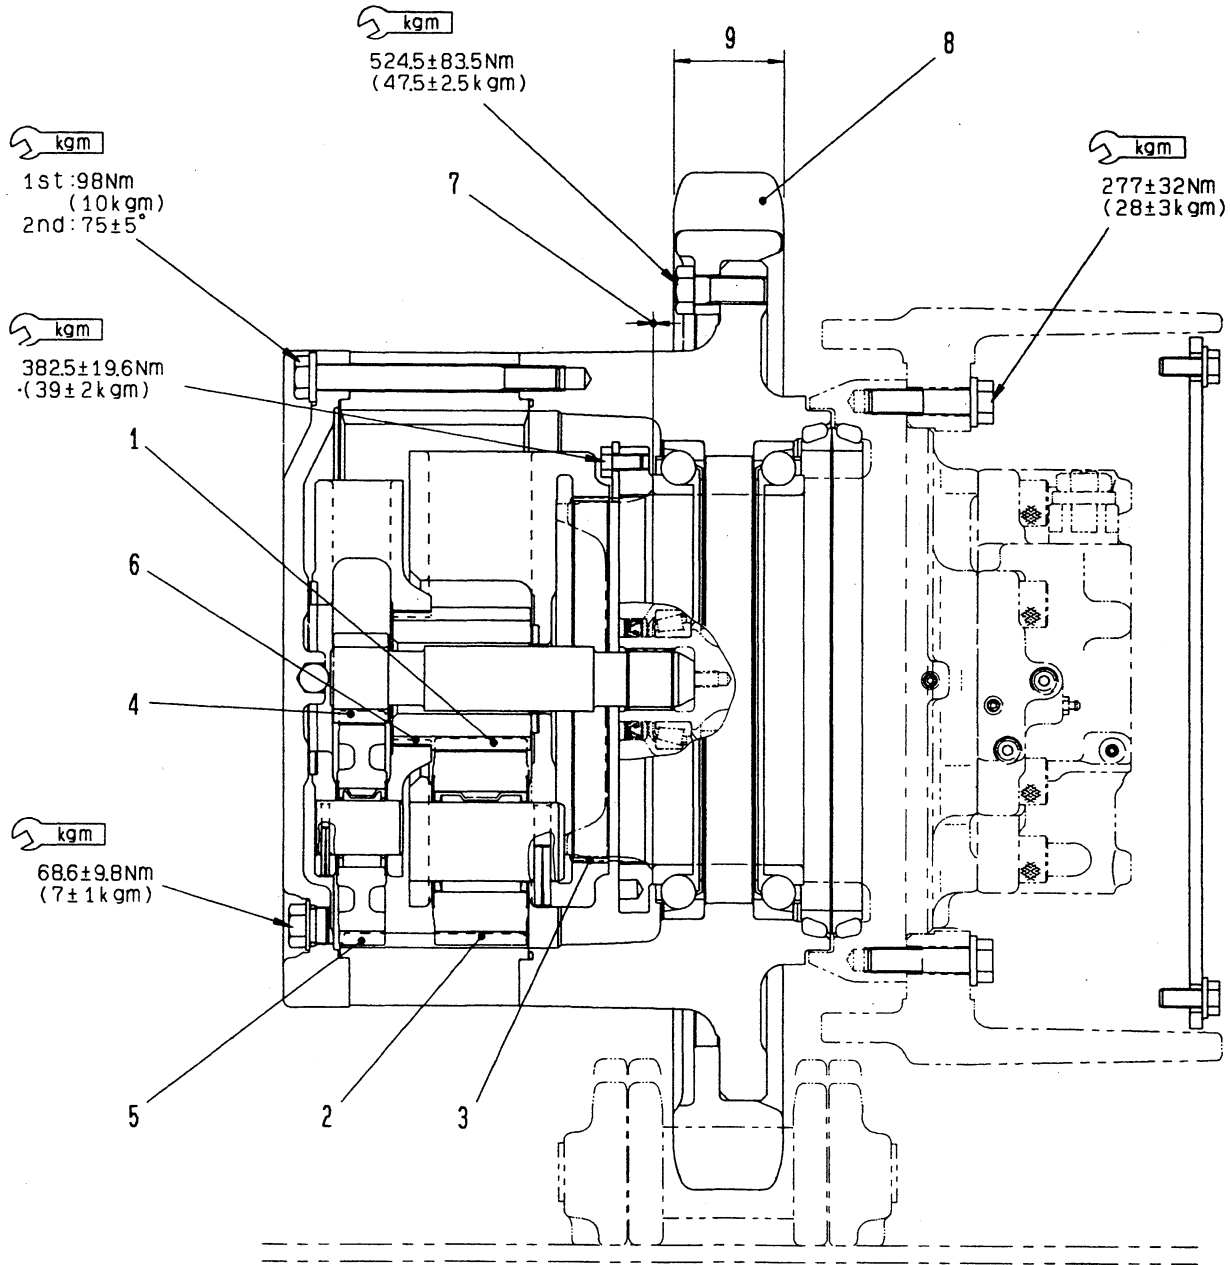

K20506


205CA06400

K20506

Unit: mm

No.	Check item	Criteria		Remedy
		Standard clearance	Clearance limit	
1	Backlash between No.1 sun gear and No. 1 planetary gear	0.19 – 0.52	1.00	Replace
2	Backlash between No. 1 planetary gear and ring gear	0.2 – 0.61	1.10	
3	Backlash between No. 1 planetary carrier and motor	0.06 – 0.22	—	
4	Backlash between No. 2 sun gear and No. 2 planetary gear	0.15 – 0.49	1.00	
5	Backlash between No. 2 planetary gear and ring gear	0.19 – 0.60	1.10	
6	Backlash between No. 2 planetary carrier and No. 1 sun gear	0.15 – 0.44	1.00	
7	End play of sprocket shaft	0 – 0.10	—	
8	Amount of wear on sprocket tooth	Repair limit: 6		Rebuild or replace
9	Width of sprocket tooth	Standard size	Repair limit	
		71	68	

SWING MACHINERY

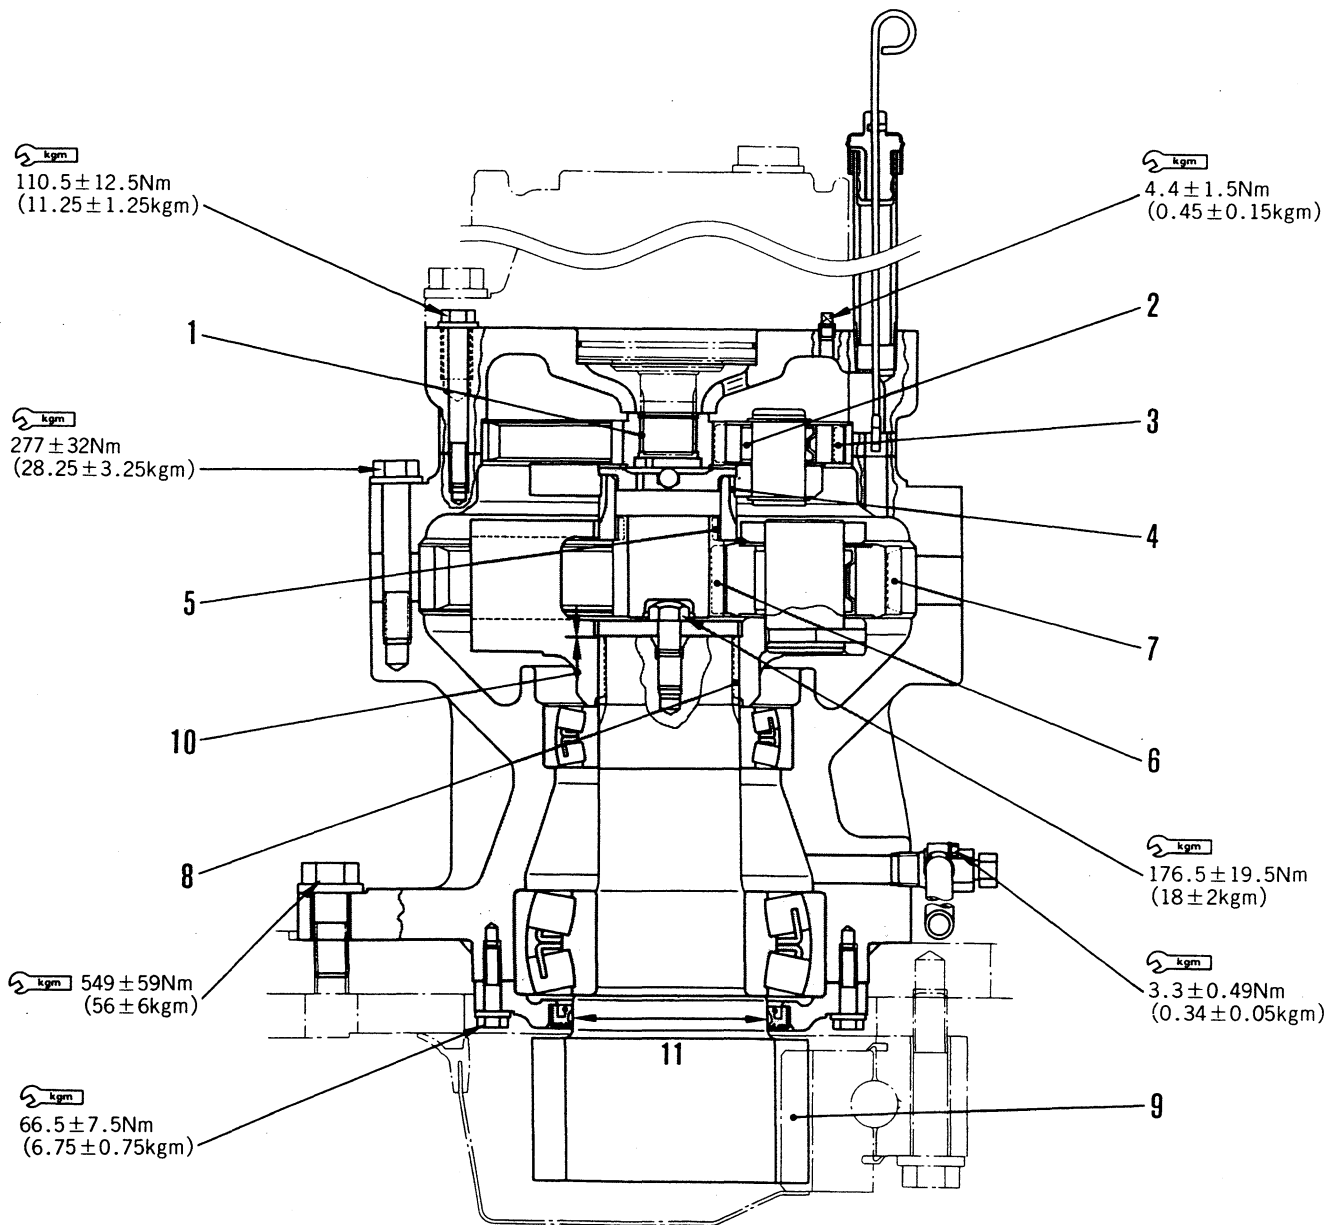

K20506

205F06259

MAINTENANCE STANDARD



SWING MACHINERY

K20506

Unit: mm

No.	Check item	Criteria		Remedy
		Standard clearance	Clearance limit	
1	Backlash between swing motor shaft and No. 1 sun gear	0.07 – 0.18	—	Replace
2	Backlash between No. 1 sun gear and No. 1 planetary gear	0.13 – 0.32	0.90	
3	Backlash between No. 1 planetary gear and ring gear	0.14 – 0.43	0.90	
4	Backlash between No. 1 planetary carrier and coupling	0.09 – 0.19	—	
5	Backlash between coupling and No. 2 sun gear	0.35 – 0.58	1.10	
6	Backlash between No. 2 sun gear and No. 2 planetary gear	0.12 – 0.49	1.00	
7	Backlash between No. 2 planetary gear and ring gear	0.15 – 0.57	1.10	
8	Backlash between No. 2 planetary carrier and swing pinion	0.09 – 0.20	—	
9	Backlash between swing pinion and swing circle	0.22 – 1.32	2.00	
10	Clearance between plate and planetary carrier	0.38 – 1.16	—	
11	Wear of swing pinion surface contacting with oil seal	Standard size	Repair limit	Apply hard chrome plating, recondition, or replace
		125 ⁰ _{-0.100}	124.7	

SWING CIRCLE

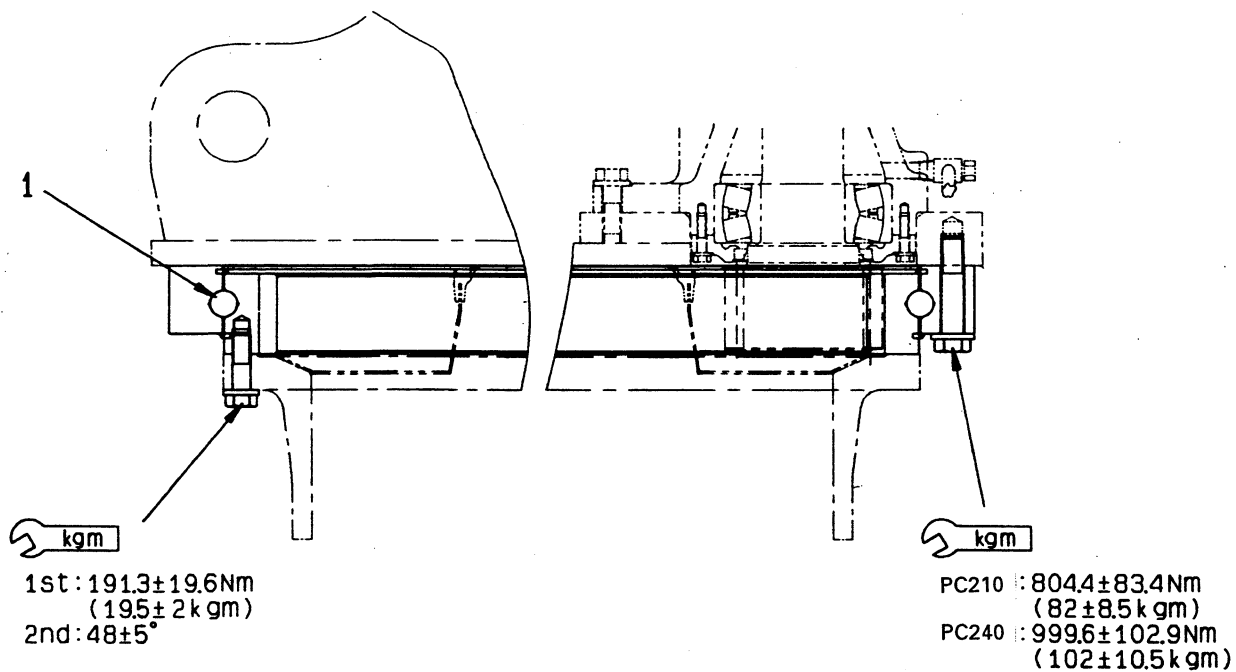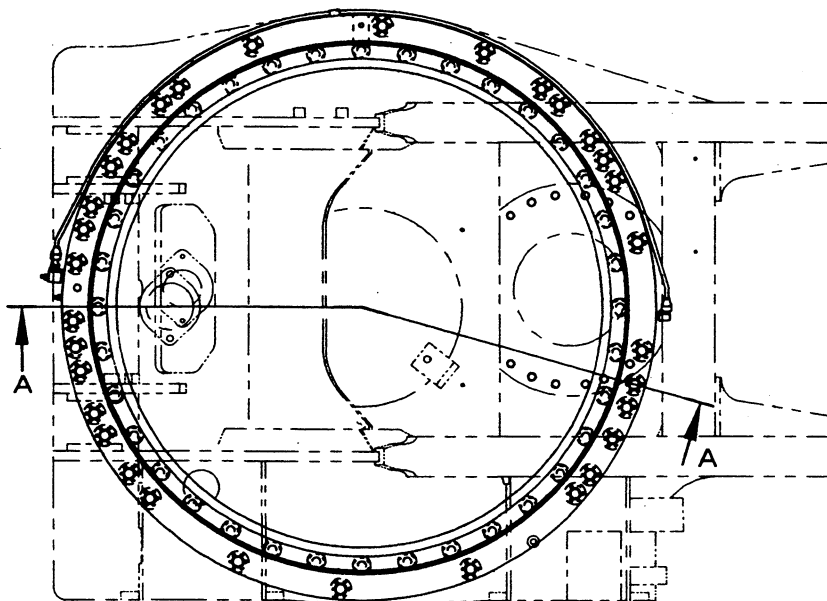

A - A


205CA06401

Unit: mm

No.	Check item	Criteria		Remedy
		Standard clearance	Clearance limit	
1	Axial clearance of bearing (when mounted on chassis)	0.5 - 1.6	3.2	Replace

TRACK FRAME, RECOIL SPRING

★ Figure shows PC210-6K.

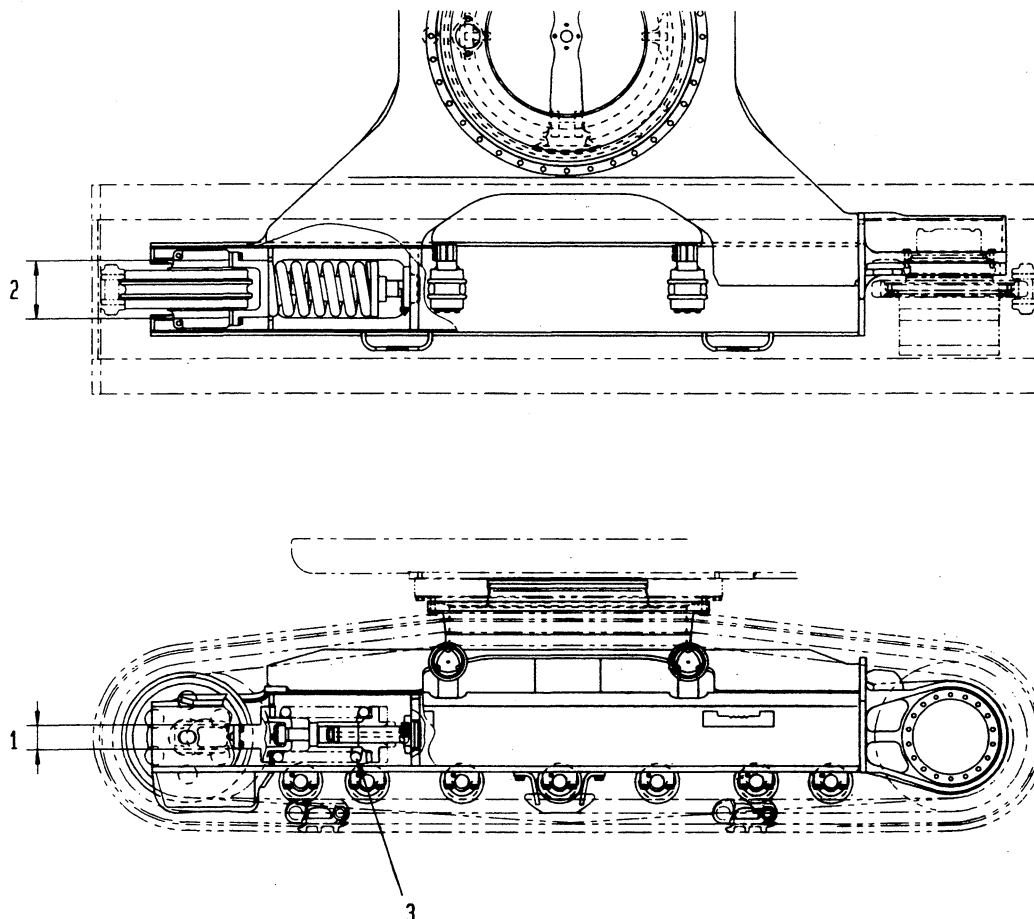


205CA06403

Unit: mm

No.	Check item	Criteria				Remedy	
1	Vertical width of idler guide		Standard size	Tolerance	Repair limit	Rebuild or replace	
		Track frame	107				
		Idler support	105				
2	Horizontal width of idler guide	Track frame	250				
		Idler support	247.4				
3	Recoil spring	Standard size			Repair limit		Replace
		Free length x O.D.	Installed length	Installed load	Free length	Installed load	
		PC210/240	587.5 x 243	466	133.5 kN (13,610 kg)	576	

IDLER

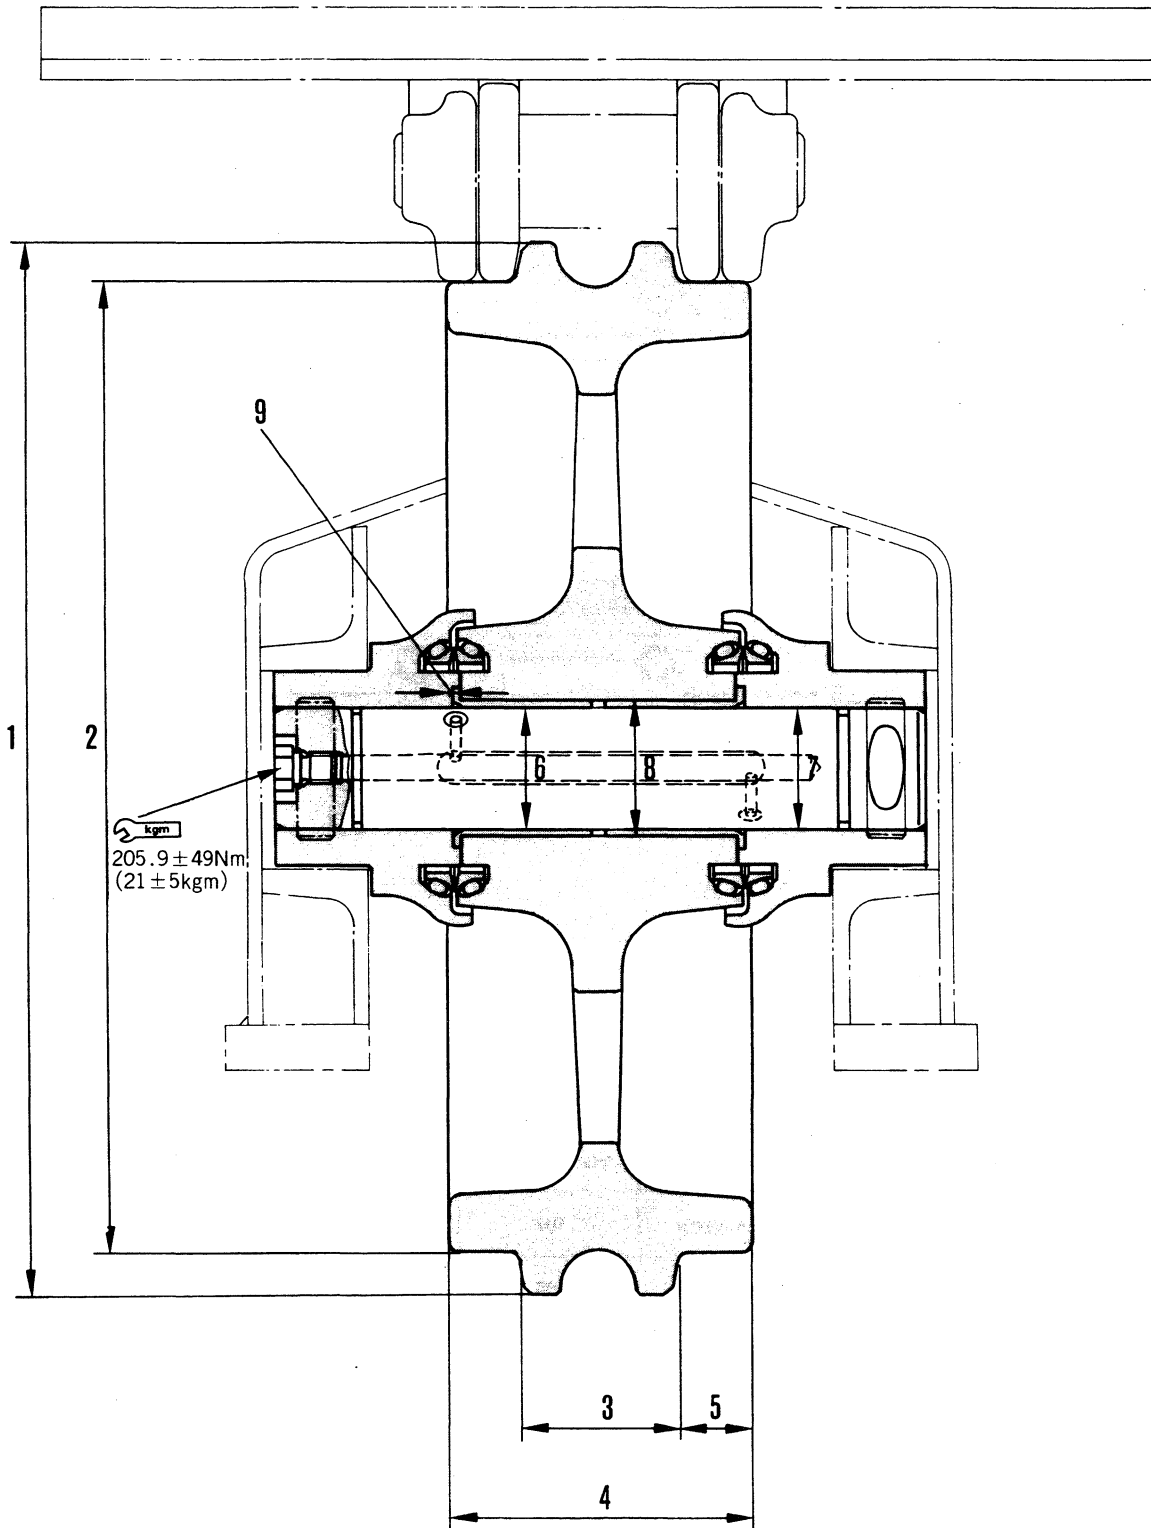

K20506


205F05186

K20506

Unit: mm

No.	Check item	Criteria					Remedy
1	Outside diameter of protrusion	Standard size		Repair limit			Rebuild or replace
		560		—			
2	Outside diameter of tread	520		508			
3	Width of protrusion	85		—			
4	Total width	164		—			
5	Width of tread	39.5		45.5			
6	Clearance between shaft and bushing	Standard size	Tolerance		Standard clearance	Clearance limit	Replace bushing
		65	Shaft −0.250 −0.350	Hole +0.074 −0.036	0.214 – 0.424	1.5	
7	Clearance between shaft and support	65	−0.250 −0.290	−0.110 −0.220	0.03 – 0.180	—	Replace
8	Interference between idler and bushing	Standard size	Tolerance		Standard interference	Interference limit	Replace bushing
		72	+0.089 +0.059	−0.006 −0.072	0.065 – 0.161	—	
9	Side clearance of idler (each)	Standard clearance			Clearance limit		
		0.39 – 1.00			1.5		

CARRIER ROLLER

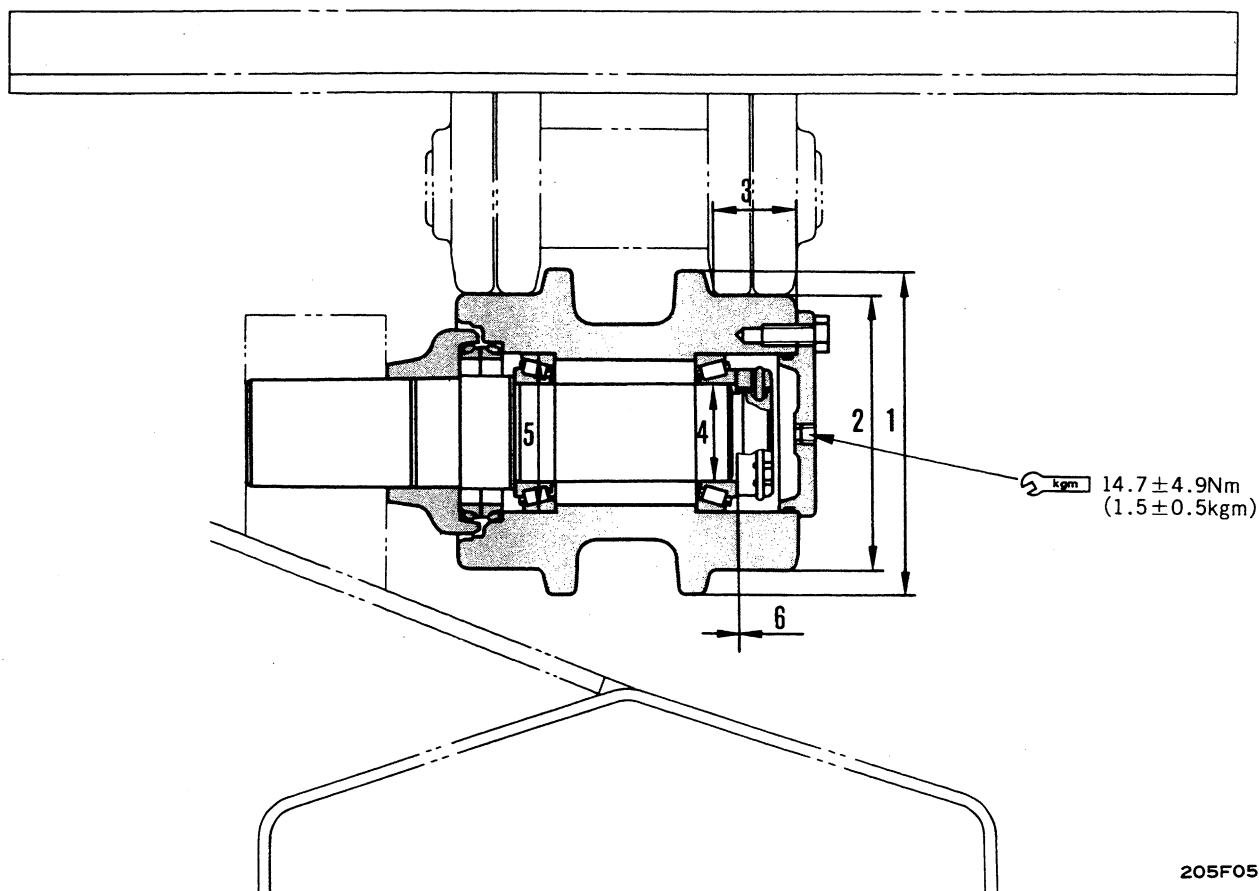


205F05188

K20506

Unit: mm

No.	Check item	Criteria					Remedy
1	Outside diameter of flange (outside)	Standard size		Repair limit			Rebuild or replace
		165		—			
2	Outside diameter of tread	140		130			
3	Width of tread	43		50			
4	Interference between shaft and bearing	Standard size	Tolerance		Standard interference	Interference limit	
			Shaft	Hole			
		50	0 -0.016	0 -0.012	-0.016 – 0.012	—	
5	Interference between roller and bearing	80	0 -0.013	-0.021 -0.051	0.008 – 0.051	—	Replace
6	Side clearance of roller	Standard clearance		Clearance limit			
		0.01 – 0.18		—			

TRACK ROLLER

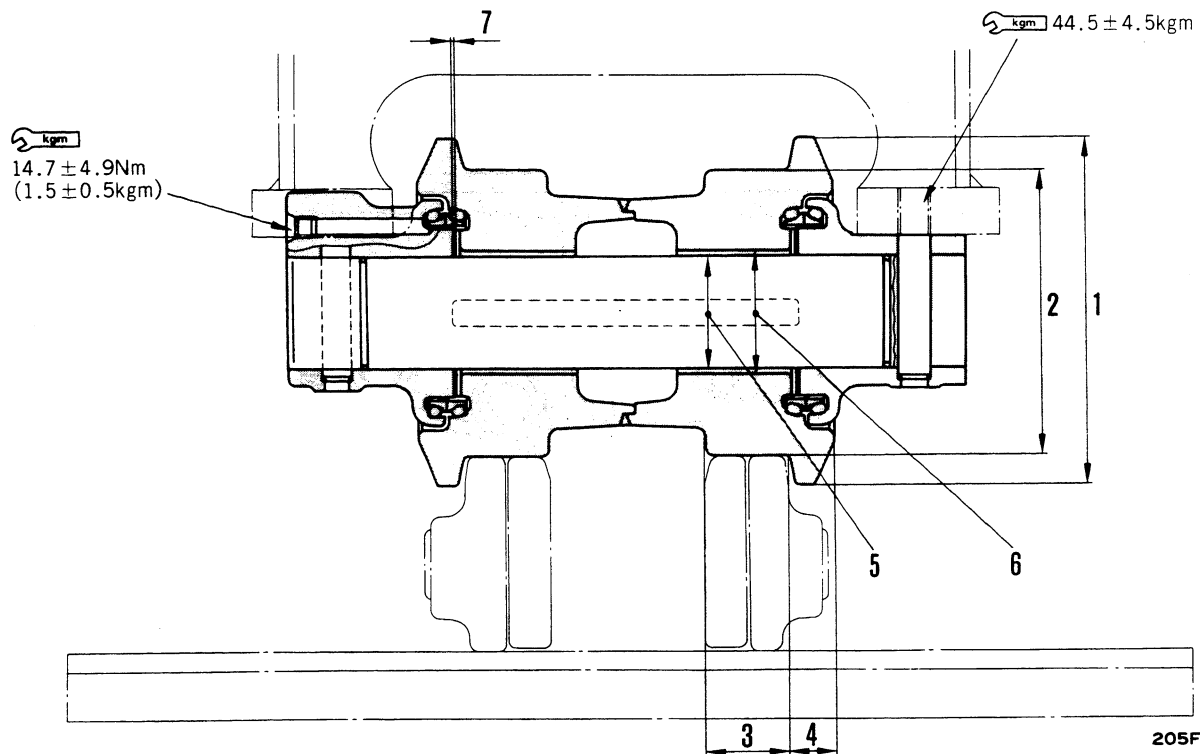

Unit: mm

No.	Check item	Criteria					Remedy
1	Outside diameter of flange (outside)	Standard size		Repair limit			Rebuild or replace
		186		—			
2	Outside diameter of tread	154		142			
3	Width of tread	44.5		52			
4	Width of flange	24.5		—			
5	Clearance between shaft and bushing	Standard size	Tolerance		Standard clearance	Clearance limit	Replace bushing
			Shaft	Hole			
		60	-0.215 -0.315	+0.195 0	0.215 – 0.510	1.5	
6	Interference between roller and bushing	Standard size	Tolerance		Standard interference	Interference limit	
			Shaft	Hole			
		67	+0.153 +0.053	+0.030 0	0.023 – 0.153	—	
7	Side clearance of roller	Standard clearance		Clearance limit			Replace
		0.41 – 0.95		1.5			

K20506

MAINTENANCE STANDARD




TRACK SHOE

K20506

Unit: mm

No.	Check item		Criteria				Remedy	
1	Link pitch		Standard size		Repair limit		Turn or replace	
			190.25		194.25			
2	Outside diameter of bushing		59.3		54.3			
3	Height of grouser	Triple	26		16		Lug welding, rebuild or replace	
		Swamp	102.5		90.5			
4	Height of link		105		97			
5	Interference between bushing and link		Standard size	Tolerance		Standard interference	Interference limit	Replace with over size
				Shaft	Hole			
			59	+0.304 +0.264	+0.074 0	0.190 – 0.304	0.100	
6	Interference between regular pin and link		38	+0.222 +0.072	–0.138 –0.200	0.210 – 0.422	0.140	
7	Interference between master pin and link		37.8	+0.230 +0.200	+0.062 0	0.138 – 0.230	0.130	
8	Protrusion of bushing		4.85				Adjust	
9	Tightening torque of shoe bolt		Initial tightening torque: 392 ± 39.2 Nm (40 ± 4 kgm) Additional tightening angle: 120° ± 10°				Tighten	


HYDRAULIC PUMP

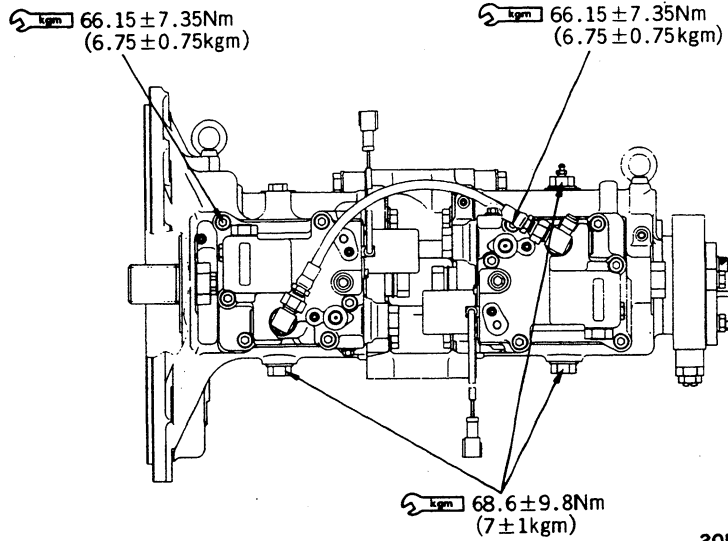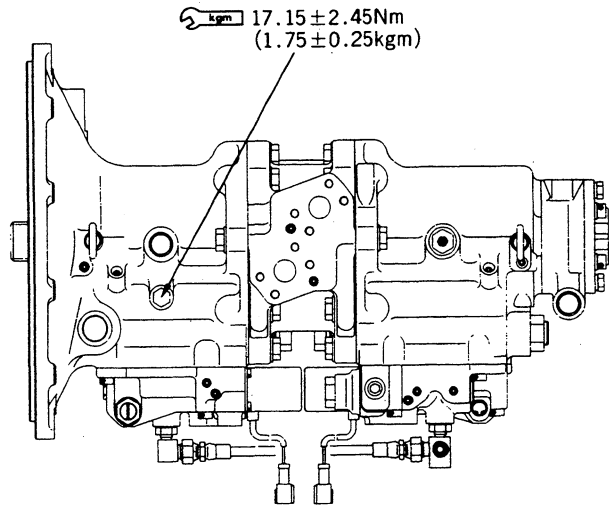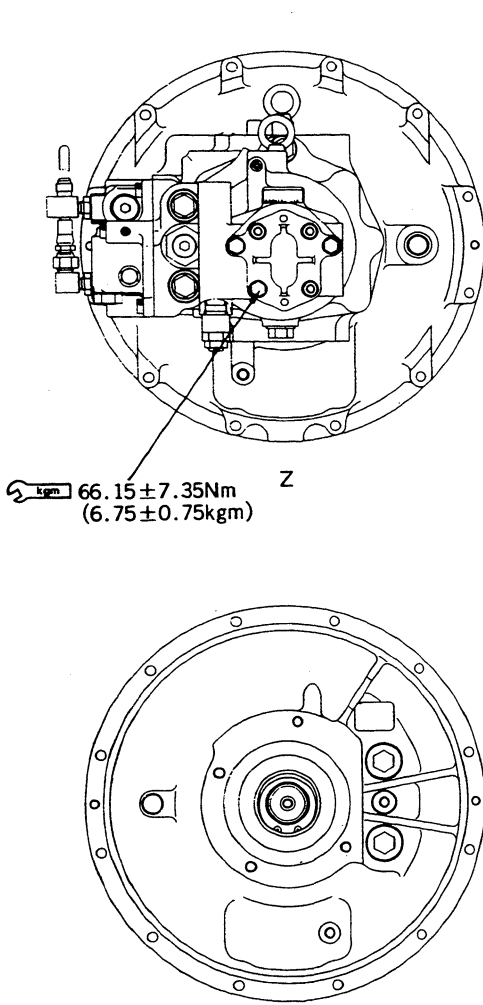

205F06260

K20506

CONTROL PUMP, RELIEF VALVE

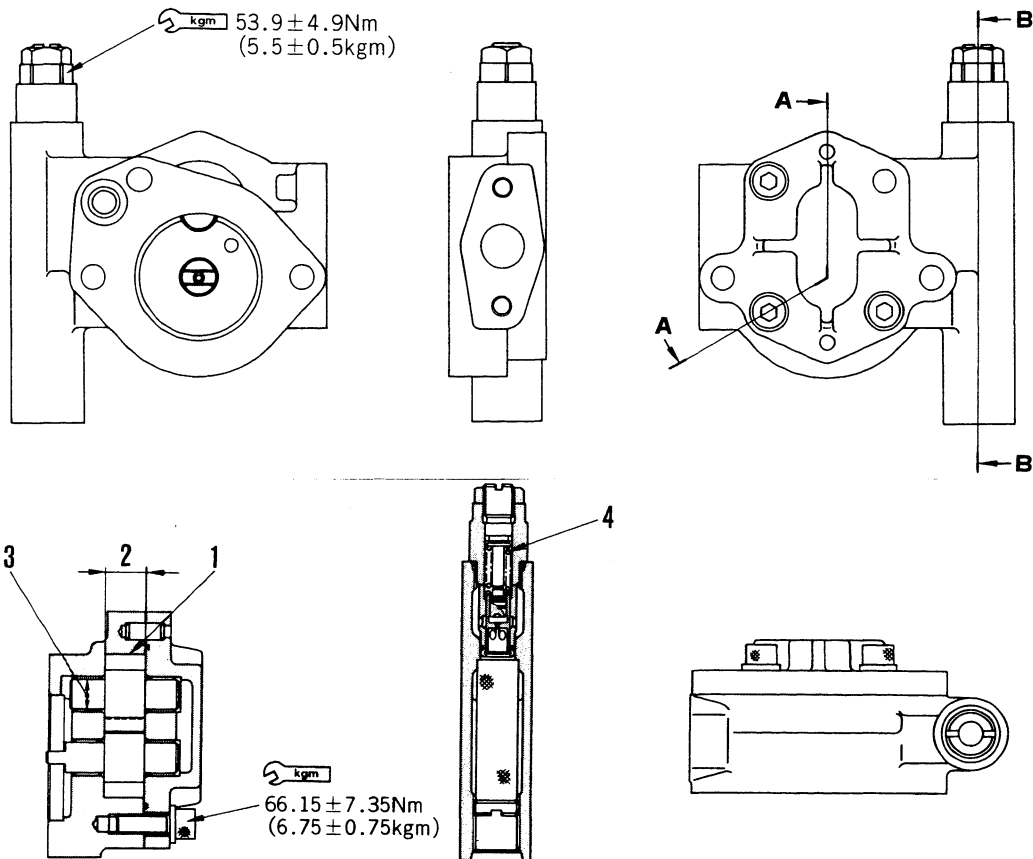



K20506

205F0626 I
Unit: mm

No.	Check item	Criteria					Remedy	
1	Radical clearance between gear and gear case	Standard clearance			Clearance limit		Replace	
		0.085 – 0.125			0.145			
2	Axial clearance between gear and gear case	0.040 – 0.050			0.105			
3	Clearance between gear shaft and bushing	0.045 – 0.098			0.13			
4	Control relief valve spring	Standard size			Repair limit			Replace spring if any damages or deformations are found.
		Free length x O.D.	Installed length	Installed load	Free length	Installed load		
		32.3 x 13	25.0	177.4 N (18.1 kg)	—	159.7 N (16.3 kg)		
—	Delivery: Engine oil: SAE30 Oil temperature: 45 – 55°C Oil pressure: 2.94 MPa (30 kg/cm ²)	Standard value			Repair limit		Replace	
		Revolution speed (rpm)		Delivery (ℓ/min)	Revolution speed (rpm)			Delivery (ℓ/min)
		3,200		46	3,200			43

MAINTENANCE STANDARD

CONTROL VALVE


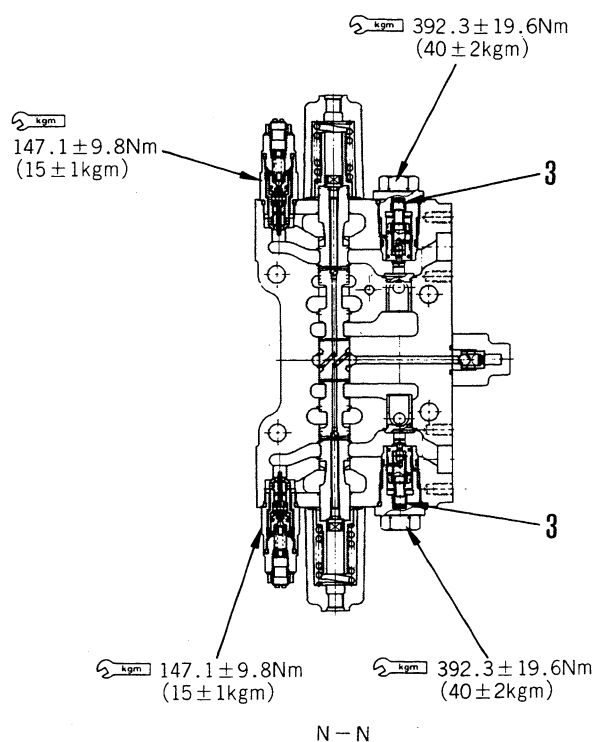
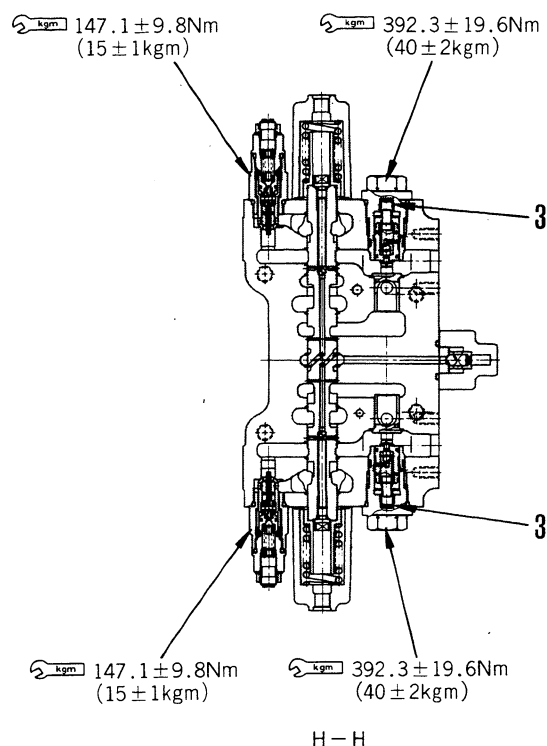


205F06266

Unit: mm

No.	Check item	Criteria					Remedy
1	Arm counterbalance valve spring	Standard size			Repair limit		Replace spring if any damages or deformations are found.
		Free length x O.D.	Installed length	Installed load	Free length	Installed load	
		70.8 x 16.1	55	192.1 N (19.6 kg)	—	153.9 N (15.7 kg)	
2	Regeneration valve spring	31.5 x 10.3	19.5	5.9 N (0.6 kg)	—	4.4 N (0.45 kg)	
3	Piston return spring	48.1 x 10.8	30	15.7 N (1.6 kg)	—	12.7 N (1.3 kg)	
4	Check valve spring	13.0 x 6.5	9.5	2.0 N (0.2 kg)	—	1.5 N (0.15 kg)	
5	Load spring	30.4 x 16.7	27	428.3 N (43.7 kg)	—	343 N (35.0 kg)	
6	Check valve spring	13.6 x 5.5	10	2.0 N (0.2 kg)	—	1.5 N (0.15 kg)	
7	Piston return spring	36.9 x 11.1	28	29.4 N (3 kg)	—	23.5 N (2.4 kg)	

4/4

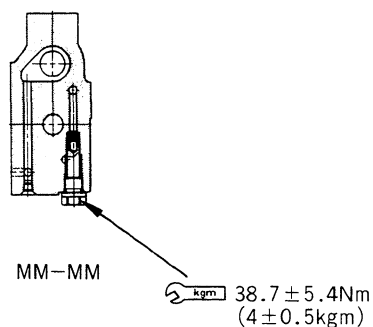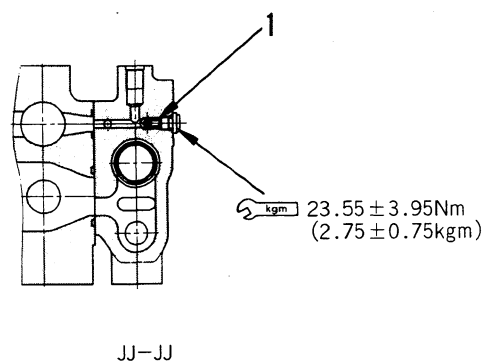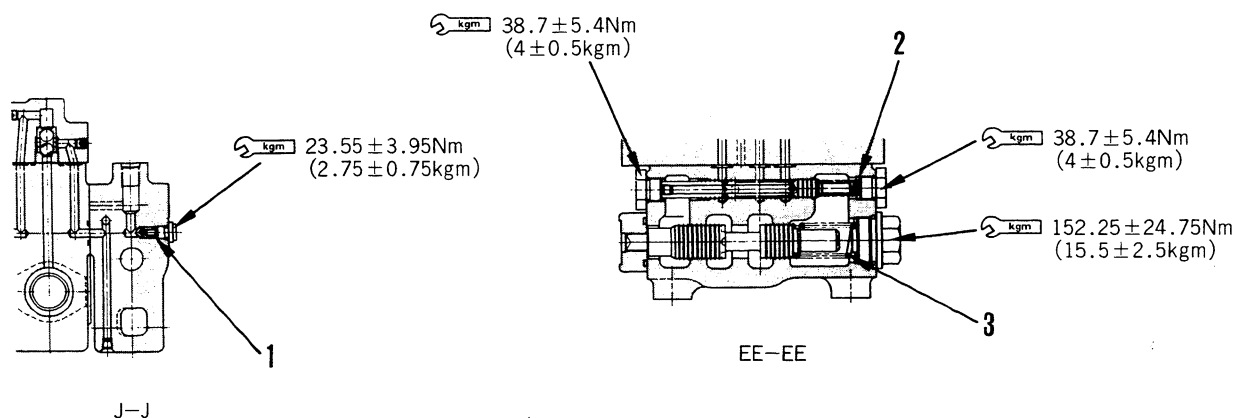


K20506

205F06267

Unit: mm

No.	Check item	Criteria					Remedy
1	Check valve spring	Standard size			Repair limit		Replace spring if any damages or deformations are found.
		Free length x O.D.	Installed length	Installed load	Free length	Installed load	
		11.5 x 4.6	8.5	1.5 N (0.15 kg)	—	1.2 N (0.12 kg)	
2	Spool return spring	65.5 x 27.2	50	167.6 N (17.1 kg)	—	134.3 N (13.7 kg)	
3	Spool return spring	13.6 x 5.5	10	2.0 N (0.2 kg)	—	1.5 N (0.15 kg)	

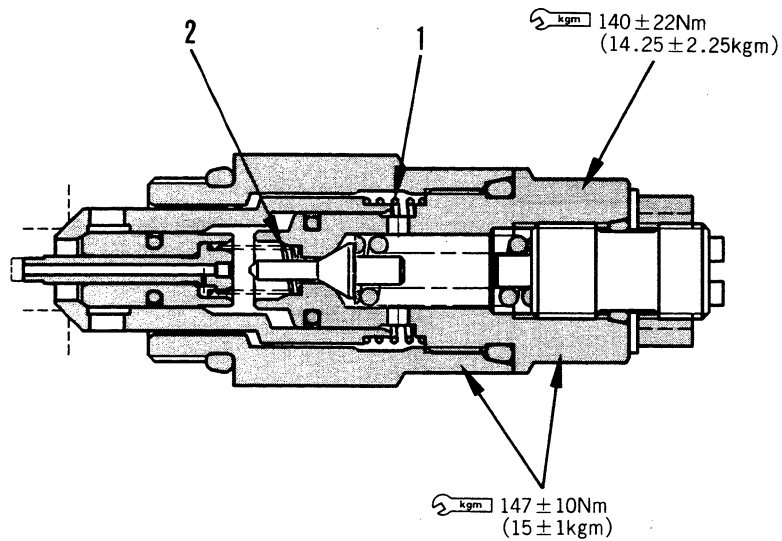


205F06268

K20506

Unit: mm

No.	Check item	Criteria					Remedy
1	Suction valve spring	Standard size			Repair limit		Replace spring if any damages or deformations are found.
		Free length x O.D.	Installed length	Installed load	Free length	Installed load	
		16.3 x 21.3	1.5	2.1 N (0.21 kg)	—	1.6 N (0.16 kg)	
2	Piston spring	20 x 7	14	2.1 N (0.21 kg)	—	1.6 N (0.16 kg)	

SWING MOTOR


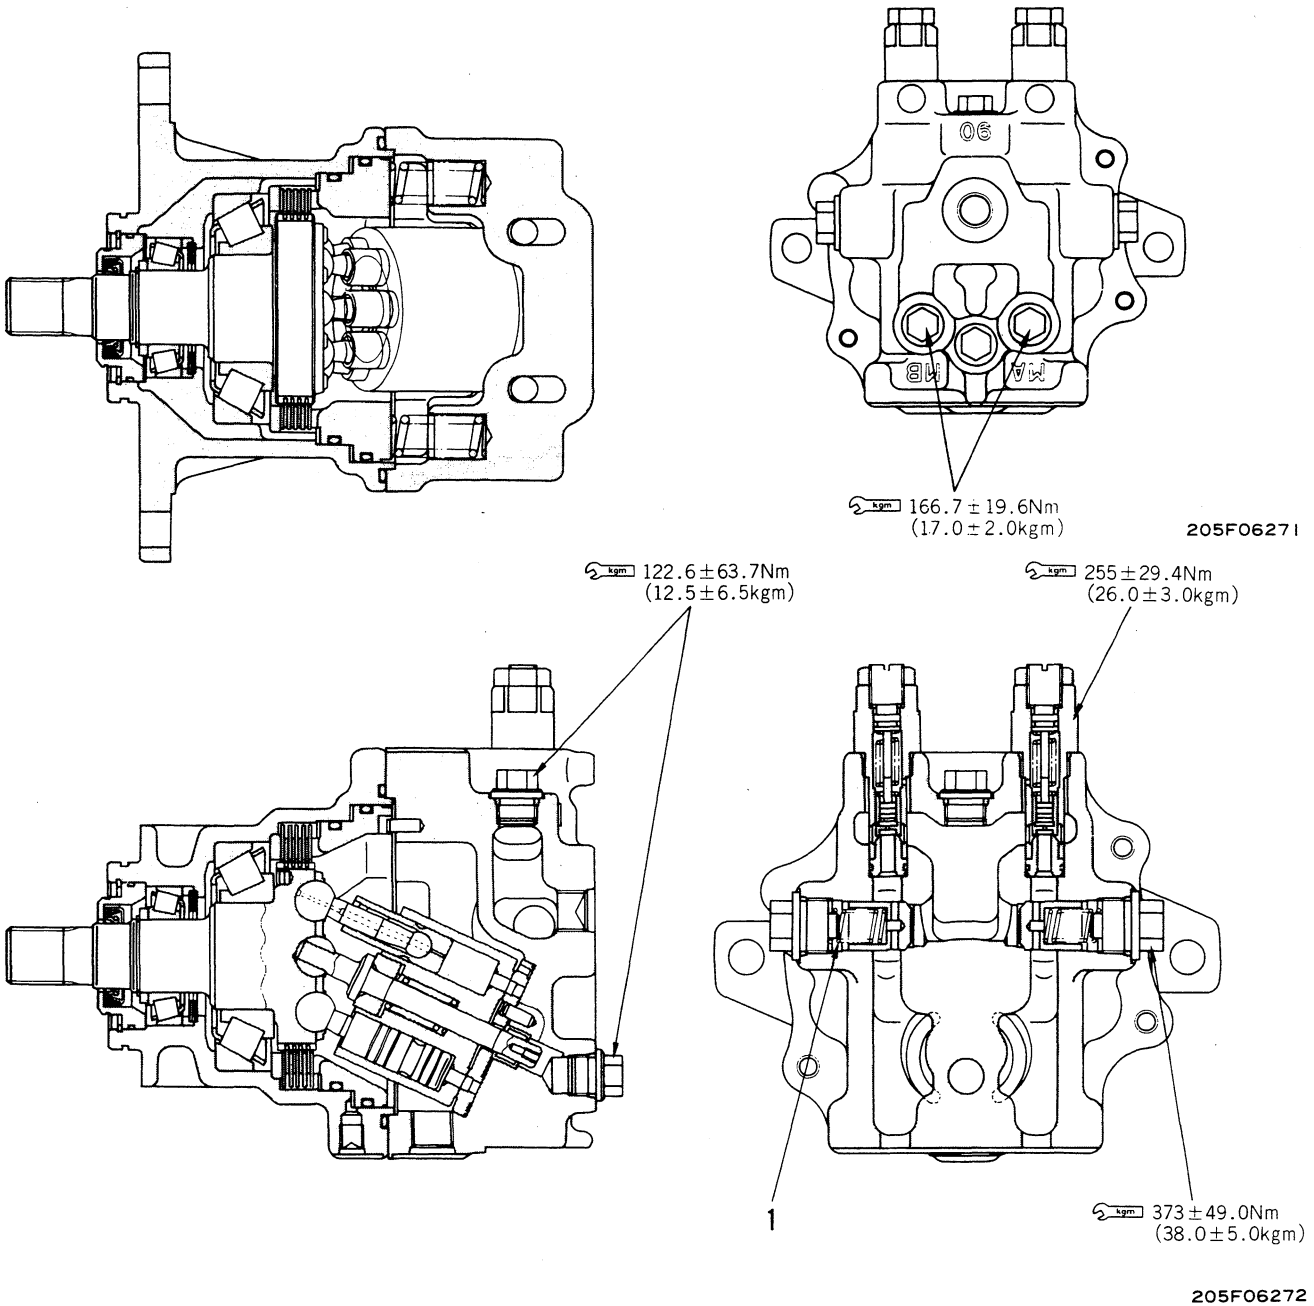


K20506


Unit: mm

No.	Check item	Criteria					Remedy
1	Check valve spring	Standard size			Repair limit		Replace spring if any damages or deformations are found.
		Free length x O.D.	Installed length	Installed load	Free length	Installed load	
		62.5 x 20.0	35.0	3.5 N (0.36 kg)	—	2.8 N (0.29 kg)	

TRAVEL MOTOR

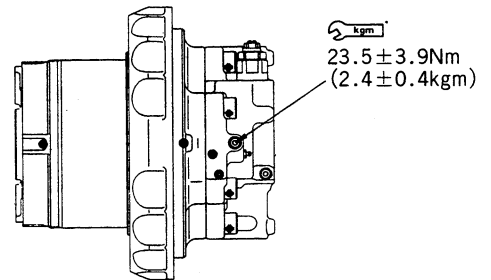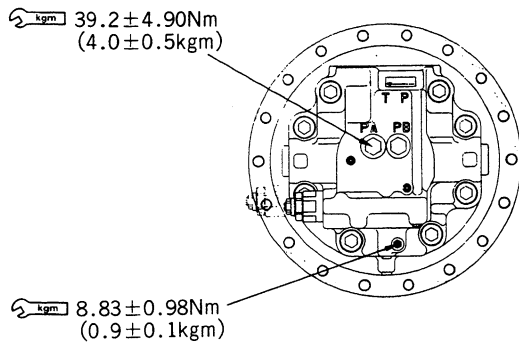

K20506

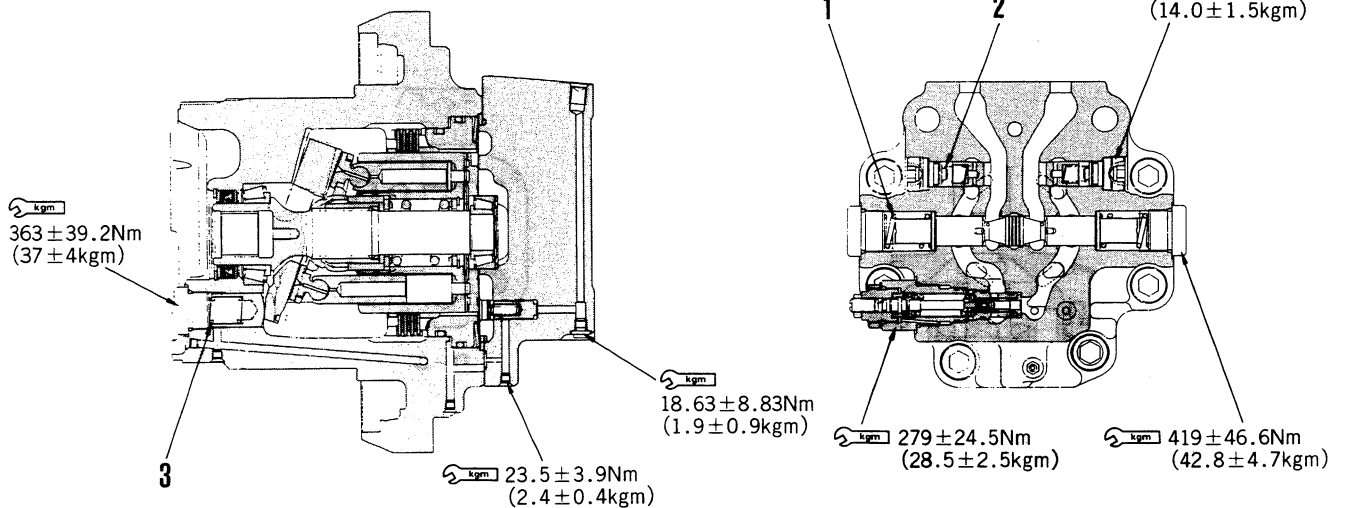

205F06275


Unit: mm

No.	Check item	Criteria					Remedy
1	Spool return spring	Standard size			Repair limit		Replace spring if any damages or deformations are found.
		Free length x O.D.	Installed length	Installed load	Free length	Installed load	
		58.43 x 30.0	42.0	426.3 N (43.5 kg)	—	341.0 N (34.8 kg)	
2	Check valve spring	33.0 x 13.8	23.0	1.3 N (0.13 kg)	—	1.0 N (0.10 kg)	
3	Regulator piston spring	61.1 x 23.2	30.0	398.9 N (40.7 kg)	—	319.5 N (32.6 kg)	

WORK EQUIPMENT, SWING PPC VALVE

PC210, 210LC-6K

PC240, 240LC, 240NLC-6K

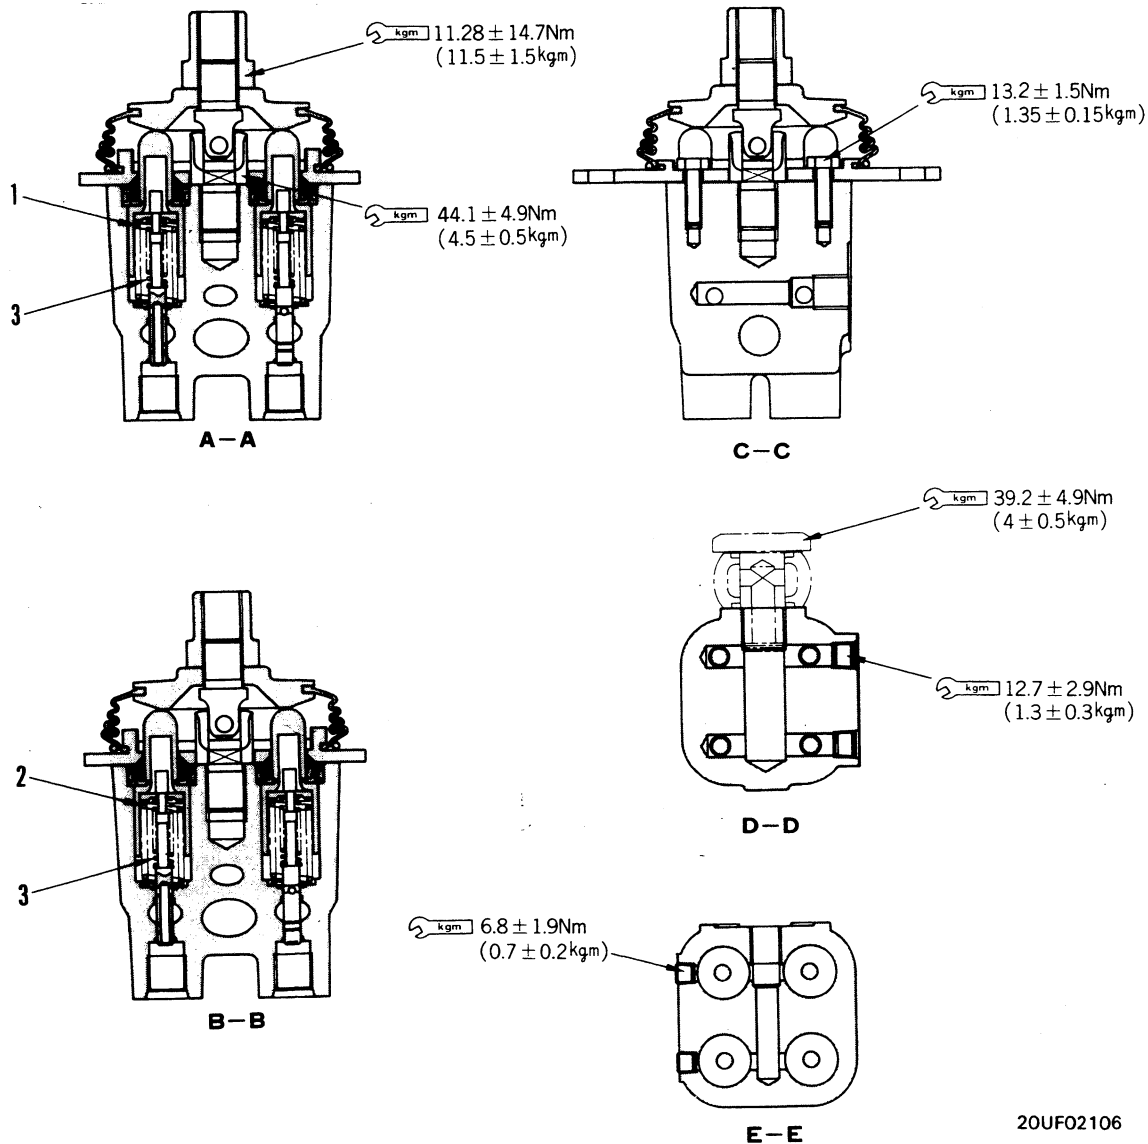


20UF02106

Unit: mm

No.	Check item	Criteria				Remedy
1	Centering spring (for P3, P4)	Standard size			Repair limit	
		Free length x O.D.	Installed length	Installed load	Free length	Installed load
		42.4 x 15.5	34	17.6 N (1.8 kg)	—	13.7 N (1.4 kg)
2	Centering spring (for P1, P2)	44.4 x 15.5	34	29.4 N (3.0 kg)	—	23.5 N (2.4 kg)
3	Metering spring	26.5 x 8.2	24.9	16.7 N (1.7 kg)	—	13.7 N (1.4 kg)

Replace
spring if any
damages or
deformations
are found.

TRAVEL PPC VALVE

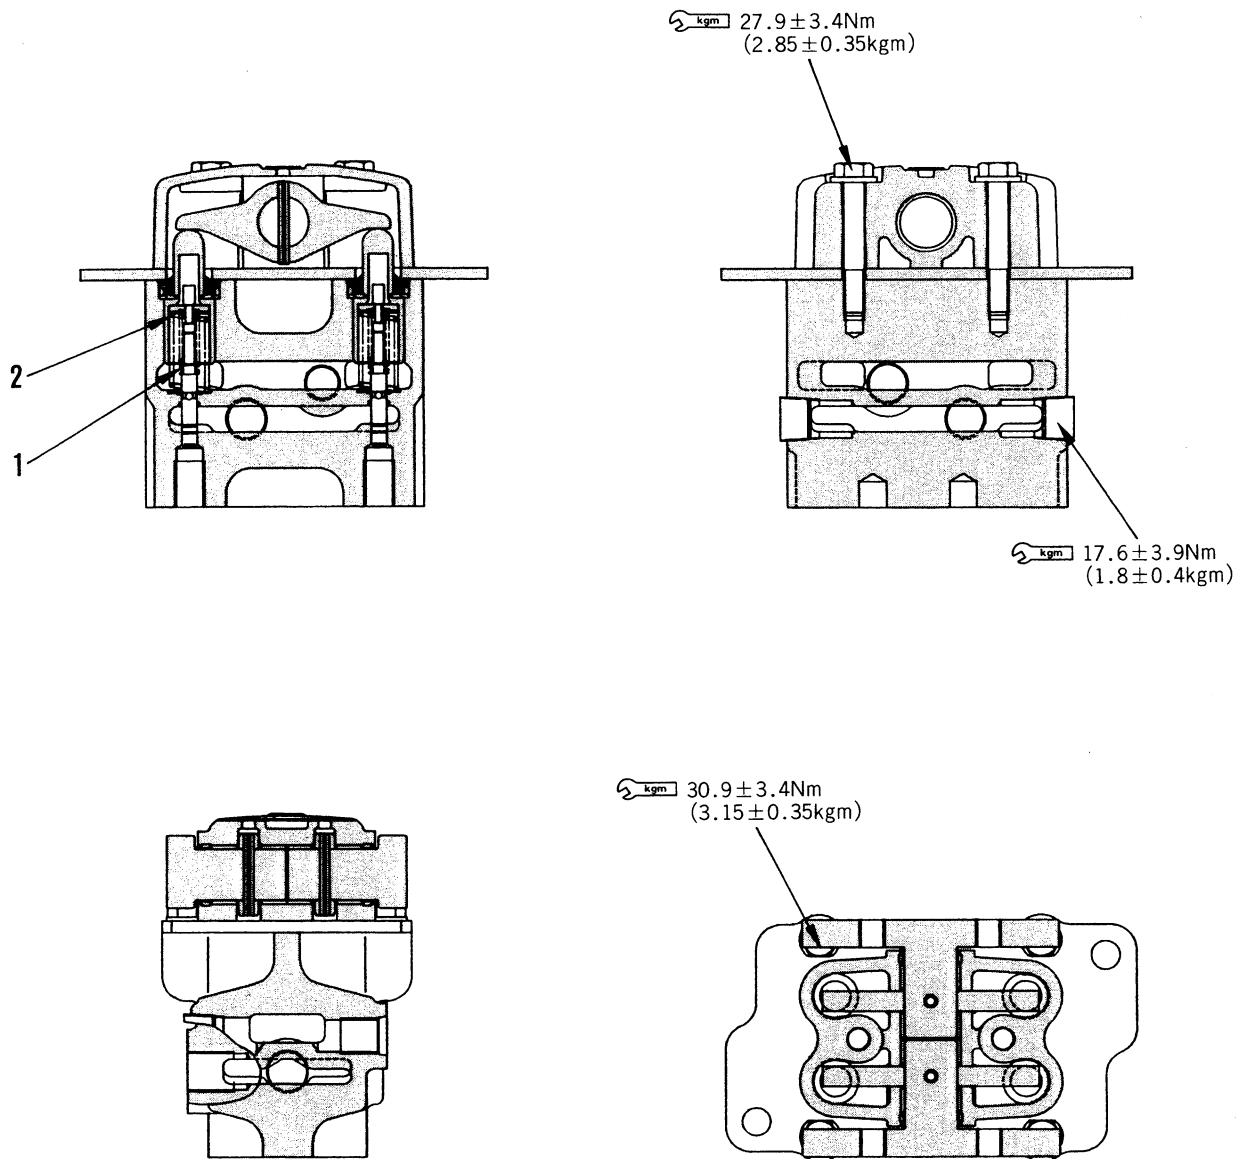


K20506

205F06277

Unit: mm

No.	Check item	Criteria					Remedy
1	Metering spring	Standard size			Repair limit		Replace spring if any damages or deformations are found.
		Free length x O.D.	Installed length	Installed load	Free length	Installed load	
		26.5 x 8.15	24.7	16.7 N (1.7 kg)	—	13.7 N (1.4 kg)	
2	Centering spring	48.1 x 15.5	32.5	107.8 N (11 kg)	—	86.2 N (8.8 kg)	


PPC SHUTTLE, TRAVEL JUNCTION VALVE

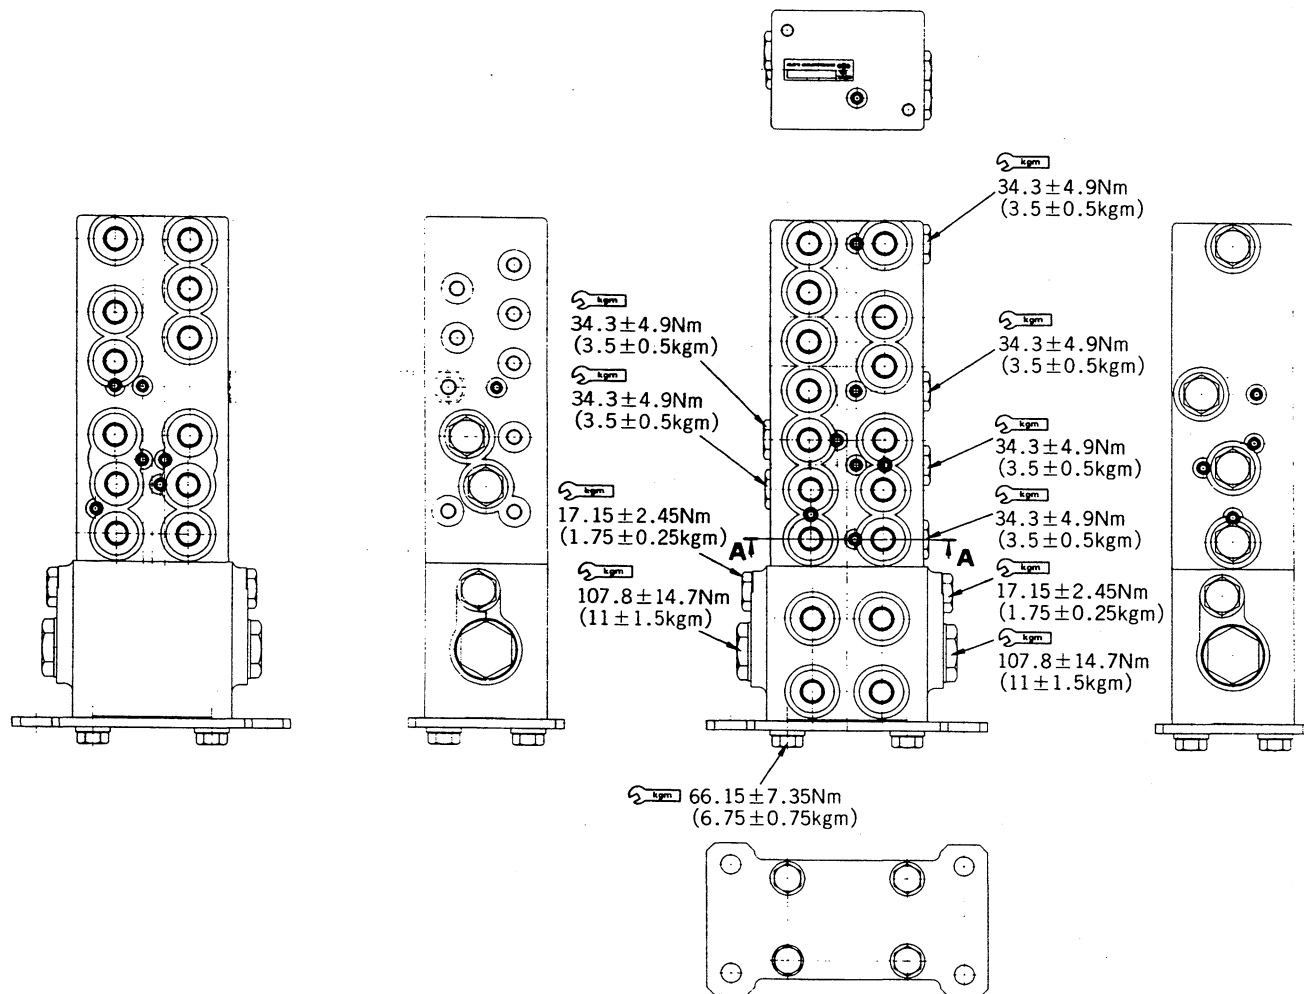

K20506

205F06269

K20506

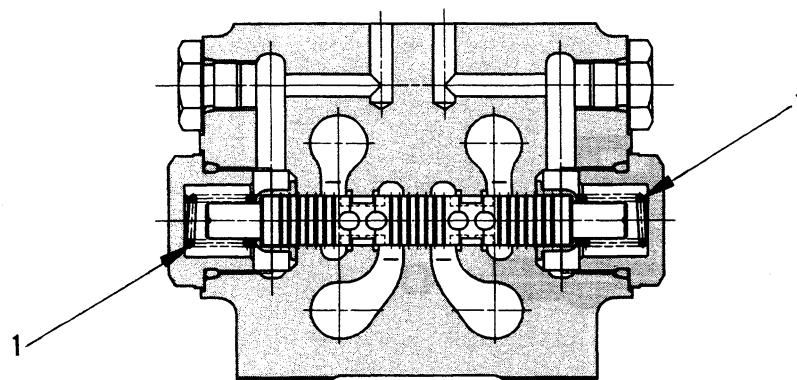

A-A


205F06270

Unit: mm

No.	Check item	Criteria					Remedy
1	Spool return spring	Standard size			Repair limit		Replace spring if any damages or deformations are found.
		Free length x O.D.	Installed length	Installed load	Free length	Installed load	
		23.6 x 13.3	20	14.7 N (1.5 kg)	—	11.8 N (1.2 kg)	

EPC, SOLENOID VALVE

LS CONTROL EPC VALVE

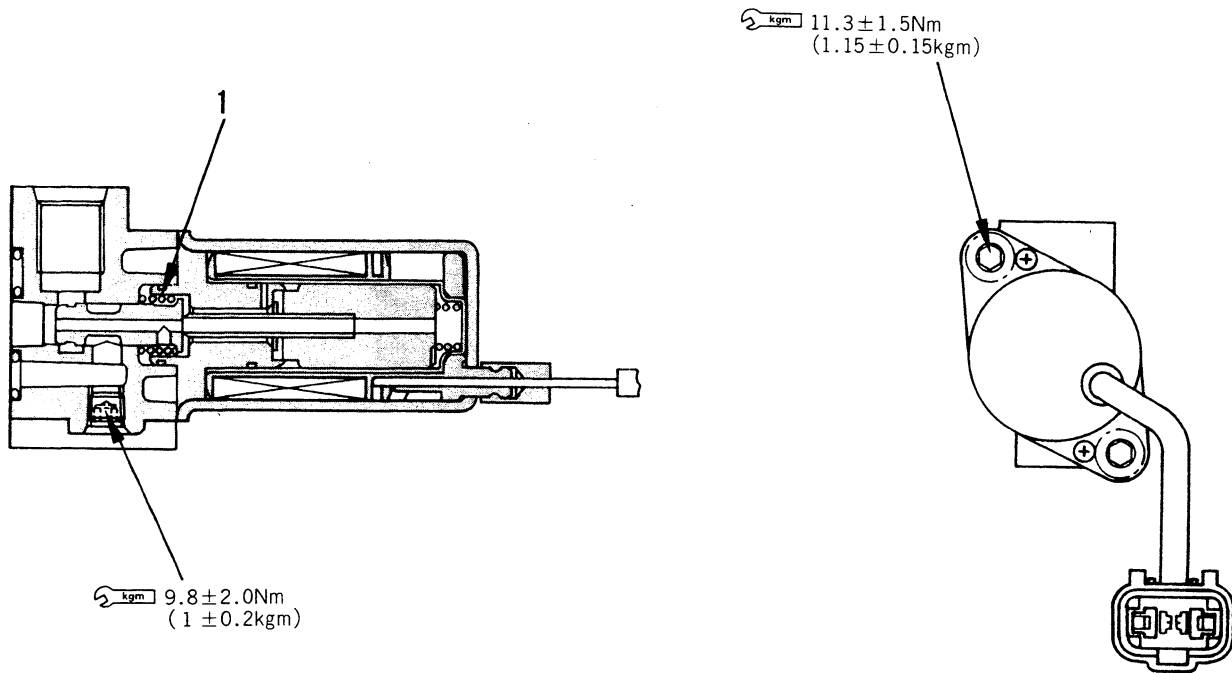

205F06278


K20506

Unit: mm

No.	Check item	Criteria					Remedy
1	Return spring	Standard size			Repair limit		Replace EPC valve assembly if any damages or deformations are found.
		Free length x O.D.	Installed length	Installed load	Free length	Installed load	
		9.0 x 11.4	7.9	3.1 N (0.32 kg)	—	—	

CENTER SWIVEL JOINT

4 PORT SWIVEL JOINT

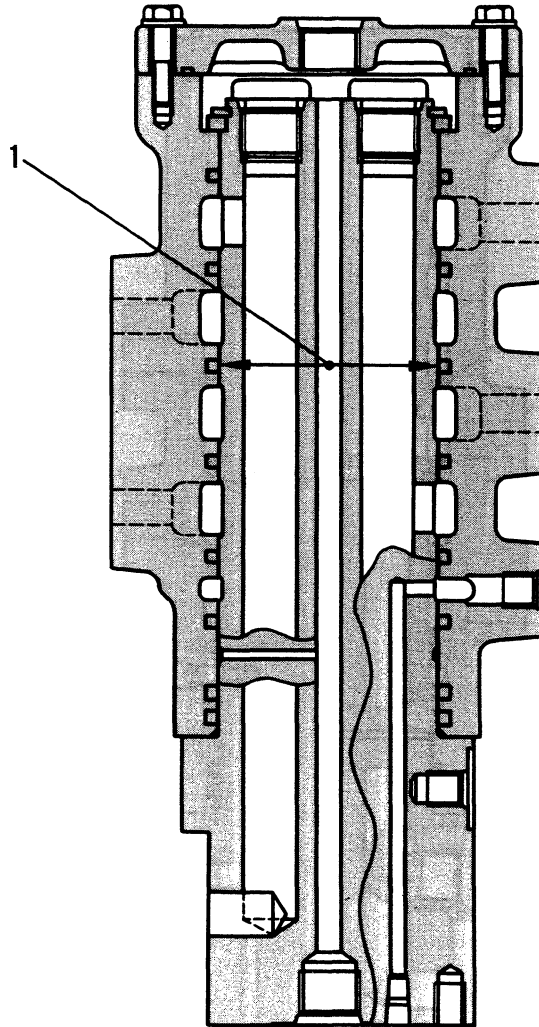


205F06273

K20506

Unit: mm

No.	Check item	Criteria			Remedy
		Standard size	Standard clearance	Clearance limit	
1	Clearance between rotor and shaft	90	0.056 – 0.105	0.111	Replace

6 PORT SWIVEL JOINT

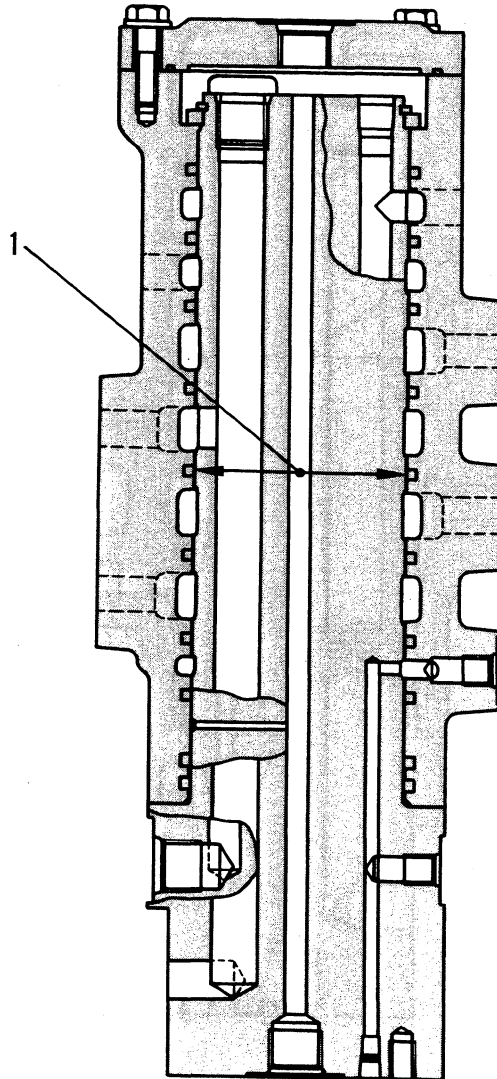

205F06274

K20506


Unit: mm

No.	Check item	Criteria			Remedy
		Standard size	Standard clearance	Clearance limit	
1	Clearance between rotor and shaft	100	0.056 – 0.105	0.111	Replace

HYDRAULIC CYLINDER


PC210 • 240LC-6

BOOM CYLINDER

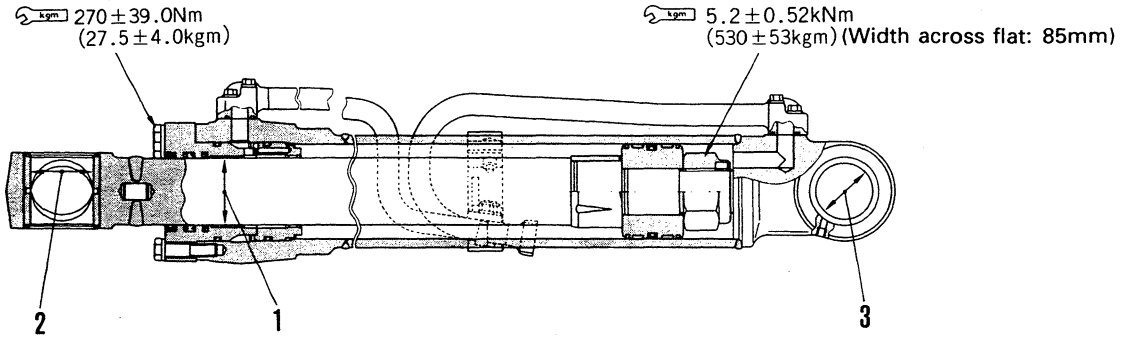


205F06279

ARM CYLINDER

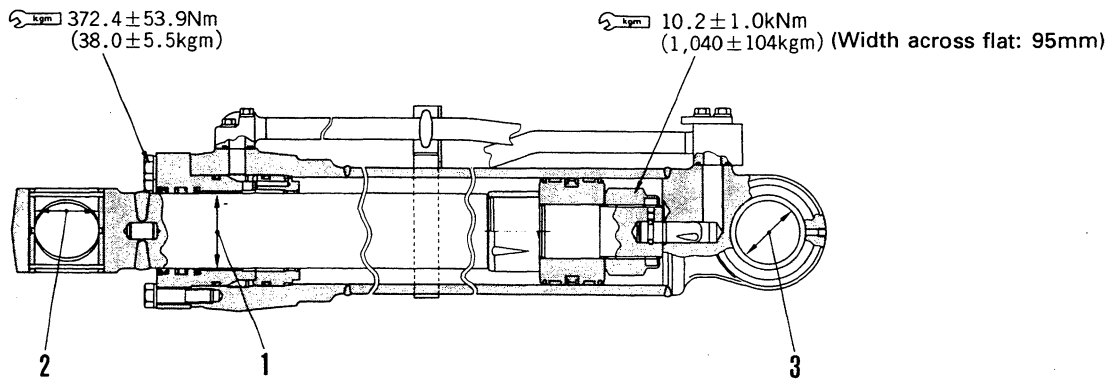

205F06280

BUCKET CYLINDER

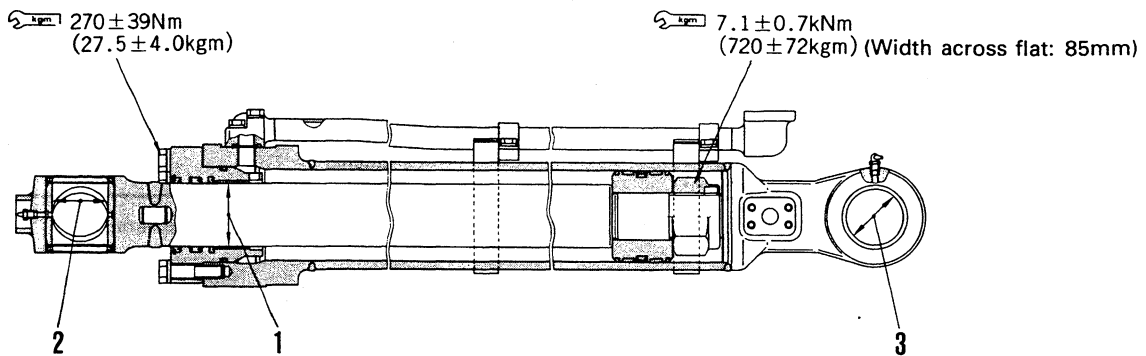

205F06281


K20506

Unit: mm

No	Check item	Cylinder	Standard size	Tolerance		Standard clearance	Clearance limit	Remedy
				Shaft	Hole		Limit of bush size	
1	Clearance between piston rod and bushing	Boom	85	-0.036 -0.090	+0.222 +0.047	0.083 - 0.312	0.412	Replace bushing
		Arm	95	-0.036 -0.090	+0.222 +0.047	0.083 - 0.312	0.412	
		Bucket	85	-0.030 -0.076	+0.222 +0.047	0.078 - 0.334	0.434	
2	Clearance between piston rod support pin and bushing	Boom	80	-0.030 -0.060	+0.211 +0.124	0.154 - 0.271	81.2	Replace pin and bushing
		Arm	80	-0.030 -0.076	+0.457 +0.370	0.400 - 0.533	82	
		Bucket	70	-0.030 -0.076	+0.424 +0.350	0.380 - 0.500	72	
3	Clearance between cylinder bottom support pin and bushing	Boom	70	-0.030 -0.060	+0.104 +0.043	0.073 - 0.164	71.2	Replace pin and bushing
		Arm	80	-0.030 -0.076	+0.457 +0.370	0.400 - 0.523	82	
		Bucket	70	-0.030 -0.076	+0.424 +0.350	0.380 - 0.500	72	


PC240, 240LC, 240NLC-6

BOOM CYLINDER

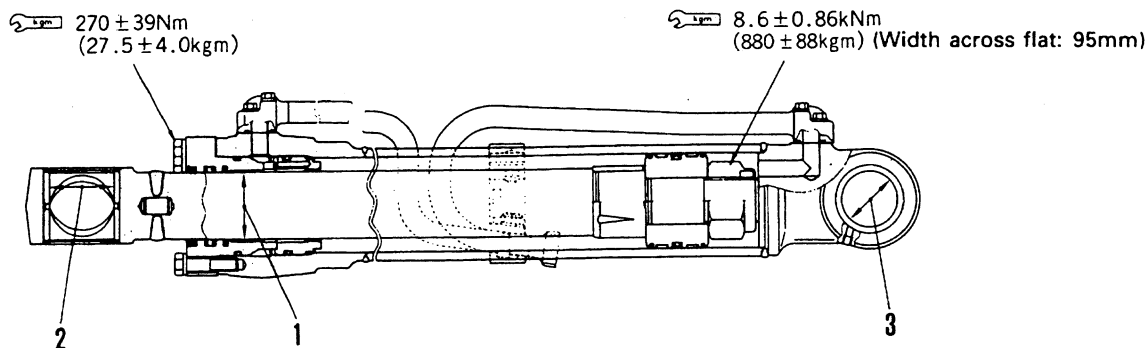


205F06279

ARM CYLINDER

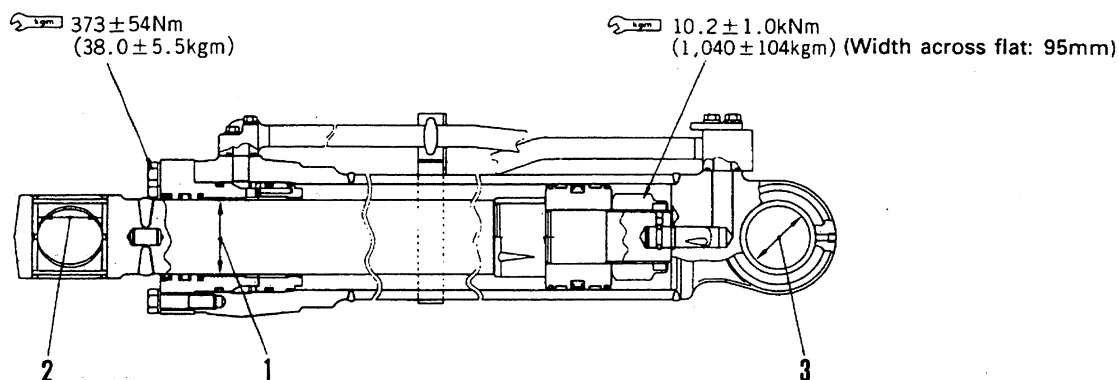

205F06280

BUCKET CYLINDER

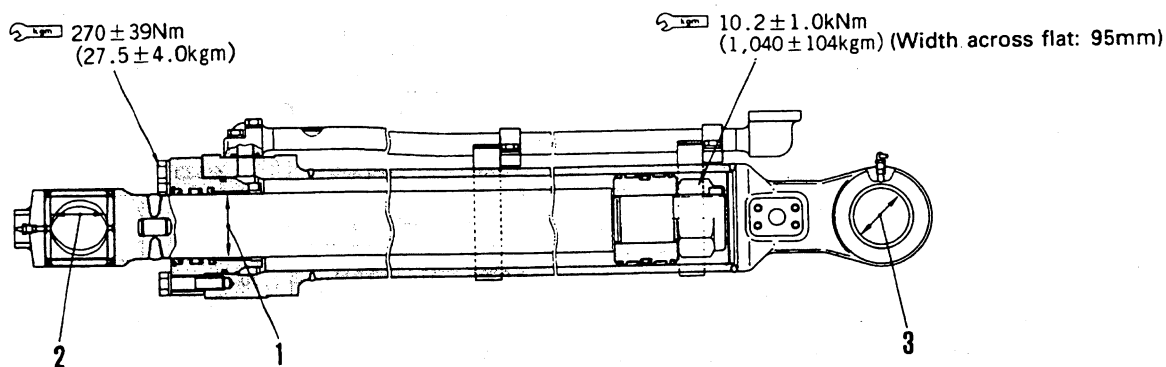


205F06281

K20506












Unit: mm

No.	Check item	Criteria						Remedy
		Cylinder	Standard size	Tolerance		Standard clearance	Clearance limit Limit of bush size	
				Shaft	Hole			
1	Clearance between piston rod and bushing	Boom	95	-0.036 -0.090	+0.257 +0.048	0.084 – 0.347	0.447	Replace bushing
		Arm	100	-0.036 -0.090	+0.257 +0.047	0.083 – 0.347	0.447	
		Bucket	100	-0.036 -0.090	+0.252 +0.047	0.084 – 0.347	0.447	
2	Clearance between piston rod support pin and bushing	Boom	80	-0.030 -0.060	+0.211 +0.124	0.154 – 0.271	81.2	Replace pin and bushing
		Arm	80	-0.030 -0.076	+0.457 +0.370	0.400 – 0.533	82	
		Bucket	80	-0.030 -0.076	+0.457 +0.370	0.400 – 0.533	82	
3	Clearance between cylinder bottom support pin and bushing	Boom	80	-0.030 -0.076	+0.211 +0.124	0.400 – 0.533	81.2	
		Arm	80	-0.030 -0.076	+0.457 +0.370	0.400 – 0.533	82	
		Bucket	80	-0.030 -0.076	+0.457 +0.370	0.400 – 0.533	82	

WORK EQUIPMENT

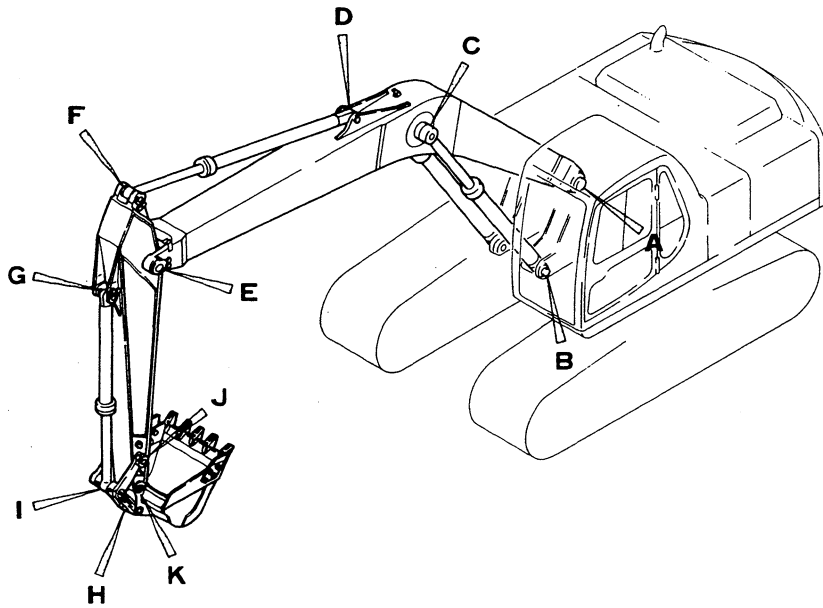

205F06282

 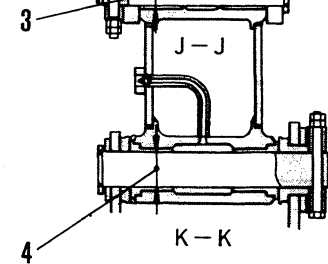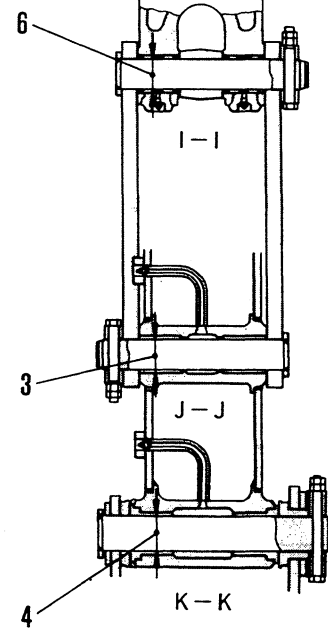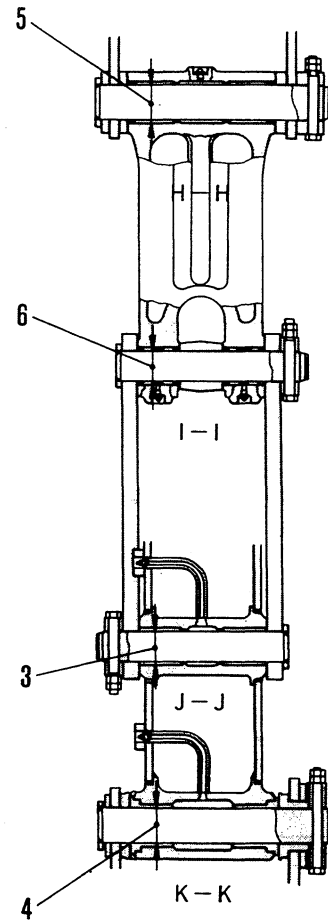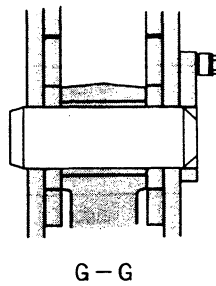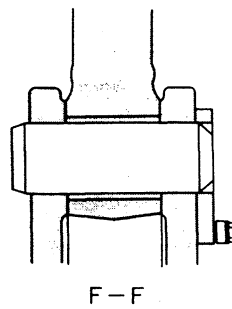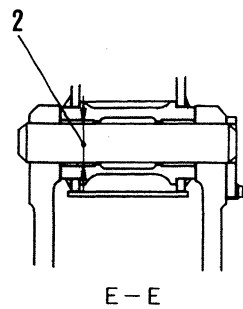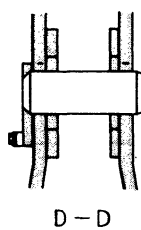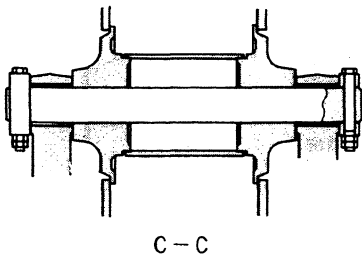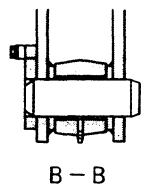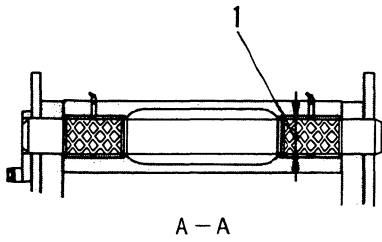


205F06283

K20506


Unit: mm

No	Check item	Cylinder	Standard size	Tolerance		Standard clearance	Clearance limit Limit of bush size	Remedy
				Shaft	Hole			
1	Clearance between piston rod and bushing	Boom	95	-0.036 -0.090	+0.257 +0.048	0.084 - 0.347	0.447	Replace bushing
		Arm	100	-0.036 -0.090	+0.257 +0.047	0.083 - 0.347	0.447	
		Bucket	100	-0.036 -0.090	+0.252 +0.047	0.084 - 0.347	0.447	
2	Clearance between piston rod support pin and bushing	Boom	80	-0.030 -0.060	+0.211 +0.124	0.154 - 0.271	81.2	Replace pin and bushing
		Arm	80	-0.030 -0.076	+0.457 +0.370	0.400 - 0.533	82	
		Bucket	80	-0.030 -0.076	+0.457 +0.370	0.400 - 0.533	82	
3	Clearance between cylinder bottom support pin and bushing	Boom	80	-0.030 -0.076	+0.103 +0.041	0.071 - 0.179	81.2	Replace pin and bushing
		Arm	80	-0.030 -0.076	+0.457 +0.370	0.400 - 0.533	82	
		Bucket	80	-0.030 -0.076	+0.457 +0.370	0.400 - 0.533	82	


WORK EQUIPMENT

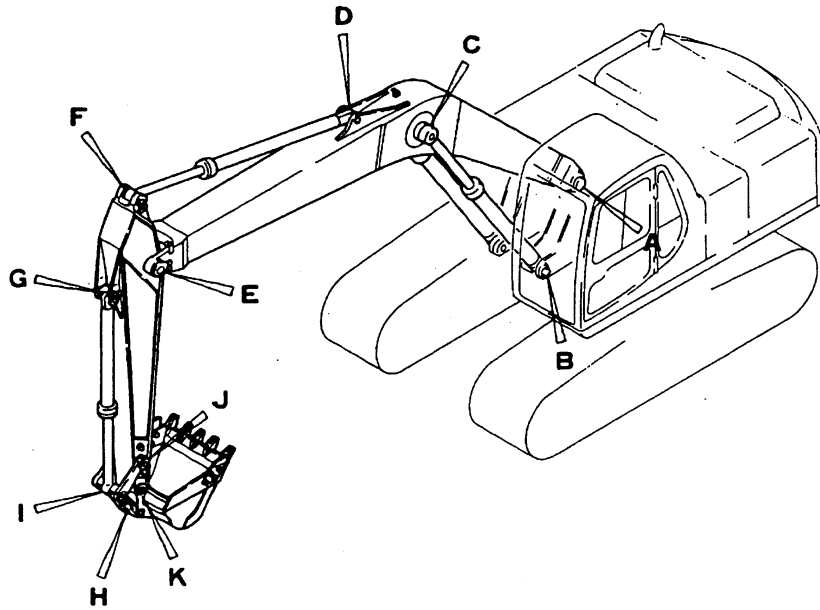


205F06282

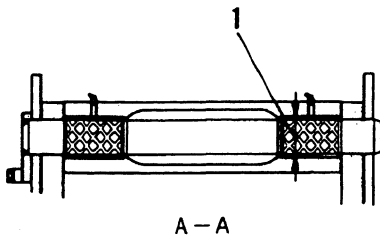


A-A

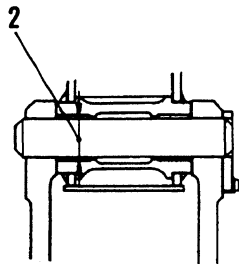


E-E

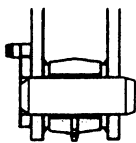


B-B

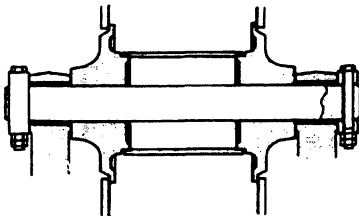


C-C

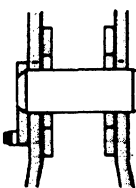


D-D

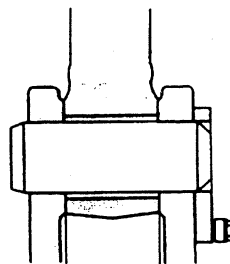

F-F

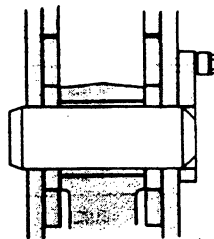

G-G

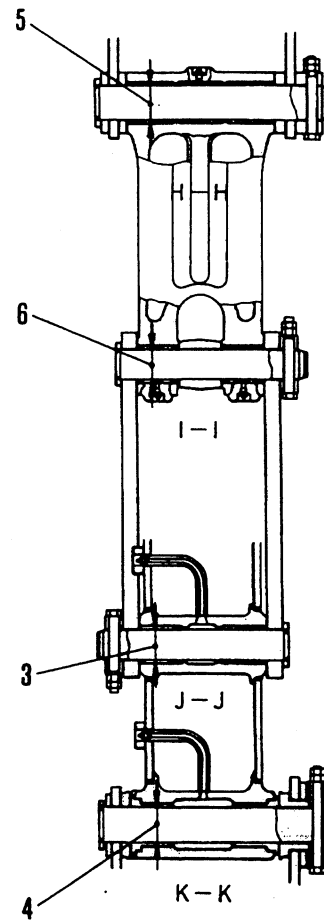

205F06283

Unit: mm

No	Check item	Criteria					Remedy
1	Clearance between connecting pin and bushing of revolving frame and boom	Standard size	Tolerance		Standard clearance	Limit of bush size	Replace bush and pin
			Shaft	Hole			
		90 (PC210) 100 (PC240)	-0.036 -0.071	+0.104 +0.043 +0.103 +0.041	+0.079 +0.175 +0.077 +0.174	91.2 101.2	
2	Clearance between connecting pin and bushing of boom and arm	90	-0.036 -0.071	+0.153 +0.097	0.133 - 0.224	91.2	
3	Clearance between conneting pin and bushing of arm and link	70 (PC210)	-0.030	+0.335	0.305 -	72	
		80 (PC240)	-0.076	+0.275	0.411	82	
4	Clearance between connecting pin and bushing of arm and bucket	80	-0.030 -0.076	+0.337 +0.273	0.303 - 0.413	82	
5	Clearance between connecting pin and bushing of link and bucket	80	-0.030 -0.076	+0.337 +0.273	0.303 - 0.413	82	
6	Clearance between connecting pin and bushing of link and link	70 (PC210)	-0.030	+0.335	0.303 -	72	
		80 (PC210)	-0.076	+0.275	0.411	82	

Technical drawing of a mechanical assembly, likely a pump or valve component, showing a side view and three cross-sectional views (Z-Z, Y-Y, and X-X).

Side View Dimensions:

- Overall length: 19
- Distance from left end to first joint: 9
- Distance from left end to second joint: 11
- Distance from left end to third joint: 12
- Distance from left end to fourth joint: 13
- Distance from left end to fifth joint: 10
- Distance from left end to sixth joint: 14
- Distance from left end to seventh joint: 8
- Distance from left end to eighth joint: 7
- Distance from left end to ninth joint: 5
- Distance from left end to tenth joint: 6

Cross-Sectional Views:

- Z-Z:** Shows a vertical section with a width of 15 and a height of 16.
- Y-Y:** Shows a vertical section with a width of 17 and a height of 18.
- X-X:** Shows a horizontal section with a width of 4 and a height of 3.

Section Lines:

- Z-Z:** Indicated by a line with arrows pointing to the section line.
- Y-Y:** Indicated by a line with arrows pointing to the section line.
- X-X:** Indicated by a line with arrows pointing to the section line.

40-40

MAINTENANCE STANDARD

WORK EQUIPMENT

Unit: mm


No.	Check item	Criteria		Remedy
		PC210-6	PC240-6	
1		$\phi 80^{+0.1}_0$	$\phi 80^{+0.1}_0$	
2		$107.3^{+1.5}_0$	$107.3^{+1.5}_0$	
3		$310^{+0.5}_0$	$310^{+0.5}_0$	
4		$\phi 90^{-0.036}_{-0.071}$	$\phi 90^{-0.036}_{-0.071}$	
5		361.7 ± 1	403.9 ± 1	
6		187.2 ± 0.5	200 ± 0.5	
7		829.1 ± 1	920 ± 1	
8		2,919	3,038	
9		$2,631.3 \pm 1$	$2,563.2 \pm 1$	
10		410 ± 1	465 ± 1	
11		640 ± 0.2	585 ± 0.2	
12		600 ± 0.5	600 ± 0.5	
15		$\phi 80$	$\phi 80$	
16		326.5 ± 1	326.5 ± 1	
17		$\phi 80$	$\phi 80$	
18	Arm width	$311^{0}_{-0.5}$	$311^{0}_{-0.5}$	
	Bushing installed	325	325	
19	Min.	1,691	1,617	
	Max.	2,801	2,626	



K20506

ELECTRICAL WIRING DIAGRAM

PC210, 210LC-6K
PC240, 240LC, 240NLC-6K

K20506

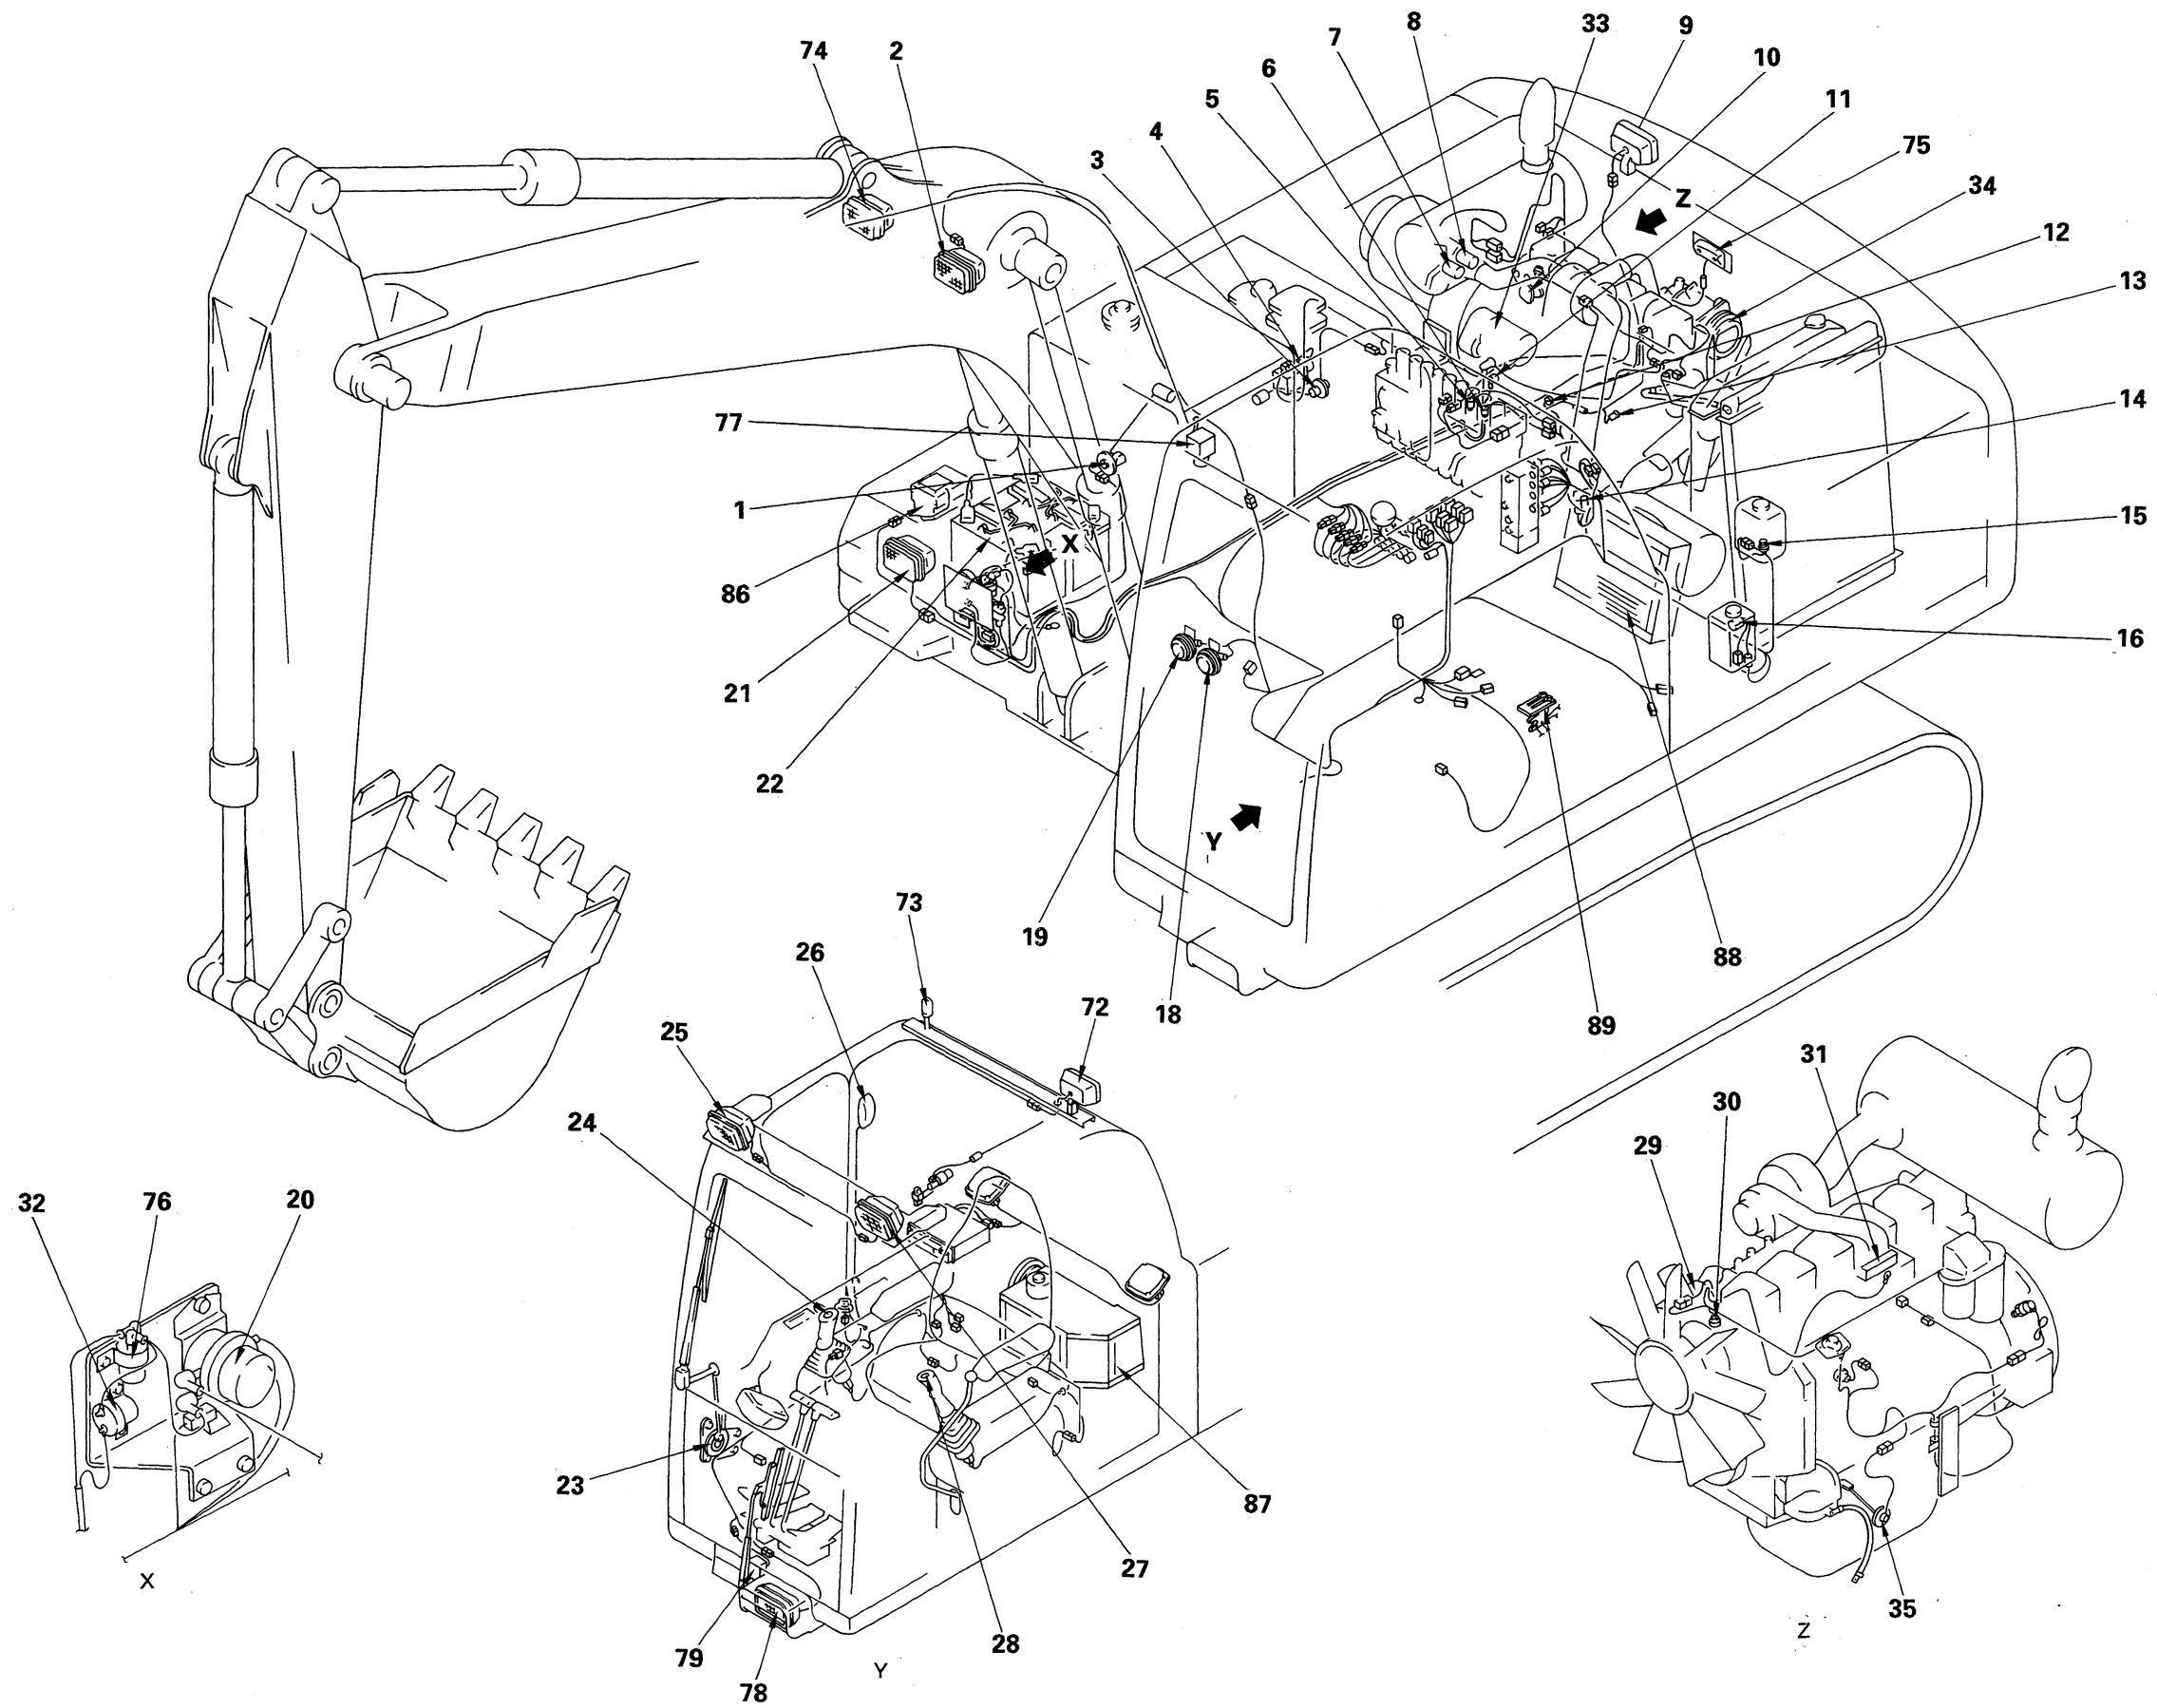

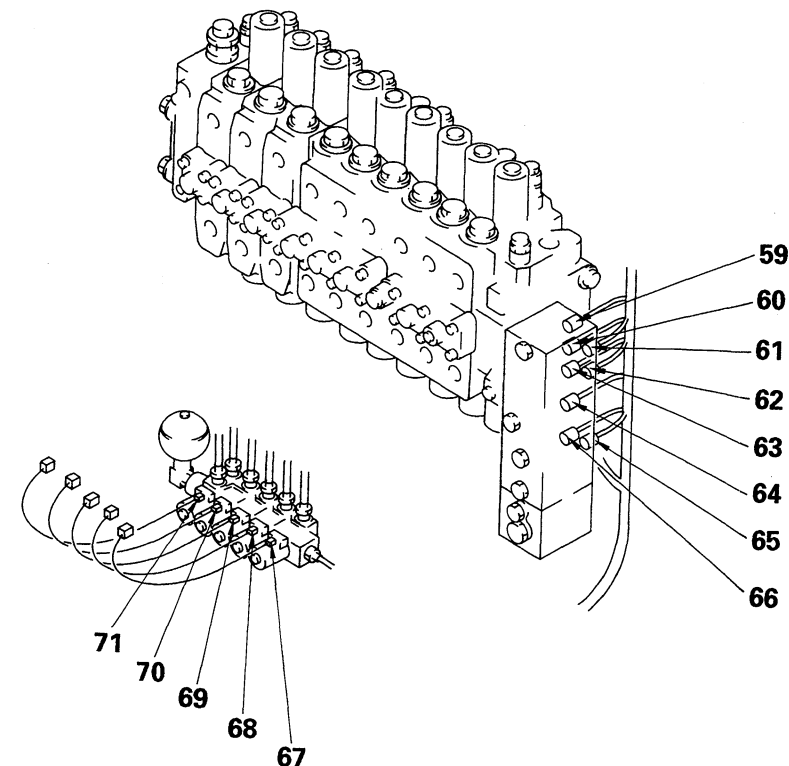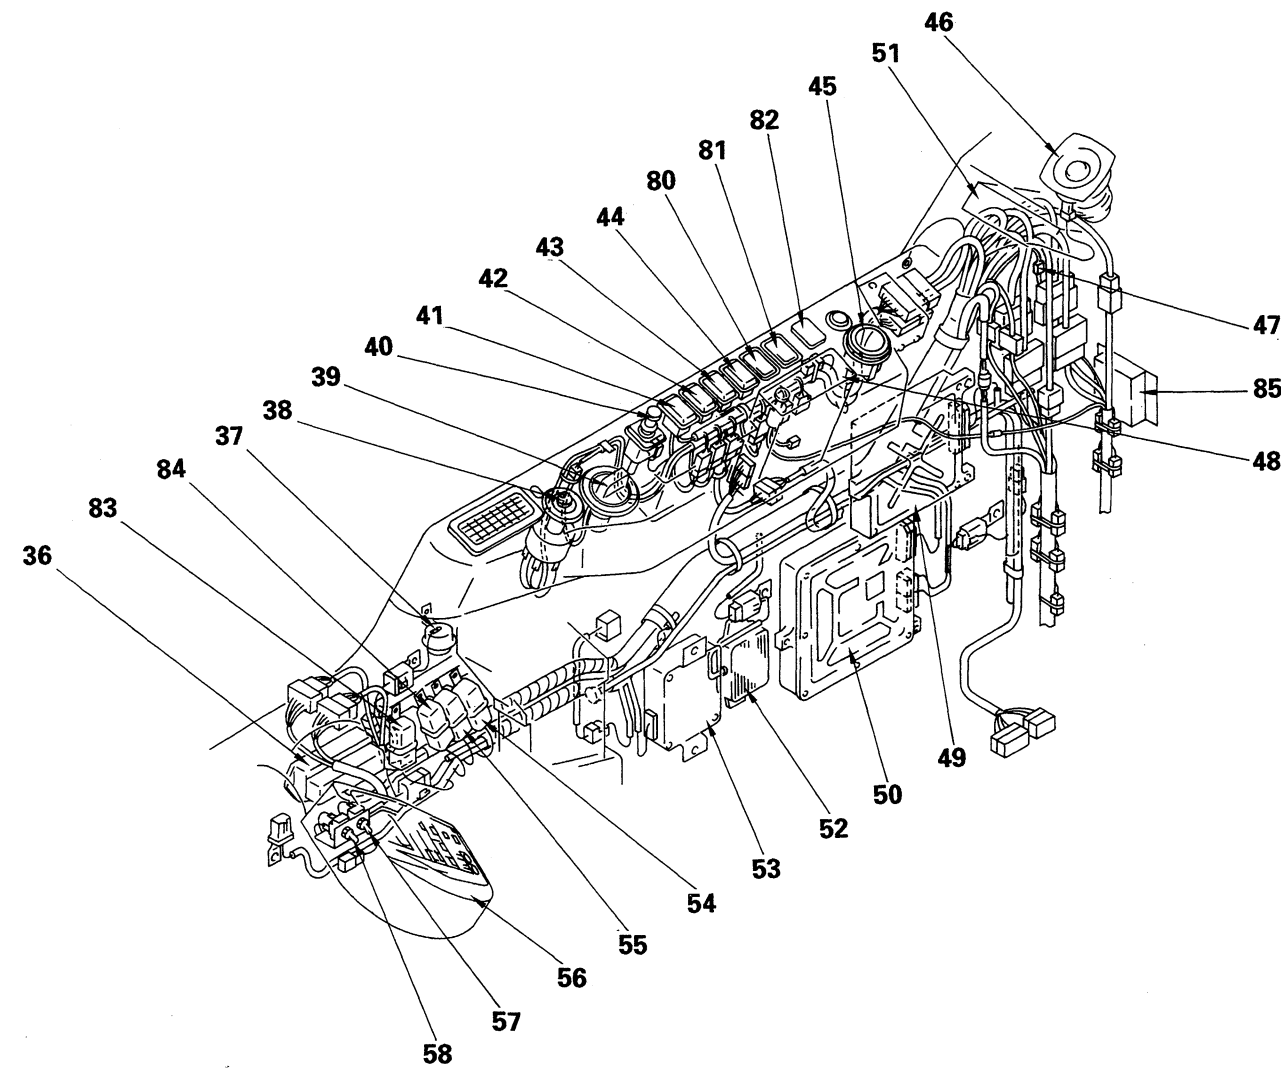


1. Fuel level sensor
2. Working light
3. Hydraulic oil level sensor
4. LS control EPC valve
5. Rear pump pressure sensor
6. Front pump pressure sensor
7. Rear pump TVC valve
8. Front pump TVC valve
9. Rear working light
10. Governor motor
11. Engine speed sensor
12. Engine oil pressure sensor (Hi)
13. Engine oil pressure sensor (Lo)
14. Air cleaner clogging sensor
15. Coolant lever sensor
16. Window washer motor
17. Horn (high tone)
18. Horn (low tone)
19. Battery relay
20. R.H. head light
21. Battery
22. Wiper motor
23. Horn switch
24. R.H. additional light
25. Room lamp
26. L.H. additional light
27. L.H. knob switch
28. Alternator
29. Coolant temperature sensor
30. Electrical intake air heater
31. Heater relay
32. Starting motor
33. Air conditioner compressor
34. Engine oil level sensor
35. Fuse box
36. Caution buzzer
37. Starting switch
38. Fuel control dial
39. Cigarette lighter
40. Swing lock switch
41. Wiper switch
42. Light switch
43. Buzzer cancel switch
44. Service meter
45. Speaker
46. Kerosene mode connector
47. Heater control panel (Air conditioner option)
48. Engine throttle controller
49. Pump controller
50. Radio
51. TVC prolix resistor
52. Wiper motor controller
53. Additional light relay (Cab)
54. Light relay (Boom, R.H. deck, Engine room)
55. Monitor panel
56. Swing lock prolix switch
57. TVC prolix switch
58. Swing oil pressure switch
59. Bucket CURL oil pressure switch
60. Bucket DUMP oil pressure switch
61. Arm IN oil pressure switch
62. Boom LOWER oil pressure switch
63. Arm OUT oil pressure switch
64. Travel oil pressure switch
65. Boom RAISE oil pressure switch
66. Swing brake solenoid valve
67. Travel speed solenoid valve
68. Pump merge-divider solenoid valve
69. 2-stage relief solenoid valve
70. LS select solenoid valve
71. Rear additional lamp
72. Beacon connector
73. R.H. boom working light
74. Engine room lamp
75. Safety relay
76. Overload caution switch
77. L.H. deck additional lamp
78. Lower wiper motor
79. Lower wiper switch
80. Beacon switch
81. Heated seat switch
82. Lower wiper relay
83. Additional light relay (CWT L.H. deck)
84. Voltage dropper (Rear radio)
85. Re fuelling pump
86. Heater (Air conditioner option)
87. Air conditioner condensor fan
88. Air conditioner pressure switch



ELECTRICAL WIRING DIAGRAM

<https://truckmanualshub.com/>

PC210, 210LC-6K
PC240, 240LC, 240NLC-6K

K20506

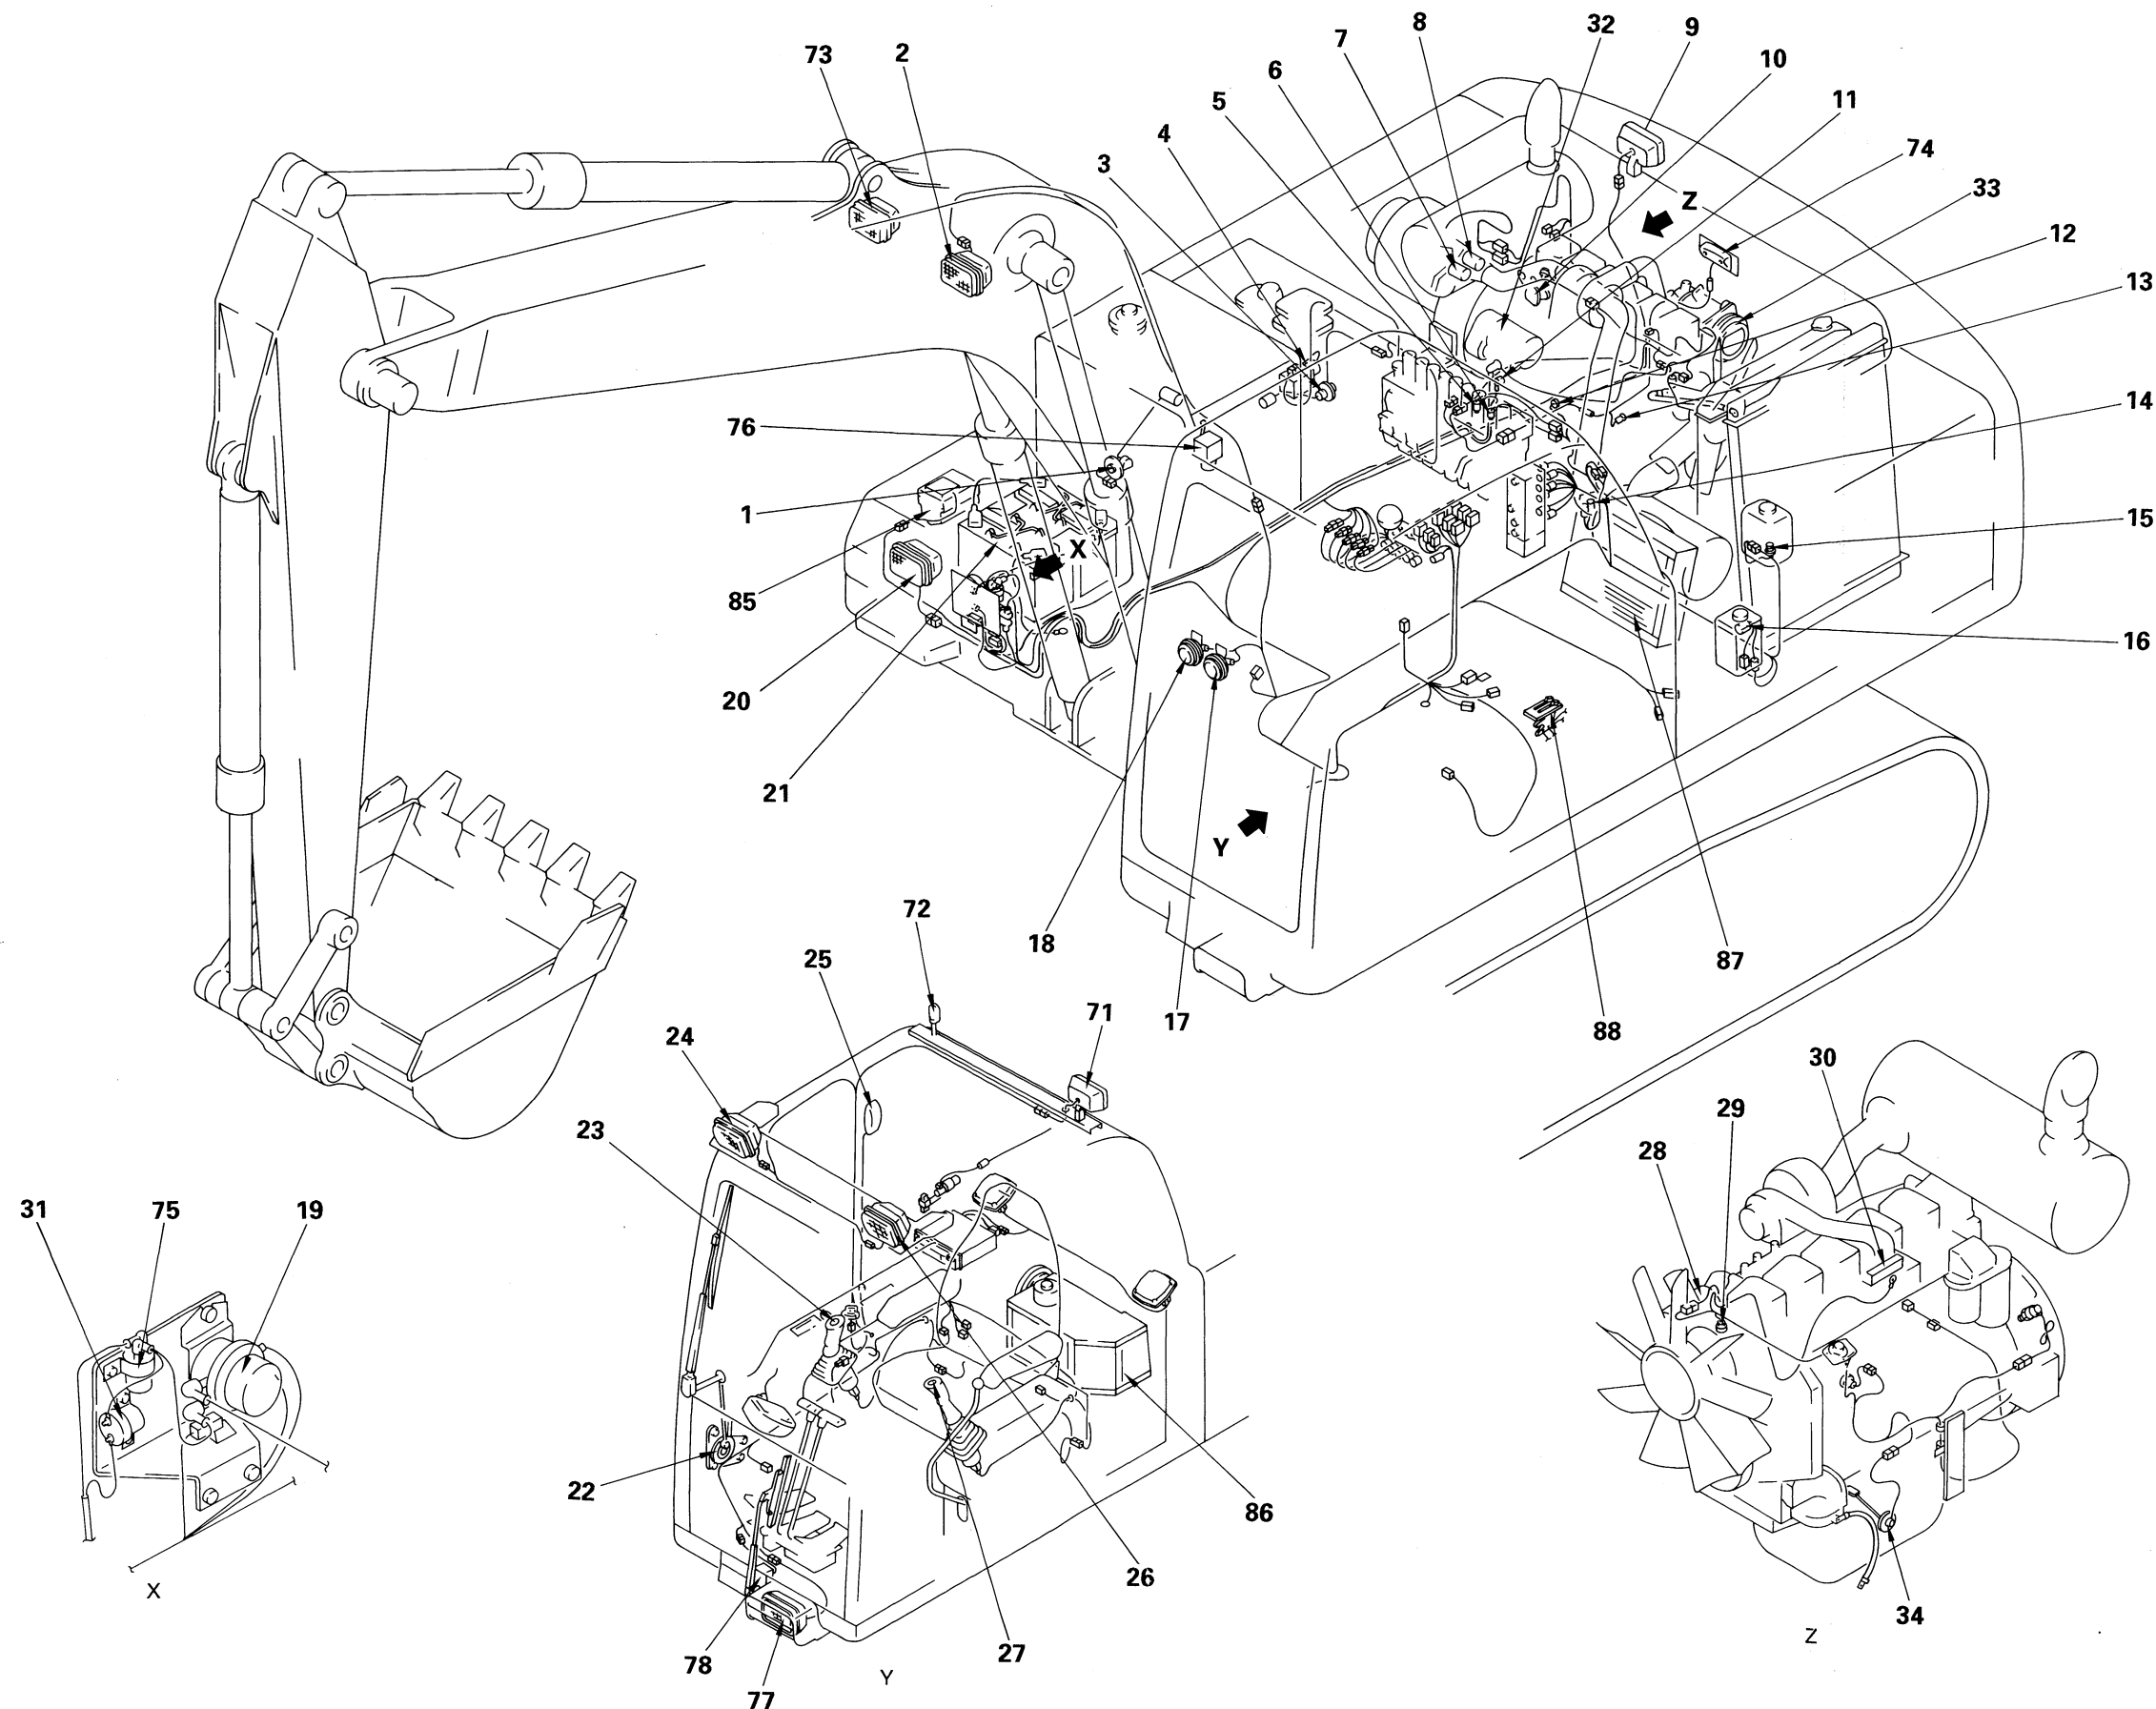

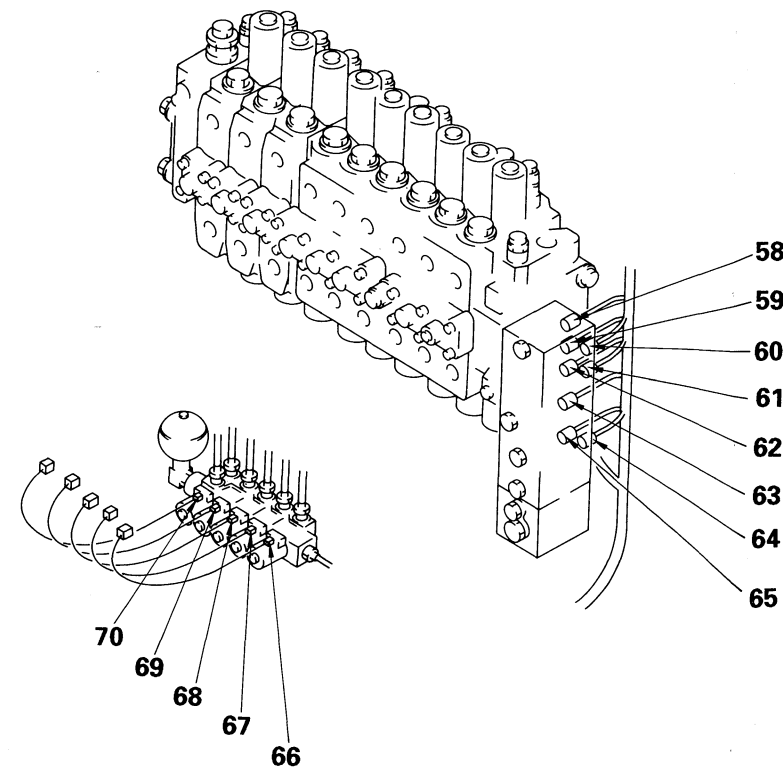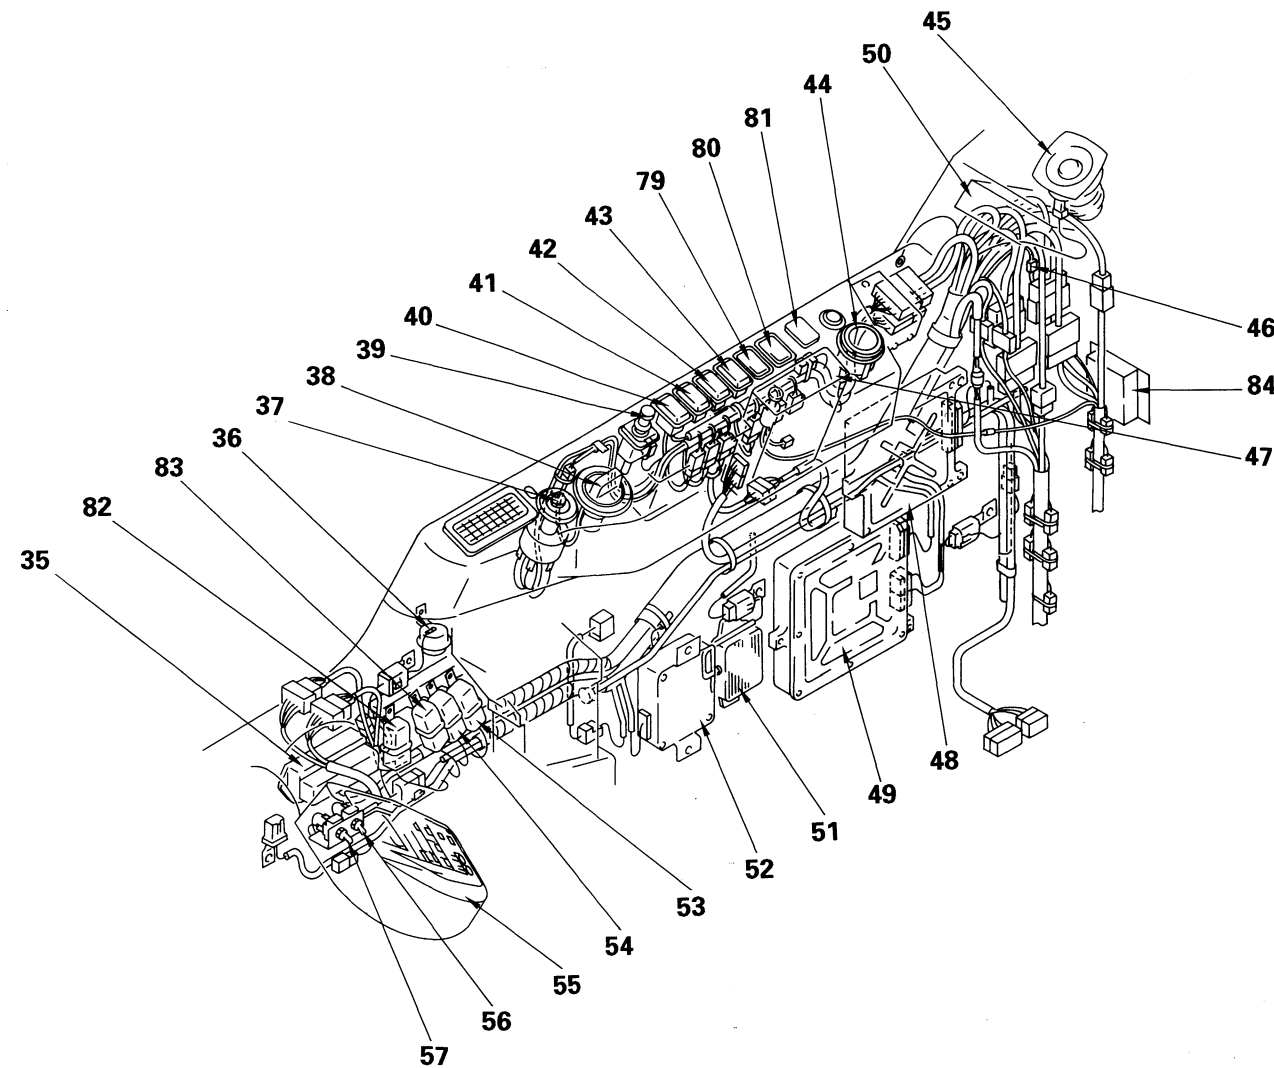


1. Fuel level sensor
2. Working light
3. Hydraulic oil level sensor
4. LS control EPC valve
5. Rear pump pressure sensor
6. Front pump pressure sensor
7. Rear pump TVC valve
8. Front pump TVC valve
9. Rear working light
10. Governor motor
11. Engine speed sensor
12. Engine oil pressure sensor (Hi)
13. Engine oil pressure sensor (Lo)
14. Air cleaner clogging sensor
15. Coolant lever sensor
16. Window washer motor
17. Horn (high tone)
18. Horn (low tone)
19. Battery relay
20. R.H. head light
21. Battery
22. Wiper motor
23. Horn switch
24. R.H. additional light
25. Room lamp
26. L.H. additional light
27. L.H. knob switch
28. Alternator
29. Coolant temperature sensor
30. Electrical intake air heater
31. Heater relay
32. Starting motor
33. Air conditioner compressor
34. Engine oil level sensor
35. Fuse box
36. Caution buzzer
37. Starting switch
38. Fuel control dial
39. Cigarette lighter
40. Swing lock switch
41. Wiper switch
42. Light switch
43. Buzzer cancel switch
44. Service meter
45. Speaker
46. Kerosene mode connector
47. Heater control panel (Air conditioner option)
48. Engine throttle controller
49. Pump controller
50. Radio
51. TVC prolix resistor
52. Wiper motor controller
53. Additional light relay (Cab)
54. Light relay (Boom, R.H. deck, Engine room)
55. Monitor panel
56. Swing lock prolix switch
57. TVC prolix switch
58. Swing oil pressure switch
59. Bucket CURL oil pressure switch
60. Bucket DUMP oil pressure switch
61. Arm IN oil pressure switch
62. Boom LOWER oil pressure switch
63. Arm OUT oil pressure switch
64. Travel oil pressure switch
65. Boom RAISE oil pressure switch
66. Swing brake solenoid valve
67. Travel speed solenoid valve
68. Pump merge-diver solenoid valve
69. 2-stage relief solenoid valve
70. LS select solenoid valve
71. Rear additional lamp
72. Beacon connector
73. R.H. boom working light
74. Engine room lamp
75. Safety relay
76. Overload caution switch
77. L.H. deck additional lamp
78. Lower wiper motor
79. Lower wiper switch
80. Beacon switch
81. Heated seat switch
82. Lower wiper relay
83. Additional light relay (CWT L.H. deck)
84. Voltage dropper (Rear radio)
85. Re fuelling pump
86. Heater (Air conditioner option)
87. Air conditioner condensor fan
88. Air conditioner pressure switch

HYDRAULIC CIRCUIT DIAGRAM

PC210, 210LC-6K
PC240, 240LC, 240NLC-6K

<https://truckmanualshub.com/>

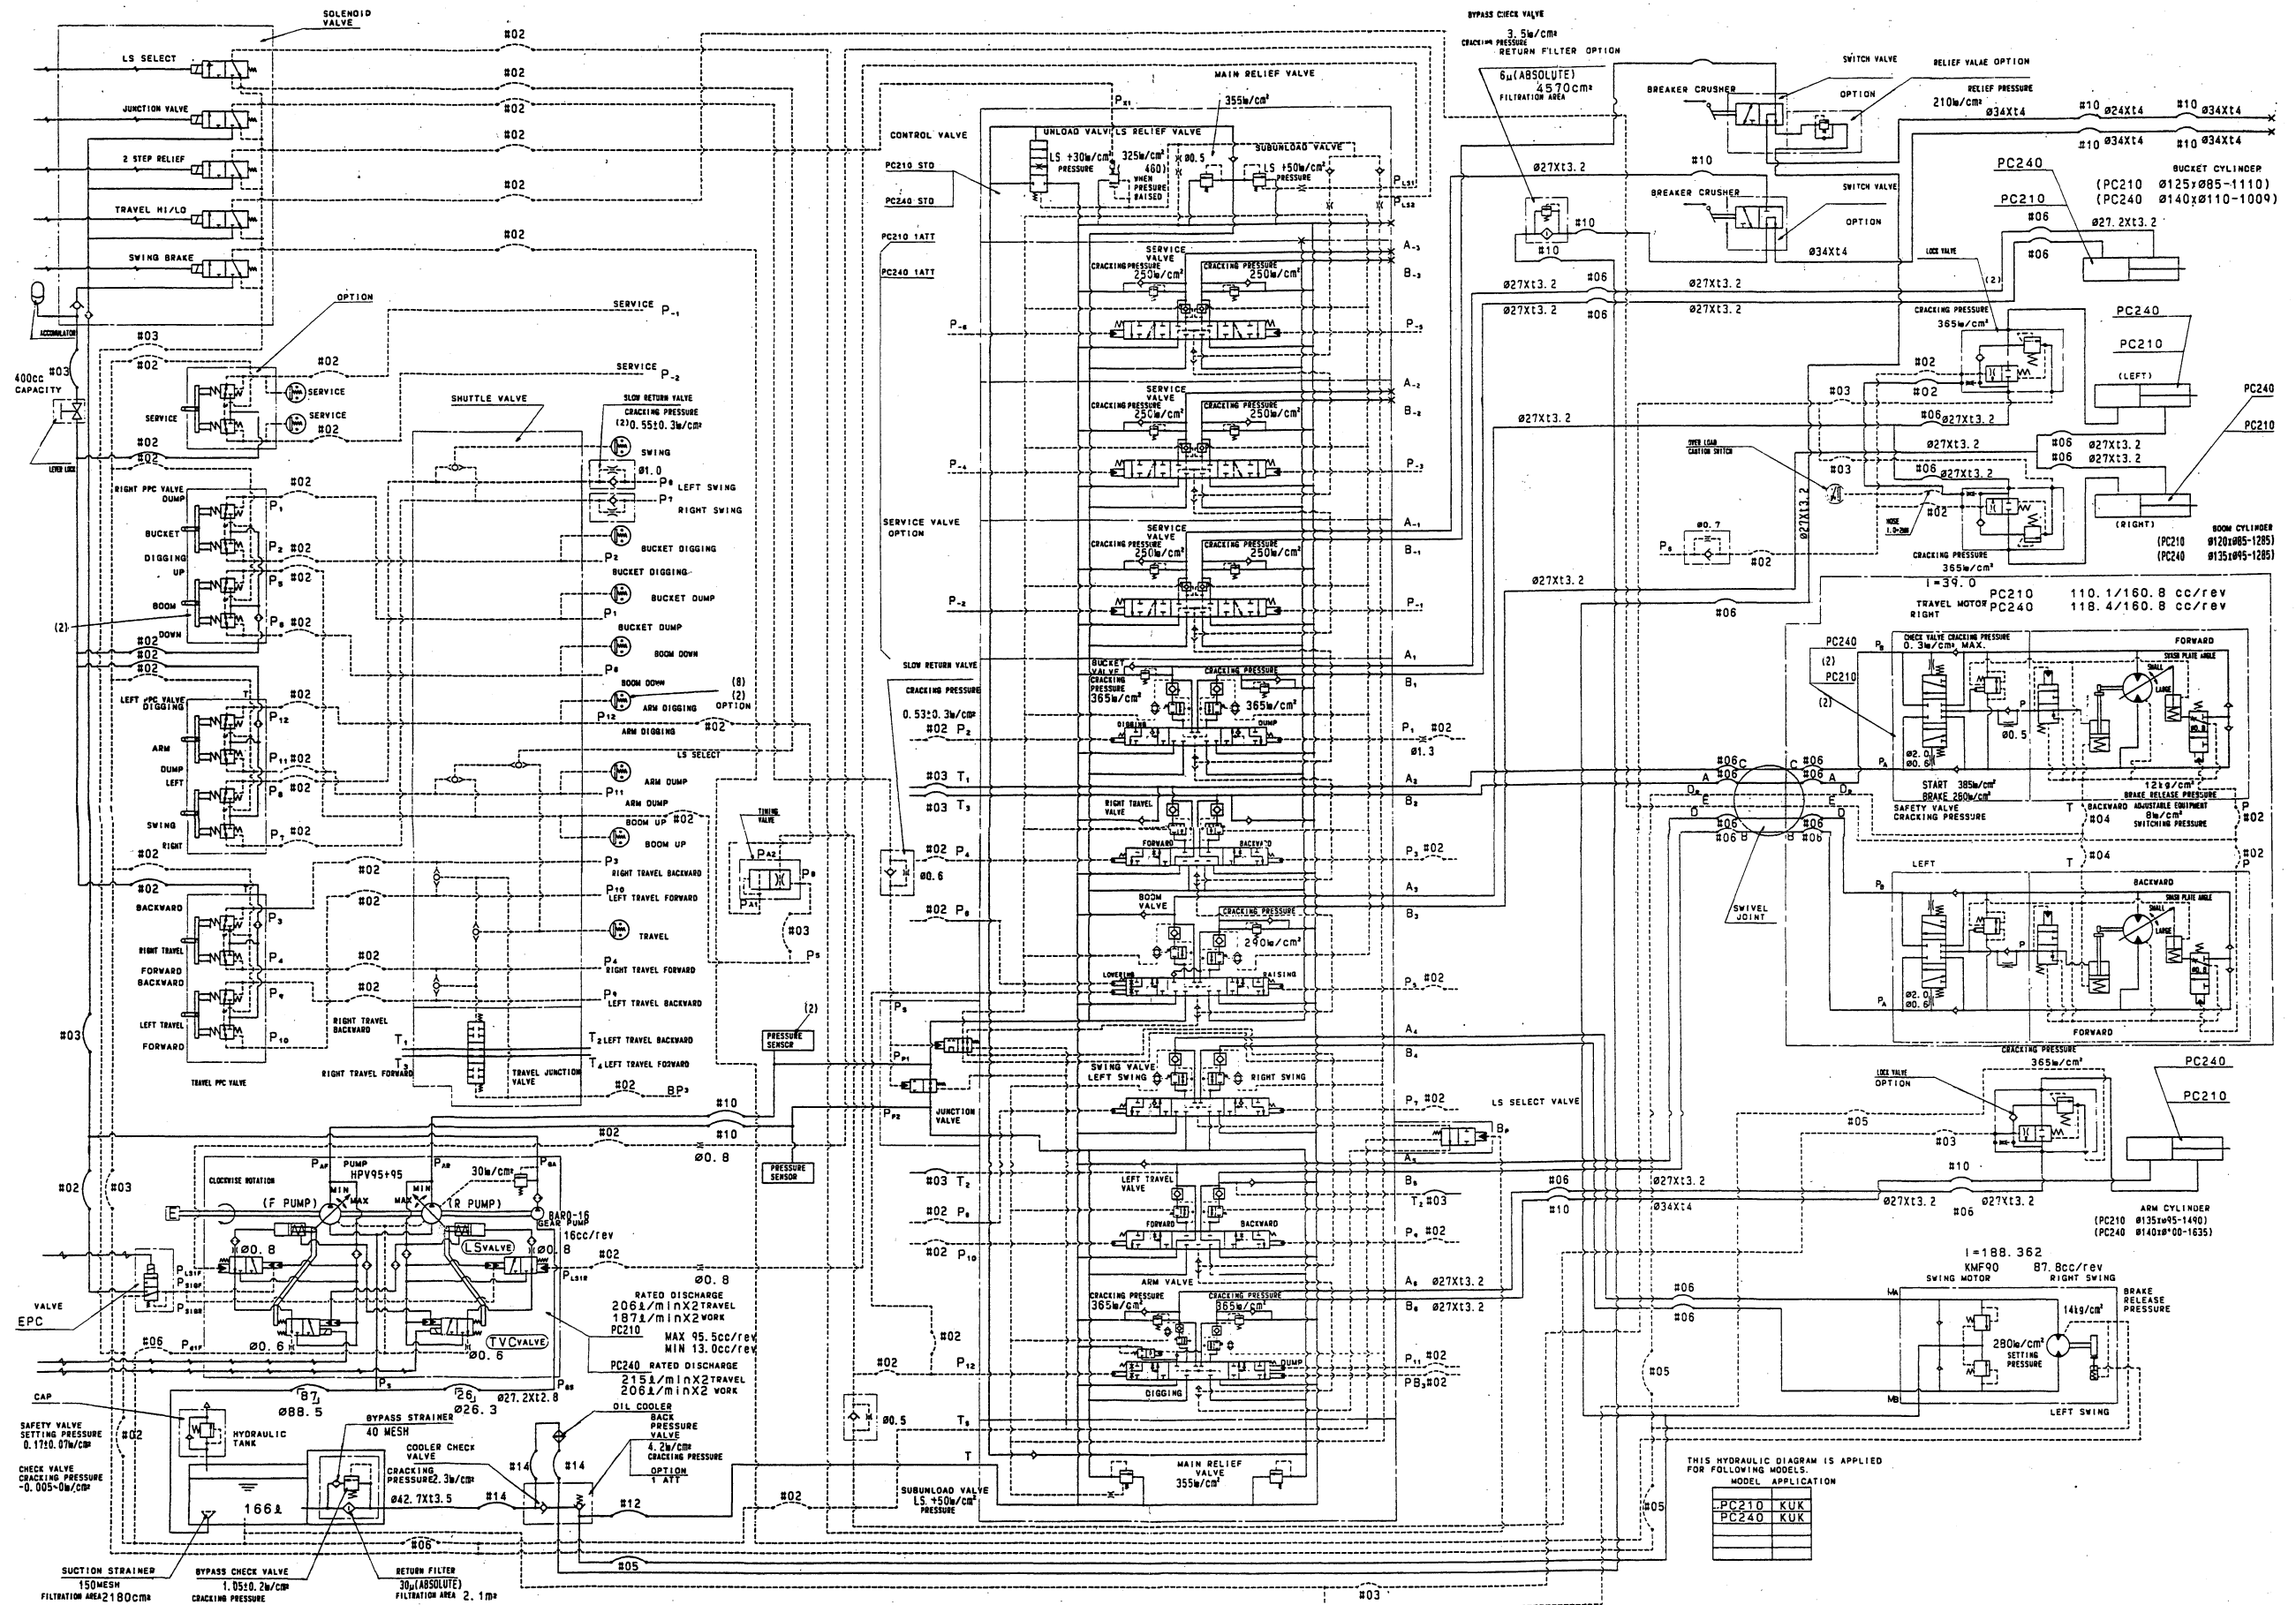


K20506

HYDRAULIC PIPING DRAWING

PC210, 210LC-6K
PC240, PC240LC, 240NLC-6K


K20506

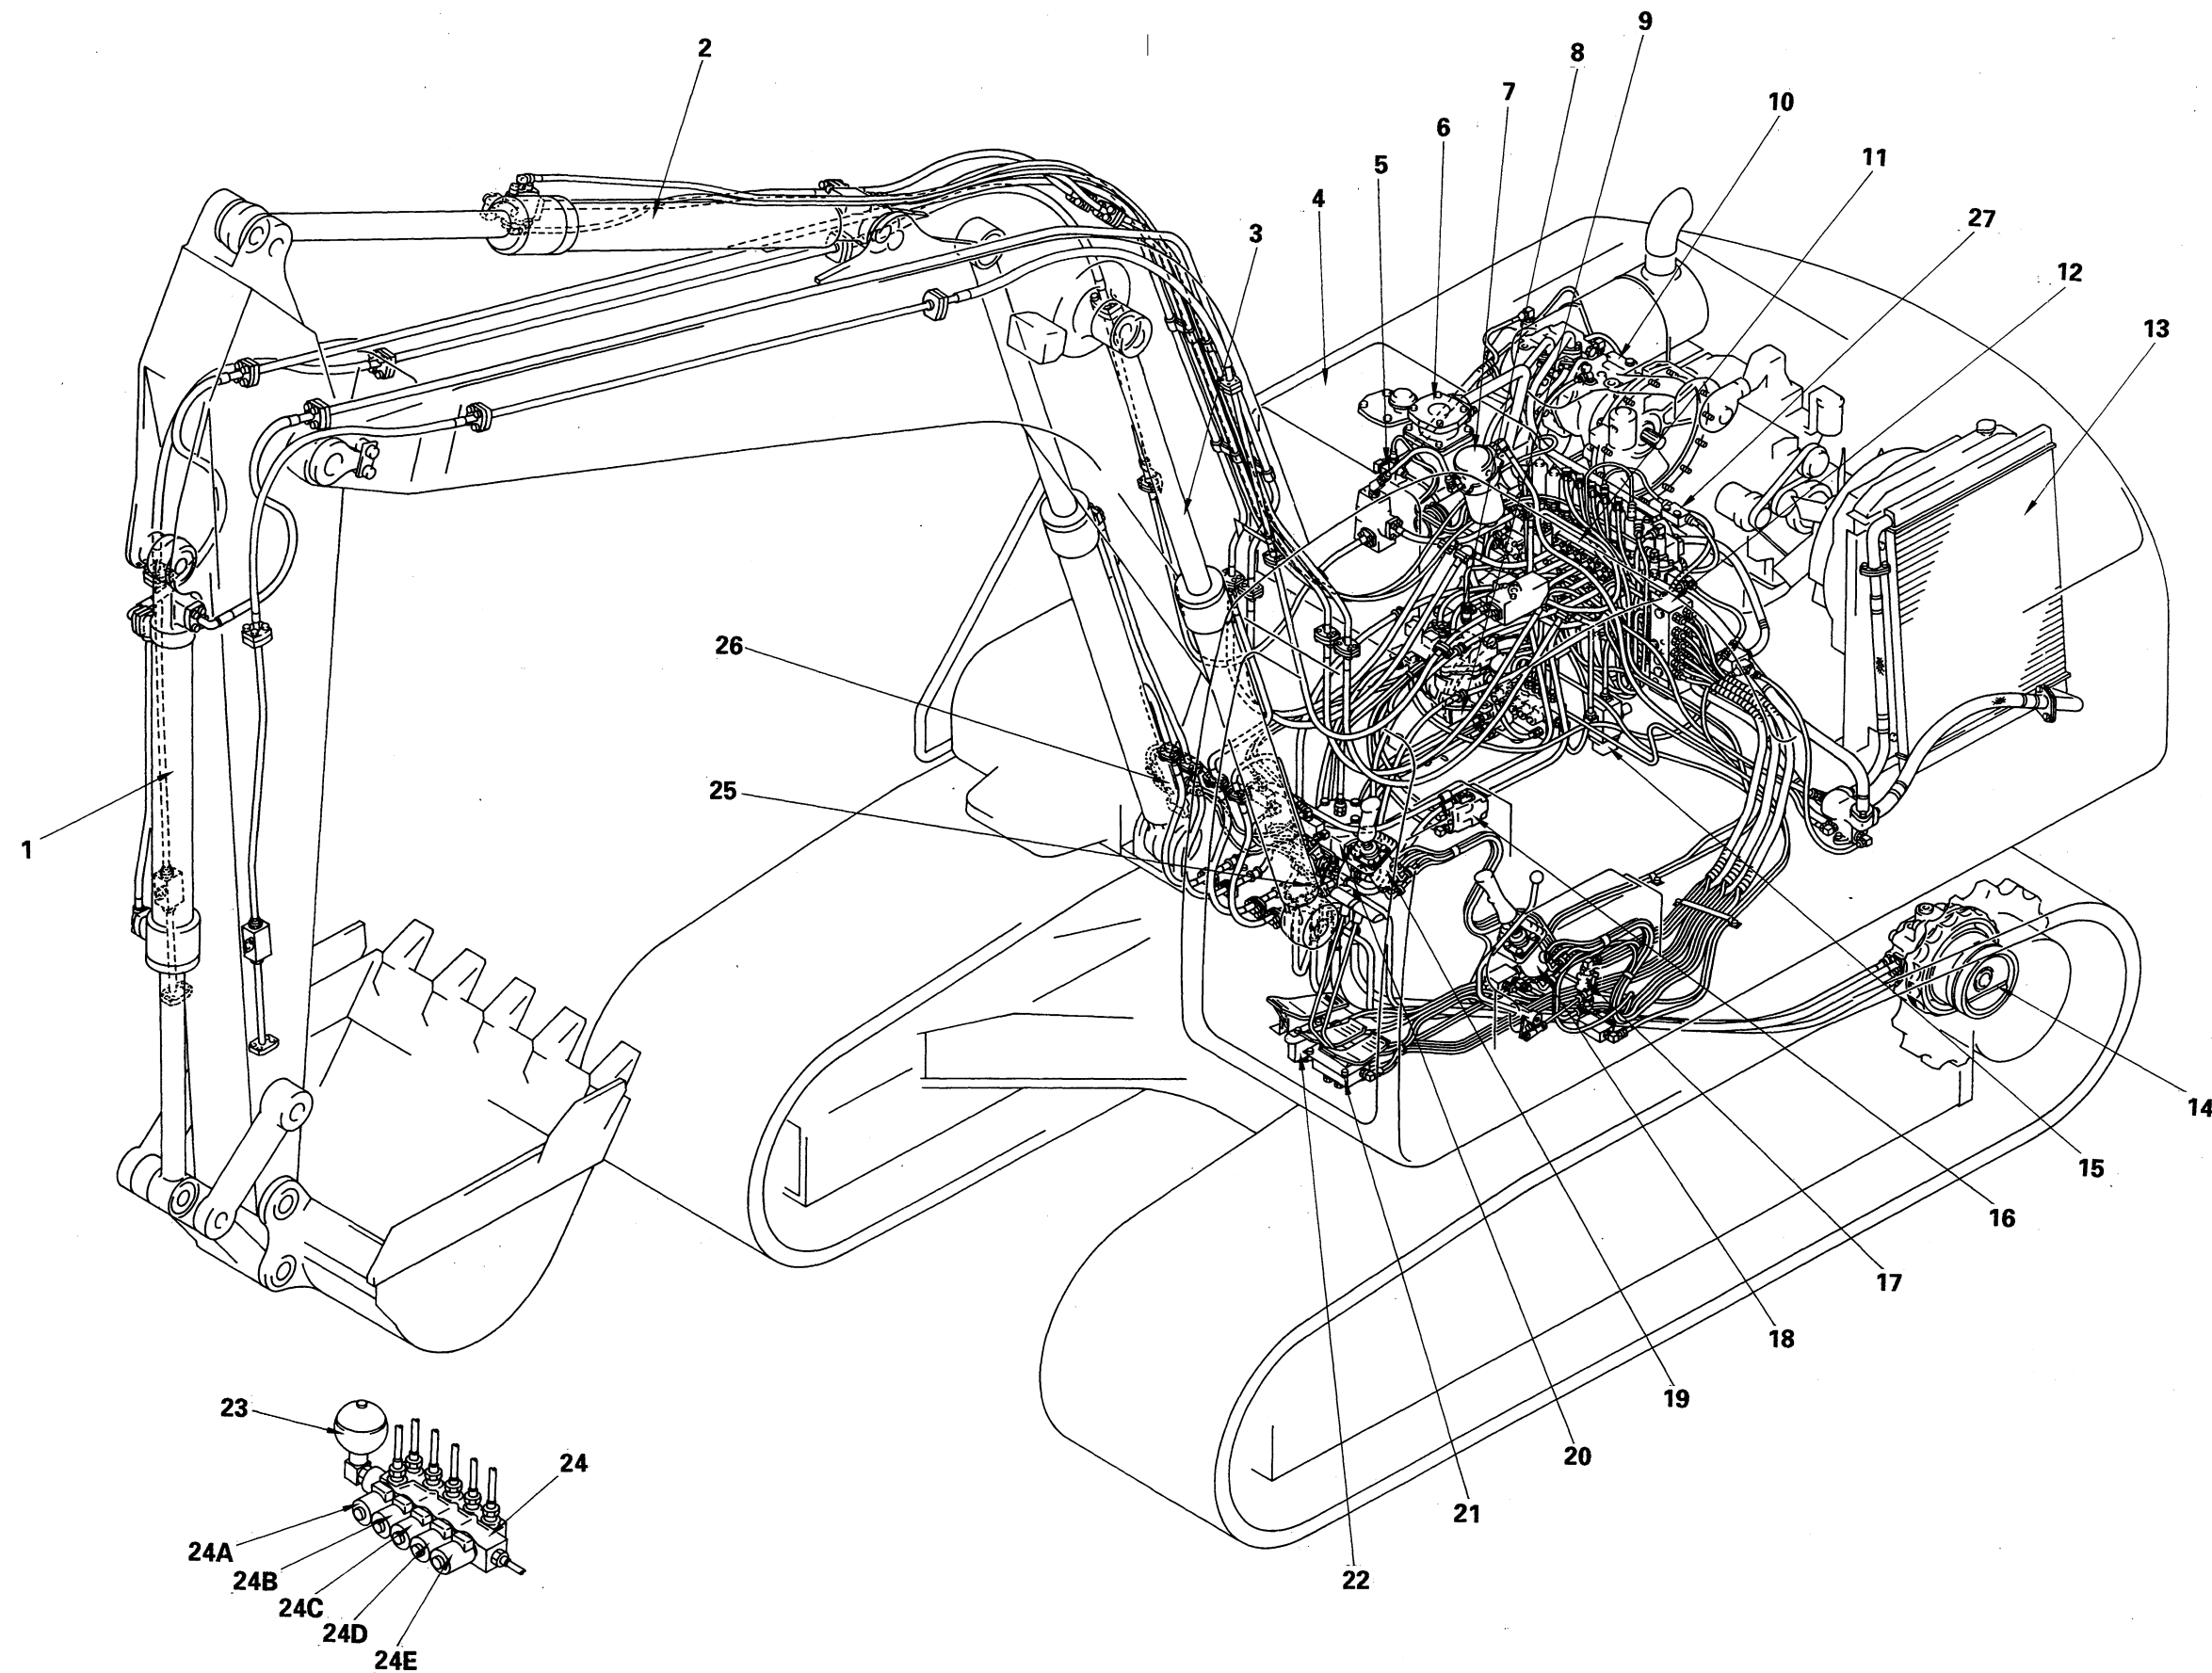

1. Bucket cylinder
2. Arm cylinder
3. Boom cylinder
4. Hydraulic tank
5. LS control EPC valve
6. Hydraulic filter
7. Filter (for breaker)
8. Swing motor
9. R.H. travel motor
10. Hydraulic pump
11. Control valve
12. PPC shuttle. travel junction valve
13. Oil cooler
14. L.H. travel motor
15. Arm holding valve
16. Boom holding valve
17. PPC safety valve
18. L.H. PPC valve
19. R.H. PPC valve
20. Center swivel joint
21. Travel PPC valve
22. Service PPC valve
23. Accumulator
24. Solenoid valve
 - 24A. LS select solenoid valve
 - 24B. 2-stage relief solenoid valve
 - 24C. Pump merge-divider solenoid valve
 - 24D. Travel speed solenoid valve
 - 24E. Swing brake solenoid valve
25. L.H. hose burst valve
26. R.H. hose burst valve
27. Timing valve

OPERATION OF CLSS SYSTEM AS A WHOLE

1. When all work equipment is at neutral
- ★ The diagram shows the situation when all work equipment is at neutral.
 - ★ The valves and circuits that are not connected with the explanation of the operation of the CLSS hydraulic system have been omitted.

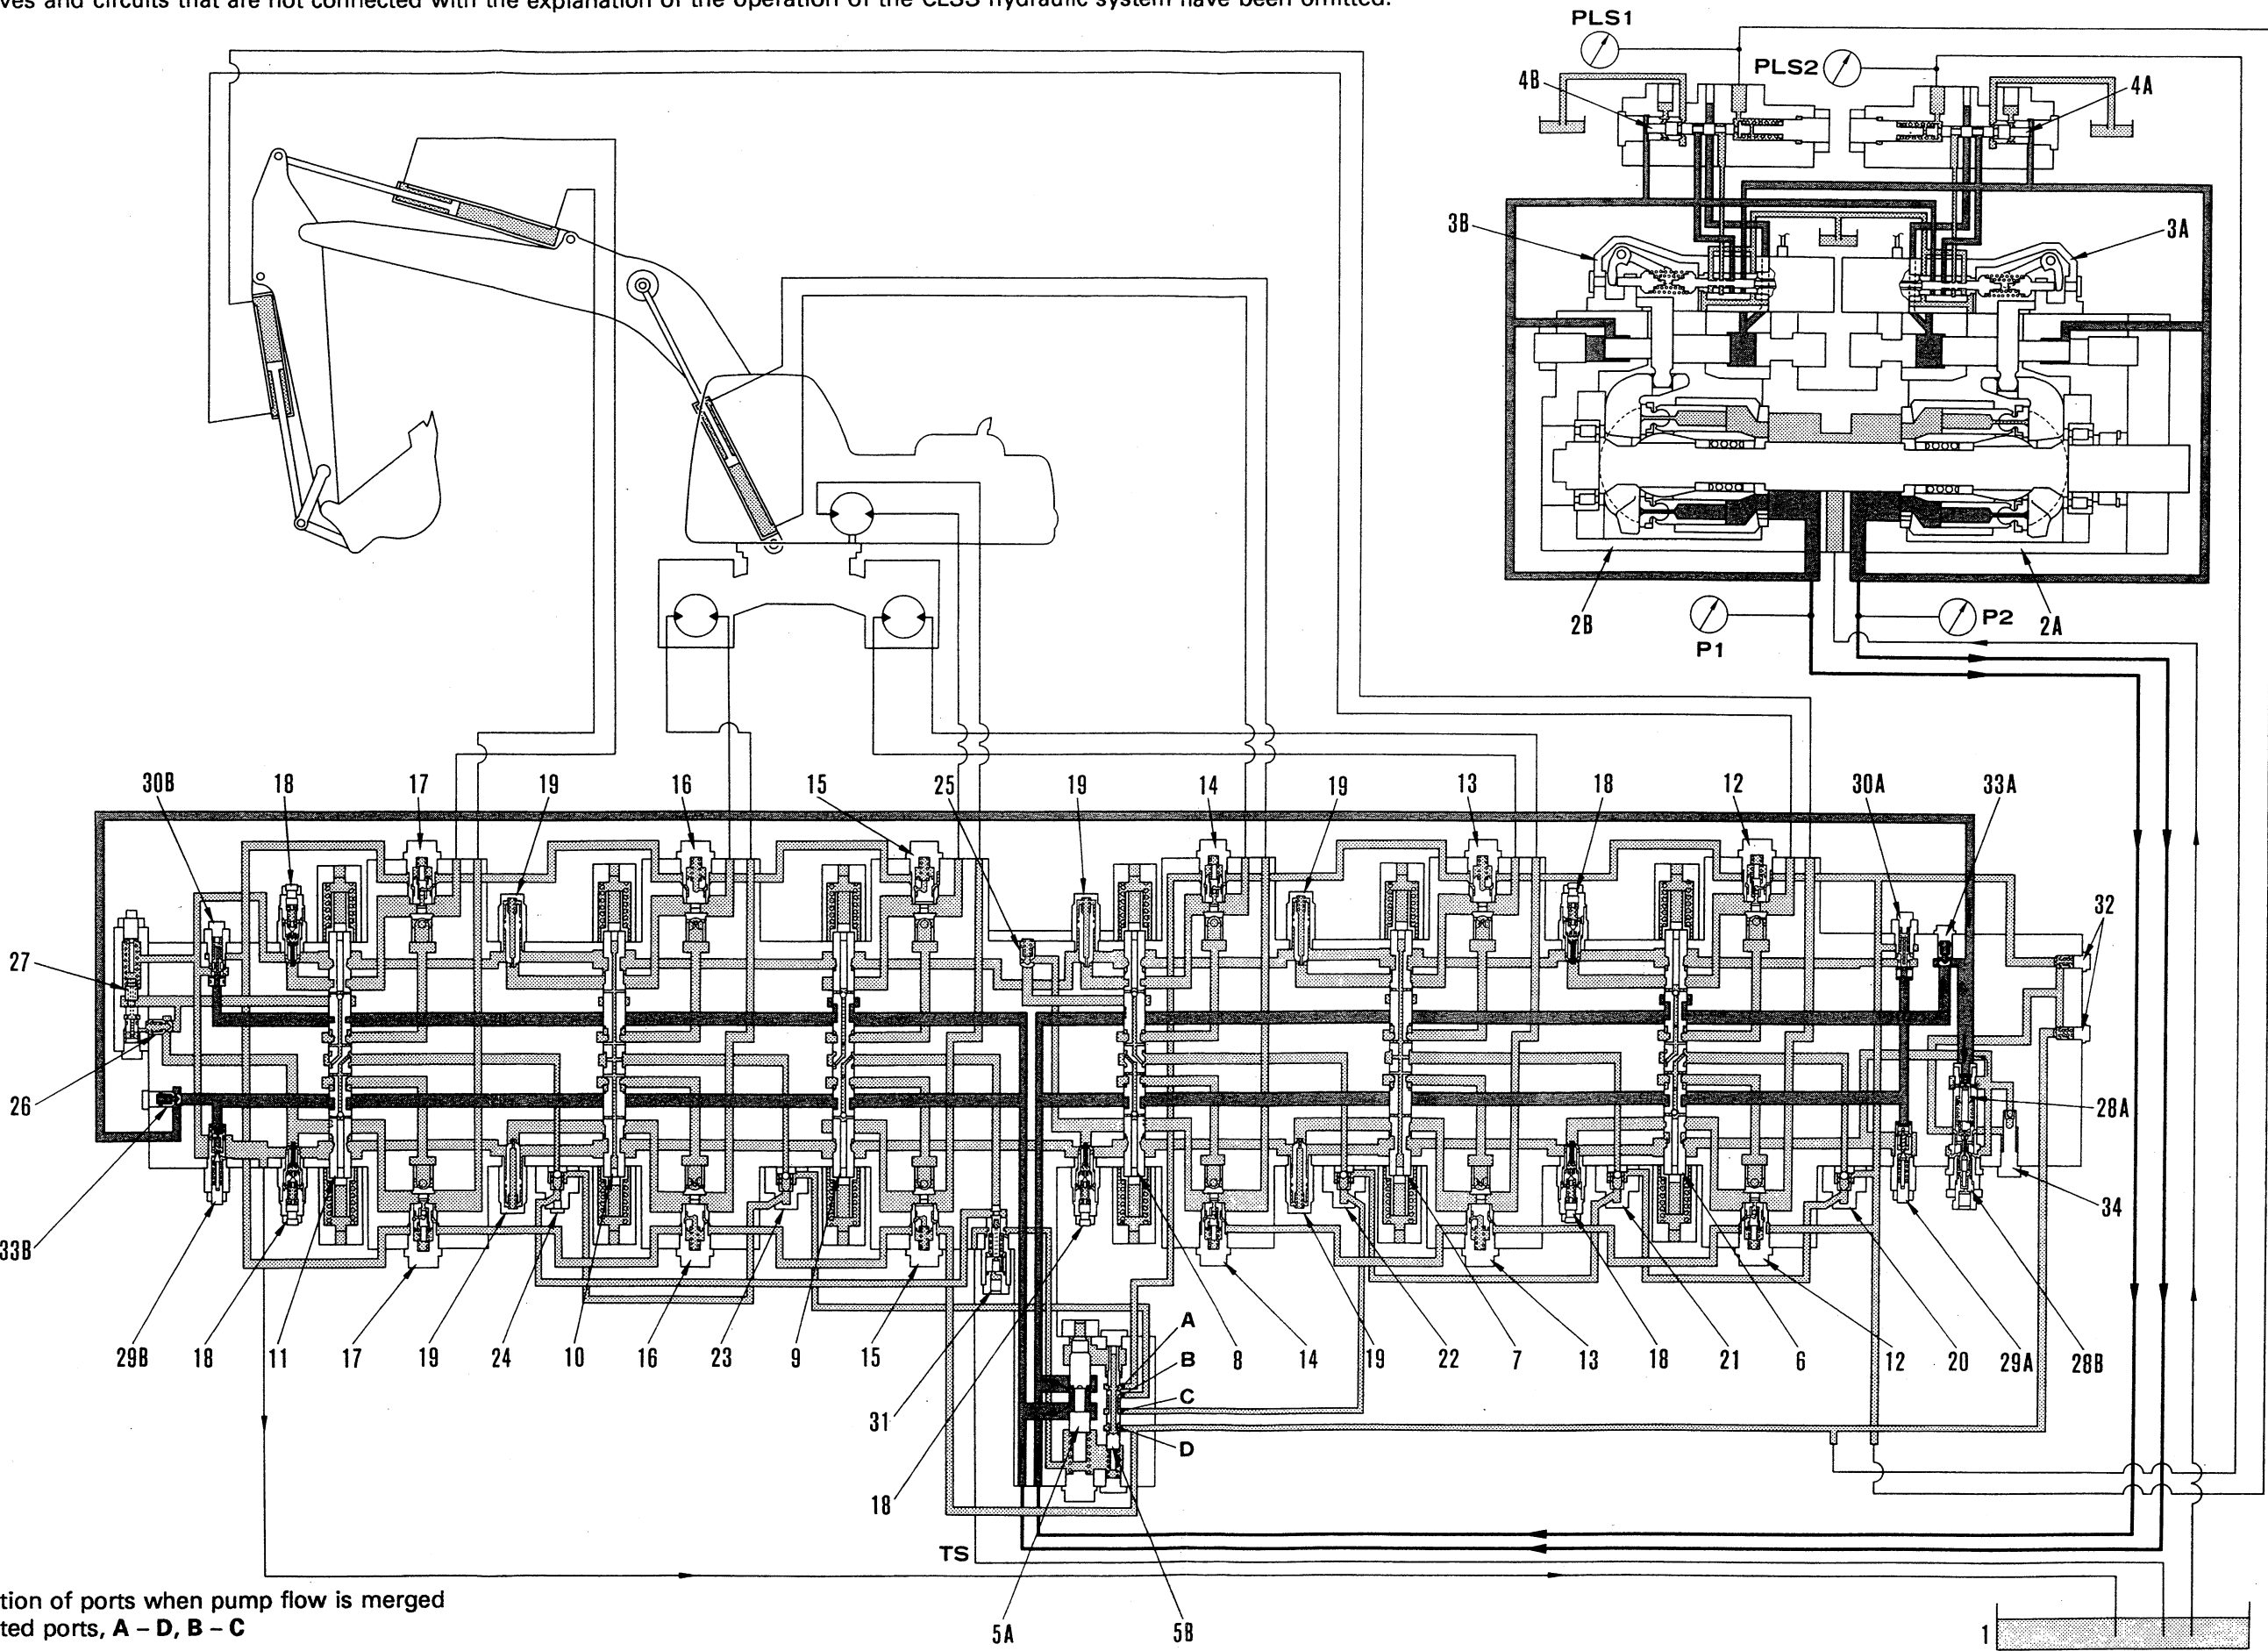

K20506

STRUCTURE AND FUNCTION**CLSS**

- K20506
1. Hydraulic tank
 - 2A. Main pump (front)
 - 2B. Main pump (rear)
 - 3A. TVC valve (front)
 - 3B. TVC valve (rear)
 - 4A. LS valve (front)
 - 4B. LS valve (rear)
 - 5A. Pump merge-divider valve (for main)
 - 5B. Pump merge-divider valve (for LS)
 6. Bucket spool
 7. R.H. travel spool
 8. Boom spool
 9. Swing spool
 10. L.H. travel spool
 11. Arm spool
 12. Pressure compensation valve (bucket)
 13. Pressure compensation valve (R.H. travel)
 14. Pressure compensation valve (boom)
 15. Pressure compensation valve (swing)
 16. Pressure compensation valve (L.H. travel)
 17. Pressure compensation valve (arm)
 18. Safety-suction valve
 19. Suction valve
 20. LS shuttle valve (bucket)
 21. LS shuttle valve (R.H. travel)
 22. LS shuttle valve (boom)
 23. LS shuttle valve (L.H. travel)
 24. LS shuttle valve (arm)
 25. Check valve (for boom regeneration circuit)
 26. Check valve (for arm regeneration circuit)
 27. Arm counterbalance valve
 - 28A. Main unload valve
 - 28B. LS relief valve
 - 29A. Main relief valve (bucket group)
 - 29B. Main relief valve (arm group)
 - 30A. Sub-unload valve (bucket group)
 - 30B. Sub-unload valve (arm group)
 31. LS select valve
 32. LS check valve
 - 33A. Main check valve (bucket group)
 - 33B. Main check valve (arm group)
 34. LS bypass valve

Note: Groups of control valves by main pump circuit


- Bucket group: Bucket, R.H. travel, boom
- Arm group: Swing, L.H. travel, arm

Operation

- When the levers are at neutral, the pump is at the minimum swash plate angle, and the oil flow is drained from main unload valve (28A).
- The LS pressure is connected to hydraulic tank (1) by LS bypass valve (34). The LS differential pressure ΔPLS (unload pressure – tank pressure) at this point is $\Delta PLS >$ pump LS control pressure, so the pump swash plate angle is the minimum

2. Pump flow divided, one side actuated, other side neutral

★ The diagram shows the independent bucket DUMP operation with pump merge.

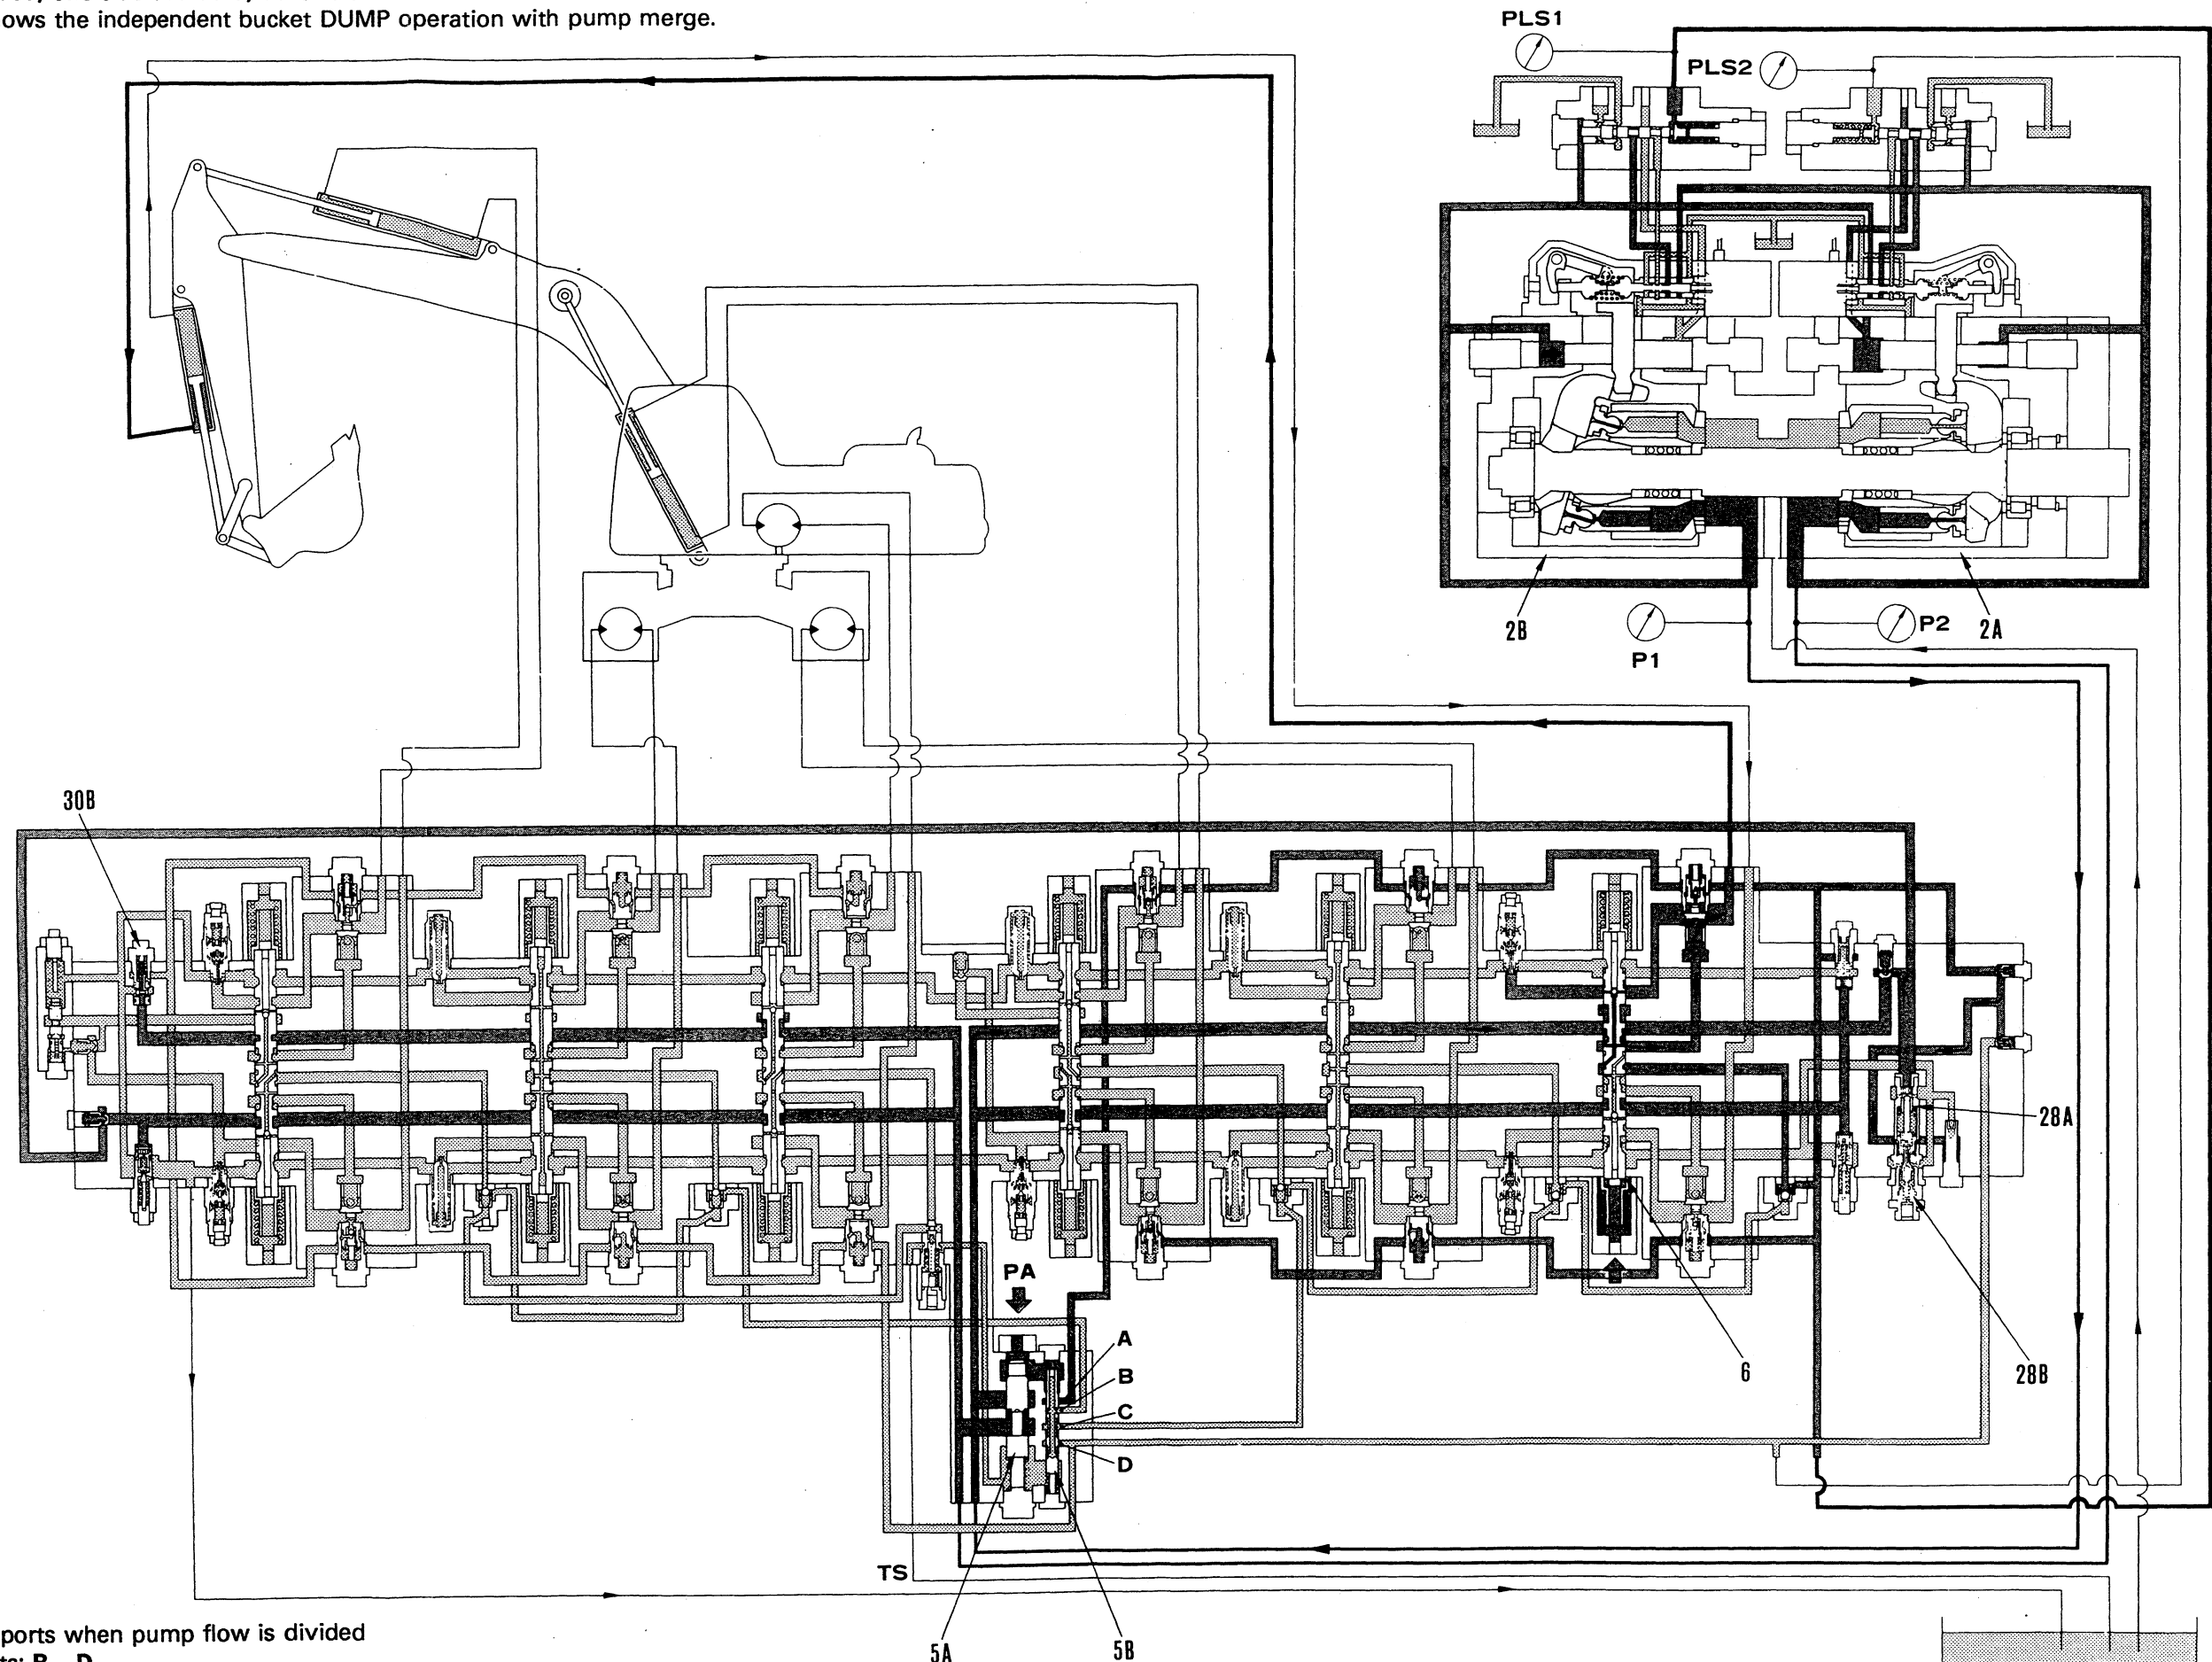


- Connection of ports when pump flow is divided
Connected ports: B - D
Disconnected ports: A, C

Operation

- Pilot pressure **PA** of pump merge-divider valve (5A) ON
- 1) **Bucket group**
 - When the bucket is operated, pressurized oil from main pump (2B) flows to the bucket group. The swash plate angle of main pump (2B) is controlled to match the operation of bucket spool (6).
 - The LS pressure passing through the inside of bucket spool (6) goes to main unload spool (28A), and the main unload valve is closed.
- 2) **Arm group**
 - When the pump flow is merged, all spools are at neutral, so the oil flow from the minimum swash plate angle of main pump (2A) is all drained from sub-unload valve (30B) of the arm group. All spools in the arm group are at neutral, so no LS pressure is generated.
 - If the pump pressure – LS pressure becomes greater than the set pressure of sub-unload valve (30B), the sub-unload valve is actuated and the oil is drained. The LS differential pressure ΔPLS at this point is $\Delta PLS > \text{pump LS control pressure}$, so the pump swash plate angle is the minimum.

3. Pump flow merged, arm OUT, standard mode relief (cut-off control)

★ The diagram shows the arm DUMP and standard mode relief with the pump flow merged.

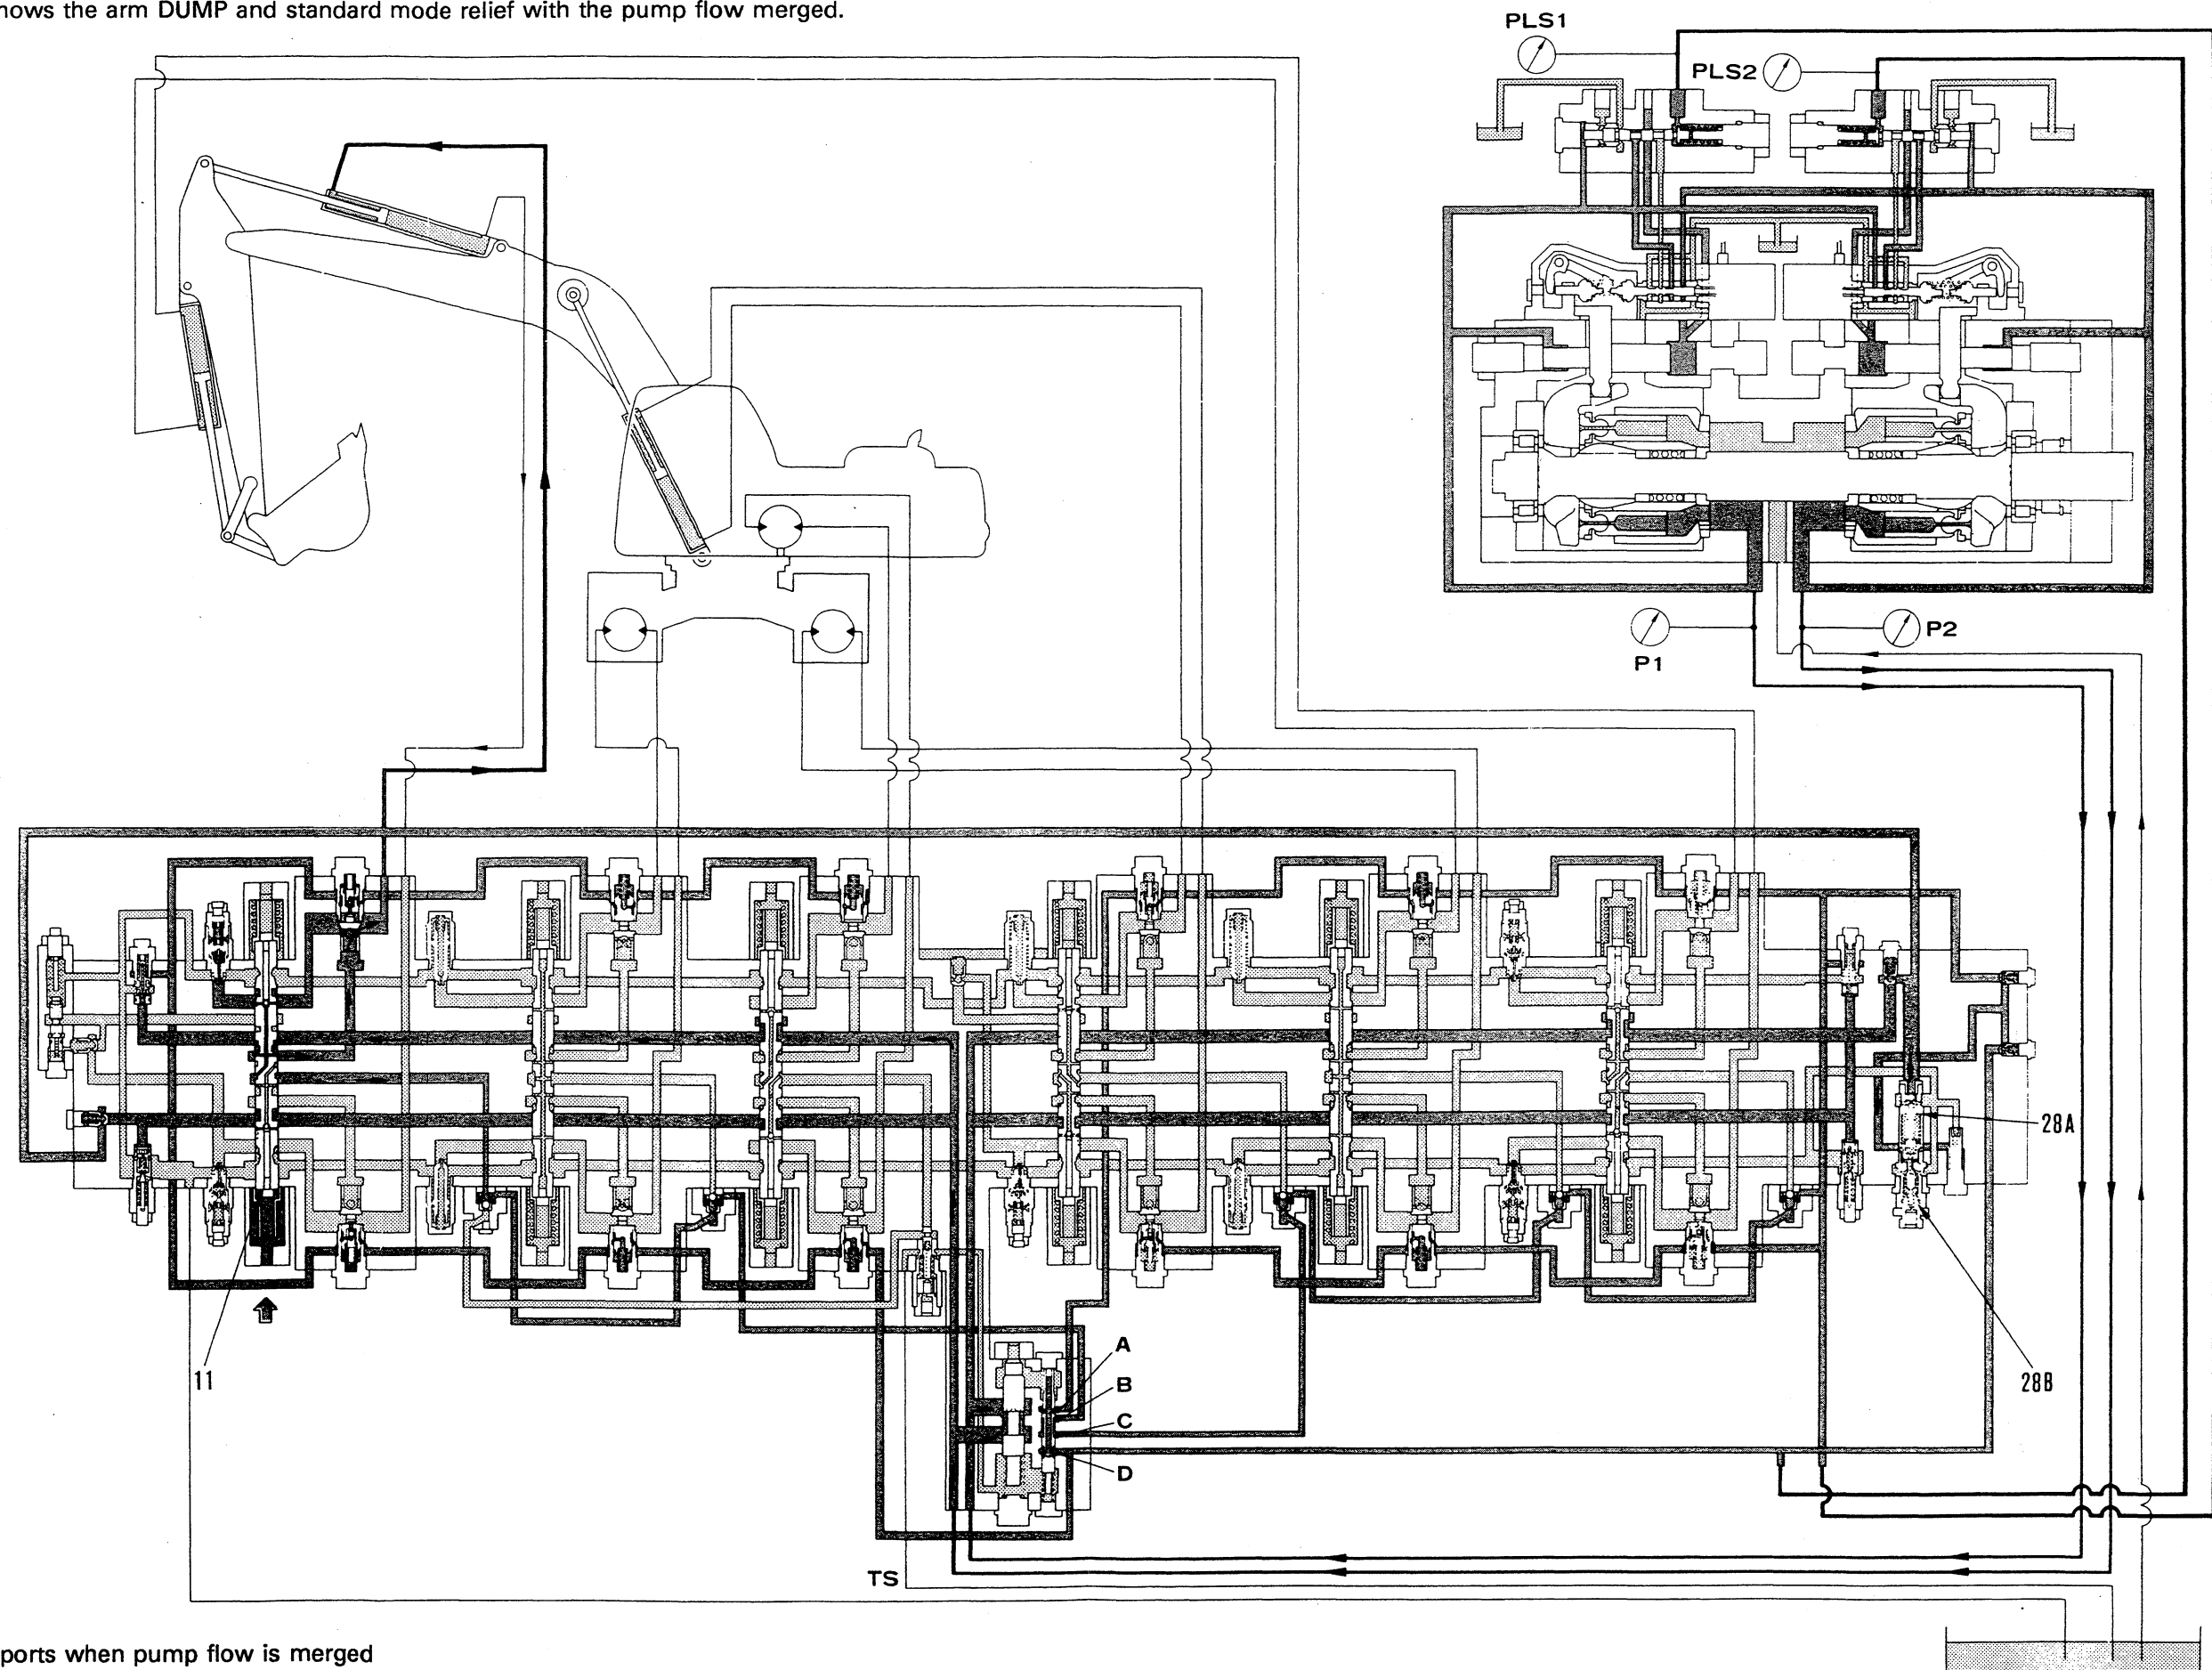


- Connection of ports when pump flow is merged
Connected ports: A – D, B – C

Operation

- 1) When pump swash plate angle is at a minimum (LS relief valve actuated in standard mode)
 - When the arm OUT is operated, if the load becomes larger, the LS pressure passing through the inside of arm spool (11) rises. This LS circuit pressure is controlled by LS relief valve (28B).
 - When the difference (ΔPLS) between the pump pressure and LS pressure becomes large, main unload valve (28A) is actuated to suppress the rise in the main circuit pressure and regulate it to the standard mode relief pressure.
- 2) The LS differential pressure ΔPLS at this point is $\Delta PLS >$ pump LS control pressure, so the pump swash plate angle is the minimum. In other words, the automatic cut-off control is carried out.

4. Pump flow divided, bucket DUMP, power max. relief

★ The diagram shows bucket DUMP, relief with the pump flow divided.

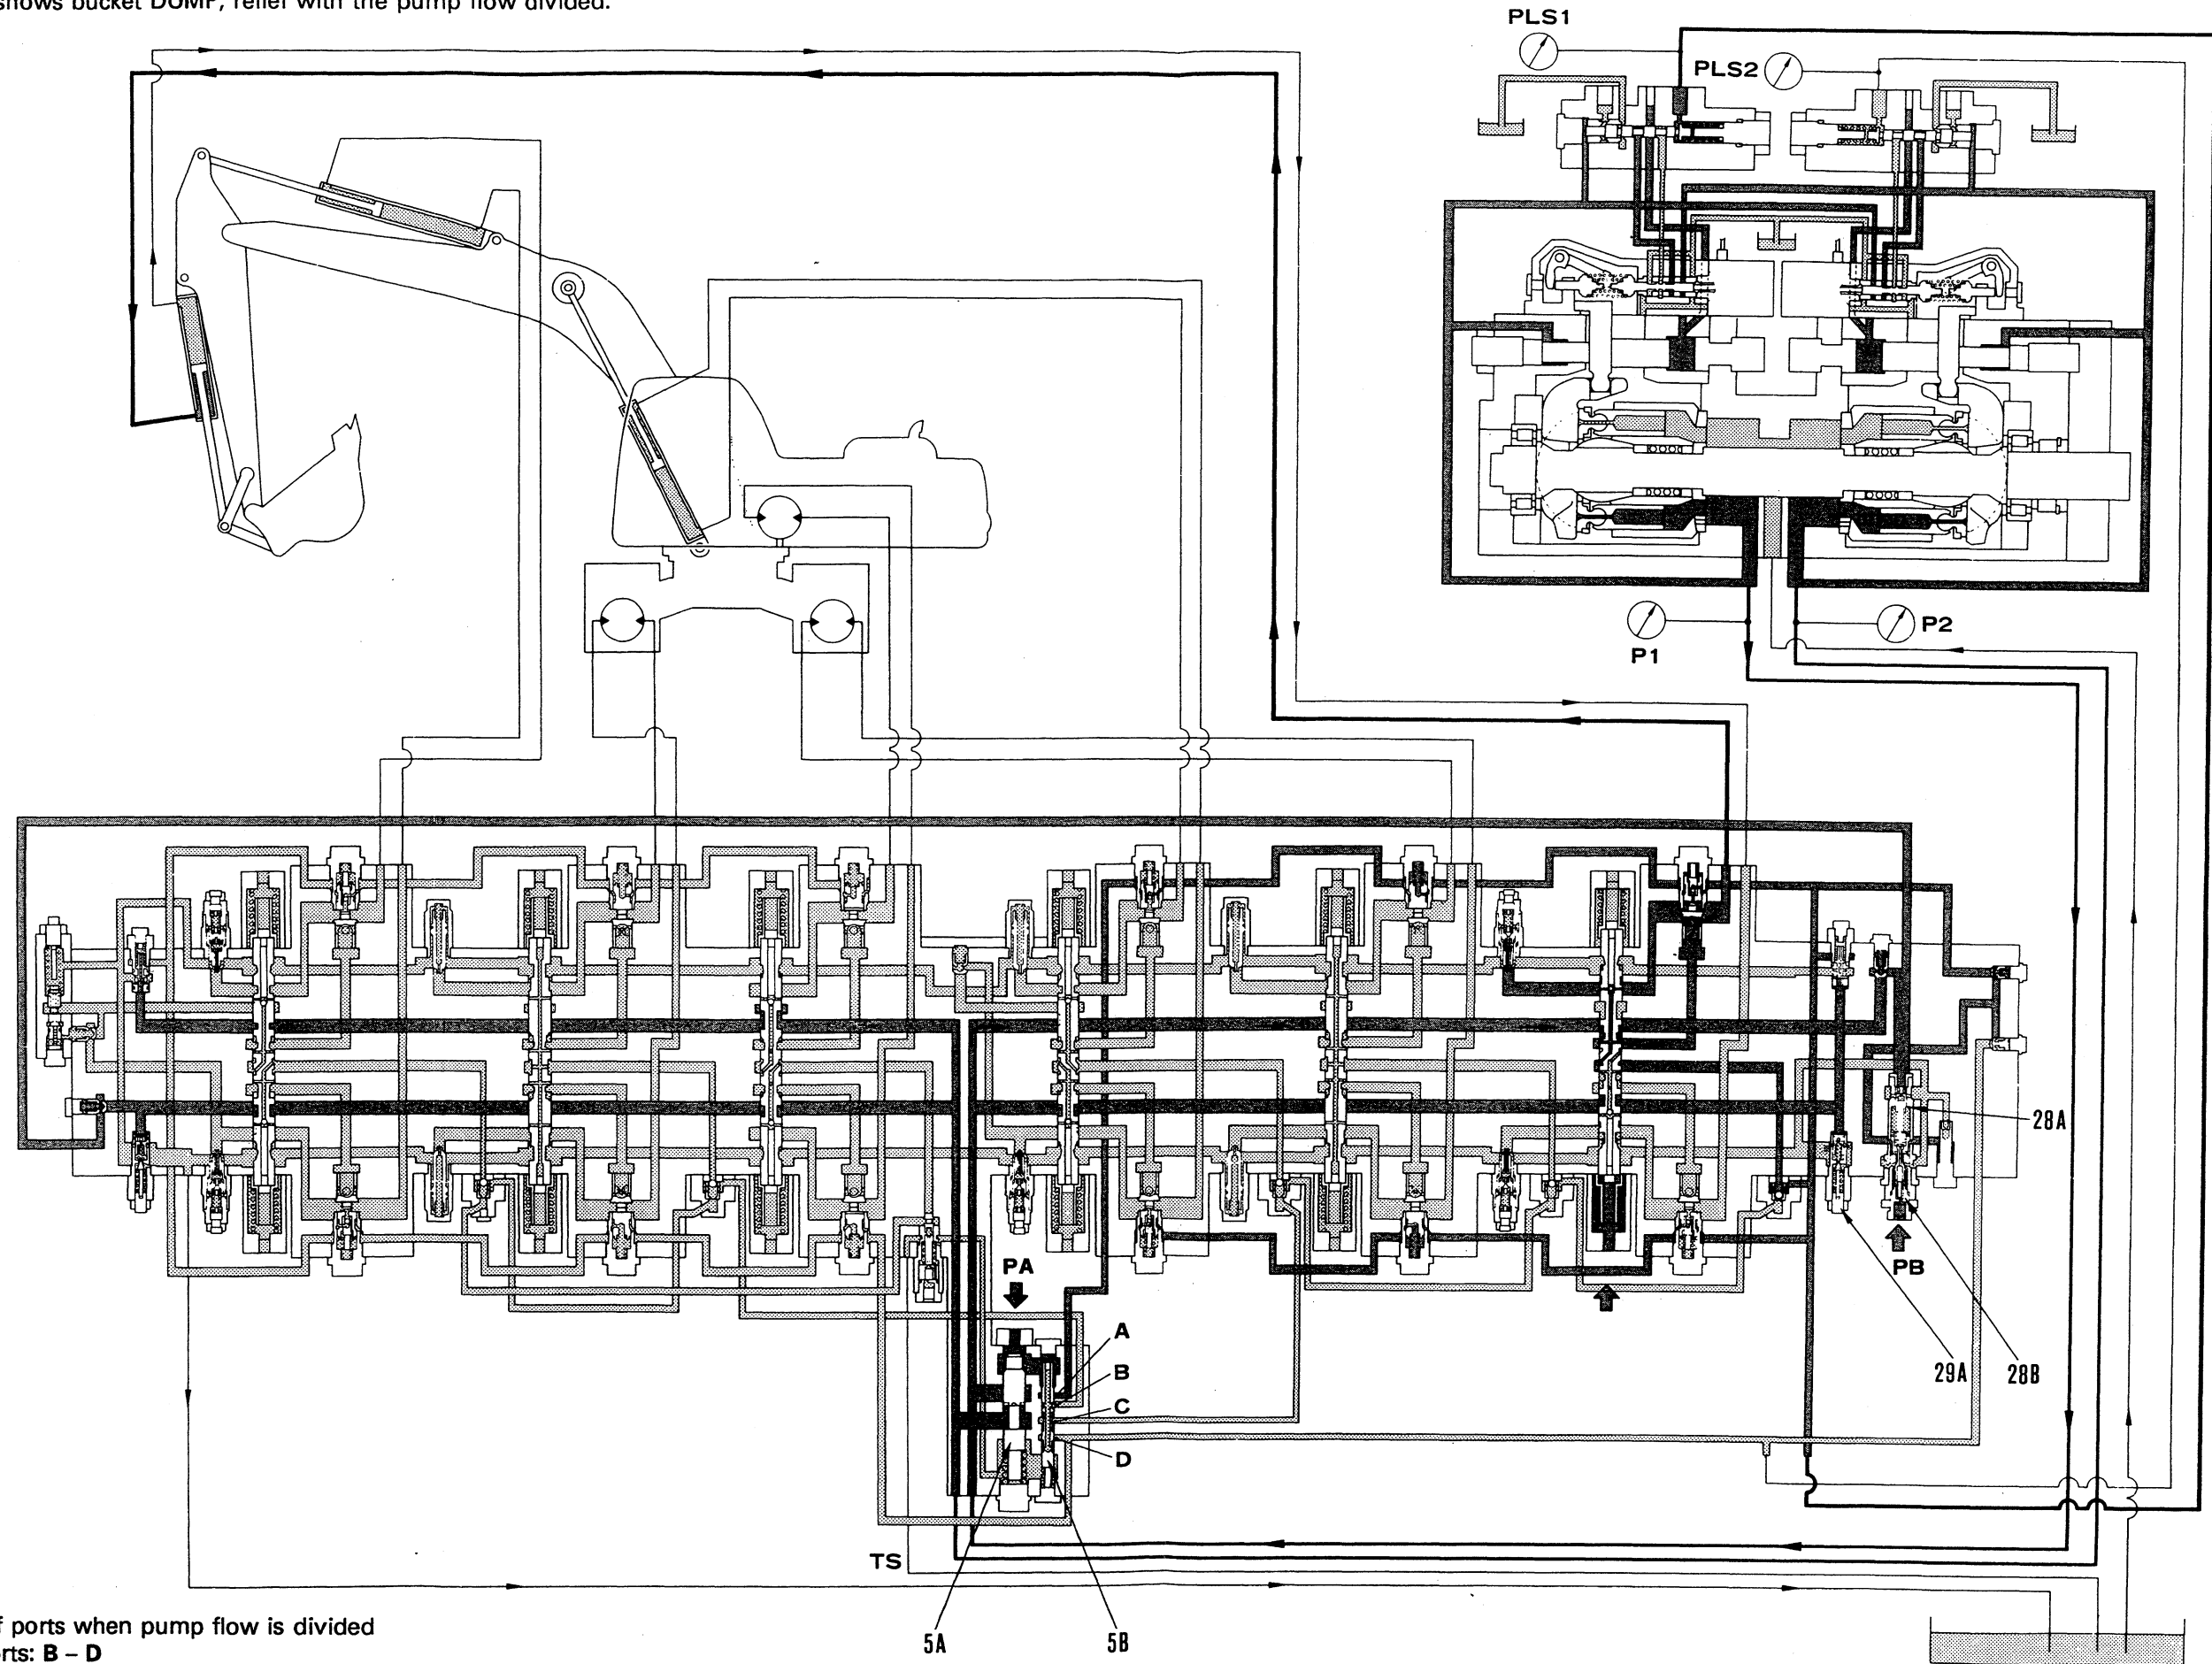


- Connection of ports when pump flow is divided
Connected ports: B - D
Disconnected ports: A, C

Operation

- Pilot pressure **PA** of pump merge-divider valve (5A) ON
Pilot pressure **PB** of LS relief valve (28B) ON
- 1) When the bucket is operated, if the power max. function is ON, pilot pressure **PB** acts on LS relief valve (28B), so the LS relief valve is not actuated.
- 2) When the bucket DUMP is operated and the load pressure becomes greater, pump pressure **P1** and LS pressure **PLS1** both rise. Pilot pressure **PB** is preventing LS relief valve (28B) from operating at this point, so main relief valve (29A) of the bucket group is actuated and controls the relief while the power max. function is being used.

5. Pump flow merged, boom RAISE

★ The diagram shows the boom RAISE with the pump flow merged.

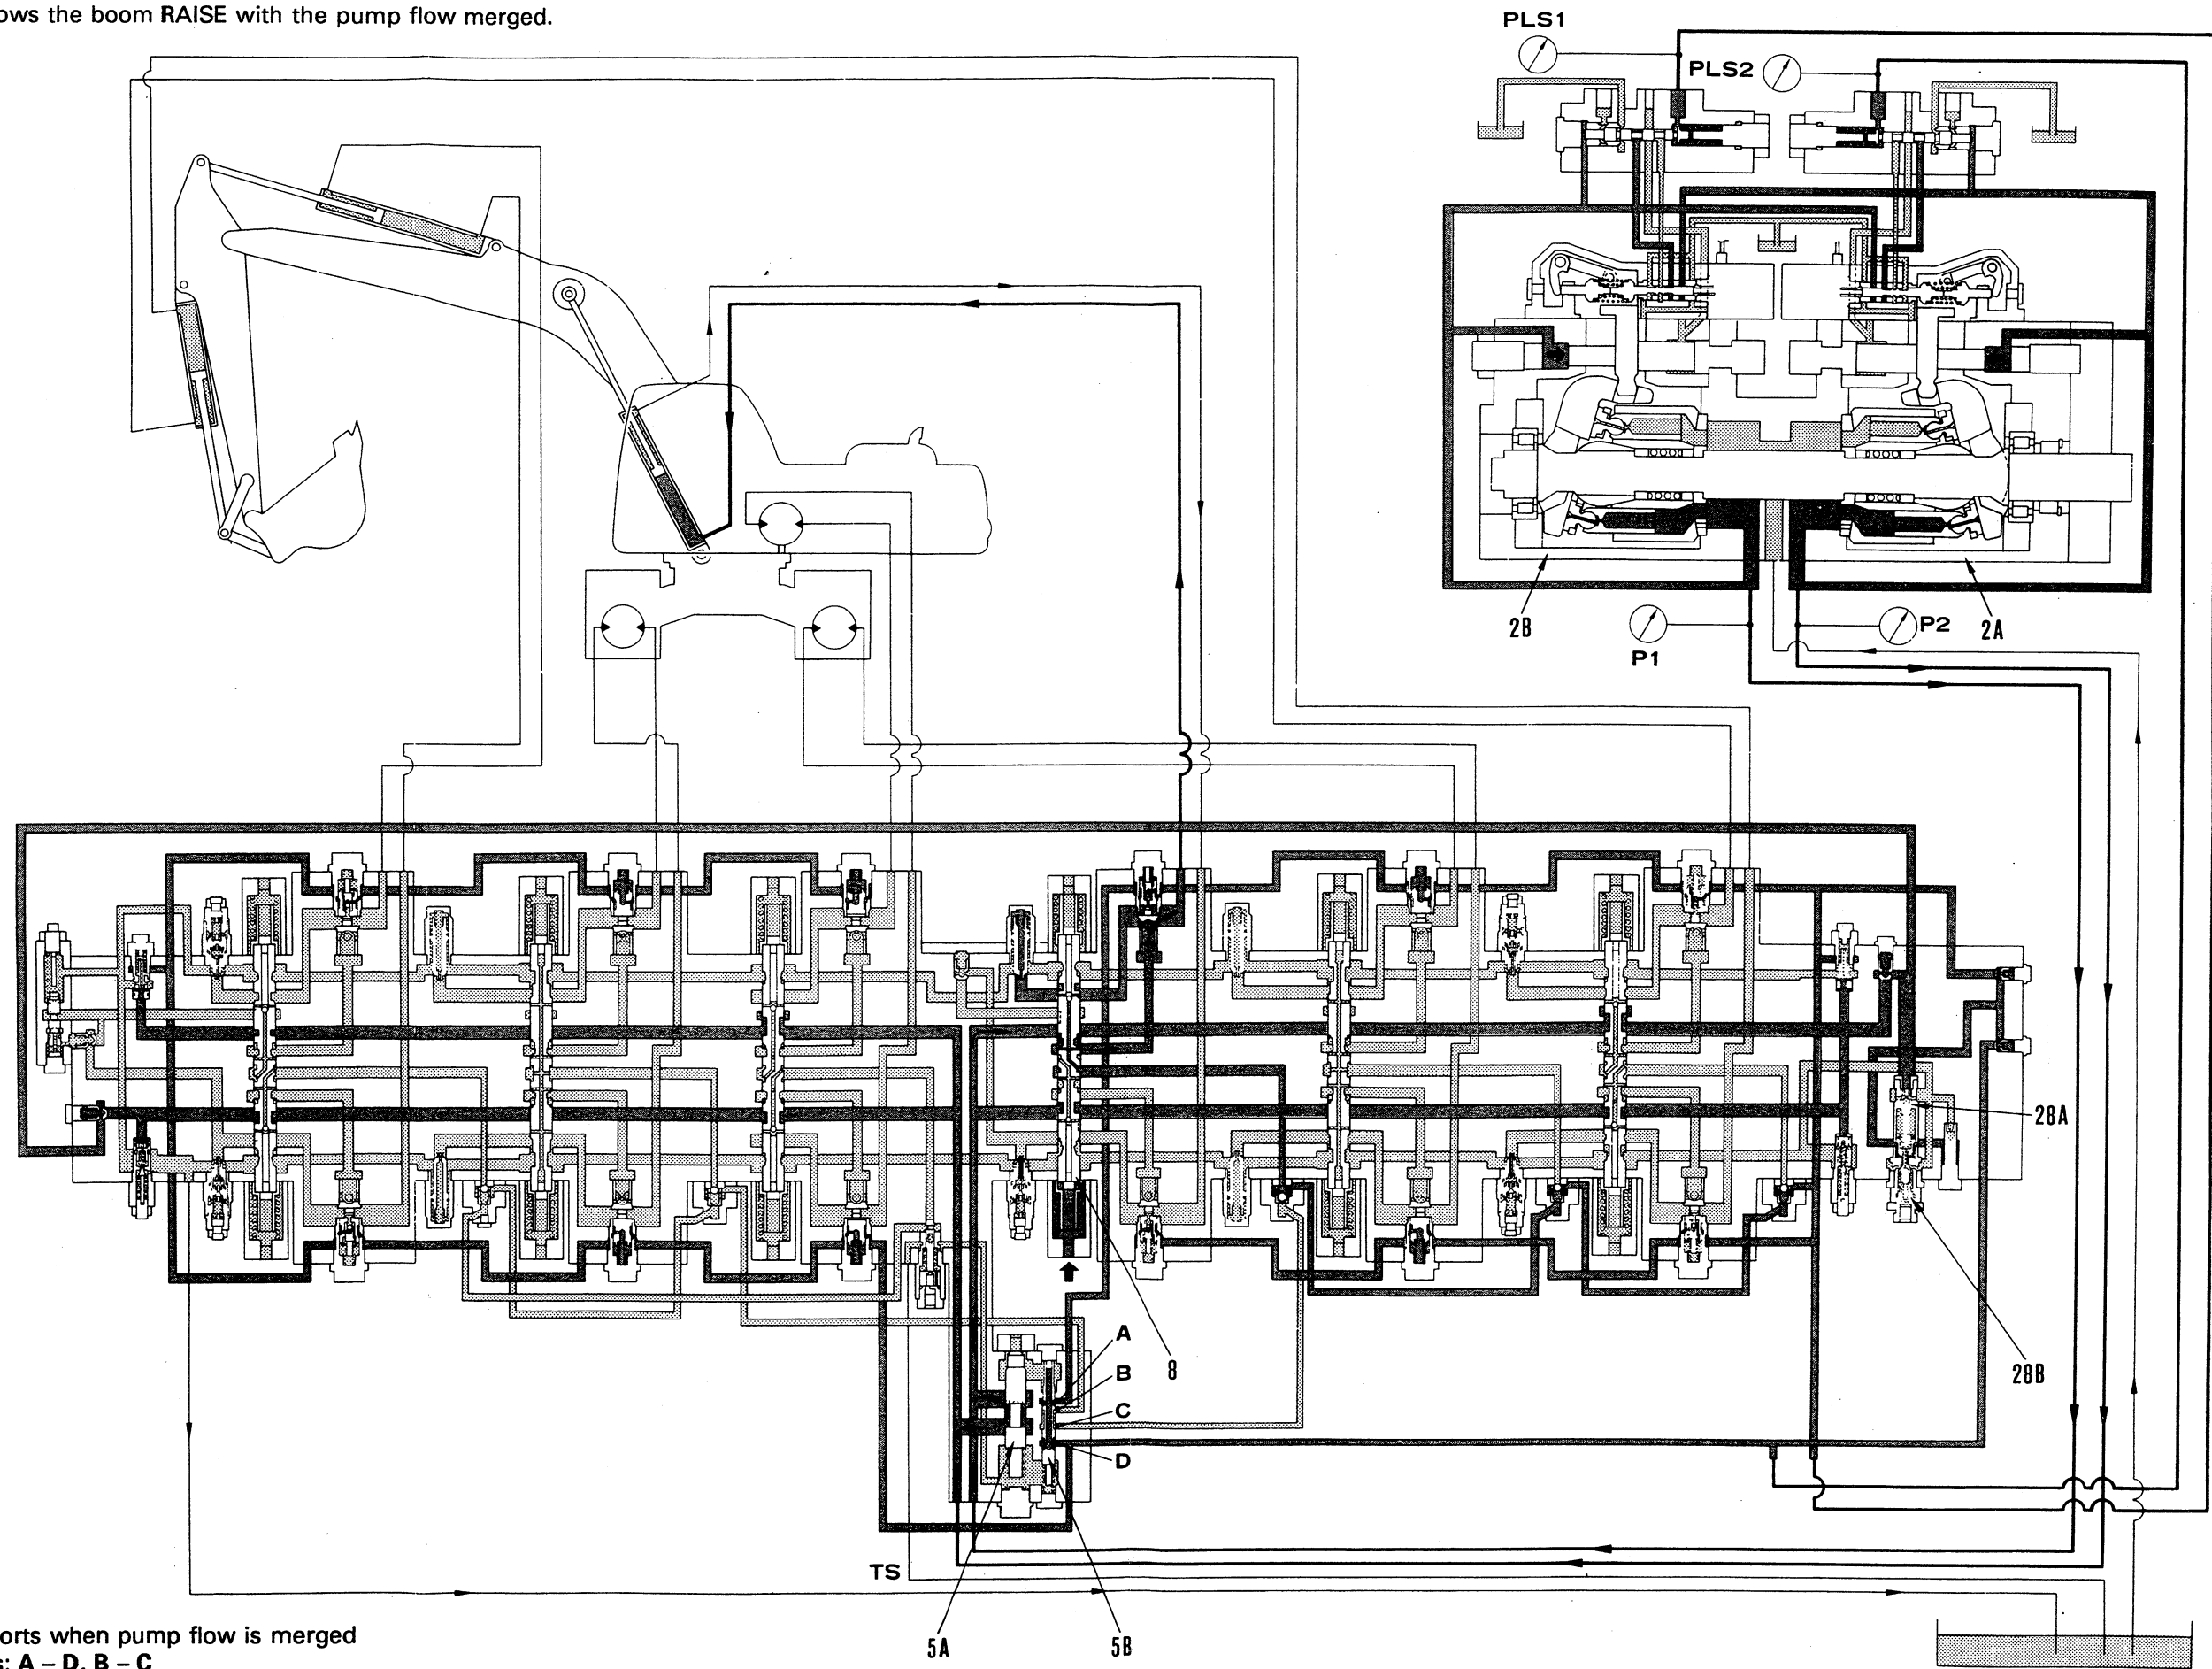


- Connection of ports when pump flow is merged
Connected ports: A – D, B – C

Operation

- When the boom RAISE is operated, main pumps (2A) and (2B) are both at the maximum swash plate angle, and main unload valve (28A) is closed.
- At this point, for the meter-in opening of boom spool (8), even if both pumps are at the maximum swash plate angle, the LS differential pressure is set to be smaller than the pump LS control pressure.
In other words, LS differential pressure ΔPLS is $\Delta PLS < \text{pump LS control pressure}$, so the pump swash plate angle becomes the maximum.
- In addition, the flow of main pump (2A) passes through pump merge-divider valve (5A) and flows to boom spool (8).

6. Pump flow merged, swing operated independently

★ The diagram shows the swing operated independently with the pump flow divided.

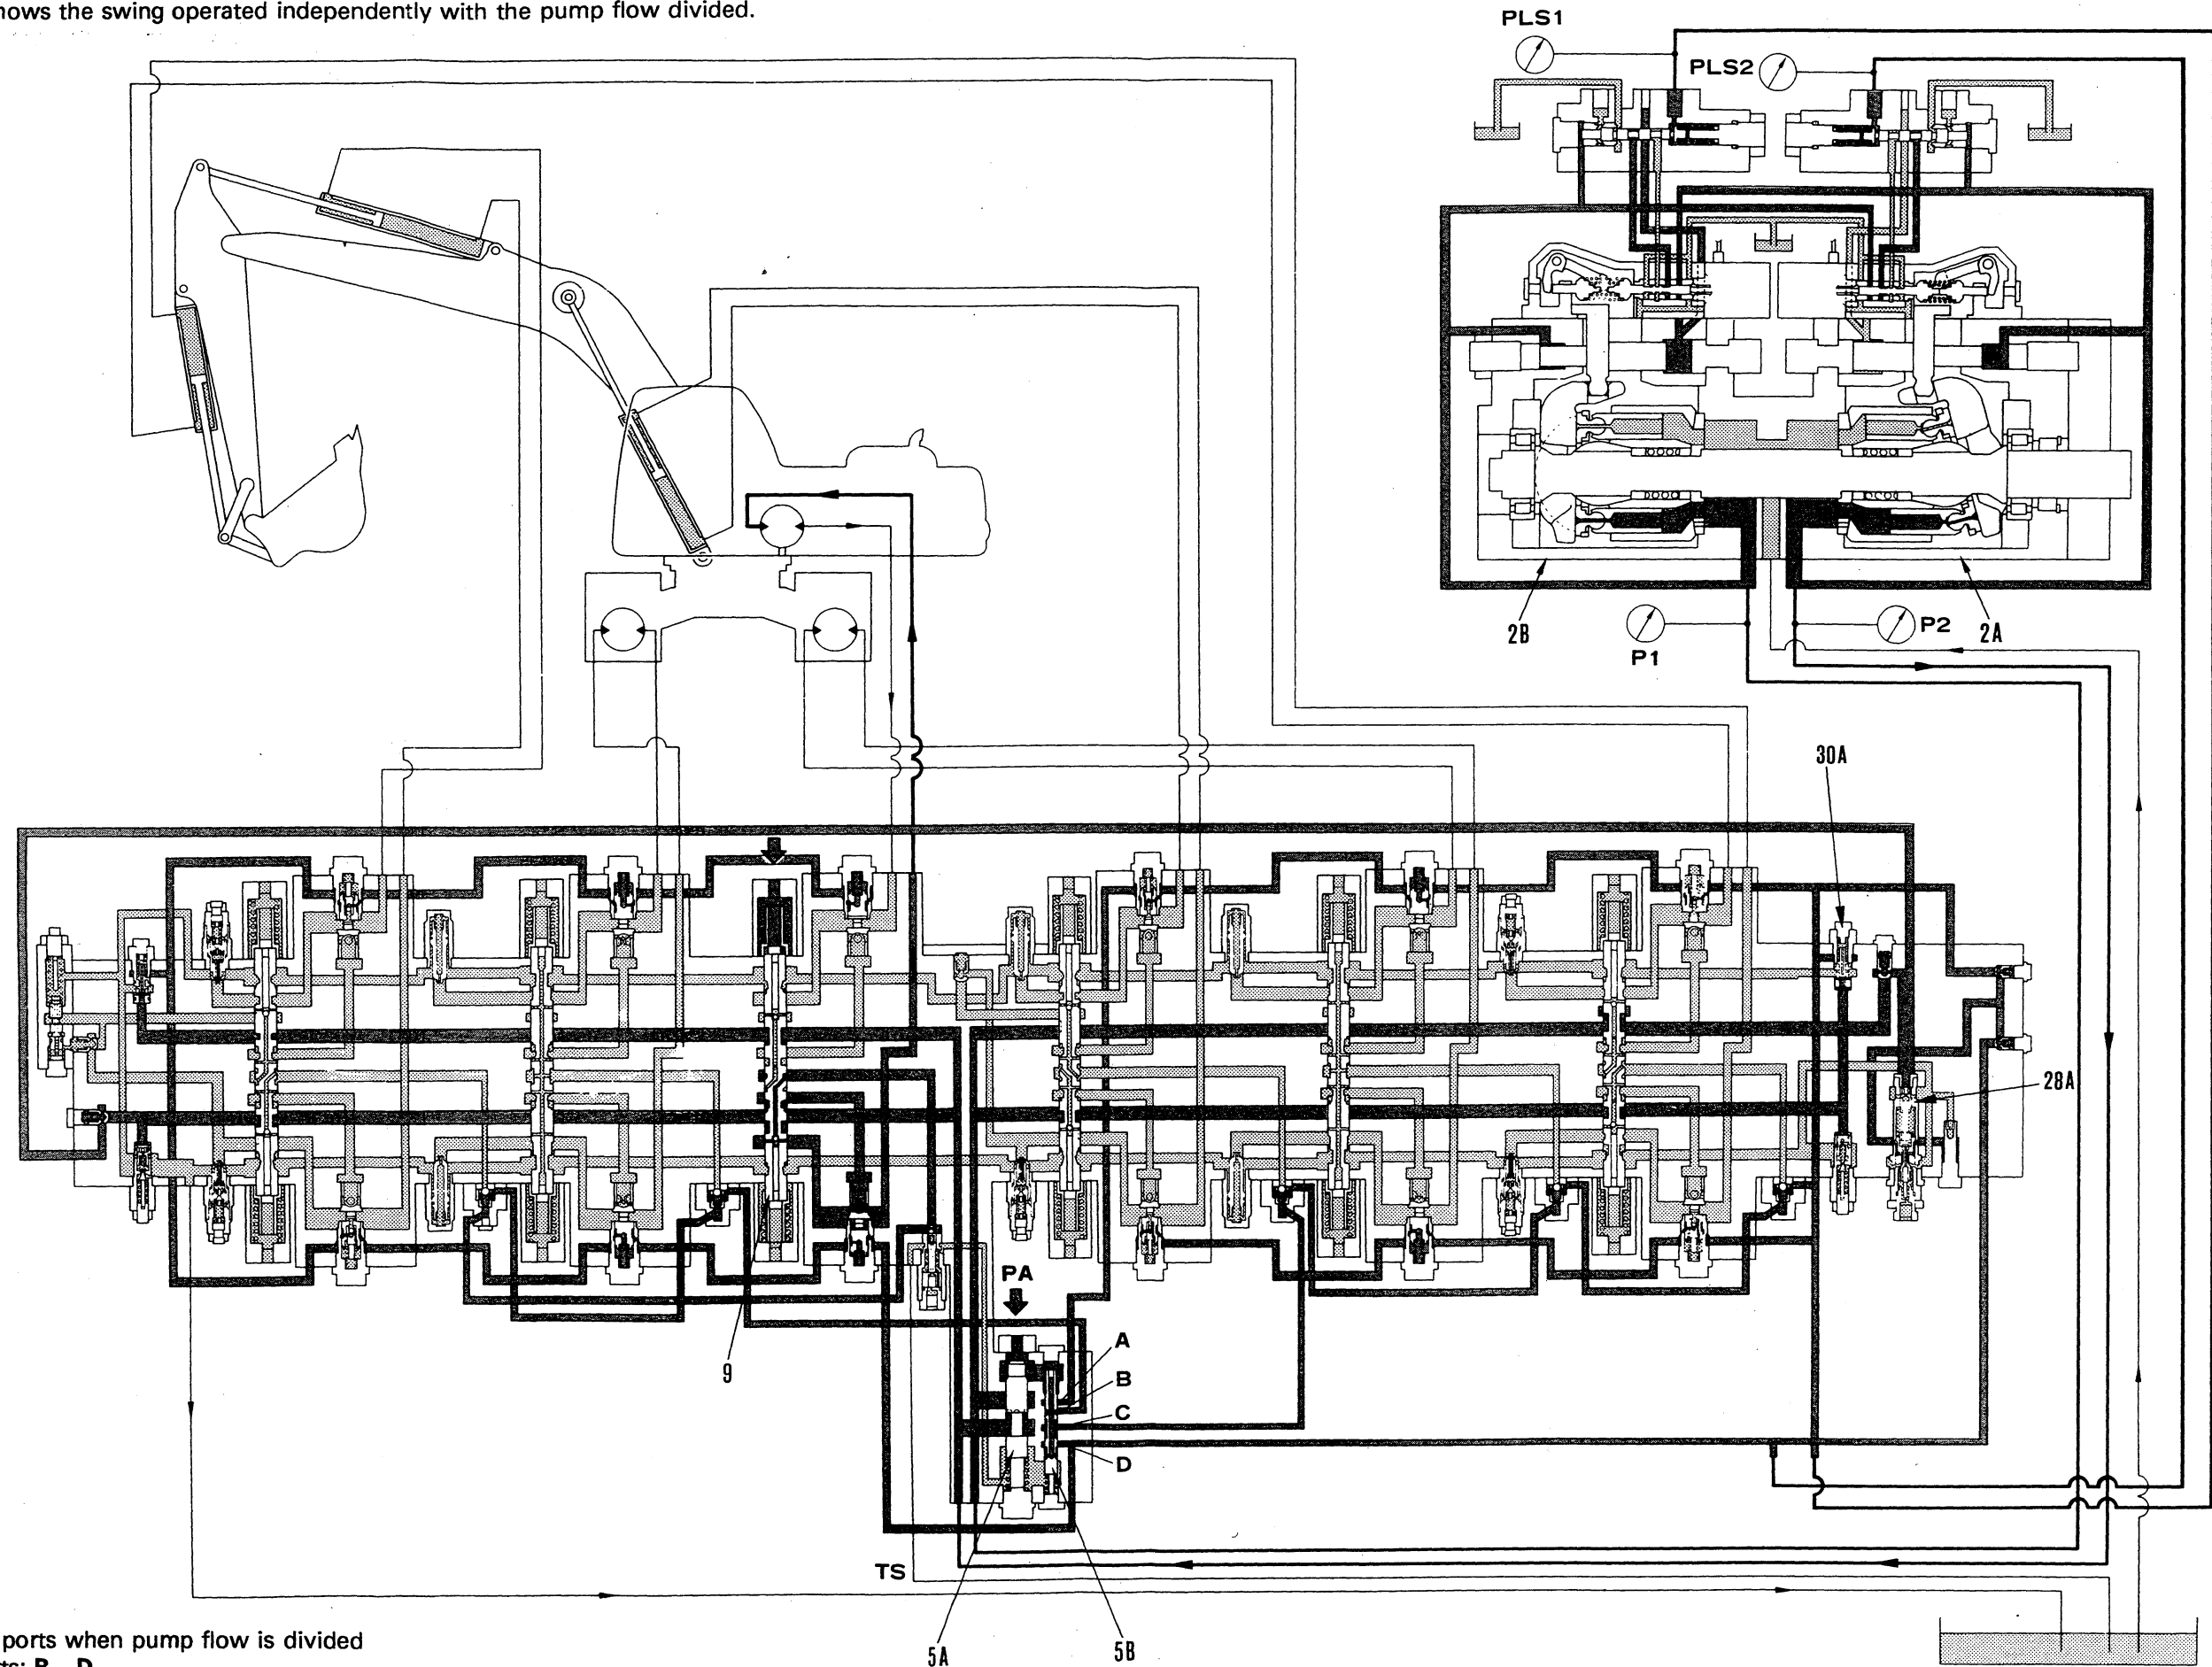


- Connection of ports when pump flow is divided
Connected ports: B - D
Disconnected ports: A, C

Operation

- Pilot pressure **PA** of pump merge-divider valve (5A) ON
- When the swing is operated, main pump (2A) of the arm group is at the maximum swash plate angle, and main unload valve (28A) is closed.
- At this point, for the meter-in opening of swing spool (9), even if main pump (2A) is at the maximum swash plate angle, the LS differential pressure is set to be smaller than the pump LS control pressure.
In other words, LS differential pressure ΔPLS is $\Delta\text{PLS} < \text{pump LS control pressure}$, so the pump swash plate angle of main pump (2A) becomes the maximum.
- All spools in the bucket group are at neutral, so main pump (2B) is at the minimum swash plate angle, and sub-unload valve (30A) is actuated. For details of the actuation, see 2. Pump flow merged, one side actuated, other side neutral.

 ①




Operation


- Pilot pressure **PA** of pump merge-divider valve (5A) ON
- 1) When the straight travel is operated, a flow of oil is supplied from the main pump to match the stroke of the left and right travel spools (10) and (7).
Flow of oil from main pump (2A):
 To L.H. travel spool (10) (arm group)
Flow of oil from main pump (2B):
 To R.H. travel spool (7) (bucket group)
The straight travel is compensated by the travel junction valve.
 - 2) From the condition in 1) above, if the lever on the side being steered is returned (the oil flow becomes small) or the lever on the other side is operated (in the opposite direction (forward or reverse)), the oil flow from the pump is being divided, so the left and right travel circuits are controlled independently and the machine is steered.

8. Pump flow merged, compound operation


- ★ The diagram shows the boom RAISE + arm IN with the pump flow merged.

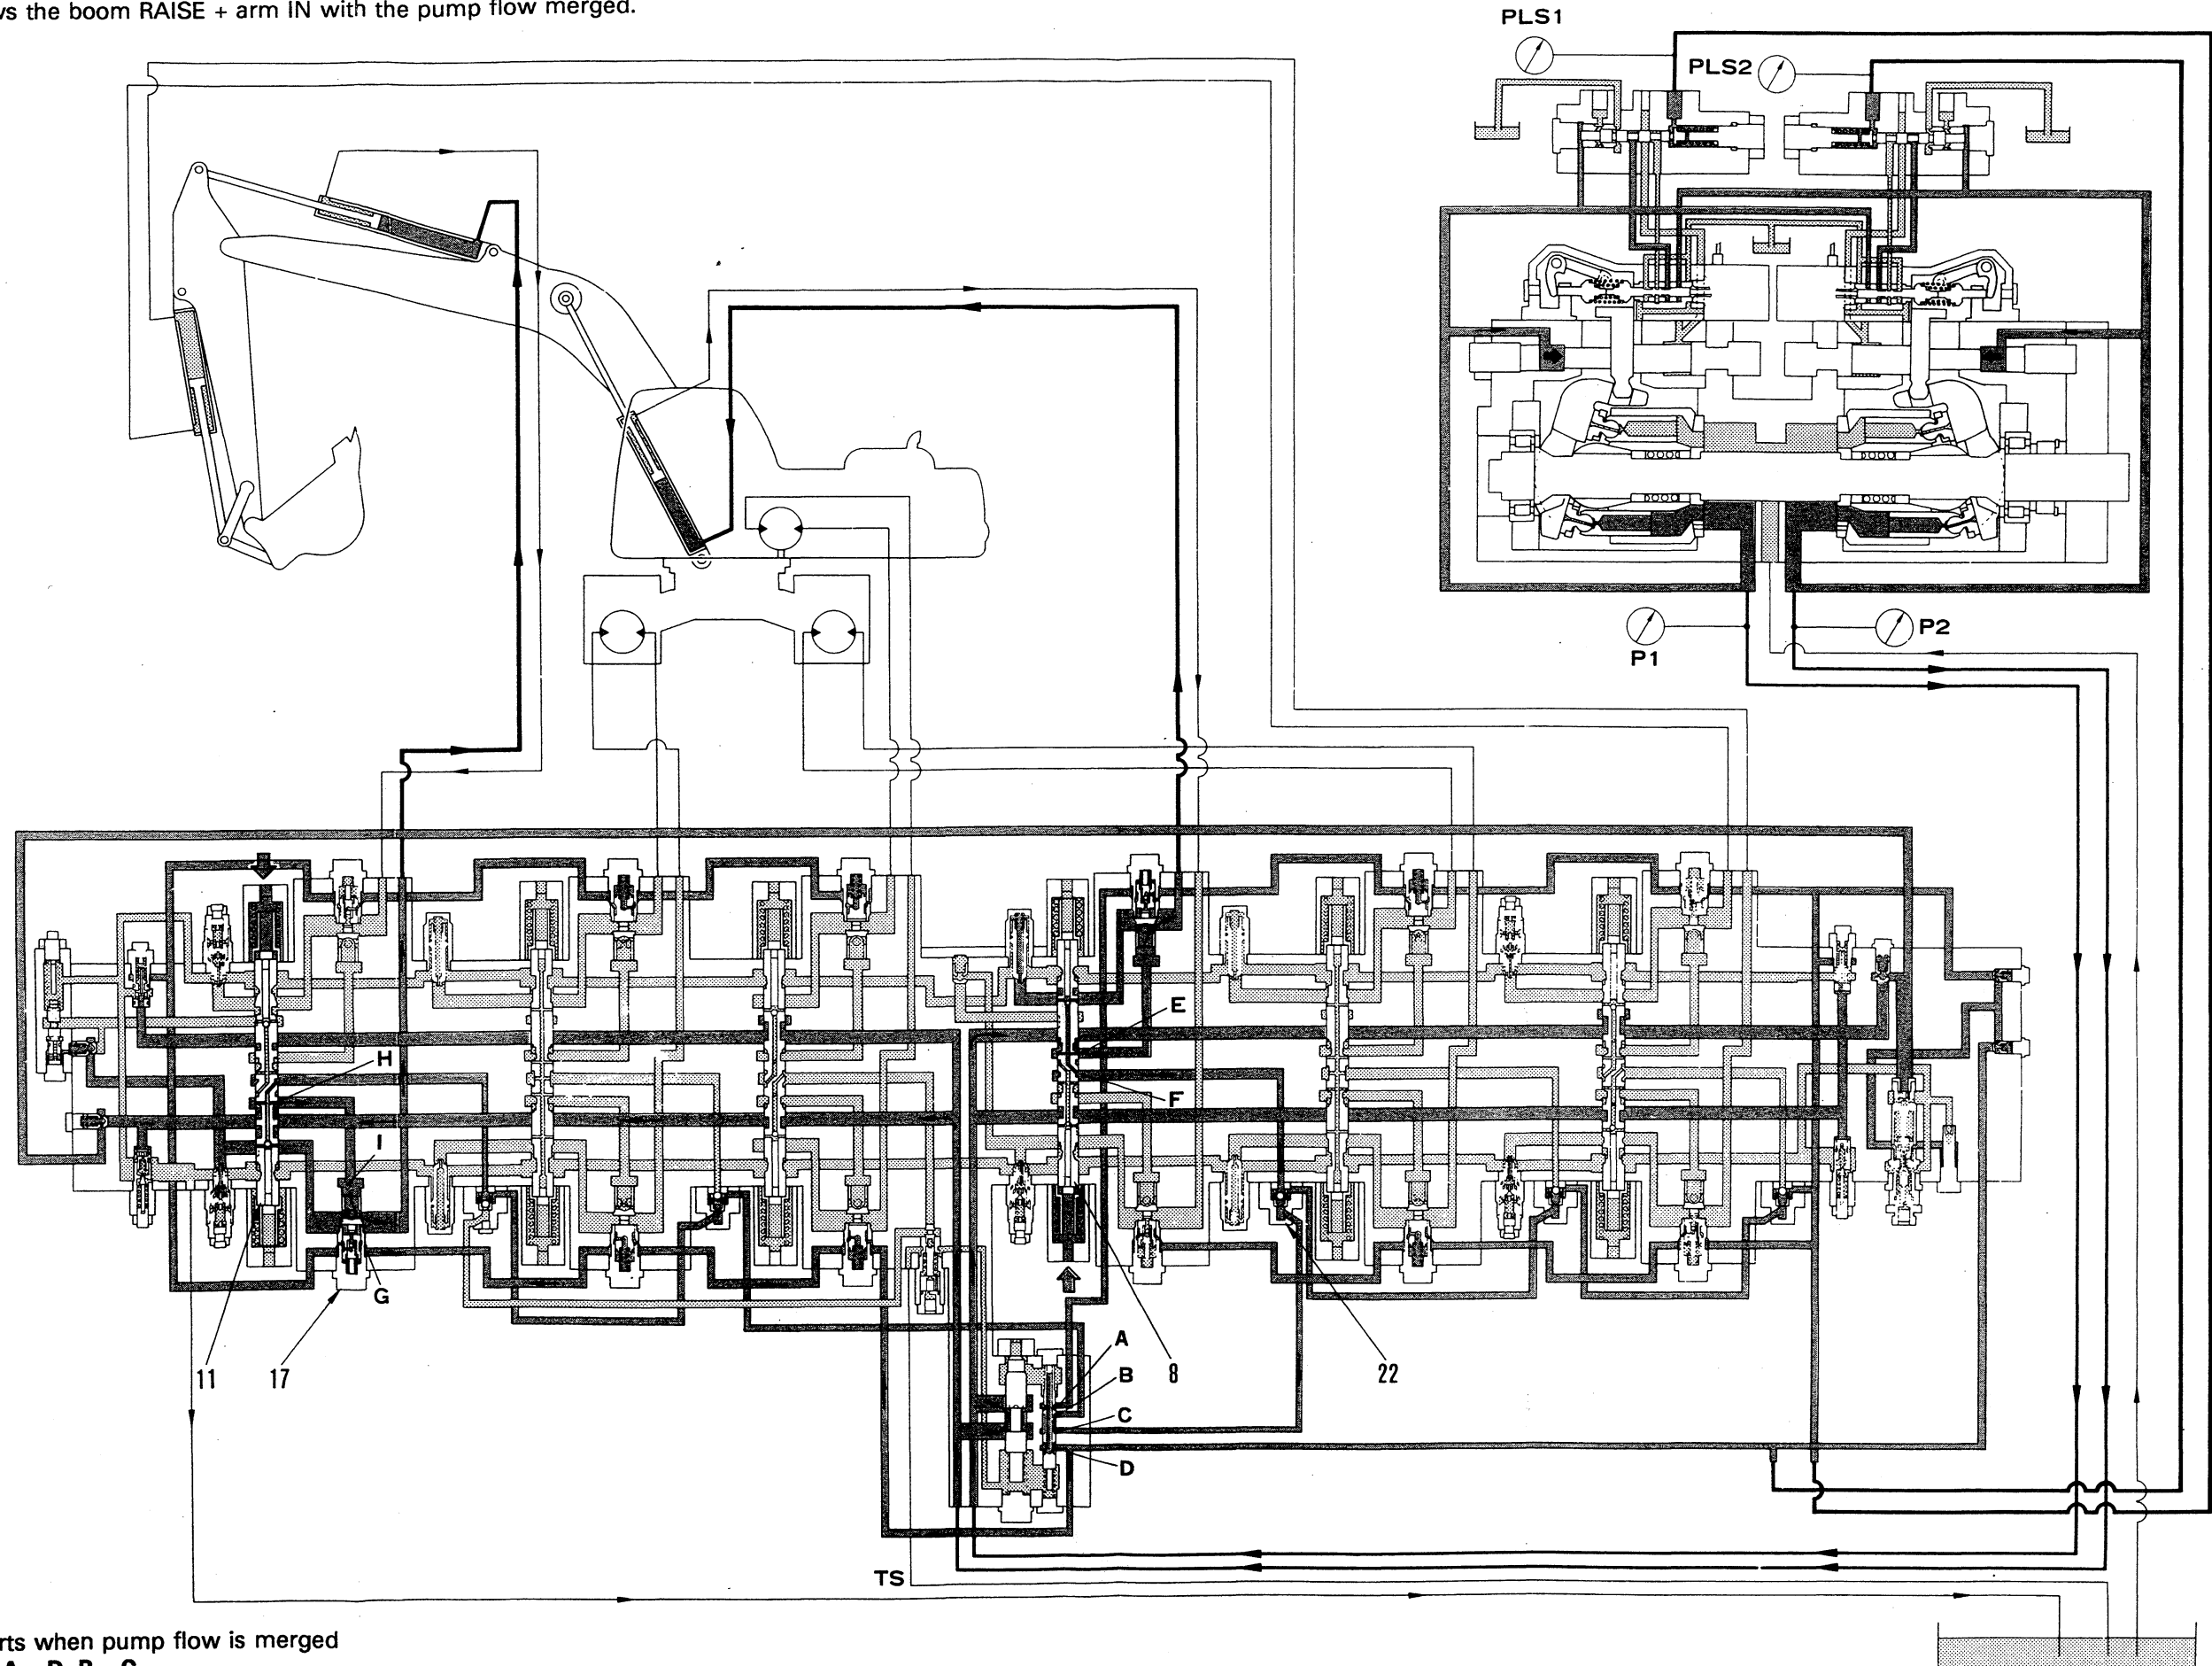

- Connection of ports when pump flow is merged
Connected ports: A - D, B - C

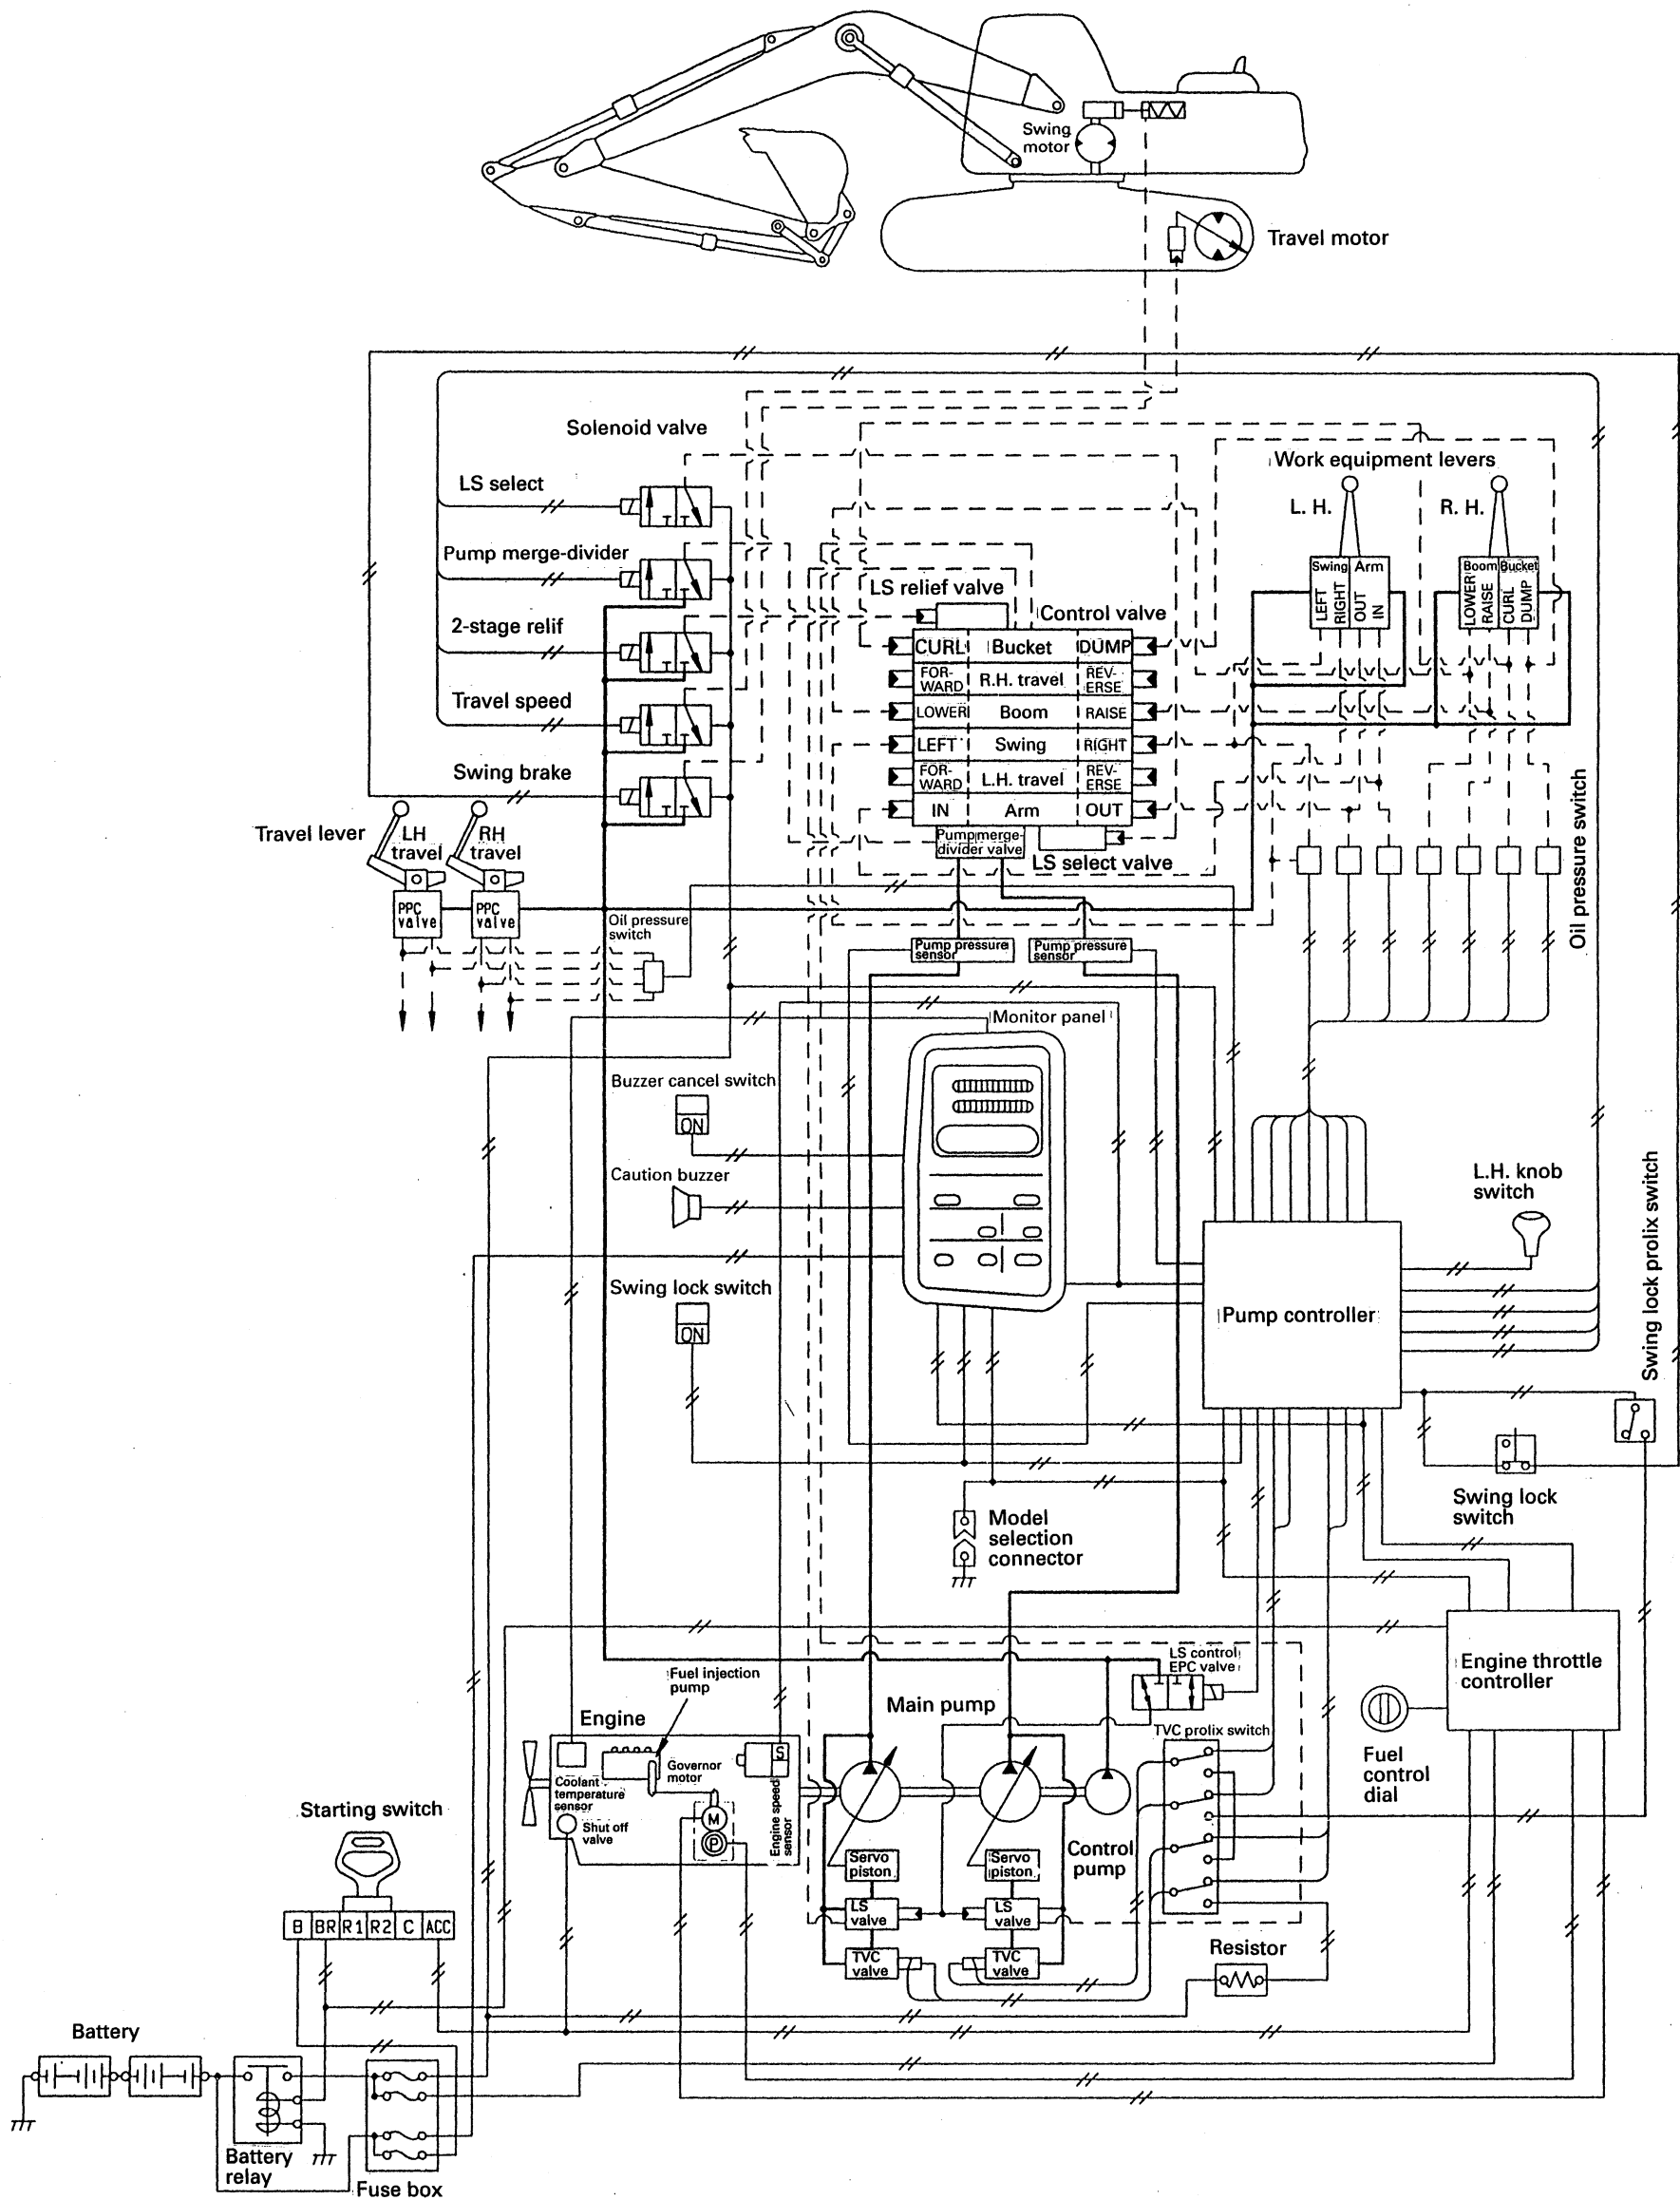


1. PUMP & ENGINE MUTUAL CONTROL FUNCTION

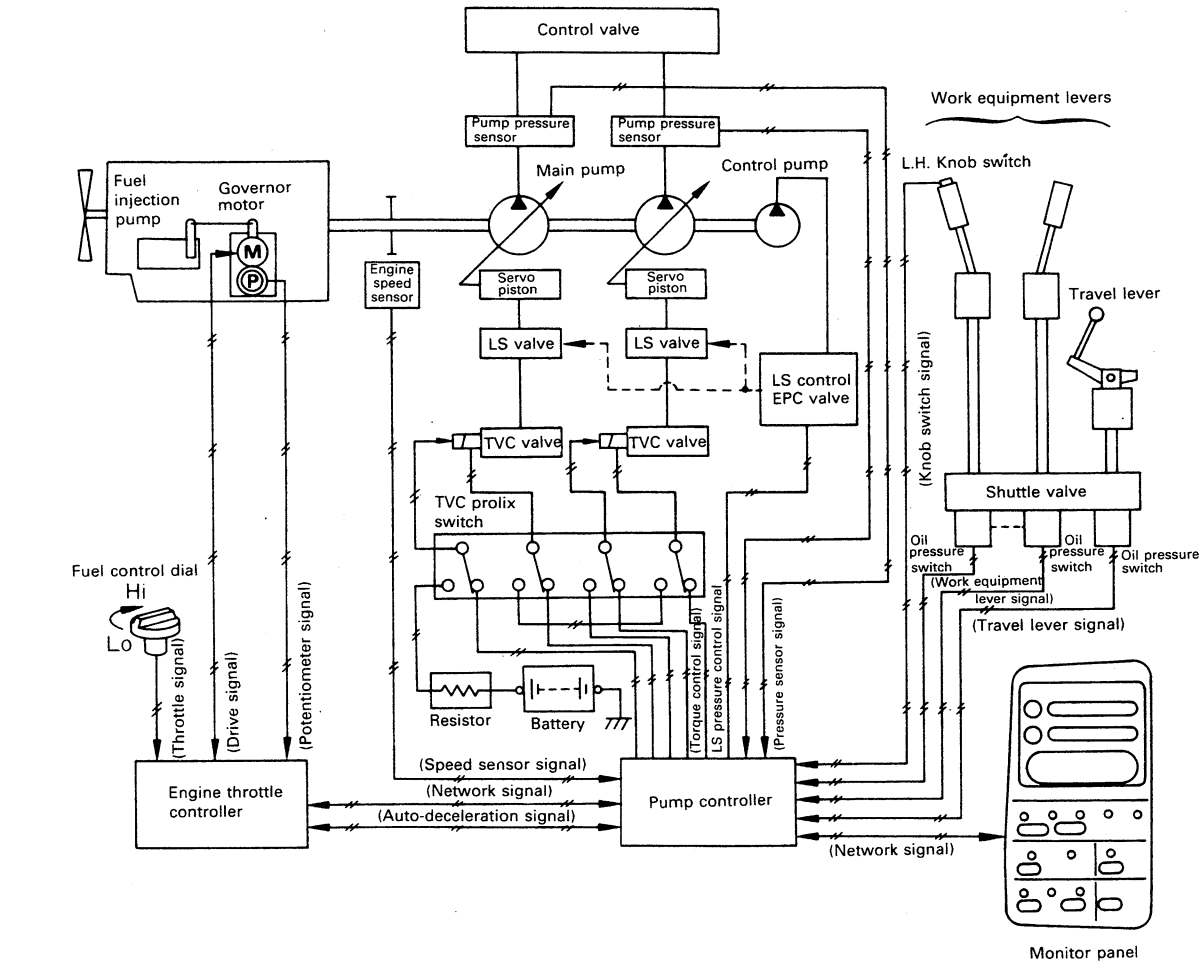

FUNCTION


- There are five modes available for selection with the working mode switch on the monitor panel. These modes are the heavy-duty operation (H/O) mode, general operation (G/O) mode, finishing operation (F/O) mode, lifting operation (L/O) mode, and the breaker operation (B/O) mode. It is possible to select the most suitable engine torque and pump absorption torque to match the nature of the work.
- The pump controller detects the actual engine speed and the speed set by the engine governor through the fuel control dial in accordance with the pump absorption torque set for each mode, and carries out control so that the pump absorbs all of the torque at each output point of the engine.

• Engine torque curve

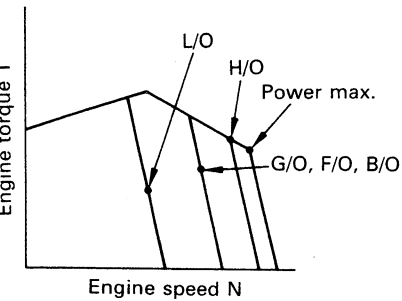


205F06138

• Engine horsepower curve

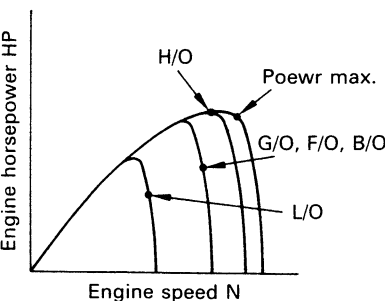

205F06139

• Pump output curve

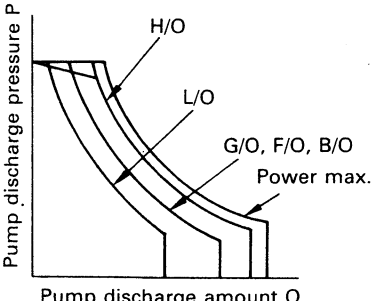

205F06140


TROUBLESHOOTING

CONNECTOR TYPES AND MOUNTING LOCATIONS

Con- nector No.	Type	No. of pins	Electrical component	Add- ress	Con- nector No.	Type	No. of pins	Electrical component	Add- ress
M40	KES1	2	Right working light	D3	S02	X	2	Boom RAISE oil pressure switch	R1
M41	KES1	2	Left working light	—	S03	X	2	Arm OUT oil pressure switch	R2
M42	KES1	2	Rear working light	F4	S04	X	2	Boom LOWER oil pressure switch	—
M43	X	2	Intermediate connector	D2	S05	X	2	Arm IN oil pressure switch	—
M45	M	3	Network bus	N5	S06	X	2	Bucket CURL oil pressure switch	R3
M49	—	1	Refuel pump	E5	S07	X	2	Bucket DUMP oil pressure switch	—
M50	KES1	2	Rear light	H9	S08	X	2	Swing oil pressure switch	—
M51	KES1	2	Left front lamp	D1	S09	X	2	Att. pedal pressure switch	D2
M52	X	2	Overload alarm switch	G4	S10		2	Att. pedal pressure switch	
M53		2	Heated seat	F1,H4	S11		2	Att. pedal pressure switch	
M55	M	2	Beacon switch	P9	V02	X	2	LS select solenoid valve	N1
M56	M	2	Heated seat switch	—	V03	X	2	Pump merge-divider solenoid valve	—
M57	—	1	Intermediate connector	G1	V04	X	2	Swing brake solenoid valve	—
M61	—	1	Engine room lamp	J9	V05	X	2	2-stage relief solenoid valve	M1
P01	040	20	Monitor panel	M6	V06	X	2	Travel speed solenoid valve	N1
P02	040	16	Monitor panel	—	W04	M	6	Wiper motor	M5
P03	M	2	Buzzer cancel switch	O8	W08	070	18	Wiper motor controller	P5
P04	M	2	Alarm buzzer	M7	W10	M	4	Rear limit switch	—
P05	X	1	Engine oil level sensor	J1	W15	KES0	4	Lower wiper	D1
P06	X	1	Fuel level sensor	F5	W16	M	2	Lower wiper switch	O8
P07	—	2	Coolant temperature sensor	J9	X01	MIC	21	Intermediate connector	P9
P08	X	2	Coolant level sensor	K8	X05	M	4	Swing lock switch	N8
P09	X	1	Hydraulic oil level sensor		X07	MIC	17	Intermediate connector	P9
P10	KES1	1	Service meter	P9					
P11	—	1	Air cleaner clogging sensor	J9					
P12	—	1	Air cleaner clogging sensor	—					
R04	Shinagawa	5	Light relay	O5					
R05	Shinagawa	5	Light relay	—					
R10	Shinagawa	5	Light relay	—					
R11	Shinagawa	5	Lower wiper relay	N5					
S01	X	2	Travel oil pressure switch	R2					

★ The Address column in the table above shows the address in the connector arrangement drawing (2-dimensional drawing).

★ This table includes connectors that are not shown in the drawing.

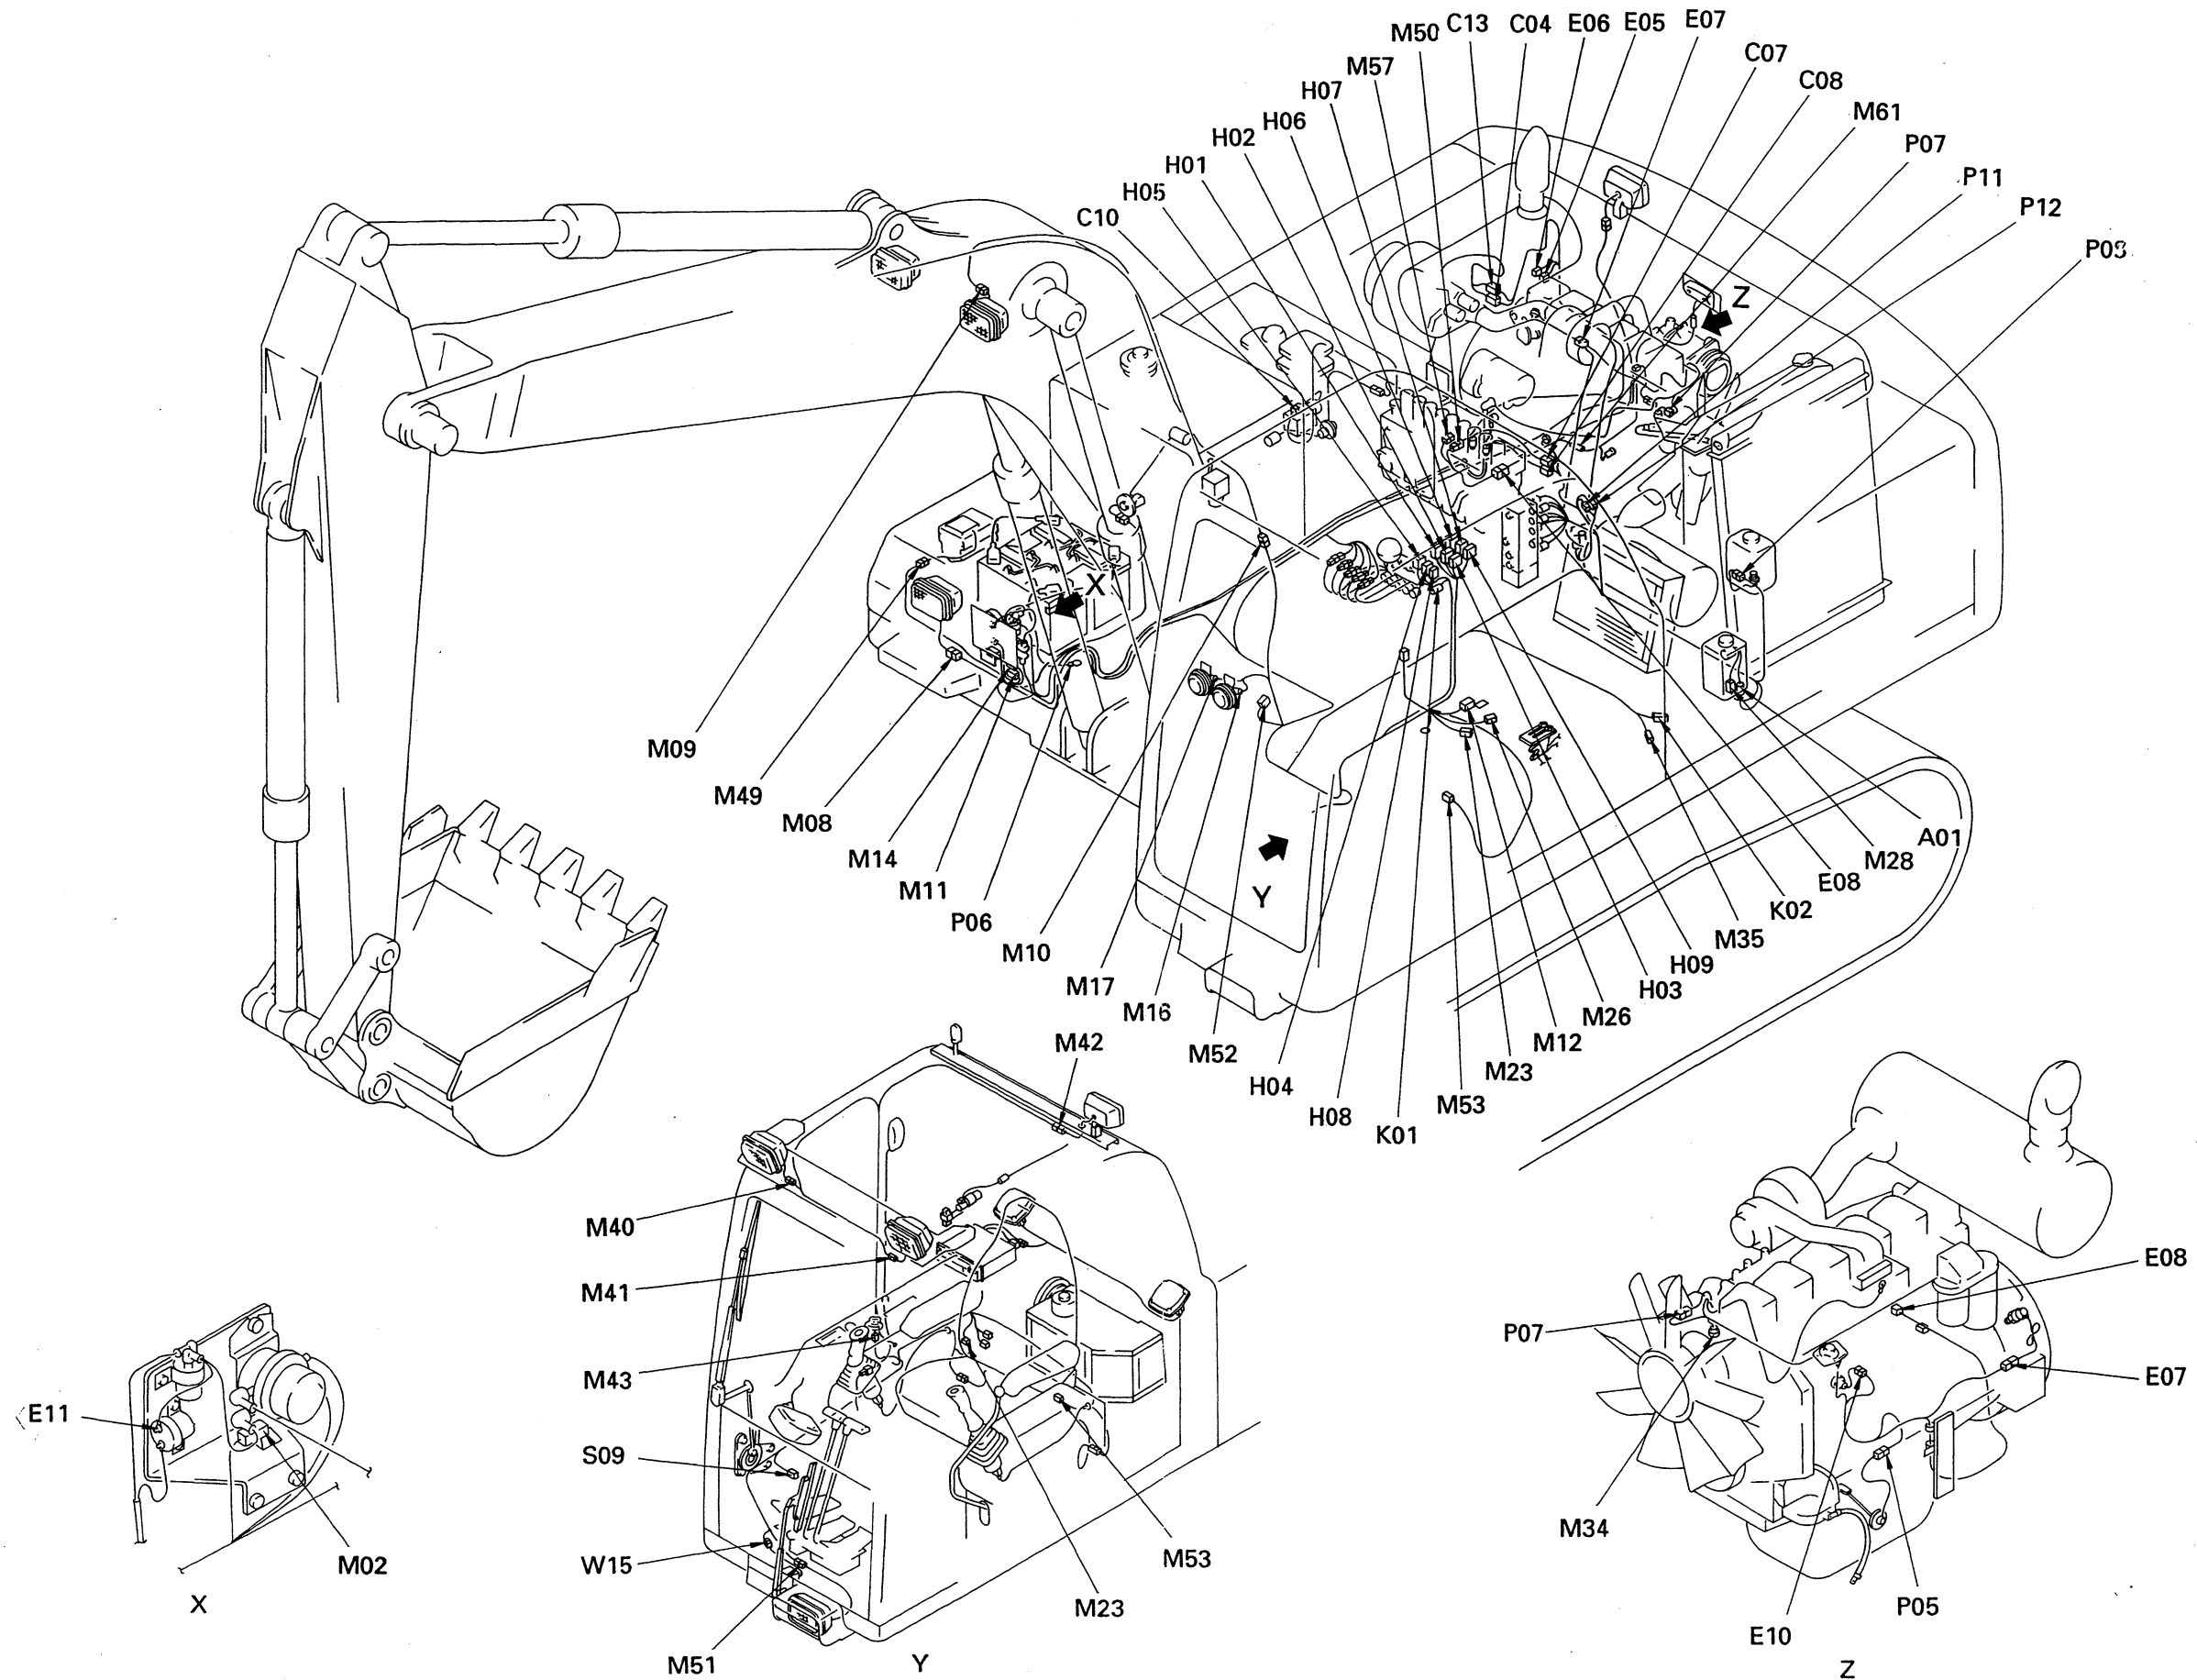

K20506


TROUBLESHOOTING

CONNECTOR TYPES AND MOUNTING LOCATIONS


Con- nector No.	Type	No. of pins	Electrical component
M40	KES1	2	Right working light
M41	KES1	2	Left working light
M42	KES1	2	Rear working light
M43	X	2	Intermediate connector
M45	M	3	Network bus
M49	–	1	Refuel pump
M50	KES1	2	Rear light
M51	KES1	2	Left front lamp
M52	X	2	Overload alarm switch
M53		2	Heated seat
M55	M	2	Beacon switch
M56	M	2	Heated seat switch
M57	–	1	Intermediate connector
M61	–	1	Engine room lamp
P01	040	20	Monitor panel
P02	040	16	Monitor panel
P03	M	2	Buzzer cancel switch
P04	M	2	Alarm buzzer
P05	X	1	Engine oil level sensor
P06	X	1	Fuel level sensor
P07	–	2	Coolant temperature sensor
P08	X	2	Coolant level sensor
P09	X	1	Hydraulic oil level sensor
P10	KES1	1	Service meter
P11	–	1	Air cleaner clogging sensor
P12	–	1	Air cleaner clogging sensor
R04	Shinagawa	5	Light relay
R05	Shinagawa	5	Light relay
R10	Shinagawa	5	Light relay
R11	Shinagawa	5	Lower wiper relay
S01	X	2	Travel oil pressure switch

Con- nector No.	Type	No. of pins	Electrical component
S02	X	2	Boom RAISE oil pressure switch
S03	X	2	Arm OUT oil pressure switch
S04	X	2	Boom LOWER oil pressure switch
S05	X	2	Arm IN oil pressure switch
S06	X	2	Bucket CURL oil pressure switch
S07	X	2	Bucket DUMP oil pressure switch
S08	X	2	Swing oil pressure switch
S09	X	2	Att. pedal pressure switch
S10		2	Att. pedal pressure switch
S11		2	Att. pedal pressure switch
V02	X	2	LS select solenoid valve
V03	X	2	Pump merge-divider solenoid valve
V04	X	2	Swing brake solenoid valve
V05	X	2	2-stage relief solenoid valve
V06	X	2	Travel speed solenoid valve
W04	M	6	Wiper motor
W08	070	18	Wiper motor controller
W10	M	4	Rear limit switch
W15	KES0	4	Lower wiper
W16	M	2	Lower wiper switch
X01	MIC	21	Intermediate connector
X05	M	4	Swing lock switch
X07	MIC	17	Intermediate connector

- ★ The Address column in the table above shows the address in the connector arrangement drawing (2-dimensional drawing).
- ★ This table includes connectors that are not shown in the drawing.

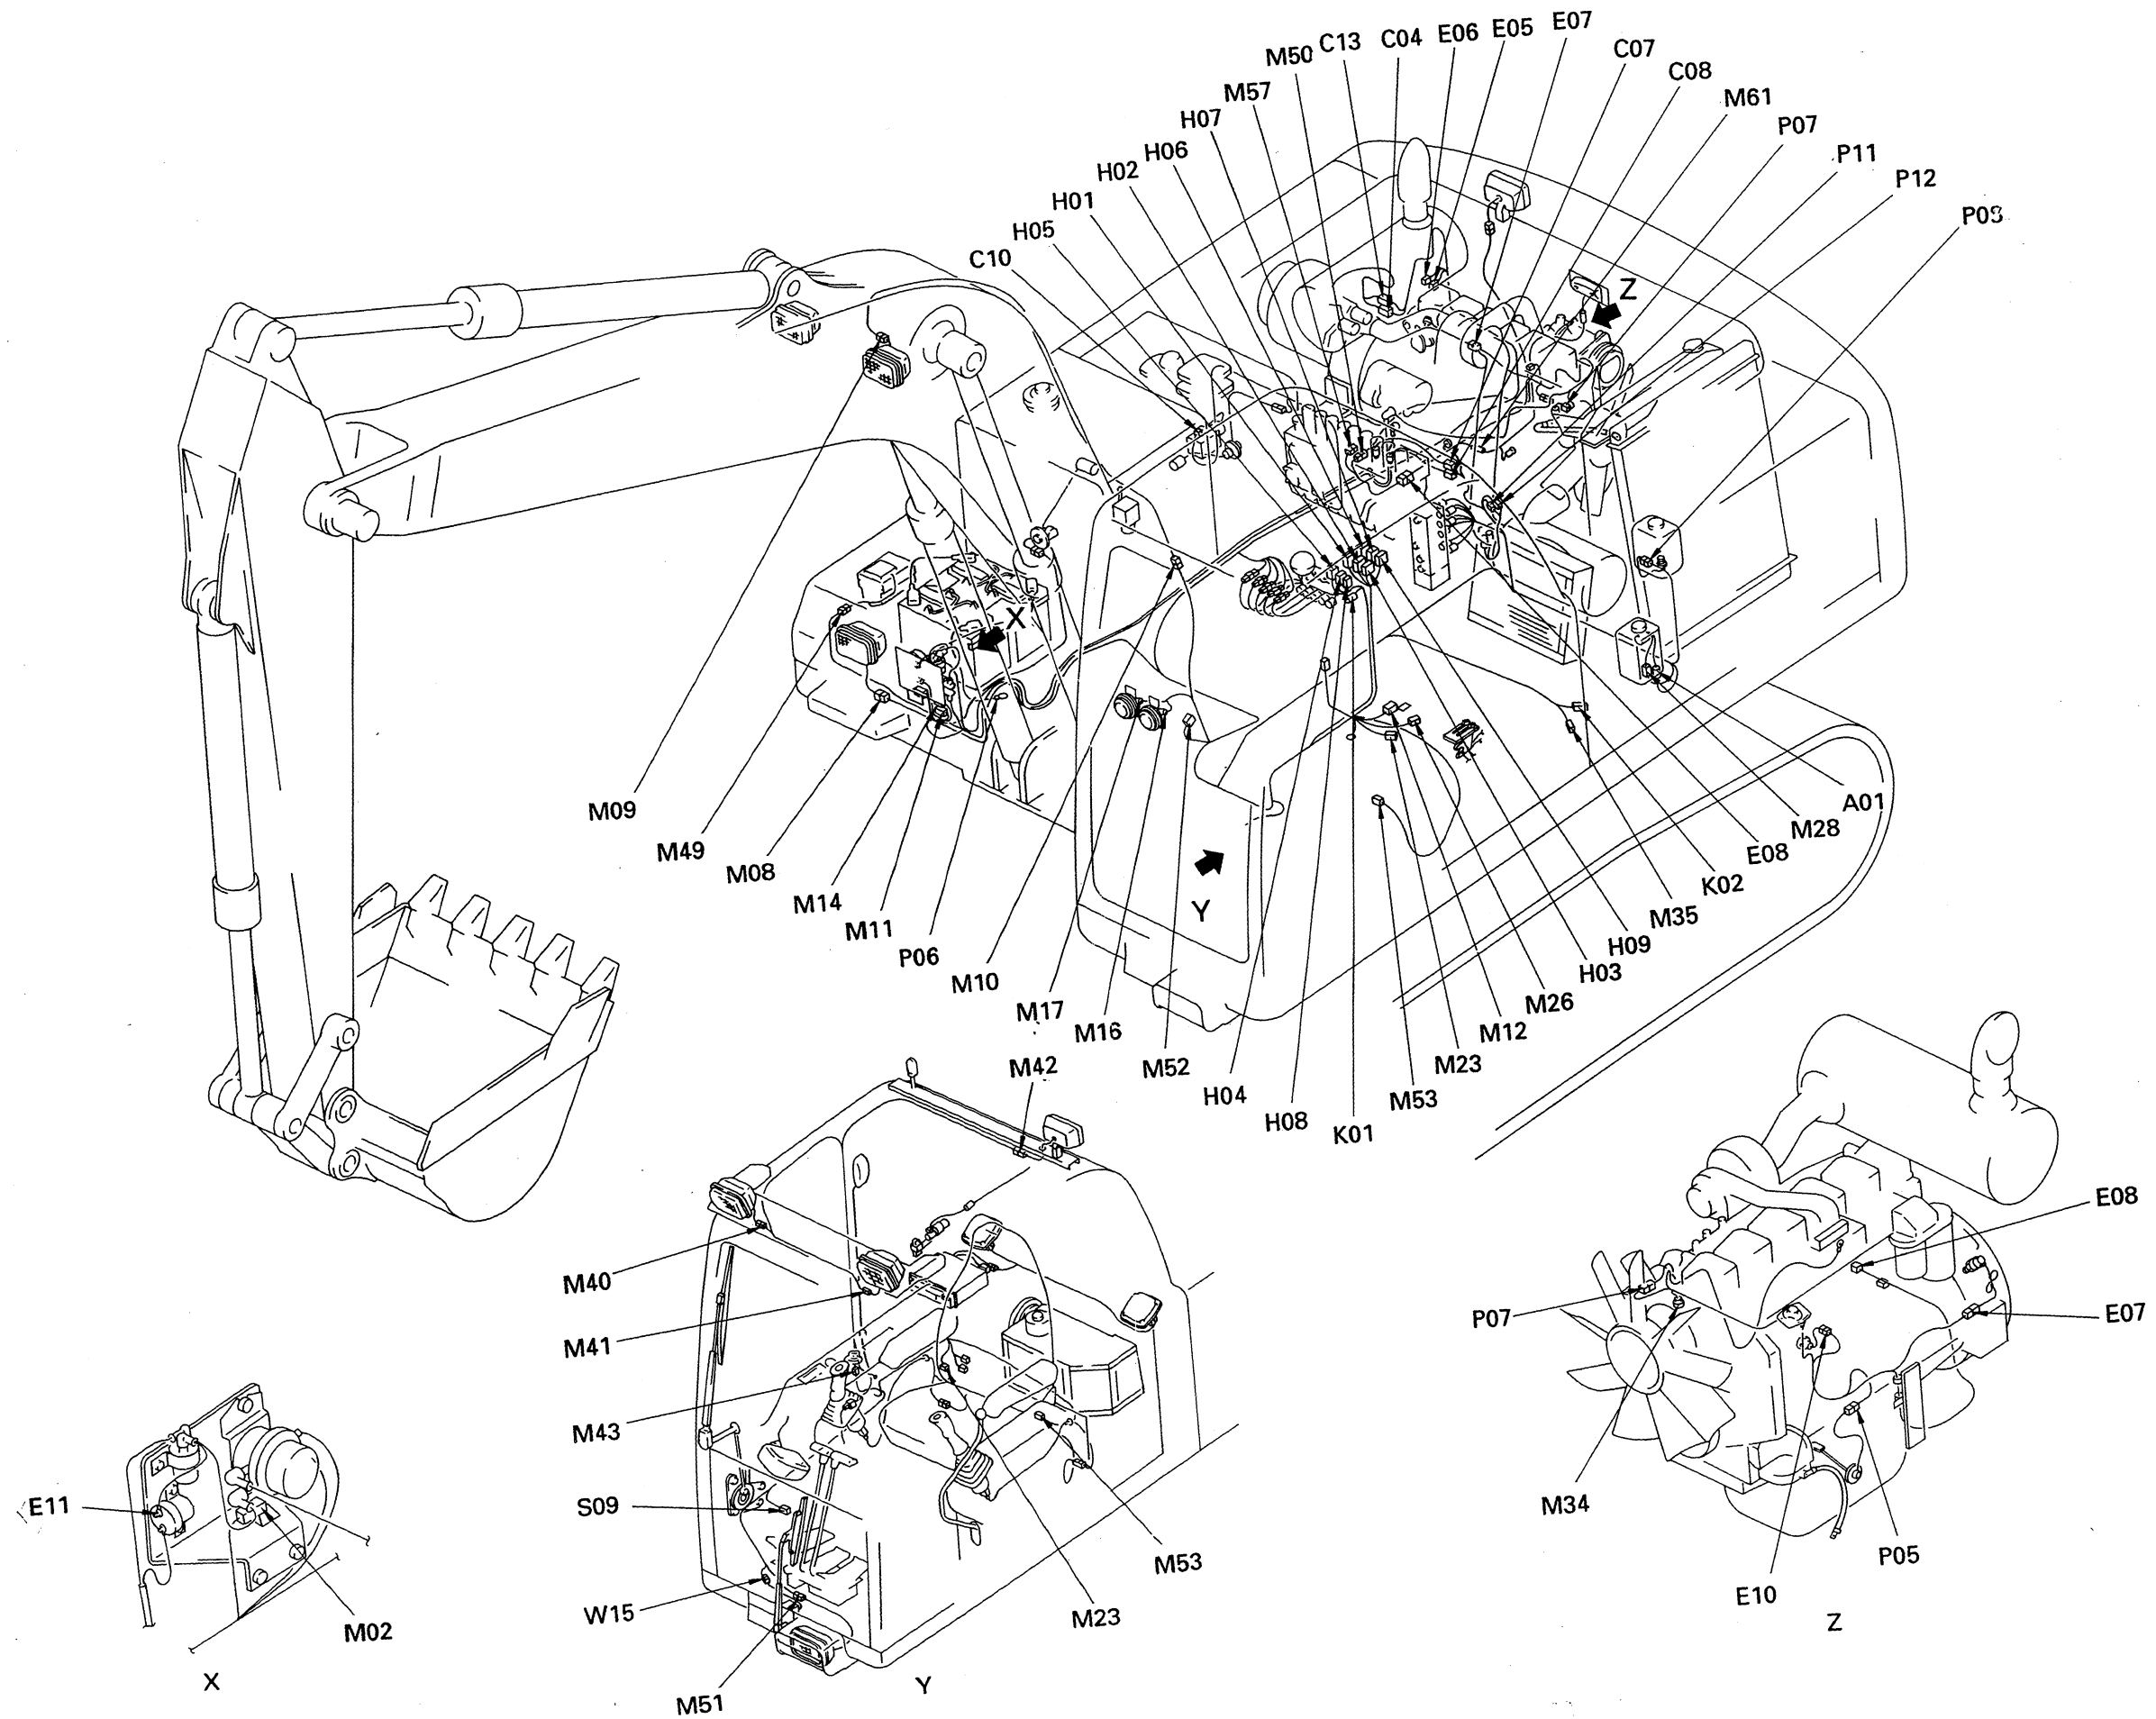

ENGINE THROTTLE CONTROLLER SYSTEM CIRCUIT DIAGRAM

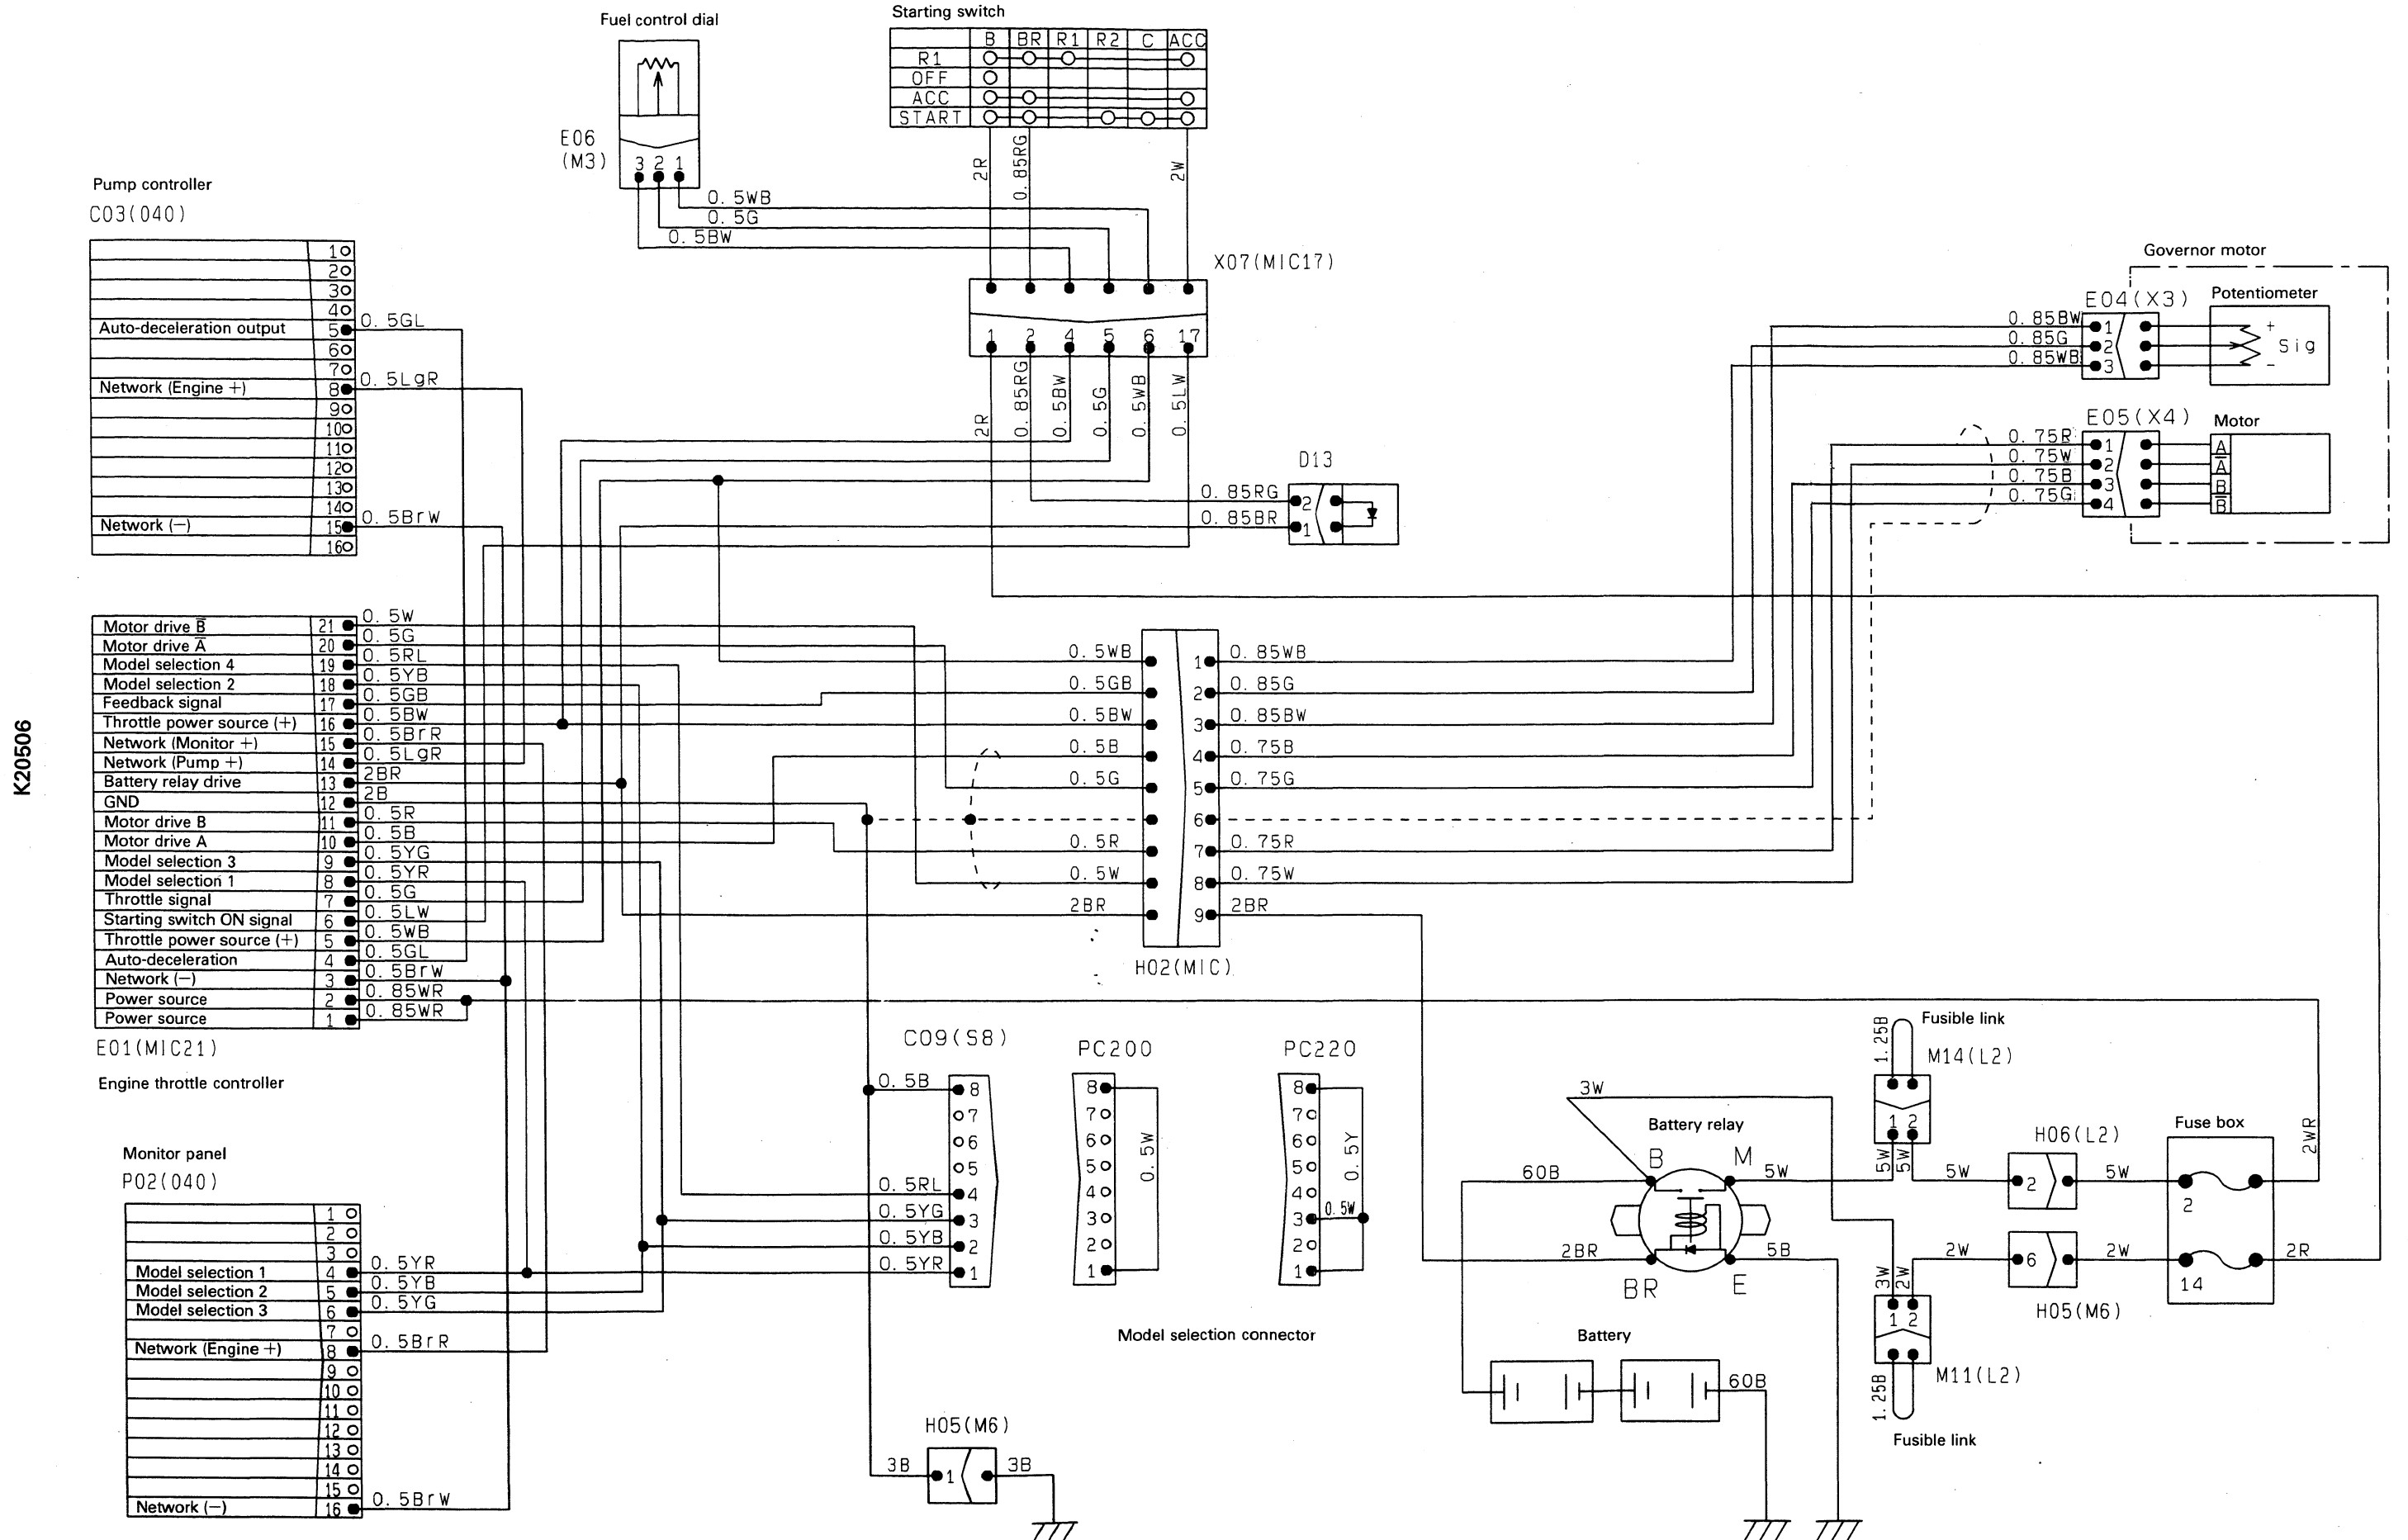

User code	Service code	Abnormal system	Nature of abnormality	Condition when normal (voltage, current, resistance)	Action by controller when abnormality is detected	Problem that appears on machine when there is abnormality																		
—	E3:05	Abnormality in model code	1. Disconnection, short circuit in model selection wiring harness 2. Abnormality in engine throttle controller 3. Part No. for model selection connector is wrong	1. PC200 Value of resistance between E01 (9) – (12) : Max. 1Ω Value of resistance between E01 (8) (18) (19) – (12) : Min. 1 MΩ 2. PC220 Value of resistance between E01 (8),(9) – (12) : Max. 1Ω Value of resistance between E01 (18) (19) – (12) : Min. 1 MΩ	Detects abnormality in input 1) Retains data when starting switch is ON 2) Functions as PC100 when non-set conditions are input 3) When model code set by controller is input, functions as model that is input [For PC200: PC220, 120, 100] [For PC220: PC200, 120, 100]	1. In case of 1), when change occurs from midway point, initial data continues as it is, so there is no abnormal phenomenon 2. In case of 2), engine runs at high idling, but low idling speed is too high, or the engine cannot stop 3. In case of 3), for example when controller recognizes PC200 as PC100: When there is excessive load, there is travel deviation																		
—	E3:06	Abnormality in governor potentiometer system	1. Short circuit in wiring harness between E01 (5) – (16), (5) – (17), (16) – (17) 2. Short circuit in wiring harness between E04 (1) – (2), (1) – (3), (2) – (3) 3. Short circuit in wiring harness between E06 (1) – (2), (1) – (3), (2) – (3) 4. Short circuit in wiring harness between E01 (5) – (7), (7) – (16) 5. Disconnection in wiring harness between E01 (5) – H02 (1) – E04 (1) 6. Disconnection in wiring harness between E01 (17) – H02 (2) – E04 (2) 7. Disconnection in wiring harness between E01 (16) – H02 (3) – E04 (3) 8. Defective governor potentiometer 9. Defective contact of E01, H02, E04 connectors	<table><tr><th>E01 (female)</th><th>E04 (male)</th><th>Resistance value</th></tr><tr><td>(5) – (17)</td><td>(1) – (2)</td><td>0.25 – 7 kΩ</td></tr><tr><td>(17) – (16)</td><td>(2) – (3)</td><td>0.25 – 7 kΩ</td></tr><tr><td>(5) – (16)</td><td>—</td><td>2 – 3 kΩ</td></tr><tr><td>—</td><td>(1) – (3)</td><td>4 – 6 kΩ</td></tr><tr><td>Between each pin and chassis</td><td>—</td><td>Min. 1 MΩ</td></tr></table>	E01 (female)	E04 (male)	Resistance value	(5) – (17)	(1) – (2)	0.25 – 7 kΩ	(17) – (16)	(2) – (3)	0.25 – 7 kΩ	(5) – (16)	—	2 – 3 kΩ	—	(1) – (3)	4 – 6 kΩ	Between each pin and chassis	—	Min. 1 MΩ	Calculates position of motor and carries out control from value of voltage immediately before abnormality occurred	1. Precision of engine speed control may be reduced. For example: 1) Engine does not change to high idling speed (a little too low) 2) Engine does not change to low idling speed (a little too high) 3) Defective engine speed for auto-deceleration or automatic warming-up (too high or too low) 4) Engine may not stop ★ The governor motor moves in the direction to stop the engine, but motor may not move completely to the position to stop the engine. 5) There are cases of hunting
E01 (female)	E04 (male)	Resistance value																						
(5) – (17)	(1) – (2)	0.25 – 7 kΩ																						
(17) – (16)	(2) – (3)	0.25 – 7 kΩ																						
(5) – (16)	—	2 – 3 kΩ																						
—	(1) – (3)	4 – 6 kΩ																						
Between each pin and chassis	—	Min. 1 MΩ																						
—	E3:07	Abnormality in pump controller throttle system (No. 2 throttle signal)	1. If model selection input is different for the two controllers (pump controller and engine throttle controller) 2. Controller part number is different		Functions as PC100 when non-set conditions are input	Engine runs at high idling, but low idling speed is too high, or engine cannot stop																		
—	E3:15	Abnormality (short circuit) in battery relay output system	If excess current flows between E01 (13) and battery relay ★ This occurs only when turning starting switch to OFF, and stopping engine	Between E01 (13) and chassis : 20 – 30 V ★ Hold with the motor in the stop position for 2 – 2.5 sec, return to the low idling position, then turn the battery relay OFF.	Sets battery relay drive current to 0	Engine does not stop																		
—	E3:16	Abnormality (step-out) in governor motor system	1. Defective adjustment of rod or twisting of loose spring 2. Abnormality in governor motor 3. Abnormality in engine throttle controller	1. Linkage adjustment correct 2. Must move lightly when connector is removed 3. Normal	1. Displays when returning from high idling to low idling ★ Start again (repeat step-out) 2. In some cases it may not display when returning from partial speed to low idling	Engine speed cannot be controlled (particularly at high idling), so there is hunting																		

ACTION TAKEN BY CONTROLLER WHEN ABNORMALITY OCCURS AND PROBLEMS ON MACHINE

User code	Service code	Abnormal system	Nature of abnormality	Condition when normal (voltage, current, resistance)	Action by controller when abnormality is detected	Problem that appears on machine when there is abnormality																		
E : 05	E3:08	Abnormality in fuel control dial input value	1. Short circuit in wiring harness between E01 (5) – (16), (5) – (17), (16) – (17) 2. Short circuit in wiring harness between E04 (1) – (2), (1) – (3), (2) – (3) 3. Short circuit in wiring harness between E06 (1) – (2), (1) – (3), (2) – (3) 4. Short circuit in wiring harness between E01 (5) – (7), (7) – (16) 5. Disconnection in wiring harness between E01 (5) – X07 (6) – E06 (1) 6. Disconnection in wiring harness between E01 (7) – X07 (5) – E06 (2) 7. Disconnection in wiring harness between E01 (16) – X07 (4) – E06 (3) 8. Defective fuel control dial 9. Defective contact of E01, X07, E06 connectors	<table><tr><th>E01 (female)</th><th>E06 (male)</th><th>Resistance value</th></tr><tr><td>(5) – (7)</td><td>(1) – (2)</td><td>0.25 – 7kΩ</td></tr><tr><td>(7) – (16)</td><td>(2) – (3)</td><td>0.25 – 7kΩ</td></tr><tr><td>(5) – (16)</td><td>–</td><td>2 – 3kΩ</td></tr><tr><td>–</td><td>(1) – (3)</td><td>4 – 6kΩ</td></tr><tr><td>Between each pin and chassis</td><td>–</td><td>Min. 1 MΩ</td></tr></table>	E01 (female)	E06 (male)	Resistance value	(5) – (7)	(1) – (2)	0.25 – 7kΩ	(7) – (16)	(2) – (3)	0.25 – 7kΩ	(5) – (16)	–	2 – 3kΩ	–	(1) – (3)	4 – 6kΩ	Between each pin and chassis	–	Min. 1 MΩ	Maintains engine speed at position of fuel control dial immediately before abnormality occurred	1. Does not become partial speed when set at high idling position 2. Does not reach high idling when set at partial speed 3. There are cases of hunting 4. Lacks output (max. speed of engine is too low)
	E01 (female)	E06 (male)	Resistance value																					
	(5) – (7)	(1) – (2)	0.25 – 7kΩ																					
(7) – (16)	(2) – (3)	0.25 – 7kΩ																						
(5) – (16)	–	2 – 3kΩ																						
–	(1) – (3)	4 – 6kΩ																						
Between each pin and chassis	–	Min. 1 MΩ																						
E3:17	Abnormality (disconnection) in governor motor drive system	1. Disconnection inside governor motor 2. Disconnection in wiring harness between E01 (10) – H02 (4) – E05 (1) 3. Disconnection in wiring harness between E01 (11) – H02 (7) – E05 (3) 4. Disconnection in wiring harness between E01 (20) – H02 (5) – E05 (2) 5. Disconnection in wiring harness between E01 (21) – H02 (8) – E05 (4) 6. Defective contact of E01, H02, E05 connectors	<table><tr><th>E05 (male)</th><th>E01 (female)</th><th>Resistance value</th></tr><tr><td>(1) – (2)</td><td>(10) – (20)</td><td>2.5 – 7Ω</td></tr><tr><td>(3) – (4)</td><td>(11) – (21)</td><td>2.5 – 7Ω</td></tr><tr><td>(1) – (3)</td><td>(10) – (11)</td><td>Min. 1 MΩ</td></tr><tr><td>(1) – (4)</td><td>(10) – (21)</td><td>Min. 1 MΩ</td></tr><tr><td>Between pins (1), (2), (3), (4) and chassis</td><td>Between pins (10), (11), (20), (21) and chassis</td><td>Min. 1 MΩ</td></tr></table> Motor drive current : Hold : 0.7 A Start : 0.84 A	E05 (male)	E01 (female)	Resistance value	(1) – (2)	(10) – (20)	2.5 – 7Ω	(3) – (4)	(11) – (21)	2.5 – 7Ω	(1) – (3)	(10) – (11)	Min. 1 MΩ	(1) – (4)	(10) – (21)	Min. 1 MΩ	Between pins (1), (2), (3), (4) and chassis	Between pins (10), (11), (20), (21) and chassis	Min. 1 MΩ	Takes no particular action	1. When there is a disconnection in both the A phase and B phase at the same time, the problem is the same as for a short circuit in the governor motor system 2. When there is a disconnection in only one of A phase or B phase 1) Engine does not stop 2) Stops moving at position immediately before failure, so engine speed cannot be controlled 3) There are cases of hunting	
E05 (male)	E01 (female)	Resistance value																						
(1) – (2)	(10) – (20)	2.5 – 7Ω																						
(3) – (4)	(11) – (21)	2.5 – 7Ω																						
(1) – (3)	(10) – (11)	Min. 1 MΩ																						
(1) – (4)	(10) – (21)	Min. 1 MΩ																						
Between pins (1), (2), (3), (4) and chassis	Between pins (10), (11), (20), (21) and chassis	Min. 1 MΩ																						
E3:18	Abnormality (short circuit) in governor motor drive system	1. Short circuit inside governor motor 2. Wiring harness between E01 (10) – H02 (4) – E05 (1) short circuiting with wiring harness between E01 (20) – H02 (5) – E05 (2) 3. Wiring harness between E01 (11) – H02 (7) – E05 (3) short circuiting with wiring harness between E01 (21) – H02 (8) – E05 (4) 4. Wiring harness in Items 2 and 3 short circuiting with ground	<table><tr><th>E05 (male)</th><th>E01 (female)</th><th>Resistance value</th></tr><tr><td>(1) – (2)</td><td>(10) – (20)</td><td>2.5 – 7Ω</td></tr><tr><td>(3) – (4)</td><td>(11) – (21)</td><td>2.5 – 7Ω</td></tr><tr><td>(1) – (3)</td><td>(10) – (11)</td><td>Min. 1 MΩ</td></tr><tr><td>(1) – (4)</td><td>(10) – (21)</td><td>Min. 1 MΩ</td></tr><tr><td>Between pins (1), (2), (3), (4) and chassis</td><td>Between pins (10), (11), (20), (21) and chassis</td><td>Min. 1 MΩ</td></tr></table> Motor drive current : Hold : 0.7 A Start : 0.84 A	E05 (male)	E01 (female)	Resistance value	(1) – (2)	(10) – (20)	2.5 – 7Ω	(3) – (4)	(11) – (21)	2.5 – 7Ω	(1) – (3)	(10) – (11)	Min. 1 MΩ	(1) – (4)	(10) – (21)	Min. 1 MΩ	Between pins (1), (2), (3), (4) and chassis	Between pins (10), (11), (20), (21) and chassis	Min. 1 MΩ	Sets motor drive current to 0	1. If during operation 1) Set to low idling 2) Engine does not stop 3) There are cases of hunting 2. When stopped 1) Engine starts, but stays at low idling 2) Engine does not stop after starting 3) There are cases of hunting	
E05 (male)	E01 (female)	Resistance value																						
(1) – (2)	(10) – (20)	2.5 – 7Ω																						
(3) – (4)	(11) – (21)	2.5 – 7Ω																						
(1) – (3)	(10) – (11)	Min. 1 MΩ																						
(1) – (4)	(10) – (21)	Min. 1 MΩ																						
Between pins (1), (2), (3), (4) and chassis	Between pins (10), (11), (20), (21) and chassis	Min. 1 MΩ																						
–	E3:01	Abnormality in network reception system	1. Short circuit, disconnection in network wiring harness 2. Abnormality in pump controller 3. Abnormality in engine throttle controller		1. When monitor panel and pump controller cannot receive signal 1) Working mode: H/O 2) Automatic warming-up: ON 3) Overheat signal: OFF 2. Same as normal when only pump controller cannot receive signal	1. When monitor panel and pump controller cannot receive signal 1) Even when working mode is switched, engine speed does not change 2. Same as normal when only pump controller cannot receive signal																		

 
JUDGEMENT TABLE FOR ENGINE THROTTLE CONTROLLER AND ENGINE RELATED PARTS

Figure in ○ shows position of bit pattern


	Failure mode	Abnormality in engine throttle controller power source system	Engine throttle controller, engine related parts (E3 : ○○ system)										Checking monitoring, check items								Machine monitor check item		Does starting motor rotate?	Troubleshooting code if no service code display is given		
			Self-diagnostic display										Auto-deceleration signal (Bit No.⑥) Battery relay drive signal No. 2 throttle signal Fuel control dial signal Governor potentiometer signal Governor motor A phase signal Governor motor B phase signal Coolant temperature sensor signal								Is red range displayed? 102℃ or above 105℃ or above					
			User code		E05			-																	Monitoring code	
Service code		E3:08	E3:17	E3:18	E3:01	E3:05	E3:06	E3:07	E3:15	E3:16	36	35	16	30	31	33	34	41								
1	Engine does not start easily																									S-1
2	Engine does not start																							○		S-2
3	Engine speed stays at low idling, and does not follow accelerator, or engine pickup is poor	●	●	●	●			●							※	※	※	※					○			S-3
4	Engine stops during operation																									S-4
5	Engine rotation is irregular																									E-12a) , S-5
	When there is hunting		●	●	●			●			●					※										E-12a) , S-5
6	Lack of output (engine high idling speed is too low)		●					●						※	※				○							S-6
7	Auto-deceleration does not work										○															E-3 , E-4
8	Engine does not stop	●		●	●		●	●	●	●			○				※	※								E-14
9	Automatic warming-up operation is defective																		○		○					E-3 , E-4
10	Exhaust gas is black																									S-7
11	Oil consumption is excessive, or exhaust gas is blue																									S-8
12	Oil becomes dirty prematurely																									S-9
13	Fuel consumption is excessive, or exhaust gas is blue																									S-10
14	Oil is mixed in coolant																									S-11
15	Oil pressure caution lamp lights up																									S-12
16	Oil level rises																									S-13
17	Coolant temperature rises too high																		○	○						S-14
18	Abnormal noise is generated																									S-15
19	There is excessive vibration																									S-16
20	Engine speed does not change even when working mode is switched					●								※												E-3 , E-4
Troubleshooting code when service code is displayed		E-1	E-2	E-3	E-4	E-5	E-6	E-7	E-8	E-9	E-10	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
Troubleshooting code when there is abnormality in monitoring mode or machine monitor check		-	-	-	-	-	-	-	-	-	-	C-15	E-15	-	-	-	-	-	M-14	M-13	M-13	E-11				


● : This shows applicable item for service code
○ : This shows item to check with monitoring mode or machine monitor
※ : This shows item that needs only checking with monitoring mode

ACTION TAKEN BY CONTROLLER WHEN ABNORMALITY OCCURS AND PROBLEMS ON MACHINE

User code	Service code	Abnormal system	Nature of abnormality	Condition when normal (voltage, current, resistance)	Action by controller when abnormality is detected	Problem that appears on machine when there is abnormality
E02	E2:32	Short circuit in front pump TVC solenoid system	1. Short circuit in front pump TVC solenoid system 2. Short circuit in front pump TVC solenoid system or wiring harness between controller C01(16) and front pump TVC solenoid C13(1) short circuiting with chassis ground 3. Abnormality in pump controller	Resistance of solenoid: 10 – 22 Ω	Makes power to solenoid 0 Displays E:02 on monitor panel Resets power source to restore	1. No current flows to the front pump TVC solenoid, so when the load is large, there is a big drop in the engine speed which may result in the engine stalling. 2. The swing acceleration is poor
	E2:33	Disconnection in front pump TVC solenoid system	1. Disconnection inside TVC solenoid or disconnection in wiring harness between controller C01 (8), (16) and front pump TVC solenoid C13(1),(2) 2. Wiring harness between controller C01 (8) and front pump TVC solenoid C13 (2) short circuiting with ground 3. Abnormality in pump controller .	Resistance of solenoid: 10 – 22 Ω Current: 1000 mA (H/O mode, auto-deceleration ON, levers at neutral, fuel control dial at MAX.)	1. In the case of 1, the current stops flowing to the solenoid, so no particular action is taken. Therefore, if the abnormality is restored by the vibration of the machine, the condition will return to normal. ★However, the display does not go out. 2. In the case of 2, the current (approx. 1 A) continues to flow to the solenoid. Displays E:02 on the monitor panel.	1. In the case of 1, it is the same as E2:32. 2. In the case of 2, the current continues to flow to the front pump TVC solenoid (approx. 1 A), so the output pressure of the front pump TVC valve increases and the overall speed becomes slower.
	E2:36	Short circuit in rear pump TVC solenoid system	1. Short circuit in rear pump TVC solenoid system 2. Short circuit in rear pump TVC solenoid system or wiring harness between controller C01 (17) and rear pump TVC solenoid C04(1) short circuiting with chassis ground 3. Abnormality in pump controller	Resistance of solenoid: 10 – 22 Ω	Makes power to solenoid 0 Displays E:02 on monitor panel Resets power source to restore	Same as E2:32 (but for the rear pump)
	E2:37	Disconnection in rear pump TVC solenoid system	1. Disconnection inside TVC solenoid or disconnection in wiring harness between controller C01 (9), (17) and rear pump TVC solenoid C04(1), (2) 2. Wiring harness between controller C01 (9) and rear pump TVC solenoid C04 (2) short circuiting with ground 3. Abnormality in pump controller	Resistance of solenoid: 10 – 22 Ω Current: 1000 mA (H/O mode, auto-deceleration ON, levers at neutral, fuel control dial at MAX.)	1. In the case of 1, the current stops flowing to the solenoid, so no particular action is taken. Therefore, if the abnormality is restored by the vibration of the machine, the condition will return to normal. ★However, the display does not go out. 2. In the case of 2, the current (approx. 1 A) continues to flow to the solenoid. Displays E:02 on the monitor panel.	Same as E2:33 (but for the rear pump)
E03	E2:03	Short circuit in swing brake solenoid system	1. Short circuit inside solenoid or between solenoid (1) and (2) (when internal resistance of solenoid is extremely low), and excess current is flowing. 2. Abnormality in pump controller	Resistance of solenoid: 20 – 60 Ω	Makes power to solenoid 0 Displays E:03 on monitor panel Resets power source to restore	When the swing is operated, the motor brake is not released, so the upper structure does not swing.
	E2:13	Disconnection in swing brake solenoid system	1. Short circuit inside solenoid (when internal resistance of solenoid is extremely high) 2. Disconnection in wiring harness between solenoid (2) and controller 3. Solenoid (2) short circuiting with ground 4. Abnormality in pump controller	Resistance of solenoid: 20 – 60 Ω	1. In the case of 1 and 2, the current stops flowing to the solenoid, so no particular action is taken. Therefore, if the abnormality is restored by the vibration of the machine, the condition will return to normal. ★However, the display does not go out. 2. In the case of 3, the current stops flowing to the solenoid, but the controller takes no particular action. Therefore, if the abnormality is restored by the vibration of the machine, the condition will return to normal. ★However, the display does not go out. ★If the controller gives a signal to turn the solenoid current OFF, the voltage at portion (a) should be 20–30V. If there is a disconnection or short circuit with the ground, the voltage at portion (a) is low (almost 0V), so it is judged that there is an abnormality.  Displays E:03 on the monitor panel. 205F06385	1. In the case of 1 and 2, it is the same as E2:03. 2. In the case of 3, the brake remains released, so even when the levers are returned to neutral, the brake does not take effect (there is overrun of the swing on slopes).

K20506

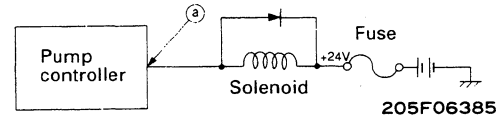User code	Service code	Abnormal system	Nature of abnormality	Condition when normal (voltage, current, resistance)	Action by controller when abnormality is detected	Problem that appears on machine when there is abnormality
–	E2:02	Short circuit in LS select solenoid system	1. Short circuit inside solenoid or between solenoid (1) and (2) (when internal resistance of solenoid is extremely low), and excess current is flowing. 2. Abnormality in pump controller	Resistance of solenoid: 20 – 60 Ω	Makes power to solenoid 0 Resets power source to restore	1. With swing + boom RAISE, the boom is slow. 2. With swing + arm OUT, the arm OUT is slow. 3. With swing + travel, there is a big drop in the travel speed.
–	E2:04	Short circuit in pump merge-divider solenoid system	1. Short circuit inside solenoid or between solenoid (1) and (2) (when internal resistance of solenoid is extremely low), and excess current is flowing. 2. Abnormality in pump controller	Resistance of solenoid: 20 – 60 Ω	Makes power to solenoid 0 Resets power source to restore	The pump merge-divider valve continues to merge the oil flow. 1. In the L/O and S/O modes, the work equipment and swing speeds become faster. 2. The steering is difficult to turn.
–	E2:05	Short circuit in 2-stage relief solenoid system	1. Short circuit inside solenoid or between solenoid (1) and (2) (when internal resistance of solenoid is extremely low), and excess current is flowing. 2. Abnormality in pump controller	Resistance of solenoid: 20 – 60 Ω	Makes power to solenoid 0 Resets power source to restore	When traveling or using the power max. function, the relief pressure is not raised, so there is lack of power.
–	E2:06	Short circuit in travel speed solenoid system	1. Short circuit inside solenoid or between solenoid (1) and (2) (when internal resistance of solenoid is extremely low), and excess current is flowing. 2. Abnormality in pump controller	Resistance of solenoid: 20 – 60 Ω	Makes power to solenoid 0 Resets power source to restore	Even if the travel speed is switched, the travel speed does not change (remains at Lo)
–	E2:12	Disconnection in LS select solenoid system	1. Short circuit inside solenoid (when internal resistance of solenoid is extremely high) 2. Disconnection in wiring harness between solenoid (2) and controller 3. Solenoid (2) short circuiting with ground 4. Abnormality in pump controller	Resistance of solenoid: 20 – 60 Ω	1. In the case of 1 and 2, the current stops flowing to the solenoid, so no particular action is taken. Therefore, if the abnormality is restored by the vibration of the machine, the condition will return to normal. ★However, the display does not go out. 2. In the case of 3, the current continues to flow to the solenoid, but the controller takes no particular action. Therefore, if the abnormality is restored by the vibration of the machine, the condition will return to normal. ★However, the display does not go out. ★If the controller gives a signal to turn the solenoid current OFF, the voltage at portion (a) should be 20 – 30V. If there is a disconnection or short circuit with the ground, the voltage at portion (a) is low (almost 0V), so it is judged that there is an abnormality. 	1. In the case of 1 and 2, it is the same as E2:02. 2. In the case of 3, when the boom/swing priority selection mode is OFF and the travel is OFF, and there is combined operation with the swing (except for boom RAISE and arm OUT), pressure compensation cannot be carried out for the swing LS pressure.
–	E2:14	Disconnection in pump merge-divider solenoid system	1. Short circuit inside solenoid (when internal resistance of solenoid is extremely high) 2. Disconnection in wiring harness between solenoid (2) and controller 3. Solenoid (2) short circuiting with ground 4. Abnormality in pump controller	Resistance of solenoid: 20 – 60 Ω	1. In the case of 1 and 2, the current stops flowing to the solenoid, so no particular action is taken. Therefore, if the abnormality is restored by the vibration of the machine, the condition will return to normal. ★However, the display does not go out. 2. In the case of 3, the current continues to flow to the solenoid, but the controller takes no particular action. Therefore, if the abnormality is restored by the vibration of the machine, the condition will return to normal. ★However, the display does not go out. ★If the controller gives a signal to turn the solenoid current OFF, the voltage at portion (a) should be 20 – 30V. If there is a disconnection or short circuit with the ground, the voltage at portion (a) is low (almost 0V), so it is judged that there is an abnormality.	1. In the case of 1 and 2, it is the same as E2:04. 2. In the case of 3, the pump merge-divider valve remains divided, so the arm and boom are slow.
–	E2:15	Disconnection in 2-stage relief solenoid system	1. Short circuit inside solenoid (when internal resistance of solenoid is extremely high) 2. Disconnection in wiring harness between solenoid (2) and controller 3. Solenoid (2) short circuiting with ground 4. Abnormality in pump controller	Resistance of solenoid: 20 – 60 Ω	1. In the case of 1 and 2, the current stops flowing to the solenoid, so no particular action is taken. Therefore, if the abnormality is restored by the vibration of the machine, the condition will return to normal. ★However, the display does not go out. ★If the controller gives a signal to turn the solenoid current OFF, the voltage at portion (a) should be 20 – 30V. If there is a disconnection or short circuit with the ground, the voltage at portion (a) is low (almost 0V), so it is judged that there is an abnormality.	1. In the case of 1 and 2, it is the same as E2:05. 2. In the case of 3, it becomes the same condition as when the 2-stage relief is used, so the relief pressure remains increased (34.8MPa(355kg/cm ²)). (The solenoid stays ON)

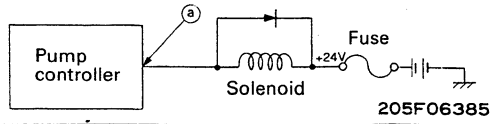
User code	Service code	Abnormal system	Nature of abnormality	Condition when normal (voltage, current, resistance)	Action by controller when abnormality is detected	Problem that appears on machine when there is abnormality
-	E2:16	Disconnection in travel speed solenoid system	1. Short circuit inside solenoid (when internal resistance of solenoid is extremely high) 2. Disconnection in wiring harness between solenoid (2) and controller 3. Solenoid (2) short circuiting with ground 4. Abnormality in pump controller	Resistance of solenoid: 20 – 60 Ω	1. In the case of 1 and 2, the current stops flowing to the solenoid, so no particular action is taken. Therefore, if the abnormality is restored by the vibration of the machine, the condition will return to normal. ★However, the display does not go out. 2. In the case of 3, the current continues to flow to the solenoid, but the controller takes no particular action. Therefore, if the abnormality is restored by the vibration of the machine, the condition will return to normal. ★However, the display does not go out. ★If the controller gives a signal to turn the solenoid current OFF, the voltage at portion (a) should be 20 – 30V. If there is a disconnection or short circuit with the ground, the voltage at portion (a) is low (almost 0V), so it is judged that there is an abnormality. 	1. In the case of 1 or 2, it is the same as the E2:06. 2. In the case of 3, the solenoid remains actuated, so the Lo speed is fast.
-	E2:17	Model selection input error	1. Disconnection, short circuit in model selection wiring harness 2. Abnormality in controller	1. PC210 Between C03 (15) and chassis: Max. 1 Ω Between C03 (13), (14), (16) and chassis: Min. 1 MΩ 2. PC240 Between C03 (13), (15) and chassis: Max. 1 Ω Between C03 (14), (16) and chassis: Min. 1 MΩ	Detects abnormality in input 1) Retains data when starting switch is ON 2) Functions as PC100 when non-set conditions are input	1. Travel deviation 2. Engine stalls
-	E2:18	Network response overtime error	1. Disconnection, short circuit, short circuit with ground in network wiring harness 2. Abnormality in engine throttle controller 3. Abnormality in pump controller		1. When networking are impossible with the monitor panel and engine throttle controller (1) Working mode: G/O (2) Priority mode: OFF (3) Travel speed: Lo (4) Auto-deceleration: ON (5) Power max. : ON (6) Automatic mode: OFF (HYPER GX) 2. When networking are impossible with engine throttle controller Control is carried out by recognizing the throttle signal as FULL (others are as usual)	1. (1) Even when travel is operated, the power does not increase (2) The swift slow-down function does not work (3) The auto-deceleration cannot be canceled (4) The travel speed does not increase (5) The priority mode has no effect (6) The automatic mode has no effect (HYPER GX) 2. The engine speed may drop
-	E2:22	Short circuit in LS control EPC solenoid system	1. Short circuit inside solenoid or between solenoid (1) and (2) (when internal resistance of solenoid is extremely low), and excess current is flowing. 2. Abnormality in pump controller	Resistance of solenoid: 7 – 14 Ω	Makes power to solenoid 0 Resets power source to restore	1. The Lo travel speed is too fast. 2. In L/O and F/O modes, the work equipment speed is too fast. 3. When the engine is running at low idling, the swing speed is too fast.
-	E2:23	Disconnection in LS control EPC solenoid system	1. Disconnection inside solenoid or disconnection in wiring harness between controller C01 (15), (7) and LS control EPC solenoid 2. Wiring harness between controller C01 (7) and LS control EPC solenoid C10 (2) short circuiting with ground 3. Abnormality in pump controller	Current: Approx. 800 mA (Levers at neutral, low idling)	1. In the case of 1, the current stops flowing to the solenoid, so no particular action is taken. Therefore, if the abnormality is restored by the vibration of the machine, the condition will return to normal. ★However, the display does not go out. 2. In the case of 2, the current continues to flow to the solenoid.	1. In the case of 1, it is the same as E2:22 2. In the case of 2, electric current continues to flow to the LS control EPC solenoid, so the work equipment, travel, and swing speeds are slow

User code	Service code	Abnormal system	Nature of abnormality	Condition when normal (voltage, current, resistance)	Action by controller when abnormality is detected	Problem that appears on machine when there is abnormality
-	E2:24	Abnormality in front pump pressure sensor system	1. Abnormality in front pump pressure sensor 2. Disconnection, short circuit in wiring harness between C08 and C03 3. Abnormality in pump controller	1. Between C03 (1) and (9): 0.5 – 4.5 V 2. Resistance between C03 (female) (1) and (9), (1) and chassis : Min. 1 MΩ (Disconnect pressure sensor connector C08 and connector at C03)	Takes front pump pressure as 0 MPa (0 kg/cm ²) when actuating. If abnormality is restored, it actuates as normal. ★However, the display does not go out.	1. The travel speed does not automatically shift (it does not change from Hi to Lo). ★If the button is operated manually, the panel display is switched.
-	E2:25	Abnormality in rear pump pressure sensor system	1. Abnormality in rear pump pressure sensor 2. Disconnection, short circuit in wiring harness between C07 and C03 3. Abnormality in pump controller	1. Between C03 (2) and (10): 0.5 – 4.5 V 2. Resistance between C03 (female) (2) and (10), (2) and chassis : Min. 1 MΩ (Disconnect pressure sensor connector C07 and connector at C03)	Takes rear pump pressure as 0 MPa (0 kg/cm ²) when actuating. If abnormality is restored, it actuates as normal. ★However, the display does not go out.	1. The travel speed does not automatically shift (it does not change from Hi to Lo). ★If the button is operated manually, the panel display is switched.
-	E2:26	Abnormality in pressure sensor power source system	1. Defective pressure sensor 2. Wiring harness between pressure sensor (2) and controller short circuiting with ground	1. Voltage between C03 (3) and (9) and between C03 (3) and (10): 18 – 28 V	Takes front pump and rear pump pressure as 0 MPa (0 kg/cm ²) when actuating. When abnormality is detected, it switches the output OFF, and when all levers are returned to neutral, it outputs again. ★This automatic resetting is repeated up to 3 times.	1. The travel speed does not automatically shift (it does not change from Hi to Lo). ★If the button is operated manually, the panel display is switched.
-	E2:27	Abnormality in engine speed sensor system	1. Disconnection, short circuit in speed sensor 2. Disconnection, short circuit in wiring harness between E7 and C02 3. Abnormality in pump controller	Resistance: 500 – 1000 Ω Voltage (AC range) : 0.5 – 3.0 V	1. It functions as the equivalent of the G/O mode (the speed rises) ★However, the display does not go out. 2. When the sensor is lost, such as when there is a disconnection inside the speed sensor, monitoring code 10 is not displayed.	It operates about the same as G/O mode (prolix) (the power is slightly lower)
-	E2:28	Abnormality in auto-deceleration output system	1. Disconnection, short circuit in wiring harness of C03 (5) and E01 (4). 2. Abnormality in engine throttle controller 3. Abnormality in pump controller	1. Voltage between C03 (5) and chassis At deceleration: 8 – 12 V When canceled: 0 – 1 V 2. Resistance between C03 (5) and chassis : Min 1 MΩ	When there is a short circuit, it stops the output, and restores by resetting the power. When there is a disconnection, it continues to move as it is.	It is controlled as usual (there may be a delay in response)

K20506

▲ : Troubleshooting code when there is abnormality in monitoring mode check (abnormality at both front and rear) ※ : This shows item that needs only checking with monitoring mode
 ● : This shows applicable item for service code ○ : This shows item to check with monitoring mode or machine monitor

PUMP CONTROLLER SYSTEM CIRCUIT DIAGRAM

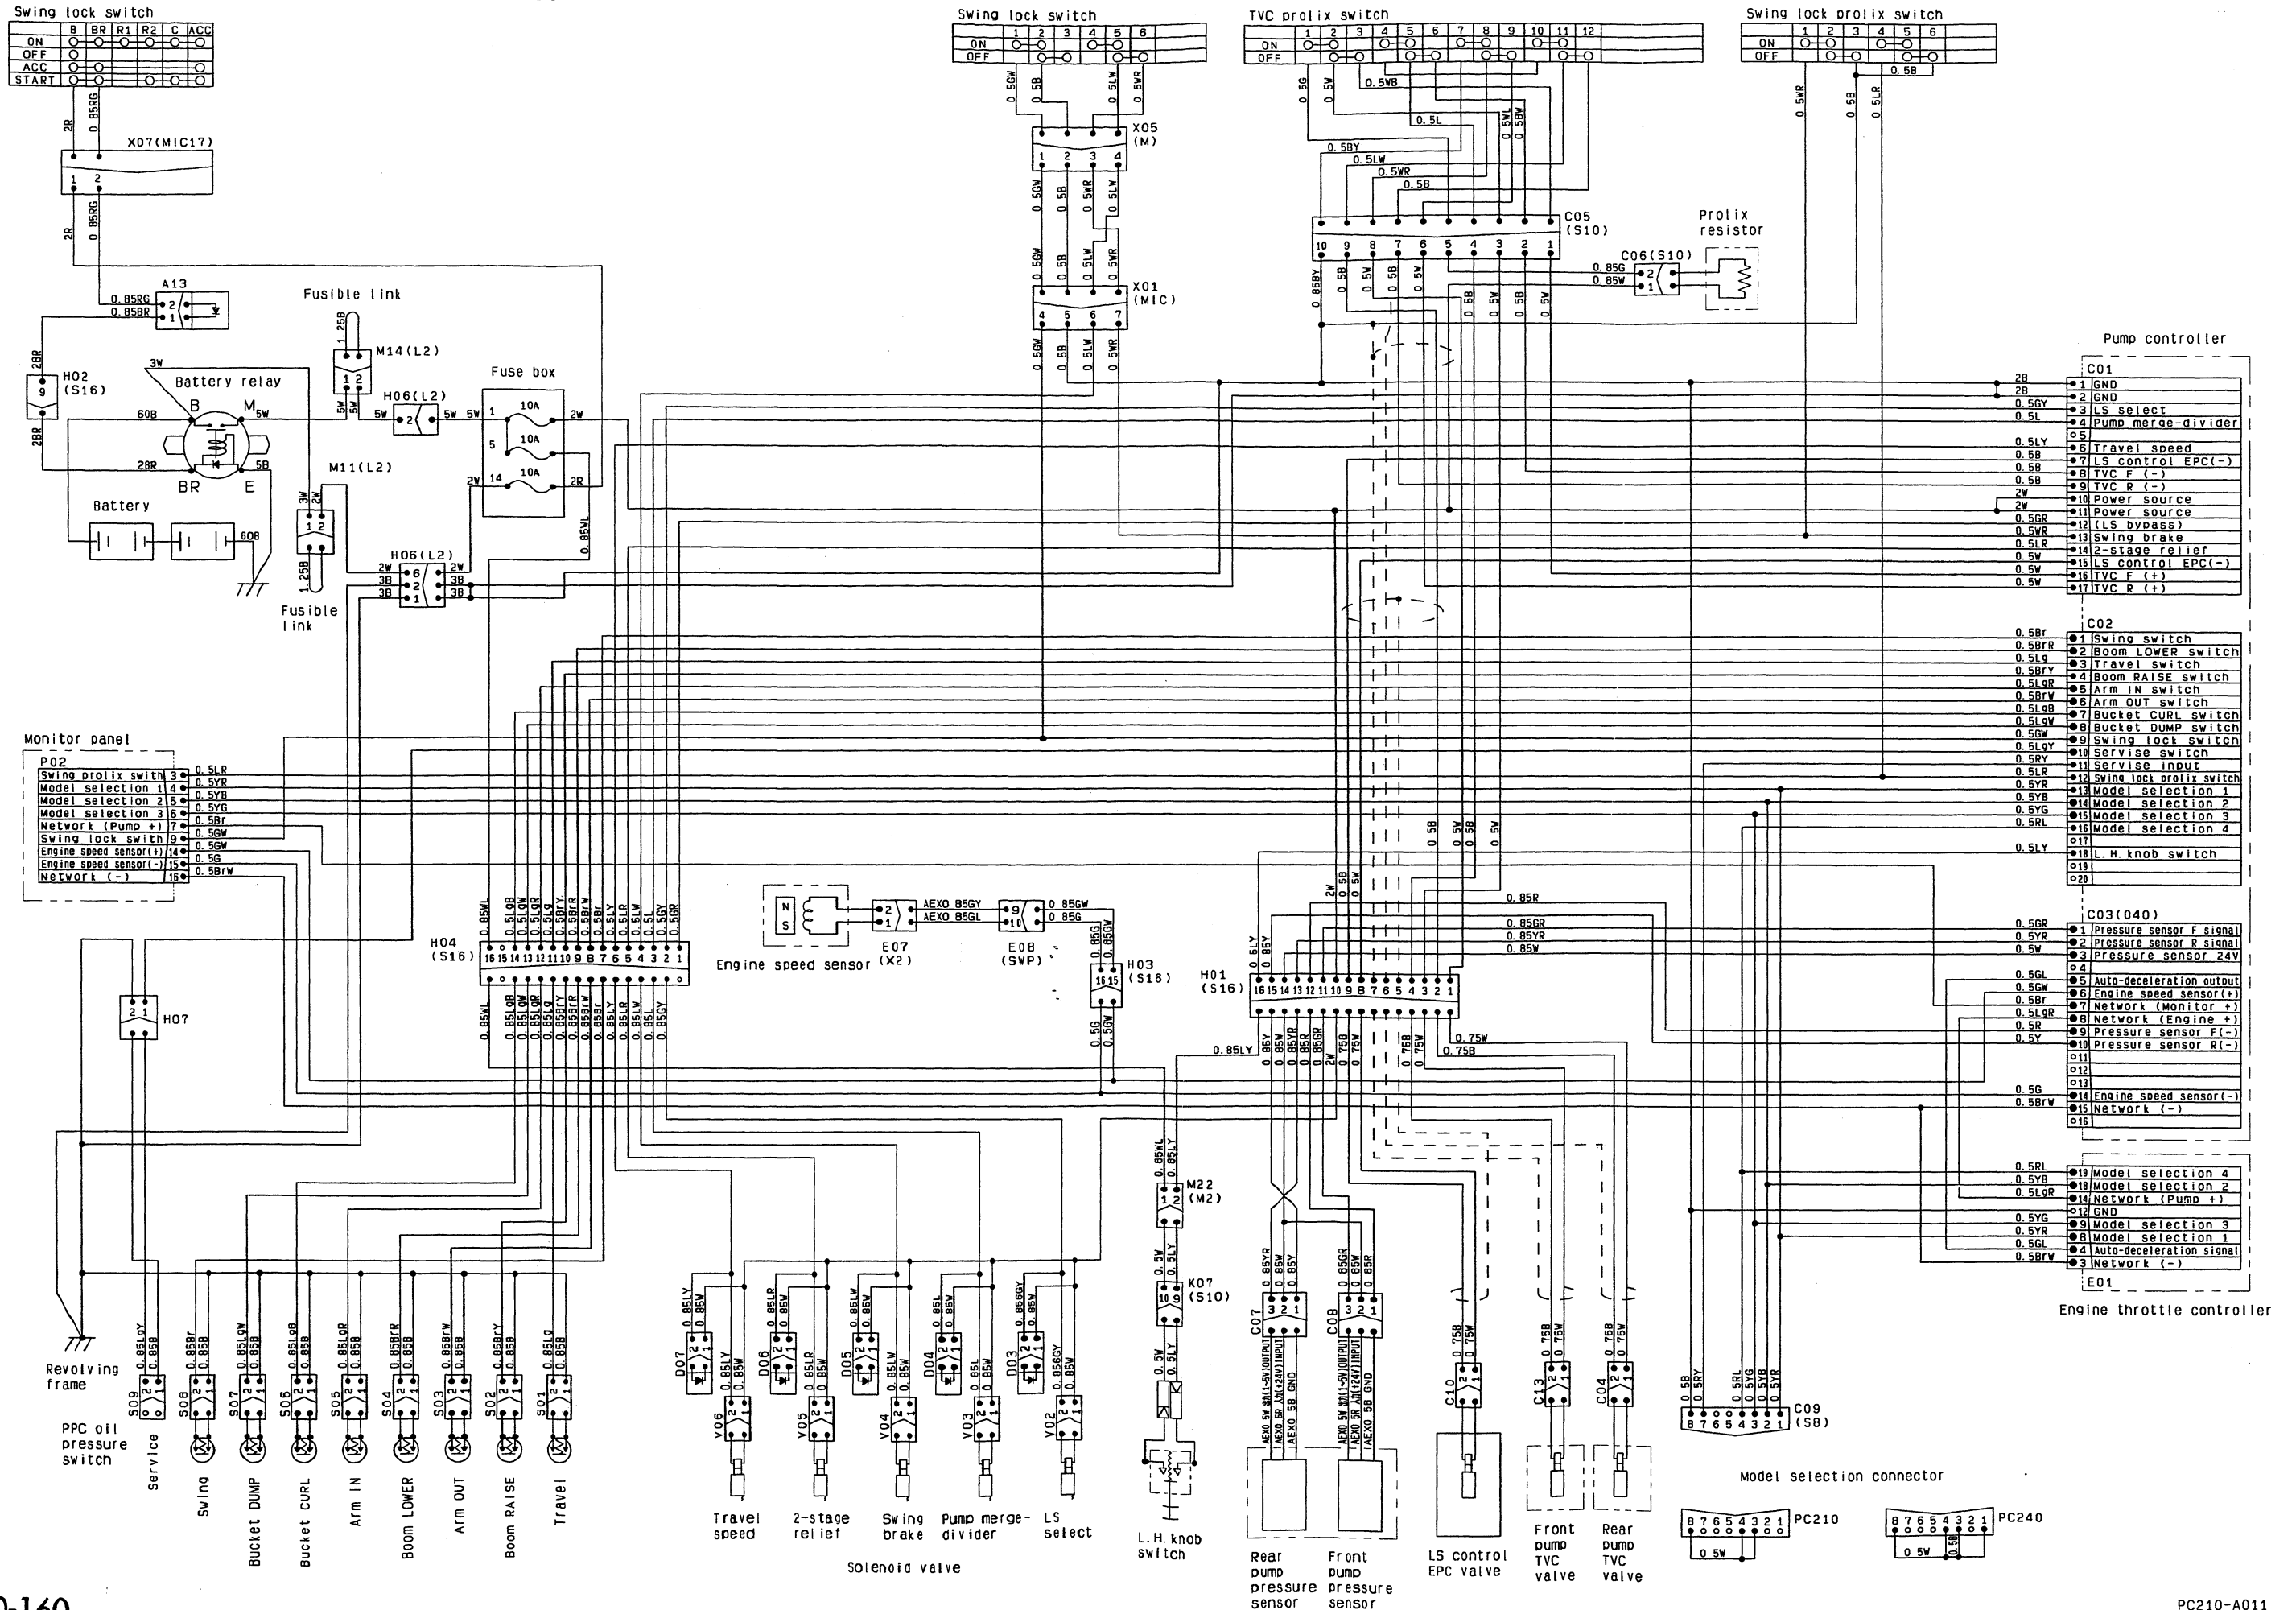

TROUBLESHOOTING OF HYDRAULIC AND MECHANICAL SYSTEM (H MODE)

Table of failure modes and causes for hydraulic and mechanical system	20-198
Pump merge-divider logic	20-201
Troubleshooting flow charts for each failure mode	

All work equipment, travel, swing

H- 1 Speeds of all work equipment, swing, travel are slow or lack power	20-202
H- 2 There is excessive drop in engine speed, or engine stalls	20-204
H- 3 No work equipment, travel, swing move	20-205
H- 4 Abnormal noise generated (around pump)	20-205
H- 5 Auto-deceleration does not work (when PPC shuttle valve is cause)	20-206
H- 6 Fine control ability is poor or response is poor	20-206

Work equipment

H- 7 Boom is slow or lacks power	20-208
H- 8 Arm is slow or lacks power	20-210
H- 9 Bucket is slow or lacks power	20-212
H-10 Work equipment (boom, arm, bucket) does not move (but travel and swing are normal)	20-213
H-11 Excessive hydraulic drift (boom, arm, bucket)	20-213
H-12 Excessive time lag (engine at low idling)	20-214
H-13 Lack of power when pressure rises	20-214
H-14 Other equipment moves when single circuit is relieved	20-214
H-15 In L/O, F/O modes, work equipment speed is faster than specified speed	20-215

Compound operations

H-16 In compound operations, work equipment with larger load is slow	20-215
H-17 In swing + boom RAISE, boom RAISE is slow	20-216
H-18 In swing + arm OUT, arm OUT is slow	20-216
H-19 In swing + travel, travel speed drops excessively	20-216

Travel system

H-20 Travel deviation	20-217
H-21 Travel speed is slow	20-218
H-22 Steering does not turn easily or lacks power	20-220
H-23 Travel speed does not switch or is faster than specified speed	20-222
H-24 Travel does not move (one side only)	20-222

Swing system

H-25 Does not swing	20-223
H-26 Swing acceleration is poor or swing speed is slow (both left and right, one direction only)	20-224
H-27 Excessive overrun when stopping swing	20-226
H-28 Excessive shock when stopping swing (one direction only)	20-227
H-29 Excessive abnormal noise when stopping swing	20-227
H-30 Excessive hydraulic drift of swing	20-228
H-31 Swing speed is faster than specified swing speed	20-229

TABLE OF FAILURE MODES AND CAUSES FOR HYDRAULIC AND MECHANICAL SYSTEM

(1/2)

Parts causing failure		Piston pump																Control valve																															
		Front				Rear																																											
		TVC valve	LS valve	Servo piston	Pump proper	TVC valve	LS valve	Servo piston	Pump proper									Control pump	Strainer	Damper	Spool	LS relief & main unload valve	For front pump	For rear pump	Pressure compensation valve	Pump merge - divider valve	Main circuit check valve	LS circuit check valve	LS shuttle valve	LS select valve	LS circuit throttle	Arm counterbalance valve	Regeneration circuit	Safety-suction valve	Suction valve	Slow return valve for pump merge-divider	PPC valve (EPC valve ※)												
Unload valve	LS relief valve	Main relief valve	Sub-unload valve	Main relief valve	Sub-unload valve	For main	For LS	LS relief valve	Main relief valve	Sub-unload valve	Pressure compensation valve	For main	For LS	Main circuit check valve	LS circuit check valve	LS shuttle valve	LS select valve	LS circuit throttle	Arm counterbalance valve	Boom	Arm	Safety-suction valve	Suction valve	Slow return valve for pump merge-divider	PPC valve (EPC valve ※)	PPC shuttle	Safety lock valve	Swing PPC slow return valve	Swivel joint	Troubleshooting code																			
All work equipment, travel, swing	Speeds of all work equipment, swing, travel are slow or lack power	▲	▲		▲	▲	▲		▲	○			○	○	▲	▲	▲	▲																			H-1												
	There is excessive drop in engine speed, or engine stalls	○	○	○		○	○	○																													H-2												
	No work equipment, travel, swing move				△				△	○		○																					○				H-3												
	Abnormal noise generated (around pump)				○				○		○																										H-4												
	Auto-deceleration does not work																																	○				H-5											
	Fine control ability is poor or response is poor		○				○														○																	H-6											
Work equipment	Boom is slow or lacks power											○						○	○	○				○			○		○									H-7											
	Arm is slow or lacks power											○						○	○	○			○		○		○		○									H-8											
	Bucket is slow or lacks power											○						○					○			○												H-9											
	Boom does not move											○															○																						
	Arm does not move											○															○																						
	Bucket does not move											○															○																						
	Excessive hydraulic drift											○						○								○												H-11											
	Excessive time lag (engine at low idling)																	○								○													H-12										
	Lack of power when pressure rises														○	○																							H-13										
	Other equipment moves when single circuit is relieved																	○																					H-14										
	In L/O or F/O mode, work equipment speed is faster than set speed		○				○												○	○																			H-15										
Compound operations	In compound operations, work equipment with larger load is slow																	○																					H-16										
	In swing + boom RAISE, boom is slow																																		○				H-17										
	In swing + arm OUT, arm is slow																																		○				H-18										
	In swing + travel, travel speed drops excessively																																		○				H-19										
Travel system	Travel deviation											○																						○	○					H-20									
	Travel speed is slow											○						○															○	○					H-21										
	Steering does not turn or lacks power														○		○		○	○	○								○										H-22										
	Travel speed does not switch or is faster than set speed																																							H-23									
Swing system	Does not move (one side only)																												○											H-24									
	Does not swing																																																
Swing acceleration is poor or swing speed is slow	○	○																	○	○	○													○	○				H-26										
Excessive overrun when stopping swing																																							H-27										
Excessive shock when stopping swing (one direction only)																																							H-28										
Excessive abnormal noise when stopping swing																																							H-29										
Excessive hydraulic drift of swing																																							H-30										
Swing speed is faster than specified swing speed		○																																						H-31									

★ In the failure modes, modes for compound operations are used when independent operations are normal. ▲: When there is an abnormality for both front and rear
※: The figures inside () are for the HYPER GX

K20506

Parts causing failure Failure mode		EPC • Solenoid valve						Swing motor				Travel motor									Oil Pressure switch								Pump Pressure sensor		Engine system	Troubleshooting code				
		LS control EPC	LS select	Pump merge-divider	2-stage relief	Travel speed	Swing brake	Holding brake	Safety valve	Suction valve	Leakage, breakage inside body	Safety valve	Counterbalance valve	Check valve	Travel speed selector servo piston	Leakage, breakage inside body					Swing machinery	Final drive	Hydraulic cylinder	Boom holding valve	Lift check valve	Travel junction valve	Boom						Arm		Bucket	
																											RAISE	LOWER	IN	OUT			CURL	DUMP		
All work equipment, travel, swing .	Speeds of all work equipment, swing, travel are slow or lack power	☐																											☐	H-1						
	There is excessive drop in engine speed, or engine stalls																												☐	H-2						
	No work equipment, travel, swing move																														H-3					
	Abnormal noise generated (around pump)																														H-4					
	Auto-deceleration does not work																					☐	☐	☐	☐	☐	☐				H-5					
	Fine control ability is poor or response is poor																															H-6				
Work equipment	Boom is slow or lacks power																	☐	☐			☐	☐									H-7				
	Arm is slow or lacks power			☐														☐				☐	☐									H-8				
	Bucket is slow or lacks power			☐														☐					☐	☐								H-9				
	Boom does not move																															H-10				
	Arm does not move																																			
	Bucket does not move																																			
	Excessive hydraulic drift																	☐	☐													H-11				
	Excessive time lag (engine at low idling)																															H-12				
	Lack of power when pressure rises	☐																				☐			☐							H-13				
	Other equipment moves when single circuit is relieved				☐																											H-14				
	In L/O or F/O mode, work equipment speed is faster than set speed																															H-15				
Compound operations	In compound operations, work equipment with larger load is slow	☐		☐																												H-16				
	In swing + boom RAISE, boom is slow																															H-17				
	In swing + arm OUT, arm is slow		☐																													H-18				
	In swing + travel, travel speed drops excessively		☐																													H-19				
Travel system	Travel deviation	Deviation is excessive		☐											☐																		H-20			
		Deviation is excessive when starting										☐																								
	Travel speed is slow	☐													☐													☐				H-21				
	Steering does not turn or lacks power			☐	☐								☐															☐				H-22				
	Travel speed does not switch or is faster than set speed	☐				☐								☐														☐	☐	☐		H-23				
Does not move (one side only)										☐	☐	☐		☐		☐																H-24				
Swing system	Does not swing	Both left and right					☐	☐			☐					☐												☐					H-25			
		One direction only							☐																											
	Swing acceleration is poor or swing speed is slow	Both left and right								☐																							H-26			
		One direction only								☐	☐																									
	Excessive overrun when stopping swing	Both left and right									☐																						H-27			
		One direction only								☐																										
	Excessive shock when stopping swing (one direction only)																															H-28				
	Excessive abnormal noise when stopping swing								☐	☐							☐																H-29			
	Excessive hydraulic drift of swing	When brake is ON						☐	☐																								H-30			
When brake is OFF								☐	☐	☐																										
Swing speed is faster than specified swing speed	☐		☐																													H-31				

★ In the failure modes, modes for compound operations are used when independent operations are normal. ▲: When there is an abnormality for both front and rear

TROUBLESHOOTING OF MACHINE MONITOR SYSTEM (M MODE)

Action taken by monitor panel when abnormality occurs and problems on machine	20-232	M-12(a) When starting switch is turned ON (engine stopped), buzzer does not sound for 1 second CAUTION items are flashing but buzzer does not sound	20-247
Machine monitor system circuit diagram	20-233	M-12(b) No abnormality is displayed on monitor but buzzer sounds	20-247
Troubleshooting flow charts for each failure mode		M-13 Liquid crystal night lighting on monitor panel does not light up (Liquid crystal display is normal)	20-248
M- 1 [E1:01] Abnormality in error data is displayed	20-235	M-14 Coolant temperature gauge does not rise	20-249
M- 2 [E1:02] Error in clock data is displayed	20-235	M-15 Coolant temperature gauge does not give any display (none of gauge lamps light up during operation)	20-250
M- 3 [E1:03] Short circuit in buzzer output or contact of 24V wiring harness with buzzer drive harness is displayed	20-235	M-16 Fuel level gauge always displays FULL	20-251
M- 4 When starting switch is turned on, none of lamps on monitor panel light up for 3 seconds	20-236	M-17 Fuel level gauge does not give display	20-251
a) None of lamps on monitor panel light up	20-236	M-18 Swing lock switch is turned ON (LOCK) but monitor panel parking display does not light up	20-252
b) Some of lamps on monitor panel (gauge display, time display) do not light up	20-236	M-19 Swing lock prolix switch is ON (prolix), but monitor panel parking display does not flash	20-252
M- 5 When starting switch is turned ON, monitor panel lamps all stay lighted up and do not go out	20-237	M-20 Defective fuel level sensor system	20-253
M- 6 When starting switch is turned ON, items lighted up on monitor panel are different from machine model	20-237	M-21 Defective coolant temperature sensor system	20-254
M- 7 When starting switch is turned ON (engine stopped), CHECK items flash (Fluid levels for CHECK items are at specified level)	20-238	M-22 Defective engine oil level sensor system	20-255
a) Coolant level flashes	20-238	M-23 Defective coolant level sensor system	20-256
b) Engine oil level flashes	20-239	M-24 Defective hydraulic oil sensor system	20-257
c) Hydraulic oil level flashes	20-239	M-25 Working light, panel lighting do not light up, or switch is not being used but lights light up	20-258
M- 8 Preheating is not being used but preheating display lights up	20-240	a) Working light does not light up	20-258
M- 9 When starting switch is turned ON and engine is started, CHECK items flash	20-241	b) Panel lighting does not light up	20-258
a) Alternator system	20-241	c) Light switch is not being used but working light lights up	20-259
b) Engine oil pressure system	20-242	M-26 Wiper does not work or switch is not being used but wiper is actuated	20-260
M-10 When starting switch is turned ON (engine stopped), CAUTION items flash (but when charge level, engine oil pressure do not light up)	20-243	a) Wiper does not work	20-260
a) Alternator system	20-243	b) Wiper switch is not being used but wiper is actuated	20-262
b) Engine oil pressure sensor system ...	20-243		
M-11 When starting switch is turned ON and engine is started, CAUTION items flash (but when there is no abnormality in engine or CHECK items)	20-244		
a) Engine oil pressure flashes	20-244		
b) Coolant level flashes	20-245		
c) Coolant temperature flashes	20-245		
d) Battery charge flashes	20-246		
e) Fuel level flashes	20-246		

K20506

ACTION TAKEN BY MONITOR PANEL WHEN ABNORMALITY OCCURS AND PROBLEMS ON MACHINE

User code	Service code	Abnormal system	Nature of abnormality	Condition when normal (voltage, current, resistance)	Action by controller when abnormality is detected	Problem that appears on machine when there is abnormality
–	E1:01	Abnormality in error data	1. Abnormality in internal memory 2. Excess voltage (more than 36V) has occurred 3. Low voltage (less than 12V) has occurred 4. Connector has separated	When starting switch is turned ON, keep time switch pressed for 5 seconds to actuate clear function	1. When there is abnormality in engine throttle controller, control cannot be carried out. 2. When there is abnormality in pump controller, the output is cut off, so control cannot be carried out.	1. Service code cannot be cleared 2. Time becomes 00:00.
–	E1:02	Abnormality in clock data	1. Abnormality in internal clock function 2. Excess voltage (more than 36V) has occurred 3. Low voltage (less than 12V) has occurred 4. Connector has separated			1. Service code cannot be cleared 2. Time becomes 00:00. 3. Clock does not advance.
–	E1:03	Short circuit in buzzer output system	1. Short circuit inside buzzer 2. Power line in contact with wiring harness between monitor panel P01(13) – buzzer 3. Abnormality in monitor panel	Voltage between P01 (13) – (11) (12) Buzzer ON: Max. 1V Buzzer OFF: 20 – 30V ★When there is disconnection, E1:03 is not displayed and buzzer does not sound		Buzzer does not sound

MACHINE MONITOR SYSTEM CIRCUIT DIAGRAM

K20506

