

MAN ECAS 2 Fault Codes PDF

MAN truck PDF Service Manuals

00639

CAN bus disconnection

01043

Supply voltage for the periphery

03001

Control unit (internal fault)

03010

Control unit (ECU special data checksum)

03011

Control unit (checksum of parameters)

03012

Control unit (checksum of the calibration data of the displacement sensors)

03013

Control unit (checksum of calibration data of pressure sensors)

03015

Control unit (check sum of permissible load on bridges)

03050

Supply voltage of the control device

03051

Data transmission line of the control unit (data)

03052

The clock bar of the control device (clock)

03053

Control unit data 2

03054

Control Unit Tact 2

03061

Interruption of communication

03062

CAN message VSC1

03063

CAN message EEC1

03064

CAN Communication EBC2

03065

CAN message FFR_1

03066

CAN message ECAM_1

03067

CAN message EBS (load on the drive axle)

03068

CAN Communication EBC5

03069

CAN Communication EBC1

03070

CAN time and date message

03074

CAN message, dashboard display

03075

<https://truckmanualshub.com/>

Wrong CAN message (ASC_2C)
03076
Wrong CAN message (ASC_2A)
03077
Invalid CAN message (ASC_2B)
03078
Invalid CAN message (ASC_6A)
03079
Wrong CAN message (ASC_6B)
03080
Wrong CAN message (door status)
03081
Wrong CAN message (TCO1)
03082
Wrong CAN message (mileage in kilometers)
03101
Rear axle displacement sensor, left
03102
Rear axle displacement sensor, right
03103
Front axle displacement sensor
03151
Rear Axle Pressure Sensor Left
03152
Rear Axle Pressure Sensor Right
03153
Front axle pressure sensor
03154
Front axle pressure sensor
03155
Second rear axle displacement sensor
03156
The 2nd rear axle displacement sensor
03157
Brake pressure sensor
03158
Lifting bridge pressure sensor
03170
Steering angle sensor
03200
Voltage supply / feedback of solenoid valves
03201
Solenoid valve 2/2 of the rear axle on the left
03202
Solenoid valve 2/2 of the rear axle on the right
03203
Solenoid valve 2/2, front axle
03204
Solenoid valve 3/3 lifting / lowering lifting / supporting bridge
03205
Solenoid valve 3/3 lifting / lowering lifting / supporting bridge
03206

<https://truckmanualshub.com/>

Solenoid valve 3/2 spare

03207

Solenoid valve 3/3 of the lifting bellows

03208

Solenoid valve 2/2, 3rd bridge on the right

03209

Solenoid valve 2/2, 3rd axle left

03212

Solenoid valve cross-choke

03216

Solenoid valve 3/3, raising / lowering the 2nd lifting / supporting bridge

03217

Solenoid valve 3/3, raising / lowering the 2nd lifting / supporting bridge

03230

Adjustment of the preset level

03231

A leak

03260

Voltage supply / feedback damper valve

03261

Front Axle Shock Absorber

03262

The damper of the 1st rear axle

03263

The damper of the 2nd rear axle