



Removal

1. Open the hatch.
2. Drain the cooling system.

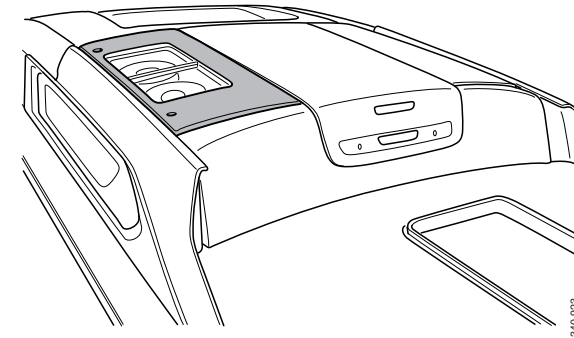


3. Detach the hoses from the pump.

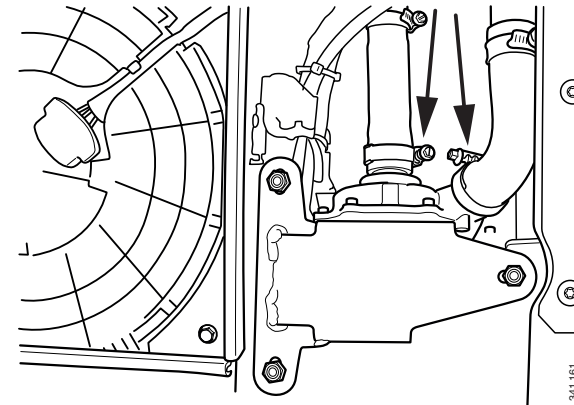

Coolant pump, hybrid vehicle

4. Undo the nuts securing the pump.

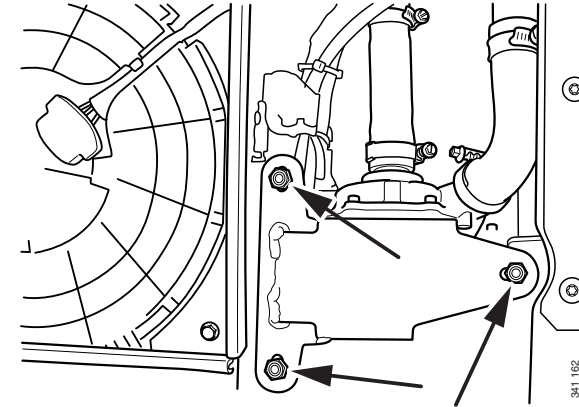

5. Disconnect the pump electrical connections.

6. Remove the pump.

