
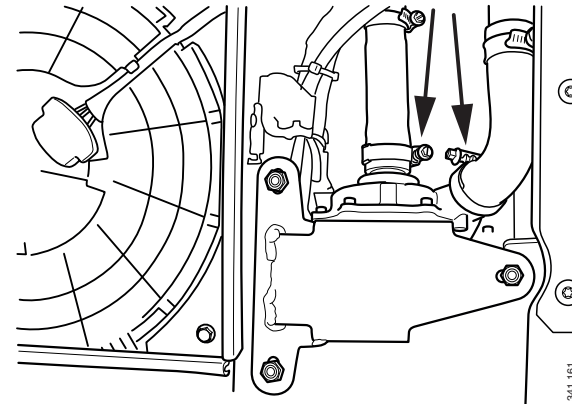


Removal


1. Open the hatch.
2. Drain the cooling system.

3. Detach the hoses from the pump.

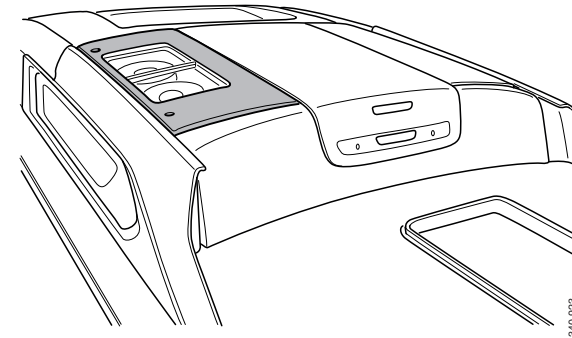


Coolant radiator, hybrid vehicle

4. Undo the nuts securing the pump.

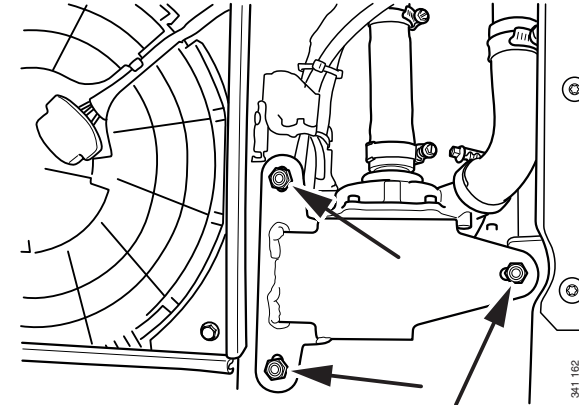


5. Disconnect the pump electrical connections.

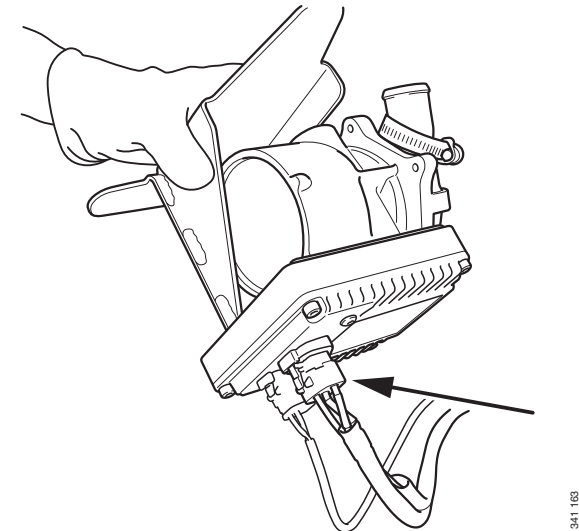


Coolant radiator, hybrid vehicle

6. Remove the grille by pulling it straight out.

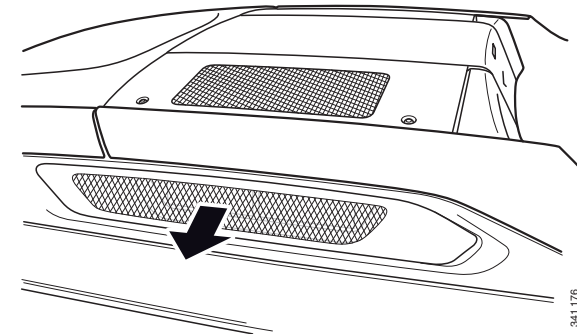


7. Loosen the 2 screws so that the side panel can be pulled out slightly during work for better access.

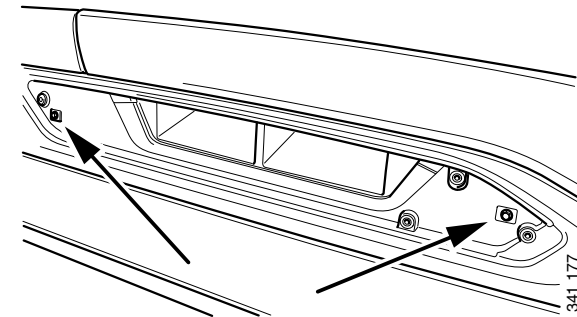


Coolant radiator, hybrid vehicle

8. Remove the beam.
9. Detach the fan connection.

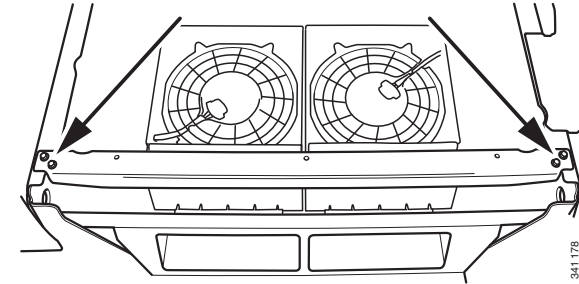

10. Remove the screws securing the fan frame and remove it.

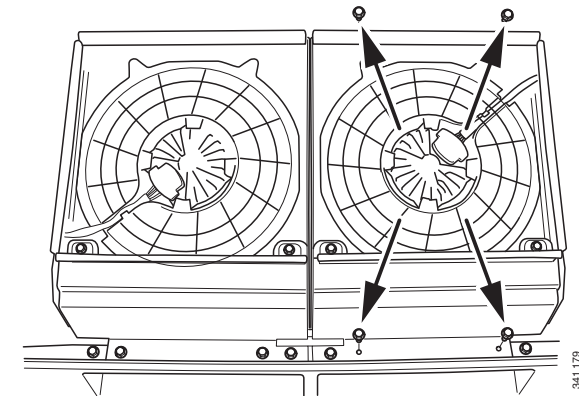

Coolant radiator, hybrid vehicle

Removal

11. Undo the hose clamps, and remove the radiator.

