



Large silencer, Euro 6

1. Cut away the brackets which prevent access to the welds on the protective plates.
2. Cut a few millimetres outside the welds securing the protective plates.

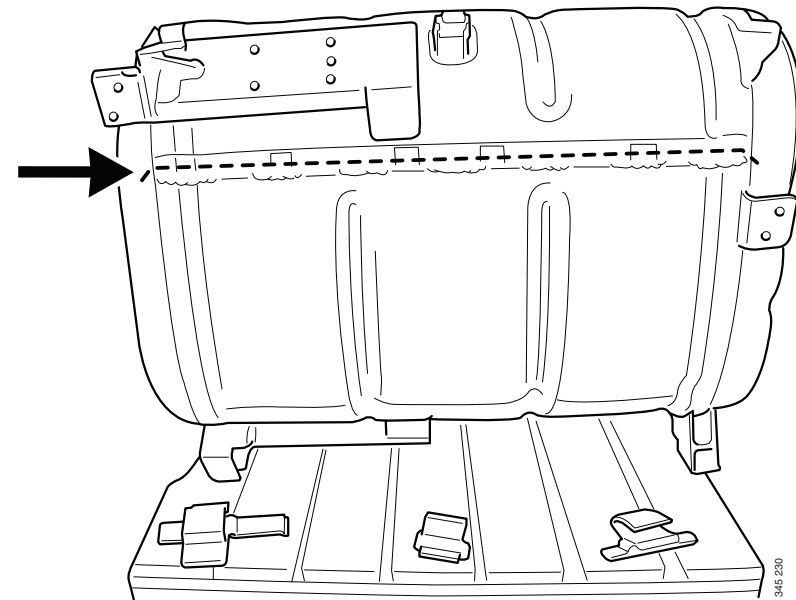

Large silencer, Euro 6


3. Lift off the protective plate.

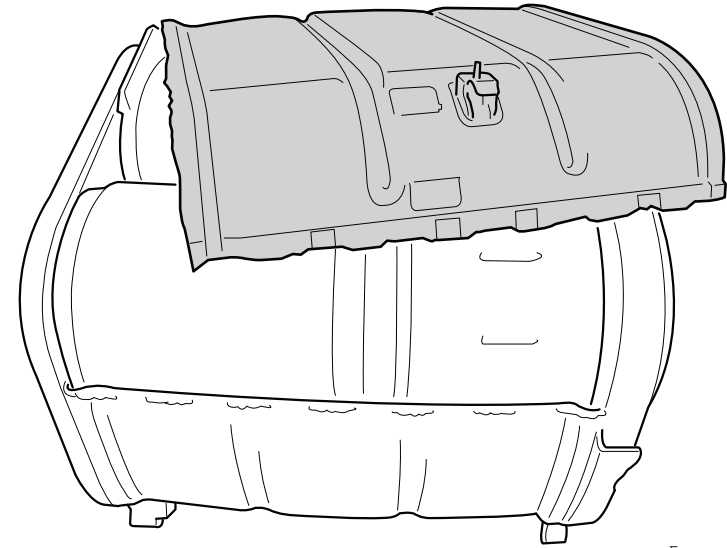

346 231

Large silencer, Euro 6


4. Cut a few millimetres outside the welds securing the protective plate.

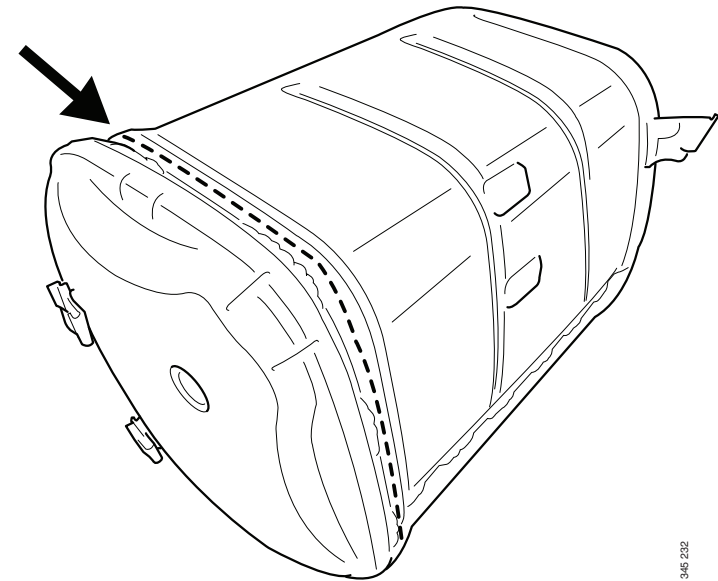

345 232


Large silencer, Euro 6

5. Lift off the protective plate.

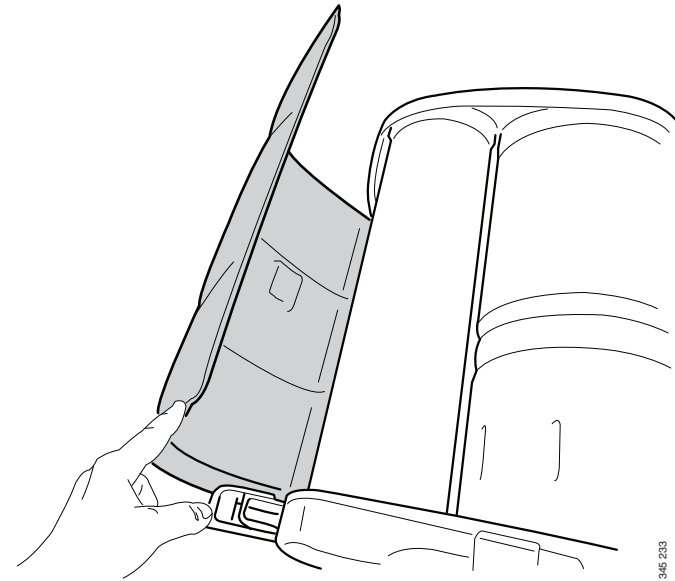

Large silencer, Euro 6


6. Cut the exhaust spigot under the weld.

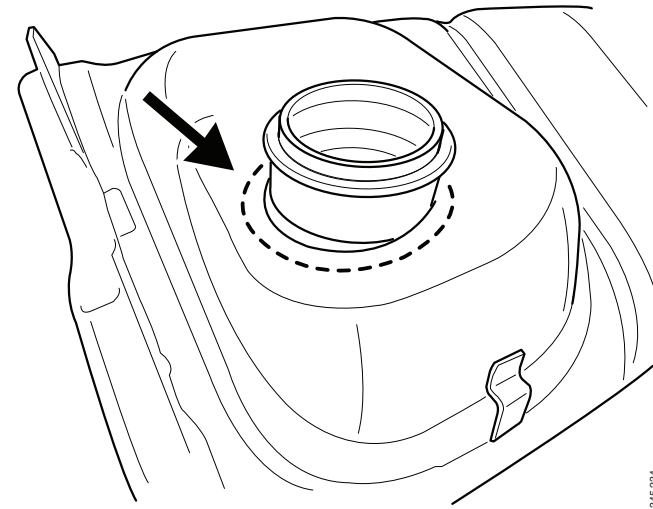

345294


Large silencer, Euro 6

7. Cut a few millimetres outside the welds securing the protective plate.

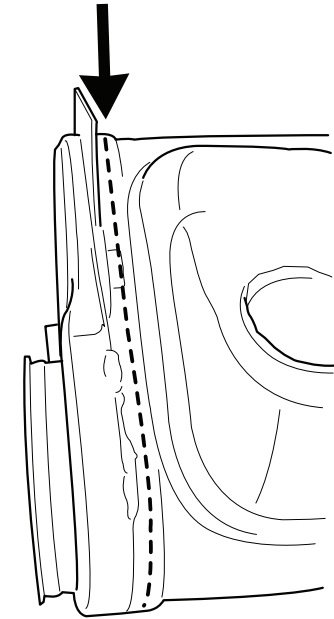


Large silencer, Euro 6

8. Lift off the protective plate.

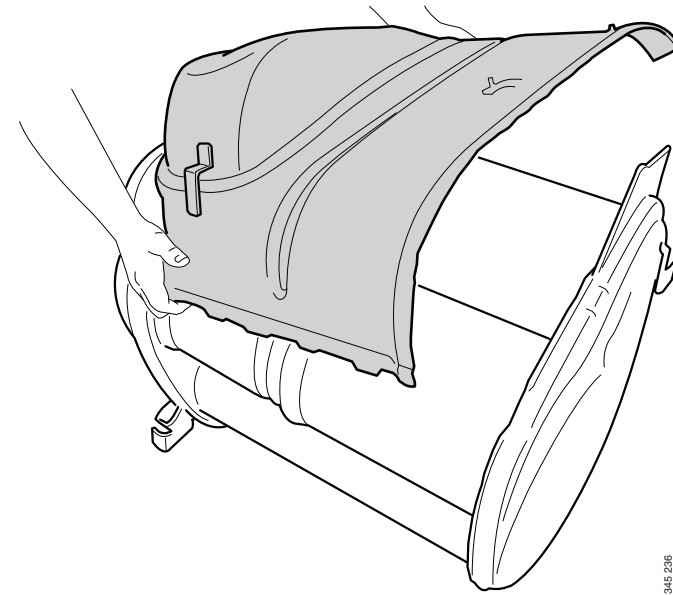

Large silencer, Euro 6


9. Cut off the pipe.

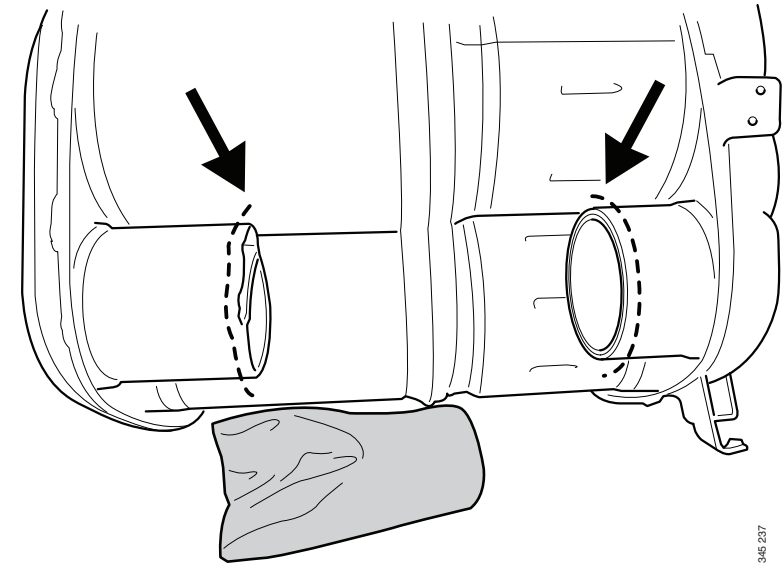

345 237

Large silencer, Euro 6


10. Cut/divide the silencer as illustrated.

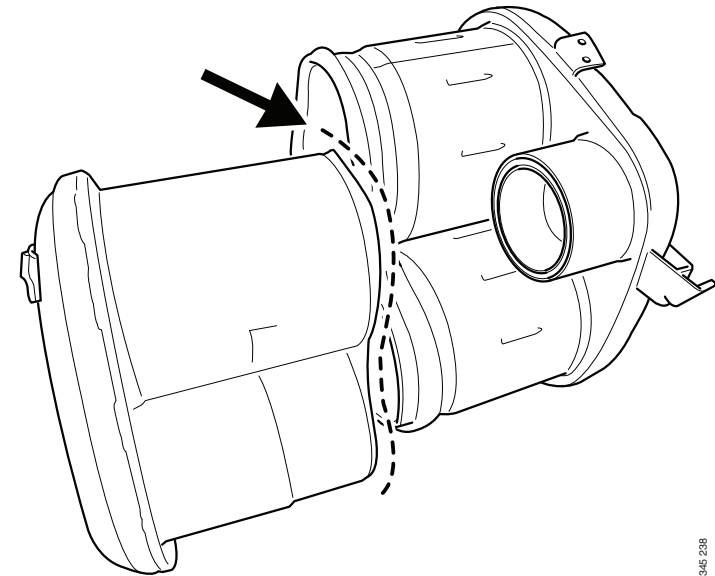

945 238

Large silencer, Euro 6


11. Cut a few millimetres outside the welds securing the protective plate.

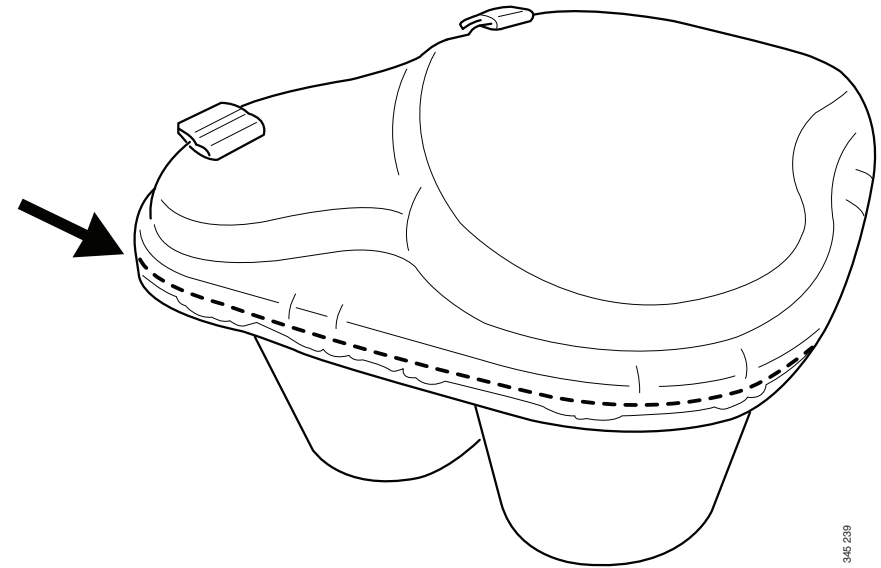

345 239

Large silencer, Euro 6


12. Lift off the protective plate.

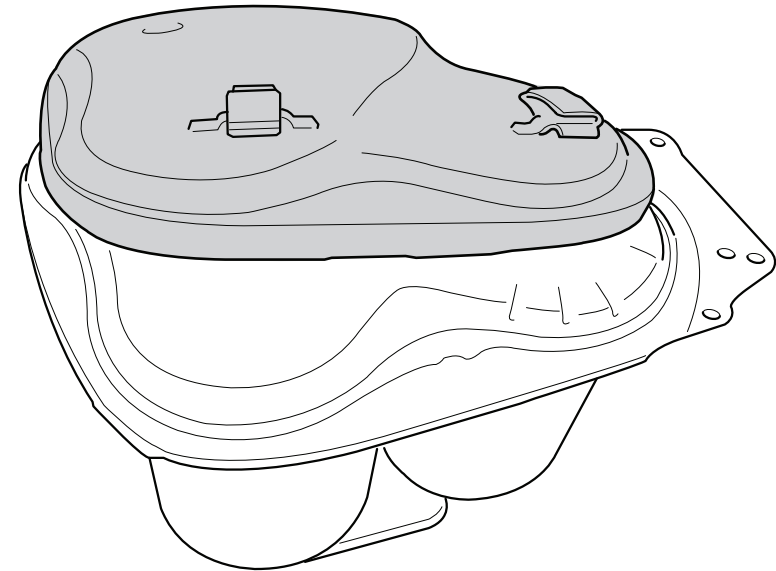

345 240

Large silencer, Euro 6


13. Cut a few millimetres over the weld securing the end plate.

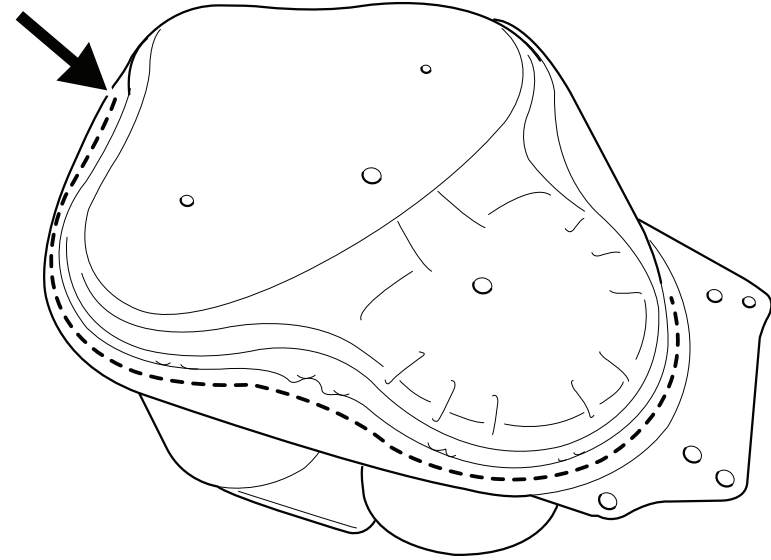

345 241

Large silencer, Euro 6


14. Lift off the end plate.

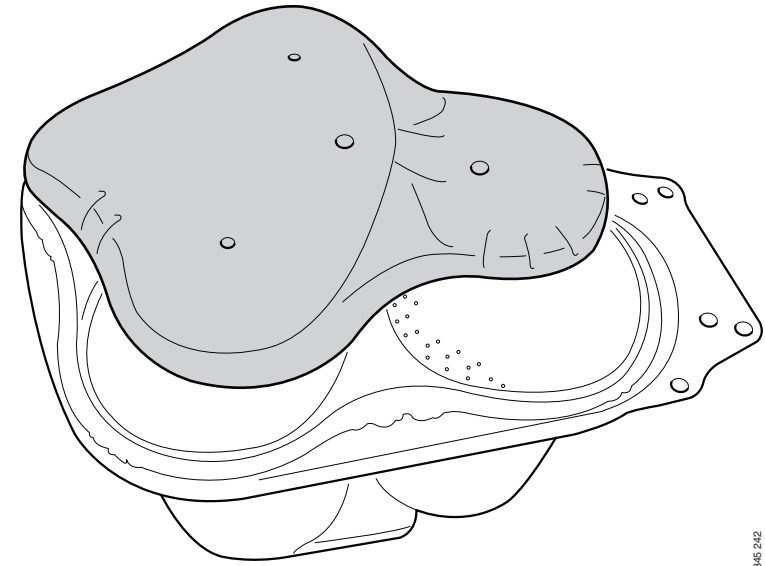

345 242

Large silencer, Euro 6


15. Cut/divide the silencer as illustrated. Turn over the silencer.

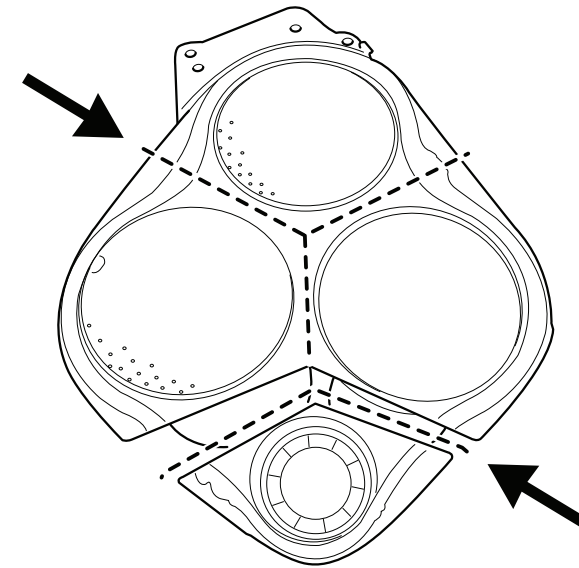

345 243

Large silencer, Euro 6

16. Cut/divide the silencer as illustrated.

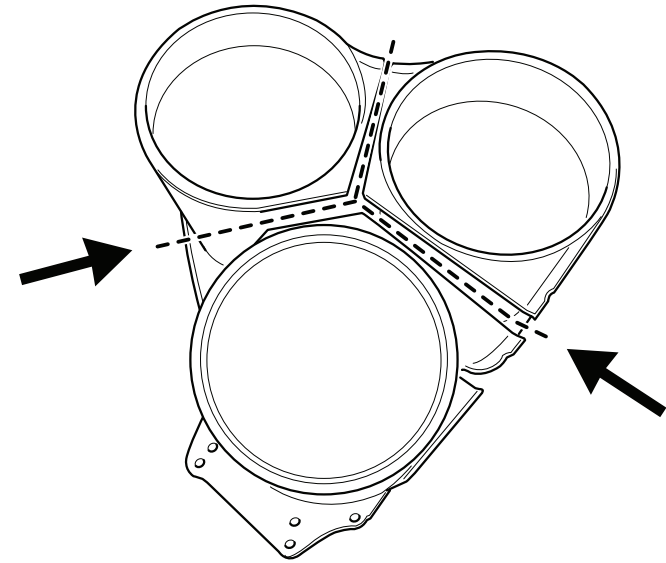

345 244