



Removal

1. Open the hatch.

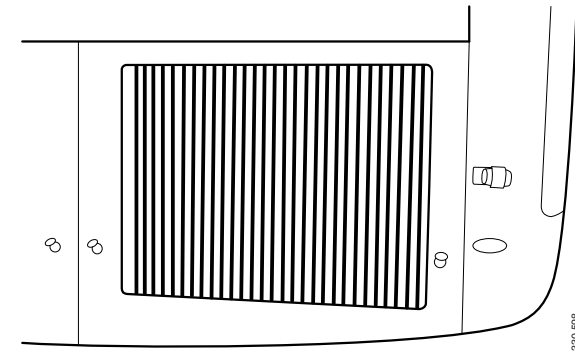


2. Detach the hoses and catch the oil with a container.

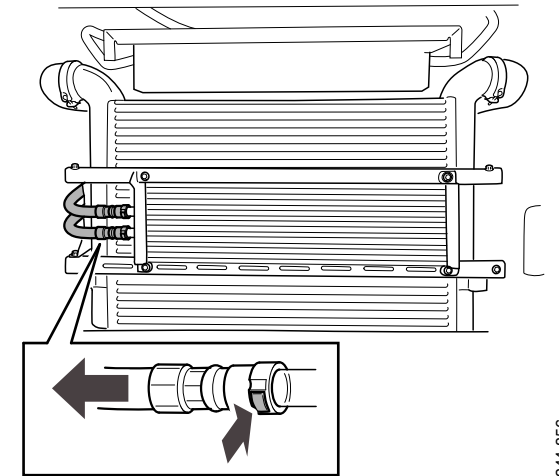

Oil cooler, hybrid vehicle

3. Remove the screws.

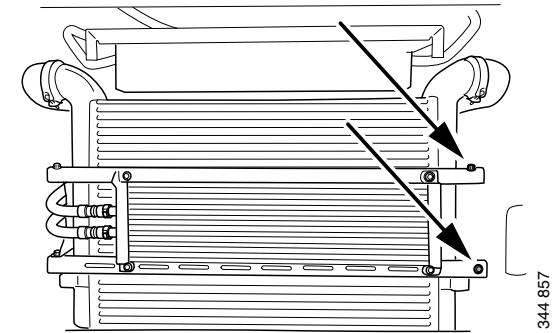

4. Remove the screws and lift the radiator off.

