

## General



### WARNING!

If work is to be carried out underneath the cab later, make sure the cab is in the lowered position before emptying the pump.

## Work description

1. Remove the pump from the vehicle.
2. Drain the oil from the pump.
3. Remove the cab tilt cylinder and cut the oil pipes.

