




INSTALLATION
MANUAL

SCANIA

Intake system and ventilation

**Industrial engines
DC09, DC13, DC16**

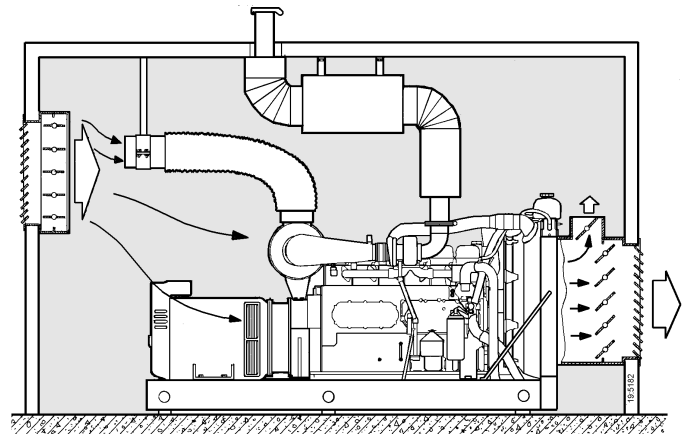



INSTALLATION MANUAL

SCANIA

Intake air	3
Intake air taken from outside engine compartment	4
Intake air taken from engine compartment	7
Air cleaners	8
Air cleaners with precleaner	9
Air cleaners without precleaner	10
Crankcase ventilation	11
Open crankcase ventilation	11
Closed crankcase ventilation	12
Connection to turbocharger	13
Cleanliness requirement	13
Charge air pipe	13
Stage IV/Tier 4f engines	14



INSTALLATION MANUAL

SCANIA

Intake air

Intake air

If the intake line is located close to exhaust pipes or other hot parts, radiation protection should be used to limit unnecessary heating of the intake air.


REQUIREMENT!

The temperature of the intake air must not exceed the ambient temperature by more than 5°C.

If the intake air temperature upstream of the turbocharger continuously exceeds 30°C, then engine power may drop. If the engine is enclosed in some manner, make sure that there is an adequate flow of intake air.

The dependence of the engine power on intake air temperature is shown in the chart on the right. 100% engine power is shown under actual test conditions at the factory.

The engine air consumption in kg/min at full power and at different engine speeds is indicated in the tables showing the air consumption and radiated heat for the relevant engine type under Technical data in the Installation manual.

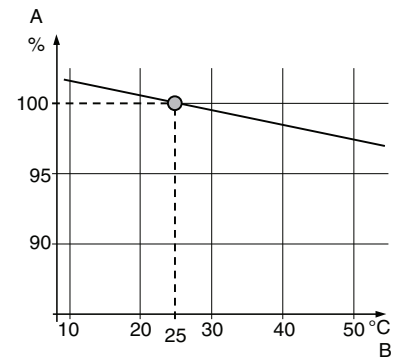

Engine power dependence on intake air temperature. 100% at 25°C, 1,000 mbar, engine power setting not corrected

*A = Engine power
B = Intake air temperature*



INSTALLATION MANUAL

SCANIA

Intake air

Intake air taken from outside engine compartment

In engine systems where the engine intake air comes from outside the engine compartment and is led via a fresh air line to the engine, the pressure drop for the intake system should be measured.

The air intake should be located so that the intake air is as clean as possible and so that neither the engine exhaust gases nor heated air from the engine compartment can mix with the intake air.

The intake air must not contain chemical pollutants, such as CFCs.

The air intake should be designed to exclude water, snow and contamination.

Maximum permissible pressure drop is 30 mbar. This value includes the pressure drop in the new air filter, connected coarse filter and in the fresh air line.



INSTALLATION MANUAL

SCANIA

Intake air

The following applies to the fresh air line:

- The fresh air line must not be routed with any sharp bends.
- The inside of the fresh air line must be flat and even.
- If a hose is used as a fresh air line, it must be hard so that it does not collapse onto itself.

It is not necessary to check the pressure drop in the following cases:

- The intake system comprises air hoses and air pipes from Scania's standard range.
- If the fresh air line is maximum 5 m and has an inside diameter of at least 160 mm for DC09 or 210 mm for DC13 and DC16, respectively.

If the planned fresh air line is longer than 5 m, the required diameter must be calculated as illustrated. The vacuum upstream of the turbocharger must then be measured.


The pressure drop measurement is normally made at the vacuum indicator. If the line between the filter and turbocharger is not a Scania standard line, the pressure drop should be measured on a straight section as close to the turbocharger as possible.



IMPORTANT!

The total pressure drop with a blocked air filter must not exceed 65 mbar.

Engine damage will not occur up to 100 mbar, but fuel consumption and smoke will increase. Above 100 mbar there is a risk that the air volume to the engine will be inadequate, resulting in breakdowns.

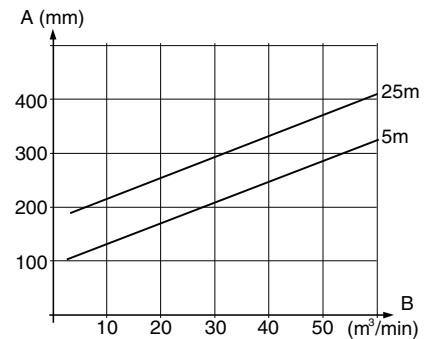

Calculation of minimum diameter of the intake line

A = Intake line diameter

B = Air consumption

340 421



INSTALLATION MANUAL

SCANIA

Intake air

Ventilation of the engine compartment with fresh air line to the engine

When the intake air to the engine is taken from outside the engine compartment, it is important to check that the temperature in the engine compartment does not exceed 90°C. If the temperature exceeds this value, there is a risk that the engine's electric components and control unit will malfunction.

If there is a risk that the temperature will exceed 90°C, the engine compartment must be ventilated.

When dimensioning the engine compartment ventilation, other air consumers in the engine compartment must also be considered.

The amount of radiated heat emitted by various engines is indicated under Technical data in the Installation manual.

The exhaust pipes should be insulated to reduce the radiated heat in the engine compartment. See Exhaust system in the Installation manual.



INSTALLATION MANUAL

SCANIA

Intake air

Intake air taken from engine compartment

When the engine intake air is taken from the engine compartment, the air intake must be located in the engine compartment. The opening area should be large enough to ensure that no vacuum arises in the engine compartment. The air intake should also be designed and positioned so that it cannot be closed or accidentally blocked by water, snow or contaminants.

The air intake should be located so that the intake air is as clean as possible and so that neither the engine exhaust gases nor heated air from the engine compartment can mix with the intake air to the engine.

In the chart on the right-hand side, the recommended minimum area for the air intake can be read from the engine air consumption.

If several engines or other air consumers are located in the same engine compartment, the diameter should be increased correspondingly.


Measure the pressure difference during operation, when the engine or engines have been running for about 5 minutes at full load. The pressure difference must not exceed 1 mbar. For engines without a fan, a vacuum of 2 mbar is permissible.

For installations where the engine draws the intake air directly from the engine compartment, the engine compartment must normally be equipped with a ventilation system. This system should extract the air heated by radiation etc. in order for the requirement of a low intake air temperature to be met.

If there is a refrigerator compressor in the engine compartment, it is important that any leakage of refrigerant does not contaminate the intake air.

The radiated heat from the engine exhaust pipe downstream of the engine must also be taken into account. The heat radiation depends on how much of the line is inside the engine compartment and how much of it is insulated.

There is also additional heat due to efficiency losses in driven units located in the engine compartment.

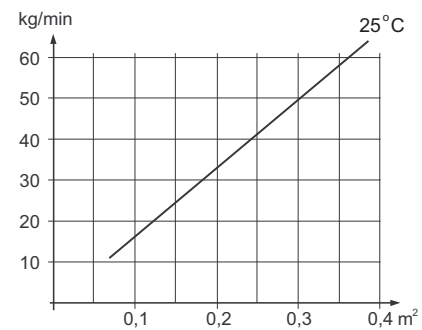

Calculation of minimum air intake area



INSTALLATION MANUAL

SCANIA

Air cleaners

The amount of radiated heat emitted by the engine is indicated in the tables showing the radiated heat for the relevant engine type under Technical data in the Installation manual.

Air cleaners

The engines are delivered with air cleaners with paper filter. The air cleaner is available with or without integrated self-cleaning precleaner.

If the air cleaner has a precleaner, it always has a safety cartridge. This protects the engine from contamination, for example, if the main filter is damaged or when renewing the main filter element. An air cleaner without precleaner is not available with safety cartridge.

Bear in mind the following when installing an air cleaner:

- The air cleaner must be fitted so that it is easily accessible for cleaning and filter renewal.
- The vacuum indicator must be positioned so that it can be read easily.
- In order to be able to remove the filter element clearance in the air cleaner extension is required.
- The intake line between the air cleaner and the turbocharger must be sealed so that no unfiltered air can be drawn into the engine. The intake line must be designed in such a way that it cannot collapse onto itself as a result of a large pressure drop. The intake line should be able to withstand a vacuum of 200 mbar before it collapses onto itself.
- The material and composition of the intake line between the air filter and turbocharger must be such that it cannot release rust or objects that could damage the engine.

An effective self-cleaning prefilter is recommended for particularly dusty environments. Even engine systems exposed to driving snow can require a special type of prefilter.



INSTALLATION MANUAL

SCANIA

Air cleaners

For such equipment, Scania refers to filter system specialists who can give recommendations about the system which is most suitable for a particular type of engine installation.

It is also important to make sure that any insulation in the engine compartment and around the exhaust pipes cannot come loose and be drawn into the intake line.

If a non-Scania air filter is used, engine air consumption and filter element pore size must be considered.


Air cleaners with precleaner

Air filters with precleaner are available in 3 different sizes: 13 inch, 15 inch and 18 inch.




IMPORTANT!

The air cleaners must be fitted horizontally with the drain pipe pointing downwards.

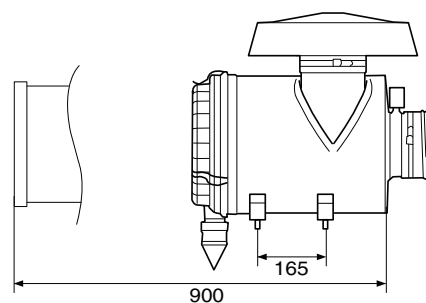

340 419

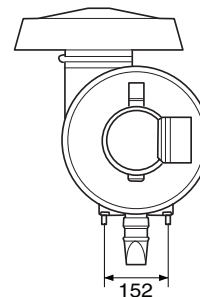

340 418



INSTALLATION MANUAL

SCANIA

Air cleaners


Air cleaners without precleaner

Air filters without precleaner are available in 2 different sizes: 13 inch and 15 inch.




IMPORTANT!

The air cleaner must be fitted horizontally with the air intake (1) pointing downwards. The air cleaner may also be fitted vertically, but only if it is fitted indoors or in such a way that water cannot get into the air filter.

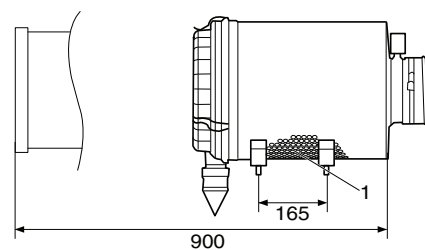

340 417

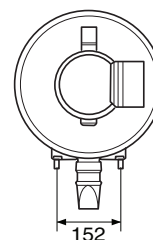

340 416



INSTALLATION MANUAL

SCANIA

Crankcase ventilation

Crankcase ventilation

Open crankcase ventilation


If the engine is located in an enclosed space, crankcase gases should be led out of the engine compartment.

This is especially important when the engine is equipped with a driving fan since the crankcase gases will otherwise settle on the radiator, binding dirt and dust, which reduces the cooling effect.

The crankcase ventilation pipe (1) has a diameter of 32 mm.

The following points are important for external ventilation of crankcase gases:


- The crankcase gases must not be led to outlet ducts for engine compartment ventilation or exhaust gases.
- The crankcase ventilation lines from multiple engines must not be joined to form a single pipe.
- The crankcase ventilation line should be made from pipe or oil-resistant hose, connected to the ventilation pipe on the engine.
- When the crankcase ventilation line is extended in cold environments, it must be designed to ensure that condensation cannot freeze in the hose. The extension of a crankcase ventilation line may need to be insulated.
- When the crankcase ventilation line is extended, the extension must be designed to ensure that no pockets are formed. It must also have a continuous downward slope so that it can neither freeze nor can oil accumulations form resulting in too high a pressure in the crankcase.
- Any crankcase ventilation pipe with its outlet outside the engine compartment must be protected so that no water or contaminants can get into the crankcase.
- If pipe is used, there should be a flexible, oil-resistant line between the engine and pipe to absorb the engine movements.
- If hose is used, it must be clamped so that no sharp kinks are formed.

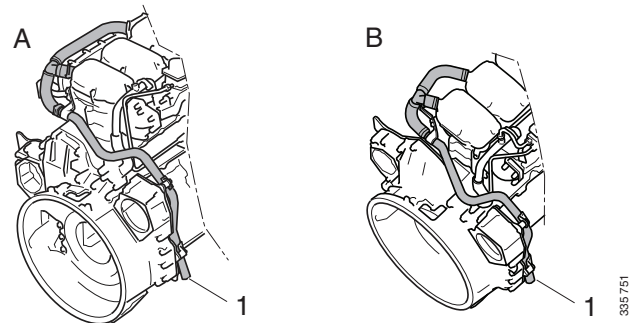

Open crankcase ventilation

A. DC09

B. DC13

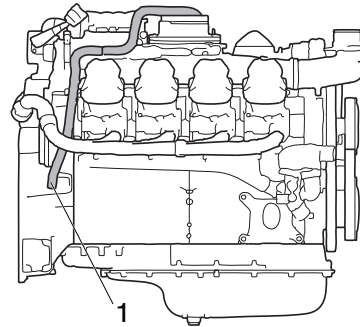

Open crankcase ventilation, DC16



INSTALLATION MANUAL

SCANIA

Crankcase ventilation


- The crankcase ventilation pipe outlet must not be positioned where there is a risk of it becoming blocked.

Closed crankcase ventilation

For certain engine systems, external ventilation of crankcase gases could be extensive and expensive. This applies, for example, to generator sets in large buildings where very long evacuation pipes are required.

When there are special requirements for closed crankcase ventilation, e.g. for environmental reasons, it is permissible to allow the crankcase gases to be led to the intake line between the air filter and the turbocharger.

It is not permissible to lead the crankcase gases to the intake upstream of the engine air filter.

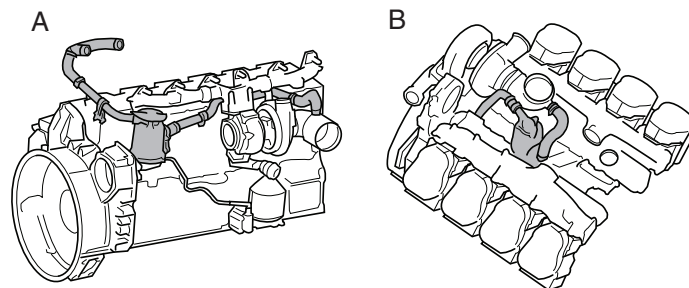

Closed crankcase ventilation

A. DC09, DC13

B. DC16

335 754



INSTALLATION MANUAL

SCANIA

Connection to turbocharger

Connection to turbocharger

Cleanliness requirement



IMPORTANT!

Observe the utmost cleanliness when installing all parts from the air filter up to the turbocharger. If foreign particles enter the turbocharger, this could quickly lead to impaired performance and breakdown.

Do not remove the protection from the turbocharger inlet pipes and charge air pipe before they are connected.

Charge air pipe


The installation of the charge air pipe recommended by Scania is shown in the illustration.



IMPORTANT!

Position a flexible hose as close to the turbocharger connection as possible to reduce forces and torques.

The weight of the charge air pipe must not put any load on the turbocharger. Therefore, support the charge air pipe downstream of the turbocharger connection with a sturdy bracket.

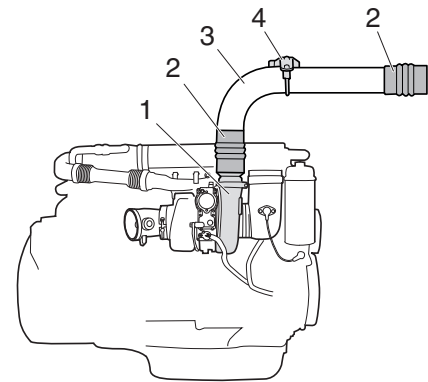

Recommended installation of charge air pipe

1. Turbocharger
2. Flexible hose
3. Charge air pipe
4. Bracket

337 360



INSTALLATION MANUAL

SCANIA

Connection to turbocharger


Stage IV/Tier 4f engines

Inlet pipe for connection to turbocharger


The Scania inlet pipes for connection to the turbocharger must be used on all engines certified according to Stage IV/Tier 4f. The inlet pipes are available in 2 different versions for DC09 and DC13, and in 1 version for DC16.

Combined sensor T4000 for measuring ambient pressure and temperature is positioned in each version of the inlet pipe.

Tightening torque for the clamp joint connected to the turbocharger: 20 Nm. Applies only to DC09 and DC13.

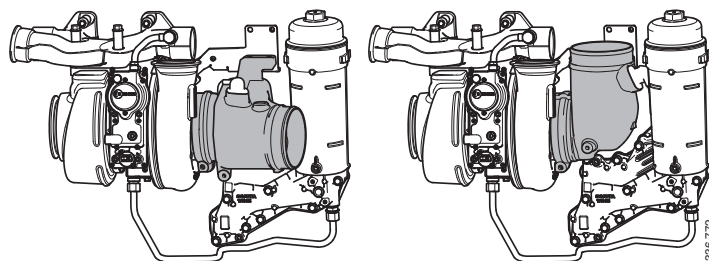

Inlet pipes for DC09 and DC13

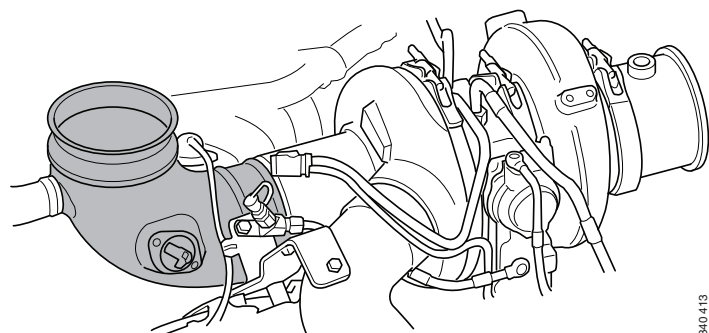

Inlet pipe for DC16



INSTALLATION MANUAL


SCANIA

Connection to turbocharger

Mass flow sensor pipe


All engines certified according to Stage IV/Tier 4f are supplied with an inlet pipe with a mass flow sensor T126. The mass flow sensor pipes are available in 2 different versions for DC09 and DC13, and in 1 version for DC16.

The dimensions and air direction for the mass flow sensor pipes are shown in the illustrations below.

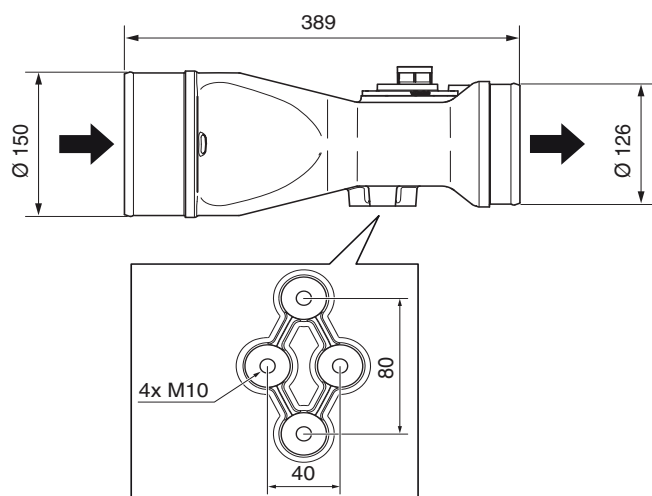

336 769

Mass flow sensor pipes for DC09 and DC13

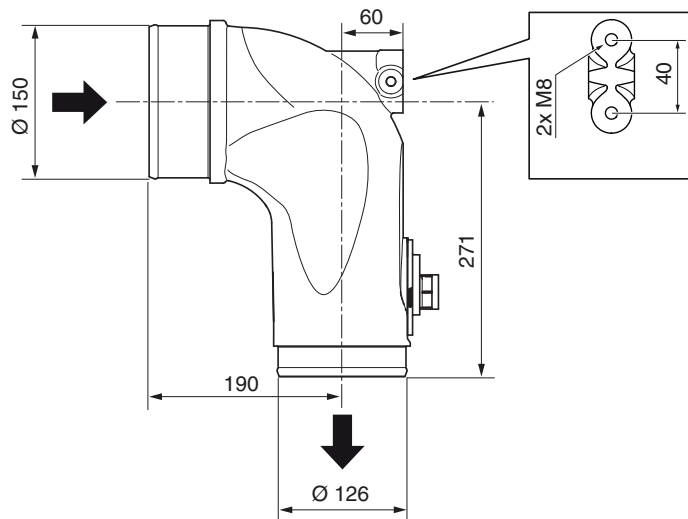


336 770



INSTALLATION MANUAL

SCANIA

Connection to turbocharger

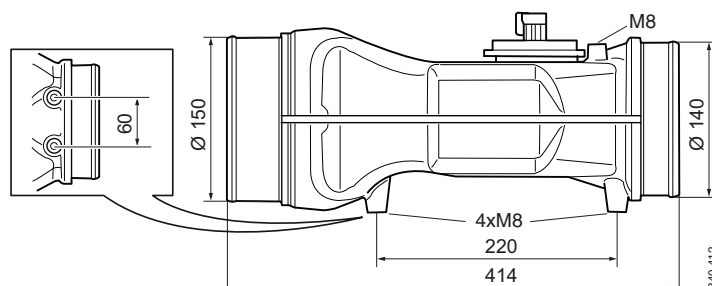


Mass flow sensor pipe for DC16

In order to get the best possible measured value when measuring the mass flow, the following recommendations for the installation of all types of mass flow sensor pipes apply:

- Install the mass flow sensor pipe as near to the turbocharger as possible.
- Use pipes between the turbocharger and the mass flow sensor pipe as far as possible.
- Make pieces of hose as short as possible.
- Maximum distance between the inlet pipe and mass flow sensor pipe is 800 mm. This applies to all combinations of inlet pipes and mass flow sensor pipes.
- Use hose which is sturdy enough so that it does not collapse onto itself.

Tightening torque for hose clamps: 5 Nm.

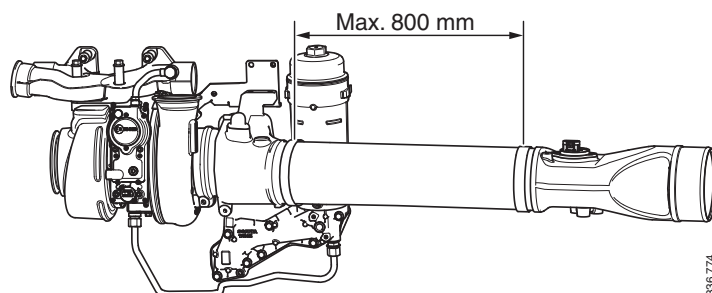

Maximum distance between the inlet pipe and mass flow sensor pipe




INSTALLATION MANUAL

SCANIA


Connection to turbocharger

- The switch of the mass flow sensor must not be on the underside of the mass flow sensor pipe where it may come into contact with condensation and dirt. See the illustration.

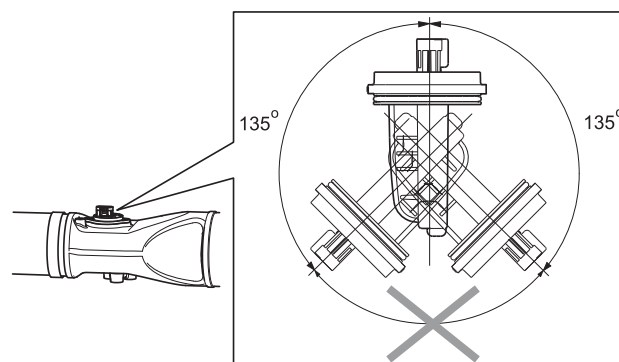

336 606

- If a pipe bend is installed upstream of the mass flow sensor pipe, the outer radius of the pipe bend must be on the same side as the measuring body of the mass flow sensor $\pm 90^\circ$. The airflow must hit the measuring body of the mass flow sensor (1).

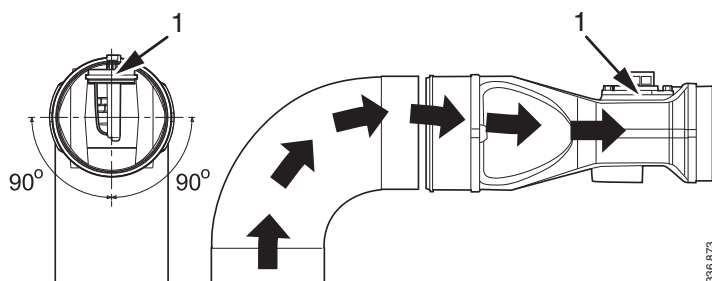

336 673

The relationship between the pipe bend and mass flow sensor pipe if a pipe bend is installed upstream of the mass flow sensor pipe