

DIESEL ENGINE FOR MARINE USE

WORKSHOP MANUAL

W04D, W04C-T, W04C-TI

Hino Motors, Ltd.

FOREWORD

This workshop manual has been prepared to provide information covering repair procedures on Hino Marine Engine.

Applicable models: W04D, W04C-T, and W04C-T1 engine

When making any repair of your engine, be careful not to be injured through improper procedures.

As for maintenance items, refer to the Operation Hand Book.

All information and specifications in this manual are based upon the latest product information available at the time of printing.

Hino Motors reserves the right to make changes at any time without prior notice.

HINO MOTORS, LTD.

Hino

WORKSHOP MANUAL

INDEX: ENGINE GROUP

**GENERAL
INTRODUCTION**

ENGINE

**ELECTRICAL
EQUIPMENT**

TURBOCHARGER

**INJECTION
PUMP**

**INJECTION PUMP
GOVERNOR**

GENERATOR

STARTER

**INJECTION PUMP
CALIBRATION**

MOTORS, LTD.

reserved. This manual may not be
d or copied in whole or in part, with-
ritten consent of Hino Motors, Ltd.

CHAPTER GI

GENERAL INTRODUCTION

GENERAL PRECAUTIONS	GI-2
HOW TO USE THIS WORKSHOP MANUAL	GI-3
IDENTIFICATION INFORMATION	GI-4
SPECIFICATIONS	GI-5
TIGHTENING TORQUE OF STANDARD BOLT	GI-15
RECOMMENDED LUBRICANTS	GI-16

GENERAL PRECAUTIONS

Some recommended and standard maintenance services for your engine are mentioned in this section.

When performing maintenance on your engine be careful not to get injured by improper work.

Improper or incomplete work can cause a malfunction of the engine which may result in personal injury and/or property damage.

WARNING

When working on your engine, observe the following general precautions to prevent personal injury and/or property damage in addition to the particular NOTES or WARNINGS.

Most threaded fasteners are metric.

Be careful not to mix with threaded fasteners using the inch system.

- Always wear safety glasses or goggles to protect your eyes.
- Remove rings, watches, ties, loose hanging jewelry and loose clothing before starting work on the engine.
- Bind long hair securely behind the head.
- To avoid serious burns, keep yourself away from hot metal parts such as the engine, exhaust manifold, radiator, muffler, exhaust pipe and tail pipe.
- Keep yourself, your clothing and your tools away from moving parts such as the cooling fan and V-belts when the engine is running.
- Always stop the engine by pulling out the engine stop knob. Leave the knob pulled out as long as the engine is stopped. And turn off the starter switch, unless the operation requires the engine running. Removing the key from the switch is recommended.
- Run the engine only in a well-ventilated area to avoid inhaling of carbon monoxide.
- Do not smoke while working on the engine since fuel and gases from the battery are flammable.
- Take utmost care when working on the battery. It contains corrosive sulfuric acid.
- Large electric current flows through the battery cable and starter cable. Be careful not to cause a short which can result in personal injury and/or property damage.
- Be careful not to leave any tool in the engine compartment. The tool may be hit by moving parts and can cause personal injury.


HOW TO USE THIS WORKSHOP MANUAL.

This workshop manual is designed as a guide for servicing engine.

An INDEX is provided on the first page of each chapter.

TROUBLESHOOTING is dealt with each chapter.

When beginning operations, refer to the sections on for guide to appropriate diagnoses.

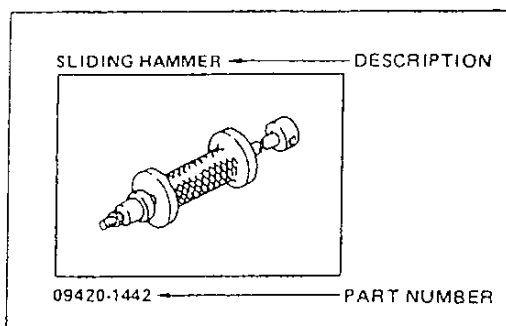

SPECIAL TOOLS are dealt with in each chapter.


When ordering a special tool, make sure that the parts number is correct.

REPAIR PROCEDURES


Repair procedures which are self-explanatory such as simple installation and removal of parts have been omitted. Illustrations such as the one below have been provided to make such simple procedures clear. Only essential procedures requiring directions have been dealt with explicitly.

EXAMPLE:

TIMING GEAR AND CAMSHAFT

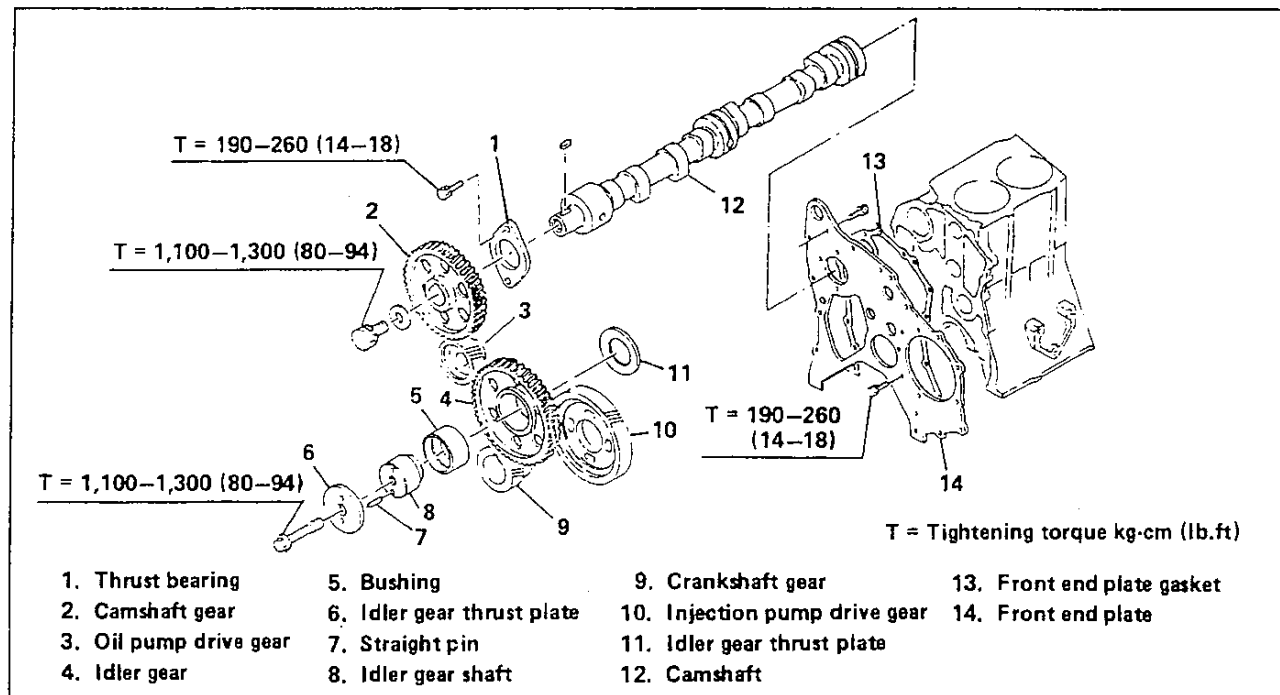

In some cases, illustrations may be of parts which differ in some nonessential way from the parts found on your particular engine. In such cases, however, the principle or procedure being illustrated applies regardless of such non-essential differences.

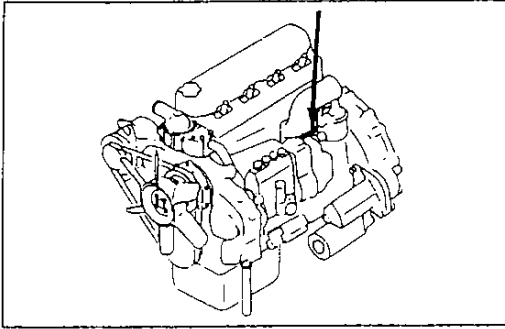

IDENTIFICATION INFORMATION

ENGINE SERIAL NUMBERS

Please quote these numbers when ordering spare parts or reporting technical matter as they will give you prompt service attention.

The engine serial number is engraved on the engine cylinder block.

SPECIFICATIONS
DIESEL ENGINE FOR MARINE USE

HINO

W04D

4.009 liters, 4-cycle,
4-cyl., water-cooled

● ENGINE DESCRIPTION

- | | |
|---|---|
| 1. Max. output, pleasure craft | 82 kW (110HP)/3,000 rpm |
| 2. Max. output, work boat
(light duty) | 69 kW (92 HP)/3,000 rpm |
| 3. Type | Diesel, 4-cycle, 4-cyl., in-line, over-head valve, water-cooled |
| 4. Aspiration | Natural aspirate |
| 5. Combustion system | Direct injection |
| 6. Cylinder | |
| Bore x Stroke | 104 x 118 mm (4.09 x 4.65 in.) |
| 7. Piston displacement | 4.009 liter (244.6 cu.in.) |
| 8. Compression ratio | 17.9 |
| 9. Direction of rotation | Counter-clockwise viewed from flywheel |
| 10. Dimensions without marine
gear (L x W x H) | Approx. 1,026 x 691 x 790 mm
(40.4 x 27.2 x 31.1 in.) |
| 11. Dry weight without marine
gear | Approx. 385 kg (850 lb) |

● FEATURES

- | | |
|---------------------|--|
| 1. Cylinder block | Mono block cast iron with replaceable dry liner |
| 2. Cylinder head | Single piece cast iron |
| 3. Crankshaft | Induction hardened die forged special steel with counter weights |
| 4. Piston and rings | Heat resistance aluminum alloy
Two compression rings, chrome plated
One oil ring, chrome plated with coil expander |
| 5. Camshaft | Induction hardened carbon steel |
| 6. Valves | Heat resistance steel |

● EQUIPMENT**● ENGINE**

- | | |
|--------------------------|--|
| 1. Flywheel housing | SAE No. 3 |
| 2. Flywheel | SAE 11½ |
| 3. Fuel injection pump | BOSCH "A" type with all speed governor |
| 4. Fuel filter | Paper element type |
| 5. Water separator | Equipped |
| 6. Lube oil pump | Full forced pressure feed by gear pump |
| 7. Lube oil filter | Paper element type (Full flow) |
| 8. Lube oil cooler | Multi plate type, Fresh water cooled |
| 9. Fresh water pump | Forced-circulation by volute pump |
| 10. Raw water pump | Self priming, Rubber impeller type |
| 11. Intake manifold | Inlet position at rear, with air cleaner |
| 12. Exhaust manifold | Fresh water-cooled exhaust manifold, integrated heat exchanger with expansion tank |
| 13. Starter | 12V, 2.5 KW |
| 14. Alternator | 12V, 50A, with built-in voltage regulator |
| 15. Engine stop solenoid | Equipped |
| 16. Emergency stop relay | Equipped |
| 17. Starter block relay | Equipped |
| 18. Glow plug | Equipped |
| 19. Rigid mount bracket | Equipped |
| 20. Exhaust riser | Cooled by raw water |

● INSTRUMENT PANEL

1. Battery switch
2. Starter switch with key
3. Instrument panel lamp switch
4. Tachometer (with hourmeter and trip meter)
5. Coolant temperature gauge
6. Oil pressure gauge
7. Fuel gauge
8. Volt meter
9. Pre-heater indicator lamp
10. Coolant temperature warning lamp
11. Charge warning lamp
12. Oil pressure warning lamp

SPECIFICATIONS

DIESEL ENGINE FOR MARINE USE

HINO**W04C-T**

3.839 liters, 4-cycle,
4-cyl., water-cooled,
turbocharged

• ENGINE DESCRIPTION

- | | |
|--|---|
| 1. Max. output, pleasure craft | 112 kW (150 HP)/3,000 rpm |
| 2. Max. output, work boat
(light duty) | 93 kW (125 HP)/3,000 rpm |
| 3. Type | Diesel, 4-cycle, 4-cyl., in-line, over-head valve, water-cooled |
| 4. Aspiration | Turbocharged |
| 5. Combustion system | Direct injection |
| 6. Cylinder
Bore x Stroke | 104 x 113 mm (4.09 x 4.45 in.) |
| 7. Piston displacement | 3.839 liter (234.2 cu.in.) |
| 8. Compression ratio | 17.9 |
| 9. Direction of rotation | Counter-clockwise viewed from flywheel |
| 10. Dimensions with marine
gear (L x W x H) | Approx. 1,134 x 661 x 790 mm
(44.6 x 26.0 x 31.1 in.) |
| 11. Dry weight with marine
gear | Approx. 465 kg (1,025 lb) |

• FEATURES


- | | |
|---------------------|--|
| 1. Cylinder block | Mono block cast iron with replaceable dry liner |
| 2. Cylinder head | Single piece cast iron |
| 3. Crankshaft | Induction hardened die forged special steel with counter weights |
| 4. Piston and rings | Heat resistance aluminum alloy
Two compression rings, chrome plated
One oil ring, chrome plated with coil expander |
| 5. Camshaft | Induction hardened carbon steel |
| 6. Valves | Heat resistance steel |

● EQUIPMENT**● ENGINE**

1. Flywheel housing	SAE No. 3
2. Flywheel	SAE 11½
3. Fuel injection pump	BOSCH "A" type with all speed governor
4. Fuel filter	Paper element type
5. Water separator	Equipped
6. Lube oil pump	Full forced pressure feed by gear pump
7. Lube oil filter	Paper element type (Full flow)
8. Lube oil cooler	Multi plate type, Fresh water cooled
9. Fresh water pump	Forced-circulation by volute pump
10. Raw water pump	Self priming, Rubber impeller type
11. Intake manifold	Inlet position at rear
12. Exhaust manifold	Fresh water-cooled exhaust manifold, integrated heat exchanger with expansion tank
13. Turbocharger	Cooled by fresh water, with air cleaner
14. Starter	12V, 2.5 KW
15. Alternator	12V, 50A, with built-in voltage regulator
16. Engine stop solenoid	Equipped
17. Emergency stop relay	Equipped
18. Starter block relay	Equipped
19. Grow plug	Equipped
20. Rigid mount bracket	Equipped
21. Exhaust riser	Cooled by raw water
22. Marine gear	Equipped


● INSTRUMENT PANEL

1. Battery switch
2. Starter switch with key
3. Instrument panel lamp switch
4. Tachometer (with hourmeter and trip meter)
5. Coolant temperature gauge
6. Oil pressure gauge
7. Fuel gauge
8. Volt meter
9. Pre-heater indicator lamp
10. Coolant temperature warning lamp
11. Charge warning lamp
12. Oil pressure warning lamp

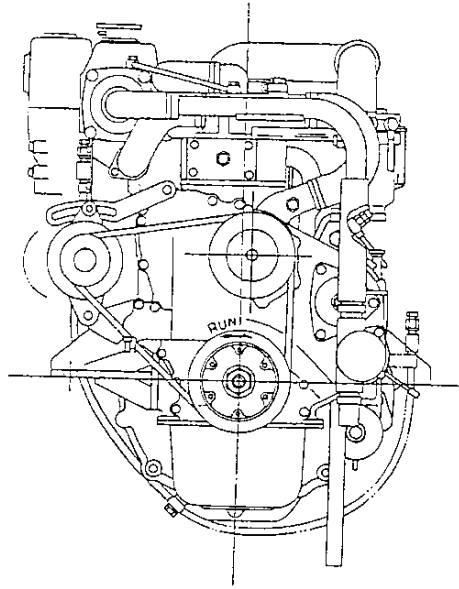

FRONT VIEW

F226

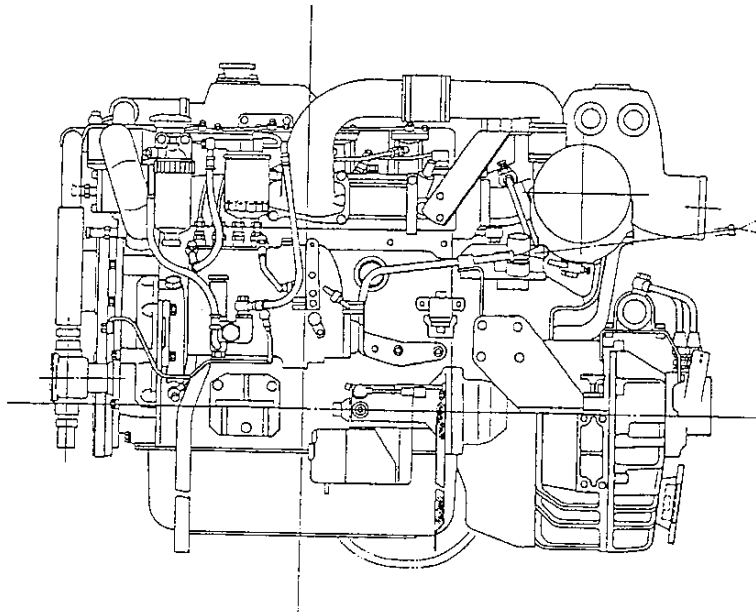

LEFT SIDE VIEW

F227

NOTE: These specifications are subject to change without notice.

Hino HINO MOTORS, LTD.

TOKYO, JAPAN

SPECIFICATIONS
DIESEL ENGINE FOR MARINE USE

HINO**W04C-TI**

3.839 liters, 4-cycle,
4-cyl., water-cooled,
turbocharged and intercooled

● ENGINE DESCRIPTION

- | | |
|--|---|
| 1. Max. output, pleasure craft | 157 kW (210 HP)/3,000 rpm |
| 2. Max. output, work boat
(light duty) | 138 kW (185 HP)/3,000 rpm |
| 3. Type | Diesel, 4-cycle, 4-cyl., in-line, over-head valve, water-cooled |
| 4. Aspiration | Turbocharged and intercooled |
| 5. Combustion system | Direct injection |
| 6. Cylinder | |
| Bore x Stroke | 104 x 113 mm (4.09 x 4.45 in.) |
| 7. Piston displacement | 3.839 liter (234.2 cu.in.) |
| 8. Compression ratio | 16.5 |
| 9. Direction of rotation | Counter-clockwise viewed from flywheel |
| 10. Dimensions with marine
gear (L x W x H) | Approx. 1,152 x 694 x 790 mm
(45.4 x 27.3 x 31.1 in.) |
| 11. Dry weight with marine
gear | Approx. 540 kg (1,191 lb) |

● FEATURES


- | | |
|---------------------|--|
| 1. Cylinder block | Mono block cast iron with replaceable dry liner |
| 2. Cylinder head | Single piece cast iron |
| 3. Crankshaft | Induction hardened die forged special steel with counter weights |
| 4. Piston and rings | Heat resistance aluminum alloy
Two compression rings, chrome plated
One oil ring, chrome plated with coil expander |
| 5. Camshaft | Induction hardened carbon steel |
| 6. Valves | Heat resistance steel |

● EQUIPMENT**● ENGINE**

1. Flywheel housing	SAE No. 3
2. Flywheel	SAE 11½
3. Fuel injection pump	BOSCH "AD" type with all speed governor
4. Fuel filter	Paper element type
5. Water separator	Equipped
6. Lube oil pump	Full forced pressure feed by gear pump
7. Lube oil filter	Paper element type (Full flow)
8. Lube oil cooler	Multi plate type, Fresh water cooled
9. Fresh water pump	Forced-circulation by volute pump
10. Raw water pump	Self priming, Rubber impeller type
11. Intake manifold	Inlet position at rear
12. Exhaust manifold	Fresh water-cooled exhaust manifold, integrated heat exchanger with expansion tank
13. Turbocharger	Cooled by fresh water, with air cleaner
14. Intercooler	Cooled by raw water
15. Starter	12V, 2.5 KW
16. Alternator	12V, 50A, with built-in voltage regulator
17. Engine stop solenoid	Equipped
18. Emergency stop relay	Equipped
19. Starter block relay	Equipped
20. Glow plug	Equipped
21. Rigid mount bracket	Equipped
22. Exhaust riser	Cooled by raw water
23. Marine gear	Equipped


● INSTRUMENT PANEL

1. Battery switch
2. Starter switch with key
3. Instrument panel lamp switch
4. Tachometer (with hourmeter and trip meter)
5. Coolant temperature gauge
6. Oil pressure gauge
7. Fuel gauge
8. Volt meter
9. Pre-heater indicator lamp
10. Coolant temperature warning lamp
11. Charge warning lamp
12. Oil pressure warning lamp

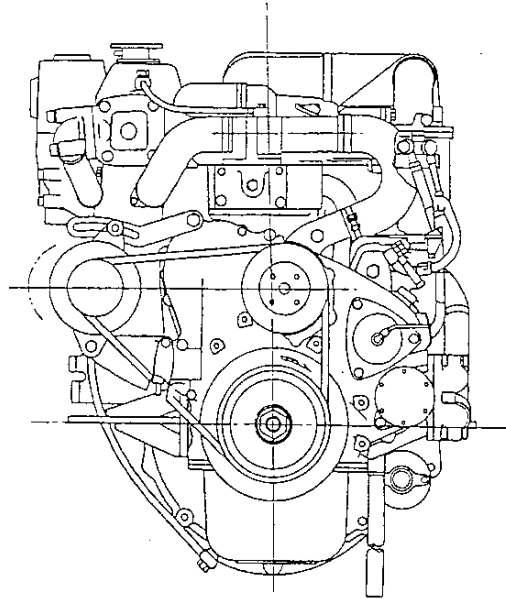

FRONT VIEW

F228

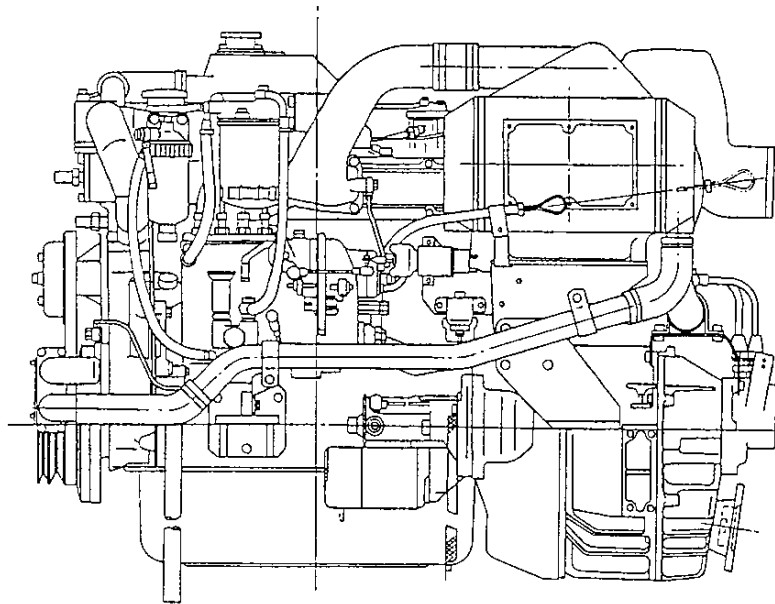

LEFT SIDE VIEW

F229

NOTE: These specifications are subject to change without notice.

Hino HINO MOTORS, LTD.

TOKYO, JAPAN

TIGHTENING TORQUE OF STANDARD BOLT

Unit: kg-cm (lb.ft)

Bolt identification	Tightening conditions	Bolt diameter (mm)	4	6	8	10	12	14	16	18	20	22	24
	Even tightening area. Bolt nut, coating, naked bolt, lubricant, etc. Optimum conditions.		10 - 15 (0.8 - 1.0)	36 - 53 (2.7 - 3.8)	88 - 128 (7 - 9)	174 - 255 (13 - 18)	304 - 445 (22 - 32)	486 - 712 (36 - 51)	758 - 1,110 (55 - 80)	1,040 - 1,530 (76 - 110)	1,480 - 2,170 (108 - 156)	2,030 - 2,980 (147 - 215)	2,560 - 3,750 (186 - 271)
	Cast iron or aluminum tightening surface. Washers. Medium conditions.		14 - 20 (1.1 - 1.4)	48 - 71 (3.5 - 5.1)	117 - 172 (9 - 12)	232 - 340 (17 - 24)	405 - 592 (30 - 42)	647 - 950 (47 - 68)	1,010 - 1,480 (74 - 107)	1,390 - 2,040 (101 - 147)	1,970 - 2,900 (143 - 209)	2,700 - 3,970 (196 - 287)	3,410 - 5,000 (247 - 361)
	Tightening area having black coarse surface. Rusty. Naked bolt or lubricant unavailable. Poor tightening conditions.		17 - 25 (1.3 - 1.8)	60 - 88 (4.4 - 6.3)	146 - 214 (11 - 15)	290 - 425 (21 - 30)	506 - 742 (37 - 53)	809 - 1,180 (59 - 85)	1,260 - 1,850 (92 - 133)	1,740 - 2,540 (126 - 183)	2,460 - 3,620 (178 - 261)	3,380 - 4,950 (245 - 358)	4,260 - 6,250 (309 - 452)
	Even tightening area. Bolt nut, coating, naked bolt, lubricant, etc. Optimum conditions.		16 - 24 (1.2 - 1.7)	58 - 83 (4.2 - 6.0)	138 - 201 (10 - 14)	273 - 400 (20 - 28)	477 - 700 (35 - 50)	764 - 1,120 (56 - 81)	1,190 - 1,750 (87 - 126)	1,640 - 2,400 (119 - 173)	2,320 - 3,410 (168 - 246)	3,180 - 4,680 (231 - 338)	4,020 - 5,360 (291 - 387)
	Cast iron or aluminum tightening surface. Washers. Medium conditions.		22 - 32 (1.6 - 2.3)	75 - 110 (5.5 - 7.9)	183 - 270 (14 - 19)	364 - 533 (27 - 38)	636 - 932 (47 - 67)	1,020 - 1,500 (74 - 108)	1,590 - 2,330 (116 - 168)	2,180 - 3,200 (158 - 231)	3,100 - 4,550 (225 - 329)	4,250 - 6,210 (308 - 449)	5,360 - 7,850 (388 - 567)
	Tightening area having black coarse surface. Rusty. Naked bolt or lubricant unavailable. Poor tightening conditions.		27 - 40 (2.0 - 2.8)	94 - 138 (6.8 - 9.9)	229 - 336 (17 - 24)	455 - 667 (33 - 48)	795 - 1,165 (58 - 84)	1,270 - 1,870 (92 - 135)	1,990 - 2,920 (144 - 211)	2,730 - 4,000 (198 - 289)	3,870 - 5,680 (280 - 410)	5,310 - 7,800 (385 - 564)	6,700 - 9,850 (485 - 712)
	Even tightening area. Bolt nut, coating, naked bolt, lubricant, etc. Optimum conditions.		24 - 32 (1.8 - 2.3)	82 - 110 (6.0 - 7.9)	200 - 267 (15 - 19)	397 - 574 (29 - 41)	694 - 925 (51 - 66)	1,010 - 1,480 (74 - 107)	1,730 - 2,310 (126 - 167)	2,380 - 3,170 (173 - 229)	3,380 - 4,510 (244 - 326)	4,630 - 6,170 (335 - 446)	5,850 - 7,790 (424 - 563)
	Cast iron or aluminum tightening surface. Washers. Medium conditions.		32 - 42 (2.4 - 3.0)	110 - 146 (8.0 - 10.5)	267 - 356 (19 - 25)	529 - 706 (39 - 51)	925 - 1,230 (67 - 88)	1,480 - 1,970 (108 - 142)	2,310 - 3,080 (168 - 222)	3,170 - 4,230 (230 - 305)	4,510 - 6,010 (327 - 434)	6,170 - 8,230 (447 - 595)	7,790 - 10,390 (564 - 751)
	Tightening area having black coarse surface. Rusty. Naked bolt or lubricant unavailable. Poor tightening conditions.		40 - 53 (2.9 - 3.8)	137 - 183 (10.0 - 13.2)	334 - 445 (25 - 32)	662 - 882 (48 - 63)	1,160 - 1,540 (84 - 111)	1,850 - 2,470 (134 - 178)	2,890 - 3,950 (210 - 278)	3,970 - 5,290 (288 - 382)	5,640 - 7,510 (408 - 543)	7,720 - 10,290 (559 - 744)	9,740 - 12,990 (705 - 939)

NOTE: The torque values given in this table should be applied where bolt torque is not specified.



RECOMMENDED LUBRICANTS FOR ALL HINO ENGINE

HINO MOTORS, LTD.
OVERSEAS OPERATIONS
SERVICE DIV.
TOKYO, JAPAN

LUBRICANTS	POSITIONS	ATMOSPHERIC TEMP.	S.A.E. NO.	BP	CAITEX	CASTROL	ESSO	GULF	MOBIL	SHELL	TOTAL
ENGINE OIL (A P1, CD) Previous Classification (A P1, DS) (MIL L 2104C) (MIL L 45198B)	Cylinder Block Injection Pump Air Cleaner	Above 212° (162° F)	40	Vanellus C-3 40	RPM DELO 400 Oil SAE 40 or 15W/40 RPM DELO 300 Oil SAE 40	Castrol or Deisel CRX 40 Castrol or Deisel RX Super 40 15W/40	Essulube D-3 40 XD-3 40	Gulf Super Duty Motor Oil 40 15W 40	Mobil Delvac 1340 Mobil Delvac Super 15W 40	Myrina Oil 40 20W 40 15W 40 Rimula X Oil 40 Rimula C1 40	TOTAL Rimula S 40 Rimula TM 15W40
		32° - 0°C (90° - 32° F)	30	Vanellus C-3 30	RPM DELO 400 Oil SAE 30 or 15W/40 RPM DELO 300 Oil SAE 30	Castrol or Deisel CRX 30 Castrol or Deisel RX Super 30 15W/40	Essulube D-3 30 XD-3 30	Gulf Super Duty Motor Oil 30 15W 40	Mobil Delvac 1330 Mobil Delvac Super 15W 40	Myrina Oil 30 20W 40 15W 40 Rimula X Oil 30 Rimula C1 30	TOTAL Rimula S 30 Rimula TM 15W40
		0° - 12°C (32° - 10° F)	20	Vanellus C-3 20W	RPM DELO 400 Oil SAE 20/20W 15W/40 RPM DELO 300 Oil SAE 20/20W	Castrol or Deisel CRX 20W/20 Castrol or Deisel RX Super 20W/20 15W/40	Essulube D-3 20W XD-3 15W 40	Gulf Super Duty Motor Oil 20 15W 40	Mobil Delvac 1310 Mobil Delvac Super 15W 40	Myrina Oil 20 20W 40 15W 40 Rimula X Oil 20 Rimula C1 20	TOTAL Rimula S 20 Rimula TM 15W40
ENGINE OIL (A P1, CC) Previous Classification (A P1, DM) (MIL L 46152) (MIL L 2104B)	Cylinder Block Injection Pump Air Cleaner	Above 32°C (90° F)	40	Vanellus M 40	RPM DELO 200 Oil SAE 40 RPM DELO 100 Oil SAE 40	Castrol or Deisel CRX 40 Castrol or Deisel RX Super 40 15W/40	Essulube HDX 40 HDX Plus 40	Gulibube Motor Oil XHD 40 15W 40	Mobil Delvac 1240 Mobil Delvac 1140	Rotella TX40 20W 30 Rotella SX Oil 40 20W 40	TOTAL Rimula H 40
		32° - 0°C (90° - 32° F)	30	Vanellus M 30	RPM DELO 200 Oil SAE 30 RPM DELO 100 Oil SAE 30	Castrol or Deisel CRX 30 Castrol or Deisel RX Super 30 15W/40	Essulube HDX 30 HDX Plus 30	Gulibube Motor Oil XHD 30 15W 40	Mobil Delvac 1230 Mobil Delvac 1130	Rotella TX30 20W 30 Rotella SX Oil 30 20W 40	TOTAL Rimula H 30
		0° - 12°C (32° - 10° F)	20	Vanellus M 20W	RPM DELO 200 Oil SAE 20/20W RPM DELO 100 Oil SAE 20/20W	Castrol or Deisel CRX 20W/20 Castrol or Deisel RX Super 20W/20 15W 40	Essulube HDX 20 HDX Plus 20W 20	Gulibube Motor Oil XHD 20 15W 40	Mobil Delvac 1220 Mobil Delvac 1120	Rotella TX20 20W 50 Rotella SX Oil 20/20W 20W 40	TOTAL Rimula H 20
COOLANT PUMP BEARING GREASE (MIL-G 10924B)	Coolant Pump Bearing			Energrease L-2	Mariak Multipurpose 2 All Purpose 2	Castrol LM Grease	Esso Multipurpose Grease	Gulifex Poly	Mobilgrease MP 77 MS	Relimax A Alvina Grease R2	TOTAL MULTIS 2
STARTER GREASE	Bushing, Clutch, Pinion Shaft, Pinion & Reduction Gear				Malyrex Grease EP2				Mobilgrease 29	Aero Shell Grease 17	
GENERATOR & STARTER BEARING GREASE	Generator Bearing Starter Bearing			Energrease LT 2	RPM Grease SRI 2				Mobilgrease 28	Aero Shell Grease 7	
INJECTION PUMP TIMER GREASE (MIL-G 10924B)	Injection Pump Timer			Energrease L-2	Mariak Multipurpose 2 or Mariak All Purpose 2	Castrol LM Grease	Esso Multipurpose Grease	Gulifex Poly	Mobilgrease MP 77 MS	Relimax A Alvina Grease R2	TOTAL MULTIS EP 1
ANTI-FREEZE (MIL H-5559A)	Engine, Radiator			Anti Frost	AF Engine Coolant	Castrol Anti-Freeze Castrol Long Life Coolant	Esso Anti-Freeze Coolant	Cruise Master Antifreeze And Summer Coolant	Mobil Permatone	Shellomul S A 1 Glycol (European Countries) Shellomul S A 1 Antifreeze P281 Coolant	TOTAL ANTIGEL

Note: Lubricants were amended according to new classification by A.P.I. (American Petroleum Institute)

82-12-200 (T S OHS)

(K.P.)

CHAPTER EN

ENGINE

Models W04D, W04C-T and W04C-TI

DATA AND SPECIFICATIONS	EN-DS7A - 1
TROUBLESHOOTING	EN-TS1C - 1
ENGINE OVERHAUL CRITERIA	EN-OC3C - 1
ENGINE MOVING PARTS	EN-MP7A - 1
CYLINDER HEAD	EN-MP7A - 5
TIMING GEAR, CAMSHAFT AND OIL PAN	EN-MP7A -16
PISTON, CRANKSHAFT, CYLINDER BLOCK AND FLYWHEEL HOUSING	EN-MP7A -23
LIQUID GASKET AND APPLICATION PARTS ...	EN-MP7A -38
LUBRICATING SYSTEM	EN-LS7A - 1
OIL PUMP	EN-LS7A - 3
OIL COOLER AND OIL FILTER	EN-LS7A - 5
FUEL SYSTEM	EN-FS6B - 1
INJECTION NOZZLE	EN-FS6B - 2
FUEL FILTER	EN-FS6B - 4
COOLING SYSTEM	EN-CS7A - 1
COOLANT PUMP	EN-CS7A - 3
HEAT EXCHANGER	EN-CS7A - 6
THERMOSTAT	EN-CS7A - 8
AIR INTAKE AND EXHAUST SYSTEM	EN-IE2A - 1
ENGINE COMPONENT PARTS DISMOUNTING AND MOUNTING	EN-CP5B - 1
FUEL INJECTION PUMP	EN-CP5B - 1
GENERATOR	EN-CP5B - 3
STARTER	EN-CP5B - 4
ENGINE TUNE-UP	EN-TU5A - 1
PROCEDURE FOR INSTALLING AND GASKETS OF ENGINE PARTS	EN-PR1B - 1
MARINE TRANSMISSION MOUNTING AND DISMOUNTING	EN-MT1A - 1




DATA AND SPECIFICATIONS

Model	W04D	W04C-T	W04C-TI
Type	Diesel, 4-cycle, vertical, 4 cylinder, in-line, overhead valve, water- cooled	←	←
Aspiration	Natural aspirate	Turbo charged	Turbocharged and intercooled
Combustion system	Direct injection	←	←
Bore and stroke	104 x 118 mm (4.09 x 4.65 in)	104 x 113 mm (4.09 x 4.45 in)	←
Piston displacement	4.009 liters (244.6 cu.in)	3.839 liters (234.2 cu.in)	←
Compression ratio	17.9	←	16.5
Firing order	1-3-4-2 (A number of a cylinder is to be counted in order from the timing gear side)	←	←
Direction of rotation	Counter-clockwise viewed from flywheel	←	←
Maximum revolution (at full load) .	3,000 rpm	←	←
Idling revolution	775-825 rpm	←	750-800 rpm
Dry weight with marine transmission.	Approx. 430 kg (948 lb)	Approx. 465 kg (1,025 lb)	Approx. 520 kg (1,146 lb)
Valve timing (flywheel travel),			
Intake opens	16° before T.D.C.	←	←
Intake closes	40° after B.D.C.	←	←
Exhaust opens	55° before B.D.C.	←	←
Exhaust closed	13° after T.D.C.	←	←
Valve clearance (when cold),			
Intake	0.30 mm (0.0118 in)	←	0.35 mm (0.0138 in)
Exhaust	0.40 mm (0.0157 in)	0.45 mm (0.0177 in)	0.50 mm (0.0197 in)
Injection nozzle opening pressure .	220 kg/cm ² (3,129 lb/sq.in)	←	←
Injection timing	14° before T.D.C. for No.1 cylinder on compression stroke	17° before T.D.C. for No.1 cylinder on compression stroke	←


Model W04D

PERFORMANCE CURVE

PLEASURE CRAFT RATING

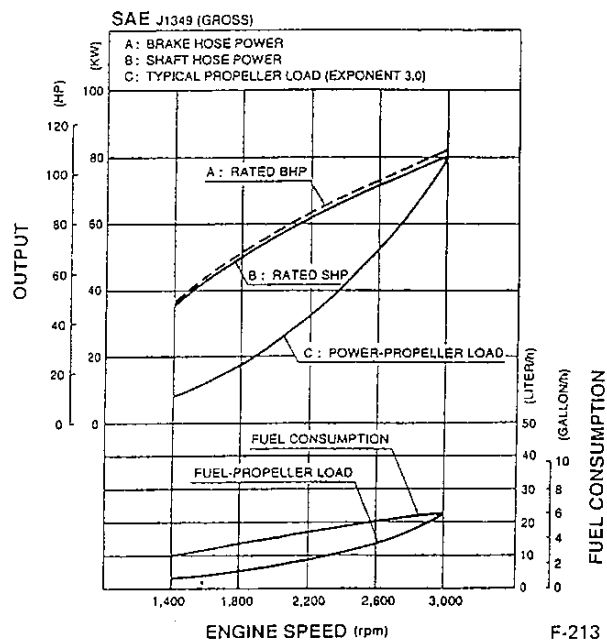

LIGHT DUTY RATING

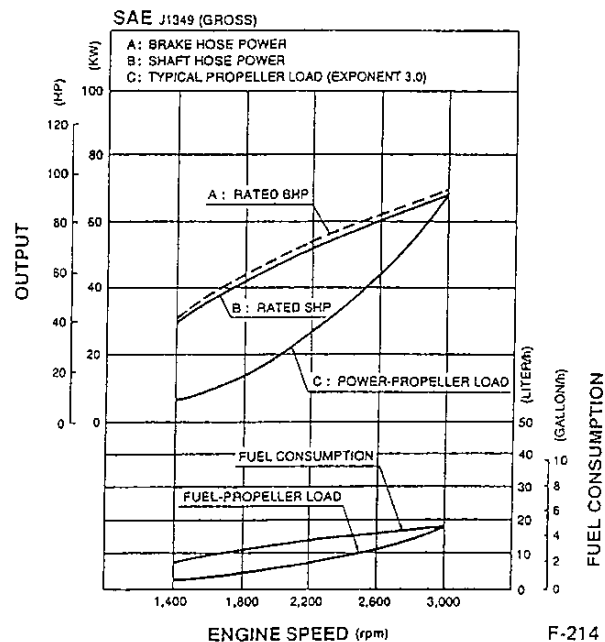


NOTE:

Engine performance at SAE standard J1349 conditions of 90m (300ft) altitude (100 kPa [29.61 in.Hg] barometric pressure), 25°C (77°F) air intake temperature, and 1 kPa (0.30 in.Hg) water vapor pressure with No.2 diesel fuel will be within 5% of that shown at the time of engine shipment. Actual performance may vary with different ambient conditions.


Model W04C-T

PERFORMANCE CURVE

PLEASURE CRAFT RATING

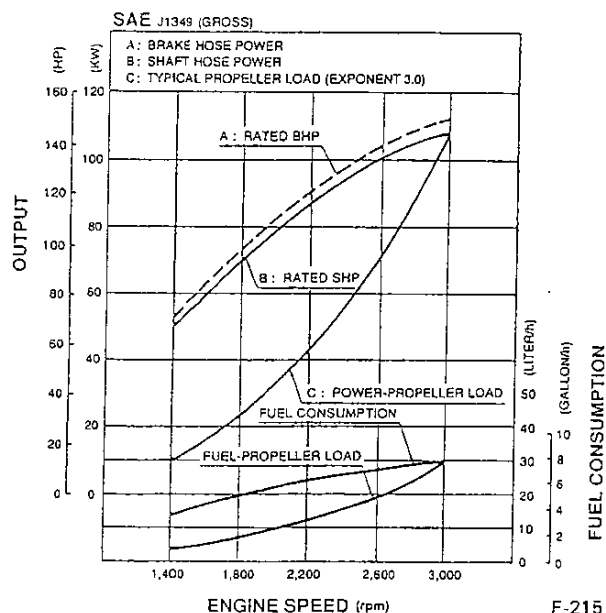


LIGHT DUTY RATING

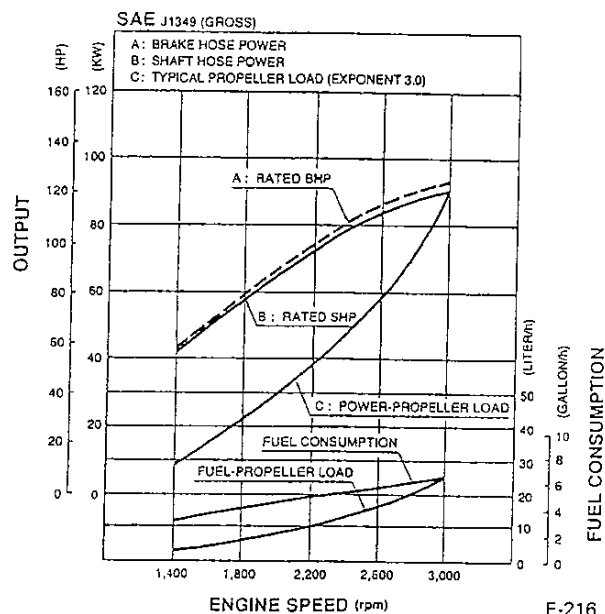


NOTE:

Engine performance at SAE standard J1349 conditions of 90m (300ft) altitude (100 kPa [29.61 in.Hg] barometric pressure), 25°C (77°F) air intake temperature, and 1 kPa (0.30 in.Hg) water vapor pressure with No.2 diesel fuel will be within 5% of that shown at the time of engine shipment. Actual performance may vary with different ambient conditions.

DESCRIPTION

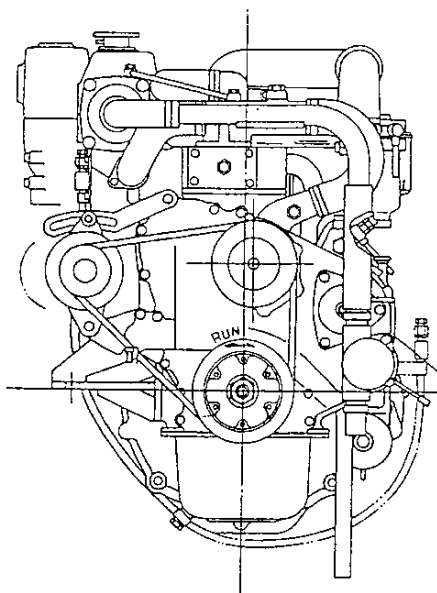

DHF-226

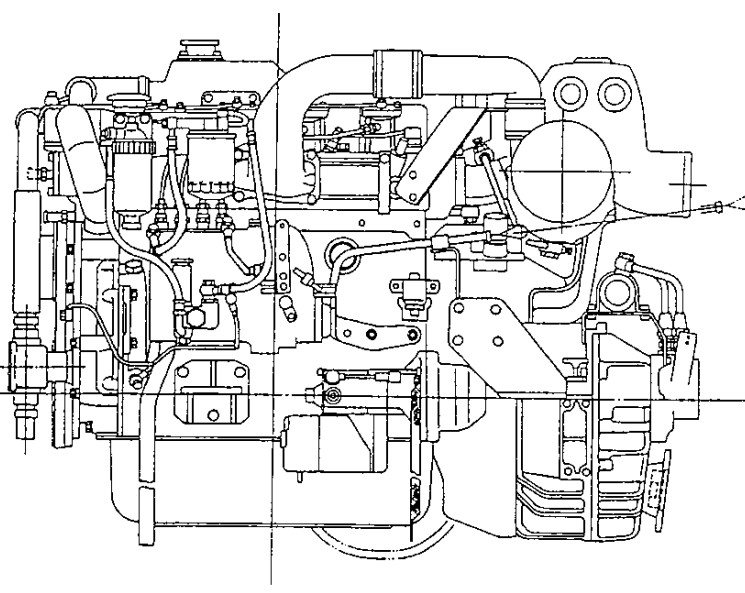


DHF-227


Model W04C-T1

PERFORMANCE CURVE

PLEASURE CRAFT RATING

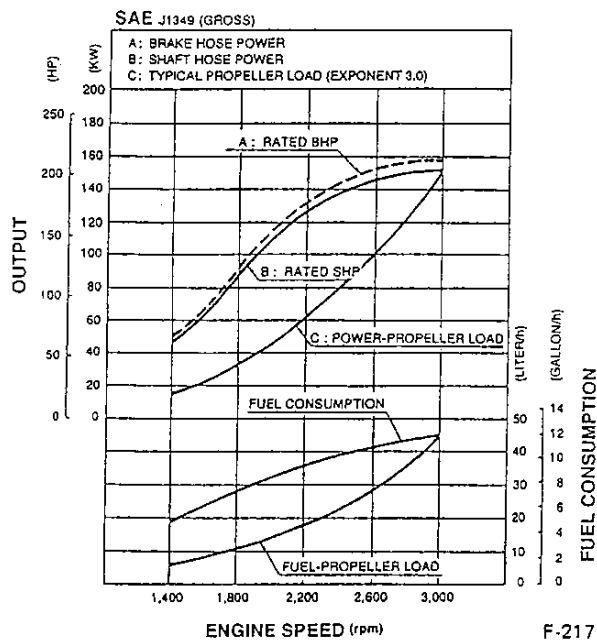


LIGHT DUTY RATING

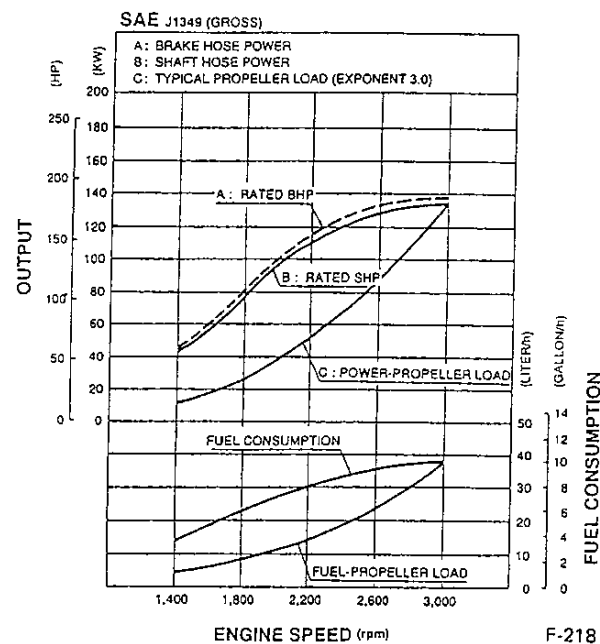


NOTE:

Engine performance at SAE standard J1349 conditions of 90m (300ft) altitude (100 kPa [29.61 in.Hg] barometric pressure), 25°C (77°F) air intake temperature, and 1 kPa (0.30 in.Hg) water vapor pressure with No.2 diesel fuel will be within 5% of that shown at the time of engine shipment. Actual performance may vary with different ambient conditions.

DESCRIPTION

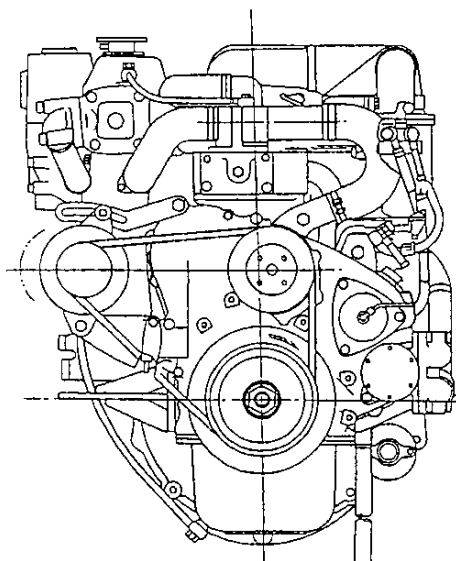

DHF-228

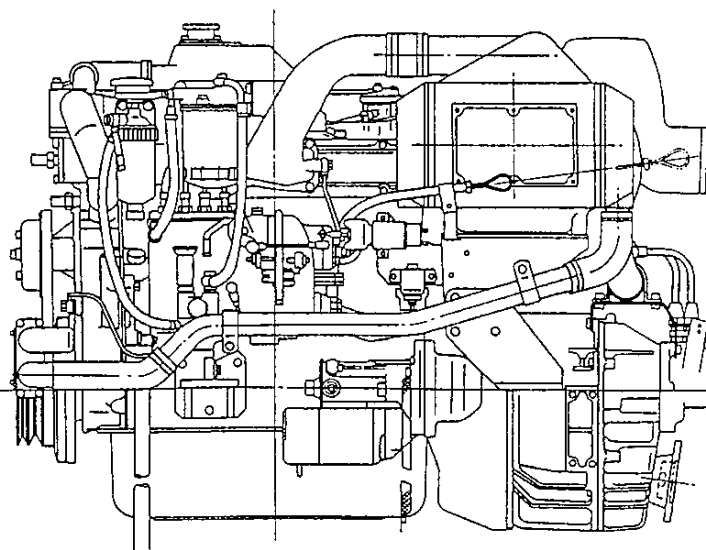

DHF-229

TROUBLESHOOTING

Symptom	Possible cause	Remedy/Prevention
Engine overheating	Coolant	
	• Insufficient coolant	Add coolant.
	• Defective thermostat	Replace the thermostat.
	• Overflow of coolant due to leakage of exhaust into cooling system	Repair.
	• Coolant leakage from cylinder head gasket	Replace gasket.
	• Defective coolant pump	Repair or replace.
	Heat Exchanger	
	• Clogged with rust and scale	Clean heat exchanger.
	• Clogged with iron oxide due to leakage of exhaust into cooling system	Clean coolant passage and correct exhaust leakage.
	• Clogged or corroded heat exchanger due to mud or other debris	Clean or replace heat exchanger.
	• Defective heat exchanger cap pressure valve	Replace heat exchanger cap.
	Abnormal combustion	
	• Incorrect injection timing	Adjust injection timing.
	• Reduced injection pressure	Adjust injection pressure.
	• Poor fuel	Use good quality fuel.
	• Poor nozzle spray	Adjust or replace nozzle.
	• Unsatisfactory automatic timer advance angle	Repair or replace timer.
	Other problems	
	• Defective or deteriorated engine oil	Change engine oil.
	• Unsatisfactory operation of oil pump	Replace or repair.
	• Insufficient oil	Add oil.
	• Brake drag	Repair or adjust.
	Cooling system	
	• Defective sea water pump	Repair or replace.
	• Loose or slipping V-belt	Adjust V-belt tension or replace.
	• Closed sea water intake valve (Seacock)	Open intake valve.
	• Clogged sea water strainer	Clean strainer.

Symptom	Possible cause	Remedy/Prevention
Excessive oil consumption	Pistons, cylinder liners, and piston rings	
	• Wear of piston ring and cylinder liner	Replace piston rings and cylinder liner.
	• Worn, sticking or broken piston rings	Replace piston rings and cylinder liner.
	• Insufficient tension on piston rings	Replace piston rings and cylinder liner.
	• Unsatisfactory break-in of piston rings	Replace piston rings and cylinder liner.
	• Unsuitable oil (viscosity too low)	Change oil as required and replace piston rings and cylinder liners.
	• Incorrectly fitted piston rings (upside down)	Replace piston rings.
	• Gaps of piston rings in line with each other	Reassemble piston rings.
	Valve and valve guides	
	• Worn valve stem	Replace valve and valve guide.
	• Worn valve guide	Replace valve guide.
	• Incorrectly fitted valve stem seal	Replace the stem seal.
	• Excessive lubricant on rocker arm	Check clearance of rocker arm and shaft.
	Excess oil feed	
	• Defective oil level gauge	Replace oil level gauge.
	• Oil level too high	Drain excess oil.
	Cooling system	
	• Overcooled engine (low temperature wear)	Warm up engine before moving boat. Check cooling system.
	Other problems	
	• Oil leakage from miscellaneous parts	Repair.
Piston seizure	Operation	
	• Abrupt stoppage of engine after running at highspeed	Operate engine properly.

Symptom	Possible cause	Remedy/Prevention
Piston seizure	Oil	
	• Insufficient oil	Add oil.
	• Dirty oil	Change oil.
	• Poor quality oil	Replace with proper engine oil.
	• High oil temperature	Repair.
	• Low oil pressure	Repair.
	• Defective oil pump	Repair oil pump.
	• Reduced performance due to worn oil pump	Replace oil pump.
	• Suction strainer sucking air	Add oil and/or repair strainer.
	Abnormal combustion	See Symptom: "Engine over-heating."
	Coolant	See Symptom: "Engine over-heating."
Lack of power	Injection pump	Refer to CHAPTER IP, FUEL INJECTION PUMP.
	Intake	
	• Clogged air cleaner	Clean element or replace element.
	Overheating	See Symptom: "Engine overheating."
	Fuel and nozzle	
	• Poor nozzle spray	Adjust or replace injection nozzle.
	• Clogged nozzle with carbon	Clean nozzle.
	• Wear or seizure of nozzle	Replace nozzle.
	• Air in fuel system	Repair and bleed air from fuel system.
	• Clogged fuel filter	Replace element.
	• Use of poor fuel	Use good quality fuel.
	Abnormal combustion	See Symptom: "Engine overheating."
	Piston, cylinder liners, and piston rings	See Symptom "Engine over-heating."
	Other problems	
	• Breakage of turbine or blower	Replace the turbine or blower or turbocharger.

Symptom	Possible cause	Remedy/Prevention
Difficulty starting engine	Electrical system	
	• Discharged battery	Charge battery.
	• Defective wiring in starter circuit	Repair wiring of starter.
	• Loose or open-circuit battery cable	Tighten battery terminal connections or replace battery cable.
	• Breakdown of starter	Replace starter.
	• Break of glow plug or intake air heater (if so equipped)	Replace
	Injection pump	Refer to CHAPTER IP, FUEL INJECTION PUMP.
	Air cleaner	
	• Clogged element	Clean the element or replace the element.
	Fuel system	
	• No fuel in tank	Supply fuel and bleed air from fuel system.
	• Clogged fuel line	Clean fuel line.
	• Air sucked into fuel system through fuel line connections	Tighten fuel line connections.
	• Clogged fuel filter	Replace element.
Difficulty starting engine	• Loose connection in high-pressure line	Tighten sleeve nut of high pressure line.
	• Water in fuel	Drain and clean fuel system
	Nozzles	
	• Seized nozzle	Replace nozzle.
	• Broken or fatigued nozzle spring	Replace spring.
	Oil system	
	• Oil viscosity too high	Use proper viscosity oil, or install an oil immersion heater and warm up oil.
	Other problems	
	• Seized piston	Replace piston, piston rings, and liner.
	• Seized bearing	Replace bearing and/or crankshaft.
	• Reduced compression pressure	Overhaul engine.
	• Ring gear damaged or worn	Replace the ring gear and/or starter pinion.
	• Improperly adjusted or broken accelerator cable	Adjust or replace the accelerator cable.

Symptom	Possible cause	Remedy/Prevention
Rough idling	Injection pump	Refer to CHAPTER IP, FUEL INJECTION PUMP.
	Nozzles	
	• Uneven injection pressure	Adjust.
	• Poor nozzle spray	Adjust or replace nozzle.
	• Carbon deposit on nozzle tip	Remove carbon.
	• Seized needle valve	Replace nozzle.
	Engine proper	
	• Improper valve clearance	Adjust valve clearance.
	• Improper contact of valve seat	Replace or repair valve and valve seat.
	• Idling speed too low	Adjust idling speed.
Leakage of exhaust	• Coolant temperature too low	Warm up engine.
	• Compression pressure of cylinders markedly different from one another	Overhaul engine.
	Cylinder head gasket	
	• Fatigued gasket (aging)	Replace gasket.
	• Damage	Replace gasket.
	• Improper installation	Replace gasket.
	Cylinder head bolts	
	• Loose bolts	Tighten bolt.
	• Elongated bolts	Replace bolt.
	• Improper tightening torque or tightening sequence	Tighten properly.
	Cylinder block	
	• Cracking	Replace cylinder block.
	• Surface distortion	Repair or replace.
	• Fretting of cylinder liner insertion portion (insufficient projection of cylinder liner)	Replace cylinder liner or cylinder block.
	Cylinder head	
	• Cracking	Replace cylinder head.
	• Surface distortion	Repair or replace.


Symptom	Possible cause	Remedy/Prevention
Leakage of exhaust	Cylinder liners	
	• Cracking	Replace cylinder liner.
	• Corrosion	Replace cylinder liner.
	• Insufficient projection of cylinder liner	Replace cylinder liner.
	Other problems	
	• Incorrect injection timing	Adjust injection timing.
Seawater discharge is not sufficient	Seawater pump	
	• Sucking air	Supply seawater and bleed air from cooling system.
	• Damaged impeller	Replace impeller.
	• Clogging of suction pipe and/or seawater strainer	Clean suction pipe and strainer.
Abnormal noise or vibration	Seawater pump	
	• Worn bearing	Replace bearing.
	• Foreign material in the pump	Repair or replace.
	• Incomplete mounting	Mount completely.
Bearing wears frequently	Seawater pump	
	• Too tight V-belt tension	Adjust V-belt tension.
Damage of impeller	Seawater pump	
	• When it has been operated for a long period	Replace impeller.
	• When it has been operated without seawater	Replace impeller.
	• When it has been operated at higher RPM	Replace impeller and operate at normal RPM.
	• Too high or low water temperature	Replace impeller and operate at normal temperature.
	• When it has not been operated for an extended period	Replace impeller.
	• Foreign material in the pump	Repair or replace.

ENGINE OVERHAUL CRITERIA

SPECIAL TOOL


Prior to starting an engine overhaul, it is necessary to have these special tools.

COMPRESSION GAUGE
ADAPTOR (NOZZLE HOLDER)

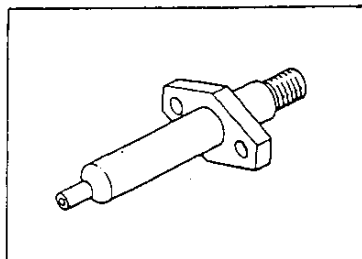


09408-1041

COMPRESSION GAUGE
ADAPTOR (GLOW PLUG)

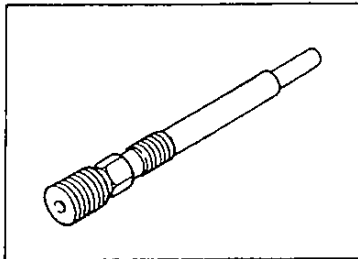


09552-1051

COMPRESSION GAUGE
ADAPTOR

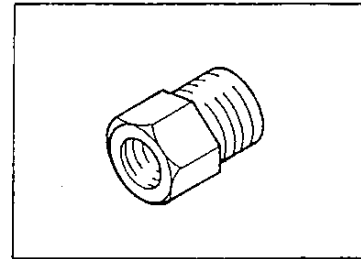

09552-1070

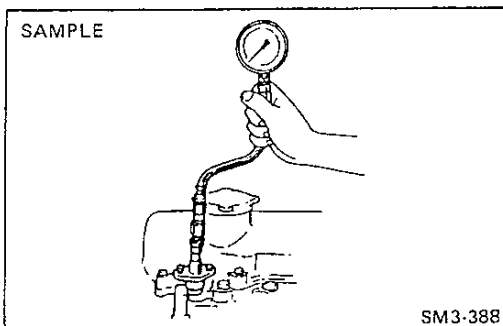

FACTORS WHICH DETERMINE WHEN AN ENGINE OVERHAUL IS NEEDED.

1. Lowered compression pressure
 - a. Before the measurement
 - a) Correct the valve clearance.
 - b) Warm up engine [Bring the coolant temperature to about 80°C (176°F)].
 - c) Charge the battery fully.
 - d) Remove the air cleaner.
 - b. Measurement
 - 1) Measure at nozzle holder hole.
 - a) Remove the nozzle holders.
 - b) Install the gauge adapter in the nozzle holder hole.

Special Tool: Compression Gauge Adapter (09408-1041)
(09552-1070)

- 2) Measure at glow plug hole.
 - a) Remove the glow plug.
 - b) Install the gauge adapter in the glow plug hole.

Special Tool: Compression Gauge Adapter (09552-1051)
(09552-1070)

- c) Connect a compression gauge to the gauge adapter.
- d) Drive the engine with the starter and read the compression pressure.


NOTE: Do not continuously operate the starter for more than 15 seconds at a time.

- e) Measure the compression pressure for each cylinder. If the compression pressure is low, be sure to repeat the measuring.

NOTE: Be sure not to leak through sealing face.

Unit: kg/cm² (lb/sq.in)

Engine model	Compression pressure		Difference between each cylinder	Engine speed (rpm)
	Standard	Limit		
W04D W04C-T	33-36 (469-511)	25 (356)	Less than 3 (43)	350
W04C-TI	30-33 (427-469)	22 (313)		
W06D W06E	33-36 (469-511)	25 (356)		280
W06D-TI	30-33 (427-469)	22 (313)		

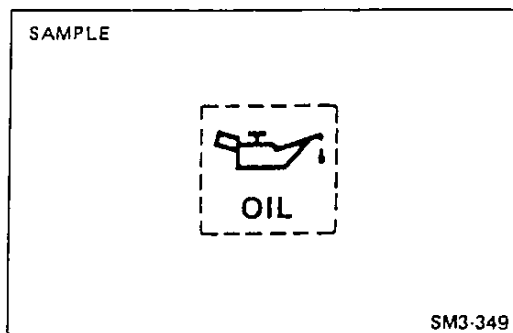

S.A.E. GRADE	ATMOSPHERIC TEMPERATURE								
	-10	0	32	50	70	90	100	° F	
	-23	-18	0	10	21	32	39	° C	
40									
30									
20W/20									
15W/40									

2. Decreased oil pressure
Check the oil pressure warning lamp when the oil and coolant temperature is hot [about 80°C (176°F)].
 - a. If the warning lamp is lighted, check the oil level.
 - b. Check oil deterioration.
If oil quality is poor, replace with a suitable grade oil.
 - c. Remove the oil pressure switch and install the oil pressure gauge.
 - d. Measure the oil pressure at coolant temperature 80°C (176°F) or more.

Standard oil pressure: 0.5–5.0 kg/cm² (7.11–71.10 lb/sq.in)


Service limit: Less than 0.5 kg/cm² (7.11 lb/sq.in)

3. Other factors
 - a. The blow-by gas increases.
 - b. The engine does not start easily.
 - c. Engine output decreases.
 - d. Fuel consumption increases.
 - e. Engine makes greater noise.
 - f. Excessive oil consumption.


ENGINE MOVING PARTS

DESCRIPTION

Representative engine model W04C-T1

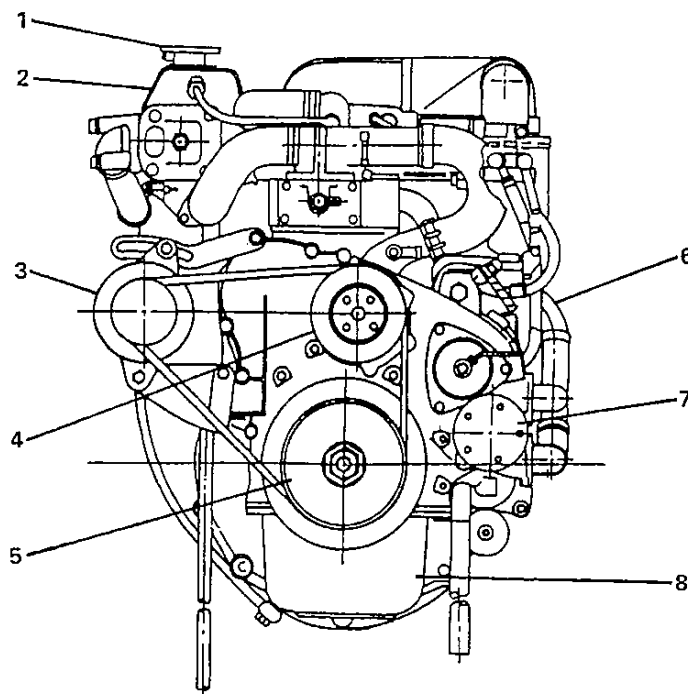


1. Heat exchanger cap
2. Heat exchanger
3. Generator
4. Engine coolant pump
5. Crankshaft pulley
6. Seawater pipe
7. Seawater pump
8. Oil pan
9. Water separator
10. Fuel filter
11. Engine stop solenoid
12. Oil level gauge
13. Intercooler
14. Fuel feed pump
15. Fuel injection pump
16. Starter

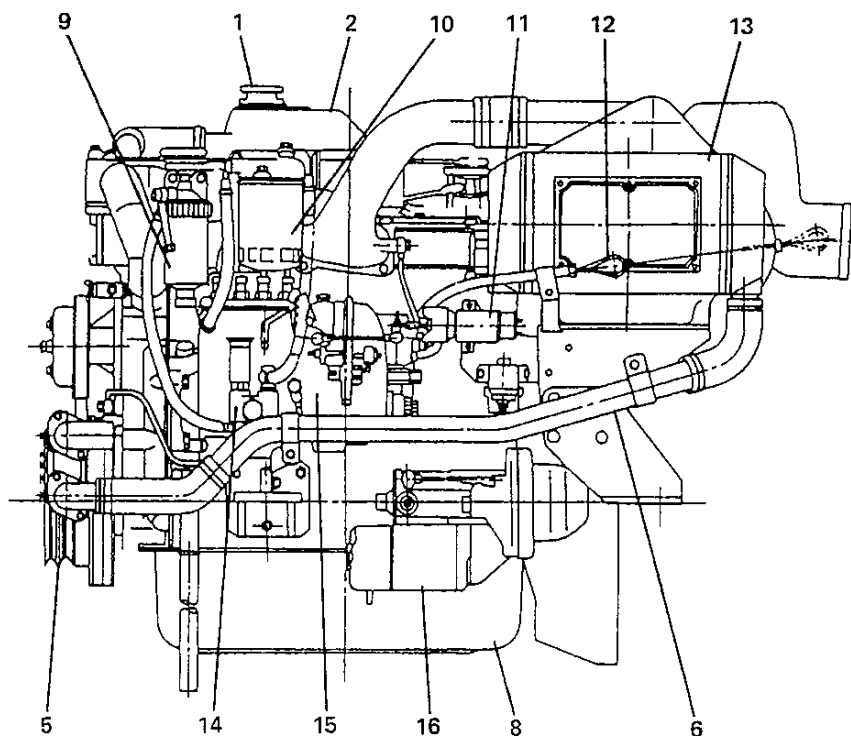


SPECIAL TOOL



Prior to starting an engine overhaul, it is necessary to have the following.

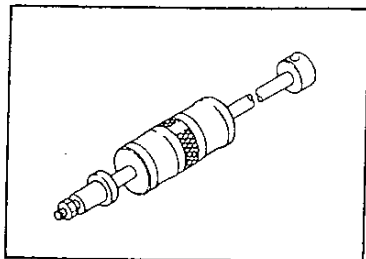SLIDING HAMMER


09420-1442

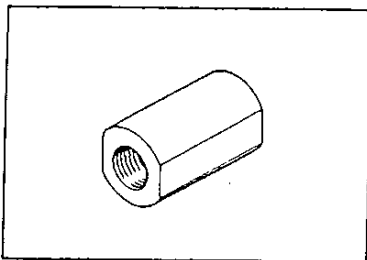**ADAPTOR
(USED WITH 09420-1442)**


09462-1370 for model W04D

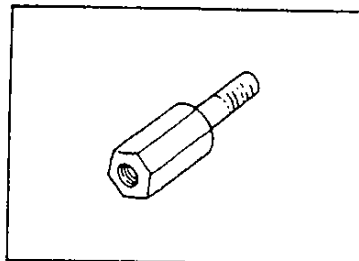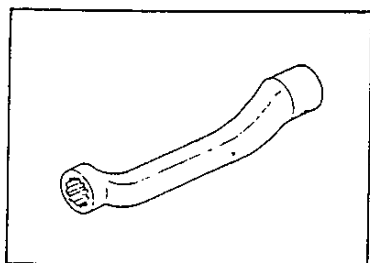**ADAPTOR
(USED WITH 09420-1442)**09462-1130 for models W04C-T
and W04C-TI**CYLINDER HEAD BOLT WRENCH**


09411-1260

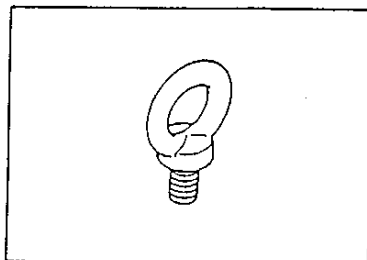**EYE BOLT
(USED WITH 09470-1022)**


09433-1070

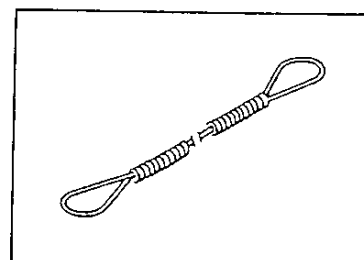WIRE


09491-1010

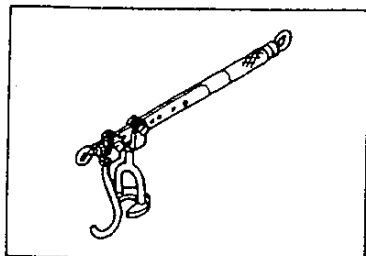VALVE SPRING PRESS


09470-1022

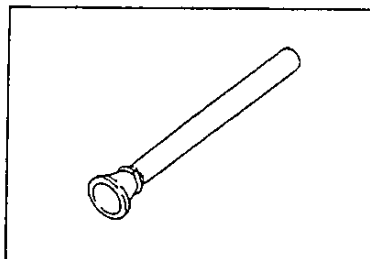VALVE LAPPING TOOL



09431-1010

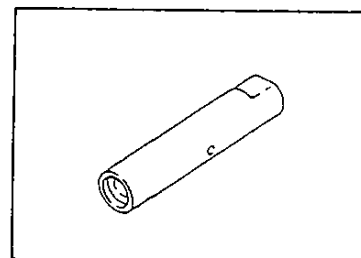VALVE STEM SEAL PRESS


09472-1650

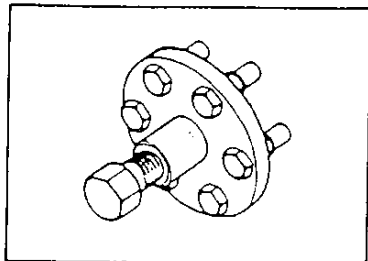**CRANKSHAFT PULLEY
PULLER**


09420-1500

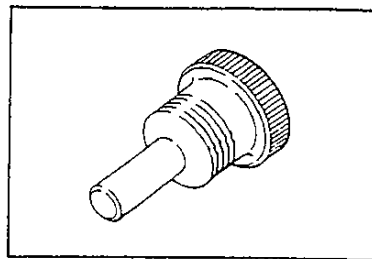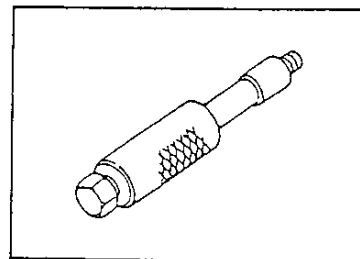TIMER SETTING TOOL09512-2090 for model W04D
09512-2100 for models W04C-T
and W04C-TI**IDLER GEAR SHAFT PULLER**


09420-1100

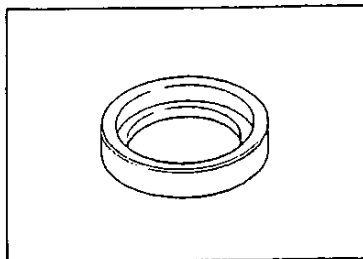**TIMING GEAR COVER OIL
SEAL PRESS**


09482-1530

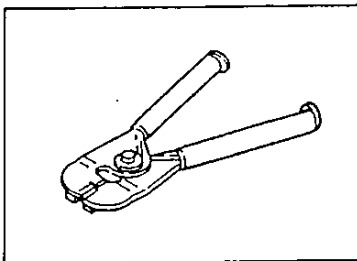PISTON RING EXPANDER


09442-1180

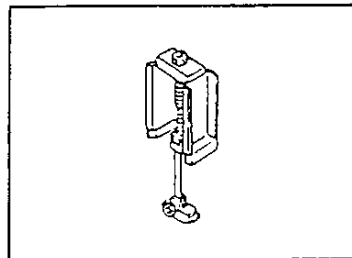CYLINDER LINER PULLER


09420-1460

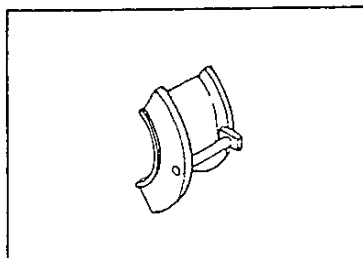CYLINDER LINER GUIDE


09480-1120

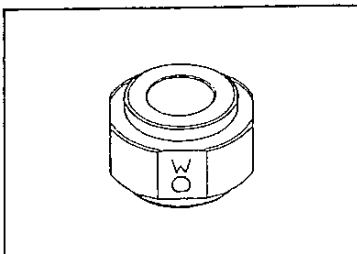GUIDE



09481-1130

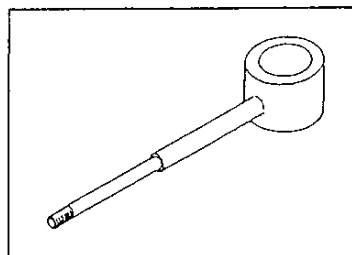PRESS SUB ASSEMBLY



09402-1450

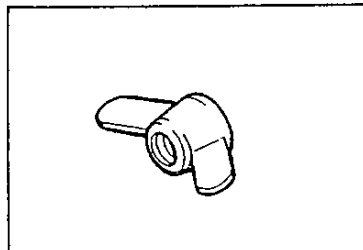WING NUT


9233-10360

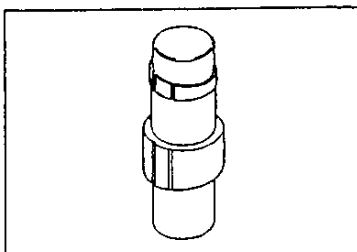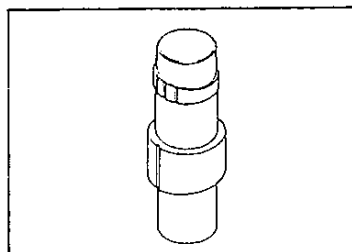SPINDLE09402-1470 for models W04C-T
and W04C-T1**SPINDLE**



09402-1460 for model W04D

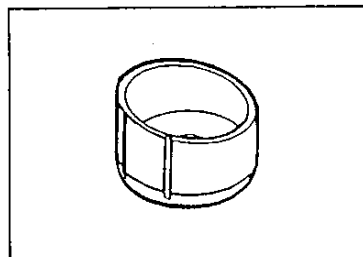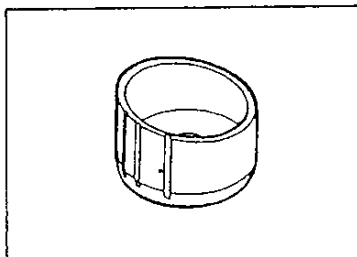GUIDE09481-1140 for models W04C-T
and W04C-T1**GUIDE**

09481-1120 for model W04D

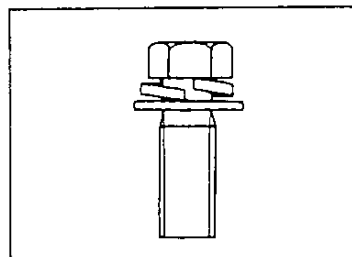BOLT


9191-08252

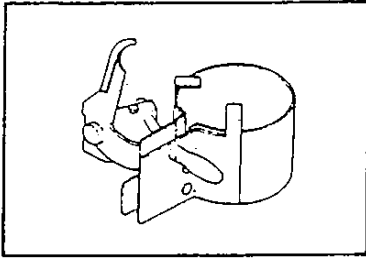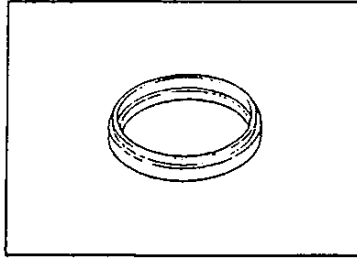PISTON RING HOLDER**09441-1260****FLY WHEEL HOUSING OIL SEAL
PRESS****09482-1540**

CYLINDER HEAD

OVERHAUL

ME11-040-00X02 (1310)

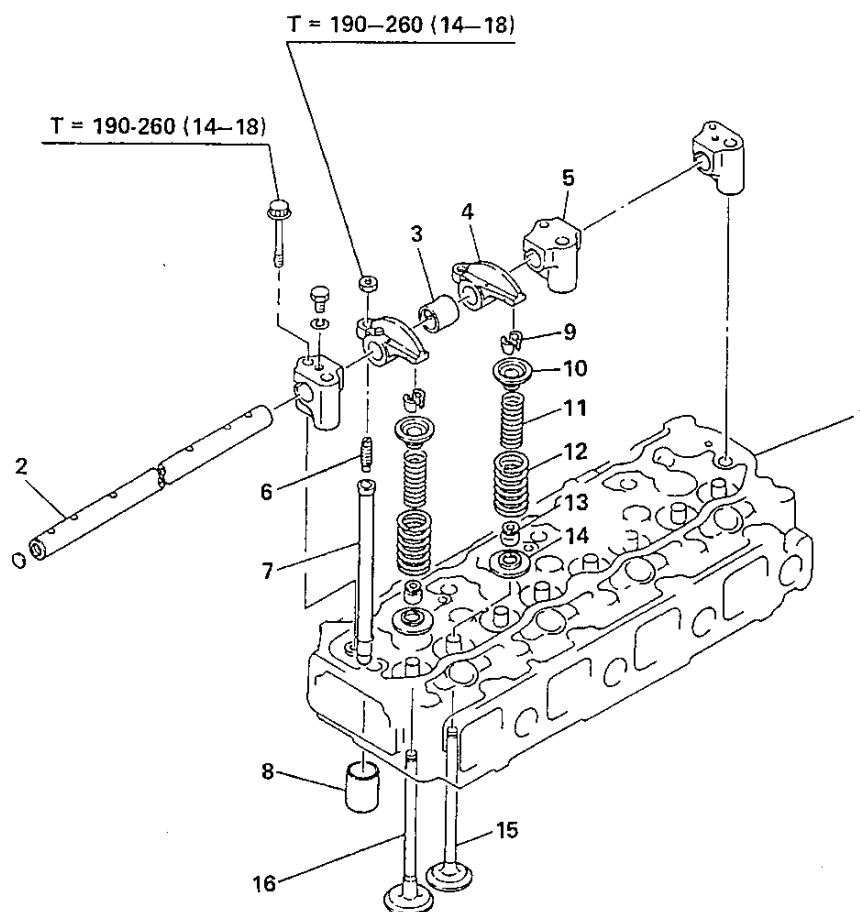

T = Tightening torque kg-cm (lb.ft)

- | | | |
|------------------------------------|-----------------------------------|-----------------------------|
| 1. Cylinder head | 7. Push rod | 13. Valve stem oil seal |
| 2. Rocker arm shaft | 8. Tappet | 14. Valve spring lower seat |
| 3. Bushing | 9. Cotter key | 15. Exhaust valve |
| 4. Rocker arm | 10. Valve spring upper seat | 16. Intake valve |
| 5. Rocker arm support | 11. Inner valve spring (For W04D) | |
| 6. Valve clearance adjusting screw | 12. Outer valve spring | |


OVERHAUL

T = 450–500 (33–36)


T = 130–190 (10–13)

T = 1,300–1,400 (94–101)


T = 130–190 (10–13)

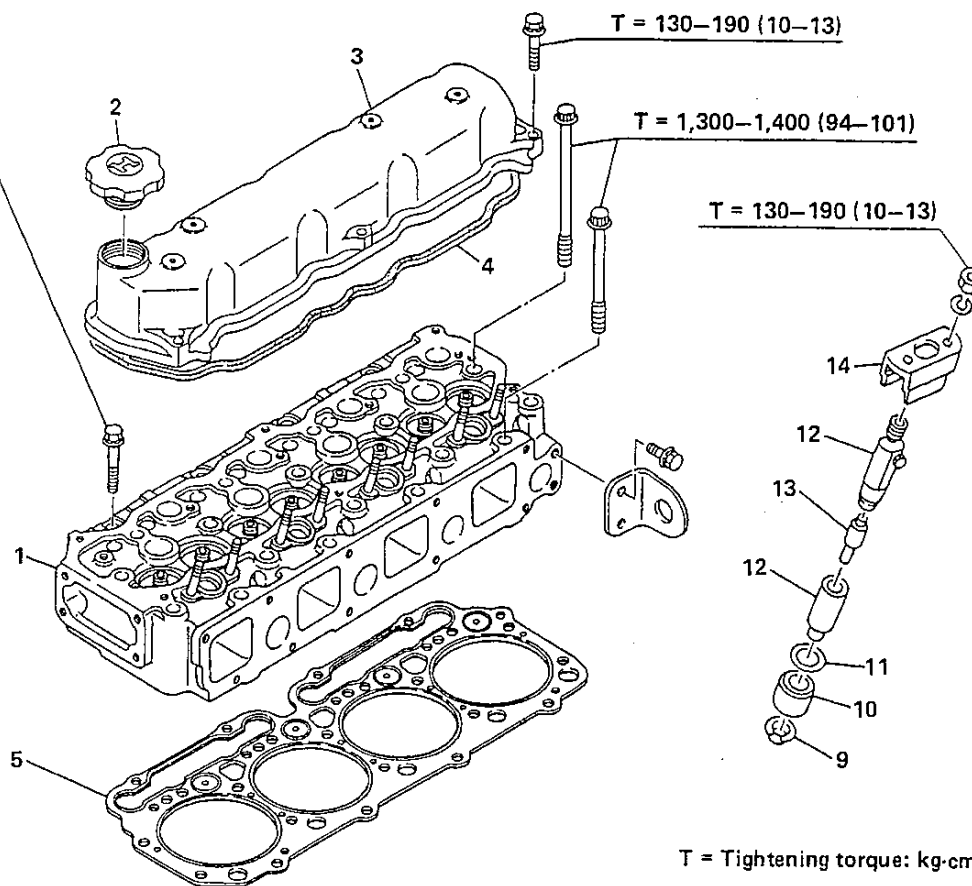

T = Tightening torque: kg-cm (lb.ft)

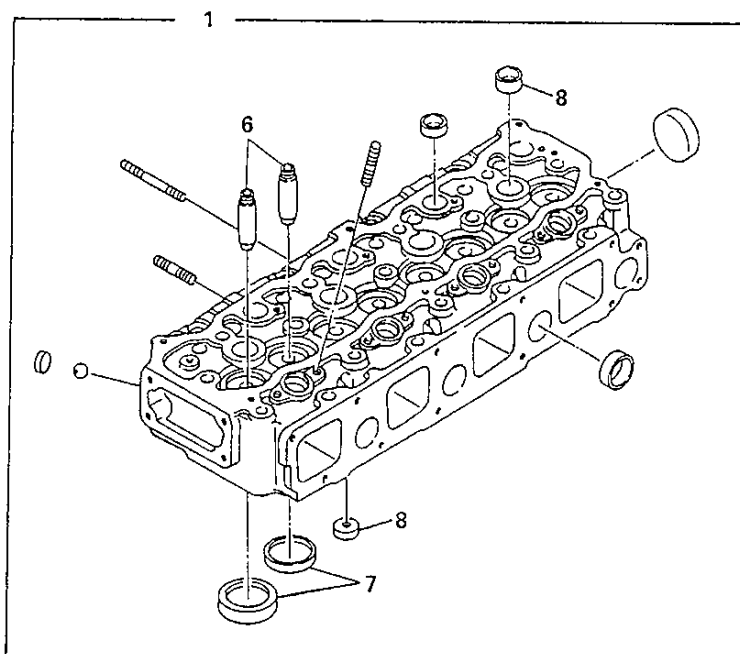


1. Cylinder head
2. Oil filler cap
3. Cylinder head cover
4. Cylinder head cover gasket
5. Cylinder head gasket
6. Valve guide
7. Valve seat
8. Expansion plug
9. Nozzle holder gasket
10. Packing ring
11. Shim
12. Nozzle holder
13. Nozzle
14. Nozzle holder adapter

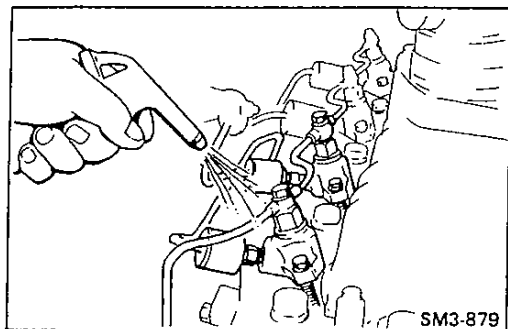
**IMPORTANT POINTS – DISASSEMBLY**

CLEAN OFF SURROUNDING AREA OF THE NOZZLES AND THE FUEL LINE CONNECTORS.

NOTE: If foreign matter is allowed to enter the combustion chamber, engine trouble may result.

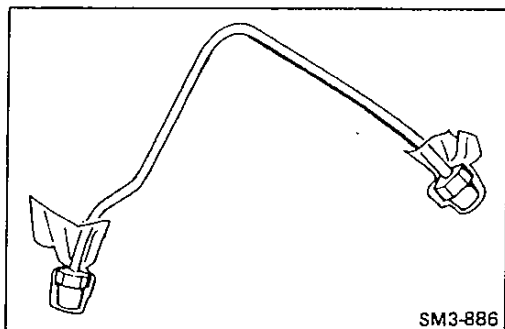**REMOVE THE INJECTION PIPES.**

NOTE: Cover open ends of the pipes to prevent entry of dirt.

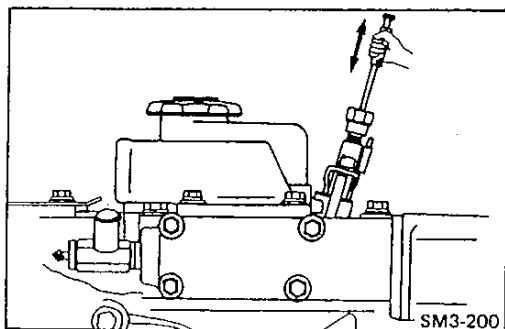**REMOVE THE NOZZLE ASSEMBLY.**


Using a special tool, if the nozzle is difficult to remove by hand.

Special Tool: Sliding Hammer (09420-1442)


Adapter (09462-1370) for W04D

(09462-1130) for W04C-T, W04C-T1

NOTE: ○ After removal of the nozzle holder, cover the nozzle holder with cloth. Also cover the cylinder head with a cloth to prevent dust from getting in.

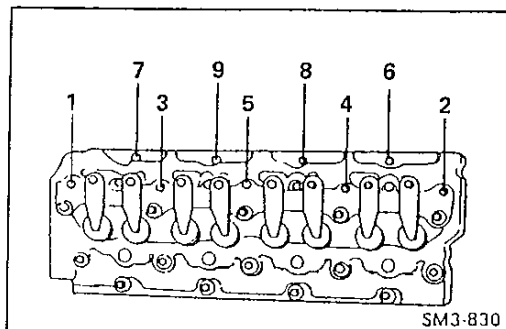**REMOVE THE CYLINDER HEAD ADDITIONAL BOLTS AND ROCKER ARM SUPPORT BOLTS.**


Loosen the cylinder head additional bolts and rocker arm support bolts in the numerical order as shown.

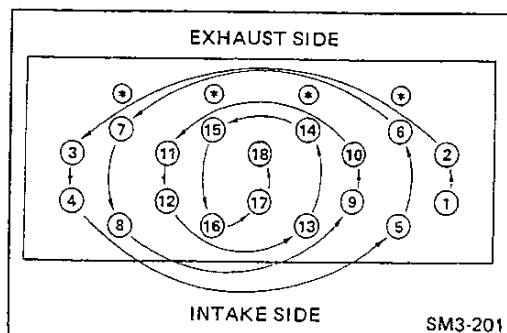**LOOSEN THE CYLINDER HEAD BOLTS AND REMOVE THEM.**

Loosen the cylinder head bolts little by little in three stages and in the numerical order as shown.

Special Tool: Wrench (09411-1260)

* Mark position (Cylinder head additional bolts)

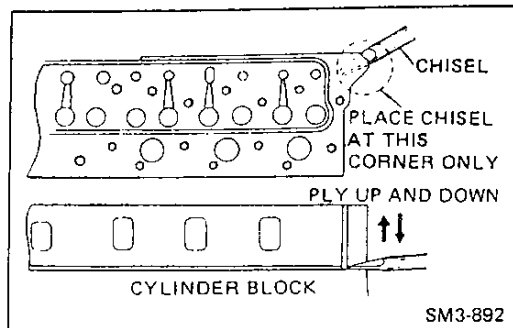


LIFT THE CYLINDER HEAD FROM THE DOWELS ON THE CYLINDER BLOCK AND PLACE IT ON WOODEN BLOCKS

1. If the cylinder head is difficult to lift off, pry with a chisel between the cylinder head and block.

NOTE: Do not damage the machined surface of the head or block when removing the cylinder head.

Special Tool: Eye Bolt (09433-1070)
Wire (09491-1010)

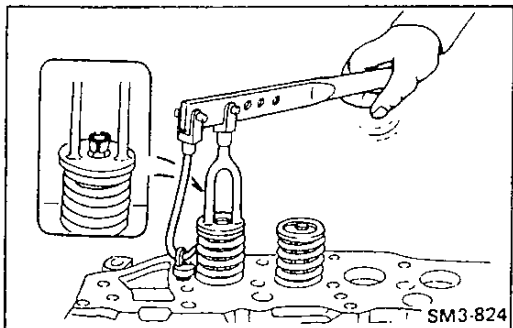


REMOVE THE VALVE SPRINGS.


1. Remove the valve stem cotters, upper valve seats, and inner (for W04D) and outer valve springs from cylinder head.

Special Tool: Valve Spring Press (09470-1022)

2. Remove the intake and exhaust valves.

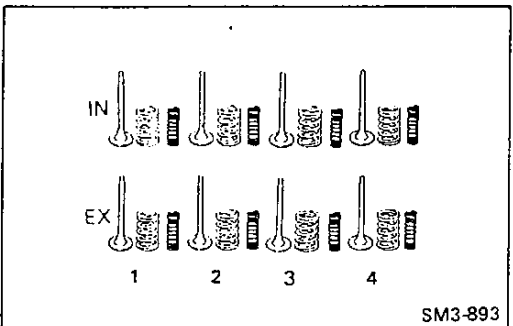

3. Tag valves to identify their cylinder numbers and to eliminate valve lapping.

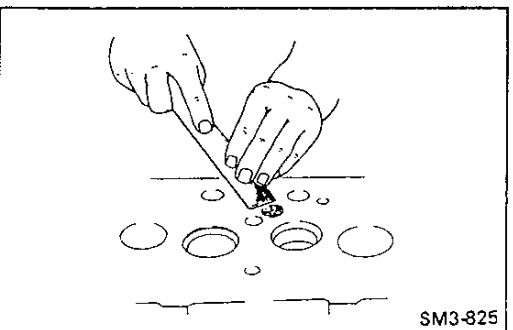

IMPORTANT POINTS – ASSEMBLY


CLEAN THE CYLINDER HEAD THOROUGHLY WITH A SUITABLE SOLVENT.






NOTE: Be careful not to damage the cylinder head surface.

IF NECESSARY, HAND-LAP THE VALVE AND VALVE SEAT.

Lightly apply lapping compound to the valve face. Install the valve with a special tool, tap and rotate the valve against the seat.

Special Tool: Valve Lapping Tool (09431-1010)

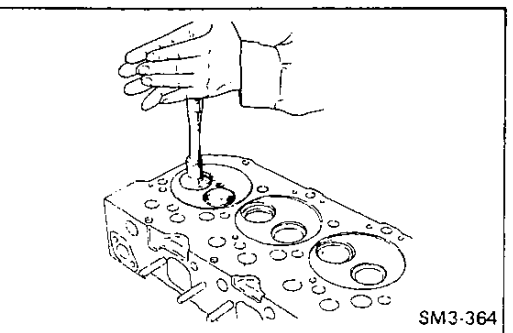

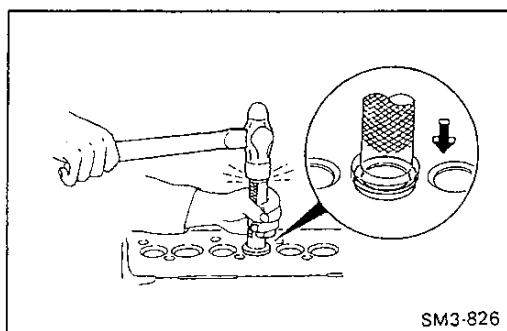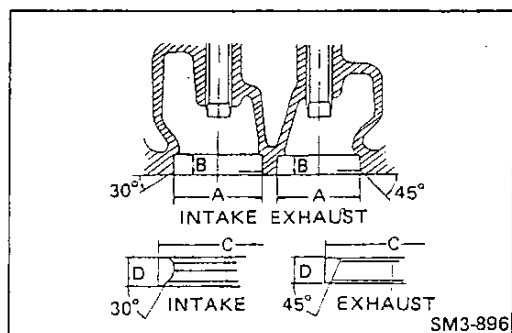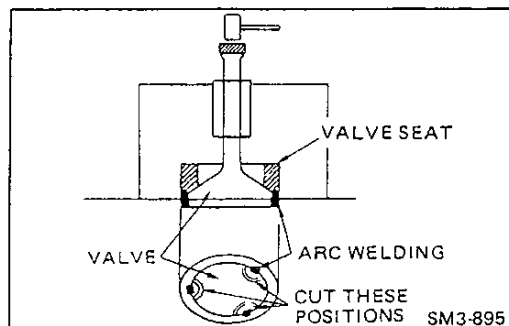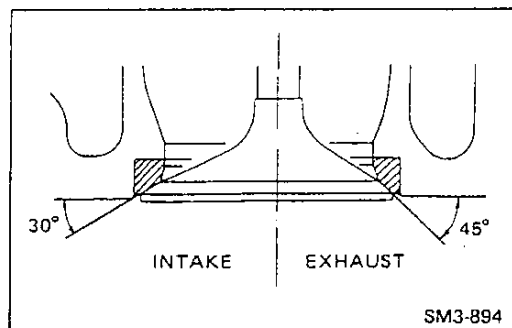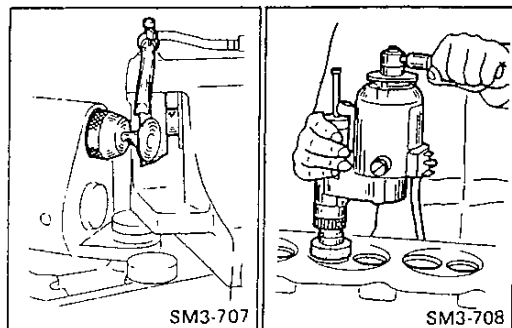**IF NECESSARY, GRIND THE VALVES AND VALVE SEATS.**

- NOTE:**
- Grinding of valves and valve seats should only be performed when hand-lapping does not result in proper seating.
 - After grinding, always recheck the valve sink.

Standard:

- Valve Seat (Intake) : $30^{\circ} - 30^{\circ}30'$
Valve Face (Intake) : $29^{\circ}45' - 30^{\circ}15'$
Valve Seat (Exhaust) : $45^{\circ} - 45^{\circ}30'$
Valve Face (Exhaust) : $44^{\circ}45' - 45^{\circ}15'$

IF NECESSARY, REPLACE THE VALVE SEAT.


1. Cut the circumference of a valve head at three places with a grinder and install it into the seat as shown and weld the valve to the seat. Then drive the valve and the seat out with a hammer and a brass block.

2. Valve seat section machining specifications. Unit: mm (in)

Cylinder head dimension		Intake	Exhaust
		46.500–46.516 (1.8308–1.8313)	41.000–41.016 (1.6142–1.6148)
Valve seat dimension	A	8.8–9.0 (0.3465–0.3543)	7.2–7.4 (0.2835–0.2913)
	B	46.585–46.600 (1.8341–1.8346)	41.130–41.145 (1.6193–1.6198)
Valve seat dimension	C	7.5–7.7 (0.2953–0.3031)	6.0–6.2 (0.2363–0.2440)
	D		


3. Valve seat installation

Heat the cylinder head to $80^{\circ}-100^{\circ}\text{C}$ ($176-212^{\circ}\text{F}$) with hot water. On the other hand, cool the valve seat with dry ice or liquid freon for approx. 30 minutes. Hold the seat with pincers and place it into the heated cylinder head.

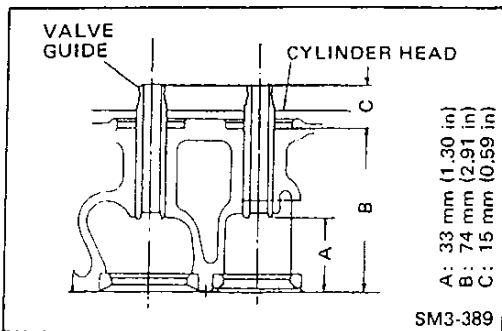**IF NECESSARY, REPLACE THE VALVE GUIDE.**

1. Remove the valve stem seal.
2. Using a brass rod and hammer, drive out the valve guide.
3. Install the valve guide as shown.


NOTE: Apply engine oil lightly to the valve guide outer circumference before installing.

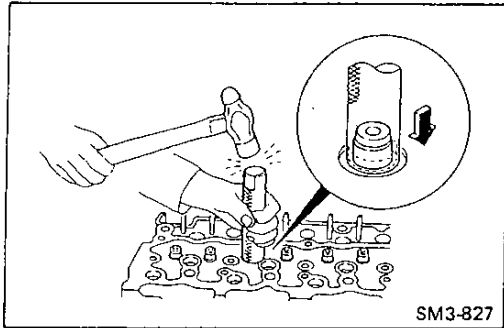**IF NECESSARY, REPLACE THE VALVE STEM SEAL.**


1. Remove the valve stem seal.
2. Install the valve stem seal.

First, install the lower spring seat (for stopper of special tool) and valve. Then apply engine oil to the lip of the stem seal and drive the special tool until it hits the lower spring seat.

Special Tool: Valve Stem Seal Press (09472-1650)

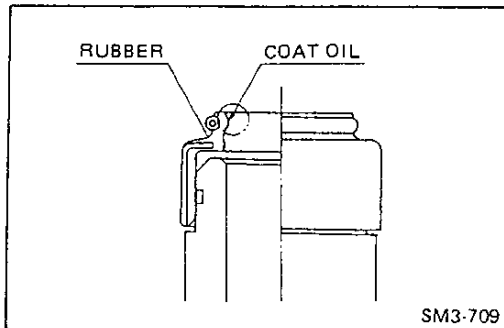

- NOTE:**
- After installing stem seal, make sure that check the rubber position for cracks or any other damage.
 - Do not use the special tool if its tip (surface contacting lower spring seat) is worn or deformed.

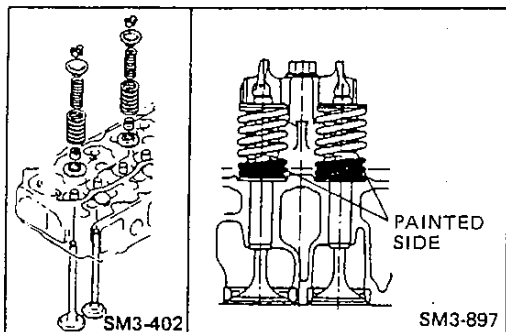
**ASSEMBLE THE CYLINDER HEAD.**


- NOTE:**
- Apply engine oil to contact surfaces of all parts.
 - Make sure that the valves are installed in the correct cylinders.
 - Install the valve springs with their painted side down, since they have variable pitches.

Press upper spring seats and install the valve stem keys securely in the upper spring seats.

Special Tool: Valve Spring Press (09470-1022)

- NOTE:**
- When pressing with the valve spring press, be careful not to damage the stem seals by contacting the upper seats.
 - Drive the valve stem lightly with a hammer to assure proper fit the valve stem key.

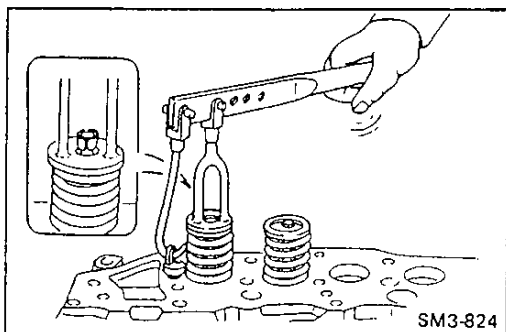

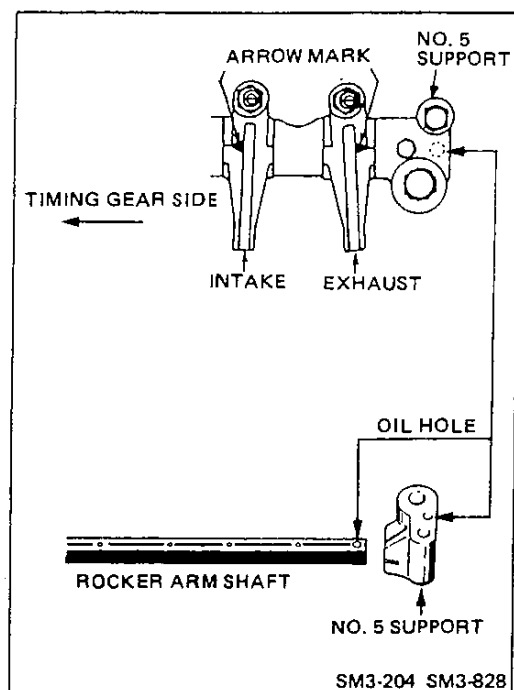
**ASSEMBLE THE ROCKER ARM.**

Lubricate the rocker arm shaft and bushing.

NOTE: Confirm that oil hole of rocker arm assembly No. 5 support aligns with shaft oil hole. Improper installation will result in burning of the entire valve assembly.

INSTALL THE TAPPETS IN THE CYLINDER BLOCK IN CORRECT ORDER.


NOTE: Apply engine oil to the tappet faces and tappet guide when installing them in the cylinder block.

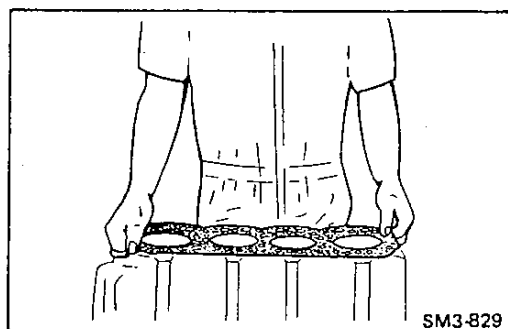**INSTALL THE CYLINDER HEAD AND ROCKER ARM ASSEMBLY.**

1. Install the cylinder head gasket.

NOTE: Always use new cylinder head gasket after cleaning the surfaces of the cylinder head, cylinder block and head gasket free of all dirt, water and grease.


2. Install the cylinder head over the dowels on the cylinder block.

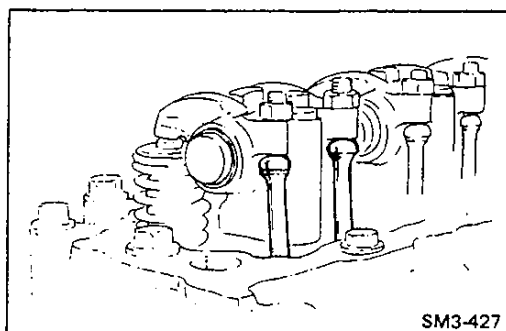

3. Insert the push rods in correct order, after applying engine oil to both ends.

4. Mount the rocker arm assembly on the cylinder head, make sure that the push rods interlock with the adjusting screws.

NOTE: Always loosen the lock nut and raise the adjusting screws fully to the top.

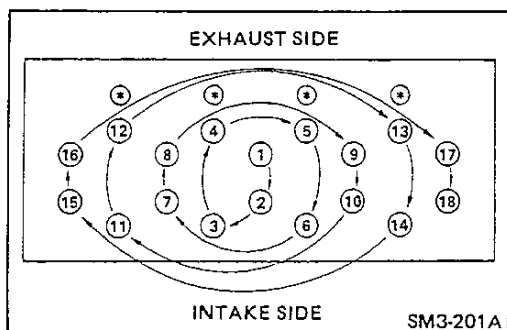


5. Tighten the cylinder head bolts little by little in three stages and in the numerical order as shown.

NOTE: Apply engine oil to the bolt threads and under the bolt head.

* Mark bolts (cylinder head additional bolt): ϕ 10 mm (0.39 in)
No. 1 – No. 18 Bolts (Cylinder head bolt): ϕ 12 mm (0.47 in)

Special Tool: Wrench (09411-1260)

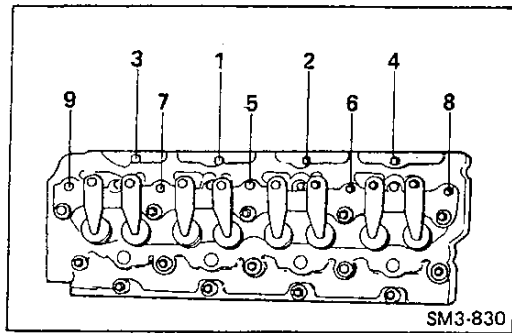








6. Tighten the cylinder head additional bolts and rocker arm support bolts little by little in three stages and in the numerical order as shown.
Tighten the bolts to the specified torque.

7. Retighten the cylinder head bolts.







NOTE: Refer to SECTION ENGINE TUNE-UP.

INSPECTION AND REPAIR




Unit: mm (in)

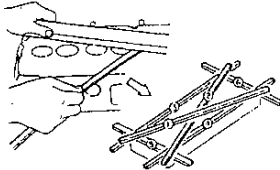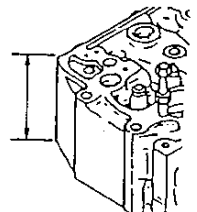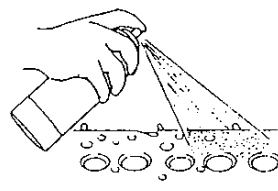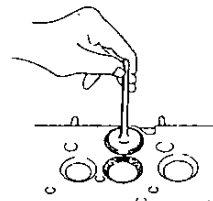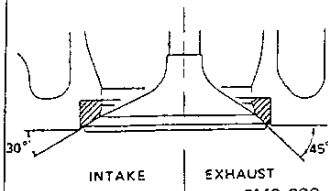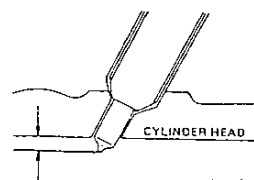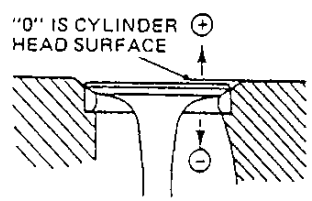Inspection Item		Standard	Limit	Remedy	Inspection Procedure
Cylinder Head Flatness		Less than 0.05 (0.0019)	0.1 (0.0039)	Regrind or replace	 SM3-831
Cylinder Head Height		87.0 (3.425)	86.8 (3.417)	Replace	 SM3-887
Cylinder Head Cracks and Damage * Using a Dye Penetrant		—	—	Replace, if necessary	 SM3-832
Valve Seating Condition * Using Red Lead Marking Compound		There should be good contact around entire circumference of valve head.	—	Hand-lap with lapping compound	 SM3-833
Valve Seat Angle	Intake	30°—30°30'	—	Regrind or replace valve and/or valve seat	 SM3-899
	Exhaust	45°—45°30'			
Valve Angle	Intake	29°45'—30°15'			
	Exhaust	44°45'—45°15'			
Nozzle Protrusion from Cylinder Head Surface		2.75—3.25 (0.1083—0.1279)	—	Replace nozzle gasket	 SM3-391
Intake Valve Sink	W04D	−0.15 — −0.45 (−0.0059 — −0.0177)	−0.55 (−0.0216)	Replace valve and/or valve seat	 SM3-236
	W04C-T W04C-T1	0.05 — 0.35 (0.0019—0.0137)	−0.05 (−0.0019)		
Exhaust Valve Sink		−0.47 — −0.77 (−0.0185 — −0.0303)	−0.87 (−0.0342)		

Unit: mm (in)

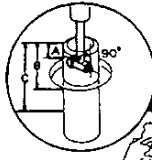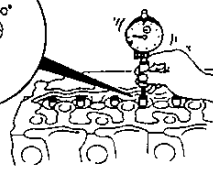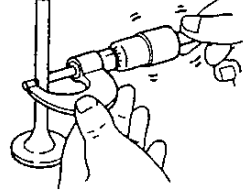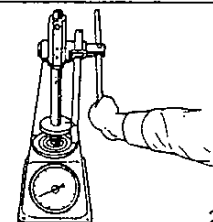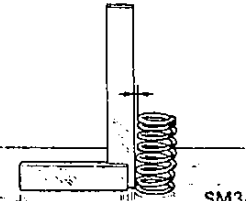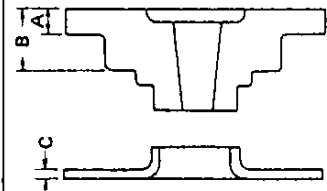
Inspection Item	Standard	Limit	Remedy	Inspection Procedure
Intake Valve Stem Diameter	8.95–8.97 (0.3524–0.3531)	8.90 (0.3903)	Replace valve guide and/or valve	  A: 5 (0.197) B: 25 (0.984) C: 45 (1.771) SM3-834
Exhaust Valve Stem Diameter	8.93–8.95 (0.3516–0.3524)	8.80 (0.3464)		
Intake and Exhaust Valve Guide Diameter	9.000–9.015 (0.3544–0.3549)	A & B: 9.05 (0.3562) C: 9.10 (0.3582)		
Clearance between Valve Stem and Valve Guide (Intake)	0.035–0.068 (0.0004–0.0026)	A & B: 0.10 (0.0040) C: 0.18 (0.0071)		
Clearance between Valve Stem and Valve Guide (Exhaust)	0.050–0.083 (0.0020–0.0032)	A & B: 0.12 (0.0047) C: 0.2 (0.0078)		
Rocker Arm Shaft Diameter	18.97–18.98 (0.7469–0.7472)	18.95 (0.7461)	Replace rocker arm bushing and/or shaft	  SM3-835
Clearance between Rocker Arm Shaft and Rocker Arm Bushing	0.036–0.079 (0.0015–0.0031)	0.1 (0.0039)		
Inner Valve Spring Setting Load (For W04D only)	8.8 kg (19.4 lb) at 43.0 mm (1.69 in)	8.0 kg (17.6 lb)	Replace	 23-024
Outer Valve Spring Setting Load	27.4 kg (54.5 lb) at 45.5 mm (1.79 in)	25.5 kg (56.2 lb)		
Valve Spring Straightness (Inner and Outer)	—	2.0 (0.0787)	Replace	 SM3-303
Valve Spring Seat for Wear	A: 2.5 (0.0984) B: 5.0 (0.1969) C: 1.0 (0.0394)	—	Replace	 SM3-909

Unit: mm (in)

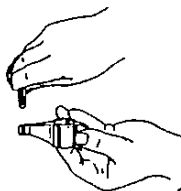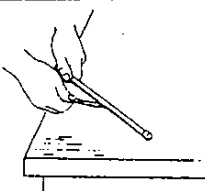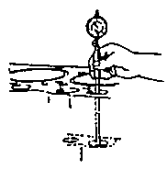Inspection Item	Standard	Limit	Remedy	Inspection Procedure
Valve Stem Tip Surface for Wear	—	—	Resurface or replace	Visual Check  SM3-837
Valve Stem Contact Surface of Rocker Arm for Wear				
Push Rod Bend	—	0.3 (0.0118)	Replace	 SM3-292
Tappet Diameter	26.95–26.97 (1.0611–1.0618)	—	Replace tappet	 SM3-420
Tappet Guide Inside Diameter	27.00–27.02 (1.0630–1.0637)			
Clearance between Tappet and Tappet Guide	0.025–0.071 (0.0010–0.0029)	0.1 (0.0039)		
Tappet for Wear	Should not be worn unevenly.	—	Replace, if necessary	Visual Check

TIMING GEAR, CAMSHAFT AND OIL PAN

OVERHAUL

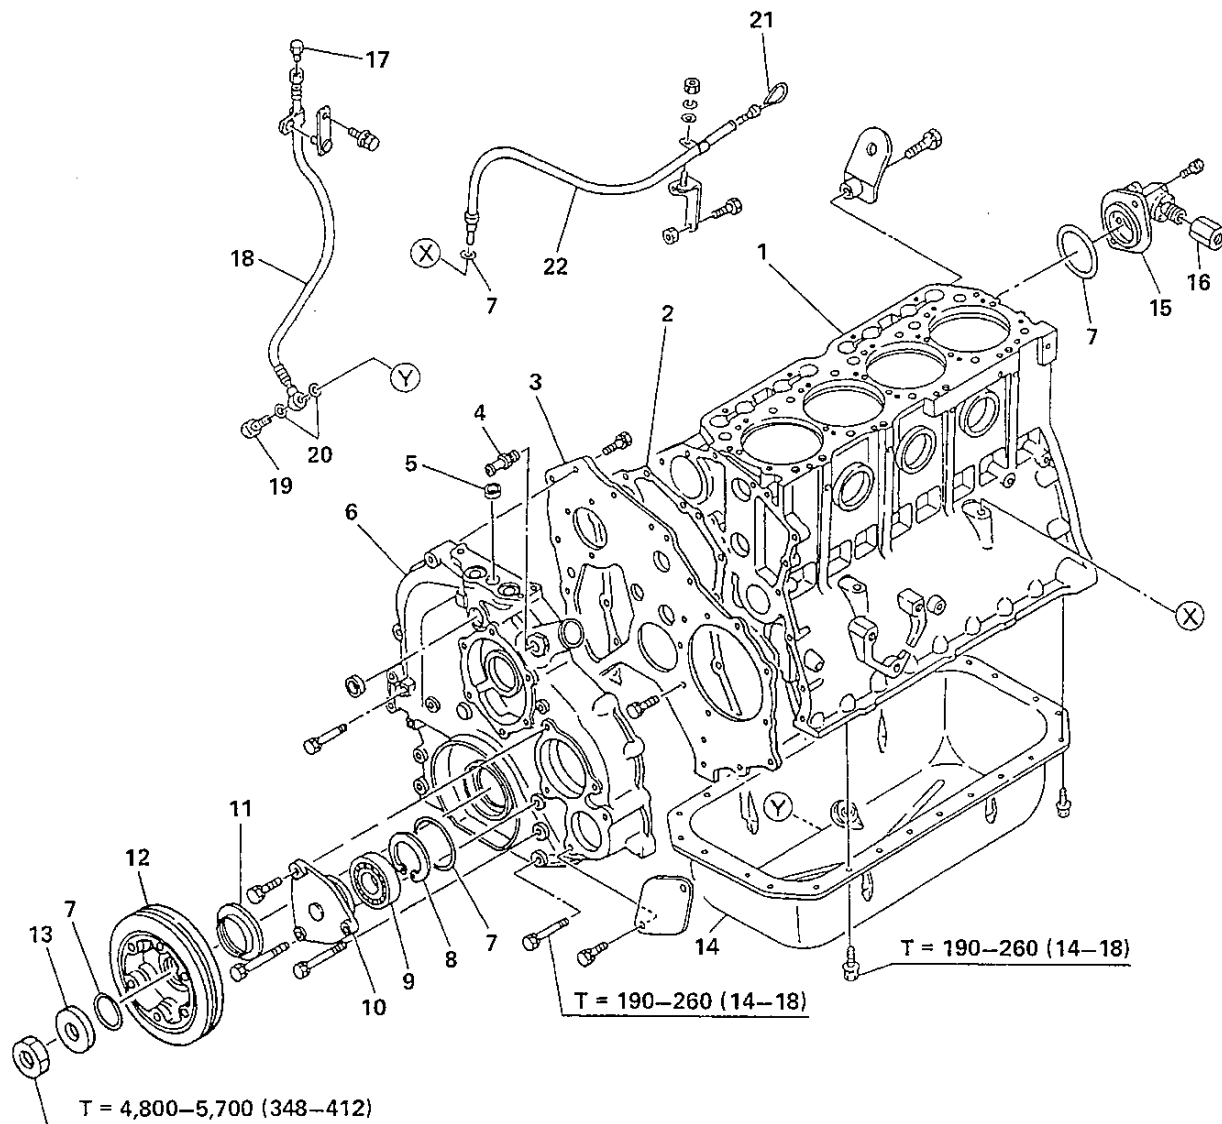


T = Tightening torque: kg.cm (lb.ft)

- | | | |
|----------------------|-------------------------------|---------------------------|
| 1. Cylinder block | 9. Ball bearing | 17. Oil drain plug |
| 2. Gasket | 10. Bearing holder case | 18. Oil drain hose |
| 3. Timing gear plate | 11. Oil seal | 19. Connector bolt |
| 4. Connector | 12. Crankshaft pulley | 20. Soft washer |
| 5. Expansion plug | 13. Plain washer | 21. Oil level gauge |
| 6. Timing gear cover | 14. Oil pan | 22. Oil level gauge guide |
| 7. O-ring | 15. Tachometer drive assembly | |
| 8. Retainer ring | 16. Connector | |

OVERHAUL


T = 1,100–1,300 (80–94)

T = 190–260 (14–18)

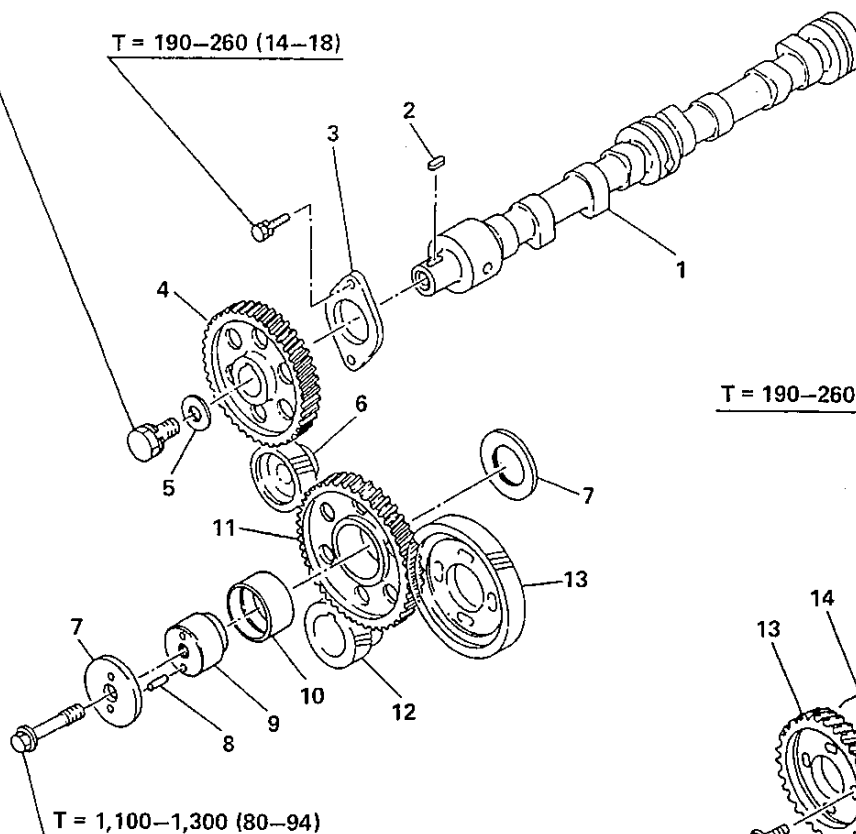

T = 1,100–1,300 (80–94)

T = 190–260 (14–18)

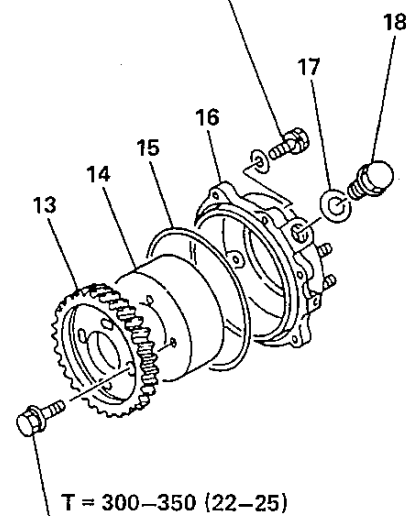


T = 300–350 (22–25)

T = Tightening torque: kg-cm (lb.ft)

1. Camshaft
2. Key
3. Thrust bearing
4. Camshaft gear
5. Thrust washer
6. Oil pump drive gear


7. Idler gear thrust plate
8. Straight pin
9. Idler gear shaft
10. Bearing
11. Idler gear
12. Crankshaft gear

13. Injection pump drive gear
14. Coupling flange
15. O-ring
16. Timer cover
17. Soft washer
18. Plug

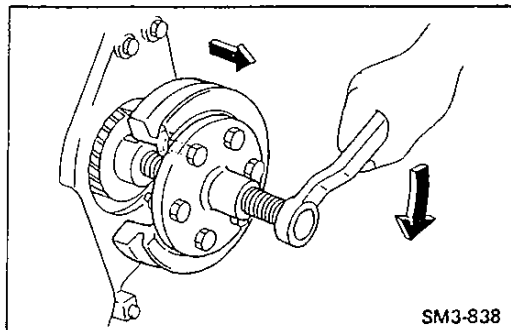
**IMPORTANT POINTS – DISASSEMBLY****REMOVE THE CRANKSHAFT PULLY.**

1. Remove the nut and spacer.
2. Using a special tool, remove the pulley.

Special Tool: Crankshaft pulley Puller (09420-1500)

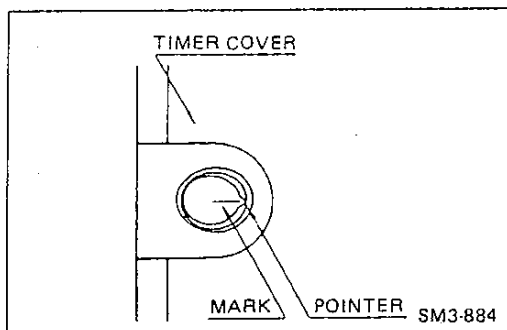**DISMOUNT THE FUEL INJECTION PUMP.**

1. Remove the plug from the port on the timer cover.
2. Turn the crankshaft counter-clockwise viewed from flywheel side to align the injection timing mark.

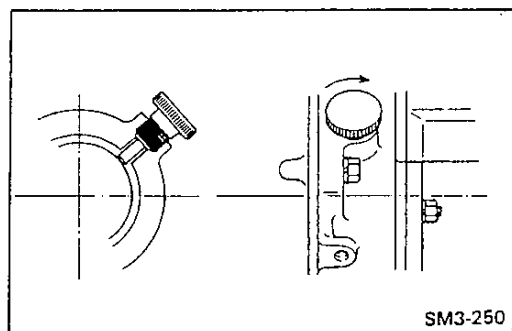

3. Lock the coupling flange with a special tool.

Special Tool: Timer Setting Tool


(09512-2090) for W04D

(09512-2100) for W04C-T, W04C-TI


NOTE: Do not loosen the injection pump drive gear fitting bolts.

4. Loosen the timer cover fitting bolts and then remove the injection pump with timer cover.

NOTE: Do not loosen the injection pump body fitting nuts.

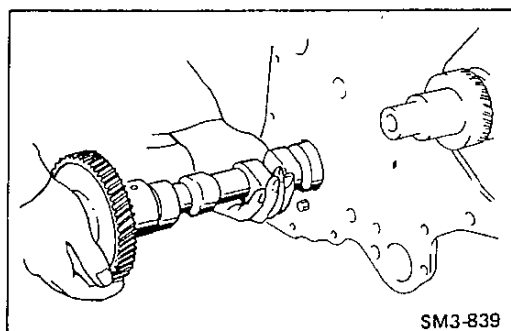
**REMOVE THE CAMSHAFT WITH GEAR.**

NOTE: Pull out the camshaft, slowly turning it so as not damage the bearings.

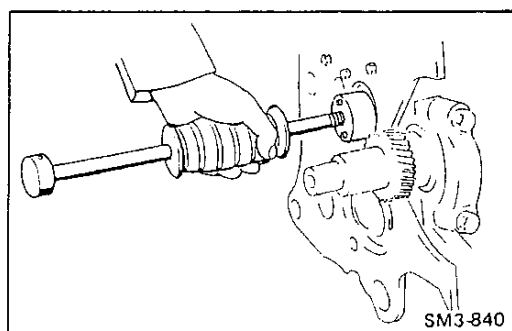
**REMOVE THE IDLER GEAR SHAFT.**

Using a special tool, remove the idler gear shaft.

Special Tool: Sliding Hammer (09420-1100)

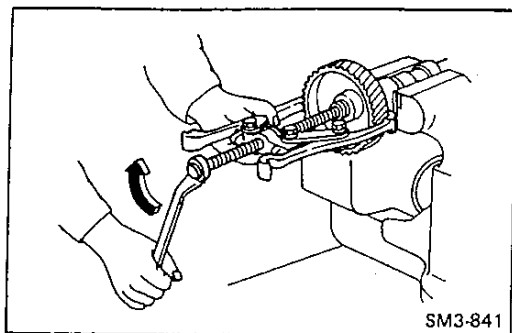
**IF NECESSARY, REMOVE THE CAMSHAFT GEAR.**

1. Hold the camshaft with a vice through wooden plates.
2. Remove the bolt and plain washer, then using a gear puller, remove the gear.

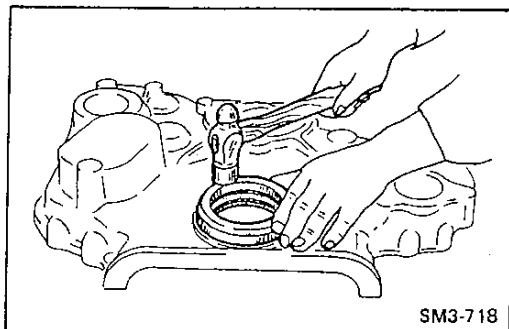**IMPORTANT POINTS – ASSEMBLY****IF NECESSARY, REPLACE THE TIMING GEAR CASE COVER OIL SEAL.**

1. Using a screwdriver, remove the oil seal.
2. Using a special tool, install the new oil seal.


Special Tool: Press (09482-1530)

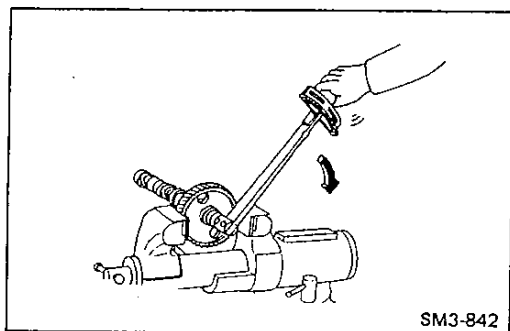**ASSEMBLE THE CAMSHAFT GEAR AND SHAFT.**

Install the camshaft gear with thrust bearing.


NOTE: When installing the gear to the camshaft:

- Heat the gear in hot water [Approx. 100°C (212°F)], then install the gear to the camshaft by using a press.
- When tightening the bolt, apply engine oil to the threads and plate surface of the bolt.

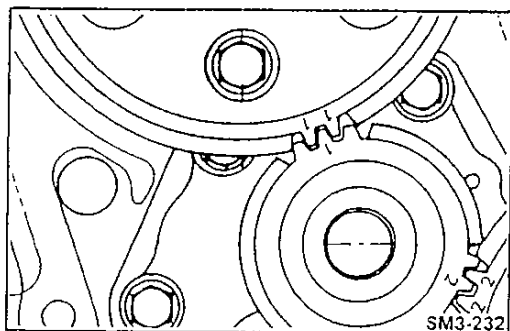**INSTALL THE CAMSHAFT.**


Lubricate all journals of the camshaft and insert the camshaft assembly into the cylinder block.

- NOTE:**
- Insert the camshaft, slowly turning while inserting so that the bearing will not be damaged.
 - When installing the camshaft, be sure that the match marks of the oil pump drive gear and camshaft gear are aligned correctly.

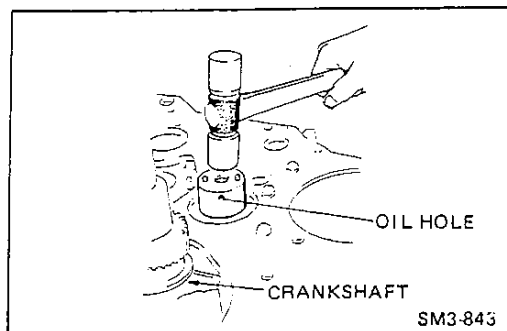
**INSTALL THE IDLER GEAR SHAFT.**

Install the idler gear shaft with thrust plate using a plastic hammer.


NOTE: Be sure that the oil hole is downward, if installed the wrong way, damage to the idler gear shaft and bearing can result.

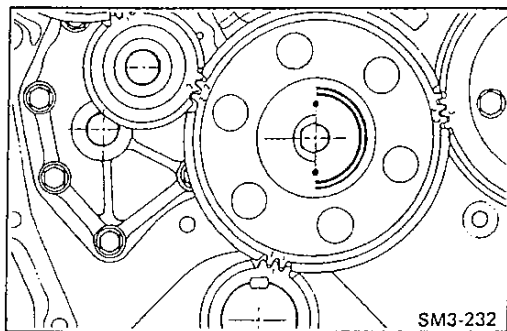**INSTALL THE IDLER GEAR.**


NOTE: When installing the idler gear, be sure that the matching marks of the crankshaft gear, oil pump drive gear and idler gear are aligned correctly.

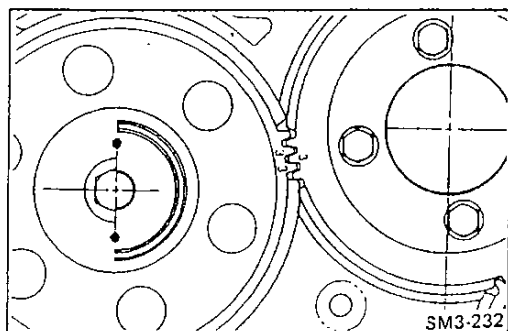**INSTALL THE INJECTION PUMP TEMPORARILY.**

NOTE: When installing the injection pump, be sure that the match marks of the idler gear and injection pump drive gear are aligned correctly.

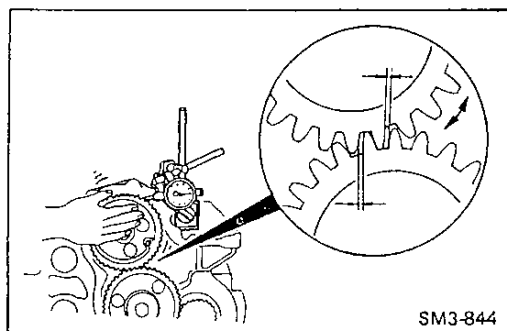**MEASURE THE GEAR BACKLASH.**


Measure the backlash of each gear using a dial indicator.
Replace the gear if necessary.
Refer to INSPECTION AND REPAIR.

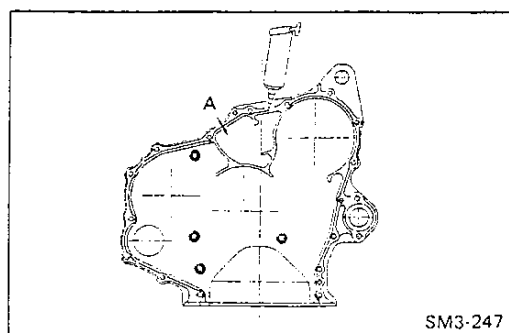**INSTALL THE TIMING GEAR CASE.**

1. Clean the faces.
2. Apply the liquid gasket as shown and install the timing gear cover within 20 minutes.

NOTE: If leaving it more than 20 minutes, clean the liquid gasket completely and reapply the liquid gasket.


Coating Width (A): 1.5 – 2.5 mm (0.06 – 0.10 in)

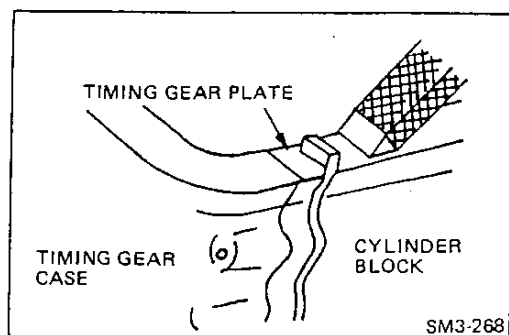**INSTALL THE OIL STRAINER.**

Refer to "OIL PUMP AND OIL STRAINER" in SECTION LUBRICATING SYSTEM.

INSTALL THE OIL PAN.

1. Cut the protrusion of the timing gear plate gasket from the oil pan mounting surface.

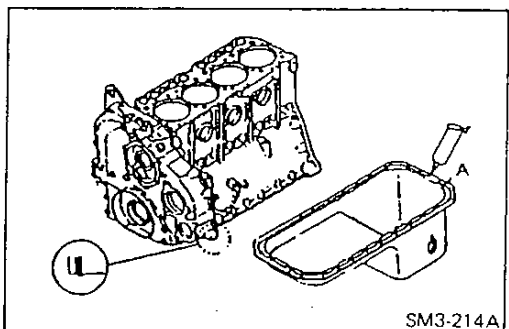

2. Clean the faces.
3. Apply the liquid gasket as shown and install the oil pan within 20 minutes.

NOTE: If leaving it more than 20 minutes, clean the liquid gasket completely and reapply the liquid gasket.

Coating Width (A): 3 – 4 mm (0.12 – 0.15 in)

INSTALL THE CRANKSHAFT PULLEY.







NOTE: Apply engine oil to the nut threads.

INSPECTION AND REPAIR

Unit: mm (in)


Inspection Item	Standard	Limit	Remedy	Inspection Procedure
Gear Teeth for Pitting or Wear	—	—	Replace, if necessary	Visual check SM3-845
Idler Gear Shaft Diameter	49.95–49.97 (0.9311–1.9318)	49.94 (1.9307)	Replace bushing and/or shaft	 SM3-846
Idler Gear Bushing Inside Diameter	50.00–50.03 (1.9685–1.9696)	50.05 (1.9705)		
Clearance between Idler Gear Shaft and Bushing	0.03–0.08 (0.0012–0.0031)	0.1 (0.0039)		
Idler Gear End Play	0.04–0.10 (0.0016–0.0039)	0.15 (0.0059)	Replace thrust plate	 SM3-421

Unit: mm (in)

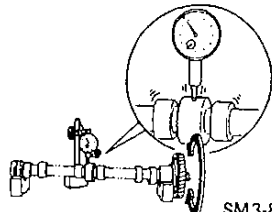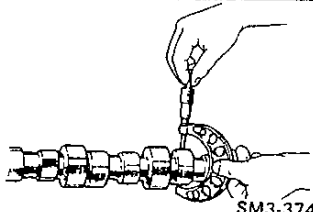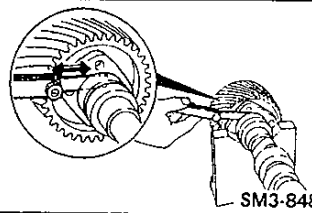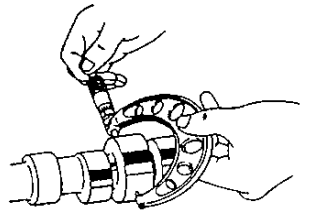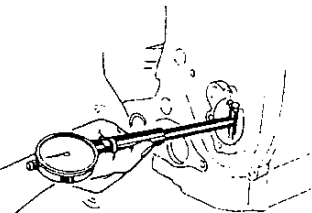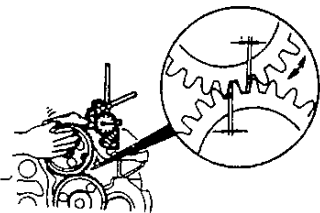Inspection Item		Standard	Limit	Remedy	Inspection Procedure
Camshaft Bend		—	0.05 (0.0020)	Replace	 SM3-858
Camshaft Cam Height (Intake)		49.44 (1.9465)	48.44 (1.9071)	Replace	 SM3-374
Camshaft Cam Height (Exhaust)		49.50 (1.9488)	48.50 (1.9095)		
Camshaft end Play		0.10–0.18 (0.0040–0.0070)	0.3 (0.0118)	Replace thrust plate	 SM3-848
Camshaft Journal Diameter Journal No. :		No. 1: 57.0 (2.2441)	56.85 (2.2382)	Replace shaft and/or bearing	 SM3-849
		No. 2: 56.8 (2.2362)	56.65 (2.2303)		
		No. 3: 56.6 (2.2283)	56.45 (2.2224)		
Camshaft Journal Bearing Inside Diameter Journal No. :		No. 1: 57.0 (2.2441)	57.15 (2.2500)		
		No. 2: 56.8 (2.2362)	56.95 (2.2421)		
		No. 3: 56.6 (2.2283)	56.75 (2.2342)		
Clearnace between Camshaft Journal and Bearing		0.03–0.12 (0.0012–0.0047)	0.15 (0.0059)		 SM3-850
Timing Gear Backlash	Crankshaft Gear – Idler Gear	0.068–0.194 (0.0027–0.0076)	0.3 (0.0118)	Replace gear, if necessary	 SM3-844
	Idler Gear – Oil Pump Gear	0.065–0.182 (0.0026–0.0071)			
	Oil Pump Gear – Camshaft Gear				
	Idler Gear – Injection Pump Gear	0.065–0.232 (0.0026–0.0091)			

PISTON, CRANKSHAFT, CYLINDER BLOCK AND FLYWHEEL HOUSING

OVERHAUL

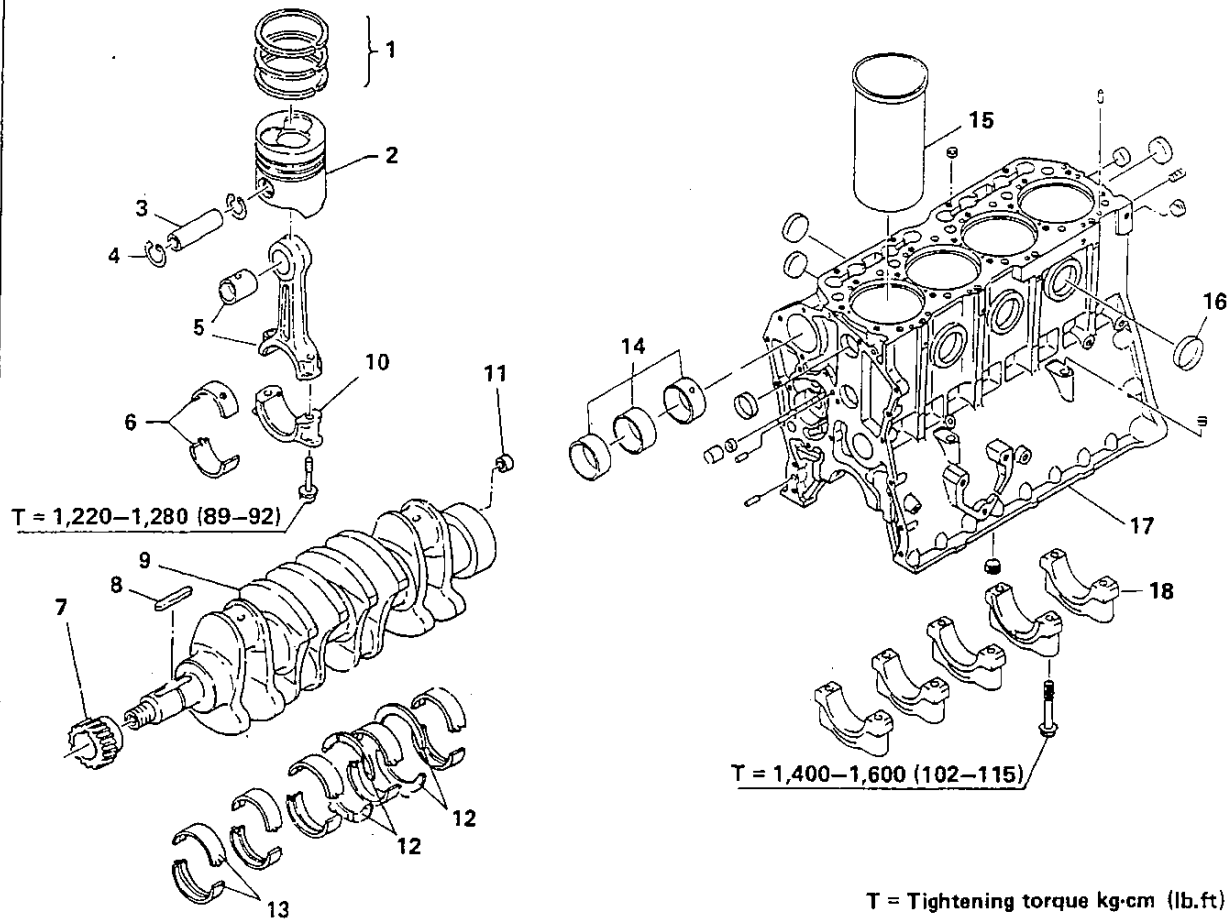


T = Tightening torque kg-cm (lb.ft)

SM3-1284

- | | | |
|---------------------------|------------------------------|------------------------|
| 1. Piston ring | 7. Crankshaft gear | 13. Crankshaft bearing |
| 2. Piston | 8. Key | 14. Camshaft bearing |
| 3. Piston pin | 9. Crankshaft | 15. Cylinder liner |
| 4. Retainer ring | 10. Connecting rod cap | 16. Expansion plug |
| 5. Connecting rod | 11. Collar | 17. Cylinder block |
| 6. Connecting rod bearing | 12. Crankshaft thrust washer | 18. Bearing cap |

OVERHAUL

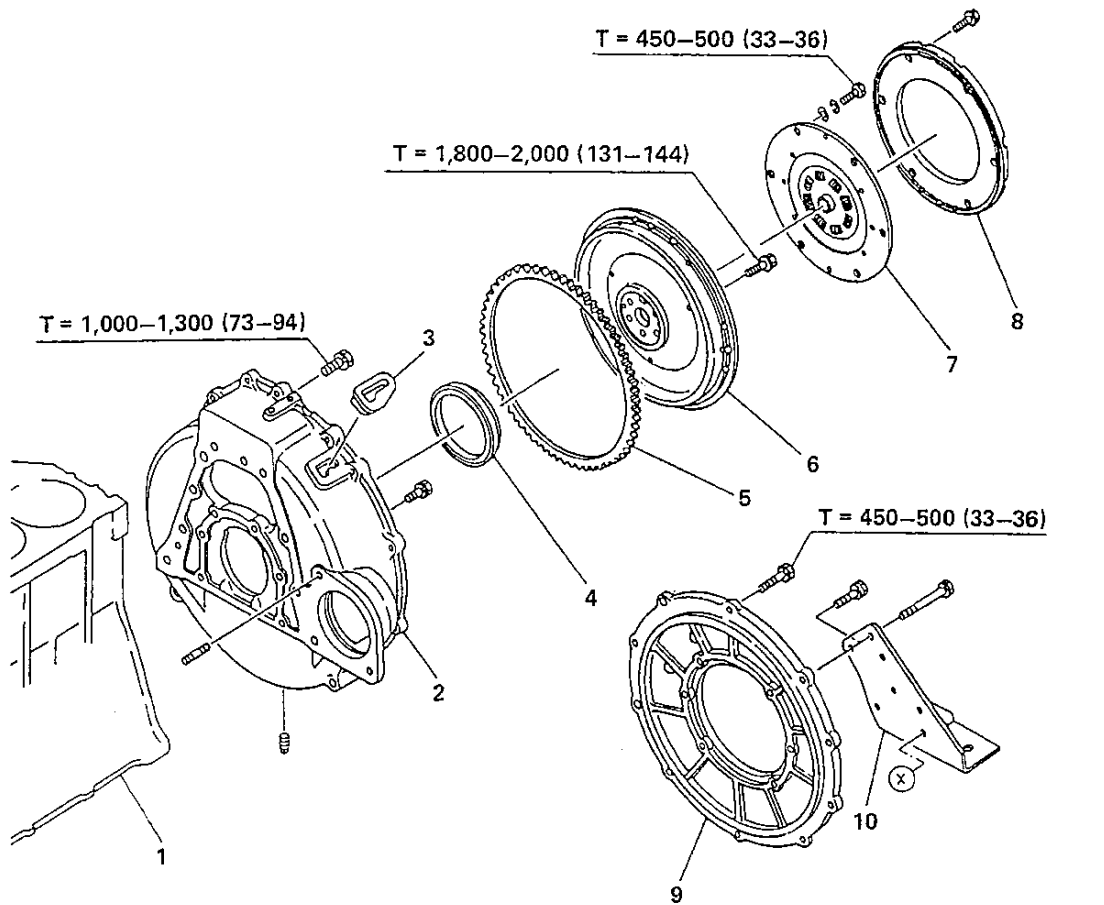


1. Cylinder block
2. Flywheel housing
3. Timing port cover
4. Oil seal

5. Ring gear
6. Flywheel
7. Torsion-elastic coupling
8. Spacer

T = Tightening torque: kg-cm (lb.ft)

9. Intermediate flange
10. Bracket

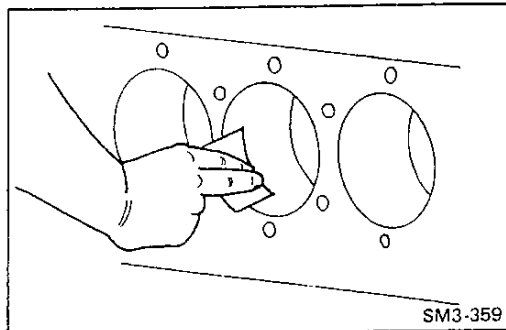


IMPORTANT POINTS – DISASSEMBLY

REMOVE THE PISTONS WITH CONNECTING RODS.

1. Remove the carbon from the upper end of the cylinder liner with a scraper or emery paper (recommended: No. 150) in a circular direction.


2. Extract the piston and connecting rod assembly out through the top of the cylinder.

NOTE: ○ Arrange the piston and connecting rod caps in order.

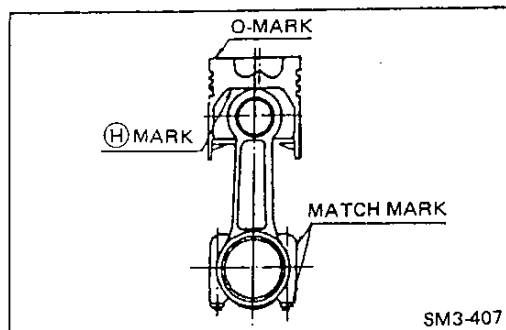

REMOVE THE CRANKSHAFT.


NOTE: Arrange the caps, bearings and thrust bearings in order.

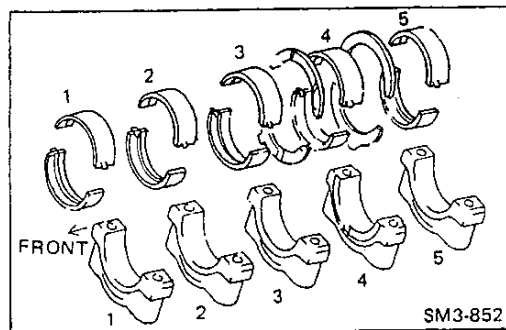

REMOVE THE CONNECTING ROD.

1. Remove the retainer ring installed on both ends of the piston pin, by means of retainer ring pliers.
2. Apply a metal pad to the pin and strike out the pin with a hammer.


NOTE: Warm up the piston first in hot water 80–90°C (176–194°F) for approx. 5 minutes before removing the pin.

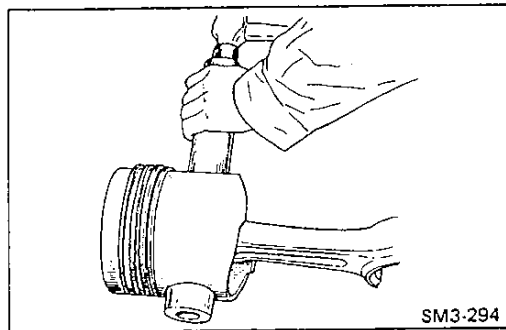


REMOVE THE PISTON RINGS

Special Tool: Piston Ring Expander (09442-1180)


- NOTE:** ○ Handle the piston rings carefully because they are made of a special casting which is easily broken.
- Keep the rings for each cylinder separate.

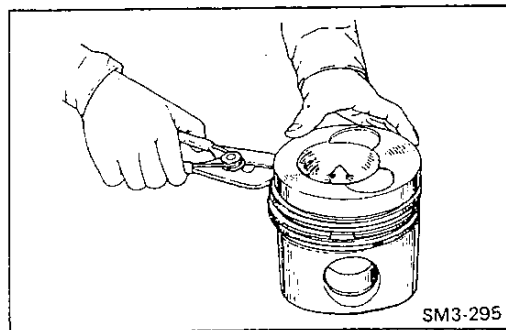

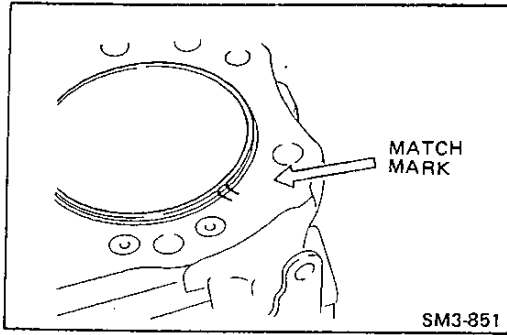**REMOVE THE CYLINDER LINER.**

1. Place the match marks with a pen on the cylinder block and liner flange, before removing the cylinder liners.


NOTE: Do not put the match marks with a punch.

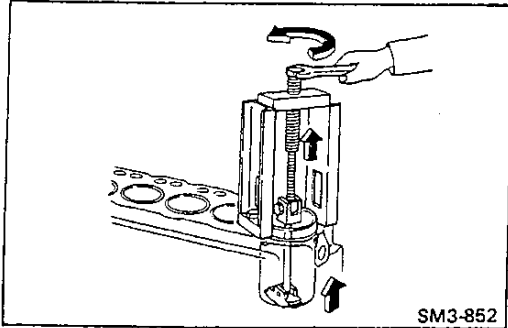

2. Using a special tool, remove the cylinder liners.


Special Tool: Cylinder Liner Puller (09420-1460)

NOTE: After removing the cylinder liners, put numbers on their periphery or arrange them in sequence.

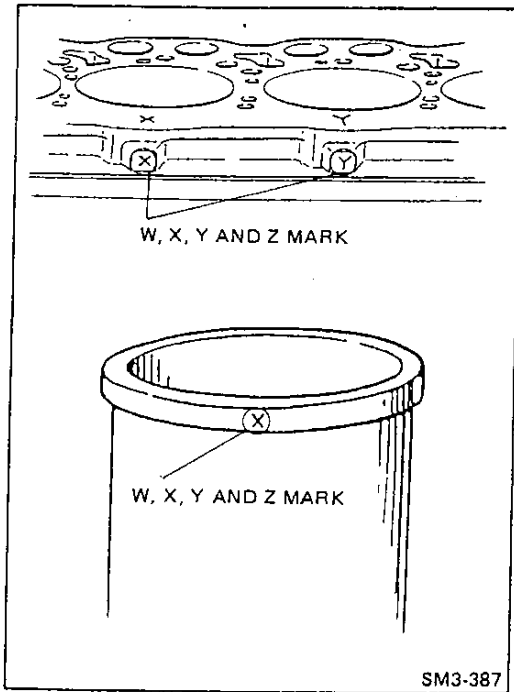
**IMPORTANT POINTS – ASSEMBLY****INSERT THE CYLINDER LINER INTO THE CYLINDER BLOCK.**

1. When a new cylinder liner is used, make sure that the liner has the same mark as the mark on the cylinder block.

NOTE: ○ There are 4 different liner and cylinder block matches. The flange section of each liner has a marking any, W, X, Y, Z, or indicating the size of the outer diameter of the liner on which it is stamped. The markings W, X, Y and Z, indicating the inner diameter of the cylinder bore supporting the liner on the sides and top of the cylinder block (the boss section for attaching the coolant gallery cover), are inscribed on each cylinder.

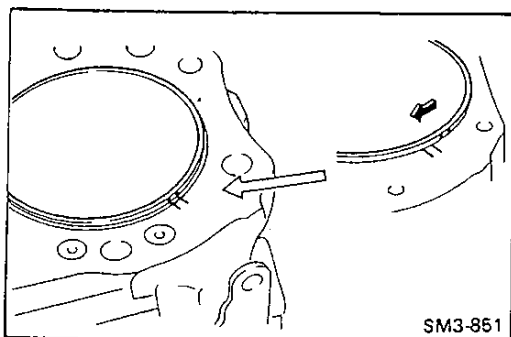

2. When reusing a liner, insert the liner its original position aligning the marking marked before disassembly.

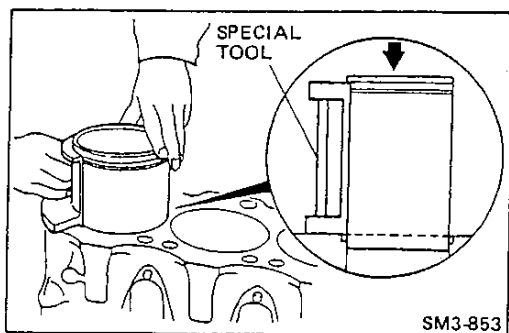


Apply a small amount of fresh engine oil on the outer periphery of the liner, and apply pressure on the entire flange section of the liner. If insertion by hand is difficult, use a cylinder guide, and the cylinder liner will easily be pushed in.

Special Tool: Cylinder Liner Guide (09480-1120)

NOTE:

- Do not use a liner that has been dropped.
- Take extra care when handling the liner since the liner is easily deformed.

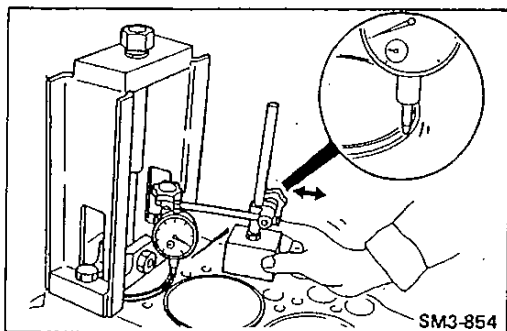

MEASURE THE PROJECTION OF THE CYLINDER LINER.

Tighten a special tool with a tightening torque of 100 kg·cm (7.23 lb·ft) and measure the amount of projection of the top end of the liner from the cylinder block with a dial gauge or straight edge and a thickness gauge.

Special Tool: Cylinder Liner Puller (09420-1460)


Tightening Torque: 100 kg·cm (7.23 lb·ft)

Assembly Standard: 0.01–0.08 mm (0.0004–0.0031 in)

Unit: mm (in)

Under size	Outside diameter	
	Crankpin	Journal
0.25	61.69–61.71 (2.4288–2.4295)	72.69–72.71 (2.8619–2.8625)
0.50	61.44–61.46 (2.4189–2.4196)	72.44–72.46 (2.8520–2.8527)
0.75	61.19–61.21 (2.4091–2.4098)	72.19–72.21 (2.8422–2.8429)
1.00	60.94–60.96 (2.3992–2.4000)	71.94–71.96 (2.823–2.8330)


IF NECESSARY, GRIND THE CRANKSHAFT AND USE UNDER SIZE BEARINGS.

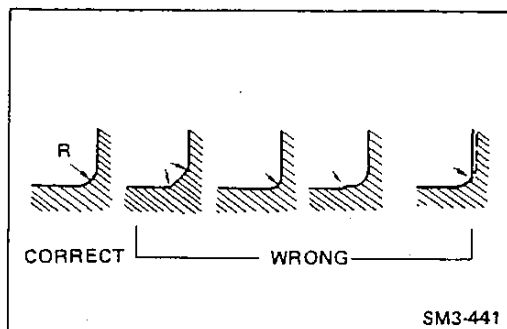

Dimension of Fillet R:

Crank pin: 3.50 – 4.00 mm (0.1378 – 0.1574 in)

Journal : 3.05 – 3.50 mm (0.1201 – 0.1377 in)

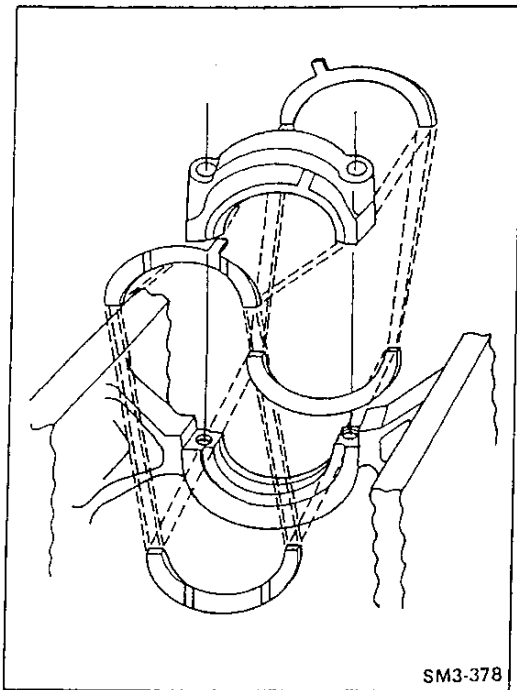
**INSTALL THE CRANKSHAFT.**

1. Install the crankshaft bearings on the cylinder block and bearing cap.


NOTE: Apply fresh engine oil to each bearing surface.

2. Install the crankshaft on the cylinder block.
3. Insert the crankshaft thrust bearings along the groove of the cylinder block.
4. Install the thrust bearings on the No. 4 bearing cap sides.

NOTE: Apply fresh engine oil to each thrust bearing surface.

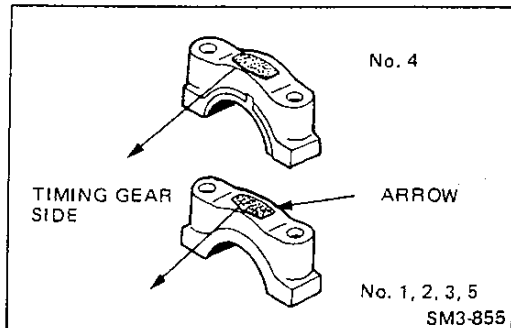

5. Install the crankshaft bearing caps.
Install the bearing caps in numbered order from timing gear side with the arrow point toward the timing gear side.

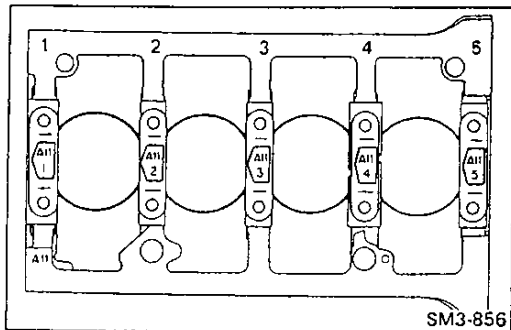


6. Tighten the cap bolts in three stages following the tightening order.

NOTE: Apply engine oil to the bolt threads and under the bolt head.

Tightening order: 3-2-4-1-5

NOTE:

- Make sure that the crankshaft rotates smoothly.
- Inspect the crankshaft end play.

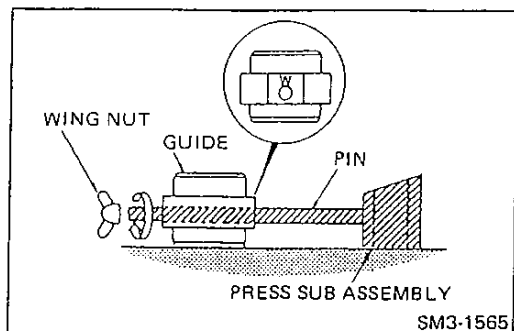**IF NECESSARY, REPLACE THE PISTON PIN BUSHING.**

1. Prepare the special tools.


Assemble the guide and press sub assembly inserting its pin into the guide, then secure them with the wing nut.

Special tools: Guide (09481-1130)

Press sub assembly (09402-1450)


Wing nut (9233-10360)

- NOTE:**
- Bring letter "W" punched on the guide above the pin.
 - Make sure to align both supporting surface of the guide and press sub assembly flush on a flat plane.

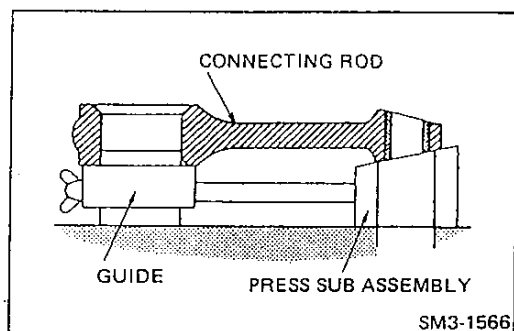

2. Using a special tool, remove the piston pin bushing.

- a. Set the connecting rod assembled without crank pin bore bearing on the guide and press sub assembly.

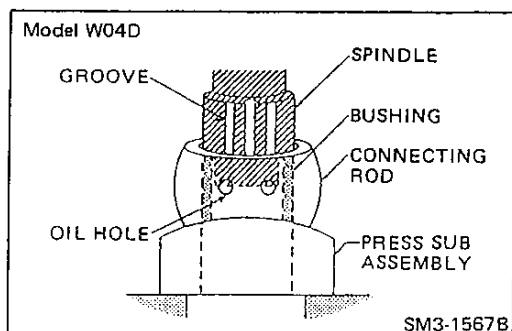



- b. Set the spindle on the bushing.

Special Tool: Spindle (09402-1460) for W04D

(09402-1470) for W04C-T and W04C-T1


- NOTE:** Align the grooving of the spindle with the oil hole of the bushing.

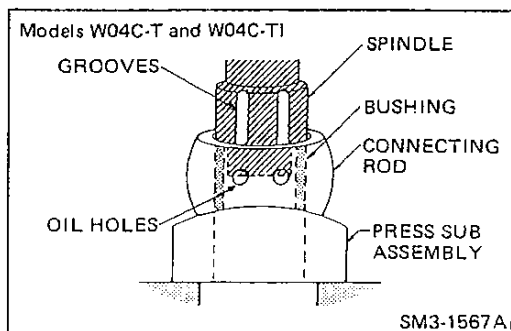

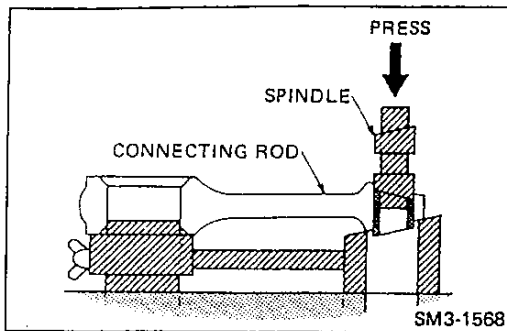

- c. Using a hydraulic press, remove the bushing.


NOTE: Always operate the press slowly and smoothly.

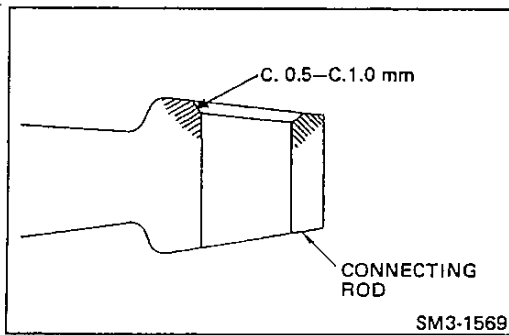

3. Assemble the piston pin bushing.

Chamfer one edge of the bushing hole at the small end of the connecting rod uniformly by C 0.5–1.0 mm (0.0196–0.0393 in).

- NOTE:
 ○ Irregular chamfering can cause out-of-roundness of the pressed bushing, which may result in jamming during insertion.
 ○ Remove dust from the inner surface of the small-end hole.

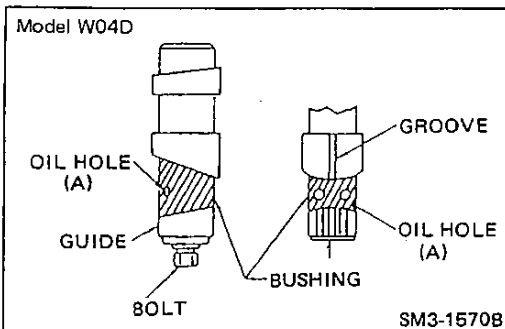

4. Mount the bushing on the spindle.

- a. Set the bushing and guide on the spindle aligning oil hole (A) in the bushing the grooves on the both the spindle and guide.
 b. Secure the bushing and guide with the bolt.

Special Tool: Spindle (09402-1460) for W04D



(09402-1470) for W04C-T and W04C-TI

Guide (09481-1120) for W04D

(09481-1140) for W04C-T and W04C-TI

Bolt (9191-08252)


- NOTE:
 ○ Be sure to slip the bushing over the spindle in the proper direction so that oil hole (A) will later align with the oil path in the connecting rod.
 ○ Apply fresh engine oil to the bushing and guide.

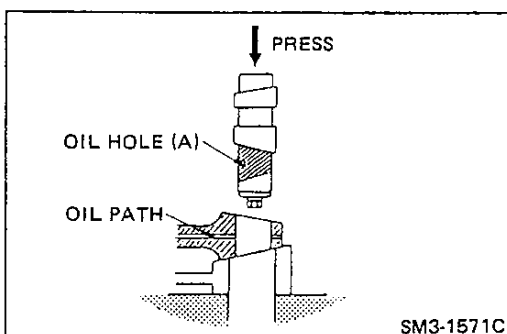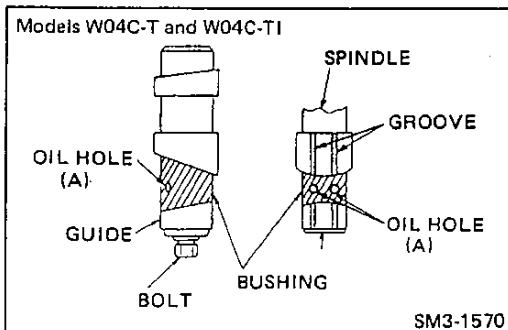

5. Install the bushing in the connecting rod.



Position the bushing—special tool assembly so that oil hole (A) align with the oil path through the connecting rod.

- NOTE:
 ○ Fully coat the bore in the connecting rod with fresh engine oil.
 ○ Always operate the press slowly and smoothly.

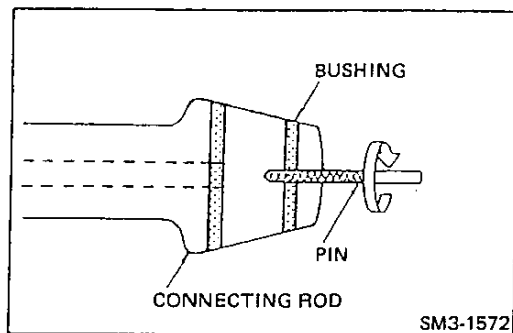

6. Inspect the bushing position after installation.


- NOTE:**
- Make sure that the oil holes of the bushing and connecting rod are aligned.
 - Insert a pin of 3 mm (0.1181 in) dia. into an hole at the end of the connecting rod, and make sure that the pin fully penetrates.
If there is any deviation in the alignment of the oil holes correct it with a drill of 3 mm (0.1181 in) dia.
 - Misalignment of the oil holes can lead to insufficient lubrication, which may result in seizure.
 - Insert a new piston pin and rotate it slowly to make sure that there is no rattling.

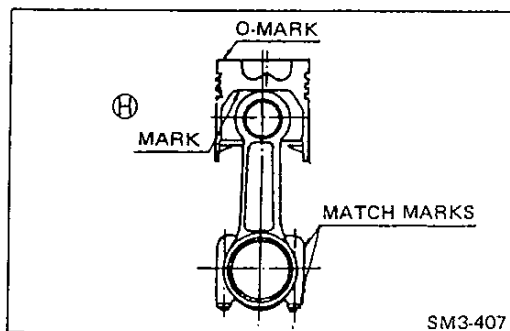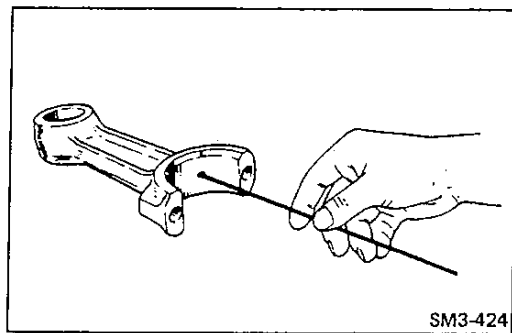

ASSEMBLE THE PISTON AND CONNECTING ROD.

Make sure that the O-mark at the top of the piston and the connecting rod match marks in opposite directions.

- NOTE:**
- Use the new retainer rings.
 - Heat the piston to 80–90°C (176–194°F) in hot water approx. 5 minutes.

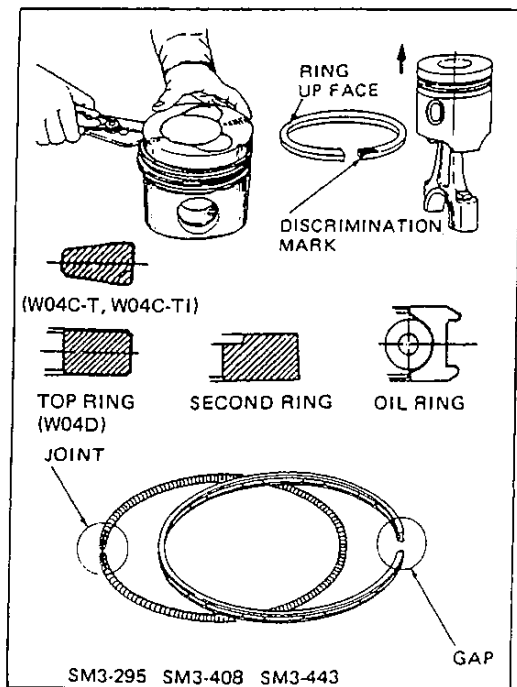**INSTALL THE PISTON RING.**


1. Install the piston rings in the sequence oil ring, second ring and top ring with the identification mark at the top of the ring facing up.

NOTE: ○ Identification mark of second ring and oil ring is applied with gold paint.


- Apply oil to the piston rings.

Special Tool: Piston Ring Expander (09442-1180)

2. Connect the ends of the coil expander and then fit the coil inside the piston ring after ensuring that the gap of the piston ring is 180° away from the joint of the coil.

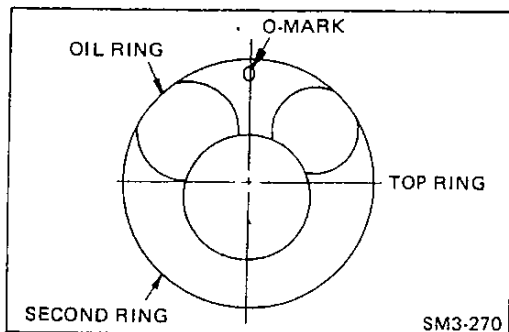


3. Arrange the piston rings so that their gaps are equally spaced.

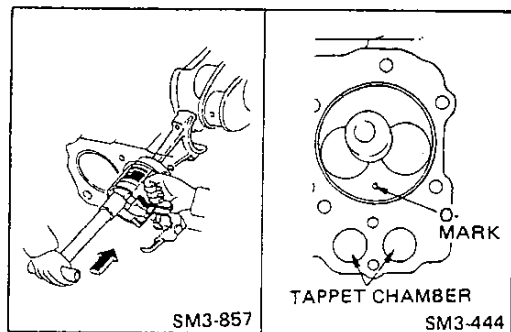**INSTALL THE PISTON IN THE CYLINDER LINER.**


1. Apply engine oil to the piston, cylinder liner and connecting rod bearing surface.
2. Using a special tool, hold the piston rings and push the piston with connecting rod assembly with a wooden rod.

NOTE: Check the piston that the O-mark on the top is on the tappet chamber side.

Special Tool: Piston Ring Holder (09441-1260)

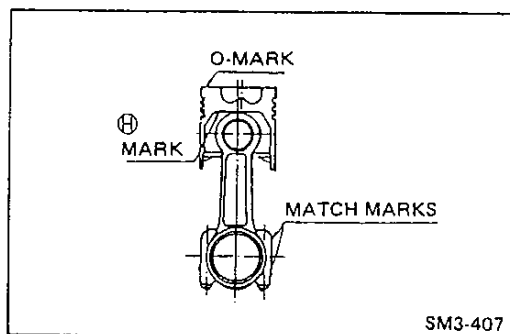**INSTALL THE CONNECTING ROD CAP.**

1. Apply engine oil to the cap bearing surface.
2. Align the match marks on the connecting rod and cap.
3. Apply engine oil to the bolt threads and under the bolt head.
4. Tighten the cap bolt in three stages.

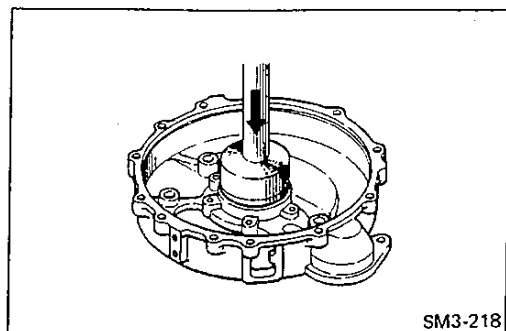


SM3-218

INSTALL THE OIL SEAL IN THE FLYWHEEL HOUSING.

Using a special tool, press in the oil seal in the flywheel housing.

Special Tool: Press (09482-1540)

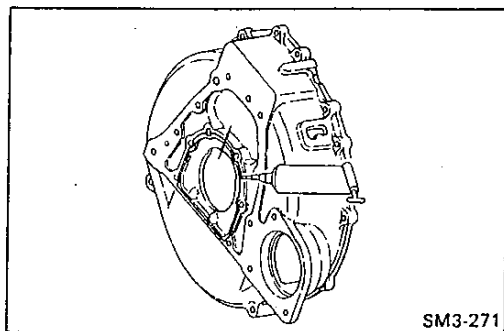


SM3-271

INSTALL THE FLYWHEEL HOUSING.

1. Clean the faces.
2. Apply the liquid gasket as shown and install the flywheel housing within 20 minutes.

NOTE: If leaving it more than 20 minutes, clean the liquid gasket completely and reapply the liquid gasket.

Coating Width: 1.5–2.5 mm (0.06–0.10 in)

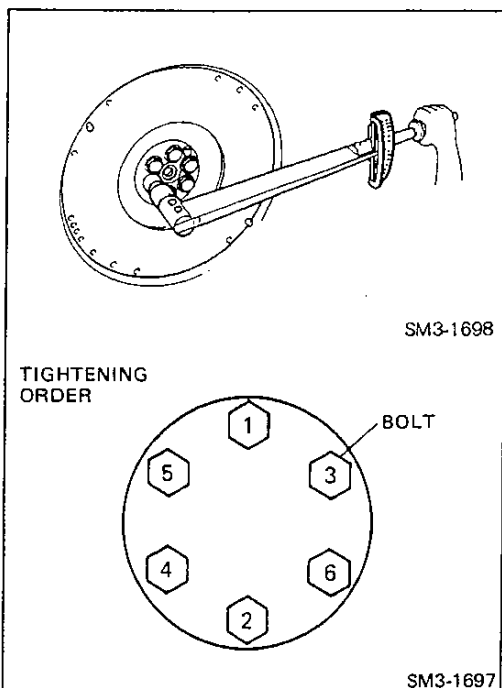

SM3-1698

TIGHTENING
ORDER

BOLT

SM3-1697

INSTALL THE FLYWHEEL.

Install the flywheel and tighten the bolts through several repetitions of the tightening order so as to reach specified torque evenly and gradually, then slacken and tighten them one by one to the specified torque.







- NOTE:**
- Align the "O" mark on the flywheel and crankshaft collar knock-in.
 - When tightening the bolt, apply engine oil to the threads and flywheel surface of the bolts.

INSPECTION AND REPAIR







Unit: mm (in)

Inspection Item		Standard	Limit	Remedy	Inspection Procedure
Piston Diameter		103.860–103.884 (4.0890–4.0899)	—	Replace piston and/or liner	 50 mm (1.97 in.)
Cylinder Liner Inside Diameter		104.008–104.040 (4.0949–4.0960)	104.15 (4.1003)		 80 mm (3.15 in.)
Clearance between Piston and Cylinder Liner		0.140–0.172 (0.0056–0.0067)	—		 SM3-910 SM3-432 SM3-313
Piston Pin Diameter	W04D	34.989–35.000 (1.3776–1.3779)	34.980 (1.3771)	Replace piston and/or piston pin	 SM3-859
	W04C-T W04C-TI	36.987–37.003 (1.4562–1.4568)	36.98 (1.4559)		
Piston Pin Hole Inside Diameter	W04D	34.987–35.003 (1.3775–1.3780)	35.02 (1.3787)		
	W04C-T W04C-TI	36.987–37.003 (1.4561–1.4568)	37.02 (1.4574)		
Clearance between Piston Pin and Piston Pin Hole		0.013T–0.014L (0.00052T–0.00055L) T: Tight L: Clearance	0.04 (0.0015)		 SM3-1585
Crankshaft end Play		0.05–0.22 (0.0020–0.0086)	0.4 (0.0157)	Replace thrust bearing	 SM3-362
Connecting Rod Small End Bushing Inside Diameter	W04D	35.015–35.025 (1.3786–1.3789)	35.080 (1.3811)	Replace bushing and/or piston pin	 SM3-296
	W04C-T W04C-TI	37.015–37.025 (1.4573–1.4575)	37.080 (1.5172)		
Piston Pin Diameter	W04D	34.989–35.000 (1.3776–1.3779)	34.980 (1.3771)		
	W04C-T W04C-TI	36.987–37.003 (1.4562–1.4568)	36.98 (1.4559)		
Clearance between Piston Pin and Connecting Rod Small End Bushing		0.015–0.036 (0.00016–0.0014)	0.1 (0.0039)		 SM3-297






Unit: mm (in)

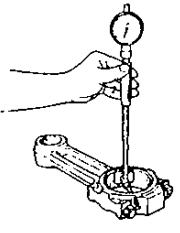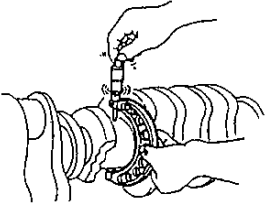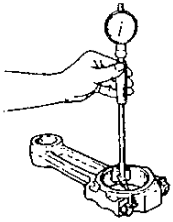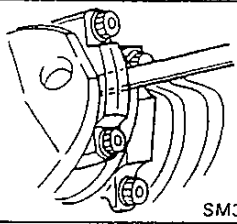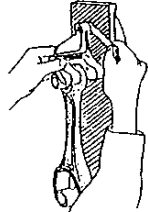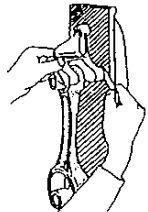Inspection Item	Standard	Limit	Remedy	Inspection Procedure
Connecting Rod Big end Inside Diameter (Without bearings)	65.985–66.000 (2.5979–2.5984)	—	Replace connecting rod assembly	 SM3-300
Crank Pin Diameter	61.94–61.96 (2.4386–2.4393)	–0.20 (–0.0078)	Regrind and use undersize bearing	 SM3-860
		60.76 (2.3921)	Replace crankshaft	
Clearance between Connecting Rod and Crank Pin	0.031–0.082 (0.0013–0.0032)	0.12 (0.0047)	Replace bearing	 SM3-300
Connecting Rod End Play	0.20–0.52 (0.0079–0.0204)	0.6 (0.0236)	Replace connecting rod	 SM3-862
Connecting Rod Straightness	—	0.1 (0.0039) Per 200 (7.8740)	Replace	 SM3-541
Connecting Rod Twist	—	0.1 (0.0039) Per 200 (7.8740)	Replace	 SM3-542

Unit: mm (in)

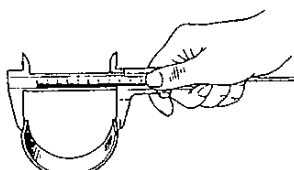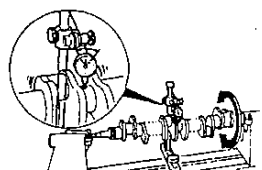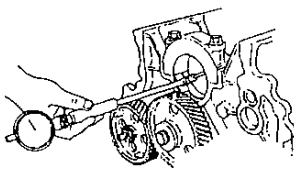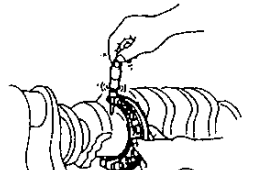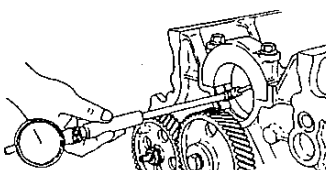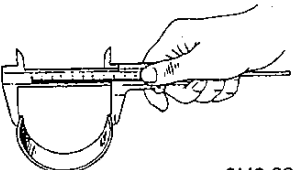Inspection Item	Standard	Limit	Remedy	Inspection Procedure
Connecting Rod Bearing Spread Dimension	67.05–67.55 (2.6398–2.6594)	—	Replace	 SM3-298
Crankshaft bearing spread dimension	79.00–79.60 (3.1102–3.1339)	—		
Crankshaft Bend	—	0.04 (0.0015)	Repair or replace	 SM3-861
Crankshaft Main Bearing Cap Inside Diameter (Without Bearing)	77.985–78.000 (3.0703–3.0709)	—	Replace	 SM3-436
Crankshaft Journal Diameter	72.94–72.96 (2.8717–2.8724)	–0.20 (–0.0078)	Regrind and use undersize bearing	 SM3-860
		71.76 (2.8521)	Replace crankshaft	
Clearance between Crankshaft Journal and Main Bearing	0.039–0.090 (0.0016–0.0035)	0.13 (0.0051)	Replace bearing	 SM3-436
Crankshaft Main Bearing Spread Dimension	79.00–79.06 (3.1103–3.1125)	—	Replace	 SM3-298

Unit: mm (in)

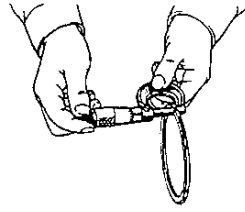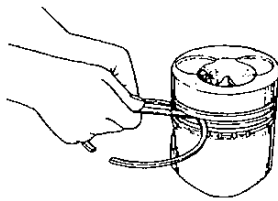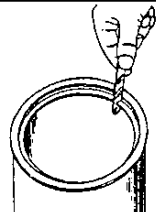
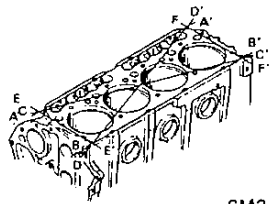
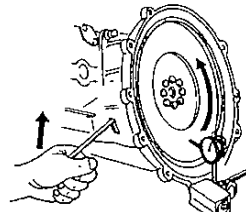
Inspection Item			Standard	Limit	Remedy	Inspection Procedure
Piston Ring Breadth	Top	W04D	2.47–2.49 (0.0972–0.0980)	2.32 (0.0914)	Replace	 SM3-379
		W04C-T W04C-TI	—	—		
		2nd	W04D	1.97–1.99 (0.0776–0.0783)		
	W04C-T W04C-TI	2.47–2.49 (0.0972–0.0980)	2.32 (0.0914)			
		Oil	4.97–4.99 (0.1957–0.1964)	4.95 (0.1948)		
Piston Ring Groove Breadth	Top	W04D	2.57–2.59 (0.1012–0.1019)	2.74 (0.1078)	Replace piston ring and/or piston	 SM3-301
		W04C-T W04C-TI	—	—		
		2nd	W04D	2.03–2.05 (0.0800–0.0807)		
	W04C-T W04C-TI	2.53–2.55 (0.0996–0.1004)	2.70 (0.1063)			
		Oil	5.01–5.03 (0.1973–0.1980)	5.08 (0.2000)		
Clearance between Piston Ring and Piston Ring Breadth Ring No.:			Top: 0.08–0.12 (0.0032–0.0047) (Model W04D only)	0.3 (0.0118)		
			2nd: 0.04–0.08 (0.0016–0.0031)	0.3 (0.0118)		
			Oil: 0.02–0.06 (0.0008–0.0023)	0.08 (0.0031)		
Piston Ring Gap All Rings: * Insert the Piston Rings Where the Wear of the Liner is Small.			0.3–0.45 (0.0119–0.0177)	1.2 (0.0472)	Replace	 SM3-302
Cylinder Block Flatness			Less than 0.05 (0.0019)	0.1 (0.0039)	Regrind and/or replace	 SM3-216
Flywheel Face Alignment			—	0.15 (0.0059)	Regrind and/or replace	 SM3-908

LIQUID GASKET AND APPLICATION POINTS


The W04D, W04C-T and W04C-TI type engine use liquid gasket (Three Bond TB1207C 04132 1207) instead of conventional sheet gaskets. Apply liquid gasket, therefore, taking the following items into account.

1. LIQUID GASKET APPLICATION POINTS AND COATING WIDTH

Unit: mm (in)

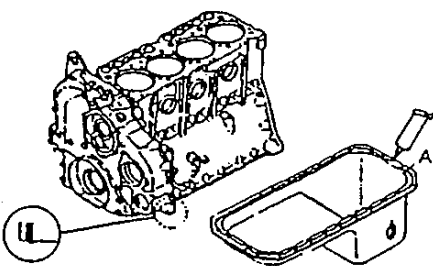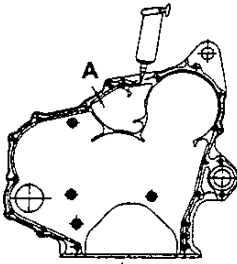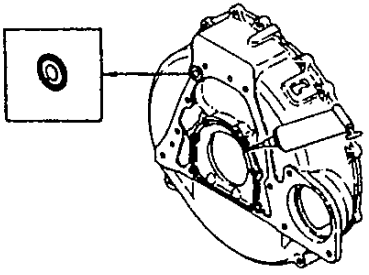Parts name	Application point	Coating width
		
(a) Oil pan	Flange face which mates with cylinder block and timing gear cover  SM3-214A	3 – 4 (0.12 – 0.16)
(b) Timing gear cover	Faces which mates with timing gear plate (flange face, boss face)  SM3-247	1.5 – 2.5 (0.06 – 0.10)
(c) Flywheel housing	Faces which mates with cylinder block (flange face, boss face)  SM3-271	1.5 – 2.5 (0.06 – 0.10)

Unit: mm (in)

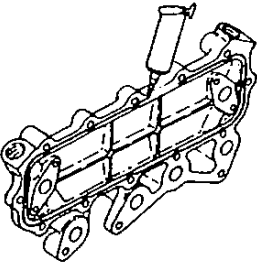
Parts name	Application point	Coating width 
(d) Oil cooler	Flange face which mates with cylinder block  SM3-269	1.5 – 2.5 (0.06 – 0.10)
(e) Coolant pump	Flange face which mates with gear cover	1.5 – 2.5 (0.06 – 0.10)
(f) Thermostat case	Flange face which mates with cylinder head	1.5 – 2.5 (0.06 – 0.10)
(g) Seal plate	Flange face which mates with gear cover	1.5 – 2.5 (0.06 – 0.10)
(h) Intake pipe	Flange face which mates with intake manifold	1.5 – 2.5 (0.06 – 0.10)

2. COATING LIQUID GASKET AND PARTS ASSEMBLY PROCEDURE

- (1) Completely remove old liquid gasket from each part and the respective mating part, and remove oil, water, and dirt using a cloth.
- (2) Be careful not to apply excessive or insufficient liquid gasket. Also, be sure to overlap the start and end of each coating.
- (3) When assembling coated parts, be careful that there is no misalignment between mating parts. If there is any misalignment, coat the parts again.
- (4) Assemble the various parts within 20 minutes after applying liquid gasket. If more than 20 minutes have elapsed, remove the liquid gasket and apply it again.
- (5) After assembling the various parts, wait for at least 15 minutes before starting the engine.

3. REMOVING PARTS


When removing each part, do not attempt to pry one portion of the flange alone but use the flange collar or clearance to pry the flange at several points alternately.

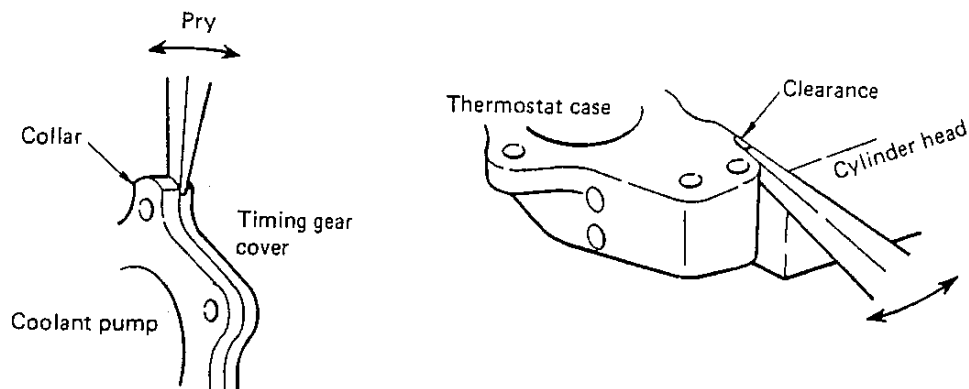

SM3-1933

4. TIMING GEAR PLATE GASKET

When replacing the gear plate gasket, cut it so that no steps are formed in it, then liberally apply liquid gasket to the cut face and assemble the oil pan.

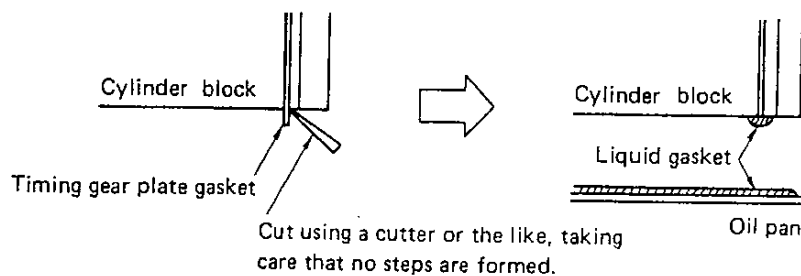

SM3-1932

NOTE: The flange of the oil pan may sometimes become deformed preventing it from being reused. To prevent this, therefore, first insert plates with a thin edge at several points around the periphery of the oil pan, then remove the oil pan using a screwdriver.

LUBRICATING SYSTEM

DATA AND SPECIFICATIONS

Oil pump


Type Full forced pressure feed by gear pump

Drive By gear

Oil cooler


Type Multi plates type, water-cooled

LUBRICATING SYSTEM DIAGRAM

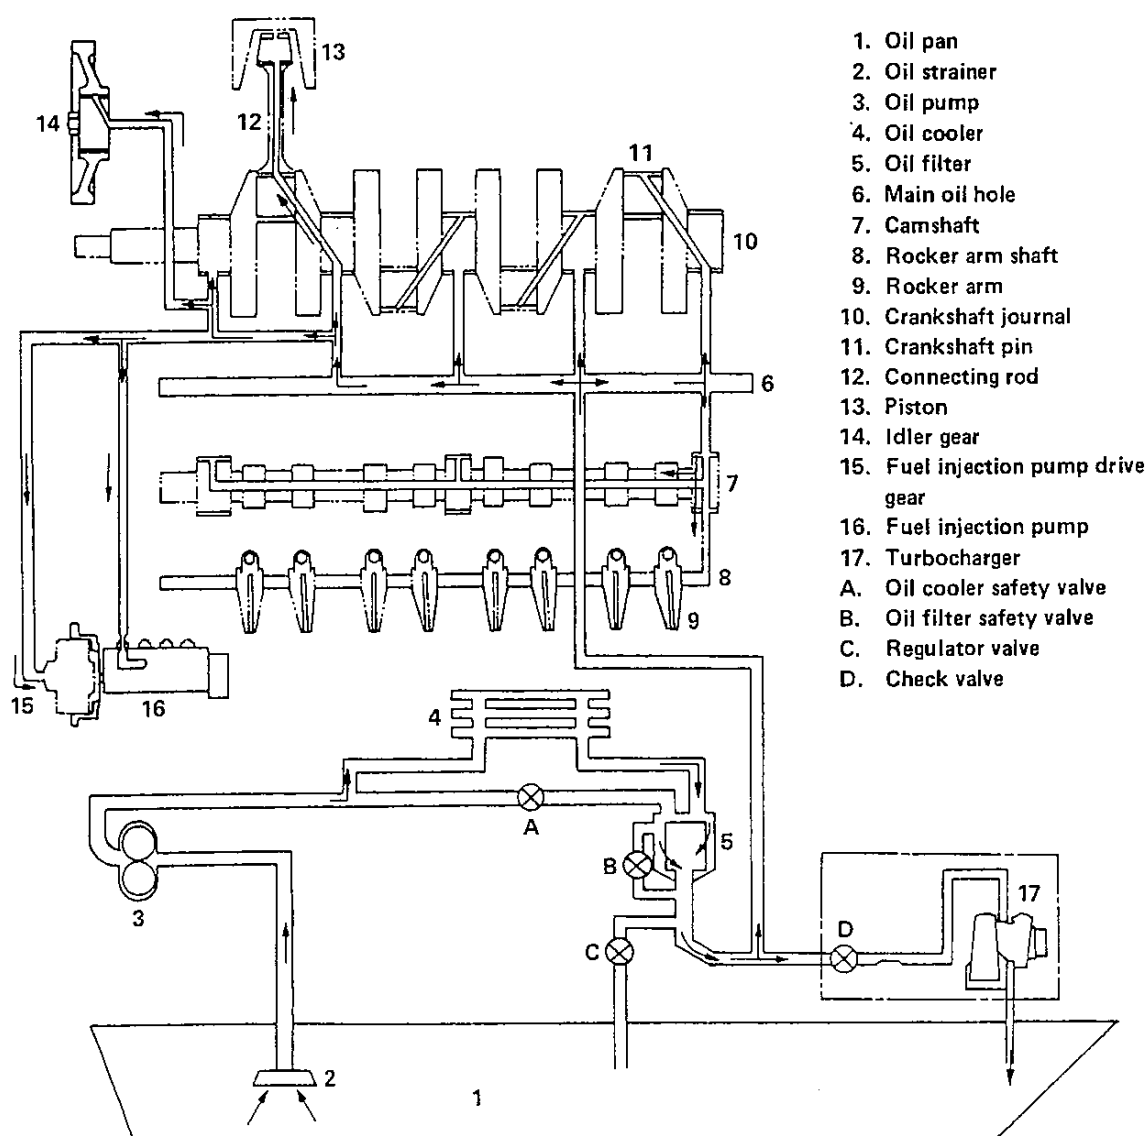

SM3-1820

OVERHAUL

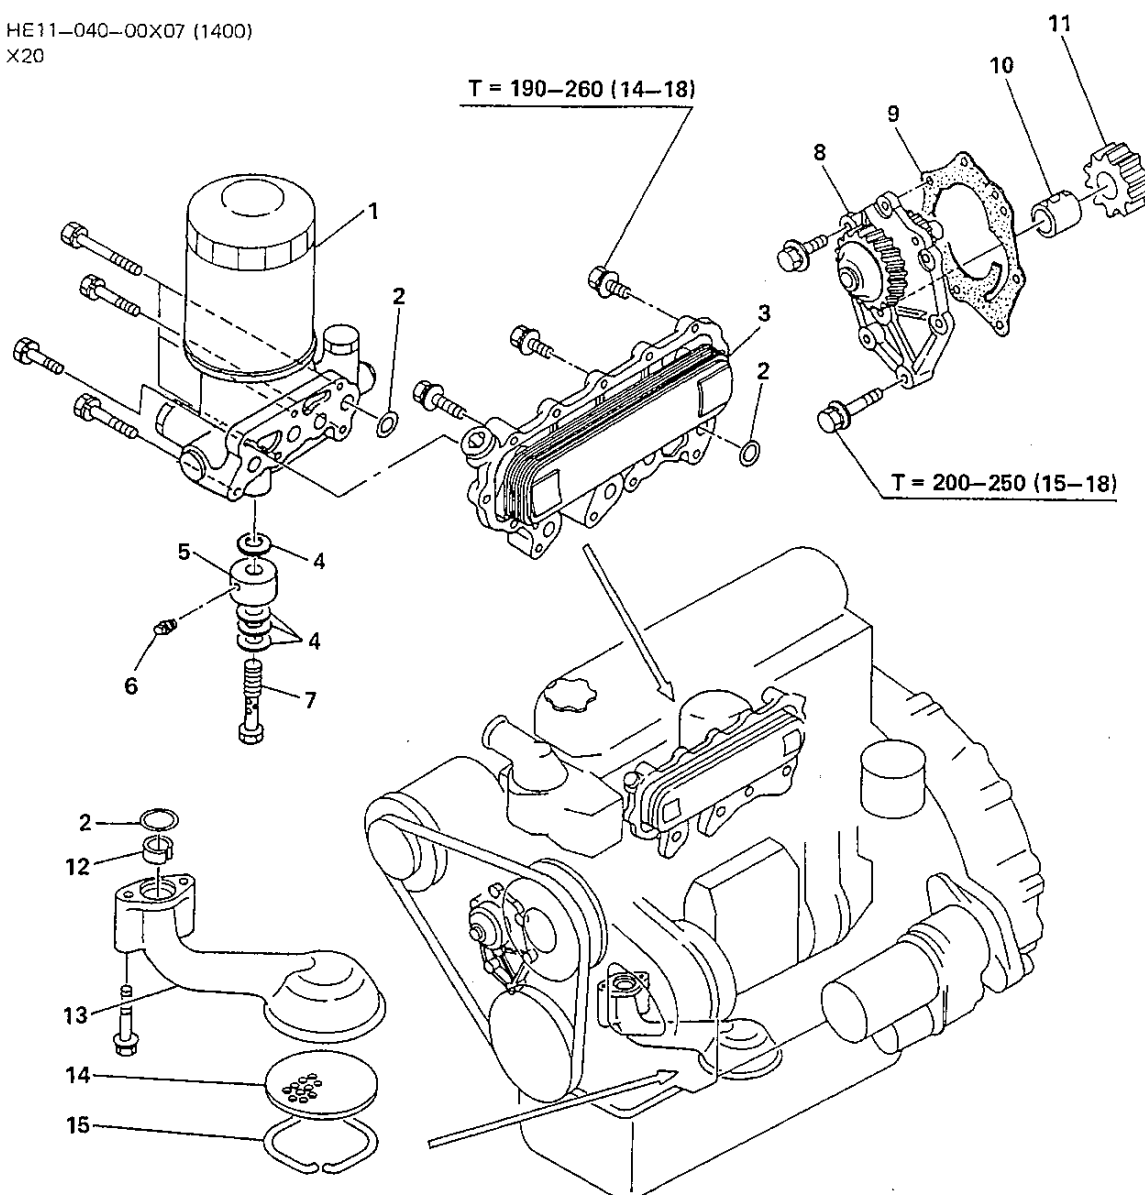HE11-040-00X07 (1400)
X20

T = Tightening torque: kg-cm (lb.ft)


1. Oil filter
2. O-ring
3. Oil cooler
4. Soft washer
5. Connector pipe

6. Plug.
7. Connector bolt
8. Oil pump cover subassembly
9. Gasket
10. Bushing



11. Oil pump driven gear
12. O-ring guide
13. Oil strainer
14. Oil strainer screen
15. Snap ring

OIL PUMP

DESCRIPTION

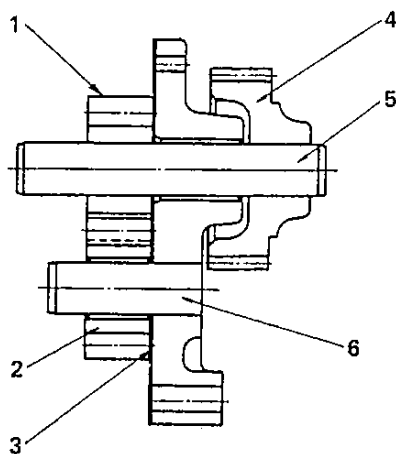

1. Drive gear (Inside)
2. Driven gear
3. Gasket
4. Drive gear (Outside)
5. Drive shaft
6. Driven shaft

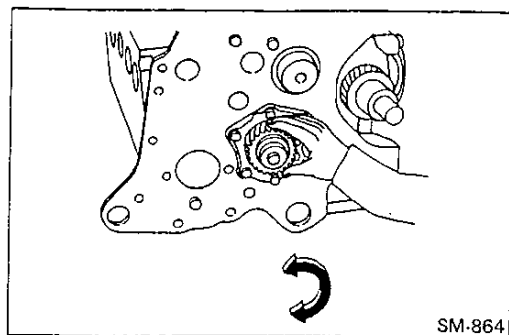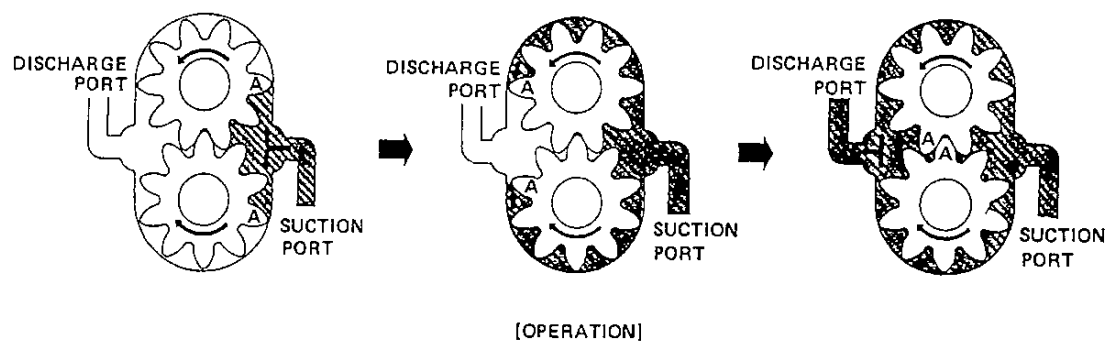

SM-864







IMPORTANT POINT – MOUNTING

INSTALL THE OIL PUMP.

1. Apply oil liberally to cylinder block pump case and bearing before installing oil pump.
2. Confirm smooth rotation of oil pump after tightening bolts.

INSPECTION AND REPAIR

Unit: mm (in)

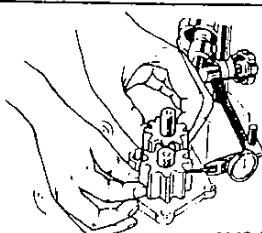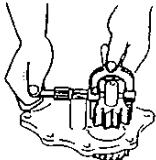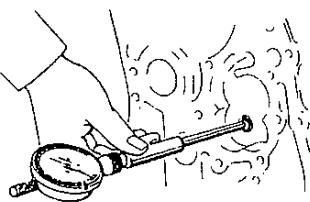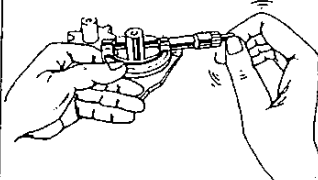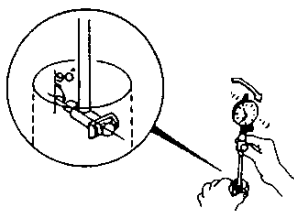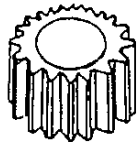
Inspection Item	Standard	Limit	Remedy	Inspection Procedure
Gear Backlash	0.09–0.21 (0.0036–0.0082)	0.30 (0.0118)	Replace gear	 SM3-867
Drive Gear Shaft Diameter	18.088–18.106 (0.7122–0.7128)	18.060 (0.7110)	Replace	 SM3-870
Drive Shaft Bearing Inside Diameter	18.146–18.173 (0.7145–0.7154)	18.20 (0.7165)	Replace	
Clearance between Drive Shaft and Bearing	0.040–0.085 (0.0080–0.0033)	0.1 (0.0039)	Replace bearing and/or shaft	 SM3-1070
Driven Gear Shaft Diameter	17.979–17.997 (0.7079–0.7085)	17.970 (0.7074)	Replace	 SM3-868
Driven Gear Inside Diameter	18.037–18.054 (0.7102–0.7107)	18.070 (0.7114)	Replace	
Clearance between Driven Gear and Shaft	0.040–0.075 (0.0080–0.0023)	0.1 (0.0039)	Replace bearing and/or shaft	 SM3-869
Gear Teeth Pitting or Wear	—	—	Replace, if necessary	Visual check  SM3-845

OIL COOLER AND OIL FILTER

SPECIAL TOOL

Prior to starting an engine overhaul, it is necessary to have these special tools.

WRENCH

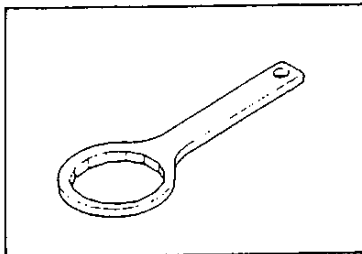


09553-1010

For spin-on type oil filter

OVERHAUL

1419M
I—No.21

1425G
I—No. 20

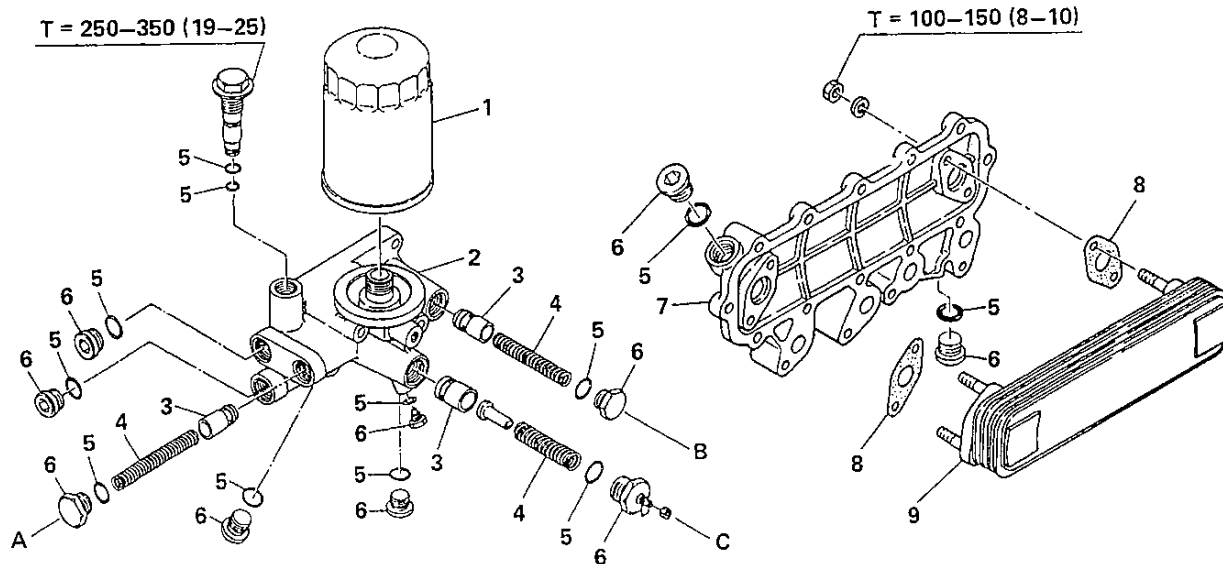

T = Tightening torque: kg-cm (lb.ft)

- 1. Oil filter
- 2. Oil filter cover
- 3. Valve
- 4. Spring
- 5. O-ring
- 6. Plug


- 7. Oil cooler case
- 8. Gasket
- 9. Oil cooler element

- A. Oil filter safety valve
1.3 kg/cm² (18.5 lb/sq.in)
- B. Oil cooler safety valve
4.0 kg/cm² (56.9 lb/sq.in)
- C. Regulator valve
4.0 kg/cm² (56.9 lb/sq.in)

IMPORTANT POINT – DISMOUNTING**REMOVE THE SPIN-ON TYPE OIL FILTER.**

Using a special tool, unscrew the oil filter.

Special Tool: Wrench (09553-1010)

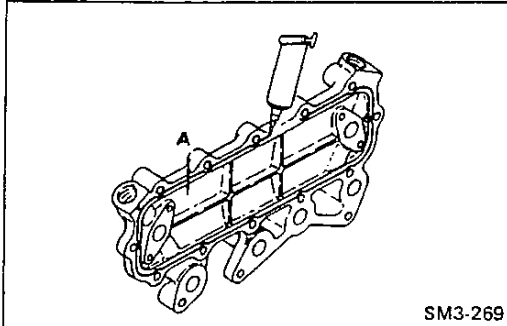**IMPORTANT POINTS – MOUNTING****INSTALL THE OIL COOLER.**

1. Clean the faces.
2. Apply the liquid gasket as shown and install the oil cooler within 20 minutes.

NOTE: If leaving it more than 20 minutes, clean the liquid gasket completely and reapply the liquid gasket.

Coating Width (A): 1.5–2.5 mm (0.06–0.10 in)

INSTALL THE SPIN-ON TYPE OIL FILTER.

1. Apply a slight amount of engine oil to the gasket of the new filter.
2. Tighten the new filter by hand until the gasket touches the cover and the tighten another 3/4 to 1 full turn with a special tool.

Special Tool: Wrench (09553-1010)

INSPECTION AND REPAIR

Inspection Item	Standard	Limit	Remedy	Inspection Procedure
Valve and Springs of Oil Filter. Wear or Damage.	—	—	Replace, if necessary.	Visual check


FUEL SYSTEM

DATA AND SPECIFICATIONS

Injection nozzle

Type Multi-hole nozzle type
Opening pressure 220 kg/cm² (3,129 lb/sq.in)


FUEL SYSTEM DIAGRAM

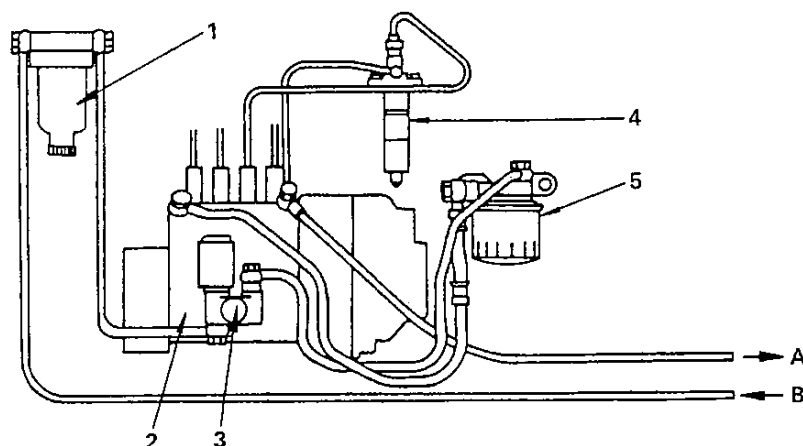

1. Water separator
(If so equipped)
2. Fuel injection pump
3. Fuel feed pump
4. Injection nozzle
5. Fuel filter
- A. To fuel tank
- B. From fuel tank

NOTE: Figure illustrates 4-cylinder engine.

SM3-227A

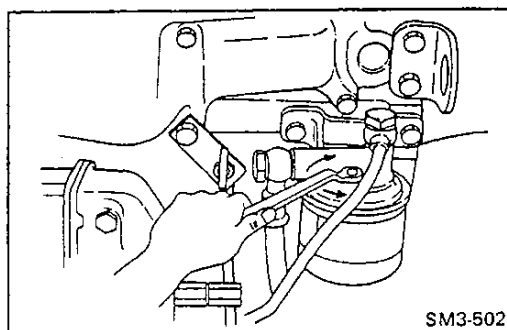


SM3-502

AIR BLEEDING FROM FUEL SYSTEM.

1. Loosen the bleeder plug on the fuel filter.
2. Loosen the priming pump knob.
3. Operate the priming pump knob until the air will not come out from the bleeder plug.
4. Tighten the bleeder plug.

Tightening Torque: 40~60 kg-cm (3~4 lb.ft)

NOTE: The bleeder plug should be tightened while the priming pump knob is operated.

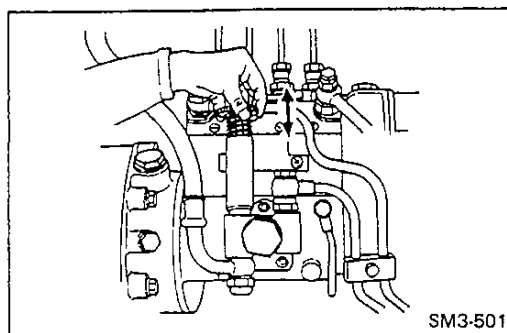

SM3-501

5. Once again, operate the priming pump knob several times.
6. Push back the priming pump knob and tighten it.


NOTE: Wipe off any splashed fuel.

INJECTION NOZZLE


OVERHAUL

1530V
I—No. 20

For W04C-T, W04C-TI,
W06D, W06D-TI, W06E

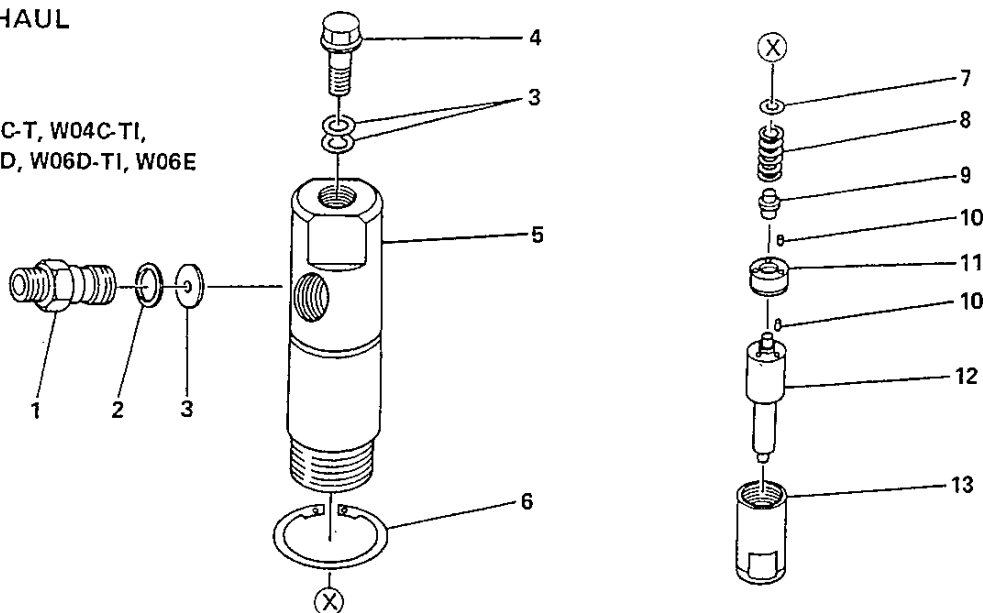

For W04D

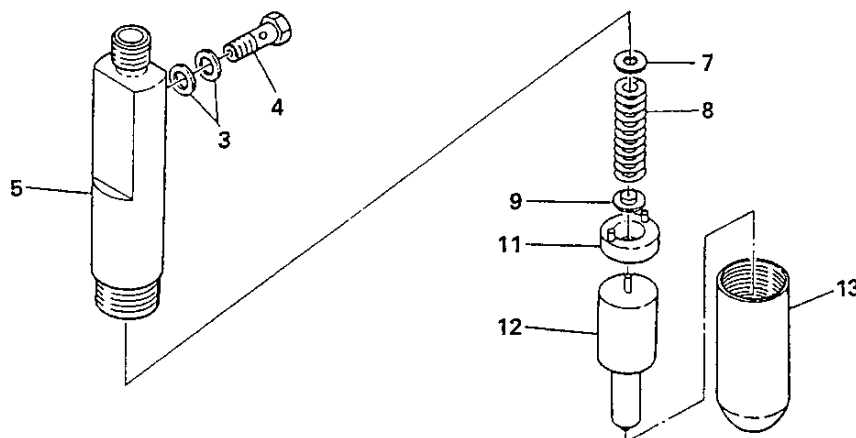

SM3-1238A

1. Connector
2. Packing ring
3. Gasket
4. Joint bolt
5. Nozzle holder


6. Retainer ring
7. Shim
8. Spring
9. Nozzle holder pressure pin
10. Pin

11. Distance piece
12. Nozzle
13. Nozzle retaining nut

IMPORTANT POINTS – DISMOUNTING

REMOVE THE NOZZLE HOLDER ASSEMBLY.

Refer to Section ENGINE MOVING PARTS.

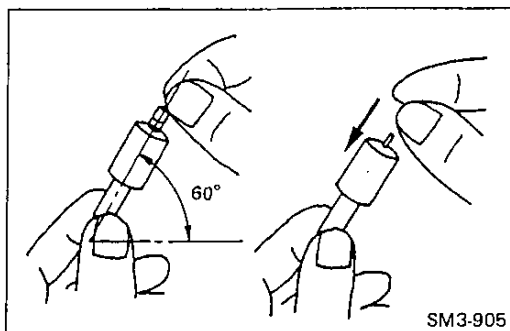


IMPORTANT POINTS – ASSEMBLY

TEST THE NOZZLE SKINKING.

Wash the nozzle proper with diesel fuel oil, then immerse it in diesel fuel oil.


Next slide the needle inside the nozzle proper and ensure that it move smoothly. The needle valve should fall under its own weight when withdrawn vertically about 1/3 and released. If its motion is sluggish, replace the nozzle with a new one.

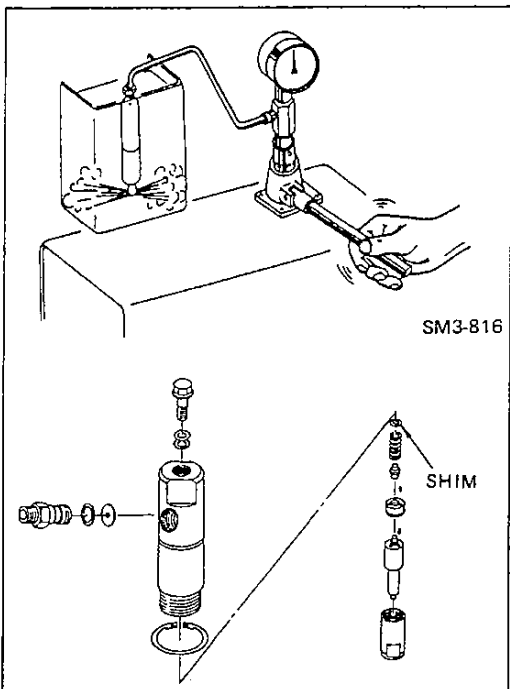

WARNING


- Diesel fuel is flammable. This nozzle adjusting should be done a well ventilated room and away from any open flames or electric spark.
- The spray must always be covered. Keep your face and body away from the spray. This is because of the risk of fuel oil getting in your eyes or passing into your body.

2. If the injection pressure is not within specification, change the shim.

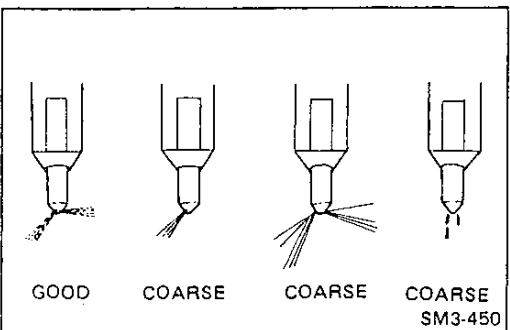

TEST THE SPRAY PROFILE.

In the case of the new nozzle, operate the lever at the rate of 30 to 60 strokes per minute, and for a used nozzle, operate the lever at the rate of 15 to 60 strokes per minute.

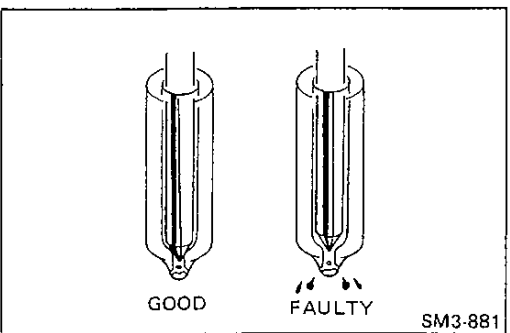

TEST THE FUEL LEAKAGE.


When checking for fuel leakage from the nozzle, apply a pressure of about 10 to 20 kg/cm² (142–284 lb/sq.in) lower than the correct injection pressure to the nozzle by means of the nozzle tester. If there is no fuel leakage, the nozzle is normal.

FUEL FILTER

SPECIAL TOOL


Prior to starting an engine overhaul, it is necessary to have these special tools.

WRENCH

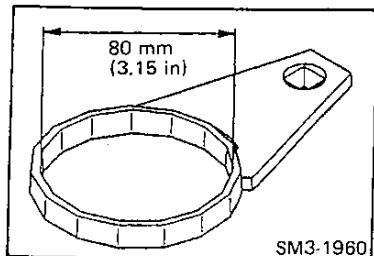

09503-1040

For spin-on type fuel filter

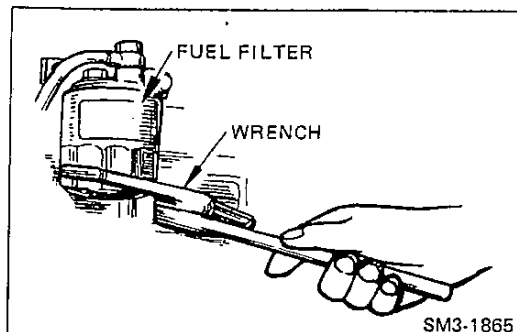

IMPORTANT POINT – DISMOUNTING

REMOVE THE SPIN ON TYPE FUEL FILTER.

Using a special tool, unscrew the fuel filter.

- NOTE:
- Be careful not to spill diesel fuel.
 - When removing the fuel filter for W04C-TI and W06D-TI, use a suitable wrench.

Special Tool: Wrench (09503-1040) for W04D, W04C-T, W06E

IMPORTANT POINT – MOUNTING

INSTALL THE SPIN-ON TYPE FUEL FILTER.

1. Apply a small amount of diesel fuel to the gasket of a new fuel filter.
2. Manually tighten the new fuel filter until its gasket touches the cover and then tighten another 2/3 turn with a special tool.

NOTE: When installing the fuel filter for W04C-TI and W06D-TI, use a suitable wrench.

Special Tool: Wrench (09503-1040) for W04D, W04C-T, W06E

COOLING SYSTEM

DATA AND SPECIFICATIONS

Coolant pump

Type Forced circulation by volute pump
Drive By V-belt


Seawater pump

Type Self priming type (Flexible impeller pump)
Drive By gear

Thermostat

Type Wax type, bottom bypass system
Valve opening temperature 76.5°C (170°F)

COOLING SYSTEM DIAGRAM

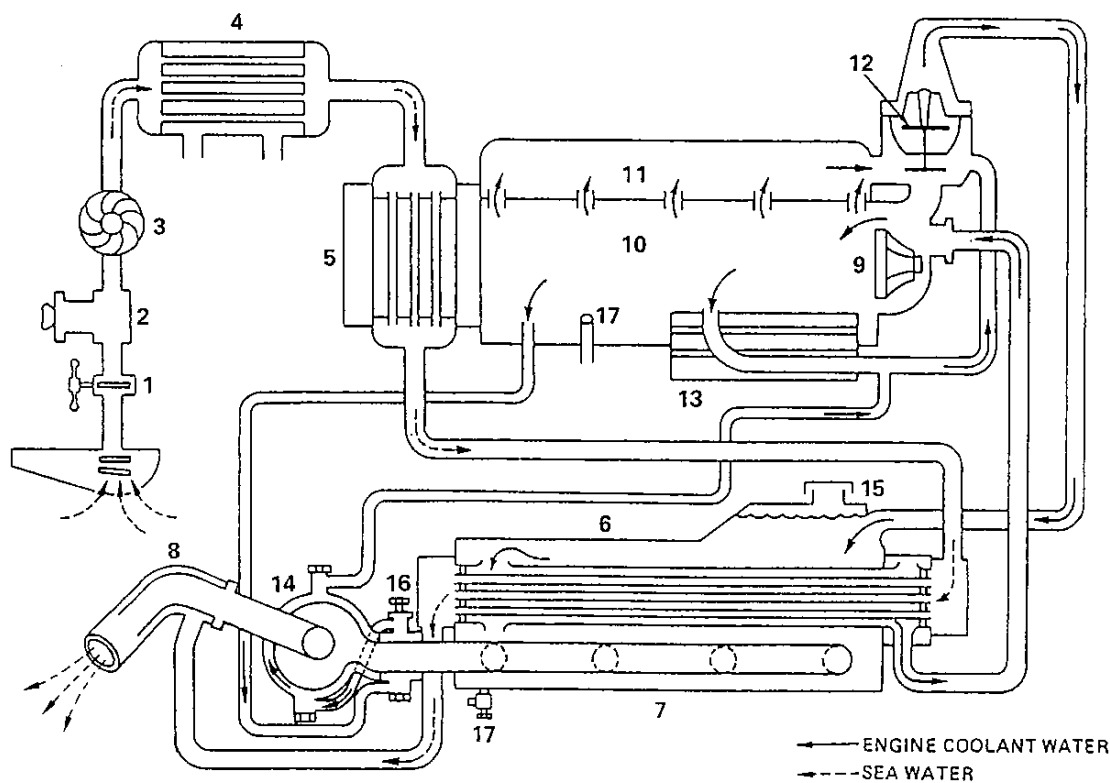


SM3-1854

- | | | |
|------------------------------------|----------------------------------|-------------------------------|
| 1. Seawater intake valve (Seacock) | 7. Water cooled exhaust manifold | 13. Engine oil cooler |
| 2. Seawater filter | 8. Exhaust pipe | 14. Water cooled turbocharger |
| 3. Seawater pump | 9. Coolant pump | 15. Coolant filler cap |
| 4. Intercooler | 10. Cylinder block | 16. Air bleeder plug |
| 5. Transmission fluid cooler | 11. Cylinder head | 17. Coolant drain plug |
| 6. Heat exchanger | 12. Thermostat | |

OVERHAUL

HE11-038-00X0

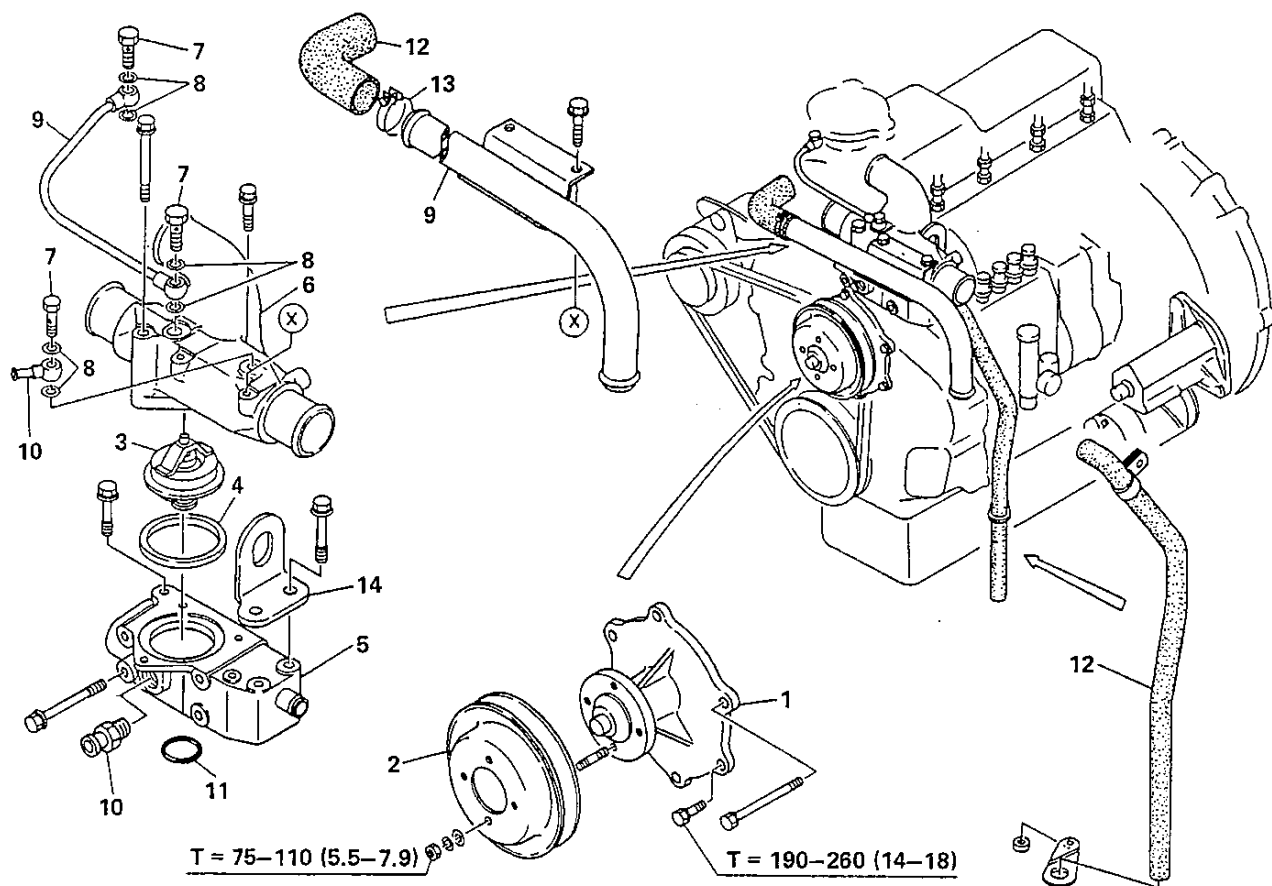


T = Tightening torque: kg-cm (lb.ft)

- | | | |
|------------------------|---------------------|-------------------|
| 1. Coolant pump | 6. Coolant manifold | 11. O-ring |
| 2. Coolant pump pulley | 7. Connector bolt | 12. Hose |
| 3. Thermostat | 8. Soft washer | 13. Clamp |
| 4. Thermostat gasket | 9. Pipe | 14. Engine hanger |
| 5. Thermostat case | 10. Connector | |

COOLANT PUMP


OVERHAUL

1659N
I—No. 21

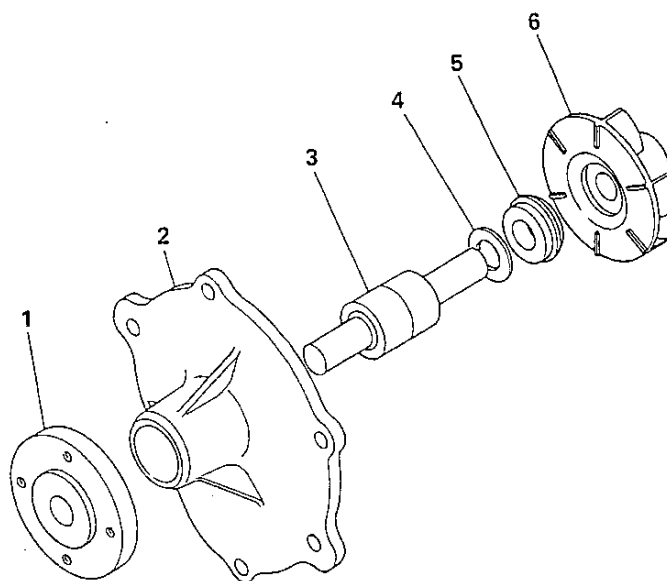


1. Pulley center
2. Pump case
3. Shaft subassembly

4. Slinger
5. Coolant seal
6. Vane

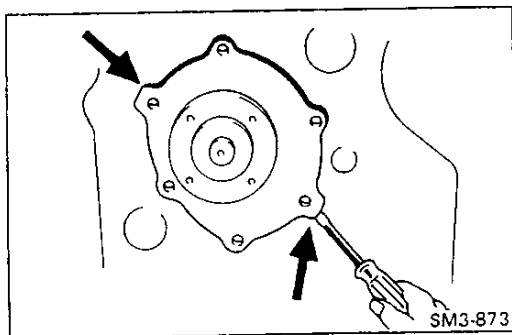

IMPORTANT POINT — DISMOUNTING

REMOVE BY PRYING LOOSE WITH SCREWDRIVER AT THE 2 POINTS ON THE FLANGE.

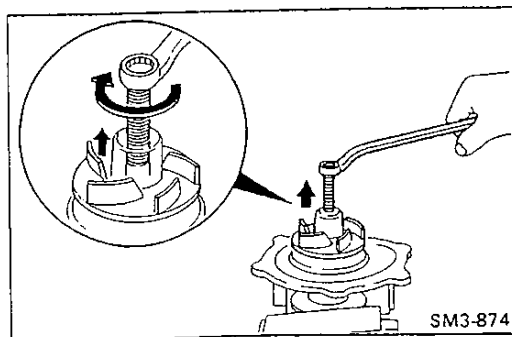


IMPORTANT POINTS — DISASSEMBLY

REMOVE VANE FROM SHAFT BY SCREWING IN A BOLT.


Bolt Size;

Diameter: 10 mm (0.394 in)

Pitch: 1.5 mm (0.059 in)

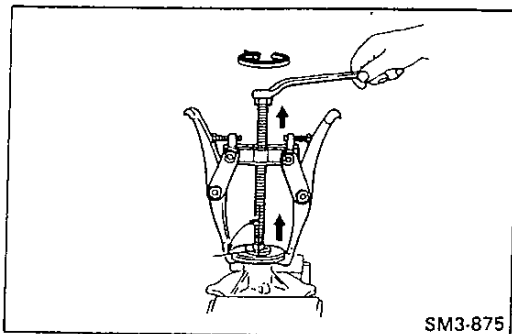


USING A PULLER, REMOVE THE PULLEY CENTER FROM THE SHAFT.

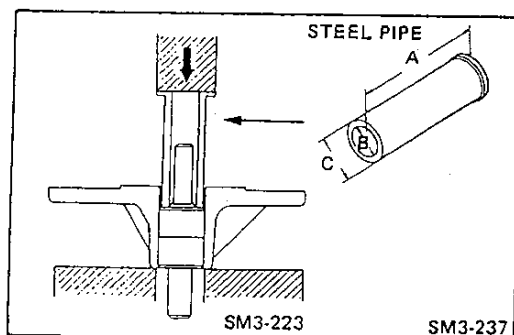

USING A STEEL PIPE AND PRESS, REMOVE THE SHAFT FROM BODY.


Steel Pipe Dimension: A: More than 57 mm (2.244 in)
B: 18 – 21 mm (0.7087 – 0.8267 in)
C: Less than 29.5 mm (1.161 in)

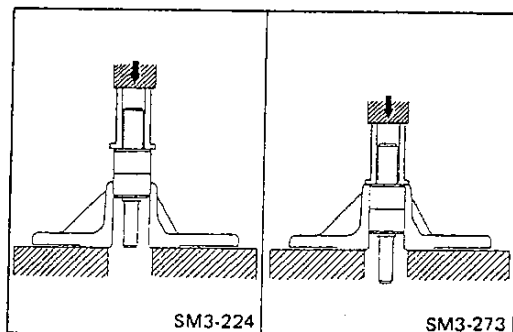

IMPORTANT POINTS – ASSEMBLY


USING A STEEL PIPE AND PRESS, INSTALL THE SHAFT TO THE CASE.

NOTE: Bearing face must be aligned with edge of body.

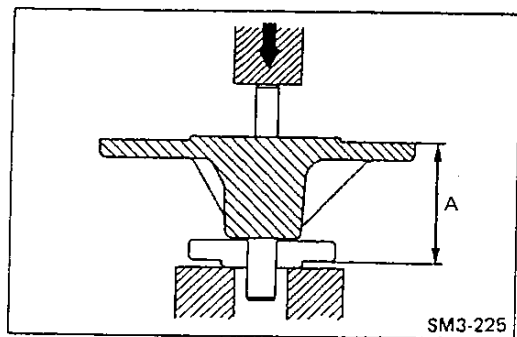


USING A PRESS, INSTALL THE PULLEY CENTER.

DIMENSION (A): 61.5 mm (2.421 in) for W04D, W04C-T
90 mm (3.543 in) for W04C-TI

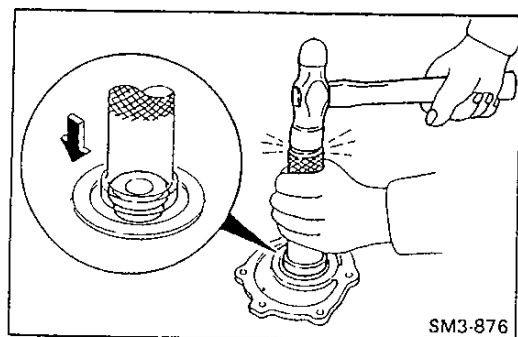

INSTALL THE NEW COOLANT SEAL.


1. Apply a little liquid sealer to the coolant seal outer circumference and coolant pump body.
2. Install the slinger and coolant seal.

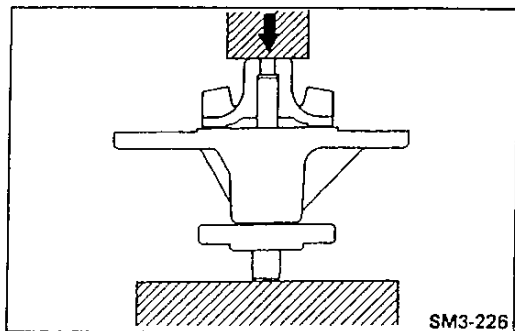

USING A PRESS, INSTALL THE VANE TO THE SHAFT.

NOTE: Apply a little engine oil to the coolant seal face.

AFTER THE COOLANT PUMP HAS BEEN ASSEMBLED, CHECK THAT THE SHAFT ROTATES SMOOTHLY.

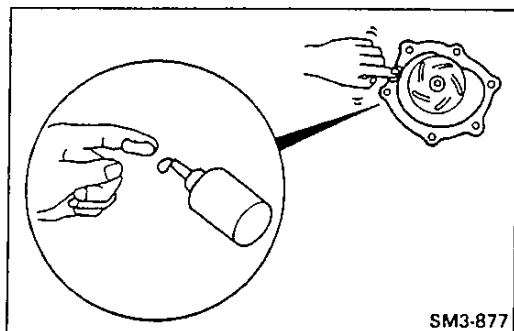

IMPORTANT POINT – MOUNTING

INSTALL THE COOLANT PUMP TO THE TIMING GEAR COVER.


1. Clean the contacting surface of the coolant pump and timing gear cover free of old sealer, water and oil.
2. Apply the liquid gasket as shown and install the coolant pump within 20 minutes.

NOTE: If leaving it more than 20 minutes, clean the liquid gasket completely and reapply the liquid gasket.

Coating Width: 1.5–2.5 mm (0.06–0.10 in)


HEAT EXCHANGER

DESCRIPTION

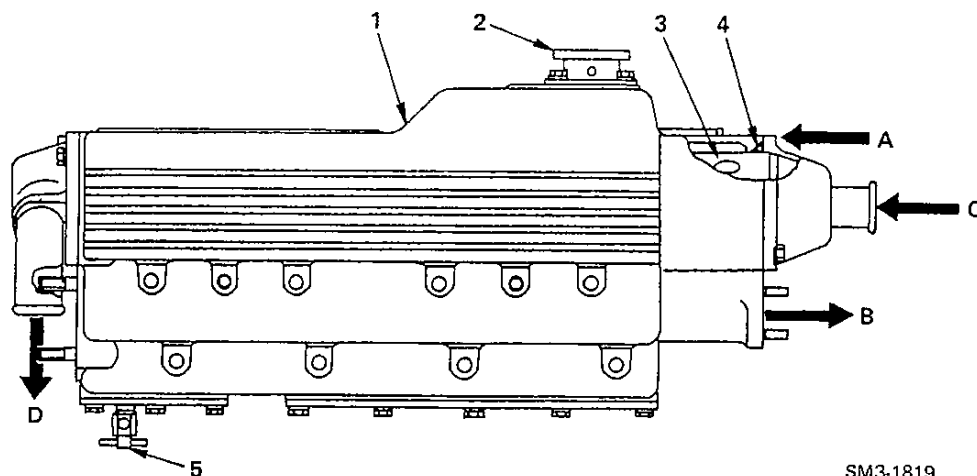

SM3-1819


OVERHAUL

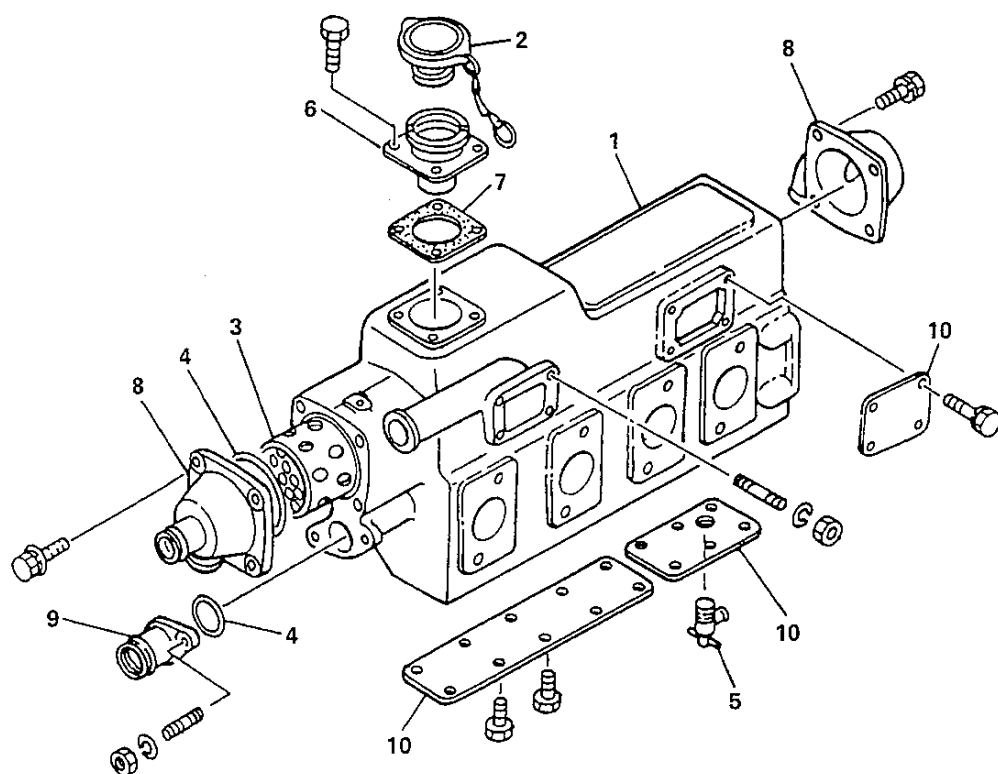

- 1. Housing
- 2. Cap
- 3. Element
- 4. O-Ring
- 5. Engine coolant drain cock

- 6. Filler pipe seat
- 7. Gasket
- 8. Water gallery cover
- 9. Coolant pipe
- 10. Plate




- A. Engine coolant inlet
- B. Engine coolant outlet
- C. Seawater inlet
- D. Seawater outlet

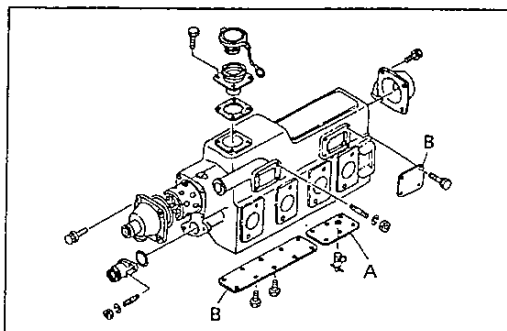**IMPORTANT POINTS – ASSEMBLY****ASSEMBLE THE HEAT EXCHANGER.**


- NOTE:**
- Replace the O-rings and gasket with new ones.
 - Before installing the plates "A" and "B", apply sealing compound (Three bond No. TB-1207C or equivalent).
 - When installing the plate "A" on the heat exchanger, the "O" mark should face outside.

INSPECTION AND REPAIR

Unit: mm (in)

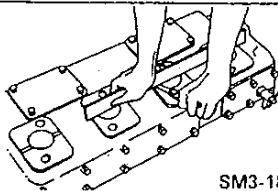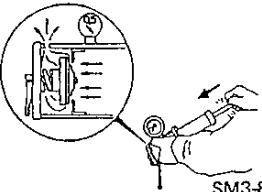Inspection Item	Standard	Limit	Remedy	Inspection Procedure
Heat exchanger (Exhaust Manifold). Flatness	Less than 0.1 (0.0039)	0.5 (0.019)	Resurface or replace.	 SM3-1858
Element. Clogged.	—	—	Clean with compressed air or sodium hydroxide	Visual check  SM3-1800
Coolant filler cap valve opening pressure.	0.4–0.6 kg/cm ² (5.7–8.5 lb/sq.in)	—	Replace	 SM3-823


THERMOSTAT

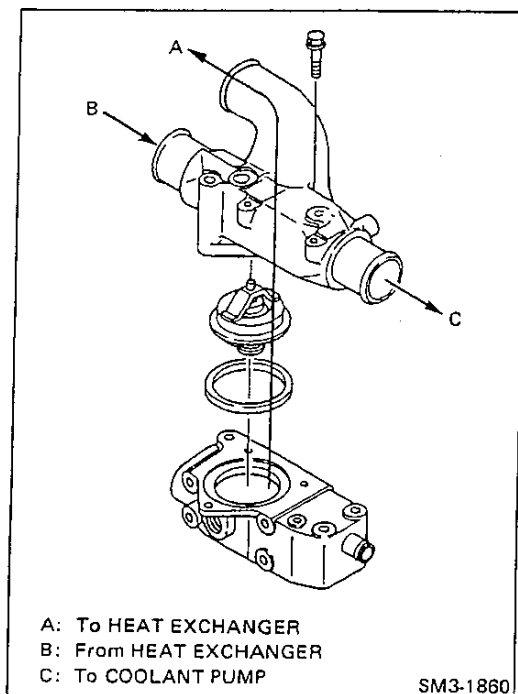

IMPORTANT POINT – ASSEMBLY

INSTALL THE THERMOSTAT.

1. Remove water and dirt adhering to the thermostat case.
2. Replace the gasket without fail if it is corroded, damaged or flattened.
3. Before installing the thermostat, apply sealing compound to the hose installation portion of the coolant manifold.
4. Assemble the thermostat, gasket, case and coolant manifold as shown.

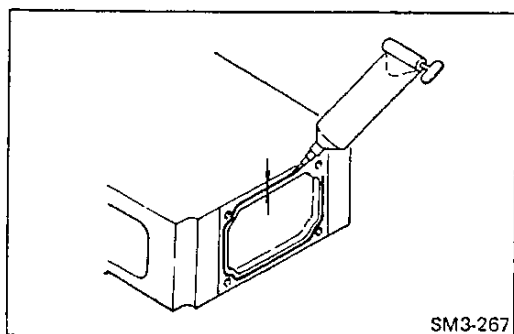

IMPORTANT POINT – MOUNTING

INSTALL THE THERMOSTAT CASE.

1. Clean the faces.
2. Apply the liquid gasket as shown and install the thermostat case on the cylinder head within 20 minutes.

NOTE: If leaving it more than 20 minutes, clean the liquid gasket completely and reapply the liquid gasket.

Coating Width: 1.5–2.5 mm (0.06–0.10 in)

INSPECTION AND REPAIR

Unit: mm (in)

Inspection Item	Standard	Limit	Remedy	Inspection Procedure
Thermostat Valve Opening Temperature	74.5–78.5°C (166–173°F)	—	Replace thermostat	STIRRING ROD THERMOMETER THERMOSTAT SUPPORTER THERMOSTAT HEATER
Thermostat Valve Lift	At least 10 (0.4) at 90°C (194°F)	—		
Thermostat Closing Condition	Fully opened valve should close completely within 5 minutes when thermostat is immersed in water of normal temperature.	—		


SM3-888

AIR INTAKE AND EXHAUST SYSTEM

OVERHAUL

ME11-040-00X07 (1320)

Model W04D

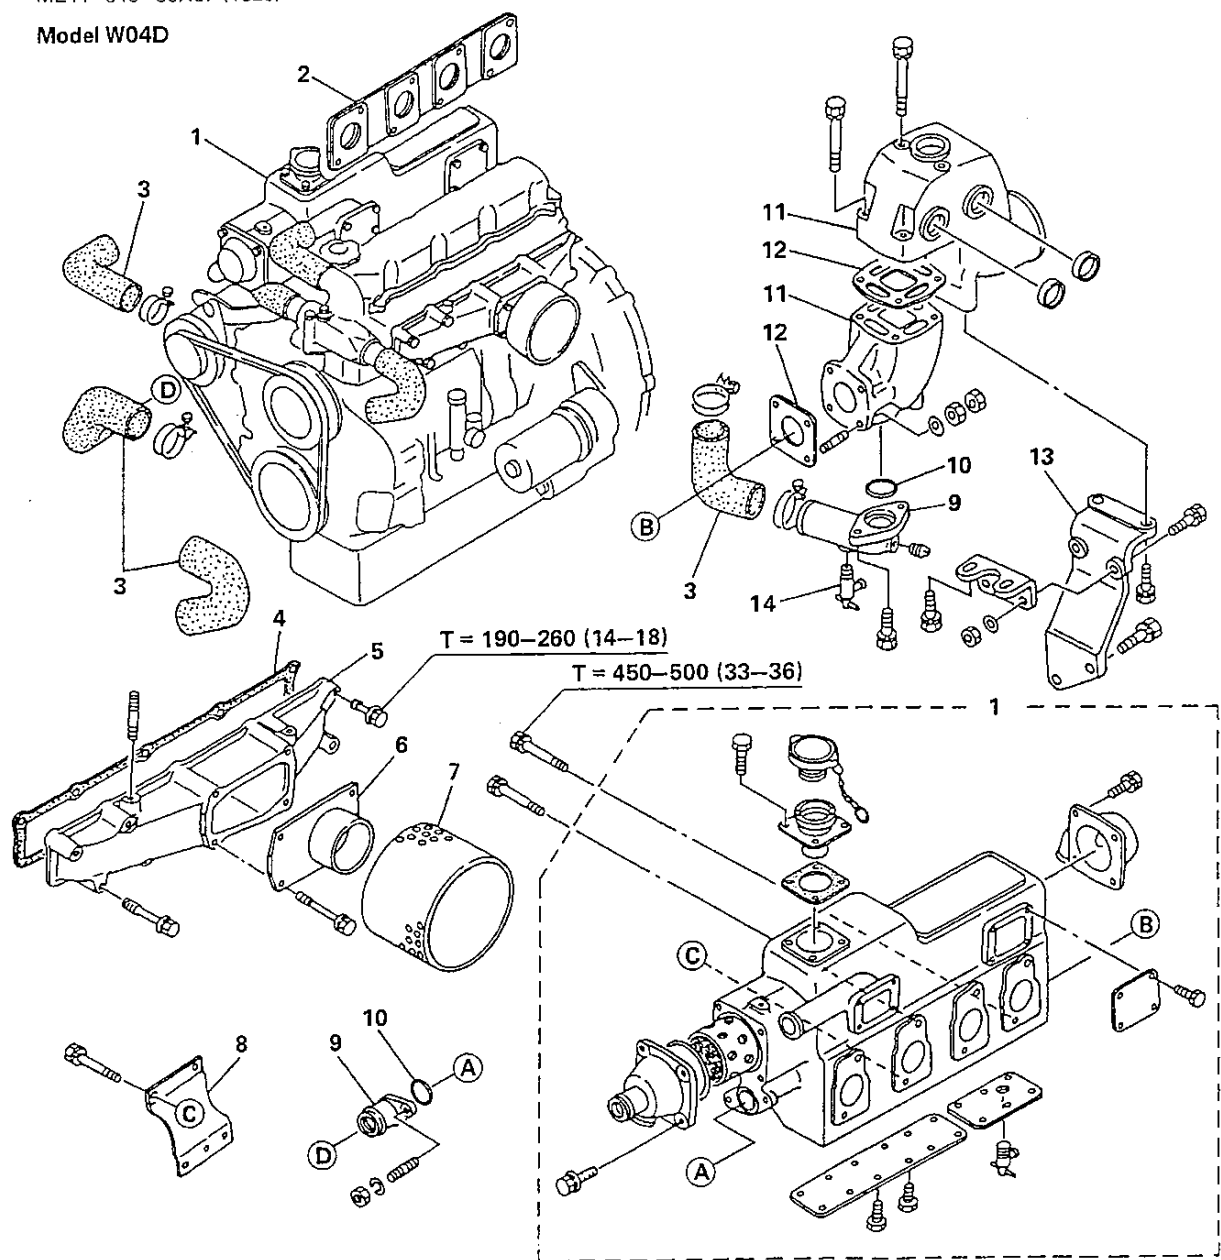

SM3-1837

T = Tightening torque: kg·cm (lb·ft)


1. Heat exchanger (Exhaust manifold)
2. Exhaust manifold gasket
3. Water hose
4. Intake manifold gasket
5. Intake manifold
6. Intake pipe
7. Air cleaner

8. Heat exchanger bracket
9. Water pipe
10. O-ring
11. Exhaust pipe
12. Gasket
13. Exhaust pipe bracket
14. Drain cock

OVERHAUL

HE11-038-00X03


Model W04C-T

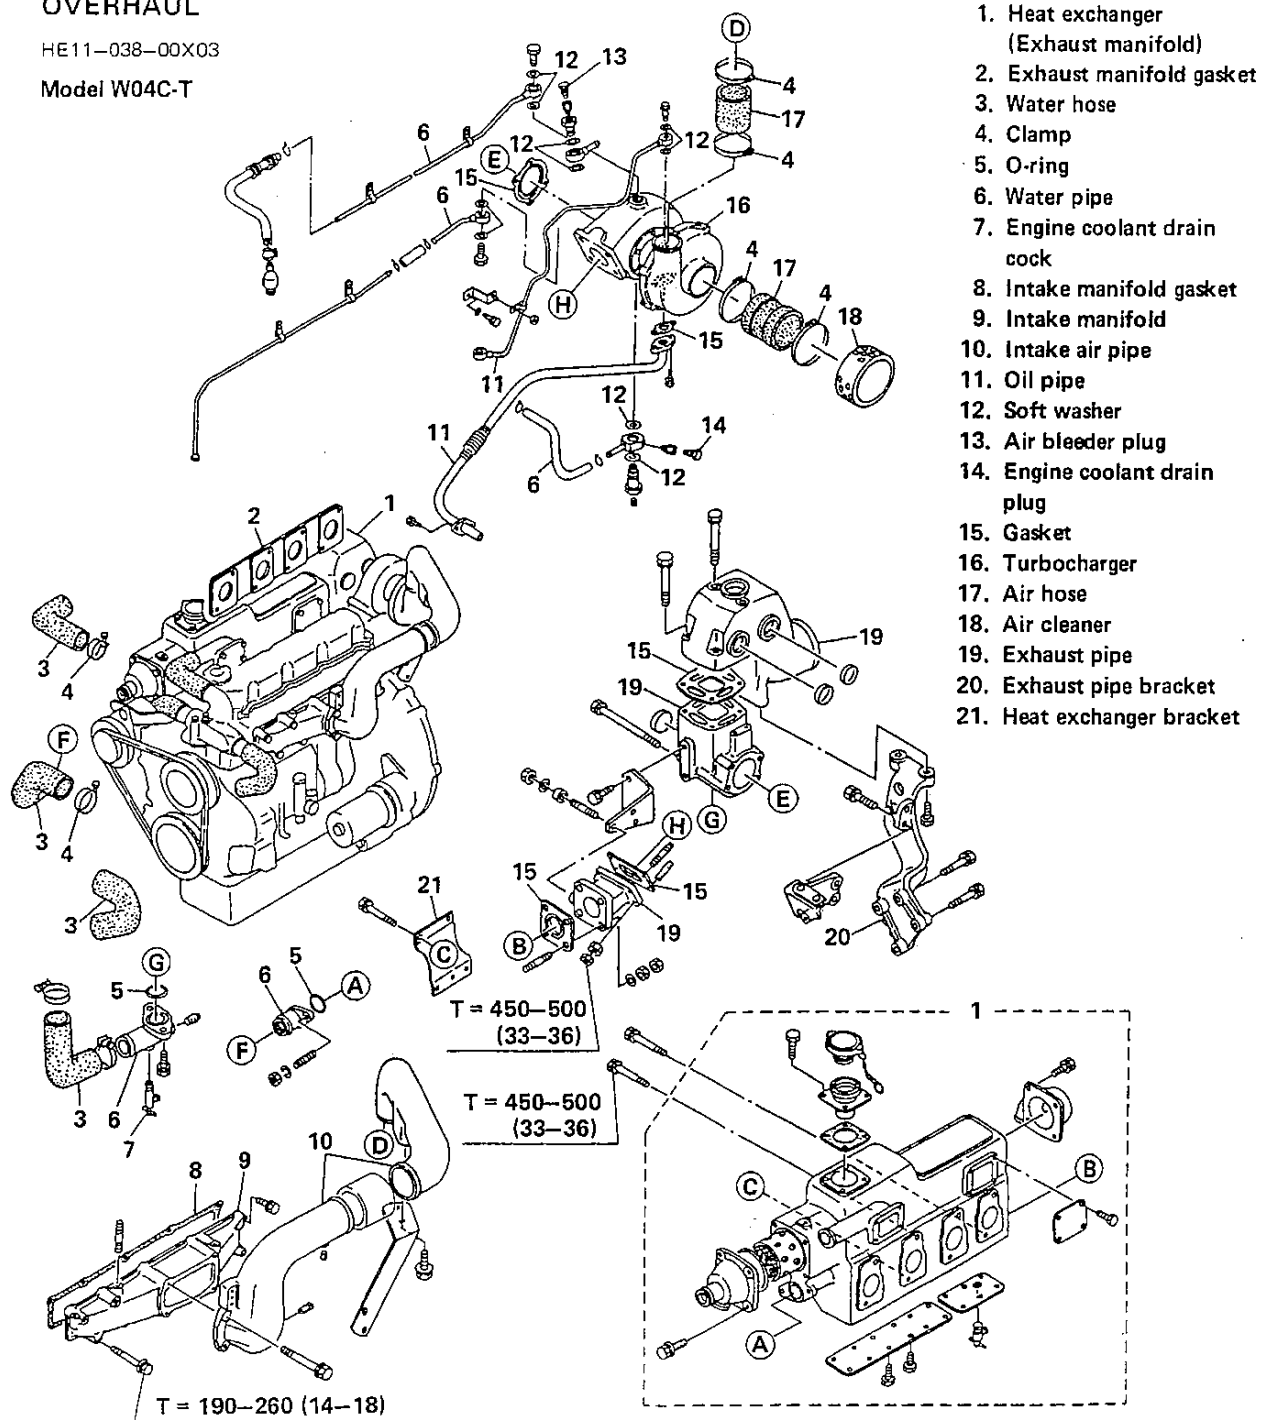


OVERHAUL

HE11-039-00X05, 06

Model W04C-T1

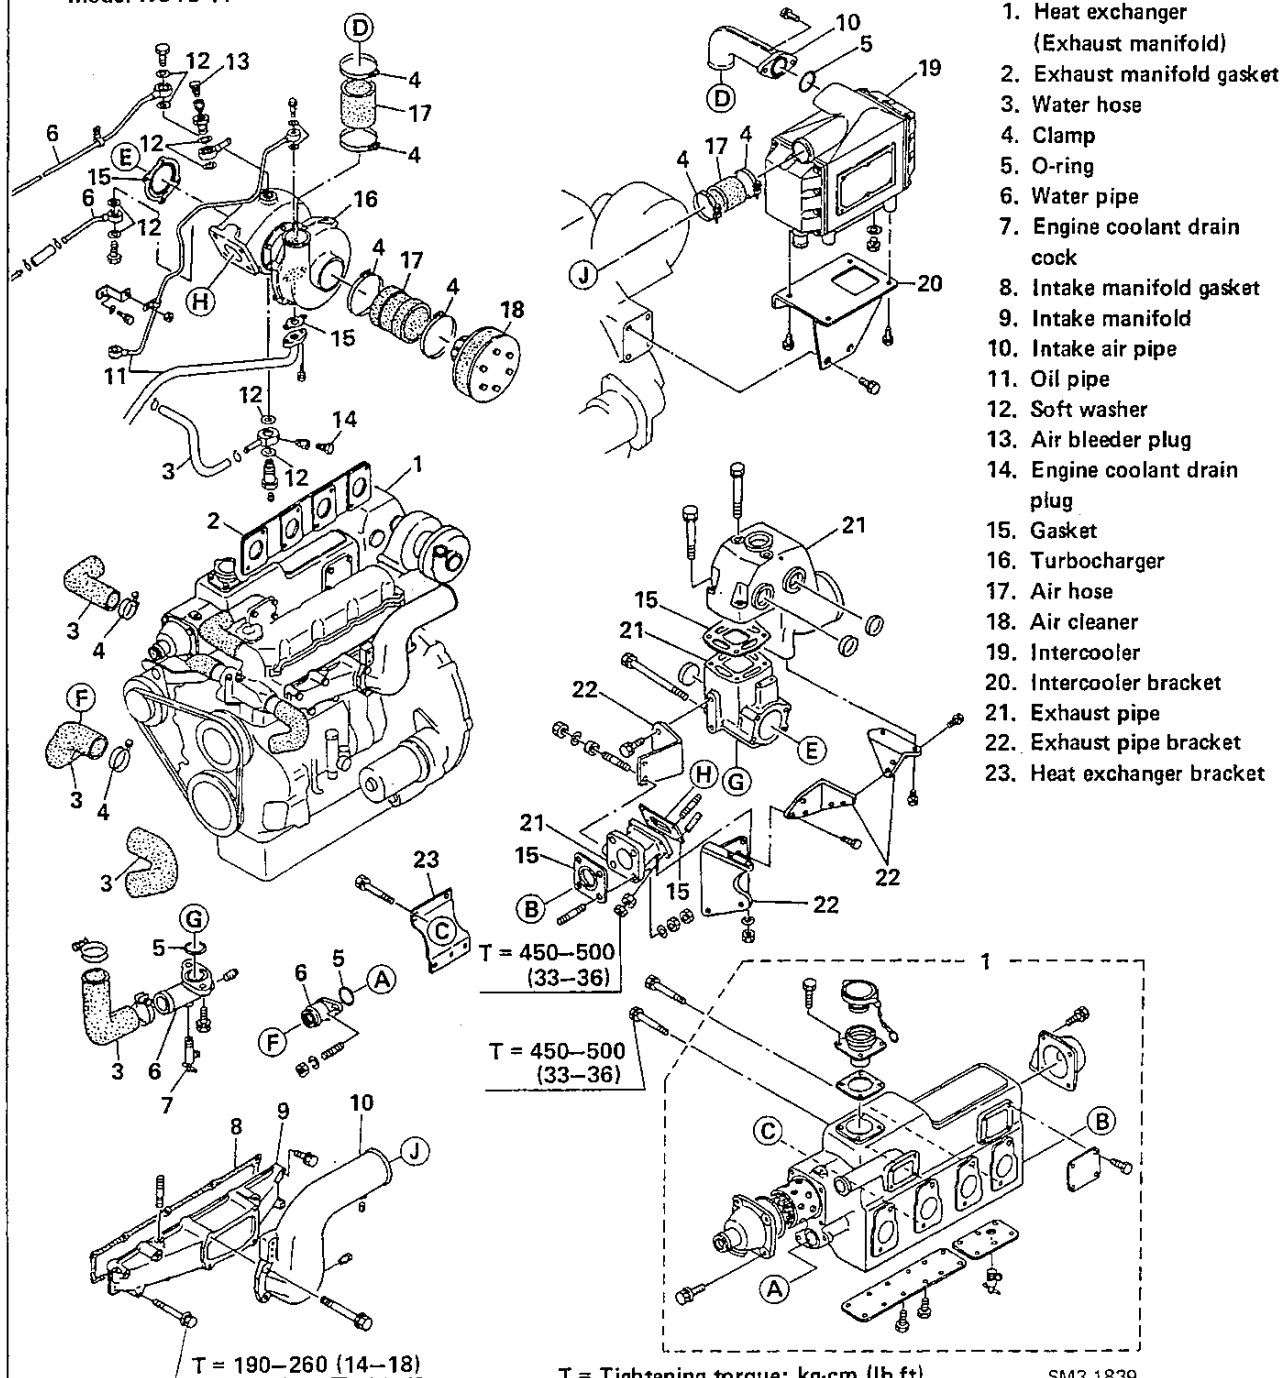

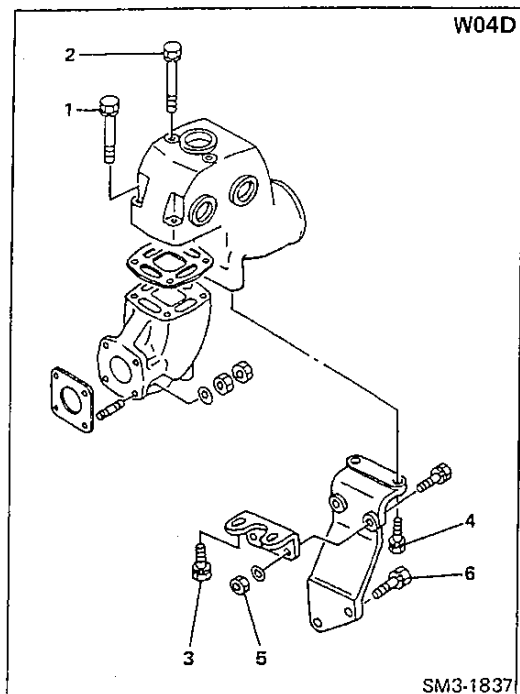**IMPORTANT POINTS – MOUNTING****INSTALL THE EXHAUST PIPES.**


1. Install the connector and turbocharger on the heat exchanger (For W04C-T and W04C-TI).

Tightening Torque: 450–500 kg·cm (33–36 lb·ft)


2. Temporarily install the mounting brackets and exhaust pipes.
3. Tighten the bolts to the specified torque in the tightening order as shown.

Tightening Torque:**For W04D**

- 1 : 500–600 kg·cm (37–43 lb·ft)
- 2 : 500–600 kg·cm (37–43 lb·ft)
- 3 : 500–600 kg·cm (37–43 lb·ft)
- 4 : 450–500 kg·cm (33–36 lb·ft)
- 5 : 450–500 kg·cm (33–36 lb·ft)
- 6 : 1,000–1,300 kg·cm (73–94 lb·ft)

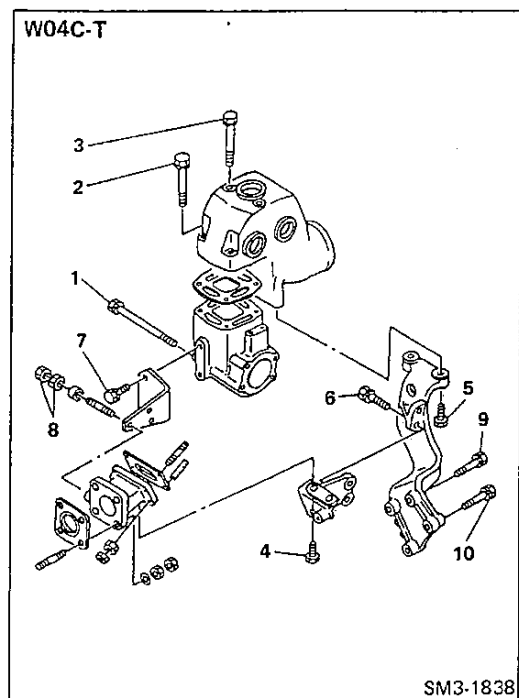**For W04C-T**

- 1 : 190–270 kg·cm (14–19 lb·ft)
- 2 : 400–600 kg·cm (37–43 lb·ft)
- 3 : 500–600 kg·cm (37–43 lb·ft)
- 4 : 450–500 kg·cm (33–36 lb·ft)
- 5 : 350–400 kg·cm (26–28 lb·ft)
- 6 : 350–400 kg·cm (26–28 lb·ft)
- 7 : 350–400 kg·cm (26–28 lb·ft)
- 8 : 450–500 kg·cm (33–36 lb·ft)
- 9 : 1,000–1,300 kg·cm (73–94 lb·ft)
- 10 : 500–600 kg·cm (37–43 lb·ft)

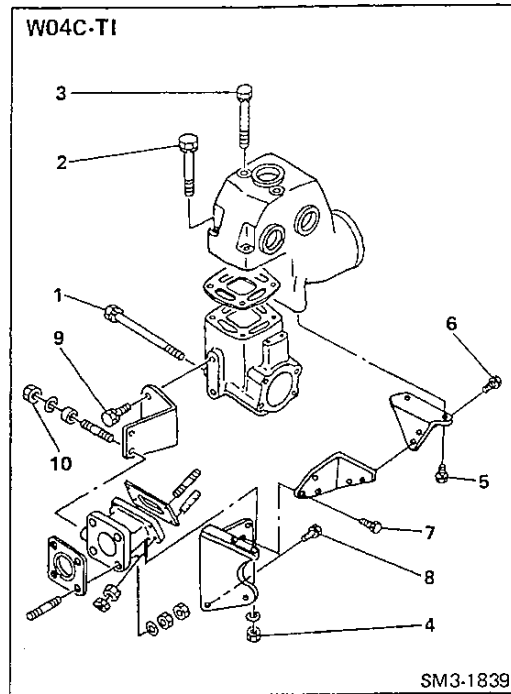

For W04C-TI

- 1 : 190–270 kg·cm (14–19 lb.ft)
- 2 : 500–600 kg·cm (37–43 lb.ft)
- 3 : 500–600 kg·cm (37–43 lb.ft)
- 4 : 450–500 kg·cm (33–36 lb.ft)
- 5 : 350–400 kg·cm (26–28 lb.ft)
- 6 : 350–400 kg·cm (26–28 lb.ft)
- 7 : 350–400 kg·cm (26–28 lb.ft)
- 8 : 1,000–1,300 kg·cm (73–94 lb.ft)
- 9 : 350–400 kg·cm (26–28 lb.ft)
- 10 : 450–500 kg·cm (33–36 lb.ft)

MEMO


<https://truckmanualshub.com/>

ENGINE COMPONENT PARTS DISMOUNTING AND MOUNTING

SPECIAL TOOL

Prior to starting an engine overhaul, it is necessary to have these special tools.


TIMER SETTING TOOL

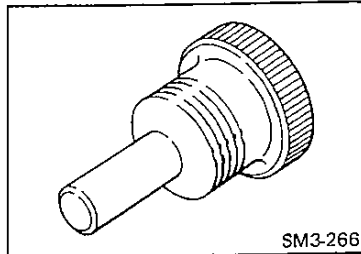


SM3-266

09512-2090 for W04D
09512-2100 for W04C-T, W04C-TI
W06D, W06D-TI, W06E

V-BELT TENSION GAUGE

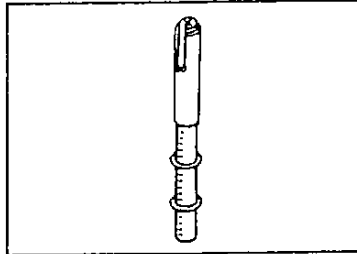

09444-1210

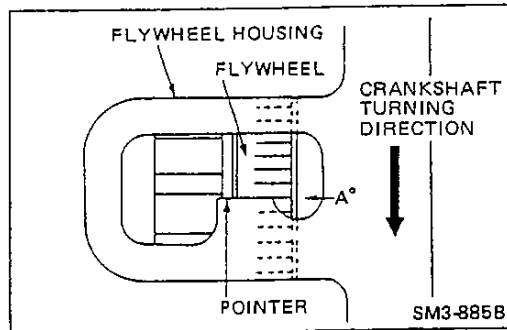

SM3-885B

FUEL INJECTION PUMP

IMPORTANT POINTS – DISMOUNTING


REMOVE THE FUEL INJECTION PUMP.

1. Disconnect the fuel lines, oil lines and engine control lines.
2. Turn the crankshaft counter-clockwise viewed from the flywheel side to align the injection timing mark on the flywheel at A° before top dead center for No.1 cylinder on compression stroke with the pointer on the flywheel housing.

Injection Timing (A°): Refer to SECTION DATA AND SPECIFICATIONS.


NOTE: In case of marine engine equipped with seawater pump, never rotate crankshaft in reverse direction (Clockwise viewed from the flywheel side).

Reverse rotation may damage impeller in seawater pump.

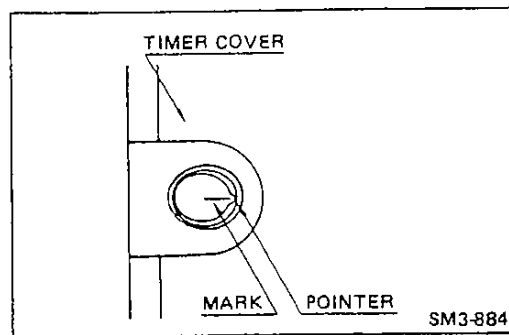

SM3-884

3. Remove the timing inspection hole plug.
Check that the injection timing mark on the automatic timer is aligned with timer cover pointer.

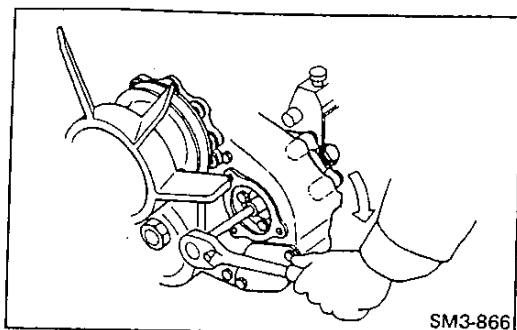


4. If not, remove the timing gear cover and then loosen the drive gear fitting bolts.

NOTE: Do not remove the drive gear fitting bolts.

5. Rotate the drive gear clockwise to align the injection timing and then tighten the drive gear fitting bolts.

Tightening Torque: 300–350 kg-cm (22–25 lb.ft)

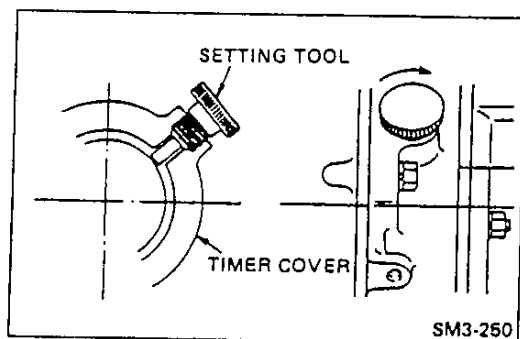


6. Lock the coupling flange with a special tool.

Special Tool:

Timer Setting Tool


(09512-2090) for W04D

(09512-2100) for W04C-T, W04C-T1, W06D, W06D-T1, W06E

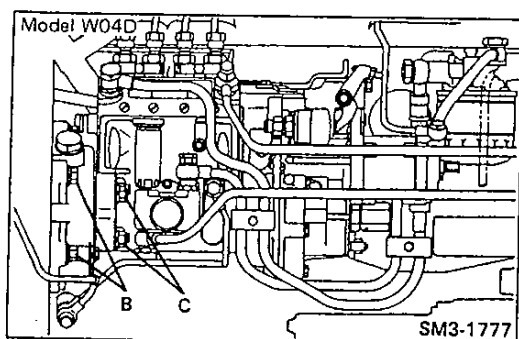

7. Loosen the timer cover fitting bolts (B) and then remove the injection pump with timer cover.

NOTE: Do not loosen the injection pump body fitting nuts (C).

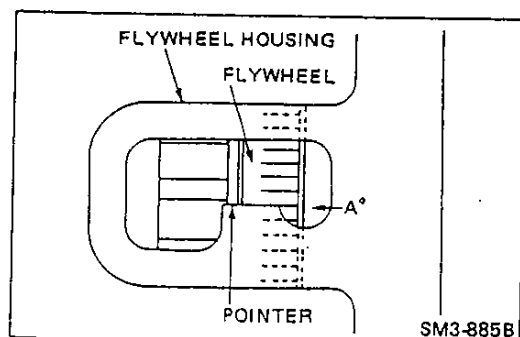


IMPORTANT POINTS – MOUNTING



INSTALL THE INJECTION PUMP.

1. Check that the injection timing mark on the flywheel is aligned with flywheel housing pointer.

Injection Timing (A°): Refer to SECTION DATA AND SPECIFICATIONS.

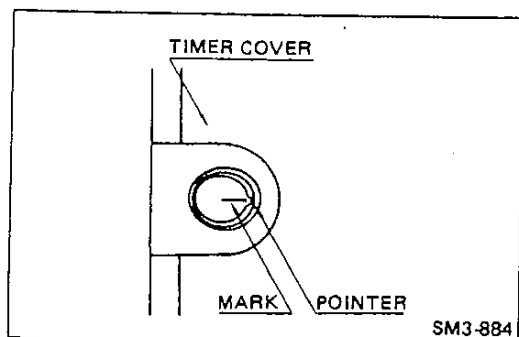

2. Check that the injection timing mark on the automatic timer is aligned with timer cover pointer.
If not, adjust the injection timing.

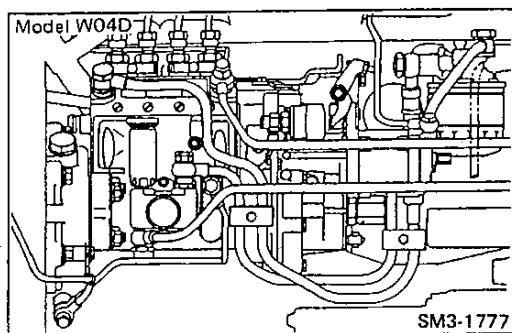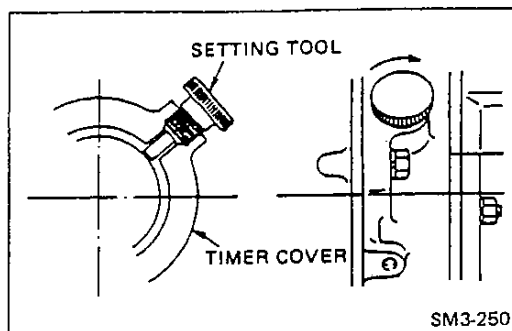

3. Lock the coupling flange with a special tool.

Special Tool:

Timer Setting Tool

(09512-2090) for W04D

(09512-2100) for W04C-T, W04C-TI, W06D, W06D-TI, W06E

4. Install the injection pump with timer cover.

Fitting Bolts Tightening Torque:

190–260 kg-cm (14–18 lb.ft)

5. Remove a special tool and install the timing inspection hole plug.
6. Connect the fuel lines, oil lines and engine control lines.

GENERATOR

IMPORTANT POINT – MOUNTING

INSTALL THE GENERATOR ON THE ENGINE.

1. Install the V-belts, and adjust the belt tension.

NOTE: ○ Do not under any circumstances apply the lever directly against the generator body owing to the risk of damaging the generator.

- When installing a new V-belt or adjusting the tension, be sure to repeat the adjustment two or three times, after running the engine for several minutes each time.

2. V-belt deflection


Apply a load of about 10 kg (22 lb) by pressing with your finger or a special tool.

Assembly Standard (A): 10–15 mm (0.40–0.59 in)

Special Tool: V-belt tension gauge (09444-1210)


NOTE: If the belt is excessively tensioned, there is a risk of damaging the bearings of the generator or coolant pump and also shorting the life of the V-belt.

Conversely, if there is insufficient tension on the V-belt, the belt, will slip, unusual noise will be emitted, the battery may run down and the engine may overheat.

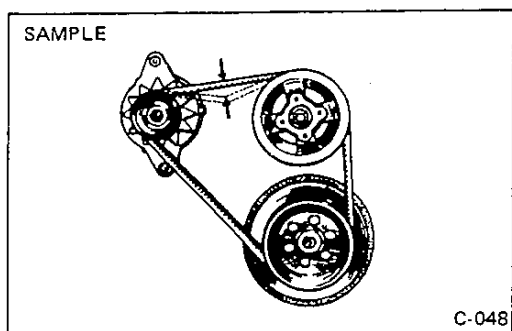

Through Bolt Tightening Torque:

450–500 kg-cm (33–36 lb.ft)

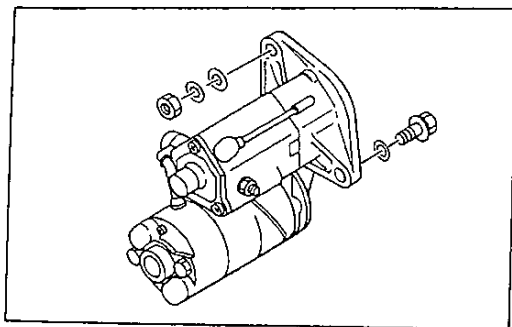

STARTER

IMPORTANT POINT – DISMOUNTING

REMOVE THE STARTER FROM THE ENGINE.

1. Turn off the battery switch (If so equipped).
2. Put the match marks on the harness and starter terminals with a pen and then disconnect the harness.
3. Remove the starter from the engine.

IMPORTANT POINT – MOUNTING

INSTALL THE STARTER ON THE ENGINE.

1. Install the starter on the engine.

Fitting Bolt and Nut Tightening Torque:


12 mm (0.47 in) dia. : 650–900 kg·cm (47–65 lb.ft)

14 mm (0.55 in) dia. : 1,100–1,500 kg·cm (80–108 lb.ft)

2. Connect the starter harness to match the marks.

ENGINE TUNE-UP

NOTE: In case of marine engine equipped with seawater pump, never rotate the crankshaft in reverse direction (Clockwise viewed from flywheel). Reverse rotation may damage impeller in seawater pump.

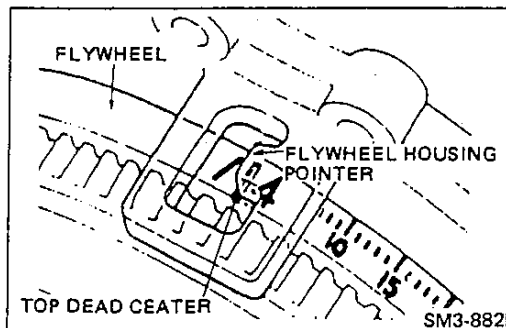

VALVE CLEARANCE

INSPECTION AND ADJUSTMENT OF THE VALVE CLEARANCE


1. Set the No. 1 piston to top dead center on compression stroke.

2. With the No. 1 piston positioned at top dead center and of the compression stroke, adjust the No. 1 valve clearance using a thickness gauge.
The thickness gauge should move with a very slight pull.

Valve Clearance: Refer to SECTION DATA AND SPECIFICATIONS.

3. Adjust the other valves.
Turn the crankshaft counter-clockwise 180° viewed from flywheel side. Adjust the valve clearance for each cylinder in the firing order.


Firing Order: 1-3-4-2

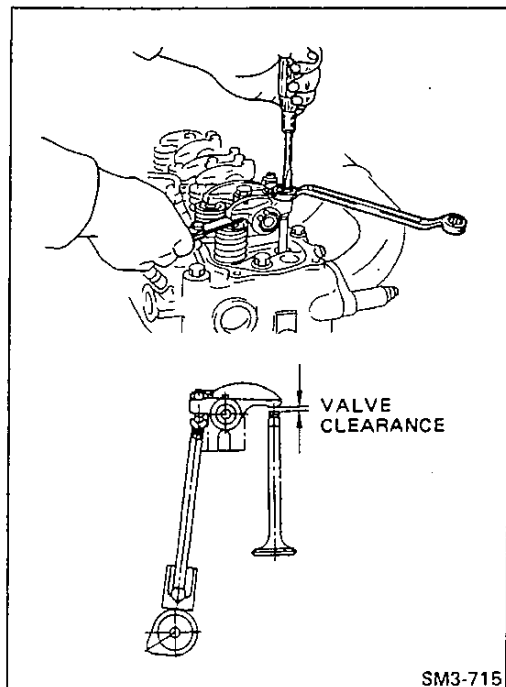


METHOD FOR DETERMINING IF THE NO. 1 OR NO. 4 PISTON IS AT THE TOP DEAD CENTER ON COMPRESSION STROKE.

Turning the crankshaft, align the mark "1-4" on the flywheel with the pointer on the flywheel housing. In this position either the No. 1 or No. 4 piston is at the top dead center on compression stroke.


1. If both the No. 1 intake and exhaust rocker arms can be moved easily by hand, the No. 1 piston is at top dead center on compression stroke.

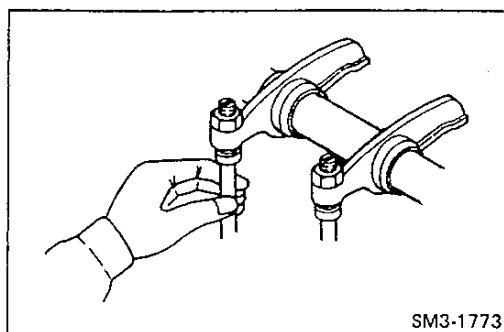

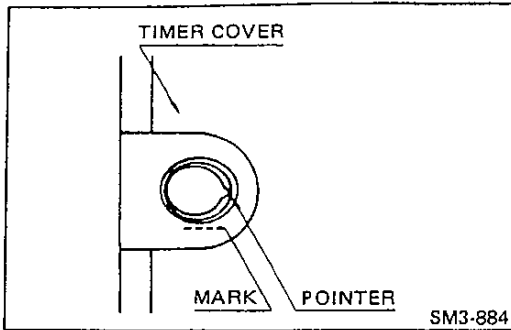


2. If the injection timing mark is nearly aligned with the pointer, the No. 1 piston is at top dead center on the compression stroke.

NOTE: If not, turn the crankshaft one complete revolution and align marks as above.

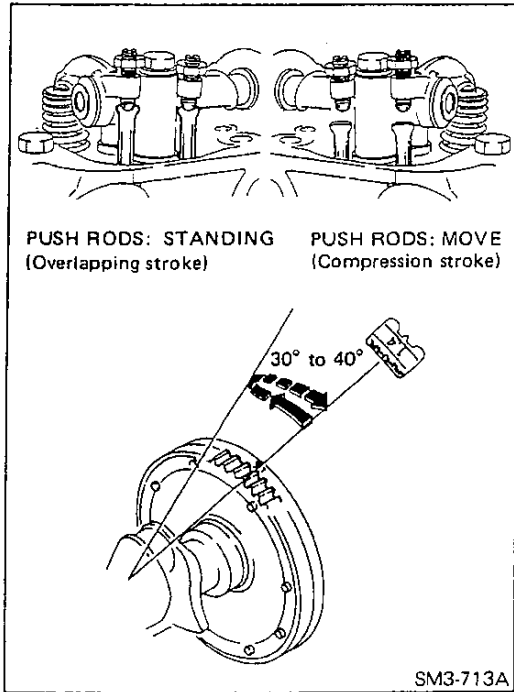

3. While locking at the push rod of No. 1 and No. 4 pistons. Turn the flywheel counter-clockwise and clockwise about 30° to 40° (see left figure).
If the piston whose exhaust and intake push rods do not move during the interval, it is at the top dead center on the compression stroke.
If the piston whose push rods have moved, it is at the completion of the exhaust and begun of the intake stroke (overlapping stroke).

NOTE: Always loosen the lock nut and raise the adjusting screws fully to the top. If the adjusting screws are too low, the piston and valves may strike each other during valve clearance adjustment.

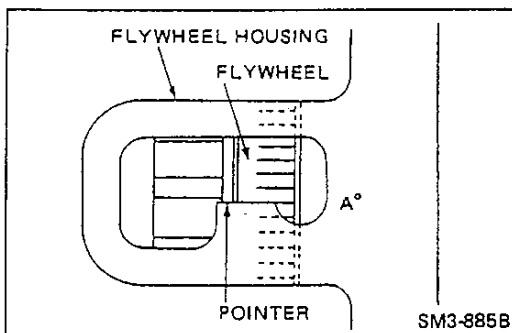

INJECTION TIMING

INSPECT THE INJECTION TIMING.


1. Turn the crankshaft counter-clockwise viewed from the flywheel side to align the injection timing marks on the flywheel at A° before top dead center for No. 1 cylinder on compression stroke with pointer on flywheel housing.


Injection Timing (A°): Refer to section **DATA AND SPECIFICATIONS**.

BTDC: Refer Top Dead Center

2. Check that the injection timing mark on the automatic timer is aligned with timer cover pointer.
If not, adjust the injection timing.

NOTE: When adjusting the injection timing, refer to "FUEL INJECTION PUMP" in section **ENGINE COMPONENT PARTS DISMOUNTING AND MOUNTING** for details.

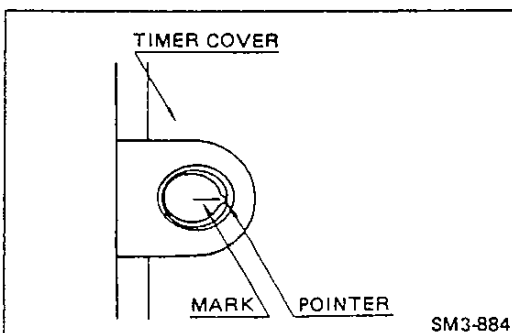

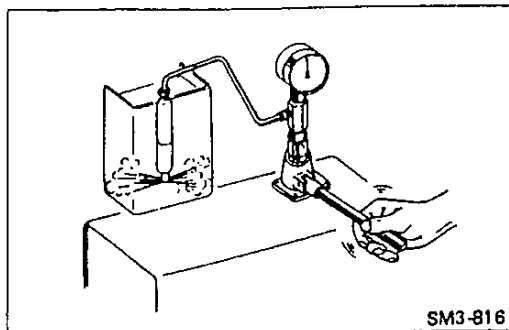

SM3-816

INJECTION NOZZLE

INSPECT AND ADJUST THE INJECTION PRESSURE.


Refer to "INJECTION NOZZLE" in SECTION FUEL SYSTEM.

TEST THE SPRAY PROFILE.

Refer to "INJECTION NOZZLE" in SECTION FUEL SYSTEM.

TEST THE FUEL LEAKAGE.

Refer to "INJECTION NOZZLE" in SECTION FUEL SYSTEM.

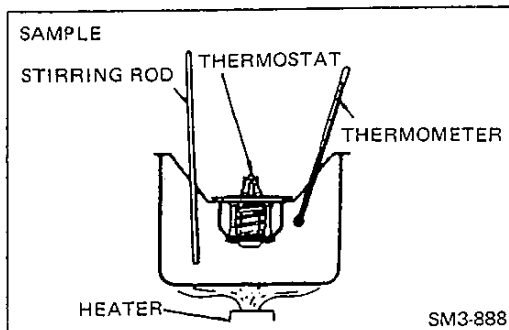

SM3-888


THERMOSTAT

INSPECT THE THERMOSTAT FUNCTION.


1. Place the thermostat in hot water and check the opening temperature and the lift.
2. Using a thermometer, check to see the thermostat opens at the specified temperature: Refer to "THERMOSTAT" in SECTION COOLING SYSTEM.
3. Immerse the thermostat in hot water and measure the lift of the pellet after a period of 5 minutes using vernier calipers. Measure the position of the bottom of the pellet before and after heating the thermostat.

Valve Lift: Refer to "THERMOSTAT" in SECTION COOLING SYSTEM.

4. Immerse a heated thermostat in water of normal temperature. If it completely closes within 5 minutes it is satisfactory. If it remains even slightly open, it is defective and must be replaced.

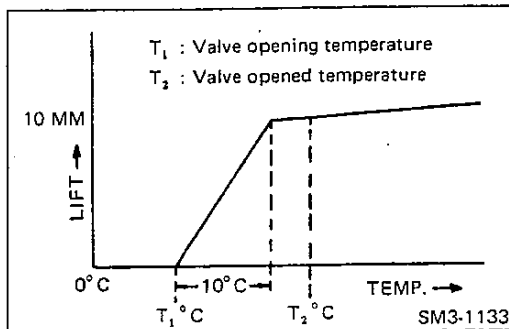

SM3-1133

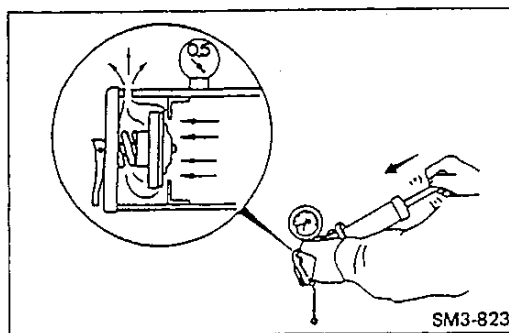

SM3-823

COOLANT FILLER CAP

INSPECT THE FILLER CAP FUNCTION.

Check the filler cap pressure using a cap tester.

0.5 : 0.4–0.6 kg/cm² (5.7–8.5 lb/sq.in)

0.9 : 0.75–1.05 kg/cm² (10.7–14.9 lb/sq.in)


NOTE: ○ The filler cap pressure is shown on the filler cap, and it should be confirmed.

- If the cap pressure is incorrect, there is a risk of abnormally high pressure being generated in the cooling system, which may cause the hose to drop off or burst and, in turn, damage the engine.

WARNING

Do not remove the cap while the engine and cooling system are still hot.

If the cap is removed while the engine and cooling system are still hot, scalding water and steam under pressure can be blown out. This can result personal injury.

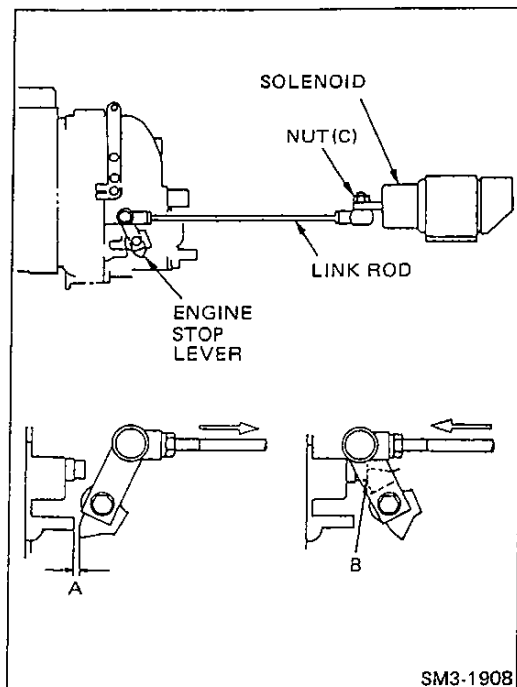

ENGINE CONTROL

ADJUST THE SOLENOID (ENGINE STOP) LINK ROD.

1. Adjust the link rod length so that the clearance between the stopper of the governor case and the engine stop lever becomes "A" when the solenoid plunger is fully pushed in.


Assembly Standard "A": 2–3 mm (0.08–0.11 in)

NOTE: ○ Install the link rod with the nut(c) at the top.

- If the clearance adjustment is unsatisfactory or the action of the solenoid is sluggish, solenoid seizure, insufficient output or engine stoppage may result.

2. After the above adjustment is over, move the link rod by hand and make sure that it moves lightly.
3. When the engine is running, the clearance between the engine stop lever and the stopper becomes "B".

Assembly Standard "B": 0 mm (0 in)

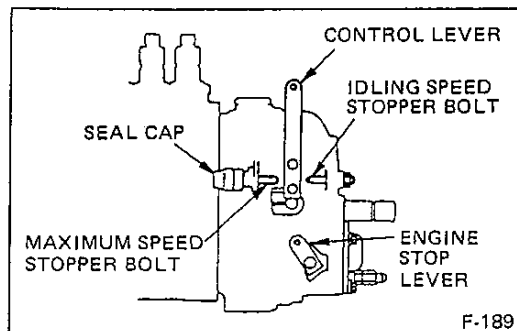

ADJUST THE ENGINE IDLING SPEED.

When straight drive navigation is not smoothly made at the time of a sea trial in engine at idle, adjust it according to the following procedures.

1. Disconnect the throttle control cable from engine port (left) side and the starboard (right) side.
2. Loosen the idling speed stopper bolt lock nut.
3. Adjust through varying the engine speed using the idling speed stopper bolt on the injection pump so that straight drive navigation is made.

NOTE:

Increase in engine speed: Turn the idling speed stopper bolt clockwise.


Decrease in engine speed: Turn the idling speed stopper bolt counter-clockwise.

Engine Idling Speed: Refer to section DATA AND SPECIFICATIONS.

4. Upon completion of adjustment of engine idling speed, lock the stopper bolt with nut and apply paint on the stopper bolt and nut.


NOTE: When adjusting the all adjusting devices on the fuel injection pump governor, except the idling speed stopper bolt, refer to CHAPTER GV, INJECTION PUMP GOVERNOR.

ENGINE TUNE-UP ON TEST BENCH

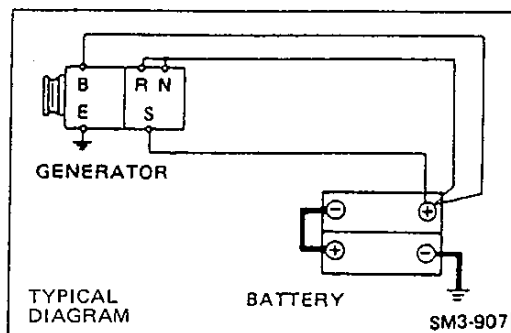


NOTE: In case of marine engine equipped with seawater pump

- Never rotate the crankshaft in reverse direction (Clock-wise viewed from flywheel). Reverse rotation may damage impeller in seawater pump.
- Do not run engine without water in the seawater cooling system. The seawater pump damage can result. Starting the engine when the generator is not connected to the battery may damage the generator. Always connect to the battery.

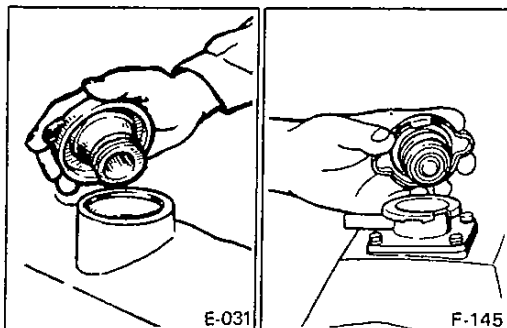

SET THE ENGINE ASSEMBLY ON A TEST BENCH.

1. Add the proper amount of the specified engine oil through the oil filler cap on the cylinder head cover.
2. Add coolant.

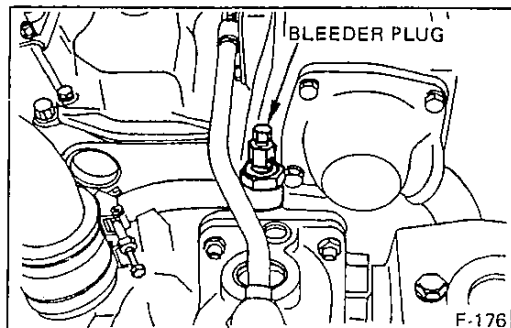

NOTE: In case of engine equipped with water-cooled turbocharger, bleed air from bleeder plug.






BLEED AIR FROM FUEL SYSTEM.

Refer to section FUEL SYSTEM.

CHECK THE INJECTION TIMING.

Refer to "FUEL INJECTION PUMP" in section ENGINE COMPONENT PARTS DISMOUNTING AND MOUNTING.

CHECK THE VALVE CLEARANCE.

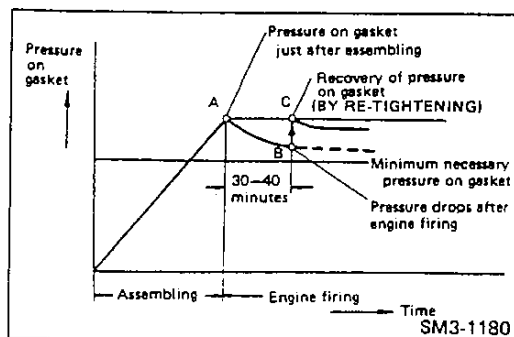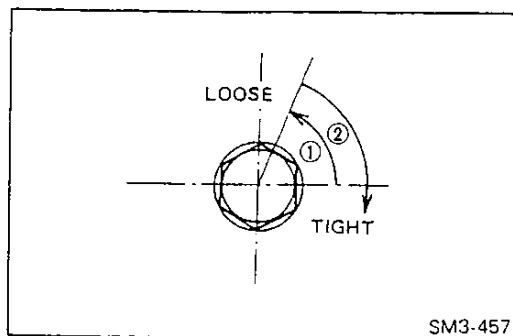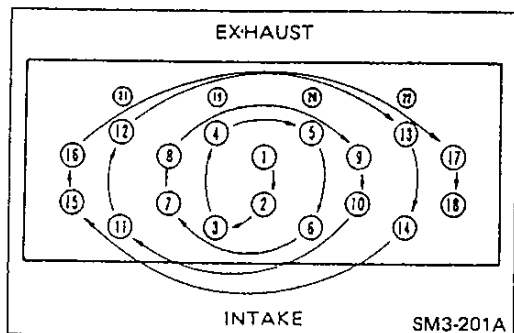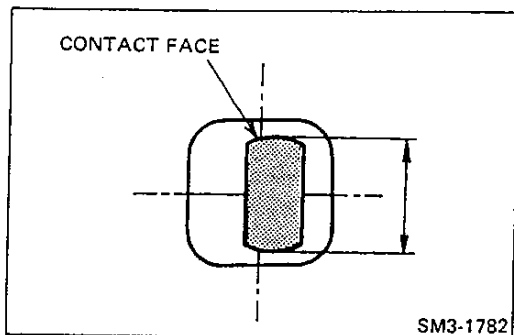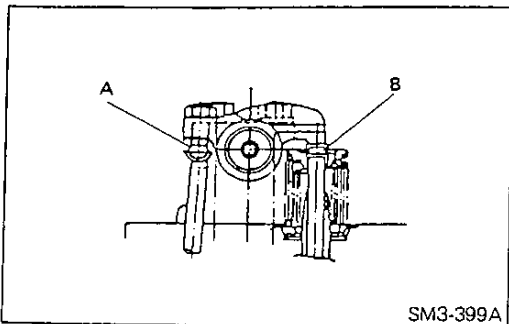

START THE ENGINE.

NOTE: Before starting the engine, make sure that the fuel cut lever of the fuel injection pump is operating normally.

1. Check the oil feed to rocker arms.
 - a. Set the engine speed: Refer to SECTION DATA AND SPECIFICATION.
 - b. Within one minute after starting the engine, oil should flow to the head (Face A) of all push rods and the head (Face B) of all valves. If the time required for the oil to flow to the rocker arms is long, various troubles such as seizing, abnormal wear and unusual noise may occur.
2. Check the contact of the rocker arm and valve stem caps. After running the engine, a contact of approx. 8 mm (0.315 in) should be obtained at the cap contact face of the rocker arm. If the contact face is one sided, the valve will tilt, resulting in valve seizure, breakage, damage, or wear of the rocker arm stem cap.
3. Retighten the cylinder head bolts. After tightening cylinder head bolt to specified torque, run the engine for about 30 to 40 minutes at a water temperature of about 80°C. Then loosen cylinder each head bolt 1/8-1/4 turn and retighten, in sequence, to specified torque.


Special Tool: Socket wrench (09411-1260)

- NOTE:**
- In case of marine engine equipped with heat exchanger (exhaust manifold), loosen the heat exchanger bracket fitting bolts before retightening the cylinder head bolts.
 - Be sure to loosen one bolt at a time, then retighten it before going on to the next bolt.
 - By retightening, face pressure of cylinder head is restored from point B to C as shown.
 - Retighten at the first 30 hours following servicing which involves the loosening or removal of any cylinder head bolt. Such servicing includes replacement of the cylinder head gasket, servicing of the valve gear parts, and the like.

RECHECK THE VALVE CLEARANCE, WHEN ENGINE IS COLD.

PROCEDURE FOR INSTALLING JOINTS AND GASKETS OF ENGINE PIPES


1. Gasket seal type (aluminum + rubber, asbestos or copper).

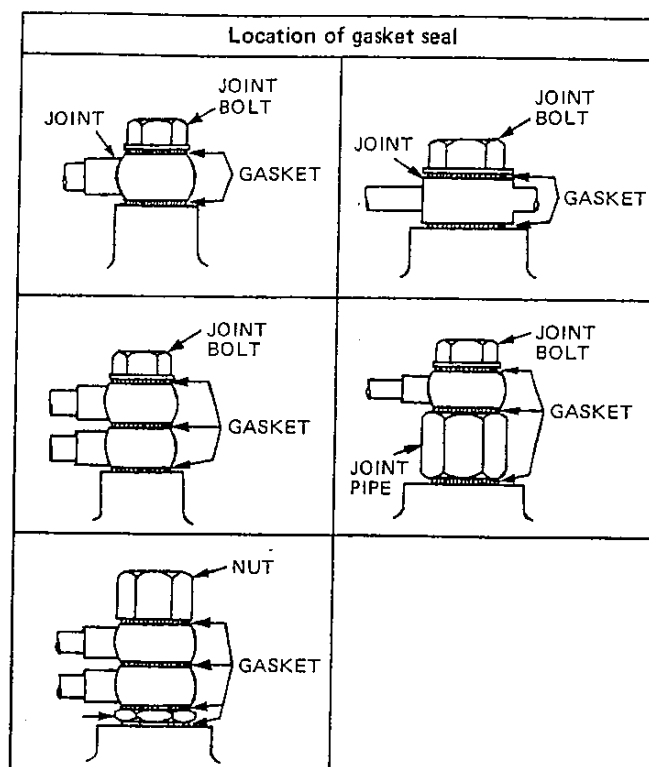

Tightening torque chart

Clamping screw size (Diameter) mm (in)	Tightening torque kg-cm (lb.ft)
8 (0.315)	120–170 (9–12)
10 (0.394)	180–230 (13–16)
12 (0.472)	230–280 (17–20)
14 (0.551)	230–280 (17–20)
16 (0.630)	300–350 (22–25)
18 (0.709)	400–450 (29–32)
20 (0.787)	400–450 (29–32)
22 (0.866)	530–600 (38–43)
24 (0.945)	720–800 (52–57)
28 (1.102)	1,300–1,500 (94–108)


2. Metal seal type (Flares connector type).

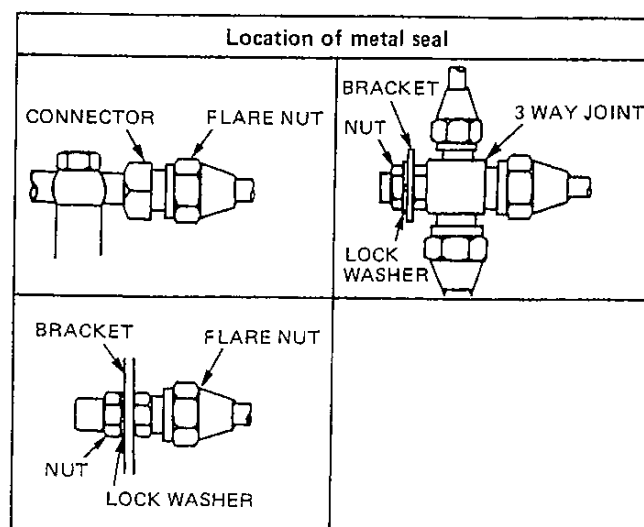

Tightening torque chart

Clamping screw size (Diameter) mm (in)	Tightening torque kg-cm (lb.ft)
12 (0.472)	200–220 (15–16)
14 (0.551)	330–360 (24–26)
16 (0.630)	400–500 (29–36)
18 (0.709)	600–700 (43–51)
20 (0.787)	650–700 (47–51)

3. Metal seal type (Nipples connectors type)

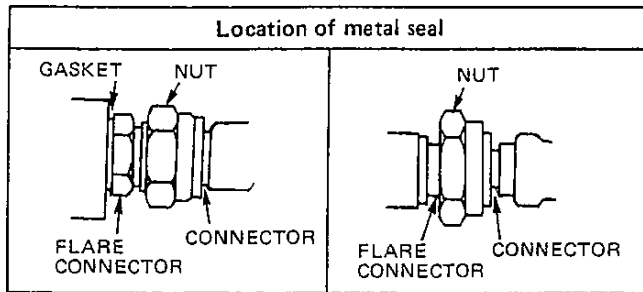


Tightening torque chart

Clamping screw size (Diameter) mm (in)	Tightening torque kg-cm (lb.ft)
10 (0.394)	100–150 (7–10)
20 (0.787)	200–250 (14–18)

- NOTE:**
- Before installing the joints, ensure that there is no dirt or burrs adhering to the various seat faces (pipe joints, gaskets, etc.)
 - Because the pipes can move relatively free during installation and the seat faces are liable to tilt, first temporarily tighten the pipes, then tighten them to specification and ensure that there is no leakage from them.
 - When tightening two pipes together, be very careful that they do not rotate together.
 - After installing the pipes, apply the correct pressure to each pipe joint and ensure that there is no leakage.
 - Ensure that the various tightening torques conform to the above table.
 - If a soft washer #4840 FR-N (aluminum + rubber and carbon press fit part) is loosened or removed subsequent to being installed, be sure and replace it with a new one.
There is no need to replace it, however, for normal retightening.

MARINE TRANSMISSION DISMOUNTING AND MOUNTING


OVERHAUL

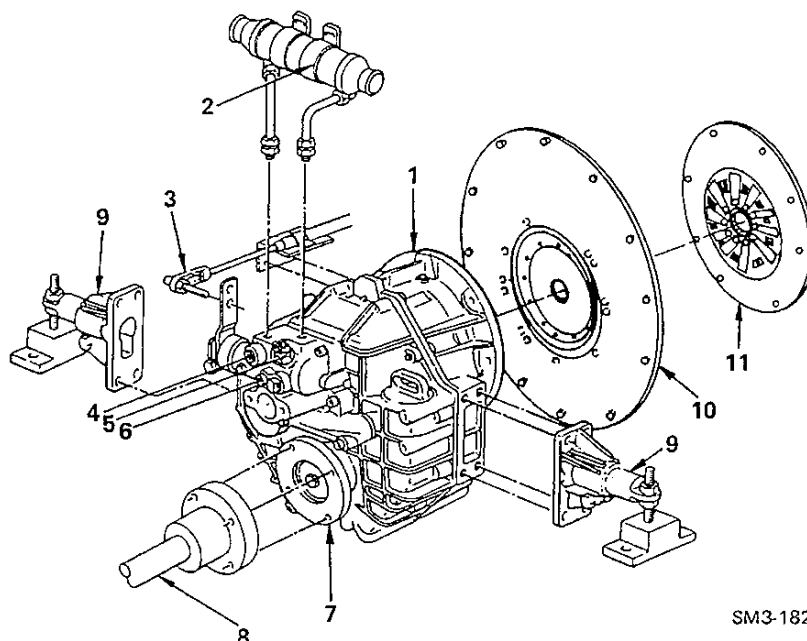

1. Marine transmission
2. Fluid cooler
3. Remote control
4. Connection for temperature gauge
5. Neutral safety switch
6. Connection for shifting pressure control
7. Marine transmission output flange
8. Propeller shaft
9. Support bracket
10. Intermediate flange
11. Torsion-elastic coupling
12. Clutch, side A
13. Loose gear
14. Clutch, side B
15. Intermediate shaft
16. Output shaft

SM3-1821


OPERATION

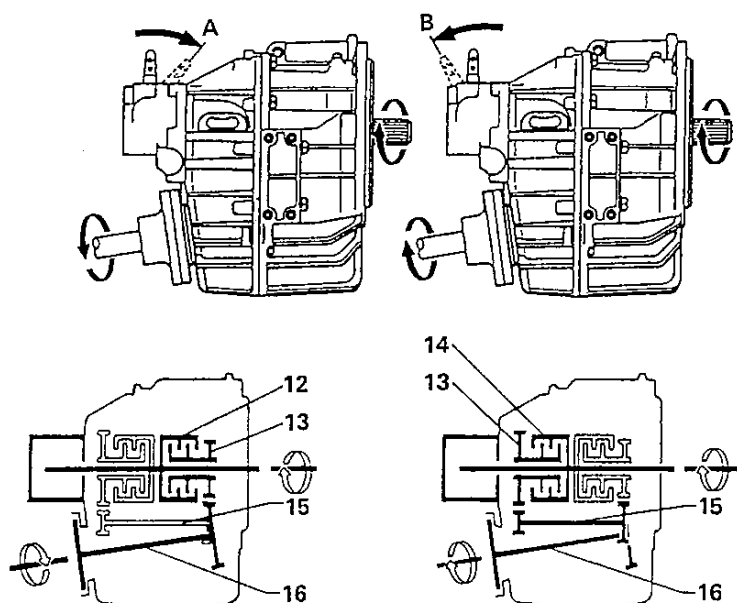

SM3-1822

Position of shifting lever when driving forward

Propeller pitch	Propeller ratio	Shifting lever in position
Right hand	Opposite to engine rotation	A
Left hand	As engine rotation	B

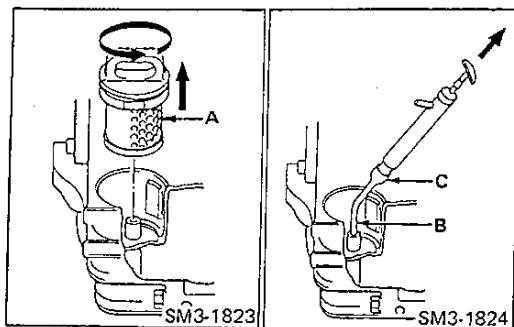**IMPORTANT POINTS – DISMOUNTING****PUMPING OUT MARINE TRANSMISSION FLUID.**

1. Turn the filter cover counter-clockwise to loosen the fluid fine filter (Item A).
2. Remove the filter cover complete with fluid fine filter.
3. Pump out old marine transmission fluid through suction pipe (Item B) in the filter compartment.

NOTE: Max. outside diameter of suction hose is 16 mm (0.625 in) (Item C).

DISCONNECT THE PROPELLER SHAFT (Item D) FROM THE MARINE TRANSMISSION OUTPUT FLANGE.



REMOVE THE FLUID COOLER WITH PIPES (Item E).

NOTE: Plug the openings of the line and marine transmission to prevent dirt entering.

DISCONNECT THE REMOVE CONTROL (Item F) FROM SHIFTING LEVER.

DISCONNECT THE ELECTRICAL LINE AND FLUID LINES.

REMOVE THE SUPPORT BRACKET (Item G).

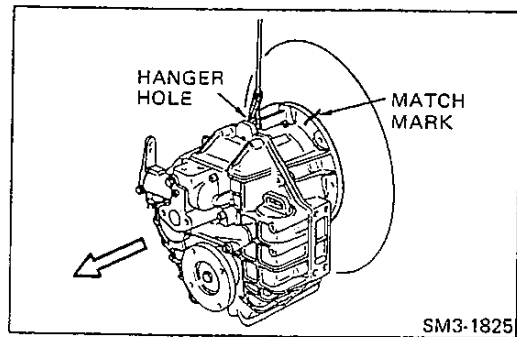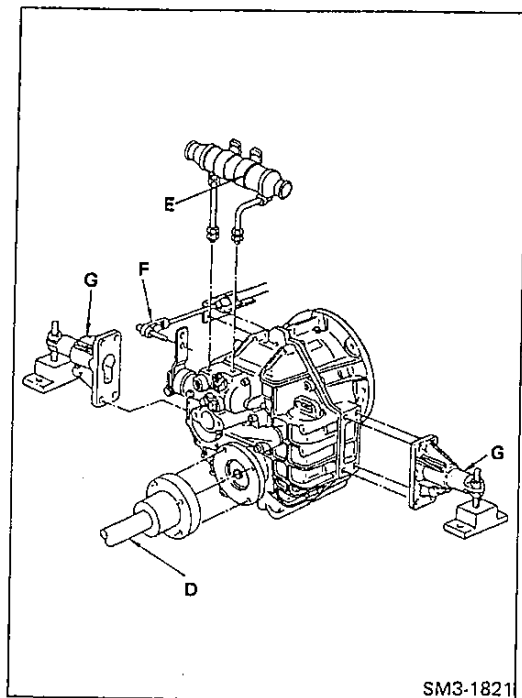**REMOVE THE MARINE TRANSMISSION.**


1. Put the match mark on the marine transmission and intermediate flange with a pen.
2. Suspend the marine transmission.

NOTE: The marine transmission without fluid and fluid cooler weights approx. 44 kg (97 lb).

3. Remove the marine transmission fitting bolts.
4. Pull the marine transmission away from the engine.

REMOVE THE INTERMEDIATE FLANGE FROM THE FLYWHEEL HOUSING.

Put the match mark on the intermediate flange and flywheel housing before removing.

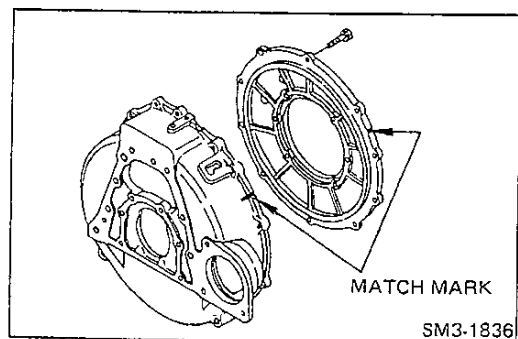
REMOVE THE TORSION-ELASTIC COUPLING FROM THE FLYWHEEL.

IMPORTANT POINTS – MOUNTING

INSTALL THE TORSION-ELASTIC COUPLING.

1. Install the torsion-elastic coupling to the flywheel.
2. Check the axial tolerances of the connection between marine transmission and engine.
 - a. Attach caliper linkage (Item H) to damper plate.
 - b. Apply base of caliper at right angles to plane surface of flywheel housing.
 - c. Pretension the gauge and set to "0".
 - d. Turn the flywheel slowly. The gauge reading must not exceed 0.1 mm (0.004 in).


"X" : Mounting surface of engine flywheel housing.

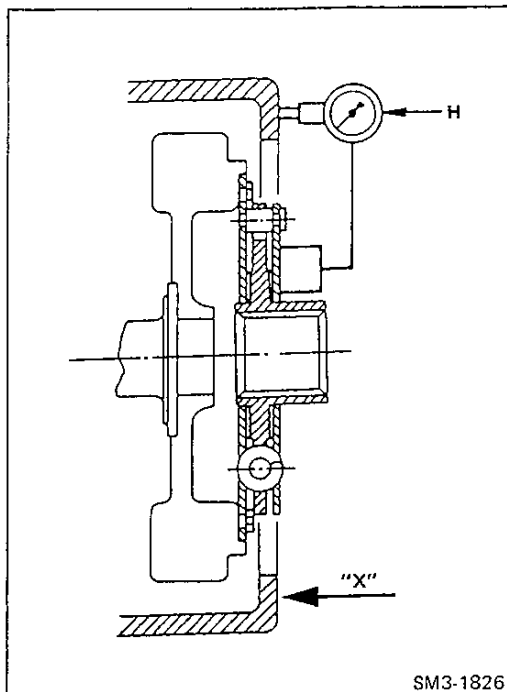


SM3-1826

3. Check the radial tolerances of the connection between marine transmission and engine.
 - a. Attach caliper linkage (Item H) to damper plate.
 - b. Apply base of caliper at right angles to entering surface of flywheel housing.
 - c. Pretension the gauge and set to "0".
 - d. Turn the flywheel slowly. The gauge reading must not exceed 0.1 mm (0.004 in).


"X" : Mounting surface of engine flywheel housing.

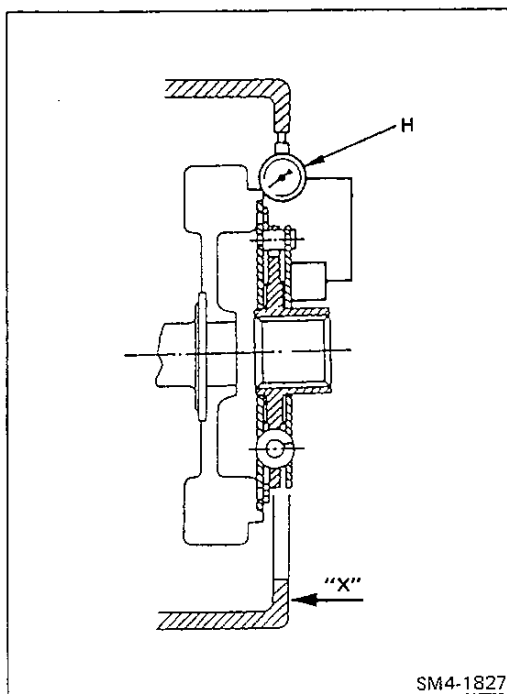


SM4-1827

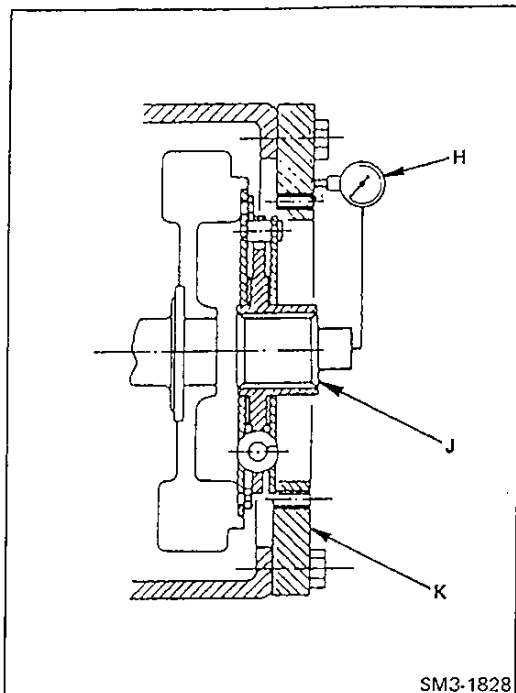**INSTALL THE INTERMEDIATE FLANGE.**


1. Locate the intermediate flange on the flywheel housing to align the match mark.
2. Check the axial tolerances of the intermediate flange (Concentricity).
 - a. Attach caliper linkage (Item H) to the damper plate (Item D).
 - b. Apply base of caliper at right angles to centering surface of intermediate flange (Item K).
 - c. Pretension the gauge and set to "0".
 - d. Turn the flywheel slowly. The gauge reading must not exceed 0.15 mm (0.0059 in).

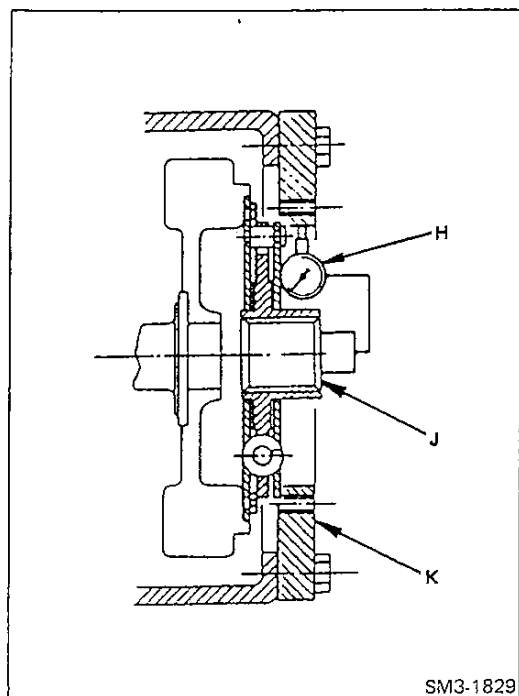

2. Check the radial tolerances of the intermediate flange (parallel running).
 - a. Attach caliper linkage (Item H) to the damper plate (Item J).
 - b. Apply base of caliper at right angles to plane surface of the intermediate flange (Item K).
 - c. Pretension the gauge and set to "0".
 - d. Turn the flywheel slowly. The surface deviation must not exceed 0.05 mm (0.0019 in) 100 mm (3.937 in) measured diameter.

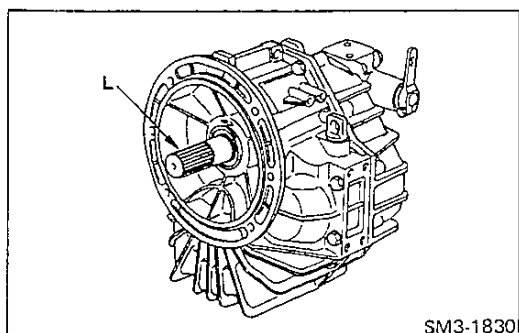**INSTALL THE MARINE TRANSMISSION.**

1. Apply grease containing molybdenum disulfide to the input shaft spline (Item L).

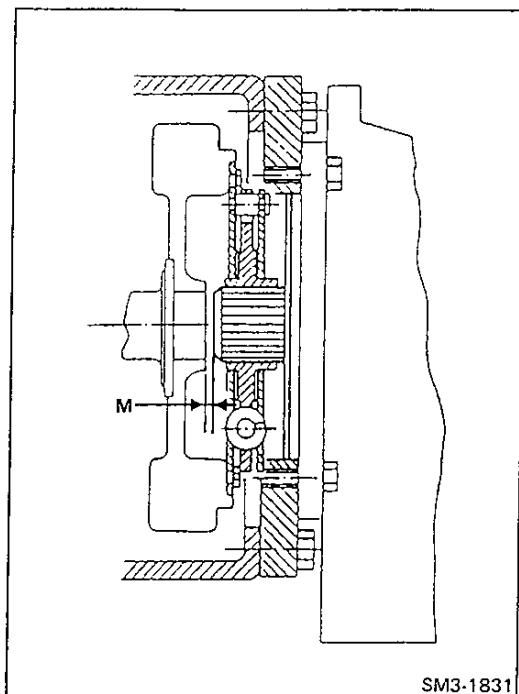


2. Install the marine transmission to the intermediate flange.

Tightening Torque: 380–500 kg·cm (28–36 lb·ft)

Axial Play (M): Minimum 1 mm (0.04 in)

NOTE: Assure clearance of axial play of the crankshaft.

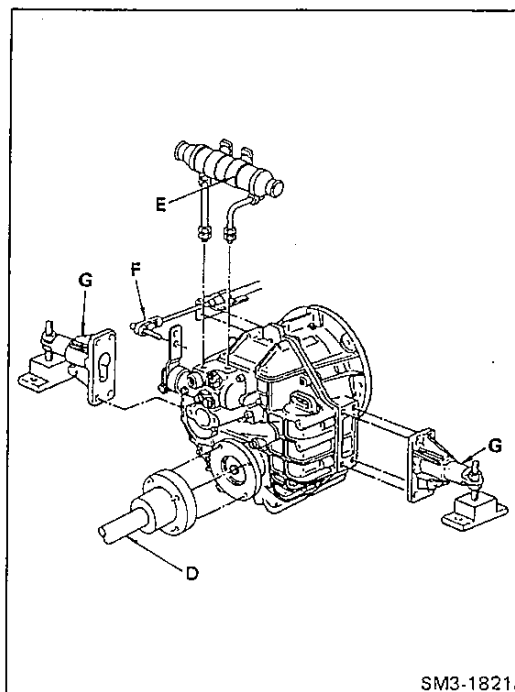


INSTALL THE SUPPORT BRACKET (Item G).

CONNECT THE PROPELLER SHAFT (Item D) TO THE MARINE TRANSMISSION OUTPUT FLANGE.

CONNECT THE ELECTRICAL LINE AND FLUID LINES.

CONNECT THE REMOVE CONTROL (Item F) TO THE SHIFTING LEVER.

INSTALL THE FLUID COOLER WITH PIPES (Item E).

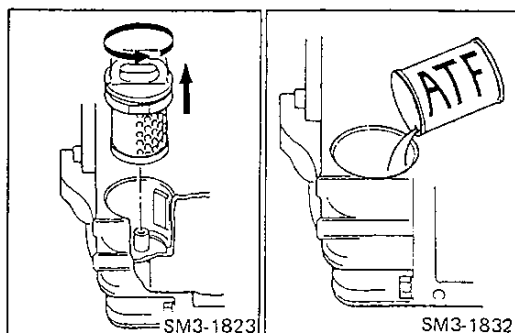

FILL WITH AUTOMATIC TRANSMISSION FLUID (ATF).


NOTE: The filter element must be renewed whenever the fluid is changed.

1. Turn filter cover counter-clockwise and pull.
2. Fill with 4.0 liters (1.06 US gallon) of Automatic Transmission Fluid (ATF).


Type of Fluid: ATF (Automatic Transmission Fluid)

e.g. DEXRON II-D, FORD M 2 C-33G,
ALLISON C-3


No other fluids unless authorized by HURTH

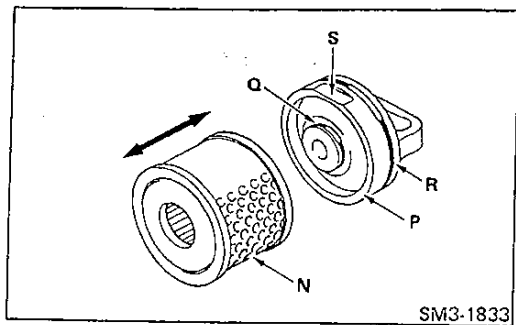

3. Remove filter element (Item N) from cover (Item P).
4. Check O-ring (Item Q) and place new filter element onto cover.
5. Check O-ring (Item R) and insert filter cover with fluid fine filter to its stop into the marine transmission housing.

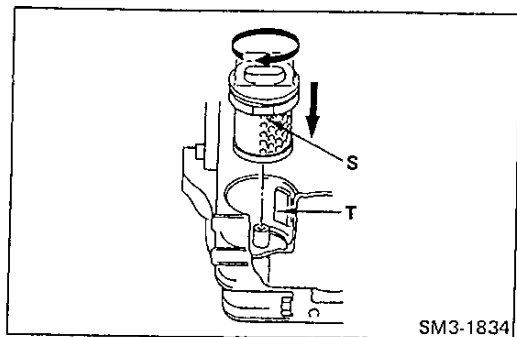

6. Lock filter cover in place by turning clockwise and pushing.
- NOTE:** When inserting the filter cover, make sure that flat side of cover (Item S) matches with lug (Item T) in the filter.

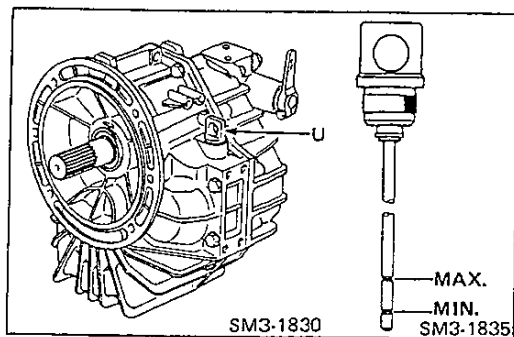

7. Loosen fluid dipstick (Item U) turning the handle counter-clockwise.
8. Wipe dipstick with a clean and dustfree cloth and insert dipstick to its stop.
9. Remove dipstick and check fluid level.
10. Insert the dipstick to its stop and lock it by turning the handle clockwise.
11. Let engine run at idle speed with shifting lever in neutral position until fluid cooler and all pipelines are filled in fluid.
12. Shut down engine and check fluid level again. If necessary, top up to the marking on the dipstick.

CHAPTER EE

ELECTRICAL EQUIPMENT


DATA AND SPECIFICATIONS	EE- 2
LOCATION OF ELECTRICAL EQUIPMENT	EE- 2
TROUBLESHOOTING	EE- 3
GENERAL INSTRUCTION	EE- 5
BATTERY	EE- 6
ENGINE STARTING CIRCUIT	EE- 7
PRE-HEAT CIRCUIT	EE- 8
ENGINE STOP AND WARNING LAMP CIRCUIT	EE- 8
METER AND GAUGE CIRCUIT	EE-10
ELECTRICAL WIRING DIAGRAM	

DATA AND SPECIFICATIONS

Electrical system

Voltage	Direct current 12 volts or 24 volts
Ground	Negative (—) ground
Warning and indicator lamp	1.4W 4 pieces
Gauge illumination lamp	1.7W 4 pieces
Tachometer illumination lamp	3.4W 2 pieces

LOCATION OF ELECTRICAL EQUIPMENT

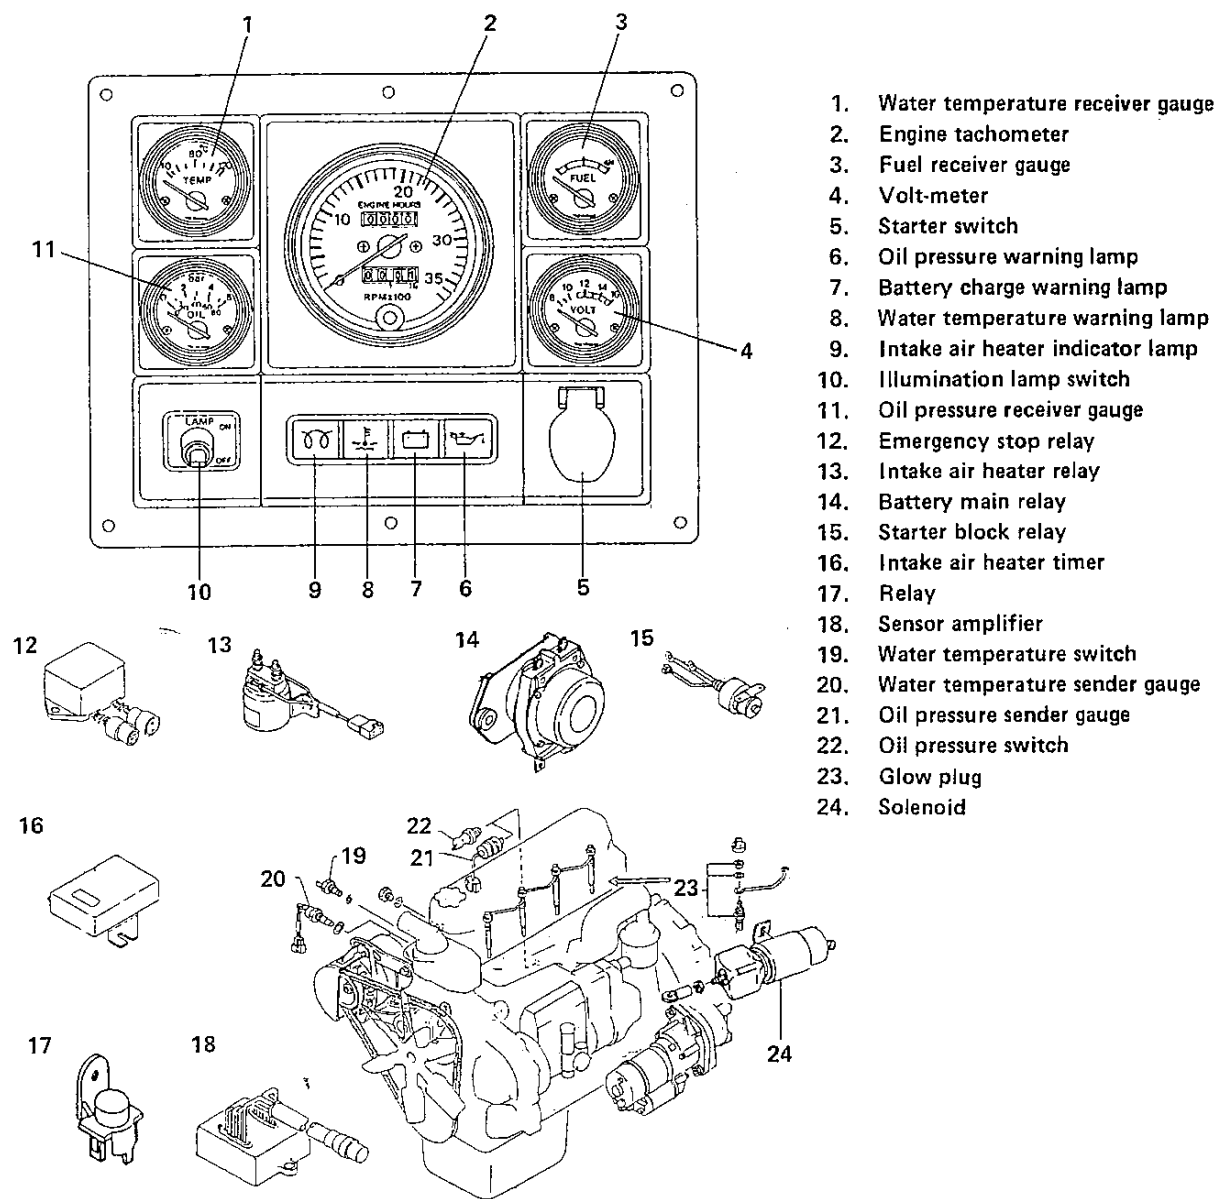

TROUBLESHOOTING

Symptom	Possible cause	Remedy/Prevention
A lot of exhaust is emitted but the engine does not start or is difficult to start. (Auxiliary starting device: Standard specifications)	Auxiliary starting device	
	- Loose wiring of heater signal or defective heater signal. - Defective heater plug - Defective wiring between heater and plug	Repair or replace. Replace. Repair.
(Auxiliary starting device: Option specifications)	- Defective power relay - Defective heater plug - Defective wiring between heater and plug - Defective sensing resistor - Defective heater control timer	Repair or replace. Replace. Repair. Replace. Replace.
Solenoid does not operate when engine is running, even if abnormal signal is input. (Engine does not stop.)	Emergency stop relay	
	- Alternator malfunctions - Insufficient battery voltage - Faulty connection at N terminal of emergency relay - Defective solenoid	Repair or replace. Charge or replace. Repair. Replace.
Solenoid operates when starter switch is turned ON	Emergency stop relay	
	- Faulty connection at R1 terminal - Faulty connection at B and C terminals	Repair. Repair.
When the starter switch is turned OFF, the battery relay switch goes OFF and the solenoid fails to operate.	Battery	
	Insufficient voltage	Charge or replace.
	Alternator	
	Malfunctions	Repair or replace.
Starter chattering or improper plunging	Battery	
	Insufficient voltage	Charge or replace.
	Starter block relay	
	- Faulty connection at terminals - Internal circuit abnormal - Relay switch abnormality (faulty contacts), improper sliding between rod and moving core, or open-circuit or burnt out coil	Repair. Replace. Replace.
	Starter switch	
	Faulty connection at terminals	


<u>Symptom</u>	<u>Possible cause</u>	<u>Remedy/Prevention</u>
Improper disengagement of starter or defective hold function when engine is rotating	Alternator	
	• Defective (correct voltage not generated)	Repair or replace.
	Starter block relay	
Re-plunging during inertial rotation	• Improper terminal connection	Repair.
	• Reverse connections to terminals B and C	Repair.
	Starter block relay	
	• Reverse connections to terminals B and C	Repair.

GENERAL INSTRUCTION

WARNING

Be sure to disconnect the ground cable before servicing the electrical circuits.

EXAMPLE:

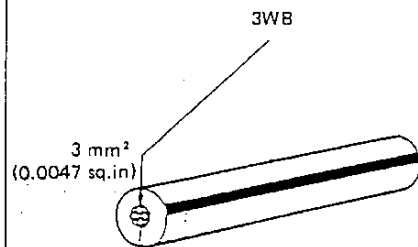

WIRING CODE

- Wiring colors are indicated by a code.

B : Black	Lg : Light green
Br : Brown	R : Red
G : Green	W : White
L : Blue	Y : Yellow
- The first letter indicates the ground wire color and second letter indicates the stripe color.
- Arabic numerals indicate the cross sectional area of wire.
3 : 3 mm²

CONNECTOR

- The connectors exist as male and female connectors.
- Male and female connectors are classified according to the shape of the terminals in the connector (refer to the figure on the left).
- Male and female connectors are provided with a lock, so that they can not be separated easily.
- For connector separation, hold the connector, unlock the lock and separate the connector.

NOTE: When the connector is pulled by pulling the wires, the connection between the terminals and the wires will be damaged.


- Remove the terminal from the connector.
 - Insert a miniature screwdriver or a terminal puller between terminal and connector and unlock the lock between terminal and connector.
 - When the lock has been released, pull the wire to remove the terminal.
- Install the terminal in the connector.
 - Insert the terminal into the connector until the clicking sound of lock engagement can be heard.
 - Pull the wire to confirm correct lock engagement.

FUSE


- The power supply must be switched off for fuse replacement.
- Use a fuse with a suitable amperage.

NOTE: Wire burning may be caused when a fuse with an excessively large current capacity is used.

- If the fuse should blow frequently, investigate the cause and remove it.

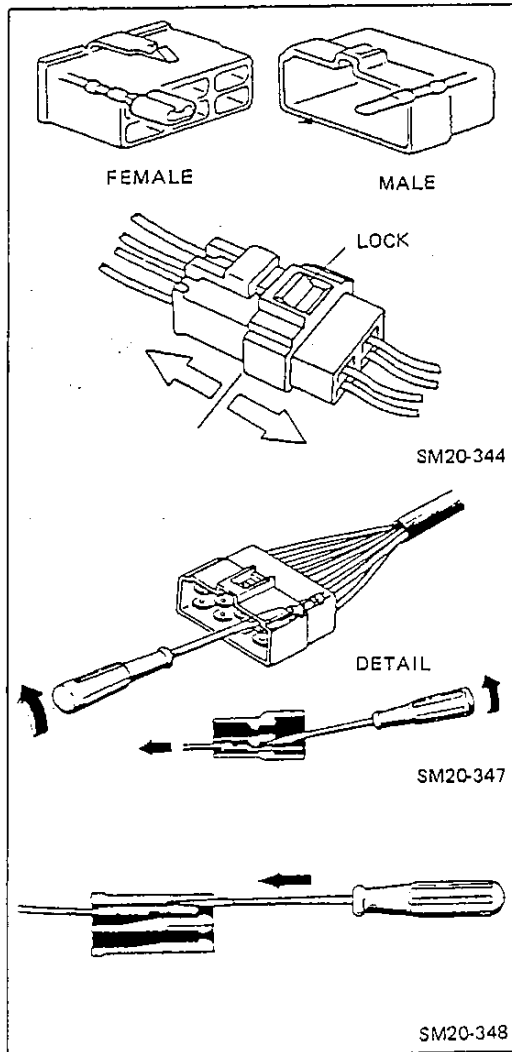

BATTERY

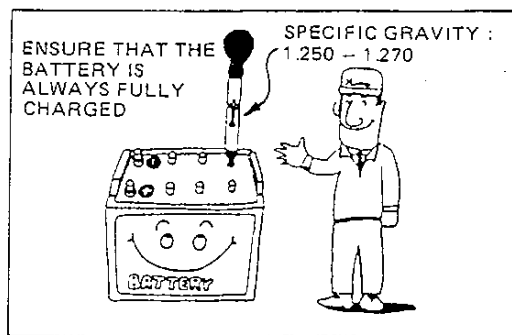

CONVERSION FORMULA FOR SPECIFIC GRAVITY.

- The specific gravity of electrolyte changes according to the temperature of the electrolyte itself, hence it is based on a temperature of 20°C (68°F).


Consequently, if the temperature is not 20°C when the specific gravity is measured, it is necessary to convert the measured value to the equivalent value at 20°C.

Temperature conversion formula: $S_{20} = S_t + 0.0007 (t - 20)$

Where,

- S_{20} is the specific gravity at 20°C (reference temperature)
- S_t is the specific gravity at the measuring temperature
- t is the temperature during measurement
- 0.0007 is the temperature coefficient of the electrolyte

NOTE: As a rough guide, If the temperature of the electrolyte rises or falls by 15°C (59°F), the specific gravity of the electrolyte will vary by about 0.01.

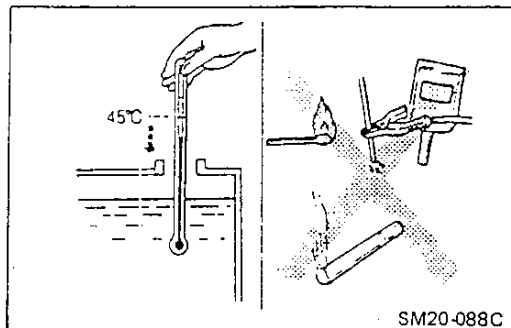

BATTERY CHARGING

- Be careful of the following points.
- 1) While the battery is being charged, ensure that the temperature of the electrolyte does not rise above 45°C (113°F).
- 2) While the battery is being charged, be particularly careful to keep it away from sources of fire.
- 3) The amount of electrolyte must be within the specified level.

Specific gravity when battery is fully charged: 1.250 – 1.270 at 20°C (68°F)


CLEANING THE BATTERY

- If the terminals at the top of the battery are dirty, clean them with cold water or lukewarm water.
- Apply a light coating of grease to the terminals to prevent them from rusting so as to prevent faulty contact.

CONNECTING THE BATTERY CABLES

- Clamp the cables securely to prevent improper contact between the cables and the battery terminals.
- Be very careful not to connect the (+) and (–) leads in reverse. (because this may cause equipment run off the battery to be damaged.)

ENGINE STARTING CIRCUIT

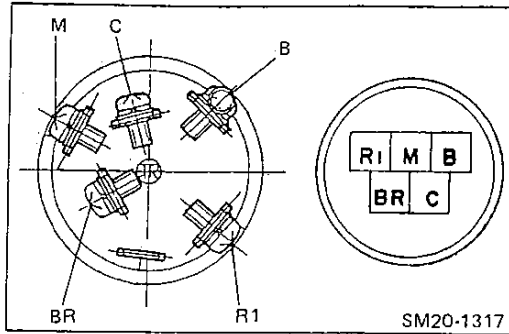


CHECK THE CONTINUITY OF THE STARTER SWITCH.

Check the continuity between terminals.


If continuity is not correct, replace the starter switch.

Terminal	B	R ₁	R ₂	M	BR	C
Switch position						
PRE-HEAT	○	○	—	○	○	
OFF						
ON	○	—	—	○	○	
START	○	○	○	○	○	○

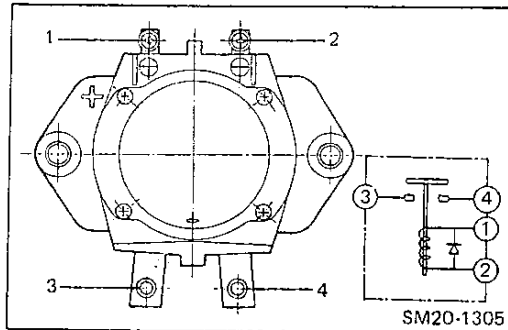

CHECK THE OPERATION OF BATTERY RELAY.


1. Check that there is continuity between terminals 1 and 2.
2. Check that there is no continuity between terminals 3 and 4.
3. Connect the positive (+) lead from the battery to terminal 1. Connect the negative (−) lead to terminal 2. Check that there is continuity between terminals 3 and 4.
4. If operation is not correct, replace the battery relay.

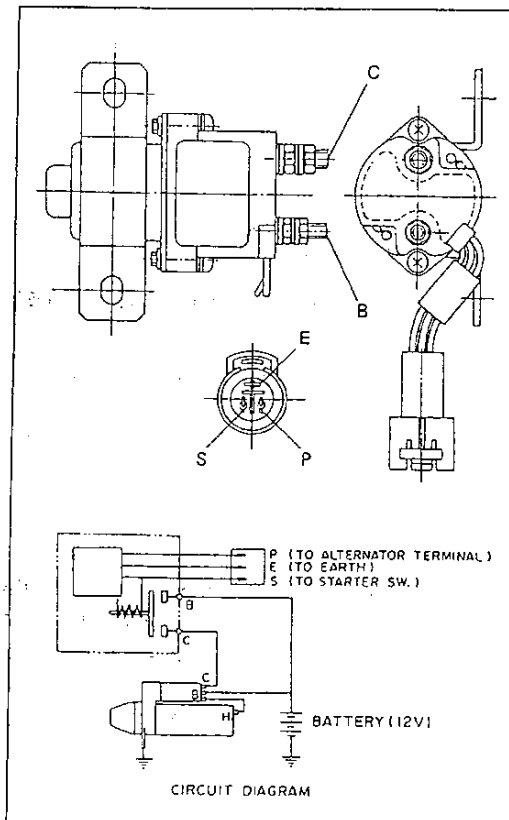

CHECK THE OPERATION OF THE STARTER BLOCK RELAY.


1. Check that there is no continuity between terminals C and B.
2. Connect the positive (+) lead from the battery to terminal S. Connect the negative (−) lead to terminal E. Check that there is continuity between terminals C and B.
3. Connect the positive (+) lead from the battery to terminal P. Connect the negative (−) lead to terminal E. Check that there is no continuity between terminals C and B.
4. If operation is not correct, replace the relay.

PRE-HEAT CIRCUIT

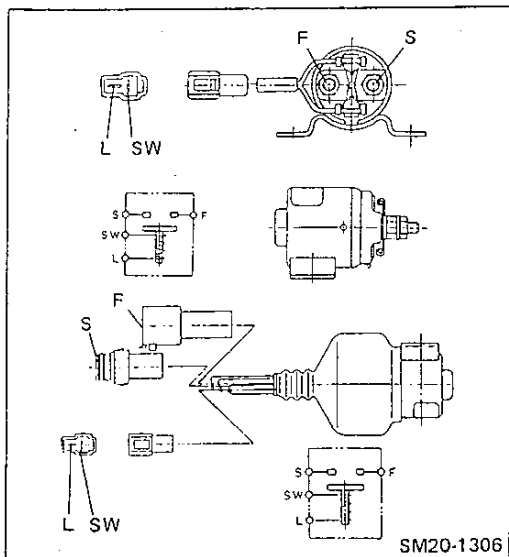

CHECK THE OPERATION OF THE INTAKE AIR HEATER RELAY.


1. Check that there is continuity between terminals SW and L.
2. Check that there is no continuity between terminals S and F.
3. Connect the positive (+) lead from the battery to terminal SW. Connect the negative (-) lead to terminal L. Check that there is continuity between terminals S and F.
4. If operation is not correct, replace the relay.

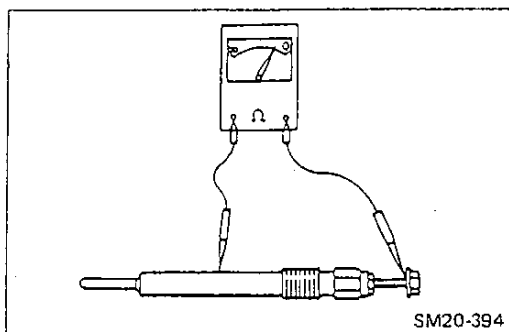

CHECK THE CONTINUITY OF THE HEATER PLUG.

Check the continuity between terminal and body ground.
If there is no continuity, replace the glow plug.

ENGINE STOP AND WARNING LAMP CIRCUIT

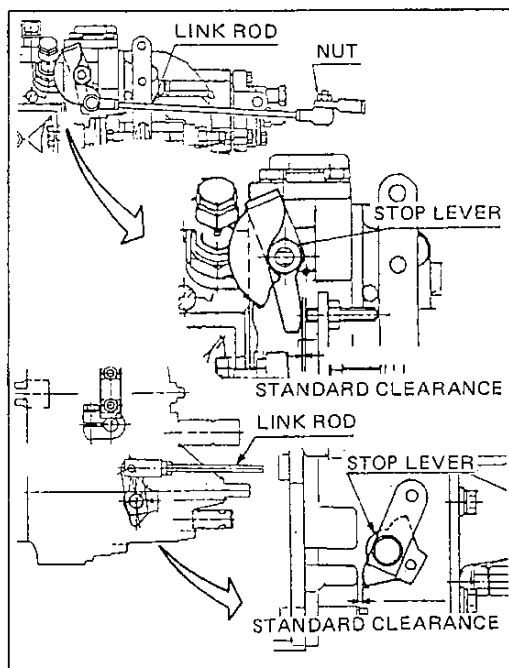

CHECK THE OPERATION OF THE SOLENOID AND ADJUST THE LINK ROD.


1. Connect the battery to the solenoid terminals and confirm that the solenoid is drawn in.
2. Push in the plunger by hand and confirm that there is a clearance between the stopper and the stop lever.

Standard clearance: 2 – 3 mm (0.01188 – 0.1181 in)

If there is no clearance, perform adjustment with the link rod.

NOTE: ○ If the clearance adjustment is unsatisfactory or the action of the solenoid is sluggish, solenoid burnout, insufficient output or insufficient engine stoppage may result.

- Install the link rod with the nut at the top.

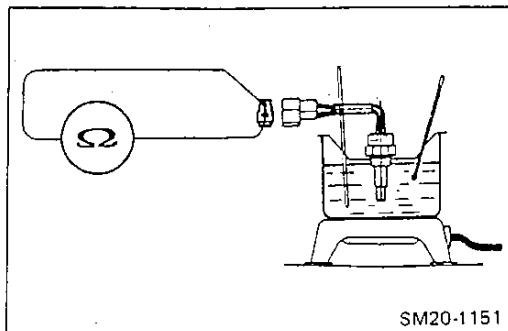


SM20-1151

CHECK THE OPERATION OF THE WATER TEMPERATURE SWITCH.

Check the continuity between terminals.

If continuity is not correct, replace the temperature switch.

Terminal	1	2
Water temperature: °C (°F)		
Not less than 98 ± 2 (205–212)	○	○
Between 95 (203) and 98 ± 2 (205–212)		

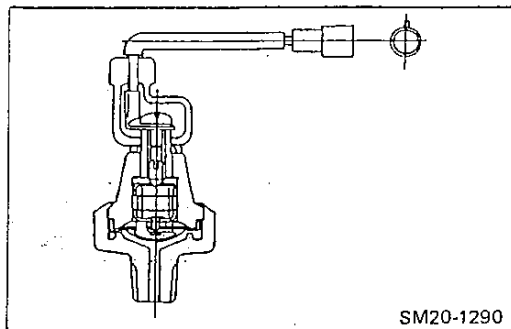


SM20-1290

CHECK THE OPERATION OF THE PRESSURE SWITCH.

1. Check the continuity between terminal and body ground.
 - a. Check that there is continuity when engine is stopped.
 - b. Check that there is no continuity when engine is running.
2. If continuity is not correct, replace the oil pressure switch.


NOTE: Engine oil pressure should be more than 0.5 kg/cm² (7.2/sq.in.)

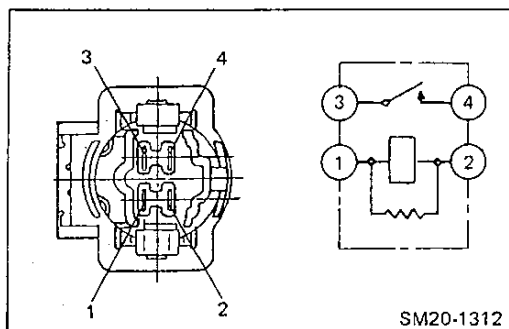

SM20-1312

CHECK THE OPERATION OF THE RELAY. (WATER TEMPERATURE WARNING LAMP RELAY)

1. Check that there is continuity between terminals 1 and 2.
2. Check that there is no continuity between terminals 3 and 4.
3. Connect the positive (+) lead from the battery to terminal 1. Connect the negative (–) lead to terminal 2. Check that there is continuity between terminals 3 and 4.
4. If operation is not correct, replace the relay.

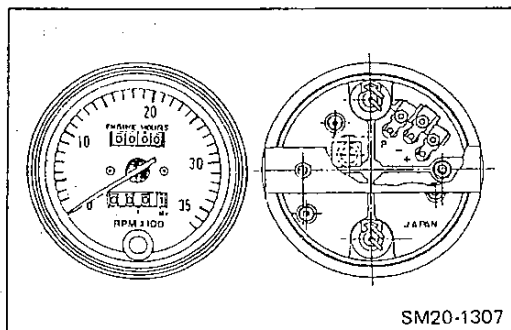
METER AND GAUGE CIRCUIT

SM20-1307

CHECK THE OPERATION OF THE TACHOMETER.


1. Connect a turn-up test tachometer, and start the engine.
 2. Check the tester and tachometer indications.
- If the indicated value of tachometer is not correct, replace the tachometer.

Standard revolution (rpm)	600	1,800	3,000
Allowable value (rpm)	± 100	± 100	± 100

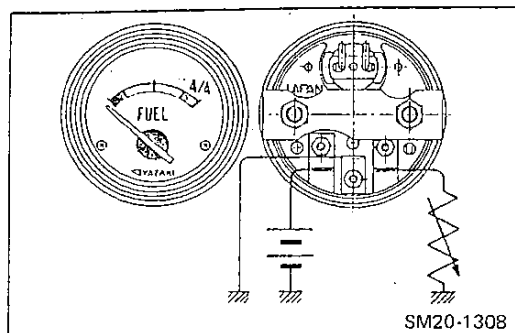**CHECK THE OPERATION OF THE FUEL RECEIVER GAUGE.**

1. Wire the receiver gauge, variable resistor and battery, as shown in the figure at left. Check the indicated value on the receiver gauge at the reference resistance value.
2. If the indicated value is not correct, replace the receiver gauge.


Resistance: Ω	33.5	103	240
Gauge reading	F	1/2	E
Allowable value: %	+6 0	± 4	0 -5

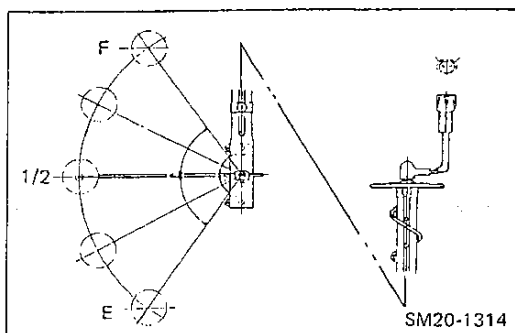**CHECK THE OPERATION OF THE FUEL SENDER GAUGE.**

Measure the resistance between terminals.


If the indicated value is not correct, replace the sender gauge.

Float position	F	1/2	E
Standard resistance: Ω	30.1	103	250
Allowable value: Ω	± 3.4	± 10.3	± 24

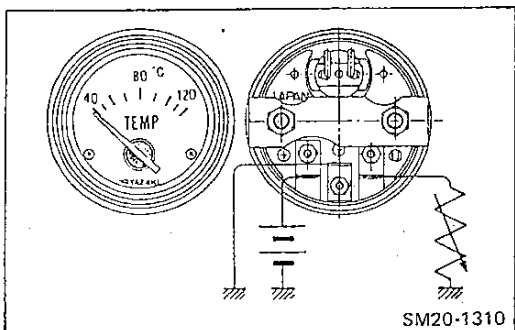**CHECK THE OPERATION OF THE WATER TEMPERATURE RECEIVER GAUGE.**


1. Wire the receiver gauge, variable resistor and battery, as shown in the figure at left. Check the indicated value on the receiver gauge at the reference resistance value.
2. If the indicated value is not correct, replace the receiver gauge.

Resistance: Ω	43.2	23.7
Gauge reading: $^{\circ}\text{C}$ ($^{\circ}\text{F}$)	80 (176)	100 (212)
Allowable value: $^{\circ}\text{C}$ ($^{\circ}\text{F}$)	± 3.5 (38)	± 5.5 (41)

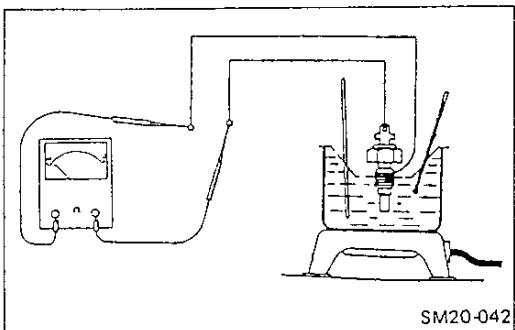**CHECK THE OPERATION OF THE WATER TEMPERATURE SENDER GAUGE.**


1. Wire the sender gauge and ohmmeter as shown in the figure at left. Check the resistance value of the sender gauge at the reference water temperature.
2. If the indicated value is not correct, replace the sender gauge.

Water temperature: $^{\circ}\text{C}$ ($^{\circ}\text{F}$)	50 (122)	80 (176)	100 (212)
Standard resistance: Ω	130	48.5	26.7
Allowable value: Ω	—	± 4.2	± 2.5

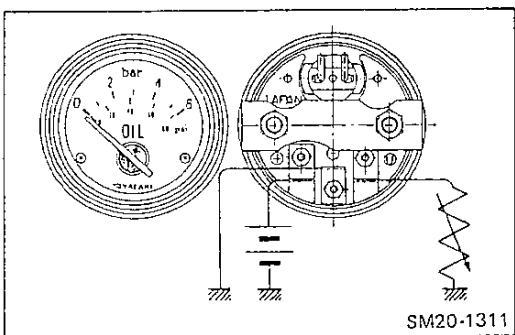**CHECK THE OPERATION OF THE OIL PRESSURE RECEIVER GAUGE.**

1. Wire the receiver gauge, variable resistor and battery as shown in the figure at left. Check the indicated value on the receiver gauge at the reference current value.
2. If the indicated value is not correct, replace the receiver gauge.


Resistance: Ω	19	81	112
Gauge reading: bar (psi)	0	4 (56)	6 (84)
Allowable value: bar (psi)	± 0.3 (4.1)	+0.7 (9.7) -0.6 (8.4)	—

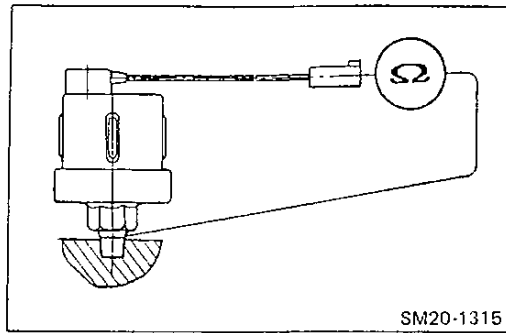

CHECK THE OPERATION OF THE OIL PRESSURE SENDER GAUGE.

1. Wire the sender gauge and ohmmeter as shown in the figure at left. Check the resistance between the sender gauge and the body ground.
2. If the indicated value is not correct, replace the sender gauge.


Oil pressure kg/cm ² (lb/sq.in)	0	4 (57)	6 (85)
Standard resistance: Ω	19	80	110
Allowable value: Ω	± 2	± 5	± 9

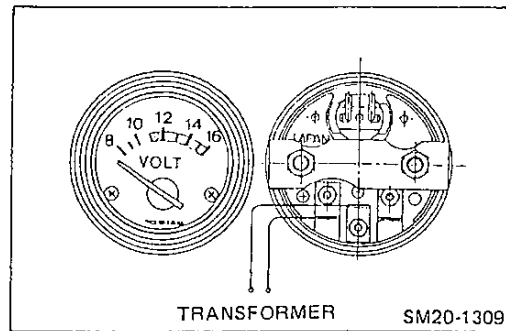

CHECK THE OPERATION OF THE VOLT METER.

1. Wire the voltmeter and transformer as shown in the figure at left. Check the indicated value on the voltmeter at the reference voltage value.
2. If the indicated value is not correct, replace the voltmeter.

Gauge reading: V	12	14
Allowable value: V	± 0.5	± 0.5

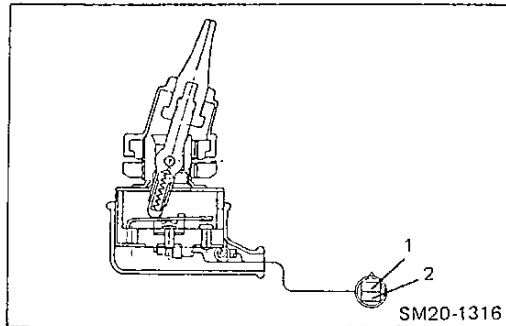

CHECK THE OPERATION OF THE GENERALLY USE SWITCH (ILLUMINATION LAMP SWITCH).

Check the continuity between terminals.

If operation is not correct, replace the switch.

Terminal	1	2
Switch position		
ON		
OFF		

(KY)

CHAPTER TU

TURBOCHARGER


DATA AND SPECIFICATIONS	TU-2
DESCRIPTION	TU-2
TROUBLESHOOTING	TU-3
OVERHAUL CRITERIA	TU-4
SPECIAL TOOL	TU-5
TURBOCHARGER	TU-6



DATA AND SPECIFICATIONS

Type	RHC 6
Turbine type	Radial flow type
Blower type	Centrifugal type
Lubricating method	External lubrication type
Bearing type	Full floating type
Direction of rotating	Counterclockwise as seen from the turbine side
temperature	

DESCRIPTION

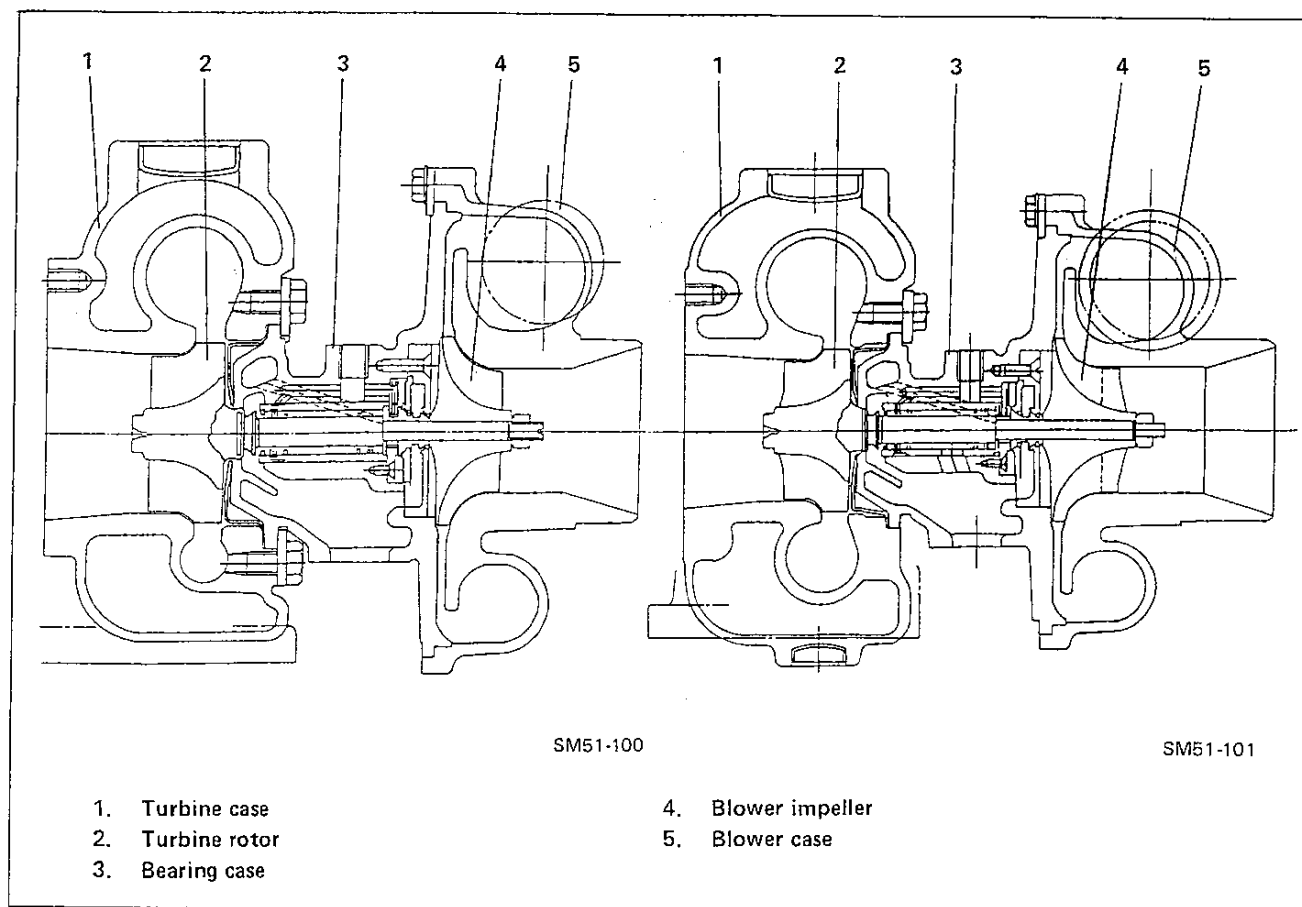

TROUBLESHOOTING

Symptom	Possible cause	Remedy/Prevention
Dense black smoke	Insufficient air intake	
	• Air cleaner is choked with dust,	Disassemble and clean or replace the air cleaner element.
	• Air inlet is choked	Repair.
	• Air is leaking from intake manifold	Repair.
	Turbocharger does not rotate smoothly.	
	• Engine oil impurities deposited on	Overhaul and clean turbocharger and/or change engine oil.
	• rotor, resulting in heavy rotation or sticking.	
	Bearing sticking	
	• Insufficient lubrication or blockage	Check lubricating oil system, and/or repair.
	• of lubricating oil lines.	
	• Abnormal wear or damage of seal	Repair.
	• ring caused by wear of journal bearing, due to insufficient lubrication.	
	• Temperature of lubricating oil too high	Check cooling system.
	• Unbalanced rotating parts	Change rotating parts.
	• Incomplete warming-up, failure	Operate vehicle properly.
	• to idle before stopping engine, or jack rabbit starts.	
	Loose or damaged turbine rotor or blower impeller.	
	• Over-rotation	Check and adjust the engine.
	• Temperature of exhaust gas too high	Check and adjust the engine.
	• Foreign matter present	Remove foreign material. Inspect the air cleaner and air intake manifold. Repair if necessary.
	• Worn thrust bearing	Overhaul and repair.
	• Incomplete assembly	Reassembly.
High volume exhaust like noise.	Exhaust gas leaking before turbocharger,	Check and repair connections.
	therefore insufficient revolution.	
	Deformed or blocked exhaust gas lines	Repair.
	therefore insufficient revolution.	
White smoke	Choking defects, or deformation of	Repair and replace the lines.
	oil return lines so that oil leaks around blower or turbine sides.	
	Seal ring may be broken or worn due	Replace the thrust washer.
	to abnormal wear of thrust washer.	

Symptom	Possible cause	Remedy/Prevention
Loss of power	Gas leakage from exhaust system	Repair.
	Air leakage from air manifold	Repair.
	Clogged air cleaner element	Clean or replace.
	Turbocharger dirty or damaged	Repair or replace.
Poor response of turbocharger	Carbon accumulation on the turbine side seal ring and heavy rotation.	Change engine oil, clean turbocharger.
	Poor combustion	Check fuel system and improve combustion.
High pitched noise and vibration	Noise	
	• So called "surging"	Overhaul and clean turbocharger.
	Surging sometimes occurs when the gas passage at the nozzle of the turbine housing is choked or when compressed air does not flow in proper responses to acceleration.	
	• Loosen rotating parts	Replace.
	Vibration	
	• Joints loose between turbocharger and intake, exhaust manifold or oil lines.	Check the mounting and repair.
	• Damaged bearing, loose rotating parts, imbalanced rotating parts, etc.	Repair.

OVERHAUL CRITERIA

CONDITIONS WHICH DETERMINE WHEN A TURBOCHARGER OVERHAUL MAY BE NEEDED.

THE ENGINE LACKS POWER OR ENGINE EXHAUST EMITS BLACK SMOKE.

BOOST PRESSURE IS BELOW THE NORMAL VALUE.


Inspect the turbocharger boost pressure according to the following procedures.

NOTE: Before measurement

- Coolant temperature should approximately 80°C.
- Air cleaner element should be clean.


WARNING

When making a pressure test, be sure that personnel are adequately protected against any stream of pressurized air that might be released by a leak or the rupture of a hose.

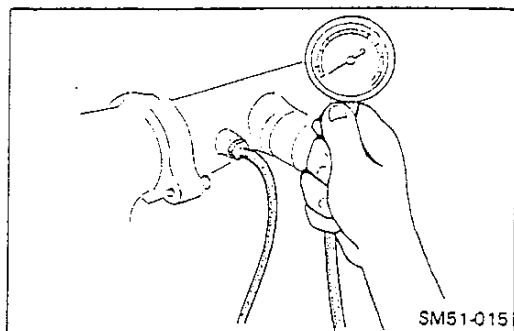

1. Remove the blind plug on the intake pipe and install the hose and pressure gauge (special tools).

Special Tools: Pressure Gauge (09444-1250)
Hose (17108-1040)

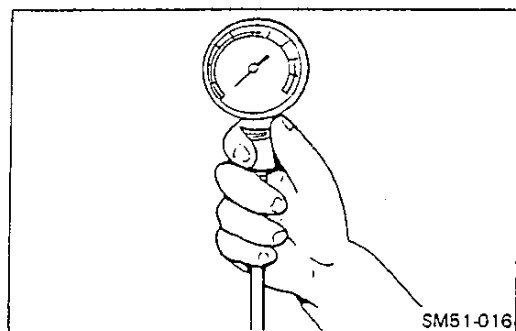

3. Read boost pressure.
If the boost pressure is below the specified value, turbocharger overhaul is needed.

Boost Pressure: Less than 0.13 kg/cm² (1.85 lb/sq.in) at no load with maximum revolution.


OTHER FACTORS

1. Noisy or excessive vibration of the turbocharger.
2. Excessive engine oil consumption.
3. Gas leakage at the turbine end or blower end.
4. Oil leakage from the turbocharger.

SPECIAL TOOL


Prior to starting an turbocharger overhaul, it is necessary to have these special tools.

ATTACHMENT FOR MEASURING TURBINE SHAFT RADIAL PLAY

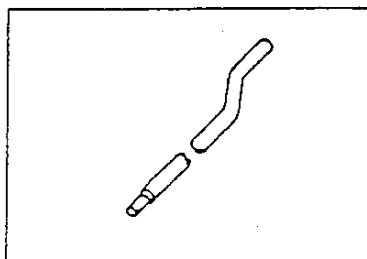


09444-1230

BOOST PRESSURE GAUGE

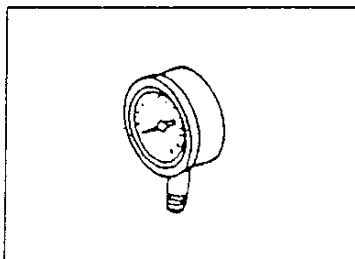




09444-1250

BOOST PRESSURE GAUGE HOSE

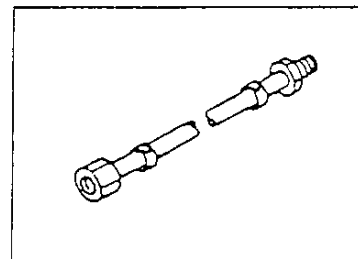

17108-1040

TURBOCHARGER

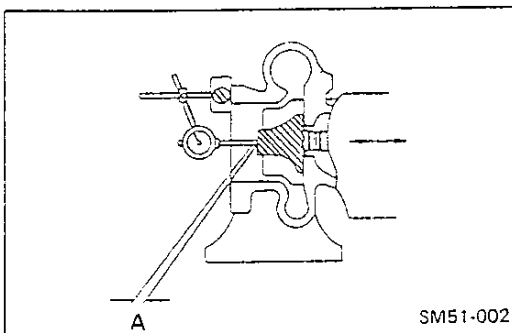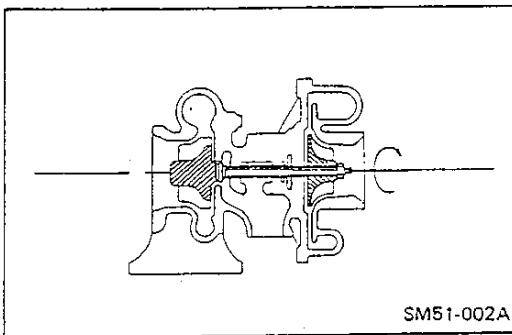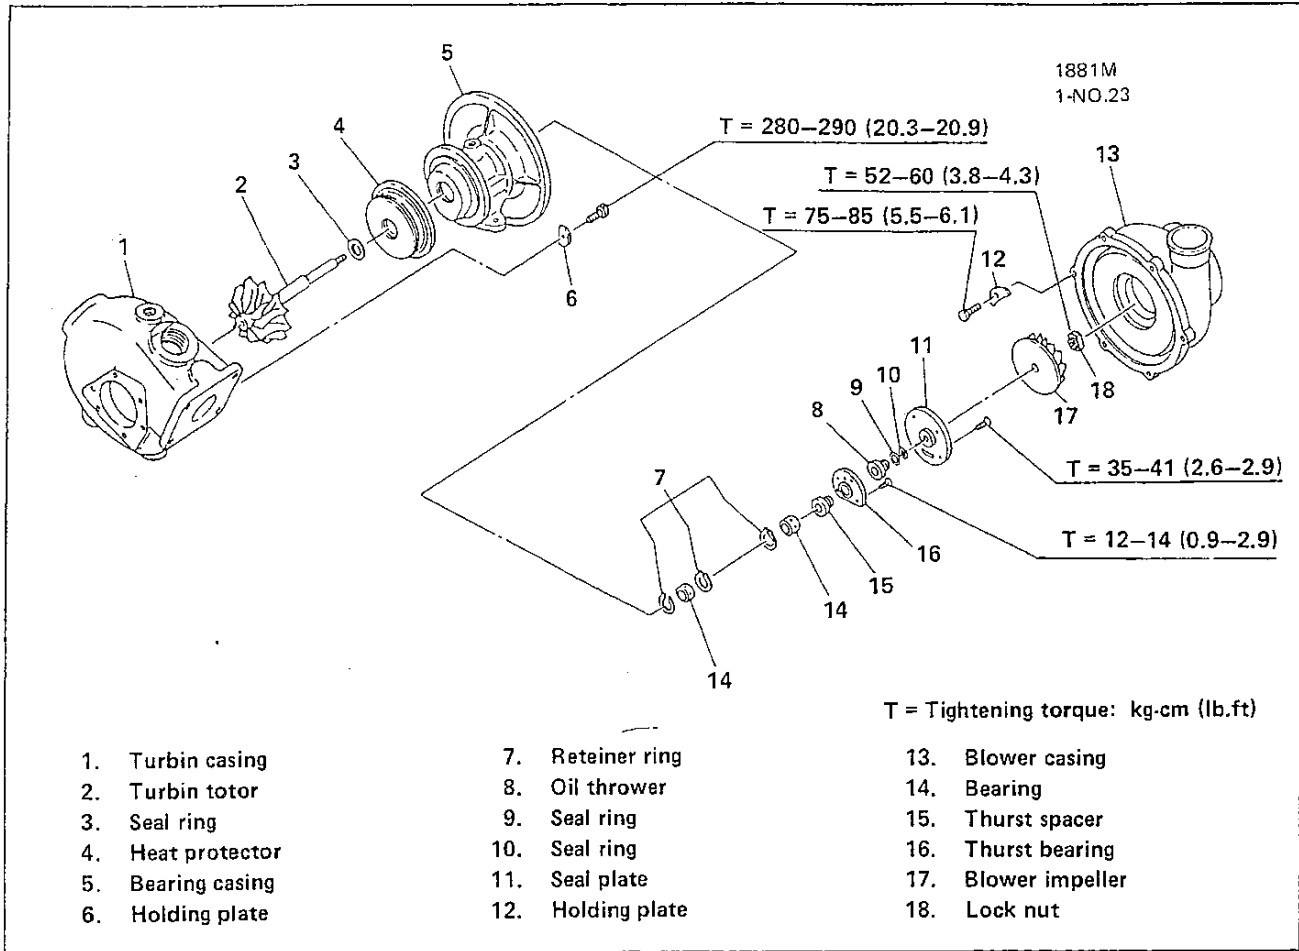


IMPORTANT POINT (S) – BEFORE DISASSEMBLY

1. Rotate the blower impeller by hand to see if it turns smoothly. If it does not turn smoothly, clean and inspect the bearing and turbine rotor.

2. Check the turbine rotor for axial play (A). If the axial play is greater than the service limit, replace the thrust bearing and/or thrust spacer.

Axial Play: 0.06 – 0.09 mm (0.0024 – 0.0035 in)
Service Limit: 0.11 mm (0.0043 in)

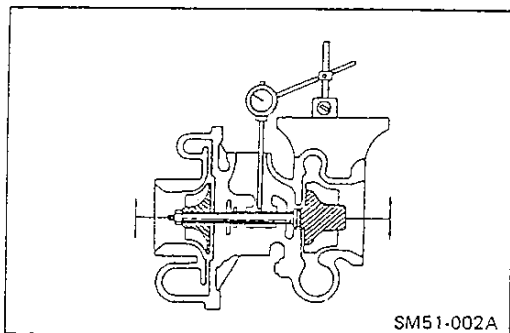


3. Check the turbine rotor for radial play using a special tool.
If the radial play is greater than the service limit, replace the bearings and/or turbine rotor.

Special Tool: 09444-1330

Radial Play: 0.10 – 0.15 mm (0.0039 – 0.0059 in)


Service Limit: 0.19 mm (0.0074 in)

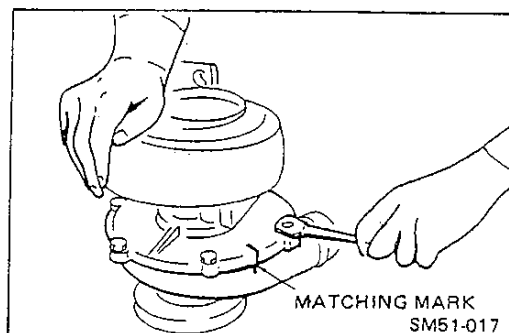

IMPORTANT POINT (S) – DISASSEMBLY


REMOVE THE BLOWER CASING.

- NOTE:
- Make matching marks on the blower case and bearing case to aid alignment during reassembly.
 - If the blower casing cannot easily be removed by hand, tap it carefully all around using a plastic hammer and carefully remove it.
 - Be careful not to damage the blower impeller.

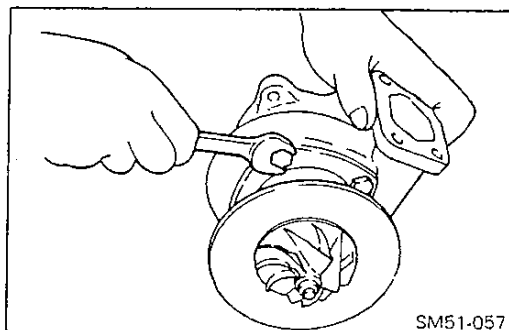

REMOVE THE TURBINE CASING.

- NOTE:
- Make matching marks on the turbine case and bearing case to aid alignment during reassembly.
 - Because the bolts on the turbine side are exposed to high temperature, if they have seized, do not apply an unreasonable force to remove them because they may break. Spray a lubricant onto them, then wait for about 15 minutes and loosen them.
 - Be careful not to damage the turbine blades.
 - If the turbine casing cannot easily be removed by hand, tap it carefully all round using a plastic hammer and carefully remove it.

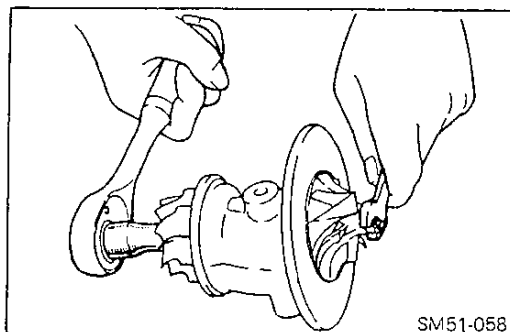


REMOVE THE BLOWER IMPELLER.


1. Remove the blower impeller fitting nut.

NOTE: Turn the lock nut clockwise to loosen the nut (left-hand threads).


2. Remove the blower impeller by hand.

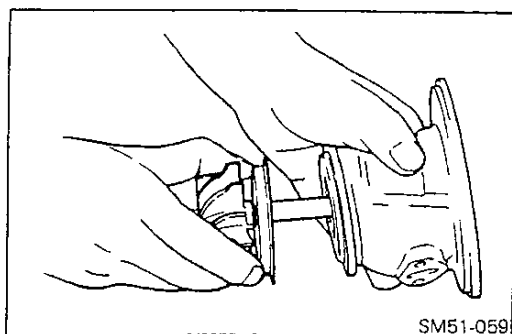

REMOVE THE TURBINE ROTOR WITH HEATER PROTECTOR.

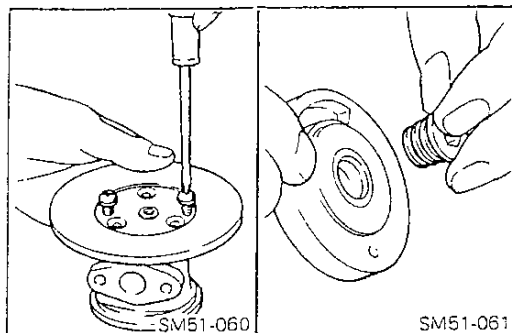
**REMOVE THE BEARING**

1. Remove the seal plate.
Pull out the seal plate using the two screws.
2. Remove the oil thrower from the seal plate.

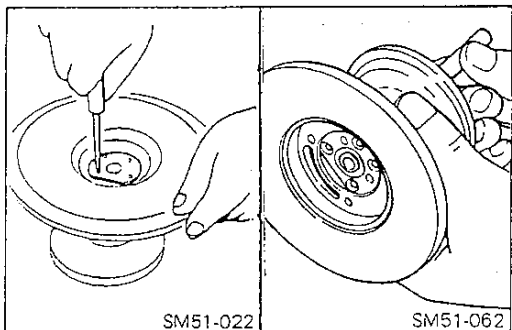

3. Remove the thrust bearing and thrust spacer.
Loosen the bolt, then remove the thrust bushing using a 10 dia. copper rod.


NOTE: When removing the thrust bearing and thrust spacer, be careful not to damage the thrust bearing hole in the bearing case.

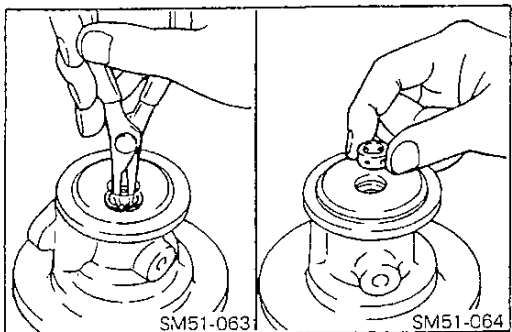

4. Remove the retainer rings of each bearing.

NOTE: When removing the retainer ring, be careful not to damage the front face of the hole in the bearing case.

5. Remove the bearings.

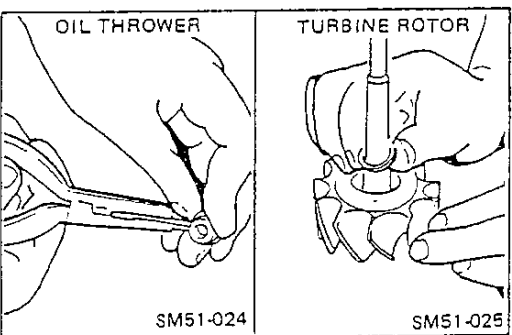**REMOVE THE SEAL RINGS.**


NOTE: When removing the seal ring, be very careful not to damage the groove of the seal ring.

IMPORTANT POINT (S) — ASSEMBLY**CLEAN ALL PARTS.**

1. Before cleaning, the disassembled parts should be visually inspected to check for burning, abrasion, carbon deposits, gas and oil leakage.
2. Thoroughly clean all the parts with diesel fuel, using a soft brush, and dry with compressed air.

NOTE: ○ Never use a caustic cleaning solution, as it may attack aluminum.

○ Never use a wire brush.

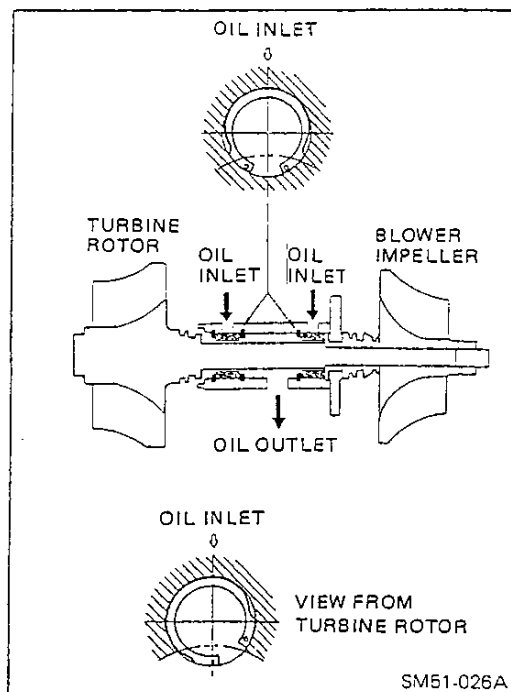**ASSEMBLE THE JOURNAL BEARINGS.**

1. Install the first retainer ring in the bearing casing.

NOTE:

- Bevelled edge of the retainer ring should be towards the bearing.
- Make sure that the retainer ring is securely fitted in the groove.
- Install the retainer ring with the gap facing as shown in the drawing.


2. Install the bearing in the bearing case.

NOTE: Apply clean engine oil.

3. Install the other retainer ring.

NOTE: The only nearest turbine side of the retainer ring should be installed according to the figure on the left.

4. Repeat step 1) through 4) to install the second bearing.

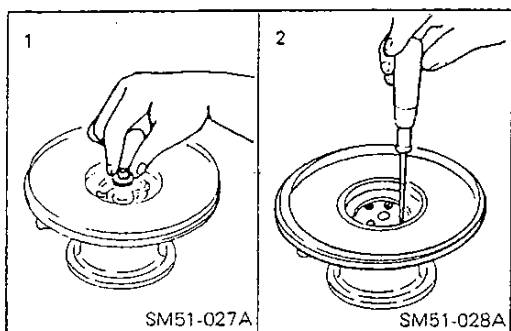
**ASSEMBLE THE THRUST BEARING.**

1. Install the thrust spacer on the turbine shaft.

NOTE: Lubricate thrust spacer surface.

2. Coat the thrust bearing with clean engine oil and install the thrust bearing.


NOTE: Always use new screws and lock washers.

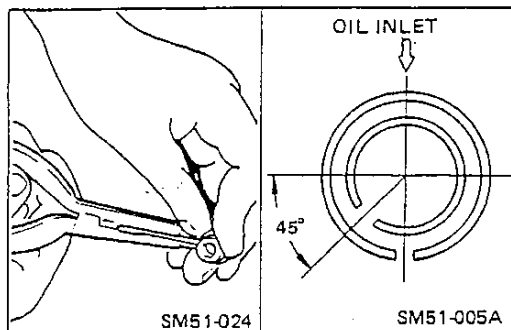**INSTALL THE SEAL PLATE.**

1. Insert two new seal rings on the oil thrower.

2. Install the oil thrower in the seal plate.

NOTE: The openings of seal rings should be positioned as shown.

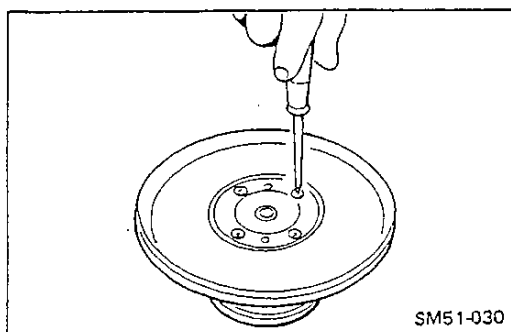

3. Install the seal plate in the bearing case.


NOTE: ○ The oil return hole should face the oil outlet side.

Apply silicone R.T.V. sealer to the flanged surface of the seal plate.

- Take care that the silicone sealer does not protrude from the flange.


4. Tighten the four screws with lock washers.

NOTE: Always use new screws and washers.

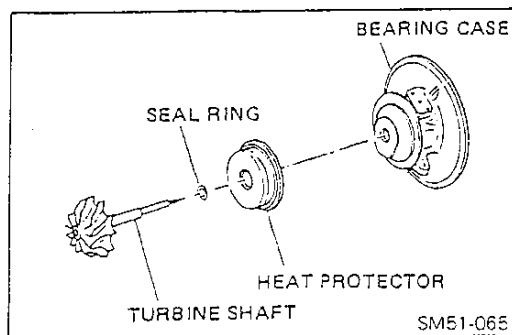

ASSEMBLE THE TURBINE ROTOR.


1. Install a new seal ring in the seal ring groove of the turbine shaft.
2. Position the heat protector on the bearing case.

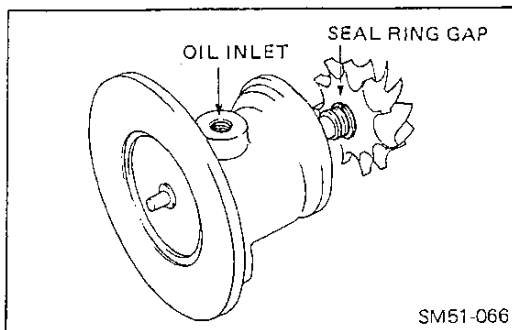

3. Coat the journals of the turbine rotor with clean engine oil and install the turbine rotor in the bearing case.


NOTE:

- The gap in the seal ring of the turbine shaft must face towards the oil inlet.
- Insert the seal ring concentric with the turbine shaft. If it is inserted with unreasonable force, it may be damaged.
- When inserting the turbine shaft, be very careful not to damage the journal bearing.

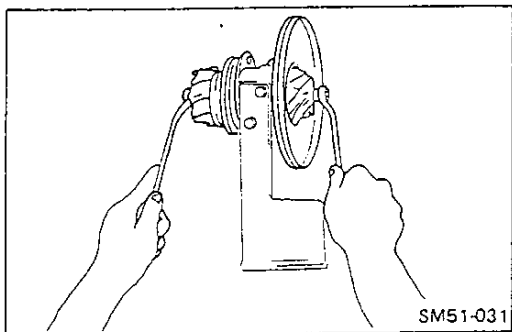

FIT THE BLOWER IMPELLER ON THE TURBINE ROTOR AND TIGHTEN THE LOCK NUT.

NOTE: Remember that this nut has left-hand threads.

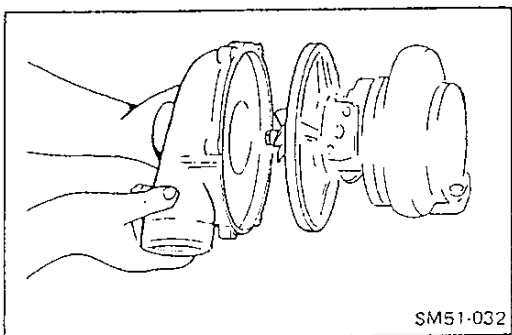

INSTALL THE TURBINE CASE TO THE BEARING CASE, BEING SURE TO ALIGN THE MATCHING MARKS.

NOTE: Always use new lock plates.

ASSEMBLE THE BLOWER CASE.

1. Install the blower case to the bearing case referring to the matching marks.

NOTE: Coat the flange face of the blower case with silicone R.T.V. sealant.









2. Tighten the six fitting bolts.

ASSEMBLY TEST

1. Rotate the blower impeller by hand to see if it turns smoothly. Refer to page TU-6.
2. Check the turbine rotor for axial play (A). Refer to page TU-6.
3. Check the turbine rotor for radial play using a special tool. Refer to page TU-7.



INSPECTION AND REPAIR

Unit: mm (in)

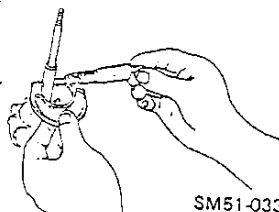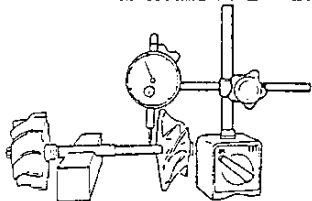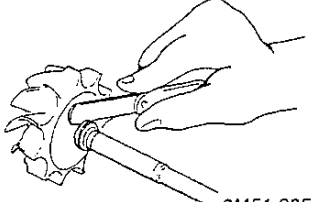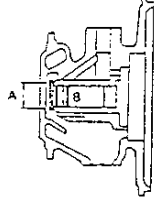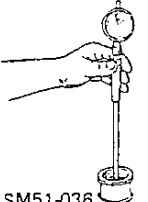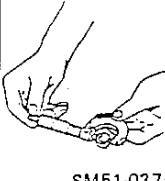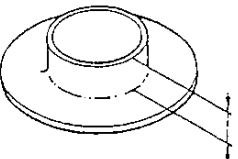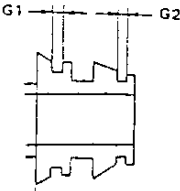Inspection Item	Standard	Limit	Remedy	Inspection Procedure
Turbine Shaft Diameter	—	10.39 (0.4090)	Replace	 SM51-033
Turbine Shaft Bend	—	0.011 (0.0004)	Replace	 SM51-034
Seal Ring Groove Width of Turbine Shaft	—	1.34 (0.0527)	Replace shaft assembly.	 SM51-035
Bearing Case Inside Diameter	—	A: 13.09 (0.515) B: 15.10 (0.5944)	Replace	 SM51-006
Journal Bearing Inside Diameter	—	10.45 (0.4114)	Replace	 SM51-036
Journal Bearing Outside Diameter	—	14.98 (0.5897)	Replace	 SM51-037
Thrust Spacer Height	—	4.09 (0.1610)	Replace	 SM51-007
Seal Ring Groove Width of Oil Thrower	—	G1: 1.52 (0.0598) G2: 1.32 (0.0519)	Replace	 SM51-006A

INSPECTION AND REPAIR

Unit: mm (in)

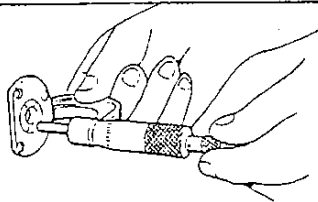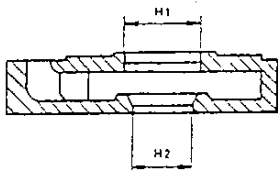Inspection Item	Standard	Limit	Remedy	Inspection Procedure
Thrust Bearing Thickness	—	3.98 (0.1566)	Replace	 SM51-038
Sealing Bore of Seal Plate	—	H1: 14.05 (0.5531) H2: 12.45 (0.4901)	Replace	 SM51-005B

(KY)


CHAPTER IP

FUEL INJECTION PUMP

DESCRIPTION	IP- 2
TROUBLESHOOTING	IP- 3
SPECIAL TOOLS	IP- 6
INJECTION PUMP	IP- 7
TIMER	IP-15
FEED PUMP	IP-19
ADJUSTMENT	IP-21



DESCRIPTION

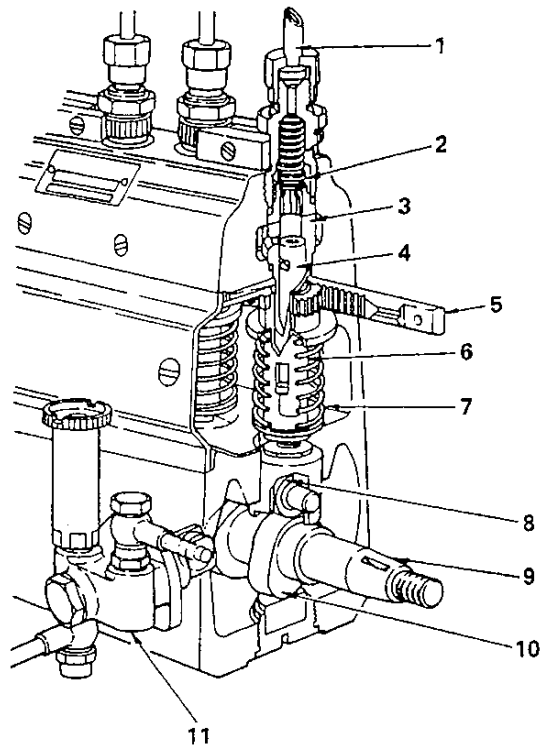

FUEL INJECTION PUMP

- | | | |
|-----------------------|-------------------|--------------------|
| 1. High pressure pipe | 5. Control rod | 9. Cam shaft |
| 2. Delivery valve | 6. Control sleeve | 10. Cam |
| 3. Plunger barrel | 7. Plunger spring | 11. Fuel feed pump |
| 4. Plunger | 8. Tappet | |

TROUBLESHOOTING

Symptom	Possible cause	Remedy/Prevention
Engine does not start	Fuel not reaching injection pump	
	• Fuel lines clogged or damaged	Clean or replace fuel lines.
	• Fuel filter clogged	Clean or replace the filter element.
	• Air in fuel caused by improper connections of fuel line between fuel tank and feed pump	Repair connections.
	• Filter incorporated in inlet side of feed pump clogged	Remove foreign material.
	• Faulty feed pump check valve	Repair or replace it.
	• Feed pump piston spring broken	Replace it.
	• Feed pump push rod or tappet sticking	Repair or replace it.
	Fuel reaching injection pump	
	• Faulty connection of accelerator wire to pump adjusting lever	Repair connection.
	• Control rack faulty or sticking	Repair it.
	• Damaged camshaft bearing	Repair it.
	• Plunger worn or sticking	Correct or replace it.
	• Faulty connection of engine stop wire to pump stop lever	Repair it.
	Nozzle faulty	
	• Fuel leakage caused by loosened nozzle holder	Inspect and tighten it.
	• Low opening pressure of nozzle	Adjust it.
	• Nozzle pressure spring broken	Replace it.
	• Nozzle needle sticking to nozzle body	Correct or replace it.
	Pump out of timing	
	• Improperly retarded injection timing	Correct injection timing.
	• Incorrect timing caused by improper installation of pump	Check engine timing and correct it.
	• Woodruff key for pump camshaft cut off	Replace it.
	• Improper pre-stroke adjustment	Correct it to obtain specified injection timing.


Symptom	Possible cause	Remedy/Prevention
Excessive smoke	Black smoke	
	• Excessive fuel delivery caused by incorrect adjustment of fuel load stopper screw.	Adjust fuel delivery on test stand.
	• Excessively advanced injection timing.	Correct it.
	• Large spread in fuel delivery	Adjust it.
	• Bad nozzle fuel spray characteristics	Check and correct them.
	White smoke	
	• Improperly retarded injection timing.	Advance injection timing.
	• Water in fuel	Check and clean fuel lines.
Low idle speed irregular	Improper adjustment of idle button	Correct it.
	Bad fuel spray characteristic of nozzles.	Check and repair them.
	Incorrect injection timing	Correct it.
	Incorrect initial tension setting of idling spring or the spring broken.	Adjust or replace it.
	Control rack not smoothly move	Disassemble pump and repair it.
	Large spread in fuel delivery	Adjust it.
	Plunger worn	Replace it.
	Governor linkage not smoothly move.	Correct it.
	Defective feed pump	Disassemble and repair it.
Engine always runs at high speed	Accelerator cable sticking	Check and correct it.
	Governor linkage sticking	Disassemble and repair the governor.
	Control rack sticking	Check and correct it.
Engine starts and stops	Fuel lines clogged	Clean or replace fuel lines.
	Air in fuel caused by damaged fuel lines or improper connection of fuel lines.	Repair fuel lines or replace fuel lines and gaskets.

Symptom	Possible cause	Remedy/Prevention
Engine has low power	Pump out of timing	
	• Excessive advanced timing,	Check and correct it.
	resulting in loud knocking.	
	• Excessively retarded timing	Check and correct it.
	resulting in black smoke.	
	• Defective injection pump overflow	Repair or replace it.
	valve.	
	• Feed pressure too low	Repair the feed pump.
	• Improper accelerator cable adjustment	Adjust it.
	Nozzle faulty	
	• Fuel leakage from nozzle holder	Check and repair nozzle holder.
	• Bad nozzle spray characteristic	Repair or replace it.
	• Loosened adjusting screw in nozzle	Adjust it.
	holder, resulting in low opening pressure.	
	• Nozzle pressure spring broken	Replace it.
	Pump faulty	
	• Fuel leakage from delivery valve	Retighten the delivery valve holder if it is loosened or replace O-ring if the O-ring is defective.
	holder.	
	• Defective seat of delivery valve	Repair or replace it.
	assembly.	
	• Delivery valve spring broken	Replace the spring.
	• Plunger worn	Replace it.
	• Large spread in fuel delivery	Adjust it.
	• Wear of tappet roller	Replace the roller.
	• Camshaft bearing worn or broken	Replace it.
	• Improper adjustment of governor	Adjust it.
	fuel load stopper screw.	
Loud knocking	Improper injection timing	Correct it.
	Bad fuel nozzle spray pattern	Check and correct it.
	after-dribble.	
	High nozzle opening pressure	Adjust the opening pressure.
	Incorrect fuel deliveries to	Readjust the fuel deliveries.
	some nozzles.	

SPECIAL TOOL


Prior to starting an injection pump overhaul, it is necessary to have these special tools.

PLUNGER CLAMP

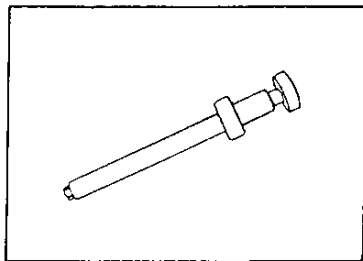


09512-1360

TAPPET CLAMP

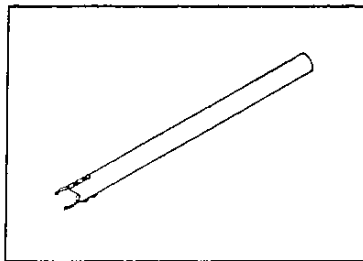


09512-1120

TAPPET ROLLER CLAMP

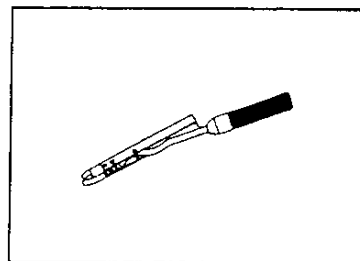


09512-1130

CAMSHAFT BEARING OUTER
RACE PULLER

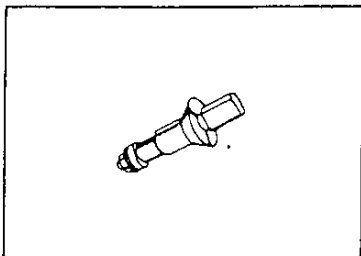


09512-1160 (REAR)
09512-1430 (FRONT)

TAPPET INSERTER

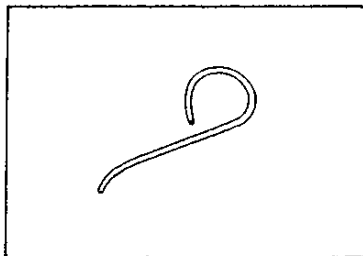


09512-1380

CAMSHAFT CLEARANCE GAUGE

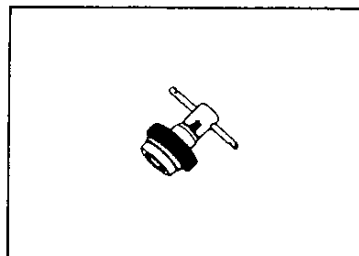


09512-1150

SPRING HOLDER

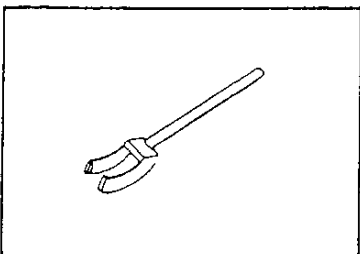


09512-1370

TAPPET GAP INSTRUMENT

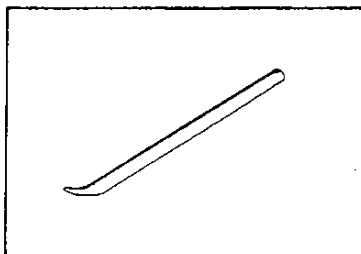


09512-1410

HOLDING WRENCH

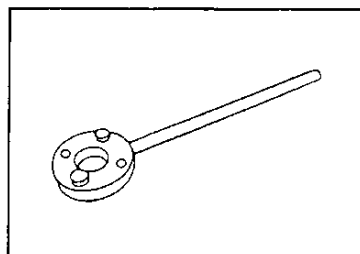


09512-1710

TIMER EXTRACTOR

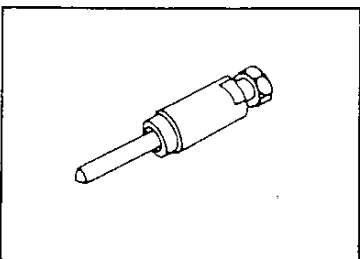

09512-1230 (SA-TYPE)
09512-1280 (SCZ-TYPE)

SPRING HOLDER

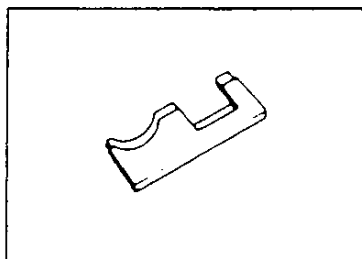


09512-1240

INJECTION PUMP

A-TYPE PUMP

[4-CYLINDER]

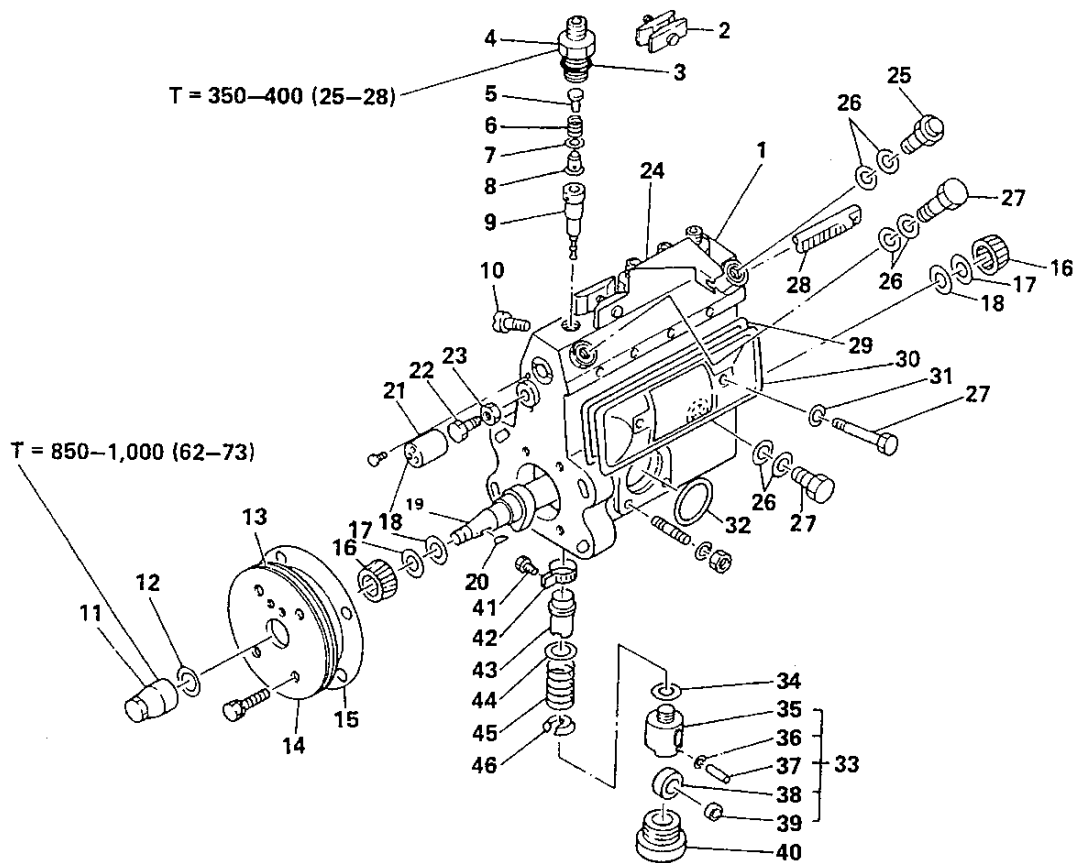

T = Tightening torque kg-cm (lb.ft)

- | | | |
|---------------------------|---------------------------------|--------------------------------|
| 1. Injection pump housing | 17. Shim | 33. Tappet assembly |
| 2. Lock plate | 18. Adjusting ring | 34. Shim |
| 3. O-ring | 19. Camshaft | 35. Tappet |
| 4. Delivery valve holder | 20. Woodruff key | 36. Retainer ring |
| 5. Stopper | 21. Control rod cover | 37. Tappet roller pin |
| 6. Delivery valve spring | 22. Bolt | 38. Tappet roller |
| 7. Gasket | 23. Nut | 39. Roller bushing |
| 8. Delivery valve | 24. Stop wire bracket | 40. Plug |
| 9. Plunger | 25. Overflow valve sub-assembly | 41. Screw |
| 10. Screw | 26. Special washer | 42. Control pinion |
| 11. Nut | 27. Bolt | 43. Control sleeve |
| 12. O-ring | 28. Control rod | 44. Plunger spring seat, upper |
| 13. O-ring | 29. Cover gasket | 45. Plunger spring |
| 14. Bearing cover | 30. Cover | 46. Plunger spring seat, lower |
| 15. Gasket | 31. Plain washer | |
| 16. Taper roller bearing | 32. O-ring | |

IMPORTANT POINT (S) – DISASSEMBLY

WARNING


- Breaking of the lead seals or crimp caps by anyone other than HINO or pump manufacture authorized service stations to make these adjustment will void the warranty.
- If fuel pump or governor difficulties are suspected, consult only HINO or pump manufacture authorized service stations, where the problem can be corrected and the injection pump lead seals and crimp caps can be reinstalled as required.
- Measure and record the fuel delivery characteristics of the pump before disassembling it.
- Keep the parts for each cylinder in separate groups and in an orderly arrangement. Parts to be replaced and parts to be used again must be kept separately.

REMOVE THE TIMER ASSEMBLY.

Refer to "TIMER AND COUPLING".

REMOVE THE GOVERNOR.


Refer to "GOVERNOR".

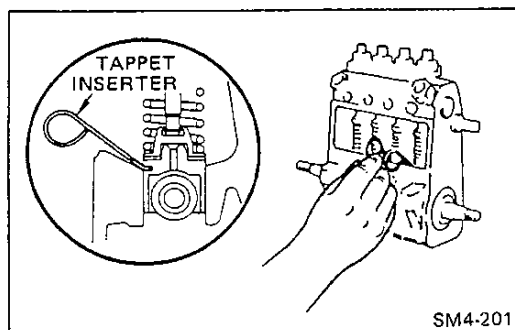

INSERT THE TAPPET INSERTER IN THE TAPPET HOLE.

Turn the camshaft and insert the tappet inserters in each tappet hole when their tappet is at the highest position.

Special Tool: Tappet Inserter (09512-1380)

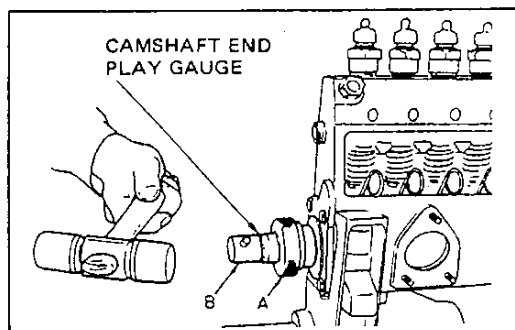


MEASURE THE CAMSHAFT END PLAY.


1. Mount the camshaft end play gauge on the camshaft drive end and be sure tighten "B".

Special Tool: Camshaft End Play Gauge (09512-1150)

2. By turning "A", create a clearance of about 1 mm (0.04in) between "A" and the bearing cover.
3. Lightly strike the end "B" 3 or 4 times with a plastic hammer.

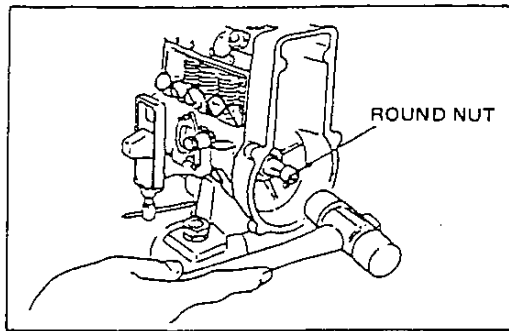


4. Lightly tighten "A" until it comes into contact with the bearing cover.
5. Lightly strike the camshaft governor end 3 or 4 times a plastic hammer.

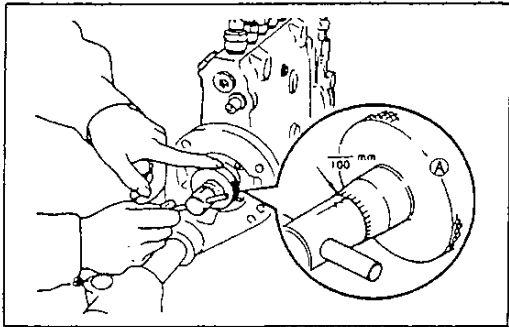

6. Lightly turn "A" until it comes into contact with the bearing cover, then read the clearance.

Assembly Standard: 0.03–0.05 mm (0.0012–0.0019 in)

Service Limit: 0.10 mm (0.004 in)

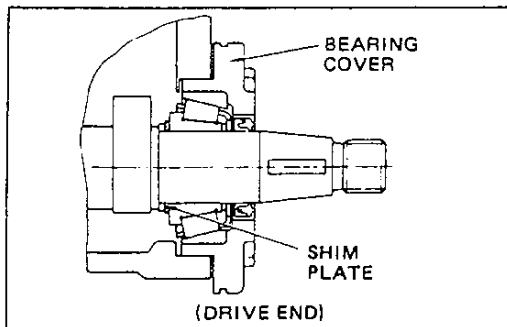


7. If the specification is not met, use appropriate shim plates at the drive end of camshaft.

REMOVE THE TAPPET ASSEMBLY.


1. Push the tappet with the tappet roller clamp and remove the tappet inspector.


Special Tool: Tappet Roller Clamp (09512-1130)

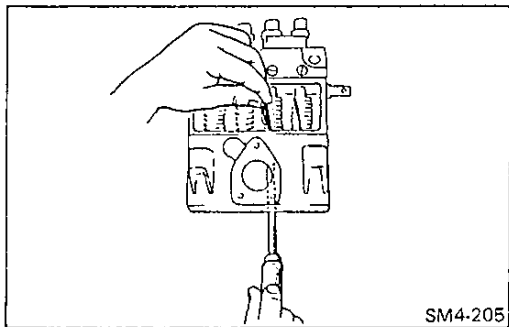

2. Remove the tappet through the camshaft bearing hole.


Special Tool: Tappet Clamp (09512-1120)

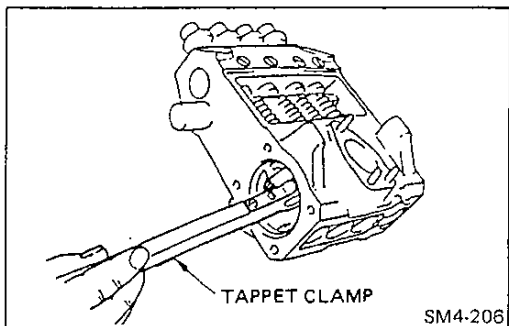

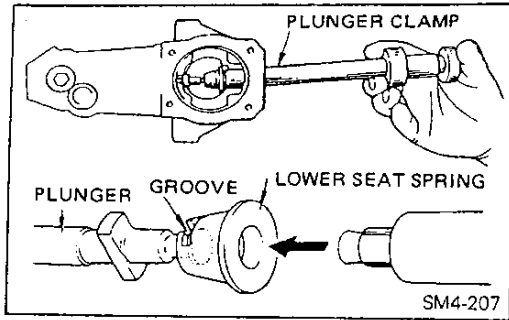**REMOVE THE PLUNGERS, SPRINGS AND CONTROL SLEEVE.**


1. Use the plunger clamp hold the spring lower seat and remove it together with the plunger.

Special Tool: Plunger Clamp (09512-1360)

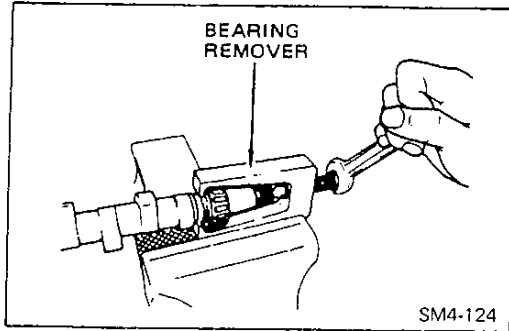
**REMOVE THE TAPER BEARING FROM THE CAMSHAFT.**

1. Remove the taper bearing from the drive end of the camshaft.

Special Tool: Bearing Remover (09510-1160)

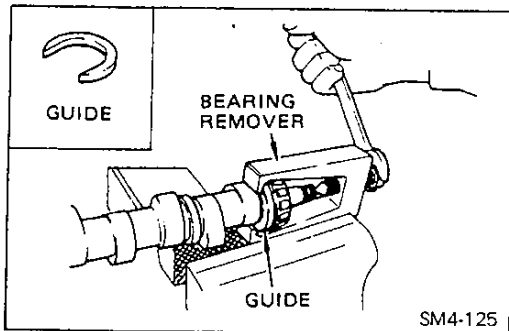

2. Use the guide to remove the bearing at the governor side.

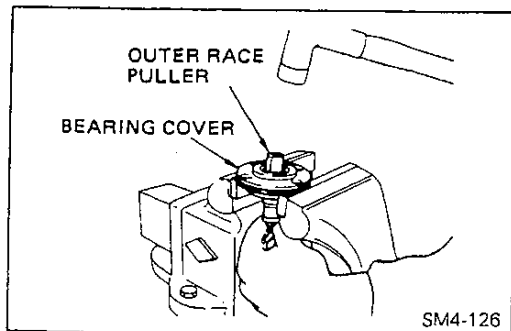

3. Use the outer race puller, to tap out the outer race in the bearing cover.





Special Tool: Outer Race Puller (09512-1430)

IMPORTANT POINT (S) – ASSEMBLY**WARNING**


- Wash all parts with clean diesel fuel before installing them, and any defective or damaged parts must be replaced.
- Do not allow dust or other foreign matter to enter the pump during assembly.
- Apply grease to O-rings and oil seals before installing them.
- Assemble the parts in correct order and to correct tightening torques, assembled dimensions etc.
- Assembly takes place in the reverse order of disassembly.

INSTALL THE PLUNGER BARRELS.

1. Before install the plunger barrels should be inspect the plunger barrels and plungers for wear, scratches, or discoloration.
2. Tilt the plunger to about 60°. Pull the plunger out approximately 10 to 15 mm (0.39–0.59 in) and release it to see if it slides down smoothly from its own weight.
3. Match the plunger notch with the injection pump housing knock pin.

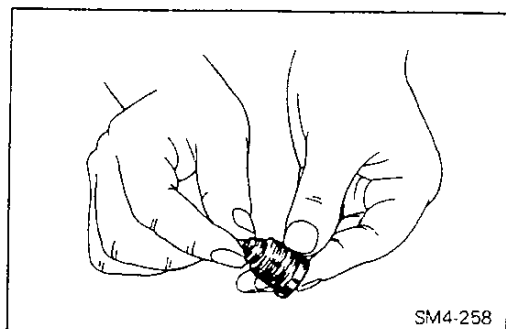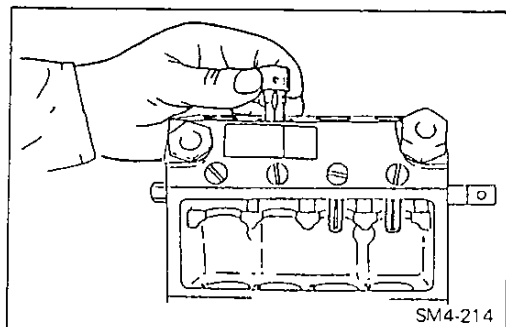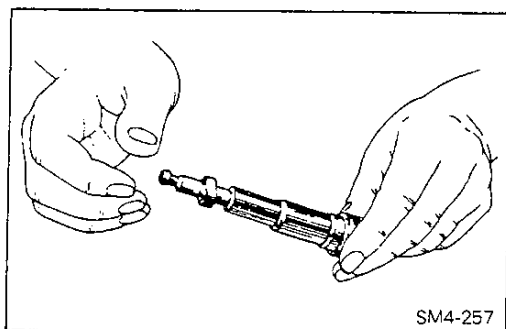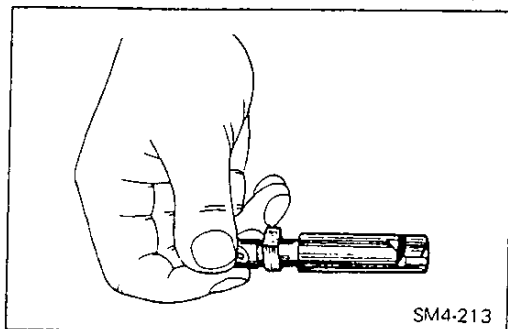
**INSTALL THE DELIVERY VALVES, SPRINGS AND HOLDERS.**

1. Before install the delivery valves, inspect the delivery valves for scratches on the valve seat or the piston sections.

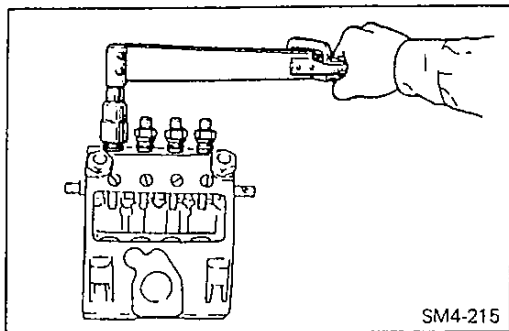


2. Install the gasket, spring, shim and stopper on the delivery valve.
3. Provisionally tighten the delivery valve holder with a new O-ring by hand.

NOTE: Tighten the delivery valve holder after installing the plunger.

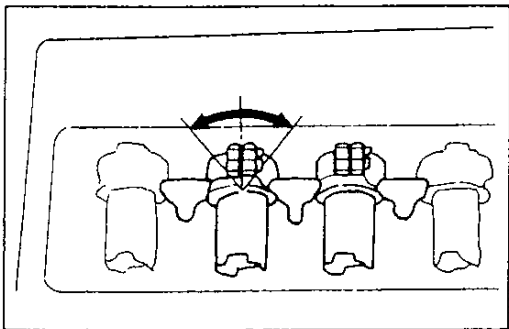

INSTALL THE CONTROL SLEEVES ON THE BARRELS.


NOTE: Make sure that the control sleeve swings evenly right and left when the control rack is moved to the right and left.

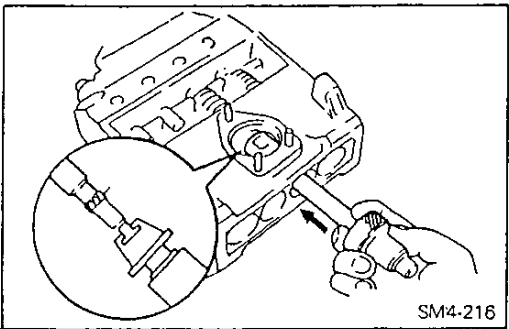

INSTALL THE PLUNGER AND TAPPET.


1. Assembly the plunger and spring lower seat, inserting the driving face marked with a number and the lower seat notch part upward (cover plate side).

Special Tool: Plunger Clamp (09512-1360)

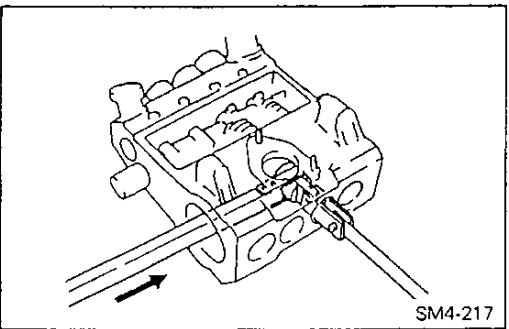


2. Install the tappet to the pump housing with the adjusting shim.

Special Tool: Tappet Roller Clamp (09512-1130)
Tappet Clamp (09512-1120)

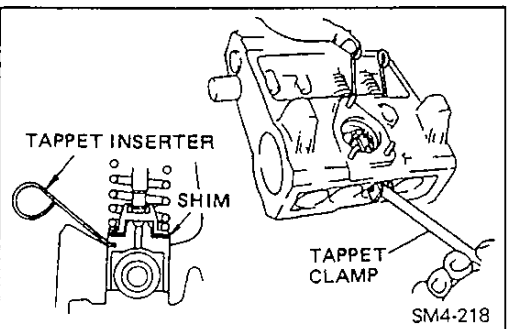


3. Using the tappet roller clamp to press in the tappet and hold it in with the tappet inserter.

Special Tool: Tappet Inserter (09512-1380)

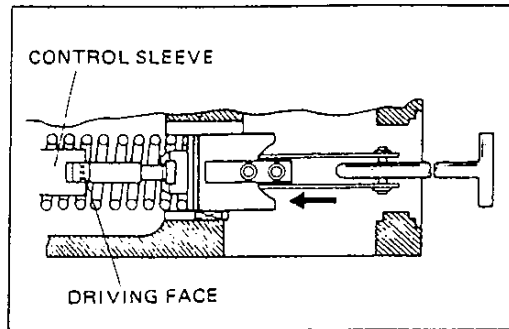

- NOTE:**
- Check that the driving face of the plunger fits to the groove of the control sleeve before inserting the tappet.
 - When inserting the tappet, check that the control rack slides smoothly and without catching.


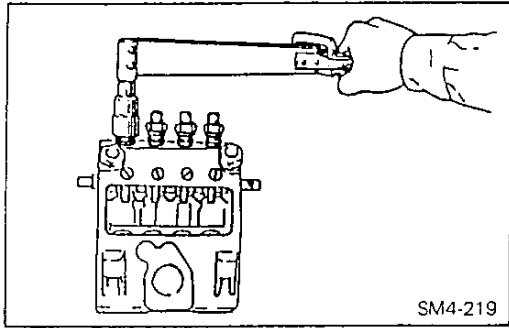


TIGHTEN THE DELIVERY VALVE HOLDER.



When one delivery valve holder is tightened, move the control rack to the right and left and inspect the tightness of the rack.

Tightening Torque: 400–450 kg-cm (29–32 lb.ft)

INSPECTION AND REPAIR

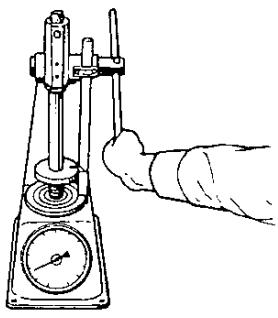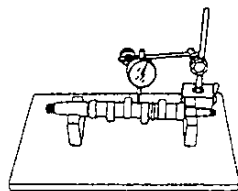Inspection Item	Standard	Limit	Remedy	Inspection Procedure
Plunger springs tension.	24.4 kg (49.4 lb) at 41.4 mm (1.63 in)	21.0 kg (46.3 lb)	Replace, spring.	
Delivery valve springs tension.	3.1 kg (6.8 lb) at 17.0 mm (0.67 in)	2.7 kg (6.0 lb)	Replace, spring.	
Tappet wear.		0.3 mm (0.012 in)	Replace, tappet assembly.	
Camshaft run-out.		0.15 mm (0.006 in)	Replace, camshaft.	


SCZ-TYPE TIMER

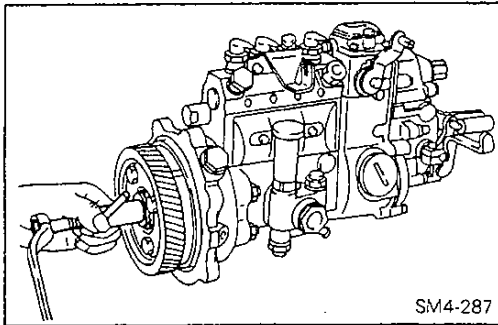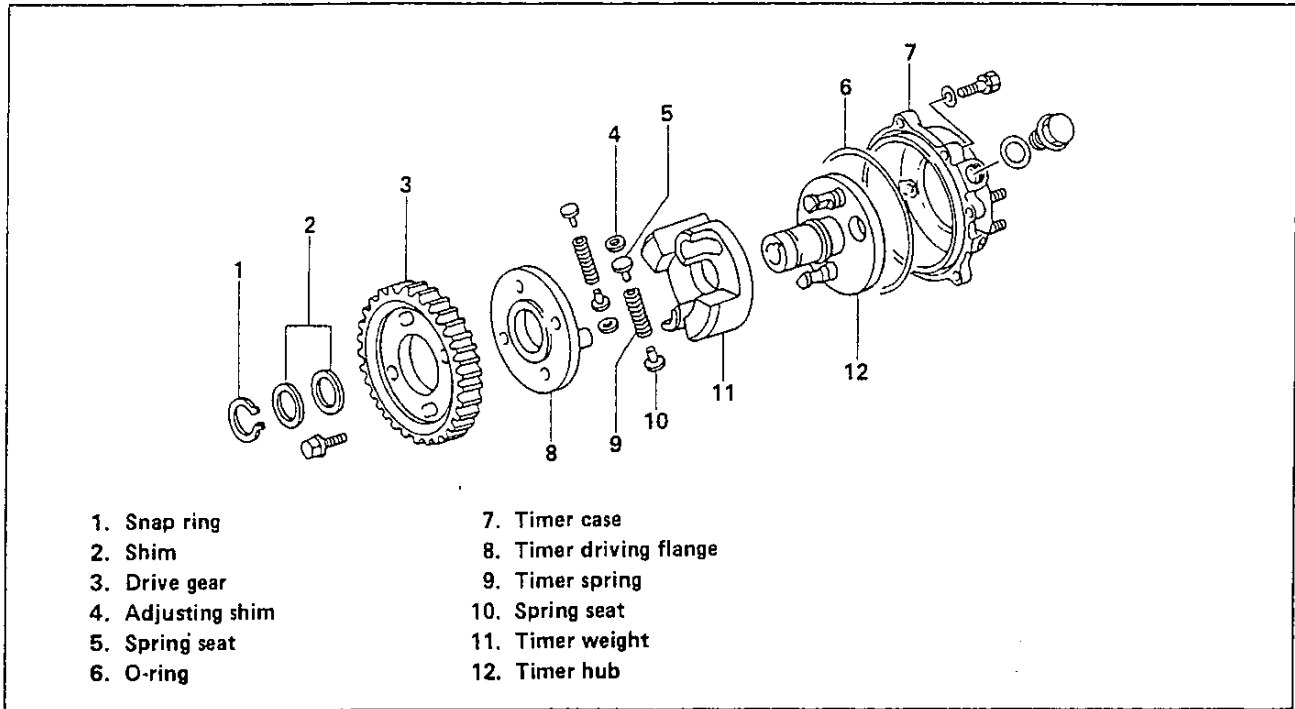

IMPORTANT POINT (S) – DISMOUNTING

REMOVE THE TIMER ASSEMBLY FROM INJECTION PUMP.


Special Tool: Timer Extractor (09512-1230)

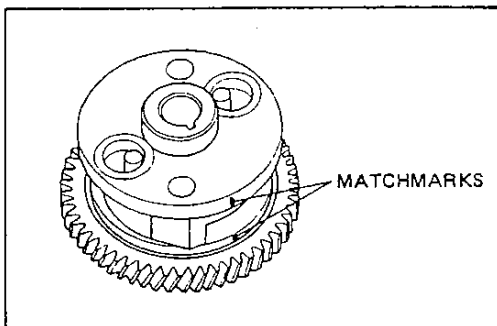

IMPORTANT POINT (S) – DISASSEMBLY


REMOVE THE DRIVE GEAR FROM TIMER.

NOTE: Place matchmarks on the timer flange and timer hub.

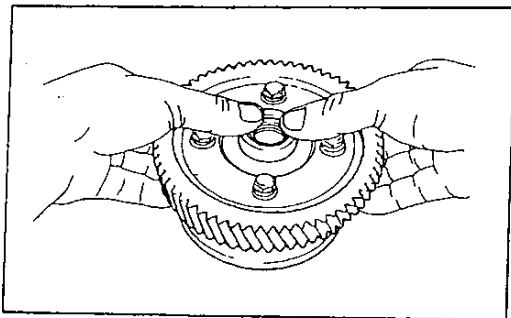


1. Remove the snap ring.
2. Pull up the timer flange.

NOTE: Be careful that the springs and shims do not fly out.

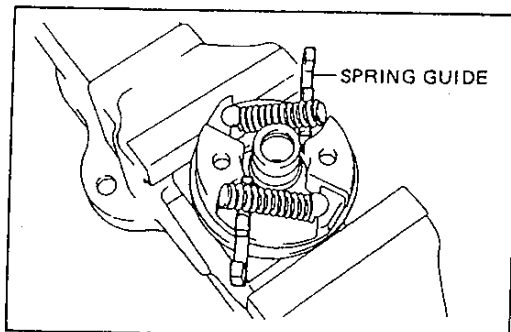


IMPORTANT POINT (S) – ASSEMBLY SET THE TIMER SPRINGS.

Special Tool: Spring Guide (09512-1240)

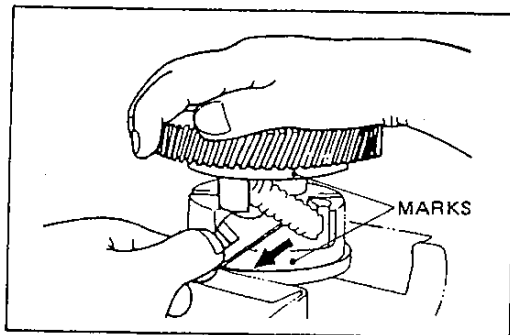

INSTALL THE TIMER FLANGE WITH DRIVE GEAR.


1. Align the marks on the drive gear and timer hub.
2. Hold the drive gear so that the springs will not fall out.

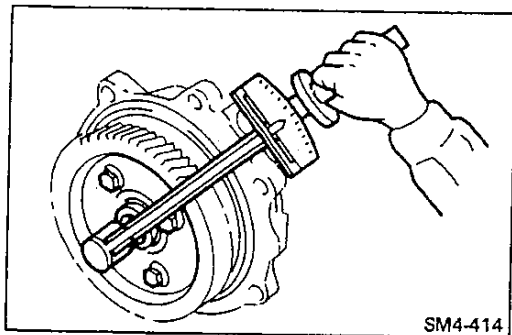

IMPORTANT POINT (S) – MOUNTING

INSTALL THE TIMER ASSEMBLY TO INJECTION PUMP.

SM4-414

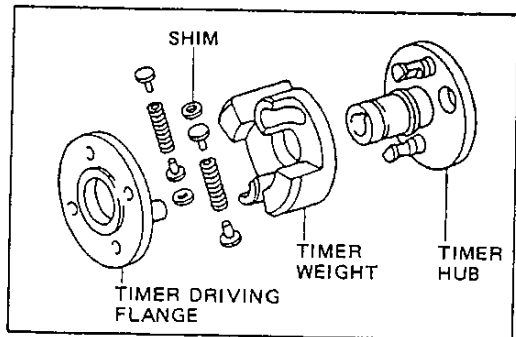

ADJUSTMENT OF THE TIMER.


INSPECT THE TIMER ADVANCE.

1. Set a stroboscope on a pump tester.
2. Check the timer advance.

Advance Angle: Refer to "CALIBRATION chart".




If angle is not within specification, adjust with proper shim.


FP/KS-TYPE

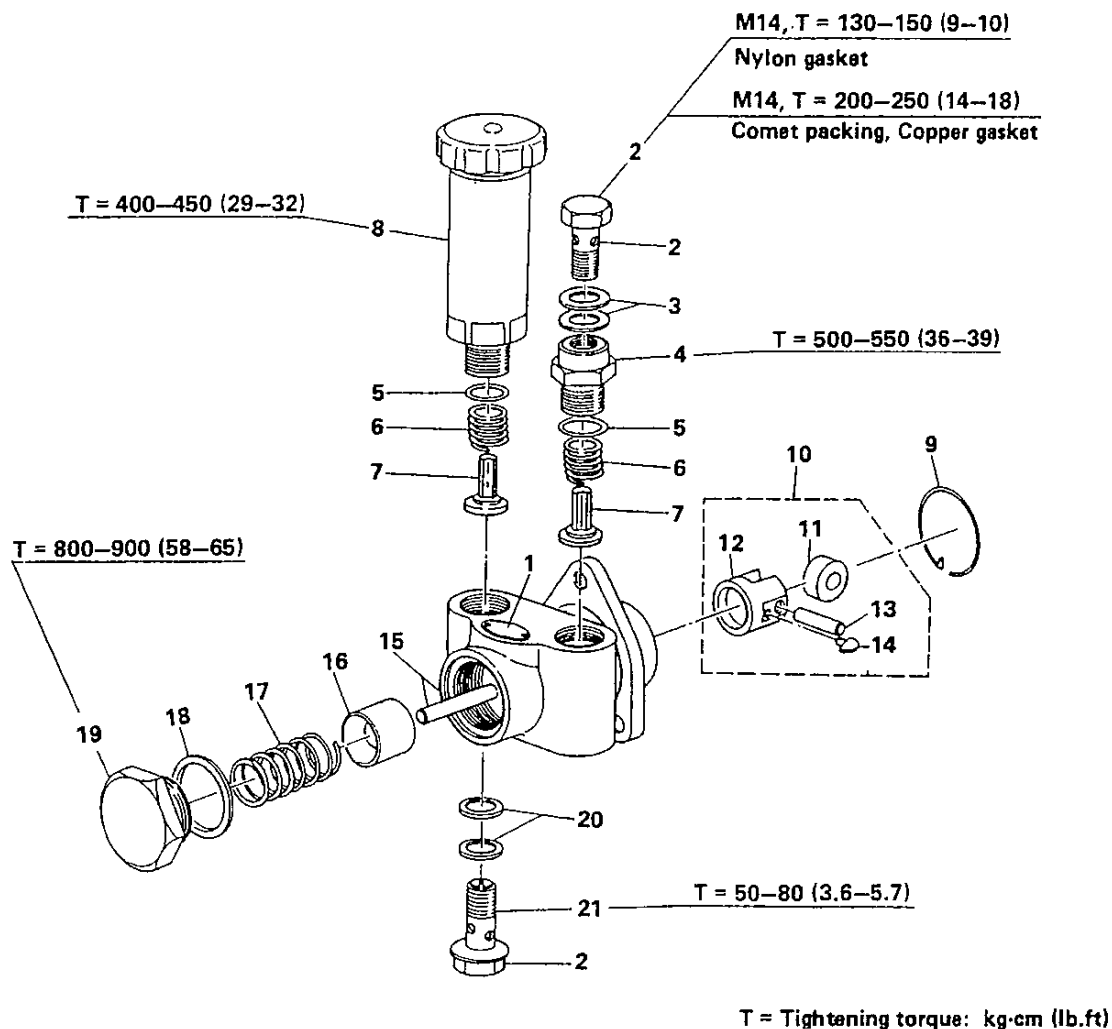

- | | |
|-------------------------|---|
| 1. Feed pump serial No. | 12. Tappet |
| 2. Joint bolt | 13. Pin |
| 3. Soft washer | 14. Sliding block |
| 4. Connector | 15. Feed pump housing, push rod, & oil seal |
| 5. O-ring | 16. Piston |
| 6. Check valve spring | 17. Spring |
| 7. Check valve | 18. Gasket |
| 8. Priming pump | 19. Plug |
| 9. Retainer ring | 20. Soft washer |
| 10. Tappet assembly | 21. Filter |
| 11. Roller | |

INSPECTION AND REPAIR

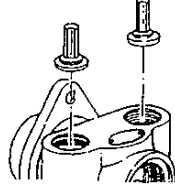
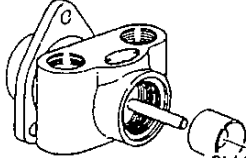
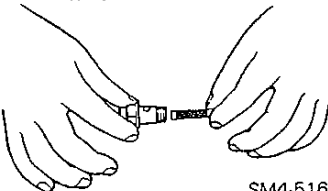
Inspection Item	Standard	Limit	Remedy	Inspection Procedure
Valve Seat. Wear, Damage	—	—	Replace, if necessary.	Visual check  SM4-517
Piston, Cylinder and Oil Seal. Wear, Damage	—	—	Replace, if necessary.	Visual check  SM4-518
Filter, Clogged	—	—	Clean	Visual check  SM4-516

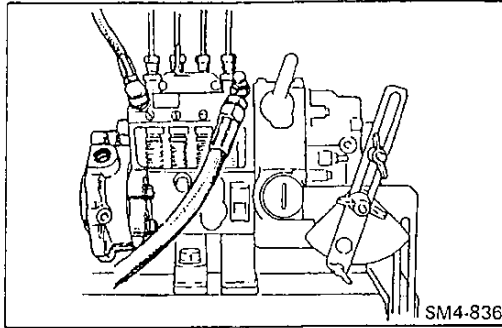

ADJUSTMENT


PREPARATION

1. Mount the injection pump correctly on the pump tester.
Remove the timer case in case of the SCZ type timer.
2. Attach a rack measuring device to the control rack and set to "0".
3. Install calibration nozzles and lines of the following specifications.
 - a) Nozzle
Nozzle type: 12SD12 (BOSCH Type)
Opening pressure: 175 kg/cm (2,489 lb.ft)
 - b) Line
Outside diameter: 6.0 mm (0.24 in)
Inner diameter: 2.0 mm (0.08 in)
Length: 600 mm (23.6 in)
4. Calibration oil
 - a) Calibration oil: SAE J967C
 - b) Oil temperature: 40–45°C (104–113°F)
5. Install the cover on the feed pump mounting surface and fill the pump camshaft chamber with engine oil.

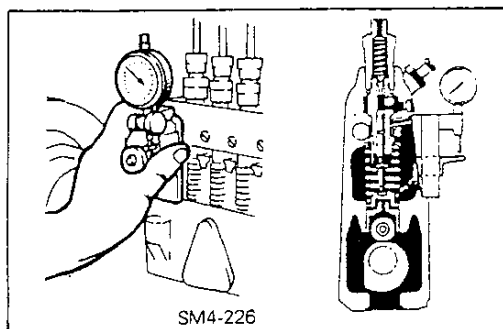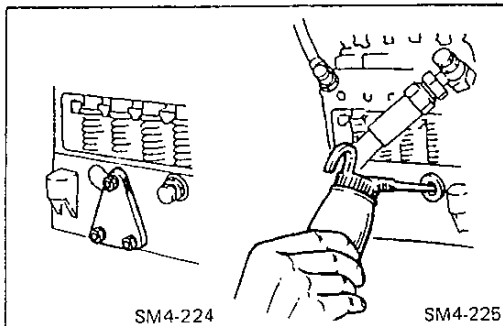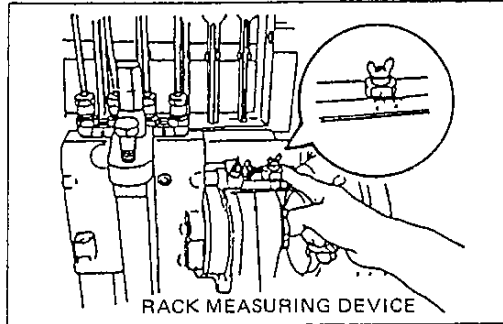


ADJUSTING THE INJECTION TIMING

1. Preparation of the pre-stroke.
 - a) Remove the plate cover.
 - b) Install a pre-stroke measuring instrument.
Bring the tappet of the first cylinder to its bottom dead center, and set the pointer tip on the tappet.

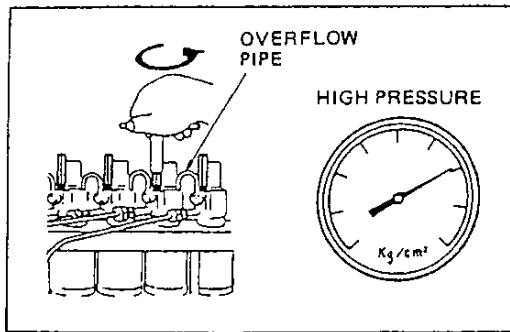


2. Measure the pre-stroke (No.1 plunger)
 - a) Set the control rack at full-load position.
 - b) Loosen the overflow screw of each nozzle holder.
 - c) Operate the high-pressure pump of the pump tester and let fuel run out of the overflow line.

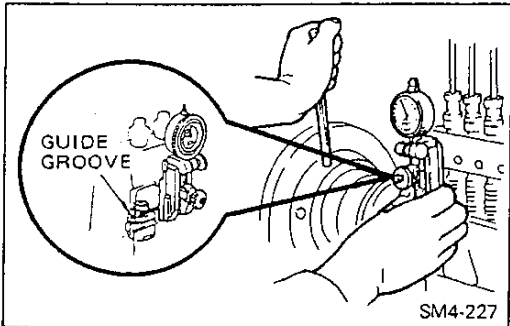


- d) Move the angle dial to set the first cylinder of the pump to bottom dead center and adjust the pre-stroke gauge to zero.

NOTE: Bottom dead center is the point at which the pointer of the dial gauge does not move even when the angle dial is rotated while fuel is flowing from the overflow line.

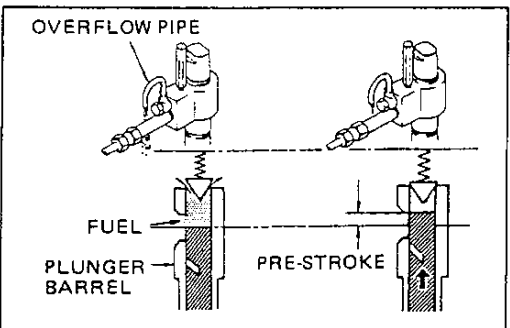


- e) Turn the camshaft clockwise with the angle dial and read the dial gauge when the fuel stops running out of the overflow line. This reading is the pre-stroke value of the pump.

Pre-stroke: Refer to "CALIBRATION chart"

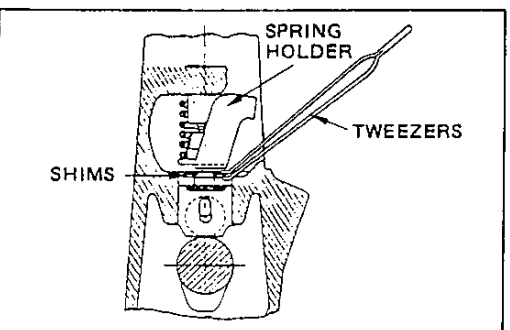

- f) If the pre-stroke value is not within specification, adjust by changing the tappet adjusting shim.


Special Tool: Spring Holder (09512-1370)

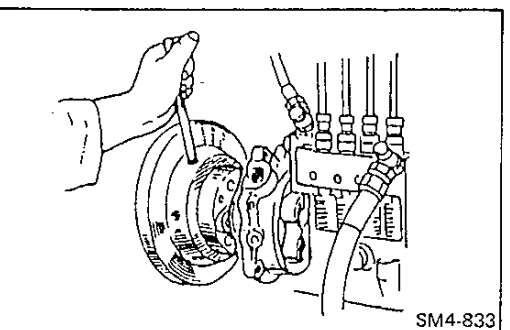


ADJUST THE INJECTION INTERVAL.

1. Using the No.1 cylinder injection starting point as a base, inspect and adjust the injection interval in the order of injection.

4-cylinder
Injection Interval: 89°45'—90°15'
Injection Order: 1—3—4—2

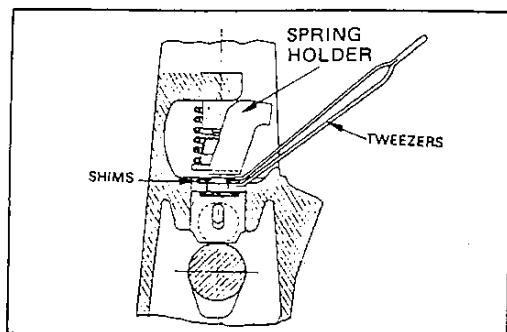


2. If the injection intervals are not within specification, adjust by using the same procedure as for pre-stroke adjustment.

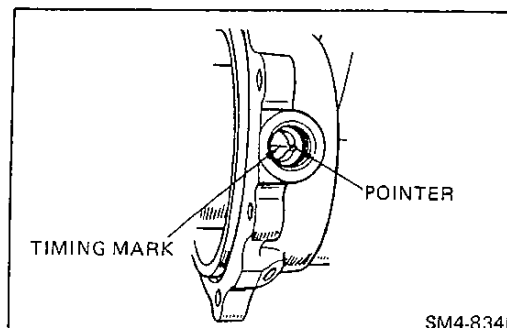

3. Set the No.1 cylinder at the injection starting point, and check that the marks on the timer and the marks on the pump body are aligned.

If the timing marks are not aligned, make a new mark on the timer and erase the old mark.

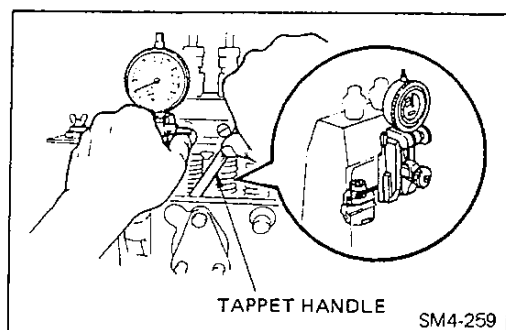

CHECK THE TAPPET TOP CLEARANCE.

1. Set the No.1 cylinder at the injection starting point, then move the tappet with the handle.

Tappet Top Clearance: More than 0.2 mm (0.0079 in)



Special Tool: Tappet Handle (09512-1410)

2. Follow the above procedure to check the other cylinders (No.2 through No.6).
3. If the tappet clearance is less than 0.2 mm (0.0079 in), re-check the pre-stroke.

MEASURING AND ADJUSTING THE INJECTION VOLUME.

Measure the injection volume for each control rack position and pump revolution.

Injecton Volume: Refer to "CALIBRATION chart."

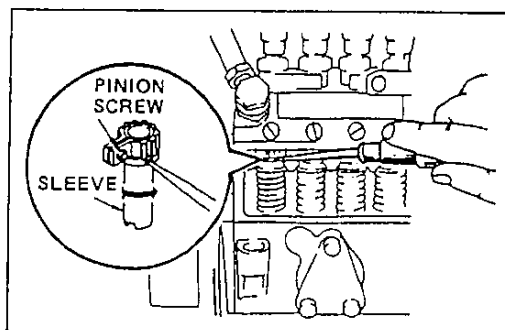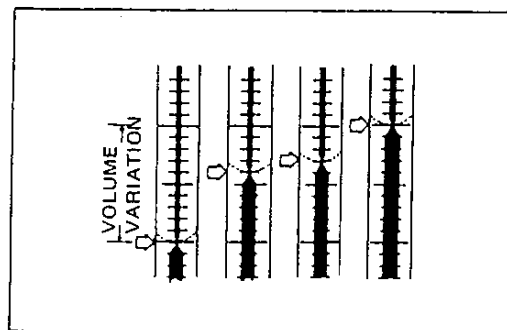

To adjust the injection volume, loosen the pinion screw and insert the adjusting pin into the hole in the control sleeve, then move the sleeve slightly.

(K.P.)

4-10-10 10:10:10



CHAPTER GV


INJECTION PUMP GOVERNOR (MODEL: RSV)

DESCRIPTION	GV-2
GOVERNOR	GV-3
SPECIAL TOOL	GV-4



DESCRIPTION


[MODEL: RSV]

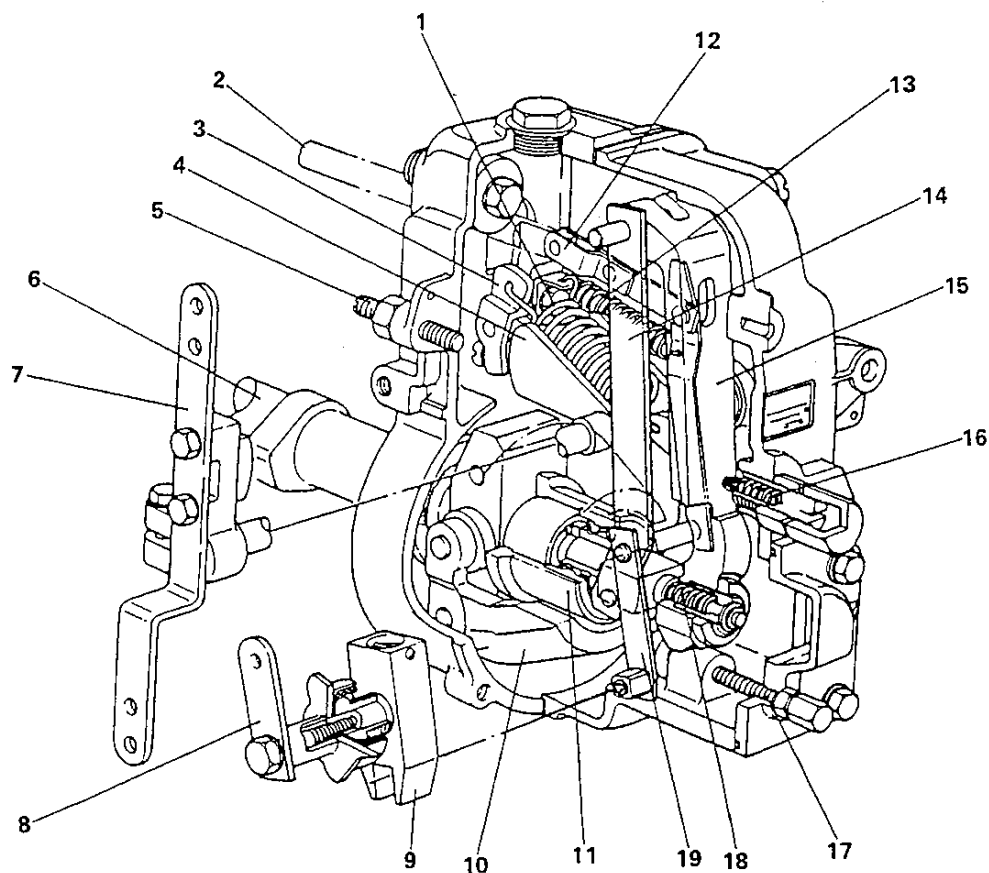

[Representative model]

- | | |
|-------------------------------|----------------------------|
| 1. Governor spring | 11. Sleeve |
| 2. Control rod | 12. Link |
| 3. Knuckle | 13. Start spring |
| 4. Swivel lever | 14. Guide lever |
| 5. Maximum speed stopper bolt | 15. Tension lever |
| 6. Camshaft | 16. Idle sub spring |
| 7. Control lever | 17. Full load stopper bolt |
| 8. Stop lever | 18. Idle spring |
| 9. Supporting lever | 19. Floating lever |
| 10. Flyweight | |

GOVERNOR

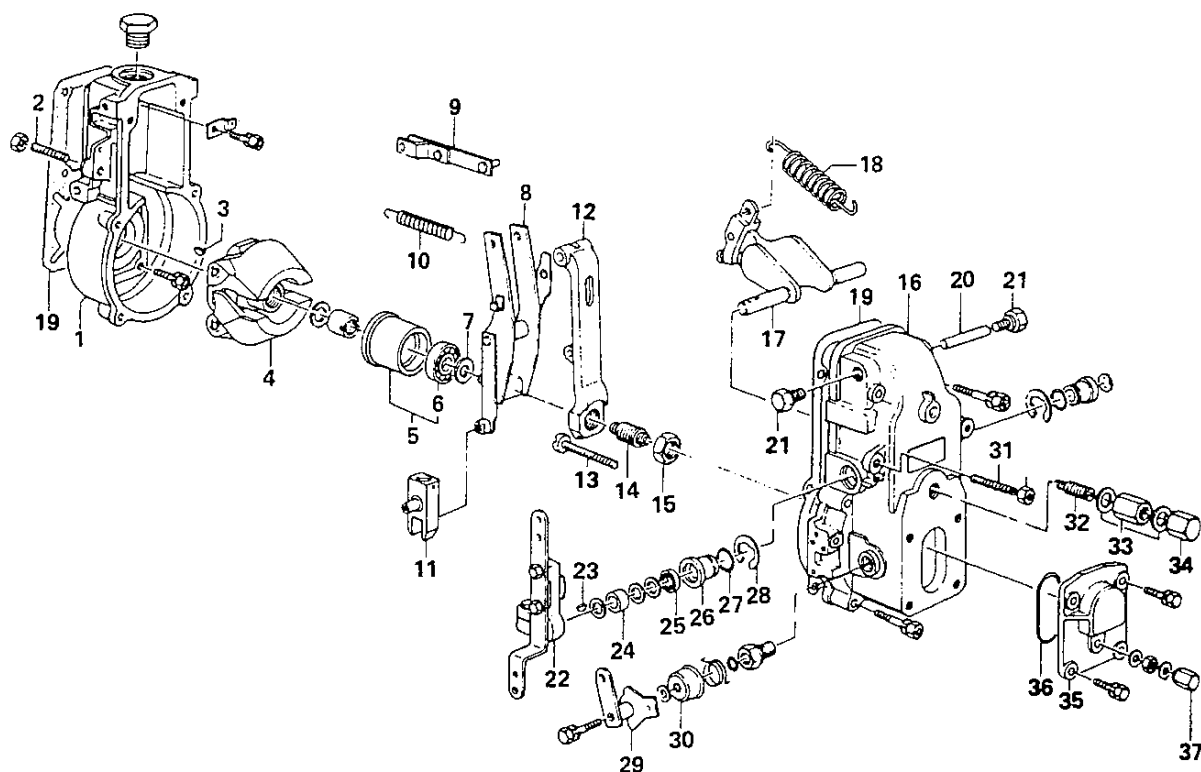


- | | | |
|-----------------------|---------------------|-----------------------|
| 1. Governor housing | 14. Idle spring | 27. O-ring |
| 2. Stopper bolt | 15. Lock nut | 28. Snap ring |
| 3. Woodruff key | 16. Governor cover | 29. Stop lever |
| 4. Flyweight | 17. Swivel lever | 30. Cap |
| 5. Sleeve | 18. Governor spring | 31. Idle stopper bolt |
| 6. Bearing | 19. Gasket | 32. Idle sub spring |
| 7. Shim | 20. Pin | 33. Nut |
| 8. Guide lever assy | 21. Plug | 34. Cap nut |
| 9. Link | 22. Control lever | 35. Closing cover |
| 10. Start spring | 23. Woodruff key | 36. O-ring |
| 11. Supporting lever | 24. Coller | 37. Cap nut |
| 12. Tension lever | 25. Oil seal | |
| 13. Full load stopper | 26. Bush | |

SPECIAL TOOL


Prior to starting an injection pump governor overhaul, it is necessary to have these special tools.

FLYWEIGHT EXTRACTOR

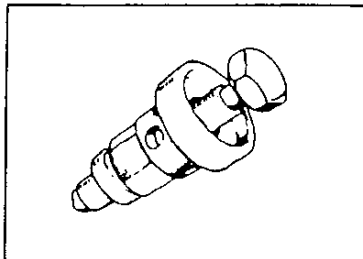

09511-1900

ROUND NUT WRENCH

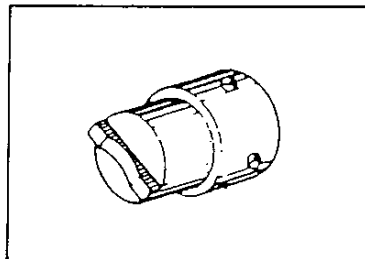

09511-1500

IMPORTANT POINT (S) – DISASSEMBLY



WARNING

- Breaking of the lead seals or crimp caps by anyother other than HINO or pump manufacture authorized service stations to make these adjustment will void the warranty.
- If fuel pump or governor difficulties are suspected, consult only HINO or pump manufacture authorized service stations, where the problem can be corrected and the injection pump lead seals and crimp caps can be rainstalled as required.


DISASSEMBLY THE GOVERNOR COVER FROM PUMP BODY.

1. Disconnect the shackle from the control rack.

NOTE: When remove the governor cover fitting bolt, hold the governor cover.

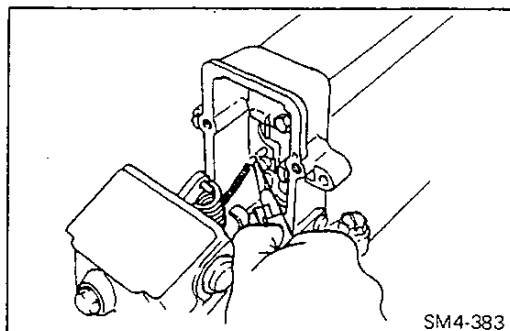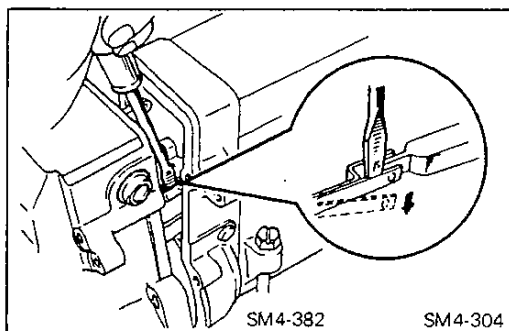

2. Disconnect the start spring.

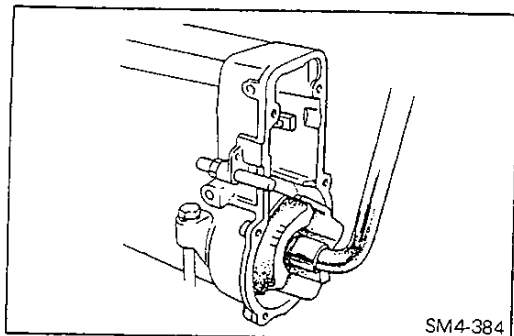


SM4-384

REMOVE THE FLYWEIGHT ROUND NUT.

NOTE: Use the holding spanner to keep the camshaft from rotating.

Special Tools: Round Nut Wrench (09511-1500)

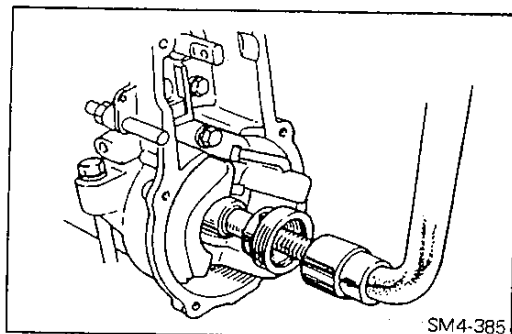


SM4-385

REMOVE THE FLYWEIGHT, USING THE FLYWEIGHT EXTRACTOR.

Special Tool: Flyweight Extractor (09511-1900)

IMPORTANT POINT (S) — Assembly**WARNING**

- Wash all parts with clean diesel fuel before installing them, and any defective or damaged parts must be replaced.
- Do not allow dust or other foreign matter to enter the pump during assembly.
- Apply grease to O-rings and oil seals before installing them.
- Assemble the parts in correct order and to correct tightening torque, assembled dimensions etc.
- Assembly takes place in the reverse order of disassembly.

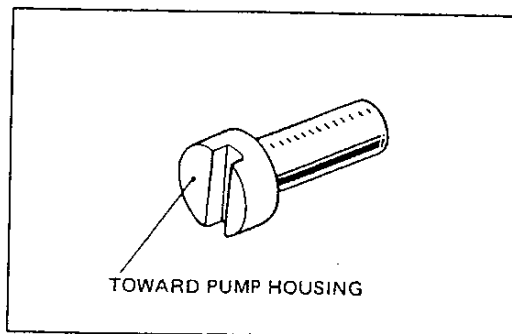


TOWARD PUMP HOUSING

INSTALL THE ADJUSTING LEVER

1. Install the shaft of the adjusting lever so that wide side of the shaft head surface is toward the pump body.

NOTE: Installing in reverse may cause the floating lever to contact the speed control spring, resulting in operational malfunction.

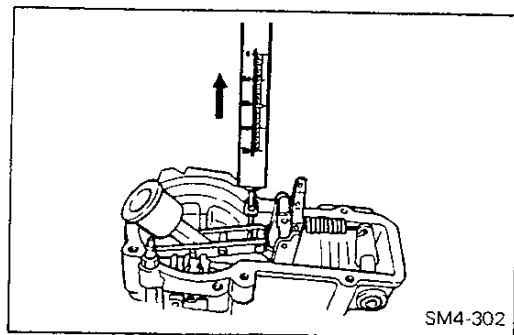


SM4-302

CHECK THE GOVERNOR LINKAGE FOR SMOOTH OPERATION.


Hook under the guide lever, and pull upwards, using a spring balance.

Starting force: 140–180 g (4.9–6.3 oz)

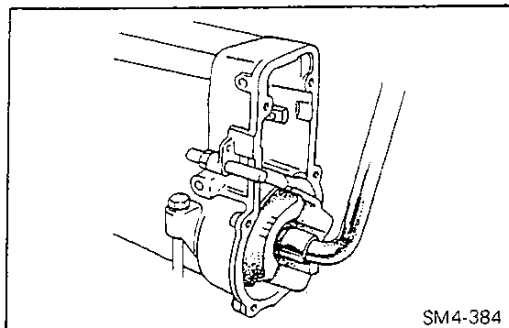**INSTALL THE FLYWEIGHT TO PUMP CAMSHAFT.**

Using a special tools, tighten the round nut.

Special Tools: Round Nut Wrench (09511-1500)

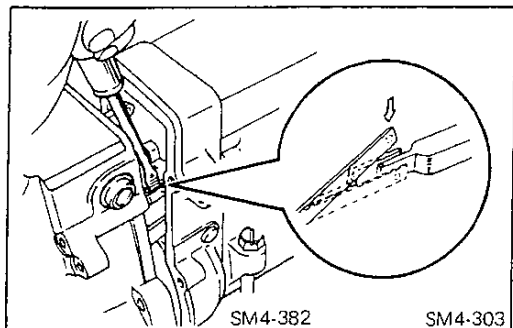**INSTALL THE GOVERNOR HOUSING TO PUMP BODY.**

1. Connect the start spring.
2. Connect the shackle to control rack.


**ADJUSTMENT OF THE GOVERNOR
[MODEL; RSV]****1. PREPARATION**


1. Connect the rack measuring device to the control rack and set to "0".
2. Connect the fuel line.
3. Refill the camshaft chamber with engine oil.
4. Install the angle gauge on the adjusting lever.

2. STEPS IN GOVERNOR ADJUSTMENT.

Perform governor testing and adjustment in the following sequence (For values of N. and R Refer to "CALIBRATION chart"):

1. Adjustment of maximum speed control.
2. Adjustment of speed droop.
3. Adjustment of idling speed control.

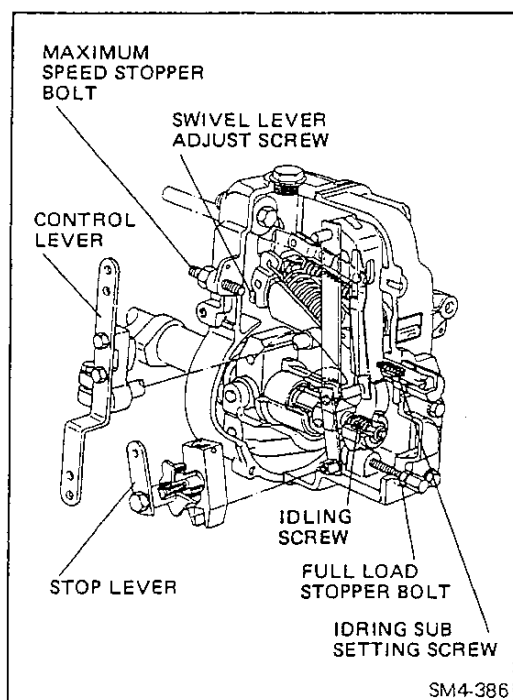

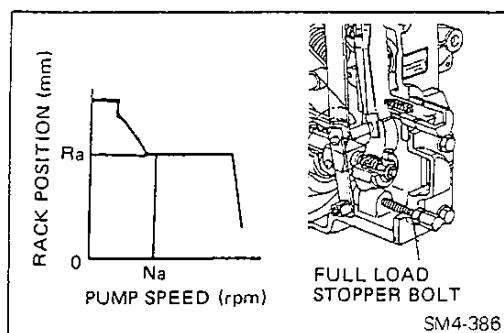

1. Adjustment of maximum speed control


NOTE: The control lever should be full load position.

- a) Adjust the full load stopper bolt.
At a pump speed of N_a rpm, adjust the rack position to R_a mm with the full load stopper bolt.

- b) Adjust the maximum speed stopper bolt.


At a pump speed of N_b rpm, adjust the rack position to R_b mm with maximum speed stopper bolt.

NOTE: The control rack should start to be pulled.

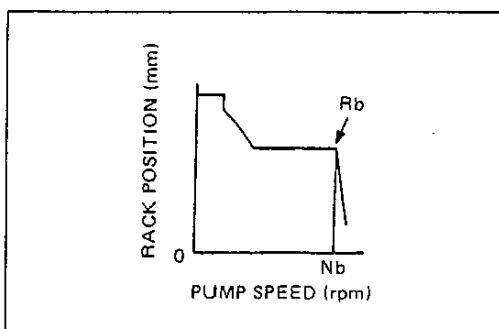

2. Adjust of speed droop.

At a pump speed of N_c rpm, adjust rack position to R_c mm with swivel lever adjusting screw.

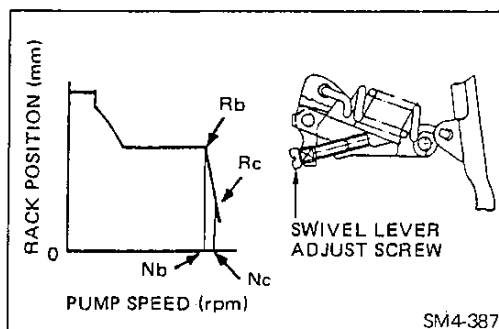


3. Adjusting of idling speed control

- a) At a pump speed of N_a rpm, adjust the rack position to R_d mm with idling screw.


NOTE: The control lever angle, refer to CALIBURATION chart.

- b) At a pump speed of N_e rpm, adjust the rack position to R_e mm with idling sub setting screw.

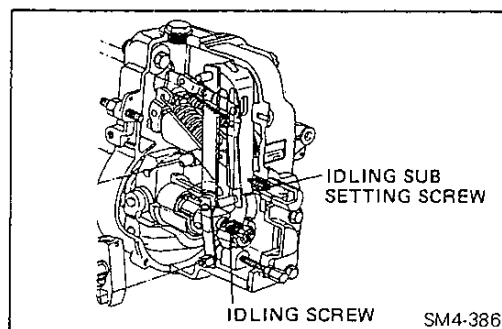

GOVERNOR EXTERNAL LEAD SEALS AND CRIMP CAPS.

NOTE: All adjusting devices on the fuel injection pump governor, are wired and lead sealed as a protection for the customer. This is to prevent unauthorized readjustment which may cause engine malfunction and/or engine failure. Periodically check to insure that these seals are not broken as this will void the warranty.

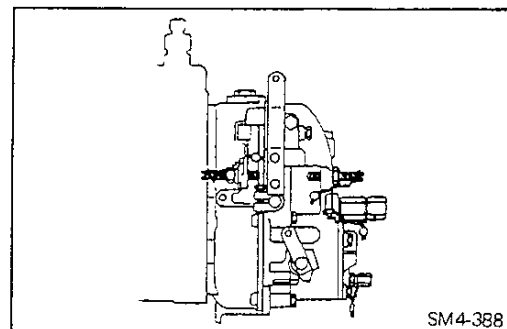

(K.P.)

CHAPTER GV


INJECTION PUMP GOVERNOR

(MODEL: RSV with BOOST COMPENSATOR)

GOVERNOR	GV-2
SPECIAL TOOL	GV-3
BOOST COMPENSATOR	GV-7



GOVERNOR

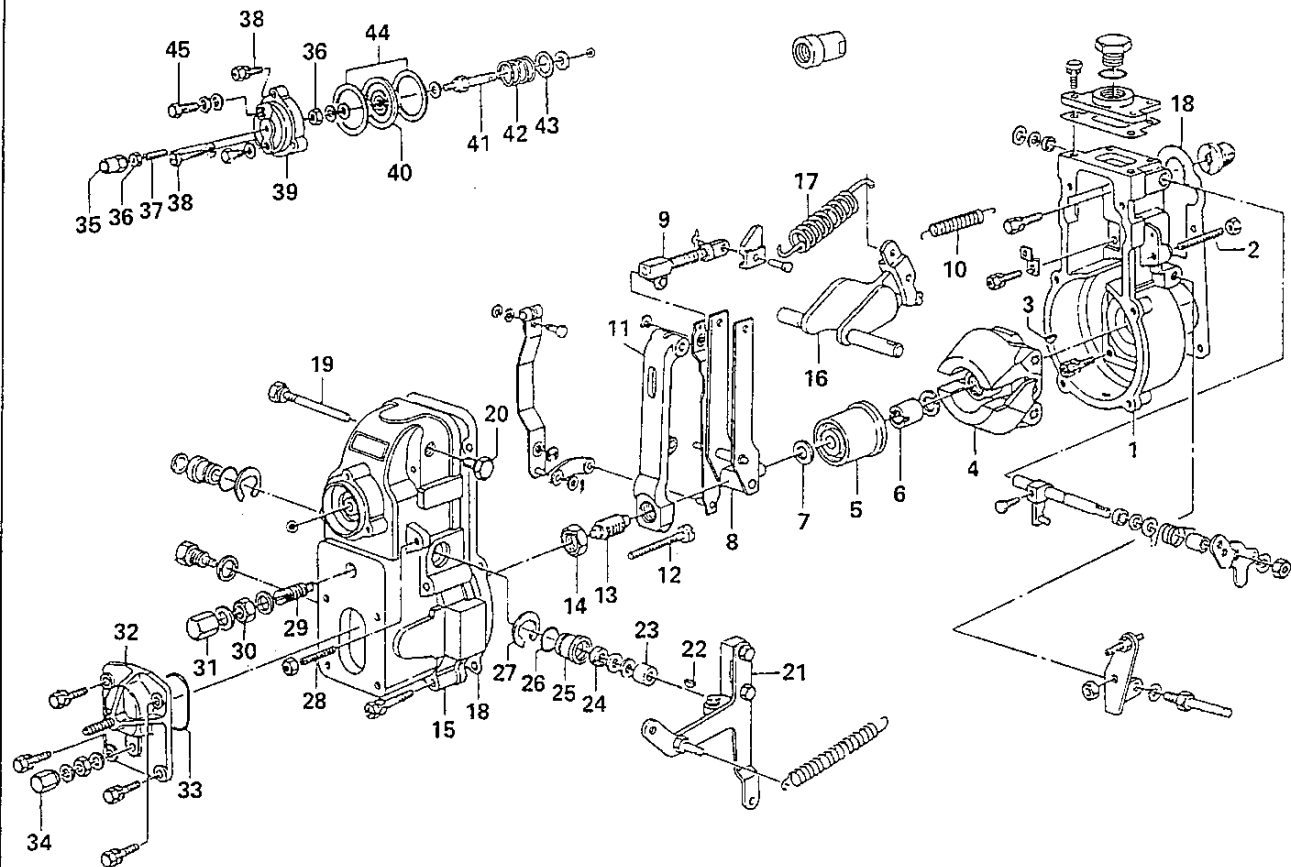

1. Governor housing
2. Stopper bolt
3. Woodruff key
4. Flyweight
5. Sleeve
6. Bearing
7. Shim
8. Guide lever assy
9. Link
10. Start spring
11. Tension lever
12. Full load stopper
13. Idle spring
14. Lock nut
15. Governor cover


16. Swivel lever
17. Governor spring
18. Gasket
19. Pin
20. Plug
21. Control lever
22. Woodruff key
23. Collar
24. Oil seal
25. Bush
26. O-ring
27. Snap ring
28. Idle stopper bolt
29. Idle sub spring
30. Nut

31. Cap nut
32. Closing cover
33. O-ring
34. Cap nut
35. Cap nut
36. Lock nut
37. Adjust screw
38. Cover fixing bolt
39. Cover
40. Diaphragm
41. Push rod
42. Spring
43. Adjusting shim
44. Gasket
45. Union bolt

SPECIAL TOOL


Prior to starting an injection pump governor overhaul, it is necessary to have these special tools.

FLYWEIGHT EXTRACTOR

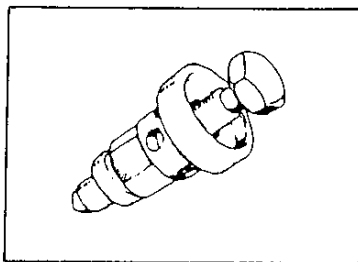

09511-1900

ROUND NUT WRENCH

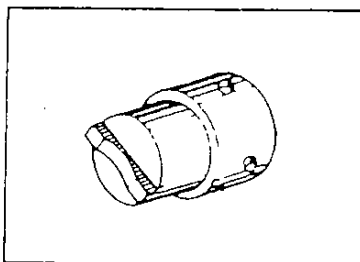

09511-1500

IMPORTANT POINT (S) – DISASSEMBLY



WARNING

- Breaking of the lead seals or crimp caps by anyother other than HINO or pump manufacture authorized service stations to make these adjustment will void the warranty.
- If fuel pump or governor difficulties are suspected, consult only HINO or pump manufacture authorized service stations, where the problem can be corrected and the injection pump lead seals and crimp caps can be rainstalled as required.


DISASSEMBLY THE GOVERNOR COVER FROM PUMP BODY.

1. Disconnect the shackle from the control rack.

NOTE: When remove the governor cover fitting bolt, hold the governor cover.

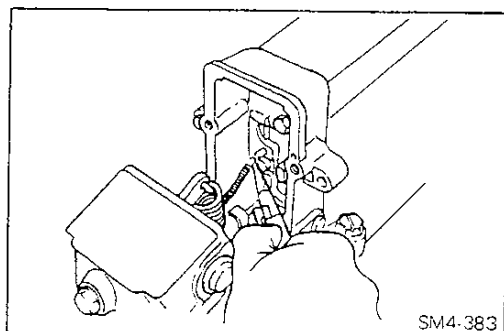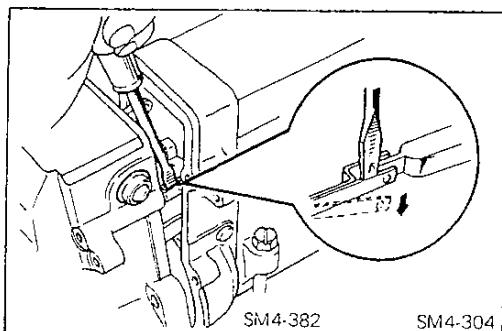


2. Disconnect the start spring.

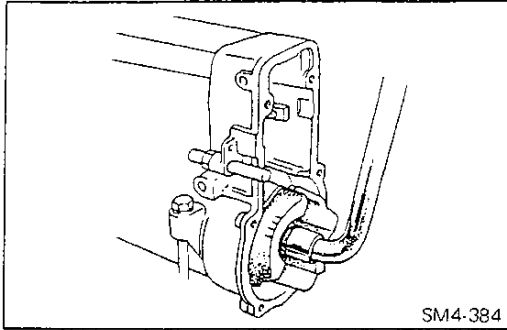**REMOVE THE FLYWEIGHT ROUND NUT.**

NOTE: Use the holding spanner to keep the camshaft from rotating.


Special Tools: Round Nut Wrench (09511-1500)

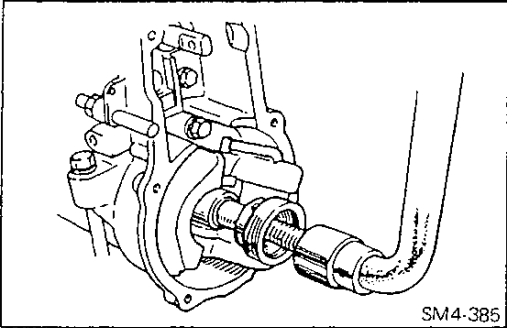**REMOVE THE FLYWEIGHT, USING THE FLYWEIGHT EXTRACTOR.**

Special Tool: Flyweight Extractor (09511-1900)


IMPORTANT POINT (S) — Assembly**WARNING**

- Wash all parts with clean diesel fuel before installing them, and any defective or damaged parts must be replaced.
- Do not allow dust or other foreign matter to enter the pump during assembly.
- Apply grease to O-rings and oil seals before installing them.
- Assemble the parts in correct order and to correct tightening torque, assembled dimensions etc.
- Assembly takes place in the reverse order of disassembly.

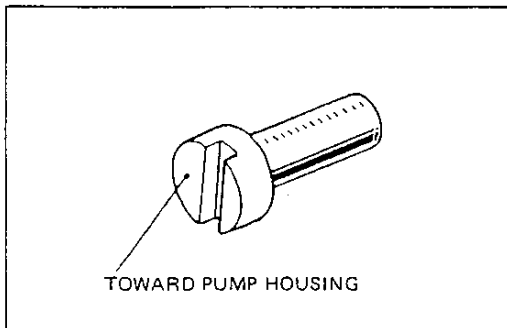**INSTALL THE ADJUSTING LEVER**


1. Install the shaft of the adjusting lever so that wide side of the shaft head surface is toward the pump body.

NOTE: Installing in reverse may cause the floating lever to contact the speed control spring, resulting in operational malfunction.

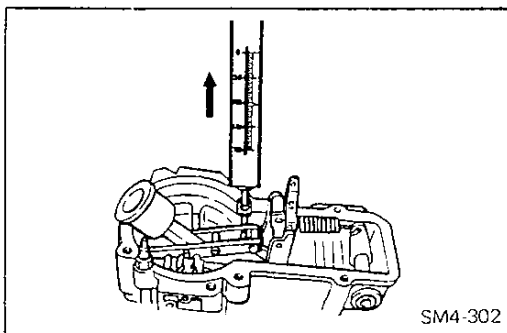**CHECK THE GOVERNOR LINKAGE FOR SMOOTH OPERATION.**


Hook under the guide lever, and pull upwards, using a spring balance.

Starting force: 140–180 g (4.9–6.3 oz)

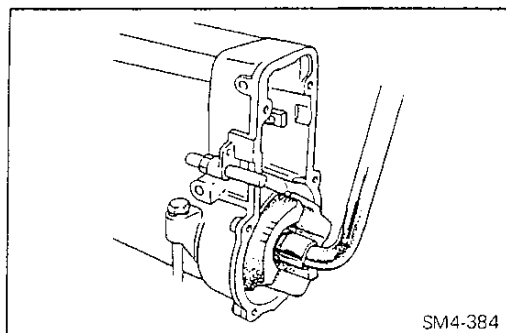**INSTALL THE FLYWEIGHT TO PUMP CAMSHAFT.**

Using a special tools, tighten the round nut.


Special Tools: Round Nut Wrench (09511-1500)

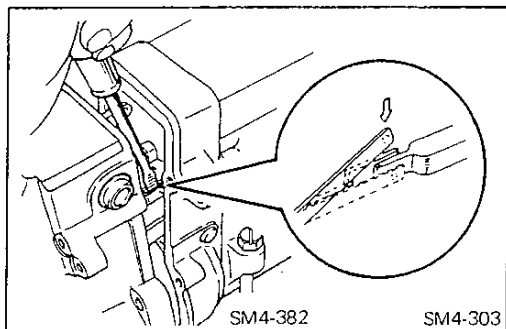**INSTALL THE GOVERNOR HOUSING TO PUMP BODY.**

1. Connect the start spring.
2. Connect the shackle to control rack.


**ADJUSTMENT OF THE GOVERNOR
[MODEL; RSV]****1. PREPARATION**

1. Connect the rack measuring device to the control rack and set to "0".
2. Connect the fuel line.
3. Refill the camshaft chamber with engine oil.
4. Install the angle gauge on the adjusting lever.

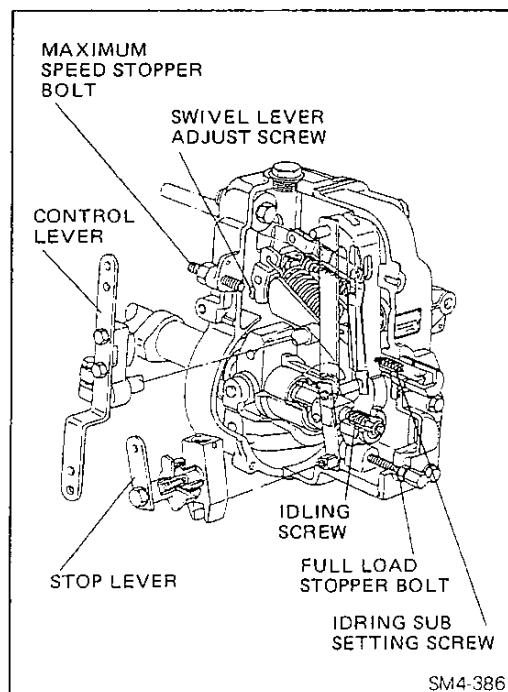**2. STEPS IN GOVERNOR ADJUSTMENT.**

Perform governor testing and adjustment in the following sequence (For values of N. and R Refer to "CALIBRATION chart"):

1. Adjustment of maximum speed control.
2. Adjustment of speed droop.
3. Adjustment of idling speed control.

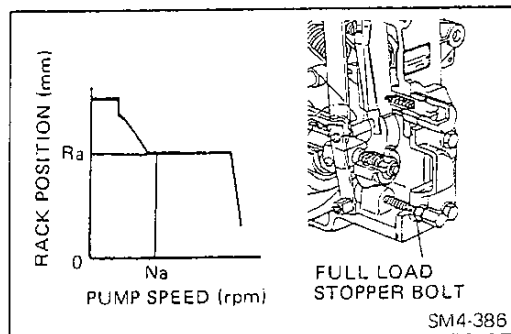

1. Adjustment of maximum speed control

NOTE: The control lever should be full load position.



a) Adjust the full load stopper bolt.

At a pump speed of N_a rpm, adjust the rack position to R_a mm with the full load stopper bolt.

b) Adjust the maximum speed stopper bolt.

At a pump speed of N_b rpm, adjust the rack position to R_b mm with maximum speed stopper bolt.

NOTE: The control rack should start to be pulled.

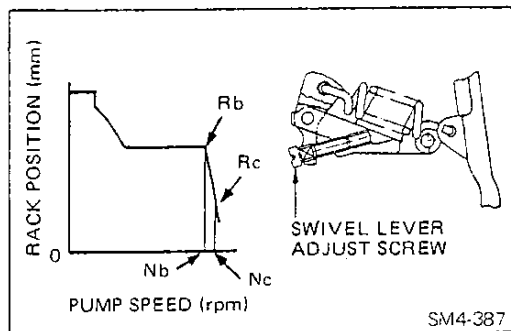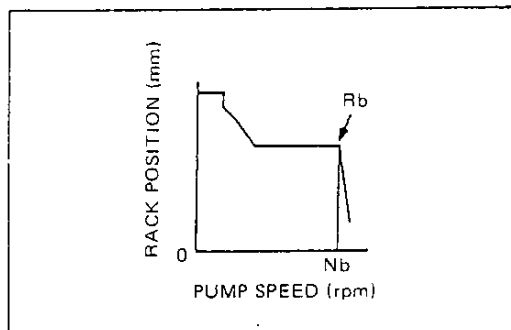

2. Adjust of speed droop.


At a pump speed of N_c rpm, adjust rack position to R_c mm with swivel lever adjusting screw.

3. Adjusting of idling speed control



a) At a pump speed of N_a rpm, adjust the rack position to R_d mm with idling screw.

NOTE: The control lever angle, refer to **CALIBRATION** chart.

b) At a pump speed of N_e rpm, adjust the rack position to R_e mm with idling sub setting screw.

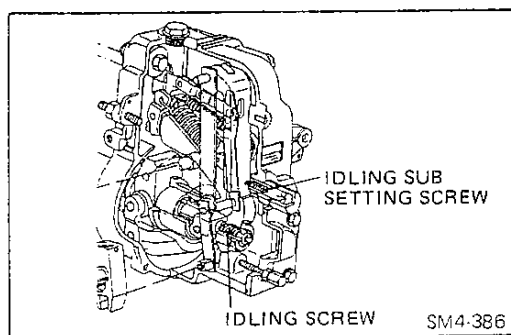

BOOST COMPENSATOR

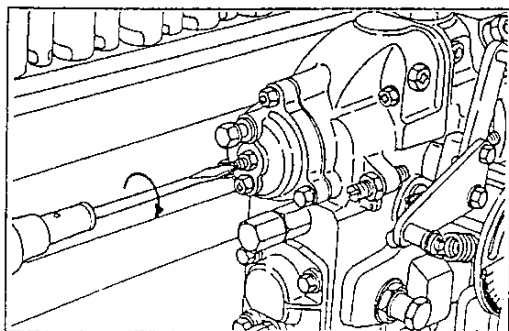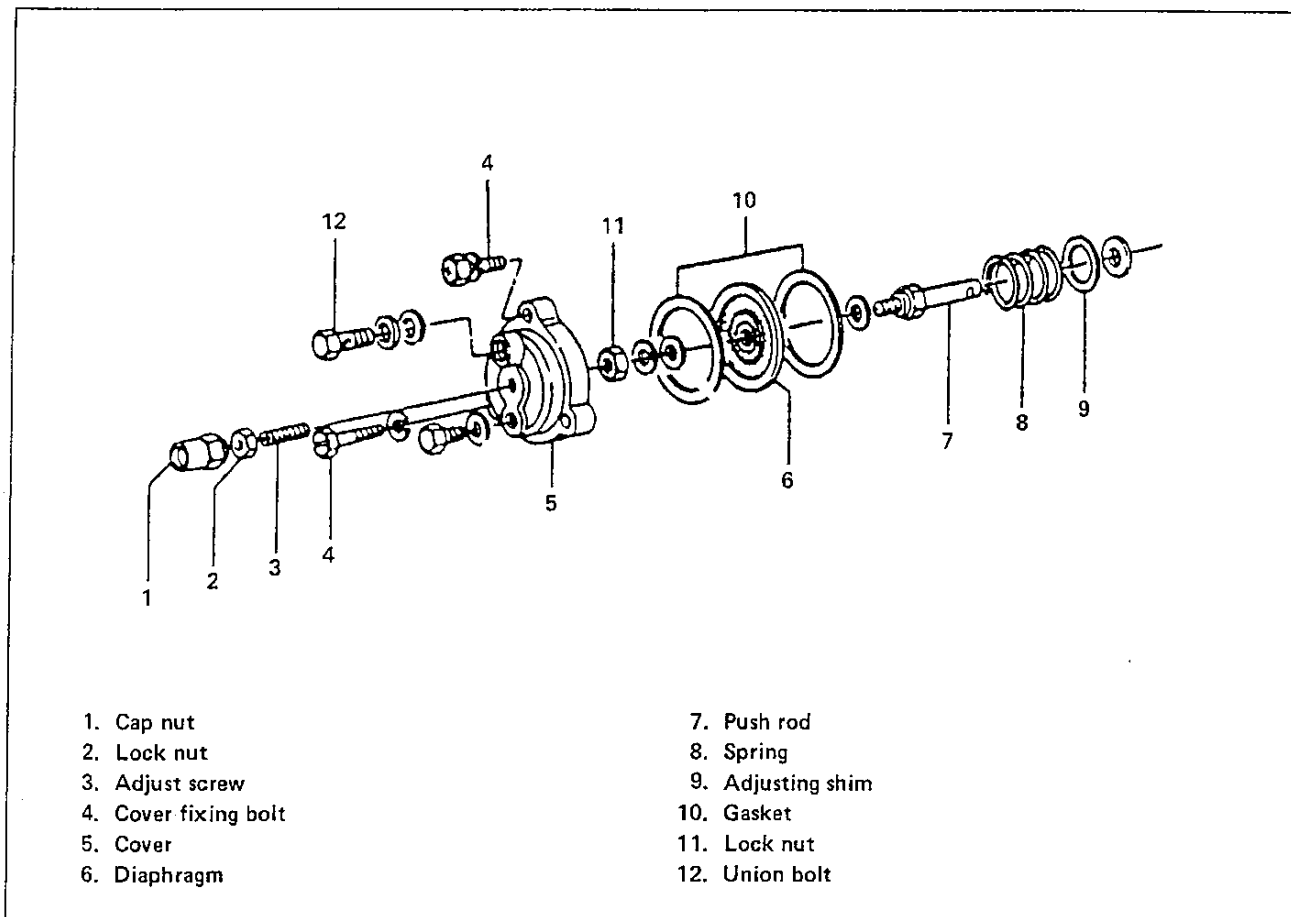

ADJUSTMENT OF BOOST COMPENSATOR

TEMPORARY FIXING OF ADJUST SCREW FOR BOOST COMPENSATOR STROKE.


1. Remove the cap nut (1) and loose the lock nut (2).
2. Fully tighten the adjusting screw (3) and lock the lock nut (2) temporarily.

ADJUSTMENT OF MAXIMUM SPEED CONTROL.


1. Adjustment of full load position.
2. Adjustment of maximum speed control point.

ADJUSTMENT OF SPEED CHANGE RATE.

ADJUSTMENT OF ANGLEICH.


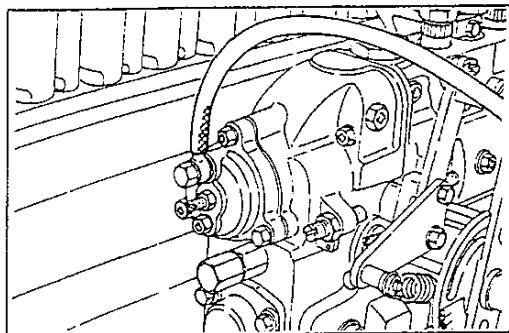
**ADJUSTMENT OF BOOST COMPENSATOR STROKE.**

1. Connect the air hose to union bolt (12).
2. Lock the control lever at the full load position.

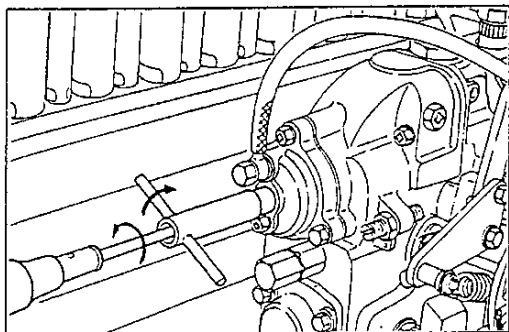


3. Keep the pump revolution with in "Na" rpm, then adjust the control rack position "Rb" to "Ra" with adjust screw (3) and lock it with lock nut (2).


NOTE: No need to pressurization with this adjustment.

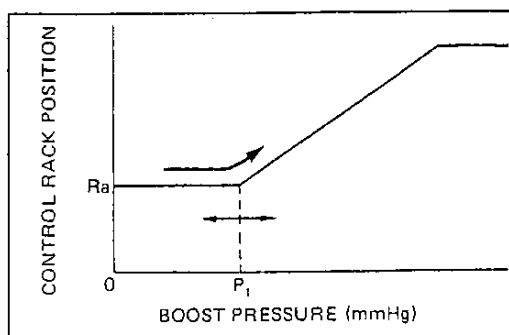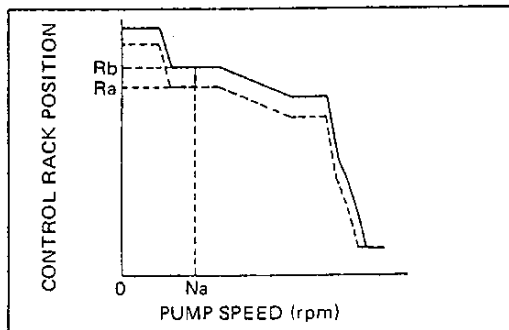**ADJUSTMENT OF BOOST COMPENSATOR SPRING (8).**


1. Keep the pump revolution with in "Na" rpm then set the control lever to full load position.
2. Raise the boost pressure gradually and when reaches the "P₁" confirm of the control rack is start to move from "Ra" position to direction of "fuel delivery increase".

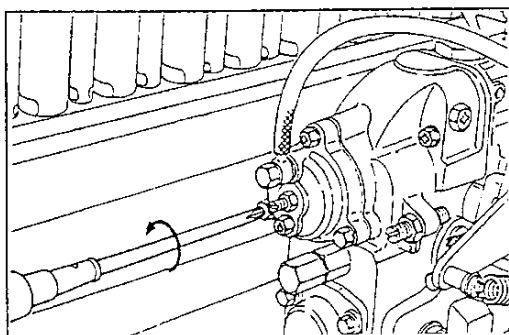


3. In case of nonstandardized, replace with adjusting shim (9) as follow.
- 1) Remove the cover (5) with loosening three bolts of installing the cover (4).

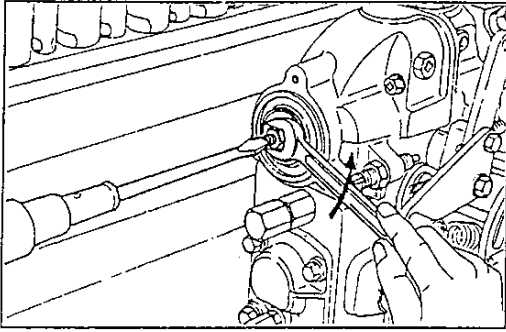


- 2) Using a screw driver for hold the push rod (7) to not turn it when removing the nut (11).

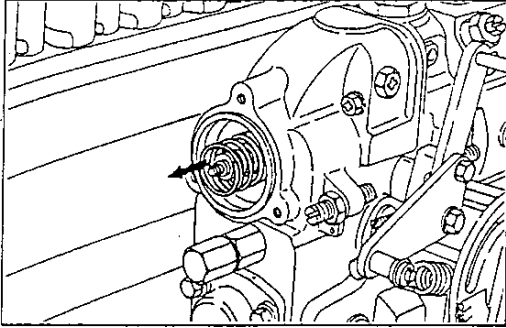


- 3) Remove the gasket (10), diaphragm (6), and spring (8).

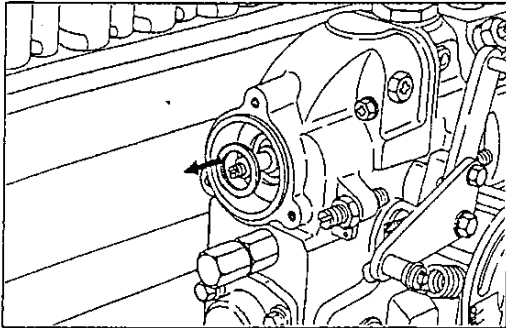

- 4) Replace the adjusting shim (9).

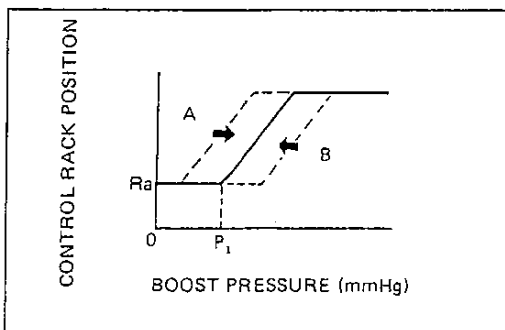


- A : Replace the adjusting shim (9) with thick one.
 B : Replace the adjusting shim (9) with thin one.

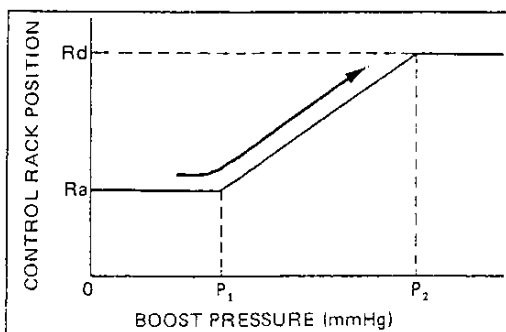

4. Raise the boost pressure to " P_2 ", confirm the control rack position is " R_b ". In case of nonstandardized, replace the spring (8) with new one.

NOTE: In case of change the boost compensator stroke, when remove the cover for this adjustment, reconfirm the boost compensator stroke.

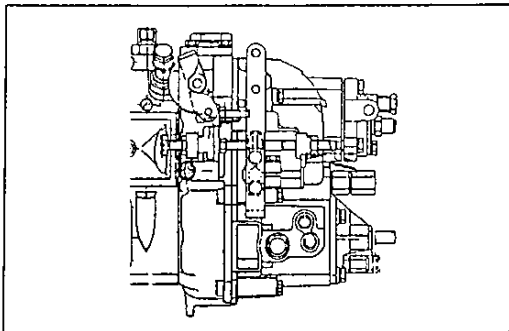**GOVERNOR EXTERNAL LEAD SEALS AND CRIMP CAPS.**

NOTE: All adjusting devices on the fuel injection pump governor, are wired and lead sealed as a protection for the customer. This is to prevent unauthorized readjustment which may cause engine malfunction and/or engine failure. Periodically check to insure that these seals are not broken as this will void the warranty.

(K.P.)

CHAPTER

GENERATOR

(12V, 50A)


DATA AND SPECIFICATIONS	GE-2
DESCRIPTION	GE-2
TROUBLESHOOTING	GE-3
GENERATOR	GE-4



DATA AND SPECIFICATIONS

MODEL	27040-1300
GENERATOR	
Type	Alternator
Rated voltage	12V
Rated output	50A
Operating output and speed	13.5V, 50A at 4,000 rpm (at cold)
Rotating direction	Clockwise (Seen from pulley side)
REGULATOR	
Type	I.C. Regulator

DESCRIPTION

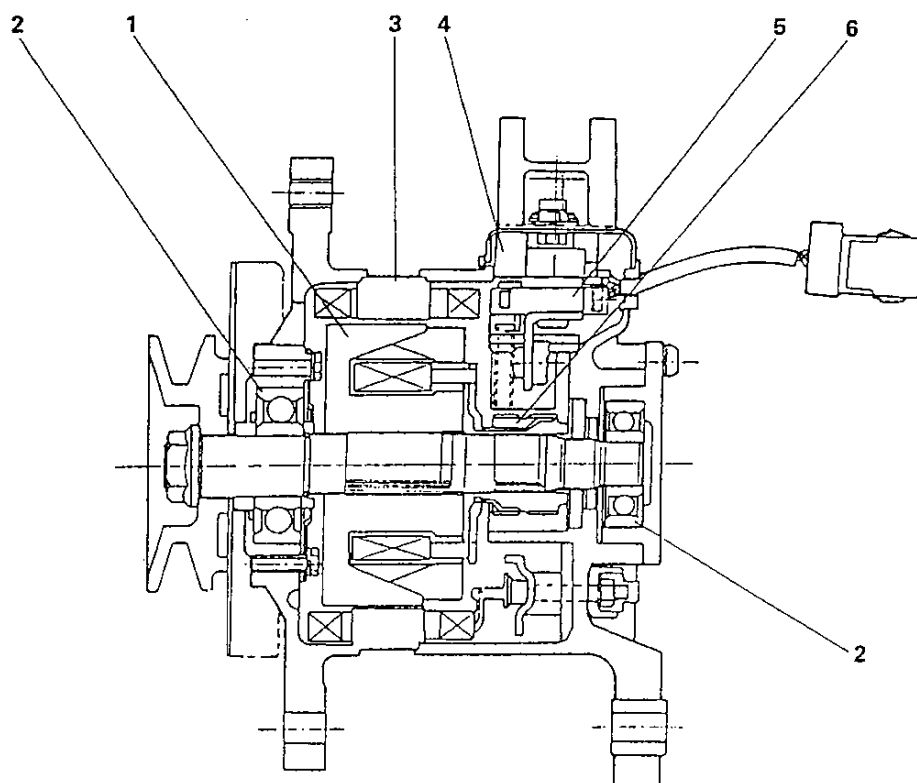

GENERATOR

- 1. Rotor assembly
- 2. Ball bearing
- 3. Stator assembly


- 4. I.C. Regulator assembly
- 5. Brush holder assembly
- 6. Slip ring



<u>Symptom</u>	<u>Possible cause</u>	<u>Remedy/Prevention</u>
Charging warning lamp does not light with starter switch ON and engine off	Fuse blown	Determine cause and replace fuse
	Lamp burned out	Replace lamp
	Wiring connection loose	Tighten loose connections
	Charge lamp relay faulty	Check relay
	IC regulator faulty	Replace IC regulator
Charge warning lamp does not go out with engine running (Battery requires frequent recharging)	Drive belt loose or worn	Adjust or replace drive belt
	Battery cable loose, corroded or worn	Repair or replace cables
	Fuse blown	Determine cause and replace fuse
	Fusible link blown	Replace fusible link
	Charge lamp relay, IC regulator or generator faulty	Check charging system
	Wiring faulty	Repair wiring

GENERATOR

18248
I-NO. 22

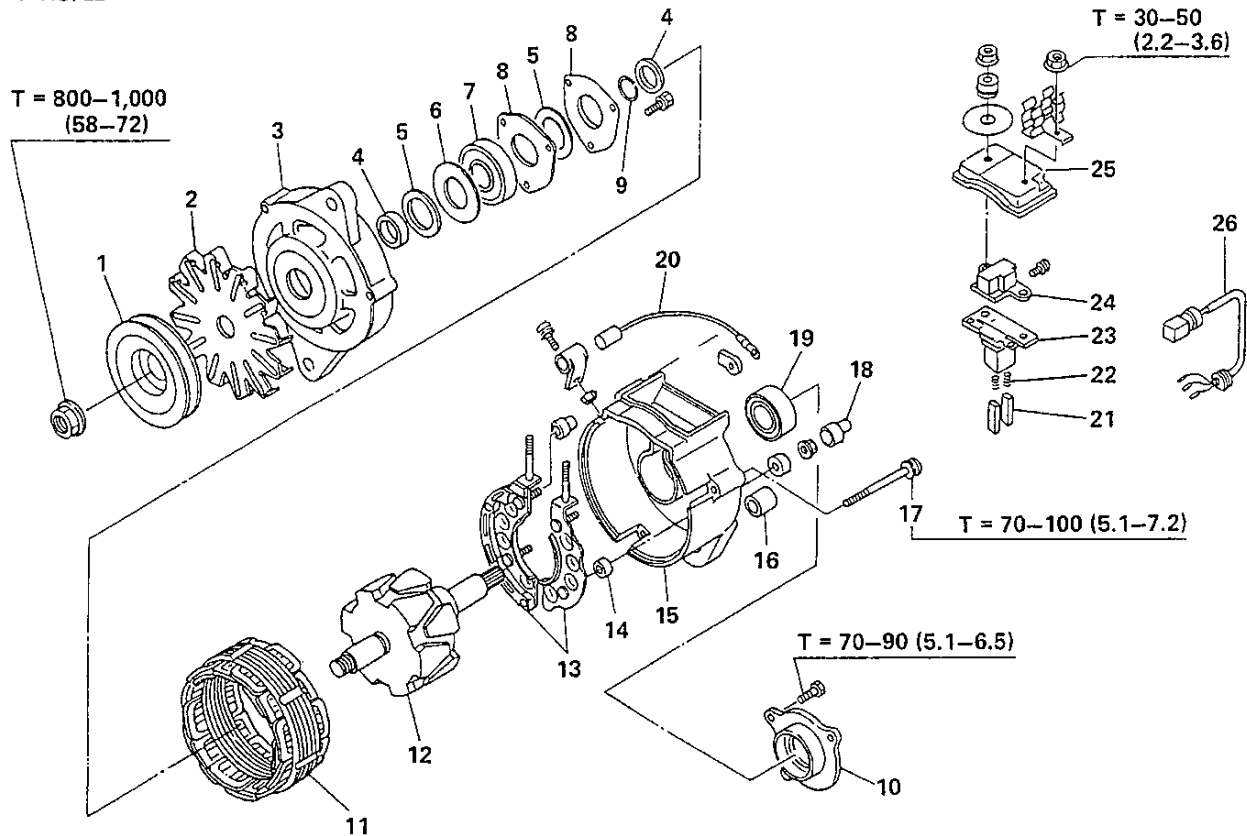


T = Tightening torque: kg-cm (lb-ft)


1. Pulley
2. Fan
3. Drive and frame
4. Collar
5. Felt washer
6. Felt cover
7. Ball bearing
8. Cover
9. Retainer ring

10. Rear bearing cover
11. Stator assembly
12. Rotor assembly
13. Rectifier
14. Insulator
15. Rear end frame
16. Bush
17. Through bolt
18. Cover


19. Ball bearing
20. Condenser
21. Brush
22. Spring
23. Brush holder
24. I.C. Regulator assembly
25. Cover
26. Lead wire

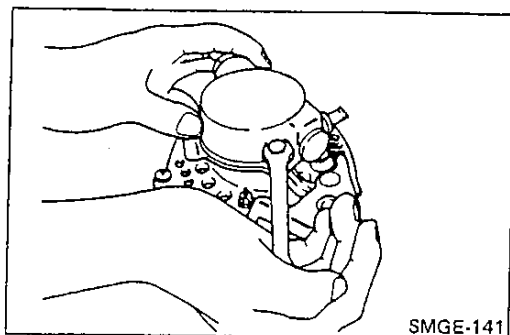**IMPORTANT POINT(S) – DISASSEMBLY****REMOVE THE REAR END COVER.**


Remove the rear end cover with bearings.

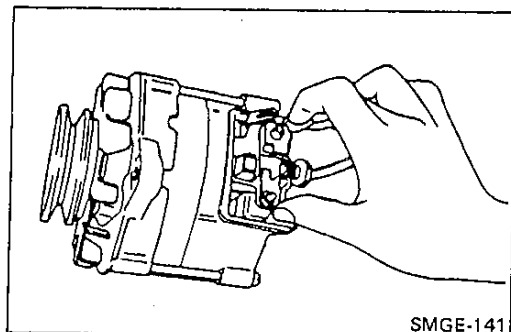**REMOVE THE I.C. REGULATOR AND BRUSH HOLDER.**


1. Remove the bolts and disconnect the wires.
2. Remove the I.C. regulator and brush holder assembly.
3. Remove the through bolts and separate the front cover from the stator.

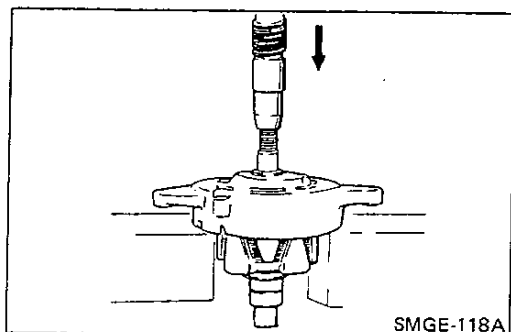**REMOVE THE ROTOR.**

Using a press, remove the rotor and collar.

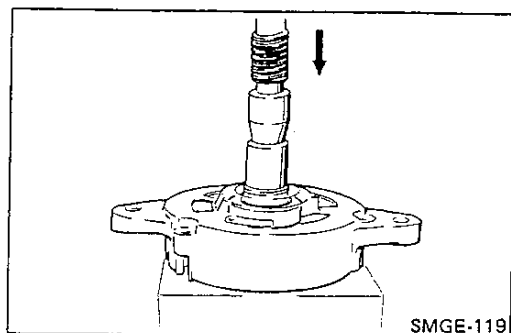
**REMOVE THE FRONT BALL BEARING.**

1. Remove the retainer plate.
2. Using a press, remove the front ball bearing.
3. Remove the plate and felt.

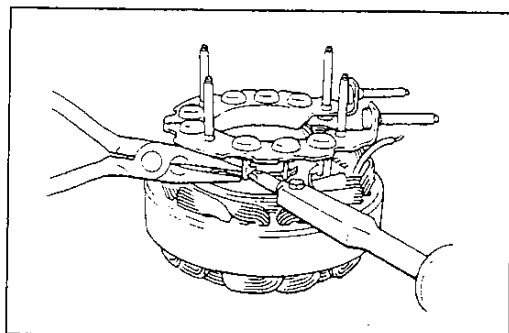**REMOVE THE STATOR AND RECTIFIER.**


1. Remove the nuts, insulator and stator terminal with the rectifier.
2. Unsolder the stator lead from the rectifier.

NOTE: Hold the rectifier terminal with long nose pliers.

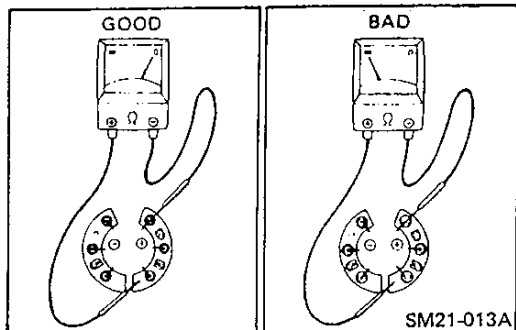
**IMPORTANT POINT (S) – TESTING****RECTIFIER.**

Test the each positive side rectifier condition.

Connect the circuit tester $\oplus$ lead to the rectifier holder and the $\ominus$ lead to the rectifier terminal.

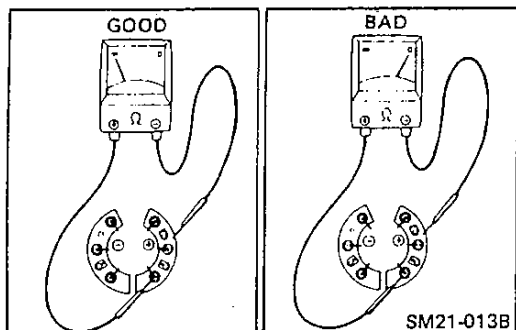


$\oplus$ lead to the rectifier terminal and $\ominus$ lead to the rectifier holder.

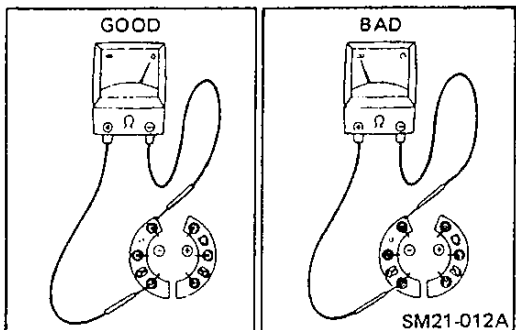


Test the each negative rectifier condition.

Connect the circuit tester $\oplus$ lead to the rectifier terminal and the $\ominus$ lead to the rectifier holder.

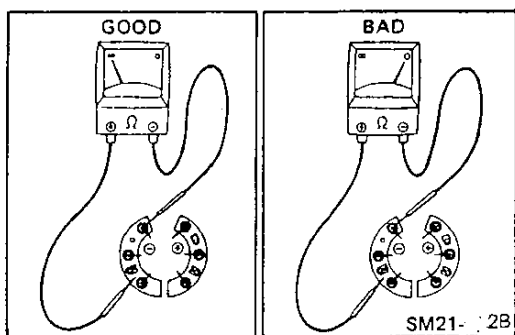


$\oplus$ lead to the rectifier holder and $\ominus$ lead to the rectifier terminal.

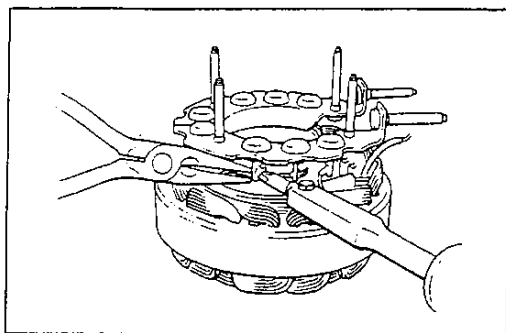**IMPORTANT POINT(S) – ASSEMBLY****INSTALL THE STATOR AND RECTIFIER.**

1. Install the stator lead to the rectifier.

NOTE: Hold the rectifier terminal with long nose pliers.

2. Install the nuts, terminal insulator and stator with rectifier.

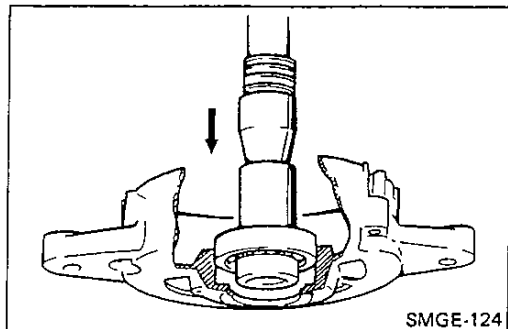


SMGE-124

INSTALL THE FRONT BALL BEARING.

1. Install the felt and felt cover.
2. Using a press, install the front ball bearing.
3. Install the retainer plate.


NOTE: Apply the bearing grease to bearing and oil seal lip.

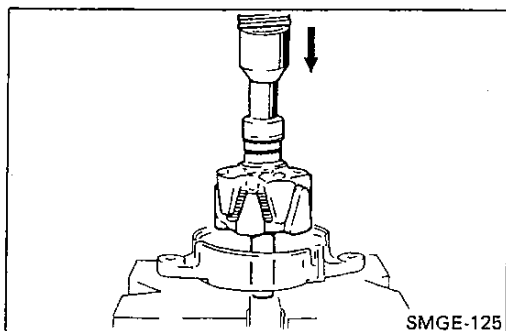

SMGE-125

INSTALL THE ROTOR.


Using a press, install the rotor.

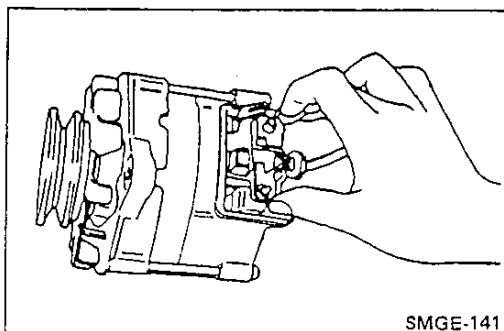

SMGE-141

INSTALL THE I.C. REGULATOR AND BRUSH HOLDER.

1. Connect the front cover to the stator and tighten the through bolts.
2. Install the I.C. regulator and brush holder assembly.
3. Install the bolts and connect the wires.

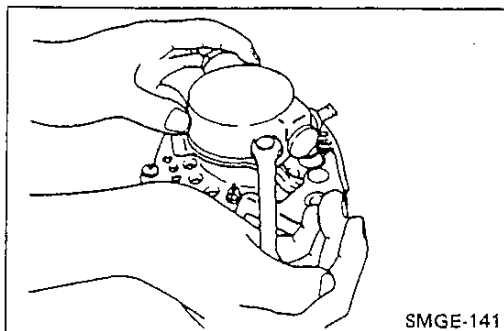

SMGE-141

INSTALL THE REAR COVER.

Install the rear cover with bearings.

PERFORMANCE TEST



NOTE: ○ Note the battery polarity carefully so as not to make reverse connections.

If the connections are reversed, the diodes will short the circuit and allow large current to flow through and damage the diodes and IC regulator as well as turn up the wiring harness.

- Use care not to make wrong connections of terminals.
- When charging the battery with a quick charge. Disconnect the battery terminals.
- Do not perform tests with high voltage insulation resistance tester.
- When in operation, never disconnect the battery.


GENERATOR PERFORMANCE TEST.

1. Turn on switch SW₁ and off SW₂ to increase the rotation of the alternator slowly.

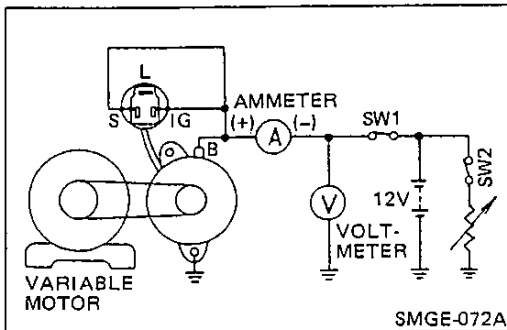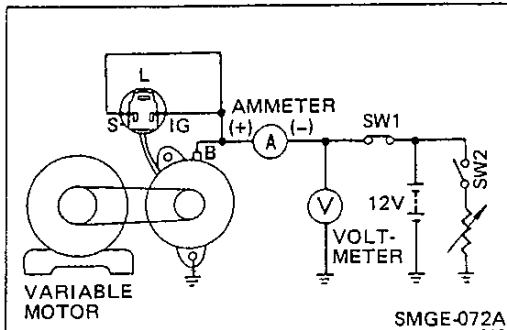

2. When voltage reaches 13.5V, turn on switch SW₂ regulate load resistance. Increase the rotation of the rotor keeping voltage at 13.5V.

MAX Generator Speed: Less than 4,000 rpm at 13.5V, 50A







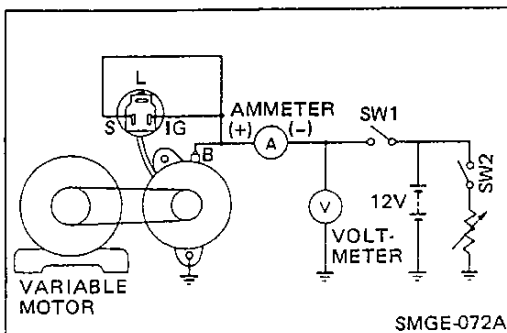
**VOLTAGE REGULATION TEST.**

Turn on switch SW₁ and off SW₂ to increase the rotation of rotor to _____ rpm.



Standard Voltage: 14.2–14.8V

INSPECTION AND REPAIR

Unit: mm (in)

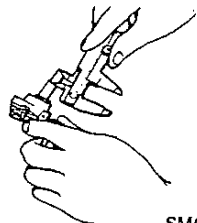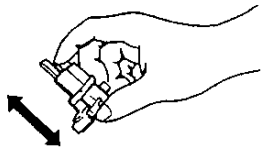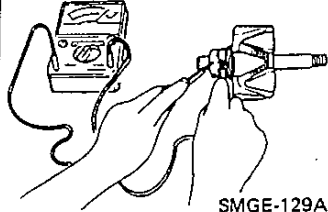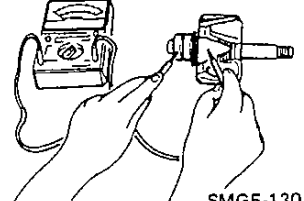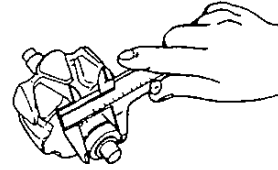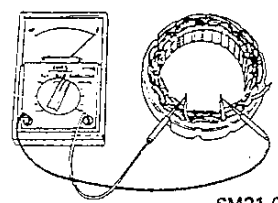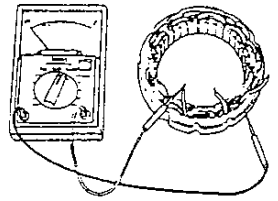Inspection Item	Standard	Limit	Remedy	Inspection Procedure
Brush length	20.0 (0.787)	5.5 (0.217)	Replace	 SMGE-127
Function of the brush holder	—	—	Replace, if necessary.	Visual check  SMGE-128
Checking of the rotor coil.	About 2.9 Ω	—	Replace.	 SMGE-129A
Insulation between the slip ring and the core.	—	—	If continuity replace the rotor.	 SMGE-130A
Diameter of the slip ring.	32.5 (1.280)	32.1 (1.264)	Replace.	 SMGE-131A
Checking of the stator coil	—	—	If not continuity, replace the stator coil.	 SM21-037
Insulation of the stator coil.	—	—	If not continuity, replace the stator coil.	 SM21-038

Unit: mm (in)

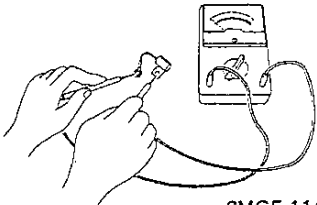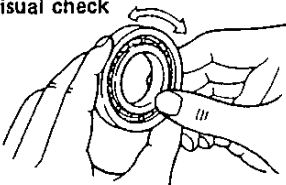Inspection Item	Standard	Limit	Remedy	Inspection Procedure
Condenser capacity.	0.5 μ F	—	Replace	 SMGE-114
Wear or damage of the bearings.	—	—	Replace, if necessary.	Visual check  SMGE-083
Wear or damage of the felt.	—	—	Replace, if necessary.	Visual check 


(K.P.)

CHAPTER ST

STARTER

(12V, 2.5 KW)


DATA AND SPECIFICATIONS	ST-2
DESCRIPTION	ST-2
TROUBLESHOOTING	ST-3
STARTER	ST-5



DATA AND SPECIFICATIONS

Model No.	28100-1561 28100-1960
Starter	
Type	Reduction gear type
Output	12V, 2.5 KW
Number of teeth of pinion	11
Module	3
Rotation	Clockwise, viewed from pinion side

DESCRIPTION

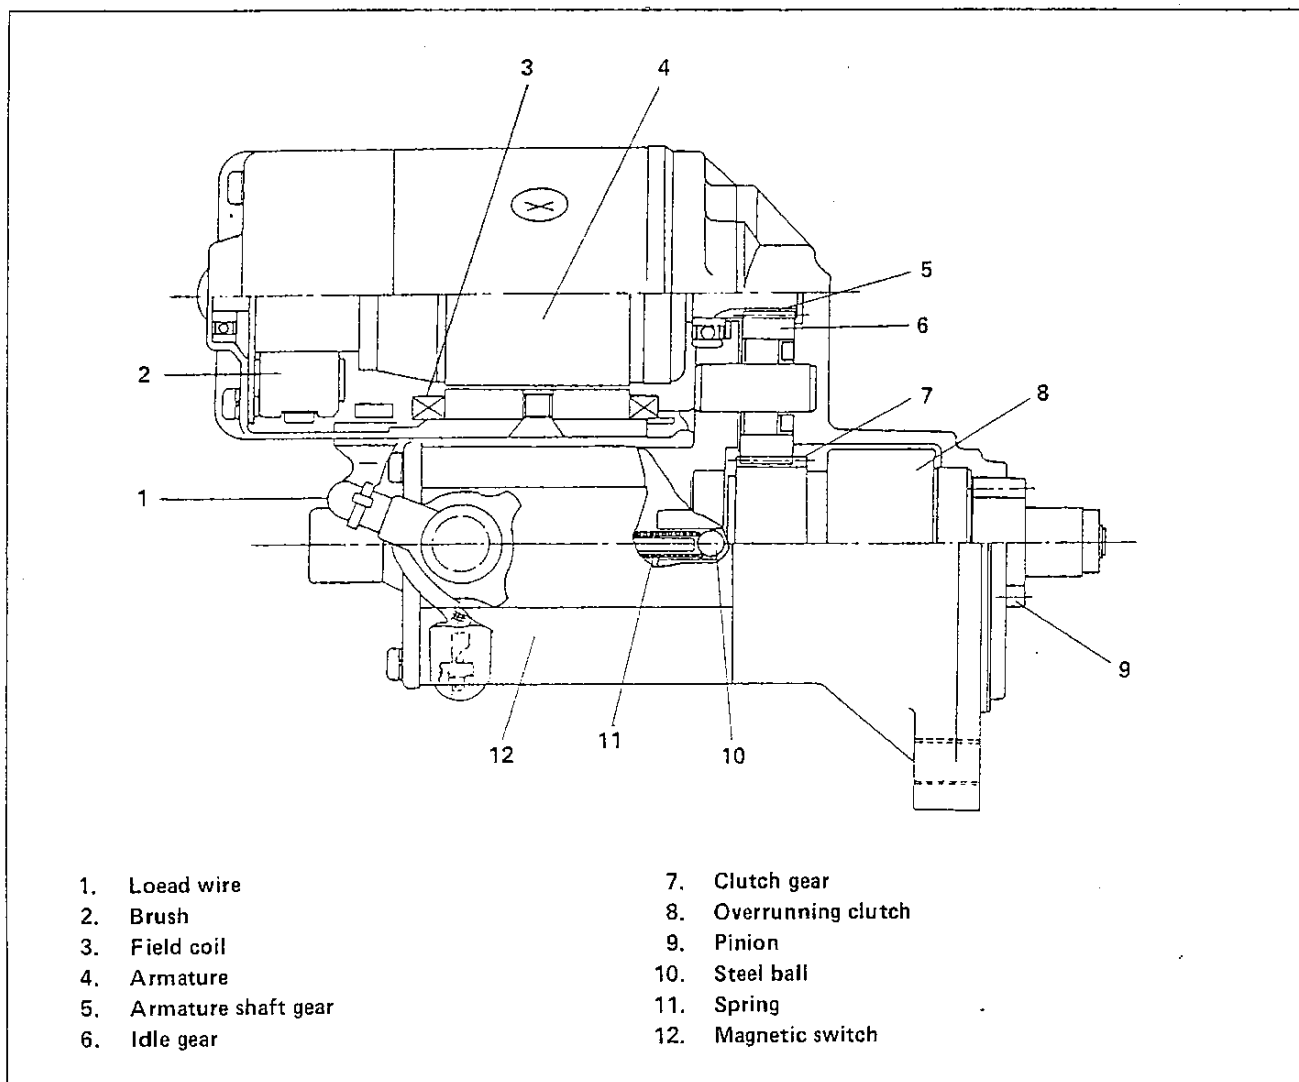


TROUBLESHOOTING

Symptom	Possible cause	Remedy/Prevention
Engine does not crank, or cranks slowly.	Key switch	
	• Poor contact.	Polish or replace contacts
	Battery	
	• Discharged battery	Charge
	• Short circuited between electrodes	Replace battery
	• Poor contact at battery terminal	Polish or retighten
	Engine oil	
	• Improper viscosity oil	Change oil
	Magnetic switch	
	• Poor contact caused by burnt contact plate	Polish or replace contact plate
	• Contact plate worn out.	Repair
	• Hold-in coil disconnected	Replace field coil (Overrunning clutch moves back and forth)
	• Pull-in coil disconnected or short circuited	Replace
	Starter relay	
	• Defective or poor contact	Repair or replace
	Starter	
	• Brush worn out.	Replace
	• Commutator burnt out	Correct on lathe
	• Commutator worn out	Correct by undercutting
	• Field winding shorted or grounded	Rewind or replace
Engine does not crank while starter is running in good condition.	• Armature winding shorted or grounded	Replace armature
	• Insufficient brush spring tension	Replace brush spring
	• Poor contact between magnetic switch	Repair and field windings
	• Armature contacts pole core because of worn	Replace bearing brush or armature bearing bush or bent armature shaft
	• Overrunning clutch malfunction	Replace
	Overrunning clutch	
	• Overrunning clutch malfunction	Replace
	• Pinion teeth worn out	Replace
	• Poor sliding of spline teeth	Remove foreign materials, dirt, or replace


<u>Symptom</u>	<u>Possible cause</u>	<u>Remedy/Prevention</u>
Starter does not stop running.	Key switch	
	• Contacts keep closing	Replace
	• Key switch sticks	Replace
	• Overrunning clutch sticks to armature	Repair or replace overrunning clutch or armature
	Starter relay	
	• Contacts keep closing	Repair or replace

STARTER

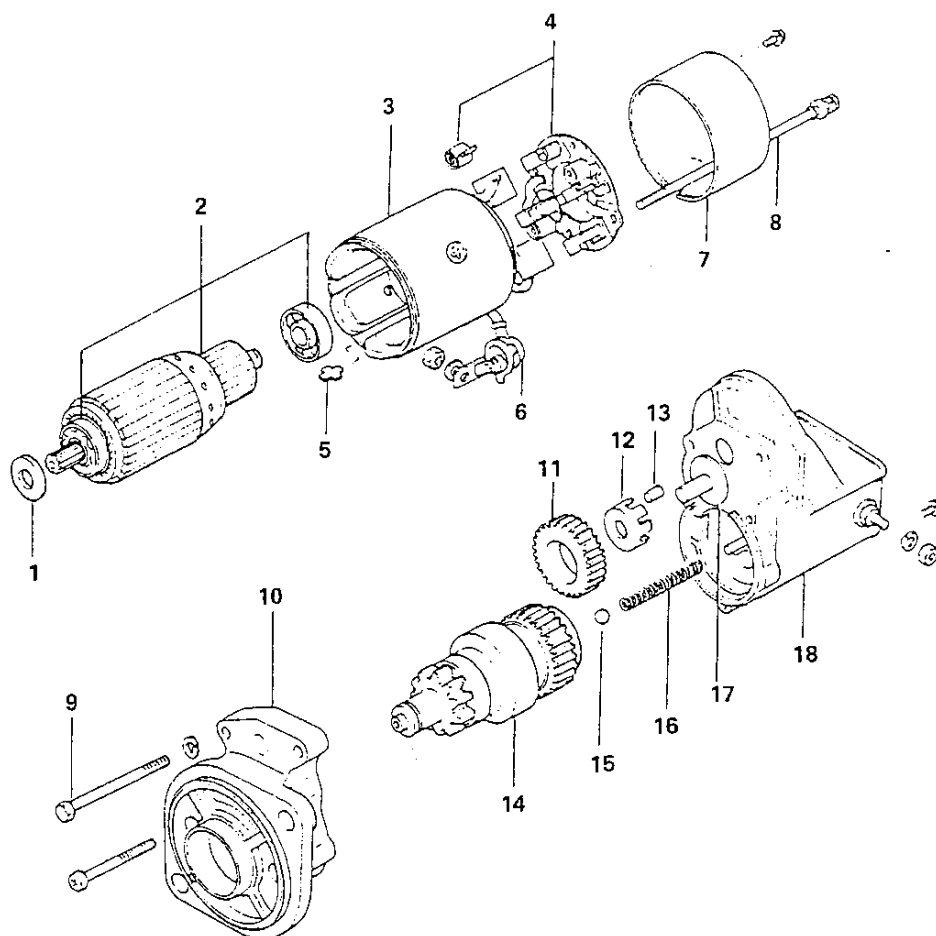

1. Felt washer
2. Armature assembly
3. Yoke assembly
4. Brush holder
5. Steel plate
6. Lead wire
7. Rear end frame
8. Through bolt
9. Through bolt


10. Drive end frame
11. Idle gear
12. Retainer
13. Roller
14. Overrunning clutch
15. Steel ball
16. Return spring
17. Steel washer
18. Magnetic switch assembly

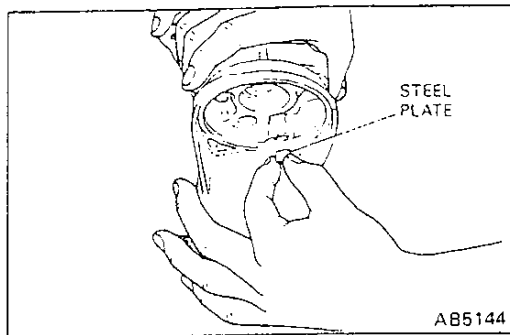

IMPORTANT POINT (S) – DISASSEMBLY


REMOVE THE YOKE FROM THE MAGNETIC SWITCH.

1. Disconnect the lead wire from the magnetic switch.
2. Remove the through bolts from the magnetic switch.
3. Remove the steel plate from the magnetic switch.

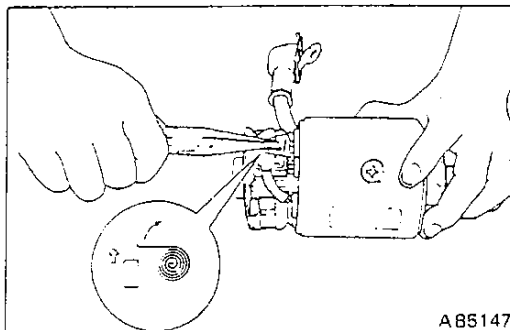


REMOVE THE ARMATURE FROM THE YOKE.

1. Remove the rear end frame from the yoke.
2. Using a long-nose pliers, take off the brushes and remove the brush holder.
3. Loosen the two through bolts and detach the brush holder from the armature shaft.

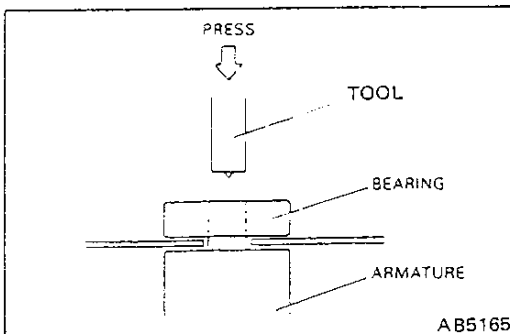


REMOVE THE BALL BEARING FROM THE ARMATURE.

1. Using a press and a suitable tool, remove the ball bearing.

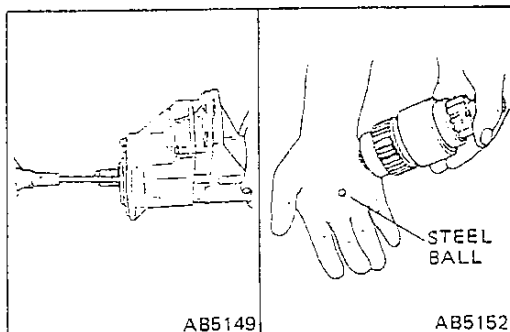

REMOVE THE OVERRUNNING CLUTCH.


1. Remove the screws from the drive end frame.
2. Remove the drive end frame from the magnetic switch.
3. Remove the overrunning clutch.
4. Remove the steel ball from the overrunning clutch.

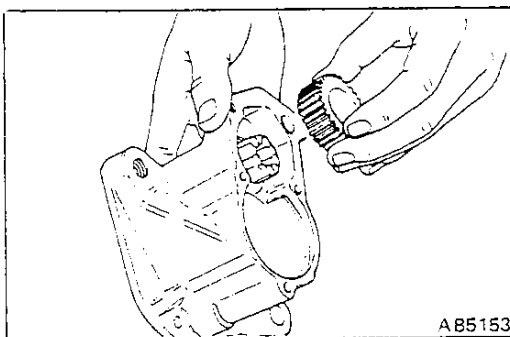

REMOVE THE IDLE GEAR.

1. Remove the idle gear, retainer with rollers, and steel washer from the drive end frame.

NOTE: Do not drop the retainer and the rollers.

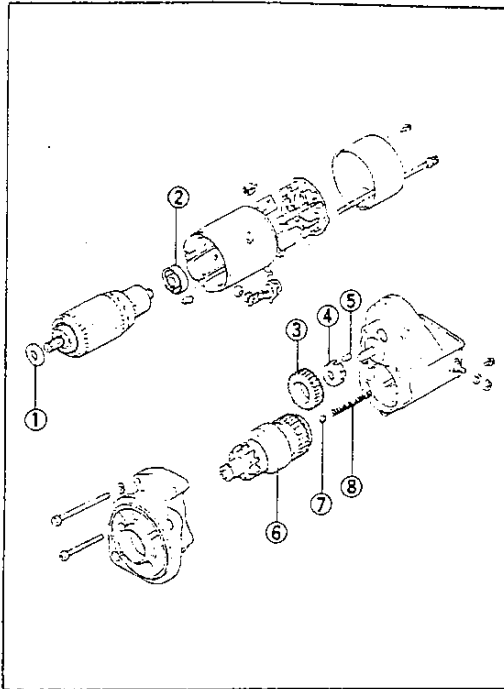


IMPORTANT POINT (S) – ASSEMBLY


BEFORE REASSEMBLING, APPLY THE RECOMMENDED GREASE TO THE FOLLOWING:

Nippondenso No. 50 grease or equivalent.

- ① Felt washer
- ② Bearing
- ③ Idle gear
- ④ Retainer
- ⑤ Roller
- ⑥ Overrunning clutch
- ⑦ Steel ball
- ⑧ Return spring

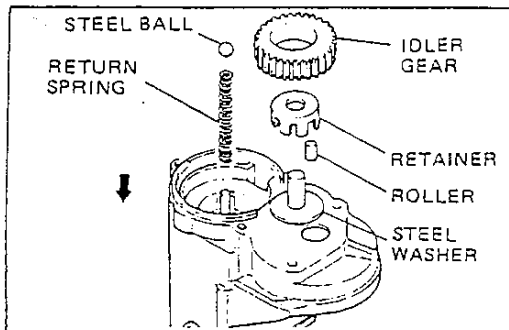


INSTALL THE STEEL WASHER, RETAINER WITH ROLLER, IDLE GEAR, RETURN SPRING, AND STEEL BALL IN THE MAGNETIC SWITCH.

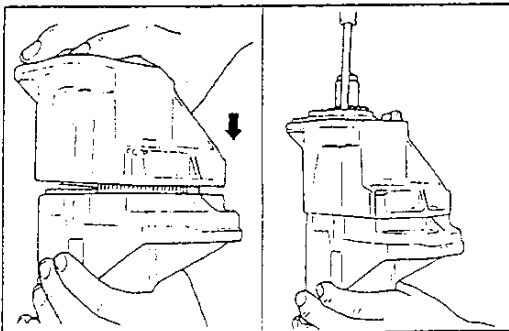

INSTALL THE OVERRUNING CLUTCH IN THE DRIVE END FRAME.


NOTE: Install the steel ball and the return spring.

1. Connect the drive end frame to the magnetic switch and tighten the screws.

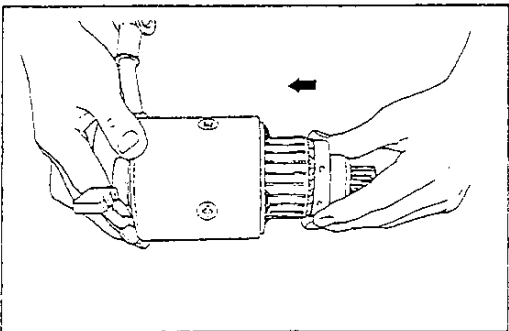

INSTALL THE ARMATURE IN THE YOKE.


NOTE: Do not forget to place a felt washer on the armature shaft bearing.

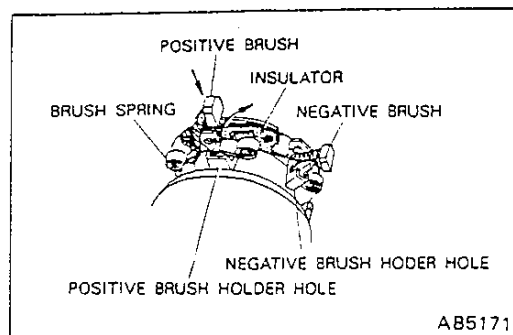

INSTALL THE BRUSH HOLDER ON THE YOKE.


1. Install the negative brush (brush holder side) to the brush holder negative hole (not insulated), and the positive brush (yoke side) to the brush holder positive hole (separated from plate with insulator). Make sure that the positive brush lead wires are not grounded.
2. When assembling the brush holder to the yoke, take care not to damage and get oil on it.

NOTE: Match the lead wire grommet with the rear end frame groove.

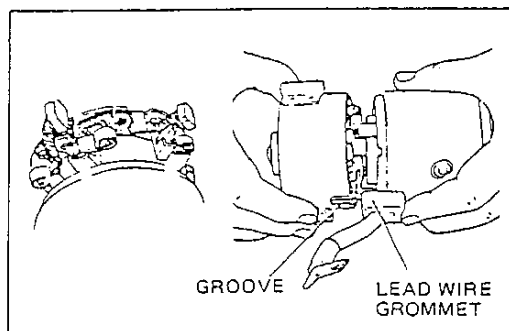

INSTALL THE STEEL PLATE ON THE MAGNETIC SWITCH.

1. Install the steel plate on the magnetic switch.
2. Securely put the rubber boot over the terminal.

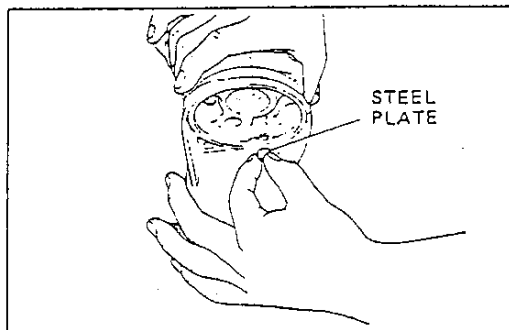

TEST

MAGNETIC SWITCH TEST

The following test should be performed with the starter assembled and the field coil lead wire disconnected.

- NOTE:**
- Each test should be performed for a short time only (3 to 5 sec.) to prevent the magnetic switch winding from burning.
 - Each test should be performed with the specified voltage applied.

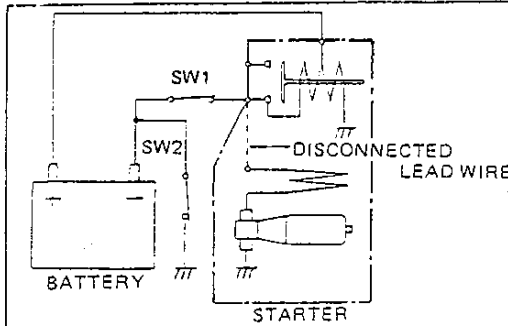


Fig. 22-34



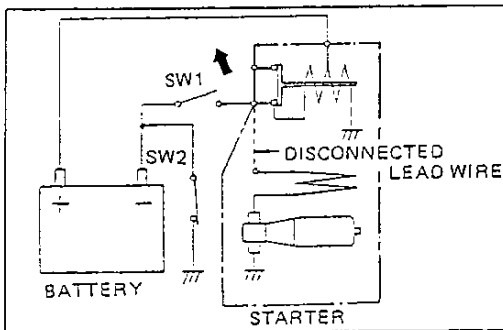


Fig. 22-35

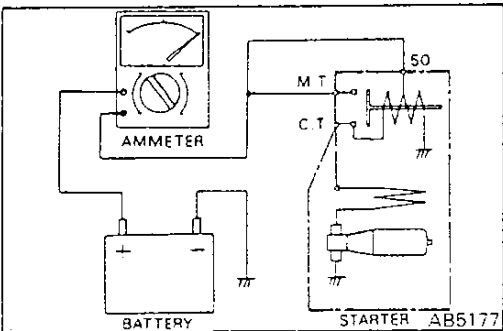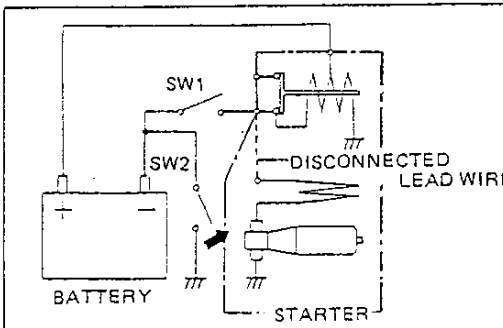

1. Pull-in test
Connect the test leads as shown. When switch 1 (SW1) and switch 2 (SW2) are closed, the pinion should jump out.


2. Hold-in test
In the same conditions as the pull-in test, open switch 1 (SW1).
The pinion should remain in the jumped out position.

3. Return test
In the same conditions as the hold-in test, open switch 2 (SW2).
The pinion should return immediately.

PERFORMANCE TEST

The following test should be carried out after reassembling the starter. If suitable equipment is not available, at least the No-load test should be carried out.

1. No-load test
With the starter securely clamped in a vice, and using a battery and suitable ammeter, connect the positive lead of the battery, and the ammeter to the "50" terminal. Connect the negative lead to the starter body. The starter should show smooth and steady rotation immediately after jumping out of the pinion and should draw less than the specified current.

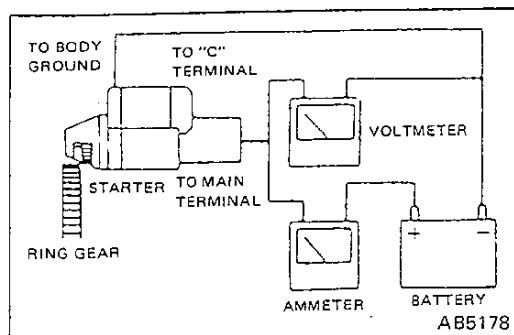

2. Load test








Read the ammeter and voltmeter when the specified torque is applied. The ammeter should indicate less than the specified current, and the tachometer should indicate more than the specified speed.

3. Lock torque test







Read the torque meter and ammeter when the tachometer reading becomes 0 rpm after applying the load. The torque meter should indicate more than the specified torque and the ammeter should indicate less than the specified current.

	Standard value of each test		
	Current	Voltage	Revolution & torque
No load test	Less than 180 A	at 11V	More than 3,500 rpm
Load test	Less than 600 A	at 8V	More than 1,100 rpm
Lock torque test	Less than 1,200A	at 3V	More than 3.5 kg-m at 0 rpm

INSPECTION AND REPAIR

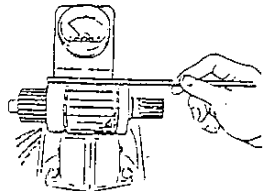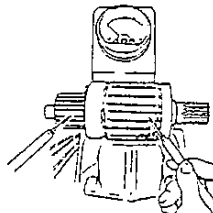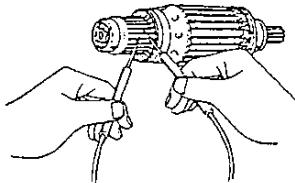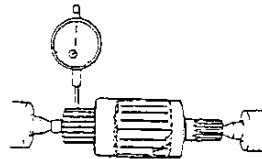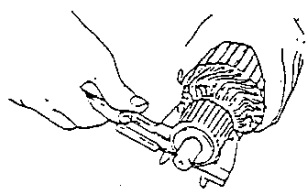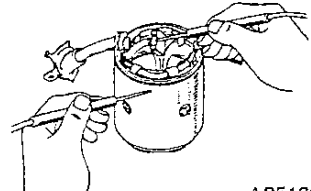Inspection Item	Standard	Limit	Remedy	Inspection Procedure
Armature Short Circuit Test	—		If the iron plate is not vibrated, the armature is good	 SMST-091
Armature Insulation	More than 1 M Ω	Less than 0.1 M Ω	Replace	 SMST-092
Commutator continuity	Should be continuity at any point	—	Replace, if there is no continuity at any point	
Commutator run-out	Less than 0.02 (0.0008)	0.05 (0.002)	Replace	 SMST-093
Commutator Outside Diameter	36 (1.417)	35 (1.378)	Replace	 SM22-055
Mica Depth	0.7 (0.0276)	0.2 (0.0078)	Replace	COMMUTATOR UNDERCUT  SM22-056
Conductance between the Field Coil and the Yoke	Should be conducted		Replace	 AB5166

INSPECTION AND REPAIR

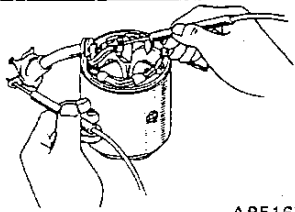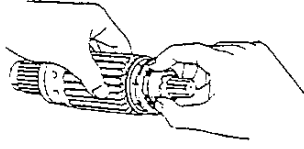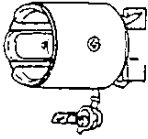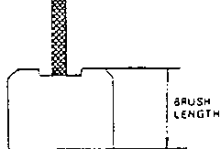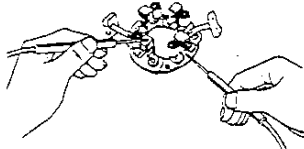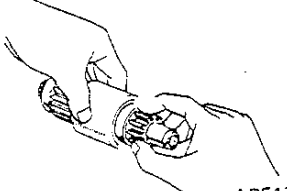Inspection Item	Standard	Limit	Remedy	Inspection Procedure
Field Coil Insulation	More than 1 M Ω	Less than 0.1 M Ω	Replace	 AB5167
Wear or Damage of the Bearing	—	—	Replace, if necessary	 AB5164
Field coil and yoke damage			Replace	Visual check  AB5140
Brush length	20.5 (0.807)	13 (0.512)	Replace	 AB5168
Insulation between the Brush Holder and the Bracket	More than 1 M Ω	Less than 0.1 M Ω	Replace	 AB5169
Overrunning clutch test			Replace	 AB5170
Tension of the Brush Springs	3.9 kg (8.6 lb)	1.9kg (4.2lb)	Replace	



(KY)

CHAPTER C

INJECTION PUMP CALIBRATION




INJECTION PUMP NUMBER: 22030-2070B and 22030-2071A

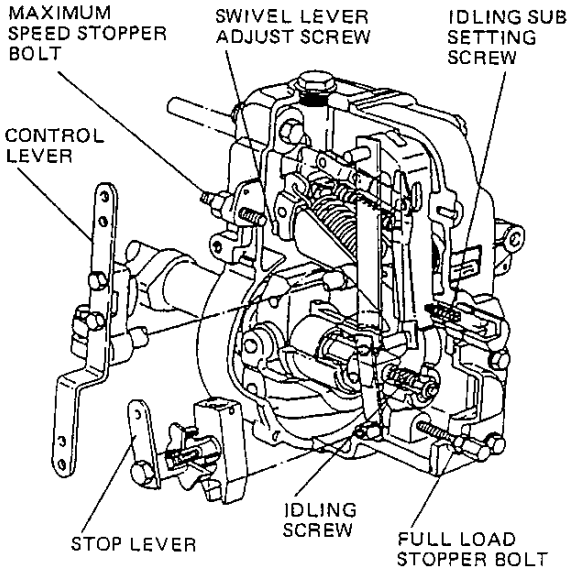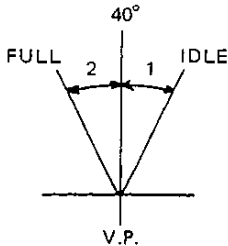INJECTION PUMP SPECIFICATION	Engine model		W04D			
	Injection pump part number		22030-2070B, 22030-2071A			
	Injection pump type		ND-PES4A95D321RND168			
	Governor type		RSV 400-1500			
	Timer type		SCZ			
	Feed pump type		ND-FP/KS			
	TEST CONDITION	Test nozzle type		003400-0540 (DN12SD12A)		
Test nozzle opening pressure		175 kg/cm ² (2,489 psi)				
Injection pipe		Outer diameter	6.0 mm (0.236 in)			
		Inner diameter	2.0 mm (0.079 in)			
		Length	600 mm (23.6 in)			
Calibration oil		Type	SAE J967C			
		Oil temperature	40-45°C (104-113°F)			
Fuel feed pressure		2.0 kg/cm ² (28.4 psi)				
OVERFLOW VALVE	Opening pressure		1.5-1.8 kg/cm ² (21.33-25.59 psi)			
INJECTION TIMING	Rotation		Clockwise viewed from drive side			
	Injection order		1-3-4-2			
	Injection interval		90° ± 30'			
	Pre-stroke		3.05-3.15 mm (0.120-0.124 in)			
INJECTION VOLUME	Rack position mm (in)		Pump speed (rpm)	Measuring strokes	Injection volume cc (cu.in)	Max. variation limit cc (cu.in)
	A	9.2 (0.362)	1500	200	14.0-14.8 (0.171-0.451)	1.0 (0.061)
	B	About 6.3 (0.248)	400	500	4.0-5.0 (0.123-0.152)	1.5 (0.091)
	-	-	-	-	-	-
TIMER ADVANCE	Adjusting lever position		Pump speed (rpm)		Advance angle	
	3/4 load		1300		Less than 0.8°	
	4/4 load		1600		3.0° - 4.0°	
GOVERNOR ADJUSTMENT	ADJUSTING POSITION				CONTROL LEVER ANGLE	
					 NOTE: • ANGLE: 1 ... 13° ± 5° 2 ... 16° ± 5° • Lever angle "V.P." means. Vertical position. SM4-820	

	Adjusting item	Adjusting lever position	Pump speed (rpm)	Control rack position mm (in)	Adjusting position
GOVERNOR ADJUSTMENT	Maximum speed	Full load	Na: 1500	Ra: 9.0–9.4 (0.354–0.370)	Full load stopper bolt
			Nb: 1635	Rb: Should be start to pulled control rack	Maximum speed stopper bolt
			Nc: 1750	Rc: Less than 3.0 (0.118)	*Swivel lever adjusting screw
	Idling speed	Idle	Nd: 250	Rd: 6.4–6.8 (0.252–0.267)	Idling sub-spring set

*NOTE: Recommend setting of swivel adjusting screw:
10 clicks from bottom end.

Governor characteristic diaphragm

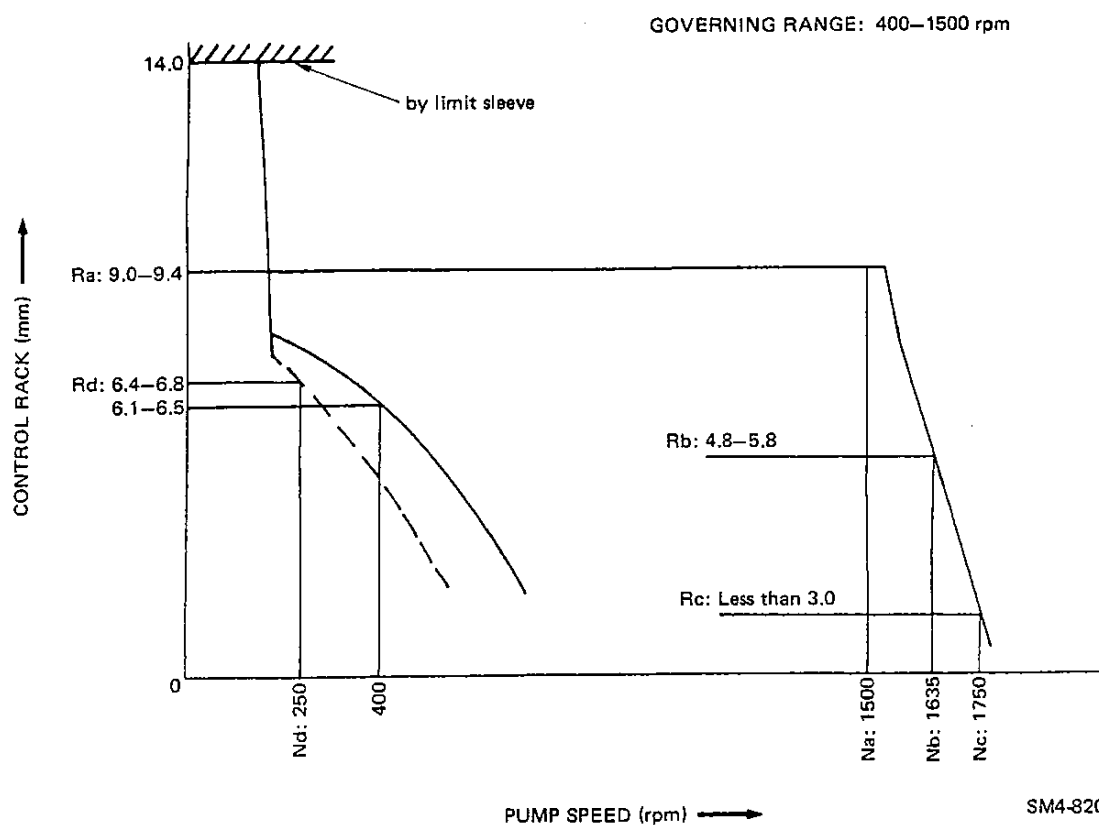

C-99E-03 (K.P.)


INJECTION PUMP NUMBER: 22020-3462A and 22020-3463A

INJECTION PUMP SPECIFICATION	Engine model		W04C-TI			
	Injection pump part number		22020-3462A, 22020-3463A			
	Injection pump type		NP-PES4AD100B320RS2			
	Governor type		RSV 200-1600			
	Timer type		Not equipped			
	Feed pump type		NP-FP/KS-ADS			
	Test nozzle type		105780-8140			
TEST CONDITION	Test nozzle opening pressure		175 kg/cm ² (2,489 psi)			
	Injection pipe	Outer diameter	6.0 mm (0.236 in)			
		Inner diameter	2.0 mm (0.079 in)			
		Length	600 mm (23.6 in)			
	Calibration oil	Type	SAE J967C			
		Oil temperature	40-45°C (104-113°F)			
	Fuel feed pressure		1.6 kg/cm ² (22.8 psi)			
OVERFLOW VALVE	Opening pressure		1.5-1.8 kg/cm ² (21.33-25.59 psi)			
INJECTION TIMING	Rotation		Clockwise viewed from drive side			
	Injection order		1-3-4-2			
	Injection interval		90° ± 30'			
	Pre-stroke		4.35-4.45 mm (0.172-0.175 in)			
INJECTION VOLUME		Rack position mm (in)	Pump speed (rpm)	Measuring strokes	Injection volume cc (cu.in)	Max. variation limit %
	A	11.9 (0.469)	1500	500	64.2-66.2 (3.918-4.039)	± 3
	B	About 7.6 (0.300)	400	500	7.5-9.0 (0.458-0.549)	±15
	-	-	-	-	-	-
GOVERNOR ADJUSTMENT	ADJUSTING POSITION CONTROL LEVER ANGLE NOTE: • ANGLE: 1 ... 26° ± 5° 2 ... 22° ± 5° • Lever angle "V.P." means. Vertical position.					
	SM4-816					

	Adjusting item	Adjusting lever position	Pump speed (rpm)	Control rack position mm (in)	Adjusting position
GOVERNOR ADJUSTMENT	Maximum speed	Full load	Na: 555–595	Ra: 11.9 (0.469 in)	Full load stopper bolt
			Nb: 1500–1510	Rb: Should be start to pulled control rack	Maximum speed stopper bolt
			Nc: 1600–1650	Rc: 6.0 mm (0.236 in)	*Swivel lever adjusting screw
	Idling speed	Idle	Nd: 400	Rd: 7.6 mm (0.299 in)	Idling sub-spring set

*NOTE: Recommend setting of swivel adjusting screw:
10 clicks from bottom end.



Governor characteristic diaphragm

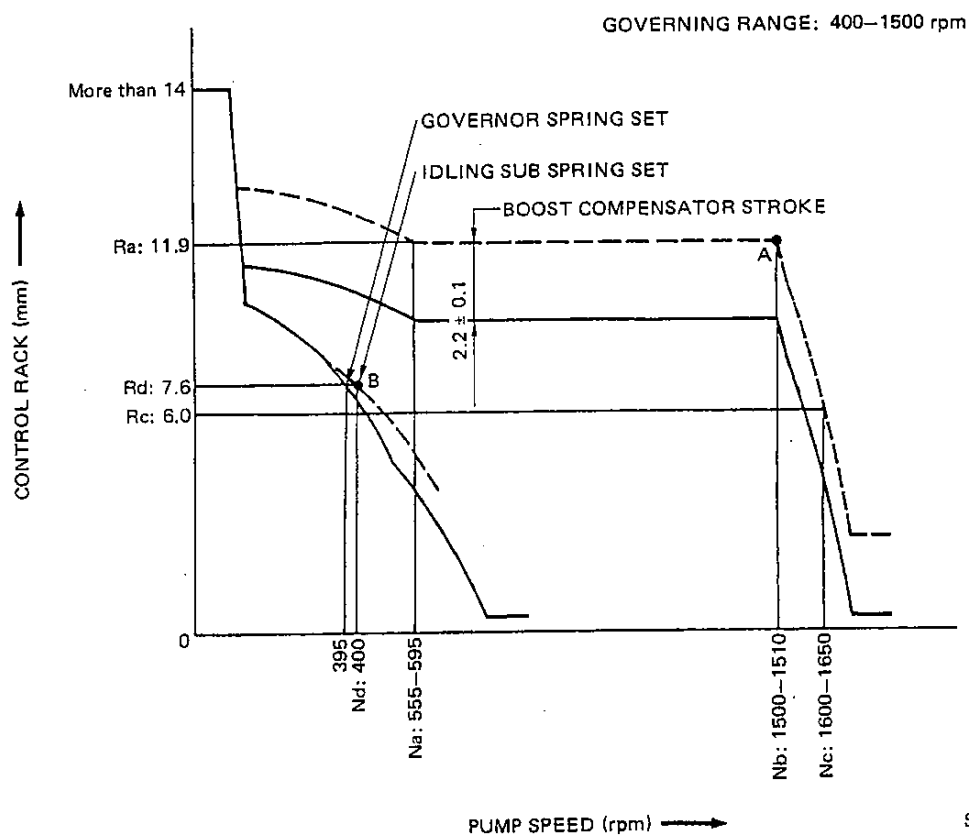

SM4-816


C-98E-03 (K.P.)

INJECTION PUMP NUMBER: 22020-2731A and 22020-3590A

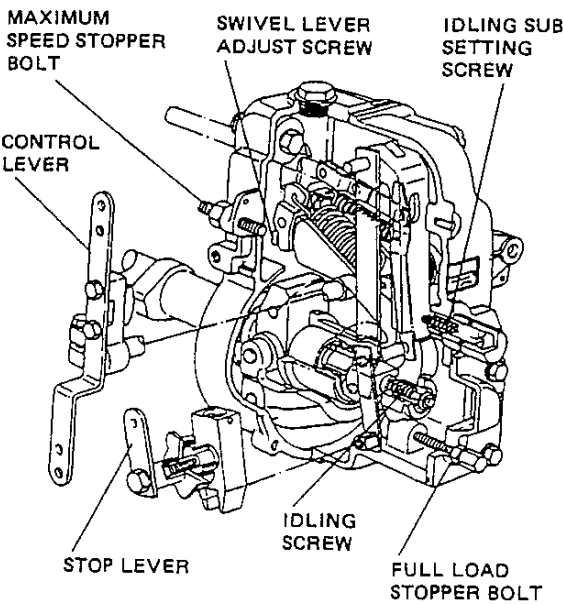
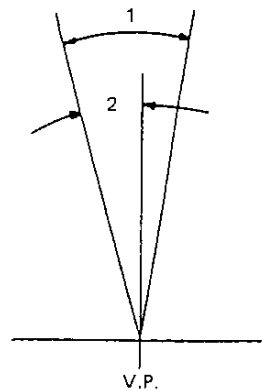
INJECTION PUMP SPECIFICATION	Engine model		W04C-T		
	Injection pump part number		22020-2731A, 22020-3590A		
	Injection pump type		NP-PES4A95C321R		
	Governor type		RSV 200-1600		
	Timer type		Not equipped		
	Feed pump type		NP-FP/KS		
TEST CONDITION	Test nozzle type		105780-8140		
	Test nozzle opening pressure		175 kg/cm ² (2,489 psi)		
	Injection pipe	Outer diameter	6.0 mm (0.236 in)		
		Inner diameter	2.0 mm (0.079 in)		
		Length	600 mm (23.622 in)		
	Calibration oil	Type	SAE J967 C		
		Oil temperature	40-45°C (104-113°F)		
OVERFLOW VALVE	Fuel feed pressure		1.6 kg/cm ² (22.8 psi)		
	Opening pressure		1.5-1.8 kg/cm ² (21.33-25.59 psi)		
INJECTION TIMING	Rotation		Clockwise viewed from drive side		
	Injection order		1-3-4-2		
	Injection interval		90° ± 15'		
	Pre-stroke		3.17-3.23 mm (0.125-0.127 in)		
INJECTION VOLUME	Rack position mm (in)	Pump speed (rpm)	Measuring strokes	Injection volume cc (cu.in)	Max. variation limit %
	A R ₁ 10.4 (0.409)	1500	500	47.0-49.0 (2.869-2.990)	± 3
	B About 7.1 (0.280)	400	500	5.3-6.8 (0.324-0.414)	± 4
	-	-	-	-	-
GOVERNOR ADJUSTMENT	ADJUSTING POSITION  CONTROL LEVER ANGLE  NOTE: • ANGLE: 1 ... 24° ± 5° 2 ... 17° ± 5° • Lever angle "V.P." means, Vertical position SM4-815				

Governor characteristic diaphragm

GOVERNING RANGE: 400–1500 rpm

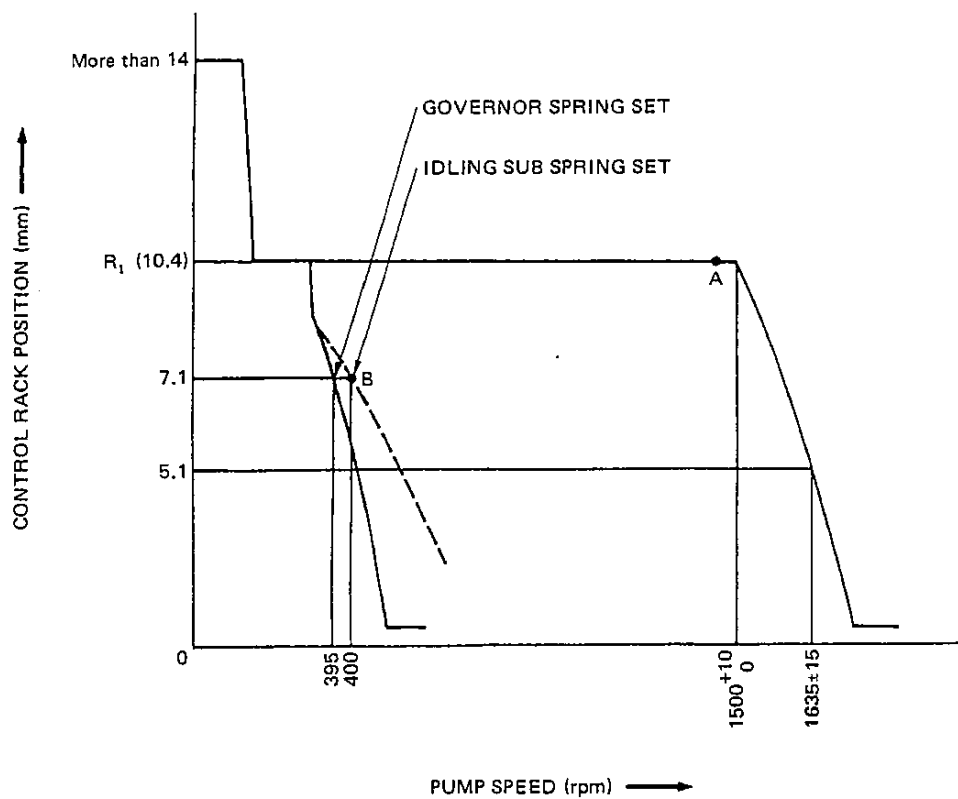


C-97E-03 (K.P.)

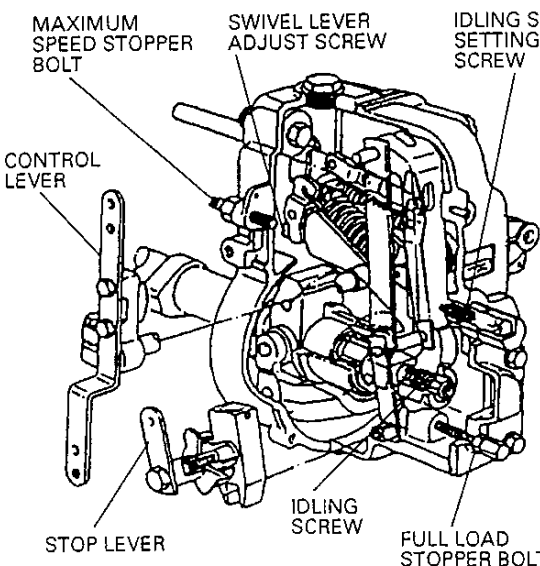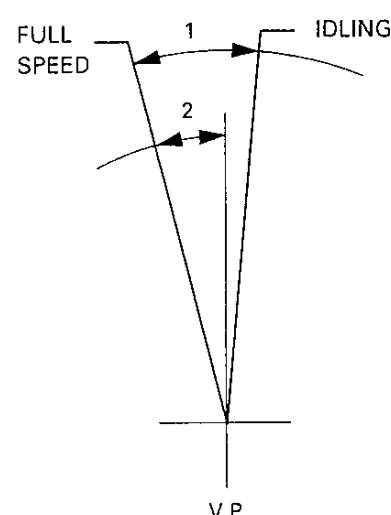	Engine model		W04C-TI			
INJECTION PUMP SPECIFICATION	Injection pump parts number		22020-3841A			
	Injection pump type		NP-PES4AD100B320RS2			
	Governor type		RSV200-1600			
	Timer type		Not equipped			
	Feed pump type		NP-FP/KS-ADS			
	Test nozzle type		105780-8140			
TEST CONDITION	Test nozzle opening pressure		17.2 MPa {175 kgf/cm ² , 2,489 psi}			
	Injection pipe	Outer diameter	6.0 mm (0.236 in.)			
		Inner diameter	2.0 mm (0.079 in.)			
		Length	600 mm (23.6 in.)			
	Calibration oil	Type	SAE J967C			
		Oil temperature	40–45°C (104–113°F)			
	Fuel feed pressure		157 kPa (1.6 kgf/cm ² , 22.8 psi)			
	OVERFLOW VALVE	Opening pressure		255 kPa (2.6 kgf/cm ² , 37.0 psi)		
INJECTION TIMING	Rotation		Clockwise viewed from drive side			
	Injection order		1–3–4–2			
	Injection interval		90° ± 30'			
	Pre-stroke		4.35–4.45 mm (0.172–0.175 in.)			
INJECTION VOLUME		Rack position mm (in.)	Pump speed r/min	Measuring strokes	Injection volume cm ³ (cu.in.)	Max.Variation limit %
	A	12.2 {0.480}	1500	500	70.5–72.5 {4.301–4.423}	±3
	B	About 7.1 {0.280}	400	500	7.5–9.0 {0.458–0.549}	±15
	—	—	—	—	—	—
GOVERNOR ADJUSTMENT	ADJUSTING POSITION					CONTROL LEVER ANGLE
						 NOTE : • ANGLE: 1...26°± 5° 2...24°± 5° • Lever angle "V.P." means Vertical position.

	Adjusting item	Load control lever position	Pump speed (r/min)	Control rack position mm (in.)	Adjusting position
GOVERNOR ADJUSTMENT	Maximum speed	Full load	Na: 600	Ra: 12.2 (0.480)	Full load stopper bolt
			Nb: 1530	Rb: should be start to pulled control rack	Maximum speed stopper bolt
			Nc: 1545	Rc: 8.8-9.0 (0.346-0.354)	Swivel lever adjusting screw (When boost pressure is 0 mmHg)
	Idling speed	Idle	N: 0	Rf: 10.1 (0.398)	Control lever
			Nd: 255	Rd: 7.1 (0.280)	Idling sub-spring set
	Boost compensator	Full load	Np: 700 Np: 700	Rz: 12.2 (0.480) R1: 9.3-9.5 (0.366-0.374) When boost pressure is P ₁ : 9.3-14.7 kPa (70-110 mmHg) control rack begins to move from R ₁ : 9.3-9.5 (0.366-0.374) in the direction of "Fuel delivery increase". When control rack returns to position R ₂ : 12.2 (0.480) the available pressure corresponds to P ₂ 66.7 kPa (500mmHg)	Adjusting screw
			Np: 700		Confirm

Governor characteristic diagram

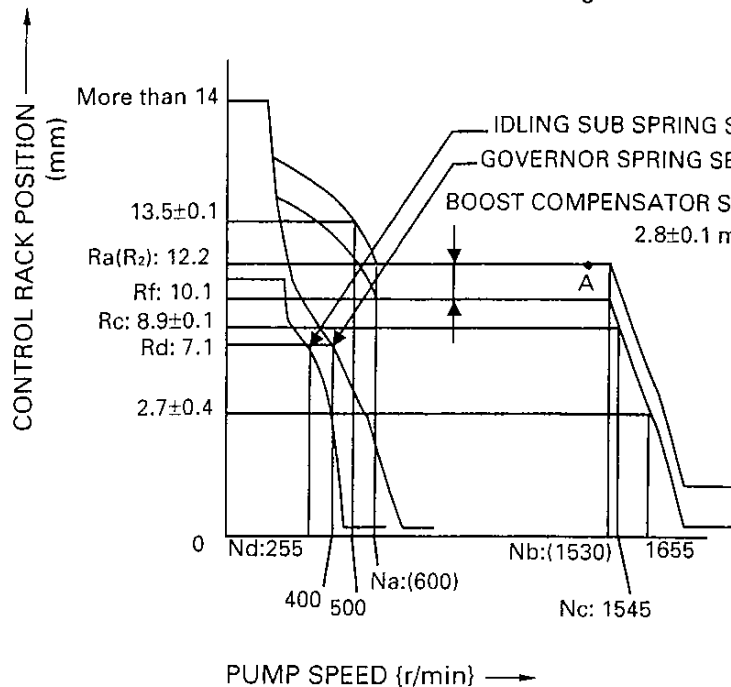

Boost compensator characteristic diagram

