

T40140

**S/N 3632 11001
& above**


T40170

**S/N 3633 11001
& above**



Bobcat®

PARTS MANUAL

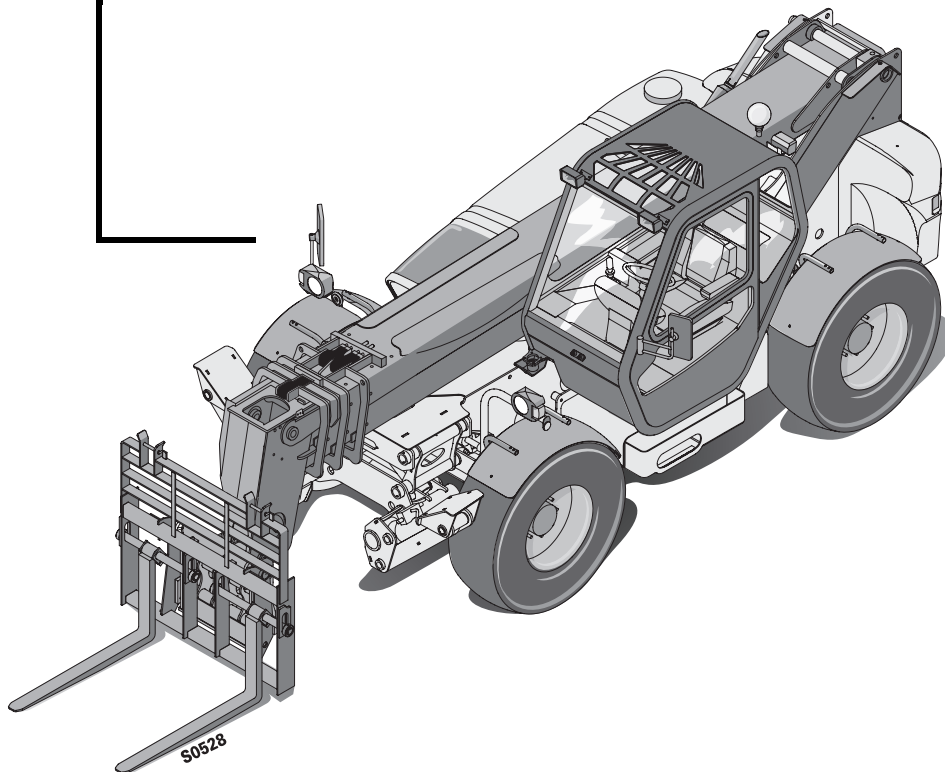

GENERAL INFORMATION

When using the machine serial number (S/N), use the complete number.

In the serial number column S/N ranges are displayed as follows:

/3632 11001 : S/N 3632 11001 and above

3632 11001/ : up to S/N 3632 11001

3632 11001 - 3632 11059 : from S/N 3632 11001 up to and including S/N 3632 11059

The number shown in the quantity column in this manual is the number of parts needed for the illustration on the page.

For some parts an "x" will be shown in the quantity column. This "x" indicates that the quantity to be used is "As Needed".

When references L.H. and R.H. are used in this manual, it is done from the operator's seat in the forward operating position.

Some of the illustrations and information found in this parts manual were supplied to Bobcat by machine component companies.

ABBREVIATIONS & SYMBOLS

NAP: Not Available as Parts

NSS: Not Serviced Separately

Qty: Quantity

Pos.: See position .. on illustration

Order: Order now the following part number for this part.

See page .. for details: Refers to a page where more details on this part can be found.

CONTENTS

MAIN FRAME

Chassis	3
Ballast	7
Front ballast - T40170	9
Fuel Tank Installation	11
Engine Cover	13
Engine Sound Proofing	17
Engine Basket	19
Cab & Fixations	21
Cab Assy	23
Cab Assy II	27
Seat & Suspension	31
Heating/ventilation Installation	33
Heating/ventilation Fan Assy	35
Pedals Installation	37
Steering Column Installation	39
Cowling Installation	41
Control Panel Switches	43
Door Assy	47
Rear Window Installation	51
Wiper Installation	53
Parking Brake Lever - for S/N T40140: 3632 11172/ and S/N T40170: 3633 11270/	55
Parking Brake Lever - for S/N T40140: /3632 11173 and S/N T40170: /3633 11271	57
Fixed Boom Assy - T40140	59
Intermediate Boom Assy - T40140	63
End Boom Assy - T40140	67
Fixed Boom Assy - T40170	73
1st Intermediate Boom - T40170	77
2nd Intermediate Boom - T40170	81
End Boom Assy - T40170	85
Manual Quick Attach Lock (wide)	91
Manual Quick Attach Lock (narrow)	93

DRIVE SYSTEM

Axle Installation	95
Cardan Shaft	97
Hub Reduction - Front Axle / Rear Axle - quantities are per axle	99
Reducer Box - Front Axle	101
Housing - Front Axle	103
Differential - Front Axle	105
Steering - Front Axle	107
Brakes - Front Axle	109
Housing - Rear Axle	111
Differential - Rear Axle	113
Steering - Rear Axle	115

HYDRAULIC SYSTEM

Boom Hydraulic Supply - T40140	119
Boom Hydraulic Supply - T40170	123
Boom Hydraulic Supply from Control Valve	127

Lift & Compensation Cylinder Installation	129
Telescope Cylinder Installation - T40140	131
Telescope Cylinder Installation - T40170	133
Steering Hoses & Fittings (without damper)	135
Steering Hoses & Fittings (with damper)	137
Steering Hydraulics Cab	141
Service Brake Hydraulic Installation	143
Parking Brake Hydraulic Installation	145
Parking Brake Hydraulic Installation (accumulator)	147
Quick Attach Installation (wide)	149
Quick Attach Installation (narrow)	151
Hydraulic Tank Installation	153
Stabilizers & Frame Level Cylinder Installation	157
Stabilizer Selector Valves	161
Lift Cylinder	163
Compensating Cylinder	165
Telescope Cylinder - T40140	167
Telescope Cylinder - T40170	169
Tilt Cylinder - 97814.8	171
Tilt Cylinder - 6914552	173
Quick Attach Cylinder	175
Frame Level Cylinder	177
Stabilizer Cylinder - 84170.0	179
Stabilizer Cylinder - 6914550	181
Hydraulic Motor - for cooler fan	183
Hydraulic Pump Installation	185
Hydraulic Pump Assy	187
Hydraulic Control Valve Installation	189
Hydraulic Control Valve: In- and Outlet	191
Hydraulic Control Valve Lift Section	193
Hydraulic Control Valve Tilt Section	195
Hydraulic Control Valve Telescope Section	197
Hydraulic Control Valve Auxiliary Hydraulics Section	199
Hydraulic Control Valve Frame Leveling Section	201

HYDROSTATIC SYSTEM

Hydrostatic Hoses and Fittings	203
Hydrostatic Pump Assy - For serial nrs: T40140: 3632 11116/ & T40170: 3633 11181/	207
Hydrostatic Pump Assy - For serial nrs: T40140: /3632 11117 & T40170: /3633 11182	211
Hydrostatic Motor Assy	217

ELECTRICAL SYSTEM

Electrical Circuit Chassis	221
Electrical Circuit Cab	225
Electrical Circuit Engine	227
Joystick	229
Joystick / Susmic Installation	231
Ventilation reverse electrical	233

POWER UNIT

Engine Installation	235
Exhaust System	241
Cooling System Installation	243
Cooling Fan Circuit	247
Cooling Fan Circuit (with optional reverse)	249
Cylinder Block	251

Crankshaft - Pistons	255
Flywheel and Drive Pulley	257
Cylinder Head	259
Rocker Shaft	263
Timing Gear	265
Oil Sump - Oil Pump	267
Fuel Injection Equipment	269
Fuel Feeding	273
Cylinder Head Cover	275
Oil Cooler and Filter	277
Water Pump and Thermostat	279
Turbocharger	281
Alternator	285
Flywheel Housing and Starter	287
Engine Gaskets Sets	289

ACCESSORIES & OPTIONS

Air Conditioning Installation	291
DUNLOP 400/80-R24 153B Wheels - T40140	297
DUNLOP 400/80-R24 156B Wheels - T40140 & T40170	299
DUNLOP 405/70-R20 SPT9 Wheels - T40140	301
Mudguard 20" - T40140	303
Mudguard 24"	305
Tow Valve Installation	307
Wheel Wedge Option	309
Valve Braking Switch Option	311
Matriculation Plate Option	313
Tow Hitch	315
Trailer Plug	317
Rear View Mirror	319
2nd Hydraulic Function On Boom	321
2nd Hydraulic Function On Boom - Electric	323
Backup Alarm	325
Windshield Protection Grill	327
Bobcat Decals - T40140	331
Bobcat Decals - T40170	333
Italy Version	335
Germany Version	337
Frontal Safety Signalling for Germany	339
Steering Balance Kit	341
Boom Chain Pulley axles Kit - T40140	343
Boom Chain Pulley axles Kit - T40170	345
Fuel Pre-Filter Kit	347
Hydraulic Tank Filling Kit	349
Damper Kit	351
Tool Adaptor Kit	353
Concrete Bucket	355
Floating Pallet Forks	357
Bales Pikes - Narrow Quick Attach	359
Rigid Forks Holder - Narrow Quick Attach	361
Side Shifter Assy - Narrow Quick Attach	363
Side Shifter Assy II - Narrow Quick Attach	365
Toothless Buckets - Narrow Quick Attach	367
Toothed Bucket - Narrow Quick Attach	369
Crane Jib & Extension Jib - Narrow Quick Attach	371


Bales Pikes - Wide Quick Attach	373
Rigid Forks Holder - Wide Quick Attach	375
Side Shifter Assy 1000 mm - Wide Quick Attach	377
Side Shifter Assy 1150 mm - Wide Quick Attach	379
Side Shifter Assy II - Wide Quick Attach	381
Toothless Buckets - Wide Quick Attach	385
Toothed Bucket - Wide Quick Attach	387
Bucket with Grab - Wide Quick Attach	389
Bucket with Grab - Hydraulics - Wide Quick Attach	391
Manure Fork with Grab - Wide Quick Attach	393
Manure Fork with Grab - Hydraulics - Wide Quick Attach	395

T40140 - T40170 Telescopic Handlers

S/N 3632 11001 & above

S/N 3633 11001 & above

Chassis

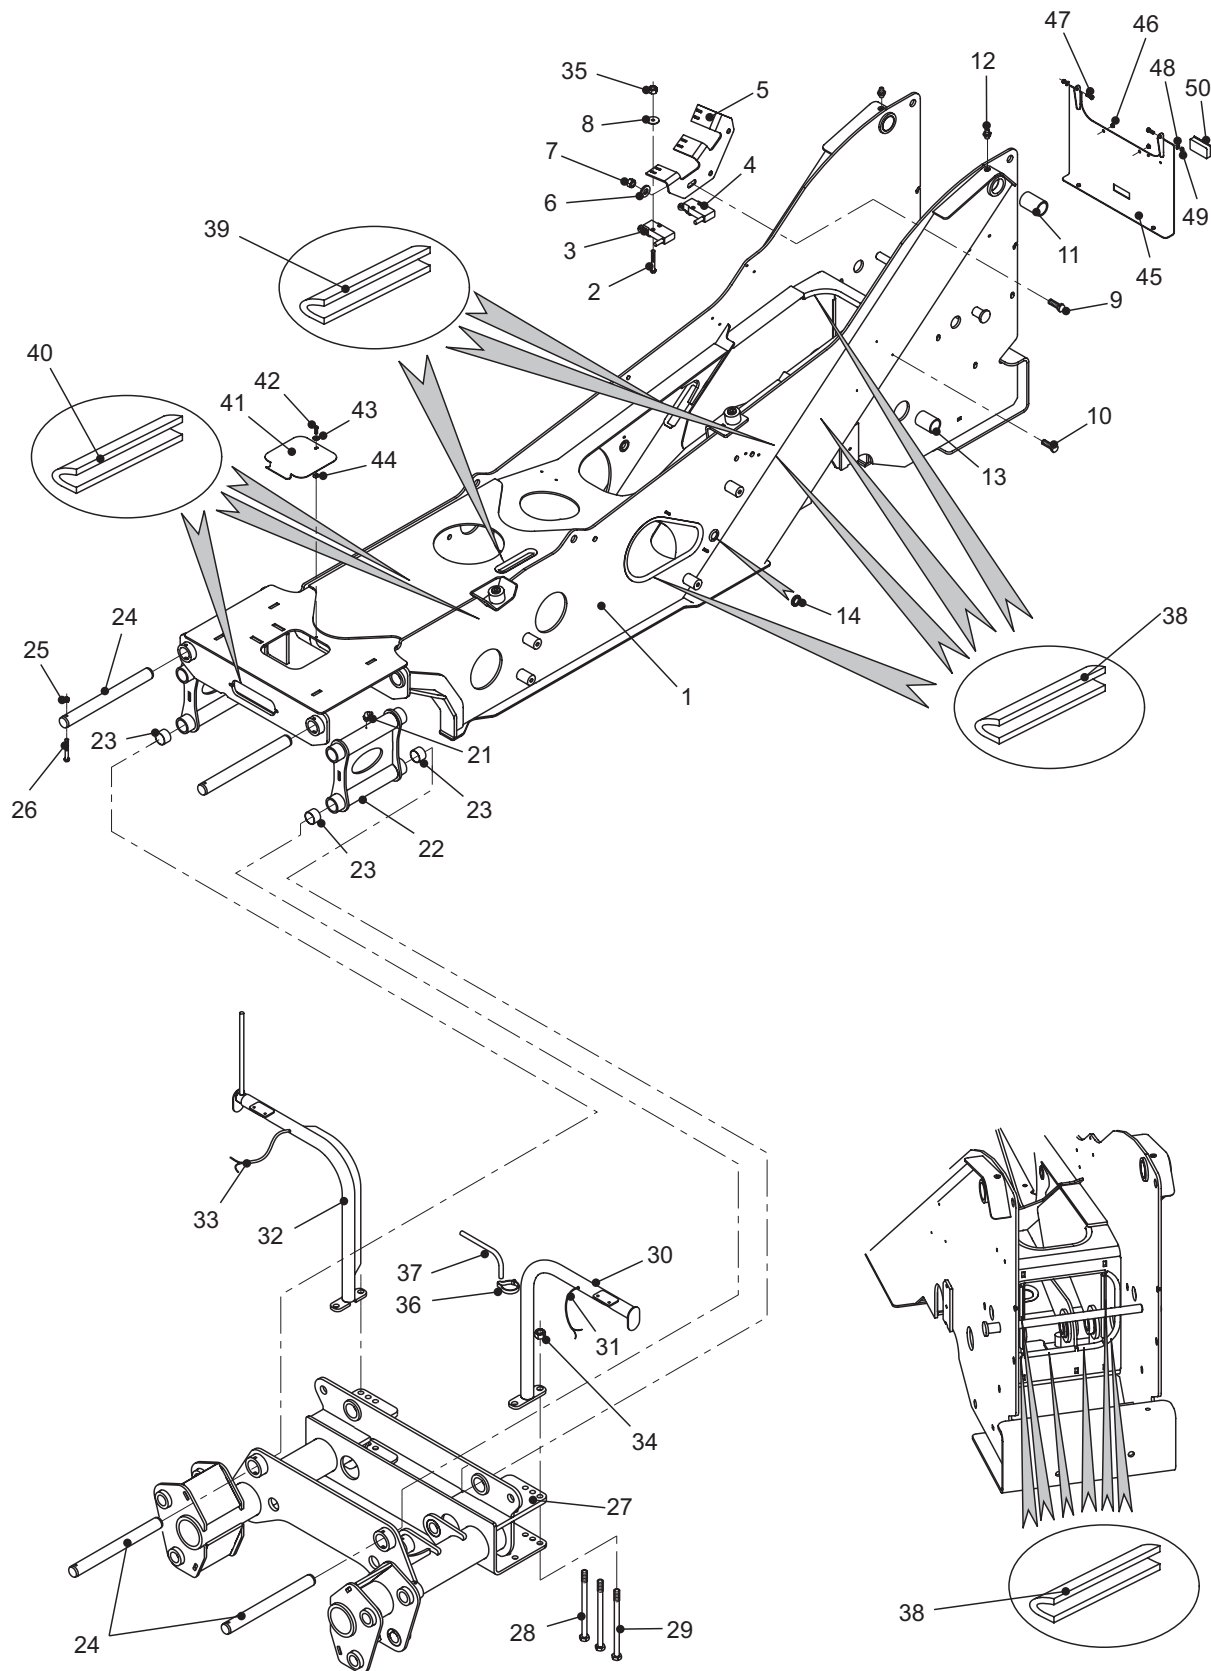


SPC001001

Chassis

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6914731	Chassis	Was 6913264, 6910807		1
2	53100.4	Screw			4
3	92972.9	Switch			1
4	6911738	Switch			1
5	92968.7	Plate			1
6	01699.8	Washer			2
7	000345-96E	Nut			2
8	61378.6	Washer			4
9	01612.1	Screw			2
10	96541.8	Rivet			6
11	77380.4	Boom Pivot Bushing			2
12	01775.6	Grease Nipple			2
13	90281.7	Bush			3
14	79288.7	Rubber mounting			2
21	01782.2	Grease nipple			4
22	84106.4	Connecting rod			2
23	77261.6	Bush			8
24	84176.7	Pin			4
25	100345-09A	Nut			4
26	65397.2	Screw			4
27	92055.3	Front support			1
28	100338-19A	Screw			8
29	85102.2	Screw			4
30	89097.0	Support			1
31	79539.3	Front Light Wire Harness, LH			1
32	89096.2	Support			1
33	79540.1	Front Light Wire Harness, RH			1
34	100345-20M	Nut			12
35	01664.2	Nut			4
36	89523.5	Clamp			1
37	92651.9	Pipe			1

Chassis

Recurrence of previous drawing

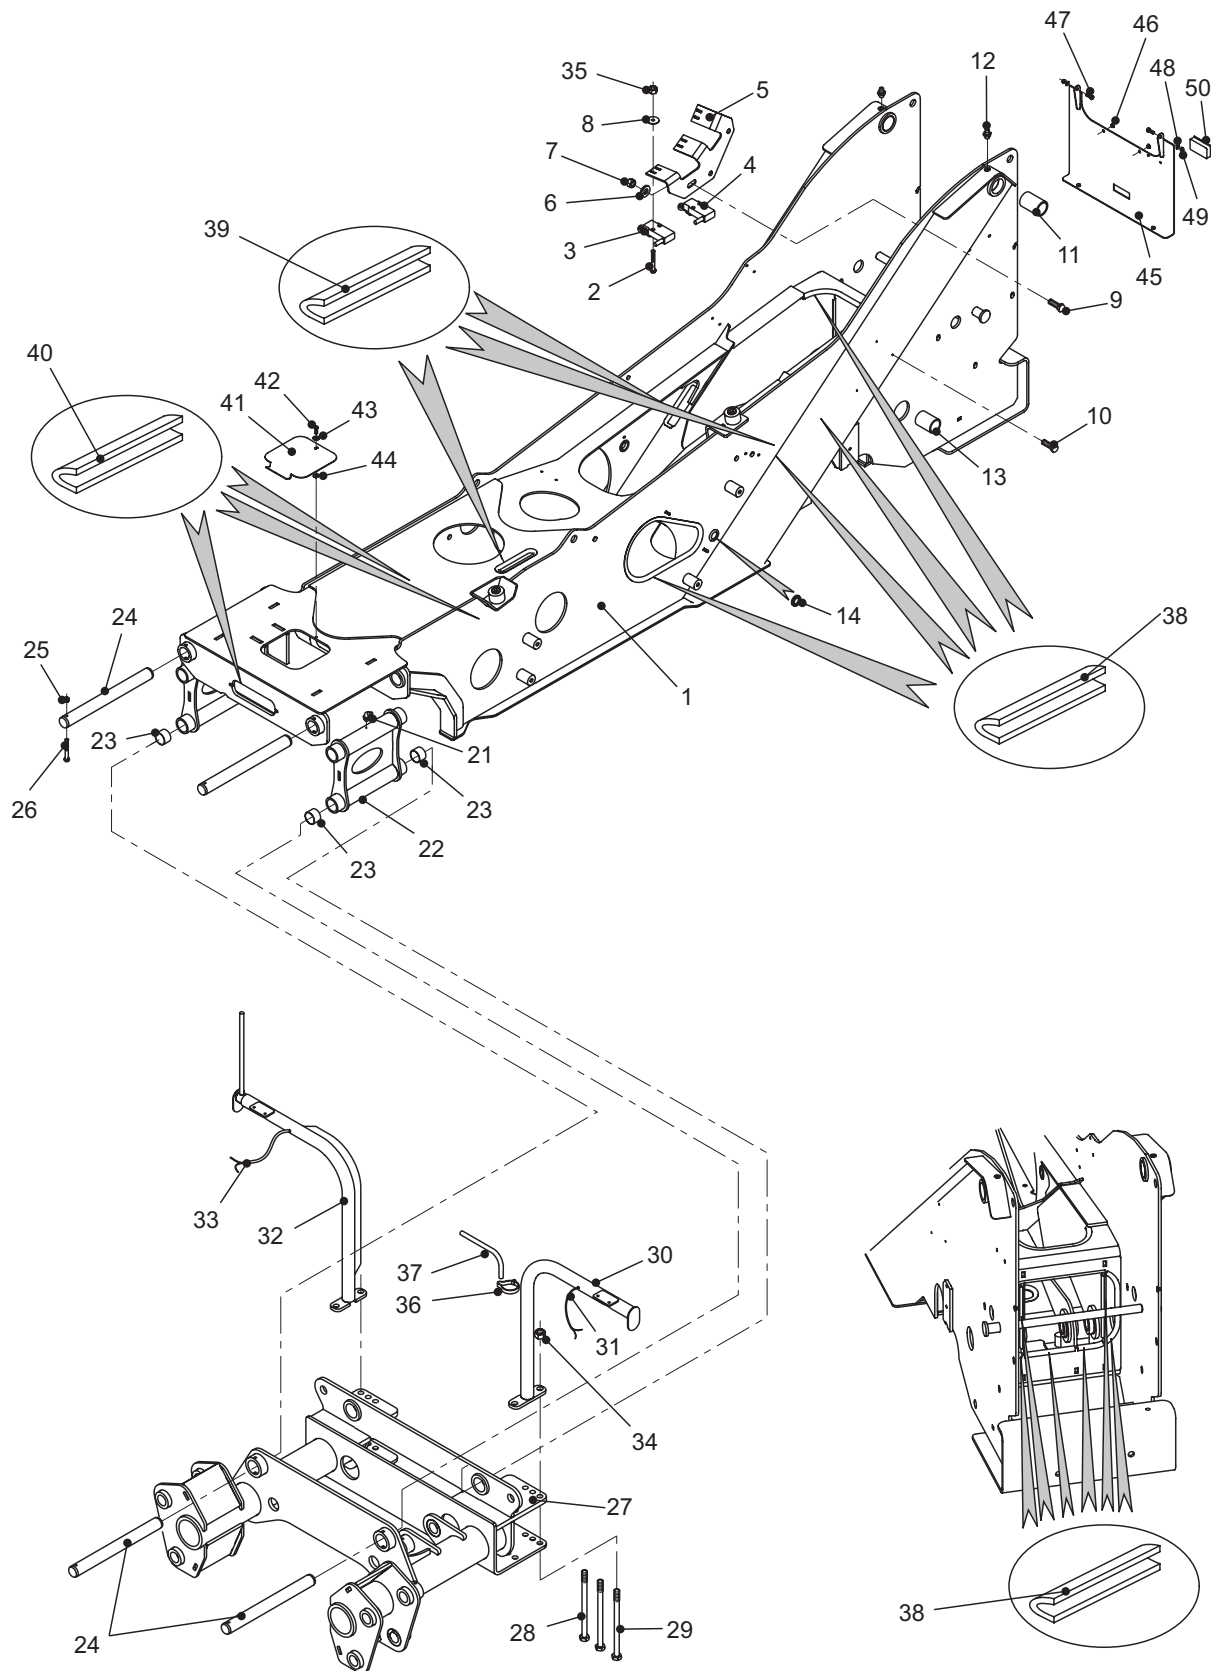


SPC001001

Chassis

[illegible]

Ballast

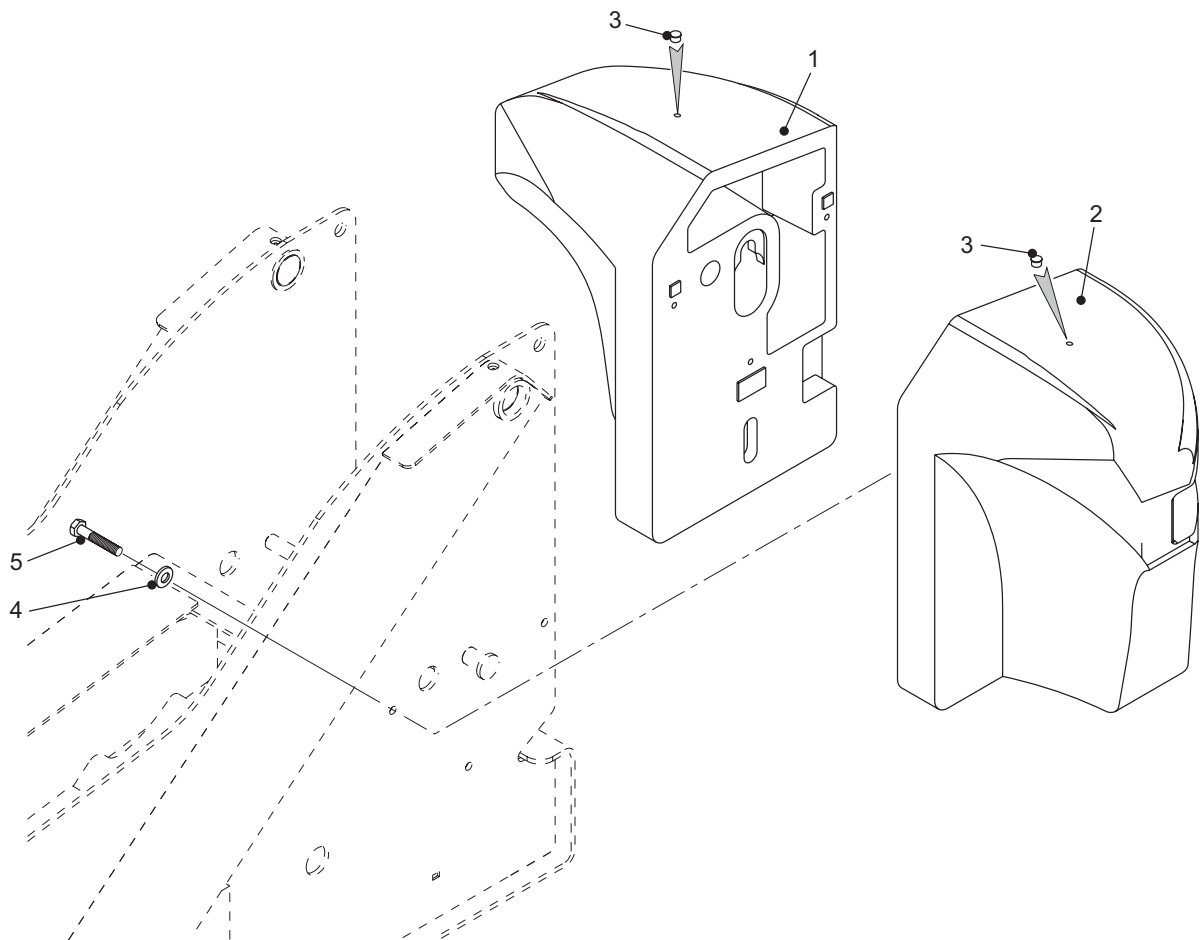


SPC001002

Ballast

[illegible]

Front ballast

T40170

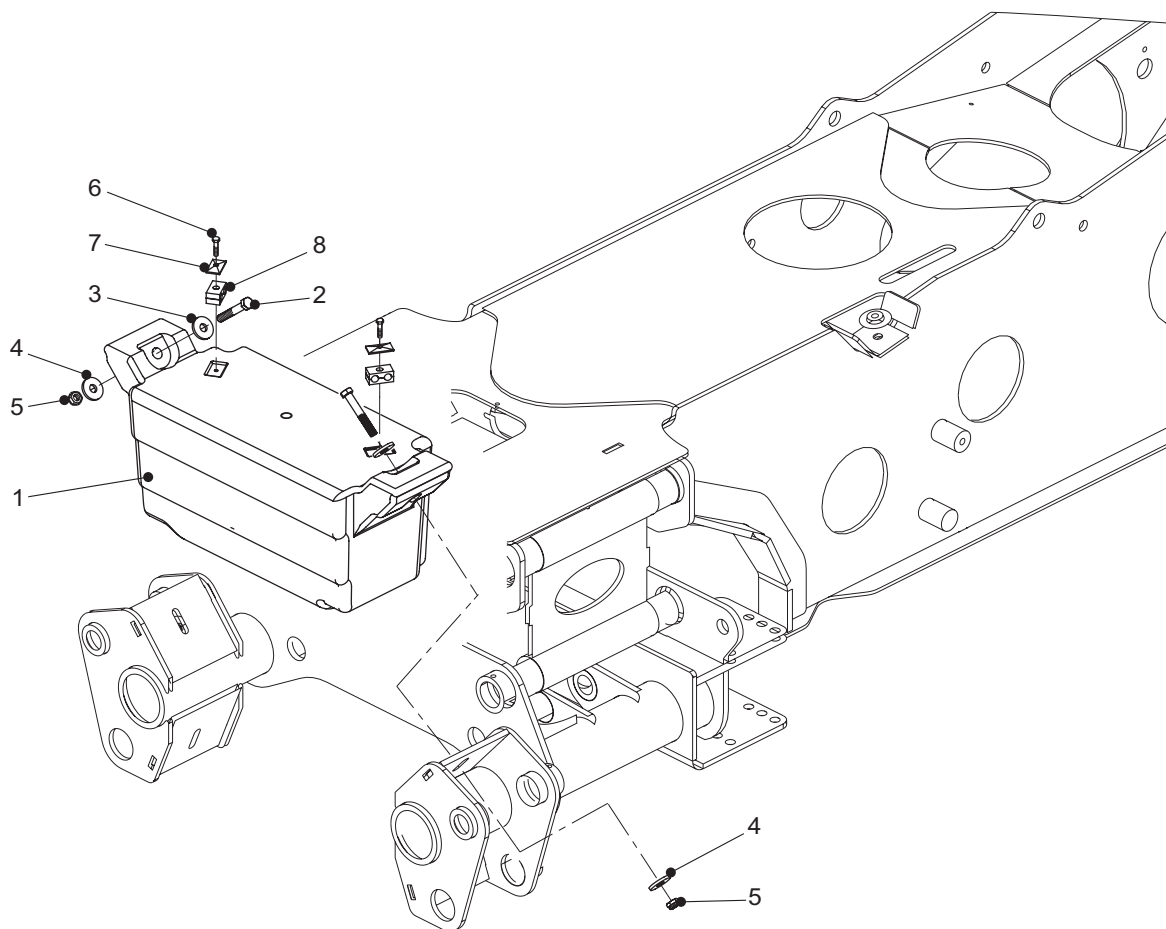


SPC001003

Front ballast

[illegible]

Fuel Tank Installation

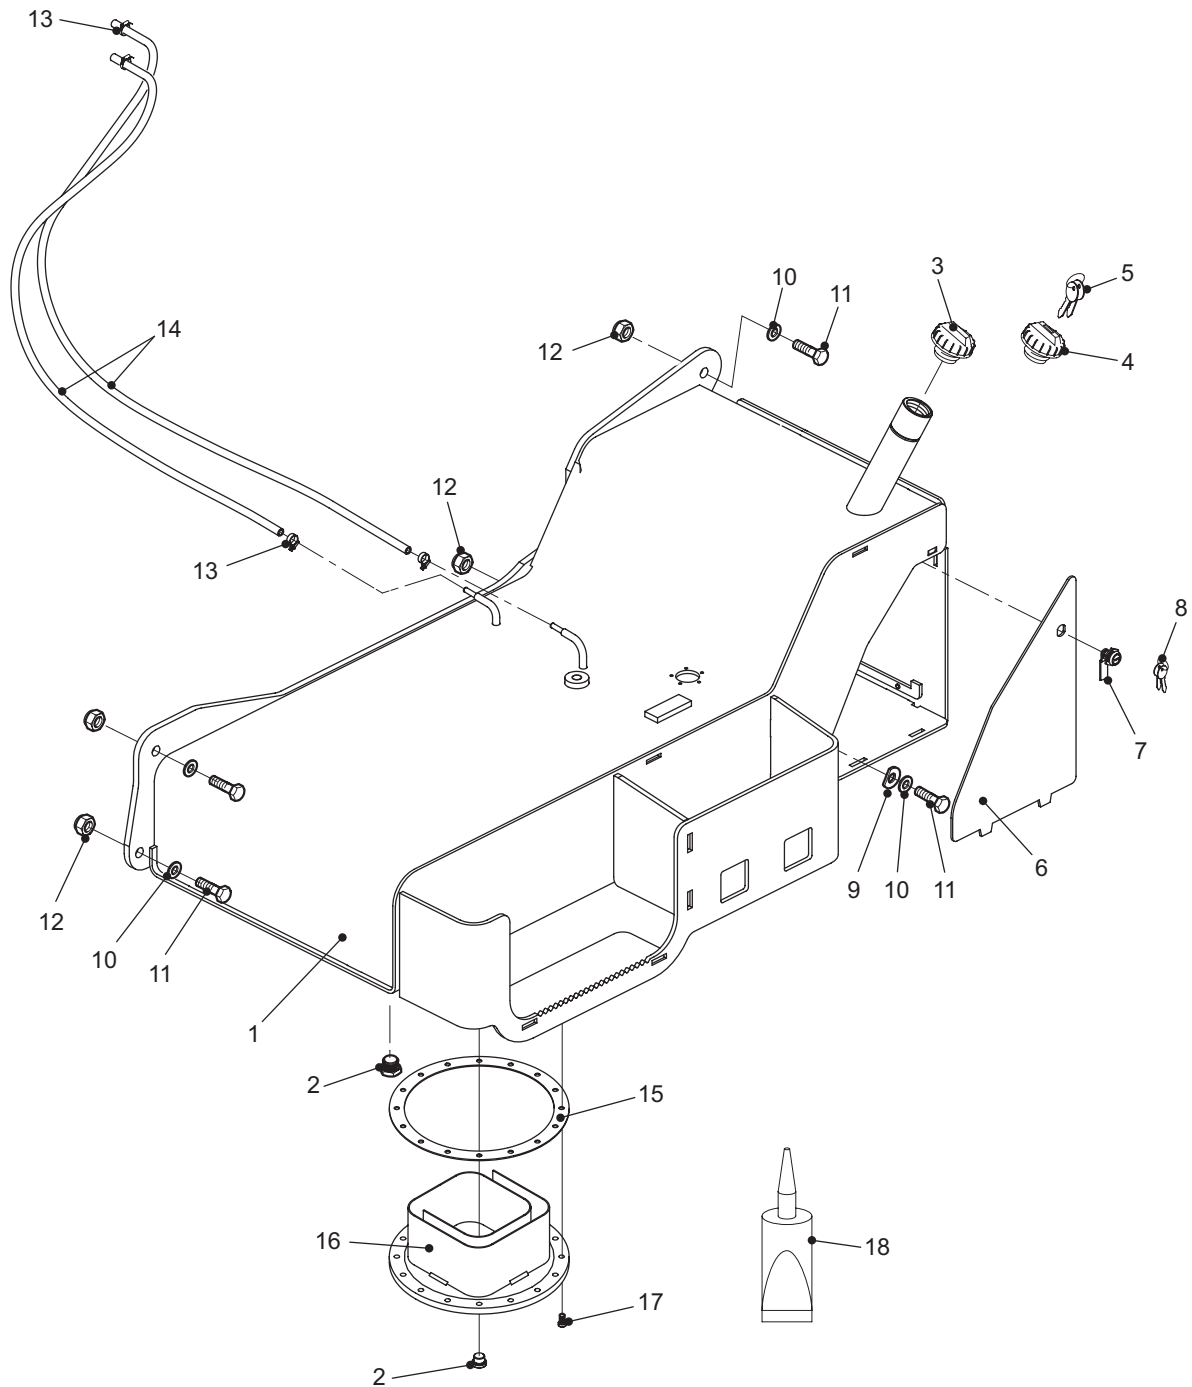


SPC001004

Fuel Tank Installation

[illegible]

Engine Cover

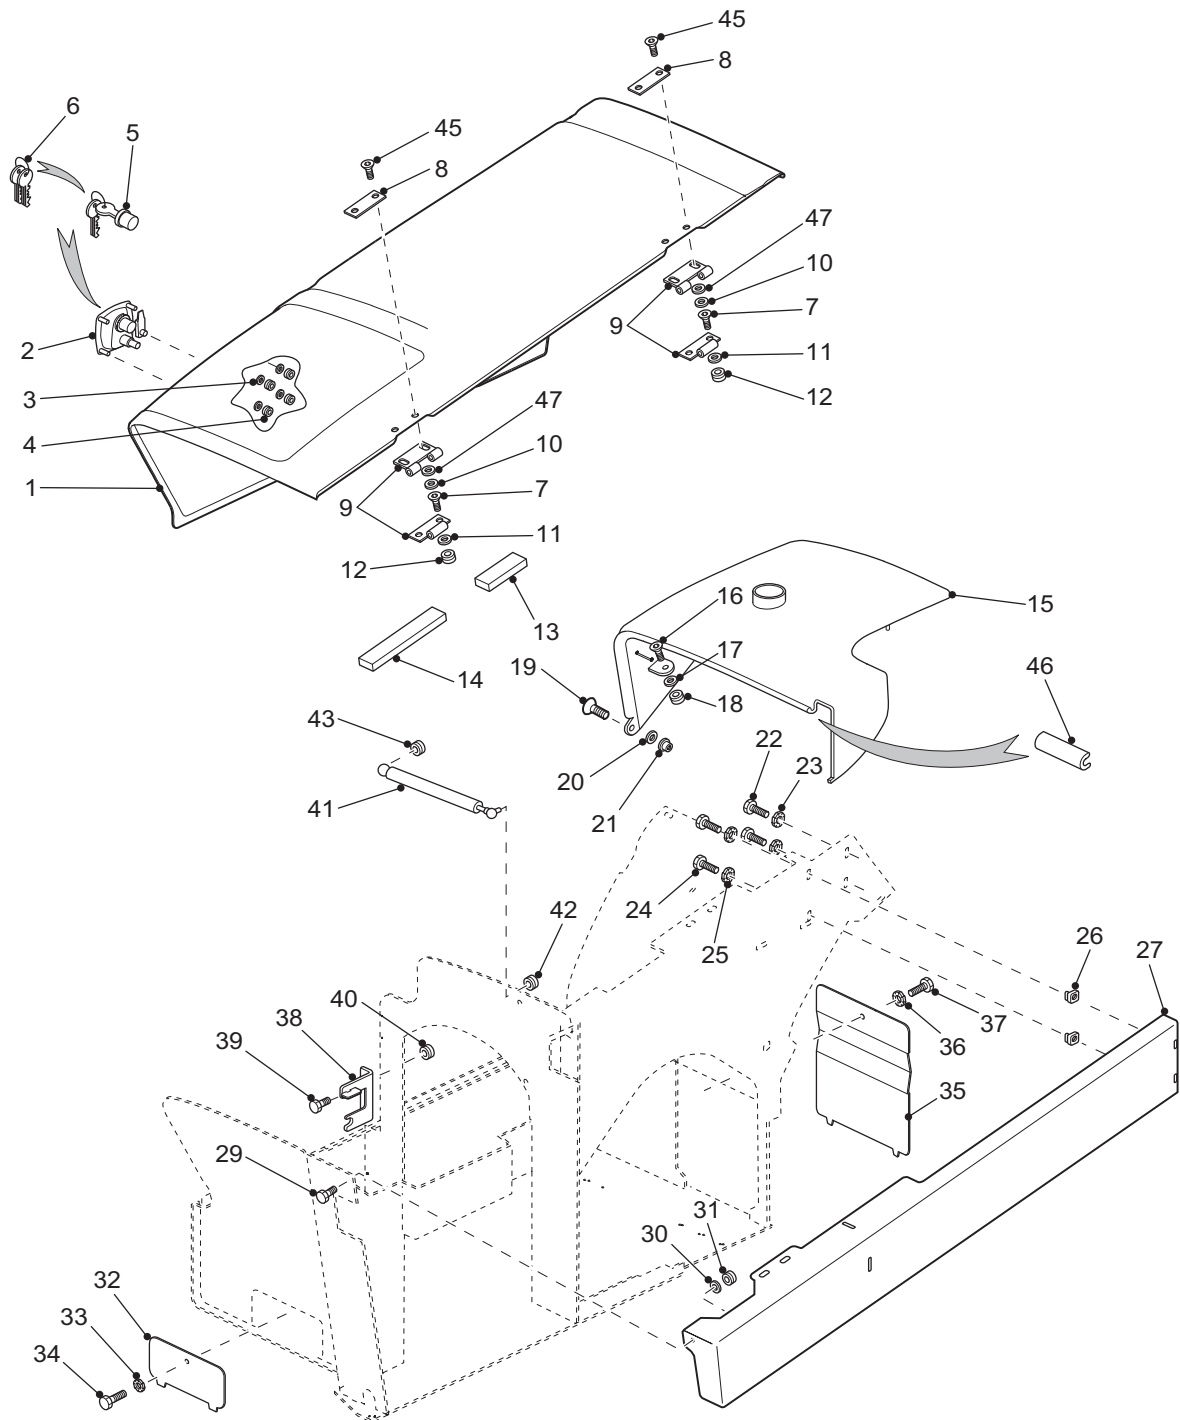


SPC001005

Engine Cover

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	98765.1	Engine cover	Pos. 1 + 2 + 8 + 9 + 45 ; Was 6910149 ; For details, see page 17		1
2	6909609	Lock, engine cover			1
3	13416.3	Washer			4
4	01666.7	Nut			4
5	NAP	Lock cylinder	Order Pos. 2		1
6	57189.3	Set of keys (ignition)			1
7	000324-65N	Screw			8
8	6909020	Plate			2
9	6912485	Hinge			2
10	01682.4	Nut			4
11	000350-03W	Washer			4
12	100345-09A	Nut			4
13	6914748	Seal	Was 6912496		1
14	6914748	Seal	Was 6912495		1
15	98774.3	Cover	Pos. 15 ; See page 17 for details.		1
16	01597.4	Screw			1
17	000350-02V	Washer			1
18	51851.4	Nut			1
19	71825.4	Screw			1
20	000350-02V	Washer			1
21	51851.4	Nut			1
22	01597.4	Screw			2
23	01718.6	Washer			2
24	01597.4	Screw			2
25	01718.6	Washer			2
26	015369-50X	Nut			2
27	6911253	Sill plate			1
29	01597.4	Screw			1
30	000350-02V	Washer			1
31	51851.4	Nut			1
32	6908165	Plate, engine basket, rear			1

Engine Cover

Recurrence of previous drawing

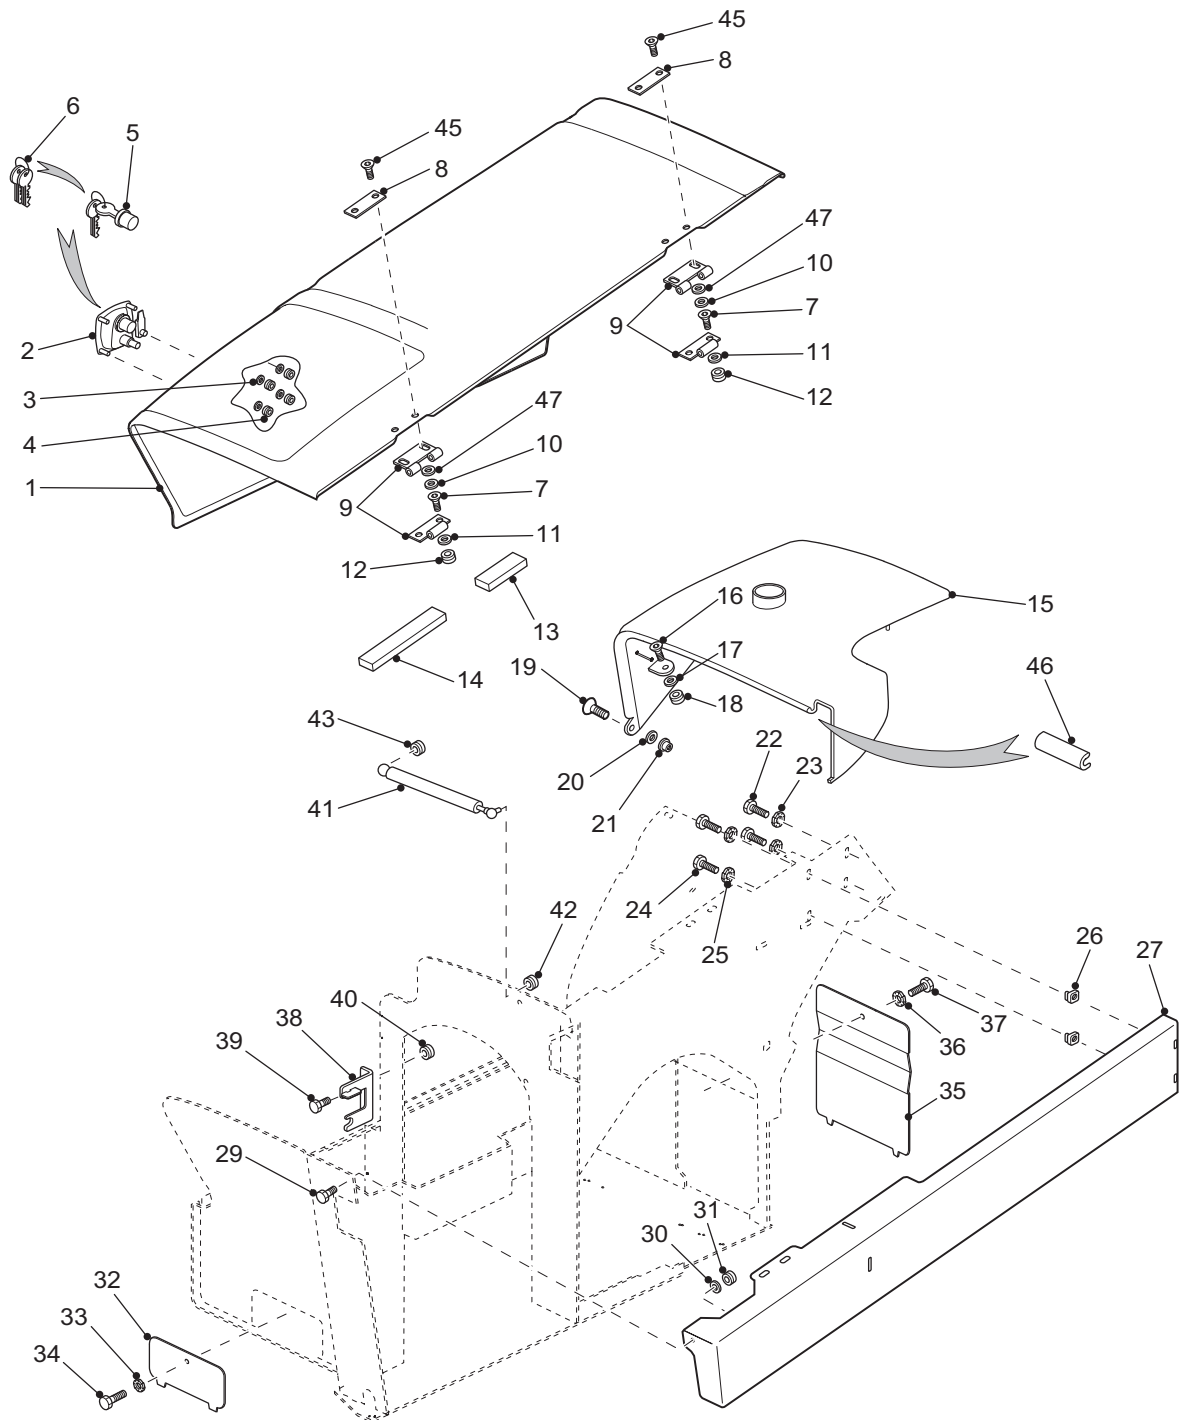


SPC001005

Engine Cover

[illegible]

Engine Sound Proofing

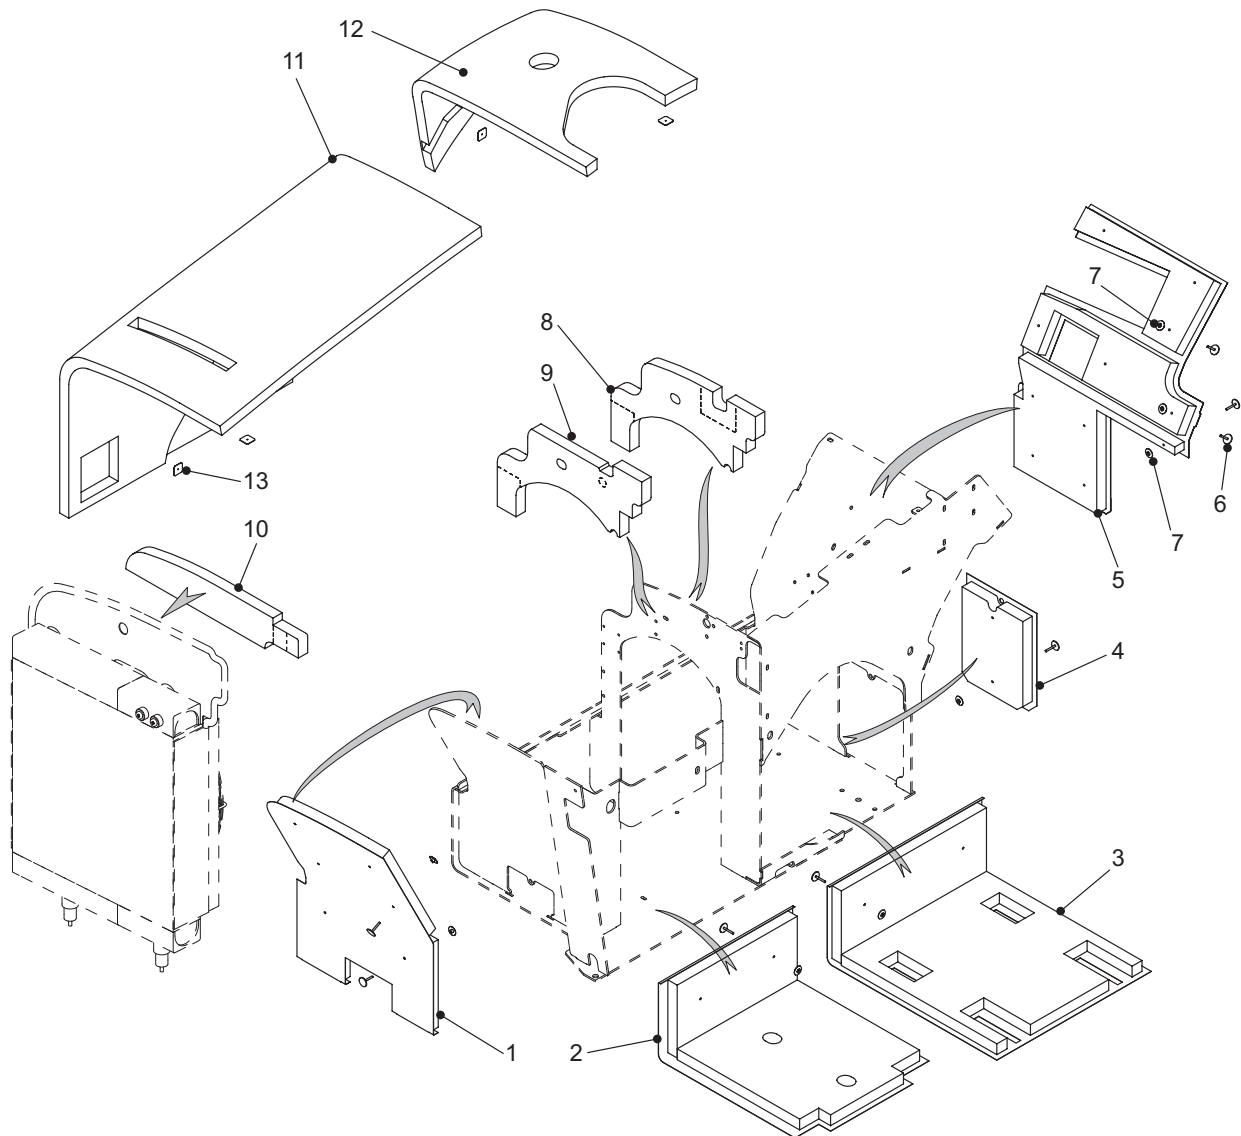


SPC001006

Engine Sound Proofing

[illegible]

Engine Basket

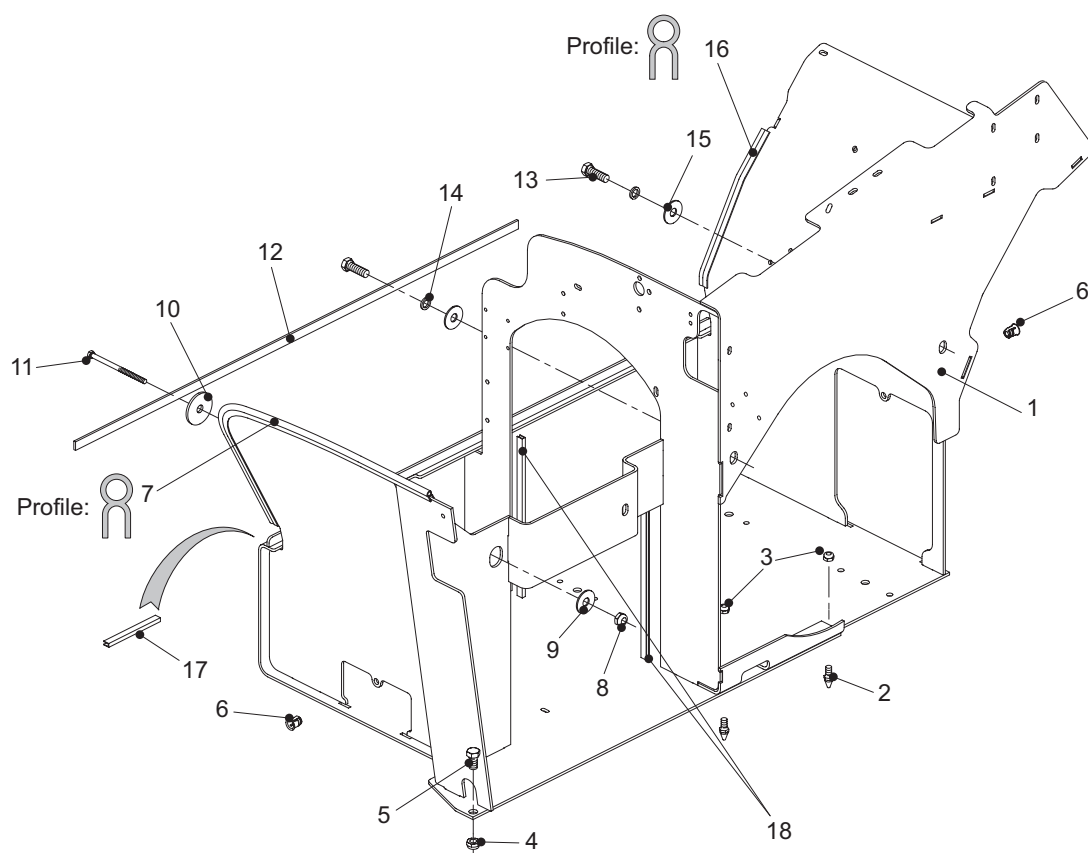


SPC001007

Engine Basket

[illegible]

Cab & Fixations

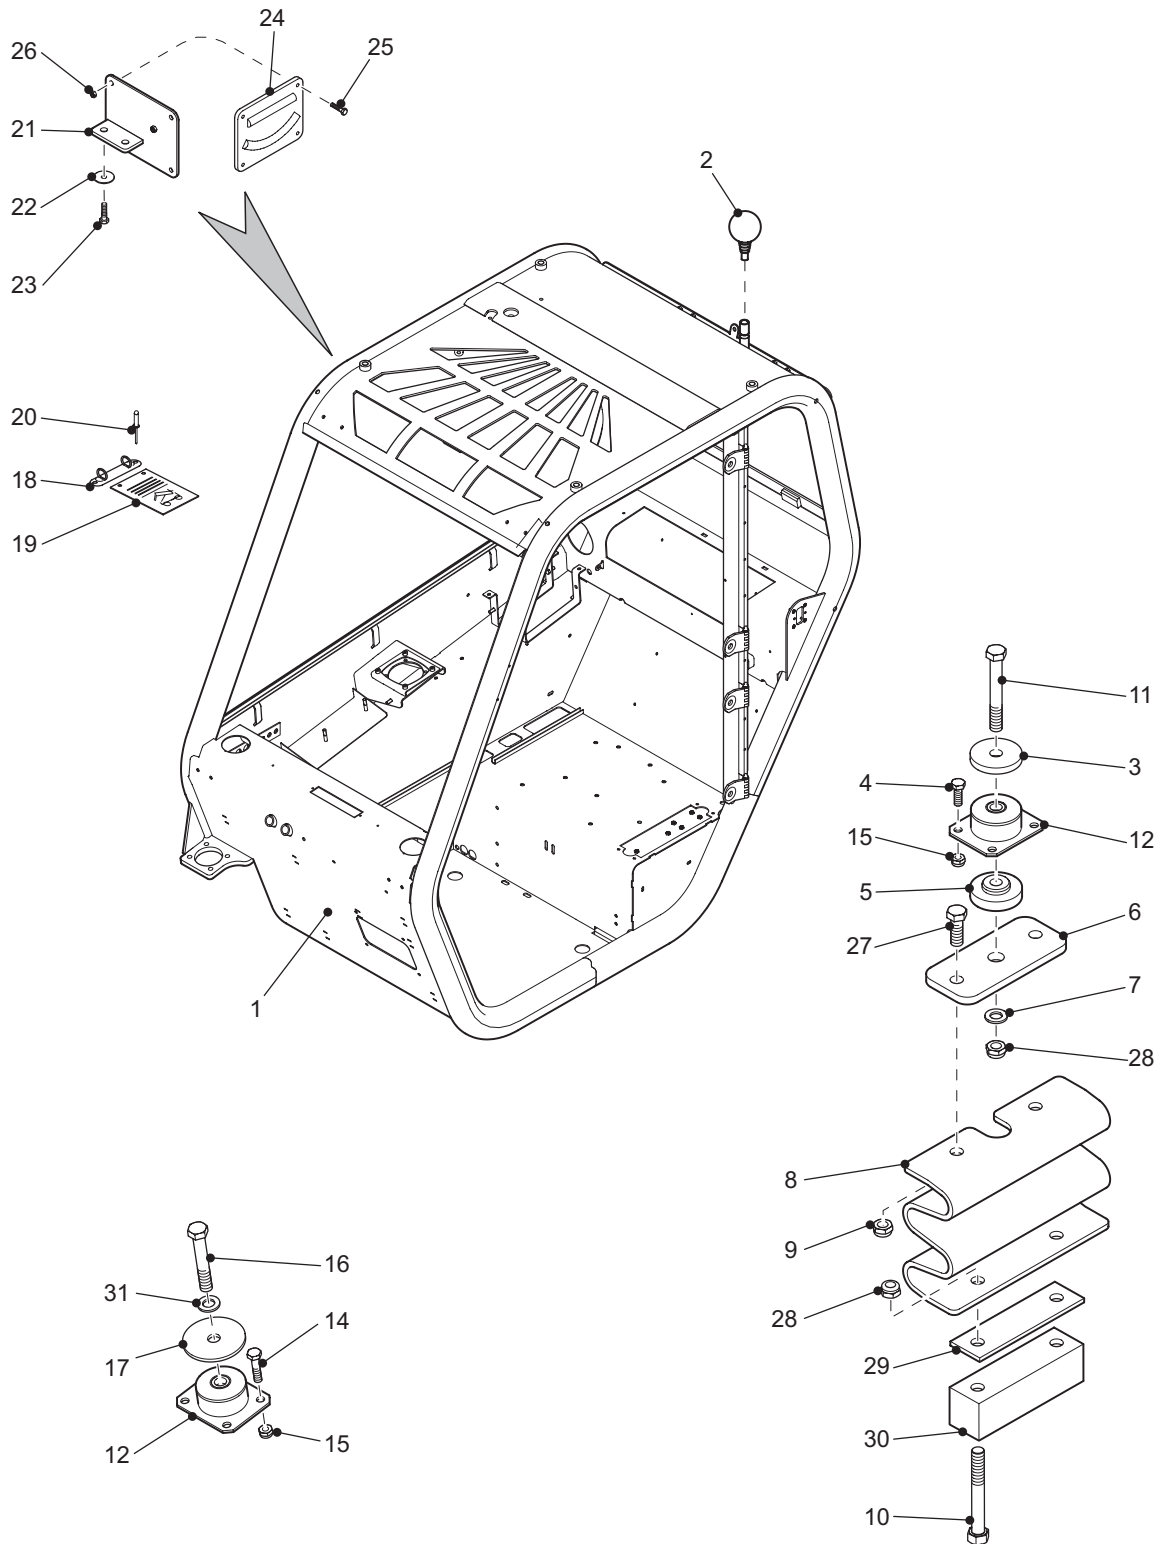


SPC001008

Cab & Fixations

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1		Cab			1
2	78817.4	Rotating Beacon Light	Option		1
3	79879.3	Washer			1
4	01606.3	Screw			8
5	79872.8	Spacer			1
6	78867.9	Support			1
7	01701.2	Washer			1
8	78856.2	Plate			1
9	100345-16H	Nut			2
10	66716.2	Screw			2
11	100338-07M	Screw			1
12	78021.3	Shock Absorber			3
14	01606.3	Screw			4
15	100345-09A	Nut			12
16	90245.2	Screw			2
17	95704.3	Washer			2
18	78863.8	Support			1
19		Index card			1
20	79864.5	Screw			2
21	92303.7	Bracket			1
22	94574.1	Washer			2
23	15354.4	Screw			2
24	100416-32S	Inclinometer			1
25	01657.6	Screw			3
26	100345-04U	Nut			3
27	01549.5	Screw			2
28	100345-15G	Nut			2
29	94077.5	Shim	If necessary		1
30	88624.2	Shim			1
31	13778.6	Washer			2

Cab Assy

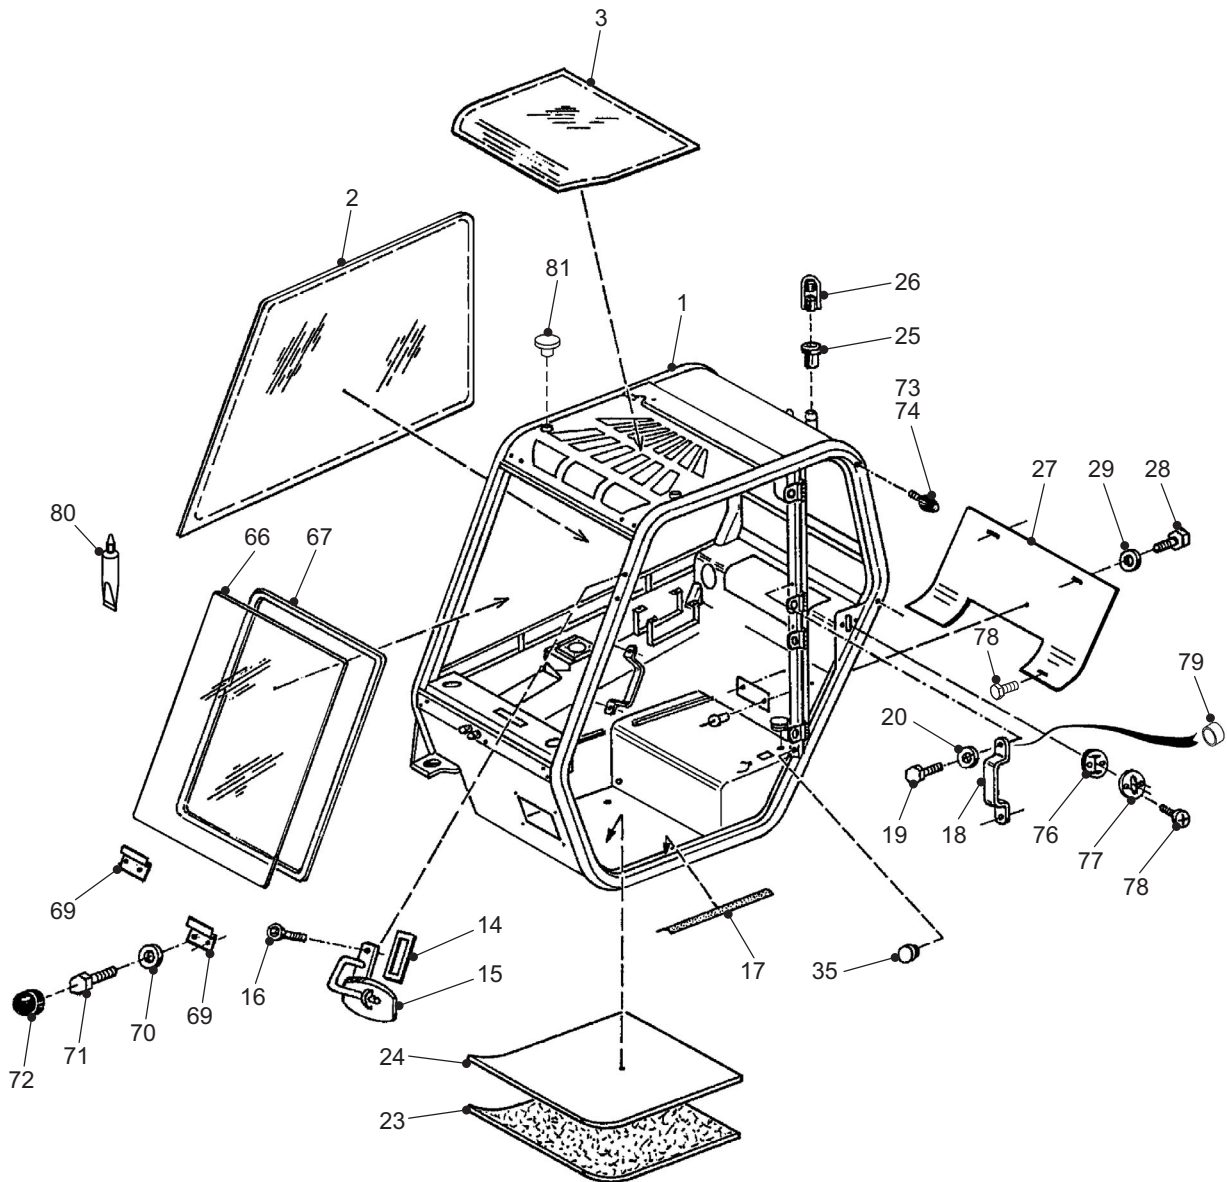


SPC001009

Cab Assy

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6963094	Frame			1
2	6908788	Glass, right side			1
3	6908786	Glass, roof			1
14	NSS	Connection	Order Pos. 15		1
15	79903.1	Mirror LH	Pos. 14 + 15		1
16	6909997	Screw			2
17	6564833	Non-skid			1
18	63349.5	Handle			2
19	01591.7	Screw			4
20	94574.1	Washer			4
23	97089.7	Mat			1
24	97088.9	Mat			1
25	78818.2	Connection			1
26	78819.0	Gyrolight plug			1
27	96074.0	Cover			1
28	01590.9	Screw			3
29	29272.2	Washer			3
35	6910931	Plug			1
55	6809599	Plate			1
56	6909959	Rivet			2
66	6908790	Windshield			1
67	75944.9	Seal			1
68	6910930	Guide			1
69	6971665	Support			2
70	01696.4	Washer			4
71	01590.9	Screw			4
72	63332.1	Cap			4
73	6910542	Rubber stop			2
74	6910932	Nut			2
76	6910933	Spacer			1
77	6910934	Plate			1

Cab Assy

Recurrence of previous drawing

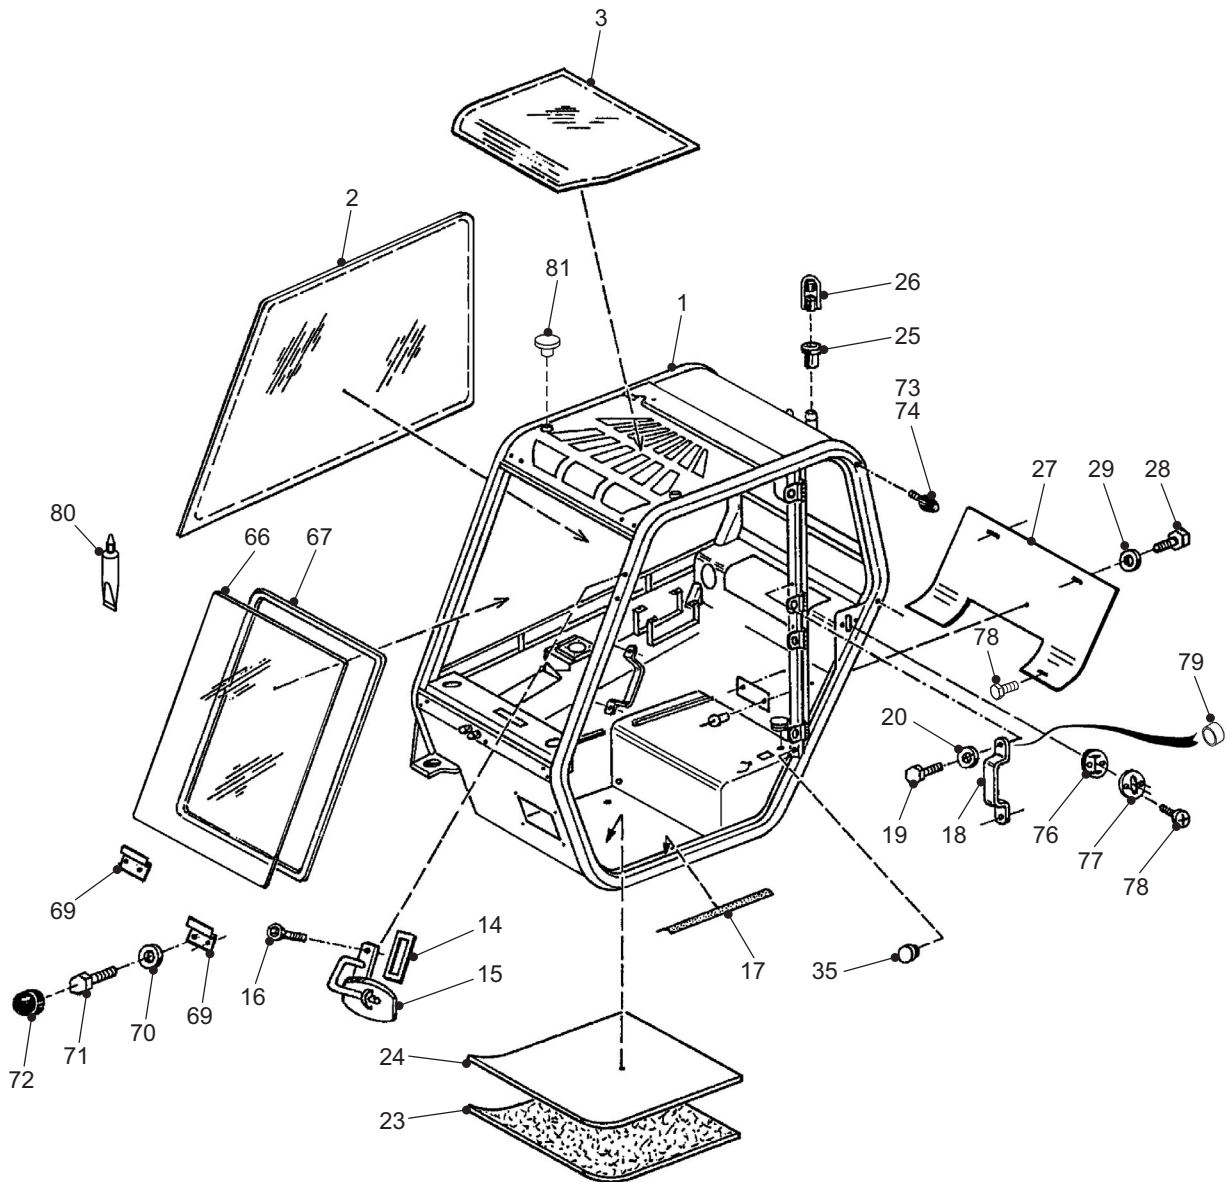


SPC001009

Cab Assy

[illegible]

Cab Assy II

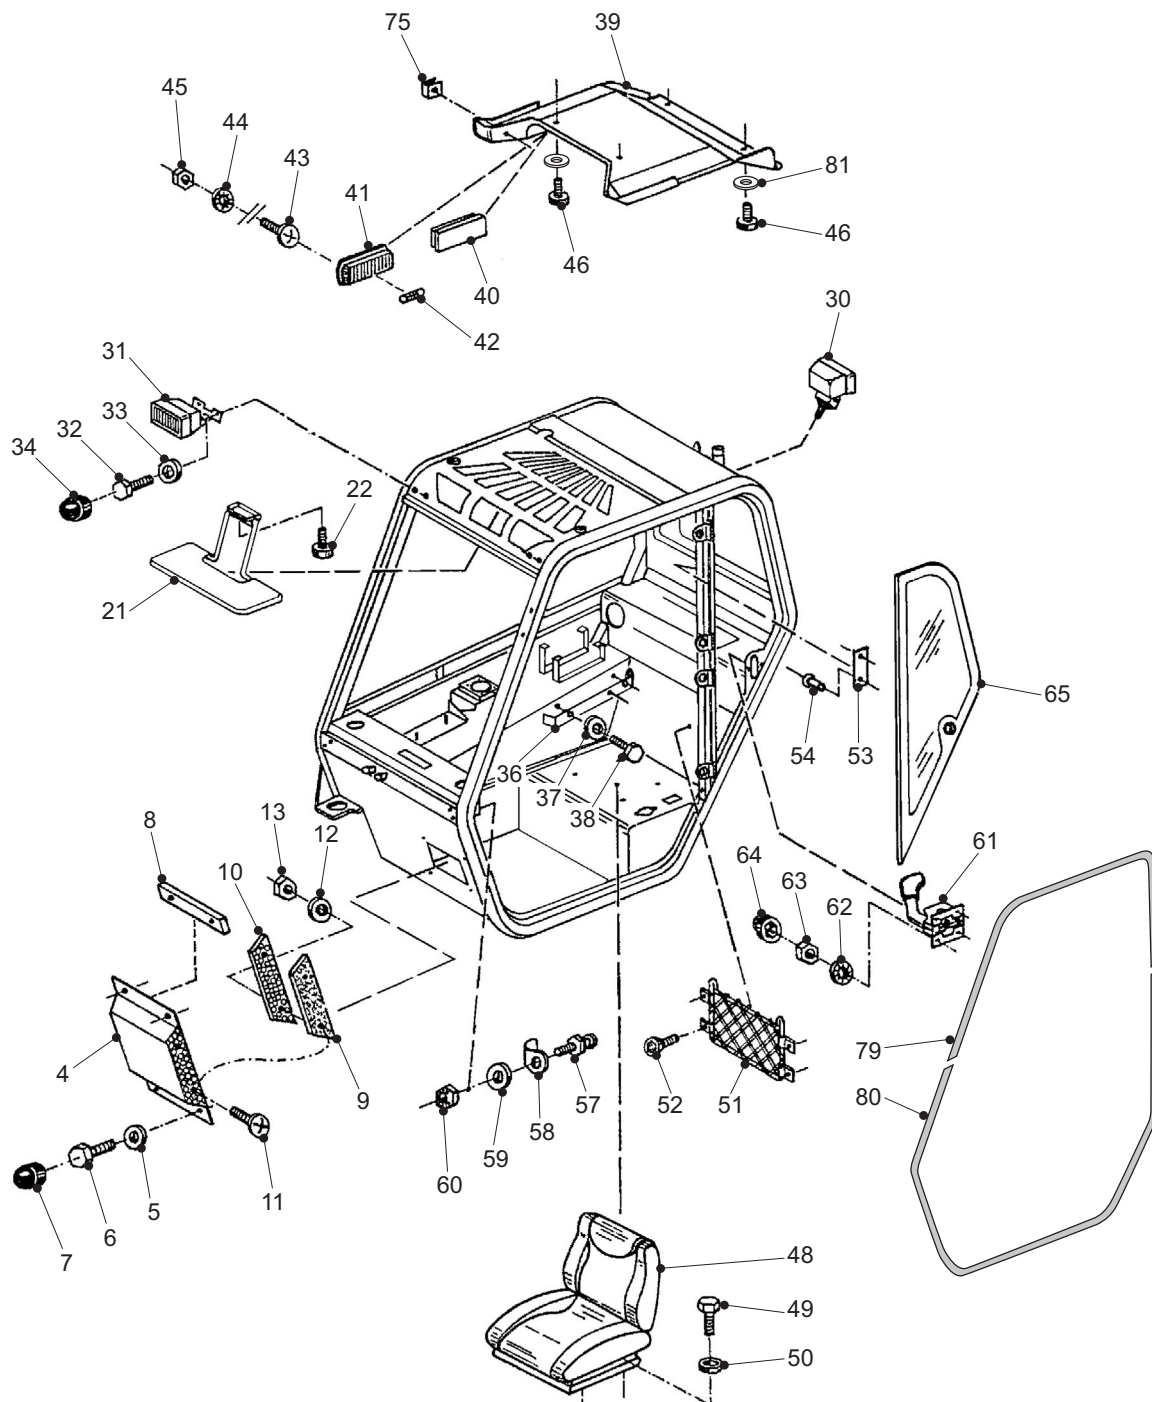


SPC001010

Cab Assy II

Item	Part Number	Denomination	Remarks	Serial Number	Qty
4	6910503	Box filter			1
5	01696.4	Washer			4
6	01590.9	Screw			4
7	63332.1	Cap			4
8	6910504	Seal			1,00m
9	6910502	Cab filter			2
10	6910929	Internal grille			2
11	6910505	Screw			4
12	61378.6	Washer			4
13	01664.2	Nut			4
21	79902.3	Sunshade			1
22	6910697	Screw			1
30	78816.6	Rear Worklight	Was 6909970		1
31	78815.8	Front worklight	Was 6909971		2
32	01591.7	Screw			4
33	29272.2	Washer			4
34	63332.1	Cap			4
36	97504.5	Bracket			1
37	01717.8	Washer			2
38	100338-23F	Screw			2
39	6910878	Roof cowl			1
40	79581.5	Cover			1
41	101438-93V	Dome Light			1
42	01443.1	Bulb			1
43	6910505	Screw			2
44	007346-02F	Washer			2
45	100345-04U	Nut			2
46	34214.7	Screw			5
48	6911769	Seat assy	See page 31 for details.		1
49	01596.6	Screw			4
50	01697.2	Washer			4

Cab Assy II

Recurrence of previous drawing

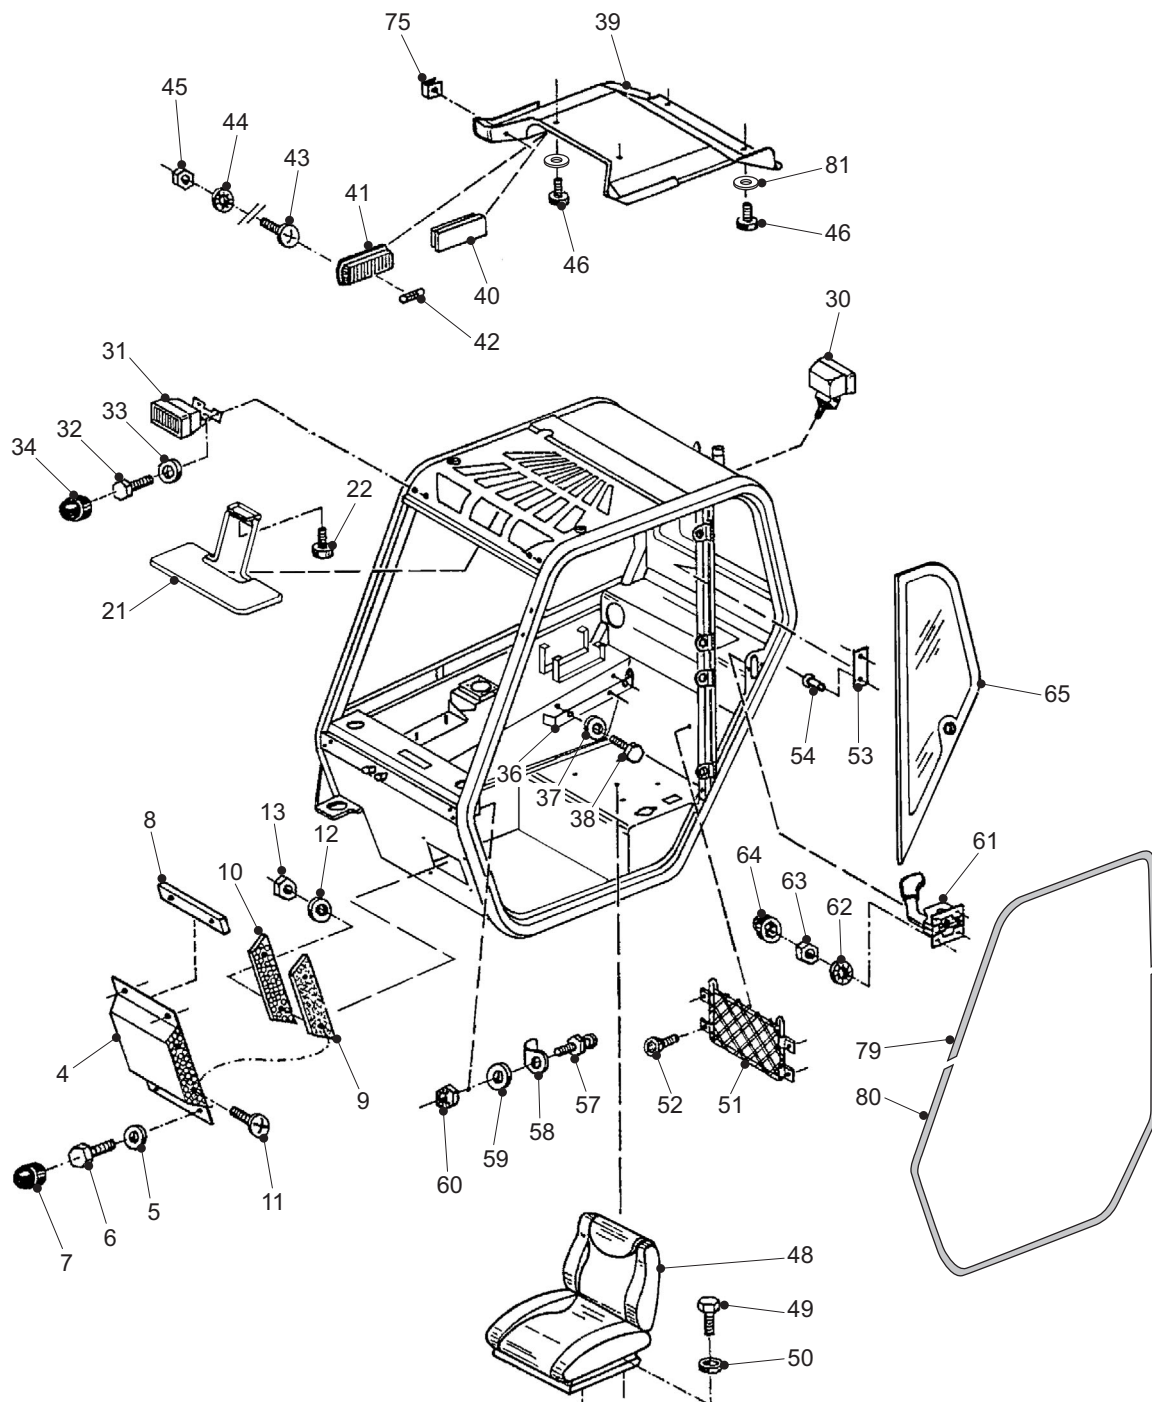


SPC001010

Cab Assy II

[illegible]

Seat & Suspension

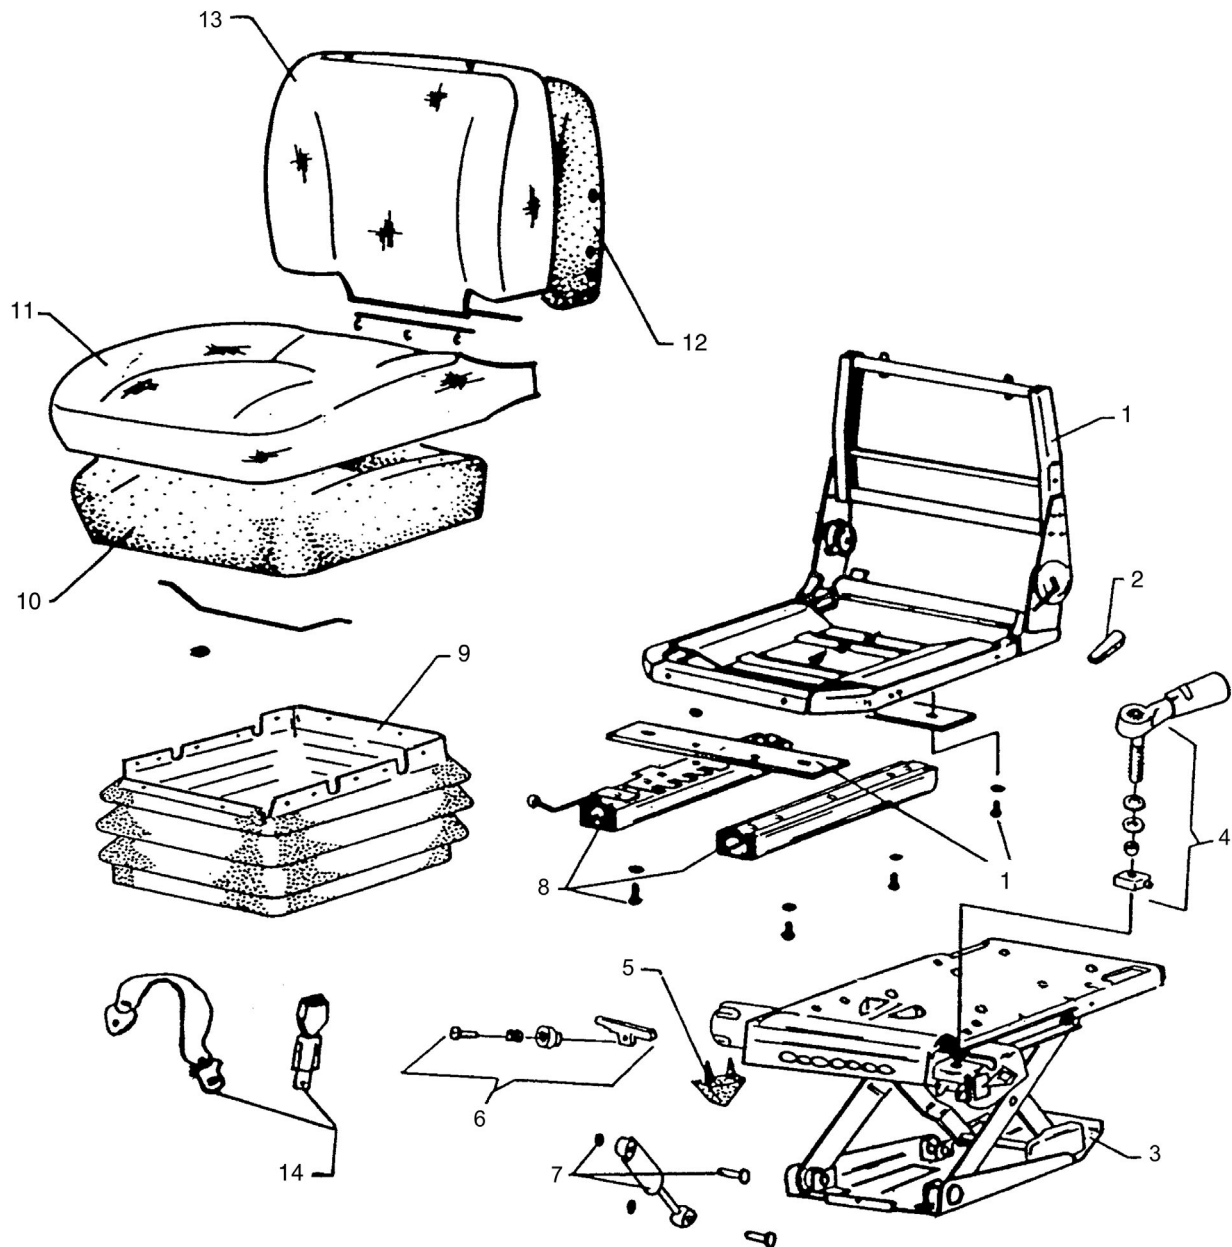


SPC001011

Seat & Suspension

[illegible]

Heating/ventilation Installation

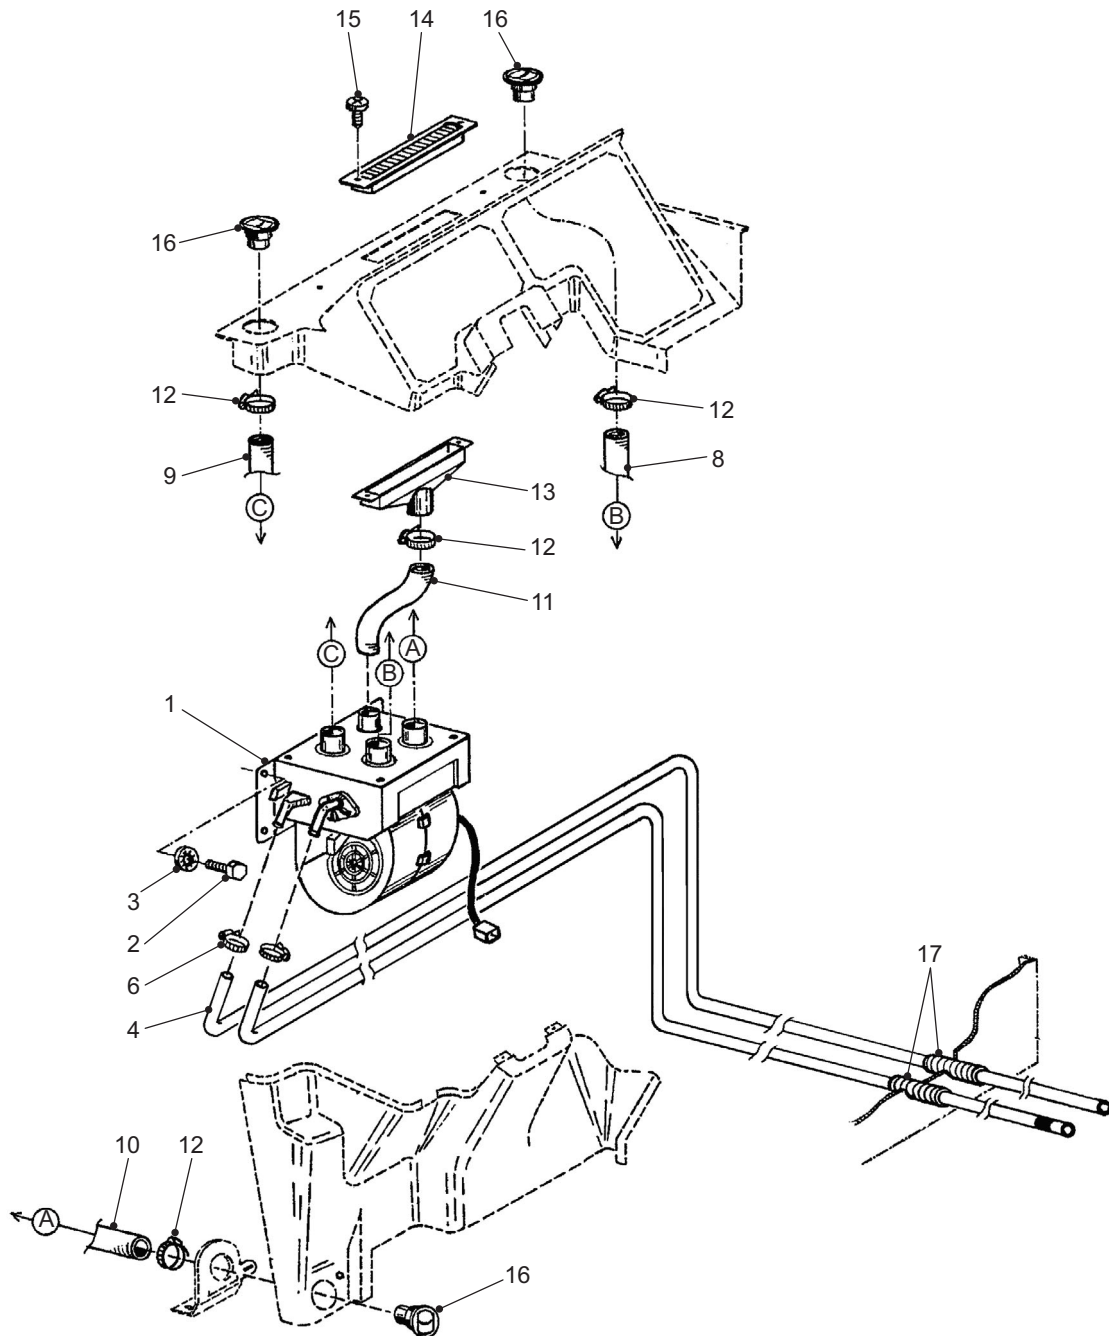


SPC001012

Heating/ventilation Installation

[illegible]

Heating/ventilation Fan Assy

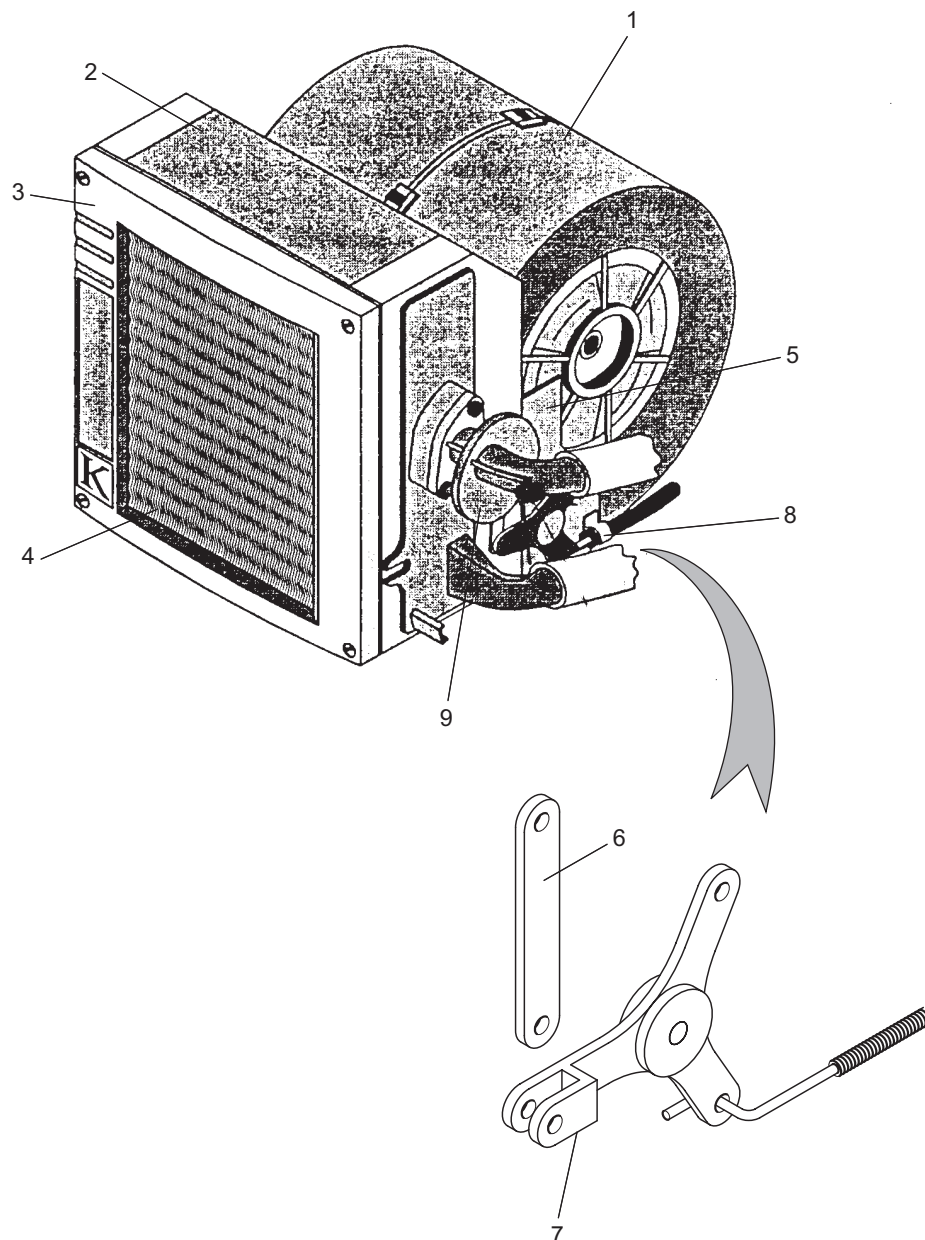


SPC001013

Heating/ventilation Fan Assy

[illegible]

Pedals Installation

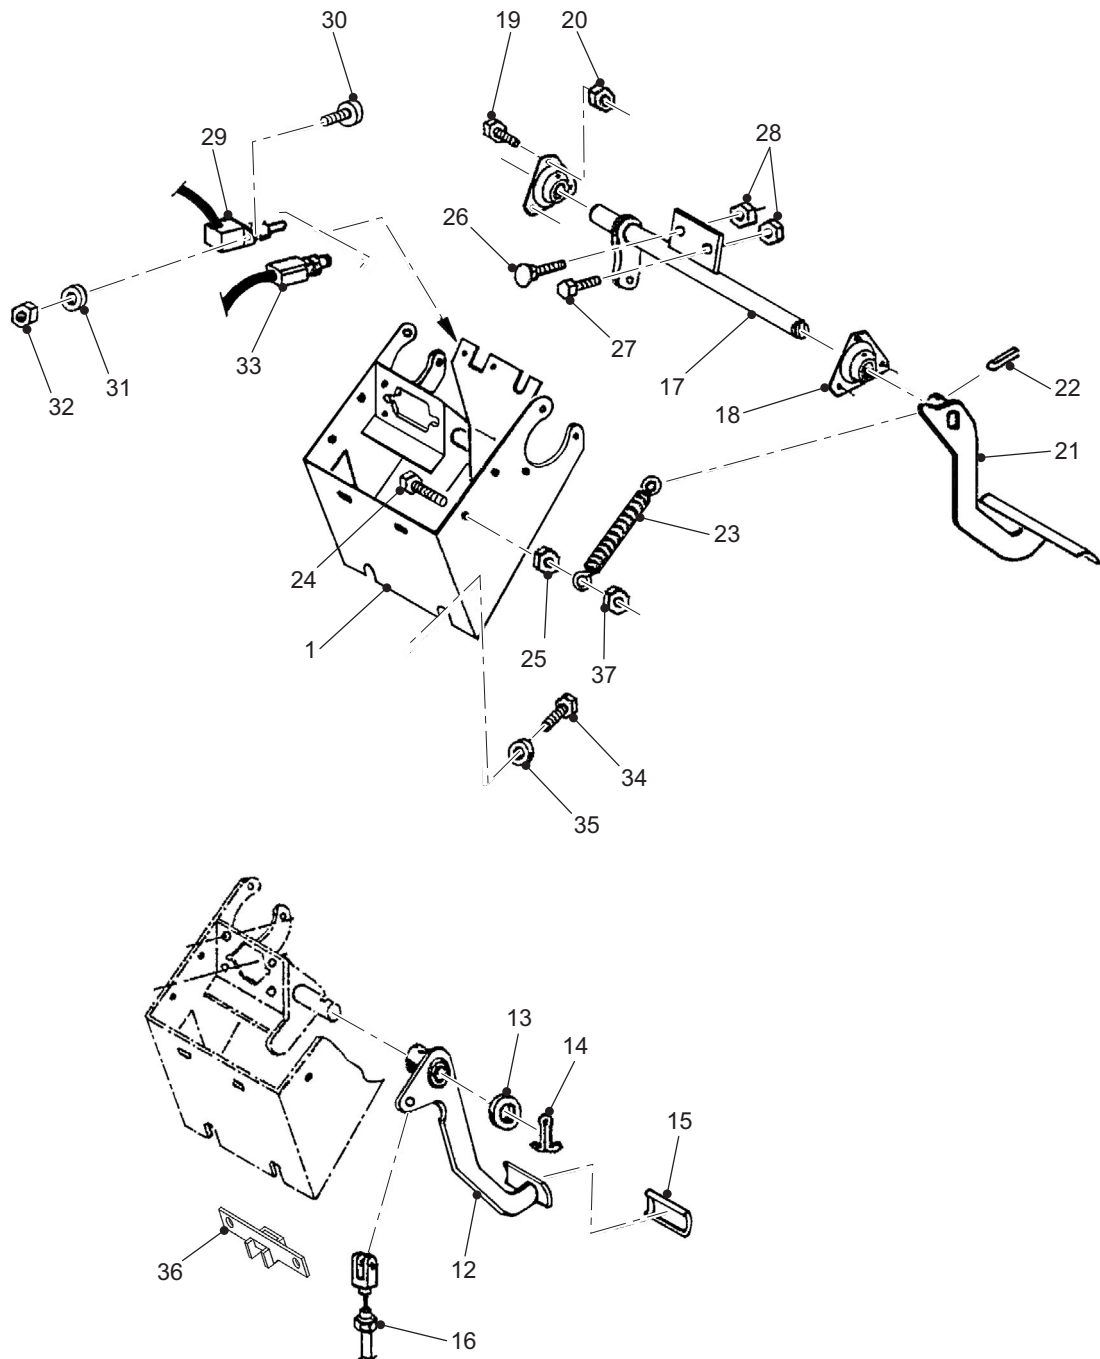

SPC001014

Pedals Installation


Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	96089.8	Support			1
	01596.6	Screw			4
	01697.2	Washer			4
12	6908480	Pedal			1
13	000350-08C	Washer			1
14	01754.1	Pin			1
15	59893.8	Brake pedal pad			1
16	98240.5	Throttle Cable			1
17	6908479	Pedal shaft			1
18	77919.9	Bracket			2
19	01605.5	Screw			6
20	100345-09A	Nut			6
21	6908478	Brake pedal			1
22	01736.8	Pin			1
23	01124.7	Spring			1
24	01608.9	Screw			1
25	01669.1	Nut			1
26	62185.4	Screw			1
27	01597.4	Screw			1
28	51851.4	Nut			2
29	6909383	Inching switch (detector)			1
30	01478.7	Screw			2
31	6910952	Washer			2
32	100345-05V	Nut			2
33	6909324	Service brake switch			1
34	01596.6	Screw			4
35	01697.2	Washer			4
36	6910649	Abutment			1
37	100345-09A	Nut			1



Steering Column Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	94018.9	Steering wheel cap			1
2	6908477	Steering wheel			1
3	6909993	Screw			2
4	98241.3	Reverser			1
5	98242.9	Drive/lighting control lever			1
6	6908476	Steering column			1
7	97502.9	Knob, steering column adjust			1
8	63359.4	Screw			4
9	51851.4	Nut			4
10	97210.9	Pin			2
11	51851.4	Nut			2
12	97503.7	Support			1
13	6909935	Seal			1
14	01697.2	Washer			2
15	01596.6	Screw			2
16	01596.6	Screw			4
17	01697.2	Washer			4
18	6909977	Plate			1
19	01596.6	Screw			4
20	01697.2	Washer			4
21	01697.2	Washer			4
22	97501.1	Handle, steering column adjustment			1
23	01597.4	Screw			2
24	01697.2	Washer			2
25	6910649	Abutment			1
26	6909993	Screw			2

Cowling Installation

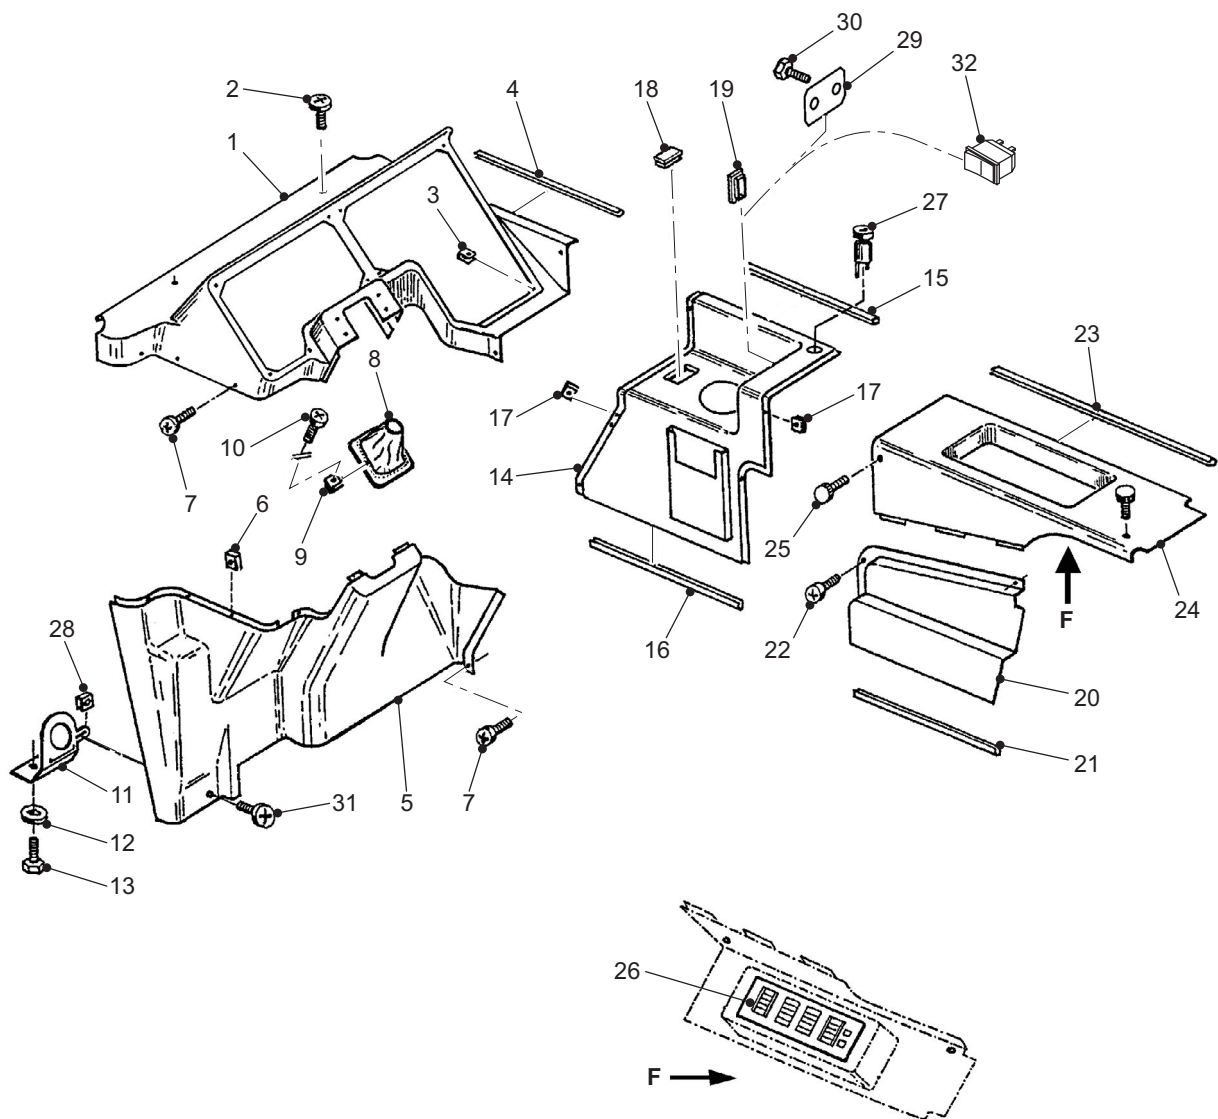

SPC001016

Cowling Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6910882	Dash cowling			1
2	79864.5	Screw			3
3	6909903	Clip			10
4	6909930	Seal			1
5	6910883	Steering column cowling			1
6	6909903	Clip			9
7	6910505	Screw			9
8	6909973	Bellow steering column			1
9	6909903	Clip			2
10	6909995	Screw			2
11	6914561	Lower support	Was 6909974		1
12	05698.6	Washer			2
13	01590.9	Screw			2
14	6912458	Joystick cowling			1
15	6909931	Seal			1
16	6909933	Seal			1
17	6909903	Clip			5
18	6909904	Cover			1
19	65784.1	Blank Plug			1
20	6910881	Fuse panel side cowling			1
21	6909932	Seal			1
22	6910505	Screw			2
23	6909934	Seal			1
24	6910879	Fuse panel top cowling			1
25	6909910	Button			2
26	6912457	Adhesive			1
27	97096.2	Cigarette Lighter			1
28	6914086	Nut			1
29	6910313	Plate			1
30	6910951	Screw			2
31	100331-01U	Screw			1



Control Panel Switches

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	96080.7	L.H. control panel plate			1
2	6914170	R.H. control panel plate	Was 6910511		1
3	6910505	Screw			10
4	6909356	Instrument panel			1
5	80220.7	Bezel	Pos. 6 + 7		2
6	96591.3	Switch, beacon light			1
7	96590.5	Warning Switch			1
8	96608.5	Fan Speed Switch			1
9	96609.3	Heating Control Valve			1
10	80220.7	Bezel	Pos. 12 + 15 + 16 + 19 + 20 + 22 + 25 + 28		10
11	80221.5	Bezel	Pos. 13 + 14 + 17 + 18 + 19 + 21 + 23 + 24 + 26 + 27 + 28		10
12	96595.4	Trailer turn indicator			1
13	96594.7	Steering mode indicator			1
14	96593.9	Steering mode switch			1
15	96592.1	Lever Switch			1
16	96600.2	Switch, head lamp			1
17	96601.0	Working light switch			1
18	96597.0	Fog light switch			1
19	65784.1	Blank Plug			5
20	96602.8	Switch, rear wiper/washer			1
21	96603.6	Switch, roof wiper	Option		1
22	97519.3	Switch, transmission mode			1
23	6911728	Locking switch	Was 96606.9		1
24	6910895	Switch, aux. hydr.			1
25	6910560	Left stabilizer switch			1
26	6910558	Locking stabilizer switch			1
27	6910561	Right stabilizer switch			1
28	55438.6	Ignition Switch	Pos. 28 + 29		1
29	57189.3	Set of keys (ignition)			1
30	97885.8	Knob block	Pos. 30 + 31		1
	97886.6	Knob head			1

This exploded view diagram illustrates the assembly of a vehicle dashboard instrument cluster. The components are numbered as follows:

- 1:** Main instrument cluster housing with gauges and indicator lights.
- 2:** Upper bezel or trim piece.
- 3:** Mounting screw for the main cluster.
- 4:** Gauge face with needles and scales.
- 5:** Individual indicator light lens.
- 6:** Switch assembly with a lever.
- 7:** Mounting bracket for the switch.
- 8:** Mounting screw for the switch.
- 9:** Mounting screw for the main cluster.
- 10:** Row of five rectangular indicator light lenses.
- 11:** Mounting bracket for the row of indicator lenses.
- 12:** Upper section of a multi-switch assembly.
- 13:** Individual switch within the multi-switch assembly.
- 14:** Mounting bracket for the multi-switch assembly.
- 15:** Mounting screw for the multi-switch assembly.
- 16:** Mounting bracket for the upper bezel.
- 17:** Mounting screw for the upper bezel.
- 18:** Middle section of a multi-switch assembly.
- 19:** Individual switch within the middle multi-switch assembly.
- 20:** Lock cylinder for the multi-switch assembly.
- 21:** Lower section of a multi-switch assembly.
- 22:** Mounting bracket for the lower multi-switch assembly.
- 23:** Mounting screw for the lower multi-switch assembly.
- 24:** Mounting bracket for the multi-switch assembly.
- 25:** Individual switch within the lower multi-switch assembly.
- 26:** Mounting bracket for the multi-switch assembly.
- 27:** Mounting screw for the multi-switch assembly.
- 28:** Lock cylinder for the multi-switch assembly.
- 29:** Key for the lock cylinders.
- 30:** Lock cylinder for the multi-switch assembly.
- 31:** Key for the lock cylinders.
- 32:** Mounting screw for the upper bezel.
- 33:** Mounting screw for the upper bezel.
- 34:** Mounting screw for the upper bezel.
- 35:** Mounting screw for the upper bezel.
- 36:** Mounting screw for the main cluster.
- 37:** Mounting screw for the main cluster.
- 38:** Mounting screw for the main cluster.
- 39:** Mounting screw for the upper bezel.


T40140 - T40170 Telescopic Handlers

MAIN FRAME

Control Panel Switches

[illegible]

Door Assy

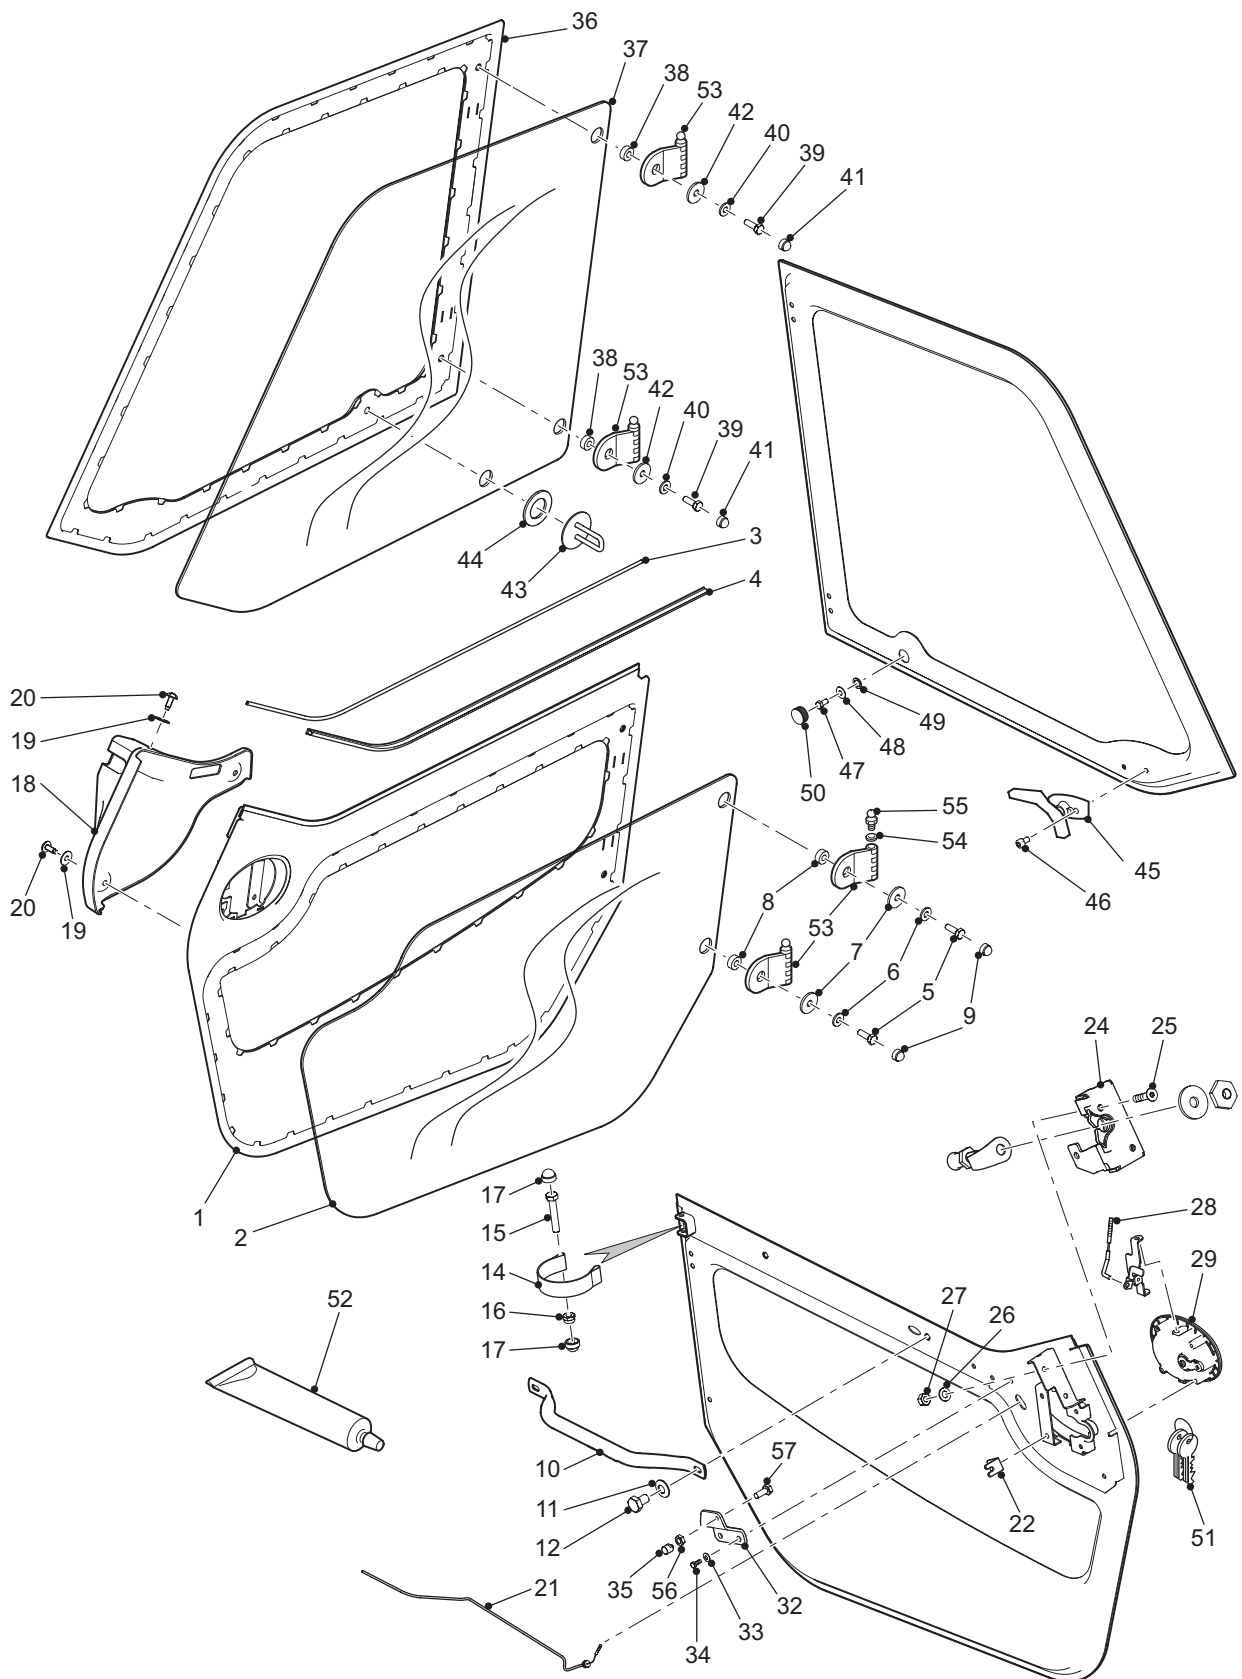


SPC001018

Door Assy

Item	Part Number	Denomination	Remarks	Serial Number	Qty
	6910733	Upper door assy	Pos. 36 to 50 ; Was 6909925		1
	6910736	Lower door assy	Pos. 1 to 4 + 8 to 35 + 51+52 ; Was 6909923		1
	6910738	Lower door and glass	Pos. 1 + 2		1
1	6910737	Lower door	Was 6910510		1
2	6908791	Glass, lower part door			1
3	6911000	Seal			1
4	6911001	Seal			1
5	01606.3	Screw			2
6	6910991	Washer			2
7	6910990	Washer			2
8	6910989	Spacer			2
9	63334.7	Nut cap			2
10	6910543	Handle			1
11	01719.4	Washer			2
12	01603.0	Screw			2
13	63334.7	Nut cap			2
14	97360.2	Door Strap			1
15	01579.2	Screw			2
16	51851.4	Nut			2
17	63333.9	Nut cap			4
18	6910994	Lock cover			1
19	29272.2	Washer			3
20	6910996	Screw			3
21	6910544	Cable			1
22	6914942	Cable stop			1
23	63334.7	Nut cap			2
24	6910546	Lock			1
25	6910997	Screw			2
26	01697.2	Washer			2
27	01668.3	Nut			2
28	6910545	Cable			1

Door Assy

Recurrence of previous drawing

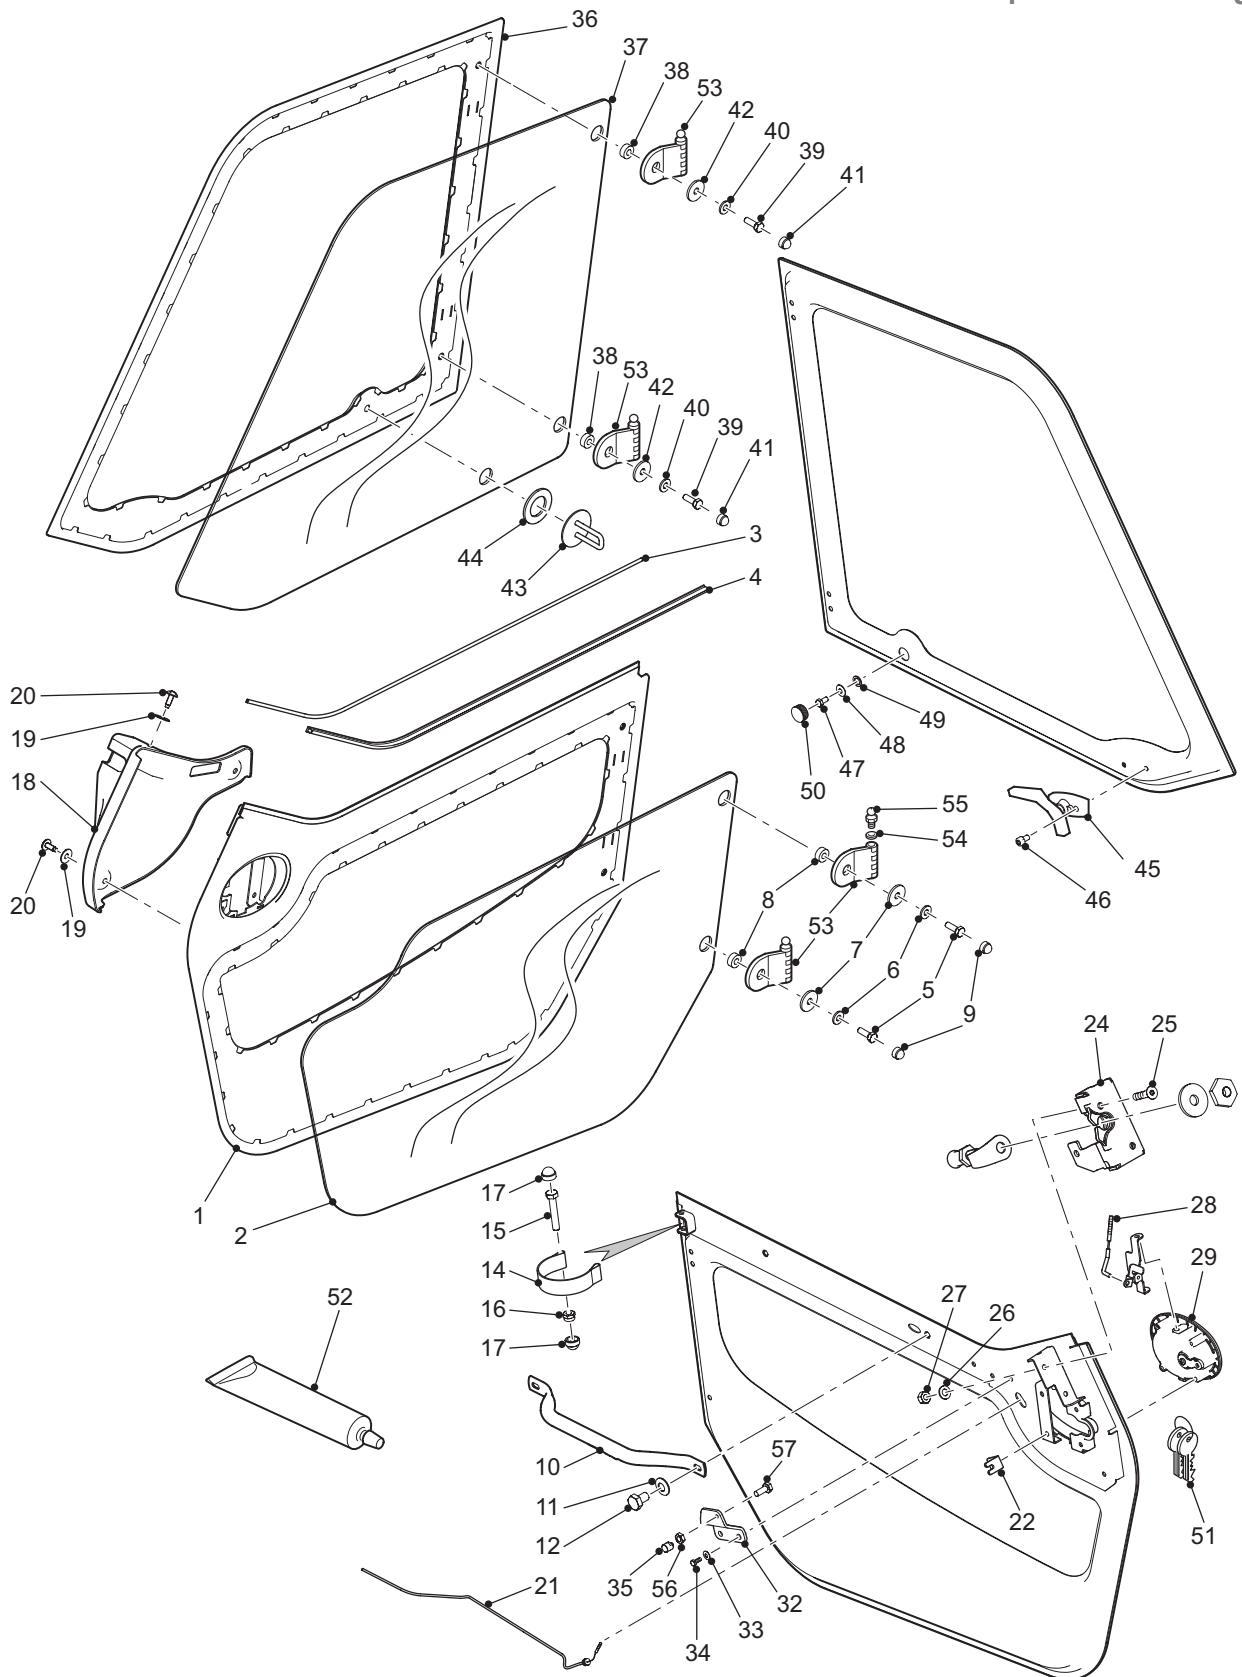


SPC001018

Door Assy

Item	Part Number	Denomination	Remarks	Serial Number	Qty
29	6910540	Handle with key			1
30	01696.4	Washer			4
31	01575.0	Screw			4
32	6910993	Hook			1
33	01717.8	Washer			2
34	01590.9	Screw			2
35	6910992	Nut cap			1
	6910735	Upper door and glass	Pos. 36 + 37		1
36	6910734	Upper door	Was 6910509		1
37	6908792	Glass, upper part door			1
38	6910989	Spacer			2
39	01606.3	Screw			2
40	6910991	Washer			2
41	63334.7	Nut cap			2
42	6910990	Washer			2
43	6910547	Hook			1
44	6910984	Spacer			1
45	6910539	Handle			1
46	32397.2	Screw			2
47	01595.8	Screw			1
48	01718.6	Washer			1
49	6910988	Washer			1
50	79297.8	Cap			1
51	57189.3	Set of keys (ignition)			1
52	64509.3	Glue			1
53	6910554	Hinge assy			4
54		Washer			4
55		Grease nipple			4

Rear Window Installation

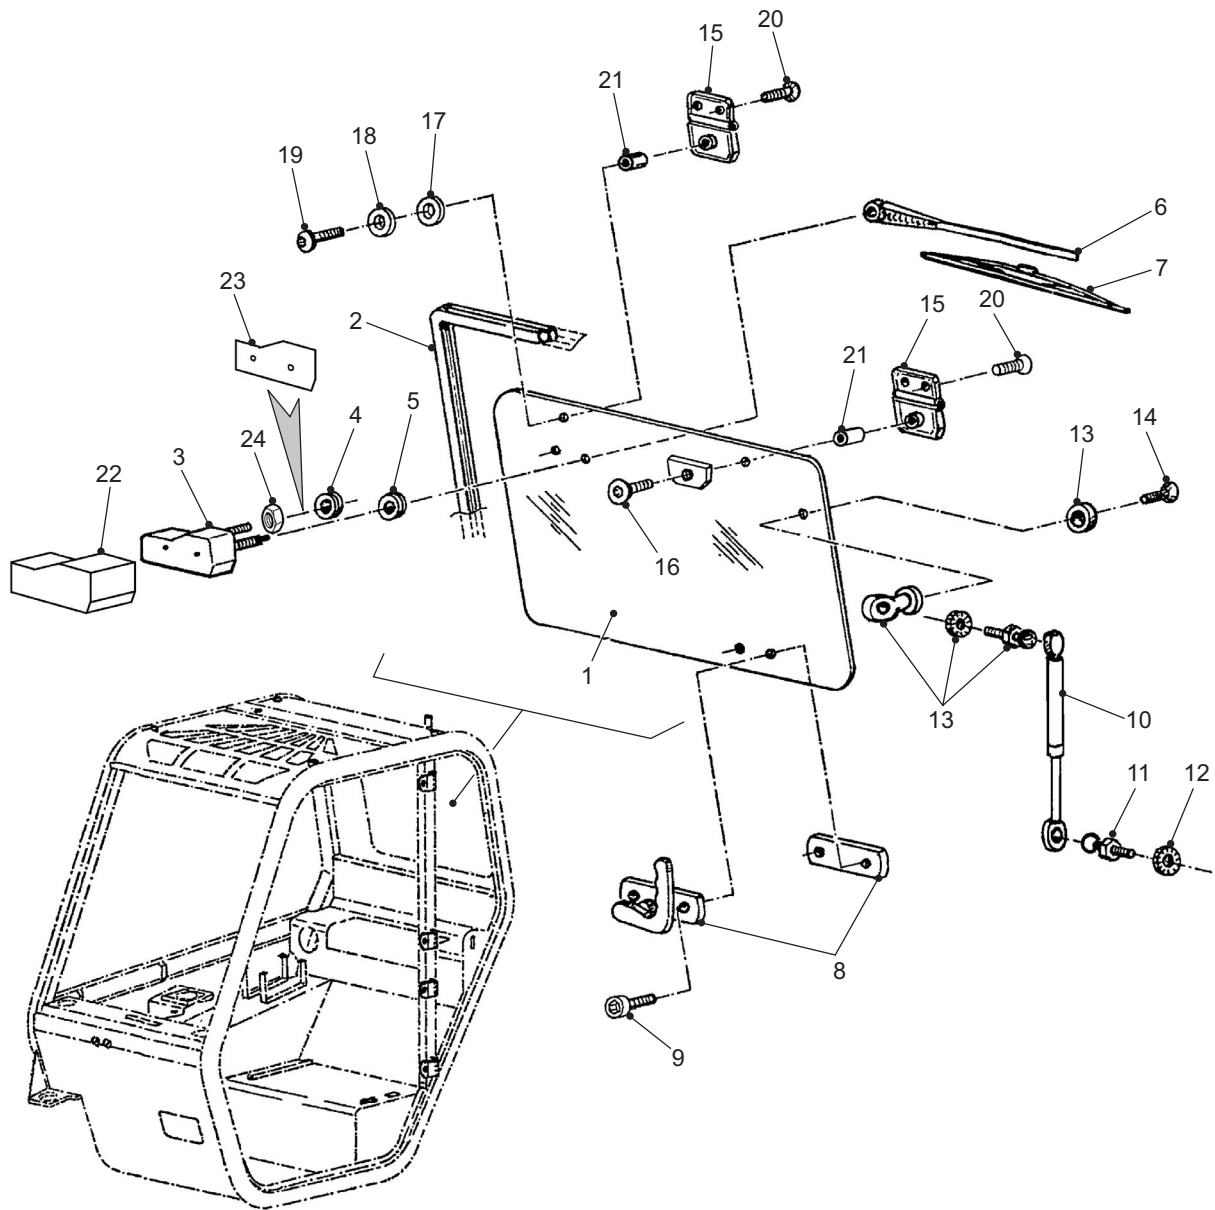

SPC001019

Rear Window Installation

[illegible]




Wiper Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	97196.0	Windshield spray reservoir			1
2	6909903	Clip			2
3	6910505	Screw			2
4	01717.8	Washer			2
5	6910981	Washer pipe			1
6	75926.6	Adapter			3
7	75898.7	Windshield wiper arm			1
8	75895.3	Front Wiper Blade			1
9	75920.9	Windshield Wiper Motor			1
10	97212.5	Hose			1
11	63848.6	T- union			1
12	6910982	Washer pipe			2
13	6910983	Washer pipe			1
14	97217.4	Jet			1
15	63856.9	Roof wiper motor	Option		1
16	75896.1	Roof wiper blade	Option ; Was 6911713		1
17	6911006	Roof wiper arm	Option ; Was 6911712		1
18	63332.1	Cap			2
19	01596.6	Screw	Without roof windscreen wiper		3
20	6910976	Washer	Without roof windscreen wiper		2
21	6909964	Washer	Without roof windscreen wiper		2
22	000350-20Q	Washer	Without roof windscreen wiper		2
23	6909963	Washer	Without roof windscreen wiper		2
24	01668.3	Nut	Without roof windscreen wiper		3
25	63333.9	Nut cap	Without roof windscreen wiper		6

Parking Brake Lever

for S/N T40140: 3632 11172/ and S/N T40170: 3633 11270/

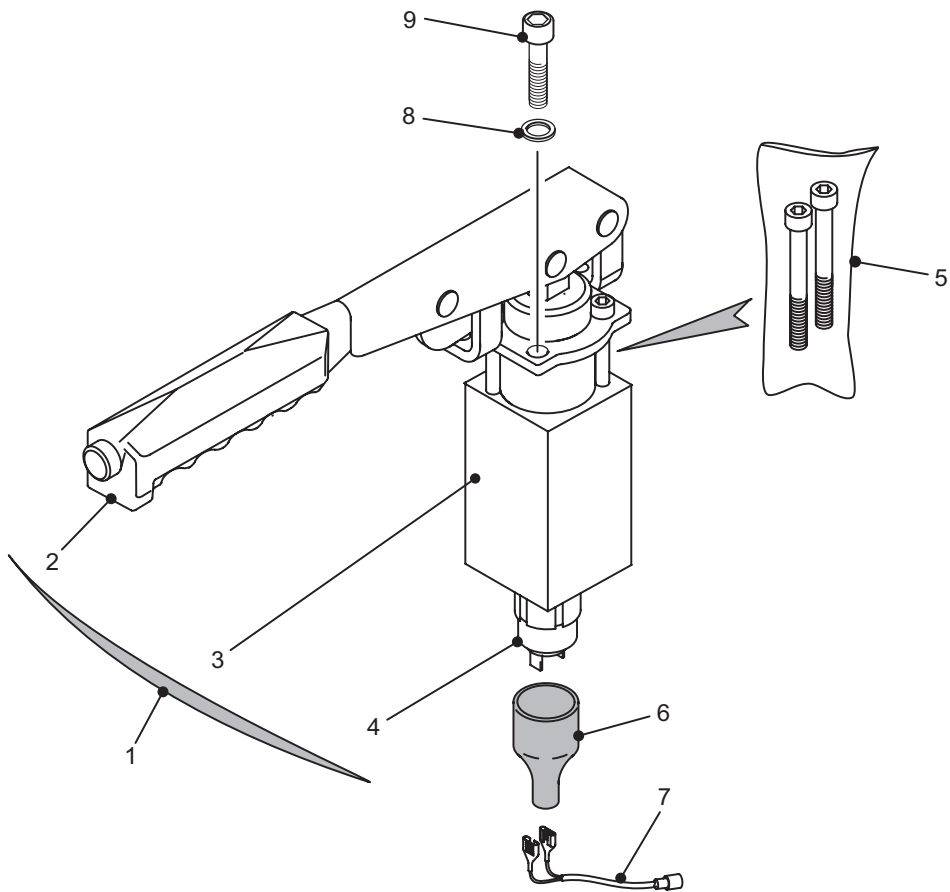

SPC001021


Parking Brake Lever

for S/N T40140: 3632 11172/ and S/N T40170: 3633 11270/

[illegible]

Parking Brake Lever

for S/N T40140: /3632 11173 and S/N T40170: /3633 11271

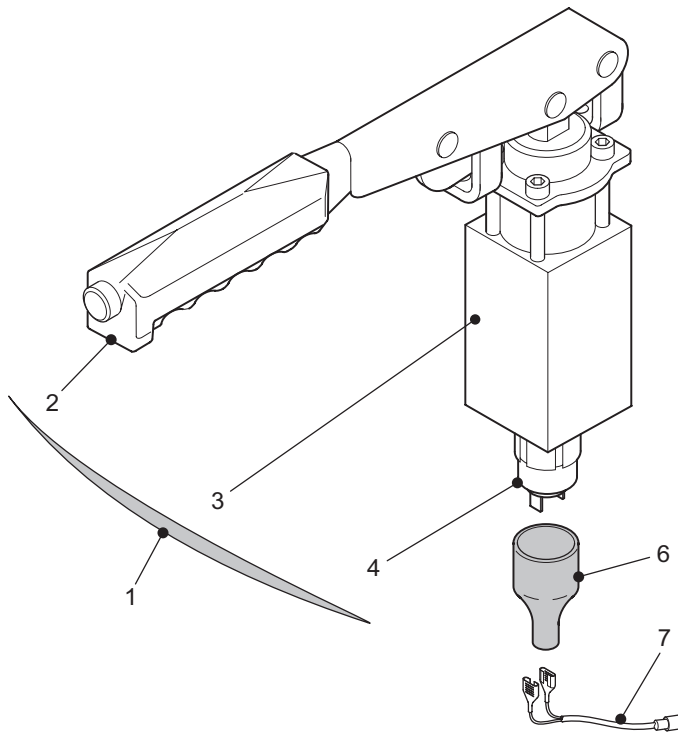


SPC001022

Parking Brake Lever

for S/N T40140: /3632 11173 and S/N T40170: /3633 11271

[illegible]

Fixed Boom Assy - T40140

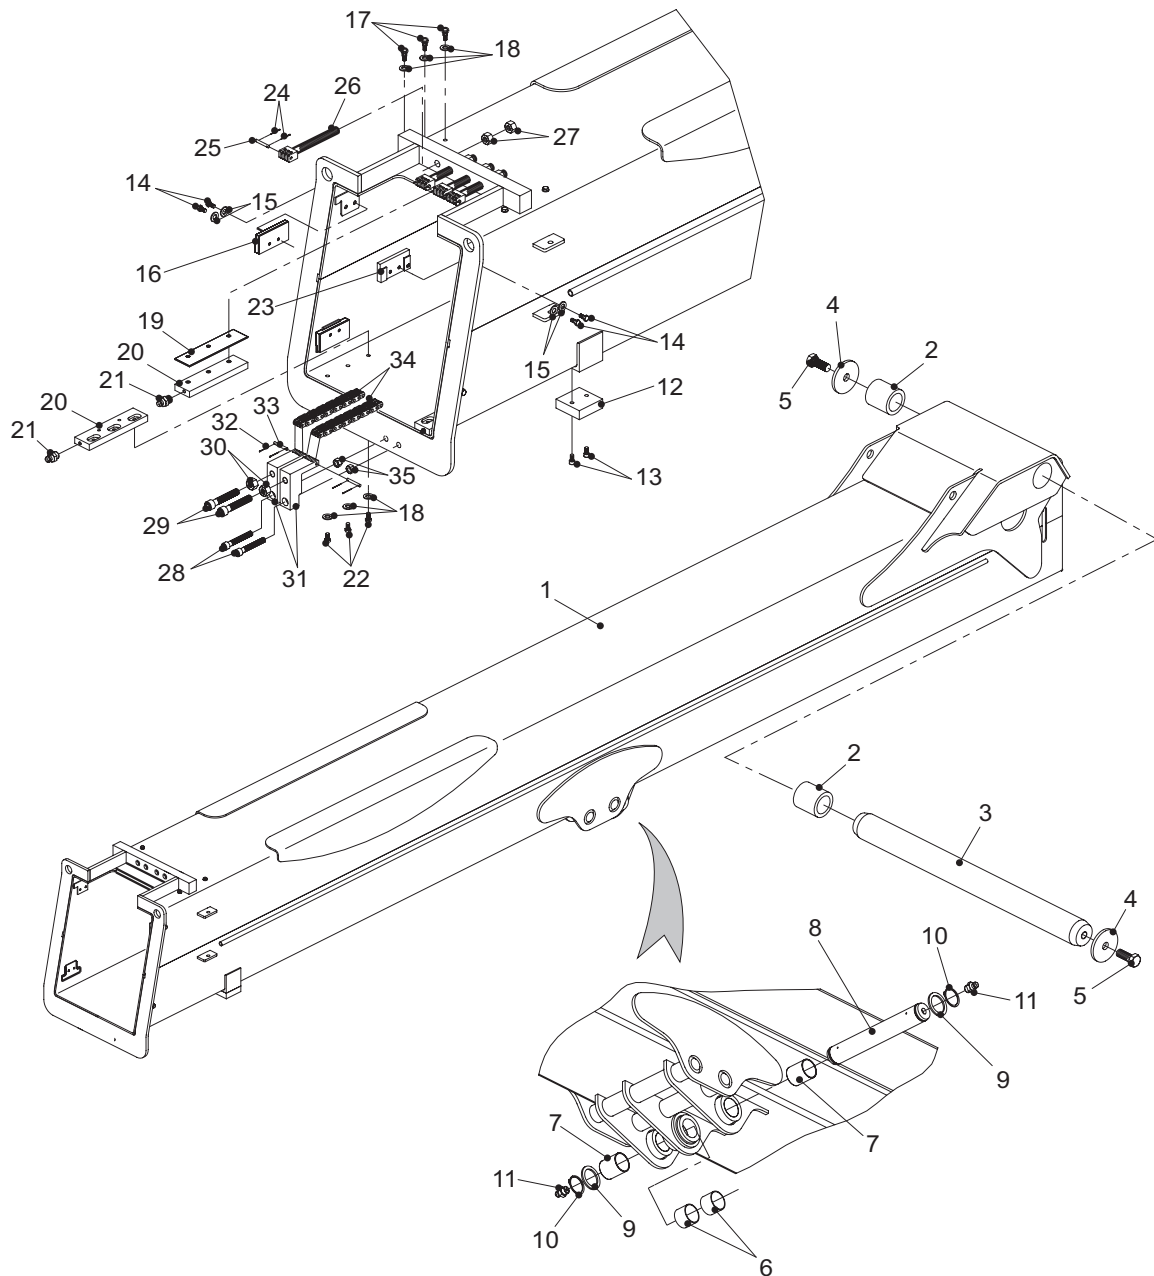

SPC001023

Fixed Boom Assy - T40140

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	95459.4	Arm	Pos. 1 + 2 + 6 + 7		1
2	77380.4	Boom Pivot Bushing			2
3	95091.5	Spindle			1
4	77430.7	Washer			1
5	44001.6	Screw			2
6	77261.6	Bush			2
7	90281.7	Bush			2
8	95470.1	Spindle			1
9	70287.8	Washer			2
10	70288.6	Clip			2
11	01775.6	Grease Nipple			2
12	6908546	Shoe			2
13	29649.1	Screw			4
14	01595.8	Screw			8
15	01697.2	Washer			8
16	98340.3	Shoe	Thickness 15 mm		2
	98341.1	Shoe	Thickness 14 mm		2
	98342.9	Shoe	Thickness 13 mm		2
	98343.7	Shoe	Thickness 12 mm		2
	98344.5	Shoe	Thickness 11 mm		2
17	01596.6	Screw			6
18	01697.2	Washer			12
19	98300.7	Shim	Thickness 1 mm		2
	98301.5	Shim	Thickness 2 mm		2
	98302.3	Shim	Thickness 3 mm		2
20	95501.3	Shoe			4
21	01775.6	Grease Nipple			4
22	01595.8	Screw			6
23	98342.9	Shoe	Thickness 13 mm		2
24	38632.6	Pin			8
25	95613.6	Spindle			4

This technical drawing is an exploded view of a mechanical assembly, likely a door handle or latch mechanism. The main components are shown in their relative positions, with dashed lines indicating their assembly paths. The parts are numbered as follows:


- 1**: The main body or housing of the assembly.
- 2**: A small cylindrical pin or bush.
- 3**: A long, thin cylindrical rod or shaft.
- 4**: A small circular disc or washer.
- 5**: A small screw or bolt.
- 6**: A small circular disc or washer.
- 7**: A small cylindrical pin or bush.
- 8**: A small cylindrical pin or bush.
- 9**: A small cylindrical pin or bush.
- 10**: A small cylindrical pin or bush.
- 11**: A small screw or bolt.
- 12**: A small rectangular plate or bracket.
- 13**: A small screw or bolt.
- 14**: A small rectangular plate or bracket.
- 15**: A small rectangular plate or bracket.
- 16**: A small rectangular plate or bracket.
- 17**: A small screw or bolt.
- 18**: A small screw or bolt.
- 19**: A small rectangular plate or bracket.
- 20**: A small rectangular plate or bracket.
- 21**: A small screw or bolt.
- 22**: A small screw or bolt.
- 23**: A small rectangular plate or bracket.
- 24**: A small rectangular plate or bracket.
- 25**: A small screw or bolt.
- 26**: A small rectangular plate or bracket.
- 27**: A small screw or bolt.
- 28**: A small screw or bolt.
- 29**: A small screw or bolt.
- 30**: A small screw or bolt.
- 31**: A small screw or bolt.
- 32**: A small screw or bolt.
- 33**: A small screw or bolt.
- 34**: A small rectangular plate or bracket.
- 35**: A small screw or bolt.

T40140 - T40170 Telescopic Handlers MAIN FRAME

Fixed Boom Assy - T40140

[illegible]

Intermediate Boom Assy - T40140

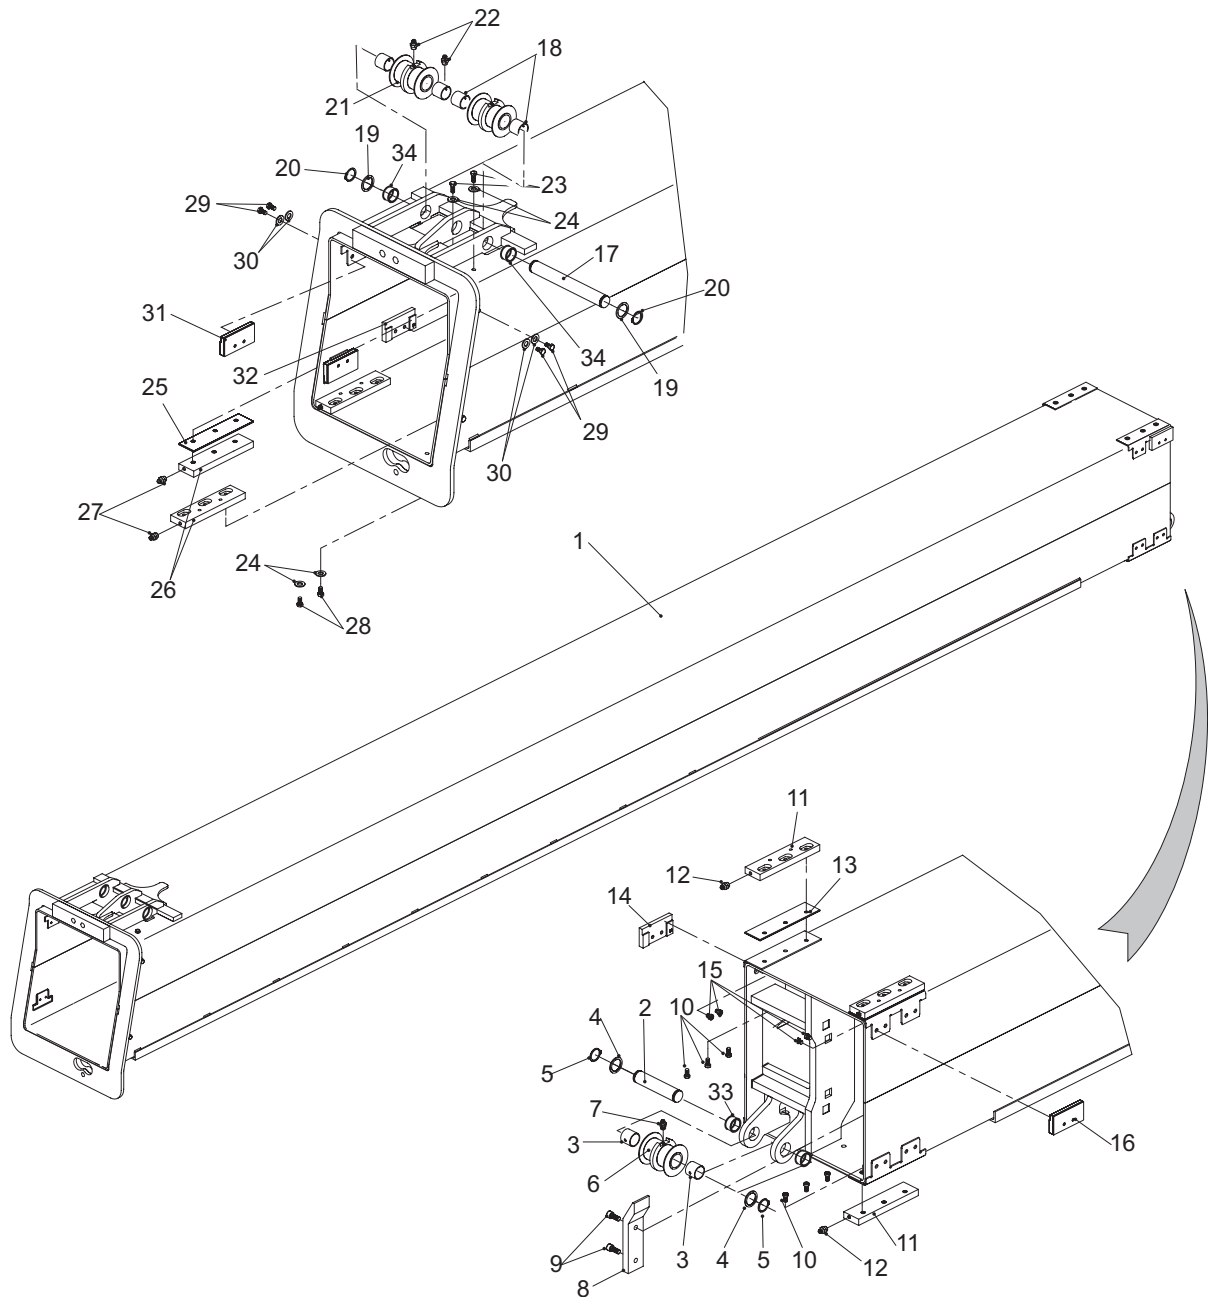


SPC001024

Intermediate Boom Assy - T40140

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	95484.2	Intermediate arm			1
2	95570.8	Spindle			1
3	84078.5	Bush			2
4	95577.3	Washer			2
5	26747.6	Clip			2
6	6913719	Pulley	Pos. 3 + 6 ; Was 95538.5		1
7	01775.6	Grease Nipple			1
8	97870.0	Shoe			1
9	01639.4	Screw			2
10	95502.1	Screw			12
11	95501.3	Shoe			4
12	01775.6	Grease Nipple			4
13	98300.7	Shim	Thickness 1 mm		2
	98301.5	Shim	Thickness 2 mm		2
	98302.3	Shim	Thickness 3 mm		2
14	98342.9	Shoe			1
15	98303.1	Screw			4
16	98344.5	Shoe	Thickness 11 mm		1
	98343.7	Shoe	Thickness 12 mm		1
	98342.9	Shoe	Thickness 13 mm		1
	98341.1	Shoe	Thickness 14 mm		1
	98340.3	Shoe	Thickness 15 mm		1
17	95569.0	Spindle			1
18	84078.5	Bush			4
19	95577.3	Washer			2
20	26747.6	Clip			2
21	6913719	Pulley	Pos. 18 + 21 ; Was 95538.5		2
22	01775.6	Grease Nipple			2
23	01596.6	Screw			2
24	01697.2	Washer			4
25	98300.7	Shim	Thickness 1 mm		2

Intermediate Boom Assy - T40140

Recurrence of previous drawing

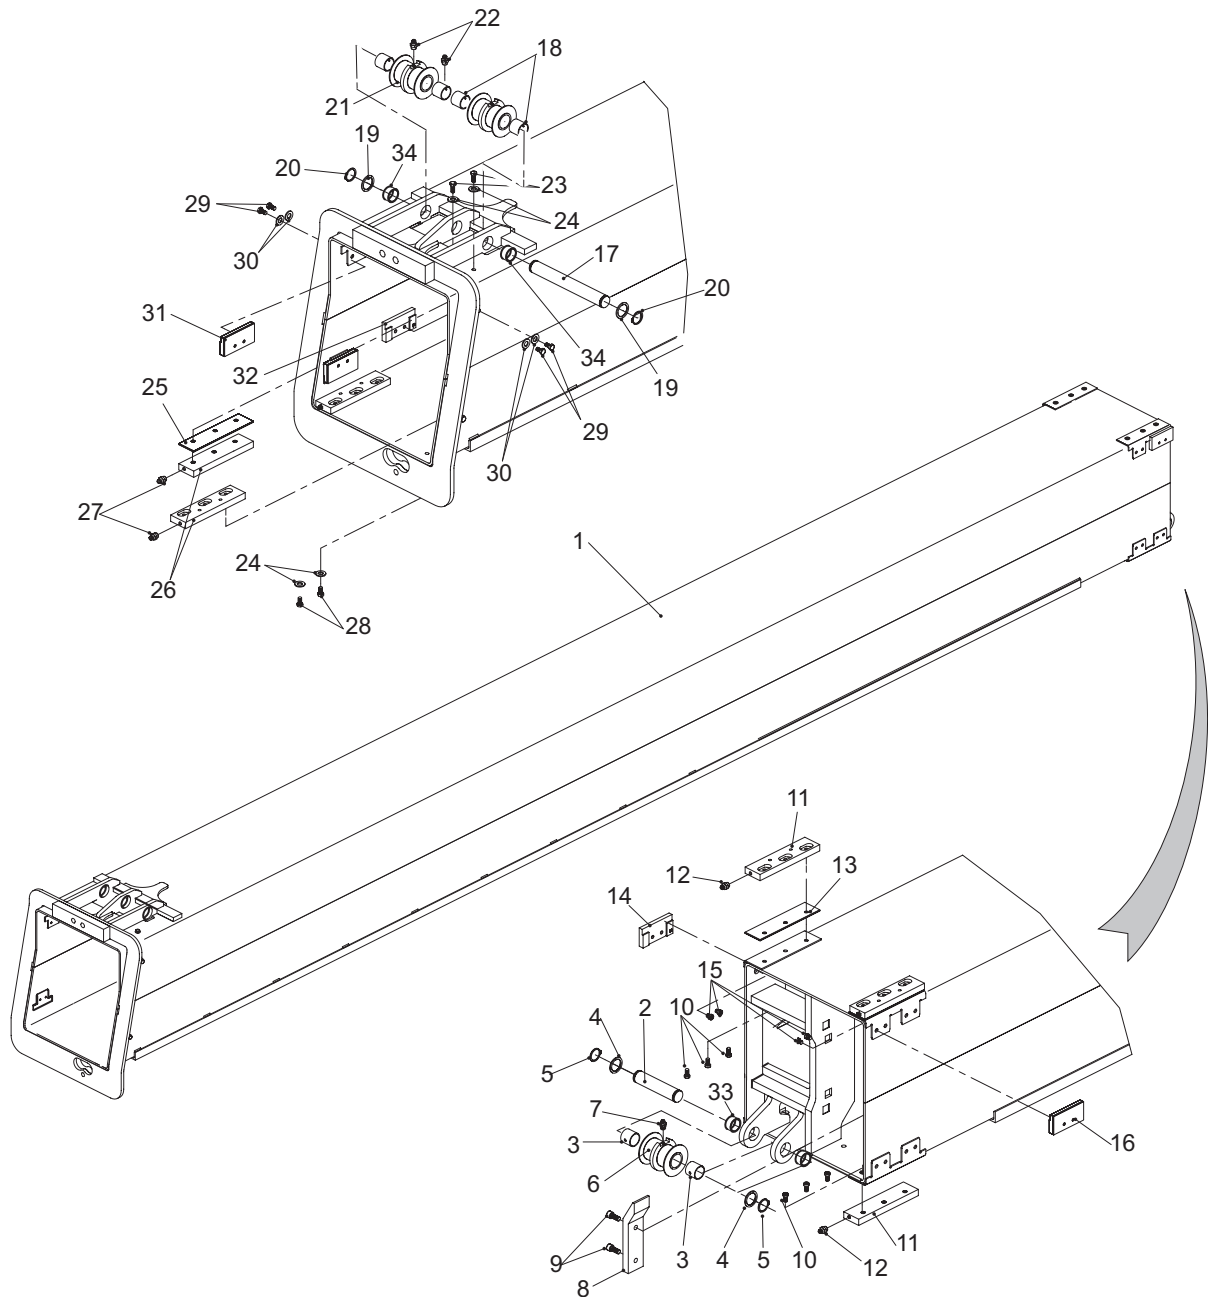


SPC001024

Intermediate Boom Assy - T40140

[illegible]

End Boom Assy - T40140

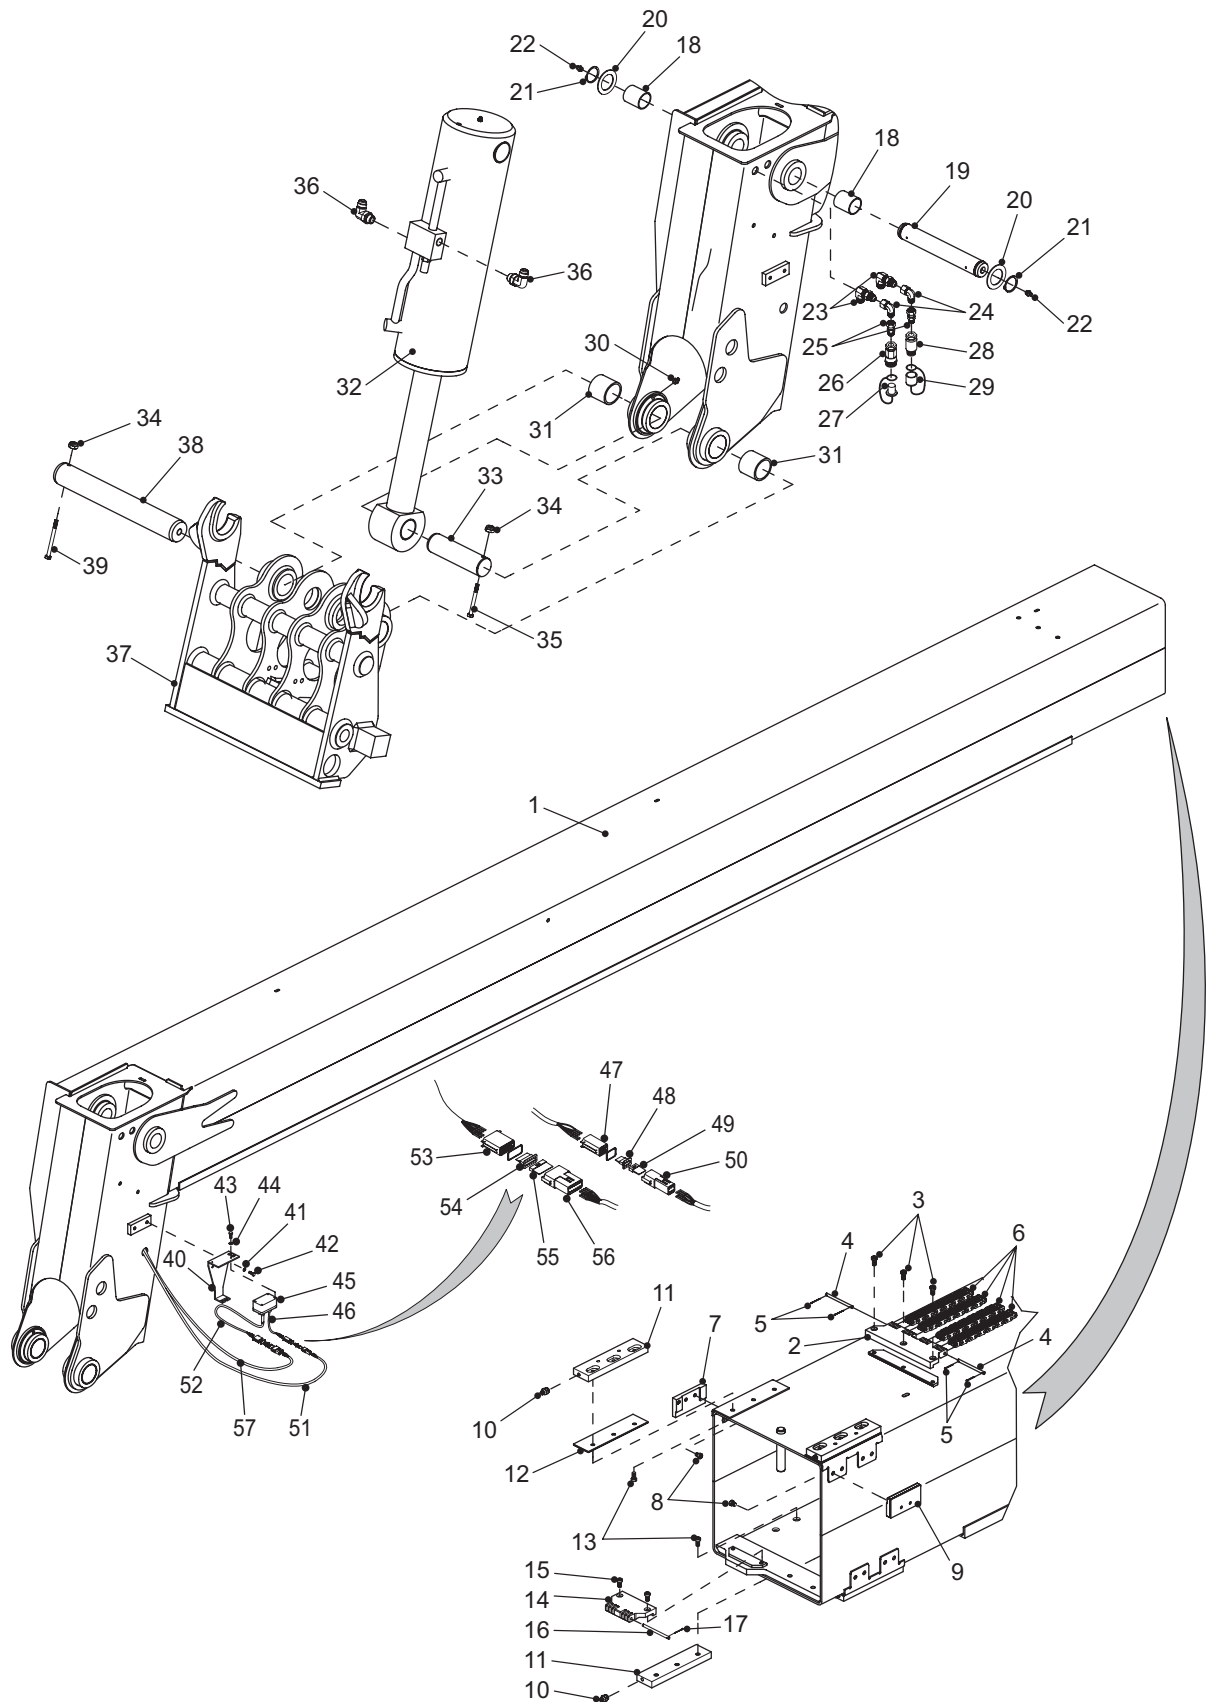


SPC001025

End Boom Assy - T40140

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	95028.7	Telescopic arm	Pos. 1 + 18 + 31		1
2	95615.1	Fixing plate			1
3	95502.1	Screw			3
4	95614.4	Spindle			2
5	38632.6	Pin			4
6	95532.8	Chain			4
7	98342.9	Shoe			1
8	98303.1	Screw			4
9	98344.5	Shoe	Thickness 11 mm		1
	98343.7	Shoe	Thickness 12 mm		1
	98342.9	Shoe	Thickness 13 mm		1
	98341.1	Shoe	Thickness 14 mm		1
	98340.3	Shoe	Thickness 15 mm		1
10	01775.6	Grease Nipple			4
11	95501.3	Shoe			4
12	98300.7	Shim	Thickness 1 mm		2
	98301.5	Shim	Thickness 2 mm		2
	98302.3	Shim	Thickness 3 mm		2
13	95502.1	Screw			12
14	95558.3	Retaining			1
15	95502.1	Screw			2
16	95614.4	Spindle			1
17	38632.6	Pin			2
18	74863.2	Bush			2
19	95533.6	Spindle			1
20	009456-02D	Washer			2
21	31825.3	Clip			2
22	01775.6	Grease Nipple			2
23	010370-57L	Elbow			2
24	010370-90W	Elbow			2
25	022375-06W	Adapter			2

End Boom Assy - T40140

Recurrence of previous drawing

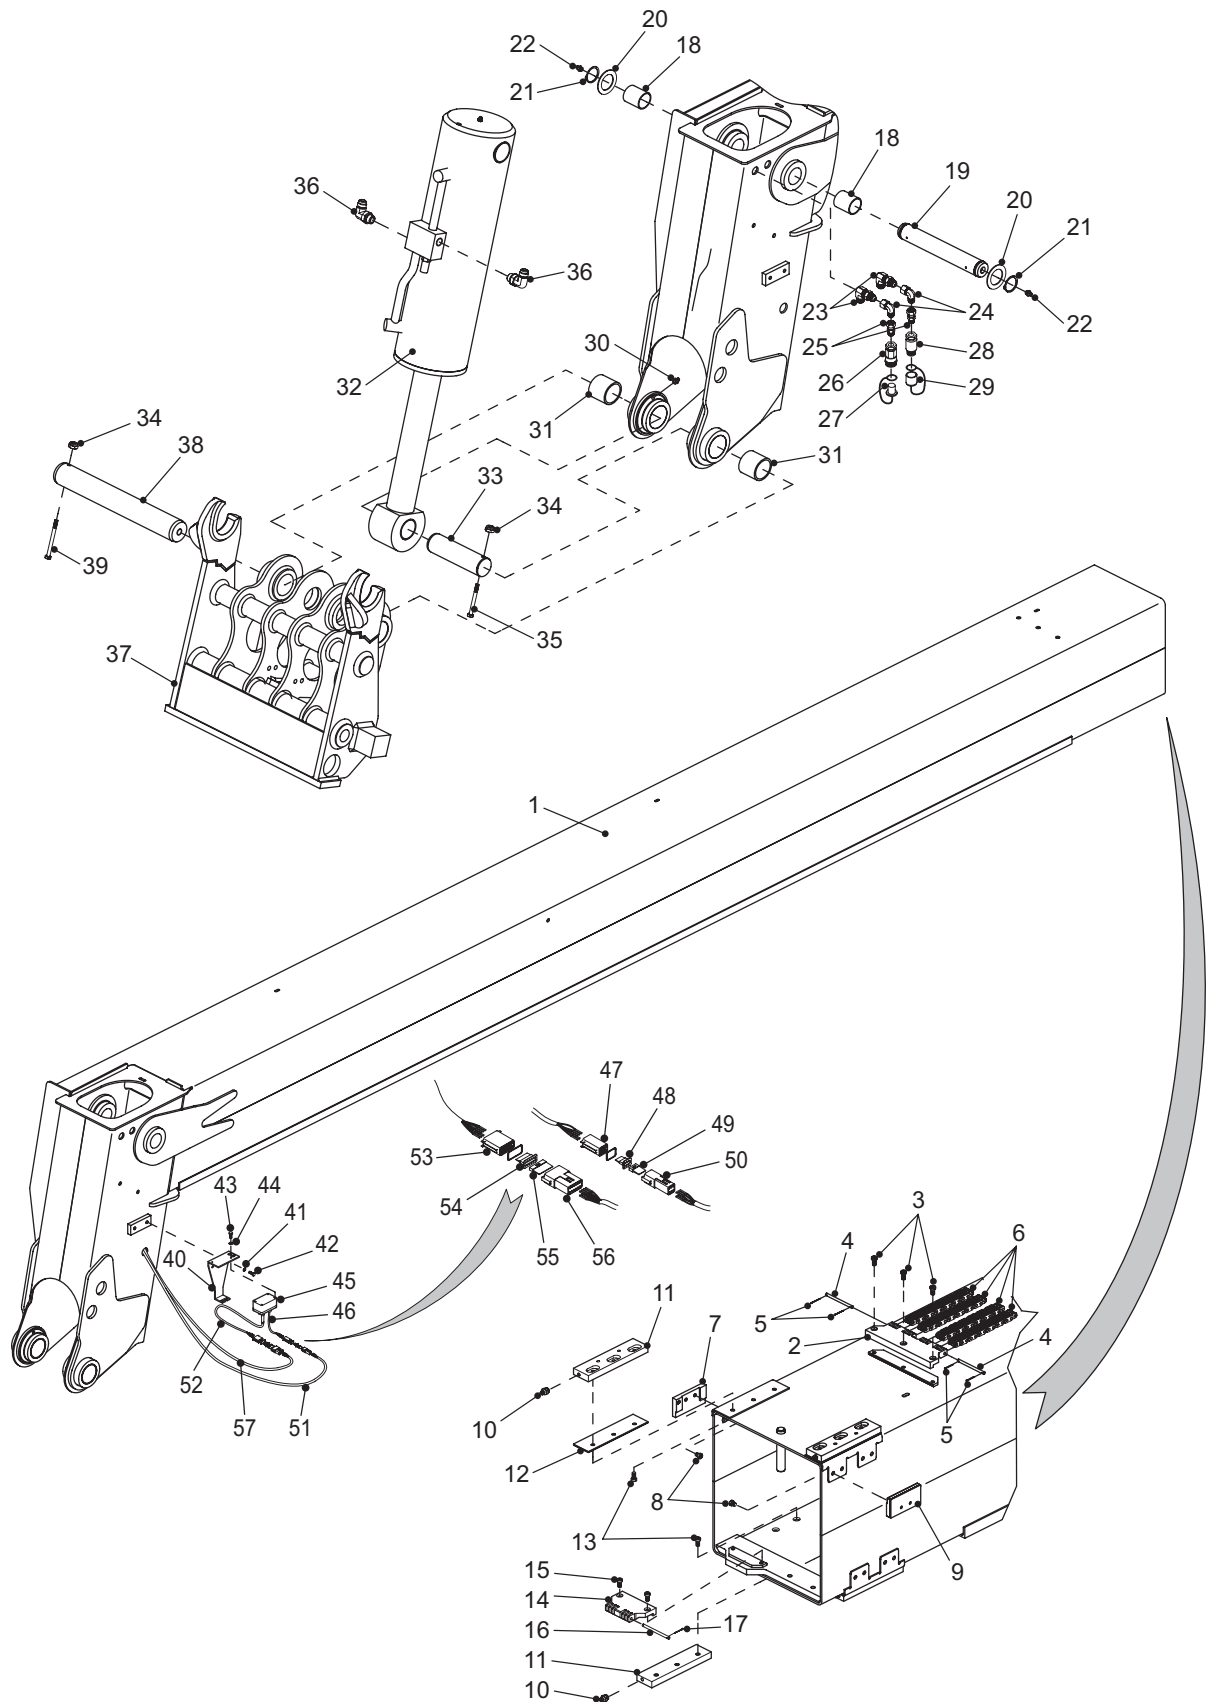


SPC001025

End Boom Assy - T40140

Item	Part Number	Denomination	Remarks	Serial Number	Qty
26	95993.2	Female Coupling			1
27	96514.5	Cap			1
28	95994.0	Male coupling			1
29	96513.7	Cap			1
30	01775.6	Grease Nipple			2
31	77380.4	Boom Pivot Bushing			2
32	NAP	Cylinder assy	Order now 6914552 ; Was 97814.8 ; For details, see page 171		1
	6914552	Cylinder assy	See page 173 for details.		1
33	80400.5	Carriage Pin			1
34	100345-09A	Nut			2
35	65397.2	Screw			1
36	65285.9	Elbow			2
37	NAP	Carriage	Order now 6911242 ; Was 94096.5	3632 11081/	1
	6911242	Carriage		/ 3632 11082	1
38	77421.6	Pin			1
39	82459.9	Screw			1
40	6908244	Support			1
41	01698.0	Washer			2
42	01603.0	Screw			2
43	01590.9	Screw			2
44	01696.4	Washer			2
45	6908258	Box			1
46	6908281	Cable	5 wire		1
47	79551.8	Connector	6 poles		1
48	79552.6	Block			1
49	79550.0	Block			1
50	79549.2	Female connector	6 poles		1
51	6908287	Cable	5 wire		1
52	6908280	Cable	5 wire		1
53	79555.9	Male connector	12 poles		1
54	79556.7	Block			1

End Boom Assy - T40140

Recurrence of previous drawing

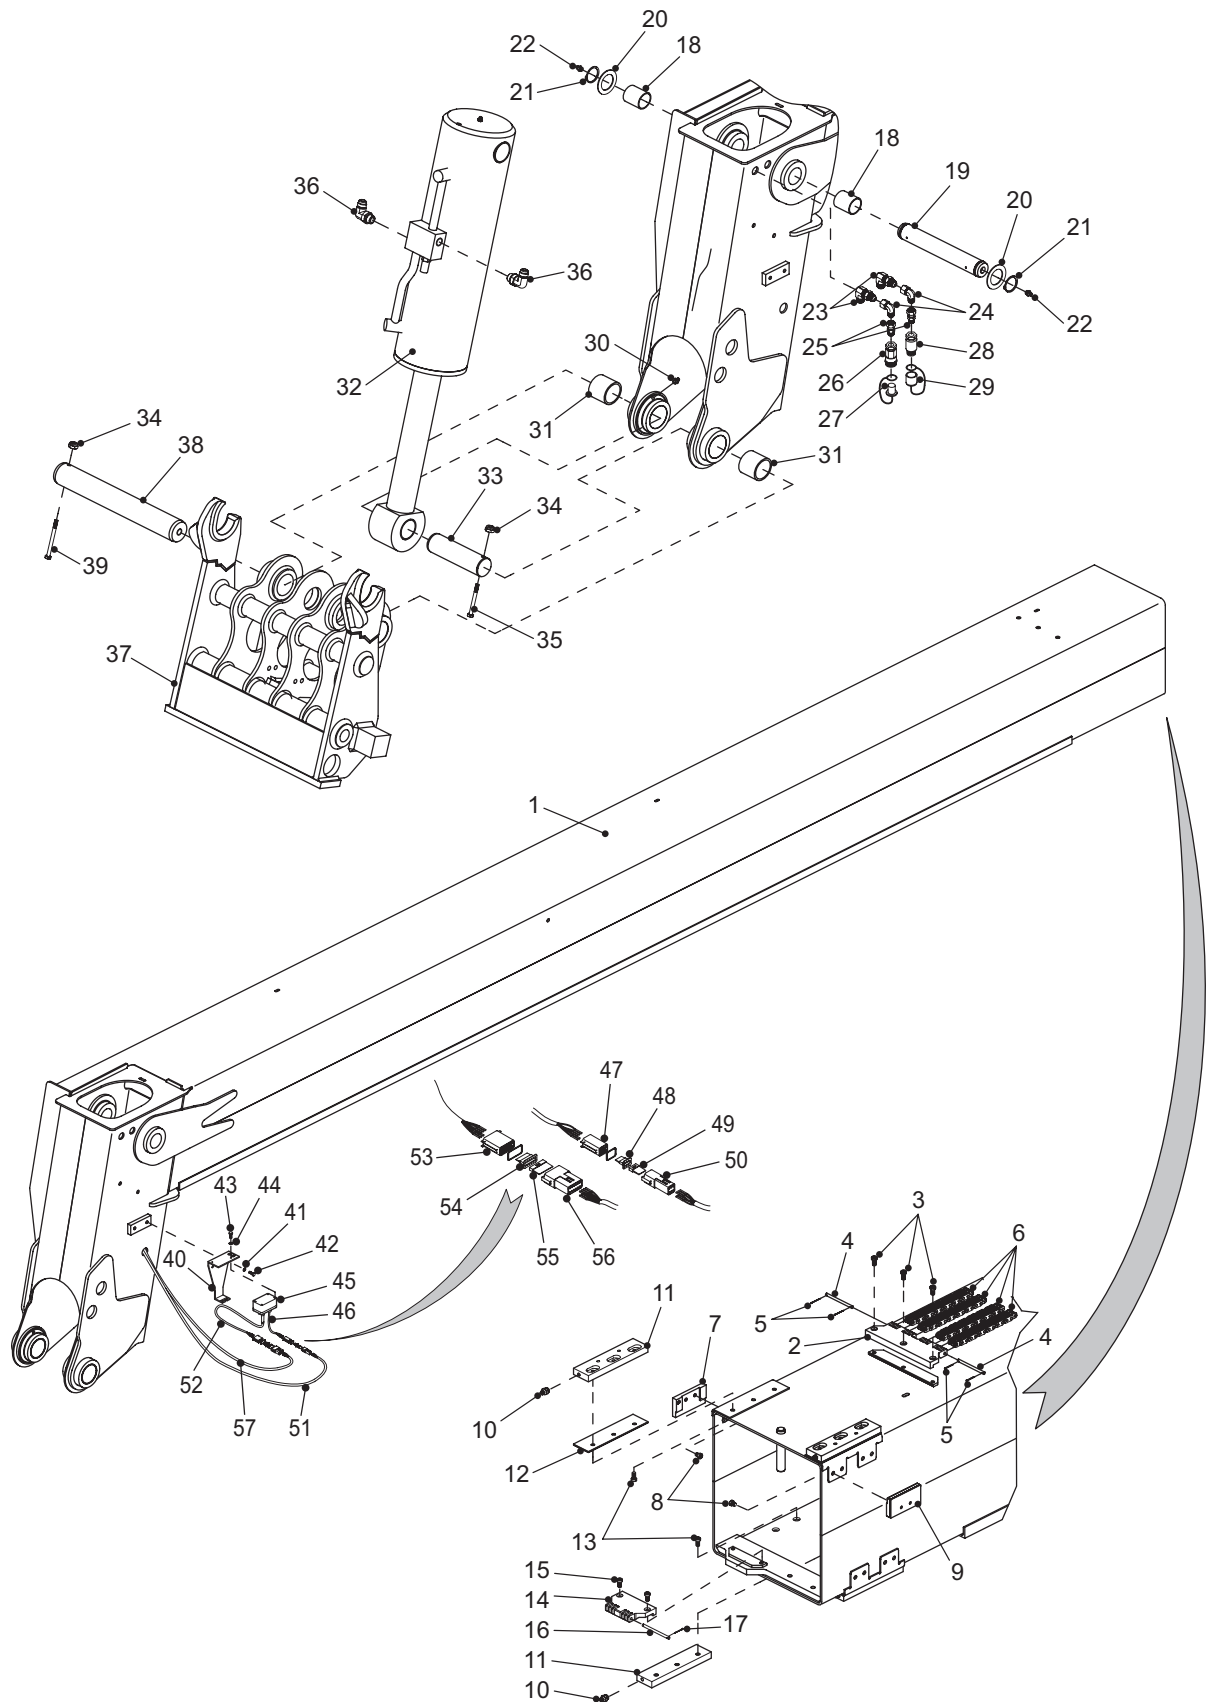


SPC001025

End Boom Assy - T40140

[illegible]

Fixed Boom Assy - T40170

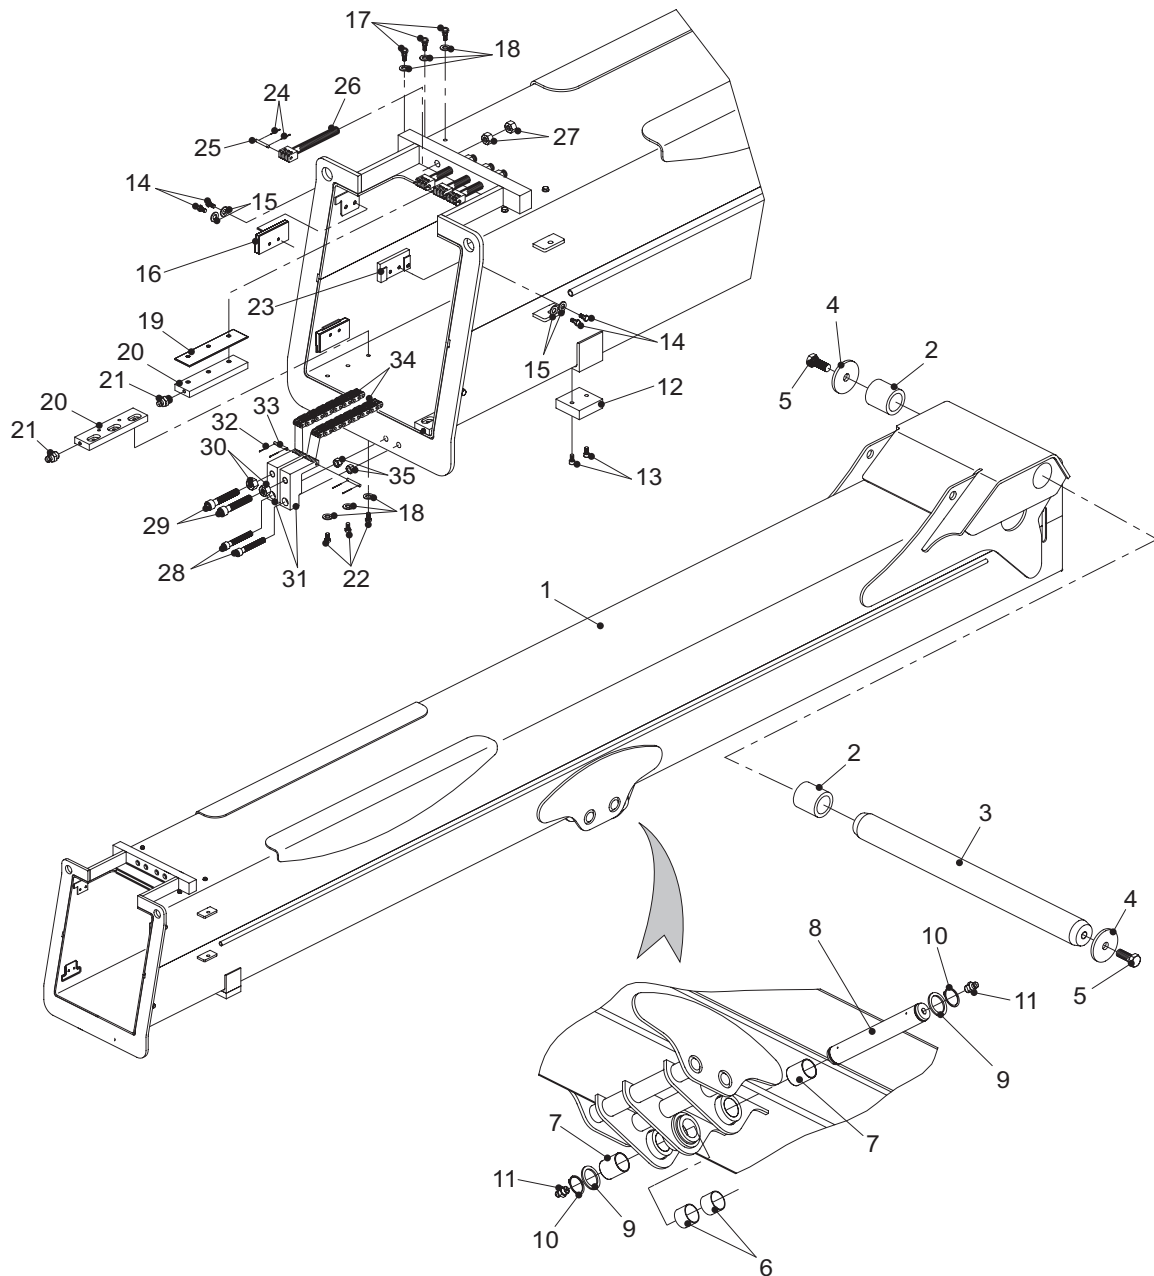


SPC001031

Fixed Boom Assy - T40170

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	95459.4	Arm	Pos. 1 + 2 + 6 + 7		1
2	77380.4	Boom Pivot Bushing			2
3	95091.5	Spindle			1
4	77430.7	Washer			1
5	44001.6	Screw			2
6	77261.6	Bush			2
7	90281.7	Bush			2
8	95470.1	Spindle			1
9	70287.8	Washer			2
10	70288.6	Clip			2
11	01775.6	Grease Nipple			2
12	6908546	Shoe			2
13	29649.1	Screw			4
14	01595.8	Screw			8
15	01697.2	Washer			8
16	98344.5	Shoe	Thickness 11 mm		2
	98343.7	Shoe	Thickness 12 mm		2
	98342.9	Shoe	Thickness 13 mm		2
	98341.1	Shoe	Thickness 14 mm		2
	98340.3	Shoe	Thickness 15 mm		2
17	01596.6	Screw			6
18	01697.2	Washer			12
19	98300.7	Shim	Thickness 1 mm		2
	98301.5	Shim	Thickness 2 mm		2
	98302.3	Shim	Thickness 3 mm		2
20	95501.3	Shoe			4
21	01775.6	Grease Nipple			4
22	01595.8	Screw			6
23	98342.9	Shoe	Thickness 13 mm		2
24	38632.6	Pin			8
25	95613.6	Spindle			4

Fixed Boom Assy - T40170

Recurrence of previous drawing

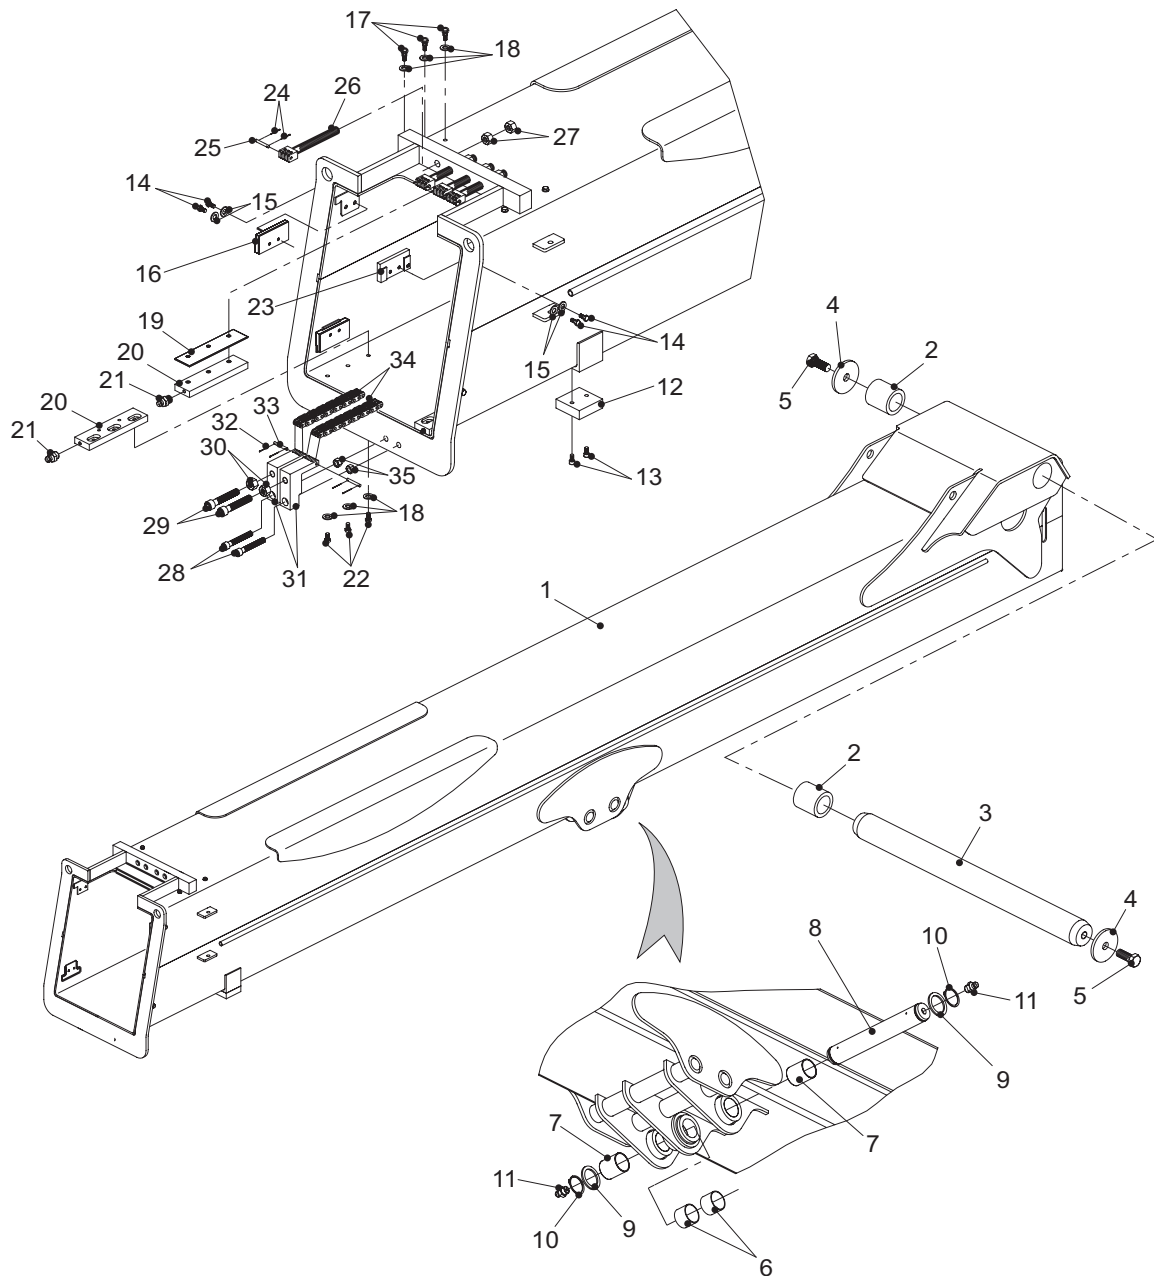


SPC001031

Fixed Boom Assy - T40170

[illegible]

1st Intermediate Boom - T40170

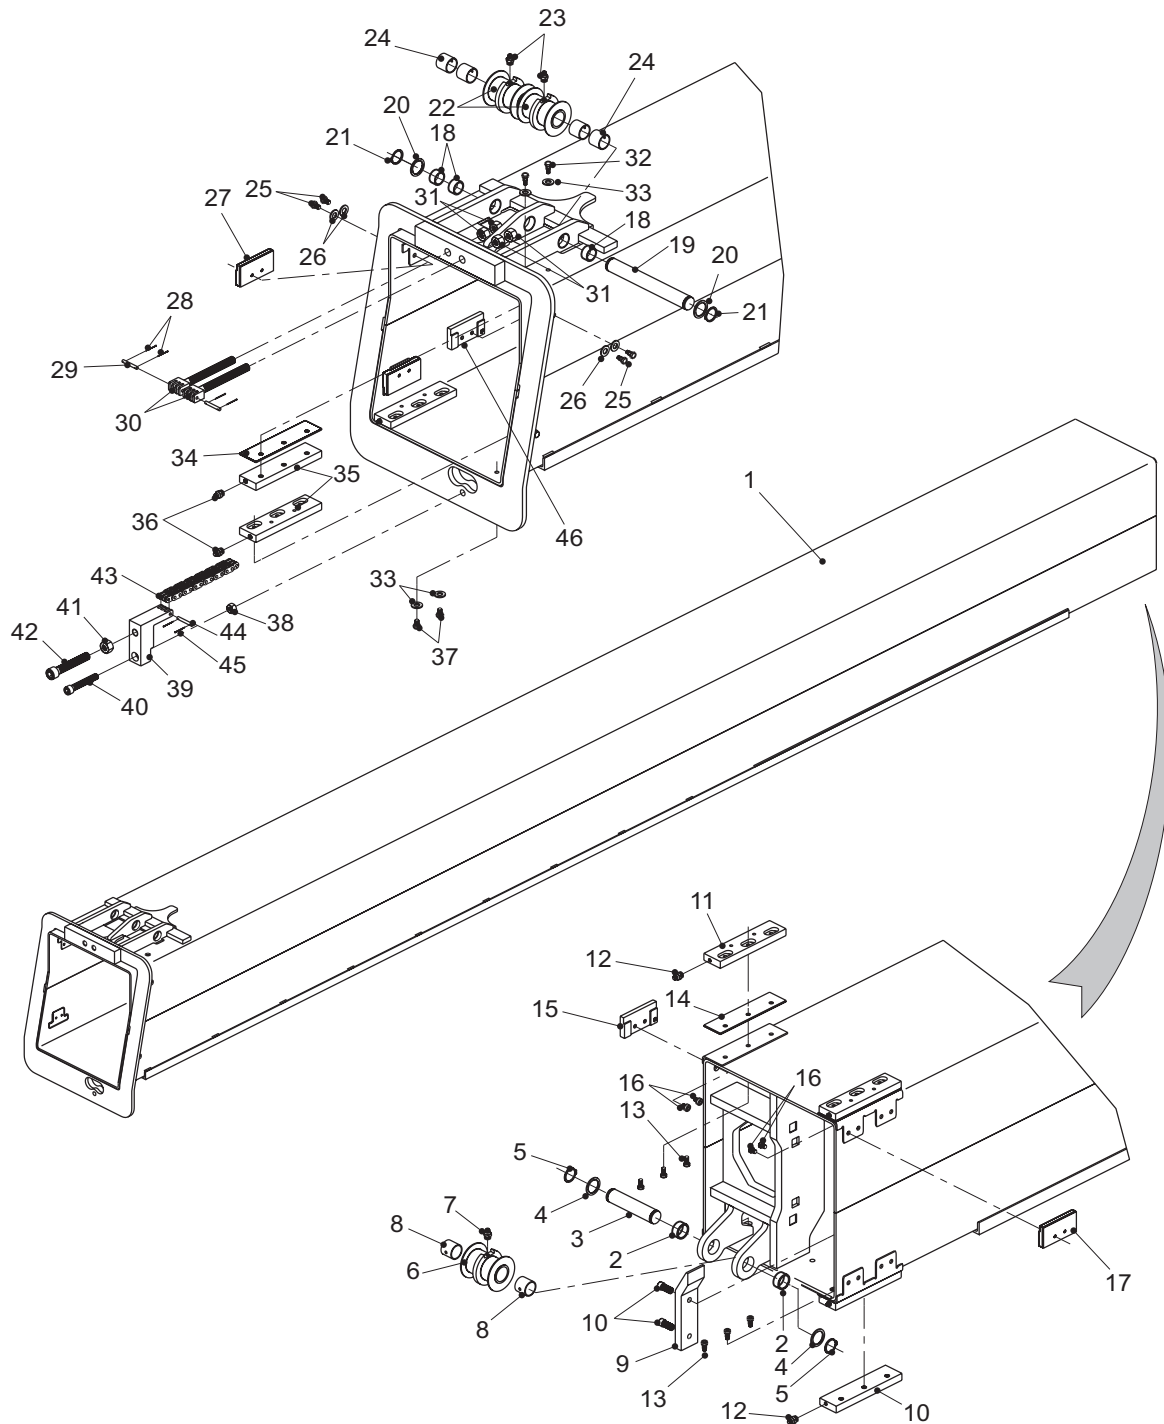


SPC001026

1st Intermediate Boom - T40170

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	95484.2	Intermediate arm			1
2	95541.9	Bush			2
3	95570.8	Spindle			1
4	95577.3	Washer			2
5	26747.6	Clip			2
6	6913719	Pulley	Pos. 6 + 8 ; Was 95538.5		1
7	01775.6	Grease Nipple			1
8	84078.5	Bush			2
9	97870.0	Shoe			1
10	01639.4	Screw			2
11	95501.3	Shoe			4
12	01775.6	Grease Nipple			4
13	95502.1	Screw			12
14	98300.7	Shim	Thickness 1 mm		2
	98301.5	Shim	Thickness 2 mm		2
	98302.3	Shim	Thickness 3 mm		2
15	98342.9	Shoe	Thickness 13 mm		1
16	98303.1	Screw			4
17	98344.5	Shoe	Thickness 11 mm		1
	98343.7	Shoe	Thickness 12 mm		1
	98342.9	Shoe	Thickness 13 mm		1
	98341.1	Shoe	Thickness 14 mm		1
	98340.3	Shoe	Thickness 15 mm		1
18	95541.9	Bush			3
19	95569.0	Spindle			1
20	95577.3	Washer			2
21	26747.6	Clip			2
22	6913719	Pulley	Pos. 22 + 24 ; Was 95538.5		2
23	01775.6	Grease Nipple			2
24	84078.5	Bush			4
25	01595.8	Screw			8

1st Intermediate Boom - T40170

Recurrence of previous drawing

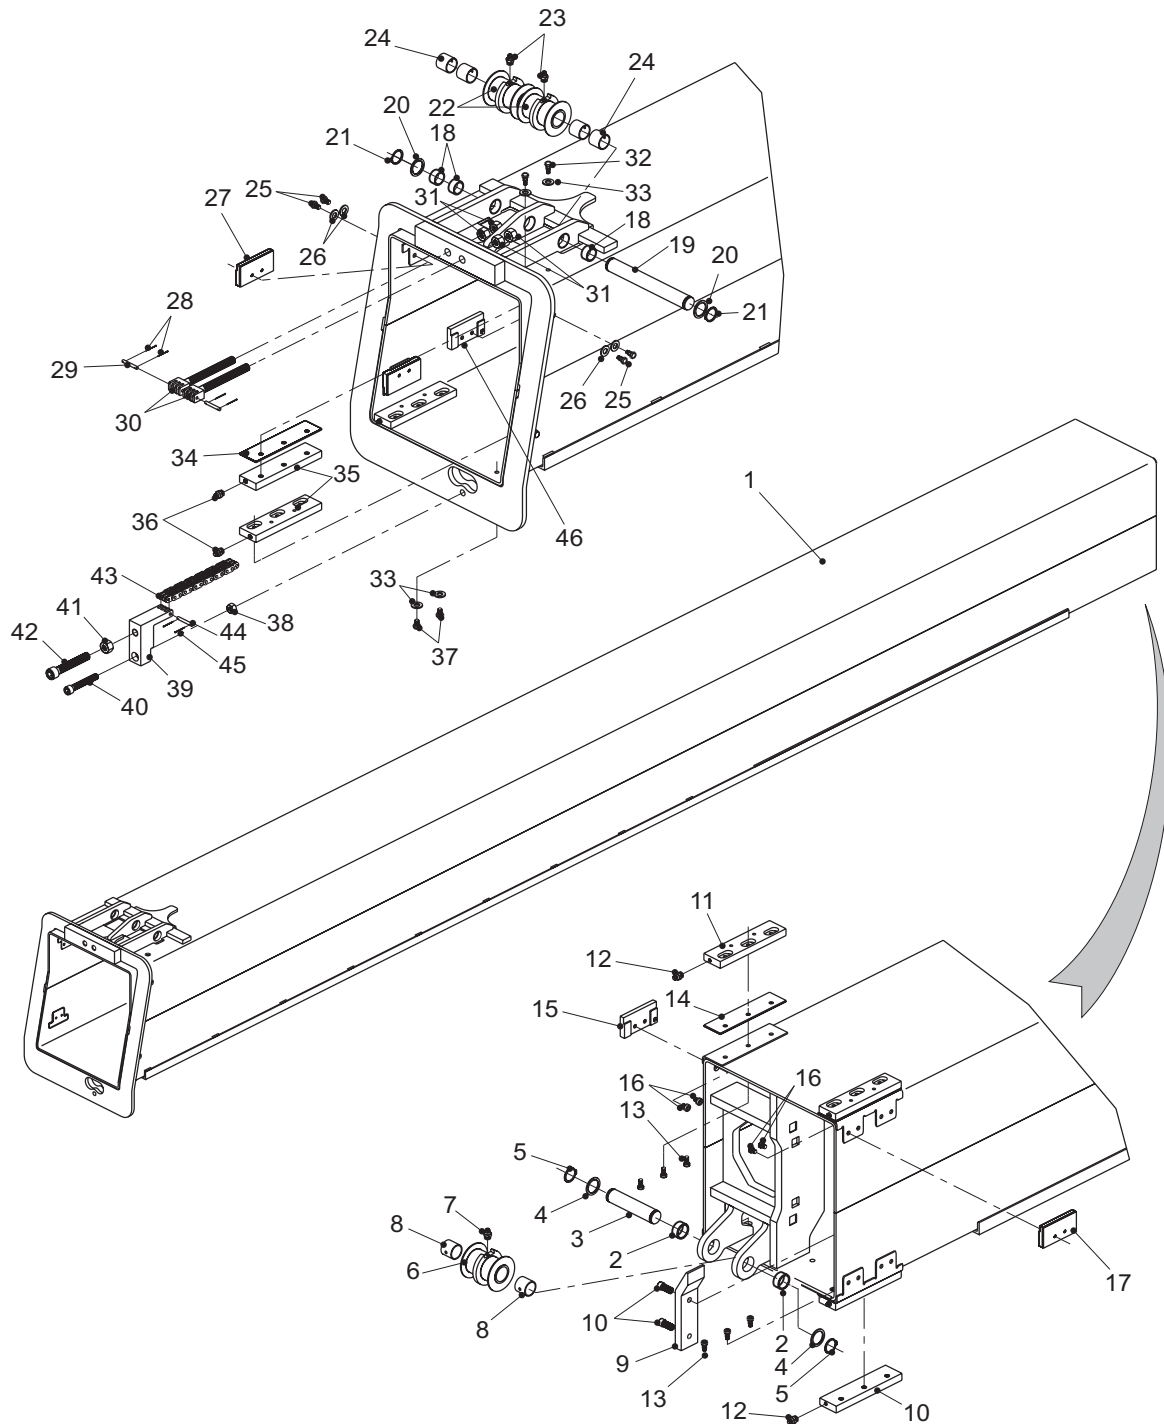


SPC001026

1st Intermediate Boom - T40170

Item	Part Number	Denomination	Remarks	Serial Number	Qty
26	01697.2	Washer			8
27	98344.5	Shoe	Thickness 11 mm		2
	98343.7	Shoe	Thickness 12 mm		2
	98342.9	Shoe	Thickness 13 mm		2
	98341.1	Shoe	Thickness 14 mm		2
	98340.3	Shoe	Thickness 15 mm		2
28	38632.6	Pin			4
29	95613.6	Spindle			2
30	95553.4	Pull rod			2
31	01672.5	Nut			4
32	01596.6	Screw			4
33	01697.2	Washer			8
34	98300.7	Shim	Thickness 1 mm		2
	98301.5	Shim	Thickness 2 mm		2
	98302.3	Shim	Thickness 3 mm		2
35	95501.3	Shoe			4
36	01775.6	Grease Nipple			4
37	01595.8	Screw			4
38	01670.9	Nut			1
39	95555.9	Retaining			1
40	95575.7	Screw			1
41	01672.5	Nut			1
42	95557.5	Screw			1
43	95576.5	Chain			1
44	95613.6	Spindle			1
45	38632.6	Pin			2
46	98342.9	Shoe	Thickness 13 mm		2

2nd Intermediate Boom - T40170

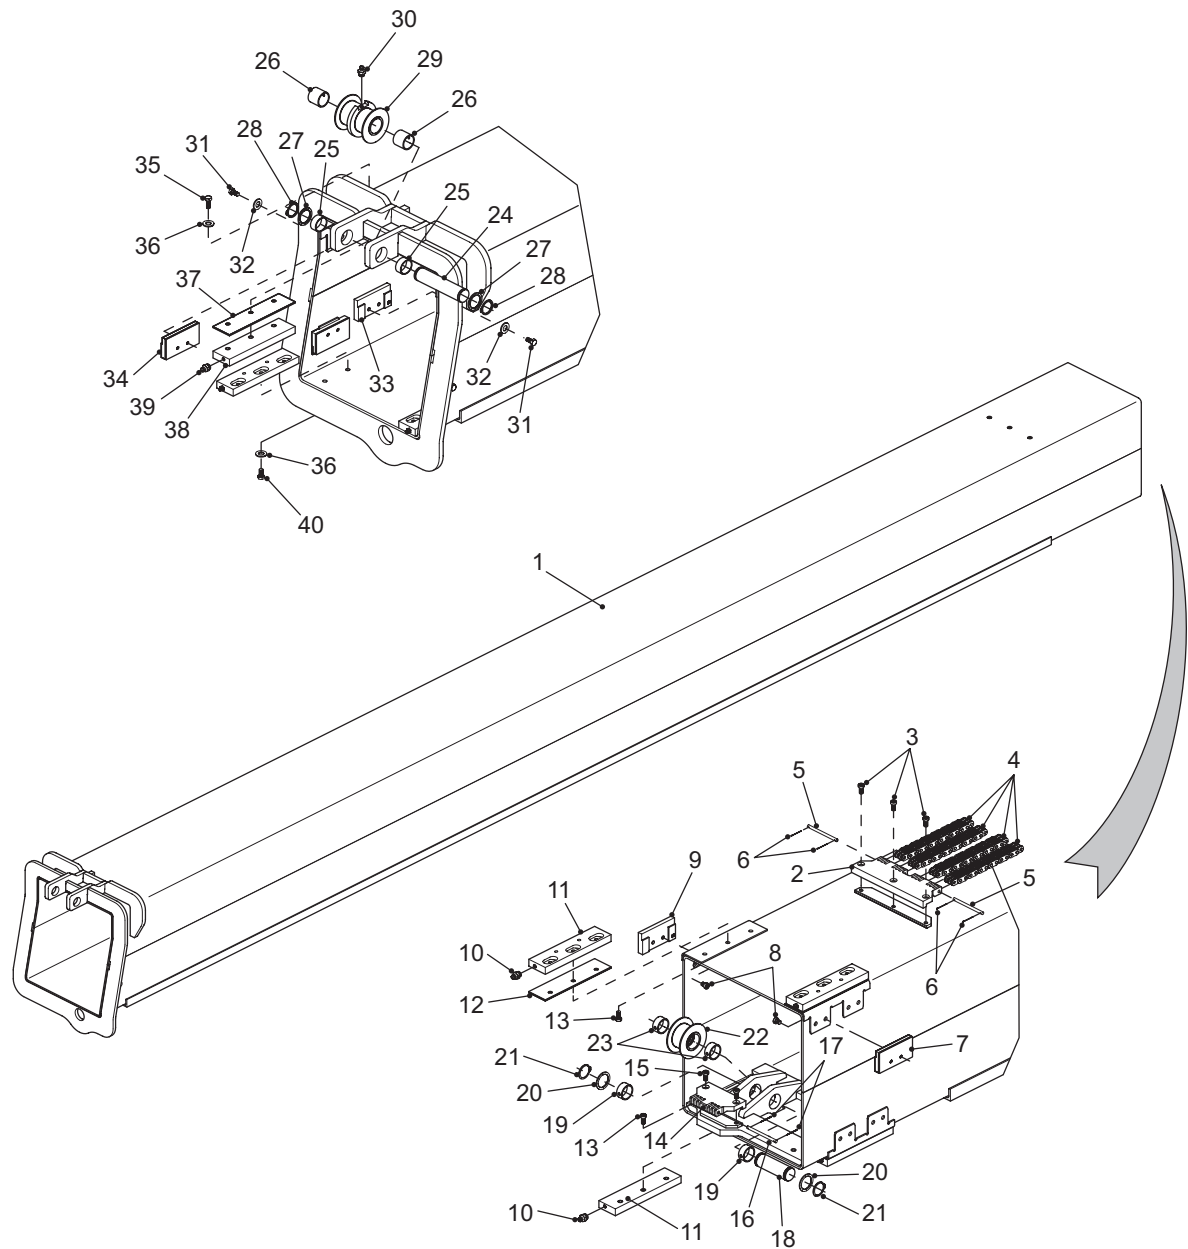


SPC001027

2nd Intermediate Boom - T40170

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	95490.9	Intermediate arm			1
2	95615.1	Fixing plate			1
3	95502.1	Screw			3
4	95532.8	Chain			4
5	95614.4	Spindle			2
6	38632.6	Pin			4
7	98344.5	Shoe	Thickness 11 mm		1
	98343.7	Shoe	Thickness 12 mm		1
	98342.9	Shoe	Thickness 13 mm		1
	98341.1	Shoe	Thickness 14 mm		1
	98340.3	Shoe	Thickness 15 mm		1
8	98303.1	Screw			4
9	98342.9	Shoe			1
10	01775.6	Grease Nipple			4
11	95501.3	Shoe			4
12	98300.7	Shim	Thickness 1 mm		2
	98301.5	Shim	Thickness 2 mm		2
	98302.3	Shim	Thickness 3 mm		2
13	95502.1	Screw			10
14	95558.3	Retaining			1
15	95502.1	Screw			2
16	95614.4	Spindle			1
17	38632.6	Pin			2
18	95578.1	Spindle			1
19	95541.9	Bush			2
20	95577.3	Washer			2
21	26747.6	Clip			2
22	6913718	Pulley	Pos. 22 + 23 ; Was 95539.3		1
23	95541.9	Bush			2
24	95570.8	Spindle			1
25	95541.9	Bush			2

2nd Intermediate Boom - T40170

Recurrence of previous drawing

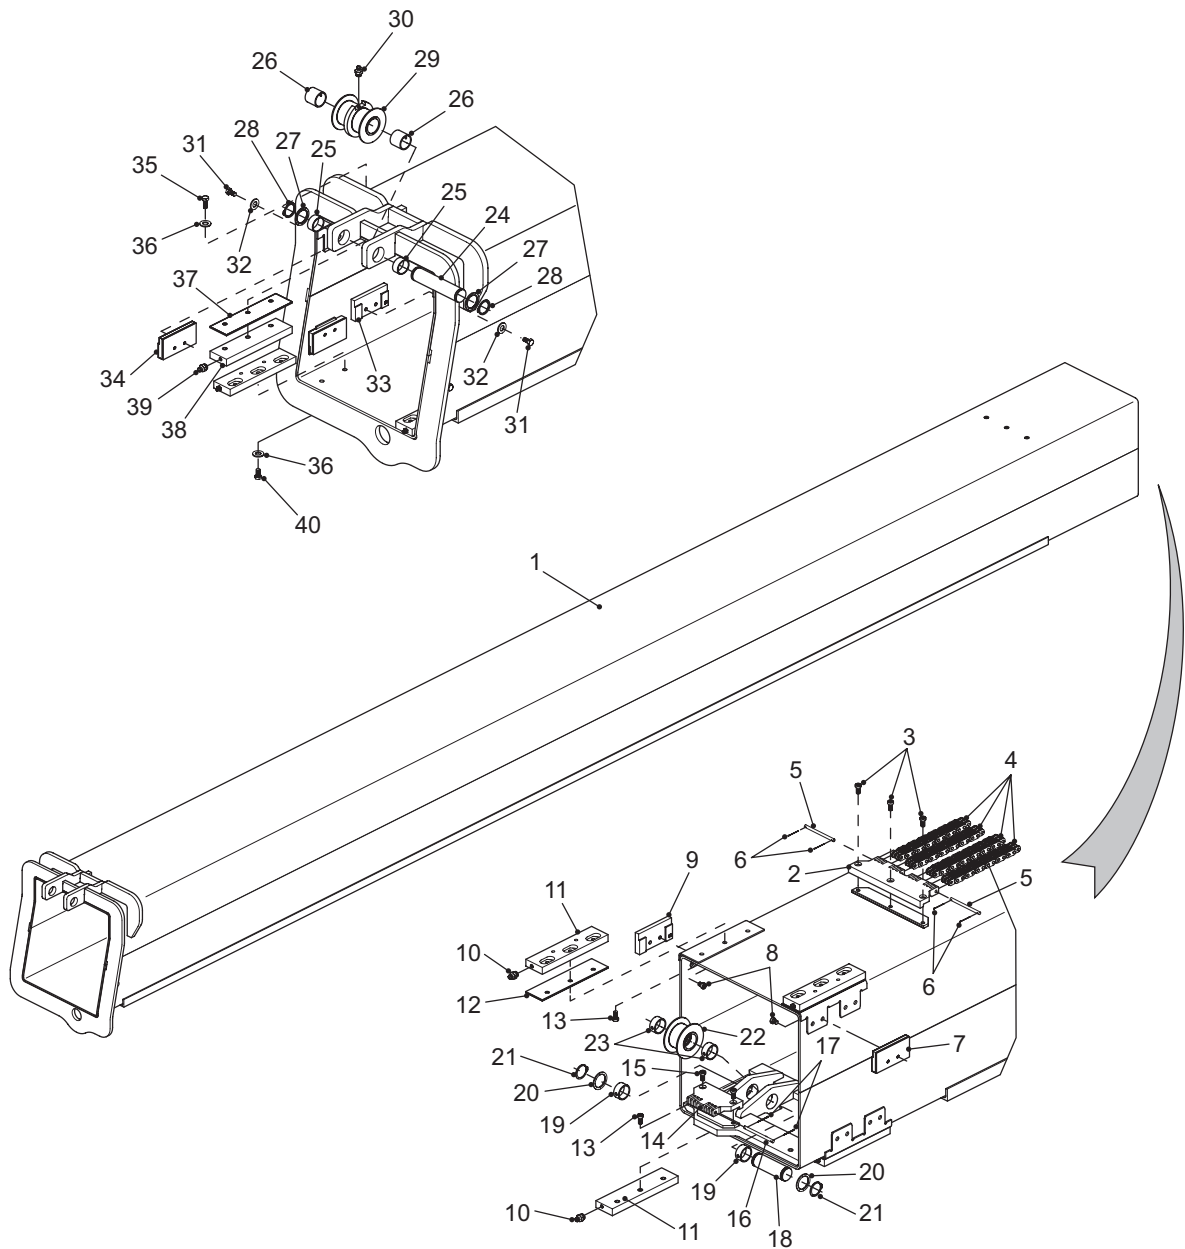


SPC001027

2nd Intermediate Boom - T40170

[illegible]

End Boom Assy - T40170

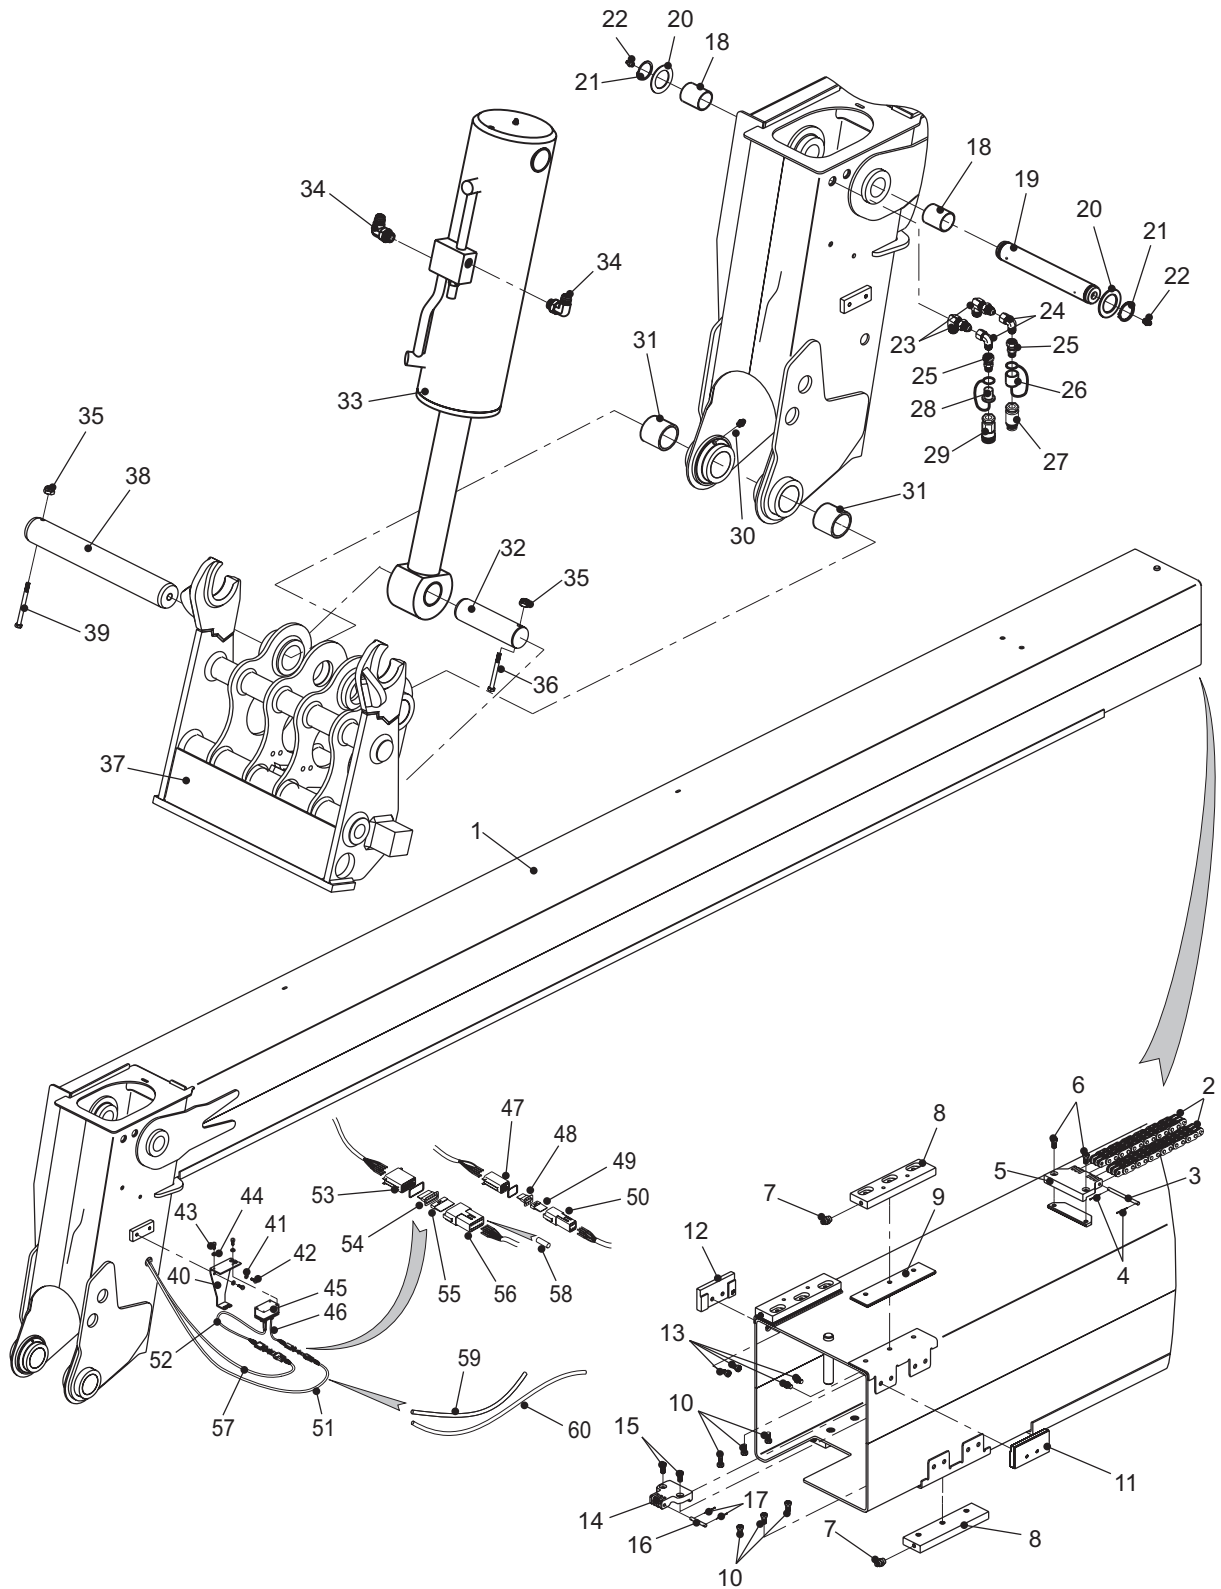


SPC001028

End Boom Assy - T40170

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	95495.8	Telescopic arm	Pos. 1 + 18 + 31		1
2	95532.8	Chain			2
3	95614.4	Spindle			1
4	38632.6	Pin			2
5	95558.3	Retaining			1
6	95502.1	Screw			2
7	01775.6	Grease Nipple			4
8	95501.3	Shoe			4
9	98300.7	Shim	Thickness 1 mm		2
	98301.5	Shim	Thickness 2 mm		2
	98302.3	Shim	Thickness 3 mm		2
10	95502.1	Screw			12
11	98344.5	Shoe	Thickness 11 mm		2
	98343.7	Shoe	Thickness 12 mm		1
	98342.9	Shoe	Thickness 13 mm		1
	98341.1	Shoe	Thickness 14 mm		1
	98340.3	Shoe	Thickness 15 mm		1
12	98342.9	Shoe	Thickness 13 mm		1
13	98303.1	Screw			4
14	95564.1	Retaining			1
15	95502.1	Screw			2
16	95613.6	Spindle			1
17	38632.6	Pin			2
18	74863.2	Bush			2
19	95533.6	Spindle			1
20	009456-02D	Washer			2
21	31825.3	Clip			2
22	01775.6	Grease Nipple			2
23	010370-57L	Elbow			2
24	010370-90W	Elbow			2
25	022375-06W	Adapter			2

End Boom Assy - T40170

Recurrence of previous drawing

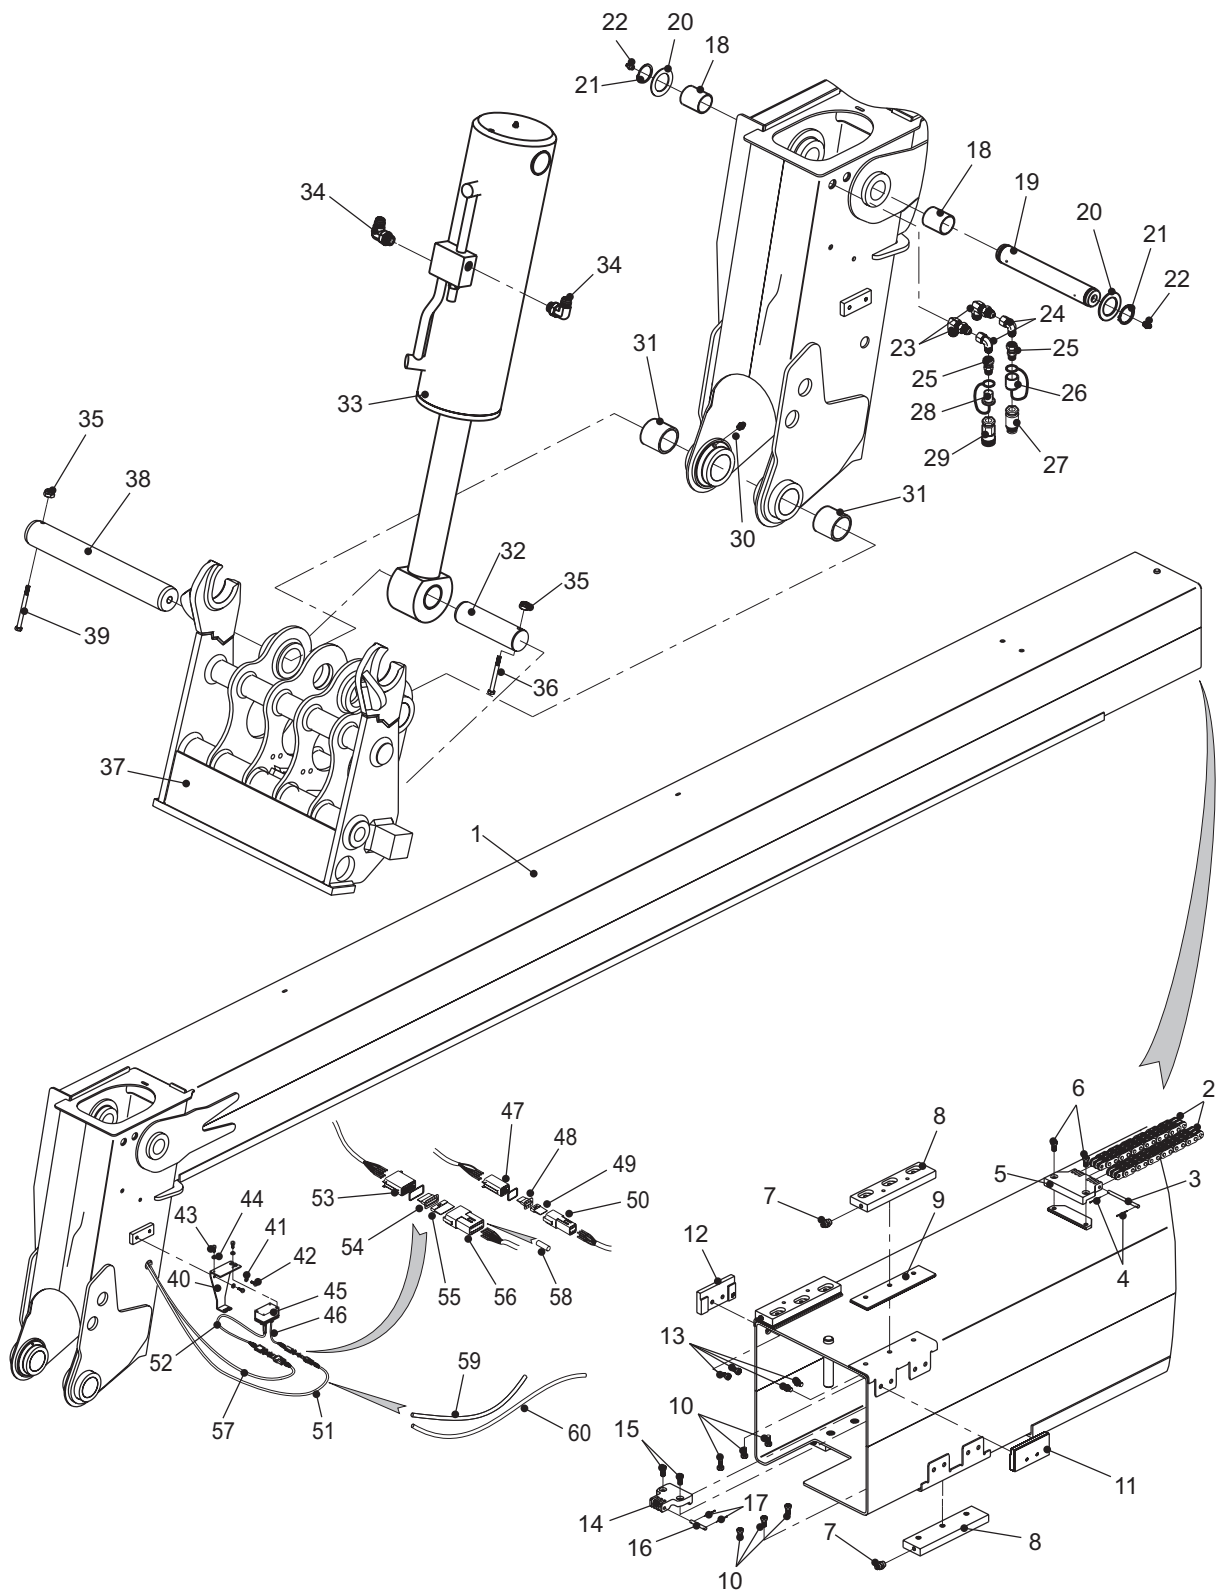


SPC001028

End Boom Assy - T40170

Item	Part Number	Denomination	Remarks	Serial Number	Qty
26	96513.7	Cap			1
27	95994.0	Male coupling			1
28	96514.5	Cap			1
29	95993.2	Female Coupling			1
30	01775.6	Grease Nipple			2
31	77380.4	Boom Pivot Bushing			2
32	80400.5	Carriage Pin			1
33	NAP	Cylinder assy	Order now 6914552 ; Was 97814.8 ; For details, see page 171		1
	6914552	Cylinder assy	See page 173 for details.		1
34	65285.9	Elbow			2
35	100345-09A	Nut			2
36	65397.2	Screw			1
37	NAP	Carriage	Order now 6911242 ; Was 94096.5	3633 11125/	1
	6911242	Carriage		/3633 11126	1
38	77421.6	Pin			1
39	82459.9	Screw			1
40	6908244	Support			1
41	01698.0	Washer			2
42	01603.0	Screw			2
43	01590.9	Screw			2
44	01696.4	Washer			2
45	6908258	Box			1
46	6908281	Cable	5 wire		1
47	79551.8	Connector	6 poles		1
48	79552.6	Block			1
49	79550.0	Block			1
50	79549.2	Female connector	6 poles		1
51	6908285	Cable	5 wire		1
52	6908280	Cable	7 wire		1
53	79555.9	Male connector	12 poles		1
54	79556.7	Block			1

End Boom Assy - T40170

Recurrence of previous drawing

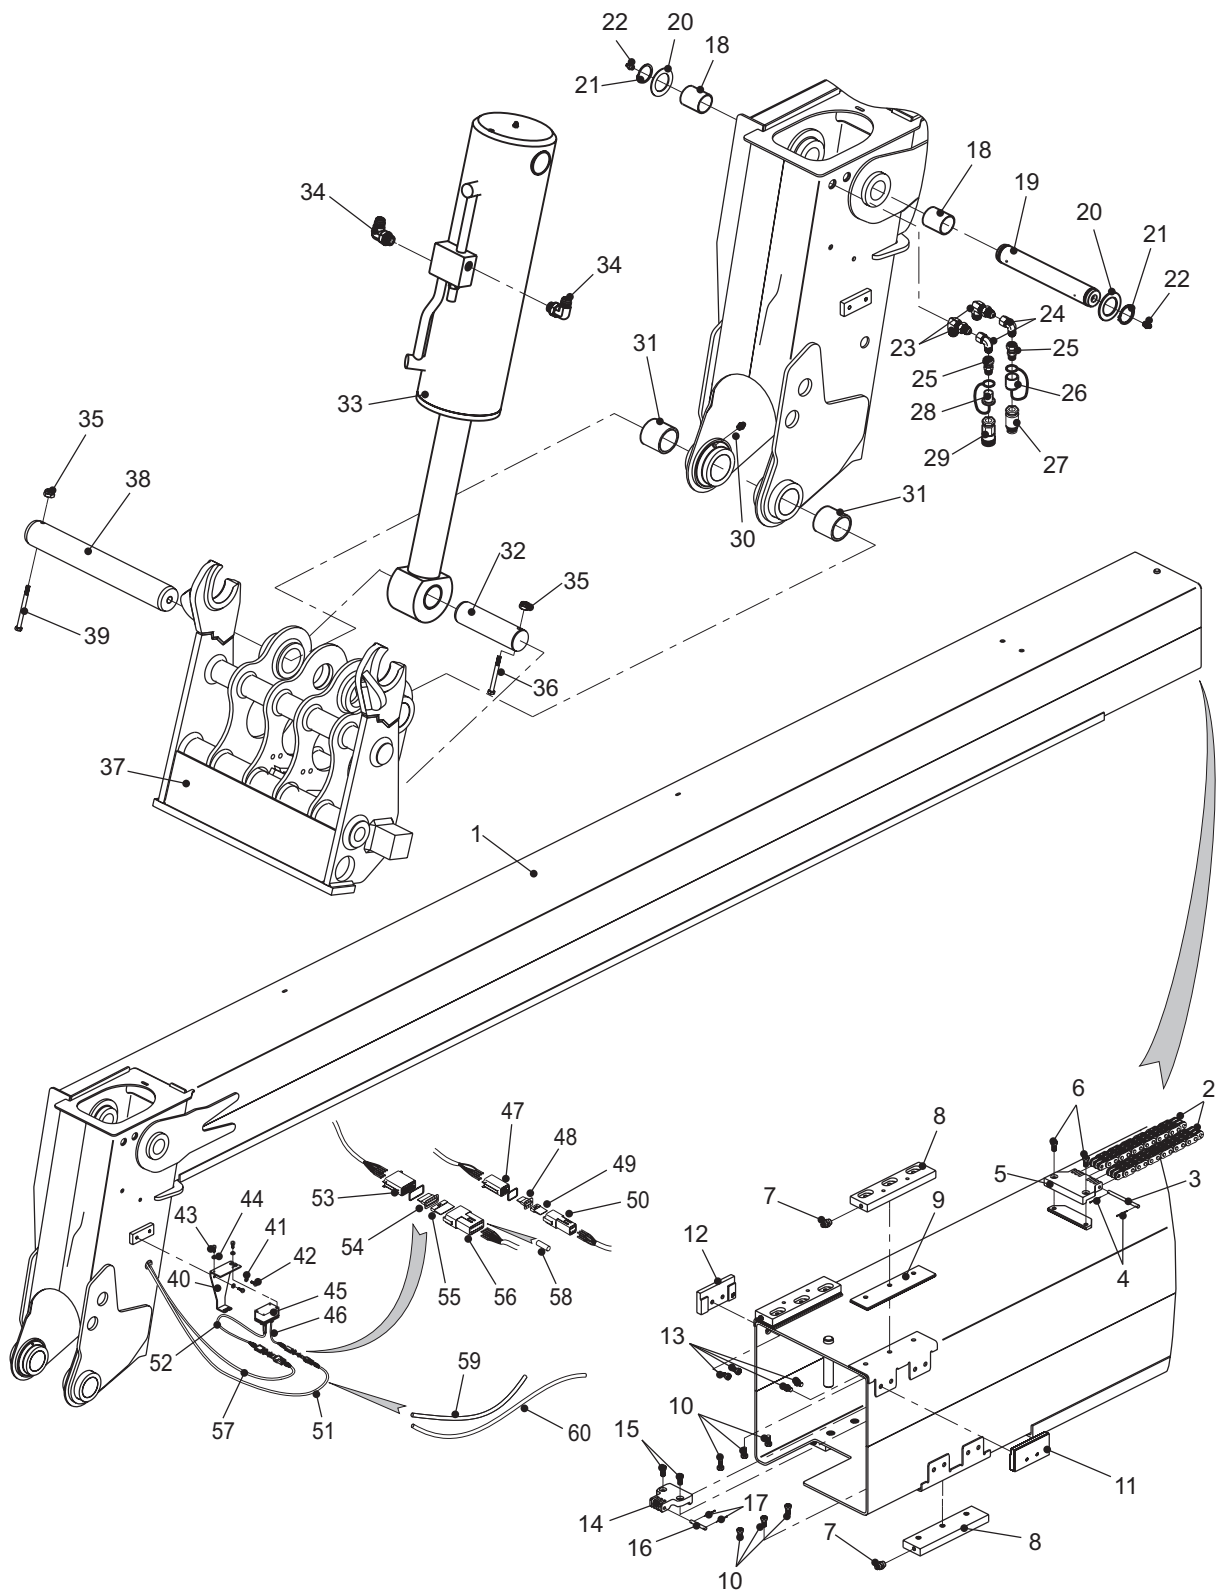


SPC001028

End Boom Assy - T40170

[illegible]

Manual Quick Attach Lock (wide)

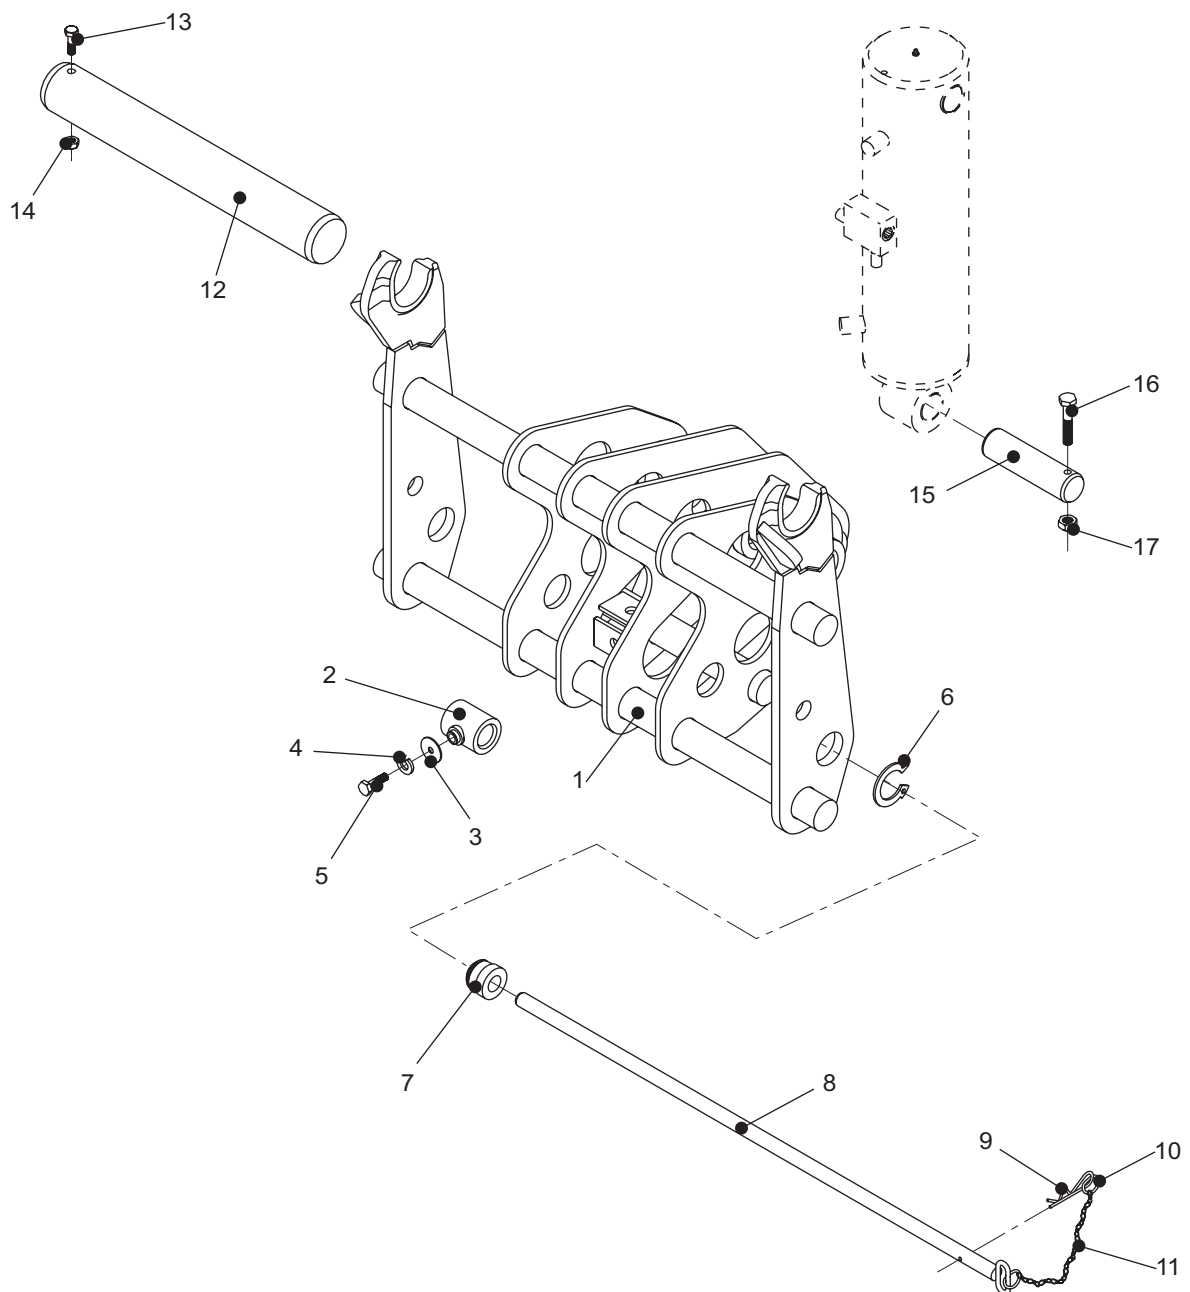


SPC001029

Manual Quick Attach Lock (wide)

[illegible]

Manual Quick Attach Lock (narrow)

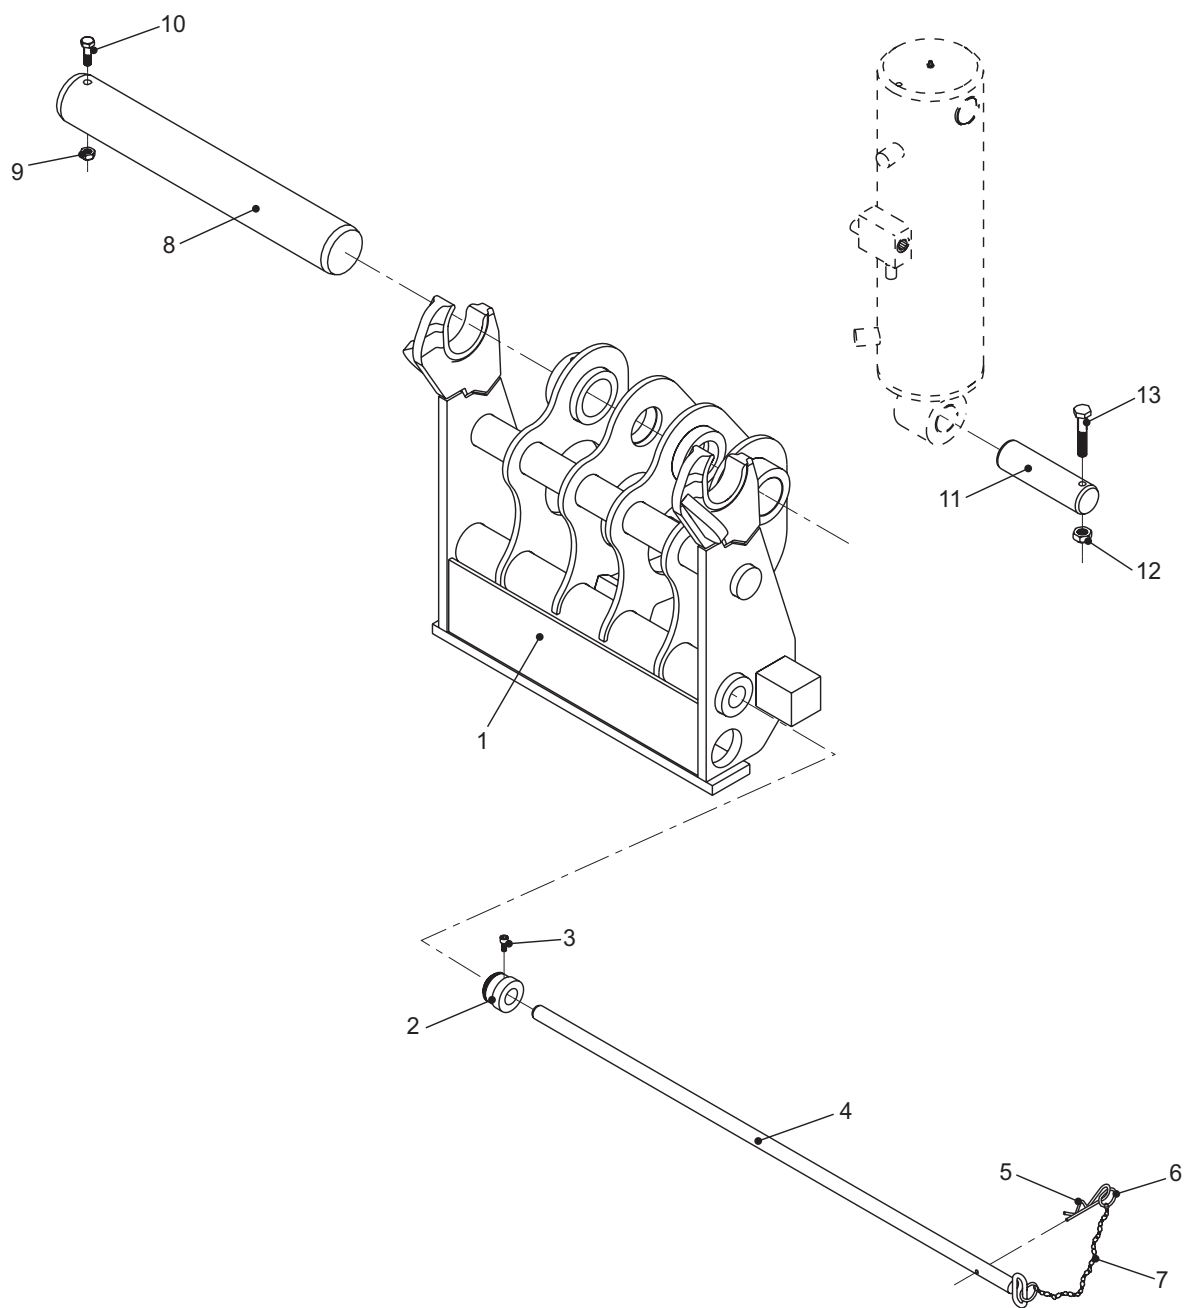


SPC001030

Manual Quick Attach Lock (narrow)

[illegible]

Axle Installation

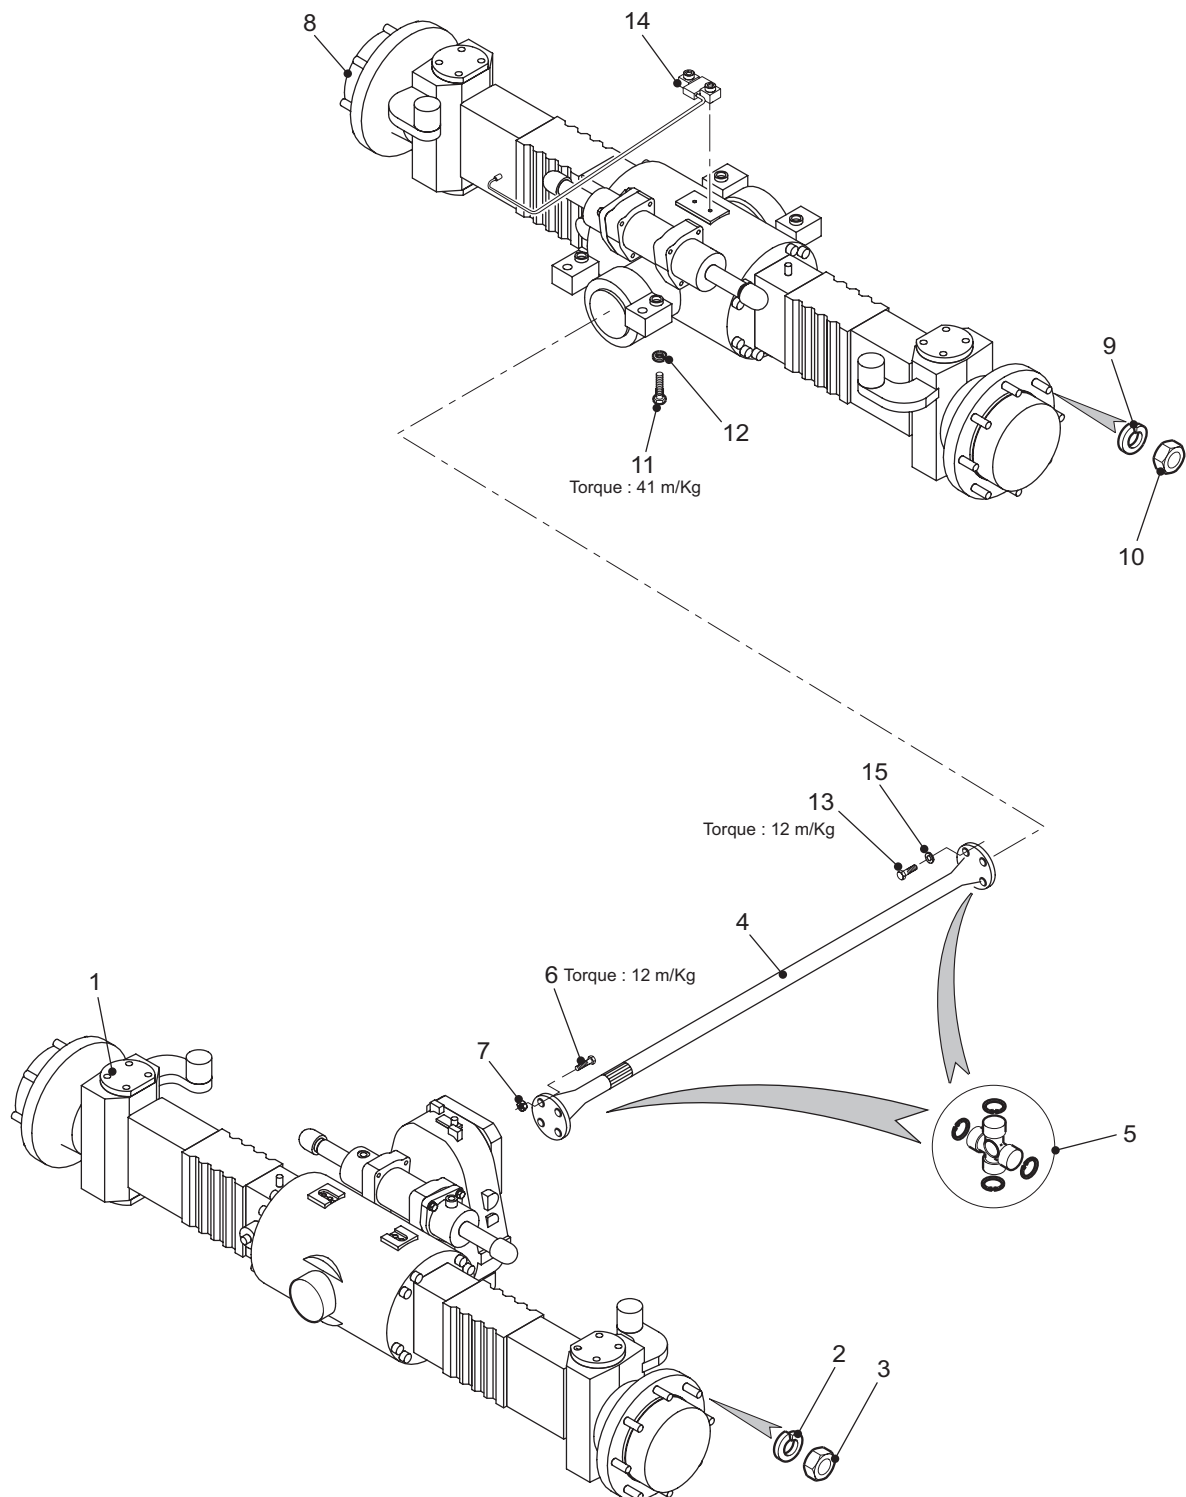


SPC002001

Axle Installation

[illegible]

Cardan Shaft

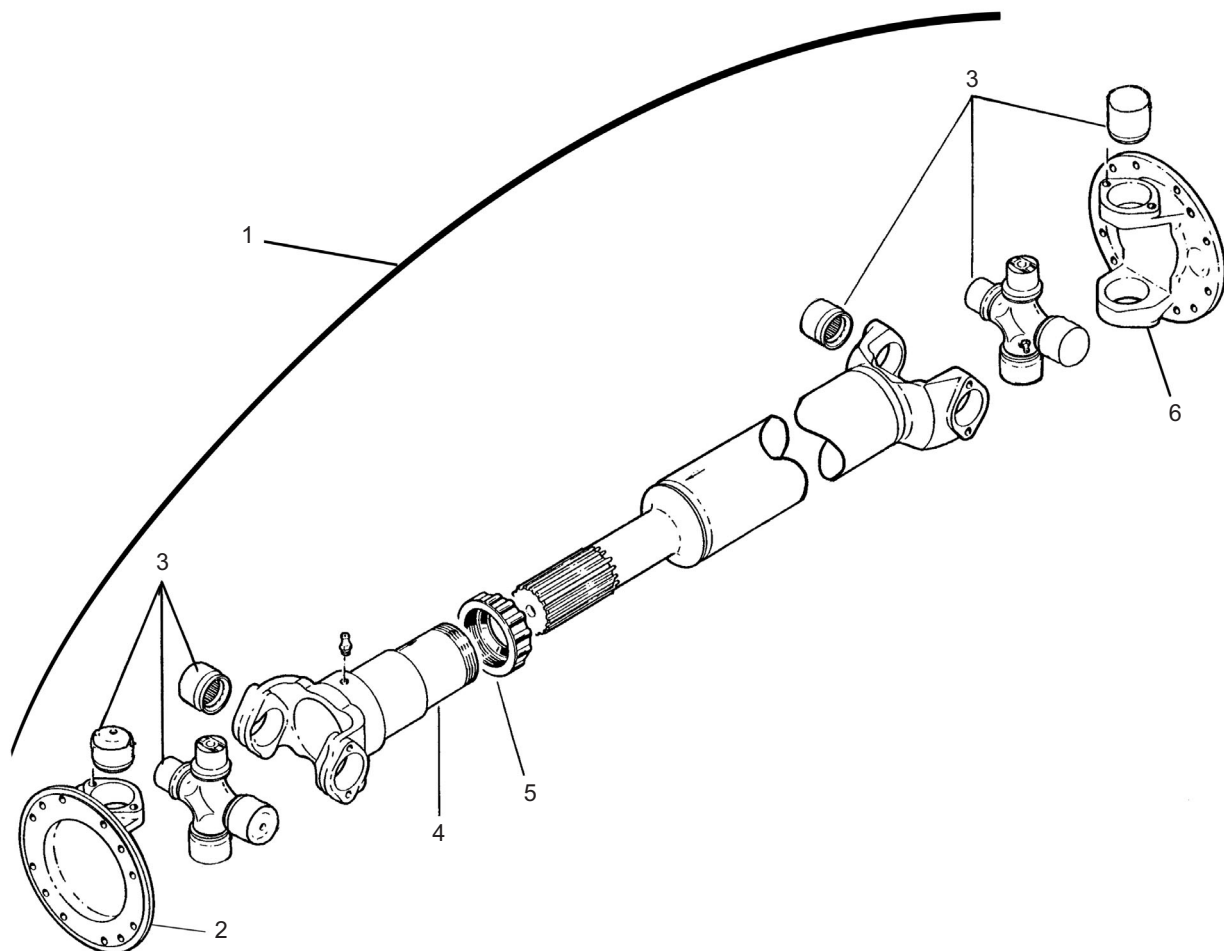


SPC002002

Cardan Shaft

[illegible]

Hub Reduction - Front Axle / Rear Axle


quantities are per axle

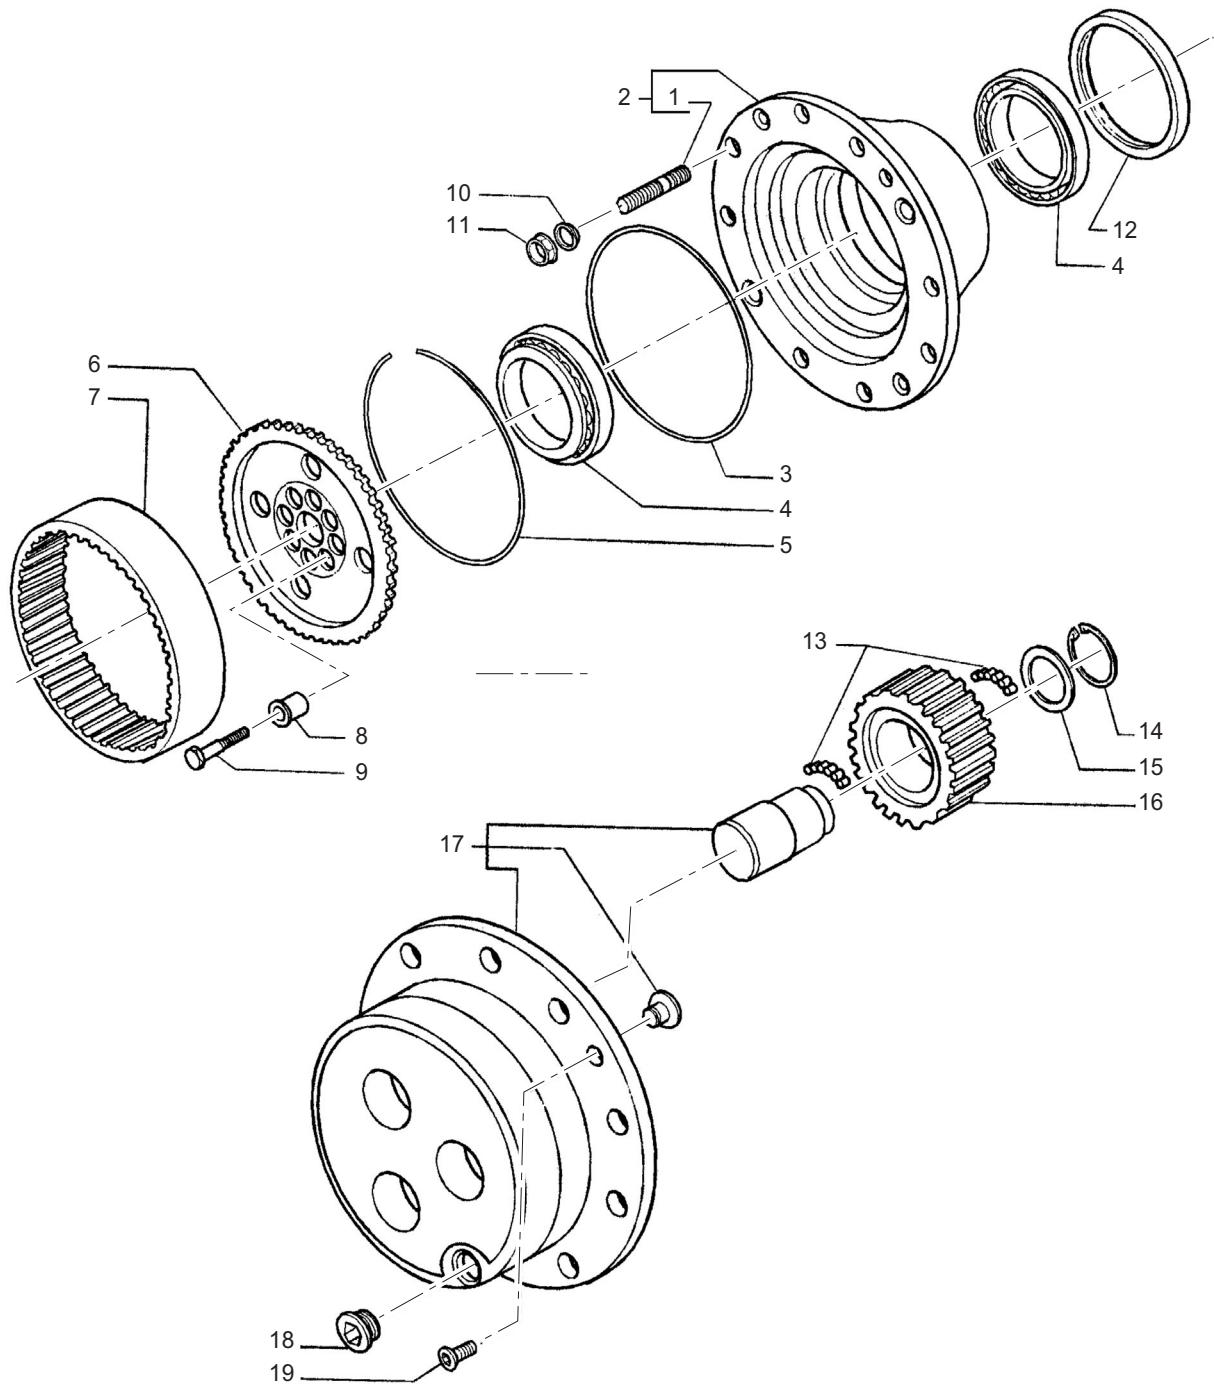

SPC002003

[illegible]

Reducer Box - Front Axle

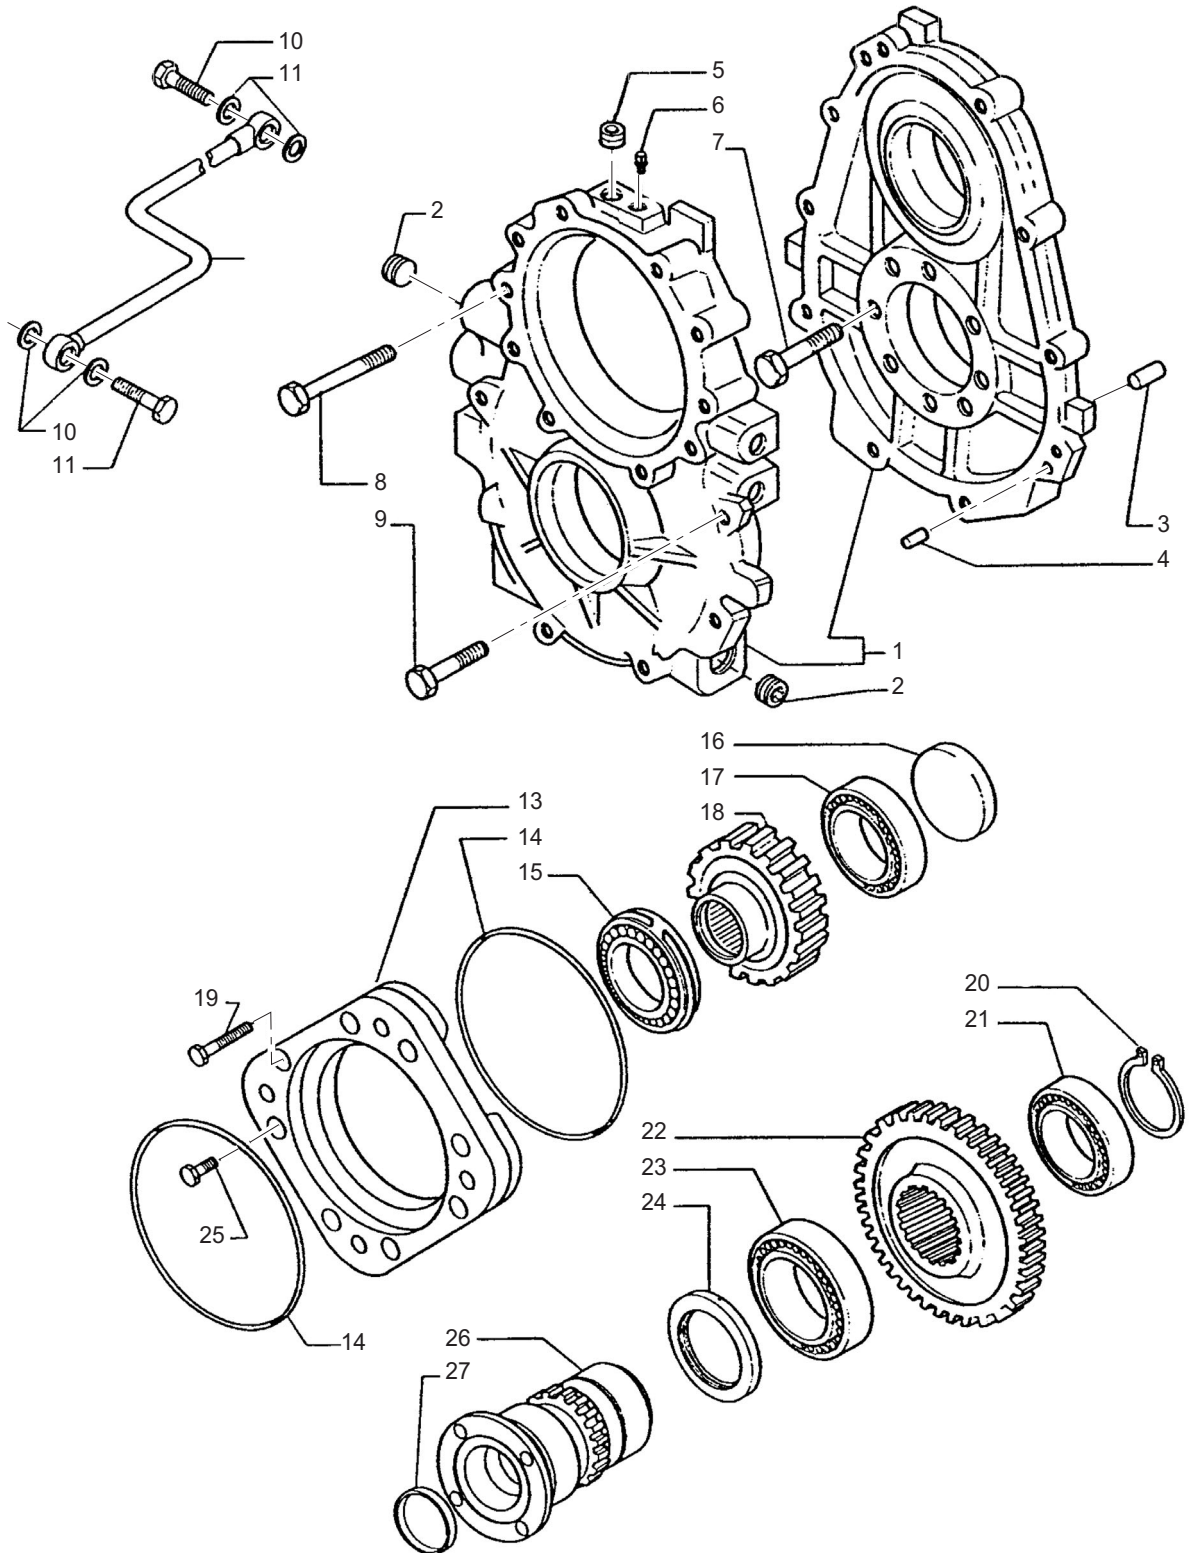


SPC002006

Reducer Box - Front Axle

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	75835.9	Housing			1
2	75505.8	Plug			2
3	75836.7	Pin			1
4	75713.8	Pin			2
5	75839.1	Plug			1
6	75717.9	Breather			1
7	75840.9	Screw			8
8	75841.7	Screw			2
9	75842.5	Screw			6
10	75843.3	Screw			2
11	75844.1	Washer			4
12	75845.8	Tube			1
13	75846.6	Bracket			1
14	75847.4	O-ring			2
15	75848.2	Bearing			1
16	75849.0	Plug			1
17	75850.8	Bearing			1
18	75851.6	Gear			1
19	75852.4	Screw			2
20	75853.2	Clip			1
21	75854.0	Bearing			1
22	75855.7	Gear			1
23	75856.5	Bearing			1
24	75857.3	Seal			1
25	75858.1	Screw			6
26	75859.9	Pin			1
27	75860.7	Plug			1

Housing - Front Axle

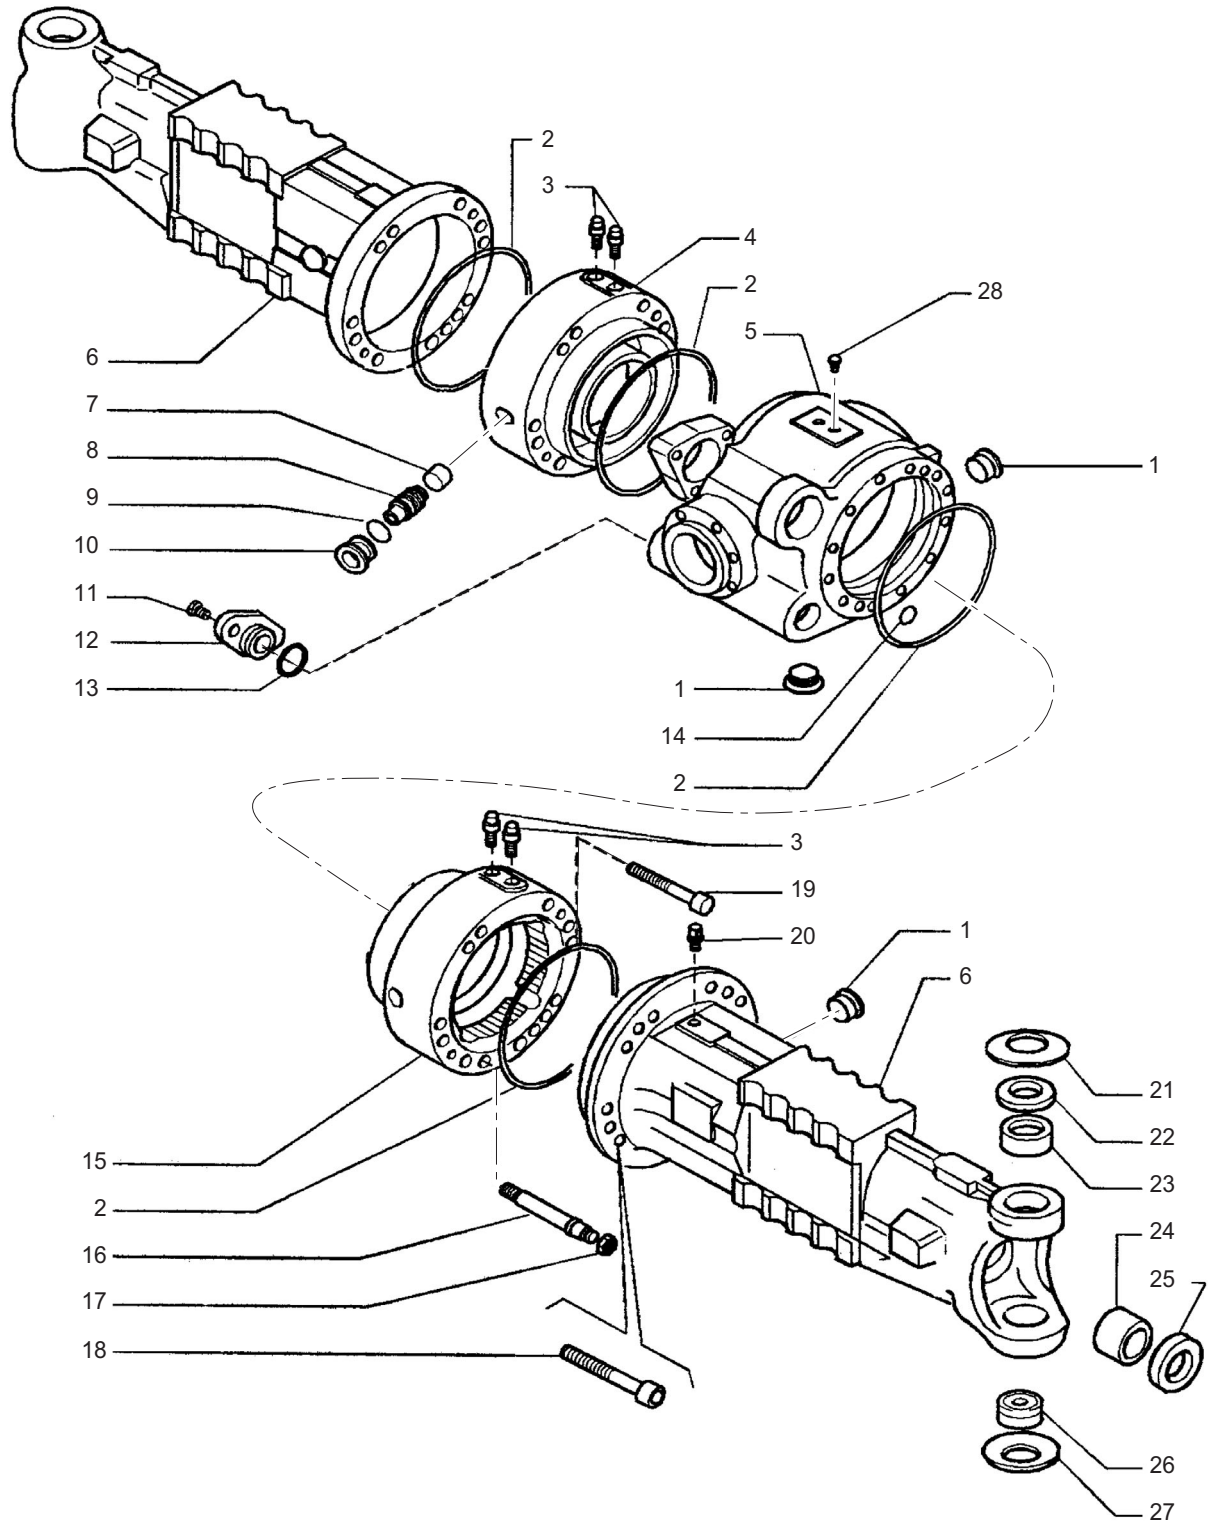


SPC002004

Housing - Front Axle

Item	Part Number	Denomination	Remarks	Serial Number	Qty
	89269.5	Front axle assy			1
1	100374-32C	Plug			1
2	75710.4	O-ring			2
3	63238.0	Breather			4
4	89905.4	Support			1
5	89955.9	Housing			1
6	98663.8	Axle shaft			2
7	89917.9	Pin CDS=sleeve			6
8	89908.8	Valve			6
9	89915.3	O-ring			6
10	89913.8	Bushing			6
11	01597.4	Screw			2
12	75708.8	Cover Plate			1
13	75709.6	O-ring			1
14	89906.2	O-Ring			2
15	89916.1	Support			1
16	89914.6	Stud			2
17	89912.0	Nut			2
18	75715.3	Screw			22
19	75716.1	Screw			2
20	75717.9	Breather			1
21	66039.9	Washer			2
22	66032.4	Spacer			2
23	6910722	Bush	Was 66034.0		2
24	100288-63N	Washer			2
25	98660.4	Bushing			2
26	66035.7	Bearing			2
27	66033.2	Washer			2
28	64842.8	Plug			2

Differential - Front Axle

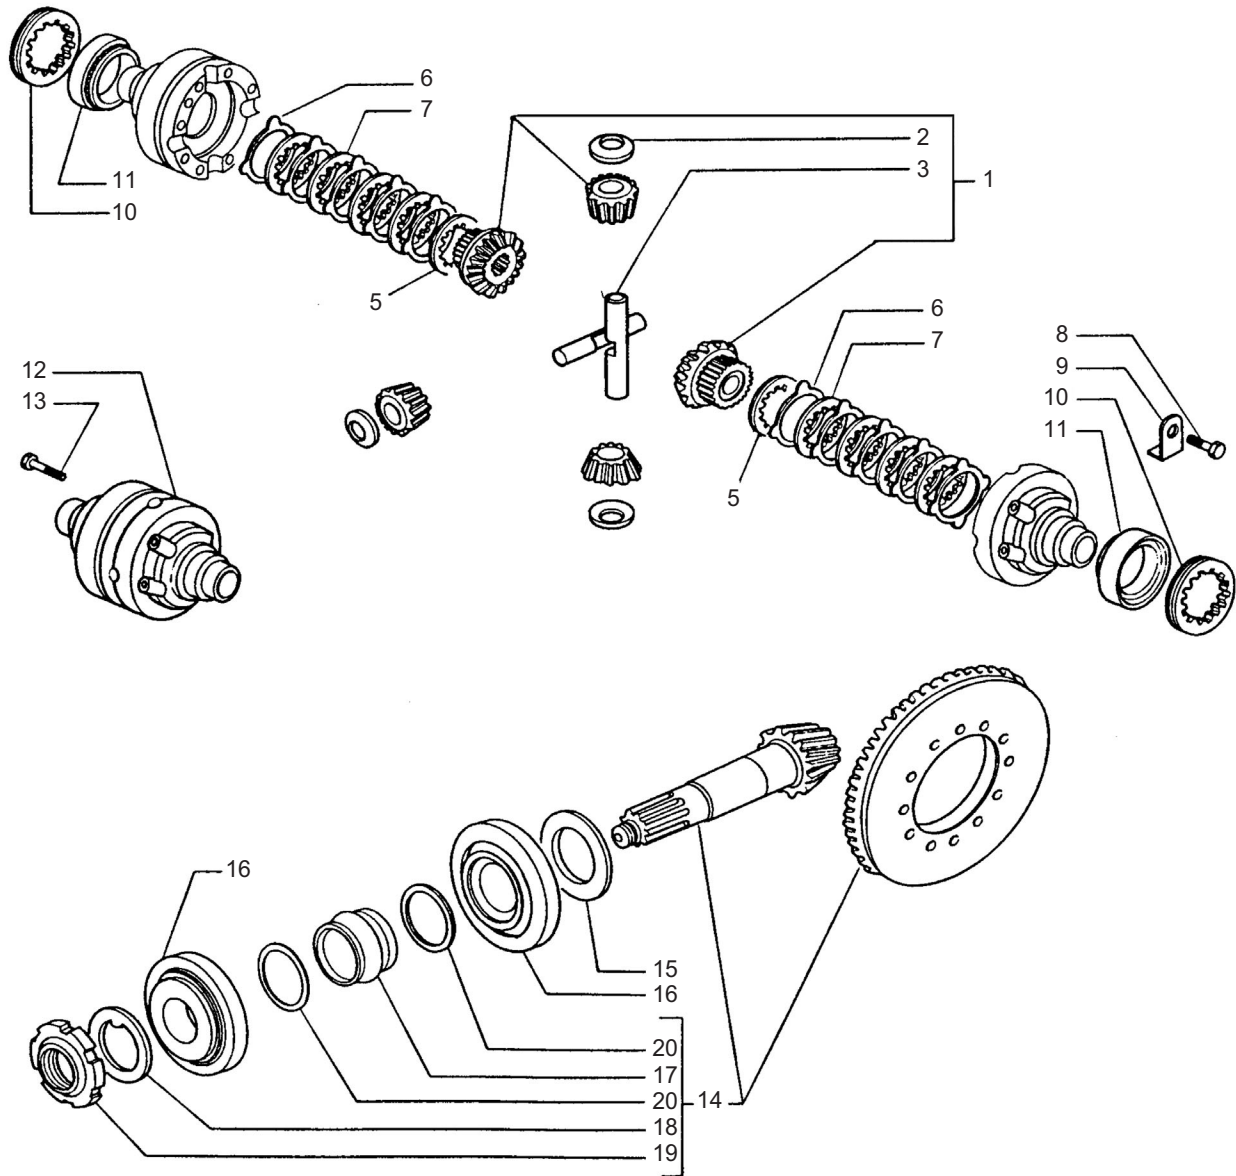

SPC002005

Differential - Front Axle


Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	89957.5	Differential, Complete			1
2	100485-56T	Washer			4
3	100485-55S	Pin	See 89957.4		2
5	64855.0	Disc			2
6	64856.8	Counter Disc			10
7	64857.6	Disc			8
8	66048.0	Screw			2
9	75793.0	Plate			2
10	100345-40J	Clamp			2
11	00909.2	Bearing	Was 000398-08U		2
12	92601.4	Housing			1
13	100338-39W	Screw			12
14	75778.1	Bevel Gear			1
15	75779.9	Shim	Thickness 2,50 mm		1
	75780.7	Shim 2.60mm	Thickness 2.60 mm		1
	75781.5	Shim 2.70mm	Thickness 2.70 mm		1
	75782.3	Shim 2.80mm	Thickness 2,80 mm		1
	75783.1	Shim 2.90mm	Thickness 2.90 mm		1
	75784.9	Shim 3.00mm	Thickness 3,00 mm		1
	75785.6	Shim 3.10mm	Thickness 3,10 mm		1
	75786.4	Shim 3.20mm	Thickness 3,20 mm		1
	75787.2	Shim 3.30mm	Thickness 3,30 mm		1
	75788.0	Shim	Thickness 3,40 mm		1
16	07187.8	Bearing			1
17	101288-39H	Spacer			1
18	100348-06X	Washer			1
19	100345-37F	Nut			1
20	64851.9	Washer			1



Steering - Front Axle

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	006458-01H	Grease Nipple			4
2	66042.3	Screw			16
3	66040.7	Axle			2
4	97412.1	Pivot			1
5	66041.5	Pin			2
6	01671.7	Nut			4
7	71064.0	Screw			4
8	63252.1	Nut			2
9	97411.3	Seal			1
10	75719.5	Bush			2
11	97409.7	Pivot			1
12	75726.0	Cylinder head			1
13	81515.9	Rod			1
14	75762.5	Seal Kit			1
15	63225.7	Connecting Rod			2
16	66044.9	Nut			2
17	75722.9	Tie Rod End			2
18	75723.7	Tie Rod Assembly			2
19	75725.2	Steering Cylinder			1
20	75724.5	Screw			3
21	75727.8	Detector			1
22	75728.6	Clamp			2
23	75730.2	Shaft			2
24	75731.0	Fork			2
25	75732.8	Housing			2
26	63250.5	U-joint			4
27	64839.4	Clip			16
28	75733.6	Fork			2
29	75734.4	Washer			2
30	75735.1	Washer			2
31	75736.9	Clip			2

Brakes - Front Axle

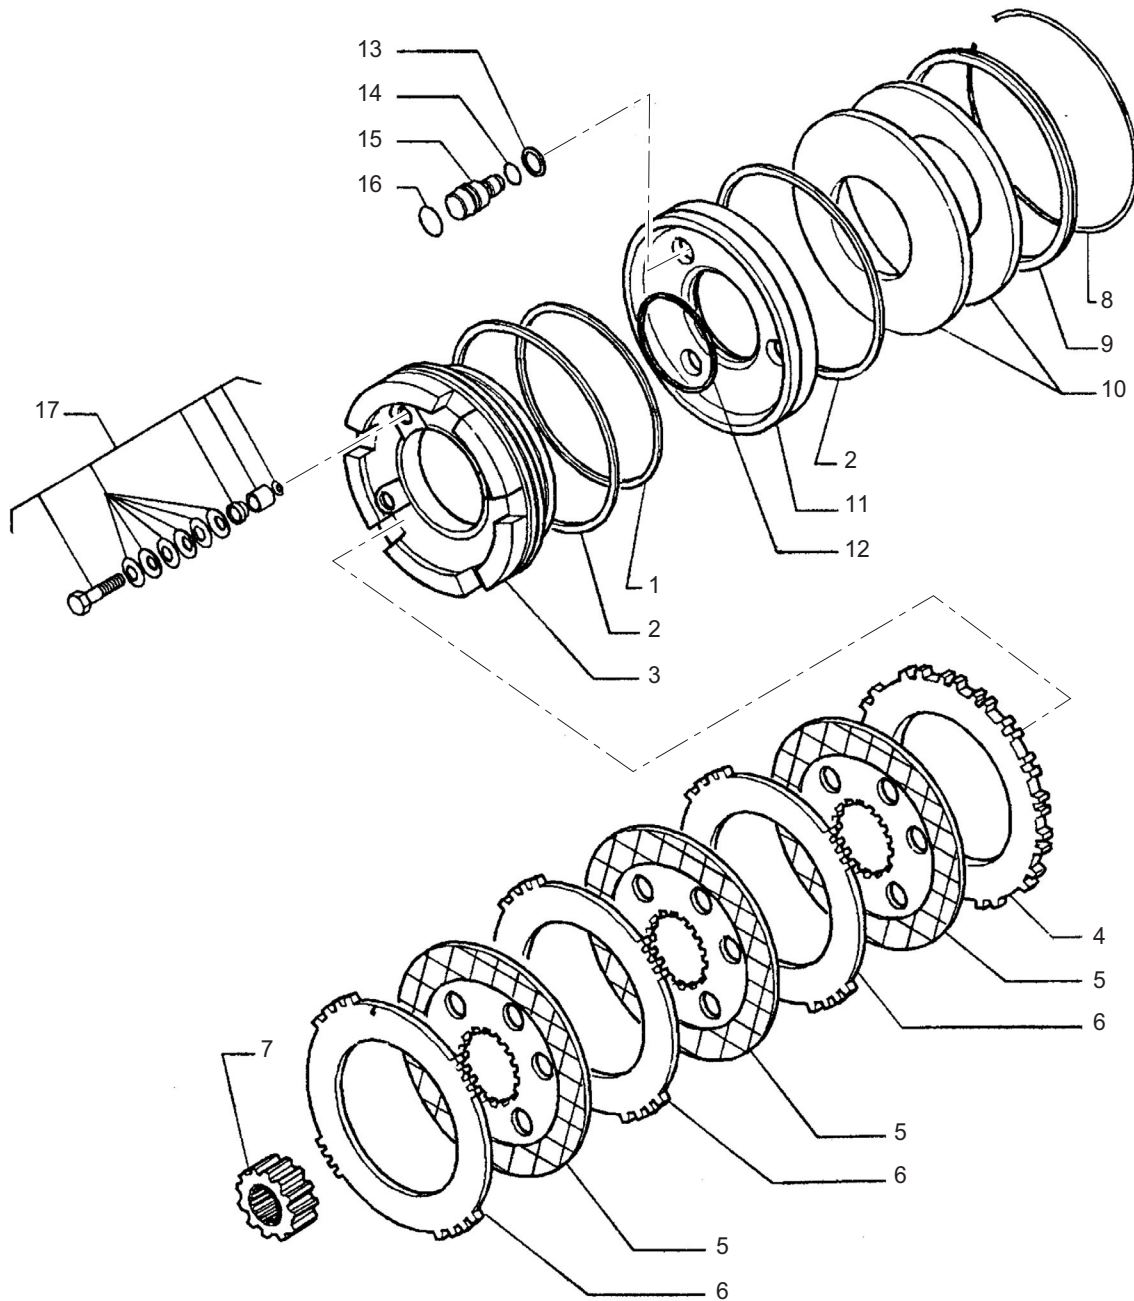


SPC002007

Brakes - Front Axle

[illegible]

Housing - Rear Axle

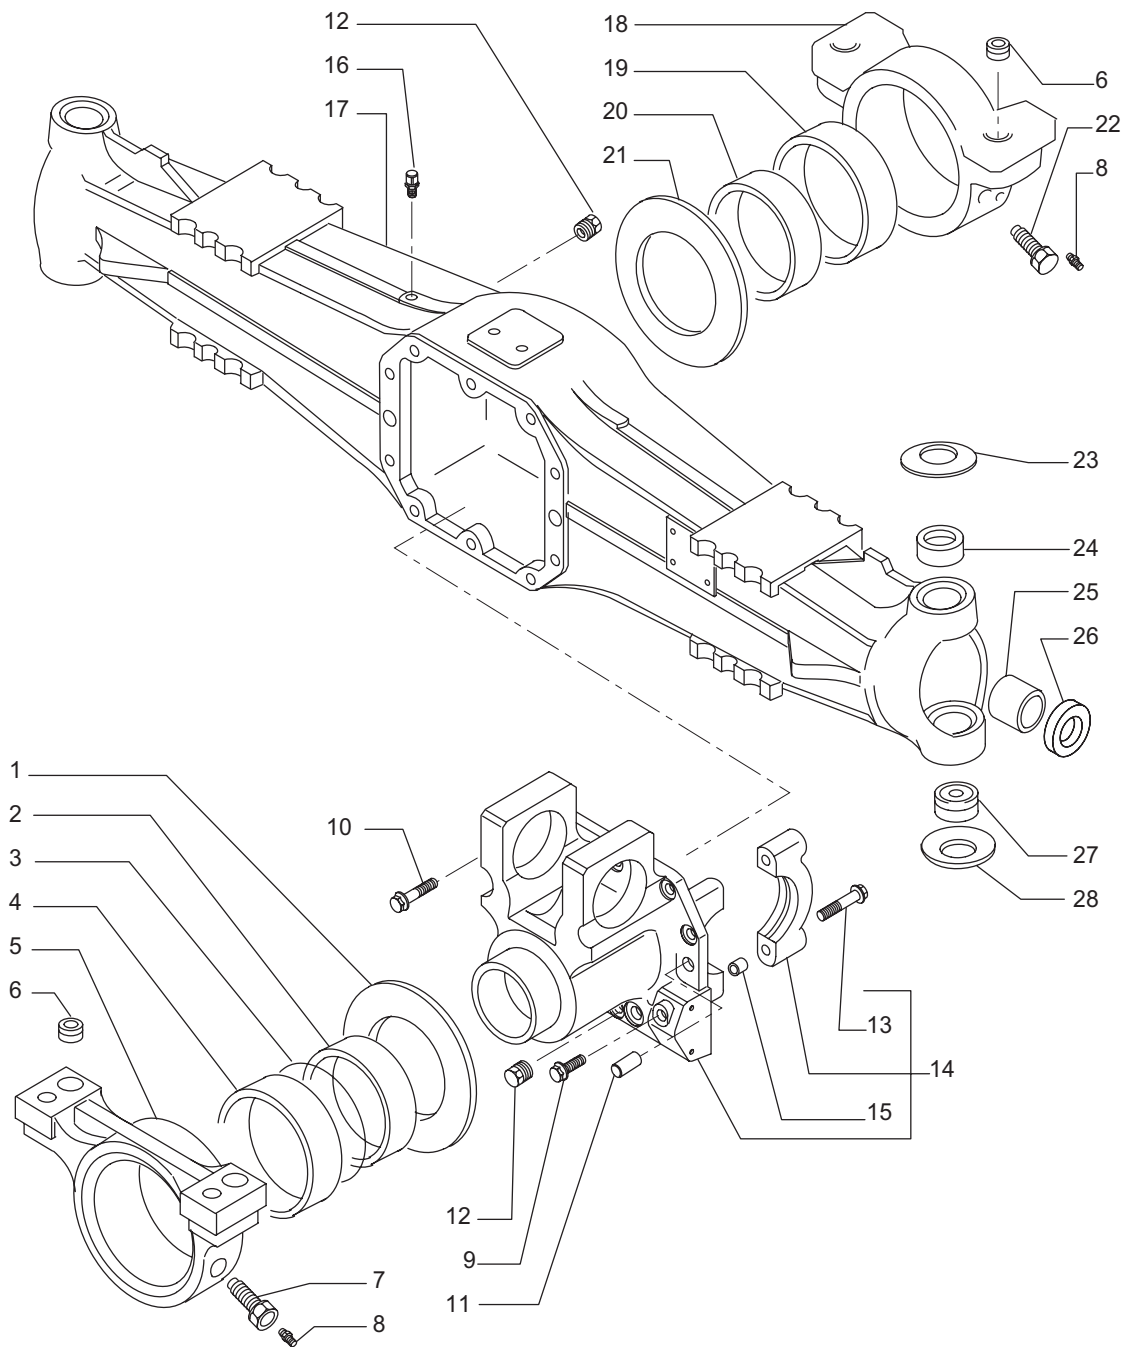


SPC002009

Housing - Rear Axle

Item	Part Number	Denomination	Remarks	Serial Number	Qty
	97762.9	Rear axle assy			1
1	75739.3	Washer			1
2	64827.9	Bushing			1
3	64829.5	O-ring			1
4	64828.7	Bushing			1
5	64830.3	Support			1
6	64824.6	Sleeve			4
7	64831.1	Screw			1
8	64823.8	Grease Nipple			2
9	100338-42A	Screw			5
10	89885.8	Screw			5
11	100273-25R	Safety Pin			2
12	100374-20P	Plug			2
13	89959.1	Screw			4
14	81544.9	Support			1
15	101288-10B	Bushing			4
16	100505-24H	Breather			1
17	97408.9	Body			1
18	75746.8	Support			1
19	75747.6	Bushing			1
20	75748.4	Bushing			1
21	75749.2	Washer			1
22	64822.0	Screw			1
23	66039.9	Washer			2
24	6910722	Bush			2
25	100288-63N	Washer			2
26	98660.4	Seal			2
27	66035.7	Bearing			2
28	66033.2	Washer			2

Differential - Rear Axle

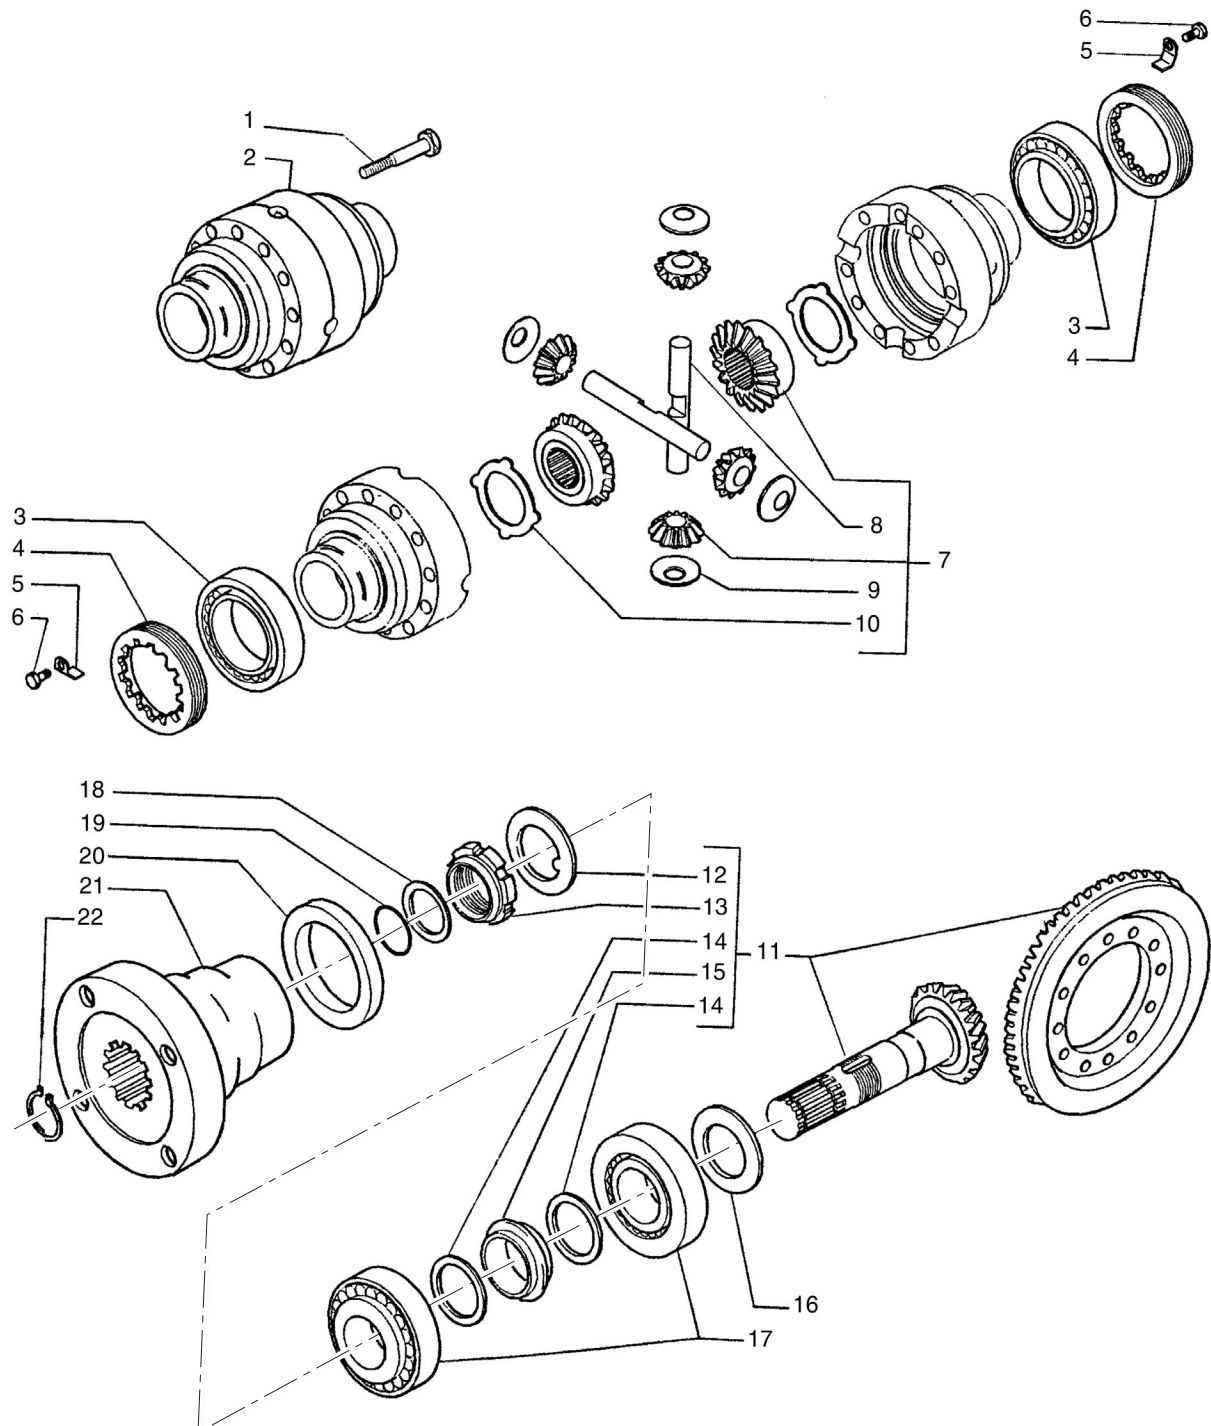


SPC002010

Differential - Rear Axle

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	100338-39W	Screw			12
2	92601.4	Housing			1
3	00909.2	Bearing			2
4	100345-40J	Clamp			2
5	75775.7	Stop Plate			2
6	66048.0	Screw			2
7	71209.1	Differential Assembly	Pos. 7 to 10		1
8	100485-55S	Pin	See 71209.1		2
9	100485-56T	Washer			4
10	75789.8	Washer			2
11	75791.4	Ring Gear	Pos. 11 to 15		1
12	100348-06X	Washer			1
13	100345-37F	Nut			1
14	64851.9	Washer			2
15	101288-39H	Spacer			1
16	75779.9	Shim	Thickness: 2.50 mm		2
	75780.7	Shim 2.60mm	Thickness: 2.60 mm		2
	75781.5	Shim 2.70mm	Thickness: 2.70 mm		2
	75782.3	Shim 2.80mm	Thickness: 2.80 mm		2
	75783.1	Shim 2.90mm	Thickness: 2,90 mm		2
	75784.9	Shim 3.00mm	Thickness: 3,00 mm		2
	75785.6	Shim 3.10mm	Thickness: 3,10 mm		2
	75786.4	Shim 3.20mm	Thickness: 3.20 mm		2
	75787.2	Shim 3.30mm	Thickness: 3.30 mm		2
	75788.0	Shim	Thickness: 3.40 mm		2
17	07187.8	Bearing			2
18	75802.9	Washer			1
19	75728.6	Clamp			1
20	97410.5	Seal			1
21	75806.0	Bracket			1
22	75805.2	Clip			1

Steering - Rear Axle

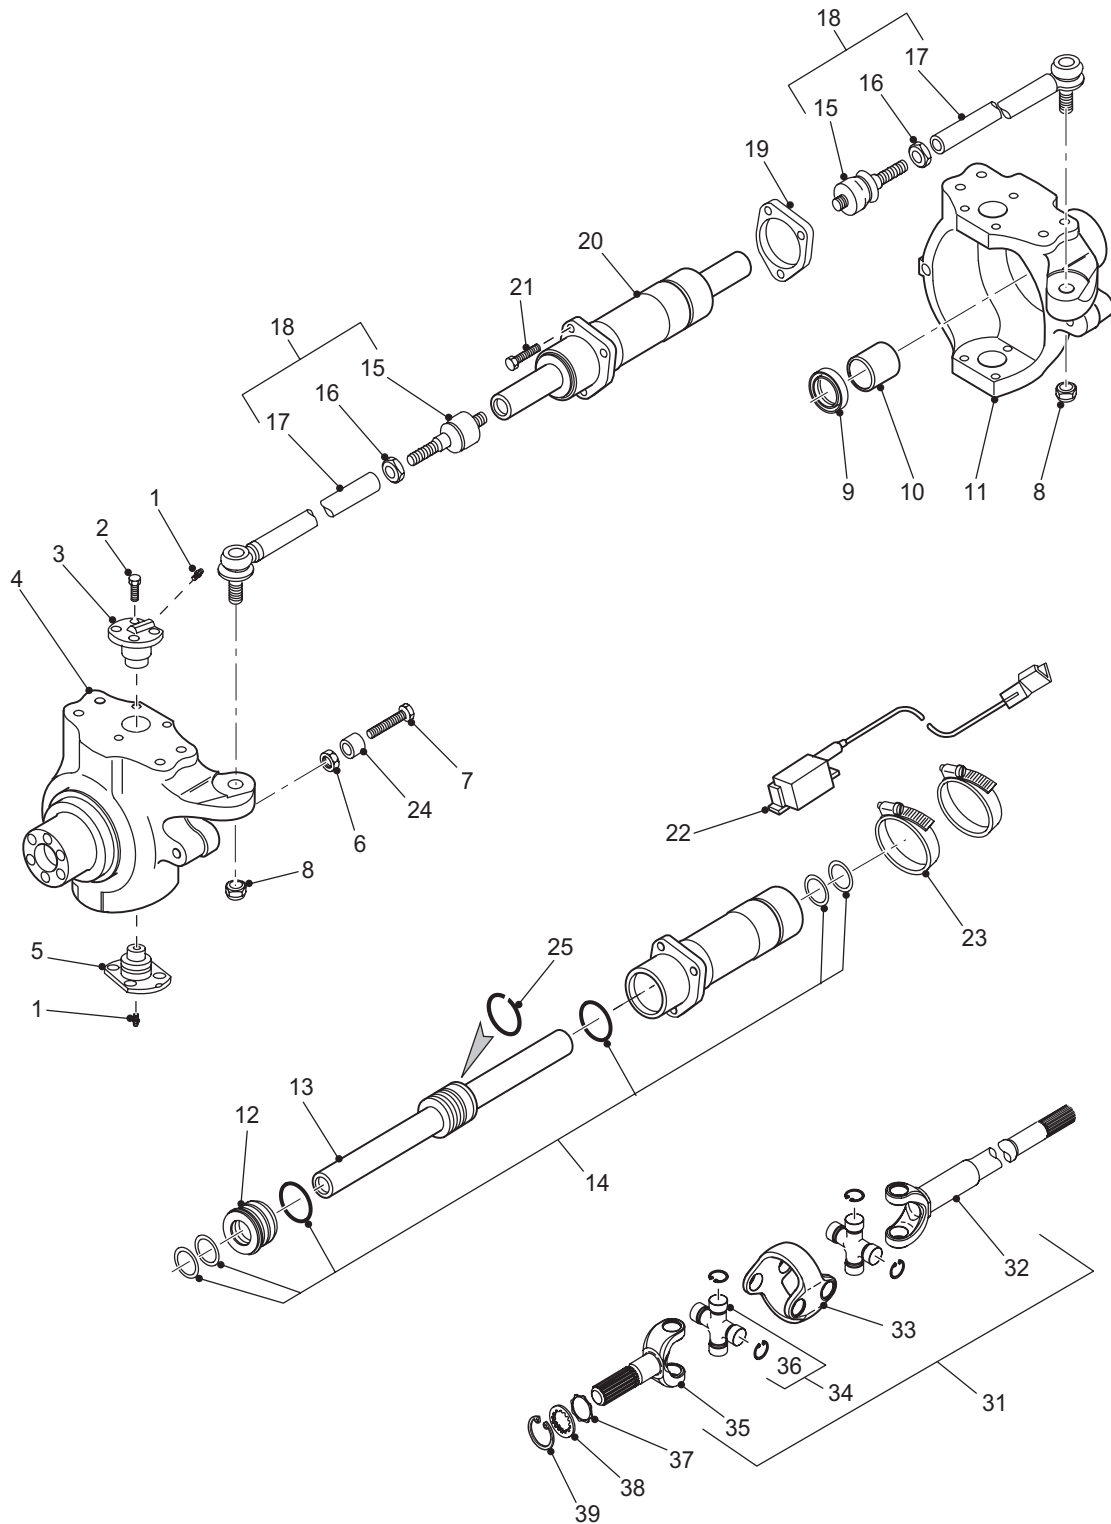


SPC002011

Steering - Rear Axle

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	006458-01H	Grease Nipple			4
2	71058.2	Screw			12
3	66040.7	Axle			2
4	97412.1	Pivot			1
5	66041.5	Pin			2
6	01671.7	Nut			4
7	71064.0	Screw			4
8	63252.1	Nut			2
9	97411.3	Seal			1
10	75719.5	Bush			2
11	97409.7	Pivot			1
12	75726.0	Cylinder head			1
13	81515.9	Rod			1
14	75762.5	Seal Kit			1
15	63225.7	Connecting Rod			2
16	66044.9	Nut			2
17	75722.9	Tie Rod End			2
18	75723.7	Tie Rod Assembly			2
19	81549.8	Bracket			1
20	75758.3	Steering Cylinder			1
21	75840.9	Screw			3
22	75760.9	Detector			1
23	75728.6	Clamp			1
24	66017.5	Bush			4
25	6912587	Rubber band	Was 89920.3		1
31	75730.2	Shaft			2
32	75731.0	Fork			2
33		Body			2
34	40825.0	Bracing			4
35	75733.6	Fork			2
36	64839.4	Clip			16

Steering - Rear Axle

Recurrence of previous drawing

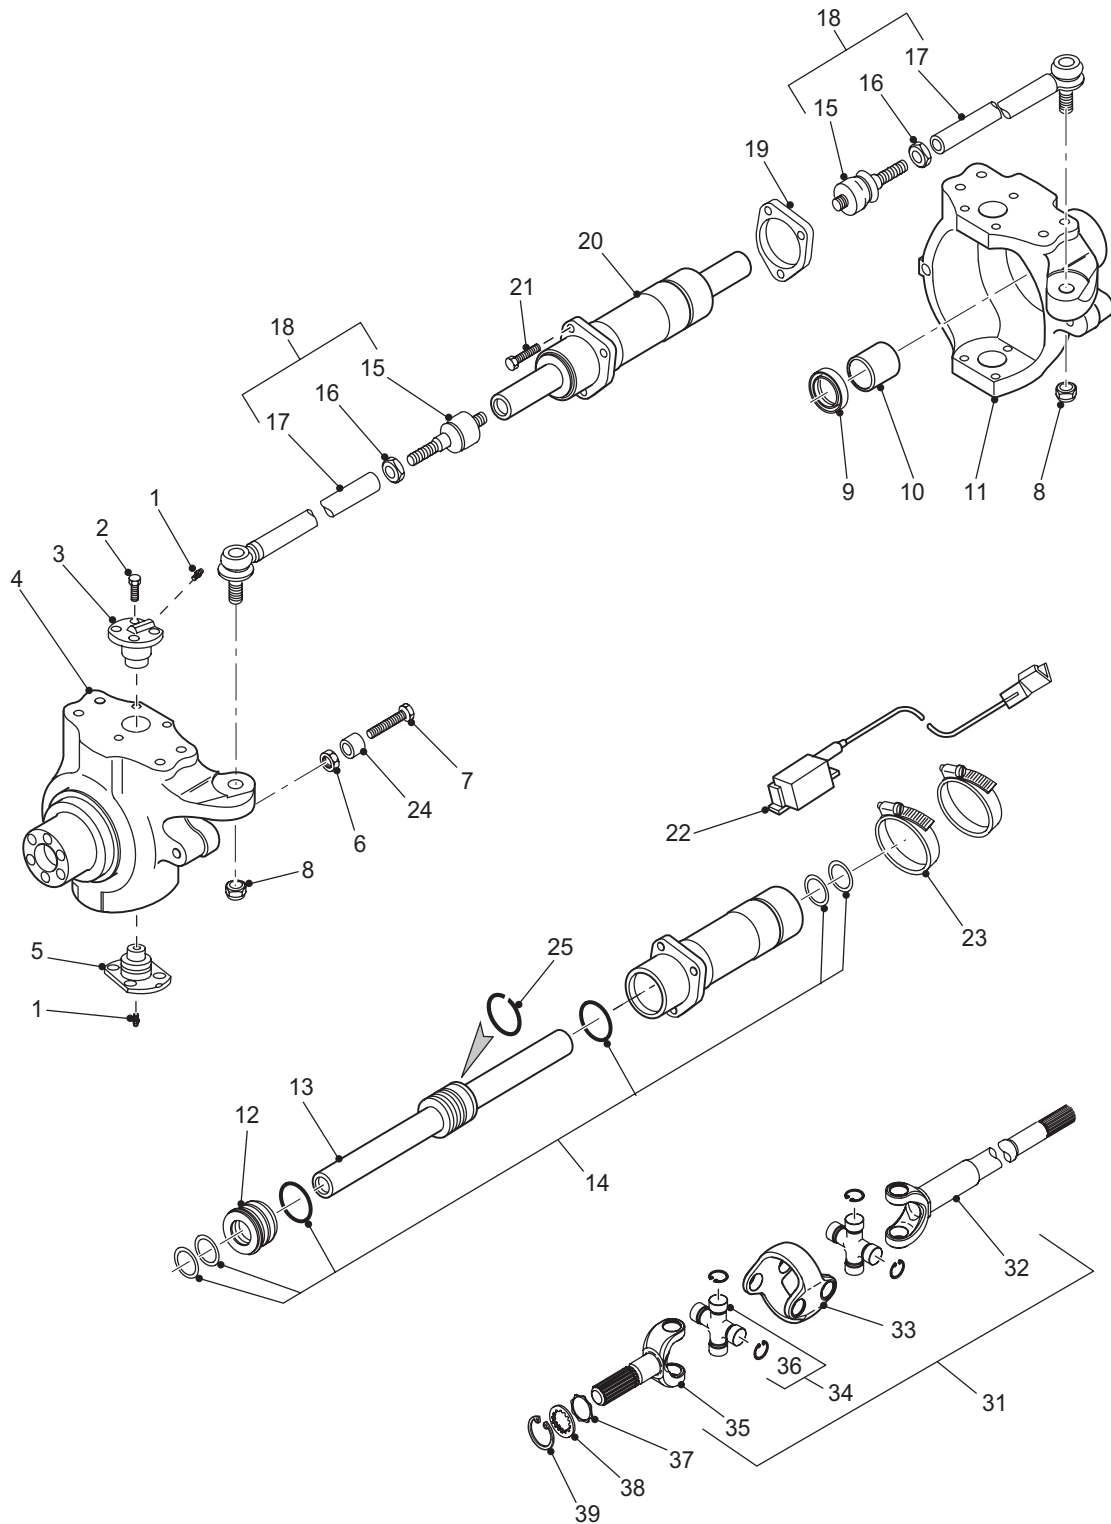


SPC002011

Steering - Rear Axle

[illegible]

Boom Hydraulic Supply T40140

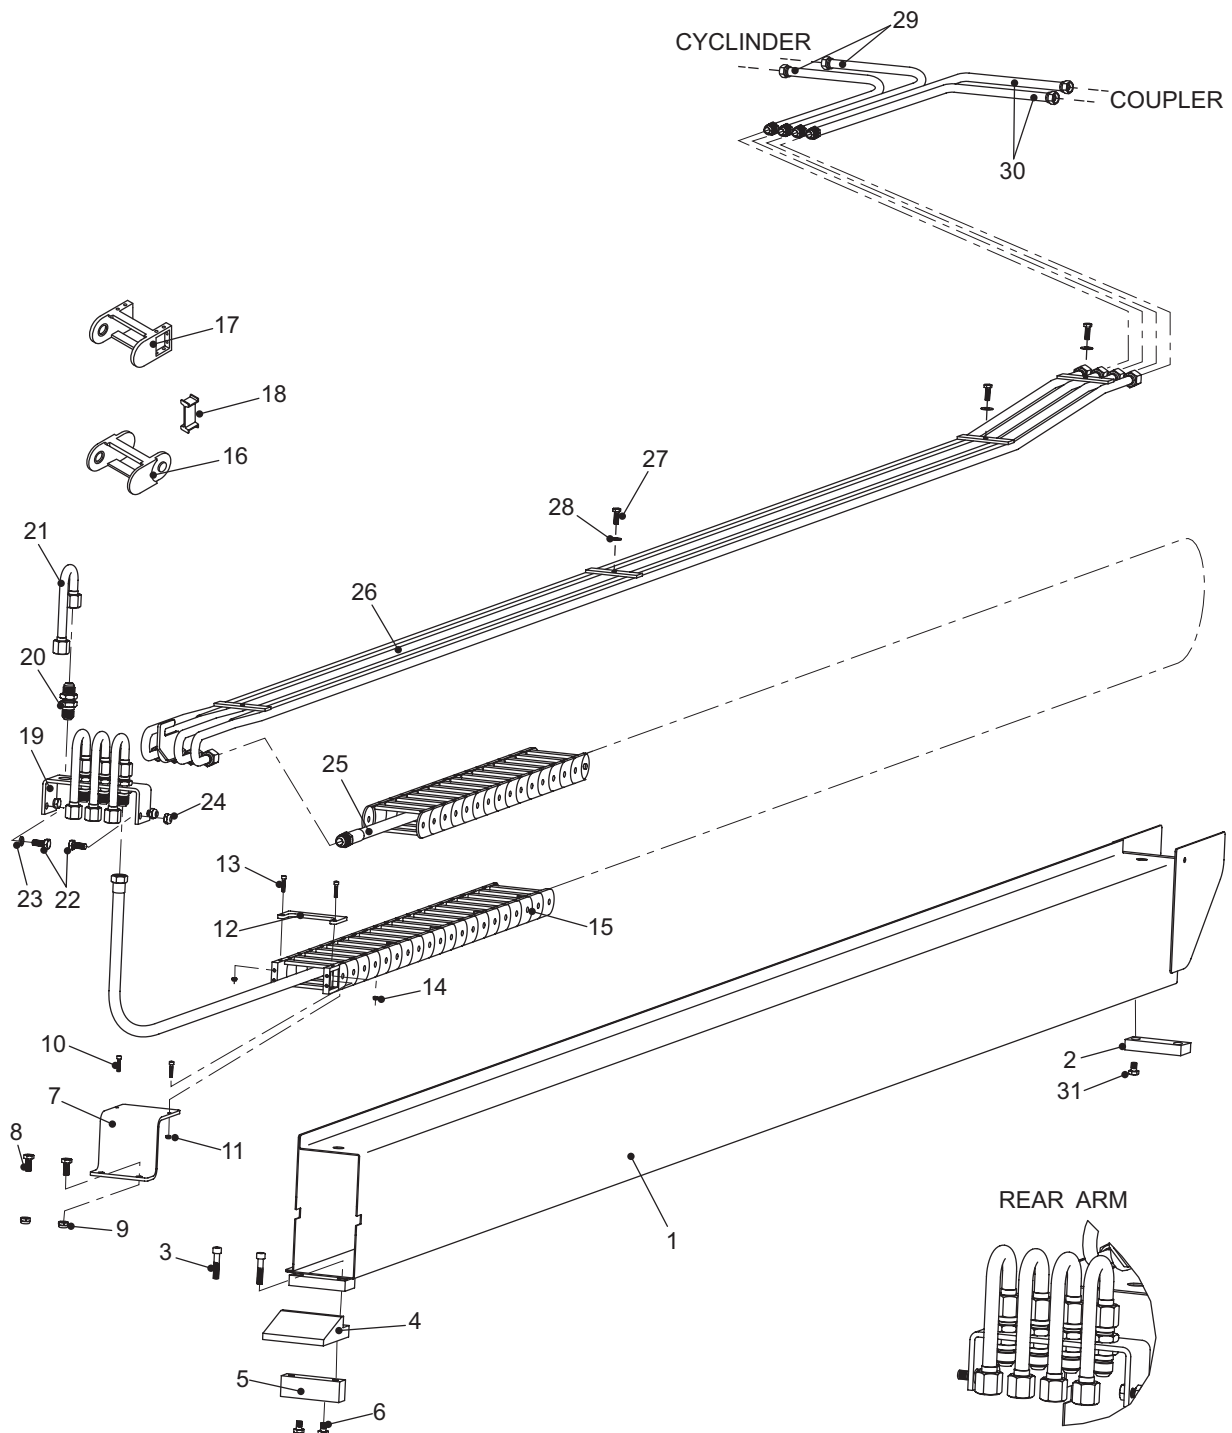

SPC003001


Boom Hydraulic Supply

T40140

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6910219	Channel			1
2	6910307	Shoe			1
3	54009.6	Screw			2
4	6908950	Shoe			1
5	6908951	Spacer			1
6	01603.0	Screw			2
7	6908990	Plate			1
8	01605.5	Screw			2
9	100345-09A	Nut			2
10	33786.5	Screw			2
11	100345-05V	Nut			2
12	6909681	Plate			1
13	33786.5	Screw			2
14	100345-05V	Nut			2
15	95609.4	Chain	Pos. 16 + 17 + 18		1
16	95571.6	Link			157
17	95572.4	Link			1
18	95088.1	Chain spacer			38
19	95605.2	Support			1
20	100375-52H	Adapter			4
21	85963.7	Pipe			4
22	01605.5	Screw			4
23	01720.2	Washer			2
24	100345-09A	Nut			2
25	95020.4	Hose			4
26	95598.9	Pipe assembly			1
27	01597.4	Screw			3
28	01718.6	Washer			3
29	80407.0	Hose			2
30	76401.9	Hose			2
31	95502.1	Screw			2

Boom Hydraulic Supply T40140

Recurrence of previous drawing

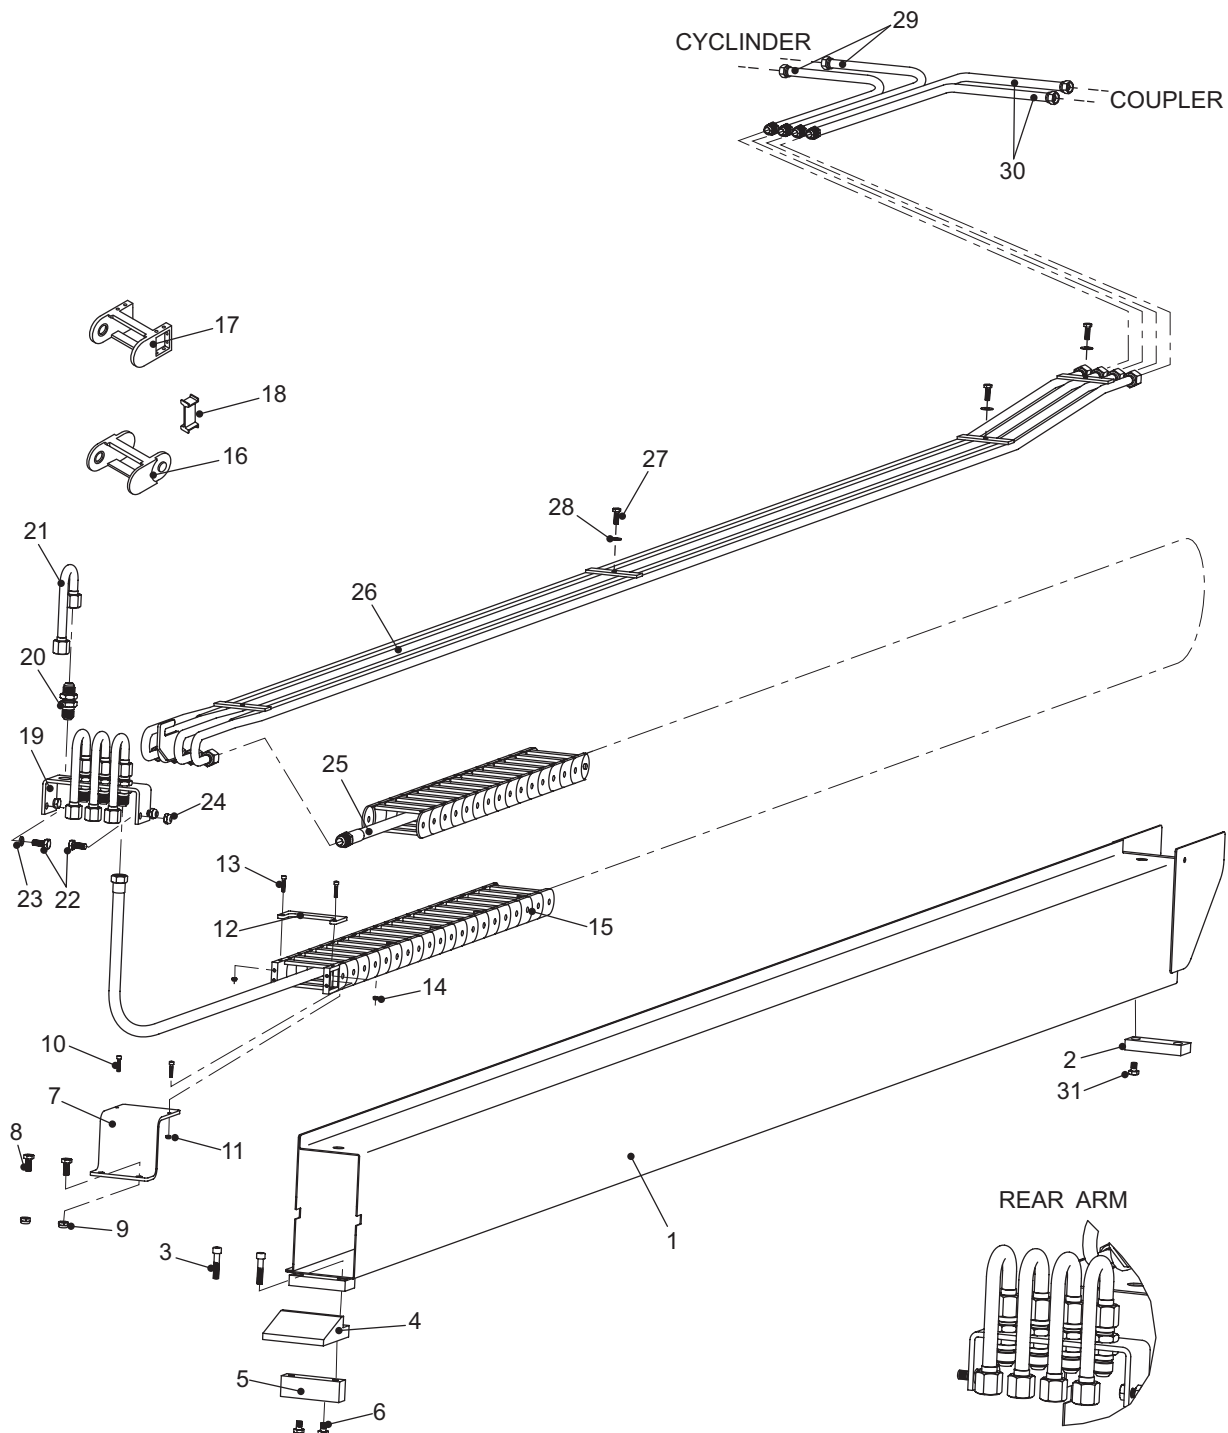


SPC003001

Boom Hydraulic Supply

T40140

[illegible]

Boom Hydraulic Supply T40170

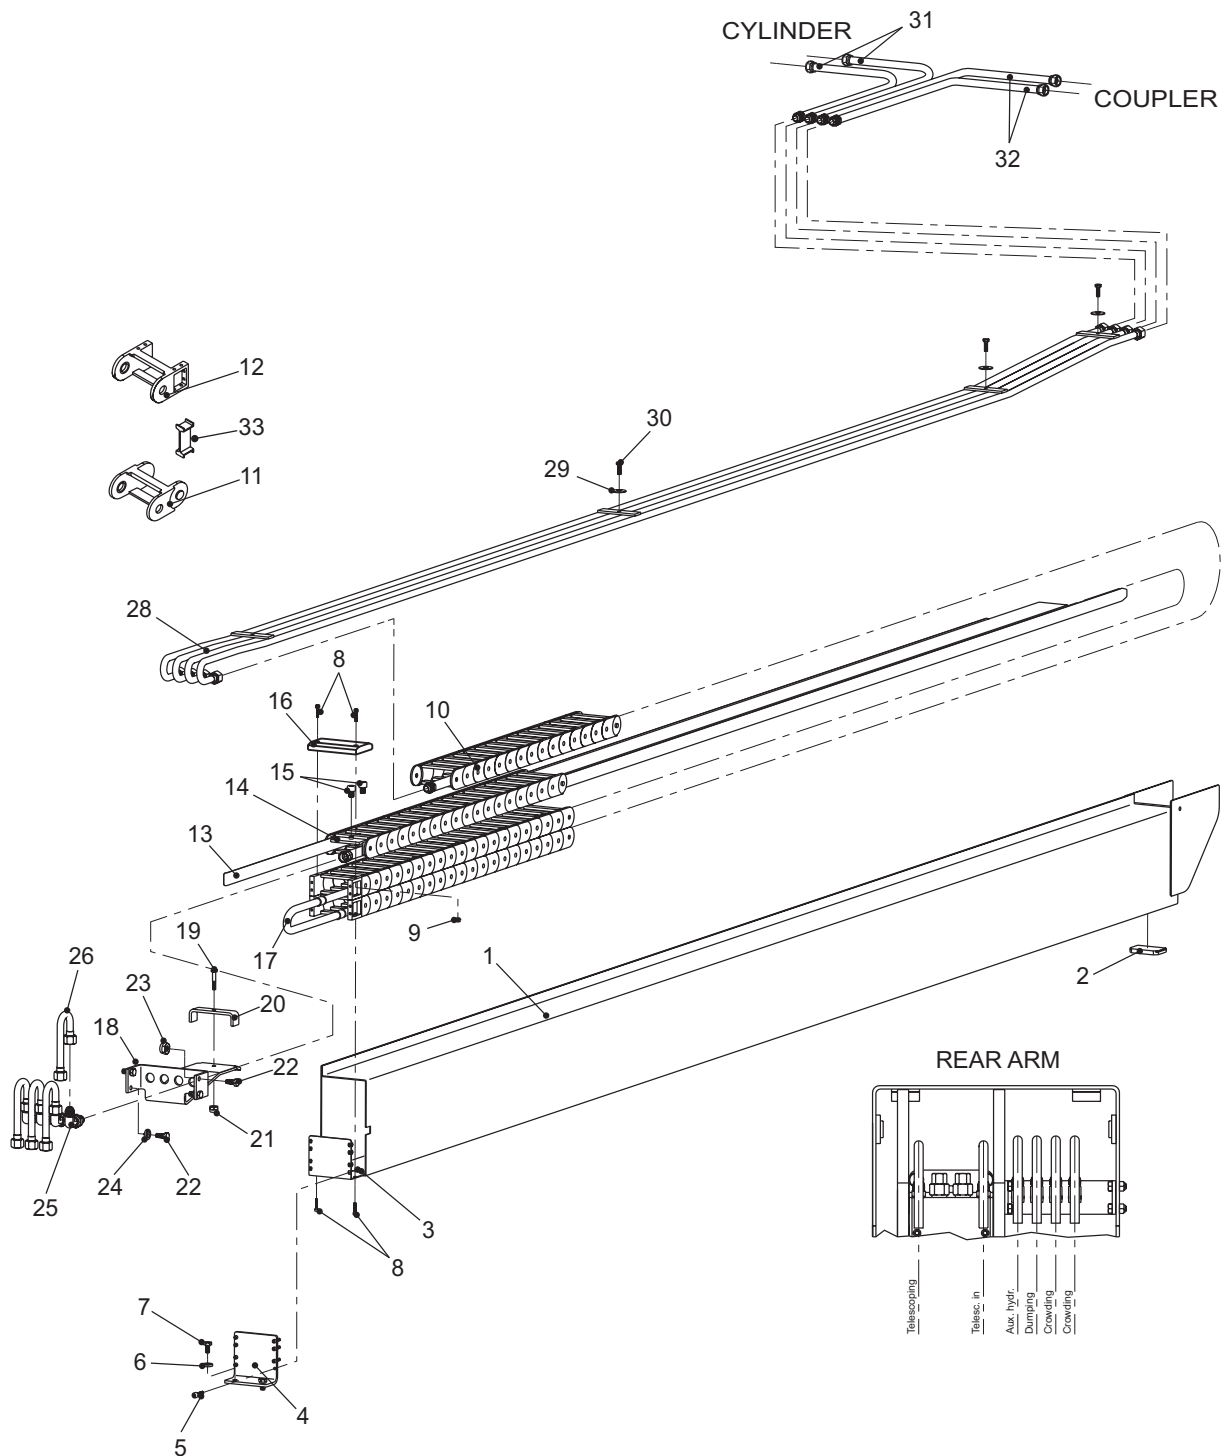

SPC003002


Boom Hydraulic Supply

T40170

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6910220	Channel	Was 6908292		1
2	95016.2	Shoe			1
3	100345-05V	Nut			8
4	95015.4	Angle piece			1
5	33786.5	Screw			8
6	01720.2	Washer			2
7	01604.8	Screw			2
8	33786.5	Screw			4
9	100345-05V	Nut			4
10	95609.4	Chain	Pos. 11 + 12 + 33		2
11	95571.6	Link			157
12	95572.4	Link			1
13	96969.1	Guide			2
14	97887.4	Rubber band			1
15	97949.2	Screw			2
16	97868.4	Shoe			1
17	6908245	Combinated hose			4
18	95086.5	Support			1
19	01579.2	Screw			1
20	95090.7	Plate			1
21	51851.4	Nut			1
22	01605.5	Screw			4
23	100345-09A	Nut			2
24	01720.2	Washer			2
25	010370-57L	Elbow			4
26	85963.7	Pipe			4
28	95598.9	Pipe assembly			1
29	01718.6	Washer			3
30	01597.4	Screw			3
31	80407.0	Hose			2
32	76401.9	Hose			2

Boom Hydraulic Supply T40170

Recurrence of previous drawing

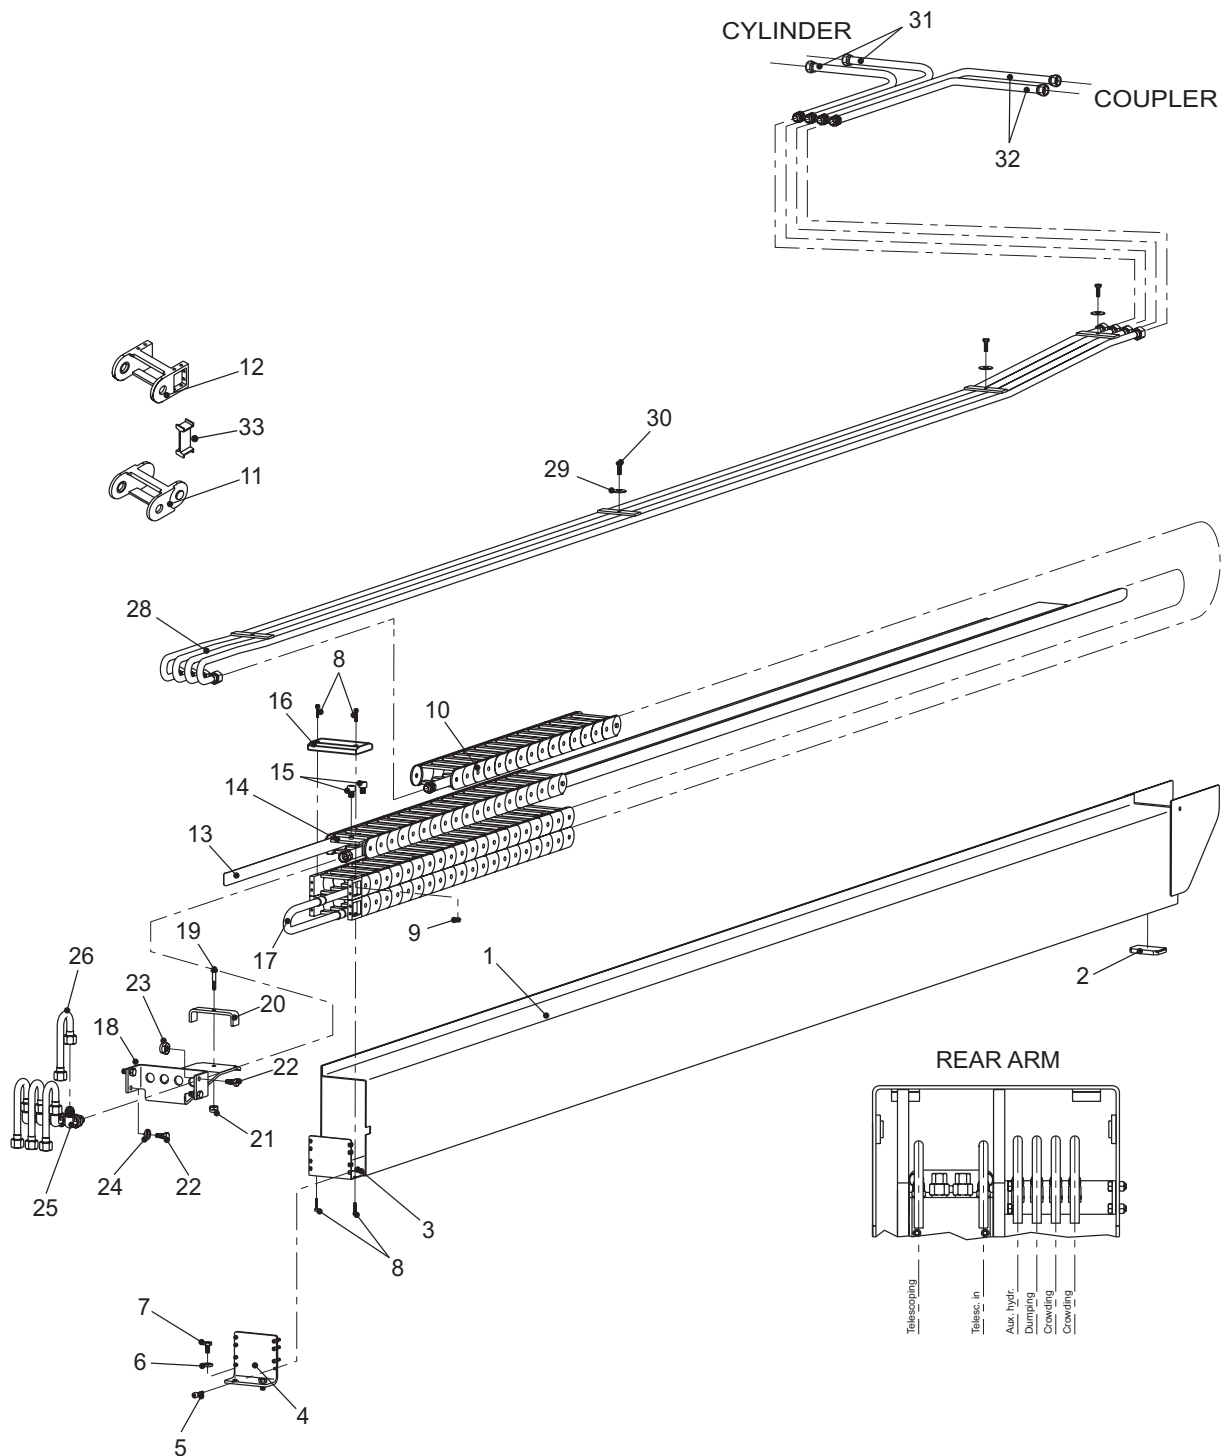


SPC003002

Boom Hydraulic Supply
T40170

[illegible]

Boom Hydraulic Supply from Control Valve

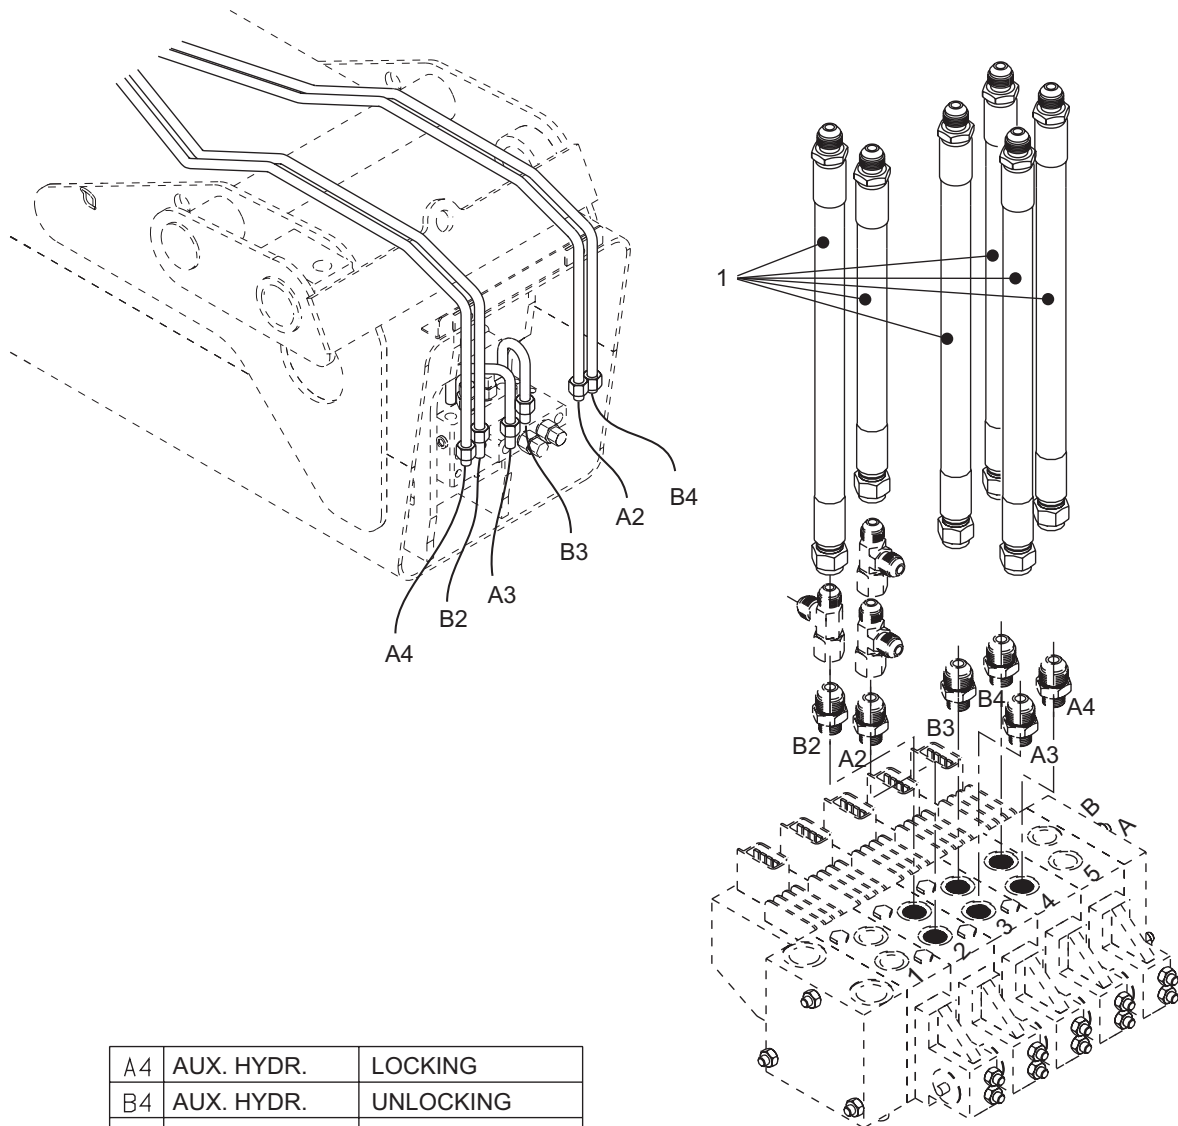


A4	AUX. HYDR.	LOCKING
B4	AUX. HYDR.	UNLOCKING
A3	TELESCOPING	RETRACTION
B3	TELESCOPING	EXTENSION
A2	TILTING	DUMPING
B2	TILTING	CROWDING

SPC003003

Boom Hydraulic Supply from Control Valve

[illegible]

Lift & Compensation Cylinder Installation

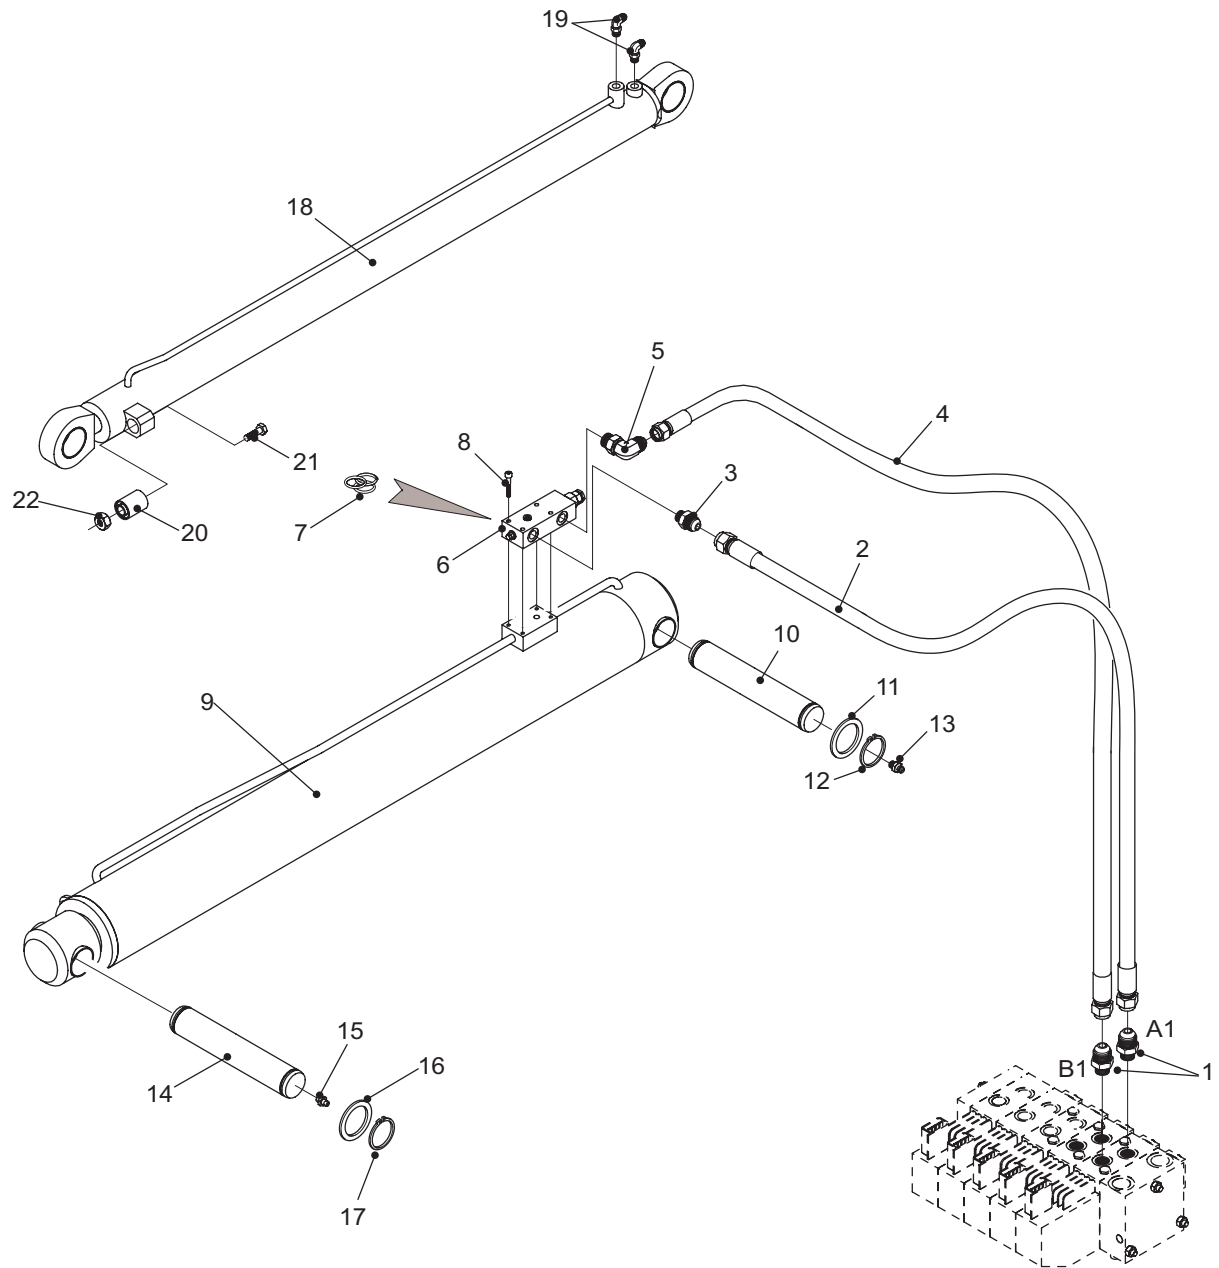


SPC003004

Lift & Compensation Cylinder Installation

[illegible]

Telescope Cylinder Installation T40140

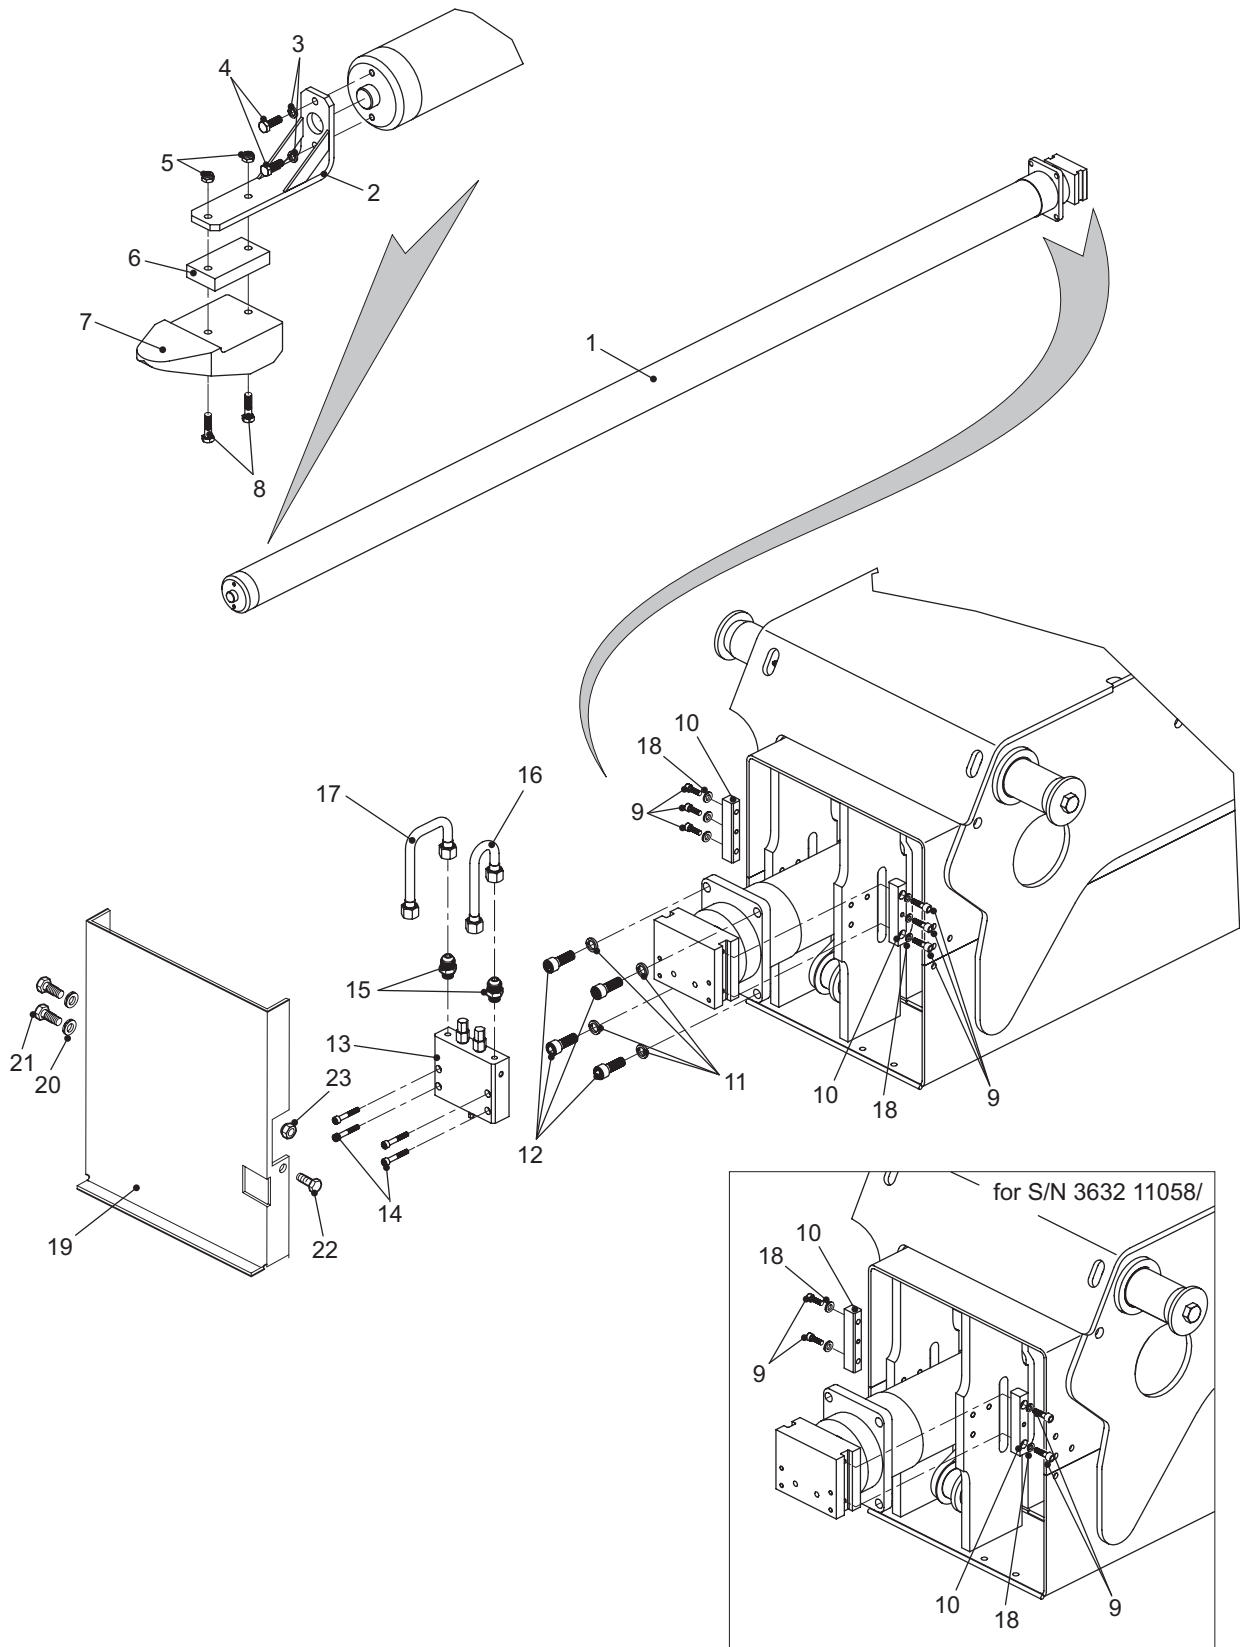


SPC003005

Telescope Cylinder Installation

T40140

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	NAP	Cylinder	Order now 6911234 ; Was 97733.0	3632 11058 /	1
	6911234	Cylinder	See page 167 for details.	/ 3632 11059	1
2	95596.3	Support			1
3	11689.7	Washer			2
4	01613.9	Screw			2
5	000345-96E	Nut			2
6	95044.4	Shim			1
7	95549.2	Shoe			1
8	49439.3	Screw			2
9	007329-09Q	Screw	Was 01634.5	3632 11058 /	4
	100329-07J	Screw	Torque 70 Nm	/ 3632 11059	6
10	6910841	Key	Was 95516.1	3632 11058 /	2
	6911235	Key		/ 3632 11059	2
11	13778.6	Washer			4
12	97851.0	Screw			4
13	95318.2	Valve			1
14	88271.2	Screw			4
15	014375-30H	Adapter			2
16	85963.7	Pipe			1
17	85962.9	Pipe			1
18	89519.3	Washer		3632 11058 /	4
	89516.9	Washer		/ 3632 11059	6
19	6911144	Plate			1
20	89516.9	Washer			2
21	01604.8	Screw			2
22	01605.5	Screw			1
23	100345-09A	Nut			1

Telescope Cylinder Installation T40170

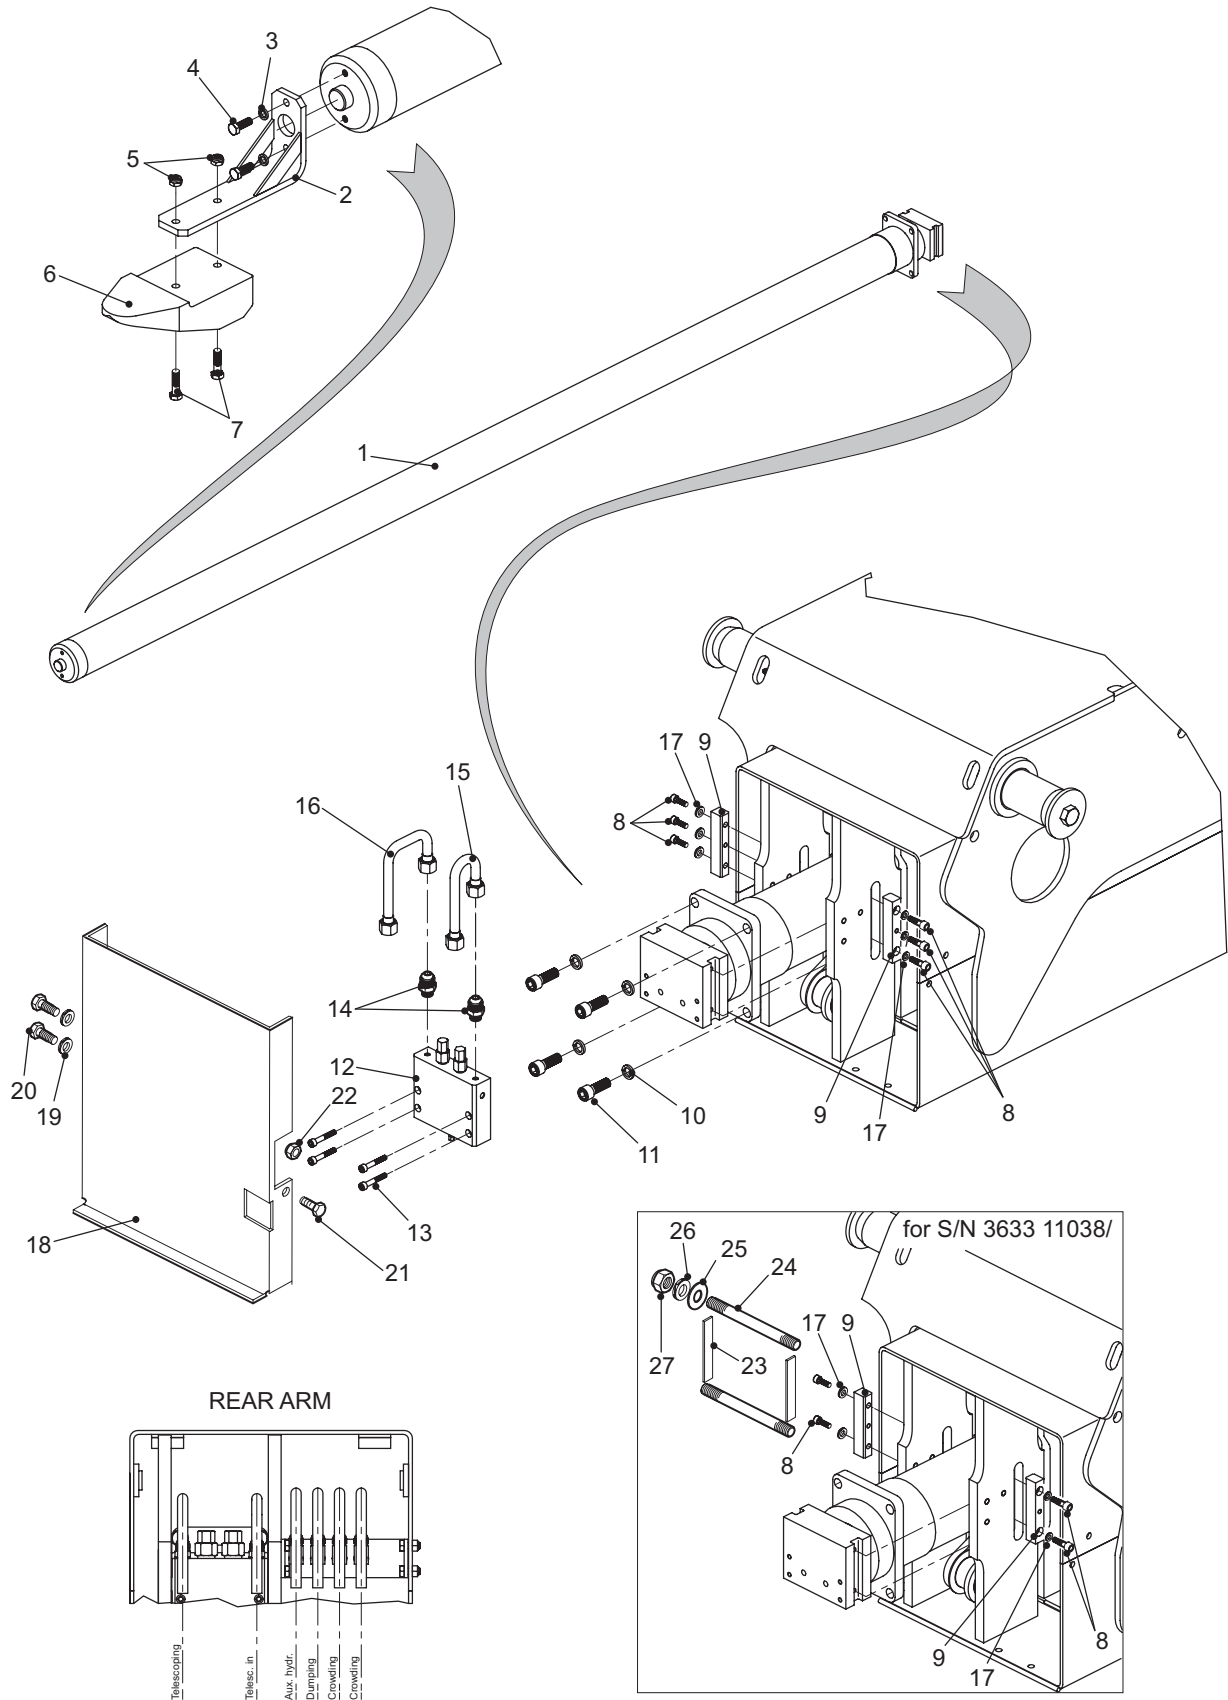


SPC003006

Telescope Cylinder Installation

T40170

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	NAP	Cylinder	Order now 6911233 ; Was 97734.8	3633 11038 /	1
	6911233	Cylinder	See page 169 for details.	/ 3633 11039	1
2	95596.3	Support			1
3	11689.7	Washer			2
4	01613.9	Screw			2
5	000345-96E	Nut			2
6	95549.2	Shoe			2
7	01528.9	Screw			2
8	007329-09Q	Screw	Was 01634.5	3633 11038 /	4
	100329-07J	Screw	Torque 70 Nm	/ 3633 11039	6
9	6910841	Key	Was 95516.1	3633 11038 /	2
	6911235	Key		/ 3633 11039	2
10	13778.6	Washer			4
11	97851.0	Screw			4
12	95318.2	Valve			1
13	88271.2	Screw			4
14	014375-30H	Adapter			2
15	85963.7	Pipe			1
16	98962.9	Pipe			1
17	89519.3	Washer		3633 11038 /	4
	89516.9	Washer		/ 3633 11039	6
18	6911147	Plate			1
19	89516.9	Washer			2
20	01604.8	Screw			2
21	01605.5	Screw			1
22	100345-09A	Nut			1
23	6913111	Plate		3633 11003/	2
24	6913110	Rod		3633 11003/	2
25	98898.0	Washer		3633 11003/	4
26	89332.1	Washer		3633 11003/	4
27	97850.2	Nut		3633 11003/	4

Steering Hoses & Fittings (without damper)

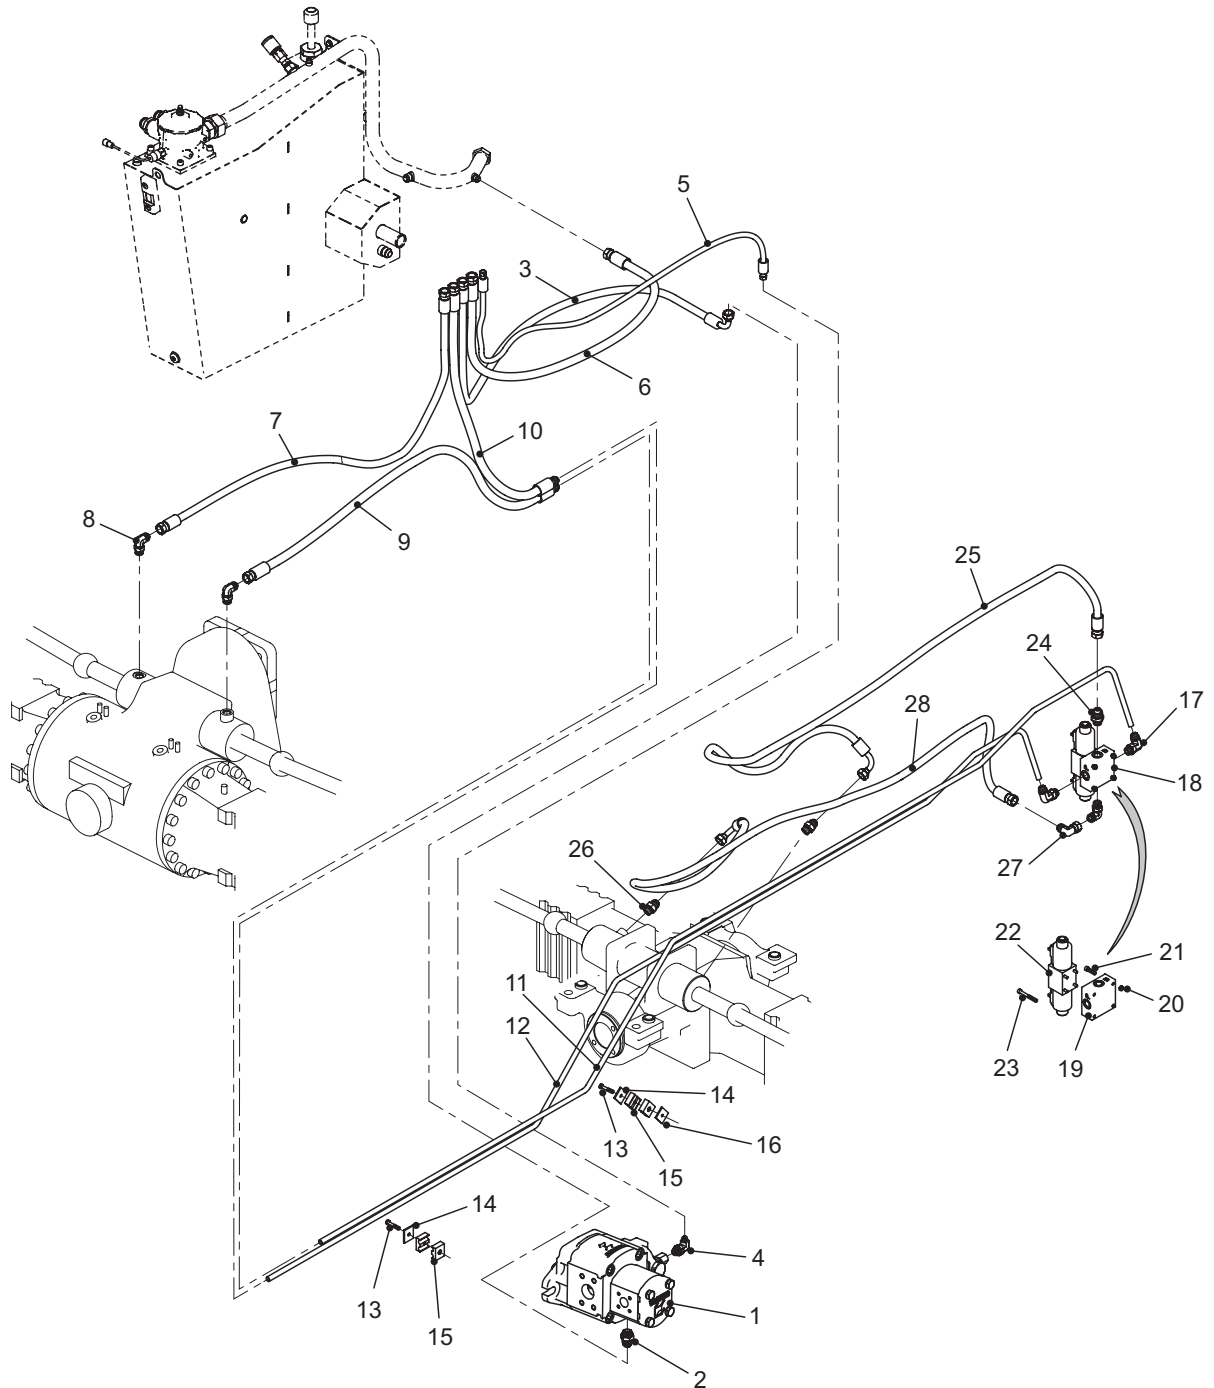


SPC003007

Steering Hoses & Fittings (without damper)

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6909447	Hydraulic pump	See page 185 for details.		1
2	100375-38S	Adapter			1
3	101319-27P	Hose			1
4	008372-01B	Elbow			1
5	79148.3	Hose			1
6	79147.5	Hose	Was 6912448		1
7	79147.5	Hose			1
8	96333.0	Elbow			2
9	88724.0	Hose			1
10	88723.2	Hose			1
11	90237.9	Hydraulic pipe			1
12	90238.7	Hydraulic pipe			1
13	100338-23F	Screw			2
14	100212-53R	Plate			2
15	100369-18T	Split Clamp			4
16	100281-55T	Plate			1
17	010370-94B	Elbow			3
18	98347.8	Steering block	Pos. 19 + 22		1
19	98348.6	Support			1
20	100345-06W	Nut			4
21	01626.1	Screw			4
22	98349.4	Steering selector valve	Pos. 22 + 23		1
23	79160.8	Screw			4
24	100375-38S	Adapter			1
25	72281.9	Hose			1
26	89503.7	Adapter			2
27	008372-01B	Elbow			1
28	72281.9	Hose			1

Steering Hoses & Fittings (with damper)

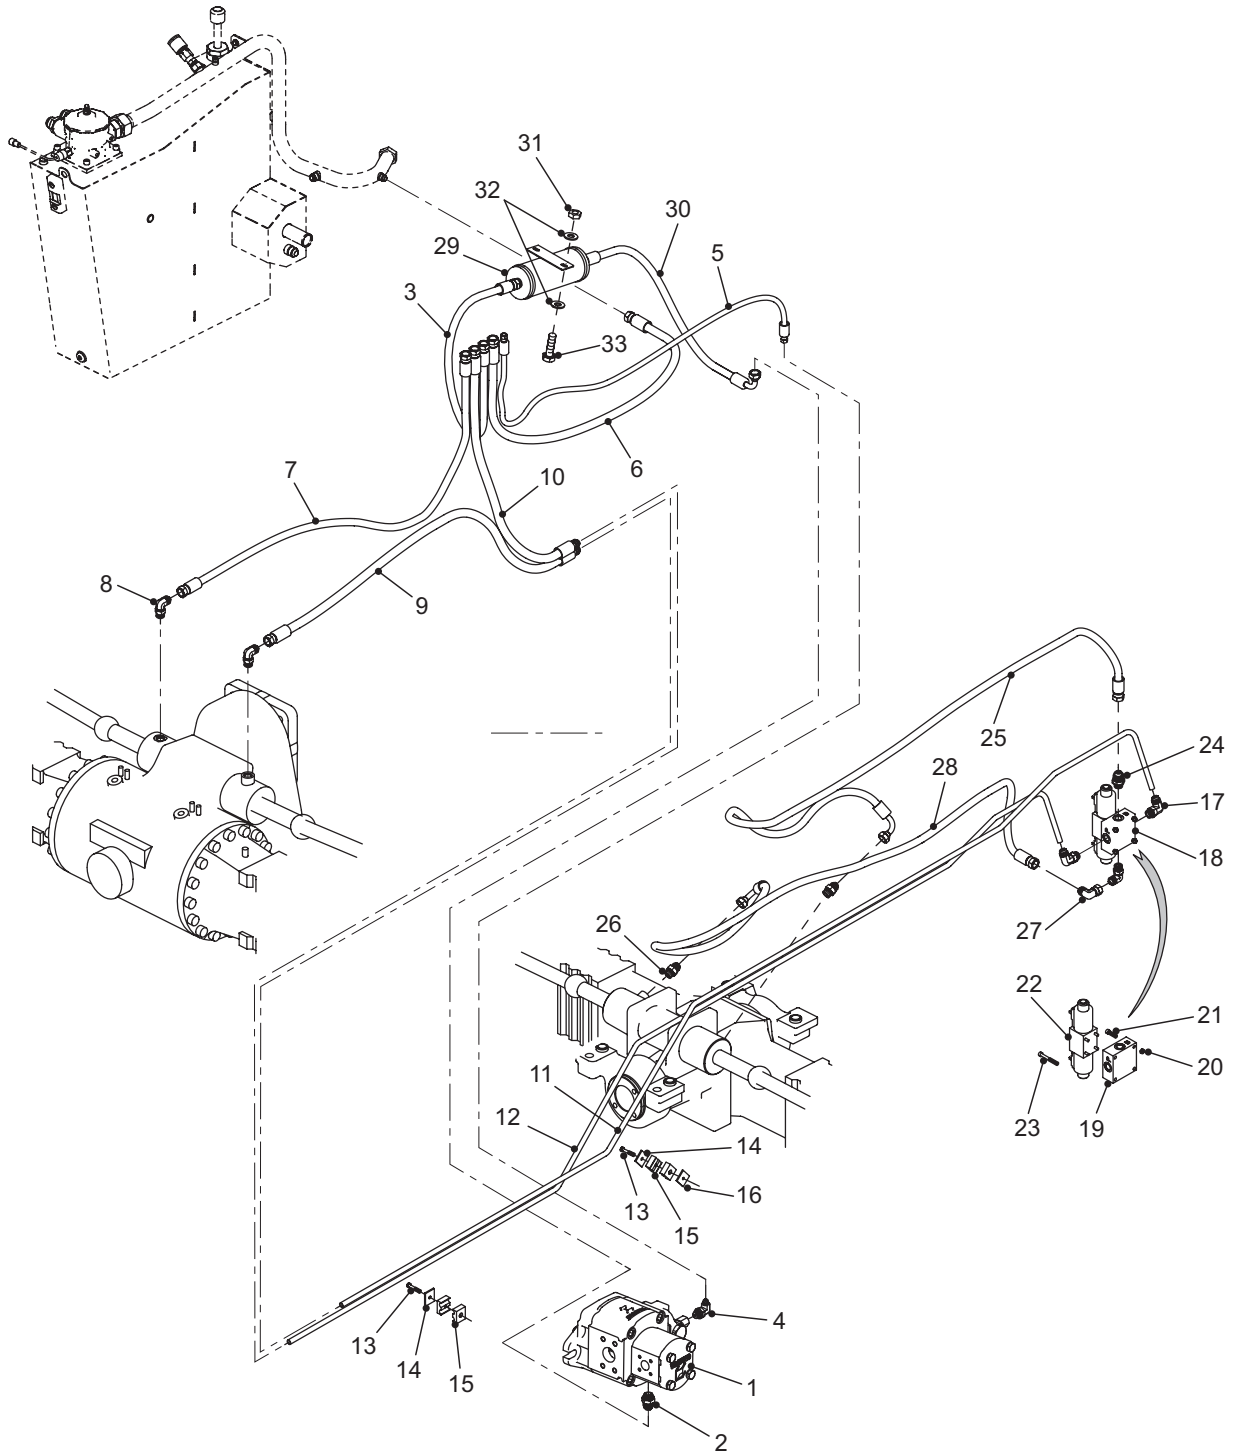


SPC003008

Steering Hoses & Fittings (with damper)

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6909447	Hydraulic pump	See page 185 for details.		1
2	100375-38S	Adapter			1
3	79147.5	Hose			1
4	008372-01B	Elbow			1
5	79148.3	Hose			1
6	79147.5	Hose	Was 6912448		1
7	79147.5	Hose			1
8	96333.0	Elbow			2
9	88724.0	Hose			1
10	88723.2	Hose			1
11	90237.9	Hydraulic pipe			1
12	90238.7	Hydraulic pipe			1
13	100338-23F	Screw			2
14	100212-53R	Plate			2
15	100369-18T	Split Clamp			4
16	100281-55T	Plate			1
17	010370-94B	Elbow			3
18	98347.8	Steering block	Pos. 19 + 22		1
19	98348.6	Support			1
20	100345-06W	Nut			4
21	01626.1	Screw			4
22	98349.4	Steering selector valve	Pos. 22 + 23		1
23	79160.8	Screw			4
24	100375-38S	Adapter			1
25	72281.9	Hose			1
26	89503.7	Adapter			2
27	008372-01B	Elbow			1
28	72281.9	Hose			1
29	6914316	Damper			1
30	74467.2	Hose			1
31	51851.4	Nut			2

Steering Hoses & Fittings (with damper)

Recurrence of previous drawing

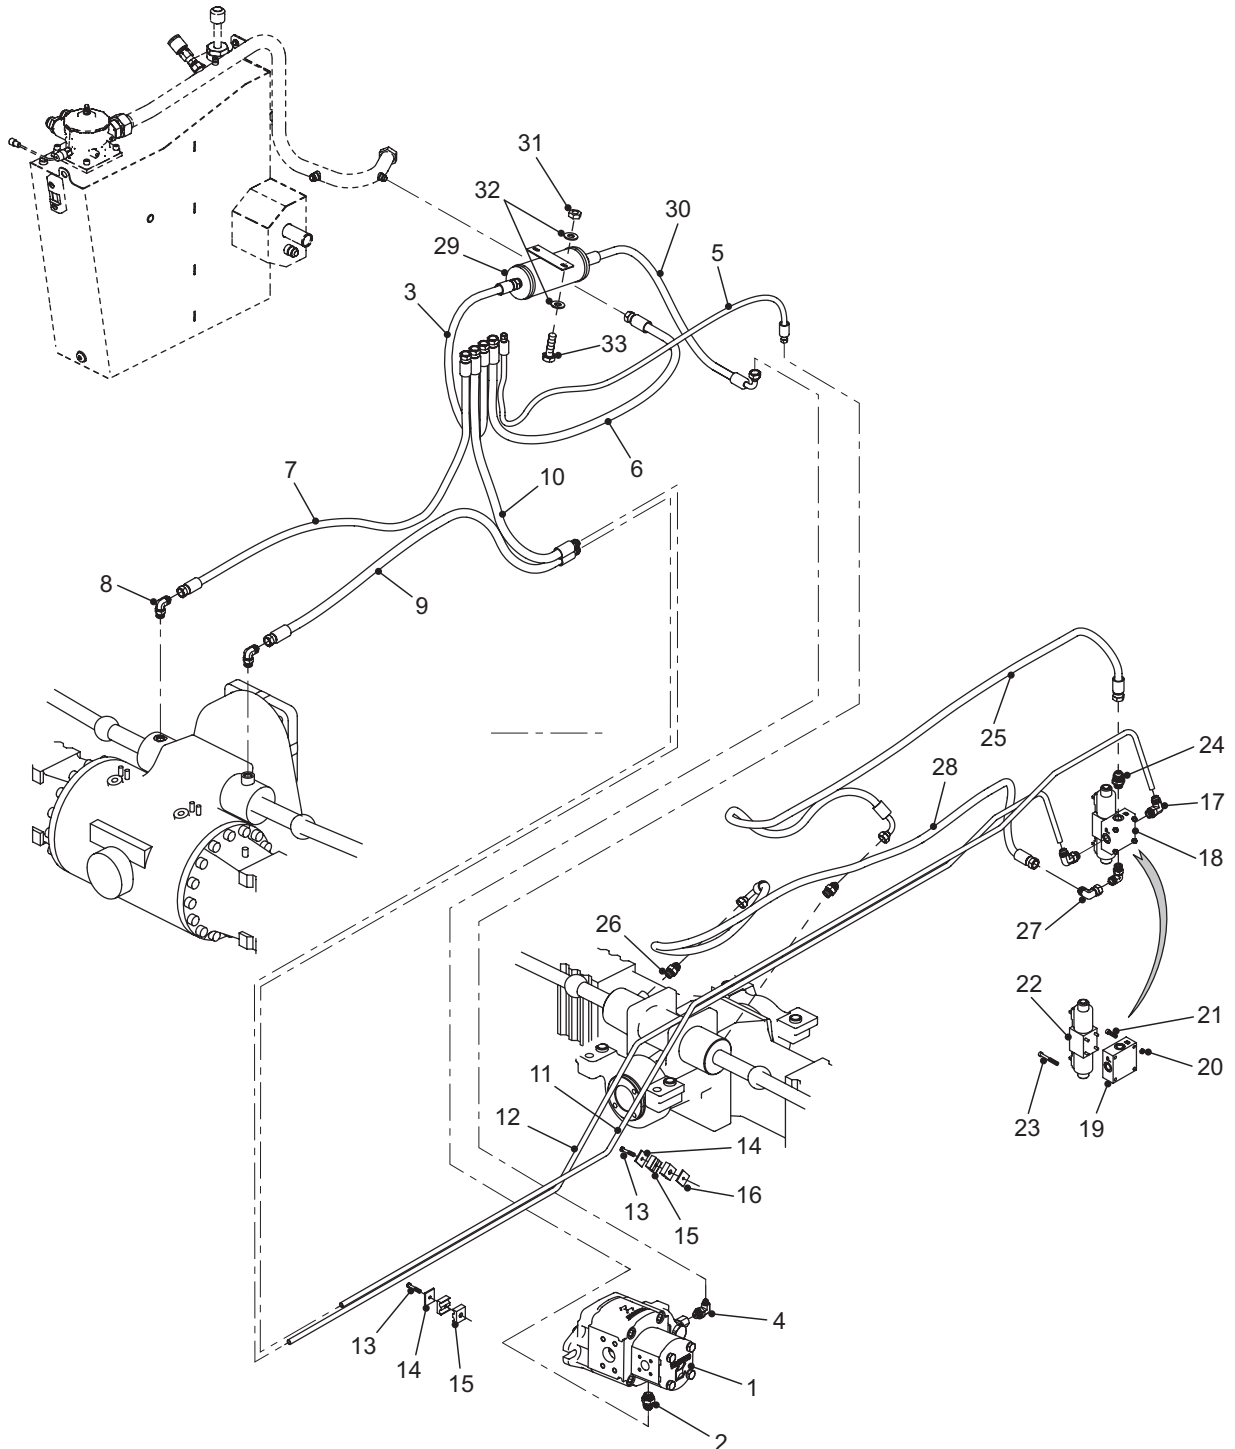


SPC003008

Steering Hoses & Fittings (with damper)

[illegible]

Steering Hydraulics Cab

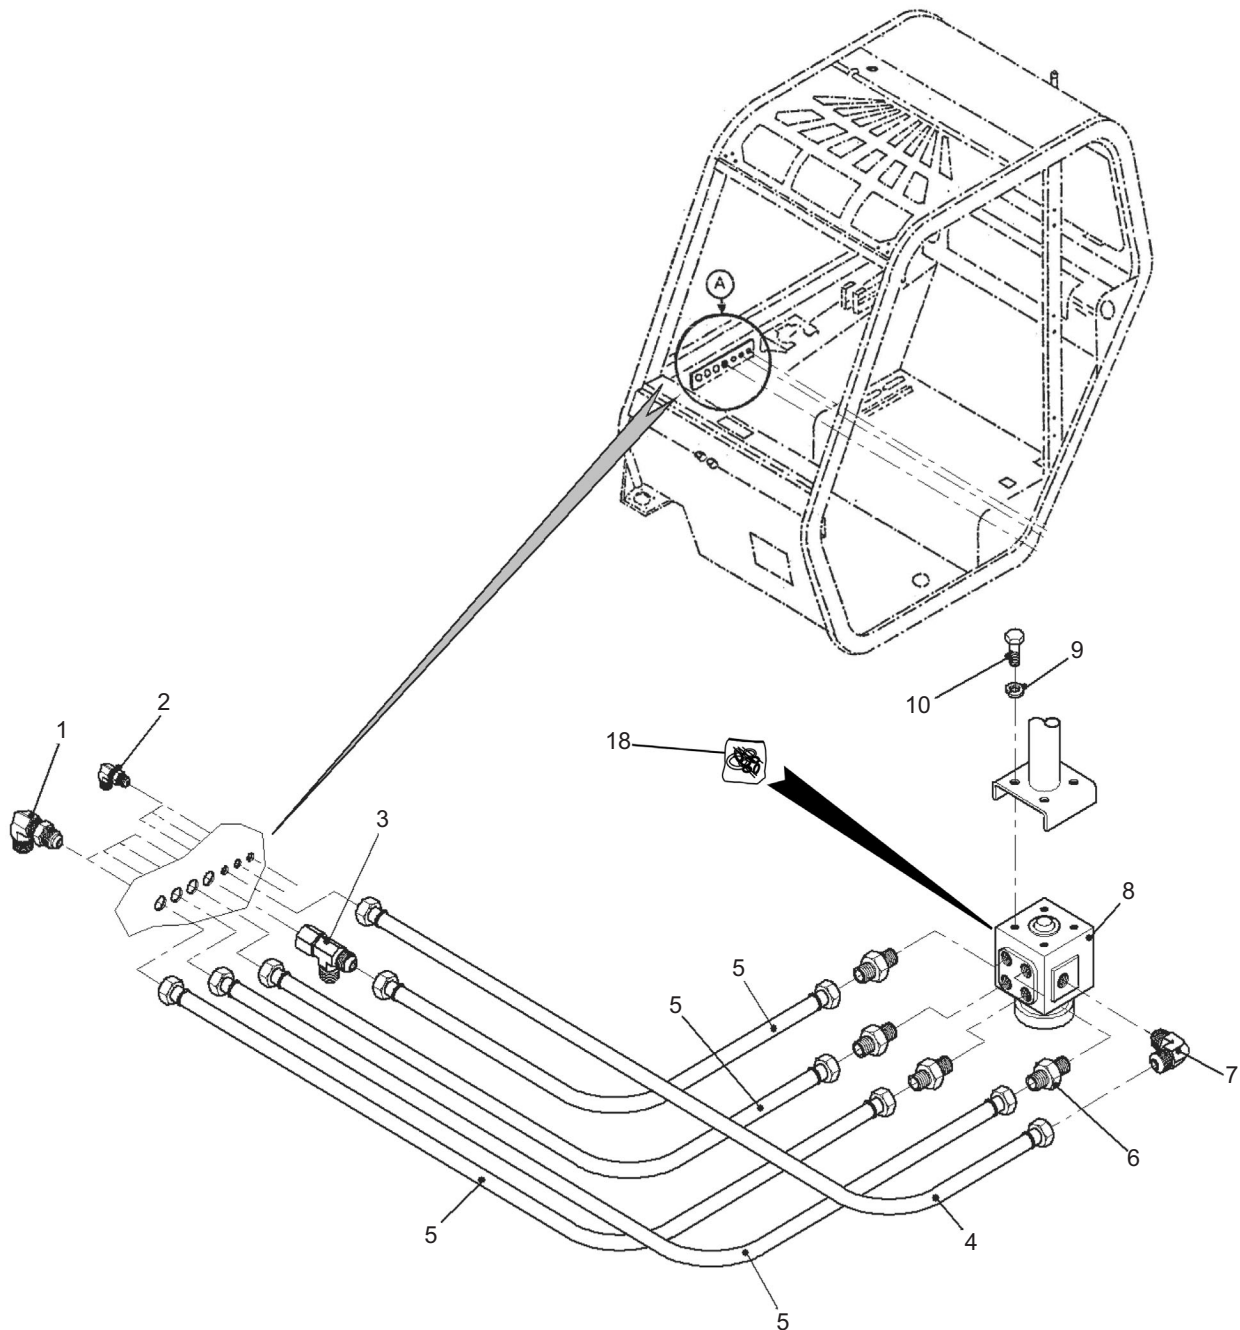


SPC003009

Steering Hydraulics Cab

[illegible]

Service Brake Hydraulic Installation

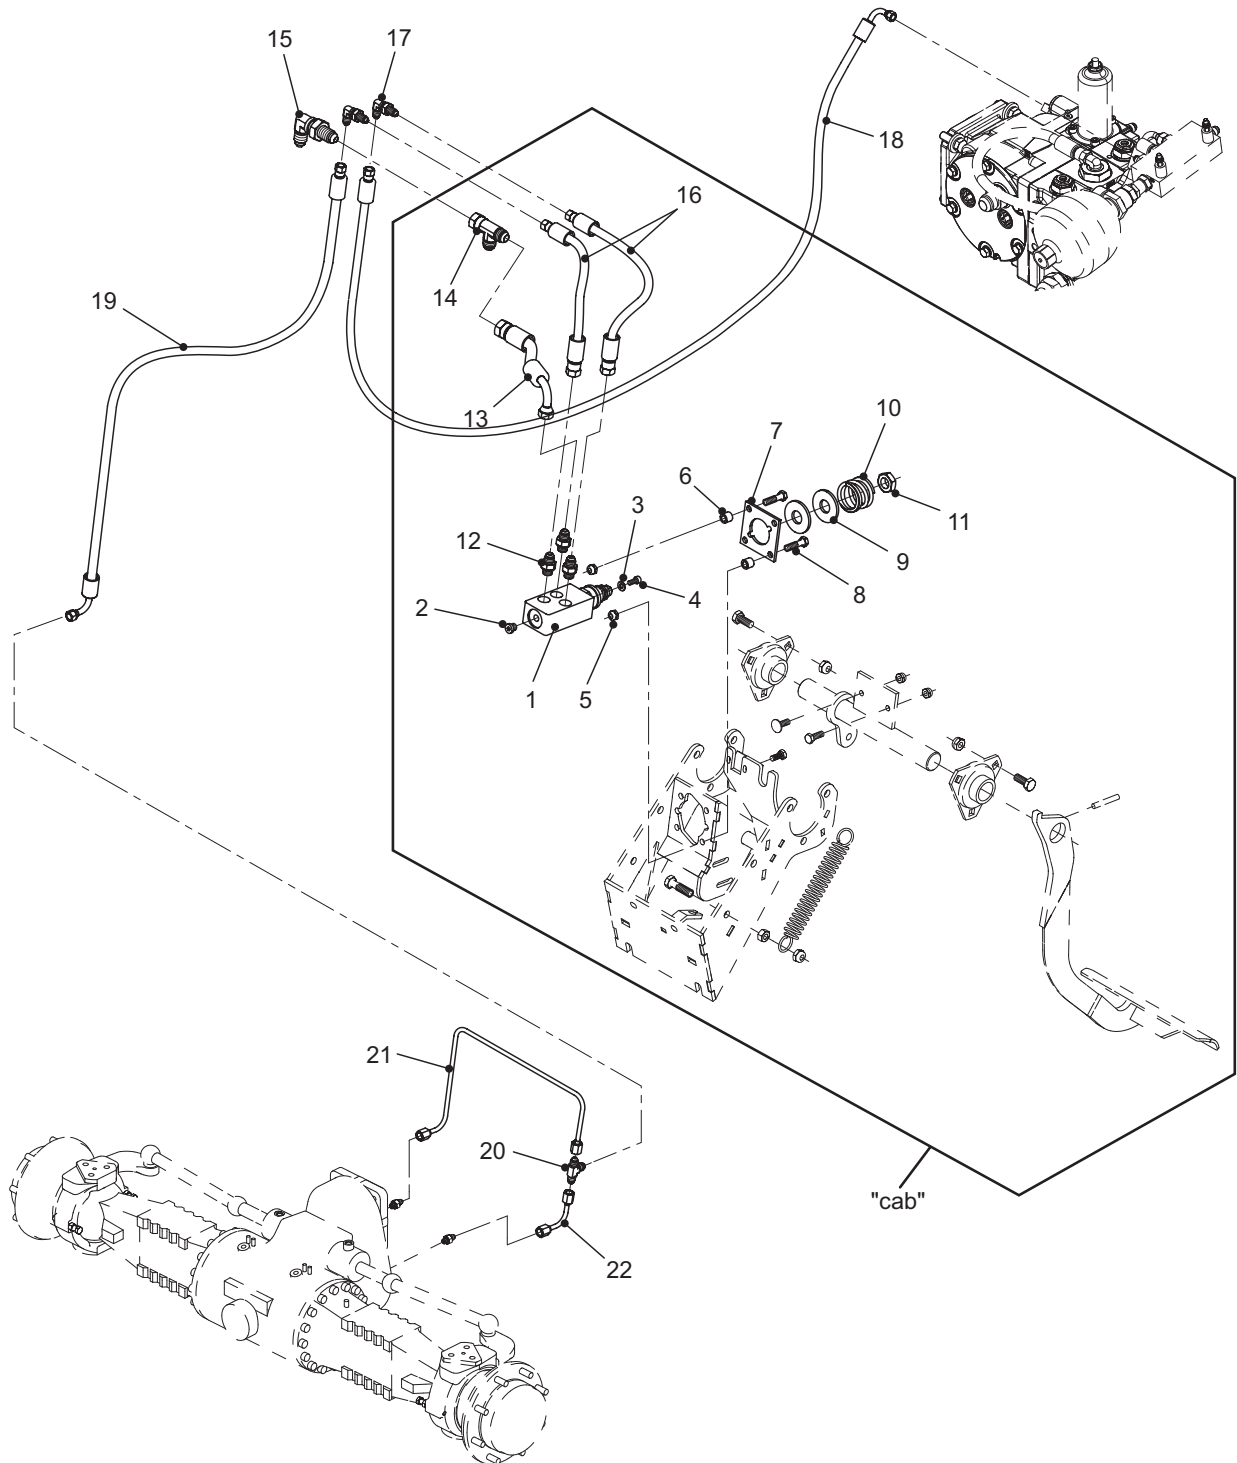


SPC003010

Service Brake Hydraulic Installation

[illegible]

Parking Brake Hydraulic Installation

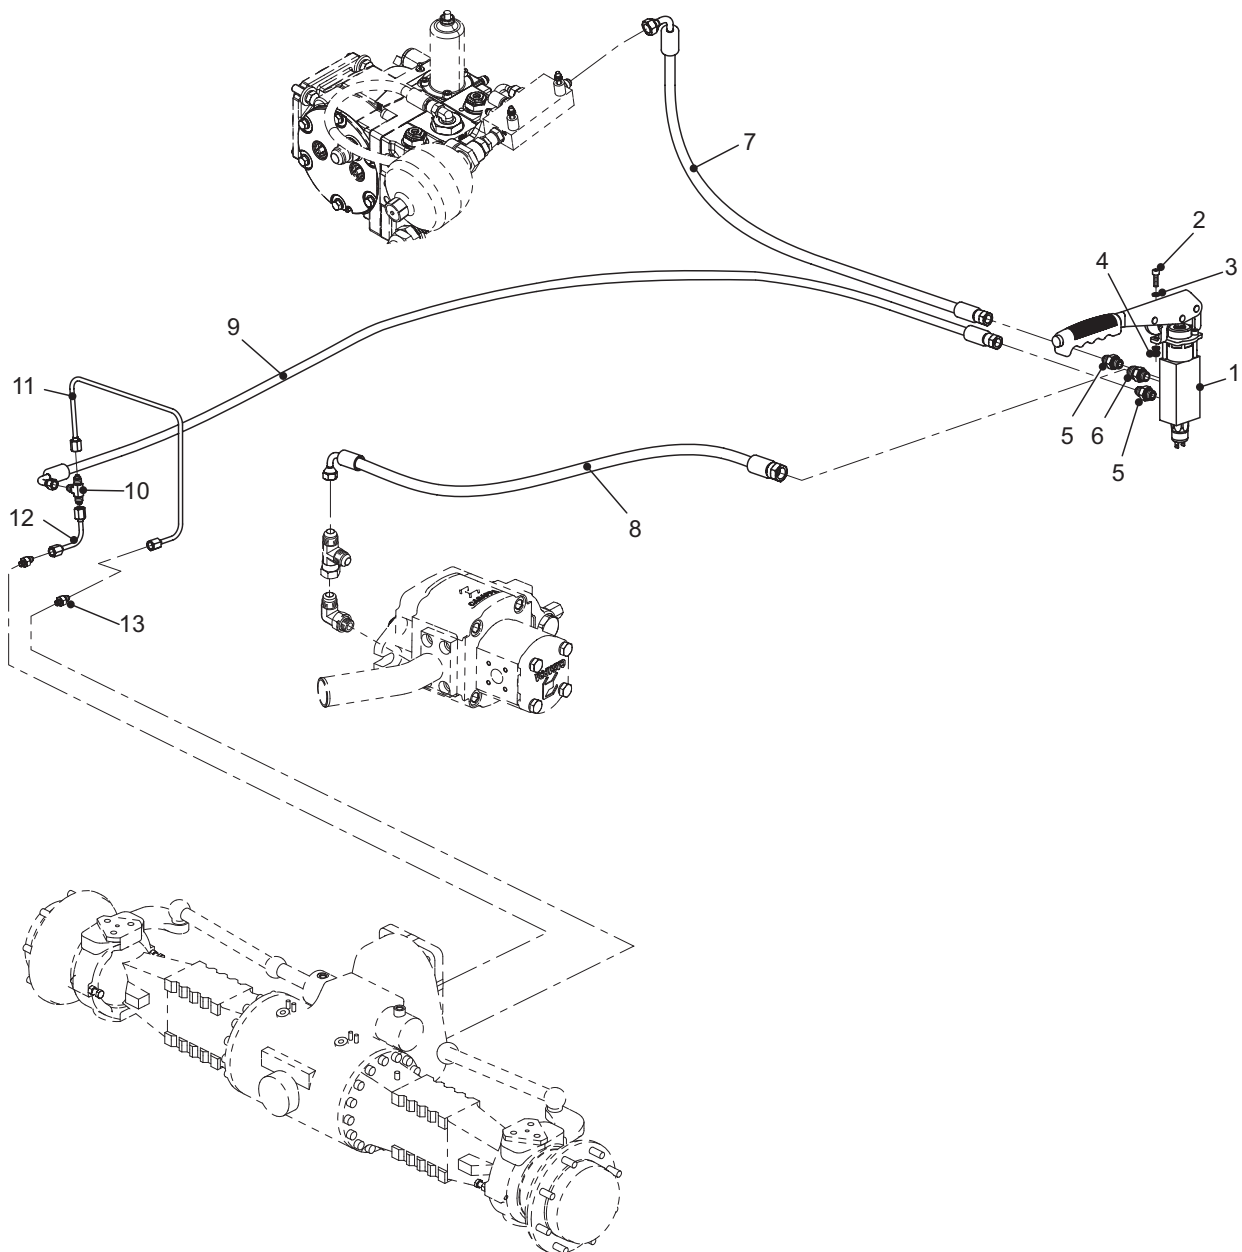


SPC003011

Parking Brake Hydraulic Installation

[illegible]

Parking Brake Hydraulic Installation (accumulator)

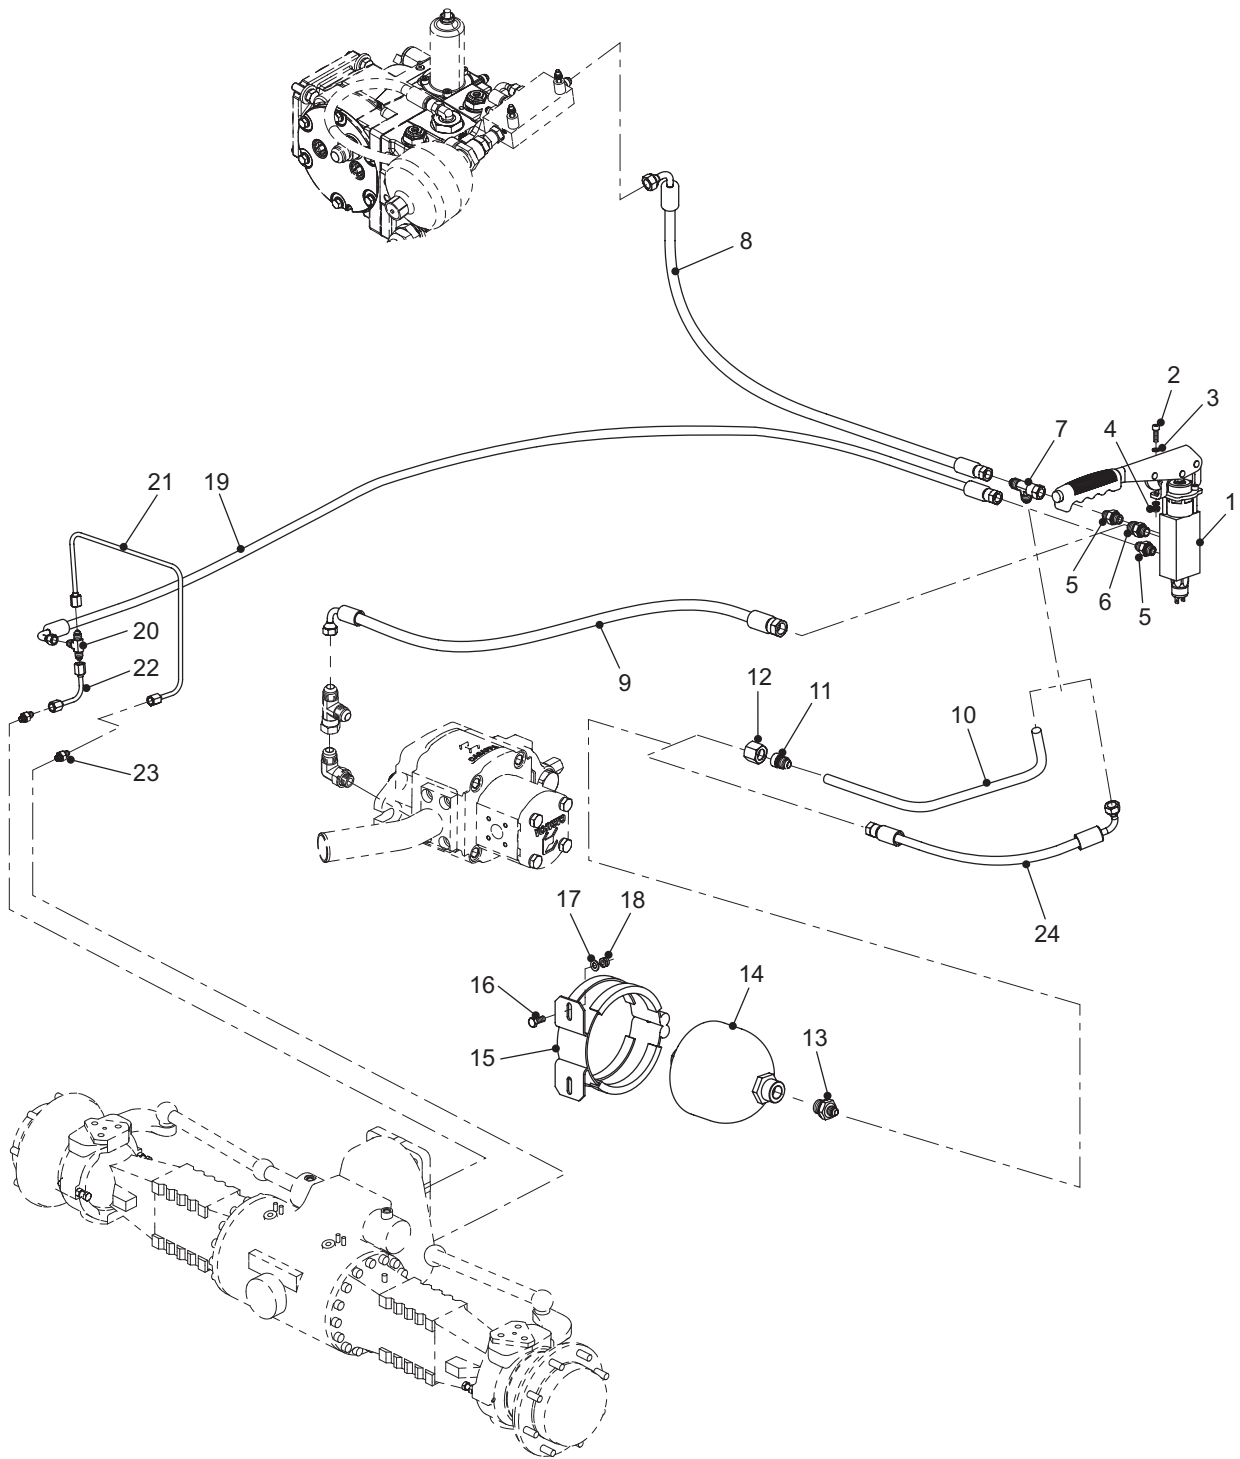


SPC003012

Parking Brake Hydraulic Installation (accumulator)

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6915524	Lever assy	See page 57 for details.		1
	NAP	Lever assy	Order now 6915524 ; Was 6909330 ; For details, see page 55		1
2	10167.5	Screw			2
3	94574.1	Washer			4
4	100345-06W	Nut			2
5	90289.0	Union			2
6	96567.3	Union			1
7	100372-06G	T- union			1
8	97663.9	Hose			1
9	96776.0	Hose	Was 82421.9		1
10	90112.4	Hydraulic pipe			1
11	100375-06H	Adaptor			1
12	014345-12C	Nut			1
13	100375-59Q	Union			1
14	90113.2	Accumulator			1
15	82167.8	Collar			1
16	01596.6	Screw			2
17	01697.2	Washer			2
18	51851.4	Nut			2
19	92991.9	Hose			1
20	62849.5	T- union			1
21	90191.8	Tube			1
22	89475.8	Tube			1
23	100375-71D	Adapter			2
24	6909434	Hose			1

Quick Attach Installation (wide)

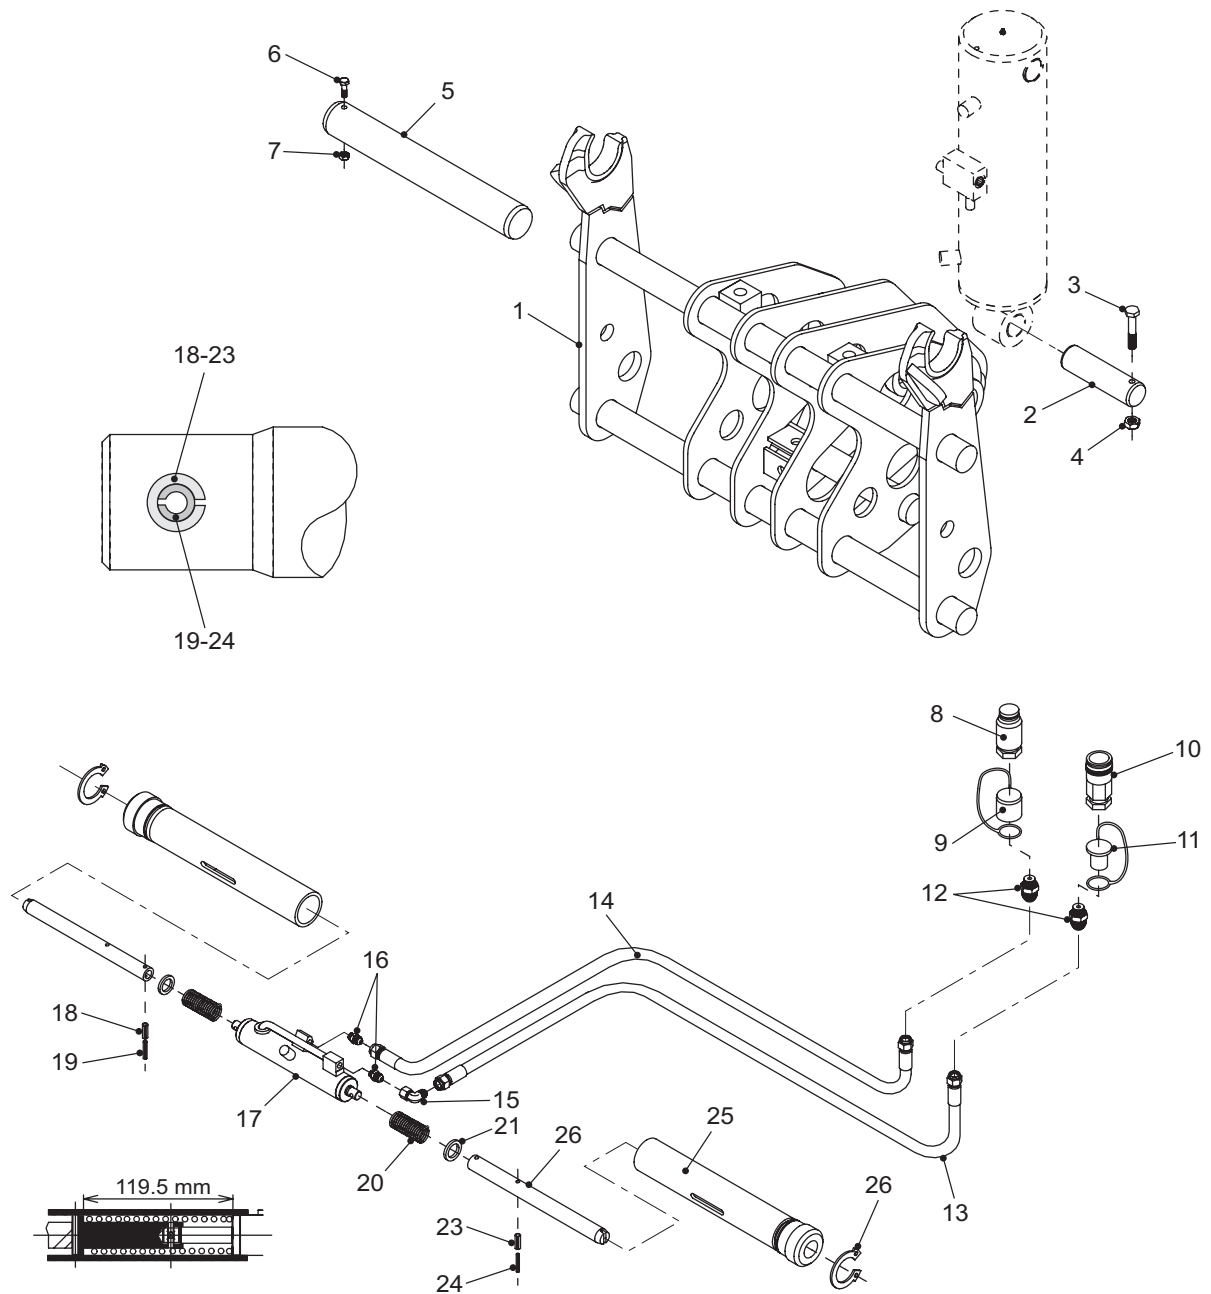


SPC003013

Quick Attach Installation (wide)

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	84097.5	Wide quick attach			1
2	80400.5	Carriage Pin			1
3	65397.2	Screw			1
4	100345-09A	Nut			1
5	77421.6	Pin			1
6	82459.9	Screw			1
7	100345-09A	Nut			1
8	95994.0	Male coupling			1
9	96513.7	Cap			1
10	95993.2	Female Coupling			1
11	96514.5	Cap			1
12	022375-27U	Adapter			2
13	77494.3	Hose			1
14	85480.2	Hose			1
15	72294.2	Elbow union			1
16	022375-28V	Adapter			2
17	92420.9	Quick Attach Cylinder	See page 175 for details.		1
18	01744.2	Pin			2
19	01735.0	Pin			2
20	92399.5	Spring			2
21	92588.3	Washer			2
22	92250.0	Spindle			2
23	01745.9	Pin			2
24	85481.0	Pin			2
25	92249.2	Pipe			2
26	50027.2	Clip			2

Quick Attach Installation (narrow)

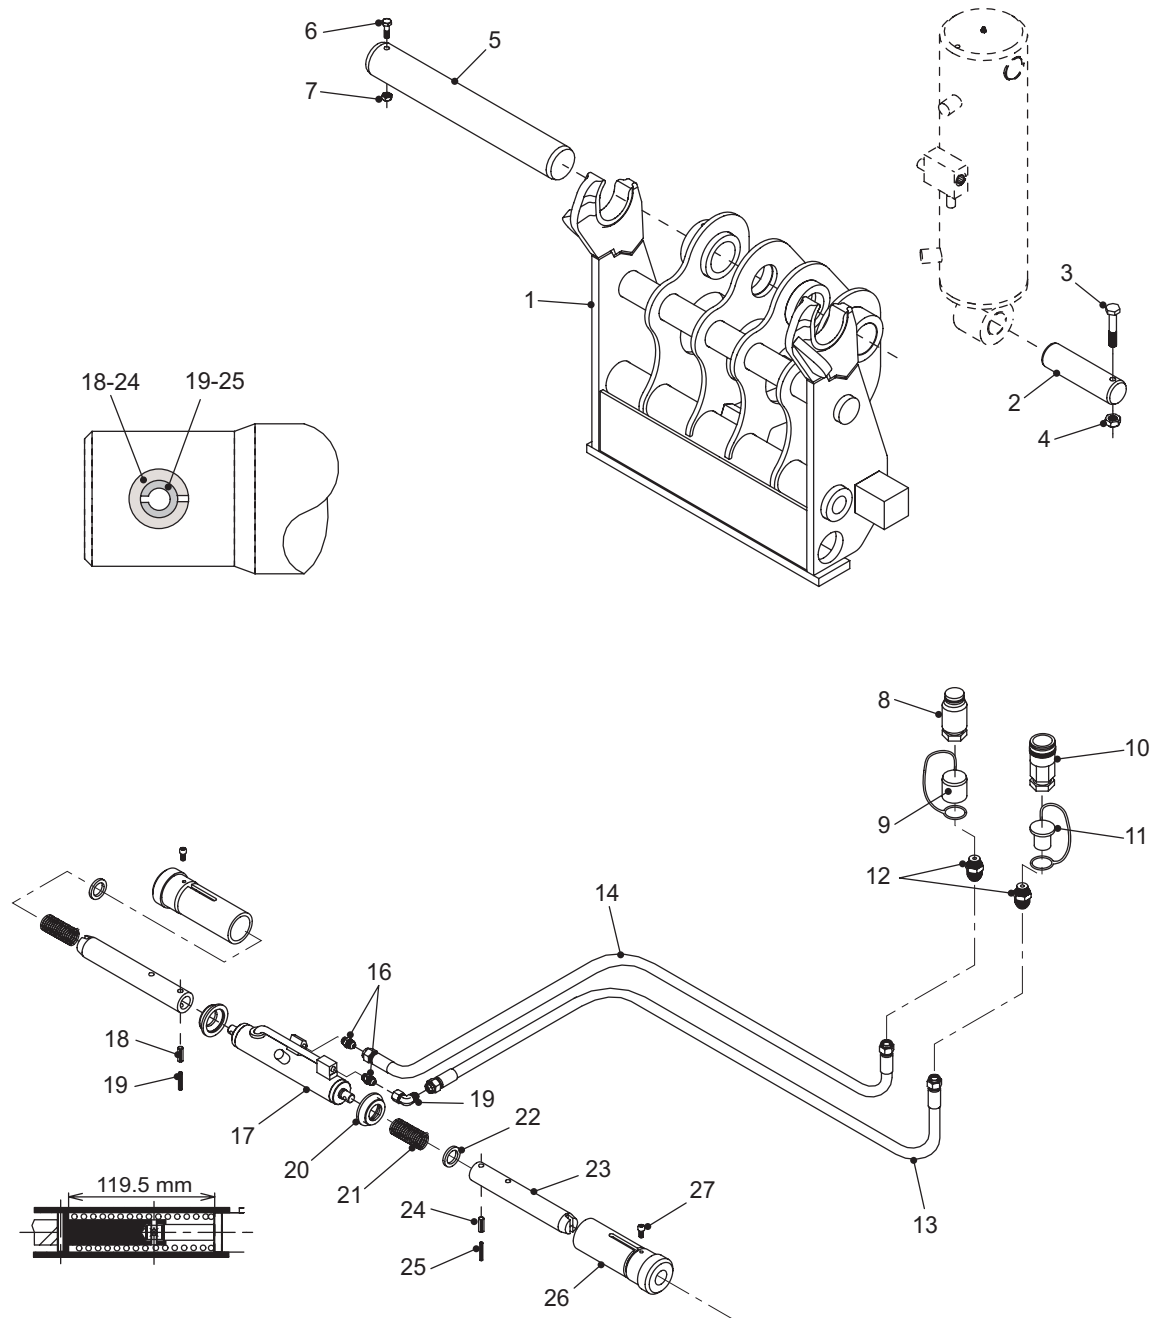


SPC003014

Quick Attach Installation (narrow)

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	NAP	Carriage			1
2	80400.5	Carriage Pin			1
3	65397.2	Screw			1
4	100345-09A	Nut			1
5	77421.6	Pin			1
6	82459.9	Screw			1
7	100345-09A	Nut			1
8	95994.0	Male coupling			1
9	96513.7	Cap			1
10	95993.2	Female Coupling			1
11	96514.5	Cap			1
12	022375-27U	Adapter			2
13	77494.3	Hose			1
14	85480.2	Hose			1
15	72294.2	Elbow union			1
16	022375-28V	Adapter			2
17	92420.9	Quick Attach Cylinder	See page 175 for details.		1
18	01744.2	Pin			2
19	01735.0	Pin			2
20	79365.3	Bushing			2
21	92398.7	Spring			2
22	92588.3	Washer			2
23	92218.7	Pin			2
24	01745.9	Pin			2
25	85481.0	Pin			2
26	92220.3	Tube			2
27	29649.1	Screw			2

Hydraulic Tank Installation

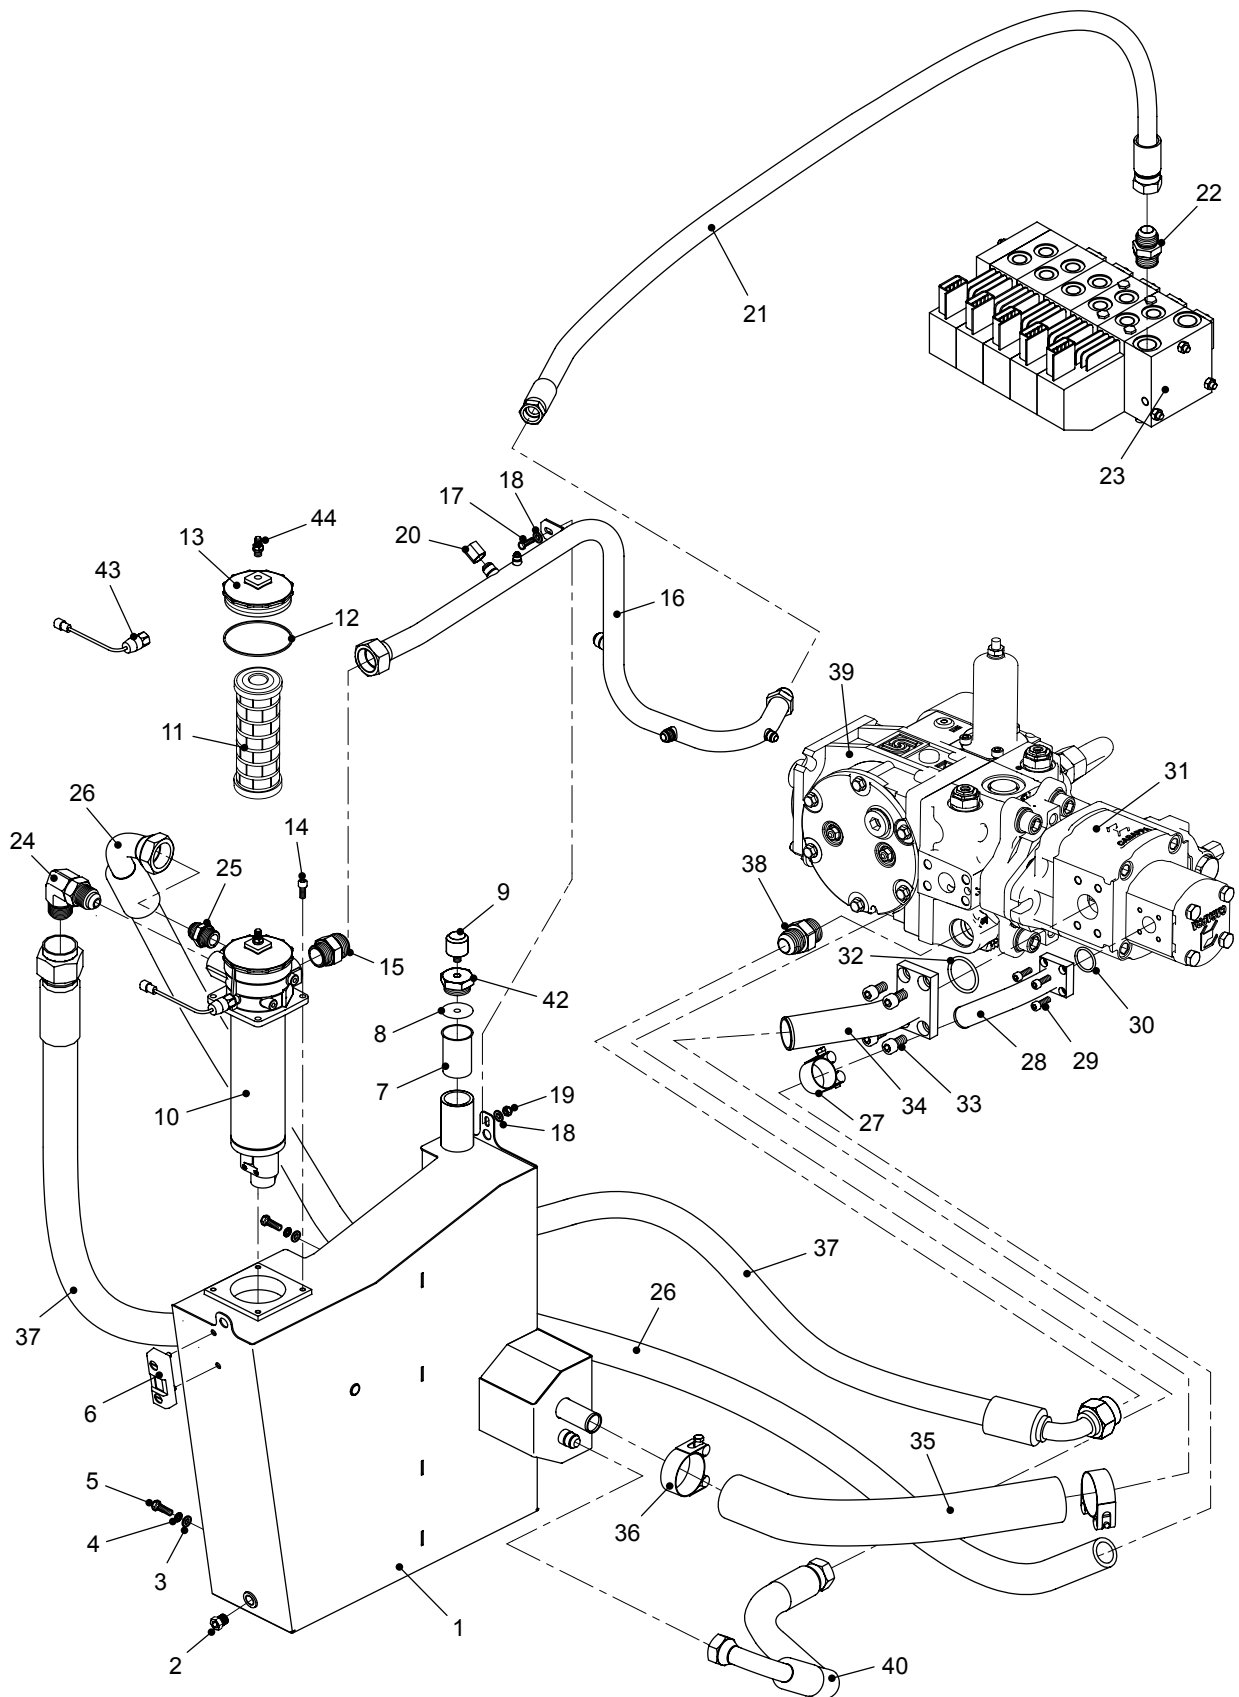


SPC003015

Hydraulic Tank Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6913526	Tank	Was 6911094		1
2	78743.2	Drain plug			1
3	38025.3	Washer			2
4	01718.6	Washer			2
5	01597.4	Screw			2
6	54194.6	Gauge			1
7	6913570	Strainer			1
8	6913569	Seal	Was 98583.8		1
9	37148.4	Breather			1
10	6911140	Hydraulic filter	Pos. 11 + 12 + 13 + 43 + 44		1
11	6913059	Hydraulic filter element			1
12	6912548	Set of seals			1
13	6912572	Cap			1
14	01639.4	Screw			4
15	6909739	Union			1
16	6910972	Pipe			1
17	01597.4	Screw			1
18	000350-02V	Washer			2
19	51851.4	Nut			1
20	011374-62W	Plug			1
21	6912000	Hose			1
22	100375-40U	Adapter			1
23	95265.5	Hydraulic control valve	See page 189 for details.		1
24	69274.9	Elbow union			1
25	85170.9	Union			1
26	6910602	Hose			1
27	89522.7	Clamp			1
28	6908091	Flange			1
29	10167.5	Screw			4
30	93049.5	O-ring			1
31	6909447	Hydraulic pump	Was 6909808 ; For details, see page 185		1

Hydraulic Tank Installation

Recurrence of previous drawing

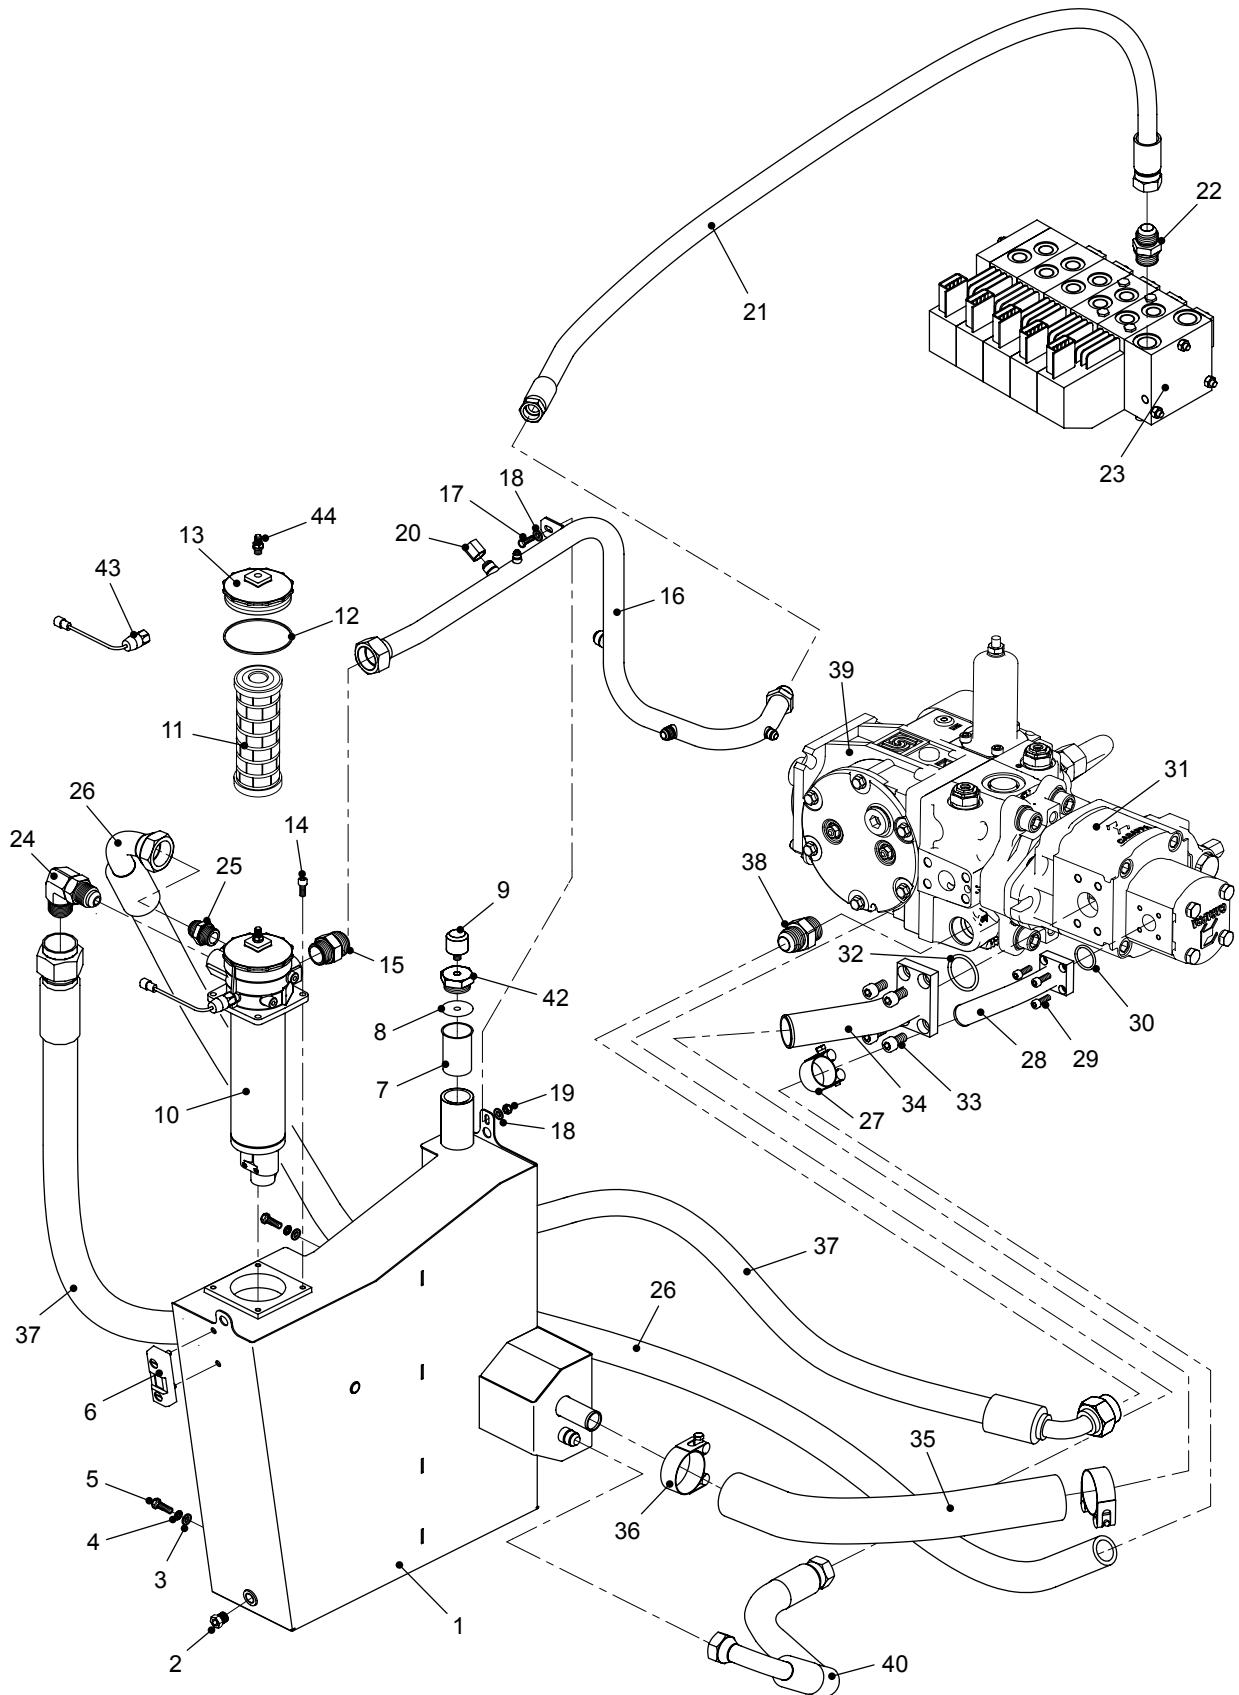


SPC003015

Hydraulic Tank Installation

[illegible]

Stabilizers & Frame Level Cylinder Installation

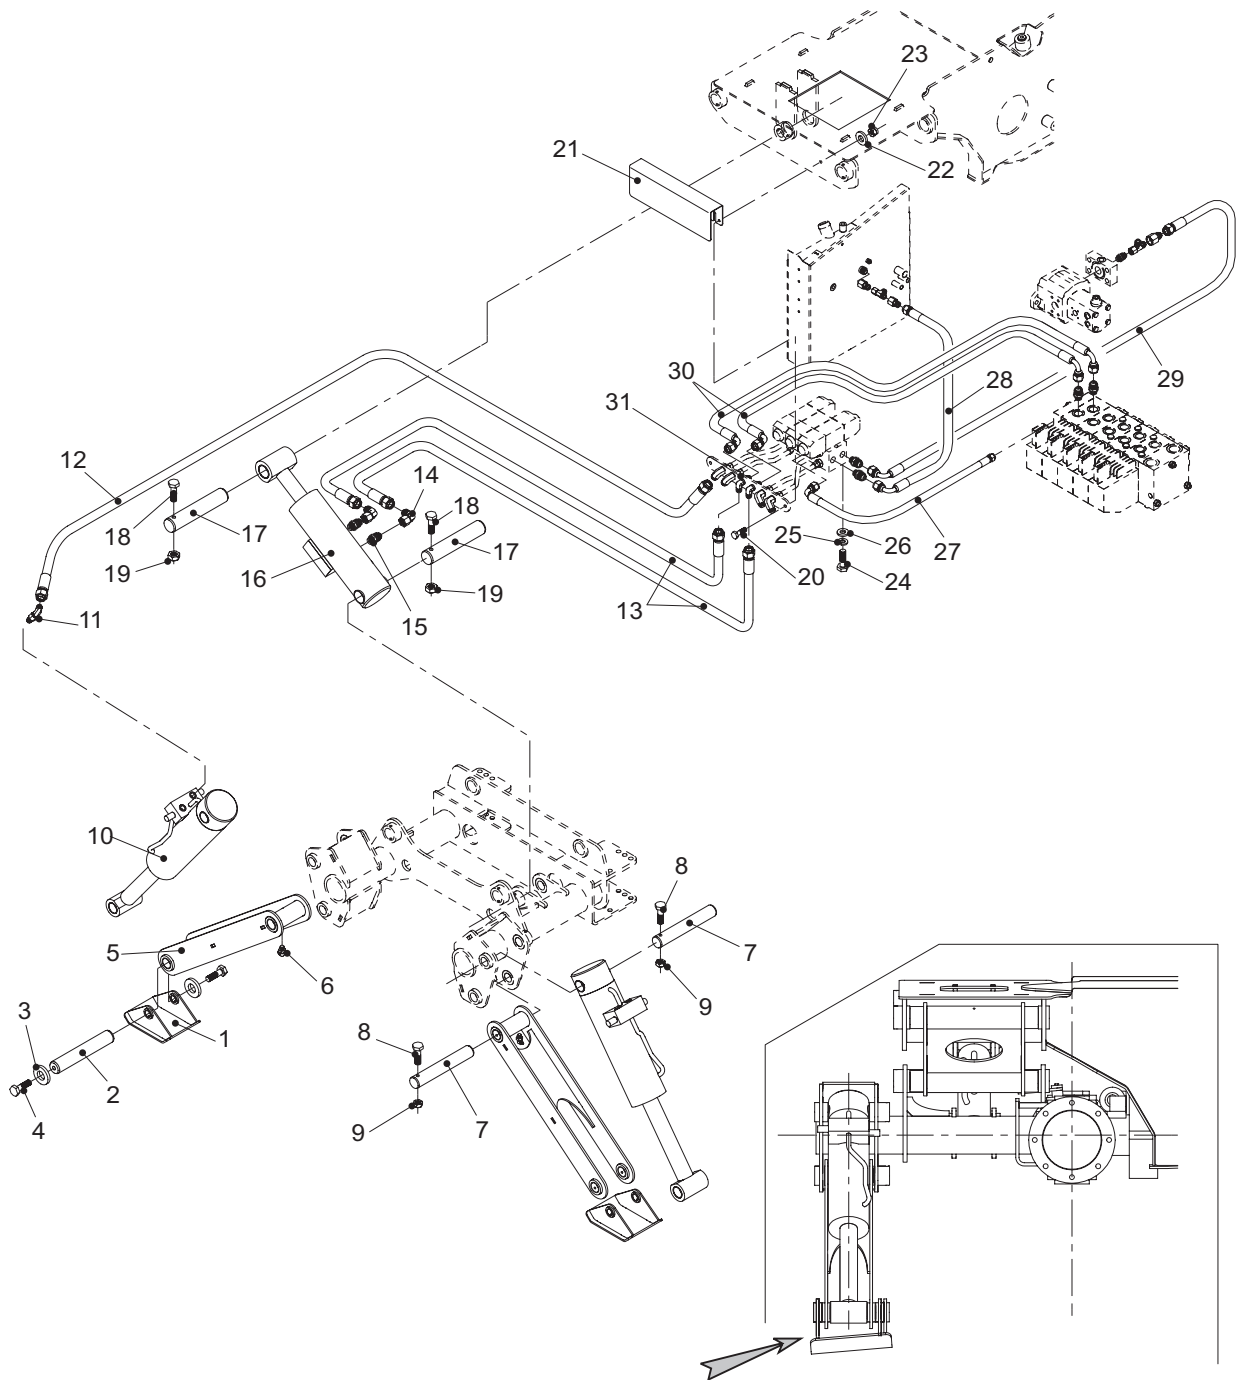


SPC003016

Stabilizers & Frame Level Cylinder Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	92062.9	Shoe			2
2	84237.7	Spindle			2
3	100454-05T	Washer			4
4	10882.9	Screw			4
5	92058.7	Arm			2
6	01782.2	Grease nipple			2
7	88597.0	Spindle			4
8	12597.1	Screw			4
9	100345-09A	Nut			4
10	NAP	Cylinder assy	Order now 6914550 ; Was 84170.0 ; For details, see page 179 See page 181 for details.		2
	6914550	Cylinder			2
11	90719.6	Elbow union			4
12	70862.8	Hose			4
13	92650.1	Hose			2
14	100370-29P	Fitting			2
15	77912.4	Adapter			2
16	88808.1	Cylinder assy	See page 177 for details.		1
17	84177.5	Spindle			2
18	12597.1	Screw			2
19	100345-09A	Nut			2
20	01578.4	Screw			2
21	92652.7	Protector			1
22	000350-20Q	Washer			2
23	51851.4	Nut			2
24	01597.4	Screw			4
25	11463.7	Washer			4
26	000350-02V	Washer			4
27	94214.4	Hose			1
28	70377.7	Hose			1
29	76621.2	Hose			1
30	92323.5	Hose			2

Stabilizers & Frame Level Cylinder Installation

Recurrence of previous drawing

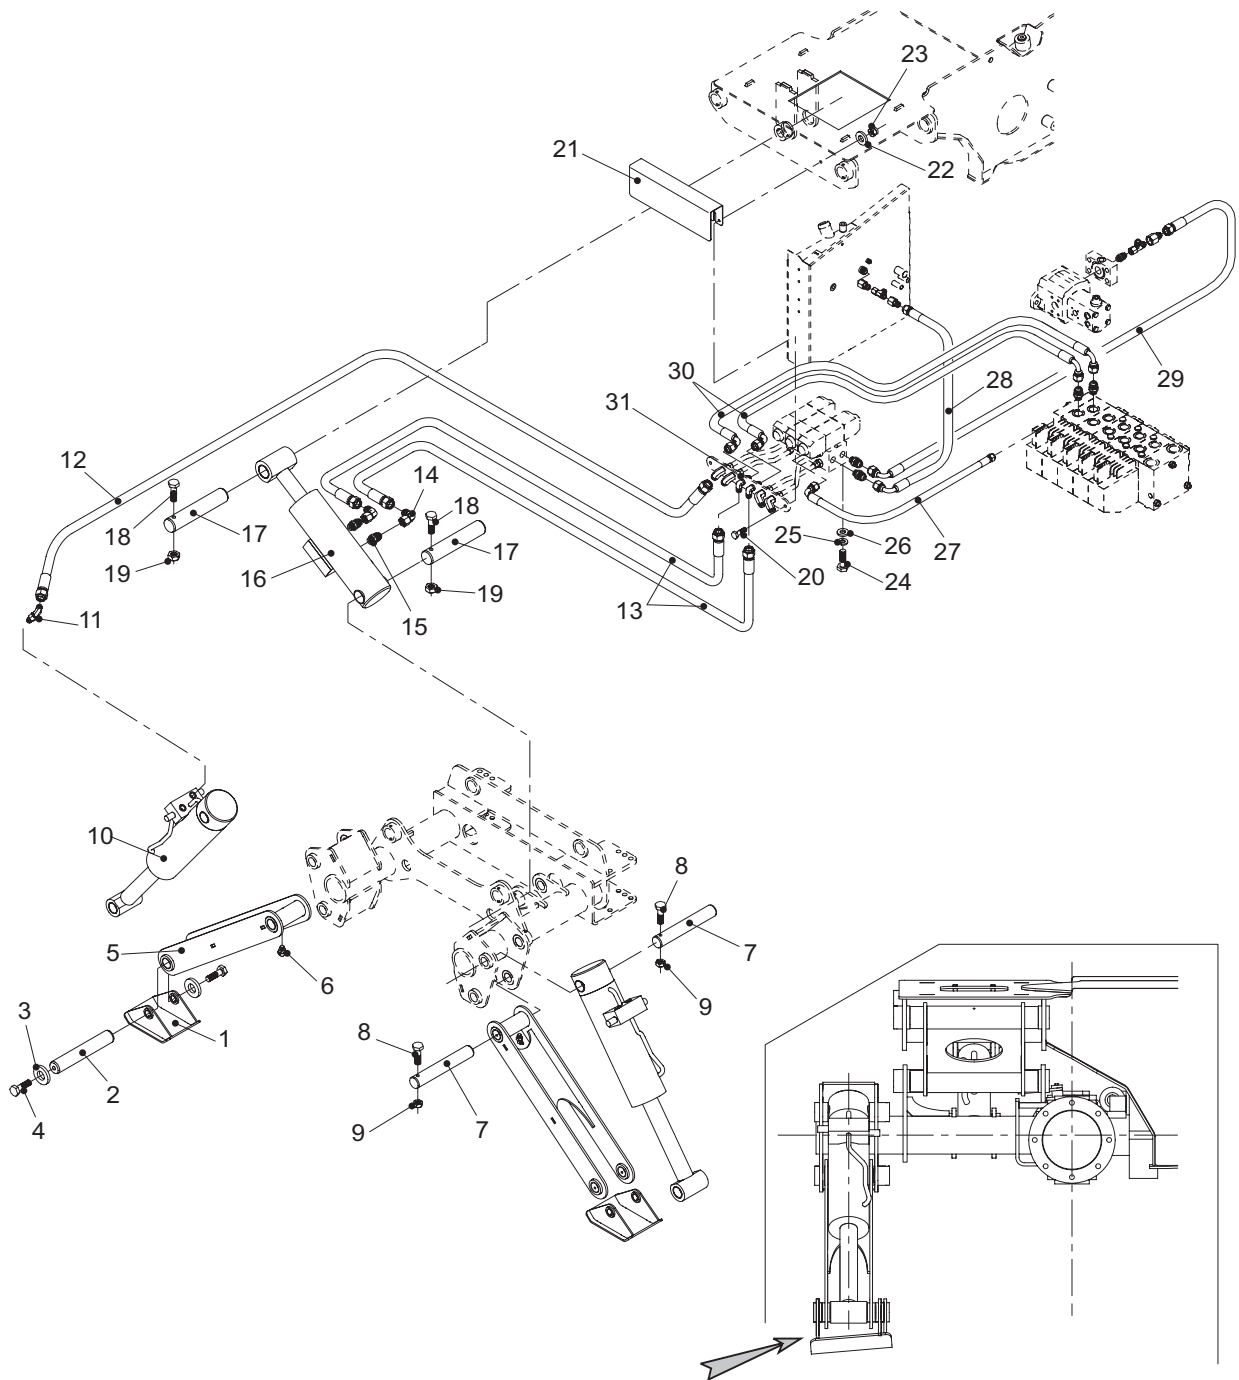


SPC003016

Stabilizers & Frame Level Cylinder Installation

[illegible]

Stabilizer Selector Valves

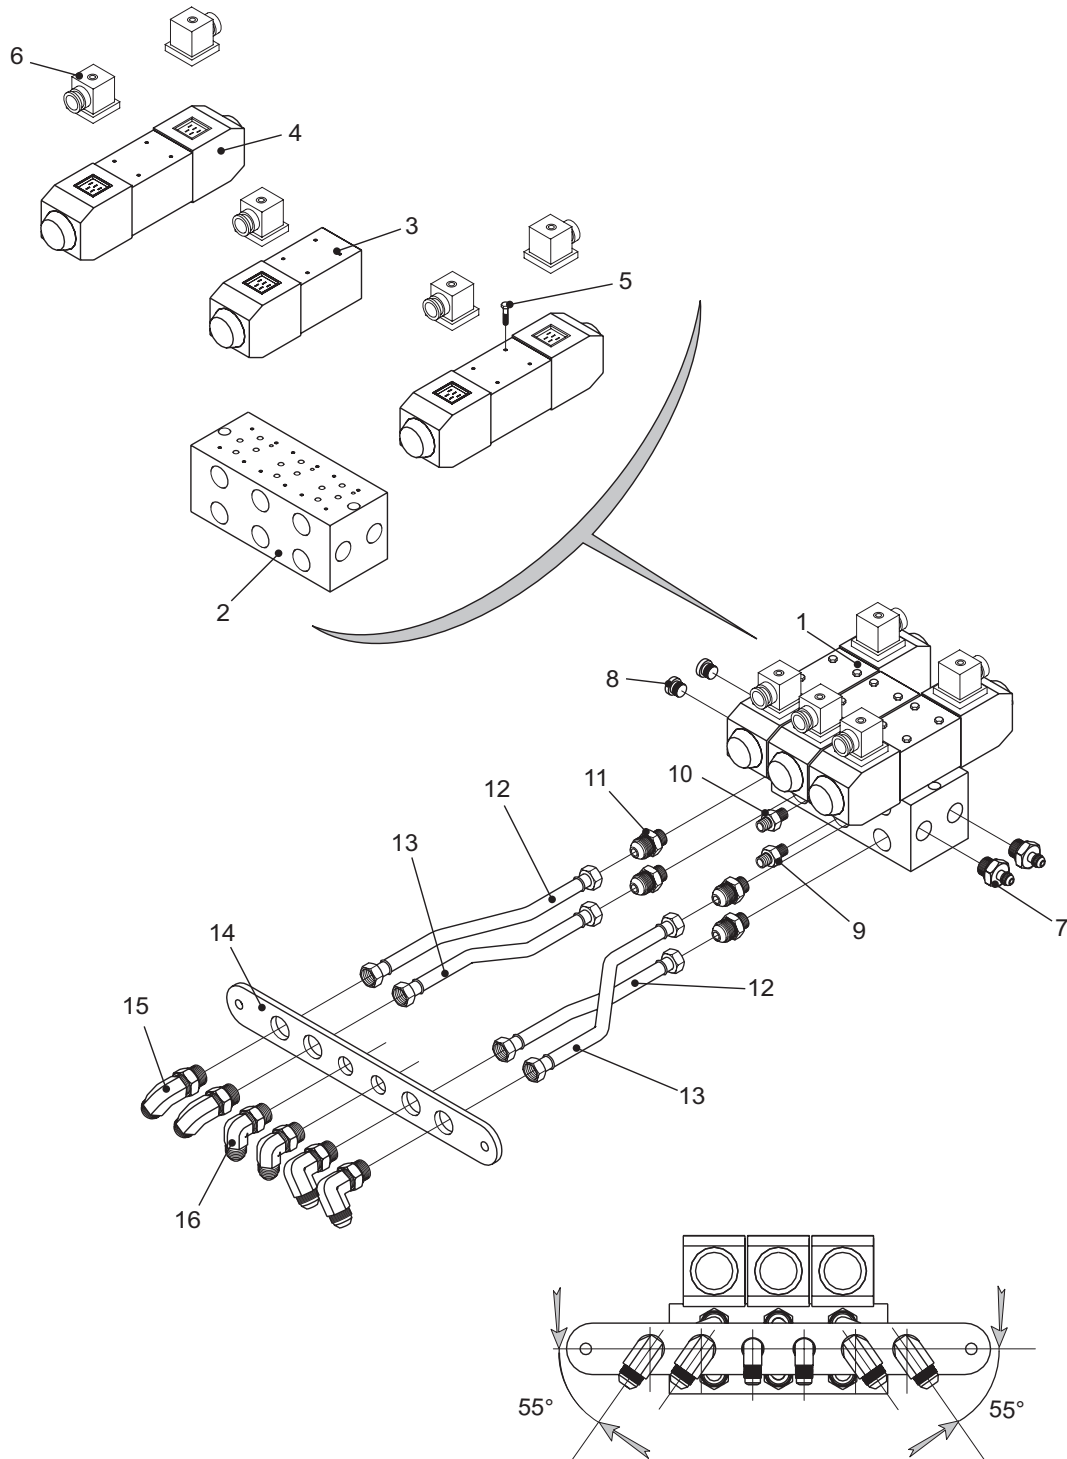


SPC003030

Stabilizer Selector Valves

[illegible]

Lift Cylinder

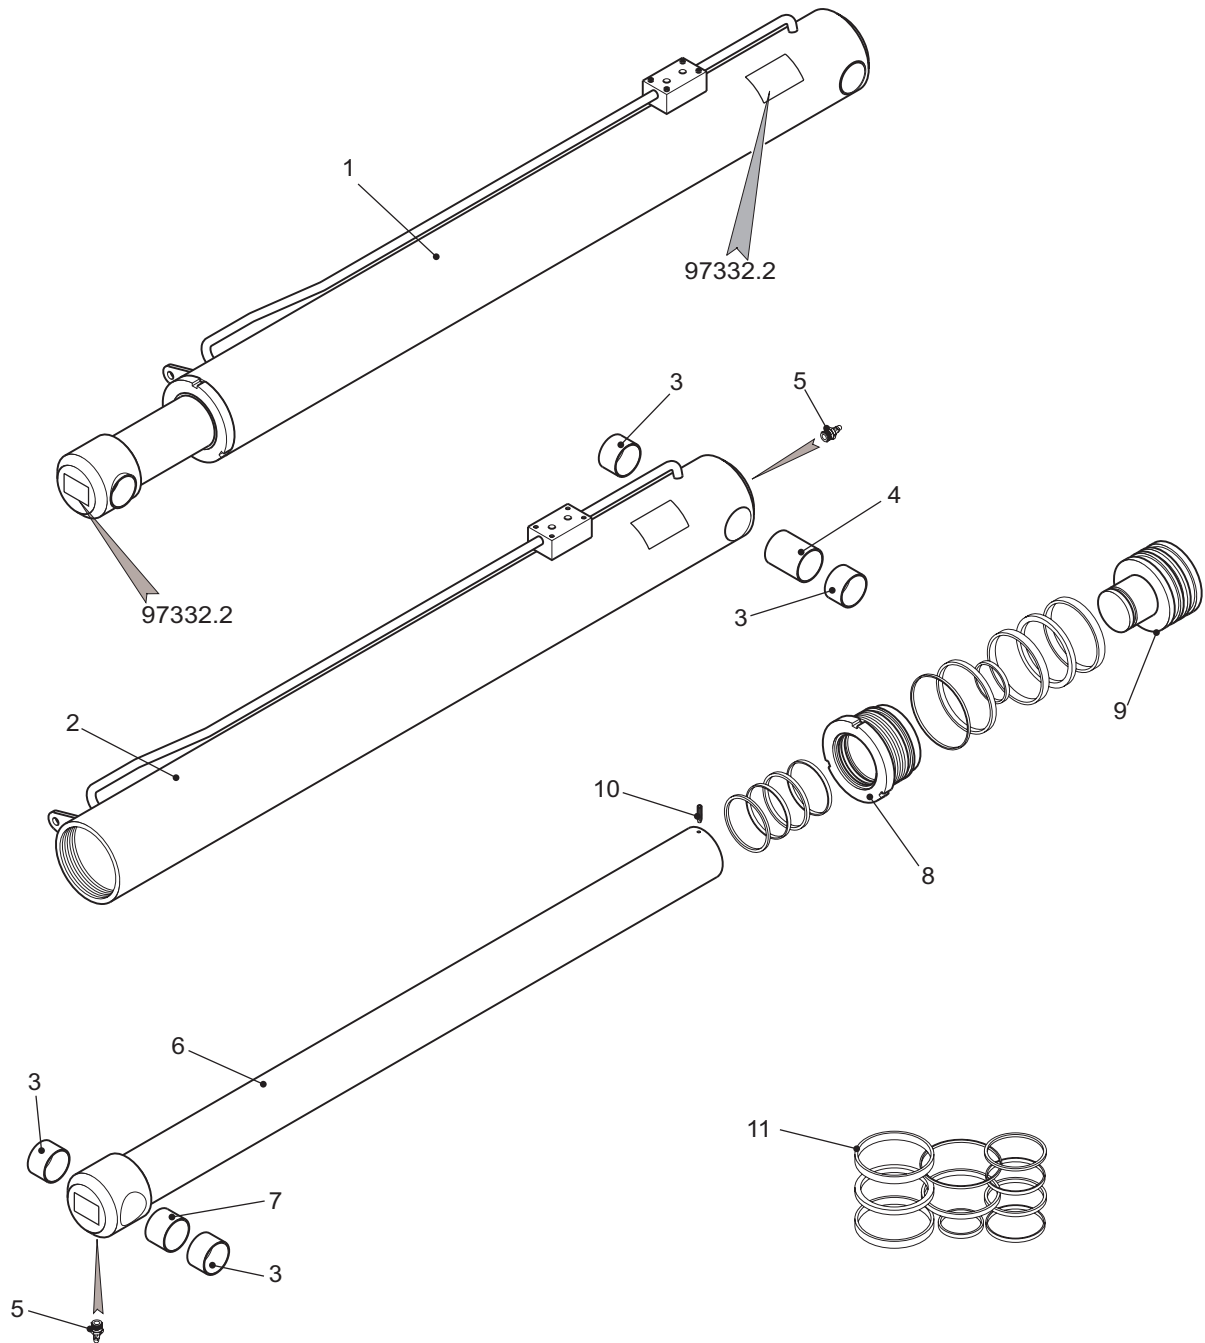


SPC003018

Lift Cylinder

[illegible]

Compensating Cylinder

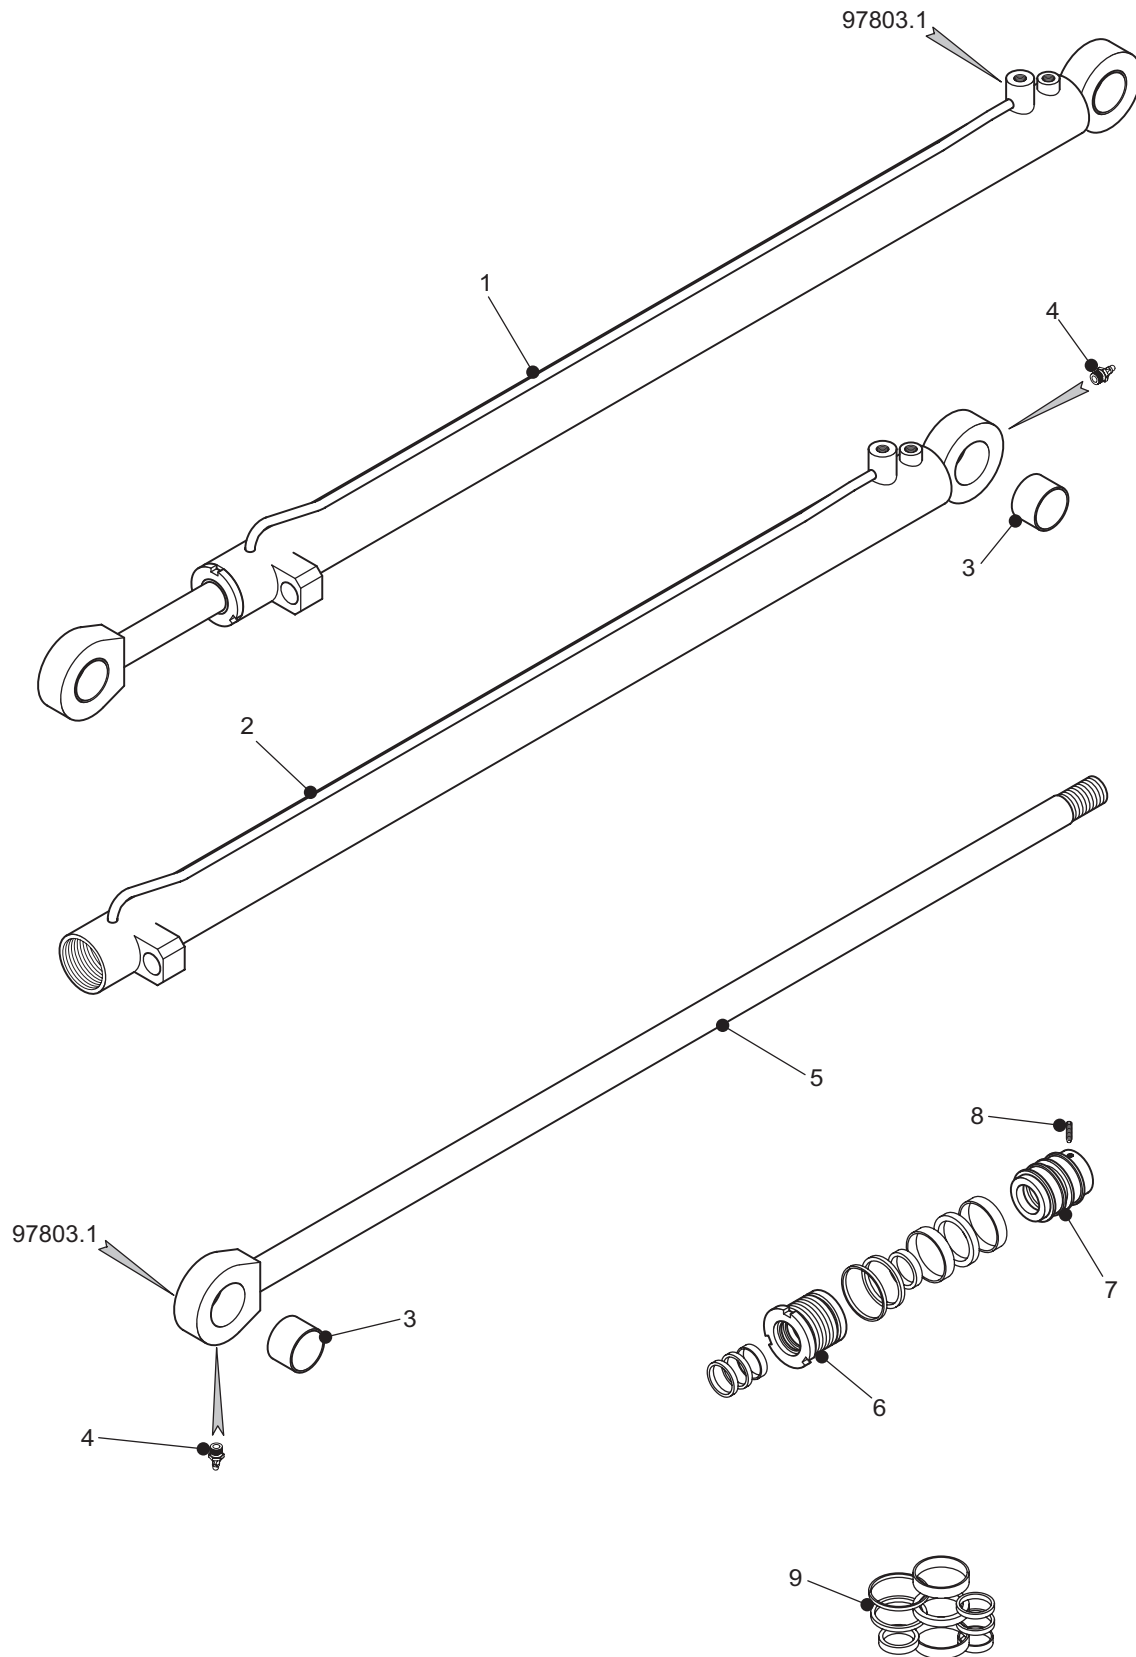


SPC003019

Compensating Cylinder

[illegible]

Telescope Cylinder - T40140

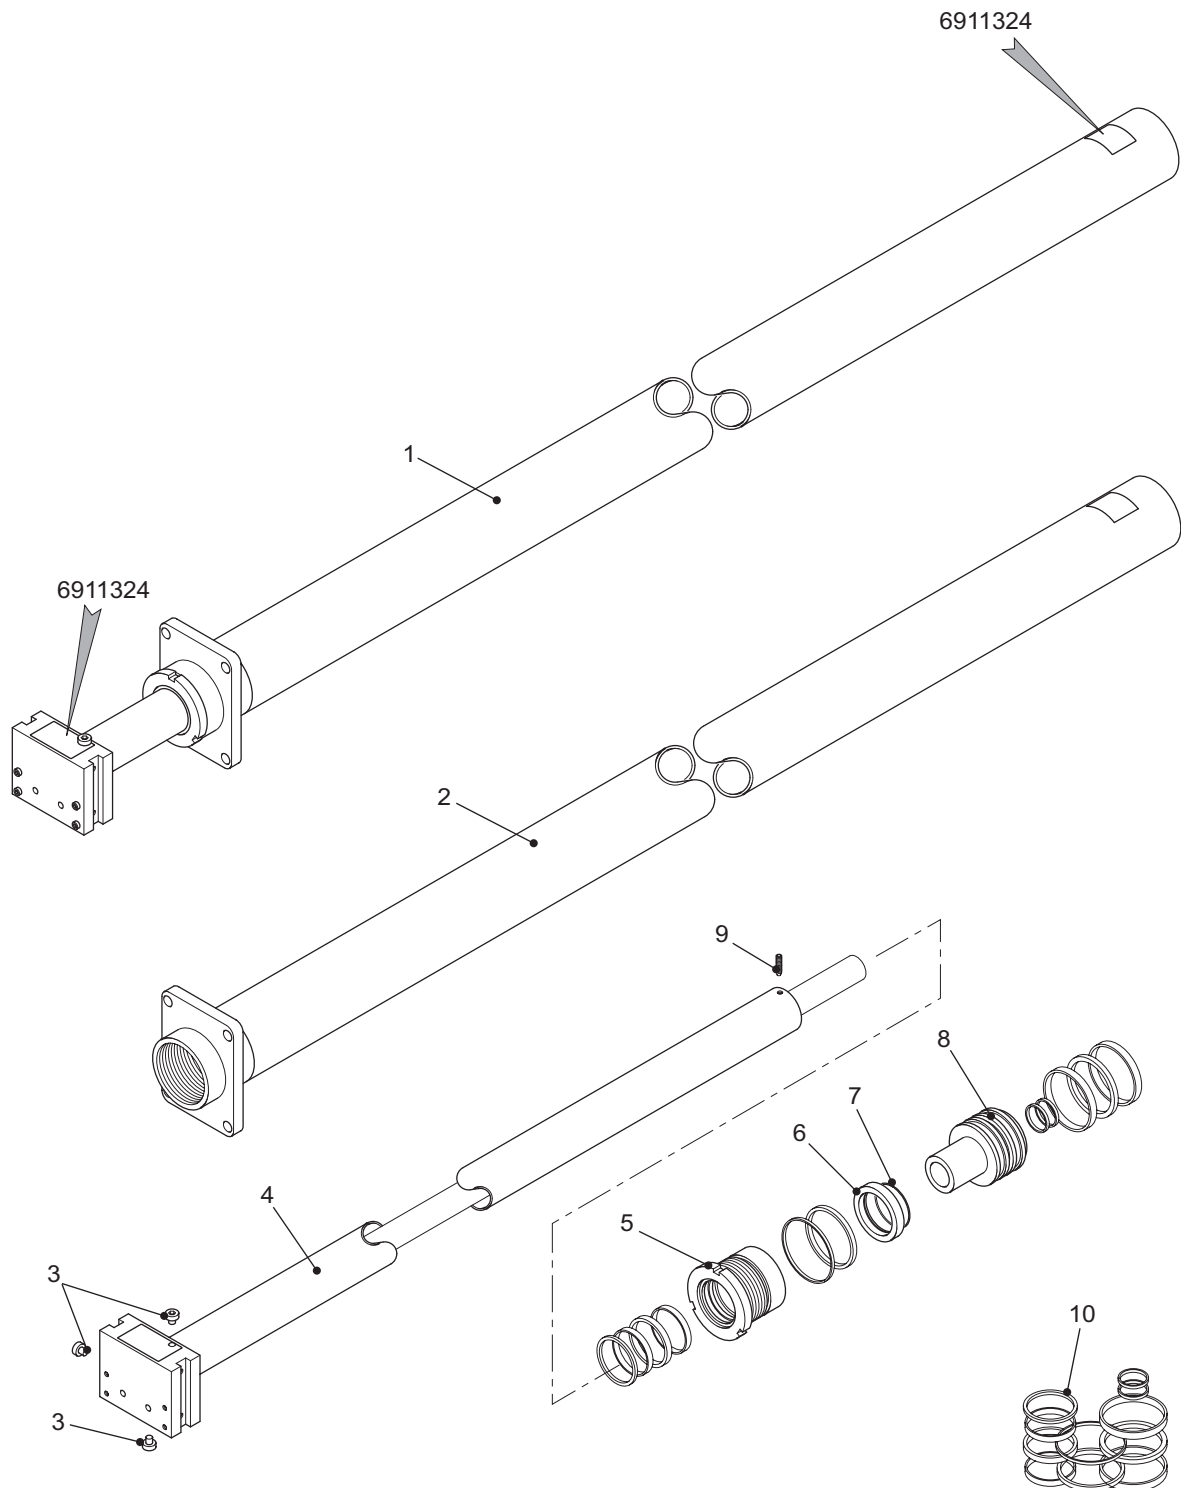


SPC003020

Telescope Cylinder - T40140

[illegible]

Telescope Cylinder - T40170

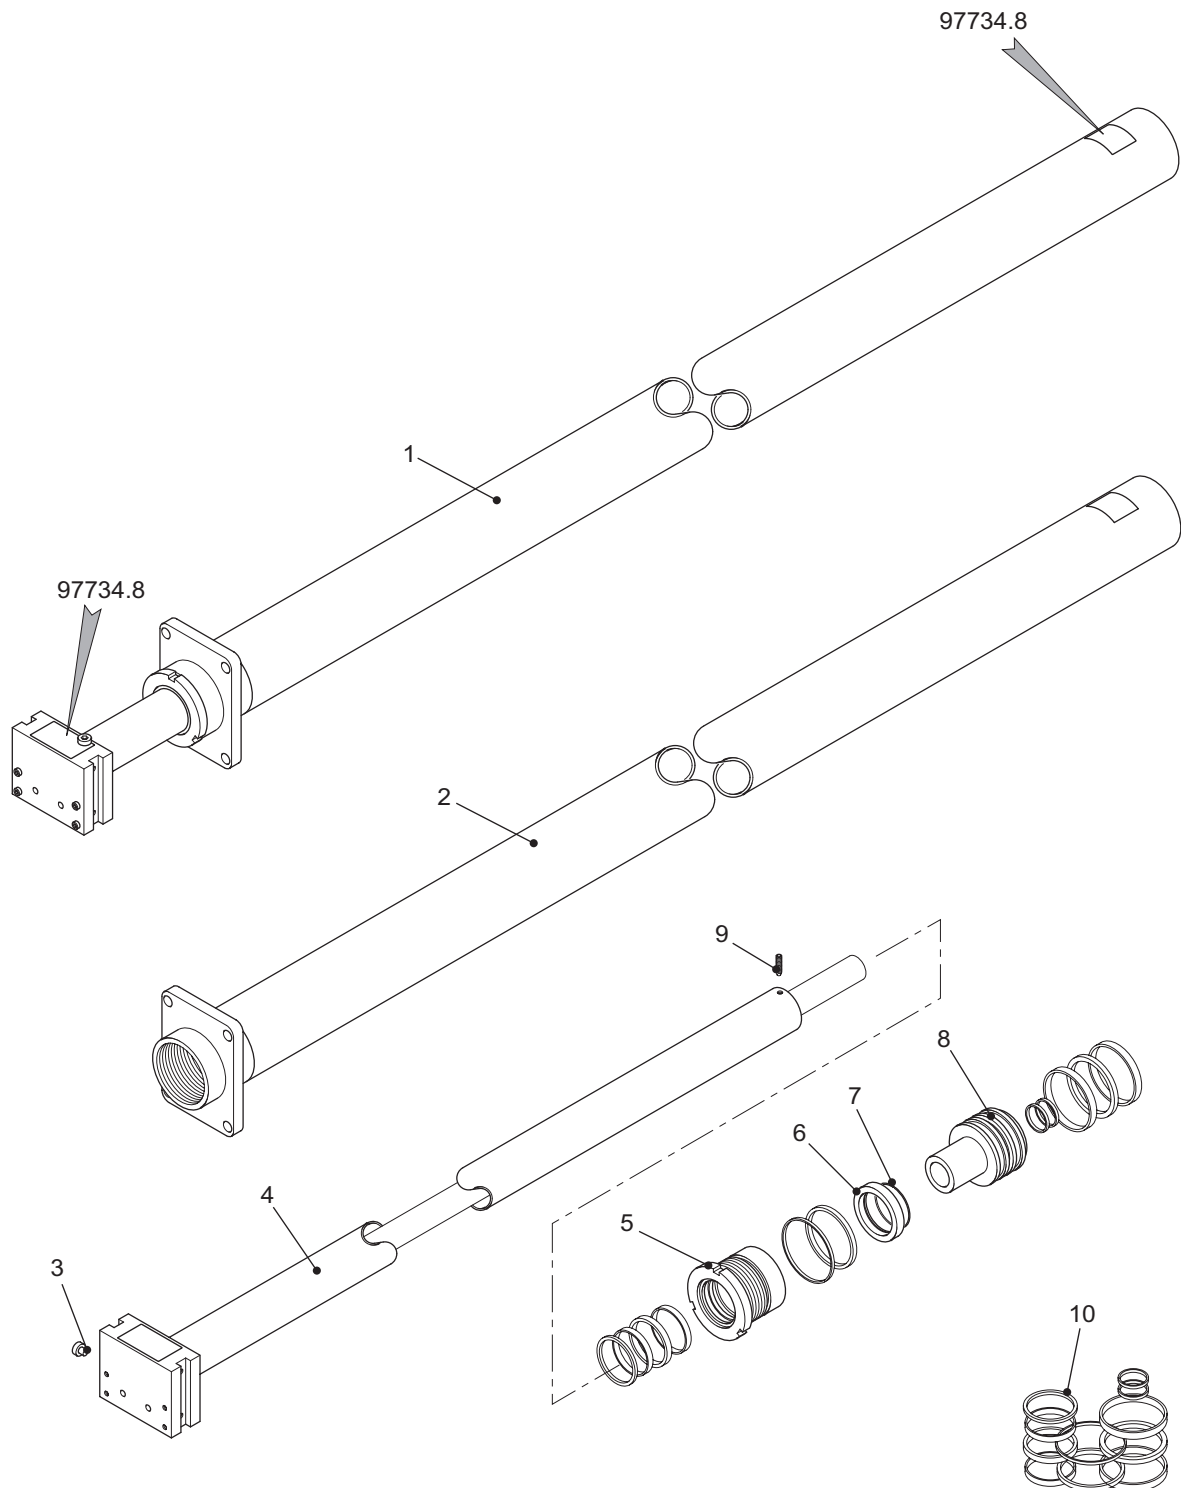


SPC003021

Telescope Cylinder - T40170

[illegible]

Tilt Cylinder 97814.8

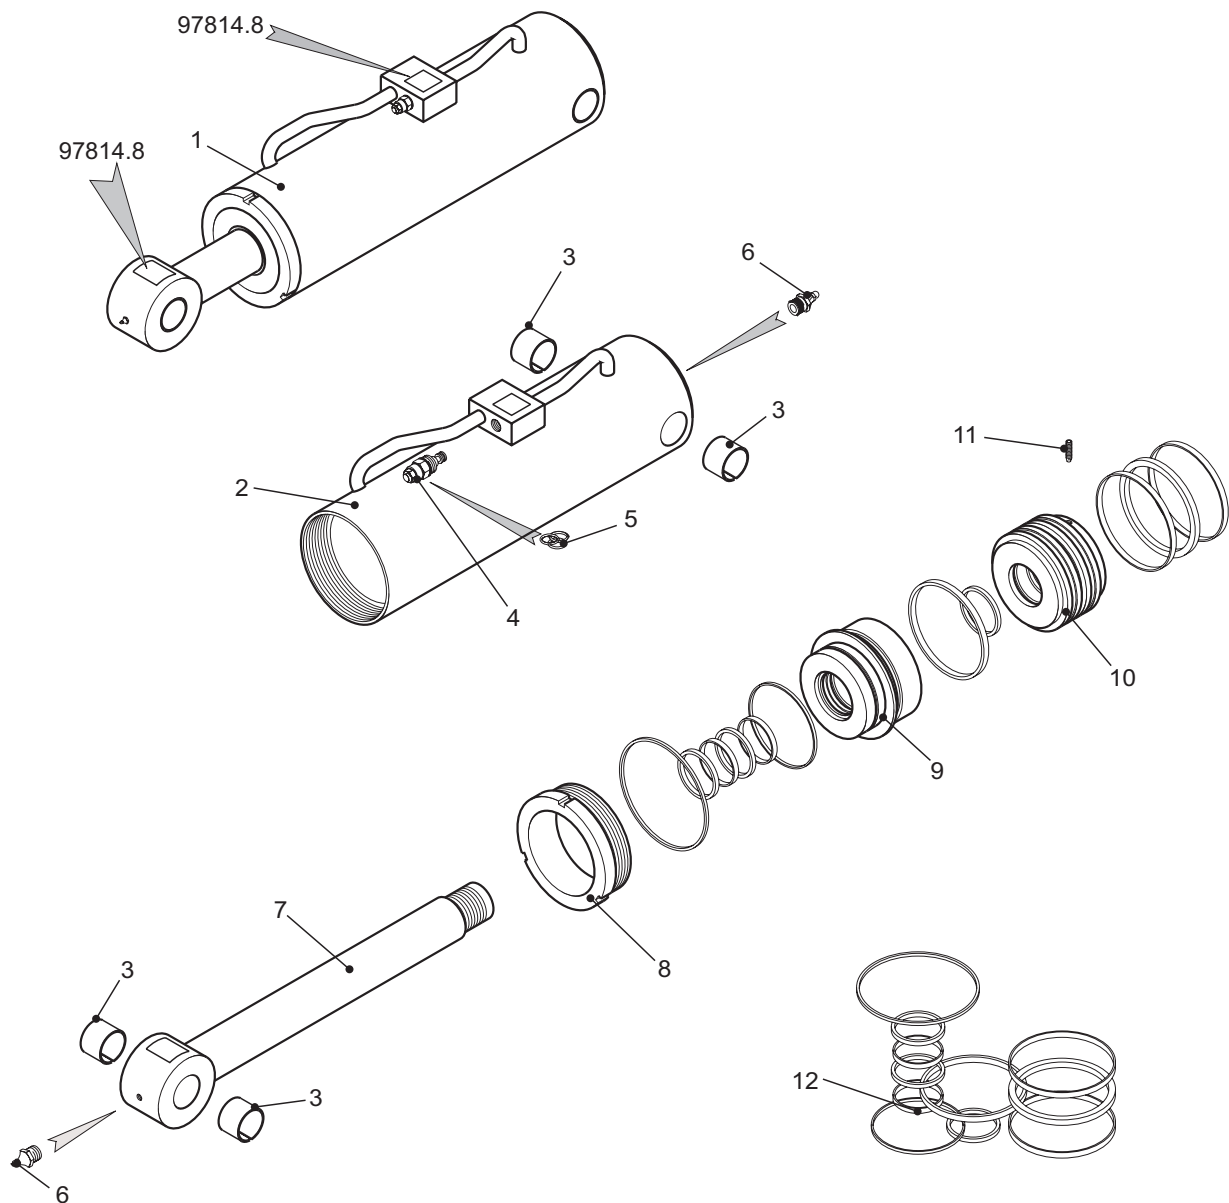


SPC003022

Tilt Cylinder

97814.8


[illegible]



Tilt Cylinder
6914552

[illegible]

Quick Attach Cylinder

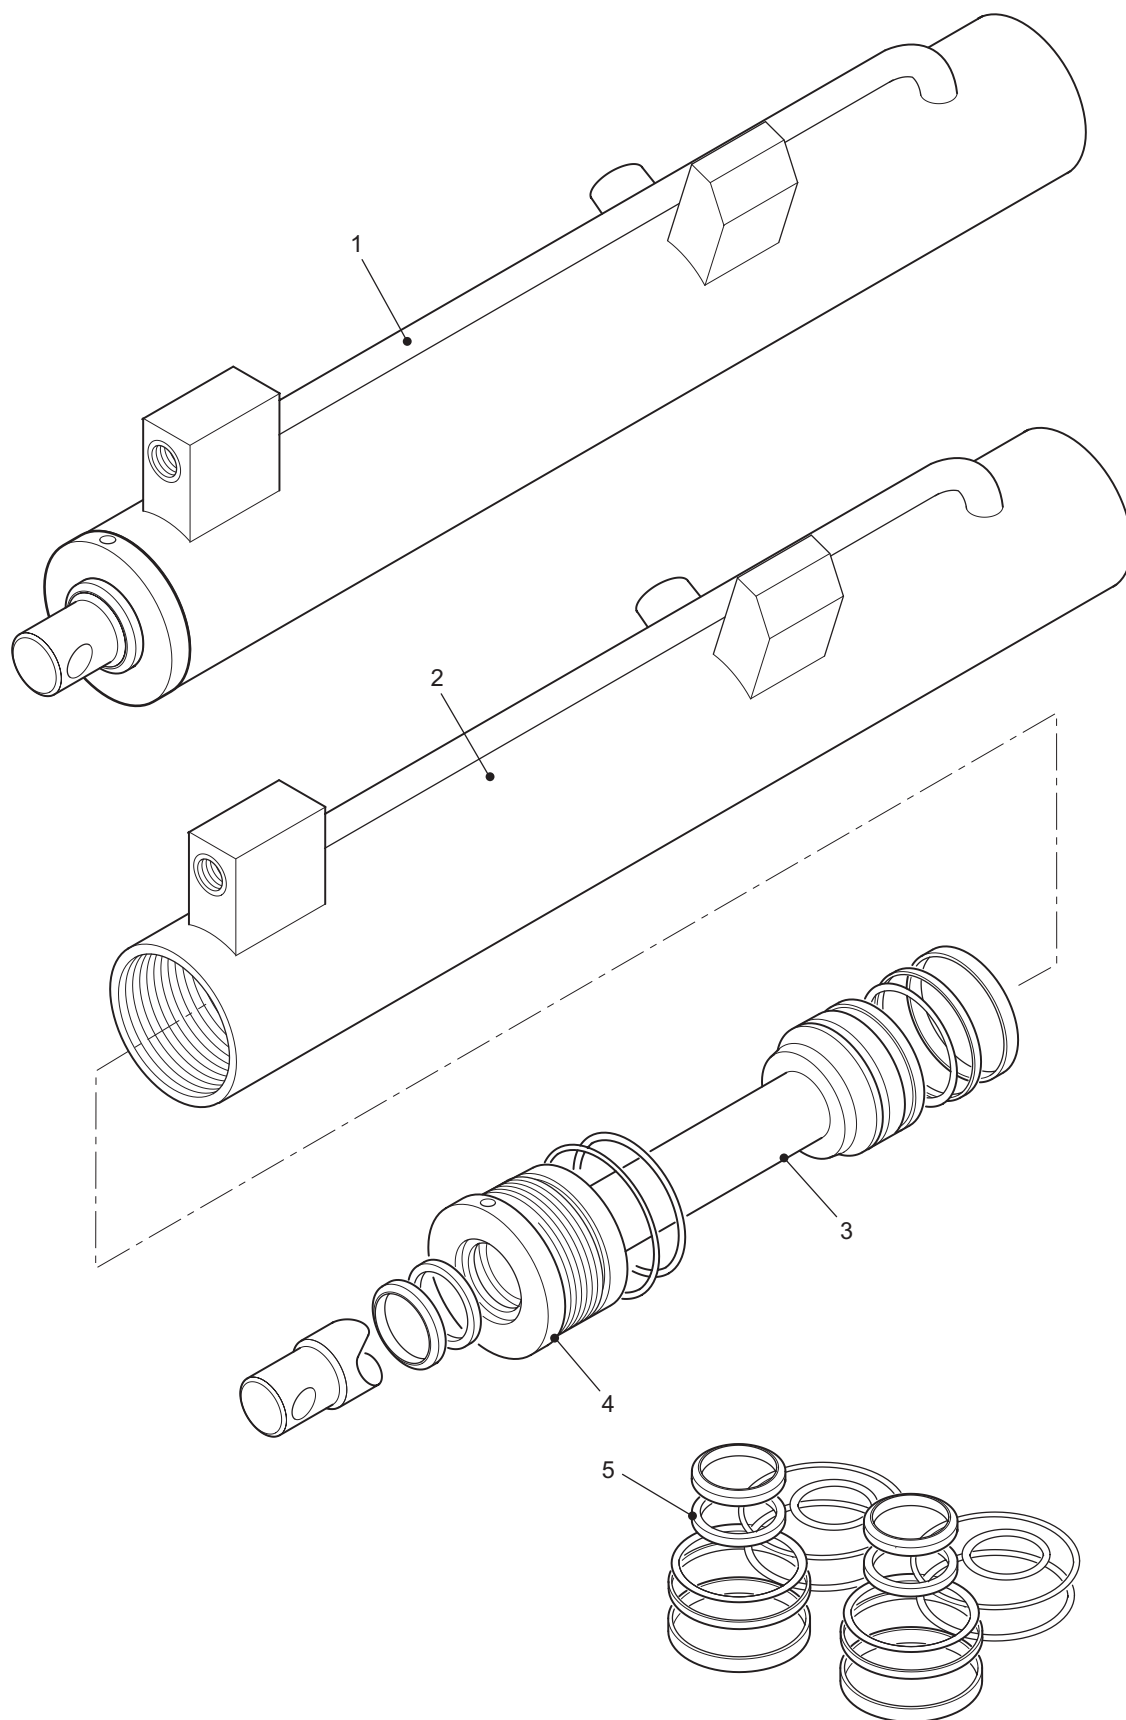


SPC003024

Quick Attach Cylinder

[illegible]


Frame Level Cylinder

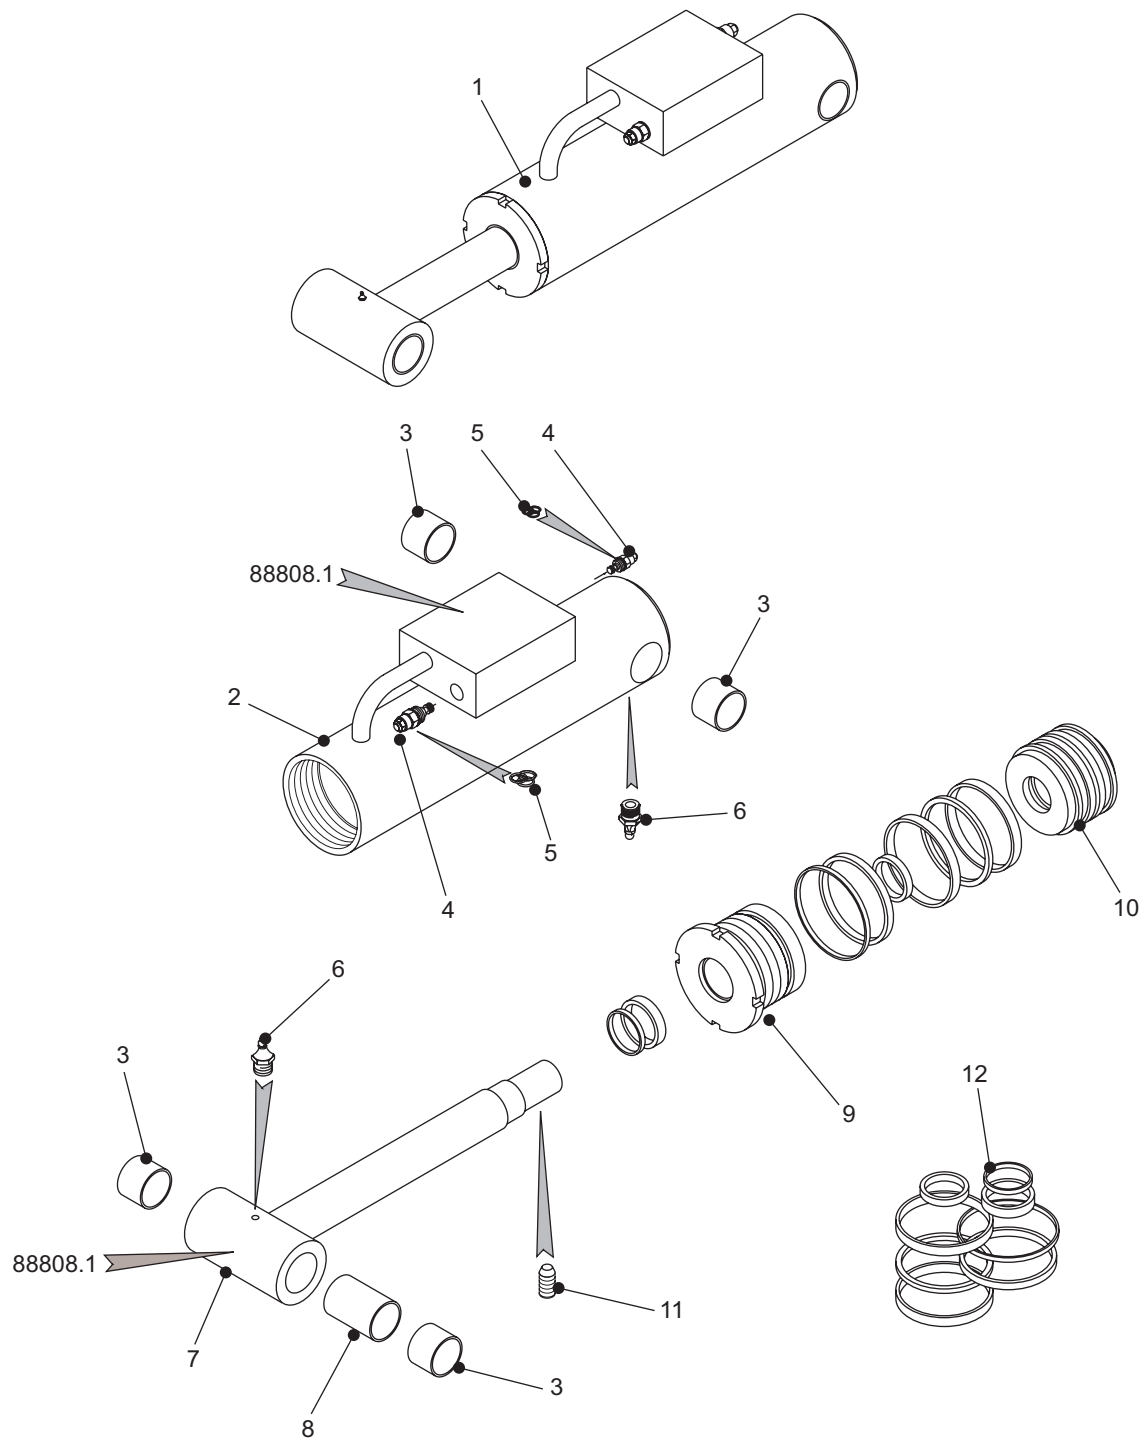

SPC003025


Frame Level Cylinder

[illegible]



T40140 - T40170 Telescopic Handlers HYDRAULIC SYSTEM


Stabilizer Cylinder 6914550

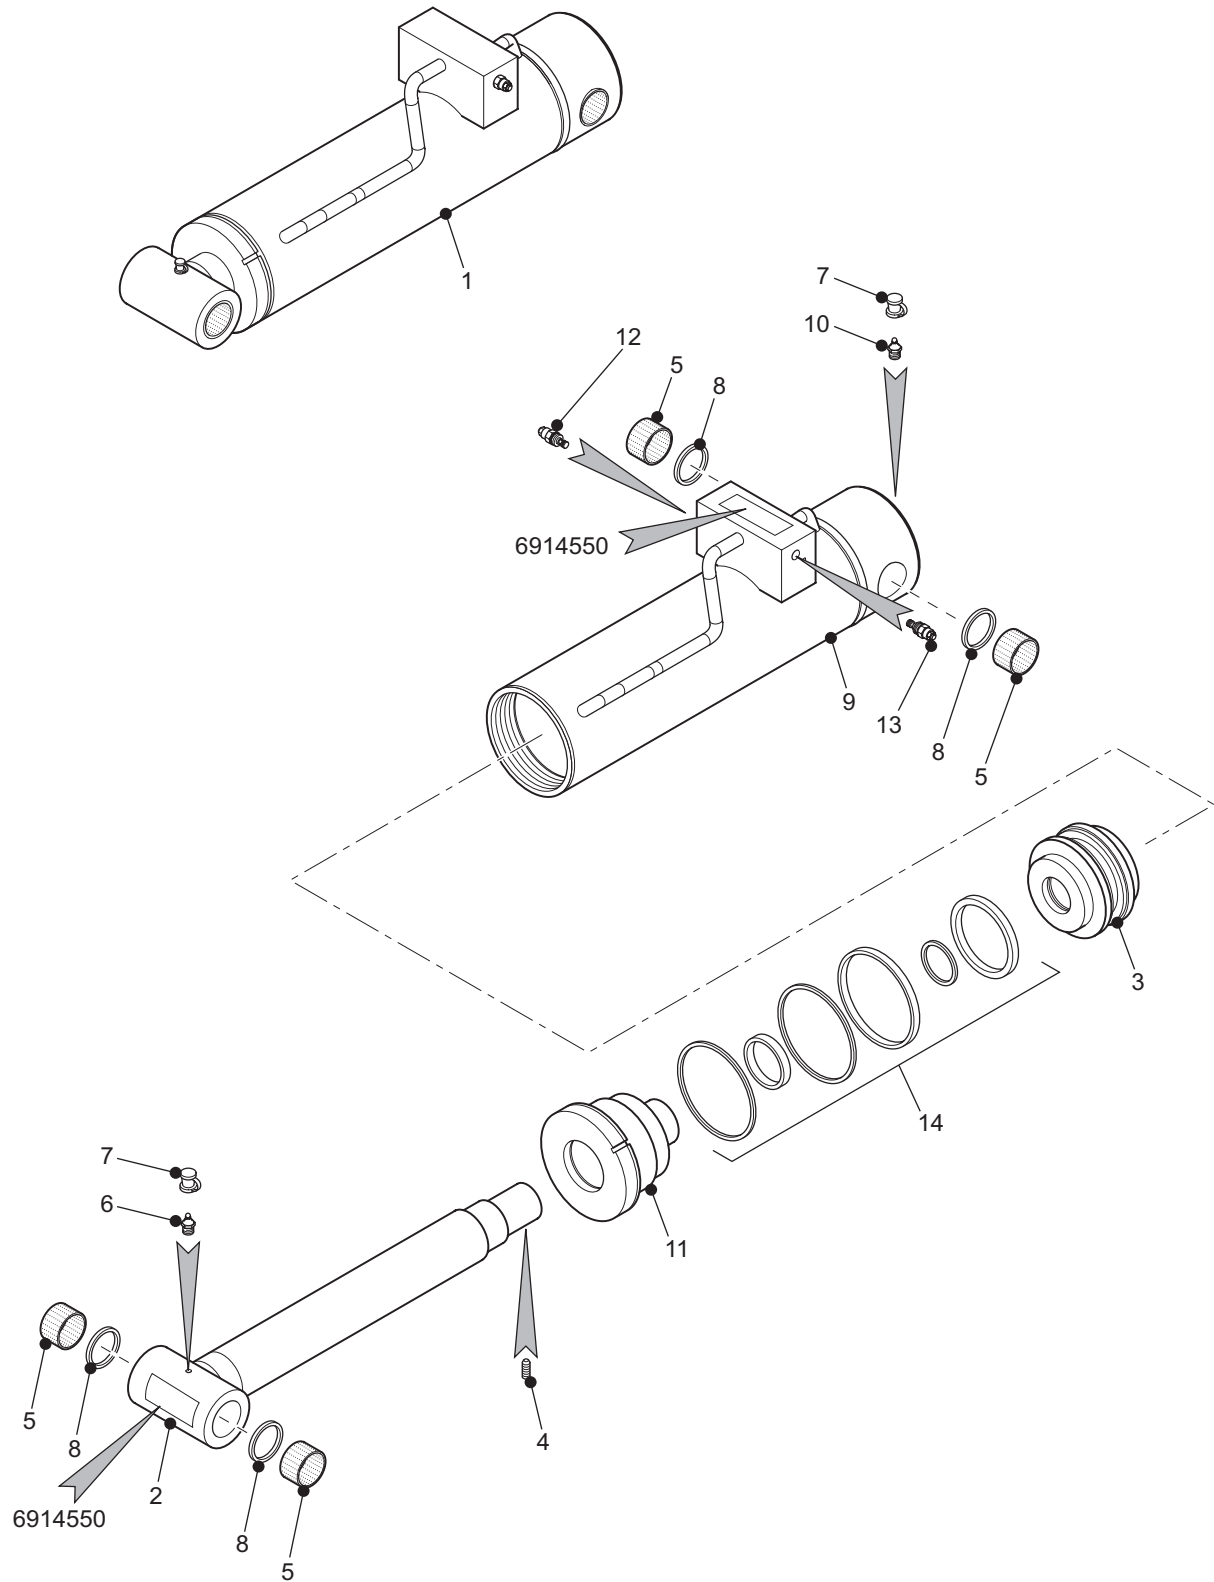

SPC003027

T40140 - T40170 Telescopic Handlers HYDRAULIC SYSTEM

Hydraulic Motor for cooler fan

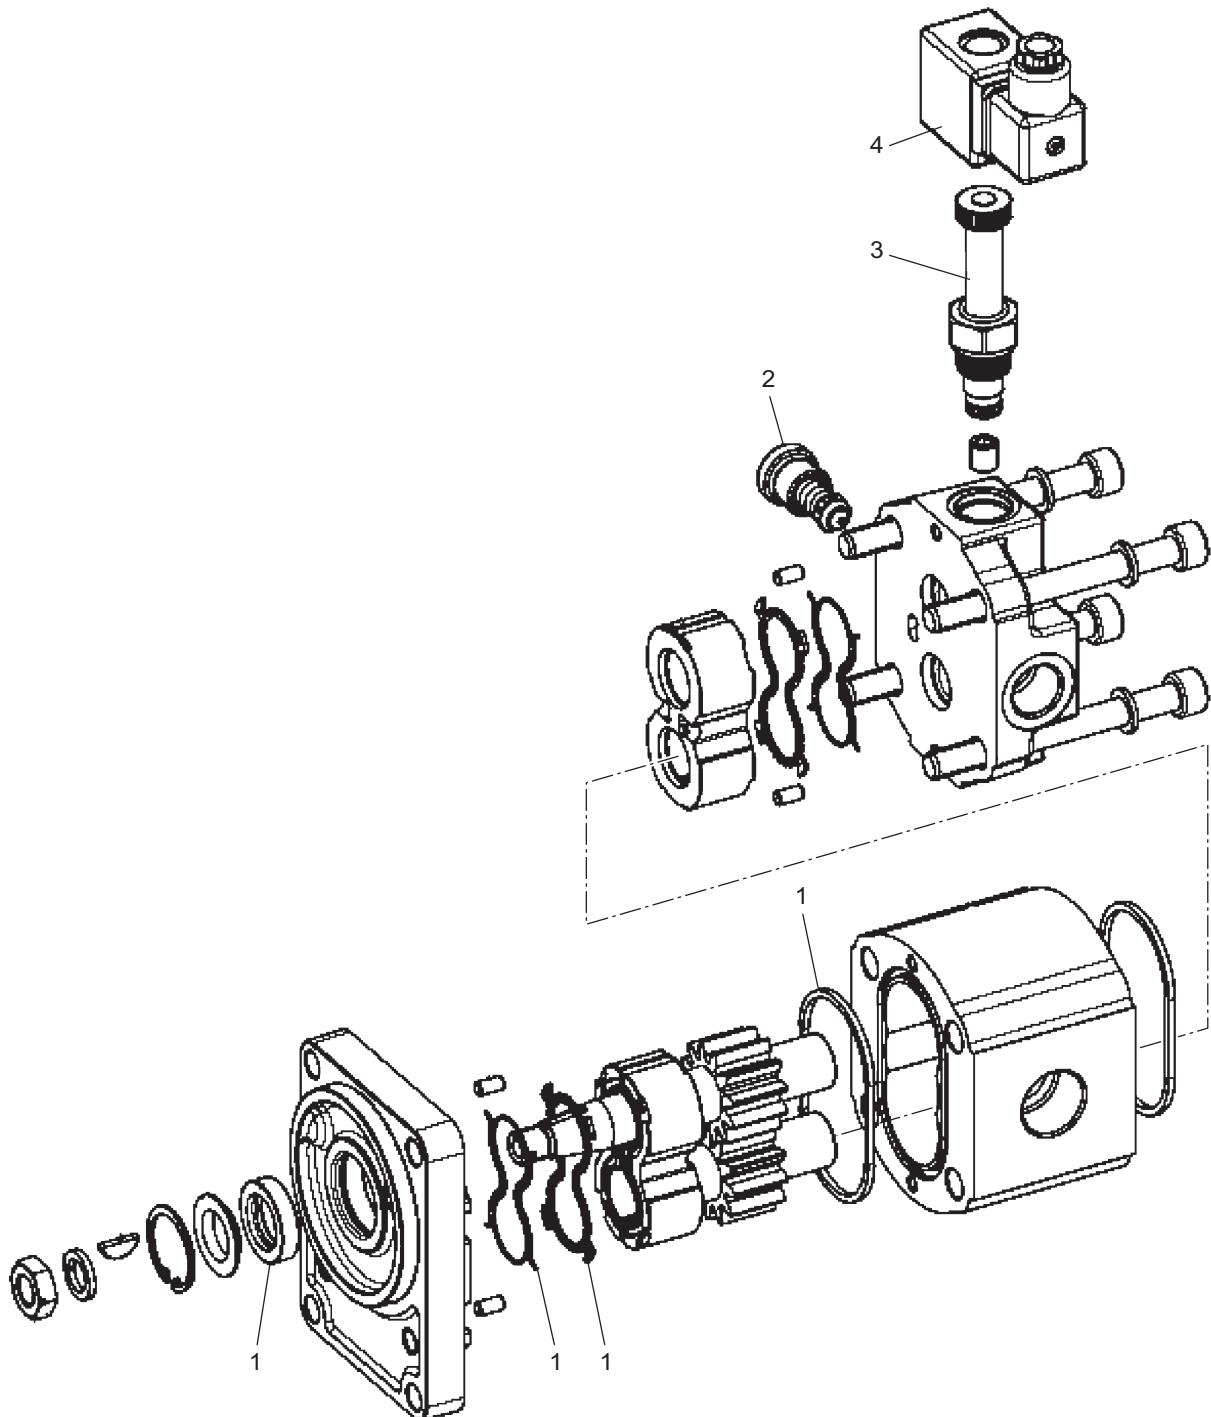


SPC003017

Hydraulic Motor for cooler fan

[illegible]

Hydraulic Pump Installation

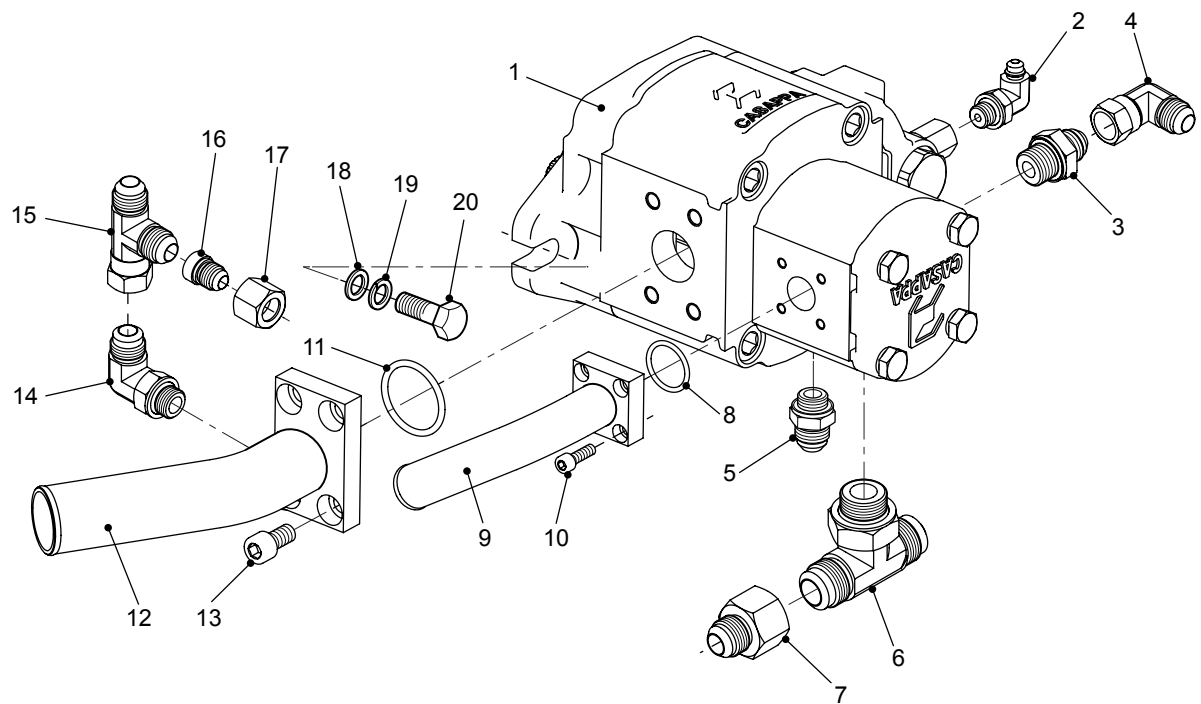


SPC003028

Hydraulic Pump Installation

[illegible]

Hydraulic Pump Assy

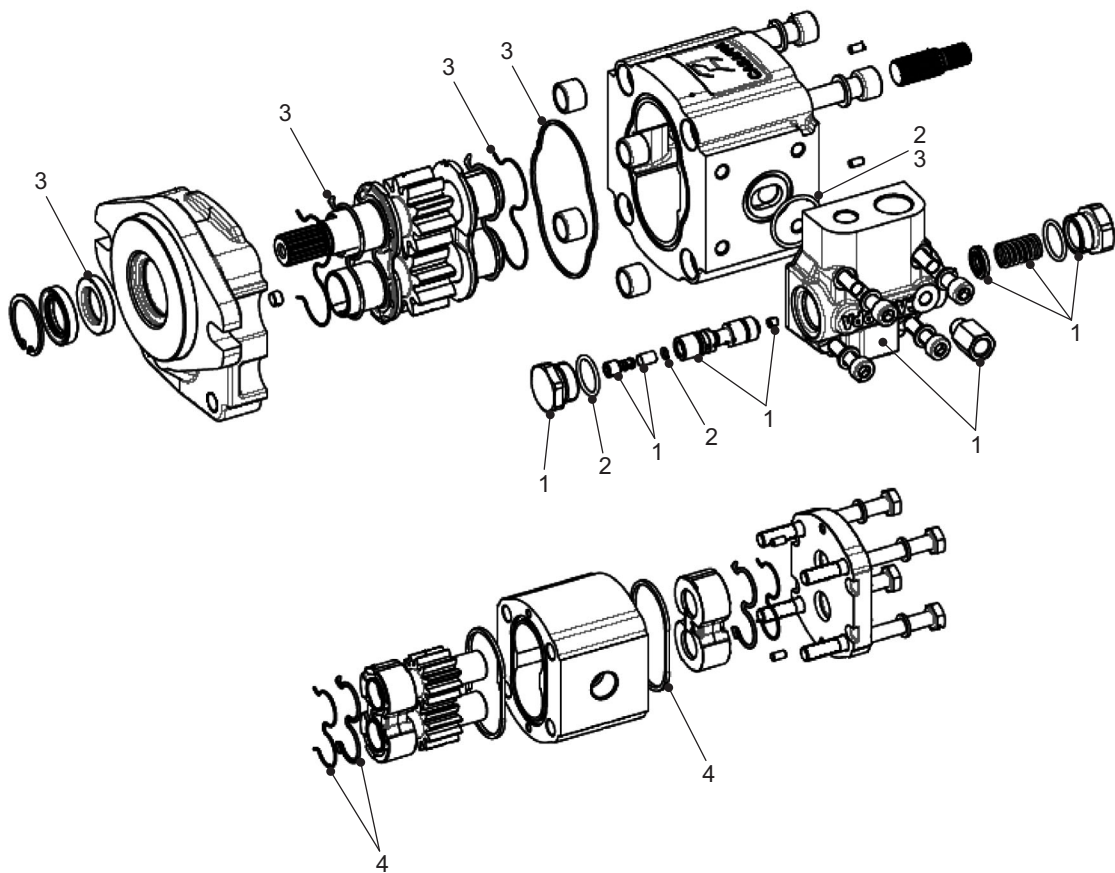


SPC003029

Hydraulic Pump Assy

[illegible]

Hydraulic Control Valve Installation

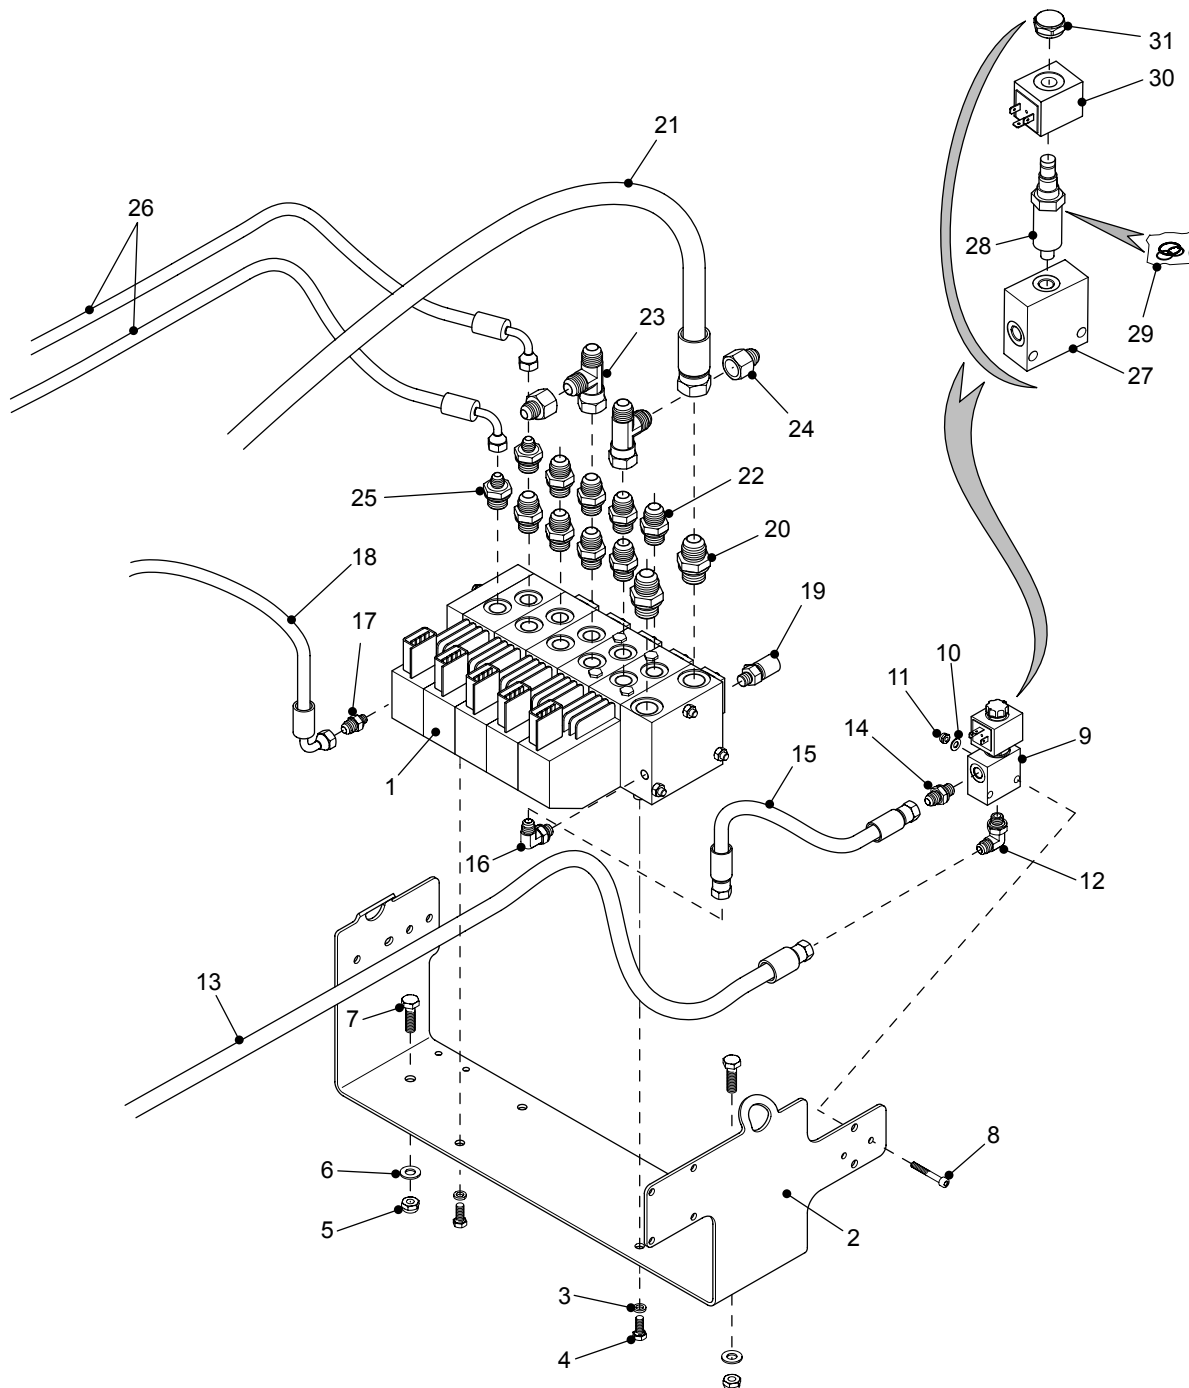


SPC003031

Hydraulic Control Valve Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	95265.5	Hydraulic control valve			1
2	6912206	Support			1
3	89519.3	Washer			4
4	01596.6	Screw			4
5	100345-09A	Nut			2
6	000350-03W	Washer			2
7	01607.1	Screw			2
8	27834.1	Screw			2
9	6910876	Valve	Pos. 27 to 31		1
10	000350-01U	Washer			2
11	100345-06W	Nut			2
12	100370-18C	Elbow			1
13	70865.1	Hose			1
14	022375-31Z	Adapter			1
15	101319-25M	Hose			1
16	100370-18C	Elbow			1
17	82181.9	Union			1
18	92323.5	Hose			1
19	54367.8	Pressure Switch			1
20	100375-40U	Adapter			2
21	P02296	Hose			1
22	014375-30H	Adapter			8
23	008372-28F	T- union			2
24	100375-43X	Reducer			2
25	77912.4	Adapter			2
26	92323.5	Hose			2
27	6912530	Block			1
28	6912586	Valve			1
29	6912592	Seals kit			1
30	6912528	Coil			1
31	6912529	Nut			1

Hydraulic Control Valve: In- and Outlet

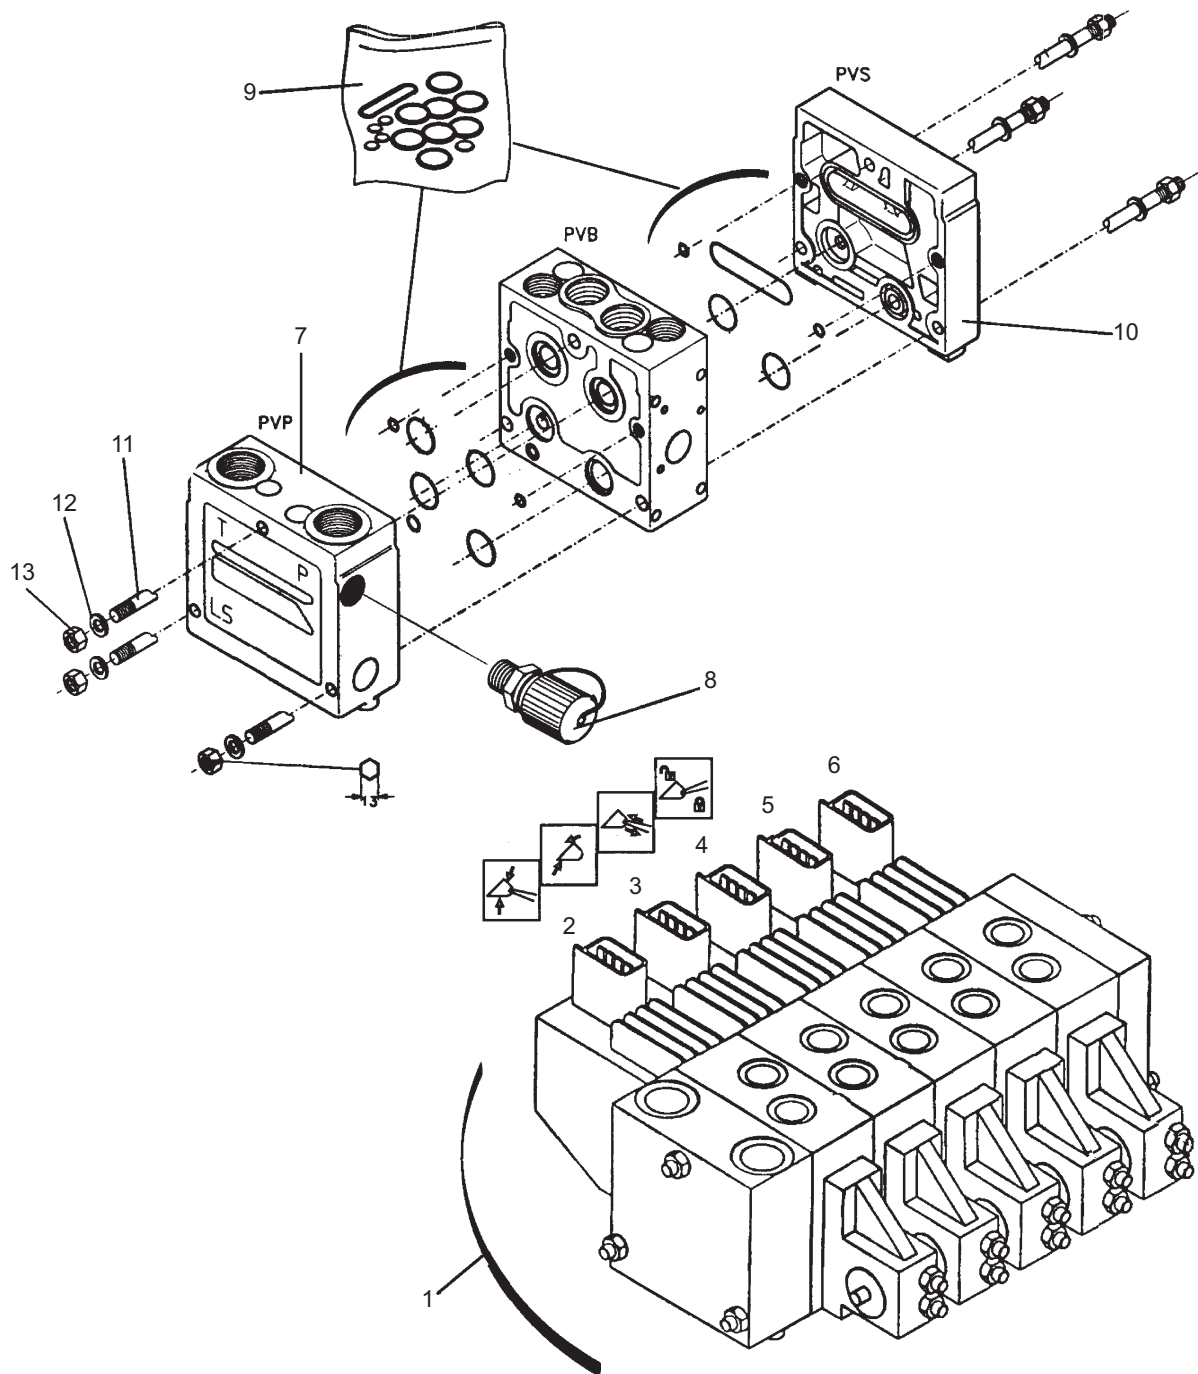


SPC003032

Hydraulic Control Valve: In- and Outlet

[illegible]

Hydraulic Control Valve Lift Section

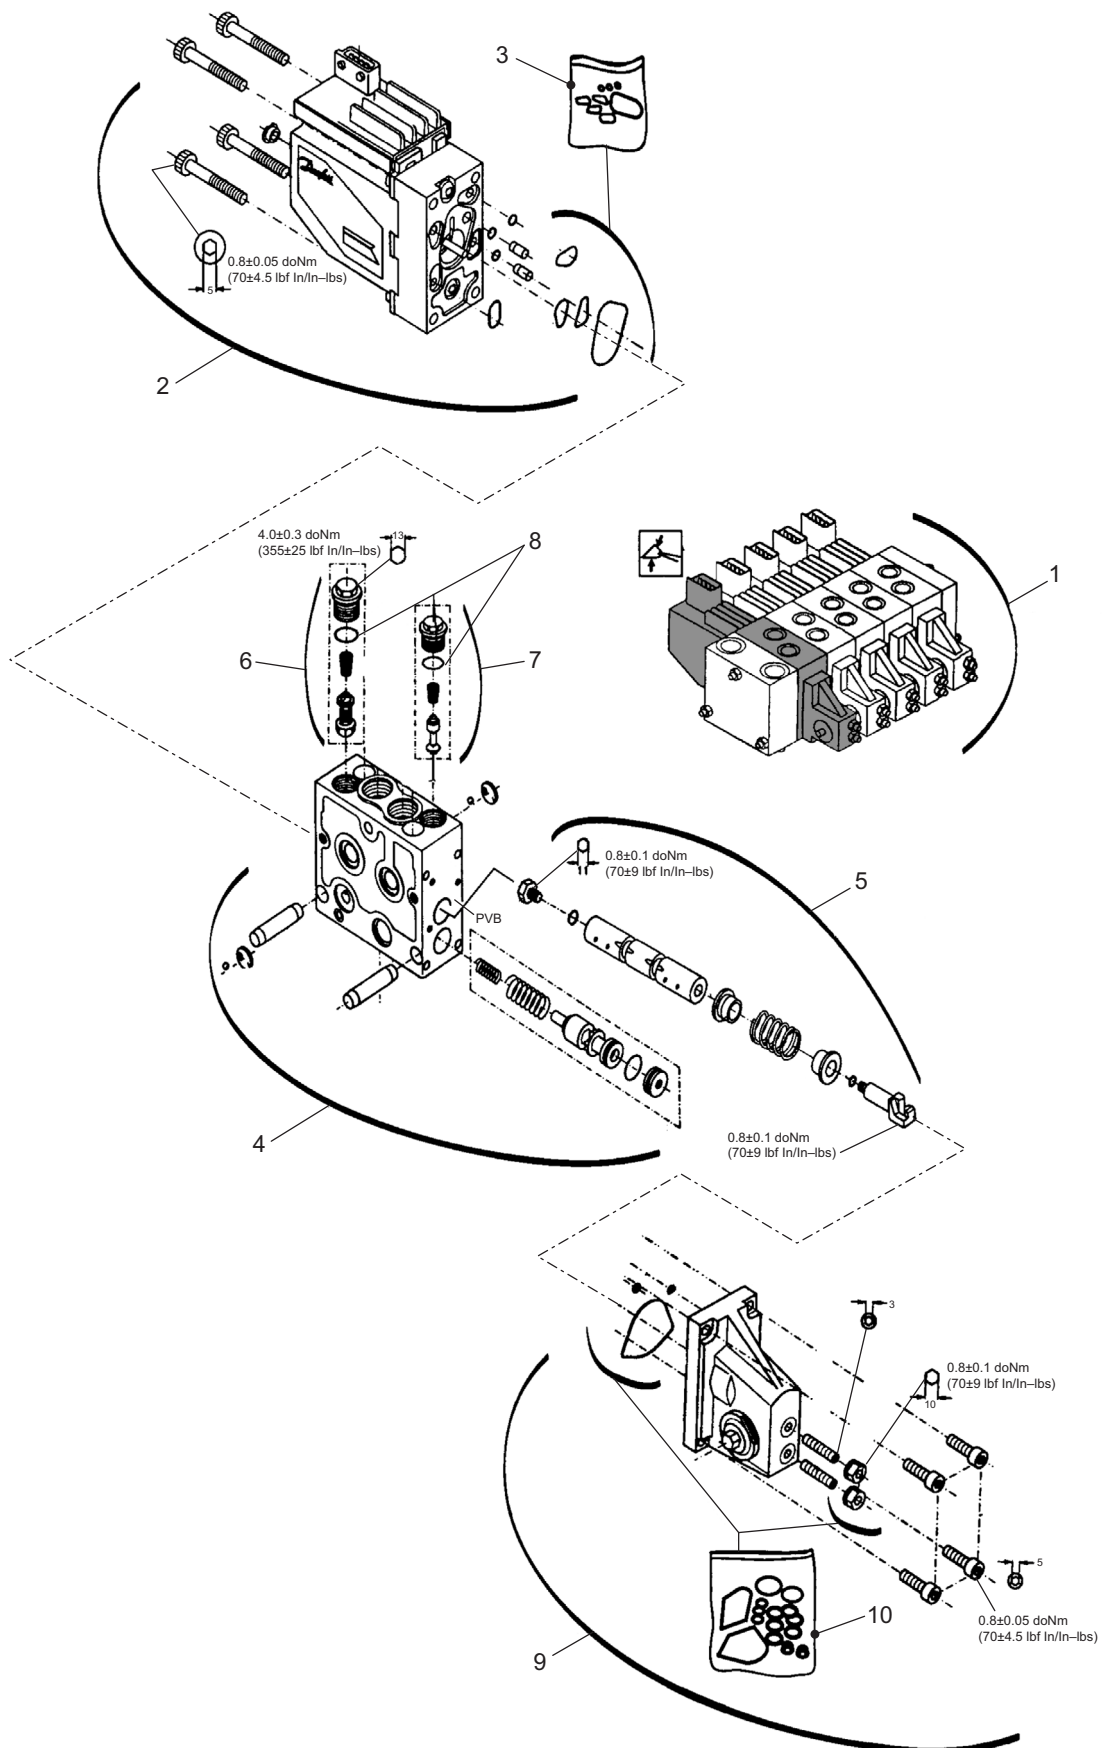


SPC003033

Hydraulic Control Valve Lift Section

[illegible]

Hydraulic Control Valve Tilt Section

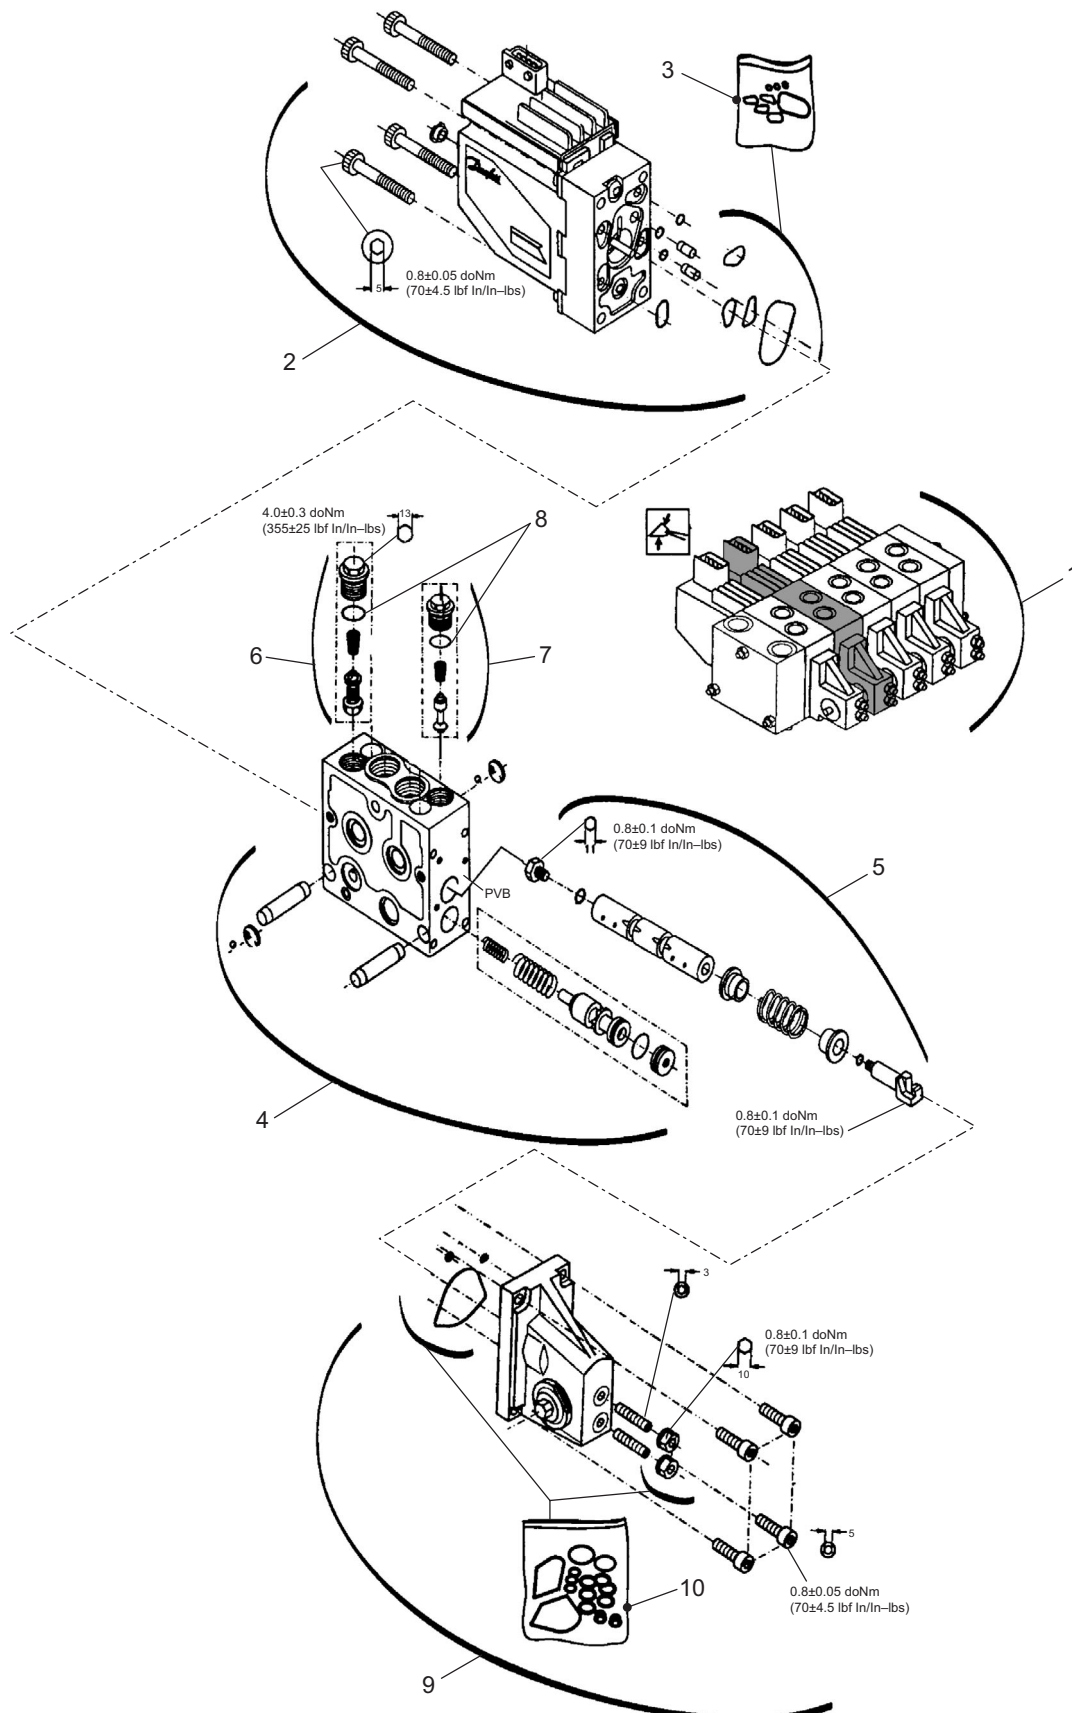


SPC003034

Hydraulic Control Valve Tilt Section

[illegible]

Hydraulic Control Valve Telescope Section

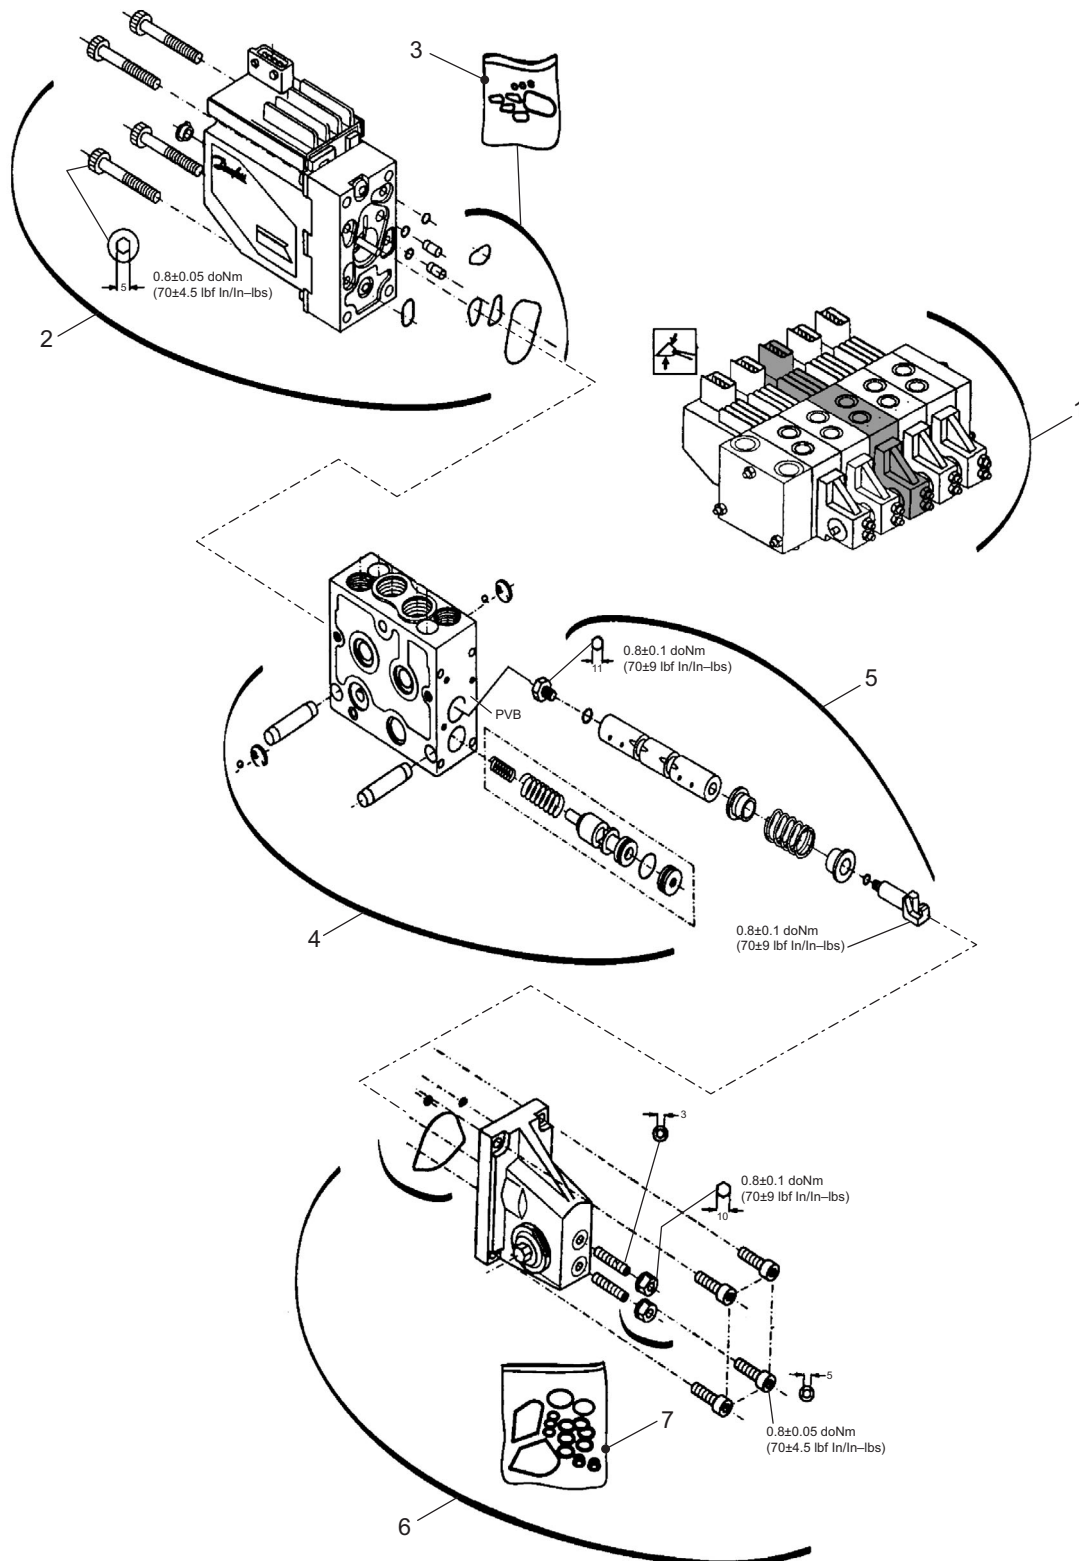


SPC003035

Hydraulic Control Valve Telescope Section

[illegible]

Hydraulic Control Valve Auxiliary Hydraulics Section

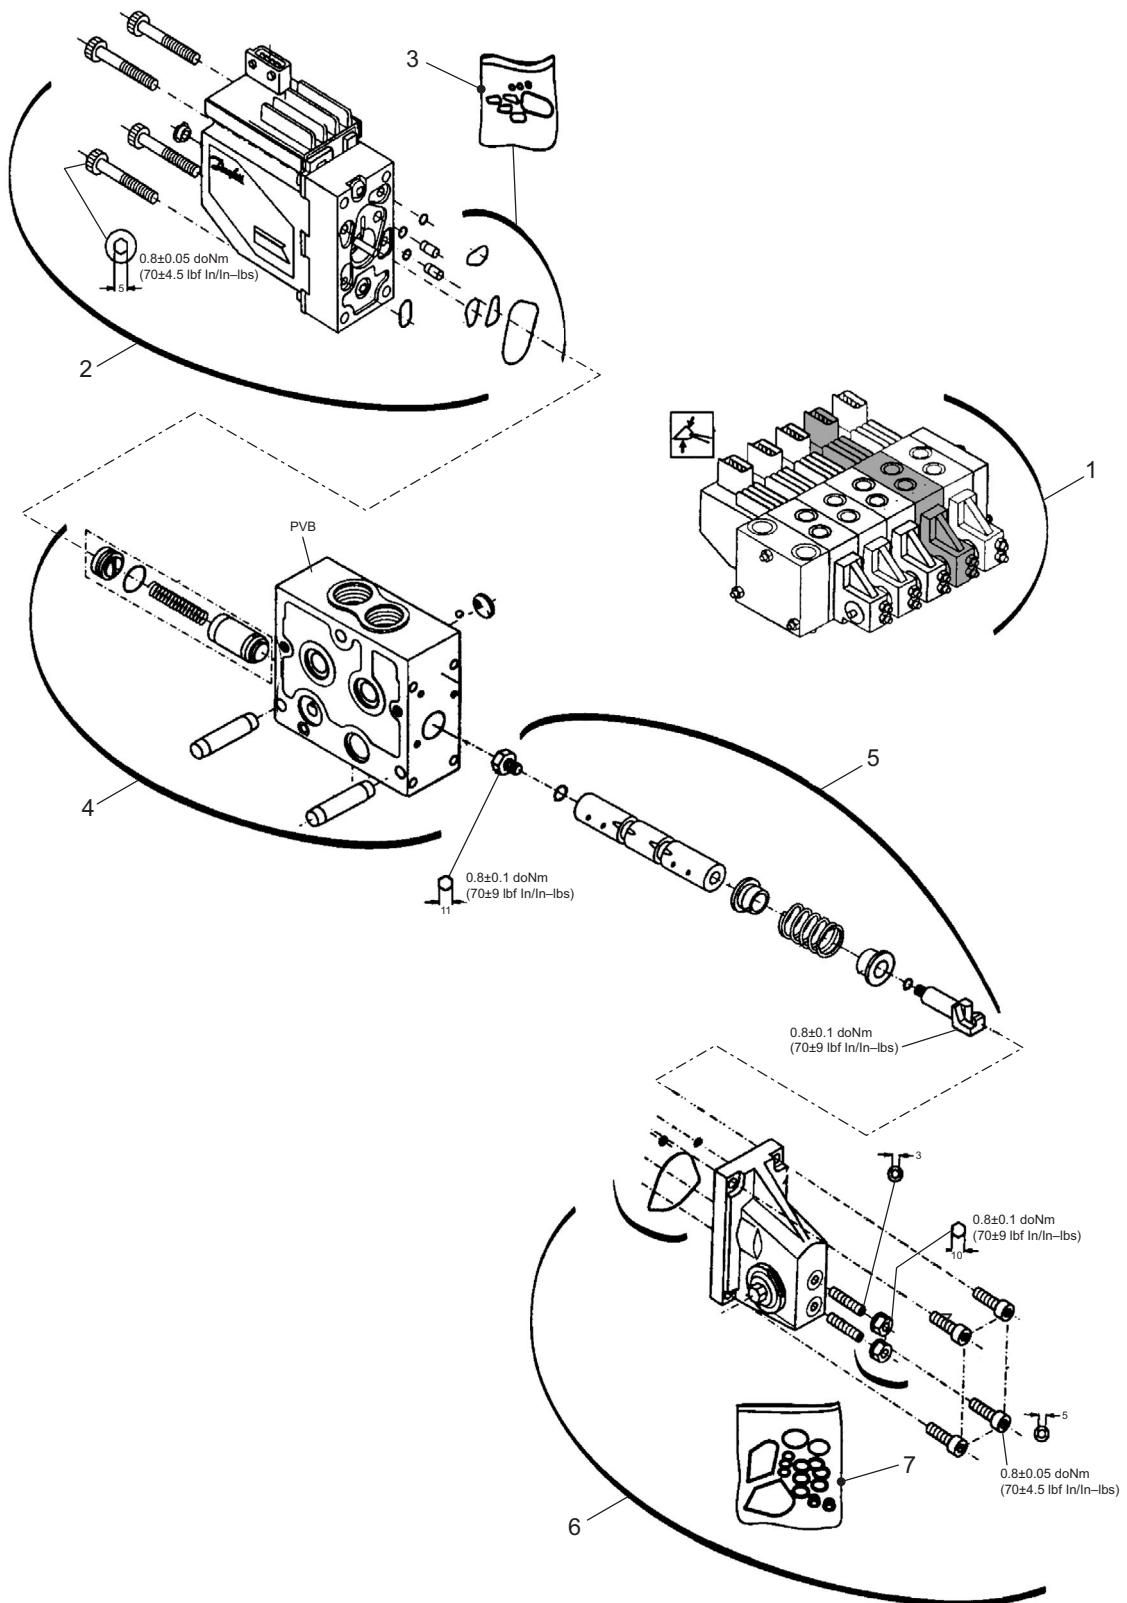


SPC003036

Hydraulic Control Valve Auxiliary Hydraulics Section

[illegible]

Hydraulic Control Valve Frame Leveling Section

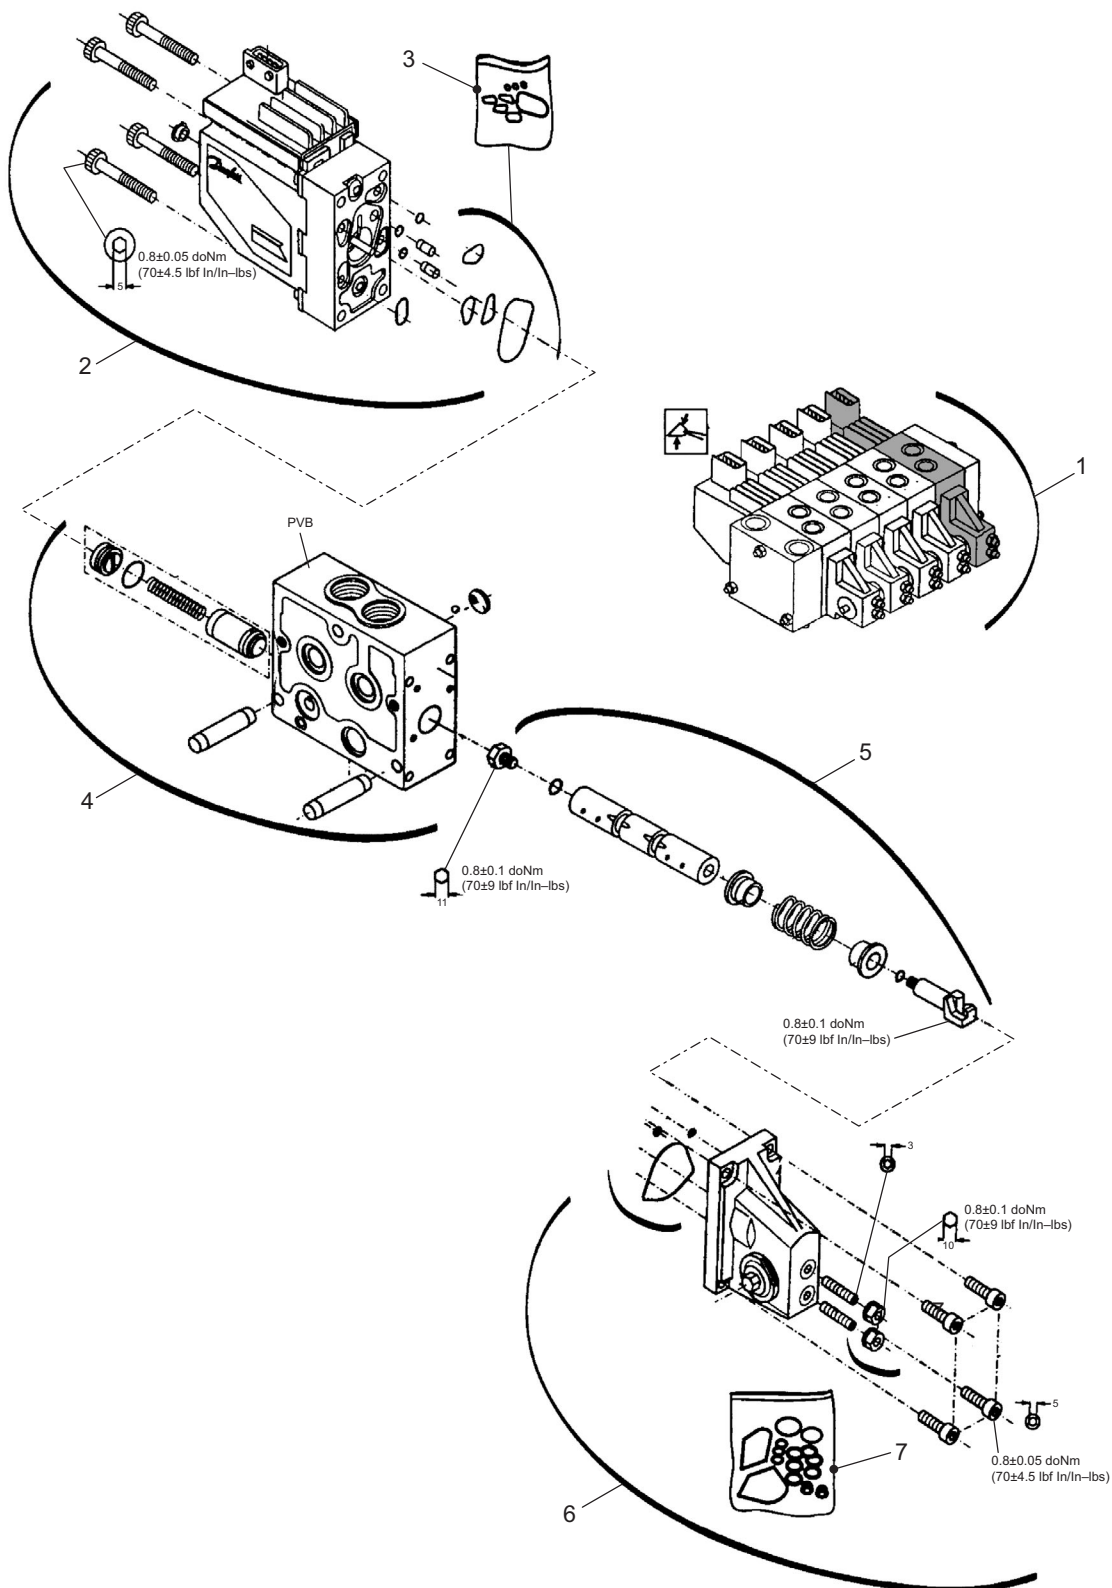


SPC003037

Hydraulic Control Valve Frame Leveling Section

[illegible]

Hydrostatic Hoses and Fittings

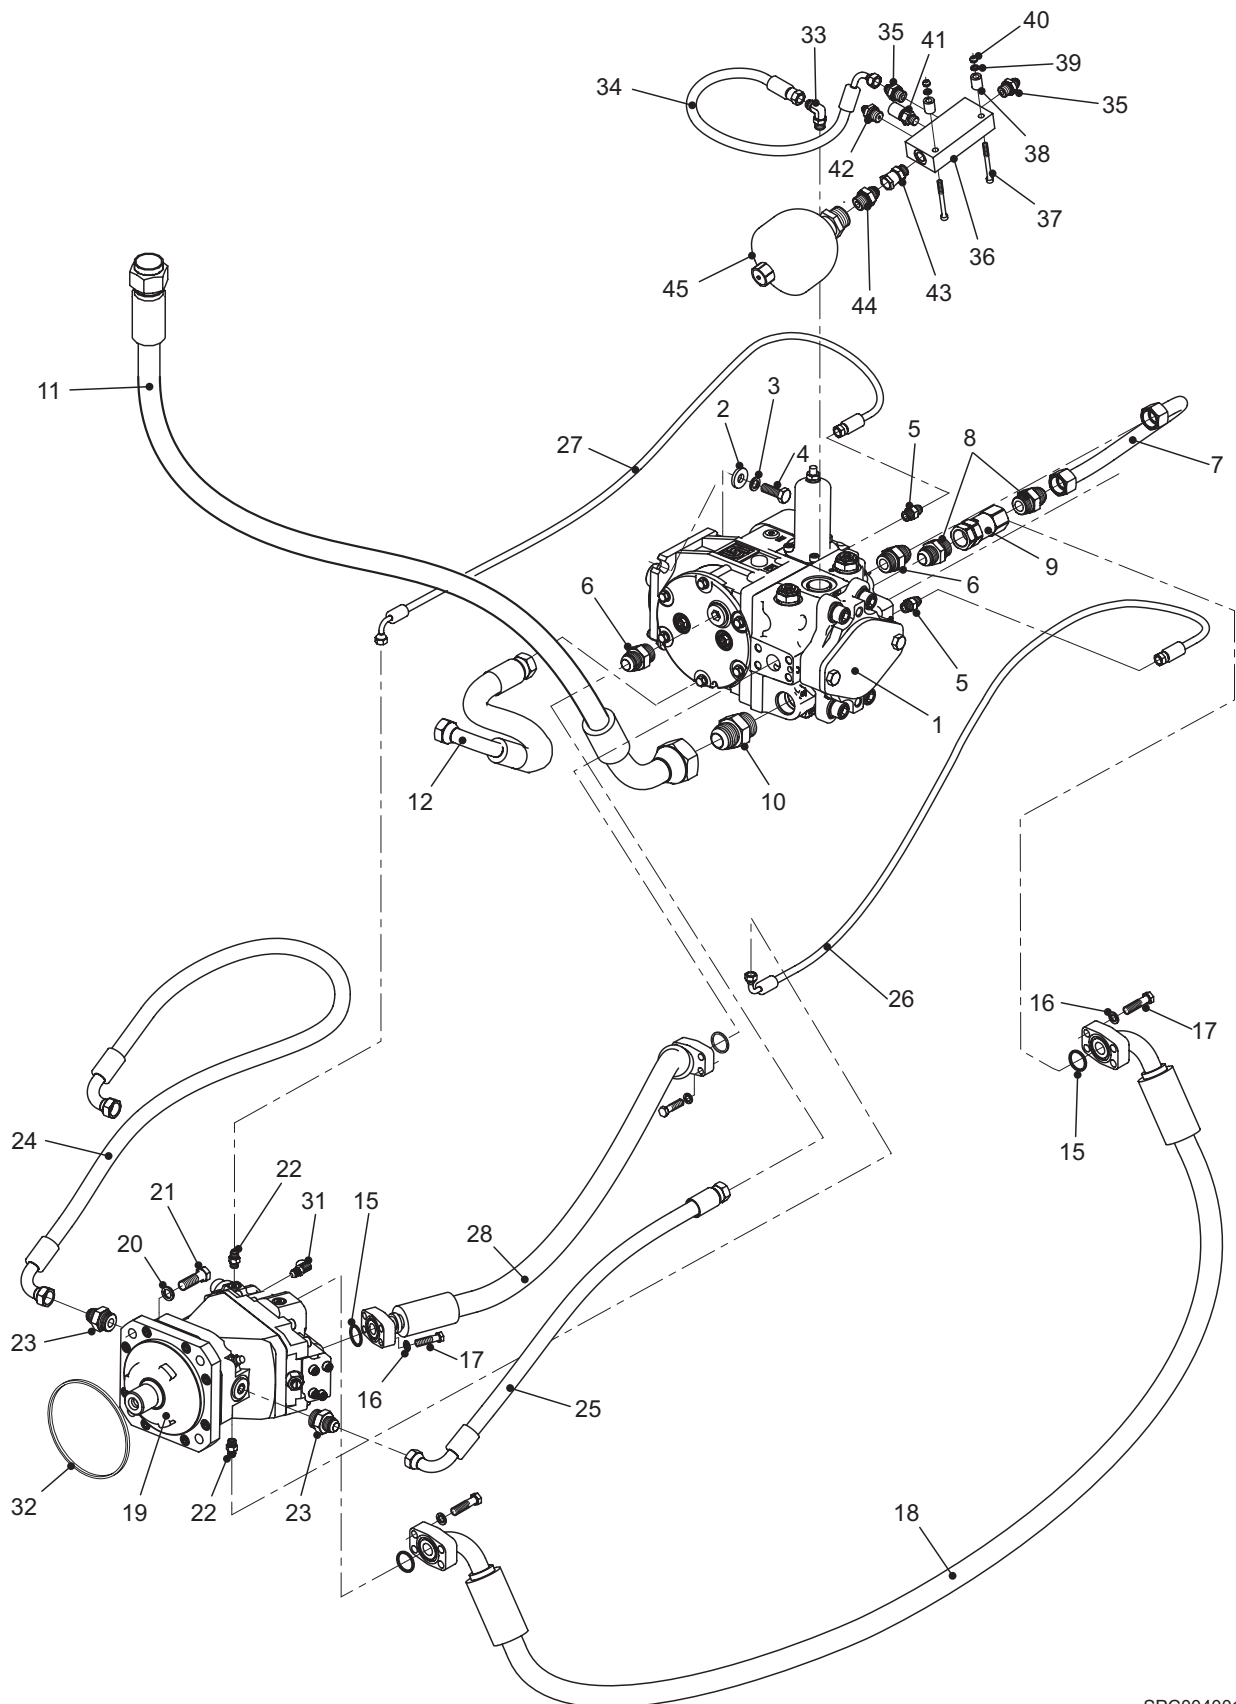


SPC004001

Hydrostatic Hoses and Fittings

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	NAP	Hydrostatic drive pump	Order now 6913565 ; Was 6910533 ; For details, see page 207	3632 11116/ & 3633 11181/	1
	6913565	Hydrostatic pump	See page 211 for details.	/3632 11117 & /3633 11182	1
2	100454-17G	Washer			4
3	89517.7	Washer			4
4	01613.9	Screw			4
5	67046.3	Adapter			3
6	014375-33L	Adapter			2
7	6909780	Pipe			1
8	100375-40U	Adapter			2
9	97880.9	Check valve			1
10	78705.1	Adapter			1
11	6913204	Hose	Was 6912449		1
12	6910599	Hose			1
15	013304-20J	O-Ring			4
16	92210.4	Washer			16
17	28689.8	Screw			16
18	88581.4	Hose			1
19	78256.5	Hydrostatic Motor Assy	See page 217 for details.		1
20	89518.5	Washer			4
21	100338-18Z	Screw			4
22	67046.3	Adapter			2
23	014375-96E	Connector			2
24	6913659	Hose	Was 6911032		1
25	6914746	Hose	Was 6913429 + 008372-14Q		1
26	67198.2	Hose			1
27	67198.2	Hose			1
28	88580.6	Hose			1
31	72065.6	Pressure switch			1
32	82025.8	O-ring			1
33	010370-38Q	Union			1
34	92126.2	Hose			1

Hydrostatic Hoses and Fittings

Recurrence of previous drawing

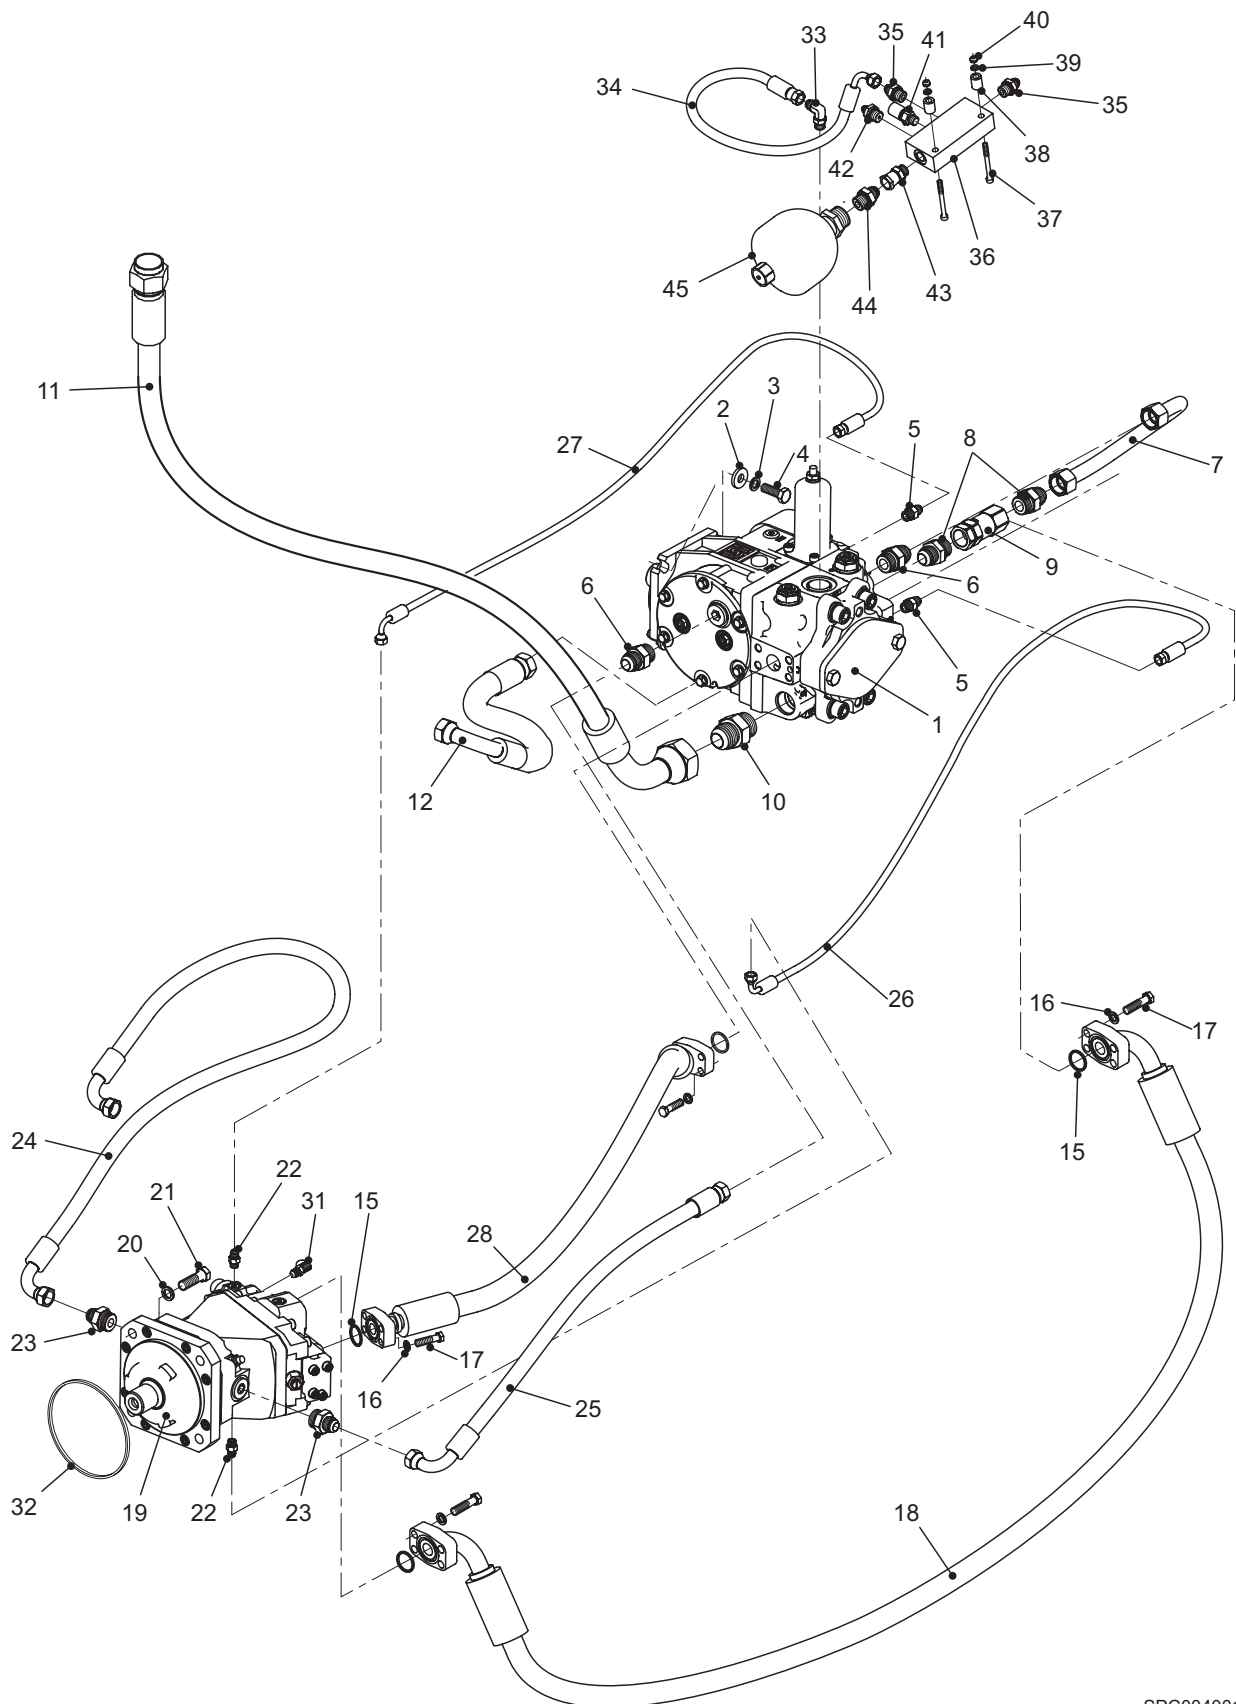


SPC004001

Hydrostatic Hoses and Fittings

[illegible]

Hydrostatic Pump Assy

For serial nrs: T40140: 3632 11116/ & T40170: 3633 11181/

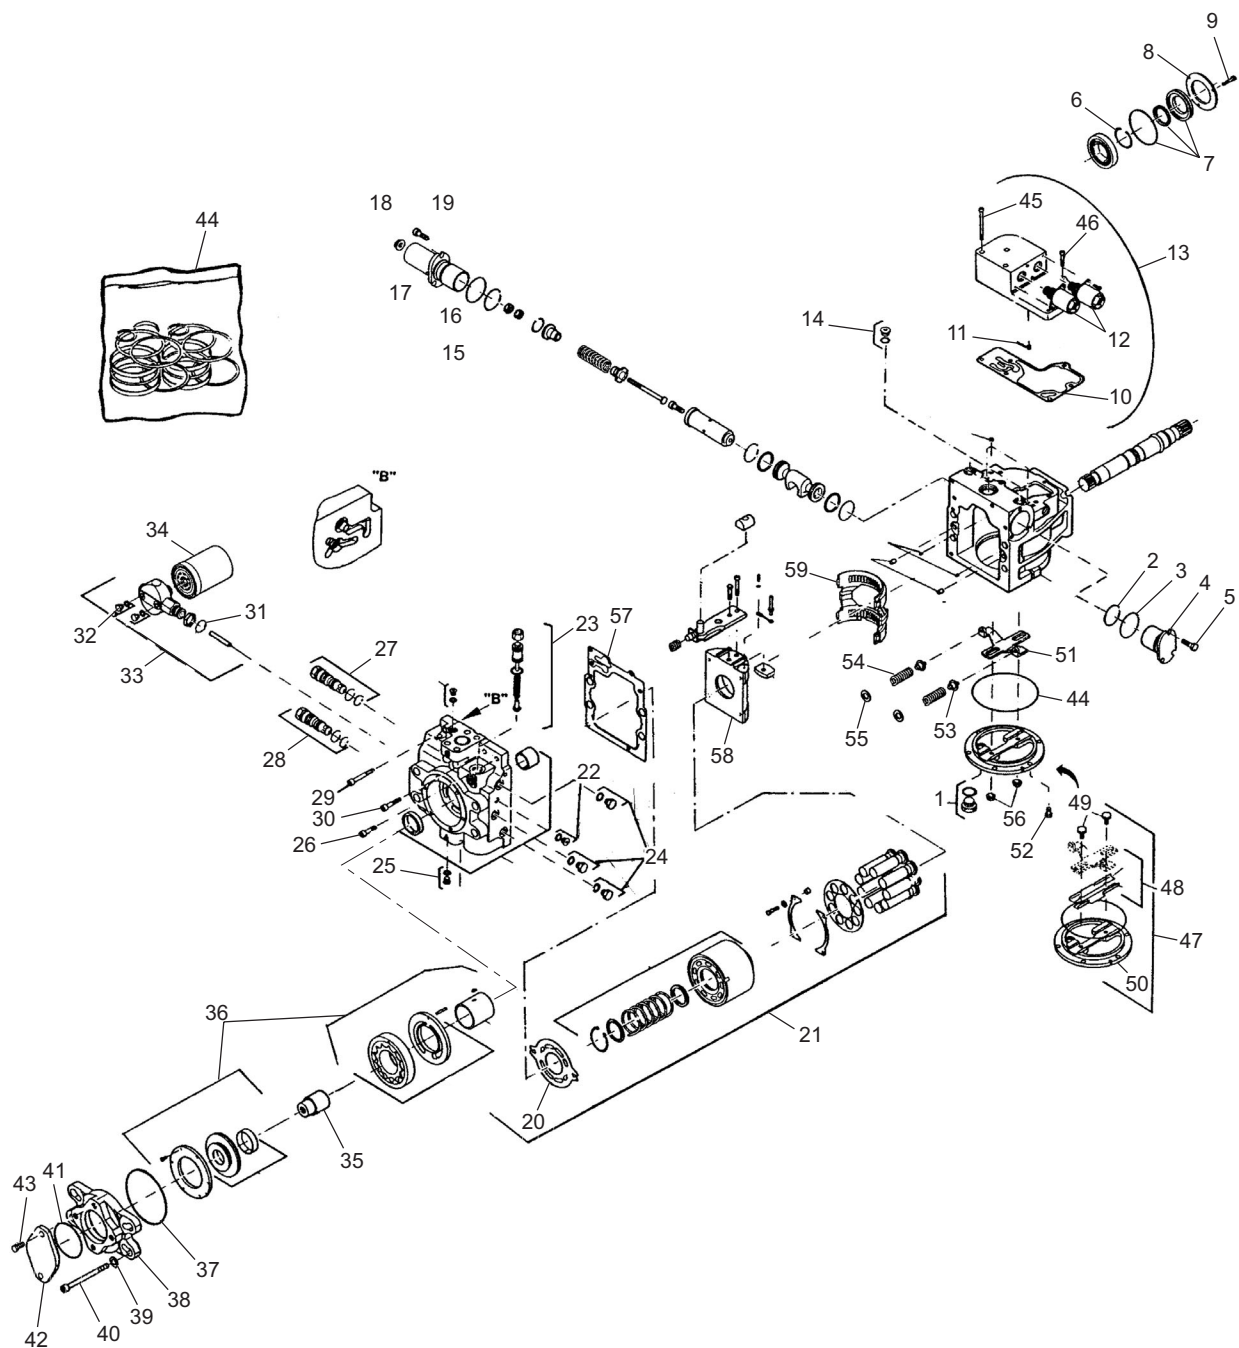

SPC004002

Hydrostatic Pump Assy

For serial nrs: T40140: 3632 11116/ & T40170: 3633 11181/

Item	Part Number	Denomination	Remarks	Serial Number	Qty
	6910533	Hydrostatic Pump Assy	Pos. 1 to 56	3632 11116/ & 3633 11181/	1
1	71675.3	Plug			1
2	71732.2	Seal			1
3	71733.0	Seal			1
4	71734.8	Housing			1
5	71735.5	Screw			3
6	71702.5	Snap ring			1
7	81421.0	Axle seal kit			1
8	81428.5	Plate			1
9	71706.6	Screw			3
10	81429.3	Seal			1
11	81431.9	Nozzle			1
12	97400.6	Valve	Was 81418.6		2
13	81430.1	Control Block			1
14	71674.6	Plug	Was 71659.7		2
15	71732.2	Seal			1
16	71733.0	Seal			1
17	71736.3	Housing			1
18	71737.1	Seal-lock nut			1
19	71738.9	Screw			3
20	81423.6	Glass			1
21	81420.2	Cylinder block			1
22	71674.6	Plug	Was 71659.7		1
23	81427.7	Valve			1
24	71634.0	Plug			3
25	71674.6	Plug	Was 71659.7		1
26	81424.4	Screw			1
27	81296.6	Valve			1
28	81296.6	Valve			1
29	71753.8	Screw			1
30	81425.1	Screw			1


Hydrostatic Pump Assy

For serial nrs: T40140: 3632 11116/ & T40170: 3633 11181/

Item	Part Number	Denomination	Remarks	Serial Number	Qty
31	71778.5	O-ring			1
32	71634.0	Plug			1
33	81432.7	Filter			1
34	75990.2	Hydraulic Pump Filter			1
35	71758.7	Muff			1
36	81422.8	Charge pump			1
37	71761.1	O-ring			1
38	81426.9	Union			1
39	71763.7	Washer			4
40	71764.5	Screw			4
41	71765.2	O-ring			1
42	71766.0	Cover			1
43	71767.8	Screw			2
44	75037.2	Hydraulic Pump Seal Kit			1
45	97355.2	Screw			3
46	71744.7	Screw			3
47	97462.6	Cover assy	Including Pos. 48 + 49 + 50		1
48	97463.4	Slide assy			1
49	97464.2	Screw			1
50	97465.9	Cover			1
51	97466.7	Lever			1
52	97467.5	Screw			2
53	71710.8	Spring guide			2
54	71711.6	Spring			2
55	71 713.2	Washer			2
56	71715.7	Seal-lock nut			2
57	98695.0	Gasket			1
58	71677.9	Support			1
59	71676.1	Bearing			1

Hydrostatic Pump Assy

For serial nrs: T40140: /3632 11117 & T40170: /3633 11182

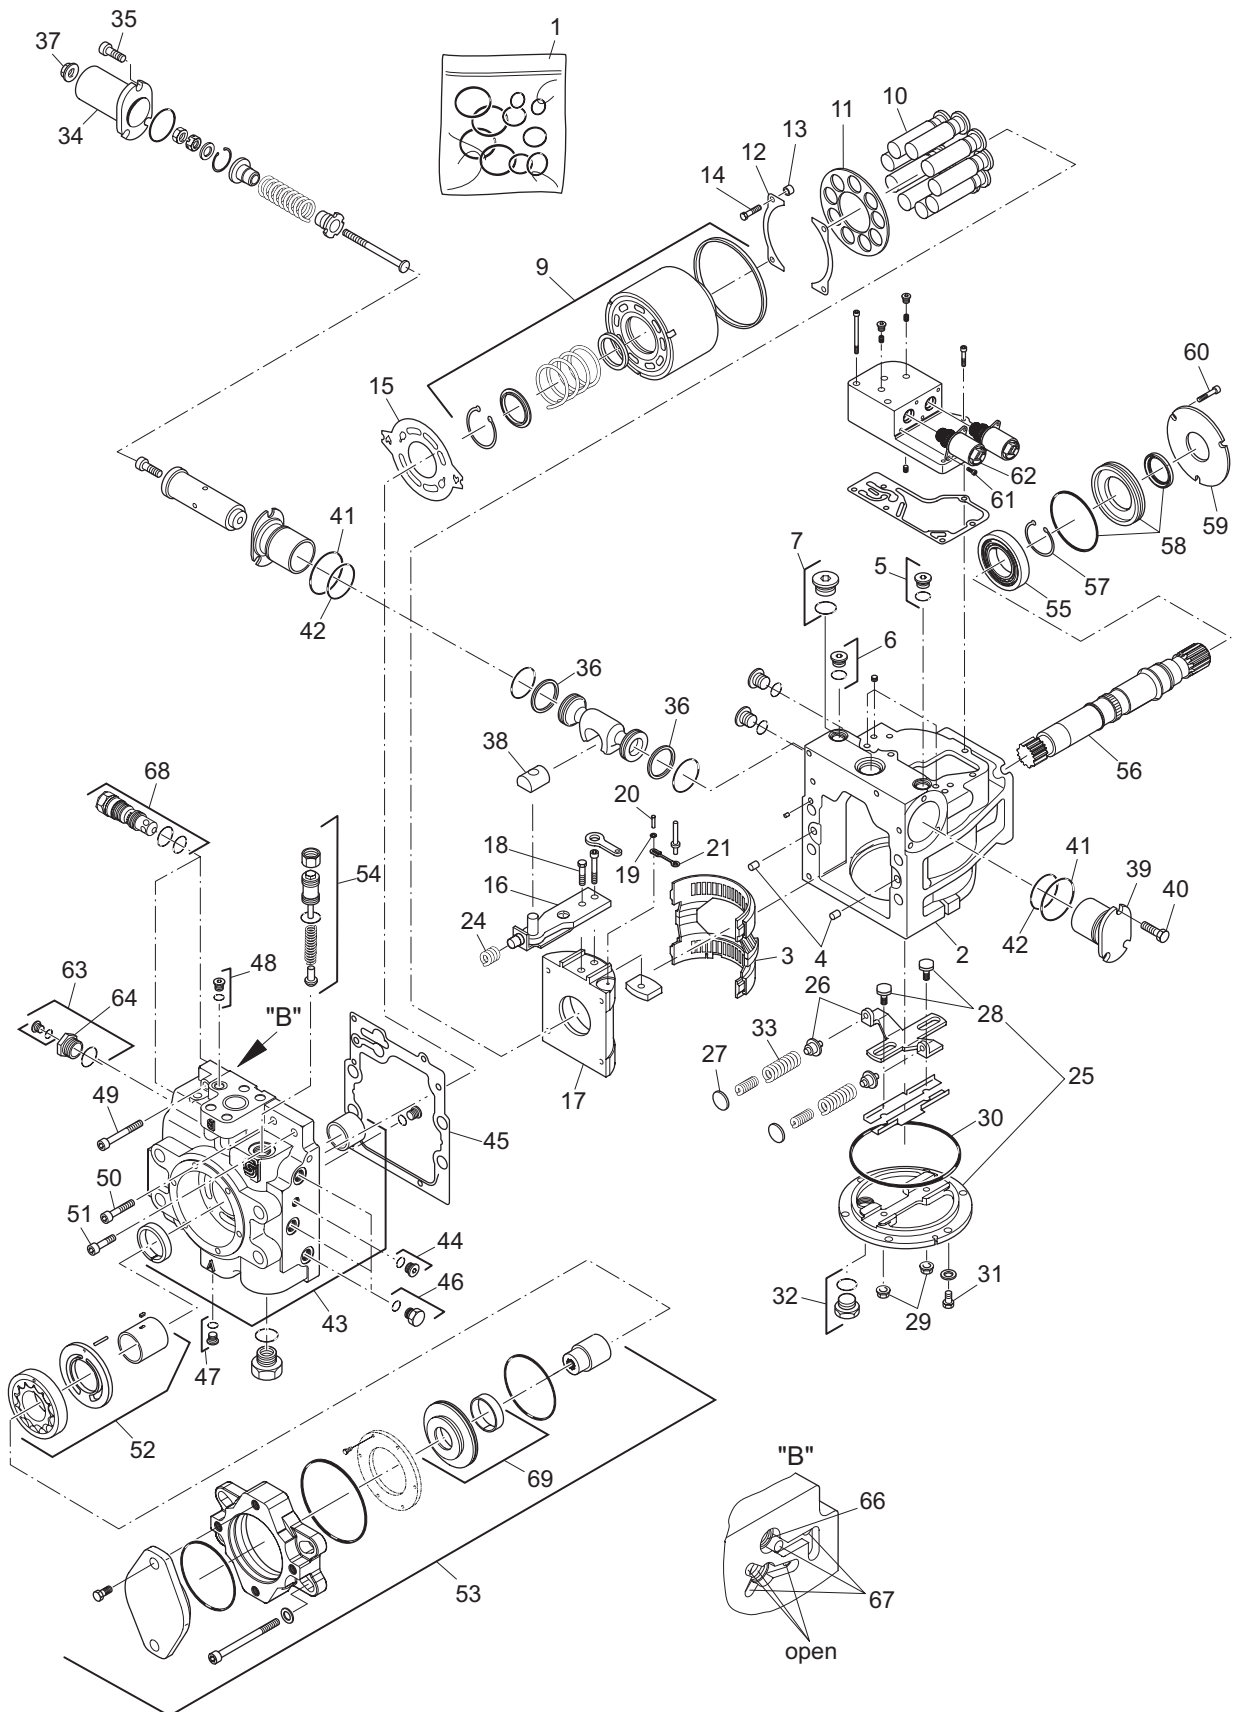

SPC004003

Hydrostatic Pump Assy


For serial nrs: T40140: /3632 11117 & T40170: /3633 11182

Item	Part Number	Denomination	Remarks	Serial Number	Qty
	6913565	Hydrostatic pump		/3632 11117 & /3633 11182	1
1	75037.2	Hydraulic Pump Seal Kit	Including all seals		1
2	6912058	Housing			1
3	6912059	Bearing			1
4	71599.5	Dowel			2
5	71674.6	Plug			1
6	71674.6	Plug			1
7	71675.3	Plug			1
8	71636.5	Plug			1
9	6912533	Valve			1
10	71690.2	Piston			9
11	71691.0	Retainer			1
12	71692.8	Guide			2
13	71693.6	Spacer			4
14	98653.9	Screw			4
15	6912554	Valve plate			1
16	6912060	Lever			1
17	6912061	Support			1
18	6912062	Screw			1
19	71681.1	Washer			1
20	71682.9	Pin			1
21	71679.5	Pin			1
22	6912063	Pin			1
23	71636.5	Plug			1
24	71684.5	Spring			1
25	6912558	Cover assy			1
26	6912559	Spring guide	Including 2 springs		1
27	6912560	Washer			2
28	6912561	Guide bolt			2
29	71715.7	Seal-lock nut			2
30	6912562	O-ring			1

Hydrostatic Pump Assy

For serial nrs: T40140: /3632 11117 & T40170: /3633 11182

Recurrence of previous drawing

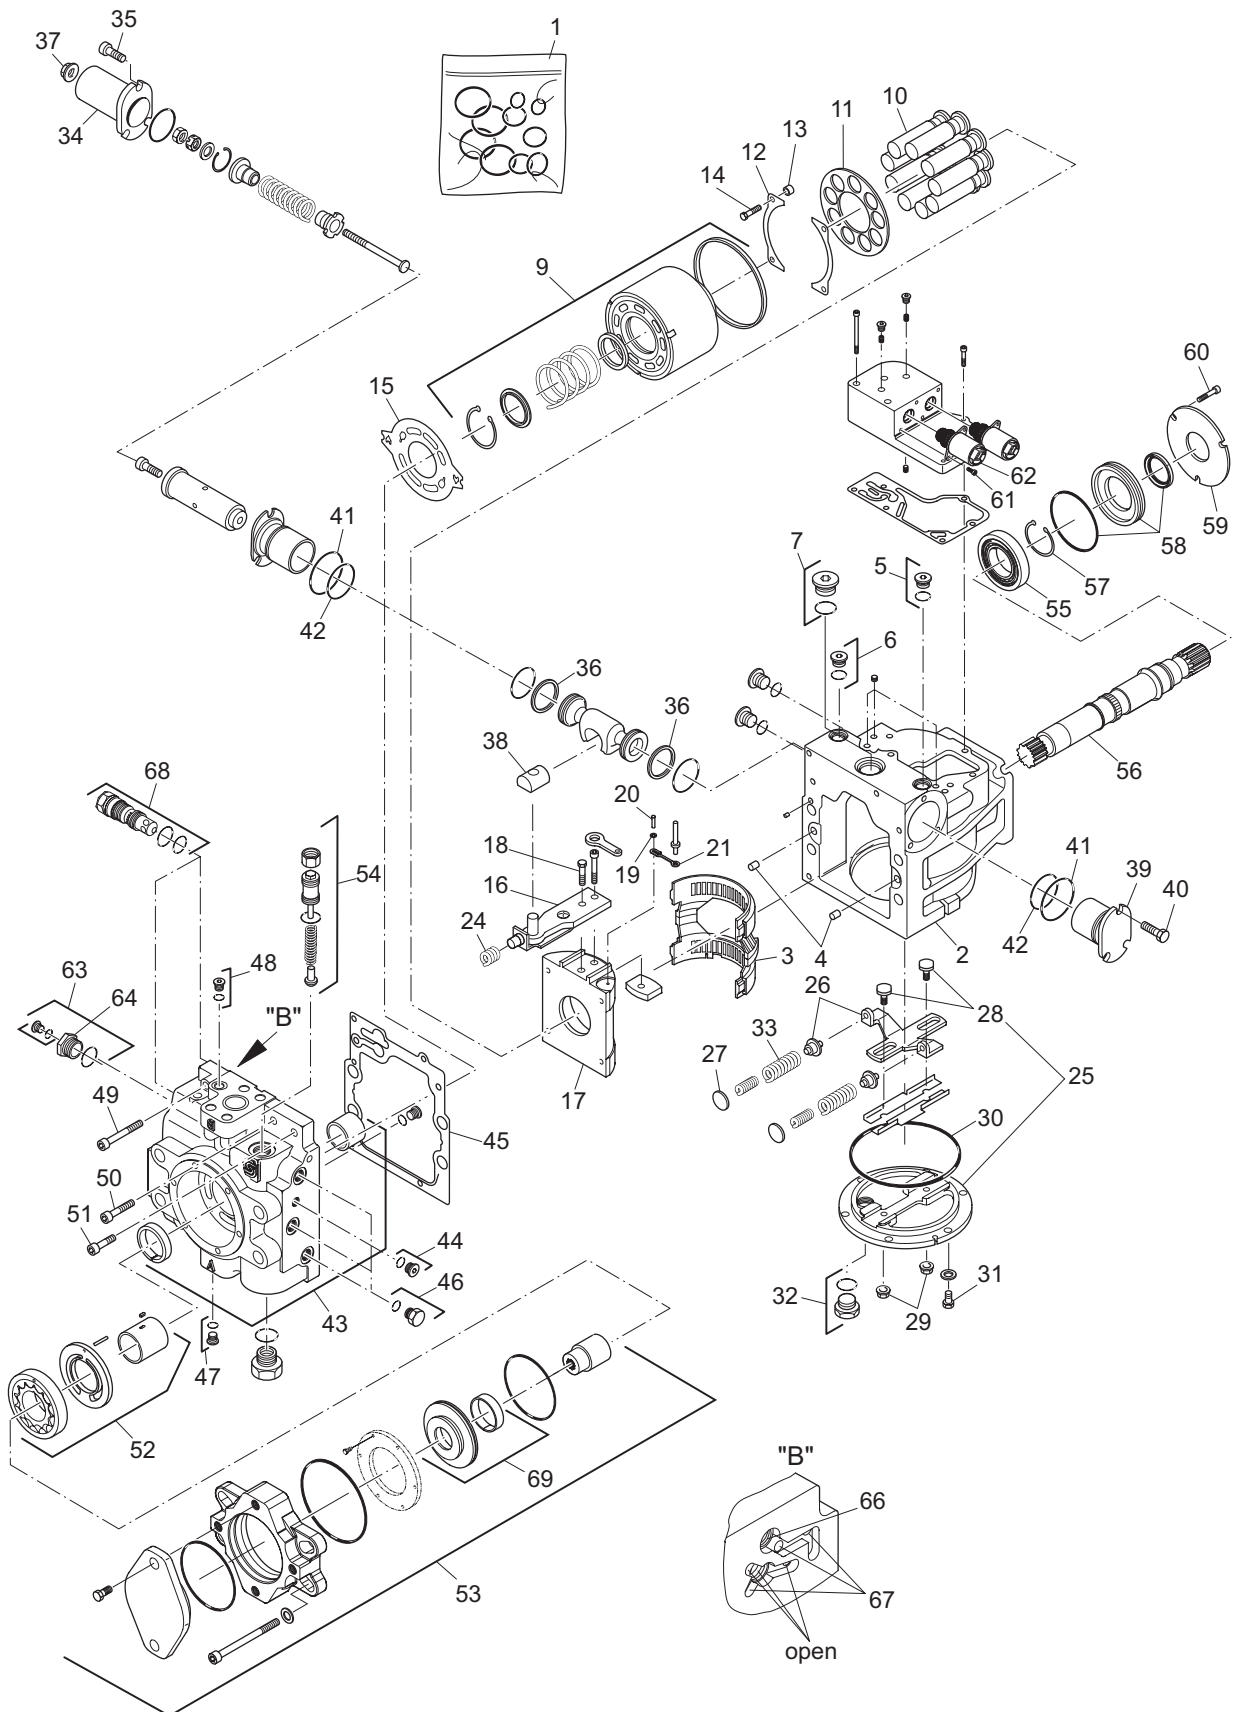

SPC004003

Hydrostatic Pump Assy


For serial nrs: T40140: /3632 11117 & T40170: /3633 11182

Item	Part Number	Denomination	Remarks	Serial Number	Qty
31	6912563	Screw			6
32	71675.3	Plug			1
33	71711.6	Spring			2
34	71736.3	Housing			1
35	6912564	Screw			3
36	6912064	Seal			2
37	71737.1	Seal-lock nut			1
38	71685.2	Slide nut			1
39	71734.8	Housing			1
40	71735.5	Screw			3
41	71733.0	Seal			2
42	71732.2	Seal			2
43	6912065	Housing			1
44	71674.6	Plug			1
45	98695.0	Gasket			1
46	6912066	Plug			1
47	71674.6	Plug			1
48	71674.6	Plug			1
49	71753.8	Screw			1
50	81424.4	Screw			1
51	81425.1	Screw			1
52	71757.9	Charge pump assy			1
53	71762.9	Flange	Also includes Pos. 69		1
54	81427.7	Valve			1
55	71585.4	Bearing			1
56	71701.7	Shaft			1
57	71702.5	Snap ring			1
58	81421.0	Axle seal kit			1
59	6912567	Plate			1
60	6912067	Screw			3
61	6912068	Screw			4

Hydrostatic Pump Assy

For serial nrs: T40140: /3632 11117 & T40170: /3633 11182

Recurrence of previous drawing

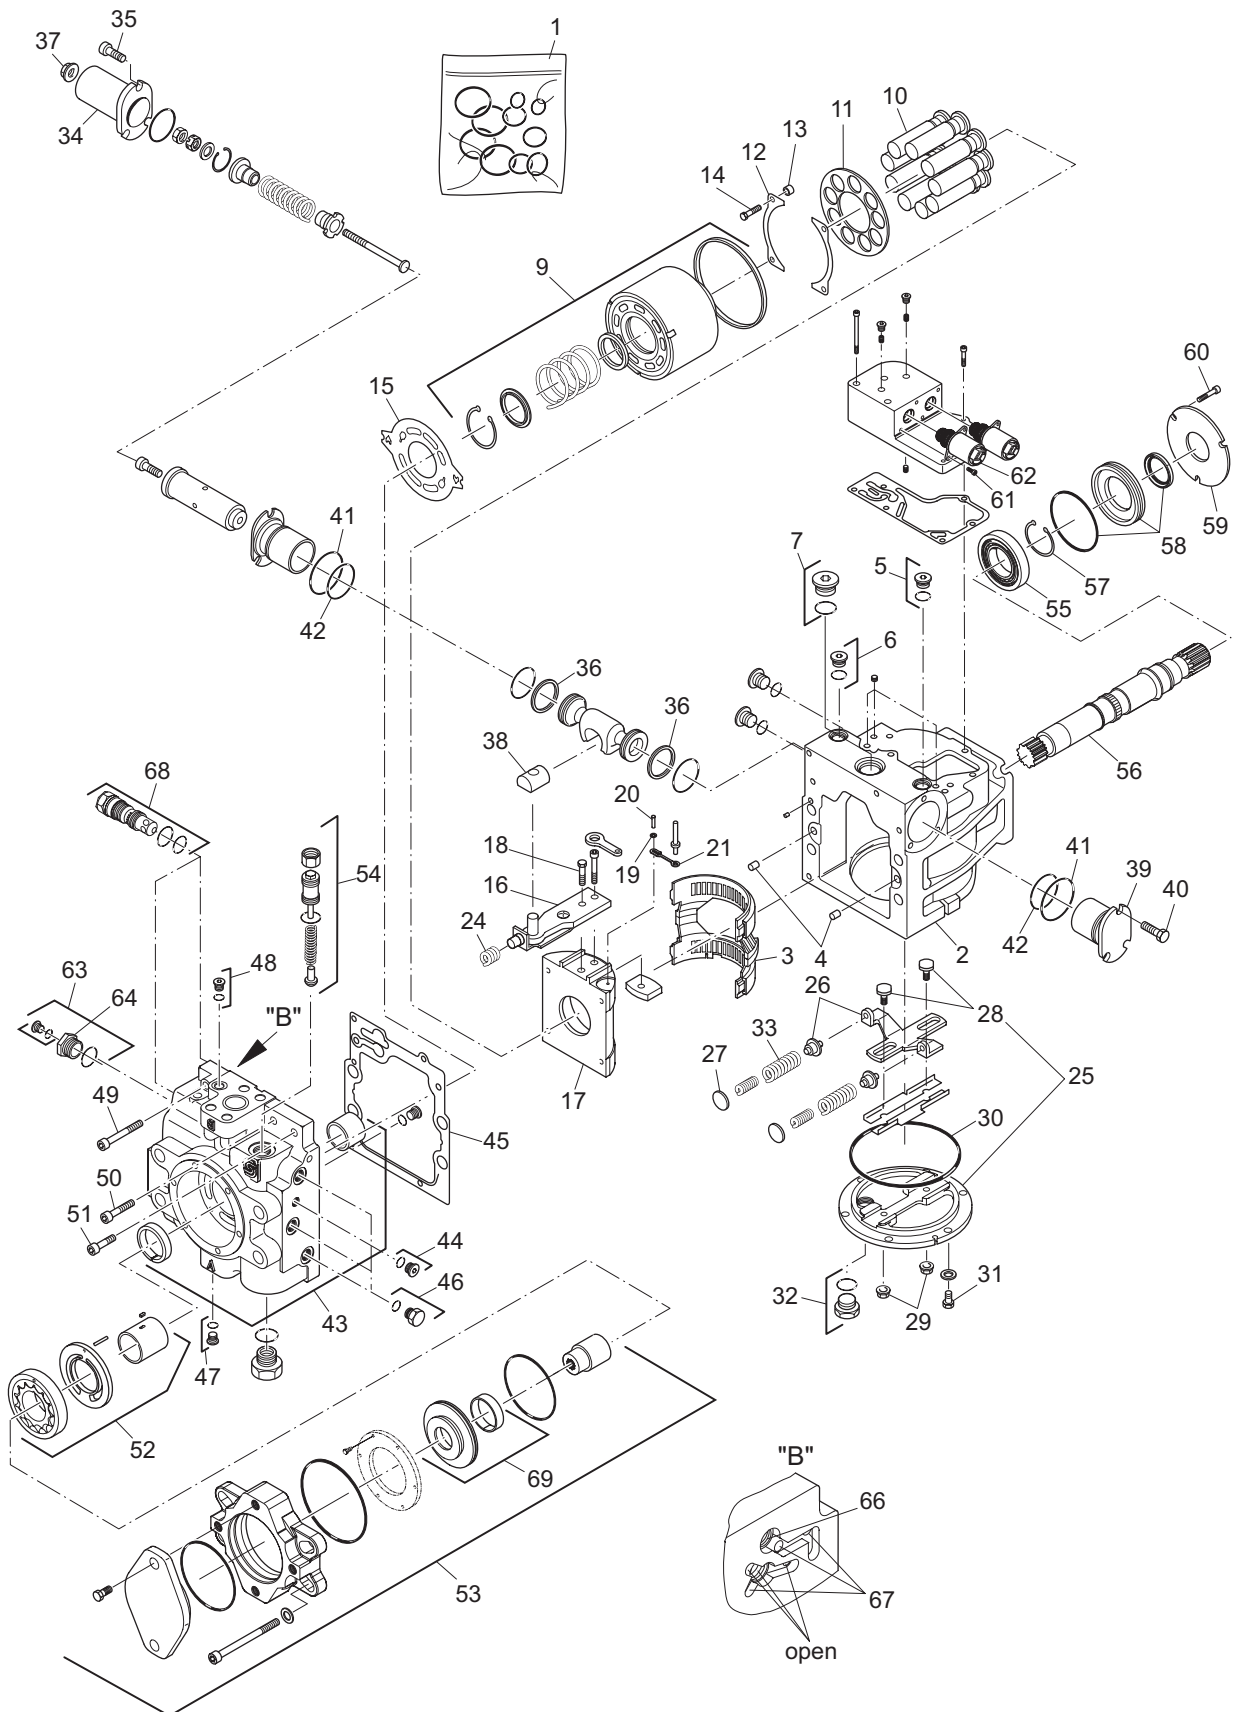


SPC004003

Hydrostatic Pump Assy

For serial nrs: T40140: /3632 11117 & T40170: /3633 11182

[illegible]

Hydrostatic Motor Assy

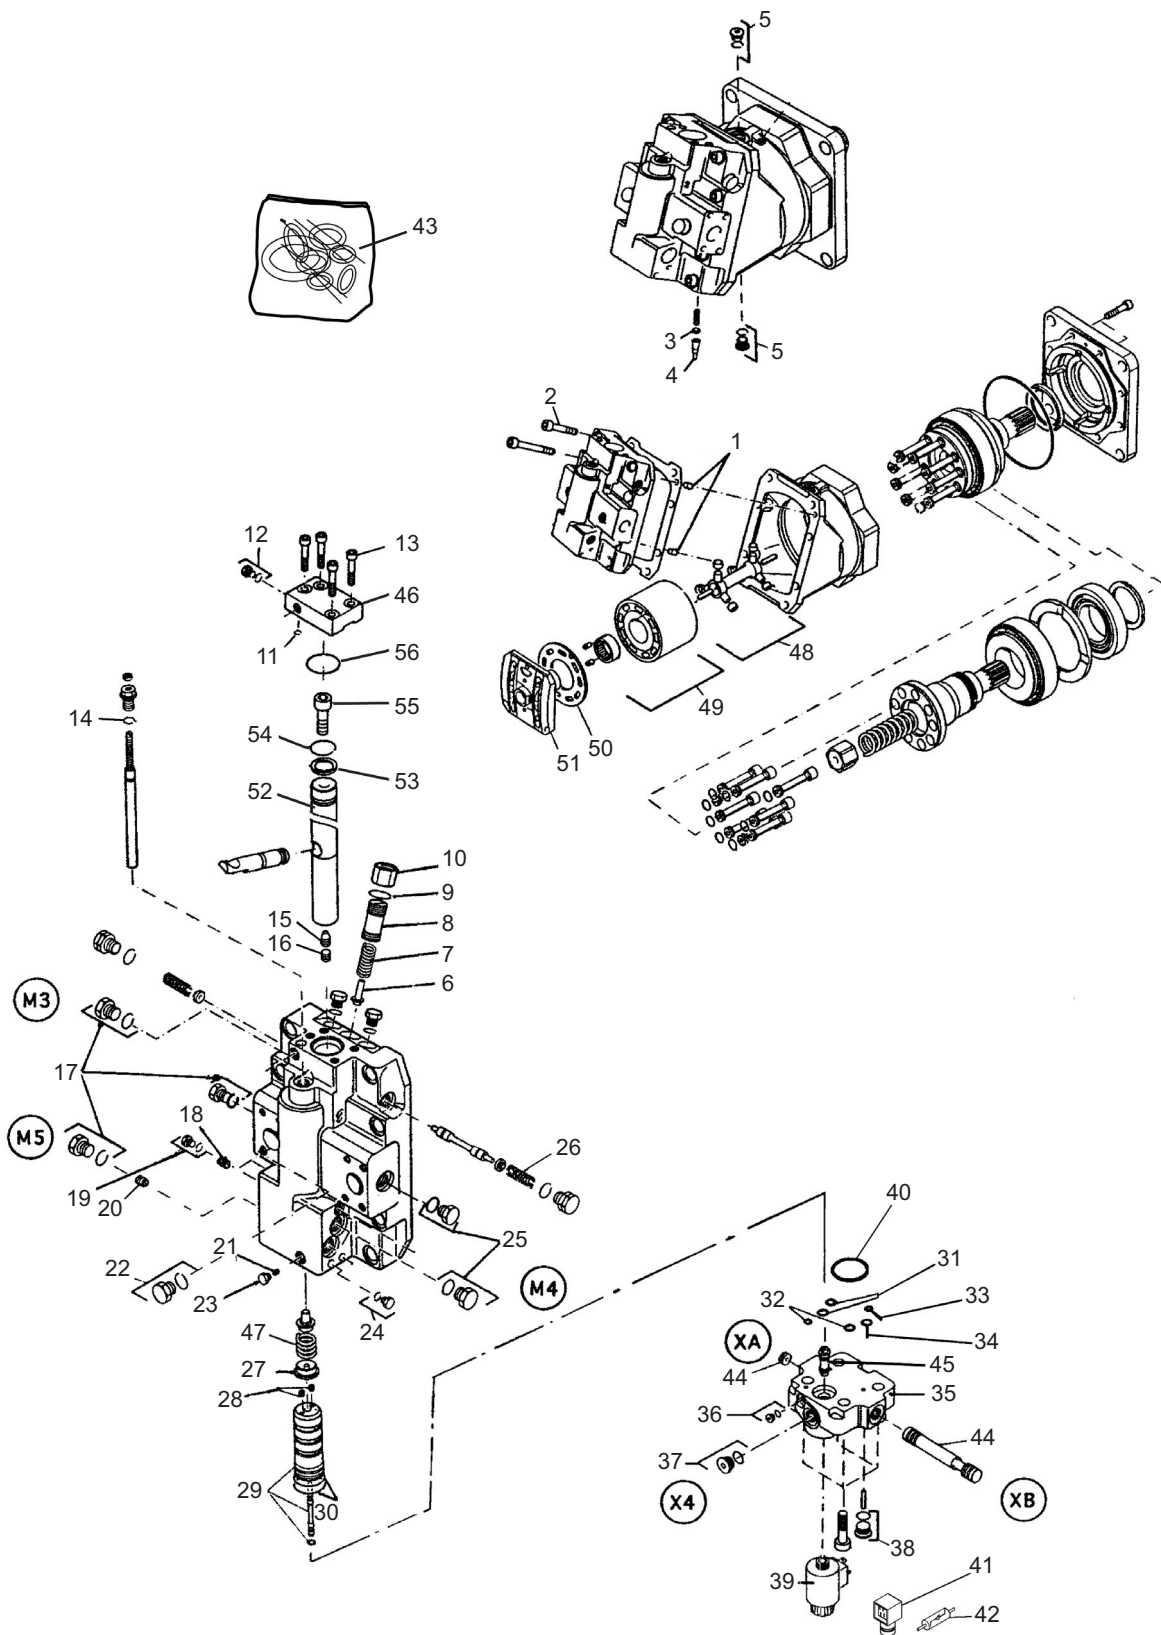


SPC004004

Hydrostatic Motor Assy

Item	Part Number	Denomination	Remarks	Serial Number	Qty
	78256.5	Hydrostatic Motor Assy	Pos. 1 to 56		1
1	71599.5	Dowel			2
2	71605.0	Screw			4
3	71610.0	Nut			1
4	71611.8	Cover			1
5	71785.0	Plug			2
6	71629.0	Cone			1
7	71630.8	Spring			1
8	71631.6	Screw			1
9	71632.4	O-ring			1
10	71633.2	Nut			1
11	71643.1	Seal			1
12	71636.5	Plug			1
13	71646.4	Screw			4
14	71626.6	Seal			1
15	71602.7	Screw			1
16	71603.5	Screw			1
17	71674.6	Plug			3
18	71638.1	Nozzle			1
19	71636.5	Plug			1
20	71635.7	Nozzle			1
21	71638.1	Nozzle			1
22	71674.6	Plug			1
23	71636.5	Plug			1
24	71636.5	Plug			1
25	71674.6	Plug			2
26	81460.8	Spring			1
27	71621.7	Washer			1
28	71622.5	Nozzle			2
29	81455.8	Control	Was 95424.8		1
30	71624.1	Seal			2

Hydrostatic Motor Assy

Recurrence of previous drawing

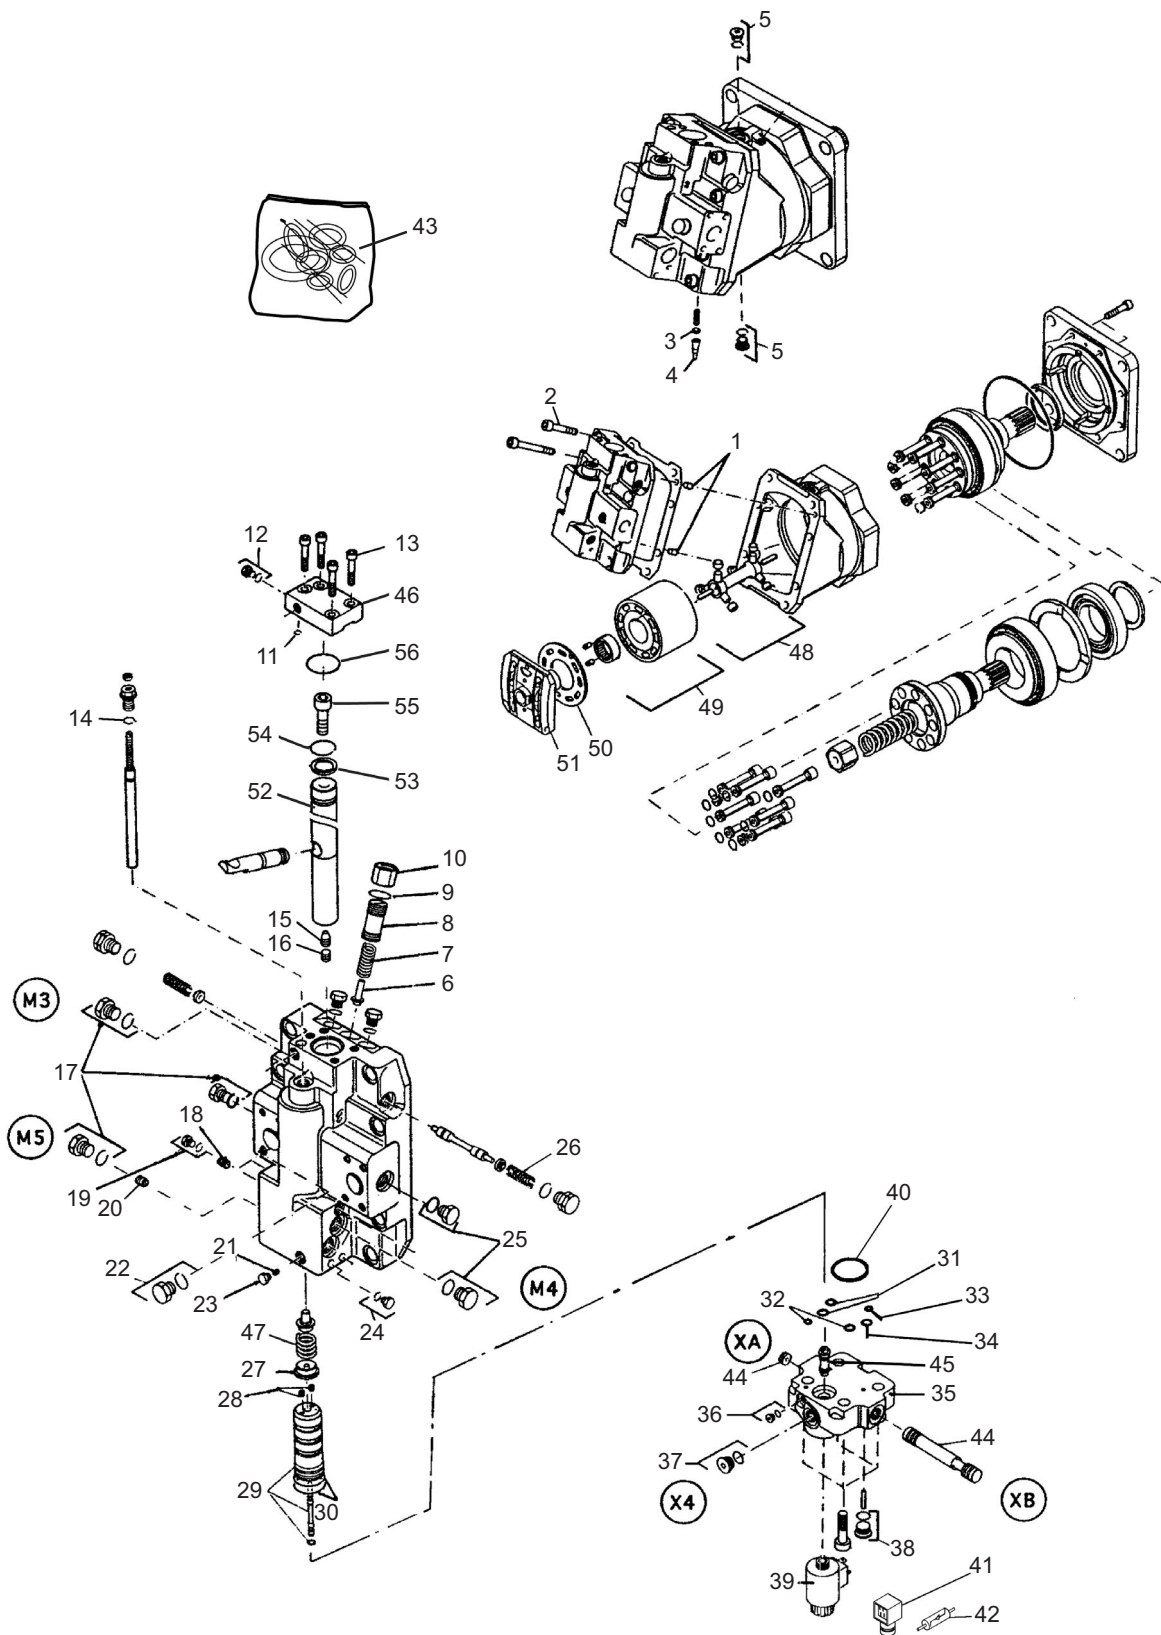


SPC004004

Hydrostatic Motor Assy

Item	Part Number	Denomination	Remarks	Serial Number	Qty
31	71644.9	Seal			3
32	71643.1	Seal			3
33	71643.1	Seal			1
34	71644.9	Seal			3
35	92614.7	Housing			1
36	71636.5	Plug			1
37	71674.6	Plug			1
38	71674.6	Plug			1
39	75594.2	Hydraulic Motor Solenoid			1
40	81450.9	Seal			1
41	41282.5	Solenoid			1
42	101472-20M	Diode			1
43	81463.2	Hydrostatic Motor Seal Kit			1
44	81458.2	Spindle			1
45	97258.8	Piston			1
46	81448.3	Cover			1
47	97357.8	Spring			1
48	81435.0	Shaft			1
49	81434.3	Cylinder block			1
50	81436.8	Bearing plate			1
51	81433.5	Valve segment			1
52	81445.9	Piston			1
53	81437.6	Seal			1
54	81444.2	O-ring			1
55	81443.4	Screw			1
56	81450.9	Seal			1

Electrical Circuit Chassis

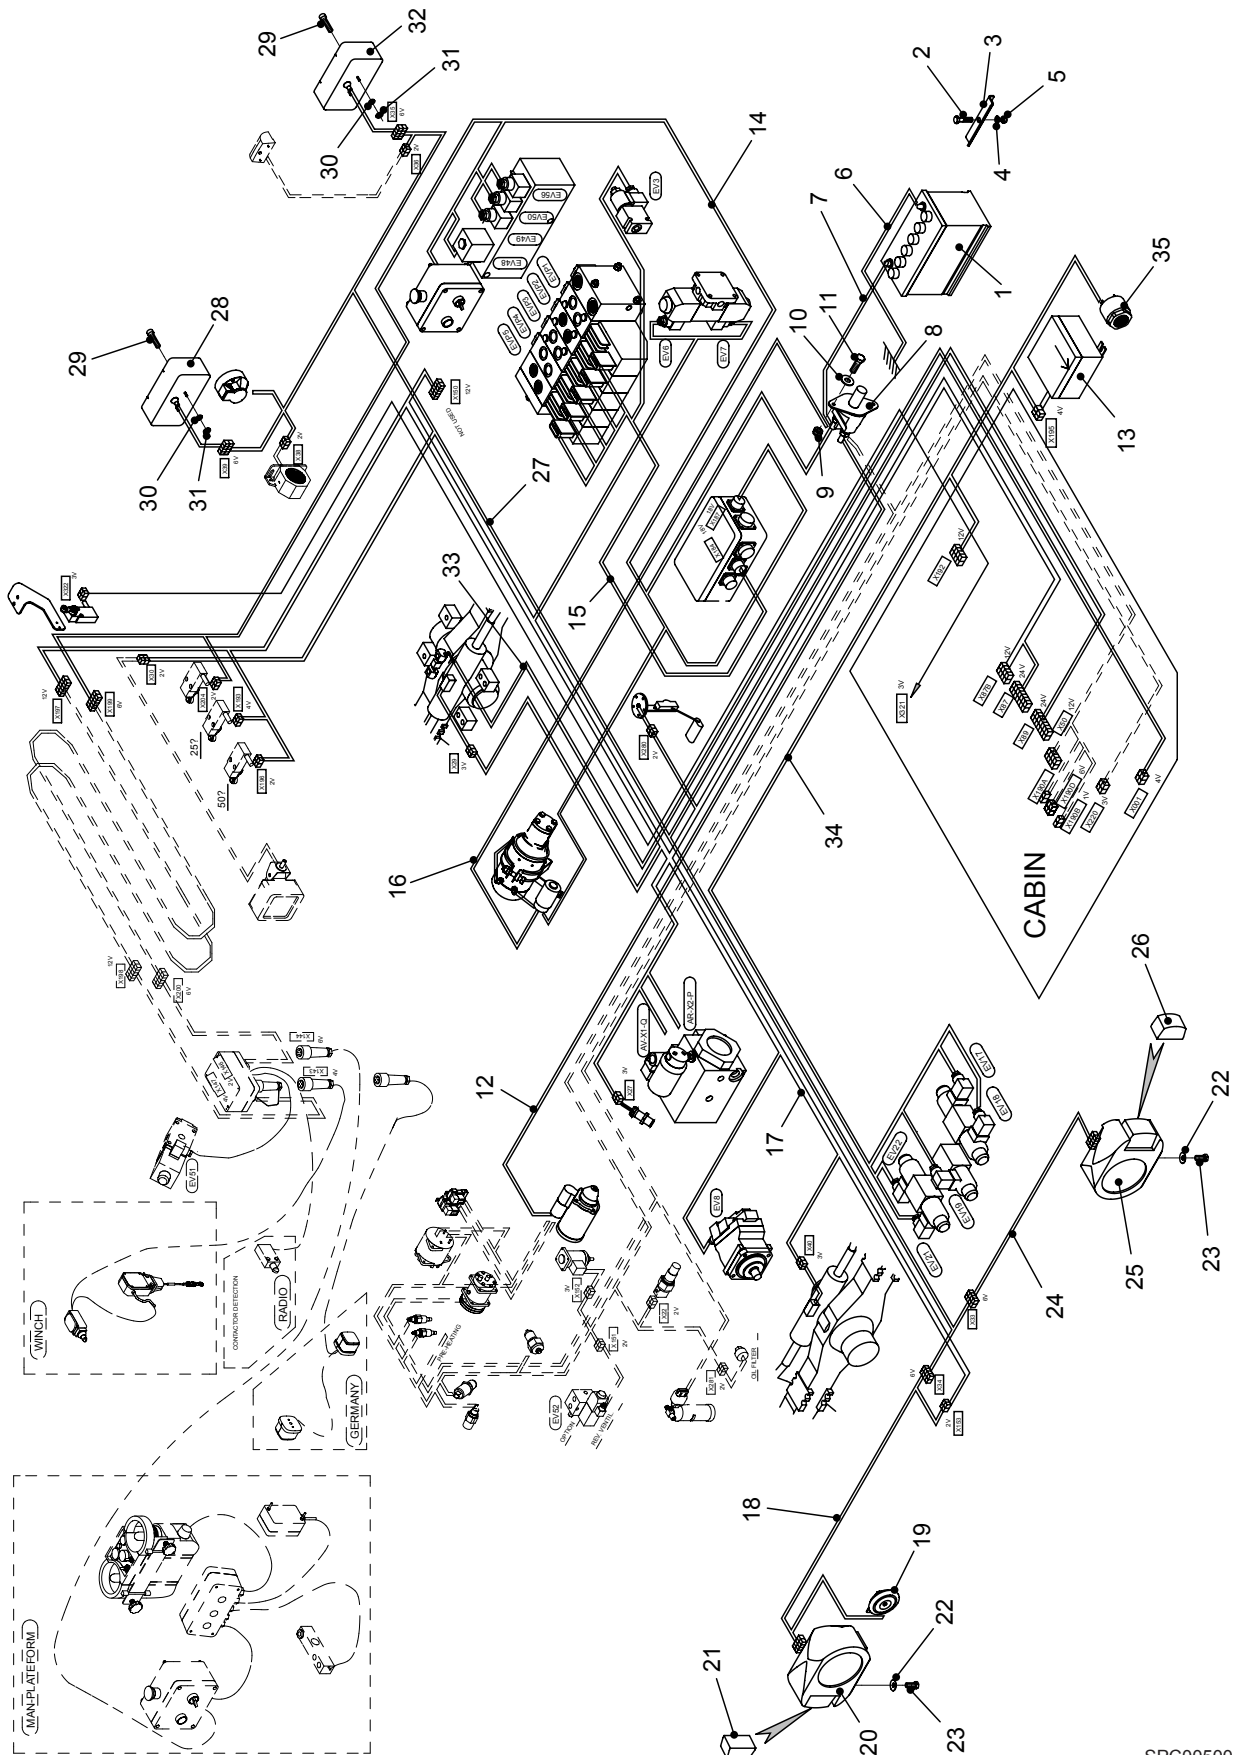


SPC005001

Electrical Circuit Chassis

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6914907	Battery			1
2	01598.2	Screw			1
3	77136.0	Bracket			1
4	000350-02V	Washer			1
5	51851.4	Nut			1
6	78869.5	Negative Battery Cable			1
7	79861.1	Positive Battery Cable			1
8	65764.3	Circuit Breaker			1
9	100345-06W	Nut			2
10	000350-01U	Washer			2
11	01591.7	Screw			2
12		Wire harness			1
13	90911.9	Inclinometer			1
14	95333.1	Wire harness			1
15	90898.8	Distributor Wiring Harness			1
16	79733.2	Wire harness			1
17	6911734	Wire harness			1
18	96587.1	Front Light Wire Harness, RH			1
19	100417-11D	Horn			1
20	79533.6	Front Light Assembly, RH	Includes Pos. 21		1
	000405-62P	Bulb	40W		1
	27362.3	Bulb	4W		1
21	59758.3	Light, RH			1
	28089.2	Bulb	21W		1
22	01718.6	Washer			4
23	01596.6	Screw			4
24	79539.3	Front Light Wire Harness, LH			1
25	79534.4	Front Light Assembly, LH	Includes Pos. 26		1
	000405-62P	Bulb	40W		1
	27362.3	Bulb	4W		1
26	59948.0	Light, LH			1

Electrical Circuit Chassis

Recurrence of previous drawing

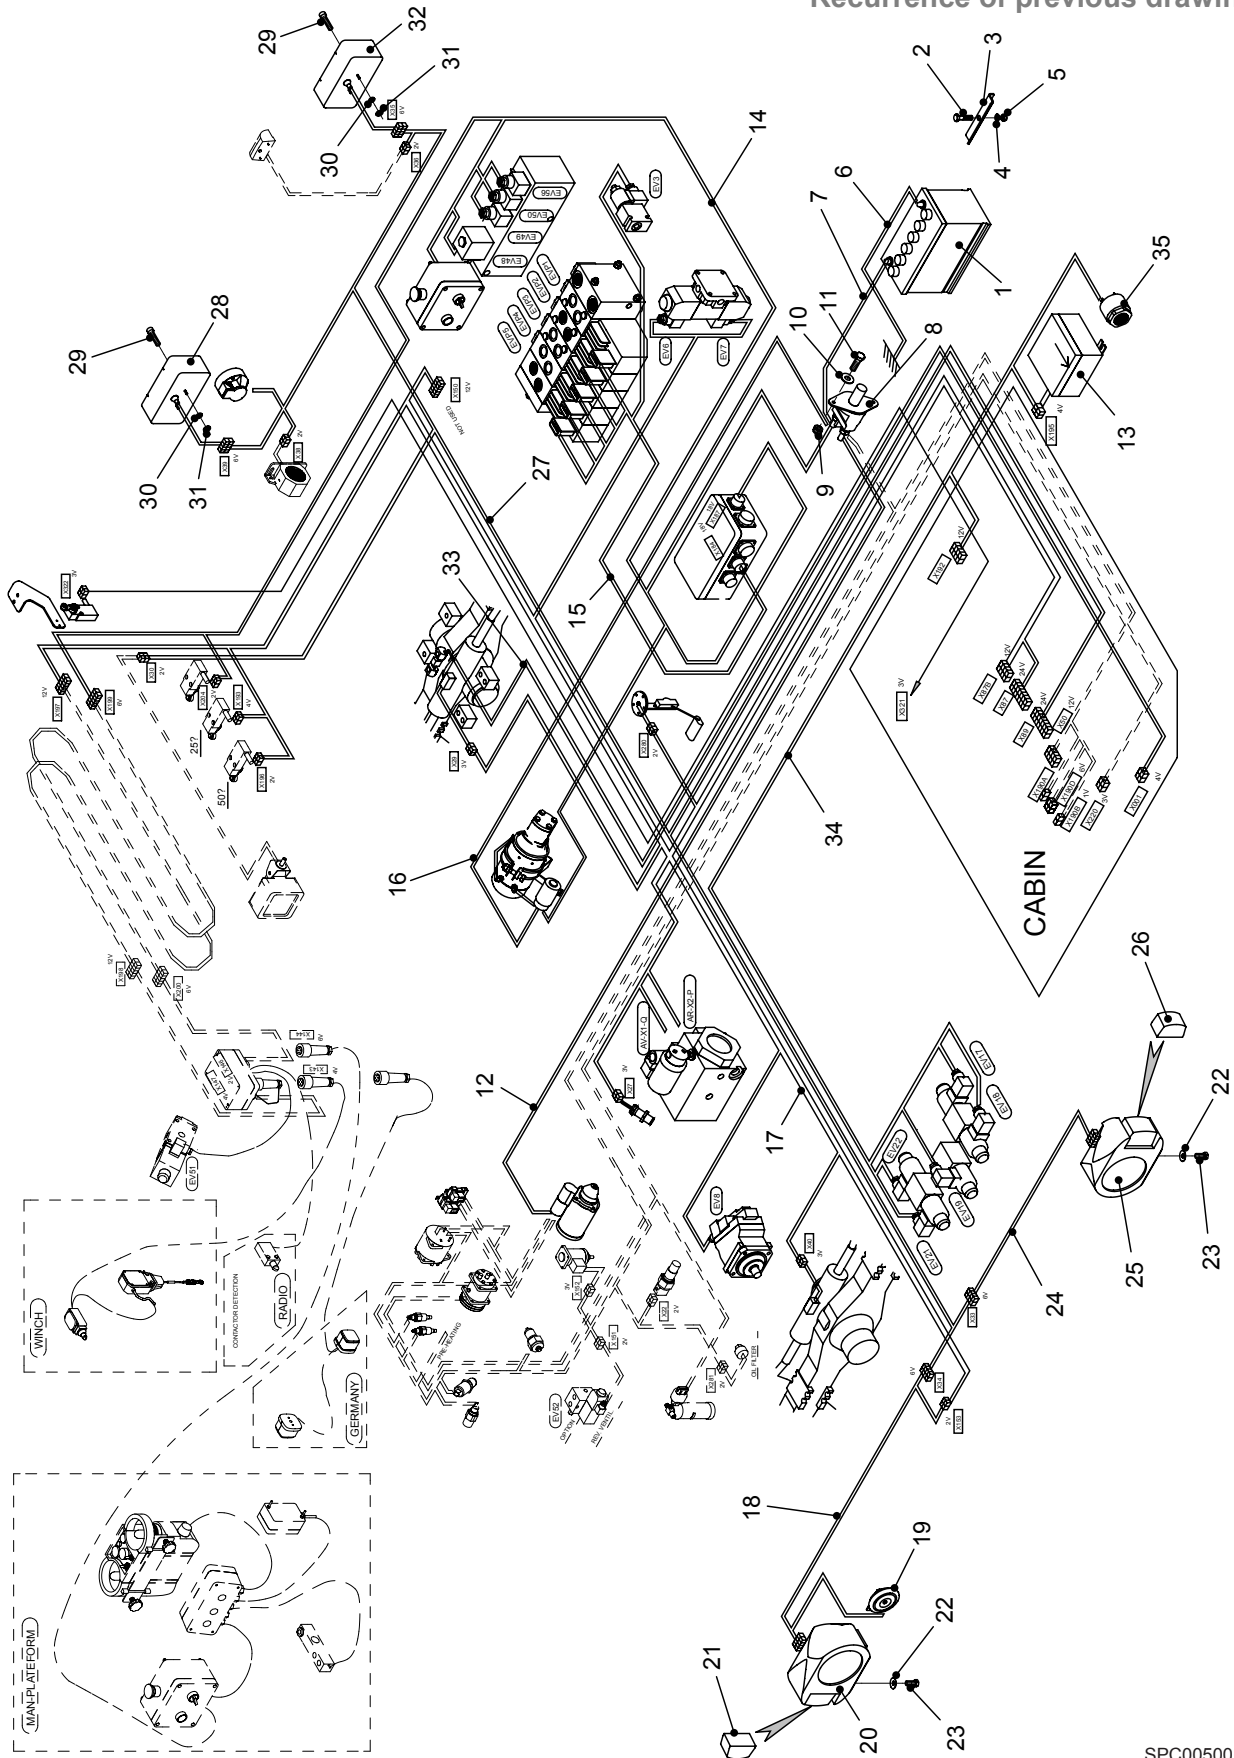


SPC005001

Electrical Circuit Chassis

[illegible]


Electrical Circuit Cab

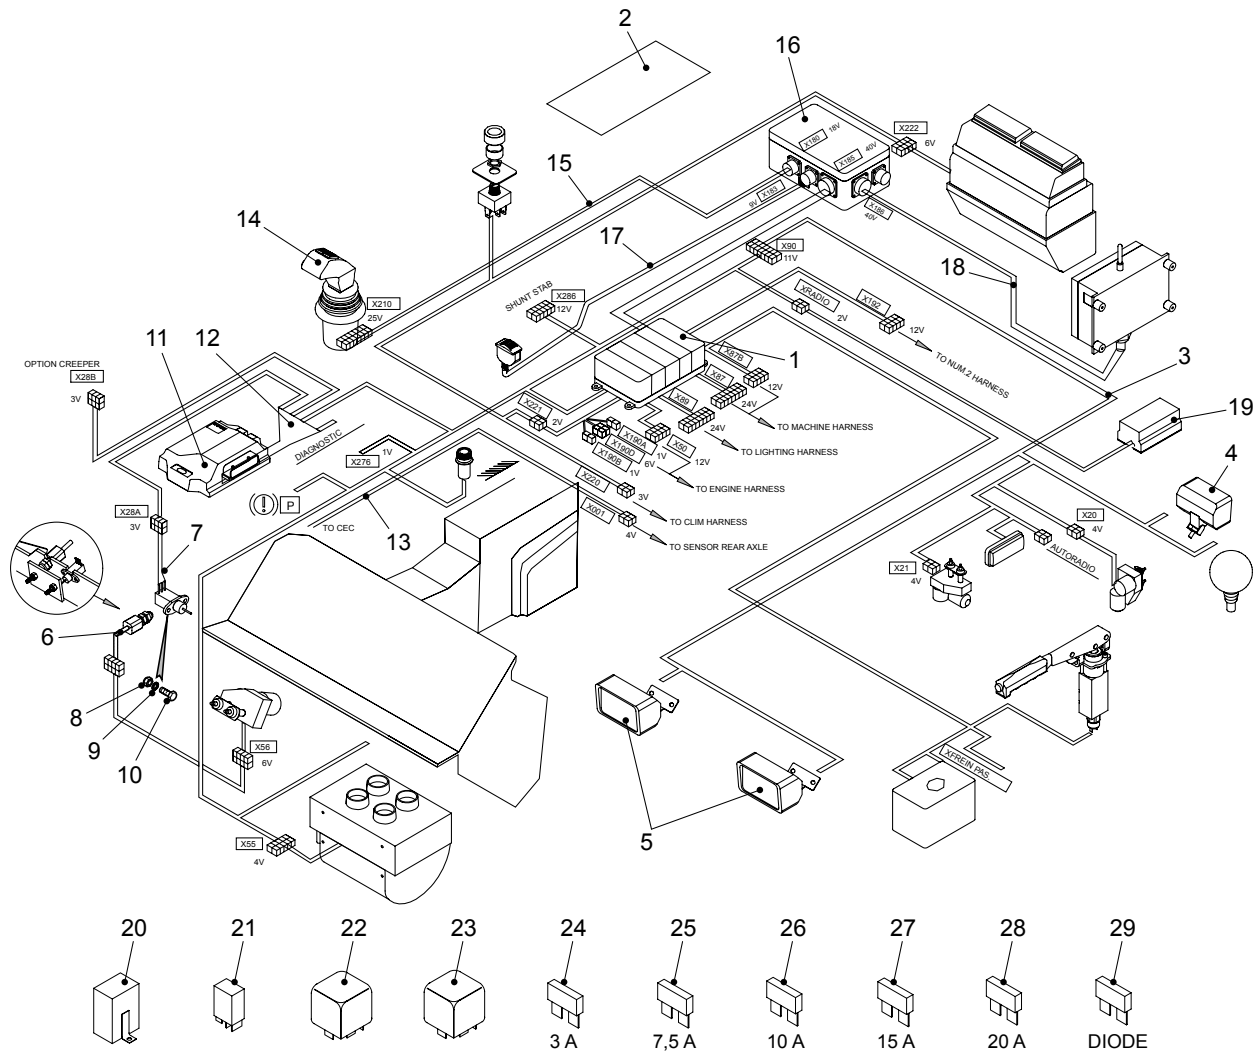

Electrical Circuit Cab

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6911733	Fuse box	Includes Pos. 20 to 29		1
2	6912457	Adhesive			1
3	97236.4	Wire Harness			1
4	78816.4	Rear worklight			1
	58446.6	Bulb			1
5	78815.8	Front worklight			2
	58446.6	Bulb			2
6	6909324	Service brake switch			1
7	6909383	Inching switch (detector)			1
8	01478.5	Nut			2
9	6910952	Washer			2
10	100345-05V	Nut			2
11	6911325	Transmission box			1
12		Wire harness			1
13	6913764	Stability indicator and wire harness			1
14	92954.7	Joystick			1
15	92955.4	Wire harness			1
16	6914597	Control box			1
17	90930.9	Control Knob	Includes knob + cable + connector		1
18	97922.9	Radio receiver	Only with man platform		1
19	97923.7	Battery loader	Only with man platform		
20	96623.4	Turn signal relay			1
21	6910955	Micro relay			20
22	79930.4	Relay			1
23	100411-05U	Relay			2
24	64120.9	Fuse	3 A		1
25	57792.4	Fuse	7,5 A		15
26	57752.8	Fuse	10 A		8
27	57793.2	Fuse	15 A		6
28	57753.6	Fuse	20 A		2
29	80226.4	Diode			2

Electrical Circuit Engine

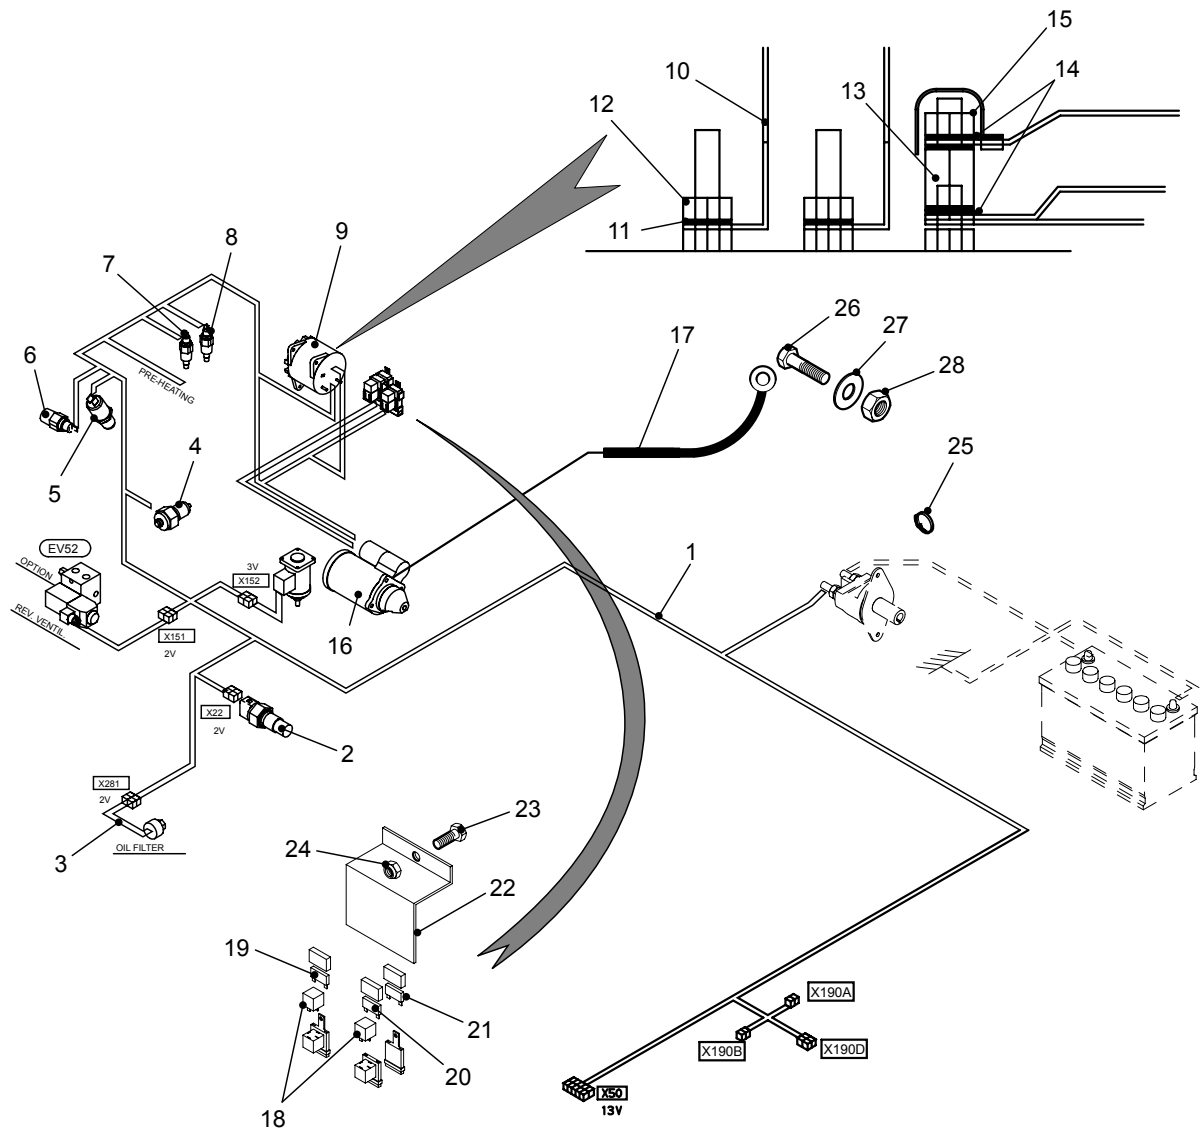


SPC005004

Electrical Circuit Engine

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6911724	Engine wiring harness			1
2	78872.9	Hydraulic Oil Temperature Sender			1
3	6912549	Plugging indicator			1
4	26278.2	Oil Pressure Switch			1
5	97175.4	Solenoid			1
6	6911895	Thermostat			1
7	6911911	Switch, water temp			1
8	6911400	Switch, water temp			1
9	6911377	Alternator			1
10	79926.2	Terminal			1
11	13415.5	Washer			2
12	01665.9	Nut			2
13	96613.5	Spacer			1
14	13416.3	Washer			2
15	01666.7	Nut			1
16	6911913	Starter motor			1
17	018472-83R	Ground Cable			2
18	79930.4	Relay			2
19	6909767	Fuse	70 A		1
20	79947.8	Fuse 50 Amp	50 A		1
21	79946.0	Fuse	40 A		1
22	78895.0	Protector			1
23	01596.6	Screw			1
24	51851.4	Nut			1
25	50917.4	Collar			1
26	01606.3	Screw			1
27	000350-03W	Washer			1
28	100345-09A	Nut			1

Joystick

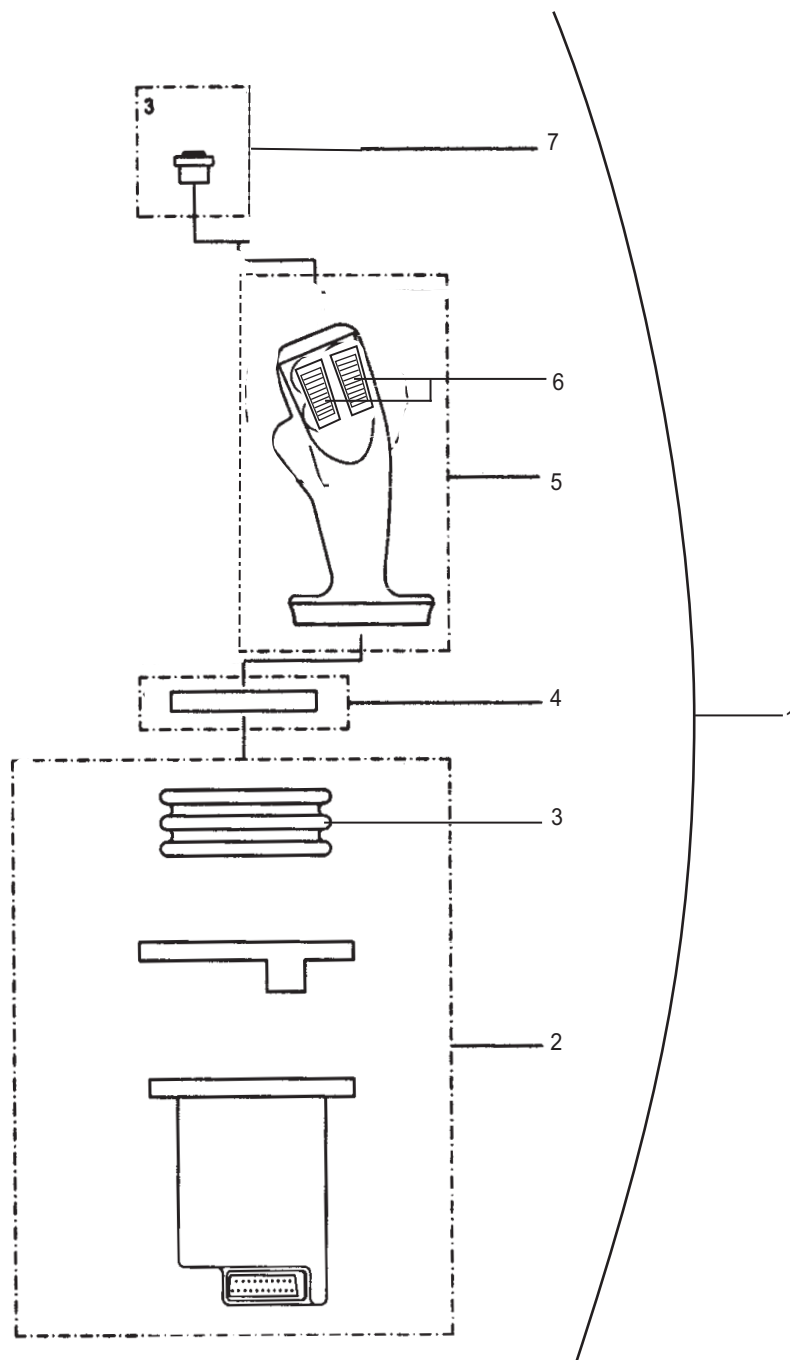


SPC005003

Joystick

[illegible]

Joystick / Susmic Installation

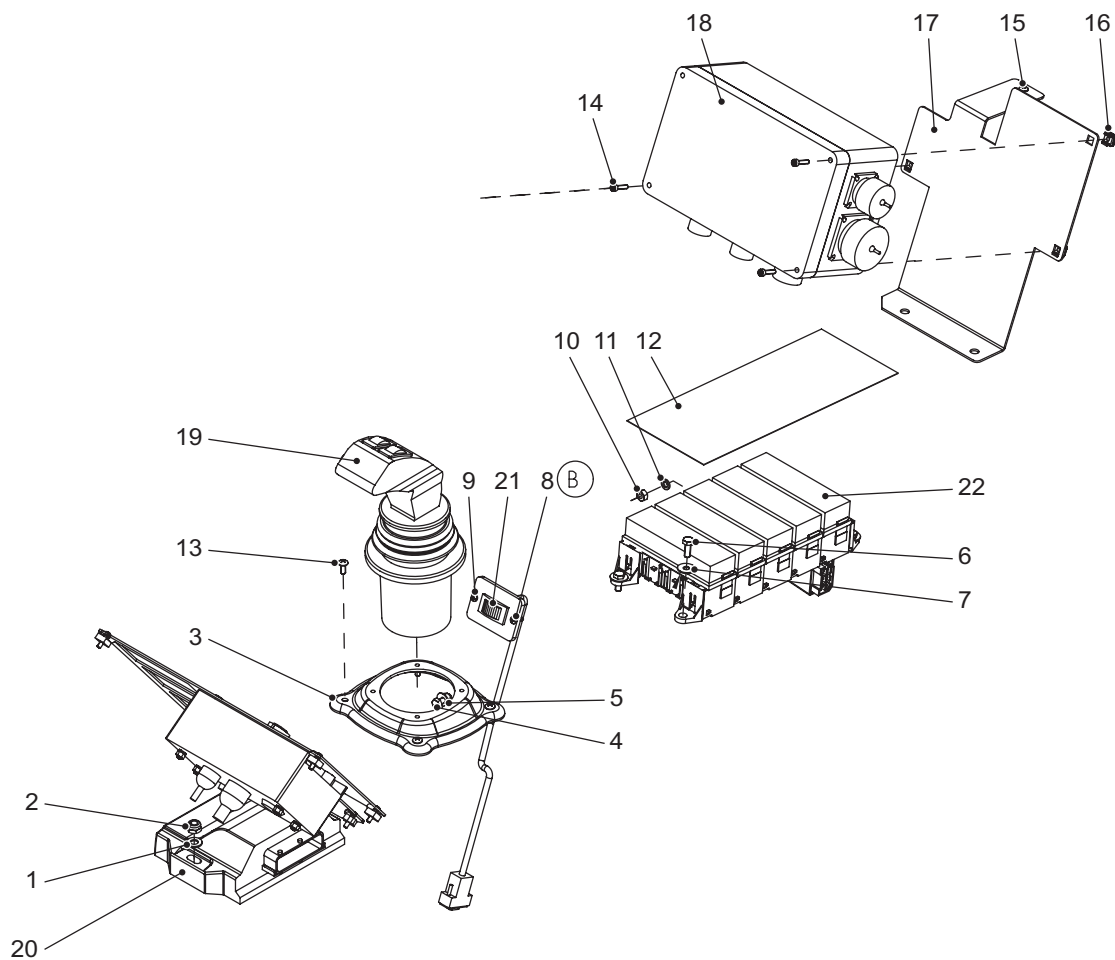

SPC005005

Joystick / Susmic Installation


[illegible]



Ventilation reverse electrical

[illegible]

Engine Installation

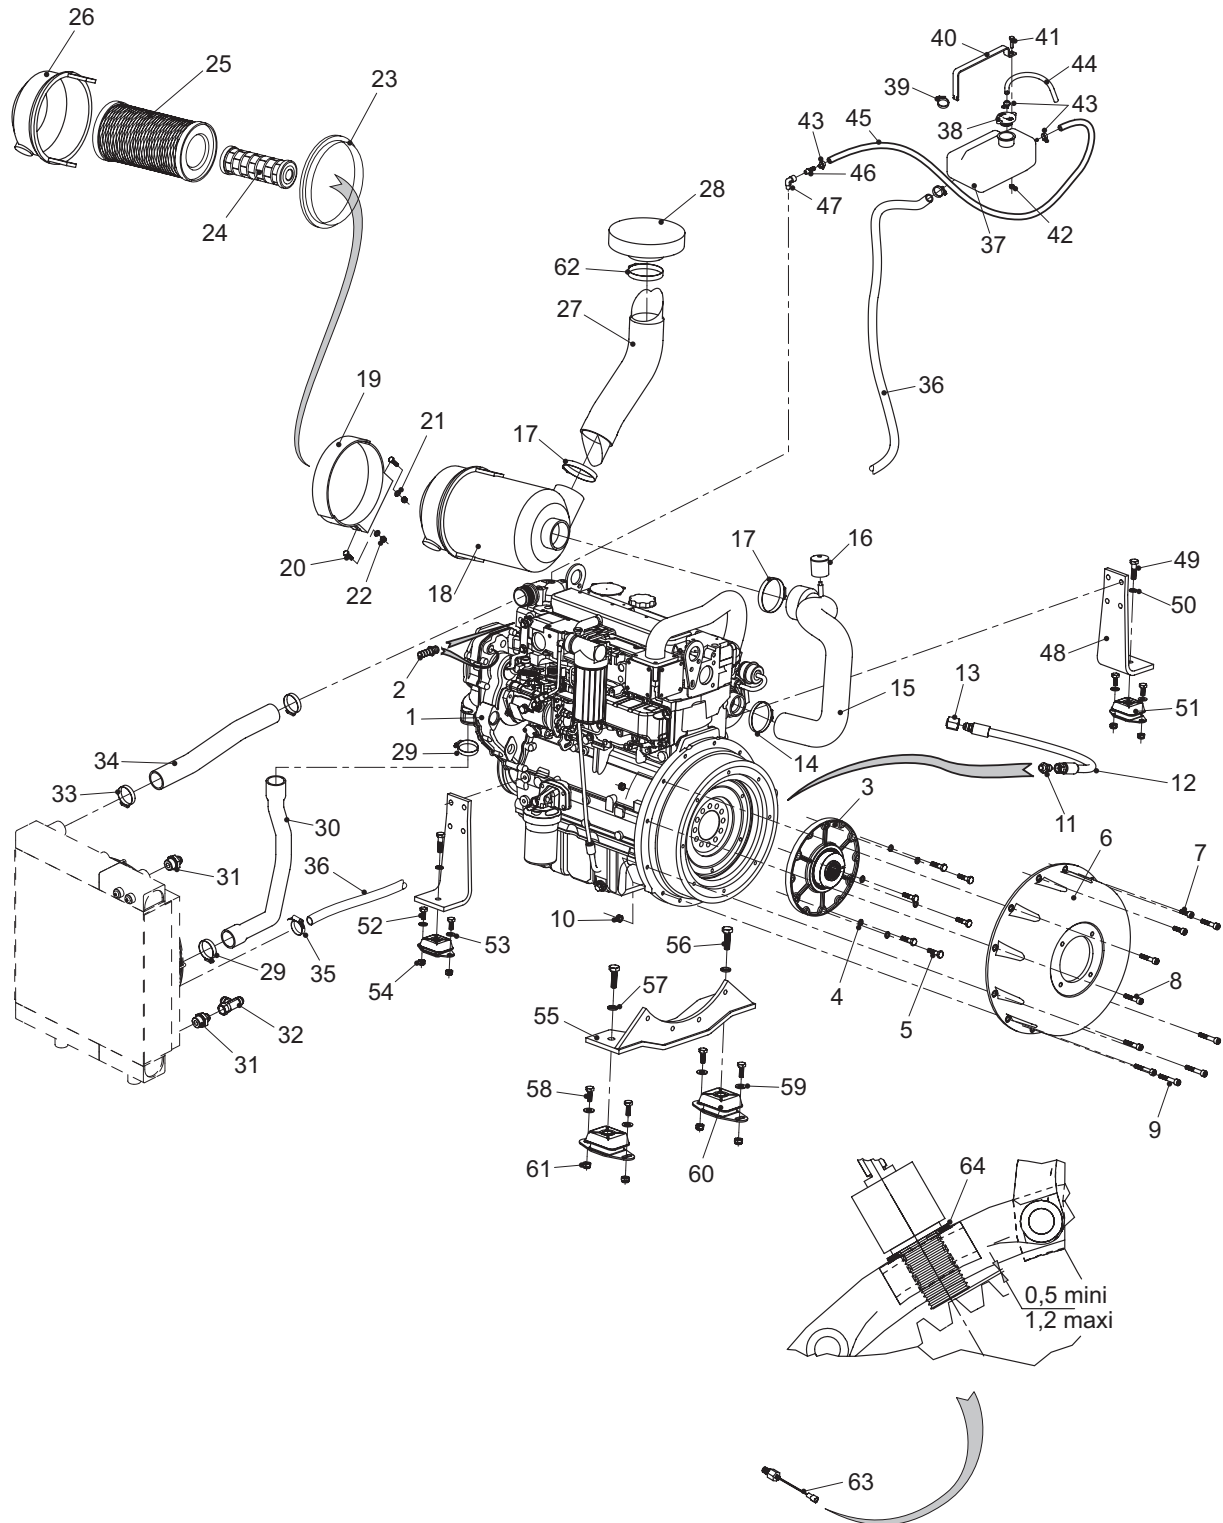


SPC006001

Engine Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	98038.3	Engine	See following pages for details		1
2	38441.2	Union			2
3	98011.0	Coupling			1
4	89516.9	Washer			6
5	01608.9	Screw			6
6	97878.3	Housing			1
7	01640.2	Screw			2
8	54009.6	Screw			4
9	14039.2	Screw			4
10	100345-09A	Nut			8
11	96461.9	Adapter			1
12	96462.7	Drain Hose			1
13	011374-44C	Plug			1
14	29713.5	Clamp			1
15	6911277	Hose			1
16	6911276	Indicator filing			1
17	35949.7	Clamp			2
18	97746.2	Air Filter	Pos. 18 + 23 to 26		1
19	97747.0	Collar			1
20	007330-29V	Screw			2
21	01697.2	Washer			2
22	51851.4	Nut			2
23	6910727	Ring			1
24	6910726	Air filter element, secondary			1
25	6910725	Air filter element, primary			1
26	6910724	Air filter cover			1
27	6908586	Hose			1
28	6908363	Rain-proof cap			1
29	100369-80K	Clamp			2
30	6910970	Hose, lower radiator			1
31	68609.7	Union			2

Engine Installation

Recurrence of previous drawing

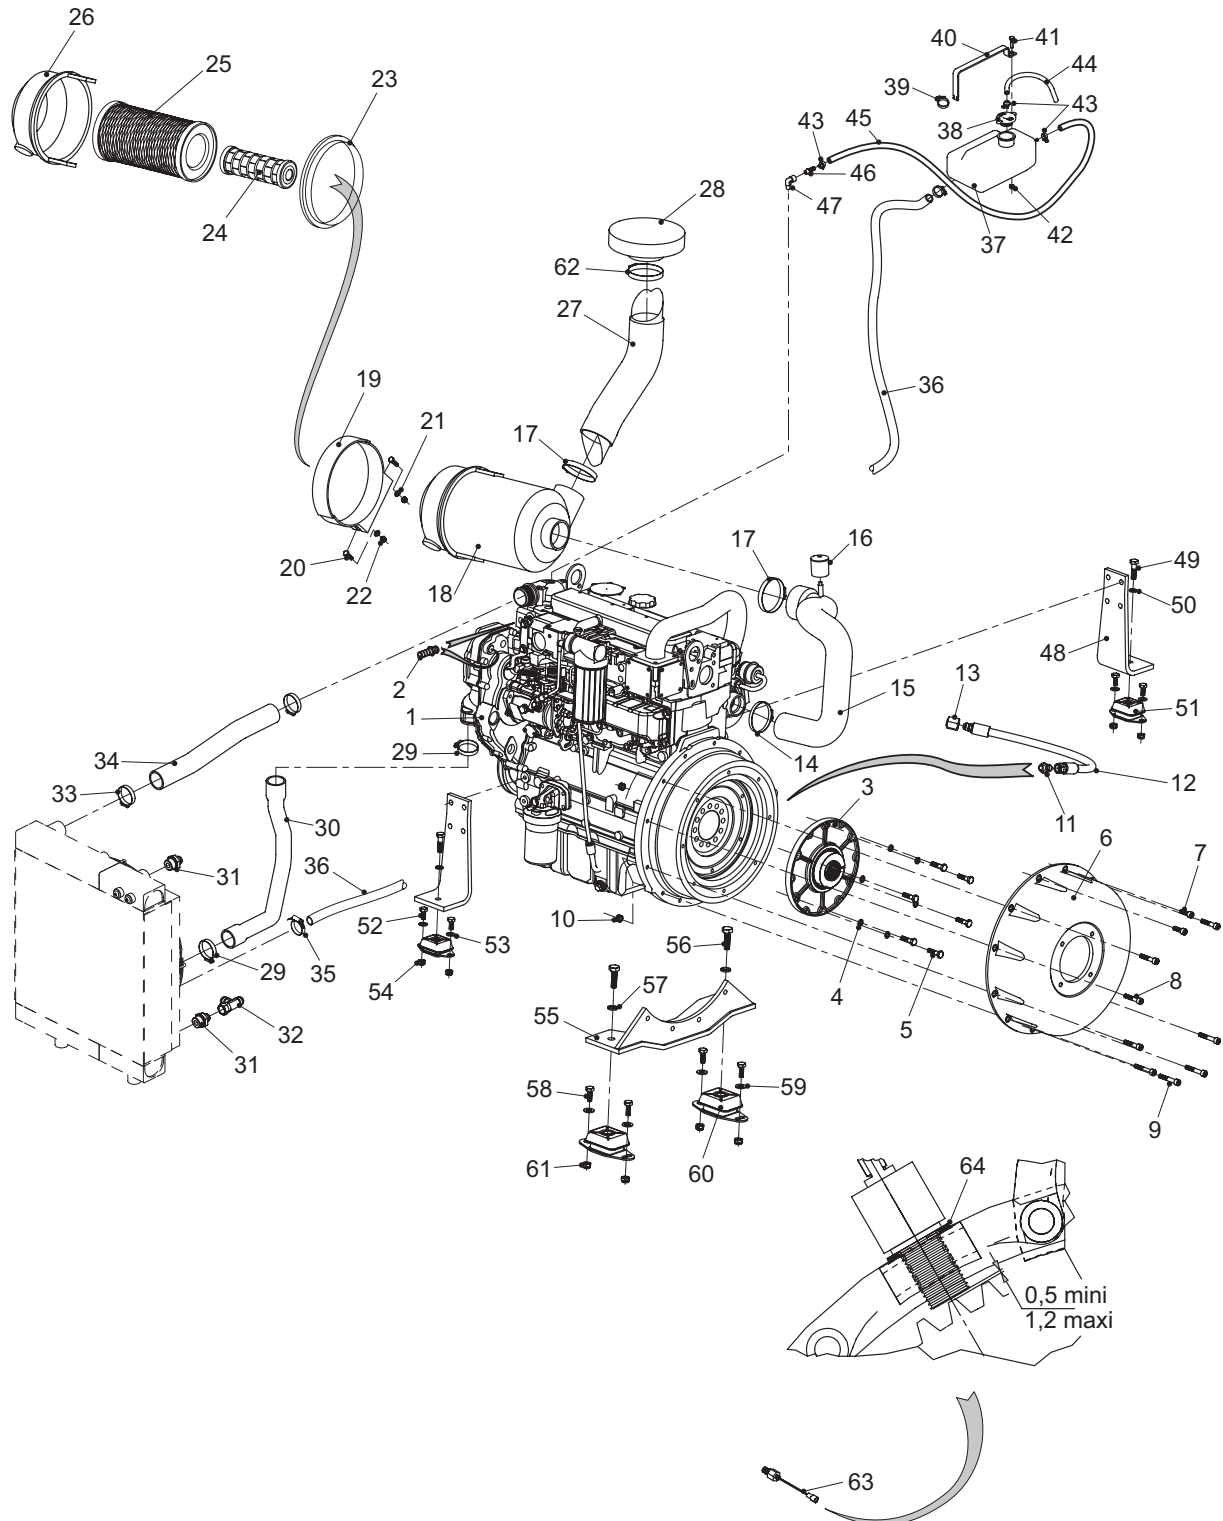


SPC006001

Engine Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
32	008372-34M	T- union			1
33	100369-80K	Clamp			2
34	6910969	Hose, upper radiator			1
35	11734.1	Collar			2
36	6908901	Hose, expansion tank			1
37	78688.9	Expansion tank			1
38	6909875	Plug			1
39	01275.7	Clamp			1
40	90490.4	Plate			1
41	01598.2	Screw			1
42	51851.4	Nut			1
43	62231.6	Clamp			3
44	6910264	Hose			1
45	6908902	Hose			1
46	014375-97F	Adapter			1
47	78745.7	Adapter			1
48	6908663	Plate			2
49	01528.9	Screw			2
50	89517.7	Washer			2
51	6914065	Shock Absorber			2
52	01605.5	Screw			4
53	000350-03W	Washer			4
54	100345-09A	Nut			4
55	6908071	Support			1
56	28439.8	Screw			2
57	89518.5	Washer			2
58	13399.1	Screw			4
59	000350-04X	Washer			4
60	6914064	Shock Absorber			2
61	000345-96E	Nut			4
62	38683.9	Collar			1

Engine Installation

Recurrence of previous drawing

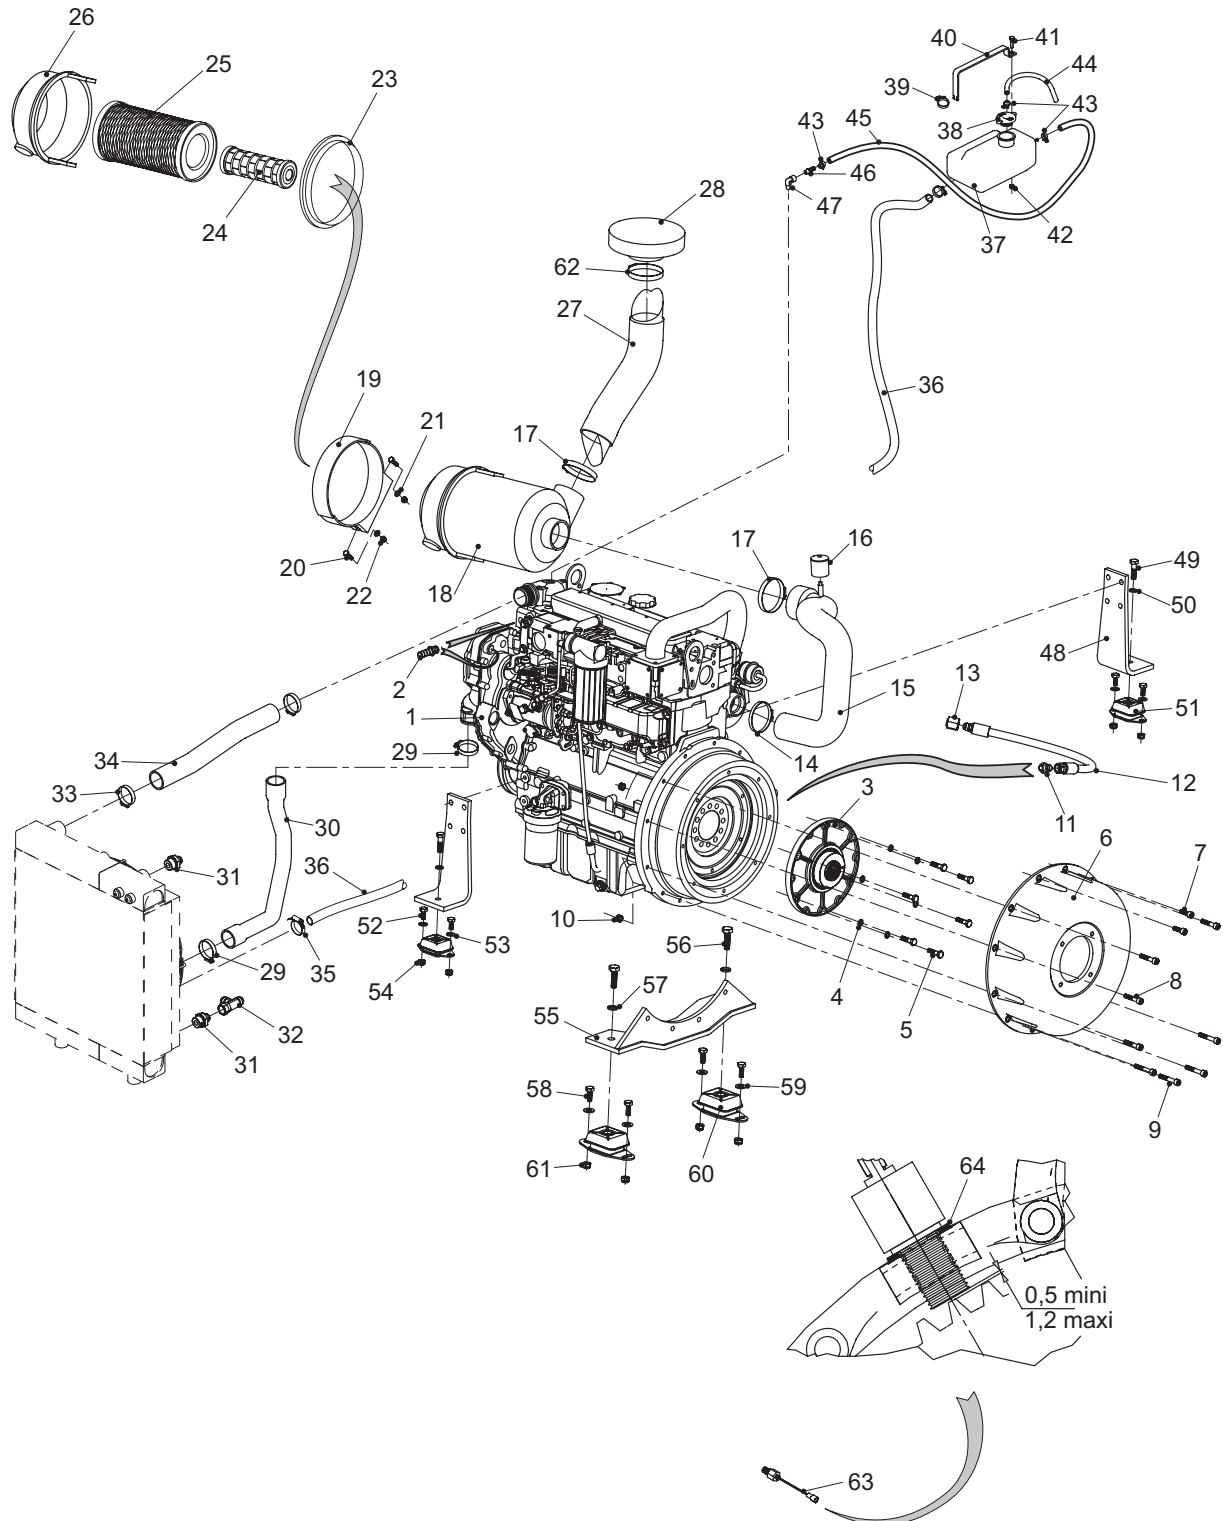


SPC006001

Engine Installation

[illegible]

Exhaust System

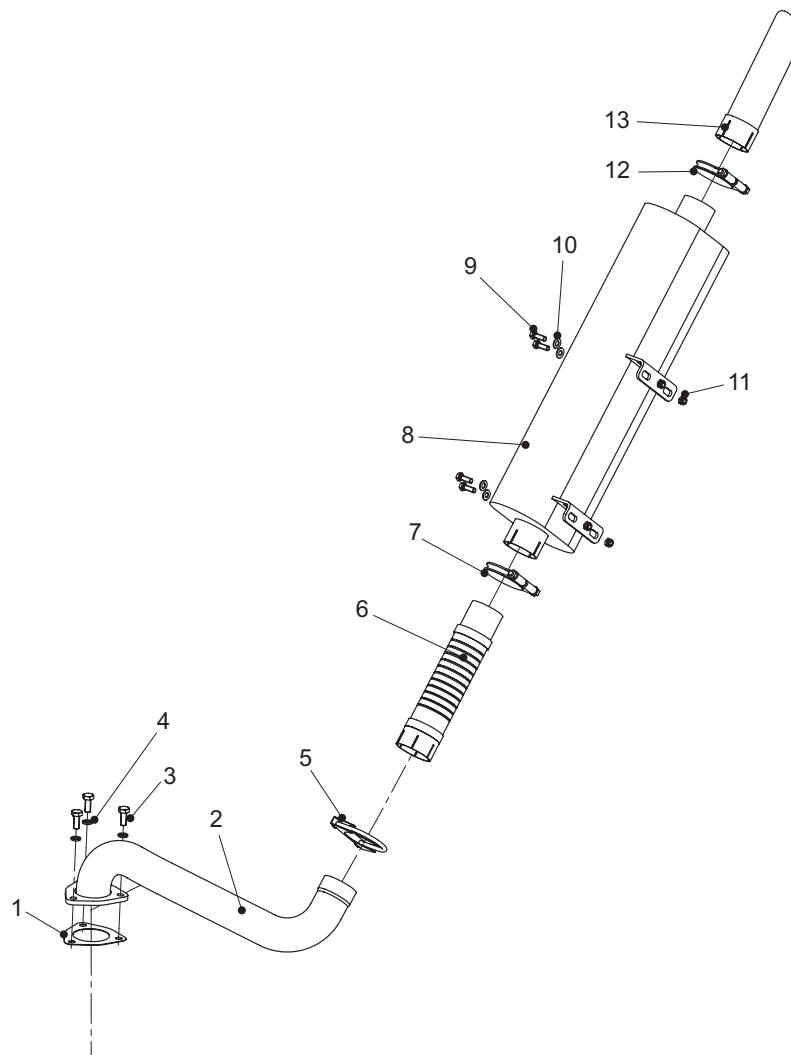


SPC006018

Exhaust System

[illegible]

Cooling System Installation

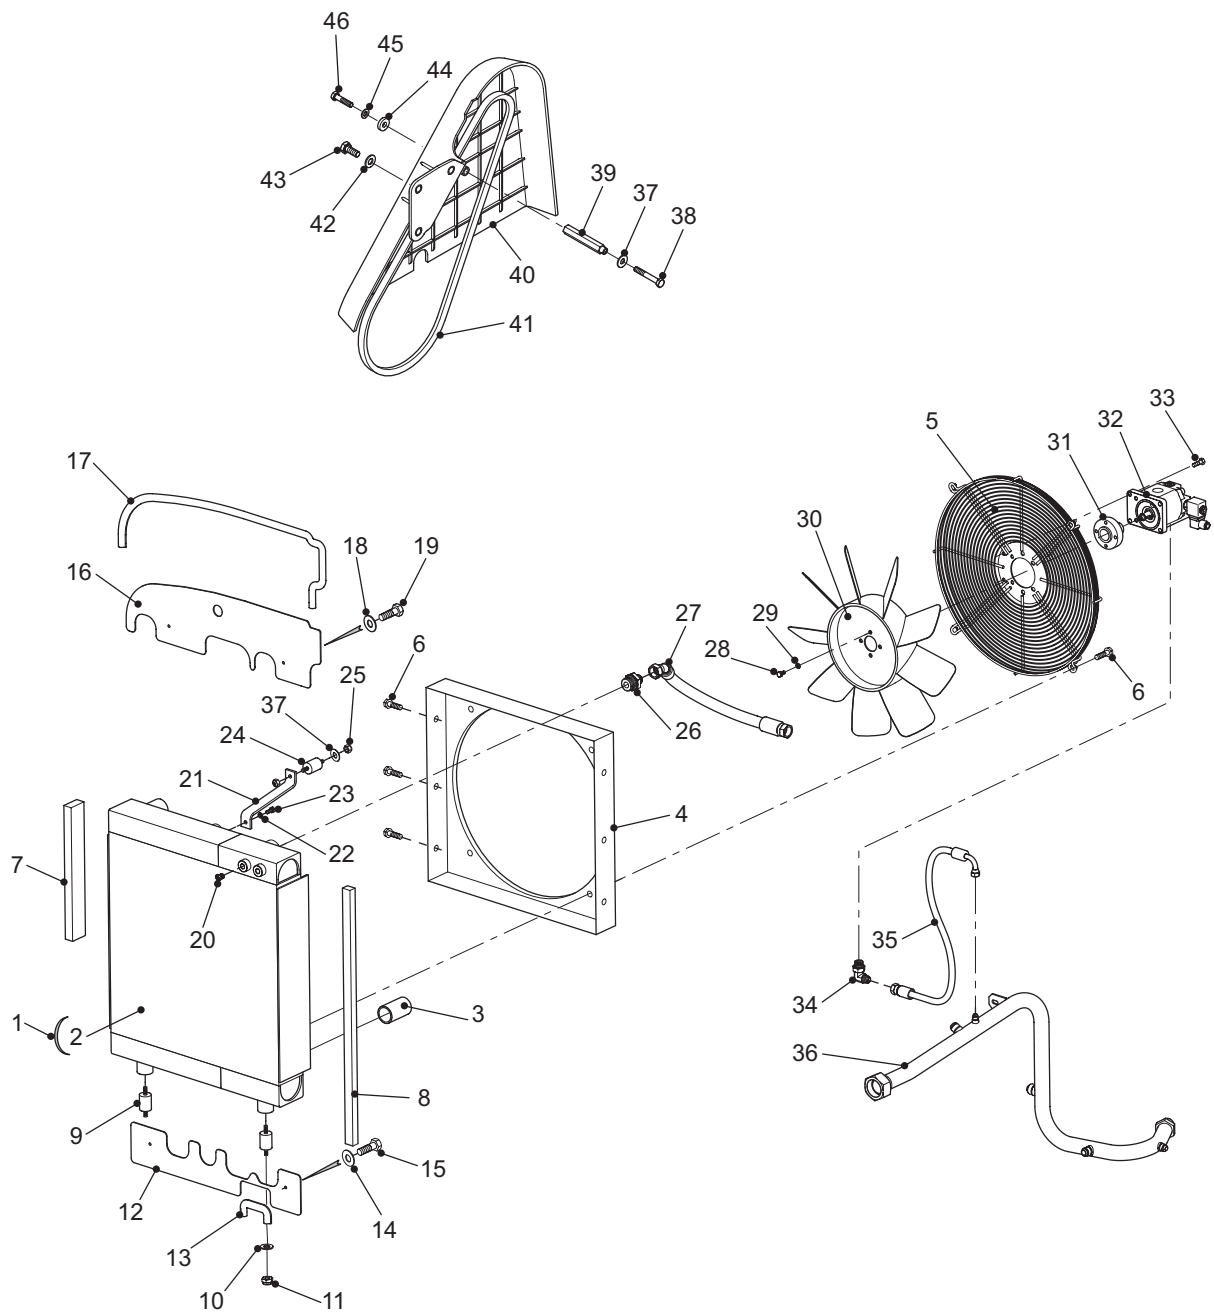


SPC006019

Cooling System Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6910317	Radiator assy	Pos. 2 to 6		1
2	6912542	Cooler, water/oil			1
3	6912545	Hose			1
4	6912543	Housing			1
5	6912544	Fan grate			1
6	6912550	Screw			4
7	6911775	Foam			1
8	88395.9	Insulation			1
9	6910966	Support			2
10	89519.3	Washer			2
11	01668.3	Nut			2
12	6914199	Plate			1
13	6911213	Seal	Length: 170		1
14	01717.8	Washer			2
15	01590.9	Screw			2
16	6914200	Plate			1
17	6911746	Seal	Length: 950		1
18	01717.8	Washer			2
19	01590.9	Screw			2
20	6911759	Plug			2
21	6910985	Plate			1
22	89519.3	Washer			1
23	01596.6	Screw			1
24	6910966	Support			1
25	51851.4	Nut			2
26	68609.7	Union			1
27	6913654	Hose			1
28	01595.8	Screw			4
29	89519.3	Washer			4
30	97915.3	Fan			1
31	6911798	Hub			1

Cooling System Installation

Recurrence of previous drawing

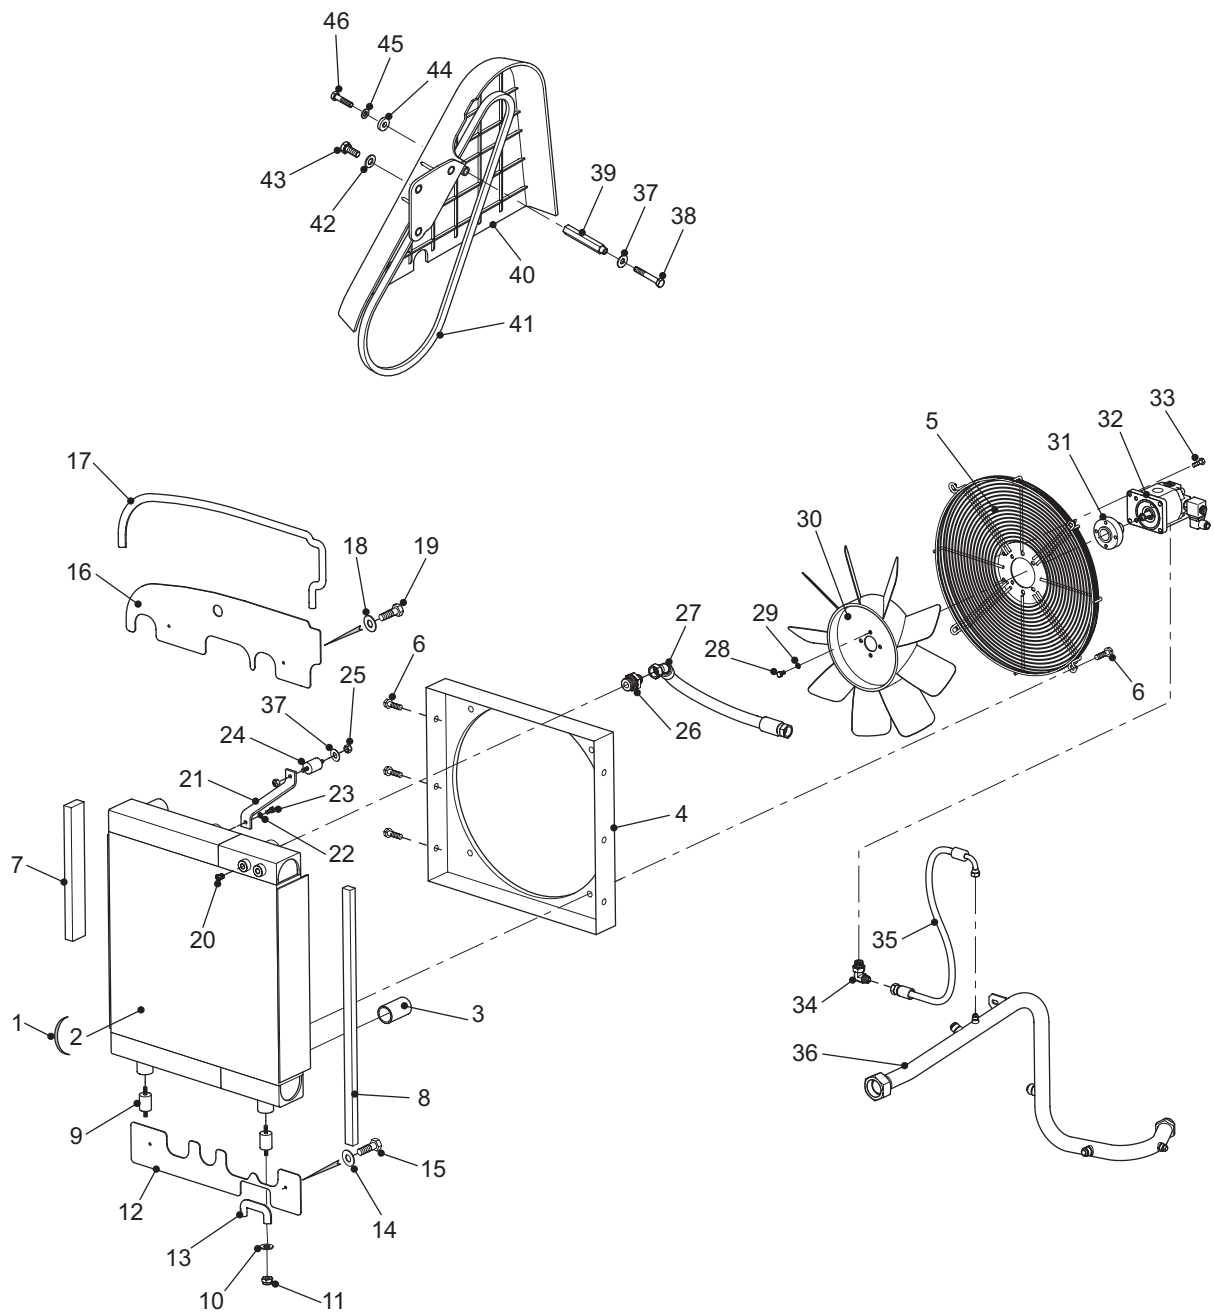


SPC006019

Cooling System Installation

[illegible]

Cooling Fan Circuit

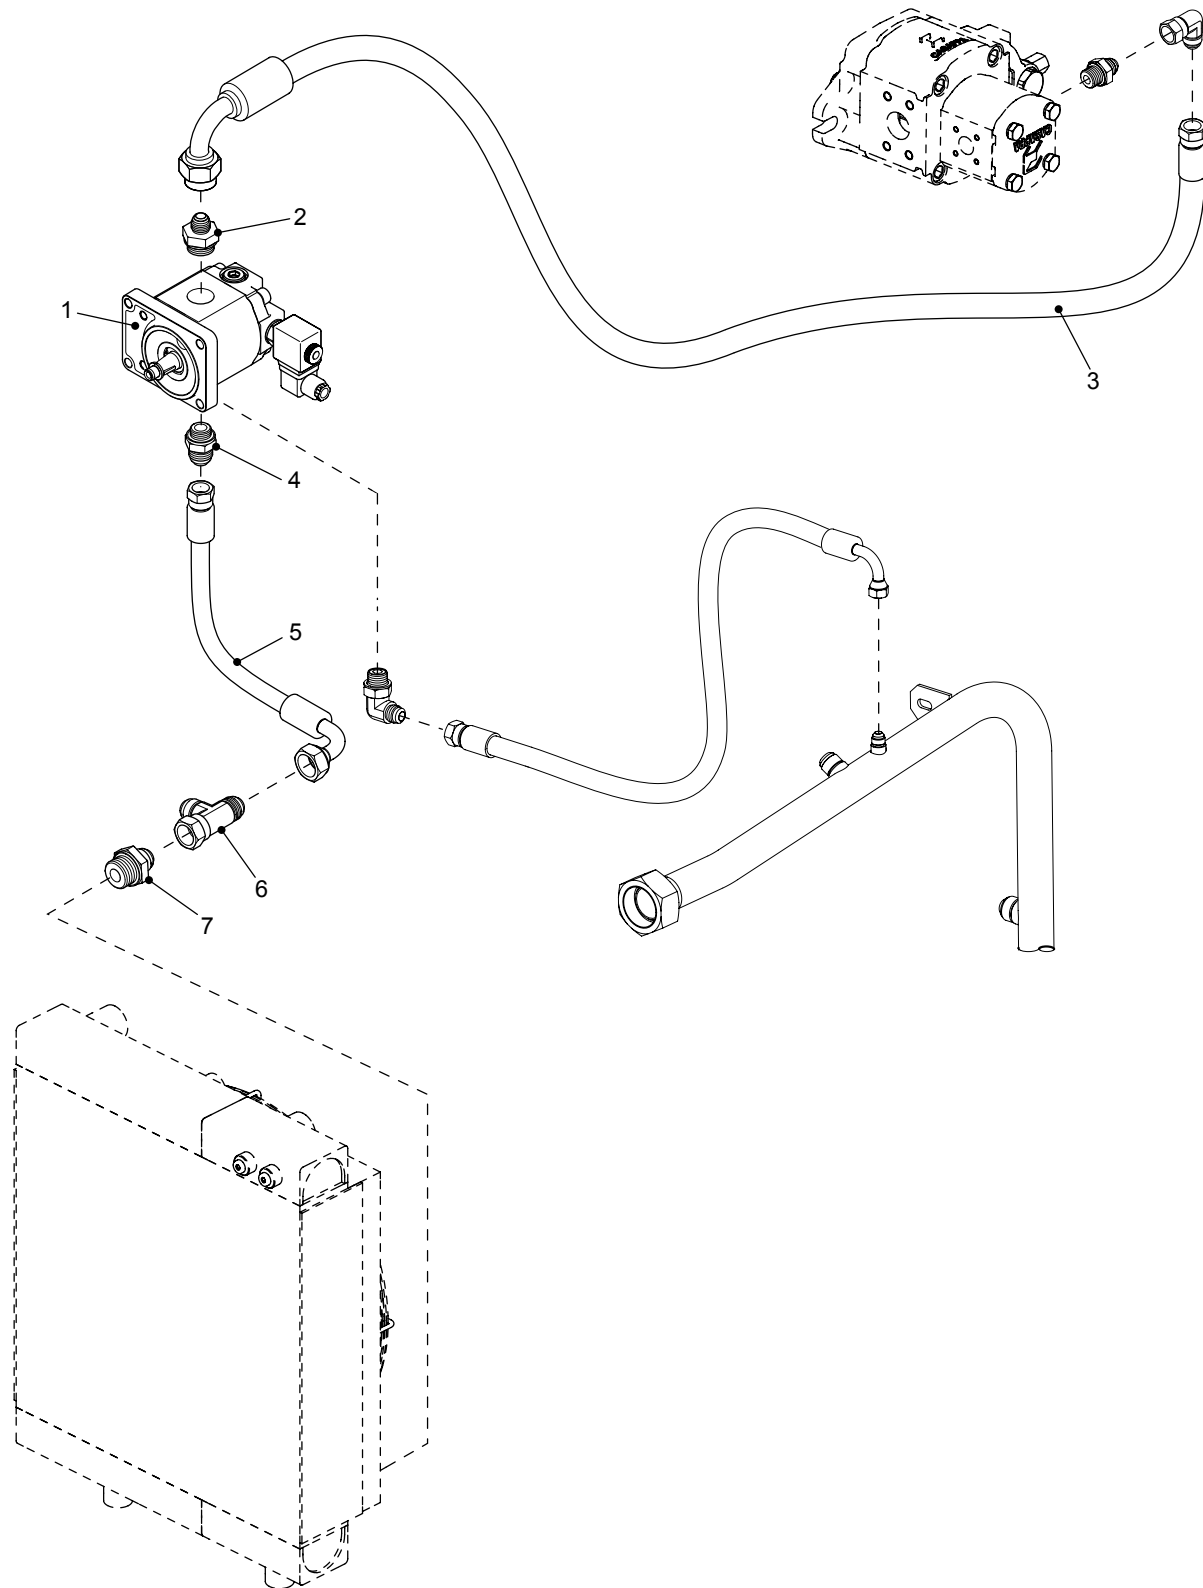


SPC006020

Cooling Fan Circuit

[illegible]

Cooling Fan Circuit (with optional reverse)

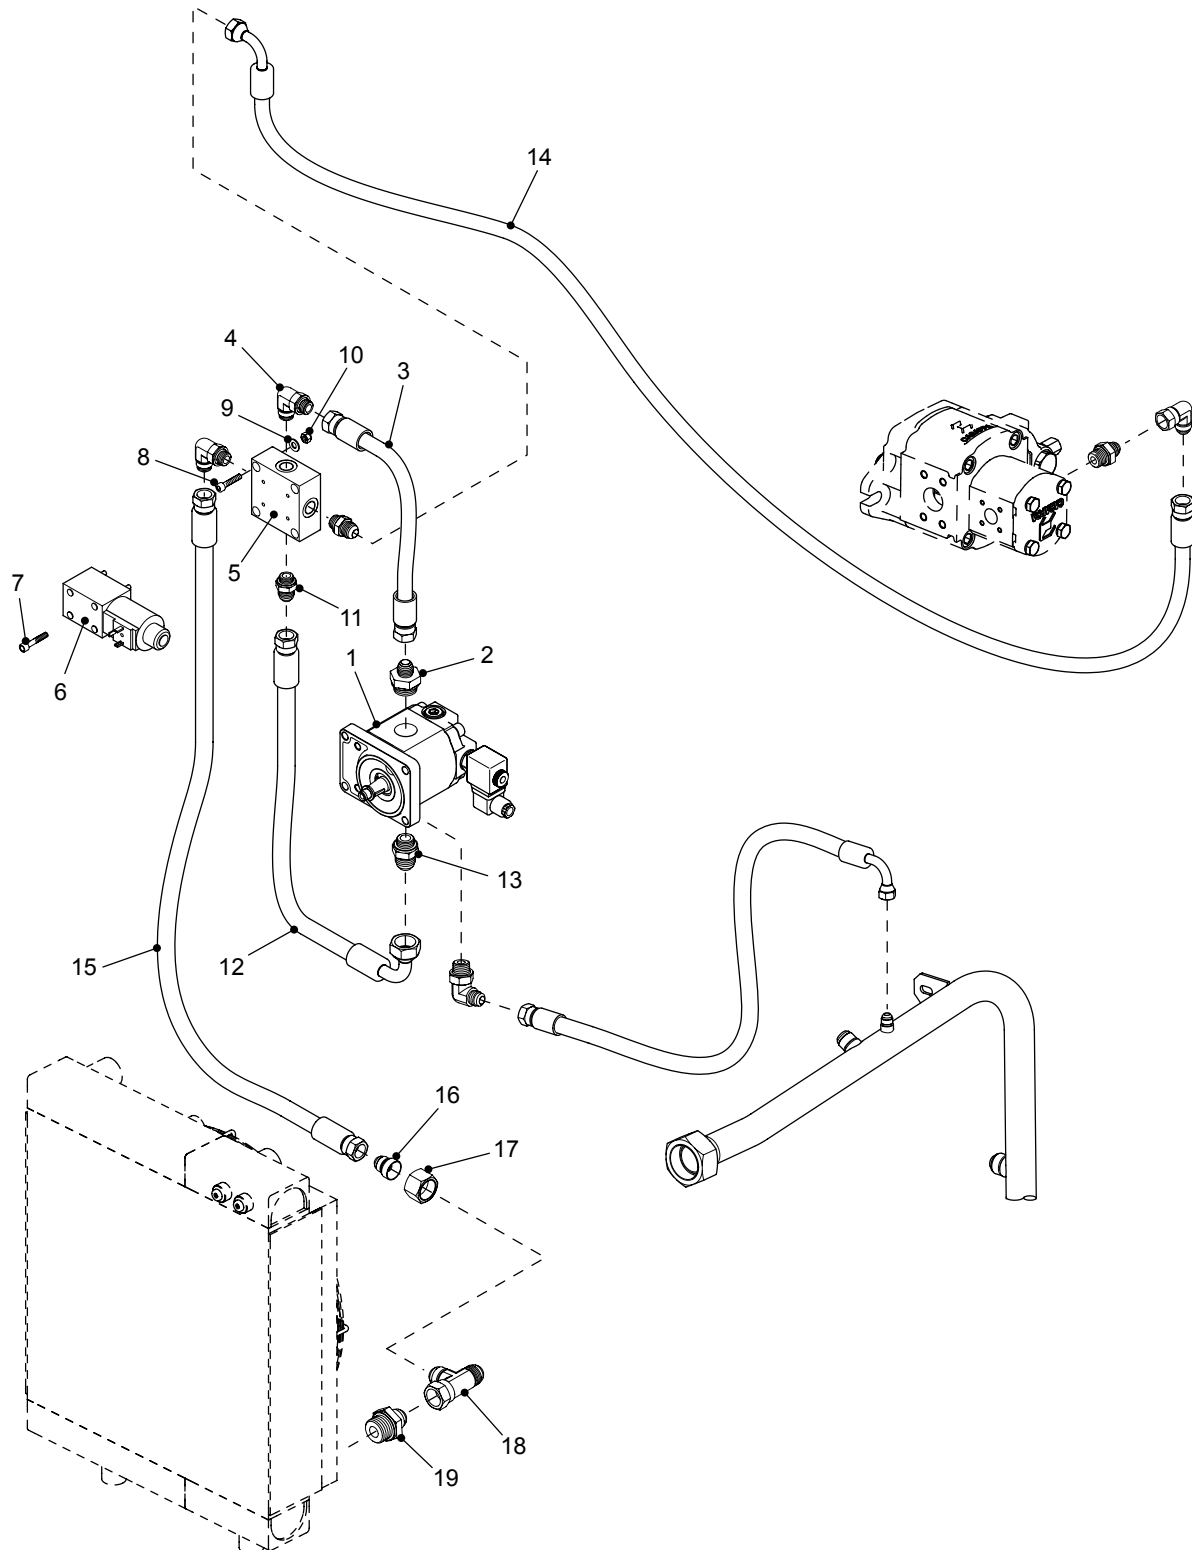


SPC006021

Cooling Fan Circuit (with optional reverse)

[illegible]

Cylinder Block

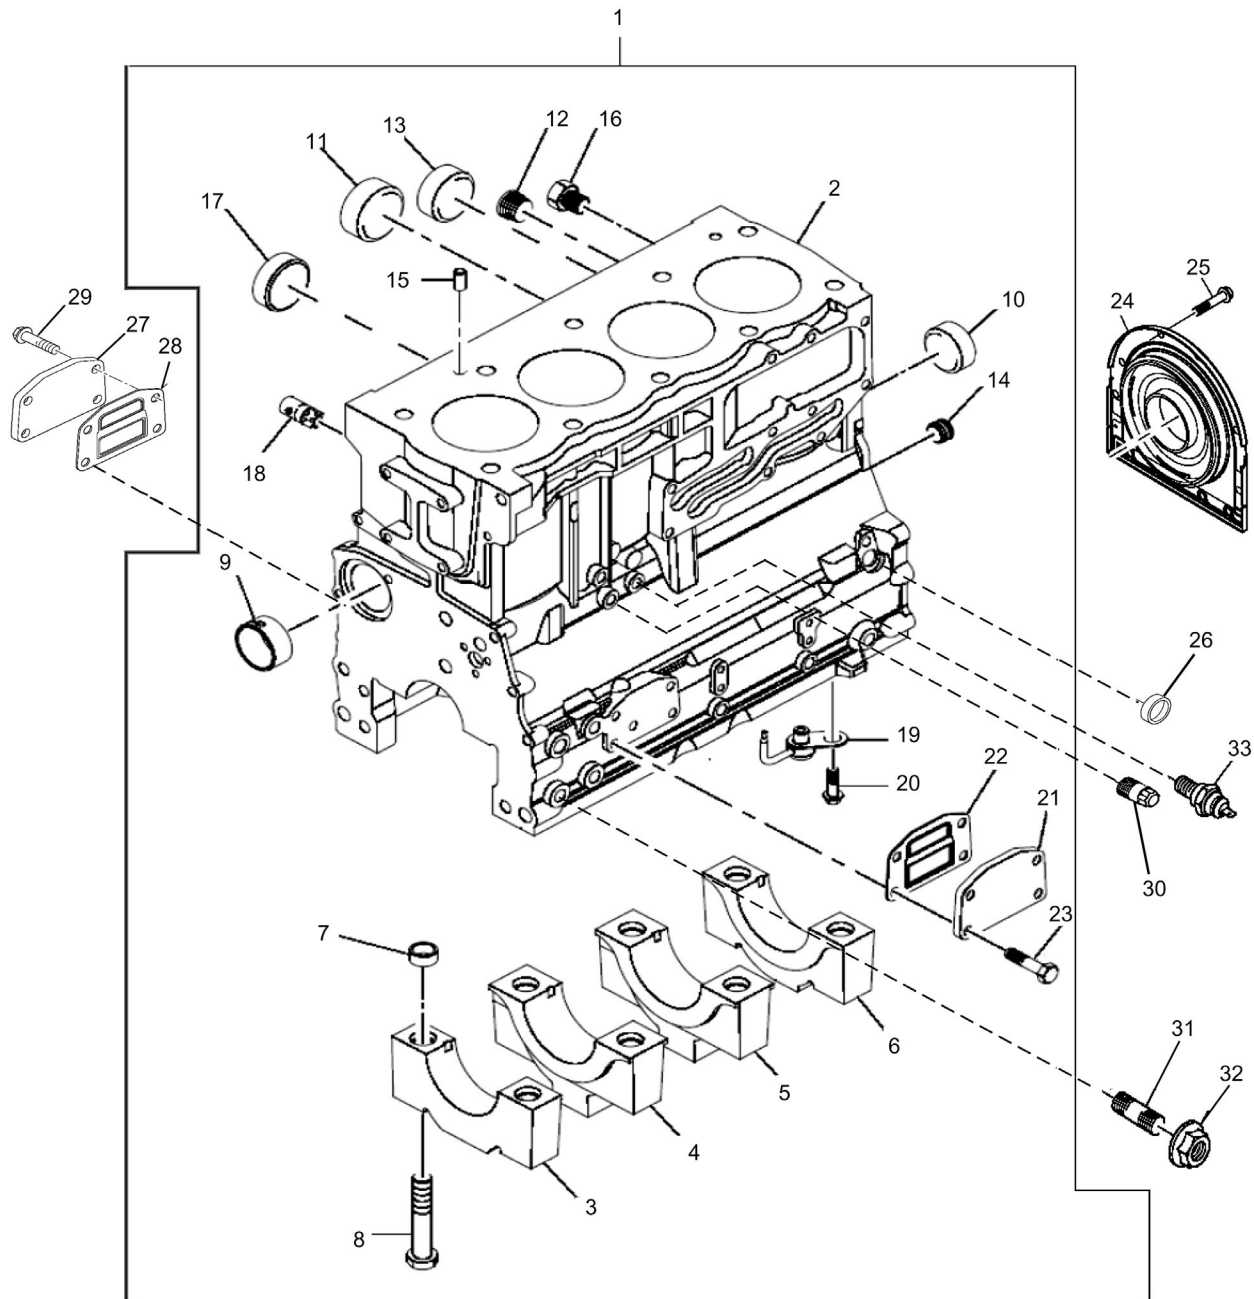


SPC006002

Cylinder Block

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6912027	Cylinder block kit	Pos. 2 to 23		1
2		Cylinder block	Order Pos. 1		1
3		Bearing cap	Order Pos. 1		1
4		Bearing cap	Order Pos. 1		1
5		Bearing cap	Order Pos. 1		1
6		Bearing cap	Order Pos. 1		1
7	64627.3	Bush			10
8	64628.1	Screw			10
9	6911915	Bush			1
10	6911937	Plug			1
11	6911936	Plug			2
12	71263.8	Plug			1
13	32478.0	Plug			1
14	6911928	Plug			1
15	93379.6	Dowel			2
16	6911932	Plug			2
17	6911892	Plug			1
18	6911931	Plug			1
19	6911862	Piston cooling jet			4
20	71564.9	Screw			4
21	6911964	Plate			1
22	6911983	Gasket			1
23	71381.8	Screw			4
24	6911887	Oil seal housing			1
25	6912051	Screw			10
26	6911893	Plug			1
27	6911964	Plate			1
28	6911983	Gasket			1
29	71381.8	Screw			4
30	6911930	Plug			1
31	64988.9	Stud			8

Cylinder Block

Recurrence of previous drawing



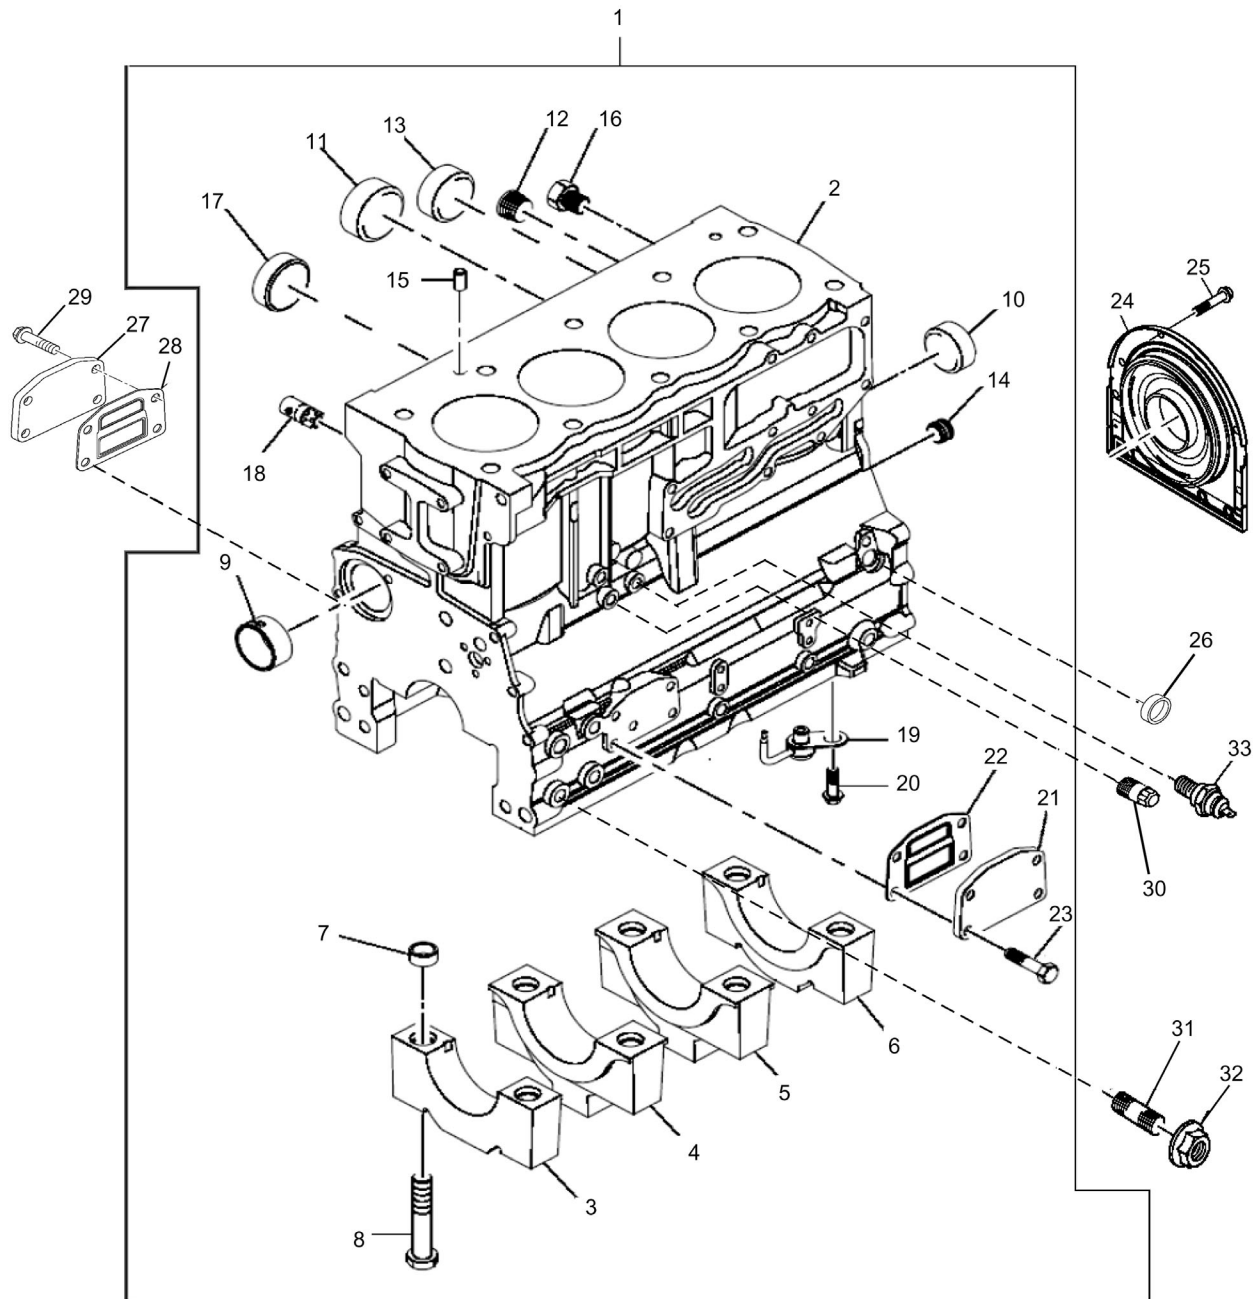


SPC006002

Cylinder Block

[illegible]

Crankshaft - Pistons

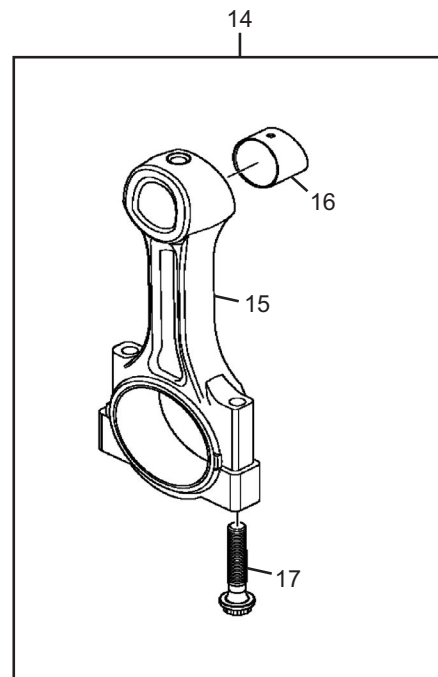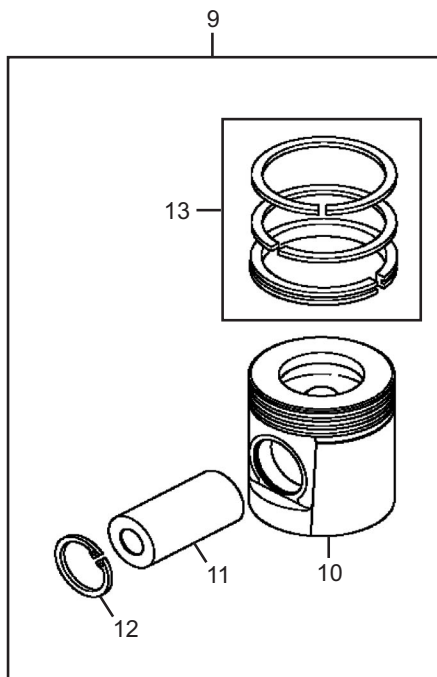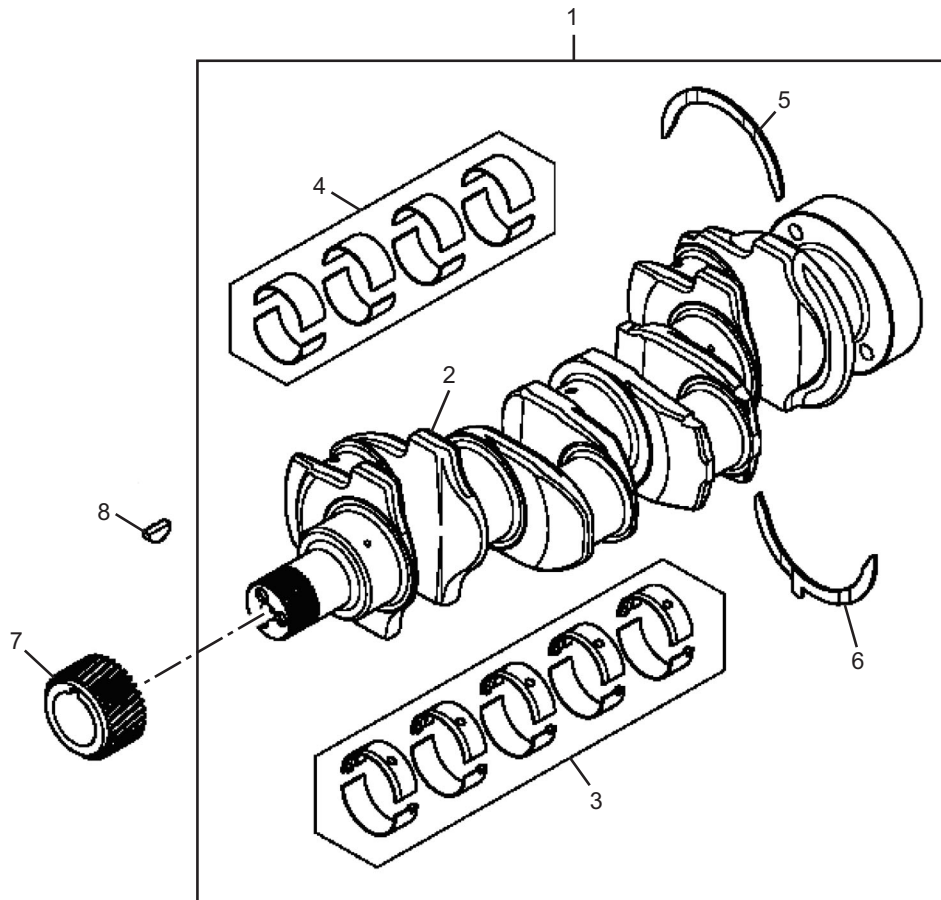


SPC006003

Crankshaft - Pistons

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6912029	Crankshaft assy	Pos. 2 to 6		1
2		Crankshaft	Order Pos. 1		1
3	6912021	Bearing			1
	6912034	Bearing	+ 0,01		1
	6912035	Bearing	+ 0,02		1
	6912036	Bearing	+ 0,03		1
4	6912022	Bearing kit			1
	6912031	Bearing kit	+ 0,01		1
	6912032	Bearing kit	+ 0,02		1
	6912033	Bearing kit	+ 0,03		1
5	46893.4	Stop			2
	60583.2	Thrust washer	+ 0,007		2
6	46894.2	Stop			2
	60584.0	Stop washer	+ 0,007		2
7	6912046	Crankshaft gear			1
8	64655.4	Key			1
9	6912050	Piston assy	Pos. 10 to 13		4
10		Piston	Order Pos. 9		4
11		Piston pin	Order Pos. 9		4
12	93158.4	Snap ring			8
13	6912026	Piston ring kit			4
14	6911897	Conrod kit	Grade F (red)		4
	6912040	Conrod kit	Grade G (orange)		4
	6912041	Conrod kit	Grade H (white)		4
	6912042	Conrod kit	Grade J (green)		4
	6912043	Conrod kit	Grade K (violet)		4
	6912044	Conrod kit	Grade L (blue)		4
15		Conrod	Order Pos. 14		4
16	6911914	Bush			4
17	6911929	Screw			8

Flywheel and Drive Pulley

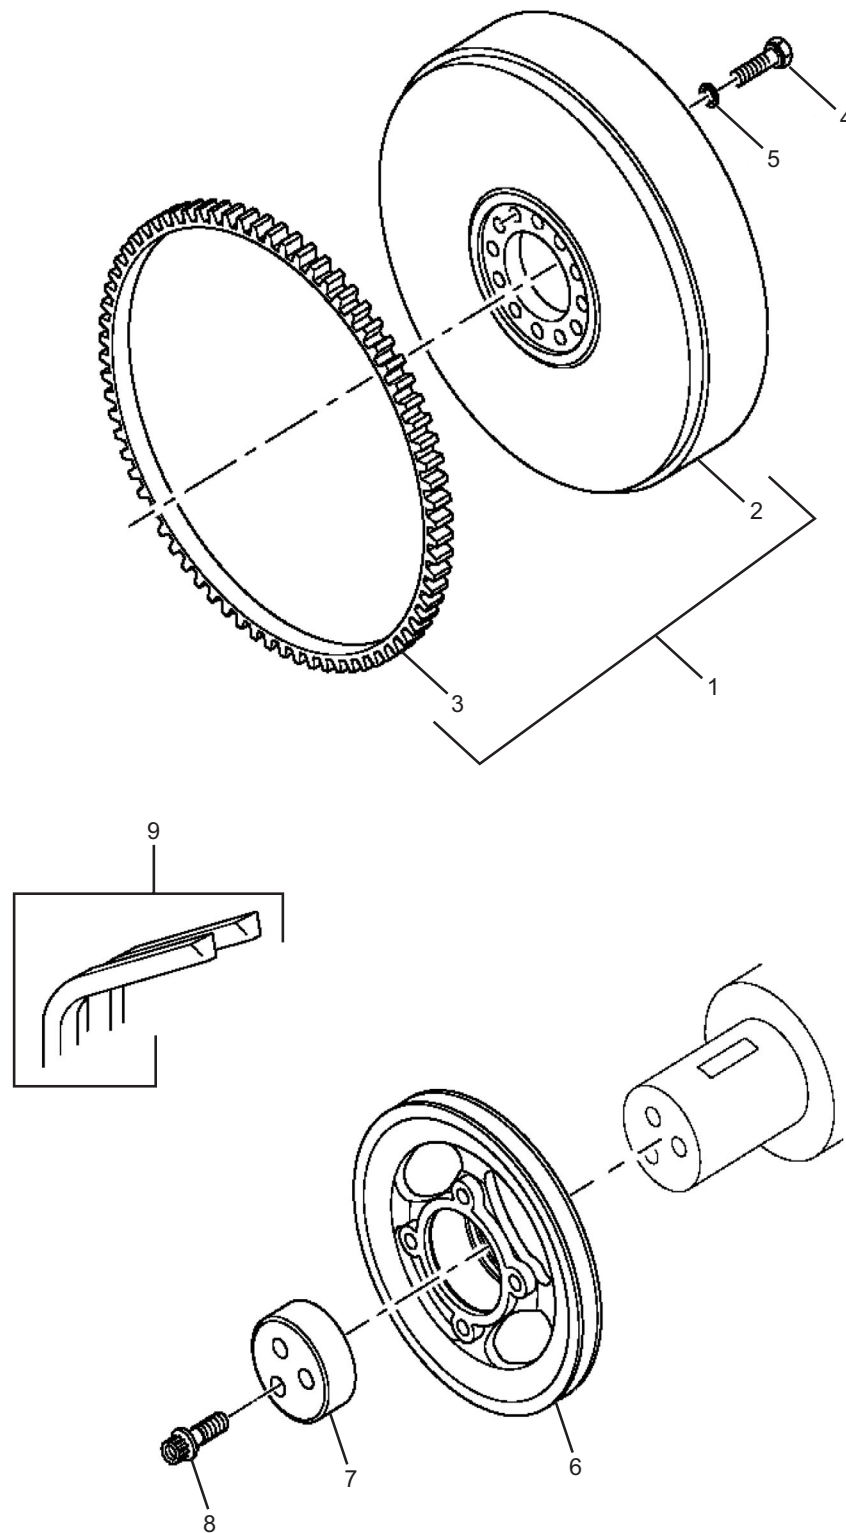


SPC006004

Flywheel and Drive Pulley

[illegible]

Cylinder Head

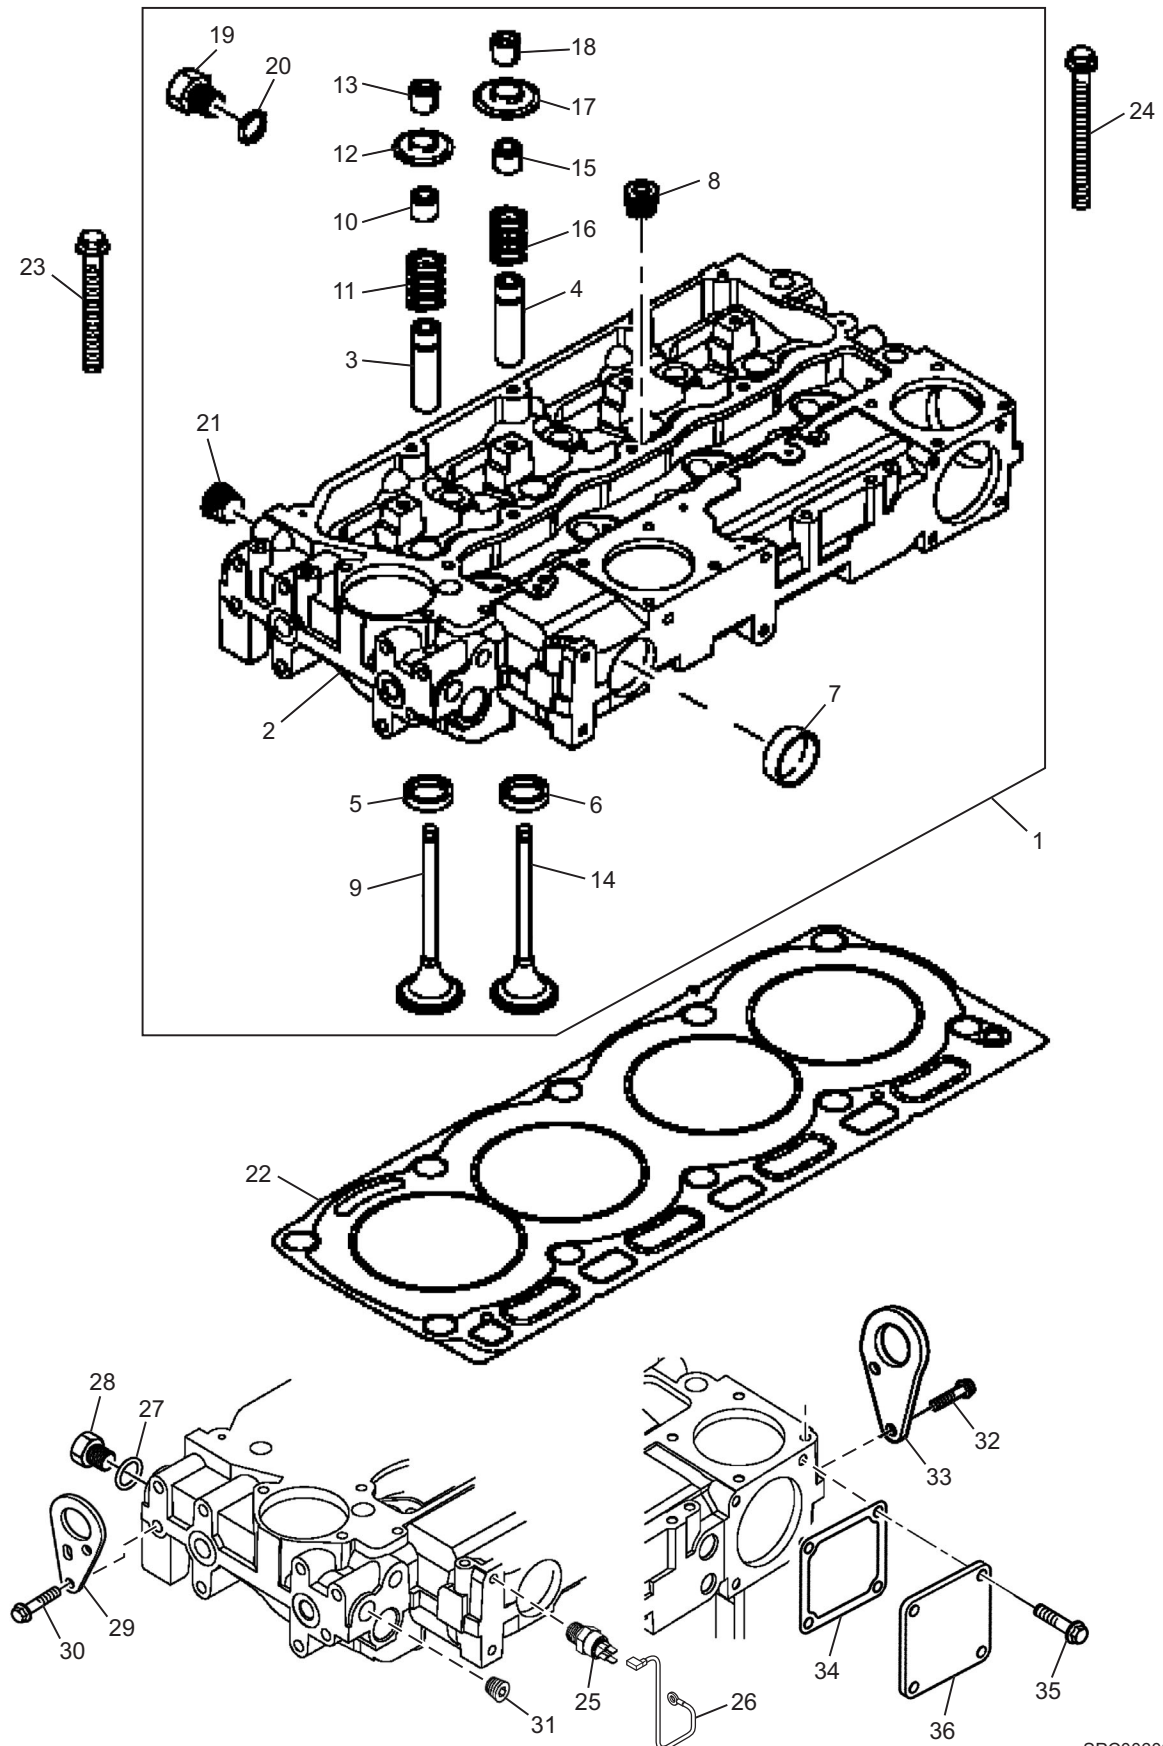


SPC006005

Cylinder Head

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6912028	Cylinder head assy	Pos. 2 to 21		1
2		Cylinder head	Order Pos. 1		1
3	93164.2	Guide			4
4	93164.2	Guide			4
5	6911945	Insert			4
6	6911946	Insert			4
7	40968.0	Plug			2
8	71263.8	Plug			4
9	6911923	Inlet valve			4
10	6911888	Seal			4
11	6911925	Spring			4
12	6911947	Cap			4
13	93168.3	Cotter			8
14	6911922	Exhaust valve			4
15	6911888	Seal			4
16	6911925	Spring			4
17	6911947	Cap			4
18	93168.3	Cotter			8
19	6911939	Plug			1
20	6911881	O-ring			1
21	33219.7	Plug			1
22	6911969	Cylinder head gasket			1
23	6911933	Screw			7
24	6911934	Screw			3
25	6911911	Switch, water temp			1
26	6912101	Wire harness			1
27	6911881	O-ring			1
28	6911939	Plug			1
29	6911961	Lifting plate			1
30	71348.7	Screw			2
31	33219.7	Plug			1

Cylinder Head

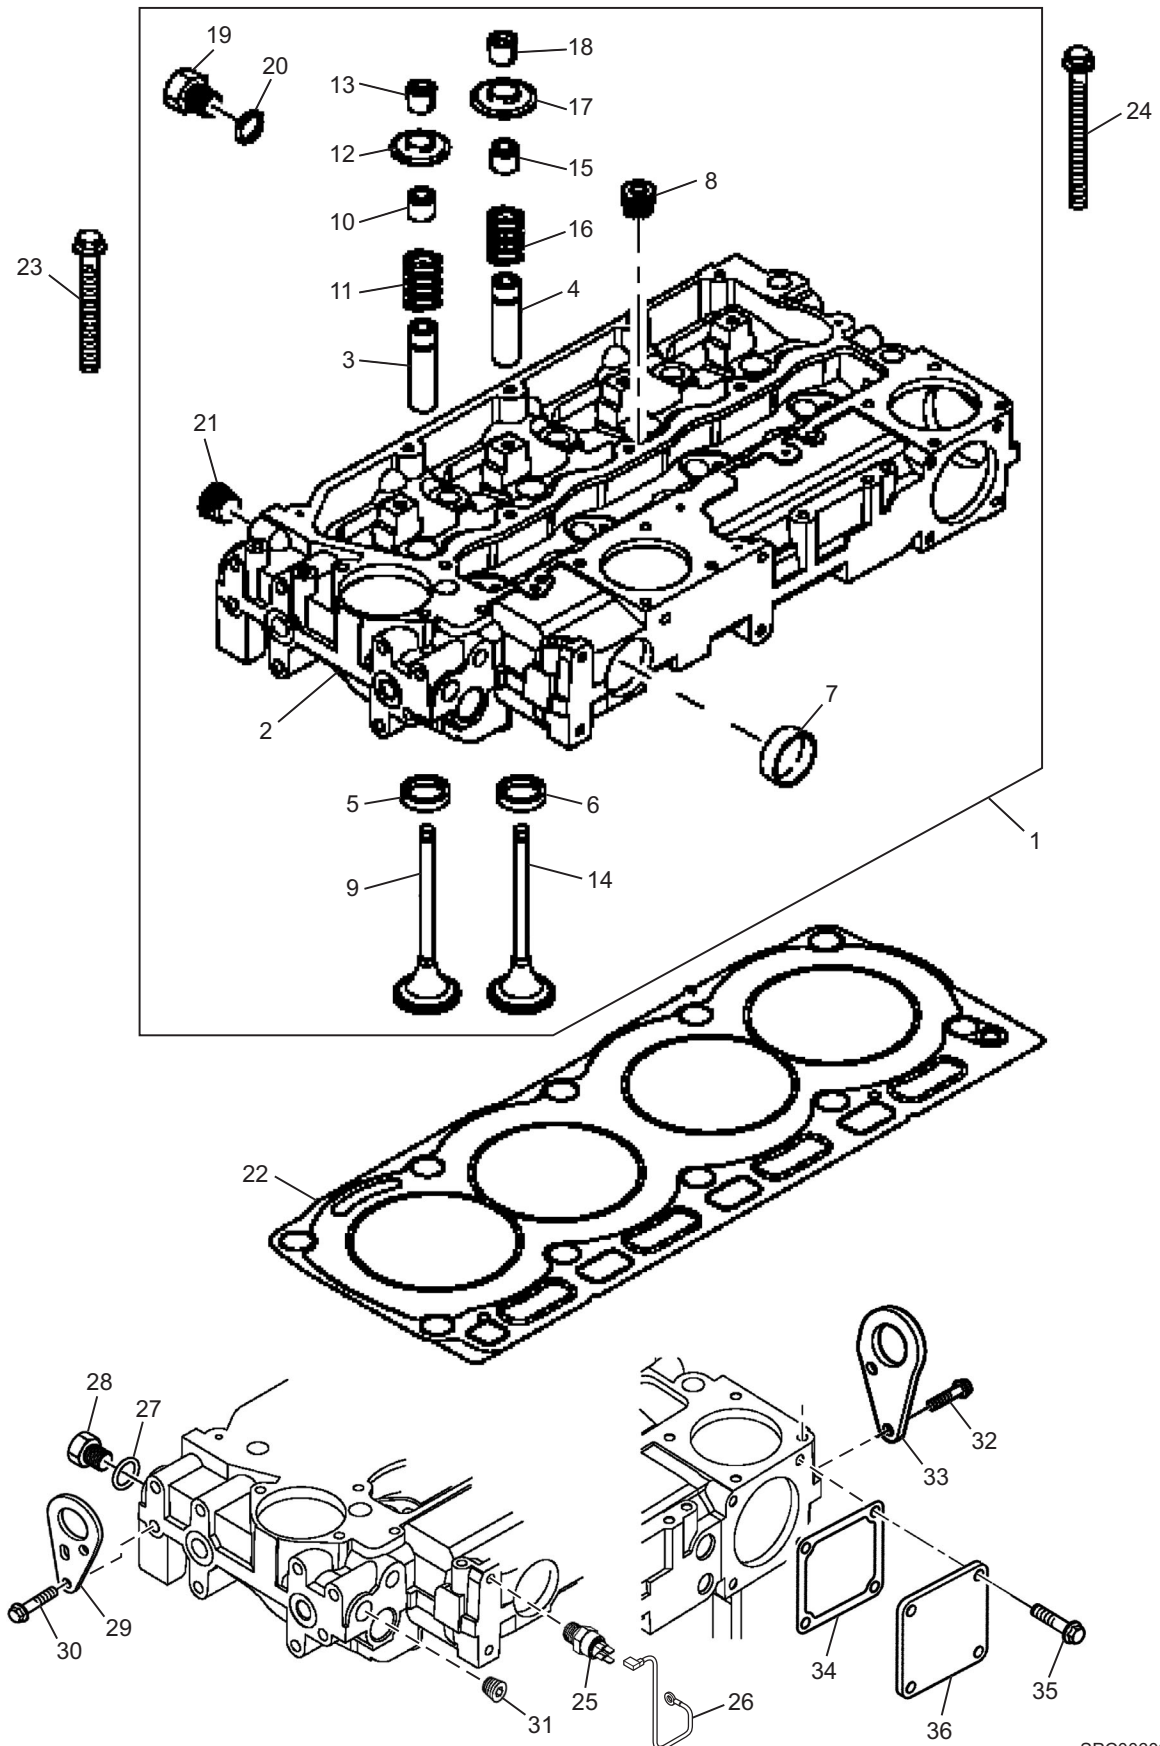


SPC006005

Cylinder Head

[illegible]

Rocker Shaft

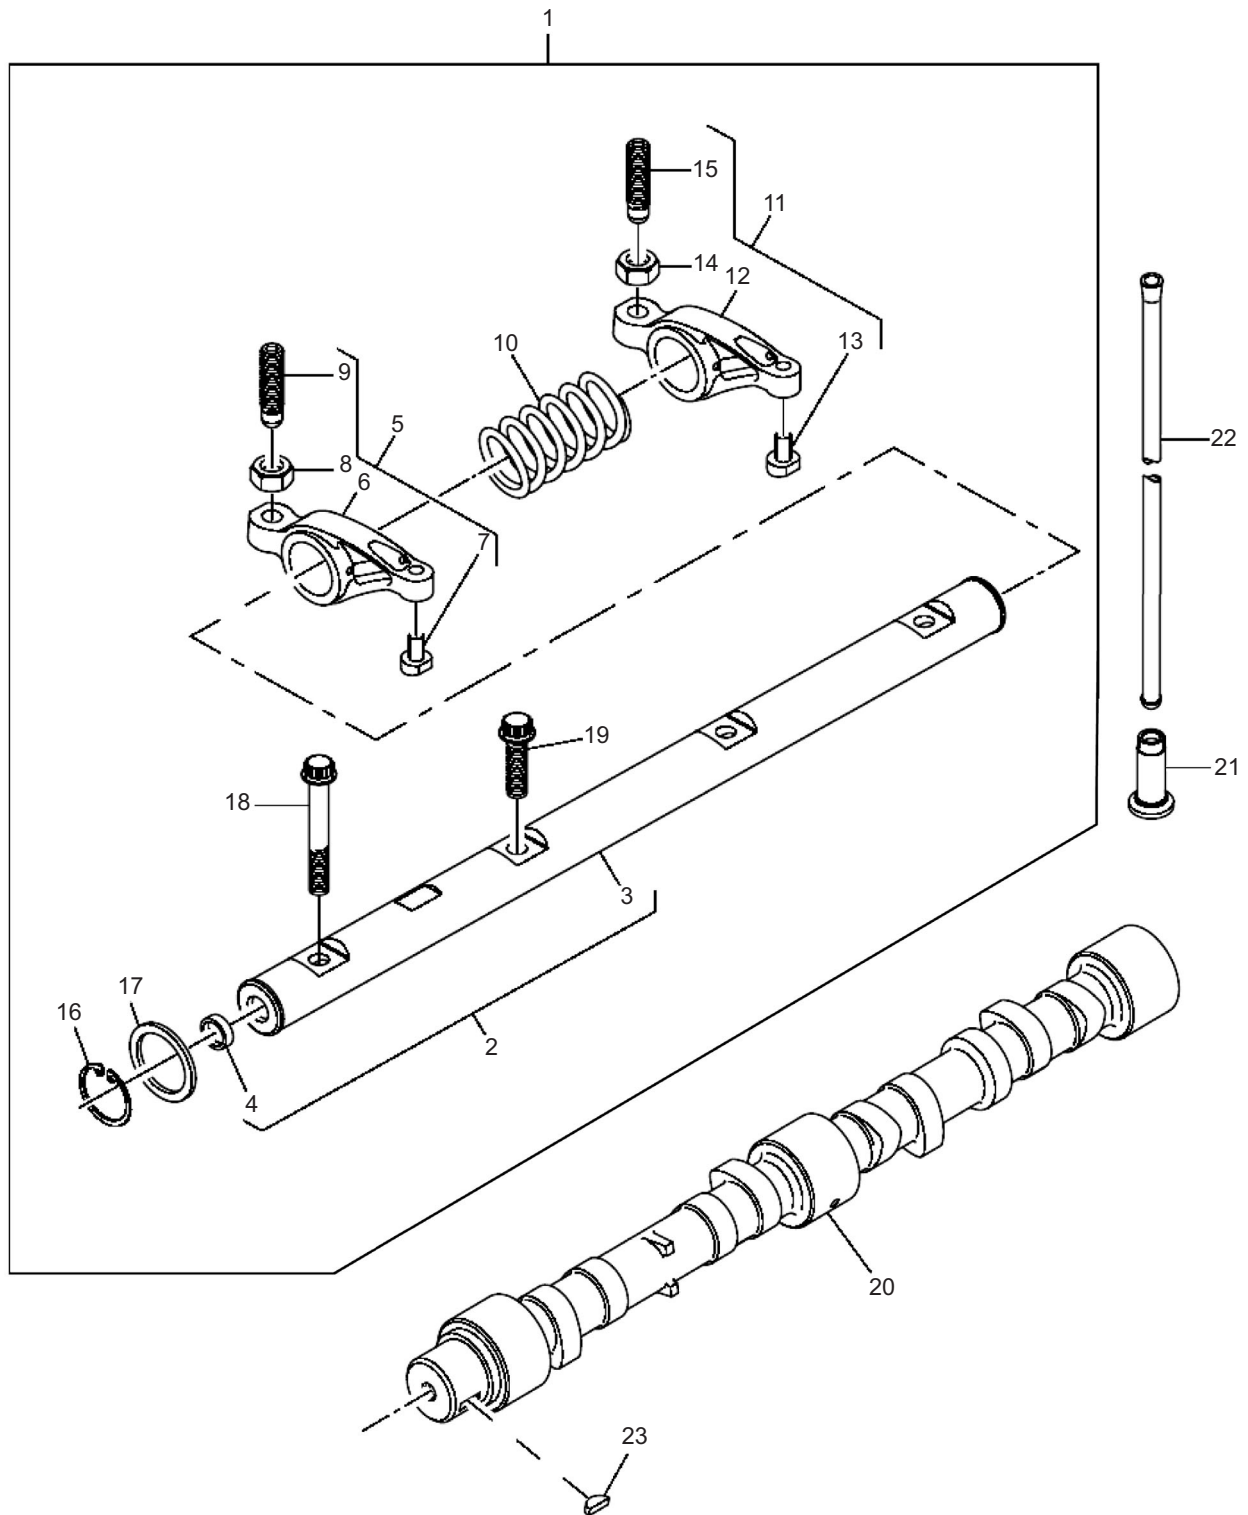


SPC006006

Rocker Shaft

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6912004	Rocker assembly	Pos. 2 to 19		1
2	6912005	Spindle assy	Pos. 3 + 4		1
3		Spindle	Order Pos. 2		1
4	6911891	Plug			1
5	6912002	Rocker assy	Pos. 6 to 9		4
6		Rocker	Order Pos. 5		4
7		Pad	Order Pos. 5		4
8	32539.9	Nut			4
9	40982.1	Screw			4
10	6911924	Spring			3
11	6912003	Rocker assy	Pos. 12 to 15		4
12		Rocker	Order Pos. 11		4
13		Pad	Order Pos. 11		4
14	32539.9	Nut			4
15	40982.1	Screw			4
16	6911910	Snap ring			2
17	6911865	Washer			2
18	6911875	Screw			1
19	6911876	Screw			3
20	6911921	Camshaft			1
21	55103.6	Tappet			8
22	46032.9	Rod			8
23	64655.4	Key			1

Timing Gear

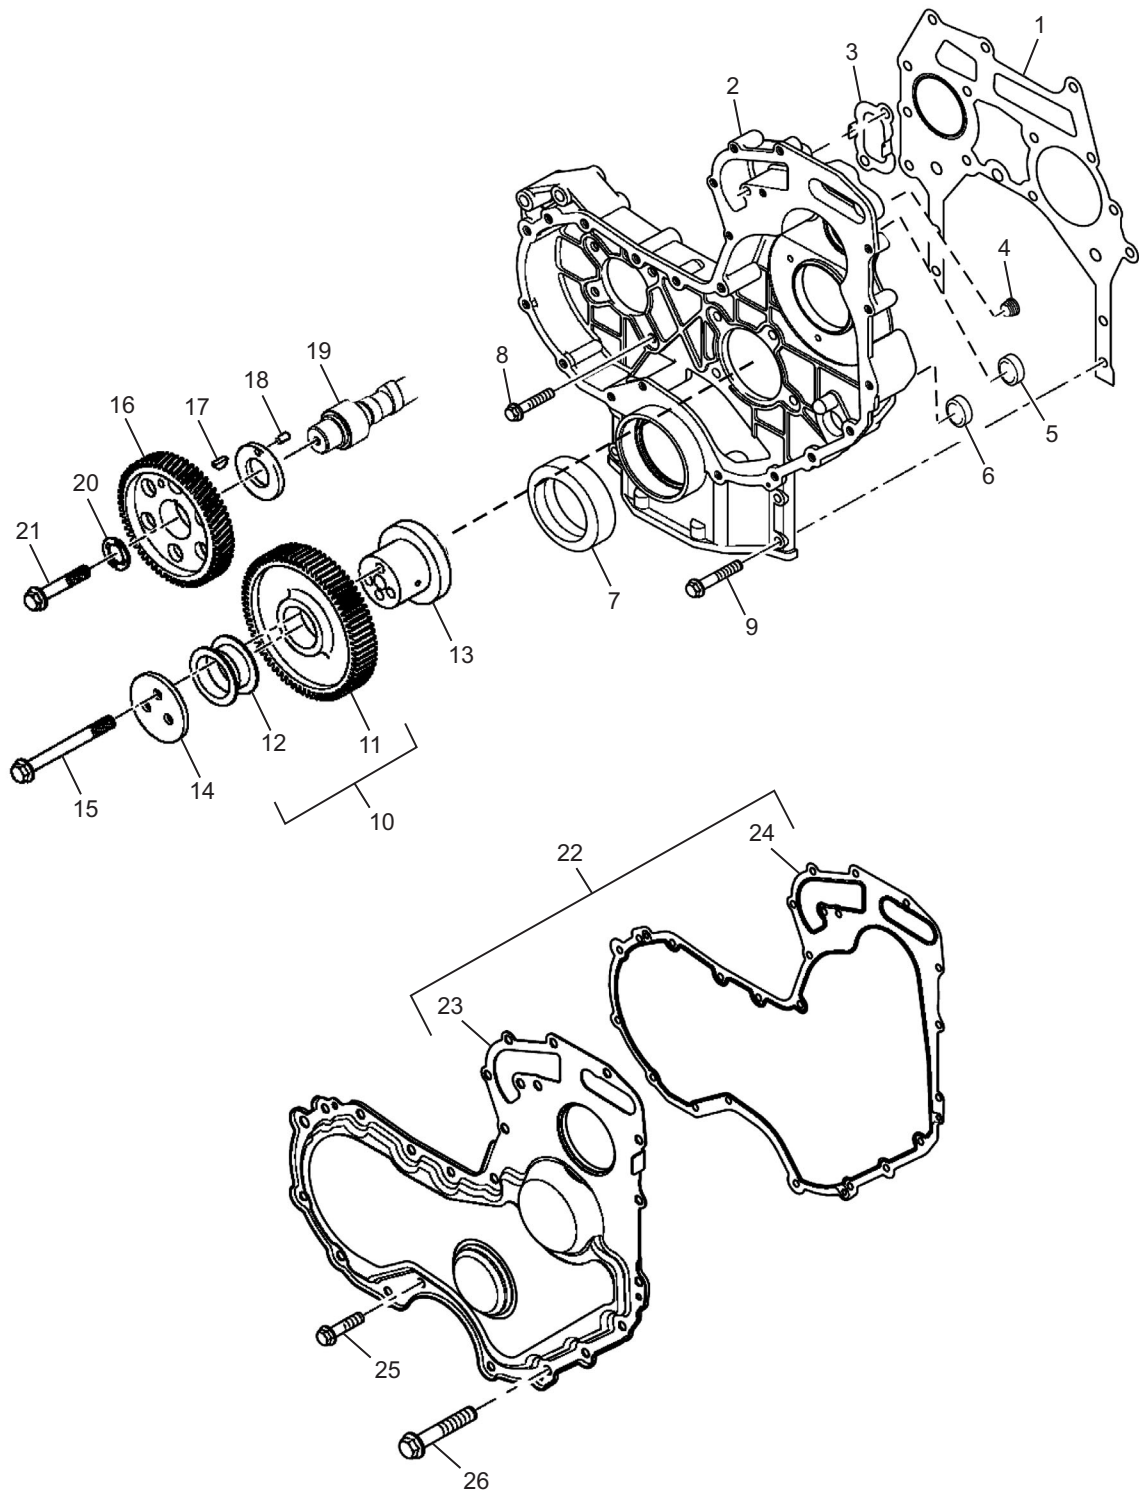


SPC006007

Timing Gear

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6911961	Gasket			1
2	6911985	Case			1
3	6911963	Gasket			1
4	33219.7	Plug			1
5	6911894	Plug			1
6	6912047	Plug			1
7	40985.4	Seal			1
8	64878.2	Screw			8
9	71381.8	Screw			4
10	6911920	Gear	Pos. 11 + 12		1
11		Gear	Order Pos. 10		1
12	55714.0	Bush			2
13	64588.7	Hub			1
14	64590.3	Plate			1
15	71388.3	Screw			3
16	6911919	Gear			1
17	64655.4	Key			1
18	71386.7	Washer			1
19	64581.2	Pin			1
20	6911916	Washer			1
21	81019.2	Screw			1
22	6912016	Cover assy	Pos. 23 + 24		1
23		Cover	Order Pos. 22		1
24	6911971	Gasket			1
25	71456.8	Screw			10
26	93280.6	Screw			5

Oil Sump - Oil Pump

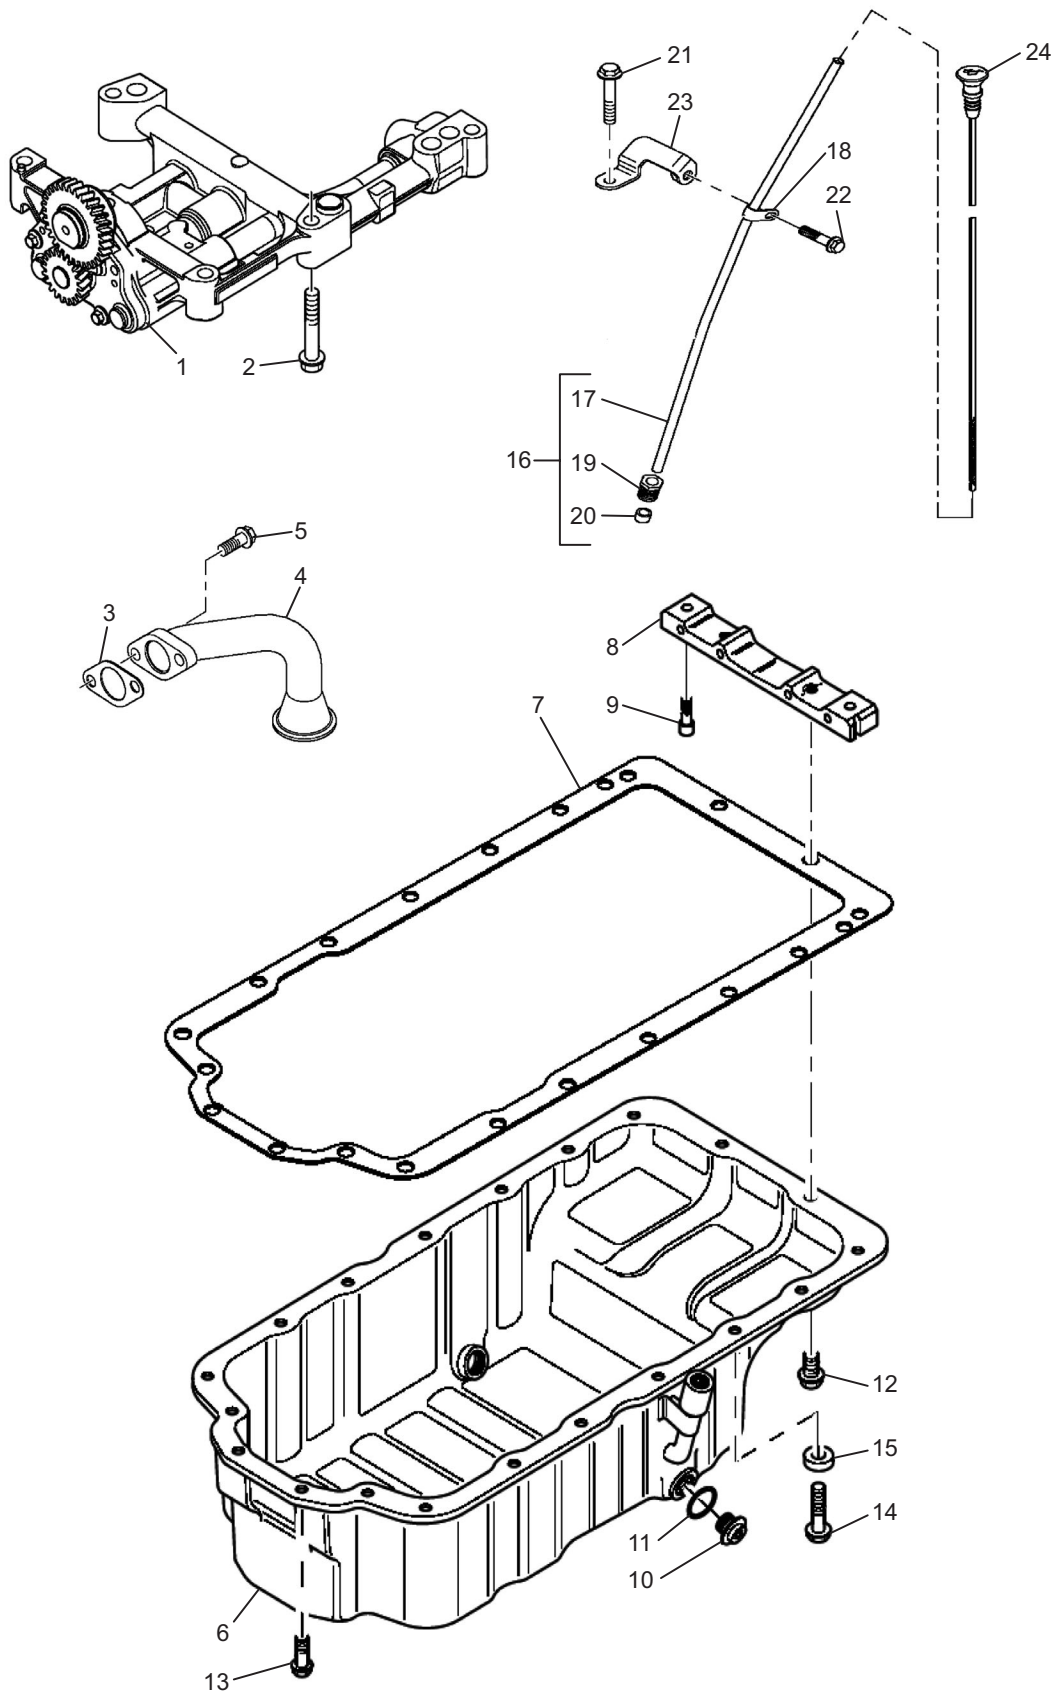


SPC006008

Oil Sump - Oil Pump

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6912010	Oil pump			1
2	6912056	Screw			5
3	81063.0	Seal			1
4	6911956	Pipe			1
5	71338.8	Screw			2
6	6911986	Oil sump			1
7	6911970	Gasket			1
8	6911965	Gasket			1
9	71275.2	Screw			2
10	64753.7	Plug, drain, engine oil			2
11	64752.9	O-ring, engine oil drain plug			2
12	71468.3	Screw			2
13	71456.8	Screw			17
14	64878.2	Screw			1
15	6911942	Spacer			1
16	6912007	Dipstick tube	Pos. 17 to 19		1
17		Dipstick tube	Order Pos. 16		1
18	6911853	Collar			1
19	71465.9	Nut			1
20	71466.7	Olive			1
21	6911869	Screw			1
22	71507.8	Screw			1
23	6911988	Bracket			1
24	6911927	Dipstick			1

Fuel Injection Equipment

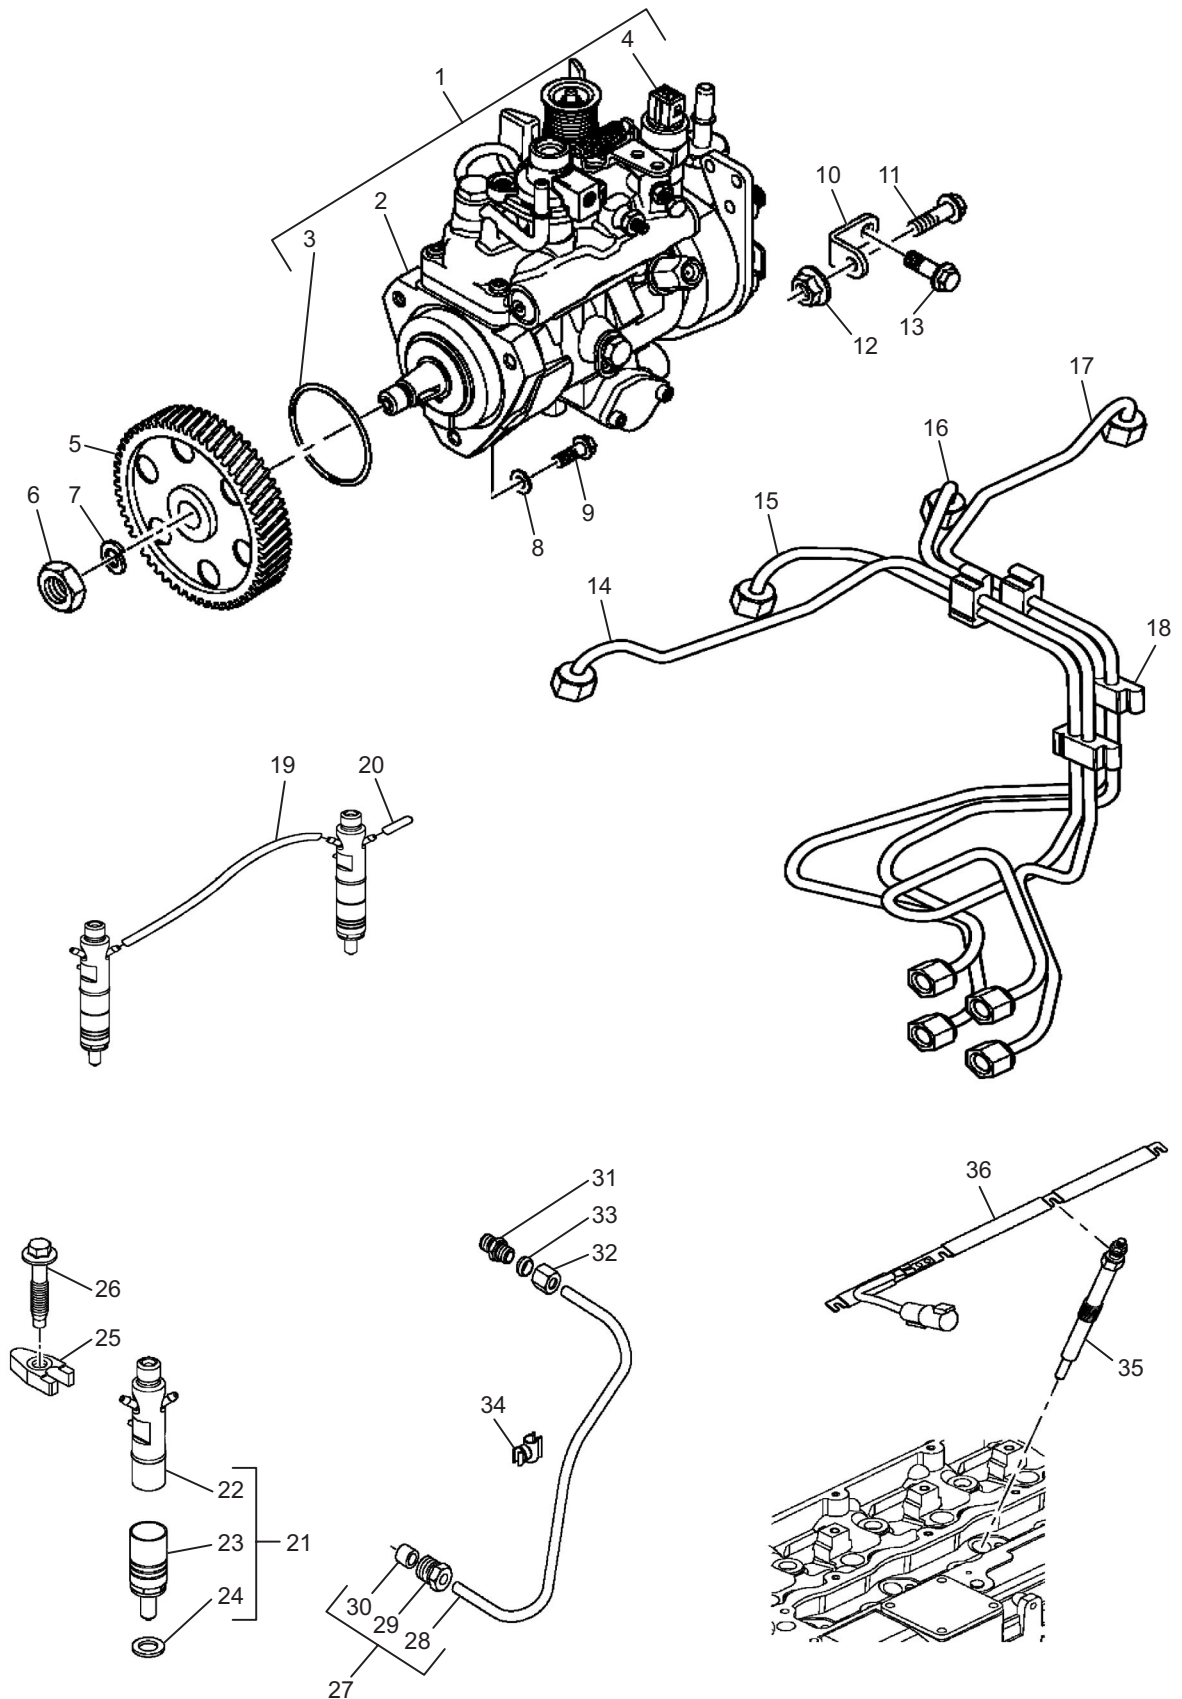


SPC006009

Fuel Injection Equipment

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6911898	Fuel injection pump	Pos. 1 to 4		1
2		Injection pump	Order Pos. 1		1
3	93191.5	Seal			1
4	97175.4	Solenoid			1
5	6911918	Gear			1
6	81046.5	Nut			1
7	81045.7	Washer			1
8	6911877	Washer			1
9	71338.8	Screw			3
10	6911966	Bracket			1
11	64878.2	Screw			1
12	71329.7	Nut			1
13	71348.7	Screw			1
14	6911951	Injection pipe	Cyl.: 1		1
15	6911952	Injection pipe	Cyl.: 2		1
16	6911953	Injection pipe	Cyl.: 3		1
17	6911954	Injection pipe	Cyl.: 4		1
18	71417.0	Clip			1
19	6911904	Hose			3
20	6912038	Cap			1
21	6911899	Atomiser assy	Pos. 22 to 24		4
22		Atomiser	Order Pos. 21		4
23	6911900	Nozzle			4
24	93207.9	Washer			4
25	6911989	Clamp			4
26	6911874	Screw			4
27	6912006	Pipe pump	Pos. 28 to 30		1
28		Pipe	Order Pos. 27		1
29	71426.1	Nut			1
30	64624.0	Nut			1
31	6911854	Union			1

Fuel Injection Equipment

Recurrence of previous drawing

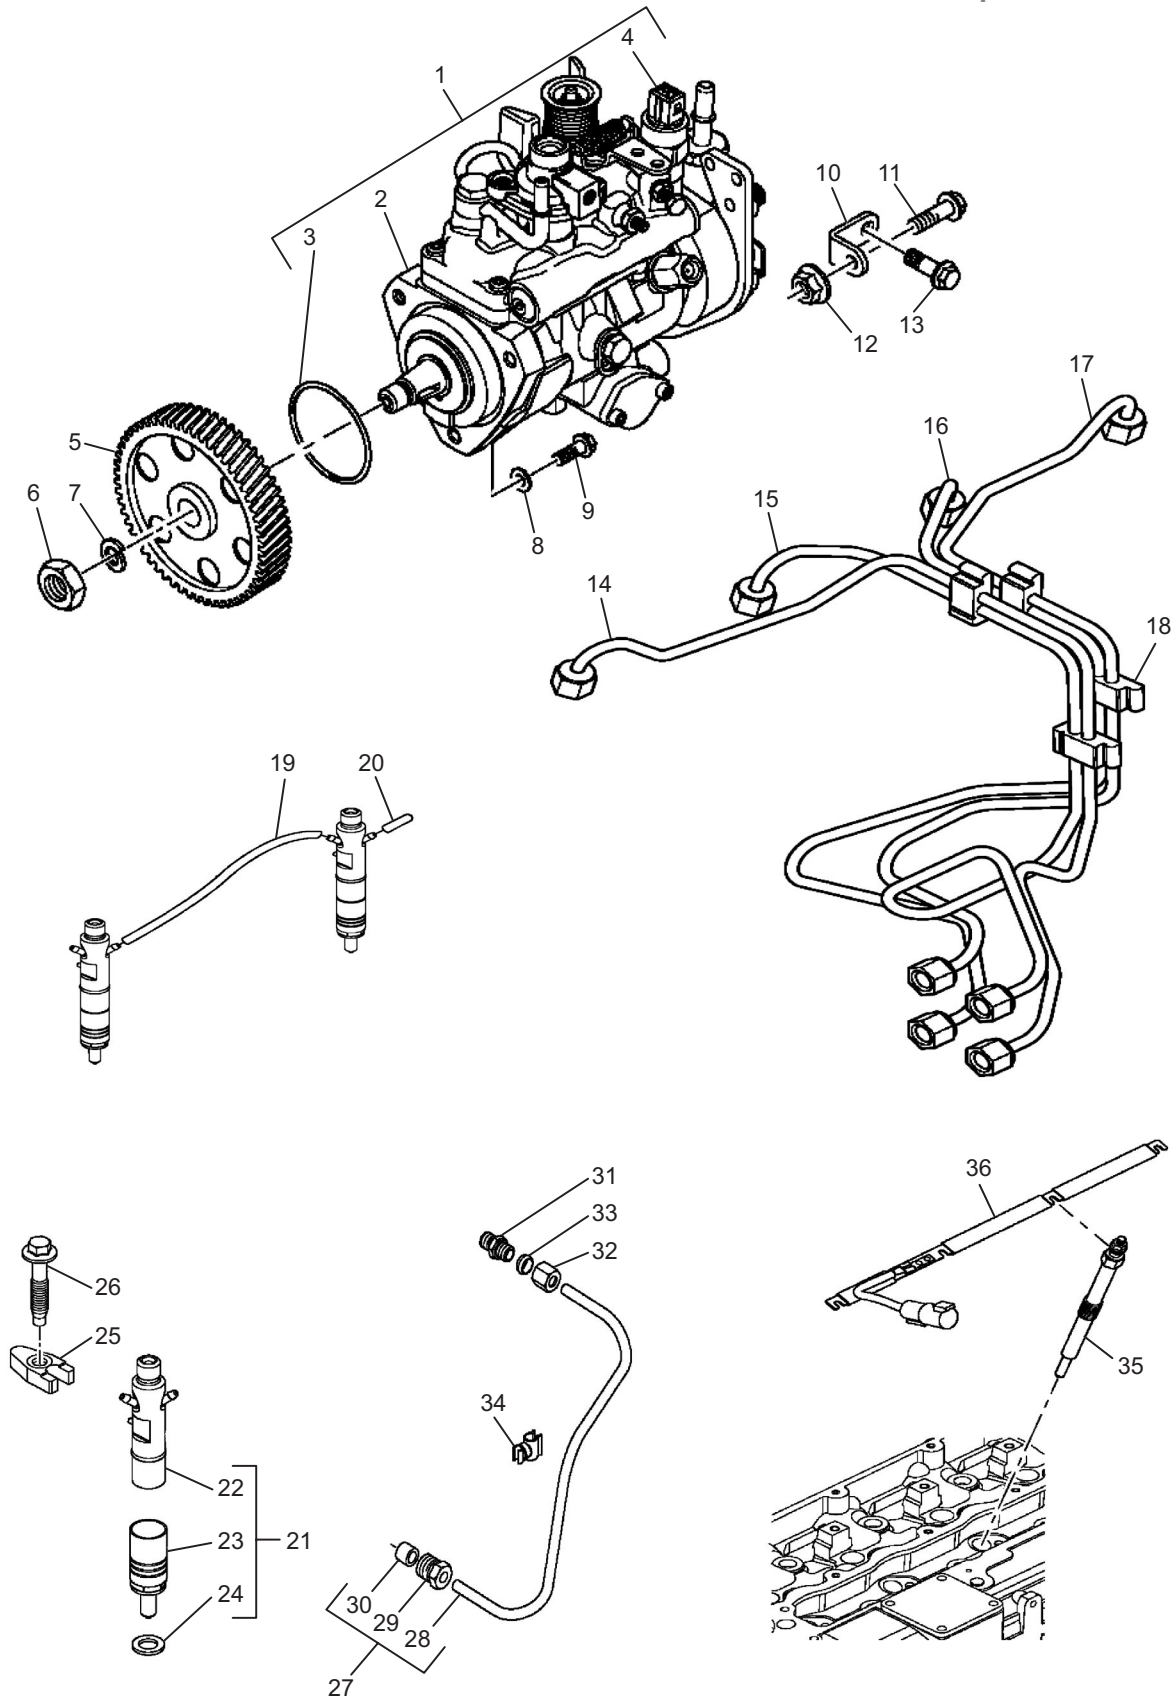


SPC006009

Fuel Injection Equipment

[illegible]

Fuel Feeding

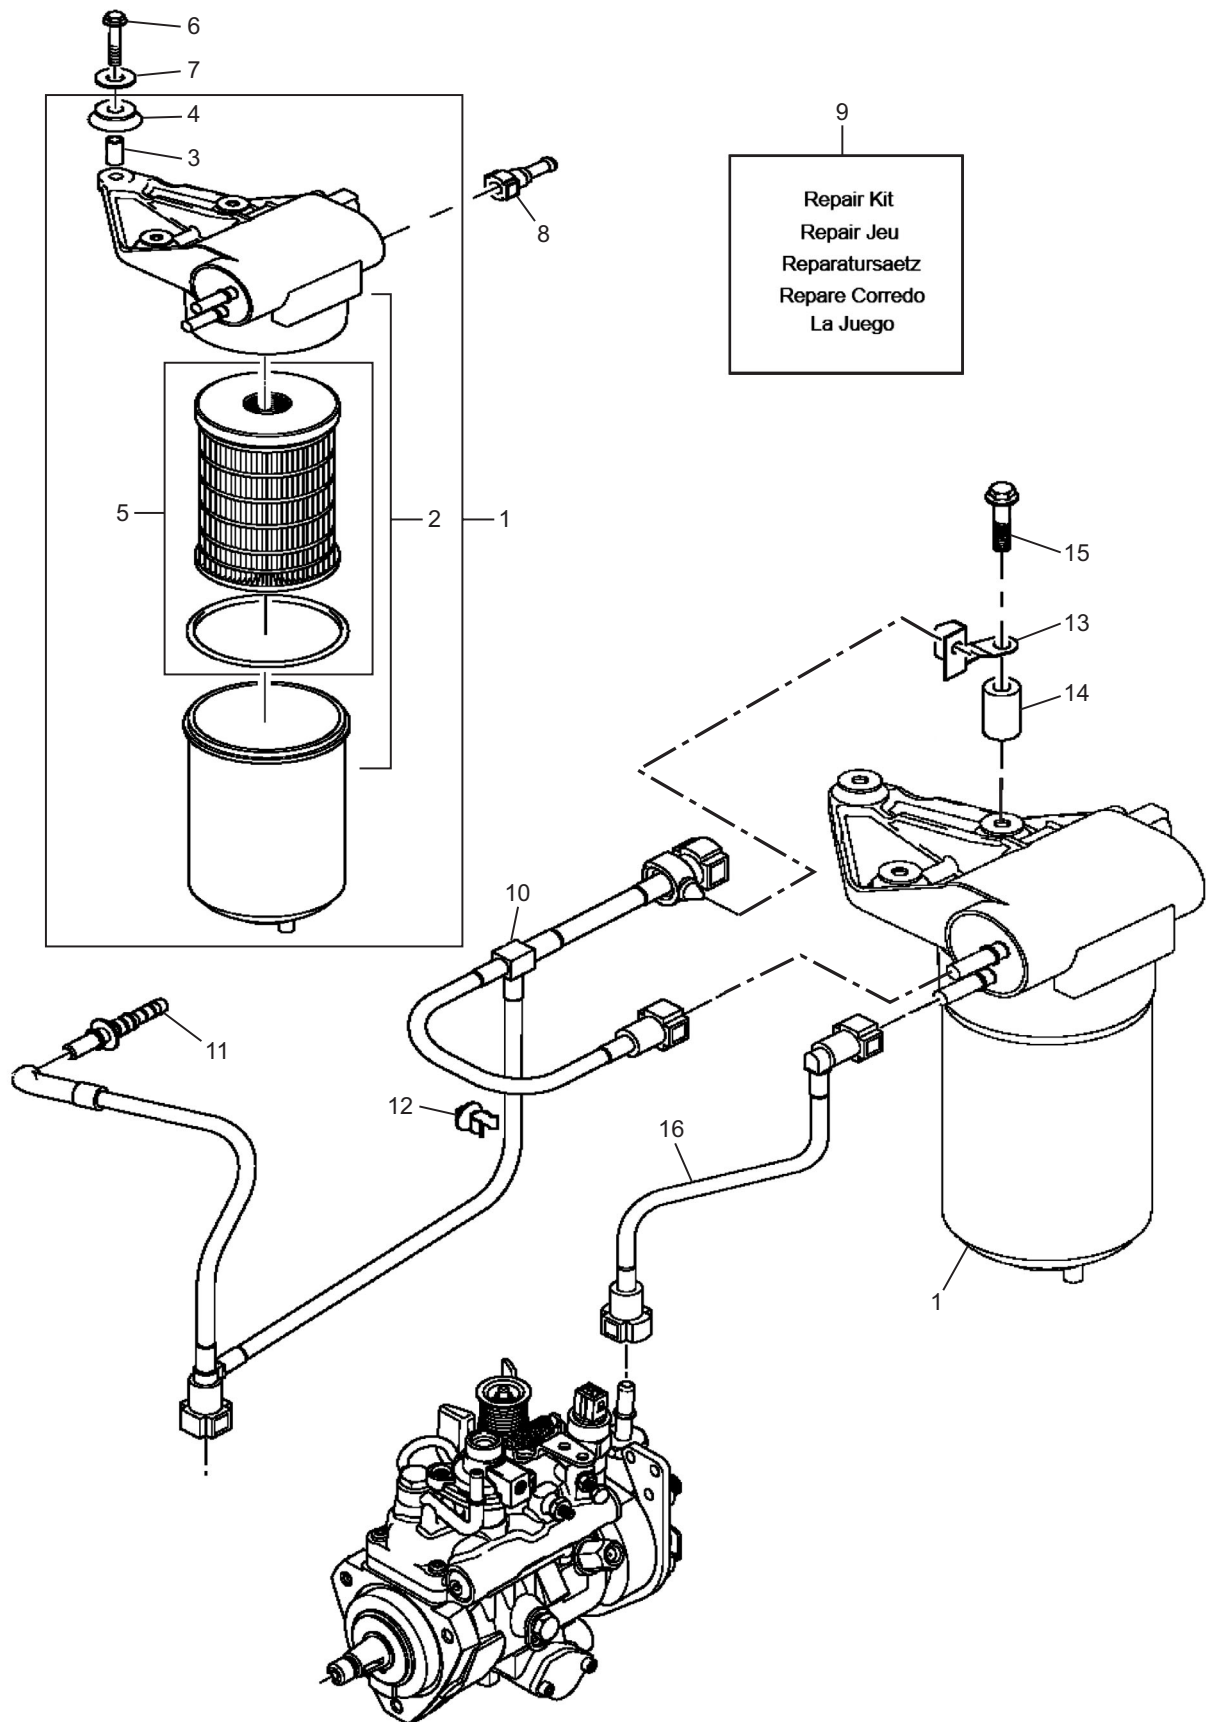


SPC006010

Fuel Feeding

[illegible]

Cylinder Head Cover

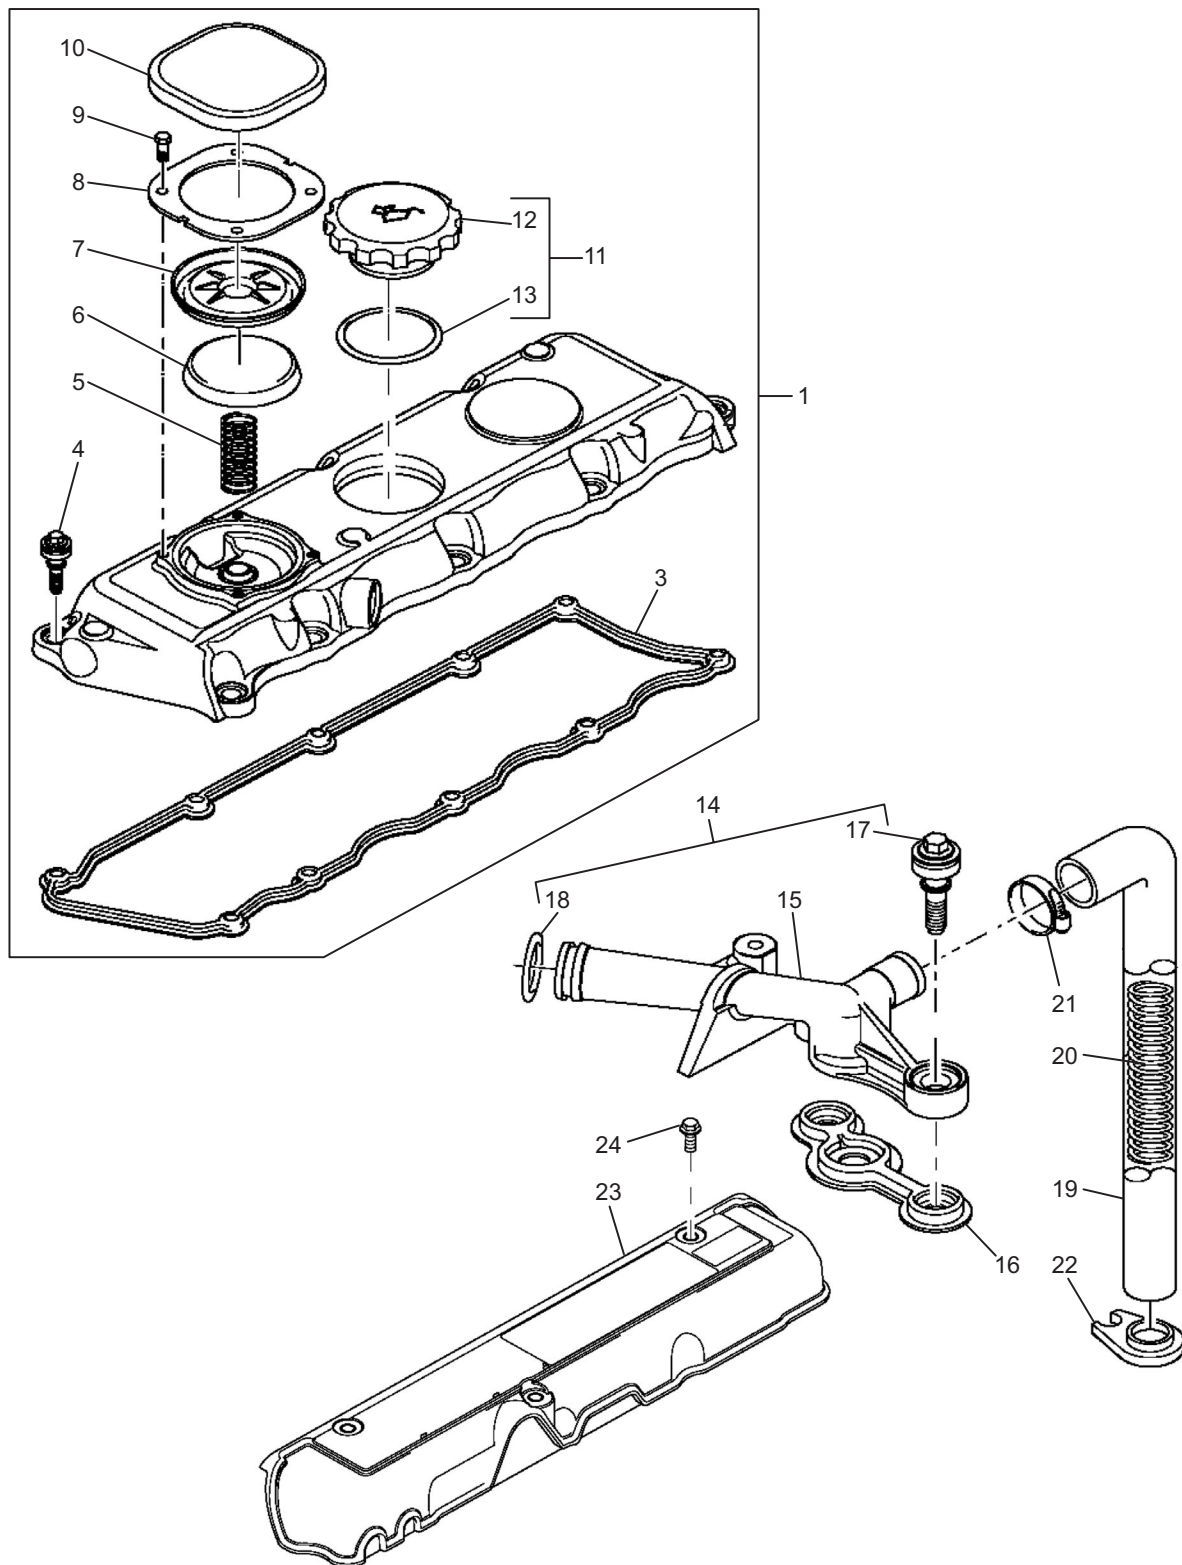


SPC006011

Cylinder Head Cover

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6912017	Head cover assy	Pos. 2 to 13		1
2		Cover	Order Pos. 1		1
3	6911968	Seal			1
4	6911867	Screw			10
5	6911926	Spring			16
6	6911994	Cap			1
7	6911997	Diaphragm			18
8	6911960	Cover plate			1
9	6911866	Screw			1
10	6911995	Cap			1
11	81026.7	Plug	Pos. 12 + 13		1
12		Cap	Order Pos. 11		1
13	6911879	O-ring			1
14	6912014	Pipe assy	Pos. 15 to 18		1
15		Pipe	Order Pos. 14		1
16	6911982	Seal			1
17	6911867	Screw			2
18	6911878	O-ring			1
19	6911950	Hose			1
20	93274.9	Spring			1
21	93273.1	Collar			1
22	71366.9	Bracket			1
23	6911996	Cover			1
24	71399.0	Screw			3

Oil Cooler and Filter

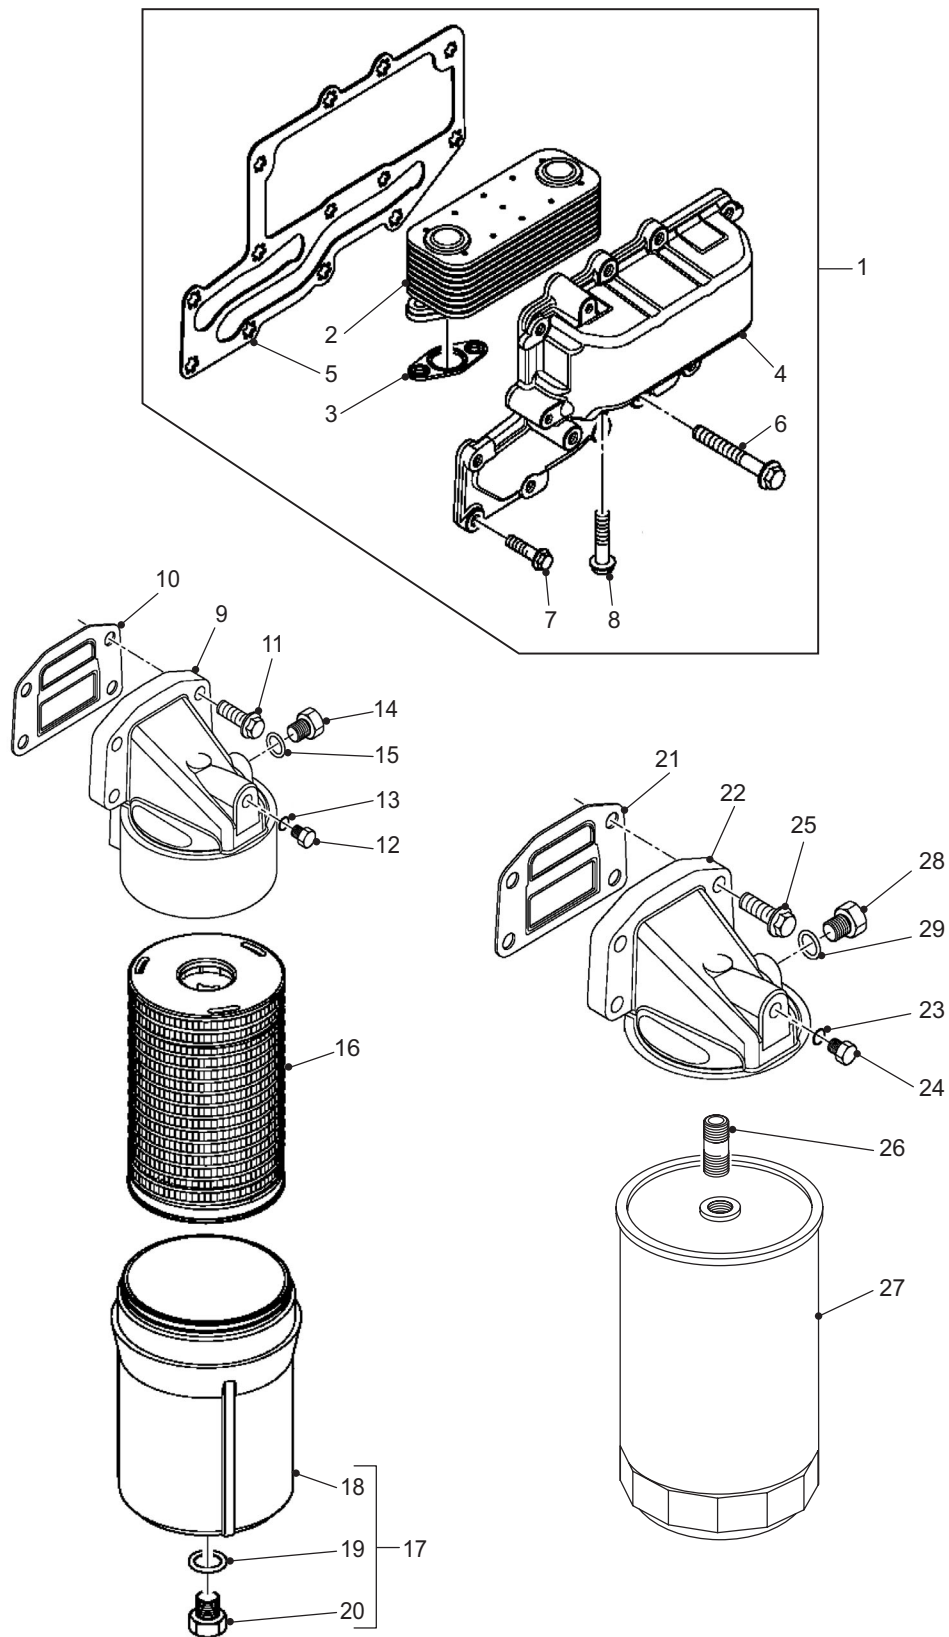


SPC006012

Oil Cooler and Filter

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6912015	Oil cooler	Pos. 2 to 8		1
2	6911896	Cooler			1
3	6911977	Gasket, oil cooler			2
4		Housing	Order Pos. 1		1
5	6911976	Gasket, oil cooler housing			1
6	71338.8	Screw			3
7	71338.8	Screw			10
8	64960.8	Screw			4
9	6912013	Filter head		3632 11038/ & 3632 11061/	1
10	6911983	Gasket		3632 11038/ & 3632 11061/	1
11	71381.8	Screw		3632 11038/ & 3632 11061/	4
12	6911940	Plug, oil filter		3632 11038/ & 3632 11061/	1
13	6911883	O-ring, oil filter		3632 11038/ & 3632 11061/	1
14	6911938	Plug		3632 11038/ & 3632 11061/	1
15	6911880	O-ring		3632 11038/ & 3632 11061/	1
16	6911905	Filter element		3632 11038/ & 3632 11061/	1
17	6911906	Oil filter canister	Pos. 18 to 20	3632 11038/ & 3632 11061/	1
18		Canister	Order Pos. 17	3632 11038/ & 3632 11061/	1
19	6911884	O-ring, oil filter		3632 11038/ & 3632 11061/	1
20	6911941	Plug, oil filter		3632 11038/ & 3632 11061/	1
21	6911983	Gasket		/3632 11039 & /3632 11062	1
22	6911912	Head filter	Pos. 22 + 26	/3632 11039 & /3632 11062	1
23	6911883	O-ring, oil filter		/3632 11039 & /3632 11062	1
24	6911940	Plug, oil filter		/3632 11039 & /3632 11062	1
25	71381.8	Screw		/3632 11039 & /3632 11062	4
26	81088.7	Connection		/3632 11039 & /3632 11062	1
27	36925.6	Engine Oil Filter Element		/3632 11039 & /3632 11062	1
28	6911938	Plug		/3632 11039 & /3632 11062	1
29	6911880	O-ring		/3632 11039 & /3632 11062	1

Water Pump and Thermostat

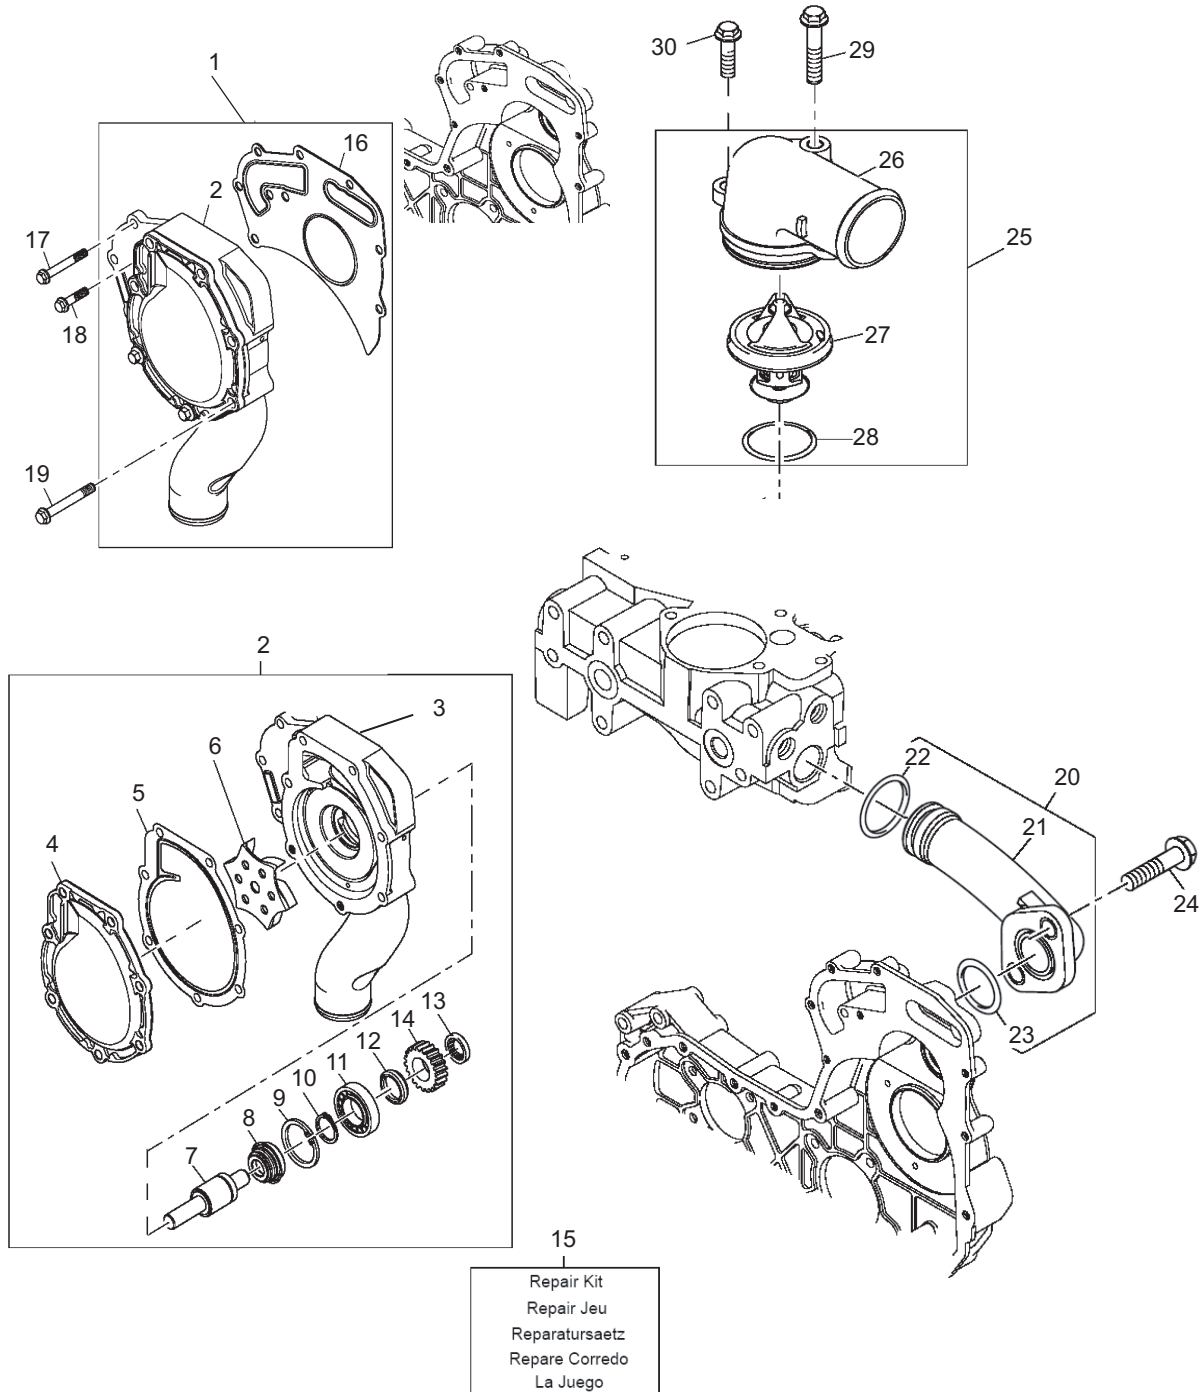


SPC006013

Water Pump and Thermostat

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6912024	Water pump kit	Pos. 2 to 16		1
2		Water pump	Order Pos. 1		1
3		Body	Order Pos. 1		1
4		Cover	Order Pos. 1		1
5		Gasket	Order Pos. 1		1
6		Impeller	Order Pos. 1		1
7		Shaft	Order Pos. 1		1
8		Seal	Order Pos. 1		1
9		Snap ring	Order Pos. 1		1
10		Snap ring	Order Pos. 1		1
11		Bearing	Order Pos. 1		1
12		Oil seal	Order Pos. 1		1
13		Bearing	Order Pos. 1		1
14	6911850	Gear			1
15	6912025	Repair kit			1
16	6911974	Pump gasket			1
17	6911873	Screw			1
18	71439.4	Screw			2
19	93280.6	Screw			5
20	6912011	Pipe assy	Pos. 21 to 23		1
21		Pipe	Order Pos. 20		1
22	6911886	O-ring			1
23	6911885	O-ring			1
24	64878.2	Screw			2
25	6912012	Water inlet assy	Pos. 26 to 28		1
26		Connector	Order Pos. 25		1
27	6911895	Thermostat			1
28	6911882	O-ring, thermostat			1
29	93280.6	Screw			1
30	71338.8	Screw			1

Turbocharger

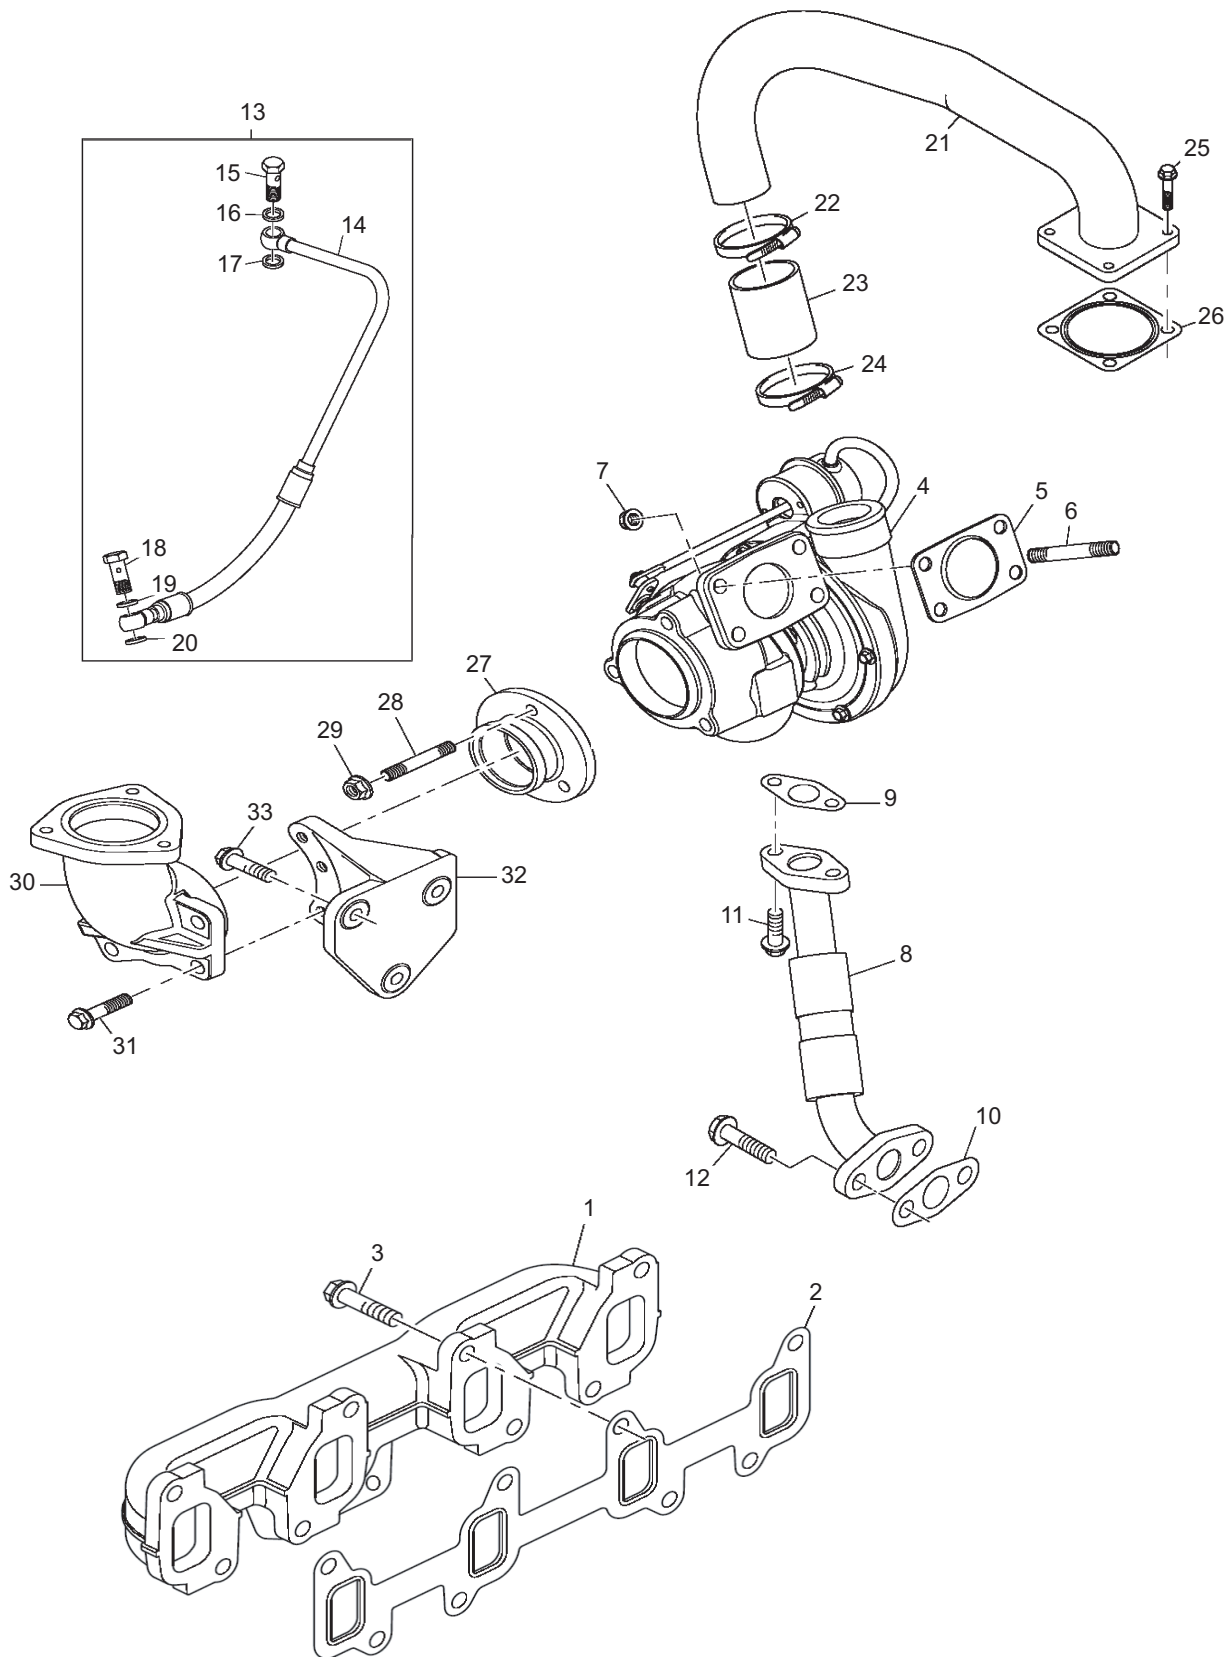


SPC006014

Turbocharger

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6911993	Manifold			1
2	6911973	Gasket			1
3	93408.3	Screw			1
4	6911909	Turbocharger			1
5	6911978	Gasket			1
6	6911868	Stud			4
7	71490.7	Nut			4
8	6911957	Pipe			1
9	6911979	Gasket			1
10	6911980	Gasket			1
11	93321.8	Screw			2
12	64878.2	Screw			2
13	6912008	Pipe	Pos. 14 to 20		1
14		Pipe	Order Pos. 13		1
15	6911935	Banjo bolt			1
16	6911863	Washer			1
17	6911863	Washer			1
18	6911935	Banjo bolt			1
19	6911863	Washer			1
20	6911863	Washer			1
21	6911955	Pipe			1
22	6911889	Collar			1
23	6911949	Hose			1
24	6911889	Collar			1
25	71381.8	Screw			4
26	6911981	Gasket			1
27	6911948	Adaptor			1
28	6911868	Stud			3
29	71490.7	Nut			3
30	6911992	Exhaust elbow			1
31	71346.1	Screw			3

Turbocharger

Recurrence of previous drawing

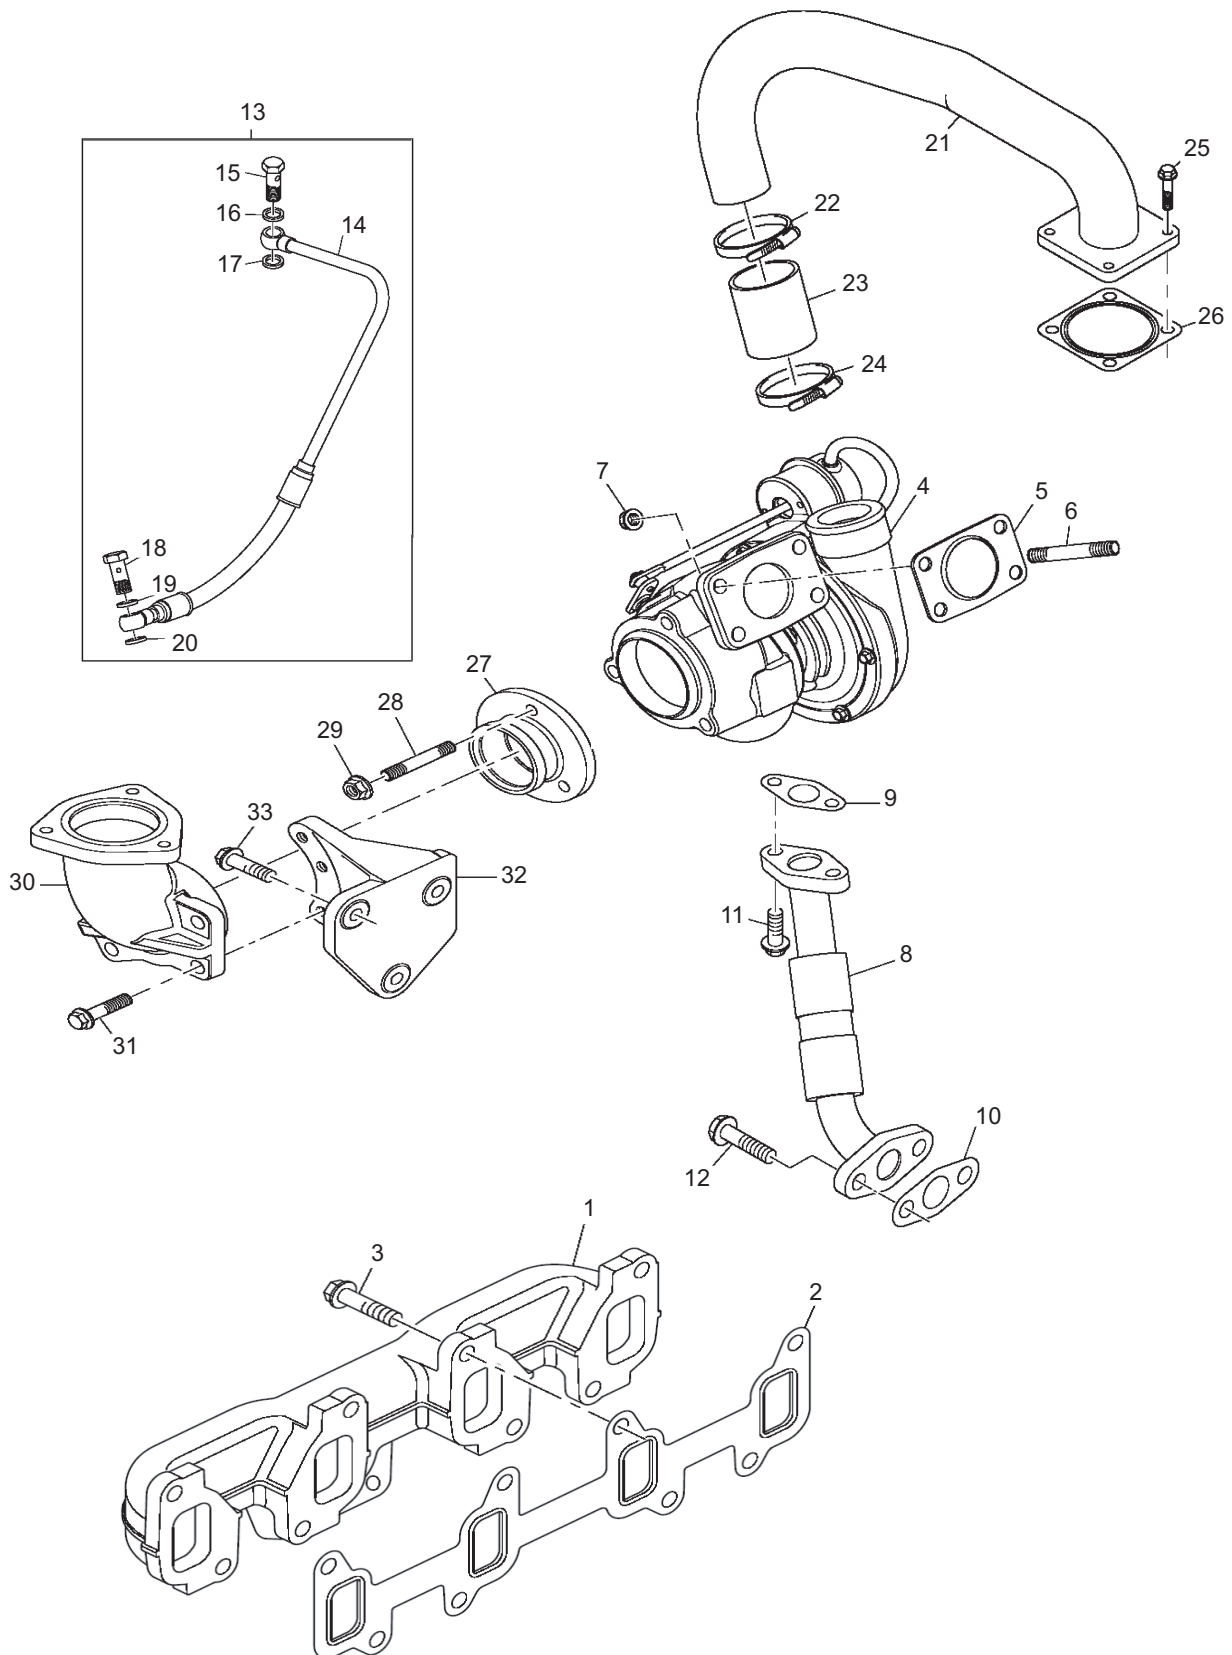


SPC006014

Turbocharger

[illegible]

Alternator


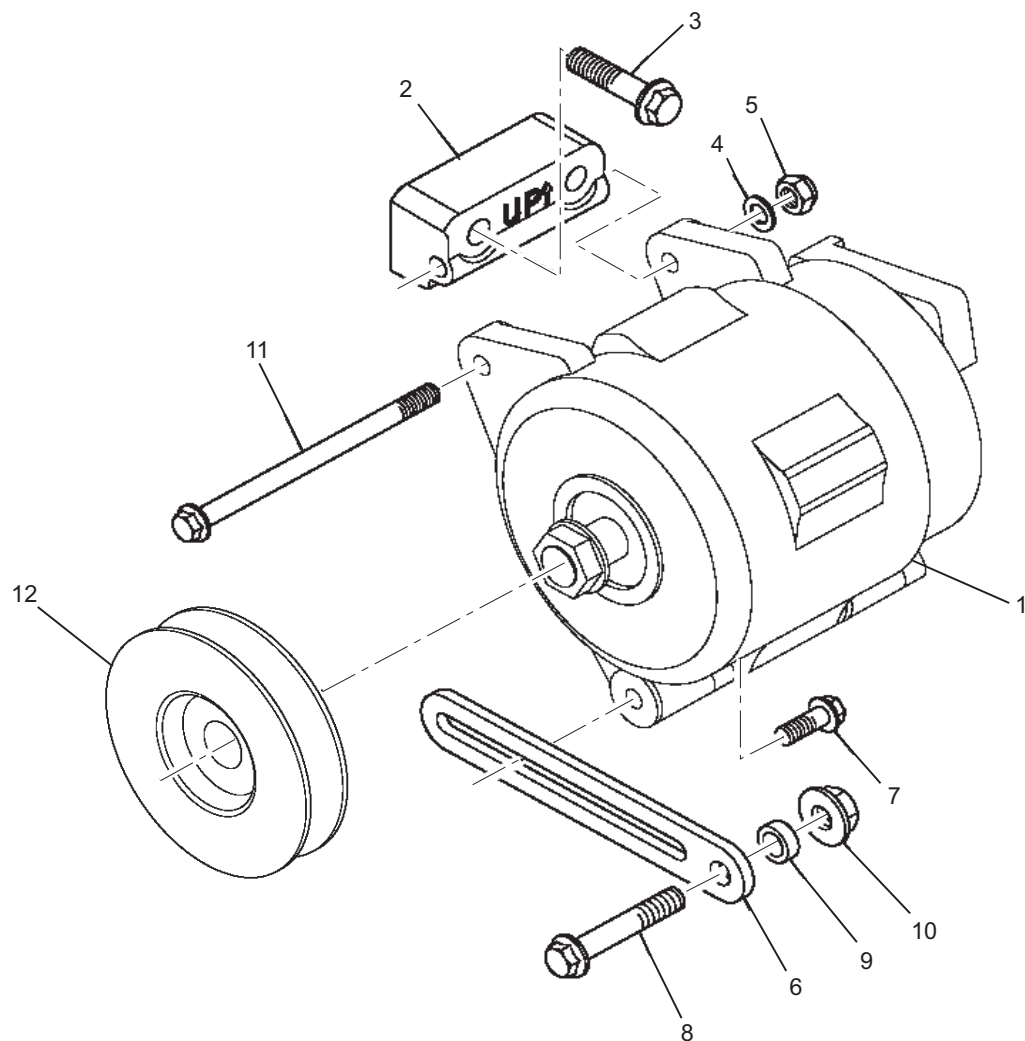


SPC006015

Alternator

[illegible]

Flywheel Housing and Starter

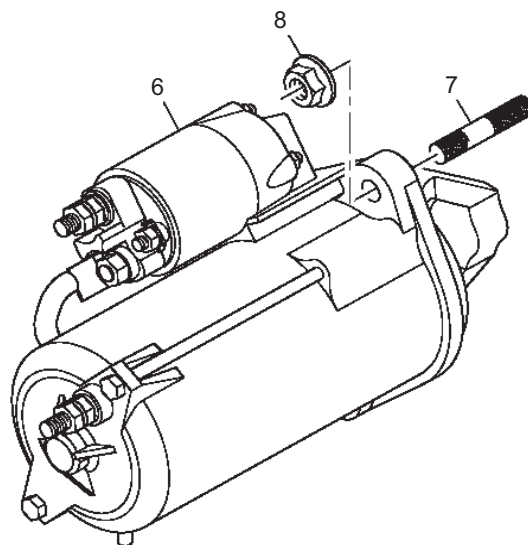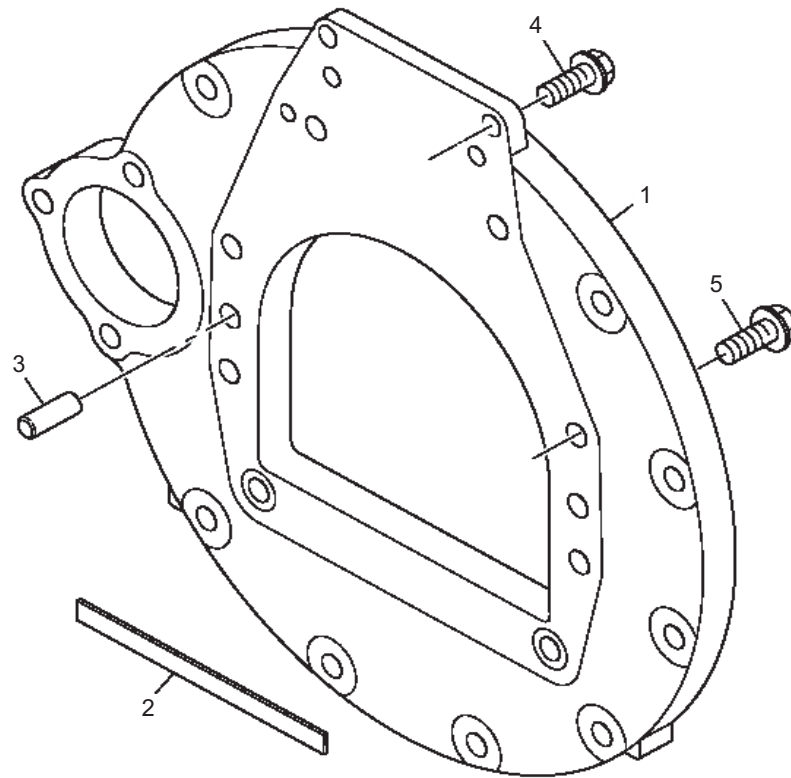

SPC006016

Flywheel Housing and Starter

[illegible]

Engine Gaskets Sets

1

Top Service Kit

2


Bottom Joints & Gasket Kit

SPC006017

Engine Gaskets Sets

[illegible]

Air Conditioning Installation

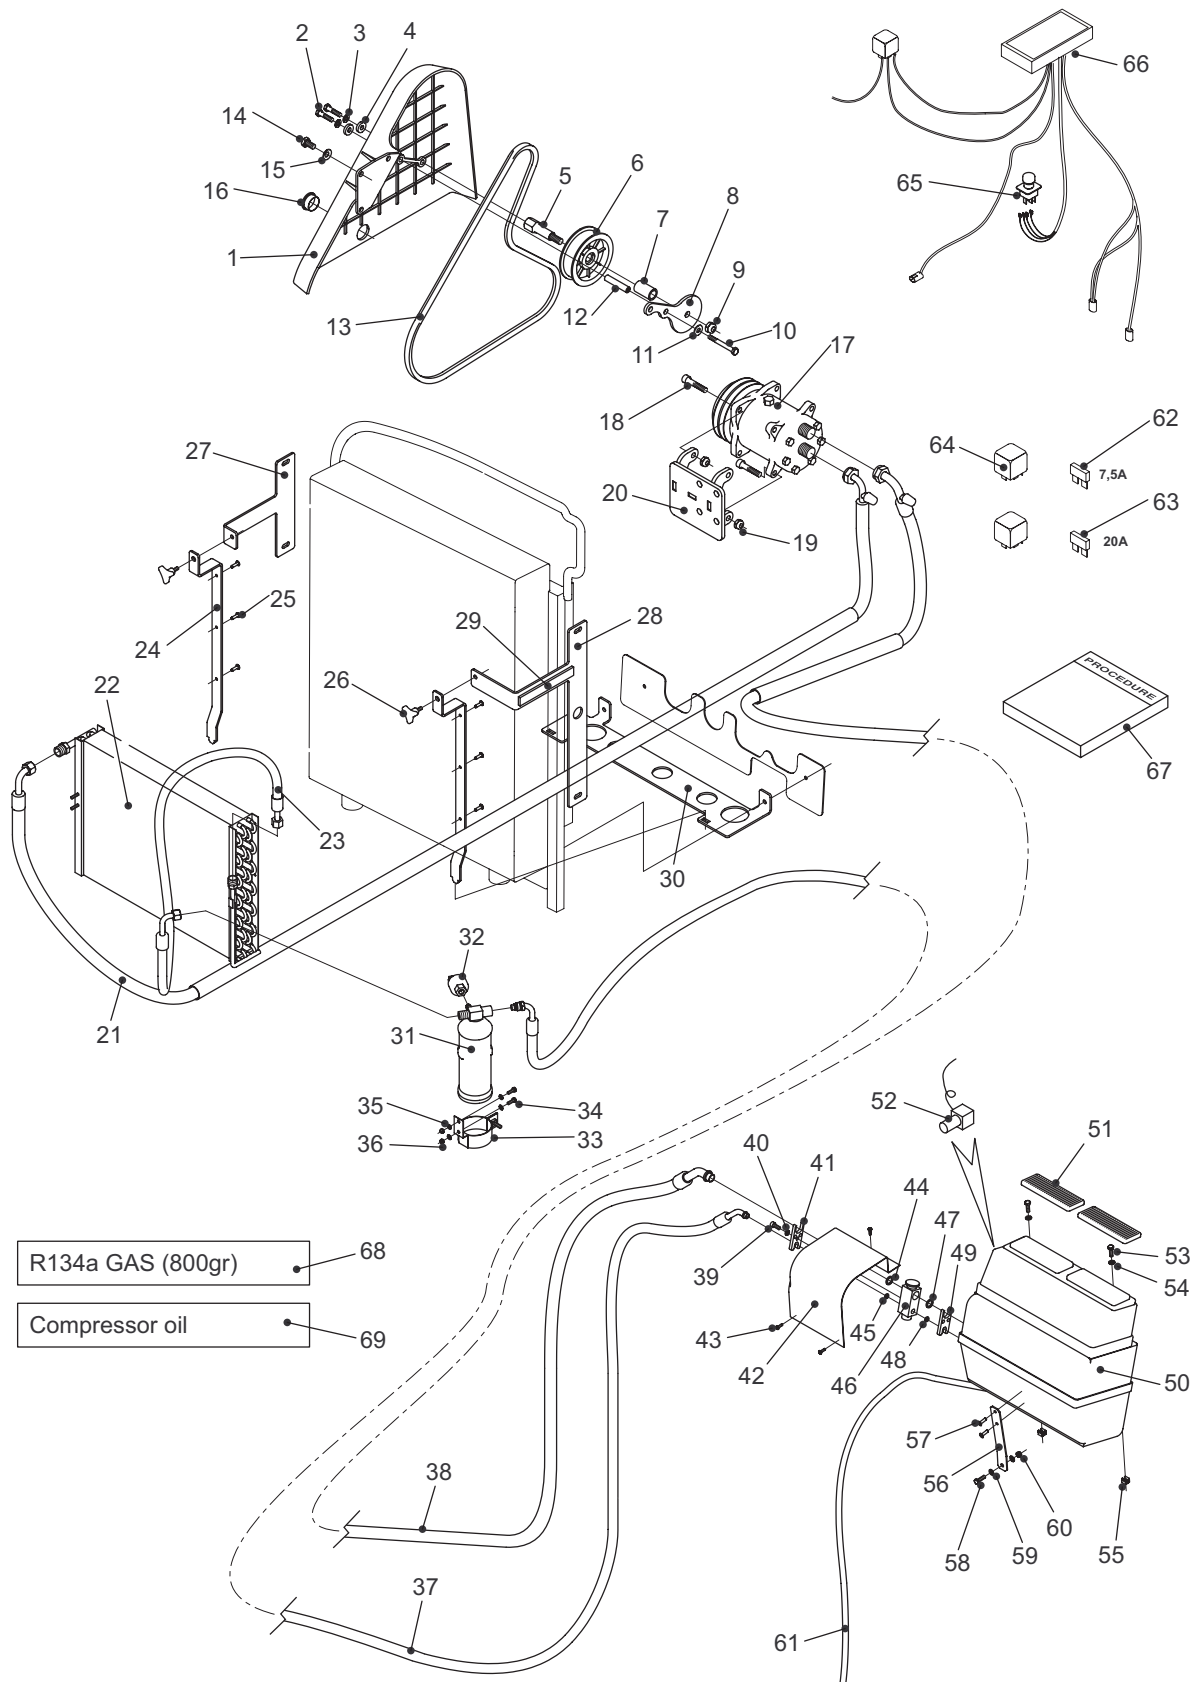


SPC007001

Air Conditioning Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6915517	Belt protector	Was 6914411		1
2	01578.4	Screw			2
3	01697.2	Washer			2
4	97610.0	Washer			2
5	6908181	Spindle			1
6	90531.5	Roller			1
7	6914328	Spacer			1
8	6908180	Support			1
9	000345-96E	Nut			1
10	01522.2	Screw			1
11	000350-20Q	Washer			1
12	100345-09A	Nut			1
13	90545.5	Alternator Belt			1
14	01605.5	Screw			3
15	000350-03W	Washer			3
16	74335.1	Plug			1
17	89664.9	Compressor			1
18	54009.6	Screw			4
19	100345-09A	Nut			4
20	6909391	Support			1
21	89647.2	Hose			1
22	81439.2	Condenser			1
23	88844.6	Hose			1
24	6911207	Support			2
25	66679.2	Rivet			6
26	85171.7	Thumb Screw			2
27	6911209	Support			1
28	6911210	Support			1
29	6913148	Adhesive sponge			1
30	6911201	Support			1
31	89643.1	Dryer			1

Air Conditioning Installation

Recurrence of previous drawing

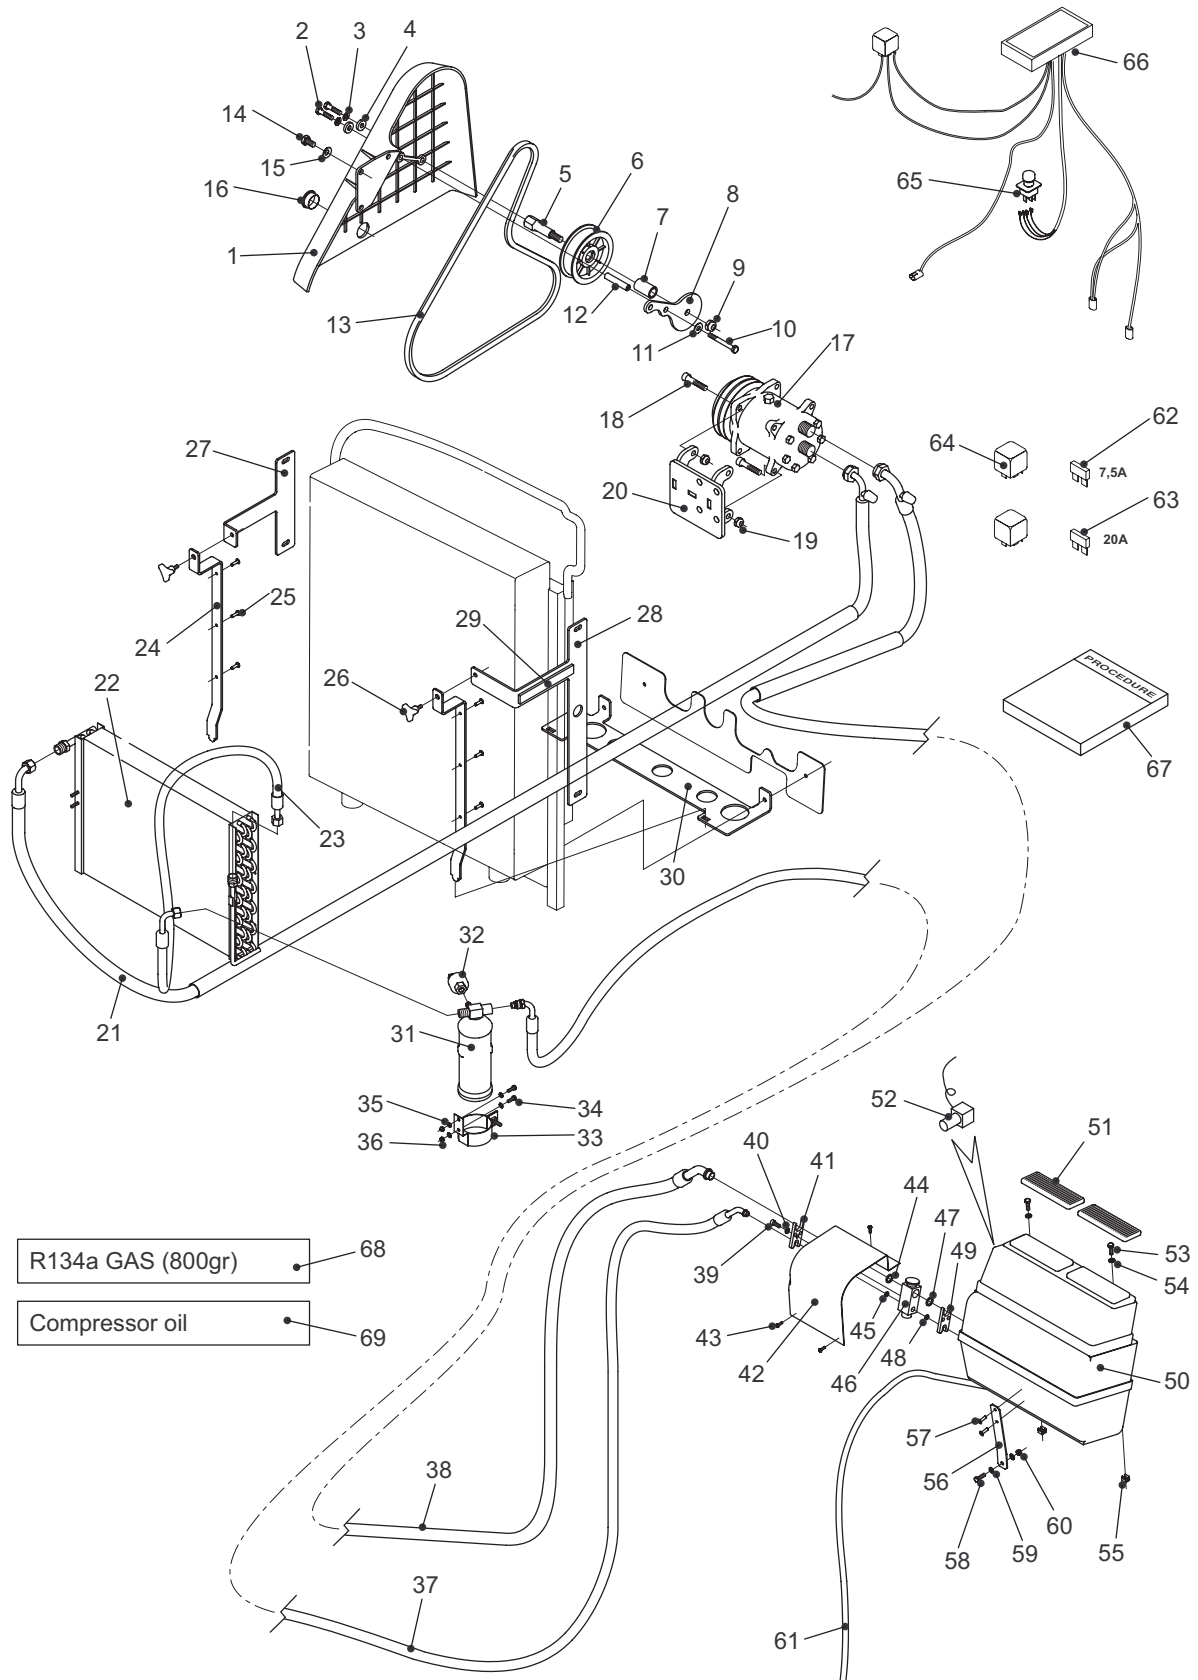


SPC007001

Air Conditioning Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
32	89642.3	Switch			1
33	89641.5	Bracket			1
34	01478.7	Screw			2
35	01695.6	Washer			4
36	100345-05V	Nut			2
37	89649.8	Hose			1
38	89648.0	Hose			1
39	15354.4	Screw			1
40	13416.3	Washer			1
41	88826.3	Plate			1
42	88827.1	Protector			1
43	6910951	Screw			3
44	98071.4	O-ring			1
45	98068.0	O-ring			1
46	97358.6	Valve			1
47	98070.6	O-ring			1
48	98069.8	O-ring			1
49	97359.4	Plate			1
50	96082.3	Evaporator			1
51	97265.3	Grill			2
52	97432.9	Thermostat			1
53	01591.7	Screw			2
54	01696.4	Washer			2
55	71921.1	Nut			2
56	88830.5	Plate			1
57	66679.2	Rivet			2
58	01591.7	Screw			1
59	01696.4	Washer			1
60	100345-06W	Nut			1
61	88848.7	Hose			1
62	57792.4	Fuse	7,5 A		1

Air Conditioning Installation

Recurrence of previous drawing

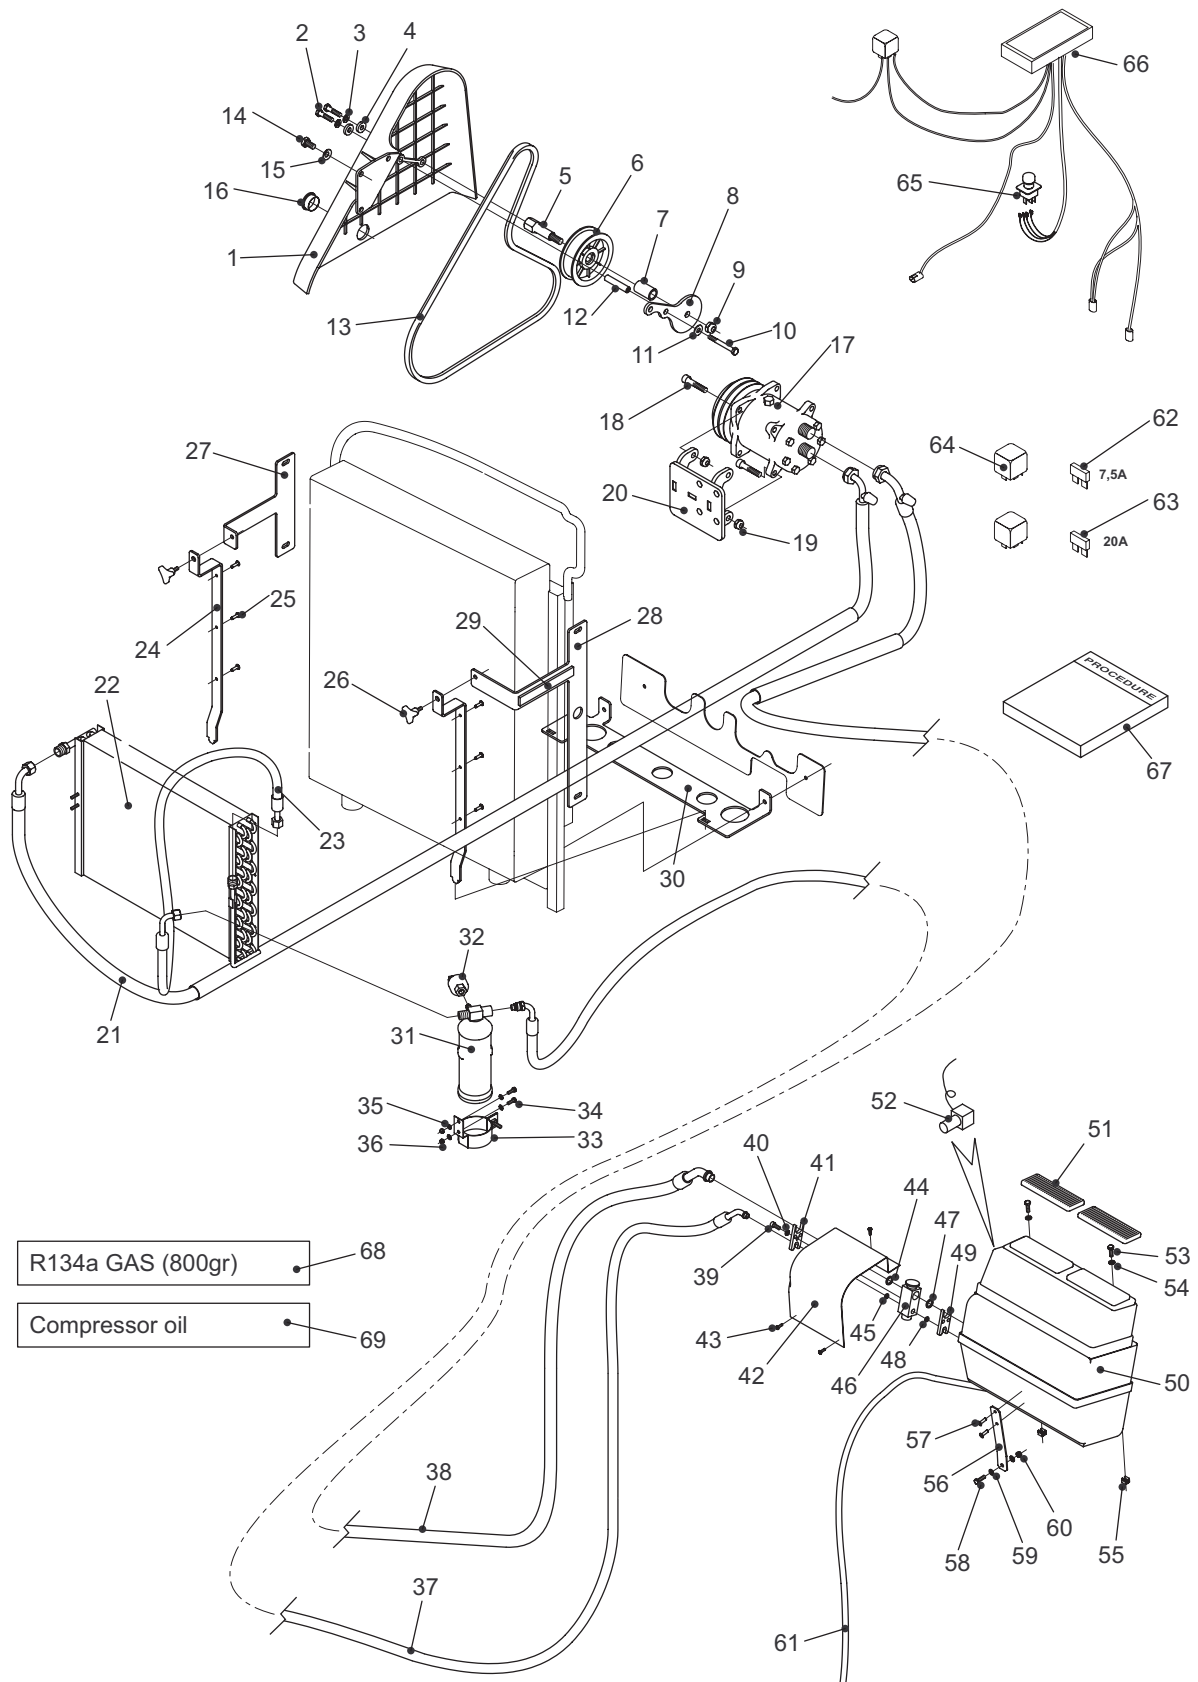


SPC007001

Air Conditioning Installation

[illegible]

DUNLOP 400/80-R24 153B Wheels T40140

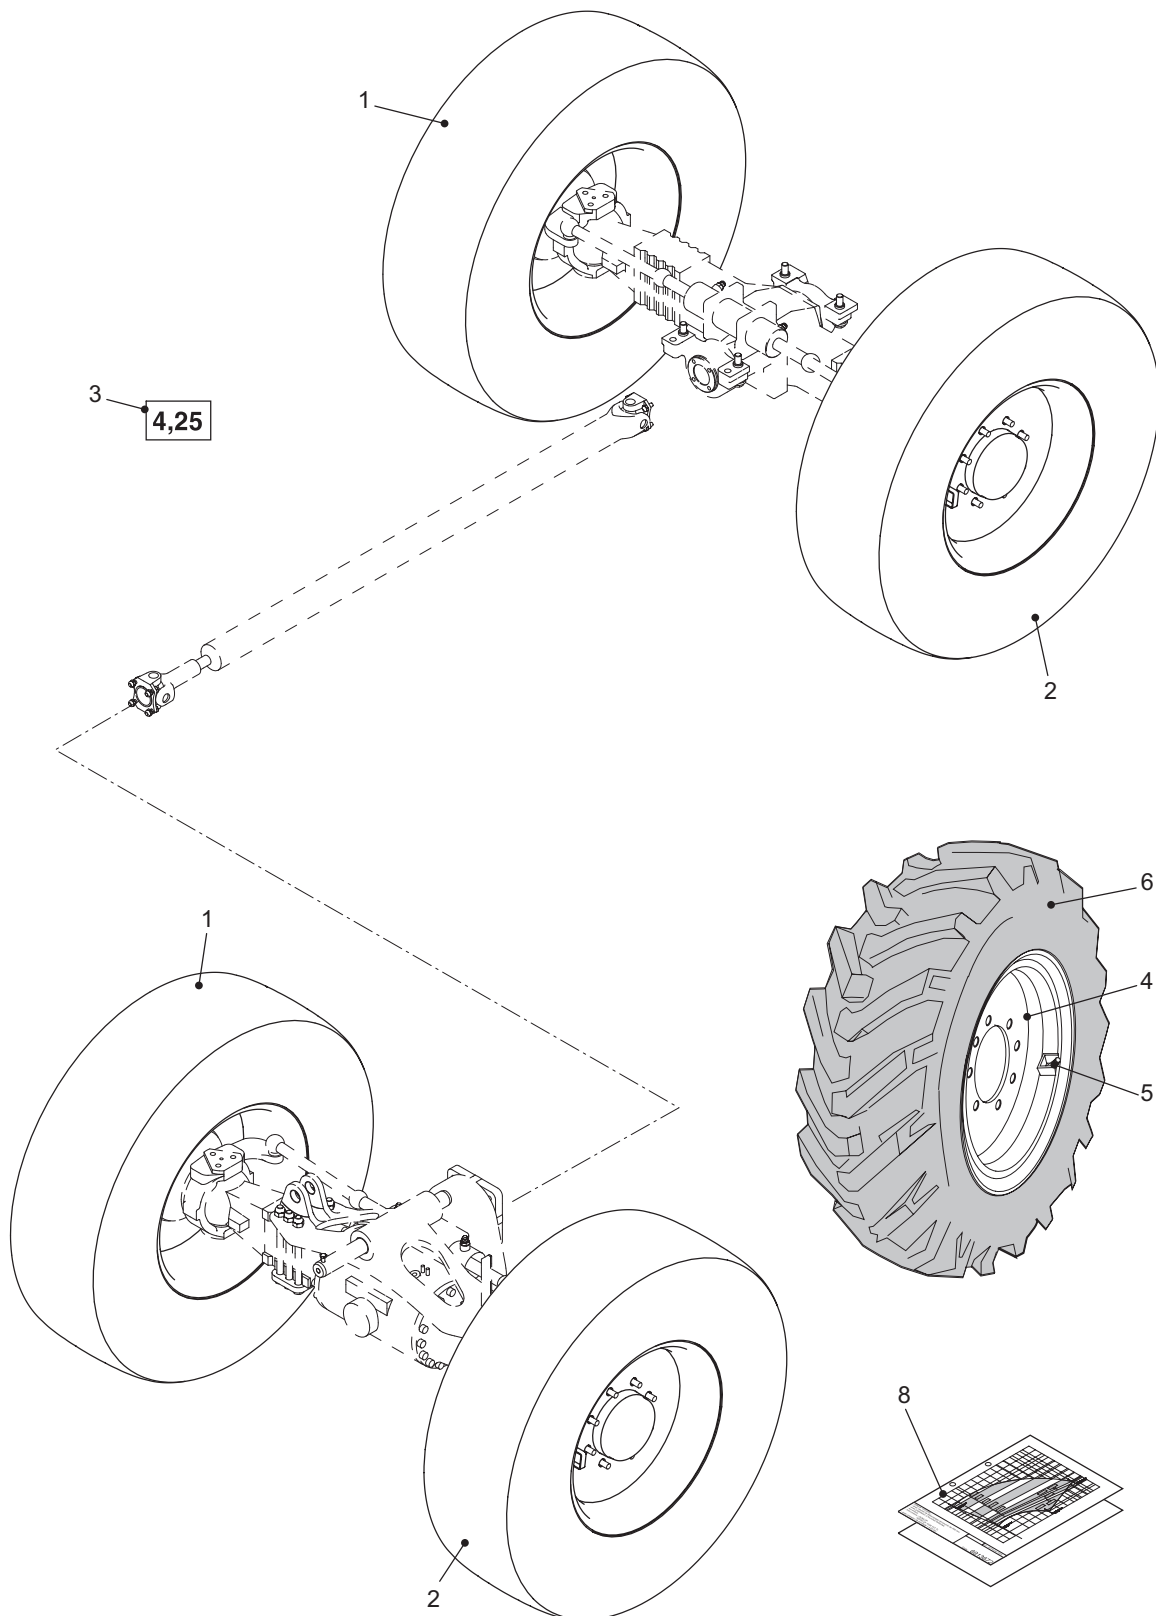


SPC007002

DUNLOP 400/80-R24 153B Wheels

[illegible]

DUNLOP 400/80-R24 156B Wheels T40140 & T40170

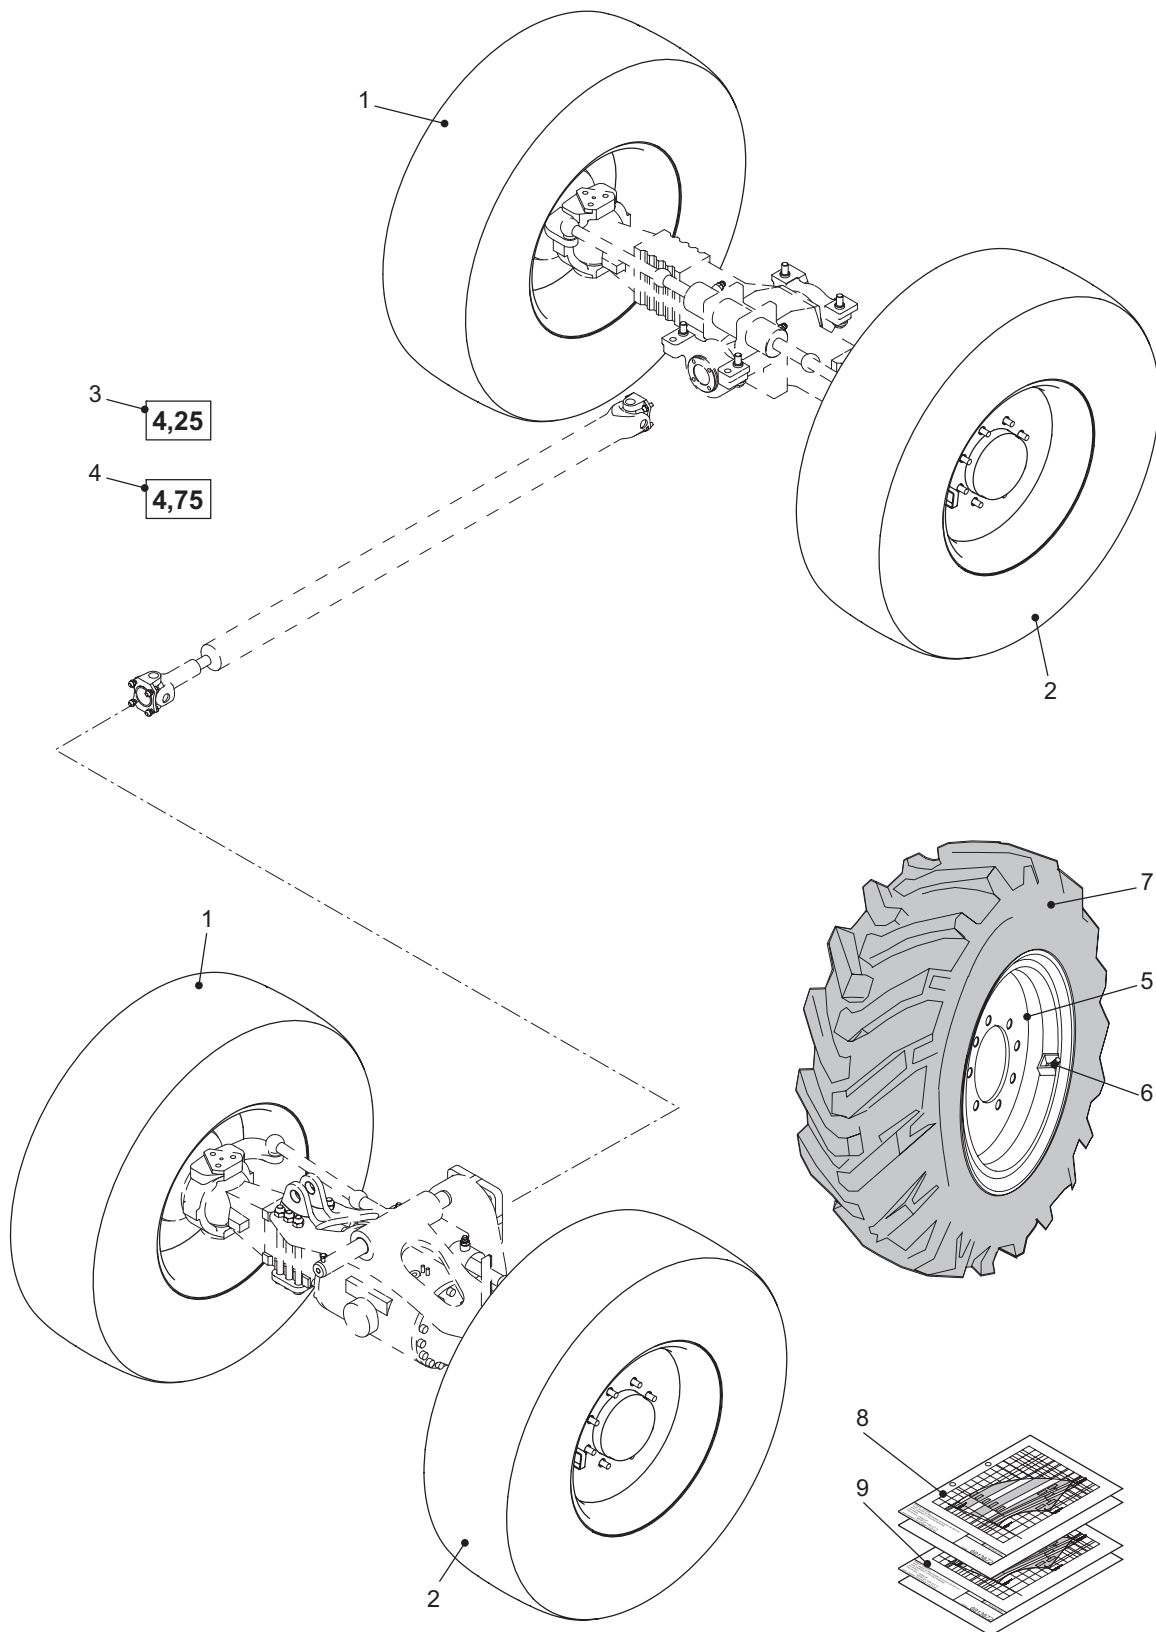


SPC007003

DUNLOP 400/80-R24 156B Wheels

[illegible]

DUNLOP 405/70-R20 SPT9 Wheels

T40140

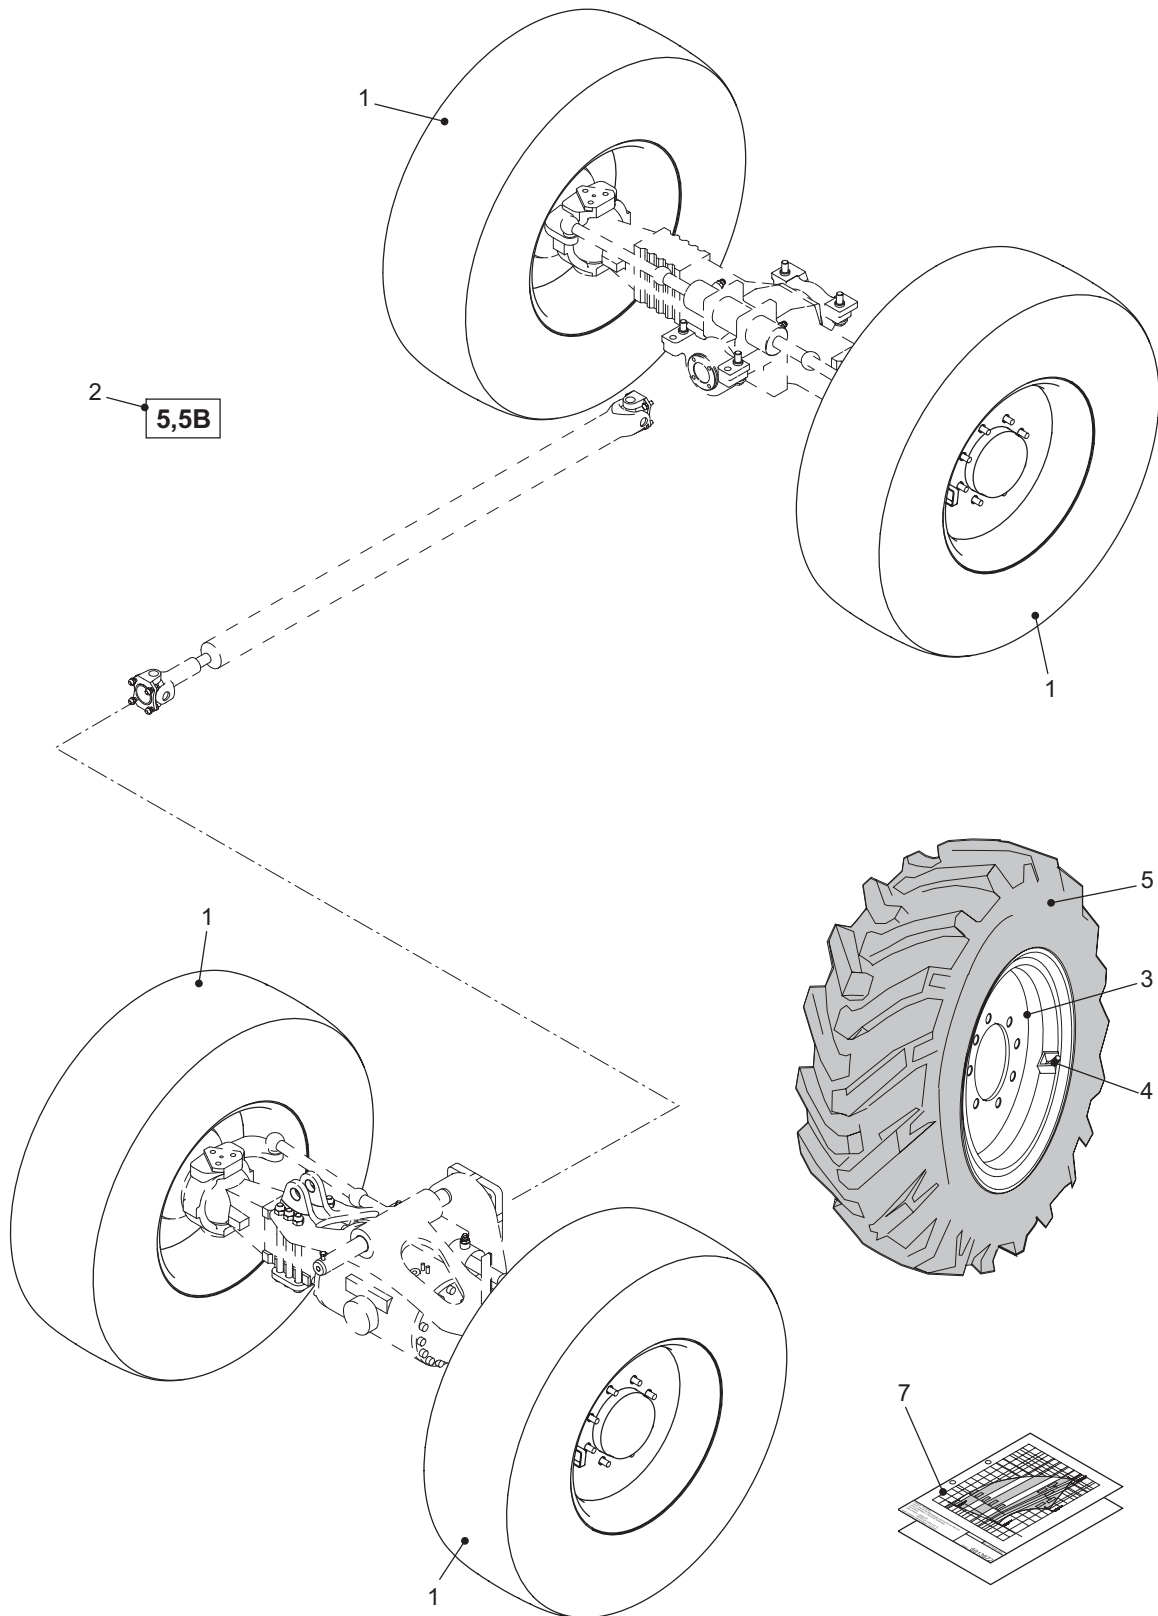


SPC007004

DUNLOP 405/70-R20 SPT9 Wheels
T40140

[illegible]

Mudguard 20" T40140

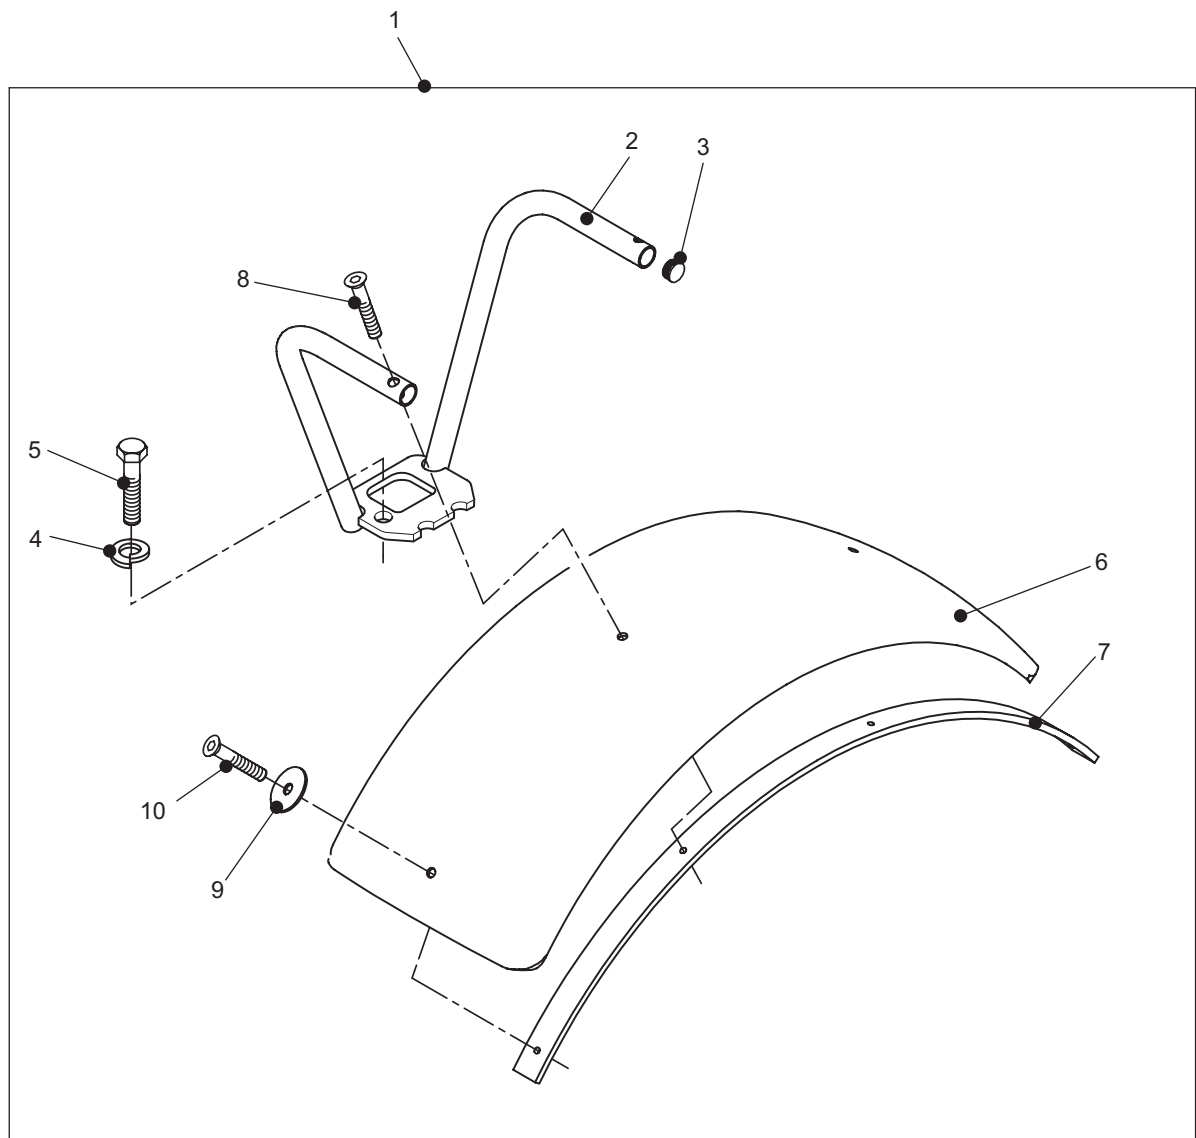


SPC007005

Mudguard 20"

T40140

[illegible]

Mudguard 24"

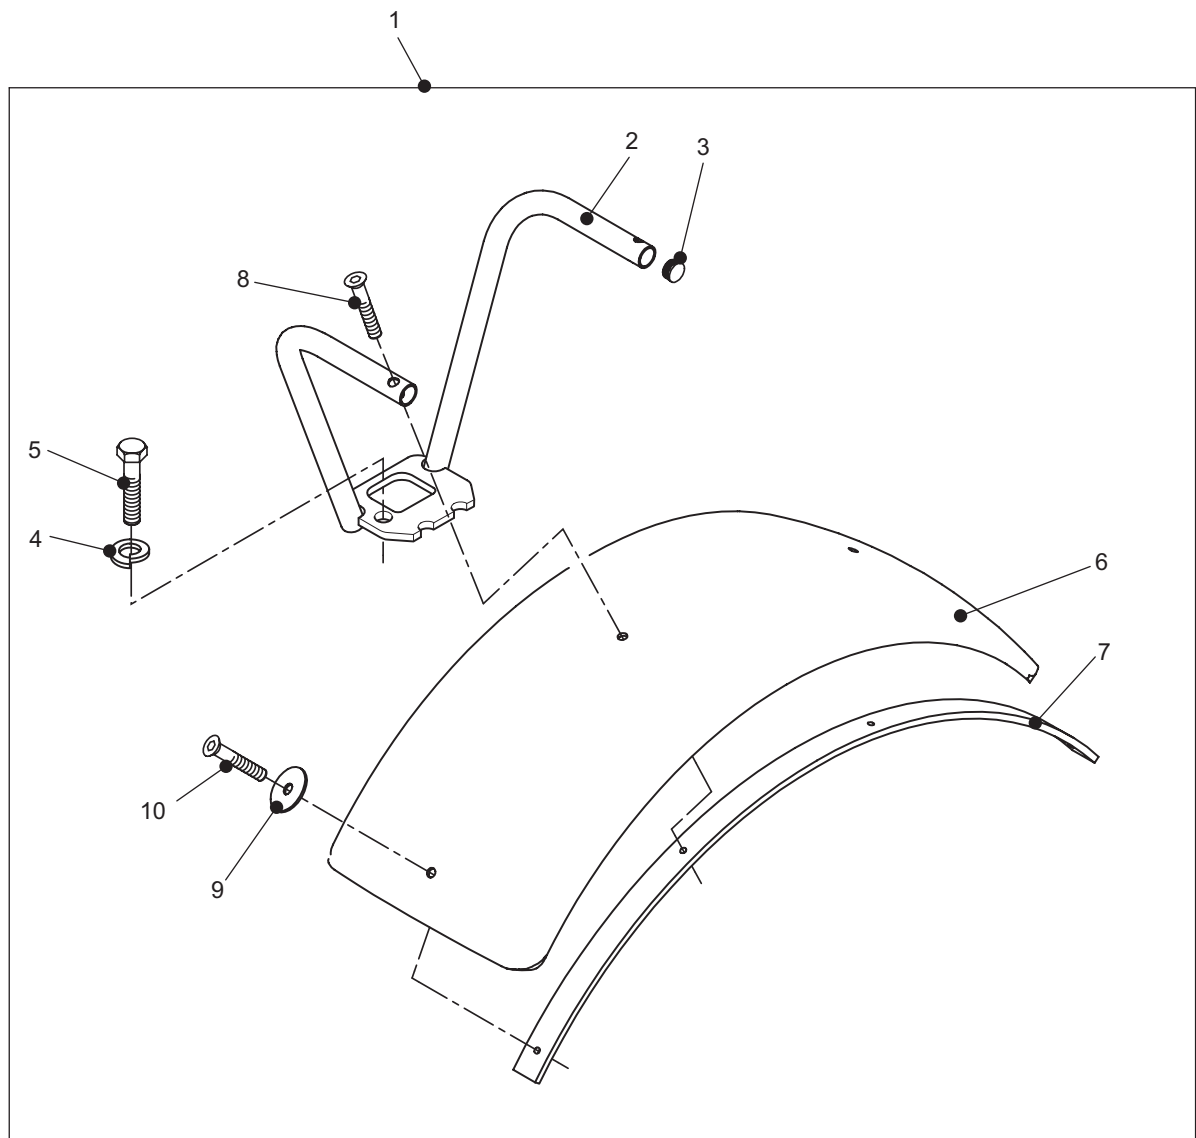


SPC007006

Mudguard 24"

[illegible]

Tow Valve Installation

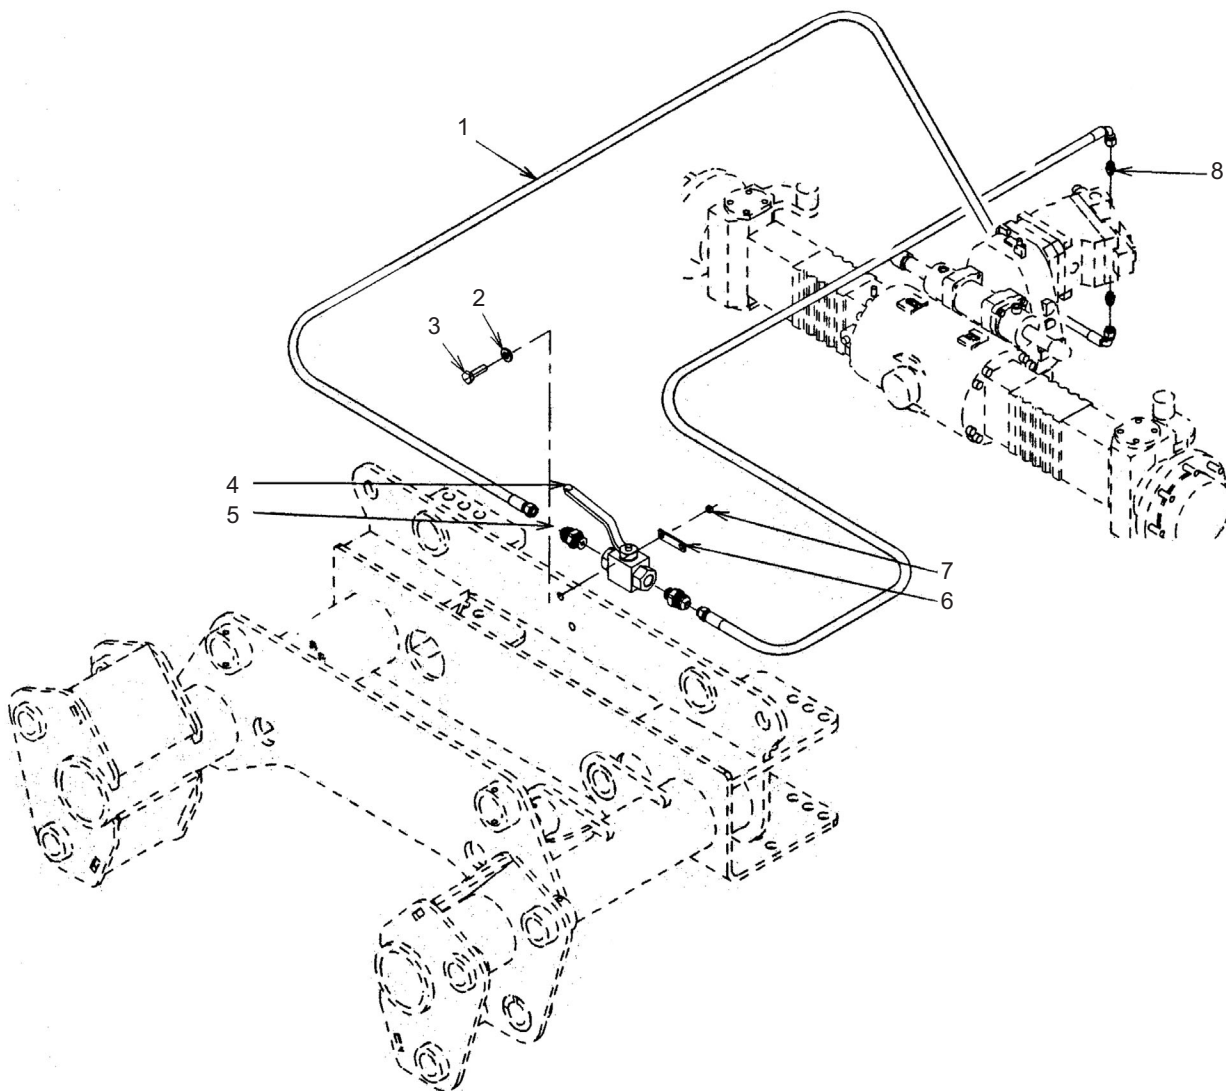


SPC007007

Tow Valve Installation

[illegible]

Wheel Wedge Option

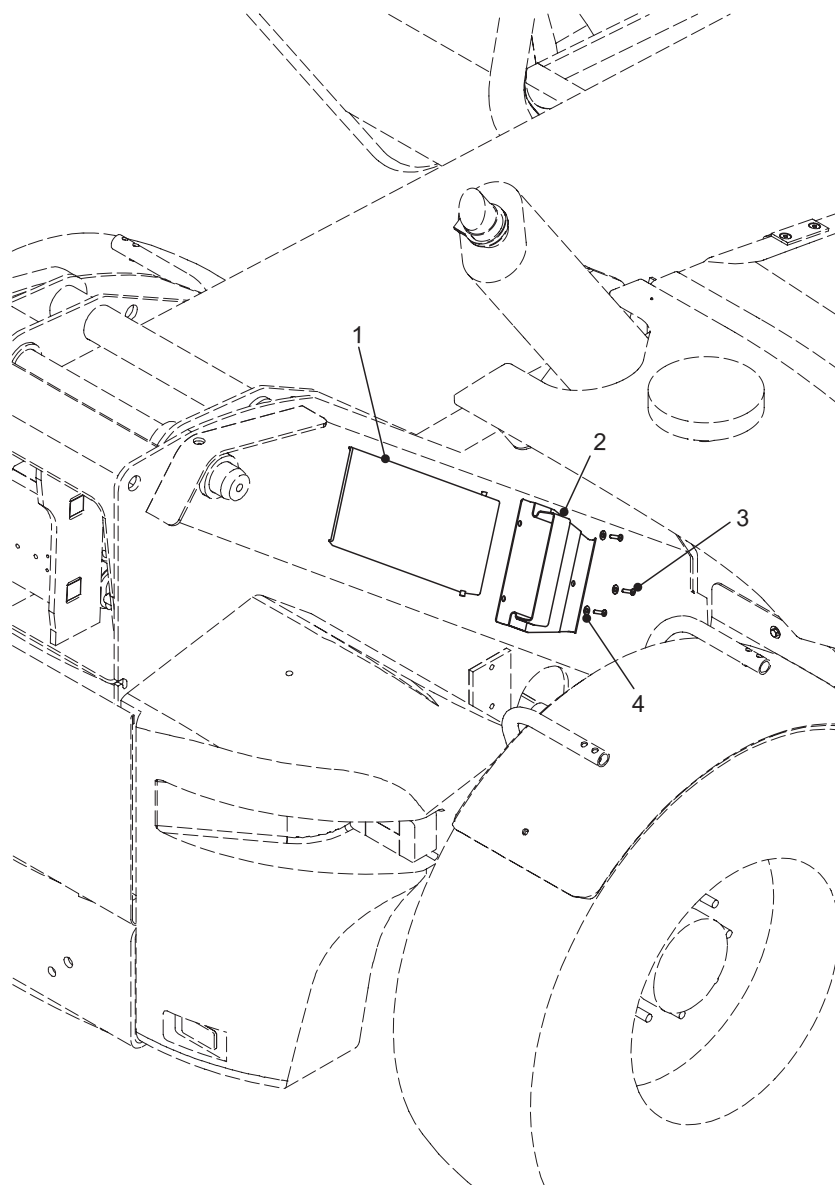


SPC007009

Wheel Wedge Option

[illegible]

Valve Braking Switch Option

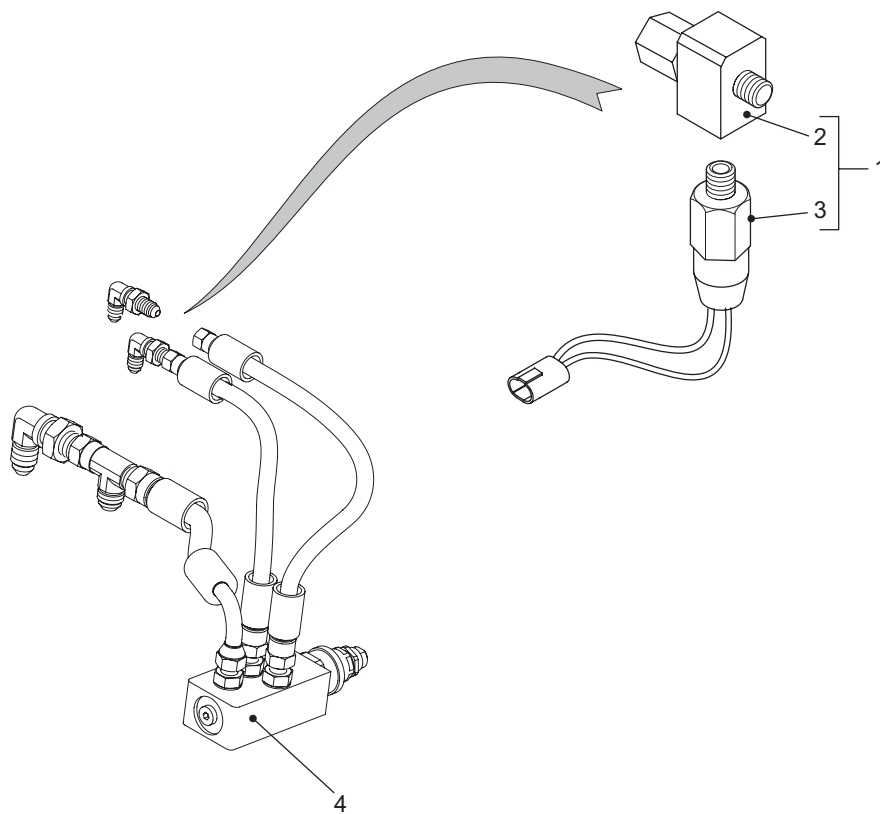


SPC007010

Valve Braking Switch Option

[illegible]

Matriculation Plate Option

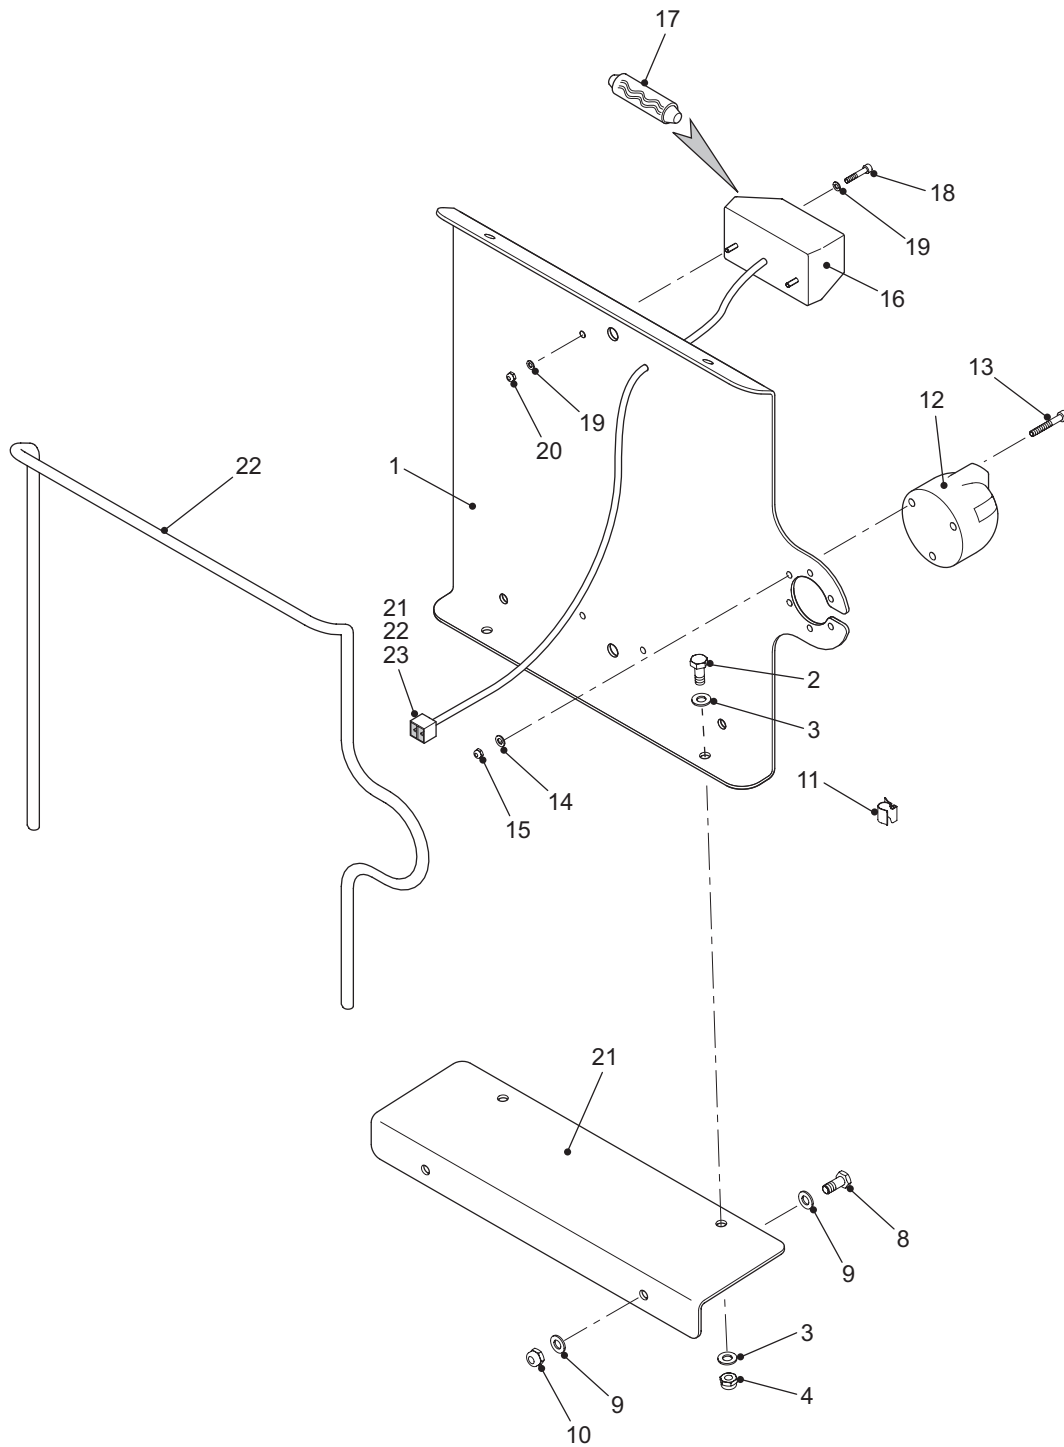


SPC007011

Matriculation Plate Option

[illegible]

Tow Hitch

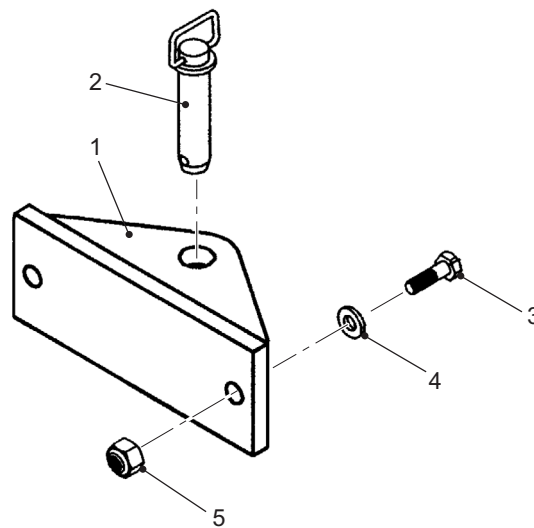


SPC007012

Tow Hitch

[illegible]

Trailer Plug

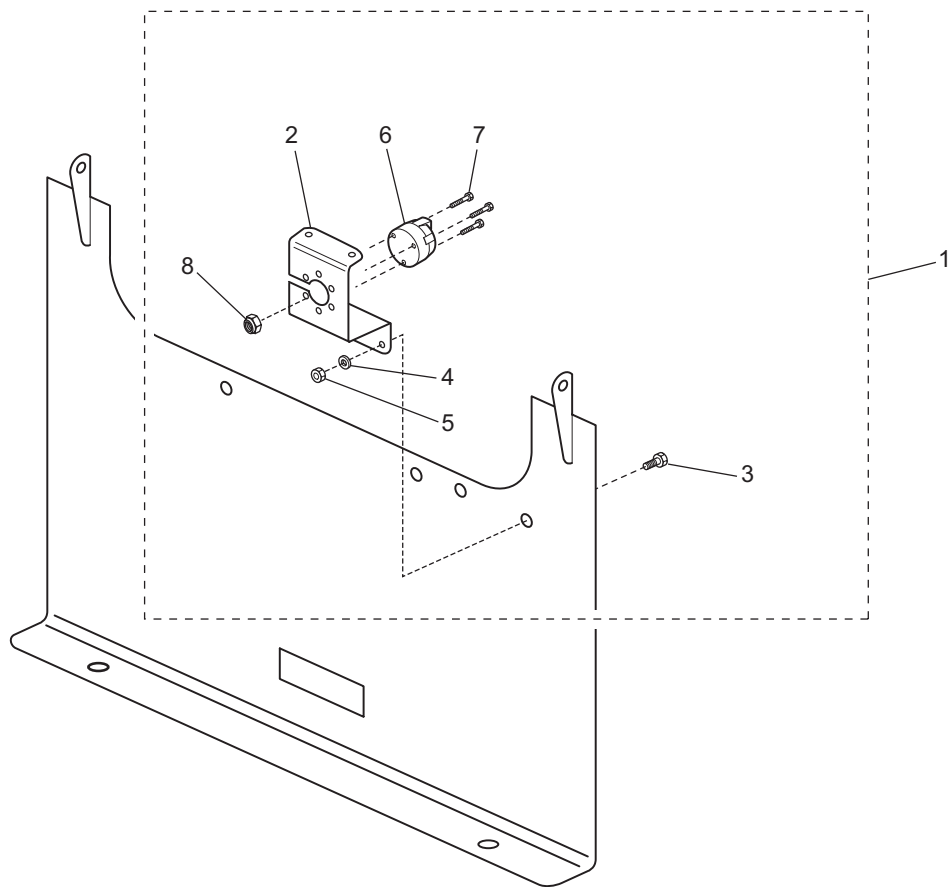


SPC007013

Trailer Plug

[illegible]

Rear View Mirror

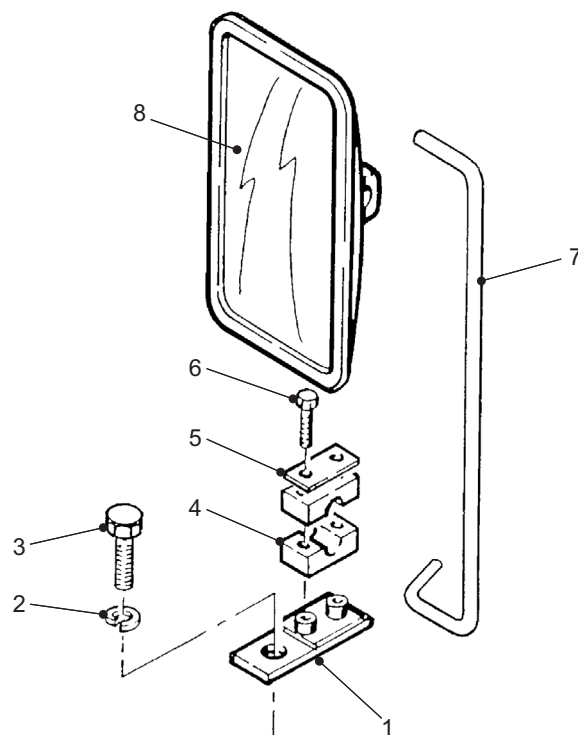


SPC007014

Rear View Mirror

[illegible]

2nd Hydraulic Function On Boom

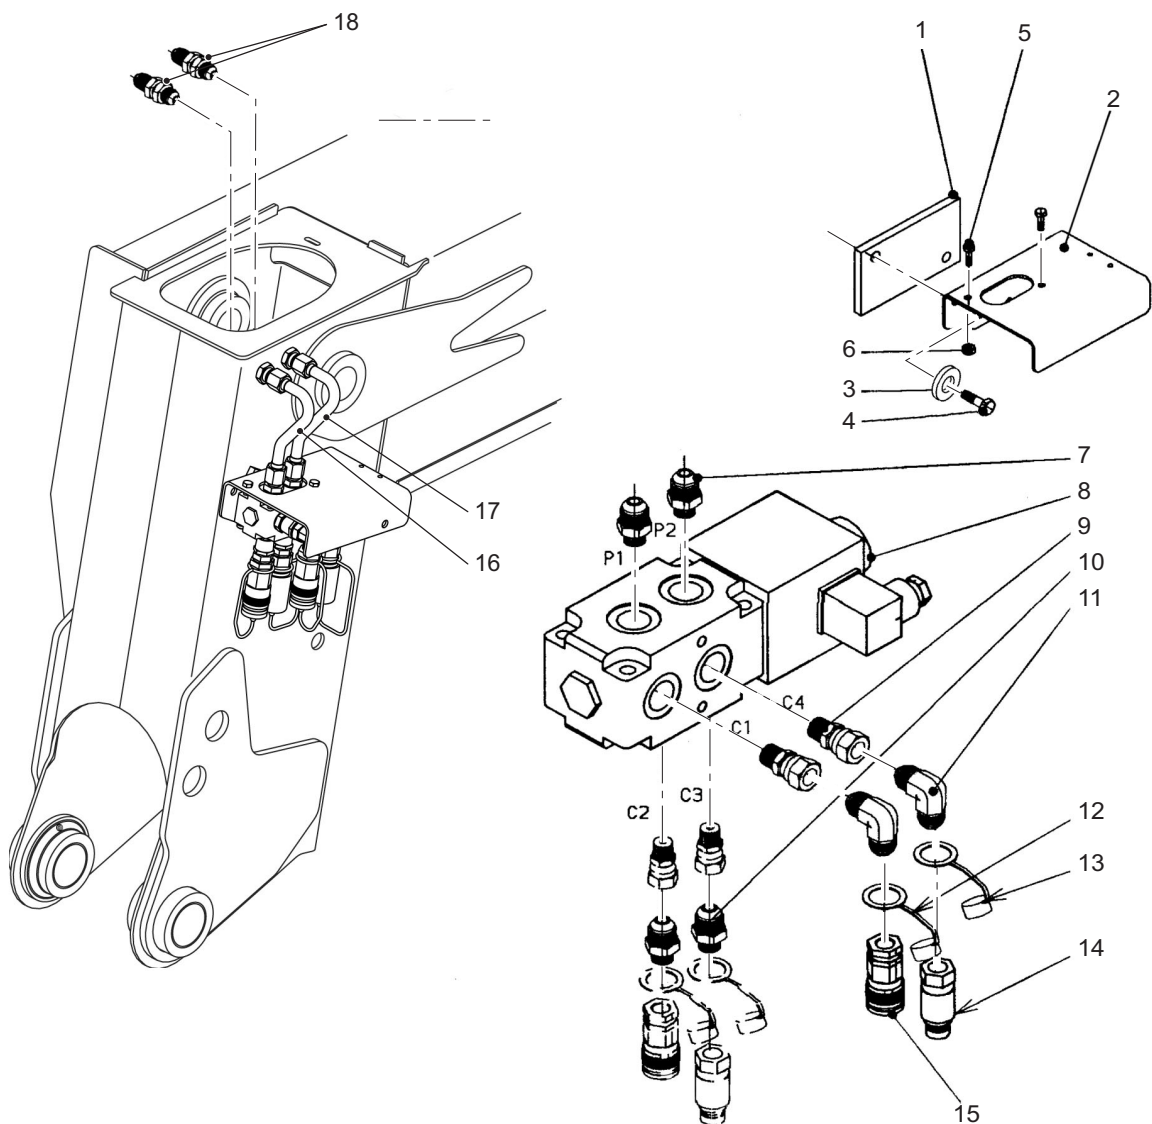


SPC007015

2nd Hydraulic Function On Boom

[illegible]

2nd Hydraulic Function On Boom - Electric

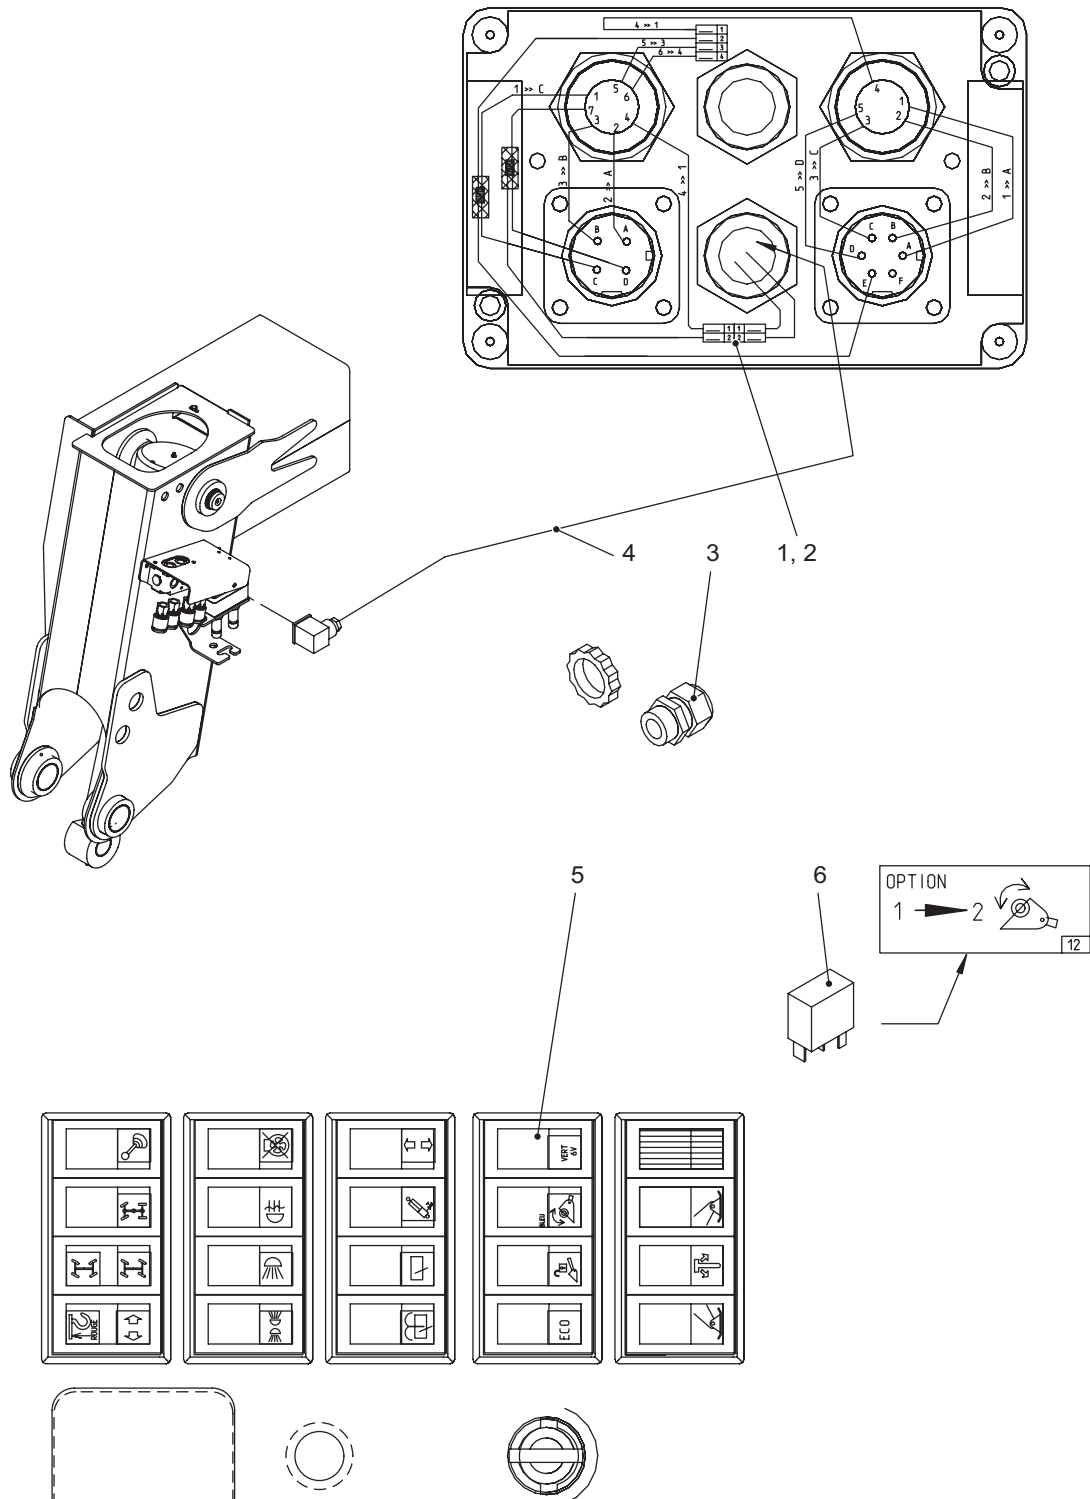


SPC007016

2nd Hydraulic Function On Boom - Electric

[illegible]

Backup Alarm

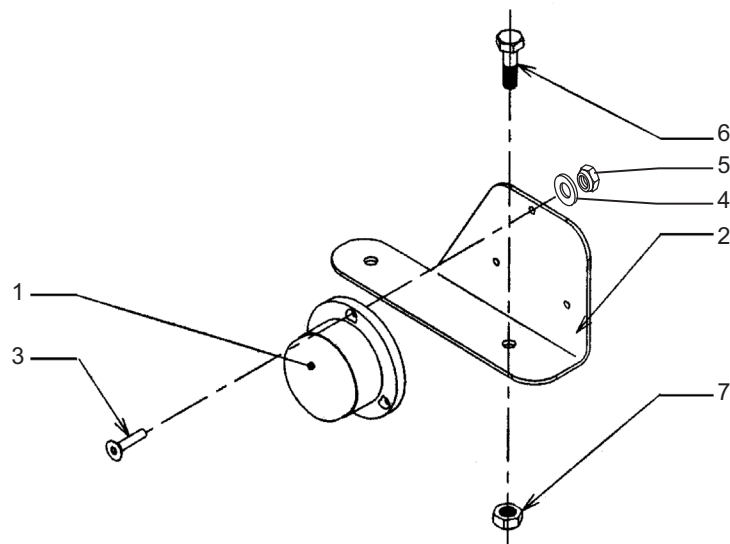


SPC007017

Backup Alarm

[illegible]

Windshield Protection Grill

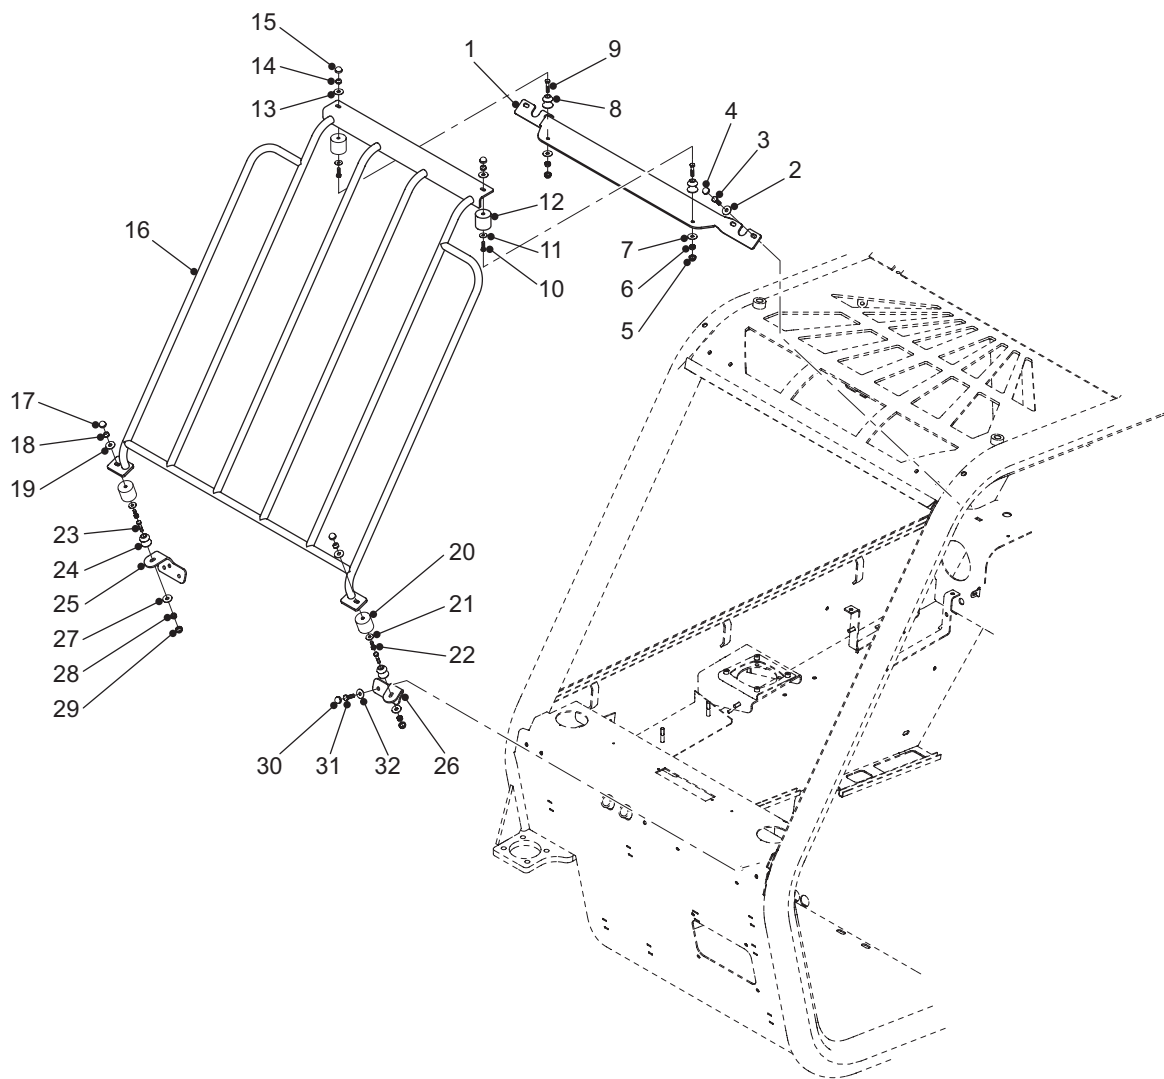


SPC007018

Windshield Protection Grill

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6914643	Upper support			1
2	29272.2	Washer			4
3	01591.7	Screw			4
4	63332.1	Cap			4
5	63332.1	Cap			2
6	100345-06W	Nut			2
7	29272.2	Washer			2
8	100520-18G	Female abutment	Pos. 8 + 12		2
9	01593.3	Screw			2
10	01591.7	Screw			2
11	29272.2	Washer			2
12	100520-19H	Male abutment	Pos. 8 + 12		2
13	29272.2	Washer			2
14	100345-06W	Nut			2
15	63332.1	Cap			2
16	6914657	Grill			1
17	63332.1	Cap			2
18	100345-06W	Nut			2
19	29272.2	Washer			2
20	100520-19H	Male abutment	Pos. 20 + 24		2
21	29272.2	Washer			2
22	01591.7	Screw			2
23	01593.3	Screw			2
24	100520-18G	Female abutment	Pos. 20 + 24		2
25	6914652	R.H. lower support			1
26	6914651	L.H. lower support			1
27	29272.2	Washer			2
28	100345-06W	Nut			2
29	63332.1	Cap			2
30	63332.1	Cap			4
31	01591.7	Screw			4

Windshield Protection Grill

Recurrence of previous drawing

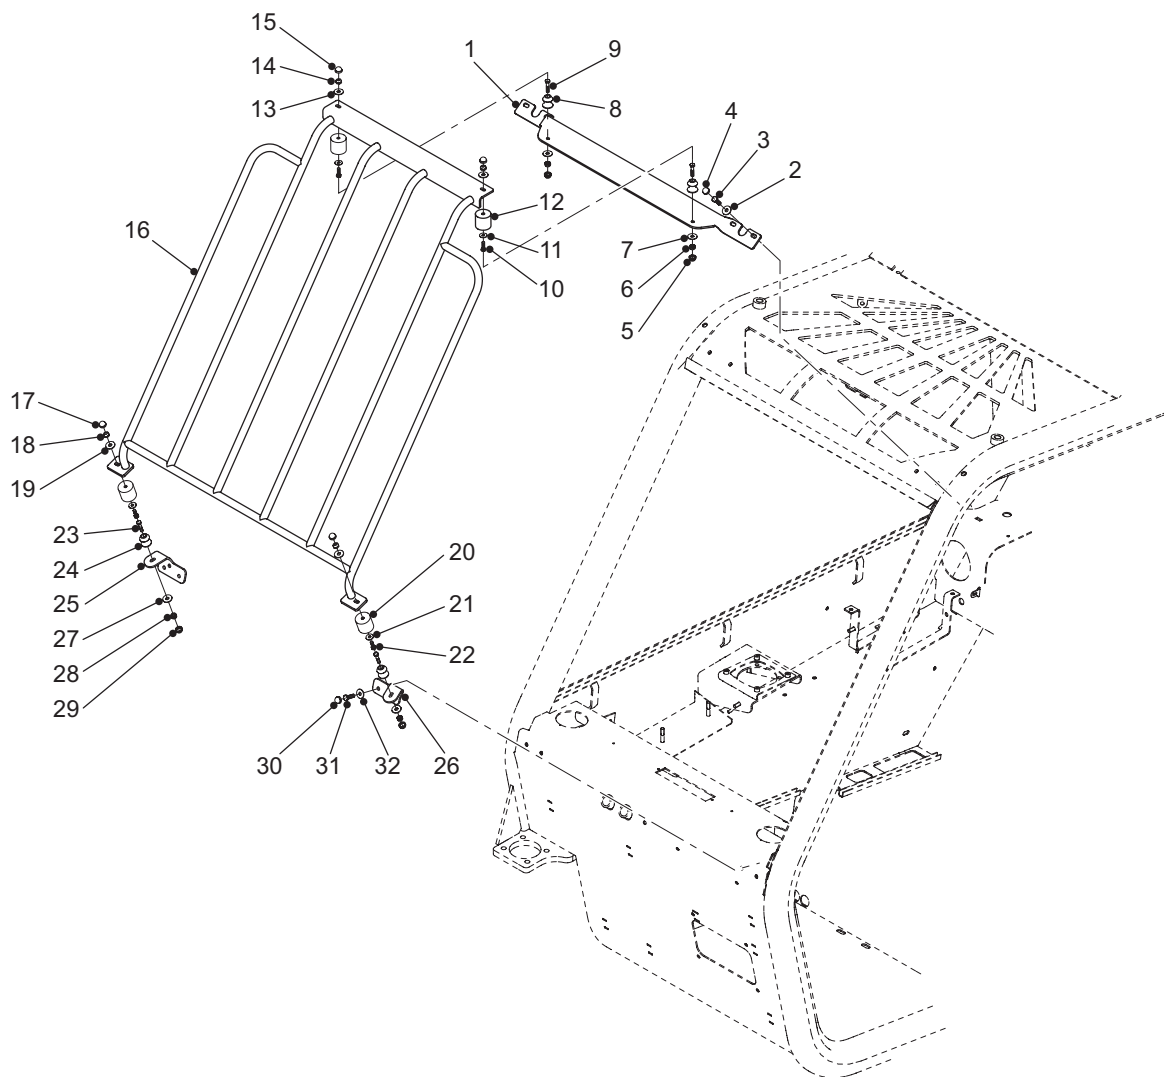

SPC007018

Windshield Protection Grill

[illegible]




Bobcat Decals

T40140

[illegible]

Bobcat Decals T40170

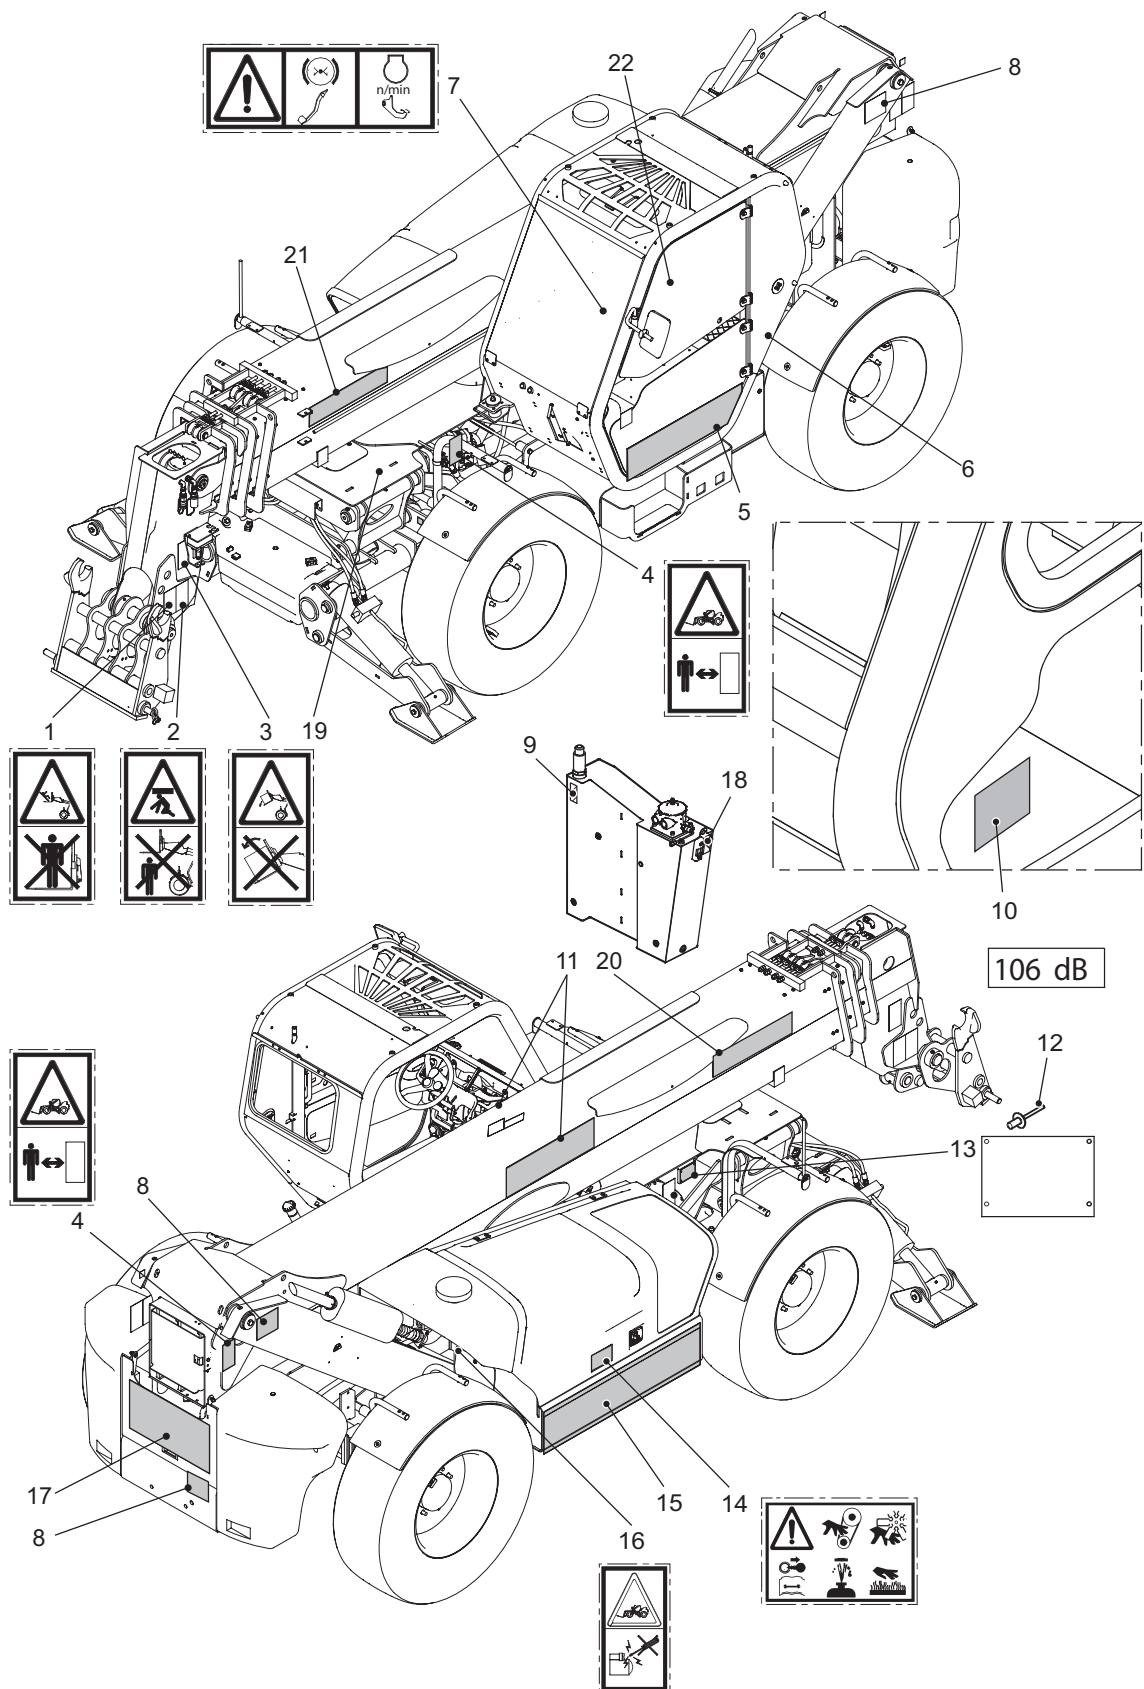


SPC007055

Bobcat Decals

T40170

[illegible]

Italy Version

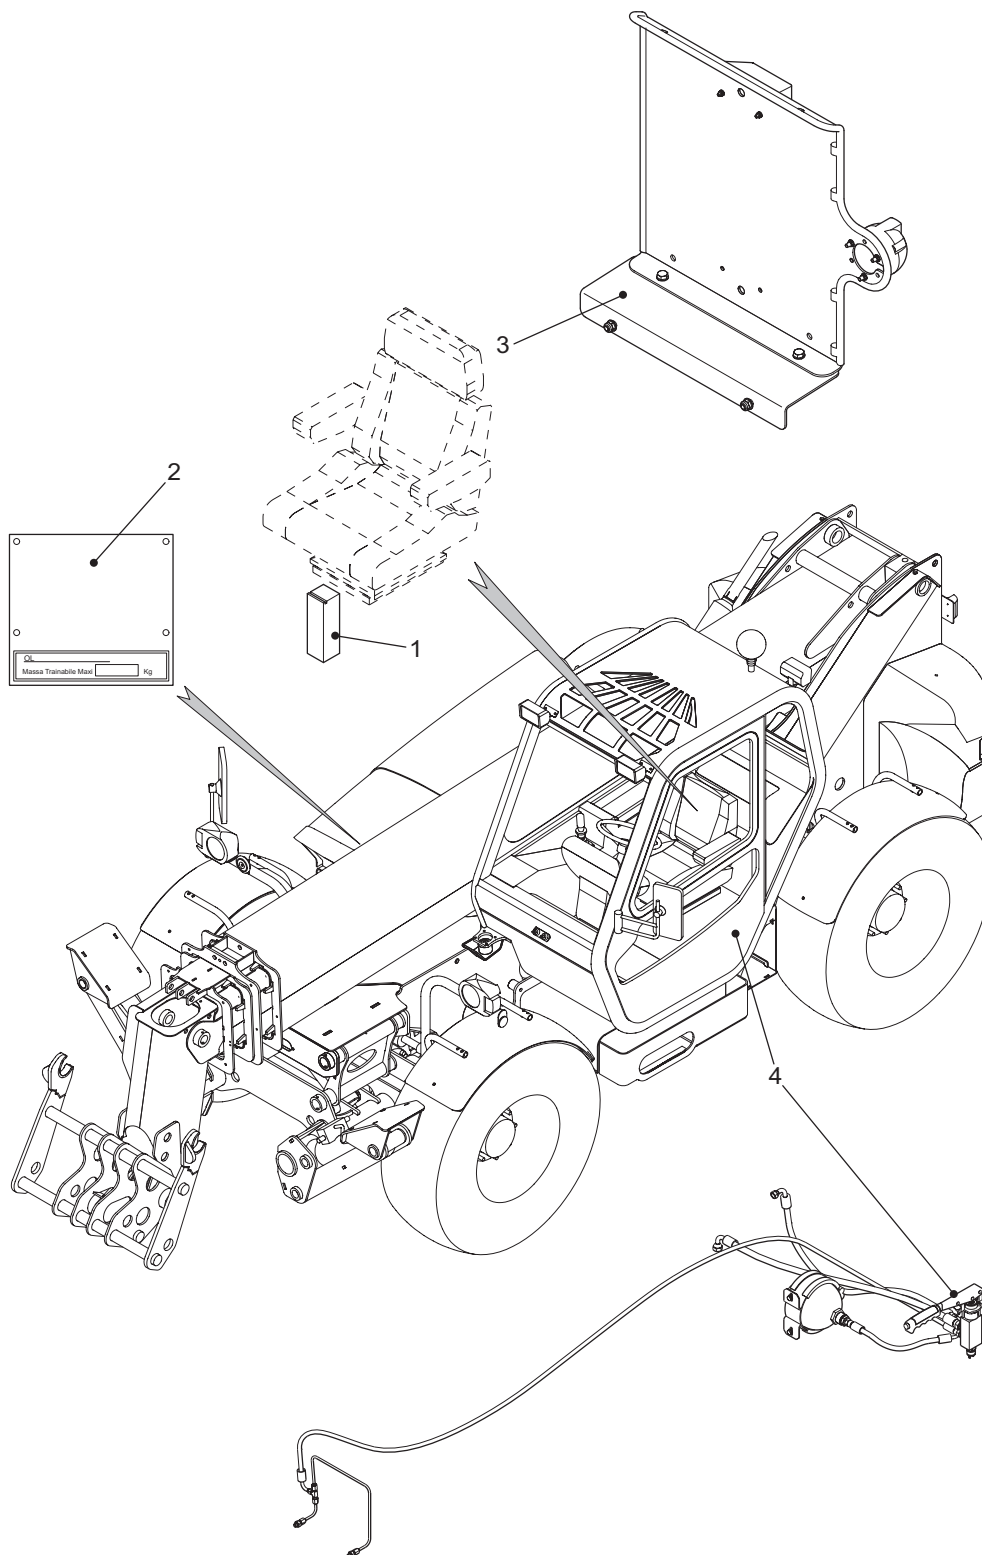


SPC007023

Italy Version

[illegible]

Germany Version

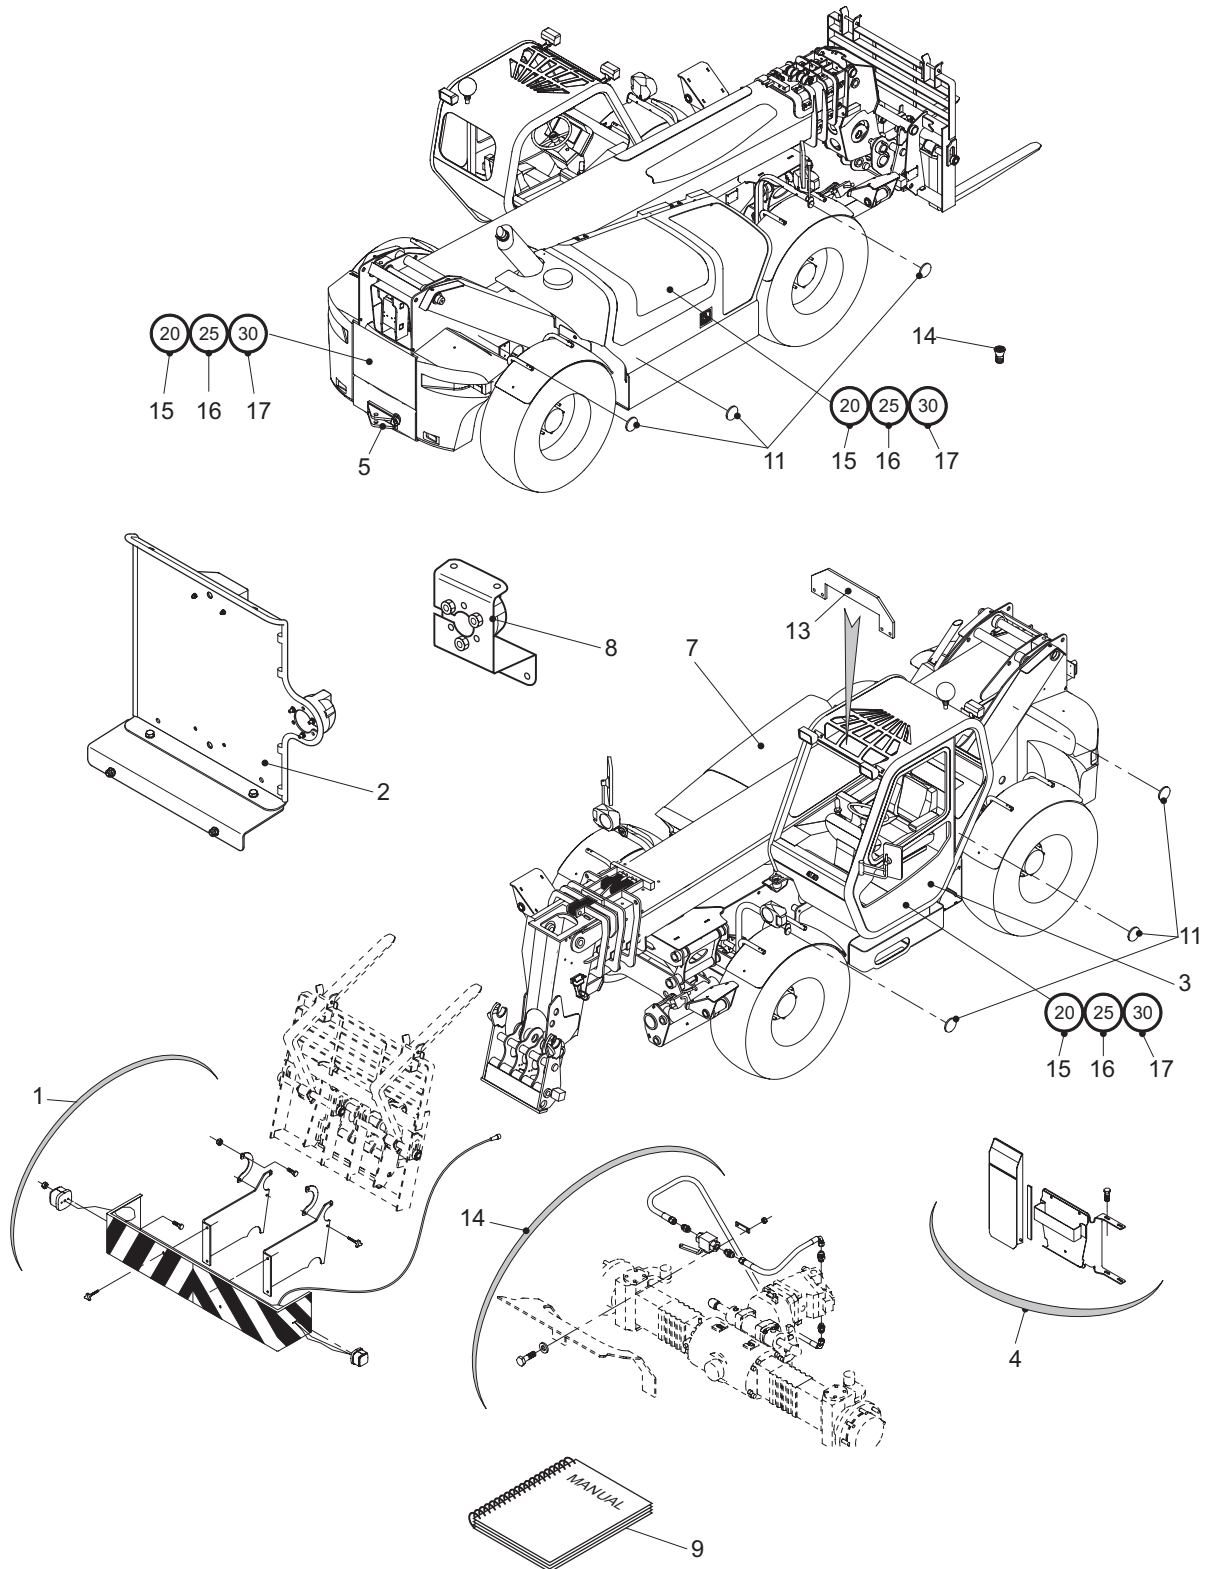


SPC007024

Germany Version

[illegible]

Frontal Safety Signalling for Germany

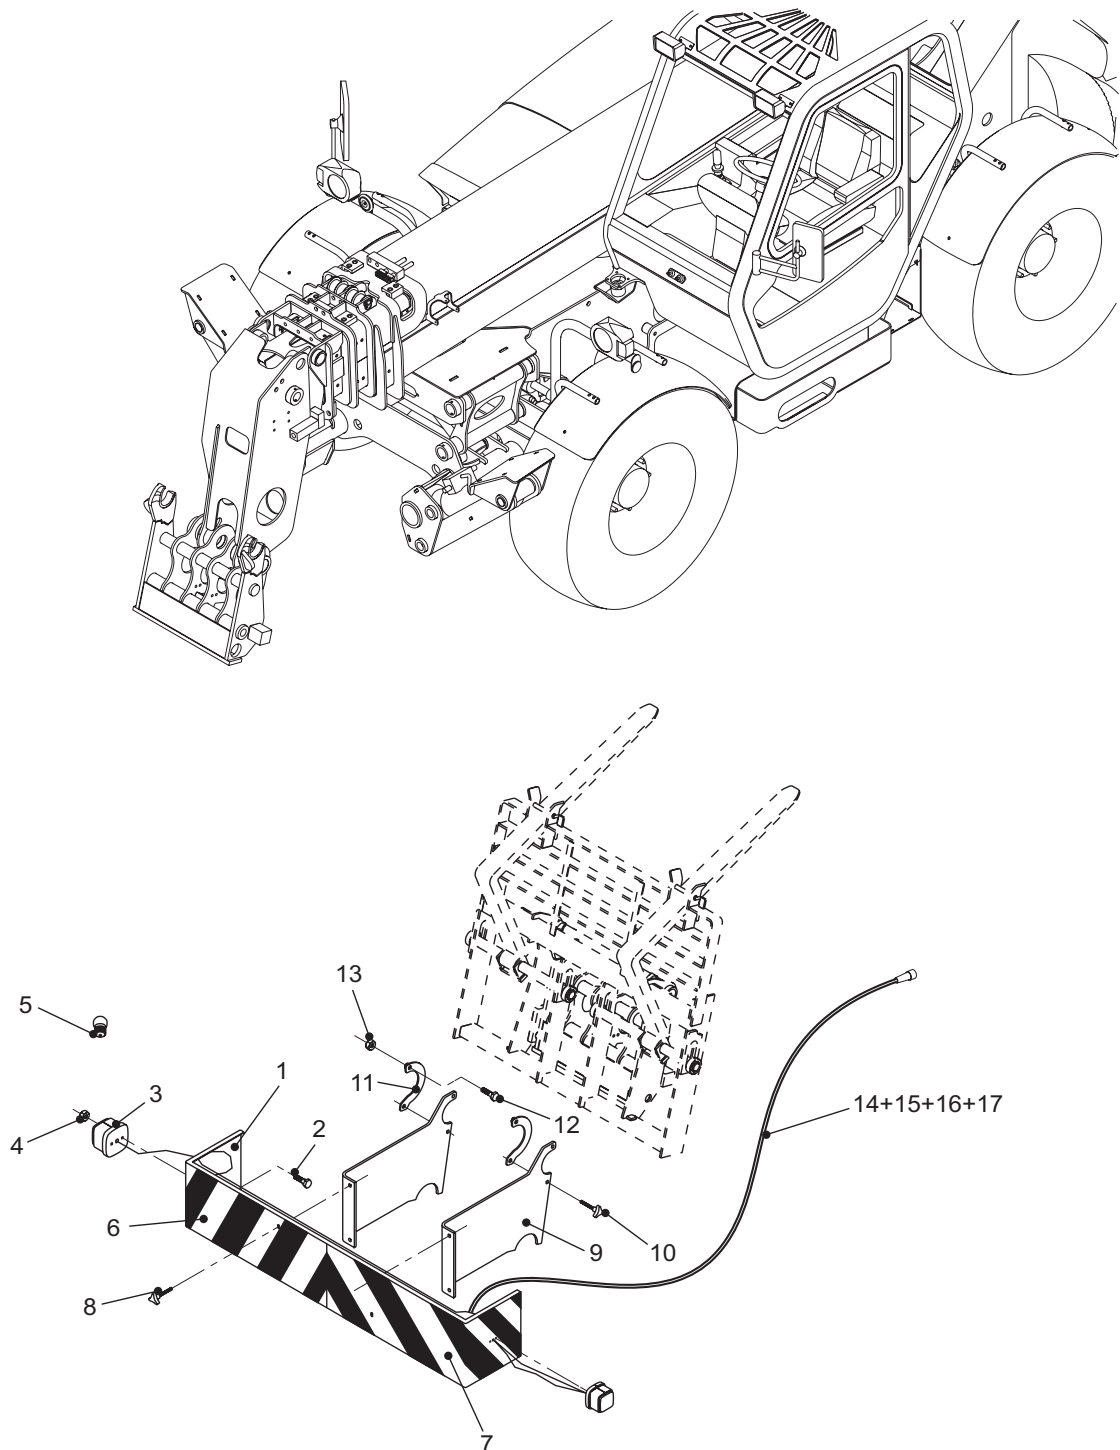


SPC007025

Frontal Safety Signalling for Germany

[illegible]

Steering Balance Kit


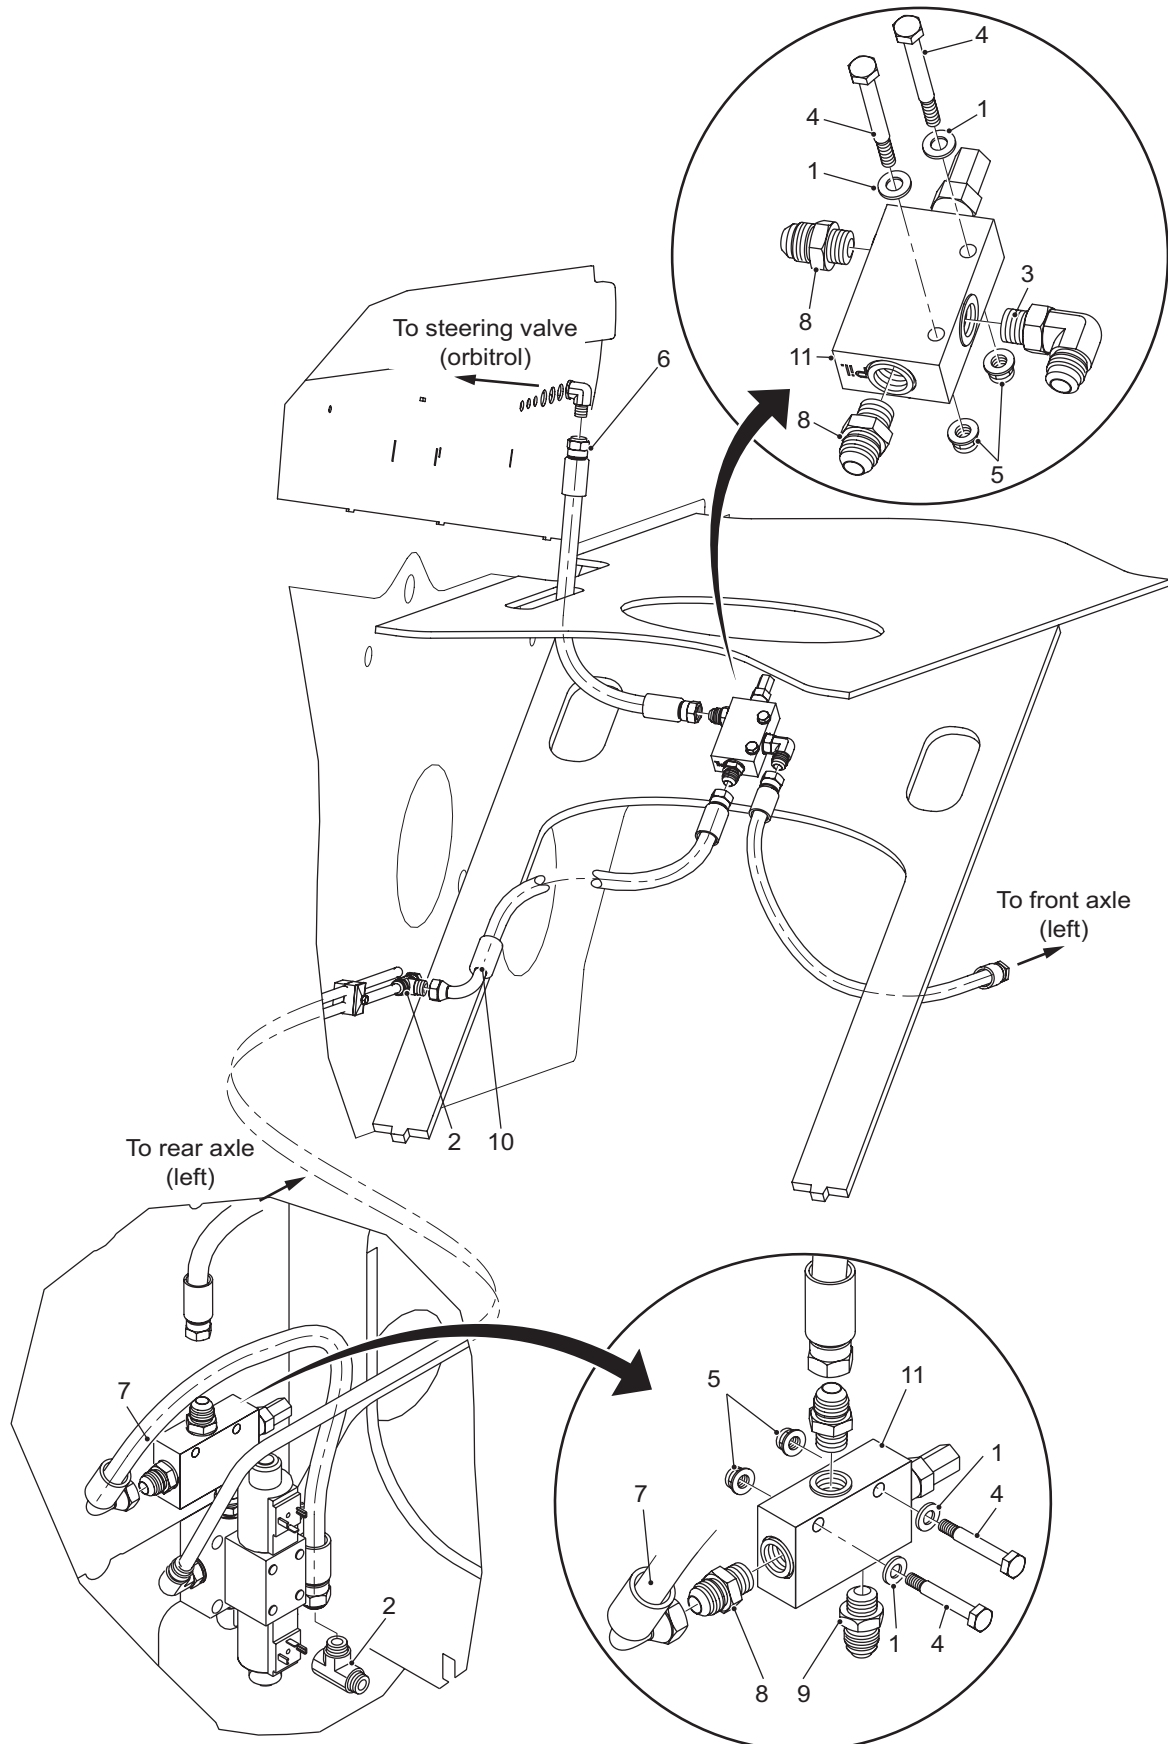


SPC007026

Steering Balance Kit

[illegible]

Boom Chain Pulley axles Kit T40140

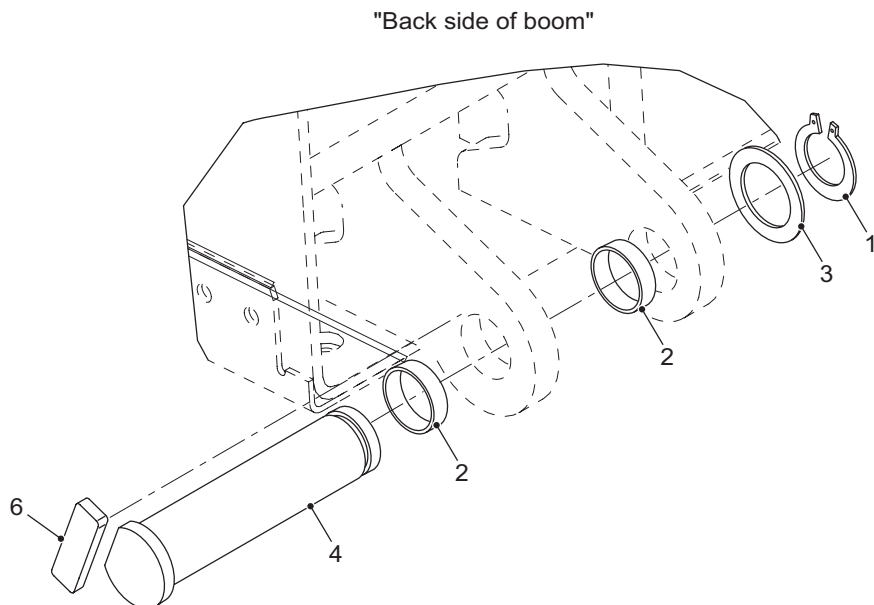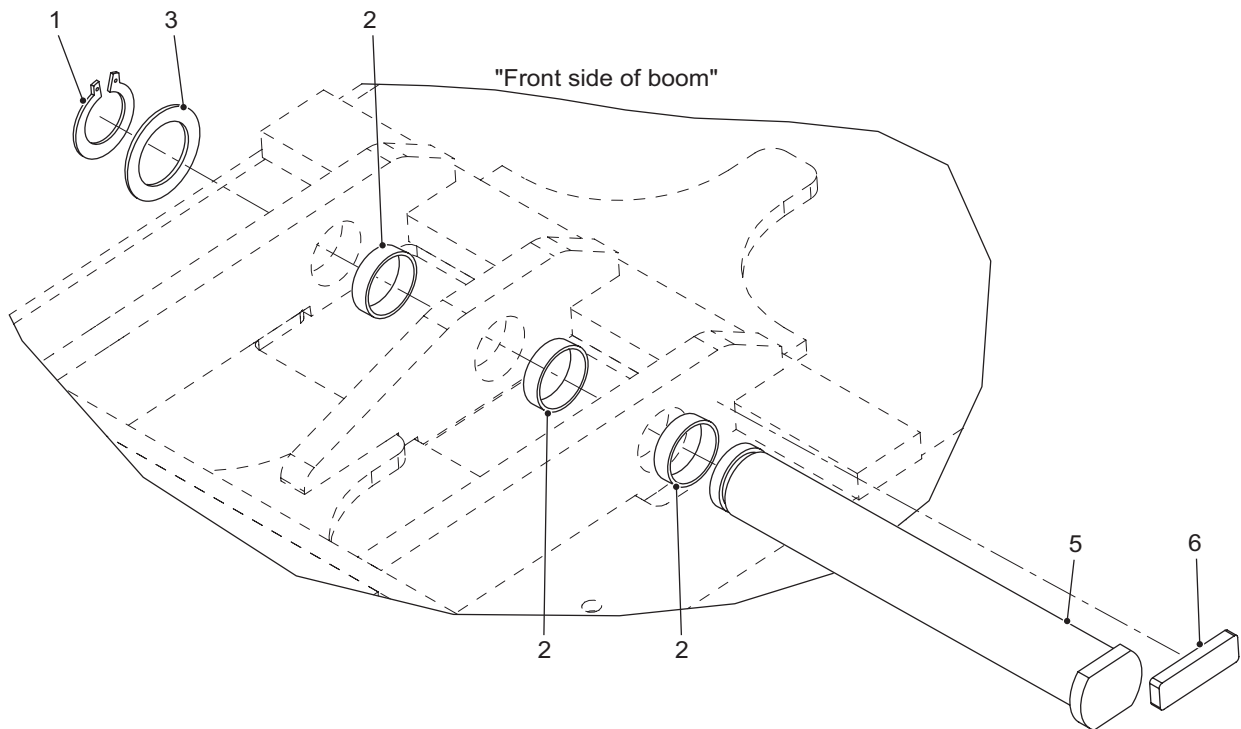


SPC007027

Boom Chain Pulley axles Kit

T40140

[illegible]

Boom Chain Pulley axles Kit T40170

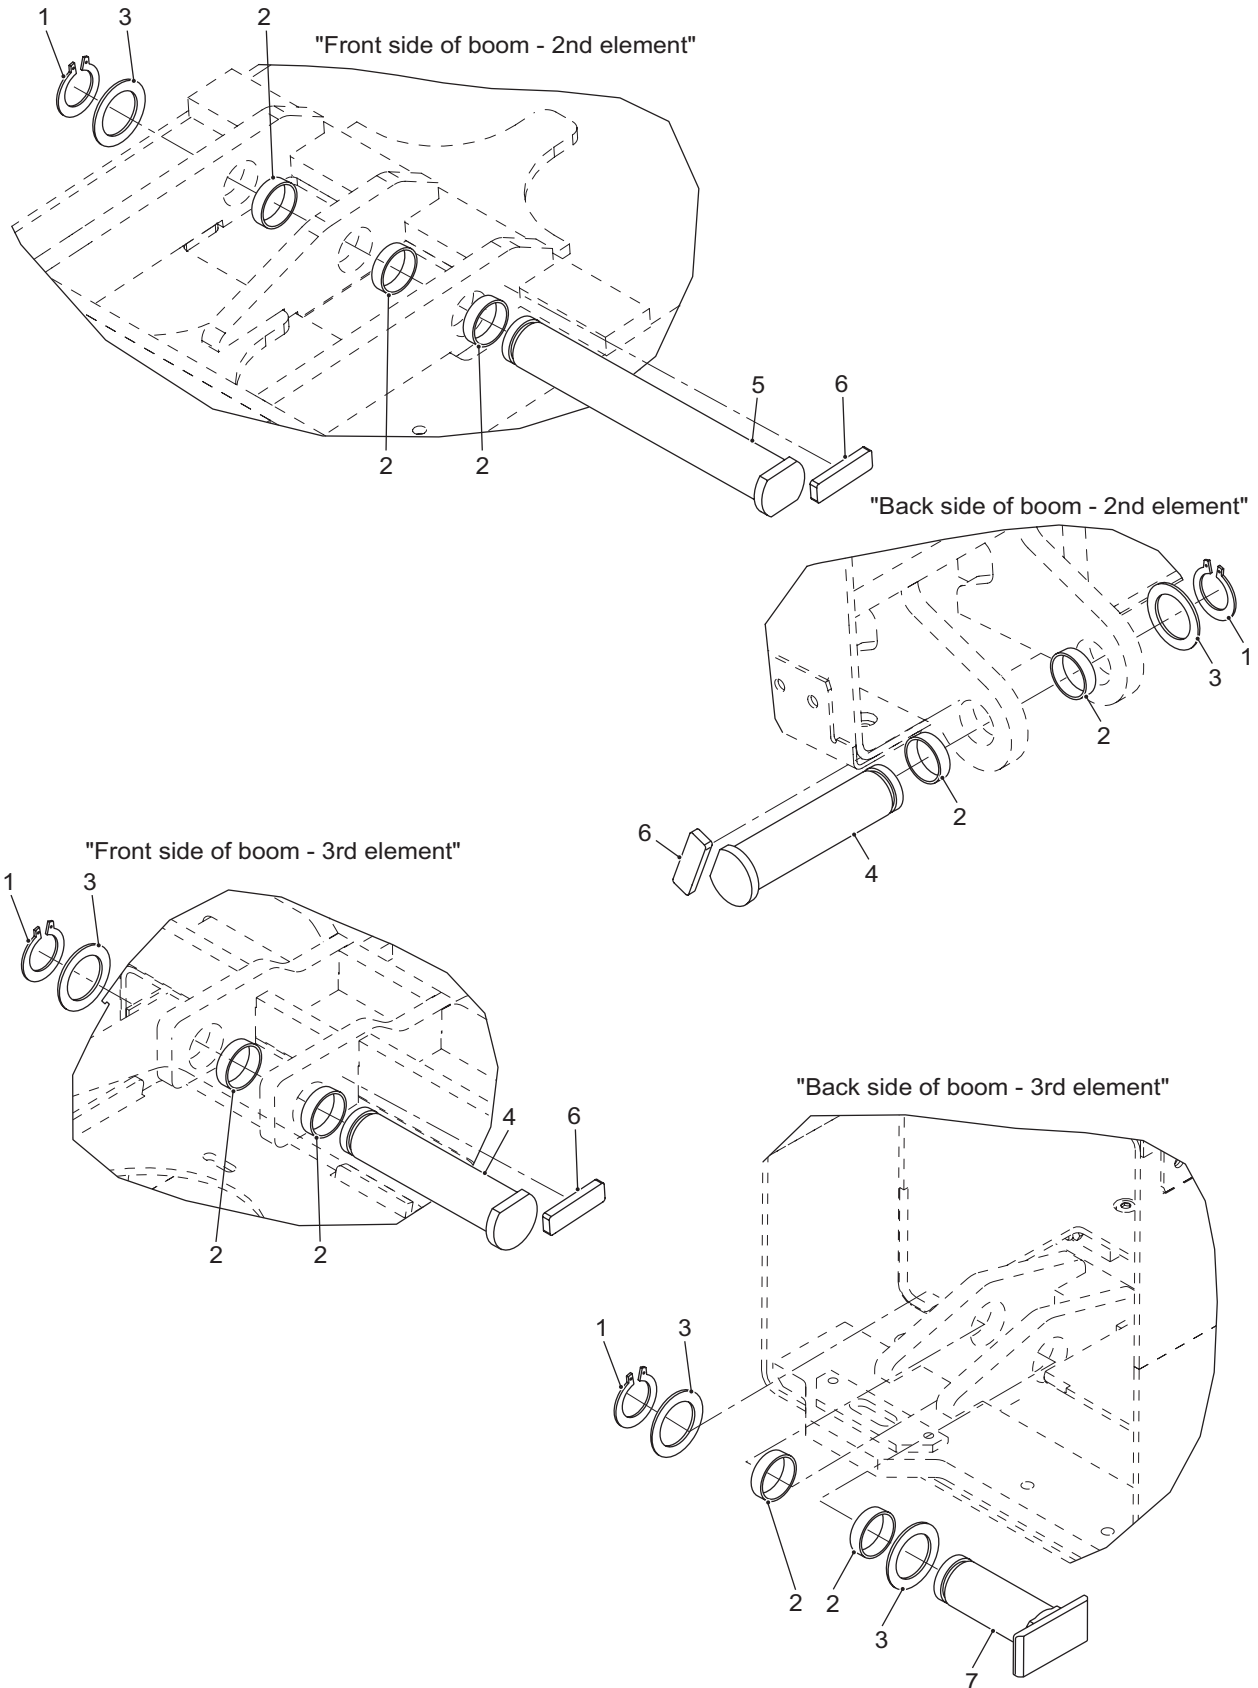


SPC007054

Boom Chain Pulley axles Kit

T40170

[illegible]

Fuel Pre-Filter Kit

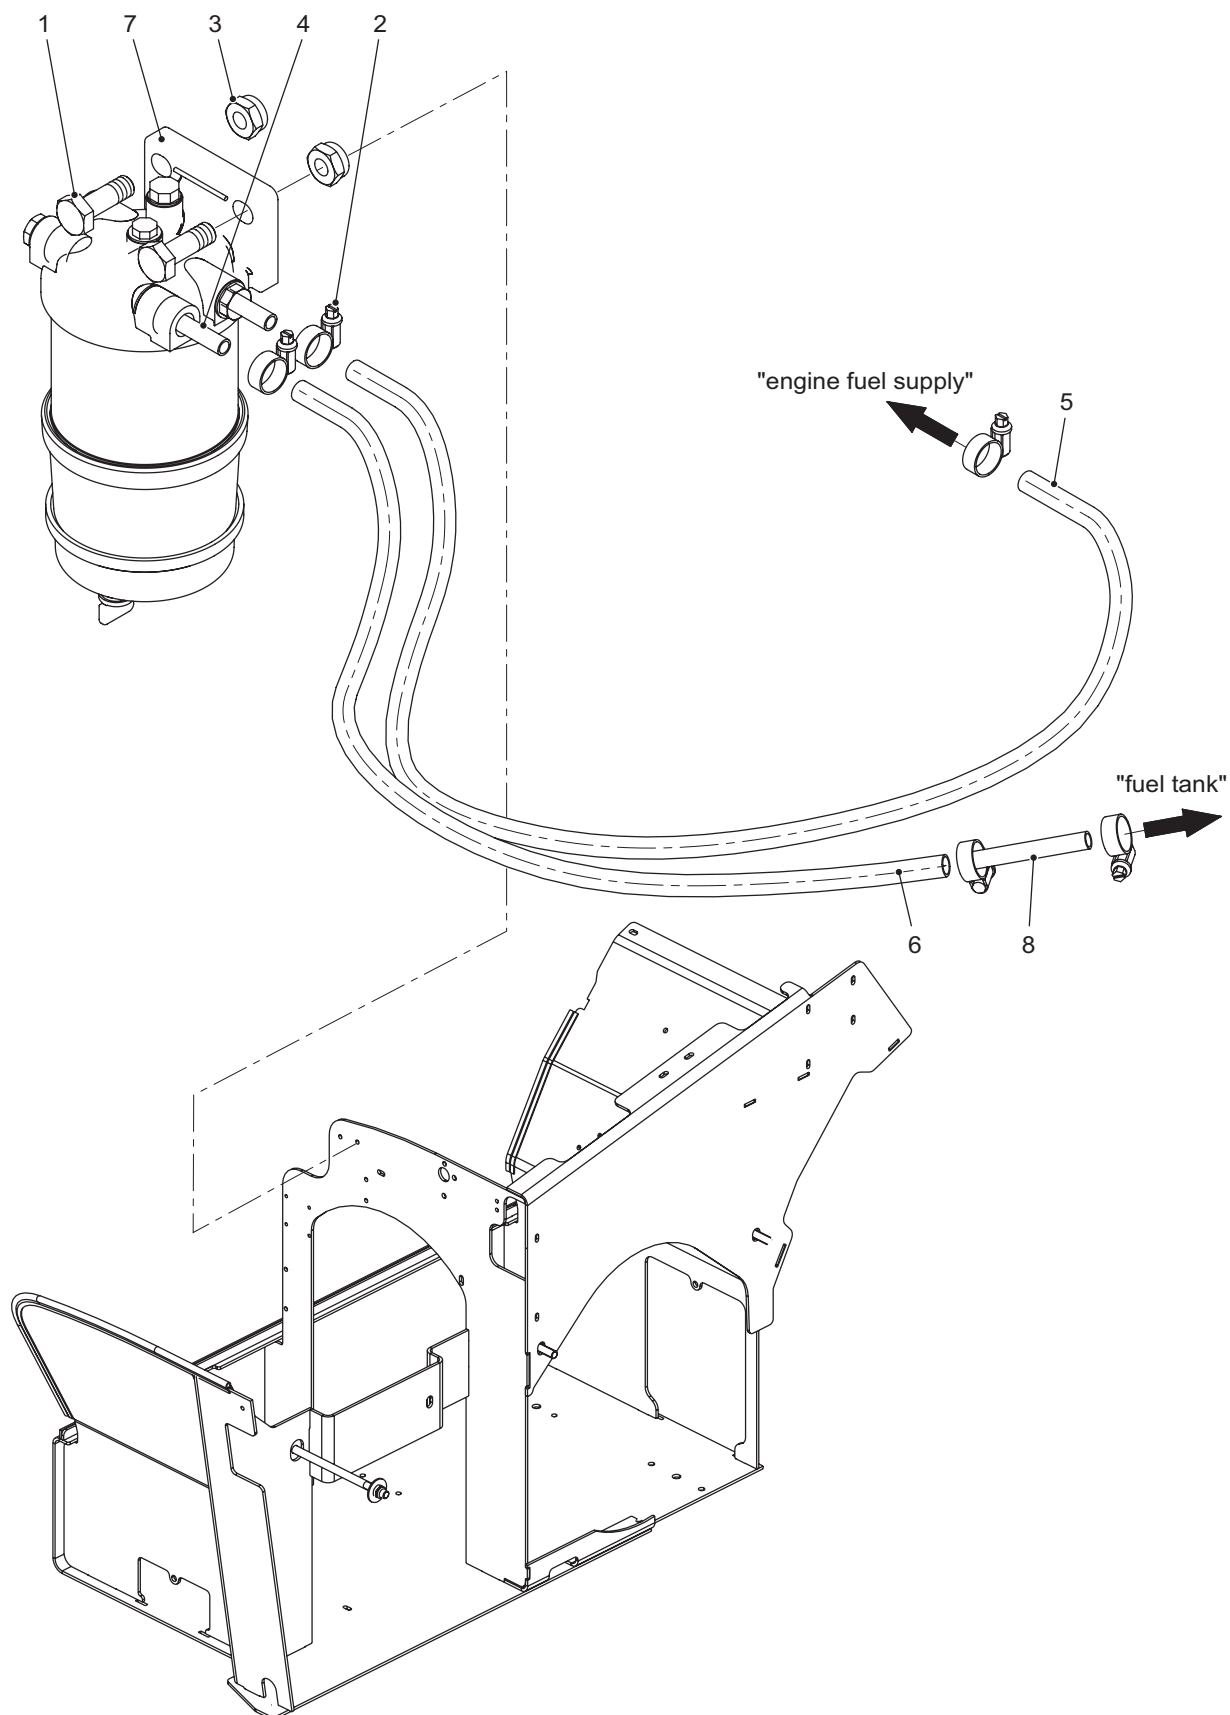


SPC007028

Fuel Pre-Filter Kit

[illegible]

Hydraulic Tank Filling Kit

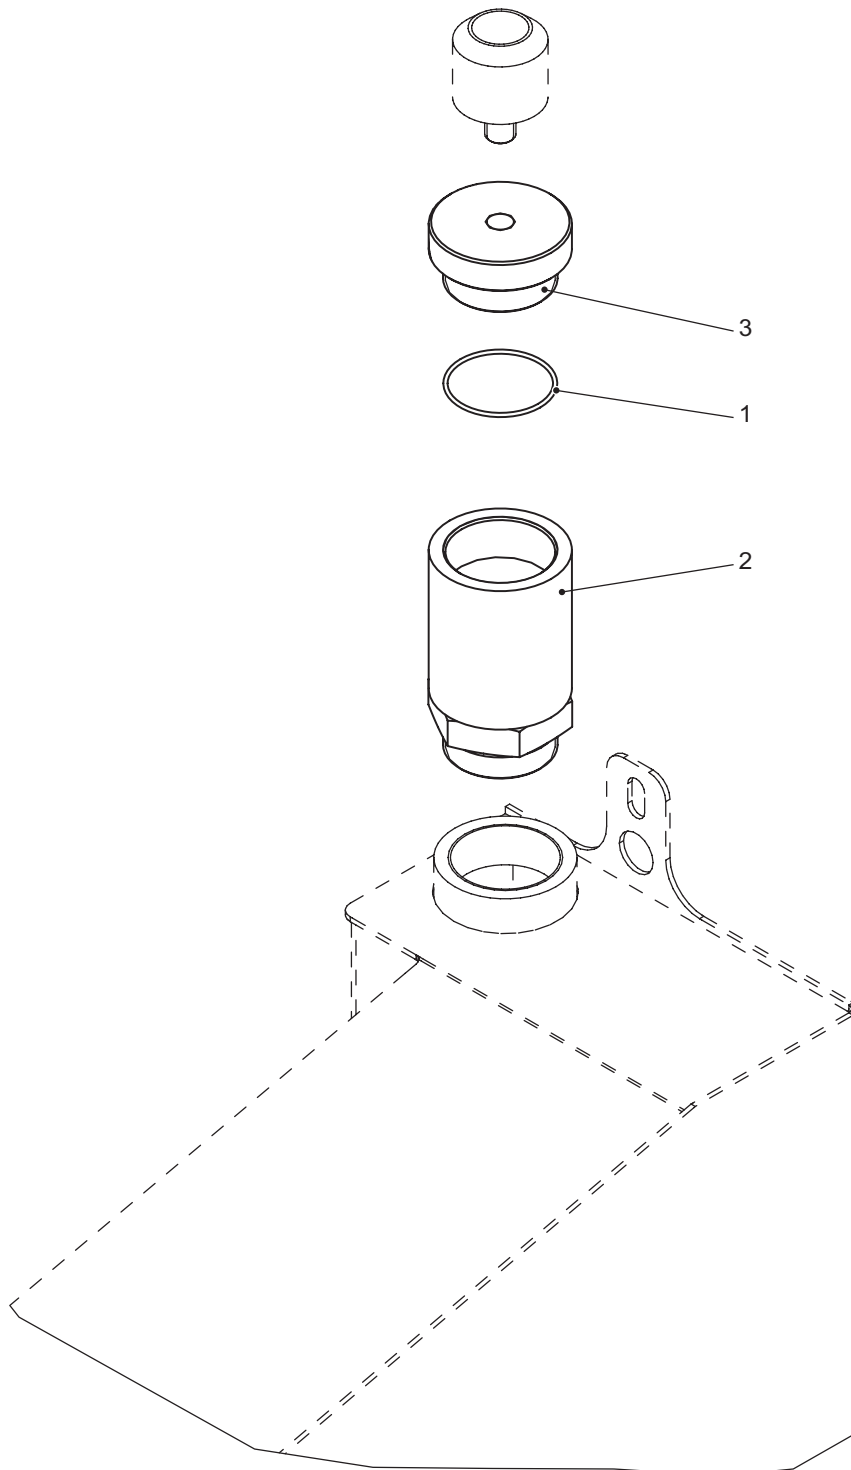


SPC007029

Hydraulic Tank Filling Kit

[illegible]

Damper Kit

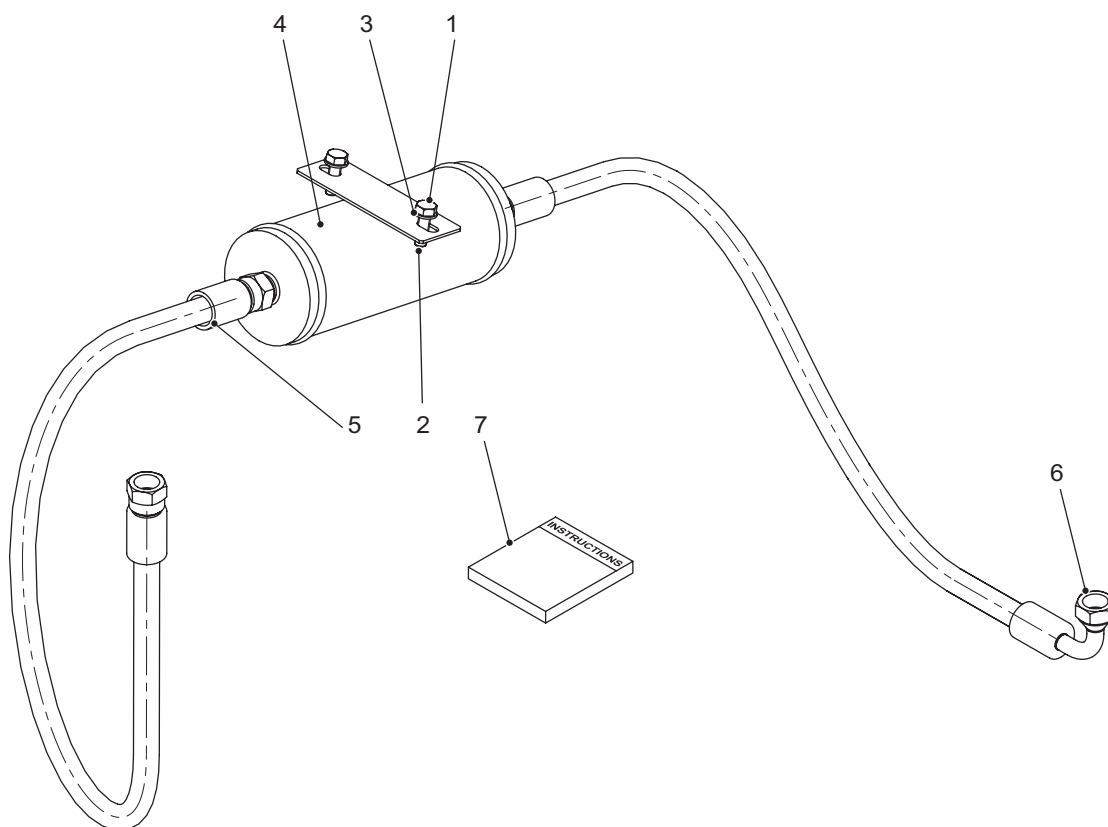


SPC007030

Damper Kit

[illegible]

Tool Adaptor Kit

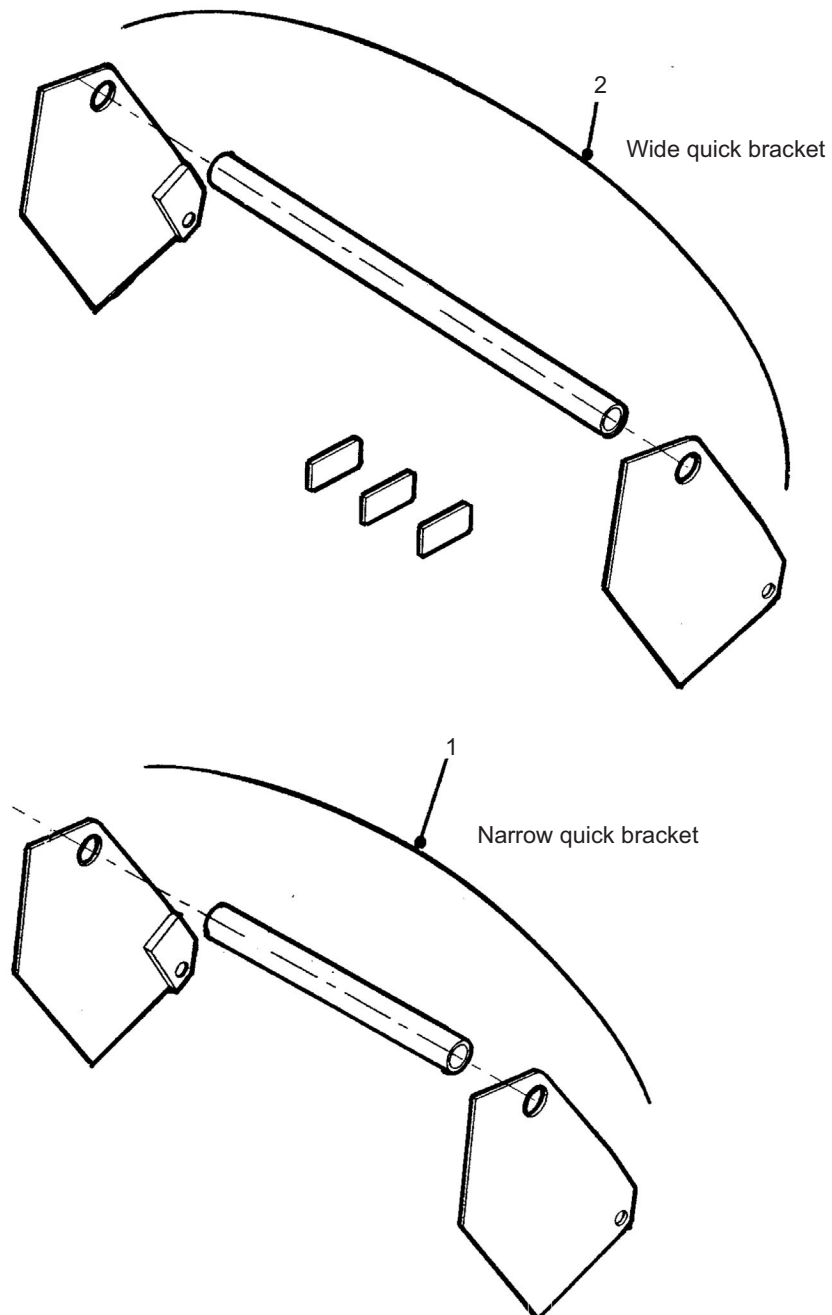


SPC007031

Tool Adaptor Kit

[illegible]

Concrete Bucket

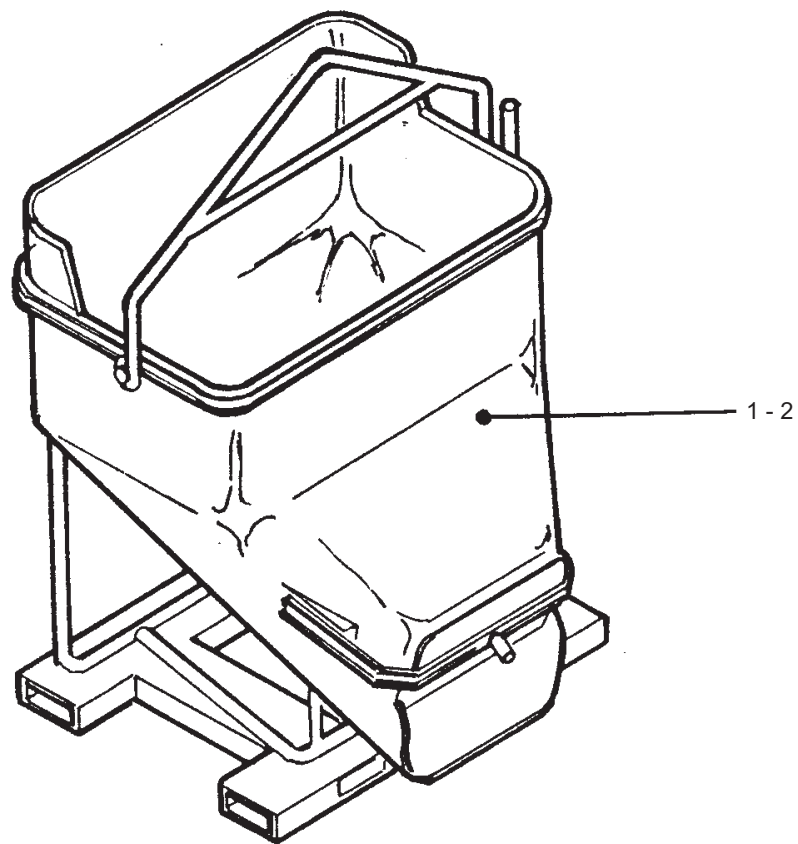


SPC007032

Concrete Bucket

[illegible]

Floating Pallet Forks

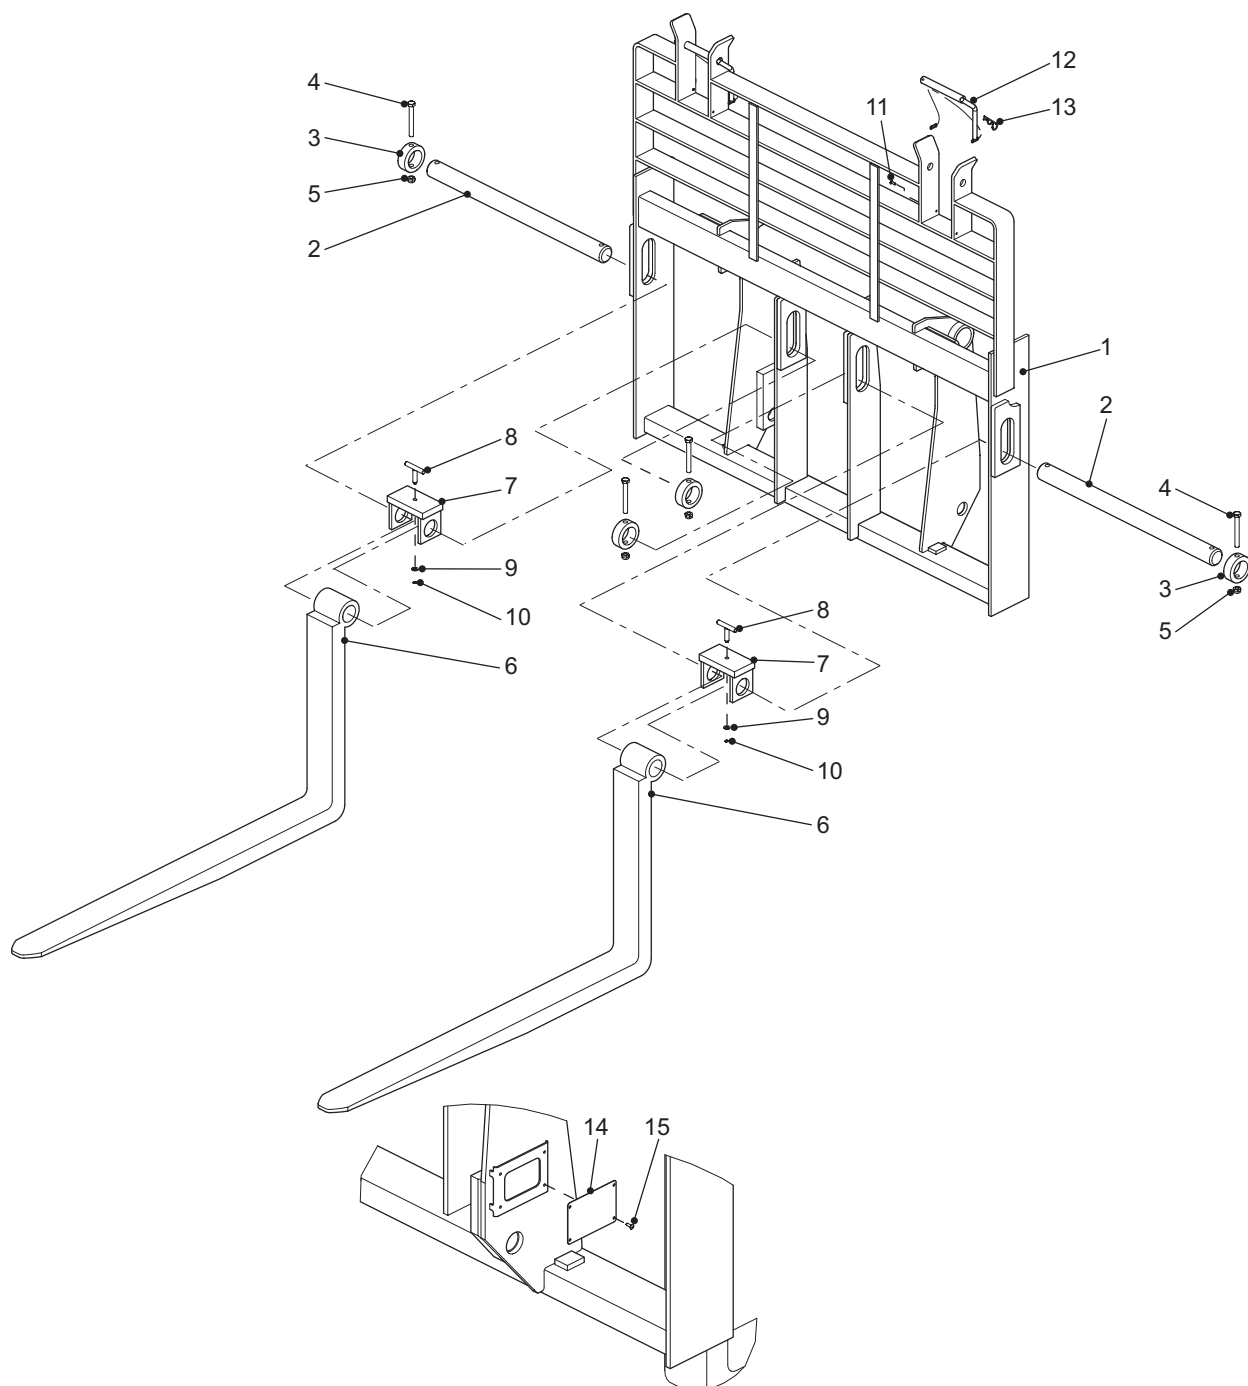


SPC007033

Floating Pallet Forks

[illegible]

Bales Pikes

Narrow Quick Attach

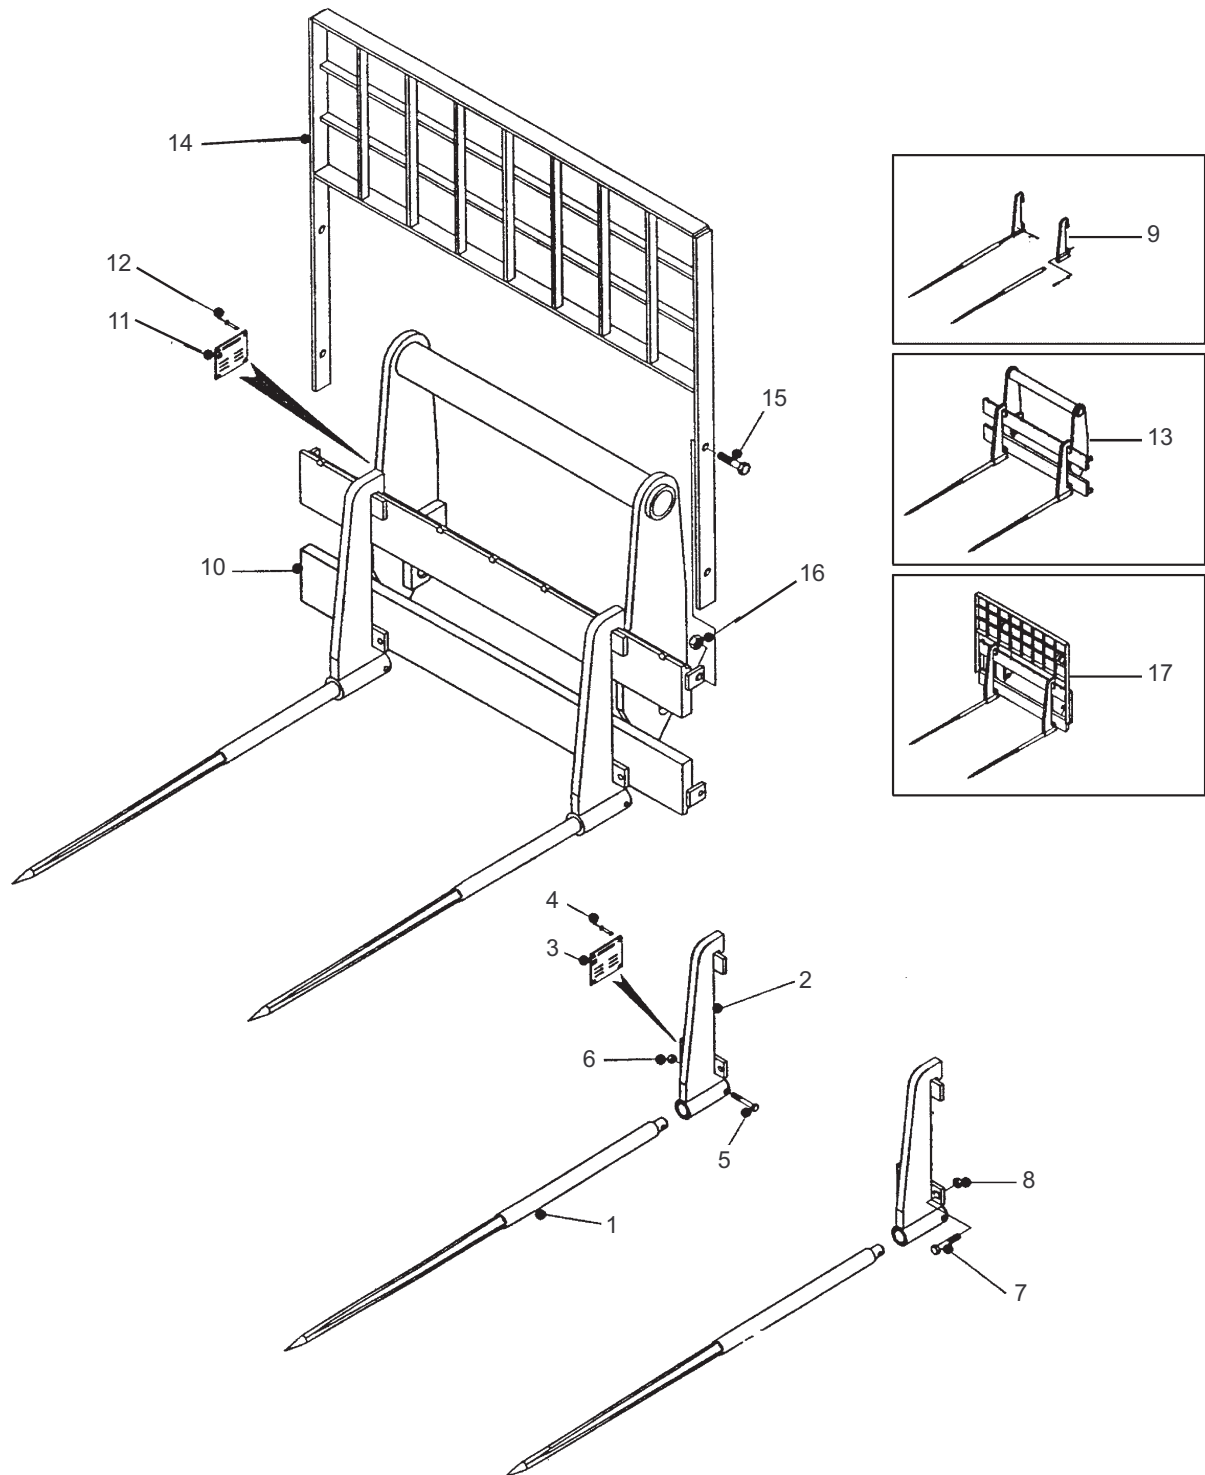


SPC007034

Bales Pikes

Narrow Quick Attach

[illegible]

Rigid Forks Holder Narrow Quick Attach

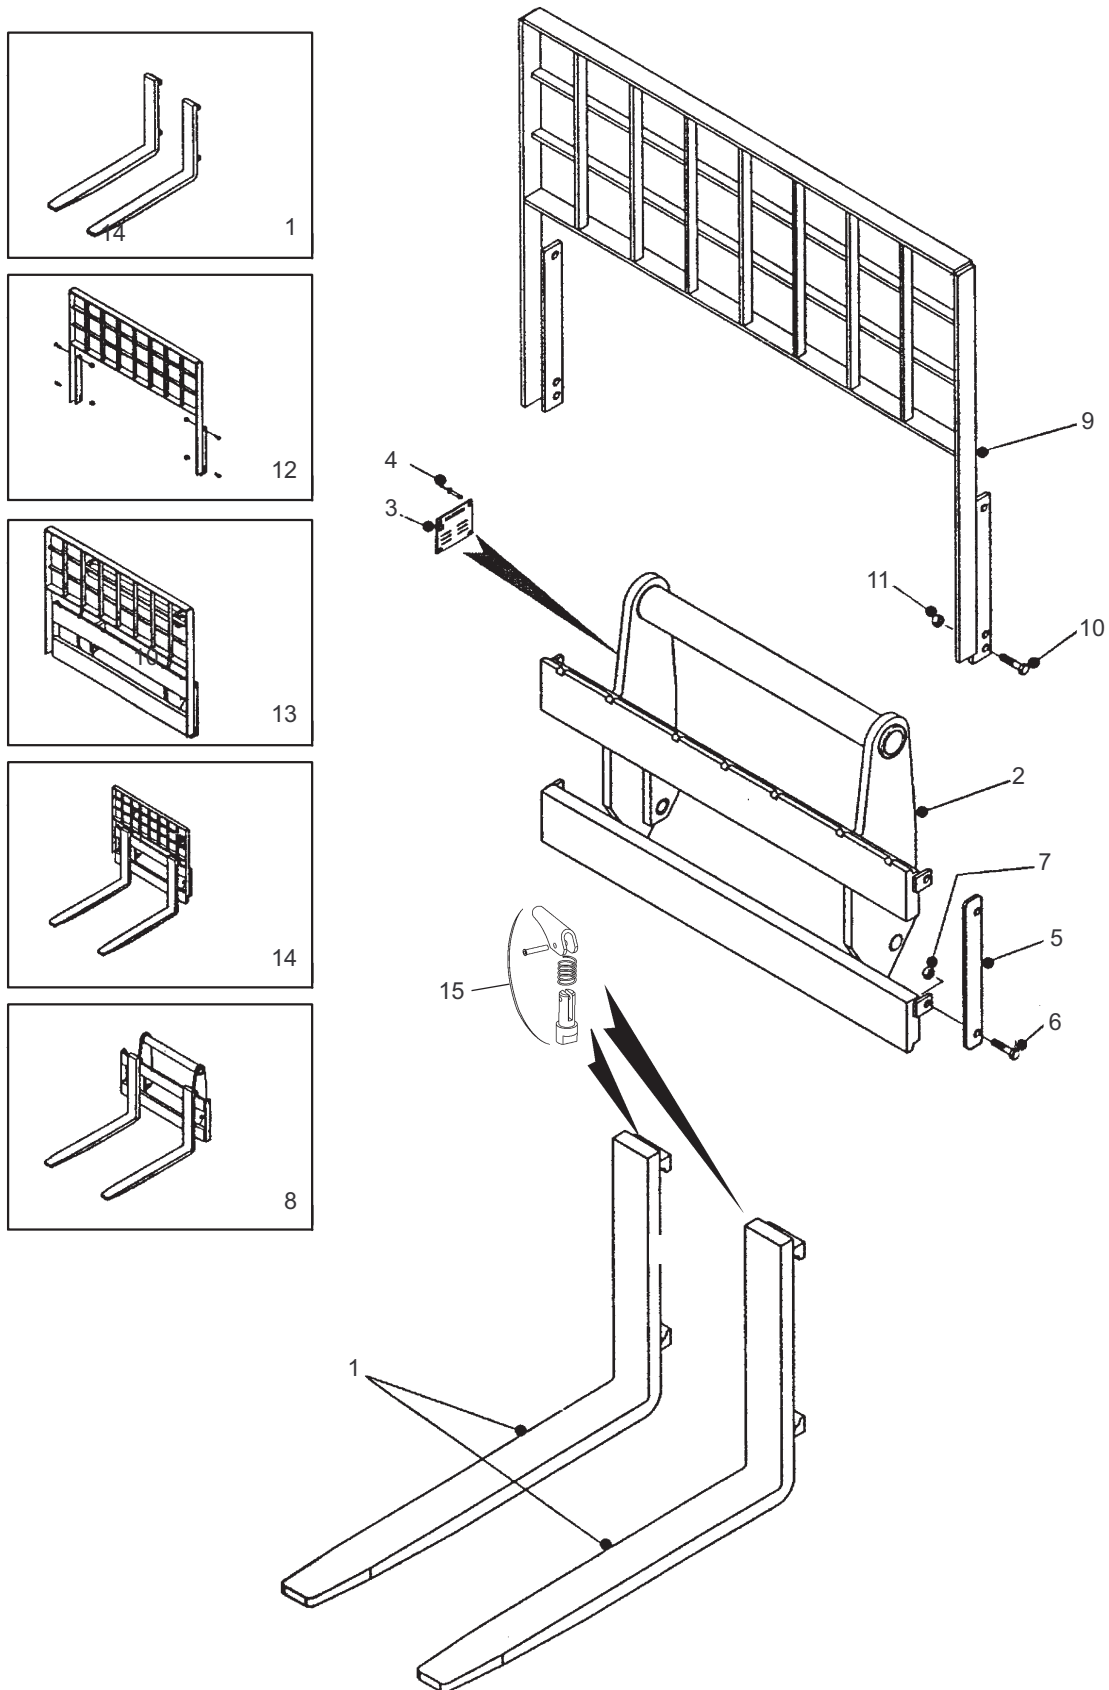


SPC007035

Rigid Forks Holder

Narrow Quick Attach

[illegible]

Side Shifter Assy Narrow Quick Attach

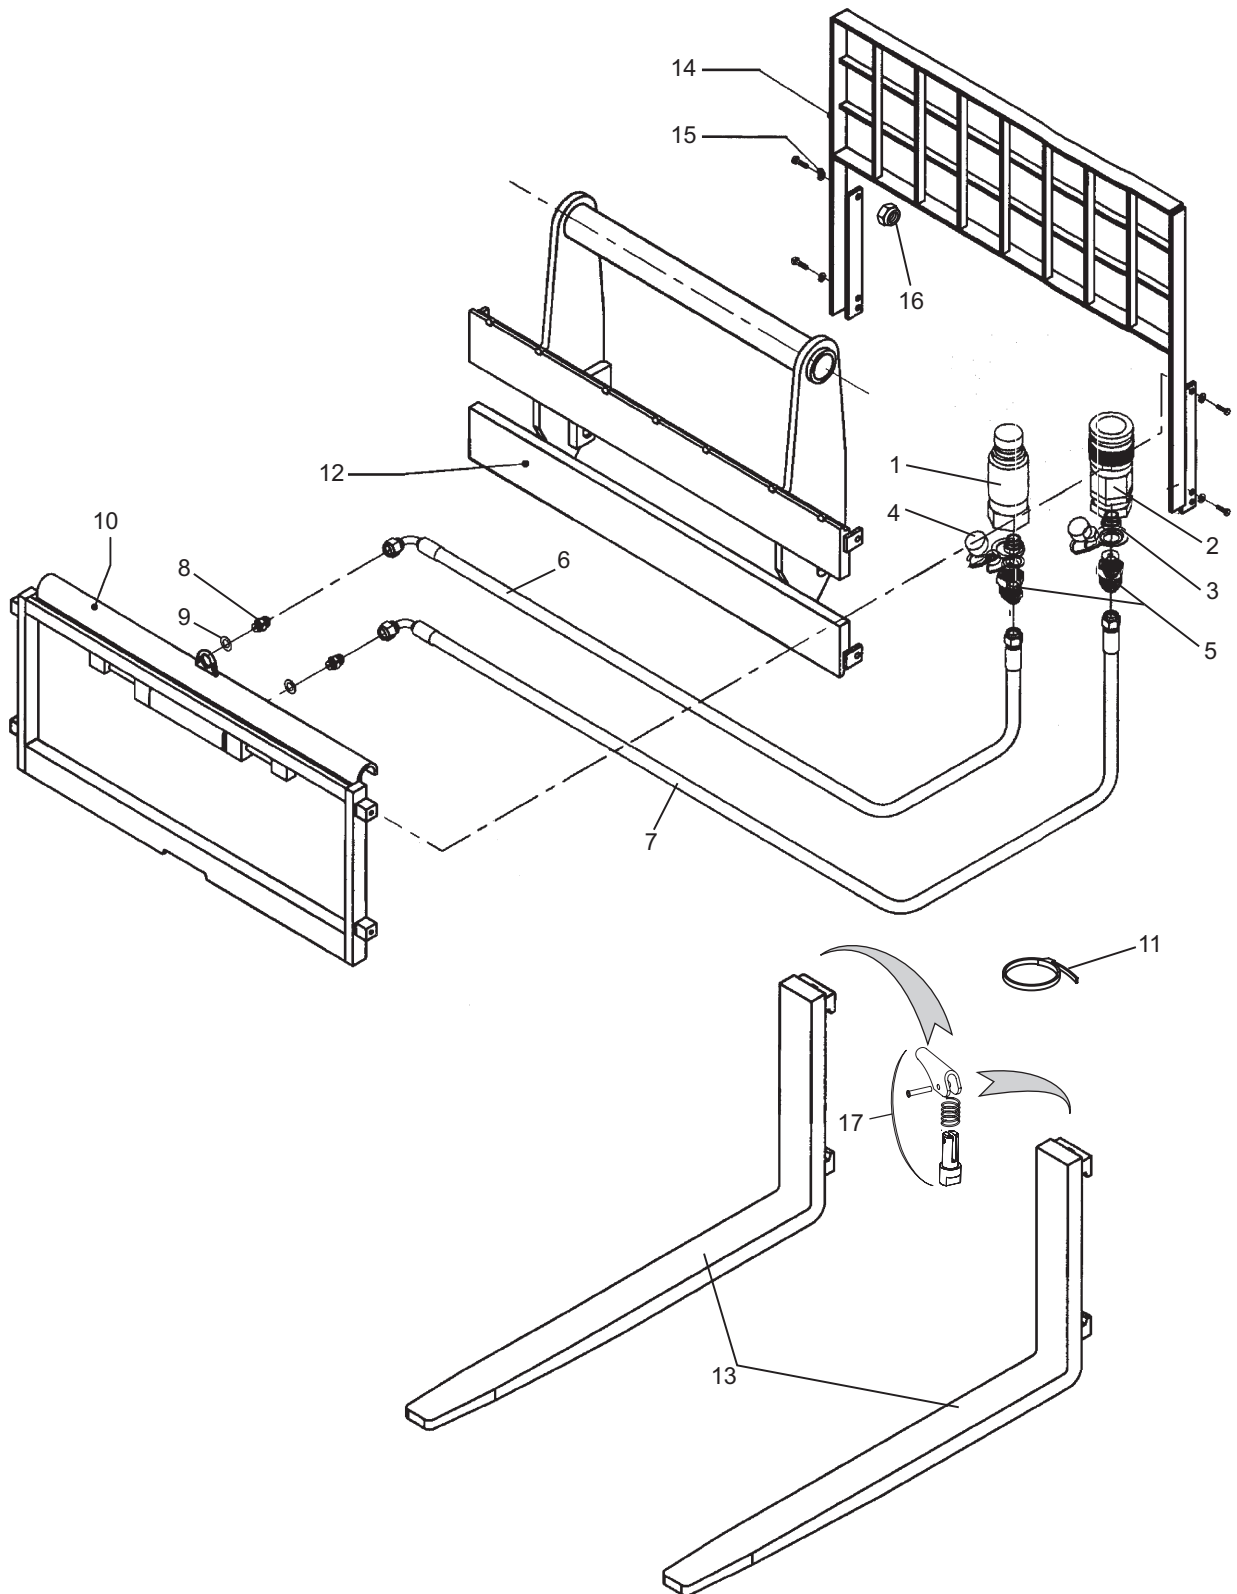

SPC007036


Side Shifter Assy

Narrow Quick Attach

[illegible]

Side Shifter Assy II

Narrow Quick Attach

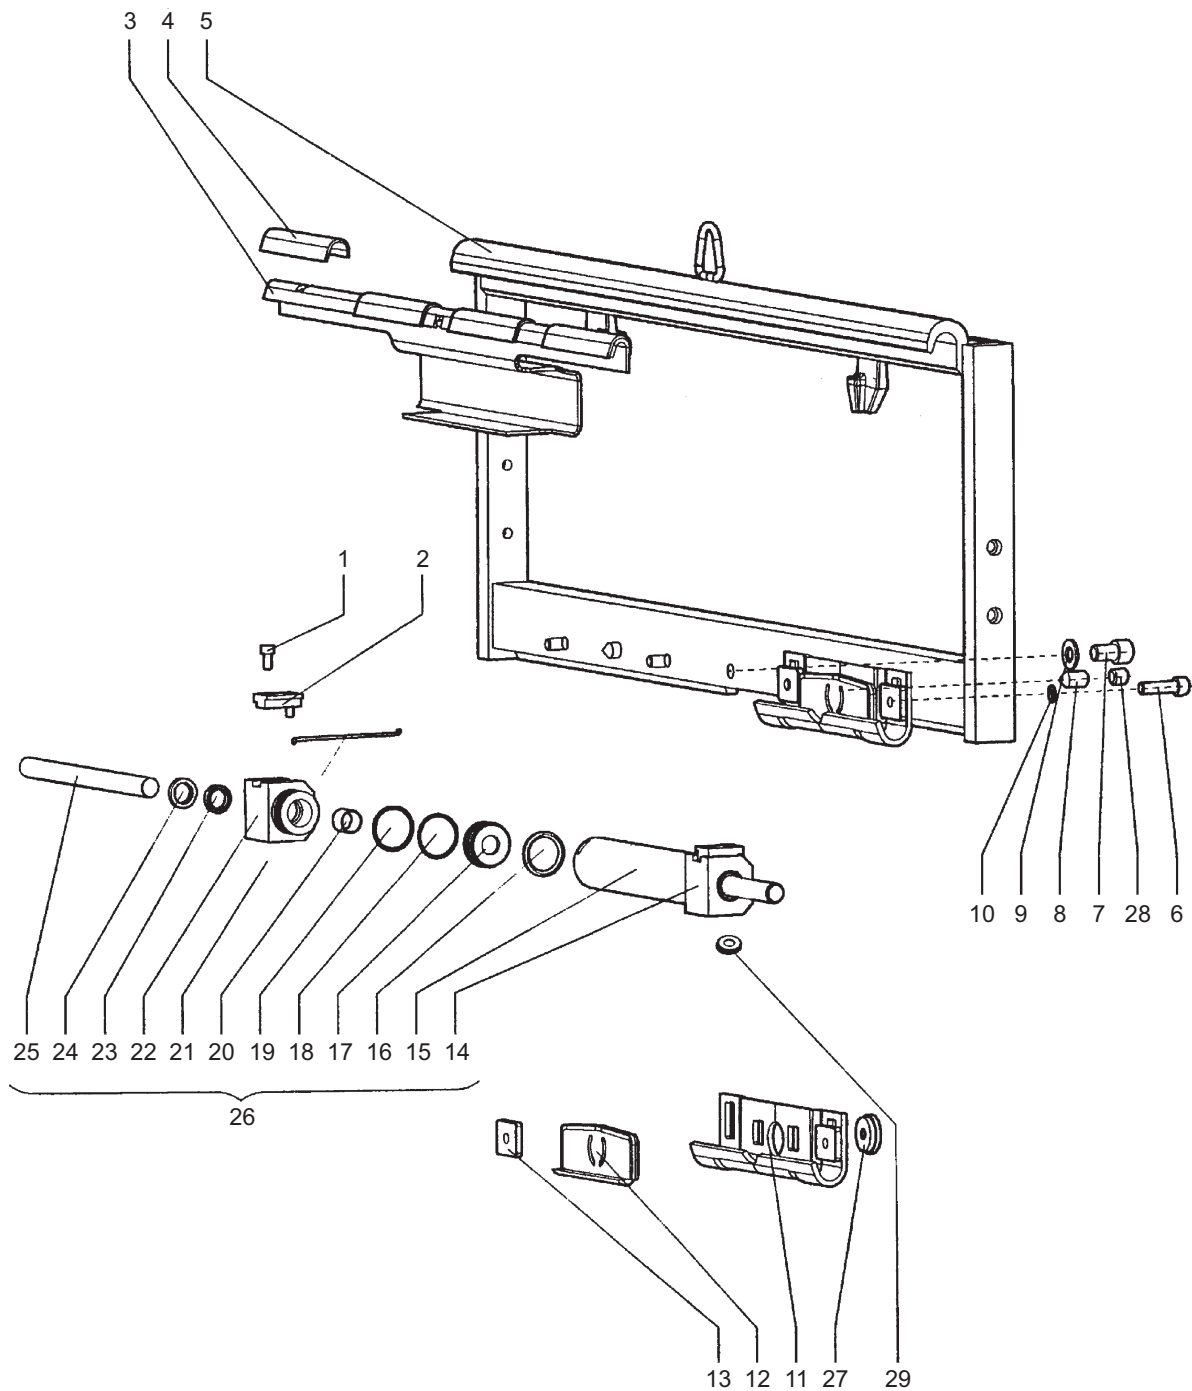

SPC007037


Side Shifter Assy II

Narrow Quick Attach

Item	Part Number	Denomination	Remarks	Serial Number	Qty
	78428.0	Side-Shifter assy	Width 1150 mm ; Pos. 1 to 30		1
1	97310.7	Screw			4
2	97311.5	Spacer			2
3	97312.3	Support			1
4	81636.3	Skate			4
5		Support			1
6	97313.1	Screw			4
7	97314.9	Screw			1
8	93003.2	Screw			1
9	97315.6	Washer			1
10	97316.4	Washer			4
11	97055.8	Hook inside			2
12	81635.5	Inner shoe			2
13	97317.2	Plate			4
14	97318.0	Plug			1
15		Cylinder-pipe	Order Pos. 26		1
16		Seal	Order Pos. 30		1
17	97319.8	Piston			1
18		Seal	Order Pos. 30		1
19		Seal	Order Pos. 30		1
20	89988.0	Bush			2
21	97320.6	Plug			2
22	97321.4	Cylinder-head	Order Pos. 26		1
23		Seal	Order Pos. 30		1
24		Seal	Order Pos. 30		1
25	89998.9	Rod			2
26	81476.4	Tube	Pos. 14 to 25		1
27	81533.2	Washer			2
28	93002.4	Screw			1
29	97322.2	Washer			2
30	89991.4	Seals kit	Pos. 16 + 18 + 19 + 23 + 24		1

Toothless Buckets

Narrow Quick Attach

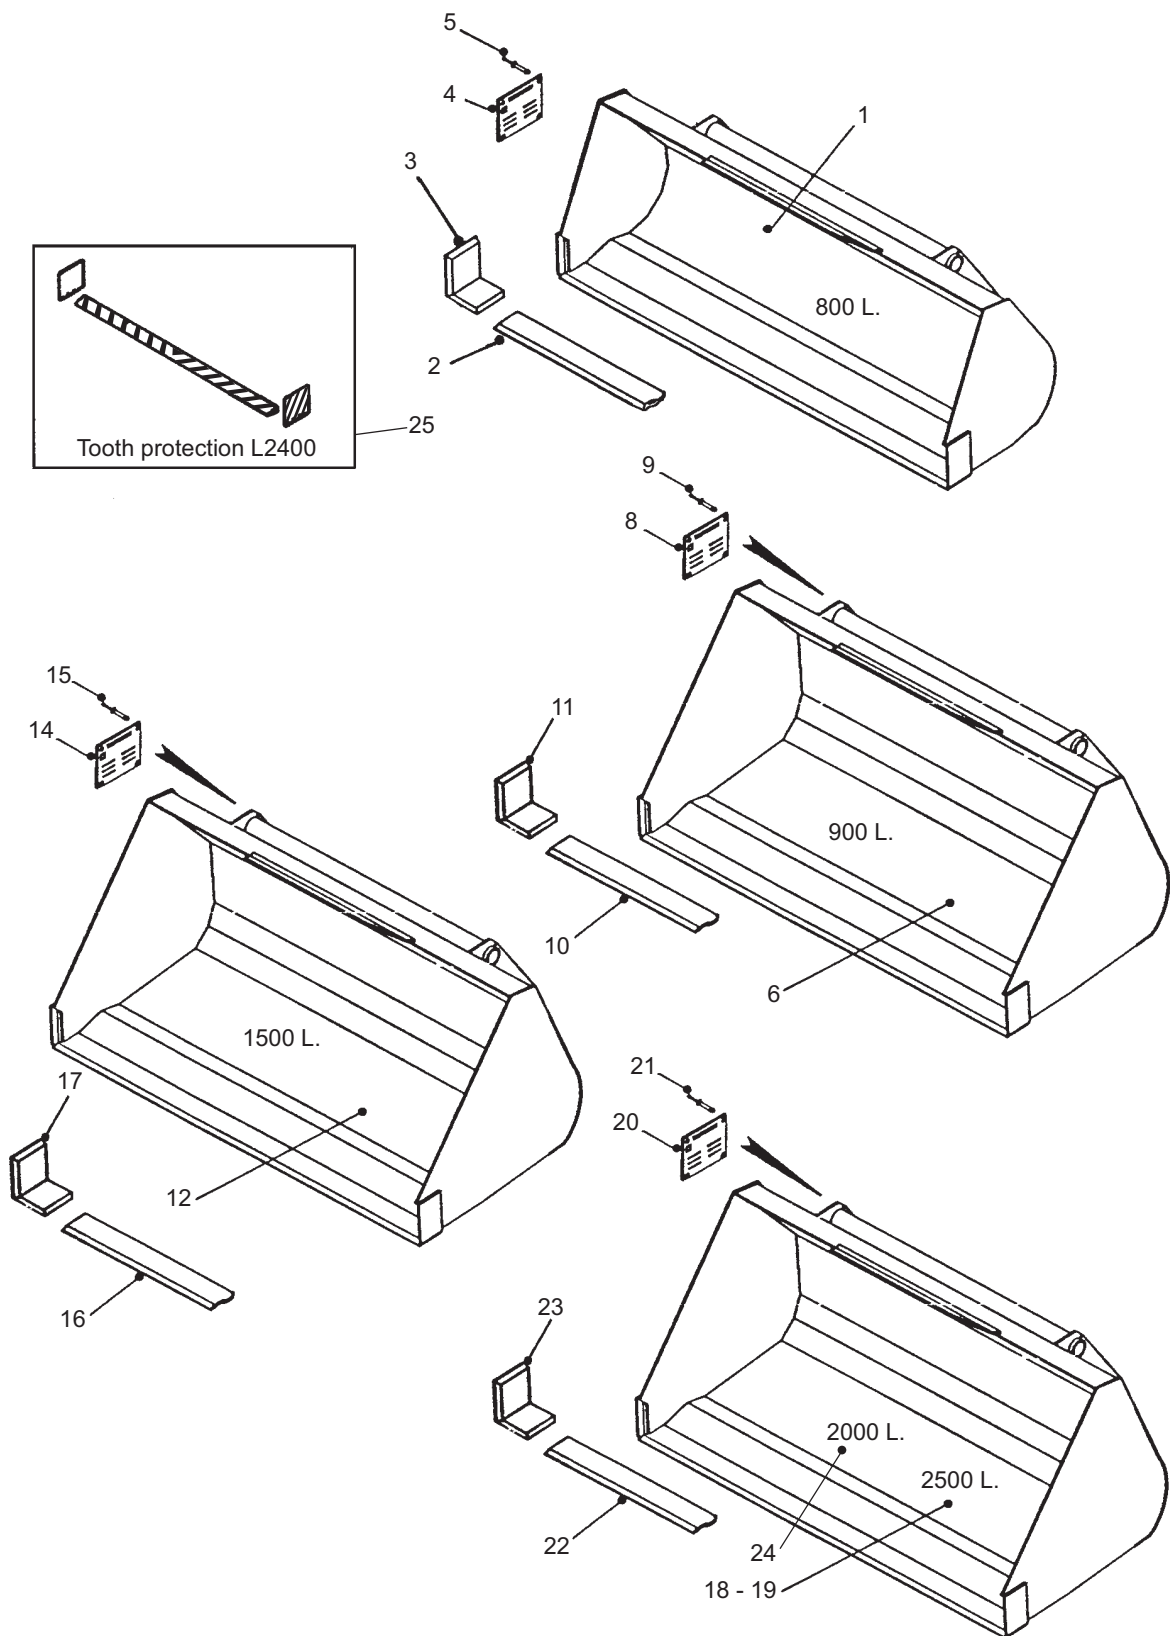



SPC007038

Toothless Buckets


Narrow Quick Attach

[illegible]

Toothed Bucket Narrow Quick Attach

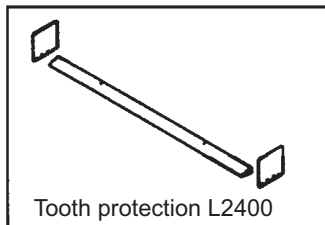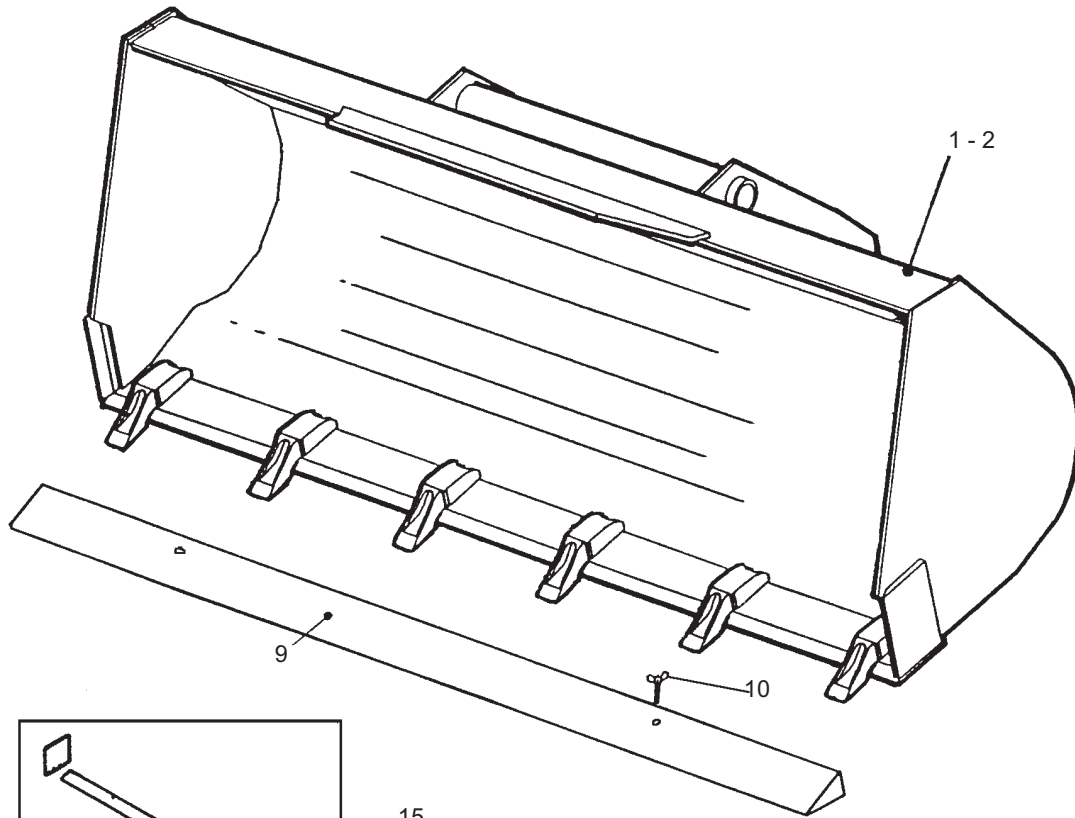

FDI-SAMBRON			
Route de l'Inde B.P. 71 54100 FROSTVILLER FRANCE			
Respecter la capacité du matériel et les équipements			
TYPE		ANNEE	
GODET 800L A.D.		----	
N° SERIE		MASSE A VIDE	
082038- - - -		495 KG	
☐ Distance du C.D.G. ☐ Capacité nominale ☐ Pression Maxi. ☐			
135 mm	2000 KG	---	Bar

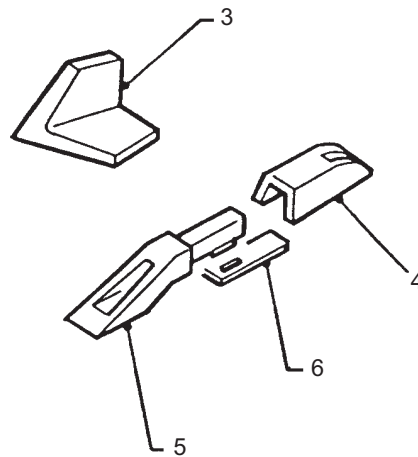

13

11

12

14


SPC007039

Toothed Bucket Narrow Quick Attach

[illegible]

Crane Jib & Extension Jib

Narrow Quick Attach

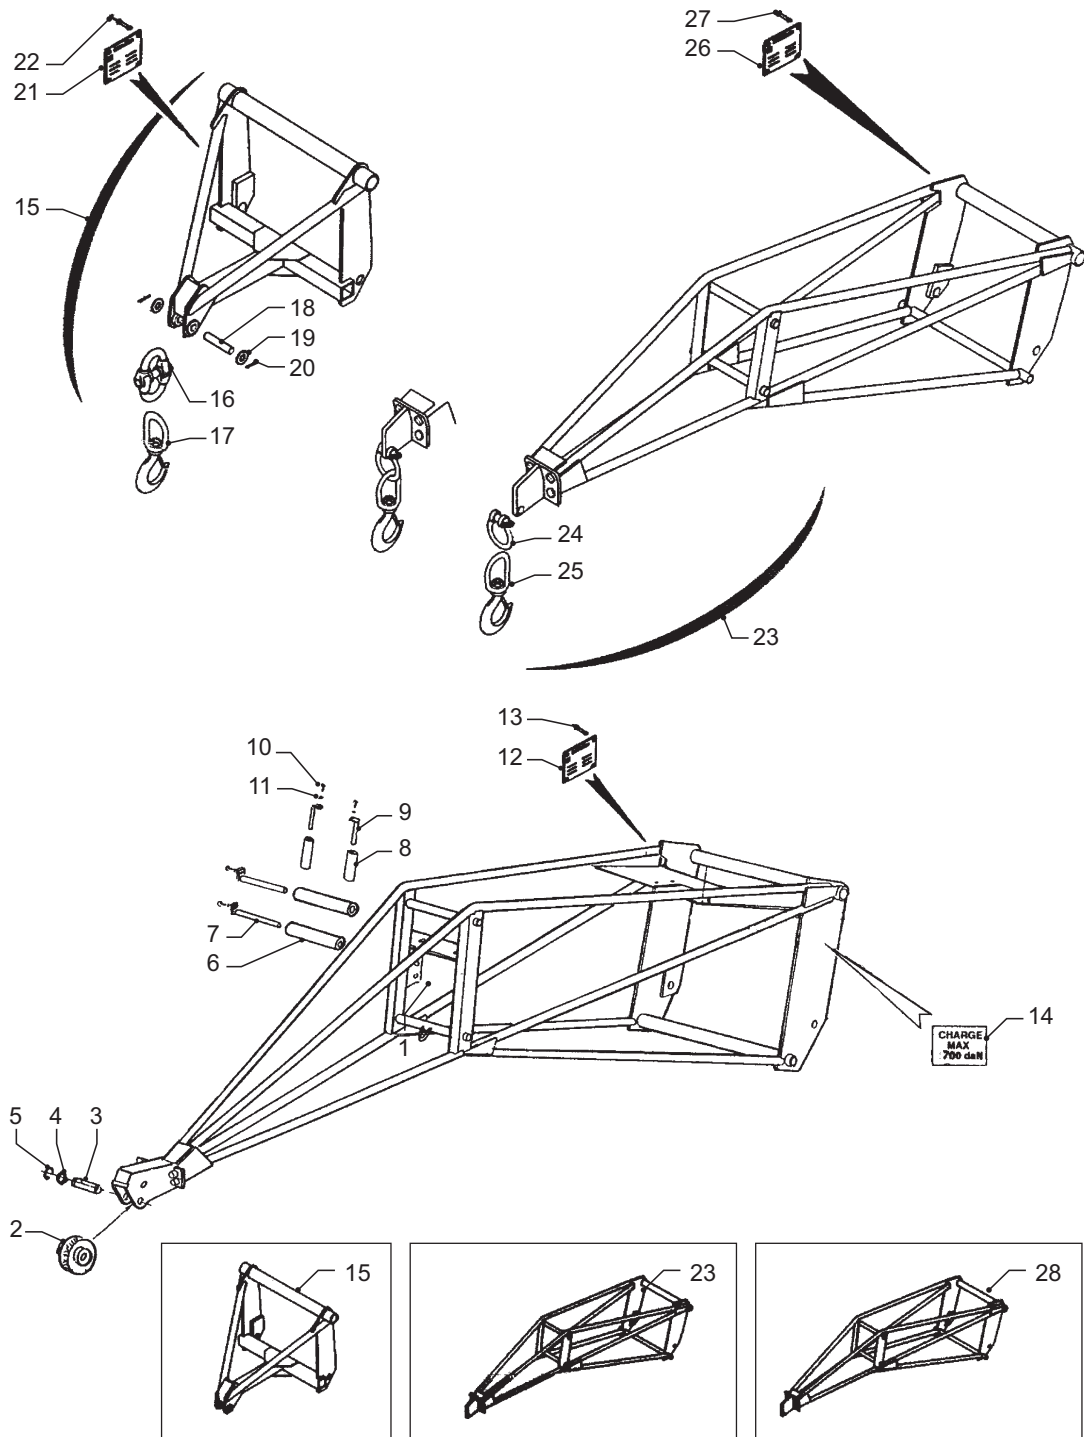

SPC007040


Crane Jib & Extension Jib

Narrow Quick Attach

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	65639.7	Jib for winch			1
2	65632.2	Pulley			1
3	65633.0	Spindle			2
4	56076.3	Washer			2
5	26747.6	Clip			2
6	65643.9	Roller			3
7	65507.6	Spindle			3
8	65645.4	Roller			2
9	65649.6	Spindle			2
10	01596.6	Screw			5
11	11463.7	Washer			5
12	82223.9	Plate			1
13	43824.2	Rivet			4
14	101475-29X	Adhesive			1
15	70022.9	Jib assy	Pos. 15 to 22		1
16	70012.0	Shackle			1
17	70011.2	Hook			1
18	69868.8	Spindle			1
19	10897.7	Washer			2
20	01763.2	Pin			2
21	80926.9	Plate			1
22	43824.2	Rivet			4
23	69445.5	Boom	Pos. 23 to 27		1
24	64060.7	Shackle			1
25	100383-02X	Hook			1
26	80936.8	Plate			1
27	43824.2	Rivet			4
28	69513.0	Boom	3.70 m		1

Bales Pikes

Wide Quick Attach

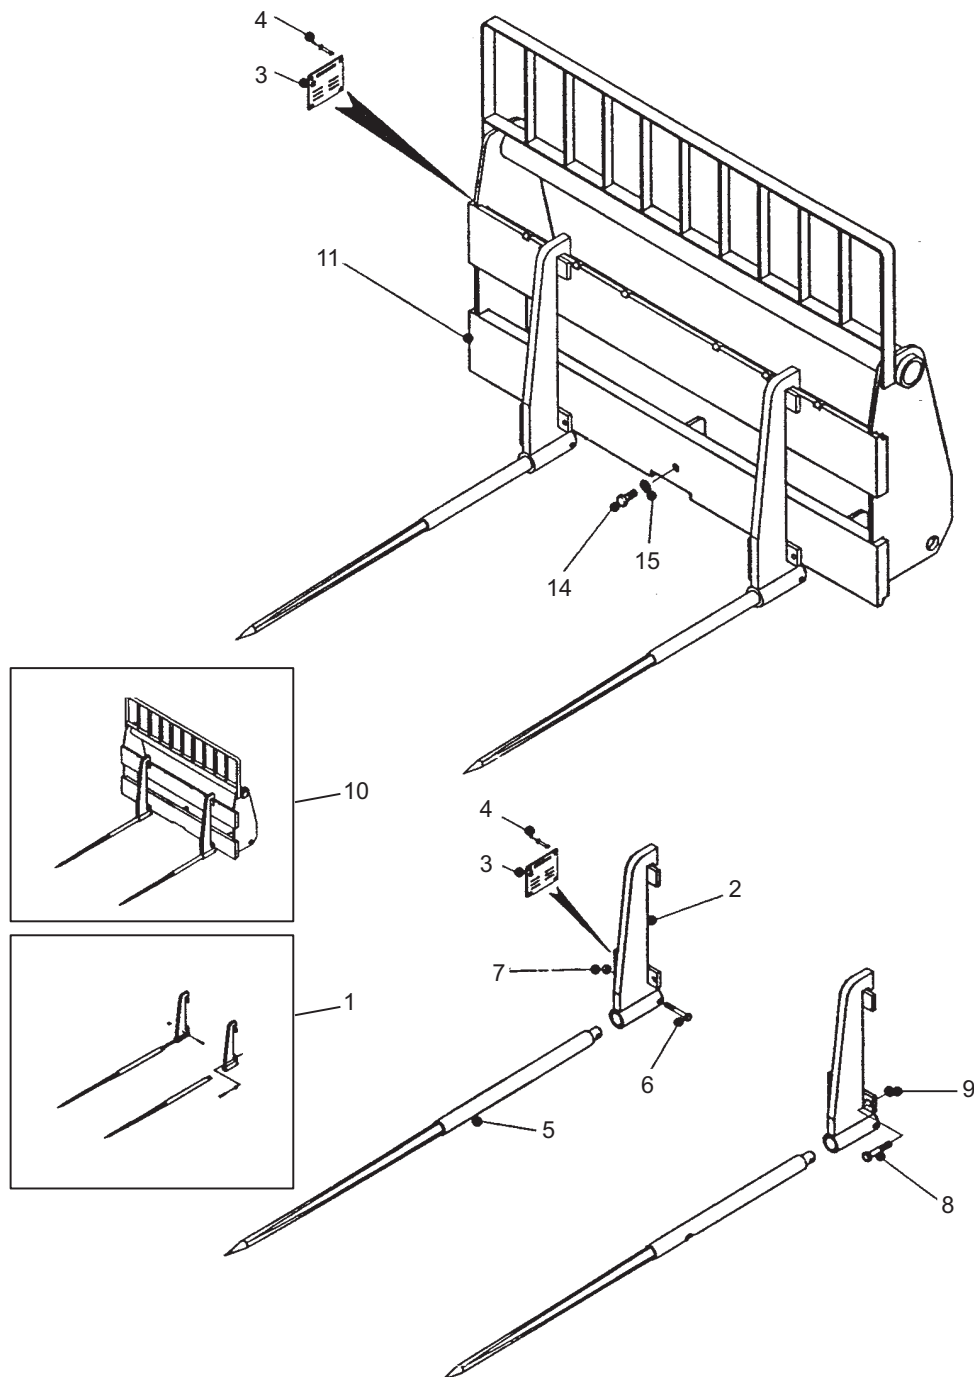


SPC007041

Bales Pikes

Wide Quick Attach

[illegible]

Rigid Forks Holder Wide Quick Attach

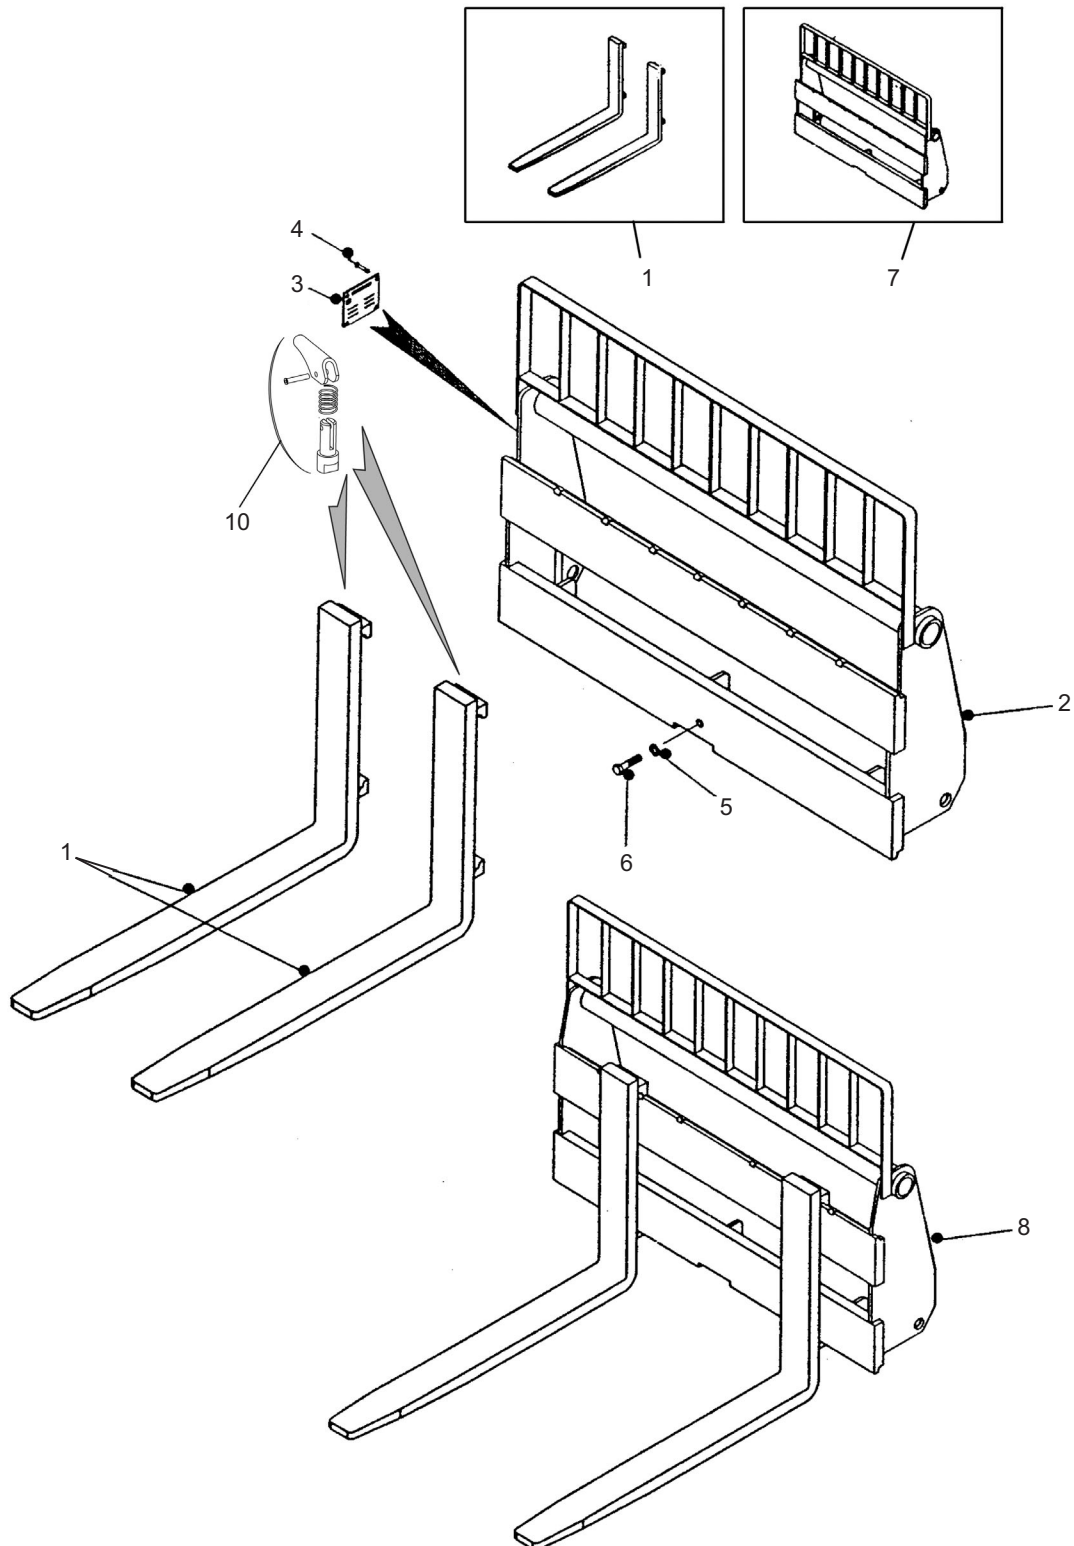


SPC007042

Rigid Forks Holder

Wide Quick Attach

[illegible]

Side Shifter Assy 1000 mm Wide Quick Attach

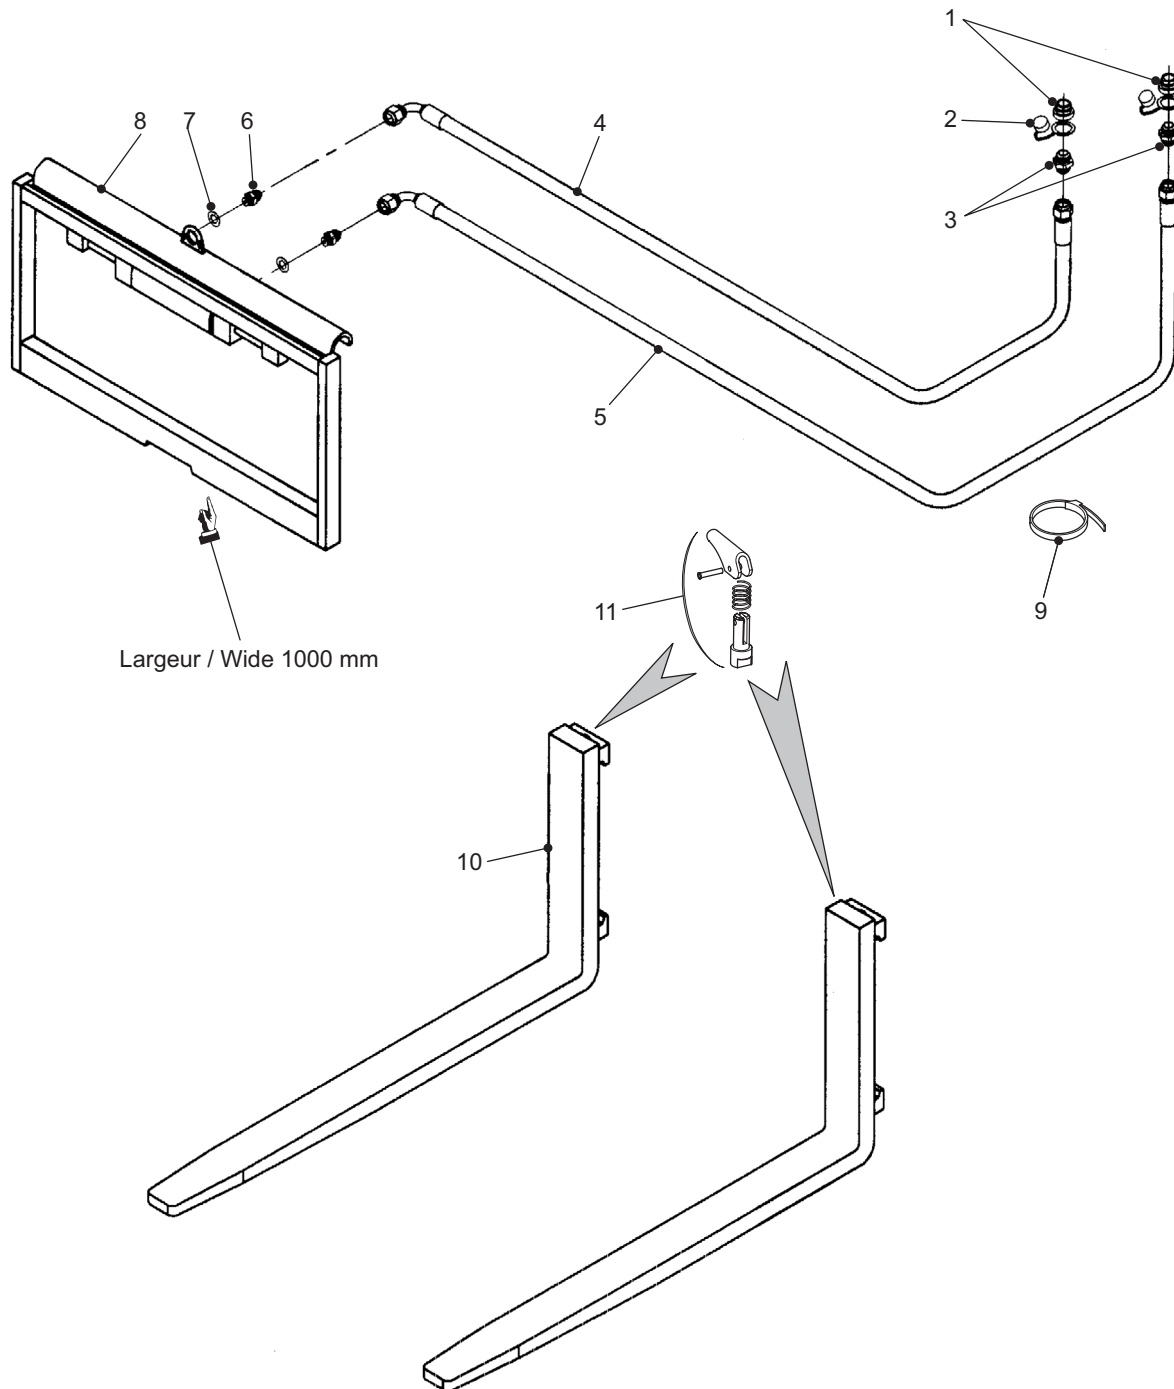


SPC007043

Side Shifter Assy 1000 mm Wide Quick Attach

[illegible]

Side Shifter Assy 1150 mm Wide Quick Attach

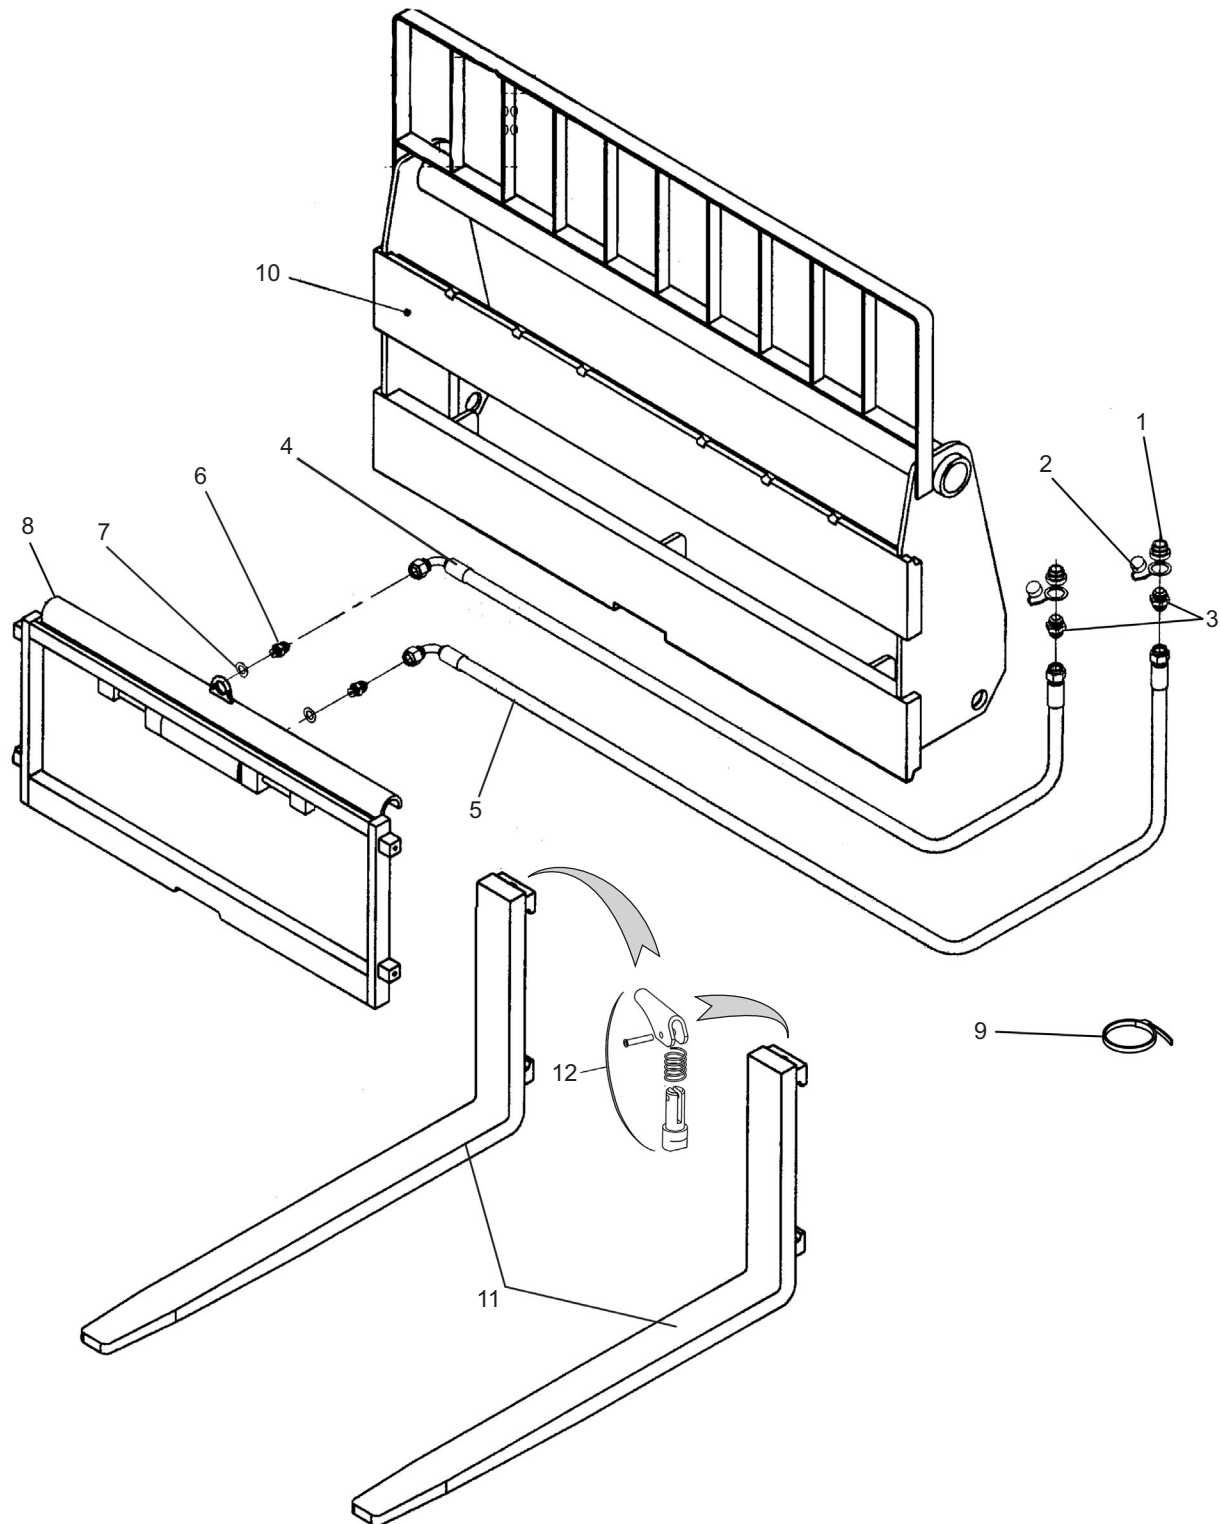


SPC007044

Side Shifter Assy 1150 mm Wide Quick Attach

[illegible]

Side Shifter Assy II

Wide Quick Attach

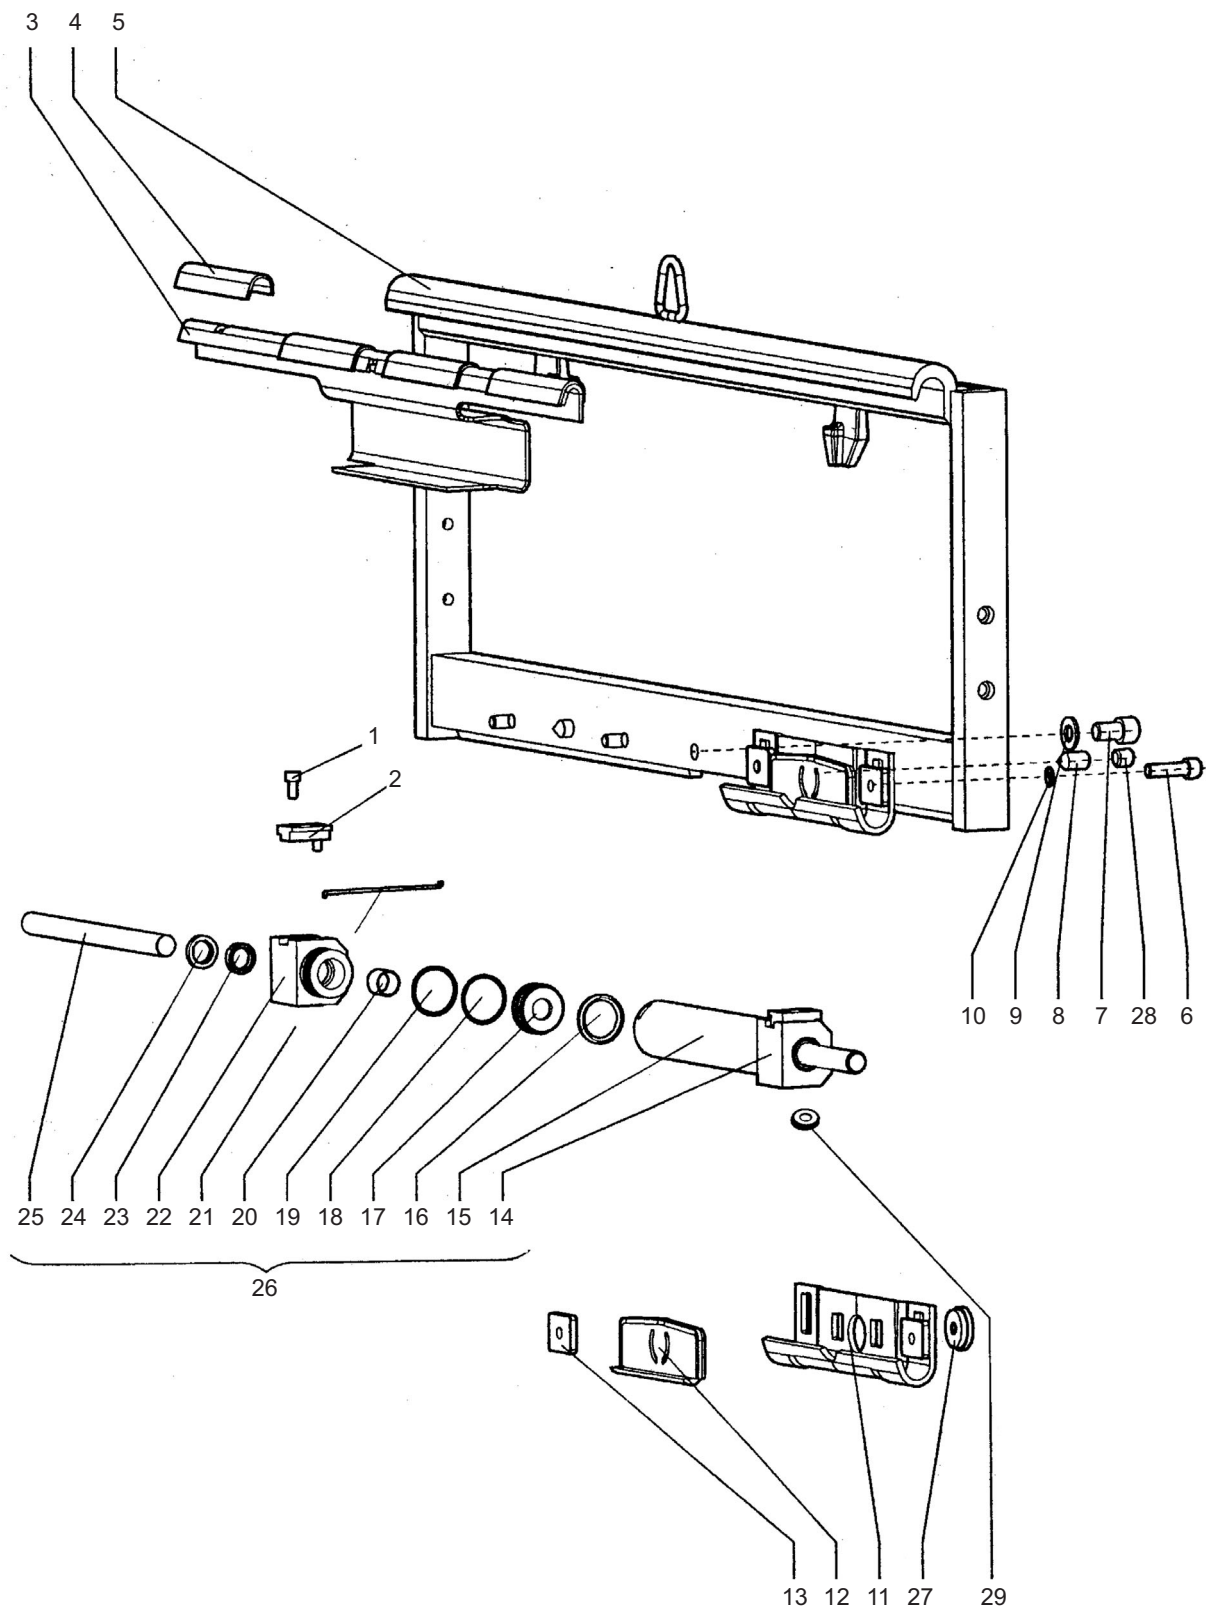

SPC007045

Side Shifter Assy II


Wide Quick Attach

Item	Part Number	Denomination	Remarks	Serial Number	Qty
	78428.0	Side-Shifter assy	Width 1150 mm ; Pos. 1 to 30		1
	78486.8	Carriage	Width 1000 mm ; Pos. 1 to 30		1
1	97310.7	Screw			4
2	97311.5	Spacer			2
3	97312.3	Support			1
4	81636.3	Skate			4
5		Support			1
6	97313.1	Screw			4
7	97314.9	Screw			1
8	93003.2	Screw			1
9	97315.6	Washer			1
10	97316.4	Washer			4
11	97055.8	Hook inside			2
12	81635.5	Inner shoe			2
13	97317.2	Plate			4
14	97318.0	Plug			1
15		Cylinder pipe	Order Pos. 26		1
16		Seal	Order Pos. 30		1
17	97319.8	Piston			1
18		Seal	Order Pos. 30		1
19		Seal	Order Pos. 30		1
20	89988.0	Bush			2
21	97320.6	Plug			2
22	97321.4	Cylinder-head	Order Pos. 26		1
23		Seal	Order Pos. 30		1
24		Seal	Order Pos. 30		1
25	89998.9	Rod			2
26	81476.4	Tube	Pos. 14 to 25		1
27	81533.2	Washer			2
28	93002.4	Screw			1
29	97322.2	Washer			2

Side Shifter Assy II

Wide Quick Attach

Recurrence of previous drawing

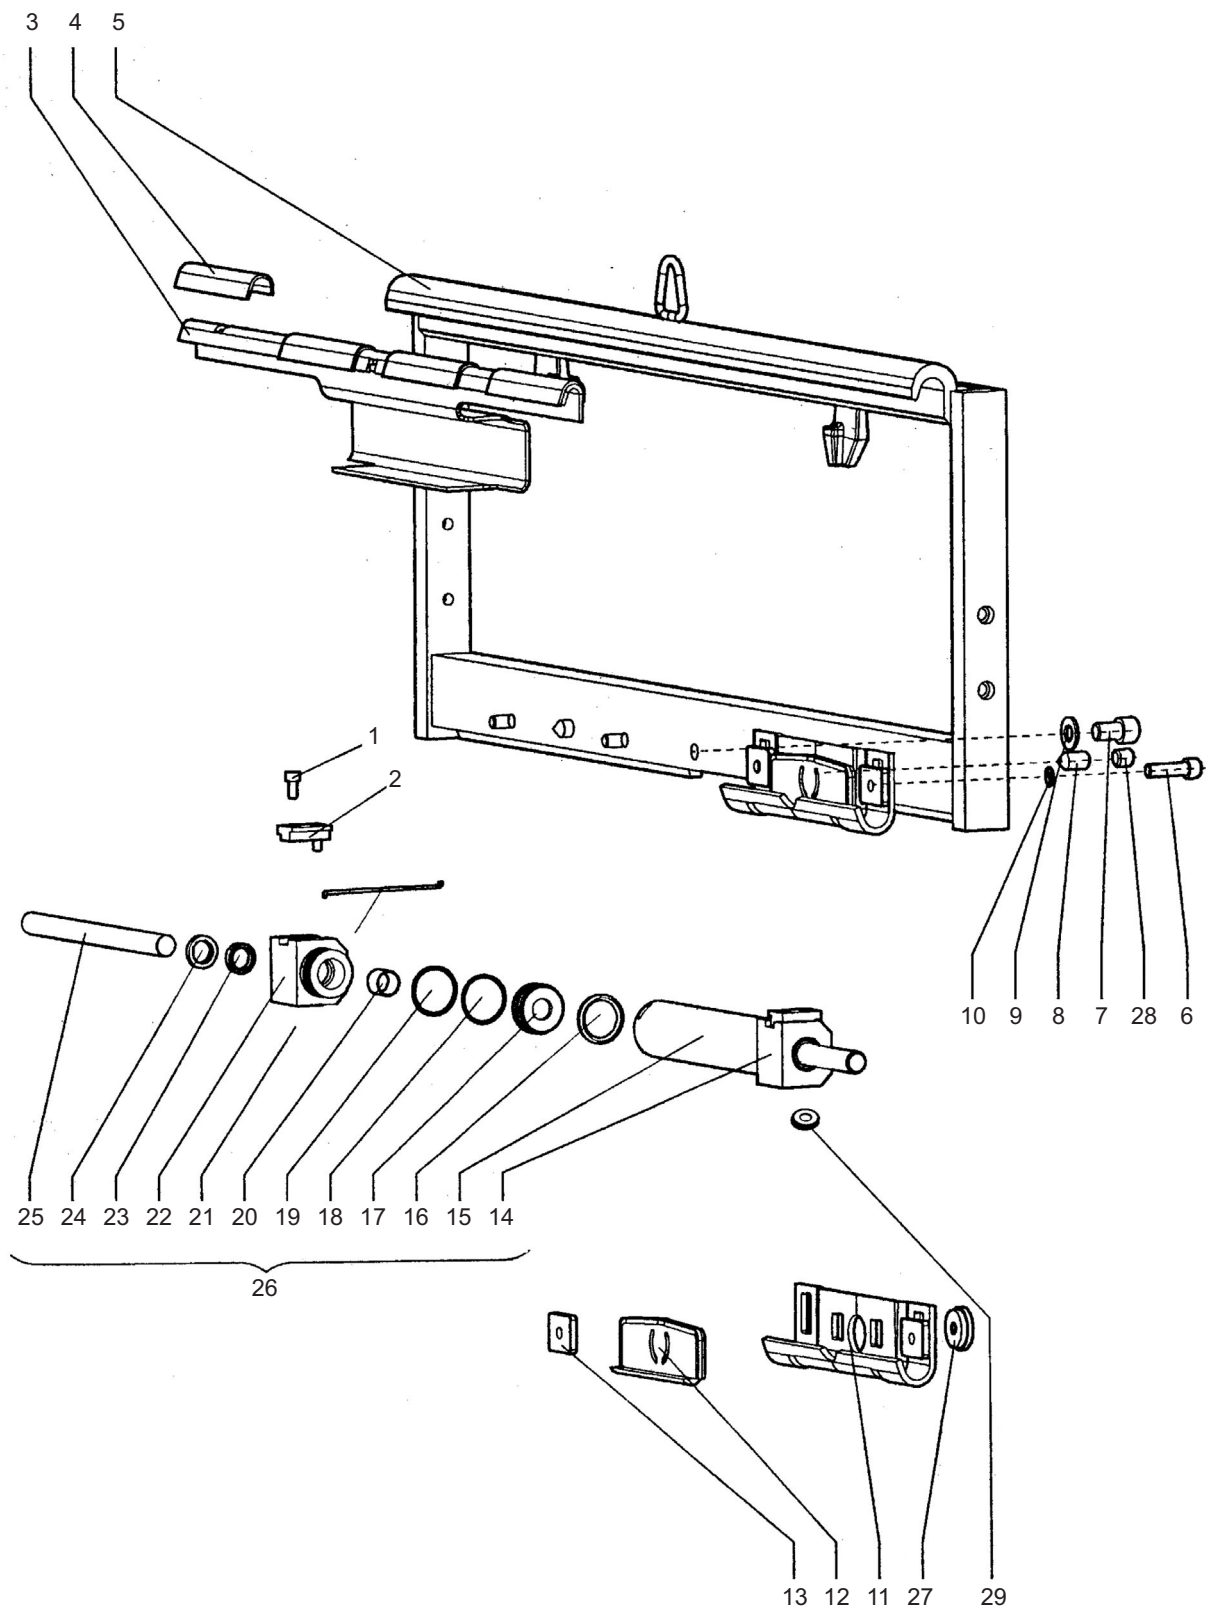


SPC007045

Side Shifter Assy II

Wide Quick Attach

[illegible]

Toothless Buckets Wide Quick Attach

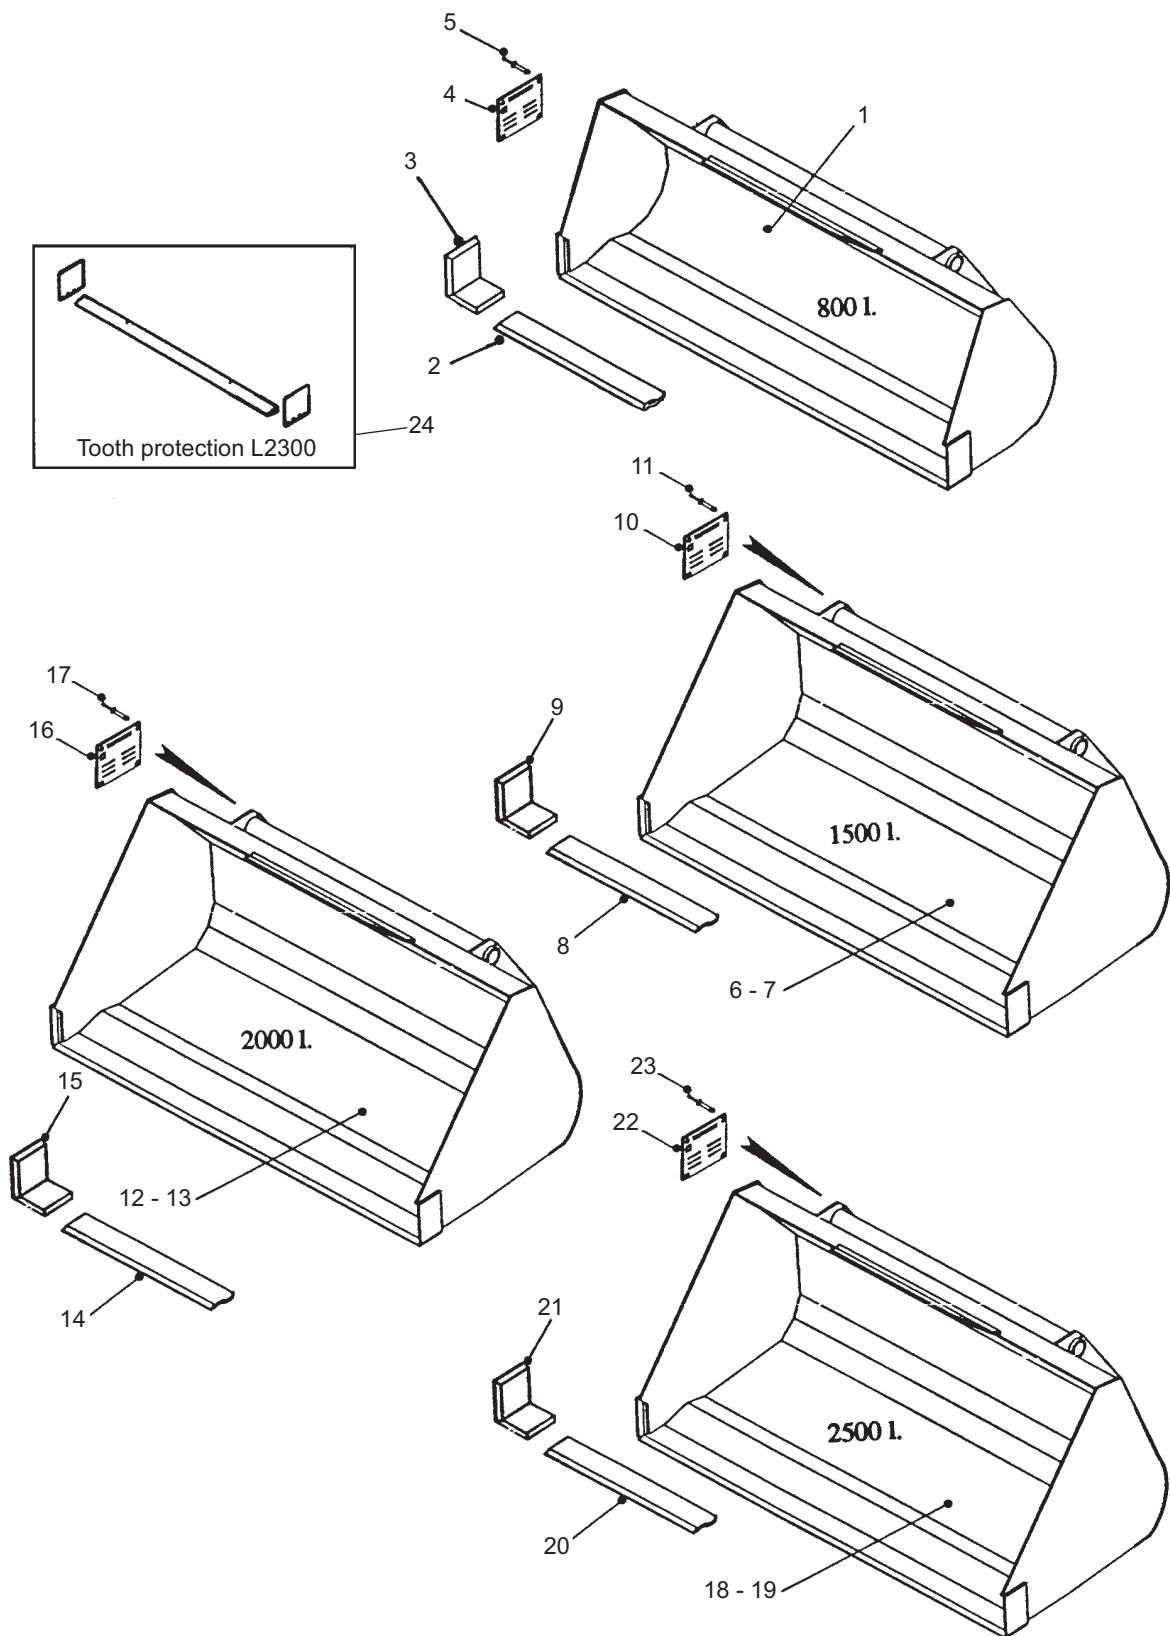



SPC007046

Toothless Buckets


Wide Quick Attach

[illegible]

Toothed Bucket Wide Quick Attach

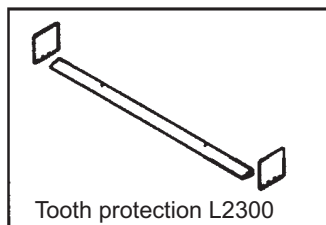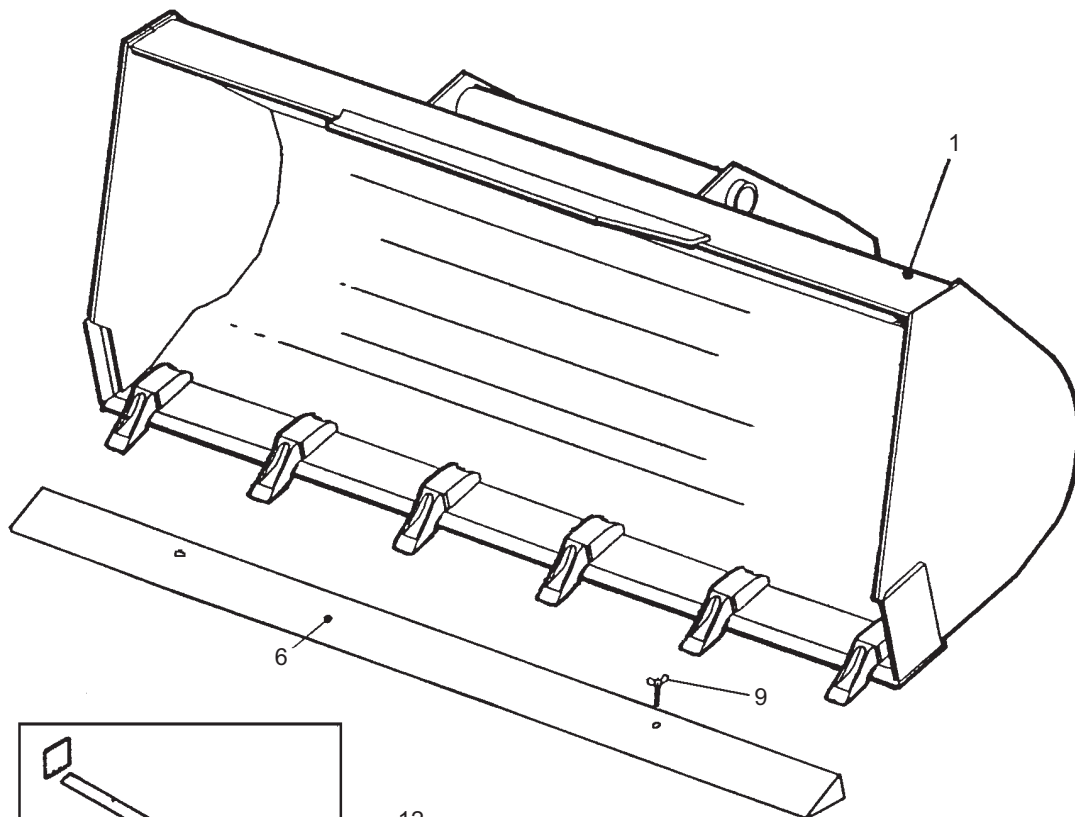

FDI-SAMBRON			
Route de lances B.P. 71 54100 FROSTVILLER FRANCE			
Respecter la capacité du matériel et l'équipement			
TYPE		ANNEE	
GODET 800L A.D.		----	
N° SERIE		MASSE A VIDE	
082029- - - -		495 KG	
☐ Distance du C.D.G. Capacité nominale Pression Maxi. ☐			
135 mm		2000 KG --- Bar	

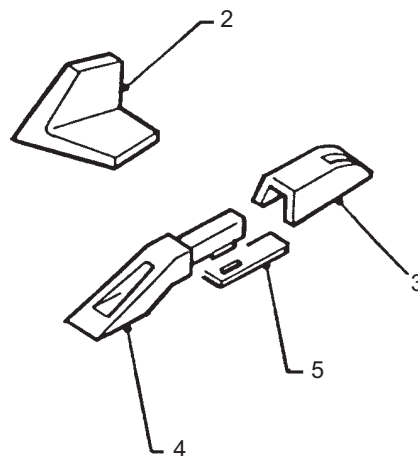


SPC007047

Toothed Bucket Wide Quick Attach

[illegible]

Bucket with Grab Wide Quick Attach

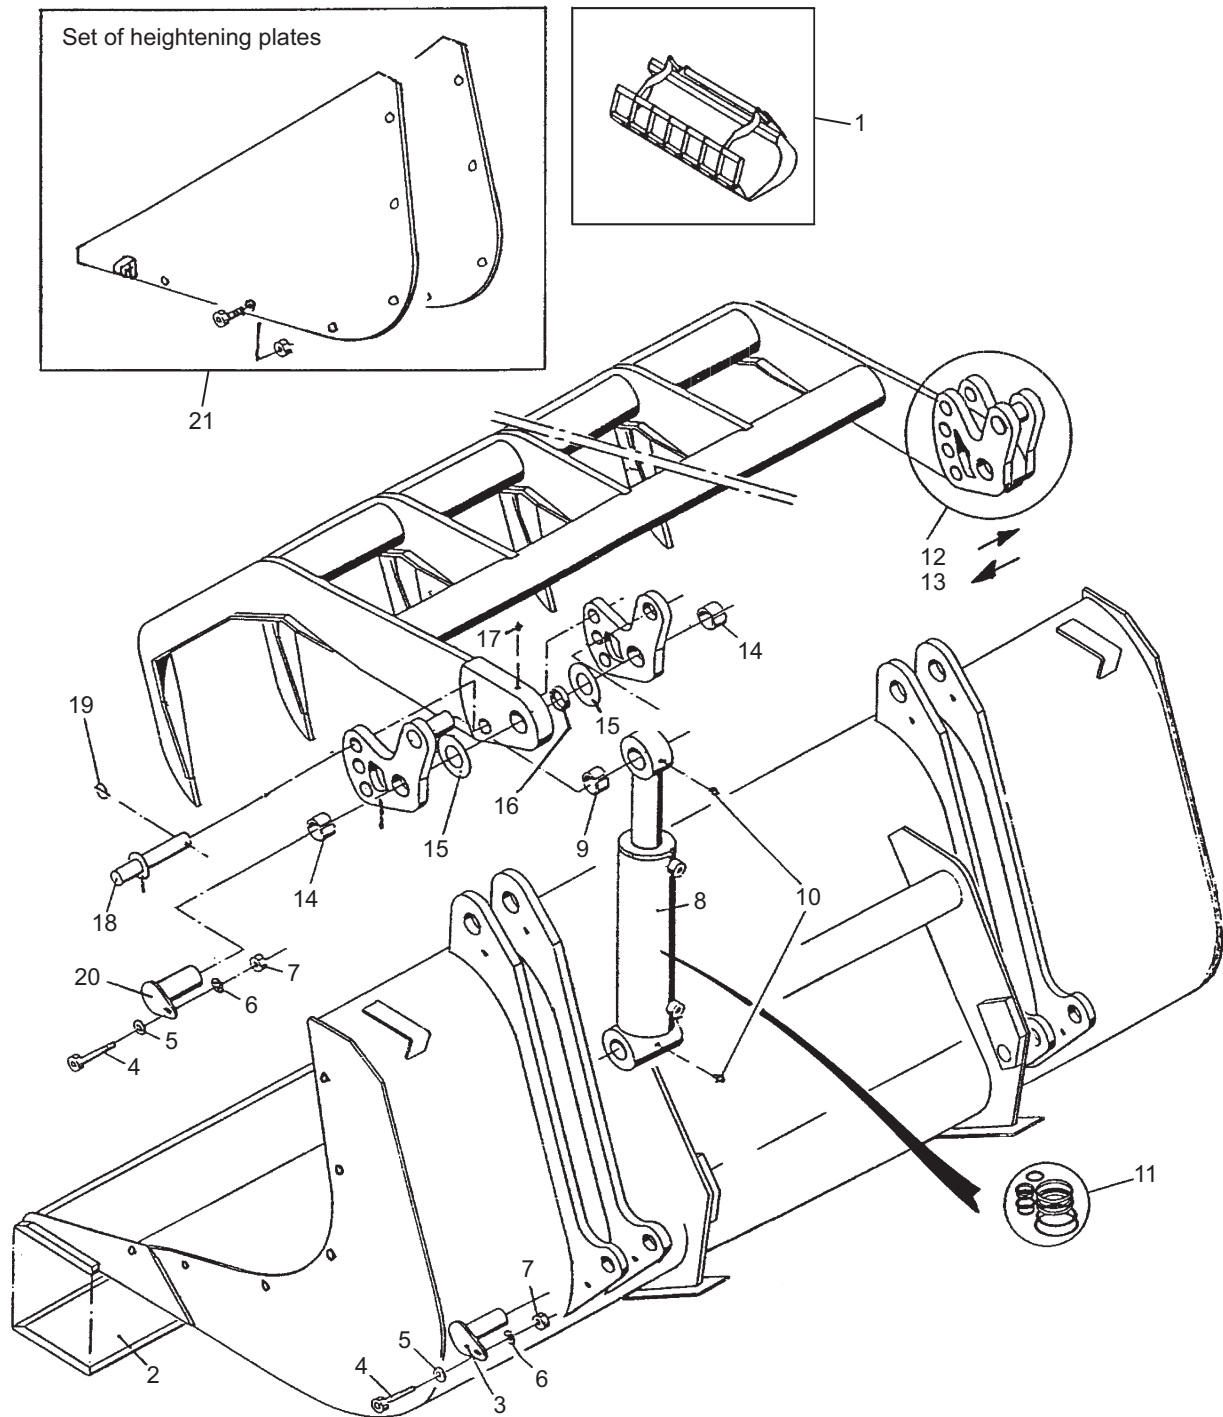

SPC007048


Bucket with Grab

Wide Quick Attach

[illegible]

Bucket with Grab - Hydraulics

Wide Quick Attach

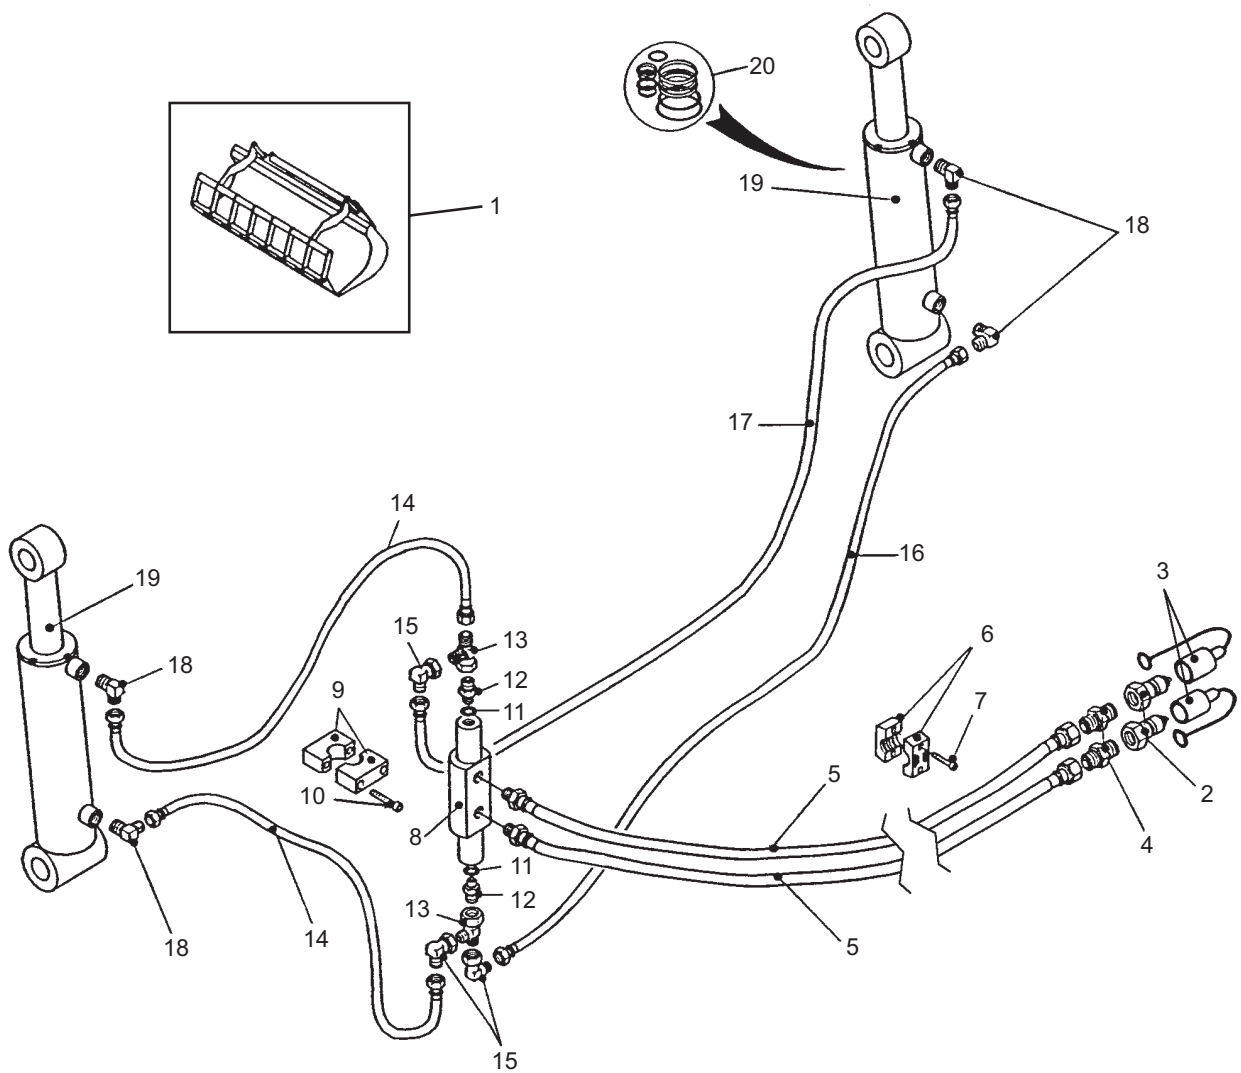

SPC007049


Bucket with Grab - Hydraulics

Wide Quick Attach

[illegible]

Manure Fork with Grab

Wide Quick Attach

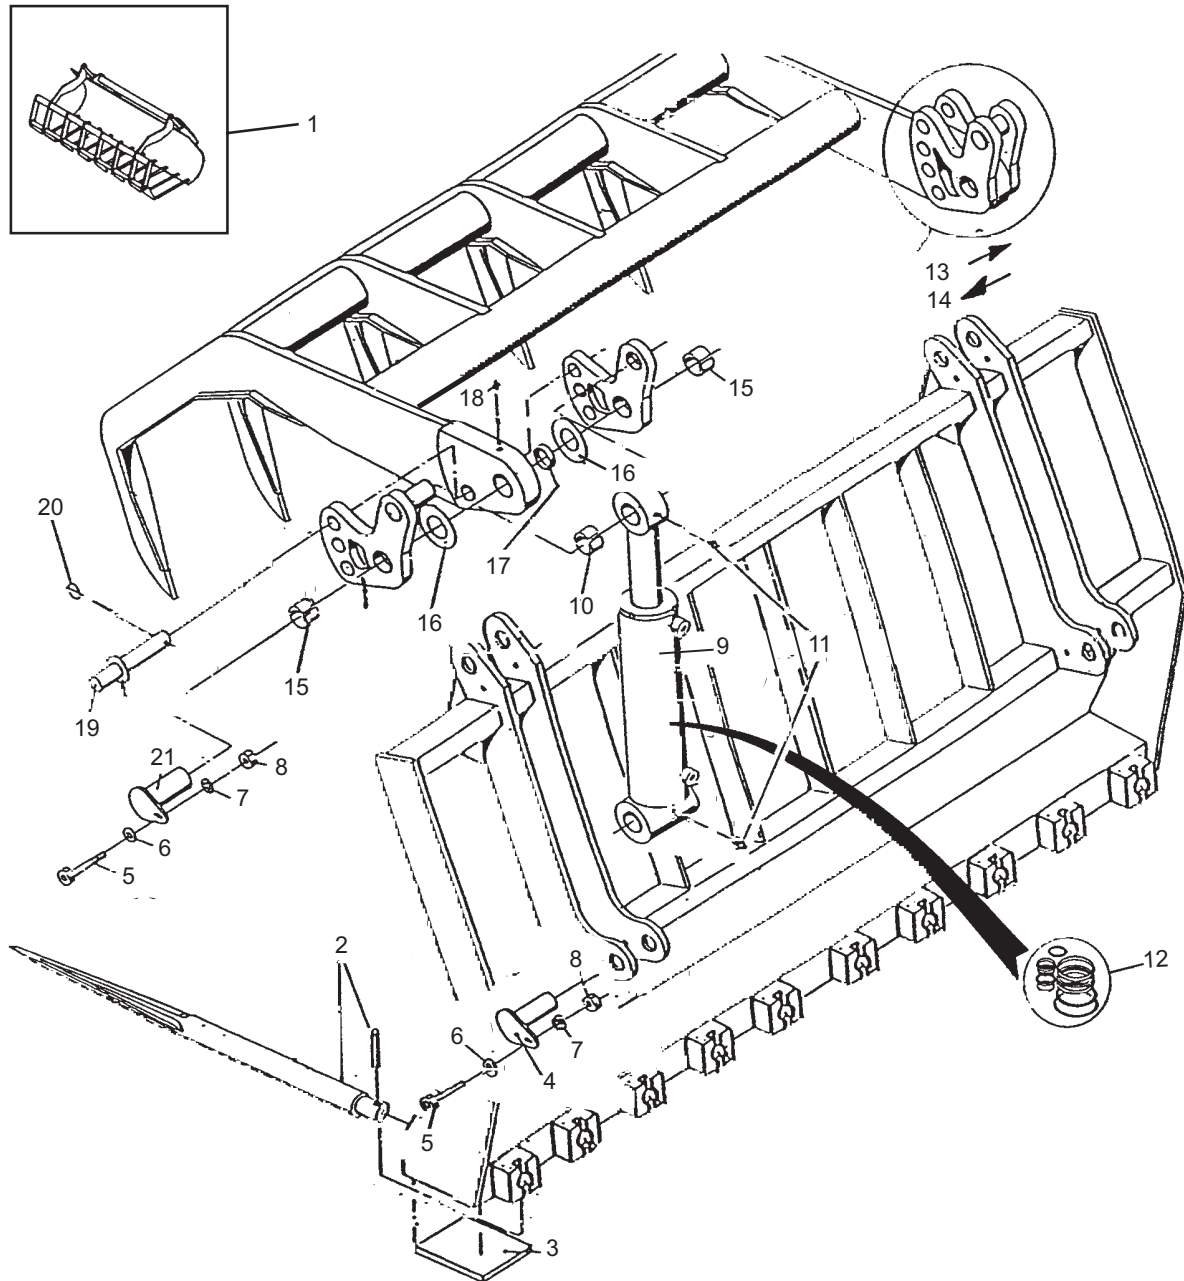


SPC007050

Manure Fork with Grab Wide Quick Attach

[illegible]

Manure Fork with Grab - Hydraulics

Wide Quick Attach

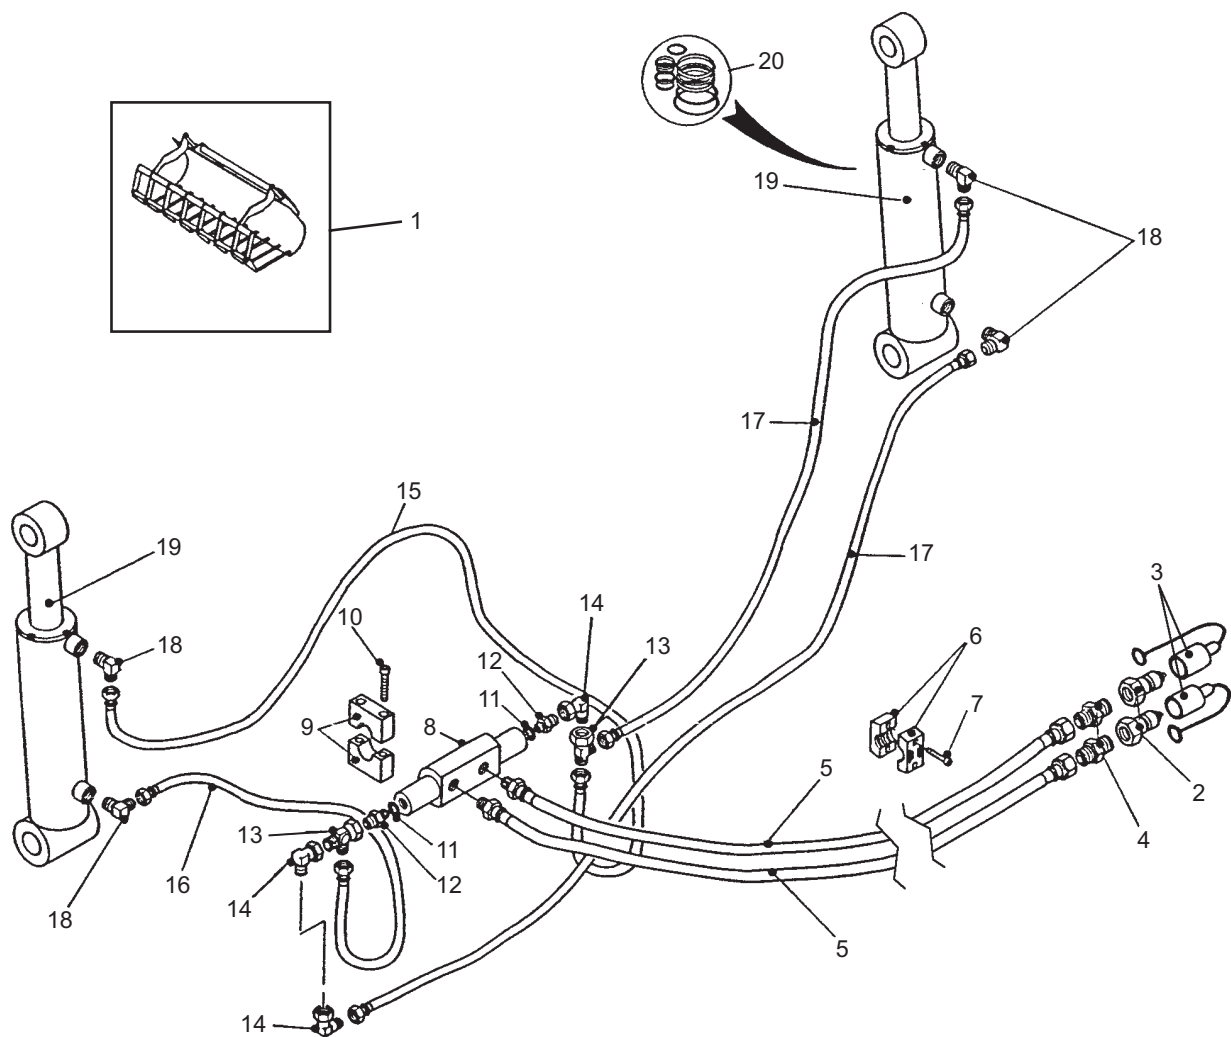

SPC007051

Manure Fork with Grab - Hydraulics

Wide Quick Attach

[illegible]

Intentionally left blank

NUMERICAL INDEX

Part Number	Denomination	WAS	Page	Subgroup
			13	Engine Cover
000326-10V	Screw		313	Matriculation Plate Option
000342-17S	Nut		143	Service Brake Hydraulic Installation
000345-96E	Nut		3	Chassis
			19	Engine Basket
			131	Telescope Cylinder Installation
			133	Telescope Cylinder Installation
			235	Engine Installation
			291	Air Conditioning Installation
			357	Floating Pallet Forks
			359	Bales Pikes
			361	Rigid Forks Holder
			363	Side Shifter Assy
000348-12P	Washer		51	Rear Window Installation
000350-01U	Washer		143	Service Brake Hydraulic Installation
			189	Hydraulic Control Valve Installation
			221	Electrical Circuit Chassis
000350-02V	Washer		13	Engine Cover
			153	Hydraulic Tank Installation
			157	Stabilizers & Frame Level Cylinder Installation
			221	Electrical Circuit Chassis
			241	Exhaust System
			325	Backup Alarm
000350-03W	Washer		3	Chassis
			13	Engine Cover
			189	Hydraulic Control Valve Installation
			227	Electrical Circuit Engine
			235	Engine Installation
			243	Cooling System Installation
			291	Air Conditioning Installation
000350-04X	Washer		185	Hydraulic Pump Installation
			235	Engine Installation
000350-06A	Washer		91	Manual Quick Attach Lock (wide)
000350-08C	Washer		37	Pedals Installation
			315	Tow Hitch
000350-20Q	Washer		53	Wiper Installation
			157	Stabilizers & Frame Level Cylinder Installation
			243	Cooling System Installation
			291	Air Conditioning Installation
000350-21R	Washer		27	Cab Assy II
			307	Tow Valve Installation
000405-62P	Bulb		221	Electrical Circuit Chassis
001350-04T	Washer		303	Mudguard 20"
			305	Mudguard 24"
00626.2	Elbow union		391	Bucket with Grab - Hydraulics
			395	Manure Fork with Grab - Hydraulics
00637.9	Seal		391	Bucket with Grab - Hydraulics
			395	Manure Fork with Grab - Hydraulics
006458-01H	Grease Nipple		107	Steering - Front Axle
			115	Steering - Rear Axle
007329-09Q	Screw	01634.5	131	Telescope Cylinder Installation
		01634.5	133	Telescope Cylinder Installation

Part Number	Denomination	WAS	Page	Subgroup
007346-02F	Washer		27 313	Cab Assy II Matriculation Plate Option
008372-01B	Elbow		135 137 185	Steering Hoses & Fittings (without damper) Steering Hoses & Fittings (with damper) Hydraulic Pump Installation
008372-02C	T- union		141 143 185 341	Steering Hydraulics Cab Service Brake Hydraulic Installation Hydraulic Pump Installation Steering Balance Kit
008372-28F	T- union		189	Hydraulic Control Valve Installation
008372-34M	T- union		235 247 249	Engine Installation Cooling Fan Circuit Cooling Fan Circuit (with optional reverse)
00909.2	Bearing	000398-08U	105 113	Differential - Front Axle Differential - Rear Axle
009456-02D	Washer		67 85	End Boom Assy - T40140 End Boom Assy - T40170
010338-02X	Screw		339	Frontal Safety Signalling for Germany
010370-38Q	Union		203	Hydrostatic Hoses and Fittings
010370-57L	Elbow		67 85 123	End Boom Assy - T40140 End Boom Assy - T40170 Boom Hydraulic Supply
010370-87T	Elbow		141 143 161	Steering Hydraulics Cab Service Brake Hydraulic Installation Stabilizer Selector Valves
010370-90W	Elbow		67 85	End Boom Assy - T40140 End Boom Assy - T40170
010370-93A	Elbow		243	Cooling System Installation
010370-94B	Elbow		129 135 137 185 249 341	Lift & Compensation Cylinder Installation Steering Hoses & Fittings (without damper) Steering Hoses & Fittings (with damper) Hydraulic Pump Installation Cooling Fan Circuit (with optional reverse) Steering Balance Kit
01124.7	Spring		37	Pedals Installation
011374-44C	Plug		235	Engine Installation
011374-62W	Plug		153	Hydraulic Tank Installation
01149.4	Pin		357	Floating Pallet Forks
01275.7	Clamp		235 363 377 379	Engine Installation Side Shifter Assy Side Shifter Assy 1000 mm Side Shifter Assy 1150 mm
013304-20J	O-Ring		203	Hydrostatic Hoses and Fittings
014345-12C	Nut		147 185	Parking Brake Hydraulic Installation (accumulat Hydraulic Pump Installation
014375-17T	Union		377 379 391 395	Side Shifter Assy 1000 mm Side Shifter Assy 1150 mm Bucket with Grab - Hydraulics Manure Fork with Grab - Hydraulics
014375-30H	Adapter		129 131 133 161	Lift & Compensation Cylinder Installation Telescope Cylinder Installation Telescope Cylinder Installation Stabilizer Selector Valves

Part Number	Denomination	WAS	Page	Subgroup
			321	2nd Hydraulic Function On Boom
014375-33L	Adapter		203	Hydrostatic Hoses and Fittings
014375-96E	Connector		203	Hydrostatic Hoses and Fittings
014375-97F	Adapter		235	Engine Installation
014375-99H	Adapter		185	Hydraulic Pump Installation
01443.1	Bulb		27	Cab Assy II
			313	Matriculation Plate Option
			339	Frontal Safety Signalling for Germany
01478.5	Nut		225	Electrical Circuit Cab
01478.7	Screw		37	Pedals Installation
			291	Air Conditioning Installation
01511.5	Screw		321	2nd Hydraulic Function On Boom
01522.2	Screw		291	Air Conditioning Installation
			307	Tow Valve Installation
			359	Bales Pikes
			373	Bales Pikes
01528.9	Screw		133	Telescope Cylinder Installation
			235	Engine Installation
01534.7	Screw		357	Floating Pallet Forks
015369-50X	Nut		13	Engine Cover
015370-11P	Elbow		185	Hydraulic Pump Installation
01549.5	Screw		7	Ballast
			21	Cab & Fixations
01575.0	Screw		47	Door Assy
01578.4	Screw		143	Service Brake Hydraulic Installation
			157	Stabilizers & Frame Level Cylinder Installation
			243	Cooling System Installation
			291	Air Conditioning Installation
01579.2	Screw		47	Door Assy
			123	Boom Hydraulic Supply
01590.9	Screw		23	Cab Assy
			27	Cab Assy II
			33	Heating/ventilation Installation
			41	Cowling Installation
			47	Door Assy
			67	End Boom Assy - T40140
			85	End Boom Assy - T40170
			231	Joystick / Susmic Installation
			243	Cooling System Installation
01591.7	Screw		23	Cab Assy
			27	Cab Assy II
			221	Electrical Circuit Chassis
			291	Air Conditioning Installation
			327	Windshield Protection Grill
01593.3	Screw		327	Windshield Protection Grill
01595.8	Screw		47	Door Assy
			59	Fixed Boom Assy - T40140
			63	Intermediate Boom Assy - T40140
			73	Fixed Boom Assy - T40170
			77	1st Intermediate Boom - T40170
			81	2nd Intermediate Boom - T40170
			243	Cooling System Installation
01596.6	Screw		13	Engine Cover
			27	Cab Assy II

Part Number	Denomination	WAS	Page	Subgroup
			39	Steering Column Installation
			53	Wiper Installation
			59	Fixed Boom Assy - T40140
			63	Intermediate Boom Assy - T40140
			73	Fixed Boom Assy - T40170
			77	1st Intermediate Boom - T40170
			81	2nd Intermediate Boom - T40170
			147	Parking Brake Hydraulic Installation (accumulat
			189	Hydraulic Control Valve Installation
			221	Electrical Circuit Chassis
			227	Electrical Circuit Engine
			243	Cooling System Installation
			313	Matriculation Plate Option
			371	Crane Jib & Extension Jib
01597.4	Screw		13	Engine Cover
			37	Pedals Installation
			39	Steering Column Installation
			103	Housing - Front Axle
			119	Boom Hydraulic Supply
			123	Boom Hydraulic Supply
			137	Steering Hoses & Fittings (with damper)
			153	Hydraulic Tank Installation
			157	Stabilizers & Frame Level Cylinder Installation
			241	Exhaust System
			325	Backup Alarm
			351	Damper Kit
01598.2	Screw		221	Electrical Circuit Chassis
			235	Engine Installation
			243	Cooling System Installation
			317	Trailer Plug
			339	Frontal Safety Signalling for Germany
01599.0	Screw		9	Front ballast
01602.2	Screw		243	Cooling System Installation
01603.0	Screw		47	Door Assy
			67	End Boom Assy - T40140
			85	End Boom Assy - T40170
			119	Boom Hydraulic Supply
01604.8	Screw		123	Boom Hydraulic Supply
			131	Telescope Cylinder Installation
			133	Telescope Cylinder Installation
			141	Steering Hydraulics Cab
01605.5	Screw		37	Pedals Installation
			119	Boom Hydraulic Supply
			123	Boom Hydraulic Supply
			131	Telescope Cylinder Installation
			133	Telescope Cylinder Installation
			235	Engine Installation
			241	Exhaust System
			243	Cooling System Installation
			291	Air Conditioning Installation
			321	2nd Hydraulic Function On Boom
01606.3	Screw		21	Cab & Fixations
			47	Door Assy
			227	Electrical Circuit Engine
			347	Fuel Pre-Filter Kit
01607.1	Screw		3	Chassis
			189	Hydraulic Control Valve Installation
			389	Bucket with Grab

Part Number	Denomination	WAS	Page	Subgroup
01608.9	Screw		37 235	Pedals Installation Engine Installation
01611.3	Screw		373 375	Bales Pikes Rigid Forks Holder
01612.1	Screw		3	Chassis
01613.9	Screw		131 133 203 359 361 363	Telescope Cylinder Installation Telescope Cylinder Installation Hydrostatic Hoses and Fittings Bales Pikes Rigid Forks Holder Side Shifter Assy
01626.1	Screw		135 137	Steering Hoses & Fittings (without damper) Steering Hoses & Fittings (with damper)
01631.1	Screw		165	Compensating Cylinder
01639.4	Screw		63 77 153	Intermediate Boom Assy - T40140 1st Intermediate Boom - T40170 Hydraulic Tank Installation
01640.2	Screw		235	Engine Installation
01657.6	Screw		21	Cab & Fixations
01664.2	Nut		3 27	Chassis Cab Assy II
01665.9	Nut		43 227	Control Panel Switches Electrical Circuit Engine
01666.7	Nut		13 27 227 231	Engine Cover Cab Assy II Electrical Circuit Engine Joystick / Susmic Installation
01668.3	Nut		47 53 243	Door Assy Wiper Installation Cooling System Installation
01669.1	Nut		37 389 393	Pedals Installation Bucket with Grab Manure Fork with Grab
01670.9	Nut		59 73 77	Fixed Boom Assy - T40140 Fixed Boom Assy - T40170 1st Intermediate Boom - T40170
01671.7	Nut		107 115	Steering - Front Axle Steering - Rear Axle
01672.5	Nut		59 73 77 359 373	Fixed Boom Assy - T40140 Fixed Boom Assy - T40170 1st Intermediate Boom - T40170 Bales Pikes Bales Pikes
01681.6	Nut		13 51	Engine Cover Rear Window Installation
01682.4	Nut		13	Engine Cover
01695.6	Washer		221 291 313	Electrical Circuit Chassis Air Conditioning Installation Matriculation Plate Option
01696.4	Washer		23 27 47 67 85	Cab Assy Cab Assy II Door Assy End Boom Assy - T40140 End Boom Assy - T40170

Part Number	Denomination	WAS	Page	Subgroup
			249	Cooling Fan Circuit (with optional reverse)
			291	Air Conditioning Installation
01697.2	Washer		27	Cab Assy II
			37	Pedals Installation
			39	Steering Column Installation
			47	Door Assy
			59	Fixed Boom Assy - T40140
			63	Intermediate Boom Assy - T40140
			73	Fixed Boom Assy - T40170
			77	1st Intermediate Boom - T40170
			81	2nd Intermediate Boom - T40170
			137	Steering Hoses & Fittings (with damper)
			147	Parking Brake Hydraulic Installation (accumulat
			231	Joystick / Susmic Installation
			235	Engine Installation
			243	Cooling System Installation
			291	Air Conditioning Installation
			313	Matriculation Plate Option
			341	Steering Balance Kit
			351	Damper Kit
01698.0	Washer		67	End Boom Assy - T40140
			85	End Boom Assy - T40170
			321	2nd Hydraulic Function On Boom
			389	Bucket with Grab
			393	Manure Fork with Grab
01699.8	Washer		3	Chassis
01701.2	Washer		21	Cab & Fixations
01717.8	Washer		27	Cab Assy II
			33	Heating/ventilation Installation
			47	Door Assy
			53	Wiper Installation
			231	Joystick / Susmic Installation
			243	Cooling System Installation
01718.6	Washer		3	Chassis
			13	Engine Cover
			47	Door Assy
			119	Boom Hydraulic Supply
			123	Boom Hydraulic Supply
			153	Hydraulic Tank Installation
			221	Electrical Circuit Chassis
			317	Trailer Plug
01719.4	Washer		47	Door Assy
			389	Bucket with Grab
			393	Manure Fork with Grab
01720.2	Washer		119	Boom Hydraulic Supply
			123	Boom Hydraulic Supply
			141	Steering Hydraulics Cab
01735.0	Pin		149	Quick Attach Installation (wide)
			151	Quick Attach Installation (narrow)
01736.8	Pin		37	Pedals Installation
01744.2	Pin		149	Quick Attach Installation (wide)
			151	Quick Attach Installation (narrow)
01745.9	Pin		149	Quick Attach Installation (wide)
			151	Quick Attach Installation (narrow)
01754.1	Pin		37	Pedals Installation
01763.2	Pin		371	Crane Jib & Extension Jib

Part Number	Denomination	WAS	Page	Subgroup
			59	Fixed Boom Assy - T40140
			63	Intermediate Boom Assy - T40140
			67	End Boom Assy - T40140
			73	Fixed Boom Assy - T40170
			77	1st Intermediate Boom - T40170
			81	2nd Intermediate Boom - T40170
			85	End Boom Assy - T40170
			129	Lift & Compensation Cylinder Installation
			389	Bucket with Grab
			393	Manure Fork with Grab
01782.2	Grease nipple		3	Chassis
			157	Stabilizers & Frame Level Cylinder Installation
018472-83R	Ground Cable		227	Electrical Circuit Engine
022375-04U	Adapter		185	Hydraulic Pump Installation
			203	Hydrostatic Hoses and Fittings
			363	Side Shifter Assy
022375-06W	Adapter		67	End Boom Assy - T40140
			85	End Boom Assy - T40170
			321	2nd Hydraulic Function On Boom
022375-27U	Adapter		149	Quick Attach Installation (wide)
			151	Quick Attach Installation (narrow)
022375-28V	Adapter		149	Quick Attach Installation (wide)
			151	Quick Attach Installation (narrow)
022375-31Z	Adapter		189	Hydraulic Control Valve Installation
05698.6	Washer		41	Cowling Installation
07187.8	Bearing		105	Differential - Front Axle
			113	Differential - Rear Axle
100074-53R	Manual concrete skip		355	Concrete Bucket
100083-13B	Fork		357	Floating Pallet Forks
100212-53R	Plate		135	Steering Hoses & Fittings (without damper)
			137	Steering Hoses & Fittings (with damper)
100228-57K	Cover		319	Rear View Mirror
100273-25R	Safety Pin		111	Housing - Rear Axle
100281-55T	Plate		135	Steering Hoses & Fittings (without damper)
			137	Steering Hoses & Fittings (with damper)
100288-01V	Bush		357	Floating Pallet Forks
100288-63N	Washer		103	Housing - Front Axle
			111	Housing - Rear Axle
100319-28U	Hose		341	Steering Balance Kit
100324-04M	Screw		99	Hub Reduction - Front Axle / Rear Axle
100328-05X	Screw		163	Lift Cylinder
100329-07J	Screw		131	Telescope Cylinder Installation
			133	Telescope Cylinder Installation
100330-13Z	Screw		339	Frontal Safety Signalling for Germany
100331-01U	Screw		41	Cowling Installation
100338-07M	Screw		21	Cab & Fixations
100338-15V	Screw		95	Axle Installation
100338-18Z	Screw		203	Hydrostatic Hoses and Fittings
100338-19A	Screw		3	Chassis
100338-23F	Screw		27	Cab Assy II
			135	Steering Hoses & Fittings (without damper)

Part Number	Denomination	WAS	Page	Subgroup
			319	Rear View Mirror
100338-39W	Screw		105	Differential - Front Axle
			113	Differential - Rear Axle
100338-42A	Screw		111	Housing - Rear Axle
100345-04U	Nut		21	Cab & Fixations
			27	Cab Assy II
			313	Matriculation Plate Option
100345-05V	Nut		37	Pedals Installation
			119	Boom Hydraulic Supply
			123	Boom Hydraulic Supply
			225	Electrical Circuit Cab
			291	Air Conditioning Installation
			317	Trailer Plug
			339	Frontal Safety Signalling for Germany
100345-06W	Nut		135	Steering Hoses & Fittings (without damper)
			137	Steering Hoses & Fittings (with damper)
			145	Parking Brake Hydraulic Installation
			147	Parking Brake Hydraulic Installation (accumulat
			189	Hydraulic Control Valve Installation
			203	Hydrostatic Hoses and Fittings
			221	Electrical Circuit Chassis
			249	Cooling Fan Circuit (with optional reverse)
			291	Air Conditioning Installation
100345-09A	Nut		327	Windshield Protection Grill
			3	Chassis
			13	Engine Cover
			21	Cab & Fixations
			37	Pedals Installation
			67	End Boom Assy - T40140
			85	End Boom Assy - T40170
			91	Manual Quick Attach Lock (wide)
			93	Manual Quick Attach Lock (narrow)
			119	Boom Hydraulic Supply
			123	Boom Hydraulic Supply
			131	Telescope Cylinder Installation
			133	Telescope Cylinder Installation
			149	Quick Attach Installation (wide)
			151	Quick Attach Installation (narrow)
			157	Stabilizers & Frame Level Cylinder Installation
			189	Hydraulic Control Valve Installation
			227	Electrical Circuit Engine
			235	Engine Installation
			291	Air Conditioning Installation
100345-11C	Nut		307	Tow Valve Installation
			347	Fuel Pre-Filter Kit
			359	Bales Pikes
			373	Bales Pikes
100345-14F	Nut		95	Axle Installation
100345-15G	Nut		129	Lift & Compensation Cylinder Installation
100345-16H	Nut		21	Cab & Fixations
100345-20M	Nut		9	Front ballast
			11	Fuel Tank Installation
			19	Engine Basket
			21	Cab & Fixations
100345-34C	Nut		3	Chassis
			315	Tow Hitch
			249	Cooling Fan Circuit (with optional reverse)

Part Number	Denomination	WAS	Page	Subgroup
			113	Differential - Rear Axle
100345-40J	Clamp		105	Differential - Front Axle
			113	Differential - Rear Axle
100345-41K	Wheel Nut		95	Axle Installation
			99	Hub Reduction - Front Axle / Rear Axle
100348-06X	Washer		105	Differential - Front Axle
			113	Differential - Rear Axle
100349-02C	Washer		95	Axle Installation
			99	Hub Reduction - Front Axle / Rear Axle
100369-18T	Split Clamp		135	Steering Hoses & Fittings (without damper)
			137	Steering Hoses & Fittings (with damper)
100369-39Q	Clamp		33	Heating/ventilation Installation
100369-80K	Clamp		33	Heating/ventilation Installation
			235	Engine Installation
100370-18C	Elbow		189	Hydraulic Control Valve Installation
100370-29P	Fitting		157	Stabilizers & Frame Level Cylinder Installation
100370-40B	Elbow		161	Stabilizer Selector Valves
100372-06G	T- union		147	Parking Brake Hydraulic Installation (accumulat
100374-14H	Plug, fuel tank drain		11	Fuel Tank Installation
100374-20P	Plug		111	Housing - Rear Axle
100374-32C	Plug		99	Hub Reduction - Front Axle / Rear Axle
			103	Housing - Front Axle
100375-06H	Adaptor		147	Parking Brake Hydraulic Installation (accumulat
			185	Hydraulic Pump Installation
100375-15S	Reducer		249	Cooling Fan Circuit (with optional reverse)
100375-38S	Adapter		135	Steering Hoses & Fittings (without damper)
			137	Steering Hoses & Fittings (with damper)
			161	Stabilizer Selector Valves
			185	Hydraulic Pump Installation
			249	Cooling Fan Circuit (with optional reverse)
			341	Steering Balance Kit
100375-40U	Adapter		153	Hydraulic Tank Installation
			189	Hydraulic Control Valve Installation
			203	Hydrostatic Hoses and Fittings
			247	Cooling Fan Circuit
			249	Cooling Fan Circuit (with optional reverse)
100375-42W	Adapter		203	Hydrostatic Hoses and Fittings
			341	Steering Balance Kit
100375-43X	Reducer		189	Hydraulic Control Valve Installation
100375-52H	Adapter		119	Boom Hydraulic Supply
			321	2nd Hydraulic Function On Boom
100375-59Q	Union		147	Parking Brake Hydraulic Installation (accumulat
			247	Cooling Fan Circuit
			249	Cooling Fan Circuit (with optional reverse)
100375-71D	Adapter		145	Parking Brake Hydraulic Installation
			147	Parking Brake Hydraulic Installation (accumulat
100377-32D	Valve		179	Stabilizer Cylinder
100378-03F	Shutoff		307	Tow Valve Installation
100383-02X	Hook		371	Crane Jib & Extension Jib
100393-40B	Starter ring gear		257	Flywheel and Drive Pulley
100411-05U	Relay		225	Electrical Circuit Cab

Part Number	Denomination	WAS	Page	Subgroup
100417-11D	Horn		221	Electrical Circuit Chassis
100417-16J	Reflector		337	Germany Version
100426-06B	Air Valve		297 299 301	DUNLOP 400/80-R24 153B Wheels DUNLOP 400/80-R24 156B Wheels DUNLOP 405/70-R20 SPT9 Wheels
100454-05T	Washer		19 157	Engine Basket Stabilizers & Frame Level Cylinder Installation
100454-17G	Washer		203	Hydrostatic Hoses and Fittings
100475-97B	Decal - Boom road position ind		337	Germany Version
100485-55S	Pin		105 113	Differential - Front Axle Differential - Rear Axle
100485-56T	Washer		105 113	Differential - Front Axle Differential - Rear Axle
100496-04H	Seal Kit		171 177 179	Tilt Cylinder Frame Level Cylinder Stabilizer Cylinder
100505-24H	Breather		111	Housing - Rear Axle
100520-18G	Female abutment		327	Windshield Protection Grill
100520-19H	Male abutment		327	Windshield Protection Grill
101288-10B	Bushing		111	Housing - Rear Axle
101288-39H	Spacer		105 113	Differential - Front Axle Differential - Rear Axle
101319-25M	Hose		189	Hydraulic Control Valve Installation
101319-27P	Hose		135 153 185 247 249	Steering Hoses & Fittings (without damper) Hydraulic Tank Installation Hydraulic Pump Installation Cooling Fan Circuit Cooling Fan Circuit (with optional reverse)
101438-93V	Dome Light		27	Cab Assy II
101472-20M	Diode		217	Hydrostatic Motor Assy
101475-29X	Adhesive		371	Crane Jib & Extension Jib
10167.5	Screw		55 145 147 153 185	Parking Brake Lever Parking Brake Hydraulic Installation Parking Brake Hydraulic Installation (accumulat Hydraulic Tank Installation Hydraulic Pump Installation
103319-62T	Hose		129	Lift & Compensation Cylinder Installation
103319-65W	Hose		377 379	Side Shifter Assy 1000 mm Side Shifter Assy 1150 mm
10882.9	Screw		19 91 157	Engine Basket Manual Quick Attach Lock (wide) Stabilizers & Frame Level Cylinder Installation
10897.7	Washer		371	Crane Jib & Extension Jib
10942.1	Screw		359 373	Bales Pikes Bales Pikes
10947.0	Screw		341	Steering Balance Kit
11463.7	Washer		157 371	Stabilizers & Frame Level Cylinder Installation Crane Jib & Extension Jib
11689.7	Washer		131 133 373	Telescope Cylinder Installation Telescope Cylinder Installation Bales Pikes

Part Number	Denomination	WAS	Page	Subgroup
11734.1	Collar		235	Engine Installation
12597.1	Screw		157	Stabilizers & Frame Level Cylinder Installation
13399.1	Screw		235	Engine Installation
13415.5	Washer		43 221 227	Control Panel Switches Electrical Circuit Chassis Electrical Circuit Engine
13416.3	Washer		13 55 227 291	Engine Cover Parking Brake Lever Electrical Circuit Engine Air Conditioning Installation
13669.7	Screw		249 391 395	Cooling Fan Circuit (with optional reverse) Bucket with Grab - Hydraulics Manure Fork with Grab - Hydraulics
13766.1	Screw		95	Axle Installation
13778.6	Washer		21 91 131 133	Cab & Fixations Manual Quick Attach Lock (wide) Telescope Cylinder Installation Telescope Cylinder Installation
14039.2	Screw		235	Engine Installation
15323.9	Washer		95	Axle Installation
15354.4	Screw		21 143 291	Cab & Fixations Service Brake Hydraulic Installation Air Conditioning Installation
15613.3	Cap		377 379 391 395	Side Shifter Assy 1000 mm Side Shifter Assy 1150 mm Bucket with Grab - Hydraulics Manure Fork with Grab - Hydraulics
26160.2	Screw		185	Hydraulic Pump Installation
26261.8	Clip		313 339	Matriculation Plate Option Frontal Safety Signalling for Germany
26267.5	Sleeve		313 339	Matriculation Plate Option Frontal Safety Signalling for Germany
26278.2	Oil Pressure Switch		227 251	Electrical Circuit Engine Cylinder Block
26747.6	Clip		63 77 81 343 345 371	Intermediate Boom Assy - T40140 1st Intermediate Boom - T40170 2nd Intermediate Boom - T40170 Boom Chain Pulley axles Kit Boom Chain Pulley axles Kit Crane Jib & Extension Jib
27089.2	Bulb		221	Electrical Circuit Chassis
27362.3	Bulb		221	Electrical Circuit Chassis
27834.1	Screw		189	Hydraulic Control Valve Installation
28089.2	Bulb		221	Electrical Circuit Chassis
28439.8	Screw		235	Engine Installation
28689.8	Screw		203	Hydrostatic Hoses and Fittings
29272.2	Washer		23 27 47 231 327	Cab Assy Cab Assy II Door Assy Joystick / Susmic Installation Windshield Protection Grill
29649.1	Screw		59	Fixed Boom Assy - T40140

Part Number	Denomination	WAS	Page	Subgroup
			93	Manual Quick Attach Lock (narrow)
			151	Quick Attach Installation (narrow)
29713.5	Clamp		235	Engine Installation
30131.7	Washer		319	Rear View Mirror
30701.7	Clasp		313	Matriculation Plate Option
31825.3	Clip		67	End Boom Assy - T40140
			85	End Boom Assy - T40170
32397.2	Screw		47	Door Assy
			51	Rear Window Installation
32478.0	Plug		251	Cylinder Block
32539.9	Nut		263	Rocker Shaft
33219.7	Plug		259	Cylinder Head
			265	Timing Gear
33786.5	Screw		119	Boom Hydraulic Supply
			123	Boom Hydraulic Supply
			221	Electrical Circuit Chassis
34214.7	Screw		27	Cab Assy II
34765.8	Copper ring		363	Side Shifter Assy
			377	Side Shifter Assy 1000 mm
			379	Side Shifter Assy 1150 mm
35497.7	Screw		369	Toothed Bucket
			387	Toothed Bucket
35949.7	Clamp		235	Engine Installation
36925.6	Engine Oil Filter Element		277	Oil Cooler and Filter
37148.4	Breather		153	Hydraulic Tank Installation
37469.4	Screw		51	Rear Window Installation
38025.3	Washer		153	Hydraulic Tank Installation
38234.1	Screw	11631.9	203	Hydrostatic Hoses and Fittings
38441.2	Union		235	Engine Installation
38632.6	Pin		59	Fixed Boom Assy - T40140
			67	End Boom Assy - T40140
			73	Fixed Boom Assy - T40170
			77	1st Intermediate Boom - T40170
			81	2nd Intermediate Boom - T40170
			85	End Boom Assy - T40170
38683.9	Collar		235	Engine Installation
39079.9	Screw		313	Matriculation Plate Option
			317	Trailer Plug
39584.8	Screw		315	Tow Hitch
40825.0	Bracing		115	Steering - Rear Axle
40968.0	Plug		259	Cylinder Head
40982.1	Screw		263	Rocker Shaft
40985.4	Seal		265	Timing Gear
41282.5	Solenoid		161	Stabilizer Selector Valves
			217	Hydrostatic Motor Assy
42967.0	Olive		269	Fuel Injection Equipment
43088.4	Clip		357	Floating Pallet Forks
43824.2	Rivet		331	Bobcat Decals
			333	Bobcat Decals
			357	Floating Pallet Forks

Part Number	Denomination	WAS	Page	Subgroup
			361	Rigid Forks Holder
			367	Toothless Buckets
			369	Toothed Bucket
			371	Crane Jib & Extension Jib
			373	Bales Pikes
			375	Rigid Forks Holder
			385	Toothless Buckets
			387	Toothed Bucket
44001.6	Screw		59	Fixed Boom Assy - T40140
			73	Fixed Boom Assy - T40170
44334.1	Nut		19	Engine Basket
46032.9	Rod		263	Rocker Shaft
46893.4	Stop		255	Crankshaft - Pistons
46894.2	Stop		255	Crankshaft - Pistons
4852110-DE	Operator manual in German la		337	Germany Version
48792.6	Chain		91	Manual Quick Attach Lock (wide)
			93	Manual Quick Attach Lock (narrow)
49439.3	Screw		131	Telescope Cylinder Installation
50027.2	Clip		91	Manual Quick Attach Lock (wide)
			149	Quick Attach Installation (wide)
50917.4	Collar		227	Electrical Circuit Engine
51851.4	Nut		13	Engine Cover
			37	Pedals Installation
			39	Steering Column Installation
			47	Door Assy
			123	Boom Hydraulic Supply
			137	Steering Hoses & Fittings (with damper)
			143	Service Brake Hydraulic Installation
			147	Parking Brake Hydraulic Installation (accumulat
			153	Hydraulic Tank Installation
			157	Stabilizers & Frame Level Cylinder Installation
			221	Electrical Circuit Chassis
			227	Electrical Circuit Engine
			231	Joystick / Susmic Installation
			235	Engine Installation
			241	Exhaust System
			243	Cooling System Installation
			313	Matriculation Plate Option
			317	Trailer Plug
			321	2nd Hydraulic Function On Boom
			325	Backup Alarm
			339	Frontal Safety Signalling for Germany
			341	Steering Balance Kit
			351	Damper Kit
52294.6	Screw		129	Lift & Compensation Cylinder Installation
53100.4	Screw		3	Chassis
54009.6	Screw		119	Boom Hydraulic Supply
			235	Engine Installation
			291	Air Conditioning Installation
54194.6	Gauge		153	Hydraulic Tank Installation
54215.9	Plate		9	Front ballast
54367.8	Pressure Switch		189	Hydraulic Control Valve Installation
			191	Hydraulic Control Valve: In- and Outlet
			203	Hydrostatic Hoses and Fittings
55103.6	Tappet		263	Rocker Shaft

Part Number	Denomination	WAS	Page	Subgroup
55689.4	Screw		391 395	Bucket with Grab - Hydraulics Manure Fork with Grab - Hydraulics
55714.0	Bush		265	Timing Gear
55932.8	Clamp		9	Front ballast
56029.2	Plug		161	Stabilizer Selector Valves
56076.3	Washer		371	Crane Jib & Extension Jib
57189.3	Set of keys (ignition)		11 13 43 47	Fuel Tank Installation Engine Cover Control Panel Switches Door Assy
57702.3	Plug		3 23	Chassis Cab Assy
57752.8	Fuse		225	Electrical Circuit Cab
57753.6	Fuse		225	Electrical Circuit Cab
57792.4	Fuse		225 291	Electrical Circuit Cab Air Conditioning Installation
57793.2	Fuse		225 233	Electrical Circuit Cab Ventilation reverse electrical
58158.7	Ring		91 93	Manual Quick Attach Lock (wide) Manual Quick Attach Lock (narrow)
58446.6	Bulb		225	Electrical Circuit Cab
59758.3	Light, RH		221	Electrical Circuit Chassis
59893.8	Brake pedal pad		37	Pedals Installation
59948.0	Light, LH		221	Electrical Circuit Chassis
60583.2	Thrust washer		255	Crankshaft - Pistons
60584.0	Stop washer		255	Crankshaft - Pistons
60794.5	Tooth support		369 387	Toothed Bucket Toothed Bucket
60795.2	Lock		369 387	Toothed Bucket Toothed Bucket
60838.0	Clasp		339	Frontal Safety Signalling for Germany
61358.8	Clamp		319	Rear View Mirror
61378.6	Washer		3 27	Chassis Cab Assy II
61416.4	Screw		231	Joystick / Susmic Installation
62185.4	Screw		37	Pedals Installation
62231.6	Clamp		11 235 347	Fuel Tank Installation Engine Installation Fuel Pre-Filter Kit
62849.5	T- union		143 145 147	Service Brake Hydraulic Installation Parking Brake Hydraulic Installation Parking Brake Hydraulic Installation (accumulat
62926.1	Splash plate		361	Rigid Forks Holder
62932.9	Protection		369	Toothed Bucket
62935.2	Bucket		367	Toothless Buckets
62948.5	Protection		369	Toothed Bucket
63225.7	Connecting Rod		107 115	Steering - Front Axle Steering - Rear Axle
63238.0	Breather		103	Housing - Front Axle

Part Number	Denomination	WAS	Page	Subgroup
63252.1	Nut		107 115	Steering - Front Axle Steering - Rear Axle
63332.1	Cap		23 27 53 327	Cab Assy Cab Assy II Wiper Installation Windshield Protection Grill
63333.9	Nut cap		47 53	Door Assy Wiper Installation
63334.7	Nut cap		47	Door Assy
63349.5	Handle		23	Cab Assy
63359.4	Screw		39	Steering Column Installation
63458.4	Bush		389 393	Bucket with Grab Manure Fork with Grab
63459.2	Bush		389 393	Bucket with Grab Manure Fork with Grab
63485.7	Segment		389	Bucket with Grab
63848.6	T- union		53	Wiper Installation
63856.9	Roof wiper motor		53	Wiper Installation
63860.1	Mirror		319	Rear View Mirror
64010.2	Wedge		367 369 385 387	Toothless Buckets Toothed Bucket Toothless Buckets Toothed Bucket
64011.0	Blade		367	Toothless Buckets
64012.8	Blade		367	Toothless Buckets
64060.7	Shackle		371	Crane Jib & Extension Jib
64120.9	Fuse		225	Electrical Circuit Cab
64128.2	Coupling		377 379 391 395	Side Shifter Assy 1000 mm Side Shifter Assy 1150 mm Bucket with Grab - Hydraulics Manure Fork with Grab - Hydraulics
64509.3	Glue		23 47	Cab Assy Door Assy
64534.1	Lock Valve		171	Tilt Cylinder
64581.2	Pin		265	Timing Gear
64588.7	Hub		265	Timing Gear
64590.3	Plate		265	Timing Gear
64624.0	Nut		269	Fuel Injection Equipment
64627.3	Bush		251	Cylinder Block
64628.1	Screw		251	Cylinder Block
64645.5	Dowel		287	Flywheel Housing and Starter
64655.4	Key		255 263 265	Crankshaft - Pistons Rocker Shaft Timing Gear
64752.9	O-ring, engine oil drain plug		267	Oil Sump - Oil Pump
64753.7	Plug, drain, engine oil		267	Oil Sump - Oil Pump
64796.6	Nut		251	Cylinder Block
64803.0	Spacer		285	Alternator
64822.0	Screw		111	Housing - Rear Axle

Part Number	Denomination	WAS	Page	Subgroup
64824.6	Sleeve		111	Housing - Rear Axle
64827.9	Bushing		111	Housing - Rear Axle
64828.7	Bushing		111	Housing - Rear Axle
64829.5	O-ring		111	Housing - Rear Axle
64830.3	Support		111	Housing - Rear Axle
64831.1	Screw		111	Housing - Rear Axle
64839.4	Clip		107 115	Steering - Front Axle Steering - Rear Axle
64842.8	Plug		103	Housing - Front Axle
64851.9	Washer		105 113	Differential - Front Axle Differential - Rear Axle
64855.0	Disc		105	Differential - Front Axle
64856.8	Counter Disc		105	Differential - Front Axle
64857.6	Disc		105	Differential - Front Axle
64878.2	Screw		265 267 269 279 281	Timing Gear Oil Sump - Oil Pump Fuel Injection Equipment Water Pump and Thermostat Turbocharger
64960.8	Screw		277	Oil Cooler and Filter
64988.9	Stud		251	Cylinder Block
65226.3	Pin		315	Tow Hitch
65285.9	Elbow		67 85 129 321	End Boom Assy - T40140 End Boom Assy - T40170 Lift & Compensation Cylinder Installation 2nd Hydraulic Function On Boom
65397.2	Screw		3 67 85 91 93 149 151	Chassis End Boom Assy - T40140 End Boom Assy - T40170 Manual Quick Attach Lock (wide) Manual Quick Attach Lock (narrow) Quick Attach Installation (wide) Quick Attach Installation (narrow)
65507.6	Spindle		371	Crane Jib & Extension Jib
65534.1	Valve		173	Tilt Cylinder
65614.0	Union		203	Hydrostatic Hoses and Fittings
65632.2	Pulley		371	Crane Jib & Extension Jib
65633.0	Spindle		371	Crane Jib & Extension Jib
65639.7	Jib for winch		371	Crane Jib & Extension Jib
65643.9	Roller		371	Crane Jib & Extension Jib
65645.4	Roller		371	Crane Jib & Extension Jib
6564833	Non-skid		23	Cab Assy
65649.6	Spindle		371	Crane Jib & Extension Jib
6565990	Decal		331 333	Bobcat Decals Bobcat Decals
65718.9	Hose		377	Side Shifter Assy 1000 mm
65764.3	Circuit Breaker		221	Electrical Circuit Chassis
65784.1	Blank Plug		41 43	Cowling Installation Control Panel Switches

Part Number	Denomination	WAS	Page	Subgroup
66017.5	Bush		115	Steering - Rear Axle
66032.4	Spacer		103	Housing - Front Axle
66033.2	Washer		103	Housing - Front Axle
			111	Housing - Rear Axle
66035.7	Bearing		103	Housing - Front Axle
			111	Housing - Rear Axle
66039.9	Washer		103	Housing - Front Axle
			111	Housing - Rear Axle
66040.7	Axle		107	Steering - Front Axle
			115	Steering - Rear Axle
66041.5	Pin		107	Steering - Front Axle
			115	Steering - Rear Axle
66042.3	Screw		107	Steering - Front Axle
66044.9	Nut		107	Steering - Front Axle
			115	Steering - Rear Axle
66048.0	Screw		105	Differential - Front Axle
			113	Differential - Rear Axle
6625575	Fuse		291	Air Conditioning Installation
66341.9	Seal		241	Exhaust System
66362.5	Seal kit		175	Quick Attach Cylinder
66392.2	Nut		175	Quick Attach Cylinder
66419.3	Seals kit		179	Stabilizer Cylinder
			181	Stabilizer Cylinder
66425.0	Screw		95	Axle Installation
6661114	Plug		11	Fuel Tank Installation
6661696	Cap, fuel (with lock)		11	Fuel Tank Installation
66679.2	Rivet		291	Air Conditioning Installation
66716.2	Screw		21	Cab & Fixations
6684424	Blower		35	Heating/ventilation Fan Assy
6684425	Case		35	Heating/ventilation Fan Assy
6684426	Grille		35	Heating/ventilation Fan Assy
6684427	Radiator		35	Heating/ventilation Fan Assy
6684428	Mount		35	Heating/ventilation Fan Assy
6684429	Rod		35	Heating/ventilation Fan Assy
6684430	Lever		35	Heating/ventilation Fan Assy
6684431	Clip		35	Heating/ventilation Fan Assy
67046.3	Adapter		203	Hydrostatic Hoses and Fittings
			307	Tow Valve Installation
67172.7	Blade		367	Toothless Buckets
67173.5	Wedge		367	Toothless Buckets
67196.6	Elbow		141	Steering Hydraulics Cab
			143	Service Brake Hydraulic Installation
67198.2	Hose		203	Hydrostatic Hoses and Fittings
6809599	Plate		23	Cab Assy
6809625	Decal - Door logo		331	Bobcat Decals
			333	Bobcat Decals
6809627	Decal - Bottom side engine co		331	Bobcat Decals
			333	Bobcat Decals

Part Number	Denomination	WAS	Page	Subgroup
68566.9	Screw		43	Control Panel Switches
68609.7	Union		235	Engine Installation
			243	Cooling System Installation
			247	Cooling Fan Circuit
			249	Cooling Fan Circuit (with optional reverse)
68789.7	Hose		129	Lift & Compensation Cylinder Installation
68948.9	Bucket		367	Toothless Buckets
6908051	Decal - IR bc rear		331	Bobcat Decals
			333	Bobcat Decals
6908071	Support		235	Engine Installation
6908091	Flange		153	Hydraulic Tank Installation
			185	Hydraulic Pump Installation
6908100	Exhaust muffler		241	Exhaust System
6908165	Plate, engine basket, rear		13	Engine Cover
6908170	Pin		19	Engine Basket
6908171	Cap		7	Ballast
6908174	Support		319	Rear View Mirror
6908180	Support		291	Air Conditioning Installation
6908181	Spindle		291	Air Conditioning Installation
6908244	Support		67	End Boom Assy - T40140
			85	End Boom Assy - T40170
6908245	Combinated hose		123	Boom Hydraulic Supply
6908252	Wheel wedge bracket		309	Wheel Wedge Option
6908258	Box		67	End Boom Assy - T40140
			85	End Boom Assy - T40170
6908280	Cable		67	End Boom Assy - T40140
			85	End Boom Assy - T40170
6908281	Cable		67	End Boom Assy - T40140
			85	End Boom Assy - T40170
6908284	Cable		85	End Boom Assy - T40170
6908285	Cable		85	End Boom Assy - T40170
6908286	Cable		67	End Boom Assy - T40140
6908287	Cable		67	End Boom Assy - T40140
6908321	Set of wheels		299	DUNLOP 400/80-R24 156B Wheels
6908322	Rim		297	DUNLOP 400/80-R24 153B Wheels
			299	DUNLOP 400/80-R24 156B Wheels
6908323	L.H. wheel		299	DUNLOP 400/80-R24 156B Wheels
6908324	R.H. wheel		299	DUNLOP 400/80-R24 156B Wheels
6908363	Rain-proof cap		235	Engine Installation
6908476	Steering column		39	Steering Column Installation
6908477	Steering wheel		39	Steering Column Installation
6908478	Brake pedal		37	Pedals Installation
6908479	Pedal shaft		37	Pedals Installation
6908480	Pedal		37	Pedals Installation
6908505	Plate		3	Chassis
6908546	Shoe		59	Fixed Boom Assy - T40140
			73	Fixed Boom Assy - T40170
6908547	Front ballast		9	Front ballast

Part Number	Denomination	WAS	Page	Subgroup
6908586	Hose		235	Engine Installation
6908595	Hose		143	Service Brake Hydraulic Installation
6908633	Forks lock		357	Floating Pallet Forks
6908638	Stop		357	Floating Pallet Forks
6908656	Drift		357	Floating Pallet Forks
6908659	Forks support		357	Floating Pallet Forks
6908663	Plate		235	Engine Installation
6908786	Glass, roof		23	Cab Assy
6908787	Glass, rear cab		51	Rear Window Installation
6908788	Glass, right side		23	Cab Assy
6908789	Glass, left side		27	Cab Assy II
6908790	Windshield		23	Cab Assy
6908791	Glass, lower part door		47	Door Assy
6908792	Glass, upper part door		47	Door Assy
6908847	Seal		19	Engine Basket
6908901	Hose, expansion tank		235	Engine Installation
6908902	Hose		235	Engine Installation
6908950	Shoe		119	Boom Hydraulic Supply
6908951	Spacer		119	Boom Hydraulic Supply
6908957	Abacus card		299	DUNLOP 400/80-R24 156B Wheels
6908958	Abacus card		299	DUNLOP 400/80-R24 156B Wheels
6908960	Abacus card		297	DUNLOP 400/80-R24 153B Wheels
6908962	Abacus card		297	DUNLOP 400/80-R24 153B Wheels
6908963	Protection		85	End Boom Assy - T40170
6908964	Protection		85	End Boom Assy - T40170
6908990	Plate		119	Boom Hydraulic Supply
6909020	Plate		13	Engine Cover
6909300	Washer		9	Front ballast
6909310	Support		325	Backup Alarm
6909324	Service brake switch		37 225	Pedals Installation Electrical Circuit Cab
6909356	Instrument panel		43	Control Panel Switches
6909383	Inching switch (detector)		37 225	Pedals Installation Electrical Circuit Cab
6909391	Support		291	Air Conditioning Installation
6909434	Hose		147	Parking Brake Hydraulic Installation (accumulat
6909446	Decal - Slings points		331 333	Bobcat Decals Bobcat Decals
6909447	Hydraulic pump		135 137 153 185 187	Steering Hoses & Fittings (without damper) Steering Hoses & Fittings (with damper) Hydraulic Tank Installation Hydraulic Pump Installation Hydraulic Pump Assy
		6909808 6909808		
6909591	Support		13	Engine Cover
6909609	Lock, engine cover		13	Engine Cover
6909611	Lock assy		11	Fuel Tank Installation
6909681	Plate		119	Boom Hydraulic Supply

Part Number	Denomination	WAS	Page	Subgroup
6909711	Electric plug		313 317	Matriculation Plate Option Trailer Plug
6909730	Support		317	Trailer Plug
6909731	Plate		313	Matriculation Plate Option
6909735	Plate		3	Chassis
6909739	Union		153	Hydraulic Tank Installation
6909767	Fuse		227	Electrical Circuit Engine
6909780	Pipe		203	Hydrostatic Hoses and Fittings
6909809	Hydraulic motor assy		183 243 247 249	Hydraulic Motor Cooling System Installation Cooling Fan Circuit Cooling Fan Circuit (with optional reverse)
6909839	Adapter		141	Steering Hydraulics Cab
6909852	Elbow		141	Steering Hydraulics Cab
6909875	Plug		235	Engine Installation
6909903	Clip		41 53	Cowling Installation Wiper Installation
6909904	Cover		41	Cowling Installation
6909910	Button		41	Cowling Installation
6909922	Motor, rear wiper		51	Rear Window Installation
6909930	Seal		41	Cowling Installation
6909931	Seal		41	Cowling Installation
6909932	Seal		41	Cowling Installation
6909933	Seal		41	Cowling Installation
6909934	Seal		41	Cowling Installation
6909935	Seal		39	Steering Column Installation
6909955	Bulb		221	Electrical Circuit Chassis
6909959	Rivet		23	Cab Assy
6909961	Plate		27	Cab Assy II
6909963	Washer		53	Wiper Installation
6909964	Washer		53	Wiper Installation
6909973	Bellow steering column		41	Cowling Installation
6909977	Plate		39	Steering Column Installation
6909993	Screw		39	Steering Column Installation
6909995	Screw		41	Cowling Installation
6909997	Screw		23	Cab Assy
6910049	Fuel option		337	Germany Version
6910150	Screw		19	Engine Basket
6910200	Hose		141	Steering Hydraulics Cab
6910201	Hose		141	Steering Hydraulics Cab
6910213	Battery door		11	Fuel Tank Installation
6910219	Channel		119	Boom Hydraulic Supply
6910220	Channel	6908292	123	Boom Hydraulic Supply
6910264	Hose		235	Engine Installation
6910272	Seal		19	Engine Basket
6910307	Shoe		119	Boom Hydraulic Supply

Part Number	Denomination	WAS	Page	Subgroup
6910317	Radiator assy		243	Cooling System Installation
6910500	Wire harness		221	Electrical Circuit Chassis
6910502	Cab filter		27	Cab Assy II
6910503	Box filter		27	Cab Assy II
6910504	Seal		27	Cab Assy II
6910505	Screw		27 41 43 53	Cab Assy II Cowling Installation Control Panel Switches Wiper Installation
6910533	Hydrostatic Pump Assy		207	Hydrostatic Pump Assy
6910539	Handle		47	Door Assy
6910540	Handle with key		47	Door Assy
6910542	Rubber stop		23	Cab Assy
6910543	Handle		47	Door Assy
6910544	Cable		47	Door Assy
6910545	Cable		47	Door Assy
6910546	Lock		47	Door Assy
6910547	Hook		47	Door Assy
6910552	Lock		27	Cab Assy II
6910554	Hinge assy		47	Door Assy
6910557	Bellows and connection		55 57	Parking Brake Lever Parking Brake Lever
6910558	Locking stabilizer switch		43	Control Panel Switches
6910560	Left stabilizer switch		43	Control Panel Switches
6910561	Right stabilizer switch		43	Control Panel Switches
6910573	Hose		153	Hydraulic Tank Installation
6910594	Decal - Oil level		331 333	Bobcat Decals Bobcat Decals
6910599	Hose		153 203	Hydraulic Tank Installation Hydrostatic Hoses and Fittings
6910602	Hose		153	Hydraulic Tank Installation
6910622	Hose		243	Cooling System Installation
6910649	Abutment		37 39	Pedals Installation Steering Column Installation
6910697	Screw		27 231	Cab Assy II Joystick / Susmic Installation
6910722	Bush	66034.0	103 111	Housing - Front Axle Housing - Rear Axle
6910724	Air filter cover		235	Engine Installation
6910725	Air filter element, primary		235	Engine Installation
6910726	Air filter element, secondary		235	Engine Installation
6910727	Ring		235	Engine Installation
6910733	Upper door assy	6909925	47	Door Assy
6910734	Upper door	6910509	47	Door Assy
6910735	Upper door and glass		47	Door Assy
6910736	Lower door assy	6909923	47	Door Assy
6910737	Lower door	6910510	47	Door Assy

Part Number	Denomination	WAS	Page	Subgroup
6910741	Plug		153	Hydraulic Tank Installation
6910771	Washer		203	Hydrostatic Hoses and Fittings
6910841	Key	95516.1	131	Telescope Cylinder Installation
		95516.1	133	Telescope Cylinder Installation
6910876	Valve		189	Hydraulic Control Valve Installation
6910878	Roof cowling		27	Cab Assy II
6910879	Fuse panel top cowling		41	Cowling Installation
6910881	Fuse panel side cowling		41	Cowling Installation
6910882	Dash cowling		41	Cowling Installation
6910883	Steering column cowling		41	Cowling Installation
6910895	Switch, aux. hydr.		43	Control Panel Switches
6910929	Internal grille		27	Cab Assy II
6910930	Guide		23	Cab Assy
6910931	Plug		23	Cab Assy
6910932	Nut		23	Cab Assy
6910933	Spacer		23	Cab Assy
6910934	Plate		23	Cab Assy
6910935	Screw		23	Cab Assy
6910946	Catch		27	Cab Assy II
6910947	Catch protect		27	Cab Assy II
6910948	Catch fixation		27	Cab Assy II
6910949	Washer		27	Cab Assy II
6910951	Screw		41	Cowling Installation
			43	Control Panel Switches
			231	Joystick / Susmic Installation
			291	Air Conditioning Installation
6910952	Washer		37	Pedals Installation
			225	Electrical Circuit Cab
6910953	Spacer		43	Control Panel Switches
6910955	Micro relay		225	Electrical Circuit Cab
			323	2nd Hydraulic Function On Boom - Electric
6910966	Support		243	Cooling System Installation
6910969	Hose, upper radiator		235	Engine Installation
6910970	Hose, lower radiator		235	Engine Installation
6910972	Pipe		153	Hydraulic Tank Installation
			243	Cooling System Installation
6910975	Spacer		51	Rear Window Installation
6910976	Washer		51	Rear Window Installation
			53	Wiper Installation
6910977	Washer		51	Rear Window Installation
6910978	Guide		51	Rear Window Installation
6910979	Guide		51	Rear Window Installation
6910981	Washer pipe		53	Wiper Installation
6910982	Washer pipe		53	Wiper Installation
6910983	Washer pipe		53	Wiper Installation
6910984	Spacer		47	Door Assy
6910985	Plate		243	Cooling System Installation

Part Number	Denomination	WAS	Page	Subgroup
6910989	Spacer		47	Door Assy
6910990	Washer		47	Door Assy
6910991	Washer		47	Door Assy
6910992	Nut cap		47	Door Assy
6910993	Hook		47	Door Assy
6910994	Lock cover		47	Door Assy
6910996	Screw		47	Door Assy
6910997	Screw		47	Door Assy
6910999	Screw		27	Cab Assy II
6911000	Seal		47	Door Assy
6911001	Seal		47	Door Assy
6911006	Roof wiper arm	6911712	53	Wiper Installation
6911014			297	DUNLOP 400/80-R24 153B Wheels
6911016	Shields (4.75b)		299	DUNLOP 400/80-R24 156B Wheels
6911028	Hose		249	Cooling Fan Circuit (with optional reverse)
6911074	Feed hose, fuel		11	Fuel Tank Installation
6911085	Hose		341	Steering Balance Kit
6911140	Hydraulic filter		153	Hydraulic Tank Installation
6911144	Plate		131	Telescope Cylinder Installation
6911147	Plate		133	Telescope Cylinder Installation
6911201	Support		291	Air Conditioning Installation
6911207	Support		291	Air Conditioning Installation
6911209	Support		291	Air Conditioning Installation
6911210	Support		291	Air Conditioning Installation
6911213	Seal		243	Cooling System Installation
6911233	Cylinder		133	Telescope Cylinder Installation
6911234	Cylinder		131 167	Telescope Cylinder Installation Telescope Cylinder - T40140
6911235	Key		131 133	Telescope Cylinder Installation Telescope Cylinder Installation
6911242	Carriage		67 85	End Boom Assy - T40140 End Boom Assy - T40170
6911253	Sill plate		13	Engine Cover
6911276	Indicator filing		235	Engine Installation
6911277	Hose		235	Engine Installation
6911325	Transmission box		225 231	Electrical Circuit Cab Joystick / Susmic Installation
6911326	Spacer		231	Joystick / Susmic Installation
6911354	Decal		331 333	Bobcat Decals Bobcat Decals
6911377	Alternator		227 285	Electrical Circuit Engine Alternator
6911400	Switch, water temp		227	Electrical Circuit Engine
6911476	Seal		19	Engine Basket
6911487	Accumulator		203	Hydrostatic Hoses and Fittings
6911724	Engine wiring harness		227	Electrical Circuit Engine

Part Number	Denomination	WAS	Page	Subgroup
6911733	Fuse box		225 231	Electrical Circuit Cab Joystick / Susmic Installation
6911734	Wire harness		221	Electrical Circuit Chassis
6911738	Switch		3	Chassis
6911746	Seal		243	Cooling System Installation
6911753	Sponge plate		17	Engine Sound Proofing
6911759	Plug		243	Cooling System Installation
6911760	Sponge plate		17	Engine Sound Proofing
6911761	Sponge plate		17	Engine Sound Proofing
6911762	Sponge plate		17	Engine Sound Proofing
6911763	Sponge plate		17	Engine Sound Proofing
6911764	Sponge plate		17	Engine Sound Proofing
6911767	Flange		153 185	Hydraulic Tank Installation Hydraulic Pump Installation
6911769	Seat assy		27 31	Cab Assy II Seat & Suspension
6911770	Exhaust tube (long)	6908103	241	Exhaust System
6911771	Screw	95575.7 95575.7	59 73	Fixed Boom Assy - T40140 Fixed Boom Assy - T40170
6911772	Sponge plate		17	Engine Sound Proofing
6911773	Sponge plate		17	Engine Sound Proofing
6911775	Foam		243	Cooling System Installation
6911778	Barb		17	Engine Sound Proofing
6911779	Clip		17	Engine Sound Proofing
6911798	Hub		243	Cooling System Installation
6911846	Screw		33	Heating/ventilation Installation
6911850	Gear		279	Water Pump and Thermostat
6911852	Screw		257	Flywheel and Drive Pulley
6911853	Collar		267	Oil Sump - Oil Pump
6911854	Union		269	Fuel Injection Equipment
6911862	Piston cooling jet		251	Cylinder Block
6911863	Washer		281	Turbocharger
6911864	Washer		273	Fuel Feeding
6911865	Washer		263	Rocker Shaft
6911866	Screw		275	Cylinder Head Cover
6911867	Screw		275	Cylinder Head Cover
6911868	Stud		281	Turbocharger
6911869	Screw		267 273	Oil Sump - Oil Pump Fuel Feeding
6911870	Screw		285	Alternator
6911871	Screw		285	Alternator
6911872	Screw		285	Alternator
6911873	Screw		279	Water Pump and Thermostat
6911874	Screw		269	Fuel Injection Equipment
6911875	Screw		263	Rocker Shaft
6911876	Screw		263	Rocker Shaft

Part Number	Denomination	WAS	Page	Subgroup
6911878	O-ring		275	Cylinder Head Cover
6911879	O-ring		275	Cylinder Head Cover
6911880	O-ring		277	Oil Cooler and Filter
6911881	O-ring		259	Cylinder Head
6911882	O-ring, thermostat		279	Water Pump and Thermostat
6911883	O-ring, oil filter		277	Oil Cooler and Filter
6911884	O-ring, oil filter		277	Oil Cooler and Filter
6911885	O-ring		279	Water Pump and Thermostat
6911886	O-ring		279	Water Pump and Thermostat
6911887	Oil seal housing		251	Cylinder Block
6911888	Seal		259	Cylinder Head
6911889	Collar		281	Turbocharger
6911890	Collar		273	Fuel Feeding
6911891	Plug		263	Rocker Shaft
6911892	Plug		251	Cylinder Block
6911893	Plug		251	Cylinder Block
6911894	Plug		265	Timing Gear
6911895	Thermostat		227 279	Electrical Circuit Engine Water Pump and Thermostat
6911896	Cooler		277	Oil Cooler and Filter
6911897	Conrod kit		255	Crankshaft - Pistons
6911898	Fuel injection pump		269	Fuel Injection Equipment
6911899	Atomiser assy		269	Fuel Injection Equipment
6911900	Nozzle		269	Fuel Injection Equipment
6911902	Feeding pipe		273	Fuel Feeding
6911903	Feeding pipe		273	Fuel Feeding
6911904	Hose		269	Fuel Injection Equipment
6911905	Filter element		277	Oil Cooler and Filter
6911906	Oil filter canister		277	Oil Cooler and Filter
6911907	Filter element, fuel		273	Fuel Feeding
6911908	Glow plug		269	Fuel Injection Equipment
6911909	Turbocharger		281	Turbocharger
6911910	Snap ring		263	Rocker Shaft
6911911	Switch, water temp		227 259	Electrical Circuit Engine Cylinder Head
6911912	Head filter		277	Oil Cooler and Filter
6911913	Starter motor		227 287	Electrical Circuit Engine Flywheel Housing and Starter
6911914	Bush		255	Crankshaft - Pistons
6911915	Bush		251	Cylinder Block
6911916	Washer		265	Timing Gear
6911917	Pulley		285	Alternator
6911918	Gear		269	Fuel Injection Equipment
6911919	Gear		265	Timing Gear
6911920	Gear		265	Timing Gear
6911921	Camshaft		263	Rocker Shaft

Part Number	Denomination	WAS	Page	Subgroup
6911922	Exhaust valve		259	Cylinder Head
6911923	Inlet valve		259	Cylinder Head
6911924	Spring		263	Rocker Shaft
6911925	Spring		259	Cylinder Head
6911926	Spring		275	Cylinder Head Cover
6911927	Dipstick		267	Oil Sump - Oil Pump
6911928	Plug		251	Cylinder Block
6911929	Screw		255	Crankshaft - Pistons
6911930	Plug		251	Cylinder Block
6911931	Plug		251	Cylinder Block
6911932	Plug		251	Cylinder Block
6911933	Screw		259	Cylinder Head
6911934	Screw		259	Cylinder Head
6911935	Banjo bolt		281	Turbocharger
6911936	Plug		251	Cylinder Block
6911937	Plug		251	Cylinder Block
6911938	Plug		277	Oil Cooler and Filter
6911939	Plug		259	Cylinder Head
6911940	Plug, oil filter		277	Oil Cooler and Filter
6911941	Plug, oil filter		277	Oil Cooler and Filter
6911942	Spacer		267	Oil Sump - Oil Pump
6911943	Spacer		273	Fuel Feeding
6911945	Insert		259	Cylinder Head
6911946	Insert		259	Cylinder Head
6911947	Cap		259	Cylinder Head
6911948	Adaptor		281	Turbocharger
6911949	Hose		281	Turbocharger
6911950	Hose		275	Cylinder Head Cover
6911951	Injection pipe		269	Fuel Injection Equipment
6911952	Injection pipe		269	Fuel Injection Equipment
6911953	Injection pipe		269	Fuel Injection Equipment
6911954	Injection pipe		269	Fuel Injection Equipment
6911955	Pipe		281	Turbocharger
6911956	Pipe		267	Oil Sump - Oil Pump
6911957	Pipe		281	Turbocharger
6911958	Plate		259	Cylinder Head
6911959	Lever		285	Alternator
6911960	Cover plate		275	Cylinder Head Cover
6911961	Lifting plate		259 265	Cylinder Head Timing Gear
6911963	Gasket		265	Timing Gear
6911964	Plate		251	Cylinder Block
6911965	Gasket		267	Oil Sump - Oil Pump
6911966	Bracket		269	Fuel Injection Equipment
6911967	Lifting plate		259	Cylinder Head

Part Number	Denomination	WAS	Page	Subgroup
6911969	Cylinder head gasket		259	Cylinder Head
6911970	Gasket		267	Oil Sump - Oil Pump
6911971	Gasket		265	Timing Gear
6911973	Gasket		281	Turbocharger
6911974	Pump gasket		279	Water Pump and Thermostat
6911975	Gasket		259	Cylinder Head
6911976	Gasket, oil cooler housing		277	Oil Cooler and Filter
6911977	Gasket, oil cooler		277	Oil Cooler and Filter
6911978	Gasket		281	Turbocharger
6911979	Gasket		281	Turbocharger
6911980	Gasket		281	Turbocharger
6911981	Gasket		281	Turbocharger
6911982	Seal		275	Cylinder Head Cover
6911983	Gasket		251 277	Cylinder Block Oil Cooler and Filter
6911985	Case		265	Timing Gear
6911986	Oil sump		267	Oil Sump - Oil Pump
6911987	Bracket		273	Fuel Feeding
6911988	Bracket		267	Oil Sump - Oil Pump
6911989	Clamp		269	Fuel Injection Equipment
6911990	Connector		273	Fuel Feeding
6911991	Connection		273	Fuel Feeding
6911992	Exhaust elbow		281	Turbocharger
6911993	Manifold		281	Turbocharger
6911994	Cap		275	Cylinder Head Cover
6911995	Cap		275	Cylinder Head Cover
6911996	Cover		275	Cylinder Head Cover
6911997	Diaphragm		275	Cylinder Head Cover
6911998	Bracket		281	Turbocharger
6911999	Bracket		285	Alternator
6912000	Hose		153	Hydraulic Tank Installation
6912002	Rocker assy		263	Rocker Shaft
6912003	Rocker assy		263	Rocker Shaft
6912004	Rocker assembly		263	Rocker Shaft
6912005	Spindle assy		263	Rocker Shaft
6912006	Pipe pump		269	Fuel Injection Equipment
6912007	Dipstick tube		267	Oil Sump - Oil Pump
6912008	Pipe		281	Turbocharger
6912009	Lift pump		273	Fuel Feeding
6912010	Oil pump		267	Oil Sump - Oil Pump
6912011	Pipe assy		279	Water Pump and Thermostat
6912012	Water inlet assy		279	Water Pump and Thermostat
6912013	Filter head		277	Oil Cooler and Filter
6912014	Pipe assy		275	Cylinder Head Cover
6912015	Oil cooler		277	Oil Cooler and Filter

Part Number	Denomination	WAS	Page	Subgroup
6912017	Head cover assy		275	Cylinder Head Cover
6912018	Clip		269	Fuel Injection Equipment
6912019	Bottom joint and gasket		289	Engine Gaskets Sets
6912020	Top joint and gasket kit		289	Engine Gaskets Sets
6912021	Bearing		255	Crankshaft - Pistons
6912022	Bearing kit		255	Crankshaft - Pistons
6912023	Mounting kit		273	Fuel Feeding
6912024	Water pump kit		279	Water Pump and Thermostat
6912025	Repair kit		279	Water Pump and Thermostat
6912026	Piston ring kit		255	Crankshaft - Pistons
6912027	Cylinder block kit		251	Cylinder Block
6912028	Cylinder head assy		259	Cylinder Head
6912029	Crankshaft assy		255	Crankshaft - Pistons
6912030	Bar		269	Fuel Injection Equipment
6912031	Bearing kit		255	Crankshaft - Pistons
6912032	Bearing kit		255	Crankshaft - Pistons
6912033	Bearing kit		255	Crankshaft - Pistons
6912034	Bearing		255	Crankshaft - Pistons
6912035	Bearing		255	Crankshaft - Pistons
6912036	Bearing		255	Crankshaft - Pistons
6912038	Cap		269	Fuel Injection Equipment
6912040	Conrod kit		255	Crankshaft - Pistons
6912041	Conrod kit		255	Crankshaft - Pistons
6912042	Conrod kit		255	Crankshaft - Pistons
6912043	Conrod kit		255	Crankshaft - Pistons
6912044	Conrod kit		255	Crankshaft - Pistons
6912046	Crankshaft gear		255	Crankshaft - Pistons
6912047	Plug		265	Timing Gear
6912049	Belt		257	Flywheel and Drive Pulley
6912050	Piston assy		255	Crankshaft - Pistons
6912051	Screw		251	Cylinder Block
6912056	Screw		267	Oil Sump - Oil Pump
6912058	Housing		211	Hydrostatic Pump Assy
6912059	Bearing		211	Hydrostatic Pump Assy
6912060	Lever		211	Hydrostatic Pump Assy
6912061	Support		211	Hydrostatic Pump Assy
6912062	Screw		211	Hydrostatic Pump Assy
6912063	Pin		211	Hydrostatic Pump Assy
6912064	Seal		211	Hydrostatic Pump Assy
6912065	Housing		211	Hydrostatic Pump Assy
6912066	Plug		211	Hydrostatic Pump Assy
6912067	Screw		211	Hydrostatic Pump Assy
6912068	Screw		211	Hydrostatic Pump Assy
6912069	Valve		211	Hydrostatic Pump Assy
6912070	Adaptor		211	Hydrostatic Pump Assy

Part Number	Denomination	WAS	Page	Subgroup
6912072	Rod		181	Stabilizer Cylinder
6912073	Inner ring		181	Stabilizer Cylinder
6912074	Cylinder		181	Stabilizer Cylinder
6912075	Grease nipple		181	Stabilizer Cylinder
6912076	Valve		181	Stabilizer Cylinder
6912080	Cylinder body		173	Tilt Cylinder
6912081	Cylinder head		173	Tilt Cylinder
6912082	Inner ring		173	Tilt Cylinder
6912100	Rod		167	Telescope Cylinder - T40140
6912101	Wire harness		259	Cylinder Head
6912102	Grip		57	Parking Brake Lever
6912103	Lever body		57	Parking Brake Lever
6912104	Switch		57	Parking Brake Lever
6912206	Support		189	Hydraulic Control Valve Installation
6912225	Nut		231	Joystick / Susmic Installation
6912439	Engine cover soundproofing		17	Engine Sound Proofing
6912440	Rear cover soundproofing		17	Engine Sound Proofing
6912457	Adhesive		41 225 231	Cowling Installation Electrical Circuit Cab Joystick / Susmic Installation
6912458	Joystick cowling		41	Cowling Installation
6912463	Plug		211	Hydrostatic Pump Assy
6912465	Switch		311	Valve Braking Switch Option
6912466	Union		311	Valve Braking Switch Option
6912468	Switch option on valve braking		337	Germany Version
6912485	Hinge		13	Engine Cover
6912522	Valve		187	Hydraulic Pump Assy
6912523	Set of seals for valve		187	Hydraulic Pump Assy
6912524	Set of seals		187	Hydraulic Pump Assy
6912525	Set of seals		187	Hydraulic Pump Assy
6912528	Coil		189	Hydraulic Control Valve Installation
6912529	Nut		189	Hydraulic Control Valve Installation
6912530	Block		189	Hydraulic Control Valve Installation
6912533	Valve		211	Hydrostatic Pump Assy
6912538	Set of seals		183	Hydraulic Motor
6912539	Valve		183	Hydraulic Motor
6912540	Valve		183	Hydraulic Motor
6912541	Coil		183	Hydraulic Motor
6912542	Cooler, water/oil		243	Cooling System Installation
6912543	Housing		243	Cooling System Installation
6912544	Fan grate		243	Cooling System Installation
6912545	Hose		243	Cooling System Installation
6912548	Set of seals		153	Hydraulic Tank Installation
6912549	Plugging indicator		153 227	Hydraulic Tank Installation Electrical Circuit Engine
6912550	Screw		243	Cooling System Installation

Part Number	Denomination	WAS	Page	Subgroup
6912554	Valve plate		211	Hydrostatic Pump Assy
6912558	Cover assy		211	Hydrostatic Pump Assy
6912559	Spring guide		211	Hydrostatic Pump Assy
6912560	Washer		211	Hydrostatic Pump Assy
6912561	Guide bolt		211	Hydrostatic Pump Assy
6912562	O-ring		211	Hydrostatic Pump Assy
6912563	Screw		211	Hydrostatic Pump Assy
6912564	Screw		211	Hydrostatic Pump Assy
6912567	Plate		211	Hydrostatic Pump Assy
6912572	Cap		153	Hydraulic Tank Installation
6912576	Spindle		109	Brakes - Front Axle
6912577	Washer	89935.1	109	Brakes - Front Axle
6912585	Hub	97413.9	99	Hub Reduction - Front Axle / Rear Axle
6912586	Valve		189	Hydraulic Control Valve Installation
6912587	Rubber band	89920.3	115	Steering - Rear Axle
6912592	Seals kit		189	Hydraulic Control Valve Installation
6912605	Cap grease nipple		173 181	Tilt Cylinder Stabilizer Cylinder
6912931	Bearing	100398-15S	99	Hub Reduction - Front Axle / Rear Axle
6913059	Hydraulic filter element		153	Hydraulic Tank Installation
6913110	Rod		133	Telescope Cylinder Installation
6913111	Plate		133	Telescope Cylinder Installation
6913148	Adhesive sponge		291	Air Conditioning Installation
6913204	Hose	6912449	153 203	Hydraulic Tank Installation Hydrostatic Hoses and Fittings
6913225	Tube		349	Hydraulic Tank Filling Kit
6913238	Cap		349	Hydraulic Tank Filling Kit
6913526	Tank	6911094	153	Hydraulic Tank Installation
6913565	Hydrostatic pump		153 203 211	Hydraulic Tank Installation Hydrostatic Hoses and Fittings Hydrostatic Pump Assy
6913567	Breather support	6913238	153	Hydraulic Tank Installation
6913569	Seal	98583.8	153	Hydraulic Tank Installation
6913570	Strainer		153	Hydraulic Tank Installation
6913644	Seal		19	Engine Basket
6913646	Seal		19	Engine Basket
6913654	Hose	85130.3	243 247	Cooling System Installation Cooling Fan Circuit
6913659	Hose	6911032	203	Hydrostatic Hoses and Fittings
6913718	Pulley	95539.3	81	2nd Intermediate Boom - T40170
6913719	Pulley	95538.5 95538.5 95538.5	63 77 81	Intermediate Boom Assy - T40140 1st Intermediate Boom - T40170 2nd Intermediate Boom - T40170
6913764	Stability indicator and wire har	6913047	43 225	Control Panel Switches Electrical Circuit Cab
6913915	Plate		231	Joystick / Susmic Installation
6913936	Heating pipe		33	Heating/ventilation Installation

Part Number	Denomination	WAS	Page	Subgroup
6914053	Screw		3	Chassis
6914064	Shock Absorber		235	Engine Installation
6914065	Shock Absorber		235	Engine Installation
6914082	Insulation		33	Heating/ventilation Installation
6914086	Nut		41	Cowling Installation
6914109	Captor		95 221	Axle Installation Electrical Circuit Chassis
6914170	R.H. control panel plate	6910511	43	Control Panel Switches
6914199	Plate		243	Cooling System Installation
6914200	Plate		243	Cooling System Installation
6914316	Damper		137 351	Steering Hoses & Fittings (with damper) Damper Kit
6914317	Protector		51	Rear Window Installation
6914318	Cover		51	Rear Window Installation
6914328	Spacer		291	Air Conditioning Installation
6914386	Steering balance valve		341	Steering Balance Kit
6914399	Steering balance kit		341	Steering Balance Kit
6914407	Spacer		23	Cab Assy
6914428	Seal		313	Matriculation Plate Option
6914523	Engine basket	6911088	19	Engine Basket
6914550	Cylinder		157 181	Stabilizers & Frame Level Cylinder Installation Stabilizer Cylinder
6914552	Cylinder assy		67 85 173	End Boom Assy - T40140 End Boom Assy - T40170 Tilt Cylinder
6914561	Lower support	6909974	41	Cowling Installation
6914586	Support for frame leveling kno		43 231	Control Panel Switches Joystick / Susmic Installation
6914597	Control box		225	Electrical Circuit Cab
6914643	Upper support		327	Windshield Protection Grill
6914645	Pipe		321	2nd Hydraulic Function On Boom
6914646	Pipe		321	2nd Hydraulic Function On Boom
6914651	L.H. lower support		327	Windshield Protection Grill
6914652	R.H. lower support		327	Windshield Protection Grill
6914657	Grill		327	Windshield Protection Grill
6914678	Seal		13	Engine Cover
6914730	Hydraulic block	6910660	203	Hydrostatic Hoses and Fittings
6914731	Chassis	6913264, 691080	3	Chassis
6914735	Tank	6910162	11	Fuel Tank Installation
6914736	Tank	6911217	11	Fuel Tank Installation
6914746	Hose	6913429 + 00837	203	Hydrostatic Hoses and Fittings
6914748	Seal	6912496	13	Engine Cover
6914787	Seal, upper part		27	Cab Assy II
6914788	Seal, lower part		27	Cab Assy II
6914907	Battery		221	Electrical Circuit Chassis
6914942	Cable stop		47	Door Assy

Part Number	Denomination	WAS	Page	Subgroup
6914995	Abacus card		299	DUNLOP 400/80-R24 156B Wheels
6914996	Abacus card		299	DUNLOP 400/80-R24 156B Wheels
6915066	Damper kit		351	Damper Kit
6915067	Installation instructions		351	Damper Kit
6915334	Spacer		243	Cooling System Installation
6915384	Chain pulley axle short		343	Boom Chain Pulley axles Kit
			345	Boom Chain Pulley axles Kit
6915386	Chain pulley axle long		343	Boom Chain Pulley axles Kit
			345	Boom Chain Pulley axles Kit
6915387	Boom chain pulley axles kit		343	Boom Chain Pulley axles Kit
			345	Boom Chain Pulley axles Kit
6915389	Stop		343	Boom Chain Pulley axles Kit
			345	Boom Chain Pulley axles Kit
6915517	Belt protector	6914411	243	Cooling System Installation
			291	Air Conditioning Installation
6915523	Hydraulic tank filling kit		349	Hydraulic Tank Filling Kit
6915524	Lever assy		57	Parking Brake Lever
			145	Parking Brake Hydraulic Installation
			147	Parking Brake Hydraulic Installation (accumulat
6915850	Chain pulley axle assembled		345	Boom Chain Pulley axles Kit
6915869	Fuel pre-filter Kit		347	Fuel Pre-Filter Kit
6915872	Tube		347	Fuel Pre-Filter Kit
6915873	Fuel feed hose		347	Fuel Pre-Filter Kit
6915874	Fuel feed hose		347	Fuel Pre-Filter Kit
6915875	Fuel pre-filter		347	Fuel Pre-Filter Kit
6915876	Tube		347	Fuel Pre-Filter Kit
69274.9	Elbow union		153	Hydraulic Tank Installation
69445.5	Boom		371	Crane Jib & Extension Jib
69513.0	Boom		371	Crane Jib & Extension Jib
6963094	Frame		23	Cab Assy
6971665	Support		23	Cab Assy
69791.2	Tooth		369	Toothed Bucket
			387	Toothed Bucket
69868.8	Spindle		371	Crane Jib & Extension Jib
70011.2	Hook		371	Crane Jib & Extension Jib
70012.0	Shackle		371	Crane Jib & Extension Jib
70022.9	Jib assy		371	Crane Jib & Extension Jib
70287.8	Washer		59	Fixed Boom Assy - T40140
			73	Fixed Boom Assy - T40170
			129	Lift & Compensation Cylinder Installation
70288.6	Clip		59	Fixed Boom Assy - T40140
			73	Fixed Boom Assy - T40170
			129	Lift & Compensation Cylinder Installation
70377.7	Hose		157	Stabilizers & Frame Level Cylinder Installation
70862.8	Hose		157	Stabilizers & Frame Level Cylinder Installation
70865.1	Hose		189	Hydraulic Control Valve Installation
70941.0	Adapter		363	Side Shifter Assy
			377	Side Shifter Assy 1000 mm
			379	Side Shifter Assy 1150 mm

Part Number	Denomination	WAS	Page	Subgroup
71 713.2	Washer		207	Hydrostatic Pump Assy
71058.2	Screw		115	Steering - Rear Axle
71064.0	Screw		107	Steering - Front Axle
			115	Steering - Rear Axle
71162.2	Rear window handle		51	Rear Window Installation
71209.1	Differential Assembly		113	Differential - Rear Axle
71263.8	Plug		251	Cylinder Block
			259	Cylinder Head
71275.2	Screw		267	Oil Sump - Oil Pump
71286.9	Screw		281	Turbocharger
71287.7	Screw		287	Flywheel Housing and Starter
71307.3	Washer		257	Flywheel and Drive Pulley
71329.7	Nut		269	Fuel Injection Equipment
71335.4	Screw		273	Fuel Feeding
71338.8	Screw		267	Oil Sump - Oil Pump
			269	Fuel Injection Equipment
			277	Oil Cooler and Filter
			279	Water Pump and Thermostat
			285	Alternator
71346.1	Screw		281	Turbocharger
71348.7	Screw		259	Cylinder Head
			269	Fuel Injection Equipment
71366.9	Bracket		275	Cylinder Head Cover
71381.8	Screw		251	Cylinder Block
			259	Cylinder Head
			265	Timing Gear
			277	Oil Cooler and Filter
			281	Turbocharger
71385.9	Stud		287	Flywheel Housing and Starter
71386.7	Washer		265	Timing Gear
71388.3	Screw		265	Timing Gear
71399.0	Screw		275	Cylinder Head Cover
71417.0	Clip		269	Fuel Injection Equipment
71426.1	Nut		269	Fuel Injection Equipment
71432.9	Nut		269	Fuel Injection Equipment
71439.4	Screw		279	Water Pump and Thermostat
71456.8	Screw		265	Timing Gear
			267	Oil Sump - Oil Pump
71465.9	Nut		267	Oil Sump - Oil Pump
71466.7	Olive		267	Oil Sump - Oil Pump
71468.3	Screw		267	Oil Sump - Oil Pump
71490.7	Nut		281	Turbocharger
71495.6	Nut		285	Alternator
			287	Flywheel Housing and Starter
71507.8	Screw		267	Oil Sump - Oil Pump
71564.9	Screw		251	Cylinder Block
71585.4	Bearing		211	Hydrostatic Pump Assy
71599.5	Dowel		211	Hydrostatic Pump Assy
			217	Hydrostatic Motor Assy

Part Number	Denomination	WAS	Page	Subgroup
71602.7	Screw		217	Hydrostatic Motor Assy
71603.5	Screw		217	Hydrostatic Motor Assy
71605.0	Screw		217	Hydrostatic Motor Assy
71610.0	Nut		217	Hydrostatic Motor Assy
71611.8	Cover		217 337	Hydrostatic Motor Assy Germany Version
71621.7	Washer		217	Hydrostatic Motor Assy
71622.5	Nozzle		217	Hydrostatic Motor Assy
71624.1	Seal		217	Hydrostatic Motor Assy
71626.6	Seal		217	Hydrostatic Motor Assy
71629.0	Cone		217	Hydrostatic Motor Assy
71630.8	Spring		217	Hydrostatic Motor Assy
71631.6	Screw		217	Hydrostatic Motor Assy
71632.4	O-ring		217	Hydrostatic Motor Assy
71633.2	Nut		217	Hydrostatic Motor Assy
71634.0	Plug		207	Hydrostatic Pump Assy
71635.7	Nozzle		217	Hydrostatic Motor Assy
71636.5	Plug		211 217	Hydrostatic Pump Assy Hydrostatic Motor Assy
71638.1	Nozzle		217	Hydrostatic Motor Assy
71643.1	Seal		217	Hydrostatic Motor Assy
71644.9	Seal		217	Hydrostatic Motor Assy
71646.4	Screw		217	Hydrostatic Motor Assy
71674.6	Plug	71659.7	207 211 217	Hydrostatic Pump Assy Hydrostatic Pump Assy Hydrostatic Motor Assy
71675.3	Plug		207 211	Hydrostatic Pump Assy Hydrostatic Pump Assy
71676.1	Bearing		207	Hydrostatic Pump Assy
71677.9	Support		207	Hydrostatic Pump Assy
71679.5	Pin		211	Hydrostatic Pump Assy
71681.1	Washer		211	Hydrostatic Pump Assy
71682.9	Pin		211	Hydrostatic Pump Assy
71684.5	Spring		211	Hydrostatic Pump Assy
71685.2	Slide nut		211	Hydrostatic Pump Assy
71690.2	Piston		211	Hydrostatic Pump Assy
71691.0	Retainer		211	Hydrostatic Pump Assy
71692.8	Guide		211	Hydrostatic Pump Assy
71693.6	Spacer		211	Hydrostatic Pump Assy
71701.7	Shaft		211	Hydrostatic Pump Assy
71702.5	Snap ring		207 211	Hydrostatic Pump Assy Hydrostatic Pump Assy
71706.6	Screw		207	Hydrostatic Pump Assy
71710.8	Spring guide		207	Hydrostatic Pump Assy
71711.6	Spring		207 211	Hydrostatic Pump Assy Hydrostatic Pump Assy
71715.7	Seal-lock nut		207	Hydrostatic Pump Assy

Part Number	Denomination	WAS	Page	Subgroup
71732.2	Seal		207 211	Hydrostatic Pump Assy Hydrostatic Pump Assy
71733.0	Seal		207 211	Hydrostatic Pump Assy Hydrostatic Pump Assy
71734.8	Housing		207 211	Hydrostatic Pump Assy Hydrostatic Pump Assy
71735.5	Screw		207 211	Hydrostatic Pump Assy Hydrostatic Pump Assy
71736.3	Housing		207 211	Hydrostatic Pump Assy Hydrostatic Pump Assy
71737.1	Seal-lock nut		207 211	Hydrostatic Pump Assy Hydrostatic Pump Assy
71738.9	Screw		207	Hydrostatic Pump Assy
71744.7	Screw		207	Hydrostatic Pump Assy
71748.8	Plug		211	Hydrostatic Pump Assy
71753.8	Screw		207 211	Hydrostatic Pump Assy Hydrostatic Pump Assy
71757.9	Charge pump assy		211	Hydrostatic Pump Assy
71758.7	Muff		207	Hydrostatic Pump Assy
71760.3	Cover assy		211	Hydrostatic Pump Assy
71761.1	O-ring		207	Hydrostatic Pump Assy
71762.9	Flange		211	Hydrostatic Pump Assy
71763.7	Washer		207	Hydrostatic Pump Assy
71764.5	Screw		207	Hydrostatic Pump Assy
71765.2	O-ring		207	Hydrostatic Pump Assy
71766.0	Cover		207	Hydrostatic Pump Assy
71767.8	Screw		207	Hydrostatic Pump Assy
71778.5	O-ring		207	Hydrostatic Pump Assy
71785.0	Plug		217	Hydrostatic Motor Assy
71825.4	Screw		13	Engine Cover
71921.1	Nut		291	Air Conditioning Installation
72065.6	Pressure switch		203	Hydrostatic Hoses and Fittings
72281.9	Hose		135 137	Steering Hoses & Fittings (without damper) Steering Hoses & Fittings (with damper)
72294.2	Elbow union		149 151	Quick Attach Installation (wide) Quick Attach Installation (narrow)
72554.9	Blade		367	Toothless Buckets
73968.0	Screw		303 305	Mudguard 20" Mudguard 24"
74335.1	Plug		291	Air Conditioning Installation
74425.0	Forks holder assy		357	Floating Pallet Forks
74467.2	Hose		137 351	Steering Hoses & Fittings (with damper) Damper Kit
74602.4	Hose		363	Side Shifter Assy
74863.2	Bush		67 85	End Boom Assy - T40140 End Boom Assy - T40170
75037.2	Hydraulic Pump Seal Kit		207 211	Hydrostatic Pump Assy Hydrostatic Pump Assy

Part Number	Denomination	WAS	Page	Subgroup
			173	Tilt Cylinder
			177	Frame Level Cylinder
75168.5	Bush		177	Frame Level Cylinder
			179	Stabilizer Cylinder
			181	Stabilizer Cylinder
75182.6	Tooth		359	Bales Pikes
			373	Bales Pikes
75197.4	Cylinder		389	Bucket with Grab
			391	Bucket with Grab - Hydraulics
			393	Manure Fork with Grab
			395	Manure Fork with Grab - Hydraulics
75221.2	Valve		177	Frame Level Cylinder
			181	Stabilizer Cylinder
75225.3	Seals kit		389	Bucket with Grab
			391	Bucket with Grab - Hydraulics
			393	Manure Fork with Grab
			395	Manure Fork with Grab - Hydraulics
75238.6	R.H. Assembly		389	Bucket with Grab
			393	Manure Fork with Grab
75249.3	L.H. Assembly		389	Bucket with Grab
			393	Manure Fork with Grab
75254.3	Pulley		257	Flywheel and Drive Pulley
75273.3	Grease nipple		389	Bucket with Grab
			393	Manure Fork with Grab
75277.4	O-ring		99	Hub Reduction - Front Axle / Rear Axle
75505.8	Plug		101	Reducer Box - Front Axle
75594.2	Hydraulic Motor Solenoid		217	Hydrostatic Motor Assy
75618.9	Bushing		171	Tilt Cylinder
			173	Tilt Cylinder
75633.8	Screw		179	Stabilizer Cylinder
			181	Stabilizer Cylinder
75658.5	U-joint		95	Axle Installation
			97	Cardan Shaft
75708.8	Cover Plate		103	Housing - Front Axle
75709.6	O-ring		103	Housing - Front Axle
75710.4	O-ring		103	Housing - Front Axle
75713.8	Pin		101	Reducer Box - Front Axle
75715.3	Screw		103	Housing - Front Axle
75716.1	Screw		103	Housing - Front Axle
75717.9	Breather		101	Reducer Box - Front Axle
			103	Housing - Front Axle
75719.5	Bush		107	Steering - Front Axle
			115	Steering - Rear Axle
75722.9	Tie Rod End		107	Steering - Front Axle
			115	Steering - Rear Axle
75723.7	Tie Rod Assembly		107	Steering - Front Axle
			115	Steering - Rear Axle
75724.5	Screw		107	Steering - Front Axle
75725.2	Steering Cylinder		107	Steering - Front Axle
75726.0	Cylinder head		107	Steering - Front Axle
			115	Steering - Rear Axle

Part Number	Denomination	WAS	Page	Subgroup
75728.6	Clamp		107	Steering - Front Axle
			113	Differential - Rear Axle
			115	Steering - Rear Axle
75730.2	Shaft		107	Steering - Front Axle
			115	Steering - Rear Axle
75731.0	Fork		107	Steering - Front Axle
			115	Steering - Rear Axle
75732.8	Housing		107	Steering - Front Axle
75733.6	Fork		107	Steering - Front Axle
			115	Steering - Rear Axle
75734.4	Washer		107	Steering - Front Axle
			115	Steering - Rear Axle
75735.1	Washer		107	Steering - Front Axle
75736.9	Clip		107	Steering - Front Axle
			115	Steering - Rear Axle
75739.3	Washer		111	Housing - Rear Axle
75746.8	Support		111	Housing - Rear Axle
75747.6	Bushing		111	Housing - Rear Axle
75748.4	Bushing		111	Housing - Rear Axle
75749.2	Washer		111	Housing - Rear Axle
75758.3	Steering Cylinder		115	Steering - Rear Axle
75760.9	Detector		115	Steering - Rear Axle
75762.5	Seal Kit		107	Steering - Front Axle
			115	Steering - Rear Axle
75775.7	Stop Plate		113	Differential - Rear Axle
75778.1	Bevel Gear		105	Differential - Front Axle
75779.9	Shim		105	Differential - Front Axle
			113	Differential - Rear Axle
75780.7	Shim 2.60mm		105	Differential - Front Axle
			113	Differential - Rear Axle
75781.5	Shim 2.70mm		105	Differential - Front Axle
			113	Differential - Rear Axle
75782.3	Shim 2.80mm		105	Differential - Front Axle
			113	Differential - Rear Axle
75783.1	Shim 2.90mm		105	Differential - Front Axle
			113	Differential - Rear Axle
75784.9	Shim 3.00mm		105	Differential - Front Axle
			113	Differential - Rear Axle
75785.6	Shim 3.10mm		105	Differential - Front Axle
			113	Differential - Rear Axle
75786.4	Shim 3.20mm		105	Differential - Front Axle
			113	Differential - Rear Axle
75787.2	Shim 3.30mm		105	Differential - Front Axle
			113	Differential - Rear Axle
75788.0	Shim		105	Differential - Front Axle
			113	Differential - Rear Axle
75789.8	Washer		113	Differential - Rear Axle
75791.4	Ring Gear		113	Differential - Rear Axle
75793.0	Plate		105	Differential - Front Axle
75802.9	Washer		113	Differential - Rear Axle

Part Number	Denomination	WAS	Page	Subgroup
75805.2	Clip		113	Differential - Rear Axle
75806.0	Bracket		113	Differential - Rear Axle
75822.7	Stud		99	Hub Reduction - Front Axle / Rear Axle
75824.3	Lock Ring		99	Hub Reduction - Front Axle / Rear Axle
75825.0	Support		99	Hub Reduction - Front Axle / Rear Axle
75826.8	Toothed Ring		99	Hub Reduction - Front Axle / Rear Axle
75830.0	Pinion carrier		99	Hub Reduction - Front Axle / Rear Axle
75831.8	Retaining Ring		99	Hub Reduction - Front Axle / Rear Axle
75832.6	Washer		99	Hub Reduction - Front Axle / Rear Axle
75833.4	Gear		99	Hub Reduction - Front Axle / Rear Axle
75834.2	Needle Bearing		99	Hub Reduction - Front Axle / Rear Axle
75835.9	Housing		101	Reducer Box - Front Axle
75836.7	Pin		101	Reducer Box - Front Axle
75839.1	Plug		101	Reducer Box - Front Axle
75840.9	Screw		101 115	Reducer Box - Front Axle Steering - Rear Axle
75841.7	Screw		101	Reducer Box - Front Axle
75842.5	Screw		101	Reducer Box - Front Axle
75843.3	Screw		101	Reducer Box - Front Axle
75844.1	Washer		101	Reducer Box - Front Axle
75845.8	Tube		101	Reducer Box - Front Axle
75846.6	Bracket		101	Reducer Box - Front Axle
75847.4	O-ring		101	Reducer Box - Front Axle
75848.2	Bearing		101	Reducer Box - Front Axle
75849.0	Plug		101	Reducer Box - Front Axle
75850.8	Bearing		101	Reducer Box - Front Axle
75851.6	Gear		101	Reducer Box - Front Axle
75852.4	Screw		101	Reducer Box - Front Axle
75853.2	Clip		101	Reducer Box - Front Axle
75854.0	Bearing		101	Reducer Box - Front Axle
75855.7	Gear		101	Reducer Box - Front Axle
75856.5	Bearing		101	Reducer Box - Front Axle
75857.3	Seal		101	Reducer Box - Front Axle
75858.1	Screw		101	Reducer Box - Front Axle
75859.9	Pin		101	Reducer Box - Front Axle
75860.7	Plug		101	Reducer Box - Front Axle
75883.9	Rack		27	Cab Assy II
75895.3	Front Wiper Blade		53	Wiper Installation
75896.1	Roof wiper blade	6911713	51	Rear Window Installation
			53	Wiper Installation
75898.7	Windshield wiper arm		53	Wiper Installation
75900.1	Rear wiper arm		51	Rear Window Installation
75903.5	Hinge		51	Rear Window Installation
75920.9	Windshield Wiper Motor		53	Wiper Installation
75926.6	Adapter		53	Wiper Installation

Part Number	Denomination	WAS	Page	Subgroup
75940.7	Cylinder		51	Rear Window Installation
75944.9	Seal		23	Cab Assy
75956.3	Seal		51	Rear Window Installation
75990.2	Hydraulic Pump Filter		207	Hydrostatic Pump Assy
76324.3	Decal - Sound signal		331 333	Bobcat Decals Bobcat Decals
76401.9	Hose		119 123	Boom Hydraulic Supply Boom Hydraulic Supply
76621.2	Hose		157	Stabilizers & Frame Level Cylinder Installation
76740.0	Bales pikes assy		359	Bales Pikes
76742.6	Bracket		359 373	Bales Pikes Bales Pikes
76837.4	Round pin		359 373	Bales Pikes Bales Pikes
77013.1	Adapter		161 203 307	Stabilizer Selector Valves Hydrostatic Hoses and Fittings Tow Valve Installation
77014.9	Plate		307	Tow Valve Installation
77136.0	Bracket		221	Electrical Circuit Chassis
77261.6	Bush		3 59 73	Chassis Fixed Boom Assy - T40140 Fixed Boom Assy - T40170
77297.0	Tyre		301	DUNLOP 405/70-R20 SPT9 Wheels
77380.4	Boom Pivot Bushing		3 59 67 73 85	Chassis Fixed Boom Assy - T40140 End Boom Assy - T40140 Fixed Boom Assy - T40170 End Boom Assy - T40170
77421.6	Pin		67 85 91 93 149 151	End Boom Assy - T40140 End Boom Assy - T40170 Manual Quick Attach Lock (wide) Manual Quick Attach Lock (narrow) Quick Attach Installation (wide) Quick Attach Installation (narrow)
77430.7	Washer		59 73	Fixed Boom Assy - T40140 Fixed Boom Assy - T40170
77488.5	Bearing		91	Manual Quick Attach Lock (wide)
77492.7	Screw		9	Front ballast
77494.3	Hose		149 151	Quick Attach Installation (wide) Quick Attach Installation (narrow)
77912.4	Adapter		157 189	Stabilizers & Frame Level Cylinder Installation Hydraulic Control Valve Installation
77919.9	Bracket		37	Pedals Installation
78021.3	Shock Absorber		21	Cab & Fixations
78256.5	Hydrostatic Motor Assy		203 217	Hydrostatic Hoses and Fittings Hydrostatic Motor Assy
78428.0	Side-Shifter assy		363 365 379 381	Side Shifter Assy Side Shifter Assy II Side Shifter Assy 1150 mm Side Shifter Assy II
78429.8	Blade		385	Toothless Buckets

Part Number	Denomination	WAS	Page	Subgroup
			391	Bucket with Grab - Hydraulics
78485.0	Forks holder		375	Rigid Forks Holder
78486.8	Carriage		377 381	Side Shifter Assy 1000 mm Side Shifter Assy II
78489.2	Bucket «riman»		385	Toothless Buckets
78490.0	Bucket «riman»		385	Toothless Buckets
78491.8	Bucket «riman»		385	Toothless Buckets
78568.3	Mudguard		303 305	Mudguard 20" Mudguard 24"
78569.1	Plate		305	Mudguard 24"
78688.9	Expansion tank		235	Engine Installation
78705.1	Adapter		153 203	Hydraulic Tank Installation Hydrostatic Hoses and Fittings
78743.2	Drain plug		153 161	Hydraulic Tank Installation Stabilizer Selector Valves
78745.7	Adapter		235	Engine Installation
78815.8	Front worklight	6909971	27 225	Cab Assy II Electrical Circuit Cab
78816.4	Rear worklight		225	Electrical Circuit Cab
78816.6	Rear Worklight	6909970	27	Cab Assy II
78817.4	Rotating Beacon Light		21 337	Cab & Fixations Germany Version
78818.2	Connection		23	Cab Assy
78819.0	Gyrolight plug		23	Cab Assy
78856.2	Plate		21	Cab & Fixations
78863.8	Support		21	Cab & Fixations
78867.9	Support		21	Cab & Fixations
78869.5	Negative Battery Cable		221	Electrical Circuit Chassis
78872.9	Hydraulic Oil Temperature Sen		227	Electrical Circuit Engine
78895.0	Protector		227	Electrical Circuit Engine
78927.1	Plug		143	Service Brake Hydraulic Installation
79147.5	Hose		135 137 351	Steering Hoses & Fittings (without damper) Steering Hoses & Fittings (with damper) Damper Kit
79148.3	Hose		135 137	Steering Hoses & Fittings (without damper) Steering Hoses & Fittings (with damper)
79160.8	Screw		135 137 161 249	Steering Hoses & Fittings (without damper) Steering Hoses & Fittings (with damper) Stabilizer Selector Valves Cooling Fan Circuit (with optional reverse)
79288.7	Rubber mounting		3	Chassis
79292.9	Reinforcement Plate		303	Mudguard 20"
79293.7	Screw		303 305	Mudguard 20" Mudguard 24"
79294.5	Screw		303 305	Mudguard 20" Mudguard 24"
79297.8	Cap		47 303 305	Door Assy Mudguard 20" Mudguard 24"

Part Number	Denomination	WAS	Page	Subgroup
79334.9	Light		313	Matriculation Plate Option
79365.3	Bushing		151	Quick Attach Installation (narrow)
79379.4	Bearing		93	Manual Quick Attach Lock (narrow)
79380.2	Spindle		93	Manual Quick Attach Lock (narrow)
79386.9	Protection		387	Toothed Bucket
79523.7	Decal - Safety - Do not ride for		331	Bobcat Decals
			333	Bobcat Decals
79524.5	Decal - Safety - Don't stand un		331	Bobcat Decals
			333	Bobcat Decals
79525.2	Decal - Safety - Safety distanc		331	Bobcat Decals
			333	Bobcat Decals
79526.0	Decal - Safety - Starting		331	Bobcat Decals
			333	Bobcat Decals
79527.8	Engine Drive Belt		243	Cooling System Installation
79531.0	Connector		323	2nd Hydraulic Function On Boom - Electric
79532.8	Connector		323	2nd Hydraulic Function On Boom - Electric
79533.6	Front Light Assembly, RH		221	Electrical Circuit Chassis
79534.4	Front Light Assembly, LH		221	Electrical Circuit Chassis
79539.3	Front Light Wire Harness, LH		3	Chassis
			221	Electrical Circuit Chassis
79540.1	Front Light Wire Harness, RH		3	Chassis
79549.2	Female connector		67	End Boom Assy - T40140
			85	End Boom Assy - T40170
79550.0	Block		67	End Boom Assy - T40140
			85	End Boom Assy - T40170
79551.8	Connector		67	End Boom Assy - T40140
			85	End Boom Assy - T40170
79552.6	Block		67	End Boom Assy - T40140
			85	End Boom Assy - T40170
79553.4	Female connector		67	End Boom Assy - T40140
			85	End Boom Assy - T40170
79554.2	Block		67	End Boom Assy - T40140
			85	End Boom Assy - T40170
79555.9	Male connector		67	End Boom Assy - T40140
			85	End Boom Assy - T40170
79556.7	Block		67	End Boom Assy - T40140
			85	End Boom Assy - T40170
79581.5	Cover		27	Cab Assy II
79618.5	Steering valve (Orbitrol)		141	Steering Hydraulics Cab
79645.8	Decal - Safety - Don't incline lo		331	Bobcat Decals
			333	Bobcat Decals
79733.2	Wire harness		221	Electrical Circuit Chassis
79788.6	Clamp		241	Exhaust System
79861.1	Positive Battery Cable		221	Electrical Circuit Chassis
79864.5	Screw		21	Cab & Fixations
			41	Cowling Installation
			231	Joystick / Susmic Installation
79872.8	Spacer		21	Cab & Fixations
79879.3	Washer		21	Cab & Fixations

Part Number	Denomination	WAS	Page	Subgroup
79903.1	Mirror LH		23	Cab Assy
79926.2	Terminal		227	Electrical Circuit Engine
79930.4	Relay		225 227	Electrical Circuit Cab Electrical Circuit Engine
79946.0	Fuse		227	Electrical Circuit Engine
79947.8	Fuse 50 Amp		227	Electrical Circuit Engine
80220.7	Bezel		43	Control Panel Switches
80221.5	Bezel		43	Control Panel Switches
80224.9	Relay		291	Air Conditioning Installation
80226.4	Diode		225	Electrical Circuit Cab
80400.5	Carriage Pin		67 85 91 93 149 151	End Boom Assy - T40140 End Boom Assy - T40170 Manual Quick Attach Lock (wide) Manual Quick Attach Lock (narrow) Quick Attach Installation (wide) Quick Attach Installation (narrow)
80407.0	Hose		119 123	Boom Hydraulic Supply Boom Hydraulic Supply
80642.2	Manure fork		393 395	Manure Fork with Grab Manure Fork with Grab - Hydraulics
80732.7	T- union		185	Hydraulic Pump Installation
80901.2	Plate		359 373	Bales Pikes Bales Pikes
80906.1	Bucket		369	Toothed Bucket
80907.9	Bucket		367	Toothless Buckets
80908.7	Forks holder		361	Rigid Forks Holder
80909.5	Forks holder		361	Rigid Forks Holder
80910.3	Bucket		369	Toothed Bucket
80914.5	Bucket		367	Toothless Buckets
80917.8	Splash plate		359 361 363	Bales Pikes Rigid Forks Holder Side Shifter Assy
80919.4	Edging		3	Chassis
80922.8	Plate		361	Rigid Forks Holder
80926.9	Plate		371	Crane Jib & Extension Jib
80929.3	Plate		387	Toothed Bucket
80936.8	Plate		371	Crane Jib & Extension Jib
80942.6	Forks Holder		359 361 363	Bales Pikes Rigid Forks Holder Side Shifter Assy
80943.4	Forks holder		361	Rigid Forks Holder
80945.9	Bales pikes assy		359	Bales Pikes
80997.0	Plate		361	Rigid Forks Holder
81000.2	Pin		389 393	Bucket with Grab Manure Fork with Grab
81001.0	Pin		389 393	Bucket with Grab Manure Fork with Grab
81002.8	Pin		389 393	Bucket with Grab Manure Fork with Grab

Part Number	Denomination	WAS	Page	Subgroup
			395	Manure Fork with Grab - Hydraulics
81004.4	Collar		391	Bucket with Grab - Hydraulics
			395	Manure Fork with Grab - Hydraulics
81005.1	Collar		391	Bucket with Grab - Hydraulics
			395	Manure Fork with Grab - Hydraulics
81006.9	Spacer		389	Bucket with Grab
			393	Manure Fork with Grab
81007.7	Elbow union		391	Bucket with Grab - Hydraulics
			395	Manure Fork with Grab - Hydraulics
81008.5	Hose		391	Bucket with Grab - Hydraulics
			395	Manure Fork with Grab - Hydraulics
81009.3	Hose		391	Bucket with Grab - Hydraulics
81010.1	Hose		391	Bucket with Grab - Hydraulics
81011.9	Hose		391	Bucket with Grab - Hydraulics
			395	Manure Fork with Grab - Hydraulics
81012.7	Pin		389	Bucket with Grab
			393	Manure Fork with Grab
81013.5	Washer		389	Bucket with Grab
			393	Manure Fork with Grab
81014.3	Union		391	Bucket with Grab - Hydraulics
			395	Manure Fork with Grab - Hydraulics
81015.0	Union		391	Bucket with Grab - Hydraulics
			395	Manure Fork with Grab - Hydraulics
81019.2	Screw		265	Timing Gear
81026.7	Plug		275	Cylinder Head Cover
81036.6	Screw		257	Flywheel and Drive Pulley
81037.4	Washer		257	Flywheel and Drive Pulley
81038.2	Flywheel assembly		257	Flywheel and Drive Pulley
81039.0	Seal		287	Flywheel Housing and Starter
81040.8	Screw		287	Flywheel Housing and Starter
81041.6	Housing		287	Flywheel Housing and Starter
81045.7	Washer		269	Fuel Injection Equipment
81046.5	Nut		269	Fuel Injection Equipment
81063.0	Seal		267	Oil Sump - Oil Pump
81088.7	Connection		277	Oil Cooler and Filter
81205.7	Valve		179	Stabilizer Cylinder
81284.2	Screw		51	Rear Window Installation
81296.6	Valve		207	Hydrostatic Pump Assy
			211	Hydrostatic Pump Assy
81420.2	Cylinder block		207	Hydrostatic Pump Assy
81421.0	Axle seal kit		207	Hydrostatic Pump Assy
			211	Hydrostatic Pump Assy
81422.8	Charge pump		207	Hydrostatic Pump Assy
81423.6	Glass		207	Hydrostatic Pump Assy
81424.4	Screw		207	Hydrostatic Pump Assy
			211	Hydrostatic Pump Assy
81425.1	Screw		207	Hydrostatic Pump Assy
			211	Hydrostatic Pump Assy
81426.9	Union		207	Hydrostatic Pump Assy

Part Number	Denomination	WAS	Page	Subgroup
			211	Hydrostatic Pump Assy
81428.5	Plate		207	Hydrostatic Pump Assy
81429.3	Seal		207	Hydrostatic Pump Assy
81430.1	Control Block		207	Hydrostatic Pump Assy
81431.9	Nozzle		207	Hydrostatic Pump Assy
81432.7	Filter		207	Hydrostatic Pump Assy
81433.5	Valve segment		217	Hydrostatic Motor Assy
81434.3	Cylinder block		217	Hydrostatic Motor Assy
81435.0	Shaft		217	Hydrostatic Motor Assy
81436.8	Bearing plate		217	Hydrostatic Motor Assy
81437.6	Seal		217	Hydrostatic Motor Assy
81439.2	Condenser		291	Air Conditioning Installation
81443.4	Screw		217	Hydrostatic Motor Assy
81444.2	O-ring		217	Hydrostatic Motor Assy
81445.9	Piston		217	Hydrostatic Motor Assy
81448.3	Cover		217	Hydrostatic Motor Assy
81450.9	Seal		217	Hydrostatic Motor Assy
81455.8	Control	95424.8	217	Hydrostatic Motor Assy
81458.2	Spindle		217	Hydrostatic Motor Assy
81460.8	Spring		217	Hydrostatic Motor Assy
81463.2	Hydrostatic Motor Seal Kit		217	Hydrostatic Motor Assy
81473.1	Cylinder head		179 181	Stabilizer Cylinder Stabilizer Cylinder
81476.4	Tube		365 381	Side Shifter Assy II Side Shifter Assy II
81515.9	Rod		107 115	Steering - Front Axle Steering - Rear Axle
81533.2	Washer		365 381	Side Shifter Assy II Side Shifter Assy II
81544.9	Support		111	Housing - Rear Axle
81549.8	Bracket		115	Steering - Rear Axle
81573.8	Grease Nipple		163 165 171 173 177 179 181	Lift Cylinder Compensating Cylinder Tilt Cylinder Tilt Cylinder Frame Level Cylinder Stabilizer Cylinder Stabilizer Cylinder
81632.2	Bellow		31	Seat & Suspension
81635.5	Inner shoe		365 381	Side Shifter Assy II Side Shifter Assy II
81636.3	Skate		365 381	Side Shifter Assy II Side Shifter Assy II
81638.9	Tooth		393	Manure Fork with Grab
82019.1	Adhesive 20 km/h	90990.3	337	Germany Version
82020.9	Adhesive 25 km/h	84915.8	337	Germany Version
82021.7	Adhesive 30 km/h		337	Germany Version
82025.8	O-ring		203	Hydrostatic Hoses and Fittings

Part Number	Denomination	WAS	Page	Subgroup
82028.2	Plate		385	Toothless Buckets
82029.0	Bucket		387	Toothed Bucket
82031.6	Forks holder		373 375 379	Bales Pikes Rigid Forks Holder Side Shifter Assy 1150 mm
82032.4	Plate		359 373 375	Bales Pikes Bales Pikes Rigid Forks Holder
82046.4	Side-sifter assy		379	Side Shifter Assy 1150 mm
82049.8	Side-sifter assy		377	Side Shifter Assy 1000 mm
82050.6	Fork holder assembly.		375	Rigid Forks Holder
82051.4	Side-sifter assy		379	Side Shifter Assy 1150 mm
82052.2	Side-sifter assy and forks		379	Side Shifter Assy 1150 mm
82053.0	Bales pikes assembly		373	Bales Pikes
82054.8	Side-sifter assy		377	Side Shifter Assy 1000 mm
82127.2	Valve		129	Lift & Compensation Cylinder Installation
82167.8	Collar		147	Parking Brake Hydraulic Installation (accumulat
82181.9	Union		189	Hydraulic Control Valve Installation
82222.1	Hose		379	Side Shifter Assy 1150 mm
82223.9	Plate		371	Crane Jib & Extension Jib
82227.0	Shields (5,5 B)		301	DUNLOP 405/70-R20 SPT9 Wheels
82261.9	Rim		301	DUNLOP 405/70-R20 SPT9 Wheels
82265.0	Light		221	Electrical Circuit Chassis
82266.8	Rear Light, LH		221	Electrical Circuit Chassis
82428.4	Hose		341	Steering Balance Kit
82459.9	Screw		67 85 91 93 149 151	End Boom Assy - T40140 End Boom Assy - T40170 Manual Quick Attach Lock (wide) Manual Quick Attach Lock (narrow) Quick Attach Installation (wide) Quick Attach Installation (narrow)
83757.5	Gas Cylinder		13	Engine Cover
83962.1	Wheel chock		337	Germany Version
84078.5	Bush		63 77 81	Intermediate Boom Assy - T40140 1st Intermediate Boom - T40170 2nd Intermediate Boom - T40170
84097.5	Wide quick attach		91 149	Manual Quick Attach Lock (wide) Quick Attach Installation (wide)
84106.4	Connecting rod		3	Chassis
84169.2	Cardan shaft		95 97	Axle Installation Cardan Shaft
84176.7	Pin		3	Chassis
84177.5	Spindle		157	Stabilizers & Frame Level Cylinder Installation
84195.7	Spindle		91	Manual Quick Attach Lock (wide)
84237.7	Spindle		157	Stabilizers & Frame Level Cylinder Installation
84238.5	L.H. ballast		7	Ballast
84239.3	R.H. ballast		7	Ballast
84449.6	Adapter kit		353	Tool Adaptor Kit

Part Number	Denomination	WAS	Page	Subgroup
84522.2	Fork holder assembly.		375	Rigid Forks Holder
84536.2	Wedge		367	Toothless Buckets
			385	Toothless Buckets
84547.9	Bucket «sambron»		385	Toothless Buckets
84548.7	Plate		385	Toothless Buckets
84625.3	Screw		11	Fuel Tank Installation
84634.5	Kit		389	Bucket with Grab
84654.3	Wire harness		313	Matriculation Plate Option
84848.1	Support		91	Manual Quick Attach Lock (wide)
84940.6	Bracket		315	Tow Hitch
84953.9	Plate		385	Toothless Buckets
84954.7	Bucket «sambron»		385	Toothless Buckets
84957.0	Bucket		367	Toothless Buckets
84962.0	Plate		385	Toothless Buckets
84963.8	Bucket «sambron»		385	Toothless Buckets
84969.5	Hose		363	Side Shifter Assy
84997.6	Screw		19	Engine Basket
85102.2	Screw		3	Chassis
85170.9	Union		153	Hydraulic Tank Installation
85171.7	Thumb Screw		291	Air Conditioning Installation
85360.6	Screw		319	Rear View Mirror
85471.1	Hose		127	Boom Hydraulic Supply from Control Valve
85472.9	Hose		307	Tow Valve Installation
85480.2	Hose		149	Quick Attach Installation (wide)
			151	Quick Attach Installation (narrow)
85481.0	Pin		149	Quick Attach Installation (wide)
			151	Quick Attach Installation (narrow)
85962.9	Pipe		131	Telescope Cylinder Installation
85963.7	Pipe		119	Boom Hydraulic Supply
			123	Boom Hydraulic Supply
			131	Telescope Cylinder Installation
			133	Telescope Cylinder Installation
86167.4	Nut		27	Cab Assy II
88029.4	Compressor oil		291	Air Conditioning Installation
88030.2	Gas R-134A		291	Air Conditioning Installation
88236.5	Washer		7	Ballast
			19	Engine Basket
88271.2	Screw		131	Telescope Cylinder Installation
			133	Telescope Cylinder Installation
88299.3	Screw		129	Lift & Compensation Cylinder Installation
88395.9	Insulation		243	Cooling System Installation
88580.6	Hose		203	Hydrostatic Hoses and Fittings
88581.4	Hose		203	Hydrostatic Hoses and Fittings
88597.0	Spindle		157	Stabilizers & Frame Level Cylinder Installation
88624.2	Shim		21	Cab & Fixations
88702.6	Outlet pipe R.H.	82234.6	241	Exhaust System
88704.2	Pipe		161	Stabilizer Selector Valves

Part Number	Denomination	WAS	Page	Subgroup
88723.2	Hose		135	Steering Hoses & Fittings (without damper)
			137	Steering Hoses & Fittings (with damper)
88724.0	Hose		135	Steering Hoses & Fittings (without damper)
			137	Steering Hoses & Fittings (with damper)
88730.7	Support		161	Stabilizer Selector Valves
88739.8	Block		129	Lift & Compensation Cylinder Installation
88804.0	Hose		143	Service Brake Hydraulic Installation
88808.1	Cylinder assy		157	Stabilizers & Frame Level Cylinder Installation
			177	Frame Level Cylinder
88825.5	Switch		291	Air Conditioning Installation
88826.3	Plate		291	Air Conditioning Installation
88827.1	Protector		291	Air Conditioning Installation
88830.5	Plate		291	Air Conditioning Installation
88844.6	Hose		291	Air Conditioning Installation
88848.7	Hose		291	Air Conditioning Installation
89034.3	Fork		361	Rigid Forks Holder
			363	Side Shifter Assy
			375	Rigid Forks Holder
			377	Side Shifter Assy 1000 mm
			379	Side Shifter Assy 1150 mm
89096.2	Support		3	Chassis
89097.0	Support		3	Chassis
89233.1	Light		339	Frontal Safety Signalling for Germany
89252.1	Adhesive		339	Frontal Safety Signalling for Germany
89253.9	Adhesive		339	Frontal Safety Signalling for Germany
89269.5	Front axle assy		95	Axle Installation
			103	Housing - Front Axle
89332.1	Washer		133	Telescope Cylinder Installation
89474.1	Tube		143	Service Brake Hydraulic Installation
89475.8	Tube		145	Parking Brake Hydraulic Installation
			147	Parking Brake Hydraulic Installation (accumulat
89477.4	Tube		143	Service Brake Hydraulic Installation
89503.7	Adapter		135	Steering Hoses & Fittings (without damper)
			137	Steering Hoses & Fittings (with damper)
89516.9	Washer		13	Engine Cover
			131	Telescope Cylinder Installation
			133	Telescope Cylinder Installation
			235	Engine Installation
			241	Exhaust System
89517.7	Washer		95	Axle Installation
			185	Hydraulic Pump Installation
			203	Hydrostatic Hoses and Fittings
			235	Engine Installation
89518.5	Washer		11	Fuel Tank Installation
			19	Engine Basket
			203	Hydrostatic Hoses and Fittings
			235	Engine Installation
			303	Mudguard 20"
			305	Mudguard 24"
89519.3	Washer		131	Telescope Cylinder Installation
			133	Telescope Cylinder Installation

Part Number	Denomination	WAS	Page	Subgroup
			243	Cooling System Installation
89522.7	Clamp		153	Hydraulic Tank Installation
89523.5	Clamp		3	Chassis
			153	Hydraulic Tank Installation
89577.1	Wedge		309	Wheel Wedge Option
89641.5	Bracket		291	Air Conditioning Installation
89642.3	Switch		291	Air Conditioning Installation
89643.1	Dryer		291	Air Conditioning Installation
89647.2	Hose		291	Air Conditioning Installation
89648.0	Hose		291	Air Conditioning Installation
89649.8	Hose		291	Air Conditioning Installation
89664.9	Compressor		291	Air Conditioning Installation
89885.8	Screw		111	Housing - Rear Axle
89905.4	Support		103	Housing - Front Axle
89906.2	O-Ring		103	Housing - Front Axle
89908.8	Valve		103	Housing - Front Axle
89912.0	Nut		103	Housing - Front Axle
89913.8	Bushing		103	Housing - Front Axle
89914.6	Stud		103	Housing - Front Axle
89915.3	O-ring		103	Housing - Front Axle
89916.1	Support		103	Housing - Front Axle
89917.9	Pin CDS=sleeve		103	Housing - Front Axle
89924.5	Flange		109	Brakes - Front Axle
89925.2	Counter Disc		109	Brakes - Front Axle
89926.0	Disc		109	Brakes - Front Axle
89927.8	Counter Disc		109	Brakes - Front Axle
89928.6	Hub		109	Brakes - Front Axle
89929.4	Seal		109	Brakes - Front Axle
89930.2	Screw Assembly		109	Brakes - Front Axle
89934.4	Washer		109	Brakes - Front Axle
89936.9	Hub		109	Brakes - Front Axle
89937.7	Housing		109	Brakes - Front Axle
89955.9	Housing		103	Housing - Front Axle
89957.5	Differential, Complete		105	Differential - Front Axle
89959.1	Screw		111	Housing - Rear Axle
89963.3	Sleeve		99	Hub Reduction - Front Axle / Rear Axle
89964.1	Screw		99	Hub Reduction - Front Axle / Rear Axle
89988.0	Bush		365	Side Shifter Assy II
			381	Side Shifter Assy II
89991.4	Seals kit		365	Side Shifter Assy II
			381	Side Shifter Assy II
89998.9	Rod		365	Side Shifter Assy II
			381	Side Shifter Assy II
90112.4	Hydraulic pipe		147	Parking Brake Hydraulic Installation (accumulat
90113.2	Accumulator		147	Parking Brake Hydraulic Installation (accumulat
90191.8	Tube		145	Parking Brake Hydraulic Installation

Part Number	Denomination	WAS	Page	Subgroup
90237.9	Hydraulic pipe		135 137	Steering Hoses & Fittings (without damper) Steering Hoses & Fittings (with damper)
90238.7	Hydraulic pipe		135 137	Steering Hoses & Fittings (without damper) Steering Hoses & Fittings (with damper)
90245.2	Screw		21	Cab & Fixations
90281.7	Bush		3 59 73	Chassis Fixed Boom Assy - T40140 Fixed Boom Assy - T40170
90289.0	Union		143 145 147	Service Brake Hydraulic Installation Parking Brake Hydraulic Installation Parking Brake Hydraulic Installation (accumulat
90327.8	Handle		3	Chassis
90490.4	Plate		235	Engine Installation
90531.5	Roller		291	Air Conditioning Installation
90545.5	Alternator Belt		291	Air Conditioning Installation
90719.6	Elbow union		157	Stabilizers & Frame Level Cylinder Installation
90807.9	Brake Valve		143	Service Brake Hydraulic Installation
90820.2	Distributor Slide		201	Hydraulic Control Valve Frame Leveling Section
90823.6	Valve		193	Hydraulic Control Valve Lift Section
90898.8	Distributor Wiring Harness		221	Electrical Circuit Chassis
90911.9	Inclinometer		221	Electrical Circuit Chassis
90913.5	Buzzer		221	Electrical Circuit Chassis
90930.9	Control Knob		43 225 231	Control Panel Switches Electrical Circuit Cab Joystick / Susmic Installation
92006.6	Electro-distributor assy		157	Stabilizers & Frame Level Cylinder Installation
92055.3	Front support		3	Chassis
92058.7	Arm		157	Stabilizers & Frame Level Cylinder Installation
92062.9	Shoe		157	Stabilizers & Frame Level Cylinder Installation
92126.2	Hose		203	Hydrostatic Hoses and Fittings
92131.2	Selector Valve		321	2nd Hydraulic Function On Boom
92132.0	Housing		321	2nd Hydraulic Function On Boom
92210.4	Washer		203	Hydrostatic Hoses and Fittings
92218.7	Pin		151	Quick Attach Installation (narrow)
92220.3	Tube		151	Quick Attach Installation (narrow)
92249.2	Pipe		149	Quick Attach Installation (wide)
92250.0	Spindle		149	Quick Attach Installation (wide)
92303.7	Bracket		21	Cab & Fixations
92323.5	Hose		157 189	Stabilizers & Frame Level Cylinder Installation Hydraulic Control Valve Installation
92398.7	Spring		151	Quick Attach Installation (narrow)
92399.5	Spring		149	Quick Attach Installation (wide)
92404.3	Decal - Pedal functions		331 333	Bobcat Decals Bobcat Decals
92420.9	Quick Attach Cylinder		149 151 175	Quick Attach Installation (wide) Quick Attach Installation (narrow) Quick Attach Cylinder
92431.6	Wheel assy		301	DUNLOP 405/70-R20 SPT9 Wheels

Part Number	Denomination	WAS	Page	Subgroup
			151	Quick Attach Installation (narrow)
92601.4	Housing		105	Differential - Front Axle
			113	Differential - Rear Axle
92614.7	Housing		217	Hydrostatic Motor Assy
92637.8	O-ring		153	Hydraulic Tank Installation
			185	Hydraulic Pump Installation
92642.8	Nut		285	Alternator
92645.1	Spindle		175	Quick Attach Cylinder
92650.1	Hose		157	Stabilizers & Frame Level Cylinder Installation
92651.9	Pipe		3	Chassis
92652.7	Protector		157	Stabilizers & Frame Level Cylinder Installation
92706.1	Plate		313	Matriculation Plate Option
92762.4	Decal - Safety - Engine		331	Bobcat Decals
			333	Bobcat Decals
92783.0	Decal		369	Toothed Bucket
92785.5	Adhesif		387	Toothed Bucket
92790.5	Protection		367	Toothless Buckets
			385	Toothless Buckets
92795.4	Protection		387	Toothed Bucket
92798.8	Shim		335	Italy Version
92803.6	Decal		369	Toothed Bucket
92805.1	Decal		369	Toothed Bucket
92806.9	Adhesif		387	Toothed Bucket
92808.5	Decal		369	Toothed Bucket
92809.3	Protection		369	Toothed Bucket
92954.7	Joystick		225	Electrical Circuit Cab
			229	Joystick
			231	Joystick / Susmic Installation
92955.4	Wire harness		225	Electrical Circuit Cab
92967.9	Wire harness		339	Frontal Safety Signalling for Germany
92968.7	Plate		3	Chassis
92972.9	Switch		3	Chassis
92991.9	Hose		145	Parking Brake Hydraulic Installation
			147	Parking Brake Hydraulic Installation (accumulat
92995.0	Hose		249	Cooling Fan Circuit (with optional reverse)
93002.4	Screw		365	Side Shifter Assy II
			381	Side Shifter Assy II
93003.2	Screw		365	Side Shifter Assy II
			381	Side Shifter Assy II
93010.7	Pad		393	Manure Fork with Grab
93012.3	Angle piece		395	Manure Fork with Grab - Hydraulics
93014.9	Hose		395	Manure Fork with Grab - Hydraulics
93049.5	O-ring		153	Hydraulic Tank Installation
			185	Hydraulic Pump Installation
93084.2	O-ring		109	Brakes - Front Axle
93085.9	O-ring		109	Brakes - Front Axle
93086.7	O-ring		109	Brakes - Front Axle
93087.5	O-ring		109	Brakes - Front Axle

Part Number	Denomination	WAS	Page	Subgroup
93088.3	O-ring		109	Brakes - Front Axle
93115.4	Pressure Switch		55	Parking Brake Lever
93131.1	Seal Kit		129	Lift & Compensation Cylinder Installation
93158.4	Snap ring		255	Crankshaft - Pistons
93164.2	Guide		259	Cylinder Head
93168.3	Cotter		259	Cylinder Head
93191.5	Seal		269	Fuel Injection Equipment
93207.9	Washer		269	Fuel Injection Equipment
93227.7	Scew		55	Parking Brake Lever
93233.5	Lever And Grip		55	Parking Brake Lever
93237.6	Stop		31	Seat & Suspension
93238.4	Seat belt		31	Seat & Suspension
93239.2	Slide bar		31	Seat & Suspension
93240.0	Lever		31	Seat & Suspension
93241.8	Lever		31	Seat & Suspension
93242.6	Lever		31	Seat & Suspension
93243.4	Foam rubber		31	Seat & Suspension
93244.2	Foam rubber		31	Seat & Suspension
93245.9	Coating		31	Seat & Suspension
93246.7	Coating		31	Seat & Suspension
93247.5	Bracket		31	Seat & Suspension
93248.3	Suspension		31	Seat & Suspension
93249.1	Cylinder		31	Seat & Suspension
93273.1	Collar		275	Cylinder Head Cover
93274.9	Spring		275	Cylinder Head Cover
93280.6	Screw		265 279	Timing Gear Water Pump and Thermostat
93321.8	Screw		281	Turbocharger
93379.6	Dowel		251	Cylinder Block
93408.3	Screw		281	Turbocharger
93433.1	Washer		285	Alternator
93602.1	Seals kit		169	Telescope Cylinder - T40170
93606.2	Seals kit		177	Frame Level Cylinder
93994.2	Rod		179	Stabilizer Cylinder
93995.9	Rod		177	Frame Level Cylinder
94018.9	Steering wheel cap		39	Steering Column Installation
94074.2	Pin		357	Floating Pallet Forks
94077.5	Shim		21	Cab & Fixations
94214.4	Hose		157	Stabilizers & Frame Level Cylinder Installation
94383.7	Decal - T40140		331	Bobcat Decals
94384.5	Decal - T40170		333	Bobcat Decals
94574.1	Washer		21 23 145 147 231	Cab & Fixations Cab Assy Parking Brake Hydraulic Installation Parking Brake Hydraulic Installation (accumulat Joystick / Susmic Installation

Part Number	Denomination	WAS	Page	Subgroup
94640.0	Plate		339	Frontal Safety Signalling for Germany
94642.6	Plate		339	Frontal Safety Signalling for Germany
94645.9	Support		337	Germany Version
94677.2	Flexible exhaust pipe		241	Exhaust System
94751.5	Engine Speed Sensor		235	Engine Installation
94997.4	Bucket		367	Toothless Buckets
95015.4	Angle piece		123	Boom Hydraulic Supply
95016.2	Shoe		123	Boom Hydraulic Supply
95020.4	Hose		119	Boom Hydraulic Supply
95028.7	Telescopic arm		67	End Boom Assy - T40140
95044.4	Shim		131	Telescope Cylinder Installation
95061.8	Seal		11	Fuel Tank Installation
95068.3	Trap door		11	Fuel Tank Installation
95086.5	Support		123	Boom Hydraulic Supply
95088.1	Chain spacer		119	Boom Hydraulic Supply
			123	Boom Hydraulic Supply
95090.7	Plate		123	Boom Hydraulic Supply
95091.5	Spindle		59	Fixed Boom Assy - T40140
			73	Fixed Boom Assy - T40170
95265.5	Hydraulic control valve		153	Hydraulic Tank Installation
			189	Hydraulic Control Valve Installation
			191	Hydraulic Control Valve: In- and Outlet
			193	Hydraulic Control Valve Lift Section
			195	Hydraulic Control Valve Tilt Section
			197	Hydraulic Control Valve Telescope Section
			199	Hydraulic Control Valve Auxiliary Hydraulics Se
			201	Hydraulic Control Valve Frame Leveling Section
95282.0	Valve		193	Hydraulic Control Valve Lift Section
95284.6	Valve		195	Hydraulic Control Valve Tilt Section
			197	Hydraulic Control Valve Telescope Section
95293.8	Solenoid		193	Hydraulic Control Valve Lift Section
			195	Hydraulic Control Valve Tilt Section
			197	Hydraulic Control Valve Telescope Section
			199	Hydraulic Control Valve Auxiliary Hydraulics Se
			201	Hydraulic Control Valve Frame Leveling Section
95298.6	Control Box		193	Hydraulic Control Valve Lift Section
			195	Hydraulic Control Valve Tilt Section
			197	Hydraulic Control Valve Telescope Section
			199	Hydraulic Control Valve Auxiliary Hydraulics Se
			201	Hydraulic Control Valve Frame Leveling Section
95299.4	Seal Kit		193	Hydraulic Control Valve Lift Section
			195	Hydraulic Control Valve Tilt Section
			197	Hydraulic Control Valve Telescope Section
			199	Hydraulic Control Valve Auxiliary Hydraulics Se
			201	Hydraulic Control Valve Frame Leveling Section
95300.0	Seal Kit		193	Hydraulic Control Valve Lift Section
			195	Hydraulic Control Valve Tilt Section
			197	Hydraulic Control Valve Telescope Section
			199	Hydraulic Control Valve Auxiliary Hydraulics Se
			201	Hydraulic Control Valve Frame Leveling Section
95316.6	Seal Kit		191	Hydraulic Control Valve: In- and Outlet
95318.2	Valve		131	Telescope Cylinder Installation

Part Number	Denomination	WAS	Page	Subgroup
95333.1	Wire harness		221	Electrical Circuit Chassis
95348.9	Control box		231	Joystick / Susmic Installation
95428.9	Pin		91	Manual Quick Attach Lock (wide)
			93	Manual Quick Attach Lock (narrow)
95459.4	Arm		59	Fixed Boom Assy - T40140
			73	Fixed Boom Assy - T40170
95464.4	Seal		3	Chassis
95465.1	Seal		3	Chassis
95470.1	Spindle		59	Fixed Boom Assy - T40140
			73	Fixed Boom Assy - T40170
			129	Lift & Compensation Cylinder Installation
95484.2	Intermediate arm		63	Intermediate Boom Assy - T40140
			77	1st Intermediate Boom - T40170
95490.9	Intermediate arm		81	2nd Intermediate Boom - T40170
95495.8	Telescopic arm		85	End Boom Assy - T40170
95501.3	Shoe		59	Fixed Boom Assy - T40140
			63	Intermediate Boom Assy - T40140
			67	End Boom Assy - T40140
			73	Fixed Boom Assy - T40170
			77	1st Intermediate Boom - T40170
			81	2nd Intermediate Boom - T40170
			85	End Boom Assy - T40170
95502.1	Screw		51	Rear Window Installation
			63	Intermediate Boom Assy - T40140
			67	End Boom Assy - T40140
			77	1st Intermediate Boom - T40170
			81	2nd Intermediate Boom - T40170
			85	End Boom Assy - T40170
			119	Boom Hydraulic Supply
95532.8	Chain		67	End Boom Assy - T40140
			81	2nd Intermediate Boom - T40170
			85	End Boom Assy - T40170
95533.6	Spindle		67	End Boom Assy - T40140
			85	End Boom Assy - T40170
95537.7	Spindle		129	Lift & Compensation Cylinder Installation
95541.9	Bush		63	Intermediate Boom Assy - T40140
			77	1st Intermediate Boom - T40170
			81	2nd Intermediate Boom - T40170
			343	Boom Chain Pulley axles Kit
			345	Boom Chain Pulley axles Kit
95549.2	Shoe		131	Telescope Cylinder Installation
			133	Telescope Cylinder Installation
95553.4	Pull rod		59	Fixed Boom Assy - T40140
			73	Fixed Boom Assy - T40170
			77	1st Intermediate Boom - T40170
95555.9	Retaining		59	Fixed Boom Assy - T40140
			73	Fixed Boom Assy - T40170
			77	1st Intermediate Boom - T40170
95557.5	Screw		59	Fixed Boom Assy - T40140
			73	Fixed Boom Assy - T40170
			77	1st Intermediate Boom - T40170
95558.3	Retaining		67	End Boom Assy - T40140
			81	2nd Intermediate Boom - T40170
			85	End Boom Assy - T40170

Part Number	Denomination	WAS	Page	Subgroup
95569.0	Spindle		63 77	Intermediate Boom Assy - T40140 1st Intermediate Boom - T40170
95570.8	Spindle		63 77 81	Intermediate Boom Assy - T40140 1st Intermediate Boom - T40170 2nd Intermediate Boom - T40170
95571.6	Link		119 123	Boom Hydraulic Supply Boom Hydraulic Supply
95572.4	Link		119 123	Boom Hydraulic Supply Boom Hydraulic Supply
95575.7	Screw		77	1st Intermediate Boom - T40170
95576.5	Chain		59 73 77	Fixed Boom Assy - T40140 Fixed Boom Assy - T40170 1st Intermediate Boom - T40170
95577.3	Washer		63 77 81 343 345	Intermediate Boom Assy - T40140 1st Intermediate Boom - T40170 2nd Intermediate Boom - T40170 Boom Chain Pulley axles Kit Boom Chain Pulley axles Kit
95578.1	Spindle		81	2nd Intermediate Boom - T40170
95596.3	Support		131 133	Telescope Cylinder Installation Telescope Cylinder Installation
95598.9	Pipe assembly		119 123	Boom Hydraulic Supply Boom Hydraulic Supply
95605.2	Support		119	Boom Hydraulic Supply
95609.4	Chain		119 123	Boom Hydraulic Supply Boom Hydraulic Supply
95613.6	Spindle		59 73 77 85	Fixed Boom Assy - T40140 Fixed Boom Assy - T40170 1st Intermediate Boom - T40170 End Boom Assy - T40170
95614.4	Spindle		67 81 85	End Boom Assy - T40140 2nd Intermediate Boom - T40170 End Boom Assy - T40170
95615.1	Fixing plate		67 81	End Boom Assy - T40140 2nd Intermediate Boom - T40170
95632.6	Serial No. plate		331 333	Bobcat Decals Bobcat Decals
95634.2	Plate		367 369	Toothless Buckets Toothed Bucket
95702.7	Washer		11	Fuel Tank Installation
95704.3	Washer		21	Cab & Fixations
95783.7	Clamp		241	Exhaust System
95791.0	Plate		321	2nd Hydraulic Function On Boom
95985.8	End Plate		191	Hydraulic Control Valve: In- and Outlet
95986.6	Element		193 195	Hydraulic Control Valve Lift Section Hydraulic Control Valve Tilt Section
95989.0	Element		199 201	Hydraulic Control Valve Auxiliary Hydraulics Se Hydraulic Control Valve Frame Leveling Section
95993.2	Female Coupling		67 85 149 151	End Boom Assy - T40140 End Boom Assy - T40170 Quick Attach Installation (wide) Quick Attach Installation (narrow)

Part Number	Denomination	WAS	Page	Subgroup
			363	Side Shifter Assy
95994.0	Male coupling		67	End Boom Assy - T40140
			85	End Boom Assy - T40170
			149	Quick Attach Installation (wide)
			151	Quick Attach Installation (narrow)
			321	2nd Hydraulic Function On Boom
			363	Side Shifter Assy
96010.4	Spool		193	Hydraulic Control Valve Lift Section
			195	Hydraulic Control Valve Tilt Section
96011.2	Spool		197	Hydraulic Control Valve Telescope Section
96054.2	Spacer		143	Service Brake Hydraulic Installation
96061.7	Spacer		143	Service Brake Hydraulic Installation
96074.0	Cover		23	Cab Assy
96080.7	L.H. control panel plate		43	Control Panel Switches
96082.3	Evaporator		291	Air Conditioning Installation
96083.1	Wiring		291	Air Conditioning Installation
96089.8	Support		37	Pedals Installation
96332.2	Tyre		299	DUNLOP 400/80-R24 156B Wheels
96333.0	Elbow		135	Steering Hoses & Fittings (without damper)
			137	Steering Hoses & Fittings (with damper)
96392.6	Plate		335	Italy Version
96461.9	Adapter		235	Engine Installation
96462.7	Drain Hose		235	Engine Installation
96513.7	Cap		67	End Boom Assy - T40140
			85	End Boom Assy - T40170
			149	Quick Attach Installation (wide)
			151	Quick Attach Installation (narrow)
			321	2nd Hydraulic Function On Boom
			363	Side Shifter Assy
96514.5	Cap		67	End Boom Assy - T40140
			85	End Boom Assy - T40170
			149	Quick Attach Installation (wide)
			151	Quick Attach Installation (narrow)
			321	2nd Hydraulic Function On Boom
			363	Side Shifter Assy
96524.4	Hydraulic concrete skip		355	Concrete Bucket
96536.8	Side-sifter assy		363	Side Shifter Assy
96541.8	Rivet		3	Chassis
			309	Wheel Wedge Option
96554.1	Washer		309	Wheel Wedge Option
			357	Floating Pallet Forks
96567.3	Union		145	Parking Brake Hydraulic Installation
			147	Parking Brake Hydraulic Installation (accumulat
96587.1	Front Light Wire Harness, RH		221	Electrical Circuit Chassis
96588.9	Wire harness		233	Ventilation reverse electrical
96590.5	Warning Switch		43	Control Panel Switches
96591.3	Switch, beacon light		43	Control Panel Switches
96592.1	Lever Switch		43	Control Panel Switches
96593.9	Steering mode switch		43	Control Panel Switches
96594.7	Steering mode indicator		43	Control Panel Switches

Part Number	Denomination	WAS	Page	Subgroup
96596.2	Fan Switch		233	Ventilation reverse electrical
96597.0	Fog light switch		43	Control Panel Switches
96600.2	Switch, head lamp		43	Control Panel Switches
96601.0	Working light switch		43	Control Panel Switches
96602.8	Switch, rear wiper/washer		43	Control Panel Switches
96603.6	Switch, roof wiper		43	Control Panel Switches
96604.4	Auxiliary Hydraulics Switch		323	2nd Hydraulic Function On Boom - Electric
96608.5	Fan Speed Switch		43	Control Panel Switches
96609.3	Heating Control Valve		43	Control Panel Switches
96613.5	Spacer		227	Electrical Circuit Engine
96623.4	Turn signal relay		225	Electrical Circuit Cab
96627.5	Cable plug		323	2nd Hydraulic Function On Boom - Electric
96655.6	Washer		143	Service Brake Hydraulic Installation
96656.4	Spring		143	Service Brake Hydraulic Installation
96676.2	Abacus card		301	DUNLOP 405/70-R20 SPT9 Wheels
96677.0	Abacus card		301	DUNLOP 405/70-R20 SPT9 Wheels
96749.7	Decal - "106 dB"		331	Bobcat Decals
			333	Bobcat Decals
96759.6	Hose		249	Cooling Fan Circuit (with optional reverse)
96776.0	Hose	82421.9	145	Parking Brake Hydraulic Installation
		82421.9	147	Parking Brake Hydraulic Installation (accumulat
96925.3	Mudguard support		305	Mudguard 24"
96926.1	Mudguard support		303	Mudguard 20"
96928.7	Decal Bobcat right		331	Bobcat Decals
			333	Bobcat Decals
96932.9	Decal - Arm "Bobcat" - LH		331	Bobcat Decals
			333	Bobcat Decals
96969.1	Guide		123	Boom Hydraulic Supply
97007.9	Piston		169	Telescope Cylinder - T40170
97008.7	Screw		167	Telescope Cylinder - T40140
			169	Telescope Cylinder - T40170
97009.5	Ring		169	Telescope Cylinder - T40170
97010.3	Stop		169	Telescope Cylinder - T40170
97011.1	Cylinder		169	Telescope Cylinder - T40170
97012.9	Cylinder head		169	Telescope Cylinder - T40170
97014.5	Piston		167	Telescope Cylinder - T40140
97015.2	Ring		167	Telescope Cylinder - T40140
97016.0	Stop		167	Telescope Cylinder - T40140
97018.6	Cylinder		167	Telescope Cylinder - T40140
97019.4	Cylinder head		167	Telescope Cylinder - T40140
97026.9	Cylinder		171	Tilt Cylinder
97027.7	Nut		171	Tilt Cylinder
			173	Tilt Cylinder
97029.3	Piston		177	Frame Level Cylinder
97030.1	Cylinder		177	Frame Level Cylinder
97031.9	Cylinder head		177	Frame Level Cylinder

Part Number	Denomination	WAS	Page	Subgroup
97033.5	Piston		179 181	Stabilizer Cylinder Stabilizer Cylinder
97034.3	Cylinder		179	Stabilizer Cylinder
97035.0	Spacer		179	Stabilizer Cylinder
97036.8	Spacer		179	Stabilizer Cylinder
97054.1	Set of keys		43	Control Panel Switches
97055.8	Hook inside		365 381	Side Shifter Assy II Side Shifter Assy II
97088.9	Mat		23	Cab Assy
97089.7	Mat		23	Cab Assy
97096.2	Cigarette Lighter		41	Cowling Installation
97099.6	Directional Vent		33	Heating/ventilation Installation
97175.4	Solenoid		227 269	Electrical Circuit Engine Fuel Injection Equipment
97180.4	O-ring		193 195	Hydraulic Control Valve Lift Section Hydraulic Control Valve Tilt Section
97194.5	Tie Rod Set		191	Hydraulic Control Valve: In- and Outlet
97196.0	Windshield spray reservoir		53	Wiper Installation
97201.8	Vent		33	Heating/ventilation Installation
97202.6	Pipe		33	Heating/ventilation Installation
97204.2	Pipe		33	Heating/ventilation Installation
97205.9	Heater		33 35	Heating/ventilation Installation Heating/ventilation Fan Assy
97206.7	Pipe		33	Heating/ventilation Installation
97207.5	Pipe		33	Heating/ventilation Installation
97208.3	Vent Nozzle		33	Heating/ventilation Installation
97210.9	Pin		39	Steering Column Installation
97212.5	Hose		53	Wiper Installation
97217.4	Jet		53	Wiper Installation
97236.4	Wire Harness		225	Electrical Circuit Cab
97258.8	Piston		217	Hydrostatic Motor Assy
97260.4	Glass		221	Electrical Circuit Chassis
97261.2	Glass		221	Electrical Circuit Chassis
97265.3	Grill		291	Air Conditioning Installation
97271.1	Seal Kit		141	Steering Hydraulics Cab
97310.7	Screw		365 381	Side Shifter Assy II Side Shifter Assy II
97311.5	Spacer		365 381	Side Shifter Assy II Side Shifter Assy II
97312.3	Support		365 381	Side Shifter Assy II Side Shifter Assy II
97313.1	Screw		365 381	Side Shifter Assy II Side Shifter Assy II
97314.9	Screw		365 381	Side Shifter Assy II Side Shifter Assy II
97315.6	Washer		365 381	Side Shifter Assy II Side Shifter Assy II
97316.4	Washer		365	Side Shifter Assy II

Part Number	Denomination	WAS	Page	Subgroup
97317.2	Plate		365 381	Side Shifter Assy II Side Shifter Assy II
97318.0	Plug		365 381	Side Shifter Assy II Side Shifter Assy II
97319.8	Piston		365 381	Side Shifter Assy II Side Shifter Assy II
97320.6	Plug		365 381	Side Shifter Assy II Side Shifter Assy II
97321.4	Cylinder-head		365 381	Side Shifter Assy II Side Shifter Assy II
97322.2	Washer		365 381	Side Shifter Assy II Side Shifter Assy II
97338.8	Spool		199	Hydraulic Control Valve Auxiliary Hydraulics Se
97350.3	Control Valve		35	Heating/ventilation Fan Assy
97355.2	Screw		207	Hydrostatic Pump Assy
97357.8	Spring		217	Hydrostatic Motor Assy
97358.6	Valve		291	Air Conditioning Installation
97359.4	Plate		291	Air Conditioning Installation
97360.2	Door Strap		47	Door Assy
97400.6	Valve	81418.6	207 211	Hydrostatic Pump Assy Hydrostatic Pump Assy
97408.9	Body		111	Housing - Rear Axle
97409.7	Pivot		107 115	Steering - Front Axle Steering - Rear Axle
97410.5	Seal		113	Differential - Rear Axle
97411.3	Seal		107 115	Steering - Front Axle Steering - Rear Axle
97412.1	Pivot		107 115	Steering - Front Axle Steering - Rear Axle
97414.7	Seal		99	Hub Reduction - Front Axle / Rear Axle
97416.2	Seal		97	Cardan Shaft
97418.8	Shaft		97	Cardan Shaft
97420.4	Flange		97	Cardan Shaft
97421.2	Colour band		229	Joystick
97422.0	Button		229	Joystick
97423.8	Proportional roller		229	Joystick
97424.6	Lever block		229	Joystick
97425.3	Grip		229	Joystick
97426.1	Rubber bellow		229	Joystick
97432.9	Thermostat		291	Air Conditioning Installation
97439.4	Rod		169	Telescope Cylinder - T40170
97440.2	Plug		167 169	Telescope Cylinder - T40140 Telescope Cylinder - T40170
97441.0	Rod		171 173	Tilt Cylinder Tilt Cylinder
97442.8	Cylinder head		171	Tilt Cylinder
97443.6	Piston		171 173	Tilt Cylinder Tilt Cylinder

Part Number	Denomination	WAS	Page	Subgroup
			173	Tilt Cylinder
97445.1	Rod		167	Telescope Cylinder - T40140
97446.9	Seals kit		167	Telescope Cylinder - T40140
97447.7	Cylinder		163	Lift Cylinder
97448.5	Bush		163 165	Lift Cylinder Compensating Cylinder
97449.3	Spacer		163	Lift Cylinder
97450.1	Spacer		163	Lift Cylinder
97451.9	Rod		163	Lift Cylinder
97452.7	Cylinder head		163	Lift Cylinder
97453.5	Piston		163	Lift Cylinder
97454.3	Seals kit		163	Lift Cylinder
97455.0	Cylinder		165	Compensating Cylinder
97456.8	Rod		165	Compensating Cylinder
97457.6	Cylinder head		165	Compensating Cylinder
97458.4	Piston		165	Compensating Cylinder
97459.2	Seals kit		165	Compensating Cylinder
97462.6	Cover assy		207	Hydrostatic Pump Assy
97463.4	Slide assy		207	Hydrostatic Pump Assy
97464.2	Screw		207	Hydrostatic Pump Assy
97465.9	Cover		207	Hydrostatic Pump Assy
97466.7	Lever		207	Hydrostatic Pump Assy
97467.5	Screw		207	Hydrostatic Pump Assy
97501.1	Handle, steering column adjust		39	Steering Column Installation
97502.9	Knob, steering column adjust		39	Steering Column Installation
97503.7	Support		39	Steering Column Installation
97504.5	Bracket		27	Cab Assy II
97515.1	Rear Horn		325	Backup Alarm
97519.3	Switch, transmission mode		43	Control Panel Switches
97546.6	Plug		85	End Boom Assy - T40170
97610.0	Washer		243 291	Cooling System Installation Air Conditioning Installation
97663.9	Hose		145 147	Parking Brake Hydraulic Installation Parking Brake Hydraulic Installation (accumulat
97721.5	Cable		323	2nd Hydraulic Function On Boom - Electric
97732.2	Cylinder assy		129 163	Lift & Compensation Cylinder Installation Lift Cylinder
97734.8	Cylinder assy		169	Telescope Cylinder - T40170
97746.2	Air Filter		235	Engine Installation
97747.0	Collar		235	Engine Installation
97762.9	Rear axle assy		95 111	Axle Installation Housing - Rear Axle
97803.1	Cylinder assy		129 165	Lift & Compensation Cylinder Installation Compensating Cylinder
97850.2	Nut		133	Telescope Cylinder Installation
97851.0	Screw		131 133	Telescope Cylinder Installation Telescope Cylinder Installation

Part Number	Denomination	WAS	Page	Subgroup
97870.0	Shoe		63 77	Intermediate Boom Assy - T40140 1st Intermediate Boom - T40170
97878.3	Housing		235	Engine Installation
97880.9	Check valve		203	Hydrostatic Hoses and Fittings
97885.8	Knob block		43	Control Panel Switches
97886.6	Knob head		43	Control Panel Switches
97887.4	Rubber band		123	Boom Hydraulic Supply
97904.7	Glue		11	Fuel Tank Installation
97915.3	Fan		243	Cooling System Installation
97922.9	Radio receiver		225	Electrical Circuit Cab
97923.7	Battery loader		225	Electrical Circuit Cab
97949.2	Screw		123	Boom Hydraulic Supply
97964.1	Rivet		27	Cab Assy II
98011.0	Coupling		235	Engine Installation
98038.3	Engine		235	Engine Installation
98053.2	Plate, engine basket, front		13	Engine Cover
98068.0	O-ring		291	Air Conditioning Installation
98069.8	O-ring		291	Air Conditioning Installation
98070.6	O-ring		291	Air Conditioning Installation
98071.4	O-ring		291	Air Conditioning Installation
98087.0	Wire harness		221	Electrical Circuit Chassis
98090.5	Clip		17	Engine Sound Proofing
98132.4	Washer		235	Engine Installation
98167.0	Plate	95634.2	357	Floating Pallet Forks
98240.5	Throttle Cable		37	Pedals Installation
98241.3	Reverser		39	Steering Column Installation
98242.9	Drive/lighting control lever		39	Steering Column Installation
98300.7	Shim		59 63 67 73 77 81 85	Fixed Boom Assy - T40140 Intermediate Boom Assy - T40140 End Boom Assy - T40140 Fixed Boom Assy - T40170 1st Intermediate Boom - T40170 2nd Intermediate Boom - T40170 End Boom Assy - T40170
98301.5	Shim		59 63 67 73 77 81 85	Fixed Boom Assy - T40140 Intermediate Boom Assy - T40140 End Boom Assy - T40140 Fixed Boom Assy - T40170 1st Intermediate Boom - T40170 2nd Intermediate Boom - T40170 End Boom Assy - T40170
98302.3	Shim		59 63 67 73 77 81 85	Fixed Boom Assy - T40140 Intermediate Boom Assy - T40140 End Boom Assy - T40140 Fixed Boom Assy - T40170 1st Intermediate Boom - T40170 2nd Intermediate Boom - T40170 End Boom Assy - T40170
98303.1	Screw		63 67	Intermediate Boom Assy - T40140 End Boom Assy - T40140

Part Number	Denomination	WAS	Page	Subgroup
			81	2nd Intermediate Boom - T40170
			85	End Boom Assy - T40170
98340.3	Shoe		59	Fixed Boom Assy - T40140
			63	Intermediate Boom Assy - T40140
			67	End Boom Assy - T40140
			73	Fixed Boom Assy - T40170
			77	1st Intermediate Boom - T40170
			81	2nd Intermediate Boom - T40170
			85	End Boom Assy - T40170
98341.1	Shoe		59	Fixed Boom Assy - T40140
			63	Intermediate Boom Assy - T40140
			67	End Boom Assy - T40140
			73	Fixed Boom Assy - T40170
			77	1st Intermediate Boom - T40170
			81	2nd Intermediate Boom - T40170
			85	End Boom Assy - T40170
98342.9	Shoe		59	Fixed Boom Assy - T40140
			63	Intermediate Boom Assy - T40140
			67	End Boom Assy - T40140
			73	Fixed Boom Assy - T40170
			77	1st Intermediate Boom - T40170
			81	2nd Intermediate Boom - T40170
			85	End Boom Assy - T40170
98343.7	Shoe		59	Fixed Boom Assy - T40140
			63	Intermediate Boom Assy - T40140
			67	End Boom Assy - T40140
			73	Fixed Boom Assy - T40170
			77	1st Intermediate Boom - T40170
			81	2nd Intermediate Boom - T40170
			85	End Boom Assy - T40170
98344.5	Shoe		59	Fixed Boom Assy - T40140
			63	Intermediate Boom Assy - T40140
			67	End Boom Assy - T40140
			73	Fixed Boom Assy - T40170
			77	1st Intermediate Boom - T40170
			81	2nd Intermediate Boom - T40170
			85	End Boom Assy - T40170
98347.8	Steering block		135	Steering Hoses & Fittings (without damper)
			137	Steering Hoses & Fittings (with damper)
98348.6	Support		135	Steering Hoses & Fittings (without damper)
			137	Steering Hoses & Fittings (with damper)
			249	Cooling Fan Circuit (with optional reverse)
98349.4	Steering selector valve		135	Steering Hoses & Fittings (without damper)
			137	Steering Hoses & Fittings (with damper)
98351.0	Block		161	Stabilizer Selector Valves
98354.4	Selector valve		161	Stabilizer Selector Valves
98355.1	Electro distributor		161	Stabilizer Selector Valves
			249	Cooling Fan Circuit (with optional reverse)
98375.9	Control valve		161	Stabilizer Selector Valves
98397.3	Hose		143	Service Brake Hydraulic Installation
98583.8	O-ring		349	Hydraulic Tank Filling Kit
98653.9	Screw		211	Hydrostatic Pump Assy
98660.4	Bushing		103	Housing - Front Axle
			111	Housing - Rear Axle
98663.8	Axle shaft		103	Housing - Front Axle

Part Number	Denomination	WAS	Page	Subgroup
			363	Side Shifter Assy
			375	Rigid Forks Holder
			377	Side Shifter Assy 1000 mm
			379	Side Shifter Assy 1150 mm
98695.0	Gasket		207	Hydrostatic Pump Assy
			211	Hydrostatic Pump Assy
98765.1	Engine cover	6910149	13	Engine Cover
98774.3	Cover		13	Engine Cover
98898.0	Washer		133	Telescope Cylinder Installation
98962.9	Pipe		133	Telescope Cylinder Installation
NAP	Lock cylinder		13	Engine Cover
		6909330	55	Parking Brake Lever
		97814.8	67	End Boom Assy - T40140
		97814.8	85	End Boom Assy - T40170
			93	Manual Quick Attach Lock (narrow)
		97733.0	131	Telescope Cylinder Installation
		97734.8	133	Telescope Cylinder Installation
		6909330	145	Parking Brake Hydraulic Installation
		6909330	147	Parking Brake Hydraulic Installation (accumulat
			151	Quick Attach Installation (narrow)
		6910533	153	Hydraulic Tank Installation
		84170.0	157	Stabilizers & Frame Level Cylinder Installation
		97733.0	167	Telescope Cylinder - T40140
		97814.8	171	Tilt Cylinder
			175	Quick Attach Cylinder
		84170.0	179	Stabilizer Cylinder
		6910533	203	Hydrostatic Hoses and Fittings
		6908675	297	DUNLOP 400/80-R24 153B Wheels
NSS	Connection		23	Cab Assy
			55	Parking Brake Lever
			57	Parking Brake Lever
P02296	Hose		189	Hydraulic Control Valve Installation
P02645	Rivet		357	Floating Pallet Forks