
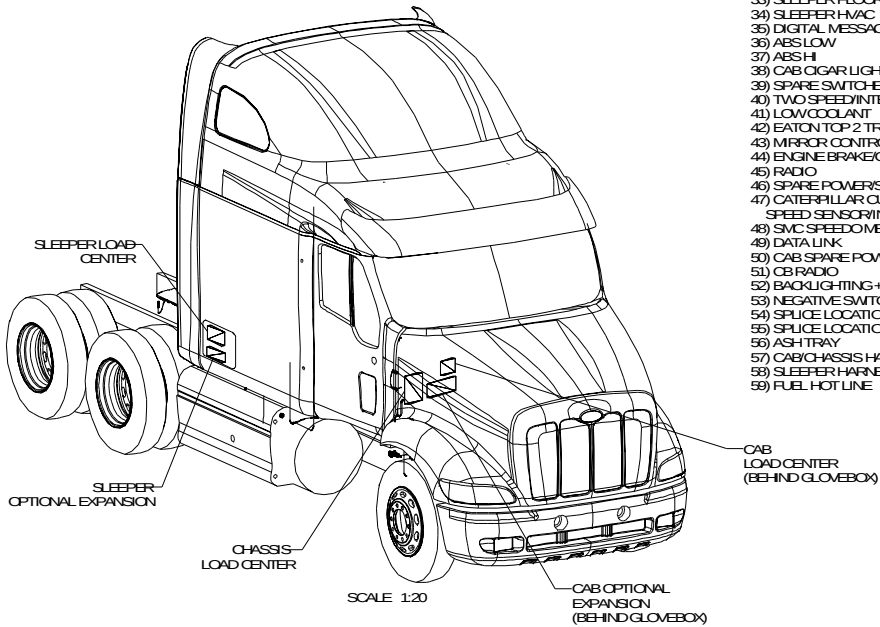


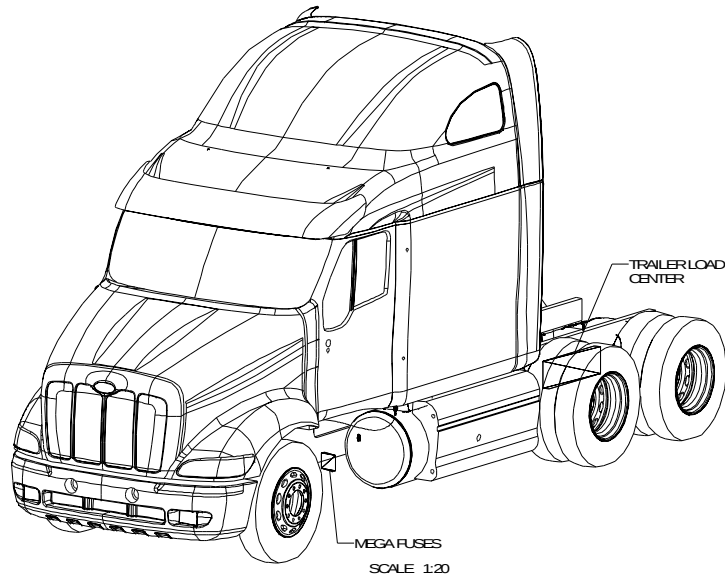


SH
NO. TITLE

- 1) INDEX SYMBOL KEY
- 2) HARNESS FLOW CHART
- 3) +12V POWER DISTRIBUTION
- 4) NEGATIVE POWER DISTRIBUTION
- 5) +12V POWER DISTRIBUTION (OPTIONAL DISCONNECT)
- 6) WIPER/WASHER
- 7) HORN
- 8) MANUAL FAN CONTROL
- 9) HVAC CLUMMINS/CATERPILLAR
- 10) TURN SIGNAL/STOP/HAZARDS/AUX TRAILER
- 11) REVERSE LAMPS
- 12) MARKER LAMPS
- 13) HEAD LAMP/DRL
- 14) FOG LAMPS
- 15) FUEL HEATER
- 16) AIR DRYER
- 17) INTERFACE MODULE
- 18) SPOT LAMPS
- 19) LOAD LAMPS
- BRACKET MOUNTED/FLUSH MOUNTED/
MULTIPLE/COIL 10'
- 20) FLUORESCENT LAMP SLEEPER
- 21) FLOOR LAMP
- 22) EITHER START CATERPILLAR
- 23) WINDOW/LIFT
- 24) CENTRAL DOOR LOCKS
- 25) DOOR LAMPS/DOVE LAMPS
- 26) PREMIUM SOUND
- 27) SLEEPER TOOL BOX LAMPS
- 28) SLEEPER CLOCK
- 29) AUX FAN
- 30) SLEEPER READING LAMPS
- 31) REFRIGERATOR UNIT/REFR
- 32) SLEEPER POWER ACCESS OUTLETS
- 33) SLEEPER FLOOR LAMP
- 34) SLEEPER HVAC
- 35) DIGITAL MESSAGE CENTER
- 36) ABS LOW
- 37) ABS HI
- 38) CAB CIGAR LIGHTER PAR COMM
- 39) SPARE SWITCHES
- 40) TWO SPEED/INTERFIFTH WHEEL/DIFF LOCK/PTO
- 41) LOW COOLANT
- 42) EATON TOP 2 TRANSMISSION
- 43) MIRROR CONTROL/HEATER
- 44) ENGINE BRAKE/CRUISE CONTROL/DIAGNOSTIC
- 45) RADIO
- 46) SPARE POWER SYSTEM SLEEPER
- 47) CATERPILLAR CLUMMINS ENGINE ECU/TPS/
SPEED SENSOR/INTERUP/WARNING LAMPS
- 48) SMC SPEEDOMETER MESSAGE CENTER
- 49) DATA LINK
- 50) CAB SPARE POWER SYSTEM EXPANSION
- 51) CB RADIO
- 52) BACKLIGHTING +12VOLTS
- 53) NEGATIVE SWITCH LUMPS
- 54) SPURGE LOCATION - DISTRIBUTION
- 55) SPURGE LOCATION - DISTRIBUTION
- 56) ASH TRAY
- 57) CAB/CHASSIS HARNESS LAYOUT
- 58) SLEEPER HARNESS LAYOUT
- 59) FUEL HOT LINE


SYMBOL/ABBREVIATION KEY


- 1) STUD
- 2) SPLICE
- 3) RING TERMINAL CONNECTORS
- 4) NUMBERS EX. CIRCUIT DESCRIPTION SUFFIX ALPHA
- FOR CIRCUIT NUMBER FUNCTION SEE SK06520
- 5) RED SOLID COLORS
- RED/BLACK SOLID COLOR WITH STRIPE
- SOLID STRIPE
- 6) BUS BAR
- 7) CONNECTOR APPEARS ON MULTIPLE SHEETS
- 8) CLC CHASSIS LOAD CENTER
- 9) SLR SLEEPER
- 10) TLR TRAILER
- 11) MULTI CORE CABLE
- 12) CONTINUED TO OTHER SH XX
- 13) MOMENTARY CONTACT
- CONTACT
- SWITCH
- 14) BULB

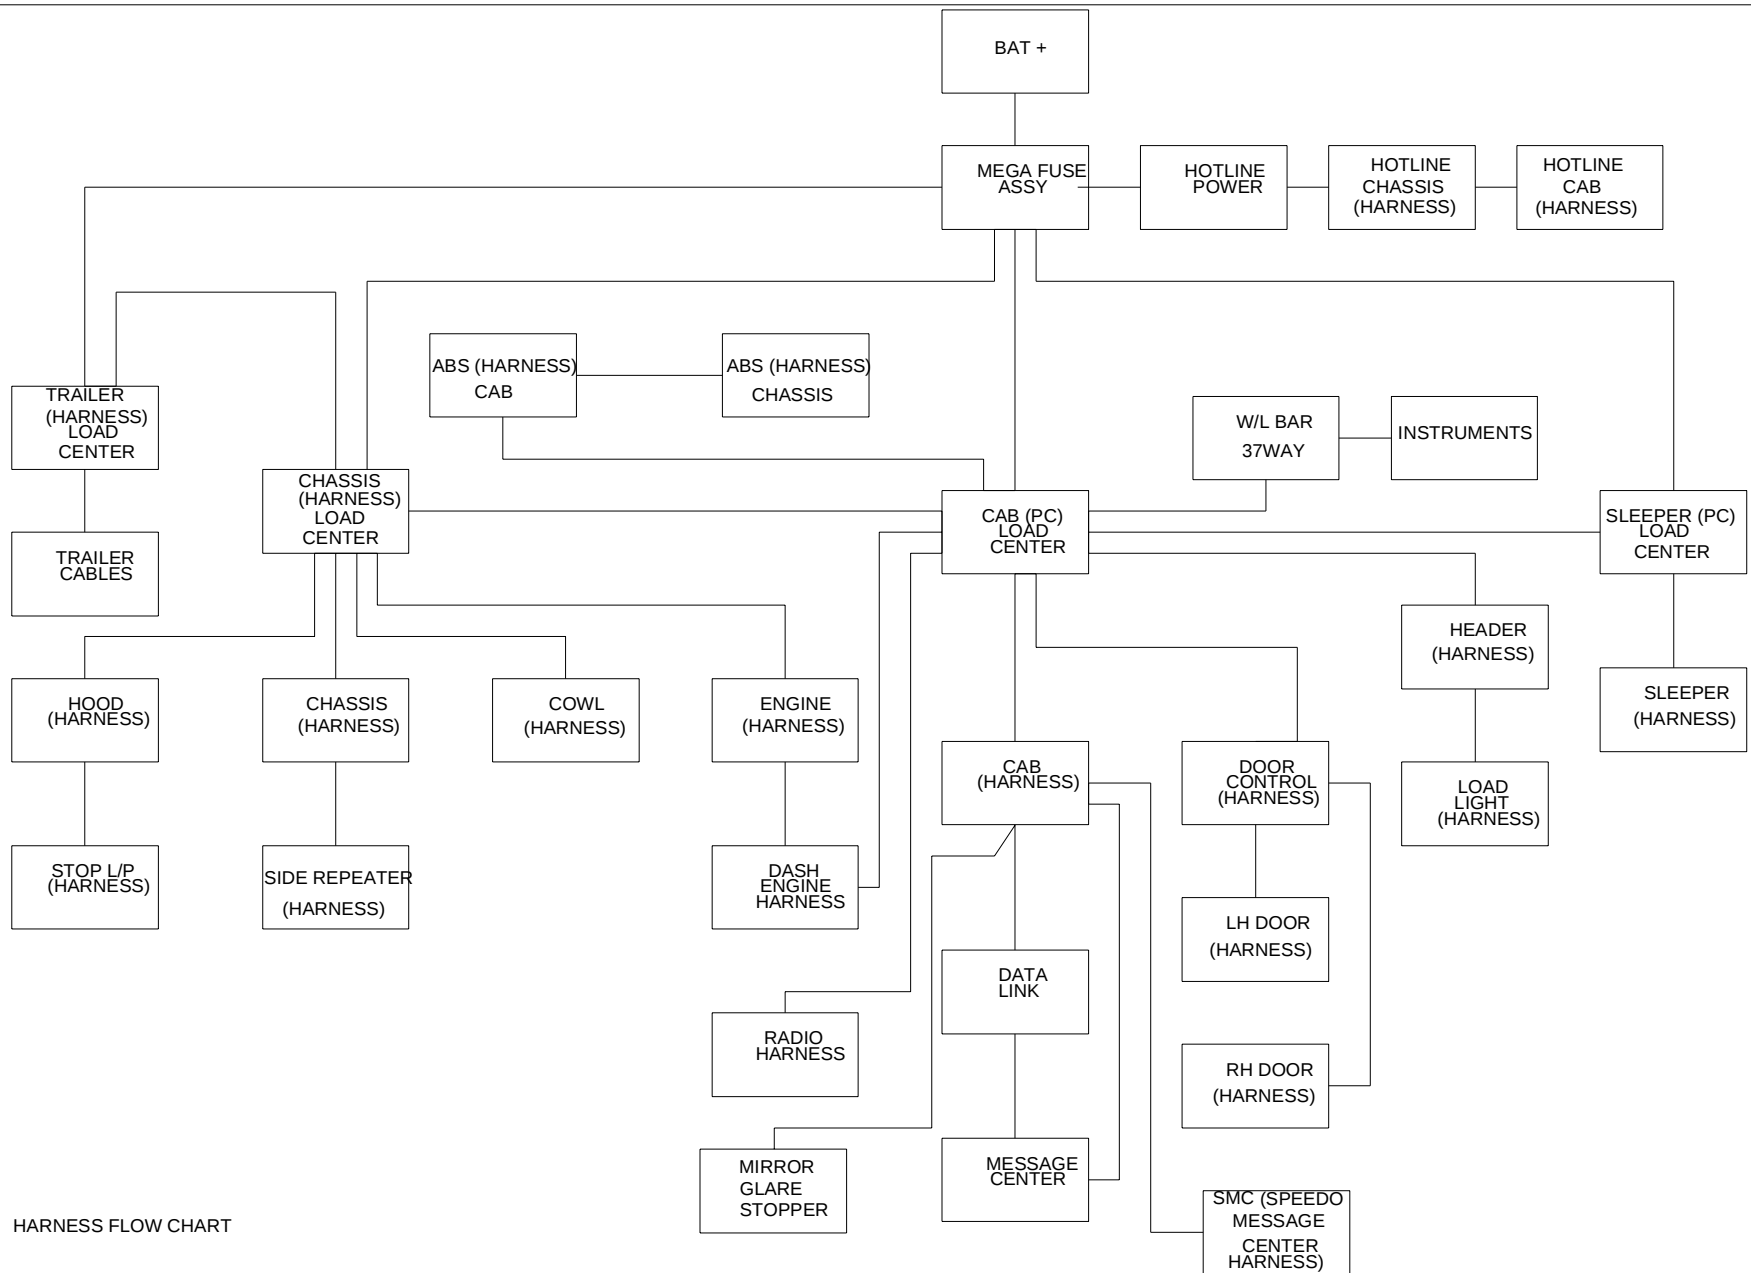


HARNESS FLOW CHART










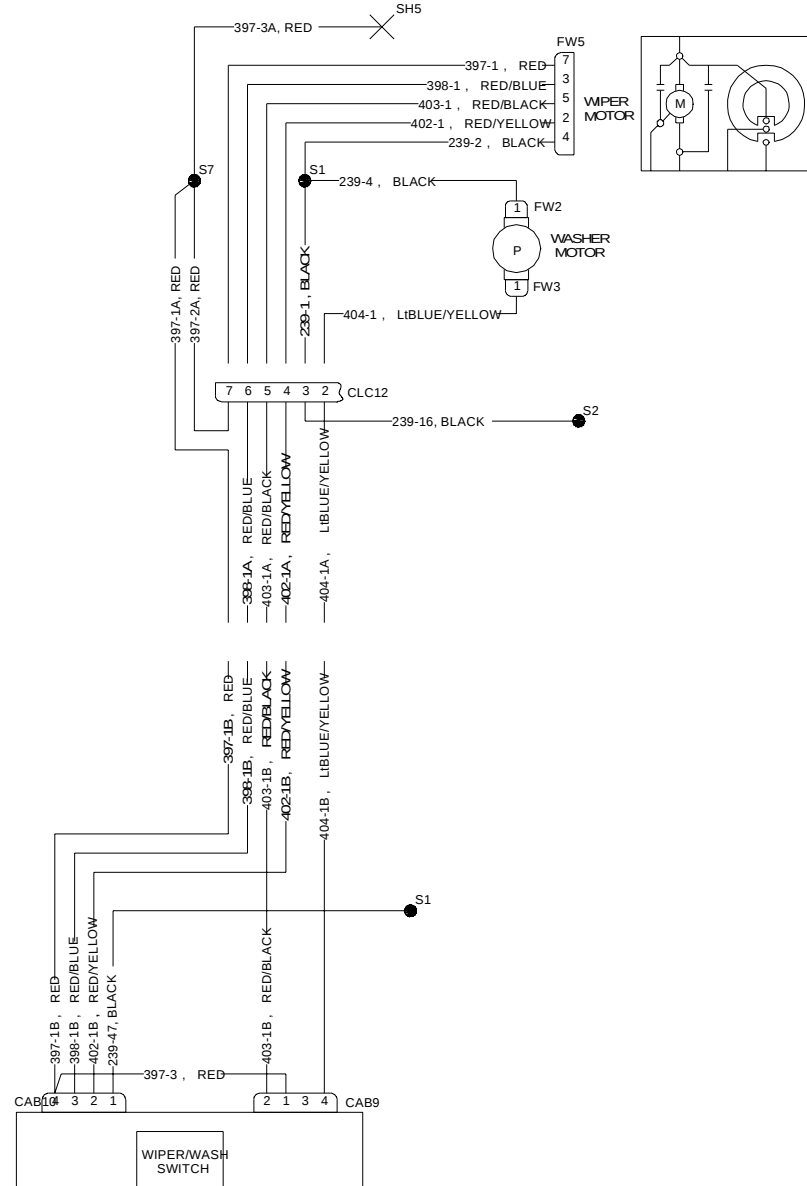



WIPER/WASHER

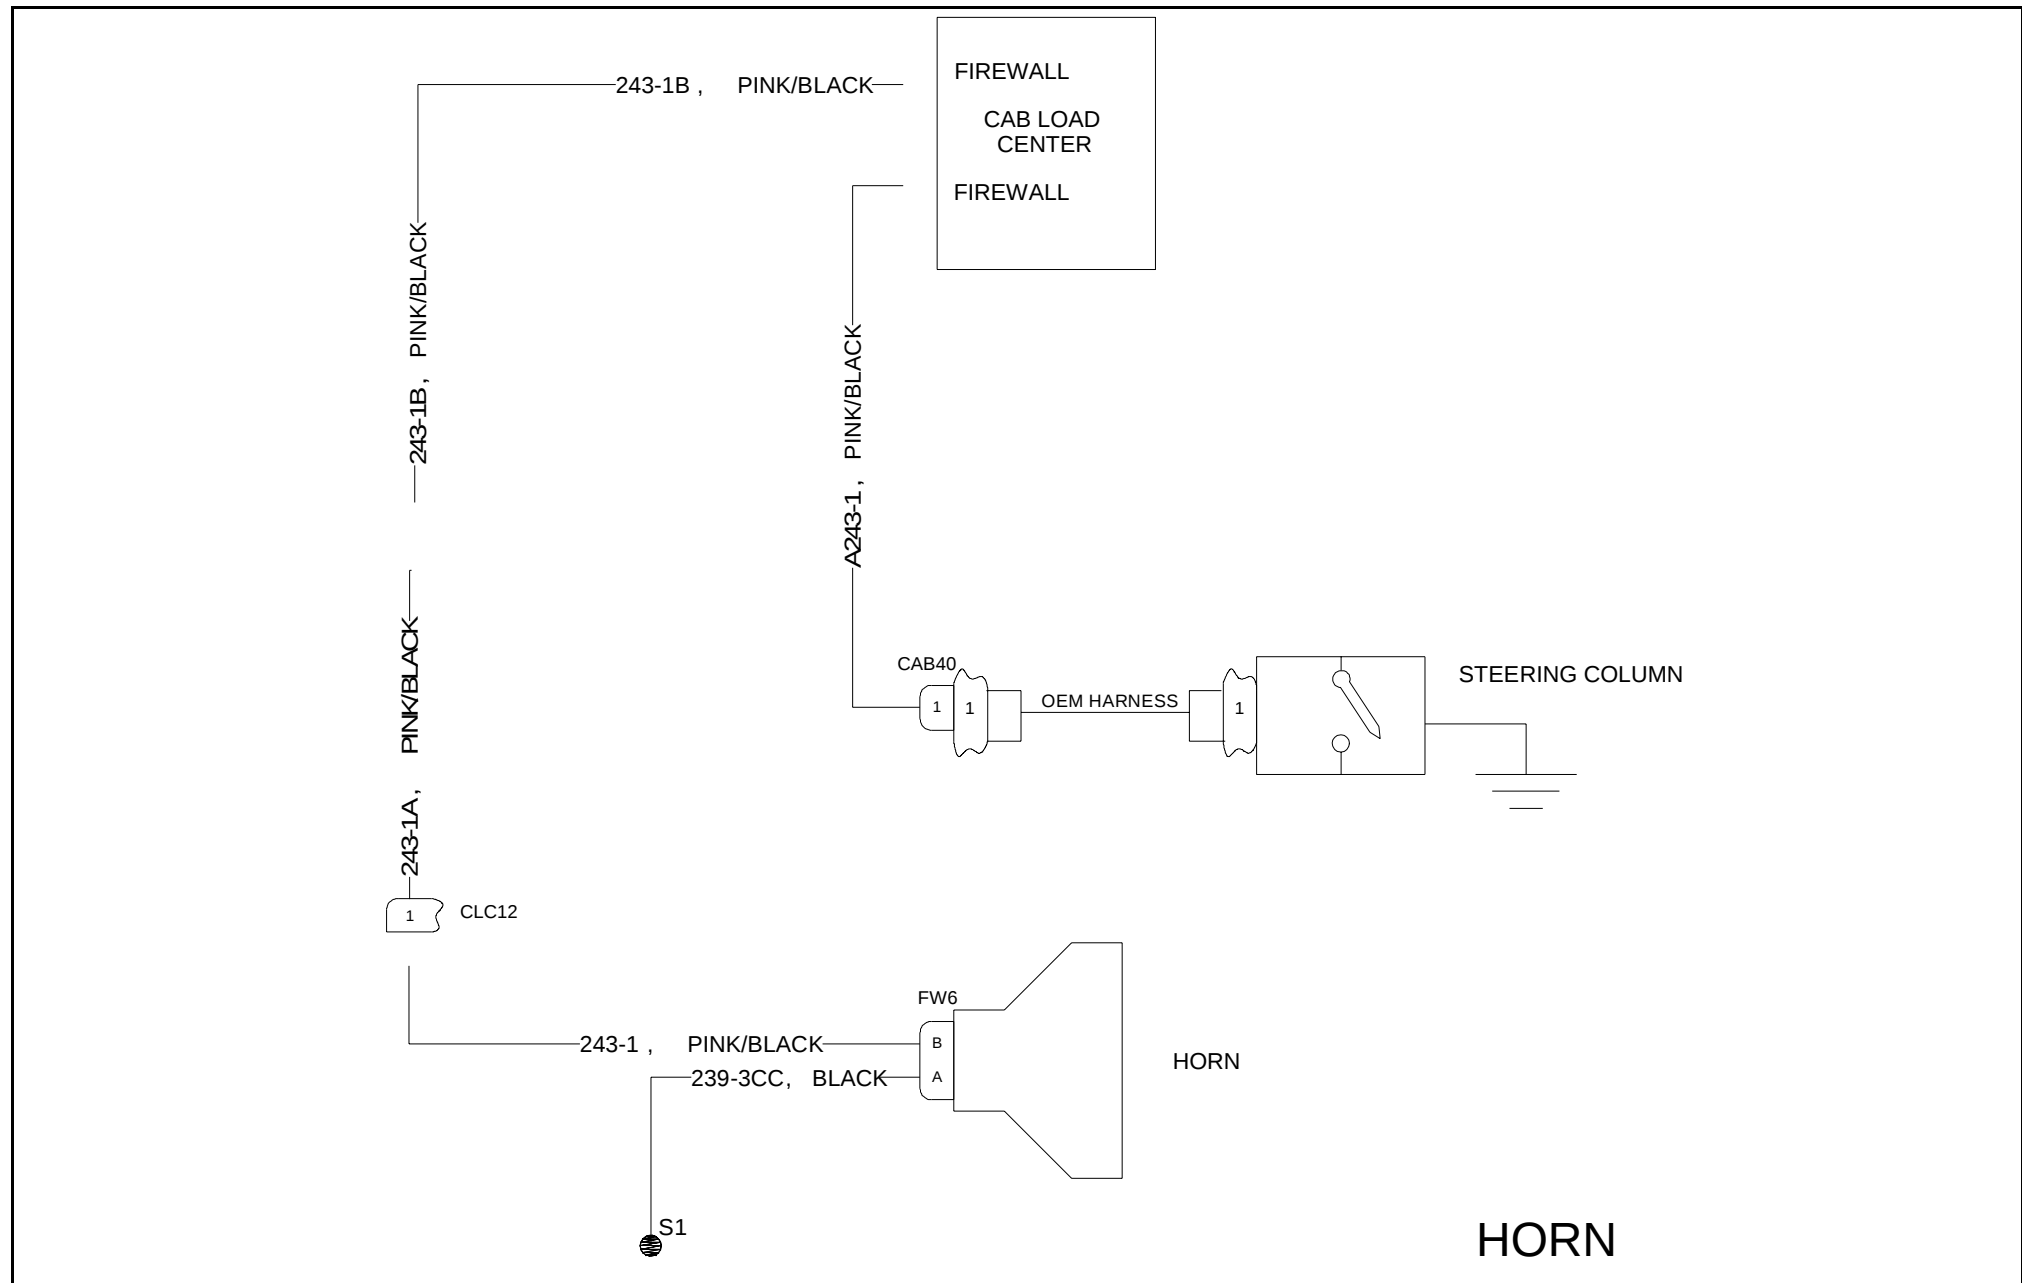


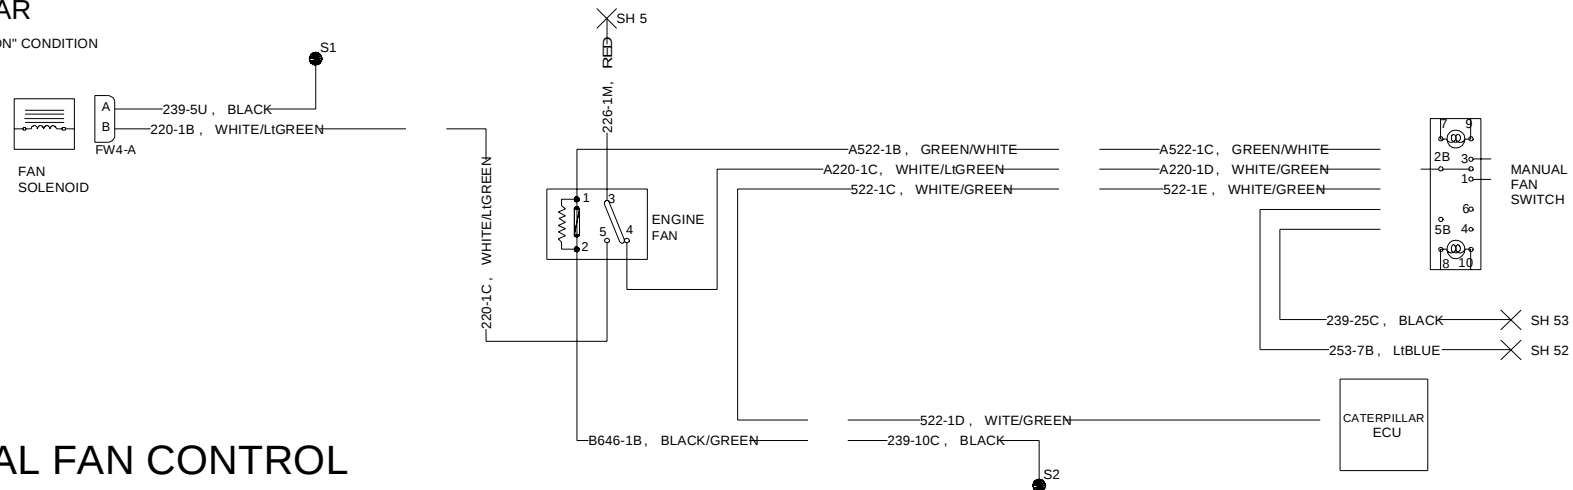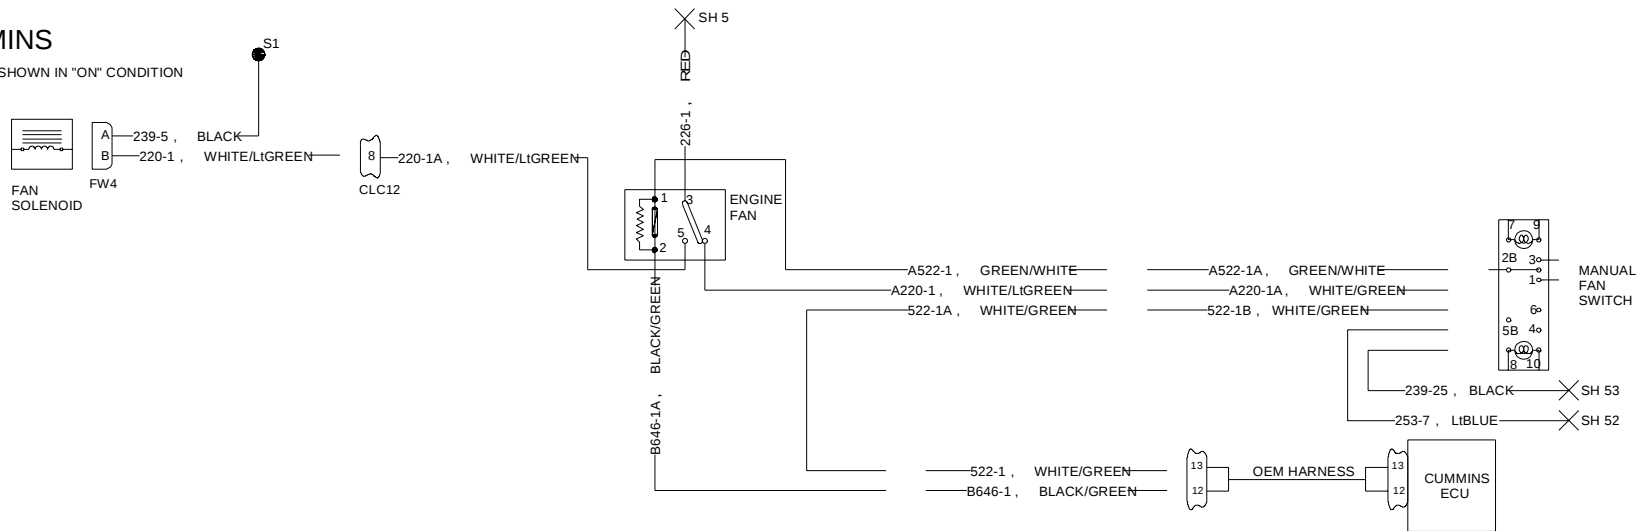



MANUAL FAN CONTROL




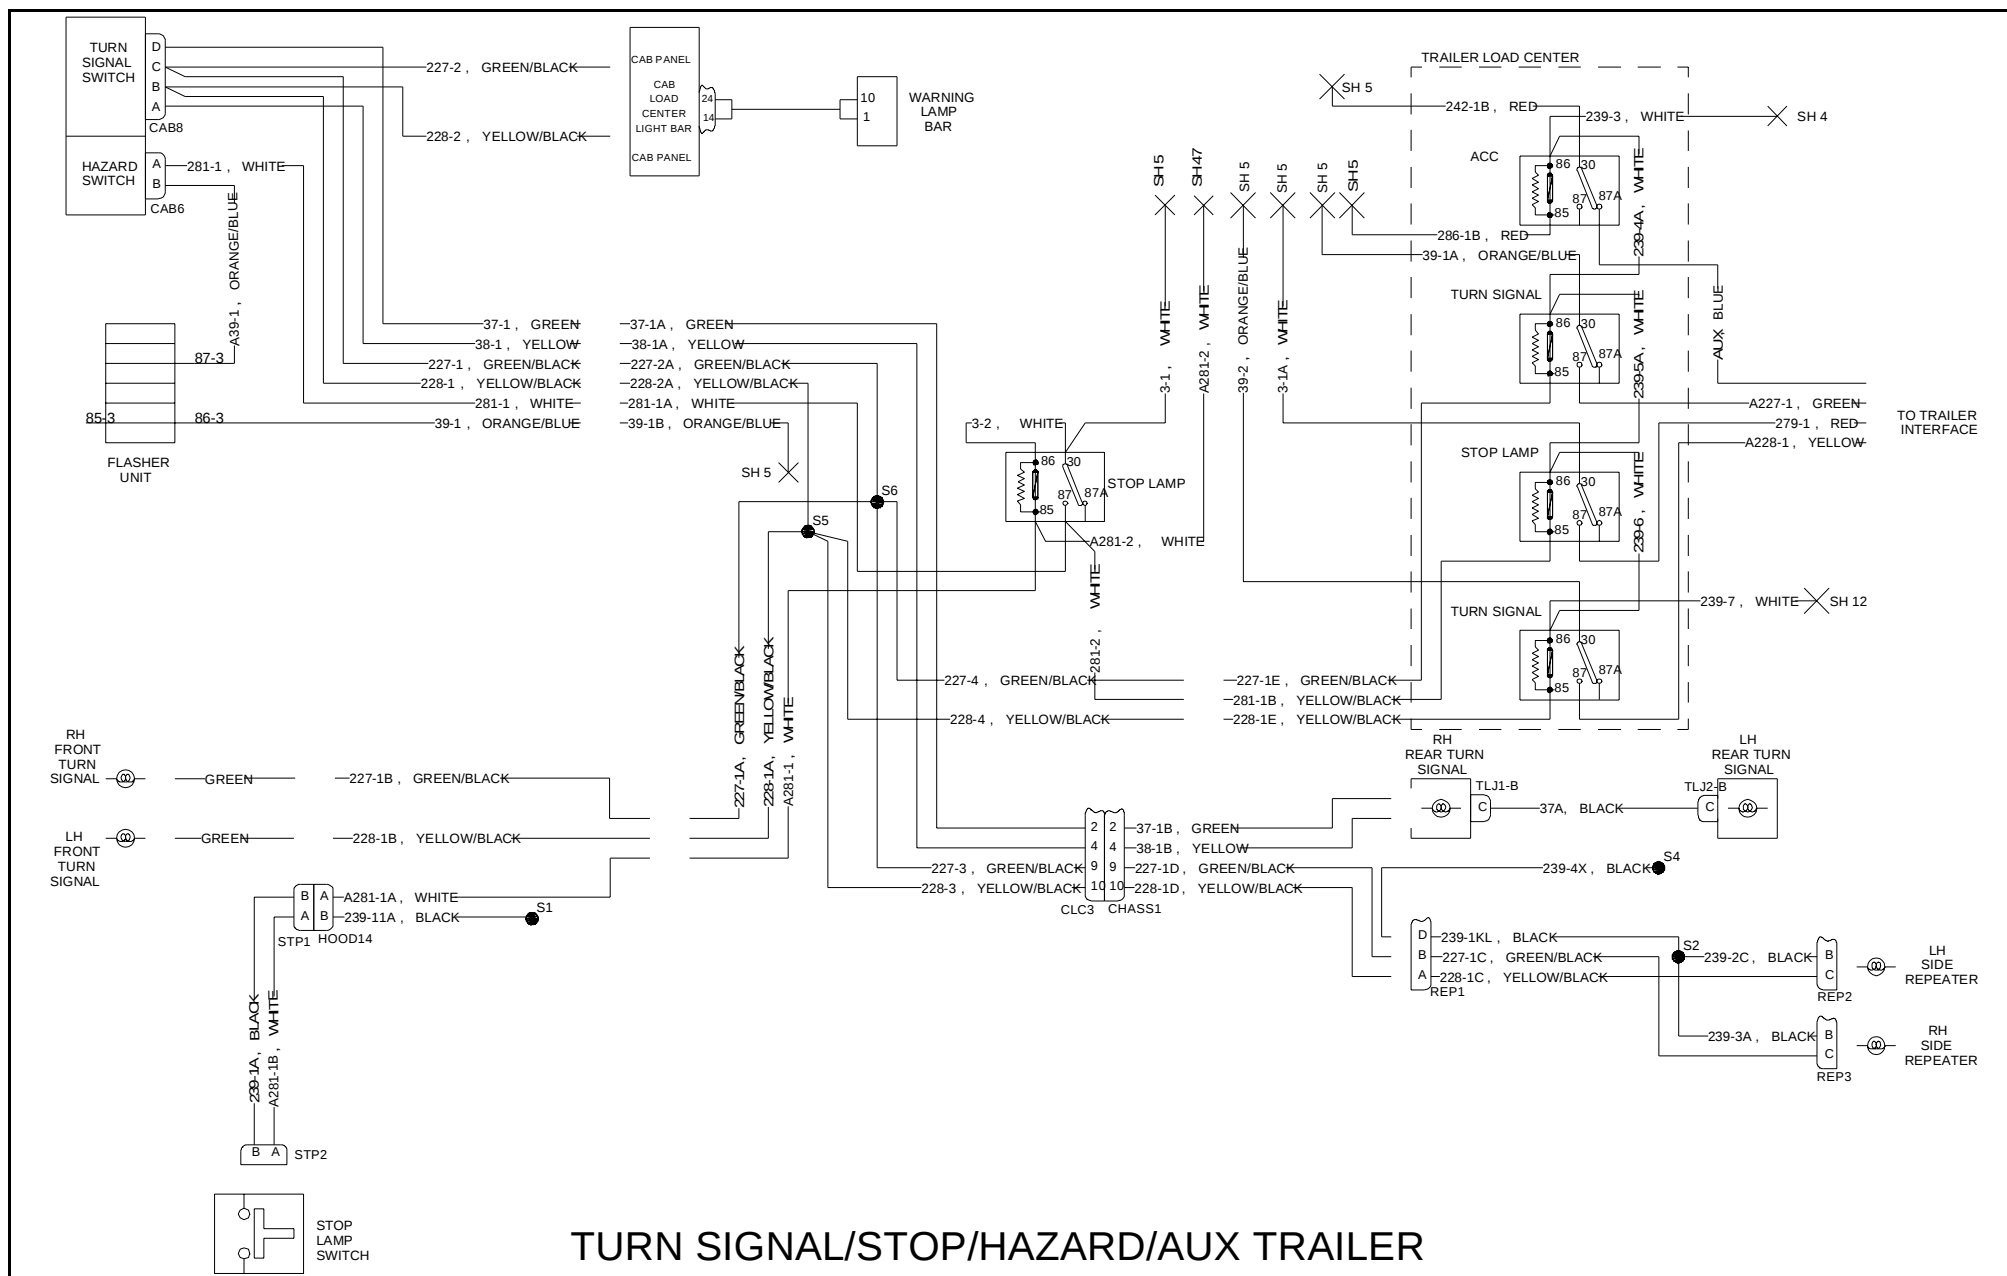

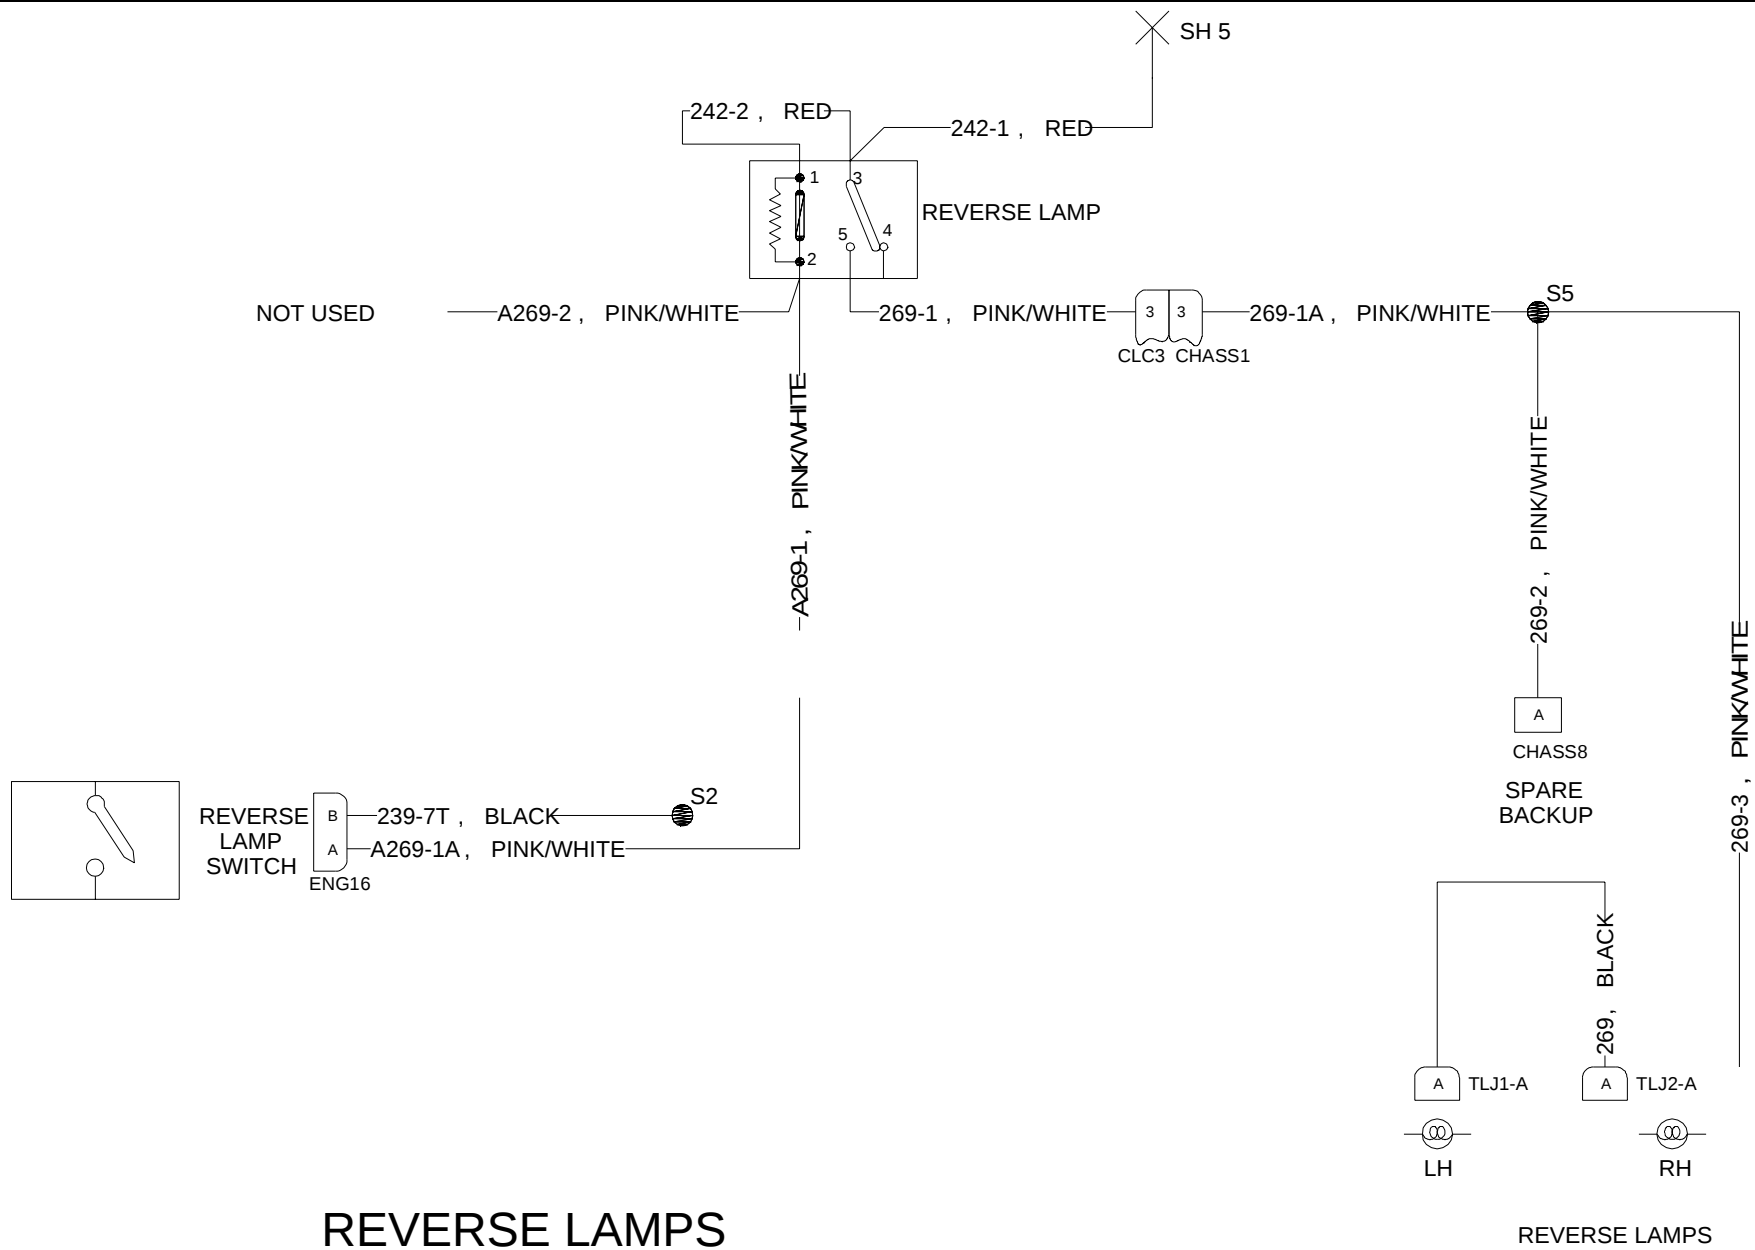

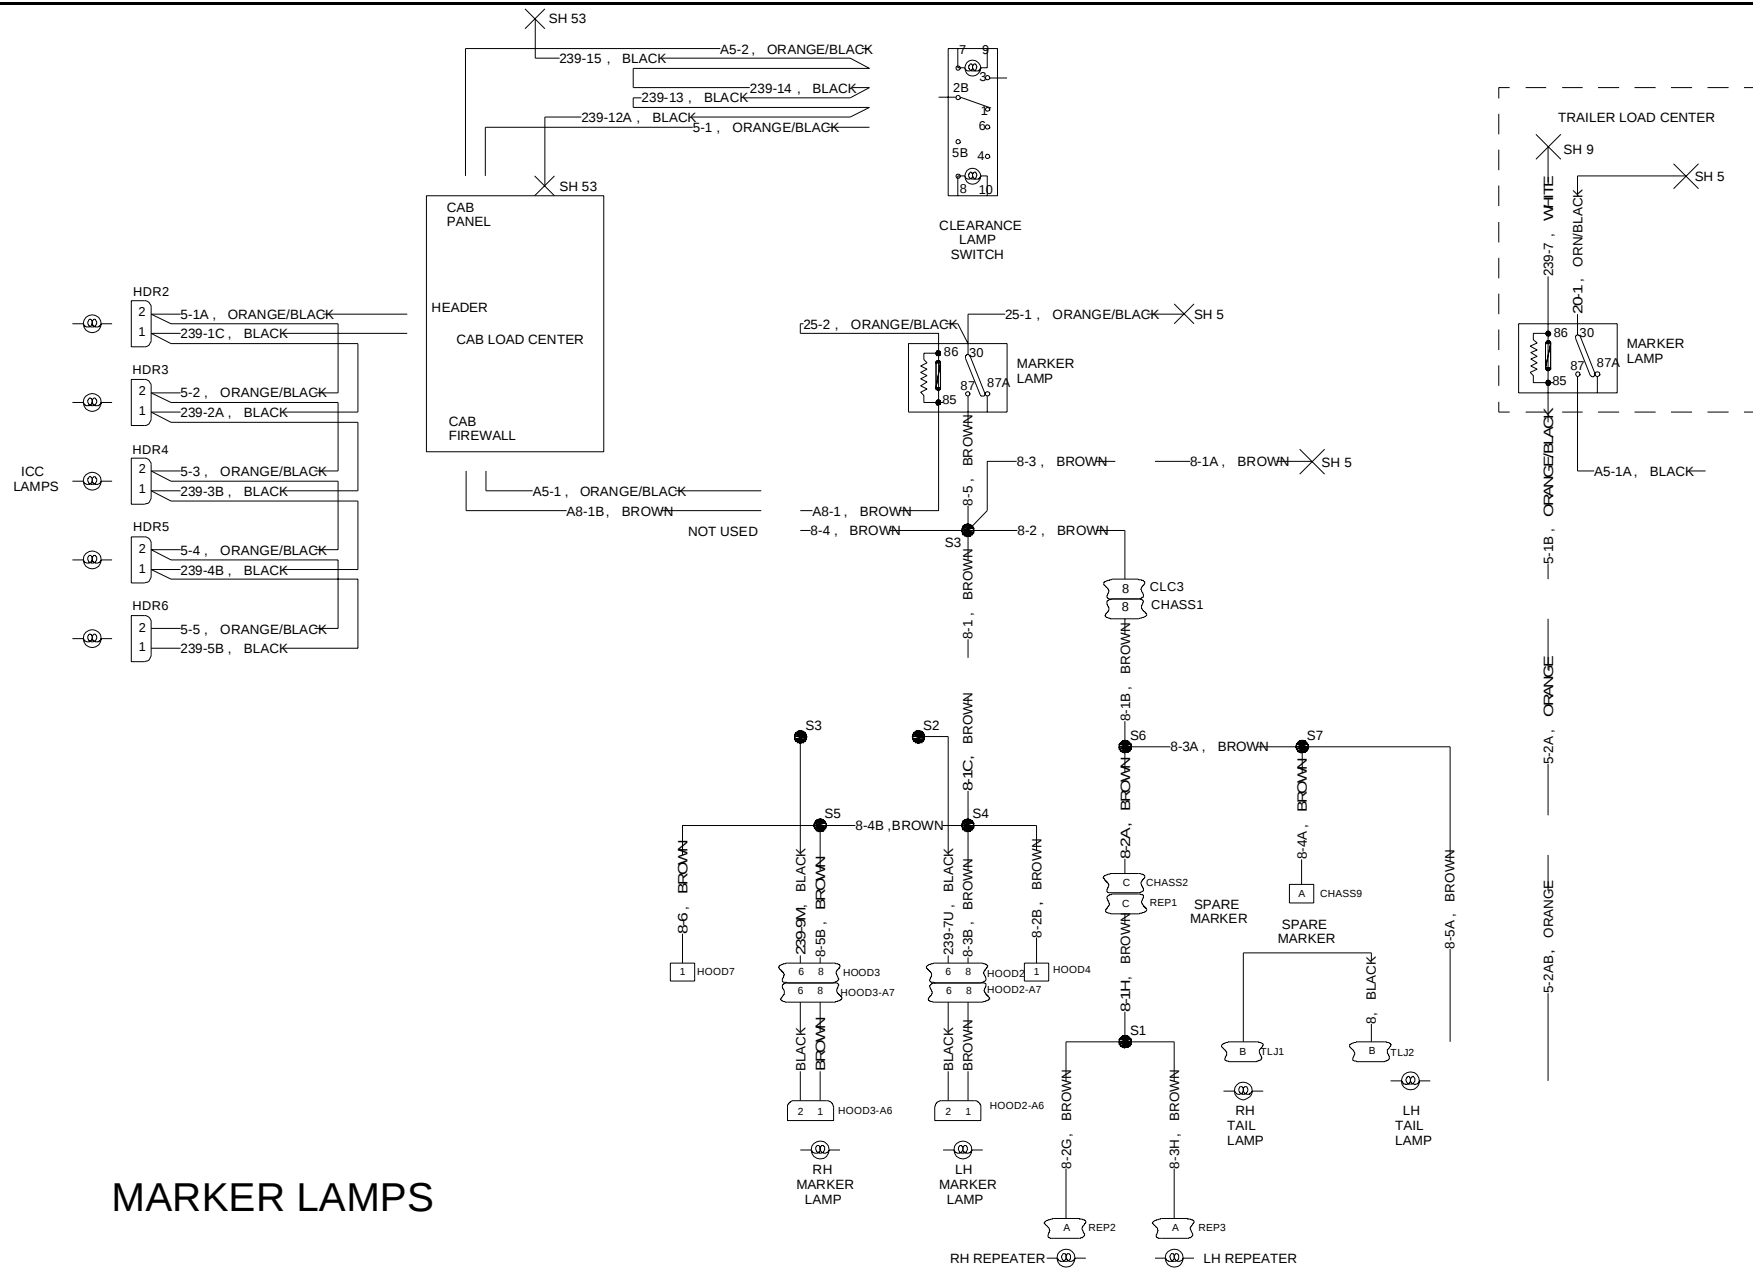










FUEL HEATER





AIR DRYER

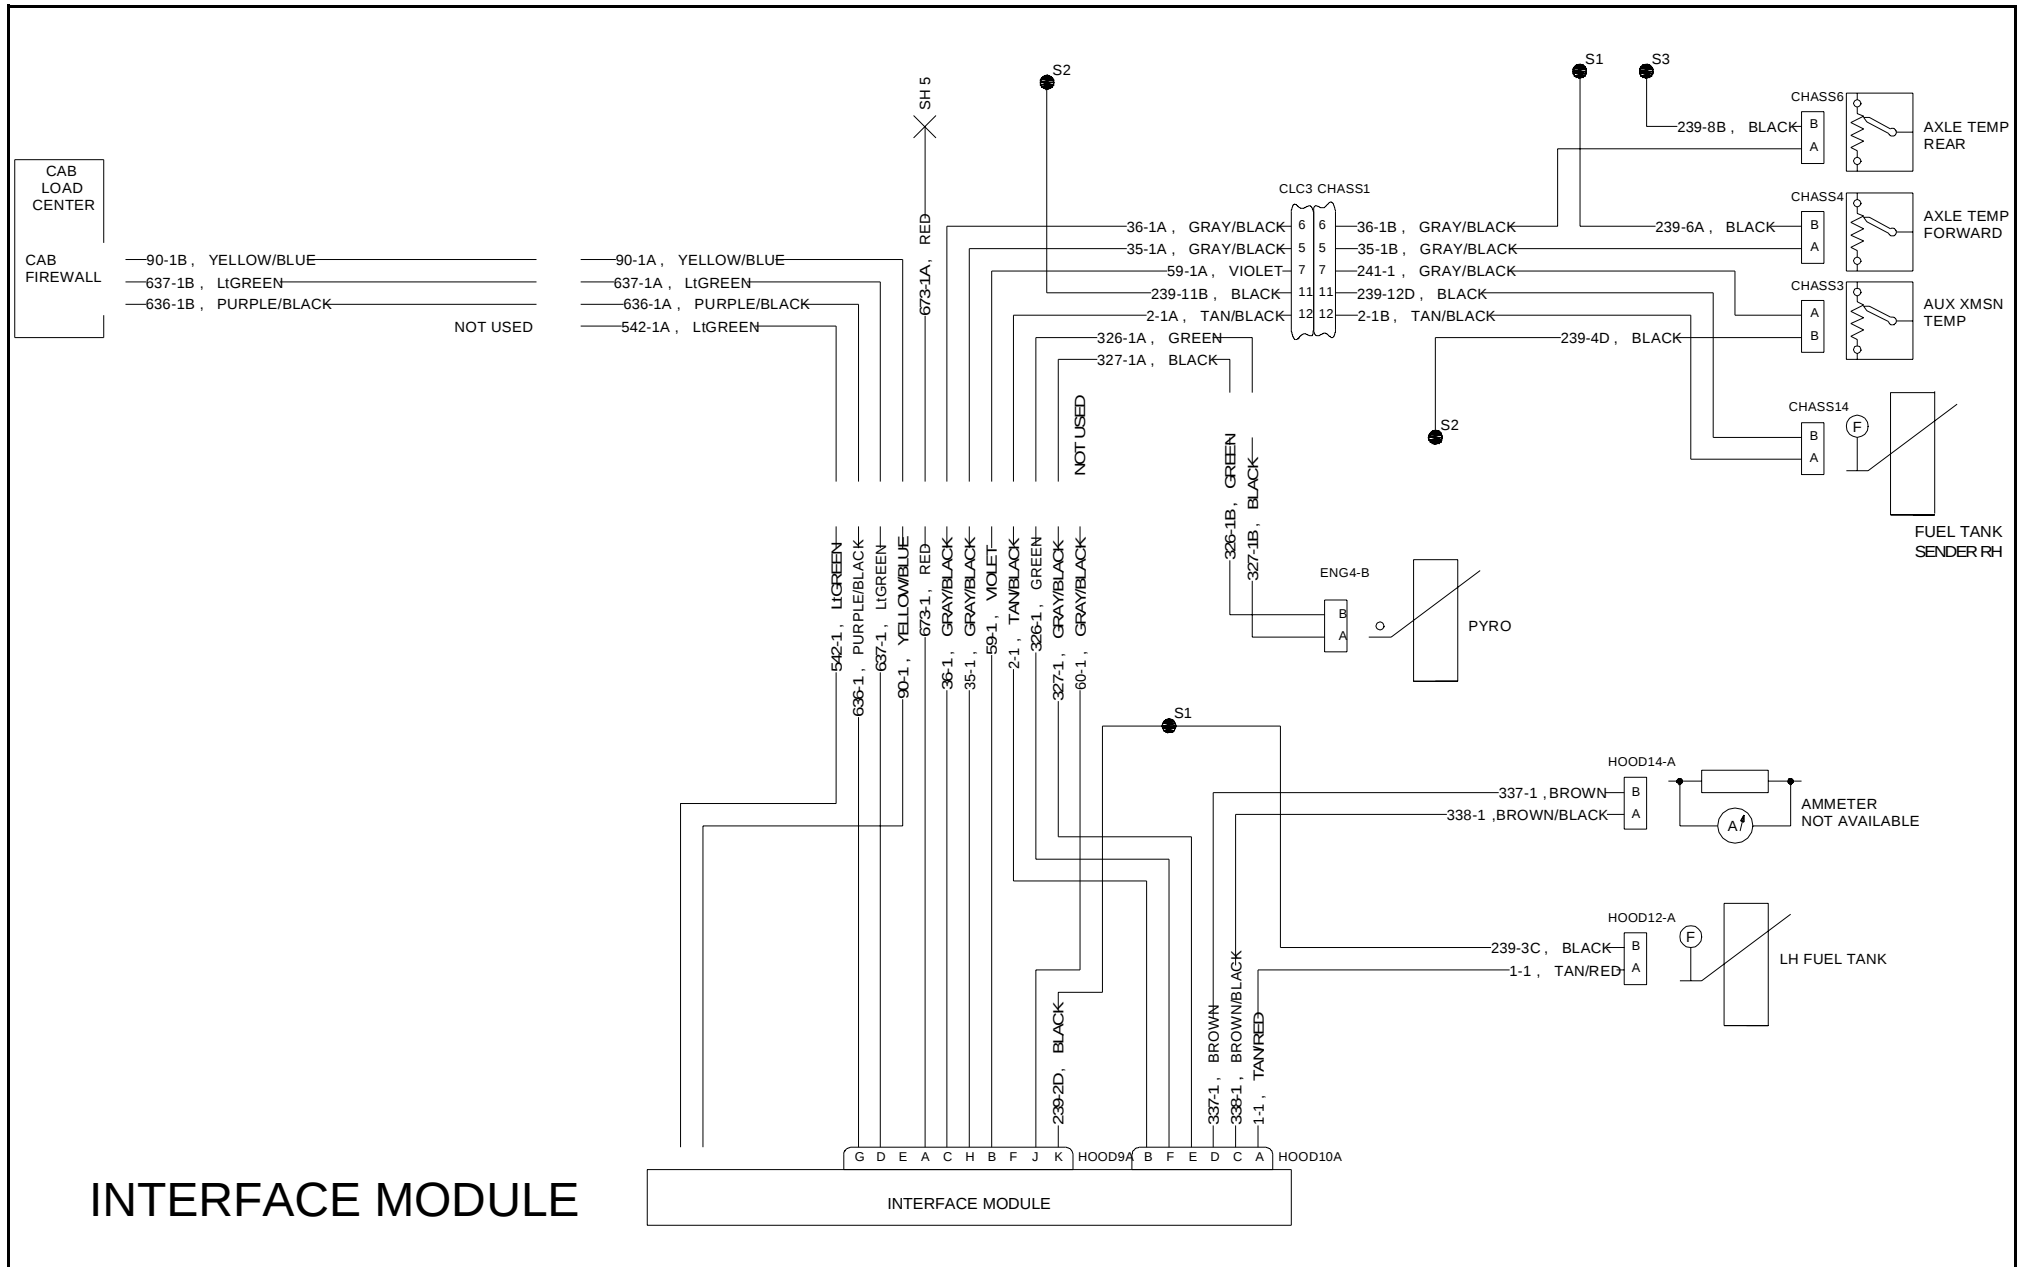


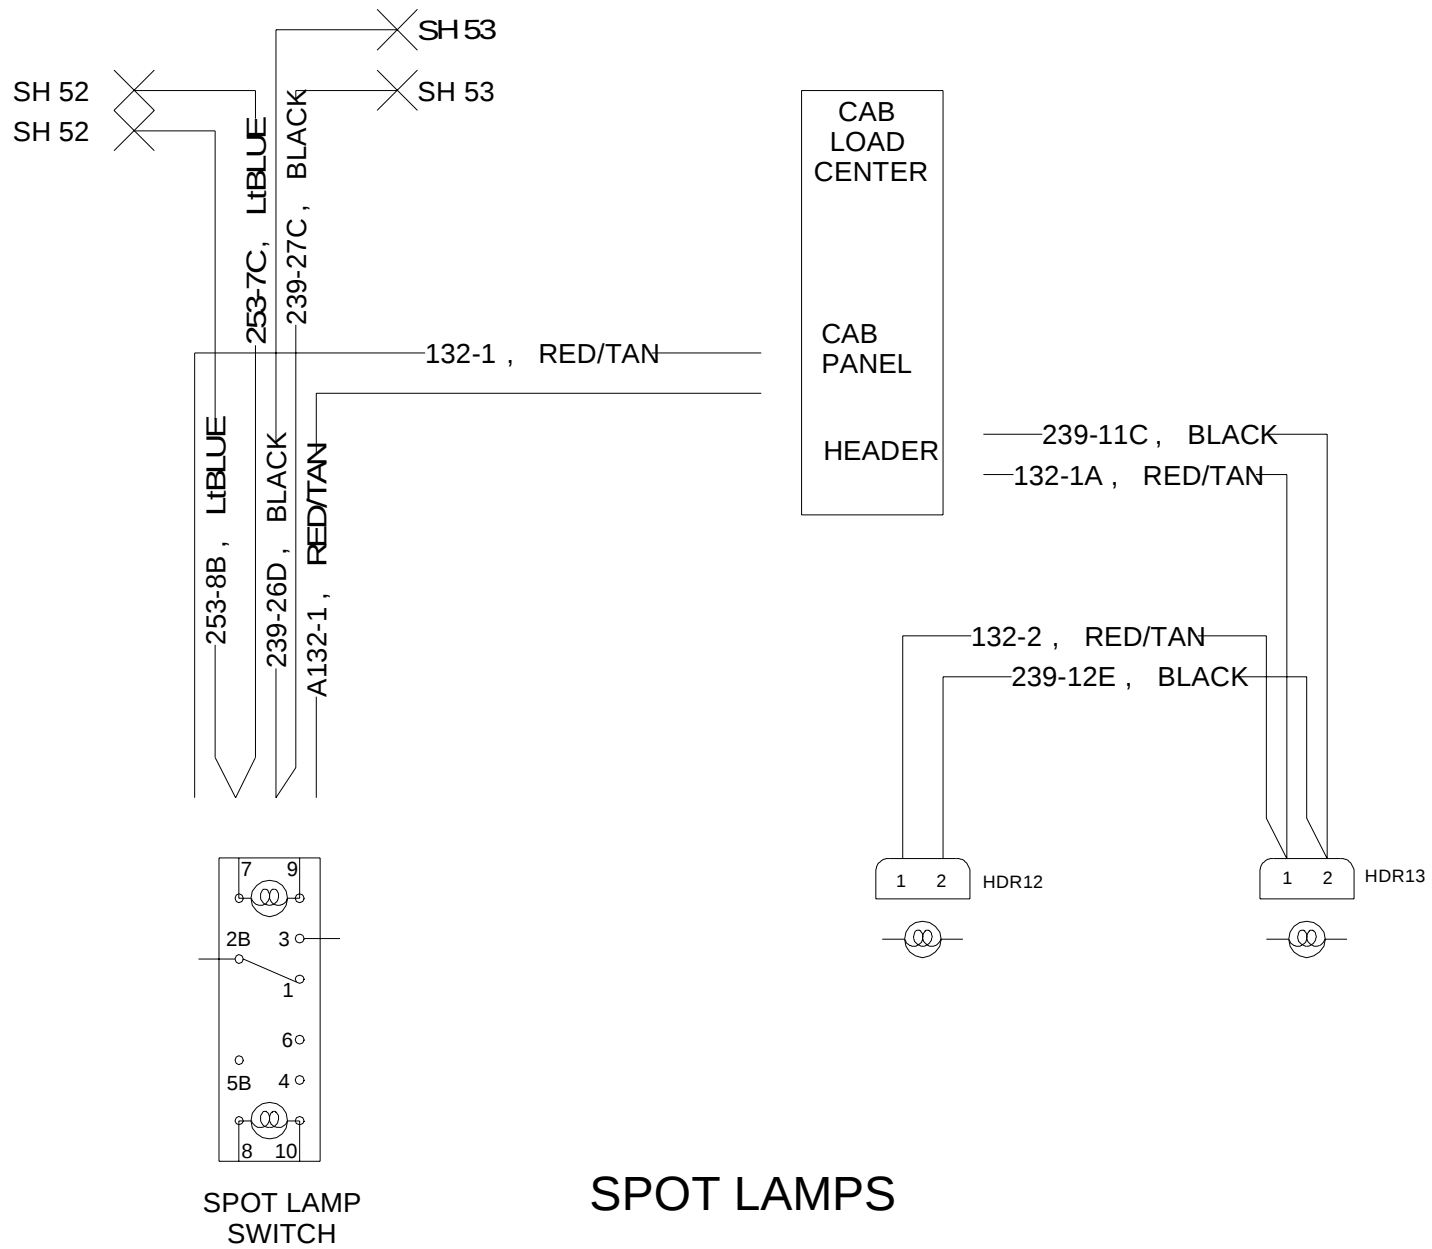

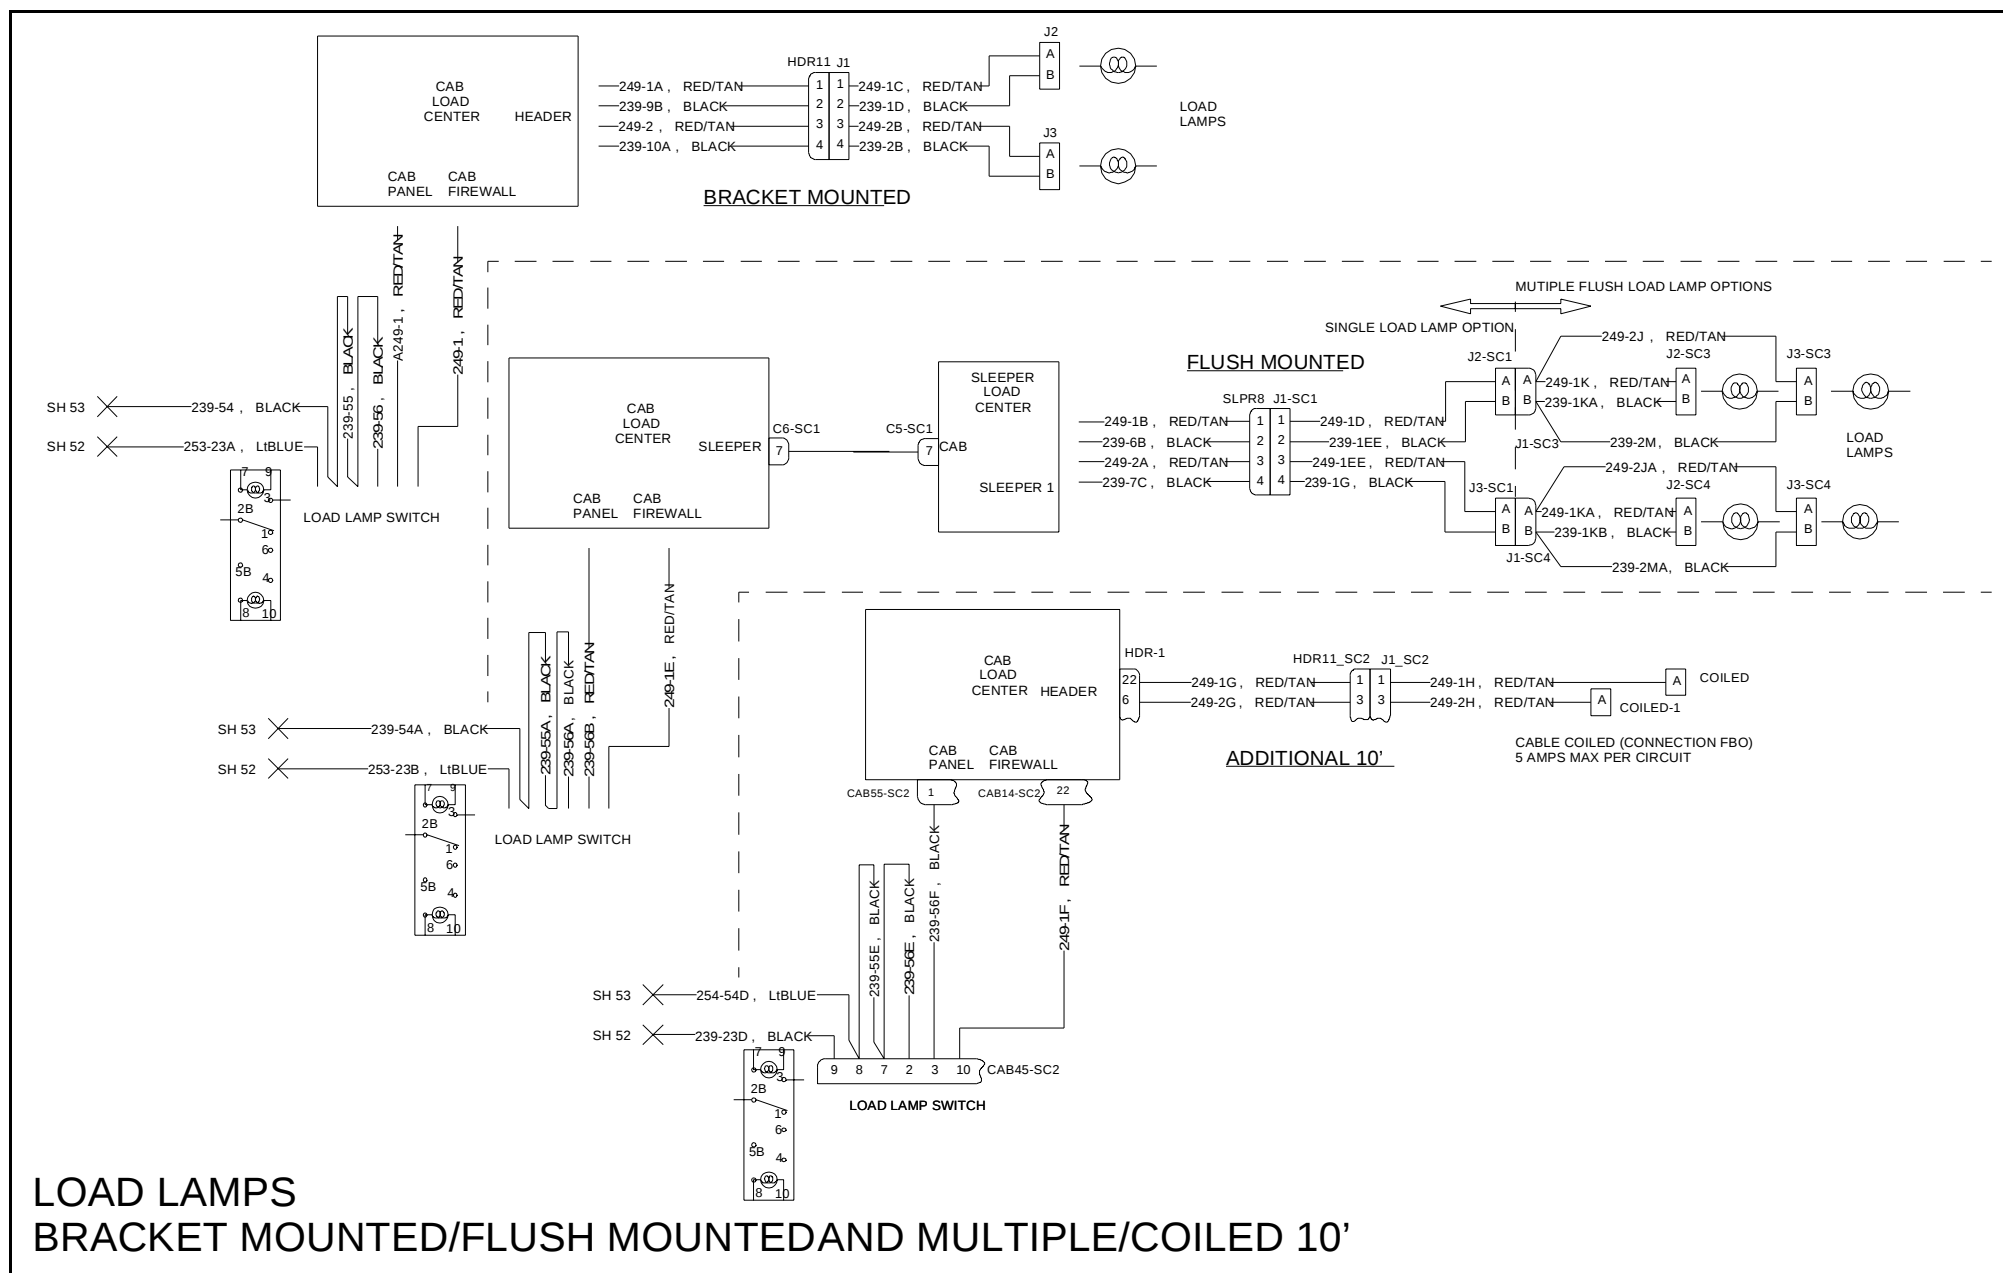


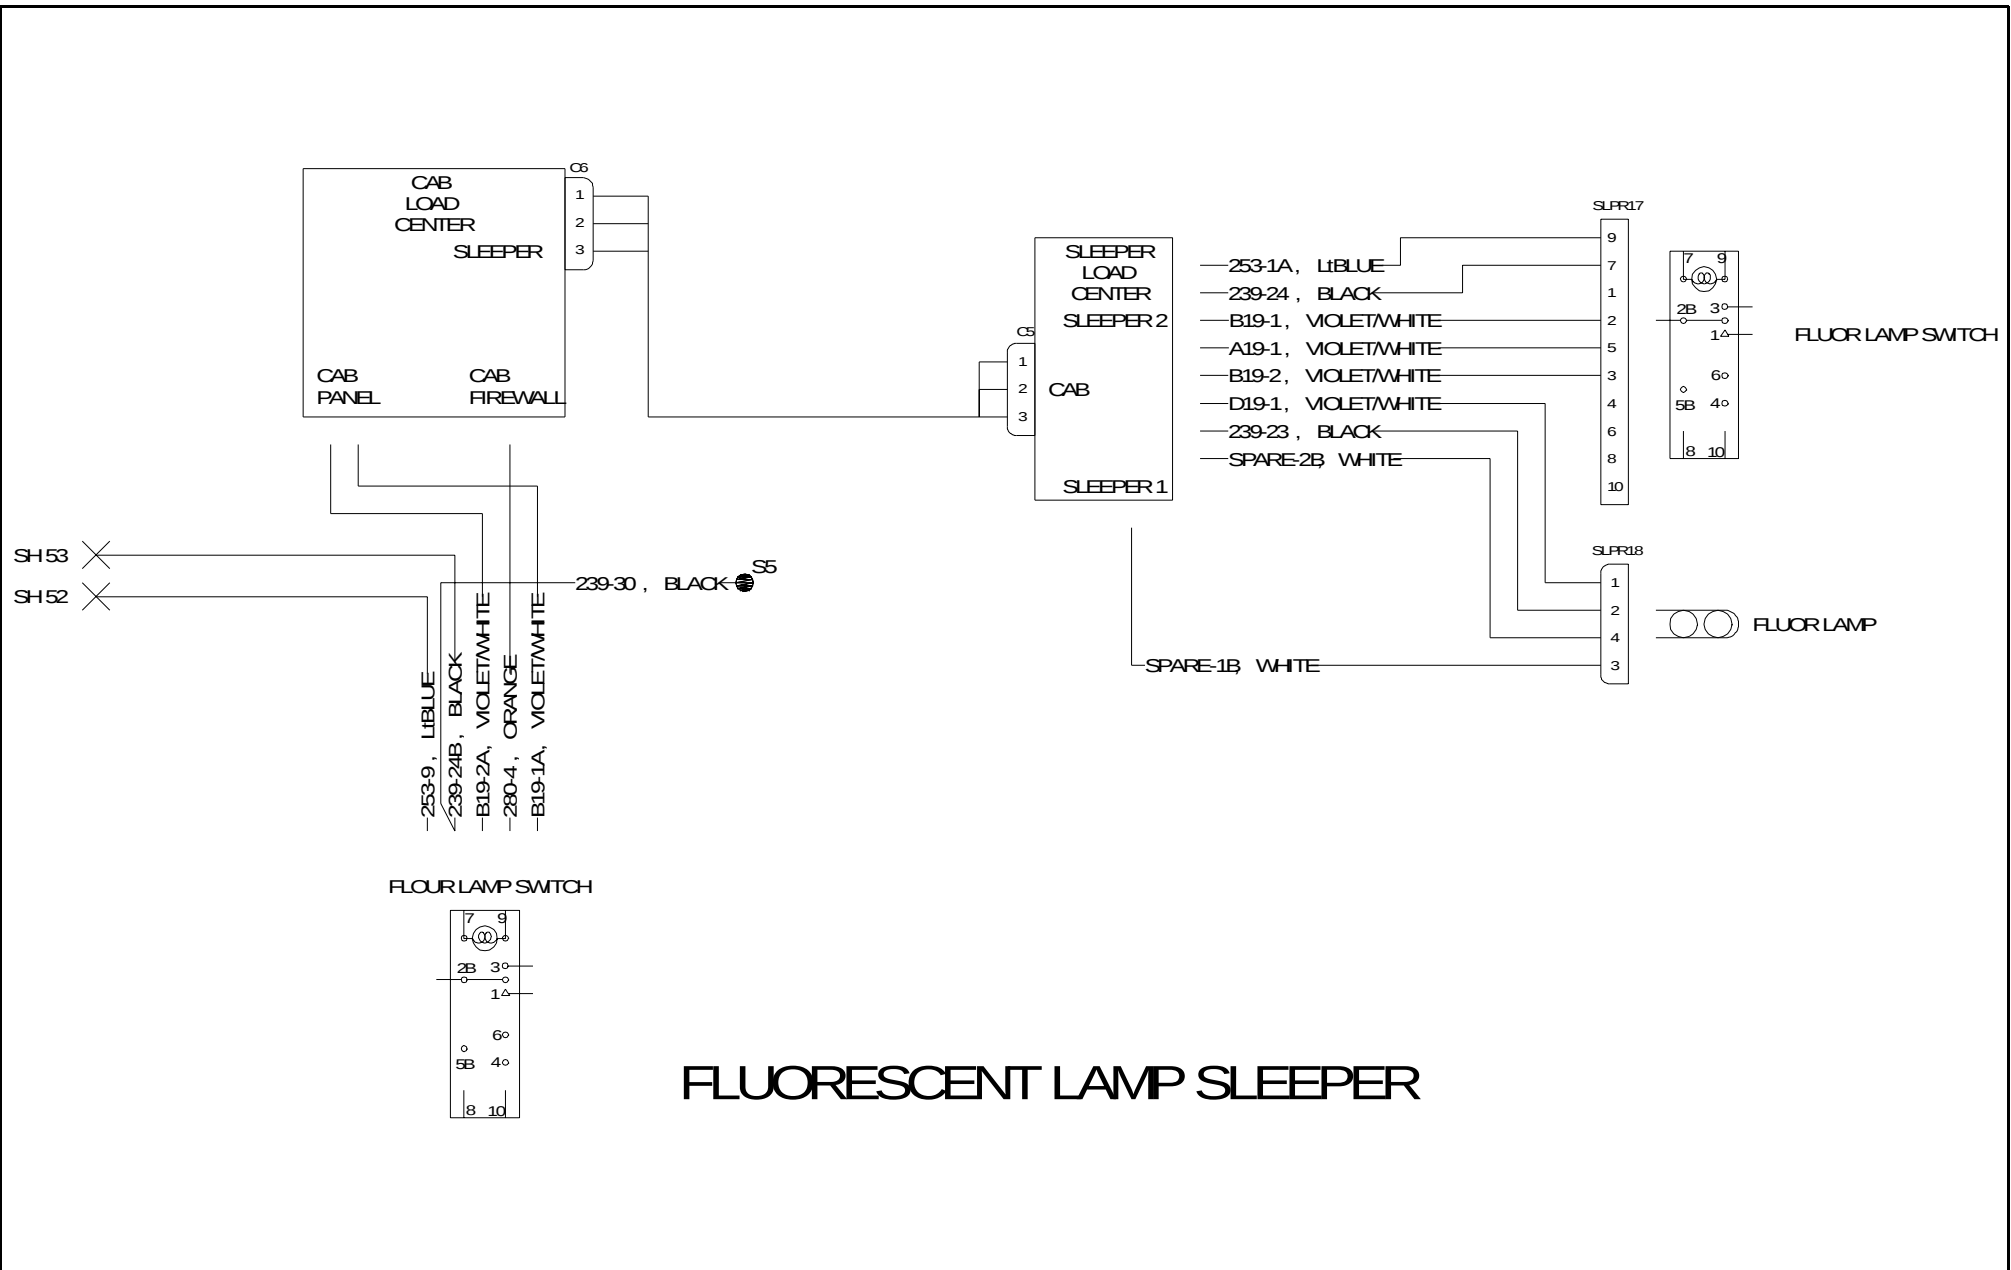


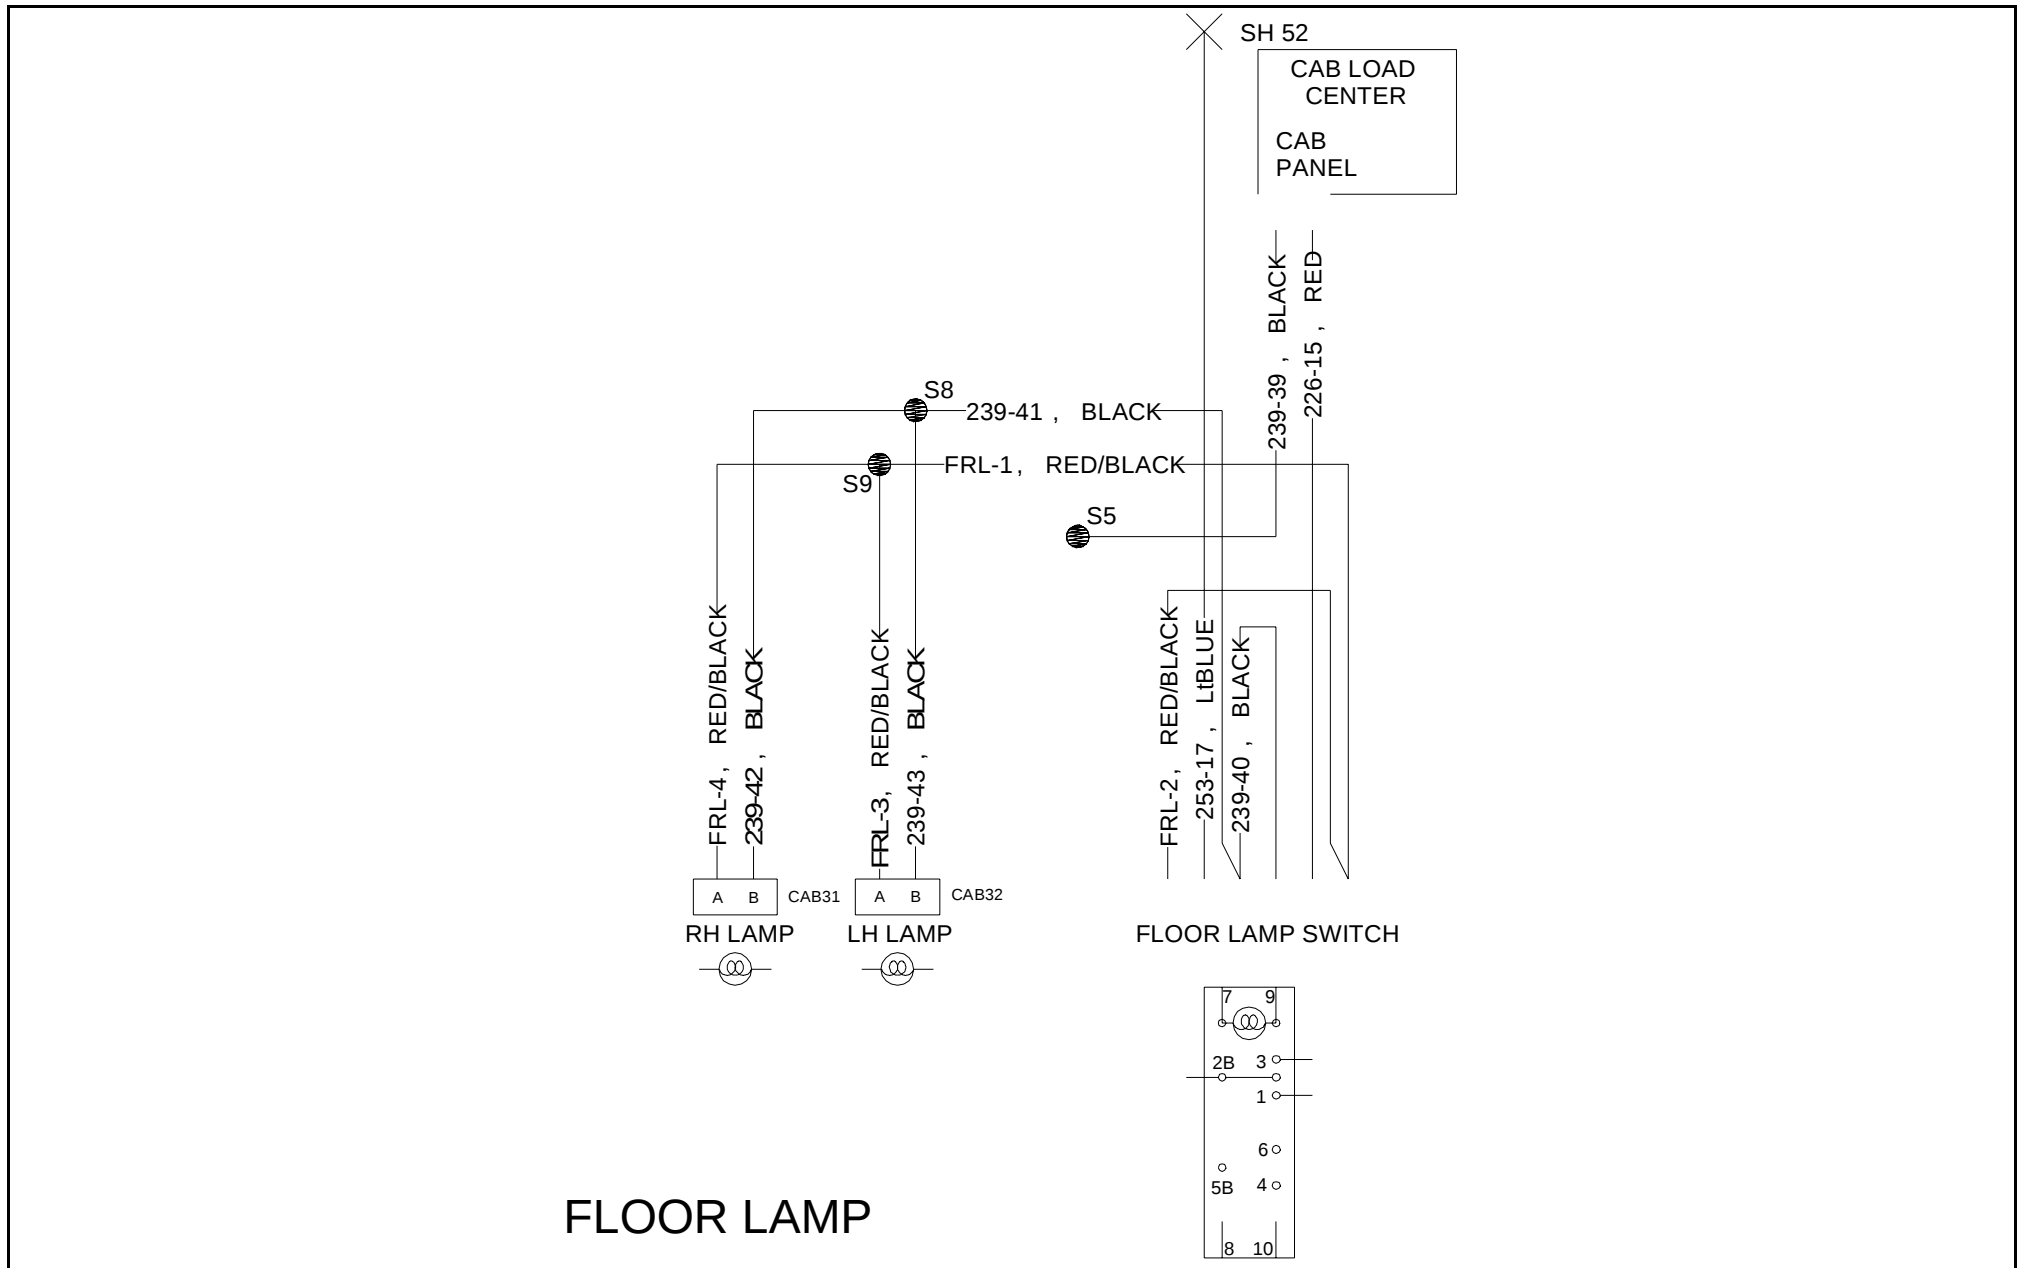


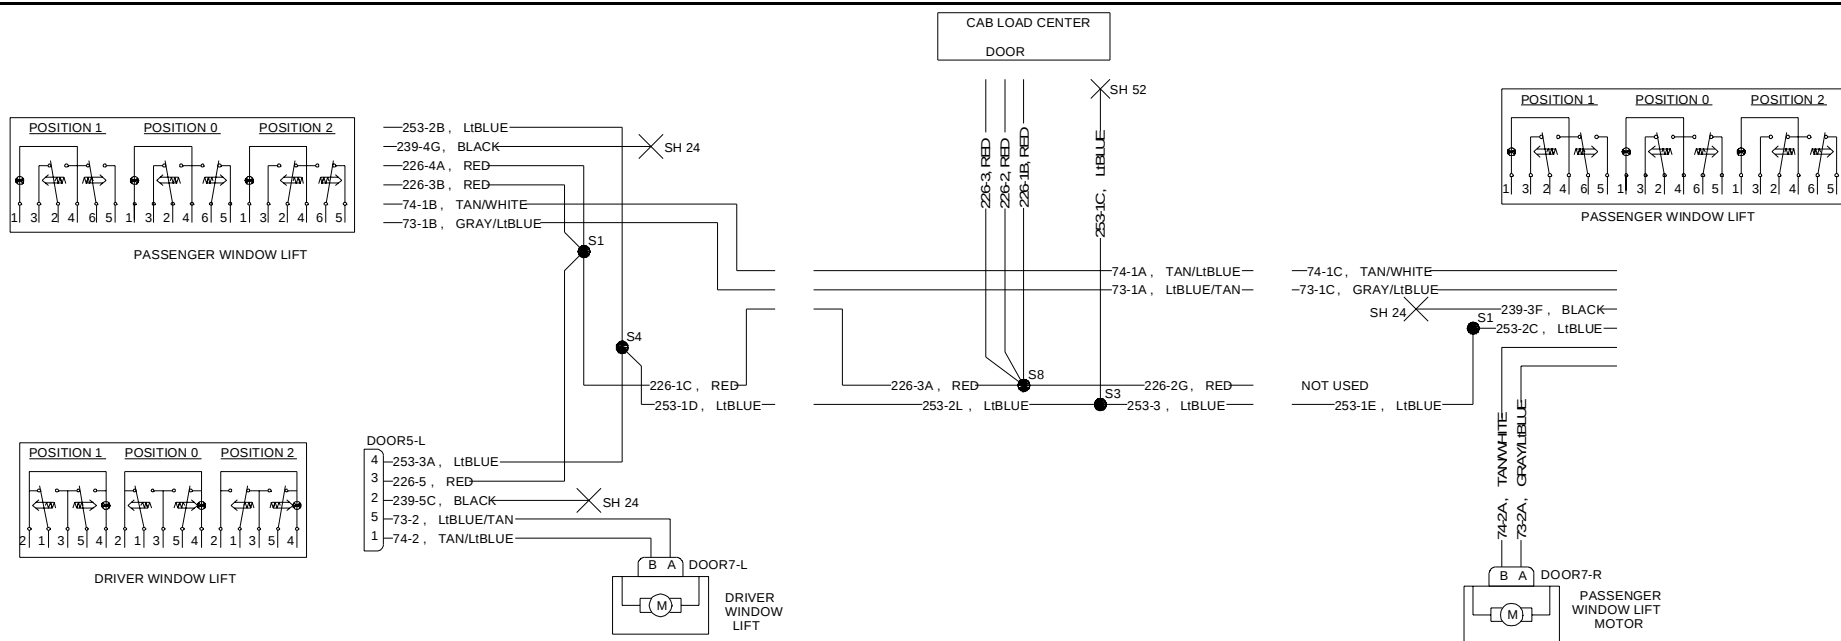


WINDOW LIFT




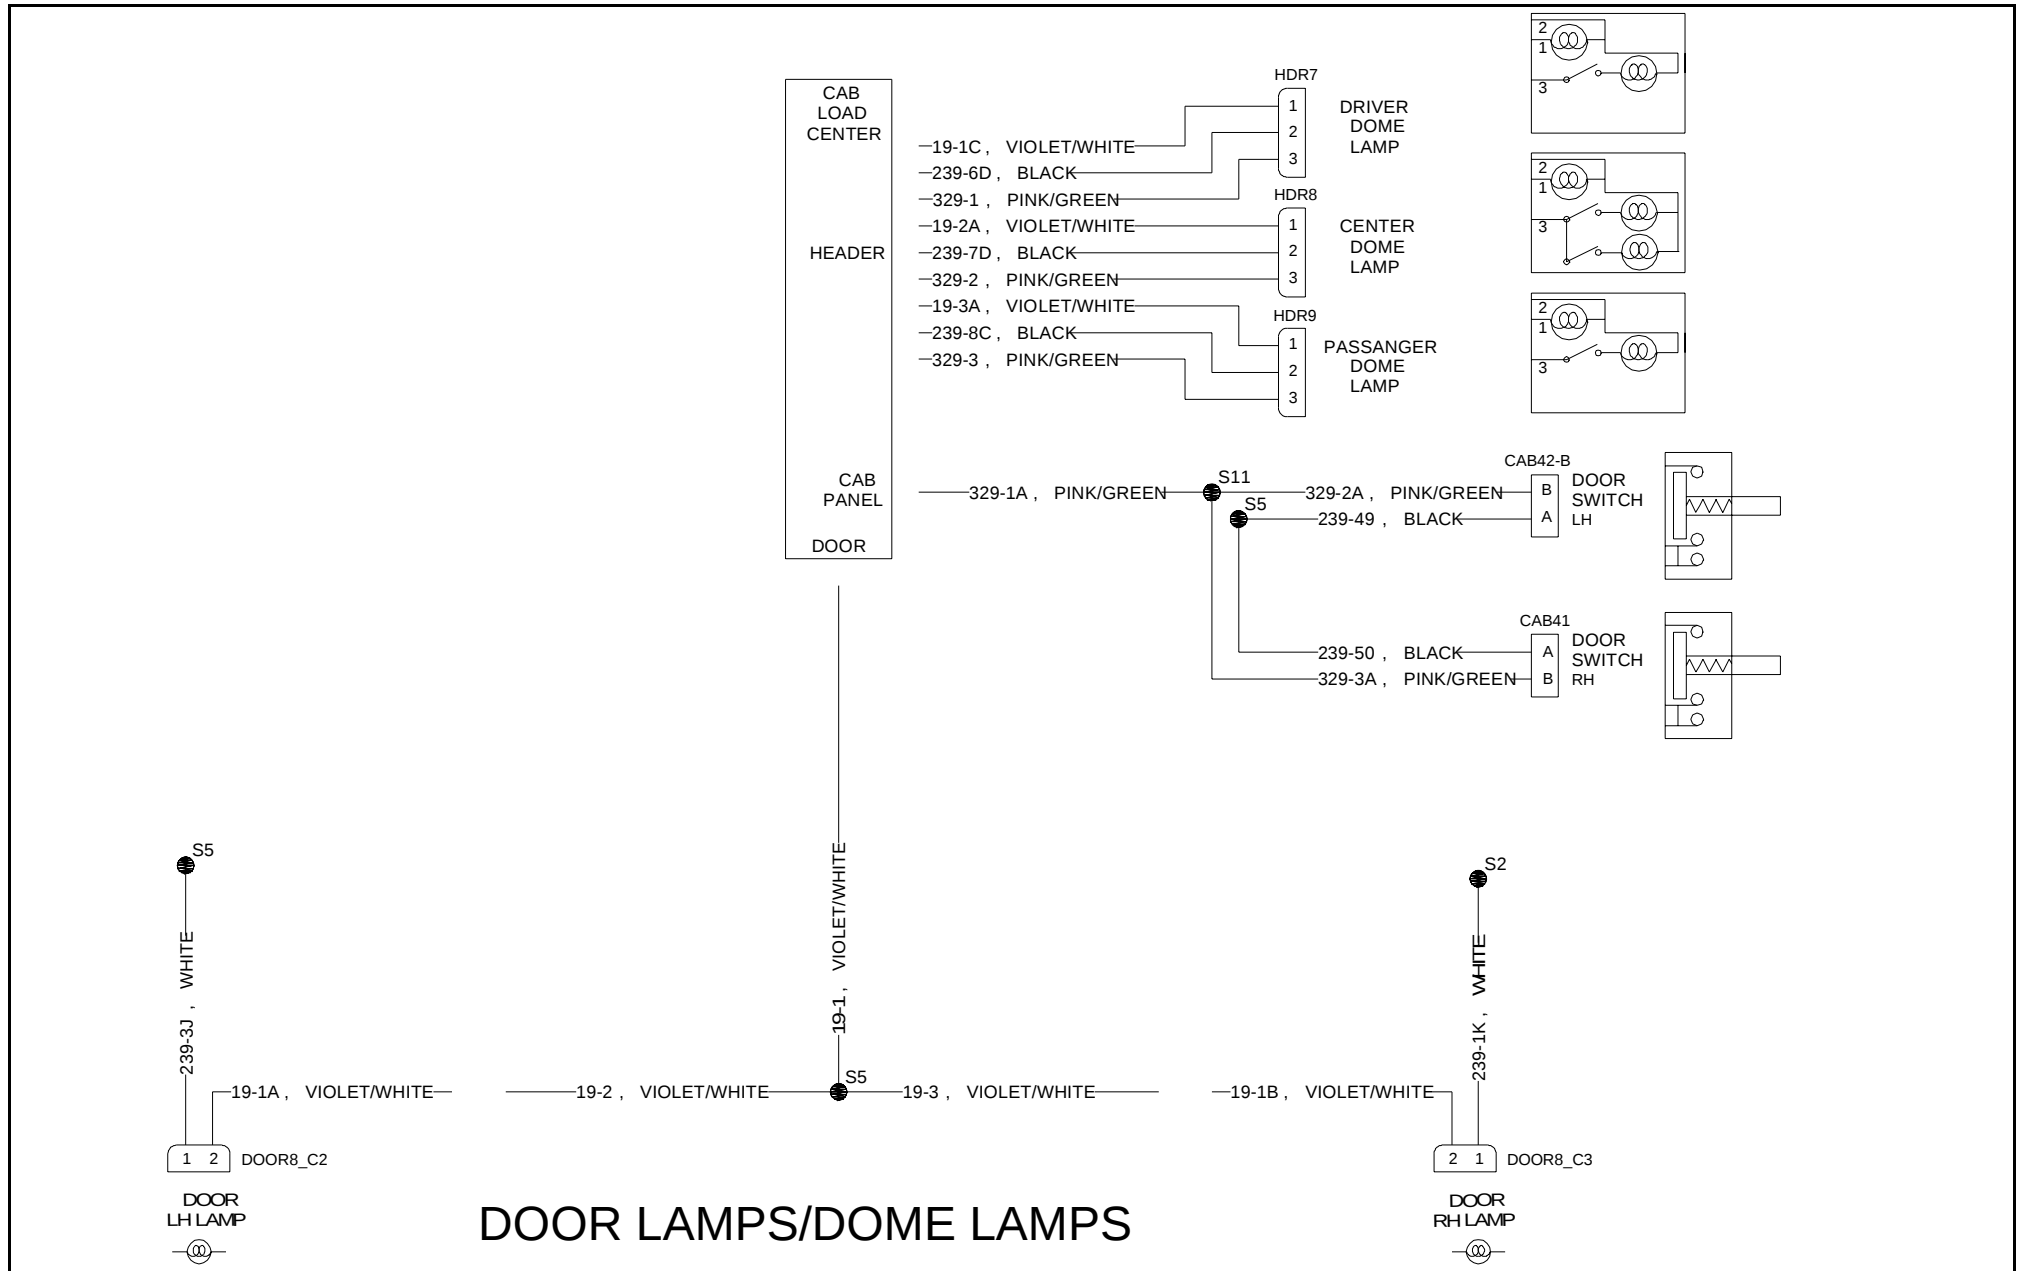


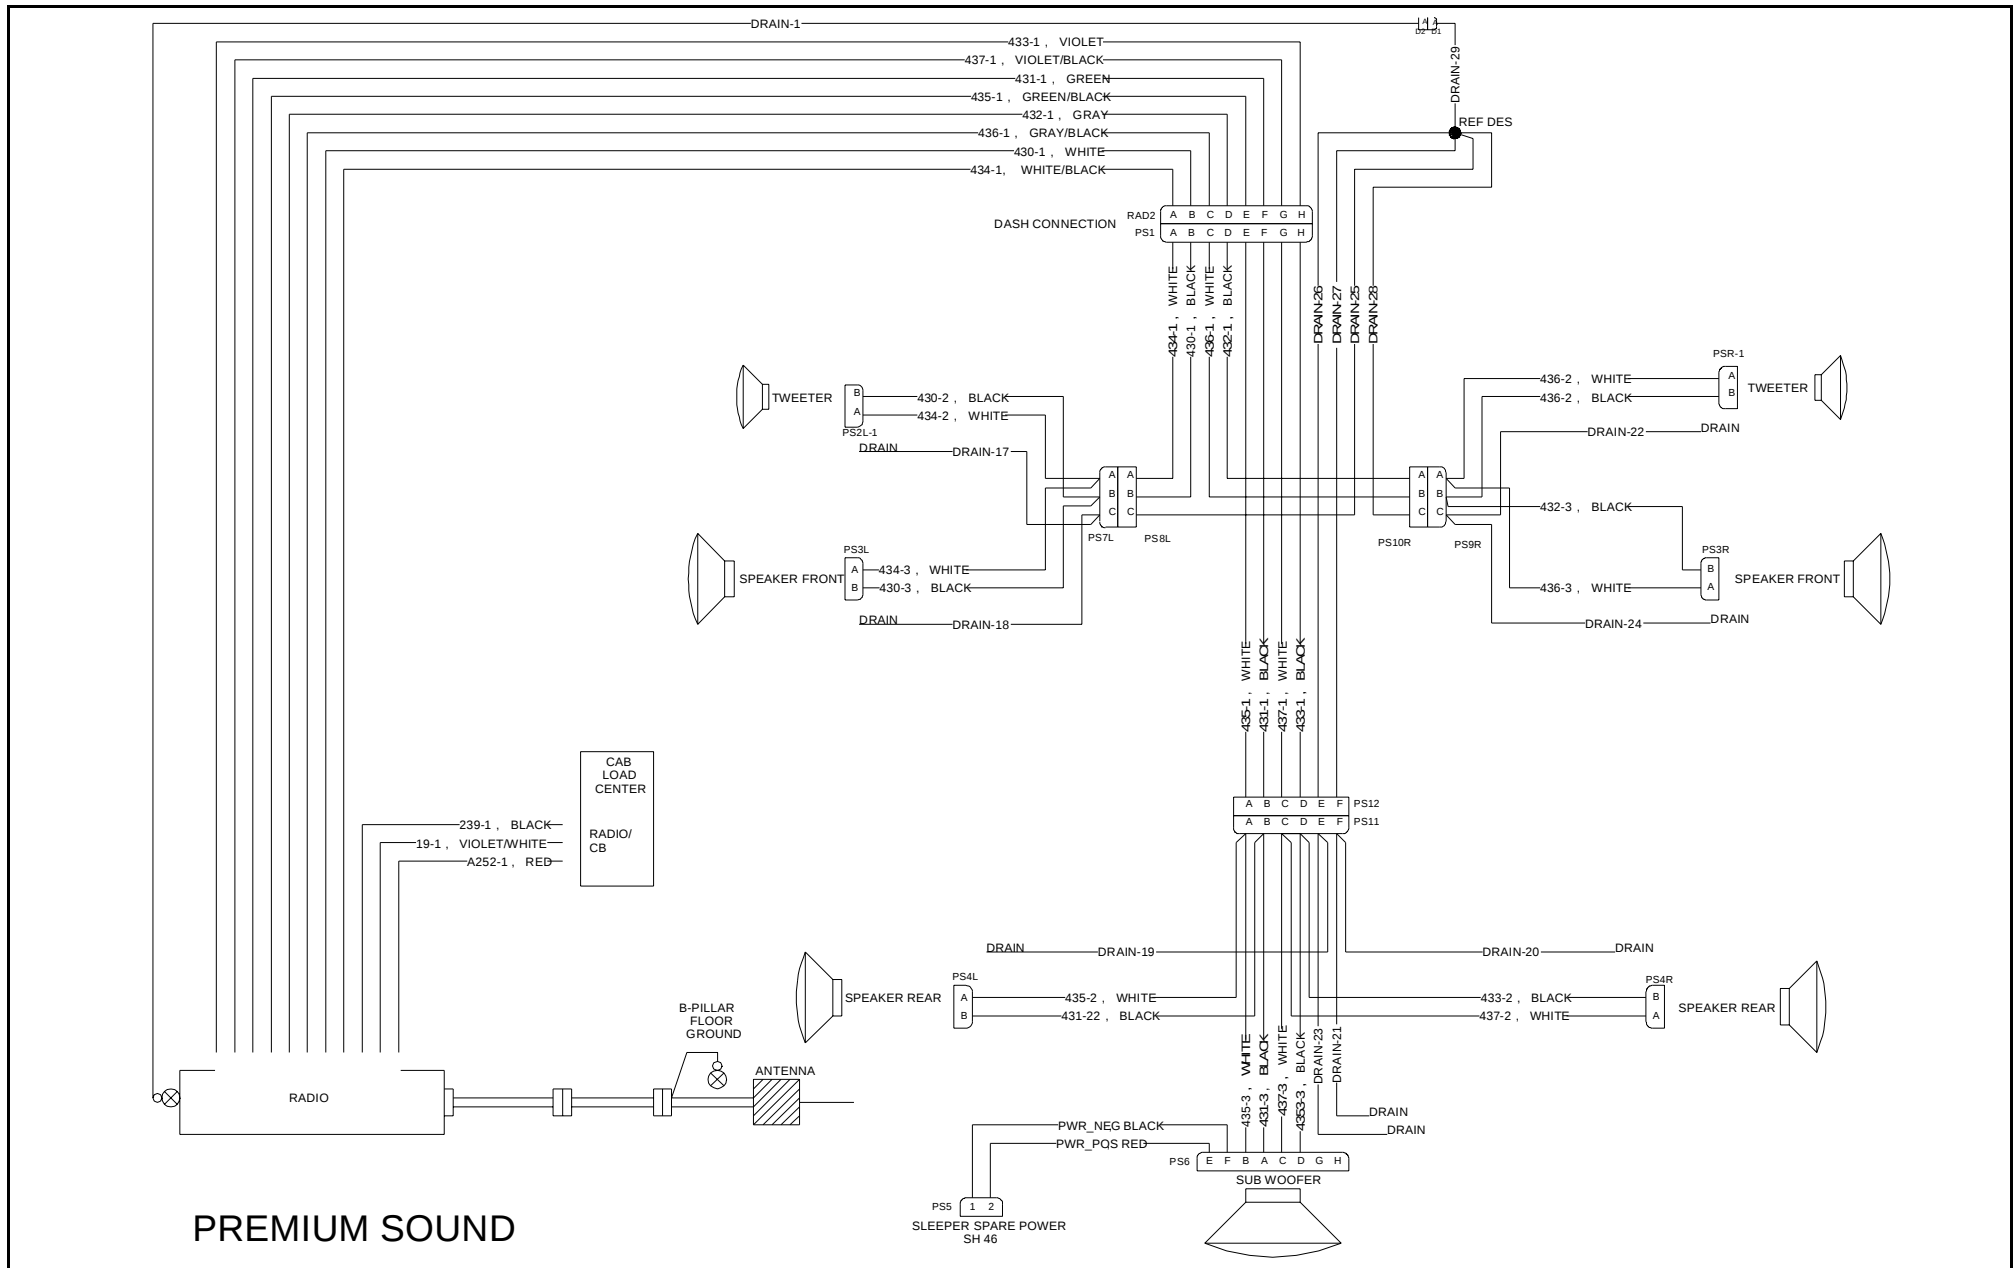


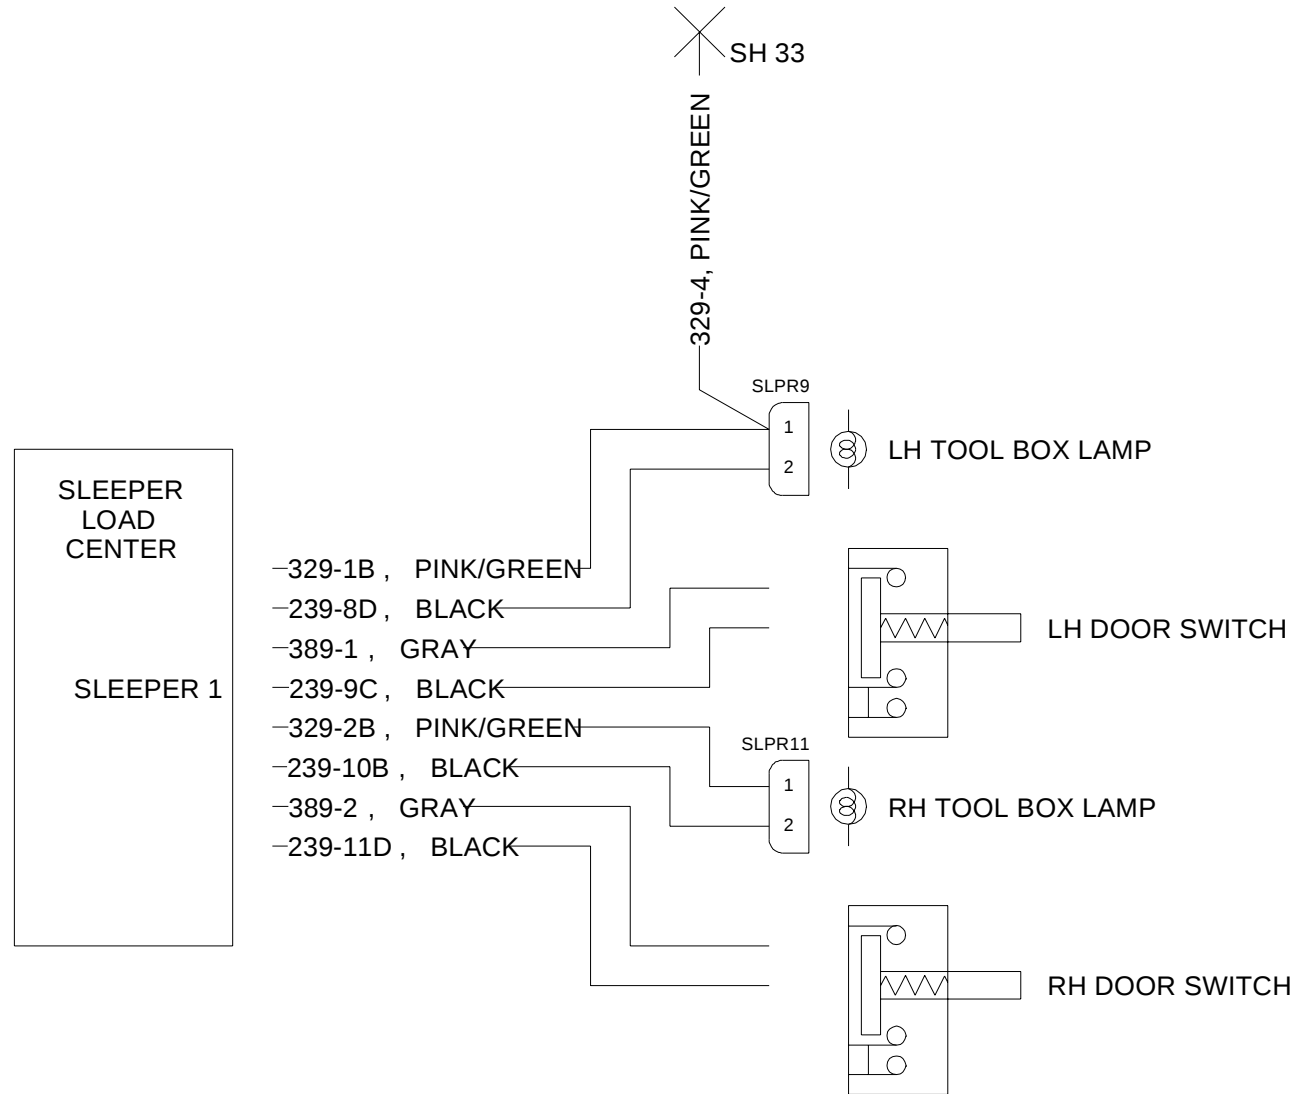



SLEEPER TOOL BOX LAMPS

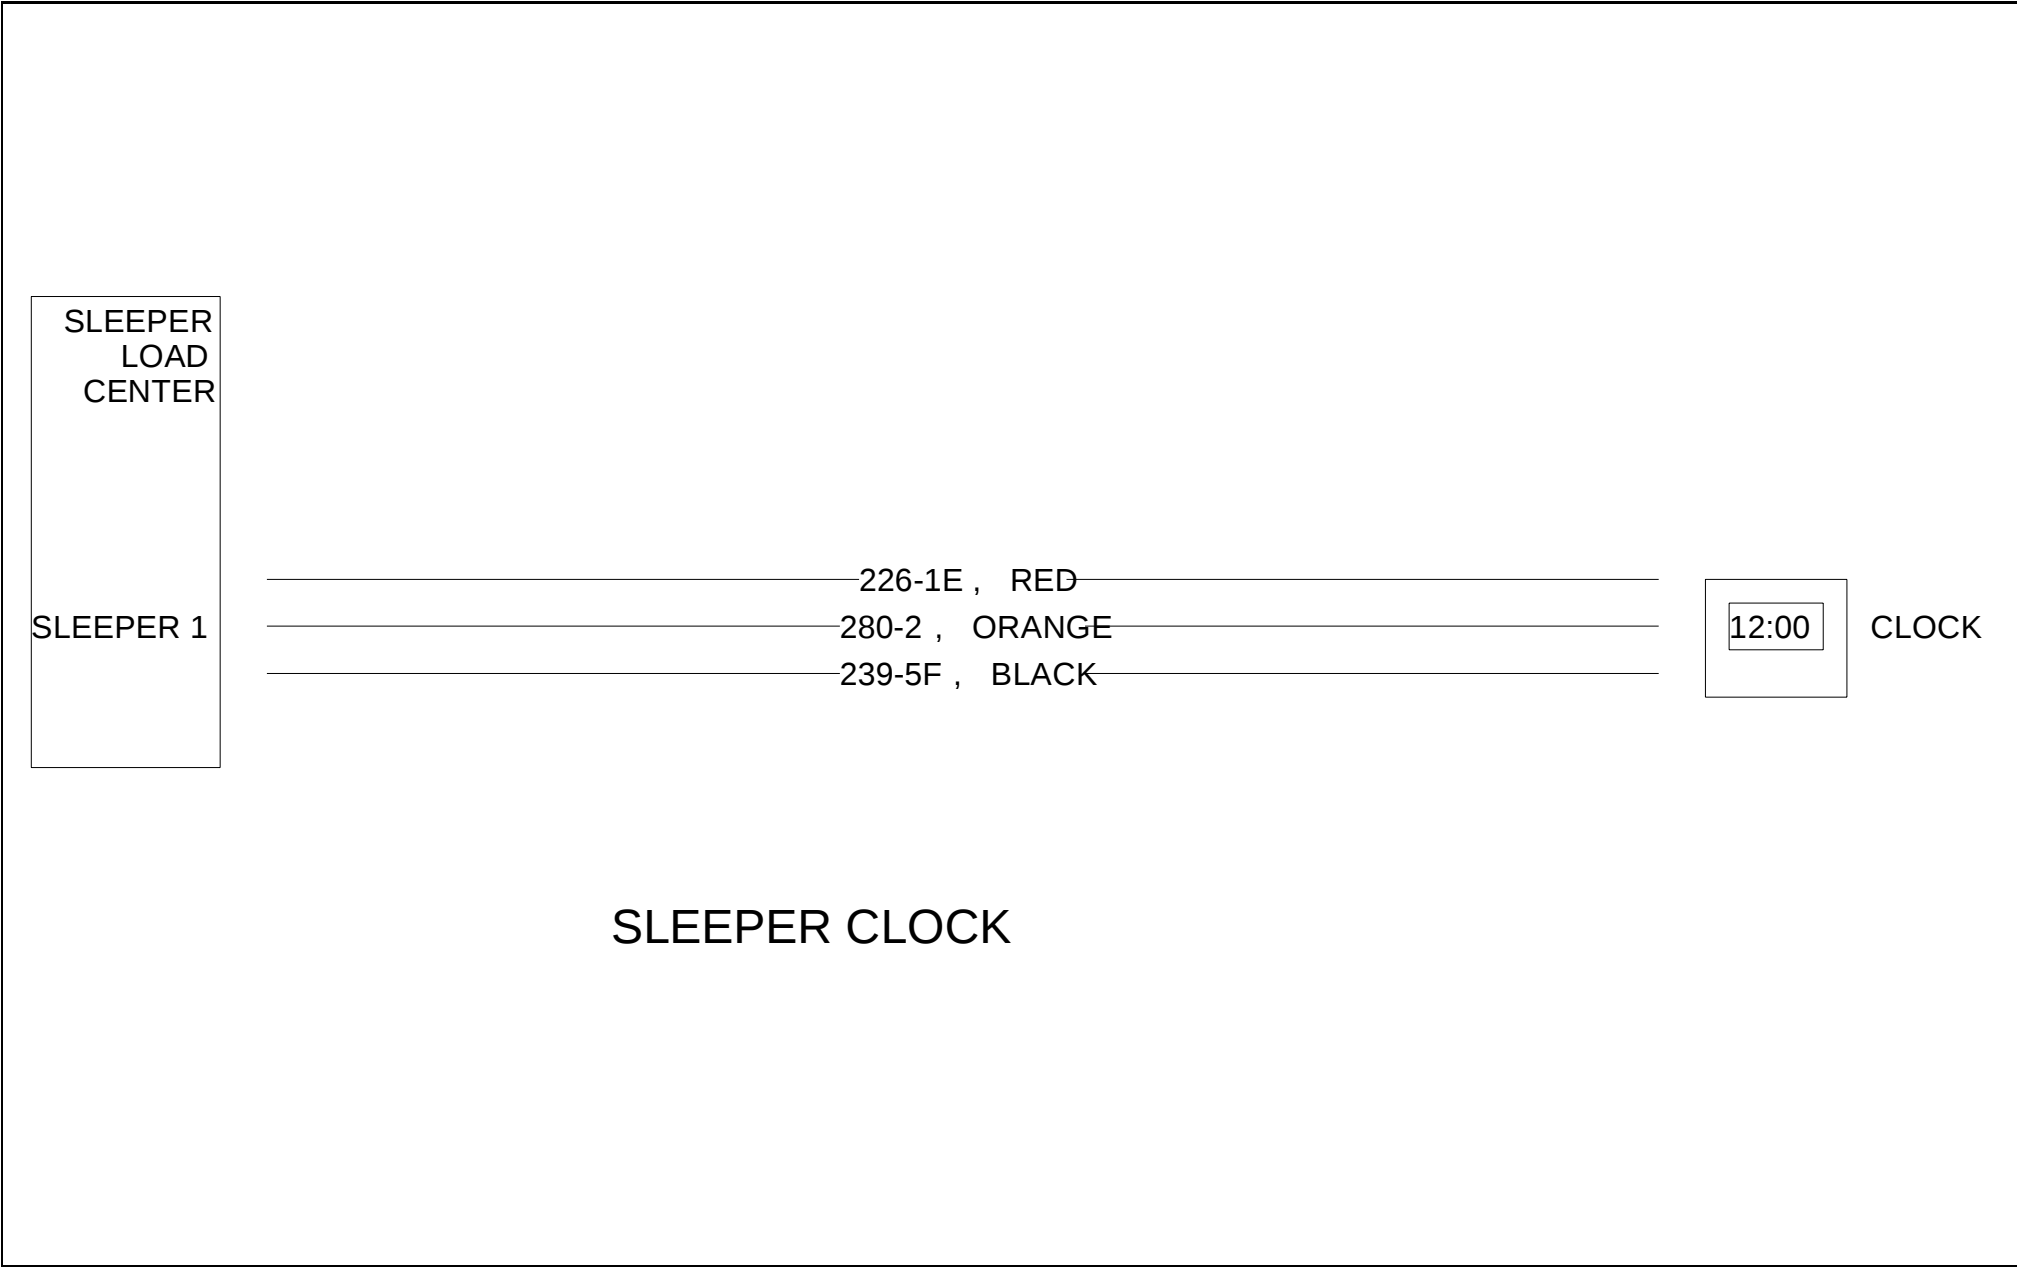

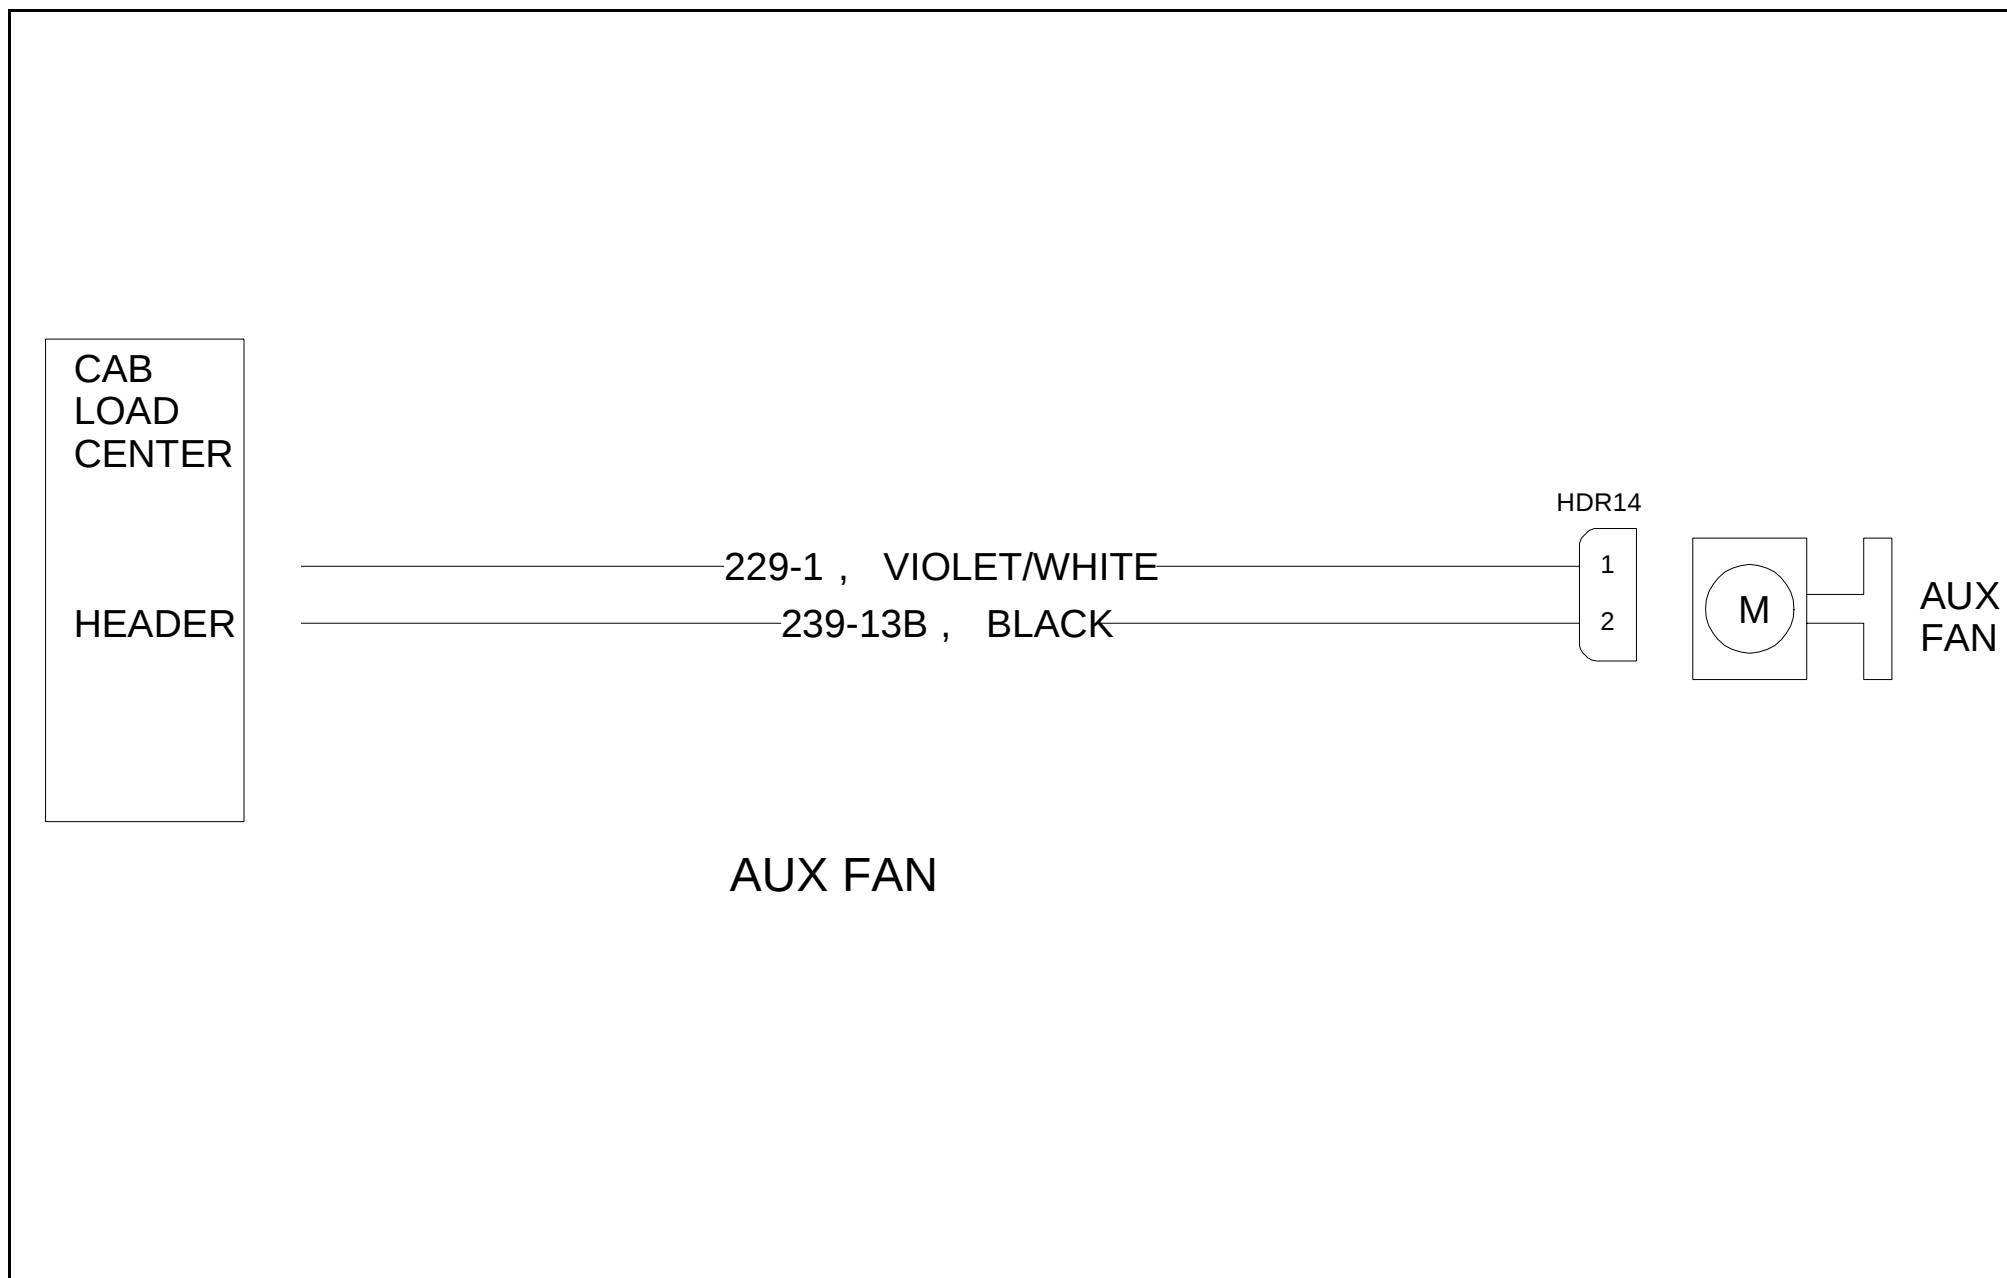


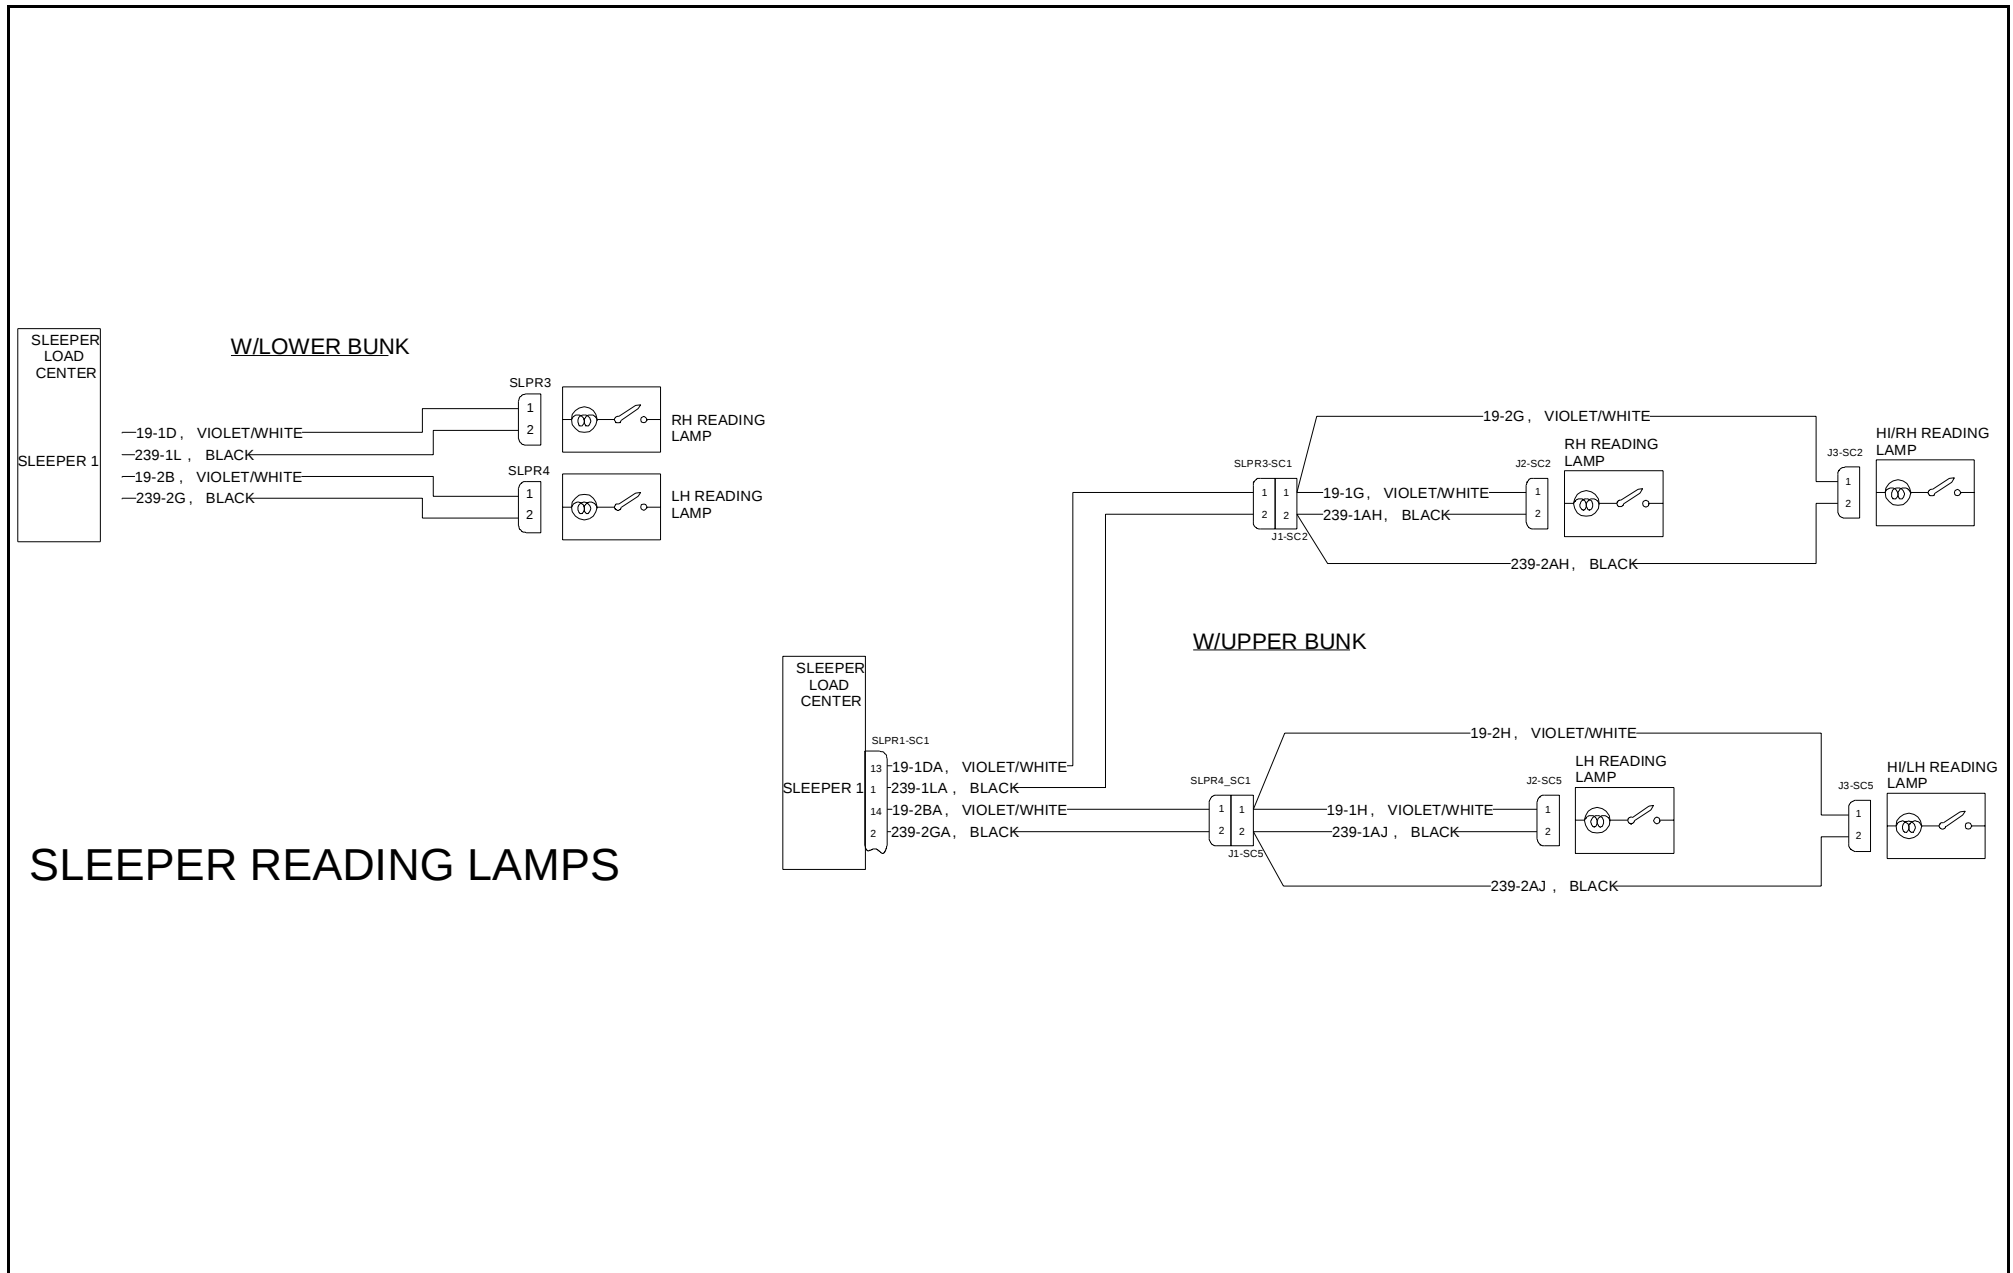


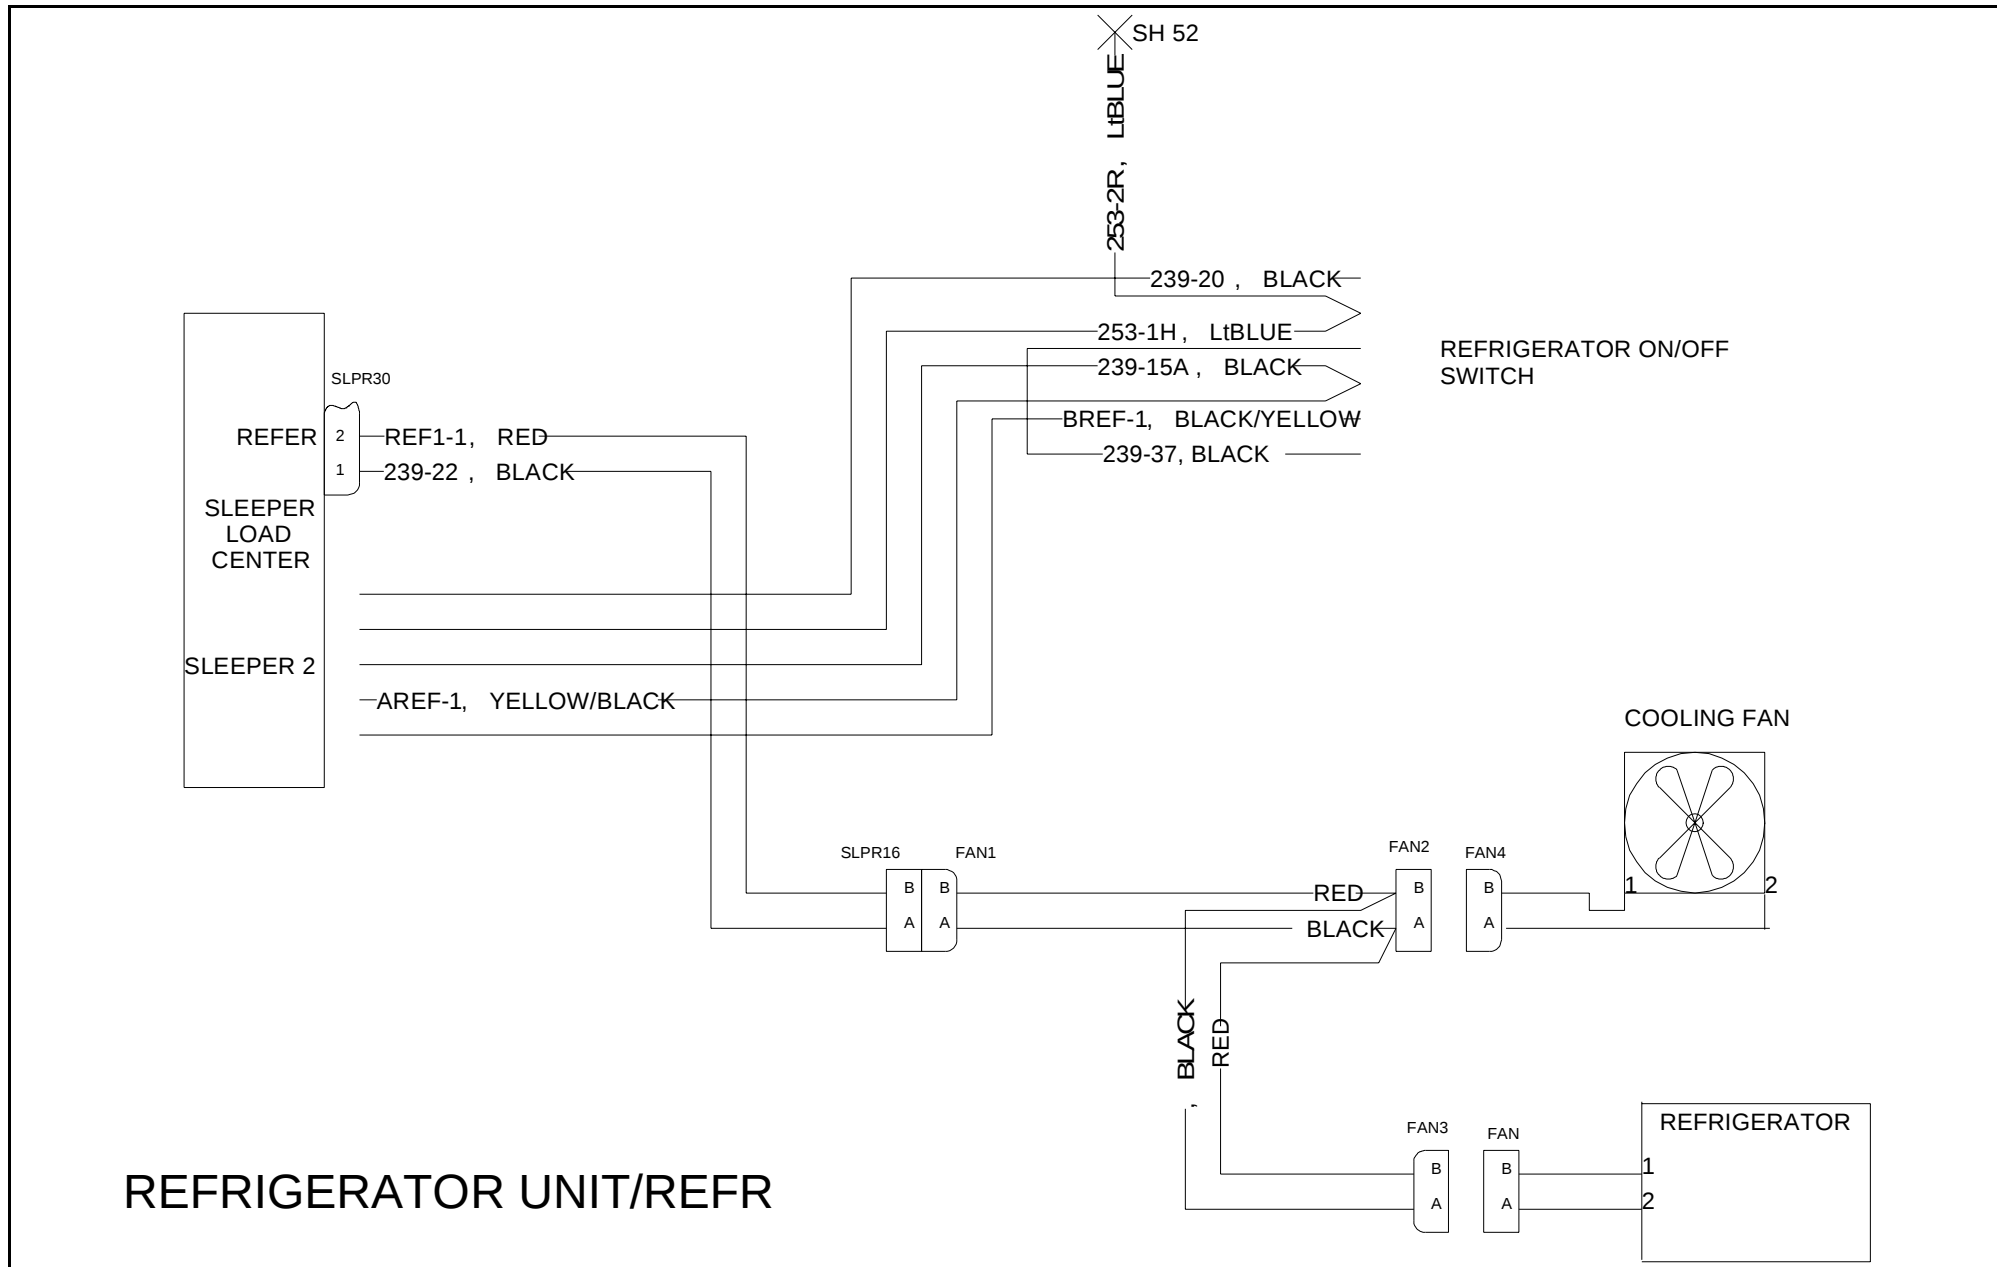


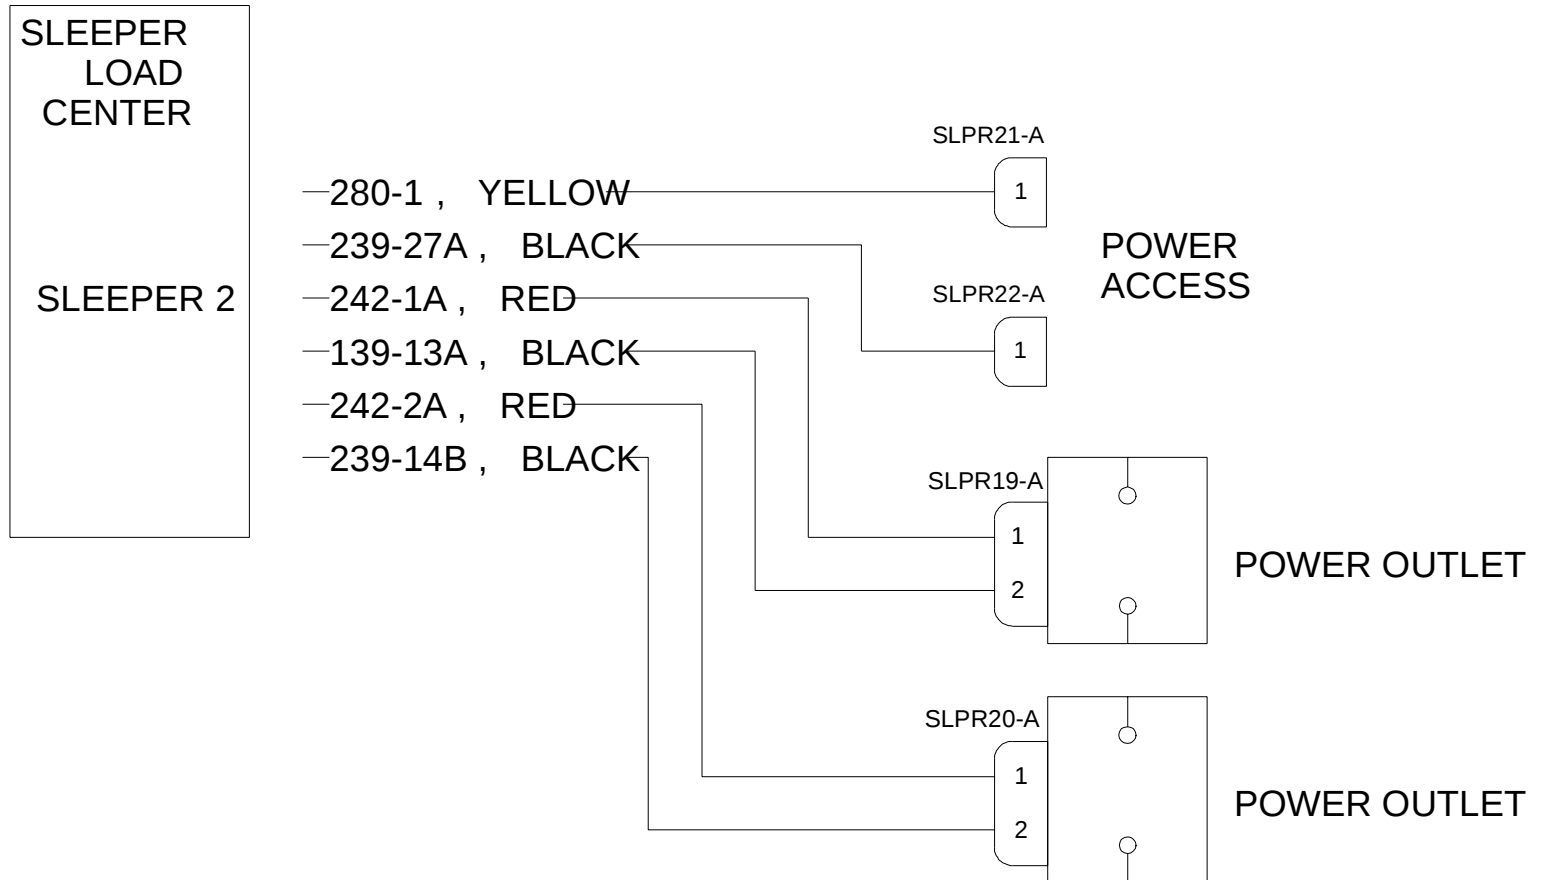



SLEEPER POWER ACCESS OUTLETS

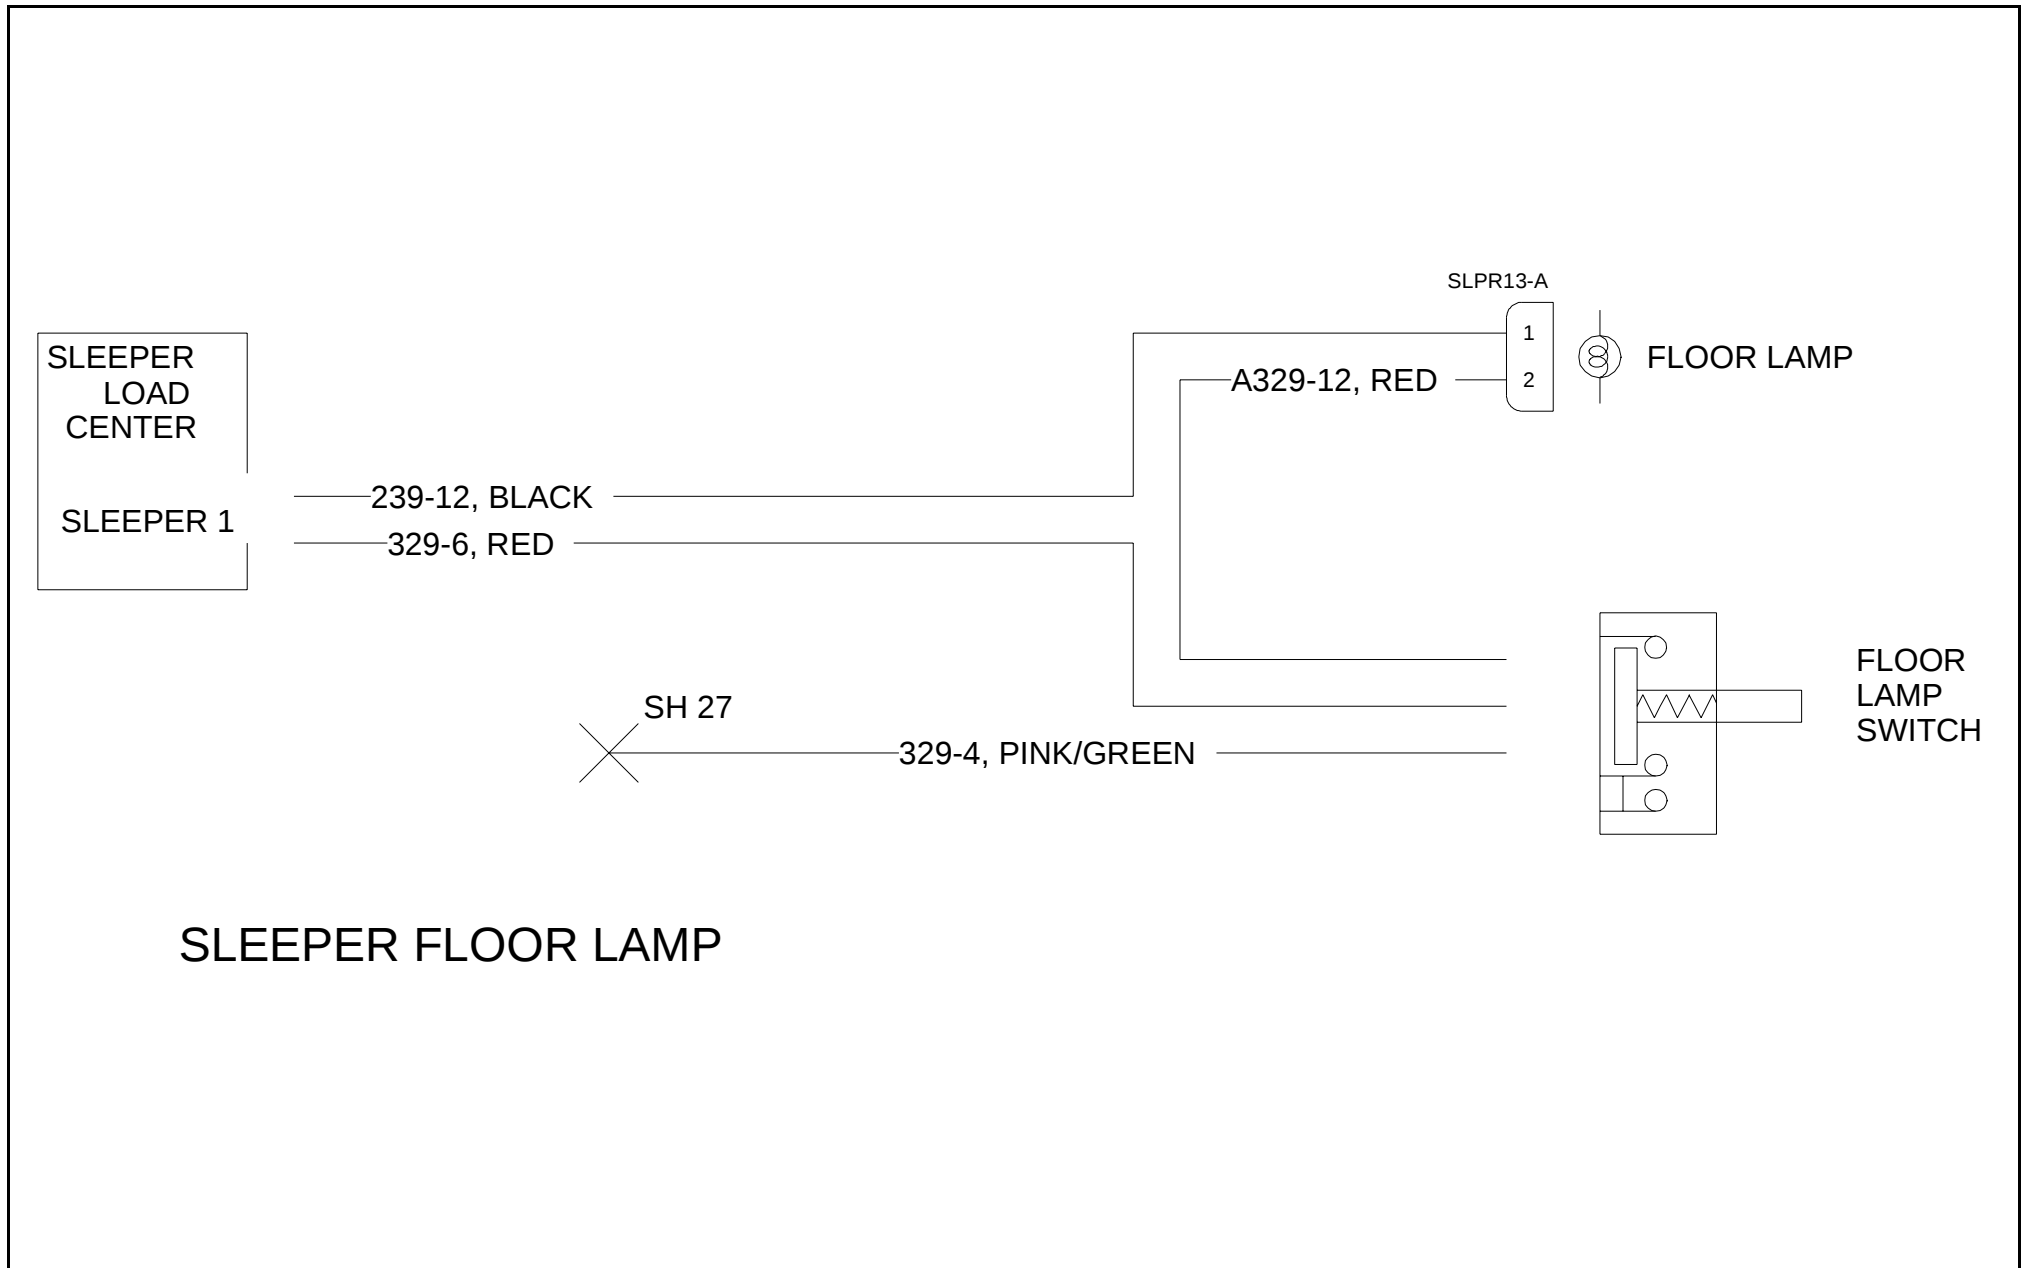

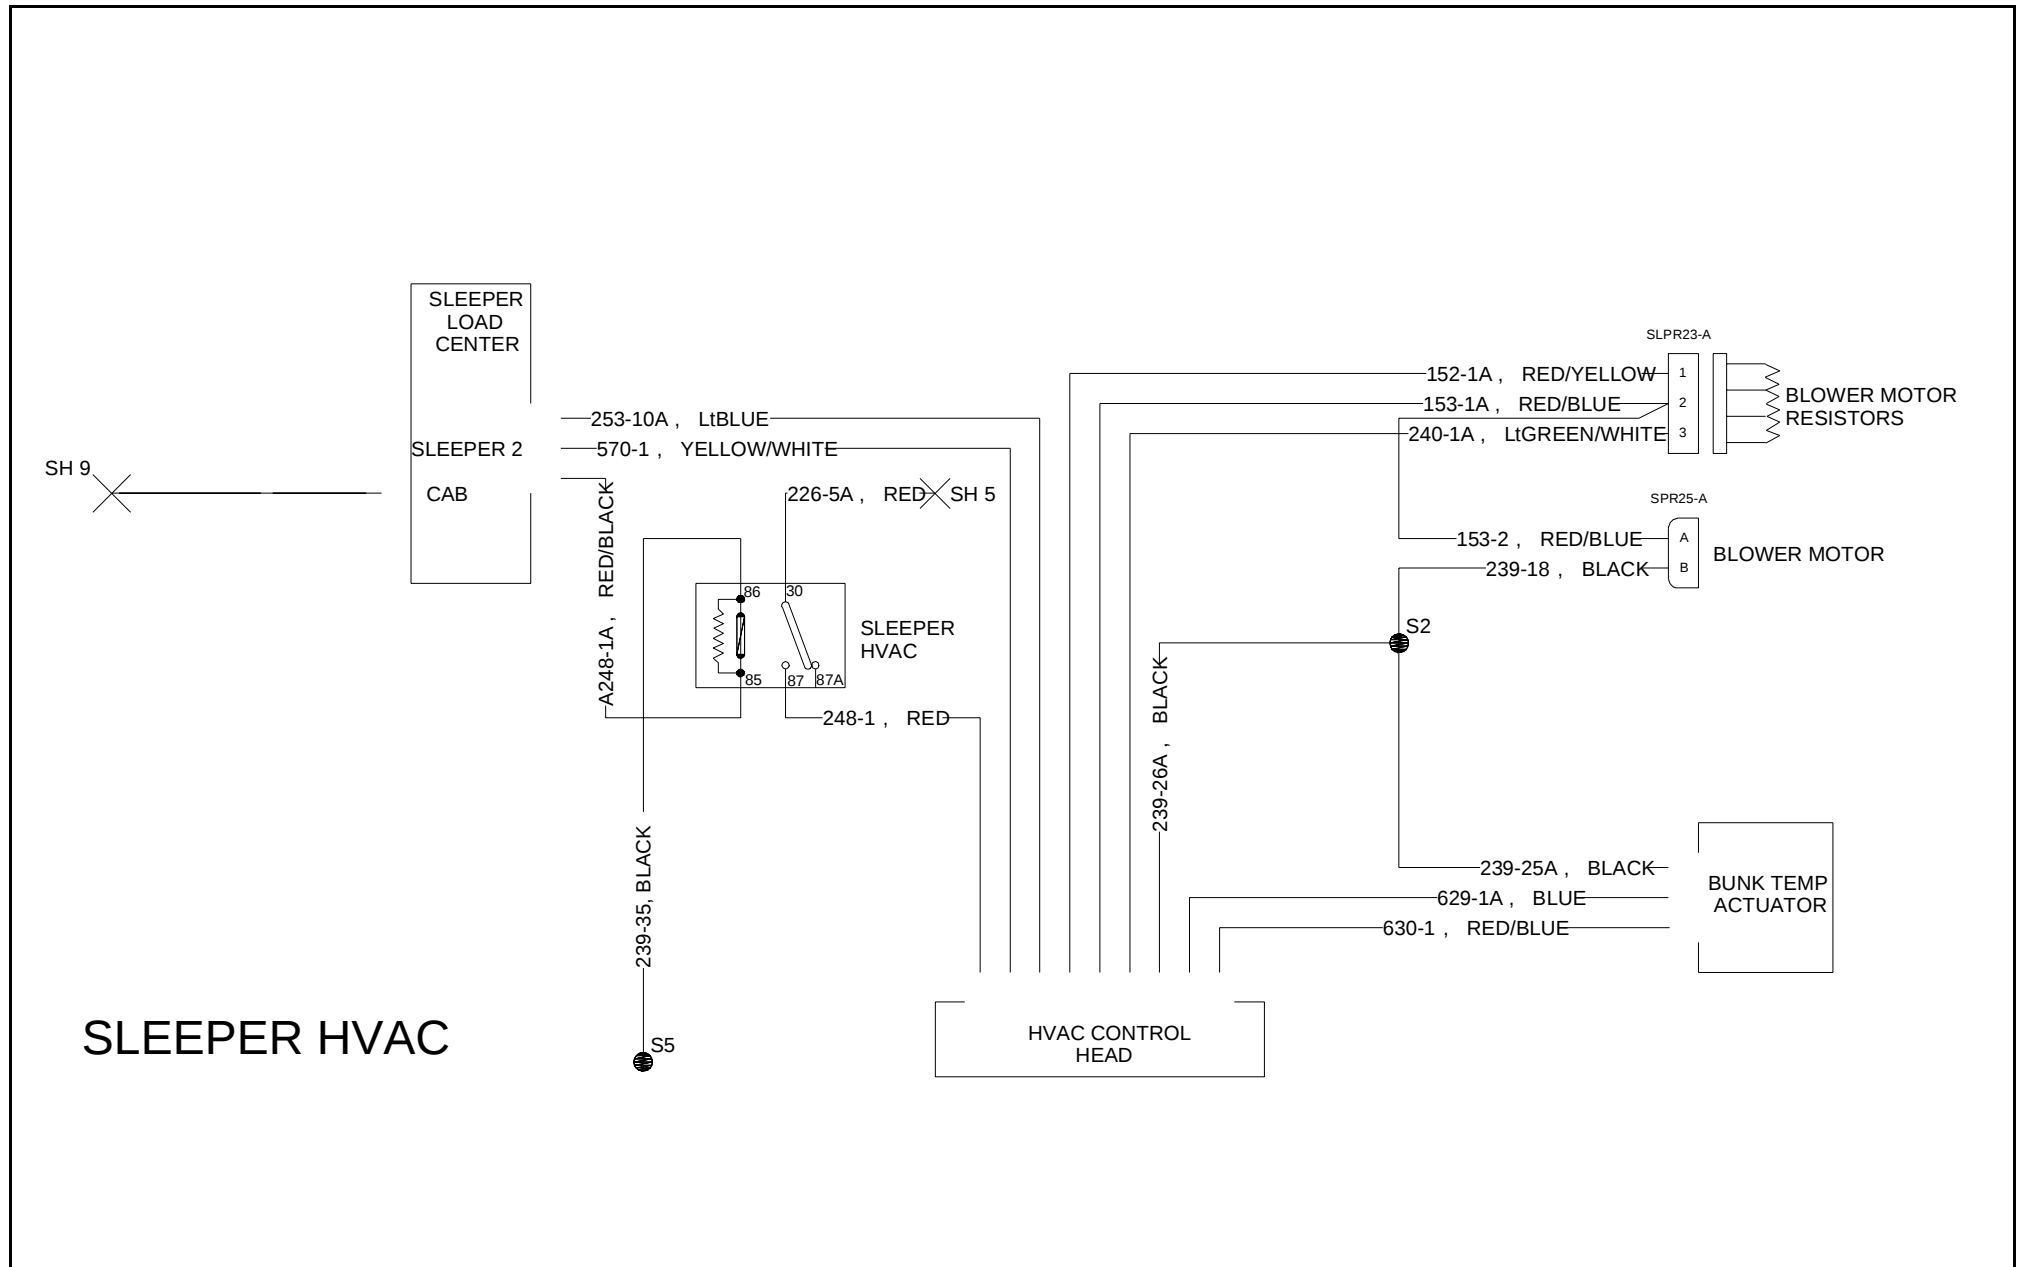


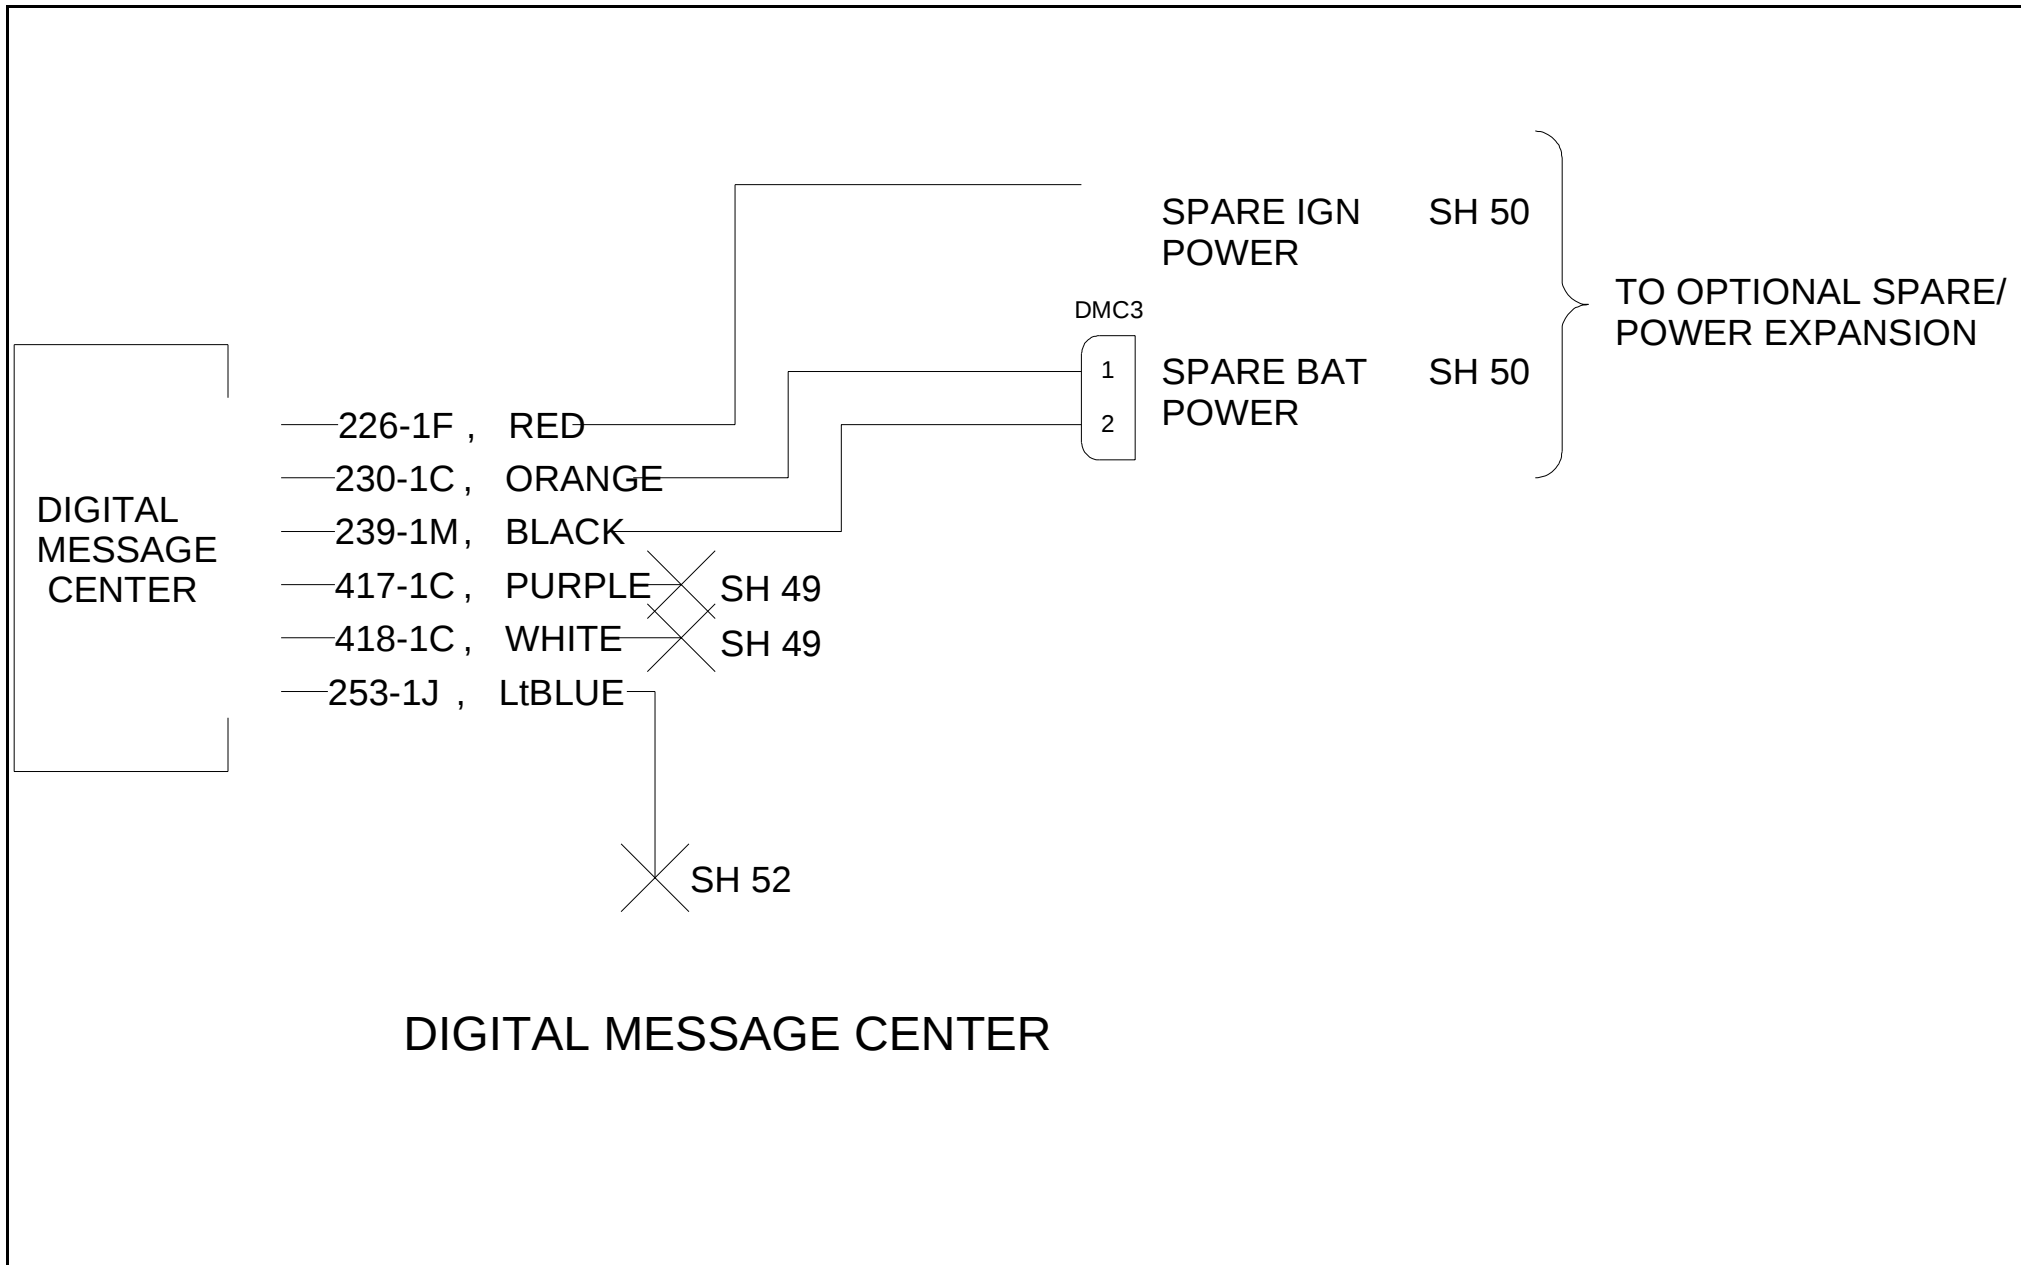


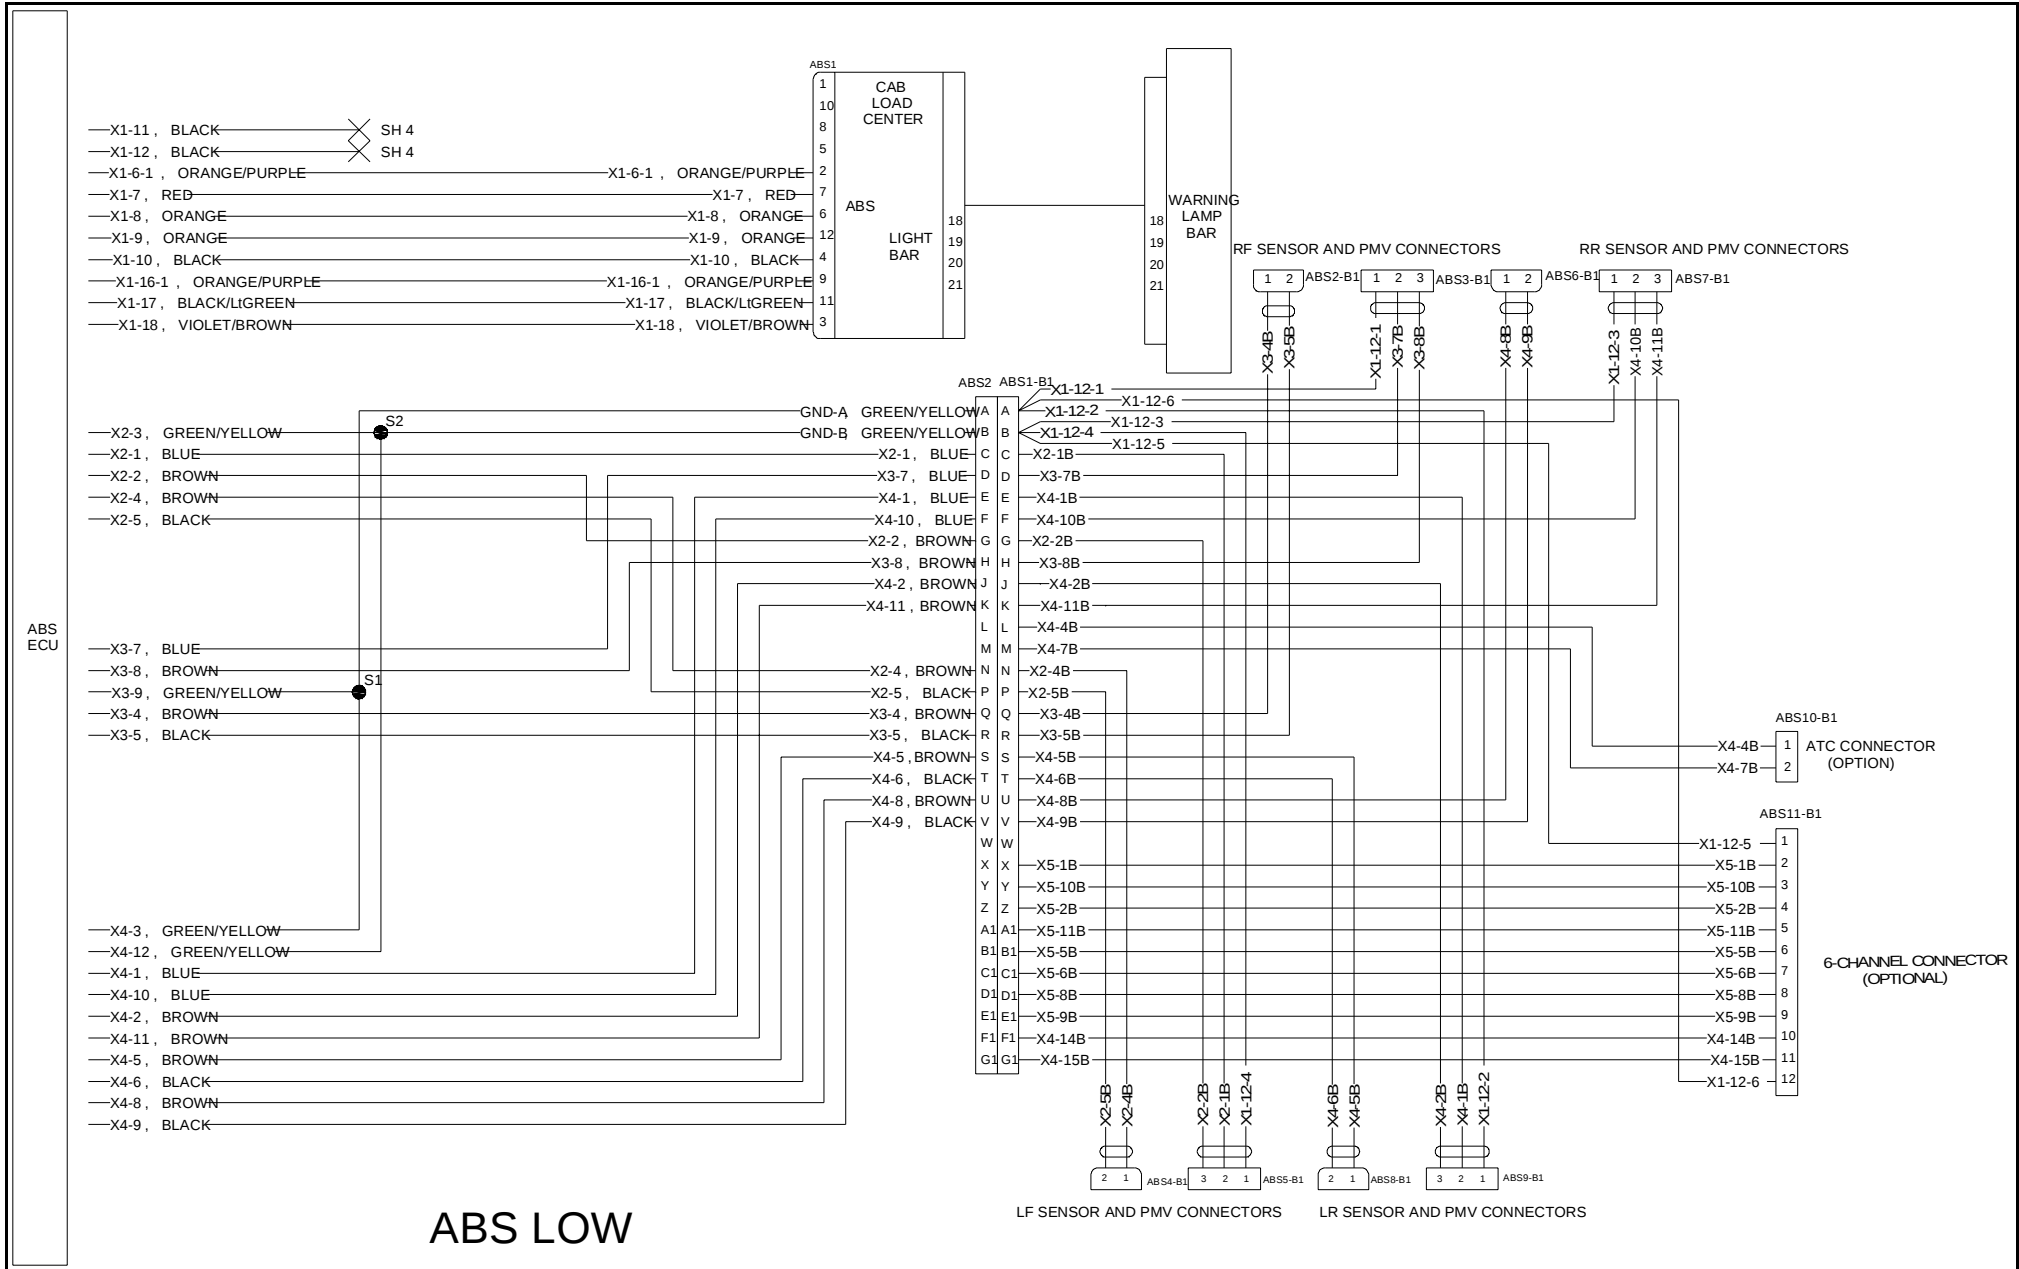

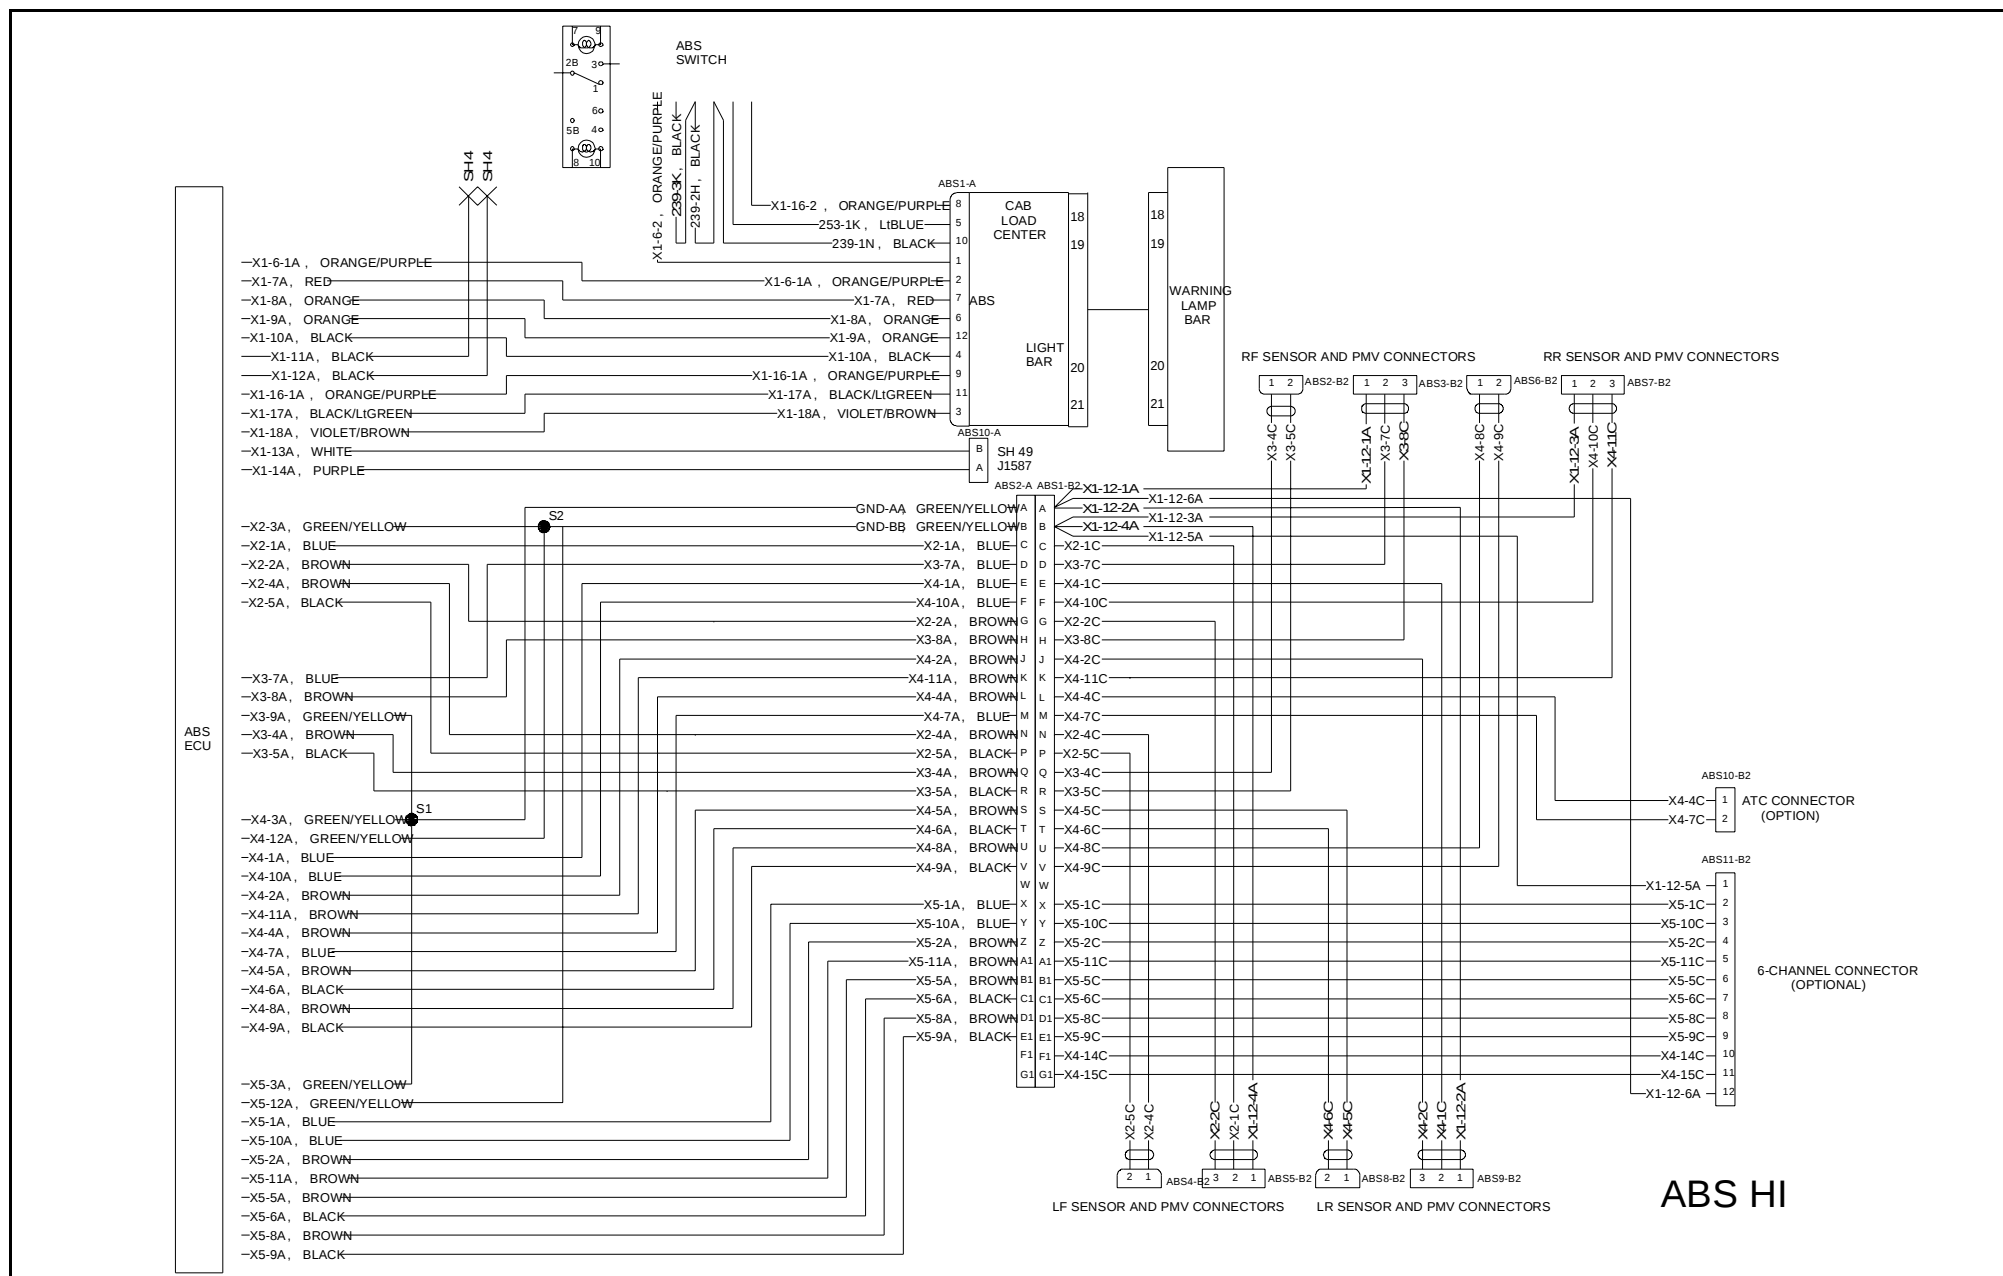

ABS HI

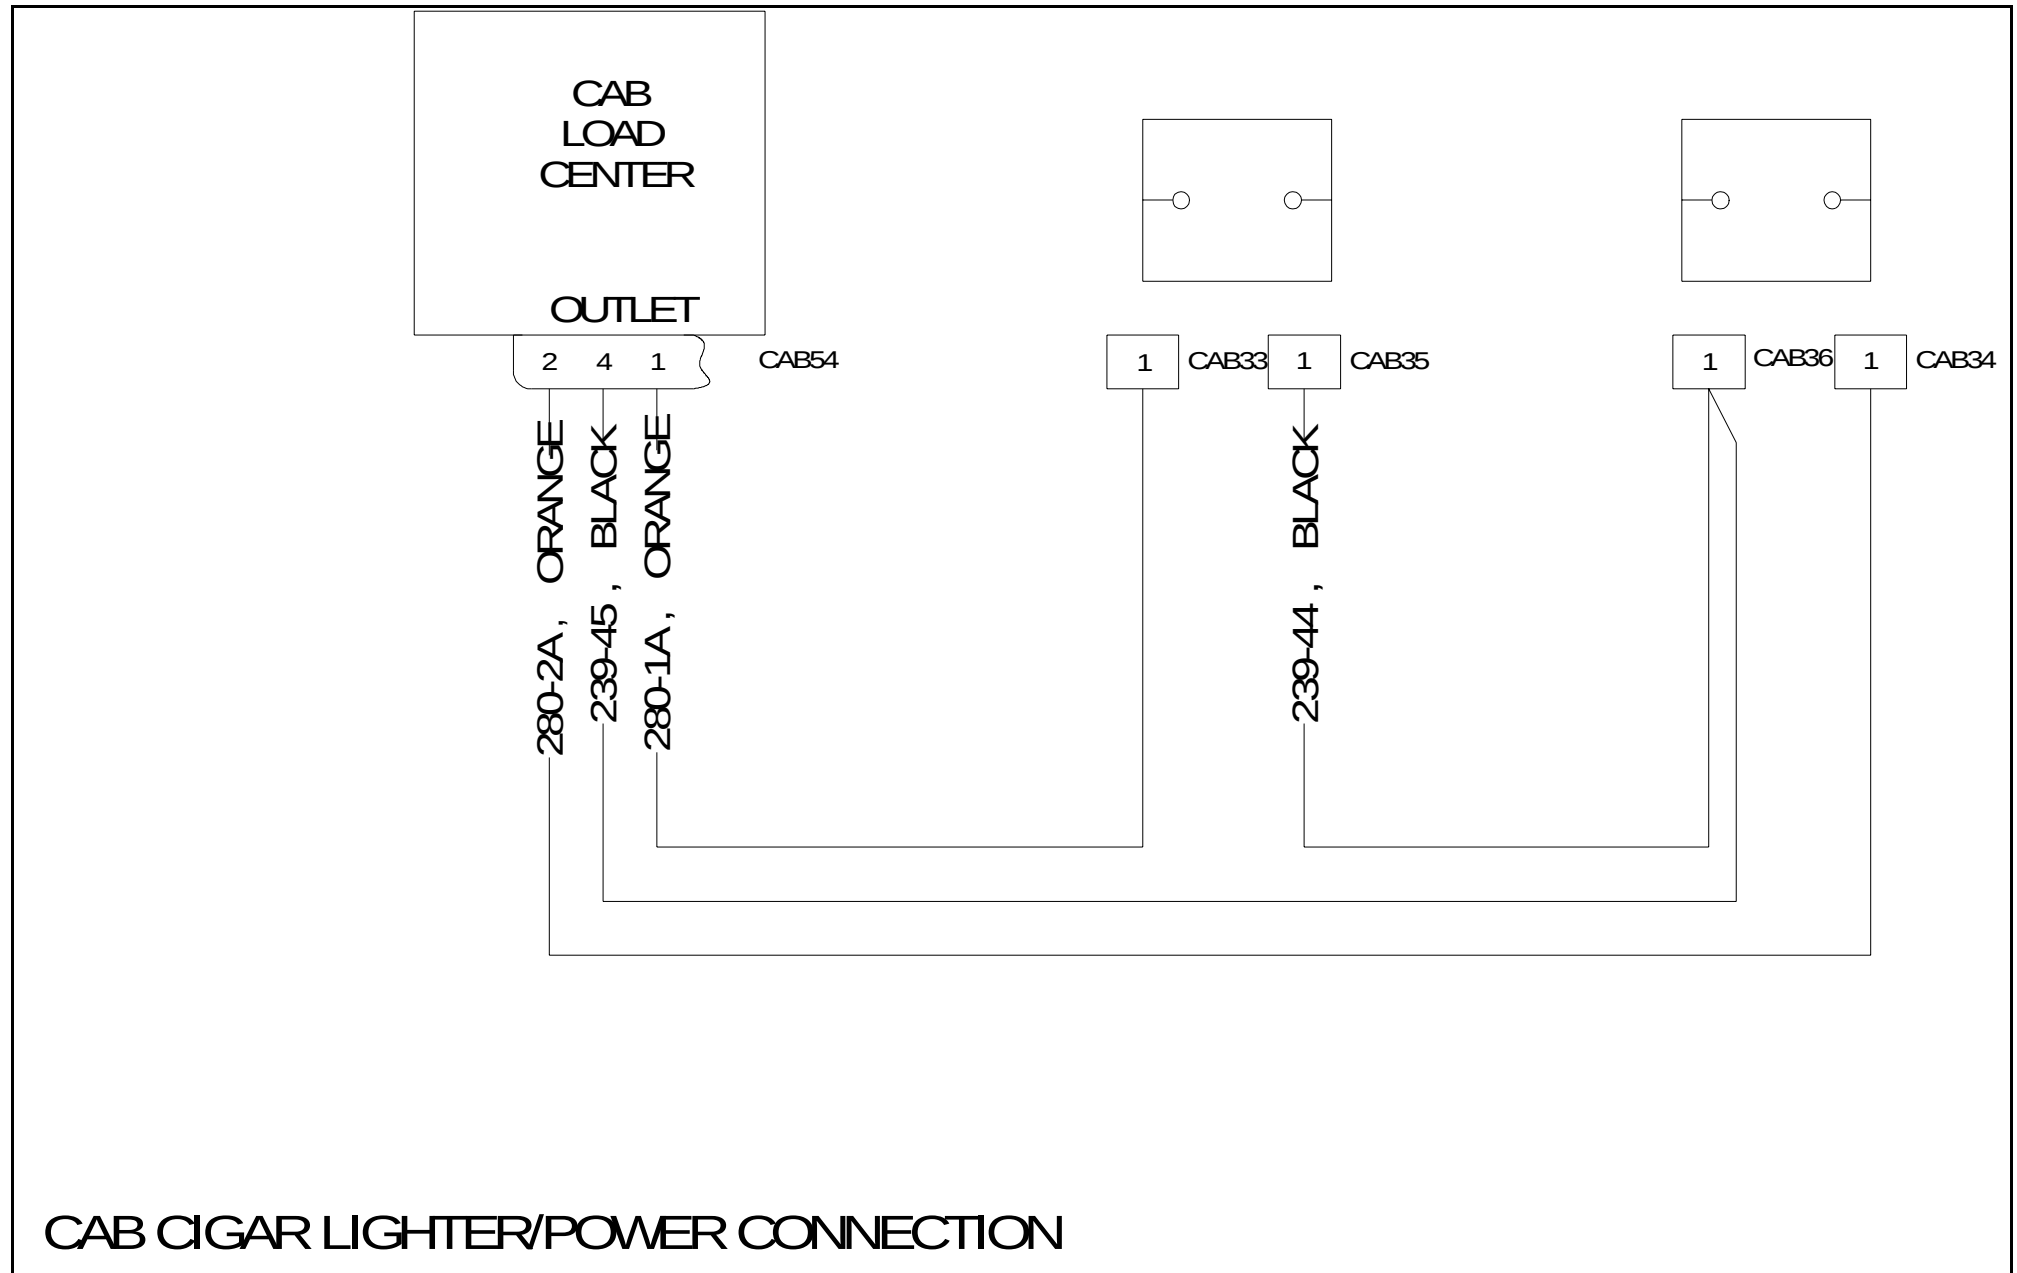

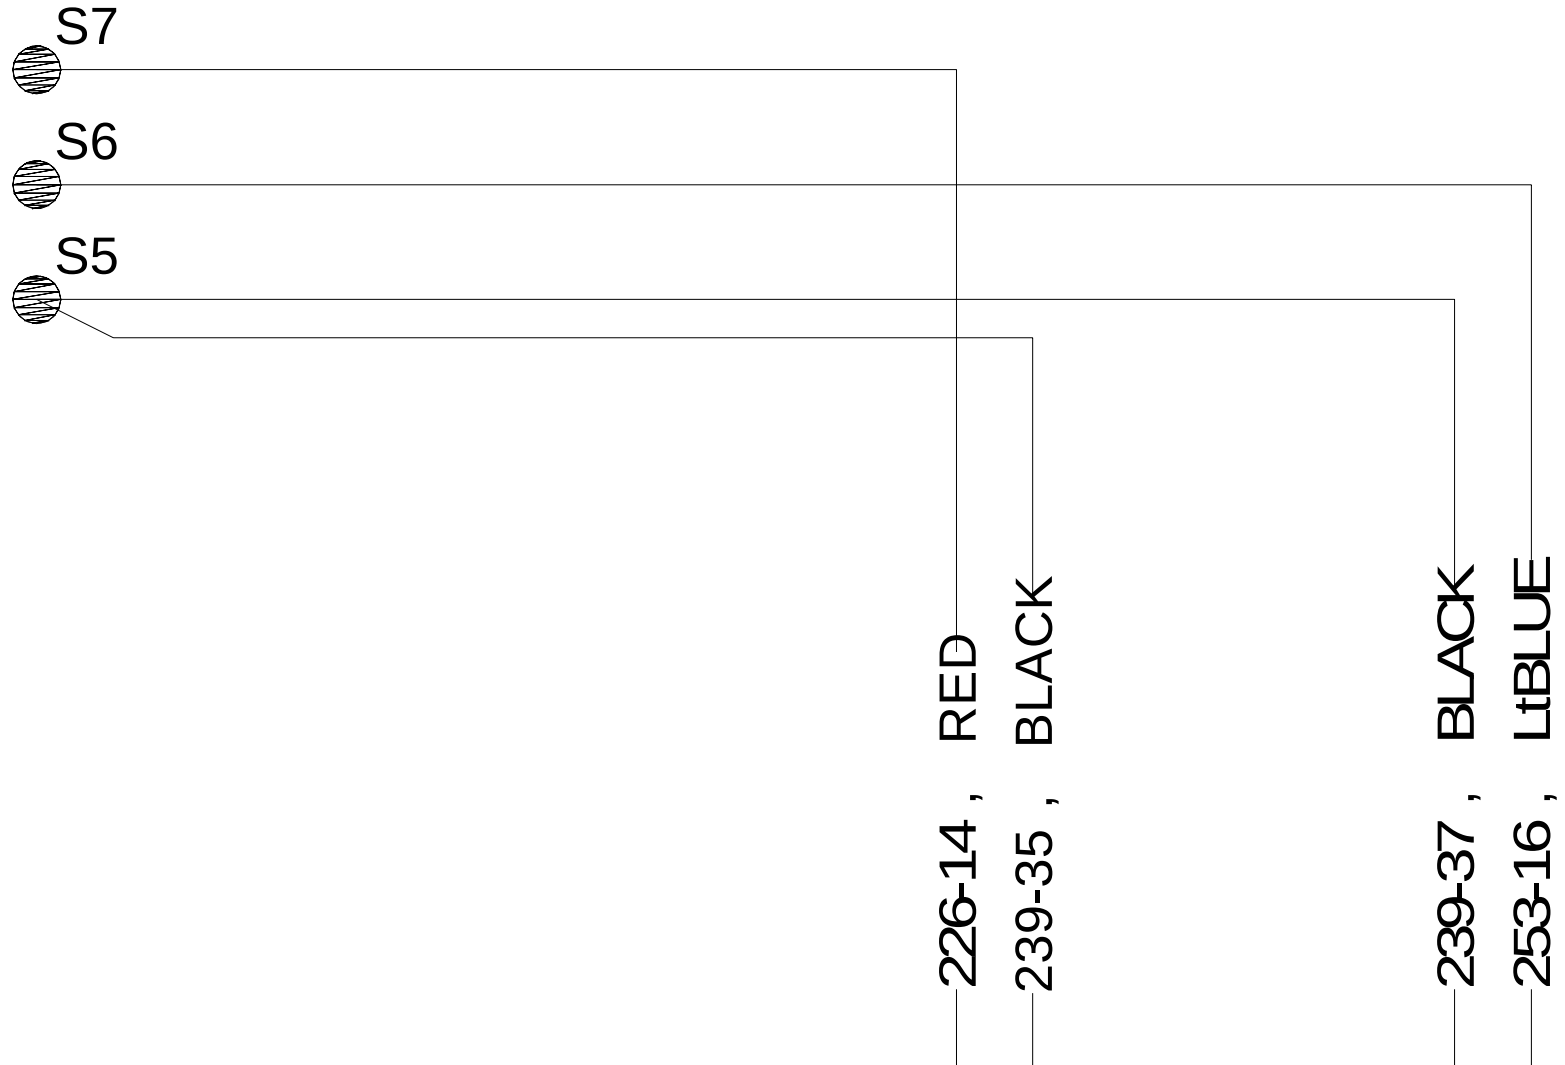




SPARE

SPARE "A"


SPARE "B"



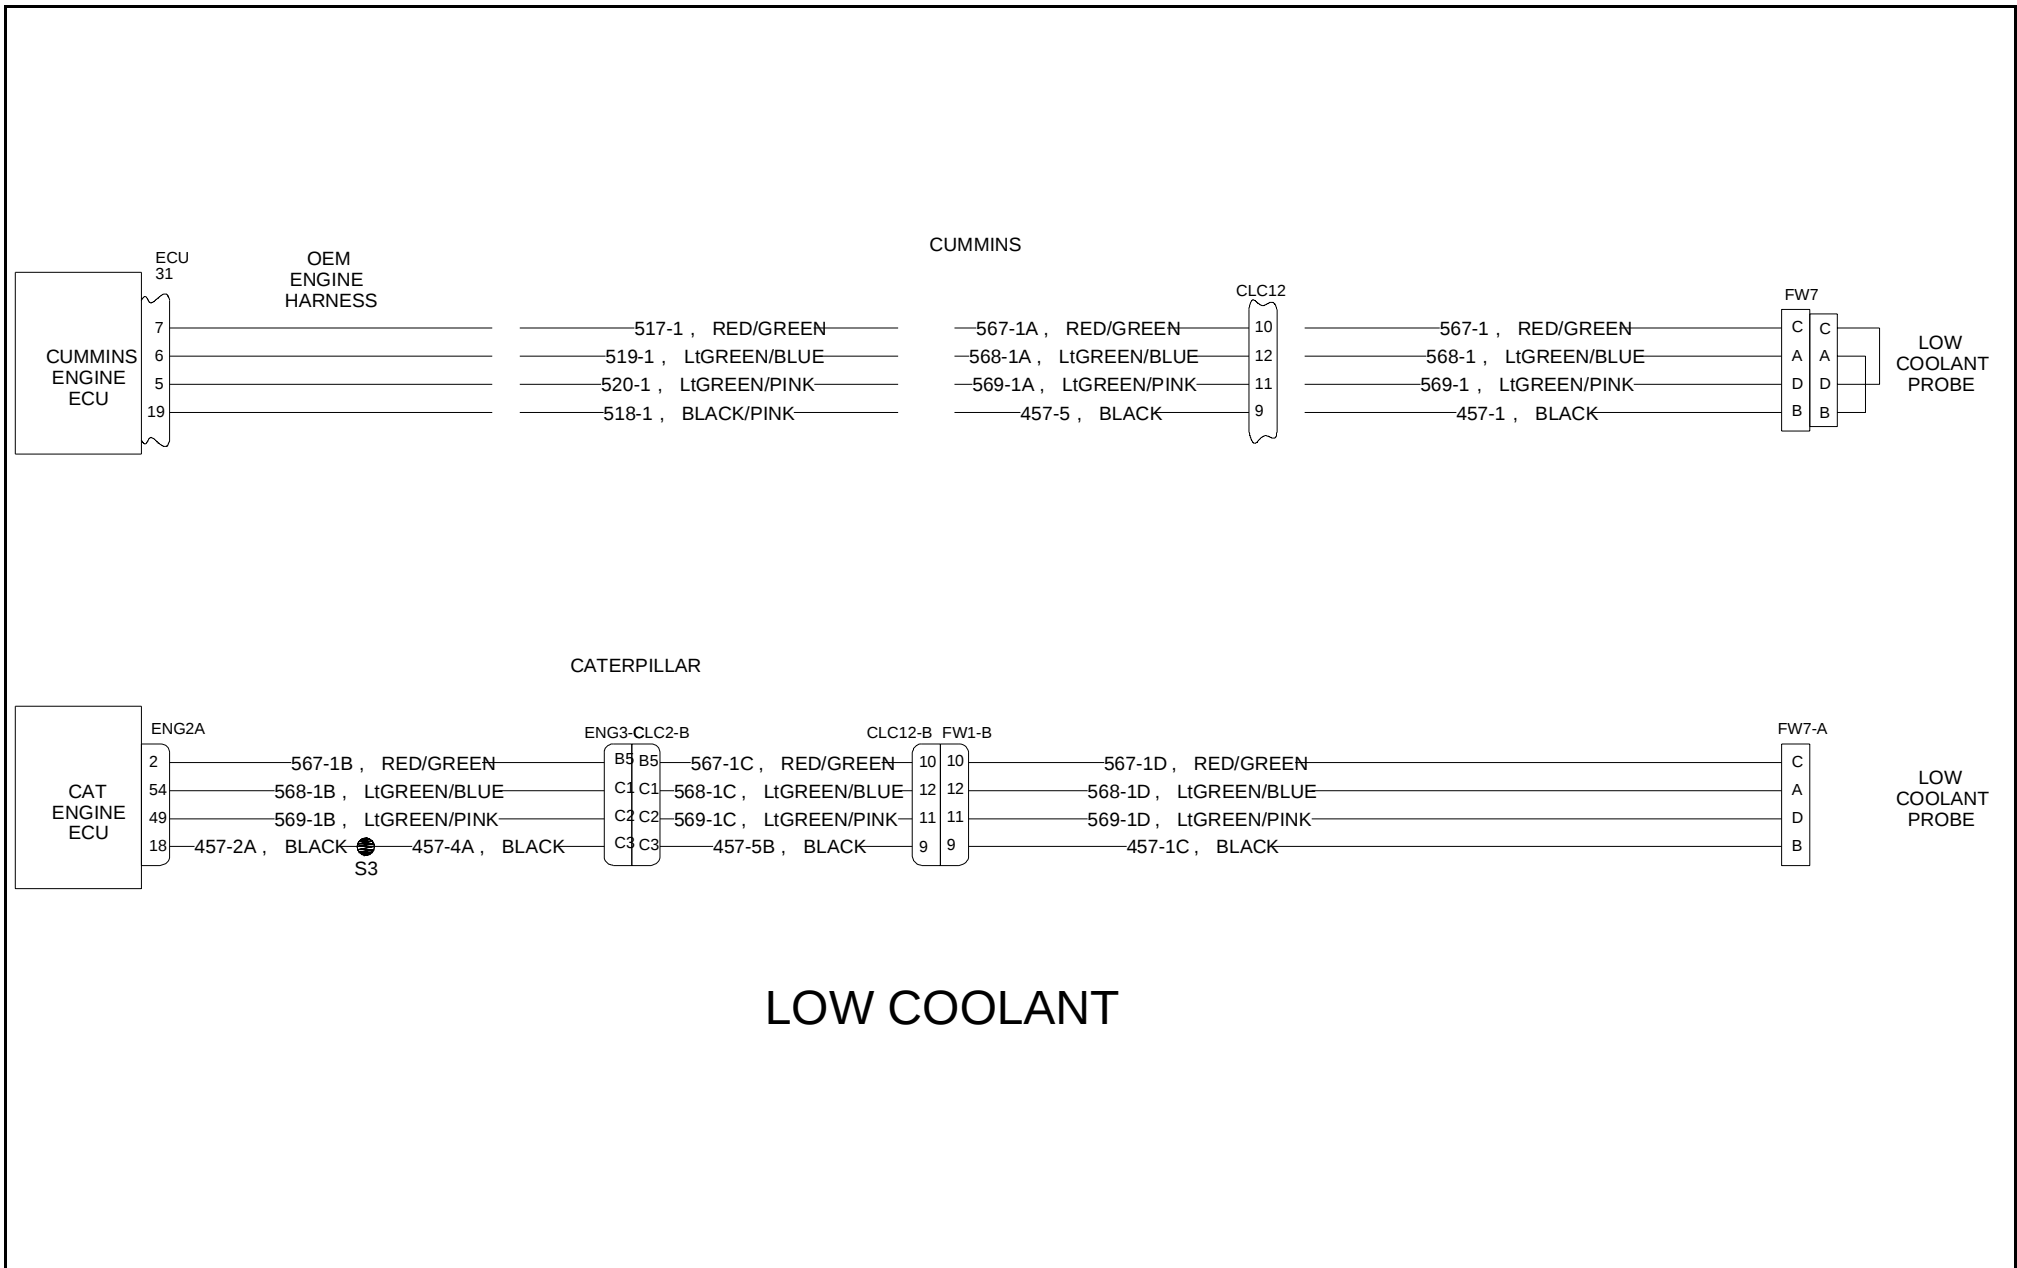


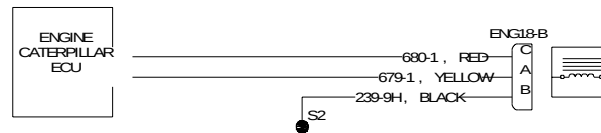



EATON TOP 2 TRANSMISSION

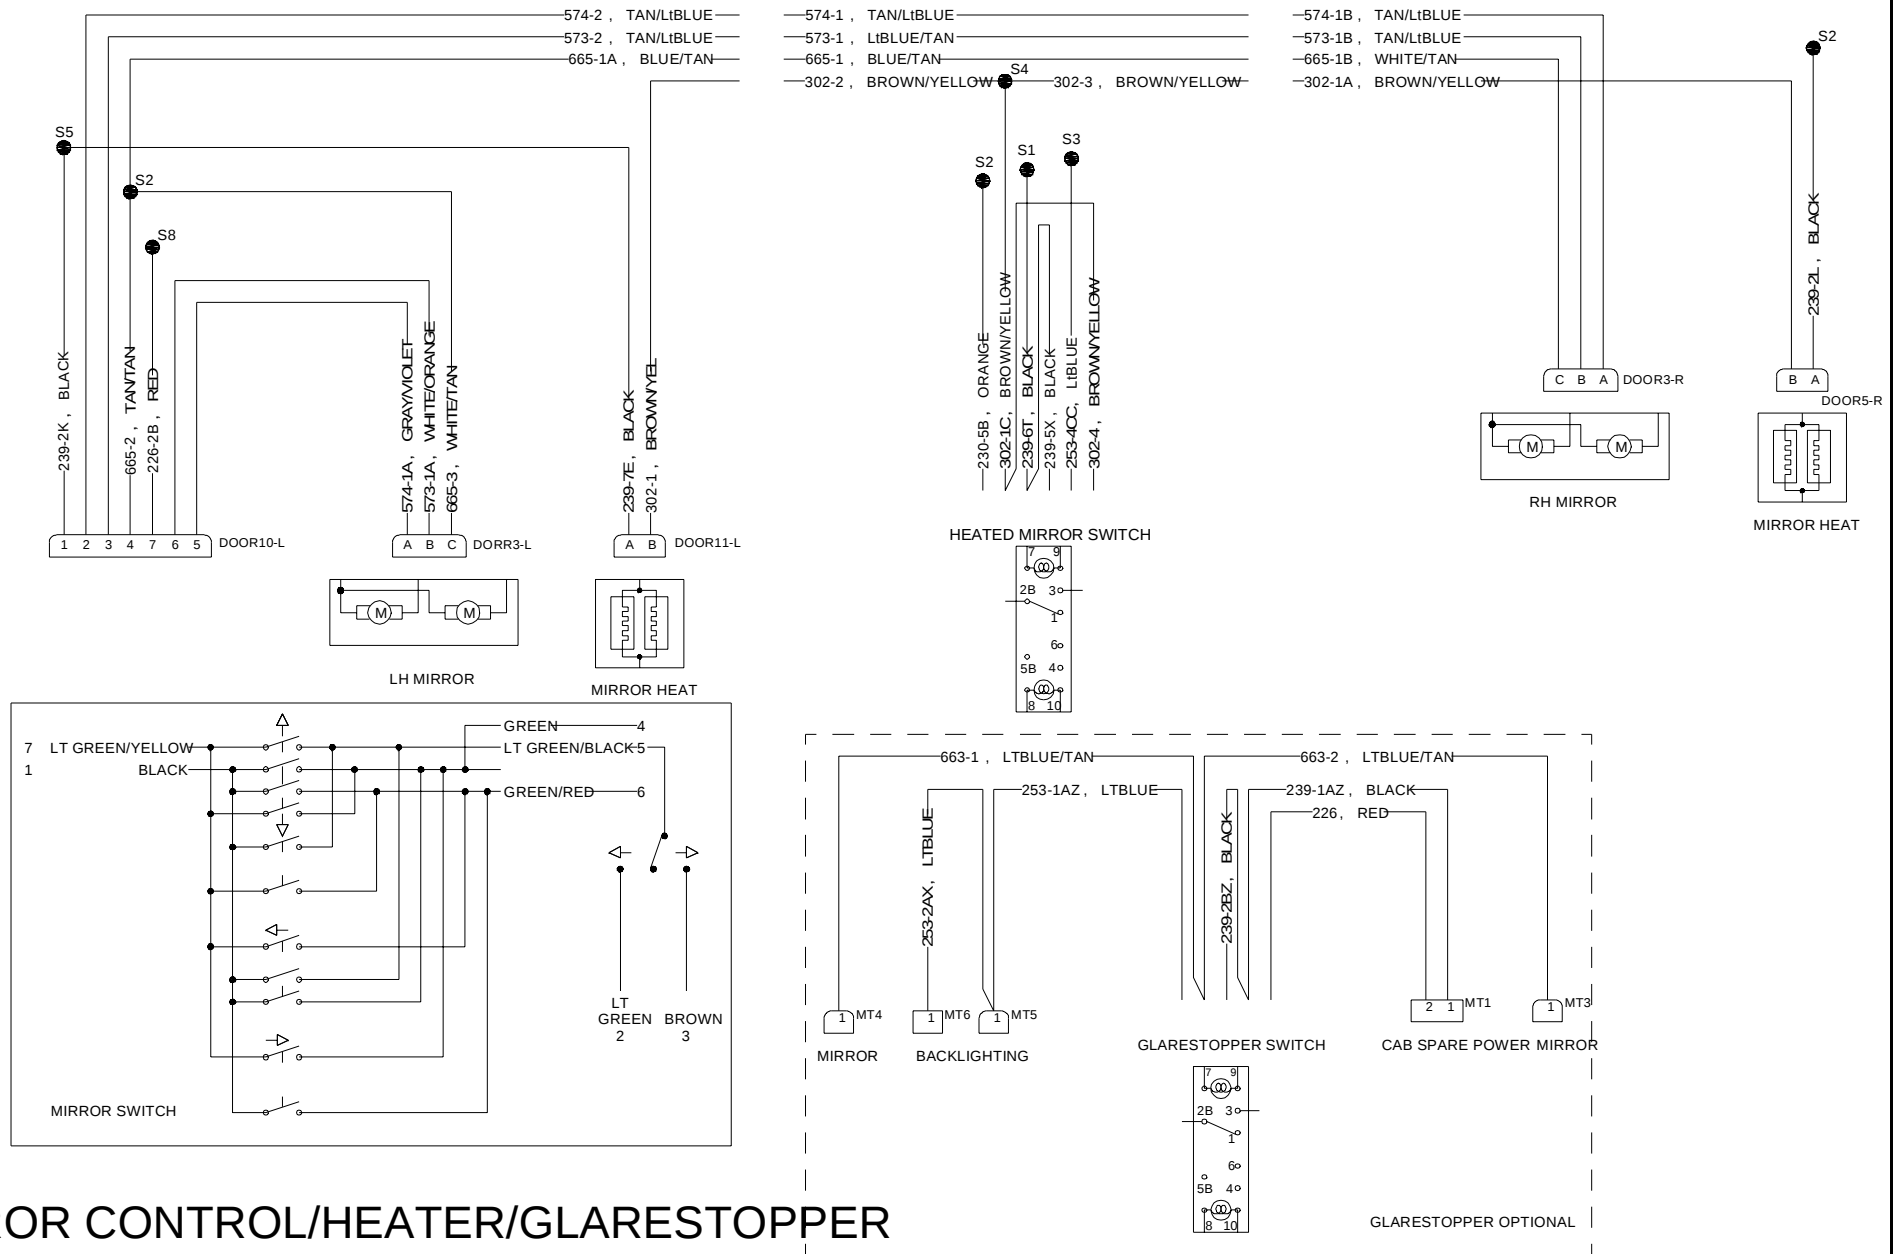


MIRROR CONTROL/HEATER/GLARESTOPPER

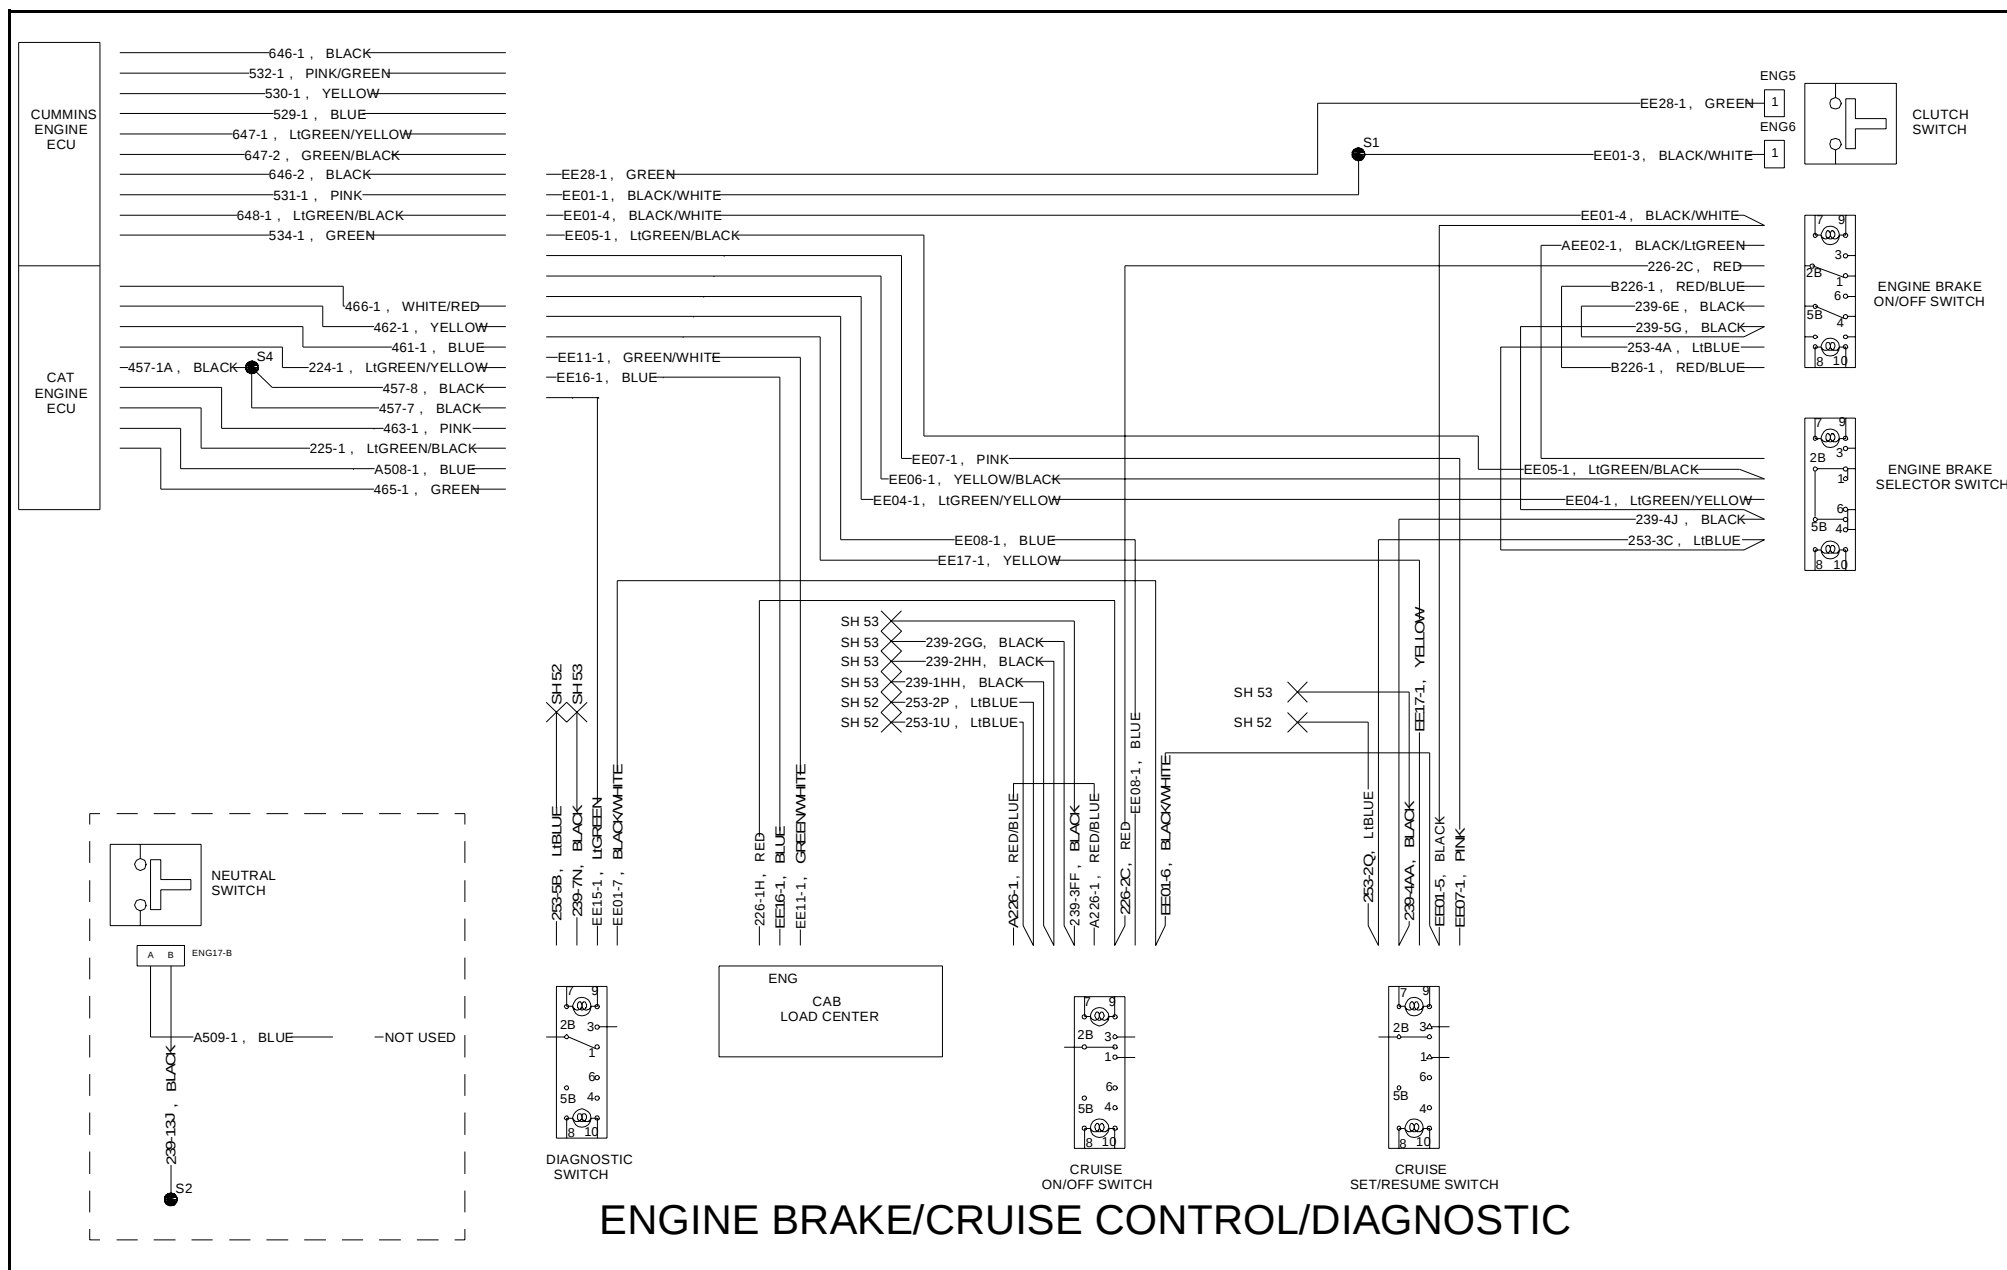

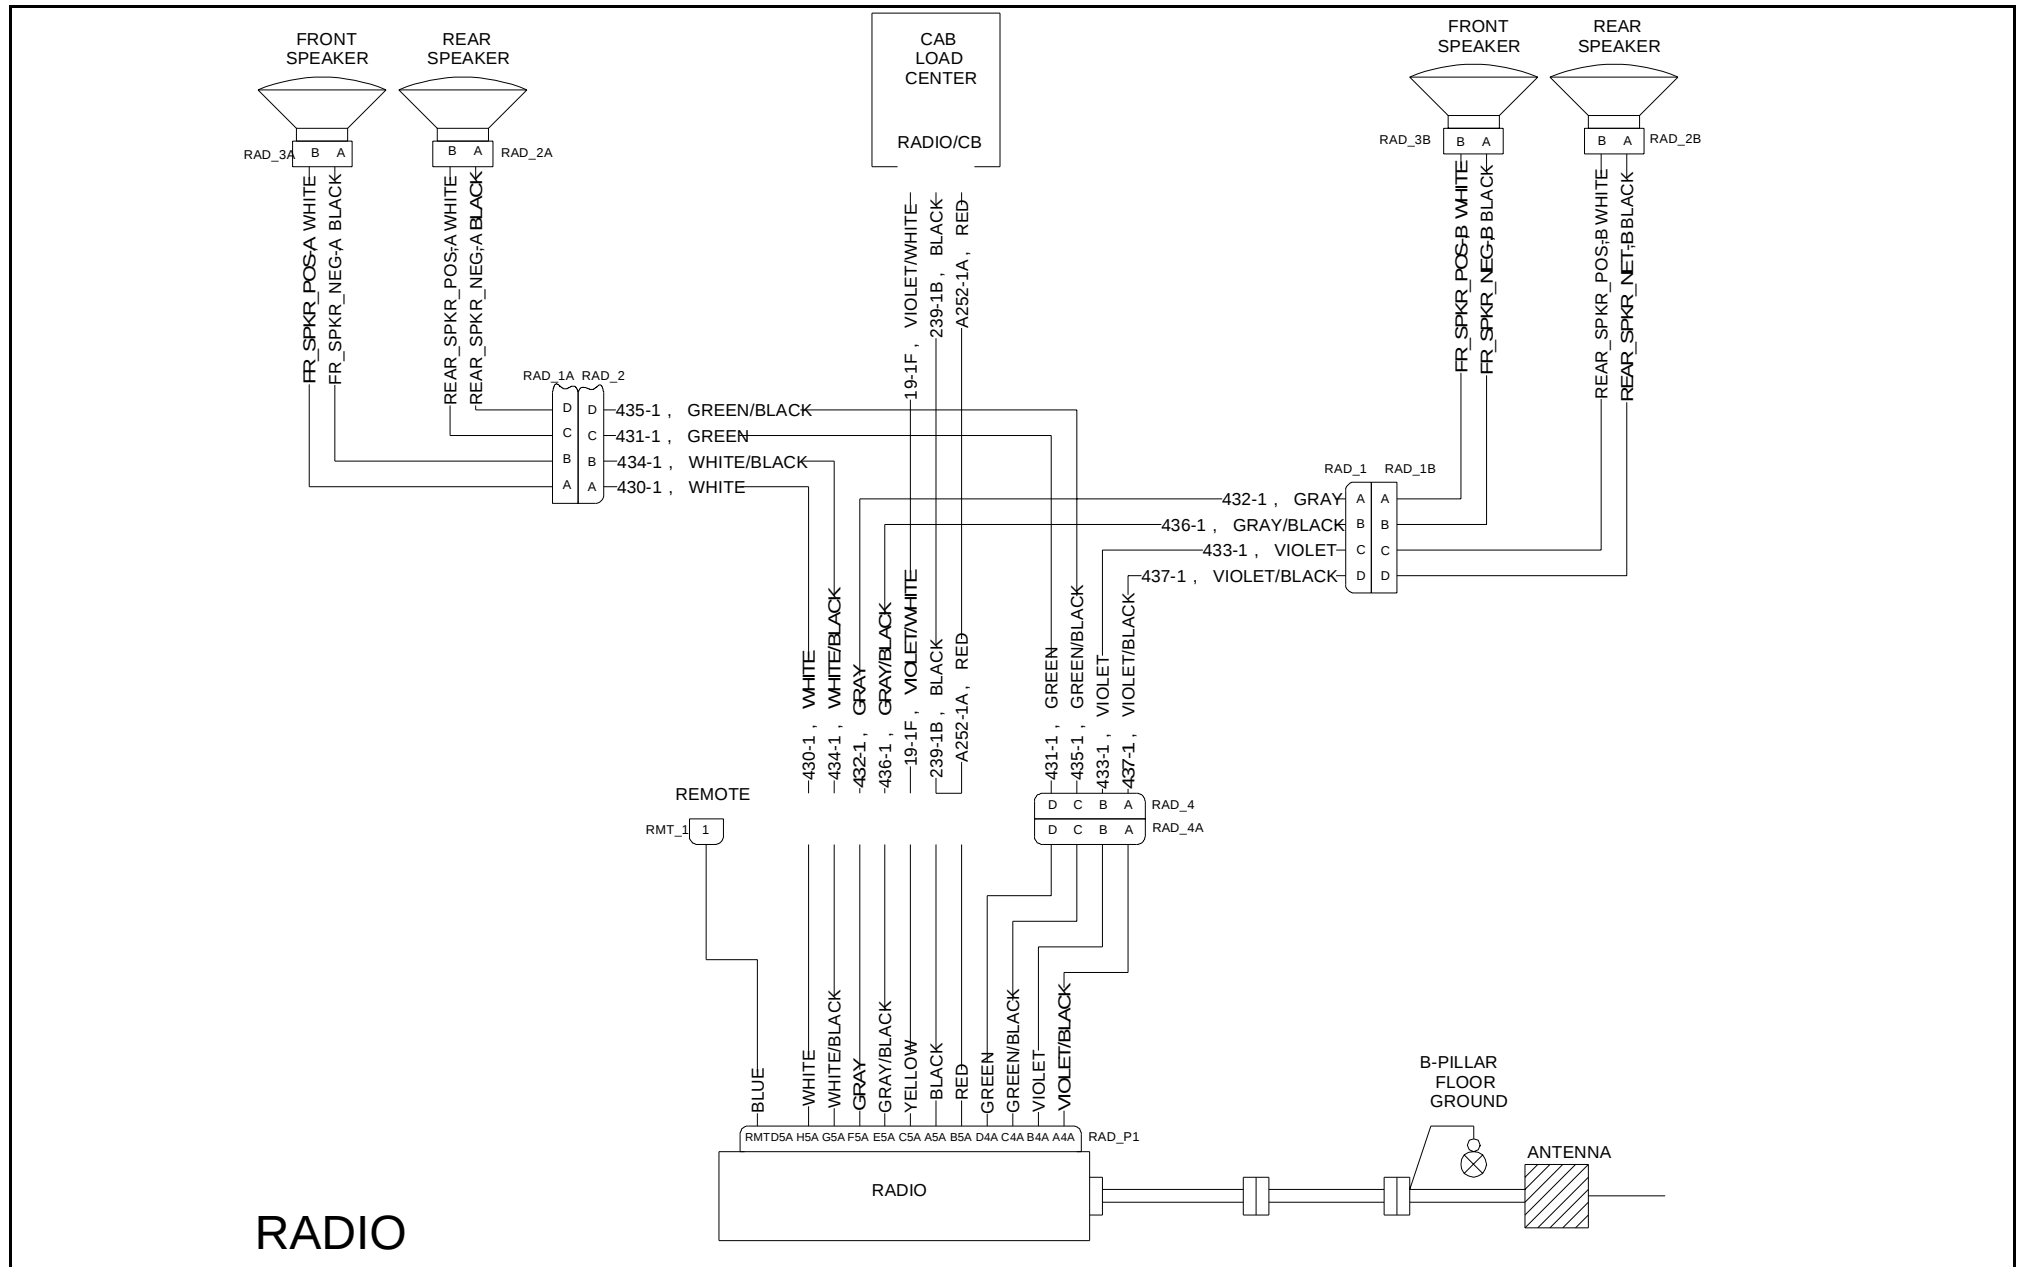


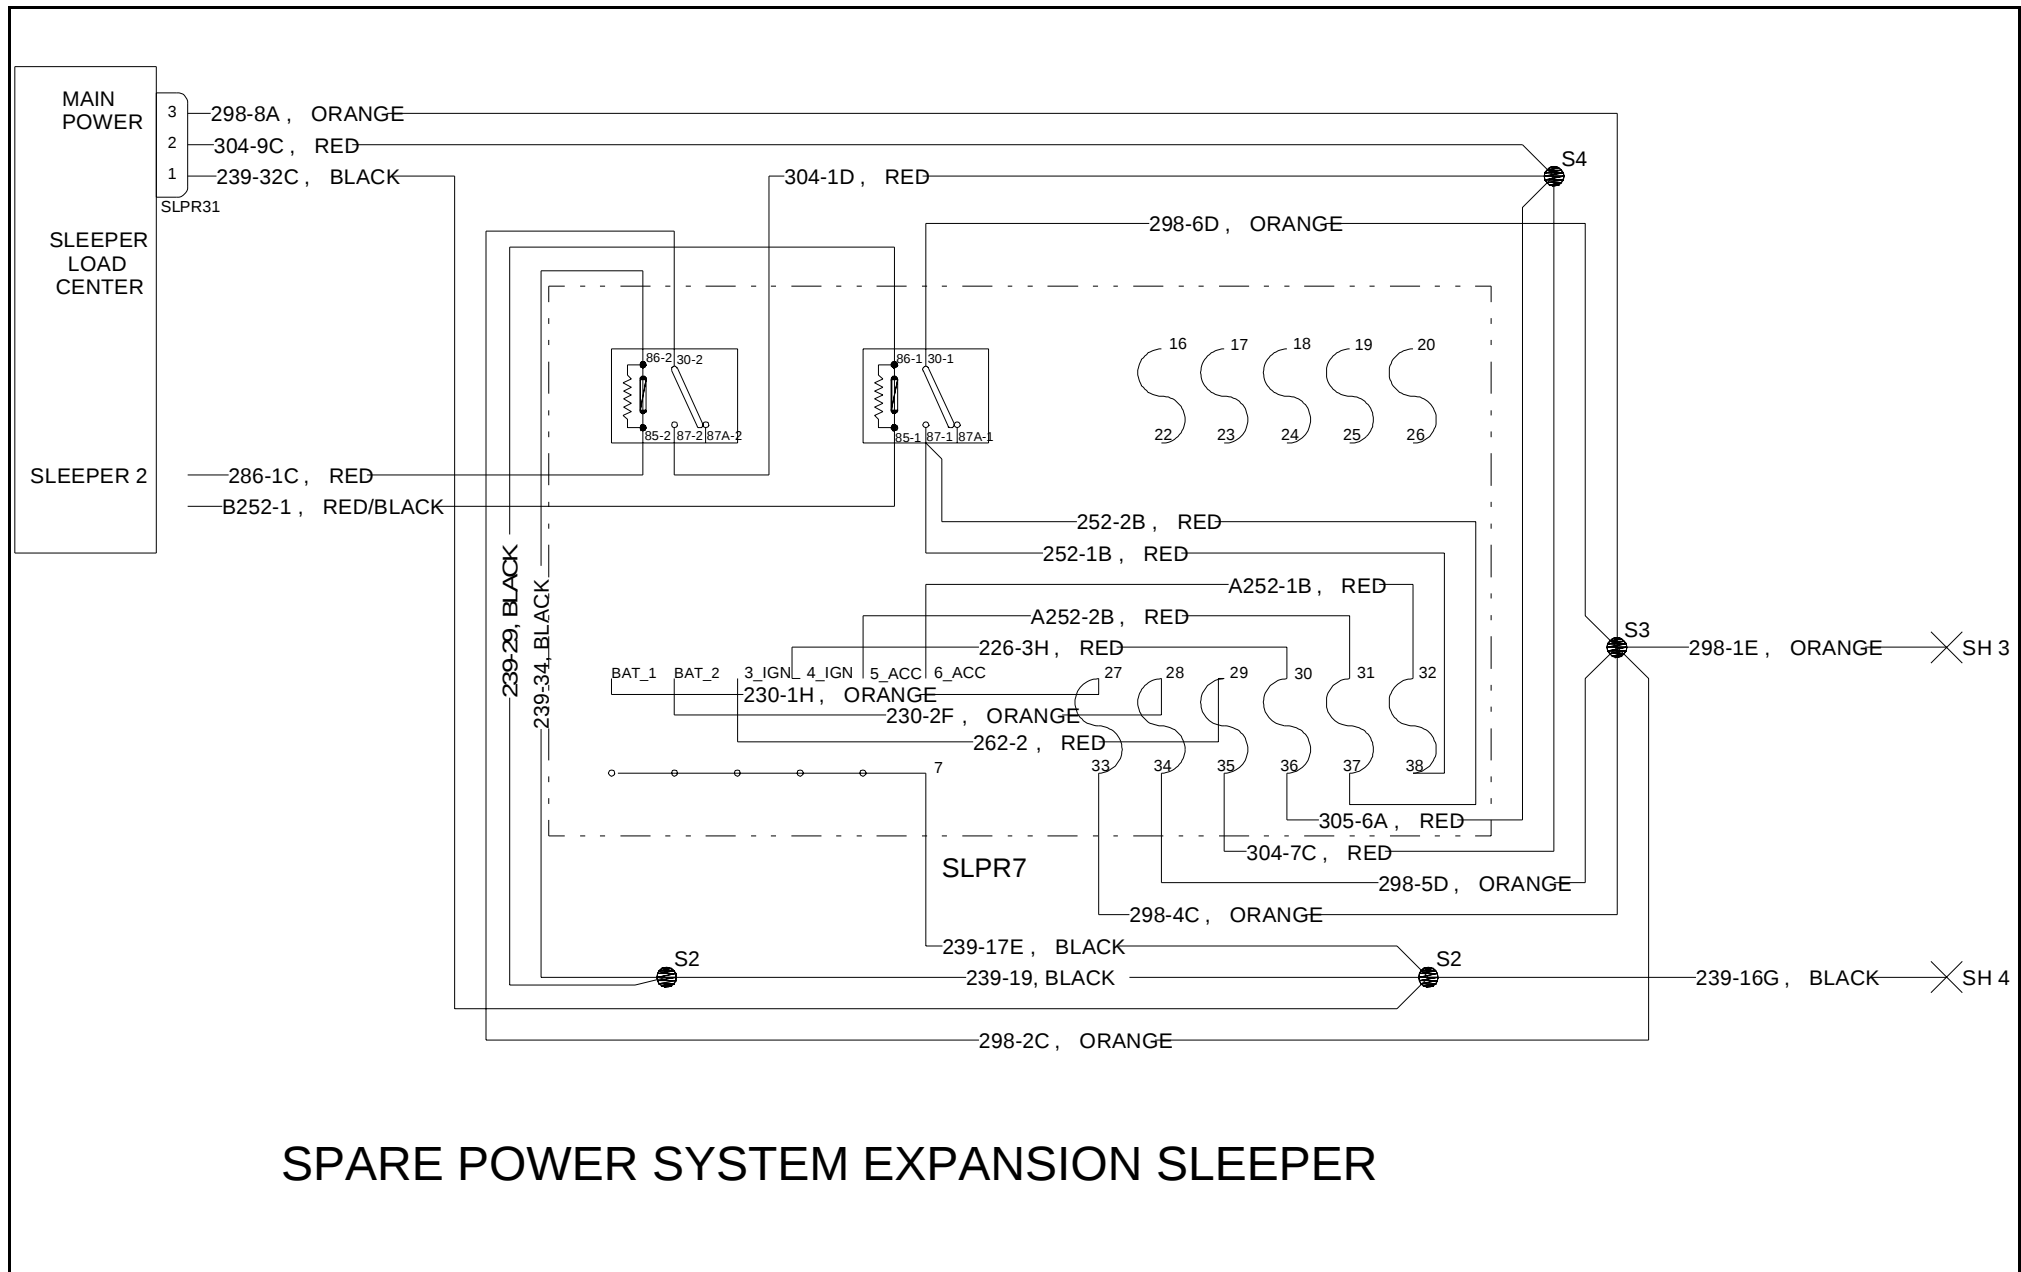




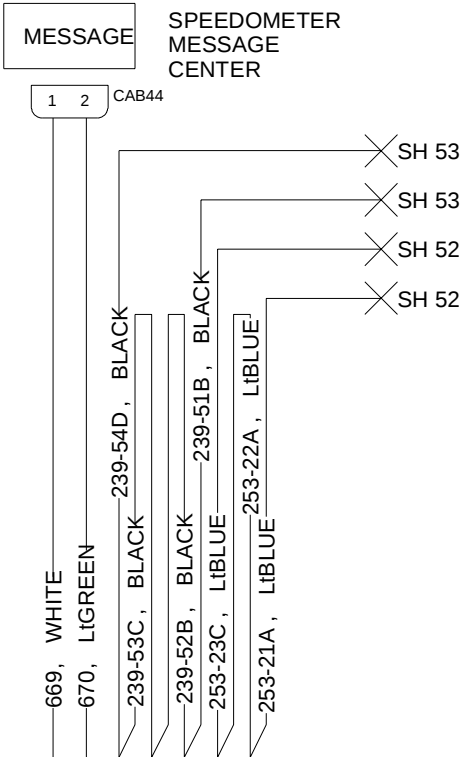



SMC SELECT/RESET





SPEEDO MESSAGE CENTER (SMC)

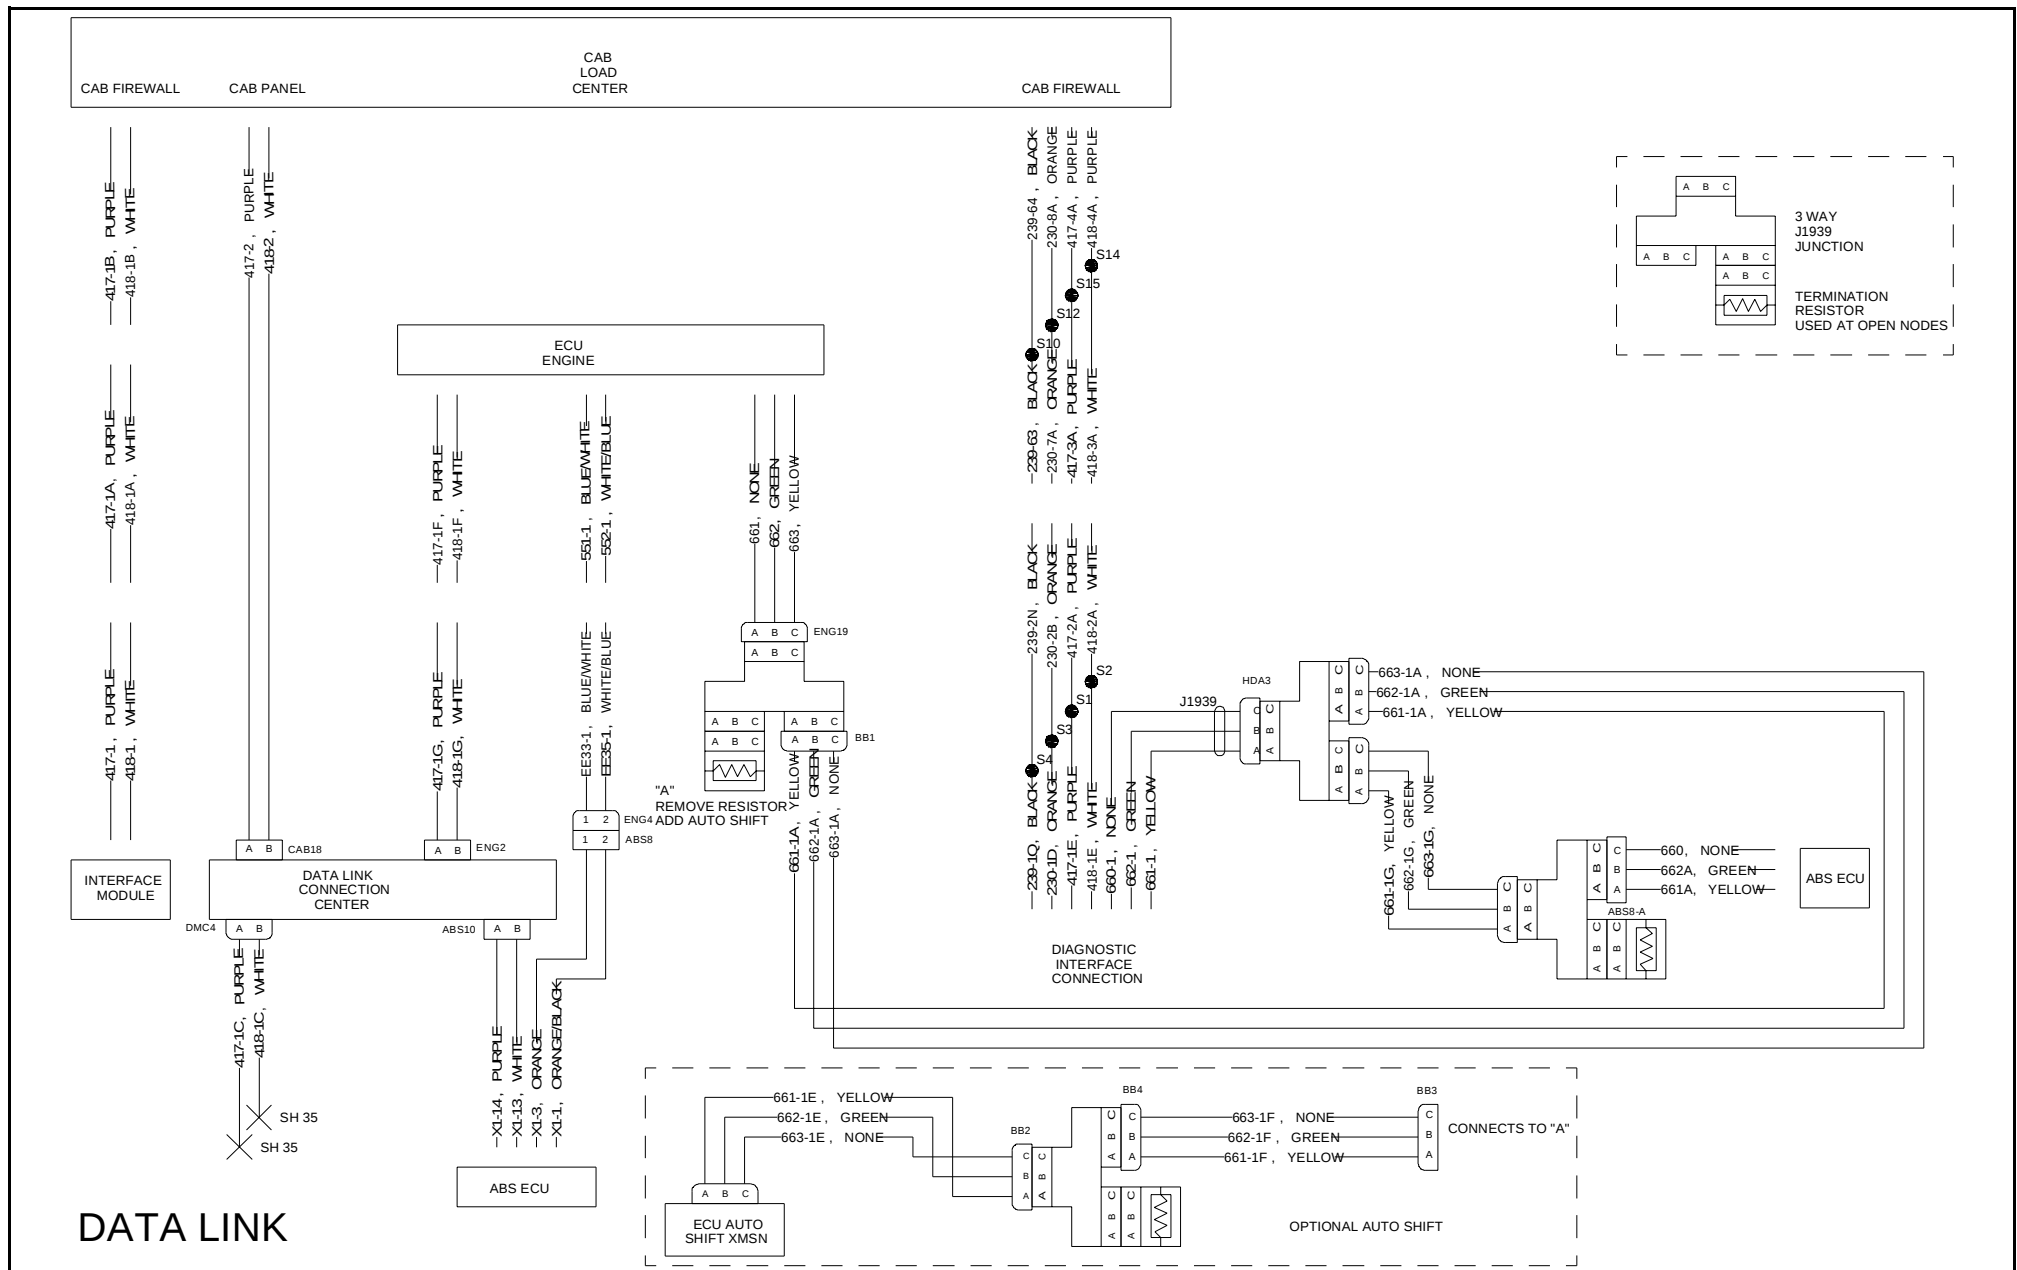


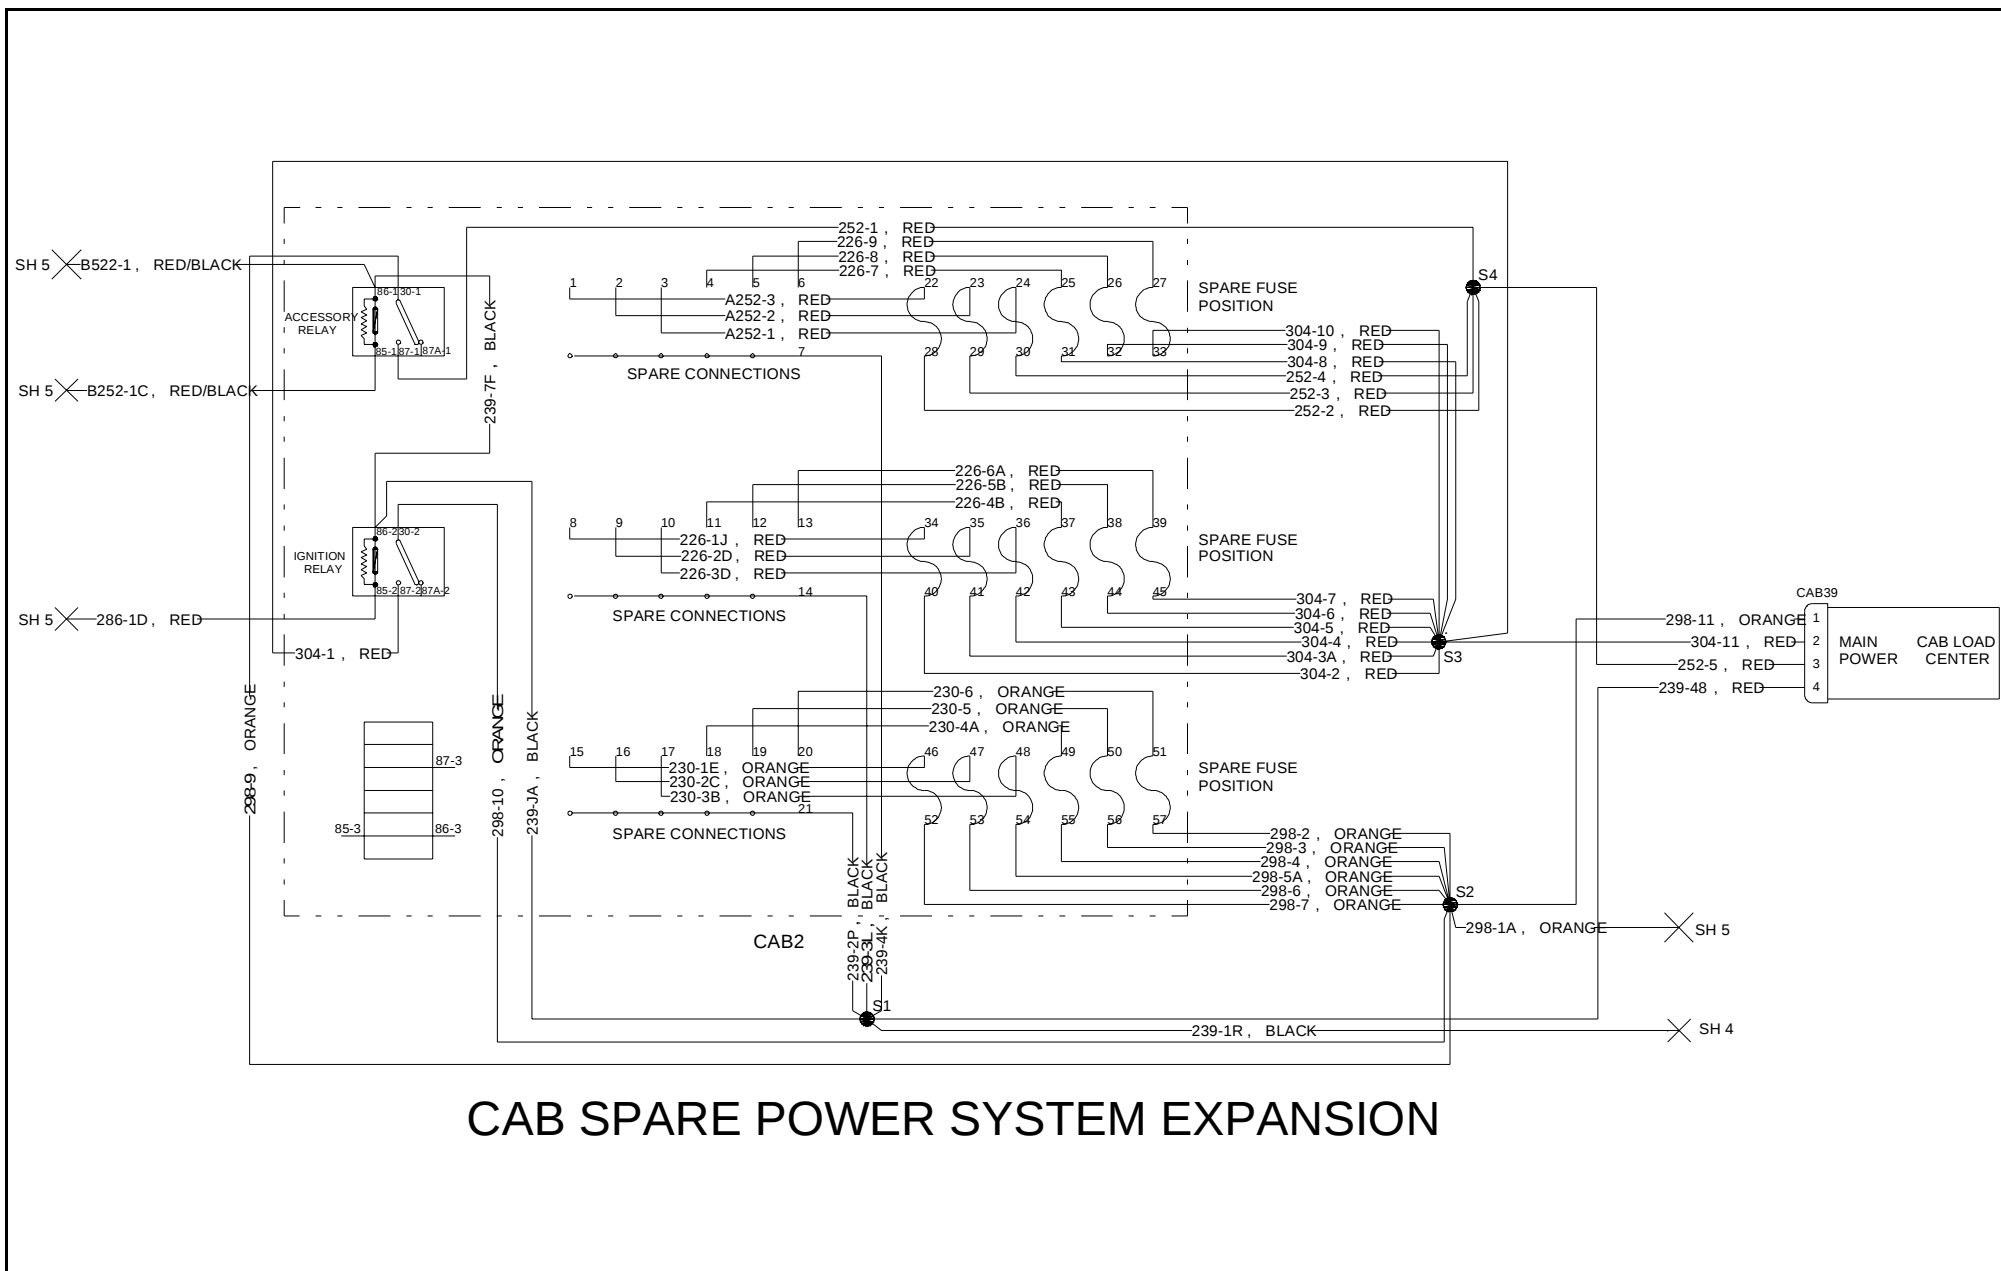







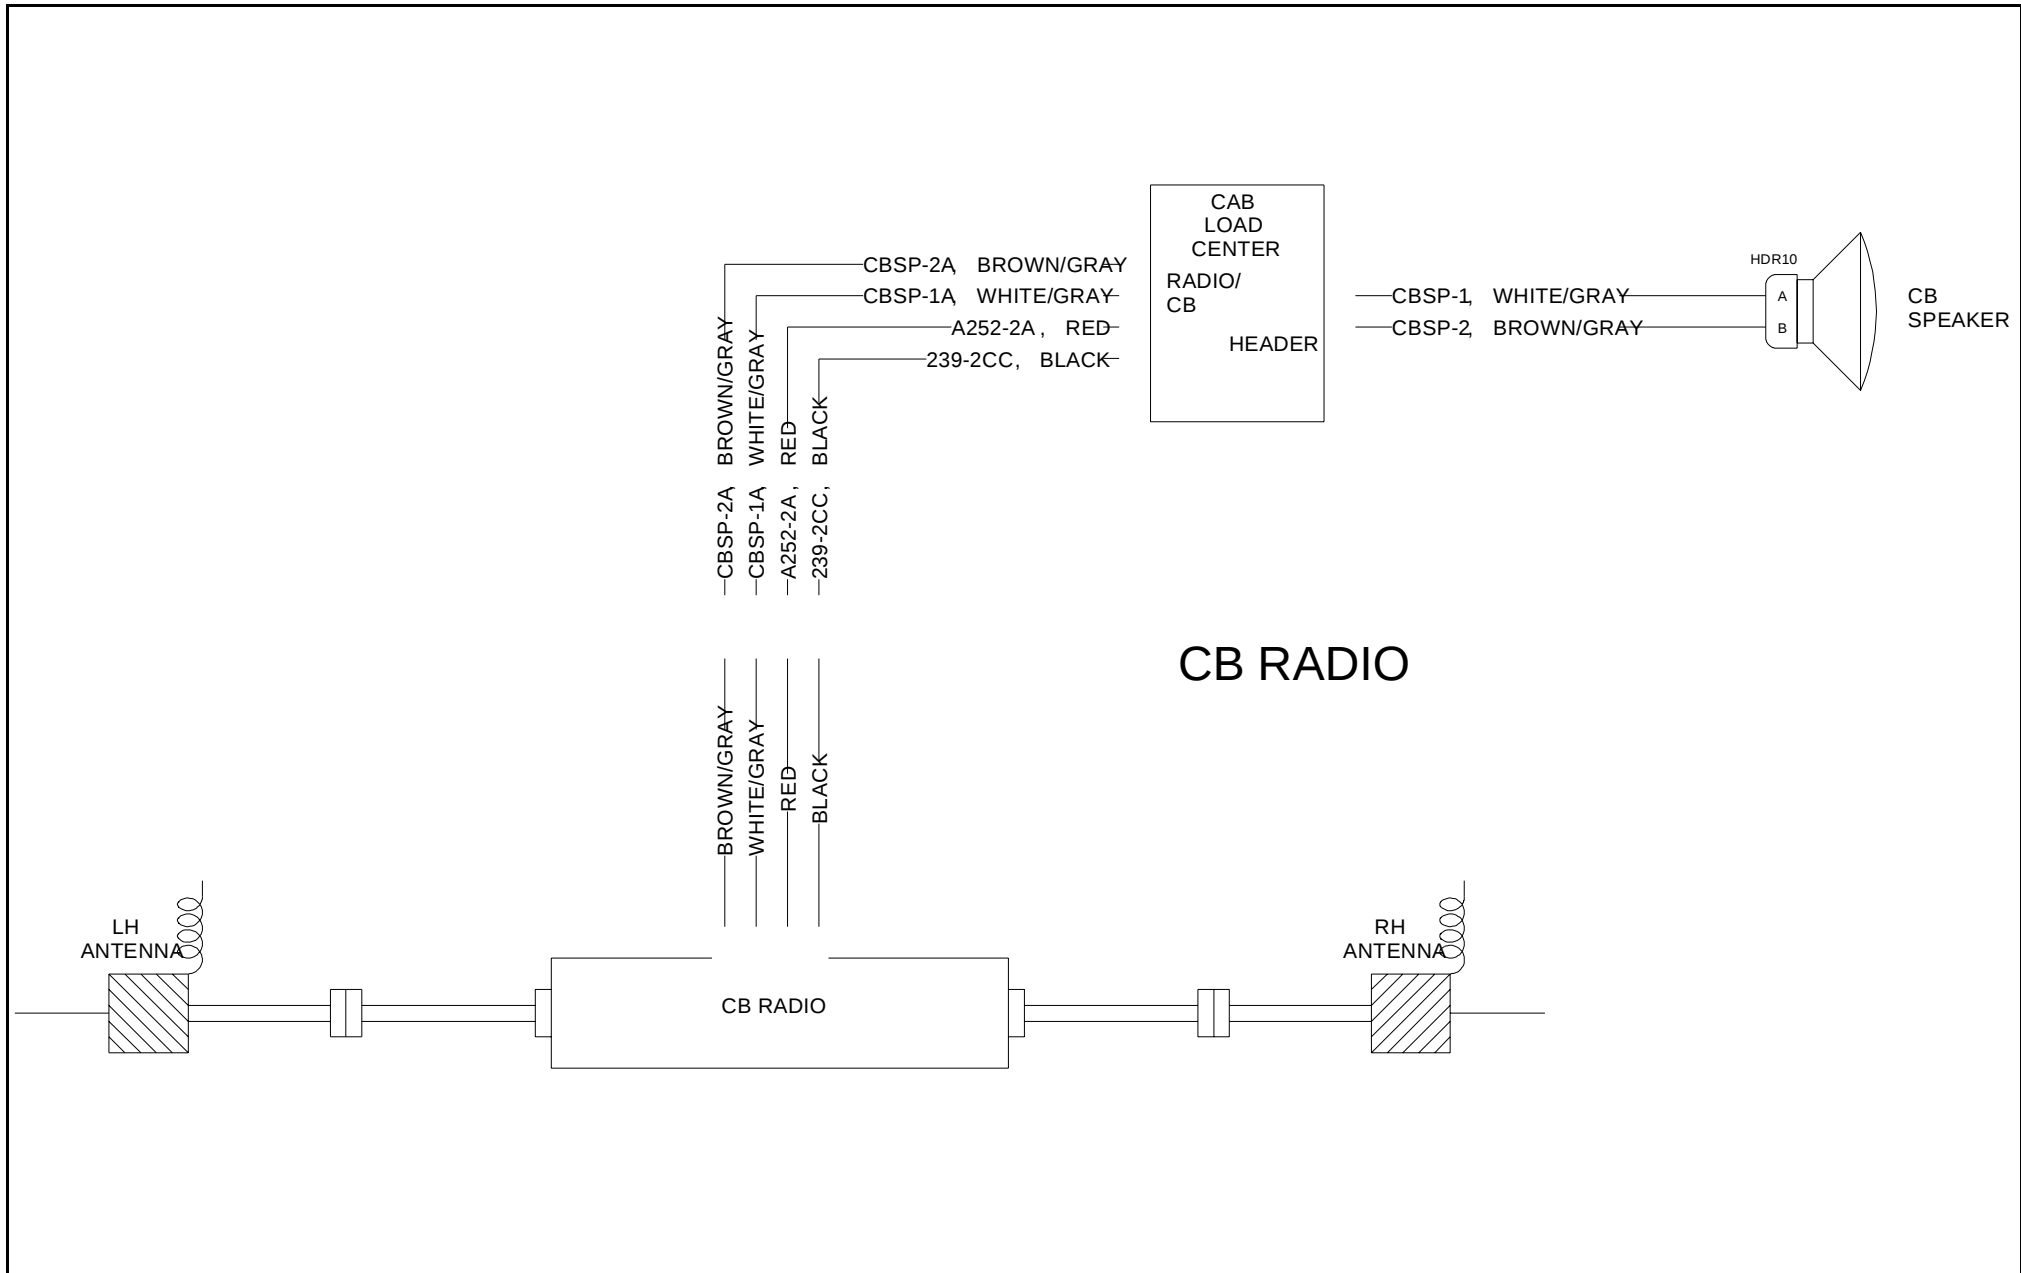




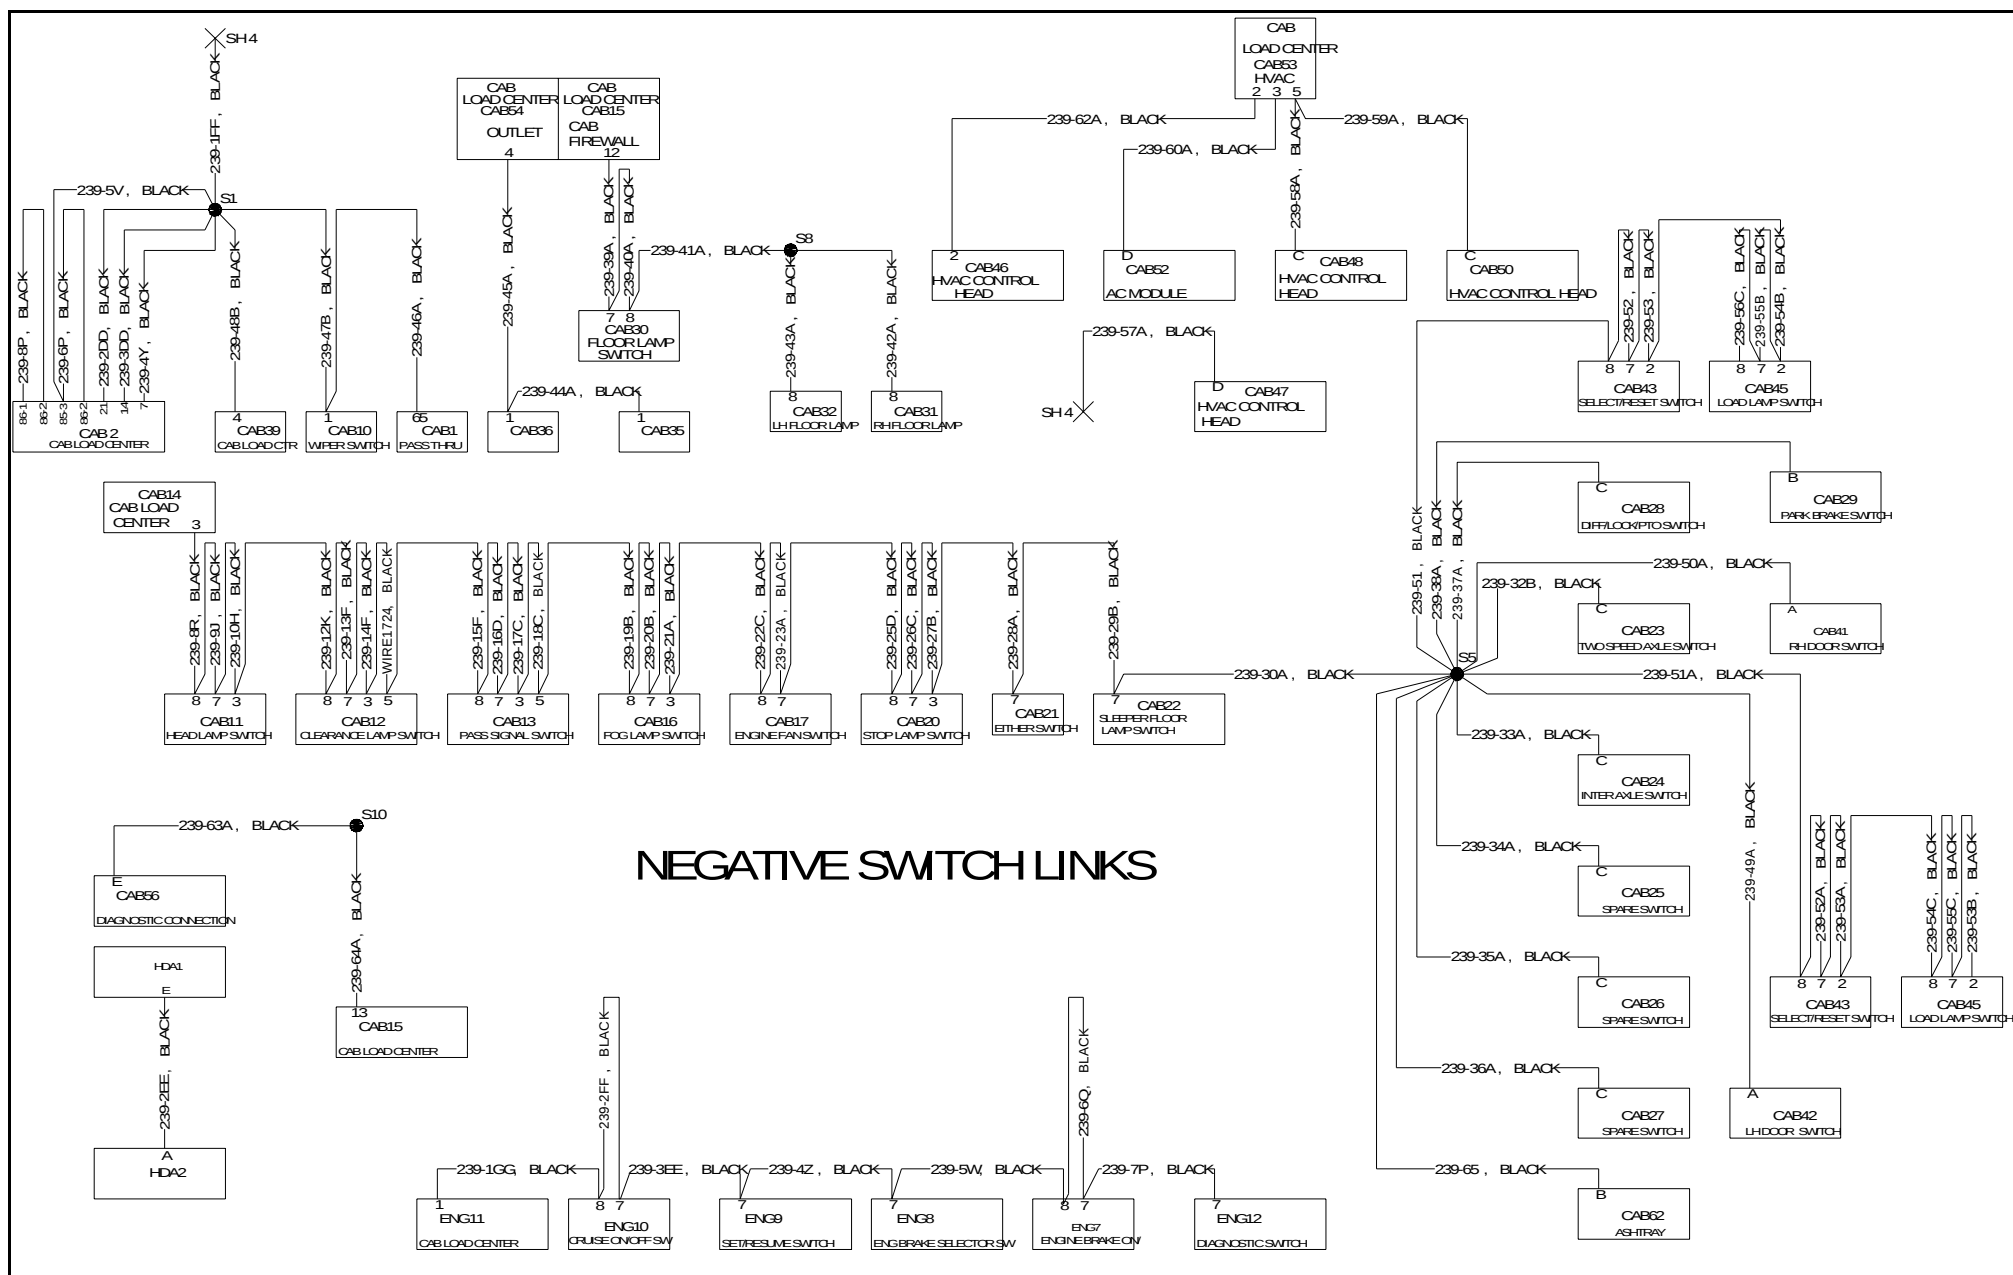

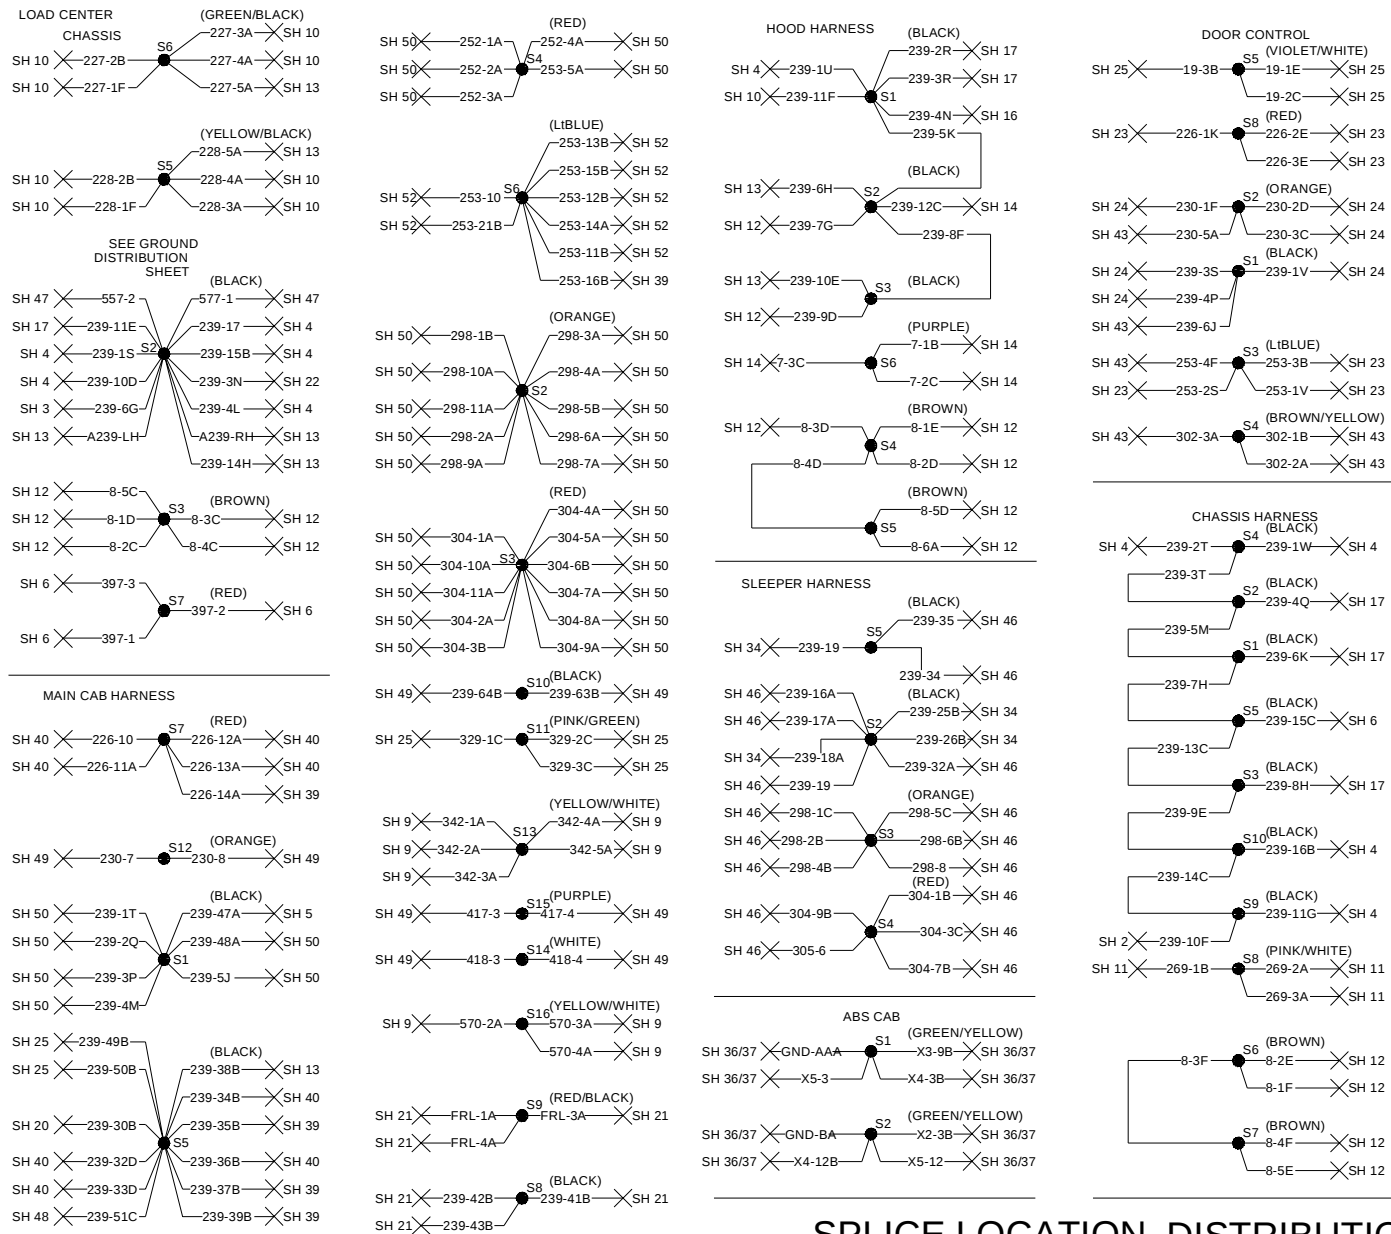

SPLICE LOCATION DISTRIBUTION

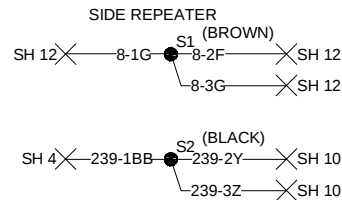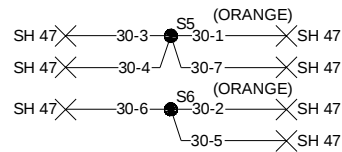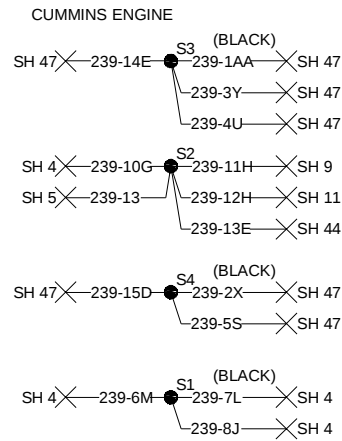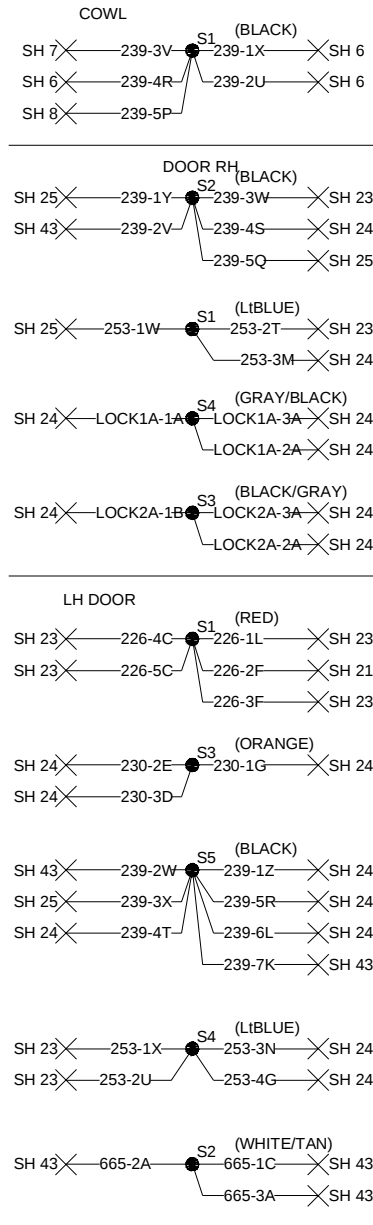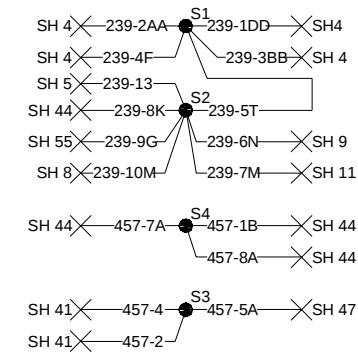**CAT ENGINE**

SPLICE LOCATION

DISTRIBUTION

