

FRAMES & BUMPERS

TABLE OF CONTENTS

	page		page
BUMPERS		SPECIFICATIONS	
SPECIFICATIONS - TORQUE	1	SPECIFICATIONS - FRAME DIMENSIONS . . .	17
FRONT AIR DAM		SPECIFICATIONS - TORQUE	23
REMOVAL	2	FRONT CROSSMEMBER	
INSTALLATION	2	REMOVAL	23
FRONT BUMPER		INSTALLATION	23
REMOVAL	2	FRONT SKID PLATE	
INSTALLATION	2	REMOVAL	24
FRONT FASCIA		INSTALLATION	24
REMOVAL	3	TRANSMISSION CROSSMEMBER	
INSTALLATION	3	REMOVAL	24
REAR BUMPER		INSTALLATION	25
REMOVAL	4	TRAILER HITCH	
INSTALLATION	4	REMOVAL	25
FRAME		INSTALLATION	25
STANDARD PROCEDURE		TRANSFER CASE SKID PLATE	
STANDARD PROCEDURE - LIGHT DUTY		REMOVAL	26
FRONT FRAME RAIL TIP REPLACEMENT	4	INSTALLATION	26
STANDARD PROCEDURE - HYDROFORM		FRONT TOW HOOK ASSEMBLY	
FENDER RAIL REPAIR	12	REMOVAL	26
STANDARD PROCEDURE - REAR FRAME		INSTALLATION	26
H-SECTION REPLACEMENT	15		

BUMPERS

SPECIFICATIONS - TORQUE

TORQUE SPECIFICATIONS

DESCRIPTION	N·m	Ft. Lbs.	In. Lbs.
Front bumper center bracket nuts	95	70	—
Front bumper stud plate nuts	95	70	—
License plate hitch reinforcement bolts	54	40	—
Rear bumper support bracket stud plate nuts	54	40	—
Rear bumper support bracket to hitch bolts	54	40	—
Rear bumper to hitch bolts	54	40	—

FRONT AIR DAM

REMOVAL

- (1) Using a trim stick C-4755 or equivalent, remove the fog lamp trim bezels. (Fig. 1)
- (2) Remove the air dam screws through the fog lamp opening (1 per side).
- (3) Remove the two outboard screws.
- (4) Remove the three middle screws and remove the air dam.

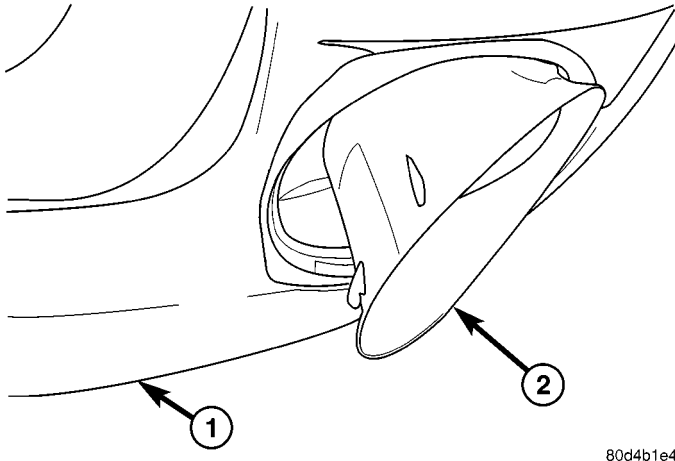


Fig. 1 FOG LAMP BEZEL

- 1 - BUMPER
2 - BEZEL

INSTALLATION

- (1) Position the air dam onto the bumper and seat the carrot type fasteners fully.
- (2) Starting at the center screw install the three middle screws.
- (3) Install the screws through the fog lamp opening.
- (4) Install the two outboard screws.
- (5) Position the fog lamp trim bezels into the bumper and seat fully.

FRONT BUMPER

REMOVAL

- (1) Using a grease pencil or equivalent, mark the position of the bumper on the frame rail tip to aid installation.
- (2) Disconnect the fog lamp electrical connector at the left frame rail.
- (3) Support the bumper with a suitable lifting device.
- (4) Remove the center bracket nuts and bolts and remove bumper. (Fig. 2)

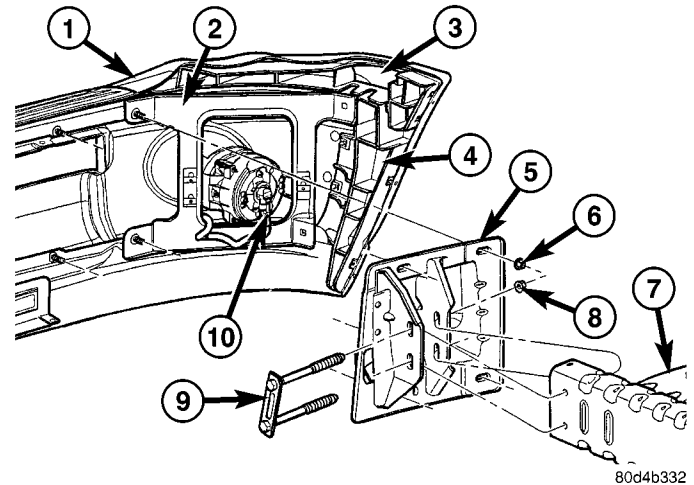


Fig. 2 BUMPER SUPPORT BRACKET - TYPICAL

- 1 - FASCIA - SPORT MODEL
2 - SUPPORT BRACKET
3 - FASCIA SUPPORT BRACKET
4 - WHEELHOUSE SPLASH SHIELD SUPPORT BRACKET
5 - BUMPER CENTER BRACKET
6 - NUTS (4 PER SIDE)
7 - FRAME RAIL TIP
8 - CENTER BRACKET NUTS (2 PER SIDE)
9 - CENTER BRACKET BOLTS ASSEMBLY (1 PER SIDE)
10 - FOG LAMP

INSTALLATION

- (1) Install the bumper onto the frame rails and position the wheelhouse splash shield into the support brackets.
- (2) Install the bolts and nuts.
- (3) Line up the bumper with the marks made previously and tighten the bolts and nuts to 95 N·m (70 ft. lbs.).
- (4) Check and adjust the bumper alignment as necessary. (Refer to 23 - BODY/BODY STRUCTURE/GAP AND FLUSH - SPECIFICATIONS)

FRONT FASCIA

REMOVAL

ST/SLT/SLT+ - FASCIA REMOVAL

- (1) Remove the two screws at each trailing edge of the fascia. (Fig. 3)
- (2) Using a trim stick C-4755 or equivalent, carefully release the six lower clips and remove the close out panel.
- (3) Using a trim stick C-4755 or equivalent, carefully remove the step pad.
- (4) Remove and discard the four push pin fasteners and remove the fascia.


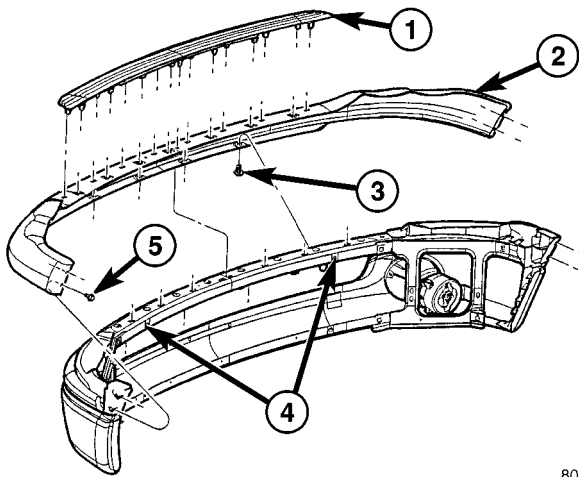


Fig. 3 UPPER FASCIA - ST/SLT/SLT+

- 1 - STEP PAD
- 2 - UPPER FASCIA (ST/SLT/SLT+ MODEL ONLY)
- 3 - INBOARD BUMPER BRACKET ATTACHMENTS
- 4 - SCREWS (4)
- 5 - PUSH PIN FASTENERS (4)

SPORT FASCIA REMOVAL

- (1) Raise and support the vehicle. (Refer to LUBRICATION & MAINTENANCE/HOISTING - STANDARD PROCEDURE)
- (2) Remove the three screws at each trailing edge of the fascia. (Fig. 4)
- (3) Remove the five lower screws.
- (4) Remove and discard the four upper push pins.
- (5) Using a trim stick C-4755 or equivalent, carefully release the six lower clips and remove the close out panel.
- (6) Using a trim stick C-4755 or equivalent, carefully remove the step pad.
- (7) Spread the fascia out at the wheels and remove from the vehicle.

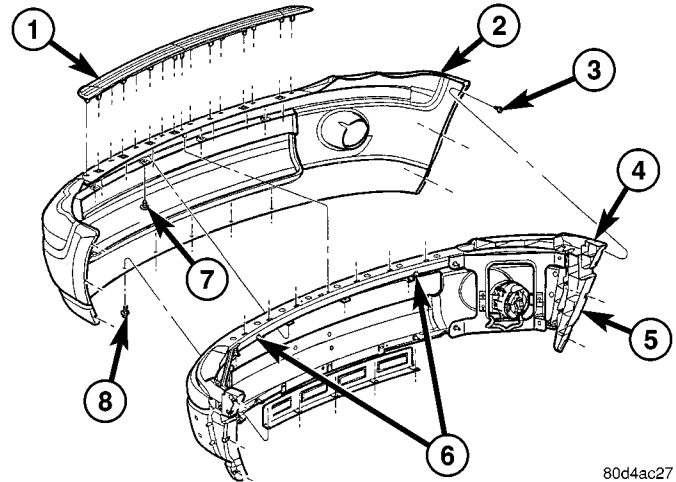

80d4ac27

Fig. 4 SPORT FASCIA

- 1 - STEP PAD
- 2 - FASCIA (SPORT MODEL ONLY)
- 3 - SCREWS (3 PER SIDE)
- 4 - UPPER FASCIA SUPPORT BRACKET
- 5 - WHEELHOUSE SPLASH SHIELD BRACKET
- 6 - INBOARD BUMPER BRACKET ATTACHMENTS
- 7 - PUSH PIN FASTENERS (4)
- 8 - LOWER SCREWS (5)

INSTALLATION

NOTE: The left and right inboard bumper to bracket attachments must be secured before installing the fascia and step pad.

ST/SLT/SLT+ FASCIA INSTALLATION

- (1) Install the fascia.
- (2) Position the close out panel and seat the 6 lower clips fully.
- (3) Install four new upper push pin fasteners.
- (4) Position the step pad onto the fascia and fully seat the attachment clips.
- (5) Align the fascia to the fender with a 19 mm (0.75 inch) gap and install the two screws at each trailing edge of the fascia.


SPORT FASCIA INSTALLATION

- (1) Position the fascia onto the bumper.
- (2) Position the step pad onto the fascia and fully seat the attachment clips.
- (3) Install four new upper push pin fasteners.
- (4) Install the five lower screws.
- (5) Install the three screws at each trailing edge of the fascia.

REAR BUMPER

REMOVAL

- (1) Raise and support the vehicle. (Refer to LUBRICATION & MAINTENANCE/HOISTING - STANDARD PROCEDURE)
- (2) Remove the license plate.
- (3) Remove the bolts behind the plate.
- (4) Disconnect the license plate light electrical connectors.
- (5) Disconnect the trailer light connector electrical connection, if equipped.
- (6) Remove the two bolts along the front upper edge of the bumper near the frame tips.
- (7) Support the bumper with a suitable lifting device.
- (8) Remove the bolts attaching the bumper support brackets to the trailer hitch. (Fig. 5)

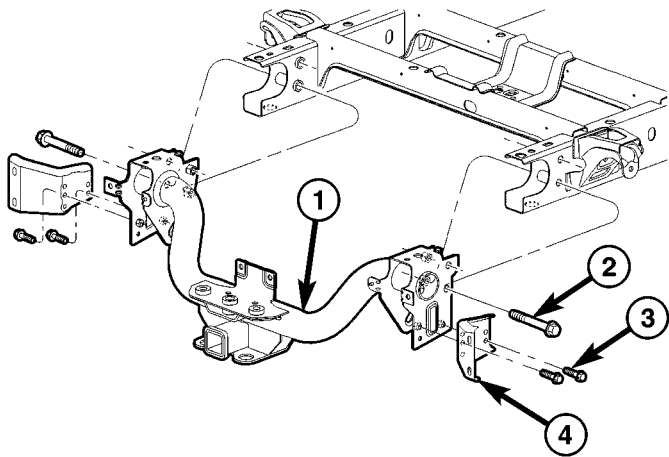

80f9e01a

Fig. 5 TRAILER HITCH

- 1 - HITCH
- 2 - HITCH BOLTS (4)
- 3 - BUMPER BRACKET BOLTS (4)
- 4 - BUMPER SUPPORT BRACKETS

INSTALLATION

- (1) Align the holes in the bumpers to the trailer hitch pins and install the bumper.
- (2) Install the support bracket to the hitch bolts, loosely.
- (3) Install the front upper edge to the trailer hitch bolts and tighten to 54 N·m (40 ft. lbs.).
- (4) Install the license plate reinforcement to hitch bolts and tighten to 54 N·m (40 ft. lbs.).
- (5) Tighten the left bumper bracket bolts to 54 N·m (40 ft. lbs.).
- (6) Tighten the right bumper bracket bolts to 54 N·m (40 ft. lbs.).
- (7) Connect the trailer light connector electrical connection, if equipped.
- (8) Connect the license plate light electrical connectors.
- (9) Install the license plate.

FRAME

STANDARD PROCEDURE

STANDARD PROCEDURE - LIGHT DUTY FRONT FRAME RAIL TIP REPLACEMENT

SAFETY PRECAUTIONS AND WARNINGS

WARNING: USE EYE PROTECTION WHEN GRINDING OR WELDING METAL, SERIOUS EYE INJURY CAN RESULT.

- BEFORE PROCEEDING WITH FRAME REPAIR INVOLVING GRINDING OR WELDING, VERIFY THAT VEHICLE FUEL SYSTEM IS NOT LEAKING OR IN CONTACT WITH REPAIR AREA, PERSONAL INJURY CAN RESULT.

- DO NOT ALLOW OPEN FLAME OR HEAT AND METAL SPATTER FROM ARC WELDING, TO CONTACT PLASTIC BODY PANELS. FIRE OR EXPLOSION CAN RESULT.

- WHEN WELDED FRAME COMPONENTS ARE REPLACED, ENSURE COMPLETE PENETRATION WELD IS ACHIEVED DURING INSTALLATION. IF NOT, DANGEROUS OPERATING CONDITIONS CAN RESULT.

- STAND CLEAR OF CABLES OR CHAINS ON PULLING EQUIPMENT DURING FRAME STRAIGHTENING OPERATIONS, PERSONAL INJURY CAN RESULT.

- DO NOT VENTURE UNDER A HOISTED VEHICLE THAT IS NOT SUPPORTED ON SAFETY STANDS, PERSONAL INJURY CAN RESULT.

CAUTION: 1500 series Dodge Ram Trucks (2002 and later) are not designed for snow plow equipment. The front collision repair tips must not be installed on any truck equipped with a snow plow, or even intended to be equipped with a snow plow.

CAUTION: This procedure is designed to replace the front frame rail tips that have been damaged in the crush initiator zones. Prior to any cutting, the vehicle must be mounted on the appropriate frame repair equipment ("frame rack"), checked with three dimensional measuring equipment, and the necessary pull corrections made. If damage remains in the frame beyond the area covered by this service part after the pull, the frame must be replaced in its entirety.

FRAME (Continued)

CAUTION: Do not reuse damaged fasteners, quality of repair would be suspect. Failure to use only production fasteners or fasteners of equivalent hardness can result in loosening or failure. Do not drill any holes in the frame that are not specifically outlined in this or other, DaimlerChrysler procedure as frame rail failure can result. When using heat to straighten frame components do not exceed 566°C (1050°F), metal fatigue can result.

NOTE: Procedures for 4X2 and 4X4 are common except as noted in this procedure.

- (1) Disconnect and isolate the battery negative cable.
- (2) Remove the front wheelhouse splash shield. (Refer to 23 - BODY/EXTERIOR/FRONT WHEELHOUSE SPLASH SHIELD - REMOVAL)
- (3) Remove the bolts and position aside the wire harness and grounds, if required.
- (4) Remove the front bumper. (Refer to 13 - FRAME & BUMPERS/BUMPERS/FRONT BUMPER - REMOVAL)
- (5) Loosen and lower the stabilizer bar mount and bar. (Refer to 2 - SUSPENSION/FRONT/STABILIZER BAR - REMOVAL)
- (6) Remove the front cab mount bolt to the Front End Sheet Metal (FESM) bracket. (Fig. 6)

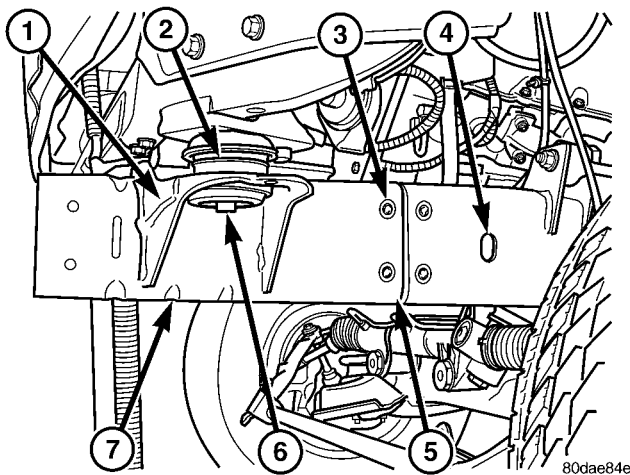


Fig. 6 REPLACEMENT FRAME TIP

- 1 - FRONT END SHEET METAL (FESM) BRACKET
- 2 - CAB INSULATOR
- 3 - RING-FILLET WELD/HOLE
- 4 - PRINCIPLE LOCATING POINT (PLP)
- 5 - WELD ROOT GAP 4 mm - 6 mm (0.16 in. - 0.24 in.)
- 6 - FRONT CAB MOUNT BOLT
- 7 - REPLACEMENT FRAME TIP

- (7) Make a vertical mark on the inside and outside face of the frame rail 112 mm (4.5 in.) from the forward edge of the PLP hole in the sides of the rail. (Fig. 8)

- (8) Using a straightedge, connect the two lines on the top and bottom of the rail.

- (9) Using the service tip as a guide, re-check your cut lines to ensure the service tip will fit when the cut is made.

CAUTION: Do not use any flame or plasma cutting equipment to cut the frame in this procedure. This is due to the inaccurate nature of the cut-line and the fact that the high temperatures achieved during flame or plasma cutting will change the metal characteristics and may weaken the frame and/or repair location.

- (10) Using a reciprocating saw or equivalent, carefully cut and remove the damaged frame rail tip. (Fig. 7)

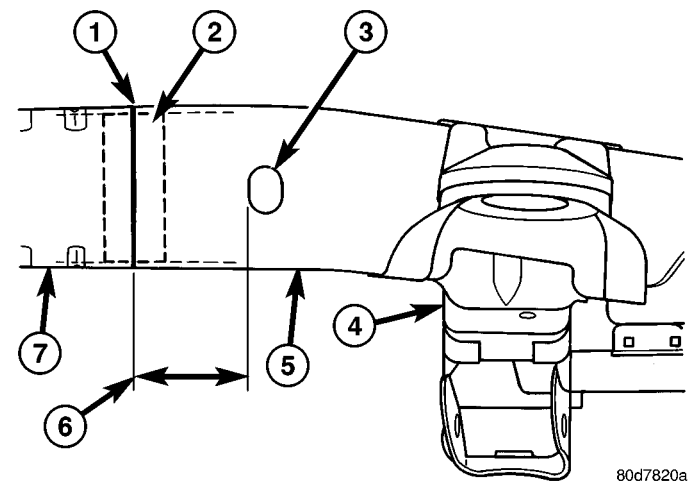


Fig. 7 FRAME CUT LOCATION

- 1 - REPAIR ROOT OPENING
- 2 - SERVICE SLEEVE
- 3 - PRINCIPLE LOCATING POINT (PLP)
- 4 - SUSPENSION BRACKETS
- 5 - FRAME
- 6 - FRAME CUTOFF LOCATION - 112 mm (4.5 in.)
- 7 - FRAME SERVICE TIP

FRAME (Continued)

(11) Assemble the service sleeve. Refer to SERVICE SLEEVE ASSEMBLY at the end of this procedure.

NOTE: Any burned surface coatings will need to be removed from the sleeve prior to installation and application of corrosion preventative coatings.


(12) Smooth and square the cut edges of the original frame. (Fig. 7)

(13) Dress the cut edge of the existing frame in preparation for the new rail tip.

(a) Drill four 13 mm (0.5 in.) diameter holes in the new tip and four more in the existing frame to accommodate ring-fillet welds. Center these holes 19 mm (0.75 in.) from the cut face of the rail and 38 mm (1.5 in.) from the top and bottom of the rail. (Fig. 8)

(b) Bevel the edges of the new tip, existing frame, and ring-fillet holes 25° - 30°. Scribing a line 2 mm from the cut edge and then grinding back to the mark will simplify the bevel creation process and accuracy. (Fig. 9)


(c) Remove any burrs at the holes and beveled edges.

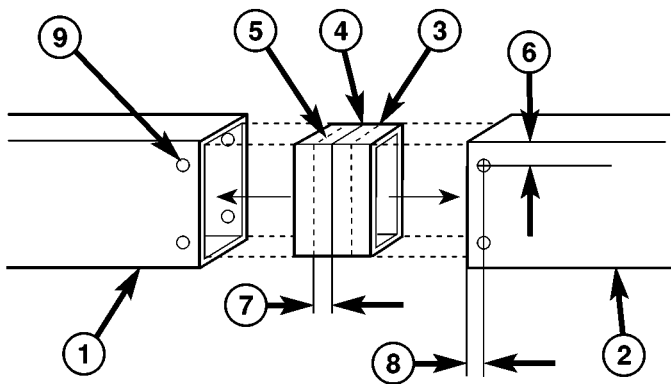

80d9bctd

Fig. 8 REPAIR SLEEVE INSTALLATION (TYPICAL)

- 1 - REPLACEMENT FRAME TIP
- 2 - FRAME RAIL
- 3 - SERVICE SLEEVE
- 4 - CENTER LINE
- 5 - LOCATOR LINES (2)
- 6 - HORIZONTAL WELD HOLE LOCATION - 38 mm (1.5 in.)(BOTH FRAME SECTIONS)
- 7 - LOCATOR LINE DIMENSION - 2 mm (0.08 in.)
- 8 - VERTICAL WELD HOLE LOCATION - 19 mm (0.75 in.)(BOTH FRAME SECTIONS)
- 9 - RING FILLET WELD HOLES

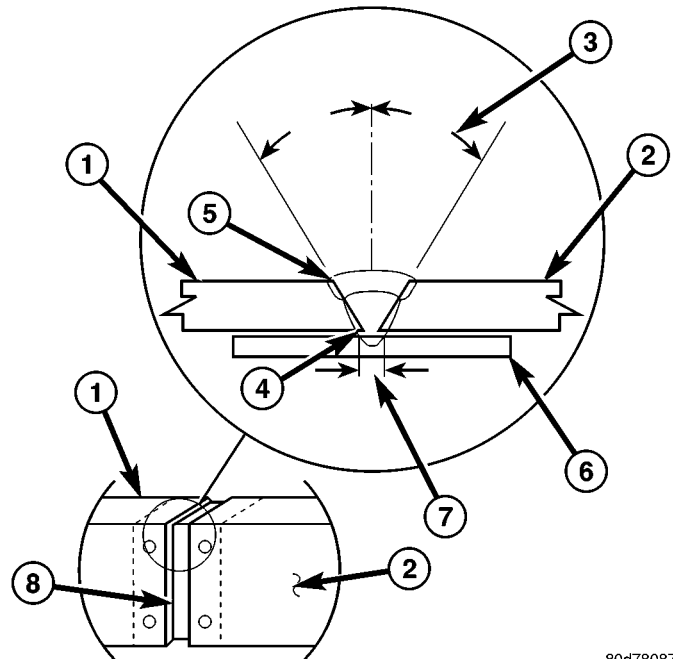

80d78087

Fig. 9 WELD DIMENSIONS

- 1 - FRAME REPLACEMENT TIP
- 2 - FRAME RAIL
- 3 - FRAME DRESS ANGLE 25°-30°
- 4 - ROOT PASS
- 5 - COVER PASS
- 6 - SERVICE SLEEVE
- 7 - WELD ROOT GAP 4 mm - 6 mm (0.16 in. - 0.24 in.)
- 8 - SERVICE SLEEVE

(14) Dry fit the new rail to ensure alignment and fit and make any adjustments as necessary.

(15) Remove all internal and external OEM e-coat within 51 mm (2.0 in.) of the weld joint on the replacement tip and the existing frame rail.

NOTE: Any burned surface coatings will need to be removed prior to application of corrosion preventative coatings.

CAUTION: Shield the surrounding area and components from exposure to the welding spatter and heat.

FRAME (Continued)

(16) On 4X4 models use the service sleeve as a template to drill a hole in the frame tip to accommodate the sway bar mounting bolt. (Fig. 12)

(17) Slide the service sleeve into the replacement frame tip and align to the 2 mm (0.08 in.) off center line made previously during the sleeve assembly and tack the ring fillet welds to hold them in place. (Fig. 10) (Fig. 11) (Fig. 12) (Fig. 13)

(18) On 4X4 models, install the sway bar tapping plate and secure with tack welds. (Fig. 12) (Fig. 13)

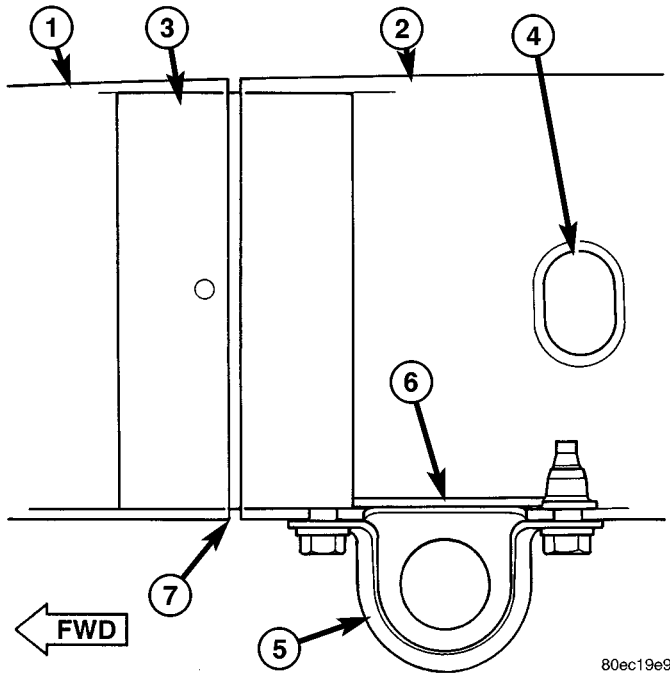


Fig. 10 4X2 SLEEVE INSTALLATION

- 1 - REPLACEMENT FRAME TIP
- 2 - FRAME RAIL
- 3 - SERVICE SLEEVE
- 4 - PLP
- 5 - SWAY BAR MOUNTING BRACKET
- 6 - TAPPING PLATE
- 7 - ROOT WELD GAP

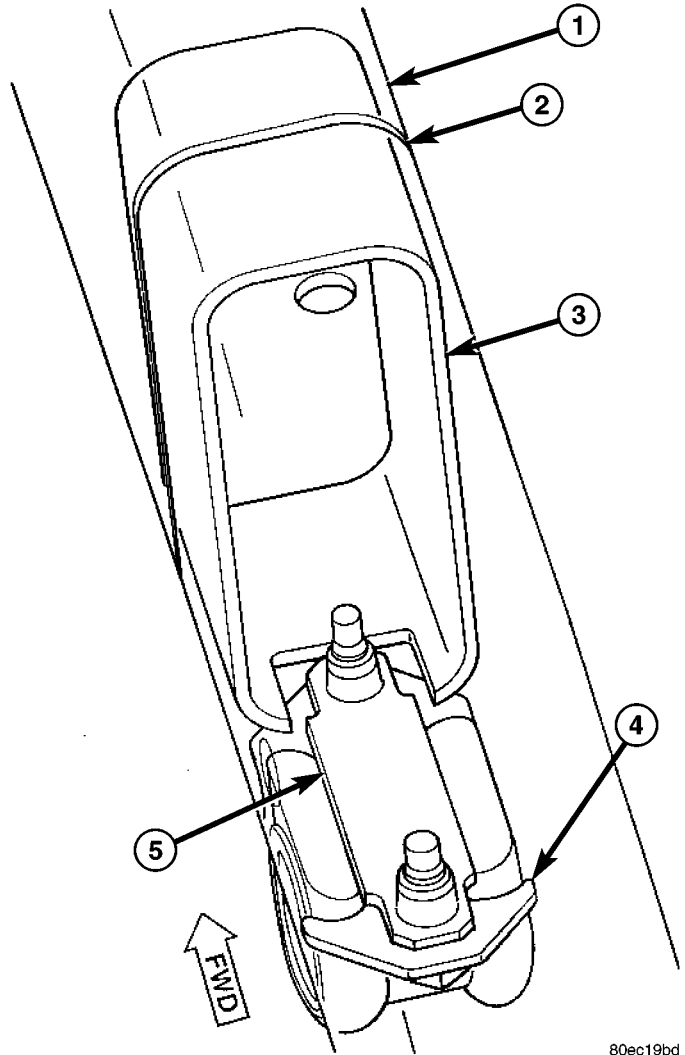


Fig. 11 4X2 SLEEVE INSTALLATION

- 1 - REPLACEMENT FRAME TIP
- 2 - ROOT WELD GAP
- 3 - SERVICE SLEEVE
- 4 - SWAY BAR MOUNTING BRACKET
- 5 - TAPPING PLATE

FRAME (Continued)

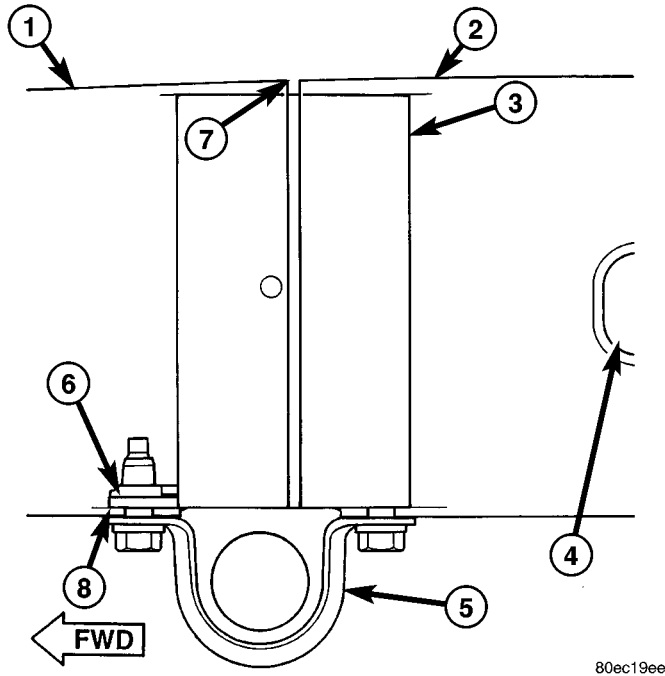


Fig. 12 4X4 TAPPING PLATE/SLEEVE INSTALLATION

- 1 - REPLACEMENT FRAME TIP
- 2 - FRAME RAIL
- 3 - SERVICE SLEEVE
- 4 - PLP
- 5 - SWAY BAR MOUNTING BRACKET
- 6 - TAPPING PLATE
- 7 - ROOT WELD GAP
- 8 - SLEEVE TAB

(19) Apply ring-fillet welds into the ring-fillet weld holes on the replacement frame tip, using the Weld Process Specifications table. (Fig. 14)

(20) Install the upper FESM insulator onto the replacement tip and position the service sleeve/replacement tip into the existing frame rail.

(21) Loosely install the lower FESM insulator and cab mounting bolt.

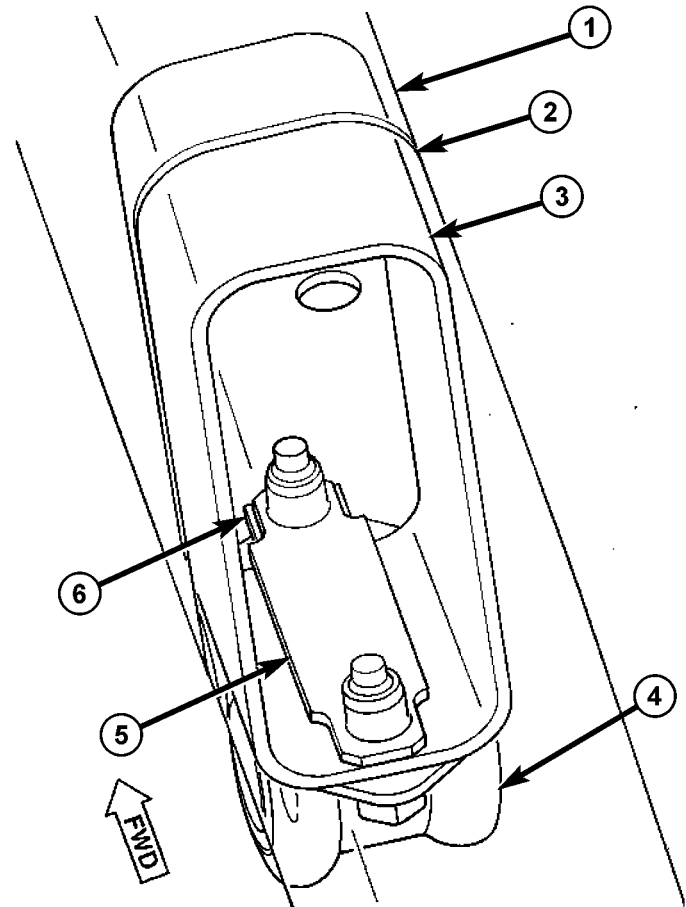


Fig. 13 4X4 TAPPING PLATE/SLEEVE INSTALLATION

- 1 - REPLACEMENT FRAME TIP
- 2 - ROOT WELD GAP
- 3 - SERVICE SLEEVE
- 4 - SWAY BAR MOUNTING BRACKET
- 5 - TAPPING PLATE
- 6 - SLEEVE TAB

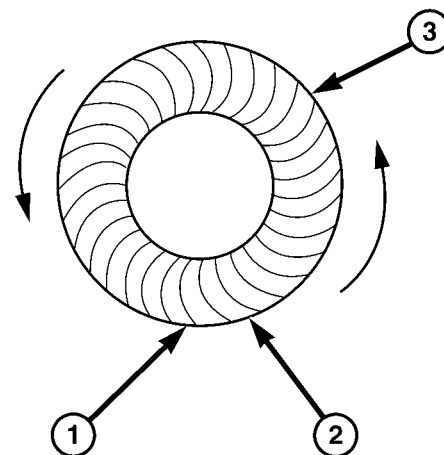


Fig. 14 RING FILLET WELD

- 1 - WELD START LOCATION
- 2 - WELD END LOCATION
- 3 - RING-FILLET WELD

FRAME (Continued)

(22) Using the appropriate measuring equipment, verify the front end sheet metal bracket's location in all three (X,Y, and Z) planes of space, and adjust if required. (Fig. 15)

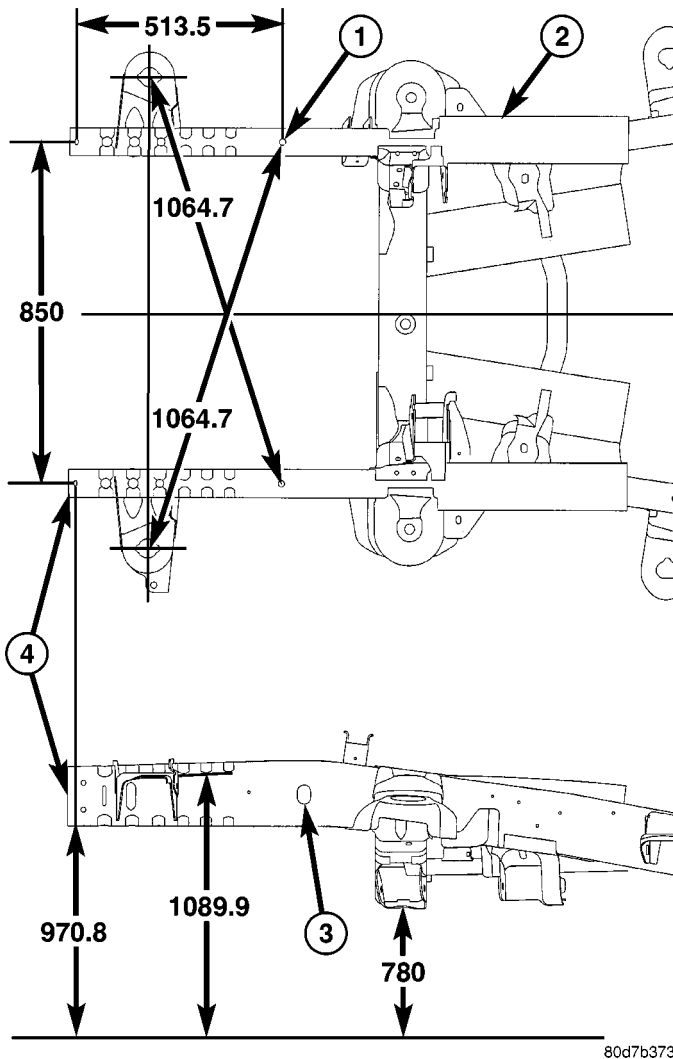


Fig. 15 FRAME TIP DIMENSIONS

NOTE:

All measurements are in mm.

- 1 - PLP POINT
- 2 - FRAME
- 3 - PLP POINT
- 4 - REPLACEMENT FRAME TIP

CAUTION: Shield the surrounding area and components from exposure to the welding spatter and heat.

(23) When correctly fitted and a weld root gap of 4 mm minimum to 6 mm maximum (0.16 in - 0.24 in) is established, tack the ring fillet welds to hold the tip in position, then complete the ring fillet welds.

NOTE: Ring-fillet welds may be filled in with weld material if an improved cosmetic appearance is desired.

(24) Confirm alignment of the replacement frame rail tip. (Fig. 15)

(25) Final welding should be performed in a skip (stitch) type method to minimize the heat buildup and frame distortion, utilizing the Weld Process Specifications at the end of this section. The preferred method is GMAW (MIG).

(a) Apply root pass welds to the root joint one quadrant at a time, switching to the opposite side of the frame for each quadrant. (Fig. 9)

(b) Clean the welds of any flux and other impurities before proceeding with the cover pass welds.

(c) Apply the cover pass welds in the same manner as described above.

(26) Confirm alignment of the replacement frame rail tip. (Fig. 15)

NOTE: Any burned surface coatings will need to be removed prior to application of corrosion preventative coatings.

(27) Dress the welded area and apply corrosion resistant coatings inside and out.

(a) Apply etch-primer to the inside of the frame rail repair area.

(b) Inside the rail, inject a creeping wax based rust inhibitor compound through the existing holes in the frame ensuring 100% coverage including the space between the original frame rail and the reinforcing sleeve.

FRAME (Continued)

(c) Apply a durable top coat to the outside of the repair area.

(28) Tighten the front cab mounting bolt to the FESM bracket to 81 N·m (60 ft. lbs.).

(29) Install the stabilizer bar. (Refer to 2 - SUSPENSION/FRONT/STABILIZER BAR - INSTALLATION)

(30) Install the front bumper. (Refer to 13 - FRAME & BUMPERS/BUMPERS/FRONT BUMPER - INSTALLATION)

(31) Install the wire harness and ground strap if previously removed and install the bolt.

(a) If necessary, re-drill and tap the ground strap mounting hole

(32) Install the front wheelhouse splash shield. (Refer to 23 - BODY/EXTERIOR/FRONT WHEELHOUSE SPLASH SHIELD - INSTALLATION)

CAUTION:

All welds should conform to DaimlerChrysler vehicle engineering process standard "PS 9472".

WELD PROCESS SPECIFICATIONS

WELDING PROCESS	FLUX CORED ARC	GAS METAL ARC (MIG)*	SHIELDED METAL ARC (STICK)
Material Thickness	3.7 mm to 4.2 mm	3.7 mm to 4.2 mm	3.7 mm to 4.2 mm
Electrode Type	Lincoln Electrical Co. Product #: NR-211 MP (Do Not Substitute)	AWS ER70S-3 (Do Not Substitute)	** AWS E 7018
Electrodes Size Inches	0.045 Tubular	0.035 Solid	3/32"
Electrode Stick Out	3/8" - 1/2"	1/2" - 5/8"	N/A
Polarity	Electrode "-" Work Piece "+"	Electrode "+" Work Piece "-"	Electrode "+" Work Piece "-"
Shielding Gas	Self Shielded	75% Ar 25% CO2	Self Shielded
Gas Flow Rate	N/A	25 - 35 CFM	N/A
Wire Feed Speed (inches per minute)	110 - 130 Vertical Down 70 - 90 Flat & Overhead	245 - 250 Vertical Down 210 - 225 Flat & Overhead	N/A
Approximate Amperage			
Vertical	110 - 130	175	85 (3/32" Diameter)
Flat & Overhead	70 - 90	155	90 (3/32" Diameter)
Voltage	15 - 18	19 - 20	N/A
Direction of Welding			
Vertical	Vertical Down Hill (only)	Vertical Down Hill (only)	Vertical - Up Hill (only)
Flat & Overhead	Flat - Push or Drag	Flat - Push or Drag	Flat - Drag

***First choice - Gas Metal Arc Welding Process:**

Butt joints - apply two layers (passes) of weld metal. First pass should only fill approximately ½ the thickness. Vertical position welds - maintain electrode wire at leading edge of weld puddle while traveling down hill to produce maximum penetration into the sleeve. These techniques work for FCAW as well.


****E7018** new electrodes may be exposed to the atmosphere for up to ten hours with no harmful effect. Reconditioning schedules should come from the manufacturer.

FRAME (Continued)

SERVICE SLEEVE ASSEMBLY

NOTE: Two sleeve halves are included with each kit. Modifications as follow, are necessary to create the correct sleeve assembly for each application.

(1) On 4X2 models, the "lower" sleeve is made by cutting off the tab and cutting out a notch in the bottom sleeve portion. Round the corners of the cut out to keep stress cracks from forming. On 4X4 models the "lower" sleeve is used as provided. (Fig. 16)

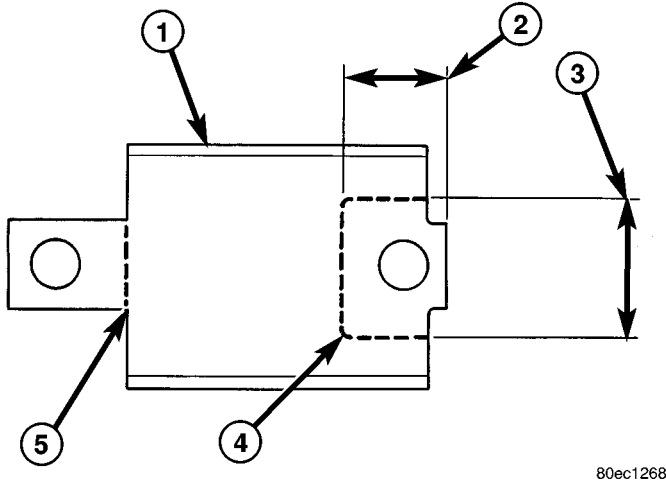


80ec1268

Fig. 16 4X2 LOWER SLEEVE CUT LOCATION

- 1 - SERVICE SLEEVE LOWER HALF
- 2 - CUT DIMENSION 27 mm (1.06 in.)
- 3 - CUT DIMENSION 36.1 mm (1.42 in.)
- 4 - 4X2 CUTOUT
- 5 - FRONT TAB CUT LINE (4X2 ONLY)

(2) On both 4X2 and 4X4 models cut off the front tab on the upper sleeve portion. (Fig. 17)

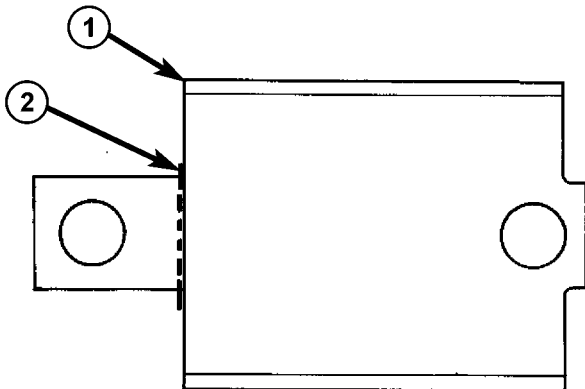

80ec1264

Fig. 17 UPPER SLEEVE CUT LOCATION


- 1 - SERVICE SLEEVE UPPER HALF
- 2 - CUT LOCATION

(3) The sleeve halves are shipped slightly oversized to allow custom fitting to each replacement frame rail tip. It is necessary to grind the mating surfaces to achieve the desired snug fit into the replacement tip (rail tube has increasing height rearward of the cut line). Once the two sleeve halves are fitted, bevel the edges 25° - 30°.

NOTE: Scribing a line 2 mm from the cut edge and then grinding back to the mark will simplify the bevel creation process and accuracy.

(4) Remove any burrs at the beveled edges.

(5) Using the Weld Process Specifications table, weld the two halves of the repair sleeve together. (Fig. 18)

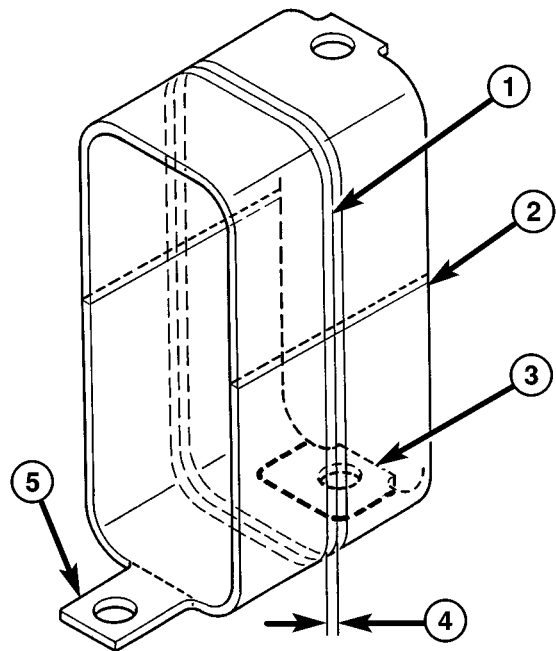

80ec122e

Fig. 18 SERVICE SLEEVE ASSEMBLY

- 1 - CENTERLINE SCRIBE MARK
- 2 - WELD SEAM
- 3 - REAR TAB (4X4 ONLY)
- 4 - SCRIBE LINE LOCATION 2 mm (0.08 in.)
- 5 - FRONT TAB (4X4 ONLY)

(6) Clean the welds of any flux and other impurities and grind smooth before proceeding with the installation of the sleeve.

(7) Find the centerline of the sleeve and scribe a centerline mark. Mark two additional lines 2 mm (0.08 in.) on either side of the centerline mark to help ensure the required 4 mm - 6 mm (0.16 in. - 0.24 in.) weld root gap. (Fig. 18)

FRAME (Continued)

STANDARD PROCEDURE - HYDROFORM FENDER RAIL REPAIR**SAFETY PRECAUTIONS AND WARNINGS**

WARNING: USE EYE PROTECTION WHEN GRINDING OR WELDING METAL, SERIOUS EYE INJURY CAN RESULT.

- **BEFORE PROCEEDING WITH FRAME REPAIR INVOLVING GRINDING OR WELDING, VERIFY THAT VEHICLE FUEL SYSTEM IS NOT LEAKING OR IN CONTACT WITH REPAIR AREA, PERSONAL INJURY CAN RESULT.**

- **DO NOT ALLOW OPEN FLAME OR HEAT AND METAL SPATTER FROM ARC WELDING, TO CONTACT PLASTIC BODY PANELS. FIRE OR EXPLOSION CAN RESULT.**

- **WHEN WELDED FRAME COMPONENTS ARE REPLACED, ENSURE COMPLETE PENETRATION WELD IS ACHIEVED DURING INSTALLATION. IF NOT, DANGEROUS OPERATING CONDITIONS CAN RESULT.**

- **STAND CLEAR OF CABLES OR CHAINS ON PULLING EQUIPMENT DURING FRAME STRAIGHTENING OPERATIONS, PERSONAL INJURY CAN RESULT.**

- **DO NOT VENTURE UNDER A HOISTED VEHICLE THAT IS NOT SUPPORTED ON SAFETY STANDS, PERSONAL INJURY CAN RESULT.**

CAUTION: Do not reuse damaged fasteners, quality of repair would be suspect. Failure to use only production fasteners or fasteners of equivalent hardness can result in loosening or failure. Do not drill holes in top or bottom frame rail flanges, frame rail failure can result. When using heat to straighten frame components do not exceed 566°C (1050°F), metal fatigue can result.

CAUTION: This repair procedure assumes damage to the right or left hydroform fender rail (Fig. 19). Prior to any repairs, the vehicle must be mounted on the appropriate frame repair equipment ("frame rack"), checked with three dimensional measuring equipment, and necessary pull corrections made. If damage exists in the hydroform fender rail, or cab beyond the area covered by this service procedure after dimensional corrections are made, the hydroform must be replaced in its entirety. Refer to 23 - BODY/BODY STRUCTURE/WELD LOCATIONS - SPECIFICATIONS, when replacing the entire hydroform.

(1) Disconnect and isolate the battery negative cable.

(2) Remove the front wheelhouse splash shield. (Refer to 23 - BODY/EXTERIOR/FRONT WHEELHOUSE SPLASH SHIELD - REMOVAL)

(3) Remove the fender. (Refer to 23 - BODY/EXTERIOR/FRONT FENDER - REMOVAL)

(4) Remove the A/C condenser, if required. (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING/A/C CONDENSER - REMOVAL)

(5) Remove the A/C lines, if required. Refer to the Heating and Air Conditioning section of the manual for recommended procedures.

(6) Remove the radiator assembly. (Refer to 7 - COOLING/ENGINE/RADIATOR - REMOVAL)

(7) Remove the air cleaner and support bracket, if required. (Refer to 9 - ENGINE/AIR INTAKE SYSTEM/AIR CLEANER ELEMENT - REMOVAL)

(8) Remove the integrated power module. (Refer to 8 - ELECTRICAL/POWER DISTRIBUTION/INTEGRATED POWER MODULE - REMOVAL)

(9) Remove the bolts and position aside the wire harness and grounds, if required.

(10) Remove the upper radiator crossmember. (Refer to 23 - BODY/EXTERIOR/UPPER RADIATOR CROSSMEMBER - REMOVAL)

(11) Remove the headlamp unit. (Refer to 8 - ELECTRICAL/LAMPS/LIGHTING - EXTERIOR/HEADLAMP UNIT - REMOVAL)

(12) Remove the front cab mount to the Front End Sheet Metal bracket (FESM) bolt.

(13) Remove the bolts attaching the lower radiator crossmember to the hydroform fender rail. (Fig. 19)

CAUTION: Do not use any flame or plasma cutting equipment to cut the frame in this procedure. The inaccurate and high temperatures achieved during flame or plasma cutting will change the metal characteristics and may weaken the frame and/or repair location.


(14) Using a reciprocating saw or equivalent, cut the fender rail and shotgun at a straight and square section of the hydroform and remove.

(15) Smooth and square the cut edges.

(16) Using the damaged structure as a reference cut the service part at the same location as the first cut. Smooth and square the cut edges.

NOTE: The repair structure should butt up to the remaining structure and provide the same overall vehicle geometry.

FRAME (Continued)

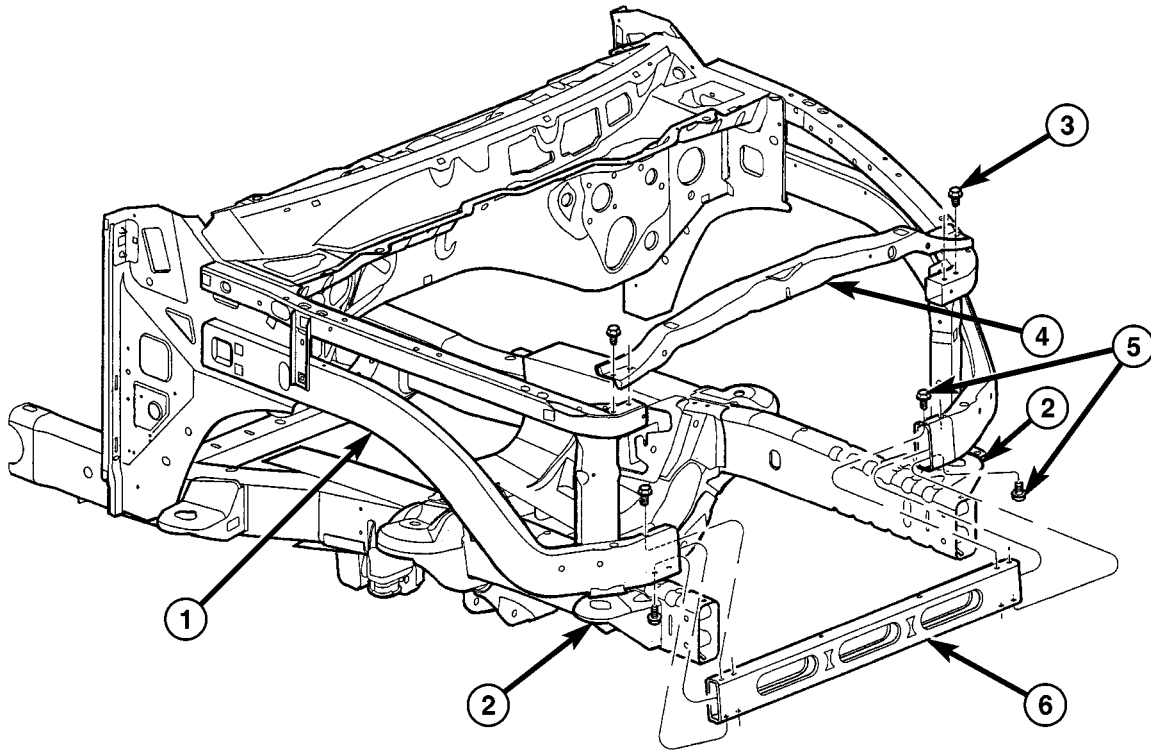

80d7b3b5

Fig. 19 HYDROFORM FENDER RAILS

- 1 - HYDROFORM FENDER RAIL
 2 - FRONT END SHEET METAL BRACKET
 3 - UPPER RADIATOR CROSSMEMBER BOLTS (4)

- 4 - UPPER RADIATOR CROSSMEMBER
 5 - LOWER RADIATOR CROSSMEMBER BOLTS (8)
 6 - LOWER RADIATOR CROSSMEMBER

(17) Fabricate 51 mm (2.0 in.) long repair inserts using scrap from the old structure or the replacement part. It will be necessary to split the inserts on each of their four sides to fit into the hydroform.

(18) Remove any paint or e-coat from the inserts and also to the interior and exterior of the hydroforms.

(19) Cut plug weld holes as described below.

- On the upper rail, cut one 13 mm (0.5 in.) hole on each side of the rail, 25 mm (1.0 in.) from the butt joint of the tubes.
- On the lower rail, cut one 13 mm (0.5 in.) hole on the top and bottom sides of the rail 25 mm (1.0 in.) from the butt joint of the tube.
- On the lower rail, cut two 13 mm (0.5 in.) holes on the inner and outer sides of the rail 25 mm (1.0 in.) from the butt joint of the tube.

CAUTION: Shield the surrounding area and components from exposure to the welding spatter and heat.

(20) Install the insert 1" into the replacement part and tack into place with a weld.

(21) Insert the service part into place and using the appropriate measuring equipment, verify the

front end sheet metal bracket's location in all three (X,Y, and Z) planes of space. (Fig. 20)

(22) Complete all 360° plug welds.

NOTE: Before the final welding, use three dimensional measuring equipment to ensure the part is in the correct location. Verify that tap plate extrusion at the bottom of the vertical post lines up with the isolator and hole in the frame perch mount. Also ensure the lower radiator closure tube is bolted into the forward shotgun ends.

(23) Complete welding by making a 360° butt weld around the fender rails.


(24) Metal finish the exposed welds on the hydroforms.

(25) Dress the welded area and apply corrosion resistant coatings inside and out.

(a) Inside the rail, inject a creeping wax based rust inhibitor compound to the inside of the hydroforms ensuring 100% coverage including the mating face between the fender rail sections and insert such that corrosion protection is restored in the internal cavity.

(b) Apply a durable top coat to the outside of the repair area.

FRAME (Continued)

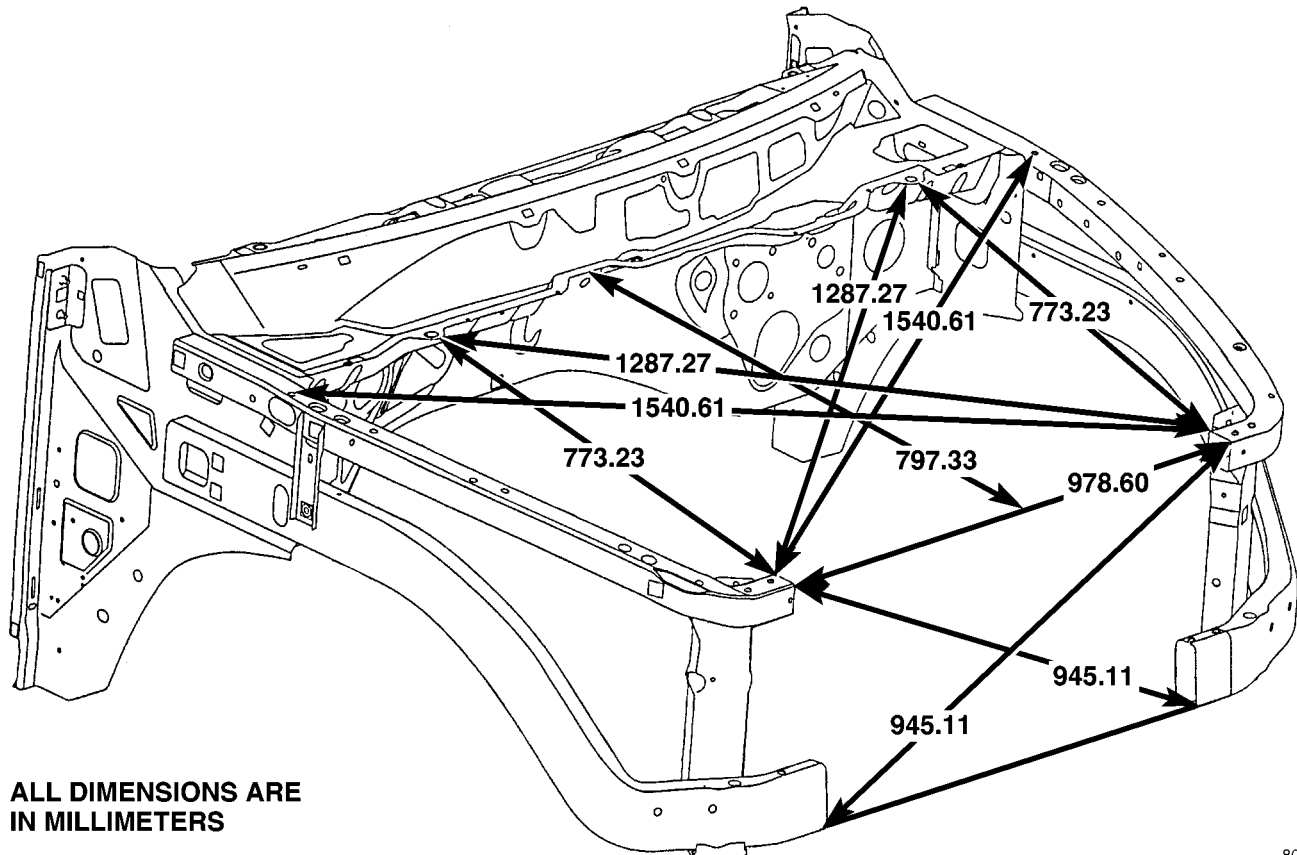

80c62482

Fig. 20 ENGINE COMPARTMENT/FRONT STRUCTURE

(26) Install the front cab mount bolt if previously removed and tighten to 81 N·m (60 ft. lbs.).

(27) Install the lower radiator crossmember bolts and tighten to 28 N·m (21 ft. lbs.).

(28) Install the headlamp unit. (Refer to 8 - ELECTRICAL/LAMPS/LIGHTING - EXTERIOR/HEADLAMP UNIT - INSTALLATION)

(29) Install the upper radiator crossmember. (Refer to 23 - BODY/EXTERIOR/UPPER RADIATOR CROSSMEMBER - INSTALLATION)

(30) Install the wire harness and ground if previously removed and install the bolts.

(31) Install the integrated power module, if previously removed. (Refer to 8 - ELECTRICAL/POWER DISTRIBUTION/INTEGRATED POWER MODULE - INSTALLATION)

(32) Install the air cleaner bracket and air cleaner, if previously removed. (Refer to 9 - ENGINE/AIR INTAKE SYSTEM/AIR CLEANER ELEMENT - INSTALLATION)

(33) Install the radiator assembly. (Refer to 7 - COOLING/ENGINE/RADIATOR - INSTALLATION)

(34) Install the A/C lines, if previously removed. Refer to the Heating and Air Conditioning section of the manual for the recommended procedures.

(35) Install the A/C condenser, if previously removed. (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING/A/C CONDENSER - INSTALLATION)

(36) Install the fender. (Refer to 23 - BODY/EXTERIOR/FRONT FENDER - INSTALLATION)

(37) Install the front wheelhouse splash shield. (Refer to 23 - BODY/EXTERIOR/FRONT WHEELHOUSE SPLASH SHIELD - INSTALLATION)

(38) Reconnect the battery ground.

FRAME (Continued)

**STANDARD PROCEDURE - REAR FRAME
H-SECTION REPLACEMENT****SAFETY PRECAUTIONS AND WARNINGS**

WARNING: USE EYE PROTECTION WHEN GRINDING OR WELDING METAL, SERIOUS EYE INJURY CAN RESULT.

- BEFORE PROCEEDING WITH FRAME REPAIR INVOLVING GRINDING OR WELDING, VERIFY THAT VEHICLE FUEL SYSTEM IS NOT LEAKING OR IN CONTACT WITH REPAIR AREA, PERSONAL INJURY CAN RESULT.

- DO NOT ALLOW OPEN FLAME OR HEAT AND METAL SPATTER FROM ARC WELDING, TO CONTACT PLASTIC BODY PANELS. FIRE OR EXPLOSION CAN RESULT.

- WHEN WELDED FRAME COMPONENTS ARE REPLACED, ENSURE COMPLETE PENETRATION WELD IS ACHIEVED DURING INSTALLATION. IF NOT, DANGEROUS OPERATING CONDITIONS CAN RESULT.

- STAND CLEAR OF CABLES OR CHAINS ON PULLING EQUIPMENT DURING FRAME STRAIGHTENING OPERATIONS, PERSONAL INJURY CAN RESULT.

- DO NOT VENTURE UNDER A HOISTED VEHICLE THAT IS NOT SUPPORTED ON SAFETY STANDS, PERSONAL INJURY CAN RESULT.

CAUTION: Do not reuse damaged fasteners, quality of repair would be suspect. Failure to use only production fasteners or fasteners of equivalent hardness can result in loosening or failure. Do not drill holes in top or bottom frame rail flanges, frame rail failure can result. When using heat to straighten frame components do not exceed 566°C (1050°F), metal fatigue can result.

CAUTION: This procedure is designed to replace the H-section/spare tire support located at the rear of the frame assembly. Prior to any cutting, the vehicle must be mounted on the appropriate frame repair equipment ("frame rack"), checked with three dimensional measuring equipment, and the necessary pull corrections made. If damage remains in the frame beyond the area covered by this service part after the pull, the frame must be replaced in its entirety.

(1) Disconnect and isolate the battery negative cable.


(2) Remove the cargo box. (Refer to 23 - BODY/EXTERIOR/CARGO BOX - REMOVAL)

(3) Remove the trailer hitch. (Refer to 13 - FRAME & BUMPERS/FRAME/TRAILER HITCH - REMOVAL)

(4) Raise and support the frame so the tires are off floor.

(5) Remove the shock absorbers. (Refer to 2 - SUSPENSION/REAR/SHOCK - REMOVAL)

(6) Remove the rear leaf spring shackle bolts and let the axle rest on the ground. (Fig. 21)

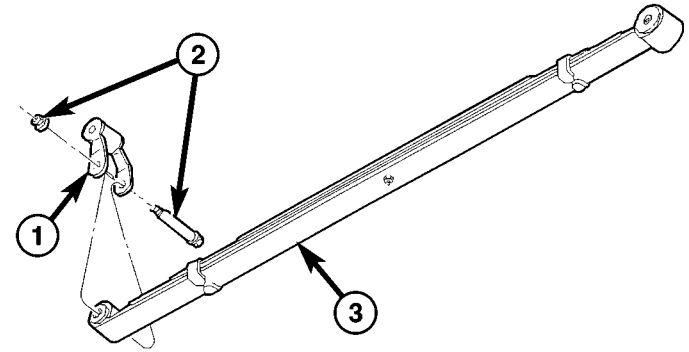


80d77a81

Fig. 21 REAR SPRING

- 1 - SPRING SHACKLE
- 2 - LEAF SPRING EYE BOLT/NUT
- 3 - REAR LEAF SPRING

(7) Remove the spare wheel.

(8) Remove the clip and remove the spare tire winch tube. (Fig. 22)

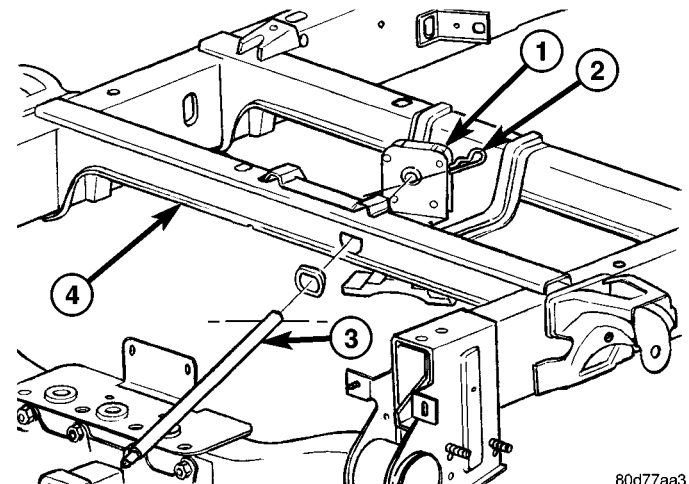

80d77aa3

Fig. 22 SPARE TIRE WINCH TUBE

- 1 - SPARE TIRE WINCH ASSEMBLY
- 2 - HAIR PIN CLIP
- 3 - WINCH TUBE
- 4 - H-SECTION/SPARE WHEEL SUPPORT

FRAME (Continued)

(9) Remove the bolts and remove the spare tire winch. (Fig. 23)

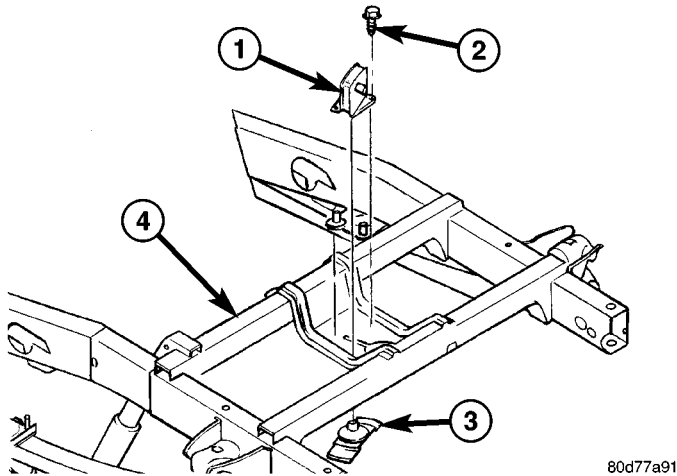


Fig. 23 SPARE TIRE WINCH ASSEMBLY

- 1 - SPARE TIRE WINCH ASSEMBLY
- 2 - BOLTS
- 3 - RETAINER BRACKET
- 4 - H-SECTION/SPARE WHEEL SUPPORT

(10) Position the wire harness forward of the work area.

CAUTION: Do not use any flame or plasma cutting equipment to cut the frame in this procedure. The inaccurate and high temperatures achieved during flame or plasma cutting will change the metal characteristics and may weaken the frame and/or repair location.

(11) Carefully remove the H-section welds using a grinder or equivalent tool.

(12) Remove the H-section and clean any remaining welds from the frame.

(13) Trial fit the replacement part.

(14) Remove all e-coat from within 25 mm (1.0 in.) of the weld area.

(15) Using the appropriate measuring equipment, position the replacement part and verify correct positioning in all three (X,Y, and Z) planes of space.

(Refer to 13 - FRAME & BUMPERS/FRAME - SPECIFICATIONS - FRAME DIMENSIONS)

CAUTION: Shield the surrounding area and components from exposure to the welding spatter and heat.

(16) Weld the replacement H-section into position. The welding should be performed in a skip (stitch) type method to minimize the heat buildup following I-CAR or the American Welding Society welding procedures and utilizing the process specifications at the end of this section. Refer to the Weld Process Specifications welding schedule below.

(17) Dress the welded area and apply corrosion resistant coatings inside and out.

(a) Inside the rail, inject a creeping wax based rust inhibitor compound through the existing holes in the frame ensuring 100% coverage including the mating face between the frame and replacement H-section.

(b) Apply a durable top coat to the outside of the repair area.

(18) Position the wiring harness back.

(19) Install the spare tire winch and install the bolts. (Fig. 23)

(20) Tighten the bolts to 41 N·m (30 ft. lbs.).

(21) Install the spare tire winch tube and install the clip. (Fig. 22)

(22) Install the spare tire.

(23) Lift the axle into position and install the rear shackle bolts. (Fig. 21)

(24) Tighten the bolts to 163 N·m (120 ft. lbs.).

(25) Install the lower shock absorber bolts. (Refer to 2 - SUSPENSION/REAR/SHOCK - INSTALLATION)

(26) Install the trailer hitch. (Refer to 13 - FRAME & BUMPERS/FRAME/TRAILER HITCH - INSTALLATION)

(27) Install the cargo box. (Refer to 23 - BODY/EXTERIOR/CARGO BOX - INSTALLATION)

(28) Reconnect the battery ground.

FRAME (Continued)**CAUTION:**

All welds should conform to DaimlerChrysler vehicle engineering process standard "ps 9472".

WELD PROCESS SPECIFICATIONS

WELDING PROCESS	FLUX CORED ARC	GAS METAL ARC (MIG)*	SHIELDED METAL ARC (STICK)
Material Thickness	3.7 mm to 4.2 mm	3.7 mm to 4.2 mm	3.7 mm to 4.2 mm
Electrode Type	Lincoln Electrical Co. Product #: NR-211 MP (Do Not Substitute)	AWS ER70S-3 (Do Not Substitute)	** AWS E 7018
Electrodes Size Inches	.045 Tubular	.035 Solid	3/32"
Electrode Stick Out	3/8" - 1/2"	1/2" - 5/8"	N/A
Polarity	Electrode "-" Work Piece "+"	Electrode "+" Work Piece "-"	Electrode "+" Work Piece "-"
Shielding Gas	Self Shielded	75% Ar 25% CO ₂	Self Shielded
Gas Flow Rate	N/A	25 - 35 CFM	N/A
Wire Feed Speed (inches per minute)	110 - 130 Vertical Down 70 - 90 Flat & Overhead	245 - 250 Vertical Down 210 - 225 Flat & Overhead	N/A
Approximate Amperage			
Vertical	110 - 130	175	85 (3/32" Diameter)
Flat & Overhead	70 - 90	155	90 (3/32" Diameter)
Voltage	15 - 18	19 - 20	N/A
Direction of Welding			
Vertical	Vertical Down Hill (only)	Vertical Down Hill (only)	Vertical - Up Hill (only)
Flat & Overhead	Flat - Push or Drag	Flat - Push or Drag	Flat - Drag

***First choice - Gas Metal Arc Welding Process:**

Butt joints - apply two layers (passes) of weld metal. First pass should only fill approximately 1/2 the thickness. Vertical position welds - maintain electrode wire at leading edge of weld puddle while traveling down hill to produce maximum penetration into the sleeve. These techniques work for FCAW as well.

****E7018** new electrodes may be exposed to the atmosphere for up to ten hours with no harmful effect. Reconditioning schedules should come from the manufacturer.

SPECIFICATIONS**SPECIFICATIONS - FRAME DIMENSIONS**

NOTE: Frame dimensions are listed in metric scale. All dimensions are from center to center of Principal Locating Point (PLP), or from center to center of PLP and fastener location.

VEHICLE PREPARATION

Position the vehicle on a level work surface. Using screw or bottle jacks, adjust the vehicle PLP heights to the specified dimension above a level work surface. Vertical dimensions can be taken from the work surface to the locations indicated were applicable.

INDEX

DESCRIPTION	FIGURE
Frame Dimensional Graphics, Side And Top View	24
140.5 In Wheelbase - Heavy Duty - 2 Wheel Drive	25
140.5 In Wheelbase - Heavy Duty - 4 Wheel Drive	26
160.5 In Wheelbase - Heavy Duty - 2 Wheel Drive	27
160.5 In Wheelbase - Heavy Duty - 4 Wheel Drive	28

FRAME (Continued)

80d5c11c



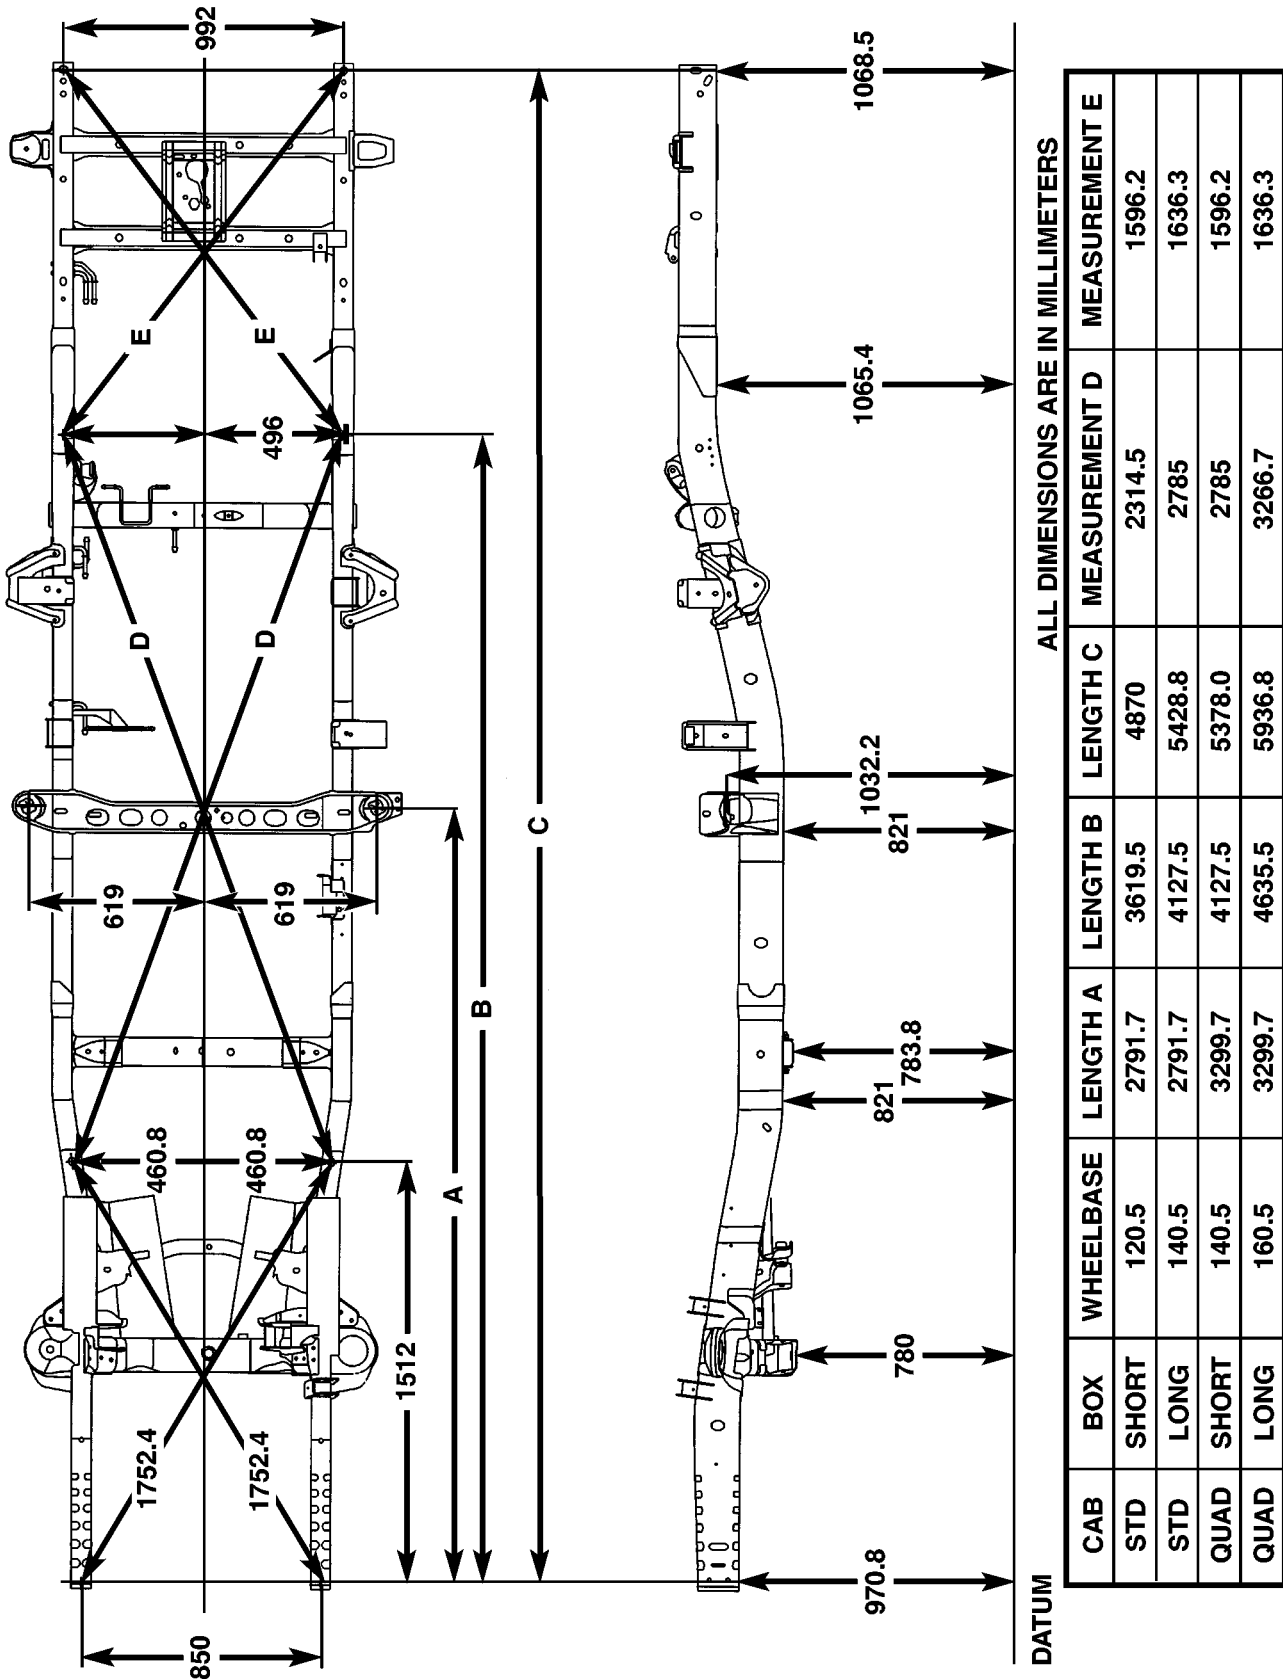


Fig. 24 FRAME DIMENSIONS

FRAME (Continued)

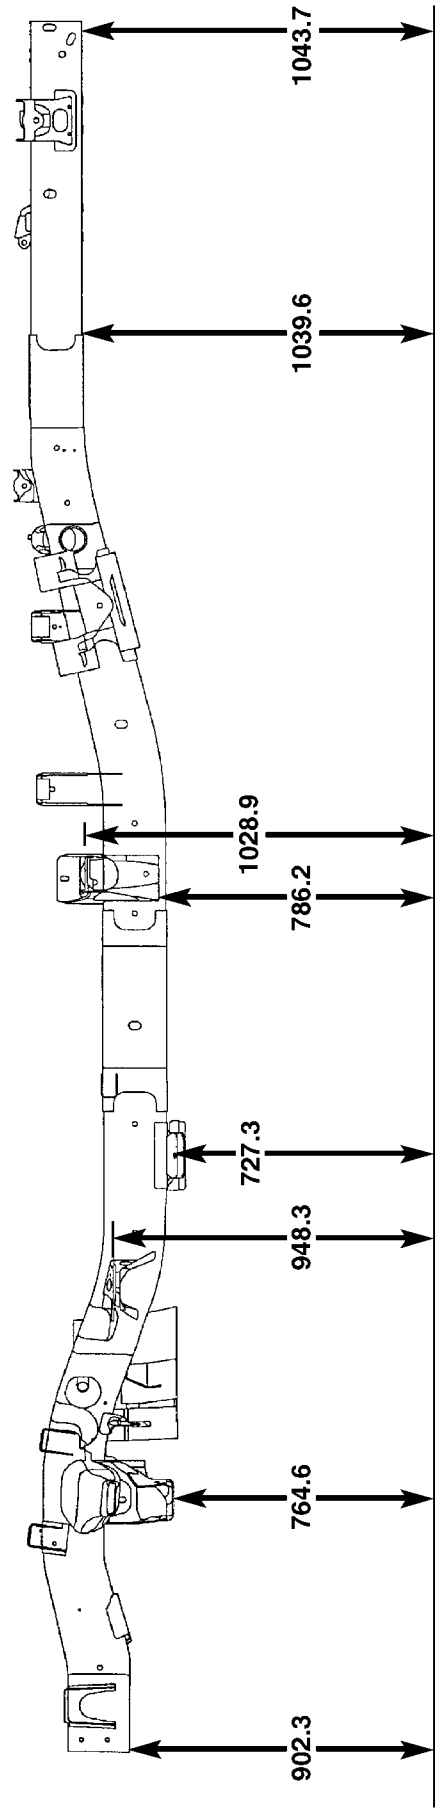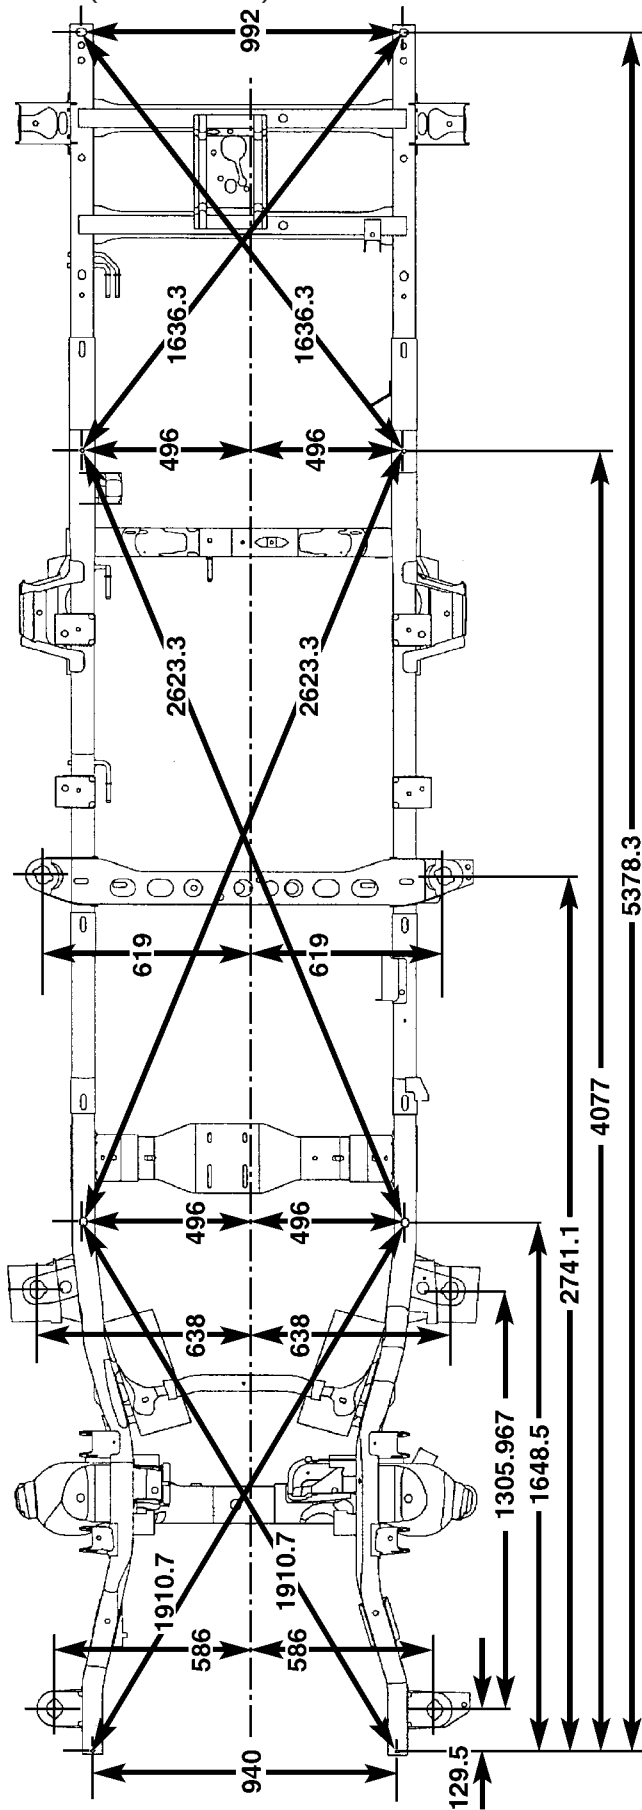

DATUM

ALL DIMENSIONS ARE IN MILLIMETERS

801bfbc

Fig. 25 140.5 IN WHEELBASE - HEAVY DUTY - 2 WHEEL DRIVE

FRAME (Continued)



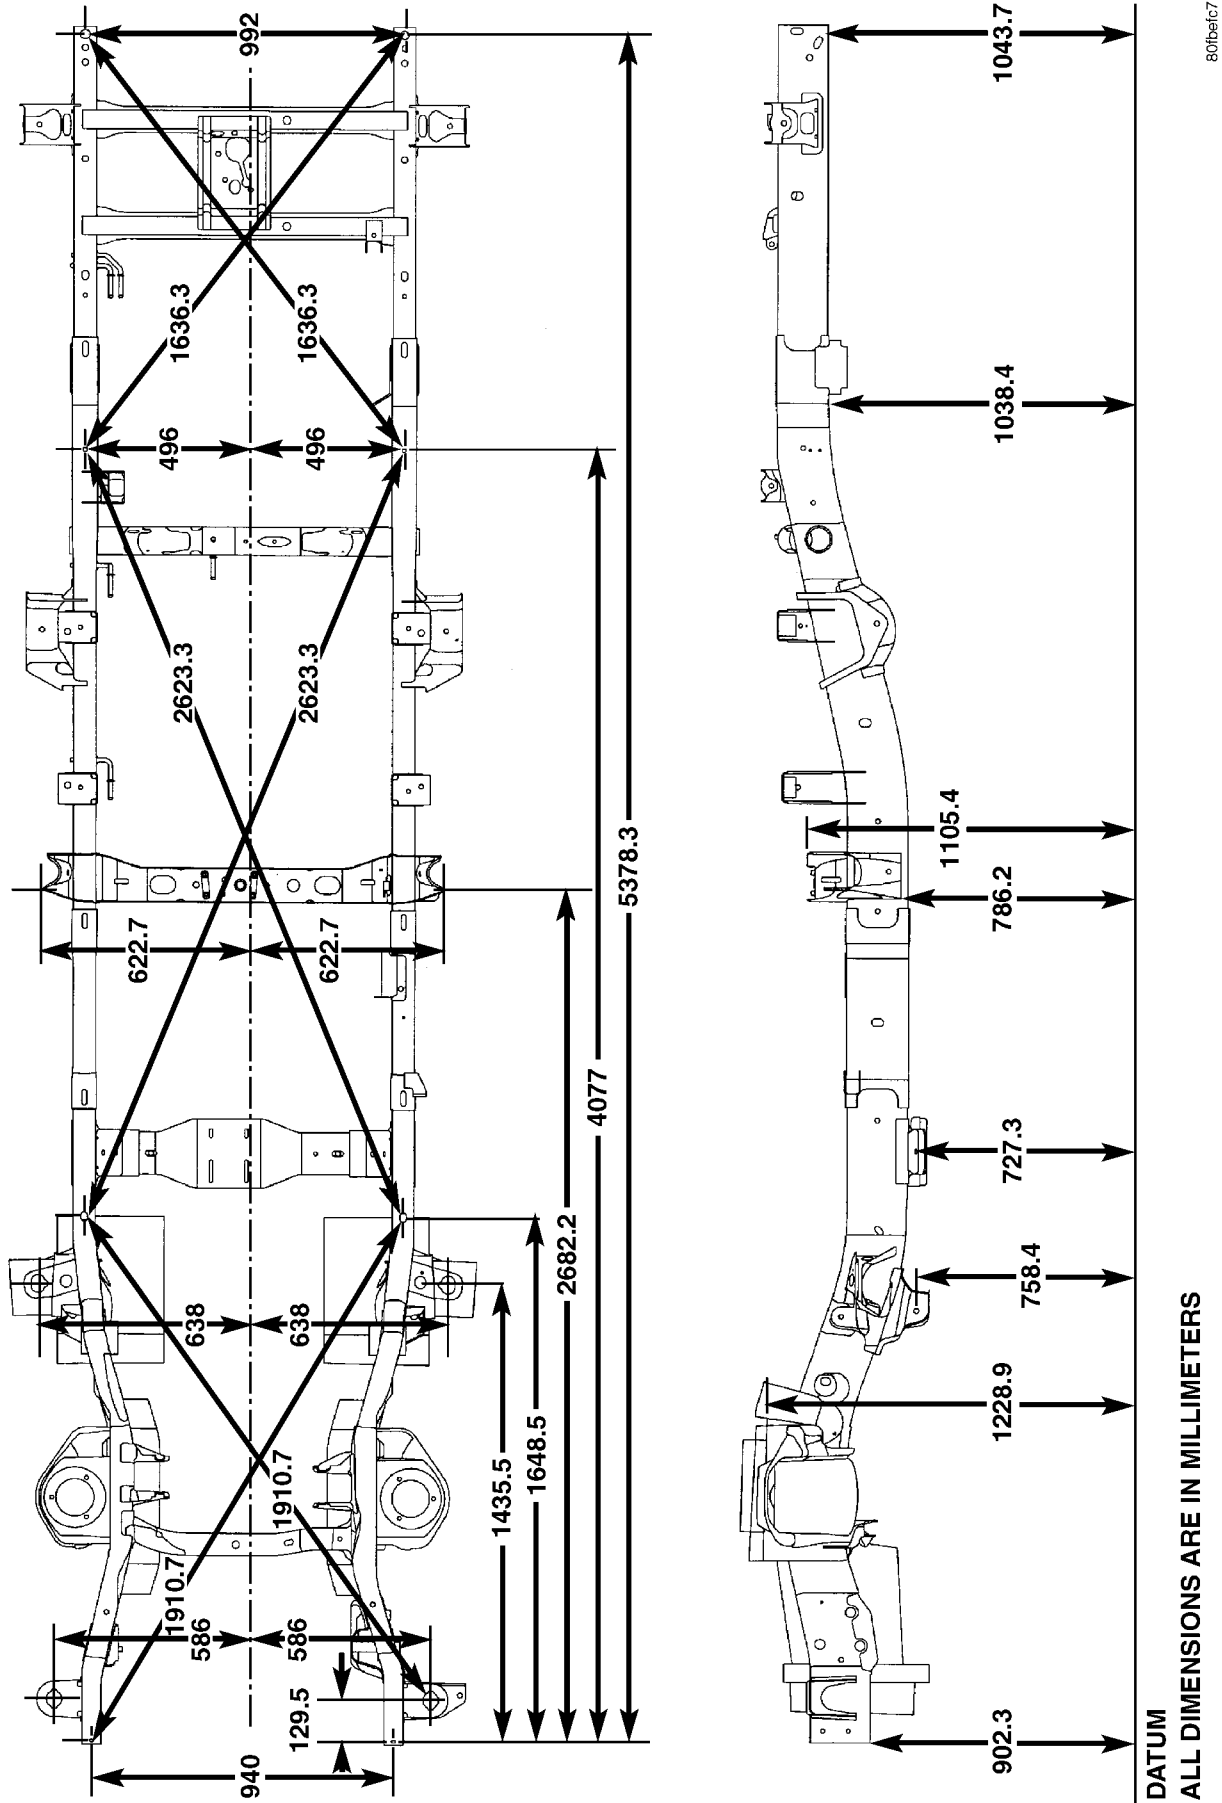


Fig. 26 140.5 IN WHEELBASE - HEAVY DUTY - 4 WHEEL DRIVE

FRAME (Continued)

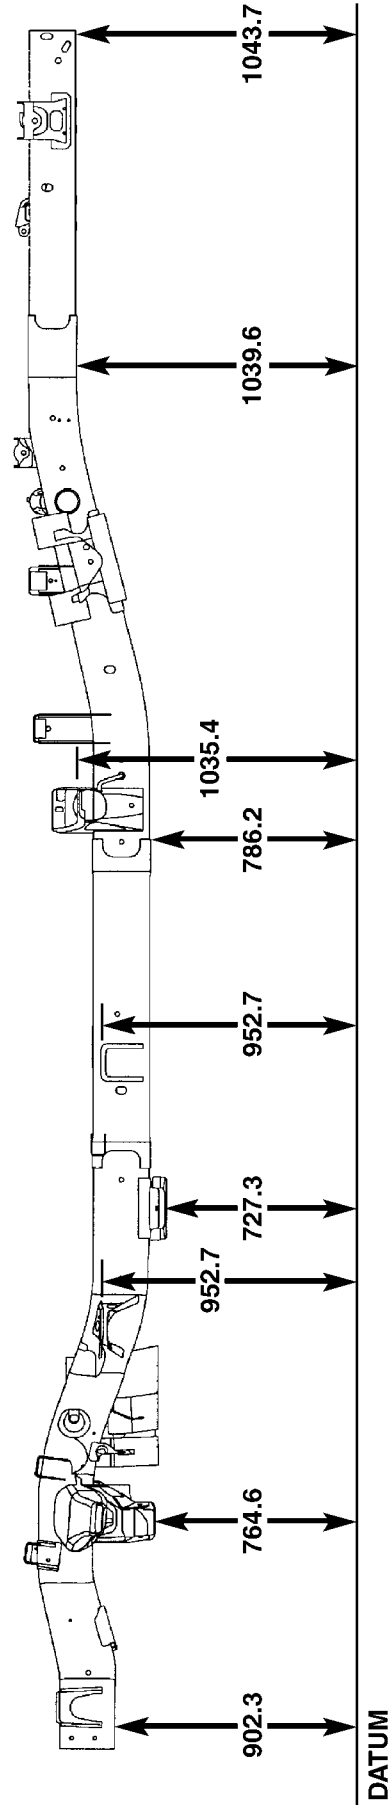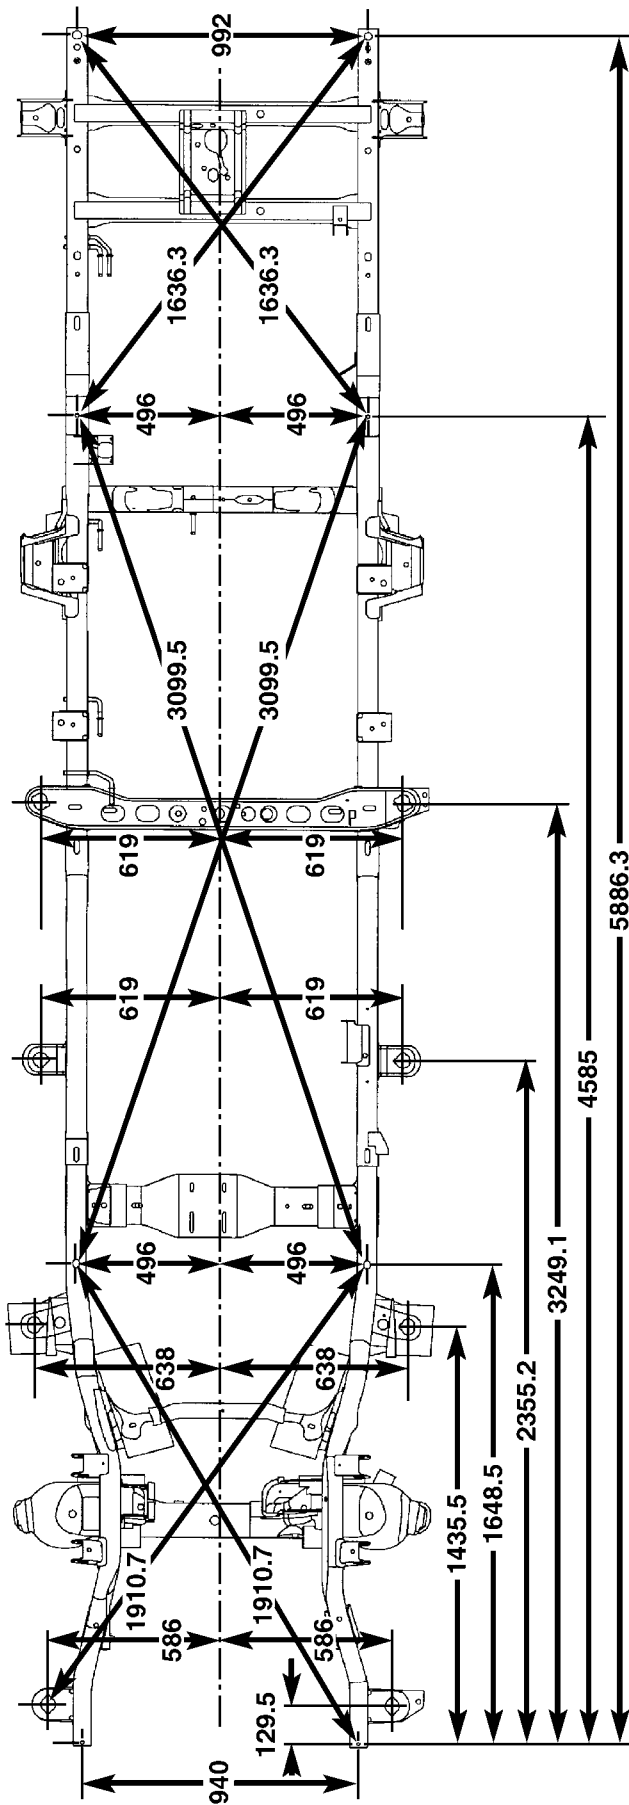

ALL DIMENSIONS ARE IN MILLIMETERS

80fb009

Fig. 27 160.5 IN WHEELBASE - HEAVY DUTY - 2 WHEEL DRIVE

FRAME (Continued)

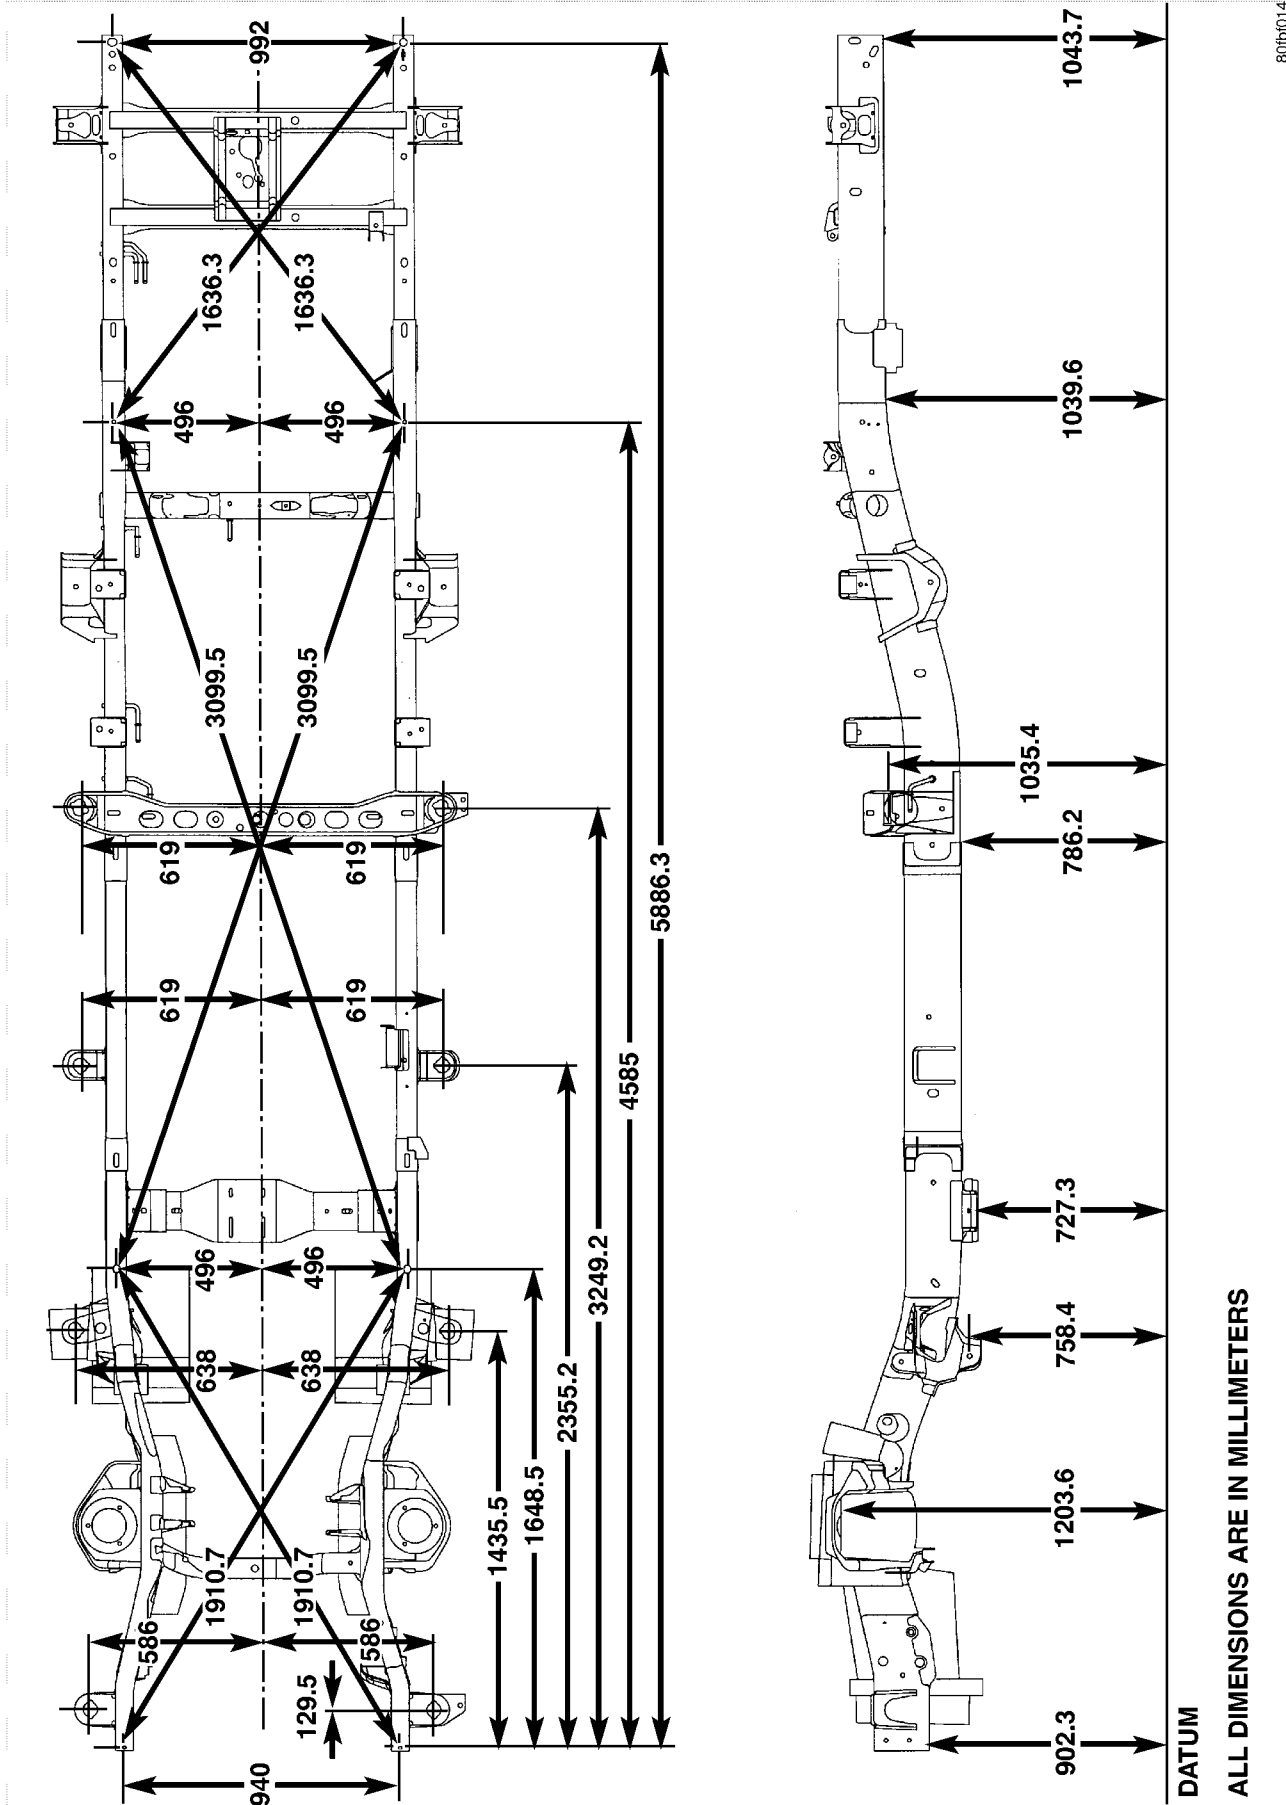


Fig. 28 160.5 IN WHEELBASE - HEAVY DUTY - 4 WHEEL DRIVE

FRAME (Continued)**SPECIFICATIONS - TORQUE****TORQUE SPECIFICATIONS**

DESCRIPTION	N·m	Ft. Lbs.	In. Lbs.
Cab mount bolts	81	60	—
Cargo box bolts	108	80	—
Front crossmember bolts - 2WD	61	45	—
Front crossmember bolts - 4WD	102	75	—
Front skid plate bolts	34	25	—
Lower bumper support bracket bolt	54	40	—
Radiator crossmember bolts - lower	28	21	—
Radiator crossmember bolts - upper	28	21	—
Rear crossmember - 2WD	102	75	—
Rear crossmember - 4WD	102	75	—
Rear spring shackle bolts	163	120	—
Spare tire winch bolts	41	30	—
Trailer hitch reinforcement bracket bolt	170	125	—
Transercase skid plate bolts	34	25	—
Tranercase skid plate crossmember bolts	34	25	—
Transmission mount to crossmember nuts	61	45	—

FRONT CROSSMEMBER**REMOVAL**

(1) Raise and support the vehicle. (Refer to LUBRICATION & MAINTENANCE/HOISTING - STANDARD PROCEDURE)

(2) Remove the front skid plate, if equipped. (Refer to 13 - FRAME & BUMPERS/FRAME/FRONT SKID PLATE - REMOVAL)

(3) Remove the bolts and remove the crossmember. (Fig. 29) or (Fig. 30)

INSTALLATION

(1) Install the crossmember.

(2) Install the bolts;

- On 2WD vehicles, tighten the bolts to 61 N·m (45 ft. lbs.).

- On 4WD vehicles, tighten the bolts to 102 N·m (75 ft. lbs.).


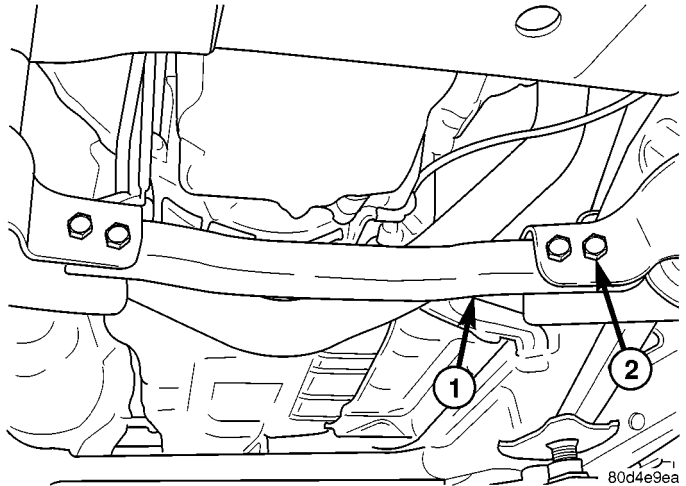


Fig. 29 FRONT CROSSMEMBER - 2WD

1 - CROSSMEMBER
2 - BOLTS (2 PER SIDE)

FRONT CROSSMEMBER (Continued)

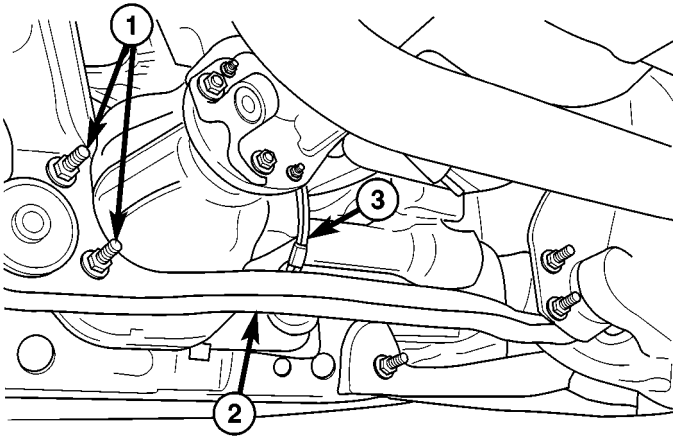

80d4e9ee

Fig. 30 FRONT CROSSMEMBER - 4WD


- 1 - BOLTS (2 PER SIDE)
2 - CROSSMEMBER

(3) Install the front skid plate, if equipped. (Refer to 13 - FRAME & BUMPERS/FRAME/FRONT SKID PLATE - INSTALLATION)

FRONT SKID PLATE

REMOVAL

- (1) Raise and support the vehicle. (Refer to LUBRICATION & MAINTENANCE/HOISTING - STANDARD PROCEDURE)
(2) Remove the bolts. (Fig. 31)
(3) Slide skid plate back off of the crossmember and remove.

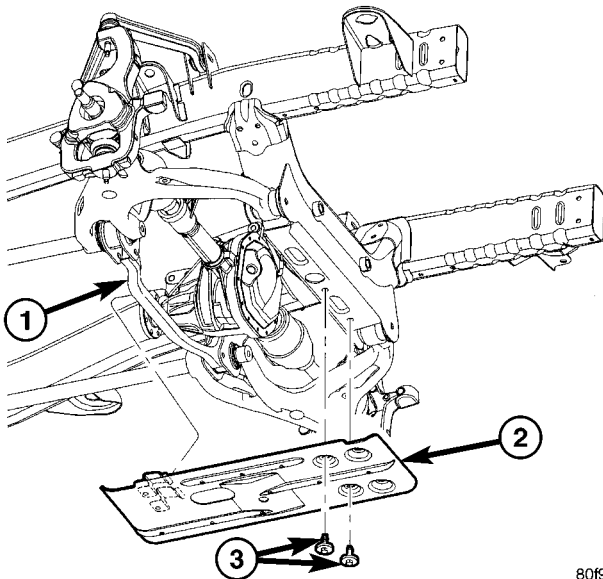

80f9e924

Fig. 31 FRONT SKID PLATE

- 1 - FRONT CROSSMEMBER
2 - FRONT SKID PLATE
3 - BOLTS (2)


INSTALLATION

- (1) Snap the rear tabs over the front crossmember and install the skid plate.
(2) Install the bolts and tighten to 34 N·m (25 ft. lbs.).

TRANSMISSION CROSSMEMBER

REMOVAL


- (1) Raise and support the vehicle. (Refer to LUBRICATION & MAINTENANCE/HOISTING - STANDARD PROCEDURE)
(2) Remove the transfercase skid plate, if equipped. (Refer to 13 - FRAME & BUMPERS/FRAME/TRANSFER CASE SKID PLATE - REMOVAL)
(3) Support the transmission with a suitable lifting device.
(4) Remove the transmission mount nuts. (Fig. 32) or (Fig. 33)
(5) Remove the bolts and remove the crossmember.

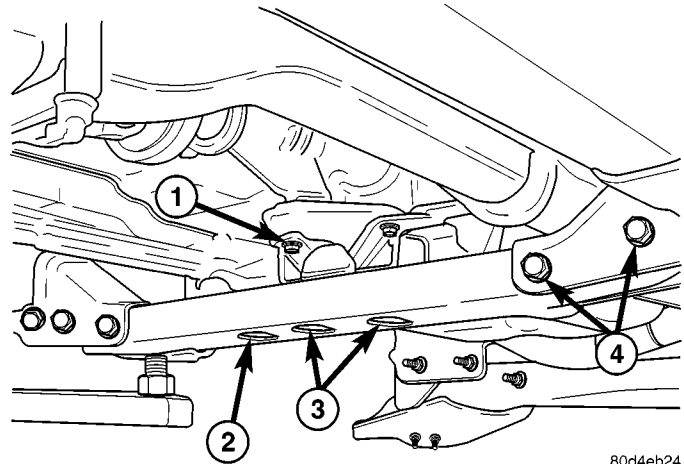

80d4eb24

Fig. 32 REAR CROSSMEMBER - 2WD

- 1 - TRANSMISSION MOUNT
2 - REAR CROSSMEMBER
3 - TRANSMISSION MOUNT NUTS (2)
4 - CROSSMEMBER BOLTS (2 PER SIDE)

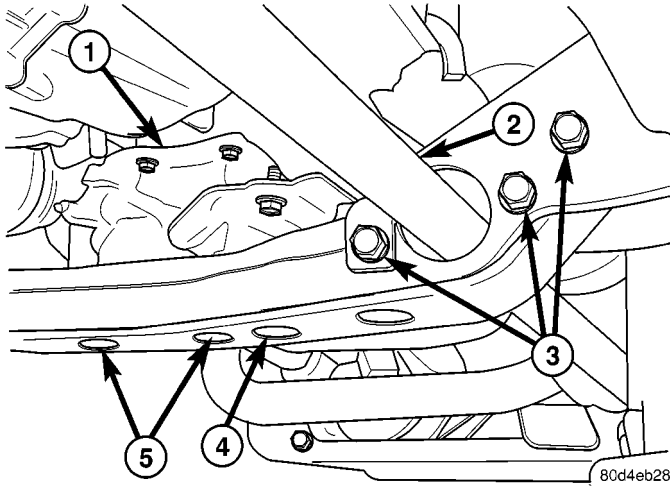TRANSMISSION CROSSMEMBER (Continued)**Fig. 33 REAR CROSSMEMBER - 4WD**

- 1 - TRANSMISSION MOUNT
- 2 - TORSION BAR
- 3 - CROSSMEMBER BOLTS (3 PER SIDE)
- 4 - REAR CROSSMEMBER
- 5 - TRANSMISSION MOUNT NUTS (2)

INSTALLATION


- (1) Install the crossmember and install the bolts.
- (2) Tighten the bolts to 102 N·m (75 ft. lbs.).
- (3) Install the transmission mount nuts and tighten to 61 N·m (45 ft. lbs.).
- (4) Remove the transmission support.
- (5) Install the transercase skid plate. (Refer to 13 - FRAME & BUMPERS/FRAME/TRANSFER CASE SKID PLATE - INSTALLATION)

TRAILER HITCH**REMOVAL**

- (1) Remove the rear bumper. (Refer to 13 - FRAME & BUMPERS/BUMPERS/REAR BUMPER - REMOVAL)
- (2) Remove the hitch bolts. (Fig. 34)
- (3) Disconnect all wire harness support push pins.

(4) Remove the rear two cargo box bolts and loosen the remaining bolts. (Refer to 23 - BODY/EXTERIOR/CARGO BOX - REMOVAL)

(5) Using a suitable lifting device, lift and support the rear of the cargo box and remove the hitch.

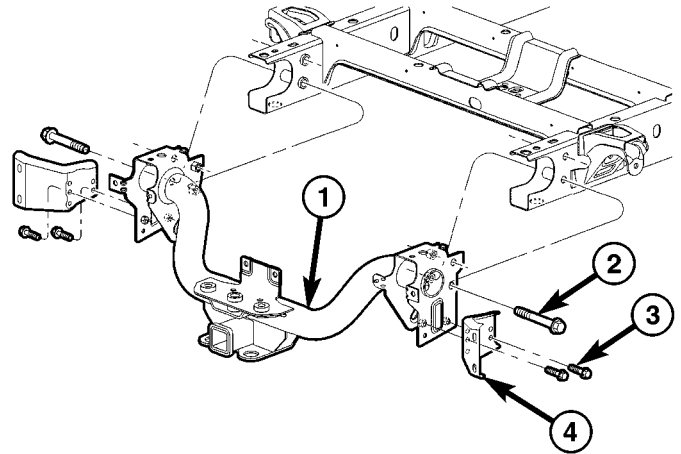**Fig. 34 TRAILER HITCH**

- 1 - HITCH
- 2 - HITCH BOLTS (4)
- 3 - BUMPER BRACKET BOLTS (4)
- 4 - BUMPER SUPPORT BRACKETS


INSTALLATION

- (1) Install the hitch onto the frame rails and make sure the locators on the inside of the hitch brackets are engaged with the holes in the top of the frame rails properly.
- (2) Lower the cargo box and install the rear bolts. (Refer to 23 - BODY/EXTERIOR/CARGO BOX - INSTALLATION)
- (3) Install the hitch bolts and tighten to 170 N·m (125 ft. lbs.).
- (4) Connect all wire harness support push pins.
- (5) Install the rear bumper. (Refer to 13 - FRAME & BUMPERS/BUMPERS/REAR BUMPER - INSTALLATION)

TRANSFER CASE SKID PLATE

REMOVAL

- (1) Raise and support the vehicle. (Refer to LUBRICATION & MAINTENANCE/HOISTING - STANDARD PROCEDURE)
- (2) Support the skid plate and remove the bolts. (Fig. 35)
- (3) Remove the skid plate.
- (4) Support the skid plate crossmember and remove the bolts.
- (5) Remove the skid plate crossmember.

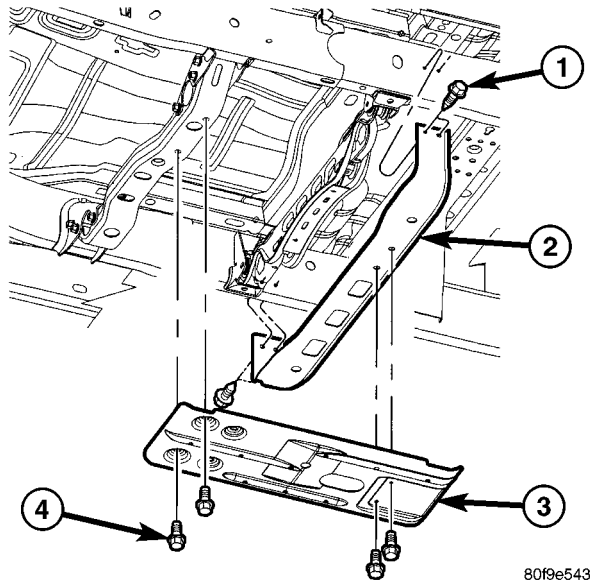**Fig. 35 TRANSFER CASE SKID PLATE**

- 1 - CROSSMEMBER BOLTS (4)
- 2 - SKID PLATE CROSSMEMBER
- 3 - SKID PLATE
- 4 - SKID PLATE BOLTS (4)


INSTALLATION

- (1) Install the skid plate crossmember and install the bolts.
- (2) Tighten the bolts to 34 N·m (25 ft. lbs.).
- (3) Install the skid plate and install the bolts.
- (4) Tighten the bolts to 34 N·m (25 ft. lbs.).

FRONT TOW HOOK ASSEMBLY

REMOVAL

- (1) Remove front bumper. (Refer to 13 - FRAME & BUMPERS/BUMPERS/FRONT BUMPER - REMOVAL)
- (2) Remove the bolts and remove the tow hook assembly. (Fig. 36)

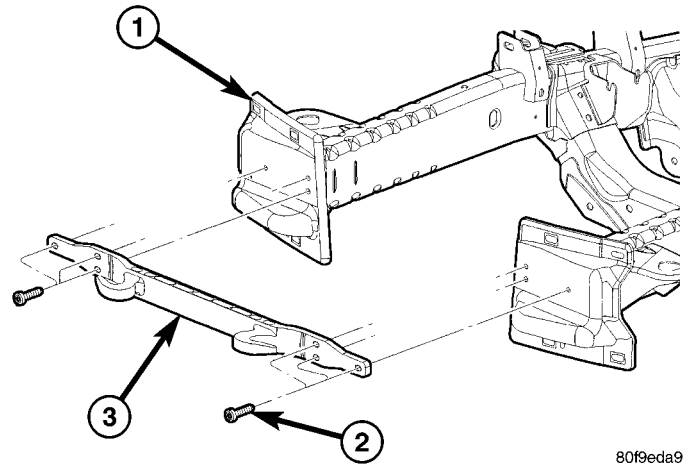**Fig. 36 FRONT TOW HOOK ASSEMBLY**

- 1 - BUMPER CENTER SUPPORT BRACKET
- 2 - BOLTS (6)
- 3 - TOW HOOK ASSEMBLY

INSTALLATION

- (1) Install the tow hook assembly and bolts hand tight.
- (2) Install the front bumper. (Refer to 13 - FRAME & BUMPERS/BUMPERS/FRONT BUMPER - INSTALLATION)
- (3) Tighten the tow hook bolts to 68 N·m (50 ft. lbs.).