



Robex 320LC-9

CRAWLER EXCAVATOR



SERVICE MANUAL

FOREWORD	8
1. Structure	8
2. How To Read The Service Manual	9
3. Conversion Table	10
SECTION 1 GENERAL	16
Group 1 Safety	17
Group 2 Specifications	26
1. Major Component	26
2. Specifications	27
3. Working Range	30
4. Weight	32
5. Lifting Capacities	34
6. Bucket Selection Guide	38
7. Undercarriage	40
8. Specifications For Major Components	42
9. Recommended Oils	46
SECTION 2 STRUCTURE AND FUNCTION	47
Group 1 Pump Device	48
1. Structure	48
2. Function	54
Group 2 Main Control Valve	67
1. Structure	67
2. Hydraulic Circuit (serial No. : -#0421)	71
2. Hydraulic Circuit (serial No. : #0422-)	72
3. Function	73
Group 3 Swing Device	95
1. Structure	95
2. Function	98
Group 4 Travel Device	106
1. Construction	106
2. Specification	107
3. Principle Of Driving	108
Group 5 Rcv Lever	115
1. Structure	115
2. Functions	118
Group 6 Rcv Pedal	122
1. Structure	122
2. Function	124
SECTION 3 HYDRAULIC SYSTEM	128
Group 1 Hydraulic Circuit	129

Group 2 Main Circuit	130
1. Suction And Delivery Circuit	130
2. Return Circuit	131
3. Drain Circuit.	132
Group 3 Pilot Circuit	133
1. Suction, Delivery And Return Circuit	134
2. Safety Valve (safety Lever)	135
3. Boom Priority System.	136
4. Travel Speed Control System	137
5. Main Relief Pressure Change Circuit	138
6. Arm Regeneration Cut System.	139
7. Swing Parking Brake Release	140
Group 4 Single Operation	141
1. Boom Up Operation.	141
2. Boom Down Operation	142
3. Arm In Operation.	143
4. Arm Out Operation	144
5. Bucket In Operation	145
6. Bucket Out Operation.	146
7. Swing Operation	147
8. Travel Forward And Reverse Operation	149
Group 5 Combined Operation	151
1. Outline	151
2. Combined Swing And Boom Up Operation.	152
3. Combined Swing And Arm Operation	153
4. Combined Swing And Bucket Operation.	154
5. Combined Swing And Travel Operation	155
6. Combined Boom And Travel Operation	156
7. Combined Arm And Travel Operation	157
8. Combined Bucket And Travel Operation.	158
9. Combined Boom Up And Bucket Operation	159
SECTION 4 ELECTRICAL SYSTEM	160
Group 1 Component Location	161
1. Location 1.	161
2. Location 2.	162
Memorandum.	165
1. Power Circuit	166
2. Starting Circuit.	168
3. Charging Circuit	170
4. Head And Work Light Circuit.	172
5. Beacon Lamp And Cab Light Circuit	174
6. Wiper And Washer Circuit.	176
Group 3 Electrical Component Specification.	180

Group 4 Connectors	188
1. Connector Destination	188
2. Connection Table For Connectors	192
SECTION 5 MECHATRONICS SYSTEM	211
Group 1 Outline.	212
Group 2 Mode Selection System.	214
1. Power Mode Selection System.	214
2. Work Mode Selection System	215
3. User Mode Selection System	216
Group 3 Automatic Deceleration System.	217
1. When Auto Idle Pilot Lamp On 2. When Auto Idle Pilot Lamp Off	217
Group 4 Power Boost System	218
Group 5 Travel Speed Control System.	219
Group 6 Automatic Warming Up System.	220
Group 7 Engine Overheat Prevention System	221
Group 8 Variable Power Control System.	222
Group 9 Attachment Flow Control System	223
Group 10 Anti-restart System	224
1. Anti-restart Function	224
Group 11 Self-diagnostic System	225
3. Machine Error Codes Table	226
4. Engine Fault Code	229
Group 12 Engine Control System	238
1. Mcu And Engine Ecm (electronic Control Module) 2. Mcu Assembly.	238
Group 13 Eppr Valve.	239
1. Pump Eppr Valve.	239
2. Boom Priority Eppr Valve	242
Group 14 Monitoring System.	244
1. Outline	244
2. Cluster	244
3. Cluster Connector	246
Group 15 Fuel Warmer System	267
1. Specification.	267
2. Operation	267
3. Electric Circuit	267
SECTION 6 TROUBLESHOOTING.	268
Group 1 Before Troubleshooting.	269
1. Introduction	269
2. Diagnosing Procedure	270
Group 2 Hydraulic And Mechanical System	272
1. Introduction	272
2. Drive System	273

3. Hydraulic System	275
4. Swing System	277
5. Travel System	281
6. Attachment System.	286
Group 3 Electrical System	292
1. When Starting Switch Is Turned On, Monitor Panel Display Does Not Appear.	292
3. Battery Charging Warning Lamp Lights Up(starting Switch : On)	294
4. When Coolant Overheat Warning Lamp Lights Up (engine Is Started).	295
5. When Air Cleaner Warning Lamp Lights Up (engine Is Started).	296
6. When Engine Oil Pressure Warning Lamp Lights Up (engine Is Started).	297
7. When Hydraulic Oil Temperature Warning Lamp Lights Up (engine Is Started)	298
8. When Coolant Temperature Gauge Does Not Operate (hcespn 304, Fmi 3 Or 4)	299
9. When Fuel Gauge Does Not Operate(hcespn 301, Fmi 3 Or 4).	300
10. When Safety Solenoid Does Not Operate.	301
11. When Travel Speed 1, 2 Does Not Operate (hcespn 167, Fmi 5 Or 6)	302
12. When Engine Does Not Start (Lights Up Condition)	303
13. When Starting Switch On Does Not Operate	304
Group 4 Mechatronics Systegroup System	305
1. All Actuators Speed Are Slow	305
2. Engine Stall	307
3. Malfunction Of Cluster Or Mode Selection System	309
4. Malfunction Of Accel Dial	310
5. Auto Decel System Does Not Work.	312
6. Malfunction Of Pump 1 Pressure Sensor	314
7. Malfunction Of Pump 2 Pressure Sensor	316
8. Malfunction Of Pump 3 Pressure Sensor	318
9. Malfunction Of Negative 1 Pressure Sensor	320
10. Malfunction Of Negative 2 Pressure Sensor.	322
11. Malfunction Of Swing Pressure Sensor.	324
12. Malfunction Of Arm In/out & Bucket In Pressure Sensor	326
13. Malfunction Of Boom Up Pressure Sensor	328
14. Malfunction Of Power Max	330
15. Malfunction Of Boom Priority Eppr Valve	332
16. Malfunction Of Arm Regeneration Solenoid	333
SECTION 7 MAINTENANCE STANDARD	335
Group 1 Operational Performance Test	336
1. Purpose.	336
2. Terminology.	337
3. Operation For Performance Tests	338
Group 2 Major Component.	356

1. Main Pump	356
2. Main Control Valve	357
3. Swing Device	358
4. Travel Motor.	359
5. Rcv Lever.	360
6. Rcv Pedal.	361
7. Turning Joint	362
8. Cylinder.	363
Group 3 Track And Work Equipment.	364
1. Track	364
2. Work Equipment	369
SECTION 8 DISASSEMBLY AND ASSEMBLY	370
Group 1 Precautions	371
1. Removal Work	371
2. Install Work	372
3. Completing Work.	373
Group 2 Tightening Torque.	374
1. Major Components	374
2. Torque Chart	375
Group 3 Pump Device	377
1. Removal And Install	377
2. Main Pump (1/2)	379
3. Regulator	389
Group 4 Main Control Valve	400
1. Removal And Install Of Motor	400
2. Structure (1/4)	401
3. Disassembly And Assembly	405
Group 5 Swing Device	424
1. Removal And Install Of Motor	424
2. Swing Motor.	425
3. Removal And Install Of Reduction Gear	437
4. Reduction Gear	438
Group 6 Travel Device	448
1. Removal And Install	448
2. Travel Motor 1)	449
2. Disassembling	451
3. Disassembling Reduction Unit	466
6. Assembling Reduction Gear	472
Group 7 Rcv Lever	481
1. Removal And Install	481
2. Disassembly And Assembly	482
Group 8 Turning Joint	495
1. Removal And Install	495

2. Disassembly And Assembly	496
Group 9 Boom, Arm And Bucket Cylinder	500
1. Removal And Install	500
2. Disassembly And Assembly	506
Group 10 Undercarriage	517
1. Track Link	517
2. Carrier Roller	518
3. Track Roller	519
4. Idler And Recoil Spring	520
Group 11 Work Equipment.	529
1. Structure	529
2. Removal And Install	530
SECTION 9 COMPONENT MOUNTING TORQUE	533
Group 1 Introduction Guide.	534
Group 2 Engine System	535
Group 3 Electric System	537
Group 4 Hydraulic System	539
Group 5 Undercarriage.	542
Group 6 Structure	544
Group 7 Work Equipment	548

FOREWORD

1. STRUCTURE

This service manual has been prepared as an aid to improve the quality of repairs by giving the serviceman an accurate understanding of the product and by showing him the correct way to perform repairs and make judgements. Make sure you understand the contents of this manual and use it to full effect at every opportunity.

This service manual mainly contains the necessary technical information for operations performed in a service workshop.

For ease of understanding, the manual is divided into the following sections.

SECTION 1 GENERAL

This section explains the safety hints and gives the specification of the machine and major components.

SECTION 2 STRUCTURE AND FUNCTION

This section explains the structure and function of each component. It serves not only to give an understanding of the structure, but also serves as reference material for troubleshooting.

SECTION 3 HYDRAULIC SYSTEM

This section explains the hydraulic circuit, single and combined operation.

SECTION 4 ELECTRICAL SYSTEM

This section explains the electrical circuit, monitoring system and each component. It serves not only to give an understanding electrical system, but also serves as reference material for trouble shooting.

SECTION 5 MECHATRONICS SYSTEM

This section explains the computer aided power optimization system and each component.

SECTION 6 TROUBLESHOOTING

This section explains the troubleshooting charts correlating **problems** to **causes**.

SECTION 7 MAINTENANCE STANDARD

This section gives the judgement standards when inspecting disassembled parts.

SECTION 8 DISASSEMBLY AND ASSEMBLY

This section explains the order to be followed when removing, installing, disassembling or assembling each component, as well as precautions to be taken for these operations.

SECTION 9 COMPONENT MOUNTING TORQUE

This section shows bolt specifications and standard torque values needed when mounting components to the machine.

The specifications contained in this shop manual are subject to change at any time and without any advance notice. Contact your HYUNDAI distributor for the latest information.

2. HOW TO READ THE SERVICE MANUAL

Distribution and updating

Any additions, amendments or other changes will be sent to HYUNDAI distributors.

Get the most up-to-date information before you start any work.

Filing method


1. See the page number on the bottom of the page.

File the pages in correct order.

2. Following examples shows how to read the page number.

Example 1

2 - 3

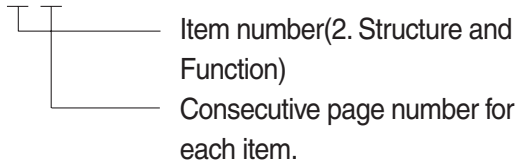

3. Additional pages : Additional pages are indicated by a hyphen(-) and number after the page number. File as in the example.

10 - 4

10 - 4 - 1

10 - 4 - 2

10 - 5

Added pages

Revised edition mark(①②③...)

When a manual is revised, an edition mark is recorded on the bottom outside corner of the pages.

Revisions

Revised pages are shown at the list of revised pages on the between the contents page and section 1 page.

Symbols

So that the shop manual can be of ample practical use, important places for safety and quality are marked with the following symbols.

Symbol	Item	Remarks
	Safety	Special safety precautions are necessary when performing the work.
		Extra special safety precautions are necessary when performing the work because it is under internal pressure.
	Caution	Special technical precautions or other precautions for preserving standards are necessary when performing the work.

3. CONVERSION TABLE

Method of using the Conversion Table

The Conversion Table in this section is provided to enable simple conversion of figures. For details of the method of using the Conversion Table, see the example given below.

Example

1. Method of using the Conversion Table to convert from millimeters to inches

Convert 55mm into inches.

- (1) Locate the number 50 in the vertical column at the left side, take this as ①, then draw a horizontal line from ①.
- (2) Locate the number 5 in the row across the top, take this as ②, then draw a perpendicular line down from ②.
- (3) Take the point where the two lines cross as ③. This point ③ gives the value when converting from millimeters to inches. Therefore, 55mm = 2.165 inches.

2. Convert 550mm into inches.

- (1) The number 550 does not appear in the table, so divide by 10 (Move the decimal point one place to the left) to convert it to 55mm.
- (2) Carry out the same procedure as above to convert 55mm to 2.165 inches.
- (3) The original value (550mm) was divided by 10, so multiply 2.165 inches by 10 (Move the decimal point one place to the right) to return to the original value.
This gives 550mm = 21.65 inches.

Millimeters to inches

②

1mm = 0.03937 in

	0	1	2	3	4	5	6	7	8	9
0		0.039	0.079	0.118	0.157	0.197	0.236	0.276	0.315	0.354
10	0.394	0.433	0.472	0.512	0.551	0.591	0.630	0.669	0.709	0.748
20	0.787	0.827	0.866	0.906	0.945	0.984	1.024	1.063	1.102	1.142
30	1.181	1.220	1.260	1.299	1.339	1.378	1.417	1.457	1.496	1.536
40	1.575	1.614	1.654	1.693	1.732	1.772	1.811	1.850	1.890	1.929
① 50	1.969	2.008	2.047	2.087	2.126	③ 2.165	2.205	2.244	2.283	2.323
60	2.362	2.402	2.441	2.480	2.520	2.559	2.598	2.638	2.677	2.717
70	2.756	2.795	2.835	2.874	2.913	2.953	2.992	3.032	3.071	3.110
80	3.150	3.189	3.228	3.268	3.307	3.346	3.386	3.425	3.465	3.504
90	3.543	3.583	3.622	3.661	3.701	3.740	3.780	3.819	3.858	3.898

Millimeters to inches

1mm = 0.03937in

	0	1	2	3	4	5	6	7	8	9
0		0.039	0.079	0.118	0.157	0.197	0.236	0.276	0.315	0.354
10	0.394	0.433	0.472	0.512	0.551	0.591	0.630	0.669	0.709	0.748
20	0.787	0.827	0.866	0.906	0.945	0.984	1.024	1.063	1.102	1.142
30	1.181	1.220	1.260	1.299	1.339	1.378	1.417	1.457	1.496	1.536
40	1.575	1.614	1.654	1.693	1.732	1.772	1.811	1.850	1.890	1.929
50	1.969	2.008	2.047	2.087	2.126	2.165	2.205	2.244	2.283	2.323
60	2.362	2.402	2.441	2.480	2.520	2.559	2.598	2.638	2.677	2.717
70	2.756	2.795	2.835	2.874	2.913	2.953	2.992	3.032	3.071	3.110
80	3.150	3.189	3.228	3.268	3.307	3.346	3.386	3.425	3.465	3.504
90	3.543	3.583	3.622	3.661	3.701	3.740	3.780	3.819	3.858	3.898

Kilogram to Pound

1kg = 2.2046lb

	0	1	2	3	4	5	6	7	8	9
0		2.20	4.41	6.61	8.82	11.02	13.23	15.43	17.64	19.84
10	22.05	24.25	26.46	28.66	30.86	33.07	35.27	37.48	39.68	41.89
20	44.09	46.30	48.50	50.71	51.91	55.12	57.32	59.5	61.73	63.93
30	66.14	68.34	70.55	72.75	74.96	77.16	79.37	81.57	83.78	85.98
40	88.18	90.39	92.59	94.80	97.00	99.21	101.41	103.62	105.82	108.03
50	110.23	112.44	114.64	116.85	119.05	121.25	123.46	125.66	127.87	130.07
60	132.28	134.48	136.69	138.89	141.10	143.30	145.51	147.71	149.91	152.12
70	154.32	156.53	158.73	160.94	163.14	165.35	167.55	169.76	171.96	174.17
80	176.37	178.57	180.78	182.98	185.19	187.39	189.60	191.80	194.01	196.21
90	198.42	200.62	202.83	205.03	207.24	209.44	211.64	213.85	216.05	218.26

Liter to U.S. Gallon

1 l = 0.2642 U.S.Gal

	0	1	2	3	4	5	6	7	8	9
0		0.264	0.528	0.793	1.057	1.321	1.585	1.849	2.113	2.378
10	2.642	2.906	3.170	3.434	3.698	3.963	4.227	4.491	4.755	5.019
20	5.283	5.548	5.812	6.076	6.340	6.604	6.869	7.133	7.397	7.661
30	7.925	8.189	8.454	8.718	8.982	9.246	9.510	9.774	10.039	10.303
40	10.567	10.831	11.095	11.359	11.624	11.888	12.152	12.416	12.680	12.944
50	13.209	13.473	13.737	14.001	14.265	14.529	14.795	15.058	15.322	15.586
60	15.850	16.115	16.379	16.643	16.907	17.171	17.435	17.700	17.964	18.228
70	18.492	18.756	19.020	19.285	19.549	19.813	20.077	20.341	20.605	20.870
80	21.134	21.398	21.662	21.926	22.190	22.455	22.719	22.983	23.247	23.511
90	23.775	24.040	24.304	24.568	24.832	25.096	25.631	25.625	25.889	26.153

Liter to U.K. Gallon

1 l = 0.21997 U.K.Gal

	0	1	2	3	4	5	6	7	8	9
0		0.220	0.440	0.660	0.880	1.100	1.320	1.540	1.760	1.980
10	2.200	2.420	2.640	2.860	3.080	3.300	3.520	3.740	3.950	4.179
20	4.399	4.619	4.839	5.059	5.279	5.499	5.719	5.939	6.159	6.379
30	6.599	6.819	7.039	7.259	7.479	7.699	7.919	8.139	8.359	8.579
40	8.799	9.019	9.239	9.459	9.679	9.899	10.119	10.339	10.559	10.778
50	10.998	11.281	11.438	11.658	11.878	12.098	12.318	12.528	12.758	12.978
60	13.198	13.418	13.638	13.858	14.078	14.298	14.518	14.738	14.958	15.178
70	15.398	15.618	15.838	16.058	16.278	16.498	16.718	16.938	17.158	17.378
80	17.598	17.818	18.037	18.257	18.477	18.697	18.917	19.137	19.357	19.577
90	19.797	20.017	20.237	20.457	20.677	20.897	21.117	21.337	21.557	21.777

kgf · m to lbf · ft

1 kgf · m = 7.233 lbf · ft

	0	1	2	3	4	5	6	7	8	9
		7.2	14.5	21.7	28.9	36.2	43.4	50.6	57.9	65.1
10	72.3	79.6	86.8	94.0	101.3	108.5	115.7	123.0	130.2	137.4
20	144.7	151.9	159.1	166.4	173.6	180.8	188.1	195.3	202.5	209.8
30	217.0	224.2	231.5	238.7	245.9	253.2	260.4	267.6	274.9	282.1
40	289.3	296.6	303.8	311.0	318.3	325.5	332.7	340.0	347.2	354.4
50	361.7	368.9	376.1	383.4	390.6	397.8	405.1	412.3	419.5	426.8
60	434.0	441.2	448.5	455.7	462.9	470.2	477.4	484.6	491.8	499.1
70	506.3	513.5	520.8	528.0	535.2	542.5	549.7	556.9	564.2	571.4
80	578.6	585.9	593.1	600.3	607.6	614.8	622.0	629.3	636.5	643.7
90	651.0	658.2	665.4	672.7	679.9	687.1	694.4	701.6	708.8	716.1
100	723.3	730.5	737.8	745.0	752.2	759.5	766.7	773.9	781.2	788.4
110	795.6	802.9	810.1	817.3	824.6	831.8	839.0	846.3	853.5	860.7
120	868.0	875.2	882.4	889.7	896.9	904.1	911.4	918.6	925.8	933.1
130	940.3	947.5	954.8	962.0	969.2	976.5	983.7	990.9	998.2	10005.4
140	1012.6	1019.9	1027.1	1034.3	1041.5	1048.8	1056.0	1063.2	1070.5	1077.7
150	1084.9	1092.2	1099.4	1106.6	1113.9	1121.1	1128.3	1135.6	1142.8	1150.0
160	1157.3	1164.5	1171.7	1179.0	1186.2	1193.4	1200.7	1207.9	1215.1	1222.4
170	1129.6	1236.8	1244.1	1251.3	1258.5	1265.8	1273.0	1280.1	1287.5	1294.7
180	1301.9	1309.2	1316.4	1323.6	1330.9	1338.1	1345.3	1352.6	1359.8	1367.0
190	1374.3	1381.5	1388.7	1396.0	1403.2	1410.4	1417.7	1424.9	1432.1	1439.4

kgf/cm² to lbf/in²

1 kgf / cm² = 14.2233 lbf / in²

	0	1	2	3	4	5	6	7	8	9
		14.2	28.4	42.7	56.9	71.1	85.3	99.6	113.8	128.0
10	142.2	156.5	170.7	184.9	199.1	213.4	227.6	241.8	256.0	270.2
20	284.5	298.7	312.9	327.1	341.4	355.6	369.8	384.0	398.3	412.5
30	426.7	440.9	455.1	469.4	483.6	497.8	512.0	526.3	540.5	554.7
40	568.9	583.2	597.4	611.6	625.8	640.1	654.3	668.5	682.7	696.9
50	711.2	725.4	739.6	753.8	768.1	782.3	796.5	810.7	825.0	839.2
60	853.4	867.6	881.8	896.1	910.3	924.5	938.7	953.0	967.2	981.4
70	995.6	1010	1024	1038	1053	1067	1081	1095	1109	1124
80	1138	1152	1166	1181	1195	1209	1223	1237	1252	1266
90	1280	1294	1309	1323	1337	1351	1365	1380	1394	1408
100	1422	1437	1451	1465	1479	1493	1508	1522	1536	1550
110	1565	1579	1593	1607	1621	1636	1650	1664	1678	1693
120	1707	1721	1735	1749	1764	1778	1792	1806	1821	1835
130	1849	2863	1877	1892	1906	1920	1934	1949	1963	1977
140	1991	2005	2020	2034	2048	2062	2077	2091	2105	2119
150	2134	2148	2162	2176	2190	2205	2219	2233	2247	2262
160	2276	2290	2304	2318	2333	2347	2361	2375	2389	2404
170	2418	2432	2446	2460	2475	2489	2503	2518	2532	2546
180	2560	2574	2589	5603	2617	2631	2646	2660	2674	2688
200	2845	2859	2873	2887	2901	2916	2930	2944	2958	2973
210	2987	3001	3015	3030	3044	3058	3072	3086	3101	3115
220	3129	3143	3158	3172	3186	3200	3214	3229	3243	3257
230	3271	3286	3300	3314	3328	3343	3357	3371	3385	3399
240	3414	3428	3442	3456	3470	3485	3499	3513	3527	3542

TEMPERATURE

Fahrenheit-Centigrade Conversion.

A simple way to convert a fahrenheit temperature reading into a centigrade temperature reading or vice verse is to enter the accompanying table in the center or boldface column of figures.

These figures refer to the temperature in either Fahrenheit or Centigrade degrees.

If it is desired to convert from Fahrenheit to Centigrade degrees, consider the center column as a table of Fahrenheit temperatures and read the corresponding Centigrade temperature in the column at the left.

If it is desired to convert from Centigrade to Fahrenheit degrees, consider the center column as a table of Centigrade values, and read the corresponding Fahrenheit temperature on the right.

°C		°F	°C		°F	°C		°F	°C		°F
-40.4	-40	-40.0	-11.7	11	51.8	7.8	46	114.8	27.2	81	117.8
-37.2	-35	-31.0	-11.1	12	53.6	8.3	47	116.6	27.8	82	179.6
-34.4	-30	-22.0	-10.6	13	55.4	8.9	48	118.4	28.3	83	181.4
-31.7	-25	-13.0	-10.0	14	57.2	9.4	49	120.2	28.9	84	183.2
-28.9	-20	-4.0	-9.4	15	59.0	10.0	50	122.0	29.4	85	185.0
-28.3	-19	-2.2	-8.9	16	60.8	10.6	51	123.8	30.0	86	186.8
-27.8	-18	-0.4	-8.3	17	62.6	11.1	52	125.6	30.6	87	188.6
-27.2	-17	1.4	-7.8	18	64.4	11.7	53	127.4	31.1	88	190.4
-26.7	-16	3.2	-6.7	20	68.0	12.8	55	131.0	32.2	90	194.0
-26.1	-15	5.0	-6.7	20	68.0	12.8	55	131.0	32.2	90	194.0
-25.6	-14	6.8	-6.1	21	69.8	13.3	56	132.8	32.8	91	195.8
-25.0	-13	8.6	-5.6	22	71.6	13.9	57	134.6	33.3	92	197.6
-24.4	-12	10.4	-5.0	23	73.4	14.4	58	136.4	33.9	93	199.4
-23.9	-11	12.2	-4.4	24	75.2	15.0	59	138.2	34.4	94	201.2
-23.3	-10	14.0	-3.9	25	77.0	15.6	60	140.0	35.0	95	203.0
-22.8	-9	15.8	-3.3	26	78.8	16.1	61	141.8	35.6	96	204.8
-22.2	-8	17.6	-2.8	27	80.6	16.7	62	143.6	36.1	97	206.6
-21.7	-7	19.4	-2.2	28	82.4	17.2	63	145.4	36.7	98	208.4
-21.1	-6	21.2	-1.7	29	84.2	17.8	64	147.2	37.2	99	210.2
-20.6	-5	23.0	-1.1	35	95.0	21.1	70	158.0	51.7	125	257.0
-20.0	-4	24.8	-0.6	31	87.8	18.9	66	150.8	40.6	105	221.0
-19.4	-3	26.6	0	32	89.6	19.4	67	152.6	43.3	110	230.0
-18.9	-2	28.4	0.6	33	91.4	20.0	68	154.4	46.1	115	239.0
-18.3	-1	30.2	1.1	34	93.2	20.6	69	156.2	48.9	120	248.0
-17.8	0	32.0	1.7	35	95.0	21.1	70	158.0	51.7	125	257.0
-17.2	1	33.8	2.2	36	96.8	21.7	71	159.8	54.4	130	266.0
-16.7	2	35.6	2.8	37	98.6	22.2	72	161.6	57.2	135	275.0
-16.1	3	37.4	3.3	38	100.4	22.8	73	163.4	60.0	140	284.0
-15.6	4	39.2	3.9	39	102.2	23.3	74	165.2	62.7	145	293.0
-15.0	5	41.0	4.4	40	104.0	23.9	75	167.0	65.6	150	302.0
-14.4	6	42.8	5.0	41	105.8	24.4	76	168.8	68.3	155	311.0
-13.9	7	44.6	5.6	42	107.6	25.0	77	170.6	71.1	160	320.0
-13.3	8	46.4	6.1	43	109.4	25.6	78	172.4	73.9	165	329.0
-12.8	9	48.2	6.7	44	111.2	26.1	79	174.2	76.7	170	338.0
-12.2	10	50.0	7.2	45	113.0	26.7	80	176.0	79.4	172	347.0

SECTION 1 GENERAL

Group 1 Safety Hints	1-1
Group 2 Specifications	1-10

SECTION 1 GENERAL


GROUP 1 SAFETY

FOLLOW SAFE PROCEDURE

Unsafe work practices are dangerous. Understand service procedure before doing work; Do not attempt shortcuts.

WEAR PROTECTIVE CLOTHING


Wear close fitting clothing and safety equipment appropriate to the job.

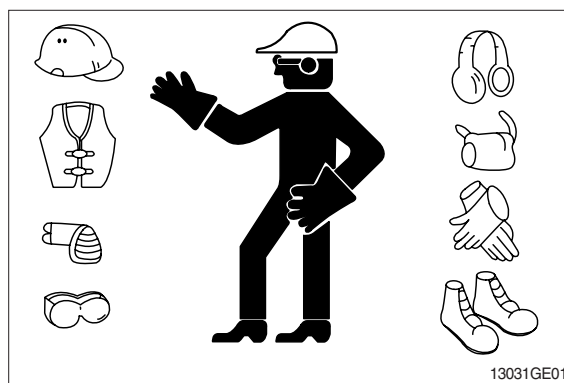

WARN OTHERS OF SERVICE WORK

Unexpected machine movement can cause serious injury.

Before performing any work on the excavator, attach a 「Do Not Operate」 tag on the right side control lever.

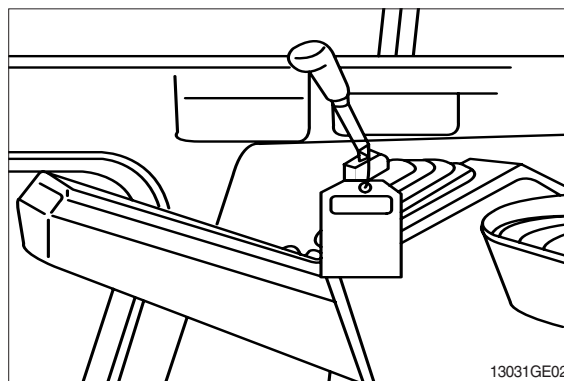


USE HANDHOLDS AND STEPS

Falling is one of the major causes of personal injury.

When you get on and off the machine, always maintain a three point contact with the steps and handrails and face the machine. Do not use any controls as handholds.

Never jump on or off the machine. Never mount or dismount a moving machine.

Be careful of slippery conditions on platforms, steps, and handrails when leaving the machine.

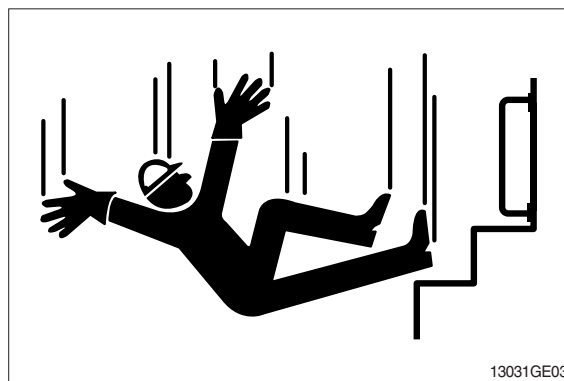


PREPARE FOR EMERGENCIES

Be prepared if a fire starts.


Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

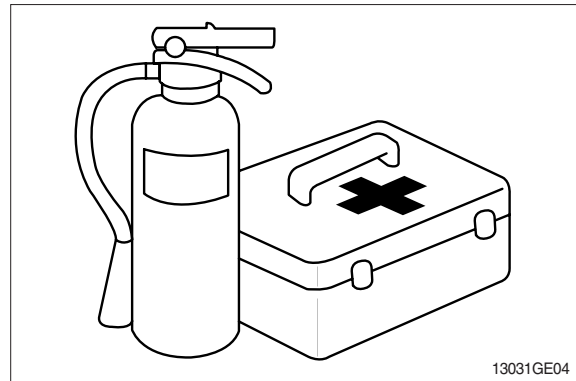

PROTECT AGAINST FLYING DEBRIS


Guard against injury from flying pieces of metal or debris; Wear goggles or safety glasses.

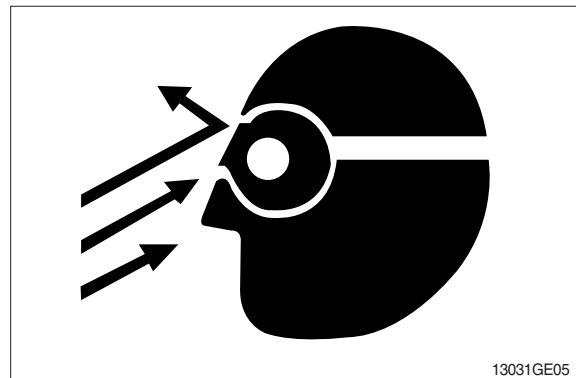

PROTECT AGAINST NOISE

Prolonged exposure to loud noise can cause impairment or loss of hearing.


Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

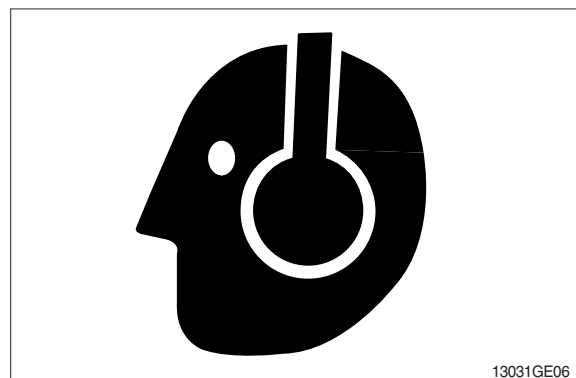

AVOID POWER LINES

Serious injury or death can result from contact with electric lines.


Never move any part of the machine or load closer to electric line than 3m(10ft) plus twice the line insulator length.

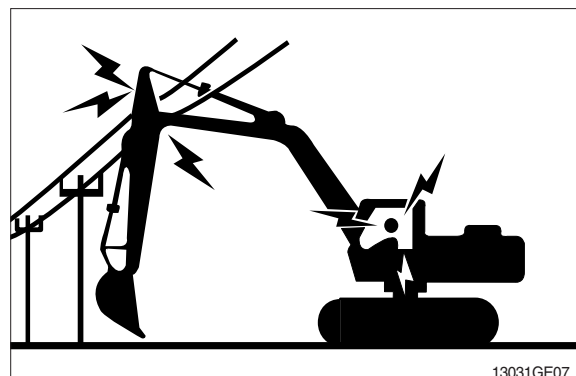

KEEP RIDERS OFF EXCAVATOR

Only allow the operator on the excavator. Keep riders off.

Riders on excavator are subject to injury such as being struck by foreign objects and being thrown off the excavator. Riders also obstruct the operator's view resulting in the excavator being operated in an unsafe manner.

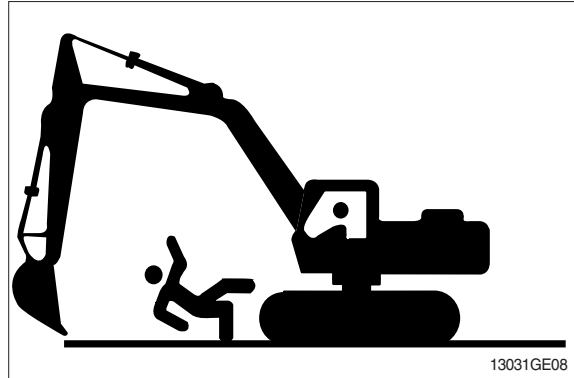


MOVE AND OPERATE MACHINE SAFELY

Bystanders can be run over. Know the location of bystanders before moving, swinging, or operating the machine.

Always keep the travel alarm in working condition. It warns people when the excavator starts to move.

Use a signal person when moving, swinging, or operating the machine in congested areas. Coordinate hand signals before starting the excavator.

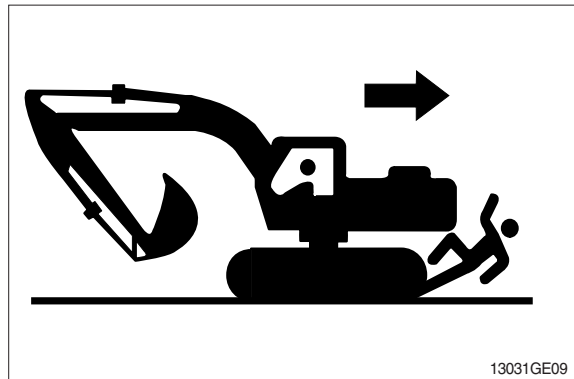

OPERATE ONLY FROM OPERATOR'S SEAT

Avoid possible injury machine damage. Do not start engine by shorting across starter terminals.

NEVER start engine while standing on ground. Start engine only from operator's seat.



PARK MACHINE SAFELY

Before working on the machine:


- Park machine on a level surface.
- Lower bucket to the ground.
- Turn auto idle switch off.
- Run engine at 1/2 speed without load for 2 minutes.
- Turn key switch to OFF to stop engine. Remove key from switch.
- Move pilot control shutoff lever to locked position.
- Allow engine to cool.

SUPPORT MACHINE PROPERLY

Always lower the attachment or implement to the ground before you work on the machine. If you must work on a lifted machine or attachment, securely support the machine or attachment.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load.


Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

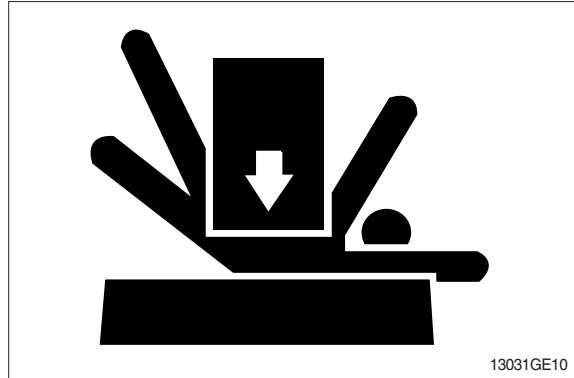

SERVICE COOLING SYSTEM SAFELY


Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands.

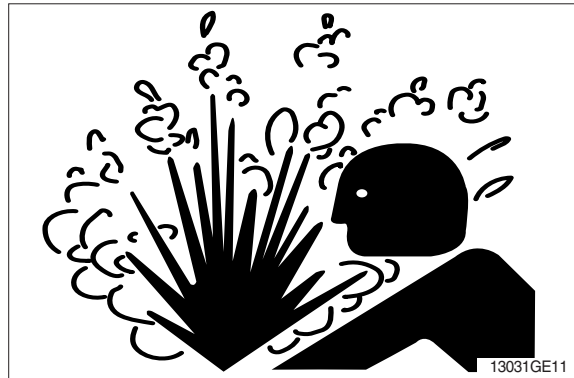

HANDLE FLUIDS SAFELY-AVOID FIRES


Handle fuel with care; It is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks. Always stop engine before refueling machine. Fill fuel tank outdoors.

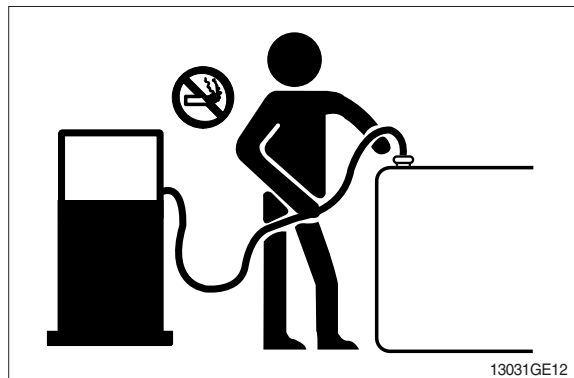

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; They can ignite and burn spontaneously.

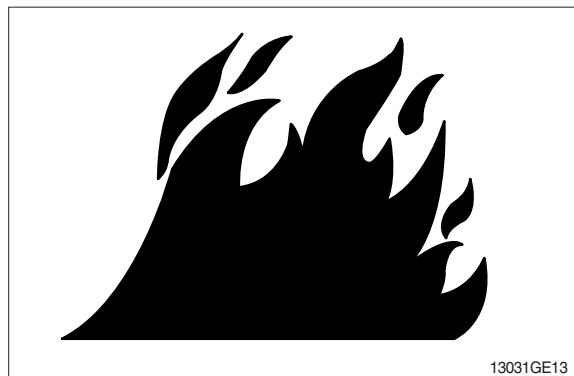

BEWARE OF EXHAUST FUMES

Prevent asphyxiation. Engine exhaust fumes can cause sickness or death.

If you must operate in a building, be positive there is adequate ventilation. Either use an exhaust pipe extension to remove the exhaust fumes or open doors and windows to bring enough outside air into the area.

REMOVE PAINT BEFORE WELDING OR HEATING


Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust.
Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

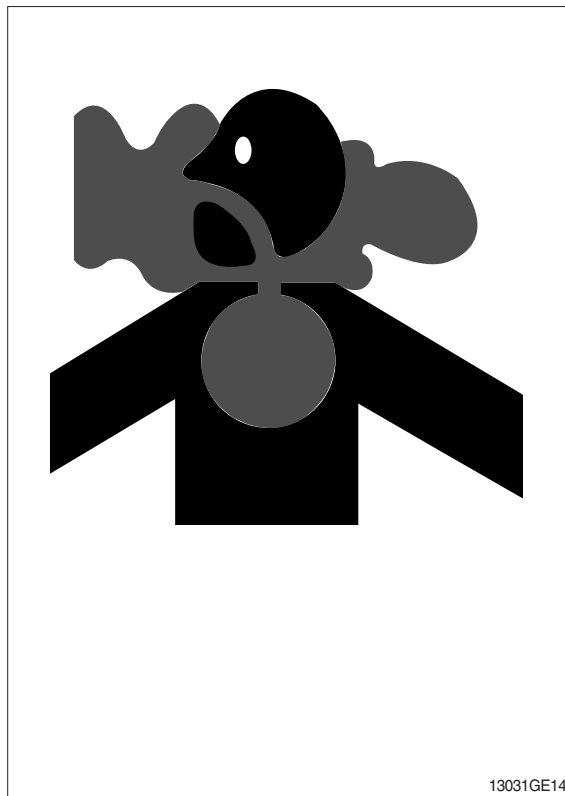

ILLUMINATE WORK AREA SAFELY


Illuminate your work area adequately but safely. Use a portable safety light for working inside or under the machine. Make sure the bulb is enclosed by a wire cage. The hot filament of an accidentally broken bulb can ignite spilled fuel or oil.



SERVICE MACHINE SAFELY

Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.


Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

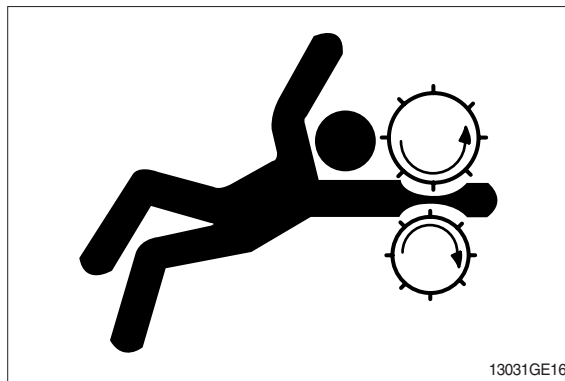

STAY CLEAR OF MOVING PARTS

Entanglements in moving parts can cause serious injury.

To prevent accidents, use care when working around rotating parts.

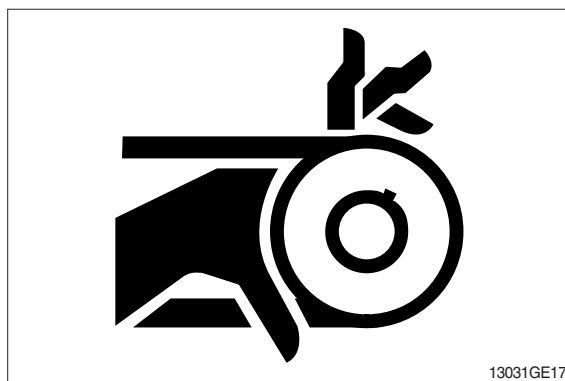


AVOID HIGH PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result.

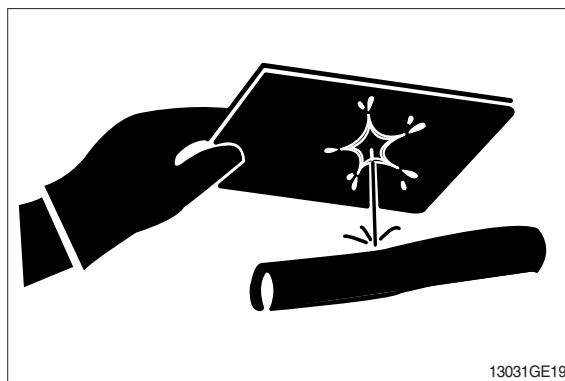

AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials.

Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area. Install fire resisting guards to protect hoses or other materials.



PREVENT BATTERY EXPLOSIONS

Keep sparks, lighted matches, and flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; It may explode. Warm battery to 16°C (60°F).



PREVENT ACID BURNS

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:


1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 10-15 minutes. Get medical attention immediately.

If acid is swallowed:

1. Drink large amounts of water or milk.
2. Then drink milk of magnesia, beaten eggs, or vegetable oil.
3. Get medical attention immediately.

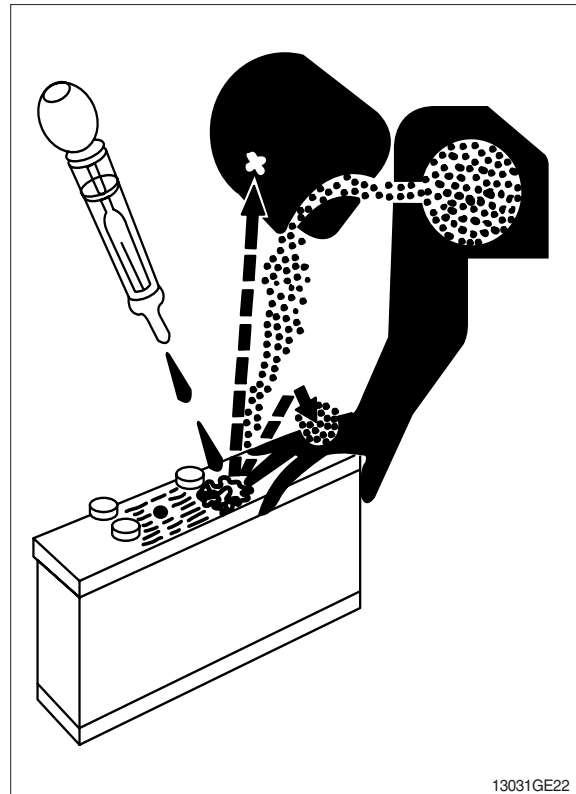


USE TOOLS PROPERLY

Use tools appropriate to the work. Makeshift tools, parts, and procedures can create safety hazards.

Use power tools only to loosen threaded tools and fasteners.

For loosening and tightening hardware, use the correct size tools. DO NOT use U.S. measurement tools on metric fasteners. Avoid bodily injury caused by slipping wrenches.

Use only recommended replacement parts. (See Parts catalogue.)

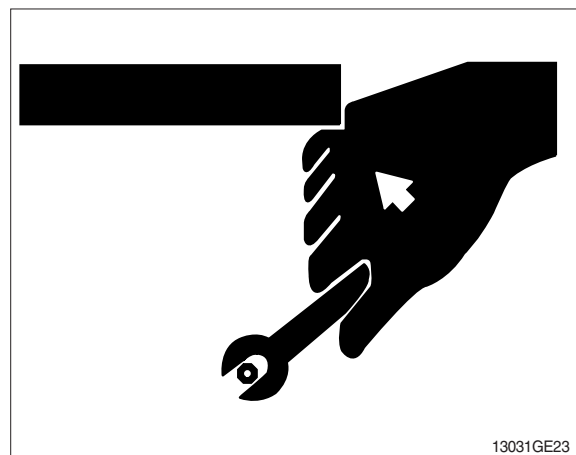


DISPOSE OF FLUIDS PROPERLY

Improperly disposing of fluids can harm the environment and ecology. Before draining any fluids, find out the proper way to dispose of waste from your local environmental agency.


Use proper containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

DO NOT pour oil into the ground, down a drain, or into a stream, pond, or lake. Observe relevant environmental protection regulations when disposing of oil, fuel, coolant, brake fluid, filters, batteries, and other harmful waste.

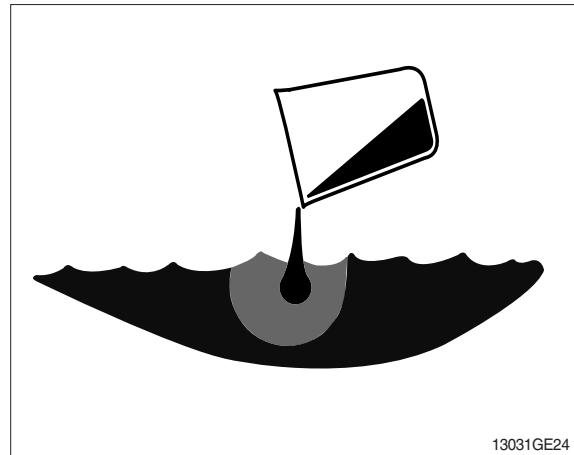

REPLACE SAFETY SIGNS

Replace missing or damaged safety signs. See the machine operator's manual for correct safety sign placement.

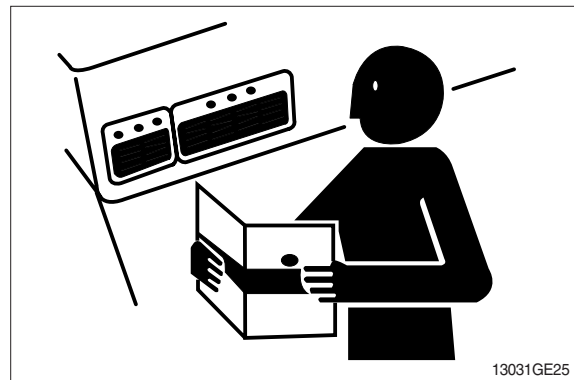


LIVE WITH SAFETY

Before returning machine to customer, make sure machine is functioning properly, especially the safety systems. Install all guards and shields.

GROUP 2 SPECIFICATIONS

1. MAJOR COMPONENT

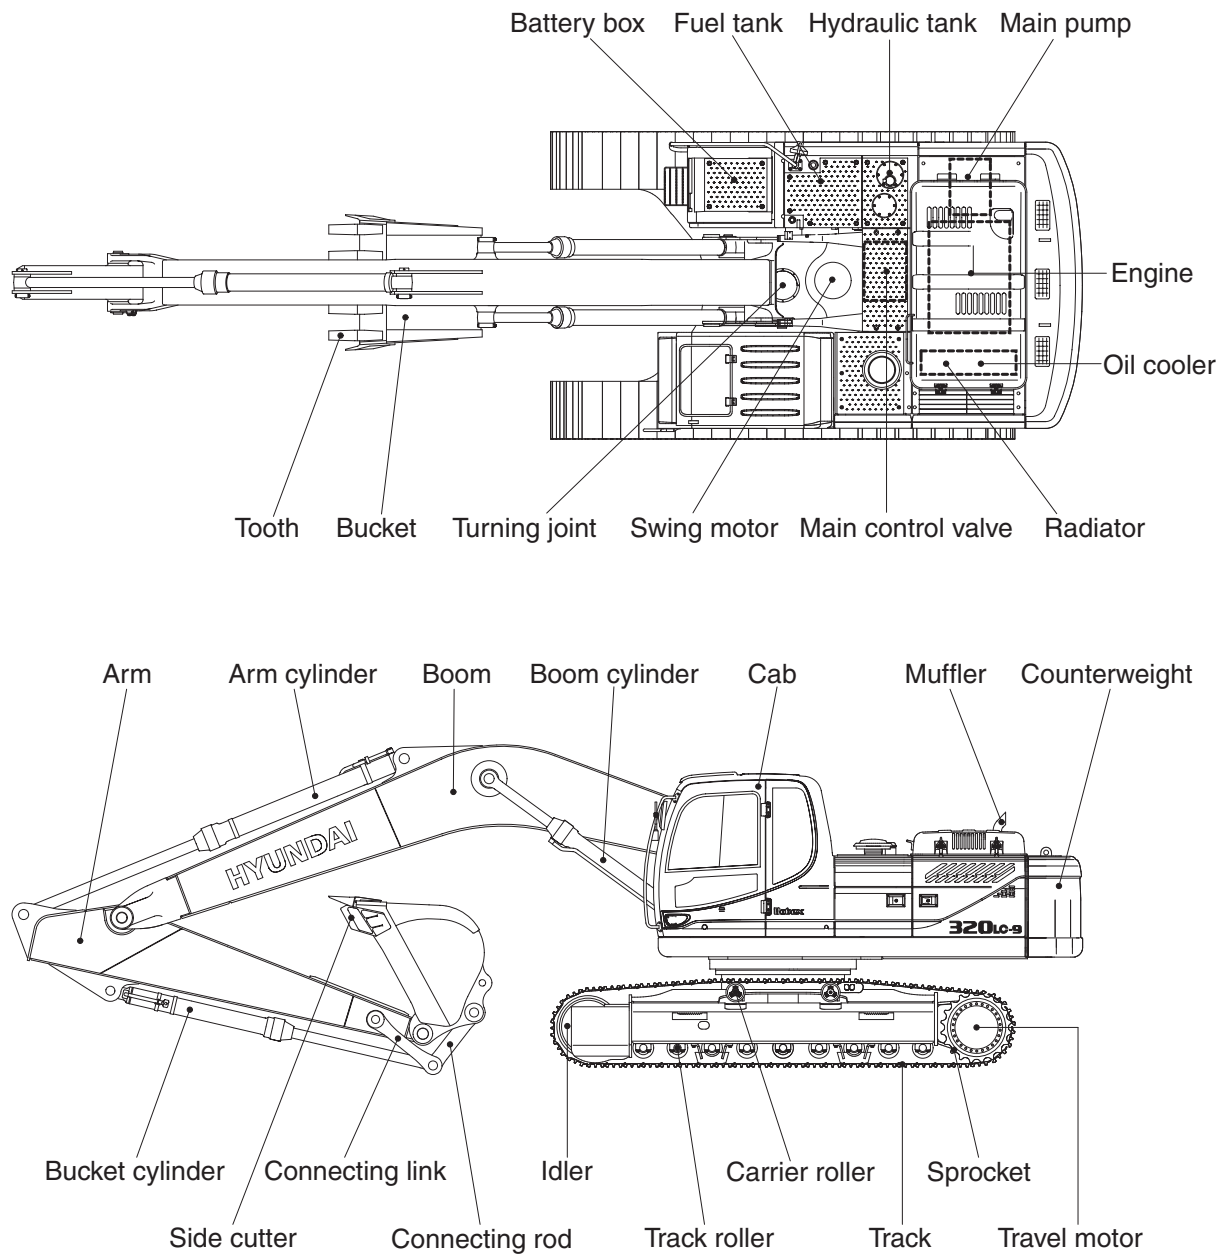


32092SP01A

2. SPECIFICATIONS

1) R320LC-9

· 6.45 m (21' 2") BOOM and 3.20 m (10' 6") ARM

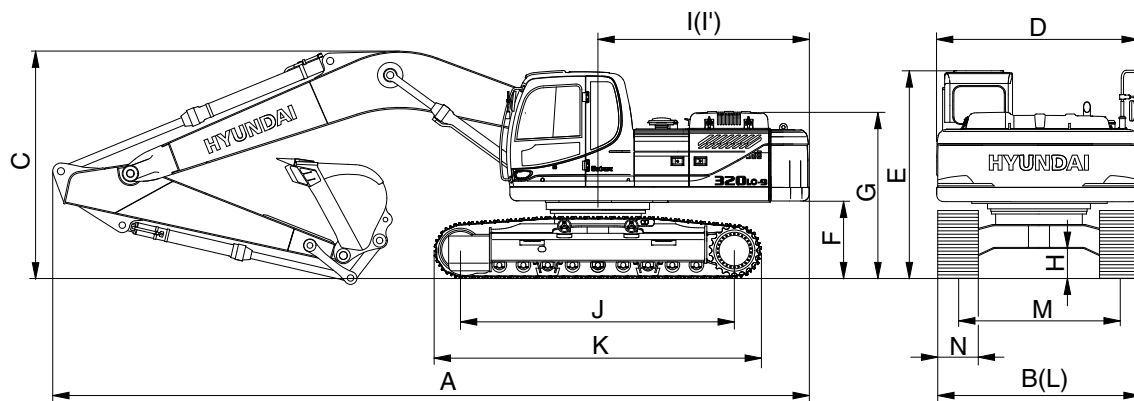


32092SP02

Description		Unit	Specification
Operating weight		kg (lb)	33000 (72750)
Bucket capacity (SAE heaped), standard		m ³ (yd ³)	1.44 (1.88)
Overall length	A	mm (ft-in)	10980 (36' 0")
Overall width, with 600 mm shoe	B		3280 (10' 9")
Overall height	C		3380 (11' 1")
Superstructure width	D		2980 (9' 9")
Overall height of cab	E		3090 (10' 2")
Ground clearance of counterweight	F		1200 (3' 11")
Engine cover height	G		2580 (8' 6")
Minimum ground clearance	H		500 (1' 8")
Rear-end distance	I		3265 (10' 9")
Rear-end swing radius	I'		3330 (10' 11")
Distance between tumblers	J		4030 (13' 3")
Undercarriage length	K		4940 (16' 2")
Undercarriage width	L		3280 (10' 9")
Track gauge	M		2680 (8' 10")
Track shoe width, standard	N		600 (24")
Travel speed (low/high)		km/hr (mph)	3.3/5.5 (2.1/3.4)
Swing speed		rpm	9.2
Gradeability		Degree (%)	35 (70)
Ground pressure (600 mm shoe)		kgf/cm ² (psi)	0.63 (8.96)
Max traction force		kg (lb)	29500 (65040)

2) R320NLC-9

· 6.45 m (21' 2") BOOM and 3.20 m (10' 6") ARM

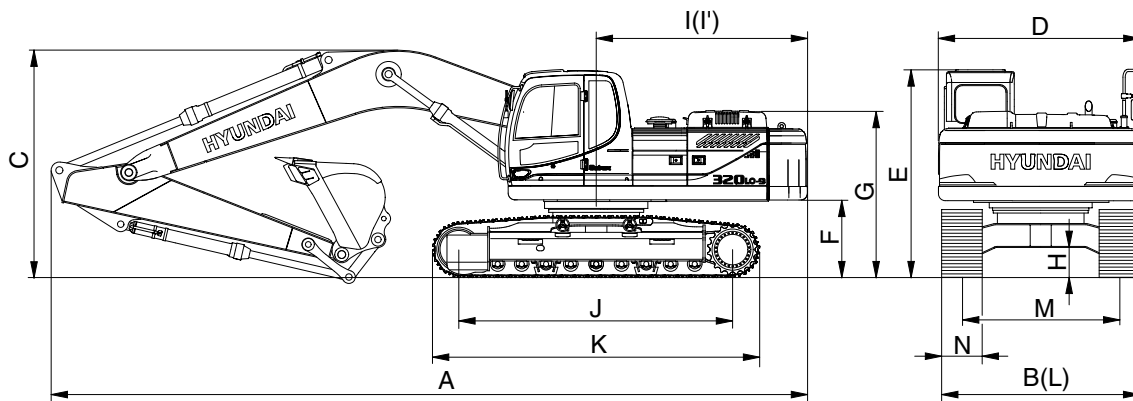


32092SP03

Description		Unit	Specification
Operating weight		kg (lb)	32000 (70500)
Bucket capacity (SAE heaped), standard		m ³ (yd ³)	1.44 (1.88)
Overall length	A	mm (ft-in)	10980 (36' 0")
Overall width, with 600 mm shoe	B		2990 (9' 10")
Overall height	C		3380 (11' 1")
Superstructure width	D		2980 (9' 9")
Overall height of cab	E		3090 (10' 2")
Ground clearance of counterweight	F		1200 (3' 11")
Engine cover height	G		2580 (8' 6")
Minimum ground clearance	H		500 (1' 8")
Rear-end distance	I		3265 (10' 9")
Rear-end swing radius	I'		3330 (10' 11")
Distance between tumblers	J		4030 (13' 3")
Undercarriage length	K		4940 (16' 2")
Undercarriage width	L		2990 (9' 10")
Track gauge	M		2390 (7' 10")
Track shoe width, standard	N		600 (24")
Travel speed (low/high)		km/hr (mph)	3.3/5.5 (2.1/3.4)
Swing speed		rpm	9.2
Gradeability		Degree (%)	35 (70)
Ground pressure (600 mm shoe)		kgf/cm ² (psi)	0.61 (8.67)
Max traction force		kg (lb)	29500 (65040)

3) R320LC-9 HIGH WALKER

· 6.45 m (21' 2") BOOM and 3.20 m (10' 6") ARM

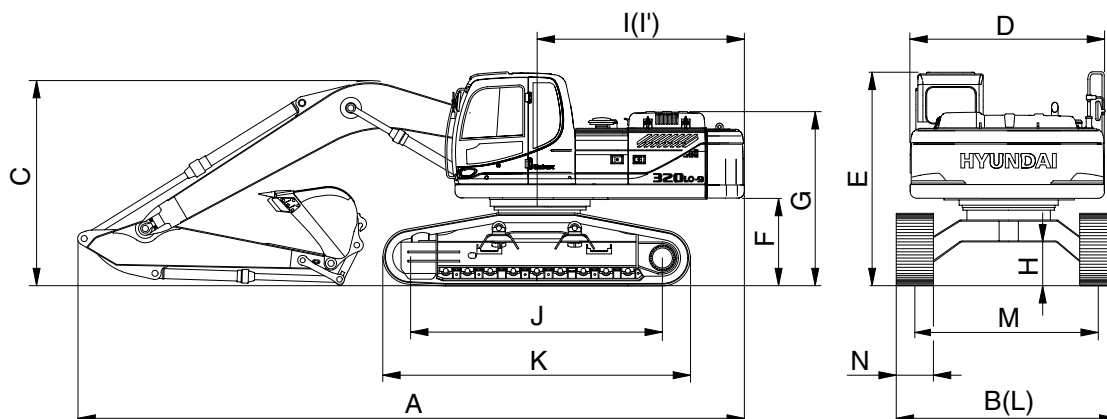


32092SP04

Description		Unit	Specification
Operating weight		kg (lb)	34700 (76500)
Bucket capacity (SAE heaped), standard		m³ (yd³)	1.44 (1.88)
Overall length	A	mm (ft-in)	10910 (35' 10")
Overall width, with 600 mm shoe	B		3470 (11' 5")
Overall height	C		3360 (11' 0")
Superstructure width	D		2980 (9' 9")
Overall height of cab	E		3390 (11' 1")
Ground clearance of counterweight	F		1500 (4' 11")
Engine cover height	G		2880 (9' 5")
Minimum ground clearance	H		765 (2' 6")
Rear-end distance	I		3265 (10' 9")
Rear-end swing radius	I'		3330 (10' 11")
Distance between tumblers	J		4030 (13' 3")
Undercarriage length	K		4940 (16' 2")
Undercarriage width	L		3470 (11' 5")
Track gauge	M		2870 (9' 5")
Track shoe width, standard	N		600 (24")
Travel speed (low/high)		km/hr (mph)	3.3/5.5 (2.1/3.4)
Swing speed		rpm	9.2
Gradeability		Degree (%)	35 (70)
Ground pressure (600 mm shoe)		kgf/cm² (psi)	0.67 (9.53)
Max traction force		kg (lb)	29500 (65040)

3. WORKING RANGE

1) R320LC-9, R320NLC-9

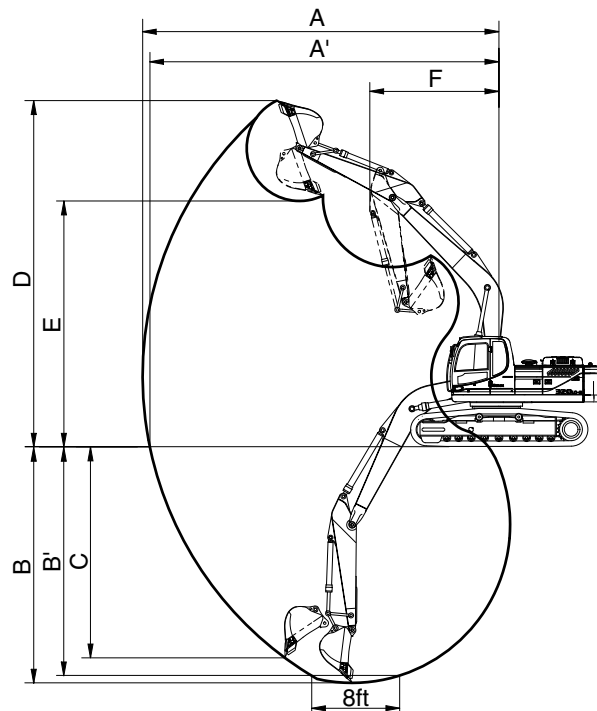


32092SP05

Description		6.45 m (21' 2") Boom				6.15 m (20' 2") Boom
		2.2 m (7' 3") Arm	2.5 m (8' 2") Arm	3.2 m (10' 6") Arm	4.05 m (13' 3") Arm	2.2 m (7' 3") Arm
Max digging reach	A	10330 mm (33'11")	10550 mm (34' 7")	11140 mm (36' 7")	11950 mm (39' 2")	10020 mm (32'10")
Max digging reach on ground	A'	10110 mm (33' 2")	10330 mm (33'11")	10940 mm (35'11")	11760 mm (38' 7")	9800 mm (32' 2")
Max digging depth	B	6370 mm (20'11")	6670 mm (21'11")	7370 mm (24' 2")	8220 mm (26'12")	6160 mm (20' 3")
Max digging depth (8ft level)	B'	6160 mm (20' 3")	6470 mm (21' 3")	7210 mm (23' 8")	8080 mm (26' 6")	5950 mm (19' 6")
Max vertical wall digging depth	C	5980 mm (19' 7")	5920 mm (19' 5")	6360 mm (20'10")	7260 mm (23'10")	5710 mm (18' 9")
Max digging height	D	10220 mm (33' 6")	10170 mm (33' 4")	10310 mm (33'10")	10710 mm (35' 2")	9940 mm (32' 7")
Max dumping height	E	7050 mm (23' 2")	7050 mm (23' 2")	7240 mm (23' 9")	7630 mm (25' 0")	6780 mm (22' 3")
Min swing radius	F	4700 mm (15' 5")	4500 mm (14' 9")	4470 mm (14' 8")	4470 mm (14' 8")	4520 mm (14'10")
Bucket digging force	SAE	189.3 [205.5] kN	189.3 [205.5] kN	189.3 [205.5] kN	189.3 [205.5] kN	189.3 [205.5] kN
		19300 [20950] kgf	19300 [20950] kgf	19300 [20950] kgf	19300 [20950] kgf	19300 [20950] kgf
		42550 [46200] lbf	42550 [46200] lbf	42550 [46200] lbf	42550 [46200] lbf	42550 [46200] lbf
	ISO	211.8 [230.0] kN	211.8 [230.0] kN	211.8 [230.0] kN	211.8 [230.0] kN	211.8 [230.0] kN
		21600 [23450] kgf	21600 [23450] kgf	21600 [23450] kgf	21600 [23450] kgf	21600 [23450] kgf
		47620 [51700] lbf	47620 [51700] lbf	47620 [51700] lbf	47620 [51700] lbf	47620 [51700] lbf
Arm crowd force	SAE	196.6 [213.4] kN	178.9 [194.2] kN	143.2 [155.5] kN	119.6 [129.9] kN	196.6 [213.4] kN
		20000 [21760] kgf	18200 [19810] kgf	14600 [15850] kgf	12200 [13240] kgf	20000 [21760] kgf
		44190 [47980] lbf	40220 [43670] lbf	32190 [34950] lbf	26890 [29190] lbf	44190 [47980] lbf
	ISO	202.8 [220.2] kN	185.1 [201.0] kN	147.1 [159.7] kN	122.7 [133.3] kN	202.8 [220.2] kN
		20700 [22450] kgf	18900 [20500] kgf	15000 [16290] kgf	12515 [13590] kgf	20700 [22450] kgf
		45600 [49510] lbf	41620 [45190] lbf	33070 [35900] lbf	27590 [29950] lbf	45600 [49510] lbf

[] : Power boost

2) R320LC-9 HIGH WALKER

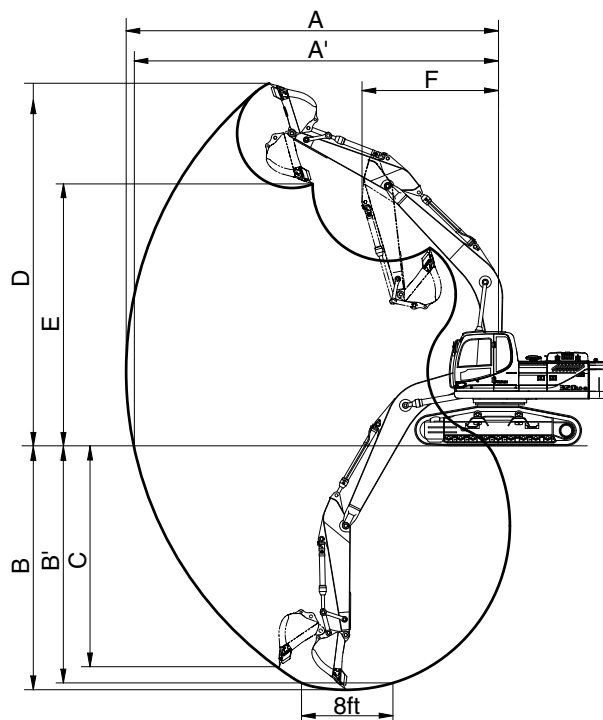

32092SP06

Description		6.45 m (21' 2") Boom				6.15 m (20' 2") Boom
		2.2 m (7' 3") Arm	2.5 m (8' 2") Arm	3.2 m (10' 6") Arm	4.05 m (13' 3") Arm	2.2 m (7' 3") Arm
Max digging reach	A	10330 mm (33'11")	10550 mm (34' 7")	11140 mm (36' 7")	11950 mm (39' 2")	10020 mm (32'10")
Max digging reach on ground	A'	10040 mm (32'11")	10270 mm (33' 8")	10880 mm (35' 8")	11710 mm (38' 5")	9730 mm (31'11")
Max digging depth	B	6100 mm (20' 0")	6400 mm (20'12")	7100 mm (23' 4")	7950 mm (26' 1")	5880 mm (19' 3")
Max digging depth (8ft level)	B'	5890 mm (19' 4")	6200 mm (20' 4")	6940 mm (22' 9")	7800 mm (25' 7")	5680 mm (18' 8")
Max vertical wall digging depth	C	5700 mm (18' 8")	5650 mm (18' 6")	6080 mm (19'11")	6980 mm (22'11")	5440 mm (17'10")
Max digging height	D	10500 mm (34' 5")	10450 mm (34' 3")	10590 mm (34' 9")	10990 mm (36' 1")	10220 mm (33' 6")
Max dumping height	E	7330 mm (24' 1")	7330 mm (24' 1")	7520 mm (24' 8")	7910 mm (25'11")	7060 mm (23' 2")
Min swing radius	F	4700 mm (15' 5")	4500 mm (14' 9")	4470 mm (14' 8")	4470 mm (14' 8")	4520 mm (14'10")
Bucket digging force	SAE	189.3 [205.5] kN	189.3 [205.5] kN	189.3 [205.5] kN	189.3 [205.5] kN	189.3 [205.5] kN
		19300 [20950] kgf	19300 [20950] kgf	19300 [20950] kgf	19300 [20950] kgf	19300 [20950] kgf
		42550 [46200] lbf	42550 [46200] lbf	42550 [46200] lbf	42550 [46200] lbf	42550 [46200] lbf
	ISO	211.8 [230.0] kN	211.8 [230.0] kN	211.8 [230.0] kN	211.8 [230.0] kN	211.8 [230.0] kN
		21600 [23450] kgf	21600 [23450] kgf	21600 [23450] kgf	21600 [23450] kgf	21600 [23450] kgf
		47620 [51700] lbf	47620 [51700] lbf	47620 [51700] lbf	47620 [51700] lbf	47620 [51700] lbf
Arm crowd force	SAE	196.6 [213.4] kN	178.9 [194.2] kN	143.2 [155.5] kN	119.6 [129.9] kN	196.6 [213.4] kN
		20000 [21760] kgf	18200 [19810] kgf	14600 [15850] kgf	12200 [13240] kgf	20000 [21760] kgf
		44190 [47980] lbf	40220 [43670] lbf	32190 [34950] lbf	26890 [29190] lbf	44190 [47980] lbf
	ISO	202.8 [220.2] kN	185.1 [201.0] kN	147.1 [159.7] kN	122.7 [133.3] kN	202.8 [220.2] kN
		20700 [22450] kgf	18900 [20500] kgf	15000 [16290] kgf	12515 [13590] kgf	20700 [22450] kgf
		45600 [49510] lbf	41620 [45190] lbf	33070 [35900] lbf	27590 [29950] lbf	45600 [49510] lbf

[] : Power boost

4. WEIGHT

1) R320LC-9, R320NLC-9

Item	R320LC-9		R320NLC-9	
	kg	lb	kg	lb
Upperstructure assembly	14310	31550	←	←
Main frame weld assembly	3760	8290	←	←
Engine assembly	720	1590	←	←
Main pump assembly	200	440	←	←
Main control valve assembly	220	490	←	←
Swing motor assembly	370	820	←	←
Hydraulic oil tank assembly	230	490	←	←
Fuel tank assembly	210	450	←	←
Counterweight	6200	13670	←	←
Cab assembly	310	680	←	←
Radiator total assy	280	620	←	←
Lower chassis assembly	11500	25770	11360	25040
Track frame weld assembly	3970	8750	3835	8450
Swing bearing	410	900	←	←
Travel motor assembly	360	800	←	←
Turning joint	50	110	←	←
Tension cylinder	210	450	←	←
Idler	250	540	←	←
Sprocket	80	170	←	←
Carrier roller	40	80	←	←
Track roller	60	120	←	←
Track-chain assembly (600 mm standard triple grouser shoe)	1860	4100	←	←
Front attachment assembly (6.45 m boom, 3.2 m arm, 1.44 m³ SAE heaped bucket)	6390	14090	←	←
6.45 m boom assembly	2540	5600	←	←
3.2 m arm assembly	1160	2560	←	←
1.44 m³ SAE heaped bucket	1120	2470	←	←
Boom cylinder assembly	300	660	←	←
Arm cylinder assembly	380	840	←	←
Bucket cylinder assembly	270	570	←	←
Bucket control linkage assembly	370	820	←	←

2) R320LC-9 HIGH WALKER

Item	kg	lb
Upperstructure assembly	14310	31550
Main frame weld assembly	3760	8290
Engine assembly	720	1590
Main pump assembly	200	440
Main control valve assembly	220	490
Swing motor assembly	370	820
Hydraulic oil tank assembly	230	490
Fuel tank assembly	210	450
Counterweight	6200	13670
Cab assembly	310	680
Radiator total assy	280	620
Lower chassis assembly	14000	30860
Track frame weld assembly	6180	13620
Swing bearing	410	900
Travel motor assembly	360	800
Turning joint	50	110
Tension cylinder	210	450
Idler	250	540
Sprocket	80	170
Carrier roller	40	80
Track roller	60	120
Track-chain assembly (600 mm standard triple grouser shoe)	1860	4100
Front attachment assembly (6.45 m boom, 3.2 m arm, 1.44 m³ SAE heaped bucket)	6390	14090
6.45 m boom assembly	2540	5600
3.2 m arm assembly	1160	2560
1.44 m³ SAE heaped bucket	1120	2470
Boom cylinder assembly	300	660
Arm cylinder assembly	380	840
Bucket cylinder assembly	270	570
Bucket control linkage assembly	370	820

5. LIFTING CAPACITIES

1) R320LC-9

(1) 6.15 m (20' 2") boom, 2.2 m (7' 3") arm equipped with 1.44 m³ (SAE heaped) bucket and 600 mm (24") triple grouser shoe and 6200 kg (13670 lb) counterweight.

-  : Rating over-front
-  : Rating over-side or 360 degree

Load point height		Load radius								At max. reach		
		3.0 m (10.0 ft)		4.5 m (15.0 ft)		6.0 m (20.0 ft)		7.5 m (25.0 ft)		Capacity		Reach
												m (ft)
7.5 m (25.0 ft)	kg lb									*7480 *16490	5680 12520	7.69 (25.2)
6.0 m (20.0 ft)	kg lb					*8380 *18470	*8380 *18470	*8070 *17790	5770 12720	7000 15430	4510 9940	8.61 (28.2)
4.5 m (15.0 ft)	kg lb			*12080 *26630	*12080 *26630	*9630 *21230	8260 18210	*8490 *18720	5630 12410	6170 13600	3920 8640	9.16 (30.1)
3.0 m (10.0 ft)	kg lb			*15590 *34370	12100 26680	*11230 *24760	7760 17110	8490 18720	5400 11900	5810 12810	3650 8050	9.39 (30.8)
1.5 m (5.0 ft)	kg lb			*18040 *39770	11310 24930	11860 26150	7330 16160	8250 18190	5180 11420	5780 12740	3610 7960	9.35 (30.7)
Ground Line	kg lb			*18760 *41360	11030 24320	11570 25510	7080 15610	8080 17810	5030 11090	6090 13430	3800 8380	9.02 (29.6)
-1.5 m (-5.0 ft)	kg lb	*16910 37280	*16910 *37280	*18280 *40300	11030 24320	11490 25330	7000 15430	8050 17750	5000 11020	6900 15210	4330 9550	8.37 (27.5)
-3.0 m (-10 ft)	kg lb	*22970 *50640	*22970 *50640	*16680 *36770	11210 24710	11600 25570	7100 15650			*8360 *18430	5530 12190	7.29 (23.9)
-4.5 m (-15.0 ft)	kg lb	*17920 *39510	*17920 *39510	*13190 *29080	11640 25660							

- Note
1. Lifting capacity are based on SAE J1097 and ISO 10567.
 2. Lifting capacity of the ROBEX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.
 3. The load point is a hook located on the back of the bucket.
 4. *indicates load limited by hydraulic capacity.

(2) 6.45 m (21' 2") boom, 3.2 m (10' 6") arm equipped with 1.44 m³ (SAE heaped) bucket and 600 mm (24") triple grouser shoe and 6200 kg (13670 lb) counterweight.

Load point height		Load radius												At max. reach		
		1.5 m (5.0 ft)		3.0 m (10.0 ft)		4.5 m (15.0 ft)		6.0 m (20.0 ft)		7.5 m (25.0 ft)		9.0 m (30.0 ft)		Capacity		Reach
																m (ft)
7.5 m (25.0 ft)	kg									*5240	*5240			*5970	4180	9.06
	lb									*11550	*11550			*13160	9220	(29.7)
6.0 m (20.0 ft)	kg									*6500	5860			5490	3450	9.84
	lb									*14330	12920			12100	7610	(32.3)
4.5 m (15.0 ft)	kg							*8090	*8090	*7190	5610	*5440	3960	4930	3040	10.31
	lb							*17840	*17840	*15850	12370	*11990	8730	10870	6700	(33.8)
3.0 m (10.0 ft)	kg					*13400	12150	*9820	7670	*8110	5290	6120	3810	4660	2830	10.52
	lb					*29540	26790	*21650	16910	*17880	11660	13490	8400	10270	6240	(34.5)
1.5 m (5.0 ft)	kg					*16400	11070	*11460	7120	8060	4990	5940	3640	4610	2780	10.48
	lb					*36160	24410	*25260	15700	17770	11000	13100	8020	10160	6130	(34.4)
Ground Line	kg			*10240	*10240	*17910	10550	11220	6750	7800	4760	5810	3520	4790	2880	10.19
	lb			*22580	*22580	*39480	23260	24740	14880	17200	10490	12810	7760	10560	6350	(33.4)
-1.5 m (-5.0 ft)	kg	*11380	*11380	*14470	*14470	*18150	10400	11020	6570	7670	4640			5250	3180	9.63
	lb	*25090	*25090	*31900	*31900	*40010	22930	24290	14480	16910	10230			11570	7010	(31.6)
-3.0 m (-10.0 ft)	kg	*15350	*15350	*19470	*19470	*17370	10480	11020	6570	7680	4640			6220	3820	8.74
	lb	*33840	*33840	*42920	*42920	*38290	23100	24290	14480	16930	10230			13710	8420	(28.7)
-4.5 m (-15.0 ft)	kg			*21820	*21820	*15410	10760	11230	6750					*7480	5230	7.37
	lb			*48100	*48100	*33970	23720	24760	14880					*16490	11530	(24.2)
-6.0 m (-20.0 ft)	kg					*11340	11330									
	lb					*25000	24980									

2) R320NLC-9

(1) 6.45 m (21' 2") boom, 3.2 m (10' 6") arm equipped with 1.44 m³ (SAE heaped) bucket and 600 mm (24") triple grouser shoe and 6200 kg (13670 lb) counterweight.

Load point height		Load radius												At max. reach		
		1.5 m (5.0 ft)		3.0 m (10.0 ft)		4.5 m (15.0 ft)		6.0 m (20.0 ft)		7.5 m (25.0 ft)		9.0 m (30.0 ft)		Capacity		Reach
																m (ft)
7.5 m (25.0 ft)	kg									*5240	5060			*5970	3490	9.06
	lb									*11550	11160			*13160	7690	(29.7)
6.0 m (20.0 ft)	kg									*6500	4950			5450	2840	9.84
	lb									*14330	10910			12020	6260	(32.3)
4.5 m (15.0 ft)	kg							*8090	6990	*7190	4700	*5440	3270	4900	2470	10.31
	lb							*17840	15410	*15850	10360	*11990	7210	10800	5450	(33.8)
3.0 m (10.0 ft)	kg					*13400	10030	*9820	6400	*8110	4400	6070	3120	4630	2270	10.52
	lb					*29540	22110	*21650	14110	*17880	9700	13380	6880	10210	5000	(34.5)
1.5 m (5.0 ft)	kg					*16400	9010	*11460	5870	8000	4100	5900	2960	4580	2220	10.48
	lb					*36160	19860	*25260	12940	17640	9040	13010	6530	10100	4890	(34.4)
Ground Line	kg			*10240	*10240	*17910	8520	11150	5510	7750	3880	5760	2840	4750	2300	10.19
	lb			*22580	*22580	*39480	18780	24580	12150	17090	8550	12700	6260	10470	5070	(33.4)
-1.5 m (-5.0 ft)	kg	*11380	*11380	*14470	*14470	*18150	8380	10950	5340	7610	3760			5210	2560	9.63
	lb	*25090	*25090	*31900	*31900	*40010	18470	24140	11770	16780	8290			11490	5640	(31.6)
-3.0 m (-10.0 ft)	kg	*15350	*15350	*19470	17250	*17370	8450	10950	5340	7620	3770			6170	3100	8.74
	lb	*33840	*33840	*42920	38030	*38290	18630	24140	11770	16800	8310			13600	6830	(28.7)
-4.5 m (-15.0 ft)	kg			*21820	17780	*15410	8720	11150	5510					*7480	4310	7.37
	lb			*48100	39200	*33970	19220	24580	12150					*16490	9500	(24.2)
-6.0 m (-20.0 ft)	kg					*11340	9260									
	lb					*25000	20410									

- Note
1. Lifting capacity are based on SAE J1097 and ISO 10567.
 2. Lifting capacity of the ROBEX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.
 3. The load point is a hook located on the back of the bucket.
 4. * indicates load limited by hydraulic capacity.

3) R320LC-9 HIGH WALKER






(1) 6.45 m (21' 2") boom, 3.2 m (10' 6") arm equipped with 1.44 m³ (SAE heaped) bucket and 600 mm (24") triple grouser shoe and 6200 kg (13670 lb) counterweight.

Load point height		Load radius												At max. reach		
		1.5 m (5.0 ft)		3.0 m (10.0 ft)		4.5 m (15.0 ft)		6.0 m (20.0 ft)		7.5 m (25.0 ft)		9.0 m (30.0 ft)		Capacity		Reach
																m (ft)
7.5 m (25.0 ft)	kg									*5730	*5730			*5990	4770	9.24
	lb									*12630	*12630			*13210	10520	(30.3)
6.0 m (20.0 ft)	kg									*6600	*6600			*6010	4040	9.95
	lb									*14550	*14550			*13250	8910	(32.6)
4.5 m (15.0 ft)	kg							*8400	*8400	*7350	6560	*5820	4720	5490	3640	10.37
	lb							*18520	*18520	*16200	14460	*12830	10410	12100	8020	(34.0)
3.0 m (10.0 ft)	kg					*14050	*14050	*10150	8950	*8290	6240	6830	4560	5250	3450	10.53
	lb					*30970	*30970	*22380	19730	*18280	13760	15060	10050	11570	7610	(34.5)
1.5 m (5.0 ft)	kg					*16800	13130	*11720	8410	8950	5940	6660	4400	5240	3430	10.45
	lb					*37040	28950	*25840	18540	19730	13100	14680	9700	11550	7560	(34.3)
Ground Line	kg			*10990	*10990	*18040	12680	12470	8070	8710	5720	6530	4280	5490	3590	10.11
	lb			*24230	*24230	*39770	27950	27490	17790	19200	12610	14400	9440	12100	7910	(33.2)
-1.5 m (-5.0 ft)	kg	*12090	*12090	*15330	*15330	*18080	12580	12310	7920	8600	5620			6080	3990	9.50
	lb	*26650	*26650	*33800	*33800	*39860	27730	27140	17460	18960	12390			13400	8800	(31.2)
-3.0 m (-10.0 ft)	kg	*16150	*16150	*20540	*20540	*17110	12700	12340	7960	8640	5660			7290	4830	8.53
	lb	*35600	*35600	*45280	*45280	*37720	28000	27210	17550	19050	12480			16070	10650	(28.0)
-4.5 m (-15.0 ft)	kg			*20940	*20940	*14870	13030	*10980	8180					*7390	6780	7.03
	lb			*46160	*46160	*32780	28730	*24210	18030					*16290	14950	(23.1)

- Note
1. Lifting capacity are based on SAE J1097 and ISO 10567.
 2. Lifting capacity of the ROBEX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.
 3. The load point is a hook located on the back of the bucket.
 4. *indicates load limited by hydraulic capacity.

6. BUCKET SELECTION GUIDE

1) GENERAL BUCKET

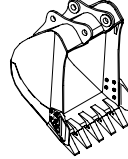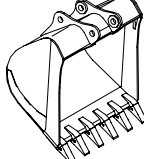
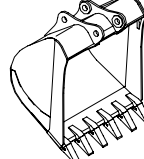
				
0.9 m³ SAE heaped bucket	1.14 m³ SAE heaped bucket	※ 1.44 m³ SAE heaped bucket	1.74 m³ SAE heaped bucket	2.10 m³ SAE heaped bucket

Capacity		Width		Weight	Recommendation				
					6.45 m (21' 2") boom				6.15 m (20' 2") boom
SAE heaped	CECE heaped	Without side cutter	With side cutter		2.2 m arm (7' 3")	2.5 m arm (8' 2")	3.2 m arm (10' 6")	4.05 m arm (13' 3")	2.2 m arm (7' 3")
0.9 m³ (1.18 yd³)	0.8 m³ (1.05 yd³)	950 mm (37.4")	1070 mm (42.1")	870 kg (1920 lb)					
1.14 m³ (1.49 yd³)	1.0 m³ (1.31 yd³)	1110 mm (43.7")	1230 mm (48.4")	980 kg (2160 lb)					
※ 1.44 m³ (1.88 yd³)	1.25 m³ (1.63 yd³)	1380 mm (54.3")	1500 mm (59.1")	1110 kg (2450 lb)					
1.74 m³ (2.28 yd³)	1.5 m³ (1.96 yd³)	1620 mm (63.8")	1740 mm (68.5")	1230 kg (2710 lb)					
2.10 m³ (2.75 yd³)	1.8 m³ (2.35 yd³)	1910 mm (75.2")	2030 mm (79.9")	1370 kg (3020 lb)					

※ : Standard bucket

-  Applicable for materials with density of 2000 kg/m³ (3370 lb/yd³) or less
-  Applicable for materials with density of 1600 kg/m³ (2700 lb/yd³) or less
-  Applicable for materials with density of 1100 kg/m³ (1850 lb/yd³) or less


2) ROCK AND HEAVY DUTY BUCKET

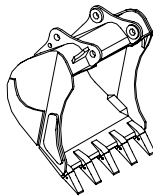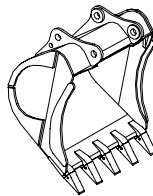	
◆ 1.44 m ³ SAE heaped bucket	◎ 1.44 m ³ SAE ◎ 1.73 m ³ SAE heaped bucket

Capacity		Width		Weight	Recommendation				
					6.45 m (21' 2") boom				6.15 m (20' 2") boom
SAE heaped	CECE heaped	Without side cutter	With side cutter		2.2 m arm (7' 3")	2.5 m arm (8' 2")	3.2 m arm (10' 6")	4.05 m arm (13' 3")	2.2 m arm (7' 3")
◆ 1.44 m ³ (1.88 yd ³)	1.25 m ³ (1.63 yd ³)	1470 mm (57.9")	-	1380 kg (3040 lb)					
◎ 1.44 m ³ (1.88 yd ³)	1.25 m ³ (1.63 yd ³)	1470 mm (57.9")	-	1470 kg (3240 lb)					
◎ 1.73 m ³ (2.26 yd ³)	1.5 m ³ (1.96 yd ³)	1710 mm (67.3")	-	1610 kg (3550 lb)					

◆ : Heavy duty bucket

◎ : Rock bucket (esco type)

 Applicable for materials with density of 2000 kg/m³ (3370 lb/yd³) or less


 Applicable for materials with density of 1600 kg/m³ (2700 lb/yd³) or less

7. UNDERCARRIAGE

1) TRACKS

X-leg type center frame is integrally welded with reinforced box-section track frames. The design includes dry tracks, lubricated rollers, idlers, sprockets, hydraulic track adjusters with shock absorbing springs and assembled track-type tractor shoes with triple grousers.

2) TYPES OF SHOES

Model	Shapes		Triple grouser			
						
R320LC-9	Shoe width	mm (in)	600(24)	700(28)	800(32)	900(36)
	Operating weight	kg (lb)	32200(71000)	32800(72300)	33200(73200)	33600(74100)
	Ground pressure	kgf/cm ² (psi)	0.63(8.96)	0.54(7.68)	0.48(6.83)	0.43(6' 11")
	Overall width	mm (ft-in)	3280(10' 9")	3380(11' 1")	3480(11' 5")	3580(11' 9")
R320NLC-9	Shoe width	mm (in)	600(24)	-	-	-
	Operating weight	kg (lb)	32000(70500)	-	-	-
	Ground pressure	kgf/cm ² (psi)	0.61(8.67)	-	-	-
	Overall width	mm (ft-in)	2990(9' 10")	-	-	-
R320LC-9 HIGH WALKER	Shoe width	mm (in)	600(24)	700(28)	800(32)	Double Grouser 710(28)
	Operating weight	kg (lb)	34700(76500)	35300(77800)	35700(78700)	35900(79100)
	Ground pressure	kgf/cm ² (psi)	0.67(9.53)	0.58(8.25)	0.51(7.25)	0.58(8.25)
	Overall width	mm (ft-in)	3470(11' 5")	3570(11' 9")	3670(12' 0")	3580(11' 9")

3) NUMBER OF ROLLERS AND SHOES ON EACH SIDE

Item	Quantity
Carrier rollers	2EA
Track rollers	9EA
Track shoes	48EA

This as a preview PDF file from **best-manuals.com**



Download full PDF manual at **best-manuals.com**